


Software Manual

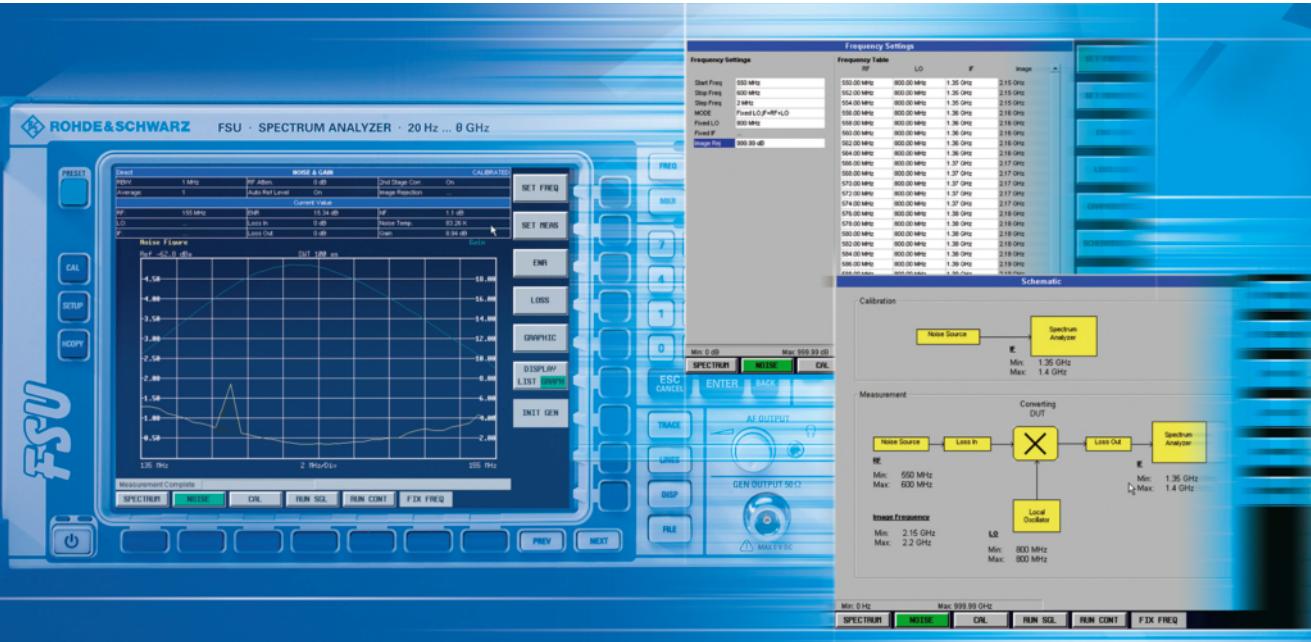

Application Firmware for Bluetooth Measurements

R&S® FS-K8
1157.2568.02

Printed in the Federal
Republic of Germany


ROHDE & SCHWARZ
Test and Measurement Division

This Software Manual describes the following models:

- R&S®FMU
- R&S®FSG
- R&S®FSP
- R&S®FSQ
- R&S®FSU
- R&S®FSUP

Dear Customer,

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Rohde&Schwarz is under license.

Grouped Safety Messages

Make sure to read through and observe the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standard of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment required for them are designed and tested in accordance with the relevant safety standards. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for an intention other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.

Symbols and safety labels

| | | | | | | | |
|-------------------------------|------------------------------------|--------------------------|----------------------|-------------|--------|-----------------|--|
| | | | | | | | |
| Observe product documentation | Weight indication for units >18 kg | Danger of electric shock | Warning! Hot surface | PE terminal | Ground | Ground terminal | Attention! Electrostatic sensitive devices |

| | | | | | |
|-----------------------|--------------------|---------------------|--------------------------|------------------------------------|--|
| O | () | --- | ~ | ~~ | □ |
| Supply voltage ON/OFF | Standby indication | Direct current (DC) | Alternating current (AC) | Direct/alternating current (DC/AC) | Device fully protected by double/reinforced insulation |

Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before putting the product into operation. It is also absolutely essential to observe the additional safety instructions on personal safety that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories.

Tags and their meaning

| | |
|--|---|
| DANGER | DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury. |
| WARNING | WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury. |
| CAUTION | CAUTION indicates a hazardous situation which, if not avoided, may result in minor or moderate injury. |
| NOTICE | NOTICE indicates a property damage message. |
| In the product documentation, the word ATTENTION is used synonymously. | |

These tags are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the tags described here are always used only in connection with the related product documentation and the related product. The use of tags in connection with unrelated products or documentation can result in misinterpretation and thus contribute to personal injury or material damage.

Basic safety instructions

1. The product may be operated only under the operating conditions and in the positions specified by the manufacturer. Its ventilation must not be obstructed during operation. Unless otherwise specified, the following requirements apply to Rohde & Schwarz products:
prescribed operating position is always with the housing floor facing down, IP protection 2X, pollution severity 2, overvoltage category 2, use only in enclosed spaces, max. operation altitude 2000 m above sea level, max. transport altitude 4500 m above sea level.
A tolerance of $\pm 10\%$ shall apply to the nominal voltage and of $\pm 5\%$ to the nominal frequency.
2. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed. The product may be opened only by authorized, specially trained personnel. Prior to performing any work on the product or opening the product, the product must be disconnected from the supply network. Any adjustments, replacements of parts, maintenance or repair must be carried out only by technical personnel authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, PE conductor test, insulation resistance measurement, leakage current measurement, functional test).
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens, e.g. nickel) such as aluminum cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties), consult a physician immediately to determine the cause.
4. If products/components are mechanically and/or thermically processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled, e.g. for disposal purposes, by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.

5. If handling the product yields hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation.
6. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn life requires increased protection, pregnant women should be protected by appropriate measures. Persons with pacemakers may also be endangered by electromagnetic radiation. The employer/operator is required to assess workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the danger.
7. Operating the products requires special training and intense concentration. Make certain that persons who use the products are physically, mentally and emotionally fit enough to handle operating the products; otherwise injuries or material damage may occur. It is the responsibility of the employer to select suitable personnel for operating the products.
8. Prior to switching on the product, it must be ensured that the nominal voltage setting on the product matches the nominal voltage of the AC supply network. If a different voltage is to be set, the power fuse of the product may have to be changed accordingly.
9. In the case of products of safety class I with movable power cord and connector, operation is permitted only on sockets with earthing contact and protective earth connection.
10. Intentionally breaking the protective earth connection either in the feed line or in the product itself is not permitted. Doing so can result in the danger of an electric shock from the product. If extension cords or connector strips are implemented, they must be checked on a regular basis to ensure that they are safe to use.
11. If the product has no power switch for disconnection from the AC supply, the plug of the connecting cable is regarded as the disconnecting device. In such cases, it must be ensured that the power plug is easily reachable and accessible at all times (corresponding to the length of connecting cable, approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply. If products without power switches are integrated in racks or systems, a disconnecting device must be provided at the system level.
12. Never use the product if the power cable is damaged. Check the power cable on a regular basis to ensure that it is in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, ensure that the cable cannot be damaged and that no one can be hurt by e.g. tripping over the cable or suffering an electric shock.
13. The product may be operated only from TN/TT supply networks fused with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
14. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket. Otherwise, this can result in sparks, fire and/or injuries.
15. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
16. For measurements in circuits with voltages $V_{rms} > 30$ V, suitable measures (e.g. appropriate measuring equipment, fusing, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
17. Ensure that the connections with information technology equipment comply with IEC 950/EN 60950.
18. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
19. If a product is to be permanently installed, the connection between the PE terminal on site and the product's PE conductor must be made first before any other connection is made. The product may be installed and connected only by a license electrician.

20. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused in such a way that suitable protection is provided for users and products.
21. Do not insert any objects into the openings in the housing that are not designed for this purpose. Never pour any liquids onto or into the housing. This can cause short circuits inside the product and/or electric shocks, fire or injuries.
22. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a thunderstorm) can reach the product. Otherwise the operating personnel will be endangered by electric shocks.
23. Rohde & Schwarz products are not protected against penetration of liquids, unless otherwise specified (see also safety instruction 1.). If this is not taken into account, there exists the danger of electric shock for the user or damage to the product, which can also lead to personal injury.
24. Never use the product under conditions in which condensation has formed or can form in or on the product, e.g. if the product was moved from a cold to a warm environment.
25. Do not close any slots or openings on the product, since they are necessary for ventilation and prevent the product from overheating. Do not place the product on soft surfaces such as sofas or rugs or inside a closed housing, unless this is well ventilated.
26. Do not place the product on heat-generating devices such as radiators or fan heaters. The temperature of the environment must not exceed the maximum temperature specified in the data sheet.
27. Batteries and storage batteries must not be exposed to high temperatures or fire. Keep batteries and storage batteries away from children. Do not short-circuit batteries and storage batteries. If batteries or storage batteries are improperly replaced, this can cause an explosion (warning: lithium cells). Replace the battery or storage battery only with the matching Rohde & Schwarz type (see spare parts list). Batteries and storage batteries must be recycled and kept separate from residual waste. Batteries and storage batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.
28. Please be aware that in the event of a fire, toxic substances (gases, liquids etc.) that may be hazardous to your health may escape from the product.
29. The product can be very heavy. Be careful when moving it to avoid back or other physical injuries.
30. Do not place the product on surfaces, vehicles, cabinets or tables that for reasons of weight or stability are unsuitable for this purpose. Always follow the manufacturer's installation instructions when installing the product and fastening it to objects or structures (e.g. walls and shelves).
31. Handles on the products are designed exclusively for personnel to hold or carry the product. It is therefore not permissible to use handles for fastening the product to or on means of transport such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport and for observing the safety regulations of the manufacturer of the means of transport. Noncompliance can result in personal injury or material damage.
32. If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. The driver is always responsible for the safety of the vehicle. The manufacturer assumes no responsibility for accidents or collisions.
33. If a laser product (e.g. a CD/DVD drive) is integrated in a Rohde & Schwarz product, do not use any other settings or functions than those described in the product documentation. Otherwise this may be hazardous to your health, since the laser beam can cause irreversible damage to your eyes. Never try to take such products apart, and never look into the laser beam.
34. Prior to cleaning, disconnect the product from the AC supply. Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluent for cellulose lacquers.

Informaciones elementales de seguridad

¡Es imprescindible leer y observar las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestra sección de gestión de la seguridad de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el comprobante de conformidad adjunto según las normas de la CE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o despreciando las informaciones de seguridad del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.

Se parte del uso correcto del producto para los fines definidos si el producto es utilizado dentro de las instrucciones de la correspondiente documentación de producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos profundos y conocimientos básicas del idioma inglés. Por eso se debe tener en cuenta que el producto sólo pueda ser operado por personal especializado o personas minuciosamente instruidas con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de R&S, encontrará la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto y entréguela a usuarios posteriores.

Símbolos y definiciones de seguridad

| | | | | | | | |
|-------------------------------|---|-------------------------------|-----------------------------------|--------------------------------|-------------------|----------------------------|---|
| | | | | | | | |
| Ver documentación de producto | Informaciones para maquinaria con un peso de > 18kg | Peligro de golpe de corriente | ¡Advertencia! Superficie caliente | Conexión a conductor protector | Conexión a tierra | Conexión a masa conductora | ¡Cuidado! Elementos de construcción con peligro de carga electrostática |

| | | | | | |
|---------------------------|---------------------|-----------------------|----------------------|-----------------------------------|--|
| O | () | --- | ~ | ~~ | |
| Potencia EN MARCHA/PARADA | Indicación Stand-by | Corriente continua DC | Corriente alterna AC | Corriente continua-/alterna DC/AC | El aparato está protegido en su totalidad por un aislamiento de doble refuerzo |

Tener en cuenta las informaciones de seguridad sirve para tratar de evitar daños y peligros de toda clase. Es necesario de que se lean las siguientes informaciones de seguridad concienzudamente y se tengan en cuenta debidamente antes de la puesta en funcionamiento del producto. También deberán ser tenidas en cuenta las informaciones para la protección de personas que encontrarán en el capítulo correspondiente de la documentación de producto y que también son obligatorias de seguir. En las informaciones de seguridad actuales hemos juntado todos los objetos vendidos por el grupo de empresas Rohde & Schwarz bajo la denominación de „producto“, entre ellos también aparatos, instalaciones así como toda clase de accesorios.

Palabras de señal y su significado

| | |
|-------------|---|
| PELIGRO | Identifica un peligro directo con riesgo elevado de provocar muerte o lesiones de gravedad si no se toman las medidas oportunas. |
| ADVERTENCIA | Identifica un posible peligro con riesgo medio de provocar muerte o lesiones (de gravedad) si no se toman las medidas oportunas. |
| ATENCIÓN | Identifica un peligro con riesgo reducido de provocar lesiones de gravedad media o leve si no se toman las medidas oportunas. |
| AVISO | Indica la posibilidad de utilizar mal el producto y a consecuencia dañarlo. En la documentación del producto se emplea de forma sinónima el término CUIDADO. |

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación de producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a malinterpretaciones y tener por consecuencia daños en personas u objetos.

Informaciones de seguridad elementales

1. El producto solamente debe ser utilizado según lo indicado por el fabricante referente a la situación y posición de funcionamiento sin que se obstruya la ventilación. Si no se convino de otra manera, es para los productos R&S válido lo que sigue:
como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, grado de suciedad 2, categoría de sobrecarga eléctrica 2, utilizar solamente en estancias interiores, utilización hasta 2000 m sobre el nivel del mar, transporte hasta 4.500 m sobre el nivel del mar.
Se aplicará una tolerancia de $\pm 10\%$ sobre el voltaje nominal y de $\pm 5\%$ sobre la frecuencia nominal.
2. En todos los trabajos deberán ser tenidas en cuenta las normas locales de seguridad de

trabajo y de prevención de accidentes. El producto solamente debe de ser abierto por personal especializado autorizado. Antes de efectuar trabajos en el producto o abrirlo deberá este ser desconectado de la corriente. El ajuste, el cambio de partes, la manutención y la reparación deberán ser solamente efectuadas por electricistas autorizados por R&S. Si se reponen partes con importancia para los aspectos de seguridad (por ejemplo el enchufe, los transformadores o los fusibles), solamente podrán ser sustituidos por partes originales. Despues de cada recambio de partes elementales para la seguridad deberá ser efectuado un control de seguridad (control a primera vista, control de conductor protector, medición de resistencia de aislamiento, medición de la corriente conductora, control de funcionamiento).

3. Como en todo producto de fabricación industrial no puede ser excluido en general de que se produzcan al usarlo elementos que puedan generar alergias, los llamados elementos alergénicos (por ejemplo el níquel). Si se producieran en el trato con productos R&S reacciones alérgicas, como por ejemplo urticaria, estornudos frecuentes, irritación de la conjuntiva o dificultades al respirar, se deberá consultar inmediatamente a un médico para averiguar los motivos de estas reacciones.
4. Si productos / elementos de construcción son tratados fuera del funcionamiento definido de forma mecánica o térmica, pueden generarse elementos peligrosos (polvos de sustancia de metales pesados como por ejemplo plomo, berilio, níquel). La partición elemental del producto, como por ejemplo sucede en el tratamiento de materias residuales, debe de ser efectuada solamente por personal especializado para estos tratamientos. La partición elemental efectuada inadecuadamente puede generar daños para la salud. Se deben tener en cuenta las directivas nacionales referentes al tratamiento de materias residuales.
5. En el caso de que se produjeren agentes de peligro o combustibles en la aplicación del producto que debieran de ser transferidos a un tratamiento de materias residuales, como por ejemplo agentes refrigerantes que deben ser repuestos en períodos definidos, o aceites para motores, deberán ser tenidas en cuenta las prescripciones de seguridad del fabricante de estos agentes de peligro o combustibles y las regulaciones regionales para el tratamiento de materias residuales. Cuiden también de tener en cuenta en caso dado las prescripciones de seguridad especiales en la descripción del producto.
6. Ciertos productos, como por ejemplo las instalaciones de radiocomunicación RF, pueden a causa de su función natural, emitir una radiación electromagnética aumentada. En vista a la protección de la vida en desarrollo deberían ser protegidas personas embarazadas debidamente. También las personas con un bypass pueden correr peligro a causa de la radiación electromagnética.
7. El empresario/usuario está comprometido a valorar y señalar áreas de trabajo en las que se corra un riesgo aumentado de exposición a radiaciones para evitar riesgos.
8. La utilización de los productos requiere instrucciones especiales y una alta concentración en el manejo. Debe de ponerse por seguro de que las personas que manejen los productos estén a la altura de los requerimientos necesarios referente a sus aptitudes físicas, psíquicas y emocionales, ya que de otra manera no se pueden excluir lesiones o daños de objetos. El empresario lleva la responsabilidad de seleccionar el personal usuario apto para el manejo de los productos.
9. Antes de la puesta en marcha del producto se deberá tener por seguro de que la tensión preseleccionada en el producto equivalga a la del la red de distribución. Si es necesario cambiar la preselección de la tensión también se deberán en caso dabo cambiar los fusibles correspondientes del producto.
10. Productos de la clase de seguridad I con alimentación móvil y enchufe individual de producto solamente deberán ser conectados para el funcionamiento a tomas de corriente de contacto de seguridad y con conductor protector conectado.
11. Queda prohibida toda clase de interrupción intencionada del conductor protector, tanto en la toma de corriente como en el mismo producto. Puede tener como consecuencia el peligro de golpe de corriente por el producto. Si se utilizaran cables o enchufes de extensión se deberá poner al seguro que es controlado su estado técnico de seguridad.
12. Si el producto no está equipado con un interruptor para desconectarlo de la red, se deberá considerar el enchufe del cable de distribución como interruptor. En estos casos deberá asegurar de que el enchufe sea de fácil acceso y nabejo (según la medida del cable de distribución, aproximadamente 2 m). Los interruptores de función o electrónicos no son aptos para el corte de la red eléctrica. Si los productos sin interruptor están integrados en bastidores o instalaciones, se deberá instalar el interruptor al nivel de la instalación.

12. No utilice nunca el producto si está dañado el cable eléctrico. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegure a través de las medidas de protección y de instalación adecuadas de que el cable de eléctrico no pueda ser dañado o de que nadie pueda ser dañado por él, por ejemplo al tropezar o por un golpe de corriente.
13. Solamente está permitido el funcionamiento en redes de distribución TN/TT aseguradas con fusibles de como máximo 16 A (utilización de fusibles de mayor amperaje sólo previa consulta con el grupo de empresas Rohde & Schwarz).
14. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. Si no tiene en consideración estas indicaciones se arriesga a que se originen chispas, fuego y/o heridas.
15. No sobrecargue las tomas de corriente, los cables de extensión o los enchufes de extensión ya que esto pudiera causar fuego o golpes de corriente.
16. En las mediciones en circuitos de corriente con una tensión de entrada de $U_{eff} > 30$ V se deberá tomar las precauciones debidas para impedir cualquier peligro (por ejemplo medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
17. En caso de conexión con aparatos de la técnica informática se deberá tener en cuenta que estos cumplan los requisitos del estándar IEC950/EN60950.
18. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar heridas, fuego o daños en el producto.
19. Si un producto es instalado fijamente en un lugar, se deberá primero conectar el conductor protector fijo con el conductor protector del aparato antes de hacer cualquier otra conexión. La instalación y la conexión deberán ser efectuadas por un electricista especializado.
20. En caso de que los productos que son instalados fijamente en un lugar sean sin protector implementado, autointerruptor o similares objetos de protección, el circuito de suministro de corriente deberá estar protegido de manera que usuarios y productos estén suficientemente protegidos.
21. Por favor, no introduzca ningún objeto que no esté destinado a ello en los orificios de la caja del aparato. No vierta nunca ninguna clase de líquidos sobre o en la caja. Esto puede producir cortocircuitos en el producto y/o puede causar golpes de corriente, fuego o heridas.
22. Asegúrese con la protección adecuada de que no pueda originarse en el producto una sobrecarga por ejemplo a causa de una tormenta. Si no se verá el personal que lo utilice expuesto al peligro de un golpe de corriente.
23. Los productos R&S no están protegidos contra líquidos si no es que exista otra indicación, ver también punto 1. Si no se tiene en cuenta esto se arriesga el peligro de golpe de corriente para el usuario o de daños en el producto lo cual también puede llevar al peligro de personas.
24. No utilice el producto bajo condiciones en las que pueda producirse y se hayan producido líquidos de condensación en o dentro del producto como por ejemplo cuando se desplaza el producto de un lugar frío a un lugar caliente.
25. Por favor no cierre ninguna ranura u orificio del producto, ya que estas son necesarias para la ventilación e impiden que el producto se caliente demasiado. No pongan el producto encima de materiales blandos como por ejemplo sofás o alfombras o dentro de una caja cerrada, si esta no está suficientemente ventilada.
26. No ponga el producto sobre aparatos que produzcan calor, como por ejemplo radiadores o calentadores. La temperatura ambiental no debe superar la temperatura máxima especificada en la hoja de datos.

27. Baterías y acumuladores no deben de ser expuestos a temperaturas altas o al fuego. Guardar baterías y acumuladores fuera del alcance de los niños. No cortocircuitar baterías ni acumuladores. Si las baterías o los acumuladores no son cambiados con la debida atención existirá peligro de explosión (atención células de litio). Cambiar las baterías o los acumuladores solamente por los del tipo R&S correspondiente (ver lista de piezas de recambio). Las baterías y acumuladores deben reutilizarse y no deben acceder a los vertederos. Las baterías y acumuladores que contienen plomo, mercurio o cadmio deben tratarse como residuos especiales. Respete en esta relación las normas nacionales de evacuación y reciclaje.
28. Por favor tengan en cuenta que en caso de un incendio pueden desprenderse del producto agentes venenosos (gases, líquidos etc.) que pueden generar daños a la salud.
29. El producto puede poseer un peso elevado. Muévalo con cuidado para evitar lesiones en la espalda u otras partes corporales.
30. No sitúe el producto encima de superficies, vehículos, estantes o mesas, que por sus características de peso o de estabilidad no sean aptas para él. Siga siempre las instrucciones de instalación del fabricante cuando instale y asegure el producto en objetos o estructuras (por ejemplo paredes y estantes).
31. Las asas instaladas en los productos sirven solamente de ayuda para el manejo que solamente está previsto para personas. Por eso no está permitido utilizar las asas para la sujeción en o sobre medios de transporte como por ejemplo grúas, carretillas elevadoras de horquilla, carros etc. El usuario es responsable de que los productos sean sujetados de forma segura a los medios de transporte y de que las prescripciones de seguridad del fabricante de los medios de transporte sean observadas. En caso de que no se tengan en cuenta pueden causarse daños en personas y objetos.
32. Si llega a utilizar el producto dentro de un vehículo, queda en la responsabilidad absoluta del conductor que conducir el vehículo de manera segura. Asegure el producto dentro del vehículo debidamente para evitar en caso de un accidente las lesiones u otra clase de daños. No utilice nunca el producto dentro de un vehículo en movimiento si esto pudiera distraer al conductor. Siempre queda en la responsabilidad absoluta del conductor la seguridad del vehículo. El fabricante no asumirá ninguna clase de responsabilidad por accidentes o colisiones.
33. Dado el caso de que esté integrado un producto de láser en un producto R&S (por ejemplo CD/DVD-ROM) no utilice otras instalaciones o funciones que las descritas en la documentación de producto. De otra manera pondrá en peligro su salud, ya que el rayo láser puede dañar irreversiblemente sus ojos. Nunca trate de descomponer estos productos. Nunca mire dentro del rayo láser.
34. Antes de proceder a la limpieza, desconecte el producto de la red. Realice la limpieza con un paño suave, que no se deshilache. No utilice de ninguna manera agentes limpiadores químicos como, por ejemplo, alcohol, acetona o nitrodiluyente.

Certified Quality System

**DIN EN ISO 9001 : 2000
DIN EN 9100 : 2003
DIN EN ISO 14001 : 2004**

DQS REG. NO 001954 QM UM

QUALITÄTSZERTIFIKAT

Sehr geehrter Kunde,
Sie haben sich für den Kauf eines Rohde & Schwarz-Produktes entschieden. Hiermit erhalten Sie ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unseres Managementsystems entwickelt, gefertigt und geprüft.
Das Rohde & Schwarz Management-
system ist zertifiziert nach:

DIN EN ISO 9001:2000
DIN EN 9100:2003
DIN EN ISO 14001:2004

CERTIFICATE OF QUALITY

Dear Customer,
you have decided to buy a Rohde & Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards.
The Rohde & Schwarz quality management system is certified according to:

DIN EN ISO 9001:2000
DIN EN 9100:2003
DIN EN ISO 14001:2004

CERTIFICAT DE QUALITÉ

Cher Client,
vous avez choisi d'acheter un produit Rohde & Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité.
Le système de gestion qualité de Rohde & Schwarz a été homologué conformément aux normes:

DIN EN ISO 9001:2000
DIN EN 9100:2003
DIN EN ISO 14001:2004



Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish.

We will take care that you will get the right information.

USA & Canada

Monday to Friday (except US public holidays)
8:00 AM – 8:00 PM Eastern Standard Time (EST)

| | |
|------------------|--|
| Tel. from USA | 888-test-rsa (888-837-8772) (opt 2) |
| From outside USA | +1 410 910 7800 (opt 2) |
| Fax | +1 410 910 7801 |
| E-mail | CustomerSupport@rohde-schwarz.com |

East Asia

Monday to Friday (except Singaporean public holidays)
8:30 AM – 6:00 PM Singapore Time (SGT)

| | |
|--------|--|
| Tel. | +65 6 513 0488 |
| Fax | +65 6 846 1090 |
| E-mail | CustomerSupport@rohde-schwarz.com |

Rest of the World

Monday to Friday (except German public holidays)
08:00 – 17:00 Central European Time (CET)

| | |
|---------------------|--|
| Tel. from Europe | +49 (0) 180 512 42 42* |
| From outside Europe | +49 89 4129 13776 |
| Fax | +49 (0) 89 41 29 637 78 |
| E-mail | CustomerSupport@rohde-schwarz.com |

* 0.14 €/Min within the German fixed-line telephone network, varying prices for the mobile telephone network and in different countries.



Address List

Headquarters, Plants and Subsidiaries

Headquarters

ROHDE&SCHWARZ GmbH & Co. KG
Mühldorfstraße 15 · D-81671 München
P.O.Box 80 14 69 · D-81614 München

Phone +49 (89) 41 29-0
Fax +49 (89) 41 29-121 64
info.rs@rohde-schwarz.com

Plants

ROHDE&SCHWARZ Messgerätebau GmbH
Riedbachstraße 58 · D-87700 Memmingen
P.O.Box 16 52 · D-87686 Memmingen

Phone +49 (83 31) 1 08-0
+49 (83 31) 1 08-1124
info.rsmb@rohde-schwarz.com

ROHDE&SCHWARZ GmbH & Co. KG
Werk Teisnach
Kaikenrieder Straße 27 · D-94244 Teisnach
P.O.Box 11 49 · D-94240 Teisnach

Phone +49 (99 23) 8 50-0
Fax +49 (99 23) 8 50-174
info.rsdts@rohde-schwarz.com

ROHDE&SCHWARZ závod
Vimperk, s.r.o.
Location Spidrova 49
CZ-38501 Vimperk

Phone +420 (388) 45 21 09
Fax +420 (388) 45 21 13

ROHDE&SCHWARZ GmbH & Co. KG
Dienstleistungszentrum Köln
Graf-Zeppelin-Straße 18 · D-51147 Köln
P.O.Box 98 02 60 · D-51130 Köln

Phone +49 (22 03) 49-0
Fax +49 (22 03) 49 51-229
info.rsdcc@rohde-schwarz.com
service.rsdcc@rohde-schwarz.com

Subsidiaries

R&S BICK Mobilfunk GmbH
Fritz-Hahne-Str. 7 · D-31848 Bad Münder
P.O.Box 20 02 · D-31844 Bad Münder

Phone +49 (50 42) 9 98-0
Fax +49 (50 42) 9 98-105
info.bick@rohde-schwarz.com

ROHDE&SCHWARZ FTK GmbH
Wendenschloßstraße 168, Haus 28
D-12557 Berlin

Phone +49 (30) 658 91-122
Fax +49 (30) 655 50-221
info.ftk@rohde-schwarz.com

ROHDE&SCHWARZ SIT GmbH
Am Studio 3
D-12489 Berlin

Phone +49 (30) 658 84-0
Fax +49 (30) 658 84-183
info.sit@rohde-schwarz.com

R&S Systems GmbH
Graf-Zeppelin-Straße 18
D-51147 Köln

Phone +49 (22 03) 49-5 23 25
Fax +49 (22 03) 49-5 23 36
info.rssys@rohde-schwarz.com

GEDIS GmbH
Sophienblatt 100
D-24114 Kiel

Phone +49 (431) 600 51-0
Fax +49 (431) 600 51-11
sales@gedis-online.de

HAMEG Instruments GmbH
Industriestraße 6
D-63533 Mainhausen

Phone +49 (61 82) 800-0
Fax +49 (61 82) 800-100
info@hameg.de

Locations Worldwide

Please refer to our homepage: www.rohde-schwarz.com

- ◆ Sales Locations
- ◆ Service Locations
- ◆ National Websites

Contents

| | | |
|----------|---|-------------|
| 1 | Introduction | 1.1 |
| | Bluetooth Overview | 1.1 |
| | Bluetooth Technical Parameters | 1.1 |
| | Power Classes | 1.1 |
| | Structure of a Bluetooth Data Packet..... | 1.2 |
| | Functional Scope of the Bluetooth Analyzer Option | 1.2 |
| | Supported Tests..... | 1.2 |
| | Overview of Transmitter Tests with settings according to the RF Test Specification | 1.3 |
| | Functional Description - Block Diagram..... | 1.5 |
| | Further Characteristics..... | 1.6 |
| | Bandwidths | 1.6 |
| | Optional Measurement Filter (Meas Filter On)..... | 1.6 |
| | Oversampling | 1.7 |
| | Determining Average or Max/Min Values during several Sweeps (= Bursts) | 1.8 |
| | Trigger Concepts..... | 1.9 |
| 2 | Getting Started - Introduction to the Bluetooth Operation..... | 2.1 |
| | Enabling the Bluetooth Option | 2.1 |
| | First Operating Steps..... | 2.2 |
| 3 | Settings of the Bluetooth Option..... | 3.1 |
| | Bluetooth Menu Overview | 3.1 |
| | Hotkey <i>BLUETOOTH</i> | 3.2 |
| | Bluetooth Main Hotkey Menu | 3.3 |
| | General Settings - <i>SETTINGS</i> Menu | 3.4 |
| | Configuring the Averaging Method - Submenu <i>AVERAGE</i> | 3.6 |
| | Setting of the Synchronisation Parameters - Menu <i>FIND SYNC</i> | 3.7 |
| | Modifying the Diagram Scales - Menu <i>RANGE</i> | 3.10 |
| | Selection of Measurements - Hardkey <i>MEAS</i> | 3.11 |
| | Measuring the Output Power - Softkey <i>OUTPUT POWER</i> | 3.12 |
| | Adjacent Channel Power Measurement - Softkey <i>TX SPEC ACP</i> | 3.14 |
| | Measuring the Modulation Characteristics - Softkey <i>MODULATION CHAR</i> | 3.16 |
| | Measuring the Initial Carrier Frequency Tolerance - Softkey <i>INIT CARR FREQ TOL</i> | 3.18 |
| | Measuring the Carrier Frequency Drift - Softkey <i>CARRIER FREQ DRIFT</i> | 3.19 |
| | Measuring the Enhanced Data rate - Softkey <i>EDR</i> | 3.21 |
| | Setting the Center Frequency - Hardkey <i>FREQ</i>..... | 3.31 |
| | Setting the Frequency Range - Hardkey <i>SPAN</i> | 3.31 |
| | Power Settings - Hardkey <i>AMPT</i> | 3.32 |
| | Bandwidth Settings - Hardkey <i>BW</i> | 3.33 |
| | Starting Measurements - Hardkey <i>SWEEP</i> | 3.34 |

| | |
|---|-------------|
| Trigger Settings - Hardkey <i>TRIG</i> | 3.34 |
| Measurement Display - Hardkey <i>MKR</i> | 3.36 |
| Marker Search Functions - Hardkey <i>MKR</i> ⇒ | 3.36 |
| Marker Functions - Hardkey <i>MKR FCTN</i> | 3.37 |
| Other Hardkeys..... | 3.37 |
| 4 Remote Control - Description of commands | 4.1 |
| Overview of the Status Registers | 4.2 |
| STATus-QUEStionable:SYNC Register | 4.3 |
| Common commands..... | 4.3 |
| Calculate – Subsystem | 4.4 |
| CALCulate:BTOoth – Subsystem..... | 4.4 |
| CALCulate:DELTamarker - Subsystem | 4.20 |
| CALCulate:MARKer - Subsystem | 4.21 |
| CONFigure – Subsystem | 4.23 |
| CONFigure:BTOoth – Subsystem..... | 4.23 |
| DISPlay - Subsystem..... | 4.32 |
| INSTRument - Subsystem | 4.34 |
| SENSe - Subsystem | 4.34 |
| SENSe:DDEMod - Subsystem..... | 4.35 |
| SENSe:EGAin - Subsystem | 4.38 |
| TRACe - Subsystem | 4.38 |
| Assignment Softkey/Hotkey to the Remote Commands | 4.40 |
| Bluetooth Main Menu | 4.40 |
| Hardkey <i>MEAS</i> | 4.43 |
| Hardkey <i>BW</i> | 4.48 |
| 5 Index | 5.1 |

Figures

| | | |
|-----------|---|------|
| Fig. 1-1 | Block diagram of the signal processing architecture of the analyzer | 1.5 |
| Fig. 1-2 | Selection of digital filters | 1.6 |
| Fig. 1-3 | Operation of the Phase Shifter..... | 1.7 |
| Fig. 3-1 | Bluetooth main menu | 3.2 |
| Fig. 3-2 | Definition of a Bluetooth burst..... | 3.6 |
| Fig. 3-3 | Output power measurement | 3.12 |
| Fig. 3-4 | TX Spectrum ACP measurement | 3.14 |
| Fig. 3-5 | Modulation Characteristics measurement..... | 3.16 |
| Fig. 3-6 | Initial Carrier Frequency Tolerance measurement..... | 3.18 |
| Fig. 3-7 | Carrier Frequency Drift measurement | 3.19 |
| Fig. 3-8 | Measuring the Enhanced Data rate | 3.21 |
| Fig. 3-9 | Relative Transmit Power (EDR) measurement..... | 3.22 |
| Fig. 3-10 | Settings required for calculation - submenu Relative Transmit Power (EDR) measurement..... | 3.24 |
| Fig. 3-11 | In-band Spurious Emissions (EDR) measurement | 3.25 |
| Fig. 3-12 | Carrier Frequency Stability and Modulation Accuracy (EDR) measurement | 3.27 |
| Fig. 3-13 | Differential Phase Encoding (EDR) measurement..... | 3.29 |

1 Introduction

The following chapters describe the new operating functions of the Bluetooth demodulator option for Spectrum Analyzer R&S FSP and R&S FSU. In the case of functions identical to those of the basic unit, reference is made to the relevant chapter in the basic unit manual.

Bluetooth Overview

Bluetooth Technical Parameters

| | |
|------------------------------------|--|
| Frequency Bands | USA / Europe 2402 + (0...78) MHz France 2454 + (0...22) MHz |
| Channel Spacing | 1 MHz |
| Modulation | GFSK |
| Tx filter | Gaussian |
| BT | 0.5 |
| Modulation Index | 0.28 – 0.35 nominal 0.32 |
| Frequency Deviation | 160 kHz settled 141 kHz 010101 suite |
| Bandwidth -3dB -20dB | 220 kHz 1 MHz |
| Bit Rate | 1 Mbps |
| Bit Length | 1 μ sec |
| Slot Length (Frequency Hopping) | 625 μ sec |
| Packet Sizes | 1, 3, 5 slot packets |

Power Classes

| Power Class | Maximum (P_{\max}) | Nominal | Minimum (P_{\min}) | Power Control |
|-------------|------------------------|--------------|------------------------|---|
| 1 | 100 mW (20 dBm) | | 1 mW (0 dBm) | from P_{\min} (< +4 dBm) to P_{\max} |
| 2 | 2.5 mW (4dBm) | 1 mW (0 dBm) | 0.25 mW (-6dBm) | optional |
| 3 | 1 mW (0dBm) | | | optional |

Structure of a Bluetooth Data Packet

Every Bluetooth data packet is divided into 3 basic section: Access Code, Header and Payload. The following figures show the order and bit lengths of the individual sections:

| access code 72 bits | | | 54 bits header | 240 / 1496 / 2744 bits payload*) |
|---------------------|-------------------|----------------|----------------|----------------------------------|
| 4 bits preamble | 64 bits sync word | 4 bits trailer | | |

*) During EUT evaluation the payload contains certain bit sequences: PRBS9 (Pseudo Random Bit Sequence) or 11110000 or 10101010

The sync word is transmitted as the major part of the access code. For this purpose the LAP (lower address part) of the BD address will be expanded to 64 bit by adding the BCH code and Barker.

| sync word 64 bits | | |
|-------------------|-------------|---------------|
| BCH code 34 bits | LAP 24 bits | Barker 6 bits |

The LAP (lower address part) of the BD address serves as a basis for the sync word.

| BD – adress 48 bits | | |
|---------------------|------------|-------------|
| NAP 16 bits | UAP 8 bits | LAR 24 bits |

Functional Scope of the Bluetooth Analyzer Option

Supported Tests

The Bluetooth Analyzer Option R&S FS-K8 supports measurements according to the Bluetooth RF Test Specification (Bluetooth SIG), Revision 0.91, July 2001, on FSP and FSU spectrum analyzers.

The following tests are currently implemented according to this specification:

Test cases taken from the RF Test Specification

| | |
|--------|---|
| 5.1.3 | Output Power |
| 5.1.8 | TX Output Spectrum - Adjacent Channel Power |
| 5.1.9 | Modulation Characteristics |
| 5.1.10 | Initial Carrier Frequency Tolerance (ICFT) |
| 5.1.11 | Carrier Frequency Drift |

Overview of Transmitter Tests with settings according to the RF Test Specification

| | Hop | Trigger | Synchronization | Packet Type | Payload | Test Mode | Operating Mode | RBW | VBW | Power | Sweep Time | Sweep Count | Trace Mode | Detector | Frequency in MHz | Span | Test cond | Results |
|--|----------|---------|---|---------------------------------|----------------------|-----------|----------------------|--------|--------|-------------------|---|-------------|------------|----------|--|------|------------|---|
| Output Power | ON | Extern | yes (p0) however, also possible without synchroni- zation | Longest supported | PRBS 9 | Loop back | FM+RF Power | 3MHz | 3MHz | Supported maximum | One complete packet | - | Maxh | Peak | Low / middle / high | - | Norm / Ext | Peak and average power 1) $P_{AV} < 100 \text{ mW}$ (20 dBm) 2) $P_{PK} < 200 \text{ mW}$ (23 dBm) 3) $P_{max} > P_{AV} > P_{min}$ at maximum power step |
| TX Output Spectrum – Adjacent Channel Power | OFF | - | no | DH1 | PRBS 9 | Loop back | Analyzer Time Domain | 100kHz | 300kHz | Supported maximum | 79s pro sweep $= 100\text{ms} * 10^7 * 79$ | 10 | Maxh | Aver | 2402-2480 – 450kHz $\pm n * 1\text{MHz}$ mit $n = 0..9$ bzw. France 2454-2476 | - | Norm / Ext | Channel power of all channels 1) $P_{Tx}(f) \leq -20 \text{ dBm}$ for $ M-N = 2$ 2) $P_{Tx}(f) \leq -40 \text{ dBm}$ for $ M-N \geq 3$ |
| Modulation Characteristics | OFF | - | yes (p0) | Longest supported | 11110000 10101010 | Loop back | FM+RF Power | - | - | Supported maximum | One complete packet | 10 (extern) | - | - | Low / middle / high | - | Norm / Ext | All 8 bit peak deviations and average deviations |
| Initial Carrier Frequency Tolerance | ON / OFF | - | yes (p0) | DH1 | PRBS 9 | Loop back | FM+RF Power | - | - | Supported maximum | - | 10 | - | - | Low / middle / high | - | Norm / Ext | Carrier offset within the 4 preamble bits |
| Carrier Frequency Drift | ON / OFF | - | yes (p0) | All supported packets (DH1/3/5) | 10101010 | Loop back | FM+RF Power | - | - | Not specified | One complete packet | 10 | - | - | Low / middle / high | - | Norm / Ext | Carrier offsets of the 4 bit preamble, of all 10 bit payload sequences, and the maximum drift rate of all 10 bit payload sequences at 50 μs offset. |

Functional Description - Block Diagram

The Adjacent Channel Power Messung is performed in the spectrum analyzer oprating mode of the analyzer. For this test case the complete frequency band is scanned using a sequence of zero span measurements.

All other test cases are based on a digital I/Q demodulator which determines the temporal characteristics of power and frequency. The output data of the demodulator are the basis for calculation of all relevant measurement results like modulation characteristics or output power. The demodulator reaches a maximum in accuracy and temperature stability by sampling the IF signal and converting it digitally down into the base band (I/Q area).

The measurements are performed by passing the following signal processing steps:

- LAP (Lower Adress Part) trigger detection
- Resampling
- Channel filtering
- Automated packet and bit pattern detection
- Limit check
- Parallel display of measurement curves and numeric results on the screen

Figure 1-1 shows the analyzer hardware from the IF to the processor. The analog IF filter is the resolution filter of the spectrum analyzer, which can be selected in a range from 300 kHz to 10 MHz. The A/D converter samples the 20.4 MHz IF signal with a sampling frequency of 32 MHz.

Low pass filtering is performed after the signal has been down-converted into the complex base band and the data rate is reduced in the sequence. The amount of decimation depends on the selected oversampling factor = points / symbol. The default setting is 4, resulting in a 4 MHz sampling rate.

The resulting I/Q data are stored in a memory of 128 k words (FSU 512 k words) for I and Q respectively. The hardware trigger (external or IF power) controls the memory access.

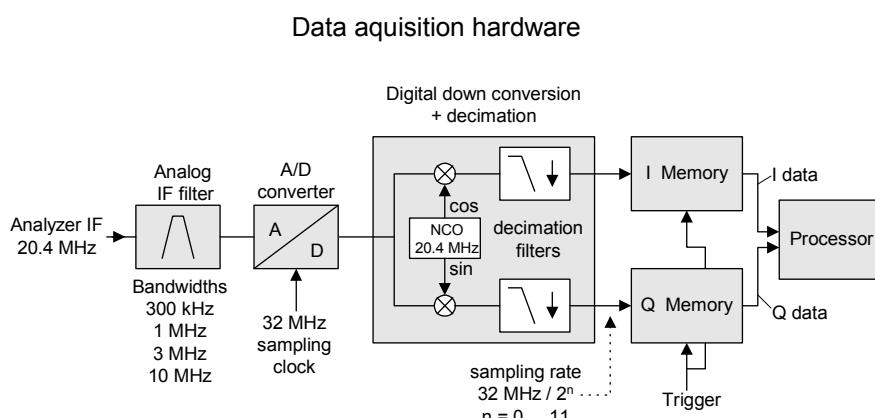


Fig. 1-1 Block diagram of the signal processing architecture of the analyzer

Further Characteristics

Bandwidths

The Bluetooth RF Specification defines a minimal bandwidth of 3 MHz. This requirement is related to the standard gaussian filters as normally used by spectrum analyzers. As the amplitude characteristics of these filters is not flat a bandwidth must be selected that is significantly higher than the bandwidth of the signal under test. The 3 MHz filter causes an error in frequency deviation of about 4% as soon as a 0101 symbol sequence is used. Therefore an IF bandwidth of 10 MHz is highly recommended for this measurement and set up as the default value. The digital bandwidth is smaller and depends on the selected oversampling factor = points / symbol. With the default setting of 4 the digital bandwidth is 3 MHz. This digital filter has a flat amplitude characteristics and does not affect the frequency deviation of the signal.

Optional Measurement Filter (Meas Filter On)

The RF Specification allows high distortion power in the first adjacent channels. The 3 MHz filter does not suppress this kind of distortion, which leads to a high interference in modulation. Therefore a precise measurement of the frequency deviation is not possible.

In order to obtain correct deviation results the analyzer supplies an optional filter whose passband is only appropriate for the channel to measure. The Bluetooth spectrum has a bandwidth of 1 MHz. The filter is flat within 1.04 MHz (ripple: only 0.02 dB) and has steep edges. This measurement filter is not dependent on the selection of the points / symbol value. As a result the displayed deviation value will increase by 3.2%, but without the filter the displayed deviation value can increase dramatically due to interference from adjacent channels. Generally the result will be more precise, if the displayed deviation is lower with filtering than without filtering. In these cases the inaccuracy caused by the adjacent channel interference is higher than the systematic inaccuracy caused by the filter.

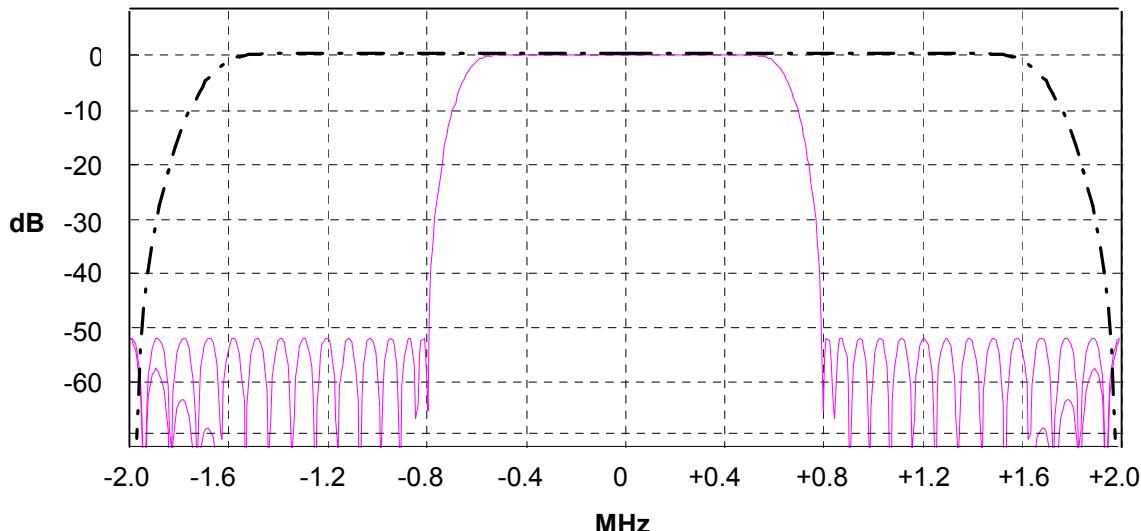


Fig. 1-2 Selection of digital filters

Dashed-dotted curve: Standard filter with 4 points / symbol

Solid curve: Optional measurement filter, independent of the points / symbol setting

Oversampling

The number of samples per symbol is equivalent to the sampling rate in MHz (due to the symbol length of 1 µs).


| Digital bandwidth (flat area) | Points per Symbol | Sampling rate |
|-------------------------------|-------------------|---------------|
| 10 MHz | 32 | 32 MHz |
| 8 MHz | 16 | 16 MHz |
| 5 MHz | 8 | 8 MHz |
| 2.8 MHz | 4 | 4 MHz |
| 1.6 MHz | 2 | 2 MHz |

According to the RF Test Specification an oversampling factor of 4 is required at minimum. On the analyzer this oversampling factor can be selected as "Points per Symbol" in a range from 2 to 32. The default value is 4.

Although possible a value > 4 is not recommended. It increases the measurement time due to the extended calculation effort. Additionally the resulting bandwidth will be larger than required, which leads to lower measurement accuracy, unless the optional measurement filter (Meas Filter On) is used as described in chapter "Bandwidths".

The analyzer uses a phase shifter in order to move the samples to the zero trespassing points. As a result there is one sample per symbol time, which is especially important for a 0101 symbol sequence in order to obtain the precise value for the peak frequency deviation.

Sampling times before Phase Shifter

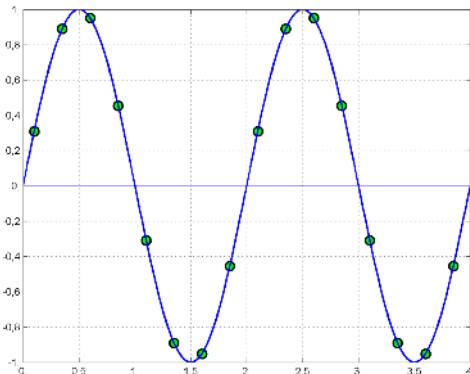

Sampling times after Phase Shifter

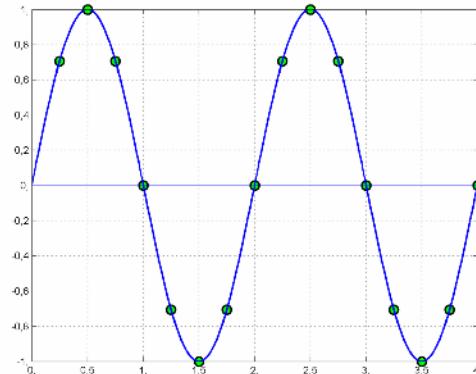


Fig. 1-3 Operation of the Phase Shifter

Advantages of the Phase Shifter:

- No jitter with low sampling rates
- With one sample per zero trespassing point there is always a sample in the middle of the bit length. Therefore the maximum values in the frequency deviation of 0101 bit patterns can be detected precisely also with low sampling rates.
- The immunity to interference when determining the data bits is improved.
- Higher suppression of the distortion during peak detection.

Determining Average or Max/Min Values during several Sweeps (= Bursts)

These functions are very useful in order to obtain more stable results or to find sporadic spurious signals not included in every burst. In many cases the RF Test Specification defines measurements over a 10 burst period.

The number of measurements can be selected using function **Sweep Count**, thus adapting the measurement to the individual requirements.

When using function **Single Sweep** the calculation of average or maximum / minimum values is performed over a well-defined number of sweeps (= Sweep Count).

In contrast to this **Continuous Sweep** yields continuous averaging and calculation of maximum / minimum values over the whole measurement time.

Modulation measurements are performed using trace mode **Clear Write**.

With Continuous Sweep a "live" display is obtained, which allows eg an instant view of changes during alignment of a DUT.

With Single Sweep and Sweep Count 10 the analyzer will evaluate 10 bursts as required by the RF Test Specification. This means that a result is obtained after exactly 10 bursts.

Power measurements are performed using trace mode **Maxhold** in relation with the defined measurement time. The measurement time is selected in a way that makes sure that always one complete burst is acquired. In this case several sweeps are combined to one trace, before this result trace is evaluated.

Impact of the Sweep Counter on the Measurement Results

| | Continuous Sweep | Single Sweep & Sweep Count |
|---|--|--|
| Trace Mode = Clear Write | All measurement results (min., max., average) will be updated with every sweep. The corresponding values will be calculated based on the current curve. | Starts a measurement with n sweeps (n = Sweepcount). All measurement results (min., max., average) will be calculated based on these n sweeps. |
| Trace Mode = AVG, MaxHold, MinHold | All measurement results (min., max., average) will be updated with every sweep. The corresponding values will be calculated based on the current curve. The trace is the continuous average value (AVG) or the extreme value (MaxHold, MinHold) since the start of the measurement. | Starts a measurement with n sweeps (n = Sweepcount). n defines the number of sweeps that will be taken into account for the trace math functions (AVG, MaxHold, MinHold). The n sweeps will result in one trace and the measurement results (Min, Max, Average) will be calculated based on this summarized trace. |

Please note that the above functions may not be mixed up with the detectors of the instrument:

- Detectors combine the measurement data obtained by oversampling to **one pixel** on the screen. The kind of combination (Max Peak, Min Peak, Average, RMS) can be selected.
- The trace functions affect complete measurement curves: A resulting curve is calculated from **several subsequent sweeps**. The method of calculation (Average, Maxhold, Minhold) can be selected here as well.

Thus the detector is the arithmetic rule for how sample data collected with a high data rate are combined to the pixel data of one individual measurement curve, whereas the trace mode is the rule of how samples taken from several measurement curves are to be combined to a new resulting curve. For the ACP measurement the Average detector is fixed.

Trigger Concepts

As the DUT (Device Under Test) uses frequency hopping, a trigger method is necessary for two reasons:

1. a measurement is only possible during the period of time, when there is a Tx signal (burst) at the frequency under request.
2. In order to determine the modulation characteristics correctly a synchronisation with the preamble of the signal must be supplied.

With selection *Find Sync = On* the synchronisation is supplied towards the 64 bit sync word. For this purpose in a first step a burst is searched automatically within the RF signal, or, if selected, the external trigger or the IF power trigger will be used in order to determine the burst position.

In a second step the sync word position is searched by correlation of the signal with the sync word defined in the initialisation phase. The correlation is performed directly with the FM signal, not with the data bits, which are only available after the phase shifter has been processed. The find burst process will be continued as long as no sync word has been found.

After the position of the sync word has been determined the position of the p0 bit will be calculated from the average value of all zero trespassing points, as defined in the RF test specification. Finally the samples will be moved in a way that each sample matches one zero trespassing point (phase shifting). The only measurement possible without synchronisation is the Output Power Measurement. The specified measurement time is 20% to 80% of the burst length. Without synchronisation the burst length is defined via the -3dB points of the power curve. With synchronisation the burst starts with the p0 bit. Therefore varying measurement results are possible if the power of the EUT is not constant within the burst.

In order to supply stable synchronisation the EUT must be operated in reduced hopping mode. The EUT is only allowed to toggle between two frequencies, because otherwise the repetition time for the same frequency would become higher than the record length.

If the test environment supplies an external trigger which marks the channel to be measured a synchronisation is also possible with normal hopping operation.

2 Getting Started - Introduction to the Bluetooth Operation

Enabling the Bluetooth Option


In order to activate the Bluetooth option on your spectrum analyzer a license key is necessary. This license key is included in the option package.

Note: *If the option is installed in the factory the license key will be entered before delivery. Entering the license key as described below is **not** necessary in this case.*

In order to open the editor for the license key please use the following frontpanel key sequence:



Softkey **OPTIONS** opens a submenu prepared for entering the license key for the Bluetooth option. Any option already installed in the instrument will be displayed in a table opened on entering the submenu.

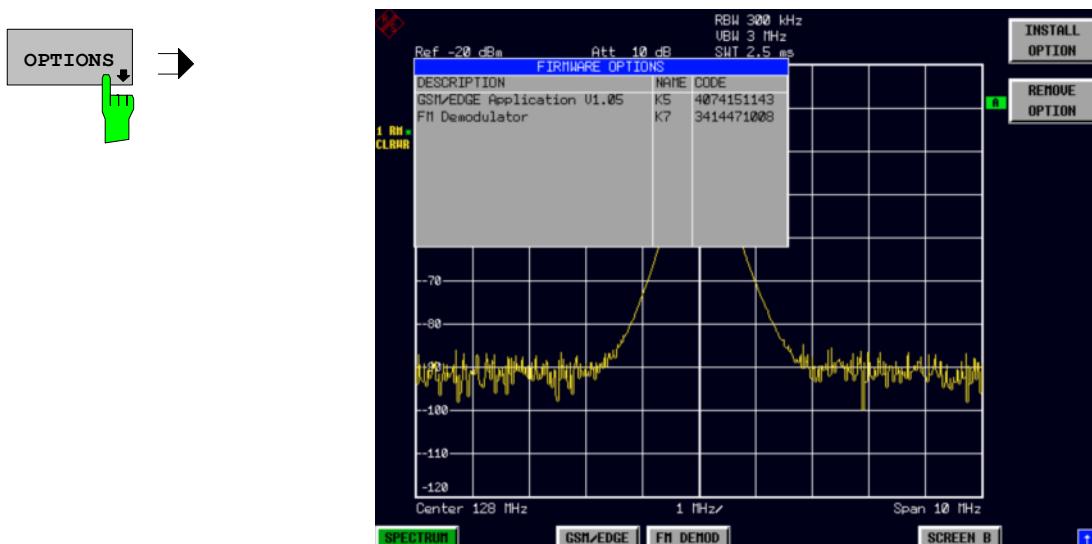

Softkey **INSTALL OPTION** opens the data entry for the license keycode of a firmware option.

On entry of a valid license key the message **OPTION KEY OK** is displayed in the status line and the firmware option appears in table **FIRMWARE OPTIONS**.

On entry of an invalid license key the message **OPTION KEY INVALID** is displayed in the status line.

IEC-Bus-Befehl: --

First Operating Steps

Before measurements according to the RF test specification can be started the settings of the analyzer must be adapted to the characteristics of the DUT (device under test). Therefore the following operating sequence is recommended:

1. Set the spectrum analyzer to its default state.

- Press *PRESET*.
The analyzer will restore its default settings.

2. Select the Bluetooth operating mode.

- Press hotkey *BLUETOOTH*.
The Bluetooth measurement application will be started. The softkey menu *SETTINGS* will be selected.

3. Select a country.

- Press softkey *GEOGRAPHY*.
A list containing the available country settings will be opened.
- Select the desired country using the *CURSOR* keys and confirm the selection with *ENTER*.
The selection defines the frequency range and the available channel numbers for the transmit channels:
USA, Europe: $f = 2402 + k \text{ MHz}$ mit $k = 0..78$
France: $f = 2454 + k \text{ MHz}$ mit $k = 0..22$

4. Select the transmit channel

- Press softkey *CHANNEL* and enter the desired channel number. The available channel numbers are dependent on the available frequency bands, which again depend on the selected country:
USA, Europe: 0 to 78
France: 0 bis 22

5. Select the packet length

- Press softkey *PACKET TYPE*.
The list of available packet type opens.
- Enter the desired packet length DH1, DH3, DH5 or AUTO (recommended) using the cursor keys. Confirm the selection with *ENTER*.
This selection defines the length of the memory area used for searching the sync information. Shorter packet types speed up the sync search process at the risk of searching an area that does not contain sync information.

6. Select the power class of the DUT

- Press softkey *POWER CLASS* and select power class 1 to 3.

7. Configure the sync settings (LAP)

- Press hotkey *FIND SYNC*.
The softkey menu for configuration of the sync information will be opened.
- Press softkey *LAP* and enter the Lower Address Part of the Bluetooth Device Address of the DUT. The sync word used for the sync search will be calculated.


8. Select a measurement

- Press the *MEAS* key and select the desired measurement in the softkey menu.
- Configure measurement time, measurement control (*CONTINUOUS* or *SINGLE*) and the number of measurement cycles (*SWEEP COUNT*) by pressing the corresponding softkeys.

Settings exceeding the functions described in the above setup sequence are included in the reference part of the operating manual in the next chapter.

3 Settings of the Bluetooth Option

Bluetooth Menu Overview

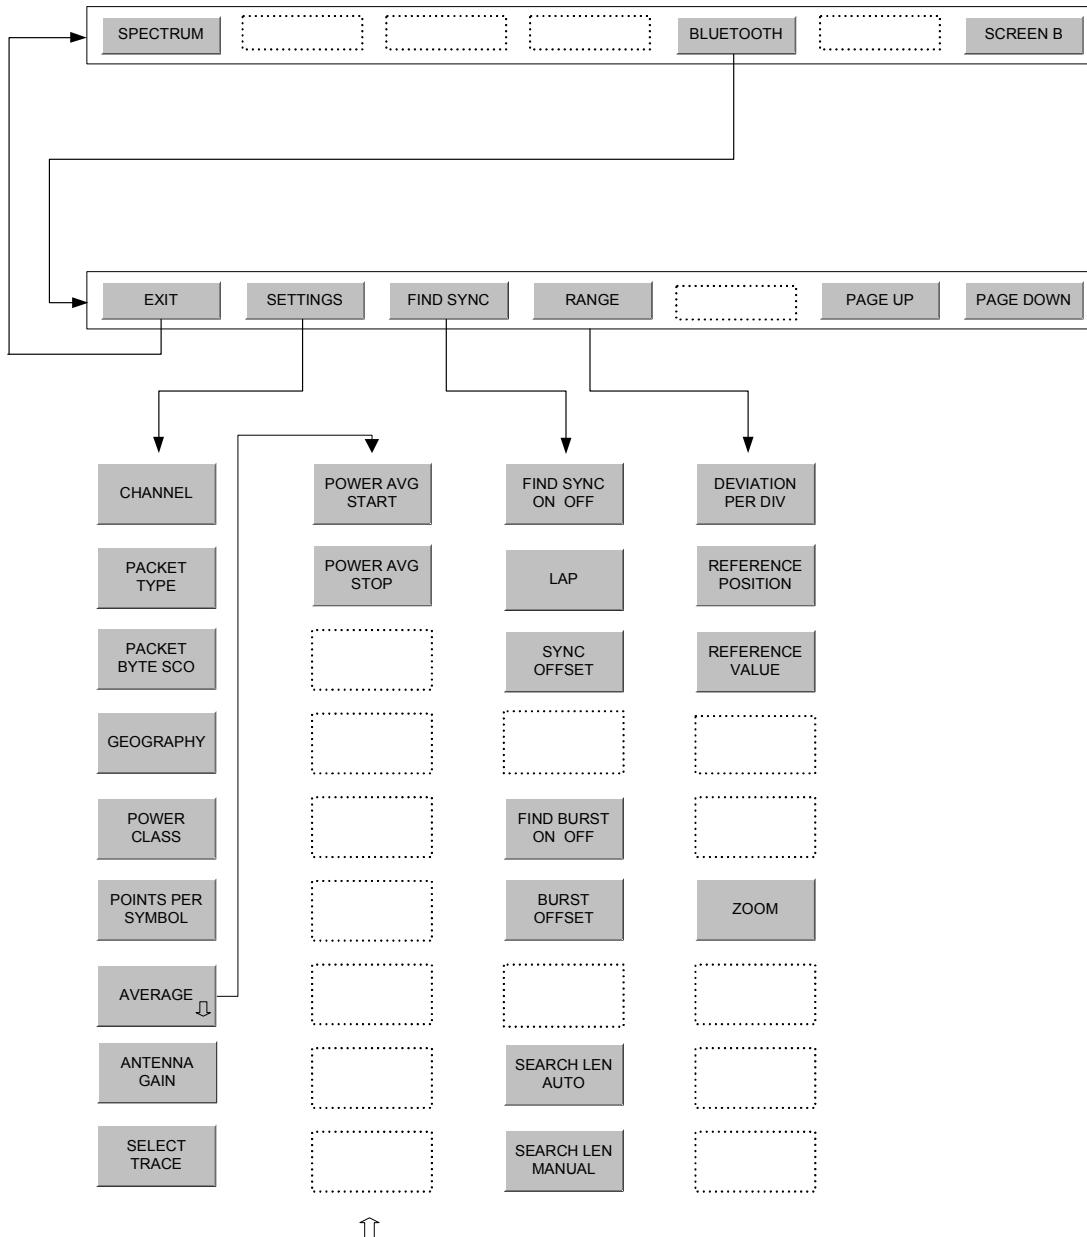

Hotkey **BLUETOOTH**

BLUETOOTH

The hotkey **BLUETOOTH** in the menu bar below the LCD screen serves to activate the Bluetooth option and to switch the measurement demodulator on. At the same time the main softkey menu of the Bluetooth option is opened.

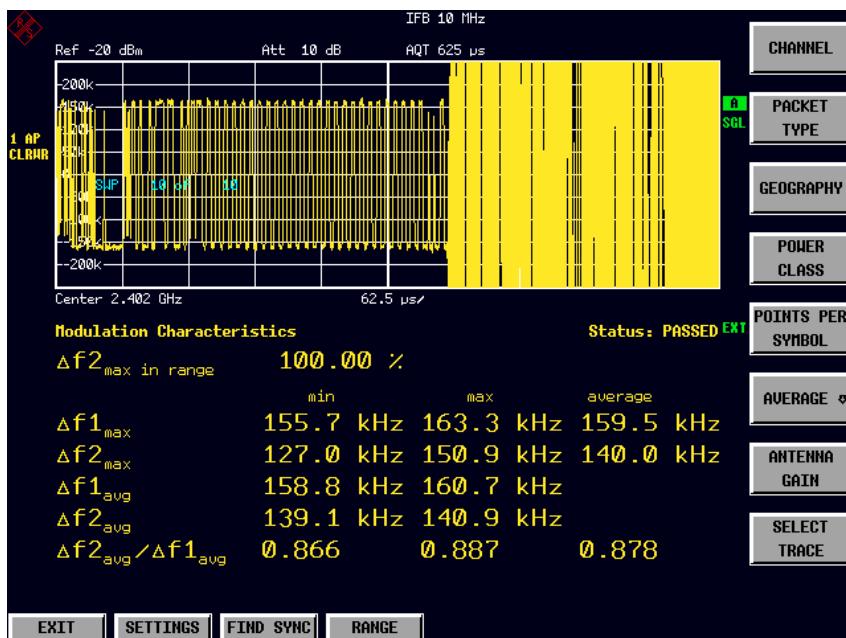


Fig. 3-1 Bluetooth main menu

The Bluetooth main menu contains the entry points for the essential configurations of the Bluetooth demodulator:

- **SETTINGS:**
This softkey menu contains general settings common to all measurements of the measurement demodulator.
- **FIND SYNC:**
This softkey menu defines the synchronisation parameters for the Bluetooth signal under request.
- **RANGE:**
This softkey menu allows the adaption of the scaling of x- and y-axis of the diagram during the measurement of *Modulation Characteristics*, *Initial Carrier Frequency Tolerance* and *Carrier Frequency Drift*.

Hotkey **EXIT** is used to leave the Bluetooth Option. The hotkeys **PAGE UP / PAGE DOWN** are used to scroll the result lists of the individual measurements.

Remote: INST:SEL BT0oth
 NST:NSEL 12

Bluetooth Main Hotkey Menu

EXIT

Hotkey *EXIT* leaves the Bluetooth option and re-activates the Spectrum mode of the instrument. The Bluetooth demodulator is switched off on leaving the option.

Remote: INST:SEL SAN
INST:NSEL 1

SETTINGS

Hotkey *SETTINGS* opens the softkey menu containing the basic settings for the Bluetooth option, which are common to all tests. These settings include:

- Channel number
- Packet type
- Packet bytes SCO
- Geographical settings
- Power class
- Number of points / symbol
- Averaging
- Antenna gain

Remote: --

FIND SYNC

Hotkey *FIND SYNC* opens the softkey menu containing the settings for searching the sync word and the Bluetooth burst. This includes both the settings of the lower address part (LAP) and the settings of the timing parameters (*SYNC OFFSET*, *BURST OFFSET*).

Remote: --

RANGE

Hotkey *RANGE* opens the softkey menu containing the settings for the scaling of x- and y-axis for the measurement of the *Modulation Characteristics*, *Initial Carrier Frequency Tolerance* or *Carrier Frequency Drift*. This hotkey is not available for other measurement types.

Remote: --

PAGE UP

These hotkeys scroll the list of measurement results. These hotkeys are only visible if the number of measurement results exceeds one screen.

PAGE DOWN

Remote: --

General Settings - SETTINGS Menu

CHANNEL

The softkey *CHANNEL* opens the editor for the index of the Tx channel. The range of valid values is dependent on the locally available frequency band.

Editing the channel number is in principle equal to changing the center frequency. The major difference is that the center frequency editor does not limit frequency values to the available frequency band, which means that values outside the frequency band and between the discrete channels can be selected.

As soon as the channel number editor is opened after the center frequency has been changed, the center frequency will be rounded to the nearest channel number.

The channel number determines the center frequency for the following measurements:

- Output Power
- Modulation Characteristics
- Initial Carrier Frequency Tolerance
- Carrier Frequency Drift
- Relative Transmit Power (EDR)
- Carrier Frequency Stability and Modulation Accuracy (EDR)
- Differential Phase Encoding (EDR)

The center frequencies of the other measurements are independent of the active frequency channel (see menu *FREQ*).

The available value range for the channel number is dependent on the selected country. It is defined as follows:

| | |
|-------------------------------|-------|
| USA, Europe (outside France): | 0..78 |
| France: | 0..22 |

The formula for calculating the center frequencies is as follows:

| | | |
|-------------------------------|----------------------------|------------------|
| USA, Europe (outside France): | $f = 2402 + k \text{ MHz}$ | with $k = 0..78$ |
| France: | $f = 2454 + k \text{ MHz}$ | with $k = 0..22$ |

The default setting is channel number 0.

Remote: CONF:BTO:CHAN 0

PACKET BYTE SCO

Opens an edit dialog box to set the number of payload bytes that are transmitted in a packet. For SCO packets, the payload length must be adjusted because those packets have no payload header.

Remote: CONF:BTO:PBSC 50

PACKET TYPE

The softkey *PACKET TYPE* opens a list with available packet types, which allows you to chose the one to be measured. The list contains the following packet types:

| PACKET TYPE | |
|-------------|---------------------|
| ✓ | DH1 (1 slot packet) |
| | DH3 (3 slot packet) |
| | DH5 (5 slot packet) |
| | AUTO |

The selected packet type will be used for the automatic calculation of the sweep time (*SWEEP TIME AUTO*) and the search length of the sync word (*SEARCH LEN AUTO*). The number of occupied slots is the other decisive factor in both calculations.

The actually transmitted packet type will be determined automatically by the Bluetooth demodulator (which means that the selected packet type need not necessarily correspond to the really transmitted packet type; it will only affect the settings for sweep time and search length as described above).

The default value is packet type DH1.

Remote: CONF:BTO:PTYP DH1 | DH3 | DH5 | AUTO

GEOGRAPHY

The softkey *GEOGRAPHY* opens a list with geographical regions that have different frequency bands:



The default setting is *EUROPE*.

Remote: CONF:BTO:GEOG EUR | USA | FRAN

POWER CLASS

The softkey *POWER CLASS* opens the editor for the Bluetooth power classes 1 to 3. The selection of the power class determines the limits for the output power measurement.

The default setting is power class 1.

Remote: CONF:BTO:POW:PCL 1

POINTS PER SYMBOL

The softkey *POINTS PER SYMBOL* allows changing the number of measurement samples per symbol.

The RF Test Specification requests an oversampling factor of at least 4 (default settings). With this oversampling factor a DH5 packet corresponds to 12500 measurement samples (= 2500 samples / slot).

Remote: CONF:BTO:PRAT 2 | 4 | 8 | 16 | 32

AVERAGE

The softkey *AVERAGE* opens the submenu containing the settings for the calculation of the average power. These settings will be used for the measurement of the output power.

Remote: --

ANTENNA GAIN

The softkey *ANTENNA GAIN* allows the input of a level offset in order to take the gain of an antenna into account for displaying power values.

The default setting is 0 dB.

Note: Offset values <> 0 dB will activate the enhancement label "TDF" at the right diagram border.

Remote: SENS:CORR:EGA:INP:MAGN 0 DB

SELECT TRACE

The softkey *SELECT TRACE* selects the measurement curve whose numeric results will be displayed in the lower half of the screen.

The default curve selected is trace 1.

Remote: CONF:BTO:TRAC<1...3>:SEL

Configuring the Averaging Method - Submenu AVERAGE

In order to determine the average power of a Bluetooth burst the corresponding area of the burst must be selected according to the RF Test Specification. In order to define this averaging area the start position and stop position must be entered in percent of the burst length.

The RF Test Specification allows different methods to determine the position of a Bluetooth burst:

- With *FIND SYNC ON* the burst is defined by the p0 bit and the automatically determined packet length.
- With *FIND SYNC OFF* and *FIND BURST ON* the burst is defined by the two 3dB points. The search of the 3dB points is defined in the RF Test Specification as the alternative method compared with the p0 bit method.

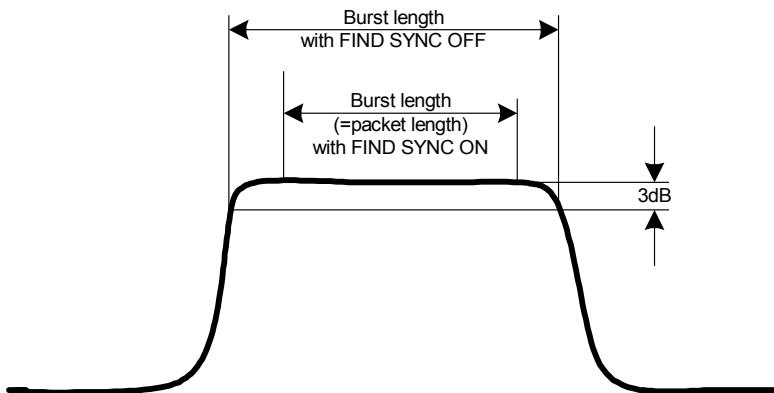


Fig. 3-2 Definition of a Bluetooth burst

With these definitions and dependent on the selected method for determining the burst there are different areas for the calculation of the average power::

AVERAGE
START

The softkey *AVERAGE START* activates the editor for the start position of the evaluation area for the average burst power.
The valid value range is 0 to 100%, the default setting is 20%.

Remote: CONF:BTO:POW:AVER:STAR 20PCT

AVERAGE
STOP

The softkey *AVERAGE STOP* activates the editor for the stop position of the evaluation area for the average burst power.
The valid value range is 0 to 100%, the default setting is 80%.

Remote: CONF:BTO:POW:AVER:STOP 80PCT

Setting of the Synchronisation Parameters - Menu FIND SYNC


With active function *FIND SYNC* the signal processing functions of the analyzer determine the position of the first preamble bit p0 by correlation with the sync word. For this purpose a sufficient record length of the FM demodulated signal is necessary.

The record length can be defined using the softkeys *SEARCH LEN AUTO* and *SEARCH LEN MANUAL*. If the sync word cannot be found in the signal, the message "SYNC NOT FOUND" will be displayed on the screen, and the corresponding bit in the STATus:QUEStionable:SYNC register will be set during remote operation.

The function *FIND SYNC* is active only during the following measurements:

- Output Power
- Modulation Characteristics
- Initial Carrier Frequency Tolerance
- Carrier Frequency Drift
- Relative Transmit Power (EDR)
- Carrier Frequency Stability and Modulation Accuracy (EDR)
- Differential Phase Encoding (EDR)


The softkey *SYNC OFFSET* defines the number of bits to be displayed in front of the access code (p0 bit).

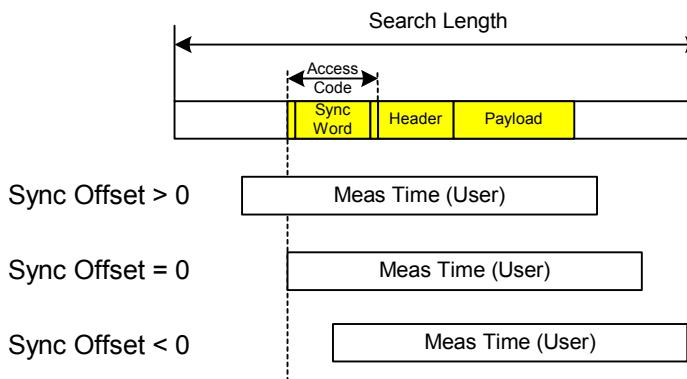

If both functions *FIND SYNC* and *FIND BURST* are active, the sync word will be determined in an identified burst. If function *FIND BURST* is not active or no burst is identified, the total record length (*Search Length*) will be investigated.

Function *FIND BURST* can be activated without active sync search. If no burst is identified in this case, the message "BURST NOT FOUND" will be displayed on the screen, and the corresponding bit in the STATus:QUEStionable:SYNC register will be set during remote operation.

The softkey *BURST OFFSET* defines the time to be displayed in front of the identified burst.

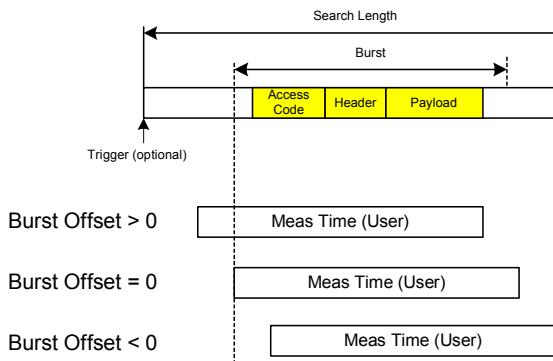

The results of the modulation measurements

- Modulation Characteristics
- Initial Carrier Frequency Tolerance
- Carrier Frequency Drift

can only be calculated with active function *FIND SYNC*.

The measurement of output power can be performed with either of the functions *FIND SYNC* or *FIND BURST* active.

FIND SYNC
ON OFF

The softkey *FIND SYNC* ON/OFF toggles the search of the sync word.

The default setting is *FIND SYNC* ON.

Remote: SENS:DDEM:SEAR:SYNC:STAT ON

LAP

The softkey *LAP* allows the input of the lower 24 bit (Lower Address Part, LAP) of the 'Bluetooth Device Address' (BD_ADDR) of the equipment under test (EUT).

The LAP is used to calculate the 64-bit 'sync word'. The 'sync word' in return is used to determine the start of a packet by correlation and to determine the position of the first preamble bit p0 using the method described in the RF Test Specification. The valid value range for the lower address part is 000000h - FFFFFFFh, its default setting is 0000000h.

Remote: SENS:DDEM:SEAR:SYNC:LAP <hex>

SYNC
OFFSET

The softkey *SYNC OFFSET* activates the input of the number of bits to be displayed in front of the first preamble bit p0. If the sync word is identified, but the selected measurement time cannot be displayed due to the selected sync offset, the message "SYNC OFFSET INVALID" will be displayed on the screen.

The valid value range comprises of -100000 bits to + 100000 bits, with negative values moving the preamble to the left, positive values to the right. The default setting for the sync offset is = 0.

Remote: SENS:DDEM:SEAR:SYNC:OFFS 0

FIND BURST
ON OFF

The softkey *FIND BURST* ON/OFF toggles the search for a burst for the output power measurement between on and off. If both functions *FIND BURST* and *FIND SYNC* are active the search area for the sync word will be limited to the area of the detected burst.

The default setting is *FIND BURST* ON.

Remote: SENS:DDEM:SEAR:PULS:STAT ON | OFF

BURST
OFFSET

The softkey *BURST OFFSET* opens the editor for the time to be displayed in front of the identified burst. If the burst is identified, but the selected measurement time cannot be displayed due to the selected burst offset, the message "BURST OFFSET INVALID" will be displayed on the screen.

The valid value range comprises of -10 ms to + 10 ms, with negative values moving the burst to the left, positive values to the right. The default setting for the burst offset is = 0.

Remote: SENS:DDEM:SEAR:PULS:OFFS 0

SEARCH LEN
AUTO

The softkey *SEARCH LEN AUTO* activates the automatic selection of the search length for the search of the sync word or the burst, depending on the selected packet type.

The automatic search length is determined as follows:

Trigger free run

$$\text{search length} = 3 * \text{packet length} + |\text{sync offset or burst offset}|$$

all other trigger modes:

$$\text{search length} = 1 * \text{packet length} + 1 \text{ Slot} + |\text{sync offset or burst offset}|$$

If the selected measurement time is higher than the packet length, the difference measurement time - packet length is added to the search length.

The default setting for the automatic calculation of the search length is ON.

Remote: SENS:DDEM:SEAR:TIME:AUTO ON | OFF

SEARCH LEN
MANUAL

The softkey *SEARCH LEN MANUAL* switches the automatic selection of the search length off and opens the editor for the search length used for determining the sync word or the burst.

The input of the search length is done in seconds; the valid value range is 100µs to (130560µs / points per symbol).

There is a relation between the selected # of points / symbol and the maximum search length (in # of slots):

| points per symbol | max search length |
|-------------------|-------------------|
| 2 | 104,4 slots |
| 4 | 52,2 slots |
| 8 | 26,1 slots |
| 16 | 13,1 slots |
| 32 | 6,5 slots |

Note: Measurements without trigger require at least 3 times the record length as a value for the search length in loop back operation (see *SEARCH LEN AUTO*). With this condition the packet types that can be identified with an oversampling factor of 16 are restricted to DH1 and DH3. With an oversampling factor of 32 only DH1 packets can be identified reliably.

The default setting is 1875µs. This is the value used by *SEARCH LEN AUTO* (= 3 * DH1 packet length = 3 * 625µs).

Remote: SENS:DDEM:SEAR:TIME 1875US

Modifying the Diagram Scales - Menu RANGE

The hotkey *RANGE* is only available, if a test with display of the FM modulated signal is selected. This menu allows adaption of both the scaling of the y-axis and activation of the zoom function for the x-axis.

DEVIATION
PER DIV

The softkey *DEVIATION PER DIV* allows the selection of the FM deviation to be displayed. The valid value range is 1 Hz / Div to 1 MHz / Div; the default setting is kHz.

Remote: DISP:WIND:TRAC:Y:PDIV 50kHz

REFERENCE
POSITION

The softkey *REFERENCE POSITION* defines the position of the reference line for the frequency deviation on the y-axis of the diagram. In the default setting of the analyzer this line corresponds to a frequency deviation of 0 Hz.

The input is performed in % of the diagram height, with 100% corresponding to the upper diagram border. The default setting is 50% (vertical middle of the diagram).

Remote: DISP:WIND:TRAC:Y:RPOS 50PCT

REFERENCE
VALUE

The softkey *REFERENCE VALUE* defines the FM deviation at the reference line on the y-axis. This allows individual frequency offsets to be taken into account for the display of the measurement curves.

The valid value range is 0 to \pm 10 MHz; the default setting is 0 Hz.

Remote: DISP:WIND:TRAC:Y:RVAL 0HZ

ZOOM

The softkey *ZOOM* activates the zoom function and opens the editor for the zoom start position. With active zoom function an area of only 501 samples is displayed. The valid value range for the zoom start position is 0 to (meas time - 500 / sampling rate).

The default setting for the zoom function is *OFF*.

Remote: SENS:ADEM:ZOOM ON
SENS:ADEM:ZOOM:START 30US

Selection of Measurements - Hardkey MEAS

The hardkey *MEAS* selects the menu containing the Bluetooth measurements:



The following settings can be configured individually for each of the measurements:

- RBW (the IF bandwidth set up for modulation measurements is valid for all measurements)
- VBW
- RBW auto mode
- VBW auto mode
- Trace mode
- Detector
- Sweep count
- Sweep time auto mode
- Sweep time

The settings which are specific for each measurement become active as soon as the corresponding measurement is selected. Changes to the above settings performed using the menus for the hardkeys BW, TRACE and SWEEP are always related to the selected measurement.

The settings defined in the RF Test Specification can thus be modified individually for development or production.

By using the function *STARTUP RECALL* the individual configuration of the various tests can be preserved over a preset.

Remote: CONF:BTO:MEAS <measurement>

with <measurement> =

| | |
|------|---|
| OPOW | Output Power |
| ACLR | TX Output Spectrum - Adjacent Channel Power |
| MCH | Modulation Characteristics |
| IFCT | Initial Carrier Frequency Tolerance |
| CFDR | Carrier Frequency Drift |
| RTP | Relative Transmit Power (EDR) |
| IBS | Spurious Emissions (EDR) |
| DPEN | Differential Phase Encoding (EDR) |
| CFST | Carrier Frequency Stability and Modulation Accuracy (EDR) |

Measuring the Output Power - Softkey **OUTPUT POWER**

The output power measurement determines the maximum and average output power during a burst of the equipment under test (EUT). For this purpose a complete packet is recorded in the time domain.

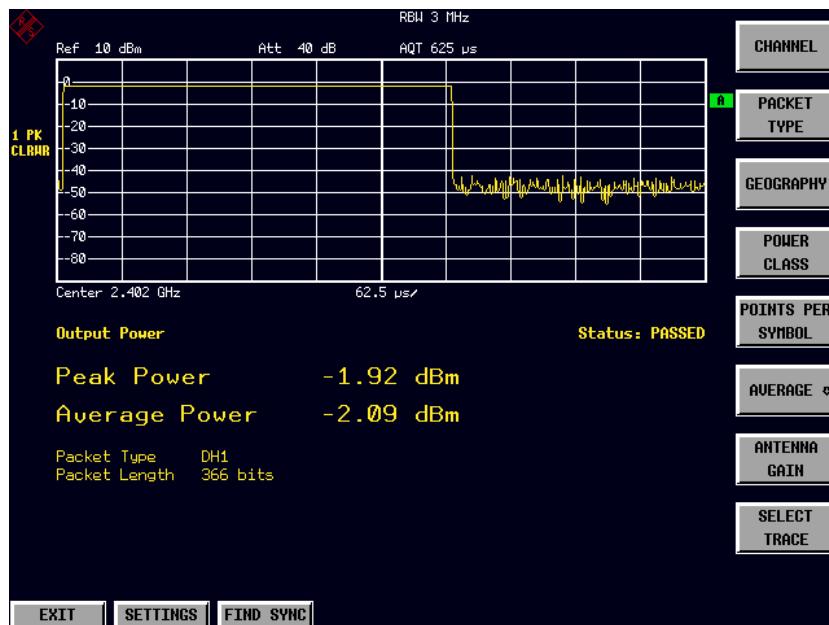


Fig. 3-3 Output power measurement

The peak value is determined from the complete contents of the measurement curve, whereas the average power is calculated from an area of at least 20% to 80% of the burst.

During the output power measurement the Bluetooth demodulator is active in order to determine the sync word within the signal, which is later-on used as the trigger basis. The Bluetooth demodulator is placed in a signal path without video filter. This is why the video filter cannot be activated with the output power measurement.

The EUT must keep the following limits according to the RF Test Specification:

1. $P_{AV} < 100 \text{ mW}$ (20 dBm) EIRP
2. $P_{PK} < 200 \text{ mW}$ (23 dBm) EIRP
3. If the EUT is conforming to power class 1: $P_{AV} > 1 \text{ mW}$ (0 dBm)
4. If the EUT is conforming to power class 2: $0.25 \text{ mW} (-6 \text{ dBm}) < P_{AV} < 2.5 \text{ mW} (4 \text{ dBm})$
5. If the EUT is conforming to power class 3: $P_{AV} < 1 \text{ mW}$ (0 dBm)

A violation of these limits is marked on the screen in red letters.

CONTINUOUS SWEEP

The softkey **CONTINUOUS SWEEP** selects continuous measurement operation. This is the default setting of the instrument.

Remote: INIT:CONT ON

SINGLE SWEEP

The softkey **SINGLE SWEEP** selects single measurement operation and starts a measurement cycle.

Remote: INIT:CONT OFF
INIT,*WAI

MEASTIME MANUAL

The softkey **MEASTIME MANUAL** opens the editor for the sweep time of the output power measurement.

The valid value range is 1 μs to (130560 μs / points per symbol). The default setting is 625 μs .

Remote: CONF:BTO:SWE:TIME 625us

MEASTIME AUTO

The softkey **MEASTIME AUTO** activates the automatic calculation of the sweep time for the output power measurement. For the output power measurement the automatically calculated sweep time corresponds to the length of a packet.

Examples: DH1 625us
DH3 1875us
DH5 3125us

As a default setting the automatic sweep time calculation is switched on.

Remote: CONF:BTO:SWE:TIME:AUTO ON

SWEEP COUNT

The softkey **SWEEP COUNT** opens the editor for the number of sweeps to be initiated by softkey **SINGLE SWEEP**.

The valid value range is 0 to 32767, the default setting is 0.

Note: The maximum and minimum value calculated from the individual sweeps for the P_{AV} -value will be displayed only for sweep count values > 0 . With sweep count = 0 only the P_{AV} - value of the current measurement will be displayed.

Remote: CONF:BTO:SWE:COUN 0

AVERAGE ↓

The softkey **AVERAGE** opens the submenu for the settings required for calculation of the average power with output power measurement (see menu **SETTINGS**).

Remote: --

Adjacent Channel Power Measurement - Softkey TX SPEC ACP

The measurement of the TX Output Spectrum - Adjacent Channel Power measurement measures the power of all adjacent channels.

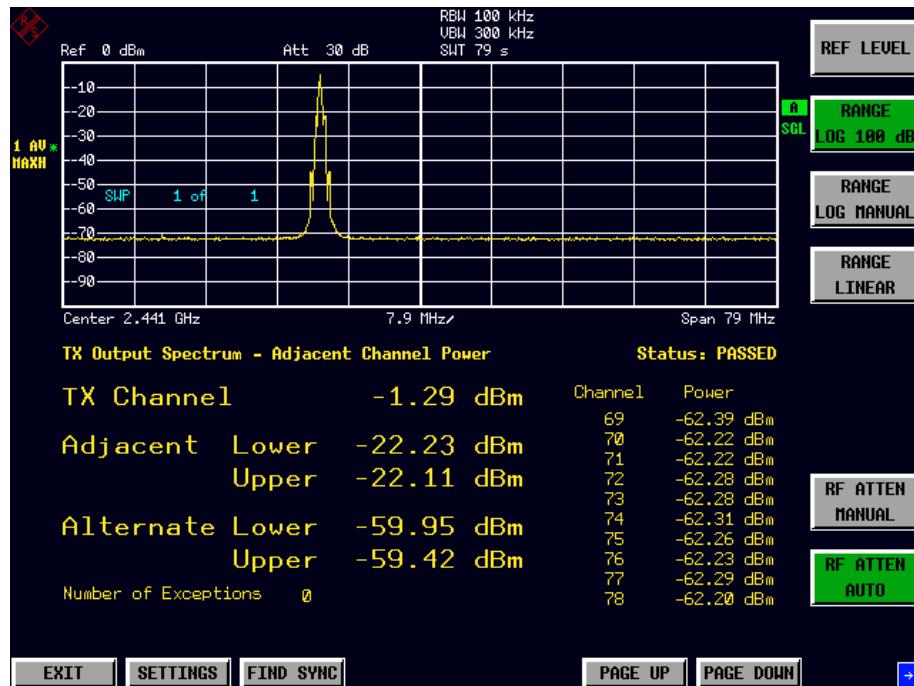


Fig. 3-4 TX Spectrum ACP measurement

The following limits are given by the RF Test Specification:

$$1) P_{TX}(f) \leq -20 \text{ dBm} \text{ for } |M-N| = 2$$

$$2) P_{TX}(f) \leq -40 \text{ dBm} \text{ for } |M-N| \geq 3$$

with

M = Transmit channel of the equipment under test

N = adjacent channel to be measured

A violation of these limits will be marked by red color and an asterisk (*).

CONTINUOUS SWEEP

The softkey **CONTINUOUS SWEEP** selects continuous measurement operation. This is the default setting of the instrument.

Remote: INIT:CONT ON

SINGLE SWEEP

The softkey **SINGLE SWEEP** selects single measurement operation and starts a measurement cycle.

Remote: INIT:CONT OFF
INIT, *WAI

SWEEPTIME MANUAL

The softkey **SWEEPTIME MANUAL** opens the editor for the sweep time of the output power measurement.

The valid value range is 10 μ s (minimum meas time for one channel) to 16000 s. The default setting is 79 s.

Remote: CONF:BTO:SWE:TIME 79s

SWEETIME
AUTO

The softkey *SWEETIME AUTO* activates the automatic calculation of the sweep time for the TX Output Spectrum - Adjacent Channel Power measurement. The automatic sweep time corresponds to the settings defined in the RF Test Specification.

The default state of this function is ON.

Remote: CONF:BTO:SWE:TIME:AUTO ON

SWEEP
COUNT

The softkey *SWEEP COUNT* opens the editor for the number of sweeps to be initiated by softkey *SINGLE SWEEP* for the TX Output Spectrum - Adjacent Channel Power measurement.

The valid value range is 0 to 32767, the default setting is 10.

Remote: CONF:BTO:SWE:COUN 10

NO. OF
ACP CHAN

The softkey *NO. OF ACP CHAN* opens the editor for the number of adjacent channels, whose power is to be measured.

As with the ACP measurement of the basic instrument firmware this value refers to the number of adjacent channels on one side of the Tx channel. This means that with a selected value of 10 the analyzer will measure in total 21 channels (10 lower channels + TX channel + 10 upper channels).

The frequency range required for the measurement is set up automatically. The center frequency will also be adapted automatically dependent on the selected TX channel.

The measurement of the adjacent channels is limited to the available Bluetooth frequency band, which means that at maximum 79 channels (23 channels in France) will be measured.

Value range: 0 to 78 (Europe/USA), 0 to 22 (France).
The default setting is 78.

Remote: CONF:BTO:ACLR:ACP 78

Measuring the Modulation Characteristics - Softkey MODULATION CHAR

The measurement of the modulation characteristics determines the maximum frequency deviation of all 8 bit sequences of the payload.

Additionally the average value of the maximum frequency deviation of a packet will be calculated. For this purpose the equipment under test is configured in a way that packets with bit pattern "11110000" and "10101010" are transmitted alternately. According to the RF Test Specification this sequence has to be repeated 10 times.

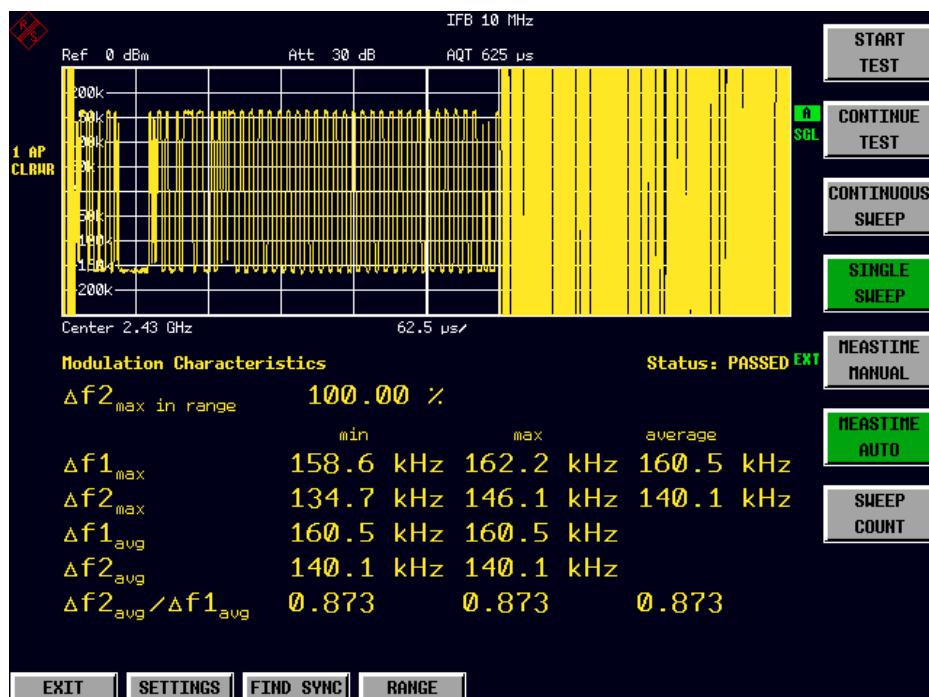


Fig. 3-5 Modulation Characteristics measurement

START TEST

The softkey *START TEST* initiates a new measurement. All frequency deviation values obtained earlier are discarded.

The bit pattern in the payload will be detected automatically. The frequency deviation of a packet is determined according to the procedure defined in the RF Test Specification.

Remote: INIT; *WAI

CONTINUE TEST

After the bit pattern has been toggled at the EUT the softkey *CONTINUE TEST* measures the frequency deviation of further packets, just like softkey *START TEST* did for the first bit pattern type. The results of the preceding measurement are preserved and will be taken into account during the new measurements.

Remote: INIT:CONN

CONTINUOUS SWEEP

The softkey *CONTINUOUS SWEEP* selects continuous measurement operation. This is the default setting of the instrument. The number of displayed measurement results depends on the detected bit pattern.

Remote: INIT:CONT ON

SINGLE SWEEP

The softkey **SINGLE SWEEP** selects single measurement operation and starts a measurement cycle. The number of displayed measurement results depends on the detected bit pattern.

Remote: INIT:CONT OFF
INIT;*WAI

MEAS TIME MANUAL

The softkey **MEASTIME MANUAL** opens the editor for the sweep time of the modulation characteristics measurement.

The valid value range is 1 µs to (130560 µs / points per symbol). The default setting is 625 µs.

Remote: CONF:BTO:SWE:TIME 625us

MEAS TIME AUTO

The softkey **MEASTIME AUTO** activates the automatic calculation of the measurement time for the modulation characteristics measurement. The automatic sweep time corresponds to the settings defined in the RF Test Specification. The default state of this function is ON.

Remote: CONF:BTO:SWE:TIME:AUTO ON

SWEEP COUNT

The softkey **SWEEP COUNT** opens the editor for the number of sweeps to be initiated by softkey **SINGLE SWEEP** for the modulation characteristics measurement.

The valid value range is 0 to 32767, the default setting is 0.

Remote: CONF:BTO:SWE:COUN 0

Measuring the Initial Carrier Frequency Tolerance - Softkey INIT CARR FREQ TOL

The measurement of the Initial Carrier Frequency Tolerance determines the carrier offset of the four preamble bits. According to the RF Test Specification the calculation of the carrier offset is performed from the middle of the first preamble bit to the middle of the bit following the preamble.

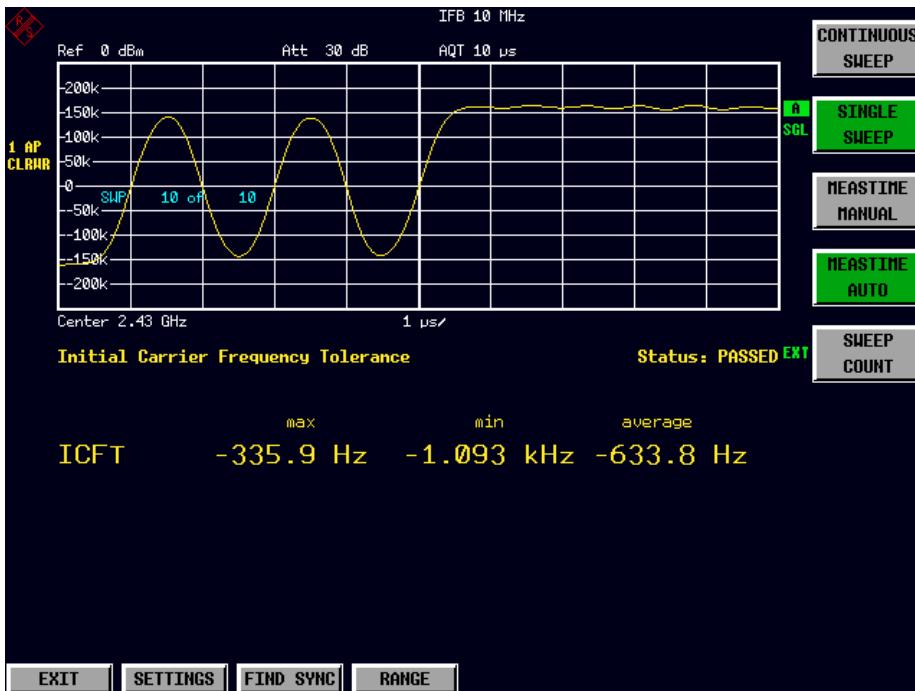


Fig. 3-6 Initial Carrier Frequency Tolerance measurement

CONTINUOUS SWEEP

The softkey **CONTINUOUS SWEEP** selects continuous measurement operation. This is the default setting of the instrument.

Remote: INIT:CONT ON

SINGLE SWEEP

The softkey **SINGLE SWEEP** selects single measurement operation and starts a measurement cycle.

Remote: INIT:CONT OFF
INIT;*WAI

MEASTIME MANUAL

The softkey **MEASTIME MANUAL** opens the editor for the sweep time of the initial carrier frequency tolerance measurement.

The valid value range is 1 μs to (130560 μs / points per symbol). The default setting is 10 μs.

Remote: CONF:BTO:SWE:TIME 625us

MEAS TIME AUTO

The softkey **MEAS TIME AUTO** activates the automatic calculation of the measurement time for the modulation characteristics measurement. The automatic sweep time corresponds to the settings defined in the RF Test Specification.

The default state of this function is ON.

Remote: CONF:BTO:SWE:TIME:AUTO ON

**SWEEP
COUNT**

The softkey **SWEEP COUNT** opens the editor for the number of sweeps to be initiated by softkey **SINGLE SWEEP** for the initial carrier frequency tolerance measurement.

The valid value range is 0 to 32767, the default setting is 10.

Note: With trace mode **CLEAR/WRITE** and single sweep operation the selected number of sweeps will be processed and according to the RF Test Specification the results of all sweeps will be compared with the defined tolerance.

If a different trace mode is selected, the analyzer can alternatively combine several traces and determine the measurement results from the resulting trace.

Remote: CONF:BTO:SWE:COUN 10

Measuring the Carrier Frequency Drift - Softkey **CARRIER FREQ DRIFT**

The measurement of the Carrier Frequency Drift determines the maximum frequency drift between the average value of the preamble bits and any 10 bit group of the payload. Additionally the maximum drift rate between all 10 bit groups in the payload is determined every 50µs.

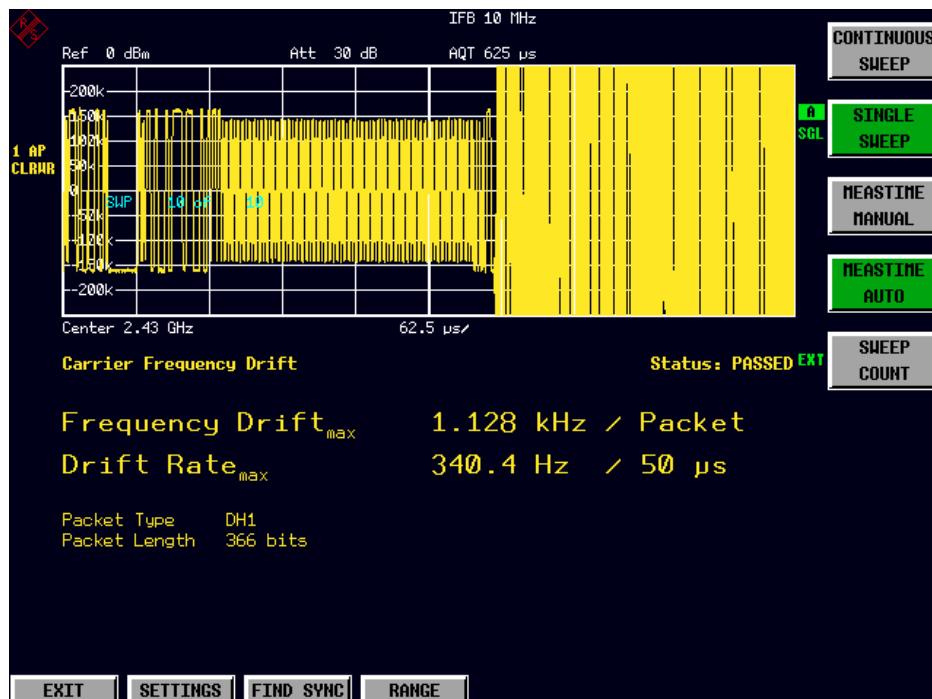


Fig. 3-7 Carrier Frequency Drift measurement

**CONTINUOUS
SWEEP**

The softkey **CONTINUOUS SWEEP** selects continuous measurement operation. This is the default setting of the instrument.

Remote: INIT:CONT ON

SINGLE SWEEP

The softkey *SINGLE SWEEP* selects single measurement operation and starts a measurement cycle.

Remote: INIT:CONT OFF
INIT;*WAI

MEASTIME AUTO

The softkey *MEASTIME AUTO* activates the automatic calculation of the sweep time. The automatically calculated sweep time corresponds to the length of a packet.

Examples: DH1 625us
DH3 1875us
DH5 3125us

As a default setting the automatic sweep time calculation is switched on.

Remote: CONF:BTO:SWE:TIME:AUTO ON

MEAS TIME MANUAL

The softkey *MEASTIME MANUAL* opens the editor for the sweep time of the Carrier Frequency Drift measurement.

The valid value range is 1 µs to (130560 µs / points per symbol). The default setting is 625 µs.

Remote: CONF:BTO:SWE:TIME 625us

SWEEP COUNT

The softkey *SWEEP COUNT* opens the editor for the number of sweeps to be initiated by softkey *SINGLE SWEEP* for the initial carrier frequency tolerance measurement.

The valid value range is 0 to 32767, the default setting is 10.

Note :With trace mode *CLEAR/ WRITE* and single sweep operation the selected number of sweeps will be processed and according to the RF Test Specification the results of all sweeps will be compared with the defined tolerance.
If a different trace mode is selected, the analyzer can alternatively combine several traces and determine the measurement results from the resulting trace.

Remote: CONF:BTO:SWE:COUN 10

Measuring the Enhanced Data rate - Softkey EDR

The softkey **EDR** opens a submenu with all available enhanced data rate measurements.

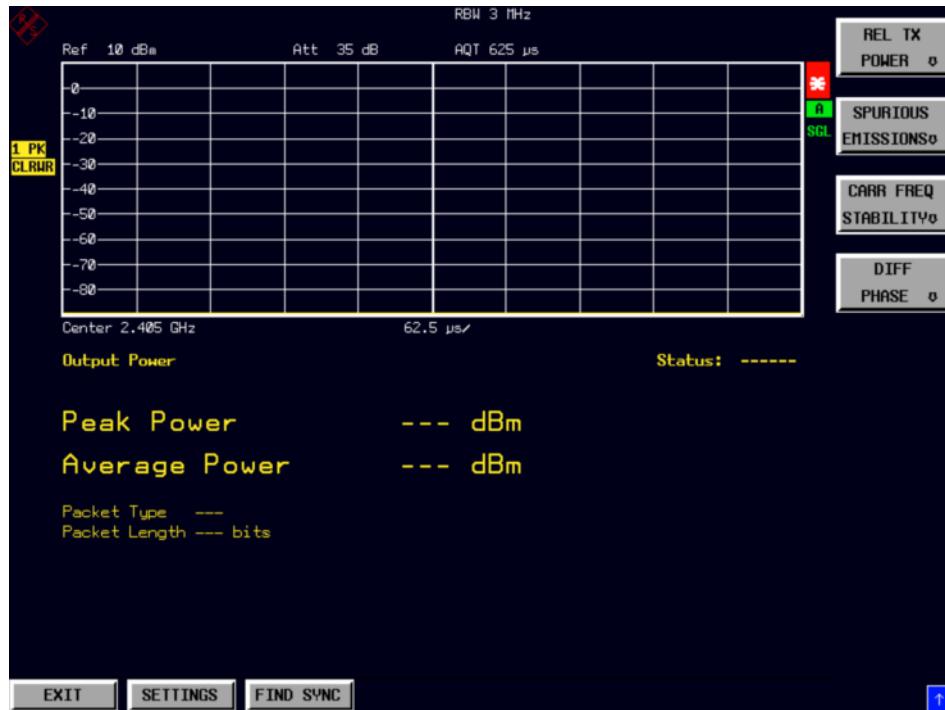


Fig. 3-8 Measuring the Enhanced Data rate

Relative Transmit Power (EDR) measurement

**REL TX
POWER**

Opens a submenu to configure the Rel TX Power measurement. The measurement of the Relative Transmit Power (is an enhanced data rate measurement (EDR). It determines the average transmission power of the GFSK and DPSK modulated parts of the signal and calculates the ratio of those values. The measurement results must conform to the requirement:

- $(P_{GFSK} - 4\text{dB}) < P_{DPSK} < (P_{GFSK} + 1\text{dB})$

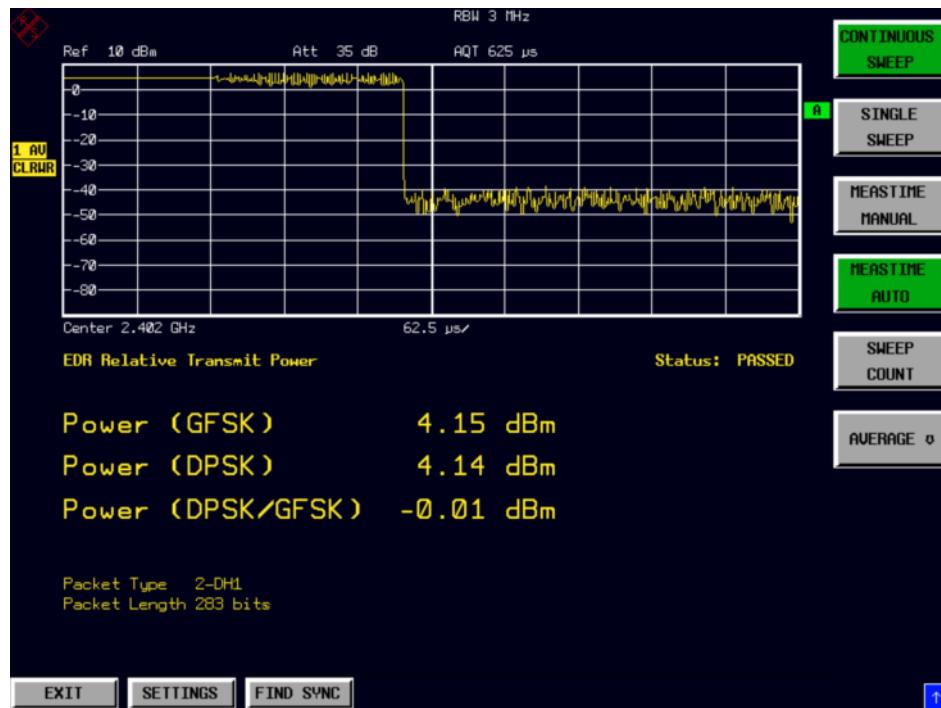


Fig. 3-9 Relative Transmit Power (EDR) measurement

Remote: CONF:BTO:MEAS RTP
CALC:BTO:RTP? MIN
CALC:BTO:RTP:RAT? MIN

CONTINUOUS SWEEP

The softkey **CONTINUOUS SWEEP** selects continuous measurement operation. This is the default setting of the instrument.

Remote: INIT:CONT ON

SINGLE SWEEP

The softkey **SINGLE SWEEP** selects single measurement operation and starts a measurement cycle.

Remote: INIT:CONT OFF
INIT;*WAI

MEASTIME MANUAL

The softkey **MEASTIME MANUAL** opens the editor for the sweep time of the Carrier Frequency Drift measurement.

The valid value range is 1 μs to (130560 μs / points per symbol). The default setting is 625 μs.

Remote: CONF:BTO:SWE:TIME 625us

MEASTIME
AUTO

The softkey *MEASTIME AUTO* activates the automatic calculation of the sweep time. The automatically calculated sweep time corresponds to the length of a packet.

Examples: DH1 625us
DH3 1875us
DH5 3125us

As a default setting the automatic sweep time calculation is switched on.

Remote: CONF:BTO:SWE:TIME:AUTO ON

SWEEP
COUNT

The softkey *SWEEP COUNT* opens the editor for the number of sweeps to be initiated by softkey *SINGLE SWEEP* for the initial carrier frequency tolerance measurement.

The valid value range is 0 to 32767, the default setting is 10.

Note: *With trace mode CLEAR/ WRITE and single sweep operation the selected number of sweeps will be processed and according to the RF Test Specification the results of all sweeps will be compared with the defined tolerance.*
If a different trace mode is selected, the analyzer can alternatively combine several traces and determine the measurement results from the resulting trace.

Remote: CONF:BTO:SWE:COUN 10

AVERAGE \downarrow

The softkey *AVERAGE* opens the submenu for the settings required for calculation of the average power with oRelative Transmit Power (EDR) measurement.

Remote: ---

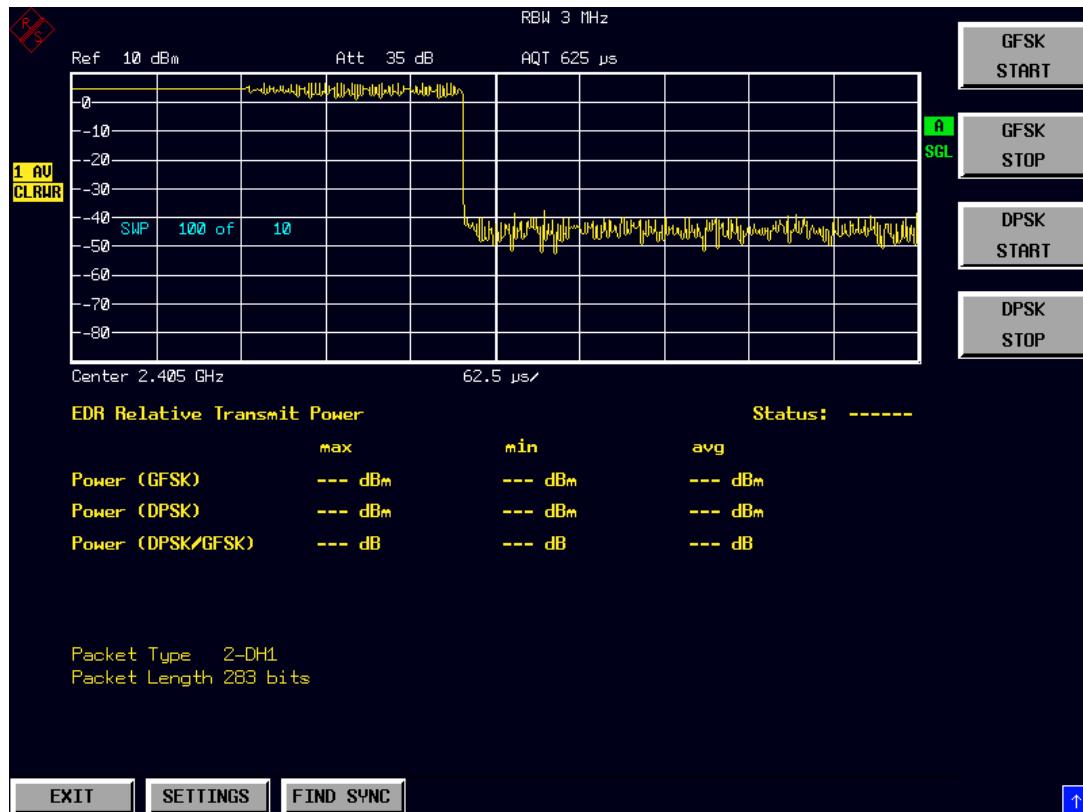


Fig. 3-10 Settings required for calculation - submenu Relative Transmit Power (EDR) measurement

GFSK
START

Opens an edit dialog box to enter the start time for the power measurement of the GFSK sections of the packet. The default value is 10%.

The abbreviation GFSK stands for Gaussian Frequency Shift Keying.

Remote: CONF:BTO:RTP:GAV:STAR 20

GFSK
STOP

Opens an edit dialog box to enter the stop time for the power measurement of the GFSK sections of the packet. The default value is 90%.

The abbreviation GFSK stands for Gaussian Frequency Shift Keying.

Remote: CONF:BTO:RTP:GAV:STOP 80

DPSK
START

Opens an edit dialog box to enter the start time for the power measurement of the DPSK sections of the packet. The default value is 10%.

The abbreviation DPSK stands for Differential Phase Shift Keying.

Remote: CONF:BTO:RTP:DAV:STAR 20

DPSK
STOP

Opens an edit dialog box to enter the stop time for the power measurement of the DPSK sections of the packet. The default value is 90%.

The abbreviation DPSK stands for Differential Phase Shift Keying.

Remote: CONF:BTO:RTP:DAV:STOP 80

In-band Spurious Emissions (EDR) measurement

SPURIOUS
EMISSIONS

Opens a submenu to configure the Spurious Emissions measurement. The measurement of the In-band Spurious Emissions is an enhanced data rate measurement (EDR). It verifies whether the level of unwanted signals within the used frequency band lies below the required level. The analyzer records the signal only in those parts of the signal in which the device transmits DPSK-modulated data.

The signal must meet the following conditions:

- $P_{TX}(f) \leq -20 \text{ dBm}$ for $|M-N| = 2$
- $P_{TX}(f) \leq -40 \text{ dBm}$ for $|M-N| \geq 3$

with M = transmit channel of the equipment under test, N = adjacent channel to be measured

- The adjacent channel power between 1 MHz and 1.5 MHz from the carrier (Adj500kHz Lower/Upper) shall be at least 26 dB below the maximum power of the carrier (TX Channel (Ref)).

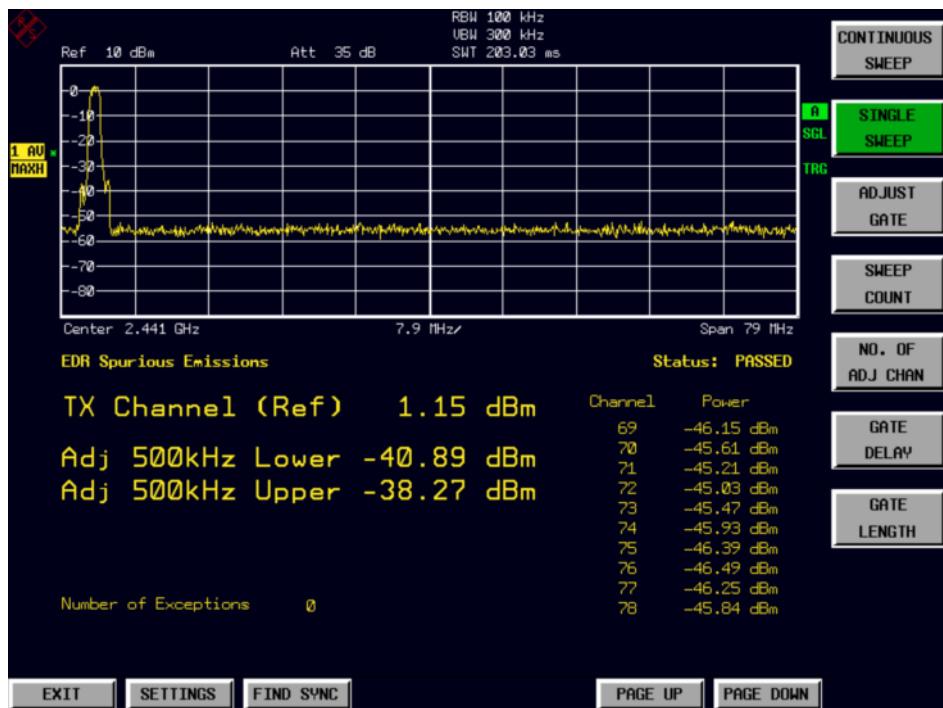


Fig. 3-11 In-band Spurious Emissions (EDR) measurement

Remote: CONF:BTO:MEAS IBS
CALC:BTO:IBS?
CALC:BTO:IBS:EXC?
CALC:BTO:IBS:HADJ? LOW

CONTINUOUS
SWEEP

The softkey **CONTINUOUS SWEEP** selects continuous measurement operation. This is the default setting of the instrument.

Remote: INIT:CONT ON

SINGLE SWEEP

The softkey *SINGLE SWEEP* selects single measurement operation and starts a measurement cycle.

Remote: INIT:CONT OFF
INIT; *WAI

ADJUST GATE

Adjusts the gate settings according to the pre-measurement results.

Remote: CONF:BTO:IBS:GATE:AUTO ONCE

SWEEP COUNT

Opens an edit dialog box to enter the number of sweeps to be initiated by Single Sweep softkey. The valid value range is 0 to 32767.

Remote: CONF:BTO:SWE:COUN 20

NO. OF ADJ CHAN

Opens an edit dialog box to enter the number of adjacent channels, for which the power is to be measured. The values range from 0 to 78. A minimum value of 3 is recommended. The default setting is 78 (all channels).

As with the ACP measurement of the basic instrument firmware this value refers to the number of adjacent channels on one side of the TX channel. This means that with a selected value of 10 the analyzer will measure in total 21 channels (10 lower channels + TX channel + 10 upper channels).

The frequency range required for the measurement is set up automatically. The center frequency will also be adapted automatically dependent on the selected TX channel.

The measurement of the adjacent channels is limited to the available Bluetooth frequency band, which means that at maximum 79 channels (23 channels in France) will be measured.

Remote: CONF:BTO:IBS:ACP 20

GATE DELAY

Opens an edit dialog box to enter the time between trigger event and start of the DPSK packet. That is the measurement start time.

Remote: SWE:EGAT:HOLD 1US

GATE LENGTH

Opens an edit dialog box to enter the sweep time in seconds. Usually, this is the length of the DPSK section including the power down ramp.

Remote: SWE:EGAT:LENG 100US

Carrier Frequency Stability and Modulation Accuracy (EDR) measurement

CARR FREQ
STABILITY

Opens a submenu to configure the Carr Freq Stability measurement. The measurement of the Carrier Frequency Stability and Modulation Accuracy () is an enhanced data rate measurement (EDR). It verifies that the modulation accuracy and the frequency stability are working within the required limits. According to the RF Test Specification, the software records 200 blocks, each with a length of 50 µs for the evaluation.

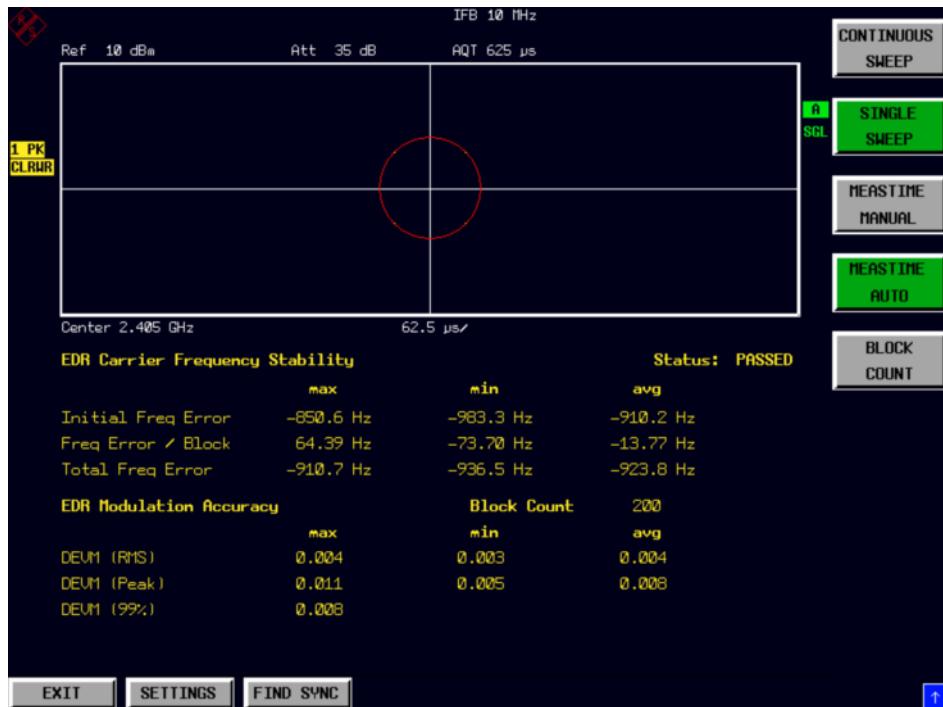


Fig. 3-12 Carrier Frequency Stability and Modulation Accuracy (EDR) measurement

Remote:

```

CALC:BTO:CFST:FERR? MIN
CALC:BTO:CFST:FERR:BLOC? AVER
CALC:BTO:CFST:FERR:INIT? MAX
CALC:BTO:CFST:DEVM? AVER
CALC:BTO:CFST:DEVM:PEAK?
CALC:BTO:CFST:DEVM:D99Pct?
CALC:BTO:CFST:COUNT?

```

CONTINUOUS SWEEP

The softkey **CONTINUOUS SWEEP** selects continuous measurement operation. This is the default setting of the instrument.

Remote: INIT:CONT ON

SINGLE SWEEP

The softkey **SINGLE SWEEP** selects single measurement operation and starts a measurement cycle.

Remote: INIT:CONT OFF
INIT;*WAI

MEASTIME
MANUAL

The softkey *MEASTIME MANUAL* opens the editor for the sweep time of the Carrier Frequency Drift measurement.

The valid value range is 1 µs to (130560 µs / points per symbol). The default setting is 625 µs.

Remote: CONF:BTO:SWE:TIME 625us

MEASTIME
AUTO

The softkey *MEASTIME AUTO* activates the automatic calculation of the sweep time. The automatically calculated sweep time corresponds to the length of a packet.

Examples: DH1 625us

DH3 1875us

DH5 3125us

As a default setting the automatic sweep time calculation is switched on.

Remote: CONF:BTO:SWE:TIME:AUTO ON

SWEEP
COUNT

The softkey *SWEEP COUNT* opens the editor for the number of sweeps to be initiated by softkey *SINGLE SWEEP* for the initial carrier frequency tolerance measurement.

The valid value range is 0 to 32767, the default setting is 10.

Note: *With trace mode CLEAR/ WRITE and single sweep operation the selected number of sweeps will be processed and according to the RF Test Specification the results of all sweeps will be compared with the defined tolerance.*
If a different trace mode is selected, the analyzer can alternatively combine several traces and determine the measurement results from the resulting trace.

Remote: CONF:BTO:SWE:COUN 10

Differential Phase Encoding (EDR) measurement



Opens a submenu to configure the Differential Phase Encoding measurement. The measurement of the Differential Phase Encoding (softkey) is an enhanced data rate measurement (EDR). It checks in the time range of the DPSK modulation whether the device modulates the data correctly.

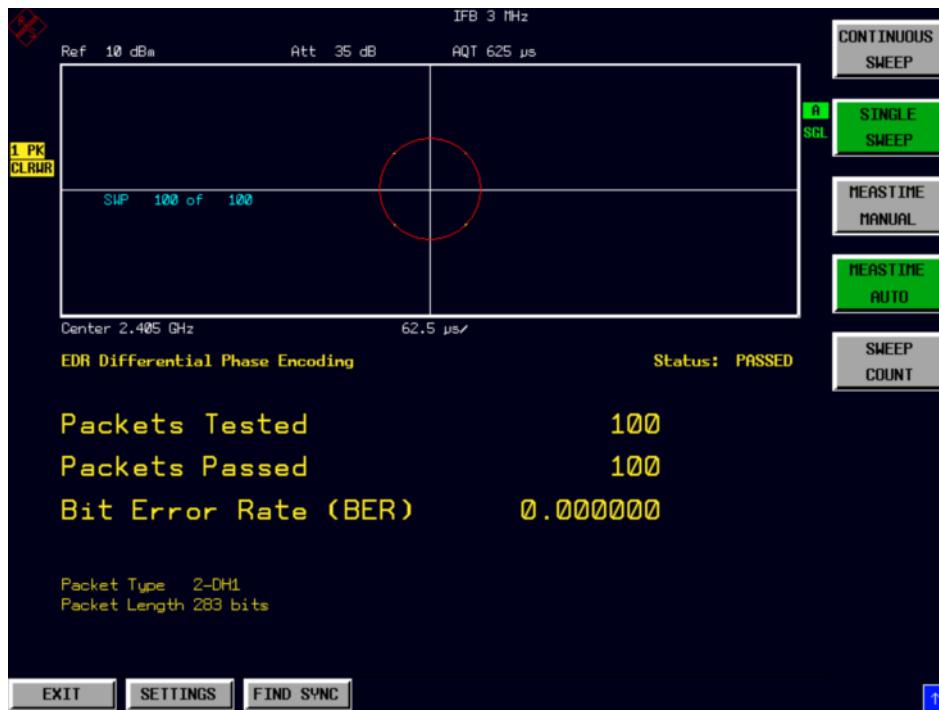


Fig. 3-13 Differential Phase Encoding (EDR) measurement

Remote:

```
CONF:BTO:MEAS DPEN
CALC:BTO:DPEN:NERR?
CALC:BTO:DPEN?
CALC:BTO:DPEN:BER?
```



The softkey *SINGLE SWEEP* selects single measurement operation and starts a measurement cycle.



Remote: INIT:CONT ON

The softkey *SINGLE SWEEP* selects single measurement operation and starts a measurement cycle.

Remote:

```
INIT:CONT OFF
INIT;*WAI
```

MEASTIME
AUTO

The softkey *MEASTIME AUTO* activates the automatic calculation of the sweep time. The automatically calculated sweep time corresponds to the length of a packet.

Examples: DH1 625us
DH3 1875us
DH5 3125us

As a default setting the automatic sweep time calculation is switched on.

Remote: CONF:BTO:SWE:TIME:AUTO ON

MEASTIME
MANUAL

The softkey *MEASTIME MANUAL* opens the editor for the sweep time of the Carrier Frequency Drift measurement.

The valid value range is 1 µs to (130560 µs / points per symbol). The default setting is 625 µs.

Remote: CONF:BTO:SWE:TIME 625us

SWEEP
COUNT

The softkey *SWEEP COUNT* opens the editor for the number of sweeps to be initiated by softkey *SINGLE SWEEP* for the initial carrier frequency tolerance measurement.


The valid value range is 0 to 32767, the default setting is 10.

Note: *With trace mode CLEAR/WRITE and single sweep operation the selected number of sweeps will be processed and according to the RF Test Specification the results of all sweeps will be compared with the defined tolerance.*

If a different trace mode is selected, the analyzer can alternatively combine several traces and determine the measurement results from the resulting trace.

Remote: CONF:BTO:SWE:COUN 10

Setting the Center Frequency - Hardkey FREQ




For all measurements the selection of a frequency channel via softkey *CHANNEL* in menu *SETTINGS* is necessary in order to provide correct function according to the RF Test Specification. A change of the center frequency via menu *FREQ* is possible for these measurements, but the relation to the frequency channel will be lost, which means that the value range for the center frequency is not limited to frequencies within valid frequency channels.

The return to the fixed relation between center frequency and Bluetooth frequency channels is performed at the moment when softkey *CHANNEL* is pressed or another measurement is selected. The center frequency will be rounded to the nearest frequency channel.

Setting the Frequency Range - Hardkey SPAN

The hardkey *SPAN* is not available in the *BLUETOOTH* operating mode.

Power Settings - Hardkey AMPT

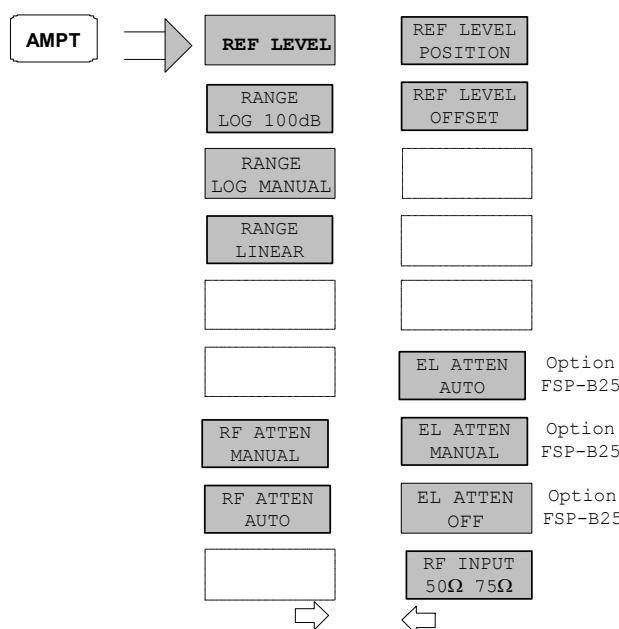

The functions of menu *AMPT* are identical to those of the basic instrument.


The functions

RANGE LOG 100 dB,
RANGE LOG MANUAL und
RANGE LINEAR

are only available with measurements *OUTPUT POWER* and *TX SPECTRUM ACP*.

Note: *The REF LEVEL value defines the maximum input power of the A/D converter. It must therefore be equal or higher than the maximum power of the signal under test.*

Bandwidth Settings - Hardkey BW

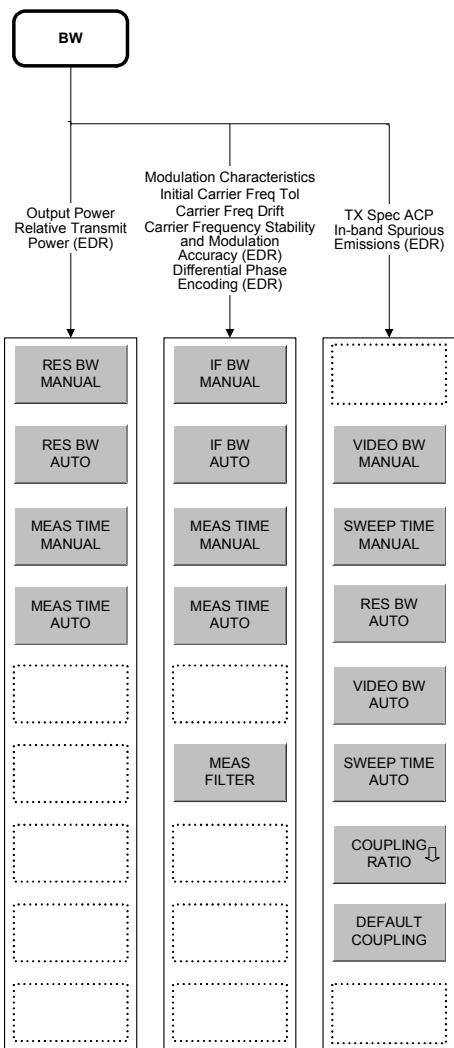

The configuration of the bandwidths is distinguished between 3 groups of measurements:

1. Output Power, Relative Transmit Power (EDR)
Here only the setting of the resolution bandwidth (*RES BW*) and measurement time (*MEAS TIME*) is possible.
2. Modulation Characteristics, Initial Carrier Frequency Tolerance, Carrier Frequency Drift, Carrier Frequency Stability and Modulation Accuracy (EDR), Differential Phase Encoding (EDR):
In addition to the IF bandwidth (*IF BW*, *is equal to the resolution bandwidth of the analyzer*) and measurement time a measurement filter (*MEAS FILTER*) can be switched on or off.
Please note that the settings selected here affect all of the above measurements.
3. TX Spectrum ACP, In-band Spurious Emissions (EDR):
The video bandwidth (*VIDEO BW*) and the corresponding couplings can be selected. Resolution bandwidth and filter type cannot be modified with this measurement function.

The following statement is equally valid for all groups of measurement functions:

The softkeys *RES BW AUTO* or *IF BW AUTO* select the bandwidths according to the values defined in the RF Test Specification.

Value range and default settings of measurement time / sweep time are described in chapter "Hardkey: MEAS" together with the corresponding softkeys *MEAS TIME* / *SWEEP TIME*.

The function of the softkeys *VIDEO BW MANUAL* / *AUTO*, *COUPLING RATIO* and *DEFAULT COUPLING* is identical to the basic instrument. Please refer to the corresponding chapters of the basic instrument operating manual.

Please note that the corresponding GPIB commands are placed in the CONF:BTO subsystem.

MEAS FILTER

The softkey *MEAS FILTER* activates a filter that limits the bandwidth for the modulation measurements.

The filter is flat within 1.04 MHz (ripple: only 0.02 dB) and has steep slopes outside this area. The filter has the following characteristics:

- Passband Ripple up to ± 550 kHz < 0.5 dB (peak to peak)
- Minimum attenuation in the transition band
 ± 650 kHz: ≥ 3 dB
 ± 1 MHz: ≥ 14 dB
 ± 2 MHz: ≥ 44 dB

The default filter setting is OFF.

Remote: SENS:DDEM:FILT:MEAS OFF | BTO


Starting Measurements - Hardkey ***SWEET***

In the **BLUETOOTH** operating mode the hardkey ***SWEET*** is used for direct entry into the measurement menu of the currently selected measurement.. The "deviation" via the key sequence ***MEAS + submenu selection*** is not necessary in this case.

The functions of the individual softkeys are described in the corresponding chapter of the submenu of hardkey ***MEAS***.

Please note that the corresponding GPIB commands are placed in the CONF:BTO subsystem.

Trigger Settings - Hardkey ***TRIG***

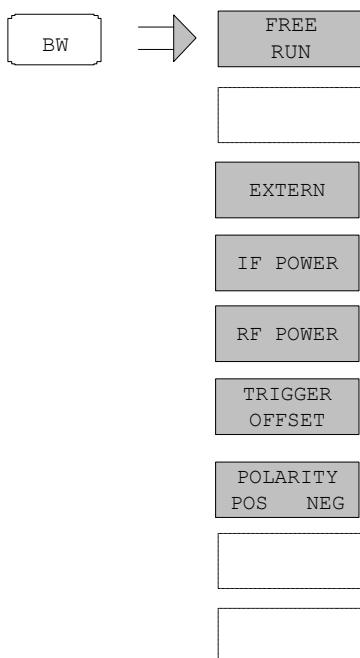

The hardkey ***TRIG*** opens a menu to set up the various trigger sources and to select the polarity of the trigger signal. The active trigger mode is signaled by coloring the corresponding softkey.

A trigger mode different from ***FREE RUN*** is indicated on the screen by the enhancement label ***TRG***.

The softkey ***RF POWER*** is only available with the R&S FSP with Option R&S FSP-B6 (TV- and RF-Trigger).

FREE RUN

The softkey ***FREE RUN*** activates a continuous measurement sequence, which means that there is no explicit trigger of the measurement start. At the end of one measurement the next one is started immediately.

FREE RUN is the default setting.

Remote: **TRIG:SOUR IMM**

EXTERN

The ***EXTERN*** softkey activates triggering via a TTL signal at the input connector ***EXT TRIGGER/GATE*** on the rear panel.

Remote: **TRIG:SOUR EXT**

IF POWER

The ***IF POWER*** softkey activates triggering of the measurement via signals which are outside the measurement channel.

For this purpose, the R&S FSP uses a level detector at the second intermediate frequency. The trigger level can be selected in a range between –30 dBm and -10 dBm at the input mixer.

The R&S FSU also uses a level detector at the second intermediate frequency. The trigger level in this case can be selected in a range between –50 dBm and -10 dBm at the input mixer.

The resulting trigger level at the RF input is calculated via the following formula:

$$\text{Mixerlevel}_{\min} + \text{RFAtt} - \text{PreampGain} \leq \text{Input Signal} \leq \text{Mixerlevel}_{\max} + \text{RFAtt} - \text{PreampGain}$$

The bandwidth at the intermediate frequency is 10 MHz for the FSP and 50 MHz for the FSU. The analyzer is triggered as soon as the trigger threshold is exceeded within a 5 MHz range (FSU: 25 MHz range) around the selected frequency (= start frequency in the frequency sweep).. Thus, the measurement of spurious emissions, eg for pulsed carriers, is possible even when the carrier lies outside the selected frequency span.

Remote: TRIG:SOUR IFP

RF POWER

The *RF POWER* softkey activates triggering of the measurement via signals which are outside the measurement channel.

For this purpose, the analyzer uses a level detector at the second intermediate frequency. The trigger level can be selected in a range between –50 dBm and -10 dBm at the input mixer.

The resulting trigger level at the RF input is calculated via the following formula:

$$\text{Mixerlevel}_{\min} + \text{RFAtt} - \text{PreampGain} \leq \text{Input Signal} \leq \text{Mixerlevel}_{\max} + \text{RFAtt} - \text{PreampGain}$$

The bandwidth at the intermediate frequency is 80 MHz. The analyzer is triggered as soon as the trigger threshold is exceeded within a 40 MHz range around the selected frequency (= start frequency in the frequency sweep).. Thus, the measurement of spurious emissions, eg for pulsed carriers, is possible even when the carrier lies outside the selected frequency span.

Note: This function is only available with the R&S FSP and only with option TV- und RF-Trigger R&S FSP-B6.

Remote: TRIG:SOUR RFP

TRIGGER OFFSET

The *TRIGGER OFFSET* softkey activates the window for entering the time offset between the trigger signal and the start of the sweep.

Triggering is delayed by the entered time with respect to the trigger signal (time entered > 0) or is started earlier (time entered < 0).

The default setting is 0 s.

Remote: TRIG:HOLD 10US

POLARITY POS NEG

The *POLARITY POS/NEG* softkey selects the polarity of the trigger source. The sweep starts after a positive or negative edge of the trigger signal. The selected setting is highlighted.


The selection is valid for all trigger modes with the exception of *FREE RUN*; in the gate mode, it also applies to the gate polarity.

The default setting is *POLARITY POS*.

Note: This function is only available with detector boards with model index ≥ 3 . With older boards the setting will be ignored.

Remote: TRIG:SLOP POS

Measurement Display - Hardkey MKR

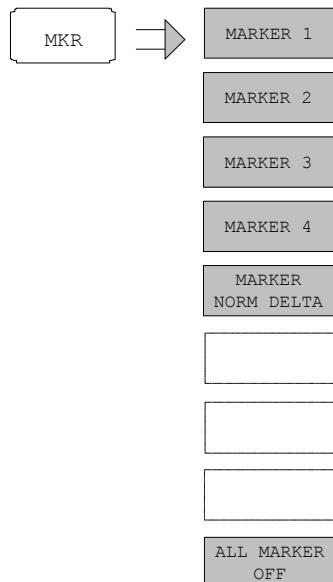

The functions of menu *MKR* are identical to the basic instrument.

The only difference is that the display of the measurement result is coupled to the active result display.


For the measurements

- Output Power
 - Relative Transmit Power (EDR)
 - TX Spectrum ACP
 - In-band Spurious Emission (EDR)
- the result is displayed in dBm or dB.

For the measurements

- Modulation Characteristics
 - Initial Carrier Frequency Tolerance
 - Carrier Frequency Drift
- the result is displayed in Hz.

Marker Search Functions - Hardkey MKR ⇒

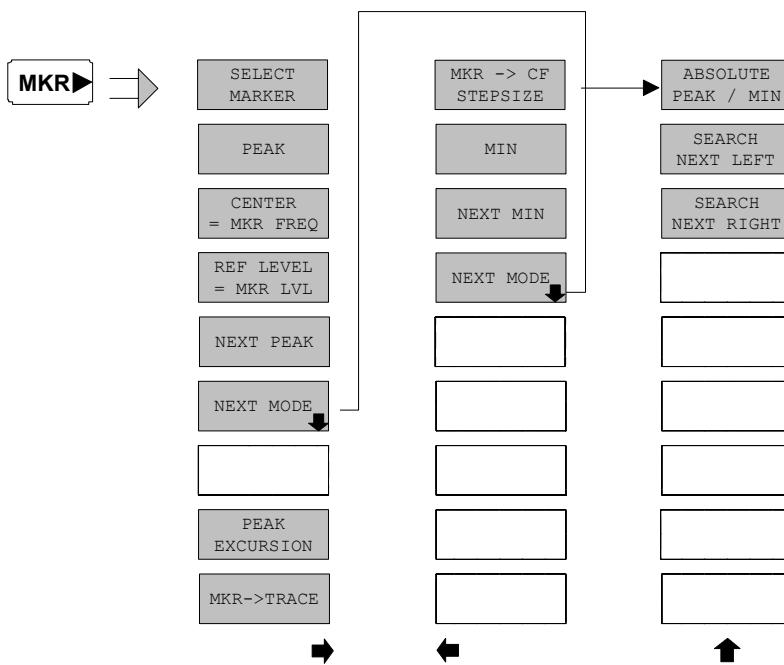


The functions of menu *MKR ⇒* are identical to those of the basic instrument.
The functions

- CENTER = MKR FREQ
- REF LEVEL = MKR LVL

are only available in the power measurements.

Marker Functions - Hardkey *MKR FCTN*

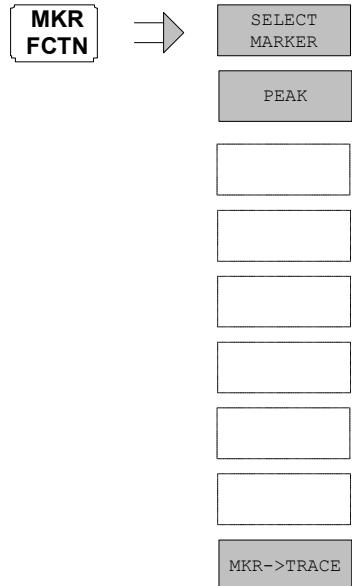

The available functions of menu *MKR FCTN* are identical to those of the basic instrument.

Other Hardkeys

The functions of the other hardkeys are identical to those of the basic instrument. Please refer to the corresponding chapters of the basic instrument operating manual.

Please note that some of the corresponding GPIB commands are placed in the CONF:BTO subsystem.

4 Remote Control - Description of commands

The following sections are to complete and update Chapters 5 and 6 of the R&S FSP / R&S FSU manual.

The "Description of commands" section includes the new commands valid especially for the R&S FS-K8 application, as well as modified commands of the basic instrument, as far as they are used by the R&S FS-K8 option. Commands which are used equally in basic instrument and option K8 are marked accordingly in the operating manual of the basic instrument.

In the description of measurements in Chapter 3, the corresponding IEC/IEEE-bus commands are stated for each softkey.

Note: *Measurements for operating mode BLUETOOTH are always performed in screen A. Therefore all commands which use the numeric suffix for selection of the screen must be supplied with either the numeric suffix 1 (eg CALCulate1) or without numeric suffix (eg CALCulate).*

Overview of the Status Registers

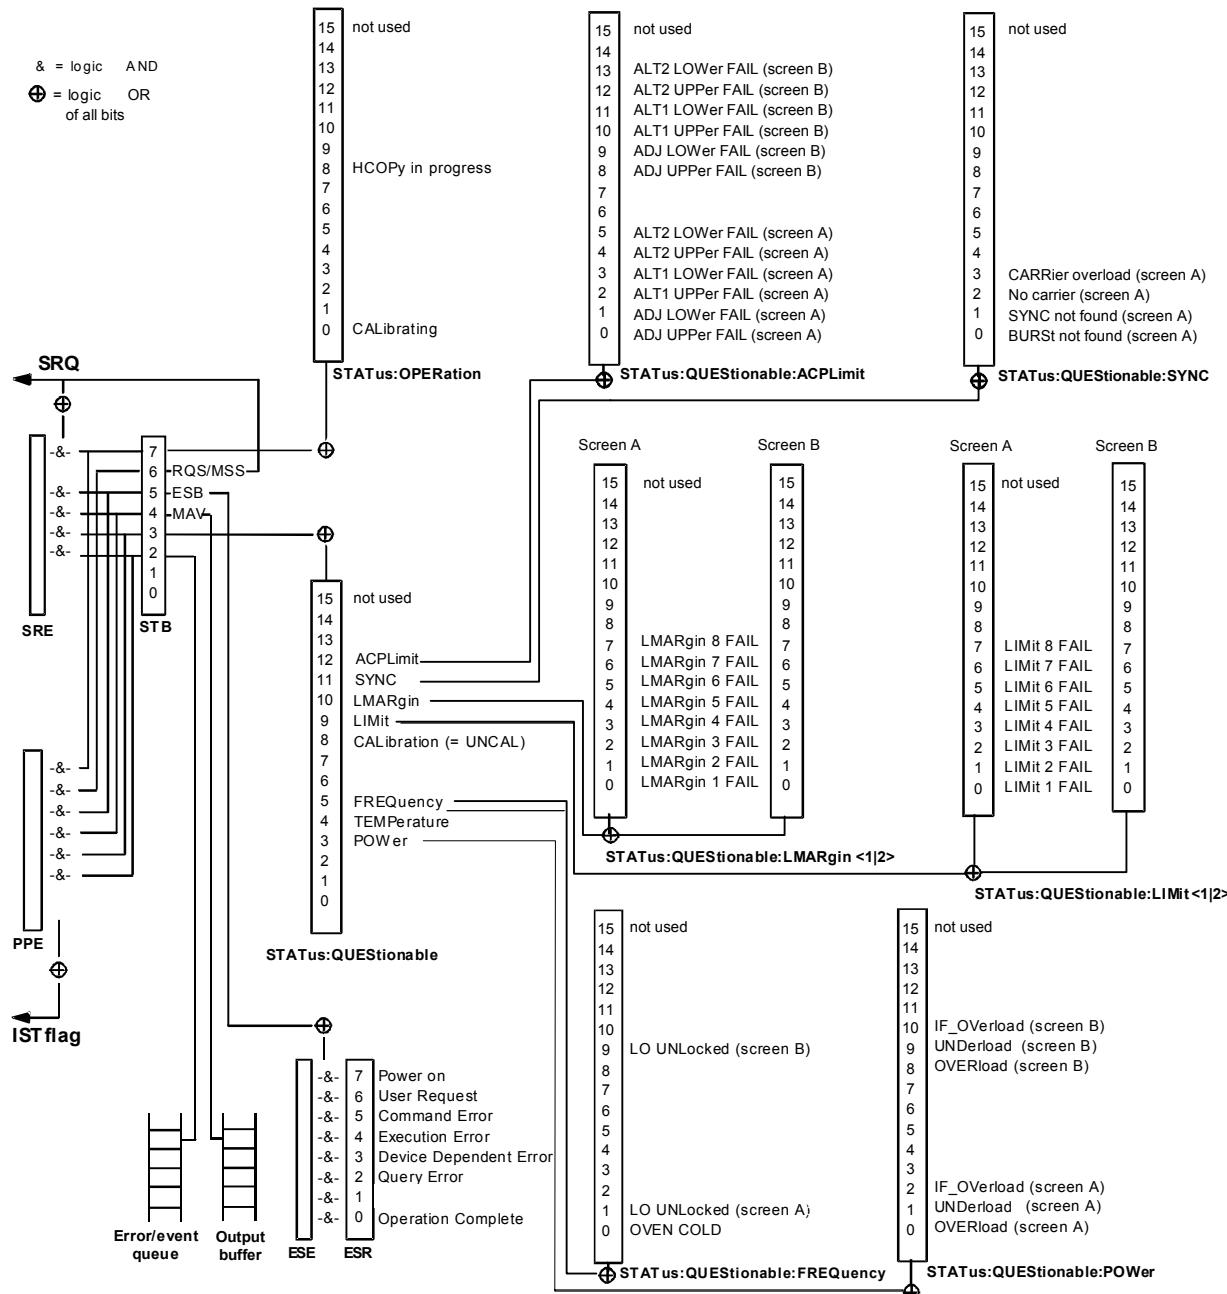


Fig. 4-1 Overview of the status registers

STATus-QUESTIONable:SYNC Register

This register contains information about sync and bursts not found, and about premeasurement results exceeding or falling short of expected values.

The bits can be queried with commands "STATus:QUESTIONable:SYNC:CONDITION?" and "STATus:QUESTIONable:SYNC[:EVENT]?".

| Bit No. | Meaning |
|---------|---|
| 0 | BURSt not found (screen A) This bit is set if no burst is found in the measurements/premeasurements. If a burst is found in these measurements/premeasurements, the bit is reset. |
| 1 | SYNC not found (screen A) This bit is set if the synchronization sequence (training sequence) is not found in the measurements/premeasurements. If the synchronization sequence (training sequence) is found in these measurements/premeasurements, the bit is reset. |
| 2 to 15 | see basic instrument operating manual |

Common commands

| COMMAND | PARAMETERS | COMMENT |
|---------|------------|--|
| *OPT? | | Option Identification Query; query only |

***OPT?**

OPTION IDENTIFICATION QUERY queries the options included in the instrument and returns a list of the options installed. The options are separated from each other by comma. The signature for option R&S FS-K8 is placed at position 33 in the response string:

Example:

0,K8,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0

Calculate – Subsystem

CALCulate:BTooth – Subsystem

The following commands are used to configure the operating mode BLUETOOTH analyzer (Option R&S FS-K8).

| COMMAND | PARAMETERS | UNIT | COMMENT |
|----------------|------------|------|------------|
| CALCulate | | | |
| :BTOTH | | | |
| :ACLR | | | query only |
| :EXCeptions? | | | query only |
| [::LIST]? | | | |
| :CFDRift | | | query only |
| [::MAXimum]? | | | query only |
| :RATE? | | | query only |
| :CFStability | | | query only |
| :COUNT? | | | query only |
| :DEVM | | | query only |
| :DPCT? | | | query only |
| [::RMS]? | | | query only |
| :PEAK? | | | query only |
| :FERRor | | | |
| :BLOCK? | | | query only |
| :INITial? | | | query only |
| [::TOTal]? | | | query only |
| :DPENcoding: | | | |
| :BER? | | | query only |
| :NERRor? | | | query only |
| [::TOTal]? | | | query only |
| :IBSemissions | | | |
| :EXCeptions? | | | query only |
| :HADJacent? | | | query only |
| [::List]? | | | query only |
| :TXReference? | | | query only |
| :ICFTolerance? | | | query only |
| :MChar | | | |
| :DF<1 2> | | | |
| :AVERage? | | | query only |
| :MAXimum? | | | query only |
| :PERCent? | | | query only |
| :RATio? | | | query only |
| :OPOWER | | | |
| :AVERage? | | | query only |
| [::PEAK]? | | | query only |
| :PLENgth? | | | query only |
| :PTYPe? | | | query only |
| :RTPower | | | |
| [::DPSK]? | | | query only |
| :GFSK? | | | query only |
| :RATio? | | | query only |
| :STATus? | | | query only |

CALCulate:BTOoth:ACLR:EXCEPTIONS?

This command determines the number of exceptions which occurred during the adjacent channel power measurement according to the Bluetooth specification.

Note: *This command is only available with active Adjacent Channel Power measurement (command CONF:BTO:MEAS ACLR). With all other measurements this command will lead to a query error.*

Example:

| | |
|----------------------|--|
| "INST:SEL BTO" | 'activate the Bluetooth option |
| "INIT:CONT OFF" | 'select single sweep operation |
| "CONF:BTO:MEAS ACLR" | 'activate the Adjacent Channel Power measurement |
| "INIT;*WAI" | 'start the measurement with synchronisation |
| "CALC:BTO:ACLR?" | 'Pegelliste abfragen |
| "CALC:BTO:ACLR:EXC?" | 'query the number of exceptions |

Characteristics: *RST value: -
SCPI: device specific

CALCulate:BTOoth:ACLR[:LIST]?

This command determines the power of the selected adjacent channels. The number of adjacent channel pairs is defined with command CONF:BTO:ACLR:ACP.

The results are returned as a list of power values. The structure of the list is as follows:

<TX channel – n>...<TX channel – 1> <TX channel> <TX channel + 1>...<TX channel + n>

The number of adjacent channels is limited at the Bluetooth band limits.

Note: *This command is only available with active Adjacent Channel Power measurement (command CONF:BTO:MEAS ACLR). With all other measurements this command will lead to a query error.*

Example:

| | |
|----------------------|--|
| "INST:SEL BTO" | 'activate the Bluetooth option |
| "INIT:CONT OFF" | 'select single sweep operation |
| "CONF:BTO:MEAS ACLR" | 'activate the Adjacent Channel Power measurement |
| "INIT;*WAI" | 'start the measurement with synchronisation |
| "CALC:BTO:ACLR?" | 'query the power list |

Characteristics: *RST value: -
SCPI: device specific

CALCulate:BTOoth:CFDRift[:MAXimum]?

This command determines the maximum Carrier Frequency Drift.

Note: *This command is only available with active Carrier Frequency Drift measurement (command CONF:BTO:MEAS CFDR). With all other measurements this command will lead to a query error.*

| | | |
|-----------------|--|--|
| Example: | "INST:SEL BTO" "INIT:CONT OFF" "CONF:BTO:CHAN 10" "CONF:BTO:GEOG EUR" "CONF:BTO:PCL 1" "CONF:BTO:PRAT 4" "CONF:BTO:PTYP DH1" "DDEM:SEAR:PULS ON" "DDEM:SEAR:SYNC ON" "DDEM:SEAR:SYNC:OFFS 0" "DDEM:SEAR:SYNC:LAP #H0" "DDEM:SEAR:TIME:AUTO ON" "CONF:BTO:MEAS CFDR" "INIT;*WAI" "CALC:BTO:CFDR?" | 'activate the Bluetooth option 'select single sweep operation 'select channel 10 'select geographical region Europe 'select power class 1 'select 4 points per symbol 'select 1 slot packet 'activate the FIND BURST function 'activate the FIND SYNC function 'set the sync offset = 0 'set the lower address part = 0 'select automatic search length 'activate the CFDR measurement 'start the measurement with synchronisation 'query the result |
|-----------------|--|--|

Characteristics: *RST value: -
SCPI: device specific

CALCulate:BTOoth:CFDRift:RATE?

This command determines the maximum Carrier Frequency Drift per 50 µs.

Note: *This command is only available with active Carrier Frequency Drift measurement (command CONF:BTO:MEAS CFDR). With all other measurements this command will lead to a query error.*

| | | |
|-----------------|---|--|
| Example: | "INST:SEL BTO" "INIT:CONT OFF" "CONF:BTO:CHAN 10" "CONF:BTO:GEOG EUR" "CONF:BTO:PCL 1" "CONF:BTO:PRAT 4" "CONF:BTO:PTYP DH1" "DDEM:SEAR:PULS ON" "DDEM:SEAR:SYNC ON" "DDEM:SEAR:SYNC:OFFS 0" "DDEM:SEAR:SYNC:LAP #H0" "DDEM:SEAR:TIME:AUTO ON" "CONF:BTO:MEAS CFDR" "INIT;*WAI" "CALC:BTO:CFDR:RATE?" | 'activate the Bluetooth option 'select single sweep operation 'select channel 10 'select geographical region Europe 'select power class 1 'select 4 points per symbol 'select 1 slot packet 'activate the FIND BURST function 'activate the FIND SYNC function 'set the sync offset = 0 'set the lower address part = 0 'select automatic search length 'activate the CFDR measurement 'start the measurement with synchronisation 'query the result |
|-----------------|---|--|

Characteristics: *RST value: -
SCPI: device specific

CALCulate<1|2>:BTOoth:CFSTability:DEVM:DPCT?

This command reads 99% of the differential error vector magnitude (DEVM) in the Carrier Frequency Stability and Modulation Accuracy measurement.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Carrier Frequency Stability and Modulation Accuracy measurement. With all other measurements this command will lead to a query error.*

Example: CONF:BTO:MEAS CFST Activates the Carrier Frequency Stability and Modulation Accuracy measurement.
 INIT;*WAI Starts the measurement with synchronization.
 CALC:BTO:CFST:DEVM:DPCT? Reads 99% of the differential error vector magnitude.

Characteristics: RST value: –

SCPI: device-specific

CALCulate<1|2>:BTOoth:CFSTability:DEVM:PEAK?

This command reads the peak of the differential error vector magnitude (DEVM) in the Carrier Frequency Stability and Modulation Accuracy measurement.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Carrier Frequency Stability and Modulation Accuracy measurement. With all other measurements this command will lead to a query error.*

Example: CONF:BTO:MEAS CFST Activates the Carrier Frequency Stability and Modulation Accuracy measurement.
 INIT;*WAI Starts the measurement with synchronization.
 CALC:BTO:CFST:DEVM:PEAK? Reads the peak of the differential error vector magnitude.

Characteristics: RST value: –

SCPI: device-specific

CALCulate<1|2>:BTOoth:CFSTability:DEVM[:RMS]? MINimum | MAXimum | AVERage

This command reads the root mean square (RMS) of the differential error vector magnitude (DEVM) in the Carrier Frequency Stability and Modulation Accuracy measurement.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Carrier Frequency Stability and Modulation Accuracy measurement. With all other measurements this command will lead to a query error.*

Example: CONF:BTO:MEAS CFST Activates the Carrier Frequency Stability and Modulation Accuracy measurement.
 INIT;*WAI Starts the measurement with synchronization.
 CALC:BTO:CFST:DEVM? AVER Reads the root mean square of the average differential error vector magnitude.

Characteristics: RST value: –

SCPI: device-specific

CALCulate<1|2>:BTOoth:CFSTability:FERRor:BLOCk? MINimum | MAXimum | AVERage

This command reads the maximum frequency deviation of all blocks in the Carrier Frequency Stability and Modulation Accuracy measurement.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Carrier Frequency Stability and Modulation Accuracy measurement. With all other measurements this command will lead to a query error.*

Example:

| | |
|-------------------------------|--|
| CONF:BTO:MEAS CFST | Activates the Carrier Frequency Stability and Modulation Accuracy measurement. |
| INIT;*WAI | Starts the measurement with synchronization. |
| CALC:BTO:CFST:FERR:BLOC? AVER | Reads the maximum average frequency deviation of all blocks. |

Characteristics: RST value: –
SCPI: device-specific

CALCulate<1|2>:BTOoth:CFSTability:FERRor:INITial? MINimum | MAXimum | AVERage

This command reads the combined frequency deviation of all packets and all blocks in the Carrier Frequency Stability and Modulation Accuracy measurement.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Carrier Frequency Stability and Modulation Accuracy measurement. With all other measurements this command will lead to a query error.*

Example:

| | |
|------------------------------|--|
| CONF:BTO:MEAS CFST | Activates the Carrier Frequency Stability and Modulation Accuracy measurement. |
| INIT;*WAI | Starts the measurement with synchronization. |
| CALC:BTO:CFST:FERR:INIT? MAX | Reads the combined maximum frequency deviation of all packets and all blocks. |

Characteristics: RST value: –
SCPI: device-specific

CALCulate<1|2>:BTOoth:DOPENcoding:BER?

This command reads the bit error rate (BER) in the Differential Phase Encoding measurement.
The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Differential Phase Encoding measurement. With all other measurements this command will lead to a query error.*

Example:

| | |
|--------------------|--|
| CONF:BTO:MEAS DPEN | Activates the Differential Phase Encoding measurement. |
| INIT;*WAI | Starts the measurement with synchronization. |
| CALC:BTO:DPEN:BER? | Reads the bit error rate. |

Characteristics. RST value: –
SCPI: device-specific

CALCulate<1|2>:BTooth:DPENcoding:NERRor?

This command reads the number of passed packets in the Differential Phase Encoding measurement. The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Differential Phase Encoding measurement. With all other measurements this command will lead to a query error.*

Example: CONF:BTO:MEAS DPEN Activates the Differential Phase Encoding measurement.
INIT;*WAI Starts the measurement with synchronization.
CALC:BTO:DPEN:NERR? Reads the number of passed packets.

Characteristics: RST value: –
SCPI: device-specific

CALCulate<1|2>:BTooth:DPENcoding[:TOTal]?

This command reads the number of tested packets in the Differential Phase Encoding measurement. The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Differential Phase Encoding measurement. With all other measurements this command will lead to a query error.*

Example: CONF:BTO:MEAS DPEN Activates the Differential Phase Encoding measurement.
INIT;*WAI Starts the measurement with synchronization.
CALC:BTO:DPEN? Reads the number of tested packets.

Characteristics: RST value: –
SCPI: device-specific

CALCulate<1|2>:BTooth:CFSTability:FERRor[:TOTal]? MINimum | MAXimum | AVERage

This command reads the carrier frequency deviation of all packets in the Carrier Frequency Stability and Modulation Accuracy measurement. The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Carrier Frequency Stability and Modulation Accuracy measurement. With all other measurements this command will lead to a query error.*

Example: CONF:BTO:MEAS CFST Activates the Carrier Frequency Stability and Modulation Accuracy measurement.
INIT;*WAI Starts the measurement with synchronization.
CALC:BTO:CFST:FERR? MIN Reads the minimum carrier frequency deviation of all packets.

Characteristics: RST value: –
SCPI: device-specific

CALCulate<1|2>:BTooth:IBSmissions:EXCEPTIONs?

This command reads the number of results that exceeded the specified limits in the In-band Spurious Emissions measurement.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active In-band Spurious Emissions measurement. With all other measurements this command will lead to a query error.*

Example: CONF:BTO:MEAS IBS Activates the In-band Spurious Emissions measurement.
CONF:BTO:CHAN 7 Adjust the TX channel number.
INIT;*WAI Starts the measurement with synchronization.
CALC:BTO:IBS:EXC? Reads the number of results that exceeded the specified limits.

Characteristics: RST value: –
SCPI: device-specific

CALCulate<1|2>:BTooth:IBSemissions:HADJacent? UPPer | LOWER

This command reads the maximum power of the upper or lower frequency band (500 kHz) of the TX channel in the In-band Spurious Emissions measurement.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active In-band Spurious Emissions measurement. With all other measurements this command will lead to a query error.*

| | | |
|-----------------|------------------------|---|
| Example: | CONF:BTO:MEAS IBS | Activates the In-band Spurious Emissions measurement. |
| | CONF:BTO:CHAN 7 | Adjust the TX channel number. |
| | INIT;*WAI | Starts the measurement with synchronization. |
| | CALC:BTO:IBS:HADJ? LOW | Reads the maximum power of the lower frequency band. |

| | | |
|-------------------------|------------|-----------------|
| Characteristics: | RST value: | – |
| | SCPI: | device-specific |

CALCulate<1|2>:BTooth:IBSemissions[:List]?

This command reads the power of all adjacent channels in the In-band Spurious Emissions measurement.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active In-band Spurious Emissions measurement. With all other measurements this command will lead to a query error.*

| | | |
|-----------------|-------------------|--|
| Example: | CONF:BTO:MEAS IBS | Activates the In-band Spurious Emissions measurement. |
| | CONF:BTO:CHAN 7 | Adjust the TX channel number. |
| | INIT;*WAI | Starts the measurement with synchronization. |
| | CALC:BTO:IBS? | Reads the results of the In-band Spurious Emissions measurement. |

| | | |
|-------------------------|------------|-----------------|
| Characteristics: | RST value: | – |
| | SCPI: | device-specific |

CALCulate<1|2>:BTooth:IBSemissions:TXReference?

This command reads the TX channel reference power.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active In-band Spurious Emissions measurement. With all other measurements this command will lead to a query error.*

| | | |
|-----------------|-------------------|---|
| Example: | CONF:BTO:MEAS IBS | Activates the In-band Spurious Emissions measurement. |
| | CONF:BTO:CHAN 7 | Adjust the TX channel number. |
| | INIT;*WAI | Starts the measurement with synchronization. |
| | CALC:BTO:IBS:TXR? | Reads the TX channel reference power. |

| | | |
|-------------------------|------------|-----------------|
| Characteristics: | RST value: | – |
| | SCPI: | device-specific |

CALCulate:BTOoth:ICFTolerance? MINimum | MAXimum | AVERage

This command determines the Initial Carrier Frequency Tolerance.

With a sweep count value of ≥ 1 (**CONF:BTO:SWE:COUN**) and trace mode clear/write (**DISP:WIND:TRAC:MODE WRIT**) several measurements will be performed with one single command (**INIT:IMM** oder **INIT:CONM**). In this case all the measurements will be taken into account for calculation of the minimum / maximum / average value.

Minimum, maximum and average value will be equal if only one measurement was executed.

Note: *The commands are only available with active Modulation Characteristics measurement (command **CONF:BTO:MEAS MCH**). With all other measurements this command will lead to a query error.*

| | | |
|-----------------|---|--|
| Example: | "INST:SEL BTO" "INIT:CONT OFF" "CONF:BTO:CHAN 10" "CONF:BTO:GEOG EUR" "CONF:BTO:PCL 1" "CONF:BTO:PRAT 4" "CONF:BTO:PTYP DH1" "DDEM:SEAR:PULS ON" "DDEM:SEAR:SYNC ON" "DDEM:SEAR:SYNC:OFFS 0" "DDEM:SEAR:SYNC:LAP #H0" "DDEM:SEAR:TIME:AUTO ON" "CONF:BTO:MEAS ICFT" "CONF:BTO:SWE:COUN 20" "INIT;*WAI" "CALC:BTO:ICFT? MIN" "CALC:BTO:ICFT? MAX" "CALC:BTO:ICFT? AVER" | 'activate the Bluetooth option 'select single sweep operation 'select channel 10 'select geographical region Europe 'select power class 1 'select 4 points per symbol 'select 1 slot packet 'activate the FIND BURST function 'activate the FIND SYNC function 'set the sync offset = 0 'set the lower address part = 0 'select automatic search length 'activate the ICFT Measurement 'init the sweep counter with 20 'start the measurement with synchronisation 'query the minimum value 'query the maximum value 'query the average value |
|-----------------|---|--|

Characteristics: *RST value: -
SCPI: device specific

CALCulate:BTOoth:MChar:DF<1|2>:AVERage? MINimum | MAXimum

This command determines the average frequency deviation for varying bit patterns of the payload.
The assignment of command to frequency deviation and bit pattern is as follows:

| | | |
|---------------------|----------------------------|----------------------------|
| Frequency deviation | $\Delta f_{1\text{ avg}}$ | $\Delta f_{2\text{ avg}}$ |
| Bit pattern | "11110000" | "10101010" |
| Minimum value | CALC:BTO:MCH:DF1:AVER? MIN | CALC:BTO:MCH:DF2:AVER? MIN |
| Maximum value | CALC:BTO:MCH:DF1:AVER? MAX | CALC:BTO:MCH:DF2:AVER? MAX |

The command INIT:IMM starts a new measurement and erases the previous results. Further measurements can be performed using the command INIT:CONM, which allows calculation of minimum and maximum values over several measurements. Minimum and maximum value will be equal if only one measurement was executed.

With a sweep count value of ≥ 1 (CONF:BTO:SWE:COUN) and trace mode clear/write (DISP:WIND:TRAC:MODE WRIT) several measurements will be performed with one single command (INIT:IMM oder INIT:CONM). In this case all the measurements will be taken into account for calculation of the minimum / maximum value.

Note: *The commands are only available with active Modulation Characteristics measurement (command CONF:BTO:MEAS MCH). With all other measurements this command will lead to a query error.*

| | | |
|-----------------|--|--|
| Example: | <pre> "INST:SEL BTO" "INIT:CONT OFF" "CONF:BTO:CHAN 10" "CONF:BTO:GEOG EUR" "CONF:BTO:PCL 1" "CONF:BTO:PRAT 4" "CONF:BTO:PTYP DH1" "DDEM:SEAR:PULS ON" "DDEM:SEAR:SYNC ON" "DDEM:SEAR:SYNC:OFFS 0" "DDEM:SEAR:SYNC:LAP #H0" "DDEM:SEAR:TIME:AUTO ON" "CONF:BTO:MEAS MCH" "CONF:BTO:SWE:COUN 20" '... EUT emits bit pattern 11110000 "INIT:IMM; *WAI" "CALC:BTO:MCH:DF1:AVER? MIN" "CALC:BTO:MCH:DF1:AVER? MAX" '... EUT emits bit pattern 10101010 "INIT:CONM; *WAI" "CALC:BTO:MCH:DF2:AVER? MIN" "CALC:BTO:MCH:DF2:AVER? MAX" </pre> | 'activate the Bluetooth option 'select single sweep operation 'select channel 10 'select geographical region Europe 'select power class 1 'select 4 points per symbol 'select 1 slot packet 'activate the FIND BURST function 'activate the FIND SYNC function ;set the sync offset = 0 ;set the lower address part = 0 'select automatic search length 'activate the Modulation Characteristics 'measurement 'init the sweep counter with 20 'start the measurement with synchronisation and erase previous 'measurement results 'query minimum value "11110000" 'query maximum value "11110000" 'start additional measurement with 'synchronisation 'query minimum value "10101010" 'query maximum value "10101010" |
|-----------------|--|--|

Characteristics: *RST value: -
SCPI: device specific

CALCulate:BTOoth:MChar:DF<1|2>:MAXimum? MINimum | MAXimum | AVERage

This command determines the maximum frequency deviation for different bit patterns of the payload. Diese commande ermitteln den maximalen Frequenzhub für unterschiedliche Bitmuster der Nutzlast. The assignment of command to frequency deviation and bit pattern is as follows:

| | | |
|---------------------|----------------------------|----------------------------|
| Frequency deviation | $\Delta f_{1\max}$ | $\Delta f_{2\max}$ |
| Bit pattern | "11110000" | "10101010" |
| Minimum value | CALC:BTO:MCH:DF1:MAX? MIN | CALC:BTO:MCH:DF2:MAX? MIN |
| Maximum value | CALC:BTO:MCH:DF1:MAX? MAX | CALC:BTO:MCH:DF2:MAX? MAX |
| Average value | CALC:BTO:MCH:DF1:MAX? AVER | CALC:BTO:MCH:DF2:MAX? AVER |

The command INIT:IMM starts a new measurement and erases the previous results. Further measurements can be performed using the command INIT:CONM, which allows calculation of minimum and maximum values over several measurements. Minimum, maximum and average value will be equal if only one measurement was executed.

With a sweep count value of ≥ 1 (CONF:BTO:SWE:COUN) and trace mode clear/write (DISP:WIND:TRAC:MODE WRIT) several measurements will be performed with one single command (INIT:IMM oder INIT:CONM). In this case all the measurements will be taken into account for calculation of the minimum / maximum / average value.

Note: *The commands are only available with active Modulation Characteristics measurement (command CONF:BTO:MEAS MCH). With all other measurements this command will lead to a query error.*

| | | |
|-----------------|---|---|
| Example: | <pre> "INST:SEL BTO" "INIT:CONT OFF" "CONF:BTO:CHAN 10" "CONF:BTO:GEOG EUR" "CONF:BTO:PCL 1" "CONF:BTO:PRAT 4" "CONF:BTO:PTYP DH1" "DDEM:SEAR:PULS ON" "DDEM:SEAR:SYNC ON" "DDEM:SEAR:SYNC:OFFS 0" "DDEM:SEAR:SYNC:LAP #H0" "DDEM:SEAR:TIME:AUTO ON" "CONF:BTO:MEAS MCH" "CONF:BTO:SWE:COUN 20" '... EUT emits bit pattern 1111000 "INIT:IMM; *WAI" "CALC:BTO:MCH:DF1:MAX? MIN" "CALC:BTO:MCH:DF1:MAX? MAX" "CALC:BTO:MCH:DF1:MAX? AVER" '... EUT emits bit pattern 10101010 "INIT:CONM; *WAI" "CALC:BTO:MCH:DF2:MAX? MIN" "CALC:BTO:MCH:DF2:MAX? MAX" "CALC:BTO:MCH:DF2:MAX? AVER" </pre> | 'activate the Bluetooth option 'select single sweep operation 'select channel 10 'select geographical region Europe 'select power class 1 'select 4 points per symbol 'select 1 slot packet 'activate the FIND BURST function 'activate the FIND SYNC function 'set the sync offset = 0 'set the lower address part = 0 'select automatic search length 'activate the Modulation Characteristics 'measurement 'init the sweep counter with 20 'start the measurement with synchronisation and erase previous 'measurement results 'query minimum value "11110000" 'query maximum value "11110000" 'query average value "11110000" 'start additional measurement with 'synchronisation query minimum value "10101010" query maximum value "10101010" query average value "10101010" |
|-----------------|---|---|

Characteristics: *RST value: -
SCPI: device specific

CALCulate:BTOoth:MChar:DF2:PERCent?

This command determines the percentage of measurements of the frequency deviation, for which the value of $\Delta f_{2\max}$ is within the allowed range.

Notes: *The numeric suffix 1 (...:DF1:Percent?) is not allowed for this command.*

The command is only available with active Modulation Characteristics measurement (command CONF:BTO:MEAS MCH). With all other measurements this command will lead to a query error.

Example:

| | |
|-------------------------------------|--|
| "INST:SEL BTO" | 'activate the Bluetooth option |
| "INIT:CONT OFF" | 'select single sweep operation |
| "CONF:BTO:CHAN 10" | 'select channel 10 |
| "CONF:BTO:GEOG EUR" | 'select geographical region Europe |
| "CONF:BTO:PCL 1" | 'select power class 1 |
| "CONF:BTO:PRAT 4" | 'select 4 points per symbol |
| "CONF:BTO:PTYP DH1" | 'select 1 slot packet |
| "DDEM:SEAR:PULS ON" | 'activate the FIND BURST function |
| "DDEM:SEAR:SYNC ON" | 'activate the FIND SYNC function |
| "DDEM:SEAR:SYNC:OFFS 0" | 'set the sync offset = 0 |
| "DDEM:SEAR:SYNC:LAP #H0" | 'set the lower address part = 0 |
| "DDEM:SEAR:TIME:AUTO ON" | 'select automatic search length |
| "CONF:BTO:MEAS MCH" | 'activate the Modulation Characteristics measurement |
| "CONF:BTO:SWE:COUN 20" | 'init the sweep counter with 20 |
| '... EUT emits bit pattern 10101010 | |
| "INIT;*WAI" | 'start the measurement with synchronisation |
| "CALC:BTO:MCH:DF2:PERC?" | 'query the percentage of "in range" |
| | 'measurements |

Characteristics:

| | |
|-------------|-----------------|
| *RST value: | - |
| SCPI: | device specific |

CALCulate:BTOoth:MChar:RATio? MINimum | MAXimum | AVERage

This command determines the ratio of the average frequency deviations for varying bit patterns of the payload. The assignment of command to frequency deviation and bit pattern is as follows:

| | |
|---------------------|---|
| Frequency deviation | $\Delta f_{2\text{avg}}/\Delta f_{1\text{avg}}$ |
| Minimum value | CALC:BTO:MCH:RAT? MIN |
| Maximum value | CALC:BTO:MCH:RAT? MAX |
| Average value | CALC:BTO:MCH:RAT? AVER |

The command INIT:IMM starts a new measurement and erases the previous results. Further measurements can be performed using the command INIT:CONN, which allows calculation of minimum and maximum values over several measurements. Minimum, maximum and average value will be equal if only one measurement was executed.

With a sweep count value of ≥ 1 (CONF:BTO:SWE:COUN) and trace mode clear/write (DISP:WIND:TRAC:MODE WRIT) several measurements will be performed with one single command (INIT:IMM oder INIT:CONN). In this case all the measurements will be taken into account for calculation of the minimum / maximum / average value.

Note: *The commands are only available with active Modulation Characteristics measurement (command CONF:BTO:MEAS MCH). With all other measurements this command will lead to a query error.*

| | | |
|-----------------|--|--|
| Example: | "INST:SEL BTO" "INIT:CONT OFF" "CONF:BTO:CHAN 10" "CONF:BTO:GEOG EUR" "CONF:BTO:PCL 1" "CONF:BTO:PRAT 4" "CONF:BTO:PTYP DH1" "DDEM:SEAR:PULS ON" "DDEM:SEAR:SYNC ON" "DDEM:SEAR:SYNC:OFFS 0" "DDEM:SEAR:SYNC:LAP #H0" "DDEM:SEAR:TIME:AUTO ON" "CONF:BTO:MEAS MCH" "CONF:BTO:SWE:COUN 20" '... EUT emits bit pattern 1111000 "INIT:IMM; *WAI" '... EUT emits bit pattern 10101010 "INIT:CONN; *WAI" "CALC:BTO:MCH:RAT? MIN" "CALC:BTO:MCH:RAT? MAX" "CALC:BTO:MCH:RAT? AVER" | 'activate the Bluetooth option 'select single sweep operation 'select channel 10 'select geographical region Europe 'select power class 1 'select 4 points per symbol 'select 1 slot packet 'activate the FIND BURST function 'activate the FIND SYNC function 'set the sync offset = 0 'set the lower address part = 0 'select automatic search length 'activate the Modulation Characteristics 'measurement 'init the sweep counter with 20 'start the measurement with synchronisation and erase previous 'measurement results 'start additional measurement with 'synchronisation 'query the minimum value 'query the maximum value 'query the average value |
|-----------------|--|--|

Characteristics: *RST value: -
SCPI: device specific

CALCulate:BTOoth:OPOWer:AVERage? MINimum | MAXimum

This command reads the average value of the Output Power measurement according to the Bluetooth standard.

With a sweep count value of ≥ 1 (*CONF:BTO:SWE:COUN*) and trace mode clear/write (*DISP:WIND:TRAC:MODE WRIT*) the selected number of measurements is performed when a single sweep is started (*INIT:IMM*). During these measurements the minimum and maximum values are determined.

If only a single measurement is performed, the minimum and maximum value will be identical.

Note: *This command is only available with active Output Power measurement (command CONF:BTO:MEAS OPOW). With all other measurements this command will lead to a query error.*

| | | |
|-----------------|---|--|
| Example: | "INST:SEL BTO" "INIT:CONT OFF" "CONF:BTO:CHAN 10" "CONF:BTO:GEOG EUR" "CONF:BTO:PCL 1" "CONF:BTO:PRAT 4" "CONF:BTO:PTYP DH1" "DDEM:SEAR:PULS ON" "DDEM:SEAR:PULS:OFFS 0s" "DDEM:SEAR:SYNC ON" "DDEM:SEAR:SYNC:OFFS 0" "DDEM:SEAR:SYNC:LAP #H0" "DDEM:SEAR:TIME:AUTO ON" "CONF:BTO:MEAS OPOW" "CONF:BTO:SWE:COUN 20" "INIT;*WAI" "CALC:BTO:OPOW:AVER? MAX" | 'activate the Bluetooth option 'select single sweep operation 'select channel 10 'select geographical region Europe 'select power class 1 'select 4 points per symbol 'select 1 slot packet 'activate the FIND BURST function 'set burst offset = 0 'activate the FIND SYNC function 'set the sync offset = 0 'set the lower address part = 0 'select automatic search length 'activate the Output Power Measurement 'activate measurement over 20 sweeps 'start the measurement with synchronisation 'query the maximum average value of the 'Output Power measurement |
|-----------------|---|--|

| | |
|-------------------------|-----------------|
| Characteristics: | *RST value: - |
| SCPI: | device specific |

CALCulate:BTOoth:OPOWer[:PEAK]?

This command reads the peak value of the Output Power Measurement according to the BLUETOOTH standard.

Note: *This command is only available with active Output Power Measurement (command CONF:BTO:MEAS OPOW). With all other measurements it will lead to a query error.*

| | | |
|-----------------|--|---|
| Example: | "INST:SEL BTO" "INIT:CONT OFF" "CONF:BTO:CHAN 10" "CONF:BTO:GEOG EUR" "CONF:BTO:PCL 1" "CONF:BTO:PRAT 4" "CONF:BTO:PTYP DH1" "DDEM:SEAR:PULS ON" "DDEM:SEAR:PULS:OFFS 0s" "DDEM:SEAR:SYNC ON" "DDEM:SEAR:SYNC:OFFS 0" "DDEM:SEAR:SYNC:LAP #H0" "DDEM:SEAR:TIME:AUTO ON" "CONF:BTO:MEAS OPOW" "INIT;*WAI" "CALC:BTO:OPOW?" | 'activates the Bluetooth option 'select single sweep operation 'select channel 10 'select geographical region Europe 'select power class 1 'select 4 points per symbol 'select 1 slot packet 'activate the FIND BURST function 'set burst offset = 0 'activate the FIND SYNC function 'set the sync offset = 0 'set the lower address part = 0 'select automatic search length 'activate the Output Power Measurement 'start the measurement with synchronisation 'query the output power result |
|-----------------|--|---|

| | |
|-------------------------|-----------------|
| Characteristics: | *RST value: - |
| SCPI: | device specific |

CALCulate:BTOoth:PLENgh?

This command reads the length of the packet analyzed by the preceeding measurement.

Note: *This command is only available, if a measurement was started via INIT:IMMEDIATE before and if this measurement is completed. With a missing or incomplete measurement the command will cause a query error.*

This command is only available with measurement of Output Power ((CONF:BTO:MEAS OPOW), Modulation Characteristics (CONF:BTO:MEAS MCH), Initial Carrier Frequency Tolerance (CONF:BTO:MEAS ICFT) and Carrier Frequency Drift (CONF:BTO:MEAS CFDR)).

Example:

| | |
|----------------------|---|
| "INST:SEL BTO" | 'activate the Bluetooth option |
| "INIT:CONT OFF" | 'select single sweep operation |
| "CONF:BTO:MEAS OPOW" | 'activate the Output Power Measurement |
| "INIT;*WAI" | 'start the measurement with synchronisation |
| "CALC:BTO:PLEN?" | 'query the packet length |

Characteristics: *RST value: -
SCPI: device specific

CALCulate:BTOoth:PTYPe?

This command determines the type of the packet analyzed by a preceeding measurement.

Note: *This command is only available, if a measurement was started via INIT:IMMEDIATE before and if this measurement is completed. With a missing or incomplete measurement the command will cause a query error.*

This command is only available with measurement of Output Power ((CONF:BTO:MEAS OPOW), Modulation Characteristics (CONF:BTO:MEAS MCH), Initial Carrier Frequency Tolerance (CONF:BTO:MEAS ICFT) and Carrier Frequency Drift (CONF:BTO:MEAS CFDR)).

Response: Folgende Pakettypen werden erkannt und als Character Data zurückgegeben:
AUX1, DH1, DH3, DH5, DM1, DM3, DM5, FHS, HV1, HV2, HV3, DV, NULL,
POLL, UNDEF

Example:

| | |
|----------------------|---|
| "INST:SEL BTO" | 'activate the Bluetooth option |
| "INIT:CONT OFF" | 'select single sweep operation |
| "CONF:BTO:MEAS OPOW" | 'activate the Output Power Measurement |
| "INIT;*WAI" | 'start the measurement with synchronisation |
| "CALC:BTO:PTYP??" | 'query the packet type |

Characteristics: *RST value: -
SCPI: device specific

CALCulate<1|2>:BTOoth:RTPower[:DPSK]? MINimum | MAXimum | AVERage

This command reads the average transmission power for the DPSK sections of the packet in the Relative Transmission Power measurement. With a sweep count ≤ 1 , the command returns the current value, irrespective of the parameter.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Relative Transmit Power measurement . With all other measurements this command will lead to a query error.*

Example:

| | |
|-----------------------|---|
| CONF:BTO:MEAS RTP | Activates the Relative Transmit Power measurement. |
| CONF:BTO:SWE:COUN 10 | Initiates the sweep counter with 10. |
| INIT;*WAI | Starts the measurement with synchronization. |
| CALC:BTO:RTPOWER? MIN | Reads the lowest recorded average power of the DPSK section of all packets. |

Characteristics: *RST value: -
SCPI: device specific

CALCulate<1|2>:BTooth:RTPower:GFSK? MINimum | MAXimum | AVERage

This command reads the transmission power for the GFSK sections of the packet in the Relative Transmission Power measurement. With a sweep count ≤ 1 , the command returns the current value, irrespective of the parameter.

The numeric suffixes <1|2> are irrelevant for this command.

Note: *This command is only available with active Relative Transmit Power measurement. With all other measurements this command will lead to a query error.*

Example:

| | |
|------------------------|--|
| CONF:BTO:MEAS RTP | Activates the Relative Transmit Power measurement. |
| CONF:BTO:SWE:COUN 10 | Initiates the sweep counter with 10. |
| INIT;*WAI | Starts the measurement with synchronization. |
| CALC:BTO:RTP:GFSK? MIN | Reads the highest recorded average power of the GFSK section of all packets. |

Characteristics: RST value: –
SCPI: device-specific

CALCulate:BTooth:STATus?

This command queries the status of a preceding measurement.

Results:

| | |
|----|--------|
| 0: | PASS |
| 1: | FAIL.. |

Note: *This command is only available, if a measurement was started via INIT:IMMediate before and if this measurement is completed. With a missing or incomplete measurement the command will cause a query error.*

Example:

| | |
|---------------------|---|
| "INST:SEL BTO" | 'activate the Bluetooth option |
| "INIT:CONT OFF" | 'select single sweep operation |
| "CONF:BTO:MEAS OBW" | 'OBW Measurement aktivieren |
| "INIT;*WAI" | 'start the measurement with synchronisation |
| "CALC:BTO:STAT?" | 'query the status |

Characteristics: *RST value: –
SCPI: device specific

CALCulate:DELTamarker - Subsystem

The CALCulate:DELTamarker subsystem controls the delta-marker functions in the instrument. The measurement windows are selected via CALCulate1 (screen A) or 2 (screen B).

| COMMAND | PARAMETERS | UNIT | COMMENT |
|--|------------|------|------------|
| CALCulate<1 2> :DELTamarker<1...4> :Y? | -- | -- | query only |

CALCulate<1|2>:DELTamarker<1...4>:Y?

This command queries the measured value of the selected delta marker in the indicated measurement window. The corresponding delta marker will be activated, if necessary. The output is always a relative value referred to marker 1 or to the reference position (reference fixed active).

To obtain a valid query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the delta marker and the query of the y-value. This is only possible in single sweep mode.

Depending on the unit defined with CALC:UNIT or on the activated measuring functions, the query result is output in the units below:

- DBM | DBPW | DBUV | DBMV | DBUA: Output unit DB
- WATT | VOLT | AMPere: Output unit W | V | A
- Statistics function (APD or CCDF) on: Dimensionless output

Result Displays:

- FM (R&S FS-K7): Hz
- RF POWER (R&S FS-K7): dB
- SPECTRUM (R&S FS-K7): dB
- OUTPUT POWER: dB
- TX SPECTRUM ACP: dB
- MODULATION CHARACTERISTICS: Hz
- INITIAL CARR FREQ TOL: Hz
- CARRIER FREQ DRIFT: Hz

Example:

| | |
|-----------------|--|
| "INIT:CONT OFF" | 'Switches to single-sweep mode. |
| "CALC:DELT2 ON" | 'Switches on delta marker 2 in screen A. |
| "INIT; *WAI" | 'Starts a sweep and waits for its end. |
| "CALC:DELT2:Y?" | 'Outputs measurement value of delta marker 2 in 'screen A. |

Characteristics: *RST value: -
SCPI: device-specific

CALCulate:MARKer - Subsystem

The CALCulate:MARKer subsystem checks the marker functions in the instrument. The measurement windows are assigned to CALCulate 1 (screen A) or 2 (screen B).

| COMMAND | PARAMETERS | UNIT | COMMENT |
|--|-----------------------|---------------|------------|
| CALCulate<1 2> :MARKer<1...4> :PEXCursion :Y? | <numeric_value> -- | DB Hz -- | query only |

CALCulate<1|2>:MARKer<1...4>:PEXCursion <numeric_value>

This command defines the peak excursion., ie the spacing below a trace maximum which must be attained before a new maximum is recognized, or the spacing above a trace minimum which must be attained before a new minimum is recognized. The set value is valid for all markers and delta markers. The unit depends on the selected operating mode.

- Example:**
- | | |
|-------------------------|---|
| "CALC:MARK:PEXC 10dB" | 'Defines peak excursion 10 dB in 'SPECTRUM mode |
| "CALC:MARK:PEXC 100 Hz" | Defines peak excursion 100 Hz in 'FM DEMOD + BLUETOOTH mode |

Characteristics: *RST value: 6dB
SCPI: device specific

The numeric suffix in MARKer<1 to 4> is irrelevant.

CALCulate<1|2>:MARKer<1...4>:Y?

This command queries the measured value of the selected marker in the selected measurement window. The corresponding marker is activated before or switched to marker mode, if necessary.

To obtain a valid query result, a complete sweep with synchronization to the sweep end must be performed between the activation of the marker and the query of the y value. This is only possible in single sweep mode.

The query result is output in the unit determined with CALCulate:UNIT.

In the default setting, the output is made depending on the unit determined with CALC:UNIT; only with linear level scaling is the output in %.

If the FM Demodulator (R&S FS-K7) is activated, the query result is output in the following units:

- Result display FM: Hz
- Result display RF POWER LOG: dBm
- Result display RF POWER LIN: %
- Result display SPECTRUM LOG: dBm
- Result display SPECTRUM LIN: %

If the BLUETOOTH Demodulator (R&S FS-K8) is activated, the query result is output in the following units:

- OUTPUT POWER: dBm
- TX SPECTRUM ACP: dBm
- MODULATION CHARACTERISTICS: Hz
- INITIAL CARR FREQ TOL: Hz
- CARRIER FREQ DRIFT: Hz

- Example:**
- | | |
|-----------------|--|
| "INIT:CONT OFF" | 'Switches to single-sweep mode. |
| "CALC:MARK2 ON" | 'Switches marker 2 in screen A. |
| "INIT;*WAI" | 'Starts a sweep and waits for the end. |
| "CALC:MARK2:Y?" | 'Outputs the measured value of marker 2 in screen A. |

Characteristics: *RST value: -
SCPI: device specific

CONFigure – Subsystem

CONFigure:BTooth – Subsystem

The following commands are used for configuration of the BLUETOOTH analyzer operating mode .

| COMMAND | PARAMETERS | UNIT | COMMENT |
|--|---|---|---------|
| CONFigure :BTOTH :ACLR :ACPairs :BANDwidth [:RESolution] :AUTO :VIDeo :AUTO :BWIDth [:RESolution] :AUTO :VIDeo :AUTO :CHANnel :DETector<1...3> [:FUNCtion] :GEOGraphy :IBSEmissions :ACPairs :GATE :AUTO :MEASurement :PBSCo :PClass :POWER :AVERage :START :STOP :PRATe :PTYPe :RTPower :DAVerge :START :STOP :GAverage :START :STOP :SWEep :COUNT :TIME :AUTO | <numeric_value> <numeric_value> <Boolean> <numeric_value> <Boolean> <numeric_value> <Boolean> <numeric_value> <Boolean> <numeric_value> APEak NEGative POSitive SAMPlle RMS AVERage EUROpe USA FRANCE <numeric_value> <numeric_value> ONCE OPOWer ACLR MChar ICFTolerance CFDRift RTPower IBSEmissions DPENcoding CFSTability <numeric_value> <numeric_value> <numeric_value> <numeric_value> <numeric_value> DH1 DH3 DH5 AUTO <numeric_value> <numeric_value> <numeric_value> <numeric_value> <numeric_value> <numeric_value> <numeric_value> <numeric_value> | HZ HZ HZ HZ HZ HZ no query -- PCT PCT -- PCT PCT PCT PCT -- S | |

| COMMAND | PARAMETERS | UNIT | COMMENT |
|-----------------------------------|--|------|---------|
| :TRACe<1...3> :MODE :SElect | WRITe VIEW AVERage MAXHold MINHold BLANK | | |

CONFigure:BTOoth:ACLPairs <numeric value>

This command selects the number of adjacent channel pairs during the measurement of the adjacent channel power. The number of adjacent channels will be limited as soon as the border of the Bluetooth frequency band is reached.

Notes: *This command is only available with active Adjacent Channel Power Measurement (command: CONF:BTO:MEAS ACLR).*

Example: "CONF:BTO:ACLR:ACP 10" 'selects 10 adjacent channel pairs

Characteristics: *RST value: 78
SCPI: device specific

CONFigure:BTOoth:BANDwidth|BWIDth[:RESolution] <numeric_value>

This command sets the resolution bandwidth of the analyzer for the currently selected Bluetooth measurement (see command [SENSe]:BAND:RES).

For the measurements of Modulation Characteristics (CONF:BTO:MEAS MCH), Initial Carrier Frequency Tolerance (CONF:BTO:MEAS ICFT) and Carrier Frequency Drift (CONF:BTO:MEAS CFDR) the resolution bandwidth corresponds to the IF bandwidth of the signal.

| | | |
|----------------|---------------|---|
| Setting range: | 300kHz..10MHz | Output Power; Modulation Characteristics, Initial Carrier Frequency Tolerance, Carrier Frequency Drift |
| | 100kHz | TX Output Spectrum Adjacent Channel Power |

A change to the resolution bandwidth will stop its link to the settings of the RF Test Specification.

Note: *The settings for the measurements of Modulation Characteristics (CONF:BTO:MEAS MCH), Initial Carrier Frequency Tolerance (CONF:BTO:MEAS ICFT) and Carrier Frequency Drift (CONF:BTO:MEAS CFDR) is common to all three measurements. For all other Bluetooth measurements the setting is only valid for the currently active measurement (see command CONF:BTO:MEAS). This command is not available with active adjacent channel power measurement (command: CONF:BTO:MEAS ACLR).*

Example: "INST:SEL BTO" 'activates the Bluetooth option
"CONF:BTO:MEAS OBW" 'activates the TX Output Spectrum
"CONF:BTO:BAND 20dB" '20dB Bandwidth measurement
"CONF:BTO:BAND 1KHZ" 'sets the resolution bandwidth to 1kHz

Characteristics: *RST value: - (AUTO is set to ON)
SCPI: device specific

CONFigure:BTOoth:BANDwidth|BWIDth[:RESolution]:AUTO ON | OFF

This command links the resolution bandwidth to the settings according to the RF Test Specification.

Note: *The settings for the measurements of Modulation Characteristics (CONF:BTO:MEAS MCH), Initial Carrier Frequency Tolerance (CONF:BTO:MEAS ICFT) and Carrier Frequency Drift (CONF:BTO:MEAS CFDR) is common to all three measurements. For all other Bluetooth measurements the setting is only valid for the currently active measurement (see command CONF:BTO:MEAS).*

Example:

| | |
|-------------------------|---|
| "INST:SEL BTO" | 'activates the Bluetooth option |
| "CONF:BTO:MEAS OPOW" | 'activates the Output Power measurement |
| "CONF:BTO:BAND:AUTO ON" | 'activates the RBW coupling |

Characteristics:

| | |
|-------------|-----------------|
| *RST value: | ON |
| SCPI: | device specific |

CONFigure:BTOoth:BANDwidth|BWIDth:VIDeo 1 Hz ... 10 MHz

This command sets the video bandwidth for the currently selected Bluetooth measurement. It is only available for the measurement of TX Output Spectrum Adjacent Channel Power (CONF:BTO:MEAS ACLR).

The available filters have a bandwidth range of 1 Hz to 10 MHz. On a change in video bandwidth its link according to the RF Test Specification is switched off.

Note: *This setting is valid only for the currently active measurement (see command CONF:BTO:MEAS) and it is independent of other Bluetooth measurements.*

Example:

| | |
|---------------------------|---|
| "INST:SEL BTO" | 'activates the Bluetooth option |
| "CONF:BTO:MEAS ACLR" | 'activates the Output Power measurement |
| "CONF:BTO:BAND:VID 100HZ" | 'sets the video bandwidth to 100 Hz |

Characteristics:

| | |
|-------------|-----------------------|
| *RST value: | - (AUTO is set to ON) |
| SCPI: | device specific |

CONFigure:BTOoth:BANDwidth|BWIDth:VIDeo:AUTO ON | OFF

This command links the video bandwidth to the settings according to the RF Test Specification. It is only available for the measurement of TX Output Spectrum Adjacent Channel Power (CONF:BTO:MEAS ACLR).

Note: *This setting is only valid for the currently active measurement (see command CONF:BTO:MEAS) and it is independent fo the other Bluetooth measurements.*

Example:

| | |
|-----------------------------|---------------------------------|
| "INST:SEL BTO" | 'activates the Bluetooth option |
| "CONF:BTO:MEAS OPOW" | 'activates the Output Power |
| | 'measurement |
| "CONF:BTO:BAND:VID:AUTO ON" | 'switches the VBW coupling on |

Characteristics:

| | |
|-------------|-----------------|
| *RST value: | ON |
| SCPI: | device specific |

CONFigure:BTOoth:CHANnel 0...78

This command selects the frequency channel for the measurements according to the Bluetooth standard.

Note: *The value range depends on the selected geographical region ([SENSe:]BTOoth:GEOGraphy):*
EUROpe, USA: 0...78
FRANCE: 0...22

Example: "CONF:BTO:CHAN 20" 'select channel 20

Characteristics: *RST value: 0
SCPI: device specific

CONFigure:BTOoth:DETector<1...3> APEak | NEGative | POSitive | SAMPLe | RMS | AVERage

This command selects the detector for the currently selected Bluetooth measurement. The numeric suffix assigns the detector to a trace (1 to 3).

Note: *The RMS detector is not available for the measurements Modulation Characteristics (CONF:BTO:MEAS MCH), Initial Carrier Frequency Tolerance (CONF:BTO:MEAS ICFT) and Carrier Frequency Drift (CONF:BTO:MEAS CFDR). The setting is valid for the currently selected measurement (see command CONF:BTO:MEAS) and independent of other Bluetooth measurements.*

Example: "INST:SEL BTO" 'activates the Bluetooth option
"CONF:BTO:MEAS OPOW" 'activates the Output power measurement
"CONF:BTO:DET2 RMS" 'sets the detector for trace 2 to RMS

Characteristics: *RST value: PEAK Output Power;
AVER TX Output Spectrum Adjacent Channel Power,
APEAK Modulation Characteristics,
Initial Carrier Frequency Tolerance,
Carrier Frequency Drift
SCPI: device specific

CONFigure:BTOoth:GEOGraphy EUROpe | USA | FRANce

This command selects the geographical region for the measurements:

EUROpe: Europe outside France

USA: USA

FRANce: France

The region determines the number of available frequency channels (command: [SENSe:]BTOoth:CHANnel). Additionally the standard for the measurement of spurious emissions will be selected: ETS 300 328 (Europe incl. Frankreich) or FCC Part 15.247,c (USA).

Example: "CONF:BTO:GEOG USA" 'selects region "USA"

Characteristics: *RST value: EUROpe
SCPI: device specific

CONFigure:BTOoth:IBSmissions:ACPairs1 to 78

This command selects the number of adjacent channel pairs during the In-band Spurious Emissions measurement. The number of adjacent channels will be limited as soon as the border of the Bluetooth frequency band is reached.

Note: *This command is only available with active In-band Spurious Emissions measurement*

Example: CONF:BTO:IBS:ACP 20 Selects 20 adjacent channel pairs.

Characteristics *RST value: 78
SCPI: device-specific

CONFigure:BTOoth:IBSmissions:GATE:AUTO ONCE

This command adjusts the gate settings for the In-band Spurious Emissions automatically.

Note: This command is only available with active In-band Spurious Emissions measurement .

Example: CONF:BTO:IBS:GATE:AUTO ONCE 'Adjusts the gate automatically once'.

Characteristics: RST value: ONCE
SCPI: device-specific

CONFigure:BTOoth:MEASurement OPOWer | ACLR | MCharI | CFTolerance | CFDRift | RTPower | IBSmisions | DPENcoding | CFSTability

This command selects the current measurement according to the Bluetooth standard.

| | |
|--------------|---|
| OPOWer | Output Power measurement |
| ACLR | Adjacent Channel Power measurement |
| MChar | Modulation Characteristics measurement |
| ICFTolerance | Initial Carrier Frequency Tolerance measurement |
| CFDRift | Carrier Frequency Drift measurement |
| RTPower | Relative Transmit Power (EDR) measurement |
| IBSmisions | Spurious Emissions (EDR) measurement |
| DPENcoding | Differential Phase Encoding (EDR) measurement |
| CFSTability | Carrier Frequency Stability and Modulation Accuracy (EDR) measurement |

Example: "CONF:BTO:MEAS ACLR" 'selects the measurement of the adjacent 'channel power.'

Characteristics: *RST value: OPOWer
SCPI: device specific

CONFigure:BTOoth:PBSCo 1 to 1000

This command selects the number of payload bytes that are transmitted in a packet.

Example: CONF:BTO:PBSC 50 Selects the number of payload bytes.

Characteristics: RST value: 1
SCPI: device-specific

CONFigure:BTOoth:PClAss 1...3

This command selects the power class for the Output Power measurement. The power class defines the limits for the Output Poer measurement.


Example: "CONF:BTO:PCl 3" 'selects power class 3'

Characteristics: *RST value: 1
SCPI: device specific

CONFigure:BTOoth:POWeR:AVERage:STARt 0...100PCT

This command defines the start position for the calculation of the average power of a burst.

Note: Depending on the setting FIND SYNC ON or OFF (command SENS:DDEM:SEAR:SYNC:STAT ON/ OFF) the burst is either defined by the p0 bit and the packet length or the 3 dB points according to the RF Test Specification. As a result there are different areas within the burst for calculating the average power:

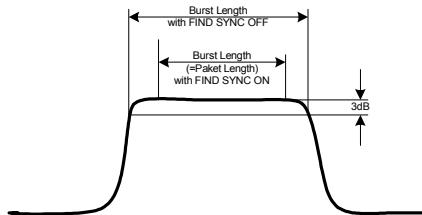

Example: "CONF:BTO:POW:AVER:STAR 10PCT" 'sets the starting point for the calculation 'to 10% of the'burst length

Characteristics: *RST value: 20%
SCPI: device specific

CONFigure:BTOoth:POWeR:AVERage:STOP 0...100PCT

This command defines the end position for the calculation of the average power of a burst.

Note: Depending on the setting FIND SYNC ON or OFF (command SENS:DDEM:SEAR:SYNC:STAT ON/ OFF) the burst is either defined by the p0 bit and the packet length or the 3 dB points according to the RF Test Specification. As a result there are different areas within the burst for calculating the average power (see command SENS:BTO:POW:AVER:STARt).

Example: "CONF:BTO:POW:AVER:STAR 90PCT" 'sets the end point for the 'calculation to 90% of the 'burst length

Characteristics: *RST value: 80%
SCPI: device specific

CONFigure:BTOoth:PRATe 2 | 4 | 8 | 16 | 32

This command selects the number of measurement samples (points) per symbol for the measurement.

Note: The RF Test Specification specifies an oversampling factor of at least 4.

Example: "CONF:BTO:PRAT 16" 'selects 16 points/symbol

Characteristics: *RST value: 4
SCPI: device specific

CONFigure:BTOoth:PTYPe DH1 | DH3 | DH5 | AUTO

This command selects the packet type to be measured:

DH1: 1 slot packet
DH3: 3 slot packet
DH5: 5 slot packet
AUTO: automatic detection of the packet type

Example: CONF:BTO:PTYP DH5 'selects type "5 slot packet"

Characteristics: *RST value: DH1
SCPI: device specific

CONFigure:BTOoth:RTPower:DAverage:STARt 0 to 100%

This command sets the start time for the power measurement of the DFSK sections of the packet.

Note: *This command is only available with active Relative Transmit Power measurement.*

Example: CONF:BTO:RTP:DAV:STAR 20 Sets the start time for the power measurement of the DFSK sections of the packet.

Characteristics: RST value: 10%
SCPI: device-specific

CONFigure:BTOoth:RTPower:DAverage:STOP 0 to 100%

This command sets the stop time for the power measurement of the DFSK sections of the packet.

Note: *This command is only available with active Relative Transmit Power measurement.*

Example: CONF:BTO:RTP:DAV:STOP 80 Sets the stop time for the power measurement of the DFSK sections of the packet.

Characteristics: RST value: 90%
SCPI: device-specific

CONFigure:BTOoth:RTPower:GAVerage:STARt 0 to 100%

This command sets the start time for the power measurement of the GFSK sections of the packet.

Note: *This command is only available with active Relative Transmit Power measurement.*

Example: CONF:BTO:RTP:GAV:STAR 20 Sets the start time for the power measurement of the GFSK sections of the packet.

Characteristics: RST value: 10%
SCPI: device-specific

CONFigure:BTOoth:RTPower:GAVerage:STOP 0 to 100%

This command sets the stop time for the power measurement of the GFSK sections of the packet.

Note: *This command is only available with active Relative Transmit Power measurement.*

Example: CONF:BTO:RTP:GAV:STOP 80 Sets the stop time for the power measurement of the GFSK sections of the packet.

Characteristics: RST value: 90%
SCPI: device-specific

CONFigure:BTOoth:SWEep:COUNt 0...32767

This command defines the number of sweeps for the currently selected Bluetooth measurement. This number will be started as a "single sweep". With trace mode setting clear/write the measurement results will be calculated for each sweep and taken into account for the calculation of minimum, maximum and average values. For the remaining trace settings (AVER, MAXH, MINH) the measurement results will be calculated from the resulting trace. In average mode the value 0 defines the sliding average of the measurement data over 10 sweeps.

Note: *The setting is valid only for the currently active measurement and independent of the other Bluetooth measurements.*

Example:

| | |
|----------------------|---|
| INST:SEL BTO | 'activates the Bluetooth Measurements option. |
| CONF:BTO:MEAS OPOW | 'activates the Output Power measurement. |
| INIT:CONT OFF | 'selects single sweep operation. |
| CONF:BTO:SWE:COUN 20 | 'sets the number of sweeps to 20. |
| INIT;*OPC | 'starts a sweep with synchronization. |

Characteristics:

| | |
|-------------|---|
| *RST value: | 0 Output Power |
| 10 | Adjacent Channel Power Modulation Characteristics Initial Carrier Frequency Tolerance Carrier Frequency Drift EDR Relative TX Power EDR In-band Spurious Emissions |
| 100 | Differential Phase Encoding |

CONFigure:BTOoth:SWEep:TIME <numeric_value>

This command defines the duration of a sweep sequence for the active Bluetooth measurement.

Value range: (1us to 130560us) / (points per symbol)

| |
|---|
| Output Power; |
| Modulation Characteristics, |
| Initial Carrier Frequency Tolerance, |
| Carrier Frequency Drift |
| 10μs... 16000s TX Output Spectrum Adjacent Channel Power |

With direct programming using command SWEep:TIME will stop its link to the settings according to the RF Test Specification.

Note: *This setting is valid for the currently active measurement (see command CONF:BTO:MEAS) and is independent of other Bluetooth measurements.*

Example:

| | |
|--------------------------|--|
| "INST:SEL BTO" | 'activates the Bluetooth option |
| "CONF:BTO:MEAS OPOW" | 'activates the Output Power measurement. |
| "CONF:BTO:SWE:TIME 10MS" | 'sets a sweeptime of 10 ms |

Characteristics:

| | |
|-------------|-----------------------|
| *RST value: | - (AUTO is set to ON) |
| SCPI: | device specific |

CONFigure:BTOoth:SWEep:TIME]:AUTO ON | OFF

This command links the sweep time to the settings according to the RF Test Specification.

Note: *This setting is valid for the currently active measurement (see command CONF:BTO:MEAS) and is independent of other Bluetooth measurements.*

Example:

| | |
|-----------------------------|---|
| "INST:SEL BTO" | 'activates the Bluetooth option |
| "CONF:BTO:MEAS OPOW" | 'activates the Output Power measurement |
| "CONF:BTO:SWE:TIME:AUTO ON" | 'switches the sweep time coupling on |

Characteristics:

| | |
|-------------|-----------------|
| *RST value: | ON |
| SCPI: | device specific |

CONFigure:BTOoth:TRACe<1...3>:MODE WRITe | VIEW | AVERage | MAXHold | MINHold | BLANK

This command defines the way of displaying and evaluating the measurement curves for the selected Bluetooth measurement. WRITe corresponds to manual operating mode Clr/Write.

The numeric suffix selects the trace related to this setting.

The number of measurement to be executed for AVERage, MAXHold und MINHold is defined with command CONF:BTO:SWEep:COUNT. Please note that a synchronisation to the end of the indicated number of measurements is only possible during single sweep operation.

Note: *This setting is valid for the currently active measurement (see command CONF:BTO:MEAS) and is independent of other Bluetooth measurements.*

Example:

| | |
|----------------------------|--|
| "INST:SEL BTO" | 'activates the Bluetooth option |
| "CONF:BTO:MEAS OPOW" | 'activates the Output Power measurement |
| "INIT:CONT OFF" | 'selects single sweep operation |
| "CONF:BTO:SWE:COUN 10" | 'sets the sweep count to 10 |
| "CONF:BTO:TRAC2:MODE AVER" | 'switches averaging for trace 2 on |
| "INIT;*OPC" | 'starts a measurement with synchronisation |

Characteristics:

| | |
|-------------|-----------------|
| *RST value: | WRITe |
| SCPI: | device specific |

CONFigure:BTOoth:TRACe<1...3>:SElect

This command selects the measurement curve for evaluation of the modulation characteristics.

Example:

| | |
|----------------------|---|
| "INST:SEL BTO" | 'activates the Bluetooth option |
| "CONF:BTO:MEAS OPOW" | 'activates the Output Power measurement |
| "INIT:CONT OFF" | 'selects single sweep operation |
| "CONF:BTO:TRAC2:SEL" | 'selects trace 2 for measurement result |
| | 'queries |

Characteristics:

| | |
|-------------|-----------------|
| *RST value: | -- |
| SCPI: | device specific |

DISPlay - Subsystem

The DISPlay subsystem controls the selection and presentation of textual and graphic information as well as of measurement data on the display.

The measurement windows are selected by WINDOW1 (screen A) or WINDOW2 (screen B).

| COMMAND | PARAMETERS | UNIT | COMMENT |
|---|---|---------------------------|-----------------------|
| DISPlay [:WINDOW<1 2>] :TRACe<1...3> :Y [:SCALE] :PDIVision :RPOSITION :RVALue | <numeric_value> <numeric_value> <numeric_value> | DB HZ PCT DB HZ | Option FM-Demodulator |

DISPlay[:WINDOW<1|2>]:TRACe<1...3>:Y[:SCALE]:PDIVision <numeric_value>

This command defines the scaling of the y-axis in the currently selected unit.

The numeric suffix of TRACe<1...3> is irrelevant.

Example: "DISP:WIND1:TRAC:Y:PDIV 10KHz" 'sets the y-scale to
'10 kHz/div.

Characteristics: *RST value: -
SCPI: conforming

This command is only available with option R&S FS-K7 (FM-Demodulator) or R&S FS-K8 (Bluetooth).

DISPlay[:WINDOW<1|2>]:TRACe<1...3>:Y[:SCALE]:RPOSITION 0...100PCT

This command defines the position of the reference value in the selected measurement window. The numeric suffix with TRACe<1...3> is irrelevant.

With function *NORMALIZE* switched on in operating mode NETWORK (option Tracking Generator / Ext. Generator Control R&S FSP-B9/B10) the reference position marks the reference point for the normalized measurement data in the diagram.

With active FM demodulator the reference position for result displays RF POWER and SPECTRUM will be kept apart from the one for result display FM.

In operating mode BLUETOOTH the selected reference position is valid for all measurements.

Example: "DISP:WIND1:TRAC:Y:RPOS 50PCT"

Characteristics: *RST value: 100 PCT (mode SPECTRUM)
50 PCT (mode NETWORK, FM DEMOD and BLUETOOTH)
SCPI: conforming

DISPlay[:WINDOW<1|2>]:TRACe<1...3>:Y[:SCALe]:RVALue <numeric_value>

This command is available with

- option Tracking Generator / Ext. Generator Control (R&S FSP-B9/B10) and function *NORMALIZE* switched on
- option FM demodulator (R&S FS-K7) and result display FM switched on
- option Bluetooth analyzer (R&S FS-K8) and measurement Modulation Characteristics, Initial Carrier Frequency Drift or Carrier Frequency Tolerance switched on.

It defines the result value assigned to the reference position on the graticule. In manual operation this corresponds to function REFERENCE VALUE.

The numeric suffix with TRACe<1...3> is irrelevant.

Example: "DISP:WIND1:TRAC:Y:RVAL 0" sets the result value at the reference position to 0 dB (option Tracking Generator/Ext. Generator Control) or to 0 Hz (options FM demodulator and Bluetooth)

Characteristics: *RST value: 0 dB (operating mode NETWORK)
0 Hz (operating mode FM-Demodulator and Bluetooth)

SCPI: device specific

INSTRument - Subsystem

The INSTRument subsystem selects the operating mode of the unit either via text parameters or fixed numbers.

| COMMAND | PARAMETERS | UNIT | COMMENT |
|-------------------------------------|--|------|---------|
| INSTRument :NSElect [:SElect] | <numeric_value> SANalyzer ADEMod MGSM WCDPower BWCDpower MWCDpower BT0oth | | |

INSTRument:NSEL <numeric value>

This command schaltet zwischen den Betriebsarten über Zahlen um.

- Parameter:**
- 1: mode Spektrumanalyse
 - 3: mode FM-Demodulator
 - 5: Betriebsart GSM/EDGE Analyzer
 - 8: mode 3G FDD BTS
 - 9: mode 3G FDD UE
 - 12: mode BLUETOOTH

Example: "INST:NSEL 1" 'selects mode SPECTRUM.'

Characteristics: *RST value: 1
SCPI: conforming

Parameter 3 is only available with option R&S FS-K7.

Parameter 5 is only available with option R&S FS-K5.

Parameter 8 requires option R&S FS-K72.

Parameter 9 requires option R&S FS-K73.

Parameter 12 requires option R&S FS-K8.

INSTRument[:SElect] SANalyzer | ADEMMod | MGSM | WCDPower|BWCDpower | MWCDpower | BT0oth

This command selects the operating mode by input of the corresponding name.

- | | | |
|------------|--------------------------------------|--------------------------------------|
| ADEMMod: | mode FM-Demodulator | only available with option R&S FS-K7 |
| SANalyzer: | mode SPECTRUM | |
| MGSM: | mode GSM/EDGE Analyzer | only available with option R&S FS-K5 |
| WCDPower: | mode 3G FDD BTS | require option R&S FS-K72 |
| BWCDpower | mode 3G FDD BTS (alias for WCDPower) | |
| MWCDpower | mode 3G FDD MS | requires option R&S FS-K73 |
| BT0oth | mode BLUETOOTH | |

Example: "INST SAN" 'selects mode SPECTRUM'.

Characteristics: *RST value: SANalyzer
SCPI: conforming

SENSe - Subsystem

The SENSe subsystem is organized in several subsystems. The commands of these subsystems directly control device-specific settings, they do not refer to the signal characteristics of the measurement signal.

The SENSe subsystem controls the essential parameters of the analyzer. In accordance with the SCPI standard, the keyword "SENSe" is optional for this reason, which means that it is not necessary to include the SENSe node in command sequences.

The measurement windows are selected by SENSe1 and SENSe2:

SENSe1 = Modification of screen A settings

SENSe2 = Modification of screen B settings.

Screen A is automatically selected if 1 or 2 is missing.

SENSe:DDEMod - Subsystem

This subsystem controls the parameters for digital demodulators.

| COMMAND | PARAMETERS | UNIT | COMMENT |
|--|---|----------------------|---------|
| [SENSe<1 2>] :DDEMod :FILTer :MEASurement :SEARch :PULSe :OFFSet [:STATe] :SYNC :LAP :OFFSet [:STATe] :TIME :AUTO | OFF BTooth <numeric_value> <Boolean> <hex> <numeric_value> <Boolean> <numeric value> <Boolean> | S -- S | |

[SENSe<1|2>:]DDEMod:FILTer:MEASurement OFF | BTooth

This command selects the receive filter for the signal to measure.

Example: "DDEM:FILT:MEAS BTO" 'Bluetooth measurement filter ON'

Characteristics: *RST value: OFF
SCPI: device specific

SENSe<1|2>:]DDEMod:SEARch:PULSe:OFFSet <numeric_value>

This command defines the time to be recorded before a signal burst is recognized.

The valid value range is 0 to ± 10 ms.

Example: "DDEM:SEAR:PULSe:OFFS 1MS" 'Burst offset = 1ms before start of the burst'

Characteristics: *RST value: 0
SCPI: device specific

[SENSe<1|2>:]DDEMod:SEARCh:PULSe[:STATe] ON | OFF

This command switches the search for a signal burst on or off.

Example: "DDEM:SEAR:PULS OFF"

Characteristics: *RST value: ON
SCPI: device specific

[SENSe<1|2>:]DDEMod:SEARCh:SYNC:LAP <hex>

This command determines the 24 least significant bits (LAP) of the DUT 'Bluetooth device address'. They are used to define the synchronization pattern to determine the start of a packet. The value range is 0 to FFFFFFF hex.

The numeric suffixes <1|2> are irrelevant for this command

Characteristics: *RST value: 0
SCPI: device specific

[SENSe<1|2>:]DDEMod:SEARCh:SYNC:OFFSet <numeric_value>

This command defines the number of bits to be recorded before the first preamble bit is detected. The valid value range is 0 to ± 10000.

Example: "DDEM:SEAR:SYNC:OFFS 10" 'Sync offset = 10 bits before the preamble bits'

Characteristics: *RST value: 0
SCPI: device specific

[SENSe<1|2>:]DDEMod:SEARCh:SYNC[:STATe] ON | OFF

This command switches the search for a sync pattern on or off.

Example: "DDEM:SEAR:SYNC ON" 'switches the sync pattern search on.'

Characteristics: *RST value: OFF
SCPI: device specific

[SENSe<1|2>:]DDEMod:SEARCh:TIME 100μs ... 130560μs/(Points per Symbol)

This command selects manual setting of the record length and defines the record length to be used for the search of sync word and burst. The input of the record length is expected in seconds.

Value range: 100us to 130560μs / (points per symbol)

| Points per Symbol | maximum record length |
|-------------------|-----------------------|
| 2 | 104.4 slots |
| 4 | 52.2 slots |
| 8 | 26.1 slots |
| 16 | 13.1 slots |
| 32 | 6.5 slots |

Note: *For measurements without trigger at least 3 times the packet length is required during loop back operation. That means that with an oversampling factor of 16 only packet types DH1 and DH3 can be detected reliably; with an oversampling factor of 32 only DH1 packets can be detected.*

Example: "DDEM:SEAR:TIME 100US" 'Sets the record length for sync word and burst search to 100μs.

Characteristics: *RST value: 1875μs
SCPI: device specific

[SENSe<1|2>:]DDEMod:SEARCh:TIME:AUTO ON | OFF

This command activates the automatic setting of the record length for the sync word and burst search, depending on the selected packet type.

The automatic record length is determined as follows:

Free Run Trigger:

search length = 3 * packet length + abs(sync offset) or
search length = 3 * packet length + abs(burst offset)

alle anderen Triggerarten:

search length = 1 * packet length + 1 slot + abs(sync offset) or
search length = 1 * packet length + 1 slot + abs(Burst Offset)

If the selected MEAS TIME is longer than the packet length, the difference MEAS TIME - packet length is added to the record length.

Example: "DDEM:SEAR:TIME:AUTO OFF" 'selects manual input for the record length

Characteristics: *RST value: ON
SCPI: device specific

SENSe:EGAin - Subsystem

| COMMAND | PARAMETERS | UNIT | COMMENT |
|--|-----------------|------|---------|
| [SENSe<1 2>] :EGAin :INPut [:MAGnitude] | <numeric_value> | DB | |

[SENSe<1|2>:]CORRection:EGAin:INPut[:MAGNitude] -200...200dB

This command makes an external gain known to the analyzer, which will take it into account during the display of measurement results. With this function the gain of an antenna or of an external preamplifier can be taken into account for the measurement values.

Example: "CORR:EGA:INP 10DB" 'takes 10 dB external gain into account

Characteristics: *RST value: 0dB
SCPI: device specific

TRACe - Subsystem

The TRACe subsystem controls access to the instrument's internal trace memory.

| COMMAND | PARAMETERS | UNIT | COMMENT |
|-----------------------|--|------|---------|
| TRACe<1 2> [:DATA] | TRACE1 TRACE2 TRACE3 TRACE4, <block> <numeric_value>... BTOBits BTOFm | - | |

TRACe<1|2>[:DATA] TRACE1|TRACE2|TRACE3, <block> | <numeric_value>

This command transfers trace data from the control computer to the instrument, the query reads trace data out of the instrument. The associated measurement window is selected with the numeric suffix of TRACe<1|2>.

Note:

If the FM demodulator (option R&S FS-K7) is active, only the displayed trace data is read out and recalled. A portion of the measurement data that can be called by means of a marker, however, is calculated from the raw measurement data. These results are no longer available after recalling a trace; the associated queries generate a query error.

Example: "TRAC TRACE1,"+A\$ (A\$: data list in the current format)
"TRAC? TRACE1"

Characteristics: *RST value: -
SCPI: conforming

Return values:

The returned values are scaled in the current level unit. Returned FM-modulated measurement values (activated option R&S FS-K7 or R&S FS-K8) are scaled in Hz.

ASCII format (FORMat ASCII):

In this case a list of values separated by commas is returned (Comma Separated Values = CSV).

The number of measurement points is 501 for the R&S FSP, 625 for the R&S FSU.

Binary format (FORMAT REAL,32):

In this case the command returns binary format (REAL,32). The data are transferred in block format (Definite Length Block Data according to IEEE 488.2). They are arranged in succeeding lists of I and Q data of 32 Bit IEEE 754 floating point numbers. General structure of the return string:

R&S FSP: #42004<meas value 1><meas value value2>...<meas value 501>

R&S FSU: #42500<meas value 1><meas value value2>...<meas value 625>

with

#4 digits of the subsequent number of data bytes (4 in the example)

2004 Number of the subsequent data bytes (2004 in the example)

2500 Number of subsequent data bytes (2500 in the example))

<meas value x> 4 byte floating point measurement values

Transfer format:

The trace data are transferred in the current format (corresponding to the command FORMAt ASCII|REAL). The device-internal trace memory is addressed using the trace names 'TRACE1' to 'TRACE3'.

The transfer of trace data from the control computer to the instrument takes place by indicating the trace name and then the data to be transferred. In ASCII format, these data are values separated by commas. If the transfer takes place using the format real (REAL,32), the data are transferred in block format.

The parameter of the query is the trace name TRACE1 to TRACE3, it indicates which trace memory will be read out.

Saving and recalling:

Saving and recalling trace data together with the device settings to/from the device-internal hard disk or to/from a floppy is controlled via the commands "MMEMory:STORe:STATE" and "MMEMory:LOAD:STATE" respectively. Trace data are selected with "MMEMory:SElect[:ITEM]:ALL" or "MMEMory:SElect[:ITEM]:TRACe".

Trace data in ASCII format (ASCII FILE EXPORT) are exported with the command "MMEM:STORe:TRACe".

Das Übergabeformat der Trace-Daten richtet sich nach der Geräteeinstellung:

The transfer format for the trace data depends on the instrument setting:

The transfer format for the trace data depends on the instrument setting:

SPECTRUM mode (span > 0 and zero span):

R&S FSP: 501 results are output in the unit selected for display.

R&S FSU: 625 results are output in the unit selected for display.

Note: With AUTO PEAK detector, only positive peak values can be read out.

Trace data can be written into the instrument with logarithmic display only in dBm, with linear display only in volts.

FORMAT REAL,32 is to be used as format for binary transmission.

TRACe:[DATA]? BTOBits

Reads the packet data bits.

Example: "INST:SEL:BTO" 'activate bluetooth application
"CONF:BTO:MEAS MCH" 'select Modulation Characteristics.
"TRACe:DATA? BTOB" 'Read data bits

Characteristics: *RST value: -
SCPI: device-specific

This command is only a query and therefore has no *RST value.

TRACe:[DATA]? BTOFm

Reads the FM trace with selected oversampling factor (Pointer per Symbol).

Example: "INST:SEL:BTO" 'activate bluetooth application
"CONF:BTO:MEAS MCH" 'select modulation characteristics
"TRACe:DATA? BTOF" 'read FM trace

Characteristics: *RST value: -
SCPI: device-specific

This command is only a query and therefore has no *RST value.

Assignment Softkey/Hotkey to the Remote Commands

This chapter contains the assignment of the remote commands to the softkey menus for the menus, where the Bluetooth analyzer option differs from the basic instrument. For unchanged menus the assignment is included in the operating manual of the basic instrument.

Bluetooth Main Menu

BLUETOOTHINSTRument:SElect BT0oth
INSTRument:NSELect 12**EXIT**INSTRument:SESelect SAN
INSTRument:NSELect 1**SETTINGS**

--

FIND SYNC

--

RANGE

--

PAGE UP

--

PAGE DOWN

--

Hotkey SETTINGS

| | |
|-------------------|--|
| CHANNEL | CONFigure:BT0oth:CHAN 0 |
| PACKET TYPE | CONFigure:BT0oth:PTYP DH1 DH3 DH5 AUTO |
| GEOGRAPHY | CONFigure:BT0oth:GEOG EUR USA FRAN |
| POWER CLASS | CONFigure:BT0oth:POW:PCL 1 |
| POINTS PER SYMBOL | CONFigure:BT0oth:PRAT 2 4 8 16 32 |
| AVERAGE ↓ | -- |
| ANTENNA GAIN | [SENSe:]CORRection:EGA:INP[:MAGN] 0 DB |
| SELECT TRACE | CONFigure:BT0oth:TRACe<1...3>:SElect |

Softkey AVERAGE

| | |
|---------------|--|
| AVERAGE START | CONFigure:BT0oth:POW:AVERage:STARt <numeric_value> |
| AVERAGE STOP | CONFigure:BT0oth:POW:AVER:STOP <numeric_value> |

Hotkey *FIND SYNC*

FIND SYNC
ON OFF

[SENSe:] DDEM_od:SEARch:SYNC:STATE ON | OFF

LAP

[SENSe:] DDEM_od:SEARch:SYNC:LAP <hex>

SYNC
OFFSET

[SENSe:] DDEM_od:SEARch:SYNC:OFFSet 0

FIND BURST
ON OFF

[SENSe:] DDEM_od:SEARch:PULSe:STATE ON | OFF

BURST
OFFSET

[SENSe:] DDEM_od:SEARch:PULS:OFFSet <numeric value>

SEARCH LEN
AUTO

[SENSe:] DDEM_od:SEARch:TIME:AUTO ON | OFF

SEARCH LEN
MANUAL

[SENSe:] DDEM_od:SEARch:TIME <numeric value>

Hotkey *RANGE*

DEVIATION
PER DIV

DISPlay:WINDOW:TRACe:Y:PDIVision <numeric_value>

REFERENCE
POSITION

DISPlay:WINDOW:TRACe:Y:RPOSITION <numeric_value>

REFERENCE
VALUE

DISlay:WINDOW:TRAC:Y:RVALue <numeric_value>

ZOOM

[SENSe:] ADEM_ode:ZOOM
[SENSe:] ADEM_ode:ZOOM:STARt <numeric_value> ON

Hardkey MEAS

MEAS

CONFigure:BTooth:MEAS <measurement>
 mit <measurement> =

| | |
|------|---|
| OPOW | Output Power |
| ACLR | TX Output Spectrum-Adjacent Channel Power |
| MCH | Modulation Characteristics |
| IFCT | Initial Carrier Frequency Tolerance |
| CFDR | Carrier Frequency Drift |

Softkey OUTPUT POWER

CONTINUOUS SWEEP

INITiate:CONTinuous ON

SINGLE SWEEP

INITiate:CONTinuous OFF

MEASTIME MANUAL

CONFFigure:BTooth:SWEep:TIME <measurement>

MEASTIME AUTO

CONFFigure:BTooth:SWEep:TIME:AUTO ON

SWEEP COUNT

CONFFigure:BTooth:SWEep:COUN 0

AVERAGE ↓

--

Softkey TX SPEC ACP

CONTINUOUS SWEEP

INITiate:CONTinuous ON

SINGLE SWEEP

INITiate:CONTinuous OFF

**SWEETIME
MANUAL**

CONFigure:BT0oth:SWE:TIME <numeric_value>

**SWEETIME
AUTO**

CONFigure:BT0oth:SWEep:TIME:AUTO ON

**SWEEP
COUNT**

CONFigure:BT0oth:SWE:COUNt <numeric_value>

**NO. OF
ACP CHAN**

CONFigure:BT0oth:ACLR:ACPairs <numeric_value>

Softkey MODULATION CHARACTERISTICS**START
TEST**

INITiate:IMMediate

**CONTINUE
TEST**

INITiate:CONTinuous

**CONTINUOUS
SWEEP**

INITiate:CONTinuous ON

**SINGLE
SWEEP**INITiate:CONTinuous OFF
INIT;*WAI**MEAS TIME
MANUAL**

CONFigure:BT0oth:SWE:TIME <numeric_value>

**MEAS TIME
AUTO**

CONFigure:BT0oth:SWE:TIME:AUTO ON

**SWEEP
COUNT**

CONFigure:BT0oth:SWE:COUNt <numeric_value>

Softkey *INIT CARR FREQ TOL***CONTINUOUS SWEEP**

INITiate:CONTinuous ON

SINGLE SWEEPINITiate:CONTinuous OFF
INIT;*WAI**MEASTIME MANUAL**

CONFigure:BTOoth:SWE:TIME <numeric_value>

MEASTIME AUTO

CONFigure:BTOoth:SWEep:TIME:AUTO ON

SWEEP COUNT

CONFigure:BTOoth:SWEep:COUN <numeric_value>

Softkey *CARRIER FREQ DRIFT***CONTINUOUS SWEEP**

INITiate:CONTinuous ON

SINGLE SWEEPINITiate:CONTinuous OFF
INIT;*WAI**MEASTIME AUTO**

CONFigure:BTOoth:SWEep:TIME:AUTO ON

MEASTIME MANUAL

CONFigure:BTOoth:SWEep:TIME <numeric_value>

SWEEP COUNT

CONFigure:BTOoth:SWEep:COUN <numeric_value>

Softkey EDR

| | |
|-------------------|---|
| REL TX POWER ↓ | CONFigure:BT0oth:MEAS RTP CALC:BT0oth:RTP? MIN CALC:BT0oth:RTP:RAT? MIN |
| CONTINUOUS SWEEP | INITiate:CONTinuous ON |
| SINGLE SWEEP | INITiate:CONTinuous OFF INIT;*WAI |
| MEASTIME MANUAL | CONFigure:BT0oth:SWEep:TIME <numeric_value> |
| MEASTIME AUTO | CONFigure:BT0oth:SWEep:TIME:AUTO ON |
| SWEEP COUNT | CONFigure:BT0oth:SWEep:COUNT <numeric_value> |
| AVERAGE ↓ | |
| GFSK START | CONFigure:BT0oth:RTPower:GAverage:START <numeric_value> |
| GFSK STOP | CONFigure:BT0oth:RTPower:GAverage:STOP <numeric_value> |
| DPSK START | CONFigure:BT0oth:RTPower:DAverage:START <numeric_value> |
| DPSK STOP | CONFigure:BT0oth:RTPower:DAverage:STOP <numeric_value> |

| | |
|---------------------|---|
| SPURIOUS EMISSIONS | |
| CONTINUOUS SWEEP | INITiate:CONTinuous ON |
| SINGLE SWEEP | INITiate:CONTinuous OFF INIT;*WAI |
| ADJUST GATE | CONFigure:BTOoth:SWEep:TIME <numeric_value> |
| SWEEP COUNT | CONFigure:BTOoth:SWEep:COUNT <numeric_value> |
| NO. OF ADJ CHAN | CONFigure:BTOoth:IBSemissions:ACP <numeric_value> |
| GATE DELAY | CONFigure:BTOoth:SWEep:COUNT <numeric_value> |
| GATE LENGTH | SWEep:EGAT:LENGTH <numeric_value> |
| CARR FREQ STABILITY | CALCulate:BTOoth:CFSTability:FERRor? MIN CALCulate:BTOoth:CFSTability:FERRor:BLOC? AVERage CALCulate:BTOoth:CFSTability:FERRor:INIT? MAX CALCulate:BTOoth:CFSTability:DEVM? AVERage CALCulate:BTOoth:CFSTability:DEVM:PEAK? CALCulate:BTOoth:CFSTability:DEVM:Dpct? CALCulate:BTOoth:CFSTability:COUNT? |
| CONTINUOUS SWEEP | INITiate:CONTinuous ON |
| SINGLE SWEEP | INITiate:CONTinuous OFF INIT;*WAI |

MEASTIME
MANUAL

CONFigure:BTOoth:SWE:TIME <numeric_value>

MEASTIME
AUTO

CONFigure:BTOoth:SWEep:TIME:AUTO ON

SWEEP
COUNT

CONFigure:BTOoth:SWEep:COUNT <numeric_value>

DIFF
PHASE CONTINUOUS
SWEEP

INITiate:CONTinuous ON

SINGLE
SWEEPINITiate:CONTinuous OFF
INIT;*WAIMEASTIME
MANUAL

CONFigure:BTOoth:SWEep:TIME <numeric_value>

MEASTIME
AUTO

CONFigure:BTOoth:SWEep:TIME:AUTO ON

SWEEP
COUNT

CONFigure:BTOoth:SWEep:COUNT <numeric_value>

Hardkey BW

MEAS
FILTER

[SENSe:] DDEM:FILT:MEASure OFF | BTO

5 Index

A

| | |
|---|------|
| <i>A/D converter</i> | 3.32 |
| <i>ACP</i> | 3.14 |
| <i>Adjacent Channel Power</i> | 3.14 |
| <i>Adjacent Channel Power Measurement</i> | 3.14 |
| <i>antenna</i> | 3.5 |
| <i>AUTO</i> | 3.4 |
| <i>average</i> | 3.6 |
| <i>AVERAGE</i> | 4.41 |
| <i>average power</i> | 3.6 |
| <i>averaging method</i> | 3.6 |

B

| | |
|---|------------|
| <i>bandwidth</i> | 3.33 |
| <i>BD_ADDR</i> | 3.8 |
| <i>bit pattern</i> | 3.16 |
| <i>Bluetooth burst</i> | 3.6 |
| <i>Bluetooth demodulator</i> | 3.12 |
| <i>Bluetooth main hotkey menu</i> | 3.3 |
| <i>Bluetooth operating mode</i> | 3.31, 3.34 |
| <i>burst</i> | 3.6 |
| <i>BURST NOT FOUND</i> | 3.7 |
| <i>BURST OFFSET INVALID</i> | 3.9 |
| <i>BW</i> | 3.12 |

C

| | |
|--|---------------------------------------|
| <i>Carrier Frequency Drift</i> | 3.4, 3.7, 3.8, 3.19, 3.21, 3.33, 4.45 |
| <i>Carrier Frequency Stability and Modulation Accuracy</i> | |
| <i>measurement</i> | 3.28 |
| <i>carrier offset</i> | 3.18 |
| <i>center frequency</i> | 3.4, 3.31 |
| <i>channel number</i> | 3.4 |
| <i>clear write</i> | 1.8 |
| <i>continuous sweep</i> | 1.8 |
| <i>correlation</i> | 3.8 |
| <i>country</i> | 3.4 |
| <i>coupling</i> | 3.33 |
| <i>coupling ratio</i> | 3.33 |

D

| | |
|--|--|
| <i>default coupling</i> | 3.33 |
| <i>detector</i> | 3.11 |
| <i>device address</i> | 3.8 |
| <i>DH1</i> | 3.4, 3.9, 3.13, 3.20, 3.22, 3.23, 3.28, 3.30 |
| <i>DH3</i> | 3.4, 3.9, 3.13, 3.20, 3.22, 3.23, 3.28, 3.30 |
| <i>DH5</i> | 3.4, 3.5, 3.13, 3.20, 3.22, 3.23, 3.28, 3.30 |
| <i>Differential Phase Encoding measurement</i> | 3.29 |

E

| | |
|-----------------------------------|----------------|
| <i>Enhanced Data rate</i> | 4.46 |
| <i>equipment under test</i> | 3.8, 3.12 |
| <i>Europe</i> | 3.4, 3.5, 3.15 |
| <i>EUT</i> | 3.8, 3.12 |
| <i>EXT TRIGGER/GATE</i> | 3.34 |

F

| | |
|--------------------------|----------------|
| <i>filter type</i> | 3.33 |
| <i>FIND BURST</i> | 3.6, 3.7 |
| <i>find sync</i> | 3.6, 3.7 |
| <i>Find Sync</i> | 1.9 |
| <i>FIND SYNC</i> | 4.42 |
| <i>France</i> | 3.4, 3.5, 3.15 |
| <i>frequency</i> | |
| <i>band</i> | 3.4 |
| <i>deviation</i> | 3.16 |
| <i>range</i> | 3.31 |
| <i>FSP-B6</i> | 3.34 |

G

| | |
|------------------------|-----|
| <i>gain</i> | 3.5 |
| <i>geography</i> | 3.4 |

H

| | |
|------------------------|-----------------|
| <i>Hardkey</i> | |
| <i>AMPT</i> | 3.32 |
| <i>BW</i> | 3.33 |
| <i>BW</i> | 4.48 |
| <i>FREQ</i> | 3.31 |
| <i>MEAS</i> | 2.2, 3.11, 3.34 |
| <i>MEAS</i> | 4.43 |
| <i>MKR</i> | 3.36 |
| <i>MKR</i> ⇒..... | 3.36 |
| <i>MKR FCTN</i> | 3.37 |
| <i>SPAN</i> | 3.31 |
| <i>SWEEP</i> | 3.34 |
| <i>TRIG</i> | 3.34 |
| <i>Hotkey</i> | |
| <i>BLUETOOTH</i> | 3.2 |
| <i>EXIT</i> | 3.3 |
| <i>FIND SYNC</i> | 3.3 |
| <i>PAGE DOWN</i> | 3.3 |
| <i>PAGE UP</i> | 3.3 |
| <i>RANGE</i> | 3.3 |
| <i>SETTINGS</i> | 3.3 |
| <i>SPECTRUM</i> | 4.34 |

I

| | |
|--|---------------------------------|
| <i>IF bandwidth</i> | 3.33 |
| <i>IF BW</i> | 3.33 |
| <i>Initial Carrier Frequency Tolerance</i> ... | 3.4, 3.7, 3.8, 3.18, 3.33, 4.45 |

L

| | |
|---------------------------------|----------|
| <i>LAP</i> | 2.2, 3.8 |
| <i>level offset</i> | 3.5 |
| <i>limits</i> | 3.13 |
| <i>lower address part</i> | 2.2 |

M

| | |
|------------------------|------|
| <i>Main menu</i> | 4.40 |
| <i>marker</i> | 3.36 |

| | |
|---|---------------------------------|
| marker functions | 3.37 |
| marker search functions | 3.36 |
| maxhold | 1.8 |
| meas filter | 3.33 |
| meas time | 3.33 |
| measurement | 3.11, 3.34 |
| Carrier Frequency Stability and Modulation Accuracy | 3.28 |
| Differential Phase Encoding | 3.29 |
| Spurious Emissions | 3.25 |
| measurements | 3.34 |
| performing | 3.34 |
| menu overview | 3.1 |
| mode | 3.11 |
| Modulation Characteristics | 3.4, 3.7, 3.8, 3.16, 3.33, 4.44 |
| modulation measurement | 1.8 |

O

| | |
|---------------------------|---------------------------------------|
| Offset | 3.7 |
| burst | 3.7 |
| sync | 3.7 |
| trigger | 3.35 |
| Output Power | 3.4, 3.7, 3.8, 3.12, 3.32, 3.33, 4.43 |
| oversampling factor | 3.5 |

P

| | |
|--------------------------|-----------|
| p0 | 3.7 |
| p0 bit | 1.9, 3.6 |
| packet length | 2.2 |
| packet type | 3.4 |
| Polarity | 3.35 |
| trigger edge | 3.35 |
| power class | 3.5 |
| power measurements | 1.8 |
| power settings | 3.32 |
| preamble bit | 3.7, 3.18 |

R

| | |
|---|----------------------------|
| range | 3.10 |
| RANGE | 4.42 |
| record length | 3.7 |
| Relative Transmit Power (EDR) measurement | 3.22 |
| Res BW | 3.33 |
| resolution bandwidth | 3.33 |
| RF Test Specification | 3.5, 3.8, 3.12, 3.13, 3.16 |

S

| | |
|---------------------------|------------------------------------|
| search length | 3.9 |
| settings | 3.1, 3.4 |
| SETTINGS | 4.41 |
| Single Sweep | 1.8 |
| Packet Bytes SCO | 4.27 |
| Softkey | |
| ADJUST GATE | 3.26, 4.27 |
| ANTENNA GAIN | 3.5 |
| AVERAGE | 3.5, 3.13, 3.23, 4.31 |
| AVERAGE START | 3.6, 4.28 |
| AVERAGE STOP | 3.6, 4.28 |
| BURST OFFSET | 3.7, 3.9, 4.35 |
| CARR FREQ STABILITY | 3.27, 4.7, 4.8, 4.9 |
| CARRIER FREQ DRIFT | 3.19, 4.45 |
| CHANNEL | 2.2, 3.4 |
| CHANNEL | 3.31 |
| CHANNEL | 4.26 |
| CONTINUE TEST | 3.16 |
| CONTINUOUS SWEEP | 3.13, 3.14, 3.16, 3.18, 3.19, 3.22 |

| | |
|--------------------------------------|------------------------------------|
| DEVIATION PER DIV | 3.10, 4.32 |
| DFSK START | 3.24, 4.29 |
| DFSK STOP | 3.24, 4.29 |
| DIFF PHASE | 3.29, 4.8, 4.9 |
| EDR | 3.21, 4.46 |
| EXTERN | 3.34 |
| FIND BURST ON/OFF | 3.8 |
| FIND SYNC ON/OFF | 3.8 |
| FREE RUN | 3.34 |
| GEOGRAPHY | 2.2, 3.5, 4.27 |
| GFSK START | 3.24, 4.29 |
| GFSK STOP | 3.24, 4.29 |
| IF BW AUTO | 3.33 |
| IF POWER | 3.34 |
| INIT CARR FREQ TOL | 3.18, 4.45 |
| INSTALL OPTION | 2.1 |
| LAP | 2.2, 3.8 |
| LAP | 4.36 |
| MEAS FILTER | 3.33, 4.35 |
| MEASTIME AUTO | 3.18, 3.22, 3.23, 3.28, 3.30, 4.31 |
| MEASTIME MANUAL | 3.18, 3.22, 3.23, 3.28, 3.30, 4.30 |
| MODULATION CHARACTERISTICS | 3.16, 4.44 |
| NO. OF ACP CHAN | 3.15, 3.26, 4.24 |
| OPTIONS | 2.1 |
| OUTPUT POWER | 3.12, 4.43 |
| PACKET BYTES SCO | 3.4, 4.27 |
| PACKET TYPE | 2.2, 3.4, 4.27 |
| POINTS PER SYMBOL | 3.5 |
| POLARITY POS/NEG | 3.35 |
| POWER CLASS | 2.2, 3.5 |
| REFERENCE POSITION | 3.10, 4.32 |
| REFERENCE VALUE | 3.10, 4.33 |
| REL TX POWER | 3.22, 4.19 |
| RES BW MANUAL | 3.33, 4.24 |
| RF POWER | 3.7, 3.9, 3.35, 4.37 |
| SELECT TRACE | 3.5 |
| SINGLE SWEEP | 3.13, |
| SPURIOUS EMISSIONS | 3.25, 4.10, 4.11 |
| START TEST | 3.16 |
| SWEEP COUNT | 3.13, 4.30 |
| SWEETIME AUTO | 3.15, 4.31 |
| SWEETIME MANUAL | 3.14, 4.30 |
| SYNC OFFSET | 3.7, 3.8 |
| TX SPEC ACP | 3.14, 4.43 |
| ZOOM | 3.10 |
| Spurious Emissions measurement | 3.25 |
| STARTUP RECALL | 3.12 |
| STATUS | |
| QUESTIONable | |
| SYNC register | 3.7 |
| Status register | |
| overview | 4.2, 4.4 |
| sweep | 3.12, 3.34 |
| sweep count | 1.8, 3.11 |
| sweep time | 3.11 |
| symbol | 3.5 |
| sync | 3.7 |
| SYNC NOT FOUND | 3.7 |
| SYNC OFFSET INVALID | 3.8 |
| sync word | 1.9, 3.7 |
| synchronisation parameters | 3.7 |

T

| | |
|------------------|------|
| TDF | 3.5 |
| trace | 3.12 |
| trace mode | 1.8 |
| Trigger | |
| concepts | 1.9 |
| extern | 1.9 |
| external | 3.34 |

IF power 3.34, 3.35
offset 3.35
RF power 3.34
RF power 3.35
signal 3.34
slope 3.35
TX Spectrum ACP 3.14, 3.31, 3.32, 3.33, 4.43

U

USA 3.4, 3.5, 3.15

V

VBW 3.11
video bandwidth 3.33
video filter 3.12