



PV inverter

SUNNY MINI CENTRAL 7000HV

User Manual



Table of Contents

1	Information on this Manual	5
1.1	Validity	5
1.2	Target Group	5
1.3	Additional Information	5
1.4	Symbols Used	6
2	Security	7
2.1	Intended Use	7
2.2	Safety Instructions	8
2.3	Explanation of Symbols	9
2.3.1	Symbols on the Inverter	9
2.3.2	Symbols on the Type Label	9
3	Product Overview	11
4	Display	12
4.1	Operation	12
4.2	Display Messages during Operation	12
4.3	Display Messages during a Disturbance	13
4.4	DC Overvoltage	13
5	LED States	14
6	Visual Inspection, Maintenance and Cleaning	16
7	Troubleshooting	17
7.1	Status Messages	17
7.2	Measuring Channels	18
8	Glossary	19
9	Contact	20

1 Information on this Manual

1.1 Validity

This manual covers the following devices:

- SMC 7000HV-1 1

1.2 Target Group

This manual is for the operator.






1.3 Additional Information

You will find additional information on the device-specific technical data in the installation manual provided.

You will find additional information on special subjects (e.g. description of the operating parameters) in the download area at www.SMA.de/en.

1.4 Symbols Used

The following types of safety instructions and general information are used in this manual:


	DANGER!
<p>"DANGER" indicates a hazardous situation which, if not avoided, will result in death or serious injury.</p>	
	WARNING!
<p>"WARNING" indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p>	
	CAUTION!
<p>"CAUTION" indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.</p>	
	NOTICE!
<p>"NOTICE" indicates a situation that can result in property damage if not avoided.</p>	
	Information
<p>Information provides tips that are valuable for the optimal installation and operation of the product.</p>	

2 Security

2.1 Intended Use

The Sunny Mini Central is a PV inverter, which converts the direct current of the PV array to grid-compliant alternating current and feeds it into the power distribution grid.

Operating principle of a PV plant with Sunny Mini Central

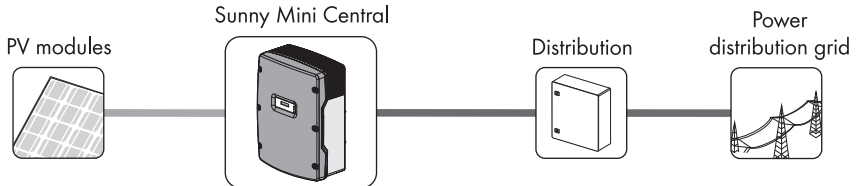

The Sunny Mini Central is suitable for indoor and outdoor use.

The Sunny Mini Central may only be operated with PV arrays (PV modules and cabling) of protection class II. Do not connect any energy sources other than PV modules to the Sunny Mini Central.

Do not use the Sunny Mini Central for purposes other than those described here. Alternative uses, modifications to the Sunny Mini Central or the installation of components not expressly recommended or sold by SMA Solar Technology AG void the warranty claims and operation permission. Contact the SMA Serviceline if you need clarification regarding the intended use of the inverter.

This manual is a part of the Sunny Mini Central. Observe all of the activities described in this document. Keep this manual in a convenient place for future reference.

2.2 Safety Instructions

Electric shock

Even when no external voltage is present, there can still be high voltages in the inverter that can cause electric shocks.

- Electrical installation, repair and retrofitting may only be carried out by a trained electrically qualified person.
- Persons with limited physical or physical abilities may only perform activities on the inverter after tuition and under supervision.
- Children may not play with the inverter. Children may not have access to an inverter in operation.

Burn hazard

Some parts of the Sunny Island enclosure can become hot during operation.

- Only touch the enclosure lid of the inverter during operation.






Destruction of the inverter due to overvoltage

If the yellow LED blinks 4 times, the inverter can be destroyed by overvoltage.

- Inform your installer immediately if the yellow LED blinks and the inverter shows the display message "!PV-Overvoltage! !DISCONNECT DC!".

2.3 Explanation of Symbols




2.3.1 Symbols on the Inverter











Symbol	Explanation
	Operation display.
	Ground fault or varistor defective. Inform your installer.
	An error has occurred. Inform your installer immediately .
	You can operate the display by tapping. <ul style="list-style-type: none"> • Tapping once: the background light switches on or the display scrolls one message further. • 2 taps in quick succession*: The inverter shows the device type, the firmware version and the configured standard (see section 4.2 "Display Messages during Operation" (page 12)).
	QR-Code ^{®**} for SMA bonus program You will find information on the SMA bonus program at www.SMA-Bonus.com .

* This function is valid from firmware version 2.10.


** QR-Code is a registered trademark of DENSO WAVE INCORPORATED.

2.3.2 Symbols on the Type Label

Symbol	Explanation
	Beware of dangerous electrical voltage. The inverter operates at high voltages. All work on the inverter may only be carried out by electrically qualified persons.
	Beware of hot surface. The inverter can become hot during operation. Avoid contact during operation.
	Observe all documentation that accompanies the inverter.

Symbol	Explanation
	<p>The inverter must not be disposed of together with the household waste. Further disposal information can be found in the enclosed installation manual.</p>
	<p>CE mark. The inverter complies with the requirements of the applicable EC guidelines.</p>
	<p>The inverter has a transformer.</p>
	<p>Direct current (DC).</p>
	<p>Alternating current (AC).</p>
	<p>Degree of protection IP65. The inverter is protected against penetration by dust particles and water jets from any angle.</p>
	<p>RAL quality mark for solar products. The inverter complies with the requirements of the German Institute for Quality Assurance and Labeling.</p>
	<p>Australian mark of conformity.</p>
	<p>Chinese mark of conformity.</p>
	<p>Korean mark of conformity.</p>

3 Product Overview

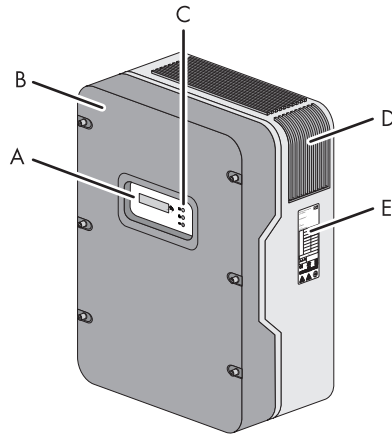

Position	Description
A	Display
B	Enclosure lid
C	LEDs Green LED = Operation Red LED = Ground fault or varistor defective Yellow LED = Fault
D	Ventilation grid
E	Type label for the identification of the inverter via the serial number (Serial No.).

4 Display

4.1 Operation

The display shows the current values of your plant. The displayed values are updated every 5 seconds.

You can operate the display by tapping.

Single tap:




The background illumination switches on or the display scrolls one message further.

2 taps in quick succession (valid from firmware version 2.10):

The inverter displays the device type, the firmware version and the configured country setting one after the other.

4.2 Display Messages during Operation

After commissioning, the inverter displays the device type, the firmware version and the configured country standard one after the other. If you want to view the display messages of the startup phase again while in normal operation, double tap the enclosure lid (from firmware version 2.10).

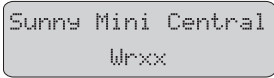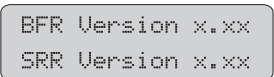Display message	Description
	Inverter device type
	Firmware version of internal processors
	Configured country standard of inverter

Upon error-free connection of the inverter to the power distribution grid, after approximately one minute, the display starts alternating between the messages shown below. Each message appears for 5 seconds, and then the cycle restarts from the beginning.

Display message	Description
<pre>E-today 0Wh Mode MPP</pre>	Energy generated on the current day Status message "MPP"
<pre>Pac 903W Upv 360V</pre>	Current feed-in power Voltage of the PV array
<pre>Qac 200VAR PF 0.987</pre>	After a further 5 seconds or after tapping the actual values of the reactive power Qac and of the displacement power factor $\cos \varphi$ (PF) are displayed.
<pre>E-total 0Wh h-total 0h</pre>	Total amount of energy fed in Total number of operating hours in feed-in operation

4.3 Display Messages during a Disturbance






In the event of a disturbance, the inverter displays the status "Disturbance" and an error message. Inform your installer.









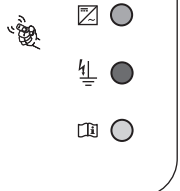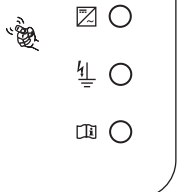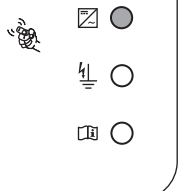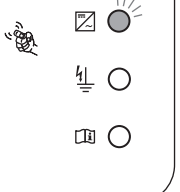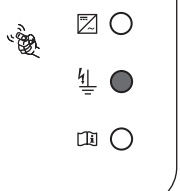


Display message	Description
<pre>E-today 0Wh Mode Disturbance</pre>	Energy generated on the current day Status message "Disturbance"
<pre>Disturbance Uac-Bfr</pre>	Operating state Error message
<pre>at: 261V Present: 245V</pre>	Measured value at the time of the disturbance Current measured value (only displayed if a measured value is responsible for the disturbance)

4.4 DC Overvoltage

Display message	Description
<pre>!PU-Overvoltage! !DISCONNECT DC!</pre>	The DC input voltage is too high at the inverter. Inform your installer immediately!

5 LED States

Condition	Description	
	All LEDs are on	The inverter is initializing.
	All LEDs are off	The DC input voltage at the inverter is too low for feed-in.
	Green LED on	The inverter is feeding in to the power distribution grid.
	Green LED flashing	This blinking can be caused by: <ul style="list-style-type: none"> • The inverter is monitoring the power distribution grid and is waiting for the DC voltage to reach a defined limit so that it can begin feeding the grid. • Operation interrupted. • Power limitation in the inverter.
	Red LED on	A ground fault has occurred or one of the thermally monitored varistors on the DC input side is defective. Inform your installer.

Condition	Description	
 <input checked="" type="checkbox"/>   <input type="checkbox"/>  <input type="checkbox"/> 	Yellow LED on	The inverter is in the operating state "Dauerhafte Betriebsstörung" (Permanent Shutdown). This can have several causes. Inform your installer.
 <input checked="" type="checkbox"/>   <input type="checkbox"/>  <input type="checkbox"/>  	Yellow LED flashing	The inverter displays a disturbance. This can have several causes. Inform your installer.

6 Visual Inspection, Maintenance and Cleaning

Visual inspection

Check the inverter and cables for any signs of external damage. Contact your installer if you find any damage. Do not perform any repair work yourself.

Maintenance and cleaning

Ask your installer to check for correct inverter operation at regular intervals.

If the display field is dirty and you find it difficult to read the operating data and operating states of the inverter, clean the display field with a damp cloth. Do not use any corrosive substances (e.g. solvents, abrasives) for cleaning.

7 Troubleshooting

7.1 Status Messages

Your inverter can be in various operating states. These are displayed as status messages, which can vary according to the type of communication.

Message	Description
Balanced	The inverter has disconnected from the power distribution grid or is limiting its power over a 10 minute average to 4.6 kVA (in Italy: 6 kVA). The inverter is a part of a 3 phase system with 2 further inverters and equipped with the SMA Power Balancer for the avoidance of unbalanced loads.
Derating	Overtemperature in the inverter. The inverter reduces its output to prevent overheating. To avoid unnecessary yield penalties, the design of the PV plant should be checked. Inform your installer.
Error	An error has been detected. Inform your installer.
MPP	The inverter is operating in MPP mode. MPP is the standard display message when operating under normal radiation conditions.
MPP Peak	The inverter is operating in MPP mode above its nominal power.
Mpp-Search	The inverter is calculating the MPP.
Grid mon.	Grid monitoring. This display appears during the start phase, before the inverter is connected to the power distribution grid, predominantly in the morning and evening when radiation is too low and after an error.
Off Grid	The inverter is in Island mode. This mode is specially designed for operation in an off-grid system.
Offset	Offset adjustment of the measurement electronics.
Riso	Measurement of the insulation resistance of the PV plant.
Disturbance, disturbance	Disturbance. This message appears for safety reasons and ensures that the inverter does not connect to the power distribution grid. Inform your installer.
Stop	Operation interrupted.
V-Const	Constant voltage operation.
Waiting	The conditions for connecting are not (yet) fulfilled.

7.2 Measuring Channels

If your inverter is equipped with a communication product, then numerous measuring channels and messages can be transmitted for diagnostics.

Measurement channel	Description
Balancer	Displays the current operating mode of the inverter that is set to the operating parameter "PowerBalancer".
E-total	Total amount of energy fed in
Event-Cnt	Number of events that have occurred
Fac	Power frequency
Error	Identification of the actual disturbance / error
h-On	Total operating hours
h-total	Total number of operating hours in feed-in operation
Iac	Grid current
Ipv	Direct current
Is	Apparent current
Power On	Total number of grid connections
Pac	Generated AC power
Phase	The phase to which the inverter is connected.
PF	Displacement power factor $\cos \varphi$
Qac	Reactive power
Riso	Insulation resistance of the PV plant before entering into the power distribution grid.
Sac	Apparent power
Serial number	Inverter serial number
Status	Display of the current operating state
Vac	Grid voltage
Vpv	PV input voltage
Vpv-Setpoint	PV setpoint voltage

8 Glossary

AC

Abbreviation for "alternating current".

DC

Abbreviation for "direct current".

Derating

A controlled reduction in performance, usually dependent on component temperatures.

Electronic Solar Switch (ESS)

The Electronic Solar Switch is part of the inverter DC disconnection unit. Electronic Solar Switch must be securely inserted into the bottom of the inverter and may only be removed by an electrically qualified person.

MPP (Maximum Power Point)

Operating point of the inverter from current/voltage of the PV array. The actual position of the MPP changes constantly, depending on the level of radiation and cell temperature.

PV

Abbreviation for photovoltaics.

SMA Power Balancer

The SMA Power Balancer is a serial feature of the Sunny Mini Central. The SMA Power Balancer prevents the formation of an unbalanced load > 4.6 kVA (in Italy > 6 kVA) during three-phase grid feed-in. To this effect, 3 Sunny Mini Centrals are connected via a control line to a 3-phase feed-in unit.

Unbalanced load

The unbalanced load is the difference between the power fed into the grid at the individual line conductors. In Germany, this must not exceed 4.6 kVA. In Italy, the unbalanced load is restricted to 6 kVA.

Varistor

The varistors protect the electronics in the inverter from atmospherically coupled energy peaks, such as those that can occur when lightning strikes nearby.

9 Contact

If you have technical problems, contact your installer. The following information is required in order to provide you with the necessary assistance:

- Inverter device type
- Inverter serial number
- Type and number of connected PV modules
- Blink code or display message of the inverter
- Optional equipment (e.g. communication products)

SMA Solar Technology AG

Sonnenallee 1

34266 Niestetal, Germany

www.SMA.de

SMA Serviceline

Inverters +49 561 9522 1499

Communication: +49 561 9522 2499

Fax: +49 561 9522 4699

E-Mail: Serviceline@SMA.de

The information contained in this document is the property of SMA Solar Technology AG. Publishing its content, either partially or in full, requires the written permission of SMA Solar Technology AG. Any internal company copying of the document for the purposes of evaluating the product or its correct implementation is allowed and does not require permission.

Exclusion of liability

The general terms and conditions of delivery of SMA Solar Technology AG shall apply.

The content of these documents is continually checked and amended, where necessary. However, discrepancies cannot be excluded. No guarantee is made for the completeness of these documents. The latest version is available online at www.SMA.de or from the usual sales channels.

Guarantee or liability claims for damages of any kind are excluded if they are caused by one or more of the following:

- Damages during transportation
- Improper or inappropriate use of the product
- Operating the product in an unintended environment
- Operating the product whilst ignoring relevant, statutory safety regulations in the deployment location
- Ignoring safety warnings and instructions contained in all documents relevant to the product
- Operating the product under incorrect safety or protection conditions
- Altering the product or supplied software without authority
- The product malfunctions due to operating attached or neighboring devices beyond statutory limit values
- In case of unforeseen calamity or force majeure

The use of supplied software produced by SMA Solar Technology AG is subject to the following conditions:

- SMA Solar Technology AG rejects any liability for direct or indirect damages arising from the use of software developed by SMA Solar Technology AG. This also applies to the provision or non-provision of support activities.
- Supplied software not developed by SMA Solar Technology AG is subject to the respective licensing and liability agreements of the manufacturer.

SMA Factory Warranty

The current guarantee conditions come enclosed with your device. These are also available online at www.SMA.de and can be downloaded or are available on paper from the usual sales channels if required.

Trademarks

All trademarks are recognized even if these are not marked separately. Missing designations do not mean that a product or brand is not a registered trademark.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SMA Solar Technology AG is under license.

SMA Solar Technology AG

Sonnenallee 1

34266 Niestetal

Germany

Tel. +49 561 9522-0

Fax +49 561 9522-100

www.SMA.de

E-Mail: info@SMA.de

© 2004 to 2011 SMA Solar Technology AG. All rights reserved

SMA Solar Technology

www.SMA-Solar.com

SMA Solar Technology AG

www.SMA.de

SMA America, LLC

www.SMA-America.com

SMA Technology Australia Pty., Ltd.

www.SMA-Australia.com.au

SMA Benelux SPRL

www.SMA-Benelux.com

SMA Beijing Commercial Co., Ltd.

www.SMA-China.com

SMA Czech Republic s.r.o.

www.SMA-Czech.com

SMA France S.A.S.

www.SMA-France.com

SMA Hellas AE

www.SMA-Hellas.com

SMA Ibérica Tecnología Solar, S.L.

www.SMA-Iberica.com

SMA Italia S.r.l.

www.SMA-Italia.com

SMA Technology Korea Co., Ltd.

www.SMA-Korea.com

