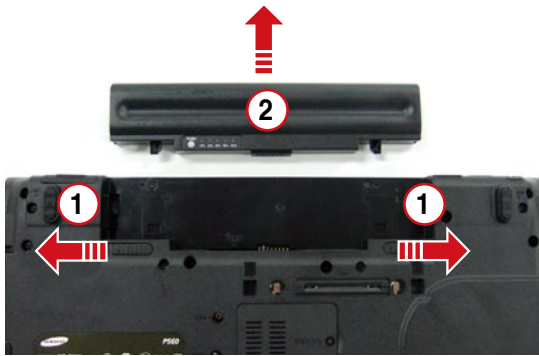

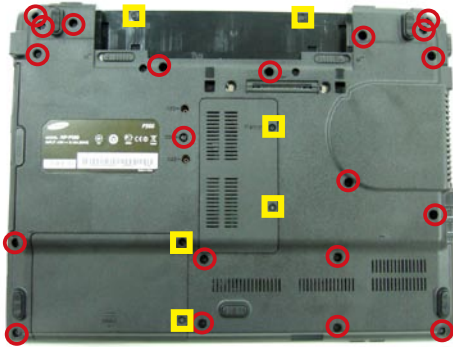



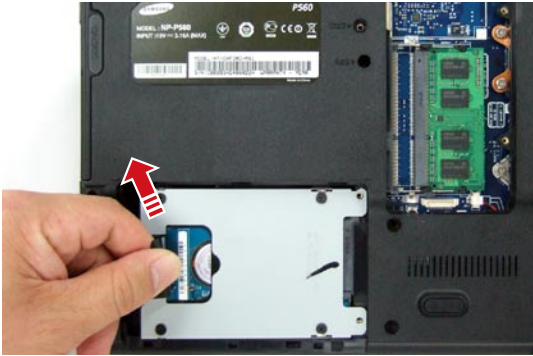


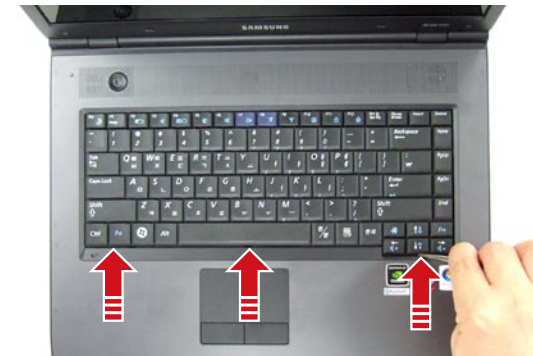
3. Disassembly and Reassembly

3-1. Disassembly and Reassembly P560

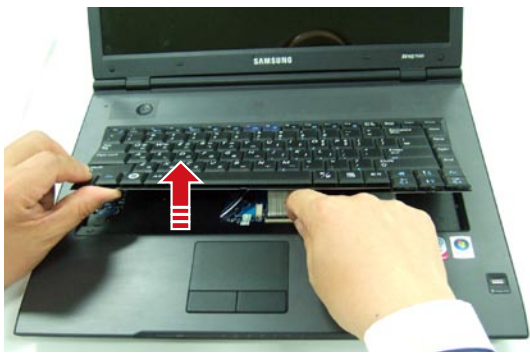
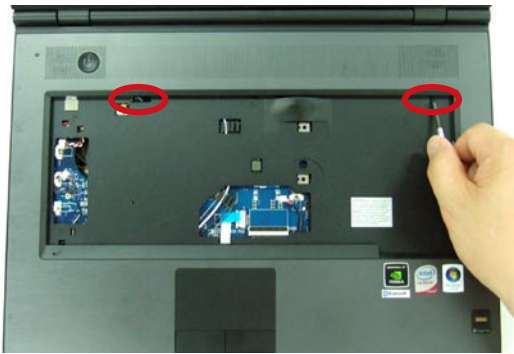
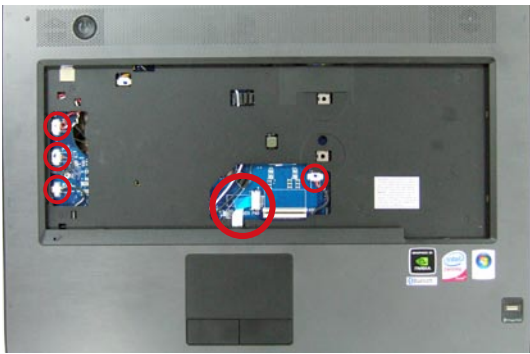

[Caution] Attention to red sentence.

Part	Picture	Description
Main System		1. Make sure to separate the AC adapter and battery before disassembling the system. 2. Slide the knob all the way to the end in the direction of the arrows (1) and push the battery in the direction of the arrows (2).
		3. If you push the battery upwards, the battery is separated.
		4. remove the screws from the bottom. - Screw Red (○): M2.6 X L8, Black (20EA) Yellow (□): M2 X L4, Black (6EA)
		5. Remove DOOR-HDD and DOOR-MEMORY.

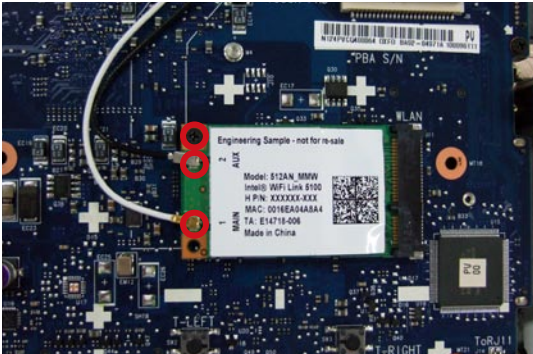
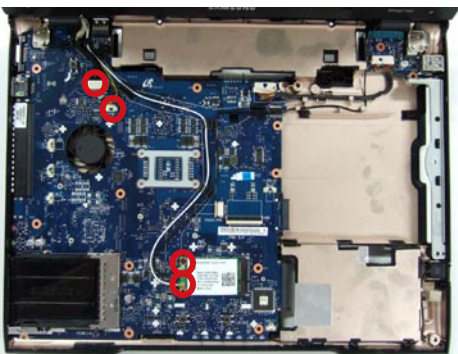
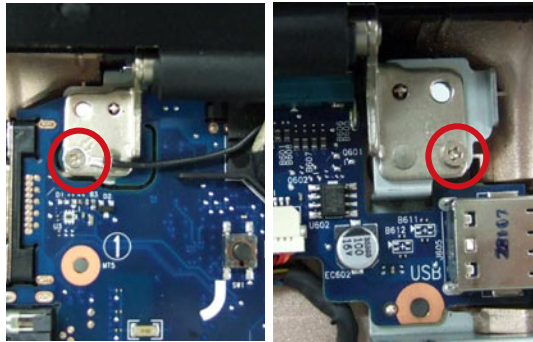
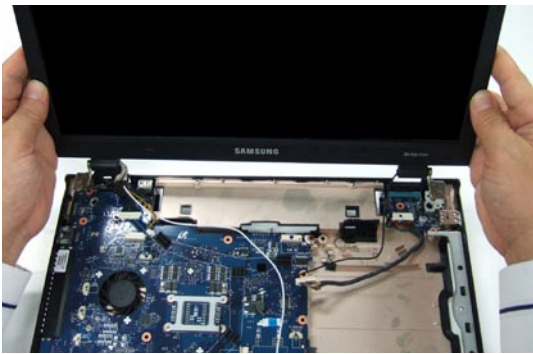
3. Disassembly and Reassembly

Part	Picture	Description
Main System		6. HDD is under the DOOR-HDD. Seizing INSULATOR, lift up HDD by 70°. [Caution] Do not give too strong force when lifting up HDD. Disassemble HDD before upside-downing System.
		7. Separate the ODD like picture.
		8. Remove KBD and BOTTOM fastening Screw. Remove ODD and BOTTOM fastening Screw. M2 X L3, Black (1EA) M2 X L6, Silver (2EA)
		9. By tweezers push Hook to outer side then lift up Keyboard [Caution] Be careful not to make a Scratch on Housing-Top.


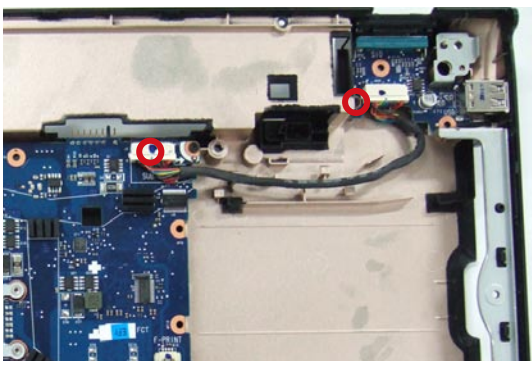
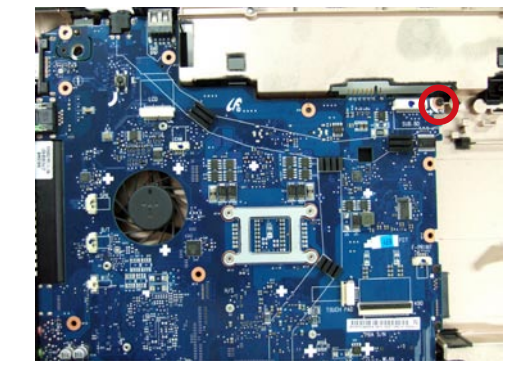
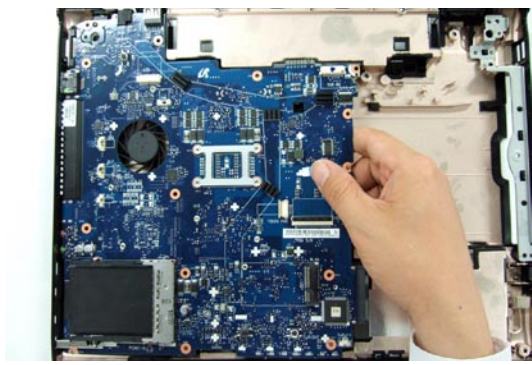
3. Disassembly and Reassembly

Part	Picture	Description
Main System		10. Lifting up Keyboard and unfasten Touchpad-FFC.
		11. Put tweezers on each recess of Cap-Top and hold up Cap-Top. [Caution] Don't leave mark or Scratch.
		12. Remove FFC-touchpad, SPEAKER CONN., MIC CONN., BLUETOOTH CONN. and F-PRINT CONN from main board.
		13. Disassemble Top Ass'y.


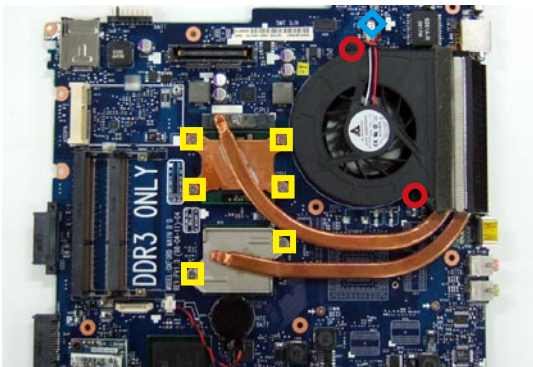

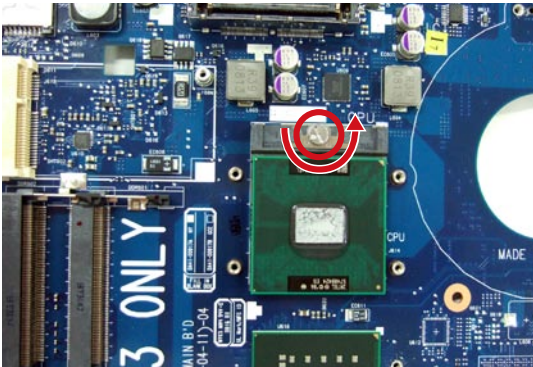
3. Disassembly and Reassembly

Part	Picture	Description
Main System		14. Unfasten Antenna Cable on W/L card then remove a screw and Module. [Aux(Black)] * Golan card : 2 terminals Kedron card : 3 terminals 1. White, Main 3. Gray, MIMO (* Option) 2. Black, Aux
		15. Disassemble CAMERA-CABLE, LCD CABLEW/L and ANTENNA-CABLE from Housing-Top.
		16. Remove two screws fastening HINGE and TOP. M2 X L6 (2EA)
		17. Elevate LCD Assy and disassemble from system part.

3. Disassembly and Reassembly


Part	Picture	Description
Main System		18. Remove MODEM CONN. and disassemble MODEM Ass'y.
		19. Disconnect MAIN BOARD and SUB PBA CONN., remove SUB PBA assembling screw, and disconnect SUB PBA from BTM. M2 X L4, Black (1EA)
		20. Remove the BTM and MAIN BOARD assembling screws. M2 X L4, Black (1EA)
		21. Disconnect MAIN BOARD from BTM.

3. Disassembly and Reassembly

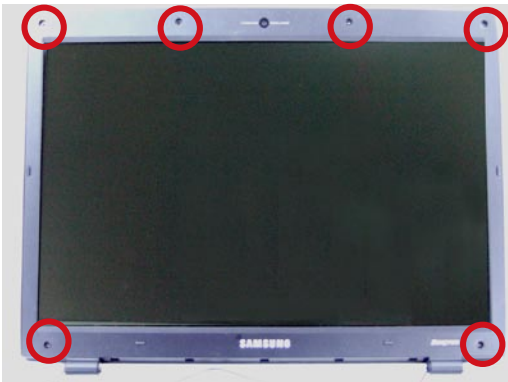



Part	Picture	Description
Main System		22. Remove MDC assembling screw, disconnect CONN., and lift up MDC PBA. M2 X L4 (1EA)
		23. Remove RHE assembling screws (2EA) on MAIN BOARD. Remove screws (4EA) which connect RHE and CPU, and remove screws (2EA) which connect RHE and MEH. Remove RHE FAN CABLE from MAIN BOARD. (●) M2 X L3 (2EA) (■) Special (6EA) (◆) RHE FAN CABLE
		24. Remove RHE module.
		25. Turn the CPU socket Screw by Counter clock wise 180 deg.

- 이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다 -
- This Document can not be used without Samsung's authorization -


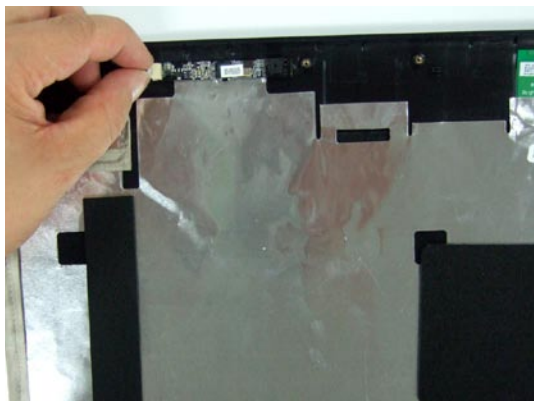
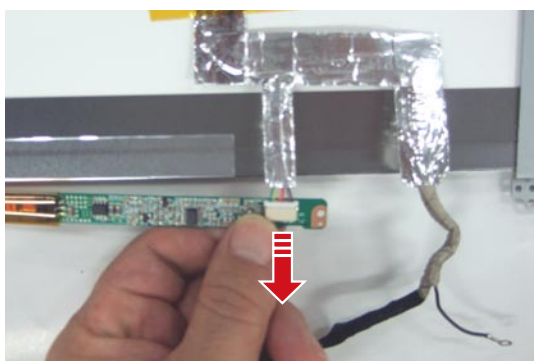

3. Disassembly and Reassembly

Part	Picture	Description
Main System		26. Lift up CPU from socket.

3. Disassembly and Reassembly

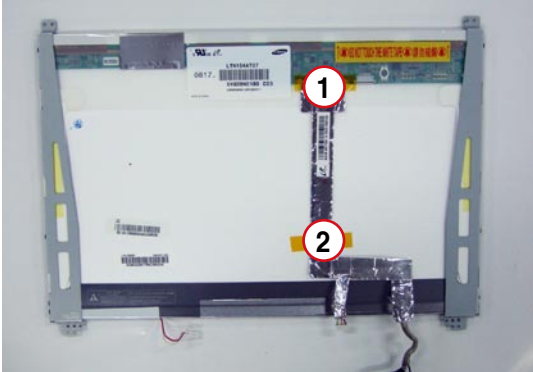

Part	Picture	Description
LCD Ass'y		27. Take off Rubber-LCD_Caps and remove screws (6EA). M2 X L6 (6EA) [Caution] Be careful not to make scratch.
		28. Put nails to the GAP between LCD-Front and LCD-Panel. Lift up LCD-Front upper, lower, left and right side. [Caution] Too strong force to disassemble can make LCD-Front broken.
		29. Remove screws. (△)M2 X L3 (1EA) (○)M2 X L6 (6EA)
		30. Remove HINGE and LCD-PANEL from LCD-Assy.

3. Disassembly and Reassembly

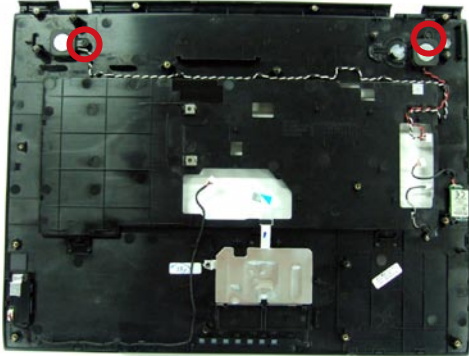
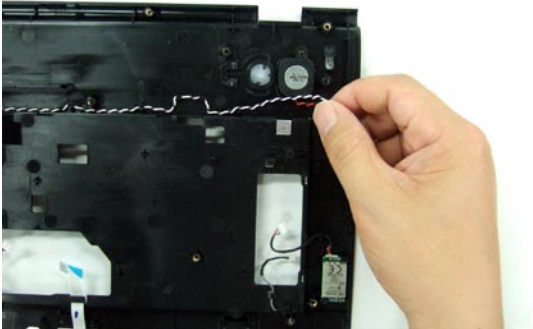

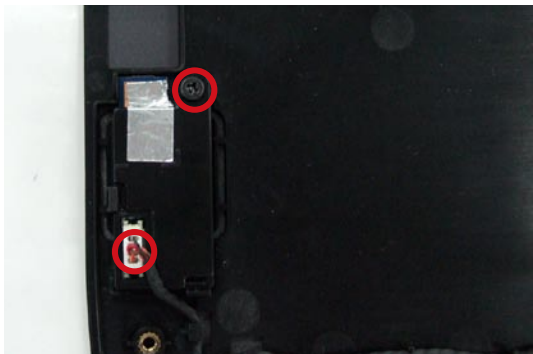
Part	Picture	Description
LCD Ass'y		31. Disassemble UNIT-BRKT_LCD_UPPER from UNIT-HOUSING_LCD_BACK.
		32. Disconnect CAMERA MODULE and its CABLE.
		33. Disconnect LCD CABLE and INVERTER BD.
		34. Disconnect INVERTER BD and LCD CABLE.

- 이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다 -
- This Document can not be used without Samsung's authorization -

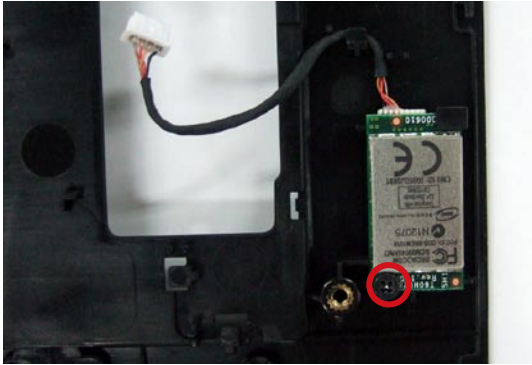
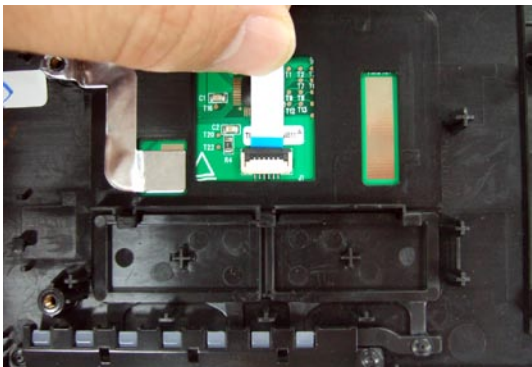

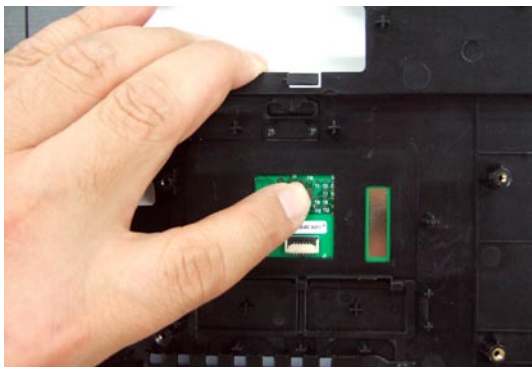
3. Disassembly and Reassembly

Part	Picture	Description
LCD Ass'y		35. Take away tapes in circle. (2EA)
		36. Pull out the LCD Cable to the arrow direction.

3. Disassembly and Reassembly

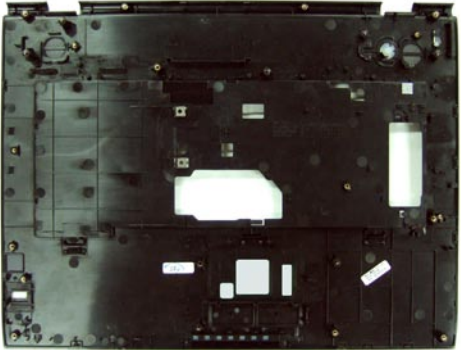
Part	Picture	Description
Top Ass'y		37. Remove Speaker Screw. M2 X L4 (2EA)
		38. Seperate Speaker-Cable.
		39. Seperate MIC.
		40. Remove Finger Print CONN. and screw. Remove SHIELD TAPE and Finger Print COVER, and then remove Finger Print PBA. M2 X L4 (1EA)

3. Disassembly and Reassembly

Part	Picture	Description
Top Ass'y		41. Remove Bluetooth assembling screw and Bluetooth Ass'y. M2 X L4 (1EA)
		42. Seperate Touchpad FFC.
		43. Seperate Gasket Touchpad.
		44. Press Bottom side of Touchpad and seperate Touchpad-Board.

- 이 문서는 삼성전자의 기술 자산으로 승인자만이 사용할 수 있습니다 -
- This Document can not be used without Samsung's authorization -

3. Disassembly and Reassembly

Part	Picture	Description
Top Ass'y		45. Done.