

User Manual



RSA3303B, RSA3308B, & RSA3408B Option 28 TD-SCDMA Analysis Software

071-2404-00

This document applies to firmware version 4.0
and above.

www.tektronix.com

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supercedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX and TEK are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc.
14200 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tektronix.com to find contacts in your area.

Warranty 2

Tektronix warrants that this product will be free from defects in materials and workmanship for a period of one (1) year from the date of shipment. If any such product proves defective during this warranty period, Tektronix, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product. Batteries are excluded from this warranty. Parts, modules and replacement products used by Tektronix for warranty work may be new or reconditioned to like new performance. All replaced parts, modules and products become the property of Tektronix.

In order to obtain service under this warranty, Customer must notify Tektronix of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by Tektronix, shipping charges prepaid, and with a copy of customer proof of purchase. Tektronix shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Tektronix service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Tektronix shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than Tektronix representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; c) to repair any damage or malfunction caused by the use of non-Tektronix supplies; or d) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY TEKTRONIX WITH RESPECT TO THE PRODUCT IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. TEKTRONIX AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TEKTRONIX' S RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. TEKTRONIX AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TEKTRONIX OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES

Table of Contents

Preface	v
About This Manual	v
Related Manuals	vi
Getting Started	
Product Description	1-1
Operating Basics	
Functional Overview	2-1
Accessing a Measurement Function	2-2
Versatile Display Capability	2-2
TD-SCDMA Measurements	2-5
Subframe Summary	2-6
Modulation Accuracy Measurement	2-9
Code Domain Power Measurement	2-23
Channel Power Measurement	2-33
OBW Measurement	2-36
ACLR Measurement	2-39
Spectrum Emission Mask Measurement	2-43
Timeslot Summary	2-47
Transmit On/Off Mask	2-51
Symbol Table Display	2-55
Intermodulation Measurement	2-58
Acquisition and Analysis Parameters for Demodulation Measurements	2-61
Measurement Parameters for Demodulation Measurements	2-62
Editing the Measurement Limits	2-65
Using the Measurement Limits Editor	2-65
Saving and Loading Measurement Limits	2-71
Measurement Limit Defaults	2-72
Appendices	
Appendix A: Setting Range	A-1
Index	

List of Figures

Figure 2-1: Menu diagram showing measurement functions available in Option 28	2-1
Figure 2-2: Measurements of same domain interact	2-3
Figure 2-3: Instrument capable of displaying multiple domains ...	2-4
Figure 2-4: Subframe summary	2-6
Figure 2-5: Modulation accuracy measurement	2-9
Figure 2-6: Comp. constellation display	2-12
Figure 2-7: Symbol constellation display	2-14
Figure 2-8: Symbol EVM display	2-16
Figure 2-9: MagErr display	2-18
Figure 2-10: PhaseErr display	2-20
Figure 2-11: Code domain power measurement	2-23
Figure 2-12: Code domain power display	2-26
Figure 2-13: CDP by subframe display	2-28
Figure 2-14: CDP by symbol display	2-29
Figure 2-15: CDP codogram display	2-31
Figure 2-16: Channel power measurement	2-33
Figure 2-17: OBW measurement	2-36
Figure 2-18: ACLR measurement	2-39
Figure 2-19: Spectrum emission mask (offset from channel) measurement	2-43
Figure 2-20: Spectrum emission mask (inband spurious) measurement	2-44
Figure 2-21: Timeslot summary	2-47
Figure 2-22: Timeslot summary, display zoomed	2-50
Figure 2-23: Transmit on/off mask	2-51
Figure 2-24: Zoom to Max Mid-Ramp Power selected	2-54
Figure 2-25: Symbol table display	2-55
Figure 2-26: Intermodulation measurement	2-58
Figure 2-27: Measurement limits editor	2-66
Figure 2-28: Spectrum emission mask measurement limits editor .	2-69

List of Tables

Table 2-1: Global demodulation timing parameter settings	2-61
Table 2-2: Global demodulation measurement parameter settings	2-62
Table 2-3: Measurement limits items	2-66
Table 2-4: Measurement limit items for the spectrum emission mask measurements	2-69
Table 2-5: Downlink main table default limits	2-72
Table 2-6: Uplink main table default limits	2-72
Table 2-7: Downlink SEM offset from channel default limits	2-73
Table 2-8: Uplink SEM offset from channel default limits	2-73
Table 2-9: Downlink SEM inband spurious default limits	2-74
Table 2-10: Uplink SEM inband spurious default limits	2-74
Table A-1: Display format and scale	A-1

Preface

This manual provides operating instructions for the RSA3303B, RSA3308B, and RSA3408B Real-Time Spectrum Analyzer Option 28 TD-SCDMA (Time Division Synchronous Code Division Multiple Access) analysis software.

Option 28 supports TD-SCDMA as described in the 3GPP Release 4 LCR Uplink/Downlink (3GPP TS25.142, TS25.102) standard.

This manual supports the following instruments:

- RSA3303B Option 28
- RSA3308B Option 28
- RSA3408B Option 28

About This Manual

This manual is composed of the following chapters:

- *Getting Started* provides a product description.
- *Operating Basics* describes the measurement functions added by the option and explains how to set up the analyzer for each measurement mode.
- *Appendices* provides additional information about default settings.

The analyzer uses Microsoft Windows XP as the operating system. This manual does not describe common usage of Windows XP. Refer to your Windows manuals as necessary.

Related Manuals

The following related documents are also available:

- *RSA3303B & RSA3308B User Manual*
(Standard accessory; Tektronix part number 071-2363-XX)
RSA3408B User Manual
(Standard accessory; Tektronix part number 071-2364-XX)
Describes how to install the analyzer and how to work with the menus, and details the standard functions.
- *RSA3000B Series Programmer Manual*
(Standard accessory; PDF, Tektronix part number 071-2382-XX)
Contains an alphabetical listing of the programming commands and other information related to controlling the analyzer over the GPIB interface.

PDF Manual The *RSA3000B Series Programmer Manual* (PDF only) is included in the Documents CD (Tektronix part number 063-4089-XX).



Getting Started

Getting Started

This chapter provides an overview of the capabilities added to the RSA3303B, RSA3308B, and RSA3408B with Option 28.

Product Description

The TD-SCDMA standard contains elements of frequency division, time division, and code division multiple access technologies. Combining these technologies allows the reuse of frequency channels for uplink and downlink communication. A single frequency channel is shared between uplink and downlink, and among users. The use of a single channel is accomplished by allocating timeslots to each transmit direction and to each user.

The RSA3303B, RSA3308B, and RSA3408B Real-Time Spectrum Analyzer Option 28 is an analysis software option that adds transmitter measurement capability for TD-SCDMA uplink and downlink (3GPP TDD LCR) to the analyzer.

You can perform the following TD-SCDMA measurements:

- Demodulation measurements
 - Subframe summary
 - Modulation accuracy
 - Code domain power
 - Timeslot summary
 - Transmit on/off mask
 - Symbol table
- RF measurements
 - Channel power
 - OBW (occupied bandwidth)
 - ACLR (adjacent channel leakage ratio)
 - Spectrum emission mask
 - Intermodulation

In addition, the option provides user-defined measurement limits for many measurement results. Using these measurement limits, you can easily check that the input signal meets the specification.



Operating Basics

Functional Overview

This chapter provides an overview of the Option 28 measurement functions.

Figure 2-1 shows the measurement functions and how to access each measurement function from the front-panel menu key.

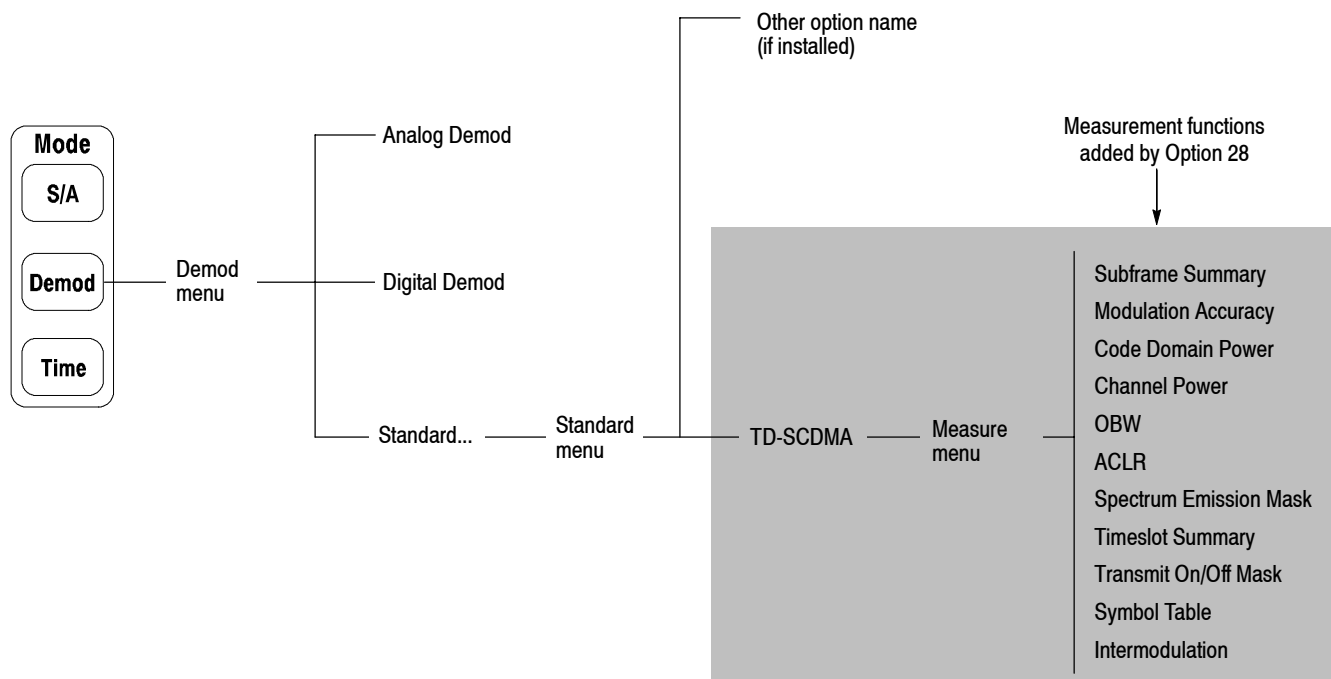


Figure 2-1: Menu diagram showing measurement functions available in Option 28

Accessing a Measurement Function

All of the measurement functions available in Option 28 can be selected from the Demod (demodulation) mode.

Perform the following procedure to access any of the measurement functions:

1. Press the **Demod** menu key to open the Demod menu.
2. Press the **Standard...** side key to open the Standard menu.
3. Press the **TD-SCDMA** side key to select the TD-SCDMA standard and open the Measure menu for the standard.
4. Press a side key to select the measurement that you want to perform. If the desired measurement is not displayed on the current Measure menu, press the **Go to page** side key to go to the next Measure menu page.
5. If needed, set the frequency, span, and amplitude of the input signal. Refer to your instrument user manual for information on how to set frequency, span, and amplitude.

NOTE. Most TD-SCDMA measurements are optimized for a 2 MHz or 5 MHz span.

Versatile Display Capability

The display of the RSA3300B series and RSA3408B analyzer with Option 28 provide you with a versatile tool for viewing different aspects of a measurement domain or viewing two different measurement domains.

When two measurements of the same domain are displayed in the subview and mainview (such as two views from the modulation accuracy domain), the measurement markers are linked together.

Placing a measurement view of one domain in the subview and a measurement display of another domain in the mainview gives you the ability to monitor both at the same time.

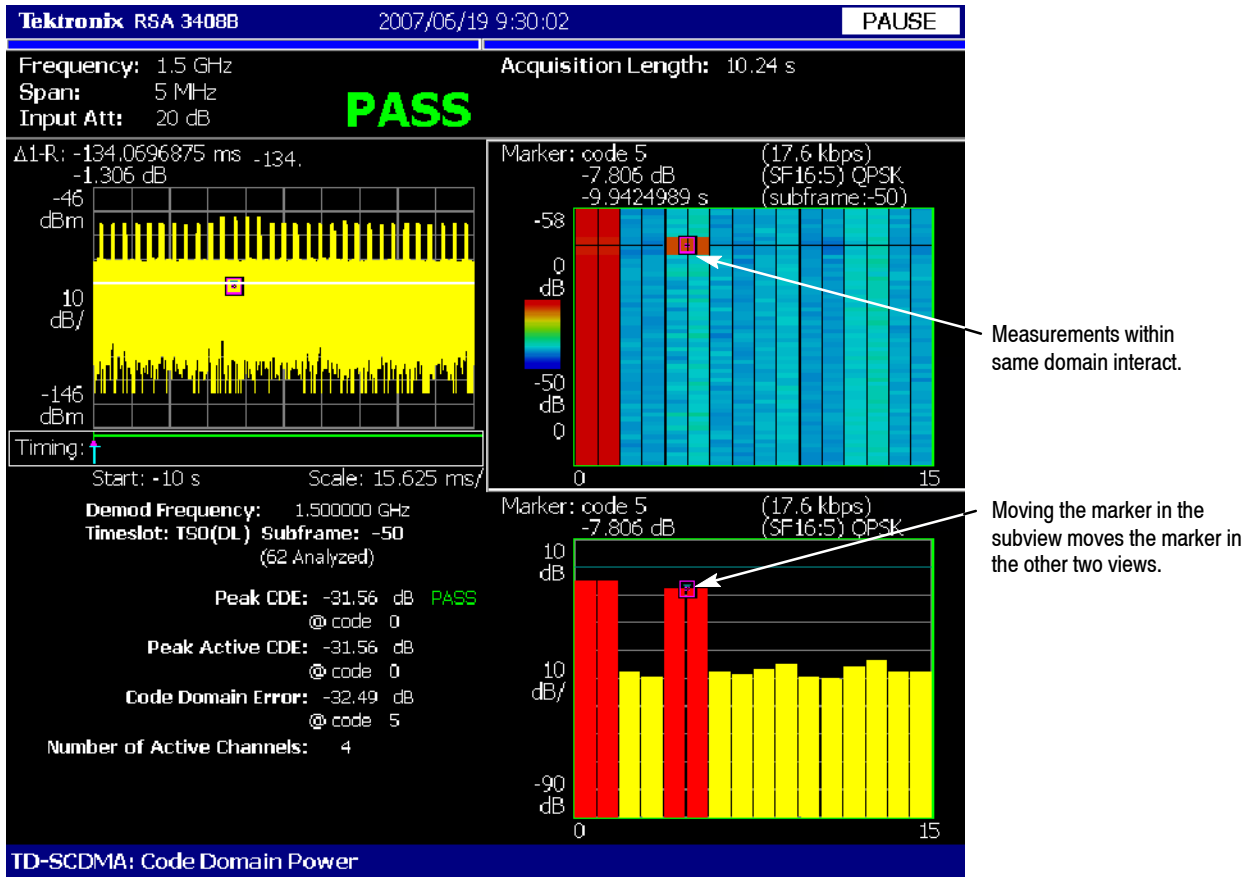


Figure 2-2: Measurements of same domain interact

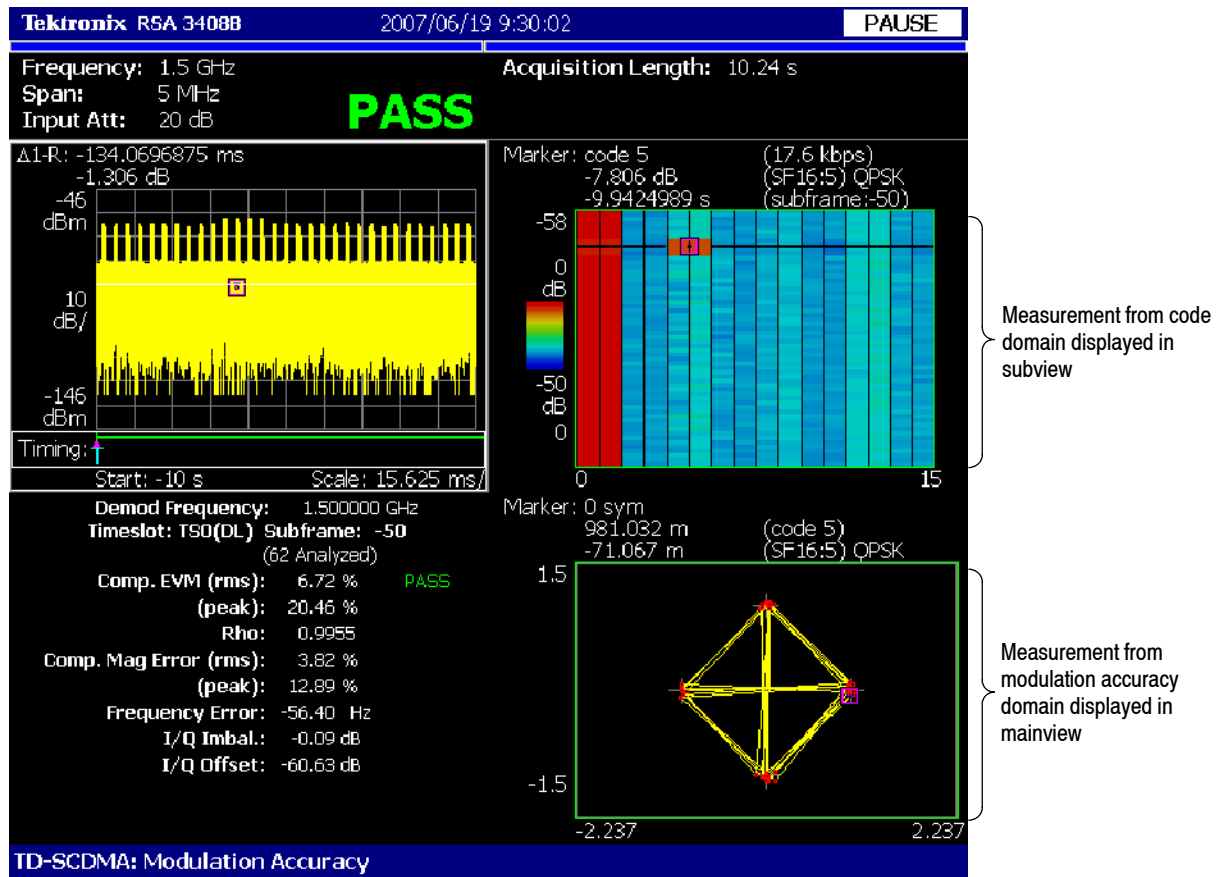


Figure 2-3: Instrument capable of displaying multiple domains

TD-SCDMA Measurements

This section describes the functions and features of the TD-SCDMA measurements. Each measurement description contains general information about the measurement, descriptions of the measurement displays, and functions available through menu selections.

The information is divided into the following subsections:


- Subframe summary
- Modulation accuracy
- Code domain power
- Channel power
- OBW (occupied bandwidth)
- ACLR (adjacent channel leakage ratio)
- Spectrum emission mask (SEM)
- Timeslot summary
- Transmit on/off mask
- Symbol table
- Intermodulation

NOTE. *If you are not familiar with the operation of the analyzer, refer to your instrument user manual before reading this section.*

Subframe Summary

The subframe summary measurement displays a power versus time graph of the selected subframe, along with all general parameters discovered while analyzing the subframe. The subframe summary waveform is available whenever subframe timing can be determined using either DwPts or an external subframe trigger as a time reference. Figure 2-4 shows an example of the subframe summary.

The measured values for subframe are described the section *Subframe Measurement Readouts* beginning on page 2-8.

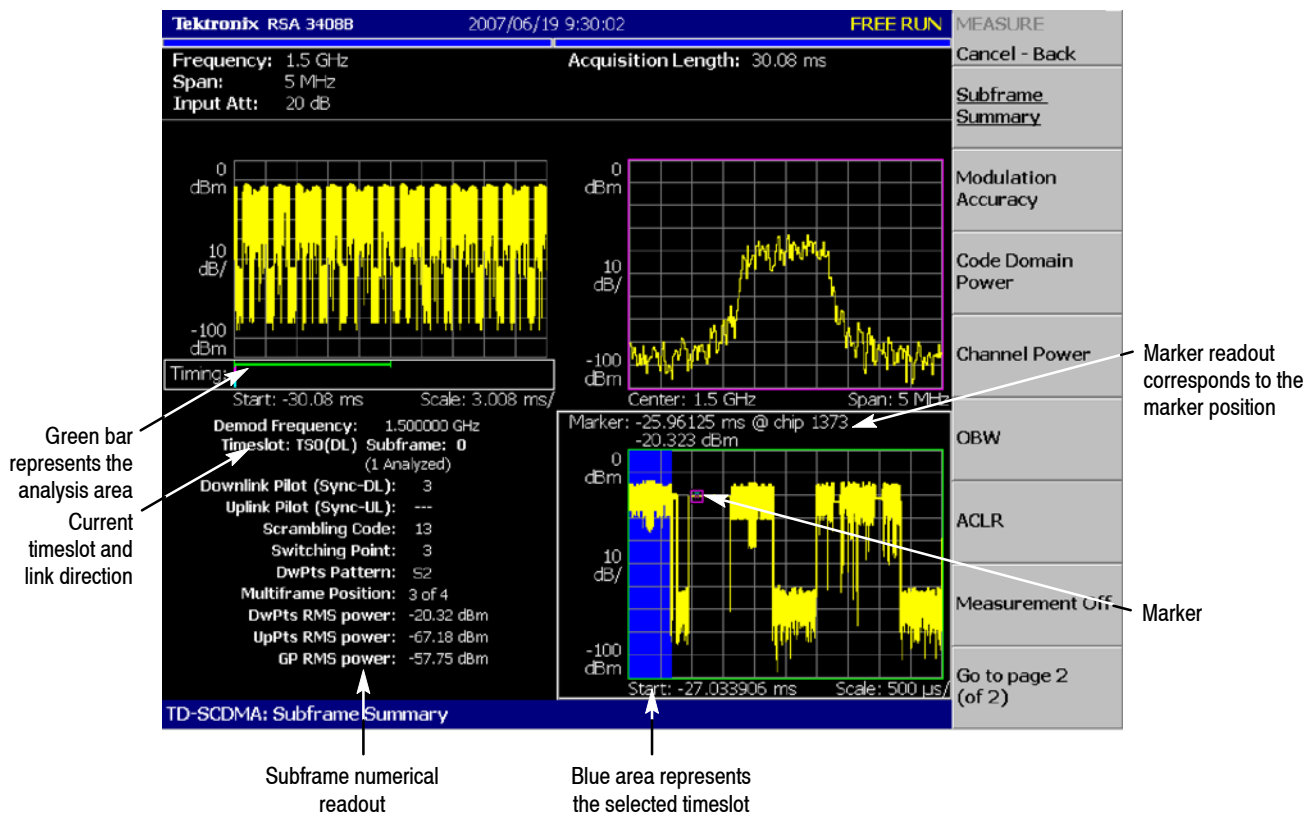

NOTE: The subframe marker is linked to overview window. Turn on the overview marker to see the position of the subframe within the overall acquisition.

Figure 2-4: Subframe summary

Display Elements

The following information is shown in the subframe summary measurement display:

- **Overview:** The overview display area can contain the power versus time or spectrogram measurement displays.

- **Subview:** The subview display area can contain any of the TD-SCDMA demodulation measurements or the spectrum display.
- **Mainview:** The mainview display area displays only the power versus time graph.

To change the contents in each of the views, use the View Define menu. Refer to *Changing the View Contents* on page 2-7 for more information.

Setting the Acquisition and Analysis Parameters

You can set acquisition and analysis parameters for the subframe summary acquisition by using the Acquisition/Analysis menu. Press the **Acquisition/Analysis** key to open the menu. Refer to *Acquisition and Analysis Parameters for Demodulation Measurements*, beginning on page 2-61, for a description of the timing parameter settings.

NOTE. *The acquisition and analysis parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements.*

Setting the Measurement Parameters

You can set the measurement parameters for the subframe summary measurements by using the Meas Setup menu. Press the **Meas Setup** key to open the menu. Refer to *Measurement Parameters for Demodulation Measurements*, beginning on page 2-62, for a description of the measurement parameters.

NOTE. *The measurement parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements. Most of the modulation parameters and analysis control settings do not take effect until the next run or analysis cycle.*

Changing the View Contents

You can change the view contents in the overview and subview using the View Define menu. Press the View: **Define** key to open the menu.

- **Show Views:** Selects the view style on the screen. You can select Single or Multi. Multi shows all three views and Single expands the display to only show the view currently selected. Press the **Select** key to change the selected view.
- **Overview Content...:** The overview content display can be changed to display either the Spectrogram or Waveform (power versus time).
- **Subview Content...:** The subview content display can be changed to display any of the TD-SCDMA demodulation measurements or the spectrum display.

- **Mainview Content...**: The mainview content display cannot be changed from Subframe summary.
- **Menu Off**: Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

Scale and Format in the Mainview

You can set the scale for the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude)**: Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale (s)**: Sets the scale of the horizontal axis (number of chips or symbols).
- **Horizontal Start (s)**: Sets the chip number or symbol number of the first (left) value of the horizontal axis.
- **Vertical Scale (dB)**: Sets the scale of the vertical axis.
- **Vertical Stop (dBm)**: Sets the maximum (top) value of the vertical axis.
- **Full Scale**: Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Stop)**: Sets the step size (amount per click of the general purpose knob) for changes to the Horizontal Start or Vertical Stop settings.

The step size menu choices only display when selecting the Horizontal Start or Vertical Stop menus.


Subframe Measurement Readouts

This section describes the measurement readouts displayed in the mainview of the subframe measurement.

Readout	Description
Downlink Pilot (Sync-DL)	The code number of the downlink pilot pattern.
Uplink Pilot (Sync-UL)	The code number of the uplink pilot pattern.
Scrambling Code	The scrambling code.
Switching Point	The timeslot switching point.
DwPts Pattern	The rotation pattern (None, S1, S2) of the downlink pilot.
Multiframe Position	The subframe position (1 to 4) within a multiframe.
DwPts RMS power	The RMS power of the downlink pilot.
UpPts RMS power	The RMS power of the uplink pilot.
GP RMS power	The RMS power in the subframe guard period.

Modulation Accuracy Measurement

The modulation accuracy measurement measures EVM (Error Vector Magnitude), Rho, magnitude error, phase error, frequency error, I/Q imbalance, and I/Q offset. Figure 2-5 shows an example of the modulation accuracy measurement.

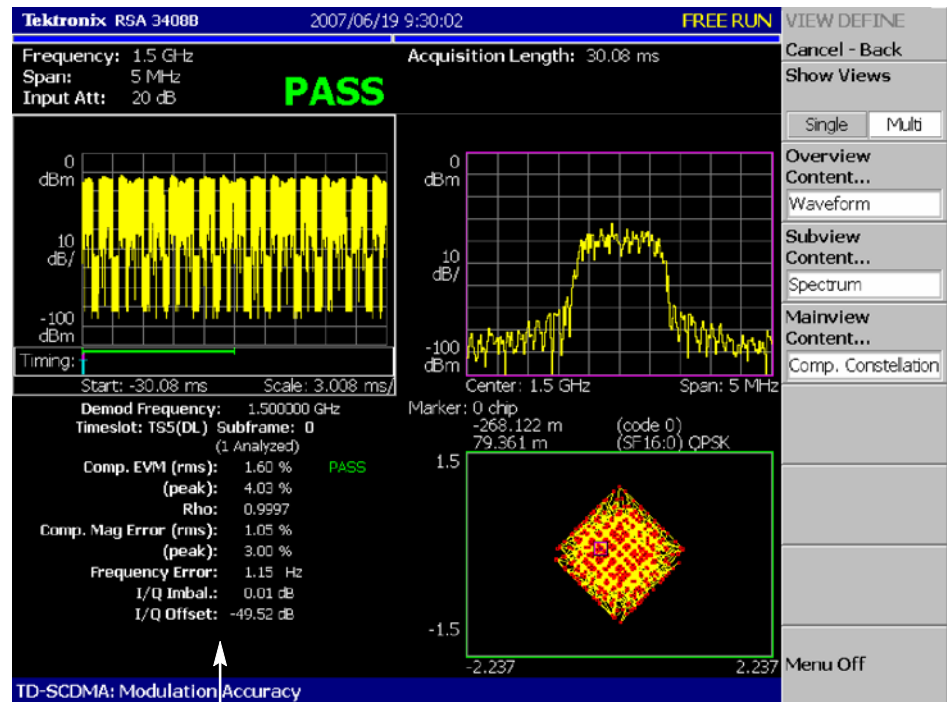

Condensed measurement results displayed when mainview is not selected

Figure 2-5: Modulation accuracy measurement

Display Elements

The following elements are shown in the modulation accuracy measurement display:

- **Overview:** The overview display area can contain the power versus time or spectrogram measurement displays.
- **Subview:** The subview display area can contain any of the TD-SCDMA demodulation measurements or the spectrum display. Measurement results typically associated with a measurement are not displayed when the measurement is displayed in the subview.
- **Mainview:** The mainview display area can contain one of the modulation accuracy related measurements along with a condensed set of numerical

measurement results with a Pass or Fail message (determined by the Limits settings) for each measurement result. If all measurements pass, PASS is displayed at the top of the screen. If any measurement fails, FAIL is displayed at the top of the screen.

To change the contents in each of the views, use the View Define menu. Refer to *Changing the View Contents* on page 2-10 for more information.

Setting the Timing Parameters

You can set acquisition and analysis parameters for the modulation accuracy acquisition by using the Acquisition/Analysis menu. Press the **Acquisition/Analysis** key to open the menu. Refer to *Acquisition and Analysis Parameters for Demodulation Measurements*, beginning on page 2-61, for a description of the timing parameter settings.

NOTE. *The acquisition and analysis parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements.*

Setting the Measurement Parameters

You can set the measurement parameters for the modulation accuracy measurements by using the Meas Setup menu. Press the **Meas Setup** key to open the menu. Refer to *Measurement Parameters for Demodulation Measurements*, beginning on page 2-62, for a description of the measurement parameters.

NOTE. *The measurement parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements. Most of the modulation parameters and analysis control settings do not take effect until the next run or analysis cycle.*

Changing the View Contents

You can change the view contents in the overview, subview, and mainview using the View Define menu. Press the View: **Define** to open the menu.

- **Show Views:** Selects the view style on the screen. You can select Single or Multi. Multi shows all three views and Single expands the display to only show the view currently selected. Press the View: **Select** key to change the selected view.
- **Overview Content...:** The overview content display can be changed to display either the Spectrogram or Waveform (power versus time).
- **Subview Content...:** The subview content display can be changed to display any of the TD-SCDMA demodulation measurements or the spectrum display.

- **Mainview Content...:** The mainview content display can be changed to display one of the modulation accuracy related measurements with its numerical measurement results. You can select Composite Constellation, Symbol Constellation, Symbol Error Vector Magnitude, Magnitude Error, or Phase Error.

When selecting the mainview, the expanded numerical measurement results are displayed. (The overview content display is removed.)

A Pass or Fail message for each measurement is displayed if limit testing is turned on in the Limits menu. If all measurements pass, PASS is displayed at the top of the screen. If any measurement fails, FAIL is displayed at the top of the screen.

Refer to *Scale and Format in the Mainview*, beginning on page 2-12, for more information about the mainview content selections.

- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

Scale and Format in the Mainview

This section describes the scale settings and display format in the mainview.

Comp. Constellation Display. When you select Mainview Content from the View Define menu and then select Comp. Constellation from the Mainview Content submenu, an IQ rectangular graph is displayed showing the I/Q values for all chips in the current timeslot, including midamble. See Figure 2-6.

The measured values for modulation accuracy are described the section *Modulation Accuracy Measurement Readouts* beginning on page 2-21.

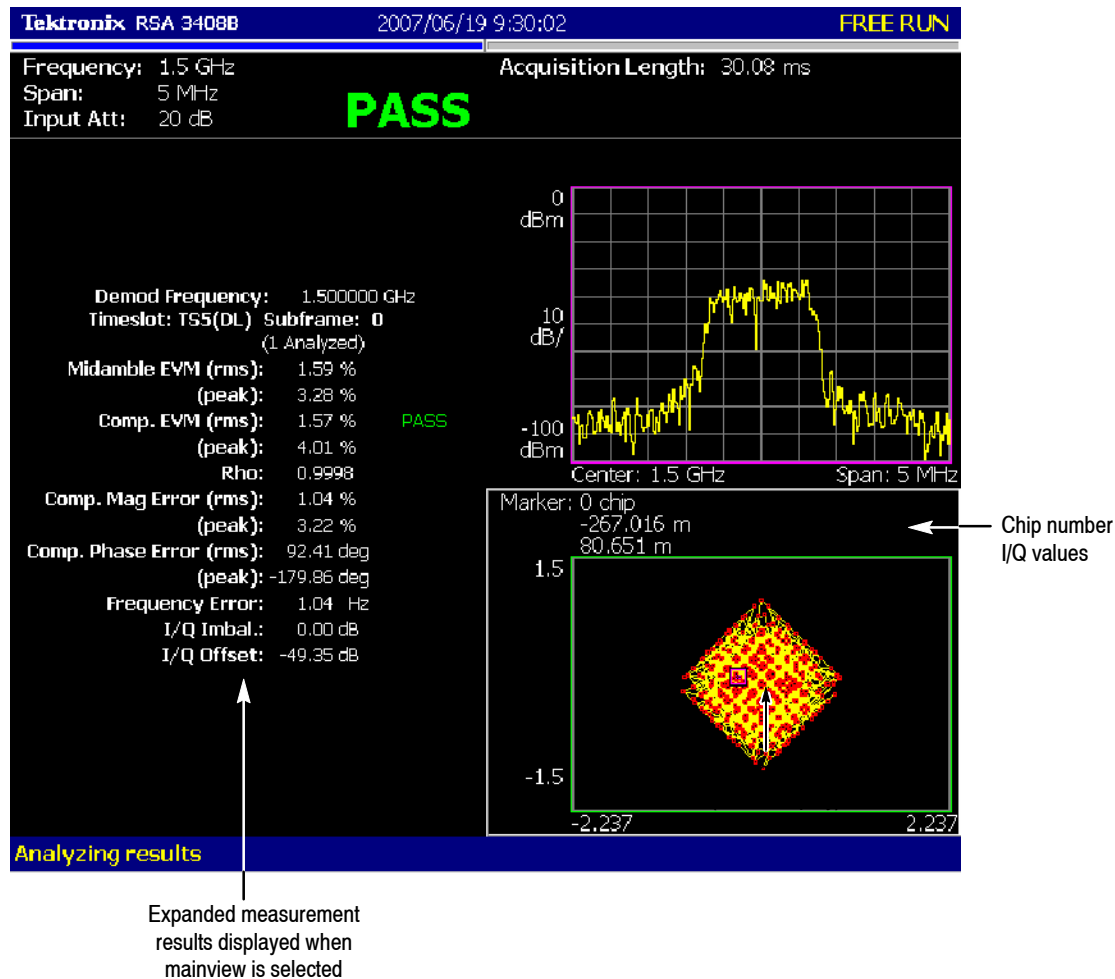


Figure 2-6: Comp. constellation display

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Measurement Content...:** Selects vector or constellation display.

Vector: Selects vector display. A signal represented with phase and amplitude is displayed in rectangular (I and Q) coordinates. Each red point indicates a symbol position on the measured signal and the yellow trace indicates the locus of the signal between symbols.

Constellation: Selects constellation display. It is the same as the vector display, except that only symbols of the measured signal are indicated in red, and the locus between symbols is not shown.

NOTE. *I and Q signals are normalized to prevent the scale from changing when signal attenuation changes.*

Symbol Constellation Display. When you select Mainview Content from the View Define menu and then select Symbol Constellation from the Mainview Content submenu, an IQ rectangular graph is displayed showing the constellation for Data1 and Data2 symbols selected by the currently selected code (set in the Meas Setup menu). See Figure 2-7.

The measured values for modulation accuracy are described the section *Modulation Accuracy Measurement Readouts* beginning on page 2-21.

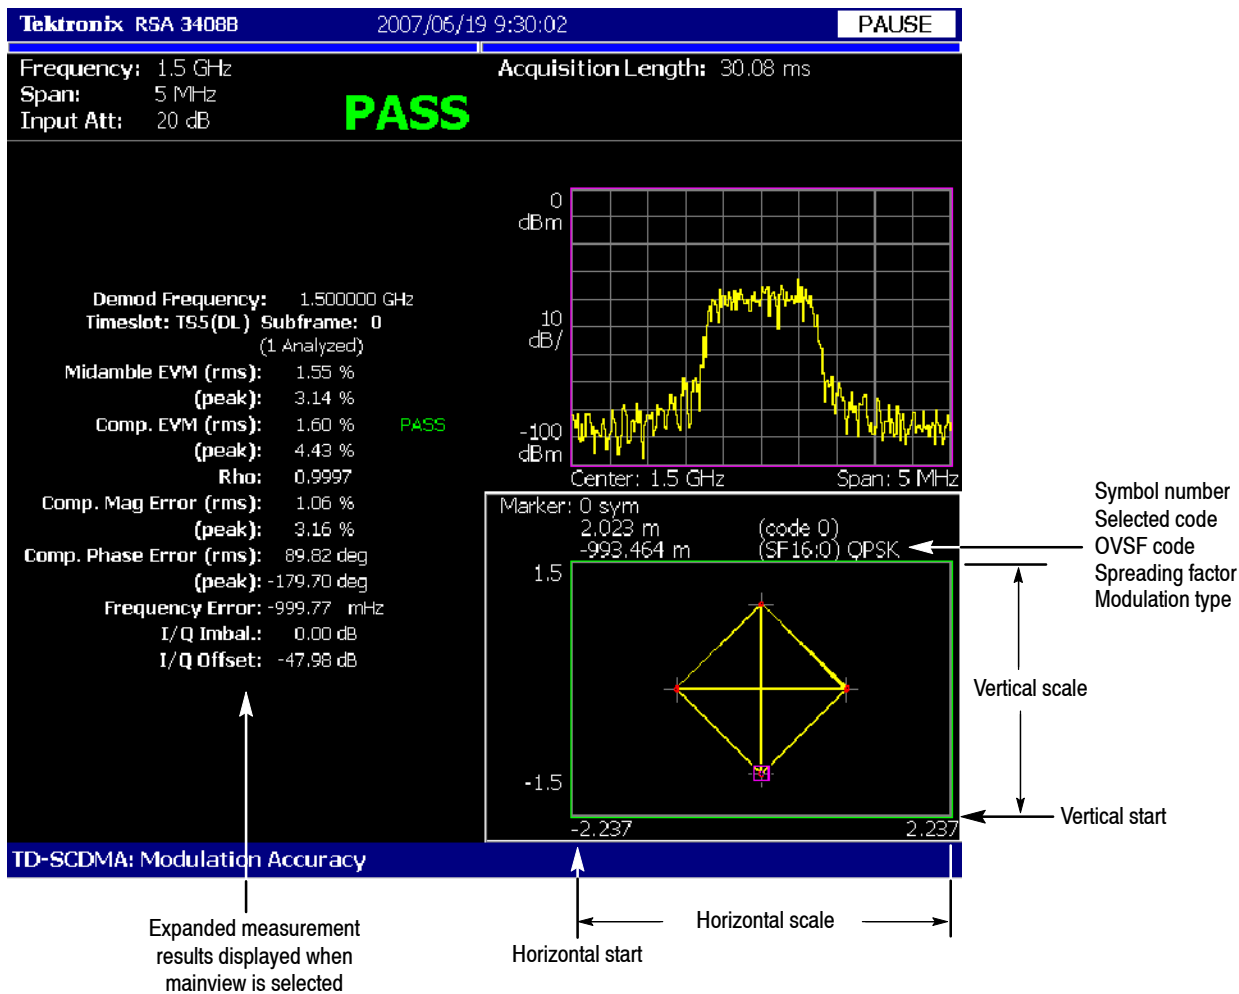


Figure 2-7: Symbol constellation display

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Measurement Content...**: Selects vector or constellation display.

Vector: Selects vector display. A signal represented with phase and amplitude is displayed in rectangular (I and Q) coordinates. Each red point indicates a symbol position on the measured signal and the yellow trace indicates the locus of the signal between symbols.

Constellation: Selects constellation display. It is the same as the vector display, except that only symbols of the measured signal are indicated in red, and the locus between symbols is not shown. The cross marks indicate symbol positions of an ideal signal.

NOTE. *I and Q signals are normalized to prevent the scale from changing when signal attenuation changes.*

Symbol EVM Display. When you select Mainview Content from the View Define menu and then select Symbol EVM from the Mainview Content submenu, changes of Symbol EVM (Error Vector Magnitude) over time are displayed for each symbol (calculated on a single code channel). See Figure 2-8.

The measured values for modulation accuracy are described the section *Modulation Accuracy Measurement Readouts* beginning on page 2-21.

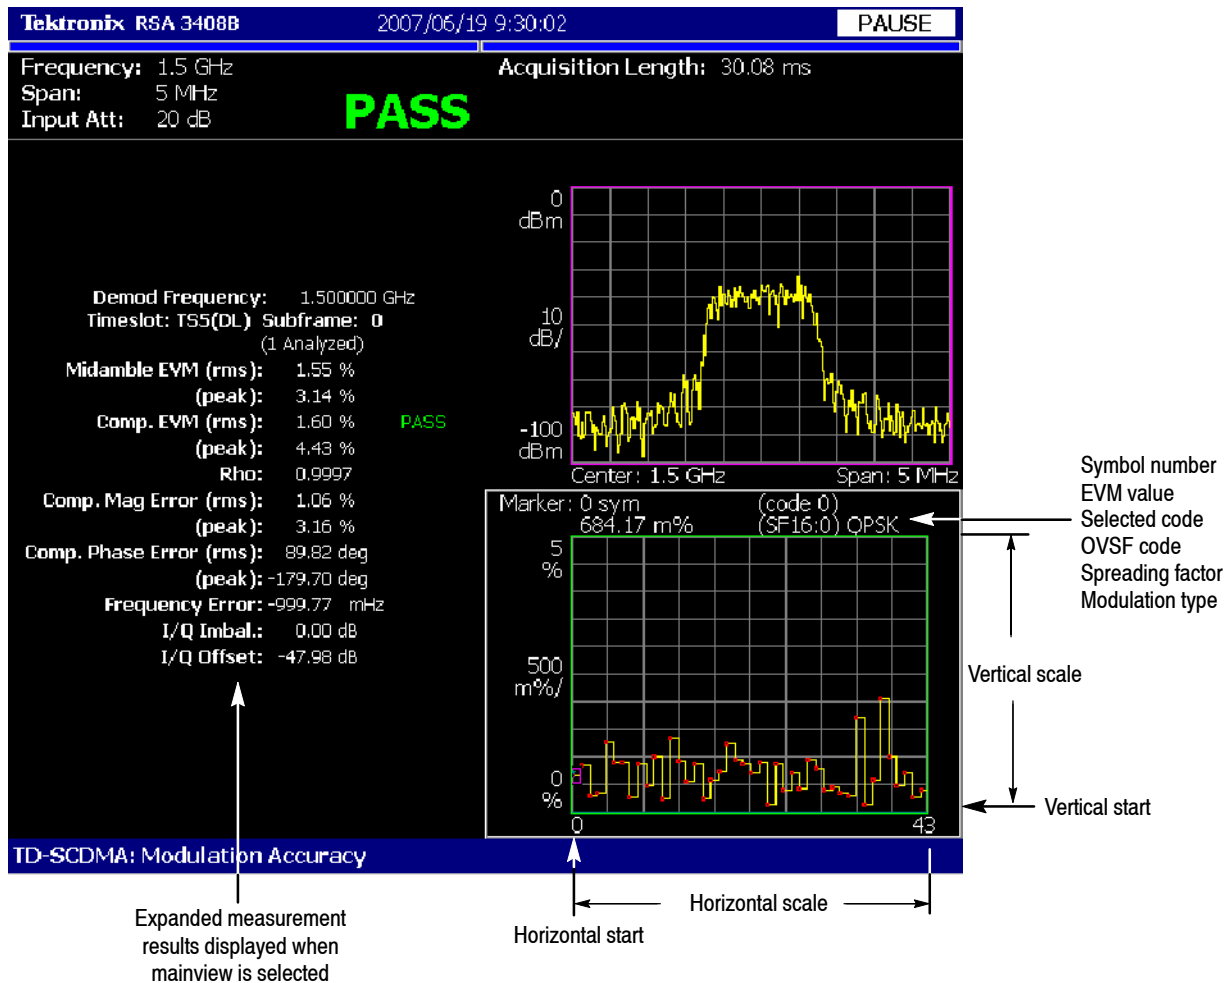


Figure 2-8: Symbol EVM display

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale:** Sets the scale of the horizontal axis (number of symbols).

- **Horizontal Start:** Sets the symbol number of the first (left) value of the horizontal axis.
- **Vertical Scale (%):** Sets the scale of the vertical axis.
- **Vertical Start (%):** Sets the minimum (bottom) value of the vertical axis.
- **Full Scale (default scaling):** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Start):** Sets the step size of the up and down keys for changing the Horizontal Start or Vertical Stop settings.

A step size menu only displays if the Horizontal Start or Vertical Start menu is selected.

MagErr Display. When you select Mainview Content from the View Define menu and then select MagErr from the Mainview Content submenu, changes of magnitude error over time for a single code channel are displayed for each symbol. See Figure 2-9.

The measured values for modulation accuracy are described the section *Modulation Accuracy Measurement Readouts* beginning on page 2-21.

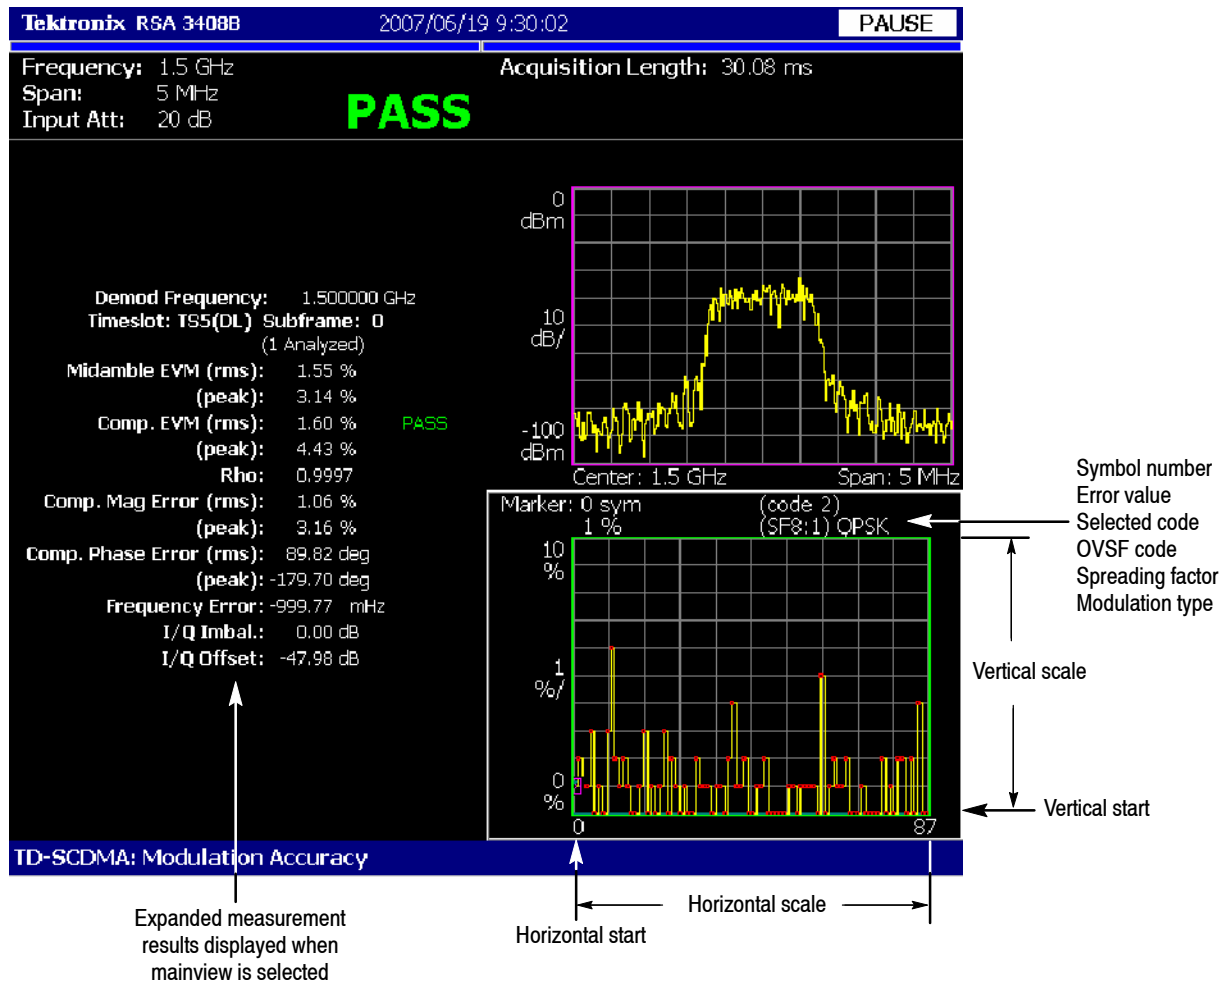


Figure 2-9: MagErr display

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale:** Sets the start value and the scale of the vertical axis automatically to display the entire waveform.
- **Horizontal Scale:** Sets the scale of the horizontal axis (number of symbols).

- **Horizontal Start:** Sets the symbol number of the first (left) value of the horizontal axis.
- **Vertical Scale (%):** Sets the scale of the vertical axis.
- **Vertical Start (%):** Sets the start value of the vertical axis. You can set the value from -200% to 200%.
- **Full Scale (default scaling):** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Offset):** Sets the step size of the up and down keys for changing the Horizontal Start or Vertical Offset settings.

A step size menu only displays if the Horizontal Start or Vertical Offset menu is selected.

PhaseErr Display. When you select Mainview Content from the View Define menu and then select PhaseErr from the Mainview Content submenu, changes of phase error over time for a single code channel are displayed for each symbol. See Figure 2-10.

The measured values for modulation accuracy are described the section *Modulation Accuracy Measurement Readouts* beginning on page 2-21.

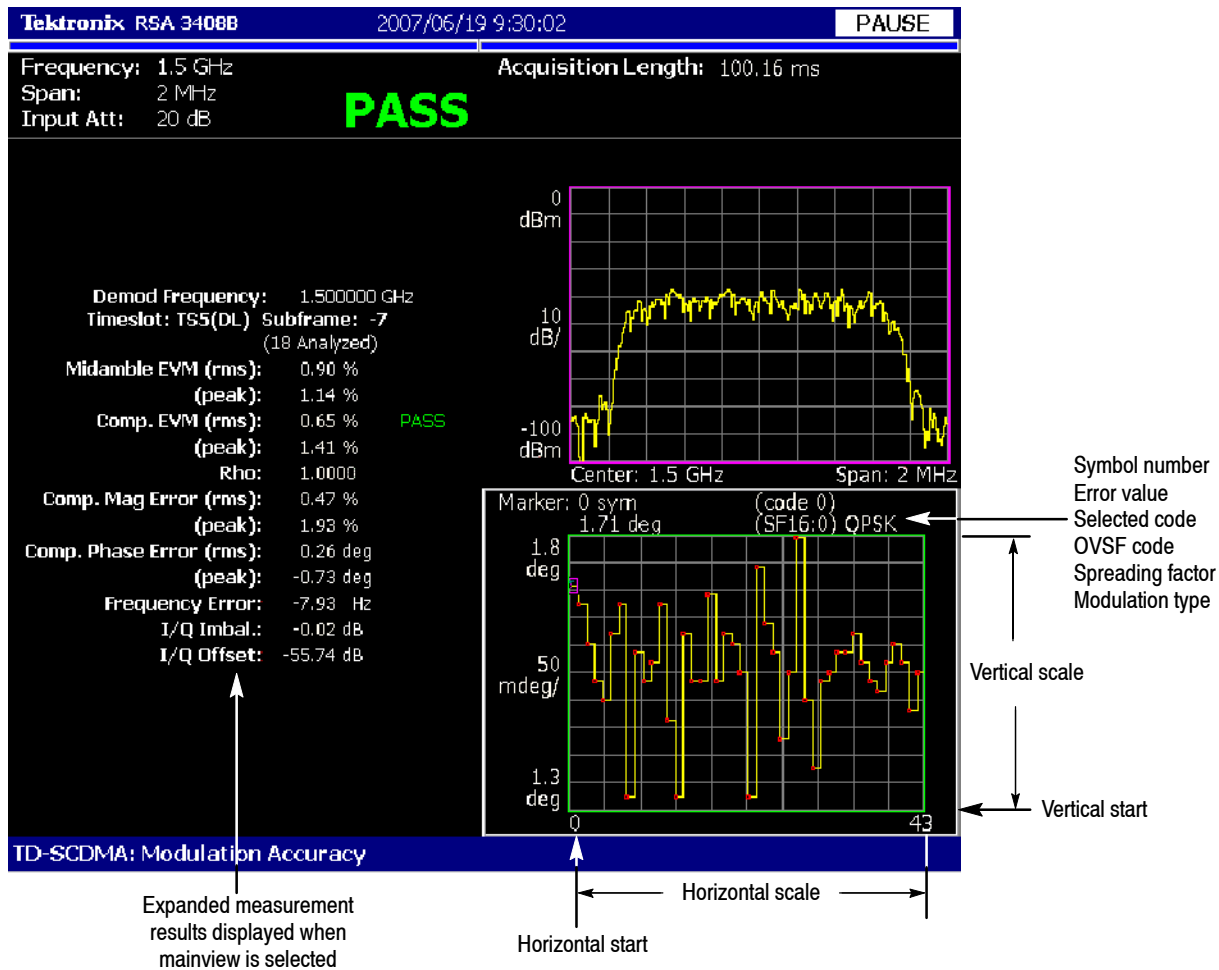


Figure 2- 10: PhaseErr display

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale:** Sets the start value and the scale of the vertical axis automatically to display the entire waveform.
- **Horizontal Scale:** Sets the scale of the horizontal axis (number of symbols).

- **Horizontal Start:** Sets the symbol number of the first (left) value of the horizontal axis.
- **Vertical Scale:** Sets the scale of the vertical axis.
- **Vertical Offset:** Sets the offset value of the vertical axis. You can set the value from -450 to 450 degrees.
- **Full Scale:** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Offset):** Sets the step size of the up and down keys for changing the Horizontal Start or Vertical Offset settings.

A step size menu only displays if the Horizontal Start or Vertical Offset menu is selected.

Modulation Accuracy Measurement Readouts

This section describes the measurement readouts displayed in the mainview of the modulation accuracy measurements. The numerical measurement results reported are identical for each of the modulation accuracy measurement displays.

Readout	Description
Midamble EVM (rms):	The RMS error vector magnitude calculated over the midamble of the signal. The result is optimized for the midamble and expressed as a percentage. EVM measures the noise in the input signal relative to a reference signal.
Midamble EVM (peak):	The maximum value of the instantaneous error vector magnitude calculated over the midamble of the signal and expressed as a percentage.
Comp. EVM (rms):	The RMS error vector magnitude calculated on the composite signal over the entire timeslot (both data bursts and the midamble) and expressed as a percentage.
Comp. EVM (peak):	The maximum value of the instantaneous error vector magnitude calculated on the composite signal over the entire timeslot (both data bursts and the midamble) and expressed as a percentage.
Rho:	A measure of the desired part of the signal relative to a reference signal.
Comp. Mag Error (rms):	The RMS error of the composite signal due to magnitude errors in the signal.
Comp. Mag Error (peak):	The maximum value of the instantaneous magnitude error of the composite signal.

Readout	Description
Comp. Phase Error (rms):	<p>The RMS phase error of the composite signal.</p> <p>This measurement is most useful with a constant amplitude signal like a phase-shift keyed signal like QPSK when a single channel is active in a timeslot.</p> <p>Large phase errors can occur if more than one channel is active since the constellation can have a symbol at or near the origin (0,0).</p>
Comp. Phase Error (peak):	<p>The maximum of the instantaneous phase error of the composite signal.</p>
Frequency Error:	<p>The error between the center frequency and the estimated frequency that is derived from the input signal. The estimated frequency is based either on the downlink pilot (DwPTS) or the midamble of the timeslot, selected with the Freq. & Phase Reference... setting in the measurement setup menu.</p>
I/Q Imbal.:	<p>The imbalance between the level of the I channel to the level of the Q channel. A value of 0.0 dB means that there is no imbalance (the I and Q channels have the same level).</p>
I/Q Offset:	<p>This measures how far the origin of the constellation of the composite signal is from the true origin (0,0).</p> <p>The I/Q offset is included in the EVM calculations unless it is turned off in the measurement setup menu.</p>

Code Domain Power Measurement

The code domain power measurement measures the distribution of signal power across the set of code channels. The display can be in absolute power or normalized to the total timeslot power (defined by the Y Axis... setting in the Scale menu). A bar graph is displayed that represents the power of each channel. This measurement allows you to verify that each code channel is operating at its proper level. Figure 2-11 shows an example of the code domain power measurement.

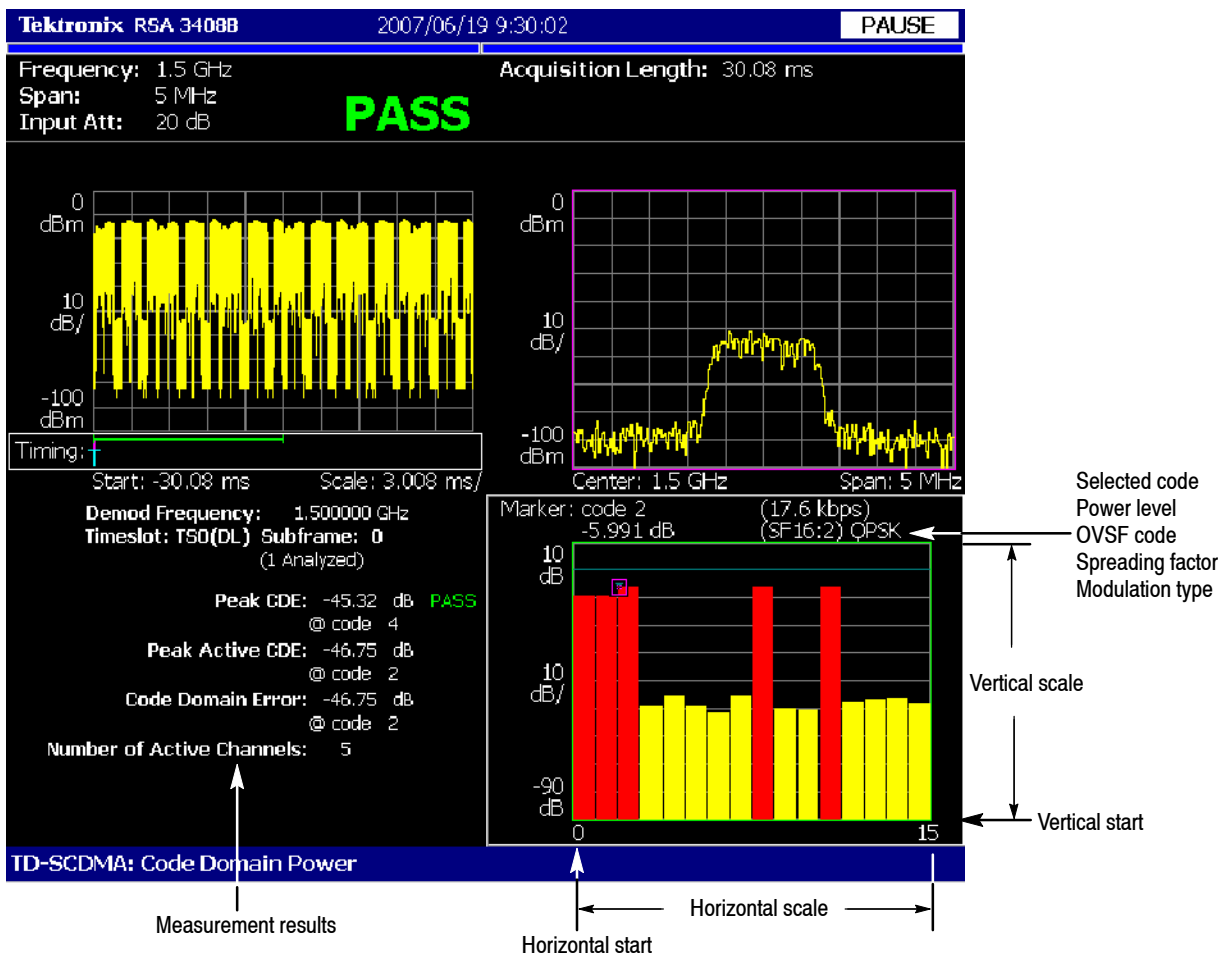


Figure 2-11: Code domain power measurement

Display Elements

The following information is shown in the code domain power measurement display:

- Overview:** The overview display area can contain the power versus time or spectrogram measurement displays.

- **Subview:** The subview display area can contain any of the TD-SCDMA demodulation measurements or the spectrum display.
- **Mainview:** The mainview display area can contain one of the code domain power related measurements.

The mainview also displays the numerical measurement results of the selected display. A Pass or Fail message (determined by the Limits settings) for each measurement is displayed. If all measurements pass, PASS is displayed at the top of the screen. If any measurement fails, FAIL is displayed at the top of the screen.

To change the contents in each of the views, use the View Define menu. Refer to *Changing the View Contents* on page 2-24 for more information.

Setting the Acquisition and Analysis Parameters

You can set acquisition and analysis parameters for the code domain power acquisition by using the Acquisition/Analysis menu. Press the **Acquisition/Analysis** key to open the menu. Refer to *Acquisition and Analysis Parameters for Demodulation Measurements*, beginning on page 2-61, for a description of the timing parameter settings.

NOTE. *The acquisition and analysis parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements.*

Setting the Measurement Parameters

You can set the measurement parameters for the code domain power measurements by using the Meas Setup menu. Press the **Meas Setup** key to open the menu. Refer to *Measurement Parameters for Demodulation Measurements*, beginning on page 2-62, for a description of the measurement parameters.

NOTE. *The measurement parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements. Most of the modulation parameters and analysis control settings do not take effect until the next run or analysis cycle.*

Changing the View Contents

You can change the view contents in the overview, subview, and mainview using the View Define menu. Press the View: **Define** key to open the menu.

- **Show Views:** Selects the view style on the screen. You can select Single or Multi. Multi shows all three views and Single expands the display to only show the view currently selected. Press the View: **Select** key to change the selected view.

- **Overview Content...**: The overview content display can be changed to display either the Spectrogram or Waveform (power versus time).
- **Subview Content...**: The subview content display can be changed to display any of the TD-SCDMA demodulation measurements or the spectrum display.
- **Mainview Content...**: The mainview content display can be changed to display one of the code domain related measurements. You can select Code Domain Power, Code Domain Power by Subframe, Code Domain Power by Symbol, or Power Codogram. The mainview also displays the numerical measurement results of the selected display. A Pass or Fail message (determined by the Limits settings) for each measurement is displayed. If all measurements pass, PASS is displayed at the top of the screen. If any measurement fails, FAIL is displayed at the top of the screen.

Refer to *Scale and Format in the Mainview*, beginning on page 2-25, for more information about the mainview content selections.

- **Menu Off**: Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

Scale and Format in the Mainview

This subsection describes the scale settings and display format in the mainview.

Code Domain Power Display. When you select Mainview Content from the View Define menu and then select Code Domain Power from the Mainview Content submenu, the code domain power for code channels is displayed (see Figure 2-12). The code domain power display shows the power in all code channels in two-data bursts of the selected timeslot and subframe.

The measured values for code domain power are described the section *Code Domain Power Measurement Readouts* beginning on page 2-32.

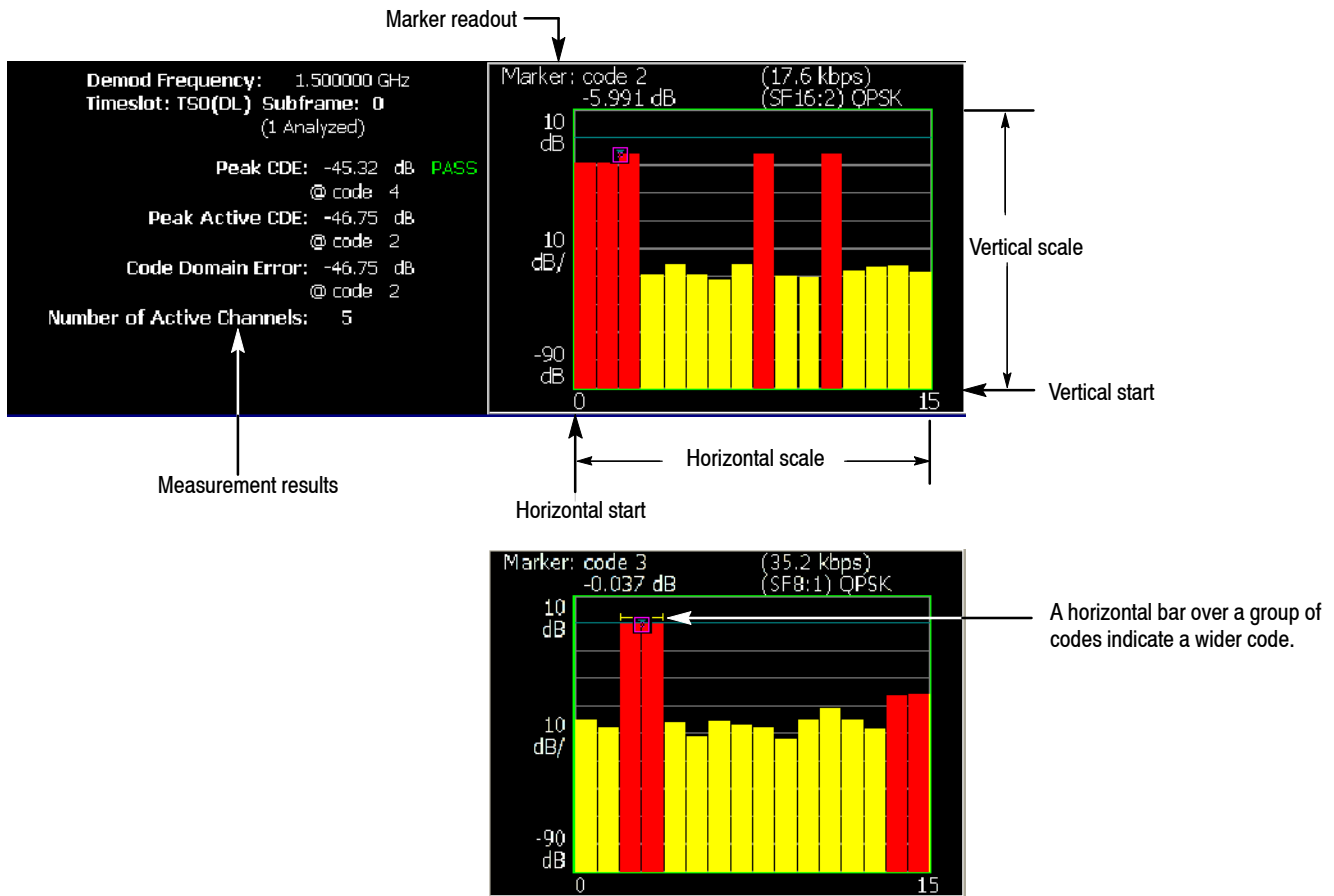


Figure 2- 12: Code domain power display

The power bars use colors to distinguish between active channels and inactive channels. Red indicates active, yellow indicates inactive.

A yellow horizontal bar above a set of active codes indicates that these codes have been detected as belonging to a single code channel at a spreading factor lower than 16. For example, a yellow bar over 2 codes means that this code is actually a single code channel with a spreading factor of 8.

NOTE. Whether a channel is active or inactive is determined by the ACTIVE CHANNEL THRESHOLD setting in the Meas Setup menu.

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.

- **Horizontal Scale:** Sets the scale of the horizontal axis (number of codes).
- **Horizontal Start:** Sets the code number of the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.
- **Vertical Stop (dB):** Sets the maximum (top) value of the vertical axis.
- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size of the up and down keys when changing the Horizontal Start or Vertical Stop settings.

A step size menu only displays if the Horizontal Start or Vertical Stop menu is selected.
- **Full Scale (default scaling):** Sets all scale values to their default full-scale value.
- **Y Axis...:** Selects whether to represent the Y axis with relative values or absolute values. When you select Relative, the Y axis represents the power relative to the total power of all channels. When you select Absolute, the Y axis represents the absolute power of each channel.

CDP by Subframe Display. When you select Mainview Content from the View Define menu and then select CDP by Subframe from the Mainview Content submenu, the code domain power in a single code channel is displayed for each subframe that has been analyzed (see Figure 2-13). The code domain power by subframe display shows the power in a single code channel in the selected timeslot for each subframe.

CDP by subframe is useful for tracking the changes in the power of an active channel over time due to power control.

For the number of subframes analyzed (N), subframe 0 is the most recent and subframe N-1 is the oldest.

The measured values for code domain power are described the section *Code Domain Power Measurement Readouts* beginning on page 2-32.

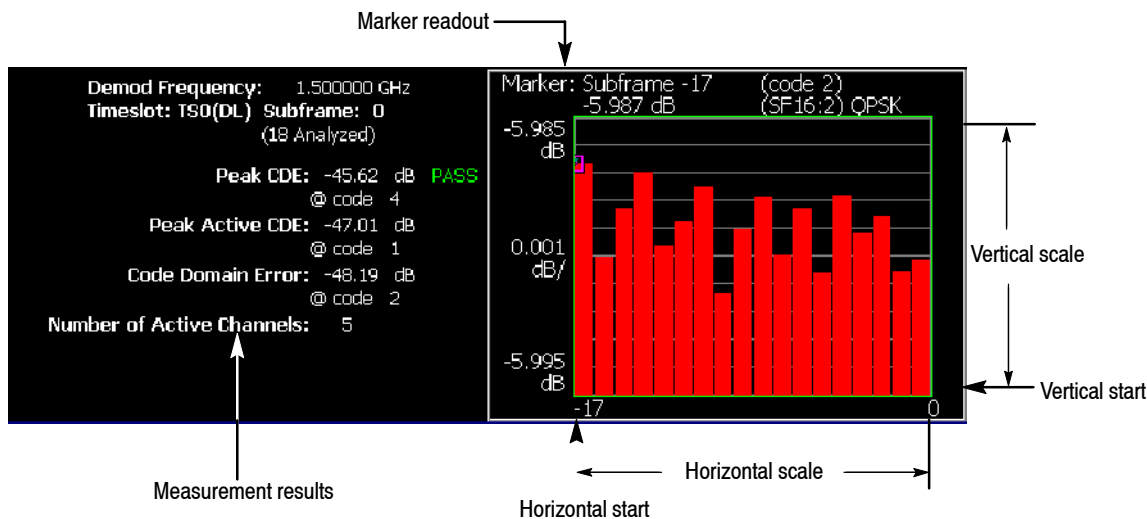


Figure 2- 13: CDP by subframe display

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale:** Sets the scale of the horizontal axis (number of subframes).
- **Horizontal Start:** Sets the subframe number of the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.

- **Vertical Stop (dB):** Sets the maximum (top) value of the vertical axis.
- **Full Scale (default scaling):** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size of the up and down keys when changing the Horizontal Start or Vertical Stop settings.

A step size menu only displays if the Horizontal Start or Vertical Stop menu is selected.
- **Y Axis...:** Selects whether to represent the Y axis with relative values or absolute values. When you select Relative, the Y axis represents the power relative to the total power of all channels. When you select Absolute, the Y axis represents the absolute power of each channel.

CDP by Symbol Display. When you select Mainview Content from the View Define menu and then select CDP by Symbol from the Mainview Content submenu, the code domain power for the symbols is displayed (see Figure 2-14). The code domain power by symbol shows the despread power for each symbol period of the selected code, subframe, and timeslot.

The measured values for code domain power are described the section *Code Domain Power Measurement Readouts* beginning on page 2-32.

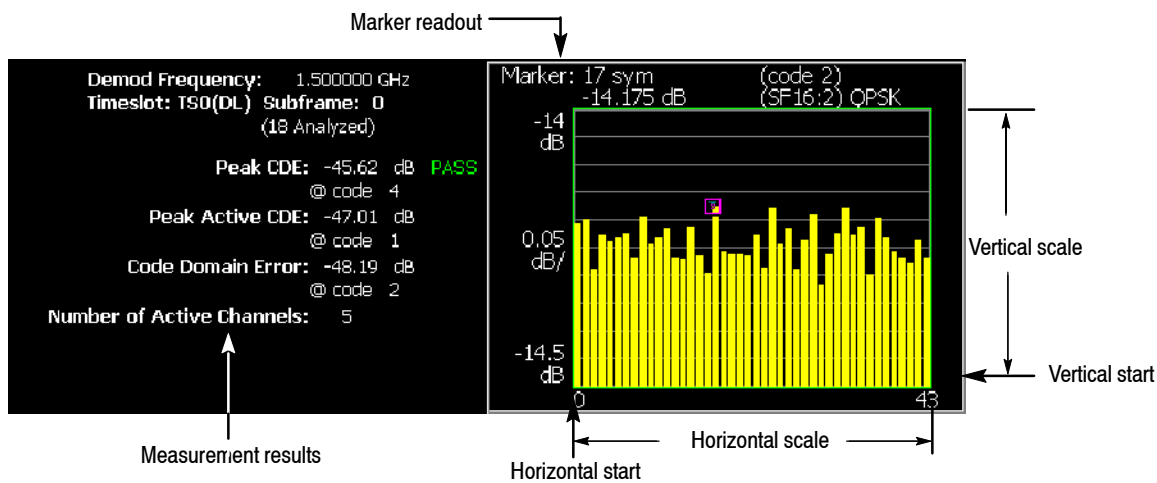


Figure 2-14: CDP by symbol display

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.

- **Horizontal Scale:** Sets the scale of the horizontal axis (number of symbols).
- **Horizontal Start:** Sets the symbol number of the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.
- **Vertical Stop (dB):** Sets the maximum (top) value of the vertical axis.
- **Full Scale (default scaling):** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size of the up and down keys for changing the Horizontal Start or Vertical Stop settings.

A step size menu only displays if the Horizontal Start or Vertical Stop menu is selected.

- **Y Axis...:** Selects whether to represent the Y axis with relative values or absolute values. When you select Relative, the Y axis represents the power relative to the total power of all channels. When you select Absolute, the Y axis represents the absolute power of each channel.

CDP Codogram Display. When you select Mainview Content from the View Define menu and then select CDP Codogram from the Mainview Content submenu, the code domain power is displayed as a codogram (see Figure 2-15). The codogram displays the code domain power for all codes in the selected timeslot over all analyzed subframes. The power in each code is represented by a color, with red indicating the highest power and blue representing the lowest power. The codes for a single subframe are displayed on the horizontal axis, with the vertical axis representing the subframe indices.

The CDP codogram provides an overview of the selected timeslot over time, allowing the user to quickly see changes in the code domain due to spreading factor changes, calls coming and going, and power control.

The measured values for code domain power are described the section *Code Domain Power Measurement Readouts* beginning on page 2-32.

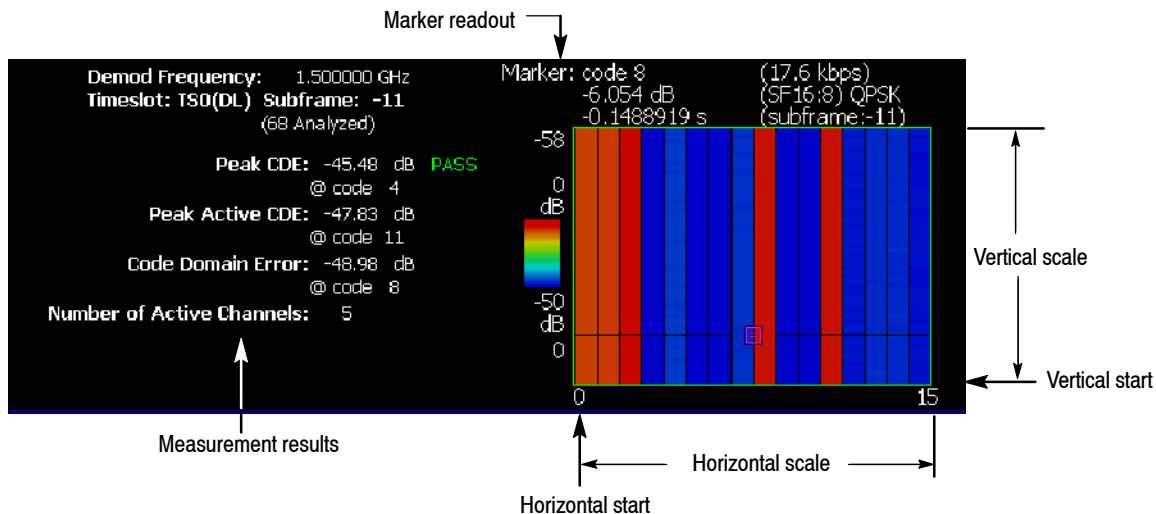


Figure 2-15: CDP codogram display

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale:** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale:** Sets the scale of the horizontal axis.
- **Horizontal Start:** Sets the channel number of the first (left) value of the horizontal axis.
- **Vertical Size:** Sets the scale of the vertical axis.

- **Vertical Start:** Sets the subframe value at the bottom of the vertical axis.
- **Color Scale:** Sets the scale (the value separating the minimum power value from the maximum power value) of the color axis. The choices are 5, 10, 20, and 50 dB.
- **Color Stop:** Sets the stop value of the color axis.
- **Full Scale:** Sets the maximum value of the color axis to the reference level.
- **Y Axis...:** Selects whether to represent the Y axis with relative values or absolute values. When you select Relative, the Y axis represents the power relative to the total power of all channels. When you select Absolute, the Y axis represents the absolute power of each channel.

Code Domain Power Measurement Readouts

This section describes the measurement readouts displayed in the mainview of the code domain power measurements. The numerical measurement results reported are identical for each of the code domain power measurement displays.

Readout	Description
Peak CDE:	The peak code domain error is a measure of the power in the residual error of each code. The residual error is calculated by subtracting a reference signal from the input signal. The peak code domain error is the maximum code domain error of all the codes (including both active and inactive channels). The Peak CDE readout shows the Peak CDE measurement and which code contained the peak error.
Peak Active CDE:	The peak active code domain error is similar to the Peak CDE measurement but is the maximum of the code domain error of just the active channels, excluding the inactive channels from the calculation.
Code Domain Error:	The code domain error shows the error of the currently selected code. The readout shows the code domain error and the selected code. The code is selected with the Select Code setting in the measurement menu.
Number of Active Channels:	This is the number of active channels that have been detected in the current timeslot.

Channel Power Measurement

The channel power measurement measures the channel power within a specified bandwidth and the power spectral density in dBm/Hz.

The channel power measurement is a single view display, unlike the demodulation measurements such as modulation accuracy or code domain power. The channel power measurement cannot be displayed in the subviews of the demodulation measurements.

Figure 2-16 shows an example of the channel power measurement.

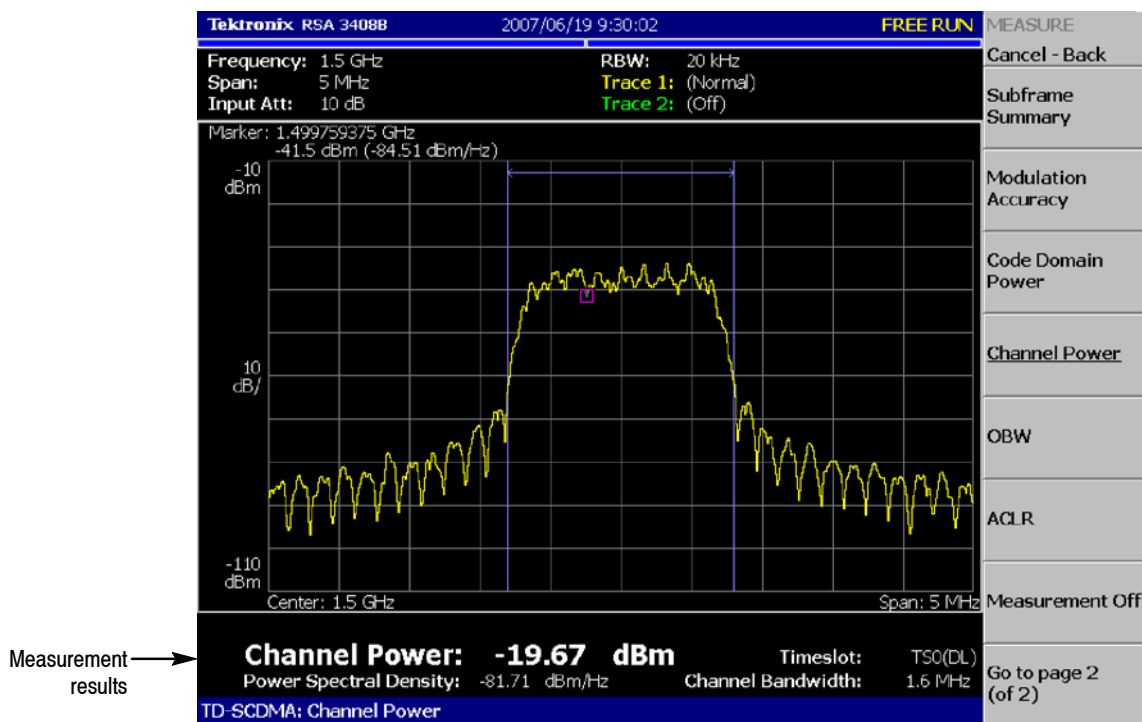


Figure 2-16: Channel power measurement

Setting the Acquisition and Analysis Parameters

The channel power measurement only operates in freerun mode and therefore does not display timing settings when pressing the Acquisition/Analysis menu.

Timeslot alignment (from the start of a subframe) for the channel power measurement is determined by analyzing a sufficiently long IQ capture.

Setting the Measurement Parameters

Once you've selected the channel power measurement, you can set the measurement parameters for the channel power using the Meas Setup menu. Most of the channel power measurement parameters are not shared with other measurements. Press the Meas: **Setup** key to open the menu.

- **Switching Point (timeslot):** Sets the point where the timeslots switch from uplink to downlink timeslots. You can set the value from 1 to 6. The timeslot switching point selection is a global setting for all TD-SCDMA demodulation and RF measurements.
- **Select Timeslot:** Sets the timeslot for the measurement. The control cycles through TS0, DP (downlink pilot), UP (uplink pilot), TS1, TS2, TS3, TS4, TS5, and TS6. The timeslot selection is a global selection for all TD-SCDMA demodulation and RF measurements.
- **Channel Bandwidth (Hz):** Sets the channel bandwidth for the measurement.
- **Measurement Filter Shape...:** Sets the filter to be used for the measurement. You can select None, RootRaisedCosine, or RaisedCosine. The filters only affect the numerical measurement readouts, not the waveform display.
- **Time Reference:** Selects the timing reference. This setting is global to all RF measurements.
 - **DwPts:** Sets the downlink pilot as a time reference for each subframe. This setting should only be used when the downlink pilot is present in the signal under test.
 - **Uplink TS Pattern:** Sets the timeslots indicated in the Uplink TS Pattern setting as the time reference for each subframe. Specifying the timeslot pattern allows the instrument to determine proper timeslot identification in the absence of the downlink pilot time reference.
- **Uplink TS Pattern:** Specifies which timeslots are the active uplink timeslots. The uplink timeslot pattern is a concatenation of the uplink timeslots. For example, an uplink TS pattern of 13 indicates TS1 and TS3 are active uplink timeslots. The default pattern of 123 indicates TS1, TS2, and TS3 are active uplink timeslots. Integer patterns between 1 and 123456 are valid. This setting is used when the Time Reference is set to Uplink TS Pattern.

NOTE. *UpPts can also be active, but does not need to be explicitly listed.*

Downlink signals can not be active when using the pattern method to determine subframe timing.

- **Active Timeslot Threshold (dB):** Sets the threshold that determines if a timeslot is active or inactive. A timeslot that is transmitting above this level is considered active.
- **Limits...:** Displays the limits editor to set the pass/fail limits for measurements. The limits editor that displays is either the uplink or downlink editor, determined by whether the selected timeslot is an uplink or downlink timeslot. Refer to *Editing the Measurement Limits*, on page 2-65, for more information.

NOTE. Refer to your instrument user manual for information about the scale settings for the display.

Changing the View Contents

You can change the contents in the view using the View Define menu. Press the View: **Define** key to open the menu.

- **Grid Style:** Sets the grid style in the view. You can select Off, Fix, or Flex. For Flex, the grid is changed depending on frequency or span setting.
- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale (Hz):** Sets the scale of the horizontal axis.
- **Horizontal Start (Hz):** Sets the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.
- **Vertical Stop (dBm):** Sets the maximum (top) value of the vertical axis.
- **Full Scale (default scaling):** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size of the up and down keys when changing the Horizontal Start or Vertical Stop settings.

A step size menu only displays when the Horizontal Start or Vertical Stop menu is selected.

OBW Measurement

The OBW (Occupied Bandwidth) measurement measures the bandwidth that contains a certain percentage of the total integrated power of one timeslot using the percentage and timeslot you specify. The measured bandwidth is centered at the center frequency.

Figure 2-17 shows an example of the OBW measurement.

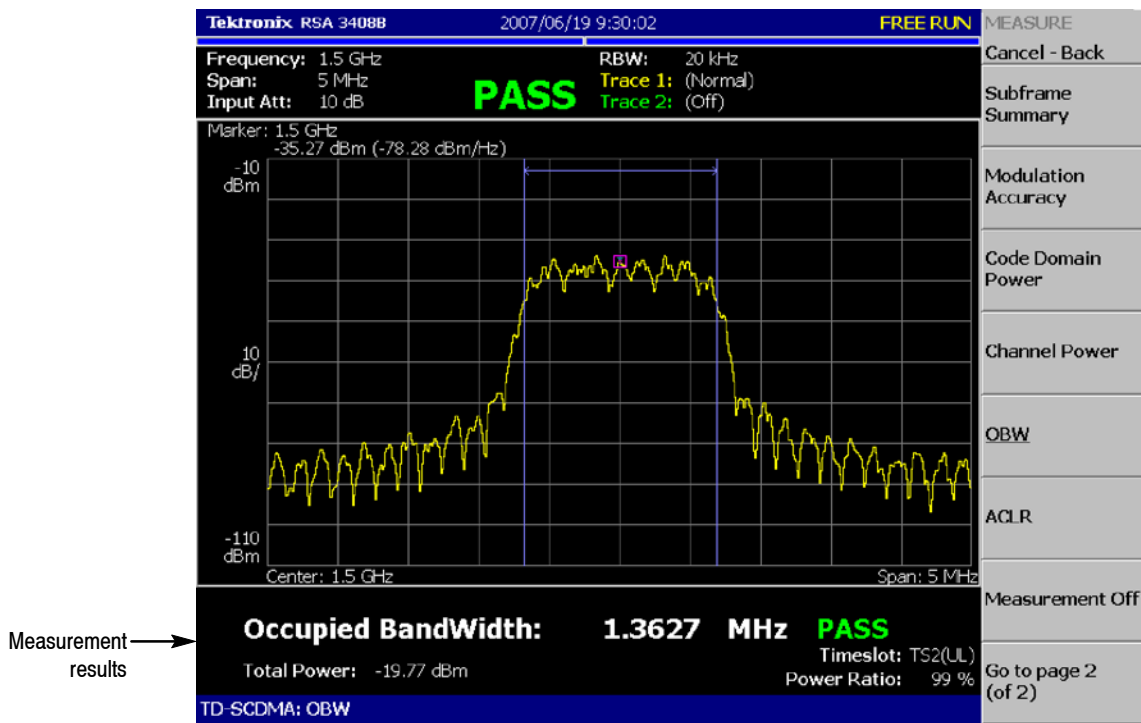


Figure 2- 17: OBW measurement

Setting the Acquisition and Analysis Parameters

The TD-SCDMA OBW measurement only operates in freerun mode and therefore does not display timing settings when pressing the Acquisition/Analysis menu.

Timeslot alignment (from the start of a subframe) for the channel power measurement is determined by analyzing a sufficiently long IQ capture.

Setting the Measurement Parameters

Once you've selected the OBW measurement, you can set the measurement parameters for OBW using the Meas Setup menu. Most of the OBW measurement parameters are not shared with other measurements. Press the Meas: **Setup** key to open the menu.

- **Switching Point (timeslot):** Sets the point where the timeslots switch from uplink to downlink timeslots. You can set the value from 1 to 6. The timeslot switching point selection is a global setting for all TD-SCDMA demodulation and RF measurements.
- **Select Timeslot:** Sets the timeslot for the measurement. The control cycles through timeslots 0, DP (downlink pilot), UP (uplink pilot), TS1, TS2, TS3, TS4, TS5, and TS6. The timeslot selection is a global selection for all TD-SCDMA demodulation and RF measurements.
- **Power Ratio:** Specifies the power ratio of the carrier and span regions for calculating OBW. You can set the value from 80 to 99.99%. The default value is 99%.
- **Channel Bandwidth (Hz):** Sets the channel bandwidth for the measurement.
- **Measurement Filter Shape...:** Filters are not implemented for the OBW measurement.
- **Time Reference:** Selects the timing reference. This setting is global to all RF measurements.
 - **DwPts:** Sets the downlink pilot as a time reference for each subframe. This setting should only be used when the downlink pilot is present in the signal under test.
 - **Uplink TS Pattern:** Sets the timeslots indicated in the Uplink TS Pattern setting as the time reference for each subframe. Specifying the timeslot pattern allows the instrument to determine proper timeslot identification in the absence of the downlink pilot time reference.
- **Uplink TS Pattern:** Specifies which timeslots are the active uplink timeslots. The uplink timeslot pattern is a concatenation of the uplink timeslots. For example, an uplink TS pattern of 13 indicates TS1 and TS3 are active uplink timeslots. The default pattern of 123 indicates TS1, TS2, and TS3 are active uplink timeslots. Integer patterns between 1 and 123456 are valid. This setting is used when the Time Reference is set to Uplink TS Pattern.

NOTE. *UpPts can also be active, but does not need to be explicitly listed.*

Downlink signals cannot be active when using the pattern method to determine subframe timing.

- **Active Timeslot Threshold (dB):** Sets the threshold that determines if a timeslot is active or inactive. A timeslot that is transmitting above this level is considered active.
- **Limits...:** Displays the limits editor to set the pass/fail limits for measurements. The limits editor that displays is either the uplink or downlink editor, determined by whether the selected timeslot is an uplink or downlink timeslot. Refer to *Editing the Measurement Limits*, on page 2-65, for more information.

NOTE. Refer to your instrument user manual for information about the scale settings for the display.

Changing the View Contents

You can change the contents in the view using the View Define menu. Press the View: **Define** key to open the menu.

- **Grid Style:** Sets the grid style in the view. You can select Off, Fix, or Flex. For Flex, the grid is changed depending on frequency or span setting.
- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale (Hz):** Sets the scale of the horizontal axis.
- **Horizontal Start (Hz):** Sets the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.
- **Vertical Stop (dBm):** Sets the maximum (top) value of the vertical axis.
- **Full Scale:** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size of the up and down keys when changing the Horizontal Start or Vertical Stop settings.

A step size menu only displays when the Horizontal Start or Vertical Stop menu is selected.

ACLR Measurement

The Adjacent Channel Leakage Ratio (ACLR) measurement measures the amount of power leakage from the desired channel (active channel signal) to a nearby inactive channel by computing the ratio of the power in the active channel to the power in the inactive channel. The nearby channels can be one of the channels to the immediate left or right (adjacent channels) of the active channel or one channel further away (the alternate channels).

Since the ACLR measurement is made on multiple channels, you should set the analyzer to at least a 10 MHz span to allow the ACLR to be measured on the two adjacent and two alternate channels. A span of 5 MHz reduces the ACLR measurement to just the immediate adjacent channels. If the span setting is not wide enough for at least three channels, ACLR cannot be measured.

Figure 2-18 shows an example of the ACLR measurement.

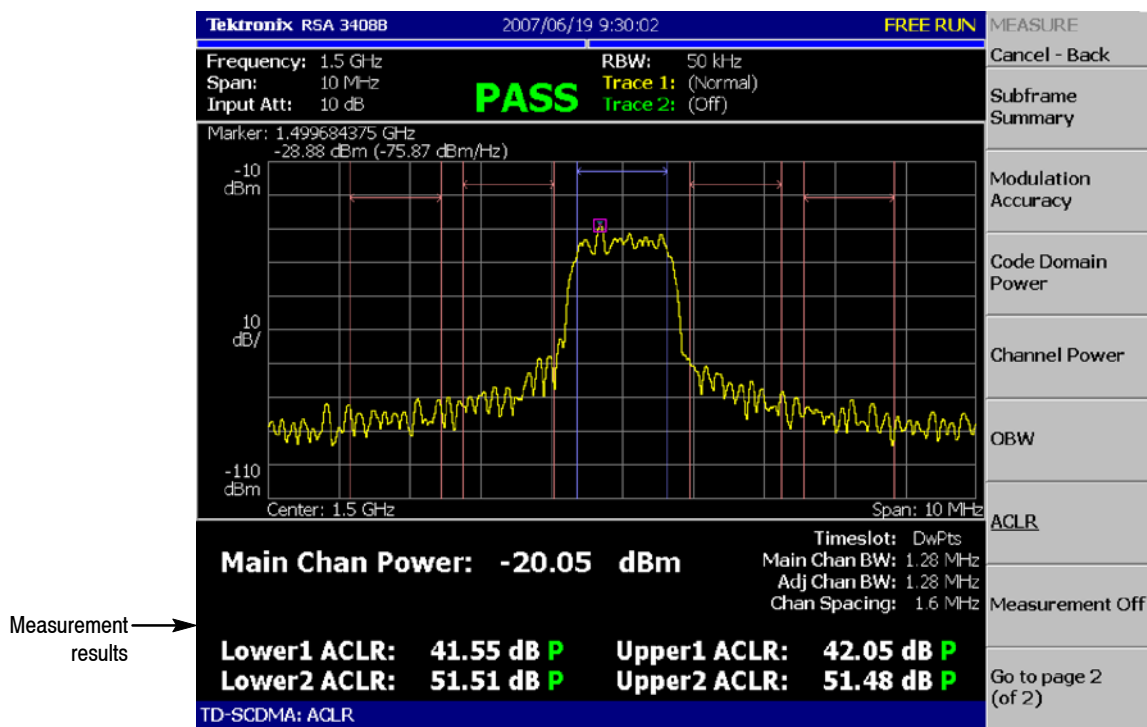


Figure 2-18: ACLR measurement

Setting the Acquisition and Analysis Parameters

The ACLR measurement only operates in freerun mode and therefore does not display timing settings when you select the Acquisition/Analysis menu.

Timeslot alignment (from the start of a subframe) for the channel power measurement is determined by analyzing a sufficiently long IQ capture.

Setting the Measurement Parameters

After you select the ACLR measurement, you can set the measurement parameters for ACLR using the Meas Setup menu. Most of the ACLR measurement parameters are not shared with other measurements. Press the Meas: **Setup** key to open the menu.

- **Switching Point (timeslot):** Sets the point where the timeslots switch from uplink to downlink timeslots. You can set the value from 1 to 6. The timeslot switching point selection is a global setting for all TD-SCDMA demodulation and RF measurements.
- **Select Timeslot:** Sets the timeslot for the measurement. The control cycles through timeslots 0, DP (downlink pilot), UP (uplink pilot), TS1, TS2, TS3, TS4, TS5, and TS6. The timeslot selection is a global selection for all TD-SCDMA demodulation and RF measurements.
- **Measurement Filter Shape...:** Sets the filter to be used for the measurement. You can select None, RootRaisedCosine, or RaisedCosine. The filters only affect the numerical measurement readouts, not the waveform display.
- **Time Reference:** Selects the timing reference. This setting is global to all RF measurements.
 - **DwPts:** Sets the downlink pilot as a time reference for each subframe. This setting should only be used when the downlink pilot is present in the signal under test.
 - **Uplink TS Pattern:** Sets the timeslots indicated in the Uplink TS Pattern setting as the time reference for each subframe. Specifying the timeslot pattern allows the instrument to determine proper timeslot identification in the absence of the downlink pilot time reference.
- **Uplink TS Pattern:** Specifies which timeslots are the active uplink timeslots. The uplink timeslot pattern is a concatenation of the uplink timeslots. For example, an uplink TS pattern of 13 indicates TS1 and TS3 are active uplink timeslots. The default pattern of 123 indicates TS1, TS2, and TS3 are active uplink timeslots. Integer patterns between 1 and 123456 are valid. This setting is used when the Time Reference is set to Uplink TS Pattern.

NOTE. *UpPts can also be active, but does not need to be explicitly listed.*

Downlink signals can not be active when using the pattern method to determine subframe timing.

- **Active Timeslot Threshold (dB):** Sets the threshold that determines if a timeslot is active or inactive. A timeslot that is transmitting above this level is considered active.

- **Limits...:** Displays the limits editor to set the pass/fail limits for measurements. The limits editor that displays is either the uplink or downlink editor, determined by whether the selected timeslot is an uplink or downlink timeslot. Refer to *Editing the Measurement Limits*, on page 2-65, for more information.

NOTE. Refer to your instrument user manual for information about the scale settings for the display.

Setting the Span Parameters

You can set the following measurement parameters using the Span menu. Press the **Span** key to open the menu.

- **Span (Hz):** Sets frequency range to be analyzed. This affects the number of channels that are analyzed.
- **Start Freq (Hz):** Sets the minimum value of the frequency axis. The stop frequency automatically adjusts according to the span setting.
- **Stop Freq (Hz):** Sets the maximum value of the frequency axis. The start frequency automatically adjusts according to the span setting.

NOTE. Refer to your instrument user manual for information about the span settings for the display.

Changing the View Contents

You can change the contents in the view using the View Define menu. Press the View: **Define** key to open the menu.

- **Grid Style:** Sets the grid style in the view. You can select Off, Fix, or Flex. For Flex, the grid is changed depending on frequency or span setting.
- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale (Hz):** Sets the scale of the horizontal axis.
- **Horizontal Start (Hz):** Sets the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.

- **Vertical Stop (dBm):** Sets the maximum (top) value of the vertical axis.
- **Full Scale:** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size of the up and down keys for changing the Horizontal Start or Vertical Stop settings.

A step size menu only displays when the Horizontal Start or Vertical Stop menu is selected.

Spectrum Emission Mask Measurement

The spectrum emission mask (SEM) measurement verifies that the base station is not transmitting excessive power outside of its designated channel. The SEM measurement is not gated so it does not operate on any particular timeslot.

There are two SEM measurements available (selected from the measurement setup menu) based on different sets of limits: Offset From Channel and Inband Spurious. Figures 2-19 and 2-20 show examples of the spectrum emission mask measurements.

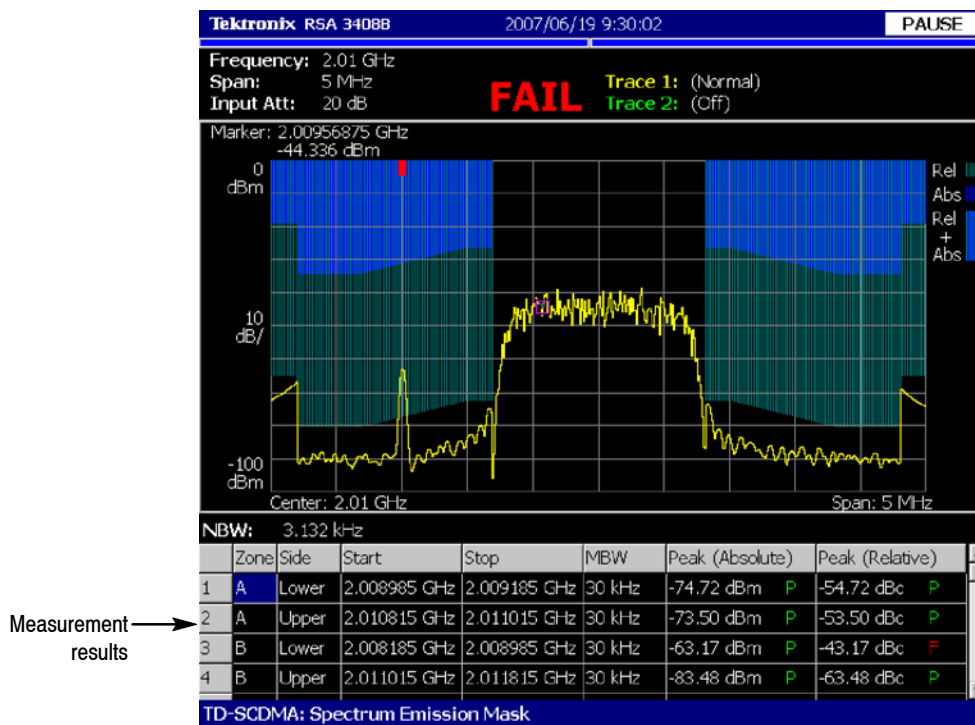


Figure 2-19: Spectrum emission mask (offset from channel) measurement

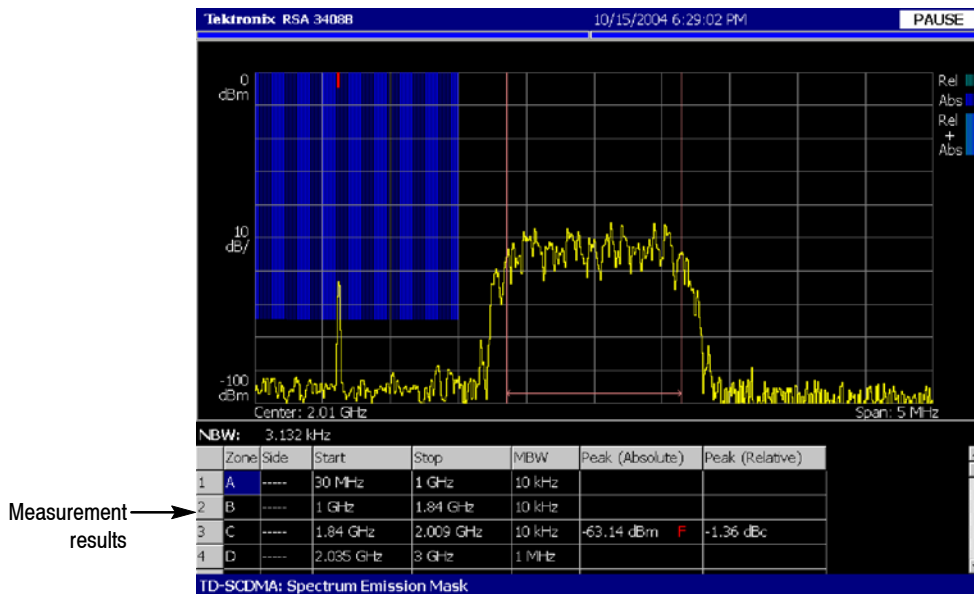


Figure 2- 20: Spectrum emission mask (inband spurious) measurement

Setting the Acquisition and Analysis Parameters

The TD-SCDMA spectrum emission mask measurement only operates in freerun mode and therefore does not display timing settings when pressing the Acquisition/Analysis menu.

Setting the Measurement Parameters

Once you have selected the spectrum emission mask measurement, you can set the measurement parameters for SEM using the Meas Setup menu. Most of the SEM measurement parameters are not shared with other measurements. Press the Meas: **Setup** key to open the menu.

- **Transmit Direction:** Selects which limits table (uplink or downlink) is used for limit checking. Changing the transmit direction for the SEM measurement may change the timeslot selection for other measurements depending on how the timeslots are defined for uplink and downlink.
- **Measurement....:** Selects the SEM measurement and limits table.
 - **Offset From Channel:** The Offset From Channel limits are used where the frequency zones are specified by the difference from the center frequency.
 - **Inband Spurious:** The Inband Spurious limits are used where the frequency zones are specified by the absolute frequency values.

- **Ref. Channel Select:** Selects the reference mode used to measure the spectrum emission level. You can select Auto or Man (manual). For Auto, the reference level is measured from the input signal for the specified channel bandwidth. For Man, you can set the reference level in the Ref. Channel Level menu item.
- **Ref. Channel Level (dBm):** Sets or displays the reference level used to measure the spectrum emission level. You can only set the reference level when the Ref. Channel Select is set to Man (manual) with a range from -150 dBm to 30 dBm.
- **Channel Bandwidth (Hz):** Sets the channel bandwidth for the measurement.
- **Measurement Filter Shape:** Sets the filter to be used for the measurement. You can select None, RootRaisedCosine, or RaisedCosine. This setting is only available when Ref. Channel Select is set to Auto. The filters only affect the numerical measurement readouts, not the waveform display.
- **Limits...:** Displays the limits editor to set the pass/fail limits for measurements. The limits editor that displays is either the uplink or downlink editor, determined by whether the selected timeslot is an uplink or downlink timeslot. Refer to *Editing the Measurement Limits*, on page 2-65, for more information.
- **Scroll Table:** Scrolls the table displayed in the view.

Changing the View Contents

You can change the contents in the view using the View Define menu. Press the View: **Define** key to open the menu.

- **Grid Style:** Sets the grid style in the view. You can select Off, Fix, or Flex. For Flex, the grid is changed depending on frequency or span setting.
- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale (Hz):** Sets the scale of the horizontal axis.
- **Horizontal Start (Hz):** Sets the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.
- **Vertical Stop (dBm):** Sets the maximum (top) value of the vertical axis.
- **Full Scale:** Sets all scale values to their default full-scale value.

- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size of the up and down keys for changing the Horizontal Start or Vertical Stop settings.

A step size menu only displays when the Horizontal Start or Vertical Stop menu is selected.

Timeslot Summary

The timeslot summary measurement displays a power versus time graph of the selected timeslot within the selected subframe, and displays several timeslot-related statistics. The timeslot summary includes eight chips before timeslot, and eight chips after timeslot for visual reference. Figure 2-21 shows an example of the timeslot summary.

The measured values are described in *Timeslot Summary Measurement Readouts* on page 2-50.

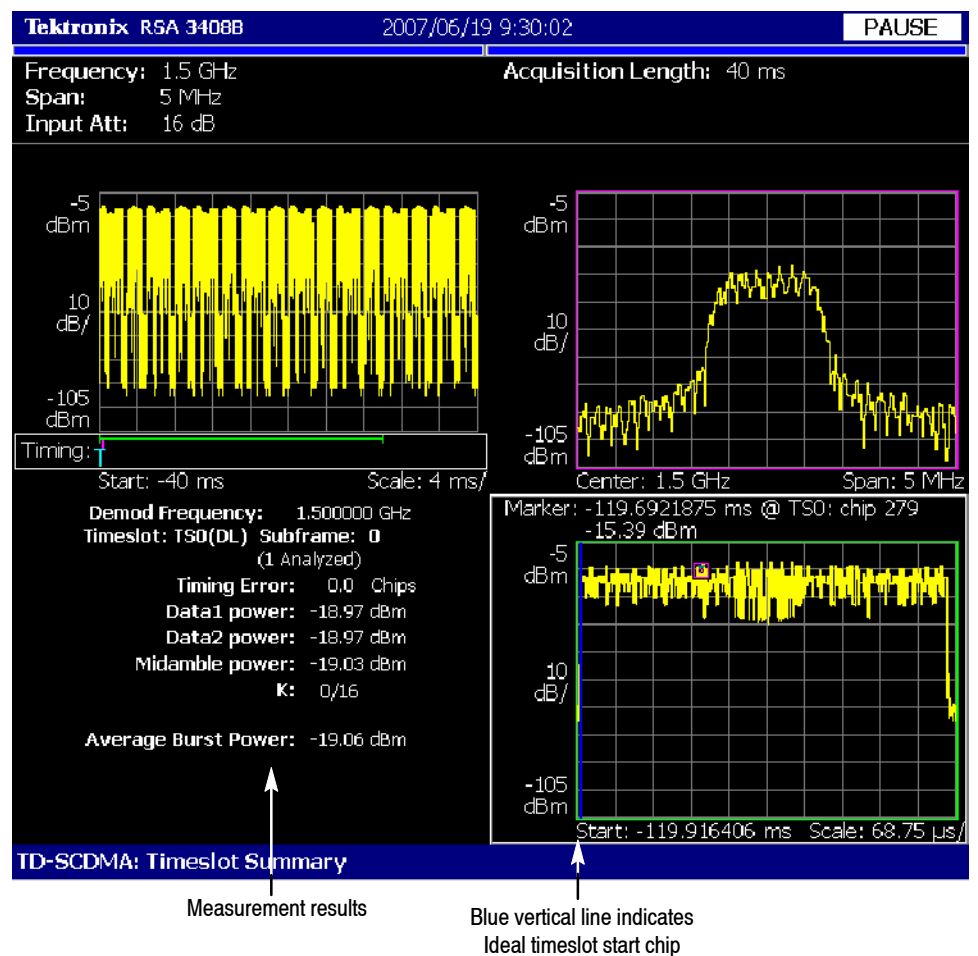


Figure 2-21: Timeslot summary

Display Elements

The following information is shown in the timeslot summary measurement display:

- **Overview:** The overview display area can contain the power versus time or spectrogram measurement displays.
- **Subview:** The subview display area can contain any of the TD-SCDMA demodulation measurements or the spectrum display.
- **Mainview:** The mainview display area is fixed to display only the timeslot summary measurement.

To change the contents in each of the views, use the View Define menu. Refer to *Changing the View Contents* on page 2-48 for more information.

Setting the Acquisition and Analysis Parameters

You can set acquisition and analysis parameters for the timeslot summary acquisition by using the Acquisition/Analysis menu. Press the **Acquisition/Analysis** key to open the menu. Refer to *Acquisition and Analysis Parameters for Demodulation Measurements*, beginning on page 2-61, for a description of the timing parameter settings.

NOTE. *The acquisition and analysis parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements.*

Setting the Measurement Parameters

You can set the measurement parameters for the timeslot summary measurement by using the Meas Setup menu. Press the **Meas Setup** key to open the Meas Setup menu. Refer to *Measurement Parameters for Demodulation Measurements*, beginning on page 2-62, for a description of the measurement parameters.

NOTE. *The measurement parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements. Most of the modulation parameters and analysis control settings do not take effect until the next run or analysis cycle.*

Changing the View Contents

You can change the view contents in the overview, subview using the View Define menu. Press the View: **Define** key to open the menu.

- **Show Views:** Selects the view style on the screen. You can select Single or Multi. Multi shows all three views and Single expands the display to only show the view currently selected. Press the View: **Select** key to change the selected view.
- **Overview Content...:** The overview content display can be changed to display either the Spectrogram or Waveform (power versus time).

- **Subview Content...:** The subview content display can be changed to display any of the TD-SCDMA demodulation measurements or the spectrum display.
- **Mainview Content...:** The mainview content display can not be changed from timeslot summary but the mainview can be zoomed to the region tested for timeslot error.
- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

Scale and Format in the Mainview

You can set the scale for the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale (s):** Sets the scale of the horizontal axis (number of chips or symbols).
- **Horizontal Start (s):** Sets the chip number or symbol number of the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.
- **Vertical Stop (dBm):** Sets the maximum (top) value of the vertical axis.
- **Full Scale:** Sets all scale values to their default full-scale value.
- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size (amount per click of the general purpose knob) for changes to the Horizontal Start or Vertical Stop settings.

The step size menus only display when selecting the Horizontal Start or Vertical Stop menus.

- **Zoom to Timeslot Start:** Zooms the display into the region tested for the timing error. Eight chips are shown before the timeslot and 60 chips after. A blue line is drawn to indicate the ideal timeslot start chip. The default scale for the timeslots is based on the width (number of chips) of the timeslot.

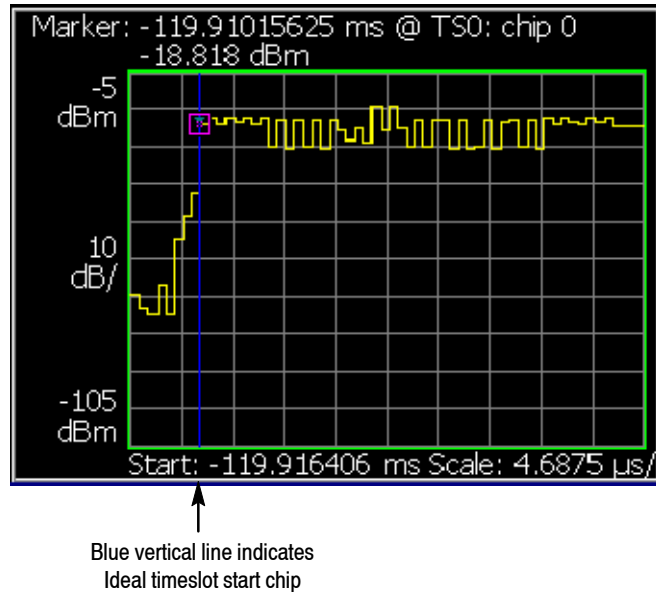


Figure 2-22: Timeslot summary, display zoomed

Timeslot Summary Measurement Readouts

This section describes the measurement readouts displayed in the mainview of the timeslot summary measurement.

Readout	Description
Timing Error	The measured difference between the measured start of a timeslot and the ideal start of the timeslot (relative to the selected subframe time reference).
Data1 power	The RMS power in the data1 burst.
Data2 power	The RMS power in the data2 burst.
Midamble power	The RMS power in the midamble burst.
K	The value of K for this timeslot. K is the maximum number of midamble codes that can be used in the midamble of the current timeslot. See the 3GPP TDD LCR standard for detailed information.
Average burst power	The RMS power over the entire timeslot.

Transmit On/Off Mask

The Transmit On/Off Mask measurement verifies that the Node-B or UE turns off its transmitter when it is not supposed to be emitting power. A power versus time graph of the selected subframe is overlaid on a limit mask. The instantaneous power is compared against the mask and a PASS/FAIL determination is made. Figure 2-23 shows an example of the transmit on/off mask.

The measured values are described in *Transmit On/Off Mask Measurement Readouts* on page 2-54.

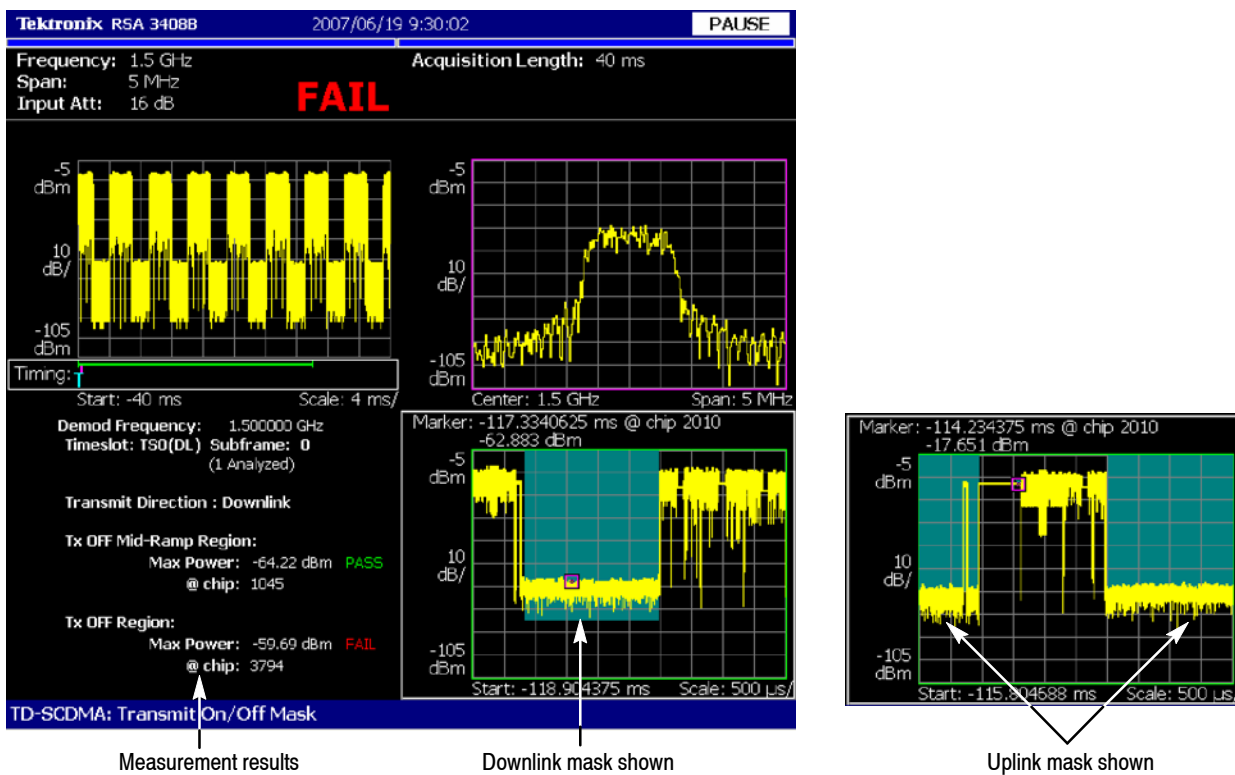


Figure 2-23: Transmit on/off mask

Display Elements

The following information is shown in the timeslot summary measurement display:

- **Overview:** The overview display area can contain the power versus time or spectrogram measurement displays.
- **Subview:** The subview display area can contain any of the TD-SCDMA demodulation measurements or the spectrum display.

- **Mainview:** The mainview display area is fixed to display only the transmit on/off mask measurement.

To change the contents in each of the views, use the View Define menu. Refer to *Changing the View Contents* on page 2-52 for more information.

Setting the Acquisition and Analysis Parameters

You can set acquisition and analysis parameters for the transmit on/off mask acquisition by using the Acquisition/Analysis menu. Press the **Acquisition/Analysis** key to open the menu. Refer to *Acquisition and Analysis Parameters for Demodulation Measurements*, beginning on page 2-61, for a description of the timing parameter settings.

NOTE. *The acquisition and analysis parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements.*

Setting the Measurement Parameters

You can set the measurement parameters for the transmit on/off mask measurements by using the Meas Setup menu. Press the **Meas Setup** key to open the menu. Refer to *Measurement Parameters for Demodulation Measurements*, beginning on page 2-62, for a description of the measurement parameters.

NOTE. *The measurement parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements. Most of the modulation parameters and analysis control settings do not take effect until the next run or analysis cycle.*

Changing the View Contents

You can change the view contents in the overview, subview using the View Define menu. Press the View: **Define** key to display the View Define menu.

- **Show Views:** Selects the view style on the screen. You can select Single or Multi. Multi shows all three views and Single expands the display to only show the view currently selected. Press the **Select** key to change the selected view.
- **Overview Content...:** The overview content display can be changed to display either the Spectrogram or Waveform (power versus time).
- **Subview Content...:** The subview content display can be changed to display any of the TD-SCDMA demodulation measurements or the spectrum display.
- **Mainview Content...:** The mainview content display cannot be changed from timeslot summary.

Scale and Format in the Mainview

- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

You can set the scale for the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale (s):** Sets the scale of the horizontal axis. This affects both the normal and zoomed displays.
- **Horizontal Start (s):** Sets the chip number or symbol number of the first (left) value of the horizontal axis.
- **Vertical Scale (dB):** Sets the scale of the vertical axis.
- **Vertical Stop (dBm):** Sets the maximum (top) value of the vertical axis.
- **Full Scale:** Sets all scale values to their default full-scale value. This affects both the normal and zoomed displays.
- **Mask Zoom Controls...:** The zoom controls let you display a narrow region of the mask, allowing you to quickly zoom in and analyze important parts of the mask. Figure 2-24 shows an example of a zoomed display.
 - **Zoom to Tx Mask Start:** Zooms in to the beginning of the mask.
 - **Zoom to Tx Mask End:** Zooms in to the end of the mask.
 - **Zoom to Max Mid-Ramp Power:** Zooms to the part of the mask that is above the OFF power level but below the average ON power. For the downlink, it is near the ON to OFF transition and for the uplink, it is near the OFF to ON transition.
 - **Zoom to Max Tx OFF Power:** Zooms to the location of the maximum power of the input signal in the OFF portion of the mask.
 - **Horizontal Scale (s):** Sets the scale of the horizontal axis. This affects both the zoomed and normal displays.
 - **Full Scale:** Sets all scale values to their default full-scale value. This affects both the zoomed and normal displays.
- **Step Size (Horizontal Start / Vertical Stop):** Sets the step size (amount per click of the general purpose knob) for changes to the Horizontal Start or Vertical Stop settings.

The step size menu choices only display when selecting the Horizontal Start or Vertical Stop menus.

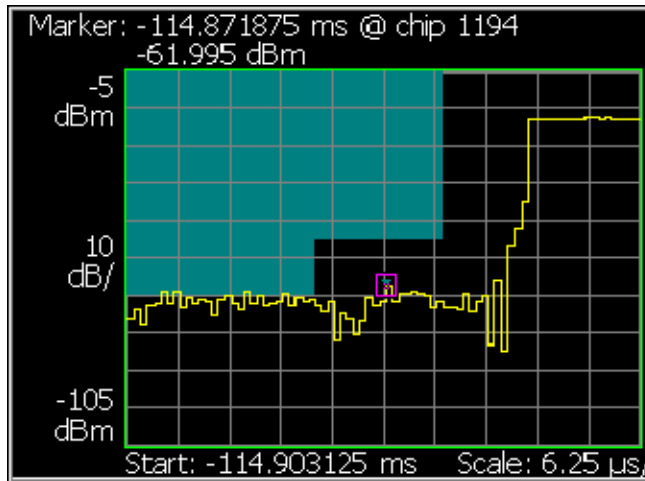


Figure 2-24: Zoom to Max Mid-Ramp Power selected

Transmit On/Off Mask Measurement Readouts

This section describes the measurement readouts displayed in the mainview of the transmit on/off mask measurement.

Readout	Description
Tx OFF Mid-Ramp Region Max Power @ Chip	The maximum mid-ramp power (in dBm) within the mid-ramp region. The chip value is the location where it occurs.
Tx OFF Region Max Power @ Chip	The maximum power (in dBm) within the mask region that is not part of the mid-ramp region. The chip value is the location where it occurs.

Symbol Table Display

The symbol table display shows the received data symbols in a code channel after descrambling and despreading. Figure 2-25 shows an example of the symbol table display.

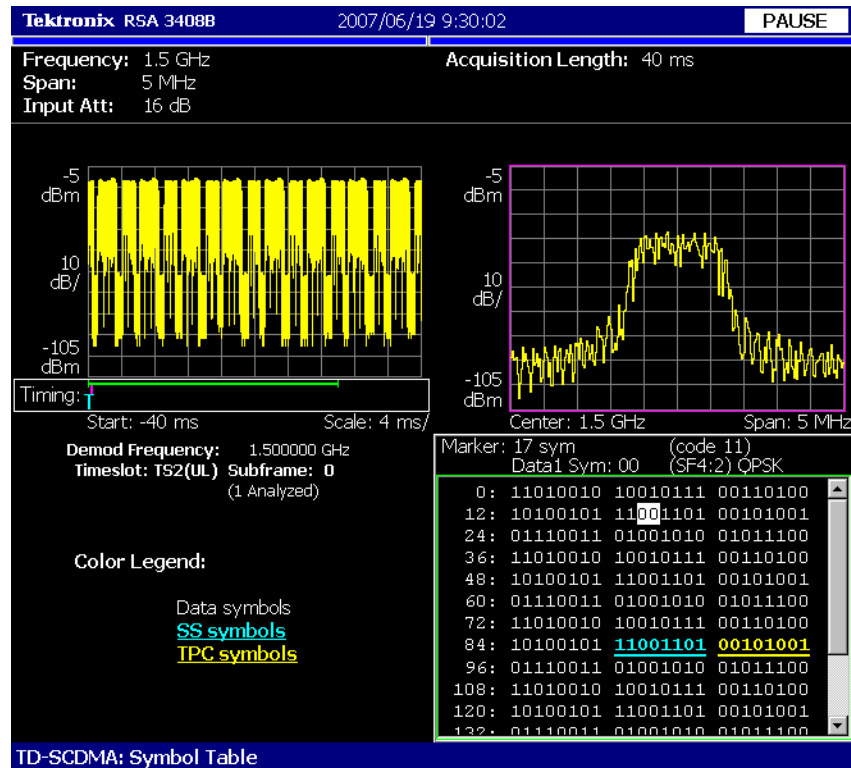


Figure 2-25: Symbol table display

Display Elements

The following information is shown in the symbol table measurement display:

- **Overview:** The overview display area can contain the power versus time or spectrogram measurement displays.
- **Subview:** The subview display area can contain any of the TD-SCDMA demodulation measurements or the spectrum display.
- **Mainview:** The mainview display area is fixed to display only the symbol table.

To change the contents in each of the views, use the View Define menu. Refer to *Changing the View Contents* on page 2-56 for more information.

Setting the Acquisition and Analysis Parameters

You can set acquisition and analysis parameters for the symbol table acquisition by using the Acquisition/Analysis menu. Press the **Acquisition/Analysis** key to open the Acquisition/Analysis menu. Refer to *Acquisition and Analysis Parameters for Demodulation Measurements*, beginning on page 2-61, for a description of the timing parameter settings.

NOTE. *The acquisition and analysis parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements.*

Setting the Measurement Parameters

You can set the measurement parameters for the symbol table measurement by using the Meas Setup menu. Press the **Meas Setup** key to open the menu. Refer to *Measurement Parameters for Demodulation Measurements*, beginning on page 2-62, for a description of the measurement parameters.

NOTE. *The measurement parameters for demodulation measurements are global settings for all TD-SCDMA demodulation measurements. Most of the modulation parameters and analysis control settings do not take effect until the next run or analysis cycle.*

Changing the View Contents

You can change the view contents in the overview, subview using the View Define menu. Press the View: **Define** key to display the View Define menu.

- **Show Views:** Selects the view style on the screen. You can select Single or Multi. Multi shows all three views and Single expands the display to only show the view currently selected. Press the **Select** key to change the selected view.
- **Overview Content...:** The overview content display can be changed to display either the Spectrogram or Waveform (power versus time).
- **Subview Content...:** The subview content display can be changed to display any of the TD-SCDMA demodulation measurements or the spectrum display.
- **Mainview Content...:** The mainview content display can not be changed from Timeslot summary.
- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

Scale and Format in the Mainview

You can set the radix for the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Radix...:** Sets the radix for displaying the table. You can select Hex (hexadecimal), Oct (octal), or Bin (binary).

Intermodulation Measurement

The intermodulation measurement measures the distortion the base station generates when both the desired signal and an interfering signal are present. For this measurement, an interfering signal is defined as being synchronized with the desired signal and is 30 dB lower.

Figure 2-26 shows an example of the intermodulation measurement.

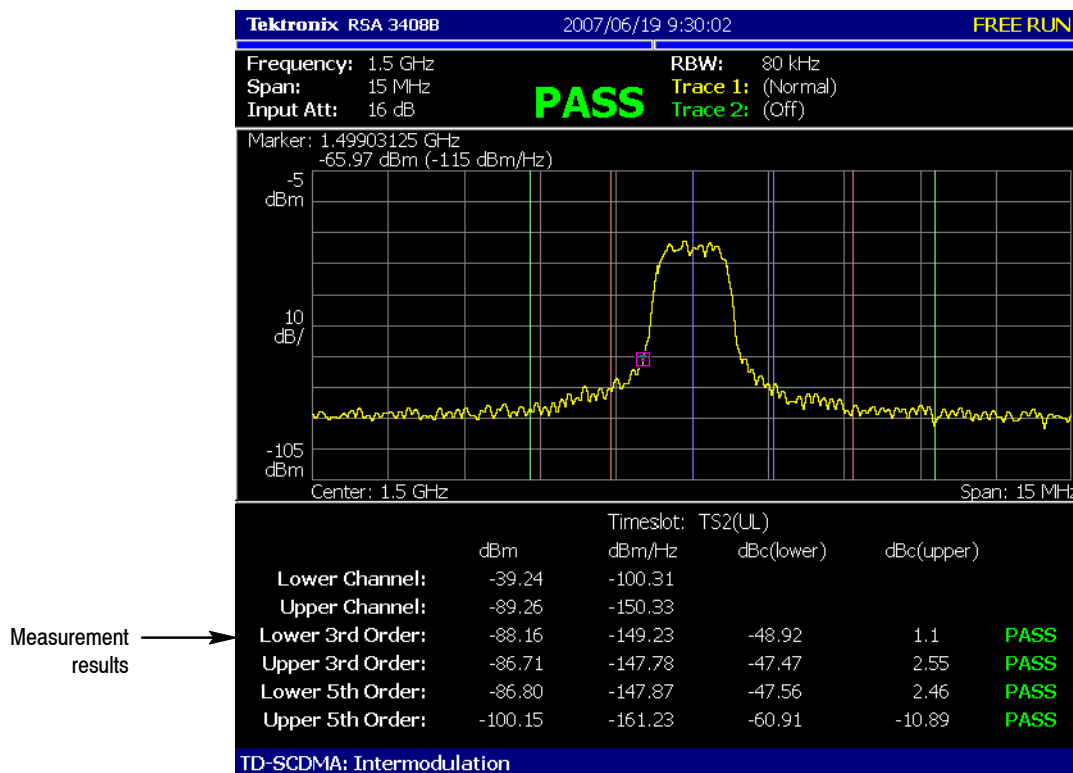


Figure 2-26: Intermodulation measurement

Setting the Acquisition and Analysis Parameters

The intermodulation measurement only operates in freerun mode and therefore does not display timing settings when you press the Acquisition/Analysis menu.

Timeslot alignment (from the start of a subframe) for the channel power measurement is determined by analyzing a sufficiently long IQ capture.

Setting the Span Parameters

You can set the following measurement parameters using the Span menu. Press the **Span** key to open the Span menu.

- **Span (Hz):** Sets frequency range to be analyzed. This affects the number of channels that are analyzed.

- **Start Freq (Hz):** Sets the minimum value of the frequency axis. The stop frequency automatically adjusts according to the span setting.
- **Stop Freq (Hz):** Sets the maximum value of the frequency axis. The start frequency automatically adjusts according to the span setting.

NOTE. Refer to your instrument user manual for information about the span settings for the display.

Setting the Measurement Parameters

After you select the intermodulation measurement, you can set the measurement parameters for intermodulation using the Meas Setup menu. Most of the intermodulation measurement parameters are not shared with other measurements. Press the **Meas Setup** key to open the menu.

- **Switching Point (timeslot):** Sets the point where the timeslots switch from uplink to downlink timeslots. You can set the value from 1 to 6. The timeslot switching point selection is a global setting for all TD-SCDMA demodulation and RF measurements.
- **Select Timeslot:** Sets the timeslot for the measurement. The control cycles through timeslots 0, DP (downlink pilot), UP (uplink pilot), TS1, TS2, TS3, TS4, TS5, and TS6. The timeslot selection is a global selection for all TD-SCDMA demodulation and RF measurements.
- **2nd Channel Offset:** Sets the center frequency of the second channel. Use this menu item when the interfering carrier may be outside of the analysis span.
- **Main Channel Integration BW:** Sets the integration bandwidth. You can set the value from 500 kHz to 5 MHz.
- **Measurement Filter Shape...:** Sets the filter to be used for the measurement. You can select None, RootRaisedCosine, or RaisedCosine. The filters only affect the numerical measurement readouts, not the waveform display.
- **Time Reference:** Selects the timing reference. This setting is global to all RF measurements.
 - **DwPts:** Sets the downlink pilot as a time reference for each subframe. This setting should only be used when the downlink pilot is present in the signal under test.
 - **Uplink TS Pattern:** Sets the timeslots indicated in the Uplink TS Pattern setting as the time reference for each subframe. Specifying the timeslot pattern allows the instrument to determine proper timeslot identification in the absence of the downlink pilot time reference.

- **Uplink TS Pattern:** Specifies which timeslots are the active uplink timeslots. The uplink timeslot pattern is a concatenation of the uplink timeslots. For example, an uplink TS pattern of 13 indicates TS1 and TS3 are active uplink timeslots. The default pattern of 123 indicates TS1, TS2, and TS3 are active uplink timeslots. Integer patterns between 1 and 123456 are valid. This setting is used when the Time Reference is set to Uplink TS Pattern.

NOTE. *UpPts can also be active, but does not need to be explicitly listed.*

Downlink signals cannot be active when using the pattern method to determine subframe timing.

- **Limits...:** Displays the limits editor to set the pass/fail limits for measurements. The limits editor that displays is either the uplink or downlink editor, determined by whether the selected timeslot is an uplink or downlink timeslot. Refer to *Editing the Measurement Limits*, on page 2-65, for more information.

NOTE. *Refer to your instrument user manual for information about the scale settings for the display.*

Changing the View Contents

You can change the contents in the view using the View Define menu. Press the View: **Define** key to display the View Define menu.

- **Grid Style:** Sets the grid style in the view. You can select Off, Fix, or Flex. For Flex, the grid is changed depending on frequency or span setting.
- **Menu Off:** Hides the side menu. To display the menu again, press the **MENU** side key or View: **Define** key.

You can set the scale of the display using the Scale menu. Press the View: **Scale/Lines** key, and then press the **View Scale...** side key to open the menu.

- **Auto Scale (Amplitude):** Sets the start value and the scale of the vertical axis to display the entire waveform.
- **Horizontal Scale:** Sets the scale of the horizontal axis (number of chips or symbols).
- **Horizontal Start:** Sets the chip number or symbol number of the first (left) value of the horizontal axis.
- **Vertical Scale:** Sets the scale of the vertical axis.
- **Vertical Stop:** Sets the maximum (top) value of the vertical axis.
- **Full Scale:** Sets all scale values to their default full-scale value.

Acquisition and Analysis Parameters for Demodulation Measurements

The acquisition and analysis parameters for the measurements requiring demodulation are global settings; all demodulation measurements use the same parameters. The parameters listed in Table 2-1 affect the following measurements:

Subframe Summary	Timeslot Summary
Modulation Accuracy	Transmit On/Off Mask
Code Domain Power	Symbol Table

You can set the following acquisition and analysis parameters using the Acquisition/Analysis menu when a demodulation measurement is selected. Press the **Acquisition/Analysis** key to open the Acquisition/Analysis menu.

Table 2-1: Global demodulation timing parameter settings

Parameter	Description
Acquisition Subframes:	Sets the acquisition length in subframes. The range depends on the acquisition memory size and the span setting. A minimum of three subframes is required when phase reference is set to midamble. Seven subframes are required when phase reference is set to pilot.
Acquisition Length(s):	Displays the acquisition length in seconds.
Acquisition History:	Specifies the number of the block to display and analyze. The latest block is number zero. Older blocks have larger negative numbers.
Analysis Interval (chips):	Sets the analysis interval in chips. The range depends on the acquisition length. A minimum of three subframes are required when phase reference is set to midamble. Seven subframes are required when phase reference is set to pilot.
Analysis Offset (chips):	Sets the start point of the analysis with respect to the trigger position. In free run, the trigger position is at the left edge of the display. When triggered, the trigger position is set by the trigger position control.
Spectrum Length:	Displays the time length for spectrum processing displayed in the subview. This value is equivalent to one frame acquisition length.
Spectrum Offset(s):	Sets the beginning of the Spectrum Length with respect to the trigger position.

NOTE. Refer to your instrument user manual for detailed information about the acquisition and analysis parameters.

Measurement Parameters for Demodulation Measurements

The measurement parameters for the measurements requiring demodulation are global settings; all demodulation measurements use the same parameters. The parameters listed in Table 2-2 affect the following measurements:

Subframe Summary	Timeslot Summary
Modulation Accuracy	Transmit On/Off Mask
Code Domain Power	Symbol Table

You can set the following measurement parameters using the Meas Setup menu when a demodulation measurement is selected. Press the **Meas Setup** key to open the Meas Setup menu.

Table 2-2: Global demodulation measurement parameter settings

Parameter	Description
Analyze	Performs analysis for the time slots in the analysis range. The acquisition must be paused and an acquisition record must be present before an analysis can be made.
Analysis Control...	NOTE: Most analysis control changes do not take effect until the next Run cycle or analysis cycle.
Demod Frequency Offset (Hz)	Specifies the location of the carrier signal to be analyzed relative to the center frequency. This value is used as a starting point for the demodulation analysis.
Active Channel Threshold (dB)	Sets the active channel threshold level (in dB from the pilot) used for deciding whether a code channel is active or inactive. You can set the value from -50 dB to 50 dB.
Time Reference...	
DwPts	Sets the downlink pilot as the time reference for each subframe. This setting should only be used when the downlink pilot is present in the signal under test.
Trigger	Selects the external trigger input connector as the source for the timing reference. An external subframe trigger signal must be supplied to mark the beginning of the subframe. The trigger source setting in the Trigger menu should be set to External. The trigger time reference is useful if the signal under test does not contain a downlink pilot or if the signal level is very low.
Freq. & Phase Reference...	
Midamble	Selects the detected midamble of each timeslot as the frequency and phase reference for demodulation of the remainder of each timeslot. This setting is useful if the signal under test does not contain a downlink pilot.
DwPts	Selects the downlink pilot as the frequency and phase reference for the timeslot. Because there is only one DwPTS per subframe, when the DwPTS is used as a reference, a single phase and frequency estimate is used for every timeslot in the subframe. This reference method should only be used if the DwPTS is active and the timeslots to be analyzed are modulated at the same source as the DwPTS.

Table 2-2: Global demodulation measurement parameter settings (cont.)

Parameter	Description
Timeslot(s) to be Analyzed...	Determines which timeslots to analyze.
All Active TS	Measurement results are calculated for all active timeslots. Inactive timeslots are ignored. Active timeslots are determined by the Active Timeslot Threshold Level setting.
Current TS Only	Only the currently selected timeslot is analyzed in each subframe. All other timeslots are ignored, even if active. This setting may decrease measurement calculation times. With this selection, measurement results are only available for the selected timeslot.
Active Timeslot Threshold (dB)	Sets the threshold that determines if a timeslot is active or inactive. A timeslot that is transmitting above this level is considered active, relative to the maximum power level.
EVM includes I/Q Offset...	Yes or No. Use this setting to include (or exclude) the I/Q offsets in the error vector magnitude results.
Modulation Parameters...	NOTE: <i>Most modulation parameter changes do not take effect until the next Run cycle or analysis cycle.</i>
Parameter Control...	Selects the method used to set the parameters in this menu.
Auto	The settings are automatically determined without requiring the user to set parameters for the following: Sync-DL, Sync-UL, and Scrambling Code.
Manual	All settings can be individually set without affecting other settings in the menu.
Sync-DL	Sets the code number of the downlink pilot pattern. You can set the value from 0 to 31.
Sync-UL	Sets the code number of the uplink pilot pattern. You can set the value from 0 to 255.
Scrambling Code	Selects the scrambling code. This value is also used for the basic midamble code. You can set the value from 0 to 127.
K for Timeslots 1 through 6	Sets "K" for all timeslots except 0. You can set the value from 2 to 16.
K for Timeslot 0	Sets "K" for timeslot 0. You can set the value from 2 to 16.
Switching Point (timeslot)	Sets the Switching Point between Uplink and Downlink timeslots. You can set the value from 1 to 6.
Measurement Filter Shape	Sets the filter to be used for the measurement. You can select RootRaisedCosine, RaisedCosine, or None. Select the filter based on the filter used for transmission of the signal being tested for accurate measurement results. For RF measurements, the filters only affect the numerical measurement readouts, not the waveform displays. For demodulation measurements, the filters can affect the numerical readouts and the waveform displays.
Select Subframe	Selects the subframe to be analyzed. The subframe selection is dependent on the number of subframes that have been analyzed, which is slightly less than the length set as the Analysis Interval in the Acquisition/Analysis menu. After allowing the instrument to analyze a number of subframes, you can use this control to view the measurement results for a different subframe.
Limits...	Displays the limits editor to set the pass/fail limits for measurements. The limits editor that displays is either the uplink or downlink editor, determined by whether the selected timeslot is an uplink or downlink timeslot. The Spectrum Emission Mask has separate limit tables (accessed through the main table) and its own uplink/downlink controls. Refer to <i>Editing the Measurement Limits</i> , on page 2-65, for more information.

Table 2-2: Global demodulation measurement parameter settings (cont.)

Parameter	Description
Select Timeslot	<p>Sets the timeslot (TS) for the current measurement. The control cycles through TS0, DP (downlink pilot), UP (uplink pilot), TS1, TS2, TS3, TS4, TS5, and TS6.</p> <p>The timeslot selection is a global setting for all TD-SCDMA demodulation and RF measurements.</p> <p>The timeslot selection (whether it's an uplink or downlink timeslot) also affects the which limits editor menu is displayed (uplink or downlink).</p> <p>After allowing the instrument to analyze a number of subframes, you can use this control to view the measurement results for a different timeslot.</p>
Select Code	<p>Sets the channelization code in the timeslot for the measurement. The channelization codes in TD-SCDMA are called Orthogonal Variable Spreading Factor (OVSF) codes, and can have spreading factors from 1 to 16. You can select codes from 0 to 15, based on a spreading factor of 16. If you want to select a code with a lower spreading factor than 16, you can choose any of the daughter codes at spreading factor 16 to select the mother code at the lower spreading factor. For example, to select code 1 at spreading factor 2, you could select any code from 8 to 15 since these 8 codes are the daughter codes of this mother code.</p>
TPC and SS in Data 2	
Yes	Turns the highlighting on for the TPC and SS bits in the Data 2 burst.
No	Turns the highlighting off for the TPC and SS bits in the Data 2 burst.
TPC and SS Symbol Count	
One	Configures the symbol measurement to assume a TPC and SS symbol length of one.
16/SF	Configures the symbol measurement to assume a TPC and SS symbol length of 16 divided by the spreading factor.

Editing the Measurement Limits

This section describes how to set measurement limits to perform pass/fail testing for the TD-SCDMA measurements.

Refer to *Measurement Limit Defaults* on page 2-72 for information about the default settings of each measurement limit.

Using the Measurement Limits Editor

All measurement limits are set in the measurement limits editor, which you access from the Limits... side key on the Meas Setup menu.

The Limits editor menu is divided into two groups, uplink and downlink limits. The limit menu that displays when you press the Limits... side key is dependent on the currently selected timeslot and the timeslot switching point (except for the SEM measurements).

The SEM Limits editor display is dependent on the Uplink or Downlink setting in the SEM measurement parameters.

NOTE. *There are six separate limits editor tables:*

Downlink limit editor (main)

Uplink limit editor (main)

SEM Offset From Channel downlink editor

SEM Offset From Channel uplink editor

SEM Inband Spurious downlink editor

SEM Inband Spurious uplink editor

Figure 2-27 shows the measurement limits editor (downlink) for the TD-SCDMA measurements.

When changing limits, the pass/fail status of the measurements do not update until the next run or analysis cycle (or changing the timeslot, subframe, switching point, or select code). In the case of the transmit on/off masks measurement, the masks update when exiting the limits editor but the mask region does not change until the next run or analysis cycle.

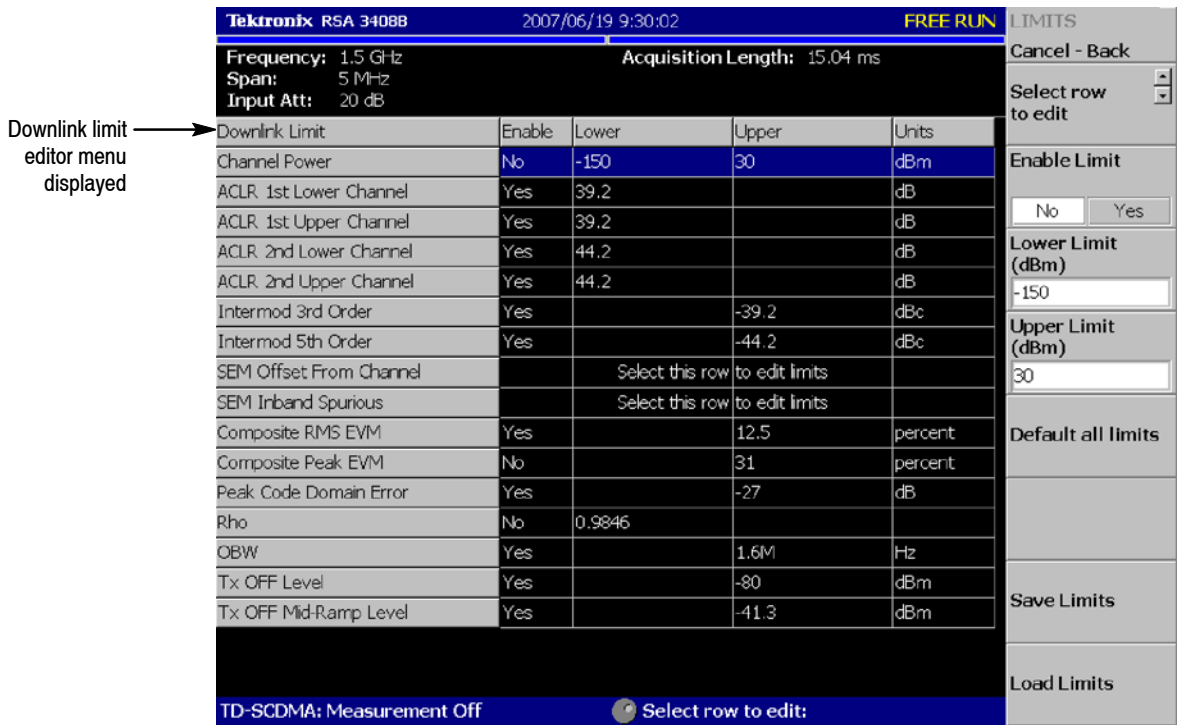


Figure 2-27: Measurement limits editor

Table 2-3 describes all of the measurement limit items that are available in the measurement limits editor.

Table 2-3: Measurement limits items

Limit item	Description	Lower limit range	Upper limit range
Channel power	Sets the lower and upper limits for the Channel Power measurement.	-200 to 200 dBm	-200 to 200 dBm
ACLR 1st Lower Channel	Sets the upper limit for the first lower adjacent channel in the ACLR measurement.	Not settable	-70 to 70
ACLR 1st Upper Channel	Sets the upper limit for the first upper adjacent channel in the ACLR measurement.	Not settable	-70 to 70
ACLR 2nd Lower Channel	Sets the upper limit for the second lower adjacent channel in the ACLR measurement.	Not settable	-70 to 70
ACLR 2nd Upper Channel	Sets the upper limit for the second upper adjacent channel in the ACLR measurement.	Not settable	-70 to 70
Intermod 3rd Order	Sets the upper limit of the third harmonic distortion component for the Intermodulation measurement.	Not settable	-200 to 200 dBc

Table 2-3: Measurement limits items (cont.)

Limit item	Description	Lower limit range	Upper limit range
Intermod 5th Order	Sets the upper limit of the fifth harmonic distortion component for the Intermodulation measurement.	Not settable	-200 to 200 dBc
SEM Offset From Channel	Select this item to access another measurement limits editor to edit SEM offset from channel limits. Refer to page 2-69.	-----	-----
SEM Inband Spurious	Select this item to access another measurement limits editor to edit SEM Inband spurious limits. Refer to page 2-69.	-----	-----
Composite RMS EVM	Sets the upper limit for the RMS EVM measurement.	Not settable	0 to 100%
Composite Peak EVM	Sets the upper limit for the Peak EVM measurement.	Not settable	0 to 100%
Peak Code Domain Error	Sets the upper limit for the Peak code domain error measurement.	Not settable	-200 to 200 dB
Rho	Sets the lower limit of Rho for the modulation accuracy measurement.	0 to 1	Not settable
OBW	Sets the upper and lower limits for the OBW measurement.	0 to 30 MHz	0 to 30 MHz
Tx OFF Level	Sets the upper limit of the mask region not part of the mid-ramp region in the transmit on/off mask measurement.	Not settable	-100 to 100
Tx OFF Mid-Ramp Level	Sets the upper limit of the mid-ramp power within the mid-ramp region in the transmit on/off mask measurement.	Not settable	-100 to 100

Setting a Measurement Limit

Perform the following procedure to set measurement limits:

1. Press the **Meas Setup** menu key to open the Meas Setup menu.
2. Press the **Limits...** side key to open the measurement limits menu and editor.
3. Press the **Select row to edit** side key.
4. Turn the general purpose knob or press the up/down arrow keys to select the row that you want to edit.
5. Press the **Enable Limit** side key to enable or disable the pass/fail testing for the specified limit(s).
6. Press the **Lower Limit** side key to set the lower limit for the selected measurement item, if applicable.

7. Press the **Upper Limit** side key to set the upper limit for the selected measurement item.

NOTE. *The Default all limits side key resets the limit settings to their default values of the currently displayed limits editor table. Other limit editor tables are not affected.*

When you want to set limits for the spectrum emission mask, perform the following steps to open the SEM measurement limits editor:

1. Press the **Select row to edit** side key.
2. Turn the general purpose knob or press the up/down arrow keys to select SEM Offset From Channel or SEM Inband Spurious.
3. Press the **Edit SEM Offset Limits...** or **Edit SEM Inband Limits...** side key. This opens the limits editor to set more complex limits. Refer to *Setting the Spectrum Emission Mask Limits*, on page 2-69, for more information about the SEM limit tables.

Setting the Spectrum Emission Mask Limits

When you select the SEM Offset From Channel or SEM Inband Spurious row in the measurement limits editor, another measurement limits editor for the spectrum emission mask measurement is displayed. Figure 2-28 shows the measurement limits editor for the Spectrum Emission Offset From Channel measurement.

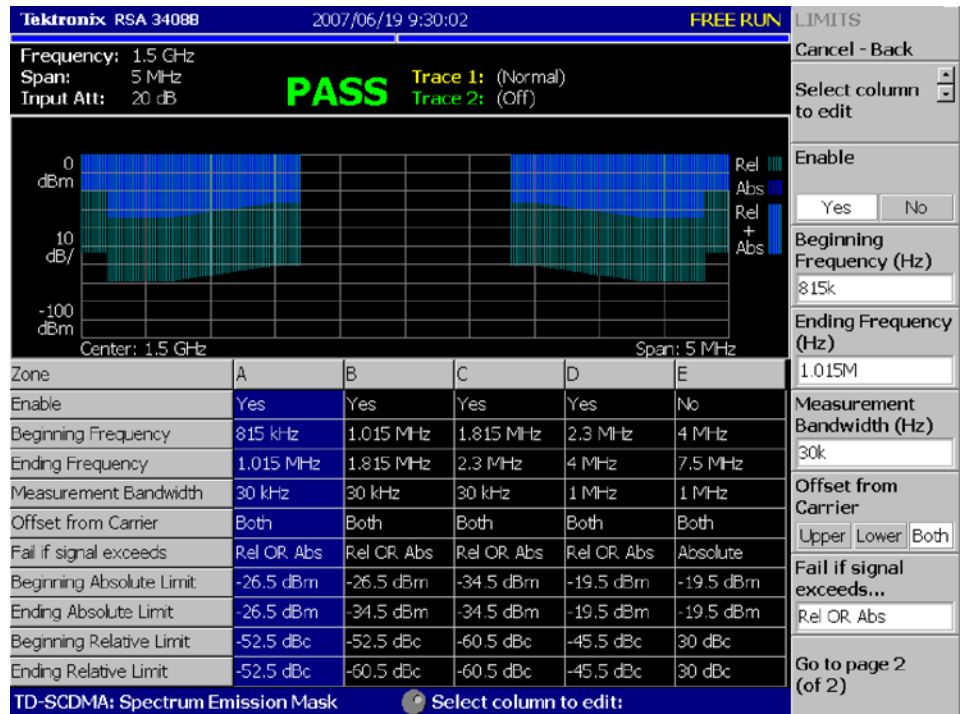


Figure 2-28: Spectrum emission mask measurement limits editor

Table 2-4 lists the measurement limit items that can be set in the SEM measurement limits editor.

Table 2-4: Measurement limit items for the spectrum emission mask measurements

Item	Description	Limit ranges
Enable	Enables or disables use of the mask in the specified zone (A, B, C, D, or E).	-----
Beginning Frequency	Sets the beginning frequency for the zone.	-8 GHz to 8 GHz
Ending Frequency	Sets the ending frequency for the zone.	-8 GHz to 8 GHz
Measurement Bandwidth	Sets the measurement bandwidth.	1kHz to 10 MHz
Offset from Carrier ¹	Specifies which offset side is to be measured. You can select Upper (positive), Lower (negative), or Both.	-----

Table 2-4: Measurement limit items for the spectrum emission mask measurements (cont.)

Item	Description	Limit ranges
Fail if signal exceeds	Selects the fail mode to detect fail conditions between the measurement results and the test limits. The choices are: <ul style="list-style-type: none"> ■ Absolute: Fail is detected when one of the absolute measurement results is larger than the limit for Beginning Absolute Limit and/or Ending Absolute Limit. ■ Relative: Fail is detected when one of the relative measurement results is larger than the limit for Beginning Relative Limit and/or Ending Relative Limit. ■ Rel OR Abs: Fail is detected when one of the absolute measurement results is larger than the limit for Beginning Absolute Limit and Ending Absolute Limit OR one of the relative measurement results is larger than the limit for Beginning Relative Limit and Ending Relative Limit. ■ Rel AND Abs: Fail is detected when one of the absolute measurement results is larger than the limit for Beginning Absolute Limit and Ending Absolute Limit AND one of the relative measurement results is larger than the limit for Beginning Relative Limit and Ending Relative Limit. 	-----
Beginning Absolute Limit	Sets an absolute level limit at Beginning Frequency.	-200 dBm to 200 dBm
Ending Absolute Limit	Sets an absolute level limit at Ending Frequency.	-200 dBm to 200 dBm
Beginning Relative Limit	Sets a relative level limit at Beginning Frequency.	-200 dBm to 200 dBc
Ending Relative Limit	Sets a relative level limit at Ending Frequency.	-200 dBm to 200 dBc

¹ The Offset from Carrier limit is only available for the SEM Offset From Channel limit editor menu.

Perform the following steps to set measurement limits in the limits editor:

1. Press the **Select column to edit** side key.
2. Turn the general purpose knob or press the up/down arrow keys to select the column that you want to edit.
3. Press the **Enable** side key to enable or disable use of the limits for the zone.
4. Press the side key corresponding to the limit item, and then use the general purpose knob or the up/down arrow keys to set the value.
5. Press the **Default limits** side key if you want to reset all limits (of the displayed limits table) to their default values. Refer to *Measurement Limit Defaults*, on page 2-72, for the default settings of each measurement limit.
6. Press the **Rescale Graph** side key to scale the graph to match the new limits.

Saving and Loading Measurement Limits

Measurement limits set in the measurement limits editor can be saved as a file and loaded from a file. Both the uplink and downlink limits are saved in the same file. This section describes how to save and load measurement limits.

Refer to the your instrument user manual for further information about file operation including how to enter a file name and how to delete a file.

Saving Measurement Limits

Perform the following steps to save the current measurement limits to a file:

1. When you open the a spectrum emission mask measurement limits editor, press the **Cancel-Back** (MENU) side key to return the measurement limit editor.
2. Press the **Save Limits** side key to open the **Save to File** menu. You can save the limits by using the preset file name or by entering a new file name.
3. To use the preset file name, press one of the following side keys: **Save to LimitsA**, **Save to LimitsB**, or **Save to LimitsC**.
4. To enter a new file name, type a file name in the text box at the top of the menu, and then press the **Save File Now** side key.

The file extension *.lmt is automatically added to the limits file.

Loading Measurement Limits

Perform the following steps to load measurement limits from a file:

1. When you open the spectrum emission mask measurement limits editor or gated output power measurement limits editor, press the **Cancel-Back** (MENU) side key to return the measurement limit editor.
2. Press the Load Limits side key to open the Load From File menu.
3. To load limits from the preset file, press one of the following side keys: **Load from LimitsA**, **Load from LimitsB**, or **Load from LimitsC**.
4. To load limits from an existing file, select the file from the file list, and then press the **Load File Now** side key.

Measurement Limit Defaults

Tables 2-5 through 2-9 list the default limit settings used to perform the pass/file testing for the TD-SCDMA measurements. Refer to *Using the Measurement Limits Editor* on page 2-65 for procedures to edit the measurement limits.

Tables 2-5 and 2-6 list the default limit settings for the downlink and uplink measurements (excluding SEM). Tables 2-8 through 2-9 list the default limit settings for the downlink and uplink SEM measurements.

NOTE. *The Default all limits and Default limits side keys reset the limit settings to the default values of the currently displayed limits editor table. Other limit editor tables are not affected.*

Table 2-5: Downlink main table default limits

Limit item	Enable	Lower	Upper	Units
Channel power	No	-150	N/A	dBm
ACLR 1st Lower Channel	Yes	39.2	N/A	dB
ACLR 1st Upper Channel	Yes	39.2	N/A	dB
ACLR 2nd Lower Channel	Yes	44.2	N/A	dB
ACLR 2nd Upper Channel	Yes	44.2	N/A	dB
Intermod 3rd Order	Yes	N/A	-39.2	dBc
Intermod 5th Order	Yes	N/A	-44.2	dBc
Composite RMS EVM	Yes	N/A	12.5	percent
Composite Peak EVM	No	N/A	31	percent
Peak Code Domain Error	Yes	N/A	-27	dB
Rho	No	0.9846	N/A	N/A
OBW	Yes	N/A	1.6M	Hz
Tx OFF Level	Yes	N/A	-80	dBm
Tx OFF Mid-Ramp Level	Yes	N/A	-41.3	dBm

Table 2-6: Uplink main table default limits

Limit item	Enable	Lower	Upper	Units
Channel power	No	-150	N/A	dBm
ACLR 1st Lower Channel	Yes	33	N/A	dB
ACLR 1st Upper Channel	Yes	33	N/A	dB
ACLR 2nd Lower Channel	Yes	43	N/A	dB

Table 2-6: Uplink main table default limits (cont.)

Limit item	Enable	Lower	Upper	Units
ACLR 2nd Upper Channel	Yes	43	N/A	dB
Intermod 3rd Order	Yes	N/A	-31	dBc
Intermod 5th Order	Yes	N/A	-41	dBc
Composite RMS EVM	Yes	N/A	17.5	percent
Composite Peak EVM	No	N/A	31	percent
Peak Code Domain Error	Yes	N/A	-21	dB
Rho	No	0.9703	N/A	N/A
OBW	Yes	N/A	1.6M	Hz
Tx OFF Level	Yes	N/A	-65	dBm
Tx OFF Mid-Ramp Level	Yes	N/A	-50.0	dBm

Table 2-7: Downlink SEM offset from channel default limits

Zone	A	B	C	D	E
Enable	Yes	Yes	Yes	Yes	No
Beginning Frequency	815 kHz	1.015 MHz	1.815 MHz	2.3 MHz	4 MHz
Ending Frequency	1.015 MHz	1.815 MHz	2.3 MHz	4 MHz	7.5 MHz
Measurement Bandwidth	30 kHz	30 kHz	30 KHz	1 MHz	1 MHz
Offset from Carrier	Both	Both	Both	Both	Both
Fail if signal exceeds	Rel OR Abs	Rel OR Abs	Rel OR Abs	Rel OR Abs	Absolute
Beginning Absolute Limit	-26.5 dBm	-26.5 dBm	-34.5 dBm	-19.5 dBm	-19.5 dBm
Ending Absolute Limit	-26.5 dBm	-34.5 dBm	-34.5 dBm	-19.5 dBm	-19.5 dBm
Beginning Relative Limit	-52.5 dBm	-52.5 dBm	-60.5 dBc	-45.5 dBc	30 dBc
Ending Relative Limit	-52.5 dBm	-60.5 dBc	-60.5 dBc	-45.5 dBc	30 dBc

Table 2-8: Uplink SEM offset from channel default limits

Zone	A	B	C	D	E
Enable	Yes	Yes	Yes	Yes	No
Beginning Frequency	815 kHz	1.815 MHz	2.385 MHz	2.9 MHz	3.5 MHz
Ending Frequency	1.815 MHz	2.385 MHz	2.9 MHz	3.5 MHz	7.5 MHz
Measurement Bandwidth	30 kHz	30 kHz	30 KHz	1 MHz	1 MHz
Offset from Carrier	Both	Both	Both	Both	Both
Fail if signal exceeds	Rel OR Abs	Rel OR Abs	Rel OR Abs	Rel OR Abs	Absolute

Table 2-8: Uplink SEM offset from channel default limits (cont.)

Zone	A	B	C	D	E
Beginning Absolute Limit	-55 dBm	-55 dBm	-55 dBm	-55 dBm	-55 dBm
Ending Absolute Limit	-55 dBm	-55 dBm	-55 dBm	-55 dBm	-55 dBm
Beginning Relative Limit	-35 dBm	-49 dBc	-54 dBc	-49 dBc	30 dBc
Ending Relative Limit	-49 dBc	-54 dBc	-54 dBc	-49 dBc	30 dBc

Table 2-9: Downlink SEM inband spurious default limits

Zone	A	B	C	D	E
Enable	Yes	Yes	No	No	No
Beginning Frequency	30 MHz	1 GHz	1.84 GHz	2.035 GHz	3 GHz
Ending Frequency	1 GHz	1.84 GHz	2.035 GHz	3 GHz	8 GHz
Measurement Bandwidth	100 kHz	1 MHz	1 MHz	1 MHz	1 MHz
Fail if signal exceeds	Absolute	Absolute	Absolute	Absolute	Absolute
Beginning Absolute Limit	-36 dBm	-30 dBm	-15 dBm	-30 dBm	-30 dBm
Ending Absolute Limit	-36 dBm	-30 dBm	-15 dBm	-30 dBm	-30 dBm
Beginning Relative Limit	30 dBc	30 dBc	30 dBc	30 dBc	30 dBc
Ending Relative Limit	30 dBc	30 dBc	30 dBc	30 dBc	30 dBc

Table 2-10: Uplink SEM inband spurious default limits

Zone	A	B	C	D	E
Enable	Yes	Yes	No	No	No
Beginning Frequency	30 MHz	1 GHz	925 MHz	935 MHz	1.805 GHz
Ending Frequency	1 GHz	3 GHz	935 MHz	960 MHz	1.88 GHz
Measurement Bandwidth	100 kHz	100 kHz	100 kHz	100 kHz	100 kHz
Fail if signal exceeds	Absolute	Absolute	Absolute	Absolute	Absolute
Beginning Absolute Limit	-36 dBm	-30 dBm	-15 dBm	-30 dBm	-30 dBm
Ending Absolute Limit	-36 dBm	-30 dBm	-15 dBm	-30 dBm	-30 dBm
Beginning Relative Limit	30 dBc	30 dBc	30 dBc	30 dBc	30 dBc
Ending Relative Limit	30 dBc	30 dBc	30 dBc	30 dBc	30 dBc



Appendices

Appendix A: Setting Range

This section lists the setting range of the horizontal and vertical scale for the views.

Table A- 1: Display format and scale

Display format	Horizontal range	Vertical range
Spectrum	0 Hz to 8 GHz	-200 dBm to 100 dBm
Spectrogram	0 Hz to 8 GHz	-15999 to 0 frame
Code domain power	16 codes	Relative: -200 dB to 100 dB Absolute: 140 dBm to -160 dBm
CDP versus subframe	Variable Maximum: 4000 subframes (Standard), 1000 subframes (Opt 02)	Relative: -200 dB to 100 dB Absolute: 140 dBm to -160 dBm
CDP versus symbol	Data: Variable, based on spreading factor. Maximum: 704	Relative: -200 dB to 100 dB Absolute: 140 dBm to -160 dBm
CDP codogram	16 codes	-1000 to 0 subframes (Standard) -2047 to 0 subframes (Option 02)
Composite constellation	Fixed	Fixed
Symbol constellation	Fixed	Fixed
EVM	704 symbols maximum	-100% to 200%
Magnitude error	704 symbols maximum	-300% to 300%
Phase error	704 symbols maximum	-675 degrees to 675 degrees
Symbol table	Data: 704 maximum	-
Power versus time	Timeslot Summary (full burst): 0 to +675 μ sec and 6.25 μ sec additional pre/post timeslot data (and chip position within subframe) Subframe Summary: -5.0 msec to 0 msec (6400 chip) Transmit On/Off Mask: same as subframe summary	-200 dBm to 100 dBm



Index

Index

A

- ACLR measurement, 2-39
- Acquisition history, 2-61
- Acquisition length, 2-61
- Acquisition subframes, 2-61
- Active channel threshold, 2-62
- Active channels, 2-26
 - CDP display
 - active channels, 2-26
 - inactive channels, 2-26
- Active timeslot threshold, 2-63
- All active TS, 2-63
- Analysis area, 2-6
- Analysis control, demodulation, 2-62
- Analysis interval, 2-61
- Analysis offset, 2-61
- Analyze, 2-62
- Auto, 2-63
- Average burst power, 2-50

C

- Channel power measurement, 2-33
- Code domain power by codogram display, 2-31
- Code domain power by subframe display, 2-28
- Code domain power by symbol display, 2-29
- Code domain power display, 2-25
- Code domain power measurement, 2-23
- Composite constellation display, 2-12
- Current TS only, 2-63

D

- Data1 power, 2-50
- Data2 power, 2-50
- Demod frequency offset, 2-62
- Downlink mask, transmit on/off measurement, 2-51
- Downlink pilot, 2-8
- DwPts, 2-62
- DwPts pattern, 2-8
- DwPts RMS power, 2-8

E

- Editing measurement limits, 2-65
- EVM includes I/Q offset, 2-63

F

- Frequency & phase reference, 2-62
 - DwPts, 2-62
 - midamble, 2-62
- Functional overview, 2-1

G

- GP RMS power, 2-8
- Guard period, 2-8

I

- Ideal timeslot, 2-50
- Inactive channels, 2-26
- Intermodulation measurement, 2-58

K

- K value, 2-50
- K for timeslots, 2-63

L

- Loading measurement limits, 2-71

M

- Phase error display, 2-20
- Magnitude error display, 2-18
- Manual, 2-63
- Manuals, related, vi
 - PDF, vi
- Measurement
 - ACLR, 2-39
 - Channel power, 2-33
 - Code domain power, 2-23
 - intermodulation, 2-58
 - Modulation accuracy, 2-9
 - Spectrum emission mask, 2-43
 - Subframe summary, 2-6
 - Symbol table display, 2-55
 - Timeslot summary, 2-47
 - Transmit on/off mask, 2-51
- Measurement filter shape, 2-63

Measurement limit defaults, 2-72

Measurement limits

 editing, 2-65

 loading, 2-71

 saving, 2-71

 setting, 2-67

Acquisition and analysis parameters

 code domain power, 2-61

 modulation accuracy, 2-61

 subframe summary, 2-61

 symbol table, 2-61

 timeslot summary, 2-61

 transmit on/off mask, 2-61

Measurement parameters

 code domain power, 2-62

 modulation accuracy, 2-62

 subframe summary, 2-62

 symbol table, 2-62

 timeslot summary, 2-62

 transmit on/off mask, 2-62

Midamble, 2-62

Midamble power, 2-50

Modulation accuracy measurement, 2-9

 phase error display, 2-20

 composite constellation display, 2-12

 magnitude error display, 2-18

 symbol constellation display, 2-14

 symbol EVM display, 2-16

Modulation parameters, 2-63

Multiframe position, 2-8

O

Overview, functional, 2-1

P

Parameter control, 2-63

 auto, 2-63

 manual, 2-63

PDF manual, vi

R

Ranges, A-1

Related manuals, vi

S

Saving measurement limits, 2-71

Scrambling code, 2-8, 2-63

Select code, 2-64

Select timeslot, 2-64

Selected timeslot, subframe summary, 2-6

Setting range, A-1

Spectrum emission mask measurement, 2-43

Spectrum length, 2-61

Spectrum offset, 2-61

Subframe summary, 2-6

Switching point, 2-8, 2-63

Symbol constellation display, 2-14

Symbol EVM display, 2-16

Symbol table display, 2-55

Sync-DL, 2-63

Sync-UL, 2-63

T

TD-SCDMA measurements, 2-5

Time reference, 2-62

 DwPts, 2-62

 trigger, 2-62

Timeslot summary, 2-47

Timeslot summary measurement

 ideal timeslot, 2-50

 zoom, 2-49

Timeslot(s) to be analyzed, 2-63

 All active TS, 2-63

 Current TS only, 2-63

Timing error, 2-50

TPC and SS, 2-64

Transmit on/off mask, 2-51

 zoom, 2-53

Trigger, 2-62

U

Uplink mask, transmit on/off measurement, 2-51

Uplink pilot, 2-8

UpPts RMS power, 2-8

W

Wide codes, 2-26

Z

Zoom

 timeslot summary measurement, 2-49

 transmit on/off measurement, 2-53