

User Manual



NetTek Analyzer OTDR Modules

071-0763-00

This document supports software version
1.0-1.XX and above.

www.tektronix.com

Copyright © Tektronix, Inc. All rights reserved.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supercedes that in all previously published material. Specifications and price change privileges reserved.

Tektronix, Inc., P.O. Box 500, Beaverton, OR 97077

TEKTRONIX, TEK, NETTEK, TARGET1, and INTELLITRACE PLUS are registered trademarks of Tektronix, Inc.

WARRANTY

Tektronix warrants that the products that it manufactures and sells will be free from defects in materials and workmanship for a period of one (1) year from the date of purchase from an authorized Tektronix distributor. If any such product proves defective during this warranty period, Tektronix, at its option, either will repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product. Batteries are excluded from this warranty.

In order to obtain service under this warranty, Customer must notify Tektronix of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. Customer shall be responsible for packaging and shipping the defective product to the service center designated by Tektronix, shipping charges prepaid, and with a copy of customer proof of purchase. Tektronix shall pay for the return of the product to Customer if the shipment is to a location within the country in which the Tektronix service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. Tektronix shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than Tektronix representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; c) to repair any damage or malfunction caused by the use of non-Tektronix supplies; or d) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY TEKTRONIX WITH RESPECT TO THE LISTED PRODUCTS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. TEKTRONIX AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TEKTRONIX' RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE SOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR BREACH OF THIS WARRANTY. TEKTRONIX AND ITS VENDORS WILL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER TEKTRONIX OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.



Table of Contents

General Safety Summary	vii
Preface	ix
Conventions	x
About this Manual	xi
Related Documentation	xii
Software Version	xiii
Contacting Tektronix	xiv

Getting Started

Getting Started	1-1
Product Description	1-1
Installing an Instrument Module	1-2
Removing an Instrument Module	1-6
Laser Optical Port and Connector Adapter	1-7
Install the Appropriate Connector Adapter	1-9
Remove a Connector Adapter	1-10

Operating Basics

Operating Basics	2-1
Using the Online Help	2-1
Elements of the Main Screen	2-3
Main Screen Buttons	2-3
Viewing the Trace and Table	2-5
Changing the Proportions of the Trace and Table Regions ..	2-5
Setting Trace Display Options	2-5
Zooming	2-6
Sizing the Zoom Box with the Zoom Size... Button	2-8
Cursors	2-9
Event Table Columns	2-10
Tutorial	2-13
Take a Basic Measurement	2-13
Analyze the Results	2-14

Examine the Trace Data	2-14
Find the Length of the Fiber	2-16
Examine the Two-point Loss	2-16
Examine an Event	2-17
Examine the Event Table Data	2-17
Setting Up Tests and Limits	2-18
Setting the Test Settings	2-18
Limits Tab	2-22
Saving Tests and Settings	2-23
Save Test Tab	2-23
Save Settings and Limits Only Tab	2-25
Opening Trace or Setting and Limit Files	2-26
Opening a Trace File	2-26
Opening a Settings and Limits Only File	2-28
Determine What Settings Where Used for a Trace	2-29
Examine the Test1.SOR & Test2.SOR Files	2-31

Reference

Taking Measurements	3-1
Performing Event Loss Measurements	3-2
Event Loss Advanced Controls	3-3
Performing Two Point Measurements	3-4
Two Point Loss Advanced Controls	3-5
Performing Reflectance Measurements	3-6
Reflectance Advanced Controls	3-6
Performing ORL Measurements	3-7
Compare Two Traces in Dual Trace Mode	3-8
Performing Bidirectional Averages Measurement	3-9
Performing Difference Measurements	3-11
Auto Test and Save Dialog Box	3-12
Auto Sequence Wavelength Choices Dialog Box	3-14
Other Features	3-15
Increasing the Range	3-16
Printing	3-17
Using with a Keyboard	3-18
Join Cursors	3-19
About File Types	3-19
Making Notes on Events, Landmarks, and Fibers	3-20

Event / Landmark Notes Dialog Box	3-20
Fiber Notes Dialog Box	3-22
Adding, Moving, and Deleting, Events or Landmarks	3-24
Adding Events	3-24
Moving Events	3-25
Adding Landmarks	3-26
Moving Landmarks	3-27
Deleting Events	3-27
Deleting Landmarks	3-28
Deleting All Landmarks	3-28
Freezing Events	3-28

Appendices

Appendix A: Specifications	A-1
Appendix B: User-replaceable Parts, Options, and Accessories	B-1
Appendix C: Maintenance	C-1
Cleaning	C-1
Cleaning the Optical Port	C-2
Cleaning the Connector Adapter	C-2
Cleaning the Test Fiber Connector	C-3
Cleaning the Exterior of the Module	C-3
Transporting the OTDR	C-4
Repackaging for Shipment	C-5

Glossary

Index

Figures

Figure 1-1: Removing the bus door	1-3
Figure 1-2: Install instrument module	1-4
Figure 1-3: Laser optical connector	1-8
Figure 1-4: Connector adapter installation	1-9
Figure 2-1: Main screen	2-3
Figure 2-2: Zoomed out trace	2-6
Figure 2-3: Zoomed in trace, with overview box showing whole trace	2-7
Figure 2-4: Event Table Only view	2-10
Figure 2-5: Sample file Test1.SOR illustrates that different types of events can look similar	2-32
Figure 2-6: Compare the amounts of loss and reflectance in each of the events in the sample file Test1.SOR	2-33
Figure 2-7: Event 2 is an FC regular connector	2-34
Figure 2-8: Event 3 is a fusion splice	2-35
Figure 2-9: Event 4 is a mechanical splice	2-36
Figure 2-10: Event 5 is a bend	2-37
Figure 2-11: Event 6 is a fusion splice	2-38
Figure 2-12: Event 7 is the end of the fiber	2-39
Figure 2-13: Sample file test2.SOR shows a worn angle-polished connector (Event 5) and several fusion splices	2-40
Figure 3-1: Event Loss for Event 2	3-2
Figure 3-2: Bidirectional Averages traces	3-9

Tables

Table i: NetTek Analyzer OTDR Modules	ix
Table 2-1: Help window buttons	2-2
Table 2-2: Main screen buttons	2-4
Table 2-3: Event Table column definitions	2-11
Table 2-4: Event Table symbols and highlights	2-12
Table 2-5: Choosing the Test Mode	2-21
Table A-1: NetTek Analyzer OTDR Module characteristics	A-1
Table A-2: General characteristics	A-2
Table A-3: Transportation and storage	A-4
Table A-4: Environmental characteristics	A-5
Table A-5: Physical characteristics	A-7
Table A-6: Miscellaneous characteristics	A-7
Table A-7: Certifications and compliances	A-8
Table A-8: Safety compliance	A-9
Table B-1: User-replaceable parts	B-1
Table B-2: Connector Options	B-1
Table B-3: Optional accessories	B-2
Table B-4: Standard accessories	B-2

Table of Contents

General Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified.

Only qualified personnel should perform service procedures.

While using this product, you may need to access other parts of the system. Read the *General Safety Summary* in other system manuals for warnings and cautions related to operating the system.

To Avoid Fire or Personal Injury

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.

The common terminal is at ground potential. Do not connect the common terminal to elevated voltages.

Do Not Operate Without Covers. Do not operate this product with covers or panels removed.

Avoid Exposed Circuitry. Do not touch exposed connections and components when power is present.

Wear Eye Protection. Wear eye protection if exposure to high-intensity rays or laser radiation exists.

Do Not Operate With Suspected Failures. If you suspect there is damage to this product, have it inspected by qualified service personnel.

Do Not Operate in Wet/Damp Conditions.

Do Not Operate in an Explosive Atmosphere.

Keep Product Surfaces Clean and Dry.

Provide Proper Ventilation. Refer to the manual's installation instructions for details on installing the product so it has proper ventilation.

Safety Terms and Symbols

Terms in This Manual. These terms may appear in this manual:



WARNING. *Warning statements identify conditions or practices that could result in injury or loss of life.*



CAUTION. *Caution statements identify conditions or practices that could result in damage to this product or other property.*

Terms on the Product. These terms may appear on the product:

DANGER indicates an injury hazard immediately accessible as you read the marking.

WARNING indicates an injury hazard not immediately accessible as you read the marking.

CAUTION indicates a hazard to property including the product.

Symbols on the Product. These symbols may appear on the product:



CAUTION
Refer to Manual



Double
Insulated



Protective Ground
(Earth) Terminal



Laser Aperture



Static Sensitive

Preface

This manual contains operating instructions for several Tektronix NetTek Analyzer OTDR modules. See Table i.

Table i: NetTek Analyzer OTDR Modules

Module	Fiber type	Range	Wavelengths
YSS1310	Singlemode	Standard	1310 nm
YSS1315	Singlemode	Standard	1310 nm / 1550 nm
YSL1315	Singlemode	Long	1310 nm / 1550 nm
YSL1625	Singlemode	Long	1625 nm
YSL1516	Singlemode	Long	1550 nm / 1625 nm
YSU1315	Singlemode	Ultra long	1310 nm / 1550 nm
YSU1625	Singlemode	Ultra long	1625 nm

Related Products

The Y350C and Y350M NetTek Analyzer Platform supports the NetTek Series of OTDR and base station instrument module test tools that you can add or remove from the analyzer platform.

The NetTek analyzer platform accepts up to four modules at once, plus a PCMCIA module. You can mix and match modules to suit your needs. The platform is a full capability hand-held PC, running Windows CE.

Conventions

This book uses the following convention to represent menus:

To open the help window and find information on a specific topic, you would be instructed to select **Start > Help**. To accomplish this, tap **Start** in the toolbar at the bottom of the desktop window; then tap **Help** in the resulting WindowsCE menu.

Words in italics, such as *event loss*, indicate a glossary term.

About this Manual

Refer to this documentation for information such as the following:

- Module installation instructions
- Location of the laser on the OTDR
- Overview of screen features
- Tutorial for basic measurement and analysis tasks
- Measurement descriptions
- OTDR specifications, options and accessories, and user maintenance information
- OTDR terminology

Related Documentation

For general help and content sensitive help for the OTDR, refer to the OTDR online help.

- *NetTek Analyzer OTDR Online Help*
(In the OTDR application, select **Help > Help Topics...** or tap the **?** button in a dialog box.)

The OTDR module attaches to and runs on the Y350C or Y350M NetTek Analyzer platforms. For platform information, refer to the following resources:

- *Y350C and Y350M NetTek Analyzer Platform User Manual*
- *Y350C and Y350M NetTek Analyzer Platform Online Help*
(Select **Start > Help** or tap the **?** button in a dialog box.)
- *Windows CE Operating System Online Help*
(Select **Start > Help** or tap the **?** button in a dialog box.)

Refer to the platform resources listed above for information about the following topics:

- Battery and AC power, Battery care
- Platform power on and functional check
- Touch-screen calibration
- Platform operating instructions and menu descriptions

- Memory resources, floppy disk storage, PCMCIA interface
- Remote PC connection
- Instructions for upgrading platform software and changing the language
- Platform technical specifications
- Platform accessories, maintenance, diagnostics

Software Version

This manual supports firmware version 1.0-1.XX and above of the NetTek Analyzer OTDR.

To verify your software and firmware versions, do the following:

1. Open the OTDR application.
2. Select **Help > About OTDR...**

Contacting Tektronix

Phone	1-800-833-9200*
Address	Tektronix, Inc. Department or name (if known) 14200 SW Karl Braun Drive P.O. Box 500 Beaverton, OR 97077 USA
Web site	www.tektronix.com
Sales support	1-800-833-9200, select option 1*
Service support	1-800-833-9200, select option 2*
Technical support	Email: techsupport@tektronix.com 1-800-833-9200, select option 3* 1-503-627-2400 6:00 a.m. - 5:00 p.m. Pacific time

* **This phone number is toll free in North America. After office hours, please leave a voice mail message. Outside North America, contact a Tektronix sales office or distributor; see the Tektronix web site for a list of offices.**



Getting Started



Getting Started

Before using the NetTek Analyzer Platform for the first time, refer to the platform user manual for information on getting started, including the following:

- Battery and power source information. (You must charge the batteries before you can operate the NetTek Analyzer Platform from internal battery power.)
- Calibrating the touch screen.
- Installing the tilt stand, shoulder strap, or strand hook.

Product Description

An optical time domain reflectometer (OTDR) measures and locates fiber characteristics by transmitting light pulses into a fiber and measuring the elapsed time and the amplitude of the received reflection. The OTDR measures the distance to an event by measuring the amount of time required to receive the reflection.

With this OTDR, you can:

- Document and verify installations of new fibers in a network.
- Locate faults in the fiber.
- Check bandwidth upgrade capability by measuring the return loss and end-to-end loss in the network.
- Perform general preventive maintenance.

The NetTek Analyzer OTDR, with its easy-to-use interface, gives you good results with minimal training. The IntelliTrace Plus test mode automatically optimizes test parameters so you don't have to. It gives you the best resolution on every section of the fiber while maximizing dynamic range. The NetTek Analyzer OTDR provides an IntelliTrace Plus multi-pulsewidth, single-result auto test function to significantly reduce dead zone effects on your tests. You can see close events, including the first connector, at the same time you see events 200 km away. Advanced wave-shape analysis software finds more events than other OTDRs can locate. All these features combine to give you more information on your cables, with precise accuracy.

Installing an Instrument Module

Use the following procedure to install an instrument module onto the rear of the NetTek Analyzer Platform or to attach one module onto another. Refer to Figure 1-2 throughout this procedure.



CAUTION. *The platform and modules contain static sensitive devices. Do not touch the connector pins.*

1. Power off the NetTek Analyzer Platform: select **Start > Shutdown**.
2. Disconnect all cables to the NetTek Analyzer Platform and instrument modules.

3. Place the NetTek Analyzer face down on a flat surface. Support the analyzer by its four corner bumpers only.
4. Remove the bus door from the rear of the NetTek Analyzer Platform or instrument module. See Figure 1-1 or 1-2.

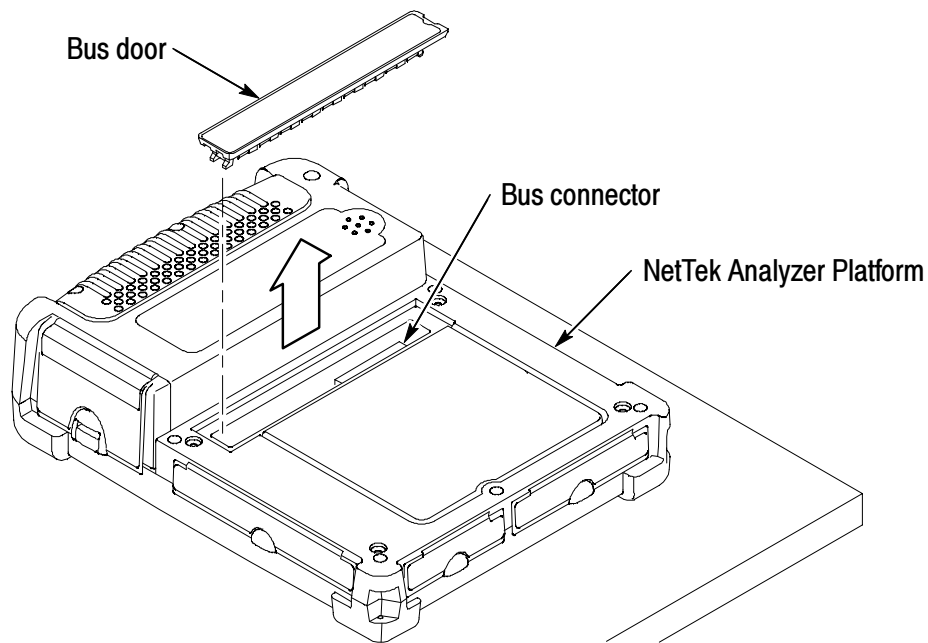


Figure 1-1: Removing the bus door

5. Carefully lower an Instrument module onto the NetTek Analyzer Platform or previously installed module to engage the bus connector. See Figure 1-2.

6. Press down firmly to seat the connector and ensure electrical contact.
7. Locate the four thumb screws. See Figure 1-2.

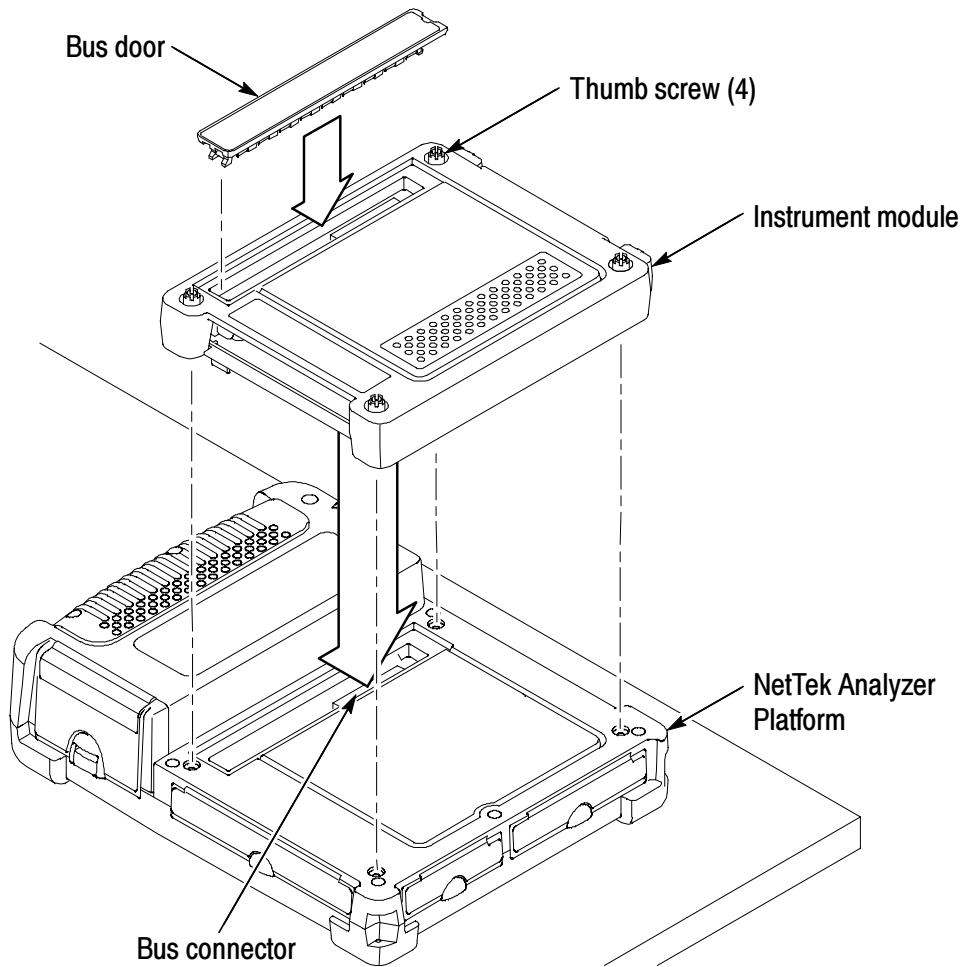


Figure 1-2: Install instrument module

- 8.** For each thumb screw, push down on the head and turn it in a counter-clockwise direction to extend the length.
- 9.** Tighten the screws by turning them in a clockwise direction. Use the coin slot in the top of the thumb screw if you require additional torque. Be sure to tighten all screws evenly.
- 10.** To recess the thumb screw heads, push and turn each screw head in a clockwise direction.
- 11.** To maintain the enclosure seal integrity, reinstall the bus door into the rear of the instrument module.

Removing an Instrument Module

Use the following procedure to remove an instrument module from the rear of the NetTek Analyzer Platform or to detach one module from another. Refer to Figure 1-2 throughout this procedure.



CAUTION. *The platform and modules contain static sensitive devices. Do not touch the connector pins.*

1. Power off the NetTek Analyzer Platform: select **Start > Shutdown**.
2. Disconnect all cables from the NetTek Analyzer Platform and instrument modules.
3. Place the NetTek Analyzer face down on a flat, uncluttered surface. Support the analyzer by its four corner bumpers only.
4. To release the thumb-screw heads, push and turn each screw head in a counter-clockwise direction.
5. Disengage all four screws by turning them in a counter-clockwise direction. A tool or coin may be required if the screws are tight.
6. Pull up on the instrument module to remove it.
7. To maintain enclosure seal integrity, reinstall the bus door into the NetTek Analyzer Platform or instrument module.

Laser Optical Port and Connector Adapter



WARNING. *The light emitted by the laser source is invisible to the human eye. Do not stare directly into the laser source. Doing so while the laser is on can damage your eye.*

Do not stare at the free end of a test fiber (the end not connected to the instrument). If possible, direct the free end toward a non-reflective surface.



CAUTION. *Do not touch the exposed end of the laser output port with anything but the proper cleaning materials. To maintain the performance of fiber optic connectors, clean them every time you use them. Refer to Cleaning beginning on page C-1.*

To protect against dust and damage, cover the optical port when not in use.

The OTDR tests optical fibers by emitting short pulses of laser light. Figure 1-3 shows the location of the OTDR optical port. The optical port snaps out to a 45° angle. To return the optical port to the closed position, lift the release lever.

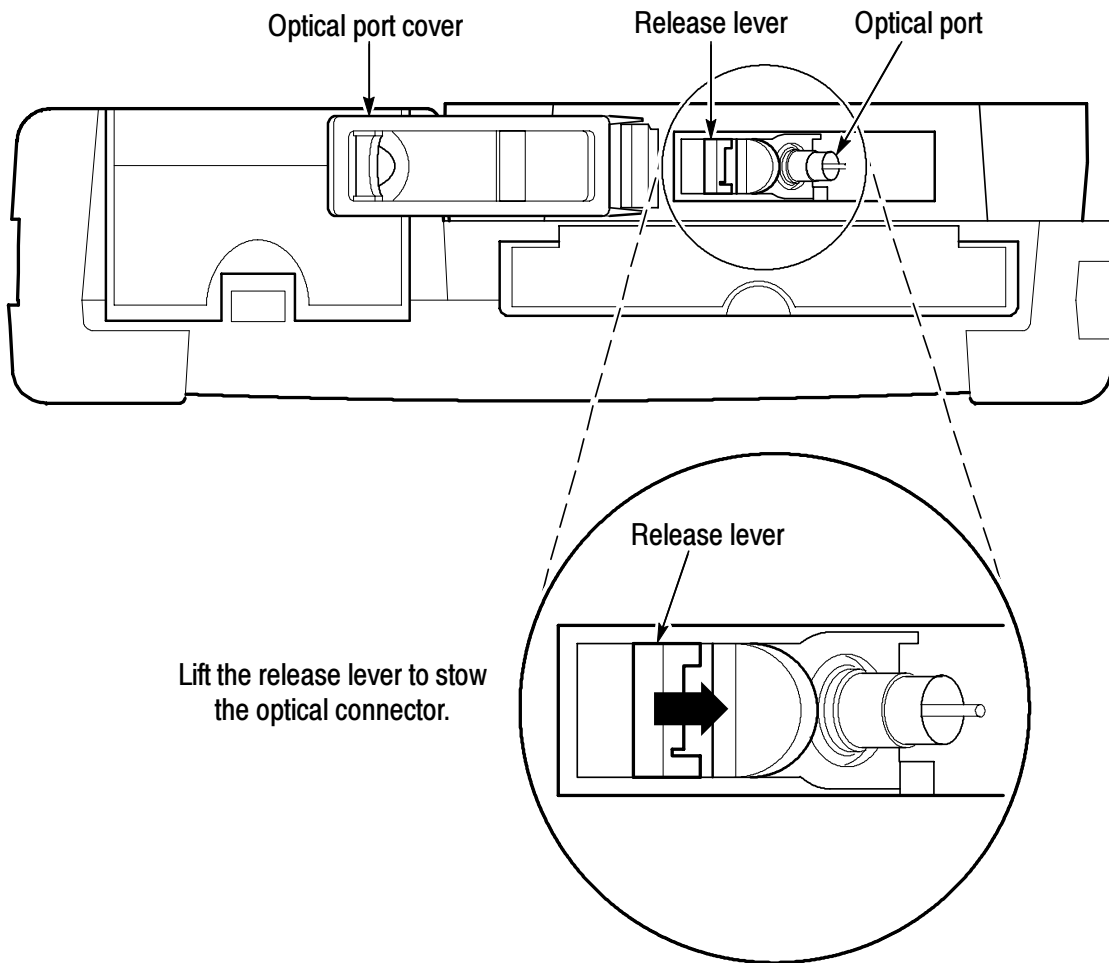


Figure 1-3: Laser optical connector

Install the Appropriate Connector Adapter



CAUTION. To avoid damage to the instrument, never connect a bare fiber adapter directly to the instrument.

The connector adapter attaches the fiber to the laser optical port. Connector adapters are packaged separately with new instruments, and must be installed on the laser optical port before use.

The connector adapter on the OTDR must match the connector on the test fiber. See page B-1 for a list of connector adapter options.

Connector adapters are keyed for proper mating with the laser output port.

To install a connector adapter, align the keyed elements, slide the connector adapter onto the laser output port, and turn clockwise until the connector adapter is finger tight (see Figure 1-4).

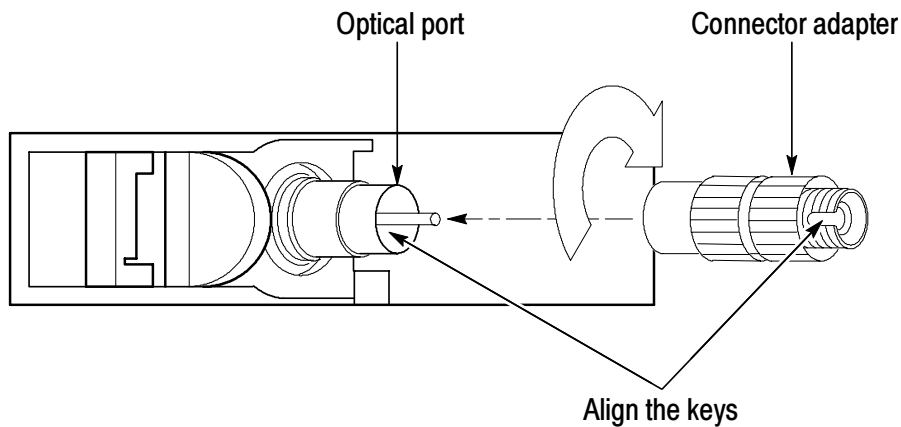


Figure 1-4: Connector adapter installation

Remove a Connector Adapter

To remove a connector adapter, unscrew it counterclockwise and pull it straight off the port. Refer to Figure 1-4 on page 1-9.



Operating Basics

Operating Basics


Read this section to understand the online help system and the main screen features.

Using the Online Help

Refer to the online help for information on operating the NetTek Analyzer and the OTDR. You will find both general help topics and context-sensitive help topics.

There are several ways to access online help:

- For platform information, select Windows CE **Start > Help**.
- For OTDR help, select Windows CE **Start > Help > OTDR**.
- For OTDR help when the OTDR program is open, you can also select **Help** from the upper right corner of the screen.
- For context-sensitive OTDR help when the OTDR program is open, select the **?** button in any dialog box.

To read a long help topic without having to scroll, select the  button to increase the size of the help window to full screen size.

To access related help topics, tap blue, underlined text.












If the Input Panel covers the help window, tap the  button at the bottom of the screen to close the Input Panel. Tap the button again to open the Input Panel.

Table 2-1: Help window buttons

Tap this button	To
 All Topics	Display the NetTek Analyzer main table of contents.
 Back	Return to the previous help screen.
 Contents	Display the current program or local table of contents.
	Display full-screen help text.
	Display the help text in its own window. Tap and drag the Help window title bar to move the window.
	Minimize the Help window. To maximize the window, tap the Help icon in the taskbar.
	Close the Help window and quit help.
	Scroll the text towards the bottom of the screen.
	Scroll the text towards the top of the screen.
	Open and close the soft keypad Input Panel. The button is located in the lower right hand corner of the touch screen. (Tap this button to uncover the Help.)

Elements of the Main Screen

The features you need most often are available on the main screen.

Main Screen Buttons

The main screen buttons represent the tasks that you need to perform most often. Many of these buttons duplicate operations that are available in the main menus. Refer to Figure 2-1 for the layout of the main screen; Table 2-2 lists the function of each button.

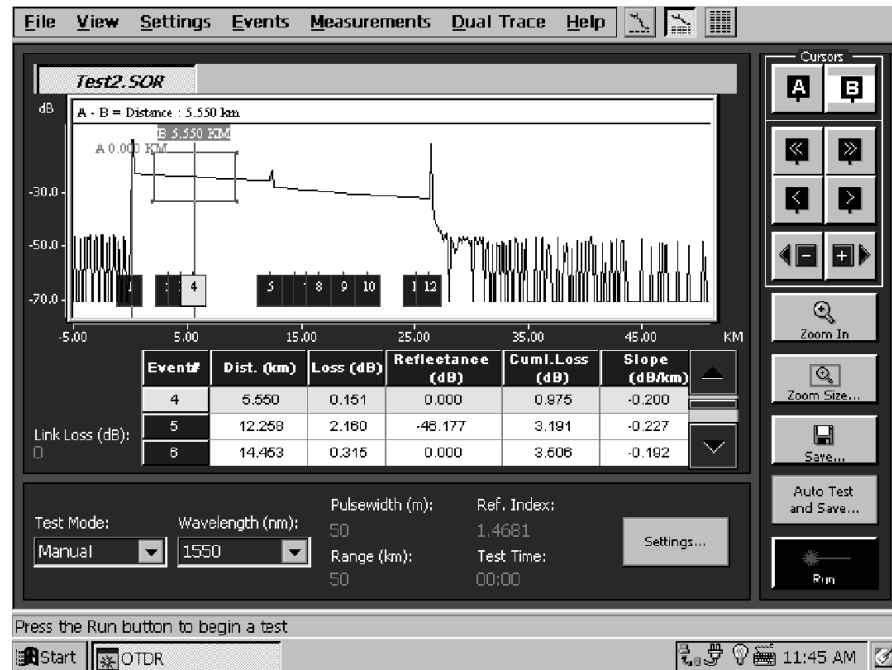













Figure 2-1: Main screen


Table 2-2: Main screen buttons

	<p>Change the display proportions. See <i>Changing the Proportions of the Trace and Table Regions</i> on page 2-5.</p>
	<p>Toggle the active cursor. (Cursor A is active in this picture.)</p>
	<p>Move the active cursor left or right along the trace in large increments.</p>
	<p>Move the active cursor left or right along the trace in small increments.</p>
	<p>Jump the active cursor one event to the left or right.</p>
	<p>Control zooming. See <i>Zooming</i> on page 2-6.</p>
	<p>Save changes to the file. See <i>Saving Tests and Settings</i> on page 2-23.</p>
	<p>Open a dialog box, allowing you to automate taking and saving numerous, similar tests. See <i>Auto Test and Save Dialog Box</i> on page 3-12.</p>
	<p>Start an acquisition.</p>
	<p>Open a dialog box, allowing you to set up measurement thresholds and to flag out of limit data. See <i>Setting Up Tests and Limits</i> on page 2-18.</p>
	<p>Open and close the soft keypad Input Panel, allowing you to enter alphanumeric characters with the touch screen. (This button is located in the lower right corner of the touch screen.)</p>

Viewing the Trace and Table

There are several ways that you can change the appearance of the main screen to best see your data.

Changing the Proportions of the Trace and Table Regions

You can change the proportions of the trace and table regions using the icons in the upper right corner of the screen: .


You can also use the View menu:

- Select **View > Maximize Trace** to show the trace and only one row of event table data.
- Select **View > Split Trace and Table** to show the trace and three rows of event table data.
- Select **View > Event Table Only** to hide the trace and show only the event table.

Setting Trace Display Options

Select **View > Trace Display Options**.

In this dialog box, you can change the appearance of the trace region of the main screen.

- Select or clear Event Markers to show or hide the  markings.
- Select or clear Delta Readouts to show or hide the readouts that appear along the top of the trace region.
- Select or clear Grid to show or hide grid lines on the trace region.

Zooming

Whenever the trace is visible, as in Figure 2-2, you can zoom in to take a closer look at an area of interest. The zoom box, which is pink on color screens, shows the area of the trace that will be zoomed in on. The zoom box will follow the active cursor.

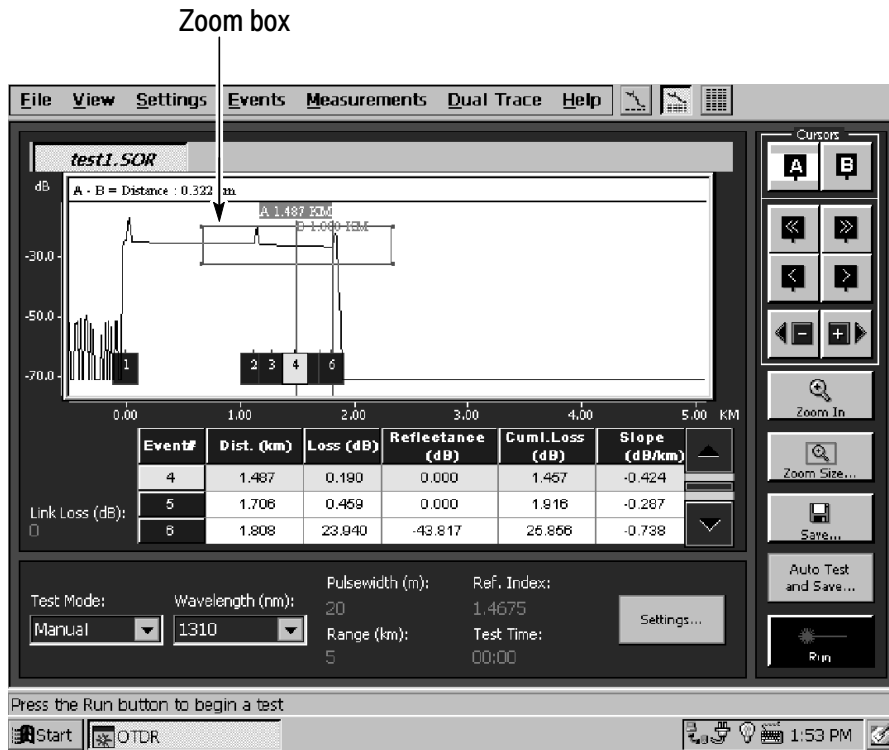


Figure 2-2: Zoomed out trace

When you zoom in, the upper right corner of the screen displays an overview window showing the whole trace. As shown in Figure 2-3, the zoom box in the overview window indicates the part of the trace that you zoomed in on.

To zoom:

1. Move a cursor to the point of interest on the trace.
2. Drag the corners of the zoom box to adjust its size and shape.
3. Tap **Zoom In**.
4. Tap **Zoom Out** when you want to look at the whole trace again.









Figure 2-3: Zoomed in trace, with overview box showing whole trace

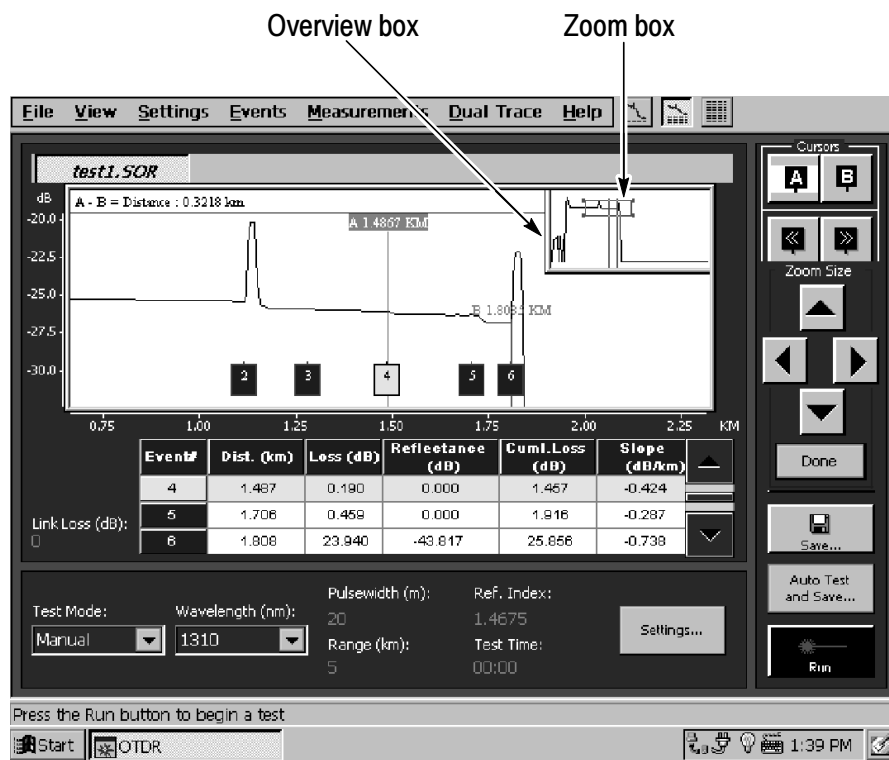Sizing the Zoom Box with the Zoom Size... Button



Change the size of the zoom box to control the amount that you magnify the view of the trace or to change the scale of the axes independently.

To change the size of the pink zoom box, tap **Zoom Size**, and then use the arrow buttons:









-  increases the height of the pink zoom box.
-  decreases the height of the pink zoom box.
-  increases the width of the pink zoom box.
-  decreases the width of the pink zoom box.

To better see the power loss or reflectance of an event, change the vertical scale by tapping **Zoom Size** and then tapping the  arrow several times.

Cursors

There are two cursors. Tap the   buttons to toggle the active cursor. The active cursor appears in the center of the pink zoom box.

There are several ways to move the cursors:

- Touch and drag either cursor to move it along the trace.
- Tap the   buttons to jump the active cursor one event to the left or to the right.
- Use the   buttons to move the active cursor left or right along the trace in large increments.
- Use the   buttons to move the active cursor left or right along the trace in small increments.
- Tap the event marker, , in the trace area.
- Tap the event row, , in the event table.
- Double-tap a location in the trace area.

Event Table Columns

In Split Trace and Event Table view, you can see six columns of data in the event table. In Event Table Only view, you can also see Loss Δ , Dist. Δ , and Event Notes (if you scroll to the right). For landmarks, data will only appear in the Event#, Dist., and Notes columns.

Figure 2-4 below shows data in the Event Table Only view. Refer to Tables 2-3 on page 2-11 for descriptions of the data in each event table column and Table 2-4 on page 2-12 for the meanings of marks, symbols, and highlights that appear in the event table.

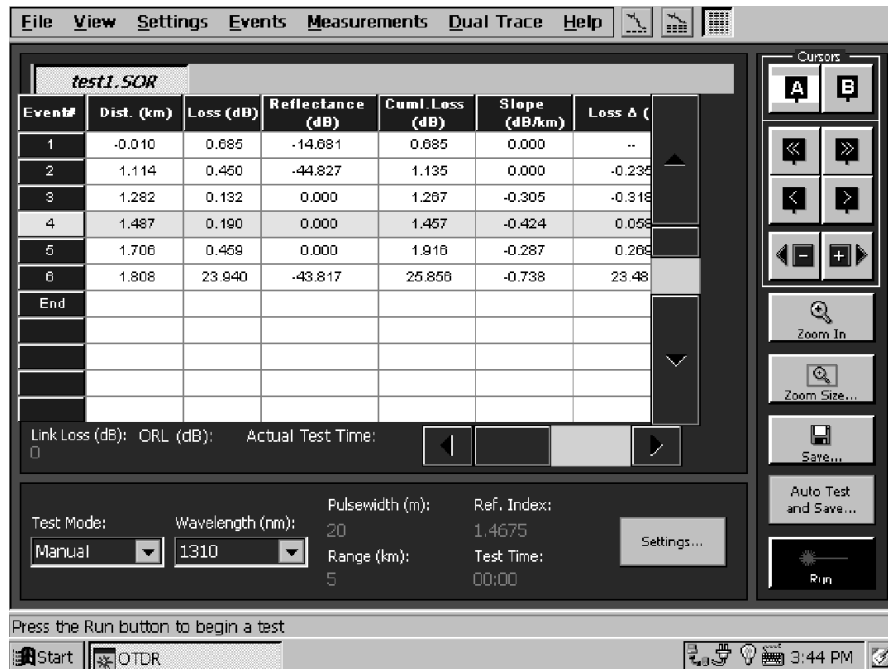


Figure 2-4: Event Table Only view

Table 2-3: Event Table column definitions

Tap this button	To
Event#	Event numbers correspond to event markers or landmarks in the trace area.
Dist.	Distance represents the distance from the front panel to the event or landmark.
Loss	Loss lists the loss of optical power at an event due to scattering, absorption, and bending.
Reflectance	Reflectance lists the ratio of reflected optical power to incident optical power for reflective events.
Cuml. Loss	Cumulative Loss lists the total loss from the front panel up to and including this event.
Slope	Slope lists the attenuation of the fiber between an event and the preceding event.
Loss Δ	Loss Delta lists the loss between an event and the preceding event.
Distance Δ	Distance Delta lists the distance between an event and the preceding event.
Event Notes	Event Notes displays the Comments field of the Event / Landmark Notes dialog box.

Table 2-4: Event Table symbols and highlights

Mark	Definition
e	An “e” appears next to an <i>echo event</i> .
g	A “g” appears next to a <i>grouped event</i> .
*	An asterisk (*) appears next to any manually adjusted values in the table.
L	An “L” appears next to <i>landmarks</i> that you have manually added to the table.
End	“End” marks the event at the end of the fiber.
Out of Range	Occasionally, on very long fibers, the OTDR cannot detect the end of the fiber because the resolution is insufficient. The phrase “Out of Range” will appear in the last row of the event table. If this happens, increase the range.
Yellow Rows	The active event data displays in yellow (or light shading on monochrome screens).
Red Cells	Any data that surpasses the thresholds you set on the Limits Tab is flagged in red (or dark shading on monochrome screens).

Tutorial

In this tutorial you will learn to take a basic measurement and to analyze the results. Italicized terms are defined in the glossary.

Take a Basic Measurement



CAUTION. *To maintain the performance of fiber optic connectors, clean them every time you use them. Refer to Cleaning beginning on page C-1.*

1. Clean the instrument connector and the fiber connector.



CAUTION. *To avoid damage to the instrument, never connect a bare fiber adapter directly to the instrument.*

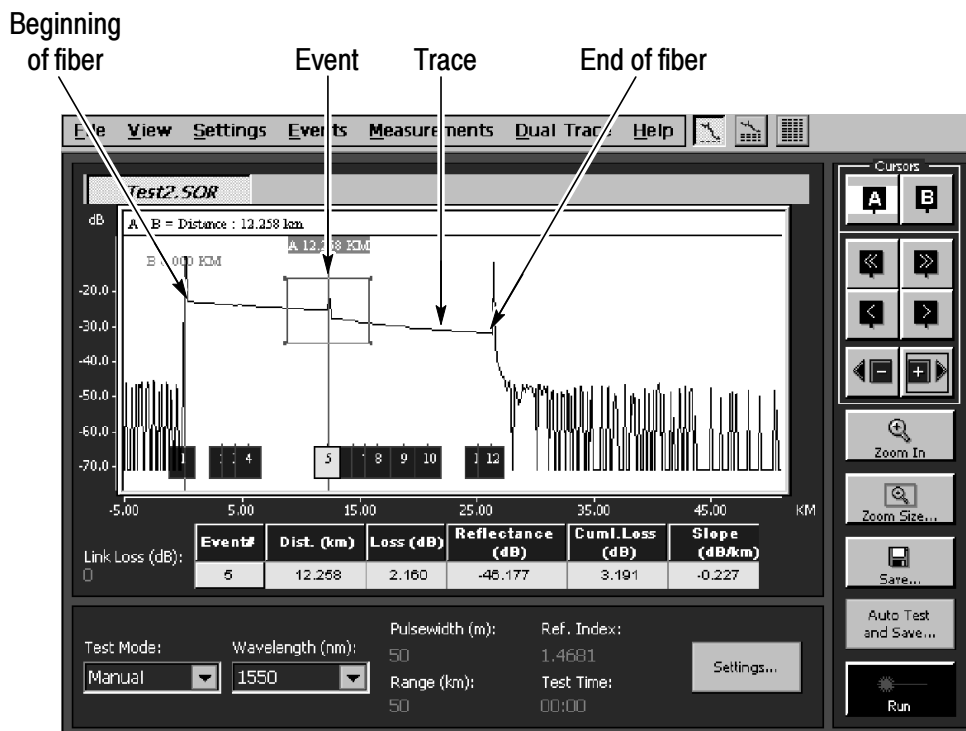
2. Connect the fiber.
3. Select the **Settings** button.
4. For Test Mode, select **IntelliTrace Plus**.
5. Select a wavelength that is appropriate for your system.
6. Enter an event loss threshold that is appropriate for your system.
7. Select **OK**.
8. Select the OTDR **Run** button.
9. The message “Acquiring...” appears as the OTDR collects data.

Analyze the Results

In this section you will learn to understand trace data, find the length of the fiber, and examine two point loss.

Examine the Trace Data

Look at events in the trace region and in the event table.



See *Changing the Proportions of the Trace and Table Regions* on page 2-5 for information on making either the trace or table area larger.

The *trace* is the line that visually represents the fiber. It typically slopes gently from the upper left of the trace region down to the lower right. From the shape and length of the trace, you can see the characteristics and length of the fiber. Sudden variations in the trace are marked as events.

An *event* is an irregularity along the fiber such as a connector or a bend. Each event is marked with a numbered square at the appropriate distance along the horizontal axis of the trace region, representing its distance along the fiber. Each numbered square event marker correlates to a numbered row of data in the event table. The event table lists the distance, loss, reflectance, cumulative loss, and slope for each event on the fiber.

The OTDR displays an event when the *event loss* (a drop in the power) or *reflectance* (an increase in the power) is greater than the Event Loss or Reflectance thresholds that you set. (See page 2-18 for information about setting thresholds.)

Find the Length of the Fiber

The last event usually marks the end of the fiber; the distance of the end event is the length of the fiber.

In the event table, look at the distance of the event marked “End.”


Alternatively, in the trace region, look at the event where the trace drops abruptly and is followed by noise.

Occasionally the OTDR may indicate that the end of the fiber is out of range. If this occurs, refer to *Increasing the Range* on page 3-16.

Examine the Two-point Loss

Look at the loss between two points on the trace:

Be sure both cursors are on *backscatter* regions of the trace.

1. Zoom in on the area of the trace. (Refer to *Zooming* on page 2-6.)
2. Select **Measurements > Two Point...**
3. Drag a cursor or use the cursor buttons to place a cursor on backscatter to the left of an area of interest on the trace.
4. Use the  cursor buttons to toggle the active cursor.
5. Place the second cursor on backscatter to the right of the area of interest on the trace.
6. Look at the top line of the trace region for the readouts of distance, two point loss, and slope between the two cursors.

Examine an Event

Select an event to make it active. The active event will be highlighted in the event table and in the trace region so you can compare the event data to the visual representation of that event.

To select an event, do one of the following:

- Tap a row in the event table.
- Tap the event marker in the trace region.
- Move a cursor to the event marker in the trace region.

Examine the Event Table Data

Select **View > Event Table Only** to hide the trace and show only the event table. Examine the data in the event table. Take note of any data highlighted in red (black on monochrome screens) or event numbers marked with an “e”, “g”, or “*”.

Refer to *Event Table Columns* on page 2-10 for more information about the table data and the meanings of symbols and highlighting.

Setting Up Tests and Limits

You can set the following:

- Test settings that will affect your measurements.
- Limits that will cause out of limit data to be flagged in the event table or in the link loss readout.

From either tab of the Test Settings and Limits dialog box, you can save your settings using the Save Settings button, or you can open previously saved settings using the Open Settings button.

Tap the Factory Default button to return settings to default settings.

Setting the Test Settings

Select the **Settings** button, or select **Settings > Test Setting and Limits > Test Settings** tab.

Parameter	Value	Reset
Test Mode:	Manual	
Wavelength: (nm)	1310	
Refractive Index:	1.4675	#
Cabling Factor: (%)	0	#
Backscatter Coefficient: (dB)	-78	#
Power-On Settings:	Last Used	
Front Panel Loss Warning:	On	
Zero Reference: (km)	0	#
IntelliTrace Plus Configuration:	Standard	
Pulsewidth: (m)	20	
Range: (km)	5	
Test Time: (averages)	00:35 (30000 Averages)	#
Event Loss Threshold: (dB)	0.01	#
Reflectance Threshold: (dB)	-40	#
Distance Units:	Meters	
End Detection: (dB)	3	#

You can set a number of parameters which will effect how test data is collected.

- **Test Mode.** You can set the test mode from the main screen drop down menu or the from the Test Settings tab. However, to specially optimize IntelliTrace Plus mode for Fastest or Find Most Events, you must use the Test Settings tab.

Refer to Table 2-5 for information about each test mode.

- **Pulsewidth.** The duration in time (ns) that the laser pulses the fiber. Longer pulse widths provide greater range; shorter pulse widths provide shorter *loss dead zones* between events.
- **Range.** From the drop-down box, select the shortest length that is greater than the length of the fiber you will test.
- **Test Time.** Longer test times will give you more *averaging* which reduces noise and increases the usable range.
- **Wavelength.** Select the wavelength of light with which to test.
- **Refractive Index.** Enter the refractive index specification of the fiber.
- **Cabling Factor.** Enter the percent of extra fiber compared to the sheath measurements. (The OTDR measures the length of the fiber, which, because it twists, is longer than the length of the sheath.)


- **Backscatter Coefficient.** Enter the backscatter coefficient specification of the fiber. (This affects only reflectance measurements.)
- **Power On Settings.** Set your preference for the default Power On Settings. This will determine the test settings and limits the next time you power on the OTDR.
- **Zero Reference.** Enter the Zero Reference (the length of optical fiber between the OTDR and the link you are testing).
- **Event Loss and Reflectance Thresholds.** Enter the Event Loss Threshold and the Reflectance Threshold for displaying events. If the trace shows a loss of more than the Event Loss number, or a reflectance more than the Reflectance number, the OTDR will display an event. (All possible events are determined; these thresholds control which of those events are displayed.)
- **Front Panel Loss Warning.** Set the Front Panel Loss Warning to On or Off. If you select Off, you will not be warned before each acquisition if there is a problem with the front panel connection.
- **Distance Units.** Select the unit of your choice for the Distance Units.
- **End Detection.** Enter the signal level threshold for End Detection. When the signal drops at a single point below this threshold, the OTDR will indicate the end of the fiber.

Table 2-5: Choosing the Test Mode

Test Mode	Purpose
IntelliTrace Plus	To automate a measurement; the OTDR picks the best settings. You can optimize IntelliTrace Plus for different needs. In the IntelliTrace Plus Configuration field, choose from:
Fastest ¹	For the shortest test time but not the best resolution
Find More Events ¹	To find events and fiber length most accurately but not quickly
Standard ¹	For fairly good resolution and a reasonably quick test
Manual	To control your own test settings. You must set Pulse Width, Range, and Test Time.
End of Fiber	To quickly measure the length of the fiber.
Real Time	To look at a signal that changes with time. In real time acquisition, there is no averaging. For example, you can see changes in the trace as you manipulate the fiber or as you adjust a connection. To stop acquisition, select the Stop button.
¹ These optimizations are only available from the Test Settings tab.	

Limits Tab

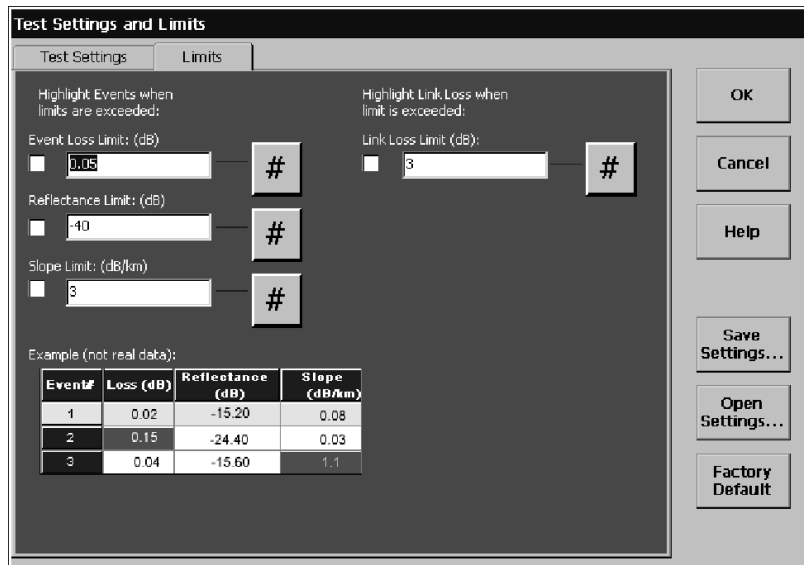Select **Settings > Test Setting and Limits > Limits** tab.



Select all data types for which you want to set limits, and then enter limits for all types you selected. Any data that is out of these limits will be highlighted in the event table or in the Link Loss display and a message will appear in the Status bar.

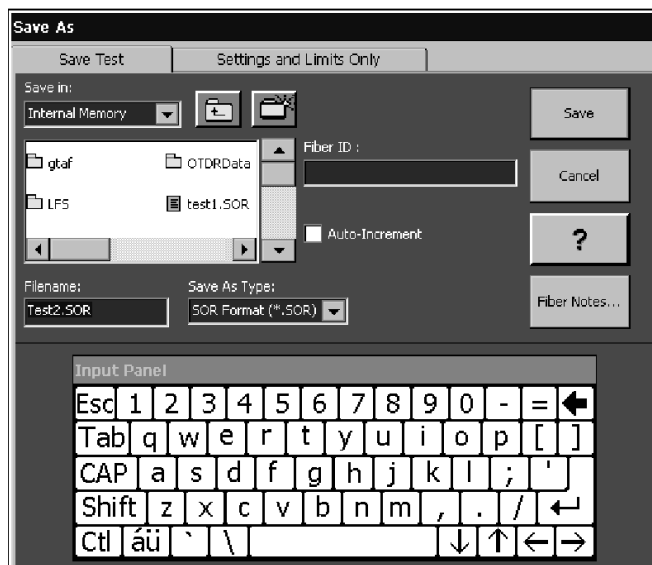
Saving Tests and Settings

You can save tests with test settings, or you can save test settings and limits alone.

Save Test Tab

Select **File > Save As > Save Test** tab.

When you save a test, the following information is saved to a file: the trace, event table, test measurements, events, event notes, landmarks, landmark notes, fiber notes, test settings and limits, cursor positions, cursor selection, and zoom box size.



In the Save As dialog box, proceed as follows:

1. In the **Save in** field, select the location where you want the file saved. Use the folder icons to navigate to a higher level of folder or to create a new folder. The list box below the field displays the names of existing files in the selected folder.

NOTE. Save files in `\BuiltInDisk`, on a floppy, or on a PC card. Files saved anywhere else will be lost when you power off the NetTek Analyzer.

2. Enter a filename in the Filename field.
3. In the Save as Type drop down box, select the file type:
 - SOR Format (Telcordia format)
 - CFF Format (Tektronix format).

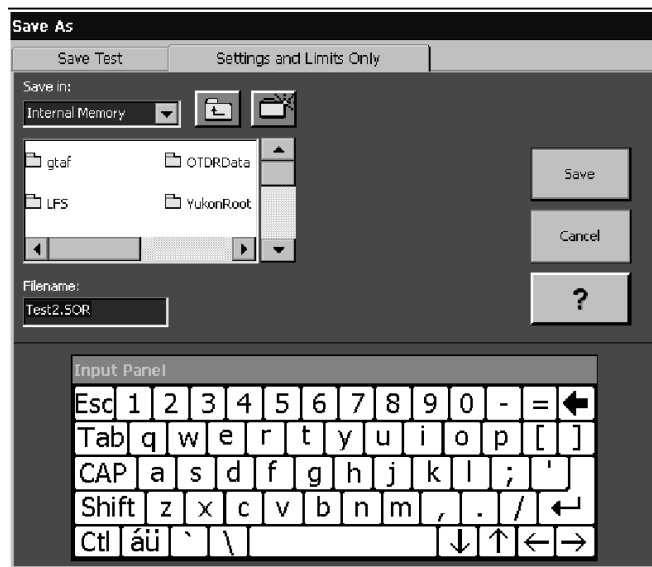
In most cases, you will use the Telcordia defined SOR Format (the default). For exceptions, refer to *About File Types* on page 3-19.

4. In the Fiber ID field, you can enter up to 40 characters identifying the fiber.
5. If you want the file name to automatically increment, select **Auto-increment**. When this is selected, the last three characters of the file name will be incremented by one for each acquisition of a trace.
6. If you want to add or edit notes about the fiber, select the **Fiber Notes...** button.
7. Tap the **Save** button.

Save Settings and Limits Only Tab

Select **File > Save As > Save Settings and Limits Only** tab.

You can save frequently used test settings and limits to a file that you can reuse.



NOTE. Save files in `\BuiltInDisk`, on a floppy, or on a PC card. Files saved anywhere else will be lost when you power-off the NetTek Analyzer.

Test data is not saved from this tab; use the Save Test tab instead.

1. In the Save in field, select the location where you want the file saved. Use the folder icons to navigate to a higher level of folder or to create a new folder. The list box below the Save In field displays the names of existing files in the selected folder.
2. In the Filename field, enter a filename. The file extension .set indicates that this file contains only settings and limits data (no test data).

All the test settings and limits from the Test Settings and Limits dialog box are saved to your file.

Opening Trace or Setting and Limit Files

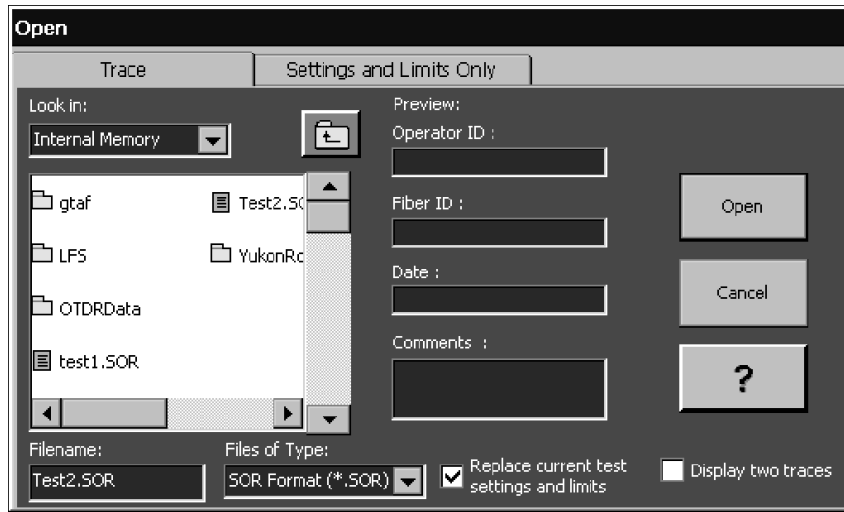
Select **File > Open**.

You can open files from floppy disk, internal memory, or a storage card. You can open a trace file (.SOR or .CFF) or a settings and limits file (.SET).

Opening a Trace File

Select **File > Open > Trace** tab.

From this tab, you can open .SOR or .CFF files containing settings, limits, and trace data.



From the Look in: box, select the floppy disk, internal memory, or the storage card. The contents of the folder will appear in the box below. Tap a folder to open it. If you want to back up to a higher level of folder, use the folder icon. Tap the file name you want to open.

Use the Files of Type drop down box to limit the files displayed to .SOR or .CFF. The fields on the right side of the dialog box give you a preview of information related to the highlighted file. Tap Open to open the highlighted file name.

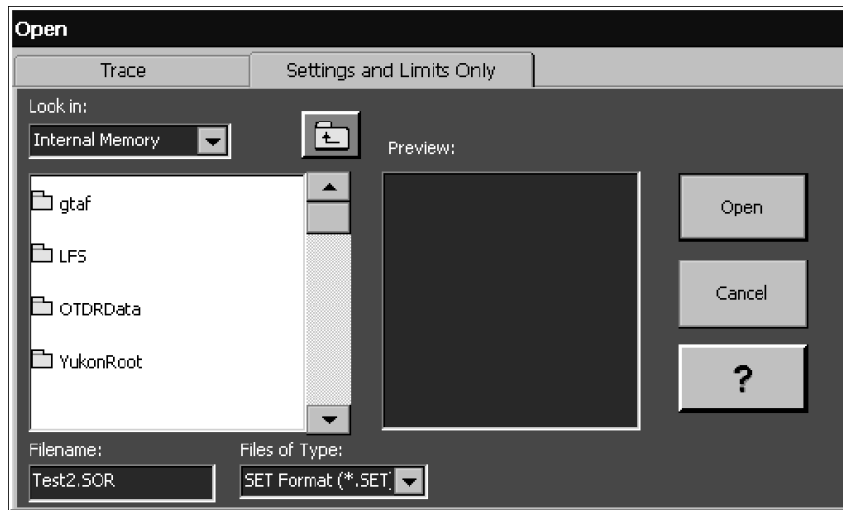
Select Replace current test settings and limits to make the test settings and limits of the saved trace file the default ones used when you acquire the next trace.

Select Display two traces to turn on Dual Trace mode.

Opening a Settings and Limits Only File

Select **File > Open > Settings and Limits Only** tab.

From this tab, you can open .SET files; the next trace you acquire will use these saved settings and limits. These .SET files are smaller than .SOR or .CFF files, which also contain trace data.



From the Look in: box, select the floppy disk, internal memory, or the storage card. The contents of the folder will appear in the box below. Tap a folder to open it. If you want to back up to a higher level of folder, use the folder icon. Tap the file name you want to open. Use the Files of Type drop down box to limit the files displayed to .SET.

The field on the right side of the dialog box gives you a preview of information related to the highlighted file. Tap Open to open the highlighted file name.

Determine What Settings Were Used for a Trace

Select **Settings menu > About Trace**.

This dialog box displays all the static settings that were used to acquire the trace and all the dynamic settings that were saved with the trace.



Examine the Test1.SOR & Test2.SOR Files

In this section you will look at two sample files provided with your OTDR:

- Test1.SOR illustrates that different types of events can look similar.
- Test2.SOR illustrates a damaged angle-polished splice.

Starting with Test1.SOR, in the following steps, you will compare the appearances of each event in the trace and compare the amounts of loss and reflectance of each event in the event table.

Examine the Test1.SOR & Test2.SOR Files

1. Open Test1.SOR from Internal Memory. (Select **File > Open**, then Look in: **Internal Memory**, and double-tap **Test1.SOR**.)
2. Look at the seven events. You will see something similar to Figure 2-5.

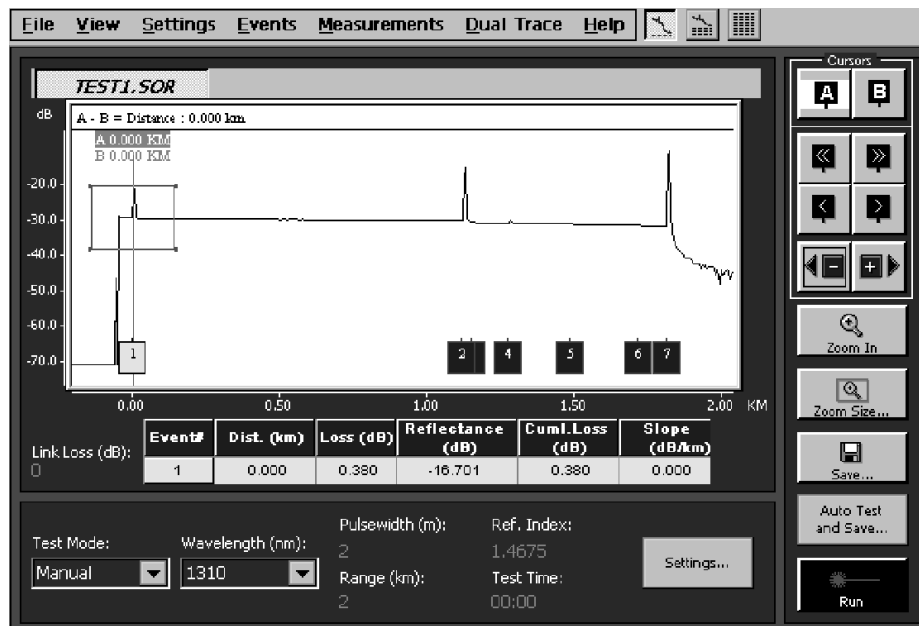


Figure 2-5: Sample file Test1.SOR illustrates that different types of events can look similar

- Switch to Event Table Only view to compare the event loss and reflectance values of each event. (Select **View > Event Table Only**.) You will see something similar to Figure 2-6. You can scroll to the right to view a description of each event in the Event Notes column.

Event#	Dist. (km)	Loss (dB)	Reflectance (dB)	Cumul.Loss (dB)	Slope (dB/km)	Loss Δ (dB)
1	0.000	0.380	-16.701	0.380	0.000	--
2	1.119	0.334	-34.827	0.714	0.000	-0.046
3	1.156	0.292	0.000	1.006	-4.123	-0.042
4	1.277	0.465	-52.479	1.471	-0.538	0.173
5	1.488	0.103	0.000	1.574	-0.624	-0.362
6	1.719	0.419	0.000	1.993	-0.159	0.316
7	1.814	6.057	-20.273	8.050	-0.936	5.638
End						

Link Loss (dB): ORL (dB): Actual Test Time:

Test Mode: Wavelength (nm): Pulsewidth (m): Ref. Index: Settings...

Manual 1310 2 1.4675

Range (km): Test Time:

2 00:00

Figure 2-6: Compare the amounts of loss and reflectance in each of the events in the sample file Test1.SOR

- Switch back to the trace view again. (Select **View > Maximize Trace**.)

The first event is the beginning of the fiber at the front panel.

- Starting with the second event, select each event in turn and zoom in. Tap the **Zoom In** button, and then tap the **Zoom Size** button to adjust the size of the zoom box. Tap the down arrow several times to maximize the appearance of small reflections and losses.

Event 2, shown in Figure 2-7, is an FC regular connector. It has fairly large amounts of both loss and reflection.

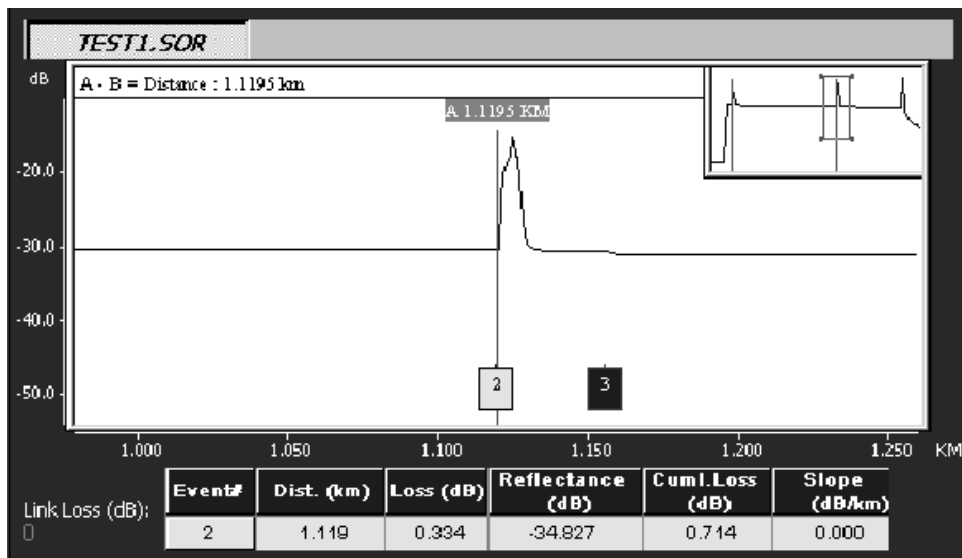


Figure 2-7: Event 2 is an FC regular connector

Event 3, shown in Figure 2-8, is a fusion splice. It has a small amount of loss and no significant reflectance.

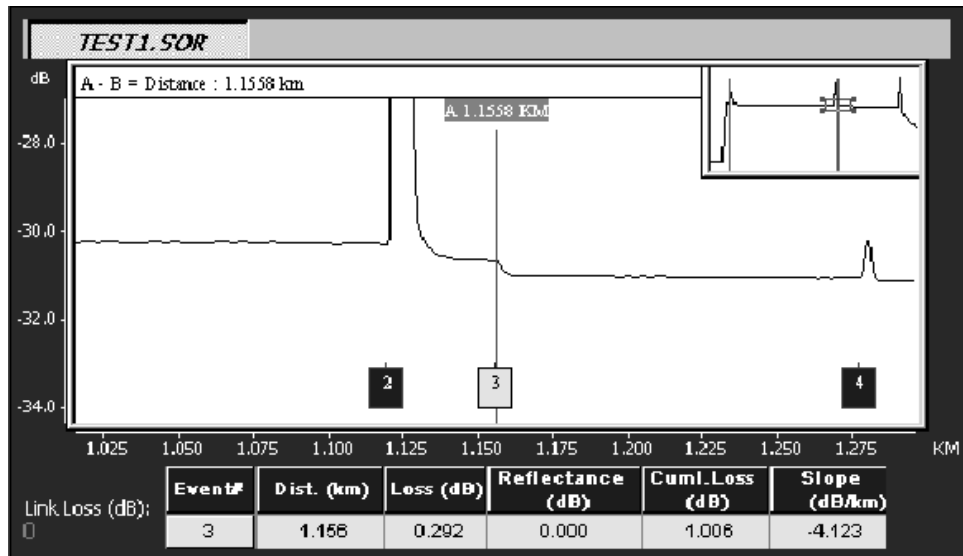


Figure 2-8: Event 3 is a fusion splice

Event 4, shown in Figure 2-9, is a mechanical splice. Like the FC regular connector, it has large amounts of both loss and reflection.

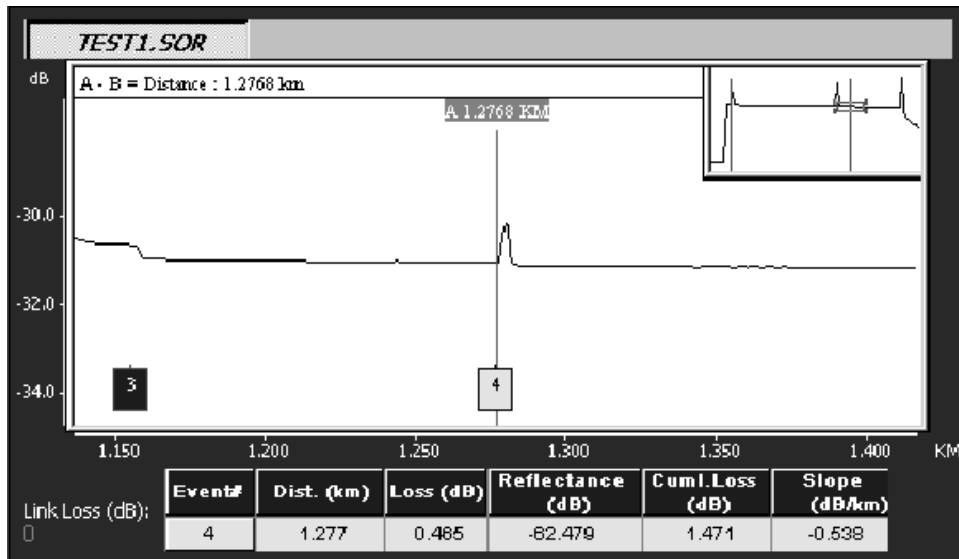


Figure 2-9: Event 4 is a mechanical splice

Event 5, shown in Figure 2-10, is a bend. Like the fusion splice and the mechanical splice, the bend has a very small amount of loss and no significant reflectance.

Testing with multiple wavelengths is a good way to tell if an event is a bend. In contrast to fusion and mechanical splices, the slope and loss values of a bend will differ depending on the wavelength you use for testing.

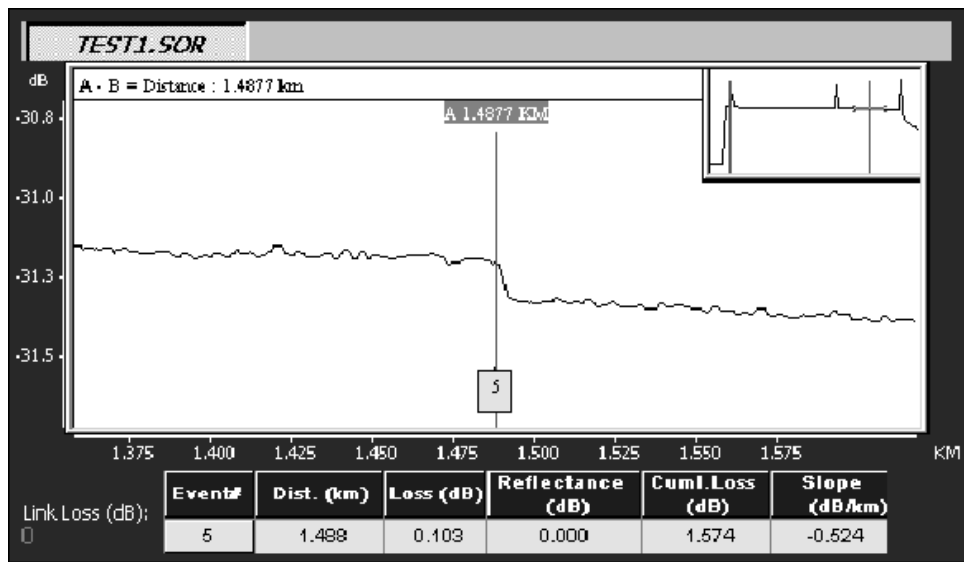


Figure 2-10: Event 5 is a bend

Event 6, shown in Figure 2-11, is another fusion splice like Event 3. It has a large amount of loss but no reflectance.

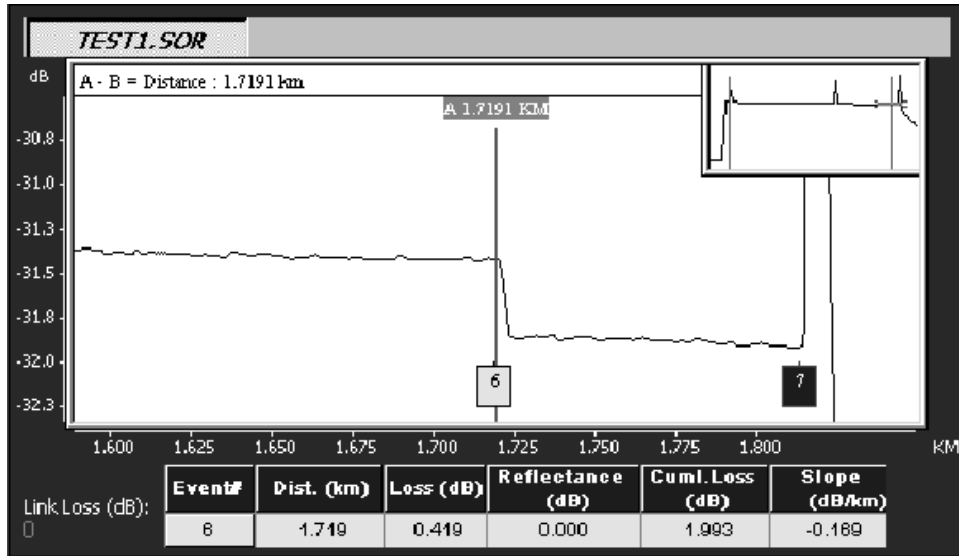


Figure 2-11: Event 6 is a fusion splice

Event 7, shown in Figure 2-12, is the end of the fiber. Notice that it has large values for both loss and reflectance. The trace power level drops off into noise at the end of the fiber.

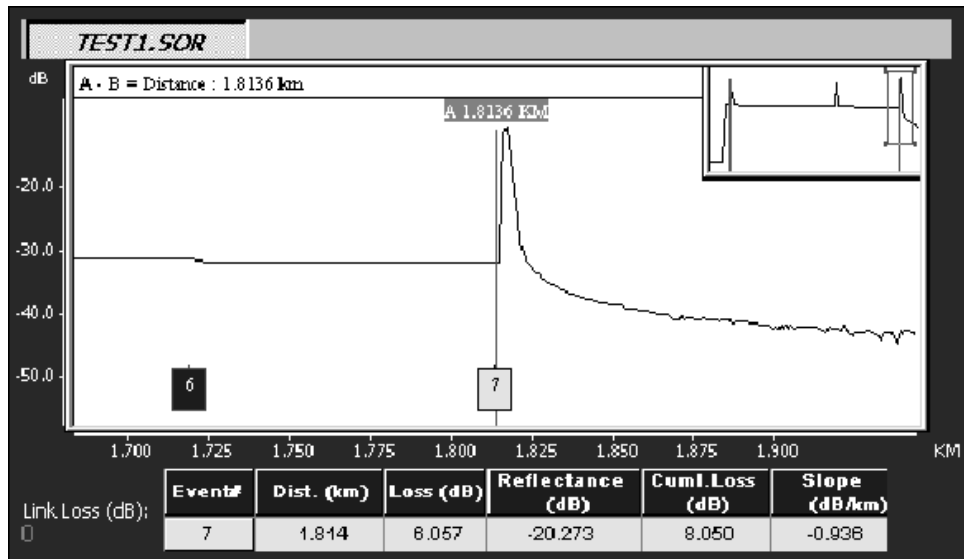


Figure 2-12: Event 7 is the end of the fiber

- Open Test2.SOR from Internal Memory. (Select **File > Open**, then Look in: **Internal Memory**, and double-tap **Test2.SOR**.)

- Look at the twelve events. You will see something similar to Figure 2-13.

In the sample file, Test2.SOR, events 1 and 12 represent the beginning and ending of the fiber, respectively. All the other events are fusion splices except event 5, which is an angle-polished splice. Usually angle-polished splices have no reflectance. In this case, however, the ends are worn. This damage accounts for the large amount of reflectance you see in Figure 2-13.

You can switch to Event Table Only view and scroll to the right to view a description of each event in the Event Notes column.

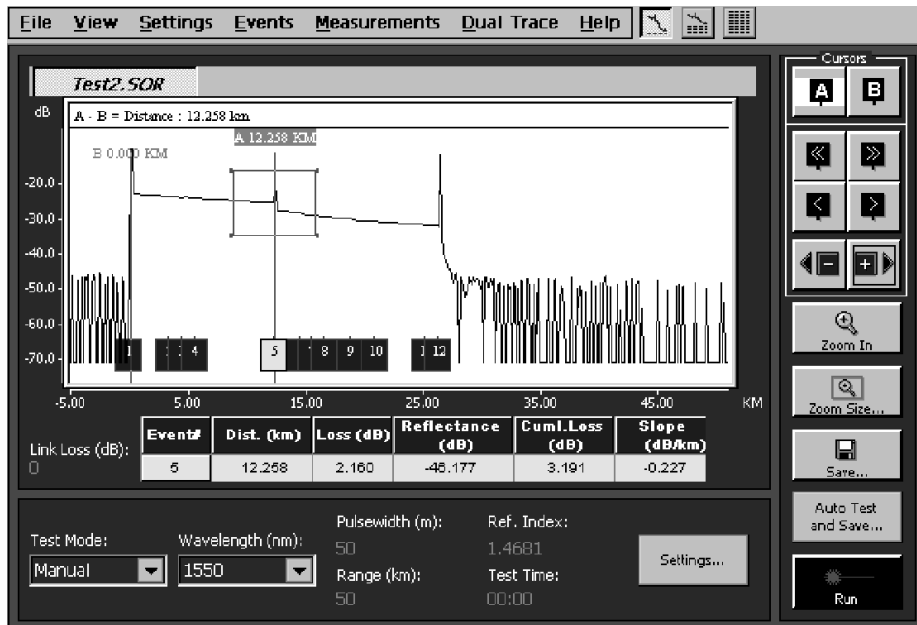


Figure 2-13: Sample file test2.SOR shows a worn angle-polished connector (Event 5) and several fusion splices



Reference

Taking Measurements

This section covers taking measurement menu measurements (see below), comparing two traces in various ways (see page 3-8), and setting up automatic testing and saving of measurements (see page 3-12).

To perform advanced measurements, choose a measurement from the measurement menu.

These measurements are taken on one trace:

- **Event Loss:** Measures loss at a point on a fiber. See page 3-2.
- **Two Point:** Measures the loss, slope, and distance between two points on a fiber. See page 3-4.
- **Reflectance:** Measures the loss due to light reflected by a particular fiber feature, such as a connector or splice. See page 3-6.
- **ORL:(Optical Return Loss)** Measures the reflected light from a section of fiber or from the whole fiber. See page 3-7.

These measurements are taken on two traces in Dual Trace mode:

- **Bidirectional Averages:** Averages the events of two traces taken from opposite ends of the same fiber. Some events may appear differently depending on which end of the fiber you test. Use this measurement for a more accurate representation of the fiber than either trace alone can give. See page 3-9.
- **Difference:** Subtracts one trace from another. Use this measurement to compare two similar trace files. See page 3-11.

Performing Event Loss Measurements

Select **Measurements > Event Loss...**

Measures loss at a point on a fiber. The loss appears as a readout at the top of the trace.

The events that you add are marked in the event table with an asterisk (*).

Figure 3-1 shows an example of an event loss measurement.

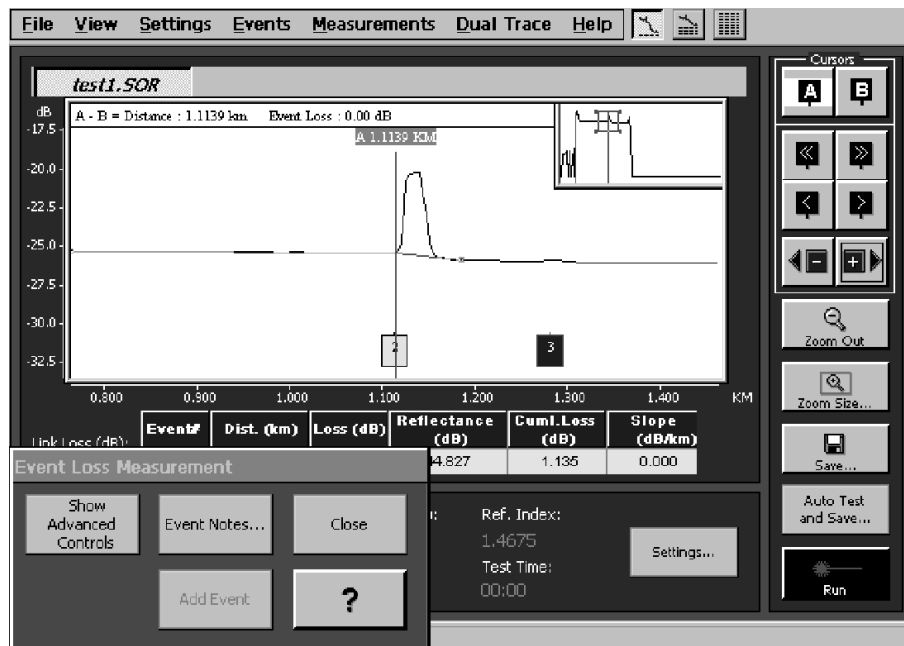


Figure 3-1: Event Loss for Event 2

Event Loss Advanced Controls

Select **Measurements > Event Loss... > Advanced Controls** button.

Advanced Controls allow you to manually adjust the slope cursor either to the **Left** or the **Right** of the event.

Select **Reset** to return the slope cursor angles to match the backscatter slope.

Select **Update Table** to update the event table with your manually adjusted loss data. Manually adjusted data in the event table are marked with an asterisk (*).

Performing Two Point Measurements

Select **Measurements > Two Point...**

Measure the loss, slope, and distance between two points on a fiber.

Be sure both cursors are on backscatter regions of the trace.

Look at the loss between two points on the trace:

1. Zoom in on the area of the trace.
2. Select **Measurements > Two Point...**
3. Drag a cursor or use the cursor buttons to place a cursor on backscatter to the left of an area of interest on the trace.
4. Use the A/B cursor buttons to toggle the active cursor.
5. Place the second cursor on backscatter to the right of the area of interest on the trace.
6. Look at the top line of the trace region for the readouts of distance, two point loss, and slope between the two cursors.

Two Point Loss Advanced Controls

Select **Measurements > Two Point... > Advanced Controls** button.

To manually adjust the cursors, select either Two Point Slope or LSA Slope:

- Select **Two Point Slope** to measure the loss across a feature of the fiber. In two-point slope calculations, the two-point loss is divided by the two-point distance, using the data point at each intersection between the loss cursors and the waveform. This type of calculation is better if there are reflective events close to the one you are trying to measure.
- Select **LSA Slope** to measure fiber loss on featureless sections of backscatter. In LSA slope calculations, the data points on the waveform between the distance cursors are used to determine the best-fitting straight line using the least-squares average algorithm. This type of calculation is better if the trace is noisy and there are no reflective events close to the one you are trying to measure.

Using the scroll bar to move the cursor vertically and the knob buttons to rotate the cursor, match the angle and position of the cursor to the slope and level of the backscatter.

Use the double arrow side of the knob to rotate the cursors by large increments. Use the single arrow side of the knob to rotate the cursors by small increments.

Select **Reset** to return the loss cursor position to match the automatically determined level of the backscatter.

Performing Reflectance Measurements

NOTE. *Before performing reflectance measurements, be sure that the backscatter coefficient setting is correct in the Test Settings tab.*

Select **Measurement > Reflectance...**

Measure the reflectance at a point on a fiber, such as at a connector or splice.

Place a cursor at the point of interest on the trace. The reflectance from that point appears as a readout at the top of the trace region.

Reflectance Advanced Controls

Select **Measurements > Reflectance... > Advanced Controls** button.

Advanced Controls allow you to manually adjust the slope cursor either to the **Left** or the **Right** of the event.

Select **Reset** to return the slope cursor angles to match the backscatter slope.

Select Update Table to update the event table with your manually adjusted reflectance data.

Manually adjusted data in the event table are marked with an asterisk (*).

Performing ORL Measurements

NOTE. *Before performing reflectance measurements, be sure that the backscatter coefficient setting is correct in the Test Settings tab.*

Select **Measurements > ORL**.

Optical Return Loss measures the reflected light from a section of fiber or from the whole fiber. This measurement tells you how much noise is on the fiber.

The ORL readout appears at the top of the trace region.

Compare Two Traces in Dual Trace Mode

Use Dual Trace mode compare two trace files. When you have two trace files open, you can look at both traces at once, and you can perform measurements.

These measurements are taken on two traces:

- **Bidirectional Averages:** Averages the events of two traces taken from opposite ends of the same fiber. Use this measurement when you need especially precise splice loss measurements.
- **Difference:** Subtracts one trace from another. Use this measurement to compare two similar trace files.

Select **Dual Trace > Dual Trace On**.

1. Open or acquire a trace.
2. Select **Dual Trace > Dual Trace On**.
3. Open or acquire a second trace.

Each of the two tabs above the trace region are named for one of the traces. Select the tab of the trace data you want to be active. The event markers of the active trace are dark and the event markers of the inactive trace are light. The event table shows the events of the active trace data.

Performing Bidirectional Averages Measurement

Select **Measurement > Bi-directional Averages**.

Events may appear differently depending on which end of the fiber you test. Take trace measurements from each end of a fiber, and then use the Bidirectional Averages function to view the average losses of the two trace files. The averaged event loss values yield a more accurate representation of the fiber than either trace alone. This measurement generates a third tab with a trace and event table showing the averages of the two trace files.

Refer to Figure 3-2 for an example of a bidirectional averages measurement.

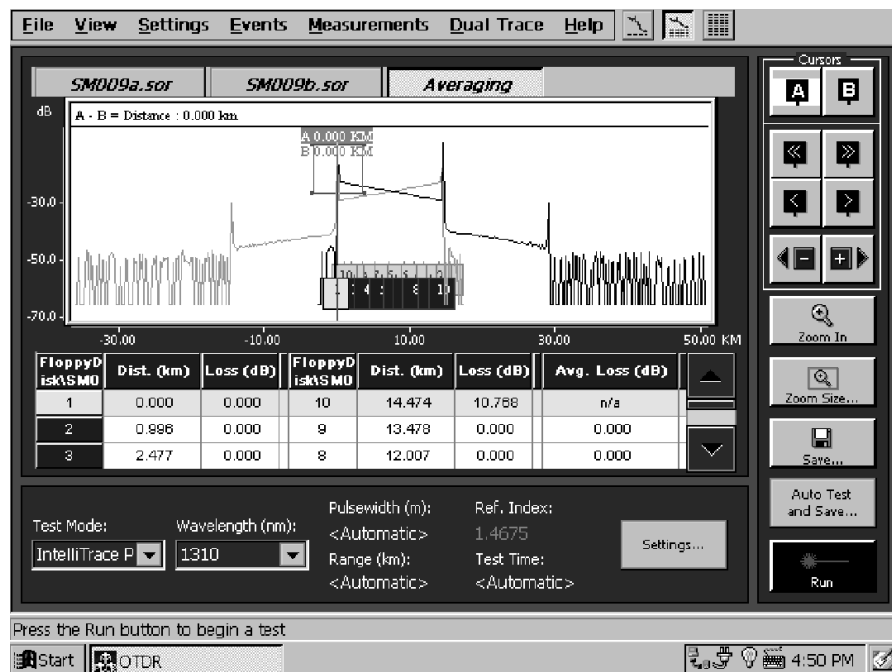


Figure 3-2: Bidirectional Averages traces

1. Open or acquire a trace.
2. Select **Measurement > Bi-directional Averages**.
3. Open or acquire a second trace taken from the opposite end of the fiber from step 1.
4. View and interpret the bidirectional averages trace and event table data in the third tab.

NOTE. *You cannot save the third tab as a file. Instead, save the separate traces; you can regenerate the data at any time from the saved trace files.*

The Bidirectional Averages tab displays the two traces (taken from both ends of the same fiber) and the average of the two traces. The two traces are represented in opposite directions. The end of one trace is the beginning of the other trace, and the two traces meet in the middle.

The trace from the first tab will appear as usual, starting in the upper left corner and sloping down to its end in the lower right corner. The trace from the second tab looks like a superimposed mirror image of the first. It starts in the upper right corner and slopes down to its end in the lower left, and its events should line up vertically with the events from the first trace.

When the third tab is active, the event table shows the averages of each event. If an event appears on one of the traces but not at the corresponding distance on the other, "--" appears in the table cell.

Performing Difference Measurements

Select **Measurement > Difference**.

NOTE. *You must have two files open to create difference data.*

You cannot save the third tab as a file, but you can regenerate the data at any time from the saved trace files.

The Difference function subtracts one trace from another and displays the results as a third trace. Look at the difference to compare two similar trace files, such as traces taken on the same fiber at different times, or traces taken on adjacent fibers in the same cable. This measurement generates a third tab with a trace and event table that show the difference between the two trace files. The difference in the event loss values show you changes in the fiber between the acquisitions or the differences between two adjacent fibers.

To perform a difference measurement:

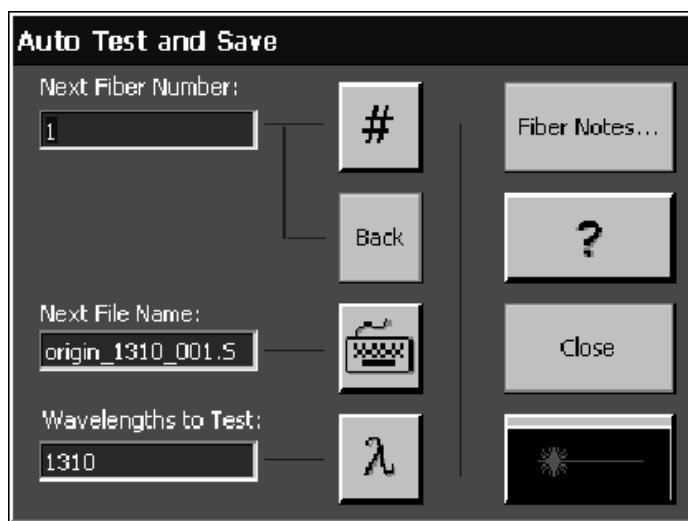
1. Open or acquire a trace.
2. Select **Dual Trace > Dual Trace On**.
3. Open or acquire a second trace.
4. Select **Measurement > Difference**.
5. Select the third tab to view the difference data.

The tabs above the trace region are labeled with the file name of the trace data. Select the tab of the trace data you want to be active. The event markers of the active trace are dark and the event markers of the inactive trace are light. The event table shows the events of the active trace data.

Auto Test and Save Dialog Box

Select **Auto Test and Save** button.


Use this dialog box to automate taking and saving numerous, similar tests. The auto test will use the test settings on the main screen.



Next Fiber Number: Tells you what fiber number the OTDR will assign to the next fiber it measures. Enter the fiber number you want the OTDR to start with.

Back button. Decrements the Next Fiber Number.

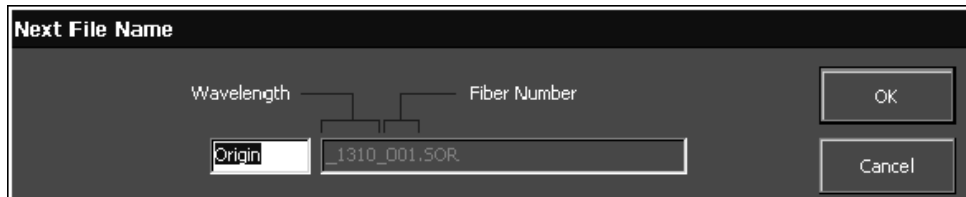Next File Name: Press the keyboard icon to access the Next File Name dialog box (shown in part below) where you enter the first part of the fiber name into the field.



Wavelength to Test: If your module has multiple wavelength capability, select the wavelength icon to set up which wavelength or wavelengths to use.

Fiber Notes... button. Opens the Fiber Notes dialog box where you can add to or edit notes before you save them with your test.

Close button. Clears and closes the dialog box.

Start button. Begins the first test.

Auto Sequence Wavelength Choices Dialog Box

Select **Auto Test and Save button** > λ button.

Choose which wavelength to test in the Test First option list. If you want to test each fiber a second time with a different wavelength, select a wavelength in the Test Second option list. If you don't want to test a second time, select none in the Test Second option list.



Other Features

This section includes instructions and reference information about features you may find useful:

- Increasing the range
- Printing
- Using the OTDR with a keyboard
- Joining cursors
- Information about file types
- Making notes on events, landmarks, and fibers
- Adding, moving, and deleting, events or landmarks

Increasing the Range

Occasionally, on very long fibers, the OTDR cannot detect the end of the fiber because the range is insufficient. The phrase “Out of Range” will appear in the last row of the event table. If this happens, change the test settings:

1. Select **Settings > Test Setting and Limits > Test Settings** tab.
2. Select the Test Mode: **IntelliTrace Plus**, **Manual**, or **End of Fiber**.

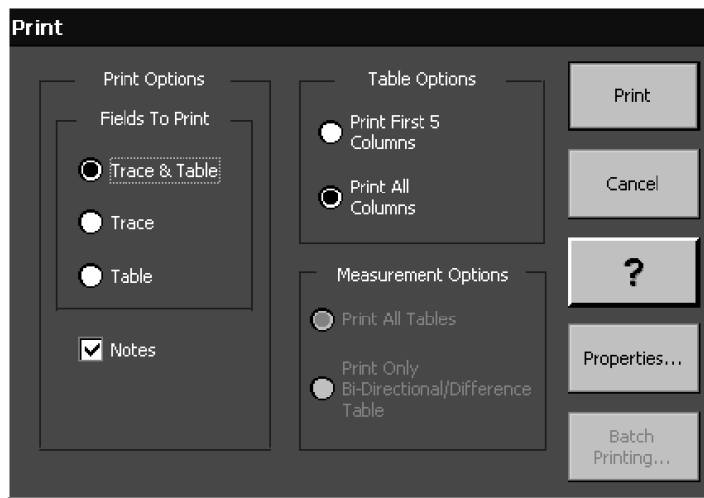
If you choose IntelliTrace Plus mode, select **Find Most Events**. This configuration will take more time to run.

If you choose Manual mode, you can do one or both of the following:

- Use a longer pulse width. This increases the range by increasing the power, but it reduces resolution.
- Increase the averaging. This increases the range slightly by lowering the noise floor, but the test will take much longer.

Printing

Select **File > Print**.



Select the fields you want to print:

- Trace and Table. This choice prints both the trace and table.
- Trace. The trace will print as it appears on screen. At least one line of the event table will print for the selected event.
- Table. Under Table Options, indicate whether to print only the first five columns or all columns. For measurements with multiple tables, select under Measurement Options whether to print all the tables or only the bidirectional or difference table.
- Notes. Select Notes to print your fiber, event, and landmark notes. Tap the Properties button to select a printer, port, network path, paper size, print mode, print range, orientation, and margins. (For additional information, select **Properties > ?**.)

Using with a Keyboard

You can operate the OTDR with an external keyboard as follows:

Connect the keyboard to the keyboard port on the NetTek Analyzer.

Access the main menus by holding down the Alt key and pressing the underlined letter of the menu name.

Use the up and down arrows to move the highlight cursor to your drop-down menu selection and then press Enter.

In a dialog box, use the tab or arrow keys to highlight the item or area of interest, and then press Enter to select it.

For example, to change the appearance of the trace, use these steps:

1. Open the View drop-down submenu: hold down Alt and press V.
2. Open the Trace Display Options dialog box: press the down arrow until the Trace Display Options menu is highlighted, and then press Enter.
3. Use the tab or arrow keys to select one of the options and then press Enter to select or clear the checkbox.

Join Cursors

Select **View > Join Cursors**.

The inactive cursor jumps to the location of the active cursor. (The active cursor is the one labeled with white text in a black box.)

About File Types

SOR format, the default file format, is a Telcordia format. Use this format if you will use the file in the Tektronix TARGET1 PC software or in an instrument from another manufacturer.

CFF format is a Tektronix file format. Use this format if you will be using the file with a Tektronix TFS3031 or TFP2A OTDR or with Tektronix FMTAP PC software.

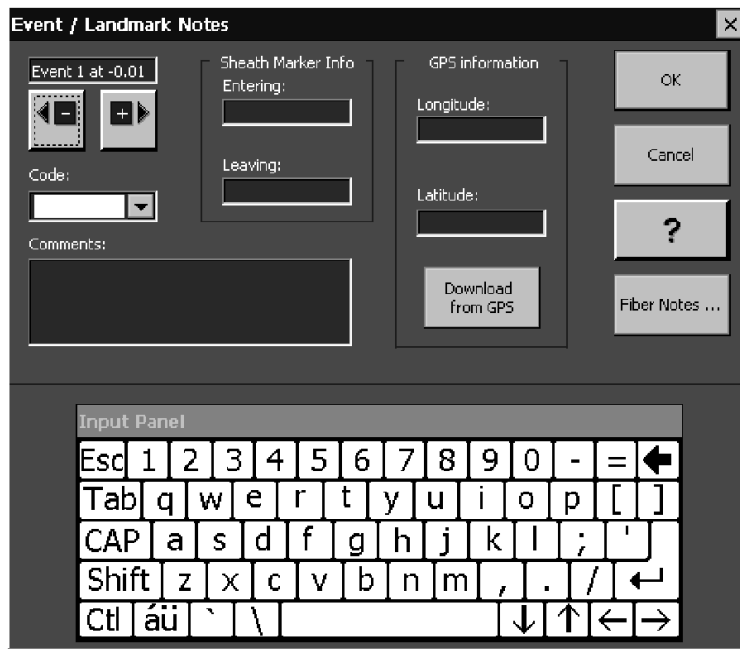
SET format includes only settings and limits; it does not include test data. Use this format to save and reuse settings and limits for multiple tests.

Making Notes on Events, Landmarks, and Fibers

You can record notes about fibers or about individual events and landmarks on a trace. These notes are saved when you save the test file.

Event / Landmark Notes Dialog Box

Select **Events > Event / Landmark Notes....**



Use the buttons to jump to the event or landmark marker for which you want to examine or edit the notes.

Use the Code drop-down list to select a Telcordia code that describes the type of event or landmark.

Any comments you enter in the Comments: box will be visible from the Event Table Only view.

Use Sheath Marker Info to record the sheath distance (as opposed to the fiber distance) between events or landmarks. Enter the number you read on the sheath cable at the event or landmark.

Enter GPS (Global Positioning System) information into the Longitude: and Latitude: text boxes. GPS coordinates will help you easily locate a landmark again.

If you have installed a standard GPS module with RS232 communication, you can press the Download from GPS button to automatically enter the data.

NOTE. *Remember that the GPS will enter the coordinates of the module location at the time you press this button. If you are not standing at the site of the landmark, enter the coordinates by hand or return to the site to enter them automatically.*

You can manually enter GPS coordinates using the following format:

Longitude: Wddd°mm'ss"

Latitude: Ndd°mm'ss"

Where:

dd = latitude degrees [0-90]

ddd = longitude degrees [0-180]

mm = minutes [0-59]

ss = seconds [0-59]

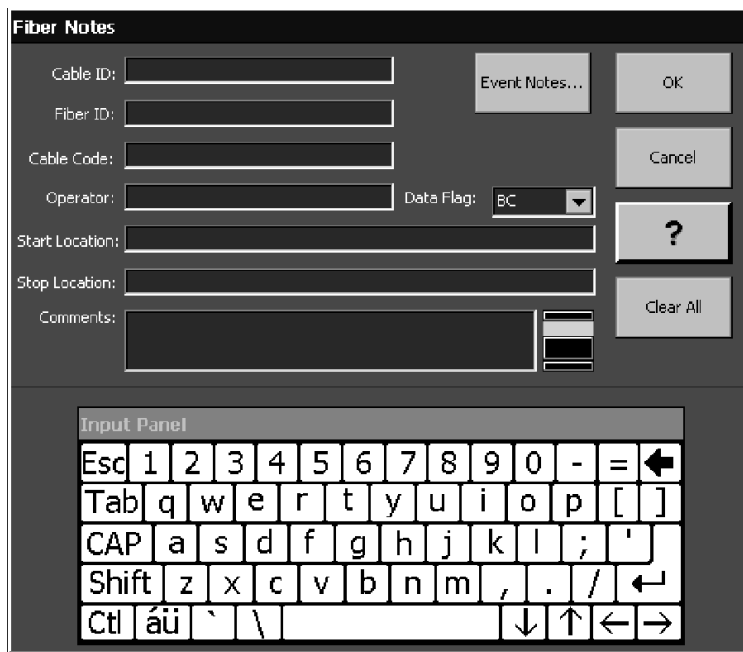
N = n = North latitude (may be replaced with S for South)

W = w = West longitude (may be replaced with E for East)

Fiber Notes Dialog Box

Select **File > Fiber Notes....**

Fiber notes are saved with your trace file. Use the Fiber Notes dialog box to record information in the way that your company finds most useful. The most recently entered descriptions will appear in the drop-down menu of each field.



For Cable Code, enter the Telcordia Suggested Optical Cable Code.

Describe the beginning and ending locations of the trace in the Start Location: and Stop Location: fields.

For Data Flags, the following codes are recommended:

- BC - as-built condition
- RC - as-repaired condition
- OT - other; describe the condition in the Comments: field

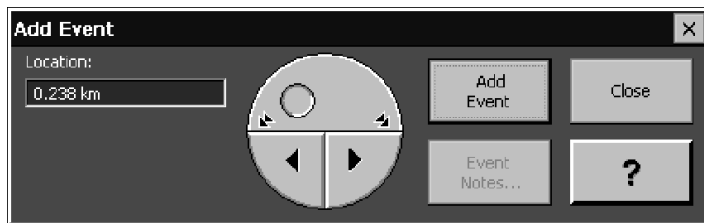
In the Comments field, make note of cable or fiber design or link issues. Describe how the link is used and record any construction or repair issues.

Adding, Moving, and Deleting, Events or Landmarks

From the Events menu, you can add, move, and delete both events and landmarks. You can also access Event/Landmark Notes or freeze events.

Adding Events

Select **Events > Add Events...**



Manually added events will appear in the event table with an asterisk (*).

1. Position the active cursor where you want to add an event.
2. Zoom in.
3. Select **Events > Add Events...**
4. Use the cursor buttons to fine tune the position of the cursor where you want to add an event. Notice that the location of the cursor appears in the Location: field.
5. Tap **Add Event** to add an event.
6. Tap **Event Notes...** to describe the event.
7. Tap the **Close** button.

Moving Events

Select **Events > Moving Events...**

Manually added events will appear in the event table with an asterisk (*).

1. Select an event.
2. Zoom in.
3. Select **Events > Move Events...**
4. Use the cursor buttons to move the cursor where you want to move the selected event. Notice that the selected event and the location of the cursor appear in the **Location:** field.
5. Tap **Move Event** to move the event.
6. Tap **Event Notes...** to edit the event notes.
7. Tap the **Close** button.

Adding Landmarks

Select **Events > Add Landmarks...**

Add a landmark to help you remember how the trace relates to real locations on the fiber such as a bridge. You can mark places where a failure might be likely to occur in the future.

1. Position the active cursor where you want to add a landmark.
2. Zoom in.
3. Select **Events > Add Landmark...**
4. Use the cursor buttons to fine tune the position of the cursor where you want to add a landmark. Notice that the location of the cursor appears in the Location: field.
5. Tap **Add Event** to add an event.
6. Tap **Landmark Notes...** to describe the landmark.
7. Tap the **Close** button.

Moving Landmarks

Select **Events > Moving Landmarks...**

1. Select a landmark.
2. Zoom in.
3. Select **Events > Move Landmark...**
4. Use the cursor buttons to move the cursor where you want to move the selected landmark. Notice that the selected landmark and the location of the cursor appear in the Location: field.
5. Tap **Move Landmark** to move the landmark.
6. Tap **Landmark Notes...** to edit the landmark notes if you wish.
7. Tap the **Close** button.

Deleting Events

Select **Events > Delete Events...**

1. Select an event.
2. Select **Events > Delete Events...**
3. Tap the **Delete Events** button.
4. Tap the **Close** button.

Deleting Landmarks

Select **Events > Delete Landmarks...**

1. Select a landmark.
2. Select **Events > Delete Landmarks...**
3. Tap the **Delete Landmark** button.
4. Tap the **Close** button.

Deleting All Landmarks

Select **Events > Delete All Landmarks...**

All landmarks will be deleted.

Freezing Events

Select **Events > Freeze Events.**

Consider freezing events if you are testing more than one fiber for which you expect the events to have the same locations.

Freezing events allows you to use the current events as a template for subsequent acquisitions. This means that all of the current events will continue to be displayed as new traces are acquired, regardless of the Event Loss actually found at those distances. Additional events that exceed the thresholds will also be found, displayed, and included in the event table.



Appendices

Appendix A: Specifications

The specifications in this section apply to the NetTek Analyzer OTDR Module , unless otherwise specified. For NetTek Analyzer Platform specifications, refer to the *NetTek Analyzer Platform User Manual*.

All specifications are guaranteed unless labeled “typical”. Typical specifications are provided for your convenience and are not guaranteed.

Table A- 1: NetTek Analyzer OTDR Module characteristics

Module	Fiber type	Wavelengths	Dynamic range ¹	Event dead zone ²	Loss dead zone ²
YSS1310	Singlemode	1310 nm + 20 nm	38 dB	2 m	8 m
YSS1315	Singlemode	1310 nm / 1550 nm + 20 nm	38 / 36 dB	2 m	8 m
YSL1315	Singlemode	1310 nm / 1550 nm + 20 nm	42 / 40 dB	2 m	8 m
YSL1625	Singlemode	1625 nm + 20 nm	40 dB	2 m	8 m
YSL1516	Singlemode	1550 nm / 1625 nm + 20 nm	40 / 40 dB	2 m	8 m
YSU1315	Singlemode	1310 nm / 1550 nm + 20 nm	44 / 44 dB	2 m	8 m
YSU1625	Singlemode	1625 nm + 20 nm	44 dB	2 m	8 m

¹ Typical at 23°C, SNR = 1, 3 minutes averaging, maximum pulse width.

² Typical at 23°C, -40dB reflectance, 3 minutes averaging, minimum pulse width.

Table A-2: General characteristics

Characteristics	Description
Accuracy	
Distance accuracy	
Zero offset	+/-0.5 m
Timebase	+/- 10 ⁻⁵
Cursor resolution	+/- 0.5 m
Loss accuracy (linearity)	0.02dB/dB
Reflectance accuracy	+/- 2 dB
ORL accuracy	+/-4dB
Vertical parameters	
Vertical scale	0.1 to 10.0 dB/div
Readout resolution	0.001 dB
Reflectance range	-14 to -65 dB
Horizontal parameters	
Display range	0 to 320 km
Readout resolution	0.05 m
Measurement points	32000 standard
Length units	meters, feet, miles
Pulse widths	10, 20, 50, 100, 200, 500 ns, 1, 2, 10, 20 μs
Waveform scan parameters	
Loss threshold range	0.01 to 5.00 dB, 0.01 dB increments
Reflectance threshold	-14 to -65 dB, 1 dB increments
Default save file format	Telcordia SOR
Test settings	
Test modes	IntelliTrace, Manual, End of Fiber, Real-time
Number of averages	1024 to 4, 194,304, in increments of 1
Refractive index	1.4000 to 1.6000, in increments of 0.0001

Table A-2: General characteristics (Cont.)

Characteristics	Description
Scattering coefficient	-100 dB to -40 dB, in increments of 0.01 dB
Cabling factor	0% to 100%, in 0.1% increments
Zero offset	0 to end of data, in increments of one data point
Absolute thresholds	
Reflectance	-65 to -14 dB, in 1-dB increments
Event loss	0.01 to 5 dB, in 0.01-dB increments
Slope	0.1 to 5 dB/km, in 0.01-dB/km increments
Optical Return Loss (ORL)	1 to 30 dB, in 1-dB increments
End-to-end loss	0.1 dB to 50 dB, in 0.1-dB increments
End-of-fiber	1 to 20 dB, in 1-dB increments
Front panel connection	0.1 to 5 dB, in 0.1-dB increments
Distance units	meters, feet, miles
OTDR SOR documentation	
Cable ID	ASCII string
Operator	ASCII string
Originating location	ASCII string
Terminating location	ASCII string
Cable code	ASCII string
Fiber condition	CC, BC, RC, OT
Fiber comments	ASCII string
Event comments	ASCII string
Landmark category code	ASCII string

Table A-2: General characteristics (Cont.)

Characteristics	Description
GPS information	Longitude - 0 to 180 degrees in increments of 1 degree, 0 to 60 minutes in increments of 1 minute, 0 to 60 seconds in increments of 1 second, east or west. Latitude - 0 to 90 degrees in increments of 1 degree, 0 to 60 minutes in increments of 1 minute, 0 to 60 seconds in increments of 1 second, north or south.
Sheath marker # entering landmark	0 to 999999 in increments of 1
Sheath marker # leaving landmark	0 to 999999 in increments of 1
Units of sheath marker information	km, feet, miles
Mode field diameter	88 or 98
Landmark comments	ASCII string

Table A-3: Transportation and storage

Characteristics	Description
Transportation and storage	Transportation and storage applies to the application modules assembled on the Yukon platform and individually.
Packaged product	The packaged product qualifies under the Distribution Transportation Cycle 1, Assurance Level I for packaged products 0-20 lbs.
Recyclability	The product transportation package meets the requirements for recyclability.

Table A-4: Environmental characteristics

Characteristic	Description
Temperature range without disk media installed in disk drives	
Operating	-10° C to +50° C (-4° F to 122° F) specified performance
Nonoperating	-40° C to +60° C (-40° F to 140° F)
Temperature range with floppy drive installed	
Operating	+5° C to +50° C specified performance
Nonoperating	-22° C to +60° C specified performance
Temperature range with floppy disk media installed	
Operating	+10° C to +50° C specified performance
Nonoperating	-40° C to +60° C specified performance
Temperature range with Li-ion batteries installed	
Discharge	-10° C to +50° C specified performance
Charge	0° C to +45° C specified performance
Storage	-40° C to +50° C specified performance
Humidity	
Operating	+23 to +50° C from 5 to 95% RH
Nonoperating	+23 to +60° C from 5 to 95% RH
Altitude	
Operating	Up to 15,333 ft. (4600m)
Nonoperating	Up to 50,000 ft. (12,192m)
Sine vibration	
Operating	One 56 minute sinusoidal sweep at 1.5 g from 10 -500 Hz at 0.1 Octave/Min. sweep rate in each of the 3 major axes with the product operating.
Nonoperating	0.03 g ² /Hz from 10 to 500 Hz.

Table A-4: Environmental characteristics (Cont.)

Characteristic	Description
Random vibration, operating	0.31 GRMS from 5-500 Hz, with power spectral density break-down points as follows: Constant 0.0002 g ² /Hz from 5 to 350 Hz, then falls -3dB/octave to 0.00014 g ² /Hz @500 Hz for 10 Min. in each of the 3 major axes. Product continued to operate.
Mechanical shock, operating	Half Sine Mechanical Shock, 50 g's, 11 msec. duration, 3 drops on each face while operating for a total of 18 shocks. Product continued to operate.
Bench handling, operating	Product raised to 45 degrees with respect to bench top, 4 inch, or to the product's point of balance, whichever occurs first - then dropped freely to the horizontal bench top. Product continued to operate.
Topple, operating	Product placed on rear feet or other surface most likely to result in a topple if bumped. Tip the product over just past the point of balance in a direction that it could be reasonably be toppled and allow the product to fall freely onto a non-resilient hard floor surface. Repeat on other edges and surfaces deemed appropriate. Product continued to operate.
Free-fall drop, operating	Single drop from 30 inches onto each of the 6 faces, and 4 corner edges of the product onto a hard unyielding surface while operating. Floppy Drive Option to meet single drop on base (bottom down) as per Telcordia. Tilt Stand mounted on rear case is optional. Product continued to operate.

Table A-5: Physical characteristics

Characteristic	Description
Dimensions	Height: 234 mm (9.2 in) Width: 190 mm (7.5 in) Depth: 33 mm (1.3 in)
Weight	< 1.4 kg (< 3 lbs.)

Table A-6: Miscellaneous characteristics

Characteristic	Description
Recommended calibration interval	2 years

Table A-7: Certifications and compliances

Category	Standards or description																
EC Declaration of Conformity - EMC	<p data-bbox="553 464 1279 604">Meets intent of Directive 89/336/EEC for Electromagnetic Compatibility. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:</p> <table data-bbox="553 625 1305 1455"> <tr> <td data-bbox="553 625 683 659">EN 61326</td> <td data-bbox="862 625 1305 766">EMC requirements for Class A electrical equipment for measurement, control and laboratory use.¹</td> </tr> <tr> <td data-bbox="597 800 789 833">IEC 61000-4-2</td> <td data-bbox="862 800 1247 869">Electrostatic discharge immunity (Performance criterion B)</td> </tr> <tr> <td data-bbox="597 898 789 932">IEC 61000-4-3</td> <td data-bbox="862 898 1268 968">RF electromagnetic field immunity (Performance criterion A)</td> </tr> <tr> <td data-bbox="597 1035 789 1068">IEC 61000-4-4</td> <td data-bbox="862 1035 1279 1104">Electrical fast transient / burst immunity (Performance criterion B)</td> </tr> <tr> <td data-bbox="597 1134 789 1167">IEC 61000-4-5</td> <td data-bbox="862 1134 1182 1203">Power line surge immunity (Performance criterion B)</td> </tr> <tr> <td data-bbox="597 1232 789 1266">IEC 61000-4-6</td> <td data-bbox="862 1232 1159 1302">Conducted RF immunity (Performance criterion A)</td> </tr> <tr> <td data-bbox="597 1331 800 1365">IEC 61000-4-11</td> <td data-bbox="862 1331 1279 1400">Voltage dips and interruptions immunity (Performance criterion B)</td> </tr> <tr> <td data-bbox="553 1425 740 1459">EN 61000-3-2</td> <td data-bbox="862 1425 1279 1459">AC power line harmonic emissions</td> </tr> </table>	EN 61326	EMC requirements for Class A electrical equipment for measurement, control and laboratory use. ¹	IEC 61000-4-2	Electrostatic discharge immunity (Performance criterion B)	IEC 61000-4-3	RF electromagnetic field immunity (Performance criterion A)	IEC 61000-4-4	Electrical fast transient / burst immunity (Performance criterion B)	IEC 61000-4-5	Power line surge immunity (Performance criterion B)	IEC 61000-4-6	Conducted RF immunity (Performance criterion A)	IEC 61000-4-11	Voltage dips and interruptions immunity (Performance criterion B)	EN 61000-3-2	AC power line harmonic emissions
EN 61326	EMC requirements for Class A electrical equipment for measurement, control and laboratory use. ¹																
IEC 61000-4-2	Electrostatic discharge immunity (Performance criterion B)																
IEC 61000-4-3	RF electromagnetic field immunity (Performance criterion A)																
IEC 61000-4-4	Electrical fast transient / burst immunity (Performance criterion B)																
IEC 61000-4-5	Power line surge immunity (Performance criterion B)																
IEC 61000-4-6	Conducted RF immunity (Performance criterion A)																
IEC 61000-4-11	Voltage dips and interruptions immunity (Performance criterion B)																
EN 61000-3-2	AC power line harmonic emissions																
Australia / New Zealand Declaration of Conformity - EMC	<p data-bbox="553 1486 1300 1549">Complies with EMC provision of Radiocommunications Act per the following standard(s):</p> <table data-bbox="553 1570 1256 1646"> <tr> <td data-bbox="553 1570 773 1604">AS/NZS 2064.1/2</td> <td data-bbox="862 1570 1256 1646">Industrial, Scientific, and Medical Equipment: 1992</td> </tr> </table>	AS/NZS 2064.1/2	Industrial, Scientific, and Medical Equipment: 1992														
AS/NZS 2064.1/2	Industrial, Scientific, and Medical Equipment: 1992																

Table A-7: Certifications and compliances (cont.)

Category	Standards or description
FCC	Emissions comply with FCC Code of Federal Regulations 47, Part 15, Subpart B, Class A Limits.
¹ Emissions which exceed the levels required by this standard may occur when this equipment is connected to a test object.	

Table A-8: Safety compliance

Characteristic	Description
Laser Safety	per 21 CFR 1040.10 and IEC60825-1 Class I invisible laser products

Appendix B: User-replaceable Parts, Options, and Accessories

You can order the items listed by part number below. Contact your Tektronix representative or distributor for ordering information. See page xiv for further information on contacting Tektronix.

Table B-1: User-replaceable parts

Part number	Description
200-4542-00	Optical Port Cover

Table B-2: Connector Options

Description	Part number
FC	119-5115-00
E2000	119-6427-00
ST	119-4513-00
Diamond3.5	119-4558-00
SC	119-5154-00

Table B-3: Optional accessories

Part number	Description
015-0684-00	Penlight Visual Fault Finder
015-0685-00	Bare Fiber Adapter
015-0686-00	Bare Fiber Adapter with Cleaver

Table B-4: Standard accessories

Quantity	Part number	Description
1 ea	016-1868-00	Pouch
1 ea	020-2357-00	Cleaning Kit
1 ea	071-0763-00	English User Manual

Appendix C: Maintenance

This section provides information on the following topics:

- Cleaning
- Transporting the OTDR
- Repackaging for shipment

Cleaning



WARNING. *Power off the instrument and disconnect the power/charger adapter before beginning any cleaning procedure.*



CAUTION. *Do not touch the exposed end of the optical port or fiber connector with anything but a lint-free swab or paper wipe dampened with electronics-grade alcohol.*

Do not use index-matching fluid or gel on the optical port or fiber connector. It may cause contamination and a fatal error message. If index-matching material is used, clean the optical port and fiber connector thoroughly.

Do not use acetone on any optical connectors.

Clean the optical port, the connector adapter, and the test fiber adapter before you connect to them each time. As regular maintenance, clean the exterior of the application module to remove dust or oily build up.

Cleaning the Optical Port

Remove the connector adapter by unscrewing it counterclockwise. Pull the connector adapter off the optical port. When the connector adapter is removed, the optical port is accessible for cleaning.

Dampen a lint-free swab or paper wipe with electronics-grade alcohol. Gently wipe across and around the port a couple of times.

Cleaning the Connector Adapter

1. Blow through both ends of the connector adapter barrel with clean, canned air.
2. Dampen a lint-free pipe cleaner with electronics-grade alcohol. The pipe cleaner absorbent should be about 0.35 cm (0.15 inch) in diameter, and the wire part of the pipe cleaner should be less than 0.1 cm (0.04 inch) in diameter.
3. Gently insert the dampened pipe cleaner into the barrel of the connector adapter. Be careful not to scratch the barrel with the wire while inserting it.
4. Pull the pipe cleaner completely through the barrel only once.

Cleaning the Test Fiber Connector

Dampen a lint-free swab or paper wipe with electronics-grade alcohol. Gently wipe across the end of the fiber connector a couple of times.

Cleaning the Exterior of the Module

Remove accumulated dirt or oily residue with a mild detergent and water solution. Do not immerse the analyzer or use abrasive cleaners.

1. Close all NetTek Analyzer and module connector and battery doors.
2. Install the bus door on the rear of the NetTek Analyzer or instrument module. Review the instructions, *Installing an Instrument Module*, beginning on page 1-2.



CAUTION. *To prevent damage to external surfaces, avoid using chemicals that contain acetone, benzene, toluene, xylene, or similar solvents. Do not use bleach or ammonia solutions for cleaning.*

3. Use a soft cloth dampened with a solution of water and mild detergent to clean the instrument.

Transporting the OTDR

The safest way to transport your OTDR is inside a factory-designed carrying case.

Soft Case (standard accessory with the NetTek Analyzer)

1. Put the analyzer and module in the plastic bag to protect it from abrasion during shipping.
2. Place the analyzer and module in the foam cutout.
3. Restrain the analyzer and module with the built-in strap.
4. Close the case and secure the latch.

Hard Cases (optional accessories with the NetTek Analyzer)

1. Put the analyzer and module in the plastic bag to protect it from abrasion during shipping.
2. Place the analyzer and module in the foam cutout.
3. Close the case and secure the latch.

Repackaging for Shipment

To ship the OTDR for repair, use the original packing container if possible. If the container is unfit for use or not available, use the metal carrying case or repackage the instrument as follows:

- 1.** Use a carton with a test strength of no less than 80 kg (175 lbs).
- 2.** Surround the instrument with protective polyethylene sheeting.
- 3.** Cushion the instrument on all sides with at least two inches of tightly packed urethane foam or other packing material.
- 4.** Seal the carton with shipping tape or an industrial stapler.



Glossary

Glossary

Attenuation

The loss of optical signal power expressed in decibels.

Attenuation Coefficient

The attenuation of an optical fiber per unit length, typically expressed in dB/km.

Averaging

The number of times a trace is acquired and mathematically combined with previous tests to improve the resolution of low-loss features. Averaging increases the measurement accuracy and range.

Backscatter

The gently sloping part of the trace. Tiny imperfections in the fiber material cause a small, constant amount of light to reflect back to the OTDR over the whole distance of the fiber. See illustration.

Backscatter Coefficient

A specification from the fiber manufacturer for the amount of light reflected per distance of fiber. This parameter is used in OTDR reflectance calculations. If you do not know the correct backscatter coefficient, use the OTDR factory-default values.

Cabling Factor

The percent of extra fiber in the sheath of the cable. Because of the spiral wrap of the cable and snaking (side-to-side variations inside the cable sheath), the physical length of the fiber differs from the sheath length. The cabling factor is the percentage of difference between the two. This allows you to match up the OTDR readings (fiber length) with the printed sheath markings.

Echo Event

Marked with an “e” in the event table. An event caused by reflections off of reflective events in the fiber, usually

mechanical connectors and the end of the fiber. These reflections create an echo of the real event at a distance that is a multiple of the real event. For example, if there is a strong reflection at 2 km, you might see an echo at 4 km. The OTDR identifies echoes and marks them, but it does not remove them because there could be a real connector. In the example, you might really have a connector a 4km. Pure echoes tend to have little or no loss. On shorter fibers with more reflective end connectors you might also see an echo of the entire fiber past the end.

Event

A square marker on the trace to indicate a change in fiber characteristics that exceeds the preset tolerance. Events can be marked by the OTDR or by the operator. See Reflective Event and Non-reflective Event.

Event Dead Zone

The minimum distance after an event that the OTDR can accurately measure the distance to the next event. See *Loss dead zone*.

Event Threshold

The minimum or maximum change in value before the OTDR indicates an event.

GPS

Global Positioning System. A navigational system which determines latitude and longitude coordinates from satellite signals.

Grouped Events

Marked with a “g” in the event table. Events located close enough together so that the OTDR analysis software can recognize that there are multiple events, but cannot measure the loss separately. Grouped events are wider apart than the event dead zone, but closer together than the loss dead zone. The OTDR will show the different distances for the multiple events, but only one loss measurement.

Landmark

A house-shaped marker on the trace that indicates a geographical location. Landmarks are added by the operator.

Laser

Acronym for Light Amplification by Stimulated Emission of Radiation. A device that produces an intense beam of light of a specific wavelength.

Link Loss

The power loss from the front panel to the end of the fiber. When the trace is visible, the link loss readout appears to the right of the event table data.

Loss

A decrease in the power measured by the OTDR between two points on the trace.

Loss dead zone

The minimum distance after an event where the OTDR can measure the loss of the next event as a distinct event. See *Event dead zone*.

Macrobends

A flexed fiber where the radius of the bend is greater than the core size of the fiber.

Microbends

A flexed fiber where the radius of the bend is less than the core size of the fiber.

Multimode fiber

An optical fiber that supports propagation of more than one bound mode.

Non-reflective Event

A point on the trace where the power level of the backscatter suddenly decreases. Caused by a break in the fiber, a fusion splice, a bend, or an unpolished end of the fiber. See *Reflective Event*.

Optical Fiber

A filament of transparent dielectric material, usually glass or plastic, and usually circular in cross section, that guides light. An optical fiber usually has a cylindrical core surrounded by, and in intimate contact with, a cladding of similar geometry. The refractive index of the core must be slightly higher than that of the cladding for the light to be guided by the fiber.

OTDR

Optical Time Domain Reflectometer; an optoelectronic device used to characterize an optical fiber. An OTDR injects a series of light pulses into the fiber under test. It then extracts, from the sending end of the fiber, light that is scattered and reflected back to the source. The intensity of the return pulses is measured and integrated as a function of time, and is plotted as a function of fiber length. An OTDR can tell you the length of a fiber, its overall attenuation, and the location and nature of faults in the fiber.

Pulse Width

The duration in time (ns) that the laser pulses the fiber. Longer pulse widths provide greater range; shorter pulse widths provide shorter loss dead zones between events.

Reflectance

Reflectance (or return loss) is defined as the ratio of returned power to input power, in dB. Typical values are -20 dB (large reflectance) to -50 dB (small reflectance).

Reflective Event

A point on the trace where the reflected power level suddenly raises above the backscatter. Caused by connectors, splices, or the end of the fiber. See *Non-reflective Event*.

Refractive Index

A specification of the fiber. The ratio of the speed of light in a vacuum to the speed of light in the fiber. Affects the OTDR distance measurements.

Singlemode fiber

An optical fiber that permits only the lowest order bound mode to propagate at the wavelength of interest.

Splice

The joining of two separate optical fibers. Splices can be mechanical (connectors) or fusion (melted).

Splice Loss

Any loss of optical power at a splice. A typical splice of optical fibers has losses for a number of reasons. Some losses are due to the fiber properties and others are due to the method or device used to make the splice.

Wavelength

A specification describing the type of light (the distance between two crests or troughs in a light wave), produced by the laser in the OTDR. The best wavelength to use for testing an optical system is generally the system's operating wavelength. However, sometimes 1625 nm is used to measure active systems because it is outside the band used for communication.



Index

Index

A

About Trace, 2-29
Accelerator keys, operating with a
 keyboard, 3-18
Accessories
 optional, B-2
 standard, B-2
Adapter
 installation of, 1-9
 removal of, 1-10
Adding
 events, 3-24
 landmarks, 3-26
Address, Tektronix, xiv
Analysis, basic tutorial, 2-14
Asterisk, 2-12
Attenuation, Glossary-1
Attenuation coefficient, Glossary-1
Auto Test and Save, 3-12
Auto-increment, 2-24
Averaging, 2-19, Glossary-1
 acquisition without. *See* Real
 Time test mode

B

Backscatter, Glossary-1
Backscatter coefficient, Glossary-1
 setting the, 2-20
Basic tutorial, 2-13
Bend, macro or micro, Glossary-3
Bidirectional Averages measure-
 ment, 3-9
BuiltInDisk, 2-24
Bus door, 1-3

Buttons

 cursor, 2-9
 help, 2-2
 main screen, 2-4
 zoom sizing, 2-8

C

Cabling factor, Glossary-1
 setting the, 2-19
Calibration interval, A-7
Certifications, A-8
CFF file type, 3-19
Cleaning instructions, C-1
Closing the optical port, 1-7
Compare two traces, 3-8
Configuring settings, 2-18
Connector adapter
 installation, 1-9
 removal, 1-10
Connector options, standard, B-1
Contacting Tektronix, xiv
Conventions, x
Cover
 bus, 1-3
 optical port, 1-8, B-1
Cumulative Loss, 2-11
Cursor buttons, 2-4
Cursors, 2-9
 join , 3-19

D

Dead zone
 event, Glossary-2

- loss, Glossary-3
- Deleting
 - events, 3-27
 - landmarks, 3-28
- Delta readouts, showing or hiding, 2-5
- Difference measurement, 3-11
- Dimensions, A-7
- Distance, 2-11
- Distance columns, event table, 2-11
- Distance Units, setting the, 2-20
- Documentation conventions, x
- Documentation set, xii
- Documenting fibers, events, and landmarks, 3-20
- Door
 - instrument module bus, 1-3
 - optical port, 1-8, B-1
- Dual Trace Mode, 3-8

E

- e, 2-12
- Echo event, Glossary-1
- End, 2-12
- End Detection, setting the, 2-20
- End of Fiber
 - basic tutorial, 2-16
 - test mode, 2-21
- English units. *See* Distance Units, setting the
- Event, Glossary-2
 - dead zone, Glossary-2
 - non-reflective, Glossary-3
 - number, 2-11
 - reflective, Glossary-4
 - showing or hiding markers, 2-5

- Event / Landmark Notes, 2-11, 3-20
- Event Loss, measurement, 3-2
- Event Loss , setting the threshold, 2-20
- Event table
 - column definitions, 2-10
 - symbols and highlights, 2-12
- Event threshold, Glossary-2
- Events, freezing, 3-28
- Events and landmarks, adding, moving, and deleting, 3-24
- Extensions, 3-19

F

- Factory defaults. *See* Power-On Settings, setting the
- Feet, 2-20
- Fiber Notes, 3-22
- Fiber, optical, Glossary-4
- File types, 3-19
- Find information, start Help, 2-1
- Finding the length of a fiber, basic tutorial, 2-16
- Finding the length of the fiber. *See* End of Fiber, test mode
- Flagging events and link loss. *See* Limits
- Freezing events, 3-28
- Front Panel Loss Warning, setting the, 2-20

G

- g, 2-12
- GPS, 3-21, Glossary-2

Grid lines, show or hide, 2-5
Grouped event, Glossary-2

H

Help, find information, 2-1
Help buttons, 2-2
Hide or show main screen items,
2-5
Highlighting out-of-limit data,
2-22
Highlights and symbols, event
table, 2-12
Hot keys, operating with a key-
board, 3-18

I

Icons. *See* Buttons
Increasing the range, 3-16
Information, getting help, 2-1
Input Panel, opening and closing,
2-1
Installation
connector adapter, 1-9
instrument module, 1-2
IntelliTrace Plus
special optimizations, 2-21
test mode, 2-21

J

Join Cursors, 3-19

K

Keyboard, using with a, 3-18

Keypad, opening and closing the
Input Panel, 2-1, 2-2

L

L, 2-12
Landmark, Glossary-3
Landmarks and events
adding, moving, and deleting,
3-24
making notes, 3-20
viewing notes in the event table,
2-11
Laser, Glossary-3
optical port location, 1-7
Latitude and longitude, 3-21
Limits, 2-22
Link loss, Glossary-3
Locking events. *See* Freezing
events
Loss, 2-11, Glossary-3
Loss dead zone, Glossary-3
Loss delta, 2-11
LSA Slope, advanced calculations,
3-5

M

Macrobends, Glossary-3
Main screen
buttons, 2-4
elements, 2-3
Maintenance, C-1
Manual conventions, x
Manual test mode, 2-21
Markers, show or hide, 2-5
Maximizing the help screen, 2-2

Measurements, 3-1
 Bidirectional Averages, 3-9
 Difference, 3-11
 Event Loss, 3-2
 ORL (Optical Return Loss), 3-7
 Reflectance, 3-6
 basic tutorial, 2-13
 Two Point, 3-4
Meters, 2-20
Microbend, Glossary-3
Miles, 2-20
Moving
 events, 3-25
 landmarks, 3-27
Multimode fiber, Glossary-3

N

NetTek Analyzer documentation,
 xii
No averaging. *See* Real Time test
 mode
Nomenclature, ix
Non-reflective event, Glossary-3
Notes, 3-20

O

Opening files, 2-26
Optical fiber, Glossary-4
ORL (Optical Return Loss) mea-
 surement, 3-7
OTDR, Glossary-4
OTDR types, ix
Out of Range, 2-12
Out of Range, 3-16
Out-of-limit data, highlighting. *See*
 Limits

P

Packaging for shipment, C-5
Phone number, Tektronix, xiv
Platform documentation, xii
Power-On Settings, setting the,
 2-20
Printing, 3-17
Product support, contact informa-
 tion, xiv
Products, ix
Pulse width, 2-19, Glossary-4

R

Range
 increasing the, 3-16
 setting the, 2-19
Readouts, show or hide, 2-5
Real Time test mode, 2-21
Recording fiber, event, and land-
 mark notes, 3-20
Red highlighting, 2-12
Reflectance, 2-11, Glossary-4
Reflectance measurement, 3-6
Reflectance Threshold, setting the,
 2-20
Reflective event, Glossary-4
Refractive index, Glossary-4
 setting the, 2-19
Related documentation, xii
Related products, x
Removal , connector adapter, 1-10
Removal, instrument module, 1-6

S

Sales support, contact information, xiv

Saving, 2-23
 information saved with a test, 2-23
 settings and limits only, 2-25

Screen proportions, trace and table regions, 2-5

Service support, contact information, xiv

SET file type, 3-19

Settings, 2-18
 information from a saved trace, 2-29
 opening .SET files, 2-26
 limits, 2-22
 test settings, 2-18

Sheath marker information, 3-21

Shipping, how to package, C-5

Show or hide main screen items, 2-5

Singlemode fiber, Glossary-5

Sizing the zoom box, 2-8

Slope, 2-11

Software, version, xiii

SOR file type, 3-19

Specifications, A-1

Splice, Glossary-5

Splice loss, Glossary-5

Stow the optical connector, 1-7

Symbols and highlights, event table, 2-12

T

Table
 column definitions, 2-10

 symbols and highlights, 2-12

Technical support, contact information, xiv

Tektronix, contacting, xiv

Test Mode, 2-19, 2-21

Test settings, 2-18

Test time, 2-19

Third tab
 Bidirectional Averages, 3-9
 Difference measurements, 3-11

Thresholds, setting, 2-20

Thumb screw, 1-5

Trace display options, 2-5

Transporting the OTDR, C-4

Tutorial, 2-13

Two Point Loss, basic tutorial, 2-16

Two Point measurement, 3-4

Two Point Slope, advanced calculations, 3-5

U

Units of distance, 2-20

URL, Tektronix, xiv

V

Version, software/hardware, xiii

Viewing the trace and table, 2-5

W

Wavelength, Glossary-5
 setting the, 2-19

Web site address, Tektronix, xiv

Weight, A-7

Y

Yellow highlighting, 2-12

Z

Zero Reference, setting the, 2-20

Zooming, 2-6