

Smart choice for power

**xantrex**



**HPD 15-20  
HPD 30-10  
HPD 60-5**

**Operating Manual**

**HPD 300 Watt Series  
Programmable DC  
Power Supply**

[www.xantrex.com](http://www.xantrex.com)





**Operating Manual for**

**HPD Series  
Programmable DC  
Power Supply**

## Limited Warranty

### What does this warranty cover and how long does it last?

This Limited Warranty is provided by Xantrex Technology, Inc. (“Xantrex”) and covers defects in workmanship and materials in your **HPD 300 Watt Series DC Power Supply**. This warranty lasts for a Warranty Period of **5 years** from the date of purchase at point of sale to you, the original end user customer.

### What will Xantrex do?

Xantrex will, at its option, repair or replace the defective product free of charge, provided that you notify Xantrex of the product defect within the Warranty Period, and provided that Xantrex through inspection establishes the existence of such a defect and that it is covered by this Limited Warranty.

Xantrex will, at its option, use new and/or reconditioned parts in performing warranty repair and building replacement products. Xantrex reserves the right to use parts or products of original or improved design in the repair or replacement. If Xantrex repairs or replaces a product, its warranty continues for the remaining portion of the original Warranty Period or 90 days from the date of the return shipment to the customer, whichever is greater. All replaced products and all parts removed from repaired products become the property of Xantrex.

Xantrex covers both parts and labor necessary to repair the product, and return shipment to the customer via a Xantrex-selected non-expedited surface freight within the contiguous United States and Canada. Alaska and Hawaii are excluded. Contact Xantrex Customer Service for details on freight policy for return shipments outside of the contiguous United States and Canada.

### How do you get service?

If your product requires troubleshooting or warranty service, contact your merchant. If you are unable to contact your merchant, or the merchant is unable to provide service, contact Xantrex directly at:

<b>Phone:</b>	604 422 8595
<b>Toll Free North America:</b>	1 800 667 8422
<b>Fax:</b>	604 421 3056
<b>Email:</b>	info@xantrex.com

Direct returns may be performed according to the Xantrex Return Material Authorization Policy described in your product manual. For some products, Xantrex maintains a network of regional Authorized Service Centers. Call Xantrex or check our website to see if your product can be repaired at one of these facilities.

In any warranty claim, dated proof of purchase must accompany the product and the product must not have been disassembled or modified without prior written authorization by Xantrex.

Proof of purchase may be in any one of the following forms:

- The dated purchase receipt from the original purchase of the product at point of sale to the end user, or
- The dated dealer invoice or purchase receipt showing original equipment manufacturer (OEM) status, or
- The dated invoice or purchase receipt showing the product exchanged under warranty

### **What does this warranty not cover?**

This Limited Warranty does not cover normal wear and tear of the product or costs related to the removal, installation, or troubleshooting of the customer's electrical systems. This warranty does not apply to and Xantrex will not be responsible for any defect in or damage to:

- a. the product if it has been misused, neglected, improperly installed, physically damaged or altered, either internally or externally, or damaged from improper use or use in an unsuitable environment;
- b. the product if it has been subjected to fire, water, generalized corrosion, biological infestations, and high input voltage from lightning strikes;
- c. the product if repairs have been done to it other than by Xantrex or its authorized service centers (hereafter "ASCs");
- d. the product if it is used as a component part of a product expressly warranted by another manufacturer;
- e. the product if its original identification (trade-mark, serial number) markings have been defaced, altered, or removed.

## **Disclaimer   Product**

THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY PROVIDED BY XANTREX IN CONNECTION WITH YOUR XANTREX PRODUCT AND IS, WHERE PERMITTED BY LAW, IN LIEU OF ALL OTHER WARRANTIES, CONDITIONS, GUARANTEES, REPRESENTATIONS, OBLIGATIONS AND LIABILITIES, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE IN CONNECTION WITH THE PRODUCT, HOWEVER ARISING (WHETHER BY CONTRACT, TORT, NEGLIGENCE, PRINCIPLES OF MANUFACTURER'S LIABILITY, OPERATION OF LAW, CONDUCT, STATEMENT OR OTHERWISE), INCLUDING WITHOUT RESTRICTION ANY IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE TO THE EXTENT REQUIRED UNDER APPLICABLE LAW TO APPLY TO THE PRODUCT SHALL BE LIMITED IN DURATION TO THE PERIOD STIPULATED UNDER THIS LIMITED WARRANTY.

IN NO EVENT WILL XANTREX BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSSES, COSTS OR EXPENSES HOWEVER ARISING WHETHER IN CONTRACT OR TORT INCLUDING WITHOUT RESTRICTION ANY ECONOMIC LOSSES OF ANY KIND, ANY LOSS OR DAMAGE TO PROPERTY, ANY PERSONAL INJURY, ANY DAMAGE OR INJURY ARISING FROM OR AS A RESULT OF MISUSE OR ABUSE, OR THE INCORRECT INSTALLATION, INTEGRATION OR OPERATION OF THE PRODUCT.

**Exclusions**   If this product is a consumer product, federal law does not allow an exclusion of implied warranties. To the extent you are entitled to implied warranties under federal law, to the extent permitted by applicable law they are limited to the duration of this Limited Warranty. Some states and provinces do not allow limitations or exclusions on implied warranties or on the duration of an implied warranty or on the limitation or exclusion of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This Limited Warranty gives you specific legal rights. You may have other rights which may vary from state to state or province to province.

**Information** WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, UNLESS SPECIFICALLY AGREED TO BY IT IN WRITING, XANTREX

- a. MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN MANUALS OR OTHER DOCUMENTATION PROVIDED BY IT IN CONNECTION WITH THE PRODUCT; AND
- b. ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION.

THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK.

**WARNING:** Please refer to your product user manual for limitations on uses of the product.  
**Limitations on Use** Specifically, please note that this power supply is not intended for use in connection with life support systems and Xantrex makes no warranty or representation in connection with any use of the product for such purposes.

Xantrex Technology, Inc.  
8999 Nelson Way  
Burnaby, British Columbia  
Canada V5A 4B5

**Information About Your Power Supply** Please record the following information when you first open your Power Supply package:

<b>Model Number</b>	_____
<b>Serial Number</b>	_____
<b>Purchased From</b>	_____
<b>Purchase Date</b>	_____

**Release** Release 1.2 (2003-04)

Copyright © 2002 Xantrex Technology Inc. All rights reserved.  
Printed in Canada

## Warnings and Cautions

Warnings and cautions are defined and formatted in this manual as shown below.



### **WARNING**

Describes a potential hazard which could result in injury or death, or, a procedure which, if not performed correctly, could result in injury or death.

---



### **CAUTION**

Describes a procedure which, if not performed correctly, could result in damage to data, equipment, or systems.

---

## Power Supply Safety



### **WARNING—High Energy and High Voltage**

Exercise caution when using and calibrating a power supply. High energy levels can be stored at the output voltage terminals on a power supply in normal operation. In addition, potentially lethal voltages exist in the power circuit and on the output and sense connectors of a power supply with a rated output greater than 40 V. Filter capacitors store potentially dangerous energy for some time after power is removed.

---



### **CAUTION**

Operate the power supply in an environment free of flammable gases or fumes. To ensure that the power supply's safety features are not compromised, use the power supply as specified in this manual and do not substitute parts or make any unauthorized modifications. Contact the service technician for service and repair help. Repairs must be made by experienced service technicians only.

---



### **CAUTION**

**For Use as a Battery Charger**

When you are using any of these power supplies for battery charging applications, it is essential to provide an appropriately sized fuse or circuit breaker in series between the power supply output and the battery.

Installation of a protector (fuse or DC circuit breaker) rated for about 115% of the maximum current rating of the power supply and designed specifically to interrupt the DC voltage of the battery, will provide adequate reverse polarity current protection. Where several power supplies are in parallel, it is best to fuse each one, rather than one large fuse for all.

---

# About This Manual

This Operating Manual contains operating instructions for the **HPD** Series of high performance, switching, laboratory power supplies, available in several voltage models at 300 watts. It provides information on features and specifications, installation procedures, and basic functions testing, as well as operating procedures for using both standard and multiple supply configurations.

## Who Should Use This Manual

This manual is designed for the user who is familiar with basic electrical theory, especially as applied to the operation of power supplies. This implies a recognition of Constant Voltage and Constant Current operating modes and the control of input and output power, as well as the observance of safe techniques while calibrating, making supply connections, and/or making any changes in configuration.

## Main Sections

**Section 1 Features and Specifications** Describes the power supply, lists its features, and provides tables of specifications.

**Section 2 Installation** Reviews safety and inspection procedures, and provides procedures for basic setup. Also includes directions for testing basic functions.

**Section 3 Load Operation and Sensing** Provides procedures for connecting the load, grounding, and remote sensing.








**Section 4 Operation** Describes standard operation (Constant Voltage and Constant Current), and series, parallel, and split supply operation.

## Manual Revisions

The current release of this manual is listed below. Updates may be issued as an addendum.

Release 1.2 (2003-04)

Power Supply Safety Markings

	Alternating Current		Off (Supply)
	Earth (Ground) Terminal		Caution (Hot Surface)
	Protective Conductor Terminal		Caution (Check manual for additional information.)
	On (Supply)		

# Contents

	About This Manual . . . . .	vii
<b>Section 1.</b>	Introduction . . . . .	11
<b>Features and</b>	Features . . . . .	11
<b>Specifications</b>	Options and Accessories . . . . .	12
	Front Panel Controls . . . . .	12
	Rear Panel Connectors and Outputs . . . . .	13
	Electrical Specifications . . . . .	14
	Additional Electrical Specifications . . . . .	15
	Input Conditions . . . . .	15
	Electrical Characteristics . . . . .	16
	Environmental Specifications . . . . .	16
	Mechanical Specifications . . . . .	17
	Chassis Dimensions and Weight . . . . .	18
	Single Output Unit . . . . .	18
	Dual Output Unit. . . . .	18
<b>Section 2.</b>	Introduction . . . . .	19
<b>Installation</b>	Basic Setup Procedure . . . . .	19
	Initial Inspection . . . . .	19
	Periodic Cleaning . . . . .	19
	Returning Power Supplies to the Manufacturer . . . . .	20
	Return Material Authorization Policy . . . . .	20
	Packaging for Shipping or Storage . . . . .	21
	Rack Mounting . . . . .	22
	Location and Ventilation . . . . .	22
	AC Input Power Connection . . . . .	23
	AC Input Cord . . . . .	23
	Functional Tests . . . . .	24
	Power-on Check. . . . .	24
	Voltage Mode Operation Check . . . . .	24
	Current Mode Operation Check . . . . .	24
<b>Section 3.</b>	Introduction . . . . .	25
<b>Load</b>	Load Connection . . . . .	25
<b>Connection</b>	Load Wiring . . . . .	26
<b>and Sensing</b>	Making Load Connections . . . . .	28
	Connecting Multiple Loads. . . . .	28
	Grounding . . . . .	29
	Local Sensing . . . . .	29
	Output Jumpers for Local Sensing. . . . .	29
	Remote Sensing . . . . .	31

## Contents

<b>Section 4.</b>	Introduction . . . . .	33
<b>Operation</b>	Operating Modes . . . . .	33
	Constant Voltage Mode Operation . . . . .	34
	Constant Current Mode Operation . . . . .	34
	Setting the Current Limit . . . . .	34
	Setting the Supply to Operate in CI Mode. . . . .	34
	Automatic Mode Crossover. . . . .	35
	Constant Power Loads . . . . .	35
	Using Multiple Supplies . . . . .	36
	Connecting Multiple Supplies in Series (Voltage Mode Only). . . . .	36
	Connecting Multiple Supplies in Parallel . . . . .	37
	Split Supply Operation. . . . .	38

# Section 1. Features and Specifications

## Introduction

The **HPD** Series of DC power supplies provides highly stable, variable output voltage and current for a broad range of development and system requirements. These units employ high frequency switching regulator technology to achieve high power density and small package size, as well as a linear post-regulator circuit for low output noise and fast response. A wide variety of options is available, including both analog and IEEE-488 controlled programming, to make this series the first choice in flexible power system design.

**Table 1.1** 300 Watt Series Models

Model	Output Voltage	Output Current
15–20	0–15 V	0–20 A
30–10	0–30 V	0–10 A
60–5	0–60 V	0–5 A

## Features

- High frequency switching technology allows high power density, providing increased power output in a small, light, package.
- The power supply delivers simultaneous digital displays for both voltage and current, and bar graph displays for monitoring transient changes, which gives the user the benefit of continuous, up-to-date information.
- Ten-turn voltage control permits high resolution setting of the output voltage.
- Current limit is fully adjustable from zero to the rated output with a single turn control.
- The automatic crossover system allows the power supply to automatically switch operating modes into current or voltage mode.
- Impedance-switched remote sensing lets operators display the voltage at the load with no switch ambiguity.
- Multiple units can be connected in parallel or series to produce greater diversity.
- Short-circuit-proof power outlets give greater operating safety.
- These power supplies (available in single and dual outputs) can be combined with one or more 60 watt series power supplies to create mixed units that are ideal for high precision applications.

## Section 1. Features and Specifications

### Options and Accessories

### Options and Accessories

- Internal Analog Programming (APG) interface for analog signal control of voltage and current, overvoltage protection (OVP), master/slave output tracking, and remote ON/OFF.
- Internal RS-232 interface for serial instrument programming using RS-232 protocol.
- Internal GPIB interface for complete remote digital programming. IEEE-488 standard.
- Optional 200–250 Vac input (Option AC200). Standard is 115 Vac. Optional AC input cords for use in different countries.
- Ten-turn current potentiometer (Option M11). Rack mount kit (Option RM).
- Locking voltage and/or current adjust knobs (Option M13A).

### Front Panel Controls

Figure 1.1 shows the controls, LEDs, and meters located on the unit's front panel.


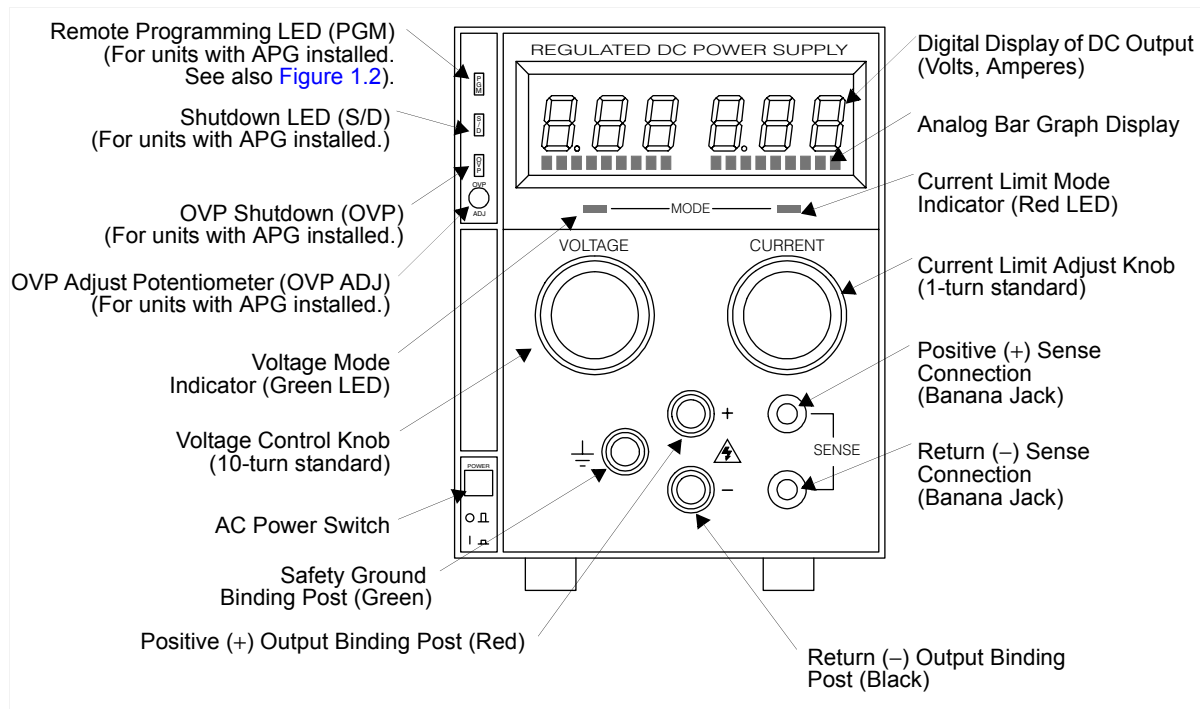


Figure 1.1 Front Panel Controls

## Section 1. Features and Specifications

### Rear Panel Connectors and Outputs


Figure 1.2 shows the programming interface indicators for units that have a digital programming interface installed.

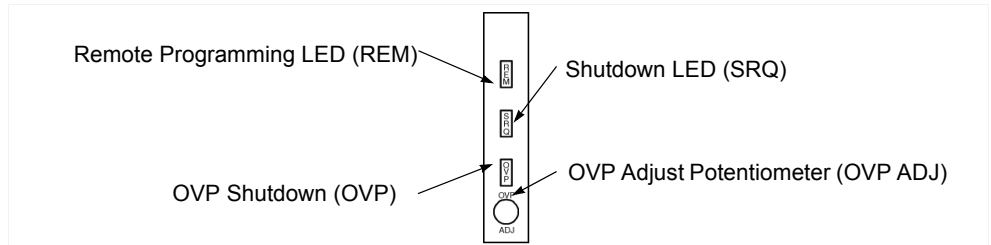

**Figure 1.2** Remote Programming Interface Indicators

## Rear Panel Connectors and Outputs

Figure 1.3 shows the connectors and outputs available at the rear panel. (Figure 1.3 shows the 15 V or 30 V low voltage model.)

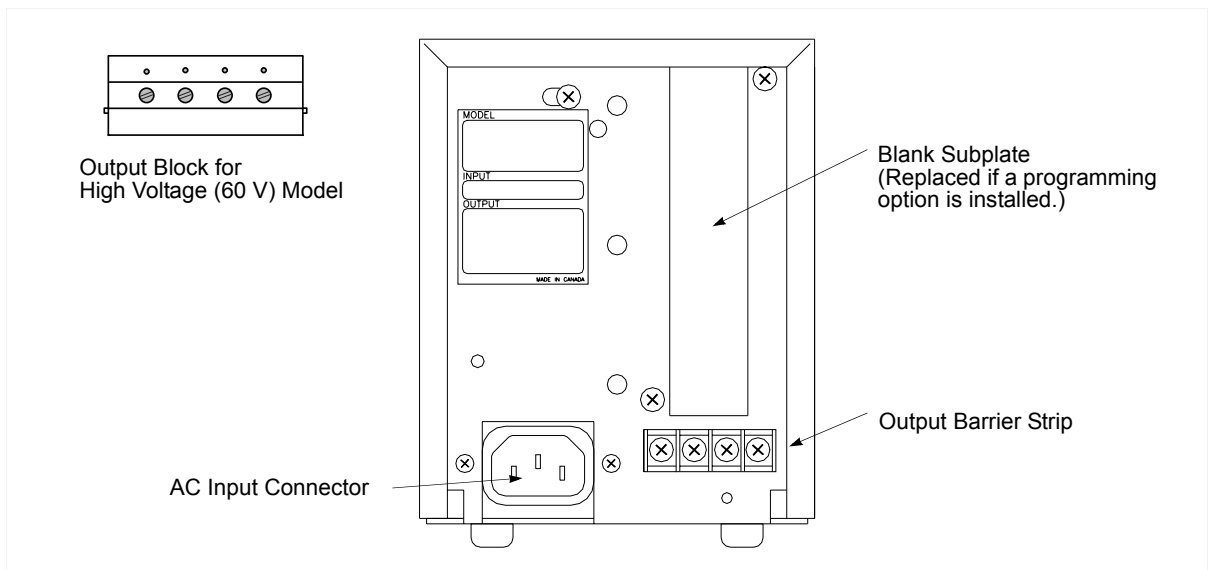

**Figure 1.3** Rear Panel

### Note

The power supply is shipped with jumpers for local sensing of the output voltage. See “Local Sensing” on page 29.

## Section 1. Features and Specifications

### Electrical Specifications

## Electrical Specifications

Specifications are warranted over a temperature range of 0 to 30 °C with default local sensing. Above 30 °C, the output voltage needs to be derated linearly to zero at 70 °C. Specifications are subject to change without notice.

**Table 1.2** Electrical Specifications for 15 V to 60 V Models

Models	15–20	30–10	60–5
Output Ratings:			
Output Voltage	0–15 V	0–30 V	0–60 V
Output Current	0–20 A	0–10 A	0–5 A
Output Power	300 W	300 W	300 W
Line Regulation: <sup>1</sup>			
Voltage (0.01% of Vmax + 2 mV)	3.5 mV	5 mV	8 mV
Current (0.01% of Imax + 1 mA)	4 mA	3 mA	2.5 mA
Load Regulation: <sup>2</sup>			
Voltage (0.01% of Vmax + 2 mV)	3.5 mV	5 mV	8 mV
Current (0.01% of Imax + 1 mA)	4 mA	3 mA	2.5 mA
Meter Accuracy:			
Voltage (1% of Vmax + 1 count)	250 mV	400 mV	700 mV
Current (1% of Imax + 1 count)	300 mA	200 mA	60 mA
Output Noise and Ripple (20 Hz–20 MHz):			
Voltage (p-p)	100 mV	100 mV	100 mV
Voltage (rms)	5 mV	5 mV	5 mV
Current (rms) <sup>3</sup>	20 mA	10 mA	5 mA
Drift (60 minutes): <sup>4</sup>			
Voltage (0.02% of Vmax)	3 mV	6 mV	12 mV
Current (0.03% of Imax)	6 mA	3 mA	1.5 mA
Drift (8 hours): <sup>5</sup>			
Voltage (0.02% of Vmax)	3 mV	6 mV	12 mV
Current (0.08% of Imax)	16 mA	8 mA	4 mA
Temperature Coefficient <sup>6</sup>			
Voltage (0.015% of Vmax/°C)	2.25 mV	4.5 mV	9 mV
Current (0.02% of Imax/°C)	4 mA	2 mA	1 mA

1. For input voltage variation over the AC input voltage range, with constant rated load.

2. For 0 to 100% load variation, with constant nominal line voltage.

3. Current mode noise is measured from 10% to 100% of rated output voltage, full current.

4. Maximum drift over 60 minutes with constant line, load, and temperature, after 60-minute warm-up.

5. Maximum drift over 8 hours with constant line, load, and temperature, after 60-minute warm-up.

6. Change in output per °C change in ambient temperature, with constant line and load.

## Additional Electrical Specifications

Voltage Mode Transient Response (Time for the output voltage to recover to $\pm 50$ mV band for 50% load change in the range of 25% to 100% of the rated load.)	<500 $\mu$ s
Time delay from power on until output stable	1.5 s maximum

## Input Conditions

Rated AC Input Voltage	120 Vac standard; 230/240 Vac AC200 option
Maximum AC Input Power	625 VA
Operational AC Input Voltage Range	Single Unit: 104–127 Vac at 6 Arms Dual Unit: 104–127 Vac at 12 Arms
AC 200 Option	Single Unit: 200–250 Vac at 3 Arms Dual Unit: 200–250 Vac at 6 Arms
Maximum Input Current (per unit) at 6 A maximum at 104 Vac nominal power line impedances	
Input Frequency Range	47–63 Hz

## Section 1. Features and Specifications

### Electrical Characteristics

#### Electrical Characteristics

Switching Frequency	100 kHz (nominal)
Output Hold-up Time	≥25 ms at nominal line
Maximum Voltage Differential from output to safety ground	±400 Vdc
Insulation Resistance	Input to chassis: >120 MΩ Output to chassis: >120 MΩ
Isolation Voltage (Output not to exceed ±400 Vdc from chassis potential.)	Input to output: 1350 Vac
Maximum Remote Sense Line Drop Compensation. (Line drop must be deducted from the supply's maximum output voltage.)	0.5 V/line

#### Environmental Specifications

Operating Ambient Temperature	0 to 30 °C with default local sensing. Above 30 °C, derate output linearly to 0 at 70 °C.
Storage Temperature Range	–55° to 85 °C
Humidity Range	0 to 80% RH non-condensing
Operating Altitude	Up to 6,500 feet (2000 m)
Storage Altitude	Up to 50,000 feet (15 000 m)
Installation Category	Intended for use in installation category (overvoltage category) II (IEC 1010-1 standard)
Pollution Degree	Category 2 (IEC 1010-1 standard)

## Mechanical Specifications

Front Panel Voltage and Current Control	10-turn voltage and 1-turn current potentiometers (10-turn current control optional)
Front Panel Voltage Control Resolution	0.02% of maximum voltage
Front Panel AC Input Power Switch	Push ON/push OFF switch
Front Panel Voltage and Current Meters	Independent 3-digit green numeric LED display and analog bar graph displays for current and voltage. For meter accuracy, see <a href="#">Table 1.2</a> .
AC Input Connector Type	IEC 320 Connector, appropriate power cord for destination country.
Front Panel Output Connector	Three binding posts: positive (+), negative (–), and ground.
Rear Panel Output and Sense Connector	Four terminal barrier strips. The 60 V unit is shipped with a 4-terminal output block.
Chassis Ground	Front panel binding post and power cord safety ground.
Cooling	Convection cooled. Air enters the unit from the bottom and lower sides and exits from the upper sides and top.
Mounting	Optional rack for mounting several units in a standard rack. Can be combined with 60 watt series units. See <a href="#">“Rack Mounting” on page 22</a> .
Approvals	CSA certified to UL 1012, and CSA C22.2 No. 107.1 FCC Part 15B and Industry Canada Class A CE Marked for Low Voltage Directive and EMC Directive (Class A emissions)

## Section 1. Features and Specifications

### Chassis Dimensions and Weight

## Chassis Dimensions and Weight

### Single Output Unit

Height	5.25 in. 132 mm
Width	4.25 in. 109 mm
Depth	11.7 in. 297 mm
Weight	7.7 lb. 3.5 kg

### Dual Output Unit

Height	5.25 in. 132 mm
Width	8.5 in. 216 mm
Depth	11.7 in. 297 mm
Weight	14.2 lb. 6.5 kg

# Section 2. Installation

## Introduction

This section provides recommendations and procedures for inspecting, installing, and testing the power supply.

## Basic Setup Procedure

**Table 2.1** Basic Setup Procedure

Step#	Description	Action	Reference
1	Inspection	Perform an initial physical inspection of the supply.	<a href="#">“Initial Inspection” on page 19</a>
2	Installation	Install the supply and ensure adequate ventilation.	<a href="#">“Location and Ventilation” on page 22</a>
3	Test	Perform functional tests for voltage mode operation, current mode operation, and front panel controls.	<a href="#">“Functional Tests” on page 24</a>

## Initial Inspection

Verify that the power supply was shipped with an IEC power cord set appropriate to the destination country, two 2-position terminal block jumpers, and an operating manual. When you first receive your unit, perform a quick physical check.

1. Inspect the unit for scratches and cracks, broken switches, connectors, terminals, and missing accessories.
2. Have a service technician check the unit if you suspect internal damage.

If the unit is damaged, save all packing materials and notify the carrier immediately. See instructions in [“Packaging for Shipping or Storage” on page 21](#).

### **Periodic Cleaning**

No routine servicing of the power supply is required except for periodic cleaning. Whenever a unit is removed from operation, clean the outside surfaces with a weak solution of soap and water. If required, use low-pressure compressed air to blow dust from in and around components on the printed circuit boards.

## Section 2. Installation

### Returning Power Supplies to the Manufacturer

## Returning Power Supplies to the Manufacturer

### **Return Material Authorization Policy**

Before returning a product directly to Xantrex you must obtain a Return Material Authorization (RMA) number and the correct factory “Ship To” address. Products must also be shipped prepaid. Product shipments will be refused and returned at your expense if they are unauthorized, returned without an RMA number clearly marked on the outside of the shipping box, if they are shipped collect, or if they are shipped to the wrong location.

When you contact Xantrex to obtain service, please have your operating manual ready for reference and be prepared to supply:

- The serial number of your product
- Information about the installation and use of the unit
- Information about the failure and/or reason for the return
- A copy of your dated proof of purchase

When you ship:

1. Package the unit safely following the procedures on [page 21](#), preferably using the original box and packing materials. Please ensure that your product is shipped fully insured in the original packaging or equivalent. This warranty will not apply where the product is damaged due to improper packaging.
2. Include the following:
  - The RMA number supplied by Xantrex Technology Inc clearly marked on the outside of the box.
  - A return address where the unit can be shipped. Post office boxes are not acceptable.
  - A contact telephone number where you can be reached during work hours
  - A brief description of the problem

Ship the unit prepaid to the address provided by your Xantrex customer service representative.

### **If you are returning a product from outside of the USA or Canada:**

In addition to the above, you **MUST** include return freight funds and are fully responsible for all documents, duties, tariffs, and deposits.

### **If you are returning a product to a Xantrex Authorized Service Center (ASC):**

A Xantrex return material authorization (RMA) number is not required. However, you must contact the ASC prior to returning the product or presenting the unit to verify any return procedures that may apply to that particular facility.

#### Packaging for Shipping or Storage

Follow these instructions to prepare the unit for shipping or storage.

1. When returning the unit or sending it to the service center, attach a tag to the unit stating its model number (available from the front panel label) and its serial number (available from the rear panel label). Give the date of purchase and an invoice number, if you have it, as well as a brief description of the problem.
2. For storage or shipping, repack the power supply in its original container. If the original container is not available, seal the unit in a plastic bag and then pack it in a 200 lb. (90 kg) test, corrugated cardboard carton large enough to allow 2 inches (5 cm) of cushioning material to surround the unit. Use a material such as foam slabs or chips.
3. Label the carton as shown in [Figure 2.1](#).
4. If shipping, mark the address of the service center and your return address on the carton.
5. If storing, stack no more than eight cartons high. Check the storage temperature range and storage altitude specification in [“Environmental Specifications” on page 16](#).

<p>POWER SUPPLY</p> <p style="text-align: right;">Model Number: _____</p> <p style="text-align: right;">Serial Number: _____</p> <p>FRAGILE — ELECTRONIC EQUIPMENT</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**Figure 2.1** Shipping or Storage Carton Label

## Section 2. Installation

### Rack Mounting

#### Rack Mounting

Use the power supply in benchtop or in rack-mounted applications.



#### **WARNING**

Ensure that any mounting screws do not protrude more than 1/8 in. (3.0 mm) into the bottom of the unit.

---

The power supply is designed to fill one quarter of a standard 19 in. (483 mm) equipment rack.

Dual and quad configurations can be combined with 60 watt series models for custom applications. Contact the manufacturer about the rack mount kit (Option RM).

#### Location and Ventilation

Whether you place the power supply in a rack or on a bench, allow cooling air to reach the ventilation inlets on the bottom and sides of the unit. Ensure that rack-mounted supplies have 1 U (1.75 in./44.5 mm) above and below units. Any ventilation space around the supply will further lower internal operating temperatures.

See “[Environmental Specifications](#)” on page 16, for the operating altitude specification and the operating ambient temperature range measured at the unit case.

## AC Input Power Connection



**WARNING**

There is a potential shock hazard if the power supply chassis and cover are not connected to an electrical ground via the safety ground in the AC input connector. Ensure that the power supply is connected to a grounded AC outlet with the recommended AC input connector configured for the available line voltage as described in this section.



**CAUTION**

When the power switch is turned on, the output voltage or current previously set is applied to loads.

The AC input connector is a standard IEC 320 male connector located on the power supply's rear panel.

**Table 2.2** Operational AC Input Voltage Ranges and Frequency

AC Voltage Range	Frequency
104–127 Vac 1 $\phi$ (standard)	47–63 Hz
200–250 Vac 1 $\phi$ (AC200 option)	47–63 Hz

## AC Input Cord



**WARNING**

The AC input cord is the disconnect device for the power supply. The plug must be readily identifiable by and accessible to the operator. The input cord must be no longer than 9.85 feet (3 m).

The AC input cord that we provide is appropriate to the destination country. If you require a special cord, call us.

## Section 2. Installation

### Functional Tests

## Functional Tests

These functional test procedures include power-on and front panel function checks as well as voltage and current mode operation checks.

### Power-on Check

1. Ensure that the front panel power switch is in the extended (OFF) position and the voltage and current controls are in their fully counter-clockwise positions.
2. Ensure that the AC line voltage is within operating range.
3. Plug the line cord into a grounded AC outlet.
4. Push the power switch to turn on the power supply.

After a short power-on delay, the display and the red current mode LED lights. The meter reading remains at zero.

For more about standard operations, see [Section 4, “Operation”](#).

### Voltage Mode Operation Check

1. Ensure that the front panel voltage and current control are turned fully counter-clockwise.
2. Set the power switch to ON.
3. Rotate the current control one half-turn clockwise. Slowly rotate the voltage control clockwise and observe the digital meter. Minimum control range should be from zero to maximum rated output. Observe the bar graph meter to see that it tracks as the voltage rises. Verify that the voltage mode indicator light is ON.
4. Set the power switch to OFF.

### Current Mode Operation Check

1. Ensure that the front panel power switch is set to OFF.
2. Rotate the voltage and current controls fully counter-clockwise.
3. Rotate the voltage control one half-turn clockwise.
4. Connect a short circuit across the output terminals. Use leads of sufficient current carrying capacity.
5. Set the power switch to ON.
6. Rotate the current control slowly clockwise. The control range should be from zero to the maximum rated output. Also check that the current bar graph meter follows the rise in current and that the current mode indicator light is ON.
7. Set the power switch to OFF.

# Section 3. Load Connection and Sensing

## Introduction

This section covers single and multiple load connection, constant voltage and constant current operating modes, and alternate power supply configurations such as series and parallel connections.

## Load Connection



### WARNING

There is a potential shock hazard at the load when using a power supply with an output greater than 40 V. Take appropriate precautions to protect personnel against accidental contact with hazardous voltages. Also ensure that the insulation rating of the load wiring and circuitry is greater than or equal to the maximum voltages to ground being applied.

---



### CAUTION

When making load connections, be sure to observe correct polarity or the power supply may be damaged.

---

You can obtain reliable performance from your power supply if you take certain basic precautions when making load connections.

To obtain a stable, low noise output, pay attention to the following:

1. consider the conductor ratings, the system grounding techniques and the way that you make AC input, DC output, and remote sensing connections
2. use a conductor size that satisfies the current rating requirements
3. to overcome impedance and coupling effects, we recommend larger gauge wire and shorter leads.
4. where positive load transients such as back EMF (electromotive force) from a motor may occur, connect a transorb or a varistor across the output to protect the power supply.

### Section 3. Load Connection and Sensing

#### Load Connection

**Load Wiring** To select wiring for connecting the load to the power supply, consider the following factors:

- Insulation rating of the wire
- Current carrying capacity of the wire
- Maximum load wiring length for operation with sense lines
- Noise and impedance effects of the load lines


**Insulation Rating** Use load wiring with a minimum insulation rating at least equivalent to the maximum output voltage of the power supply. If the output is offset from ground, the insulation must be rated at least for the sum of the supply's maximum output and the offset.

**Current Carrying Capacity** As a minimum, load wiring must have a current capacity greater than the output current rating of the power supply. This ensures that the wiring will not be damaged even if the load is shorted. See [Table 3.1](#) for the maximum current rating, based on  $450 \text{ A/cm}^2$ , for various gauges of wire rated for  $105^\circ\text{C}$  operation. Operating at the maximum current rating results in a temperature rise of approximately  $30^\circ\text{C}$  for a wire operating in free air. Where load wiring must operate in areas with elevated ambient temperatures or is bundled with other wiring, use larger gauges or wiring rated for higher temperatures.

**Table 3.1** Current Carrying Capacity for Load Wiring

Wire Size (AWG)	Maximum Current (A)	Wire Size (AWG)	Maximum Current (A)
20	2.5	6	61
18	4	4	97
16	6	2	155
14	10	1	192
12	16	1/0	247
10	21	2/0	303
8	36		

**Load Wiring Length for Operation With Sense Lines** For applications using remote sensing, you must limit the voltage drop across each load line. See [Figure 3.1](#) for some maximum allowable lengths for a given load current and wire size. We recommend that you use the larger load wiring to ensure a smaller voltage drop (0.1 V typical maximum), although units can compensate for up to 0.5 V drop in each line<sup>1</sup>.)

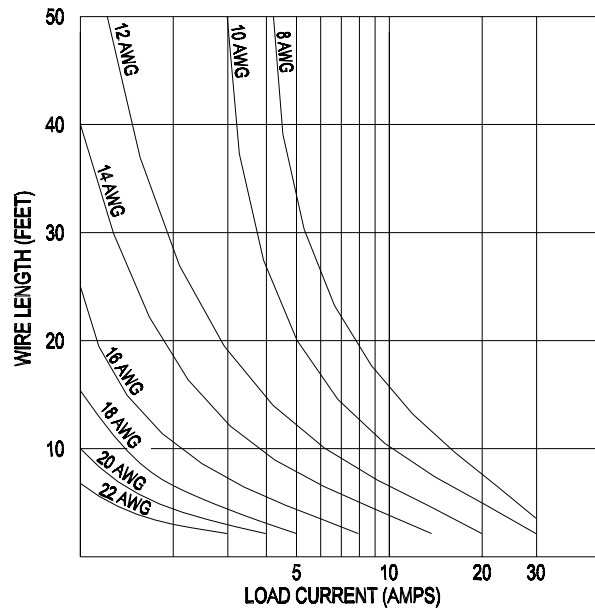

**Figure 3.1** Maximum Wire Length for 100 mV Line Drop

**Noise and Impedance Effects** To minimize noise pickup or radiation, use shielded pair wiring of the shortest possible length for load wires. Connect the shield to the chassis via the front panel binding post or a rear panel mounting screw. Where shielding is impossible or impractical, simply twisting the wires together will offer some noise immunity.

1. Any losses in the load cables must be deducted from the maximum output voltage of the supply. For example, a 15 V supply with a 1 V loss in the load cables can supply a maximum of 14 V regulated at the load.

## Section 3. Load Connection and Sensing

### Load Connection

#### Making Load Connections      Connections at the Front Panel Binding Posts

To make connections at the front panel, connect load wires using stripped wire (0.6 in./15 mm), spade lugs, or banana plugs to the output binding posts.

For binding posts locations, see [Figure 1.1, “Front Panel Controls”](#).

#### Connections at the Rear Panel Terminals

**Low Voltage Models** To make load connections to low voltage models, attach an appropriate gauge wire<sup>1</sup> following the steps below:

1. Strip load wires 0.75 in. (19 mm). An alternative is to attach tongue lugs (#6 stud) to the load wires, following the manufacturer’s instructions.
2. Using a flat-bladed or #2 Phillips screwdriver, loosen the positive (+) and negative (–) output terminal screws on the output barrier strip. See [Figure 3.2, “Output Barrier Strip With Jumpers Installed”](#).
3. Wrap stripped wire around the appropriate terminal screw. Tighten the screw.

**High Voltage Models** To make load connections to high voltage models, attach an appropriate gauge wire<sup>1</sup> (maximum #12 wire) following the steps below:

1. Strip load wires 0.6 in. (15 mm).
2. Using a 1/8 in. (4 mm) flat-bladed screwdriver, loosen the terminal screws on the output terminal block. Insert wires into the output terminals (–, +) from the bottom of the block. See [Figure 3.3, “Output Terminal Block With Jumpers Installed”](#).
3. Tighten the terminal screws.

#### Connecting Multiple Loads

Proper connection of distributed loads is an important aspect of power supply use. A common mistake is to connect leads from the power supply to one load and then from that load to other loads. In this parallel power distribution method, the voltage at each load depends on the current drawn by the other loads, and DC ground loops develop. Except for low current applications, we recommend that you do not use this method.

---

1. See [Table 3.1, “Current Carrying Capacity for Load Wiring,”](#) on page 26 for the correct wire gauge.

## Grounding

Make proper ground connections to avoid developing paths between separate ground points. To avoid ground loops, there must be only one ground return point in a power system. If the load itself is not grounded, ground the positive or negative output to the supply's chassis using a rear panel screw or the front panel ground binding post.

## Local Sensing

Output voltage can be sensed from both the rear panel and the front panel output connectors. Default local sensing regulates the voltage at the power supply output terminal. Use remote sensing (see [“Remote Sensing” on page 31](#)) when the voltage needs to be regulated at the load rather than at the power supply output terminals.

Without sense line connections, the supply regulates the voltage at the output terminals of the power supply. For improved local sensing, connect jumpers between the sense terminals and the output terminals. See [Figure 3.2](#) and [Figure 3.3](#).

See [Figure 1.1, “Front Panel Controls”](#), and [Figure 1.3, “Rear Panel”](#), for sense terminal locations on the front and rear panels.

### Output Jumpers for Local Sensing

**WARNING**

Disconnect the AC input before installing or removing jumpers.


---

**Low Voltage Models** Two barrier strip jumpers are shipped unattached with 15 V and 30 V models. If your application requires precisely regulated output voltage at the rear output terminals, install the jumpers as noted below.

1. Use a flat-bladed or #2 Phillips screwdriver to loosen the four terminal screws at the output barrier strip.
2. Slide the jumpers under the screws.
3. Tighten the screws to the barrier strip. See [Figure 3.2](#).


### Section 3. Load Connection and Sensing

#### Local Sensing

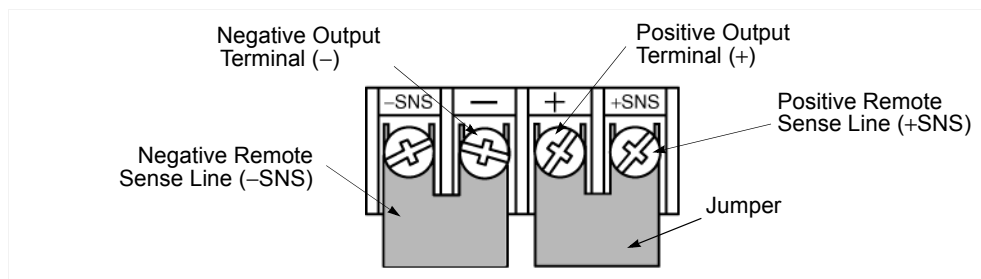

**Figure 3.2** Output Barrier Strip With Jumpers Installed

**High Voltage Models** Two wire jumpers are shipped unattached with 60 V models. If your application requires precisely regulated output voltage at the rear output terminals, install the jumpers by inserting the jumper wires into the jumper terminals as shown. See [Figure 3.3](#).

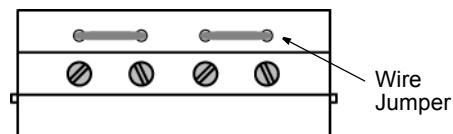

**Figure 3.3** Output Terminal Block With Jumpers Installed

## Remote Sensing

**WARNING**

There is a potential shock hazard at the sense points when using a power supply with a rated output greater than 40 V. Ensure that connections at the load end are shielded to prevent contact with hazardous voltages.

**CAUTION**

Operation of the supply in remote sense mode without the assured connection of the load wires and remote sense wires to the load may damage the power supply.

**CAUTION**

Ground the sense line shield in one place only. Locations include the power supply's return output connection at the load, the power supply's return output at the negative output terminal, or the power supply's ground binding post on the front panel.

Remote sensing permits you to relocate the regulation point of the power supply from the output terminals to the load or other distribution point terminals.

The power supply provides sense connections beside the output terminals at the front and rear panels. Use 22-24 AWG twisted, shielded pair wiring to make sense connections.

With the remote sense leads in place, the supply regulates for the displayed voltage at the point where the sense lines are connected to the output leads (provided the sum of these lead losses does not exceed 0.5 V). With the sense lines disconnected, the supply regulates the voltage at the output terminals. Remote sensing is not required for constant current mode of operation, where the supply is regulating the output current.

**Note**

Do not operate the supply with sense lines connected to the load without also connecting the normal load power leads to the output terminals.

Always use shielded pair wiring for sense lines to minimize noise effects. (See [“Grounding” on page 29.](#))

**CAUTION**

Do not reverse positive (+) and negative (–) lead connections.

### **Section 3. Load Connection and Sensing**

#### Remote Sensing

# Section 4. Operation

## Introduction

Once you have installed the power supply and have connected both the AC input power and the load as covered in [Section 2, “Installation”](#), the power supply is ready to operate.


- [“Operating Modes”](#), below, offers a brief explanation of Constant Voltage and Constant Current Mode operation.
- [“Connecting Multiple Supplies in Series \(Voltage Mode Only\)”](#) on page 36, covers using multiple supplies.

## Operating Modes

Your power supply has two basic operating modes: Constant Voltage Mode and Constant Current Mode. The mode in which the power supply operates at any given time depends on the combination of:

- Output voltage setting  $V_{SET}$
- Output current limit setting  $I_{SET}$
- Resistance or impedance of the attached load  $R_L$

[Figure 4.1](#) represents the relationships between these variables.

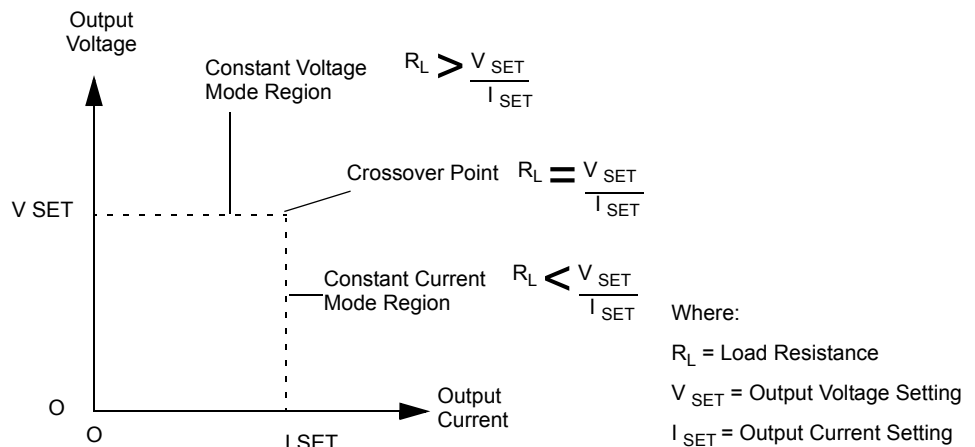

**Figure 4.1** Relationship Between Operating Mode Variables

### Note

The control circuits have been designed to allow you to set output voltage and current up to 5% over the model-rated maximum values. The power supply will operate within these extended ranges, but we cannot guarantee full performance to specification.

## Section 4. Operation

### Operating Modes

#### **Constant Voltage Mode Operation**

The power supply will operate in constant voltage (CV) mode whenever the load current  $I_L$  is less than the current limit setting  $I_{SET}$  or:  $I_L < I_{SET}$  (Note:  $I_L = V_{SET} / R_L$ ). In CV, the power supply maintains the output voltage at the selected value ( $V_{SET}$ ) while the load current  $I_L$  varies with the load requirements.

To use the power supply in CV mode, either set the current limit to maximum by turning the current control to its extreme clockwise position, or take the precaution of setting a desired maximum current, and then set the voltage control to the desired voltage.

#### **Constant Current Mode Operation**

The power supply will operate in constant current (CI) mode whenever the load resistance is low enough that at  $V_{SET}$  the load current would be greater than the current limit setting  $I_{SET}$ .

$$\frac{V_{SET}}{R_L} > I_{SET}$$

In CI mode, the power supply maintains the output current at the selected value ( $I_{SET}$ ) while the output voltage varies with the load requirements.

#### **Setting the Current Limit**

Set the Current Limit by following the steps below:

1. Connect a shorting lead across the output terminals.
2. Turn the voltage control a half-turn clockwise.
3. Set the desired maximum current limit by turning the current control slowly clockwise to the desired level.
4. Disconnect the shorting lead from the output terminals. The power supply will now automatically switch into current limiting mode (current regulation) as soon as the preset current level is reached.

#### **Setting the Supply to Operate in CI Mode**

To operate the supply in CI mode:

1. Set the current limit as described above.
2. Set the voltage control fully clockwise or to the compliance voltage of the circuit.

As soon as the supply starts operating in current mode, the red current mode LED will turn on.

- Automatic Mode Crossover** The automatic crossover system allows the power supply to automatically switch operating modes in response to changing load requirements. For example, if the load current attempts to increase above the setting of the current adjust control, the unit switches automatically from CV to CI mode. If you lower the load requirements, the supply automatically returns to CV mode.
- Constant Power Loads** When powering constant power loads such as switch mode regulators, it is preferable to run in constant voltage mode, with the current limit set to supply ample current. Operating near the CV/CI transition point can cause operation to become unstable.

## Using Multiple Supplies

### Connecting Multiple Supplies in Series (Voltage Mode Only)

You can operate two or more power supplies with outputs connected in series or in parallel to obtain increased load voltage or current. A split supply configuration allows you to obtain two positive outputs or a positive and a negative output.




#### CAUTION

The maximum allowable voltage in series operation is 400 Vdc.

As described below, you can connect power supplies in series to obtain a single output supply with higher output voltage. Connect the negative (–) terminal of one supply to the positive (+) terminal of the next supply.

The total voltage available is the sum of the maximum voltages of each supply (add voltmeter readings). The maximum current available to the load is equal to the current of the lowest rated supply in the series. See [Figure 4.2](#) for a representation of series operation.

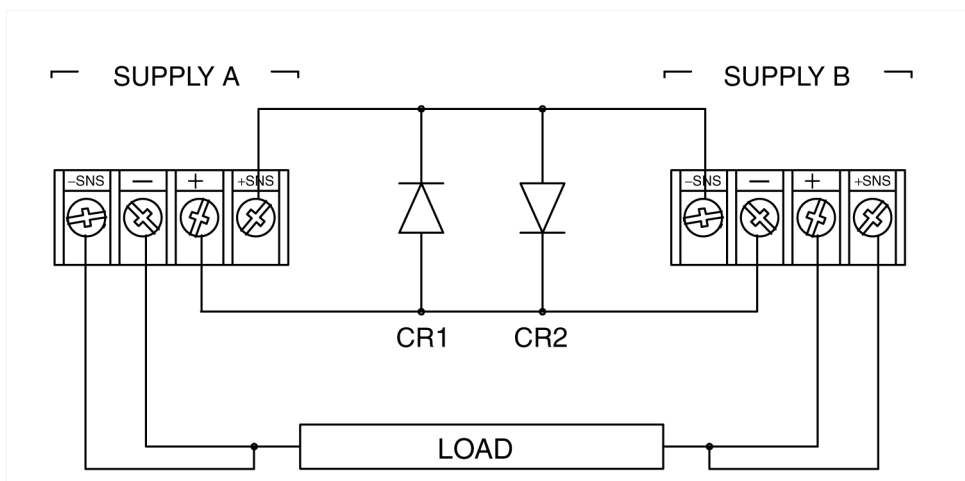

**Figure 4.2** Series Operation With and Without OVP

#### Note

You do not need to use remote sensing for series operation. If you choose to use it, refer to [“Remote Sensing” on page 31](#) and connect as shown in [Figure 4.2](#). Diodes CR1 and CR2 protect sense circuits during transient events such as momentary current limit events which may cause supply outputs to collapse. Use general purpose 1A rectifiers, such as IN1004 or equivalent.

## Connecting Multiple Supplies in Parallel



### CAUTION

For parallel operation with OVP-equipped supplies, set all OVP trip points higher than the maximum output voltage. To prevent the internal OVP fuse from blowing during OVP trip events, add external blocking diodes as illustrated in [Figure 4.3](#). Use diodes rated to handle the maximum current for the supply.




### CAUTION

The configuration shown in [Figure 4.3](#) is for use with local sense only. Do not attempt to use remote sensing with the diodes as shown. Damage to the sense circuits may occur.

As described below, you can connect power supplies in parallel to obtain a single output supply with a higher output current limit. Set all the outputs to the same voltage before connecting the positive (+) and negative (–) terminals in parallel.

The total current available is the sum of the maximum currents of each supply. The maximum voltage available at the load is equal to the voltage of the lowest rated supply. When you connect two supplies in parallel, the supply with the higher voltage setting is in the current limiting mode, while the other supply controls the output voltage.

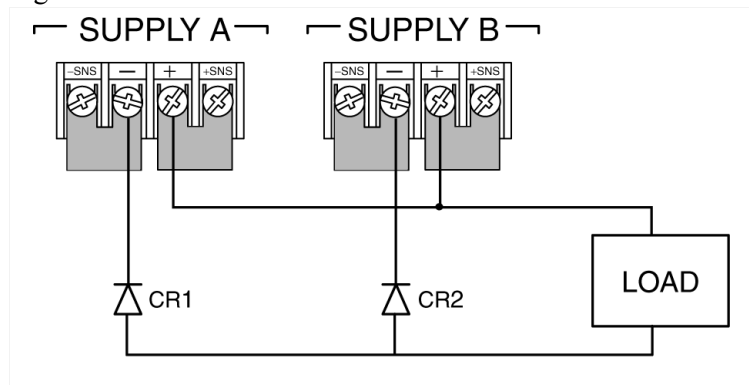

**Figure 4.3** Parallel Operation With OVP-Equipped Units (local sensing only)


## Section 4. Operation

### Using Multiple Supplies

#### Split Supply Operation


Split supply operation uses two power supplies to obtain two positive voltages with a common ground, or to obtain a positive-negative supply.

**Two Positive Voltages** To obtain two positive voltages, join the negative output terminals of both supplies in a common connection as shown in [Figure 4.4](#). The positive output terminals provide the required voltages with respect to the common connection.

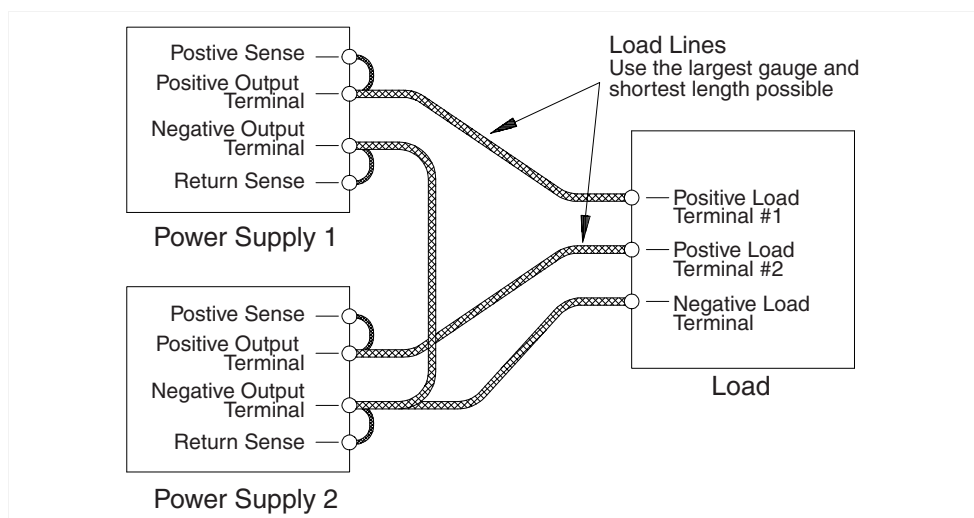

**Figure 4.4** Split Supply Operation of Multiple Supplies (two positive voltages)

**Positive-Negative Supply** To obtain a positive-negative supply, connect the negative output terminal of one supply to the positive terminal of the second supply as shown in [Figure 4.5](#). The positive output terminal of the first supply now provides a positive voltage relative to the common connection. The negative output terminal of the second supply provides the negative voltage. The current limits can be set independently of each other. The maximum current available in split operation is equal to the rated output of the supplies.

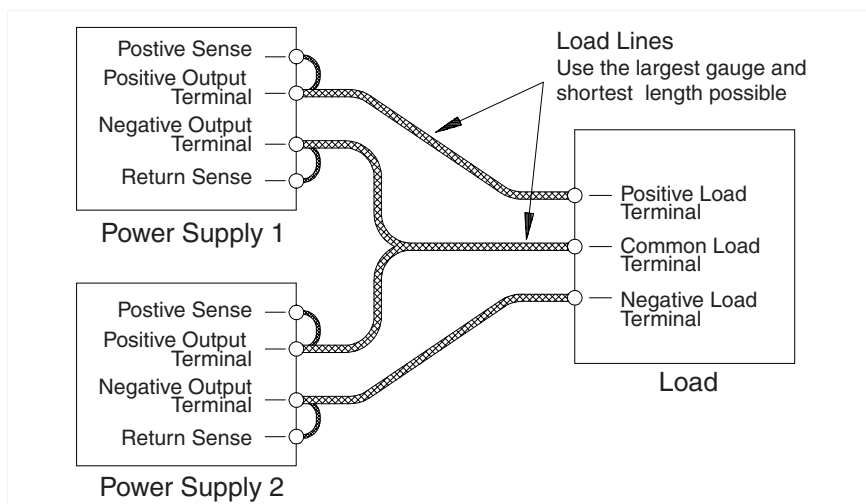

**Figure 4.5** Split Supply Operation of Multiple Supplies (positive-negative supply)

**Note**

The optional Analog Programming (APG) Interface has a Master/Slave Tracking feature which will allow one-knob control of both supplies in a split supply configuration.

## **Section 4. Operation**

### Using Multiple Supplies



**Xantrex Technology Inc.**

8999 Nelson Way  
Burnaby, British Columbia  
Canada V5A 4B5

604 422 8595 Tel  
604 421 3056 Fax  
800 667 8422 Toll Free North America  
[prg.info@xantrex.com](mailto:prg.info@xantrex.com)  
[www.xantrex.com](http://www.xantrex.com)