

TM 5-3805-261-23-1

TECHNICAL MANUAL

Unit and Direct Support Maintenance

FOR


**GRADER, ROAD, MOTORIZED, DIESEL ENGINE DRIVEN (DED), HEAVY,
COMMERCIAL CONSTRUCTION EQUIPMENT (CCE)
(NSN 3805-01-150-4795) CATERPILLAR MODEL 130G (EIC: EHF)**

TYPE I, NONSECTIONALIZED

**(NSN 3805-01-126-7894) CATERPILLAR MODEL 130GNS (EIC: EHN)
(NSN 3805-01-252-0128) CATERPILLAR MODEL 130GNSCE (EIC: EJJ)**

TYPE II, SECTIONALIZED

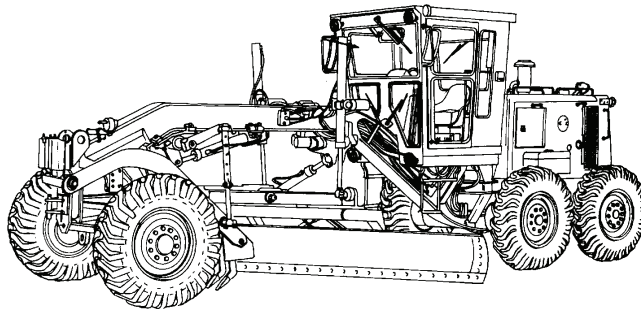**(NSN 3805-01-126-7895) CATERPILLAR MODEL 130GS (EIC: EHP)
(NSN 3805-01-251-8252) CATERPILLAR MODEL 130GSCE (EIC: EJH)**



SUPERSEDURE NOTICE - This manual supersedes TM 5-3805-261-20, dated 30 April 1992; TM 5-3805-261-34, dated 25 April 1989, including all changes.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

APRIL 2006

WARNING SUMMARY

This warning summary contains general safety warnings and hazardous materials warnings that must be understood and applied during operation and maintenance of this equipment. Failure to observe these precautions could result in serious injury or death to personnel. Also included are explanations of safety and hazardous materials icons used within the technical manual.



BIOLOGICAL - abstract symbol bug shows that a material may contain bacteria or viruses that present a danger to life or health.



CHEMICAL - drops of liquid on hand shows that the material will cause burns or irritation to human skin or tissue.



EAR PROTECTION - Headphones over ears show that noise level will harm ears.



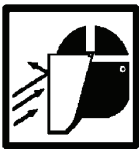
ELECTRICAL - electrical wire to arm with electricity symbol running through human body shows that shock hazard is present.



EYE PROTECTION - person with goggles shows that the material will injure the eyes.



FIRE - flame shows that a material may ignite and cause burns.



FLYING PARTICLES - arrows bouncing off face with face shield shows that particles flying through the air will harm face.



HEAVY PARTS - hand with heavy object on top shows that heavy parts can crush and harm.



HEAVY OBJECT - human figure stooping over heavy object shows physical injury potential from improper lifting technique.



HEAVY PARTS - heavy object on human figure shows that heavy parts present a danger to life or limb.



HOT AREA - hand over object radiating heat shows that part is hot and can burn.



HYDRAULIC FLUID PRESSURE - hydraulic fluid spraying human figure shows that fluid escaping under great pressure can cause injury or death to personnel.



POISON - skull and crossbones shows material is poisonous or is a danger to life.



RADIOACTIVE - identifies a material that emits radioactive energy and can injure human tissue or organs.



SLICK FLOOR - wavy line on floor with legs prone shows that slick floor presents a danger from falling.



VAPOR - human figure in a cloud shows that material vapors present a danger to life or health.

FOR INFORMATION ON FIRST AID, REFER TO FM 4-25.11.



WARNING

CARBON MONOXIDE (EXHAUST GASES) CAN KILL!

- Carbon monoxide is a colorless, odorless, deadly poison which, when breathed, deprives the body of oxygen and causes suffocation. Exposure to air containing carbon monoxide produces symptoms of headache, dizziness, loss of muscular control, apparent drowsiness, and coma. Permanent brain damage or death can result from severe exposure.
 - Carbon monoxide occurs in exhaust fumes of internal combustion engines. Carbon monoxide can become dangerously concentrated under conditions of inadequate ventilation. The following precautions must be observed to ensure safety of personnel when engine is operated.
1. DO NOT operate engine in enclosed areas.
 2. DO NOT idle engine without adequate ventilation.
 3. DO NOT drive machine with inspection plates or cover plates removed.
 4. BE ALERT for exhaust poisoning symptoms. They are:
 - Headache
 - Dizziness
 - Sleepiness
 - Loss of muscular control
 5. If you see another person with exhaust poisoning symptoms:
 - Remove person from area.
 - Expose to fresh air.
 - Keep person warm.
 - Do not permit physical exercise.
 - Administer Cardiopulmonary Resuscitation (CPR), if necessary.
 - Notify a medic.
 6. BE AWARE. The field protective mask for Nuclear, Biological, and Chemical (NBC) protection will not protect you from carbon monoxide poisoning.

The Best Defense Against Carbon Monoxide Poisoning Is Good Ventilation!

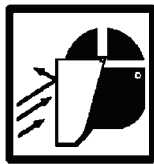


WARNING

BATTERIES



- To avoid injury, eye protection and acid-resistant gloves must be worn when working around batteries. Do not smoke, use open flame, make sparks, or create other ignition sources around batteries. If a battery is giving off gases, it can explode and cause injury to personnel. Remove all jewelry such as rings, ID tags, watches, and bracelets. If jewelry or a tool contacts a battery terminal, a direct short will cause instant heating, damage to equipment, and injury to personnel.
- Sulfuric acid contained in batteries can cause serious burns. If battery corrosion or electrolyte makes contact with skin, eyes or clothing, take immediate action to stop the corrosive burning effects. Failure to follow these procedures may cause injury or death to personnel.
 - a. Eyes. Flush with cold water for no less than 15 minutes and seek medical attention immediately.
 - b. Skin. Flush with large amounts of cold water until all acid is removed. Seek medical attention as required.
 - c. Internal. If corrosion or electrolyte is ingested, drink large amounts of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Seek medical attention immediately.
 - d. Clothing/Equipment. Wash area with large amounts of cold water. Neutralize acid with baking soda or household ammonia



WARNING

COMPRESSED AIR

Particles blown by compressed air are hazardous. DO NOT exceed 15 psi (103 kPa) nozzle pressure when drying parts with compressed air. Use a maximum of 30 psi (207 kPa) when cleaning components. DO NOT direct compressed air against human skin. Failure to follow this warning may result in injury or death. Make sure air stream is directed away from user and other personnel in the area. To prevent injury, user must wear protective goggles or face shield.



WARNING

ETHER COLD START SYSTEM



Ether fuel is extremely flammable and toxic. DO NOT smoke and make sure you are in a well-ventilated area away from heat, open flames, or sparks. Wear eye protection. Avoid contact with skin and eyes and avoid breathing ether fumes. If fluid enters or fumes irritate the eyes, wash immediately with large quantities of clean water for 15 minutes. Seek medical attention immediately if ether is inhaled or causes eye irritation. Failure to follow this warning may cause injury or death to personnel.



WARNING

FUEL HANDLING

- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may cause injury to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections, or maintenance while smoking or near fire, flames or sparks. Fuel may ignite, causing injury or death to personnel or damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuels. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing. Failure to follow this warning may cause injury to personnel.



WARNING

HAZARDOUS WASTE DISPOSAL

When servicing this machine, performing maintenance, or disposing of materials such as engine coolant, hydraulic fluid, lubricants, battery acids or batteries, and CARC paint, consult your unit/local hazardous waste disposal center or safety office for local regulatory guidance. If further information is needed, please contact The Army Environmental Hotline at 1-800-872-3845.



WARNING

HEARING PROTECTION

Your hearing can be PERMANENTLY DAMAGED if you are exposed to constant high noise levels of 85 dB or greater. Hearing protection is required when operating machine or when working on machine while it is operating. Failure to wear hearing protection may cause hearing loss.



WARNING

HEAVY PARTS--LESS THAN 40 LB (18 KG)

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Failure to follow this warning may cause injury to personnel.



WARNING

HEAVY PARTS--40 LB (18 KG) OR MORE

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.



WARNING

HYDRAULIC SYSTEM



- DO NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
- At operating temperature, hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulic lines. Failure to follow this warning may cause injury to personnel.

WARNING

MACHINE OPERATION

- Use caution and maintain three-point contact at all times when mounting or dismounting machine. Do NOT use steering wheel as a handhold. Failure to follow this warning may cause injury or death to personnel.
- BE ALERT for personnel in the area while operating machine. Always check to ensure area is clear of personnel and obstructions before moving. Failure to follow this warning may cause injury or death to personnel.
- Use of seat belt while operating machine is mandatory. Fasten belt BEFORE operating machine. Trying to fasten belt during operation creates a hazardous condition. Failure to follow this warning may cause injury or death to personnel.
- DO NOT allow riders on machine. Failure to follow this warning may cause injury or death to personnel.
- NEVER leave operator compartment without applying parking brake. Failure to follow this warning may cause injury or death to personnel.
- DO NOT use parking/emergency brake to stop a moving machine under usual conditions. Only if service brakes fail, apply parking/emergency brake. Failure to follow this warning may cause injury to personnel or damage to equipment.
- Never use starting fluid or spray to aid in starting the engine, other than the on-board ether cold start system. Failure to follow this warning may cause injury or death to personnel or damage to equipment.
- Always use a ground guide when driving machine up or down ramps in preparation for highway or marine transport. Failure to use a ground guide may cause injury or death to personnel or damage to equipment.



WARNING

NBC EXPOSURE



- If NBC exposure is suspected, personnel wearing protective equipment must handle all air cleaner media. Consult your NBC Officer or NBC NCO for appropriate handling or disposal procedures.
- Refer to FM 3-3, *Chemical and Biological Contamination Avoidance*, FM 3-5, *NMC Decontamination*, FM 3-3-1, *Nuclear Contamination Avoidance*.
- NBC contaminated filters must be handled using adequate precautions and must be disposed of by trained personnel.
- Failure to follow these warnings may cause illness or death to personnel.



To order this NBC decal use:

National Stock Number (NSN) - 7690-01-114-3702

Part Number (PN) - 12296626

Commercial and Government Entity Code (CAGEC) - 19207



WARNING

PRESSURIZED AIR

- DO NOT disconnect any air system lines or fittings unless engine is shut down and air system pressure is relieved. Failure to follow this warning may cause injury to personnel.
- Always wear eye protection when disconnecting air lines. Residual air will be expelled. Failure to follow this warning may cause eye injury.



WARNING

PRESSURIZED COOLING SYSTEM



- DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury to personnel.



WARNING

SLAVE STARTING

When slave starting machine:

- Use NATO slave cable that does NOT have loose or missing insulation.
- DO NOT proceed if suitable cable is not available.
- DO NOT use civilian-type jumper cables.
- DO NOT allow disabled and booster machines to come in contact with each other at any time during slave starting.

Failure to follow this warning may cause injury or death to personnel.



WARNING

SOLVENT CLEANING COMPOUND



Solvent cleaning compound MIL-PRF-680 Type III is an environmentally compliant and low toxic material. However, it may be irritating to the eyes and skin. Use protective gloves and goggles. Use in well-ventilated areas. Keep away from open flames and other sources of ignition. Failure to do so may cause injury or death to personnel.

WARNING

TIRES

- Operating machine with underinflated or defective tire may lead to tire failure and loss of traction or control. Failure to follow this warning may cause injury or death to personnel or damage to equipment.
- Use a self-inflating chuck and stand at tread side of tire at maximum distance allowed by inflation hose. Failure to do so may cause injury or death to personnel.



- Lifting cables, chains, hooks, and slings used for lifting machine must be in good condition and of suitable capacity. Failure to follow this warning may cause injury or death to personnel or damage to equipment.
- Improper use of lifting equipment and improper attachment of cables to machine may cause injury to personnel or damage to equipment. Observe all standard rules of safety.
- Hitch and steering movement can reduce clearances suddenly and cause injury to personnel. Always stop engine BEFORE working in area of hitch link.
- Ensure locking pin is installed before working on hitch area (TM 5-3805-261-10). Failure to follow this warning may cause injury to personnel.
- Configuration changes to blade cutting edge should NEVER be attempted without first securing the blade by blocking it so that it is firmly supported. Failure to follow this warning may cause injury to personnel.
- If machine is parked indoors, DO NOT run engine unless exhaust fumes are vented to the outside. Failure to follow this warning may cause injury or death to personnel due to carbon monoxide poisoning.
- Lubricating/hydraulic oils, engine coolant, fuel, and other fluids used in the performance of maintenance can be very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

LIST OF EFFECTIVE PAGES/WORK PACKAGES

Date of issue for original manual is:

Original 28 April 2006

TOTAL NUMBER OF PAGES FOR FRONT AND REAR MATTER IS 19 AND TOTAL NUMBER OF WORK PACKAGES IS 273 CONSISTING OF THE FOLLOWING:

Page/WP No.	*Change No.
Cover/(Back Blank)	0
a to j	0
A/(B Blank)	0
i to xiv	0
WP 0001 00 to WP 0273 00	0
WP 0346 00 to WP 0352 00	0
Index-1 to Index-24	0
Authentication Page	0
DA Form 2028 Sample	0
DA Form 2028	0
Metric Conversion Chart	0
Back Cover	0

* Zero in this column indicates an original page or work package.

TECHNICAL MANUAL
TM 5-3805-261-23-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C., 28 April 2006

TECHNICAL MANUAL

Unit and Direct Support Maintenance

FOR

**GRADER, ROAD MOTORIZED, DIESEL ENGINE DRIVEN (DED),
HEAVY, COMMERCIAL CONSTRUCTION EQUIPMENT (CCE)
(NSN 3805-01-150-4795) CATERPILLAR MODEL 130G**

TYPE I, NONSECTIONALIZED

**(NSN 3805-01-126-7894) CATERPILLAR MODEL 130GNS (EIC: EHN)
(NSN 3805-01-252-0128) CATERPILLAR MODEL 130GNSCE (EIC: EJJ)**

TYPE II, SECTIONALIZED

**(NSN 3805-01-126-7895) CATERPILLAR MODEL 130GS (EIC: EHP)
(NSN 3805-01-251-8252) CATERPILLAR MODEL 130GSCE (EIC: EJJ)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (*Recommended Changes to Equipment Technical Publications*), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <https://aeprs.ria.army.mil/>. The DA Form 2028 is located under the Public Applications section in the AEPS Public Home Page. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or e-mail your letter or DA Form 2028 direct to: AMSTA-LC-LMIT/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The e-mail address is: TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

SUPERSEDURE NOTICE - This manual supersedes TM 5-3805-261-20, dated 30 April 1992; TM 5-3805-261-34, dated 25 April 1989, including all changes.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

Table of Contents

**Page
Number**

VOLUME I

Warning Summary	a
How To Use This Manual	xiii

CHAPTER 1 GENERAL INFORMATION, EQUIPMENT DESCRIPTION, AND THEORY OF OPERATION

WP 0001 00 General Information	0001 00-1
WP 0002 00 Equipment Description and Data	0002 00-1
WP 0003 00 Theory of Operation	0003 00-1

CHAPTER 2 TROUBLESHOOTING PROCEDURES

WP 0004 00 Troubleshooting Introduction	0004 00-1
WP 0005 00 Troubleshooting Symptom Index	0005 00-1
WP 0006 00 Engine Troubleshooting Procedures	0006 00-1
WP 0007 00 Cooling System Troubleshooting Procedures	0007 00-1
WP 0008 00 Electrical System Troubleshooting Procedures	0008 00-1
WP 0009 00 Transmission Troubleshooting Procedures	0009 00-1
WP 0010 00 Brake System Troubleshooting Procedures	0010 00-1
WP 0011 00 Steering System Troubleshooting Procedures	0011 00-1
WP 0012 00 Hydraulic System Troubleshooting	0012 00-1
WP 0013 00 Miscellaneous Troubleshooting Procedures	0013 00-1
WP 0014 00 Engine STE/ICE-R Testing	0014 00-1
WP 0015 00 Fuel STE/ICE-R testing	0015 00-1
WP 0016 00 Charging System STE/ICE-R testing	0016 00-1
WP 0017 00 Starting System STE/ICE-R Testing	0017 00-1
WP 0018 00 Battery STE/ICE-R Testing	0018 00-1

CHAPTER 3 UNIT FIELD MAINTENANCE INSTRUCTIONS

WP 0019 00 Service Upon Receipt	0019 00-1
WP 0020 00 General Maintenance Instructions	0020 00-1
WP 0021 00 Electrical General Maintenance Instructions	0021 00-1
WP 0022 00 Preventive Maintenance Checks and Services (PMCS) Introduction	0022 00-1
WP 0023 00 Preventive Maintenance Checks and Services (PMCS) Procedures	0023 00-1

Engine

WP 0024 00 Changing Engine Oil	0024 00-1
WP 0025 00 Oil Filter Replacement	0025 00-1
WP 0026 00 Oil Filter Head Replacement	0026 00-1
WP 0027 00 Oil Level Gauge Tube Assembly Replacement	0027 00-1
WP 0028 00 Oil Filler and Cap Replacement	0028 00-1
WP 0029 00 Engine Oil Cooler Replacement	0029 00-1
WP 0030 00 Engine Oil Sampling Valve and Line Replacement	0030 00-1
WP 0031 00 Valve Cover Replacement	0031 00-1
WP 0032 00 Valve Cover Breather Replacement	0032 00-1

Table of Contents - Continued

	Page Number
<i>Fuel System</i>	
WP 0033 00 Turbocharger Oil Lines Replacement	0033 00-1
WP 0034 00 Tachometer Drive Replacement (Models 130G, 130GSCE, and 130GNSCE)	0034 00-1
WP 0035 00 Fuel Injection Lines Maintenance	0035 00-1
WP 0036 00 Air Precleaner Replacement	0036 00-1
WP 0037 00 Primary and Secondary Filter Elements Replacement	0037 00-1
WP 0038 00 Air Cleaner Body Replacement.	0038 00-1
WP 0039 00 Turbocharger Air Lines Replacement	0039 00-1
WP 0040 00 Turbocharger Exhaust Elbow Replacement	0040 00-1
WP 0041 00 Fuel Tank Hoses, Lines, and Fittings Replacement (Models 130G, 130GSCE, and 130GNSCE)	0041 00-1
WP 0042 00 Fuel Tank Hoses, Lines, and Fittings Replacement (Models 130GS and 130GNS).	0042 00-1
WP 0043 00 Fuel Tank Cap Maintenance	0043 00-1
WP 0044 00 Fuel Tank Maintenance	0044 00-1
WP 0045 00 Primary Fuel Filter/Priming Pump and Mounting Maintenance (Models 130G, 130GSCE, and 130GNSCE)	0045 00-1
WP 0046 00 Primary Fuel Filter/Priming Pump and Mounting Maintenance (Models 130GS and 130GNS).	0046 00-1
WP 0047 00 Secondary Fuel Filter and Mounting Maintenance (Models 130G, 130GSCE, and 130GNSCE)	0047 00-1
WP 0048 00 Secondary Fuel Filter and Mounting Maintenance (Models 130GS and 130GNS).	0048 00-1
WP 0049 00 Ether Starting Aid Cylinder Replacement.	0049 00-1
WP 0050 00 Ether Starting Aid Assembly Replacement.	0050 00-1
<i>Exhaust System</i>	
WP 0051 00 Muffler and Exhaust Pipe Replacement	0051 00-1
<i>Cooling System</i>	
WP 0052 00 Radiator and Support Replacement	0052 00-1
WP 0053 00 Shields, Baffles, and Plate Replacement.	0053 00-1
WP 0054 00 Grille Replacement	0054 00-1
WP 0055 00 Side Screen Doors Replacement	0055 00-1
WP 0056 00 Cap Guard Replacement	0056 00-1
WP 0057 00 Radiator Hoses, Lines, and Fittings Replacement.	0057 00-1
WP 0058 00 Radiator Drain Line Replacement.	0058 00-1
WP 0059 00 Temperature Regulator (Thermostat) Replacement	0059 00-1
WP 0060 00 Water Pump Replacement.	0060 00-1
WP 0061 00 Fan Belts Maintenance	0061 00-1
WP 0062 00 Fan Lubrication Line Replacement	0062 00-1
WP 0063 00 Fan and Fan Drive Replacement	0063 00-1
WP 0064 00 Transmission Oil Pump Pulley Replacement	0064 00-1
WP 0065 00 Cooling System Servicing.	0065 00-1

Table of Contents - Continued

	Page Number
<i>Electrical System</i>	
WP 0066 00 Alternator and Mountings Maintenance	0066 00-1
WP 0067 00 Starting Motor Replacement	0067 00-1
WP 0068 00 Starting Motor Relay Replacement	0068 00-1
WP 0069 00 Electronic Monitoring System (EMS) Panel Replacement	0069 00-1
WP 0070 00 Electronic Monitoring System (EMS) Panel Switches Replacement	0070 00-1
WP 0071 00 Electronic Monitoring System (EMS) Function Lights Replacement	0071 00-1
WP 0072 00 Electronic Monitoring System (EMS) Fault Light Replacement	0072 00-1
WP 0073 00 Turn Signal Switch Replacement	0073 00-1
WP 0074 00 Articulation Indicator Light Replacement	0074 00-1
WP 0075 00 Electronic Monitoring System (EMS) Cover Replacement	0075 00-1
WP 0076 00 Work Light Switches Replacement	0076 00-1
WP 0077 00 Ether Control Switch Replacement	0077 00-1
WP 0078 00 Control Console Light Replacement	0078 00-1
WP 0079 00 Start Switch Replacement	0079 00-1
WP 0080 00 Main Circuit Breaker Replacement	0080 00-1
WP 0081 00 Battery Disconnect Switch Replacement	0081 00-1
WP 0082 00 Operator's Console Cover Replacement	0082 00-1
WP 0083 00 Hourmeter Replacement	0083 00-1
WP 0084 00 Panel Lights Replacement	0084 00-1
WP 0085 00 Switch Panel and Mounting Replacement (CCE and Type I Machines)	0085 00-1
WP 0086 00 Supplemental Steering Pump Valve Switch Maintenance	0086 00-1
WP 0087 00 Supplemental Steering Hydraulic Pressure Switch Replacement	0087 00-1
WP 0088 00 Supplemental Steering Governor Switch Maintenance	0088 00-1
WP 0089 00 Supplemental Steering Electronic Control Replacement	0089 00-1
WP 0090 00 Supplemental Steering Magnetic Switch Replacement	0090 00-1
WP 0091 00 Supplemental Steering Pump and Motor Replacement	0091 00-1
WP 0092 00 Supplemental Steering Magnetic Switch Pump Motor Mounting Replacement	0092 00-1
WP 0093 00 Blade Float Limit Switches and Mounting Replacement (CCE Machine)	0093 00-1
WP 0094 00 Flasher Unit Replacement	0094 00-1
WP 0095 00 Circuit Breaker Replacement	0095 00-1
WP 0096 00 Main Fuse Box and Mounting Replacement	0096 00-1
WP 0097 00 Cab Fuse Box and Cover Replacement	0097 00-1
WP 0098 00 NATO Slave Receptacle and Cables Replacement	0098 00-1
WP 0099 00 Dome Light Switch Replacement (CCE Machine)	0099 00-1
WP 0100 00 Dome Light Dimmer Resistor and Mounting Replacement (CCE Machine)	0100 00-1
WP 0101 00 Vehicle Light Switch and Mounting Replacement	0101 00-1
WP 0102 00 Blackout Lighting Magnetic Switch Replacement	0102 00-1
WP 0103 00 Dimmer Switch Replacement	0103 00-1
WP 0104 00 Headlights Maintenance	0104 00-1
WP 0105 00 Front Work Lights Maintenance	0105 00-1
WP 0106 00 Front Blackout Drive Light Maintenance	0106 00-1
WP 0107 00 Front Turn Signal Lights Maintenance	0107 00-1
WP 0108 00 Rear Turn Signal Lights, Stoplights, and Mounting Maintenance	0108 00-1
WP 0109 00 Blackout Stoplights-Taillights and Mounting Maintenance	0109 00-1
WP 0110 00 Rear Work Light Maintenance	0110 00-1
WP 0111 00 Dome Light Maintenance (CCE Machine)	0111 00-1

Table of Contents - Continued

	Page Number
<i>Electrical System - Continued</i>	
WP 0112 00 Air Pressure Switches Replacement	0112 00-1
WP 0113 00 Engine Oil Pressure and Hourmeter Switches Replacement.	0113 00-1
WP 0114 00 Coolant Temperature and Ether Start Switches Replacement.	0114 00-1
WP 0115 00 Fuel Pressure Switch Replacement	0115 00-1
WP 0116 00 Hydraulic Oil Temperature Switch Replacement	0116 00-1
WP 0117 00 Blackout and Service Stoplight Switches Replacement	0117 00-1
WP 0118 00 Monitor Warning Alarm Replacement	0118 00-1
WP 0119 00 Horn Replacement.	0119 00-1
WP 0120 00 Horn Button Assembly and Mounting Replacement.	0120 00-1
WP 0121 00 Backup Alarm Replacement	0121 00-1
WP 0122 00 Backup Alarm Switch Maintenance	0122 00-1
WP 0123 00 Battery Box Covers Maintenance	0123 00-1
WP 0124 00 Battery Holddowns Replacement	0124 00-1
WP 0125 00 Batteries and Battery Cables Replacement	0125 00-1
WP 0126 00 Battery Boxes and Mounting Replacement.	0126 00-1
WP 0127 00 Alternator Ground Lead Replacement.	0127 00-1
WP 0128 00 Starting Motor Lead Replacement.	0128 00-1
WP 0129 00 Air Pressure Switch Lead Replacement	0129 00-1
WP 0130 00 Electronic Monitoring System (EMS) Jumper Wire Replacement	0130 00-1
WP 0131 00 Supplemental Steering Dump Valve Wiring Harness Replacement	0131 00-1
WP 0132 00 Supplemental Steering Governor Switch Wiring Harness Replacement	0132 00-1
WP 0133 00 Blade Float Pilot Valve Wiring Harness Replacement (CCE Machine).	0133 00-1
WP 0134 00 Front Window Defroster Fan Lead Replacement (CCE Machine)	0134 00-1
WP 0135 00 Rear Window Defroster Fan Lead Replacement (CCE Machine)	0135 00-1
WP 0136 00 Front Work Lights Lead Replacement	0136 00-1
WP 0137 00 Rear Work Light Lead Replacement.	0137 00-1
WP 0138 00 Turn Signal Lights Fuse Lead Replacement	0138 00-1
WP 0139 00 Dome Light Switch Wiring Harness Replacement (CCE Machine).	0139 00-1
WP 0140 00 Dome Light Dimmer Resistor Wiring Harness Replacement (CCE Machine).	0140 00-1
WP 0141 00 Horn Wiring Harness Replacement.	0141 00-1
WP 0142 00 Disconnect Switch Cable Replacement.	0142 00-1
WP 0143 00 Heater Wiring Harness Replacement (CCE Machine)	0143 00-1
WP 0144 00 Left- and Right-Hand Blade Float Harnesses Replacement (CCE Machine)	0144 00-1
WP 0145 00 Supplemental Steering Pump Wiring Harnesses Replacement.	0145 00-1
WP 0146 00 Radio Interference Suppression Replacement (Models 130G, 130GSCE, and 130GNSCE)	0146 00-1
<i>Transmission</i>	
WP 0147 00 Changing Transmission and Differential Oil	0147 00-1
WP 0148 00 Transmission Modulation Control Maintenance.	0148 00-1
WP 0149 00 Transmission Modulation Control Housing Replacement	0149 00-1
WP 0150 00 Transmission Control Adjustment.	0150 00-1
WP 0151 00 Transmission Control Lever and Housing Replacement.	0151 00-1
WP 0152 00 Transmission Control Cables Replacement.	0152 00-1
WP 0153 00 Transmission Oil Filter and Mounting Maintenance.	0153 00-1
WP 0154 00 Transmission Oil Sampling Valve and Line Maintenance	0154 00-1
WP 0155 00 Transmission Oil Lines Replacement	0155 00-1

Table of Contents - Continued

	Page Number
<i>Front Axle</i>	
WP 0156 00 Leaning Wheel Cylinder Replacement	0156 00-1
<i>Brakes</i>	
WP 0157 00 Parking Brake Actuator and Release Valve Replacement	0157 00-1
WP 0158 00 Parking Brake Air Control Valve Maintenance	0158 00-1
WP 0159 00 Parking Brake Control Replacement	0159 00-1
WP 0160 00 Air Brake Pedal and Linkage Maintenance.	0160 00-1
WP 0161 00 Air Brake Lines Replacement	0161 00-1
WP 0162 00 Air Brake Reservoir Replacement.	0162 00-1
WP 0163 00 Air Brake Reservoir Lines and Fittings Replacement.	0163 00-1
WP 0164 00 Air Dryer Maintenance (Types I and II Machines).	0164 00-1
WP 0165 00 Air Compressor Governor Replacement	0165 00-1
<i>Wheels</i>	
WP 0166 00 Front Wheels Replacement	0166 00-1
WP 0167 00 Rear Wheels Replacement.	0167 00-1
WP 0168 00 Tires Maintenance	0168 00-1
<i>Steering</i>	
WP 0169 00 Steering Hoses, Lines, and Fittings: Steering Valves to Steering Cylinders Replacement (Dual Valve Design).	0169 00-1
WP 0170 00 Steering Hoses, Lines, and Fittings: Steering Valves to Steering Cylinders Replacement (Single Valve Design).	0170 00-1
WP 0171 00 Steering Hoses, Lines, and Fittings: Steering Control Pump to Steering Valves Replacement (Dual Valve Design).	0171 00-1
WP 0172 00 Steering Hoses, Lines, And Fittings: Steering Control Pump To Steering Valve Replacement (Single Valve Design).	0172 00-1
WP 0173 00 Supplemental Steering Hoses, Lines, and Fittings Replacement	0173 00-1
WP 0174 00 Supplemental Steering Check Valve Replacement	0174 00-1
WP 0175 00 Remote Control Repair (Type II Machine).	0175 00-1
WP 0176 00 Steering Cylinder Replacement.	0176 00-1
<i>Body, Cab, Hood, and Hull</i>	
WP 0177 00 Step Assemblies Maintenance (Old Design).	0177 00-1
WP 0178 00 Step Assemblies Maintenance (New Design)	0178 00-1
WP 0179 00 Frame Covers Replacement.	0179 00-1
WP 0180 00 Front Tow Hook Replacement	0180 00-1
WP 0181 00 Engine Hood Replacement	0181 00-1
WP 0182 00 Engine Panels and Doors Maintenance	0182 00-1
WP 0183 00 Dash Plate Replacement	0183 00-1
WP 0184 00 ROPS Replacement (Types I and II Machines)	0184 00-1
WP 0185 00 ROPS Accessories Replacement (CCE Machine).	0185 00-1
WP 0186 00 Lower-Front Windows Maintenance (CCE Machine)	0186 00-1
WP 0187 00 Cab Windows Replacement (CCE Machine)	0187 00-1
WP 0188 00 Cab Doors and Latch Assemblies Maintenance (CCE Machine).	0188 00-1
WP 0189 00 Cab Storage Compartment Maintenance (CCE Machine)	0189 00-1
WP 0190 00 Cab Sound Suppression Panels (Lower-Front and Rear) Replacement (CCE Machine)	0190 00-1

Table of Contents - Continued

	Page Number
<i>Body, Cab, Hood, and Hull - Continued</i>	
WP 0191 00 Cab Sound Suppression Panel (Ceiling) Replacement (CCE Machine)	0191 00-1
WP 0192 00 Cab Sound Suppression Panel (Rear) Replacement	0192 00-1
WP 0193 00 Operator's Panel Console Replacement	0193 00-1
WP 0194 00 Cab Insulation and Mounting Replacement (CCE Machine)	0194 00-1
WP 0195 00 Gauge Panel Vandalism Guard Replacement	0195 00-1
WP 0196 00 Steering Console Hood and Panel Cover Replacement	0196 00-1
WP 0197 00 Steering Console Support Replacement (Models 130GS and 130GNS)	0197 00-1
WP 0198 00 Steering Console Support Replacement (Models 130G, 130GSCE, and 130GNSCE)	0198 00-1
WP 0199 00 Hydraulic Drive Protection Cover Replacement	0199 00-1
WP 0200 00 Seat Assembly and Mounting Replacement	0200 00-1
WP 0201 00 Seat Belt Replacement	0201 00-1
WP 0202 00 Toolbox Replacement	0202 00-1
WP 0203 00 Scarifier Shanks Stowage Rack Replacement (CCE Machine)	0203 00-1
<i>Bumpers</i>	
WP 0204 00 Rear Bumper Replacement (CCE Machine)	0204 00-1
WP 0205 00 Rear Bumper Replacement (Models 130GSCE and 130GNSCE)	0205 00-1
<i>Body, Chassis, and Hull Accessory Items</i>	
WP 0206 00 Front Wiper (Lower) Maintenance (CCE Machine)	0206 00-1
WP 0207 00 Front Wiper (Upper) Maintenance (CCE Machine)	0207 00-1
WP 0208 00 Rear Wiper Replacement (CCE Machine)	0208 00-1
WP 0209 00 Windshield Washer Replacement (CCE Machine)	0209 00-1
WP 0210 00 Front and Rear Defroster Fans and Mounting Maintenance (CCE Machine)	0210 00-1
WP 0211 00 Heater Lines and Fittings Replacement (CCE Machine)	0211 00-1
WP 0212 00 Heater Maintenance (CCE Machine)	0212 00-1
WP 0213 00 Inside Rearview Mirror Replacement	0213 00-1
WP 0214 00 Outside Sideview Mirrors Replacement (Models 130G, 130GSCE, and 130GNSCE)	0214 00-1
WP 0215 00 Data Plates and Decals Replacement	0215 00-1
<i>Hydraulic System</i>	
WP 0216 00 Changing Hydraulic Oil	0216 00-1
WP 0217 00 Circle Drive Motor Assembly Replacement	0217 00-1
WP 0218 00 Hydraulic Control Linkages Maintenance	0218 00-1
WP 0219 00 Hydraulic Control Levers Replacement	0219 00-1
WP 0220 00 Hydraulic Pump Junction Block and Lines Replacement	0220 00-1
WP 0221 00 Blade Float Lines, Fittings, and Hoses Replacement (CCE Machine)	0221 00-1
WP 0222 00 Blade Lift Lines, Fittings, and Hoses Replacement	0222 00-1
WP 0223 00 Blade Tip Lines, Fittings, and Hoses Replacement	0223 00-1
WP 0224 00 Leaning Wheel Hoses and Fittings Replacement	0224 00-1
WP 0225 00 Circle Drive Motor Hoses and Fittings Replacement	0225 00-1
WP 0226 00 Centershift Lines, Fittings, and Hoses Replacement	0226 00-1
WP 0227 00 Articulation Lines, Fittings, and Hoses Replacement	0227 00-1
WP 0228 00 Sideshift Lines Replacement	0228 00-1
WP 0229 00 Scarifier Lines, Fittings, and Hoses Replacement	0229 00-1
WP 0230 00 Hydraulic Oil Cooler Replacement	0230 00-1

Table of Contents - Continued

**Page
Number**

Hydraulic System - Continued

WP 0231 00	Hydraulic Tank Filters Replacement	0231 00-1
WP 0232 00	Hydraulic Pump Drive Maintenance	0232 00-1
WP 0233 00	Blade Float Pilot Valve Maintenance (CCE Machine)	0233 00-1
WP 0234 00	Blade Float Check Valve Maintenance (CCE Machine)	0234 00-1
WP 0235 00	Right Blade Lift, Articulation, and Centershift Check Valve Maintenance . . .	0235 00-1
WP 0236 00	Left Blade Lift and Relief Valve Maintenance	0236 00-1
WP 0237 00	Hydraulic Control Valves Replacement	0237 00-1
WP 0238 00	Hydraulic Pump Relief Valve Maintenance	0238 00-1
WP 0239 00	Circle Drive and Leaning Wheel Check Valve Maintenance	0239 00-1
WP 0240 00	Sideshift Check and Relief Valve Replacement	0240 00-1
WP 0241 00	Power Blade and Blade Tip Check and Relief Valve Maintenance	0241 00-1
WP 0242 00	Scarifier Check and Relief Valve Maintenance	0242 00-1
WP 0243 00	Centershift Cylinder Replacement	0243 00-1
WP 0244 00	Blade Tip Cylinder Replacement	0244 00-1
WP 0245 00	Blade Lift Cylinder Replacement	0245 00-1
WP 0246 00	Articulation Cylinder Replacement	0246 00-1
WP 0247 00	Sideshift Cylinder And Mounting Replacement	0247 00-1
WP 0248 00	Scarifier Cylinder Replacement	0248 00-1
WP 0249 00	Hydraulic Pump and Control Valve Lines and Fittings Replacement	0249 00-1
WP 0250 00	Oil Cooler To Relief Valve and Hydraulic Tank Lines and Fittings Replacement	0250 00-1

Non-Electrical Gauges

WP 0251 00	Air Cleaner Indicator Replacement	0251 00-1
WP 0252 00	Air Pressure Gauges Replacement	0252 00-1
WP 0253 00	Air Pressure Gauge To Air Tank Lines and Fittings Replacement	0253 00-1
WP 0254 00	Temperature Gauge Replacement	0254 00-1
WP 0255 00	Articulation Indicator Mechanism Replacement	0255 00-1
WP 0256 00	Instrument Panel Replacement	0256 00-1
WP 0257 00	Remote Throttle Lever Replacement (Type II Machine)	0257 00-1
WP 0258 00	Remote Start Panel Replacement (Type II Machine)	0258 00-1

Earth Moving Equipment Components

WP 0259 00	Blade (Moldboard) Assembly Replacement	0259 00-1
WP 0260 00	Centershift Lock Assembly Replacement	0260 00-1
WP 0261 00	Centershift Lock Control Valve Assembly Replacement	0261 00-1
WP 0262 00	Centershift Lock and Lock Valve Lines and Fittings Replacement	0262 00-1
WP 0263 00	Circle Drive Swivel Assembly Replacement	0263 00-1
WP 0264 00	Scarifier Assembly Replacement	0264 00-1
WP 0265 00	Scarifier Shanks and Teeth Replacement	0265 00-1
WP 0266 00	Scarifier Actuating Assembly Maintenance	0266 00-1

CHAPTER 5 SUPPORTING INFORMATION

WP 0346 00	References	0346 00-1
WP 0347 00	Maintenance Allocation Chart (MAC) Introduction	0347 00-1
WP 0348 00	Maintenance Allocation Chart (MAC)	0348 00-1
WP 0349 00	Expendable and Durable Items List	0349 00-1
WP 0350 00	Illustrated List of Manufactured Items	0350 00-1

Table of Contents - Continued

	Page Number
WP 0351 00 Torque Limits	0351 00-1
WP 0352 00 Schematic Diagrams	0352 00-1
Index	Index-1

VOLUME II

CHAPTER 4 DIRECT SUPPORT FIELD MAINTENANCE INSTRUCTIONS

Engine

WP 0267 00 Engine Replacement	0267 00-1
WP 0268 00 Engine Mounting and Trunnion Replacement	0268 00-1
WP 0269 00 Engine Front Covers Replacement	0269 00-1
WP 0270 00 Cylinder Block Head Assembly Maintenance	0270 00-1
WP 0271 00 Hub Driver Replacement	0271 00-1
WP 0272 00 Flywheel and Flywheel Housing Replacement	0272 00-1
WP 0273 00 Rocker Arm Assembly Maintenance	0273 00-1
WP 0274 00 Valves Maintenance	0274 00-1
WP 0275 00 Oil Pan and Oil Pan Plates Replacement	0275 00-1
WP 0276 00 Oil Pump And Lines Replacement	0276 00-1
WP 0277 00 Exhaust Manifold Replacement	0277 00-1

Fuel System

WP 0278 00 Fuel Injection Nozzles Maintenance	0278 00-1
WP 0279 00 Fuel Injection Pump Replacement	0279 00-1
WP 0280 00 Fuel Injection Pump Mounting Replacement	0280 00-1
WP 0281 00 Fuel Transfer Pump Maintenance (Models 130G, 130GSCE, and 130GNSCE)	0281 00-1
WP 0282 00 Governor Controls Maintenance	0282 00-1
WP 0283 00 Turbocharger Replacement	0283 00-1

Electrical System

WP 0284 00 Electronic Monitoring System (EMS) Panel Repair	0284 00-1
WP 0285 00 Rear Signal Light and Backup Alarm Wiring Harness Replacement	0285 00-1
WP 0286 00 Main Wiring Harness Replacement	0286 00-1
WP 0287 00 Main Blackout Light Wiring Harness Replacement	0287 00-1
WP 0288 00 Front Blackout Light Wiring Harness Replacement	0288 00-1
WP 0289 00 Rear Blackout Light Wiring Harness Replacement	0289 00-1
WP 0290 00 Supplemental Steering Main Wiring Harness Replacement	0290 00-1
WP 0291 00 Electronic Monitoring System (EMS) Main Wiring Harness Replacement ...	0291 00-1
WP 0292 00 Cab Main Wiring Harness Replacement (CCE Machine)	0292 00-1
WP 0293 00 Rear Wiper Wiring Harness Replacement (CCE Machine)	0293 00-1

Transmission

WP 0294 00 Transmission, Adapter, and Differential Replacement	0294 00-1
WP 0295 00 Engine-to-Transmission Adapter Replacement	0295 00-1
WP 0296 00 Transmission Control Relief Valve Maintenance	0296 00-1
WP 0297 00 Transmission Oil Pump Replacement	0297 00-1
WP 0298 00 Transmission Oil Cooler Maintenance	0298 00-1
WP 0299 00 Transmission Oil Filler and Oil Level Gauge Replacement	0299 00-1

Table of Contents - Continued

	Page Number
<i>Front Axle</i>	
WP 0300 00 Front Axle Assembly Replacement	0300 00-1
WP 0301 00 Steering Arms and Tie Rod Maintenance	0301 00-1
WP 0302 00 Wheel Spindle, Bearings, and Seals Replacement	0302 00-1
WP 0303 00 Leaning Wheel Mechanism Maintenance	0303 00-1
WP 0304 00 Leaning Wheel Cylinder Repair	0304 00-1
<i>Rear Axle</i>	
WP 0305 00 Differential Replacement	0305 00-1
WP 0306 00 Differential Lock Control Valve Replacement	0306 00-1
WP 0307 00 Drive Axles Replacement	0307 00-1
WP 0308 00 Drive Sprockets Replacement	0308 00-1
WP 0309 00 Final Drive Assembly Replacement	0309 00-1
WP 0310 00 Tandem Drive Housing Assembly Maintenance	0310 00-1
WP 0311 00 Tandem Drive Chain Assembly Replacement	0311 00-1
<i>Brakes</i>	
WP 0312 00 Parking Brake Actuator and Release Valve Repair	0312 00-1
WP 0313 00 Service Brakes Maintenance	0313 00-1
WP 0314 00 Service Brake and Wheel Spindle Housing Assembly Replacement	0314 00-1
WP 0315 00 Remote Steer Air Valves Replacement (Type II Machine)	0315 00-1
WP 0316 00 Air Brake Valve Replacement	0316 00-1
WP 0317 00 Air Compressor Assembly Replacement	0317 00-1
WP 0318 00 Air Compressor Lines and Fittings Replacement	0318 00-1
<i>Steering</i>	
WP 0319 00 Steering Control Pump Maintenance	0319 00-1
WP 0320 00 Steering Cylinder Repair	0320 00-1
WP 0321 00 Steering Valve Maintenance (Dual Valve Design)	0321 00-1
WP 0322 00 Steering Valve Maintenance (Single Valve Design)	0322 00-1
WP 0323 00 Combination Valve Maintenance	0323 00-1
<i>Frame and Articulation Systems</i>	
WP 0324 00 Frame Separation and Connection Replacement (CCE and Type I Machines)	0324 00-1
WP 0325 00 Articulation Hitch Bearing Replacement (CCE and Type I Machines)	0325 00-1
WP 0326 00 Articulation Hitch Bearing Replacement (Type II Machine)	0326 00-1
<i>Body, Cab, Hood, and Hull</i>	
WP 0327 00 ROPS Replacement (CCE Machine)	0327 00-1
WP 0328 00 Operator's Panel Console Base Replacement	0328 00-1
<i>Hydraulic System</i>	
WP 0329 00 Hydraulic Pump Assembly and Mounting Replacement	0329 00-1
WP 0330 00 Hydraulic Pump Assembly Repair	0330 00-1
WP 0331 00 Circle Drive Motor Repair	0331 00-1
WP 0332 00 Hydraulic Control Valves Repair	0332 00-1
WP 0333 00 Centershift Cylinder Repair	0333 00-1
WP 0334 00 Blade Tip Cylinder Repair	0334 00-1
WP 0335 00 Blade Lift Cylinder Repair	0335 00-1
WP 0336 00 Articulation Cylinder Repair	0336 00-1

Table of Contents - Continued

	Page Number
<i>Hydraulic System - Continued</i>	
WP 0337 00 Sideshift Cylinder Repair	0337 00-1
WP 0338 00 Scarifier Cylinder Repair	0338 00-1
WP 0339 00 Hydraulic Tank and Mounting Maintenance	0339 00-1
<i>Earth Moving Equipment Components</i>	
WP 0340 00 Blade Lift Bar Assembly Maintenance	0340 00-1
WP 0341 00 Blade Lift Arm Replacement	0341 00-1
WP 0342 00 Drawbar Assembly Replacement	0342 00-1
WP 0343 00 Blade Brackets Replacement	0343 00-1
WP 0344 00 Circle Assembly Replacement	0344 00-1
WP 0345 00 Circle Drive Swivel Assembly Repair	0345 00-1
CHAPTER 5 SUPPORTING INFORMATION	
WP 0346 00 References	0346 00-1
WP 0347 00 Maintenance Allocation Chart (MAC) Introduction	0347 00-1
WP 0348 00 Maintenance Allocation Chart (MAC)	0348 00-1
WP 0349 00 Expendable and Durable Items List	0349 00-1
WP 0350 00 Illustrated List of Manufactured Items	0350 00-1
WP 0351 00 Torque Limits	0351 00-1
WP 0352 00 Schematic Diagrams	0352 00-1
Index	Index-1

HOW TO USE THIS MANUAL

NOTE

If at any time you are unsure how to use this manual or you cannot locate the information you need, notify your supervisor.

INTRODUCTION

1. This manual is designed to help you perform troubleshooting and maintenance on the 130G Series Grader.
2. This manual is divided into chapters and written in work package format:
 - a. Chapters divide the manual into major categories of information (e.g., *General Information, Equipment Description, and Theory of Operation; Troubleshooting Procedures; Unit Field Maintenance Instructions; Direct Support Field Maintenance Instructions; and Supporting Information*).
 - b. Each Chapter is divided into work packages, which are identified by a 6-digit number (e.g., 0001 00, 0002 00, etc.) located on the upper right-hand corner of each page. The work package page number (e.g., 0001 00-1, 0001 00-2, etc.) is located centered at the bottom of each page.
 - c. If a Change Package is issued to this manual, added work packages use the 5th and 6th digits of their number to indicate new material. For instance, work packages inserted between WP 0001 00 and WP 0002 00 are numbered WP 0001 01, WP 0001 02, etc.
3. Due to the size of this manual, it is separated into two volumes:
 - a. The first volume (TM 5-3805-261-23-1) consists of Chapters 1 through 3 (through WP 0266 00).
 - b. The second volume (TM 5-3805-261-23-2) contains Chapter 4.
 - c. Both volumes have Chapter 5, *Supporting Information*, for reference purposes.
4. Scan through this manual to become familiar with its organization and contents before attempting to operate or maintain the equipment.

CONTENTS OF THIS MANUAL

1. A *Warning Summary* is located at the beginning of this manual. Become familiar with these warnings before operating or performing troubleshooting or maintenance on the grader.
2. A *Table of Contents*, located in the front of the manual, lists all chapters and work packages in the publication.
 - a. The Table of Contents also provides *Reporting Errors and Recommending Improvements* information and DA Form 2028 addresses, for the submittal of corrections to this manual.
 - b. If you cannot find what you are looking for in the Table of Contents, refer to the alphabetical *Index* at the back of the manual.
3. Chapter 1, *General Information, Equipment Description, and Theory of Information*, provides general information on the manual and the equipment.
4. Chapter 2 covers *Troubleshooting Procedures*. WP 0005 00 contains a *Troubleshooting Symptom Index*. If the machine malfunctions, this index should always be consulted to locate the appropriate troubleshooting procedure. Chapter 2 also includes STE/ICE-R testing of selected machine systems.
5. Chapter 3 covers *Unit Field Maintenance Instructions*. Major areas covered are *Preventive Maintenance Checks and Services (PMCS), Service Upon Receipt*, as well as instruction on maintaining components at Unit Field Maintenance level.
6. Chapter 4 covers *Direct Support Field Maintenance Instructions*.
7. Chapter 5 includes *Supporting Information: References, Maintenance Allocation Chart (MAC) Introduction; MAC; Expendable and Durable Items List; Tool Identification List; Illustrated List of Manufactured Items; Torque Limits; and Schematic Diagrams*.

FEATURES OF THIS MANUAL

1. WARNINGS, CAUTIONS, NOTES, subject headings, and other important information are highlighted in **BOLD** print as a visual aid.

WARNING

A WARNING indicates a hazard which may result in injury or death.

CAUTION

A CAUTION is a reminder of safety practices or directs attention to usage practices that may result in damage to equipment.

NOTE

A NOTE is a statement containing information that will make the procedures easier to perform.

2. Statements and words of particular interest may be printed in CAPITAL LETTERS to create emphasis.
3. Within a procedural step, reference may be made to another work package in this manual or to another manual. These references indicate where you should look for more complete information.

If you are told: "Refer to *General Maintenance Instructions* (WP 0020 00)" go to Work Package 0020 00 in this manual for instructions on general maintenance.

4. Illustrations are placed after, and as close to, the procedural steps to which they apply. Callouts placed on the art may be text or numbers, or both; whichever method is easier for the soldier.
5. Numbers located at lower right corner of art (e.g., 397-001; 397-002, etc.) are art control numbers and are used for tracking purposes only. Disregard these numbers.
6. Dashed leader lines used in the Lubrication Chart (WP 0022 00) and in the PMCS illustrations (WP 0023 00) indicate that called out lubrication points are located on both sides of the equipment.
7. Unless otherwise indicated, technical instructions include metric units as well as standard units. For your reference, a *Metric Conversion Chart* is located on the inside back cover of the manual.

CHAPTER 1
GENERAL INFORMATION, EQUIPMENT
DESCRIPTION, AND THEORY OF OPERATION

SCOPE

1. **Type of Manual.** This manual is for use in performing Field (Unit and Direct Support) Maintenance on the 130G Series Grader.
2. **Equipment Name and Model Number.** Grader, Road, Motorized, Diesel Engine Driven (DED), Heavy, Commercial Construction Equipment (CCE), Model 130G.
3. **Purpose of Equipment.** The 130G grader is used for rough and finished grading, low and high bank sloping, flat and V-ditching, scarifying bituminous road mixes, and snow removal. Mission support role includes construction and maintenance of roads, airfields, hardstands, drainage, site preparation for pipeline, and river crossing.

MAINTENANCE FORMS, RECORDS, AND REPORTS

Department of the Army forms and procedures used for the equipment will be those prescribed by PAM 738-750, *Functional User's Manual for the Army Maintenance Management System (TAMMS)*, as contained in the Maintenance Management Update.

REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIRS)

If your grader needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on an SF Form 368, *Product Quality Deficiency Report*. Mail it to us at: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-AC-NML, Rock Island, Illinois 61299-7630. We'll send you a reply.

CORROSION PREVENTION AND CONTROL (CPC)

1. Corrosion Prevention and Control (CPC) of Army materiel is a continuing concern. It is important that any corrosion problems with this item be reported so that the problem can be corrected and improvements can be made to prevent the problem in future items.
2. While corrosion is typically associated with rusting of metals, it can also include deterioration of other materials, such as rubber and plastic. Unusual cracking, softening, swelling, or breaking of these materials may be a corrosion problem. If a corrosion problem is identified, it can be reported using SF Form 368, *Product Quality Deficiency Report*. Use of key words such as "corrosion," "rust," "deterioration," or "cracking" will ensure that the information is identified as a CPC problem. The form should be submitted to the address specified in PAM 738-750.

DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE

For destruction of Army materiel to prevent enemy use, refer to TM 750-244-3.

PREPARATION FOR STORAGE OR SHIPMENT

For preparation for storage or shipment procedures, refer to TM 5-3805-261-10.

LIST OF ABBREVIATIONS/ACRONYMS

NOTE

Refer to ASME Y14.38-1999 for standard abbreviations.

ABBREVIATION/ACRONYMS	DEFINITION
A/A	Airborne/Air Mobile
AAL	Additional Authorization List
BDC	Bottom Dead Center
BII	Basic Issue Items
CID	Cubic Inch Displacement
cm	Centimeter
CN	Can
COEI	Components of End Item
CPC	Corrosion Prevention and Control
EIR	Equipment Improvement Recommendation
EMP	Electromagnetic Pulse
GCWR	Gross Combination Weight Rating
GVWR	Gross Vehicle Weight Rating
ISO	International Organization for Standardization
kg	Kilogram
km	Kilometer
kPa	Kilopascal
kph	Kilometers per Hour
kW	Kilowatt
L	Liter
lbf	Pound-Force
lb-ft	Pound-Feet
lb-in	Pound-Inches
LC	Load Center
Lph	Liters per Hour
m	Meter
mm	Millimeter
N	Newton
NATO	North Atlantic Treaty Organization
NBC	Nuclear, Biological, and Chemical
NC	National Coarse (Threading)
NF	National Fine (Threading)
Nm	Newton Meter
PMCS	Preventive Maintenance Checks and Services
PR	Ply Rating
ROPS	Rollover Protective Structure
SLEP	Service Life Extension Program
SMR	Source, Maintenance, Recoverability
TC	Top Center (Compression Stroke)

SAFETY, CARE, AND HANDLING

1. **Threat of Nuclear, Biological, and Chemical (NBC) Contamination.**
 - a. The 130G Series Grader incorporates a CARC painted exterior. Materials used in the machine are metal, rubber, plastic, fabric, and glass.
 - b. In the event of NBC contamination, decontaminates for these surfaces and materials are listed in FM 3-5, *NBC Decontamination*. For decontamination procedures, refer to FM 3-7, *NBC Field Handbook*.
2. **Electromagnetic Pulse (EMP) Exposure.** Components designated as EMP susceptible may be damaged by EMP exposure. If machine is exposed to an EMP incident, verify proper operation and repair as necessary.
3. **General Safety Considerations.**
 - a. Read and become familiar with all general safety warnings associated with maintenance of the grader. Refer to the *Warning Summary* at the front of this manual.
 - b. Perform all maintenance, unless otherwise specified, with ALL equipment (blade and scarifier) lowered to the ground, transmission in N (Neutral) and locked, parking/emergency brake applied, engine off, and master battery disconnect switch in OFF position. If any hydraulic system line or fitting is to be disconnected, release hydraulic system pressure before proceeding (WP 0020 00).
 - c. For more information on maintenance safety, refer to *General Maintenance Instructions* (WP 0020 00).

END OF WORK PACKAGE

EQUIPMENT CHARACTERISTICS, CAPABILITIES, AND FEATURES1. **Characteristics.**

- a. The 130G Series Grader provides the Army with the capability of rough and finished grading, low and high bank sloping, flat and V-ditching, scarifying bituminous road mixes, and snow removal. Mission support role includes construction and maintenance of roads, airfields, hardstands, drainage, site preparation for pipeline, and river crossing.
- b. The 130G Series Grader has excellent maneuverability, fast, precise blade control without drift, superior visibility, convenience, and safety with true sit-down operation.

NOTE

Throughout this manual, some titles, callouts, and descriptions are followed by CCE Machine, Type I Machine, and/or Type II Machine in parentheses. This indicates that the statement only applies to that specific design. If a name is not shown, the statement applies to all designs.

- c. There are five models of the 130G Series Grader. See *Model Difference Chart* in this work package. The main difference between these models is two can be sectionalized (130GS and 130GSCE) and three cannot be sectionalized (130G, 130GNS, and 130GNSCE). Sectionalization is the process of separating the machine in two halves for the purpose of air transport. Refer to TM 5-3805-261-10 for sectionalization procedures.

2. **Capabilities and Features.****NOTE**

Refer to *Equipment Data* at the end of this work package for machine dimensions, weights, fluid capacities, and other miscellaneous equipment data.

- a. The 130G Series Grader can be transported by trailers, rail, aircraft, or marine vessels.
- b. The following is a list of capabilities and features:
 - (1) Caterpillar® 3304 turbocharged diesel engine with four in-line cylinders;
 - (2) sectionalization for air transport (only with models 130GS and 130GSCE);
 - (3) ether starting aid;
 - (4) single lever, full powershift transmission with six forward and six reverse speeds;
 - (5) Rollover Protection Structure (ROPS) or enclosed operator compartment with ROPS;
 - (6) V-type, front mounted scarifier;
 - (7) supplemental power steering;
 - (8) differential lock control to reduce wheel slippage when high traction is required;
 - (9) articulated frame and front wheel lean steering;
 - (10) Electronic Monitoring System (EMS);
 - (11) inching capability;
 - (12) 12-foot blade with manual and hydraulic side shift; and
 - (13) NATO slave receptacle.


MODEL DIFFERENCE CHART

NOTE

The following chart lists only the operational and visual differences between the five 130G Series models. Internal component differences are not shown in this chart.


	MODELS				
	CCE	TYPE I		TYPE II	
	130G	130GNS	130GNSCE	130GS	130GSCE
SECTIONALIZED				X	X
NONSECTIONALIZED	X	X	X		
ENCLOSED CAB	X				
REMOTE CONTROL ATTACHMENT				X	X
BLADE FLOAT FUNCTION	X				
SCARIFIER SHANKS STOWAGE RACK	X	X	X		
UPPER AND LOWER WINDSHIELDS	X				
WIPERS	X				
DEFROSTER FANS	X				
DOME LIGHT	X				
EXTERIOR MIRRORS	X				
HEATER	X				
CAB DOORS AND LATCHES	X				
SOUND SUPPRESSION PANELS	X				
CAB STORAGE COMPARTMENT	X				

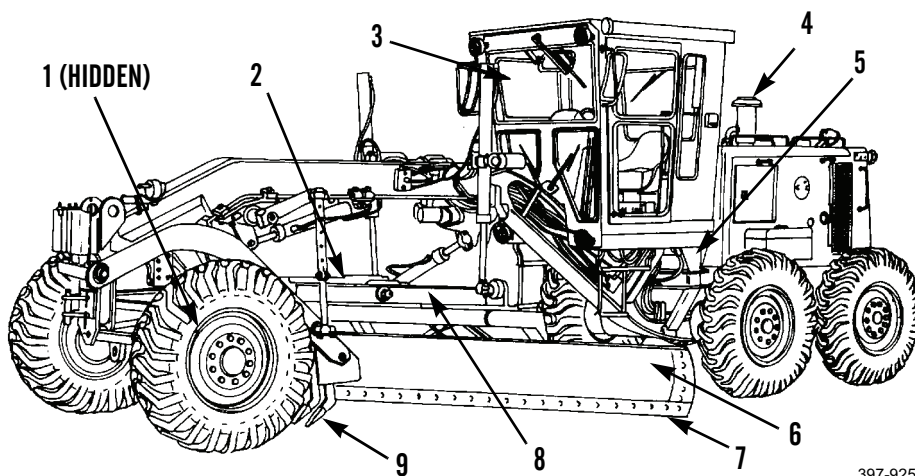LOCATION AND DESCRIPTION OF MAJOR COMPONENTS




KEY	COMPONENT	DESCRIPTION
1	Wheel Lean Lock Pin	When installed, locks wheel lean cross bar to the front axle.
2	Toolbox	Contains items listed on the Basic Issue Items (BII) list.
3	Operator Compartment (CCE Machine Shown)	Location of operator controls. Entry doors on both sides. Allows operator to be in the sitting or standing position while operating the machine.
4	Air Cleaner	Removes debris from air entering the engine.
5	Anti-Pivot Pin	Prevents the articulation joint from moving. Used during transportation.
6	Blade	Hydraulically controlled with replaceable cutting edges.
7	Cutting Edge	Replaceable edges of the blade.
8	Blade Circle	Mounting system for blade that provides 90 degrees of horizontal blade rotation in both directions.
9	Scarifier	Has eleven removable shanks used for breaking up material.

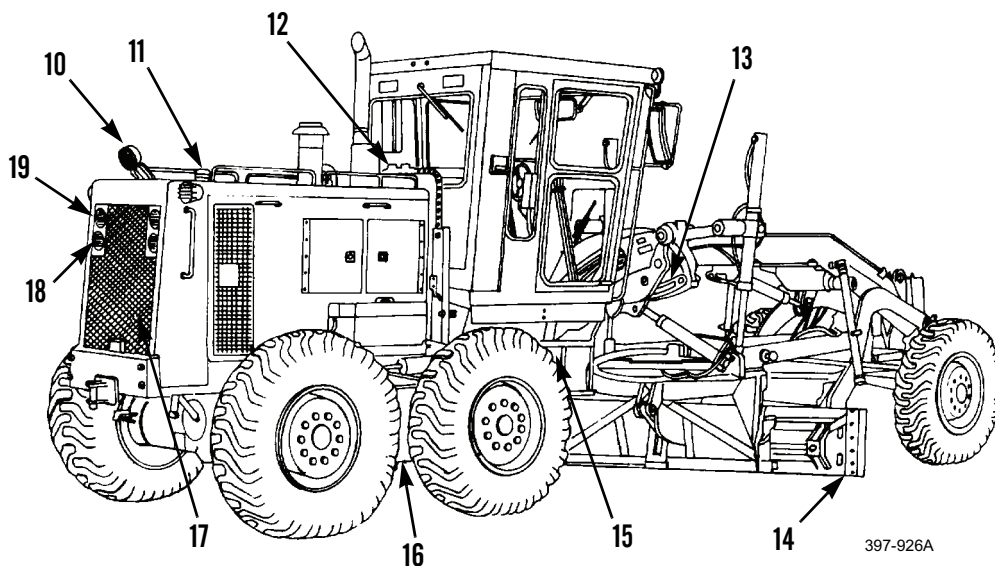LOCATION AND DESCRIPTION OF MAJOR COMPONENTS - CONTINUED



KEY	COMPONENT	DESCRIPTION
10	Rear Work Light	Provides light toward rear of machine.
11	Fuel Tank Fill Cap	Provides a means to fill fuel tank. Contains dipstick for fuel level check.
12	Hydraulic Tank Fill Cap	Provides a means to fill hydraulic tank.
13	Centershift	Allows center point of blade to be shifted outward to either side. Provides more blade reach.
14	End Bit	Replaceable outer edges of blade.
15	Fuse Box	Provides access to fuses.
16	Tandem Housing	Houses drive gears for tandem wheels.
17	Radiator	Stores and cools engine coolant.
18	Service Stop/Taillights	Turns on with service light switch and service brake pedal.
19	Parking/Turn Signals	Serve as parking lights and flash to indicate direction machine is turning.

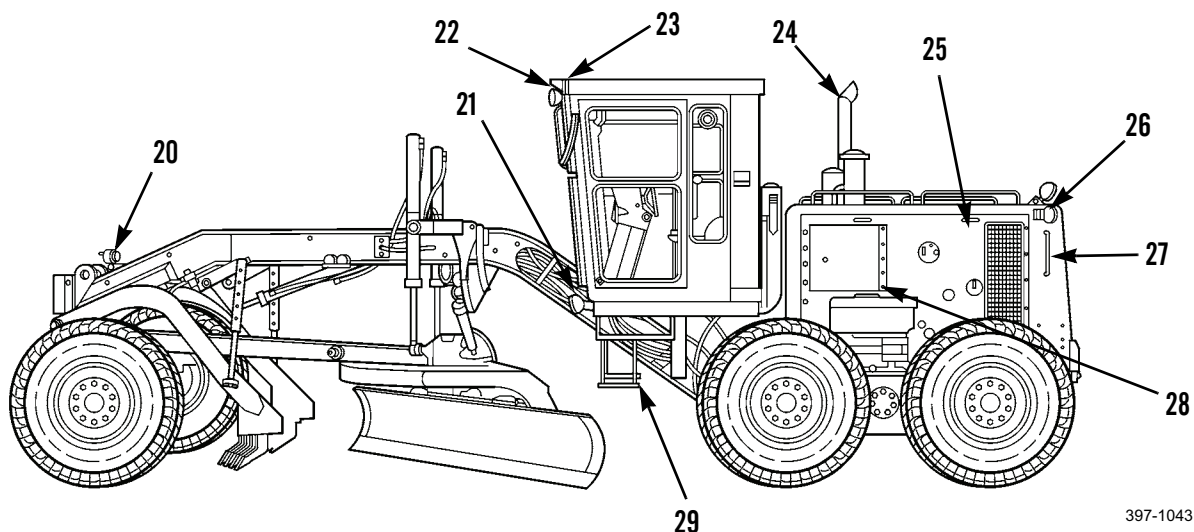
LOCATION AND DESCRIPTION OF MAJOR COMPONENTS - CONTINUED



397-1043


KEY	COMPONENT	DESCRIPTION
20	Blackout Driving Light	Used when operating in blackout mode.
21	Front Work Lights	Provide light in blade area.
22	Headlights	Provide light forward of machine.
23	Cab Turn Signals	Flash to indicate direction machine is turning.
24	Exhaust	Directs exhaust fumes to rear of machine.
25	Fuel Tank	Storage tank for diesel fuel.
26	Blackout Stop and Taillights	Used when operating in blackout mode.
27	Grab Handle	Provides a hand hold.
28	Left Side Engine Door	Provides access to left side engine compartment.
29	Steps	Provides foot holds for entry to operator compartment.

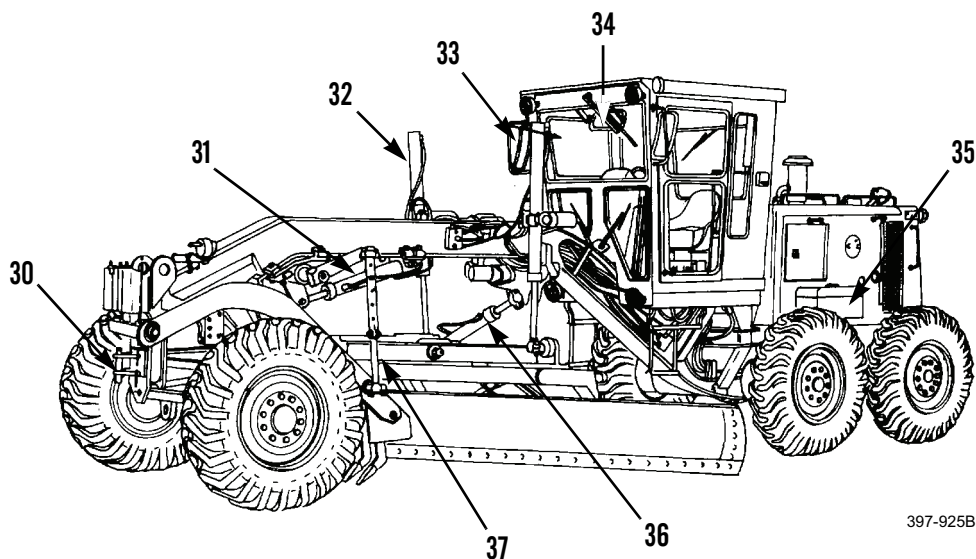LOCATION AND DESCRIPTION OF MAJOR COMPONENTS - CONTINUED



KEY	COMPONENT	DESCRIPTION
30	Front Towing Pin	Attachment point for towing.
31	Scarifier Hydraulic Cylinder	Raises and lowers the scarifier.
32	Blade Height Hydraulic Cylinder	Raises and lowers each side of blade independently.
33	Side View Mirror	Provides view toward rear and side of machine.
34	Front Wiper (CCE Machine)	Wipes windshield.
35	Battery Box	Houses battery.
36	Blade Swing Hydraulic Cylinder	Provides side to side blade adjustment.
37	Scarifier Link Rod	Link rod with adjustable height setting.

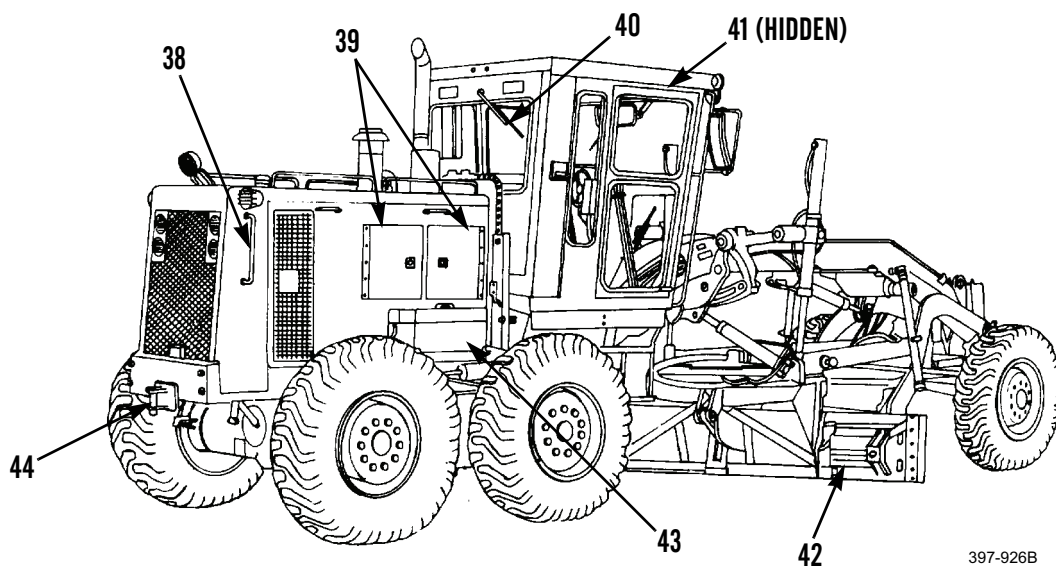LOCATION AND DESCRIPTION OF MAJOR COMPONENTS - CONTINUED



KEY	COMPONENT	DESCRIPTION
38	Grab Handle	Provides a hand hold.
39	Right Side Engine	Provide access to right side of engine compartment.
40	Rear Wiper (CCE Machine)	Wipes rear window.
41	Cab Fuse Block	Provides access to heater, wiper, and fan fuses.
42	Blade Slide Hydraulic Cylinder	Extends and retracts blade horizontally.
43	Battery Box	Houses battery.
44	Rear Towing Pin	Attachment point for towing.

EQUIPMENT DESCRIPTION AND DATA - CONTINUED

0002 00

EQUIPMENT DATA

Length:	
Overall	27.4 ft (8.35 m)
Power Section (Sectionalized)	10.5 ft (3.20 m)
Forward Section (Sectionalized)	19.6 ft (5.97 m)
Width:	
Overall	12.0 ft (3.66 m)
Wheel-to-Wheel (Outside)	7.95 ft (2.42 m)
Wheelbase	19.4 ft (5.91 m)
Height:	
Top of ROPS	10.1 ft (3.1 m)
Top of Exhaust Stack	10.5 ft (3.2 m)
Weight (GVW):	
CCE Machine	31,300 lb (14,197 kg)
Type I Machine	31,540 lb (14,306 kg)
Type II Machine	31,870 lb (14,456 kg)
Maximum Travel Speed	24.5 mph (39.4 kph)
Turning Width, Curb-to-Curb	48 ft (14.6 m)
Engine:	
Manufacturer	Caterpillar Inc.
Model	3304
Horsepower	135 hp (100.7 kW)
Engine RPM (Low Idle)	960-980 RPM
Engine RPM (High Idle)	2310-2370 RPM
Cylinders	4
Displacement	425 CID (6.9 L)
Fuel System	Direct injection
Cooling System, Thermostat Completely Open	175°F (79.4°C)
Transmission:	
Manufacturer	Caterpillar Inc.
Type	6 speeds forward, 6 reverse
Range Selection	Single lever, direct powershift
Front Axle:	
Type	Arched bar/solid steel
Ground Clearance	24 in. (610 mm)
Wheel Lean Angle	18 degrees left or right
Rear Axles:	
Type	Full floating/forged steel
Tandem Axle Spacing	5 ft (1.5 m)
Service Brakes:	
Type	4 wheel oil disc,
.....	Air actuated,
.....	Dual circuit air system,
.....	Non-adjustable
Parking Brakes:	
Type	Multiple oil disc,
.....	Located in transmission case,
.....	Spring engaged,
.....	Air disengaged

EQUIPMENT DESCRIPTION AND DATA - CONTINUED

0002 00

EQUIPMENT DATA - CONTINUED

Tires:

Type	Tubeless
Size	13.00-24 (10PR) traction type
Inflation	35 psi (241 kPa)

Steering:

Type	Hydraulic, Adjustable steering console
Turning Radius	24 ft (7.3 m)
Supplemental Steering	Electric

Capacities:

Fuel Tank	75 gal. (284 L)
Radiator	10 gal. (38 L)
Engine Crankcase	5.5 gal. (21 L)
Hydraulic System	18 gal. (68 L)
Transmission and Final Drive	21 gal. (79 L)
Tandem Housing (Each)	17 gal. (64 L)

Electrical System:

Batteries:

Quantity	2
Voltage (Each)	12 volts
System Voltage	24 volts

Blade Range:

Circle Centershift:

Right	20.5 in. (521 mm)
Left	25.5 in. (648 mm)

Blade Sideshift:

Manual:

Right	15 in. (381 mm)
Left	None

Hydraulic:

Right	26.5 in. (673 mm)
Left	20.5 in. (521 mm)

Blade Lift (Maximum) 17.25 in. (438 mm)

Blade Shoulder Reach (Maximum):

Frame Straight	6.125 ft (1.9 m)
Crab Position	9.21 ft (2.8 m)

Maximum Depth of Cut 17.75 in. (451 mm)

Hydraulic Blade Tip:

Forward	40 degrees
Rearward	5 degrees

END OF WORK PACKAGE

130G SERIES GRADER

The 130G Series Grader is an all-purpose, medium sized, wheeled machine used for spreading and evening various types of granular material (dirt, stone, sand, etc.). Power is by a Caterpillar in-line, four-cylinder, direct-injected, turbocharged and intercooled diesel engine. Hydraulically operated implements allow blade positioning for forward or backward grading, ditch or embankment grading and snow removal. A scarifier allows loosening of compacted material prior to grading. Front leaning wheel and frame articulation provide maximum maneuverability. The CCE and Type I machines have sound-suppressing ROPS cab with insulation, heater, and windows which allows for all-weather operation.

The machine is made up of the following systems:

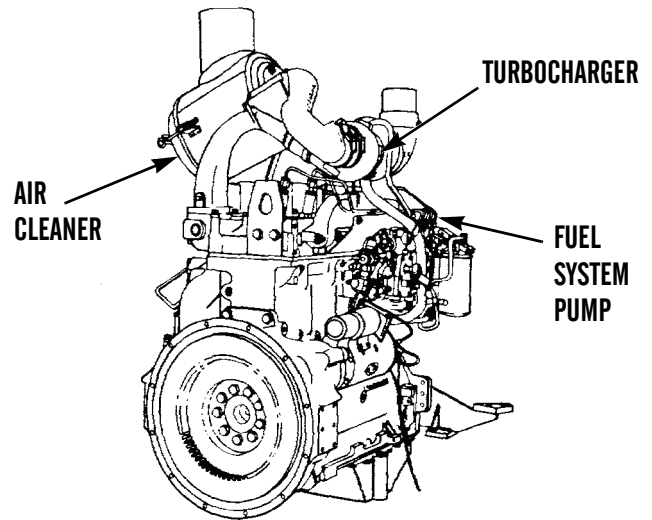
- a. **Engine.** The turbocharged engine is an internal combustion power unit. The engine uses the heat of compression to ignite the fuel. Fuel flow and engine speed are controlled by the fuel injection pump governor and fuel injectors.
- b. **Fuel System.** Fuel is drawn from the tank by a fuel transfer pump, filtered by a primary fuel filter, routed to the secondary filter and fuel injection pump and then injected through the fuel injector nozzles into the engine cylinders. Air is drawn in through dry type replaceable filter elements. A dust ejector removes incoming dust from the air and routes it out through the exhaust system.
- c. **Exhaust System.** Engine combustion by-products are channeled through the exhaust manifold, muffler, and exhaust pipe. The muffler aids in quieting engine noise.
- d. **Cooling System.** Provides coolant to the engine. Coolant is circulated through the engine by a gear driven water pump. Hydraulic oil cooler is located in front of the radiator. Engine and transmission oil coolers are mounted on the left side of the engine.
- e. **Electrical System.** The 24-volt system with negative ground is powered by two 12-volt batteries connected in series. Alternator is mounted on the engine and is driven by a V-belt. Battery disconnect switch controls battery power to the main light switch and the starting motor. A back-up alarm is also included.
- f. **Transmission.** Six speeds are provided in both forward and reverse. A transmission modulator places the transmission in neutral. Another foot pedal provides limited (slow) movement for close quarter maneuvering.
- g. **Final Drive Assembly.** Axle shafts turn the planetary gears of the final drive. Final drive sprockets turn the rear wheel spindles through drive chains within the tandem axle housings.
- h. **Front Axle Assembly.** A trunnion mounted solid front axle swings a maximum of 32 degrees and provides 24 in. (61 cm) of ground clearance.
- i. **Rear Axle Differential and Lock Differential.** A four-wheeled tandem rear axle arrangement houses axle shafts driven by a lock-unlock equipped differential. The axle shafts turn the final drive sprocket chains through planetary reduction gears. The sprocket chains then drive the sprocket spindles and wheels.
- j. **Air Brake System.**
 - (1) The rear four-wheel brakes are air actuated and of multiple oil disc design. They are housed within the wheel spindle housings. A pedal operated valve at the cab controls the braking air pressure. An engine driven, two cylinder air compressor supplies a two section air reservoir to provide braking pressure.
 - (2) The manually actuated multiple oil disc parking/emergency brake located in the transmission case is spring engaged and air disengaged. A dual circuit air system arrangement maintains one half of the service braking power in the event of a brake system circuit malfunction. If service brakes are lost, the parking/emergency brake can be applied.
- k. **Wheels and Tires.** Tire and wheel assemblies are interchangeable. There are six tubeless 13.00-24 (10 PR) traction type tires.
- l. **Steering.** The engine driven main hydraulic system pump powers two hydraulic steering cylinders, controlling the front wheels. An electrical supplemental steering pump is automatically actuated and supplies power for steering in the event that the main pump fails. The articulated cylinders are driven by the main hydraulic pump.

130G GRADER - CONTINUED

- m. **Frame, Towing Attachments, Drawbars, and Articulation System.** A frame and case at the rear section of the machine serves as a mounting for the engine, rear wheels, and drive train. A front frame section serves as a mounting for the cab, earthmoving components, and front wheels. The two sections are articulated (hinged) at the center of the machine. The angle of articulation is controlled by hydraulic cylinders driven by the main hydraulic pump. There is a tow pin at each end of the machine.
- n. **Cab and Hood.** A low profile ROPS (Rollover Protective Structure) cab protects operator from dust, sound, and weather. It also houses the controls and instrumentation. An engine and radiator hood with side door assemblies provides sound suppression and weather protection.
- o. **Bumper.** One bumper equipped with a towing pin is located at the rear of the machine.
- p. **Body, Chassis, and Hull Accessory Items.** Selected accessory items are windshield wipers, windshield washers, horn, side mirrors, defrosting fan, and heater.
- q. **Hydraulic System.** A main hydraulic pump driven by the engine provides power for steering and earthmoving equipment operation. A battery powered hydraulic supplemental steering pump provides emergency steering power.
- r. **Nonelectrical Gauges, Indicators, and Dipsticks:**
- (1) **Air Cleaner Indicator.** Indicator is mounted at the right side of the engine on the air inlet pipe elbow between the air filter and the turbocharger. When it shows red, the cleaner elements need cleaning or replacing.
 - (2) **Air Pressure Gauges.** Gauges are mounted in a small instrument panel at the upper-right hand forward section of the engine hood. They indicate amount of air pressure in each section of the air tank.
 - (3) **Articulation Indicator.** Indicator is mounted at the top of the steering console. It shows how far from the straight position the frame has been pivoted.
 - (4) **Centershift Indicator.** Indicator is mounted at the right hand centershift pivot point. It guides operator in moving centershift lock pin to new position.
 - (5) **Coolant Level Indicator.** Indicator is located within the radiator coolant fill opening. It maintains coolant level between the low and full coolant level indicator marks in the filler opening.
 - (6) **Hydraulic Reservoir Sight Gauge.** Gauge is positioned half way up the left side of the hydraulic reservoir which is located directly to the rear of the cab.
 - (7) **Tandem Housing Dipstick Assembly.** Dipstick is located on top of forward ends at tandem housings.
 - (8) **Engine Oil Dipstick Assembly.** Dipstick is located at the left side of the engine.
 - (9) **Transmission and Differential Dipstick Assembly.** Dipstick is located inside of left-rear engine hood access door.
 - (10) **Fuel Level Dipstick.** Dipstick is located within the fuel fill opening.
- s. **Blade.** Hydraulically controlled side shift, tip, centershift, circle and blade float with additional manually adjusted sideshift. The drawbar is attached to a ball joint at the front of the machine.
- t. **Scarifier Assembly.** Assembly is located forward of the blade. It is hydraulically raised and lowered, and the drawbar attaches to the front of the machine.


ENGINE

1. The Caterpillar 4-stroke cycle 3304 turbocharged diesel engine has four cylinders. The direct injection Caterpillar fuel system utilizes individual nonadjustable injection pumps and valves. A dry type air cleaner has primary and secondary elements.



397-005

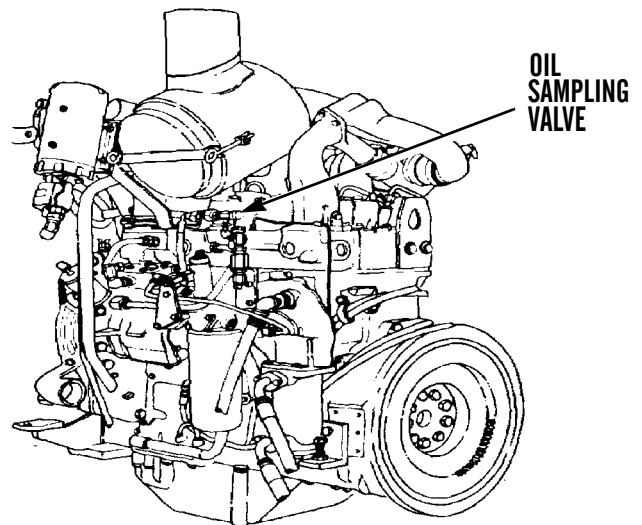2. Pressure lubrication is with full flow filtered oil and oil cooler. An engine oil sampling valve is mounted at the left side of the engine on the intake manifold.




397-006

3. JP-8, or no. 1 or no. 2 fuel, may be used to power this engine.


FUEL SYSTEM**NOTE**

Fuel system schematics are located in WP 0352 00.

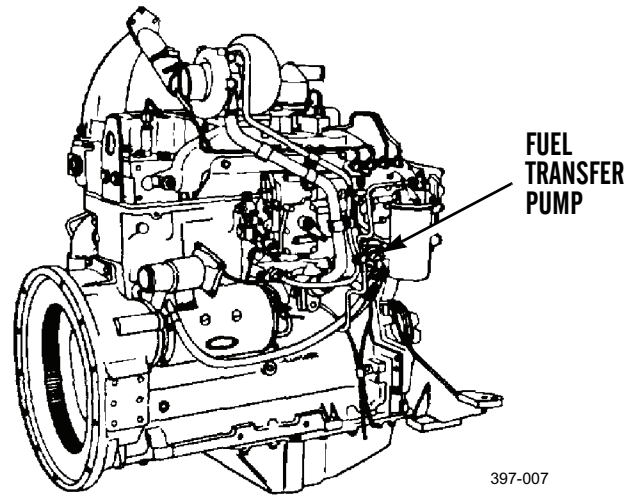1. **Fuel Injector Nozzles.** Four nozzles are mounted on cylinder head. Nozzles are closed end, differential pressure, hydraulically operated, and hole type.
2. **Fuel Transfer Pump.** The fuel transfer pump is mounted on the fuel injector pump at forward, right side of engine; it is cam-operated. The fuel transfer pump draws fuel from fuel tank through inline primary fuel filter and pushes it through secondary filter to the individual fuel injectors.



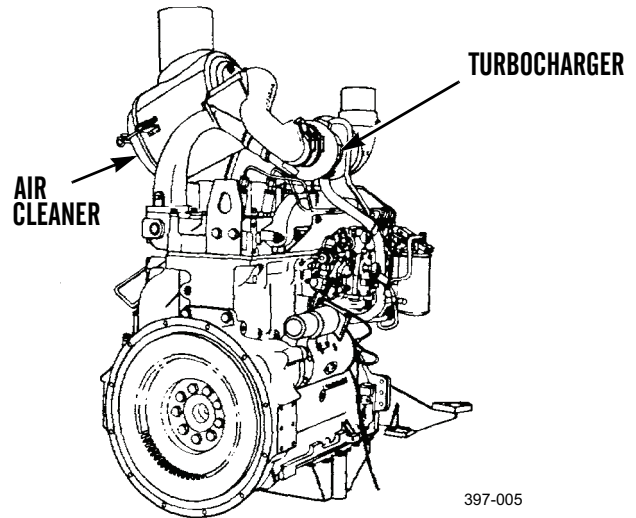
3. **Air Cleaner.** Dry type air cleaner filters air before it is applied to the inlet manifold by the turbocharger. It is mounted at top of engine and projects upward through the hood. Dust is drawn from incoming air through dust ejector line attached to exhaust system.
4. **Turbocharger.** The turbocharger is mounted on top of engine on right side. It forces incoming air under pressure into the inlet manifold to raise engine efficiency.




5. **Fuel Tank.** Tank has a 75 gal. (284 L) capacity. It is mounted at rear of machine between the engine and the radiator.
6. **Fuel Injector Pump.**
 - a. Fuel from primary fuel filter flows to gear driven fuel injection pump. Fuel is again filtered, then metered accurately and applied to each cylinder at high pressure through fuel injector nozzles. The fuel is delivered at precisely timed intervals.
 - b. The throttle control lever controls fuel metering through a cable connection. This also attaches to an accelerator pedal. The centrifugal speed regulating governor is located within the fuel injector pump housing.

FUEL SYSTEM - CONTINUED

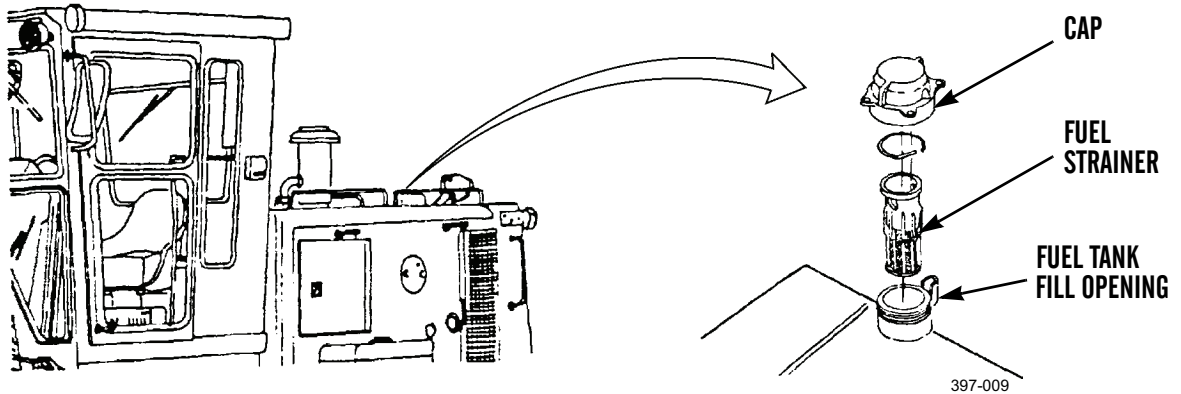7. **Fuel Filters.** Primary fuel filter is mounted on the fuel tank. Secondary filter is mounted on the fuel injector pump housing. Primary and secondary fuel filters remove fuel impurities which may damage the fuel injector pump and/or nozzles.
8. **Fuel Strainer.** Strainer is located in fuel tank fill opening. It prevents passage of foreign material into the fuel tank.




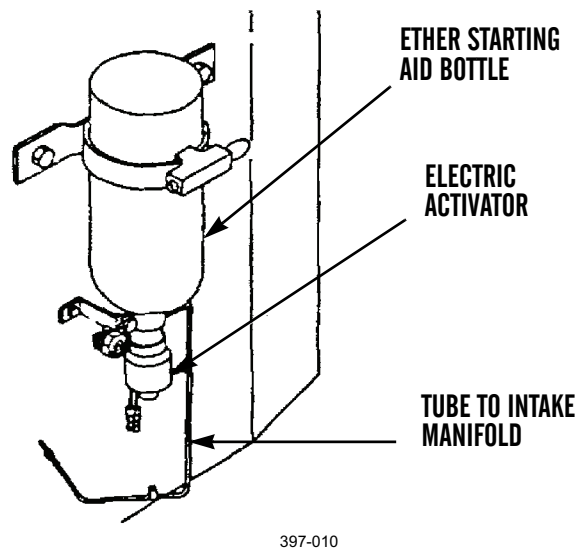9. **Ether Aid Cold Start Kit.** The ether starting aid bottle and operator controlled electric activator are mounted on rear surface of fuel tank toward the right side of the machine. Ether is injected through a tube attached to the intake manifold. Temperature sensitive automatic closure switch mounted on water pump prevents ether aid use above 32°F (0°C).



EXHAUST SYSTEM

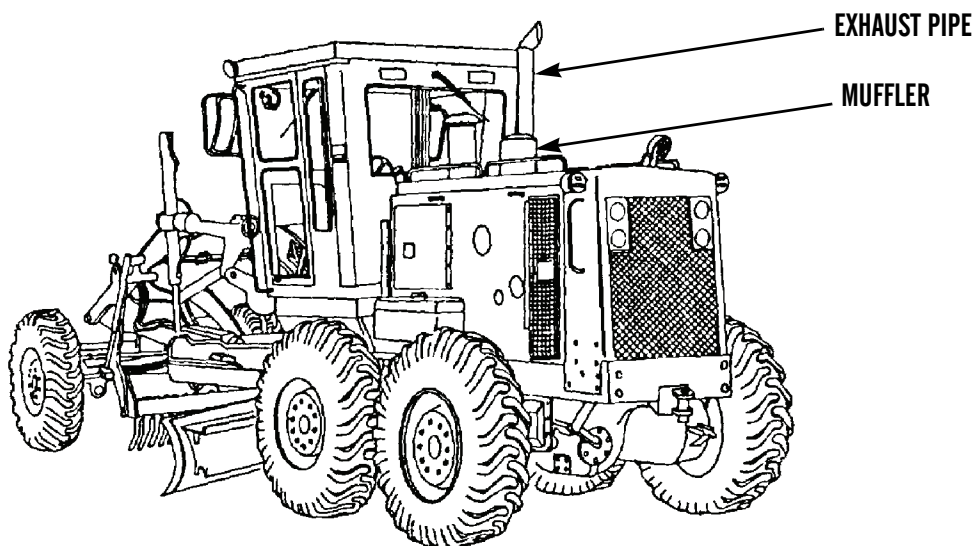
1. **Muffler.** Muffler is mounted on top of engine at turbocharger outlet and projects upward through hood. It reduces engine exhaust noise. Dust ejector line from air cleaner is attached to bottom of muffler.
2. **Exhaust Pipe.** Pipe is attached to muffler. It projects upward to carry exhaust fumes away from the machine.



397-011

COOLING SYSTEM

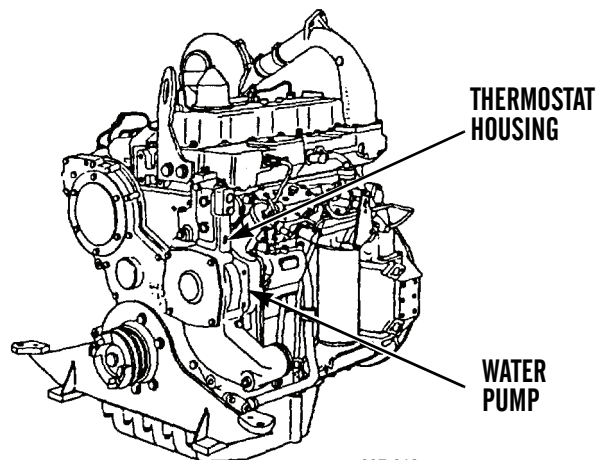
1. **Radiator.** Radiator is mounted at rear of machine. It transfers heat from coolant to air.
2. **Thermostat Housing.** Housing is mounted on cylinder head at left front of engine. Thermostat (water temperature regulator) inside housing opens at 175°F (79°C). Housing also serves as coolant hose connection.
3. **Water Pump.** Pump is mounted on forward left-lower section of engine, and is gear driven by engine. Water pump propels coolant through the cooling system.




397-012

COOLING SYSTEM - CONTINUED

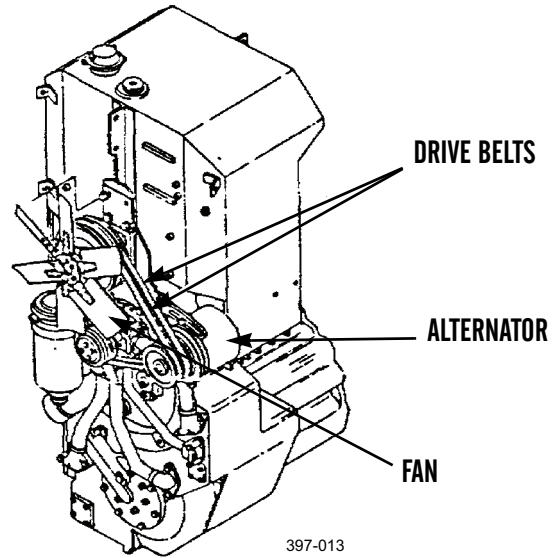4. **Hoses.** Upper hoses and lines route coolant from the cylinder head coolant outlet into the upper section of the radiator. Lower hoses and lines supply radiator coolant, which is pushed through the cylinder block by the water pump.
5. **Fan.** Fan is mounted on fan drive assembly located between fuel tank and radiator.
6. **Drive Belts.** Dual belts are mounted so that fan drive and alternator are driven by the transmission oil pump pulleys.




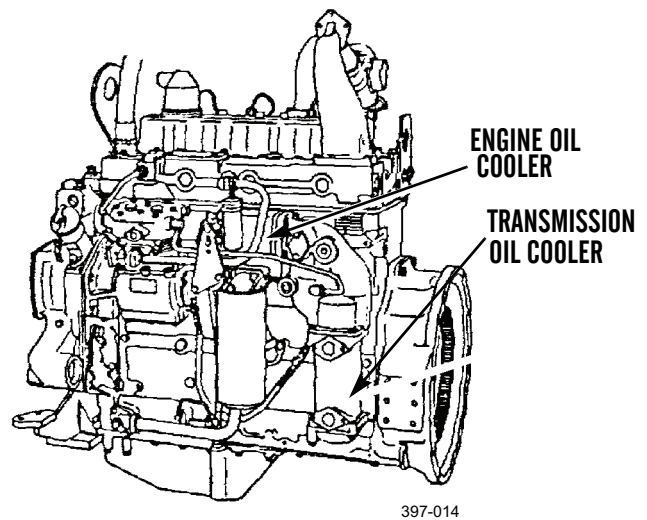7. **Engine Oil Cooler.** Engine oil cooler is mounted horizontally along left side of engine. Engine coolant flows through the unit to remove heat from the engine oil.
8. **Transmission Oil Cooler.** This oil cooler is mounted vertically along left side of engine. Engine coolant flows through the unit to remove heat from the transmission oil.



COOLING SYSTEM - CONTINUED

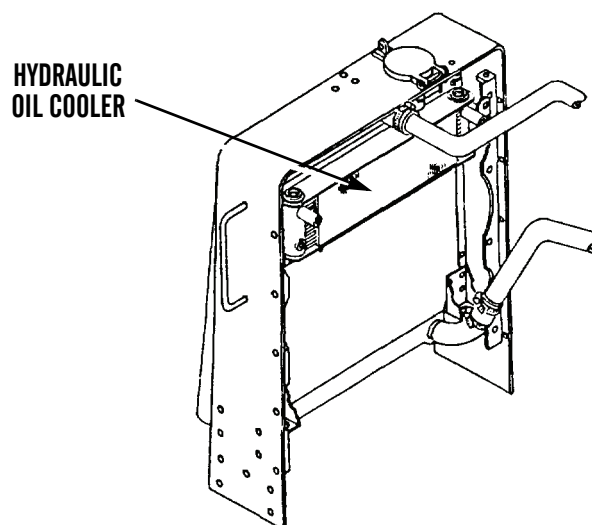
9. **Hydraulic Oil Cooler.** This oil cooler is mounted at the upper-forward surface of the radiator. Air passing through the cooler removes heat from the hydraulic system oil before it returns to the hydraulic oil reservoir behind the cab.



397-015

ELECTRICAL SYSTEM

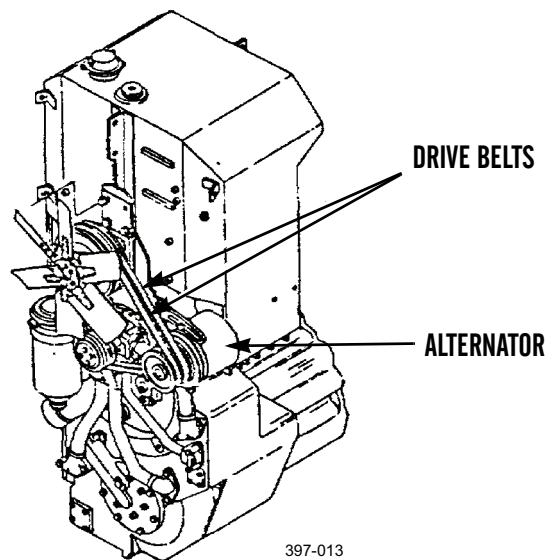
1. **Alternator.** The alternator has 50-ampere rating. It is belt driven by transmission oil pump pulleys. The alternator charges batteries and supplies current for additional electrical power. A voltage regulator is located behind the end cover.
2. **Drive Belts.** Belts are driven by transmission oil pump pulleys. The oil pump is driven by the engine crankshaft.




397-013

ELECTRICAL SYSTEM - CONTINUED

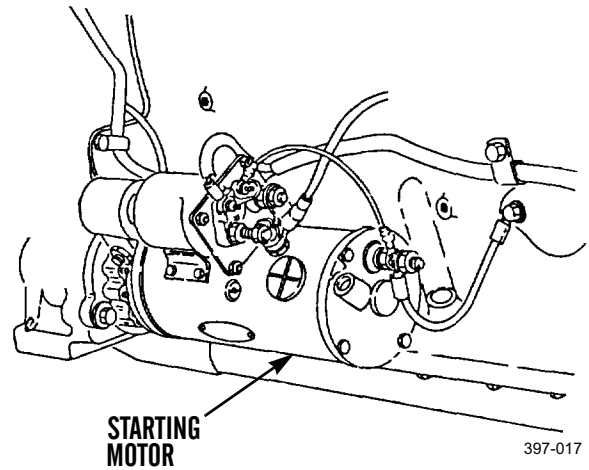3. **Starting Motor.** Electric motor has an overrunning clutch. Solenoid is mounted on starter with engaging mechanism enclosed in the housing.



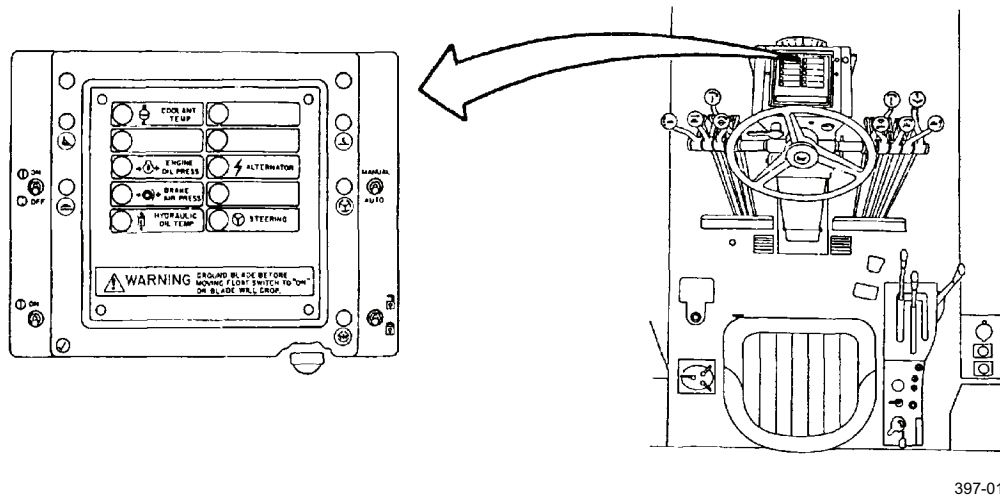
4. **Electronic Monitoring System (EMS) Panel.** EMS panel is mounted at top of steering console in cab. It contains warning and operating indicators for hydraulic, electric, and mechanical systems. EMS panel is used in place of conventional instrument panel. Refer to TM 5-3805-261-10 for further information.



ELECTRICAL SYSTEM - CONTINUED

5. **Lights.**

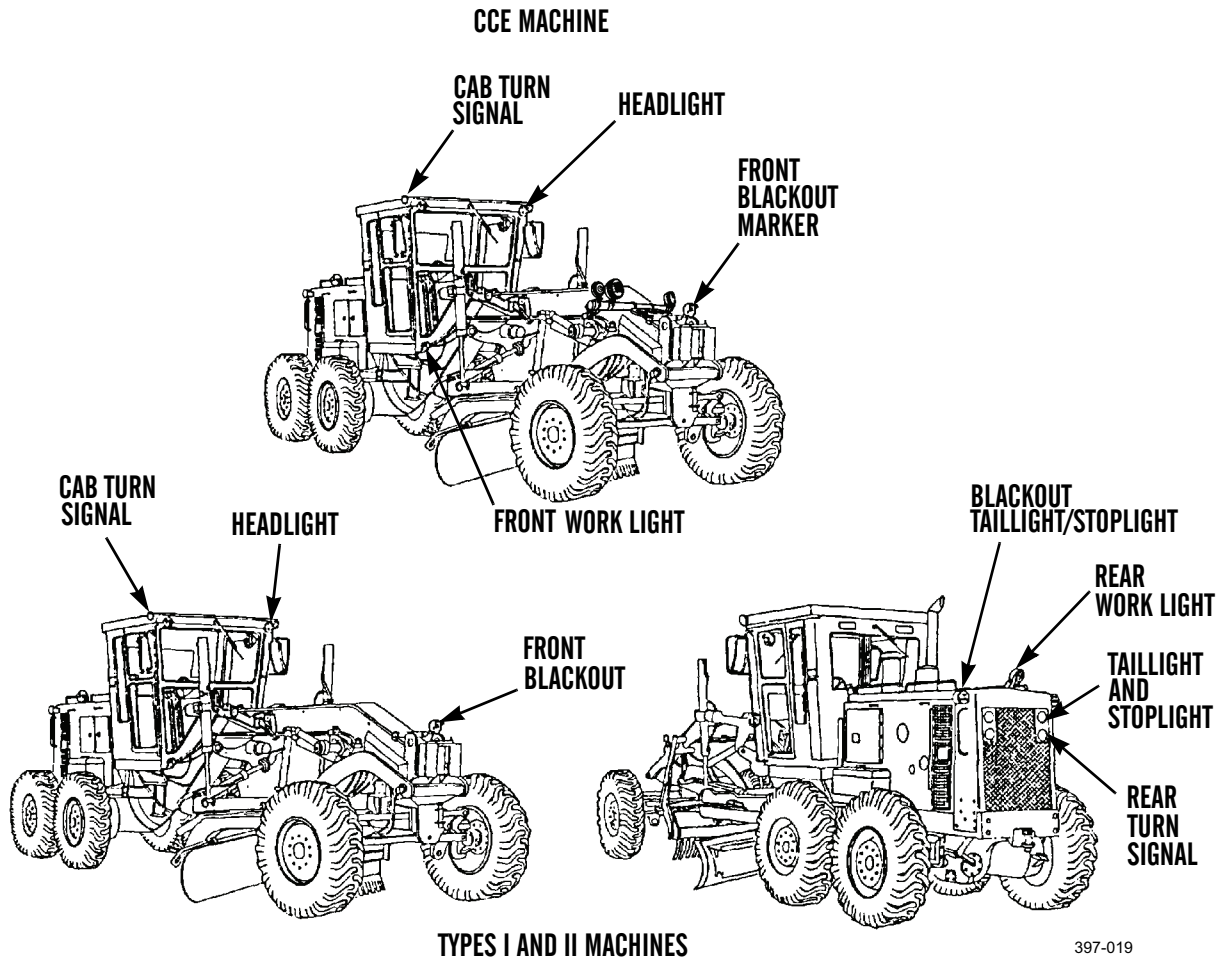
- a. Mounted forward on the cab are two lower work lights, two upper headlights, and two turn signals. One blackout light is mounted far forward on the frame. Mounted at the rear of the engine hood are one work light, two stop and taillights, two blackout stop and taillights, and two turn signals.
- b. Front and rear work lights are controlled by individual switches mounted on the operator's panel console. Operation of other lights is controlled by a machine light switch assembly mounted at the left of the driver's seat. The headlight dimmer switch is mounted in the cab floor toward the left of the steering console. It is foot operated. Refer to TM 5-3805-261-10 for light control operation.



397-019


ELECTRICAL SYSTEM - CONTINUED

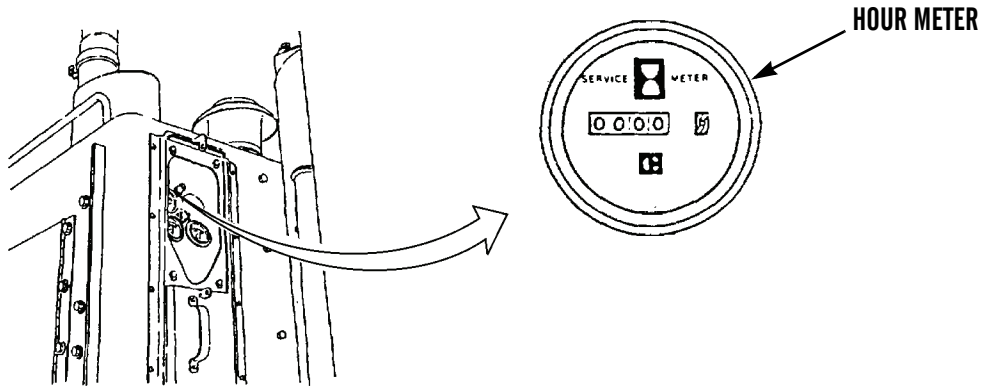- 6. **Hour Meter.** Meter is mounted at a instrument panel in right-front vertical section of engine hood assembly. It registers engine hours and is used to determine service intervals. Electrically driven by an oil pressure actuated switch.
- 7. **Sending Units.**



397-020


SENDING UNIT	LOCATION
Right side brake circuit air pressure for EMS panel	Brake pedal treadle valve
Left side brake circuit air pressure for EMS panel	Brake pedal treadle valve
Stoplight switch	Brake pedal treadle valve
Blackout stoplight switch	Brake pedal treadle valve

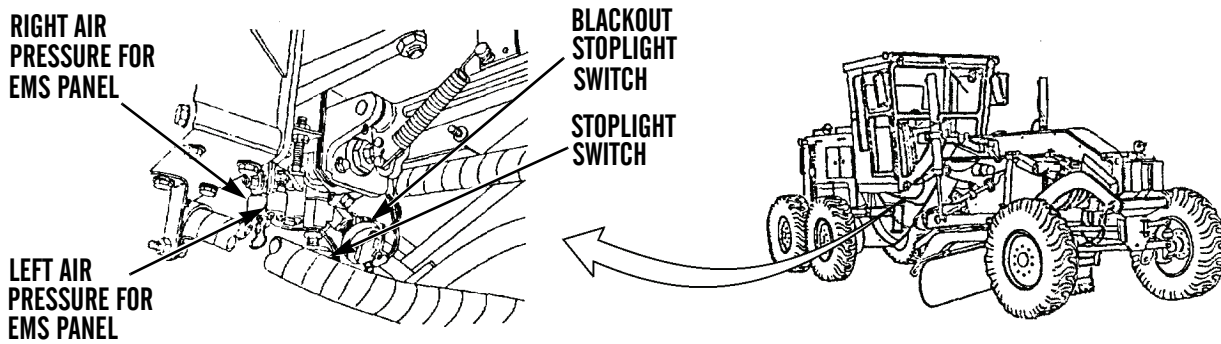


397-021

ELECTRICAL SYSTEM - CONTINUED

SENDING UNIT	LOCATION
Oil pressure switch for hour meter	Left side center of engine block
Oil pressure switch for EMS panel	Left side center of engine block

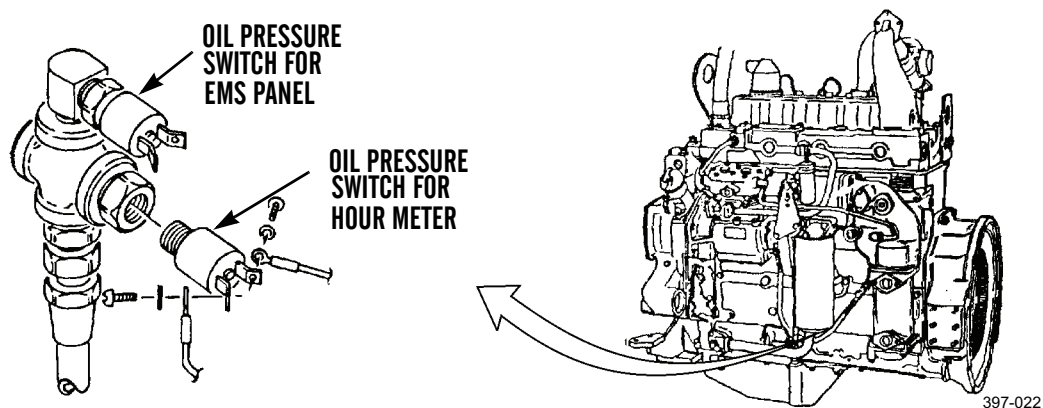


SENDING UNIT	LOCATION
Ether starting aid temperature switch	Engine left side on water pump
Coolant temperature fault indicator switch	Engine left side on water pump

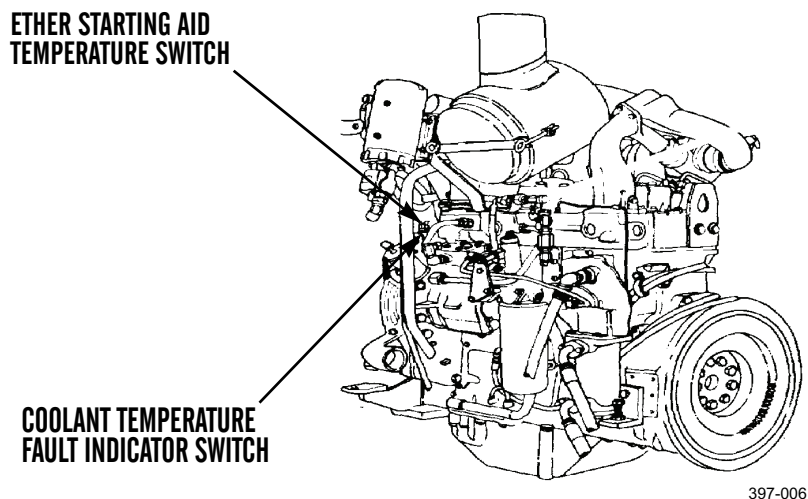

ELECTRICAL SYSTEM - CONTINUED

SENDING UNIT	LOCATION
Supplemental steering sensor	Right side combination valve

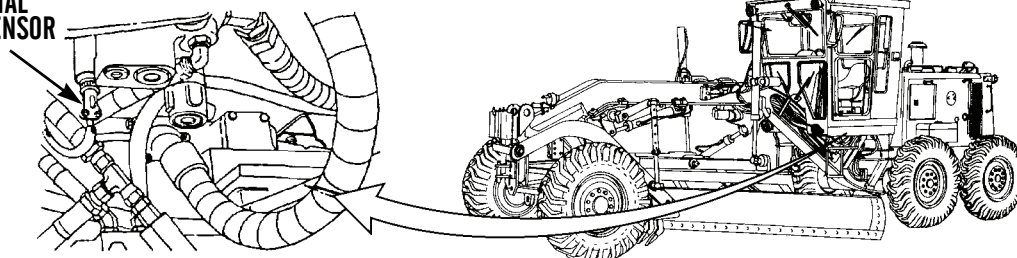
SUPPLEMENTAL STEERING SENSOR



397-024

SENDING UNIT	LOCATION
Hydraulic oil temperature switch	Right side of hydraulic reservoir

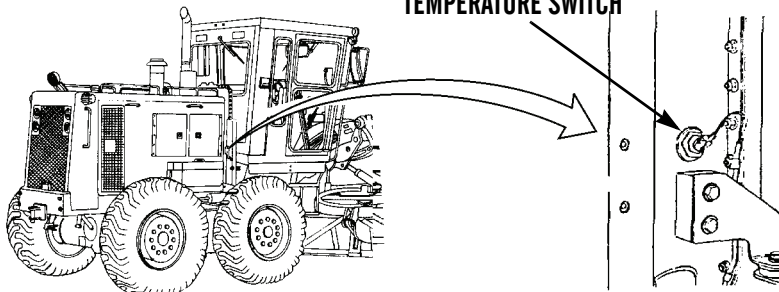
HYDRAULIC OIL TEMPERATURE SWITCH



397-025


ELECTRICAL SYSTEM - CONTINUED

SENDING UNIT	LOCATION
Fuel pressure switch for master fault light and alarm	Engine right front on assembly fuel filter

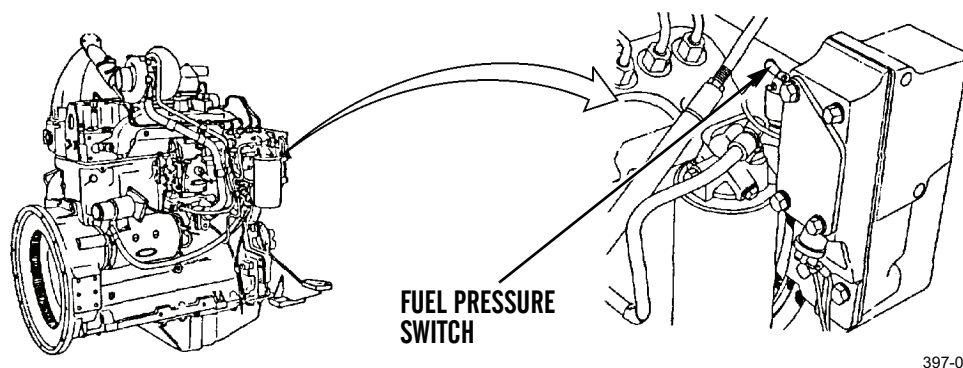

397-026

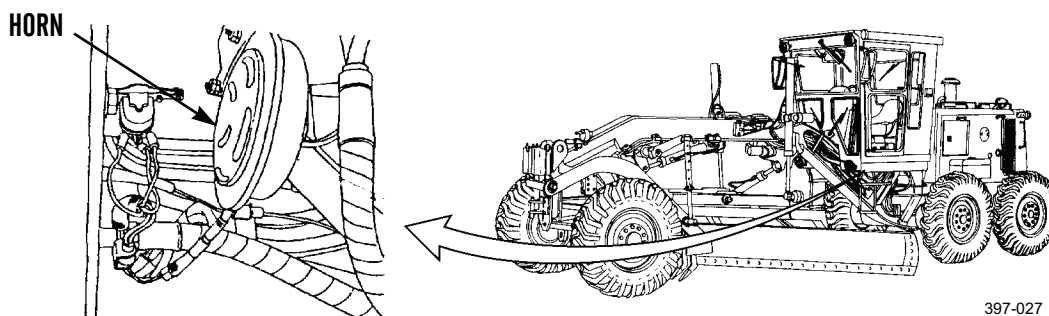
8. **Horn and Horn Switch.** 24-volt horn unit is located under the cab. Horn switch at center of steering wheel applies voltage to horn when horn button is depressed. Light switch must be on to activate horn system.



397-027


ELECTRICAL SYSTEM - CONTINUED

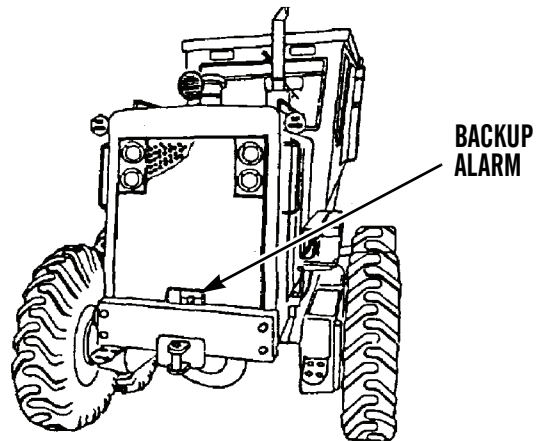9. **Backup Alarm.** Alarm unit is mounted on upper surface of rear bumper. Alarm is activated by a magnet when transmission is placed in reverse. Volume adjustment is mounted on the back of the alarm unit.



397-028

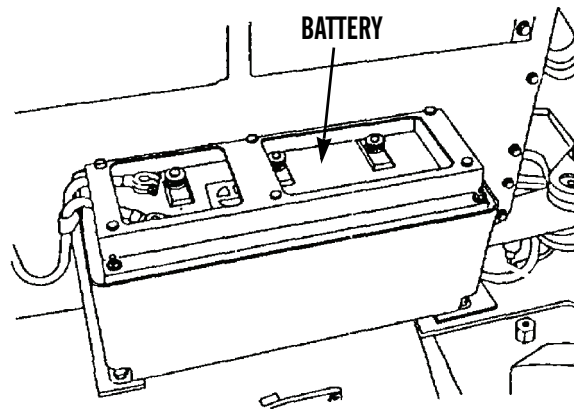
10. **Batteries.** Two 12-volt batteries are used. Battery is enclosed in a battery box. One battery box is mounted at each side of the engine hood. Batteries are connected in series to provide 24 volts of power.




397-029

TRANSMISSION

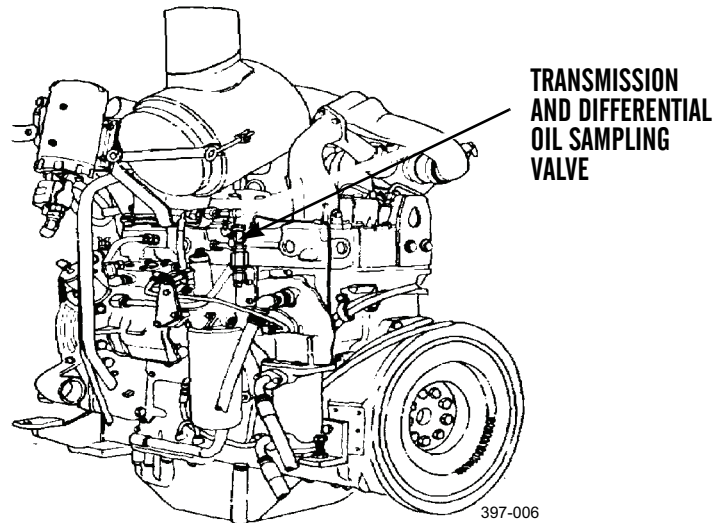1. The transmission is attached to the rear of the engine. Engine power enters the upper (forward and reverse) section of the transmission. It is transferred to the lower (six speeds) planetary section and then forward into the differential and outward to the final drives. No torque converter is used.
2. A transmission and differential oil sampling valve is mounted vertically on the transmission oil cooler bonnet.


**FINAL DRIVE ASSEMBLY**

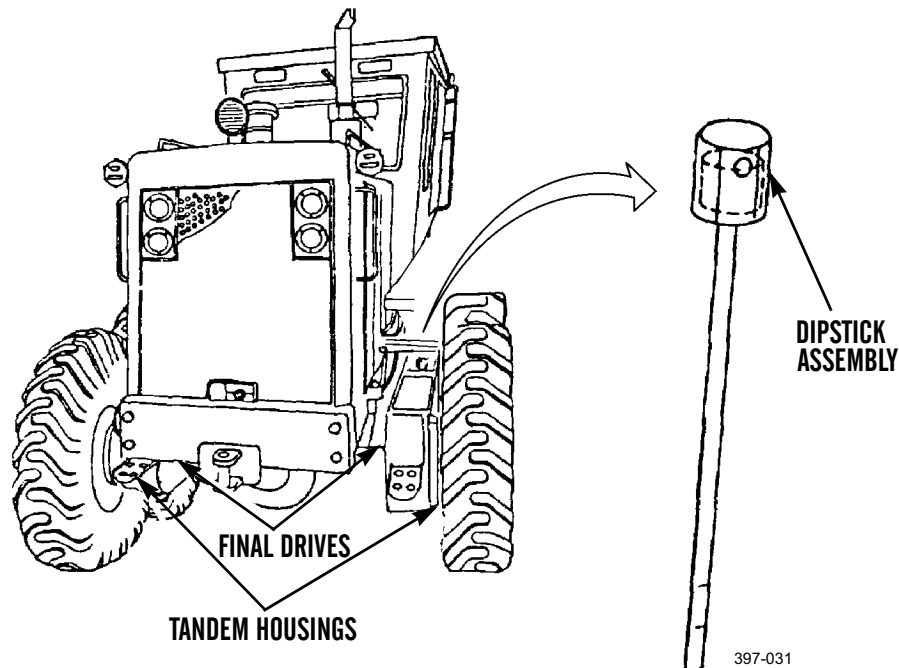1. The final drives are mounted at each side of the differential and provide planetary gear reduction for the chain driven sprockets and wheel spindles within the tandem housings.
2. A dipstick assembly and breather are provided at each tandem housing to check the chain and sprocket oil supply.



FRONT AXLE ASSEMBLY

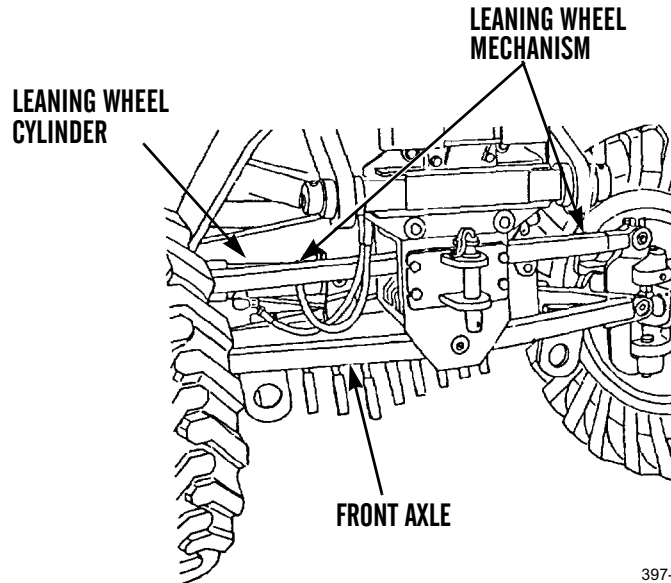
1. The front axle provides mounting for hydraulically actuated steering and leaning wheel mechanism components.
2. The front leaning wheel serves to counteract sideward pressure caused by the blade and allows for the other grading conditions.



397-032

REAR AXLE/DIFFERENTIAL AND LOCK DIFFERENTIAL

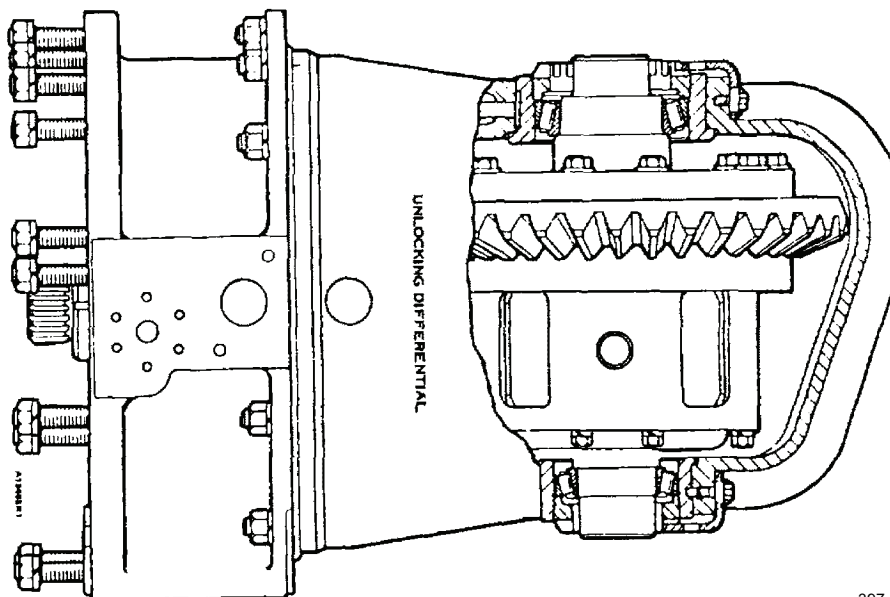1. The differential is mounted to the forward lower section of the transmission. It provides gear reduction and transfers power through the final drives to the rear wheels at each side of the machine. It allows power to be transmitted equally to both sides even though the wheels on one side are moving more slowly when the machine is turning.
2. A differential lock-unlock feature includes a hydraulic valve that operates a clutch, which causes drive wheels at both sides to travel at the same speed and pull evenly to reduce slippage.




397-033

AIR BRAKE SYSTEM**NOTE**

Air brake system schematics are located in WP 0352 00.

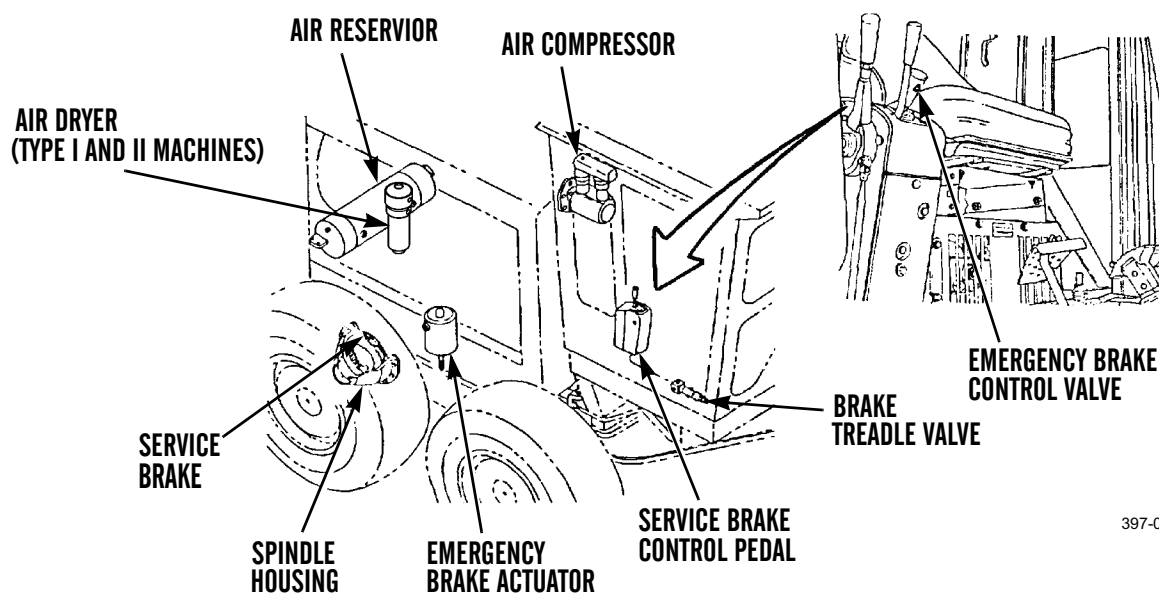1. **Air Compressor and Reservoir.** A gear driven, two cylinder air compressor mounted at the left forward side of the engine provides air pressure for the service brakes. A dual section air reservoir is connected by air lines and mounted under the rear of the machine. A governor controls the pressure. On Type I and Type II machines, an air dryer is mounted above the battery box on the right side.



397-034

2. **Service Brakes.** A foot pedal operated air valve in the cab directs air pressure through air lines for engaging multiple oil disc brake assemblies for each wheel, within the tandem and spindle housings.
3. **Parking/Emergency Brake.** Multiple oil disc type parking/emergency brake is located in the transmission case. It is manually actuated by forward movement of red lever on transmission control console. Lever engages parking brake and activates transmission neutral lock to prevent machine movement. Brake is spring engaged and air disengaged. Brake can be used for emergency stopping if air supply fails.
4. **Emergency Braking.** Dual air system provides separate circuit at each tandem for safety. Malfunction of one circuit leaves remaining circuit with at least half of original braking capacity.
5. **Blade Centershift Lock Pin.** Though not part of the air brake system, the centershift lock pin is mentioned here because it also is operated by the air supply from the air brake system. The centershift lock pin is part of the blade system. Refer to *Blade System* in this work package for its location.

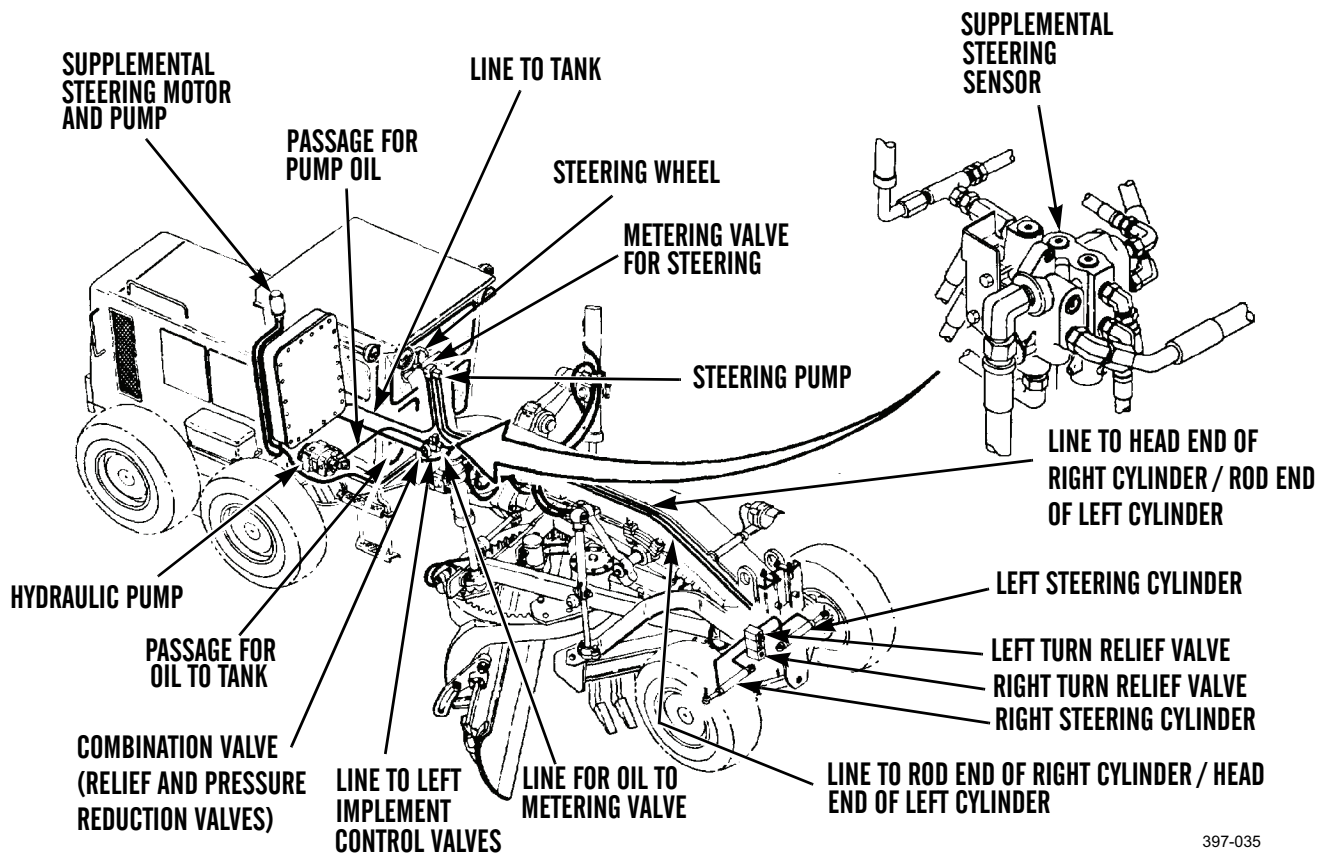
WHEELS AND TIRES

The six interchangeable tire and wheel assemblies are each mounted to the wheel spindle flanges. Ten lug nuts are used to mount each wheel. Refer to WP 0002 00 for tire specifications.

STEERING

1. **Steering.**

- a. An engine driven, variable displacement pump mounted under the cab provides hydraulic flow for the steering. Refer to *Hydraulic System* in the work package. The steering wheel actuates a small hydraulic pump directing oil to the two steering cylinders which steer the front wheels. An adjustable relief valve assembly is mounted at each side of the chassis above the front axle. Also, refer to *Front Axle Assembly* in this work package for location of hydraulic cylinders at front axle.
- b. When the steering wheel is not being turned, the oil in lines and cylinders cannot move and the front wheels stay in position. If the side of one of the front wheels hits a obstruction (material that will not move), the positions of the front wheels will move. The force on the side of the wheel causes an increase in the pressure of the oil in the cylinders and in one of the lines to the cylinders. When the pressure of the oil in the line gets to 1,700 psi (11,721 kPa), the relief valves opens. The high pressure oil in the line goes through the open relief valve and into the other line to the cylinders. This lets the position of the front wheels change.




397-035

2. **Supplemental Steering.**


- a. This system provides hydraulic oil flow to the steering if the engine fails or implement hydraulic flow is lost while the machine is operating. The main components are the electrically driven motor/pump mounted in the engine compartment, and a sensor mounted on the hydraulic combination valve. Refer to *Hydraulic System* in this work package.
- b. The sensor activates the motor/pump when pressure is lost in the hydraulic system. A switch on the engine governor prevents automatic activation of the motor/pump during normal engine shutdown. A switch on the panel activates the system for testing or for use during towing.

FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEM

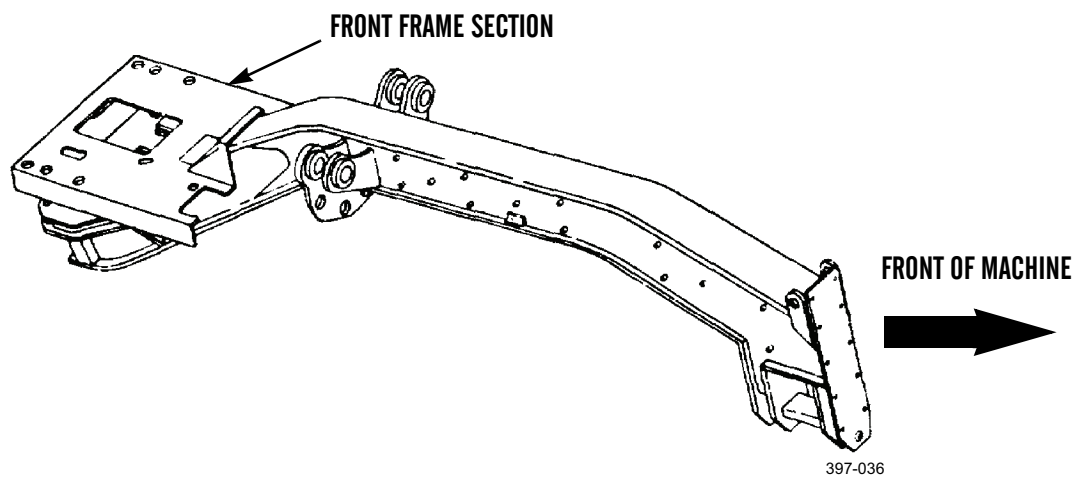1. **Front Frame Section.** The front frame section is a large welded unit built up from a heavy I-beam to serve as a mounting for the front axle, blade, scarifier, hydraulic and electrical lines, and the cab. The cab mounting end includes large hitch bushings to provide for articulation (pivoting) of the two-section frame.




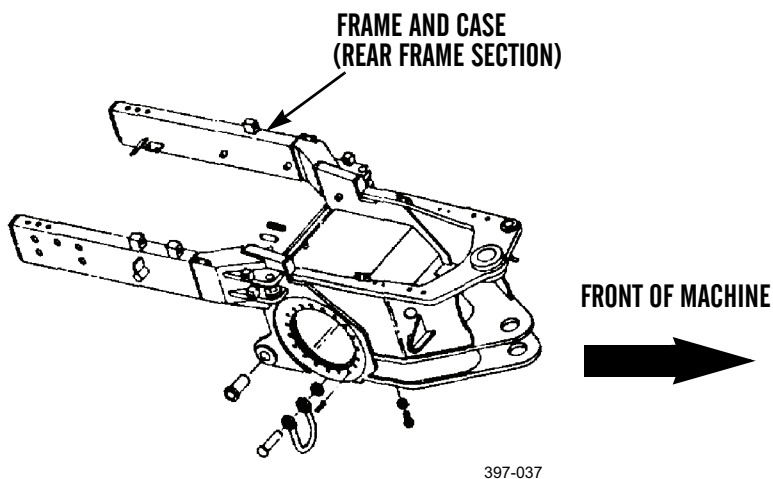2. **Frame and Case Rear Frame Section.** This large weldment includes hitch bushings for articulation and serves as a mounting for the engine and hood, radiator and fuel tank, transmission, differential, and final drives.




FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEM - CONTINUED

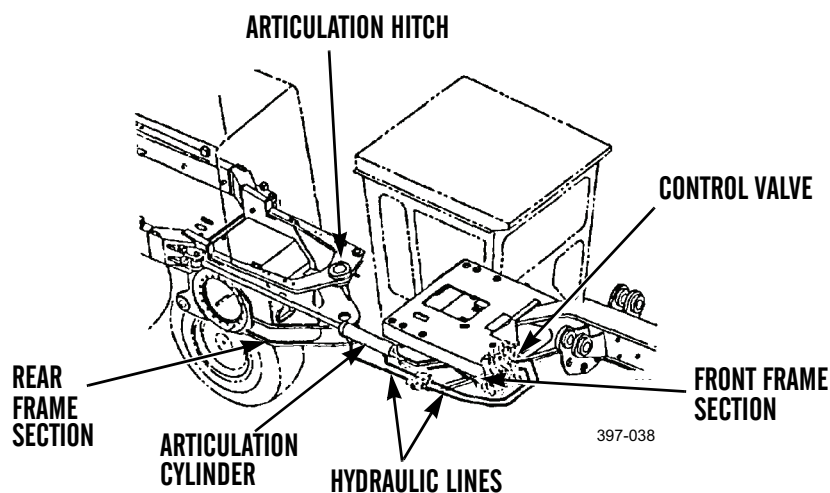3. **Articulation System.** The front frame section and the frame and case (rear frame section) are joined (hinged) at their hitch bushings. Two hydraulic articulation cylinders and lines provide power for articulation. They are controlled from the cab. One cylinder is mounted at each side of the front frame section and extends to attach to the rear frame section to provide articulation control.




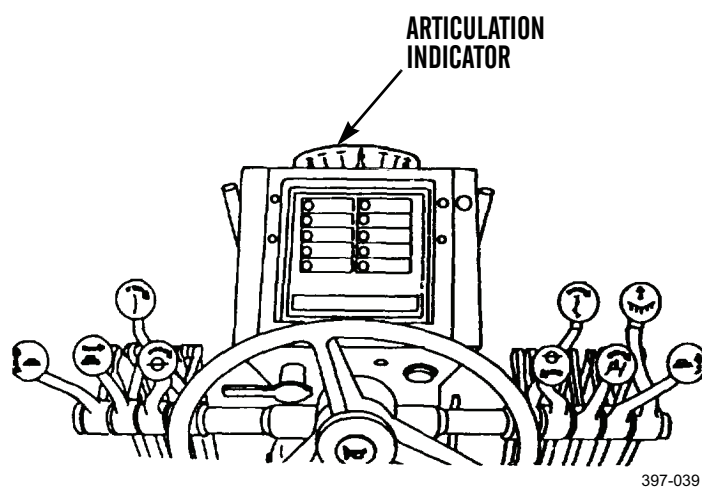4. **Articulation Indicator.** Indicator is mounted inside the cab at the top of the steering console. A small housed cable mounted on the front frame is attached to a lever fastened to the rear frame. When the frame is articulated, the cable moves the pointer on the indicator to show the amount of articulation.




FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEM - CONTINUED

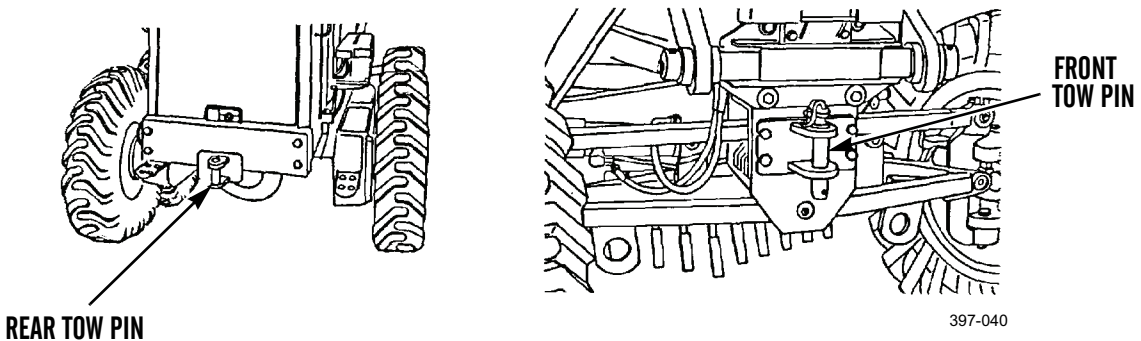5. **Tow Pins and Brackets.** There is one tow pin and bracket at the front of the machine and one at the rear. The rear tow pin is held in its bracket by cross pin and cotter pin at the bottom of the tow pin. The front tow pin is held in the bracket by a latch assembly at the top of the bracket. The front bracket is bolted to the frame. The rear bracket is welded to the bumper assembly.



BODY, CAB, HOOD, AND HULL

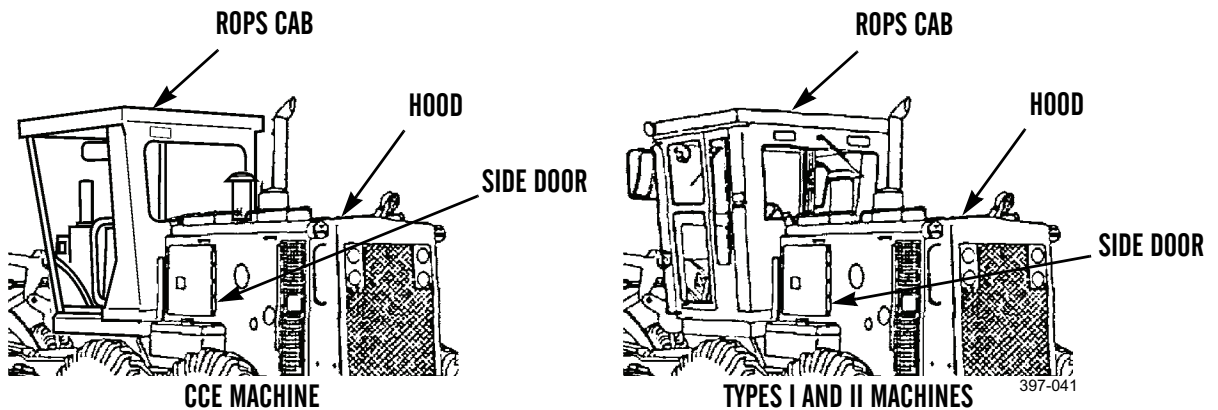
1. **Hood Assembly.** Serves as weather protection for engine, fuel tank, fan, and radiator. The side door assemblies provide sound suppression and vandalism protection. Door assemblies and hood are removable for easier access to engine components.
2. **ROPS Cab.** Cab protects operator and controls from weather and mechanical damage. It also provides mounting for controls, operator's seat, heater (if equipped), and various lights.




BODY, CAB, HOOD, AND HULL - CONTINUED

3. **Operator Console and Steering Console Assembly.**

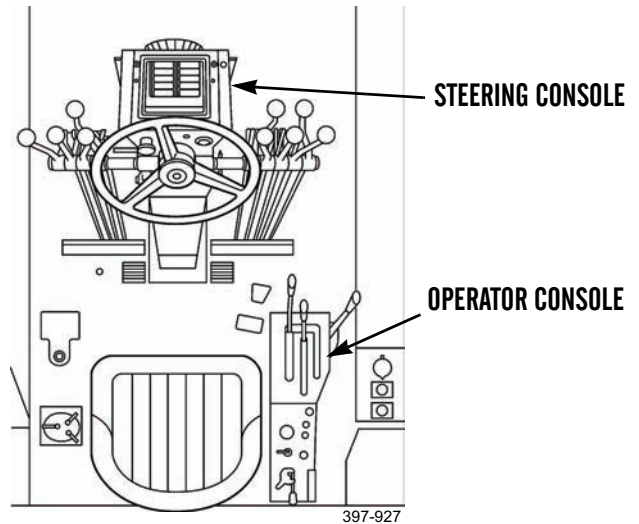Operator console, mounted at right of seat includes transmission and operator controls. Steering console, in front of operator, includes the panel, steering wheel, and implement controls.




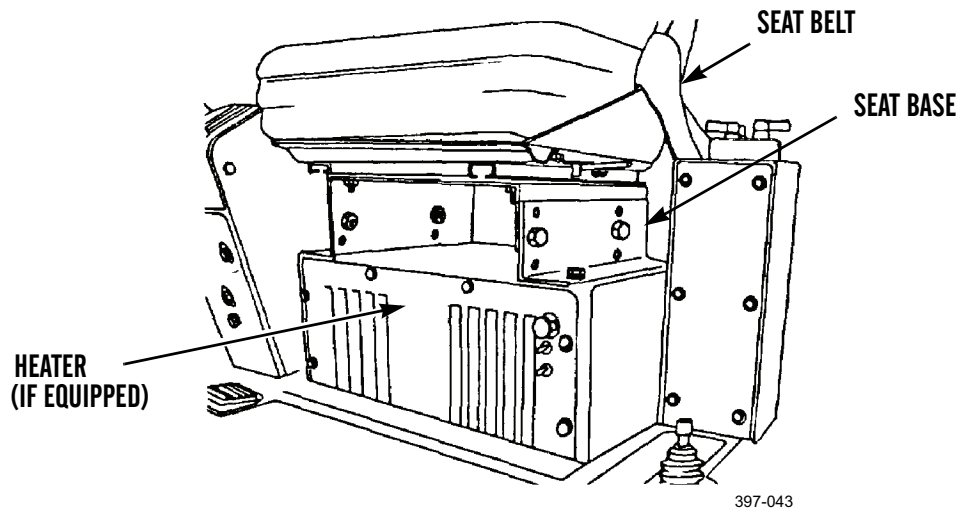4. **Seat Assembly.** Adjustable seat includes seat belts. Seat base serves as housing for heater (if equipped). Refer to TM 5-3805-261-10 for seat adjustment procedure.



BODY, CAB, HOOD, AND HULL - CONTINUED

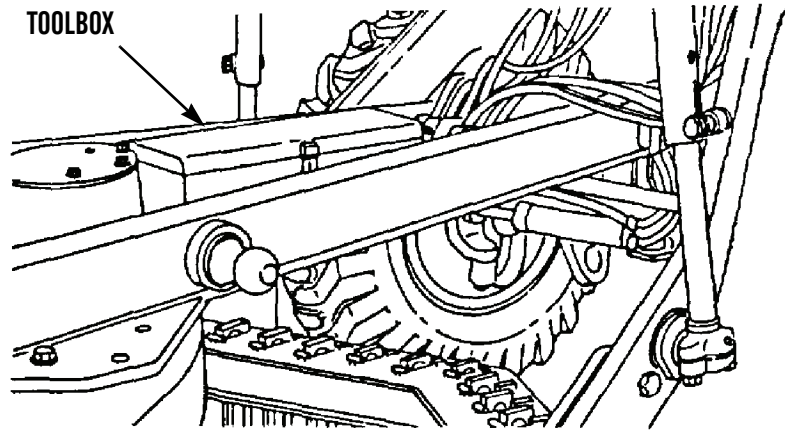
5. **Toolbox**. Toolbox is mounted directly forward of the circle drive motor. It contains scarifier shank removing tool and wheel lean lock pin.



397-044

BODY, CHASSIS, AND HULL ACCESSORY ITEMS

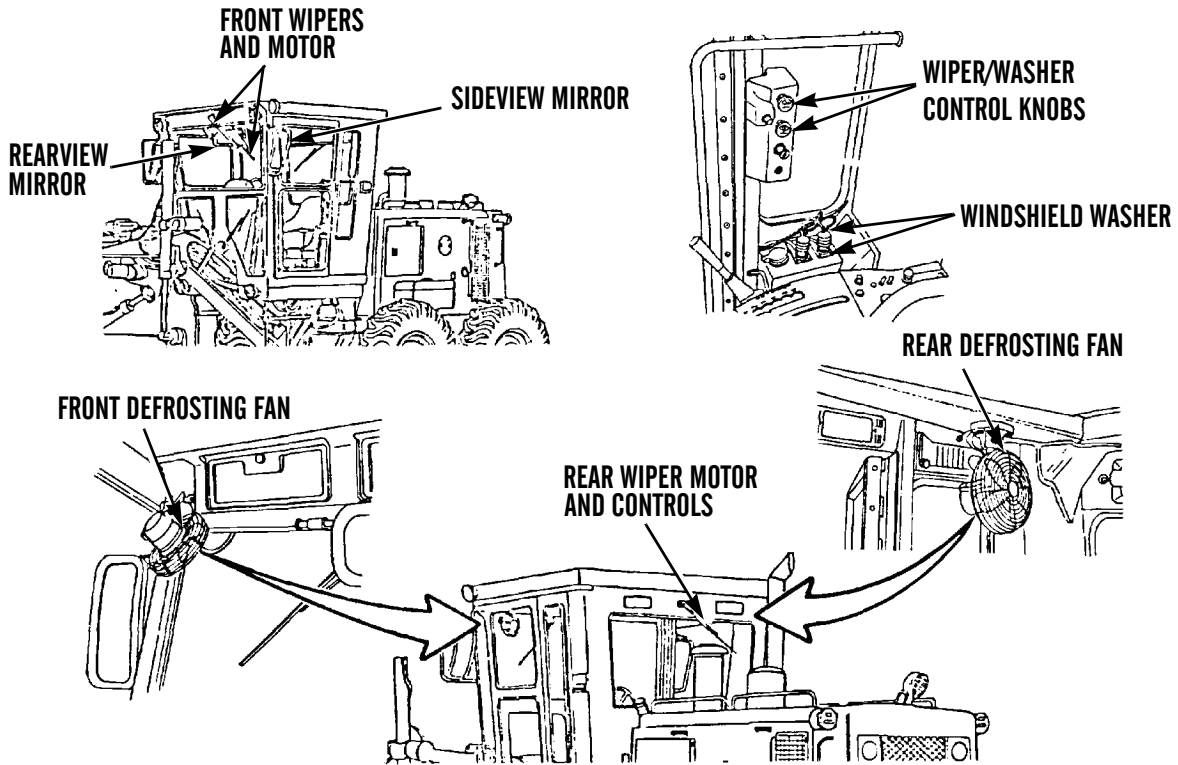1. **Windshield Wipers (CCE and Type I Machines).** Front and rear wipers are driven by electric motors inside the cab. Control panel is located on right hand wall inside cab. Upper and lower knobs control upper and lower wipers.
2. **Windshield Washers (CCE and Type I Machines).** Washers are for front upper and lower wipers. They are actuated by pushing wiper control knobs.
3. **Rearview Mirror.** Mounted inside of cab above windshield.
4. **Sideview Mirrors (CCE and Type I Machines).** Mounted outside of cab at right and left front.
5. **Defrosting Fans (CCE and Type I Machines).** Fans are located inside cab at left front and right rear. Switches are mounted on fan motors.
6. **Heater (CCE and Type I Machines).** Heater with controls is located under seat. Heat is provided by engine coolant. Circulation is by means of an electric fan.



397-045

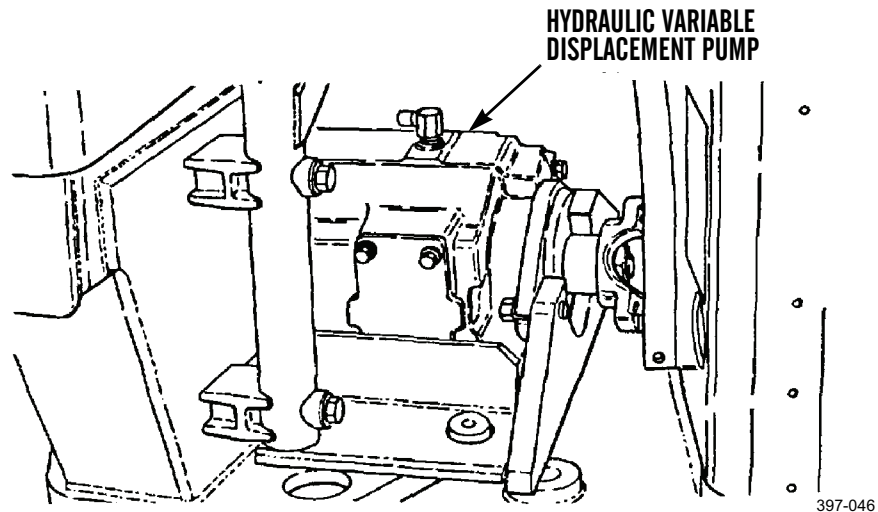
7. **Data and Instruction Plates.** Refer to TM-3805-261-10 for location.

HYDRAULIC SYSTEM


NOTE

Hydraulic system schematics are located in WP 0352 00.

1. The hydraulic system provides a controlled flow of pressurized oil to the steering and implement circuits. It is a load sensing hydraulic system, in which the pump works only as hard as necessary to meet system demands. If there is no steering or implement demand, the pump conserves energy by reducing flow to what is needed for pump case drain (internal leakage) and pressure to a minimum standby level of approximately 430±130 psi (2,965±896 kPa). This means the pump works more efficiently and produces less heat in the hydraulic system.
2. The main parts of the system are illustrated and explained in the following paragraphs.
 - a. **Hydraulic Variable Displacement Pump Assembly and Lines.** Pump is mounted under the cab. Pump shaft is driven by the engine. The variable displacement rear section draws oil from the hydraulic tank and provides oil flow for steering, articulation, wheel lean, and earthmoving components. The constant displacement front section circulates oil to the tank through the cooler, filter, and strainer.




- b. **Priority Valve.** Valve is mounted under the cab, directly to the left of the variable displacement pump. Pressure oil from the pump is routed to the priority valve, which regulates the flow of oil to the implement and steering circuits. When there is a steering demand, the priority valve gives the steering circuit preference.
- c. **Combination Valve.** Valve is located at the left of the variable displacement pump. Oil from the variable displacement pump flows through the combination valve when the engine is running. It then goes to the control valves for the earthmoving components and to the steering metering valve. A hydraulic pressure unloading valve is included for cold weather starting.

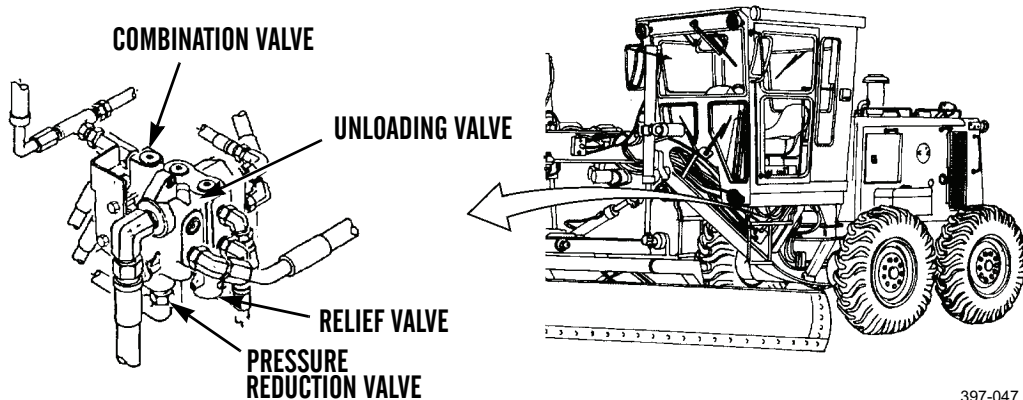

HYDRAULIC SYSTEM - CONTINUED

d. Implement Control Valves.

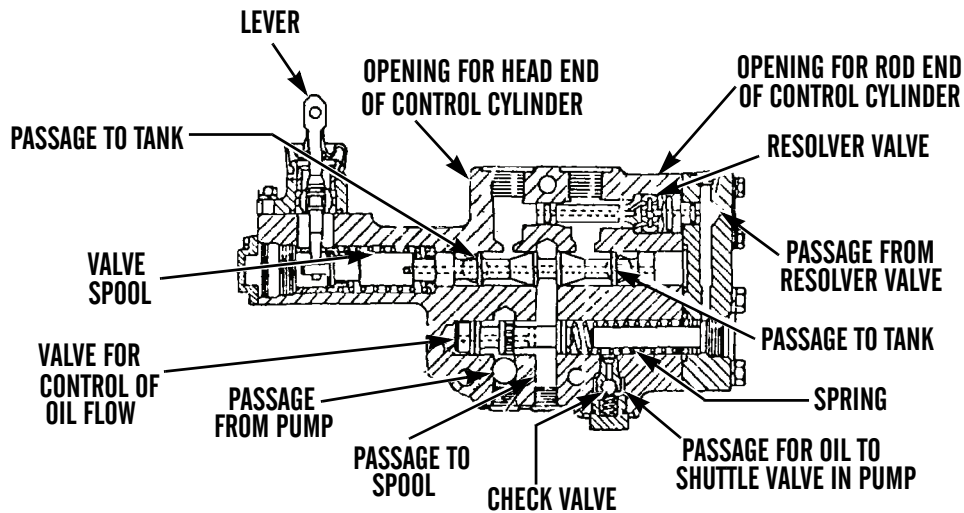
- (1) Each of the control levers at the sides of the steering console operates a hydraulic control valve. The control valves are mounted side by side with the pump oil passages connected and with the return oil passages connected so that only one line is needed for each. Each valve controls a hydraulic cylinder or motor in the hydraulic system.
- (2) The operation of each control valve is the same. The rate of oil flow from each opening in a control valve for a hydraulic cylinder is not the same. There are valves that have approximately the same rate of oil flow from each opening. The size of the orifices from valve spool to openings is one of the controls for the rate of flow. The other control is the force of the spring against the valve. The spring force is not the same in each control valve.
- (3) The resolver valve allows oil with the higher pressure in either passage opening, then through the valve into the next passage. The higher pressure of the oil on the ball in the valve closes the valve passage with oil that has low pressure.
- (4) The implement valve in HOLD position has pump oil at a pressure of approximately 2,150 psi (14,824 kPa) in the valve when the engine is running.
- (5) When the engine is started, the pump oil in the passage goes into the next passage and then through the holes in the valve to the chamber for the valve that has no spring. The pump oil in the passage is stopped by the valve spool and there is an increase in the pressure of the oil from the pump. As the pressure of the oil gets higher, the oil pushes the valve against the force of the spring until the valve is moved to a position, in which very little pump oil can go around the valve into the passage. There is a small amount of oil leakage around the valve spool in HOLD position because of the high pressure of the oil in the passage.
- (6) The location of the implement valve is lower than the oil in the tank. Tank pressure forces oil through all passages in the valve preventing air from entering the valve.



397-048

HYDRAULIC SYSTEM - CONTINUED**e. Lock Check Valve.**

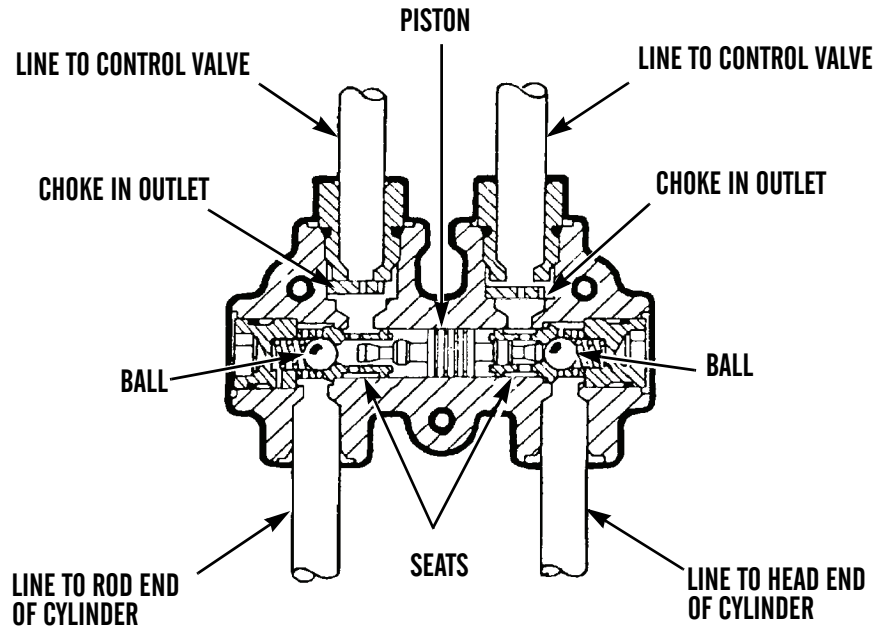
- (1) There is a lock check valve between the control valve and the hydraulic cylinder (or motor) in each of the hydraulic systems. The purpose of each lock check valve is the same, but several designs are used because of the different system requirements.
- (2) Lock check valves prevent hydraulic cylinder rods from drifting when the controls are in HOLD (neutral) position, by locking the hydraulic pressure in against ball check valves. Outlet chokes in lock check valves serve to slow down the hydraulic flow when needed. Relief valves serve to prevent overloading the system.
 - (a) The circle drive and leaning wheel systems use lock check valves without chokes or relief valves.
 - (b) The centershift, articulation, and right hand lift systems use lock check valves with chokes and without relief valves.
 - (c) The left hand lift system and the scarifier system use lock check valves with chokes and a relief valve.
 - (d) The tip and sideshift systems use lock check valves with relief valves but without chokes.
 - (e) When the control valve is in HOLD position, the oil in lines is stopped and the rod in the cylinder cannot move. The springs and the oil in lines keep the balls on seats. Oil in the lines is at tank pressure.



397-049


HYDRAULIC SYSTEM - CONTINUED

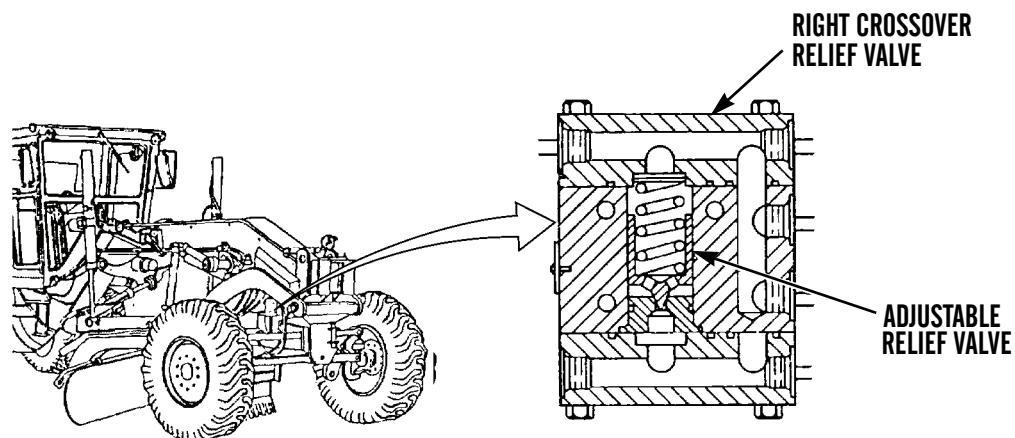- f. **Dual Crossover Relief Valve.** Valve is located at right and left sides of the frame above the front axle. An adjustable relief valve in each valve housing controls oil flow for earthmoving components and the steering system.



397-050

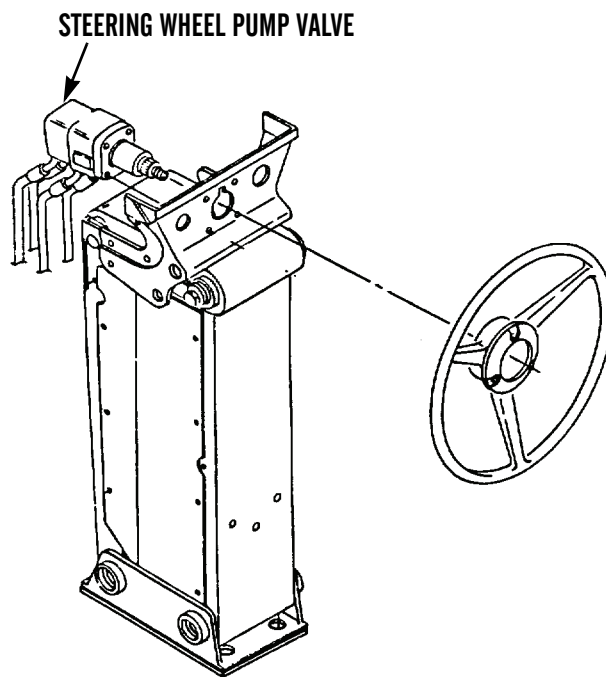
- g. **Steering Wheel Pump (Valve).** The steering wheel pump (valve) is mounted at the steering console in the cab; the steering wheel is attached to the pump shaft. When the steering wheel is turned, the valve directs oil to the steering cylinders to produce the desired amount of turning at the front wheels.



397-051


HYDRAULIC SYSTEM - CONTINUED

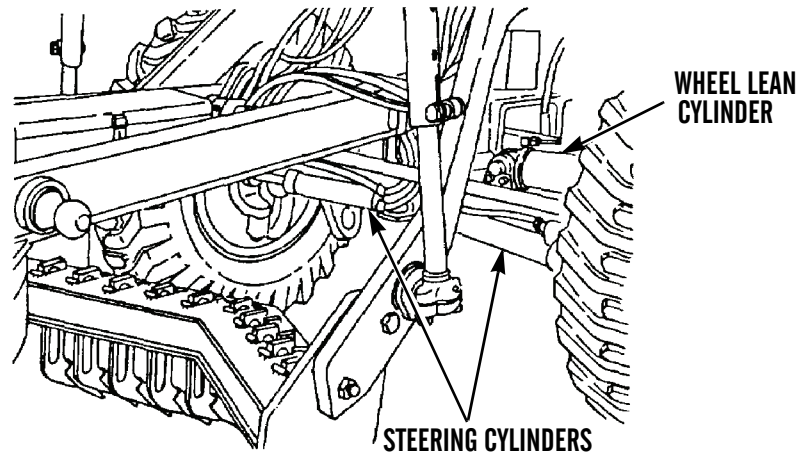- h. **Steering Cylinders.** These are mounted at the front axle. The two steering cylinders turn the front wheels. They are powered by the hydraulic system and controlled by the steering wheel pump and steering wheel.



397-052

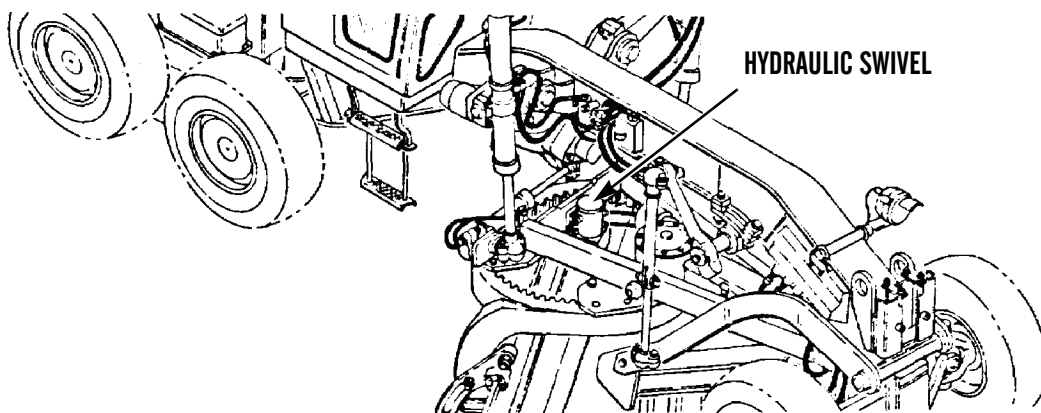- i. **Wheel Lean Cylinder.** This cylinder is mounted at the front axle on the right side. It is powered by hydraulic system and controlled by a lever in the cab. The wheel lean cylinder sets front wheels at angle to counteract blade pressure exerted sideways against the front wheels when grading or moving heavy material. Also, sets front wheel angle to prevent the front of the machine from slipping sideways and downward when the machine is moving across a slope. Refer to TM 5-3805-261-10 for further description of operation.
- j. **Circle Drive Motor Assembly and Lines.** Refer to *Blade System* in this work package.
- k. **Hydraulic Swivel.** Hydraulic swivel is mounted at the center of the circle assembly. The swivel allows hydraulic pressure to be transmitted to blade tip and sideshift cylinders during 360 degrees of blade circle rotation.




397-054


- l. **Blade Control Cylinders and Lines.** Refer to *Blade System* in this work package.
- m. **Scarifier Control Cylinders and Lines.** Refer to *Scarifier Assembly* in this work package.
- n. **Articulation System.** Refer to *Frame, Towing Attachments, Drawbars, and Articulation System* in this work package.

NONELECTRICAL GAUGES, INDICATORS, AND DIPSTICKS

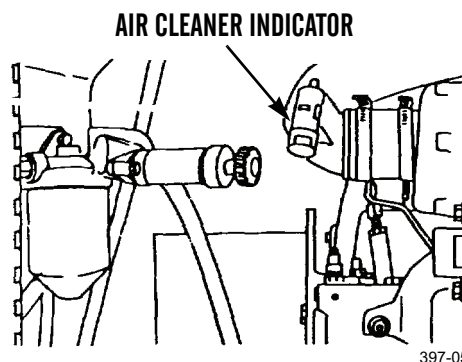
1. **Air Cleaner Indicator.** Indicator is mounted on air inlet elbow. It contains a vacuum sensitive, color coded piston inside of a calibrated plastic housing. When air cleaner elements become dirty, air inlet vacuum increases and moves the piston so that red appears in an aperture on the indicator housing. This indicates that the elements need cleaning or replacing. After cleaning or replacing, indicator is reset and green appears at the aperture.



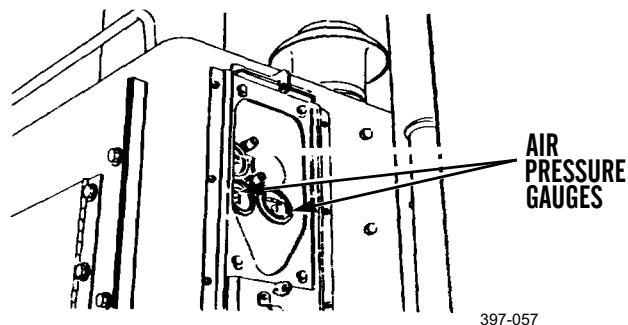2. **Air Pressure Gauges.** Air pressure gauges are mounted in instrument panel at forward section of engine hood. Each gauge is connected by air lines to a section of the dual air tank. Each shows air pressure for one section of the air tank.




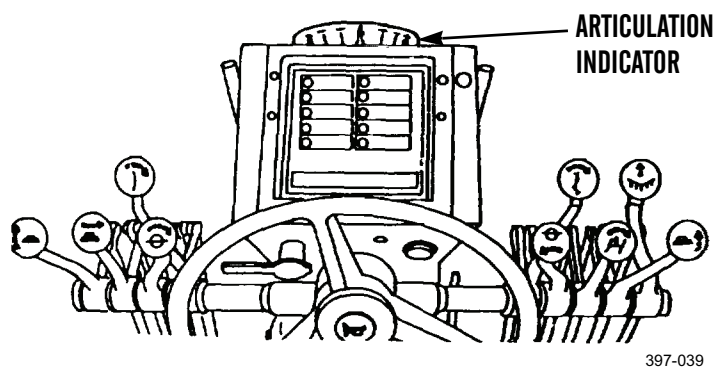3. **Articulation Indicator.** Indicator is mounted behind steering console. It is connected by lever and cable downward through cab floor and linked to rear frame section. It registers amount of articulation (pivoting) of frame from straight (0) to half (HALF) to maximum (MAX).




NONELECTRICAL GAUGES, INDICATORS, AND DIPSTICKS - CONTINUED

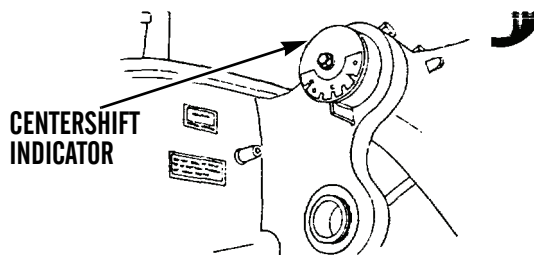4. **Centershift Indicator.** Indicator is mounted in front of cab at centershift pivot point, to right side of frame. It indicates amount of rotation of circle drive and blade from the level (center or C) grading position.




397-059

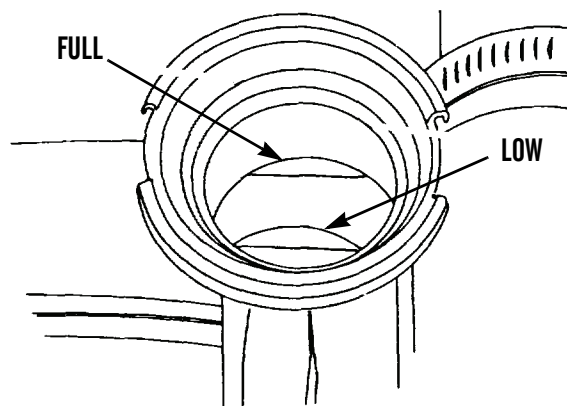5. **Coolant Fill Level Indicators.** Raised marks can be seen in the coolant fill opening after removing the cap. The marks indicate full and low coolant levels.



397-060

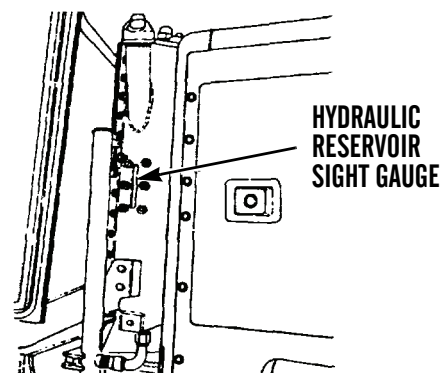
6. **Hydraulic Reservoir Sight Gauge.** Sight gauge is mounted on left side of hydraulic reservoir. Level of hydraulic oil can be seen through glass in sight gauge. The oil level is maintained between "FULL" and "ADD" with the engine off.




397-061

NONELECTRICAL GAUGES, INDICATORS, AND DIPSTICKS - CONTINUED

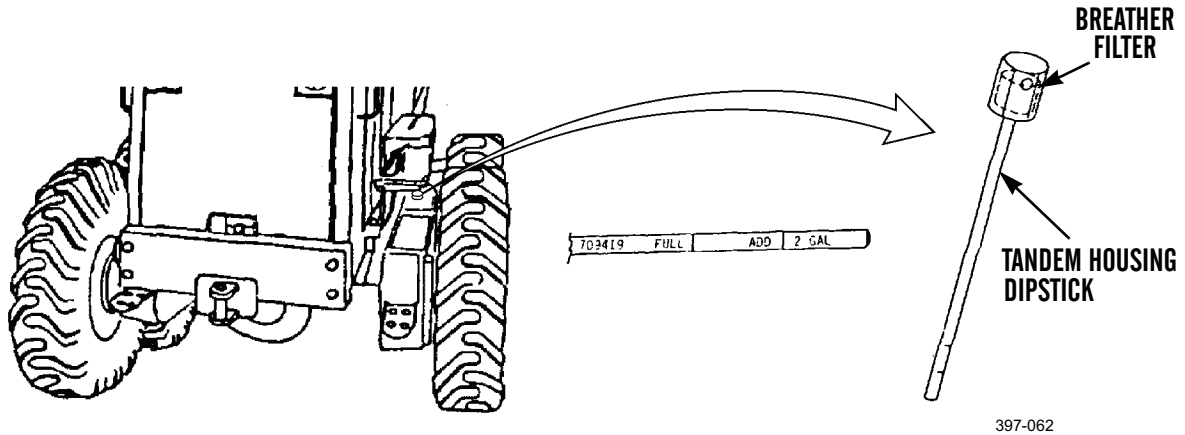
7. **Tandem Housing Dipstick.** Dipstick is located on top of each tandem housing toward front. Breather filter is located in hex nut handle.



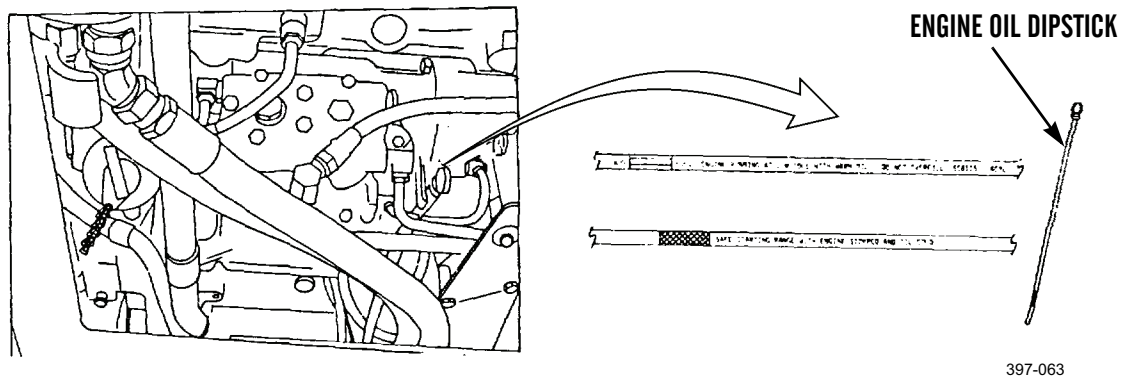8. **Engine Oil Dipstick.** Dipstick is located next to air compressor on left side of engine.




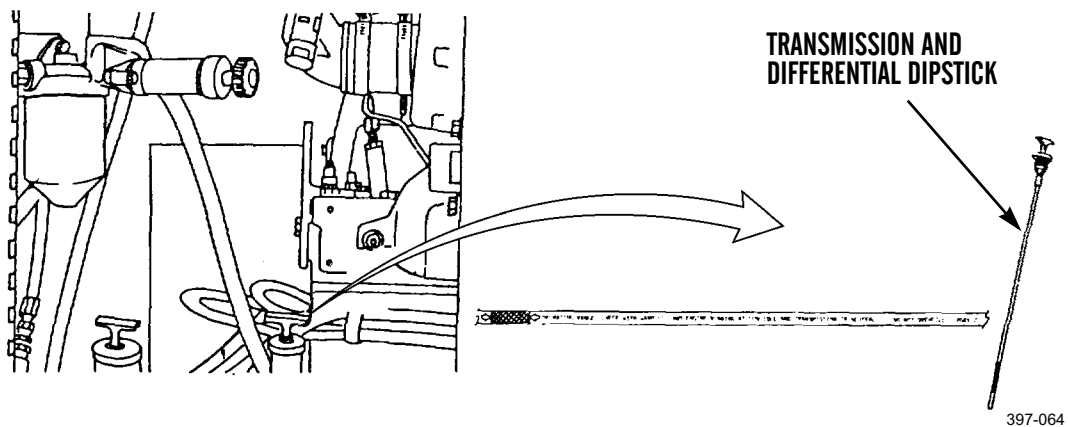9. **Transmission and Differential Dipstick.** Dipstick is located inside of right side rear hood door assembly. Turn T-handle to the left to remove. Tightly turn T-handle to the right when repositioning to maintain seal.



NONELECTRICAL GAUGES, INDICATORS, AND DIPSTICKS - CONTINUED

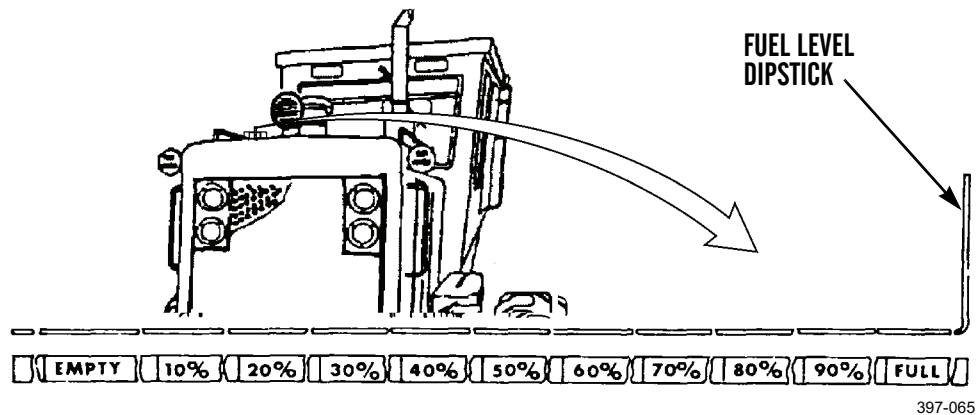10. **Fuel Level Dipstick.** Dipstick is located in fuel fill opening. Calibrations show FULL, EMPTY, and percentage of fuel in tank.


**BLADE SYSTEM****NOTE**

- Refer to *Hydraulic System* in this work package for hydraulic system operation and location of hydraulic system components related to blade system operation.
 - Refer to TM 5-3805-261-10 for blade operation instructions and location of blade controls.
1. The blade system uses hydraulic cylinders and a hydraulic circle drive motor to move the blade. The hydraulic system provides power for the cylinders and motor. The blade control levers are located at the sides of the steering console in the cab. The blade centershift lock is powered by pressurized air.
 2. When the engine is running, the oil from the variable displacement pump goes through the relief and pressure reduction valves, through lines to the control valves for the blade system cylinders. The pressure of the oil can get as high as the pressure setting of the relief valve. When the control valves for the blade system cylinders are not being used, the pressure of the oil is 2,150 psi (14,824 kPa).
 3. When the engine is running and the cylinders are not being used, the pressure of the pump oil in lines to the control valve is approximately 2,150 psi (14,824 kPa). The oil in lines and passage is open to the tank and the pressure of the oil in these lines is the same as the oil in the tank. The lock check valve stops the oil in the lines between the pressure reduction valve and the cylinder and the rod in the cylinder cannot move.
 4. When the blade control valve lever for the cylinder is held in the forward position, the pump oil goes through the control valve through lines and the lock check valve into the head end of the cylinder. The oil in the head of the cylinder pushes the piston and rod out of the cylinder, which moves the blade. When more force is needed, there is an increase in the pressure of the pump oil to the head end of the cylinder. When the pressure of the pump oil goes to 1,500 psi (10,342 kPa), the oil moves the shuttle valve in the pump and the oil pressure from the pump can go to approximately 3,500 psi (24,131 kPa).


BLADE SYSTEM - CONTINUED

5. The separate blade systems are:

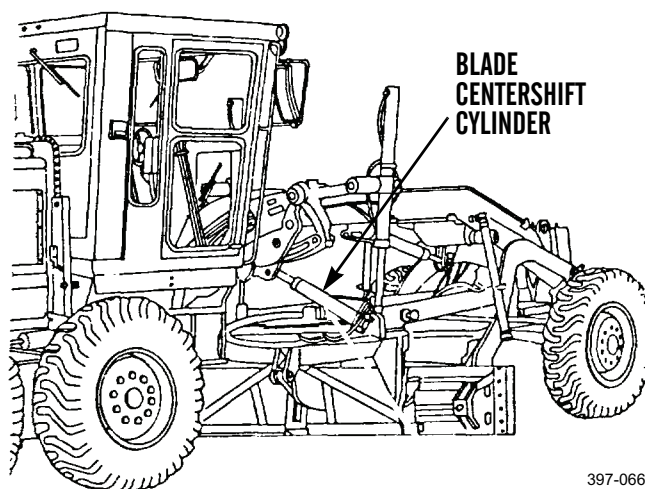- a. **Blade Centershift Cylinder.** The cylinder is attached to the circle assembly so that the draw-bar and the blade can be moved to the right or to the left.



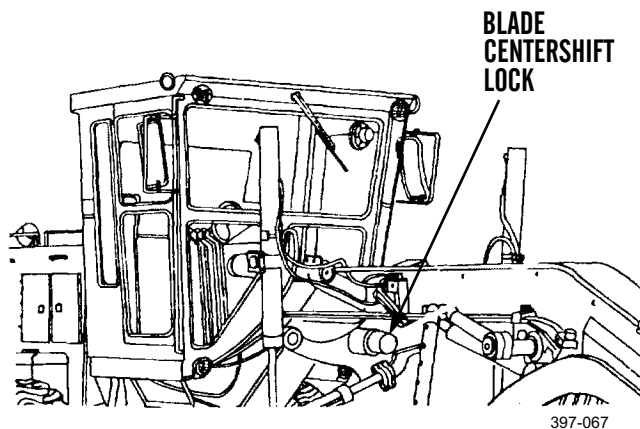
- b. **Blade Centershift Lock.** This mechanical lock is mounted on the blade lift bar. The lock pin is moved by an air operated valve in the housing.



- c. **Blade Tip Cylinder.** Attached to circle assembly and blade assembly so that the blade can be tipped forward or to the rear. Hydraulic oil for tip cylinder operation is sent through the hydraulic swivel.
- d. **Blade Lift Cylinder.**
- (1) Each cylinder is attached to a blade lift arm and the circle assembly at each side of the frame. There is a lift cylinder control lever and a right cylinder control lever in the cab.
 - (2) The lift cylinders are used to raise or lower the blade. They are also used to rotate the blade lift arms to set the blade angle for ditching and banking. Blade lift arms must be rotated with blade grounded and the centershift lock in the unlock position.

BLADE SYSTEM - CONTINUED

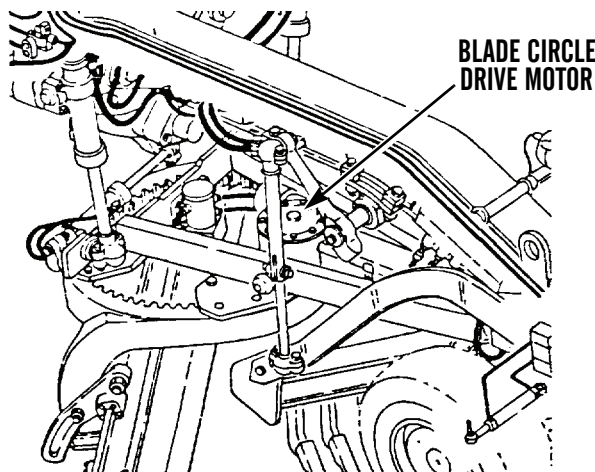
- e. **Blade Float Hydraulic System (CCE and Type I Machines).**
- (1) The purpose of this circuit is to allow blade lift cylinder rods along with the blade to move freely up and down over uneven surfaces when moving snow, gravel, and other loose materials.
 - (2) The system consists of a manual switch at the EMS panel, one blade float pilot valve assembly, one blade float check valve for each cylinder, and a limit switch at each of the blade lift lever linkages.
 - (3) When moved to the ON position, the switch at the EMS panel opens a normally closed solenoid valve and closes a normally open solenoid valve in the blade float pilot valve assembly. The opened valve sends pump pressure oil to actuate the blade float check valves. The closed valve prevents pressure oil from returning to the tank from the blade float check valves.
 - (4) Pistons within the blade float check valves then move check balls off their seats, which allows free movement of oil between the head and rod ends of the lift cylinders. This allows the blade to move freely up and down over uneven surfaces.
 - (5) The limit switches on the blade lift lever linkage allow raising and lowering of the blade lever even when the blade float system is on. If the lift lever is moved, the limit switch turns off the current to the solenoids in the blade float pilot valve. This turns off the blade float system until the lever is returned to its NEUTRAL position.
 - (6) When the switch at the EMS panel is moved to the OFF position, the blade float pilot valve assembly returns to normal, which now prevents free circulation of oil between upper and lower ends of the cylinders. It also allows any pressure remaining in the check valve to return to the tank.
- f. **Blade Sideshift Cylinder.** Cylinder is attached to blade mounting bracket and to blade assembly. Control lever is located in control lever group mounting at side of steering console. Cylinder provides sideways movement of blade. Hydraulic oil for sideshift cylinder operation is routed through the hydraulic swivel.
- g. **Blade Circle Drive Motor.** Motor is mounted on drawbar assembly so that hydraulically driven gear on motor drives the circle gear. The circle gear rotates the blade horizontally. The motor is controlled by a lever in the cab.



397-071

SCARIFIER ASSEMBLY**NOTE**

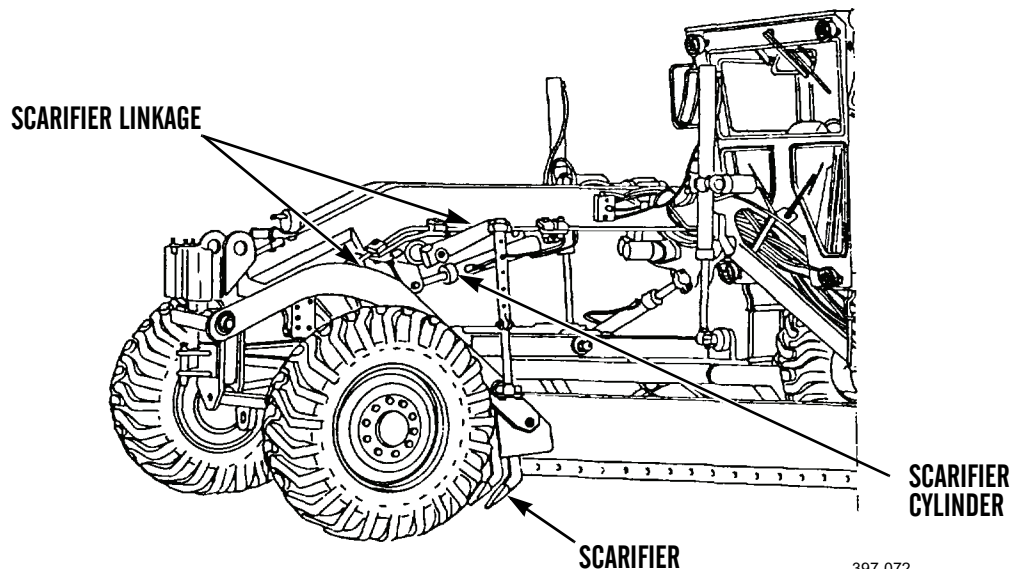- Refer to *Hydraulic System* in this work package for hydraulic system operation and location of hydraulic system components related to scarifier assembly operation.
 - Refer to TM 5-3805-261-10 for scarifier operating instructions and location of scarifier controls.
1. The scarifier assembly uses a hydraulic cylinder to move the scarifier upward or downward. The scarifier control lever is located in the lever group at the right side of the steering console in the cab.
 2. When the engine is running, oil from the variable displacement pump goes through the relief and pressure reduction valves through lines, to the control valve for the scarifier cylinder. The pressure of the oil in lines can get as high as the pressure setting of the relief valve. When the control valve for the scarifier cylinder is not being used, the pressure of the oil in lines is 2,150 psi (14,824 kPa).
 3. When the engine is running, and the scarifier is not being used, the pressure of the pump oil in lines to the control valve is approximately 2,150 psi (14,824 kPa). The oil in lines and passage is open to the tank and the pressure of the oil in these lines is the same as the oil in the tank. The lock check valve stops the oil in the lines between the pressure reduction valve and the cylinder and the rod in the cylinder cannot move. The pressure of the oil in lines is the same as the oil in the tank.
 4. When the scarifier control valve lever is held in the LOWER position, the pump oil goes through the control valve through lines and the lock check valve into the head end of cylinder. The oil in the head of the cylinder pushes the piston and rod out of the cylinder which moves the scarifier down. When more force is needed to lower the scarifier, there is an increase in the pressure of the pump oil to the head end of cylinder. When the pressure of the pump oil goes to 1,500 psi (10,342 kPa), the oil moves the shuttle valve in the pump and the oil pressure from the pump can go to approximately 3,500 psi (24,132 kPa).



397-072

END OF WORK PACKAGE

CHAPTER 2
TROUBLESHOOTING PROCEDURES

INTRODUCTION

1. Troubleshooting procedures in this chapter contain information you need to locate fault malfunctions on the 130G Series Grader and its components.
2. Troubleshooting procedures are located as follows:
 - a. WP 0006 00 contains engine troubleshooting procedures.
 - b. WP 0007 00 contains cooling system troubleshooting procedures.
 - c. WP 0008 00 contains electrical system troubleshooting procedures.
 - d. WP 0009 00 contains transmission troubleshooting procedures.
 - e. WP 0010 00 contains brake system troubleshooting procedures.
 - f. WP 0011 00 contains steering system troubleshooting procedures.
 - g. WP 0012 00 contains hydraulic system troubleshooting procedures.
 - h. WP 0013 00 contains miscellaneous troubleshooting procedures.
3. A *Troubleshooting Symptom Index* in WP 0005 00 is provided to aid in locating a malfunction or symptom and directs you to the appropriate troubleshooting procedure.
4. Troubleshooting procedures in this manual cannot provide all the answers or correct all malfunctions encountered. However, these procedures are an organized step-by-step approach to a problem that provide tests and inspections toward the source of the problem and its successful resolution.
5. If a malfunction is not listed in the *Troubleshooting Symptom Index* in WP 0005 00, or stated tests or inspections and corrective actions do not correct the problem, notify your supervisor.
6. Before performing troubleshooting, read and follow all safety instructions found in the Warning Summary at the front of this manual.

PRELIMINARY TROUBLESHOOTING PROCEDURES**NOTE**

Fluid leaks are classified as either Class I, Class II or Class III.

Class I: Seepage of fluid (as indicated by wetness or discoloration) not great enough to form drops.

Class II: Leakage of fluid great enough to form drops, but not enough to cause drops to drip from item being checked/inspected.

Class III: Leakage of fluid great enough to form drops that fall from item being checked/inspected.

1. Before starting any specific troubleshooting procedures, perform the following:
 - a. Visually check for ruptured oil hoses or tubes and for Class II or Class III leaks.
 - b. Check for mechanical jamming or binding caused by rocks or other foreign matter.
 - c. Check fluid levels in subject area and service as required (WP 0019 00 and WP 0020 00).
2. Ensure all applicable Operator Troubleshooting has been performed before proceeding.

EXPLANATION OF TROUBLESHOOTING TABLE COLUMNS

The columns in the tables in each troubleshooting work package are defined as follows:

1. **MALFUNCTION**. Indicates fault that has occurred in system/equipment.
2. **TEST OR INSPECTION**. Indicates test or inspection to be performed to isolate probable cause for fault symptom.
3. **CORRECTIVE ACTION**. Indicates procedure to correct the problem.

ELECTRICAL TROUBLESHOOTING GENERAL INFORMATION**NOTE**

Refer to *Electrical General Maintenance Instructions* (WP 0021 00) for instructions on using a multimeter to check for continuity or shorts and to perform voltage checks.

1. Analyze the symptoms and conditions and determine the most likely cause for the problem, then troubleshoot that circuit first. The more information you have concerning the problem, the easier it will be to troubleshoot.
2. Isolate to the subsystem level (in cases in which more than one subsystem is involved); next isolate the problem to a single circuit within the subsystem; then, isolate the problem to the faulty component using the *Troubleshooting Symptom Index* (WP 0005 00).
3. Frayed, broken, loose, or corroded wiring is a common source of problems in any electrical circuit. Always perform visual inspection before starting detailed troubleshooting. Observe contacts to ground in particular. Components with case grounds are especially troublesome.

CAUTION

When performing continuity checks, ensure the test equipment is isolated from the power source.

4. Most checks performed are voltage checks. Pay particular attention to voltages being checked in procedures. This equipment is a 24-volt system. Instructions prior to the step instruct to disconnect at test point from the potential malfunctioning component. Once the check has been made, either repair the component or go to the referenced step. If going to another step, reconnect connection or do as otherwise instructed, such as install jumper wires using jumper wire kit. When ready to make the prescribed check, apply power to the circuit (if required). An assistant may be required if the switch or power source is out of reach. Release the power function before proceeding to avoid damage to equipment.

END OF WORK PACKAGE

TROUBLESHOOTING SYMPTOM INDEX

0005 00

Malfunction/Symptom

Troubleshooting Procedure Page

ENGINE

1. Engine Will Not Crank.	0006 00-1
2. Engine Cranks, but Will Not Start.	0006 00-1
3. Engine Starts, but Will Not Keep Running.	0006 00-1
4. Engine Oil Pressure Is Low.	0006 00-2
5. Engine Uses Too Much Oil.	0006 00-2
6. Engine Will Not Shut Down.	0006 00-2
7. Engine Knocks.	0006 00-3
8. Engine Misfires, Runs Rough, or Stalls.	0006 00-3
9. Not Enough Power.	0006 00-4
10. Too Much Vibration.	0006 00-5
11. Clicking Noise in Rocker Arm Cover.	0006 00-6
12. Mechanical Noise in Engine.	0006 00-6
13. Fuel Consumption Is Too High.	0006 00-6
14. Loud Noise from Valves or Valve Drive Components.	0006 00-6
15. Limited Rocker Arm Movement or Too Much Valve Clearance.	0006 00-6
16. Valve Rotocoil or Spring Lock Is Free.	0006 00-7
17. Oil at Exhaust.	0006 00-7
18. Coolant in the Lubrication Oil.	0006 00-7
19. Too Much Black or Gray Smoke.	0006 00-7
20. Too Much White or Blue Smoke.	0006 00-7
21. Transmission Oil in the Lubrication Oil	0006 00-7

COOLING SYSTEM

1. Engine Overheats.	0007 00-1
2. Engine Does Not Reach Operating Temperature.	0007 00-1
3. Coolant Contaminated.	0007 00-2

TROUBLESHOOTING SYMPTOM INDEX - CONTINUED

0005 00

Malfunction/Symptom

Troubleshooting Procedure Page

ELECTRICAL SYSTEM

1. Batteries Will Not Maintain Charge.	0008 00-1
2. Specific Gravity Will Not Increase to 1.240 Under Charge.	0008 00-1
3. Engine Will Not Crank.	0008 00-2
4. All Machine Electrical Systems Are Inoperative.	0008 00-3
5. Starting Motor Is Inoperative.	0008 00-4
6. Solenoid and Starting Motor Operate; Engine Cranks Slowly.	0008 00-13
7. Batteries Will Not Maintain Charge.	0008 00-20
8. Batteries Use Excessive Water.	0008 00-20
9. Batteries Run Down in Service.	0008 00-21
10. No Alternator Output.	0008 00-21
11. Alternator Charge Is Too High.	0008 00-22
12. All Driving, Tail, and Panel Lights Fail to Operate.	0008 00-22
13. All Stop/Tail, Panel, and Articulation Lights Fail to Operate.	0008 00-23
14. Headlights Fail to Operate.	0008 00-23
15. Individual Light Fails to Operate.	0008 00-23
16. All Turn Signal Lights and Indicators Fail to Operate.	0008 00-24
17. Turn Signal Lamps Fail to Blink.	0008 00-24
18. Both Floodlights Fail to Operate.	0008 00-24
19. Blackout Drive Lights Fail to Operate.	0008 00-24
20. Dome Light Will Not Operate (CCE Machine).	0008 00-25
21. Horn Fails to Operate.	0008 00-25
22. Backup Alarm Fails to Operate with Transmission in Reverse.	0008 00-25
23. Console Light Does Not Operate.	0008 00-26
24. Floodlight Switch Does Not Operate.	0008 00-26
25. Ether Control Switch Does Not Operate.	0008 00-26
26. Battery Disconnect Switch Does Not Operate.	0008 00-26
27. Start Switch Does Not Operate.	0008 00-26
28. Blade Float Limit Switch Does Not Operate (CCE Machine).	0008 00-27
29. Air Pressure Switch Is Not Operating.	0008 00-27
30. Engine Oil Pressure Switch Does Not Operate.	0008 00-27
31. Coolant Temperature Switch Does Not Operate.	0008 00-27
32. Fuel Pressure Switch Does Not Operate.	0008 00-27
33. Hydraulic Oil Temperature Switch Does Not Operate.	0008 00-27
34. Hour Meter Does Not Operate.	0008 00-27
35. Windshield Wipers Do Not Operate (CCE Machine).	0008 00-27
36. Panel Lamp Does Not Operate.	0008 00-27
37. Engine Cranks, but Will Not Start in Cold Weather (Fuel Available).	0008 00-28

TROUBLESHOOTING SYMPTOM INDEX - CONTINUED

0005 00

Malfunction/Symptom

Troubleshooting Procedure Page

ELECTRICAL SYSTEM - CONTINUED

- 38. Heater Will Not Operate in High Speed or Low Speed Position (CCE Machine). 0008 00-31
- 39. Defrosters Will Not Operate or Will Not Operate in High Speed or Low Speed
(CCE Machine). 0008 00-33
- 40. Windshield Wiper Will Not Operate or Will Not Operate in High
Speed or Low Speed Position (CCE Machine). 0008 00-35

TRANSMISSION

- 1. Transmission Does Not Operate in Any Speed or Slips in All Speeds. 0009 00-1
- 2. Transmission Does Not Shift. 0009 00-1
- 3. Transmission Engages Suddenly (Rough Shifting). 0009 00-1
- 4. Transmission Shifts Slow. 0009 00-2
- 5. Transmission Engages, but Machine Will Not Move. 0009 00-2
- 6. Transmission Is Hot. 0009 00-2

BRAKE SYSTEM

- 1. Parking Brake Is Not Engaging Correctly. 0010 00-1
- 2. Parking Brake Is Not Releasing Correctly. 0010 00-1
- 3. Air Compressor Passes Excessive Oil, Indicated by Oil Seeping from Air Strainer. 0010 00-1
- 4. Noisy Compressor Operations. 0010 00-2
- 5. Excessive Buildup and Recovery Time. 0010 00-3
- 6. Compressor Fails to Unload. 0010 00-3
- 7. Compressor Leaks Oil. 0010 00-3
- 8. Compressor Constantly Cycles. 0010 00-3
- 9. Service Brakes Are Not Engaging Correctly. 0010 00-3
- 10. Service Brakes Are Not Releasing Correctly. 0010 00-4

STEERING SYSTEM

- 1. Wheels Turn Slowly or Not at All When Steering Wheel Is Turned. 0011 00-1
- 2. Machine Has Supplemental Steering, but No Primary Steering. 0011 00-3
- 3. Supplemental Steering Motor Status Light Off, but Supplemental Steering Motor and
Pump Runs When Engine Is Running. 0011 00-3
- 4. Steering Effort Is More for Supplemental Steering Than for Primary Steering. 0011 00-3

TROUBLESHOOTING SYMPTOM INDEX - CONTINUED

0005 00

Malfunction/Symptom

Troubleshooting Procedure Page




HYDRAULIC SYSTEM

1. All Implements Fail to Operate or Operate Slowly.....	0012 00-1
2. Circle Drive Operates Slowly or Fails to Operate.	0012 00-1
3. Blade Float Fails to Operate Properly (CCE Machine).	0012 00-1
4. Blade Lift Fails to Operate Properly.	0012 00-1
5. Centershift Fails to Operate.	0012 00-2
6. Blade Tip Fails to Operate.	0012 00-2
7. Leaning Wheel Fails to Operate.	0012 00-2
8. Side Shift Fails to Operate.	0012 00-2
9. Centershift Lock Assembly Fails to Operate.	0012 00-2
10. Articulation Fails to Operate Properly.	0012 00-2




MISCELLANEOUS

1. Tires Wear Unevenly.....	0013 00-1
2. ROPS Is Not Secure.	0013 00-1
3. Window Seals Are Defective (CCE Machine).	0013 00-1
4. Door Will Not Close or Catch (CCE Machine).	0013 00-1
5. Steps Bent (Old Design).	0013 00-1
6. Operator's Panel Console Moves Out of Adjustment or Does Not Lock Into Position	0013 00-2
7. All Windshield Wipers and Washers Fail to Operate (CCE Machine).....	0013 00-2
8. One or More Windshield Wipers Fail to Operate (CCE Machine).....	0013 00-3
9. Windshield Washer Fails to Operate (CCE Machine).....	0013 00-3
10. Front or Rear Window Defroster Does Not Operate (CCE Machine).	0013 00-3
11. Heater Fans and Controls Operate, but No Heat (CCE Machine).	0013 00-4
12. Both Heater Fans Fail to Operate (CCE Machine).	0013 00-4
13. One Heater Fan Fails to Operate (CCE Machine).	0013 00-4
14. Air Cleaner Indicator Fails to Show Air Filter Condition.	0013 00-4
15. Air Pressure Gauges Fail to Operate.....	0013 00-4
16. Differential Lock Is Not Engaging Correctly.	0013 00-4
17. Differential Lock Is Not Releasing Correctly.....	0013 00-5




END OF WORK PACKAGE

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Engine Will Not Crank.</p> <p>2. Engine Cranks, but Will Not Start.</p>	<p>Check electrical system. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p> <ol style="list-style-type: none"> 1. Check for cranking speed fast enough to start engine. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00). 2. Check the fuel system. Refer to <i>Engine Troubleshooting</i> (WP 0006 00). 3. Check air cleaner for air restriction. (TM 5-3805-261-10). 	<p>Go to Malfunction 2.</p> <ol style="list-style-type: none"> 1. If dirty, clean and service air cleaner (WP 0036 00, WP 0037 00, or WP 0038 00). 2. Replace air cleaner (WP 0036 00, WP 0037 00, or WP 0038 00).
<p>3. Engine Starts, but Will Not Keep Running.</p>	<div style="display: flex; align-items: center; justify-content: center; gap: 10px;">   <div style="text-align: center;"> <p>WARNING</p> <ul style="list-style-type: none"> DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may cause injury to personnel or damage to equipment. DO NOT perform fuel system checks, inspections, or maintenance while smoking or near fire, flames, or sparks. Fuel may ignite, causing injury or death to personnel and damage to equipment. Operating personnel must wear fuel-resistant gloves when handling fuels. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing. Failure to follow this warning may cause injury to personnel. Wear eye and hearing protection. Failure to follow this warning may cause injury to personnel. </div>  </div> <ol style="list-style-type: none"> 1. Check for air in fuel system lines. 2. Look for damaged fuel lines. 3. Check for clogged primary fuel filter. 	<p>Bleed injection lines (WP 0035 00). If voltage is indicated, go to Test 2.</p> <p>Replace defective fuel lines and bleed fuel lines (WP 0035 00, WP 0041 00, and WP 0042 00). If voltage is indicated, go to Test 3.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. Engine Starts, but Will Not Keep Running - Continued.</p>	<p>a. Disconnect fuel line between fuel filter and fuel injection pump housing at fuel injection pump housing.</p> <p>b. Place start switch in ON position and crank engine (TM 5-3805-261-10).</p> <p>4. Check for bad fuel (TM 5-3805-261-10). Bad fuel will have a milky-white color.</p> <p>5. Check air cleaner for air restriction (TM 5-3805-261-10).</p>	<p>If fuel does not shoot out from disconnected line, replace primary fuel filter (WP 0045 00). If the problem still exists, go to Test 4.</p> <p>Drain bad fuel (TM 5-3805-261-10). Bleed injection lines (WP 0035 00). Replace fuel filters (WP 0045 00, WP 0046 00, and WP 0047 00). If the problem still exists, go to Test 5.</p> <p>1. If dirty, clean and service air cleaner (WP 0036 00, WP 0037 00, or WP 0038 00).</p> <p>2. Replace air cleaner (WP 0036 00, WP 0037 00, or WP 0038 00).</p>
<p>4. Engine Oil Pressure Is Low.</p>	<p>1. Check oil dipstick for diesel fuel contamination in lubrication oil.</p> <p>2. Confirm oil pressure using STE/ICE-R if available.</p> <p>3. Check the oil pump suction pipe.</p>	<p>1. If lubrication oil is contaminated by diesel fuel, drain and replace engine oil and filter (WP 0024 00). If the problem still exists, go to Test 2.</p> <p>2. If oil pressure is correct 14 to 87 psi (103 to 600 kPa), go to Test 3.</p> <p>1. If the oil pump suction pipe is damaged or defective, replace (WP 00276 00).</p> <p>2. Replace oil pump (WP 00276 00).</p> <p>3. Replace engine (WP 0267 00).</p>
<p>5. Engine Uses Too Much Oil.</p>	<p>1. Check for oil leaks at the engine oil filter and oil drain plug.</p> <p>2. Check cylinder head valve guides.</p>	<p>If oil leaks are found at the oil filter or oil drain plug, tighten and/or replace gaskets (WP 0024 00). If the problem still exists, go to Test 2.</p> <p>1. If worn, replace cylinder head (WP 0270 00).</p> <p>2. Replace engine (WP 0267 00).</p>
<p>6. Engine Will Not Shut Down.</p>	<p>Manually actuate governor control lever. Check for loose, binding, or incorrectly adjusted governor control linkage.</p>	<p>1. Adjust governor control linkage (WP 0282 00).</p> <p>2. Replace governor control linkage (WP 0282 00).</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>7. Engine Knocks.</p>	<div style="display: flex; justify-content: space-around; align-items: center;">   <div style="text-align: center;"> <p>WARNING</p> <p>When opening fuel system, do not look directly at fitting. Fuel is under high pressure. Wear eye protection. Failure to follow this warning may cause injury to personnel.</p> </div>  </div> <p>Check the fuel injection nozzles. Run the engine at an RPM that causes the most noise. Loosen a fuel line nut on the injection of each cylinder one at a time, then tighten.</p>	<p>If loosening a fuel line nut does not make a difference, replace injection nozzle (WP 0278 00).</p>
<p>8. Engine Misfires, Runs Rough, or Stalls.</p>	<ol style="list-style-type: none"> 1. Check for air in fuel system. 2. Check fuel pressure with fuel pressure gauge. <ol style="list-style-type: none"> a. Remove fuel pressure switch from fuel injection pump (WP 0115 00). b. Install fuel pressure gauge. c. Start engine and run at high idle. Pressure should be read at least 15 psi (103 kPa) (TM 5-3805-261-10). d. If pressure is low, proceed with Tests 3 and 4. 3. Look for damaged fuel lines. 4. Check for clogged primary fuel filter. <ol style="list-style-type: none"> a. Disconnect fuel line between fuel filter and fuel injection pump housing at fuel injection pump housing. b. Place start switch in the ON position and crank engine (TM 5-3805-261-10). 5. Check fuel system timing (WP 0278 00). 	<p>Bleed injection lines (WP 0035 00). If the problem still exists, go to Test 2.</p> <p>Replace defective fuel lines and bleed fuel lines (WP 0035 00, WP 0041 00, and WP 0042 00). If the problem still exists, go to Test 4.</p> <p>If fuel does not shoot out from disconnected line, replace primary fuel filter (WP 0045 00 and WP 0046 00). If the problem still exists, go to Test 5.</p> <p>Adjust fuel system timing (WP 0278 00). If the problem still exists, go to Test 6.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>8. Engine Misfires, Runs Rough, or Stalls. - Continued</p>	<p>6. Check engine cylinders. Loosen injection lines, one at a time to find which cylinder is misfiring.</p> <p style="text-align: center;">CAUTION</p> <p>When fuel injection lines are loosened or tightened on fuel injection nozzles, two wrenches must be used. Nozzle must be held with wrench or damage to nozzle may result.</p> <p>7. Check the valve clearance (WP 0274 00).</p> <p>8. Check the push rods (WP 0273 00).</p> <p>9. Check for worn valves or valve seats (WP 0274 00).</p>	<p>If the problem still exists, go to Test 7.</p> <p>If the valve clearance is not correct, service or replace (WP 0274 00). If the problem still exists, go to Test 8</p> <p>If a push rod is bent or broken, replace (WP 0273 00). If the problem still exists, go to Test 9.</p> <p>If the valves or valve seats are worn, cylinder head should be replaced (WP 0270 00).</p>
<p>9. Not Enough Power.</p>	<p>1. Check fuel lines and fittings for tightness and damage.</p> <p>2. Check the fuel pressure at the fuel injection pump housing. Fuel pressure at high idle should be 15 psi (103 kPa).</p>	<p>Tighten or replace lines and fittings as necessary (WP 0032 00, WP 0033 00, or WP 0034 00). If the problem still exists, go to Test 2.</p> <p>1. If the fuel pressure is below 15 psi (103 kPa), replace fuel filter element (WP 0045 00 or WP 0046 00).</p> <p>2. If the fuel pressure is still low, replace the fuel transfer pump (WP 0281 00).</p> <p>3. If the fuel pressure is correct, go to Test 3.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>9. Not Enough Power - Continued.</p>	<div style="display: flex; justify-content: space-around; align-items: center;">   <div style="text-align: center;"> <p>WARNING</p> <p>When opening fuel system, do not look directly at fitting. Fuel is under pressure. Wear eye protection. Failure to follow this warning may cause injury to personnel.</p> </div>  </div> <ol style="list-style-type: none"> 3. Check the fuel injection nozzles. Run the engine at an RPM that causes roughness. Loosen a fuel line nut on the injection nozzle of each cylinder one at a time, then tighten (WP 0278 00). 4. Check for air in fuel system. 5. Check for bad fuel (TM 5-3805-261-10). Bad fuel will have a milky-white color. 6. Inspect air cleaner. Check to see if red "service" indicator is showing (TM 5-3805-261-10). 7. Inspect turbocharger exhaust and inlet couplings for misalignment, leaks, carbon deposits, and other causes of friction. 	<p>If loosening a fuel line nut does not make a difference, replace injection nozzle (WP 0278 00). If the problem still exists, go to Test 4.</p> <p>Bleed injection lines (WP 0032 00). If the problem still exists, go to Test 5.</p> <p>Drain bad fuel (TM 5-3805-261-10). Bleed injection lines (WP 0032 00). Replace fuel filters (WP 0045 00, WP 0046 00, and WP 0047 00). If the problem still exists, go to Test 6.</p> <p>Replace primary element (WP 0037 00). If the problem still exists, go to Test 7.</p> <p>Replace entire unit if defective (WP 0283 00).</p>
	<p>10. Too Much Vibration.</p>	<ol style="list-style-type: none"> 1. Check the pulley and vibration damper mounting, bolt and nut (WP 0271 00). 2. Check the pulley and vibration damper, for damage (WP 0271 00). 3. Check the engine supports for damage or loose hardware (WP 0268 00).

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>11. Clicking Noise in Rocker Arm Cover.</p>	<ol style="list-style-type: none"> 1. Check the valve springs and locks. 2. Check the lubrication in the rocker arm cover. There must be a strong flow of oil at the high RPM and a small flow at a low RPM. 3. Check the valve clearance. 4. Check the valves. 	<p>If the valve springs or locks are damaged or defective, replace (WP 0274 00). If the problem still exists, go to Test 2.</p> <ol style="list-style-type: none"> 1. If the oil flow is very low, check oil pressure. 2. If oil pressure is low, replace engine oil pump (WP 0276 00). 3. If oil pressure is correct, go to Test 3. <ol style="list-style-type: none"> 1. If the valve clearance is too much, adjust (WP 0273 00). 2. If the valve clearance is correct, go to Test 4. <ol style="list-style-type: none"> 1. If the valves are damaged or defective, replace valves (WP 0274 00). 2. If the valve are not damaged, replace cylinder head (WP 0270 00).
<p>12. Mechanical Noise in Engine.</p>	<p>Check for connecting rod and bearing noise.</p>	<p>If noise is heard, replace engine (WP 0267 00).</p>
<p>13. Fuel Consumption Is Too High.</p>	<ol style="list-style-type: none"> 1. Check the fuel injection nozzles. 2. Inspect fuel system for leaks. 	<p>If the fuel injection nozzles are damaged or defective, service or replace (WP 0278 00). If the problem still exists, go to Test 2.</p> <p>Replace defective fuel lines and bleed fuel lines (WP 0035 00, WP 0041 00, and WP 0042 00).</p>
<p>14. Loud Noise from Valves or Valve Drive Components.</p>	<ol style="list-style-type: none"> 1. Check the valve springs. 2. Check the valves. 	<p>If the valve springs are damaged or defective, replace (WP 0274 00). If the problem still exists, go to Test 2.</p> <p>If the valves are damaged or defective, replace (WP 0274 00).</p>
<p>15. Limited Rocker Arm Movement or Too Much Valve Clearance.</p>	<ol style="list-style-type: none"> 1. Check the valve clearance. 2. Check the face of the rocker arms contacting valve. 3. Check the valve stems. 4. Check the push rods. 	<p>If there is too much valve clearance, adjust (WP 0274 00). If the problem still exists, go to Test 2.</p> <p>If a rocker arm is worn, damaged, or defective, replace (WP 0273 00). If the problem still exists, go to Test 3.</p> <p>If a valve stem is worn, damaged, or defective, replace (WP 0274 00). If the problem still exists, go to Test 4.</p> <p>If the push rods are worn, damaged, or defective, replace (WP 0273 00). If the problem still exists, go to Test 5.</p>



MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>15. Limited Rocker Arm Movement or Too Much Valve Clearance - Continued.</p>	<p>5. Check the valve lifters.</p> <p>6. Check the cams on camshaft.</p>	<p>If the valve are not moving freely, replace valve lifters (WP 0273 00).If the problem still exists, go to Test 6.</p> <p>If the cams are worn, damaged, or defective, replace engine (WP 0267 00).</p>
<p>16. Valve Rotocoil or Spring Lock Is Free.</p>	<p>1. Check the locks. Locks with damage can cause the valve to fall into the cylinder.</p> <p>2. Check the valve springs.</p>	<p>If the locks are damaged or defective, replace (WP 0274 00). If the problem still exists, go to Test 2.</p> <p>If the valve springs are damaged or defective, replace (WP 0274 00).</p>
<p>17. Oil at Exhaust.</p>	<p>1. Check the turbocharger for signs of oil.</p> <p>2. Check the valve guides.</p>	<p>If there is oil on the turbocharger, replace. (WP 0283 00). If the problem still exists, go to Test 2.</p> <p>If the valve guides are worn, replace (WP 0274 00).</p>
<p>18. Coolant in the Lubrication Oil.</p>	<p>1. Check the oil cooler for leaks and/or damage.</p> <p>2. Check the cylinder head gasket (WP 0270 00).</p> <p>3. Check the seals of the cylinder liners.</p>	<p>If the core is damaged or defective, replace (WP 0029 00). If the problem still exists, go to Test 2.</p> <p>1. If the cylinder head gasket is damaged or defective, replace (WP 0270 00).</p> <p>2. If the cylinder gasket is OK, replace engine (WP 0267 00). If the problem still exists, go to Test 3.</p> <p>If you suspect a problem with the liner seals, replace engine (WP 0267 00).</p>
<p>19. Too Much Black or Gray Smoke.</p>	<p>1. Check the fuel injection nozzles. Refer to <i>Test Procedure</i> (WP 0278 00).</p> <p>2. Check the turbocharger for signs of oil.</p>	<p>If the injection nozzle is bad, replace (WP 0278 00). If the problem still exists, go to Test 2.</p> <p>If there is oil on the turbocharger, replace (WP 0283 00).</p>
<p>20. Too Much White or Blue Smoke.</p>	<p>Check engine oil level (TM 5-3805-2261-10).</p>	<p>If overfilled, lower to correct level (TM 5-3805-261-10).</p>
<p>21. Transmission Oil in the Lubrication Oil</p>	<p>1. Check the oil levels in both the transmission and engine (WP 0023 00).</p> <p>2. If there is low transmission/high engine or high transmission/low engine oil, adjust the oil level to the proper level in both the transmission and engine (TM 5-3805-261-10).</p>	

ENGINE TROUBLESHOOTING PROCEDURES - CONTINUED

0006 00


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>21. Transmission Oil in the Lubrication Oil - Continued.</p>	<p>3. Run the machine and recheck the oil levels (TM 5-3805-261-10).</p> <p>4. An increase in engine oil level and simultaneous decrease in transmission oil level indicates the rear crankshaft seal and wear sleeve are defective.</p>	<p>Replace engine (WP 0267 00).</p>

END OF WORK PACKAGE


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Engine Overheats.</p> <p>2. Engine Does Not Reach Operating Temperature.</p>	<div style="text-align: center;">  WARNING  </div> <ul style="list-style-type: none"> • DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns. • DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns. • Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury to personnel. <ol style="list-style-type: none"> 1. Check for restrictions to air flow. Inspect fan blades, fan shields, baffles, and plates. 2. Check for proper belt tension and wear (WP 0061 00). 3. Check hoses, lines, and fittings for leakage. Tighten loose connections. 4. Check for loss of pressure. 5. Check for free flow of coolant through the radiator. 6. Inspect and test temperature regulator (WP 0059 00). 7. Check coolant flow from open drain outlet. 8. Check coolant pump operation. <ol style="list-style-type: none"> 1. Check condition of radiator cap. 2. Inspect and test temperature regulator (WP 0059 00). 	<p>Replace damaged or missing parts (WP 0053 00 and WP 0063 00). If the problem still exists, go to Test 2.</p> <p>Replace belts if necessary (WP 0061 00). If the problem still exists, go to Test 3.</p> <p>Replace hoses and clamps if necessary (WP 0057 00). If the problem still exists, go to Test 4.</p> <p>Tighten radiator cap. Replace radiator cap if necessary (WP 0065 00). If the problem still exists, go to Test 5.</p> <p>Flush radiator (WP 0065 00). Replace radiator if necessary (WP 0065 00). If the problem still exists, go to Test 6.</p> <p>Replace temperature regulator if necessary (WP 0059 00). If the problem still exists, go to Test 7</p> <p>If coolant is dirty and flow is slow, replace radiator (WP 0052 00). If the problem still exists, go to Test 8.</p> <p>Replace pump if necessary (WP 0060 00).</p> <p>Tighten radiator cap. Replace radiator cap if necessary (WP 0065 00). If the problem still exists, go to Test 2.</p> <p>Replace temperature regulator (thermostat) if necessary (WP 0059 00).</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. Coolant Contaminated.</p>	<ol style="list-style-type: none"> 1. Check engine oil for signs of coolant. 2. Check transmission oil for signs of coolant. 	<p>Refer to WP 0006 00, Malfunction 21. If the problem still exists, go to Test 2.</p> <p>Refer to WP 0009 00, Malfunction 6.</p>


END OF WORK PACKAGE


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Batteries Will Not Maintain Charge.</p>	<div style="text-align: center;">  <p>WARNING</p> </div> <ul style="list-style-type: none"> • To avoid injury, eye protection and acid-resistant gloves must be worn when working around batteries. Do not smoke, use open flame, make sparks, or create other ignition sources around batteries. If a battery is giving off gases, it can explode and cause injury to personnel. Remove all jewelry such as rings, ID tags, watches, and bracelets. If jewelry or a tool contacts a battery terminal, a direct short will cause instant heating, damage to equipment, and injury to personnel. • Sulfuric acid contained in batteries can cause serious burns. If battery corrosion or electrolyte makes contact with skin, eyes or clothing, take immediate action to stop the corrosive burning effects. Failure to follow these procedures may cause injury or death to personnel. <ol style="list-style-type: none"> a. <u>Eyes</u>. Flush with cold water for no less than 15 minutes and seek medical attention immediately. b. <u>Skin</u>. Flush with large amounts of cold water until all acid is removed. Seek medical attention as required. c. <u>Internal</u>. If corrosion or electrolyte is ingested, drink large amounts of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Seek medical attention immediately. d. <u>Clothing/Equipment</u>. Wash area with large amounts of cold water. Neutralize acid with baking soda or household ammonia. <ol style="list-style-type: none"> 1. Check electrolyte temperature and specific gravity (TM 9-6140-200-14). 2. Perform load test (TM 9-6140-200-14). <p>Check rate of charging. Place battery on charge and ensure that cells are venting.</p>	<ol style="list-style-type: none"> 1. If temperature is over 120°F (49°C) and specific gravity is 1.300 or greater, batteries are being overcharged. Refer to <i>Malfunction 7</i>. 2. If temperature is over 120°F (49°C), but specific gravity is 1.225-1.235, recharge battery. Refer to TM 9-6140-200-14. If the problem still exists, go to Test 2. <p>If batteries are defective, replace (WP 0125 00).</p> <p>If specific gravity does not recover to 1.240 in 25 hours of charging, replace battery (WP 0125 00).</p>
<p>2. Specific Gravity Will Not Increase to 1.240 Under Charge.</p>		

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. Engine Will Not Crank.</p>	<p>1. Inspect batteries.</p> <p>a. Visually inspect batteries for cracks, leaks, and corroded or broken terminal posts.</p> <p>b. Check for loose, broken, or worn terminals and cables.</p> <p>c. Check electrolyte level in each battery cell (TM 9-6410-200-14).</p> <p>d. Perform specific gravity test (TM 9-6410-200-14). Batteries must test 1.240 or greater, temperature corrected, and each cell in battery must test within 25 points of the others.</p> <p>NOTE</p> <p>If STE/ICE-R is available, perform STE/ICE-R testing (WP 0014 00).</p> <p>2. Test batteries under load to determine adequate current capability and voltage drop during a 15 second amperage load.</p>	<p>1. Replace any cracked, leaking, corroded, or broken batteries or batteries with loose or broken terminal posts (WP 0125 00).</p> <p>2. Clean corroded terminal posts.</p> <p>1. Tighten any loose terminal or cable.</p> <p>2. Replace any terminal or cable that is broken or worn (WP 0125 00).</p> <p>Fill each cell to fill ring with distilled water.</p> <p>1. Charge all batteries not meeting requirements and recheck specific gravity.</p> <p>2. If 25 point variation still exists, battery is defective and must be replaced (WP 0125 00).</p> <p>3. Tighten battery ground wire at tractor chassis ground. Tighten battery positive wire at starter solenoid. If the problem still exists, go to Test 2.</p>

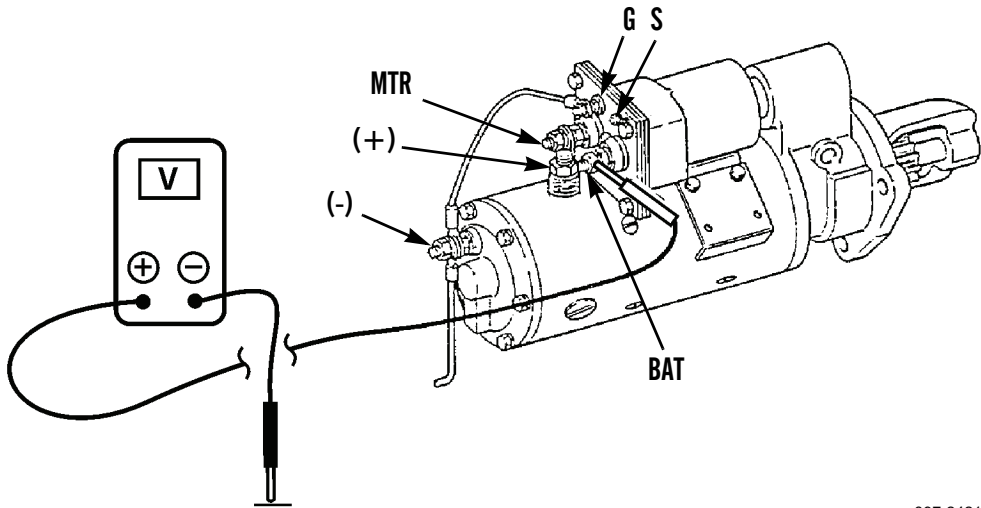MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. Engine Will Not Crank - Continued.</p>	 <p>397-2421</p> <ol style="list-style-type: none"> a. Set multimeter to appropriate voltage range (WP 0021 00). b. Connect meter positive lead to solenoid terminal BAT and negative lead to ground strap. c. Place battery disconnect switch in the ON position. Meter should read battery voltage. d. With meter still connected as above, place exterior light switch to the ON position for approximately 15 seconds. Meter reading should not be below 18 volts. <p>3. Test starting motor. Go to <i>Malfunction 5</i>.</p>	<ol style="list-style-type: none"> 1. Recharge batteries if voltage reading is low (TM 9-6140-200-14). Each cell of battery must show 1.6 volts. 2. If voltage reading is OK, go to Test 3.
<p>4. All Machine Electrical Systems Are Inoperative.</p>	<ol style="list-style-type: none"> 1. Test battery disconnect switch for continuity. <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Disconnect negative battery cable from battery. 	

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>4. All Machine Electrical Systems Are Inoperative - Continued.</p>	<ul style="list-style-type: none"> c. Disconnect cables from battery disconnect switch (WP 0081 00). d. Set multimeter to the appropriate ohm (Ω) range (WP 0021 00). e. Connect meter between battery disconnect switch terminals. f. Place battery disconnect switch in ON position. <ol style="list-style-type: none"> 2. Check connection of battery cables and condition of terminals. Check that battery is correctly connected to batteries, starter, and chassis ground. 3. Inspect batteries. 4. If STE/ICE-R is available, perform battery STE/ICE-R Testing (WP 0014 00). 	<ol style="list-style-type: none"> 1. Replace battery disconnect switch if continuity is not indicated (WP 0081 00). 2. If continuity is indicated, go to Test 2. <p>Clean and/or reconnect battery cables if necessary. If the problem still exists, go to Test 3.</p> <p>Perform <i>Malfunction 3, Test 1</i>. If the problem still exists, go to Test 4.</p>
<p>5. Starting Motor Is Inoperative.</p>	<p style="text-align: center;">NOTE</p> <p style="text-align: center;">If STE/ICE-R is available, perform Starting System STE/ICE-R Testing (WP 0017 00).</p> <ol style="list-style-type: none"> 1. Check starting system main circuit breaker (60A) and reset as necessary. 2. Check starter solenoid operation. <ul style="list-style-type: none"> a. Place battery disconnect switch to ON position. Turn start switch fully to the right and listen for starter solenoid to energize. b. Place battery disconnect switch to OFF position. c. Check continuity of connector between starting motor-to-solenoid connector (WP 0021 00). 	<p>If circuit breaker did not require reset. If the problem still exists, go to Test 2.</p> <ol style="list-style-type: none"> 1. If thump of starter solenoid energizing is heard, go to Step b. 2. If thump of solenoid is not heard, go to <i>Malfunction 5, Test 3</i>. <ol style="list-style-type: none"> 1. If no continuity is indicated, repair the connection (WP 0021 00). 2. If continuity is indicated, go to Step d.

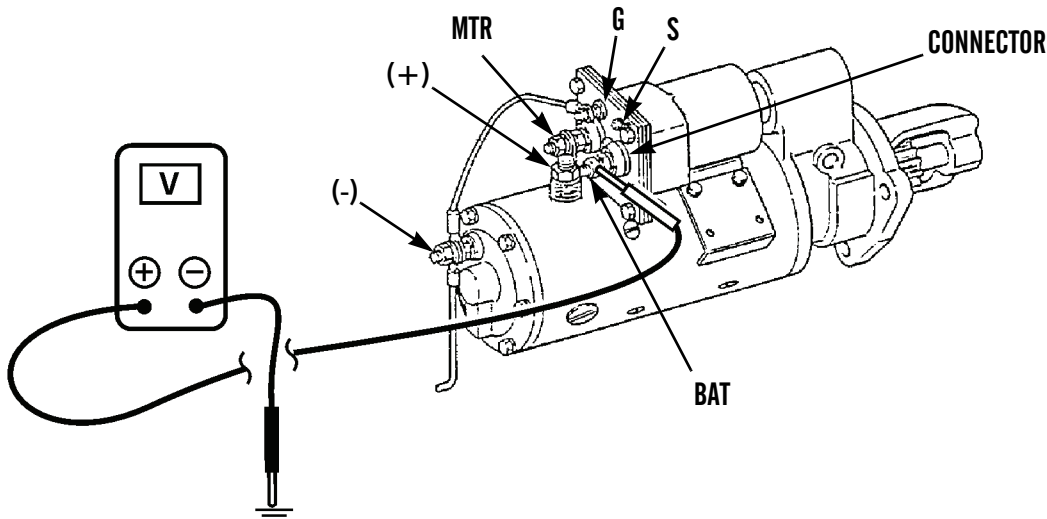
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<p>d. Inspect and clean ground connections on back of starter and tighten nut.</p> <p>3. Test starter circuit source voltage.</p> <p>a. Place battery disconnect switch in OFF position.</p> <p>b. Place multimeter to appropriate voltage range (WP 0021 00).</p> <p>c. Connect multimeter positive lead to "BAT" terminal on solenoid and negative lead to chassis ground.</p> <p>d. Place battery disconnect switch in ON position.</p>	<p>If starter is still inoperative, go to Test 4.</p> <p>If battery voltage is indicated, go to Test 5.</p>
 <p style="text-align: right;">397-2422</p>		
	<p>e. Check battery connections.</p> <p>f. If battery disconnect switch and connections are OK, check wiring continuity.</p> <p>4. Check starting motor voltage.</p> <p>a. Connect meter positive lead to solenoid terminal MTR and negative lead to chassis ground.</p> <p>b. Place battery disconnect switch to ON position.</p>	<p>Repair or replace broken wire(s) between battery and starting motor (WP 0021 00).</p> <p>If the problem still exists, go to Test 4.</p>

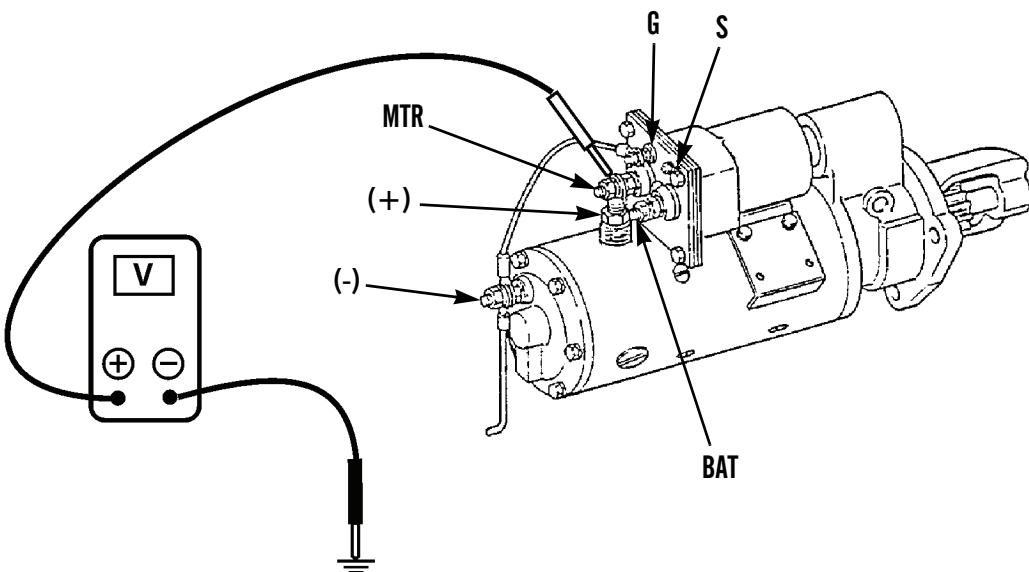
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<p>c. Momentarily turn start switch fully to the right and observe meter reading.</p>  <p>5. Check starter relay and solenoid.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Set multimeter to appropriate voltage range. c. Connect meter positive lead to terminal S on solenoid. d. Connect meter negative lead to chassis ground. e. Turn battery disconnect switch to ON position. 	<p>1. If battery voltage is indicated, replace starting motor (WP 0067 00).</p>

397-2423

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<p>f. Momentarily turn start switch fully to the right and observe meter reading.</p>	<p>1. If voltage is indicated, go to Test 6. 2. If voltage is not indicated, go to Test 7.</p>
<p>The diagram shows a solenoid with five terminals: MTR, G, S, (+), and (-). A voltmeter is connected to the (+) and (-) terminals. The voltmeter has a display window with the letter 'V' and two terminals labeled '+' and '-'. A ground symbol is connected to the negative lead of the voltmeter. The solenoid is labeled 'BAT'.</p>		
<p>397-2424</p>		
<p>6. Test G terminal for continuity to ground.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Connect meter positive lead to G terminal on solenoid. 		


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<p>c. Connect meter negative lead to chassis ground and observe reading.</p>	<p>1. If continuity is indicated, replace starting motor ((WP 0067 00)).</p> <p>2. If no continuity is indicated, repair the ground circuit (WP 0021 00). If the problem still exists, go to Test 7.</p>
<p style="text-align: right;">397-2425</p> <p>7. Test starter relay.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Set multimeter to appropriate voltage range. c. Connect meter positive lead to smaller gauge wire with no insulation and negative lead to chassis ground. d. Place battery disconnect switch to ON position. 		

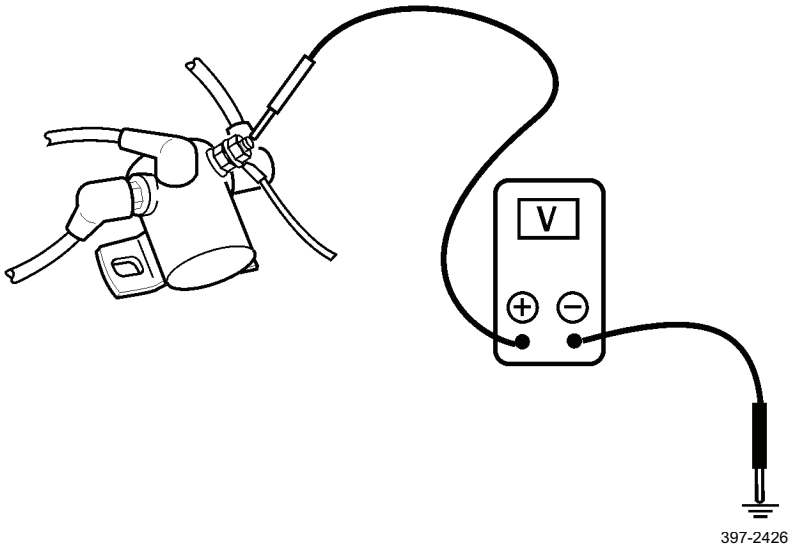MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<p>e. Momentarily turn start switch fully to the right and observe meter.</p>	<p>1. If voltage is indicated, go to Test 8.</p> <p>2. If voltage is not indicated, place battery disconnect switch in OFF position, reconnect white wire and go to Test 11.</p>
		
<p>8. Test for voltage between starter relay and chassis ground.</p> <p>a. Place battery disconnect switch in OFF position.</p> <p>b. Disconnect ground from starter relay.</p> <p>c. Connect meter positive lead to ground terminal on relay (relay side).</p> <p>d. Connect meter negative lead to chassis ground.</p>		

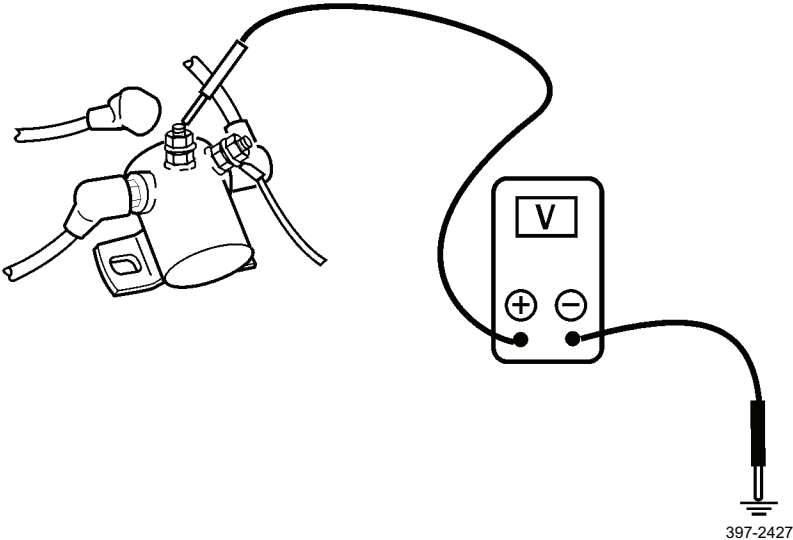MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<p>e. Place battery disconnect switch to ON position.</p> <p>f. Momentarily turn start switch fully to the right and observe meter.</p>	<p>1. If voltage is indicated, go to Test 9.</p> <p>2. If voltage is not indicated, replace relay (WP 0068 00). If the problem still exists, go to Test 9.</p>
 <p>397-2427</p>		

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<p>9. Test for continuity between starter relay ground wire and chassis ground.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Connect meter positive lead to ground wire for relay (harness side). c. Connect meter negative lead to chassis ground and observe reading. 	<ol style="list-style-type: none"> 1. If continuity is indicated, go to Test 10. 2. If continuity is not indicated, repair the ground (WP 0021 00). If the problem still exists, go to Test 2.
<p style="text-align: right; margin-right: 50px;">397-2428</p>		
	<p>10. Test for continuity between starter relay ground and starter solenoid.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Disconnect both larger gauge wires from starter relay. 	


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<p>c. Connect meter leads as shown in the illustration below and measure continuity.</p>	<p>1. If continuity is indicated, replace starter relay (WP 0068 00).</p> <p>2. If continuity is not indicated, repair circuit(s) in question (WP 0021 00). If the problem still exists, go to Test 11.</p>

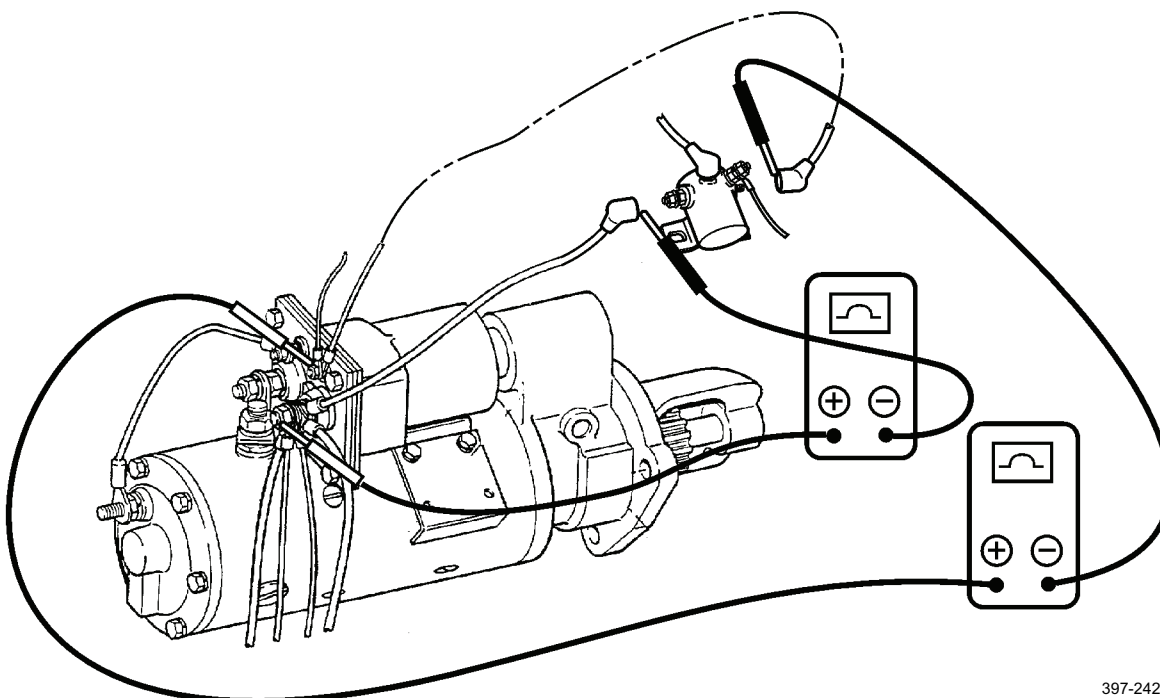

397-2429

	<p>11. Test voltage to start switch.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Disconnect orange lead from start switch BAT terminal. c. Set multimeter to appropriate voltage range. d. Connect meter positive lead to orange lead (harness side) and negative lead to chassis ground. 	
--	---	--


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Starting Motor Is Inoperative - Continued.</p>	<ul style="list-style-type: none"> e. Place battery disconnect switch to ON position and observe multimeter reading. f. Place battery disconnect switch to OFF position and check wiring for continuity. <p>12. Test engine start switch starter for continuity.</p> <ul style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Disconnect engine start switch. c. Connect meter positive lead to terminal where orange lead connects (switch side). d. Connect meter negative lead to terminal where white lead connects (switch side). e. Turn start switch fully to the right. 	<p>If voltage is indicated, go to Test 12.</p> <p>Repair or replace broken wire(s) (WP 0021 00). If voltage is indicated, go to Test 12.</p> <ul style="list-style-type: none"> 1. If continuity is indicated, repair open circuit between engine start switch and starter relay. 2. If continuity is not indicated, replace engine start switch (WP 0079 00).
<p>6. Solenoid and Starting Motor Operate; Engine Cranks Slowly.</p>	<p style="text-align: center;">NOTE</p> <p>If STE/ICE-R is available, perform Starting System STE/ICE-R Testing (WP 0017 00).</p> <ul style="list-style-type: none"> 1. Check batteries for overheating. <ul style="list-style-type: none"> a. Crank engine for 15 seconds. <p style="text-align: center;">WARNING</p> <p>Touch terminal connections one at a time; never touch both terminals at once. Be sure not to be grounded to the machine when checking. Failure to do so may cause serious personal injury or death.</p> <ul style="list-style-type: none"> b. Feel battery terminal connections. <ul style="list-style-type: none"> 2. Test specific gravity for each battery, perform <i>Malfunction 1, Test 1</i>. 3. Test starting motor voltage. 	<p>If battery terminal(s) are hot, clean corroded connection(s). Tighten all loose connections at batteries, ground, and starter. If the problem still exists, go to Test 2.</p> <p>If the problem still exists, go to Test 3.</p>

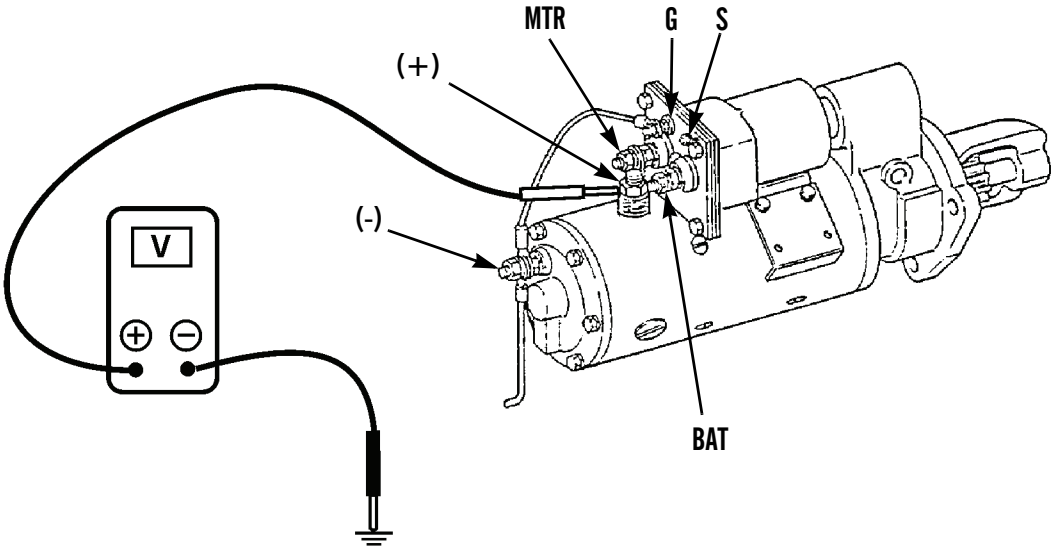MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. Solenoid and Starting Motor Operate; Engine Cranks Slowly - Continued.</p>	<p>a. Set multimeter to appropriate voltage range.</p> <p>b. Connect meter positive lead to positive terminal on starting motor and negative meter lead to chassis ground.</p>  <p>c. Crank engine and observe voltage reading on meter. Voltage should exceed 22 volts.</p>	<p>1. If voltage is low, place battery disconnect switch in OFF position and clean and tighten starting motor terminal connections. If problem still exists, go to Test 4.</p>

397-2430

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. Solenoid and Starting Motor Operate; Engine Cranks Slowly - Continued.</p>	<p>4. Perform voltage drop test on starting motor-to-solenoid connector.</p> <p>a. Connect meter negative lead to positive terminal on starting motor and meter positive lead to MTR terminal on solenoid.</p> <p>b. Crank engine and observe meter.</p>	<p>If voltage reading exceeds 0.1 volt, place battery disconnect switch in OFF position and clean and tighten starting motor-to-solenoid connections. Replace if broken. If the problem still exists, go to Test 5.</p>
<p>5. Perform voltage drop test on solenoid contactors.</p> <p>a. Connect meter positive lead to solenoid BAT terminal and meter negative lead to solenoid MTR terminal.</p>		

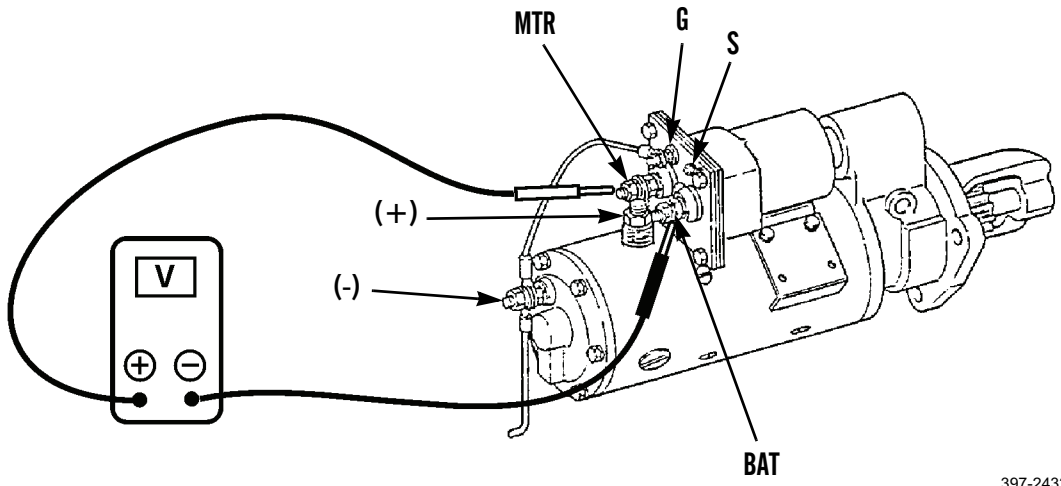
397-2431

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. Solenoid and Starting Motor Operate; Engine Cranks Slowly - Continued.</p>	<p>b. Crank engine and observe meter.</p>  <p>6. Test negative cable voltage drop from batteries to starting motor.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Connect meter positive lead to negative terminal on starting motor and meter negative lead to chassis ground. c. Place battery disconnect switch to ON position. 	<p>1. If voltage reading is 0.4 volt, replace starting motor (WP 0067 00). If malfunction still exists, go to Tests 6, 7, and 8.</p>

397-2432

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. Solenoid and Starting Motor Operate; Engine Cranks Slowly - Continued.</p>	<p>d. Crank engine and observe meter.</p>	<p>If voltage exceeds 0.4 volt, clean and tighten cable connections at batteries, starting motor, and chassis ground points. If the problem still exists, go to Test 7.</p>
<p>397-2433</p>		
<p>7. Test positive cable voltage from batteries to solenoid.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Connect meter positive lead to battery positive terminal and meter negative lead to solenoid BAT terminal. c. Place battery disconnect switch to ON position. 		


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. Solenoid and Starting Motor Operate; Engine Cranks Slowly - Continued.</p>	<p>d. Crank engine and observe meter.</p>	<p>If voltage exceeds 0.4 volt, clean and tighten cable connections at batteries, starting motor, and chassis ground points. If the problem still exists, go to Test 8.</p>

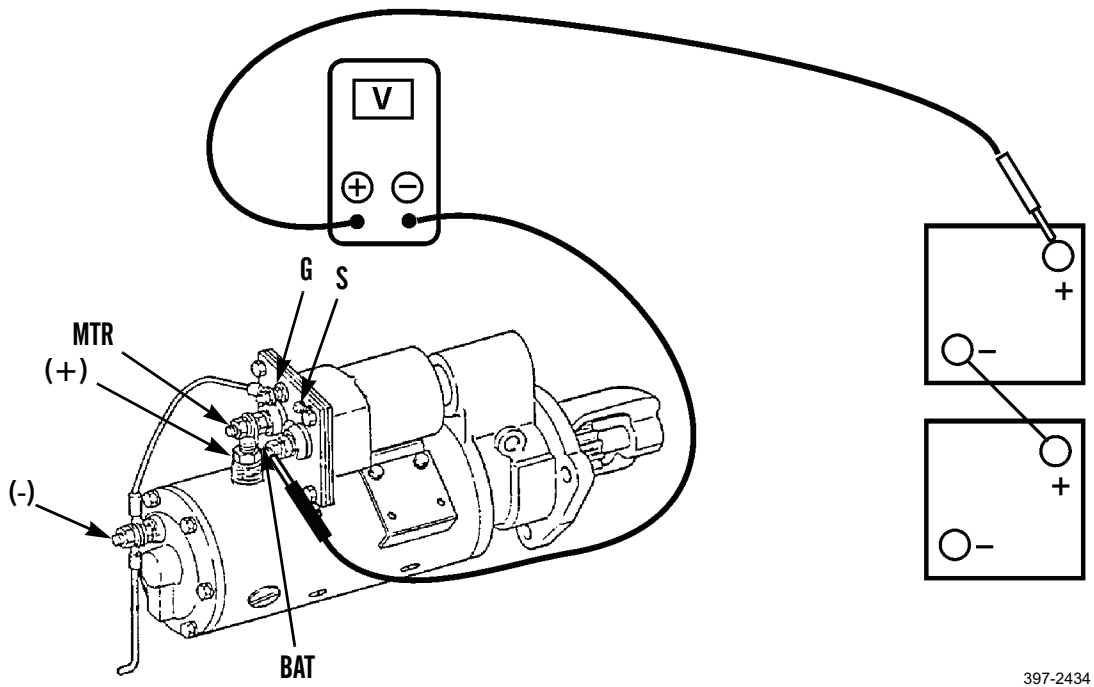


397-2434

- 8. Test battery voltage after cranking load is applied.
 - a. Set multimeter to appropriate voltage range.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. Solenoid and Starting Motor Operate; Engine Cranks Slowly - Continued.</p>	<p>b. Connect meter lead directly across battery terminals as shown below.</p> <p>c. Push governor control lever forward past detent and crank engine for approximately 30 seconds. Observe meter reading after cranking has stopped.</p>	<p>1. If voltage is not 20 volts or more, go to <i>Malfunction 2</i>.</p> <p>2. If voltage is satisfactory, replace starting motor (WP 0067 00).</p>

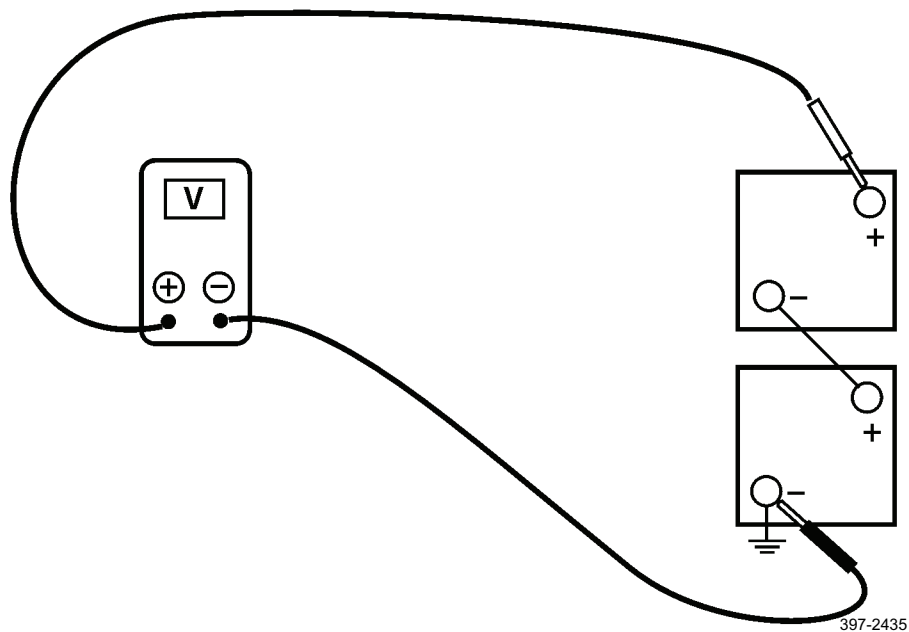


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>7. Batteries Will Not Maintain Charge.</p>	<p style="text-align: center;">NOTE</p> <p>If STE/ICE-R is available, perform Battery STE/ICE-R Testing (WP 0018 00).</p> <p>Test charging voltage.</p> <ol style="list-style-type: none"> Check connections for tightness. Set multimeter to appropriate voltage range (WP 0021 00). Connect multimeter directly across battery terminals as shown. Start engine and allow it to stabilize. 	<p>Tighten if necessary.</p> <p>If meter does not indicate 26.5 to 28 volts, replace alternator (WP 0066 00).</p>
<p>8. Batteries Use Excessive Water.</p>	<p style="text-align: center;">NOTE</p> <p>If STE/ICE-R is available, perform Battery STE/ICE-R Testing (WP 0018 00).</p> <ol style="list-style-type: none"> Visually inspect batteries for leaks. Test charging voltage. Go to <i>Malfunction 7</i>. 	<p>Replace batteries as required (WP 0125 00). If the problem still exists, go to Test 2.</p>

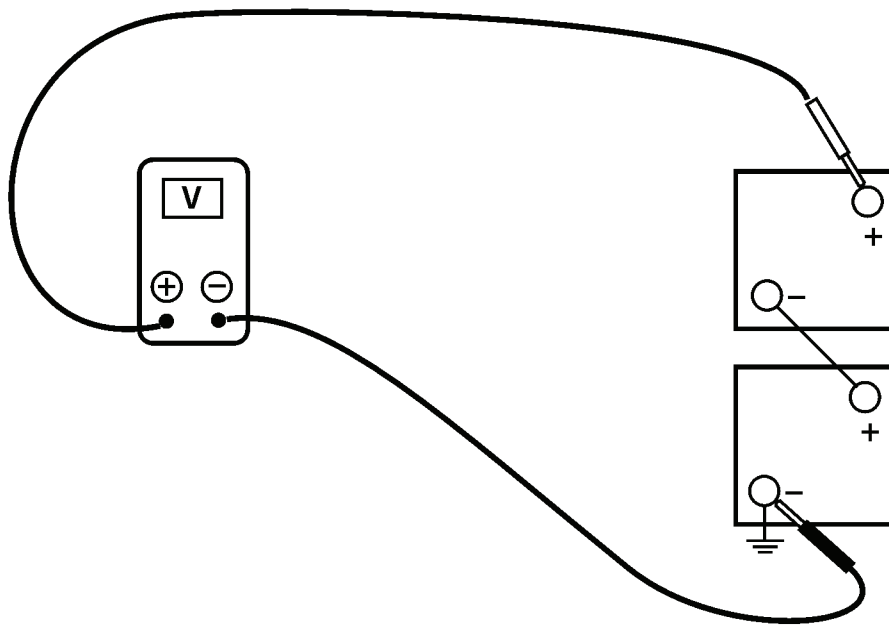

3972435

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>9. Batteries Run Down in Service.</p>	<p style="text-align: center;">NOTE</p> <p>If STE/ICE-R is available, perform Battery STE/ICE-R Testing (WP 0018 00).</p> <ol style="list-style-type: none"> 1. Check for loose, broken, or missing alternator belts. 2. Test charging voltage. Go to <i>Malfunction 7</i>. 	<ol style="list-style-type: none"> 1. Adjust loose belts (WP 0061 00). 2. Replace broken or missing belts (WP 0061 00). If the problem still exists, go to Test 2.
<p>10. No Alternator Output.</p>	<p style="text-align: center;">NOTE</p> <p>If STE/ICE-R is available, perform Test #90 (TM 9-4910-571-12&P).</p> <ol style="list-style-type: none"> 1. Check for loose, broken, or missing alternator belts. 2. Check connections for tightness. 3. Test alternator circuit voltage. <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Set multimeter to appropriate voltage range. c. Connect meter positive lead to orange lead disconnected from alternator positive terminal and meter negative lead to chassis ground. 	<ol style="list-style-type: none"> 1. Adjust loose belts (WP 0061 00). 2. Replace broken or missing belts (WP 0061 00). If the problem still exists, go to Test 2. <p>Tighten if necessary. If the problem still exists, go to Test 3.</p>

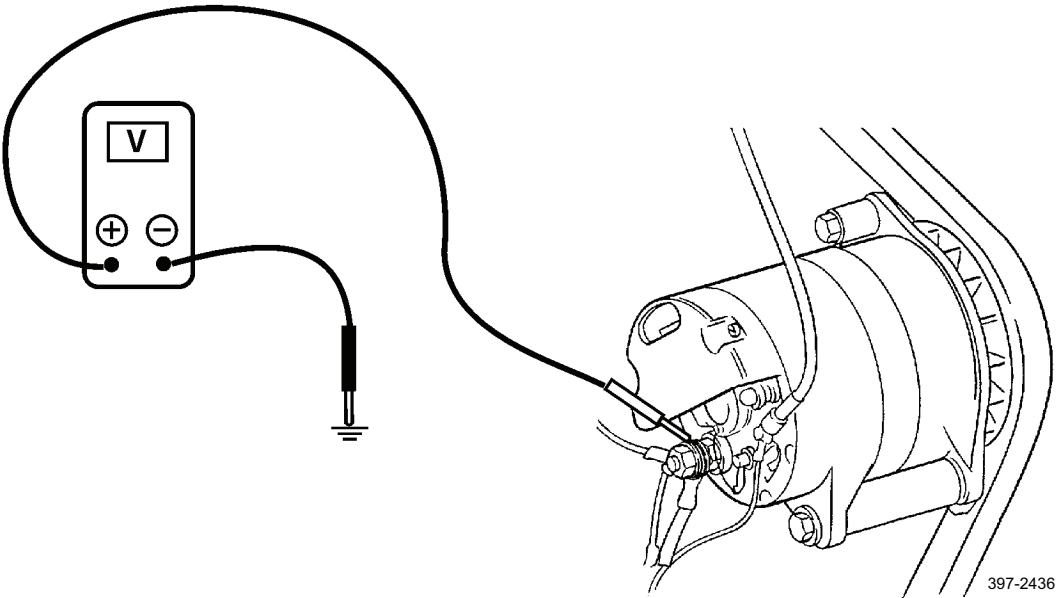MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>10. No Alternator Output - Continued.</p>  <p>11. Alternator Charge Is Too High.</p> <p>12. All Driving, Tail, and Panel Lights Fail to Operate.</p>	<p>d. Place battery disconnect switch to ON position and observe multimeter reading.</p> <p>e. If battery voltage is indicated, place battery disconnect switch in OFF position.</p> <p>f. Check continuity between alternator and ground.</p> <p>NOTE</p> <p>If STE/ICE-R is available, perform Test #90 (TM 9-4910-571-12&P).</p> <p>Test charging voltage. Go to <i>Malfunction 10</i>.</p> <p>1. Check main circuit breaker (60A).</p>	<p>1. Repair or replace alternator ground (WP 0021 00).</p> <p>2. If continuity is present, replace alternator (WP 0066 00).</p> <p>If out of range, replace alternator (WP 0066 00).</p> <p>1. Reset circuit breaker.</p> <p>2. Replace if defective. If the problem still exists, go to Test 2.</p>


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>12. All Driving, Tail, and Panel Lights Fail to Operate - Continued.</p>	<p>2. Check wiring harness for corrosion, cracks, and breaks at circuit breaker connection.</p>	<p>Repair wiring harness if damaged or defective (WP 0021 00).</p>
<p>13. All Stop/Tail, Panel, and Articulation Lights Fail to Operate.</p>	<p>1. Check stop lights fuse (10A), and operator panel fuse (5A).</p>	<p>Replace fuse if blown (WP 0096 00). If the problem still exists, go to Test 2.</p>
<p>14. Headlights Fail to Operate.</p>	<p>2. Test continuity of stop light switch. Connect multimeter to back of switch.</p>	<p>If multimeter indicates no reading, the circuit does not have continuity. Replace stop light switch (WP 0117 00). If the problem still exists, go to Test 3.</p>
<p>14. Headlights Fail to Operate.</p>	<p>3. Check wiring harness for corrosion, cracks, and breaks.</p>	<p>Repair wiring harness if damaged or defective (WP 0021 00). Replace wiring harness if repair is not possible (WP 0285 00 or WP 0289 00).</p>
<p>14. Headlights Fail to Operate.</p>	<p>1. Check headlight circuit breaker (15A).</p>	<p>Replace if defective. If the problem still exists, go to Test 2.</p>
<p>14. Headlights Fail to Operate.</p>	<p>2. Test the continuity of the headlight switch.</p>	<p>If the multimeter indicates no reading, the circuit does not have continuity. Replace light switch (WP 0101 00). If the problem still exists, go to Test 3.</p>
<p>14. Headlights Fail to Operate.</p>	<p>3. Test the continuity of the dimmer switch. Connect multimeter to back of switch.</p>	<p>If multimeter indicates no reading, the circuit does not have continuity. Replace dimmer switch (WP 0103 00). If the problem still exists, go to Test 4.</p>
<p>14. Headlights Fail to Operate.</p>	<p>4. Check wiring harness for corrosion, cracks, and breaks.</p>	<p>Repair wiring harness if damaged or defective (WP 0021 00). Replace wiring harness if necessary (WP 0288 00).</p>
<p>15. Individual Light Fails to Operate.</p>	<p>1. Check the bulb.</p>	<p>If the bulb is burned out, replace. If the problem still exists, go to Test 2.</p>
<p>15. Individual Light Fails to Operate.</p>	<p>2. Check the wiring harness.</p>	<p>Repair wiring harness if damaged or defective (WP 0021 00). Replace wiring harness if necessary (WP 0285 00 through WP 0289 00). If the problem still exists, go to Test 3.</p>
<p>15. Individual Light Fails to Operate.</p>	<p>3. Check individual light socket.</p>	<p>Replace light socket if corrosion is evident or if socket is damaged or defective. If the problem still exists, go to Test 4.</p>


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>15. Individual Light Fails to Operate - Continued.</p>	<p>4. Test continuity of individual light assembly. Connect multimeter to terminal at back of light.</p> <p>5. Test continuity of wire assemblies between individual light and switch.</p> <p>6. Test continuity of light switch.</p>	<p>If multimeter indicates no reading, circuit does not have continuity. Replace light assembly. If the problem still exists, go to Test 5.</p> <p>Repair or replace individual wire assembly as necessary. If the problem still exists, go to Test 6.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace light switch (WP 0101 00).</p>
<p>16. All Turn Signal Lights and Indicators Fail to Operate.</p>	<p>1. Check main circuit breaker (60A).</p> <p>2. Check turn signal fuse (10A), and operator panel fuse (5A).</p> <p>3. Test continuity of flasher unit. Connect multimeter to bottom of unit.</p> <p>4. Test continuity of turn signal switch.</p>	<p>Reset circuit breaker. If the problem still exists, go to Test 2.</p> <p>Replace fuse if blown (WP 0096 00). If the problem still exists, go to Test 3.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace flasher unit (WP 0094 00). If the problem still exists, go to Test 4.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace turn signal switch (WP 0073 00).</p>
<p>17. Turn Signal Lamps Fail to Blink.</p>	<p>Test continuity of flasher unit. Connect multimeter to bottom of unit.</p>	<p>If multimeter indicates no reading, circuit does not have continuity. Replace flasher unit (WP 0094 00).</p>
<p>18. Both Floodlights Fail to Operate.</p>	<p>1. Check main circuit breaker (60A).</p> <p>2. Check blade lights fuse (15A) and rear floodlights fuse (15A).</p> <p>3. Test continuity of each floodlight assembly. Connect one multimeter lead to back of light housing and one to ground.</p> <p>4. Test continuity of headlight switch. Connect one multimeter lead to back of switch and one lead to ground.</p>	<p>Reset circuit breaker. If the problem still exists, go to Test 2.</p> <p>Replace fuse if blown (WP 0096 00). If the problem still exists, go to Test 3.</p> <p>If multimeter indicates no reading, the circuit does not have continuity. Replace floodlight assembly (WP 0105 00 or WP 0110 00). If the problem still exists, go to Test 4.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace light switch assembly (WP 0101 00).</p>
<p>19. Blackout Drive Lights Fail to Operate.</p>	<p>1. Check main circuit breaker (60A).</p> <p>2. Check blackout drive lights circuit breaker.</p>	<p>Reset circuit breaker. If the problem still exists, go to Test 2.</p> <p>Replace if defective. If the problem still exists, go to Test 3.</p>


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>19. Blackout Drive Lights Fail to Operate - Continued.</p>	<p>3. Test continuity of headlight switch in all blackout drive positions. Connect one multimeter lead to back of switch and one lead to ground.</p>	<p>If multimeter indicates no reading, circuit does not have continuity. Replace light switch assembly (WP 0101 00).</p>
<p>20. Dome Light Will Not Operate (CCE Machine).</p>	<p>1. Check dome light bulb.</p> <p>2. Test continuity of dome light switch. Connect multimeter to back of switch.</p> <p>3. Test continuity of dimmer register. Connect multimeter to back of resistor.</p>	<p>Replace dome light bulb if burned out (WP 0111 00). If the problem still exists, go to Test 2.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace dome light switch (WP 0099 00). If the problem still exists, go to Test 3.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace dimmer resistor (WP 0100 00).</p>
<p>21. Horn Fails to Operate.</p>	<p>1. Turn service lights on and check circuit breaker (60A).</p> <p>2. Check horn fuse (15A).</p> <p>3. Check horn assembly.</p> <p>4. Test continuity of horn switch. Connect one multimeter lead to back of switch and one to ground.</p> <p>5. Check horn wiring harness.</p>	<p>Reset circuit breaker. If the problem still exists, go to Test 2.</p> <p>Replace fuse if blown (WP 0096 00). If the problem still exists, go to Test 3.</p> <p>Replace horn assembly if damaged or defective (WP 0119 00). If the problem still exists, go to Test 4.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace horn switch (WP 0120 00). If the problem still exists, go to Test 5.</p> <p>Repair horn wiring harness if cracked, broken, or corroded (WP 0021 00). Replace horn wiring harness as necessary (WP 0141 00).</p>
<p>22. Backup Alarm Fails to Operate with Transmission in Reverse.</p>	<p>1. Turn on service lights and check backup alarm.</p> <p>2. Check main circuit breaker (60A).</p> <p>3. Check back-up alarm fuse (15A).</p> <p>4. Test continuity of backup alarm. Connect one multimeter lead to back of switch and one to ground.</p>	<p>Reset circuit breaker. If the problem still exists, go to Test 3.</p> <p>Replace fuse if blown (WP 0096 00). If the problem still exists, go to Test 4.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Adjust or replace backup alarm switch as necessary (WP 0122 00). If the problem still exists, go to Test 5.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>22. Backup Alarm Fails to Operate with Transmission in Reverse - Continued.</p>	<p>5. Check wiring harness.</p> <p>6. Check backup alarm.</p>	<p>Repair horn wiring harness if cracked, broken, or corroded (WP 0021 00). Replace wiring harness as necessary (WP 0285 00). If the problem still exists, go to Test 6.</p> <p>Replace backup alarm if damaged or defective (WP 0119 00).</p>
<p>23. Console Light Does Not Operate.</p>	<p>1. Check console lamp bulb.</p> <p>2. Check main circuit breaker (60A).</p> <p>3. Test continuity of console light switch. Connect one multimeter lead to back of switch and one to ground.</p>	<p>Replace console lamp bulb if burned out (WP 0078 00). If the problem still exists, go to Test 2.</p> <p>Reset circuit breaker. If the problem still exists, go to Test 3.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace light switch (WP 0078 00).</p>
<p>24. Floodlight Switch Does Not Operate.</p>	<p>1. Test continuity of floodlight switch. Connect one multimeter lead to switch and one to ground.</p> <p>2. Test continuity of wire assemblies. Connect multimeter to each end of wire leads.</p>	<p>If multimeter indicates no reading, circuit does not have continuity. Replace floodlight switch (WP 0076 00). If the problem still exists, go to Test 2.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace wire leads (WP 0136 00 or WP 0137 00).</p>
<p>25. Ether Control Switch Does Not Operate.</p>	<p>1. Test continuity of ether control switch. Connect one lead of multimeter to switch and one lead to ground.</p> <p>2. Test continuity of wire assemblies. Connect multimeter to each end of wire assembly.</p>	<p>If multimeter indicates no reading, circuit does not have continuity. Replace ether control switch (WP 0077 00). If the problem still exists, go to Test 2.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Repair or replace wire assembly (WP 0021 00).</p>
<p>26. Battery Disconnect Switch Does Not Operate.</p>	<p>1. Test continuity of disconnect switch. Connect one lead of multimeter to switch and one lead to ground.</p> <p>2. Test continuity of wire assemblies. Connect multimeter to each end of wire assembly.</p>	<p>If multimeter indicates no reading, circuit does not have continuity. Replace battery disconnect switch (WP 0081 00). If the problem still exists, go to Test 2.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Repair or replace wire assembly (WP 0021 00).</p>
<p>27. Start Switch Does Not Operate.</p>	<p>1. Test continuity of start switch. Connect one lead of multimeter to switch and one lead to ground.</p> <p>2. Test continuity of wire assemblies. Connect multimeter to each end of wire assembly.</p>	<p>If multimeter indicates no reading, circuit does not have continuity, replace start switch (WP 0079 00). If the problem still exists, go to Test 2.</p> <p>If multimeter indicates no reading, circuit does not have continuity, repair or replace wire assembly (WP 0021 00).</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>28. Blade Float Limit Switch Does Not Operate (CCE Machine).</p>	<ol style="list-style-type: none"> 1. Check blade float fuse (10A). 2. Test continuity of blade float limit switch. Connect one lead of multimeter to switch and one lead to ground. 	<p>Replace fuse if blown (WP 0096 00). If the problem still exists, go to Test 2.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace blade float limit switch (WP 0093 00).</p>
<p>29. Air Pressure Switch Is Not Operating.</p>	<p>Check air pressure gauge for proper reading (TM 5-3805-261-10).</p>	<p>Replace air pressure switch if damaged or defective (WP 0112 00).</p>
<p>30. Engine Oil Pressure Switch Does Not Operate.</p>	<ol style="list-style-type: none"> 1. Check oil level in engine (TM 5-3805-261-10). 2. Start engine and run for several minutes. 	<p>Replace engine oil pressure switch if oil pressure is not within operating range (WP 0113 00).</p>
<p>31. Coolant Temperature Switch Does Not Operate.</p>	<ol style="list-style-type: none"> 1. Check coolant level. 2. Start engine and run for several minutes. 	<p>Replace coolant temperature switch if temperature is not within operating range (WP 0114 00).</p>
<p>32. Fuel Pressure Switch Does Not Operate.</p>	<p>Check fuel pressure with a pressure gauge of known accuracy installed in fuel line.</p>	<p>Replace fuel pressure switch if damaged or defective (WP 0115 00).</p>
<p>33. Hydraulic Oil Temperature Switch Does Not Operate.</p>	<p>Start engine and run several minutes. Operate implements until hydraulic oil temperature is at normal operating temperature.</p>	<p>If the temperature remains within normal range and the alarm still sounds, replace hydraulic oil temperature switch (WP 0116 00).</p>
<p>34. Hour Meter Does Not Operate.</p>	<ol style="list-style-type: none"> 1. Test continuity of hourmeter switch. Connect one lead of multimeter to switch and one lead to ground. 2. Test continuity of hourmeter. Connect one lead of multimeter to back of gauge and one lead to ground. 	<p>If multimeter indicates no reading, circuit does not have continuity. Replace hourmeter switch (WP 0109 00). If the problem still exists, go to Test 2.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace hourmeter (WP 0083 00).</p>
<p>35. Windshield Wipers Do Not Operate (CCE Machine).</p>	<ol style="list-style-type: none"> 1. Check windshield wiper fuse (4A). 2. Test continuity of windshield wiper switch. Connect one lead of multimeter to back of switch and one lead to ground. 	<p>Replace fuse if blown (WP 0097 00). If the problem still exists, go to Test 2.</p> <p>If multimeter indicates no reading, circuit does not have continuity. Replace windshield wiper switch (WP 0085 00).</p>
<p>36. Panel Lamp Does Not Operate.</p>	<ol style="list-style-type: none"> 1. Check lamp. 	<p>Replace lamp if defective (WP 0084 00). If the problem still exists, go to Test 2.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>36. Panel Lamp Does Not Operate - Continued.</p> <p>37. Engine Cranks, but Will Not Start in Cold Weather (Fuel Available).</p>	<p>2. Test continuity of panel lamp switch. Connect one lead of multimeter to back of switch and one lead to ground.</p> <div style="text-align: center;">  <p>WARNING</p> </div> <p>Ether fuel is extremely flammable and toxic. DO NOT smoke and make sure you are in a well-ventilated area away from heat, open flames, or sparks. Wear eye protection. Avoid contact with skin and eyes and avoid breathing ether fumes. If fluid enters or fumes irritate the eyes, wash immediately with large quantities of clean water for 15 minutes. Seek medical attention immediately if ether is inhaled or causes eye irritation. Failure to follow this warning may cause injury or death to personnel.</p> <ol style="list-style-type: none"> 1. Check ether canister. Remove ether canister. Shake and listen for liquid splashing inside canister. 2. Check for a blown starting aid fuse. 3. Check starting aid valve operation. <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Disconnect temperature switch lead from starting aid valve. c. Connect a jumper wire between temperature switch lead on valve and chassis ground. 	<p>If multimeter indicates no reading, circuit does not have continuity, replace panel lamp switch (WP 0085 00).</p> <ol style="list-style-type: none"> 1. If canister is empty, replace with a full one (WP 0049 00). 2. If canister is full, reinstall and go to Test 2. <p>Replace blown fuse with same rated fuse (WP 0021 00). If the problem still exists, go to Test 3.</p>

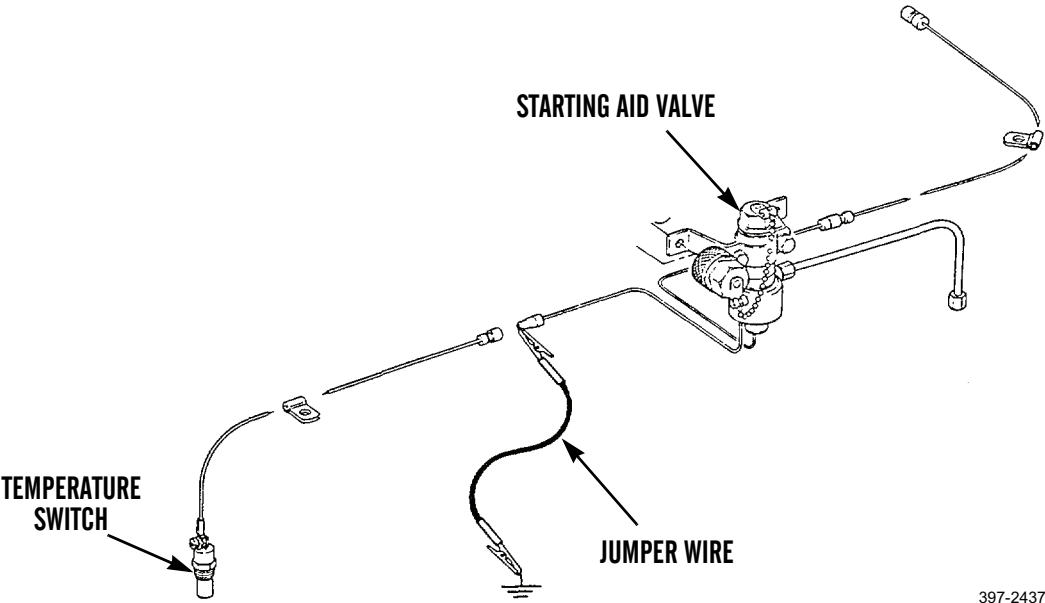MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>37. Engine Cranks, but Will Not Start in Cold Weather (Fuel Available) - Continued.</p>	<p>d. Crank engine, press starting aid button, and listen for starting aid valve operation.</p>  <p style="text-align: right;">397-2437</p>	<p>1. If valve functions, go to Test 4.</p> <p>2. If valve does not function, place battery disconnect switch in OFF position and reconnect temperature switch lead to starting aid valve. Go to Test 5.</p> <p>4. Test temperature switch wire for continuity.</p> <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Disconnect wire between temperature switch and starting aid valve at both ends. c. Set multimeter to appropriate ohm (Ω) range. d. Connect meter positive lead to one end of wire. e. Connect meter negative lead to other end of wire. <p>1. If continuity is indicated, replace temperature switch (WP 0050 00).</p> <p>2. If continuity is not indicated, repair open circuit in wire (WP 0021 00). If the problem still exists, go to Test 5.</p>

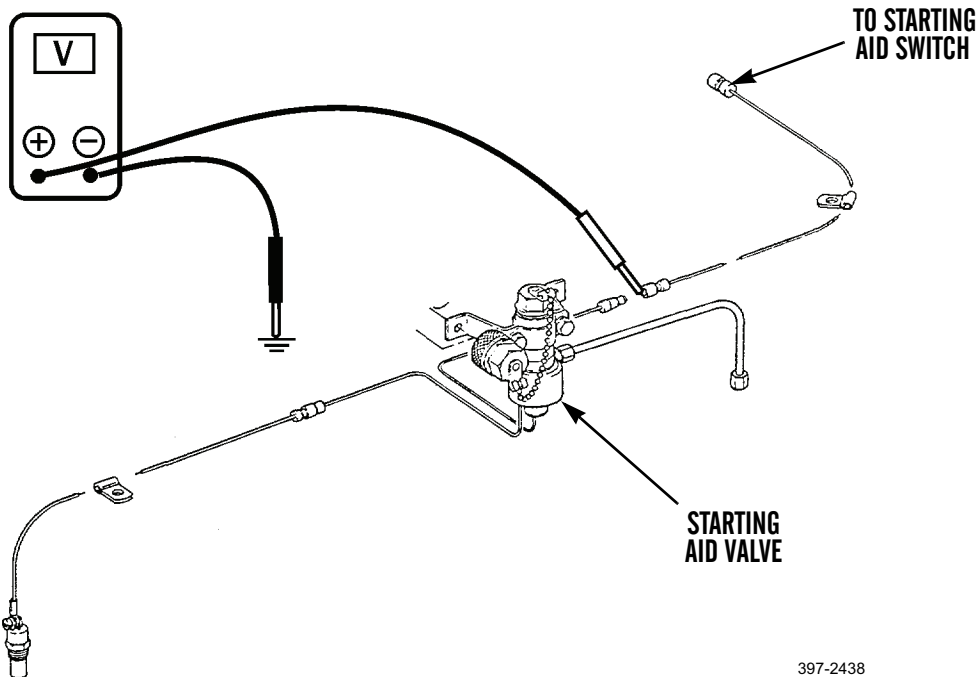
MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>37. Engine Cranks, but Will Not Start in Cold Weather (Fuel Available) - Continued.</p>	<p>5. Test starting aid system voltage.</p> <ol style="list-style-type: none"> a. Disconnect purple starting aid switch-to-valve lead at starting aid valve. b. Set multimeter to appropriate voltage range. 	 <p style="text-align: right;">397-2438</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>37. Engine Cranks, but Will Not Start in Cold Weather (Fuel Available) - Continued.</p>	<ul style="list-style-type: none"> c. Connect meter positive lead to purple disconnected wire and meter negative lead to chassis ground. d. Crank engine, press starting aid button and observe meter. <p>6. Test temperature switch wire for continuity.</p> <ul style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Disconnect wire between starting aid switch and starting aid valve at both ends. c. Set multimeter to appropriate ohm (Ω) range. d. Connect meter positive lead to one end of wire. Connect meter negative lead to other end of wire. 	<ul style="list-style-type: none"> 1. If voltage is indicated, replace starting aid valve (WP 0050 00). 2. If voltage is not indicated, go to Test 6. <ul style="list-style-type: none"> 1. If continuity is indicated, replace starting aid switch (WP 0077 00). 2. If continuity is not indicated, repair open circuit in wire (WP 0021 00).
<p>38. Heater Will Not Operate or Will Not Operate in High Speed or Low Speed Position (CCE Machine).</p>	<ul style="list-style-type: none"> 1. Test heater circuit voltage. <ul style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Check heater fuse. c. Disconnect heater fan motors wires. d. Set multimeter to appropriate voltage range. e. Connect meter negative lead to chassis ground. f. Place battery disconnect switch in ON position. 	<ul style="list-style-type: none"> 1. Replace fuse if blown (WP 0096 00). 2. If fuse is not blown, reinstall fuse and go to Step c.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>38. Heater Will Not Operate or Will Not Operate in High Speed or Low Speed Position (CCE Machine) - Continued.</p>	<p>g. Place heater switch in LOW speed position and touch meter positive lead to wires connected to switch at fan. Observe meter reading.</p>	
	<p>h. Place heater switch in all HIGH speed positions and touch meter positive lead to wires connected to switch at fan. Observe meter reading.</p> <p>2. Test heater switch for continuity.</p> <p>a. Place battery disconnect switch in OFF position.</p> <p>b. Completely disconnect heater switch harness.</p> <p>c. Set multimeter to appropriate ohm (Ω) range.</p>	<p>1. If voltage is not indicated in either Step g or h, replace heater switch (WP 0212 00).</p> <p>2. If voltage is not indicated in both Steps g and h, go to Test 2.</p> <p>1. If voltage is indicated in both Steps g and h, replace defective fan motor(s) (WP 0212 00). Place battery disconnect switch in OFF position. Place battery disconnect switch in OFF position. If the problem still exists, go to Test 2.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>38. Heater Will Not Operate or Will Not Operate in High Speed or Low Speed Position (CCE Machine) - Continued.</p>	<ul style="list-style-type: none"> d. Connect meter positive lead where black wire connects (switch side). e. Connect meter negative lead to either of the other two terminals (switch side). f. Toggle switch between all three positions and observe meter. g. Repeat Steps d through f for the remaining terminal. 	<ul style="list-style-type: none"> 1. If continuity is indicated in HIGH for wire and LOW for wire, but not in OFF position, repair heater circuitry (WP 0021 00). 2. If continuity is not indicated as stated above, replace heater switch (WP 0212 00).
<p>39. Defrosters Will Not Operate or Will Not Operate in High Speed or Low Speed (CCE Machine).</p>	<p style="text-align: center;">NOTE</p> <p style="text-align: center;">The following procedure is applicable for both front and rear defroster fans.</p> <ul style="list-style-type: none"> 1. Test defroster fan circuit voltage. <ul style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Check defroster fan fuse. c. Identify high speed and low speed control wires at defroster control switch with tags or similar ID technique. d. Disconnect high speed and low speed control wires from defroster switch. e. Set multimeter to appropriate voltage range. f. Place battery disconnect switch in ON position. g. Place defroster control switch to low speed position and touch meter positive lead to switch low speed terminal. Observe meter reading. 	<ul style="list-style-type: none"> 1. Replace fuse if blown (WP 0097 00). 2. If fuse is not blown, reinstall fuse and go to Step c.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>39. Defrosters Will Not Operate or Will Not Operate in High Speed or Low Speed (CCE Machine) - Continued.</p>	<p>h. Place defroster control switch to high speed position and touch meter positive lead to switch high speed terminal. Observe meter reading.</p>	<p>1. If voltage is not indicated in either Step g or h, replace defroster control switch (WP 0210 00).</p> <p>2. If voltage is not indicated in both Steps g and h, go to Test 2.</p> <p>3. If voltage is indicated in both Steps g and h, replace defective defroster fan motor (WP 0210 00). If problem still exists, go to Test 2.</p>

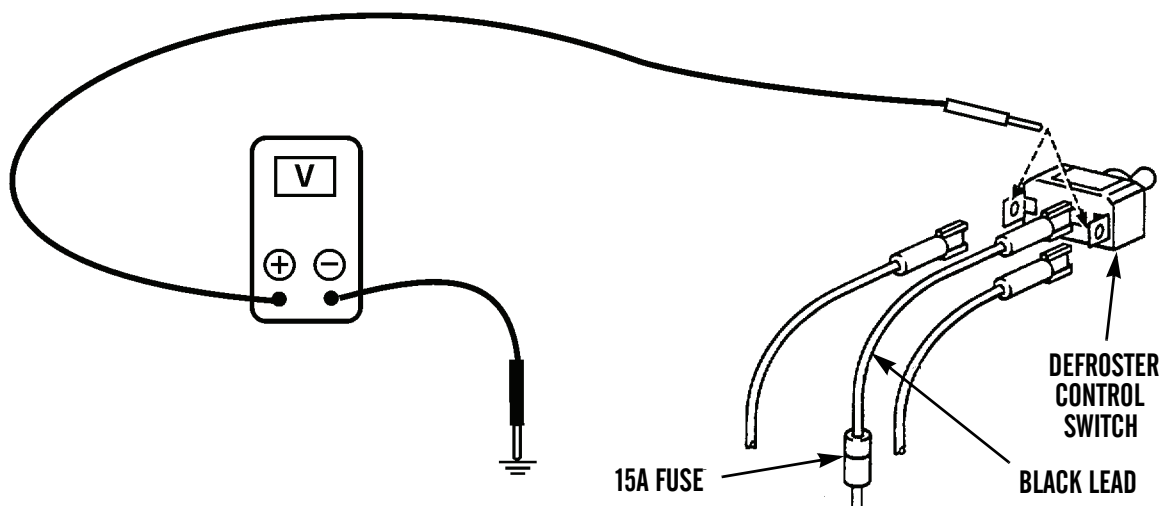

397-2440

2. Test defroster switch for continuity.
 - a. Place battery disconnect switch in OFF position.
 - b. Completely disconnect defroster switch harness.
 - c. Set multimeter to appropriate ohm (Ω) range.
 - d. Connect meter positive lead to center switch terminal (switch side).
 - e. Connect meter negative lead to either of the other two terminals (switch side).

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>39. Defrosters Will Not Operate or Will Not Operate in High Speed or Low Speed (CCE Machine) - Continued.</p>	<p>f. Toggle switch between all three positions. Observe meter reading.</p> <p>g. Repeat Steps c through e for remaining terminal.</p>	<p>1. If continuity is indicated in HIGH and LOW, but not in OFF position, repair defroster circuitry (WP 0021 00).</p> <p>2. If continuity is not indicated as stated above, replace defroster switch (WP 0210 00).</p>
<p>40. Windshield Wiper Will Not Operate or Will Not Operate in High Speed or Low Speed Position (CCE Machine).</p>	<p style="text-align: center;">NOTE</p> <p>The following procedure is for both front and rear windshield wiper circuits.</p> <p>1. Test wiper motor circuit voltage.</p> <p>a. Place battery disconnect switch in OFF position.</p> <p>b. Check windshield wiper fuse (4A).</p> <p>c. Disconnect wiper motor wire connectors.</p> <p>d. Set multimeter to appropriate voltage range.</p> <p>e. Connect meter negative lead to chassis ground.</p> <p>f. Place battery disconnect switch in ON position.</p> <p>g. Place wiper switch to low speed position and touch meter positive lead to green wire. Observe meter reading.</p> <p>h. Place wiper switch to high speed position and touch meter positive lead to red wire. Observe meter reading.</p>	<p>1. Replace fuse if blown (WP 0097 00).</p> <p>2. If fuse is not blown, reinstall and go to Step c.</p> <p>1. If voltage is not indicated in either Step g or h, go to Test 2.</p> <p>2. If voltage is indicated in both Steps g and h, go to Test 4.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>40. Windshield Wiper Will Not Operate or Will Not Operate in High Speed or Low Speed Position (CCE Machine) - Continued.</p>	<ol style="list-style-type: none"> 2. Test wiper switch circuitry for continuity between switch and wiper motor. <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Completely disconnect wiper switch wiring. c. Set multimeter to appropriate ohm (Ω) range. d. Connect meter positive lead to one end of each of the 3 wires. Connect meter negative lead to other end of each wire. Observe meter. 3. Test wiper switch source voltage. <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Completely disconnect wiper switch wiring. c. Set multimeter to appropriate voltage range. d. Connect meter positive lead to black wire. Connect meter negative lead chassis ground. e. Place battery disconnect switch in ON position. Observe meter reading. 4. Test wiper motor ground for continuity. <ol style="list-style-type: none"> a. Place battery disconnect switch in OFF position. b. Completely disconnect wiper motor wiring. c. Set multimeter to appropriate ohm (Ω) range. d. Connect meter positive lead to wiper motor ground wire. Connect meter negative lead to chassis ground. 	<ol style="list-style-type: none"> 1. If continuity is indicated, go to Test 3. 2. If continuity is not indicated, repair circuit in question (WP 0021 00). If the problem still exists, go to Test 3. <ol style="list-style-type: none"> 1. If voltage is indicated, replace wiper switch (WP 0085 00). 2. If voltage is not indicated, repair open circuit in black wire (WP 0021 00). If the problem still exists, go to Test 4.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>40. Windshield Wiper Will Not Operate or Will Not Operate in High Speed or Low Speed Position (CCE Machine) - Continued.</p>	<p>e. Place battery disconnect switch in ON position. Observe meter.</p>	<ol style="list-style-type: none"> 1. If continuity is indicated, replace wiper motor (WP 0206 00, WP 0207 00, or WP 0208 00). 2. If continuity is not indicated, repair wiper motor ground wire (WP 0021 00).

END OF WORK PACKAGE

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Transmission Does Not Operate in Any Speed or Slips in All Speeds.</p>	<ol style="list-style-type: none"> 1. Check transmission oil level (TM 5-3805-261-10). 2. Check speed control and forward-reverse cables. Cables should be taut without any slack and all nuts and rod ends tightly secured. 3. Check oil pump for signs of leaks and damage. 4. Check control relief valve. 	<p>If oil level is low, fill (TM 5-3805-261-10). If the problem still exists, go to Test 2.</p> <ol style="list-style-type: none"> 1. If linkage is loose, tighten and adjust (WP 0150 00). 2. If linkage is damaged or defective, replace (WP 0152 00). If the problem still exists, go to Test 3. 1. If oil pump is damaged or defective, replace (WP 0297 00). 2. If oil pump is not damaged or defective, replace transmission (WP 0249 00). If the problem still exists, go to Test 4. 1. If control relief valve is not operating properly, replace (WP 0296 00). 2. If control relief valve is operating properly, replace transmission. (WP 0294 00).
<p>2. Transmission Does Not Shift.</p>	<ol style="list-style-type: none"> 1. Check transmission oil level (TM 5-3805-261-10). 2. Check the speed control and forward-reverse cables. Cables should be taut without any slack and all nuts and rod ends tightly secured. 3. Check oil pump for signs of leaks and damage. 	<p>If oil level is low, fill (TM 5-3805-261-10). If the problem still exists, go to Test 2.</p> <ol style="list-style-type: none"> 1. If linkage is loose, tighten and adjust (WP 0150 00). 2. If linkage is damaged or defective, replace (WP 0152 00). If the problem still exists, go to Test 3. 1. If oil pump is damaged or defective, replace (WP 0297 00). 2. If oil pump is not damaged or defective, replace transmission (WP 0294 00).
<p>3. Transmission Engages Suddenly (Rough Shifting).</p>	<ol style="list-style-type: none"> 1. Check the speed control and forward-reverse cables. Cables should be taut without any slack and all nuts and rod ends tightly secured. 	<ol style="list-style-type: none"> 1. If linkage is loose, tighten and adjust (WP 0150 00). 2. If linkage is damaged or defective, replace (WP 0152 00). If the problem still exists, go to Test 2.

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. Transmission Engages Suddenly (Rough Shifting) - Continued.</p>	<p>2. Check control relief valve.</p>	<p>1. If control relief valve is not operating properly, replace (WP 0296 00). 2. If control relief valve is operating properly, replace transmission (WP 0294 00).</p>
<p>4. Transmission Shifts Slow.</p>	<p>1. Check the speed control and forward-reverse cables. Cables should be taut without any slack and all nuts and rod ends tightly secured.</p> <p>2. Check oil pump for signs of leaks and damage.</p>	<p>1. If linkage is loose, tighten and adjust (WP 0150 00). 2. If linkage is damaged or defective, replace (WP 0152 00). If the problem still exists, go to Test 2.</p> <p>1. If oil pump is damaged or defective, replace (WP 0297 00). 2. If oil pump is not damaged or defective, replace transmission (WP 0294 00).</p>
<p>5. Transmission Engages, but Machine Will Not Move.</p>	<p>1. Check differential for signs of leaks and damage.</p> <p>2. Check final drive planetary for signs of leaks and damage.</p>	<p>If differential is damaged or defective, replace (WP 0305 00). If the problem still exists, go to Test 2.</p> <p>If you suspect a problem with final drive planetary, replace final drive (WP 0309 00).</p>
<p>6. Transmission Is Hot.</p>	<p>1. Check transmission oil level (TM 5-3805-261-10).</p> <p>2. Check core of oil cooler for signs of leaks and damage.</p>	<p>If oil level is low, fill (TM 5-3805-261-10). If the problem still exists, go to Test 2.</p> <p>If core is not open completely or is damaged or defective, replace (WP 0298 00).</p>

END OF WORK PACKAGE

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Parking Brake Is Not Engaging Correctly.</p>	<ol style="list-style-type: none"> 1. Check the clearance adjustment on parking brake control valve. 2. Check the parking brake control valve. 3. Check the quick release valve. 4. Check parking brake actuator. 5. Check that adjustment of rod end on parking brake actuator does not permit too much free movement of lever on transmission. 	<p>Adjust clearance on parking brake control valve if clearance is not correct (WP 0158 00). If the problem still exists, go to Test 2.</p> <p>Replace control valve if worn, damaged, or defective (WP 0158 00). If the problem still exists, go to Test 3</p> <p>Repair or replace quick release valve if worn, damaged, or defective (WP 0312 00). If the problem still exists, go to Test 4.</p> <p>Replace parking brake actuator if damaged or defective (WP 0312 00). If the problem still exists, go to Test 5.</p> <p>Adjust parking brake actuator as necessary (WP 0159 00). Repair parking brake after completing steps 1 through 4, if necessary.</p>
<p>2. Parking Brake Is Not Releasing Correctly.</p>	<ol style="list-style-type: none"> 1. Check for air pressure at supply port of control valve. 2. Check clearance adjustment of control valve. 3. Check for wear or damage to control valve. 4. Check for wear or damage to quick release valve. 5. Check for worn or damaged parking brake actuator. 6. Check adjustment of rod end of parking brake actuator to ensure that with the brake off, a small amount of free travel on lever on transmission is permitted. 	<p>If no air pressure at supply port, troubleshoot air compressor assembly. If the problem still exists, go to Test 2.</p> <p>Adjust control valve as necessary (WP 0158 00). If the problem still exists, go to Test 3.</p> <p>If control valve is worn or damaged, replace (WP 0158 00). If the problem still exists, go to Test 4.</p> <p>If quick release valve is worn or damaged, repair (WP 0312 00). If the problem still exists, go to Test 5.</p> <p>If parking brake actuator is worn or damaged, repair (WP 0312 00). If the problem still exists, go to Test 6.</p> <p>If no free travel is permitted, adjust rod end (WP 0159 00). Repair parking brake after completing steps 1 through 6 as necessary.</p>
<p>3. Air Compressor Passes Excessive Oil, Indicated by Oil Seeping from Air Strainer.</p>	<ol style="list-style-type: none"> 1. Check for restricted air intake. Check engine air cleaner assembly and compressor air inlet line for restrictions. 	<p>Remove restrictions for air intake system as necessary (WP 0038 00). If the problem still exists, go to Test 2.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>3. Air Compressor Passes Excessive Oil, Indicated by Oil Seeping from Air Strainer - Continued.</p>	<p>2. Check for restricted oil return line. Look for kinks, bends, and restrictions in oil return line (WP 0317 00).</p> <p>3. Check for poorly filtered inlet air. Check for dirty engine air filters.</p> <p>4. Check for poor compressor cooling (compressor runs hot). Check coolant lines and fittings for scales, kinks, and restrictions.</p> <p>5. Check air system reservoir for build-up of dirt and water.</p> <p>6. Check if air compressor runs loaded an excessive amount of time. Measure air system leakage. Start engine and let air pressure build up and stabilize. Observe air pressure gauge. System leakage should not exceed 1 psi (7 kPa) pressure drop per minute without brakes applied and 3 psi (21 kPa) pressure drop with brakes applied. If leakage is excessive, look for system leaks.</p> <p>7. Check for loose end cover and cylinder block bolts.</p>	<p>If oil return line is clear, go to Test 3.</p> <p>If filters are dirty, replace (WP 0037 00). If the problem still exists, go to Test 4.</p> <p>If engine coolant temperature exceeds 200°F (93°C), refer to <i>Cooling System Troubleshooting</i> (WP 0007 00). If the problem still exists, go to Test 5.</p> <p>Drain reservoir (TM 5-3805-261-10). If the problem still exists, go to Test 6.</p> <p>Repair system leaks as necessary (WP 0318 00). If the problem still exists, go to Test 7.</p> <p>Tighten bolts to standard torques. Repair or replace compressor after completing steps 1 through 7 as necessary (WP 0317 00).</p>
<p>4. Noisy Compressor Operations.</p>	<p>1. Check fit of drive gear on crankshaft. If crankshaft surface or its keyway are damaged, it is an indication of loose drive gear components.</p> <p>2. Check for worn drive gear or pulley on air compressor crankshaft.</p> <p>3. Check cylinder head.</p>	<p>If drive gear is not installed correctly, remove and install (WP 0317 00). If the problem still exists, go to Test 2.</p> <p>If drive gear or pulley is worn, replace (WP 0317 00). If the problem still exists, go to Test 3.</p> <p>If carbon build-up is detected in cylinder head, check for proper cooling of compressor (WP 0317 00). If the problem still exists, go to Test 4.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>4. Noisy Compressor Operations - Continued.</p>	<p>4. Check for worn bearings. Check oil pressure and temperature. Install suitable oil pressure and temperature gauges in oil supply line. Start engine. Oil pressure should be 5 psi (34 kPa) at idle and 15 psi (103 kPa) at maximum engine RPM.</p>	<p>Replace bearings if worn (WP 0317 00). Repair or replace compressor after completing steps 1 through 4 as necessary (WP 0317 00).</p>
<p>5. Excessive Buildup and Recovery Time.</p>	<p style="text-align: center;">NOTE</p> <p style="text-align: center;">Compressor should build up air system from 85 to 100 psi (586 to 689 kPa) in 40 seconds with engine at maximum RPM.</p> <p>1. Check for dirty engine air filters.</p> <p>2. Check for restricted air inlet line.</p> <p>3. Check for carbon build-up or restriction in compressor discharge line and discharge port.</p>	<p>Replace air filters as necessary (WP 0037 00). If the problem still exists, go to Test 2.</p> <p>Remove restriction or replace air inlet line if kinked (WP 0318 00). If the problem still exists, go to Test 3.</p> <p>1. If carbon build-up is found, replace discharge line (WP 0318 00). 2. If no carbon build-up is found, replace compressor (WP 0317 00).</p>
<p>6. Compressor Fails to Unload.</p>	<p>Check installation and operation of governor.</p>	<p>If governor does not operate properly, replace (WP 0165 00).</p>
<p>7. Compressor Leaks Oil.</p>	<p>1. Check for damaged mounting gasket. Check mounting bolt torque.</p> <p>2. Check for loose end cover and cylinder block bolts.</p> <p>3. Check for loose oil supply or return line fittings.</p> <p>4. Check for cracked crankcase, cylinder block, or end cover.</p>	<p>If mounting bolt torque is low, replace mounting gasket and tighten bolts to standard torque (WP 0318 00). If the problem still exists, go to Test 2.</p> <p>If bolts are tightened correctly, go to Test 3 (WP 0318 00).</p> <p>Tighten as necessary (WP 0318 00). If the problem still exists, go to Test 4.</p> <p>Replace compressor (WP 0318 00).</p>
<p>8. Compressor Constantly Cycles.</p>	<p>1. Test for excessive system leakage.</p> <p>2. Check operation of governor.</p>	<p>Repair system leaks as necessary (WP 0161 00) and WP 0163 00). If the problem still exists, go to Test 2.</p> <p>If governor does not operate properly, replace (WP 0165 00).</p>
<p>9. Service Brakes Are Not Engaging Correctly.</p>	<p>1. Check for air pressure at supply ports of control valve.</p>	<p>If no air pressure, TM 5- 3805-261-10), troubleshoot air compressor assembly. If the problem still exists, go to Test 2.</p>


BRAKE SYSTEM TROUBLESHOOTING PROCEDURES - CONTINUED

0010 00

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>9. Service Brakes Are Not Engaging Correctly - Continued.</p>	<p>2. Check adjustment of pedal stop to ensure it permits enough travel of brake pedal to operate brakes.</p> <p>3. Check adjustment of screw on plunger of air brake valve to ensure enough travel of piston in air brake valve is permitted.</p> <p>4. Check for wear or damage to air brake valve.</p>	<p>If not enough travel is permitted, adjust pedal (WP 0313 00 and WP 0160 00). If the problem still exists, go to Test 3.</p> <p>If too little travel is permitted, adjust screw (WP 00316 00). If the problem still exists, go to Test 4.</p> <p>If air brake valve is worn or damaged, replace (WP 0316 00).</p>
<p>10. Service Brakes Are Not Releasing Correctly.</p>	<p>1. Check for missing or damaged brake pedal spring.</p> <p>2. Check adjustment of screw on plunger of control valve to ensure that screw does not stop piston from completely releasing from control valve.</p> <p>3. Check for wear and damage to parking brake air control valve.</p>	<p>Replace spring if missing or damaged (WP 0160 00). If the problem still exists, go to Test 2.</p> <p>If screw stops piston from releasing, adjust screw (WP 0313 00). If the problem still exists, go to Test 3.</p> <p>If control valve is worn or damaged, repair (WP 0158 00).</p>

END OF WORK PACKAGE


MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Wheels Turn Slowly or Not at All When Steering Wheel Is Turned.</p>	<ol style="list-style-type: none"> 1. Check steering relief valve. <ol style="list-style-type: none"> a. Relieve hydraulic system pressure (WP 0020 00). b. Remove plug and preformed packing from steering relief valve. c. Install 0 to 2,500 psi (0 to 17,238 kPa) hydraulic pressure gauge. d. Start engine and operate all implements until operating temperature is reached (TM 5-3805-261-10). e. Increase engine speed to 1,500 RPM. Pressure gauge should read 1,800 to 1,850 psi (12,411 to 12,755 kPa). Stop engine. 	<ol style="list-style-type: none"> 1. If pressure is within limits, go to step 2. 2. Add shim(s) (WP 0323 00) as required to increase pressure, remove shim(s) to decrease pressure: One shim will change pressure approximately 25 psi (172 kPa). 2. Replace steering relief valve (WP 0323 00).

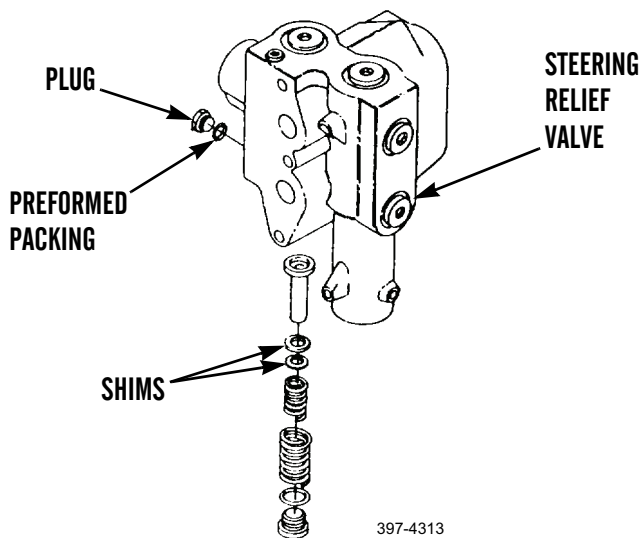

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Wheels Turn Slowly or Not at All When Steering Wheel Is Turned - Continued.</p>	<p style="text-align: center;">NOTE</p> <p>Tests 2 and 3 are for right steering valve. Repeat tests 2 and 3 for left steering valve.</p> <p>2. Check pressure at steering valve.</p> <p>a. Remove plug and preformed packing from relief valve.</p> <p>b. Install 0 to 2,500 psi (0 to 17,238 kPa) hydraulic pressure gauge.</p> <p>c. Start engine and operate all implements until operating temperature is reached.</p> <p>d. Increase engine speed to 1,500 RPM.</p> <p>e. Turn steering wheel from straight ahead position until wheels hit stops (TM 5-3805-261-10). Pressure gauge should read 1,850 to 1,900 psi (12,755 to 13,100 kPa).</p>	<p>1. If pressure is too low, go to step 2. If pressure is within limits, go to step 3. If pressure is too high, relief valve is stuck closed. Repair relief valve (WP 0323 00).</p> <p>2. Replace relief valve (WP 0323 00).</p> <p>3. Replace steering valve (WP 0321 00 or WP 0322 00).</p>

397-4314

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Wheels Turn Slowly or Not at All When Steering Wheel Is Turned - Continued.</p>	<p>3. Remove steering control pump. Disassemble pump and inspect for any worn or damaged parts (WP 0319 00).</p>	<p>Replace any worn or damaged parts (WP 0319 00).</p>
<p>2. Machine Has Supplemental Steering, but No Primary Steering.</p>	<p>1. Remove supplemental steering check valve mounted on steering combination valve.</p> <p>2. Inspect supplemental steering check valve for proper installation (WP 0323 00). Arrow on check valve must point toward front of machine.</p>	<p>If check valve was installed properly, clean or replace check valve (WP 0323 00).</p>
<p>3. Supplemental Steering Motor Status Light Off, but Supplemental Steering Motor and Pump Runs When Engine Is Running.</p>	<p>1. Remove supplemental steering check valve mounted under left side of cab.</p> <p>2. Inspect supplemental steering check valve for proper installation (WP 0174 00). Arrow on check valve must point toward front of machine.</p>	<p>If check valve was installed properly, clean or replace check valve (WP 0174 00).</p>
<p>4. Steering Effort Is More for Supplemental Steering Than for Primary Steering.</p>	<p>1. Remove supplemental steering relief valve (WP 0174 00).</p> <p>2. Install multi-range pressure gauge in discharge port of relief valve.</p> <p>3. Install relief valve with gauge on machine.</p> <p>4. With engine stopped, use auto/manual switch to manually operate the supplemental steering system (TM 5-3805-261-10). Pressure gauge should read 1,725 to 1,925 psi (11,893 to 13,272 kPa).</p>	<p>If pressure is not correct, replace supplemental relief valve (WP 0174 00).</p>

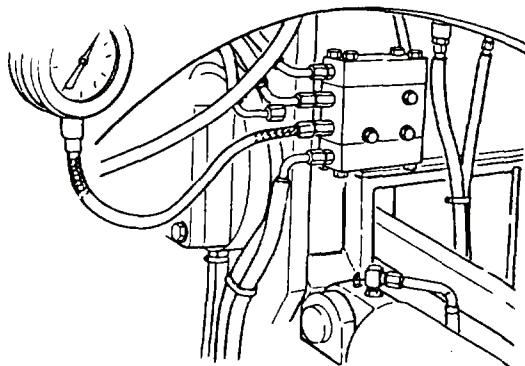

397-4315



END OF WORK PACKAGE

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. All Implements Fail to Operate or Operate Slowly.</p>	<p>1. Check the hydraulic hoses for leaks and loose fittings.</p> <p>2. Check the hydraulic filters.</p> <p>3. Check the hydraulic pump assembly.</p>	<p>If a hydraulic hose fitting is loose, tighten. If a hose is damaged or defective, replace (WP 0220 00 through WP 0229 00). If the problem still exists, go to Test 2.</p> <p>If the filters are clogged, damaged, or defective, replace (WP 0231 00). If the problem still exists, go to Test 3.</p> <p>If the hydraulic pump assembly is damaged or defective, replace (WP 0329 00).</p>
<p>2. Circle Drive Operates Slowly or Fails to Operate.</p>	<p>1. Check the circle drive hydraulic hoses for leaks and loose fittings.</p> <p>2. Check hydraulic system pressures at control valve (WP 0237 00).</p> <p>3. Measure circle drive operation time. Using a stop watch, measure the amount of time for one quarter revolution.</p>	<p>If a circle drive fitting is loose, tighten. If hose is damaged or defective, replace (WP 0225 00). If the problem still exists, go to Test 2.</p> <p>If the problem still exists, go to Test 3.</p> <p>The time for one quarter revolution in either direction is 9.5 to 11.5 seconds. If the time recorded is not within the range, replace circle drive motor (WP 0217 00).</p>
<p>3. Blade Float Fails to Operate Properly (CCE Machine).</p>	<p>1. Check the blade float hydraulic hoses for leaks and loose fittings.</p> <p>2. Check to see if it is one or both sides of the blade that do not float.</p>	<p>If a blade float fitting is loose, tighten. If a hose is damaged or defective, replace (WP 0221 00). If the problem still exists, go to Test 2.</p> <p>1. If both sides of the blade float do not operate, replace blade float pilot valve (WP 0233 00).</p> <p>2. If one side of the blade float does not operate, replace blade float check valve (WP 0234 00).</p>
<p>4. Blade Lift Fails to Operate Properly.</p>	<p>1. Check the blade lift hydraulic hoses for leaks and loose fittings.</p> <p>2. Measure blade lift time. Using a stop watch, measure the amount of time for the blade to be lifted from the ground to the stopping point.</p> <p>3. Check blade lift cylinder for leaks and damage.</p>	<p>If a blade lift fitting is loose, tighten. If a hose is damaged or defective, replace (WP 0222 00). If the problem still exists, go to Test 2.</p> <p>The time for the blade to be lifted is 0.5 to 9.5 seconds. If the time is not within range, replace hydraulic pump (WP 0329 00). If the problem still exists, go to Test 3.</p> <p>Replace if leaking or damaged (WP 0245 00).</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>5. Centershift Fails to Operate.</p>	<p>1. Check the centershift hydraulic hoses for leaks and loose fittings.</p> <p>2. Check centershift cylinder for leaks and damage.</p> <p>3. Check blade lift for leaks and damage.</p>	<p>If a centershift fitting is loose, tighten. If a hose is damaged or defective, replace (WP 0226 00). If the problem still exists, go to Test 2.</p> <p>Replace if leaking or damaged (WP 0243 00). If the problem still exists, go to Test 3.</p> <p>Replace if leaking or damaged (WP 0245 00).</p>
<p>6. Blade Tip Fails to Operate.</p>	<p>If a blade tip fitting is loose, tighten. If a hose is damaged or defective, replace (WP 0223 00).</p>	
<p>7. Leaning Wheel Fails to Operate.</p>	<p>Check the leaning wheel hydraulic hoses for leaks or loose fittings.</p>	<p>If a leaning wheel fitting is loose, tighten. If a hose is damaged or defective, replace (WP 0224 00).</p>
<p>8. Side Shift Fails to Operate.</p>	<p>1. Check the sideshift hydraulic hoses for leaks and loose fittings.</p> <p>2. Check sideshift cylinder for leaks and damage.</p>	<p>If a sideshift fitting is loose, tighten. If a hose is damaged or defective, replace (WP 0228 00). If the problem still exists, go to Test 2.</p> <p>Replace if leaking or damaged (WP 0247 00).</p>
<p>9. Centershift Lock Assembly Fails to Operate.</p>	<p>1. Check the centershift lock assembly hoses for air leaks.</p> <p>2. Check for air leaks at the centershift control valve.</p> <p>3. Check for air leaks at the centershift lock assembly.</p>	<p>If the hoses are loose, tighten. If hoses are damaged or defective, replace (WP 0262 00). If the problem still exists, go to Test 2.</p> <p>If the centershift control valve is damaged or defective, replace (WP 0261 00). If the problem still exists, go to Test 3.</p> <p>If the centershift lock assembly is damaged or defective, replace (WP 0260 00).</p>
<p>10. Articulation Fails to Operate Properly.</p>	<p>1. Check the articulation hoses for leaks and loose fittings.</p> <p>2. Check articulation cylinder for leaks and damage.</p>	<p>If the hoses are loose, tighten. If hoses are damaged or defective, replace (WP 0227 00). If the problem still exists, go to Test 2.</p> <p>Replace if leaking or damaged (WP 0246 00).</p>

END OF WORK PACKAGE

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>1. Tires Wear Unevenly.</p>	<p>1. Check for proper tire inflation (TM 5-3805-261-10).</p> <p>2. Check lugnuts (TM 5-3805-261-10).</p>	<p>Inflate tires to correct pressure (TM 5-3805-261-10). If the problem still exists, go to Test 2.</p> <p>Tighten lugnuts (TM 5-3805-261-10).</p>
<p>2. ROPS Is Not Secure.</p>	<p>1. Check ROPS mounting hardware.</p> <p>2. Check strips on bottom of ROPS assembly.</p>	<p>Tighten bolts as necessary (WP 0327 00). If the problem still exists, go to Test 2.</p> <p>If strips are not sealed or if they are damaged or defective, replace (WP 0185 00).</p>
<p>3. Window Seals Are Defective (CCE Machine).</p>	<p>1. Check window seals (WP 0186 00 and WP 0187 00).</p> <p>2. Check windows (WP 0186 00) and WP 0187 00).</p>	<p>If seals are damaged or defective, replace (WP 0186 00 and WP 0187 00). If the problem still exists, go to Test 2.</p> <p>If window is cracked or broken, replace (WP 0186 00 or WP 0187 00).</p>
<p>4. Door Will Not Close or Catch (CCE Machine).</p>	<p>1. Check for bends or dents in door assembly (WP 0188 00).</p> <p>2. Check hinges and springs (WP 0188 00).</p>	<p>If door is damaged or defective, replace (WP 0188 00). If the problem still exists, go to Test 2.</p> <p>If hinges and springs are damaged or defective, replace (WP 0188 00).</p>
<p>5. Steps Bent (Old Design).</p>	<p>Check for bent steps.</p>	<p>1. If steps are bent, replace (WP 0177 00).</p> <p>2. To prevent the problem, paint a “danger zone” on the circle reverse as follows: Raise and rotate blade so it is set for travel. Stop blade when it is a few inches from stop. Paint a black stripe on circle reverse and another on the circle frame just above and back about 8 in. (20 cm). Repeat for other side.</p> <p>3. Another method to prevent the problem is to move the lower wire rope to rear holes.</p>

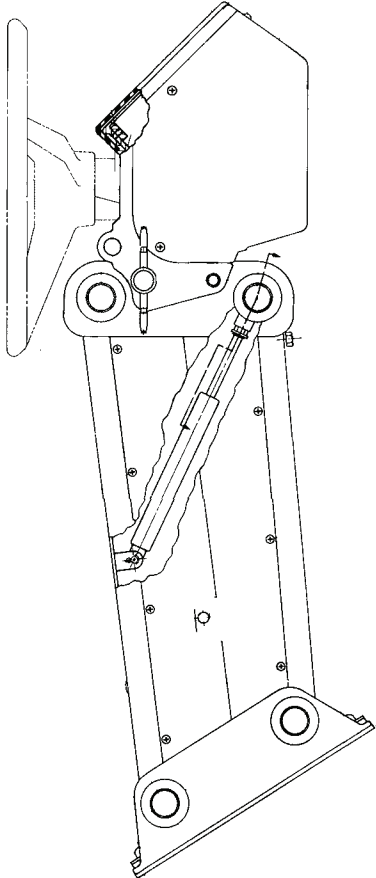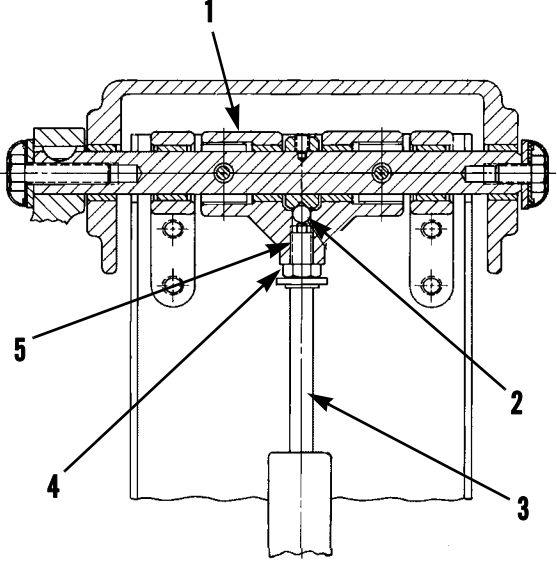MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>6. Operator Panel Console Moves Out of Adjustment or Does Not Lock Into Position.</p>  <p>The diagram shows a side view of the operator panel console assembly. It includes a steering wheel, a console housing, and various adjustment points and locking mechanisms. The console is shown in a slightly tilted position, illustrating its range of motion.</p>	<p>1. If operator panel console slips out of position, adjust.</p>	<p>To adjust cylinder (3), screw cylinder rod into retainer assembly (1) until valve stem (5) makes contact with ball (2). Then loosen cylinder rod one complete turn and tighten jamnut (4). Cylinder can then be rotated for alignment after jamnut is tightened. If the problem still exists, go to Test 2.</p>  <p>The diagram is a cross-sectional view of the cylinder rod assembly. It shows a retainer assembly (1) with a cylinder rod (3) passing through it. A valve stem (5) is attached to the rod, and a ball (2) is positioned where the stem meets the rod. A jamnut (4) is used to secure the rod. The diagram is labeled with numbers 1, 2, 3, 4, and 5.</p> <p style="text-align: right;">397-2384</p>
<p>7. All Windshield Wipers and Washers Fail to Operate (CCE Machine).</p>	<p>2. If operator panel is spring-type and does not lock.</p> <p>1. Check main circuit breaker (60A).</p> <p>2. Check windshield wiper fuse (4A).</p>	<p>Reattach or replace spring (WP 0193 00).</p> <p>Reset circuit breaker. If the problem still exists, go to Test 2.</p> <p>Replace fuse if blown (WP 0097 00). If the problem still exists, go to Test 3.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>7. All Windshield Wipers and Washers Fail to Operate (CCE Machine) - Continued.</p>	<p>3. Test continuity of main wiring harness at rear wiper motor. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p>	<p>Repair main wiring harness as necessary (WP 0021 00).</p>
<p>8. One or More Windshield Wipers Fail to Operate (CCE Machine).</p>	<p>1. Check windshield wiper fuse (4A).</p> <p>2. Check individual wiper motors.</p> <p>3. Test continuity of windshield wiper switch. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p> <p>4. Test continuity of main harness between fuse block and windshield wiper switch and between windshield wiper switch and windshield wiper motor. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p>	<p>If fuse is blown, replace (WP 0097 00). If the problem still exists, go to Test 2.</p> <p>If wiper motor is damaged or defective, replace (WP 0206 00, WP 0207 00, or WP 0208 00). If the problem still exists, go to Test 3.</p> <p>If windshield wiper switch is damaged or defective, replace (WP 0085 00). If the problem still exists, go to Test 4.</p> <p>Repair main harness as necessary (WP 0021 00).</p>
<p>9. Windshield Washer Fails to Operate (CCE Machine).</p>	<p>1. Check windshield washer motor.</p> <p>2. Test continuity of main harness between windshield wiper switch and windshield washer. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p>	<p>If windshield washer motor is damaged or defective, replace (WP 0209 00). If the problem still exists, go to Test 2.</p> <p>Repair main harness as necessary (WP 0021 00).</p>
<p>10. Front or Rear Window Defroster Does Not Operate (CCE Machine).</p>	<p>1. Check main circuit breaker (60A).</p> <p>2. Check defroster fuse (10A).</p> <p>3. Check defroster motor.</p> <p>4. Test continuity of defroster switch. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p>	<p>Reset circuit breaker. If the problem still exists, go to Test 2.</p> <p>If fuse is blown, replace (WP 0097 00). If the problem still exists, go to Test 3.</p> <p>If defroster motor is damaged or defective, replace (WP 0210 00). If the problem still exists, go to Test 4.</p> <p>If the problem still exists, go to Test 5.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>10. Front or Rear Window Defroster Does Not Operate (CCE Machine) - Continued.</p>	<p>5. Test continuity of harness between defroster motor and defroster switch. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p>	<p>Repair harness as necessary (WP 0021 00).</p>
<p>11. Heater Fans and Controls Operate, but No Heat (CCE Machine).</p>	<p>1. Check hoses and connection to heater coil.</p> <p>2. Check control valve assembly.</p> <p>3. Check heater coil.</p>	<p>If hose clamps are loose, tighten. If hose is damaged or defective, replace (WP 0212 00). If the problem still exists, go to Test 2.</p> <p>If control valve assembly is damaged or defective, replace (WP 0212 00). If the problem still exists, go to Test 3.</p> <p>If coil is blocked, damaged, or defective, replace (WP 0212 00).</p>
<p>12. Both Heater Fans Fail to Operate (CCE Machine).</p>	<p>1. Check main circuit breaker (60A).</p> <p>2. Check heater fuse (20A).</p> <p>3. Test continuity of heater wiring harness between two heater motors. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p>	<p>Reset circuit breaker. If the problem still exists, go to Test 2.</p> <p>If fuse is blown, replace (WP 0097 00). If the problem still exists, go to Test 3.</p> <p>If heater wiring harness is damaged or defective, replace (WP 0143 00).</p>
<p>13. One Heater Fan Fails to Operate (CCE Machine).</p>	<p>1. Check heater motor.</p> <p>2. Test continuity of heat switch. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p> <p>3. Test continuity of heater wiring harness between heater motor and heater switch. Refer to <i>Electrical System Troubleshooting</i> (WP 0008 00).</p>	<p>If motor is damaged, replace (WP 0212 00). If the problem still exists, go to Test 2.</p> <p>If switch is damaged or defective, replace (WP 0212 00). If the problem still exists, go to Test 3.</p> <p>If heater wiring harness damaged or defective, replace (WP 0143 00).</p>
<p>14. Air Cleaner Indicator Fails to Show Air Filter Condition.</p>	<p>Check condition of air filter.</p>	<p>If air filter needs replacement, replace (WP 0037 00). If indicator has failed, replace (WP 0251 00).</p>
<p>15. Air Pressure Gauges Fail to Operate.</p>	<p>Check air lines with a pressure gauge of known accuracy.</p>	<p>If system is pressurized, replace defective air pressure gauge (WP 0252 00).</p>
<p>16. Differential Lock Is Not Engaging Correctly.</p>	<p>1. Check control valve.</p>	<p>If control valve is worn, damaged, or defective, replace (WP 0306 00). If the problem still exists, go to Test 2.</p>

MALFUNCTION	TEST OR INSPECTION	CORRECTIVE ACTION
<p>16. Differential Lock Is Not Engaging Correctly - Continued.</p>	<p>2. Check differential lock valve.</p> <p>3. Check differential lock.</p> <p>4. Check lines for air leaks.</p>	<p>If lock valve is worn, damaged, or defective, replace (WP 0306 00). If the problem still exists, go to Test 3.</p> <p>Replace lines as necessary. If the problem still exists, go to Test 4.</p> <p>Replace lines as necessary.</p>
<p>17. Differential Lock Is Not Releasing Correctly.</p>	<p>1. Check control valve.</p> <p>2. Check differential lock valve.</p> <p>3. Check lines for air leaks.</p>	<p>If control valve is worn, damaged, or defective, replace (WP 0306 00). If the problem still exists, go to Test 2.</p> <p>If lock valve is worn, damaged, or defective, replace (WP 0306 00). If the problem still exists, go to Test 3.</p> <p>Replace lines as necessary.</p>

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

TEST 10 - Engine RPM (Average) (Models 130GNS, 130GSCE, and 130GNSCE)

TEST 11 - Engine RPM (Cranking) (Models 130GNS, 130GSCE, and 130GNSCE)

TEST 50 - Engine Oil Pressure

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Analyzer set, engine (Item 12, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

TM 9-4910-571-12&P

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)


Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

TEST 10 - ENGINE RPM (AVERAGE) (MODELS 130GNS, 130GSCE, AND 130GNSCE)

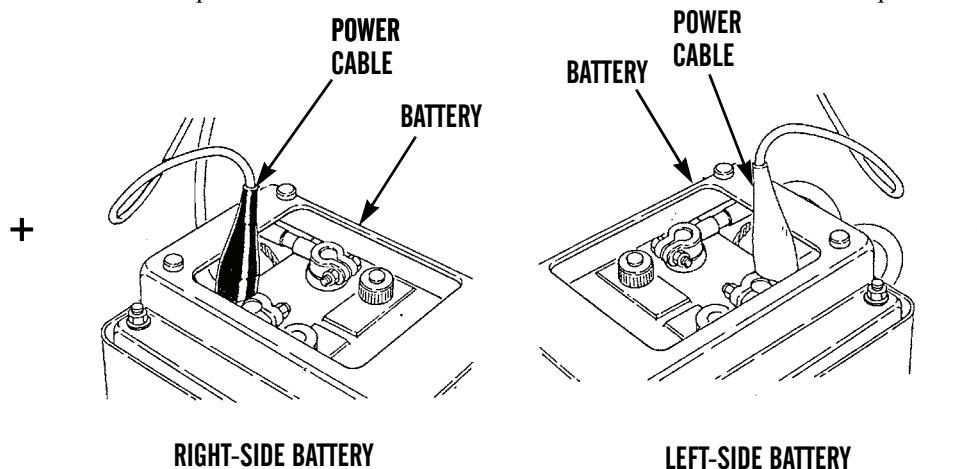
1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.




397-081

TEST 10 - ENGINE RPM (AVERAGE) (MODELS 130GNS, 130GSCE, AND 130GNSCE) - CONTINUED

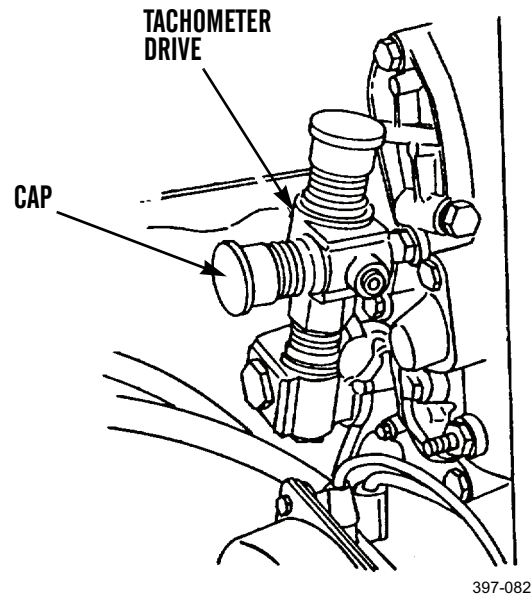2. Remove cap from tachometer drive.



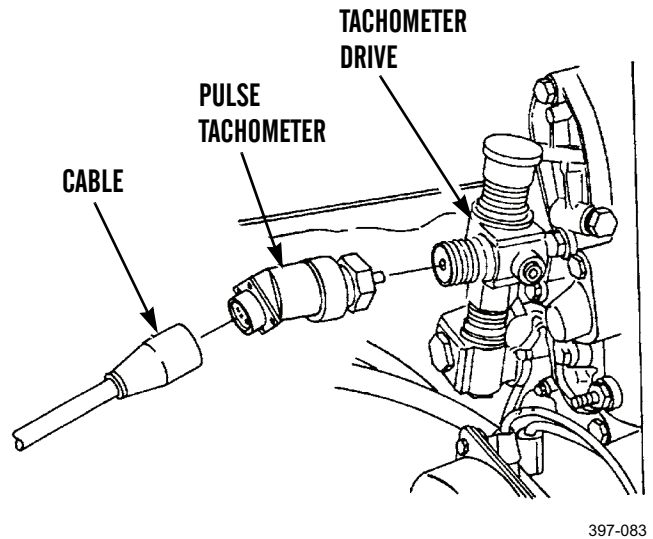
3. Install pulse tachometer and connect cable.



4. Perform test using procedure TEST 10 as instructed in TM 9-4910-571-12&P.
5. At low idle, engine should run at 960 to 980 RPM. At high idle, engine should run at 2,310 to 2,370 RPM.
6. Return machine to its original condition.

TEST 11 - ENGINE RPM (CRANKING) (MODELS 130GNS, 130GSCE, AND 130GNSCE)

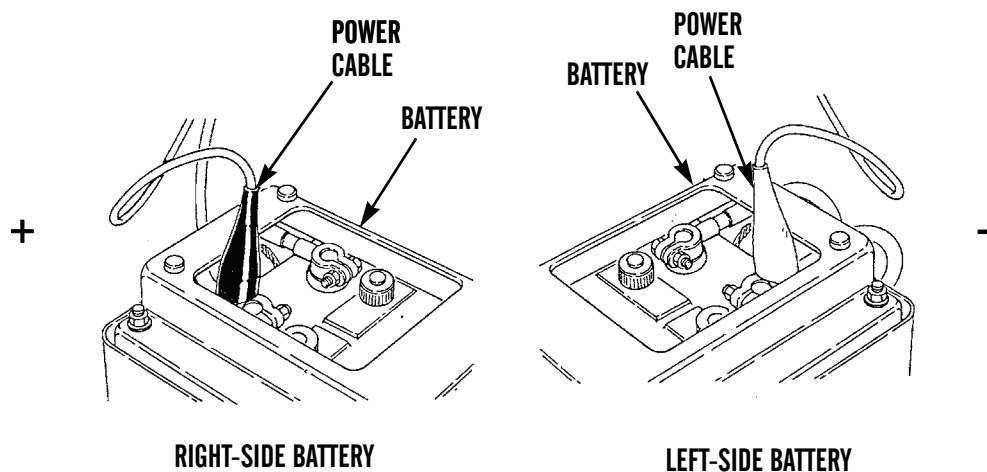1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.




397-081

2. Remove cap from tachometer drive.
3. Install pulse tachometer and connect cable.
4. With fuel shut off, perform test using procedure TEST 10 as instructed in TM 9-4910-571-12&P.
5. Minimum cranking speed is 100 RPM.
6. Return machine to its original condition.

TEST 50 - ENGINE OIL PRESSURE

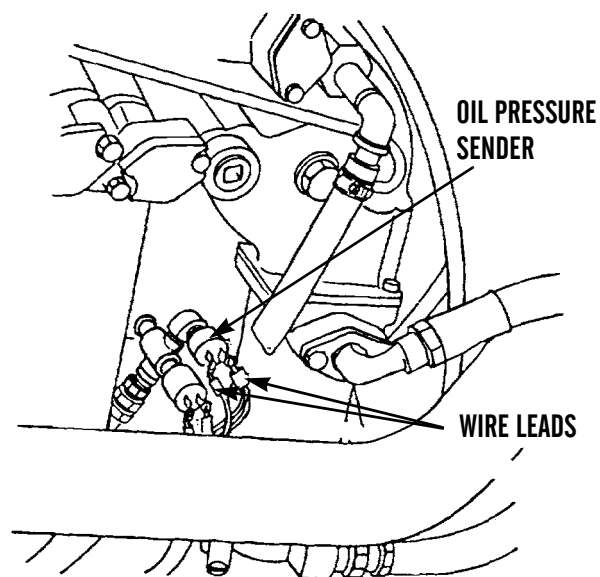
1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.
2. Remove wire leads and oil pressure sender.



397-084

TEST 50 - ENGINE OIL PRESSURE - CONTINUED

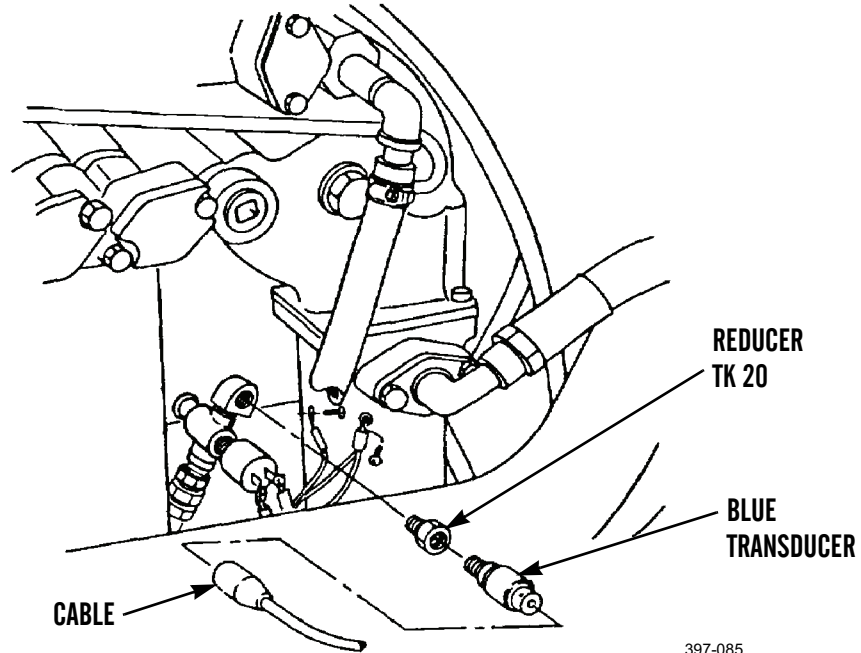3. Install reducer TK 20 and blue transducer and connect cable.



397-085

4. Perform test using procedure TEST 50 as instructed in TM 9-4910-571-12&P.
5. Engine oil pressure should read 14 to 87 psi (103 to 600 kPa).
6. Return machine to its original condition.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

TEST 50 - Fuel Supply Pressure

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Analyzer set, engine (Item 12, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

TM 9-4910-571-12&P

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)


Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

TEST 50 - FUEL SUPPLY PRESSURE

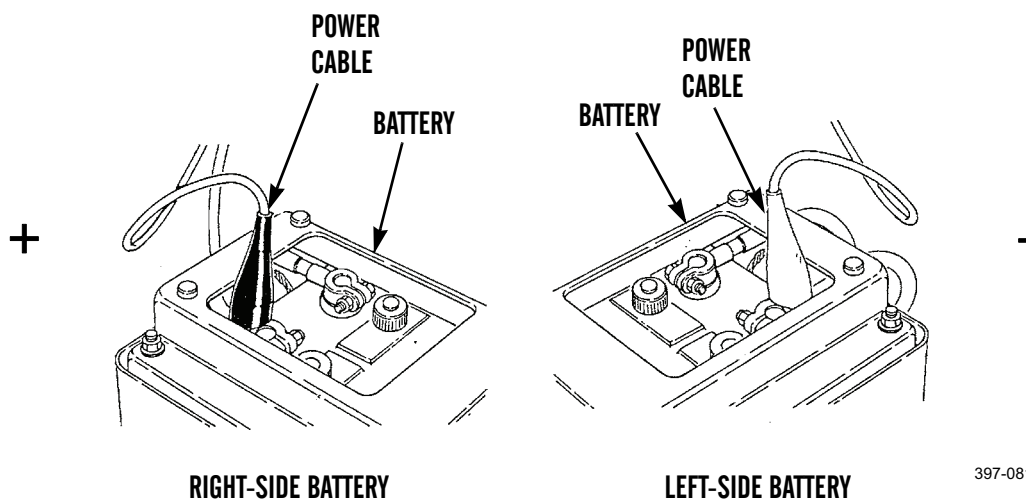
1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.




397-081

TEST 50 - FUEL SUPPLY PRESSURE - CONTINUED

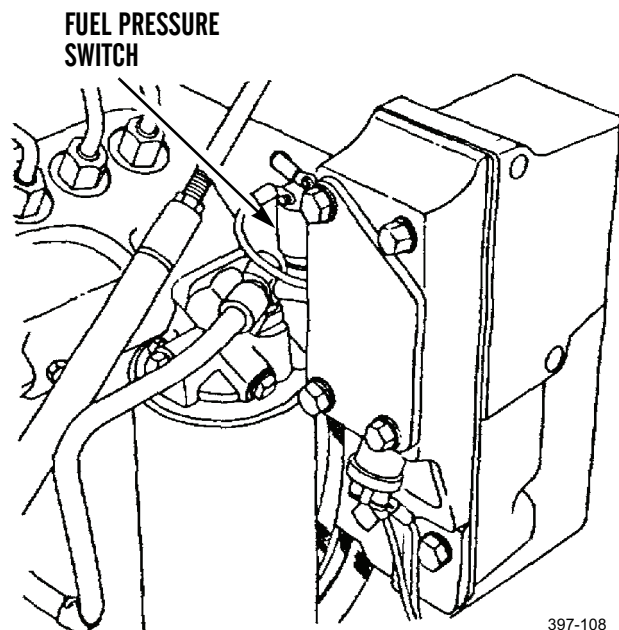2. Remove fuel pressure switch.



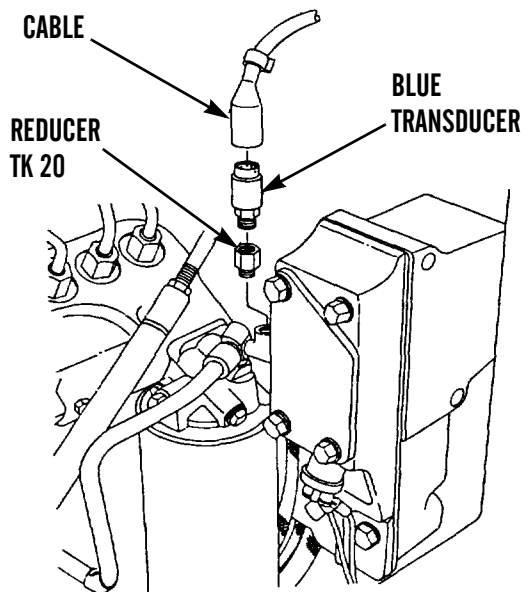3. Install reducer item TK 20. Install blue transducer and connect cable.



4. Perform test using procedure TEST 50 as instructed in TM 9-4910-571-12&P.
5. At high idle, fuel pressure should read 25 to 45 psi (172 to 310 kPa). Parameters for minimum fuel pressure at low idle are 15 psi (103 kPa).
6. Return machine to its original condition.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

TEST 89 - Alternator/Generator Output Voltage

TEST 90 - Alternator Output Current Sense

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Analyzer set, engine (Item 12, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

TM 9-4910-571-12&P

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)


Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)


TEST 89 - ALTERNATOR/GENERATOR OUTPUT VOLTAGE

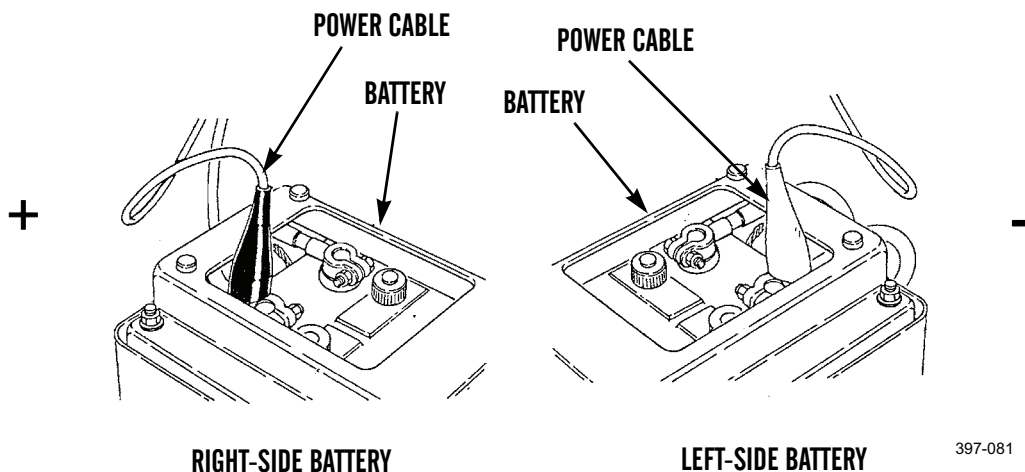1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.



TEST 89 - ALTERNATOR/GENERATOR OUTPUT VOLTAGE - CONTINUED

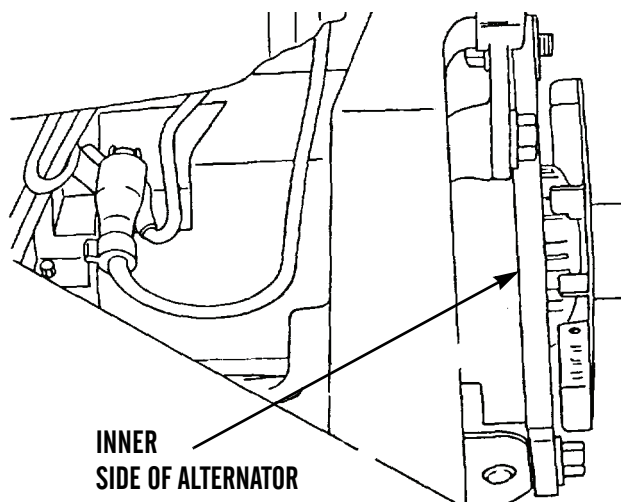2. Attach red lead clip to output terminal of alternator. Ground black lead clip. Make sure that electrical connections are clean.




397-205

3. Perform test using procedure TEST 89 as instructed in TM 9-4910-571-12&P.
4. Voltage should be 26.5 to 28.0 volts.
5. Return machine to its original condition.

TEST 90 - ALTERNATOR OUTPUT CURRENT SENSE

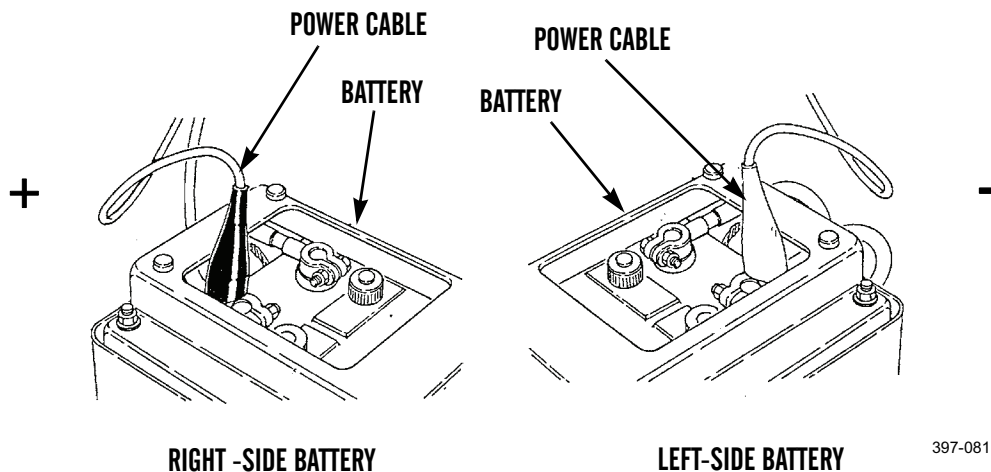
1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.



397-081

TEST 90 - ALTERNATOR OUTPUT CURRENT SENSE - CONTINUED

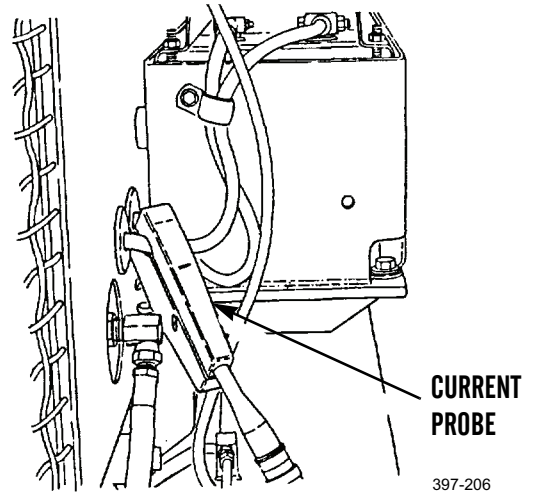2. Attach current probe to battery positive cable.



3. Perform test using procedure TEST 90 as instructed in TM 9-4910-571-12&P.
4. Crank engine without starting for 30 seconds to drain battery.
5. Start engine and test for 45 ± 2 amps.
6. Return machine to its original condition.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

TEST 89 - Starting Motor Voltage

TEST 90 - Starter Current (Average)

TEST 89 - Starter Negative Cable Voltage Drop

TEST 74 - Starter Circuit Resistance

TEST 89 - Starter Solenoid Voltage

TEST 89 - 0-45 Volts

INITIAL SETUP

Maintenance Level

Unit

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Analyzer set, engine (Item 12, WP 0348 00)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Engine off (TM 5-3805-261-10)


References

TM 9-4910-571-12&P

Battery disconnect switch in OFF position (TM 5-3805-261-10)

TEST 89 - STARTING MOTOR VOLTAGE

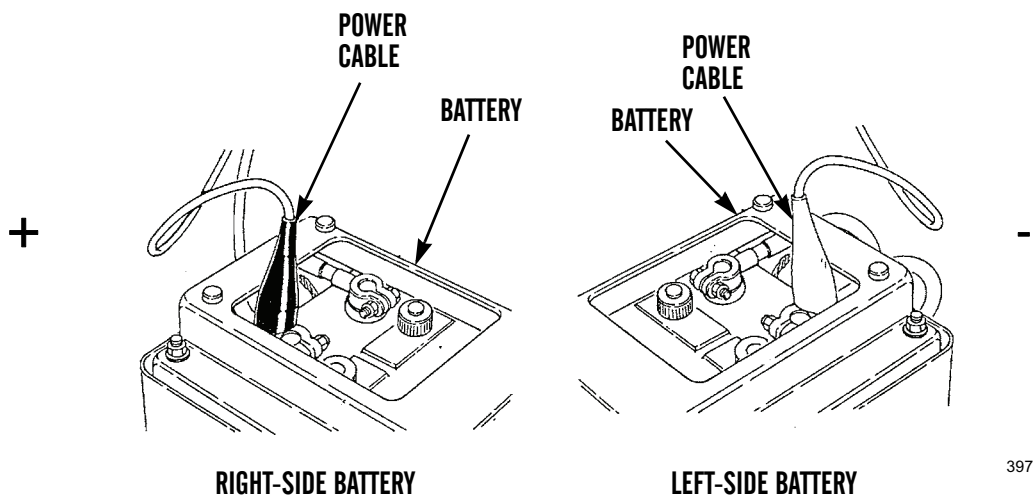
1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.




397-081

TEST 89 - STARTING MOTOR VOLTAGE - CONTINUED

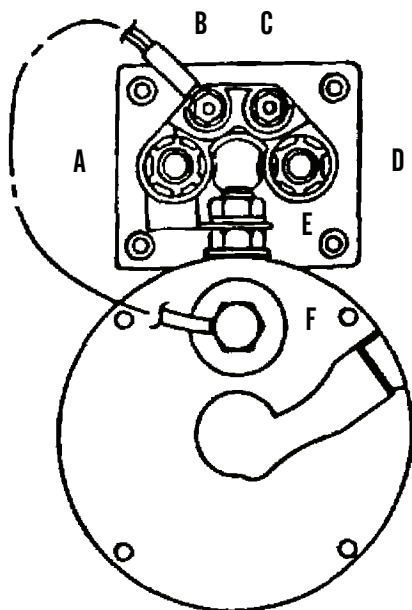2. Attach red lead clip to terminal E. Attach black lead clip to battery negative terminal. Make sure that electrical connections are clean.




397-216

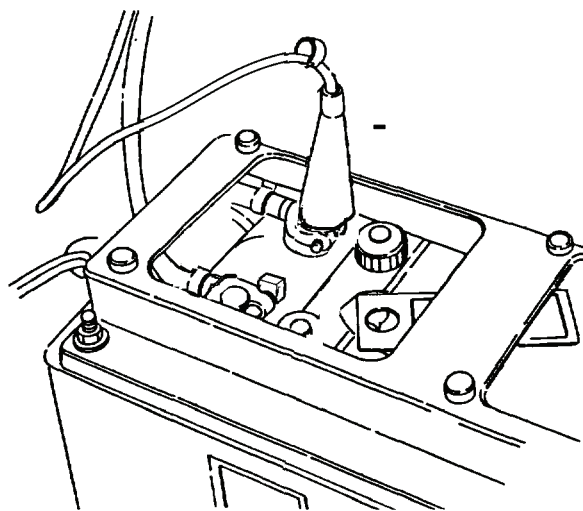

RIGHT-SIDE BATTERY

397-217

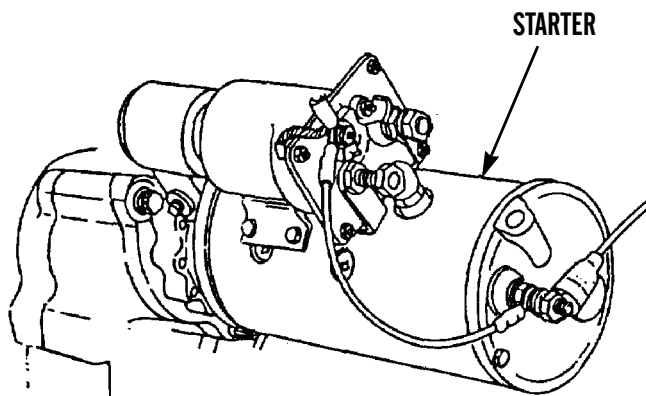3. Perform test using procedure TEST 89 as instructed in TM 9-4910-571-12&P.
4. Starter motor voltage should be a minimum of 17 volts.




397-218

5. Return machine to its original condition.

TEST 89 - STARTER NEGATIVE CABLE VOLTAGE DROP

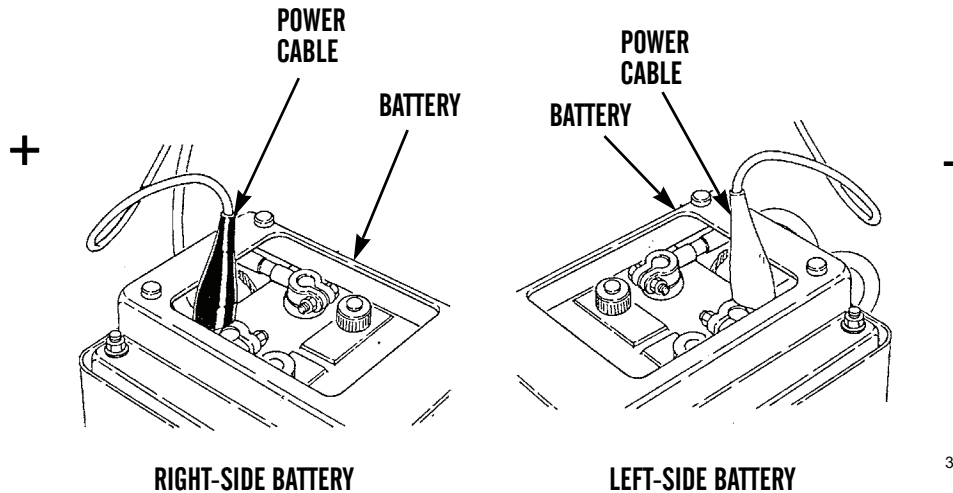1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.



397-081


2. Attach red lead clip to ground terminal F. Attach black lead clip to battery negative terminal. Make sure that electrical contacts are clean.
3. Perform test using procedure TEST 89 as instructed in TM 9-4910-571-12&P.
4. Voltage drop should not be more than 0.1 volt.
5. Return machine to its original condition.

TEST 89 - STARTER SOLENOID VOLTAGE


1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.
2. Attach red lead clip to positive terminal C on starter solenoid. Attach black lead clip to battery negative terminal. Make sure that electrical connections are clean.
3. Perform test using procedure TEST 89 as instructed in TM 9-4910-571-12&P.
4. Starter solenoid voltage should be 18 volts.
5. Return machine to its original condition.

TEST 90 - STARTER CURRENT (AVERAGE)

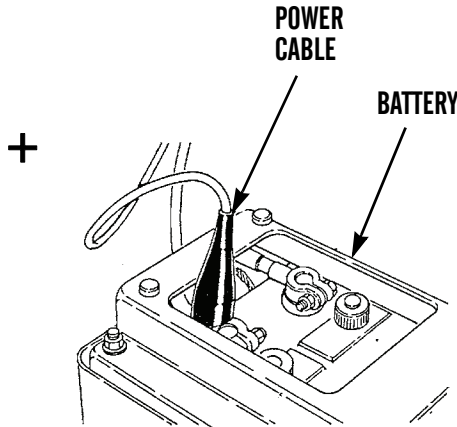1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.
2. Attach current probe to positive battery cable connected to starter.




RIGHT-SIDE BATTERY

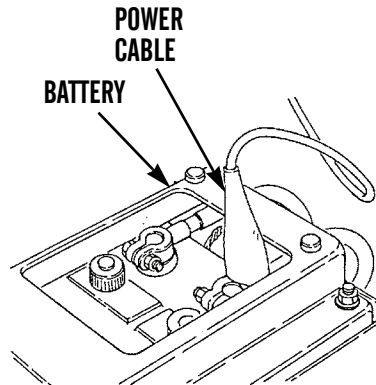

LEFT-SIDE BATTERY

397-081

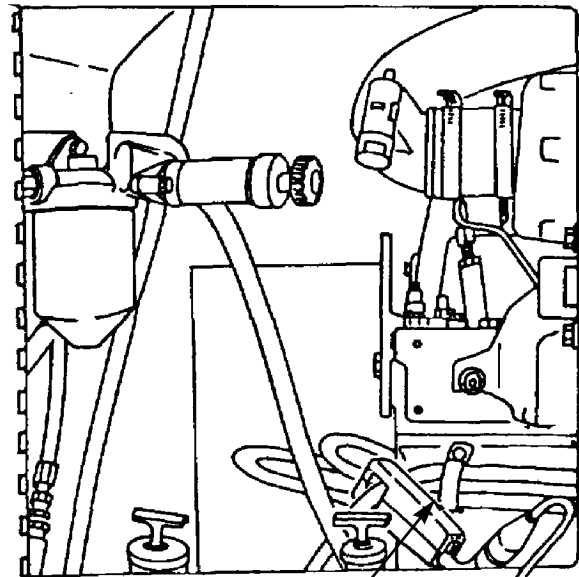3. Perform test using procedure TEST 90 as instructed in TM 9-4910-571-12&P.
4. Starter current should be a minimum of 100 amps.
5. Return machine to its original condition.



CURRENT PROBE

397-219



TEST 74 - STARTER CIRCUIT RESISTANCE

1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.
2. Attach current probe.
3. Perform test using procedure TEST 74 as instructed in TM 9-4910-571-12&P.
4. Starter circuit resistance should be 0.8 to 2.0 milliohms.
5. Return machine to its original condition.

TEST 89 - 0-45 VOLTS**NOTE**

TEST 89 is a general electrical test to determine voltage. In the following procedures, TEST 89 is used to read positive and negative voltage drop across various starting related connections.

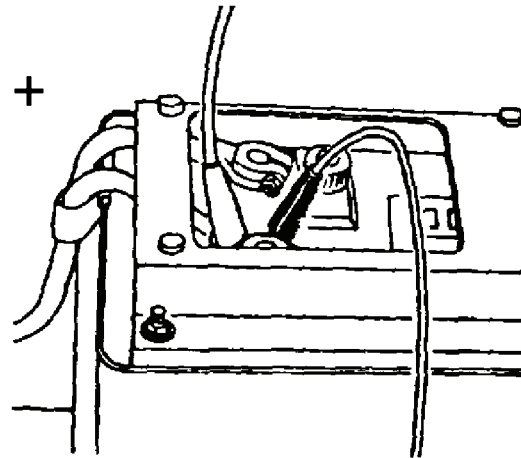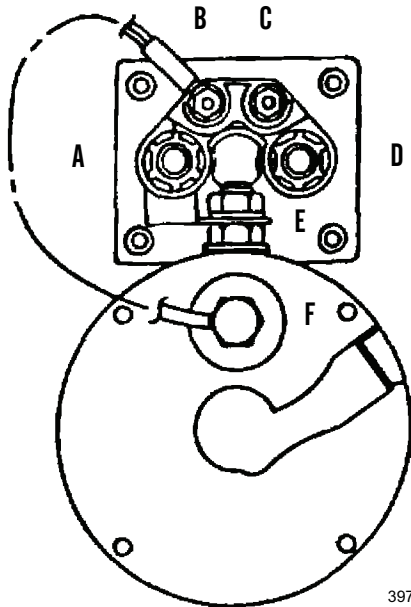
1. Positive Voltage Drop.
 - a. Starting Motor.
 - (1) Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.
 - (2) Attach black lead clip to terminal E. Attach red lead clip to battery positive terminal. Make sure that all electrical contacts are clean.

**RIGHT-SIDE BATTERY**


397-220

TEST 89 - 0-45 VOLTS - CONTINUED

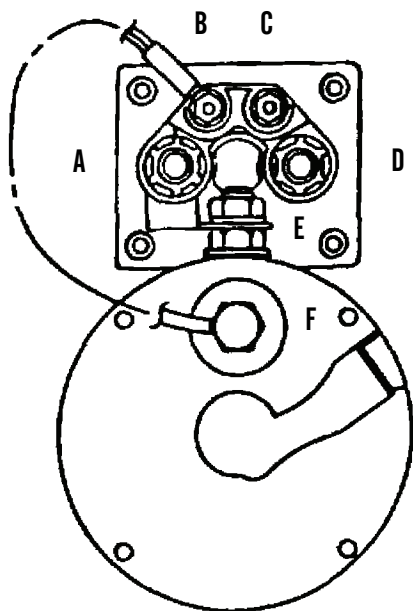- (3) Perform test using procedures TEST 89 as instructed in TM 9-4910-571-12&P.
 - (4) Maximum voltage drop allowable is 0.1 volt.
 - (5) Return machine to its original condition.
- b. Starter Solenoid.
- (1) Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.
 - (2) Attach black lead clip to terminal C. Attach red lead clip to battery positive terminal. Make sure that all electrical contacts are clean.



397-216

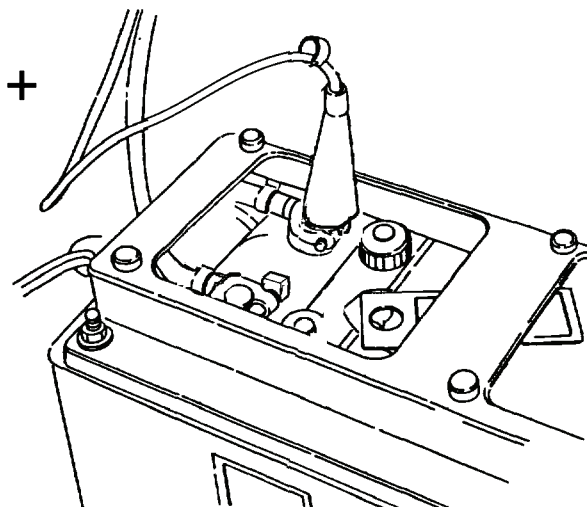


RIGHT-SIDE BATTERY

397-217


- (3) Perform test using procedure TEST 89 as instructed in TM 9-4910-571-12&P.
 - (4) Maximum voltage drop allowable is 0.1 volt.
 - (5) Return machine to its original condition.
2. Negative Voltage Drop.
- a. Master Disconnect Switch.
- (1) Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.

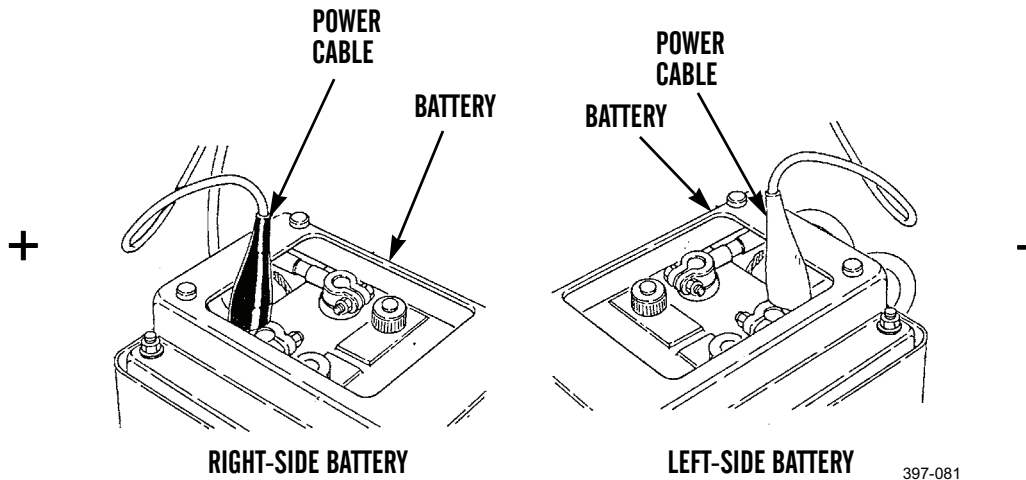TEST 89 - 0-45 VOLTS - CONTINUED




397-081

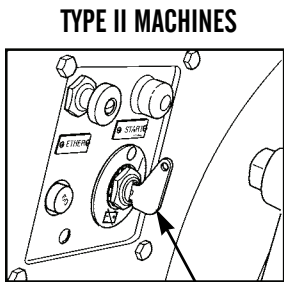- (2) Remove cover to operator panel on right side of seat to expose master disconnect switch.
- (3) Attach red lead clip and black lead clip across switch.



BATTERY DISCONNECT SWITCH

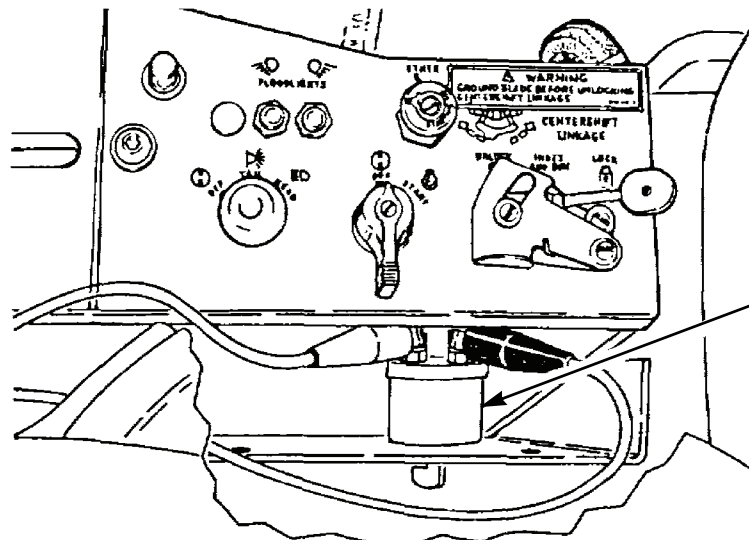


BATTERY DISCONNECT SWITCH

CCE AND TYPE I MACHINES

397-221

TEST 89 - 0-45 VOLTS - CONTINUED

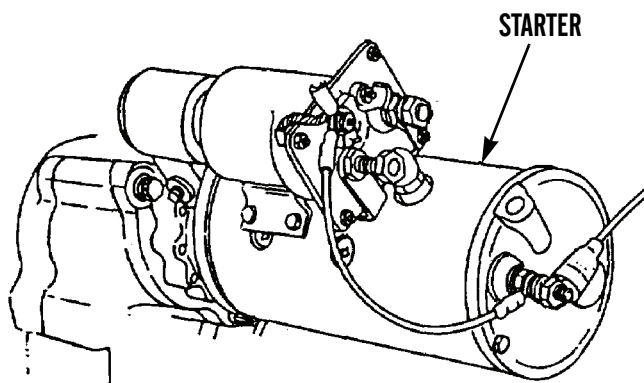- (4) Perform test using procedure TEST 89 as instructed in TM 9-4910-571-12&P.
 - (5) Voltage drop should be no more than 1.0 volt.
 - (6) Return machine to its original condition.
- b. Starter Ground to Frame.
- (1) Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.
 - (2) Attach red lead clip to starter. Ground black lead clip to frame. Make sure that all electrical contacts are clean.



397-218

- (3) Perform test using procedures TEST 89 as instructed in TM 9-4910-571-12&P.
- (4) Voltage drop should be no more than 0.2 volt.
- (5) Return machine to its original condition.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

TEST 67 - Battery Voltage

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Analyzer set, engine (Item 12, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

TM 9-4910-571-12&P

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)


Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

TEST 67- BATTERY VOLTAGE

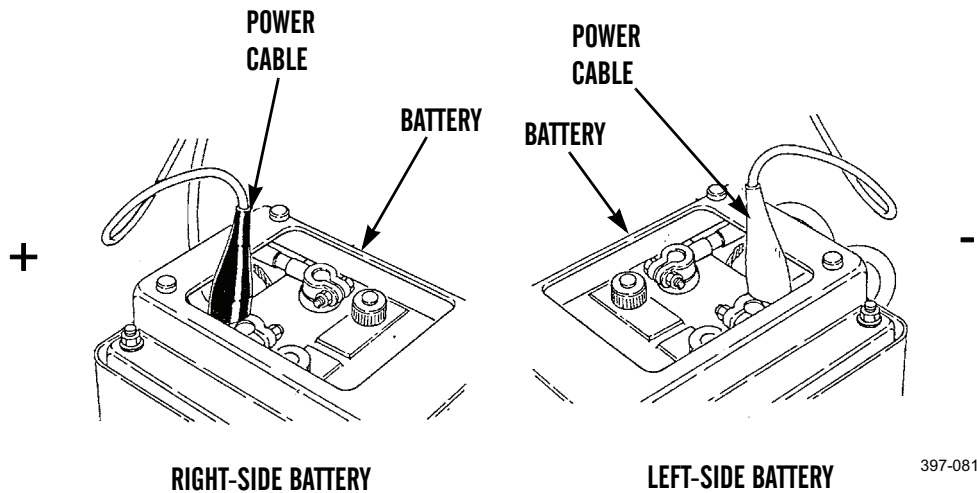
1. Refer to VTM General Setup and Checkout Instructions in TM 9-4910-571-12&P. Connect power cable to battery.



397-081

TEST 67 - BATTERY VOLTAGE - CONTINUED

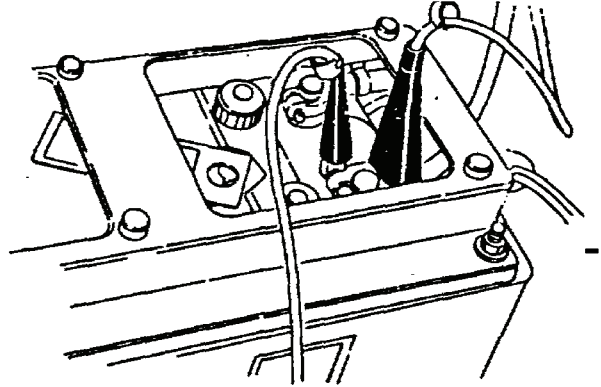2. Attach lead clips. Red lead clip is on right battery positive terminal and black lead clip is on left battery negative terminal. Make sure that electrical connections are clean.



397-365

3. Perform test using procedure TEST 67 as instructed in TM 9-4910-571-12&P.
4. Battery voltage should be 18 to 24 volts. Take corrective action if necessary.
5. Return machine to its original condition.

END OF WORK PACKAGE

CHAPTER 3
UNIT MAINTENANCE INSTRUCTIONS

GENERAL

1. When a used or reconditioned 130G Series Grader is first received, determine whether it has been properly prepared for service and is in condition to perform its mission.
2. Follow the inspection and servicing instructions that follow.

INSPECTION INSTRUCTIONS

1. Read and follow all precautions and instructions on DD Form 1397.
2. Remove all packing and shipping material, such as tape, tie downs, protective covers, and shipping seals. Remove tape from exhaust pipe.



Solvent cleaning compound MIL-PRF-680 Type III is an environmentally compliant and low toxic material. However, it may be irritating to the eyes and skin. Use protective gloves and goggles. Use in well-ventilated areas. Keep away from open flames and other sources of ignition. Failure to follow this warning may cause injury or death to personnel.

3. Clean any exposed metal parts coated with rust preventive compound. Use solvent cleaning compound (Item 8, WP 0349 00).
4. Inspect equipment for any damage incurred during shipment. Check if equipment has been modified.
5. Check equipment against packing slip to ensure that shipment is complete. Report any discrepancies on SF Form 364.
6. Clean all external surfaces as needed. Touch up any paint scratches (TM 43-0139 and TB 43-0242).
7. Remove all Basic Issue Items (BII), Components of End Item (COEI) and Additional Authorization List (AAL) items and stow in accordance with TM 5-3805-261-10.

SERVICING INSTRUCTIONS

1. Service machine in accordance with PMCS instructions in TM 5-3805-261-10 to include the monthly all systems machine exercise and PMCS instructions in this manual (WP 0022 00 and WP 0023 00). Schedule the next PMCS on DA Form 2404 or DA Form 5988-E.
2. Refer to TM 5-3805-261-10 and perform functional checks of all major machine systems to ensure machine is ready for operation. Remove all warning tags.

END OF WORK PACKAGE

GENERAL MAINTENANCE INSTRUCTIONS

0020 00

THIS WORK PACKAGE COVERS

Scope	Lubrication Instructions
Work Safety	Standard Tool Requirements
Relieving Hydraulic System Pressure	Applying Torque
General Information	Tagging Instructions
Cleaning Instructions	Lines and Ports
Inspection Instructions	Fluid Disposal
Repair Instructions	

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Cleaning compound, solvent (Item 8, WP 0349 00)

Detergent (Item 11, WP 0349 00)

Lubricating oil (Item 26, 27, or 30, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Materials/Parts - Continued

Tag, marker (Item 44, WP 0349 00)

Tape, duct (Item 45, WP 0349 00)

References

TB 43-0209

TC 9-237

TM 5-3805-261-10

TM 9-214

TM 9-247

WP 0022 00

WP 0023 00

SCOPE

These general maintenance instructions contain general shop practices and specific methods you must be familiar with to properly maintain the 130G Series Grader. You should read and understand these practices and methods before starting maintenance tasks on the machine.

WORK SAFETY

1. Before starting a task, think about the risks and hazards to your safety as well as others. Wear protective gear such as safety goggles or lenses, safety shoes, rubber apron, or gloves. Protect yourself against injury.
2. Observe all WARNINGS and CAUTIONS.
3. When lifting heavy parts, have someone help you. Make sure that lifting equipment is working properly, that it is suitable for the task assigned, of sufficient load capacity and is secured against slipping.
4. Always use power tools carefully.

WORK SAFETY - CONTINUED

5. Before beginning a procedure, ensure that the following conditions have been observed, unless otherwise specified:
 - a. Machine must be parked on level ground with parking/emergency brake applied.
 - b. All machine implements must be lowered to the ground.
 - c. Transmission must be in N (Neutral) and locked.
 - d. Engine must be off.
 - e. Components which are hot at operating temperatures (i.e., cooling, exhaust, and hydraulic systems) must cool down before they are removed.
 - f. Components must, however, be at operating temperature to be tested.
 - g. Battery disconnect switch must be in OFF position and/or batteries disconnected when performing electrical system maintenance.
 - h. Hydraulic system pressure must be relieved before disconnecting any hydraulic system line or fitting. Refer to *Relieving Hydraulic System Pressure* in this work package.

RELIEVING HYDRAULIC SYSTEM PRESSURE**WARNING**

- Do NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
 - At operating temperature hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulics. Failure to do so could result in injury.
1. Lower all machine implements to the ground.
 2. Shut down engine.
 3. Move all control levers through all operating positions. Return levers to HOLD position.
 4. Slowly loosen hydraulic tank filler cap and allow any pressure to escape.

GENERAL INFORMATION

1. Before beginning a task, find out how much repair, modification, or replacement is needed to fix the equipment as described in this manual. Sometimes the reason for equipment failure can be seen right away and complete teardown is not necessary. Disassemble the equipment only as far as necessary to repair or replace damaged or broken parts.
2. All tags and forms attached to the equipment must be checked to learn the reason for removal from service. Check all Modification Work Orders (MWOs) and Technical Bulletins (TBs) for equipment changes and updates.
3. In some cases a part may be damaged by removal. If the part appears to be good, and other parts behind it are not defective, leave it on and continue the procedure. Here are a few simple rules:
 - a. Do not remove dowel pins or studs unless loose, bent, broken, or otherwise damaged.
 - b. Do not pull bearings or bushings unless damaged. If you must get at parts behind them, pull out bearings or bushings carefully.
 - c. Replace all gaskets, seals, preformed packings, O-rings, cotter pins, spring pins, self-locking nuts, and lockwashers.

CLEANING INSTRUCTIONS**WARNING**

- Solvent cleaning compound MIL-PRF-680 Type III is an environmentally compliant and low toxic material. However, It may be irritating to the eyes and skin. Use protective gloves and goggles. Use in well-ventilated areas. Keep away from open flames and other sources of ignition.
- Improper cleaning methods and use of unauthorized cleaning solvents may injure personnel and damage equipment. Refer to TM 9-247, Materials Used for Cleaning, Preserving, Abrading, and Cementing Ordnance Materiels and Related Materiels Including Chemicals, for correct information.
- Fire extinguishers should be placed nearby when using solvent cleaning compound.
- Cloths or rags saturated with solvent cleaning compound must be disposed of IAW authorized facilities' procedures.
- Eye shields must be worn when cleaning with a wire brush. Flying rust and metal particles may cause injury.
- Particles blown by compressed air are hazardous. DO NOT exceed 15 psi (103 kPa) nozzle pressure when drying parts with compressed air. Use a maximum of 30 psi (207 kPa) when cleaning components. DO NOT direct compressed air against human skin. Failure to follow this warning may result in injury or death. Make sure air stream is directed away from user and other personnel in the area. To prevent injury, user must wear protective goggles or face shield.

1. **General.**

- a. Cleaning instructions are the same for the majority of parts and components of the machine.
- b. The importance of cleaning must be thoroughly understood by maintenance personnel. Great care and effort are required in cleaning. Dirt and foreign material are a constant threat to satisfactory maintenance. The following should apply to all cleaning, inspection, repair and assembly operations.
 - (1) Clean all parts before inspection, after repair and before assembly.
 - (2) To prevent contamination, hands should be kept free of accumulation of grease, which can collect dust, dirt, or grit.
 - (3) After cleaning, all parts should be covered or wrapped to protect them from dust and dirt. Parts that are subject to rust should be lightly oiled.

2. **External Engine Cleaning.**

- a. Protect all electrical equipment that could be damaged by the steam or moisture before steam cleaning.
- b. Cover all openings before steam cleaning.
- c. After cleaning, dry and apply a light coat of oil to all parts subject to rust.
- d. Clear out all tapped (threaded) holes with compressed air to remove dirt and cleaning fluid.

3. **Cleaning Disassembled Parts.**

- a. Place all disassembled parts in wire baskets for cleaning.
- b. Dry and cover all cleaned parts.
- c. Place parts on or in "racks" and hold for inspection or repair.
- d. All parts subject to rusting must be lightly oiled and wrapped.
- e. Keep all related parts and components together. Do not mix parts.

CLEANING INSTRUCTIONS - CONTINUED

4. **Castings.**
 - a. Clean inner and outer surfaces of castings and all areas subject to grease and oil with solvent cleaning compound.
 - b. Use a stiff brush to remove sludge and gum deposits.
 - c. Clear out all tapped (threaded) holes with compressed air to remove dirt and cleaning solvent.
5. **Oil Passages.** Particular attention must be given to all oil passages in castings and machined parts. Oil passages must be clean and free of any obstructions.
 - a. Clean passages with wire probes to break up any sludge or gum deposits.
 - b. Wash passages by flushing with solvent cleaning compound.
 - c. Dry passages with compressed air.
6. **Oil Seals and Flexible Hoses.**

CAUTION

Washing flexible hoses and oil seals with solvent cleaning compounds or mineral spirits will cause serious damage or destroy the material.

- a. Wash flexible hoses with a mild solution of detergent and water and wipe dry.
 - b. Oil seals are generally damaged during removal; cleaning will not be necessary since new seals will be used in assembly.
7. **Bearings.** Refer to TM 9-214 for complete instructions.
 8. **Machined Surfaces.**
 - a. Clean machined surfaces with solvent cleaning compound.
 - b. Dry surfaces with compressed air.
 9. **Mated Surfaces.**
 - a. Remove old gasket and/or sealing compound using a wire brush and solvent cleaning compound.
 - b. Lightly coat with oil and wrap all parts subject to rust before storing.
 10. **Rusted Surfaces.** Clean all rusted surfaces using wire brush and crocus cloth.
 11. **Oil-Bathed Internal Parts.** Wipe oil-bathed internal parts clean with a lint-free cloth.
 12. **Air-Actuated Internal Parts.** Wash air-actuated internal parts clean with a lint-free cloth.
 13. **Externally Exposed Parts.** Wash externally exposed parts with detergent and water. Rinse thoroughly and air dry.

INSPECTION INSTRUCTIONS

1. **General.** All components and parts must be carefully checked to determine if they are serviceable for reuse, if they can be repaired or if they must be scrapped.
2. **Drilled and Tapped (Threaded) Holes.**
 - a. Inspect for wear, distortion (stretching), cracks, or any other damage in or around holes.
 - b. Inspect threaded areas for wear, distortion, or evidence of cross-threading.
 - c. Mark all damaged areas for repair or replacement.

INSPECTION INSTRUCTIONS - CONTINUED

3. **Metal Lines, Flexible Lines (Hoses), and Fittings.**
 - a. Inspect lines for sharp kinks, cracks, bends, or dents.
 - b. Inspect flexible lines for fraying, evidence of leakage, or loose fittings or connectors.
 - c. Check all fittings and connectors for thread damage. Check for hex heads that are worn or rounded by poorly fitting wrenches.
 - d. Mark all damaged material for repair or replacement.
4. **Castings.**
 - a. Inspect all ferrous and nonferrous castings for cracks using a magnifying glass and strong light.
 - b. Particularly check areas around studs, pipe plugs, threaded inserts, and sharp corners. Replace all cracked castings.
 - c. Inspect machined surfaces for nicks, burrs, or raised metal. Mark damaged areas for repair or replacement.
 - d. Inspect all pipe plugs, pipe plug openings, screws, and screw openings for damaged or stripped threads.
 - e. Check all gasket mating surfaces, flanges on housings, and supports for warpage with a straightedge or surface plate. Inspect mating flanges for discoloration that may indicate persistent oil leakage.
5. **Bearings.** Refer to TM 9-214 for inspection of bearings. Damaged bearings must be replaced.
6. **Studs, Bolts, and Screws.** Replace if threads are damaged, bent, loose, or stretched.
7. **Gears.**

NOTE

When gear teeth wear limits are not established, good judgement is required to determine if gear replacement is necessary.

- a. Inspect all gears for cracks using a magnifying glass and strong light. No cracks are permissible.
 - b. Inspect gear teeth for wear, sharp fins, burrs, and galled or pitted surfaces.
 - c. Check keyway slots for wear or damage. If keyways are worn, damaged, or elongated, replace gear.
8. **Bushing and Bushing Type Bearings.**
 - a. Check all bushings and bushing type bearings for secure fit, evidence of overheating, wear, burrs, nicks, and out-of-round condition. Replace as necessary.
 - b. Check for dirt in lubrication holes or grooves. Holes and grooves must be clean and free from damage.
 9. **Oil Seals.** Oil seals are mandatory replacement items.
 10. **Core Hole Expansion Plugs.** Inspect for leakage. Replace plugs when leakage is present.
 11. **Machine-Tooled Parts.** Inspect for cracks, breaks, elongated holes, wear, and chips. Replace any damaged parts.
 12. **Machined Surfaces.** Inspect for cracks, evidence of wear, galled, or pitted surface, burrs, nicks, and scratches.
 13. **Mating Surfaces.** Inspect for remains of old gasket, seal, secure fit, pitting, and evidence of leakage.
 14. **Rusted Surfaces.** Inspect for pitting, holes, and severe damage.
 15. **Oil-Bathed Internal Parts.** Inspect for cracks, nicks, burrs, evidence of overheating, and wear.
 16. **Internal Parts.** Inspect for cracks, nicks, burrs, evidence of overheating, and wear.
 17. **Externally Exposed Parts.** Inspect for breaks, cracks, rust damage, and wear.
 18. **Springs.** Inspect for broken, collapsed, and twisted coils.

REPAIR INSTRUCTIONS1. **General.**

- a. Any repair procedure peculiar to a specific part or component is covered in the work package relating to that item.

CAUTION

Repaired items must be thoroughly cleaned to remove metal chips and abrasives, to prevent these from entering working parts of the machine.

- b. After repair, clean all parts thoroughly to prevent dirt, metal chips, or other foreign material from entering any working parts.

2. **Castings.**

- a. Only minor repairs to machined surfaces, flanges, and gasket mating surfaces are permitted. Remove minor nicks, burrs and scratches with:
 - (1) Fine mill file.
 - (2) Crocus cloth dipped in solvent cleaning compound.
 - (3) Lapping across a surface plate.
- b. Remachining of machined surfaces to repair damage, warpage, or uneven surfaces is not permitted. Replace castings.
- c. Repair damaged threaded pipe plug or screw threads with a tap or die. Repair oversize holes with threaded inserts.

3. **Studs.**

- a. Repair minor thread damage with a thread die.
- b. Replace studs having stripped or damaged threads as described below:
 - (1) Remove using a stud remover. Back studs out slowly to avoid heat buildup and seizure that can cause stud to break off.

CAUTION

Refer to TC 9-237, Operator's Circular for Welding Theory and Application, to avoid damage to castings if welding method is used.

- (2) If studs break off too short to use a stud remover, use a stud extractor to remove or use "welding method": weld bar stock or a nut to stud and remove with a wrench.
- (3) Install replacement stud slowly to prevent heat buildup and snapping off.

4. **Gears.**

- a. Remove gears using pullers.
- b. Only minor repairs to gears are permitted. Remove minor nicks, burrs, or scratches on gear teeth with:
 - (1) Fine mill file.
 - (2) Crocus cloth dipped in solvent cleaning compound.

5. **Bushings and Bushing Type Bearings.**

- a. When bushings and bushing type bearings seize to a shaft and spin in the bore, associated parts must also be replaced.
- b. It may be necessary to heat bearings to aid in installation.

REPAIR INSTRUCTIONS - CONTINUED

6. **Oil Seals.**
 - a. Remove oil seals by pressing or prying out, being careful not to damage casting or adapter bore.
 - b. Always install new seal in bore using proper seal installation tool.
7. **Painting.** Upon installation, restored parts must be painted in accordance with TB 43-0209.

LUBRICATION INSTRUCTIONS**NOTE**

Refer to TM 5-3805-261-10 and to Unit Maintenance PMCS (WP 0022 00 and WP 0023 00 in this manual) for detailed, illustrated instructions on proper lubrication. The following are some general practices to remember:

1. Use the correct lubricant.
2. Keep lubricants clean.
3. Clean all fittings and area around fill and drain points before lubrication.
4. Lubricate clean disassembled and new parts to prevent rust.

STANDARD TOOL REQUIREMENTS

1. The following are general practices regarding the use of tools:
 - a. Always use the proper tool kit and tools for the procedure being performed.
 - b. Ensure that tools are clean and lubricated to reduce wear and to prevent rust.
 - c. Keep track of tools. Do not be careless with them.
 - d. Return tools to toolbox when finished with repair or maintenance.
 - e. Return toolboxes and tools to tool storage when not in use.
 - f. Inventory tools before and after each use.
2. Some maintenance tasks may require special or fabricated tools. The "Initial Setup" of the procedure will specify any special or fabricated tools needed to perform that procedure. Use these special tools only for the maintenance procedures for which they are designed or called out. If you are unfamiliar with a required tool, see your supervisor.

APPLYING TORQUE

1. When tightening fasteners, use torque value as specified in *Torque Limits* (WP 0351 00).
2. If a unique torque value is required, it will be provided in the procedural step of the task.

TAGGING INSTRUCTIONS

1. Use marker tags to identify all electrical wires, fuel, oil, coolant, and hydraulic lines, and any other parts which may be hard to identify or replace later. Fasten tags to parts during removal by wrapping wire fasteners around or through parts and twisting ends together. Position tags to be out of the way during cleaning, inspection, and repair. Mark tags with a pencil, pen, or marker.
2. Whenever possible, identify electrical wires with the number of the terminal or wire to which it connects. If no markings can be found, tag both wires or wire and terminal, and use the same identifying mark for both. If you cannot tag a wire because it must fit through a small hole or you cannot reach it, write down the description of the wire and the point to which it connects or draw a simple diagram on paper. Be sure to write down enough information so you will be able to properly connect the wires during assembly. If you need to identify a loose wire, look for identifying number near end of the wire, stamped on a permanent metal tag. Compare the number to wire numbers on the appropriate electrical schematic.

TAGGING INSTRUCTIONS - CONTINUED

3. Identify fuel, oil, coolant, and hydraulic lines when you are taking off more than one line at the same time. Mark tags with points to which lines and hoses must be connected. If it is not obvious which end of a line goes where, tag each end of the line.
4. Identify and tag other parts as required by name and installed location.

LINES AND PORTS

To keep dirt from contaminating fluid systems when removing and installing fuel, oil, coolant, and hydraulic lines, perform the following steps:

- a. Clean fittings and surrounding area before disconnecting lines.
- b. Cover, cap, plug, or tape lines and ports after disconnecting lines. When these are not available, use plastic bags and rubber bands, clean rags, duct tape, or other similar materials to prevent dirt from entering system.
- c. Ensure that new and used parts are clean before installing.
- d. Replace all removed tiedown straps.
- e. Wait to remove cover, cap, plug, or tape from lines and ports until just before installing lines.

FLUID DISPOSAL**WARNING**

When servicing this machine, performing maintenance, or disposing of materials such as engine coolant, hydraulic fluid, lubricants, battery acids, or batteries, consult your unit/local hazardous waste disposal center or safety office for local regulatory guidance. If further information is needed, please contact The Army Environmental Hotline at 1-800-872-3845.

Dispose of contaminated drained fluids in accordance with the Standard Operating Procedures (SOP) of your unit.

END OF WORK PACKAGE

ELECTRICAL GENERAL MAINTENANCE INSTRUCTIONS

0021 00

THIS WORK PACKAGE COVERS

Cleaning and Inspection	Military Connector Repair
Multiple-Pin Connector Identification Diagrams	Ring Terminal Repair
Connector Repair	Splicing Wires
Sealed Connector Repair	Electrical Ground Points
Receptacle Connector Repair	Multimeter Usage
Waterproof Connector Repair	Relay Inspection and Test

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Heater, gun type, electric (Item 30, WP 0348 00)

Materials/Parts

Cloth, abrasive (Item 9, WP 0349 00)

Detergent (Item 11, WP 0349 00)

Materials/Parts - Continued

Flux, soldering (Item 12, WP 0349 00)

Grease, electrically conductive (Item 18, WP 0349 00)

Insulating sleeving (Item 19, WP 0349 00)

Insulating varnish, electrical (Item 20, WP 0349 00)

Solder, lead-tin alloy (Item 42, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

NOTE

- Use electrically conductive grease on unprotected (exposed to weather) electrical connectors before connections are made.
- Use electrical insulating varnish on all electrical connections that are mounted outside of machine and are exposed to harsh weather and/or road spray.

CLEANING AND INSPECTION**CAUTION**


Washing electrical wires with solvent cleaning compounds or mineral spirits will cause serious damage or destroy the material.

1. Wash electrical wires with a mild solution of detergent and water and wipe dry.
2. Inspect electrical wires and repair if necessary as specified below.
3. Inspect all other components in accordance with WP 0020 00.

MULTIPLE-PIN CONNECTOR IDENTIFICATION DIAGRAMS


NOTE

The following diagrams illustrate typical multiple-pin connectors and identify pin numbers as viewed from wire side of connector.

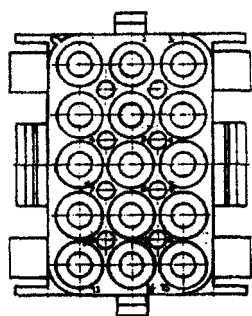


1	2	3
4	5	6
7	8	9
10	11	12
13	14	15

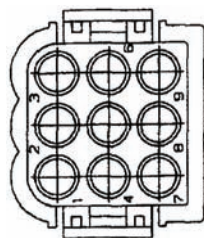397-2409




3	6	9
2	5	8
1	4	7

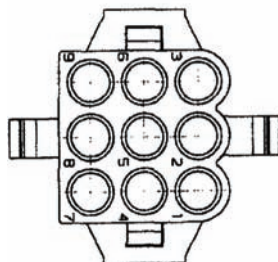397-2410



9	6	3
8	5	2
7	4	1

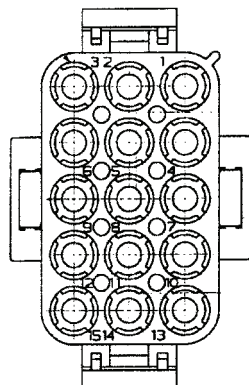397-2411




3	2	1
6	5	4
9	8	7
12	11	10
15	14	13

397-2412

CONNECTOR REPAIR**NOTE**

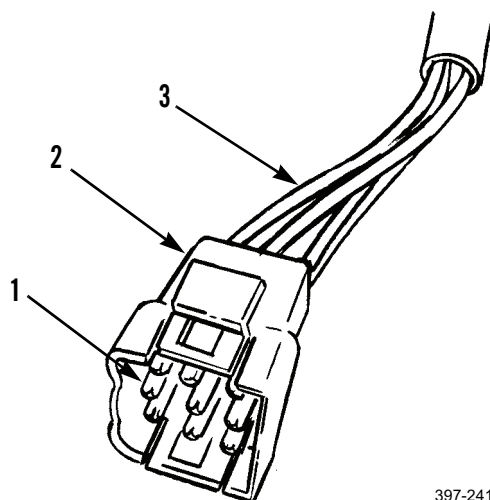- Perform the following steps for each wire of connector.
 - Tag wires to aid in installation.
1. Using pin removal tool, position tool over pin (1) and push inward to retract two barbs of pin.
 2. Remove wire (3) with pin (1) attached, from rear of connector (2).
 3. If damaged, remove pin (1) from wire (3) by cutting through wire just behind pin.



397-2413

NOTE

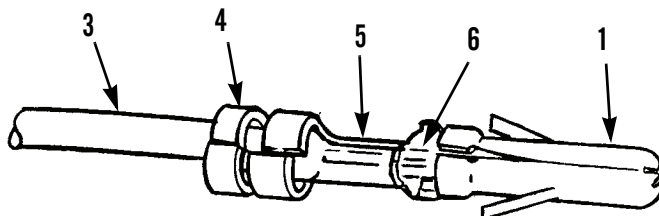
Perform steps 4 through 6 only if pin was removed.

4. Using wire stripping tool, strip insulation of wire (3) to expose proper length of metal strands (6).
5. Using crimping tool, securely crimp tabs (5) of pin (1) over metal strands (6) of wire (3).

NOTE

The other two tabs of pin may need to be crimped slightly in order to enter connector.

6. Using crimping tool, crimp tabs (4) at rear of pin (1) over insulation of wire (3).



397-2414

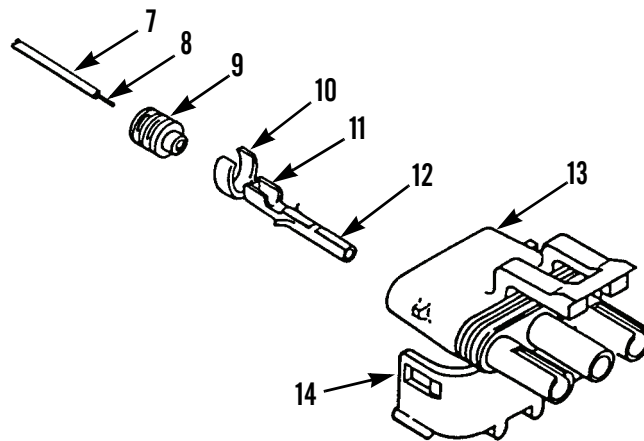
7. Push pin (1) into rear of connector (2) until fully seated.

SEALED CONNECTOR REPAIR

1. Open hinged cover (14) of connector (13) for access to rear of connector.

NOTE

- Perform the following steps for each wire of connector.
 - Tag wires to aid in installation.
2. Using pin removal tool, position tool over pin (12) and push inward to retract two barbs of pin.
 3. Remove wire (7), with pin (12) and seal (9) attached, from rear of connector (13).
 4. If defective, remove pin (12) and seal (9) from wire (7) by cutting through wire just behind seal.



397-2415

NOTE

Perform steps 5 through 8 only if pin and seal were removed.

5. Position new seal (9) on wire (7).
6. Using wiring stripping tool, strip insulation of wire (7) to expose 1/8 in. (3 mm) length of metal strands (8).
7. Using crimping tool, securely crimp tabs (11) of pin (12) over metal strands (8) of wire (7).
8. Slide seal (9) next to pin (12) and crimp tabs (10) of pin over end of seal.
9. Push pin (12) into rear of connector (13) until fully seated.
10. Close hinged cover (14) of connector (13).

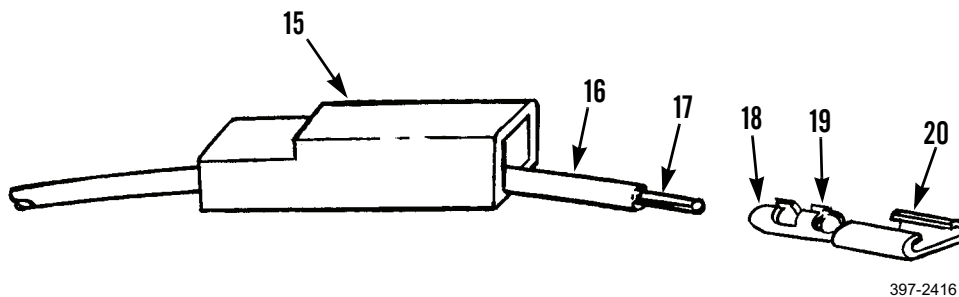
RECEPTACLE CONNECTOR REPAIR

1. Using removal tool, insert tool into front of connector (15) and depress locking tab of receptacle (20).
2. Push wire (16), with receptacle (20) attached, through front of connector (15).
3. If defective, remove receptacle (20) from wire (16) by cutting through wire just behind receptacle.

NOTE

Perform steps 4 through 7 only if receptacle was removed.


4. Slide connector (15) back on wire (16).



5. Using wire stripping tool, strip insulation of wire (16) to expose ¼ in. (6 mm) length of metal strands (17).
6. Using crimping tool, securely crimp tabs (19) of receptacle (20) over metal strands (17).
7. Using crimping tool, crimp tabs (18) of receptacle (20) over insulation of wire (16).
8. Slide connector (15) forward over receptacle (20) until locking tab of receptacle snaps into place.

WATERPROOF CONNECTOR REPAIR

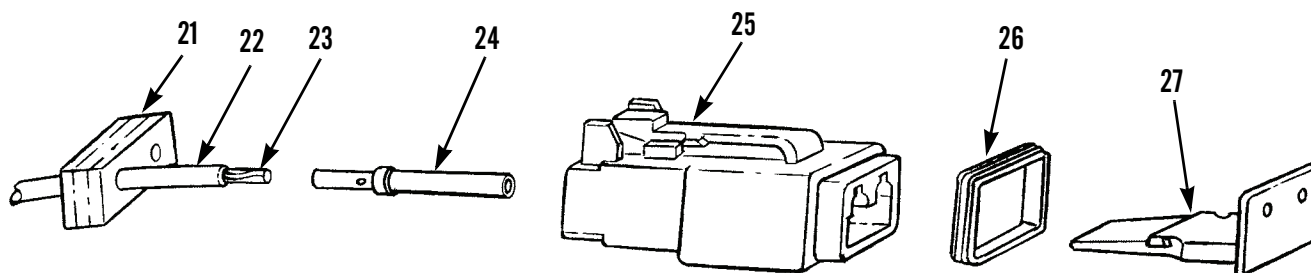1. Remove end cover (27) and gasket (26) from front of connector (25).
2. Remove seal (21) from rear of connector (25) and slide seal back on wire (22).


**NOTE**

- Perform the following steps for each wire of connector.
 - Tag wires to aid in installation.
3. Using pin removal tool, insert tool into front of connector (25) and depress locking tab of connector.
 4. Remove wire (22) with pin (24) from rear of connector (25).
 5. If defective, remove pin (24) from wire (22) by cutting through wire just behind pin.

WATERPROOF CONNECTOR REPAIR - CONTINUED**NOTE**

Perform steps 6 through 9 only if pin was removed.

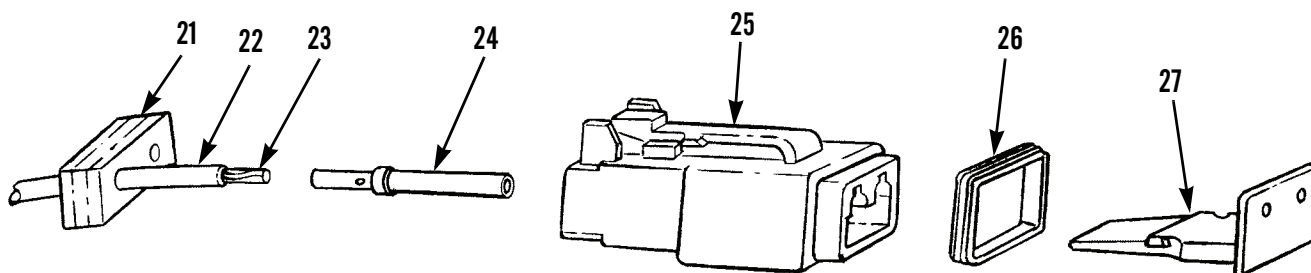
6. Using wire stripping tool, strip insulation of wire (22) to expose ¼ in. (6 mm) length of metal strands (23).
7. Insert metal strands (23) of wire (22) fully into rear of pin (24).
8. Using crimping tool, securely crimp pin (24) to metal strands (23) of wire (22).
9. Push pin (24) into rear of connector (25) until fully seated.
10. Install seal (21) on rear of connector (25).
11. Install gasket (26) and end cover (27) on front of connector (25).



397-2417

MILITARY CONNECTOR REPAIR

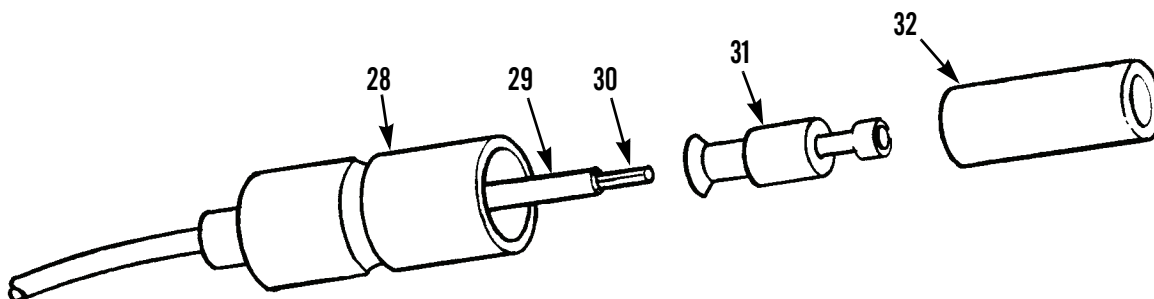1. Slide shell (28) back on wire (29) to expose sleeve (32).
2. Remove sleeve (32) from terminal (31) by pulling sleeve forward.
3. If defective, remove terminal (31) from wire (29) by cutting through wire just behind terminal.



397-2418

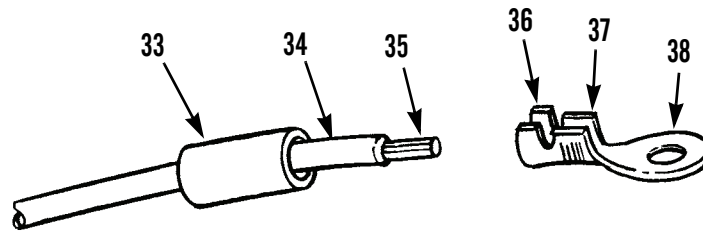
NOTE

Perform steps 4 through 6 only if terminal was removed.

4. Using wire stripping tool, strip insulation of wire (29) to expose length of metal strands (30) equal to depth of terminal (31).
5. Using crimping tool, securely crimp terminal (31) to metal strands (30) of wire (29).
6. Install sleeve (32) to terminal (31) by pushing sleeve over front of terminal until fully seated.
7. Slide shell (28) up wire (29) and over sleeve (32).

RING TERMINAL REPAIR

1. Remove ring terminal (38) from wire (34) by cutting through wire just behind heat shrink tubing (33).
2. Cut heat shrink tubing (33) to length sufficient to cover tabs (36 and 37) of ring terminal (38) and ¼ in. (6 mm) of wire (34).
3. Slide heat shrink tubing (33) back on wire (34).
4. Using wire stripping tool, strip insulation of wire (34) to expose proper length of metal strands (35).
5. Using crimping tool, securely crimp tabs (37) of ring terminal (38) over metal strands (35).
6. Using crimping tool, crimp tabs (36) of ring terminal (38) over insulation of wire (34).
7. Slide heat shrink tubing (33) over tabs (36 and 37) of ring terminal (38).
8. Use a heat gun to apply heat to heat shrink tubing (33) until tubing snugly conforms to ring terminal (38) and insulation of wire (34).



397-2419

SPLICING WIRES**NOTE**

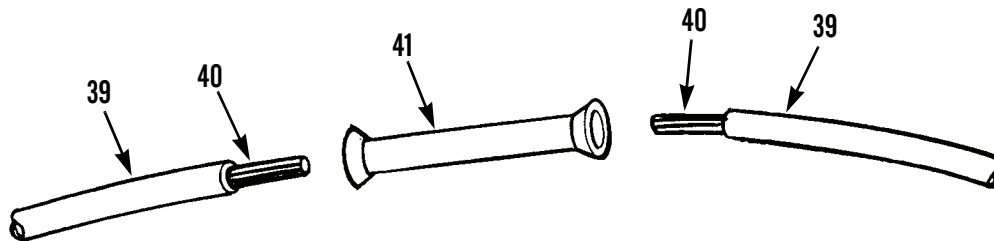
The selection of crimping tool and type of splice connectors is optional. High-quality splice connectors can be expected to last the life of the machine.

1. Inspect each end of wire (39). Trim insulation and metal strands (40) of wire back, as necessary, to ensure integrity of wire.
2. Using wire stripping tool, strip each end of wire (39) to expose length of metal strands (40) to suit type of splice connector (41) used.

NOTE

Perform steps 3 and 4 at each end of splice connector.

3. Insert metal strands (40) of wire (39) fully into splice connector (41).
4. Using crimping tool, securely crimp splice connector (41) to metal strands (40) of wire (39).



397-2420

ELECTRICAL GROUND POINTS

Many electrical problems are the result of poor ground connections. Ensure that ground connections are good by performing the following steps:

Although battery disconnect switch must be ON to test electrical circuit voltage, turn battery disconnect switch to OFF before performing resistance tests or replacing parts. Failure to follow this warning may result in injury to personnel and damage to equipment.

- a. Remove screw, lockwasher, nut, etc., connecting ground wire terminal to machine ground point.
- b. If necessary, clean mounting hardware, wire terminal, and ground point with detergent and a scrub brush.
- c. Remove any rust or corrosion from ground point with a wire brush and abrasive cloth.
- d. Replace defective mounting hardware and wire terminal as necessary.
- e. Install wire terminal to ground point with screw, lockwasher, nut, etc., and tighten securely.

MULTIMETER USAGE

1. **General.** A multimeter is used to troubleshoot the electrical system of the machine. The multimeter ohms scale is used to test for continuity, shorts, and resistance. The multimeter voltmeter scale is used to test voltage levels at any point in the electrical system.
2. **Continuity Tests.** Continuity tests are performed to check for breaks in a circuit (such as a fuse, switch, light bulb connector, or electrical wiring).

NOTE

If readout will not zero properly, replace batteries and repeat zeroing procedure. If readout will not zero after batteries have been replaced, notify your supervisor.

- a. **Zero Multimeter.**
 - (1) Set multimeter to ON.
 - (2) Select OHMS.
 - (3) Select LOWEST VOLTAGE/OHMS scale.
 - (4) Touch black and red probes together and check for a zero indication on digital readout.

CAUTION

Before performing a continuity test, always place battery disconnect switch in OFF position and disconnect circuit to be tested. Failure to follow this caution may damage multimeter.

- b. **Testing for Continuity.**
 - (1) Zero multimeter.
 - (2) Connect black and red probes to both terminals of circuit being tested.
 - (3) Observe readout and interpret results as follows:
 - (a) If readout indicates 0 (zero), circuit is open.
 - (b) If readout indicates resistance, circuit has continuity.

MULTIMETER USAGE - CONTINUED**CAUTION**

Before performing a continuity test, always place battery disconnect switch in OFF position and disconnect circuit to be tested. Failure to follow this caution may damage multimeter.

- c. **Testing for Shorts.** A short (or short circuit) occurs when two circuits that should not be connected have metal-to-metal contact with each other. A short also occurs when a circuit that should not touch ground has metal-to-metal contact with ground.
 - (1) Zero multimeter.
 - (2) Connect black probe to one pin and red probe to either ground or another pin.
 - (3) Observe readout and interpret results as follows:
 - (a) If readout indicates 0 (zero), circuits are not shorted.
 - (b) If readout indicates resistance, circuits are shorted or circuit is grounded, if testing to ground.
 - (c) If readout jumps or flickers, circuits are shorted or grounded intermittently.

CAUTION

Before performing a continuity test, always place battery disconnect switch in OFF position and disconnect circuit to be tested. Failure to follow this caution may damage multimeter.

- d. **Testing for Resistance.** Allowable resistance readings depend on circuit being tested. Refer to the particular section dealing with that circuit or component for allowable readings.
 - (1) Zero multimeter.
 - (2) Select OHMS.
 - (3) Select LOWEST VOLTAGE/OHMS range. If test specifies ohms range, select required range.
 - (4) Connect black and red probes across circuit to be tested.
 - (5) Observe readout and interpret results as circuit resistance.

3. **Measuring DC Voltage.**

- a. Set multimeter to ON.
- b. Select VOLTS.
- c. Select volts DC.
- d. Select LOWEST VOLTAGE/OHMS range for voltage range that is higher than volts to be measured.
- e. Connect red probe to positive (+) pin and black probe to negative (-) pin.
- f. Observe readout and interpret results as DC voltage in circuit being tested.

RELAY INSPECTION AND TEST

1. **Inspecting Relays.**
 - a. Check for bent or damaged pins.
 - b. Check for burned or damaged relay case.
2. **Testing Relays.**

NOTE

When testing relays, always refer to the circuit diagram printed or stamped on relay case.

- a. Using a multimeter, check for continuity across relay coil.
- b. Using a multimeter, check open or closed contacts within relay.

END OF WORK PACKAGE

GENERAL

1. To ensure machine is ready for operation at all times, it must be lubricated and inspected on a regular basis so that defects may be found before they result in damage, equipment failure or injury.
2. The *KEY* in this work package lists the types, amounts, and temperature ranges of the lubricants required for specified intervals.
3. Lubrication Chart at the end of this work package shows all lubrication points.
4. Table 1 in WP 0023 00 contains systematic instructions on lubrications, inspections, adjustments, and corrections to be performed by Unit Maintenance to keep the machine in good operating condition and ready for its primary mission.
5. For information on Corrosion Prevention and Control (CPC), refer to WP 0001 00.

EXPLANATION OF TABLE ENTRIES

1. **Item Number (Item No.) Column.** Numbers in this column are for reference. When completing DA Form 2404 or DA Form 5988-E (*Equipment Inspection and Maintenance Worksheet*), include the item number for the check/service indicating a fault. Item numbers also appear in the order you must perform checks and services for the interval listed.
2. **Interval Column.** This column tells you when you must perform the procedure in the procedure column. Intervals are based on calendar dates or hours. If both calendar dates and hours are provided, perform check/service at whichever interval comes first.
 - a. *Hours* procedures must be done at hour interval indicated.
 - b. *Semiannual* procedures must be done once every six months.
 - c. *Annual* procedures must be done once each year.
3. **Man-Hours Column.** This column indicates man-hours required to complete prescribed lubrication service.
4. **Item to Check/Service Column.** This column identifies the item to be checked or serviced.

NOTE

The WARNINGS and CAUTIONS appearing in your PMCS table should always be observed. WARNINGS and CAUTIONS appear before applicable procedures. These WARNINGS and CAUTIONS must be observed to prevent serious injury to yourself and others or to prevent the equipment from being damaged.

5. **Procedure Column.** This column gives the procedure you must perform to check or service the item listed in the Item to Check/Service column, to know if the equipment is ready or available for its intended mission or for operation. You must perform the procedure at the time stated in the interval column.
6. **Not Fully Mission Capable If: Column.** Information in this column tells you what fault will keep your equipment from being capable of performing its primary mission. If you perform check/service procedures that show faults listed in this column, the equipment is not mission-capable. Follow standard operating procedures for maintaining the equipment or reporting equipment failure.

GENERAL LUBRICATION PROCEDURES**NOTE**

- Lubrication instructions contained in this PMCS are mandatory.
 - Refer to TM 5-3805-261-10 for Operator Maintenance level lubrication.
 - Dashed leader lines used in illustrations of lubrication points indicate that lubrication is required on both sides of the equipment.
1. Recommended intervals are based on normal conditions of operation, temperature, and humidity. When operating under extreme conditions, such as high or low temperatures or exposure to sand or dust, lubricants should always be changed more frequently. Lubricants that have become contaminated will be changed regardless of interval. When in doubt, notify your supervisor.

**WARNING**

When servicing this machine, performing maintenance, or disposing of materials such as engine coolant, hydraulic fluid, lubricants, battery acids or batteries, and CARC paint, consult your unit/local hazardous waste disposal center or safety office for local regulatory guidance. If further information is needed, please contact The Army Environmental Hotline at 1-800-872-3845.

2. Ensure that all fluids drained as a result of lubrication or maintenance are collected in a suitable container and disposed of in accordance with local policy and ordinances. Clean up any spills immediately.
3. Keep all lubricants in a closed container and store in a clean, dry place away from extreme heat. Keep container covers clean and do not allow dust, dirt or other foreign material to mix with lubricants. Keep all lubrication equipment clean and ready for use.
4. Maintain a good record of all lubrication performed and report any problem noted during lubrication. Refer to PAM 738-750 for maintenance forms and procedures to record and report any findings.

Solvent cleaning compound MIL-PRF-680 Type III is an environmentally compliant and low toxic material. However, it may be irritating to the eyes and skin. Use protective gloves and goggles. Use in well-ventilated areas. Keep away from open flames and other sources of ignition.

5. Keep all external parts of equipment not requiring lubrication free of lubricants. Before lubrication, wipe lubrication fittings with a clean rag (Item 35, WP 0349 00) and solvent cleaning compound (Item 8, WP 0349 00). After lubrication, wipe off excess oil or grease to prevent accumulation of foreign matter.
6. Refer to FM 9-207 for lubrication instructions in cold weather.
7. Refer to AR 70-12 for use of standardized fuels and lubricants.
8. Engine, transmission, and hydraulic system oil filters shall be changed when:
 - a. they are known to be contaminated or clogged;
 - b. at prescribed hardtime intervals.

GENERAL LUBRICATION PROCEDURES - CONTINUED

9. For equipment under manufacturer's warranty, hardtime oil service intervals shall be followed. Intervals shall be shortened if lubricants are known to be contaminated or if operation is under adverse conditions (i.e., longer-than-usual operating hours, extended idling periods or extreme dust).

GENERAL PMCS PROCEDURES

1. Always perform PMCS in the same order so it gets to be a habit. Once you've had some practice, you'll spot anything wrong in a hurry. If any deficiency is discovered, perform the appropriate troubleshooting task in Chapter 2 of this manual. If any component or system is not serviceable, or if the given service does not correct the deficiency, notify your supervisor.
2. Before performing preventive maintenance, read all the checks required for the applicable interval and prepare all tools needed to make all checks. Have several clean rags (Item 35, WP 0349 00) handy. Perform ALL inspections at the applicable interval.
 - a. **Keep It Clean.** Dirt, grease, oil, and debris get in the way and may cover up a serious problem. Clean as you work and as needed. Use detergent (Item 11, WP 0349 00) and water when you clean.
 - b. **Rust and Corrosion.** Check metal parts for rust, and corrosion. If any bare metal or corrosion exists, clean and apply a light coat of lubricating oil (Item 26, 27, or 28, WP 0349 00). Report it to your supervisor.
 - c. **Bolts, Nuts, and Screws.** Check bolts, nuts, and screws for obvious looseness, missing, bent or broken condition. You can't try them all with a tool, but look for chipped paint, bare metal or rust around bolt heads. If you find one you think is loose, tighten it.
 - d. **Welds.** Look for loose or chipped paint, rust, or gaps where parts are welded together. If you find a bad weld, report it to your supervisor.
 - e. **Electric Wires and Connectors.** Look for cracked or broken insulation, bare wires, and loose or broken connectors. Tighten loose connectors and ensure that the wires are in good condition.
 - f. **Hydraulic Hoses and Lines.** Look for wear, damage, and signs of leaks. Ensure that clamps and fittings are tight. Wet spots indicate leaks, but a stain around a fitting or connector can also mean a leak. If a leak comes from a loose fitting or connector, tighten it. If something is broken or worn out, correct it if authorized by the Maintenance Allocation Chart (WP 0348 00). If not authorized, notify your supervisor.
 - g. **Fluid Leakage.** It is necessary for you to know how fluid leakage affects the status of your machine. The following are definitions of the types/classes of leakage you need to know to be able to determine the status of your machine. Learn and be familiar with them, and remember - when in doubt, notify your supervisor.

Leakage Definitions for PMCS

Class I	Seepage of fluid (as indicated by wetness or discoloration) not great enough to form drops.
Class II	Leakage of fluid great enough to form drops, but not enough to cause drops to drip from item being checked/inspected.
Class III	Leakage of fluid great enough to form drops that fall from item being checked/inspected.

CAUTION

Operation is allowable with Class I and Class II leakage. WHEN IN DOUBT, NOTIFY YOUR SUPERVISOR. When operating with Class I or Class II leaks, check fluid levels more frequently. Class III leaks must be reported immediately to your supervisor. Failure to do this will result in damage to vehicle and/or components.

PMCS INITIAL SETUP

1. **General.** This work package lists tools, materials, and personnel required for PMCS and lubrication.
2. **Tools (WP 0348 00).**
 - a. Common no. 1 shop set
 - b. General mechanic's tool kit
3. **Materials (WP 0349 00).**
 - a. Antifreeze
 - b. Cleaning compound, solvent
 - c. Cloth, abrasive, emery, fine
 - d. Detergent
 - e. Grease, GAA
 - f. Insulating varnish, electrical
 - g. Lubricating oil, OE/HDO 10W/30
 - h. Lubricating oil, OE/HDO 15W/40
 - i. Lubricating oil, OE, HDO 30
 - j. Lubricating oil, OEA
 - k. Lubricating oil, GO 80W/90
 - l. Lubricating oil, GO 75
 - m. Lubricating oil, Molybdenum Disulfide, Silicone
 - n. Rags
4. **Personnel.**
 - a. Driver/Operator
 - b. Unit Maintenance Mechanic

- KEY -

LUBRICANT/ COMPONENT	REFILL CAPACITY	EXPECTED TEMPERATURES*			INTERVALS
		+6°F to +122°F (-14°C to +50°C)	-4°F to +50°F (-20°C to +10°C)	-25°F to +32°F (-4°C to 0°C)	
OE/HDO Lubricating Oil, ICE, Tactical					H - Home S - Semi- annual A - Annual
OEA Lubricating Oil, ICE, Arctic					
Engine Crankcase	5 Gal. (19 L)	See Chart A			
Transmission, Transfer and Differ- ential Housing	24 Gal. (91 L)	See Chart B			
Tandem Drive Housing (Each)	17 Gal. (64 L)	See Chart B			
Hydraulic Reservoir	8 Gal. (30 L)	See Chart C			
GO Lubricating Oil, Gear, Multipurpose					
Circle Drive Housing	2 Gal. (7 L)	All Temperatures			
GAA Grease, Automotive and Artillery					
Hitch Steering Linkage		All Temperatures			
Earth Moving Equipment					
ANTIFREEZE Ethylene Glycol, Inhib- ited, Heavy Duty					
Engine Radiator	10 Gal. (38 L) System Capacity	All Temperatures			
* For arctic operation, refer to FM 9-207.					

Table 1. CHART A—ENGINE

Lubricant	EXPECTED TEMPERATURES																				
	°F	-70	-60	-50	-40	-30	-20	-10	0	+10	+20	+30	+40	+50	+60	+70	+80	+90	+100	+120	
	°C	-57	-51	-46	-40	-34	-29	-23	-18	-12	-7	-1	+4	+10	+16	+21	+27	+32	+38	+49	
OE/HDO	Lubricating Oil, ICE, Tactical																				
OEA	Lubricating Oil, ICE, Arctic																				
OE/HDO 15W/40																					
OE/HDO 5W/40																					
OEA																					

Table 2. CHART B—TRANSMISSION


Lubricant	EXPECTED TEMPERATURES																				
	°F	-70	-60	-50	-40	-30	-20	-10	0	+10	+20	+30	+40	+50	+60	+70	+80	+90	+100	+120	
	°C	-57	-51	-46	-40	-34	-29	-23	-18	-12	-7	-1	+4	+10	+16	+21	+27	+32	+38	+49	
OE/HDO	Lubricating Oil, ICE, Tactical																				
OEA	Lubricating Oil, ICE, Arctic																				
OE/HDO 40																					
OE/HDO 30																					
OE/HDO 10*																					
OEA *																					

*If OEA lubricant is required to meet the low expected-temperature range, OEA lubricant is to be used in lieu of OE/HDO 10 lubricant for all expected temperatures where OE/HDO 10 is specified.


Table 3. CHART C—HYDRAULIC RESERVOIR

Lubricant	EXPECTED TEMPERATURES																				
	°F	-70	-60	-50	-40	-30	-20	-10	0	+10	+20	+30	+40	+50	+60	+70	+80	+90	+100	+120	
	°C	-57	-51	-46	-40	-34	-29	-23	-18	-12	-7	-1	+4	+10	+16	+21	+27	+32	+38	+49	
OE/HDO	Lubricating Oil, ICE, Tactical																				
OEA	Lubricating Oil, ICE, Arctic																				
5W/40																					
OEA*																					

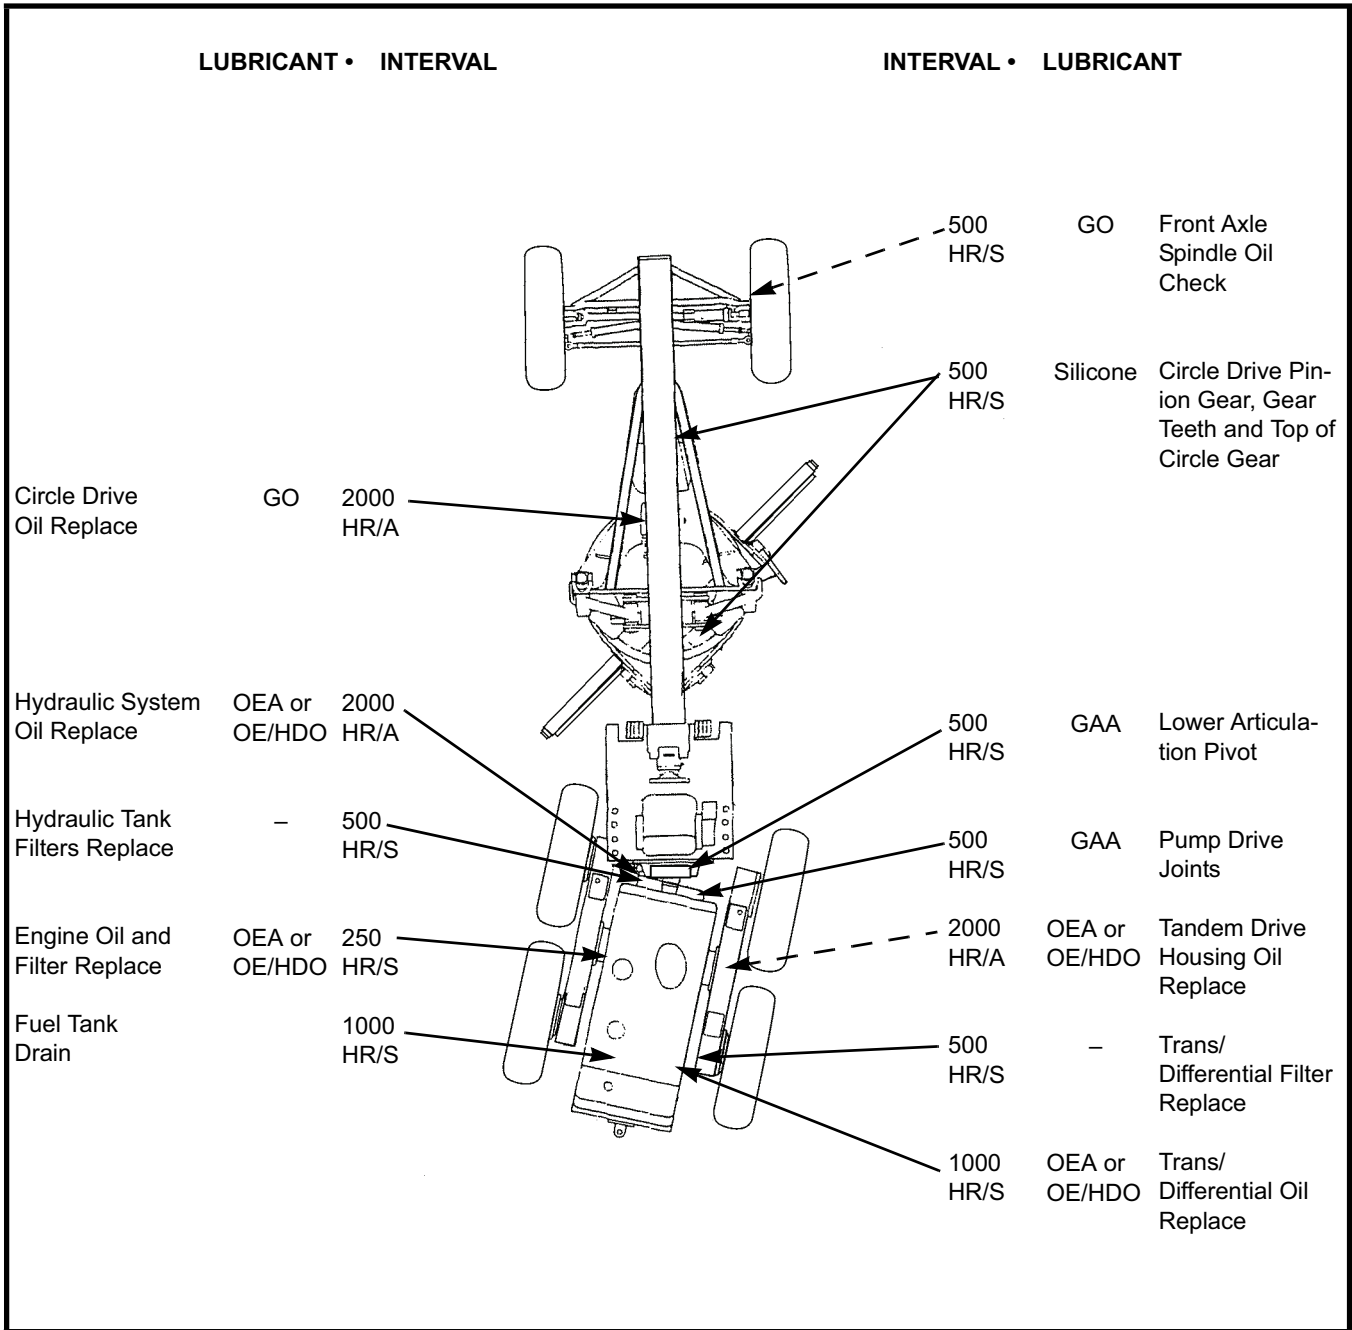*If OEA lubricant is required to meet the low expected-temperature range, OEA lubricant is to be used in lieu of OE/HDO 10 lubricant for all expected temperatures where OE/HDO 10 is specified.





END OF WORK PACKAGE

ITEM NO.	INTERVAL	MAN-HOURS	LOCATION	PROCEDURE	NOT FULLY MISSION CAPABLE IF:
			ITEM TO CHECK/SERVICE		
				NOTE	
				<ul style="list-style-type: none"> • Review all WARNINGS, CAUTIONS, and NOTES before performing PMCS and operating the machine. • Perform all PMCS checks if: <ul style="list-style-type: none"> a. You are the assigned operator but have not operated the machine since the last weekly checks. b. You are operating the machine for the first time. • Unless otherwise indicated, perform PMCS with machine parked on level ground, parking brake applied, transmission in N (Neutral), blade lowered to the ground, wheels blocked, and engine shut down. • If leakage is detected during performance of PMCS, further investigation is required to determine location and cause of leak. 	
					
				WARNING	
				<p>Never disconnect any charging system circuit or battery when engine is running. A spark could cause an explosion from the flammable vapor mixture of hydrogen and oxygen released from the electrolyte in the battery. Failure to follow this warning could result in personnel injury.</p>	
1	50 Hours		Batteries	<ul style="list-style-type: none"> a. Check electrolyte level, specific gravity on maintainable batteries and perform battery load test on both batteries (TM 9-6140-200-14). b. Clean tops of both batteries. 	
2	250 Hours		Belts	Inspect all belts for wear and looseness. Adjust or install new belts as necessary (WP 0061 00).	
3	250 Hours or Semi-Annually	0.5	Engine Oil	Drain and refill engine oil and install new filter (WP 0024 00).	
4	250 Hours or Semi-Annually		Brakes	Adjust service brakes (WP 0313 00).	

**PREVENTIVE MAINTENANCE CHECKS
AND SERVICES (PMCS) PROCEDURES - CONTINUED**

0023 00

ITEM NO.	INTERVAL	MAN-HOURS	LOCATION	PROCEDURE	NOT FULLY MISSION CAPABLE IF:
			ITEM TO CHECK/SERVICE		
5	250 Hours or Semi-Annually	1.0	Air Dryer (If Equipped)	Replace desiccant in air dryer (WP 0164 00).	
6	500 Hours or Semi-Annually		Crankcase Breather	Clean breather (WP 0032 00).	
7	500 Hours or Semi-Annually		Hydraulic System	<p style="text-align: center;">WARNING</p> <p>Hot oil can cause burns. The hydraulic tank is hot and under pressure when at operating temperature. Remove the fill cap ONLY when the engine is stopped and the cap is cool enough to touch with your hand. Remove the fill cap slowly to relieve pressure.</p> <p>a. Inspect tank for leaks, broken fittings, cracked welds, or missing parts. Repair or replace as necessary (WP 0339 00).</p> <p>b. Clean fill strainer (WP 0216 00).</p> <p>c. Change hydraulic tank filters (WP 0231 00).</p>	
8	500 Hours or Semi-Annually	0.5	Transmission/Differential Housing	Change filter and clean strainer. (WP 0153 00).	
9	500 Hours or Semi-Annually		Fuel System	<div style="display: flex; justify-content: space-around; align-items: center;">  <p style="font-weight: bold; font-size: 1.2em;">WARNING</p>  </div> <ul style="list-style-type: none"> Do NOT perform fuel system checks, inspections or maintenance while smoking or near fire, flames or sparks. Fuel may ignite, causing damage to machine and injury or death. Operating personnel must wear fuel-resistant gloves and eye protection when handling fuels. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing. <p>a. Disassemble, clean and inspect fuel fill cap assembly (WP 0043 00).</p> <p>b. Clean and inspect fill tube screen (WP 0043 00).</p> <p>c. Disassemble, clean and inspect primary fuel filter assembly (WP 0045 00).</p>	

**PREVENTIVE MAINTENANCE CHECKS
AND SERVICES (PMCS) PROCEDURES - CONTINUED**



0023 00

ITEM NO.	INTERVAL	MAN-HOURS	LOCATION	PROCEDURE	NOT FULLY MISSION CAPABLE IF:
			ITEM TO CHECK/SERVICE		
9 (Con't) 10	500 Hours or Semi-Annually		Fuel/Water Separator (If Equipped)	<p>d. Replace secondary filter (WP 0047 00).</p> <p>Inspect fuel/water separator and install new element if water saturation level is at top of element.</p> <p>a. Close fuel supply valve (5).</p> <p>b. Drain fuel/water separator into container by opening vent valve (2) and drain valve (4).</p> <p>c. Disconnect retaining clamp (3) remove element (1). Discard element.</p> <p>d. Clean sealing surfaces and install new element.</p> <p>e. Install retaining clamp (3).</p> <p>f. Close vent valve (2) and drain valve (4).</p> <p>g. Open fuel supply valve (5).</p> <p>h. Bleed fuel lines (WP 0035 00).</p>	

397-1091


**PREVENTIVE MAINTENANCE CHECKS
AND SERVICES (PMCS) PROCEDURES - CONTINUED**

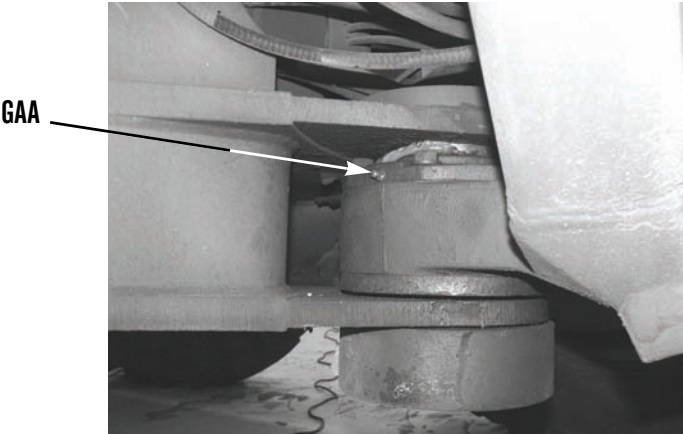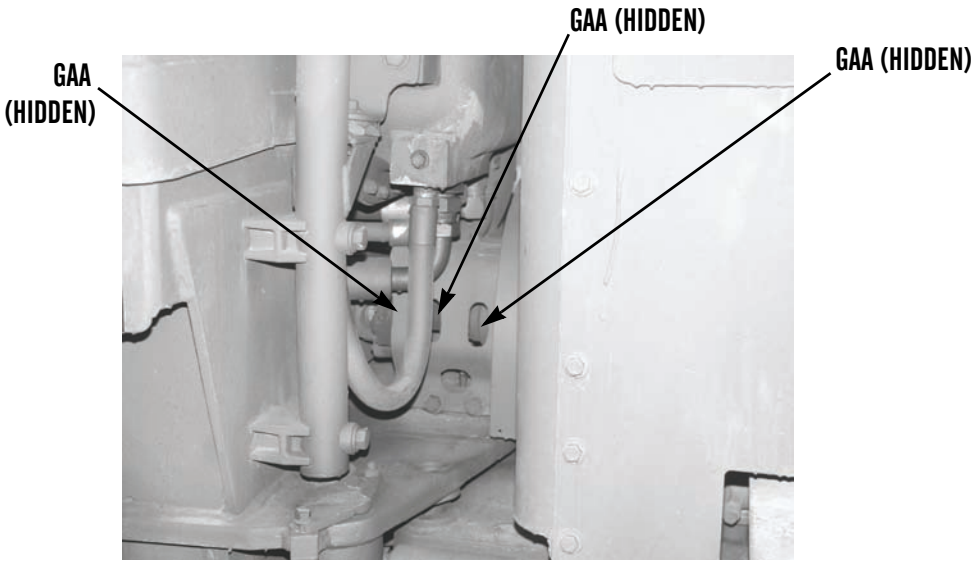0023 00

ITEM NO.	INTERVAL	MAN-HOURS	LOCATION	PROCEDURE	NOT FULLY MISSION CAPABLE IF:
			ITEM TO CHECK/SERVICE		
11	500 Hours or Semi-Annually	0.2	Lower Articulation Pivot	Apply GAA grease (Item 18, WP 0349 00) to lower articulation pivot grease fitting.	
 <p style="text-align: right; margin-right: 100px;">397-1092</p>					
12	500 Hours or Semi-Annually	0.2	Pump Drive Joints	Apply GAA grease (Item 18, WP 0349 00) to three hydraulic pump driveshaft grease fittings.	
 <p style="text-align: right; margin-right: 100px;">397-1093</p>					

**PREVENTIVE MAINTENANCE CHECKS
AND SERVICES (PMCS) PROCEDURES - CONTINUED**

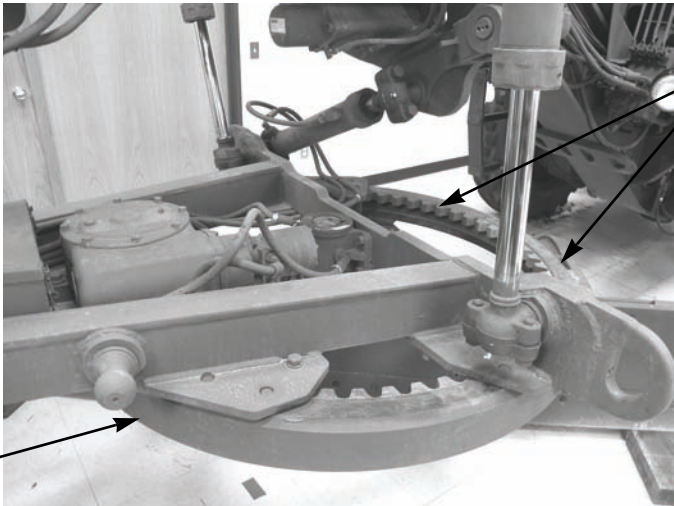
0023 00

ITEM NO.	INTERVAL	MAN-HOURS	LOCATION	PROCEDURE	NOT FULLY MISSION CAPABLE IF:
			ITEM TO CHECK/SERVICE		
13	500 Hours or Semi-Annually	0.2	Circle Drive	Apply lubricant (Item 25, WP 0349 00) to pinion gear, circle gear teeth and top of circle gear.	
 <p style="text-align: right;">LUBRICANT</p> <p style="text-align: left;">LUBRICANT</p> <p style="text-align: right;">397-1097</p>					
14	500 Hours or Semi-Annually		Air Cleaner	<p>a. Replace or clean elements as necessary (WP 0037 00).</p> <p>b. Inspect and reset indicator (WP 0251 00).</p>	
15	500 Hours or Semi-Annually		Fuel Injection Lines And Fittings	<p>Inspect fuel injection pump lines and fittings for looseness and leaks. Replace as necessary (WP 0041 00).</p> <p style="text-align: center;">WARNING</p> <p>The cooling system is pressurized. Removal of radiator cap when machine is at normal operating temperature may result in personal injury. Wear proper protection.</p>	
16	500 Hours or Semi-Annually		Cooling Lines And Fittings	<p>Inspect cooling lines, connections, hoses and clamps for looseness, leaks cracks, or wear (WP 0057 00).</p>	
17	500 Hours or Semi-Annually		Alternator	<p>Inspect for loose electrical connections and unusual noise or bearing play. Replace alternator as necessary (WP 0066 00).</p>	


**PREVENTIVE MAINTENANCE CHECKS
AND SERVICES (PMCS) PROCEDURES - CONTINUED**

0023 00

ITEM NO.	INTERVAL	MAN-HOURS	LOCATION	PROCEDURE	NOT FULLY MISSION CAPABLE IF:
			ITEM TO CHECK/SERVICE		
18	500 Hours or Semi-Annually		Starter	Inspect for bad connection, damaged wiring, loose electrical connections or evidence of burning. Replace starting motor assembly as necessary (WP 0067 00).	
19	500 Hours or Semi-Annually		Hydraulic Control Valves	Inspect valves and linkage. Look for bent levers and control arms and worn bushings (WP 0218 00 or WP 0332 00).	
20	500 Hours or Semi-Annually		Tandem Housing	a. Inspect housing (2) for leaks or damage (WP 0310 00). b. Clean both tandem housing breathers (1). (1) Remove breather (1). (2) Clean breather (WP 0020 00). (3) Dry with compressed air. (4) Install breather (1).	

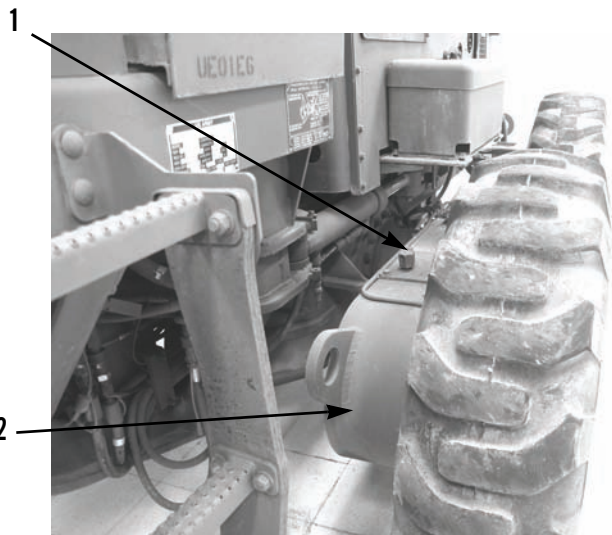

397-1057

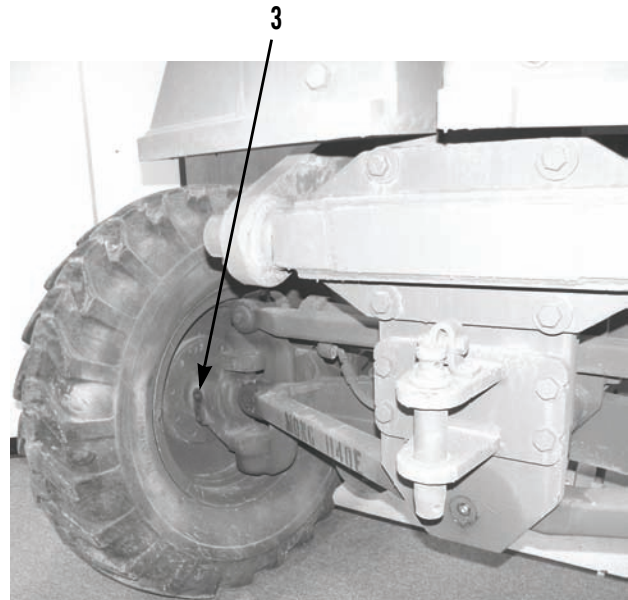

397-1096


**PREVENTIVE MAINTENANCE CHECKS
AND SERVICES (PMCS) PROCEDURES - CONTINUED**

0023 00

ITEM NO.	INTERVAL	MAN-HOURS	LOCATION	PROCEDURE	NOT FULLY MISSION CAPABLE IF:
			ITEM TO CHECK/SERVICE		
21	500 Hours or Semi-Annually	0.5	Front Axle Spindle	Check oil level in both front axle spindles. a. Remove plug (3). b. Oil level should be up to bottom of fill plug opening. c. Add oil as necessary (Item 20 or 21, WP 0349 00). d. Install plug (3).	
22	500 Hours or Semi-Annually		Tires	<p style="text-align: center;">WARNING</p> <ul style="list-style-type: none"> Explosions of air-inflated earth moving tires can be a result of heat-induced gas combustion inside the tires. The heat generated by welding or heating rim components, external fire or excessive use of brakes can result in gaseous combustion. A tire explosion is much more violent than a blowout. The explosion can propel the tire, rim and final drive components as far as 1,500 ft (460 m) or more. Both the force of the explosion and flying debris can cause injury or damage to equipment. All personnel should be aware of this danger and the actions to take to minimize the risk. Improper or misuse of inflation equipment can result in tire blowout or rim failure. a. Check for adequate tread and replace if tread depth is insufficient (WP 0168 00). b. Check for proper inflation of 35 psi (241 kPa) (TM 5-3805-261-10).	
23	1000 Hours or Semi-Annually		ROPS/FOPS	Ensure ROPS/FOPS bolts are tightened to 864 lb-ft (1,171 Nm).	
24	1000 Hours or Semi-Annually	0.5	Transmission and Differential	a. Drain and refill transmission/differential oil and clean screens (WP 0147 00). b. Change transmission breather (WP 0147 00).	
25	2000 Hours or Annually		Valve Lash Adjustment	Adjust valve lash (WP 0274 00).	

**PREVENTIVE MAINTENANCE CHECKS
AND SERVICES (PMCS) PROCEDURES - CONTINUED**

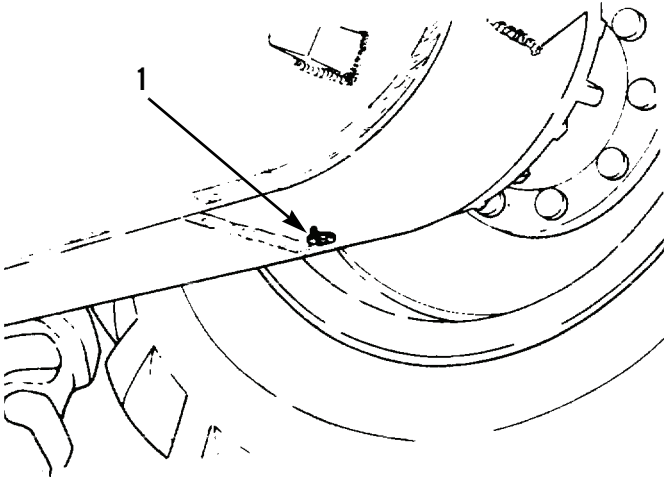0023 00

ITEM NO.	INTERVAL	MAN-HOURS	LOCATION	PROCEDURE	NOT FULLY MISSION CAPABLE IF:
			ITEM TO CHECK/SERVICE		
26	2000 Hours or Annually	0.5	Tandem Drive Housings	Drain and refill both tandem drive housings. a. Remove dipstick (TM 5-3805-261-10). b. Position approved container under right tandem housing. Remove drain plug (1) and allow oil to drain. c. Install drain plug (1) and fill tandem housing with oil (TM 5-3805-261-10). d. Repeat procedure for left tandem housing.	
					
27	2000 Hours or Annually	1.0	Cooling System	Drain, flush, and refill cooling system (WP 0065 00).	
28	2000 Hours or Annually	1.0	Hydraulic Tank	a. Drain and refill hydraulic tank (WP 0216 00). b. Clean filler strainer (WP 0216 00). c. Inspect hydraulic hoses. d. Change filter elements (WP 0231 00).	

397-2480

CHANGING ENGINE OIL**0024 00****THIS WORK PACKAGE COVERS**

Draining, Cleaning and Inspection, Refilling

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Oil, lubricating (Item 26, 27, or 30, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

References - Continued

WP 0025 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side engine door opened (TM 5-3805-261-10)

**WARNING**

- Exercise care when working with hot oil or components saturated with hot oil. Allow to cool before handling. Failure to follow this warning may cause injury to personnel.
- Engine oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

CHANGING ENGINE OIL - CONTINUED

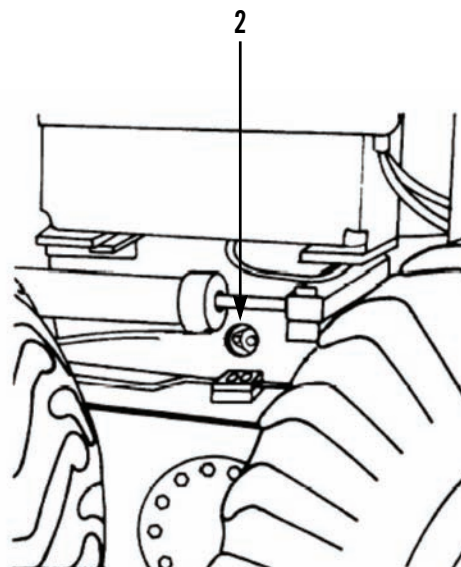
0024 00

DRAINING

1. Position drain pan under drain valve (2).
2. Open valve (2) and allow oil to drain.
3. Close valve (2) when oil is completely drained.
4. Replace oil filter (WP 0025 00).



LEFT SIDE



397-1042

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

REFILLING

1. Remove oil fill cap (1) and fill crankcase with clean oil. See WP 0020 00 for crankcase capacity.
2. Check oil level on ENGINE STOPPED side of dipstick (3).
3. Install fill cap (1).
4. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
5. Check engine oil level on ENGINE RUNNING side of dipstick (3) at engine low idle when engine reaches normal operating temperature.
6. If necessary, remove fill cap (1) and add oil until level is at FULL mark.
7. Install fill cap (1) and shut down engine.
8. Inspect for oil leaks.
9. Close left side engine door (TM 5-3805-261-10).

END OF WORK PACKAGE

OIL FILTER REPLACEMENT

0025 00

THIS WORK PACKAGE COVERS

Removal, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Oil, lubricating (Item 26, 27, or 30, WP 0349 00)

Filter element

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side engine door opened (TM 5-3805-261-10)

Oil drained from engine (WP 0024 00)

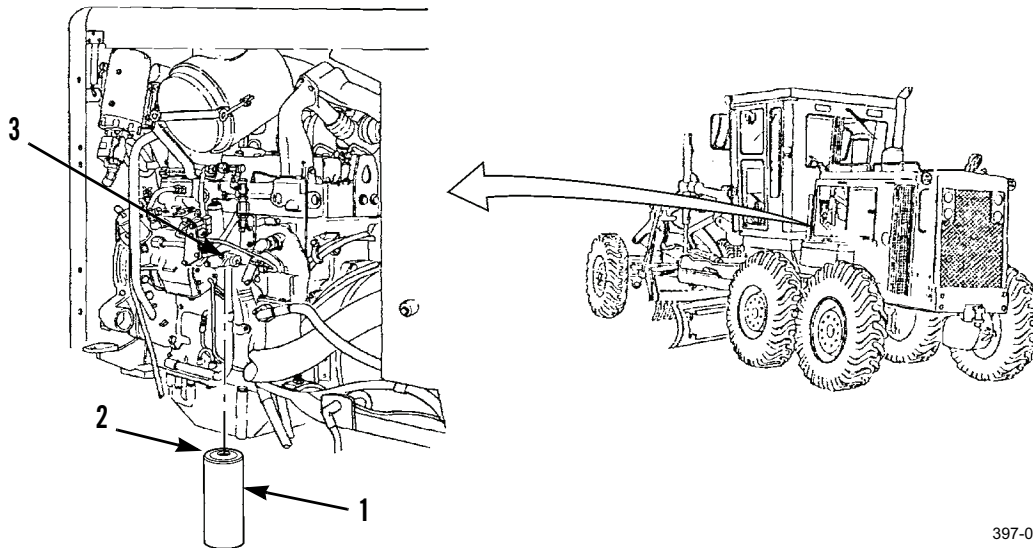
REMOVAL**WARNING**

Exercise care when working with hot oil or components saturated with hot oil. Allow to cool before handling. Failure to follow this warning may result in injury to personnel.

NOTE

Place drain pan under filter element.

Remove and discard filter element (1) from oil filter head (3).



397-086

INSTALLATION

1. Use clean oil to lubricate new filter element (1) seal (2).
2. Install new filter element (1) to head (3). Hand tighten filter element an additional 3/4 turn after filter element makes contact with head.
3. Refill engine oil to proper level (WP 0024 00).
4. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
5. Check for leaks. Stop engine. If leakage is evident, tighten filter element (1).
6. Close left side engine door (TM 5-3805-261-10).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 00348 00)

Materials/Parts

- Cap set, protective (Item 7, WP 0349 00)
- Rag, wiping (Item 35, WP 0349 00)
- Tag, marker (Item 44, WP 0349 00)
- Gasket (4)
- Packing, preformed (2)
- Seal (2)

References

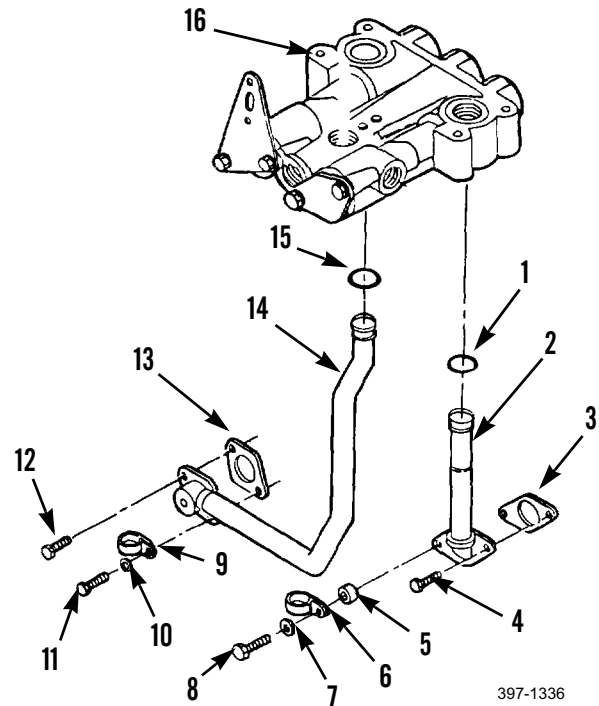
WP 0020 00

Equipment Conditions

- Machine parked on level ground (TM 5-3805-261-10)
- Parking/emergency brake applied (TM 5-3805-261-10)
- Implements lowered to ground (TM 5-3805-261-10)
- Engine off (TM 5-3805-261-10)
- Battery disconnect switch in OFF position (TM 5-3805-261-10)
- Oil drained (WP 0024 00)
- Oil filter removed (WP 0025 00)

REMOVAL


1. Remove bolts (4 and 8), washer (7), clamp (6), washer (5), tube assembly (2), gasket (3), and seal (1) from oil filter head (16). Discard gasket and seal.
2. Remove bolts (11 and 12), washer (10), clamp (9), tube (14), gasket (13), and seal (15). Discard gasket and seal.




397-1336

REMOVAL - CONTINUED

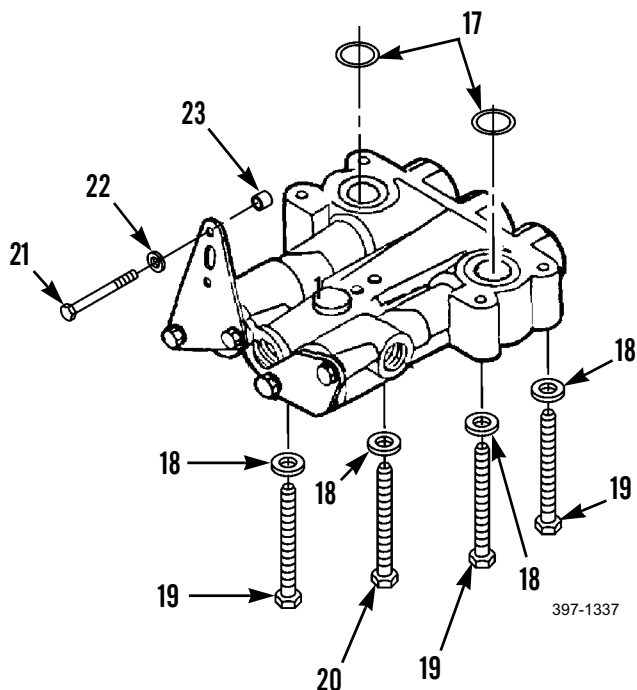3. Remove bolt (21), washer (22), and spacer (23).
4. Remove three bolts (19), washers (18), bolt (20), and washer (18).
5. Remove and discard two preformed packings (17).



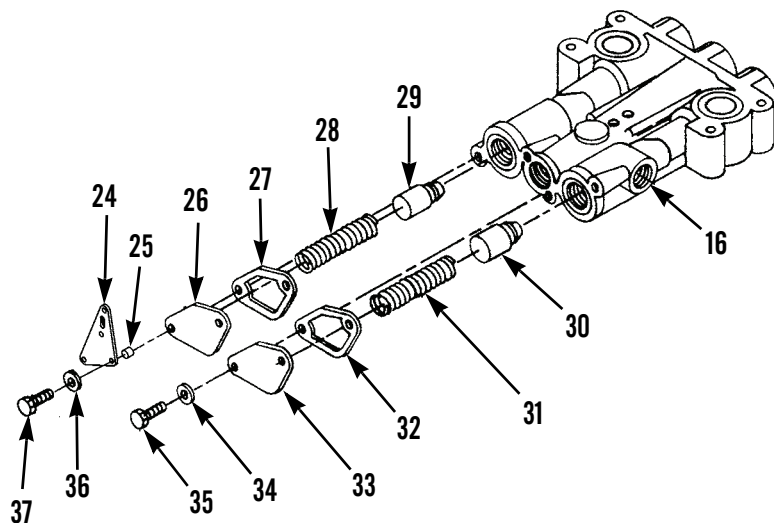6. Remove two bolts (37), washers (36), bracket (24), and two spacers (25) from oil filter head (16).
7. Remove cover (26), gasket (27), spring (28), and plunger (29). Discard gasket.
8. Remove two bolts (35), washers (34), cover (33), gasket (32), spring (31), and plunger (30). Discard gasket.




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

OIL FILTER HEAD REPLACEMENT - CONTINUED**0026 00****INSTALLATION**

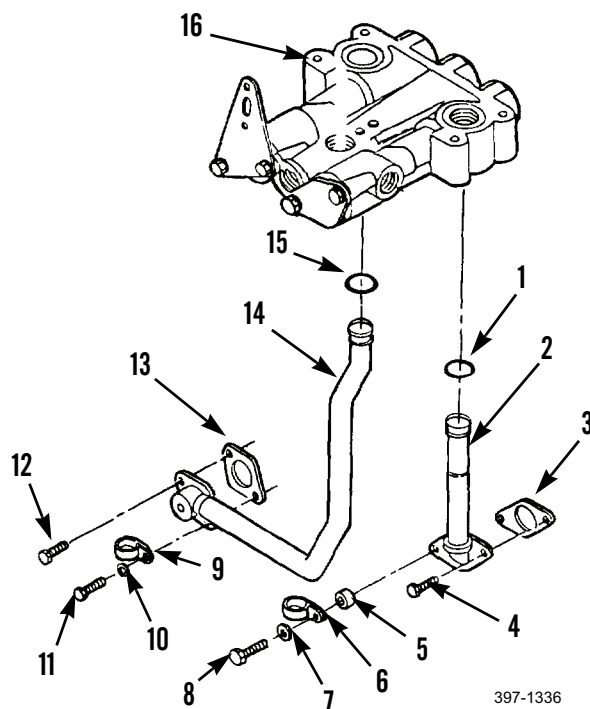1. Install plunger (30), spring (31), new gasket (32), cover (33), two washers (34), and bolts (35) on oil filter head (16).
2. Install plunger (29), spring (28), new gasket (27), cover (26), two spacers (25), bracket (24), two washers (36), and bolts (37) on oil filter head (16).
3. Install two new preformed packings (17).
4. Install three bolts (19), washers (18), bolt (20), and washer (18).
5. Install bolt (21), washer (22), and spacer (23).
6. Install new seal (15), new gasket (13), tube (14), clamp (9), washer (10), and bolts (11 and 12).
7. Install new seal (1), new gasket (3), tube assembly (2), washer (5), clamp (6), washer (7), and bolts (4 and 8).



8. Install oil filter (WP 0025 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Sleeve

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air tanks drained (TM 5-3805-261-10)

Left side engine panel removed (WP 0182 00)

REMOVAL

1. Remove oil level gauge (1) from left side of engine.

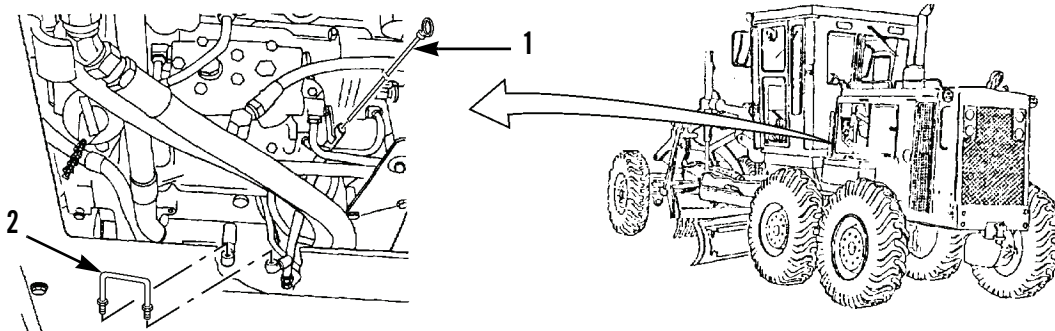
CAUTION

Cap all hose and tube ends and plug all open oil ports to prevent contamination.

NOTE

Tag all hose and tube assemblies before disconnecting to aid in installation.


2. Loosen two nuts on tube assembly (2) at lower-left side of engine and remove.



397-088

REMOVAL - CONTINUED

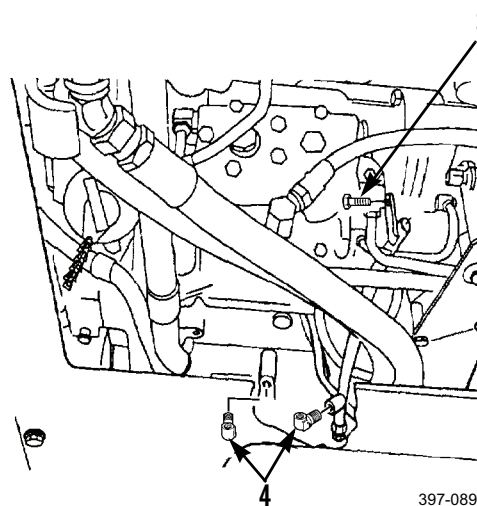3. Remove two elbows (4) and bolt (3).



4. Disconnect air line (9).
5. Remove bolt (10) that secures clamp on air line (9).
6. Loosen nut (6) and remove tube assembly (5).

NOTE

Remove nut and sleeve only if inspection indicates leakage around sleeve.

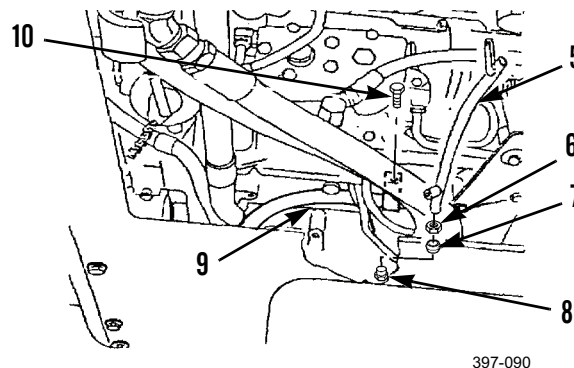
7. Remove nut (6) and cut and discard sleeve (7) from tube assembly (5).
8. Remove connector (8) from cylinder block.

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

1. Install connector (8) in cylinder block on lower left side of engine.
2. Install new sleeve (7) and nut (6) on tube assembly (5).
3. Position tube assembly (5) on left side of engine, install bolt (3), and tighten nut (6).
4. Install bolt (10) to secure clamp on air line (9).
5. Connect air line (9).
6. Install two elbows (4).



INSTALLATION - CONTINUED

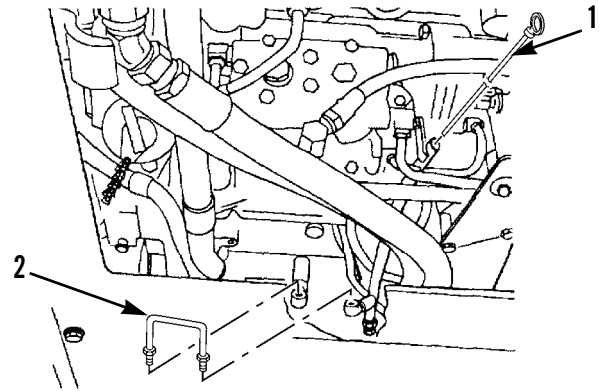7. Install tube assembly (2).
8. Install oil level gauge (1).



397-2016

9. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
10. Check tube assemblies (2 and 5) in lower-left side of engine for leaks. Stop engine.
11. Install left side engine panel (WP 0182 00).

END OF WORK PACKAGE

OIL FILLER AND CAP REPLACEMENT

0028 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Gasket

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

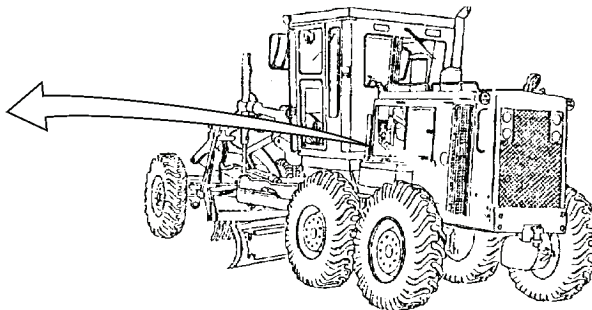
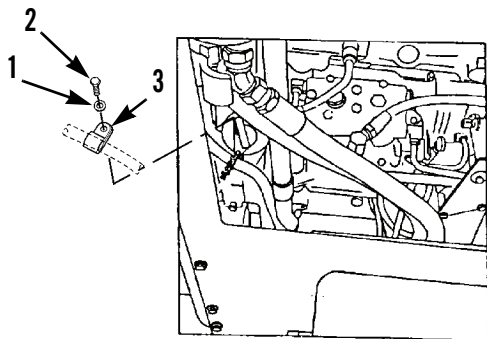
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side engine door opened (TM 5-3805-261-10)

REMOVAL


1. Remove bolt (2), washer (1), and clip (3) from left side of engine.



397-091


OIL FILLER AND CAP REPLACEMENT - CONTINUED**0028 00****REMOVAL - CONTINUED**

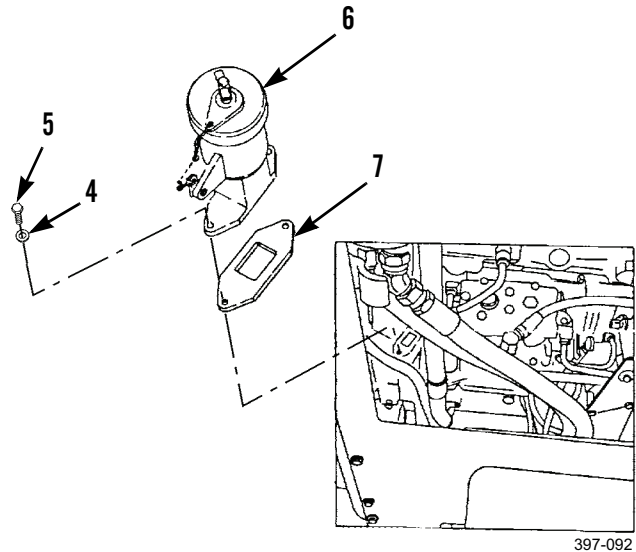2. Remove two bolts (5), washers (4), and filler tube and cap assembly (6) from engine front cover.
3. Remove and discard gasket (7).

**NOTE**

Remove rivet and washer only if inspection indicates replacement is necessary.

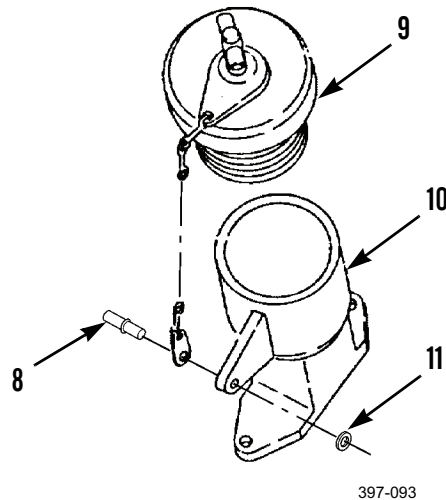
4. If necessary, remove rivet (8) and washer (11). Discard rivet.
5. Remove cap assembly (9) from filler tube (10).

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

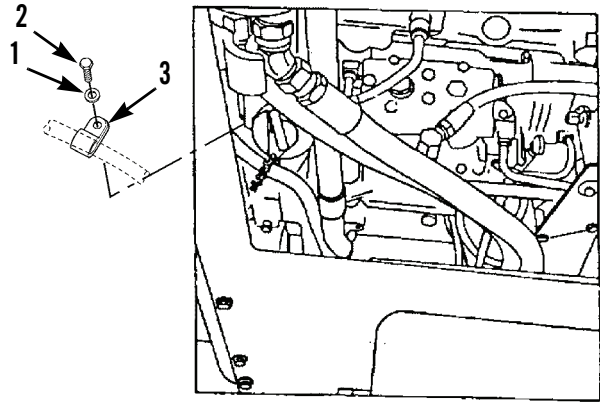1. Install cap assembly (9) in filler tube (10).
2. If removed, install washer (11) and new rivet (8).
3. Position new gasket (7) and filler tube and cap assembly (6) on left side of engine.
4. Install two washers (4) and bolts (5).
5. Install clip (3).
6. Install washer (1) and bolt (2).



397-2017

7. Close left side engine door (TM 5-3805-261-10).

END OF WORK PACKAGE

ENGINE OIL COOLER REPLACEMENT

0029 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Antifreeze (Item 5, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Gasket (3)

References

WP 0020 00

WP 0065 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

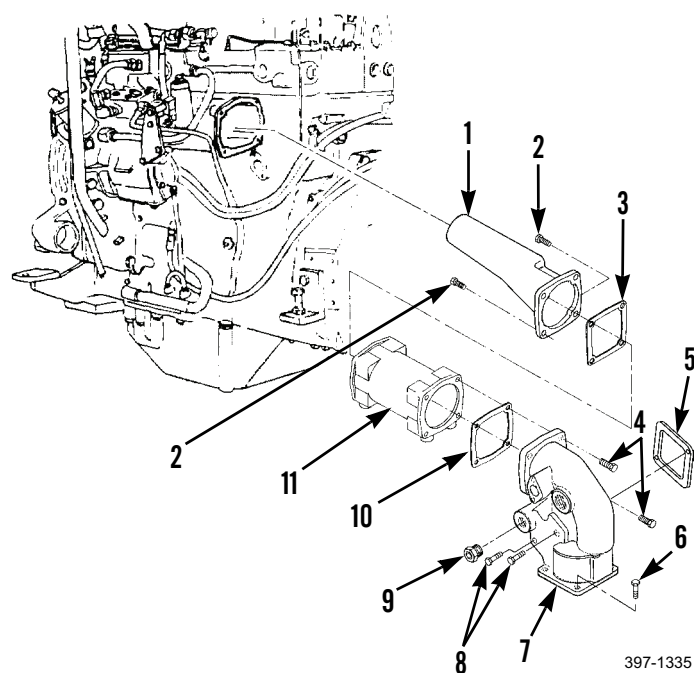
Battery disconnect switch in OFF position (TM 5-3805-261-10)

Engine oil filter head removed (WP 0026 00)

Left side engine panel removed (WP 0182 00)

REMOVAL

1. Remove plug (9) on left side of engine.
2. Drain coolant from radiator (WP 0065 00).
3. Install plug (9) after coolant is completely drained.
4. Remove four bolts (2) from coolant tube (1).
5. Remove four bolts (4).
6. Remove two bolts (8) and four bolts (6) from transmission oil cooler housing (7) to remove core assembly (11).
7. Remove and discard gasket (5).
8. Remove core assembly (11) and gaskets (3 and 10). Discard gaskets.




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

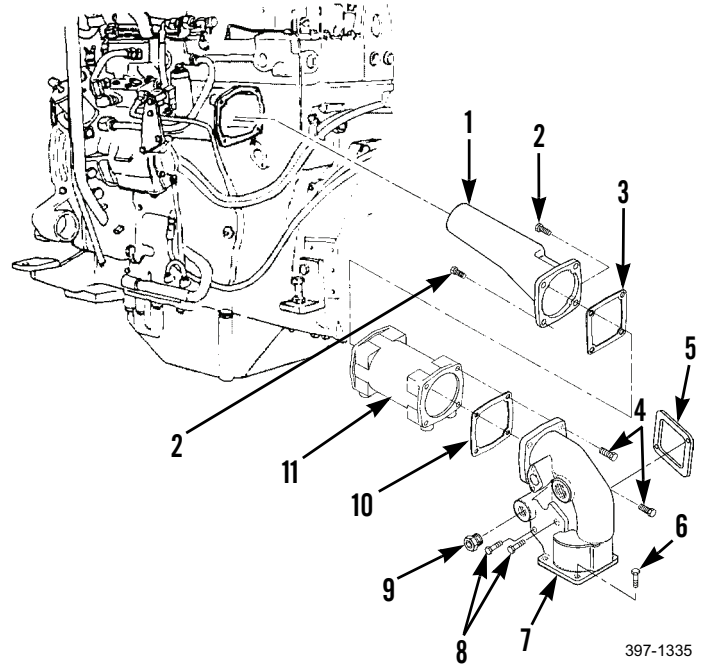1. Position new gaskets (10 and 3) and core assembly (11) between transmission oil cooler housing (7) and coolant tube (1).
2. Install eight bolts (4 and 2).
3. Install new gasket (5).
4. Install two bolts (8) and four bolts (6) on transmission oil cooler housing (7).



5. Fill radiator with coolant to proper level (WP 0065 00).
6. Install engine oil filter head (WP 0026 00).
7. Install left side engine panel (WP 0182 00).

END OF WORK PACKAGE

ENGINE OIL SAMPLING VALVE AND LINE REPLACEMENT

0030 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Locknut

Packing, preformed

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

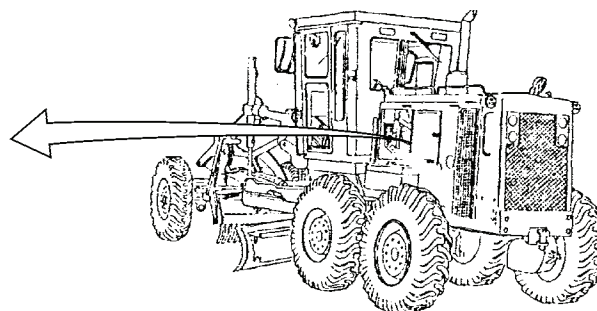
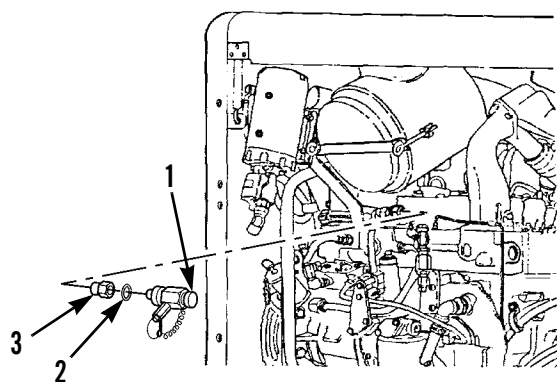
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side engine door opened (TM 5-3805-261-10)

REMOVAL

1. Remove valve (1), preformed packing (2), and adapter (3) as an assembly. Discard preformed packing.




397-094

REMOVAL - CONTINUED**CAUTION**


Cap all hose and tube ends and plug all open oil ports to prevent contamination.

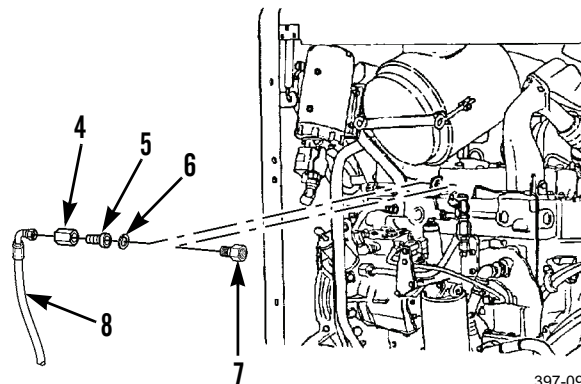- Remove reducer (5), locknut (6), and connector (7) from hose assembly (8). Discard locknut.

**NOTE**

Do not remove nut (4) unless inspection shows need for replacement.

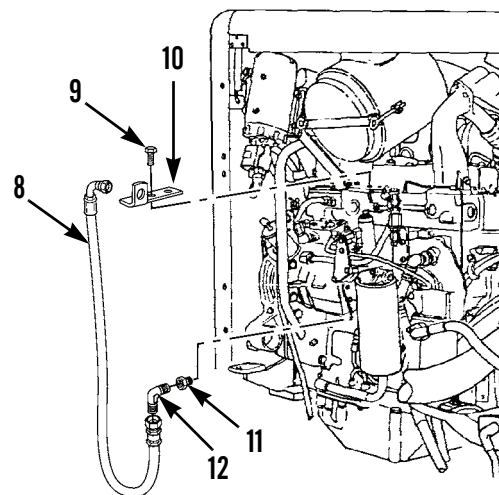
- Remove hose assembly (8), elbow (12), and bushing (11) from bottom-left side of engine.
- Remove two bolts (9) and bracket (10) from top-left side of engine.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

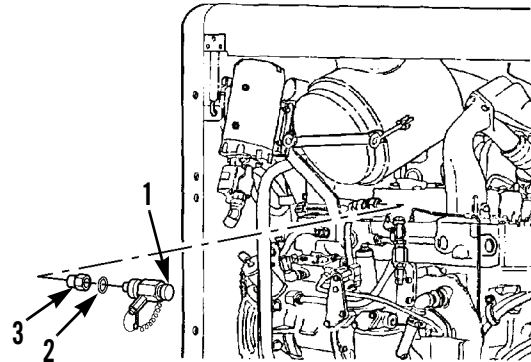1. Install bracket (10) and two bolts (9) to top-left side of engine.
2. Install bushing (11), elbow (12), and hose assembly (8) to bottom-left side of engine.
3. Install connector (7), new locknut (6), and reducer (5) to top-left side of engine.
4. Connect hose assembly (8) with nut (4) to reducer (5).
5. Install adapter (3), new preformed packing (2), and valve (1).



397-2018

6. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
7. Check for leaks. Stop engine.
8. Close left side engine door (TM 5-3805-261-10).

END OF WORK PACKAGE

VALVE COVER REPLACEMENT

0031 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 2 (Item 76, WP 0348 00)

Wrench, torque (Item 95, WP 0348 00)

Materials/Parts

Gasket cement (Item 16, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Gasket

Lockwasher (11)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Valve cover breather removed (WP 0032 00)

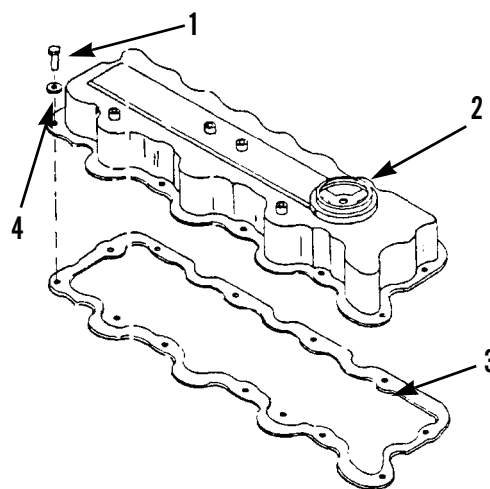
REMOVAL

1. Remove 11 bolts (1) and lockwashers (4) from top of engine. Discard lockwashers.

CAUTION

Do not pry valve cover to remove. Prying valve cover can result in damage to valve cover and cylinder head.

2. Remove valve cover (2) and gasket (3) from cylinder head. Discard gasket.




397-1328

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

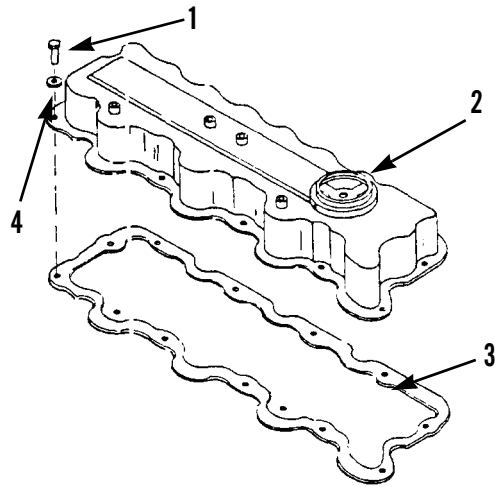1. Position new gasket (3) and valve cover (2) on cylinder head. Apply gasket cement to lip of valve cover where gasket makes contact. Install gasket.
2. Install 11 new lockwashers (4) and bolts (1). Tighten bolts to 96 lb-in. (11 Nm).



397-1328

3. Install valve cover breather (WP 0032 00).

END OF WORK PACKAGE

VALVE COVER BREATHER REPLACEMENT

0032 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 2 (Item 76, WP 0348 00)

Wrench, torque (Item 95, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Packing, preformed

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

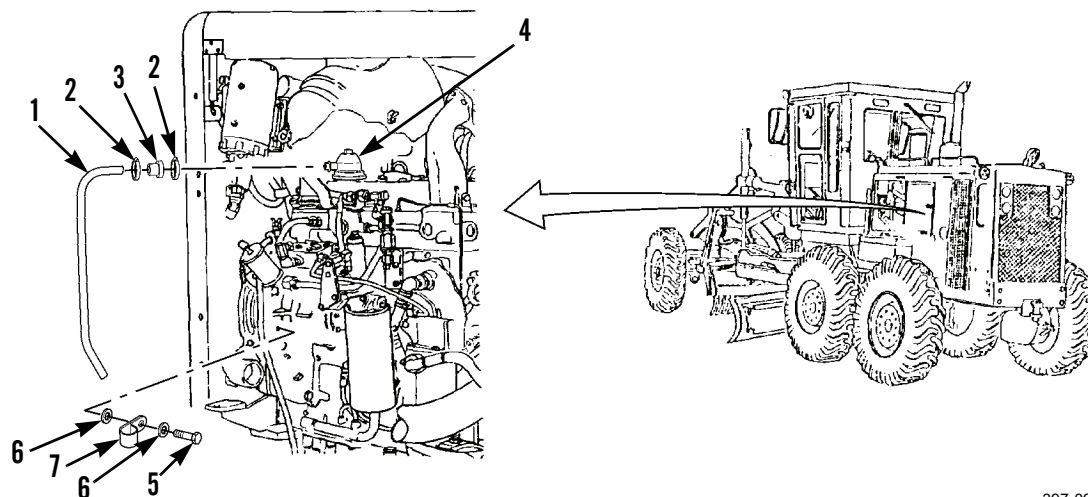
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side engine door opened (TM 5-3805-261-10)

REMOVAL

1. Remove bolt (5), two washers (6), and clip (7) from left side of engine.
2. Loosen two clamps (2) from top of engine.
3. Remove tube (1) from hose (3).
4. Remove two clamps (2) and hose (3) from breather (4).




397-097

VALVE COVER BREATHER REPLACEMENT - CONTINUED

0032 00

REMOVAL - CONTINUED

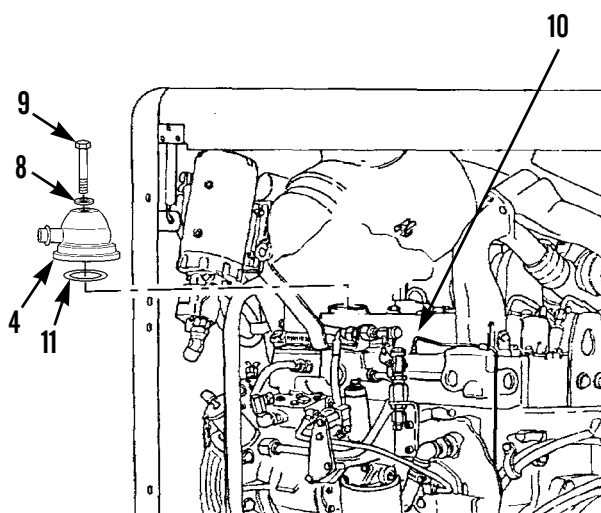- Remove bolt (9), washer (8), breather (4), and preformed packing (11) from valve cover (10). Discard preformed packing.



397-098

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

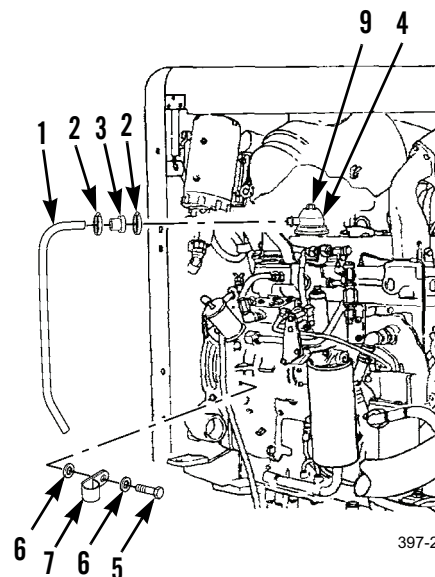
Do not tighten bolt.

- Install new preformed packing (11), breather (4), washer (8), and bolt (9) on valve cover (10).

NOTE

Do not tighten clamps.

- Install two clamps (2) and hose (3) on breather (4).
- Install tube (1) in hose (3).
- Install clip (7), two washers (6), and bolt (5) on left side of engine.
- Tighten two clamps (2).
- Tighten bolt (9) to 144 lb-in. (16 Nm).



397-2019

- Close left side engine door (TM 5-3805-261-10).

END OF WORK PACKAGE

TURBOCHARGER OIL LINES REPLACEMENT

0033 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Lubricating oil (Item 27, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket (2)

Packing, preformed (3)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)


Right side engine panel removed (WP 0182 00)

**WARNING**

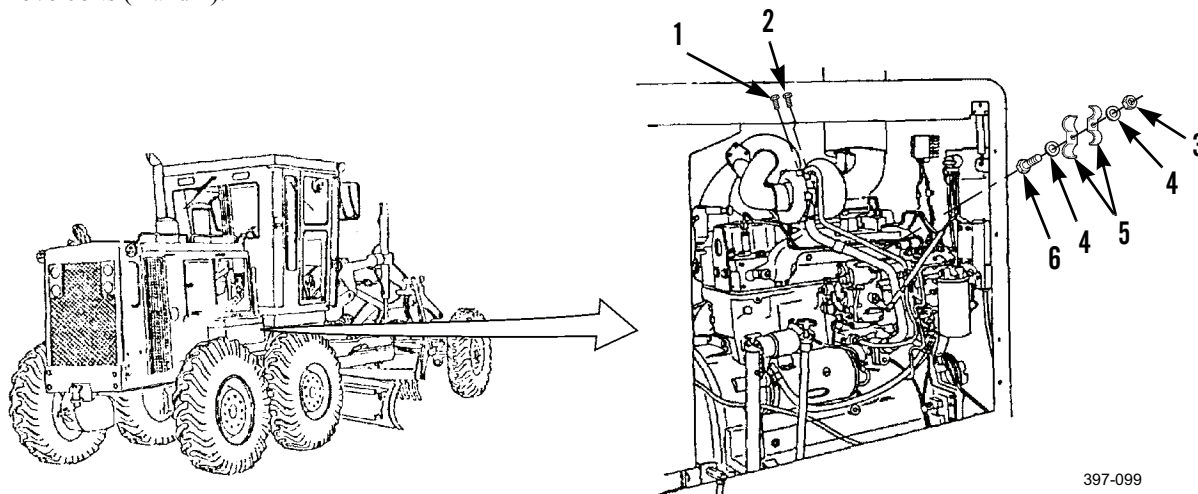Exercise care when working with hot components. Allow to cool before handling. Failure to follow this warning may result in injury to personnel.

REMOVAL

1. Remove two nuts (3), four washers (4), two bolts (6), and four clips (5) from right side of engine.
2. Remove bolts (1 and 2).



397-099

REMOVAL - CONTINUED

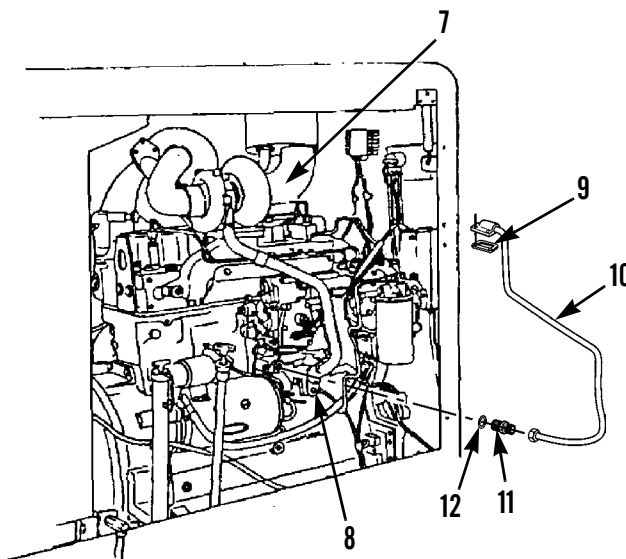
CAUTION

Cap all tube ends and plug all open oil ports to prevent contamination.

NOTE


Tag all tubes before disconnecting to aid in installation.

3. Disconnect tube assembly (10) nut from adapter (11) under injection pump support (8).
4. Remove tube assembly (10) and gasket (9). Discard gasket.
5. Remove adapter (11) and preformed packing (12) from injection pump support (8). Discard preformed packing.



397-100

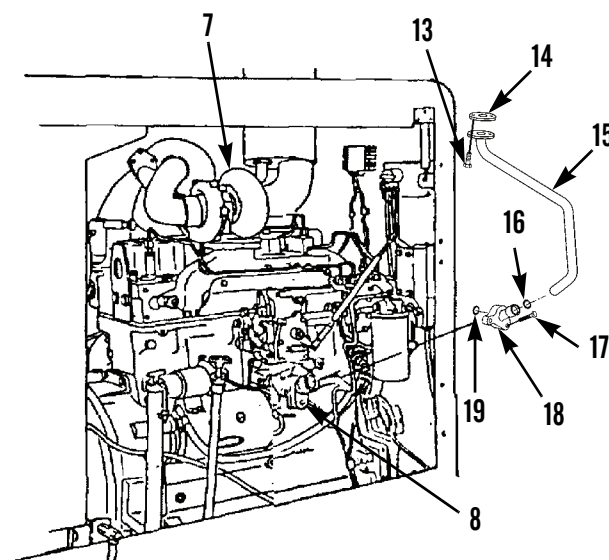6. Remove two bolts (13) from under turbocharger (7).
7. Remove bolt (17) and elbow (18) from injection pump support (8).
8. Remove and discard preformed packing (19).
9. Remove tube assembly (15) and preformed packing (16) from elbow (18). Discard preformed packing.
10. Remove and discard gasket (14).



397-102

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

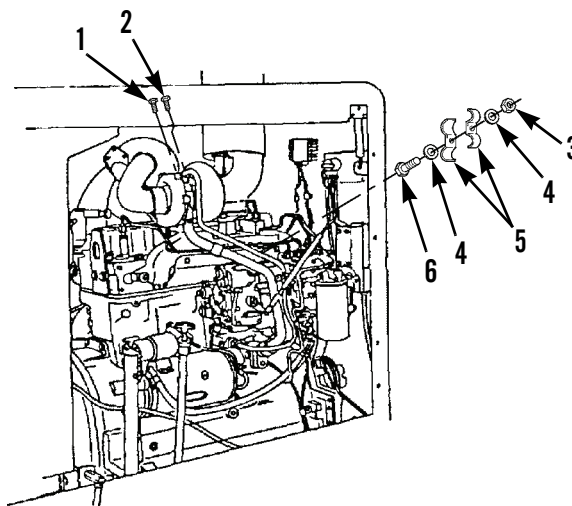
Lubricate all preformed packings with clean oil before installing.

1. Install new preformed packing (19), elbow (18), and bolt (17) in injection pump support (8).
2. Install new preformed packing (16) on tube assembly (15).
3. Install tube assembly (15) in elbow (18) under turbocharger (7).
4. Install new gasket (14) between flange of tube assembly (15) and under turbocharger (7).
5. Install two bolts (13).
6. Install new preformed packing (12) and adapter (11) on injection pump support (8).

NOTE

Do not tighten nut.

7. Install tube assembly (10) by connecting tube assembly nut.
8. Install new gasket (9) between flange of tube assembly (10) and top of turbocharger (7).
9. Install bolts (1 and 2).
10. Tighten tube assembly nut on injection pump support (8).
11. Install four clips (5), two bolts (6), four washers (4), and two nuts (3) on right side of engine.



397-2020

12. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
13. Check for leaks and add oil as required. Stop engine.
14. Install right side engine panel (WP 0182 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Oil, lubricating (Item 26, 27, or 30 WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Lockwasher

Packing, preformed

Seal

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

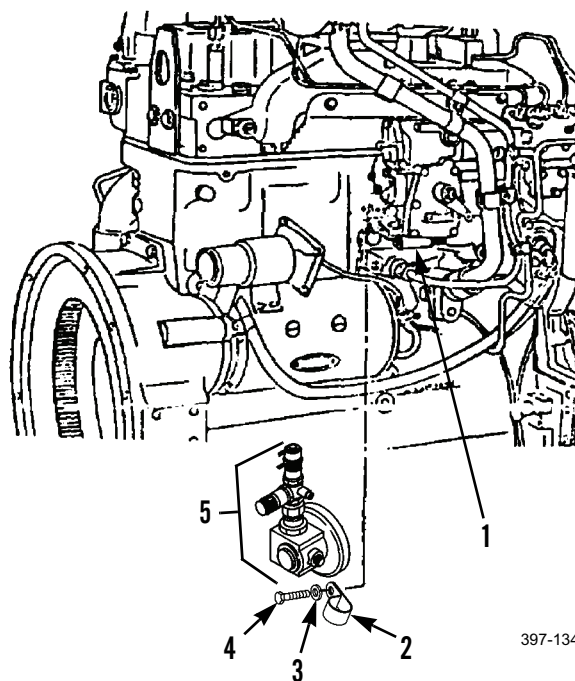
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL

1. Remove bolt (4), lockwasher (3), and clamp (2) from rear fuel injection pump, right side of engine. Discard lockwasher.
2. Remove tachometer drive assembly (5) from fuel injection pump rear governor housing (1).




397-1341

TACHOMETER DRIVE REPLACEMENT (MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED 0034 00

REMOVAL - CONTINUED

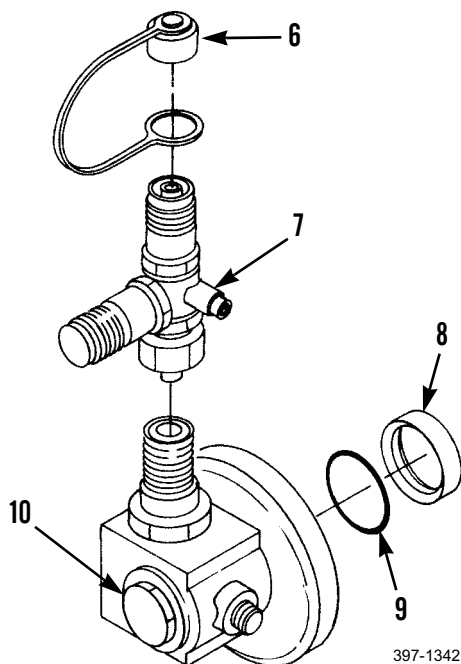3. Remove seal (8) and preformed packing (9) and discard.
4. Remove speedometer adapter (7) from adapter assembly (10).
5. Remove dust cap (6).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

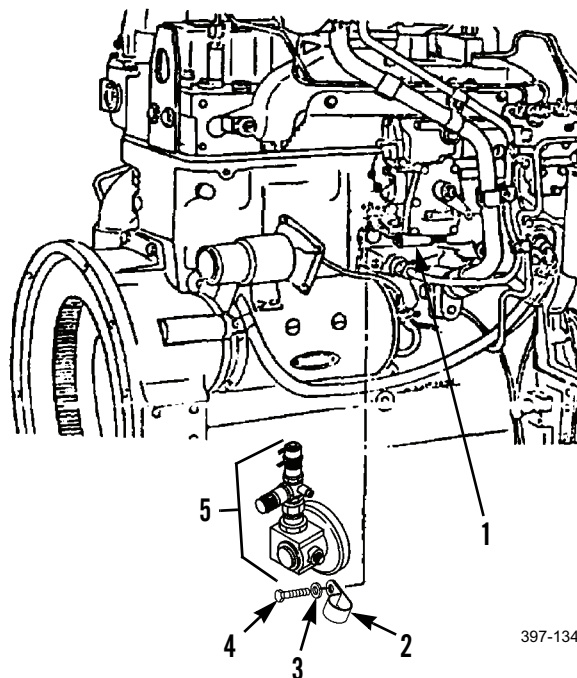1. Install dust cap (6) on speedometer adapter (7).
2. Install speedometer adapter (7) on adapter assembly (10).
3. Install new preformed packing (9) on groove of adapter assembly (10). Apply clean oil to outer surface.
4. Install new seal (8).
5. Install tachometer drive assembly (5) on fuel injection pump rear governor housing (1). Align shaft of adapter assembly (10) with shaft in rear governor housing.
6. Install clamp (2), new lockwasher (3), and bolt (4).



7. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation, Bleeding

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 2 (Item 76, WP 0348 00)

Wrench, torque (Item 95, WP 0348 00)

Driver bit, T-15 TORX (Item 21, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing with retainer (4)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Right side engine panel removed (WP 0182 00)



WARNING



- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may result in death or injury to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections or maintenance while smoking or near fire, flames or sparks. Fuel may ignite, causing death or injury to personnel or damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.
- Exercise care when working with hot components. Allow to cool before handling. Failure to follow this warning may result in injury to personnel.

REMOVAL**CAUTION**

Injection nozzles must not be allowed to turn when disconnecting injection line assemblies. Hold injection nozzle with a wrench to prevent damage to nozzles.

1. Remove two screws (2 and 7) and clamp assemblies (1 and 8) from injection line assemblies (5 and 6) on top of engine.
2. Remove screw (13) and clamp assembly (12).
3. Remove bolt (4), washer (3), and bracket (11) from cylinder head.

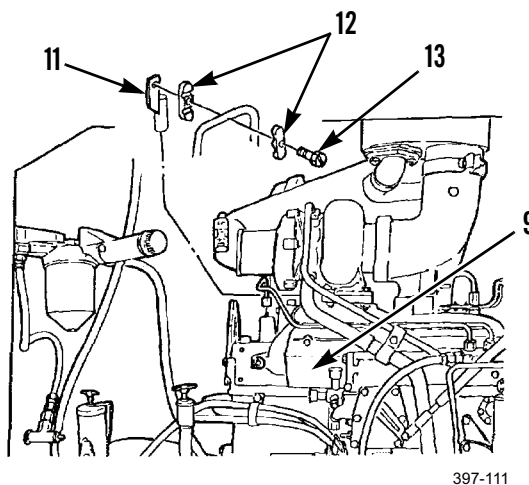
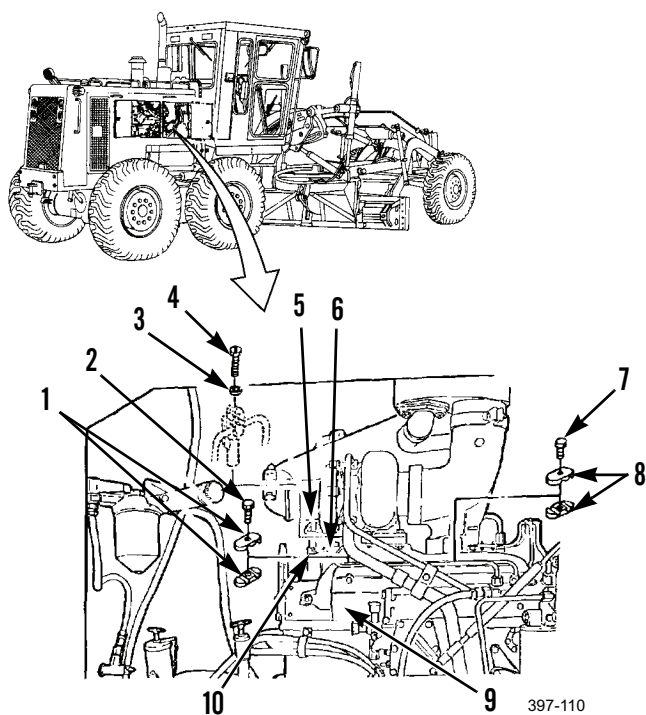
CAUTION

Cap all injection nozzles, injection pump ports and injection lines to prevent contamination.

NOTE

Tag all injection lines to aid in installation.

4. Disconnect injection line assemblies (5 and 6) from injection nozzles (10).
5. Remove injection line assemblies (5 and 6) from injection pump (9).




FUEL INJECTION LINES MAINTENANCE - CONTINUED


0035 00

REMOVAL - CONTINUED

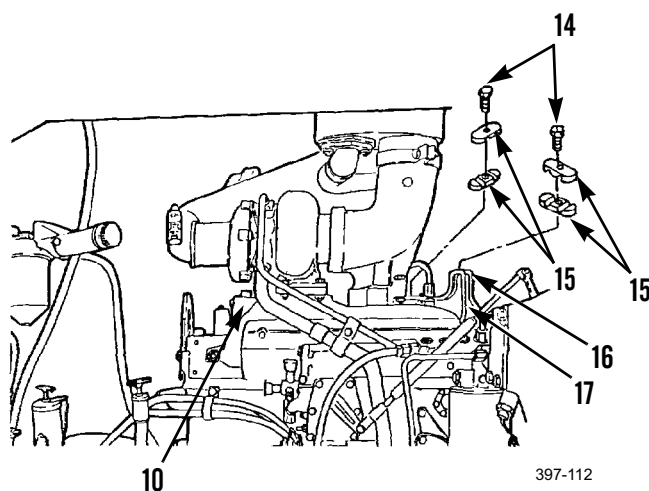6. Remove two screws (14) and clamp assemblies (15) from injection line assemblies (16 and 17) on top of engine.



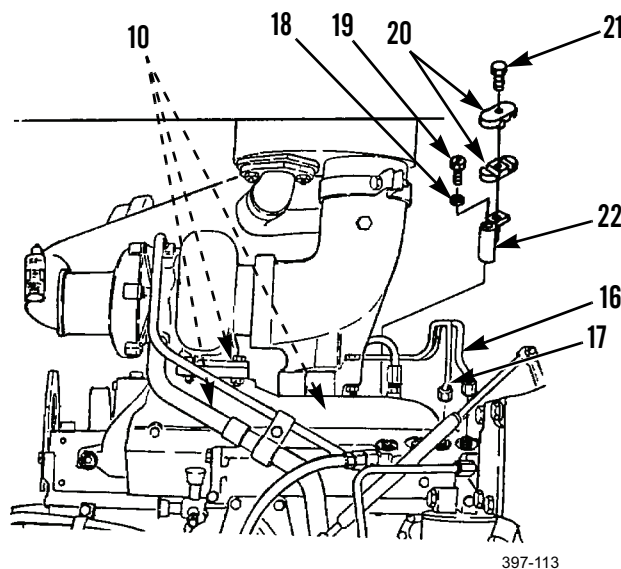7. Remove screw (21) and clamp assembly (20) from bracket (22) and injection line assemblies (16 and 17).
8. Disconnect injection line assemblies (16 and 17) from injection nozzles (10).
9. Remove injection line assemblies (16 and 17) from injection pump.
10. Remove bolt (19), washer (18), and bracket (22) from top of engine.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

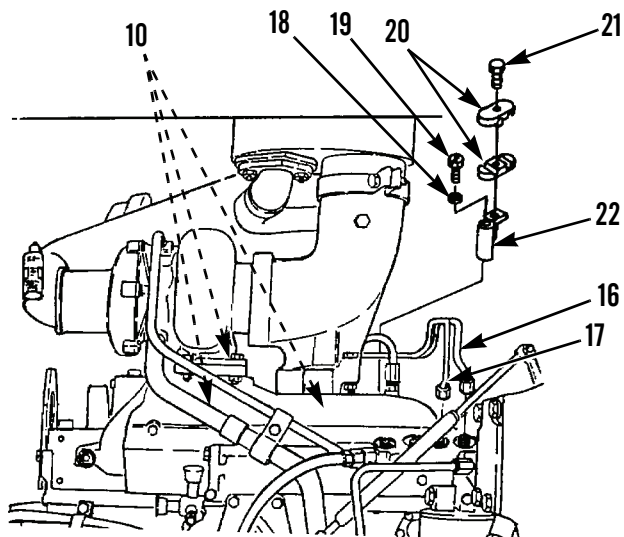
INSTALLATION

1. Install bracket (22), washer (18), and bolt (19) to top of engine.

NOTE


Do not tighten injection line assemblies.

2. Connect injection line assemblies (17 and 16) to injection nozzles (10) on top of engine.
3. Install clamp assembly (20) and screw (21) on injection line assemblies (17 and 16) and bracket (22). Tighten screw to 20 lb-in. (2 Nm).



397-113


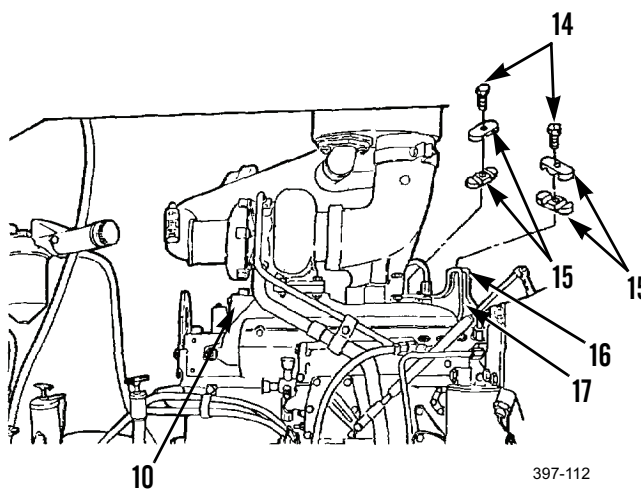
4. Install two clamp assemblies (15) and screws (14) on injection line assemblies (17 and 16). Tighten screws to 20 lb-in. (2 Nm).
5. Install injection line assemblies (17 and 16) to injection pump.
6. Tighten injection line assemblies (17 and 16) to injection nozzles (10).



397-112

FUEL INJECTION LINES MAINTENANCE - CONTINUED**0035 00****INSTALLATION - CONTINUED**

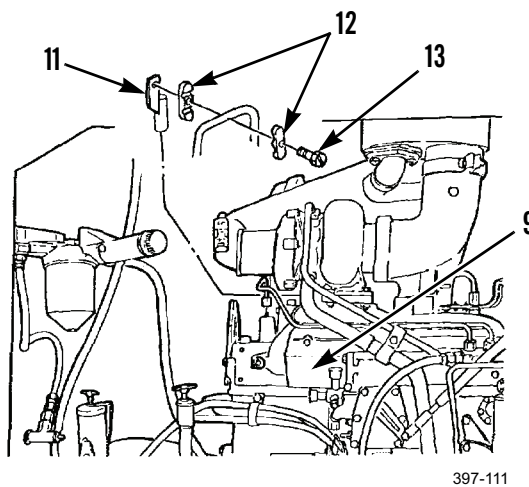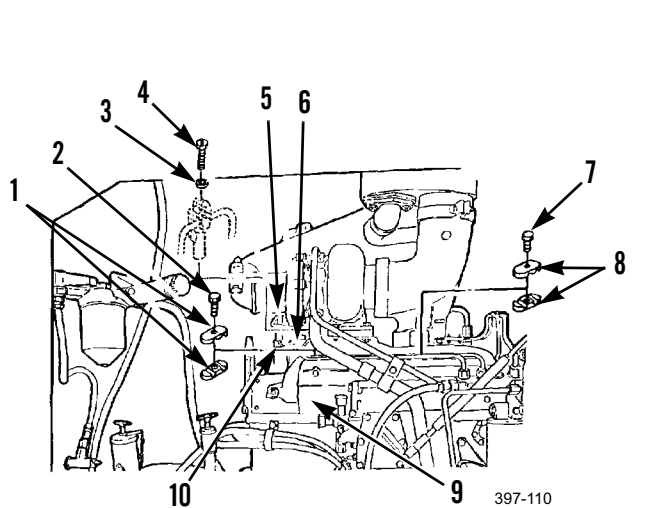
7. Install bracket (11), clamp assembly (12), and screw (13). Tighten screw to 20 lb-in. (2 Nm).
8. Connect injection line assemblies (6 and 5) to injection nozzles (10).
9. Install washer (3) and bolt (4).
10. Install injection line assemblies (6 and 5) at injection pump (9).
11. Install two clamp assemblies (1 and 8) and screws (2 and 7) on injection line assemblies (6 and 5). Tighten screws to 20 lb-in. (2 Nm).



BLEEDING**NOTE**

- Injection lines must be bled one at a time in order, starting with line 1.
- The bleed screw packing with retainer should be changed any time the bleed screw is loosened or removed.

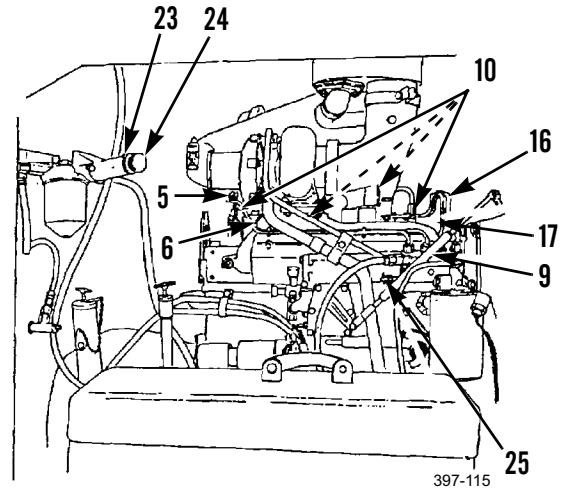1. Loosen injection line assembly (5) at injection nozzles (10).
2. Turn knob (24) on priming pump (23) to the left and pull out.
3. Pump until diesel fuel, free of air bubbles, flows from injection line assembly (5) at injection nozzles (10).
4. Tighten injection line assembly (5) at injection nozzles (10).
5. Repeat steps 1 through 4 for the other three injection line assemblies (6, 16, and 17) ensuring lines are bled in order.
6. Push in on priming pump (23) and turn knob (24) to the right to close.
7. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
8. Check injection line assemblies (5, 6, 16, and 17) on right side of engine for leaks at fuel injection pump (9) and injection nozzles (10).

**NOTE**

If engine runs roughly after installing injection lines, perform steps 9 through 11. If not, proceed to step 12.

9. Loosen injection line assemblies (5, 6, 16, and 17) from top of engine. Hold injection nozzle with a wrench when loosening line fittings.
10. Bleed each injection line assembly one at a time by loosening fitting at injection nozzle. Repeat steps 1 through 5.
11. Tighten line connection. Repeat procedure on remaining three line connections, one at a time. Do each injection line assembly two or three times or until no air is present.
12. Install right side engine panel (WP 0182 00).

END OF WORK PACKAGE

AIR PRECLEANER REPLACEMENT

0036 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

FM 21-40

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)


Battery disconnect switch in OFF position (TM 5-3805-261-10)

**WARNING**

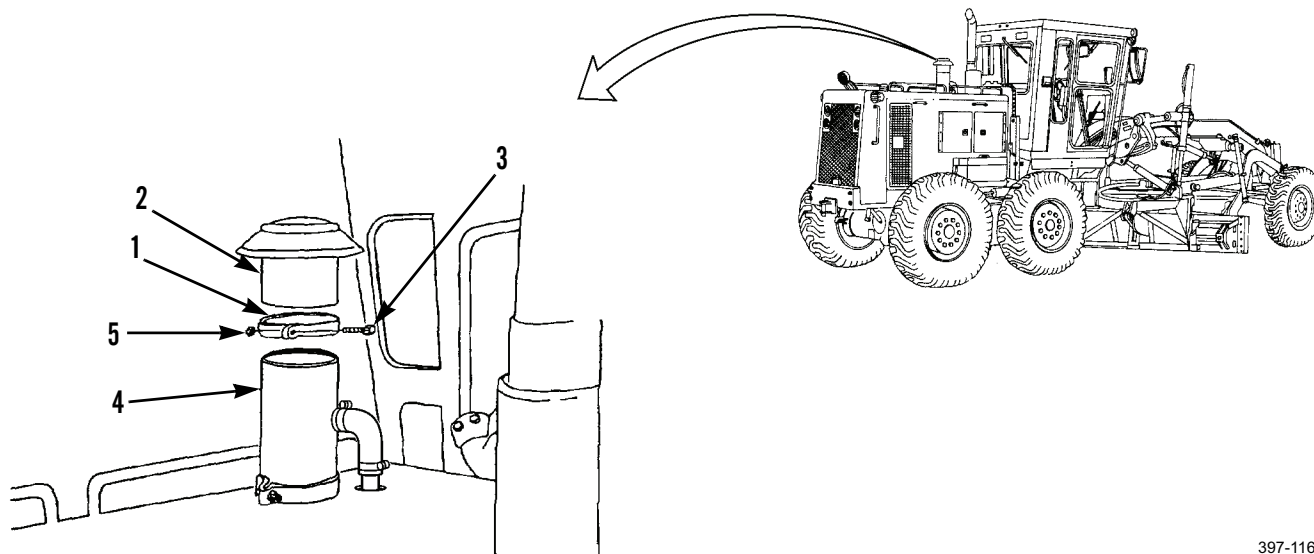- If NBC exposure is suspected, personnel wearing protective equipment should handle all air cleaner media. Consult your NBC Officer or NBC NCO for appropriate handling or disposal procedures.
- NBC contaminated filters must be handled using adequate precautions (FM 21-40) and must be disposed of by trained personnel.
- Failure to follow this warning may cause illness or death.


REMOVAL

1. Loosen nut (5) and bolt (3) on clamp (1).
2. Remove hood (2) and clamp (1) from body (4).



397-116

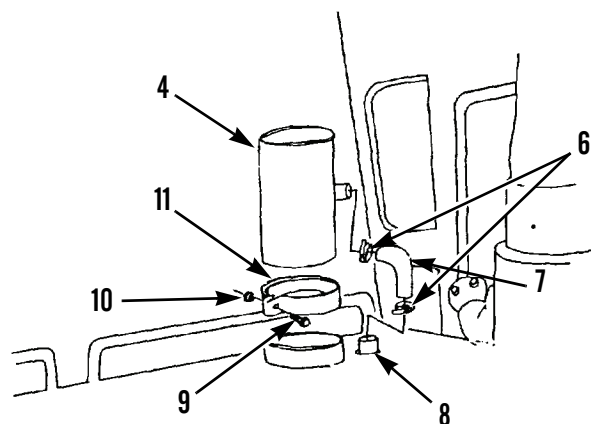3. Loosen two clamps (6).
4. Remove two clamps (6) and hose (7) from body (4) and tube (8).
5. Loosen nut (10) and bolt (9).
6. Remove body (4) and clamp (11).



397-117

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install clamp (11) and body (4).
2. Install bolt (9) and nut (10) in clamp (11). Tighten to 18 lb-ft (24 Nm).
3. Install two clamps (6) and hose (7) to body (4) and tube (8).
4. Install clamp (1), hood (2), bolt (3), and nut (5) to body (4). Tighten to 18 lb-ft (24 Nm).

END OF WORK PACKAGE

PRIMARY AND SECONDARY FILTER ELEMENTS REPLACEMENT**0037 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engi805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Gasket

References

FM 21-40

WP 0020 00

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side engine door opened (TM 5-3805-261-10)


**WARNING**

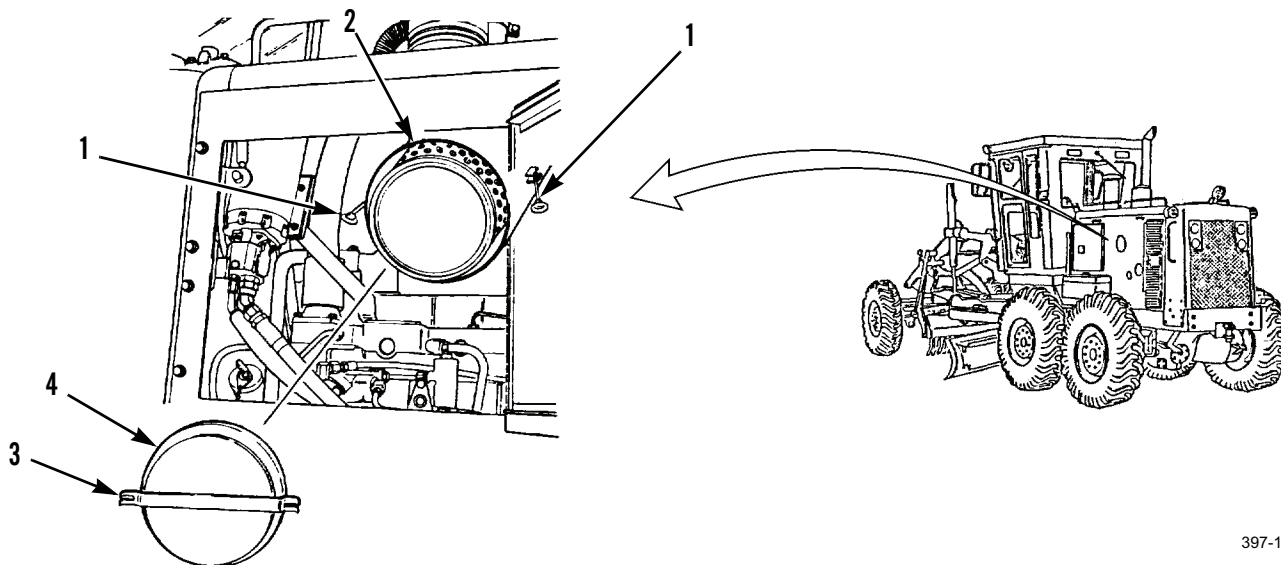- If NBC exposure is suspected, personnel wearing protective equipment should handle all air cleaner media. Consult your NBC Officer or NBC NCO for appropriate handling or disposal procedures.
- NBC contaminated filters must be handled using adequate precautions and must be disposed of by trained personnel.
- Failure to follow this warning may cause illness or death.

REMOVAL**CAUTION**

Never service air cleaner with engine running. Engine damage could result if service is performed with engine running.

1. Loosen two eyebolts (1) and remove cover (3) from air cleaner (2).
2. Inspect preformed packing (4) located inside of cover (3). Remove and discard preformed packing only if damaged.



397-118

3. Remove primary filter element (8) from air cleaner (2).
4. Remove six nuts (5).

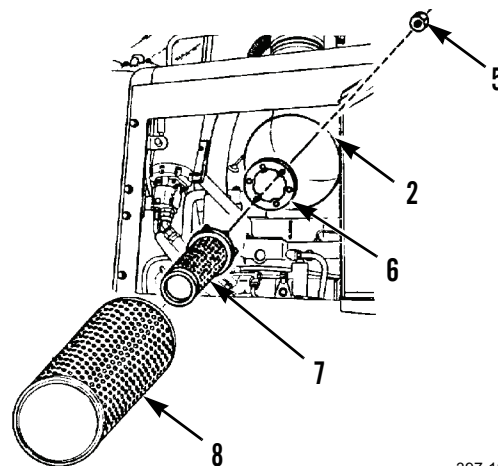
CAUTION

If secondary filter element is difficult to remove, gasket on bottom of secondary filter element may be sticking to air cleaner housing. Ensure this area on filter housing is thoroughly cleaned prior to installation of secondary filter element to prevent an air leak past secondary filter.

NOTE

Air cleaner is not secured after removing secondary filter element and attaching nuts.

5. Remove secondary filter element (7) and gasket (6) from air cleaner (2). Discard gasket.



397-120

CLEANING AND INSPECTION

1. Check sealing surfaces on filter elements for dirt on the “clean” side. If this is evident, problem may be a damaged filter element, incorrect element fit or the need for cleaning and/or repair of gasketed surfaces.

**WARNING**

Compressed air used for cleaning purposes must not exceed 30 psi (207 kPa). DO NOT direct compressed air against human skin. Make sure air stream is directed away from user and other personnel in the area. Wear protective goggles or face shield. Failure to follow this warning may cause injury to personnel.

CAUTION

To prevent damage, DO NOT clean primary filter element by bumping or tapping.

NOTE

- Use a light inside primary filter element to inspect filter for tears, holes or other damage before and after each cleaning process.
 - Discard primary filter element if any damage is evident.
2. Direct compressed air inside primary filter element, along length of filter pleats.
 3. Direct compressed air outside primary filter element, along length of filter pleats.
 4. Repeat step 2.

NOTE

Manufacturer’s specifications call for replacement of primary filter element after six cleanings and replacement of secondary filter after three cleanings.

5. Clean and inspect all parts in accordance with WP 0020 00.

CAUTION

Ensure no gasket material remains on interior of air cleaner canister. If material remains, a poor seal will allow dirty air into engine.

INSTALLATION

1. Install new gasket (6) and secondary filter element (7) into air cleaner (2).
2. Install six nuts (5). Tighten to 27 lb-ft (37 Nm).
3. Install primary filter element (8) in air cleaner (2).

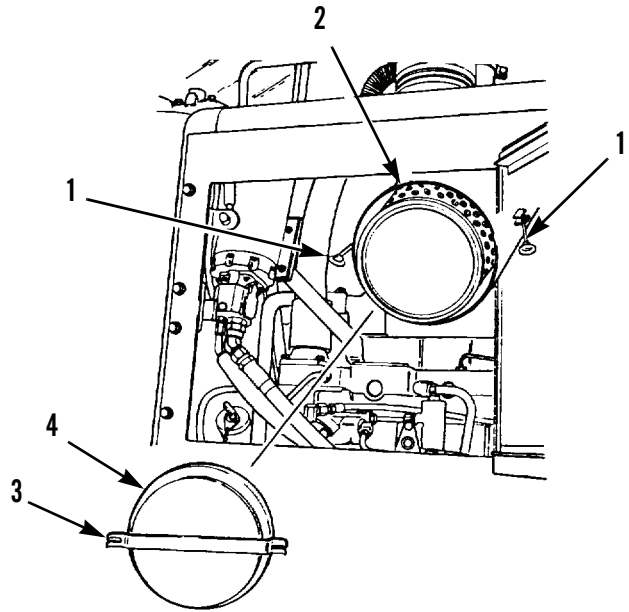
INSTALLATION - CONTINUED

- If removed, install new preformed packing (4) in cover (3).

NOTE

Hand tighten two eyebolts.

- Install cover (3) on air cleaner (2) and secure with two eyebolts (1).



397-118

- Reset air cleaner indicator by pushing in button on bottom of air cleaner indicator (TM 5-3805-261-10).

NOTE

If air cleaner indicator shows red after performing this procedure, replacement of primary and/or secondary filters may be necessary.

- Close left side engine door (TM 5-3805-261-10).

END OF WORK PACKAGE

AIR CLEANER BODY REPLACEMENT

0038 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Gasket

References

FM 21-40

WP 0020 00

Personnel Required

Two

Equipment Conditions

Machine parked on level ground (TM 5-3806-261-10)

Parking/emergency brake applied (TM 5-3806-261-10)

Implements lowered to ground (TM 5-3806-261-10)

Engine off (TM 5-3806-261-10)

Battery disconnect switch in OFF position (TM 5-3806-261-10)

Air precleaner removed (WP 0036 00)

Primary and secondary filter elements removed (WP 0037 00)



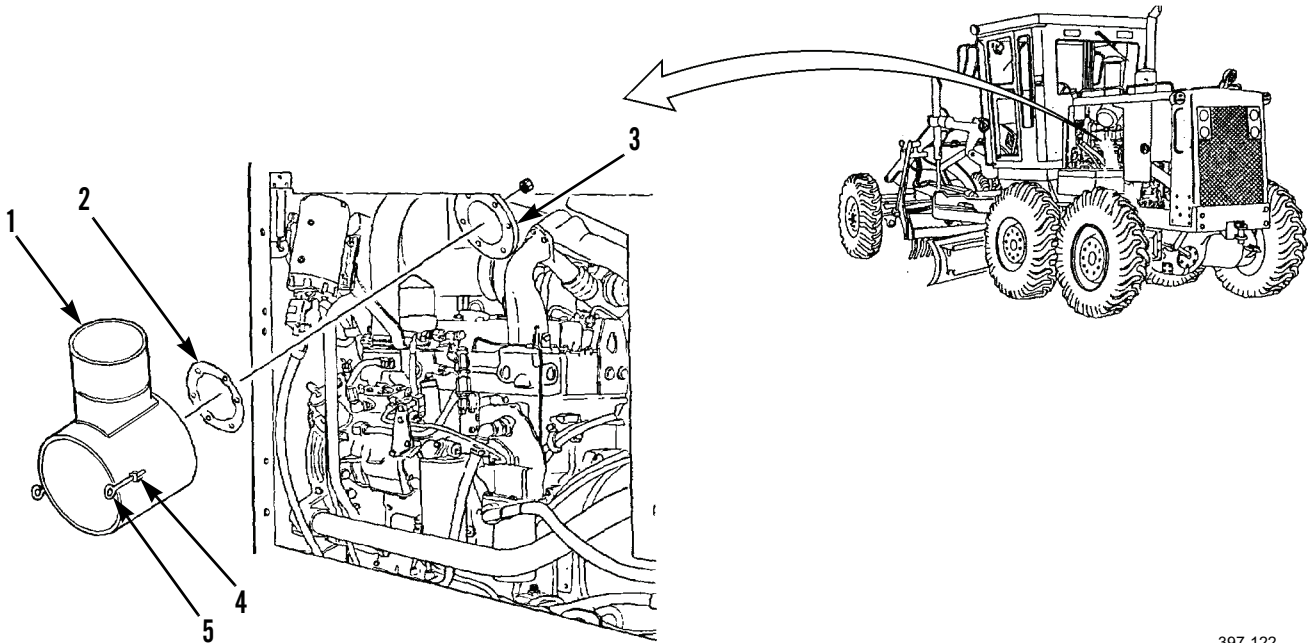
WARNING



- If NBC exposure is suspected, personnel wearing protective equipment should handle all air cleaner media. Consult your NBC Officer or NBC NCO for appropriate handling or disposal procedures.
- NBC contaminated filters must be handled using adequate precautions (FM 21-40) and must be disposed of by trained personnel.
- Failure to follow this warning may cause illness or death.

AIR CLEANER BODY REPLACEMENT - CONTINUED**0038 00****REMOVAL**

1. Remove air cleaner body (1) and gasket (2) from pipe (3). Discard gasket.
2. Remove two nuts (4) and eyebolts (5) from air cleaner body (1).



397-122

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install two eyebolts (5) and nuts (4) in air cleaner body (1).
2. Install new gasket (2) and air cleaner body (1) on pipe (3).
3. Install primary and secondary filter elements (WP 0037 00).
4. Install air precleaner (WP 0036 00).

END OF WORK PACKAGE

TURBOCHARGER AIR LINES REPLACEMENT

0039 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Wood blocks

Materials/Parts

Antiseize compound (Item 6, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Gasket

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air cleaner indicator removed (WP 0251 00)

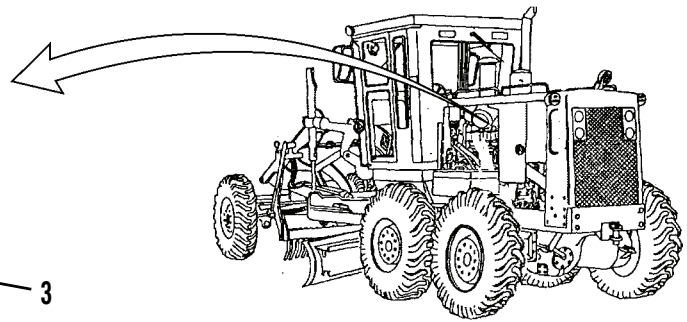
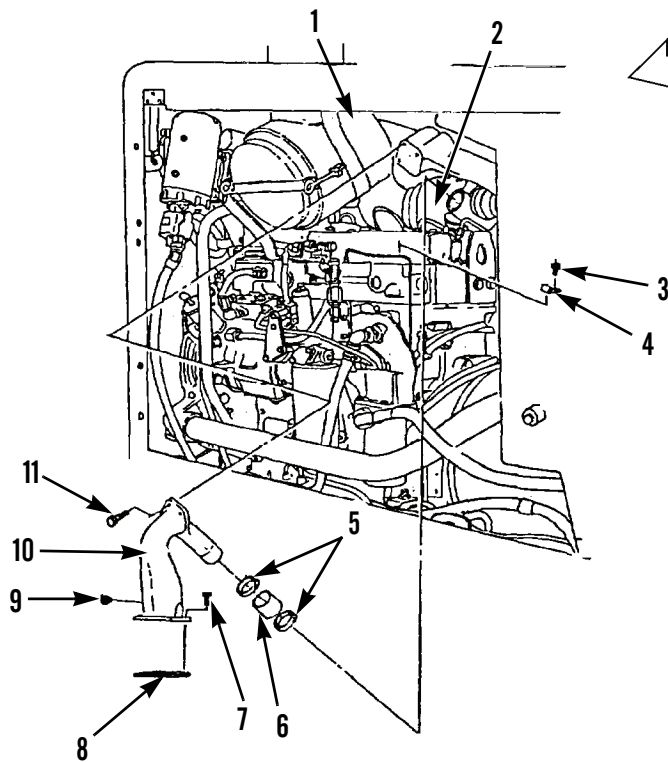
Left and right side engine panels removed (WP 0182 00)

TURBOCHARGER AIR LINES REPLACEMENT - CONTINUED

0039 00

REMOVAL

1. Remove bolt (3) from top-left side of engine.
2. Remove clamp (4) from pipe (10).
3. Remove three bolts (11).
4. Support air cleaner (1) using wood blocks.
5. Remove three bolts (7).
6. Loosen two clamps (5).
7. Remove pipe (10) from turbocharger (2).
8. Remove and discard gasket (8).
9. Remove two clamps (5) and hose (6).
10. Remove plug (9) from pipe (10).




397-124

TURBOCHARGER AIR LINES REPLACEMENT - CONTINUED

0039 00

REMOVAL - CONTINUED

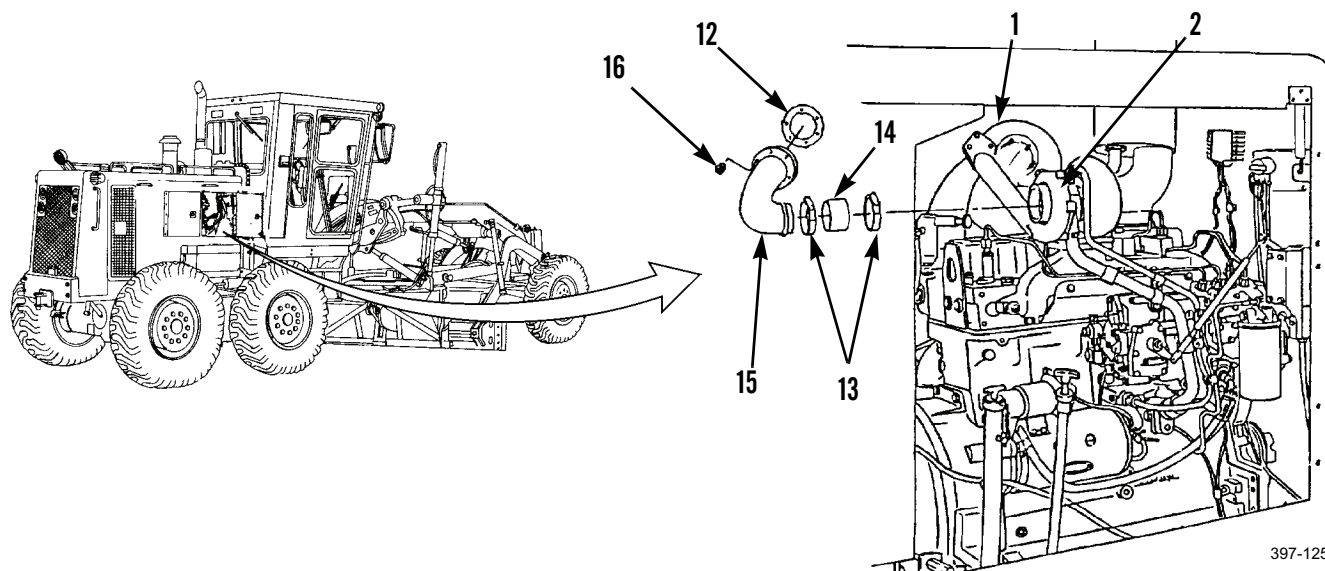11. Remove six nuts (16) from air cleaner (1).
12. Loosen two clamps (13).
13. Remove elbow (15) and gasket (12) from turbocharger (2). Discard gasket.
14. Remove two clamps (13) and hose (14).



397-125

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

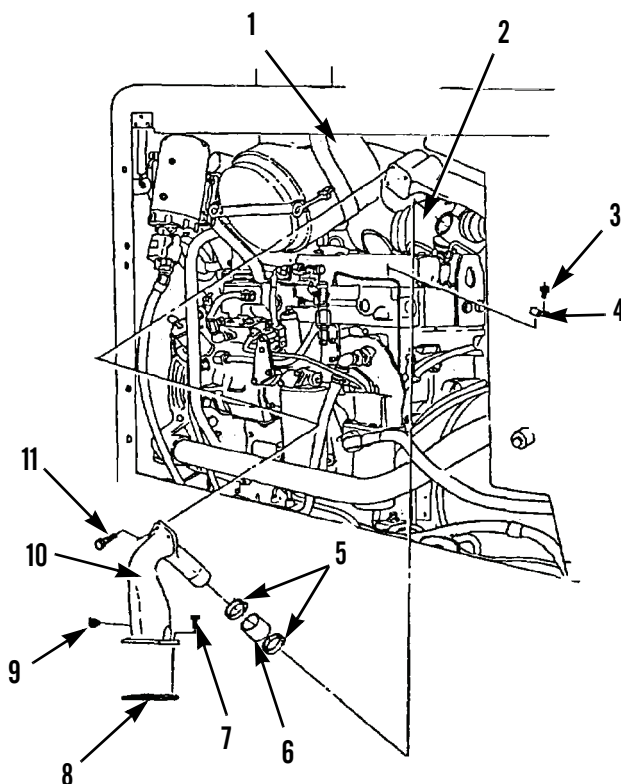
Do not tighten clamps.

1. Install hose (14) and two clamps (13) on turbocharger (2).
2. Install new gasket (12) and elbow (15) on air cleaner (1).
3. Install six nuts (16). Tighten to 27 lb-ft (37 Nm).
4. Tighten two clamps (13).
5. Coat threads of plug (9) with antiseize compound and install in pipe (10).

INSTALLATION - CONTINUED**NOTE**

Do not tighten clamps.

6. Install hose (6) and two clamps (5) on turbocharger (2).
7. Install new gasket (8) and pipe (10) on hose (6).
8. Install three bolts (7).
9. Install three bolts (11) on pipe (10).
10. Install clamp (4) and bolt (3) on pipe (10).
11. Tighten two clamps (5).



397-124

12. Install air cleaner indicator (WP 0251 00).
13. Install engine compartment side panels and doors (WP 0182 00).

END OF WORK PACKAGE

TURBOCHARGER EXHAUST ELBOW REPLACEMENT

0040 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Materials/Parts

Antiseize compound (Item 6, WP 0349 00)

Penetrating oil (Item 32, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Seal (2)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Exhaust pipe and muffler removed (WP 0051 00)

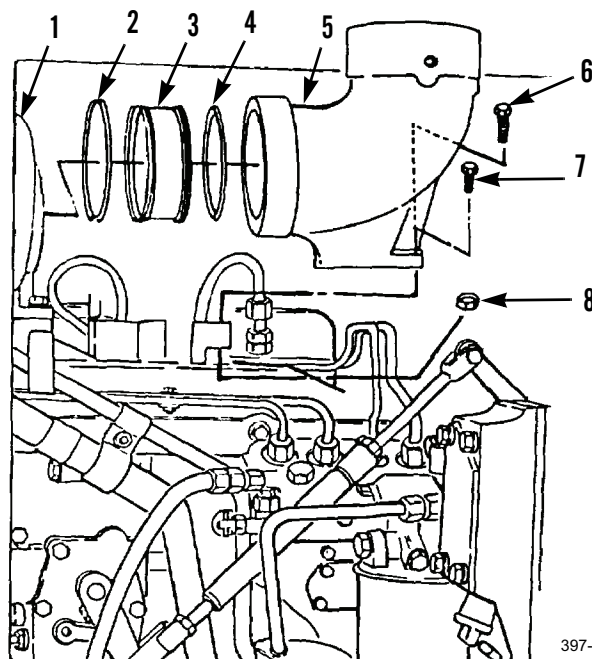
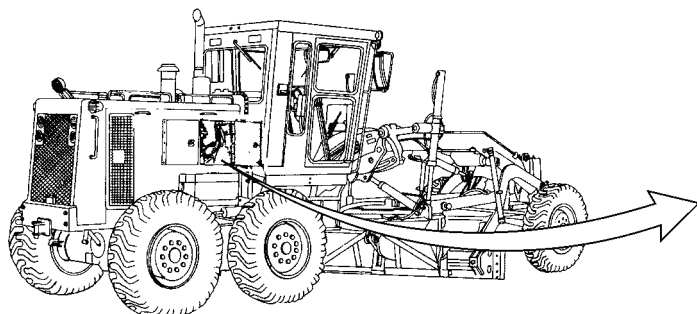
Right side engine panel removed (WP 0182 00)

NOTE

Soak bolts with penetrating oil to aid in removal.

REMOVAL

1. Remove three nuts (8), two bolts (7), and bolt (6) from upper-right side of engine.
2. Remove exhaust elbow (5) from turbocharger (1).
3. Remove seal (4), coupling (3), and seal (2) from turbocharger (1). Discard seals.



397-129

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

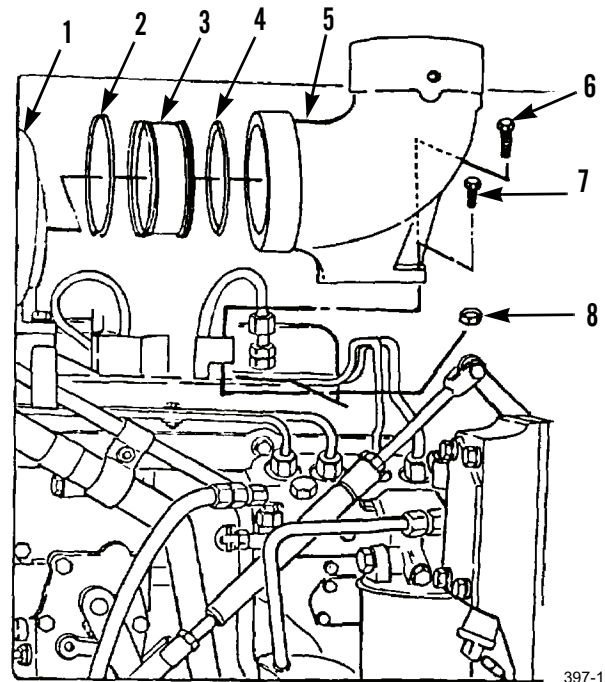
INSTALLATION

1. Install new seal (2), coupling (3), and new seal (4) on turbocharger (1).
2. Install elbow (5) on turbocharger (1).

NOTE

Replace bolts if damaged, bent, or stretched.

3. Coat threads of bolt (6) and two bolts (7) with anti-seize compound.
4. Install bolt (6), two bolts (7), and three nuts (8). Tighten nuts to 32 lb-ft (43 Nm).
5. Install exhaust pipe and muffler (WP 0051 00).
6. Install right side engine panel (WP 0182 00).



397-129

END OF WORK PACKAGE

FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT (MODELS 130G, 130GSCE, AND 130GNSCE)

0041 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Fuel (Item 13, 14, or 15, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (5)

References

WP 0020 00

WP 0032 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Fuel tank drained (WP 0044 00)

Right side engine panel removed (WP 0182 00)



WARNING

- DO NOT perform fuel system checks, inspections or maintenance while smoking or near fire, flames, or sparks. Fuel may ignite, causing injury or death to personnel or damage to machine.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.

FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT (MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED

0041 00

REMOVAL

1. Remove nut (7), washer (6), bolt (3), washer (2), and two clips (5) from tube assembly (4).

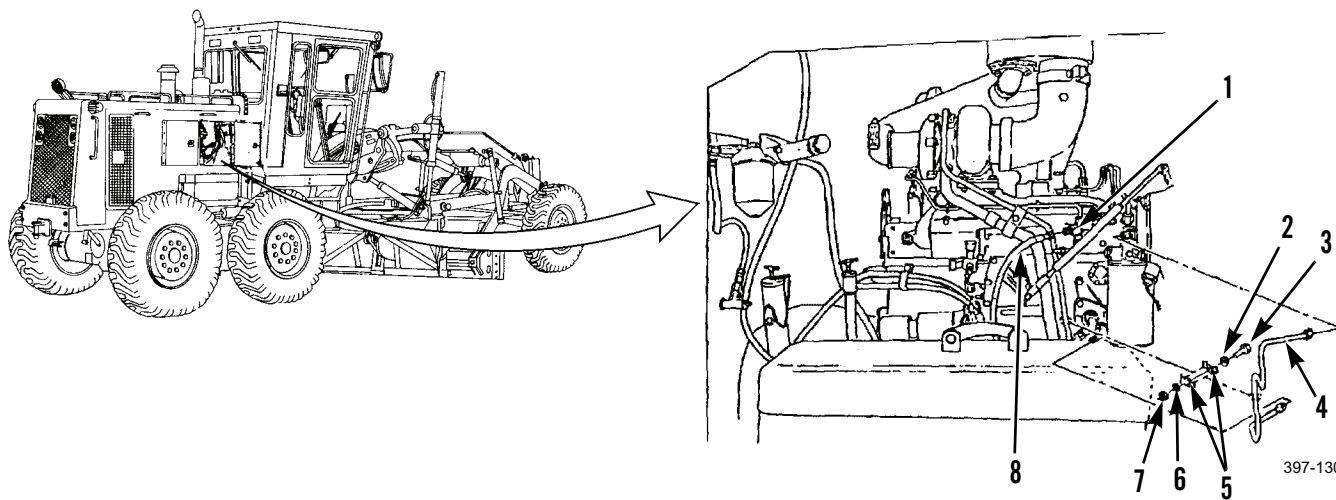
CAUTION

Cap hose and tube ends and plug all open fuel ports to prevent contamination.


NOTE

Tag hose and tube assemblies before disconnecting to aid in installation.

2. Remove tube assembly (4).
3. Disconnect hose assembly (8) from elbow (1).



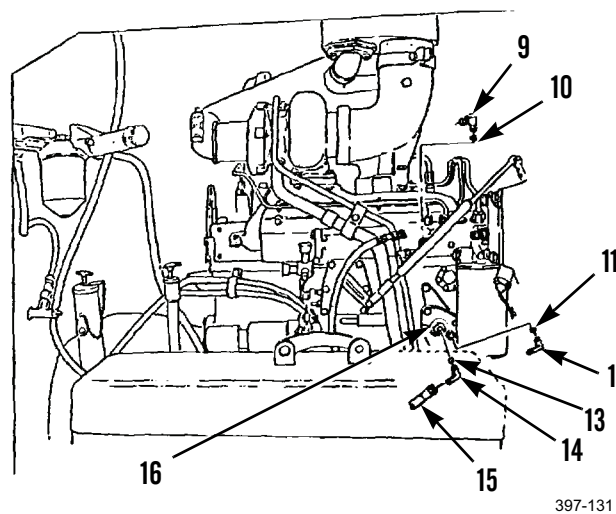4. Remove elbow (12), preformed packing (11), elbow (9), and preformed packing (10). Discard preformed packings.
5. Disconnect hose assembly (15) from elbow (14).
6. Remove elbow (14) and preformed packing (13) from fuel transfer pump (16). Discard preformed packing.




FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT (MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED


0041 00

REMOVAL - CONTINUED

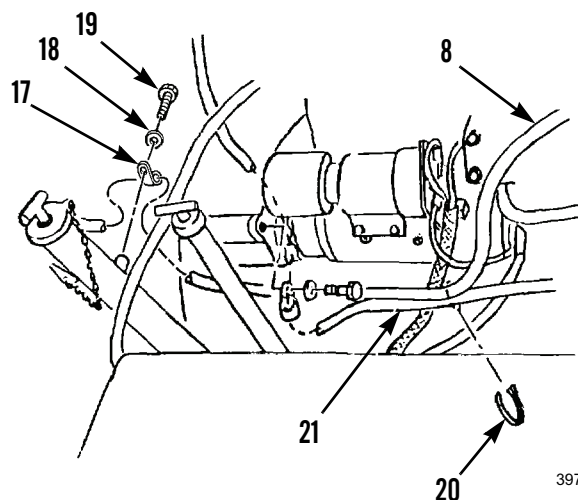7. Remove and discard tie strap (20) from hose assemblies (8 and 21).
8. Remove bolt (19), washer (18), and clip (17) from hose assemblies (8).
9. Remove hose assembly (8) from machine.



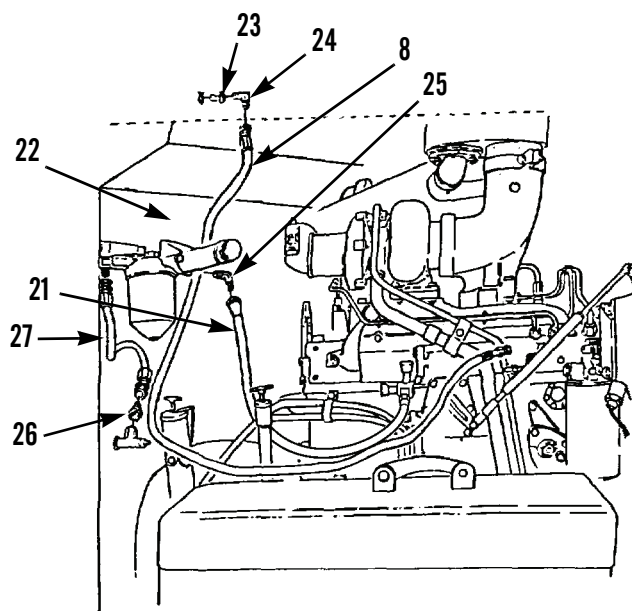10. Remove elbow (24) and bushing (23) from fuel tank (22).
11. Remove hose assembly (21) from elbow (25).
12. Remove elbow (25).
13. Remove hose assembly (21) from machine.
14. Remove hose assembly (27) from connector (26).
15. Remove hose assembly (27) from machine.




**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT (MODELS 130G, 130GSCE,
AND 130GNSCE) - CONTINUED**

0041 00

REMOVAL - CONTINUED

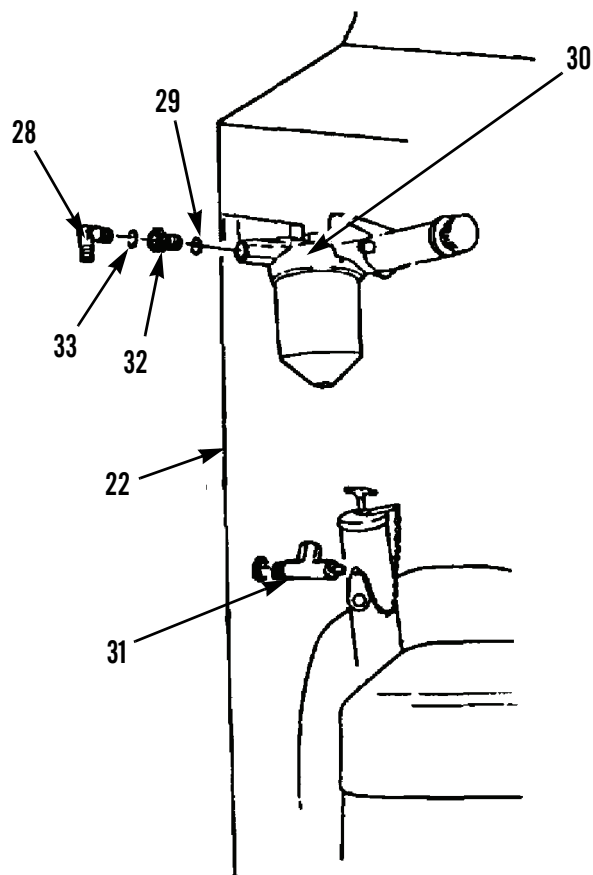16. Remove elbow (28), preformed packing (33), adapter (32), and preformed packing (29) from fuel filter (30). Discard preformed packings.
17. Remove valve (31) from fuel tank (22).



397-134

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT (MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED

0041 00

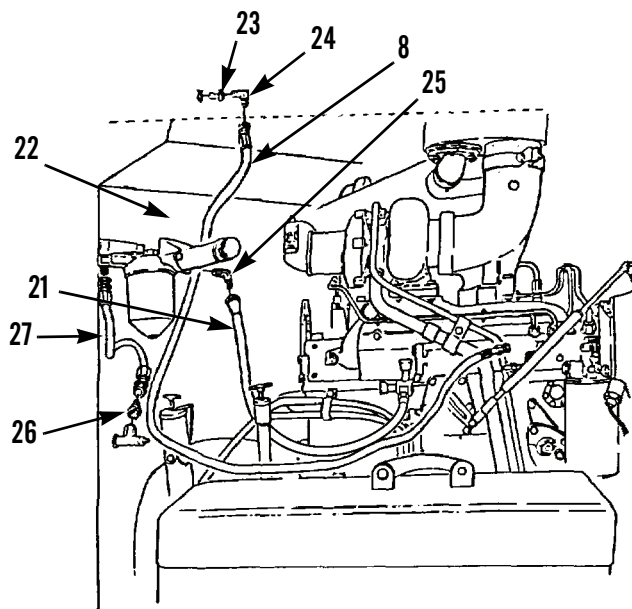
INSTALLATION

1. Install valve (31) in fuel tank (22).

NOTE


Lubricate threaded bore in fuel filter with clean diesel fuel before installing adapter.

2. Install new preformed packing (29), adapter (32), new preformed packing (33), and elbow (28) to fuel filter (30).
3. Install connector (26).
4. Install hose assembly (27) to connector (26).
5. Install hose assembly (27) on machine.
6. Install elbow (25).
7. Install hose assembly (21) on elbow (25).
8. Install hose assembly (21) on machine.
9. Install bushing (23) and elbow (24) on fuel tank (22).
10. Install hose assembly (8).



397-133

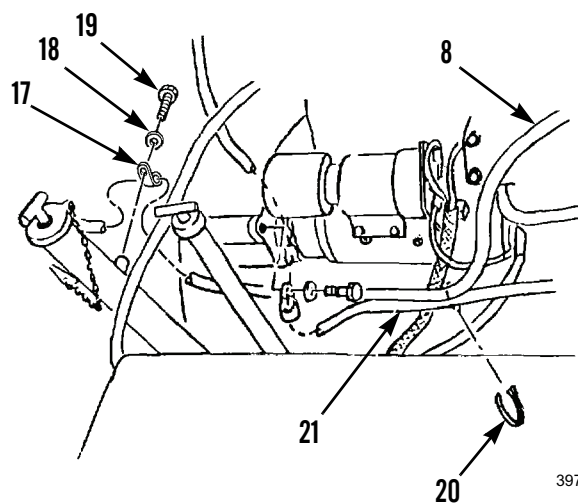11. Install clip (17), washer (18), and bolt (19).
12. Install new tie strap (20) around hose assemblies (21 and 8).



397-132

FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT (MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED

0041 00

INSTALLATION - CONTINUED

NOTE

Lubricate threaded bores of fuel transfer pump with clean diesel fuel before installing elbows.

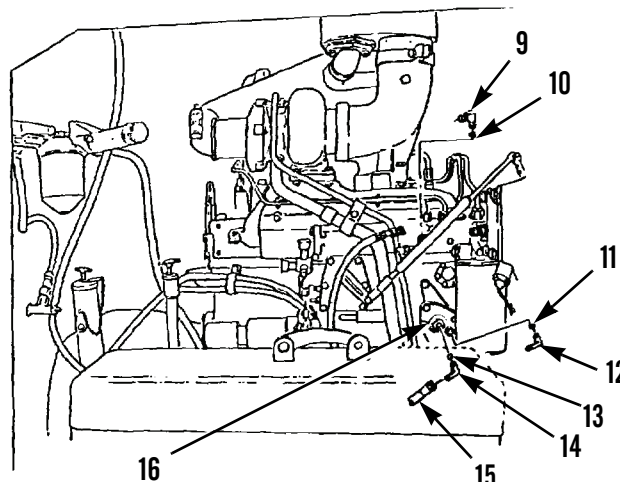
13. Install new preformed packing (13), elbow (14), new preformed packing (11), and elbow (12) on fuel transfer pump (16).

NOTE

Lubricate threaded bore of fuel injection pump with clean fuel before installing elbow.


14. Install new preformed packing (10) and elbow (9) on fuel injection pump (16).

15. Connect hose assembly (15) to elbow (14) on fuel transfer pump (16).



397-131

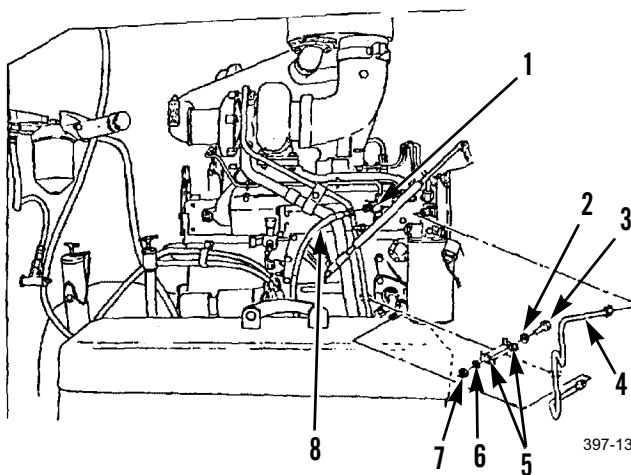16. Connect hose assembly (8) on elbow (1).
17. Install tube assembly (4).
18. Install two clips (5), washer (2), bolt (3), washer (6), and nut (7).



397-130

19. Fill fuel tank (WP 0044 00).
20. Bleed all lines (WP 0032 00).
21. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
22. Check for leaks. Stop engine.
23. Install right side engine panel (WP 0182 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

- Tool kit, general mechanic's (Item 89, WP 0348 00)
- Shop equipment, field maintenance (Item 74, WP 0348 00)

Materials/Parts

- Cap set, protective (Item 7, WP 0349 00)
- Rag, wiping (Item 35, WP 0349 00)
- Tag, marker (Item 44, WP 0349 00)
- Packing, preformed (9)

References

- WP 0020 00
- WP 0025 00

Equipment Conditions

- Machine parked on level ground (TM 5-3805-261-10)
- Parking/emergency brake applied (TM 5-3805-261-10)
- Implements lowered to ground (TM 5-3805-261-10)
- Engine off (TM 5-3805-261-10)
- Fuel tank drained (WP 0044 00)
- Right side engine panel removed (WP 0182 00)

REMOVAL



WARNING

- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may cause injury to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections, or maintenance while smoking or near fire, flames, or sparks. Fuel may ignite, causing injury or death to personnel and damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuels. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing. Failure to follow this warning may cause injury to personnel.
- Wear safety goggles to protect eyes when disconnecting fuel lines. If fuel makes contact with eyes or skin, flush with large amounts of cold water and seek medical aid immediately.

CAUTION

Cap all hose and tube ends and plug all open fuel ports to prevent contamination.

NOTE

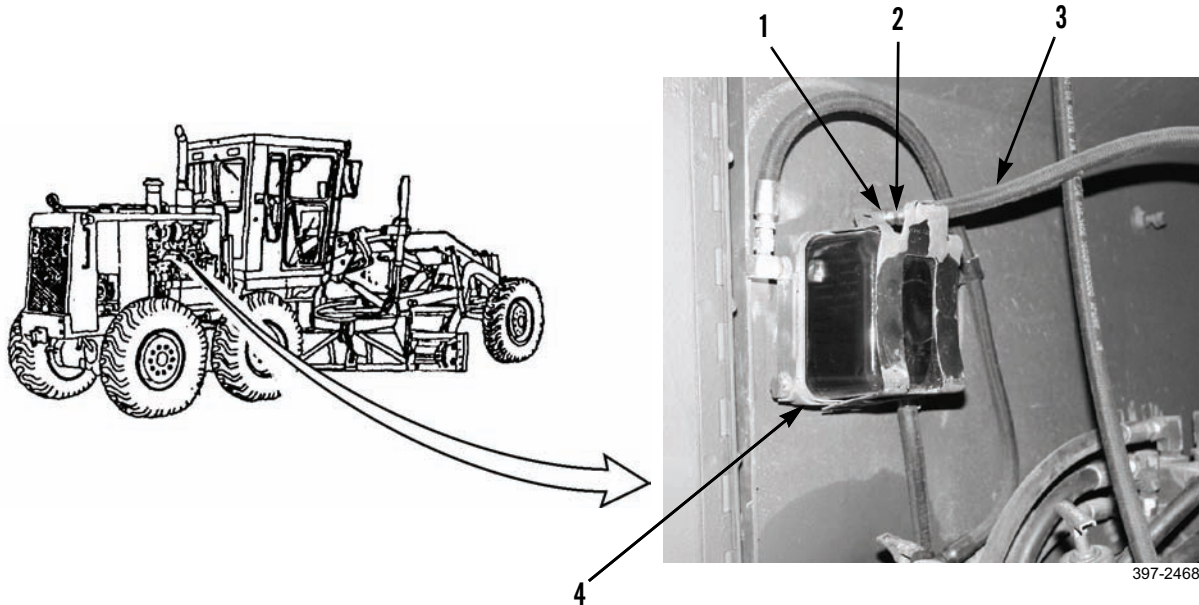
Tag hose and tube assemblies before disconnecting to aid in installation.

**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**


0042 00

REMOVAL - CONTINUED

1. Disconnect hose (3) from elbow (1).
2. Remove elbow (1) and preformed packing (2) from secondary fuel filter (4).



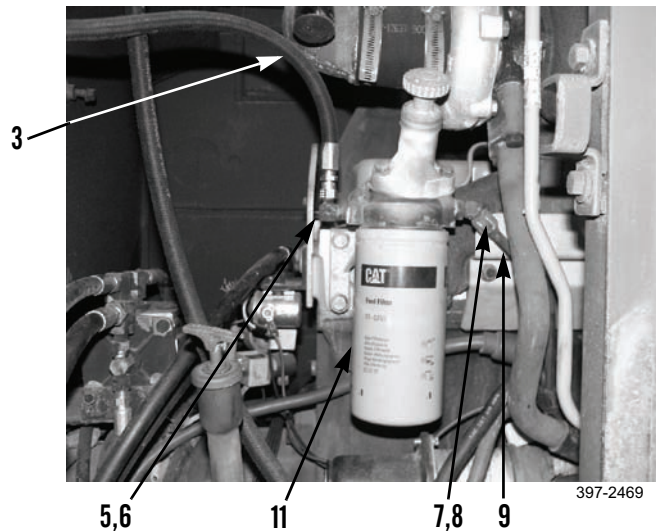3. Disconnect hose (3) from elbow (5) and remove hose.
4. Remove elbow (5) and preformed packing (6) from primary fuel filter base (11). Discard preformed packing.
5. Disconnect tube (9) from elbow (7).
6. Remove elbow (7) and preformed packing (8) from primary fuel filter base (11). Discard preformed packing.




**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**


0042 00

REMOVAL - CONTINUED

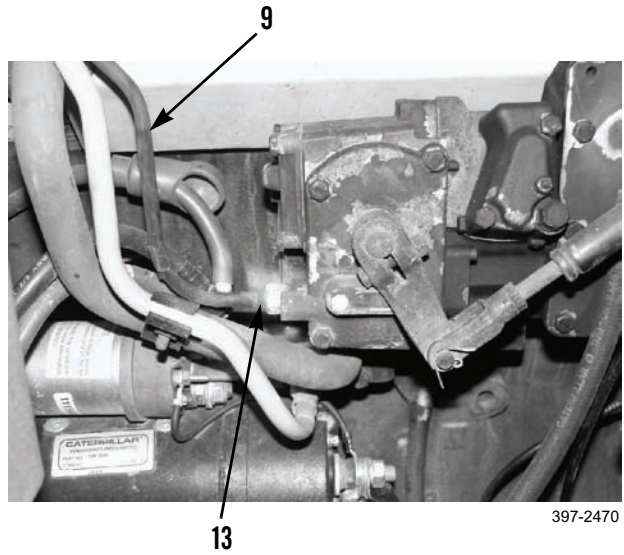7. Disconnect tube (9) from connector (13) and remove tube.



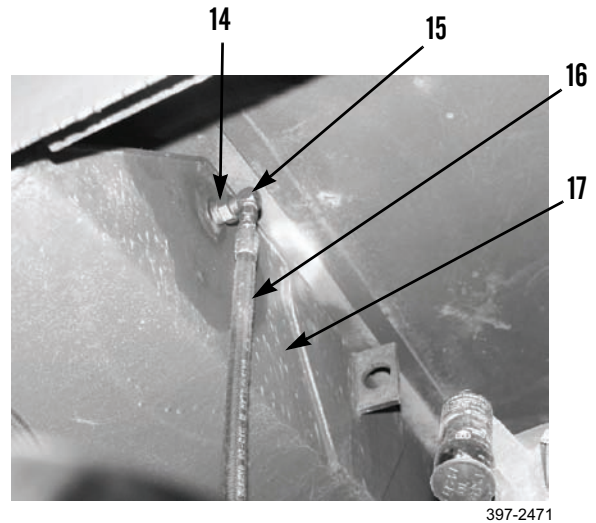8. Disconnect hose (16) from elbow (15).
9. Remove elbow (15) from bushing (14).
10. Remove bushing (14) from fuel tank (17).




**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**

0042 00

REMOVAL - CONTINUED

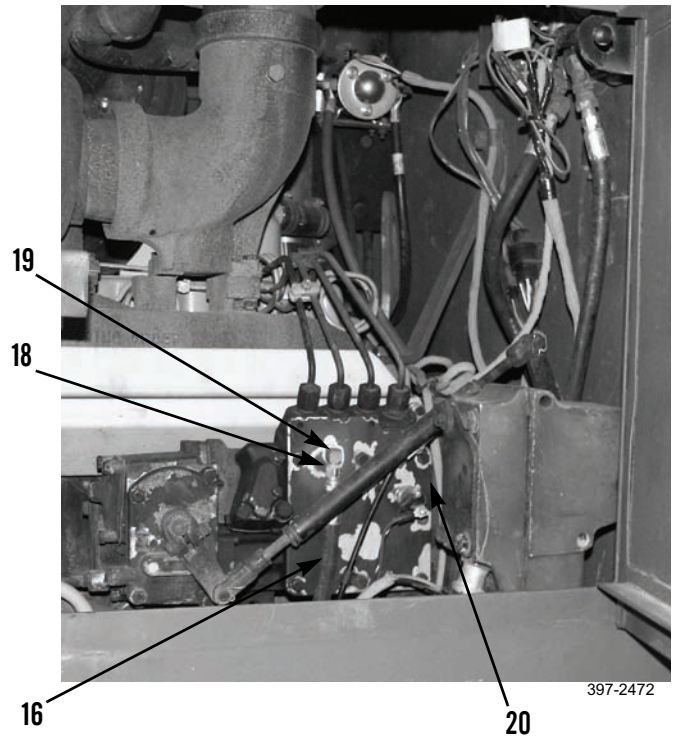
11. Disconnect hose connector (18) from elbow (19) and remove hose (16).
12. Remove elbow (19) from fuel injection pump (20).



CAUTION

Make sure valve is closed before disconnecting hose.

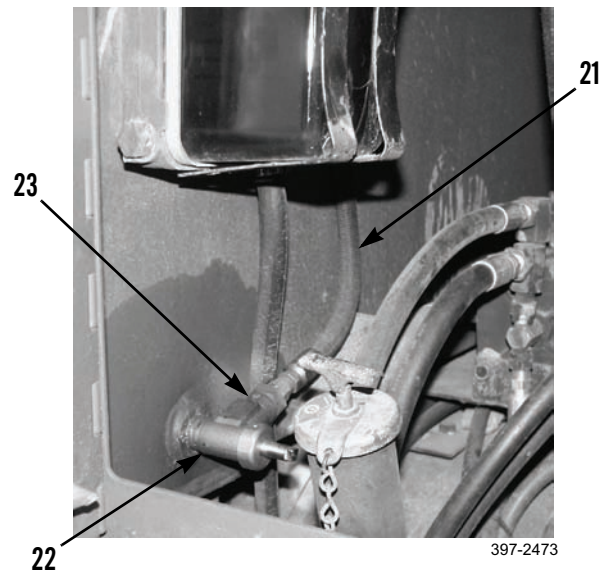13. Disconnect hose (21) and remove connector (23) from valve (22).




**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**


0042 00

REMOVAL - CONTINUED

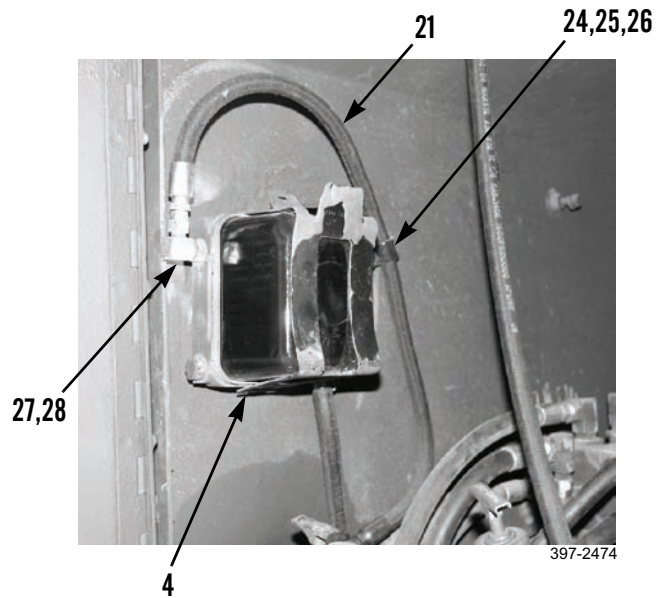14. Remove bolt (24), washer (25), and clip (26).
15. Disconnect hose (21) from elbow (27) and remove hose.
16. Remove elbow (27) and preformed packing (28) from secondary fuel filter (4). Discard preformed packing.



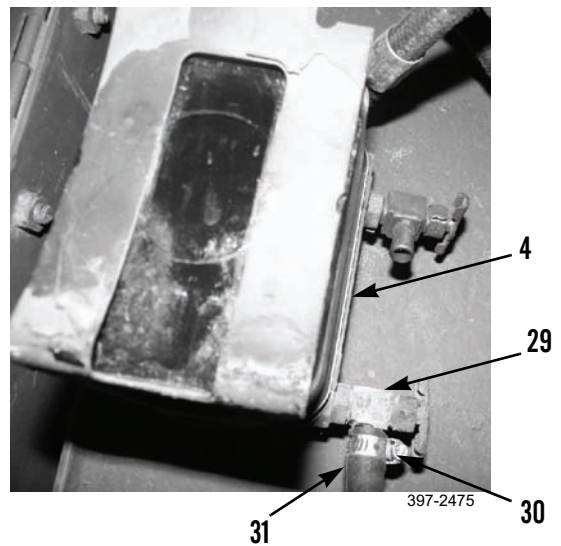17. Loosen clamp (30) and remove hose (31) from drain valve (29) on secondary fuel filter (4).



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**

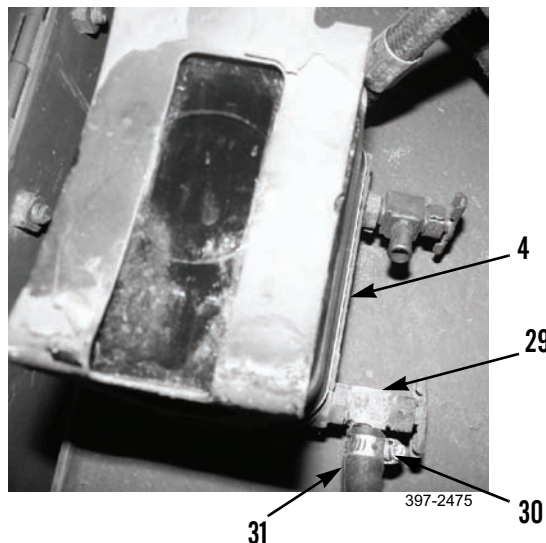
0042 00

INSTALLATION


CAUTION

Hose (31) is a drain and hangs free. Do not plug open end of hose or damage could result to equipment.

1. Install clamp (30) and hose (31) to drain valve (29) on secondary fuel filter (4).



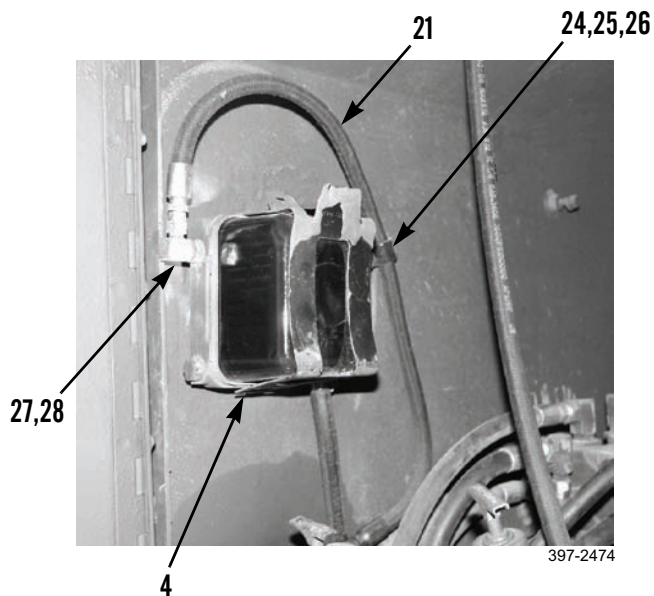2. Install preformed packing (28), elbow (27) on secondary fuel filter (4).
3. Connect hose (21).
4. Install clip (26), washer (25), and bolt (24).




**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**


0042 00

INSTALLATION - CONTINUED

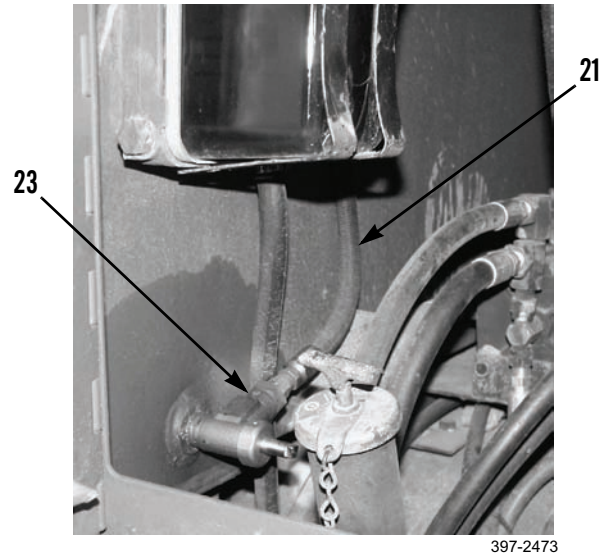5. Install hose (21) to valve (23).



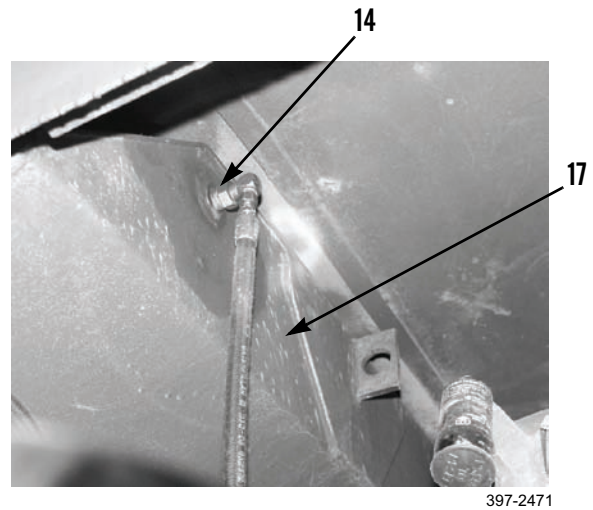6. Install bushing (14) to fuel tank (17).




**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**


0042 00

INSTALLATION - CONTINUED

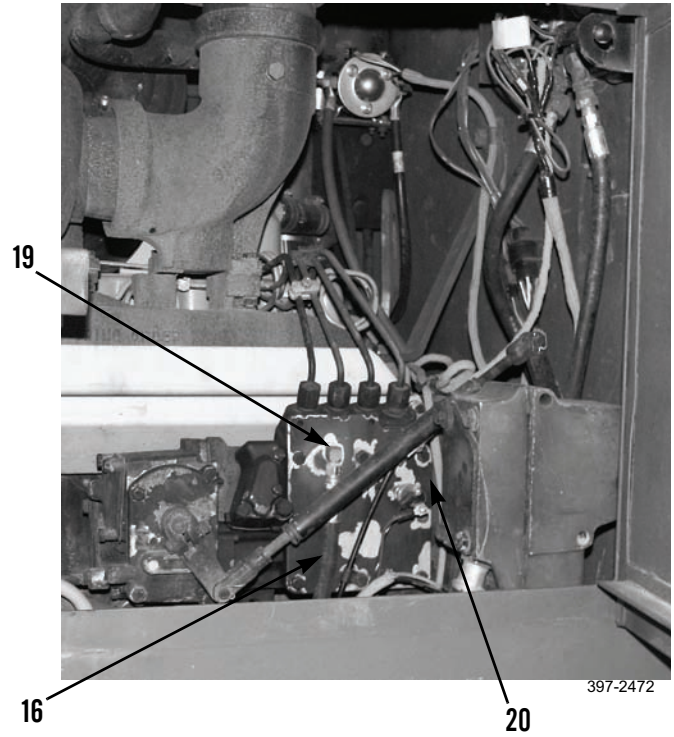7. Install elbow (19) on fuel injection pump (20).
8. Connect hose (16) to elbow (19).



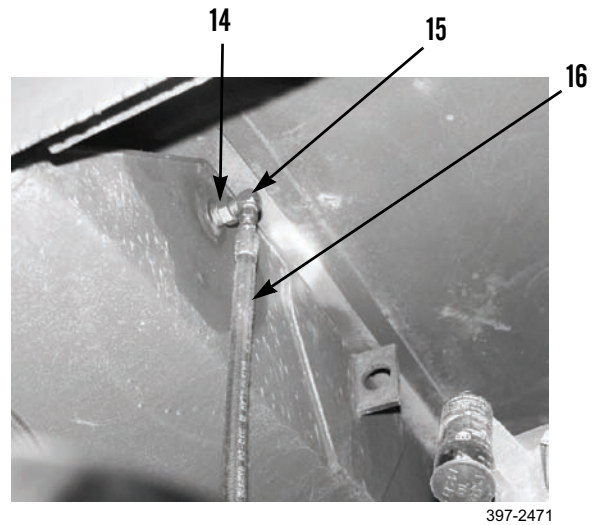9. Install elbow (15) on bushing (14).
10. Connect hose (16) to elbow (15).




**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**


0042 00

INSTALLATION - CONTINUED

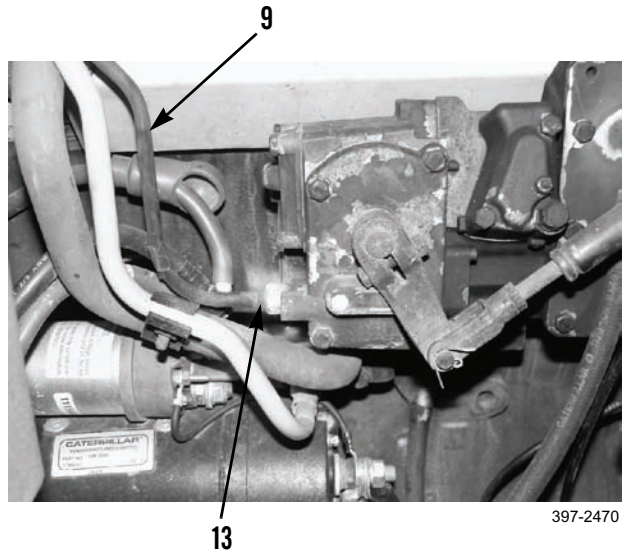11. Connect tube (9) to connector (13).



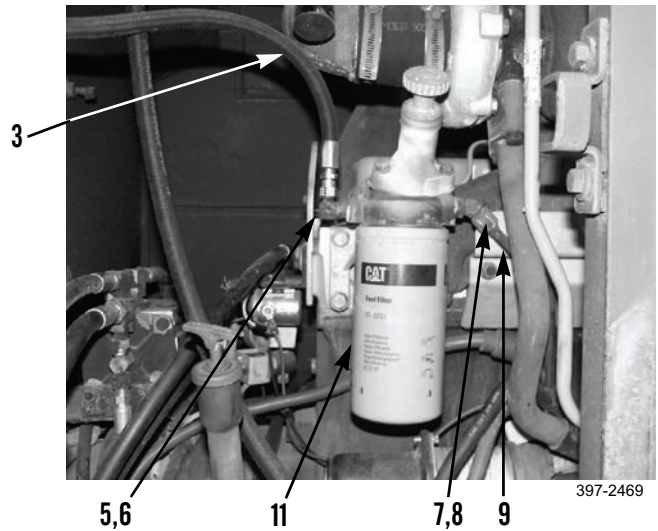12. Install elbow (7) and new preformed packing (8) on primary fuel filter base (11).
13. Connect tube (9) to elbow (7).
14. Install new preformed packing (6) and elbow (5) on primary fuel filter base (11).
15. Connect hose (3) to elbow (5).




**FUEL TANK HOSES, LINES, AND FITTINGS REPLACEMENT
(MODELS 130GS AND 130GNS) - CONTINUED**

0042 00

INSTALLATION - CONTINUED

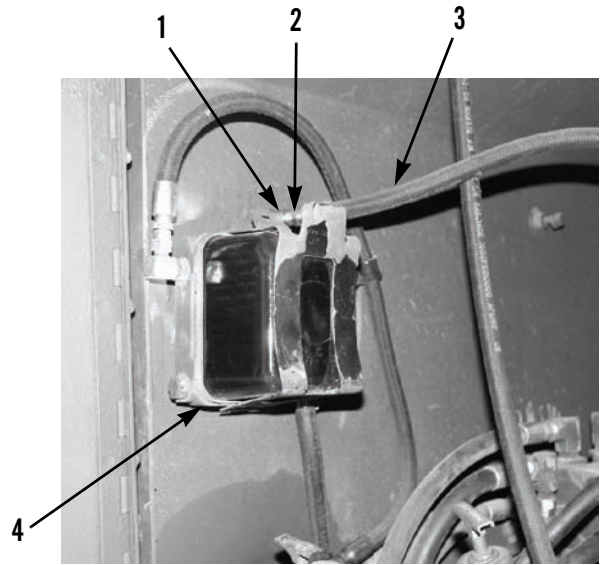16. Install new preformed packing (2) and elbow (1) on secondary fuel filter (4).
17. Connect hose (3) to elbow (1).



397-2468

18. Bleed all lines (WP 0025 00).
19. Fill fuel tank (TM 5-3805-261-10).
20. Open fuel intake valve (WP 0025 00).
21. Install right side engine panel (WP 0182 00).

END OF WORK PACKAGE

FUEL TANK CAP MAINTENANCE

0043 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Gasket (2)

Strainer (2)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

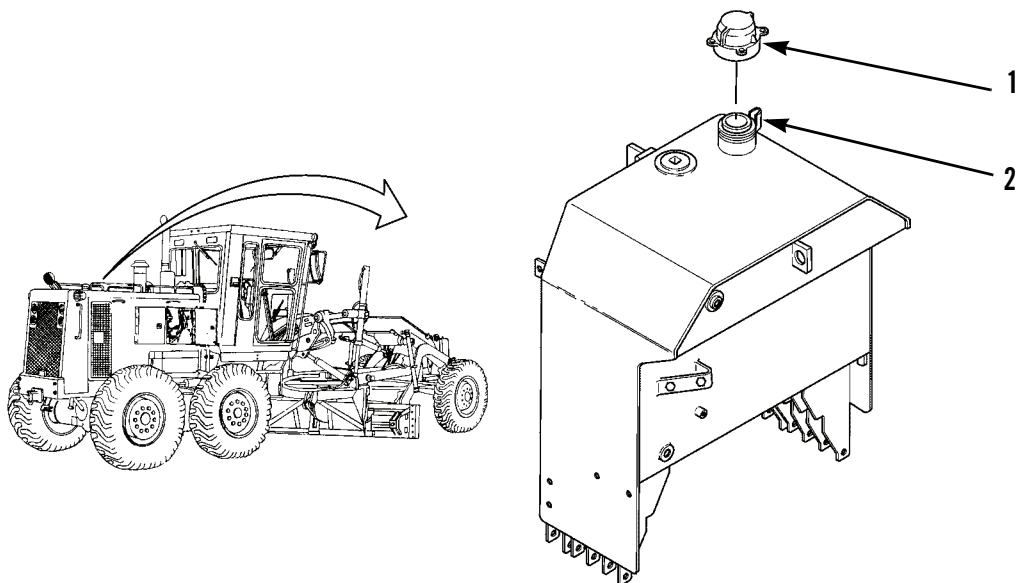


WARNING

- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may result in injury or death to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections or maintenance while smoking or near fire, flames or sparks. Fuel may ignite, causing injury or death to personnel or damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.

REMOVAL


Remove cap assembly (1) from tank filler neck (2) on top-left rear of machine.



397-135

DISASSEMBLY

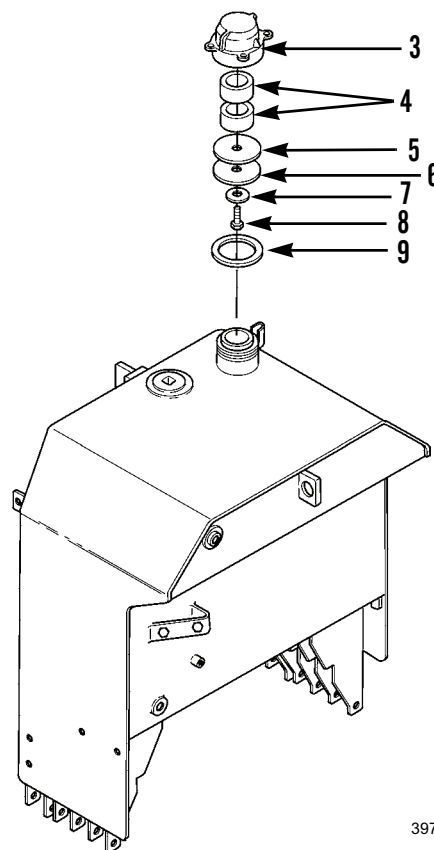1. Remove gasket (9) from cap (3). Discard gasket.
2. Remove screw (8) and washer (7).
3. Remove baffle (6) and gasket (5). Discard gasket.
4. Remove and discard two strainers (4).



397-136

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Turn cap (3) upside down on level surface and install two new strainers (4).
2. Install new gasket (5) and baffle (6).
3. Install washer (7) and screw (8).
4. Install new gasket (9) inside cap (3).

INSTALLATION

Install cap assembly (1) on tank filler neck (2) on top-left rear of machine.

END OF WORK PACKAGE

FUEL TANK MAINTENANCE

0044 00

THIS WORK PACKAGE COVERS

Draining, Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 2 (Item 76, WP 0348 00)

Sling (Item 78, WP 0348 00)

Wrench, torque (Item 95, WP 0348 00)

Lifting device, 500-lb capacity

Wood blocks

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Detergent (Item 11, WP 0349 00)

Fuel (Item 13, 14, or 15, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Personnel Required

Two

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Engine hood assembly removed (WP 0181 00)

Left and right side engine panels removed (WP 0182 00)

Primary fuel filter/priming pump and mounting removed (WP 0045 00 or WP 0046 00)

Ether start aid assembly removed (WP 0050 00)

Alternator mounting removed (WP 0066 00)

Radiator drained (WP 0065 00)

Fuel tank cap removed (WP 0043 00)



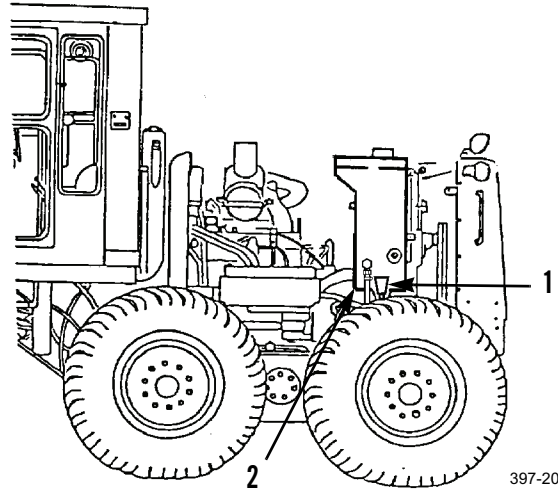
WARNING

- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may result in death or injury to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections, or maintenance while smoking or near fire, flames, or sparks. Fuel may ignite, causing injury or death to personnel or damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.

DRAINING**NOTE**

Fuel tank capacity is 75 gal. (284 L). Use suitable container to drain fuel from tank.


Position container under valve (1), open valve, and drain fuel from tank (2). Close valve.



397-2029

REMOVAL

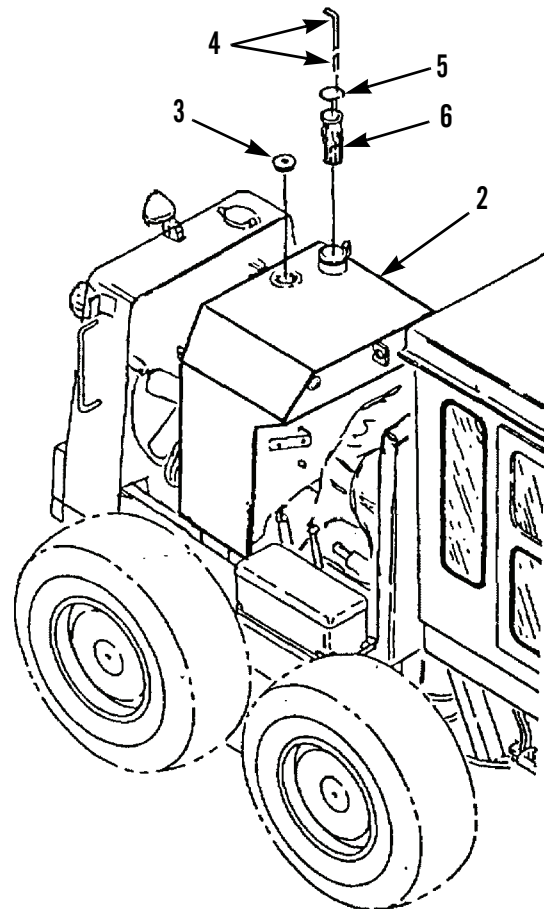1. Remove plunger (4), ring (5), and strainer (6) from top-left of fuel tank (2).
2. Remove plug (3).




397-137

REMOVAL - CONTINUED

CAUTION


Cap all hose and tube ends to prevent contamination.

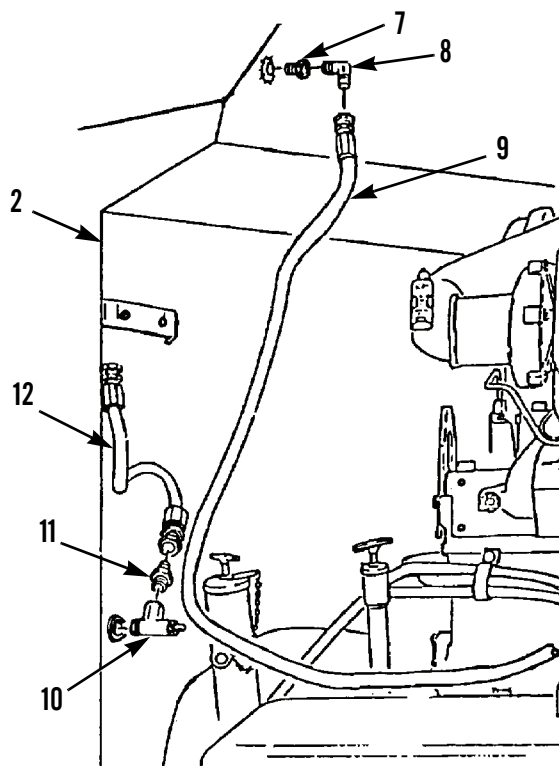3. Disconnect hose assembly (9) in front-upper-right of fuel tank (2).
4. Remove elbow (8) and bushing (7).
5. Remove hose assembly (12) from lower-right of fuel tank (2).
6. Remove connector (11) and valve (10).



397-138

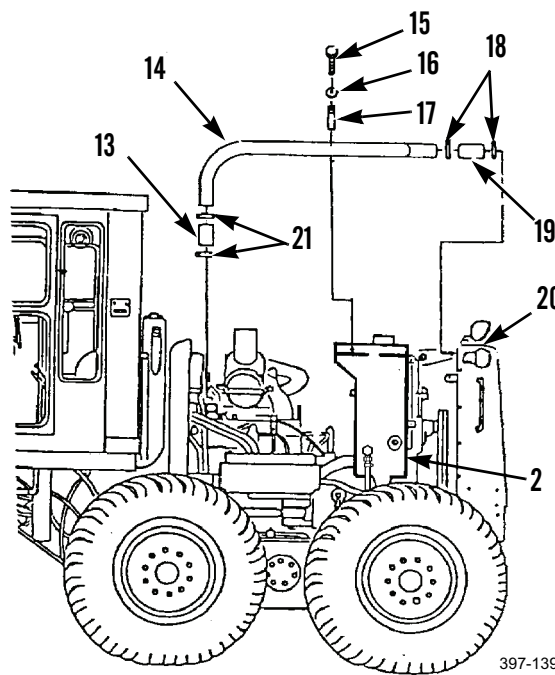
7. Remove bolt (15), washer (16), and clip (17) from tube (14) in top-left of fuel tank (2).
8. Loosen two clamps (18) in front, top-left-side of radiator (20).
9. Disconnect hose (19) by sliding off neck of radiator (20).
10. Remove two clamps (18).
11. Loosen two clamps (21) from top of engine.
12. Disconnect hose (13) by sliding off neck of temperature regulator housing.
13. Remove two clamps (21).
14. Remove tube (14) from machine.
15. Remove hoses (13 and 19) from tube (14).



397-139

REMOVAL - CONTINUED

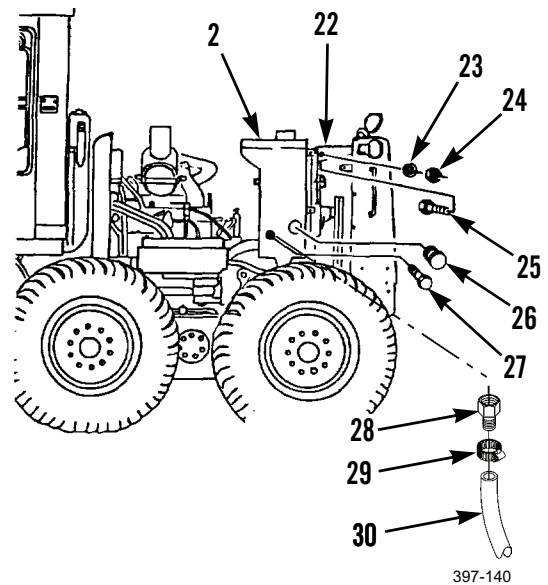16. Remove two nuts (24), washers (23), and bolts (25) from center-top of fuel tank (2).
17. Remove nut (24), washer (23), bolt (25), and plate (22) from upper-inside of radiator support.
18. Remove bolt (27) and plug (26) from left side of fuel tank (2).
19. Loosen clamp (29) and remove hose (30), clamp, and valve (28).




WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Fuel tank weighs 334 lb (152 kg).

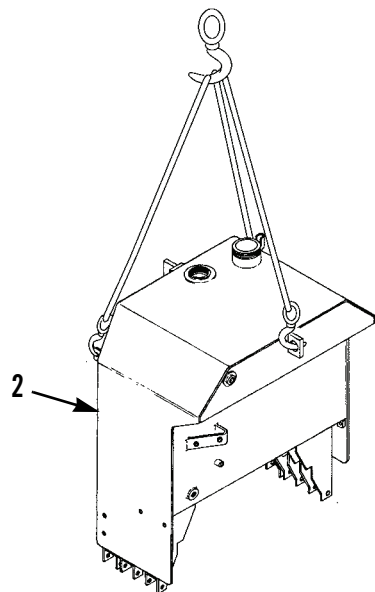
20. Attach sling to fuel tank (2). Take up slack on sling.



397-141

REMOVAL - CONTINUED

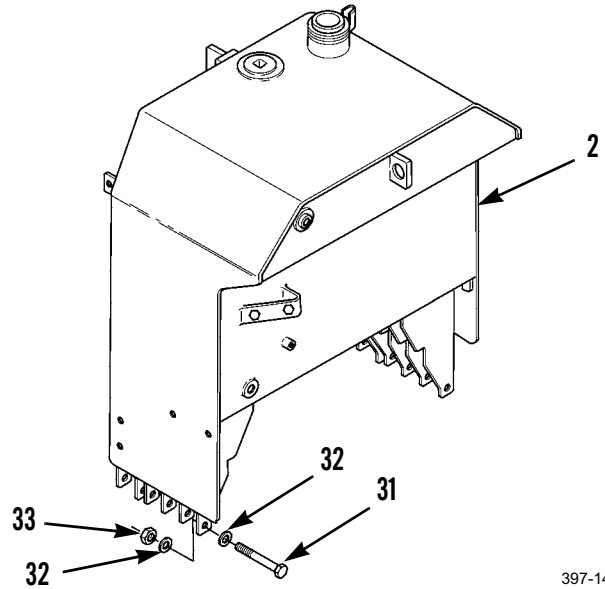21. Remove three nuts (33), six washers (32), and three bolts (31) from lower sides of fuel tank (2).
22. Use sling to lift fuel tank (2) up 6 in. (15 cm) and remove fuel tank from machine.
23. Support fuel tank (2) on wood blocks.



397-142

24. Remove sling.

CLEANING AND INSPECTION**WARNING**

Compressed air used for cleaning purposes must not exceed 30 psi (207 kPa). DO NOT direct compressed air against human skin. Make sure air stream is directed away from user and other personnel in the area. Wear protective goggles or face shield. Failure to follow this warning may cause injury to personnel.

1. Steam clean fuel tank. Dry thoroughly with compressed air.
2. Clean and inspect all other parts in accordance with WP 0020 00.


INSTALLATION**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE


Fuel tank weighs 334 lb (152 kg).

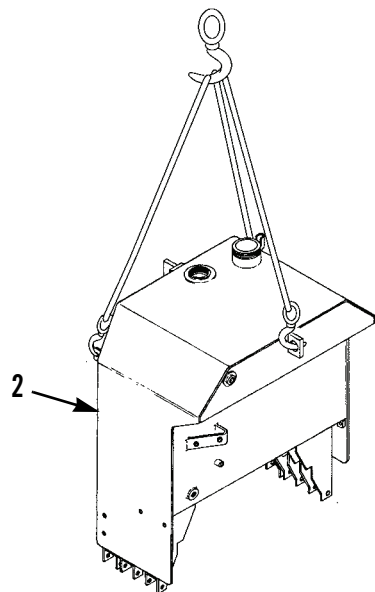1. Attach sling to fuel tank (2) and position on machine.
2. Install fuel tank (2) on mounting, aligning mounting holes with prybar.
3. Remove sling.



397-141

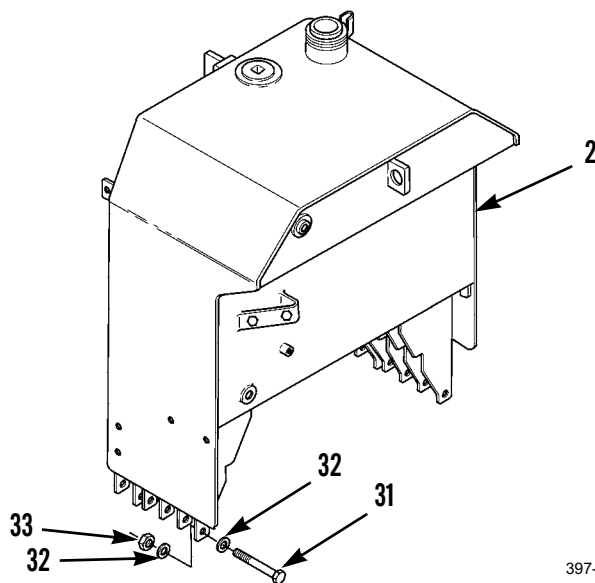
4. Install three bolts (31), six washers (32), and three nuts (33) on lower sides of fuel tank (2).




397-142

INSTALLATION - CONTINUED

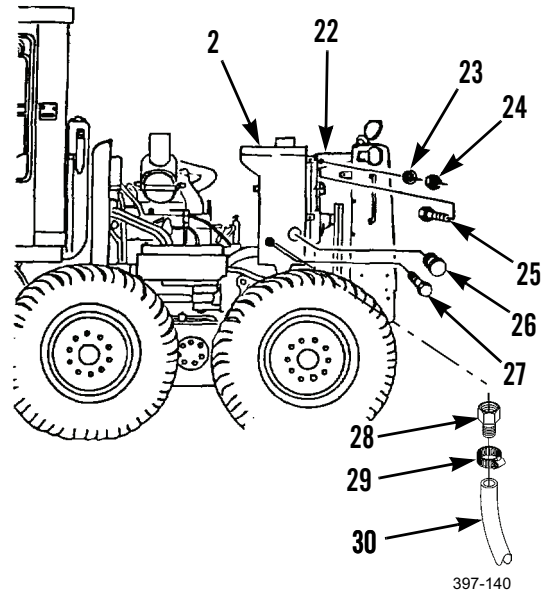5. Install valve (28), hose (30), and clamp (29).
6. Install plug (26) and bolt (27) on left side of fuel tank (2). Tighten bolt to 180 lb-in. (20 Nm).
7. Position plate (22) on front-upper-inside of radiator support.
8. Install bolt (25), washers (23), and nuts (24) on center-top-rear of fuel tank, securing plate (22) to fuel tank (2).
9. Install two bolts (25), washers (23), and nuts (24) on center of fuel tank (2).




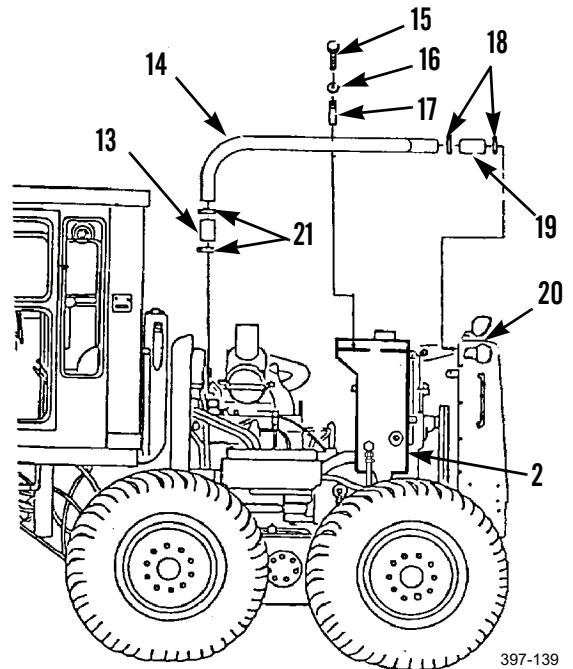10. Install hoses (13 and 19) on tube (14) in top of engine compartment.
11. Position four clamps (18 and 21) on tube (14).
12. Install tube (14) on temperature regulator housing.
13. Install hose (13) in top of engine, sliding over temperature regulator housing.
14. Tighten two clamps (21).
15. Install hose (19) in left-top of radiator (20), sliding over neck of radiator.
16. Tighten two clamps (18).
17. Install clip (17), washer (16), and bolt (15) in left-top of engine, securing tube (14) to fuel tank (2).




INSTALLATION - CONTINUED

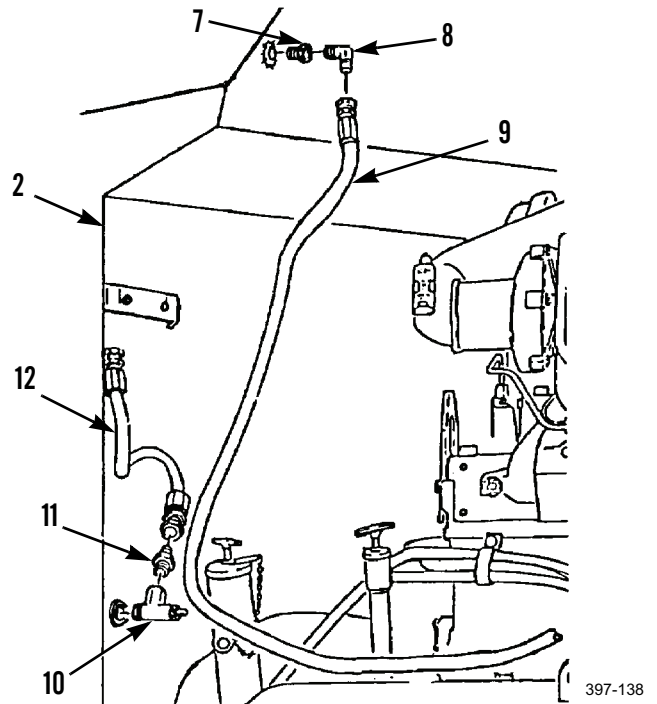18. Install connector (11) and valve (10) in lower-right side of fuel tank (2).
19. Connect hose assembly (12).
20. Install bushing (7) and elbow (8) in upper-right side of fuel tank (2).
21. Install hose assembly (9).




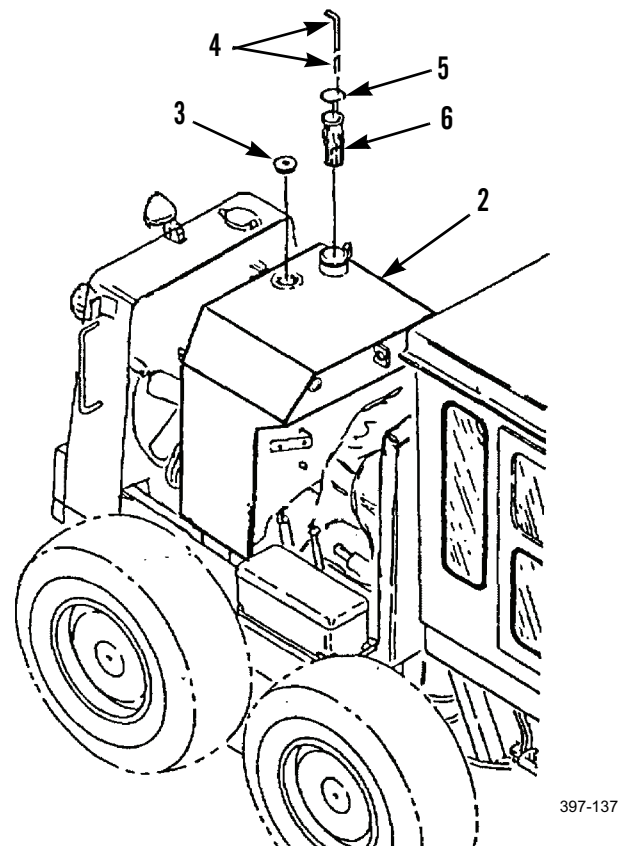22. Install plug (3) in top of fuel tank (2).
23. Install strainer (6), ring (5), and plunger (4).



INSTALLATION - CONTINUED

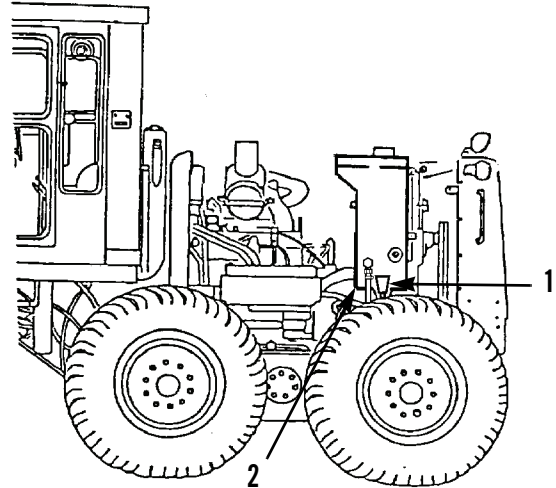24. Install primary fuel filter/primary pump and mounting (WP 0045 00 or WP 0046 00).
25. Install ether aid start assembly (WP 0050 00).
26. Install alternator mounting (WP 0066 00).
27. Install engine hood assembly (WP 0181 00).
28. Fill radiator (WP 0065 00).
29. Ensure drain valve (1) is closed.
30. Fill tank with fuel (TM 5-3805-261-10).
31. Install fuel tank cap (WP 0043 00).



397-2029

32. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
33. Check for leaks. Stop engine.
34. Install left and right engine side panels (WP 0182 00).

END OF WORK PACKAGE

**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE)**

0045 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

WP 0035 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Filter element

Gasket (2)

Packing, preformed (4)

Ring, retaining (3)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Right side engine doors opened (TM 5-3805-261-10)



WARNING

- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may result in injury or death to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections, or maintenance while smoking or near fire, flames, or sparks. Fuel may ignite, causing injury or death to personnel or damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.

**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0045 00

REMOVAL**NOTE**

If only replacing the filter element, perform steps 1 and 2 of *Removal*, step 1 of *Disassembly*, step 8 of *Assembly*, and steps 6 through 8 of *Installation*.

1. Turn valve (11), in front-lower-right of fuel tank, to the right to shut off fuel.
2. Hold nut (3) and loosen body (10) by turning left and remove body.

CAUTION

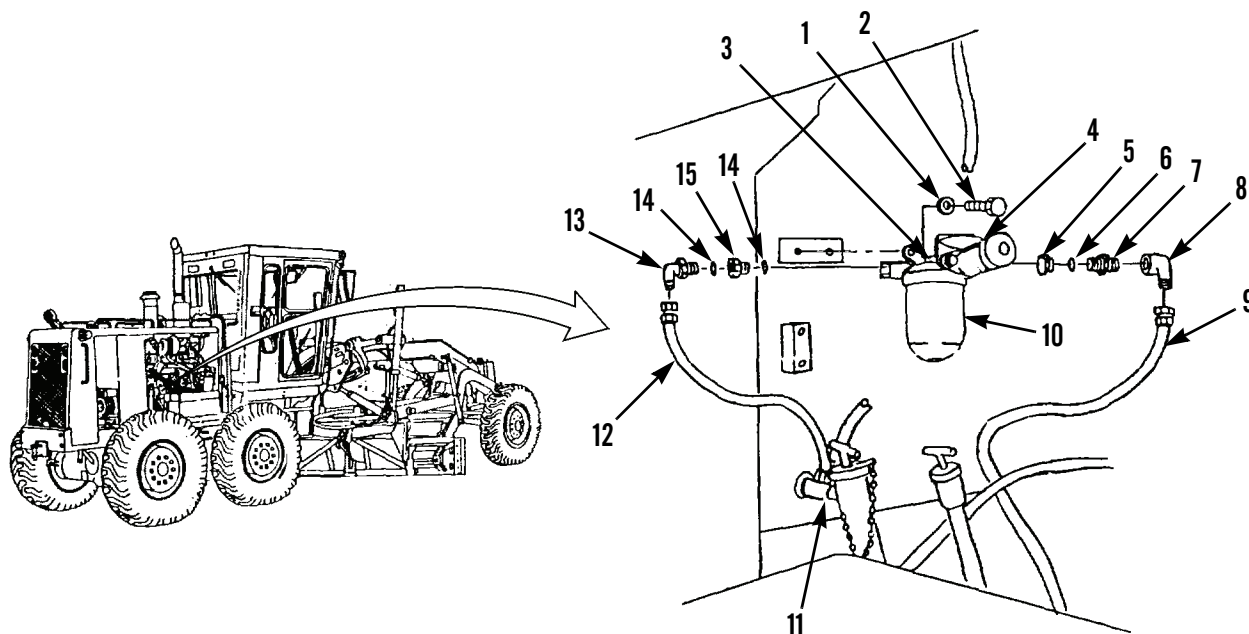
Cap all hose and tube ends to prevent contamination.

3. Disconnect hose assembly (9) in front of fuel tank.
4. Remove elbow (8), connector (7), preformed packing (6), and valve (5). Discard preformed packing.
5. Disconnect hose assembly (12).

NOTE

Drain fuel left in primary fuel filter/priming pump into pan.

6. Remove two bolts (2), washers (1), and primary fuel filter/priming pump (4).
7. Remove elbow (13), two preformed packings (14), and adapter (15). Discard preformed packings.




397-143

**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0045 00


DISASSEMBLY

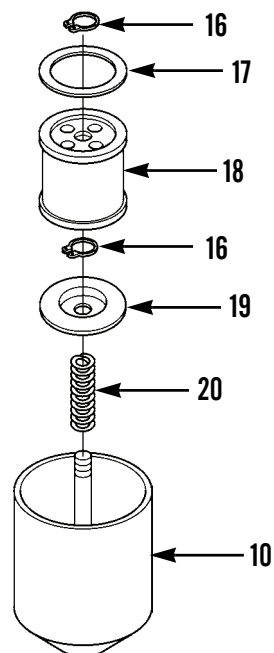1. Remove and discard retaining ring (16), gasket (17), and filter element (18) from body (10).
2. Compress spring (20).
3. Remove and discard retaining ring (16).
4. Remove retainer (19) and spring (20).



397-145

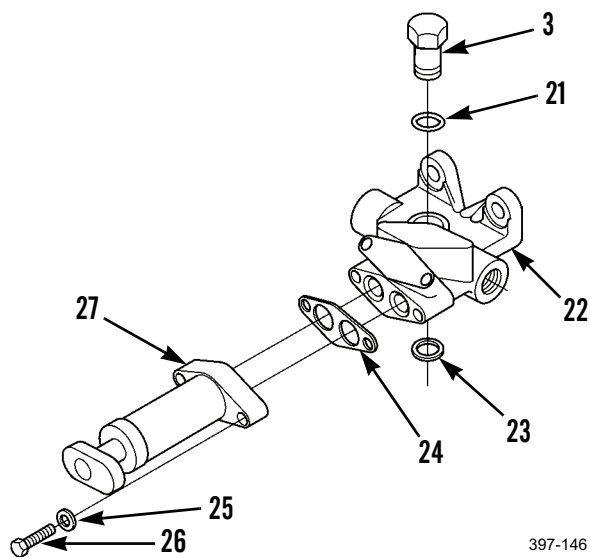5. Remove retaining ring (23) from nut (3). Discard retaining ring.
6. Remove nut (3) and preformed packing (21). Discard preformed packing.
7. Remove two bolts (26) and washers (25).
8. Remove priming pump (27) and gasket (24) from base (22). Discard gasket.



397-146

**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

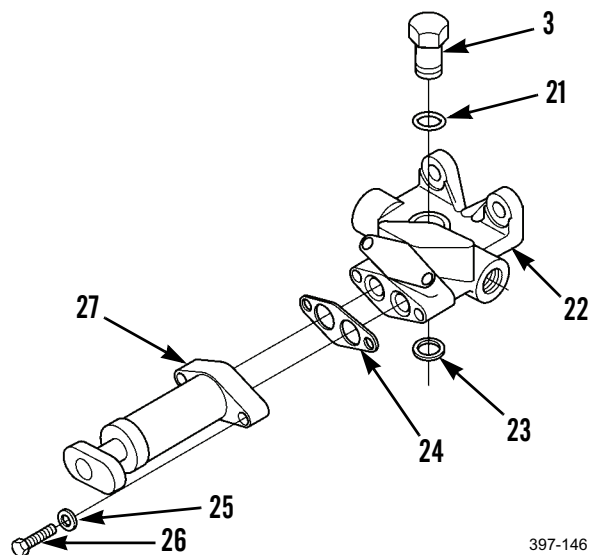
0045 00

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


ASSEMBLY

1. Install new gasket (24) and priming pump (27) on base (22).
2. Install two washers (25) and bolts (26).
3. Install new preformed packing (21) and nut (3).
4. Install new retaining ring (23) in groove of nut (3).



397-146

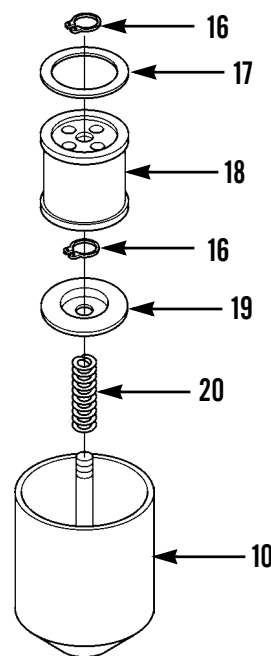5. Install spring (20) and retainer (19) in body (10).
6. Compress spring (20).
7. Install new retaining ring (16) in groove of rod of body (10).
8. Install new filter element (18), new gasket (17), and new retaining ring (16).




397-145

**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0045 00

INSTALLATION

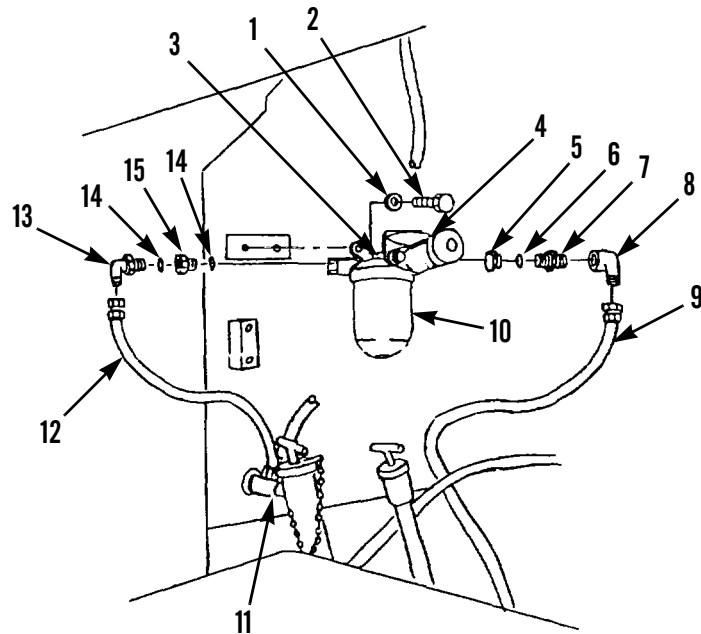1. Install adapter (15), two preformed packings (14), and elbow (13).
2. Install primary fuel filter/priming pump (4), two washers (1), and bolts (2).
3. Connect hose assembly (12).
4. Install valve (5), new preformed packing (6), connector (7), and elbow (8).
5. Connect hose assembly (9).
6. Install body (10) on primary fuel filter/priming pump (4).
7. Tighten nut (3) to 18 lb-ft (24 Nm).
8. Turn valve (11), in front-lower-right of fuel tank, to the left to open.



397-143

9. Bleed air from fuel line system (WP 0035 00).
10. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
11. Check for leaks. Stop engine.
12. Close right side engine door (TM 5-3805-261-10).

END OF WORK PACKAGE

**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130GS AND 130GNS)**

0046 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0020 00

WP 0035 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Filter element

Engine off (TM 5-3805-261-10)

Gasket

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Packing, preformed (3)

Right side engine doors opened (TM 5-3805-261-10)

**WARNING**

- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may result in injury or death to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections, or maintenance while smoking or near fire, flames, or sparks. Fuel may ignite, causing injury or death to personnel or damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.

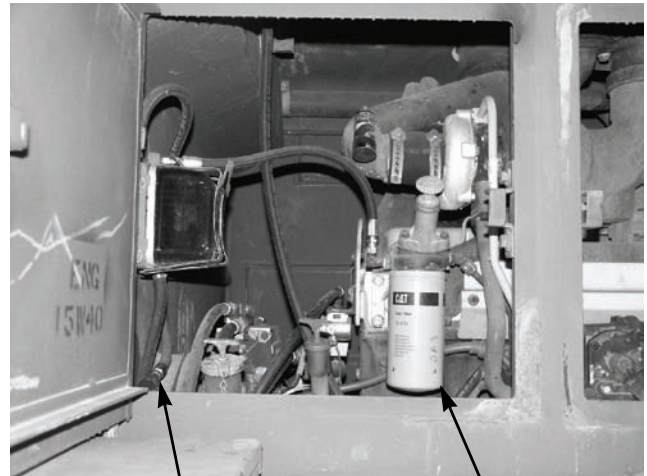
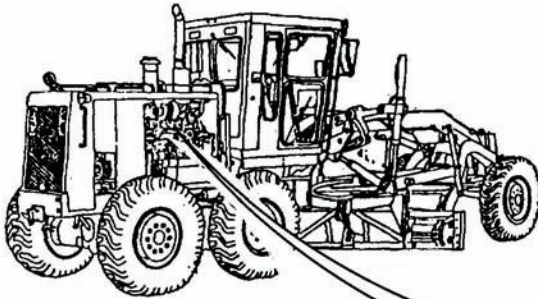
**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130GS AND 130GNS) - CONTINUED**

0046 00

REMOVAL**NOTE**

If only replacing the filter element, perform steps 1 and 2 of *Removal* and Steps 7 and 8 of *Installation*.

1. Turn valve (7), in front-lower-right of fuel tank, to the right to shut off fuel.
2. Remove filter element (3) by turning left.



7

3

**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130GS AND 130GNS) - CONTINUED**

0046 00

REMOVAL - CONTINUED**CAUTION**

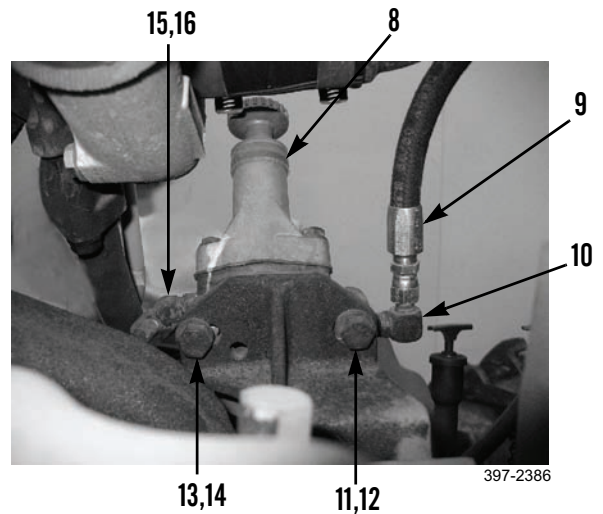
Cap all hose assembly ends to prevent contamination.

3. Disconnect hose assembly (9) and remove elbow (10).
4. Disconnect tube assembly (15).


NOTE

Drain fuel left in primary fuel filter/priming pump into pan.

5. Remove elbow (16).
6. Remove two bolts (11 and 13), washers (12 and 14), and primary fuel filter/priming pump (8).



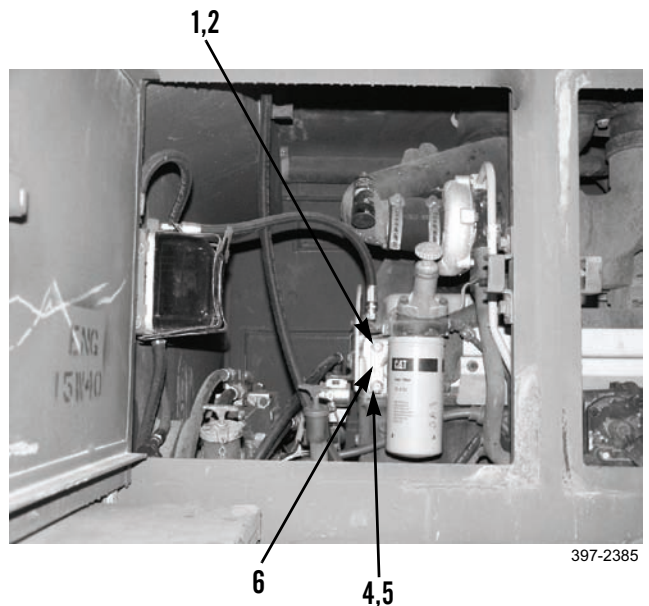7. Remove two bolts (1 and 4) and two washers (2 and 5) and support (6).




**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130GS AND 130GNS) - CONTINUED**

0046 00

DISASSEMBLY

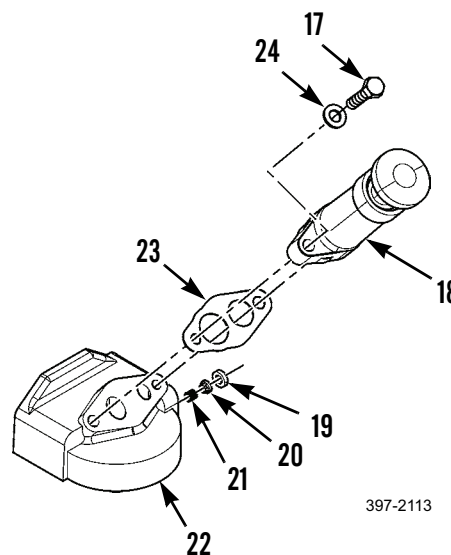1. Remove two bolts (17) and washers (24).
2. Remove priming pump (18) and gasket (23) from base (22). Discard gasket.
3. Remove seat (19), disk (20), and spring (21) from base (22).



CLEANING AND INSPECTION

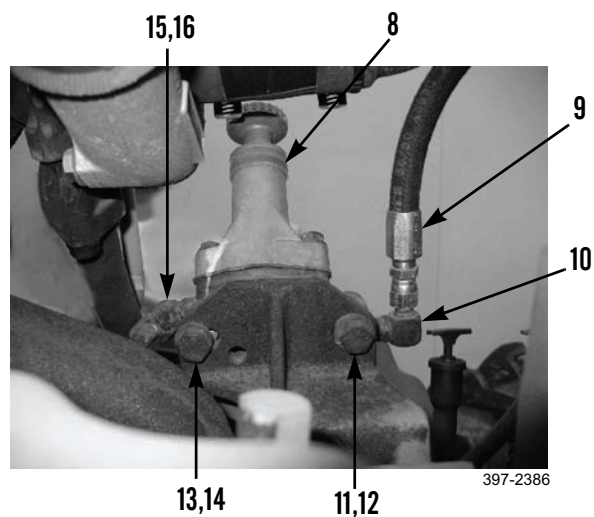
Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Install spring (21), disk (20), and seat (19) in base (22).
2. Install new gasket (23) and priming pump (18) on base (22).
3. Install two washers (24) and bolts (17).

INSTALLATION

1. Install support (6), two bolts (1 and 4), and washers (2 and 5).
2. Install elbow (16).
3. Install primary fuel filter/priming pump (8), two washers (12 and 14), and bolts (11 and 13).
4. Connect tube assembly (15).
5. Install elbow (10) and connect hose assembly (9).




**PRIMARY FUEL FILTER/PRIMING PUMP AND MOUNTING MAINTENANCE
(MODELS 130GS AND 130GNS) - CONTINUED**

0046 00

INSTALLATION - CONTINUED

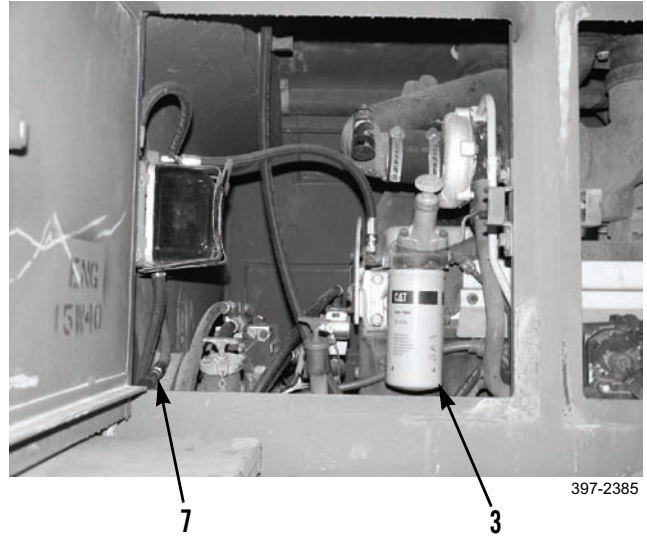6. Install new filter element (3) by turning right.
7. Turn valve (7), in front-lower-right of fuel tank, to the left to open.



8. Bleed air from fuel in line system (WP 0035 00).
9. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
10. Check for leaks. Stop engine.
11. Close right side engine doors (TM 5-3805-261-10).

END OF WORK PACKAGE

**SECONDARY FUEL FILTER AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE)**

0047 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

WP 0035 00

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Wrench, torque (Item 97, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Fuel (Item 13, 14, or 15, WP 0349 00)

Engine off (TM 5-3805-261-10)

Rag, wiping (Item 35, WP 0349 00)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Sealing compound (Item 39, WP 0349 00)

Fuel pressure switch removed (not necessary if just replacing filter element) (WP 0115 00)

Filter element

Gasket

Right side engine doors opened (TM 5-3805-261-10)

Packing, preformed (2)



WARNING

- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may result in death or injury to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections, or maintenance while smoking or near fire, flames, or sparks. Fuel may ignite, causing injury or death to personnel or damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.

**SECONDARY FUEL FILTER AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0047 00

REMOVAL

NOTE

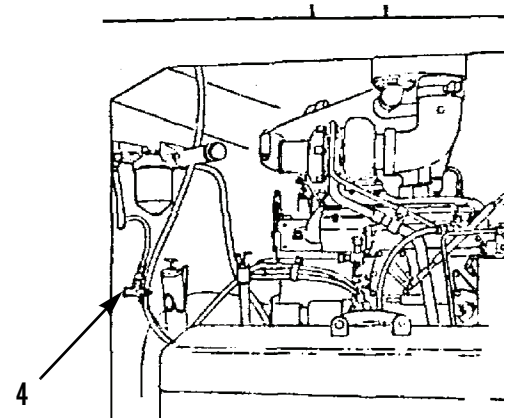
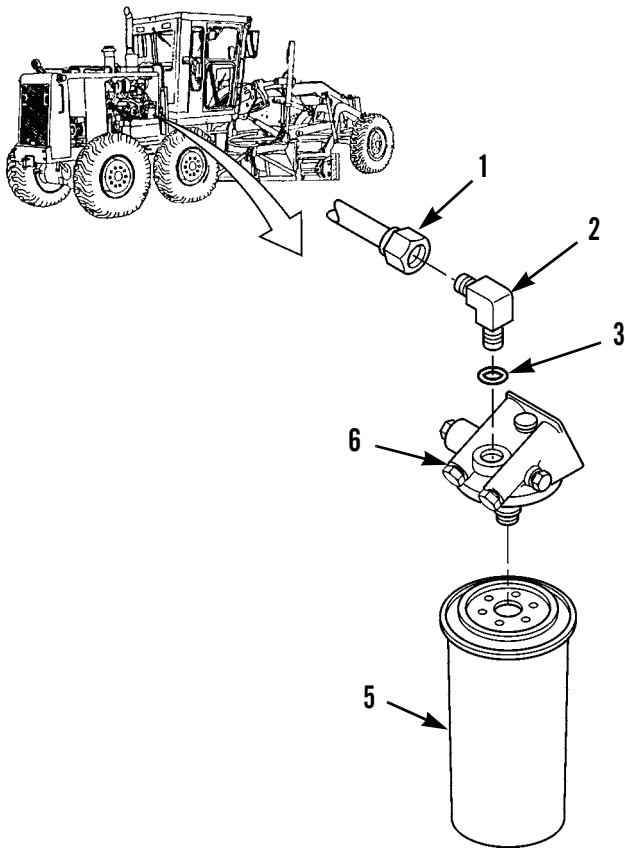
If only replacing filter element, perform steps 1 and 2 of *Removal* and step 2 of *Installation*.

1. Turn valve (4), in front-lower-right of fuel tank, to the right to shut off fuel.
2. Remove and discard filter element (5).

CAUTION

Cap all hose and tube ends to prevent contamination.

3. Disconnect tube assembly (1) from elbow (2).
4. Remove elbow (2) and preformed packing (3) from base (6). Discard preformed packing.




397-148

**SECONDARY FUEL FILTER AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0047 00

REMOVAL - CONTINUED

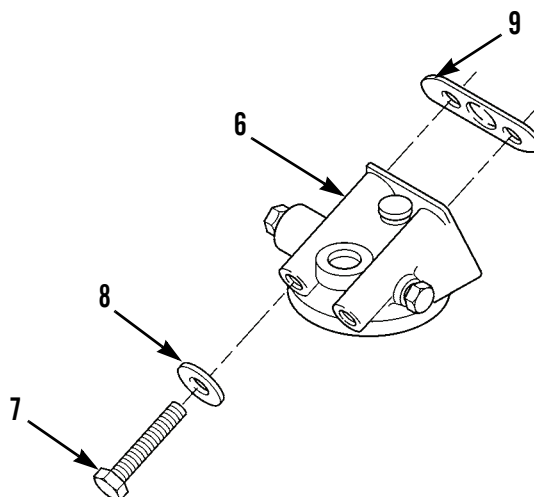- Remove two bolts (7), washers (8), base (6), and gasket (9). Discard gasket.



397-149

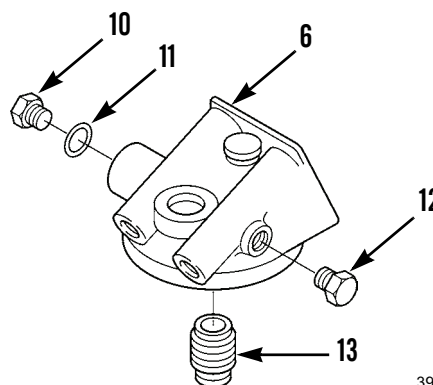
DISASSEMBLY

- Remove plug (10) and preformed packing (11) from base (6). Discard preformed packing.
- Remove plug (12).

NOTE

Remove stud only if inspection indicates replacement is necessary.

- If necessary, remove stud (13) from base (6).



397-152

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

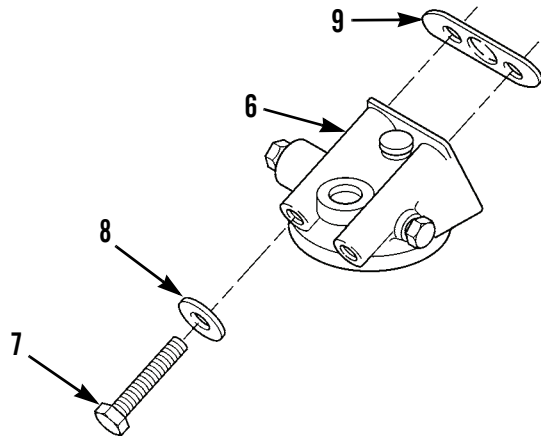
- If removed, coat threads of stud (13) with sealing compound and install in base (6). Tighten to 50 lb-ft (68 Nm).
- Install plug (12).
- Install new preformed packing (11) and plug (10) to base (6).

**SECONDARY FUEL FILTER AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0047 00



INSTALLATION

1. Install new gasket (9), base (6), two washers (8), and bolts (7).



397-149

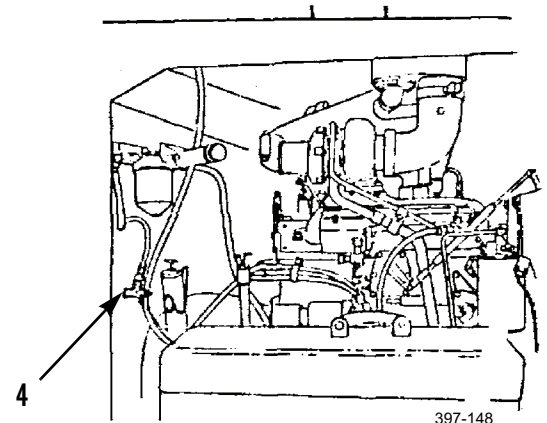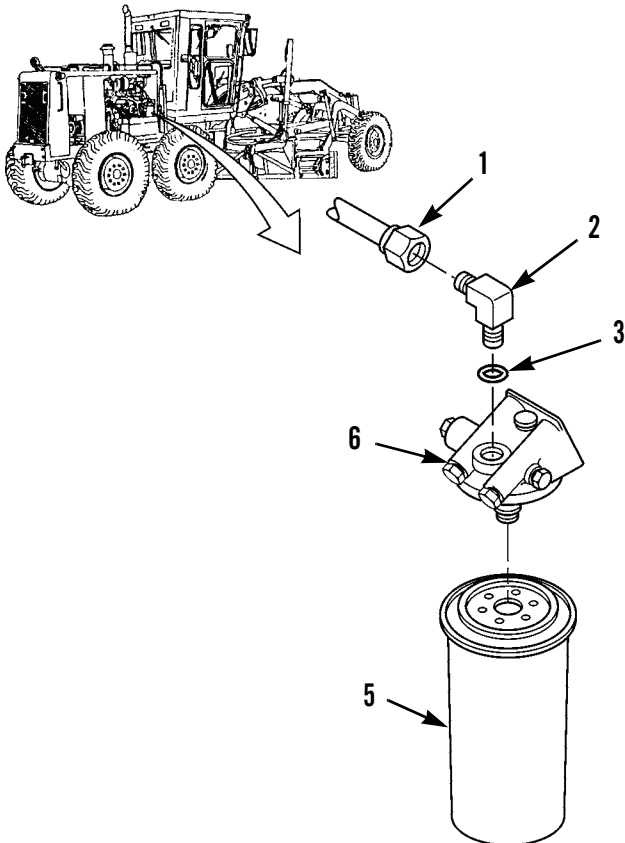2. Lubricate seal of new filter element (5) with clean fuel and install, turning right until contact between seal of element and base (6) is made. Tighten an additional one turn.
3. Install new preformed packing (3) and elbow (2).
4. Install tube assembly (1) to elbow (2).
5. Install fuel pressure switch (WP 0115 00).
Turn valve (4), in front-lower-right of fuel tank, left to open.



397-148

**SECONDARY FUEL FILTER AND MOUNTING MAINTENANCE
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0047 00

INSTALLATION - CONTINUED

6. Turn priming pump knob on right side of fuel tank to the left to release pump knob.
7. Pump until pressure makes knob difficult to pump.
8. Turn knob right to lock in place.
9. Turn fuel injection pump valve, on right side of engine, to the left to open, allowing air to release through hose outlet at lower part of engine. Close valve.

NOTE

Repeat steps 7 through 10 until fuel, flowing through drain hose, is free of all air bubbles.

10. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
11. Check for leaks. Stop engine.

NOTE

If engine was running roughly, perform the next step. If not, proceed to step 14.

12. Bleed air from fuel injection pump lines in top of fuel injection pump (WP 0035 00).
13. Close right side engine doors (TM 5-3805-261-10).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Fuel (Item 13, 14, or 15, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Sealing compound (Item 39, WP 0349 00)

Filter element

Gasket

Lockwasher (2)

References

WP 0020 00

WP 0035 00

WP 0042 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Fuel pressure switch removed (not necessary if just replacing filter element) (WP 0115 00)

Right side engine doors opened (TM 5-3805-261-10)



WARNING

- DO NOT smoke or permit any open flame in area of machine while you are servicing fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may result in death or injury to personnel or damage to equipment.
- DO NOT perform fuel system checks, inspections, or maintenance while smoking or near fire, flames, or sparks. Fuel may ignite, causing injury or death to personnel or damage to equipment.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.

**SECONDARY FUEL FILTER AND MOUNTING MAINTENANCE
(MODELS 130GS AND 130GNS) - CONTINUED**

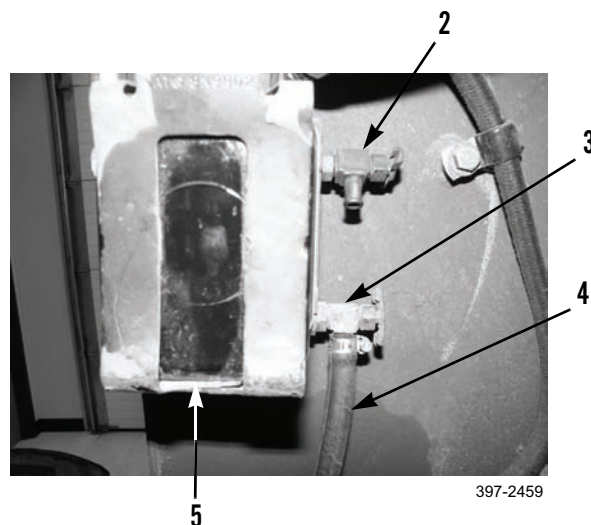
0048 00

REMOVAL

1. Place container under drain hose (4) and open petcocks (2 and 3) and drain element (5).
2. Grasp tabs of retaining clamp (1) and squeeze together to release clamp.
3. Remove element (5).



397-2458



397-2459

DISASSEMBLY

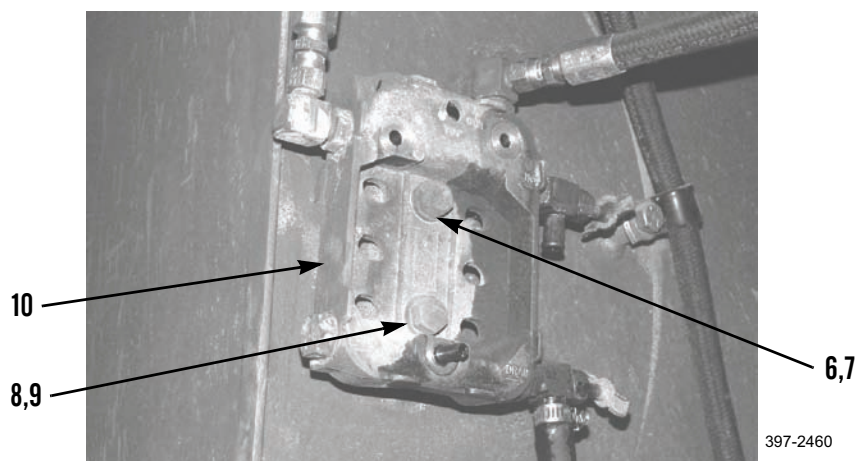
CAUTION

Cap all hose and tube ends to prevent contamination.

NOTE

Hoses and fittings need not be removed unless mounting base requires replacement.

1. Disconnect hoses and fittings in accordance with (WP 0042 00).
2. Remove two bolts (6 and 8) and lockwashers (7 and 9) and remove mounting base (10). Discard lockwashers.



397-2460

**SECONDARY FUEL FILTER AND MOUNTING MAINTENANCE
(MODELS 130GS AND 130GNS) - CONTINUED**

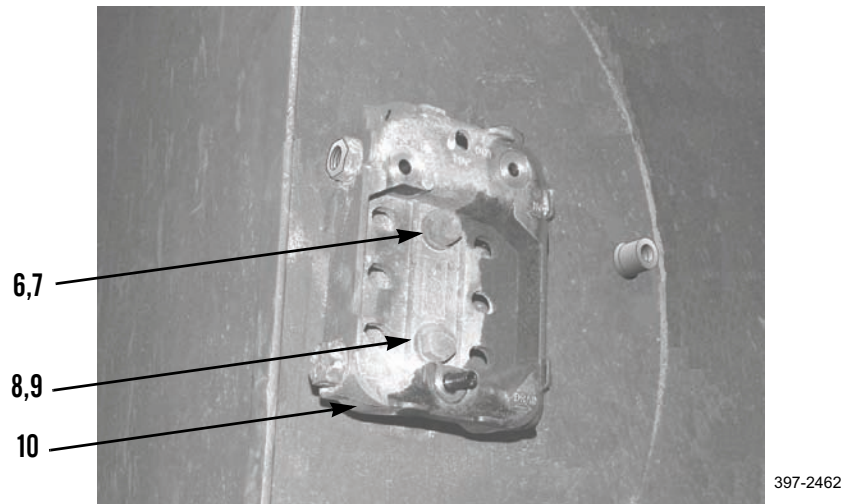
0048 00

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Install mounting base (10) with two bolts (6 and 8) and new lockwashers (7 and 9).



2. Install element (5) and retaining clamp (1).
3. Install fittings and connect hoses in accordance with WP 0042 00. Close lower pet cock (3).
4. Close upper petcock (2) and remove container.
5. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
6. Check for leaks. Stop engine.

NOTE

If engine was running roughly, perform the next step. If not, proceed to step 14.

7. Bleed air from fuel injection pump lines in top of fuel injection pump (WP 0035 00).
8. Close right side engine doors (TM 5-3805-261-10).

END OF WORK PACKAGE

ETHER STARTING AID CYLINDER REPLACEMENT**0049 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Cartridge, engine starting aid

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)



Right side screen door opened (WP 0055 00)

**WARNING**

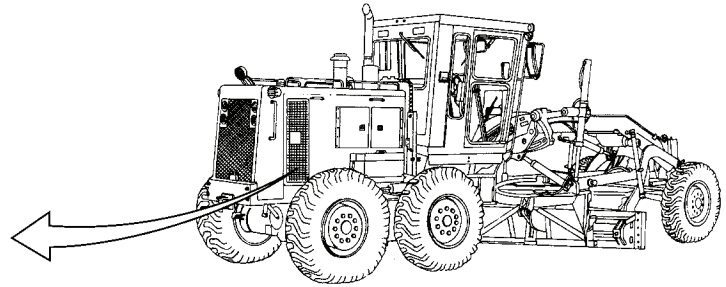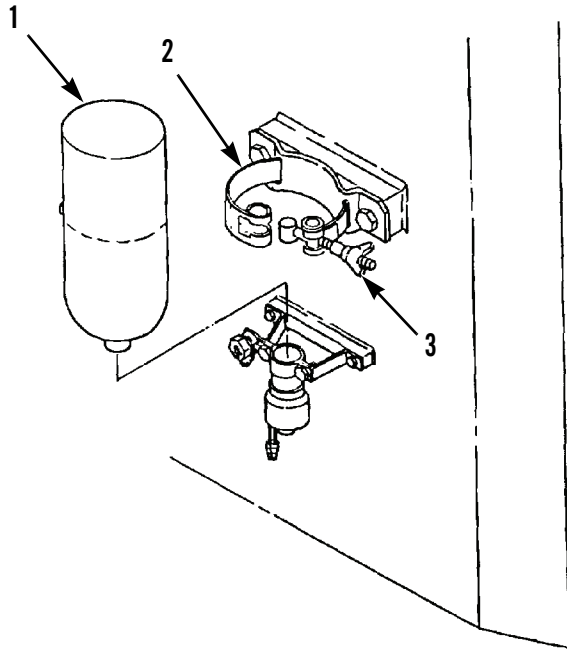Ether fuel is extremely flammable and toxic. DO NOT smoke and make sure you are in a well-ventilated area away from heat, open flames, or sparks. Wear eye protection. Avoid contact with skin and eyes and avoid breathing ether fumes. If fluid enters or fumes irritate the eyes, wash immediately with large quantities of clean water for 15 minutes. Seek medical attention immediately if ether is inhaled or causes eye irritation. Failure to follow this warning may cause injury or death to personnel.

REMOVAL

1. Loosen wing nut (3) and clamp (2) behind right fan guard.
2. Remove engine starting aid cartridge (1) by turning to the left. Dispose in accordance with local regulatory guidance.



397-155

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

Install protective cap on valve if cartridge is not to be replaced.

1. Install new engine starting aid cartridge (1) by turning to the right.
2. Tighten clamp (2) and wing nut (3).
3. Close right side screen door (WP 0055 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch to OFF position (TM 5-3805-261-10)

Ether starting aid cylinder removed (WP 0049 00)

Right side screen door opened (WP 0055 00)



WARNING



Ether fuel is extremely flammable and toxic. DO NOT smoke and make sure you are in a well-ventilated area away from heat, open flames or sparks. Wear eye protection. Avoid contact with skin and eyes and avoid breathing ether fumes. If fluid enters or fumes irritate the eyes, wash immediately with large quantities of clean water for 15 minutes. Seek medical attention immediately if ether is inhaled or causes eye irritation. Failure to follow this warning may cause death or serious injury to personnel.

REMOVAL

1. Remove two bolts (1), washers (2), and clamp (3) in right-rear side of fuel tank (4).

CAUTION

Cap all tube and hose ends and plug all open ports to prevent contamination.

NOTE

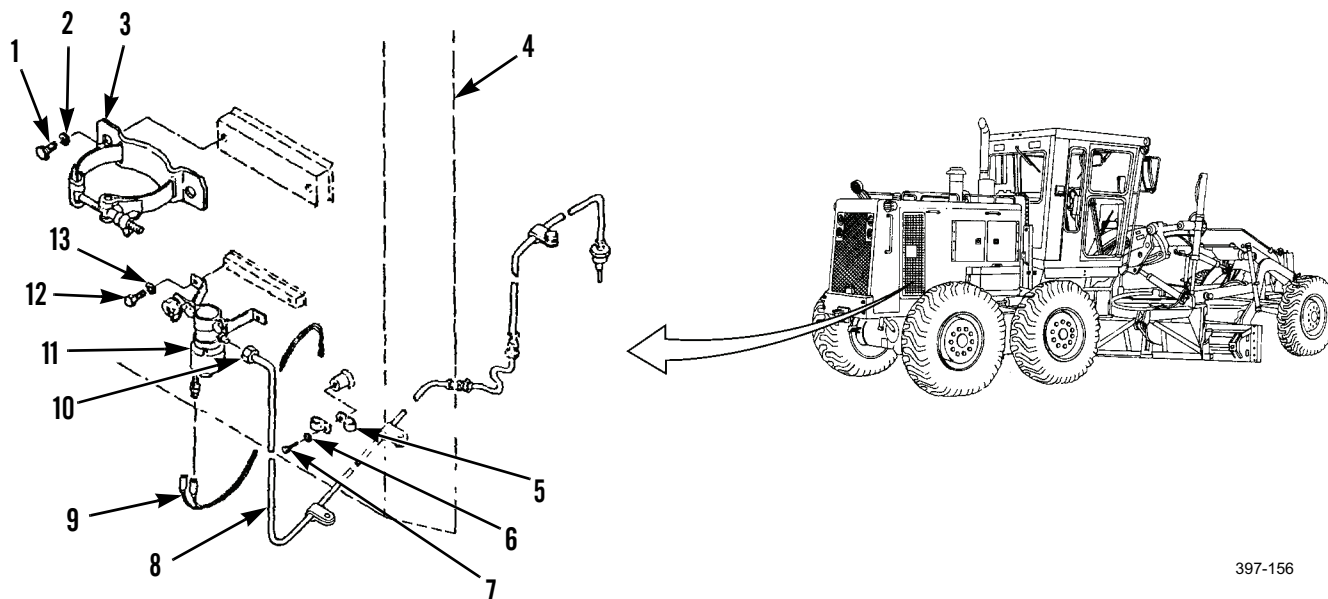
Tag tubes and hose before disconnecting to aid in installation.

2. Disconnect harness assembly (9) from valve (11) and bolt.
3. Remove bolt (7), washer (6), and clamp (5) from tube (8).
4. Loosen connector (10) and disconnect tube (8) from valve (11).

NOTE

Do not remove connector from tube unless inspection shows need for replacement.


5. Remove connector (10) from tube (8).
6. Remove two bolts (12), washers (13), and valve (11).




397-156

REMOVAL - CONTINUED

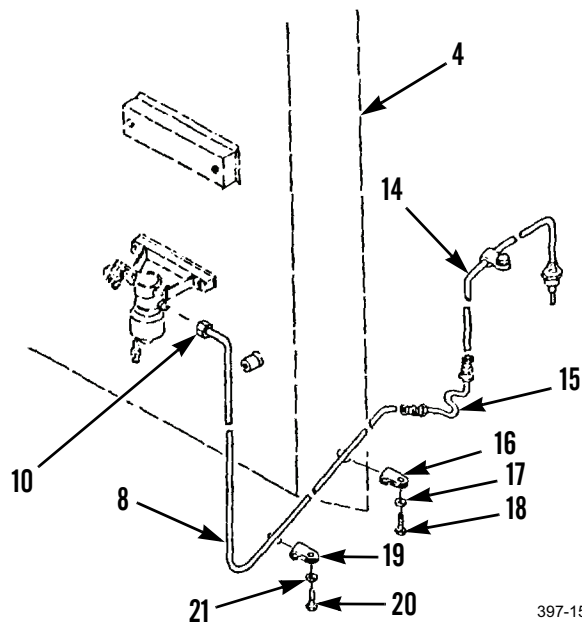7. Remove bolt (18), washer (17), and clamp (16) from right-rear, under fuel tank (4).
8. Remove bolt (20), washer (21), and clamp (19) from left-front, under fuel tank (4).
9. Disconnect tube assembly (15) from left of engine compartment.
10. Remove tube (8).
11. Disconnect hose assembly (15) from tube (14) and remove.



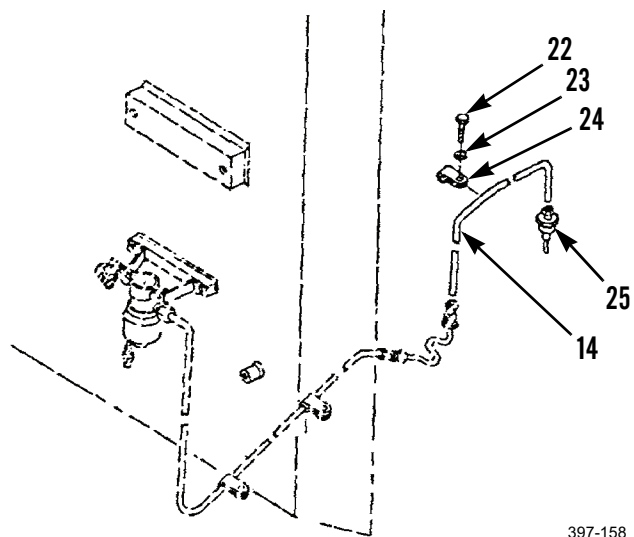12. Remove bolt (22), washer (23), and clamp (24) from base of turbocharger air pipe on left side, top of engine.
13. Disconnect tube (14) from atomizer (25) and remove.
14. Remove atomizer (25) from intake manifold.



CLEANING AND INSPECTION

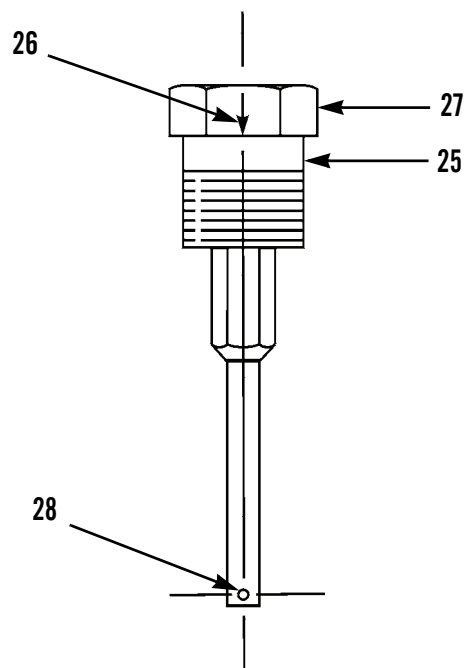
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

NOTE


When installing atomizer, note that the hex head (27) on the atomizer has a mark (26) that is in line with the orifice (28) in the atomizer. Make sure the orifice is pointed in a direction that is PARALLEL to the center-line of the engine.

1. Install atomizer (25) in intake manifold.



397-2033

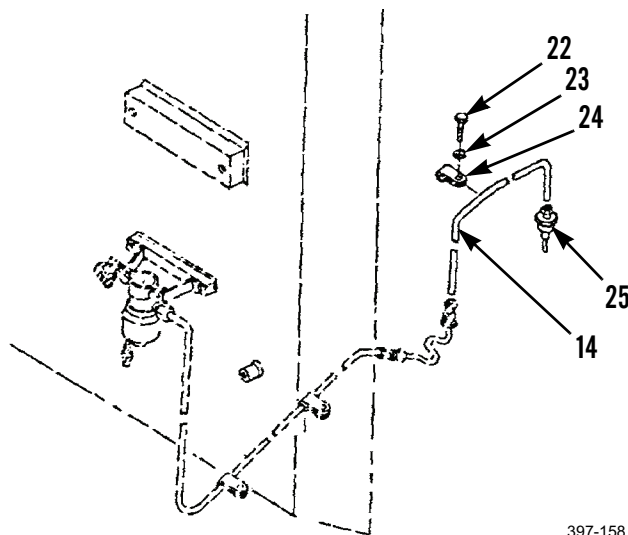
2. Connect tube (14) to atomizer (25).
3. Install clamp (24), washer (23,) and bolt (22) securing tube (14) to base of turbocharger air pipe.




397-158

INSTALLATION - CONTINUED

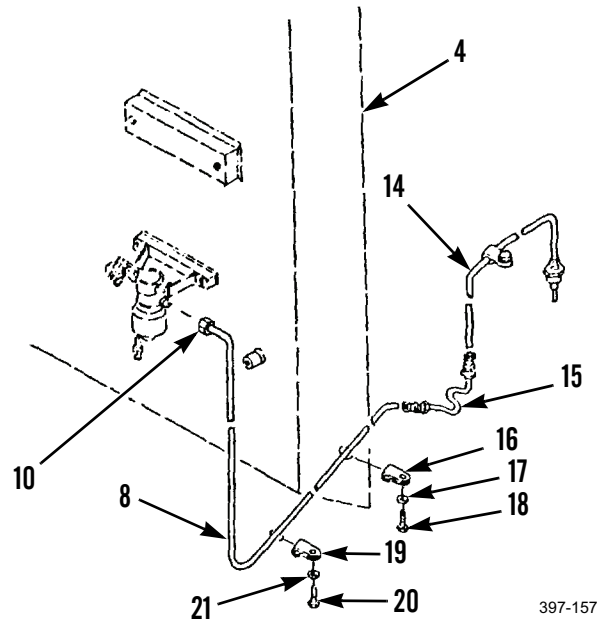4. Connect hose assembly (15) to tube (14) in left side of engine compartment.
5. Position tube (8) in machine and connect to hose assembly (15).
6. Install clamp (19), washer (21), and bolt (20), securing tube (8) in left-front, under fuel tank (4).
7. Install clamp (16), washer (17), and bolt (18), securing tube (8) in right-rear, under fuel tank (4).



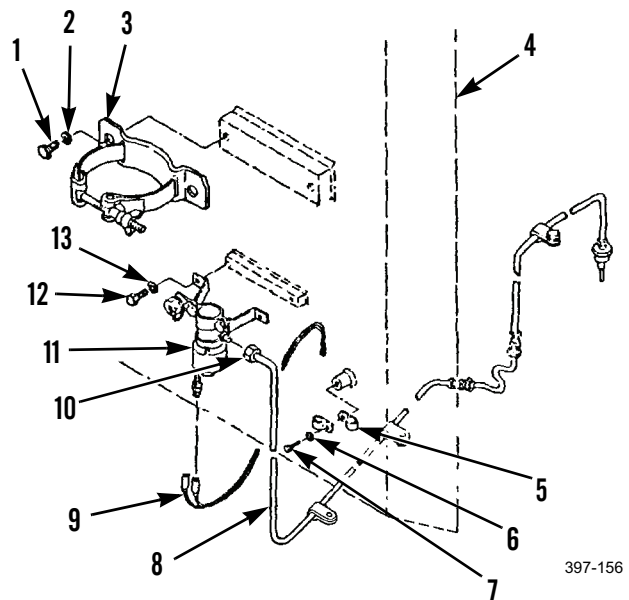8. Install valve (11), two washers (13), and bolts (12) on right-rear of fuel tank (4).
9. If removed, install connector (10) on tube (8).
10. Install tube (8) and connector (10) on valve (11).
11. Install clamp (5), washer (6), and bolt (7), securing tube (8) to fuel tank (4).
12. Connect harness assembly (9) to valve (11) and bolt.
13. Install clamp (3), two washers (2), and bolts (1).



14. Install ether engine starting aid cylinder (WP 0049 00).
15. Close right side screen door (WP 0055 00).

END OF WORK PACKAGE

MUFFLER AND EXHAUST PIPE REPLACEMENT

0051 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Materials/Parts

Antiseize compound (Item 6, WP 0349 00)

Penetrating oil (Item 32, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Right side engine doors opened (TM 5-3805-261-10)



**WARNING**

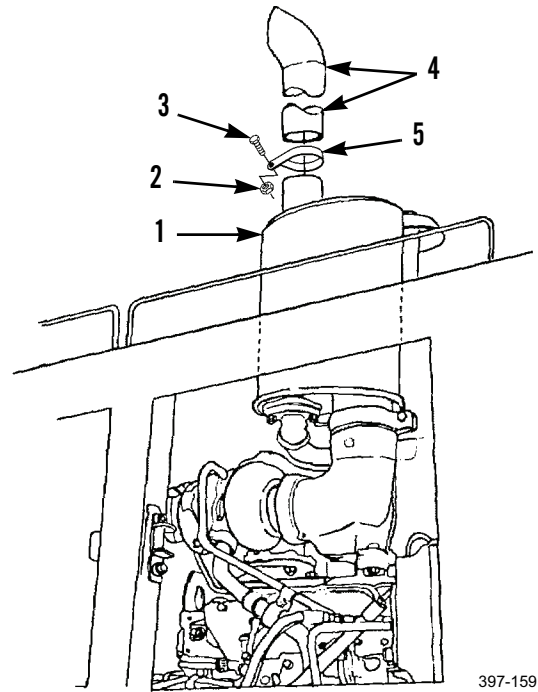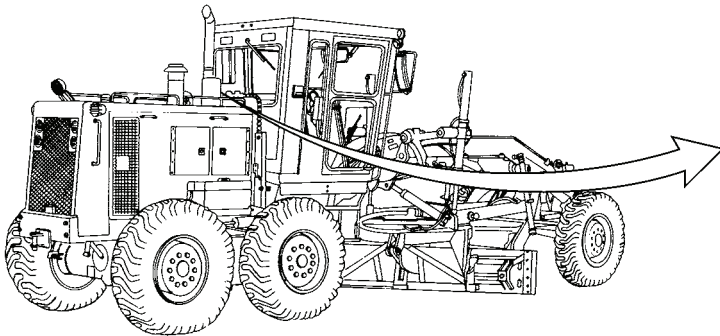Ensure muffler and exhaust pipe are cool before beginning task. Failure to do so could result in serious burns.

REMOVAL**NOTE**

Soak threads of bolts and studs with penetrating oil to aid in removal.


1. Remove nut (2) and bolt (3).
2. Loosen clamp (5).
3. Remove pipe (4) from muffler (1).
4. Remove clamp (5).



397-159

REMOVAL - CONTINUED

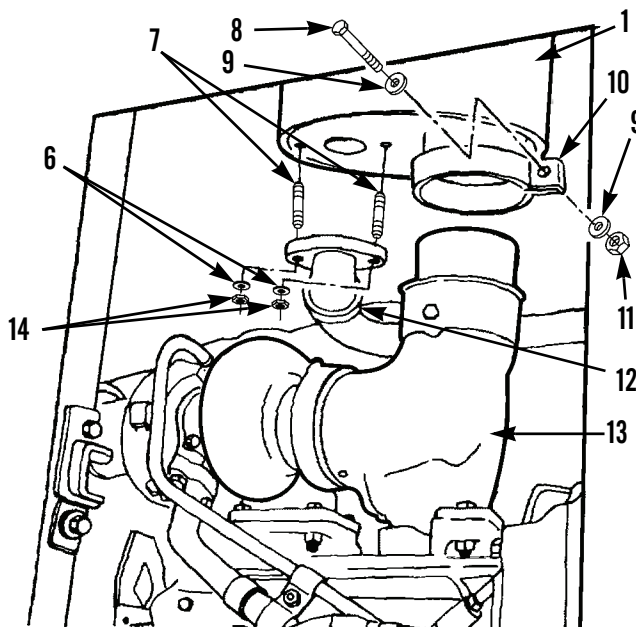5. Remove two nuts (14) and washers (6).
6. Remove nut (11), two washers (9), and bolt (8).
7. Loosen clamp (10).
8. Remove muffler (1) from tube assembly (12) and elbow (13).
9. Inspect two studs (7) and remove if damaged.



397-160

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. If removed, coat threads of two studs (7) with antiseize compound and install on muffler (1).
2. Position clamp (10) on muffler (1).
3. Position muffler (1) on elbow (13) and tube assembly (12).
4. Install bolt (8), two washers (9), and nut (11). Tighten to 20 lb-ft (27 Nm).
5. Install two washers (6) and nuts (14). Tighten to 20 lb-ft (27 Nm).
6. Position clamp (5) on pipe (4).
7. Install pipe (4) on muffler (1).
8. Install bolt (3) and nut (2). Tighten to 20 lb-ft (27 Nm).
9. Close right side engine doors (TM 5-3805-261-10).

END OF WORK PACKAGE

RADIATOR AND SUPPORT REPLACEMENT

0052 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Bracket, link (4) (Item 16, WP 0348 00)

Sling (Item 78, WP 0348 00)

Bolt, 3/8-16 x 5-1/2 in. (4)

Lifting device, 350-lb capacity

Nut, 3/8-16 in. (4)

Wood blocks

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Personnel Required

Two

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Engine hood removed (WP 0181 00)

Right and left engine panels removed (WP 0182 00)

Shields, baffles, and plates removed (WP 0053 00)

Grille removed (WP 0054 00)

Vent guard removed (WP 0056 00)

Cooling system drained (WP 0065 00)

Radiator drain line removed (WP 0058 00)

Rear brake and signal lights removed (WP 0108 00)

Blackout stop/taillights removed (WP 0109 00)

Rear work light removed (WP 0110 00)

Rear bumper removed (WP 0204 00 or WP 0205 00)

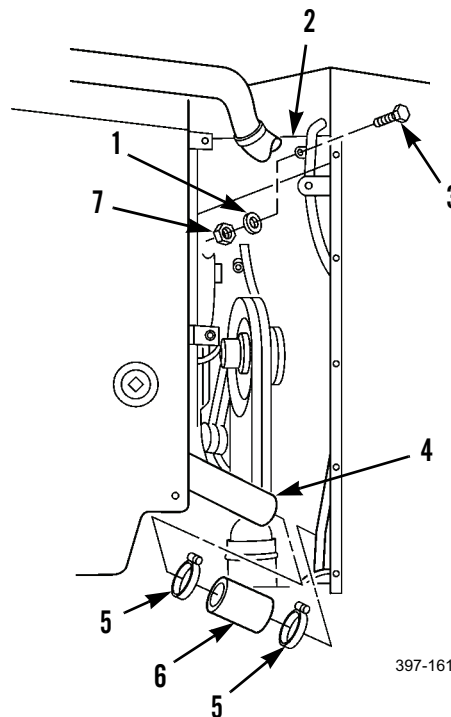
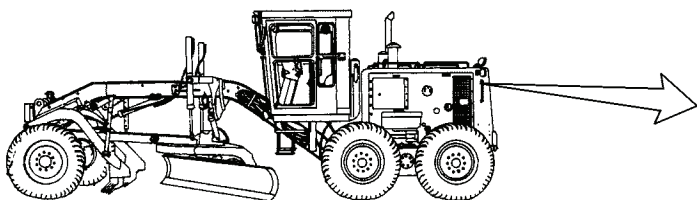
REMOVAL**WARNING**

- DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury to personnel.

CAUTION

Cap all hose and tube ends to prevent contamination.



1. Loosen two clamps (5). Slide clamps and hose (6) back on tube (4).
2. Remove nut (7), washer (1), and bolt (3) from upper support plate (2).



397-161


REMOVAL - CONTINUED

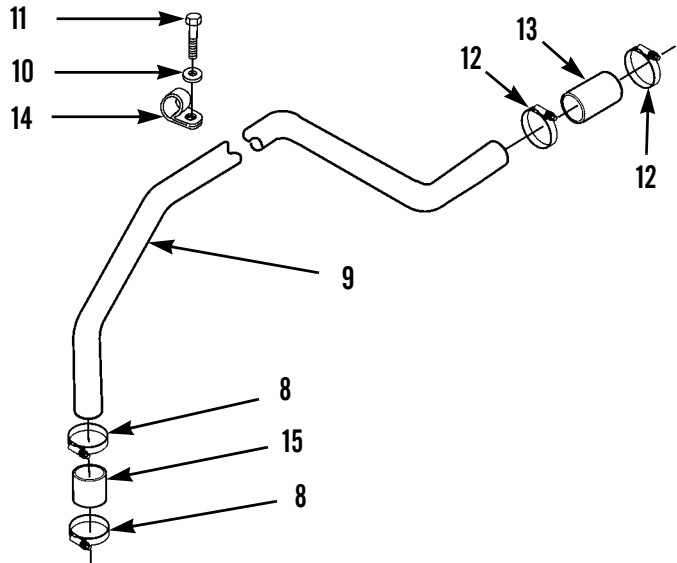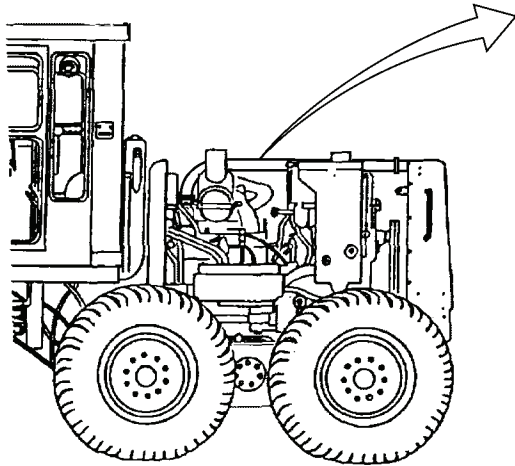3. Loosen two clamps (8). Slide clamps and hose (15) back on tube (9).
4. Remove bolt (11), washer (10), and clamp (14) from tube (9).
5. Loosen two clamps (12). Slide clamps and hose (13) back on tube (9).
6. Remove tube (9).



397-162

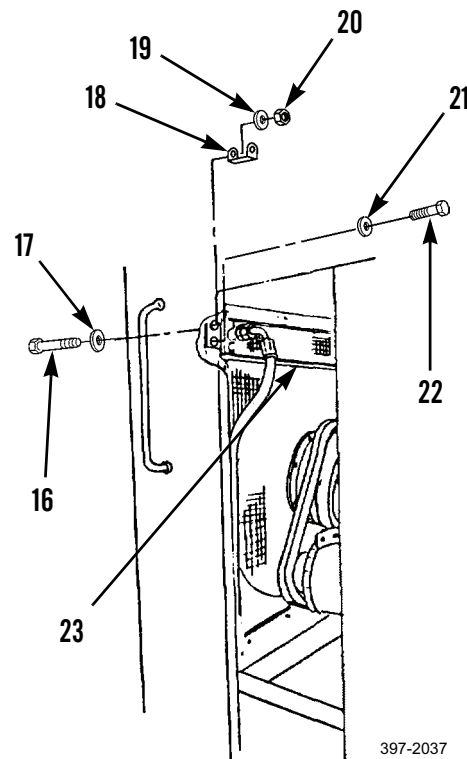7. Remove nut (20), washer (19), bracket (18), washer (17), and bolt (16) from each side of hydraulic cooler assembly (23).
8. Support hydraulic cooler assembly (23) and remove bolt (22) and washer (21) from each side of hydraulic cooler assembly.
9. Move hydraulic cooler assembly (23) to the side.



397-2037

REMOVAL - CONTINUED


**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.


NOTE

Radiator and support weighs 310 lb (141 kg).

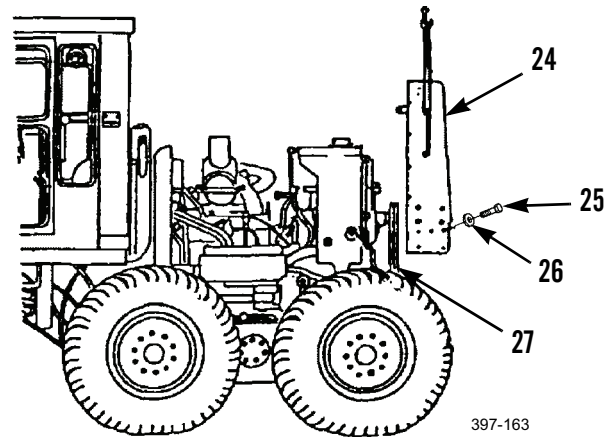10. Attach sling to grabirons of support (24) and take up slack.
11. Remove 10 bolts (25) and washers (26).
12. Use sling to remove support (24).
13. Remove baffle (27) (WP 0053 00).




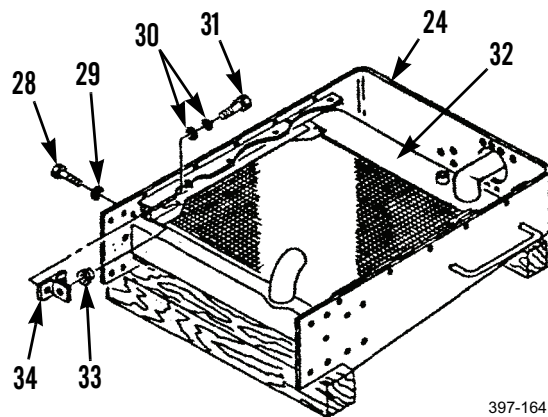14. Remove four bolts (31) and eight washers (30).
15. Remove eight bolts (28), washers (29), four brackets (34), and mounts (33) from sides of support (24). Discard mounts if cracked, broken, distorted, or deteriorated.
16. Place support (24) on wood blocks.



REMOVAL - CONTINUED

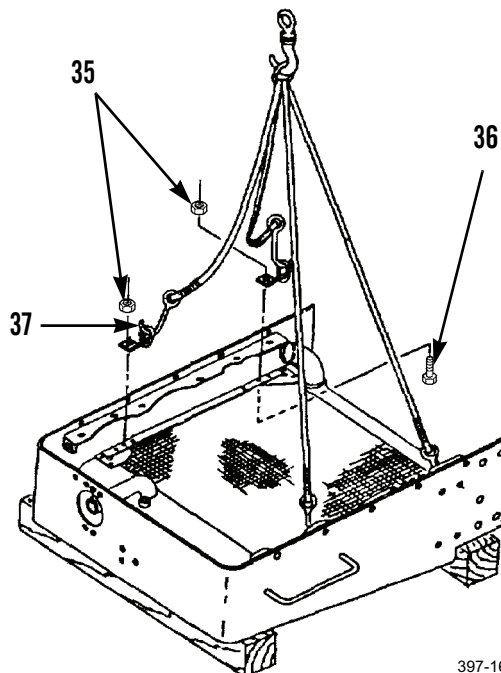17. Remove sling.
18. Install four link brackets (37), 3/8-16 x 5 1/2 in. bolts (36), 3/8-16 in. nuts (35), and sling.



397-165


**WARNING**

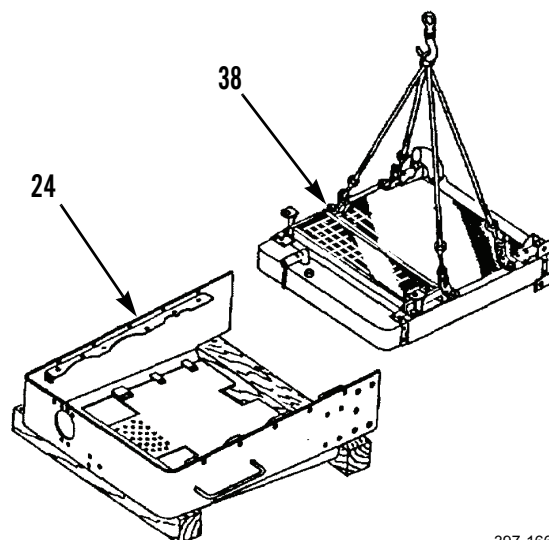Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Radiator weighs 135 lb (61 kg).

19. Use sling to separate support (24) and radiator (38). Slide radiator out from bottom of support.



397-166

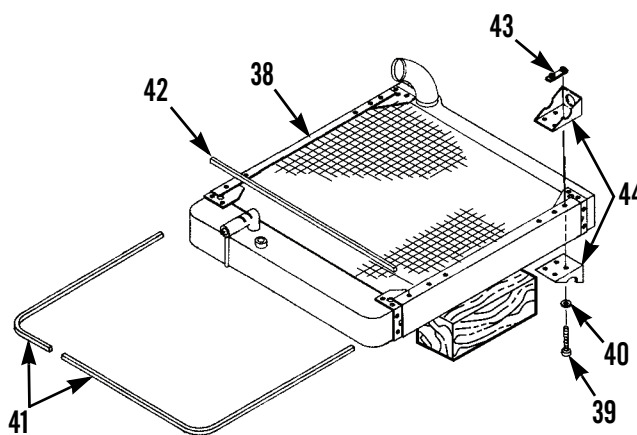
REMOVAL - CONTINUED

20. Remove two nuts (43), four bolts (39), washers (40), and brackets (44).
21. Support radiator (38) on wood blocks.
22. Remove sling, four 3/8-16 in. nuts (35), 3/8-16 x 5-1/2 in. bolts (36), and link brackets (37).

NOTE

Remove seals only if inspection indicates replacement is necessary.

23. If necessary, remove and discard seals (41 and 42).

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. If removed, install new seals (42 and 41). Cut bulk seal to size. Install seal on top and sides of radiator (38).

NOTE

Do not cover overfill tube on top of radiator.

2. Install four link brackets (37), 3/8-16 x 5-1/2 in. bolts (36), 3/8-16 in. nuts (35), and sling.

NOTE

Do not tighten bolts.

3. Lift radiator (38) and install four washers (40), bolts (39), and two nuts (43).
4. Position four brackets (44).

INSTALLATION - CONTINUED


**WARNING**

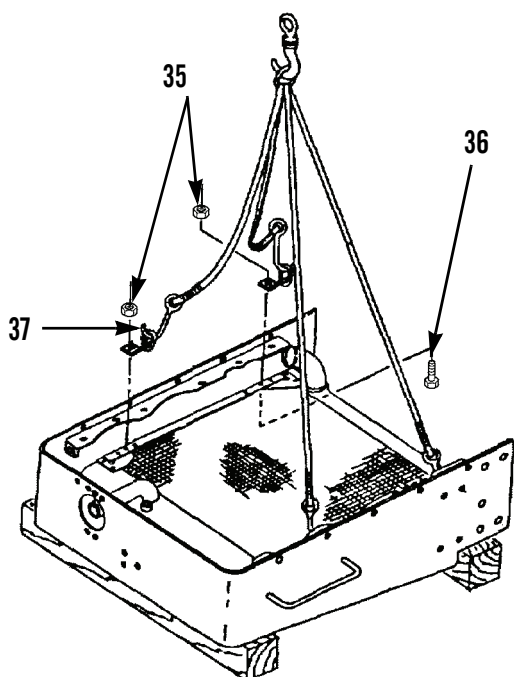Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.


NOTE

Radiator weighs 135 lb (61 kg).

5. Use sling to carefully slide radiator (38) into support (24).
6. Remove sling, four 3/8-16 in. nuts (35), 3/8-16 x 5-1/2 in. bolts (36), and link brackets (37).



397-165

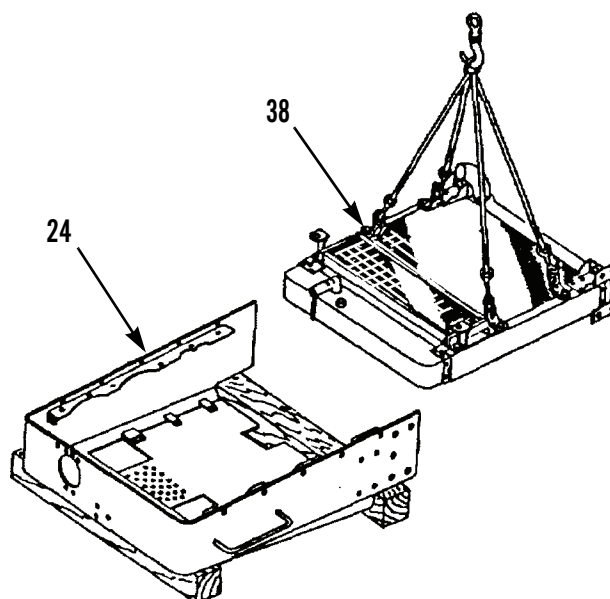

397-166

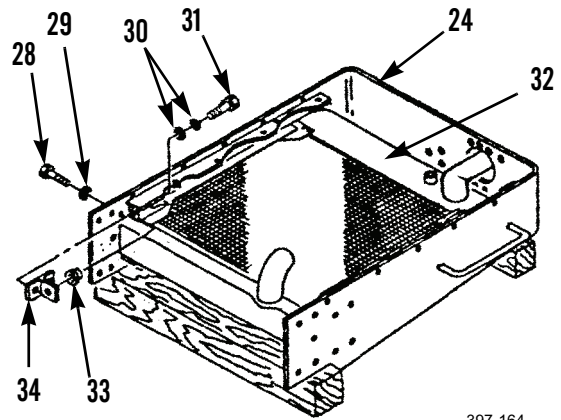
INSTALLATION - CONTINUED

7. Position four mounts (33) and brackets (34).

NOTE

Do not tighten bolts.

8. Install eight washers (29) and bolts (28).
9. Install eight washers (30), four bolts (31), and mounts (33) and secure to brackets (34).
10. Tighten eight bolts (28).
11. Install baffle (27) (WP 0053 00).



397-164




WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Radiator and support assembly weighs 310 lb (141 kg).

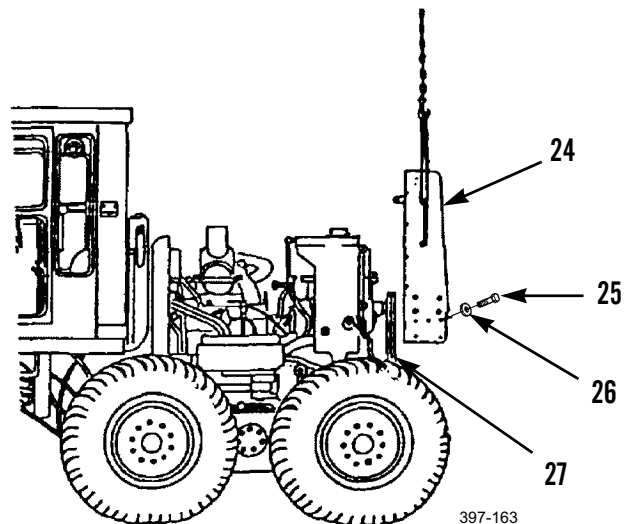
12. Attach sling to left and right side of grabirons of support (24). Lift support and slowly stand on end with sling and set into position.
13. Install 10 washers (26) and bolts (25).



397-163



INSTALLATION - CONTINUED

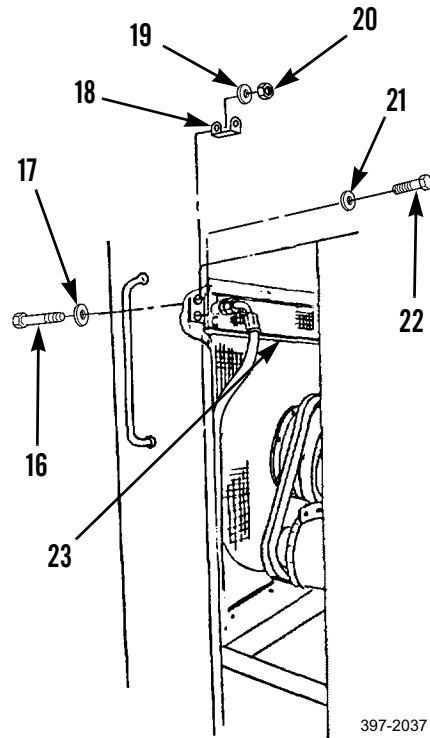14. Position hydraulic cooler assembly (23) and install washer (21) and bolt (22) on each side of hydraulic cooler assembly.
15. Install washer (17), bolt (16), bracket (18), washer (19), and nut (20) on each side of hydraulic cooler assembly (23).



397-2037

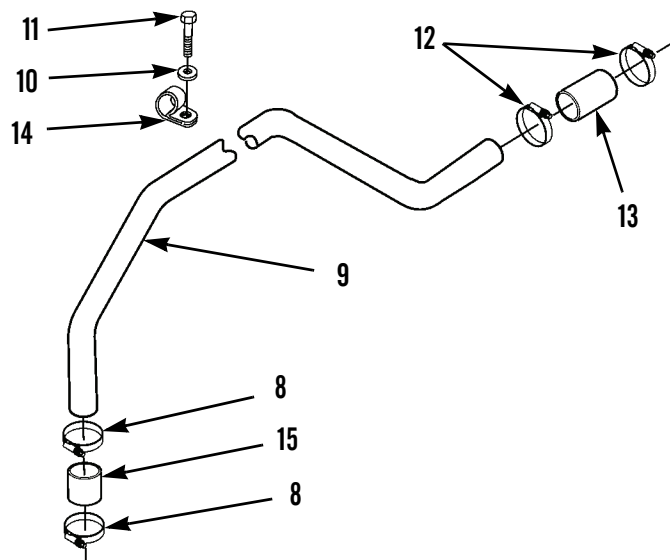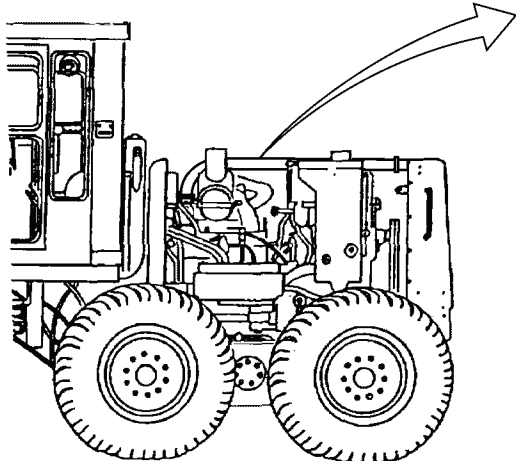
16. Position tube (9).
17. Connect hose (13), two clamps (12), and tube (9).
18. Install clamp (14), washer (10), and bolt (11) on tube (9).
19. Install hose (15), two clamps (8), and tube (9).




397-162

INSTALLATION - CONTINUED

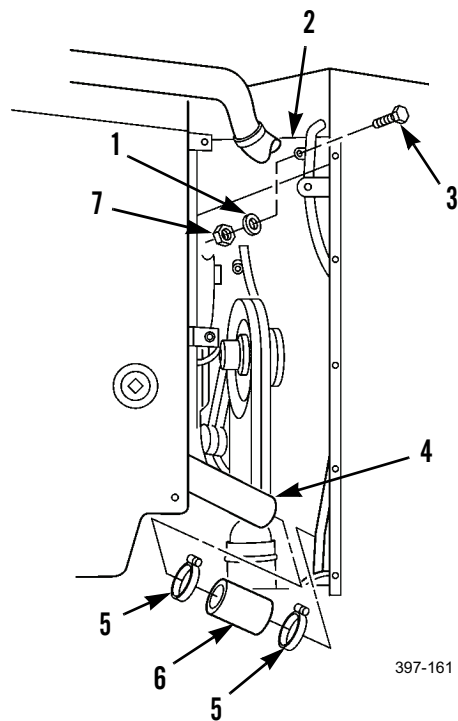20. Install bolt (3), washer (1), and nut (7) in upper support plate (2).
21. Install two clamps (5) on hose (6) on tube (4).



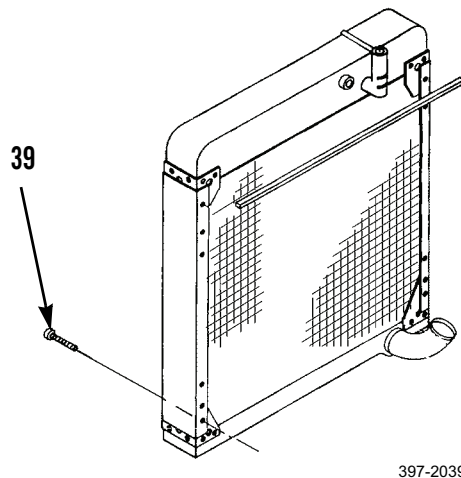22. Tighten four bolts (39).



RADIATOR AND SUPPORT REPLACEMENT - CONTINUED

0052 00***INSTALLATION - CONTINUED***

23. Install radiator drain line (WP 0058 00).
24. Refill cooling system (WP 0065 00).
25. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
26. Check for leaks. Stop engine.
27. Install rear bumper (WP 0204 00 or WP 0205 00).
28. Install rear work light (WP 0110 00).
29. Install blackout stop/taillights (WP 0109 00).
30. Install rear brake and signal lights (WP 0108 00).
31. Install vent guard (WP 0056 00).
32. Install grille (WP 0054 00).
33. Install shields, baffles, and plates (WP 0053 00).
34. Install right and left engine panels (WP 0182 00).
35. Install engine hood (WP 0181 00).

END OF WORK PACKAGE

SHIELDS, BAFFLES, AND PLATE REPLACEMENT

0053 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

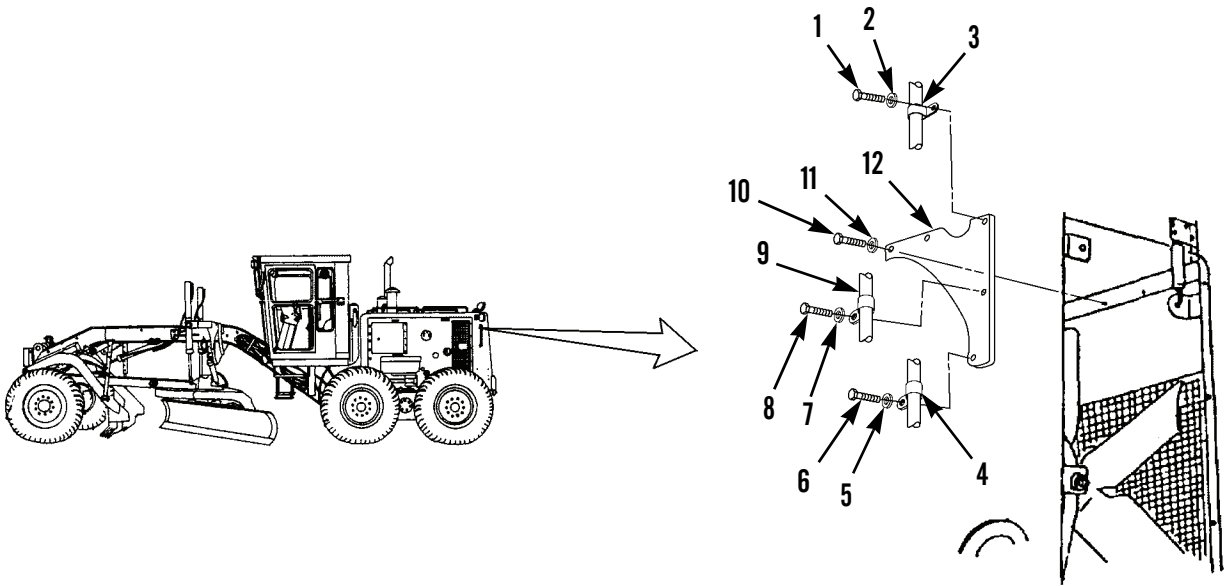
Left and right side screen doors opened (WP 0055 00)

REMOVAL

NOTE

Note routing of wiring harness to aid in installation and remove as necessary.


1. Remove bolt (1), washer (2), and clamp (3) from front-upper-left of radiator and support.
2. Remove bolt (8), washer (7), and clamp (9).
3. Remove bolt (6), washer (5), and clamp (4).
4. Remove two bolts (10), washers (11), and shield (12).



397-168


REMOVAL - CONTINUED

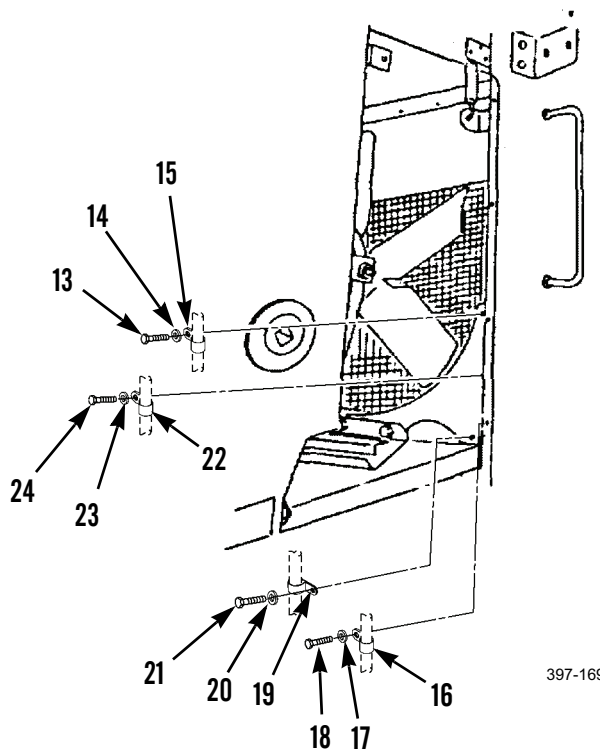5. Remove bolt (13), washer (14), and clamp (15) from lower-left of radiator and support.
6. Remove bolt (24), washer (23), and clamp (22).
7. Remove bolt (18), washer (17), and clamp (16).
8. Remove bolt (21), washer (20), and clamp (19).



397-169

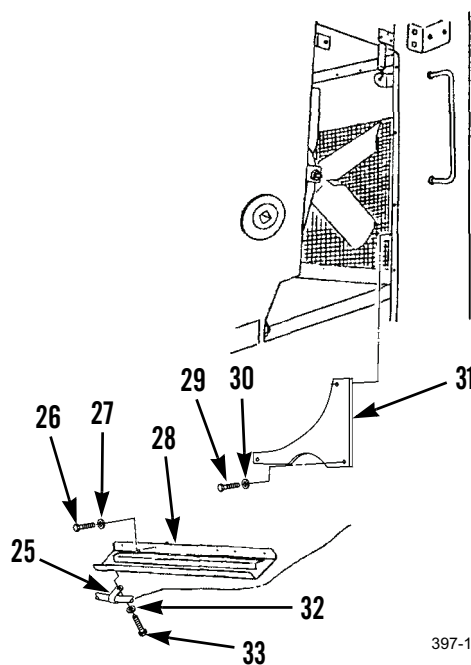9. Remove three bolts (33), washers (32), and clamps (25) from under molding (28).
10. Remove five bolts (26), washers (27), and molding (28) from front-lower-left of radiator and support.
11. Remove bolt (29), washer (30), and shield (31).





397-170

SHIELDS, BAFFLES, AND PLATE REPLACEMENT - CONTINUED


0053 00

REMOVAL - CONTINUED

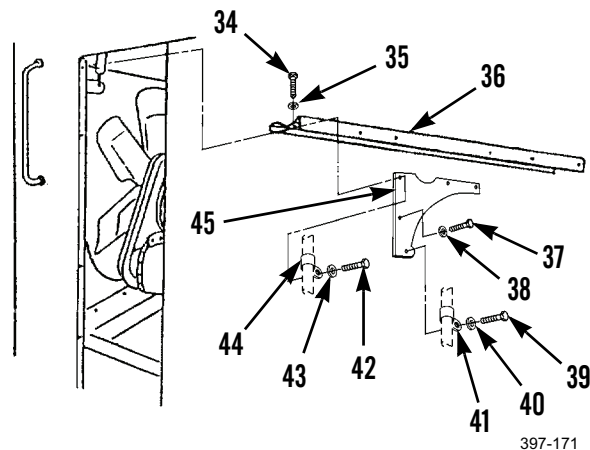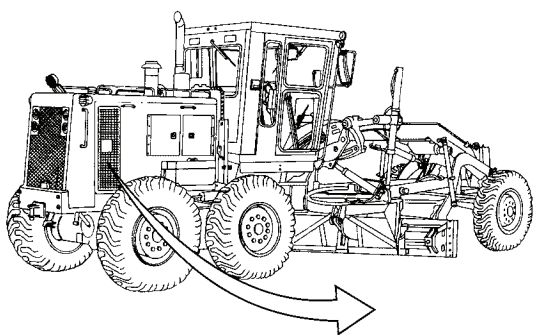12. Remove bolt (42), washer (43), and clamp (44) from harness assembly.
13. Remove bolt (39), washer (40), and clamp (41) from hydraulic oil cooler hose.
14. Remove three bolts (37), washers (38), and shield (45).
15. Remove bolt (34), washer (35), and baffle (36).



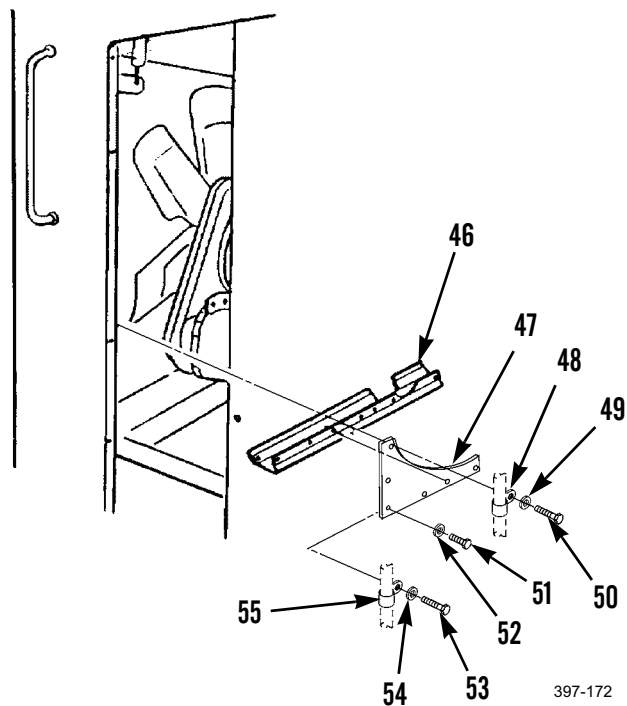16. Remove bolt (50), washer (49), and clamp (48) from front-lower-right of radiator and support.
17. Remove bolt (53), washer (54), and clamp (55).
18. Remove two bolts (51), washers (52), shield (47), and baffle (46).



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

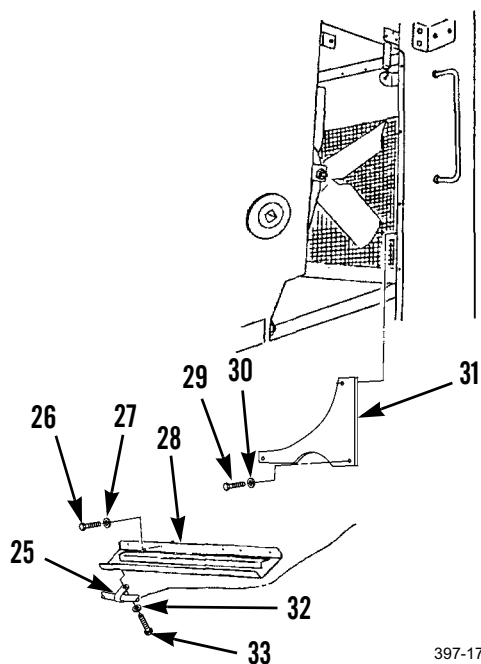
INSTALLATION

1. Position baffle (46) and shield (47) on front-lower-right side of radiator and support.

NOTE

Do not tighten bolts.


2. Install two washers (52) and bolts (51).
3. Install clamp (55), washer (54), and bolt (53), securing harness assembly.
4. Install clamp (48), washer (49), and bolt (50), securing hydraulic oil cooler hose.
5. Tighten two bolts (51).
6. Position baffle (36) on front-upper-right of radiator and support.
7. Install washer (35) and bolt (34) on front-upper-right of radiator and support.
8. Position shield (45).
9. Install three washers (38) and bolts (37).
10. Install clamp (41), washer (40), and bolt (39), securing hydraulic oil cooler hose.
11. Install clamp (44), washer (43), and bolt (42), securing harness assembly.
12. Position shield (31) on front-lower-left of radiator and support.
13. Install two washers (30) and bolts (29).
14. Position molding (28).
15. Install five washers (27) and bolts (26).
16. Install three clamps (25), washers (32), and bolts (33) under molding (28), securing two harness assemblies.



397-170


INSTALLATION - CONTINUED

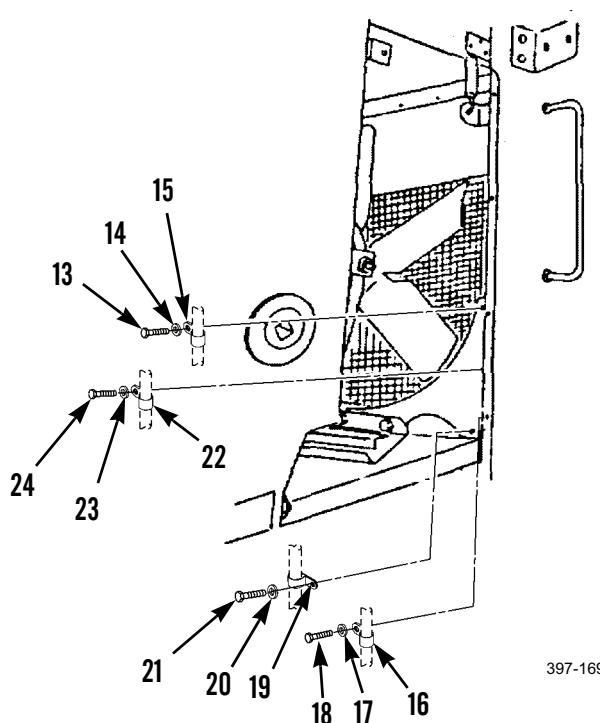17. Install clamp (19), washer (20), and bolt (21) on front-lower-left of radiator and support, securing harness assembly.
18. Install clamp (16), washer (17), and bolt (18), securing harness assembly.
19. Install clamp (22), washer (23), and bolt (24), securing harness assembly.
20. Install clamp (15), washer (14), and bolt (13), securing hydraulic oil cooler hose.



397-169

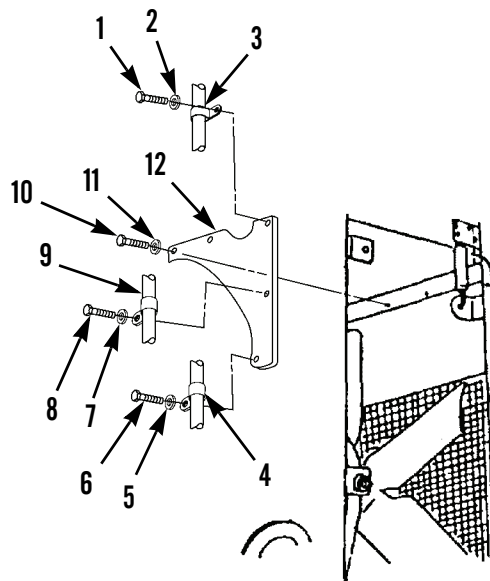21. Position shield (12).
22. Install two washers (11) and bolts (10).
23. Install clamp (4), washer (5), and bolt (6), securing hydraulic oil cooler hose.
24. Install clamp (9), washer (7), and bolt (8), securing harness assembly.
25. Install clamp (3), washer (2), and bolt (1), securing harness assembly.
26. Close left and right side screen doors (WP 0055 00).



397-168

END OF WORK PACKAGE

GRILLE REPLACEMENT

0054 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

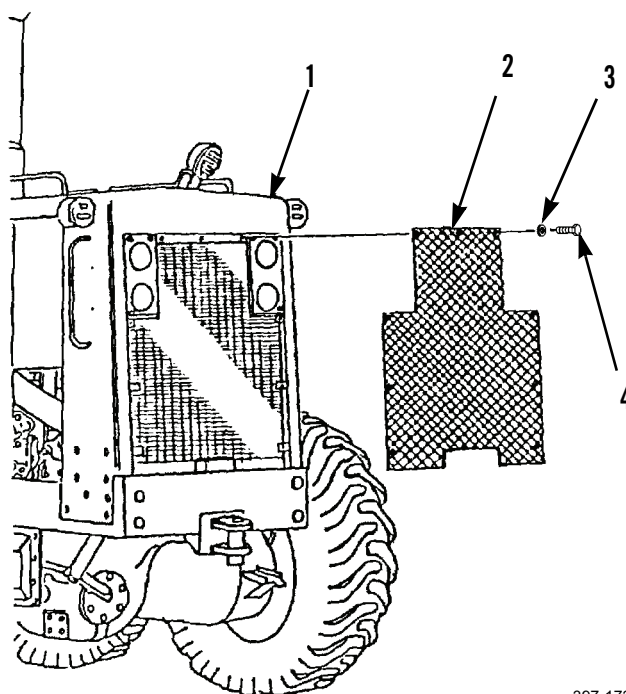
Remove nine bolts (4), washers (3), and grille (2) from radiator support (1).

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

Install grille (2), nine washers (3), and bolts (4) on radiator support (1).



397-173

END OF WORK PACKAGE

SIDE SCREEN DOORS REPLACEMENT

0055 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Personnel Required

Two

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

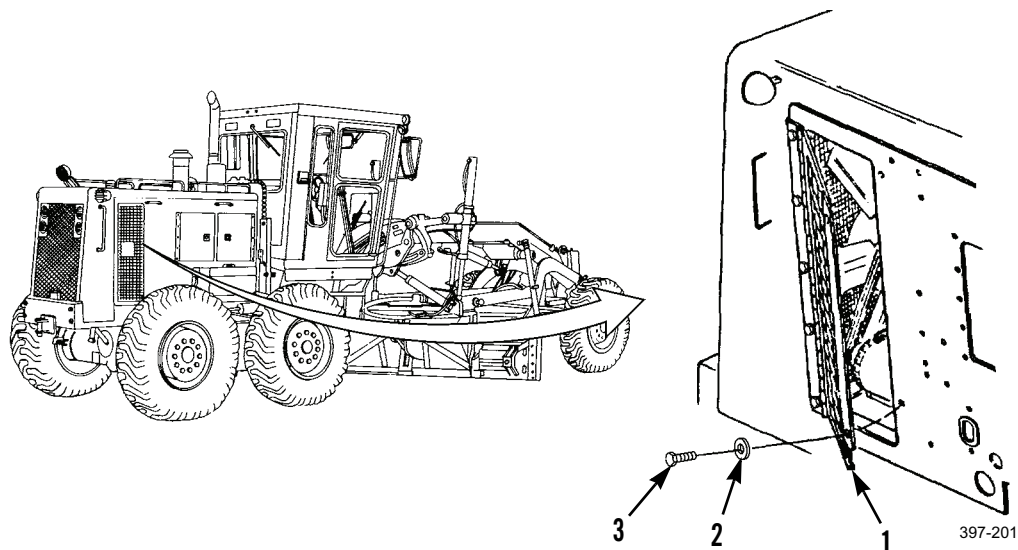
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL**NOTE**

This procedure covers replacement of the right side screen door. Follow these instructions for the left side screen door.

1. Remove two bolts (3) and washers (2) and open screen door (1).



REMOVAL - CONTINUED**WARNING**

Bar is heavy and will slide out when bolts are removed. Support bar to prevent injury.

- Support screen door (1) and bar (5) and remove five bolts (6), washers (4), screen door (1), and bar.

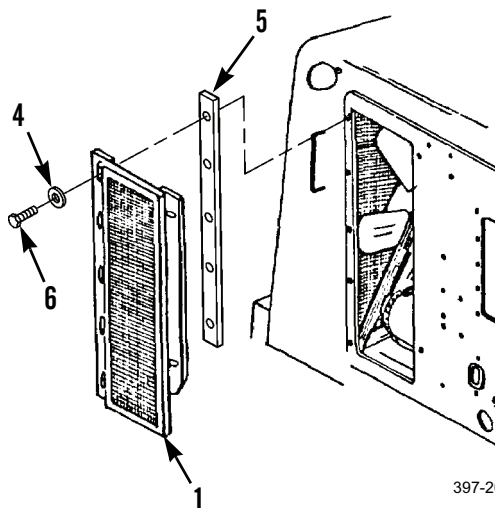
CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**


Do not tighten bolts.

- Install bar (5), screen door (1), five washers (4), and bolts (6).



397-202

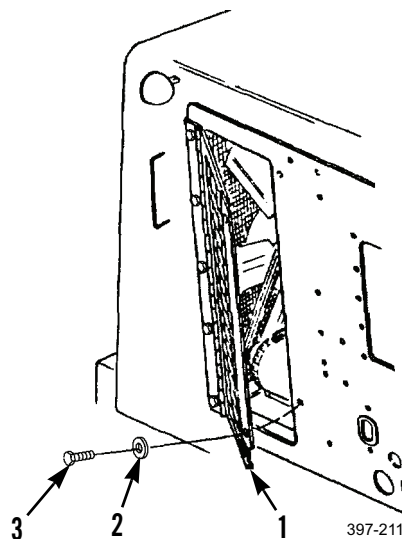- Close screen door (1) and install two washers (2) and bolts (3).
- Align screen door (1) and tighten five bolts (6) and two bolts (3).



397-2111

END OF WORK PACKAGE

CAP GUARD REPLACEMENT

0056 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Rivets (6)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

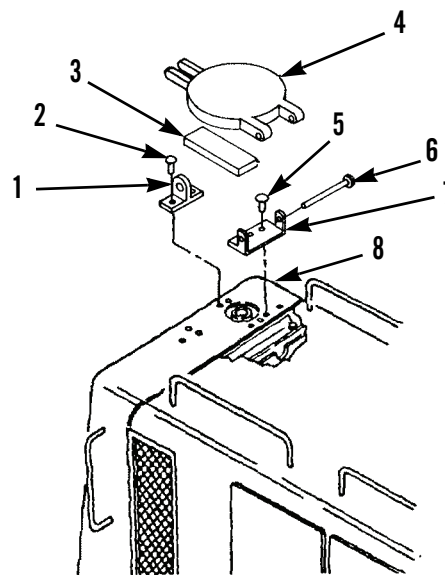
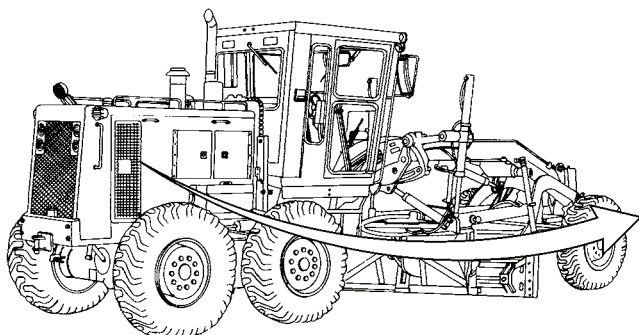
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

1. Remove and discard rivet (6) by drilling out from top of radiator support (8) and remove cap (4).
2. Inspect pad (3) on inside of cap (4). Remove pad and discard if torn or deteriorated.
3. Remove and discard two rivets (2) by drilling out and remove bracket (1).
4. Remove and discard three rivets (5) by drilling out and remove bracket (7).




397-174

CAP GUARD REPLACEMENT - CONTINUED**0056 00****CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

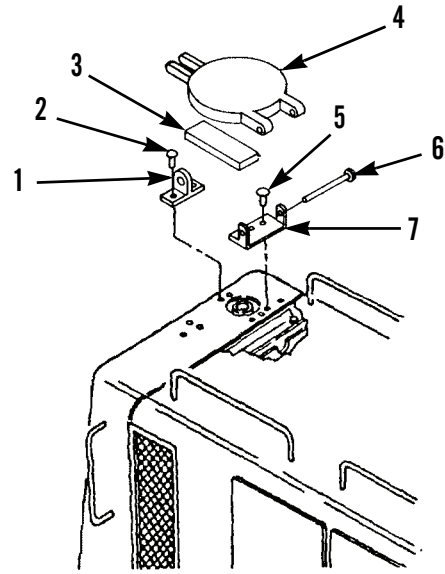1. Position bracket (7) and install three new rivets (5).
2. Position bracket (1) and install two new rivets (2).
3. If removed, install new pad (3) on inside of cap (4).
4. Position cap (4) and install new rivet (6).



397-174

END OF WORK PACKAGE

RADIATOR HOSES, LINES, AND FITTINGS REPLACEMENT

0057 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Engine hood removed (WP 0181 00)

Left and right side engine panels removed (WP 0182 00)

Oil level gauge removed (WP 0027 00)

Cooling system drained (WP 0065 00)



WARNING



- DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury to personnel.

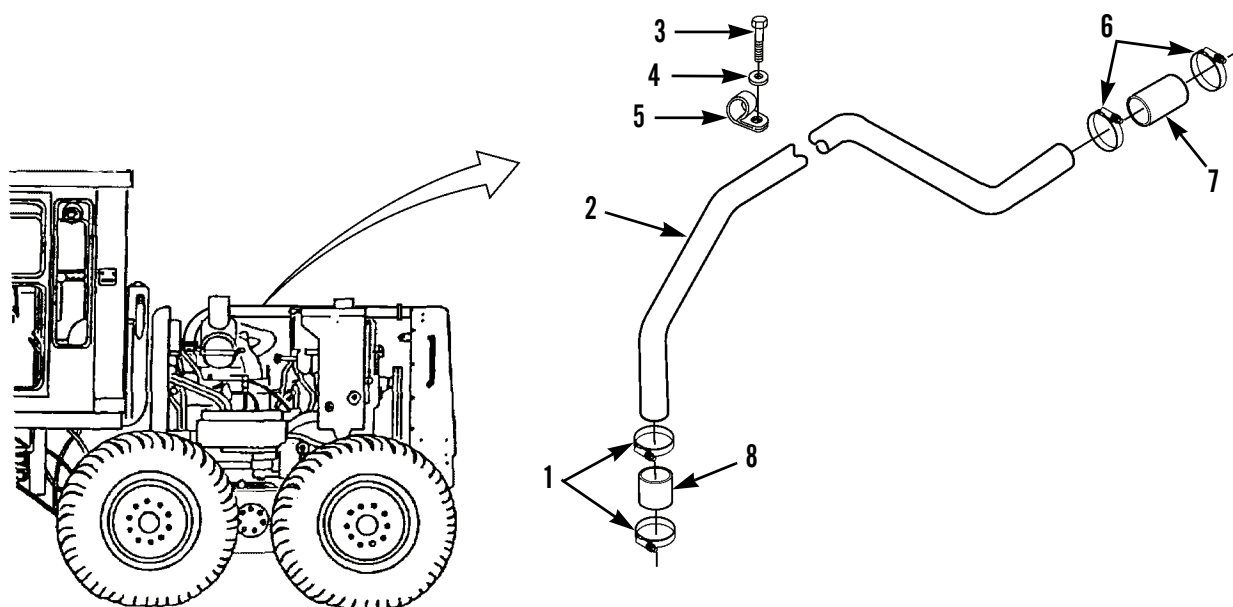
REMOVAL**CAUTION**

Cap hose and tube ends and plug open ports to prevent contamination.

NOTE

Tag hose and tube assemblies before disconnecting to aid in installation.


1. Loosen two clamps (1). Disconnect hose (8) from temperature regulator (thermostat) housing and slide up on tube (2).
2. Remove two clamps (1).
3. Remove bolt (3), washer (4), and clamp (5) from front-upper-left of fuel tank.
4. Loosen two clamps (6). Disconnect hose (7) and slide up on tube (2).
5. Remove two clamps (6).
6. Remove tube (2) with hoses (7 and 8).
7. Remove hoses (7 and 8) from tube (2).




397-162

REMOVAL - CONTINUED

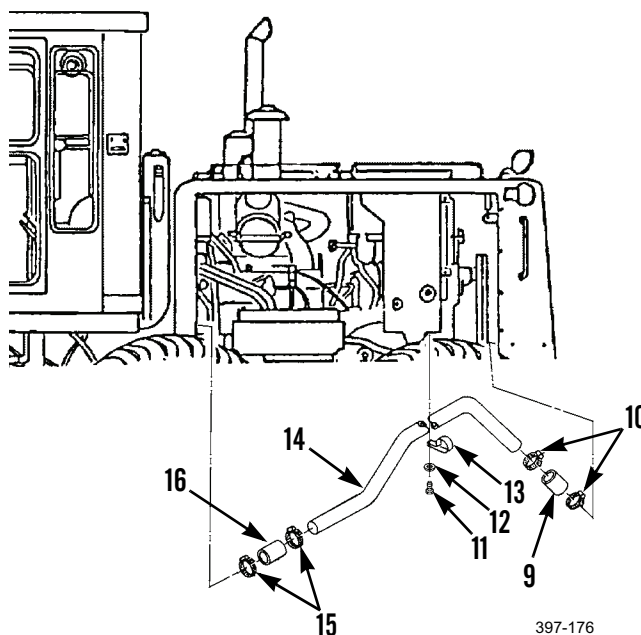8. Remove bolt (11), washer (12), and clamp (13).
9. Loosen two clamps (10). Disconnect hose (9) and slide up on tube (14).
10. Remove two clamps (10).
11. Loosen two clamps (15). Disconnect hose (16) and slide up on tube (14).
12. Remove two clamps (15).



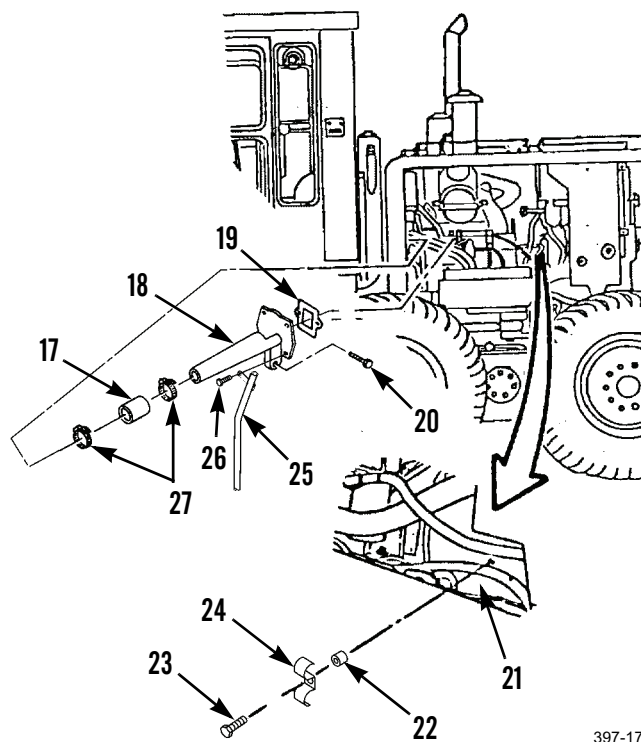13. Remove bolt (23), clamp (24), and spacer (22) from transmission to engine adapter housing (21).
14. Remove tube (14) with hoses (9 and 16), connecting water pump to radiator.
15. Remove hoses (9 and 16) from tube (14).
16. Remove four bolts (26).
17. Separate oil gauge tube (25) from housing (18).
18. Remove bolt (20).
19. Loosen two clamps (27). Remove hose (17) from housing (18) and water pump.
20. Remove two clamps (27).
21. Remove housing (18) and gasket (19). Discard gasket.



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install new gasket (19) and housing (18).
2. Position two clamps (27).
3. Install hose (17) on housing (18) and water pump.
4. Tighten two clamps (27).

NOTE

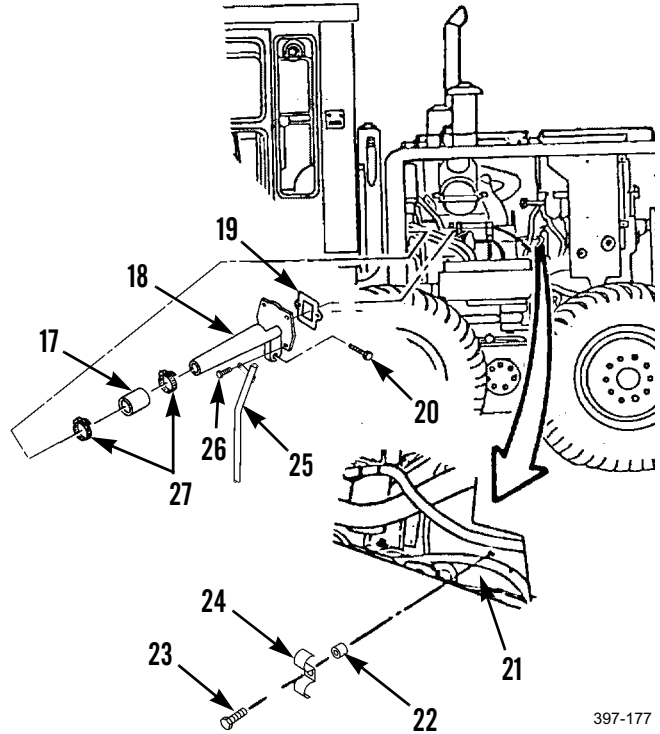
Do not tighten bolt.

5. Install bolt (20).

NOTE


Do not tighten bolt.

6. Install two bolts (26) in upper mounting holes of housing (18).
7. Position oil gauge tube (25).
8. Install two bolts (26) in lower mounting holes of housing (18).
9. Tighten bolt (20) and two bolts (26) in upper mounting holes of housing (18).



397-177

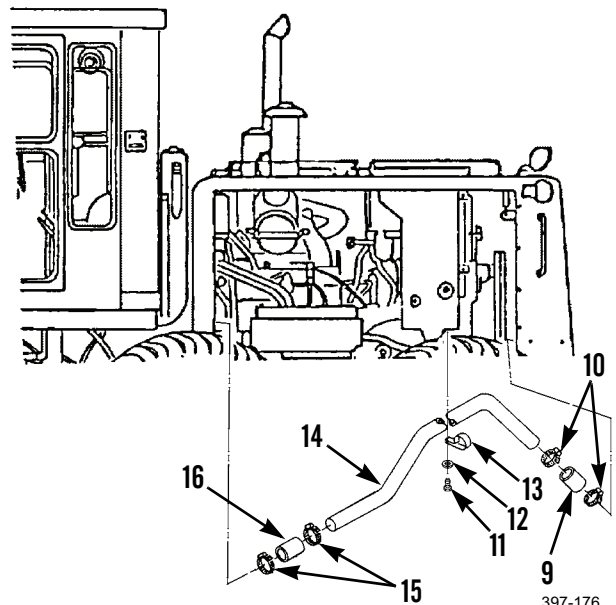
10. Install hoses (16 and 9) on tube (14).
11. Position spacer (22) and clamp (24) on engine adapter housing (21) and install bolt (23).
12. Position tube (14) with hoses (16 and 9) under fuel tank, connecting water pump to radiator.
13. Position two clamps (15).
14. Connect hose (16) to water pump.
15. Tighten two clamps (15).
16. Position two clamps (10).
17. Connect hose (9).
18. Tighten two clamps (10).
19. Install clamp (13), washer (12), and bolt (11).



397-176

INSTALLATION - CONTINUED

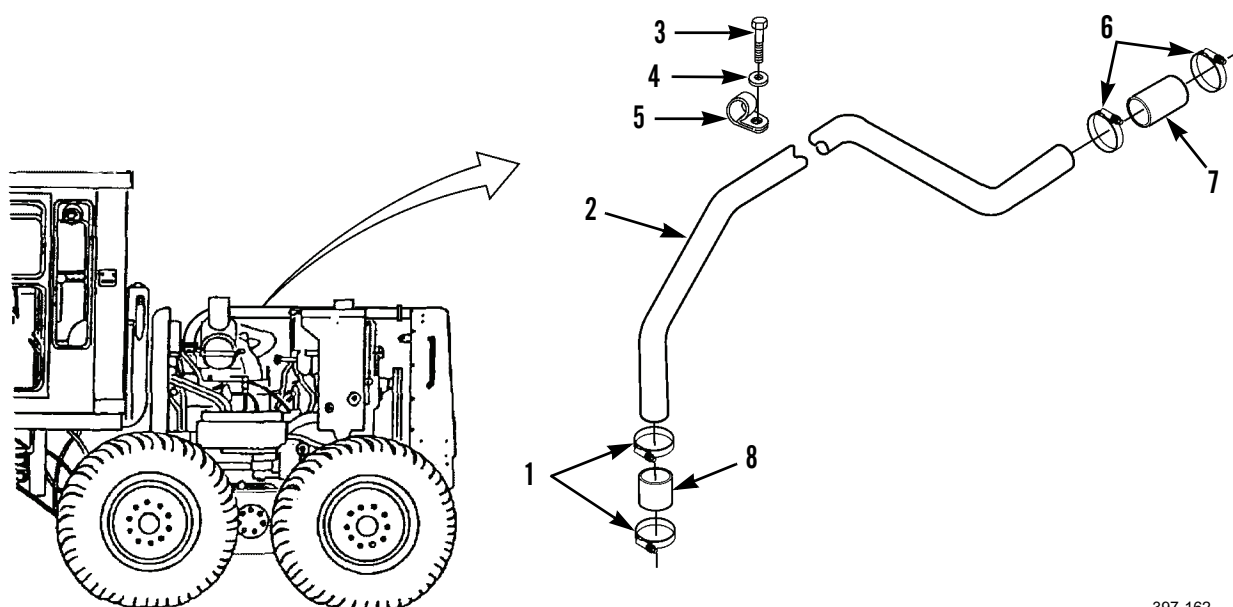20. Install hoses (8 and 7) on tube (2).
21. Position tube (2) with hoses (8 and 7) on top of fuel tank.
22. Position two clamps (6).
23. Connect hose (7) in upper-left side of radiator.
24. Tighten two clamps (6).
25. Position two clamps (1).
26. Connect hose (8) to temperature regulator (thermostat) housing.
27. Tighten two clamps (1).
28. Install clamp (5), washer (4), and bolt (3) in front-upper-left side of fuel tank.



397-162

29. Refill cooling system (WP 0065 00).
30. Install oil level gauge (WP 0027 00).
31. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
32. Check for leaks. Stop engine.
33. Install left and right side engine panels (WP 0182 00).
34. Install engine hood (WP 0181 00).

END OF WORK PACKAGE

RADIATOR DRAIN LINE REPLACEMENT

0058 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Cooling system drained (WP 0065 00)

Rear bumper removed (WP 0204 00 or WP 0205 00)



WARNING



- DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury to personnel.

RADIATOR DRAIN LINE REPLACEMENT - CONTINUED

0058 00

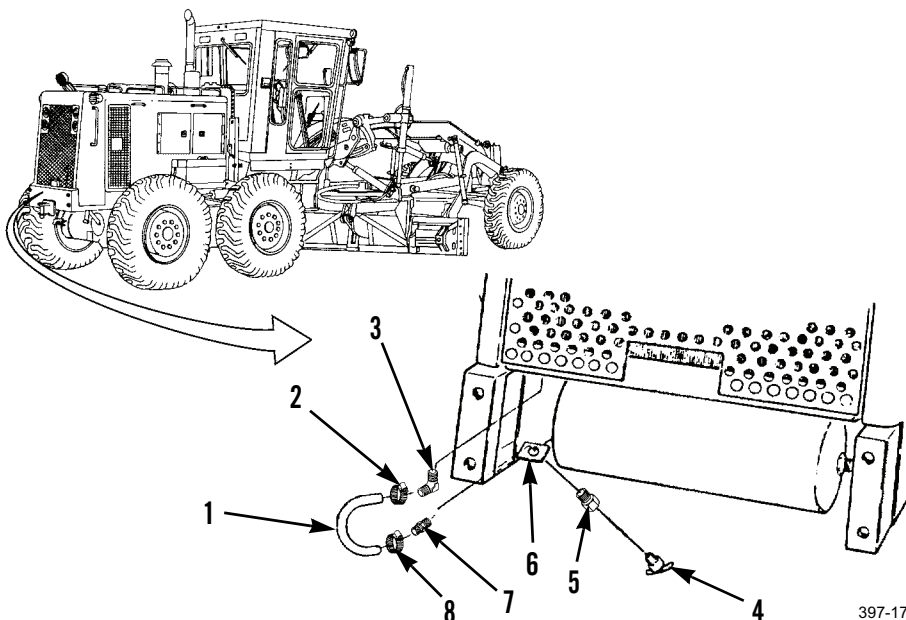
REMOVAL

1. Loosen two clamps (2 and 8) from hose (1).

CAUTION

Cap hose end to prevent contamination.

2. Disconnect hose (1) from elbow (3) and remove clamp (2).
3. Remove elbow (3).
4. Remove hose (1) and clamp (8) from adapter (7).
5. Remove drain cock (4), coupling (5) and adapter (7) from weldment (6).



397-178

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install adapter (7), coupling (5), and drain cock (4) to weldment (6).
2. Position clamp (8) and connect hose (1) to adapter (7).
3. Install elbow (3).
4. Position clamp (2) and install hose (1) to elbow (3).
5. Tighten two clamps (8 and 2).
6. Refill cooling system (WP 0065 00).
7. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
8. Check for leaks. Stop engine.
9. Install rear bumper (WP 0204 00 or WP 0205 00).

END OF WORK PACKAGE

TEMPERATURE REGULATOR (THERMOSTAT) REPLACEMENT

0059 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Gasket

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Engine hood removed (WP 0181 00)

Left side engine panel removed (WP 0182 00)

Cooling system drained (WP 0065 00)



WARNING



- DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury to personnel.

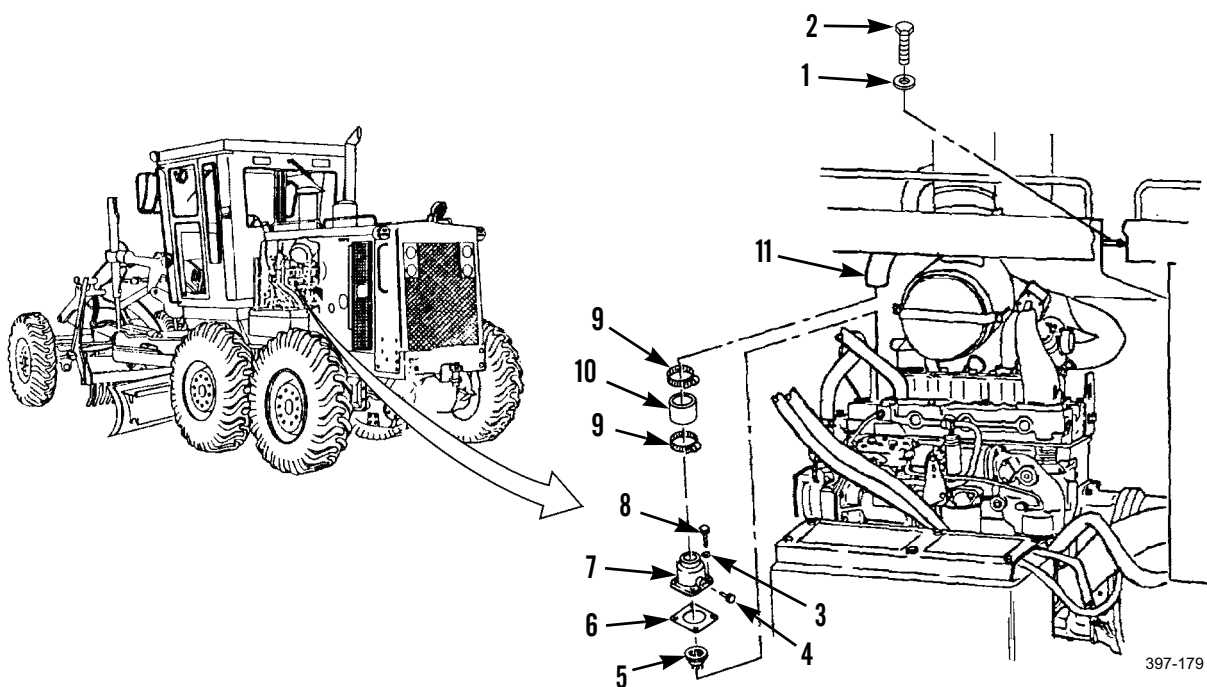
REMOVAL

1. Remove bolt (2) and washer (1) from upper-left-front of fuel tank.
2. Loosen two clamps (9) at upper-left of engine.

CAUTION

Cap hose end and plug open port to prevent contamination.

3. Disconnect hose (10) from housing (7) by sliding up on tube (11).
4. Remove four bolts (8), washers (3), housing (7), and gasket (6) from cylinder head. Discard gasket.
5. Remove plug (4) from housing (7).
6. Remove thermostat (5).



397-179

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

Pyramid part of thermostat faces up.

1. Install thermostat (5).
2. Install plug (4) in housing (7).
3. Install new gasket (6), housing (7), four washers (3), and bolts (8) to cylinder head.
4. Connect hose (10) by sliding down from tube (11) onto housing (7).
5. Tighten two clamps (9).
6. Install washer (1) and bolt (2) to front-upper-left of fuel tank.
7. Refill cooling system (WP 0065 00).
8. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
9. Check for leaks. Stop engine.
10. Install left side engine panel (WP 0182 00).
11. Install engine hood (WP 0181 00).

END OF WORK PACKAGE

WATER PUMP REPLACEMENT**0060 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Gasket (2)

Packing, preformed

References

WP 0020 00

Personnel Required

Two

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Cooling system drained (WP 0065 00)

Engine compartment front dash plate removed (WP 0183 00)

Coolant temperature switch removed (WP 0114 00)

Ether start switch removed (WP 0114 00)

**WARNING**

- DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury to personnel.

WATER PUMP REPLACEMENT - CONTINUED

0060 00

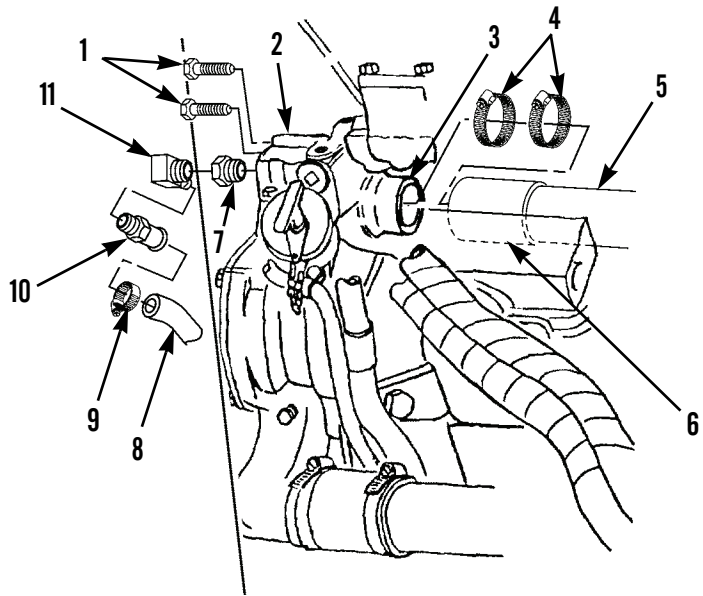
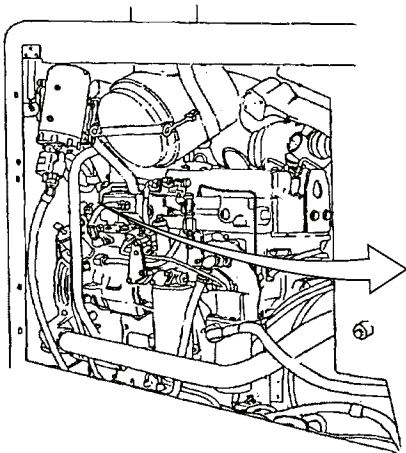
REMOVAL

1. Loosen two clamps (4) at left side of engine.

CAUTION


Cap all hose and tube ends and plug all open ports to prevent contamination.

2. Disconnect hose (6) from housing (3) by sliding up on tube (5).
3. Remove two clamps (4).
4. Loosen clamp (9) at front of water pump (2), disconnect hose (8), and remove clamp (9).
5. Remove connector (10), elbow (11), and bushing (7).
6. Remove two bolts (1).



397-181

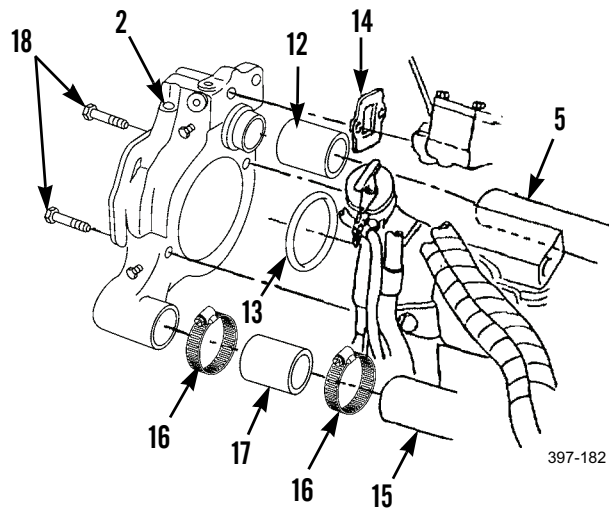
7. Support water pump (2) and remove two bolts (18).
8. Remove two clamps (16) and hose (17) from tube (15).
9. Remove water pump (2), gasket (14), and preformed packing (13) by disconnecting from hose (17). Discard gasket and preformed packing.
10. Remove hose (12) from tube (5).



397-182

REMOVAL - CONTINUED

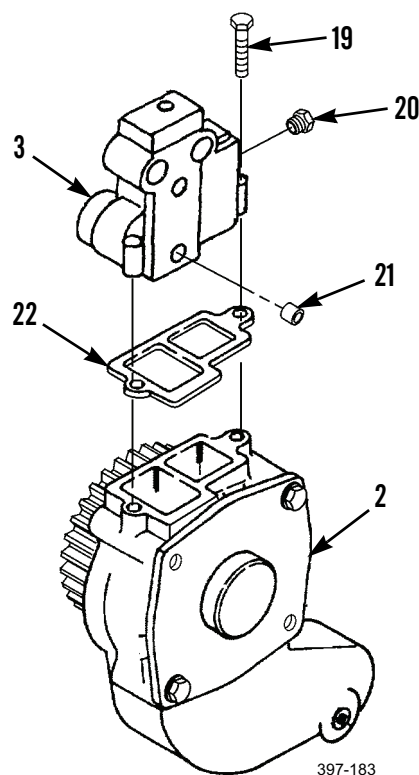11. Remove two bolts (19), housing (3), and gasket (22) from coolant pump (2). Discard gasket.
12. Remove plugs (20 and 21) from housing (3).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

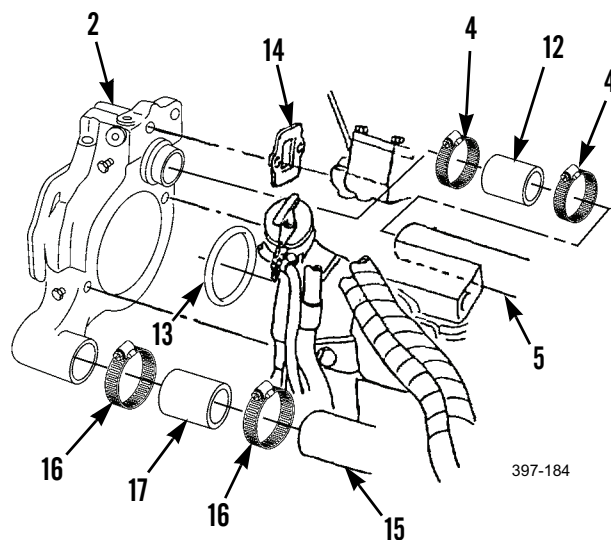1. Install plugs (21 and 20) in housing (3).
2. Install new gasket (22), housing (3), and two bolts (19) on coolant pump (2).
3. Position two clamps (16).
4. Connect hose (17) to tube (15) at left side of engine.
5. Position new gasket (14) and water pump (2). Engage coolant pump drive gear and connect hose (17).
6. Position two clamps (4) and connect hose (12) to tube (5).
7. Install new preformed packing (13) on water pump (2).




WATER PUMP REPLACEMENT - CONTINUED

0060 00

INSTALLATION - CONTINUED

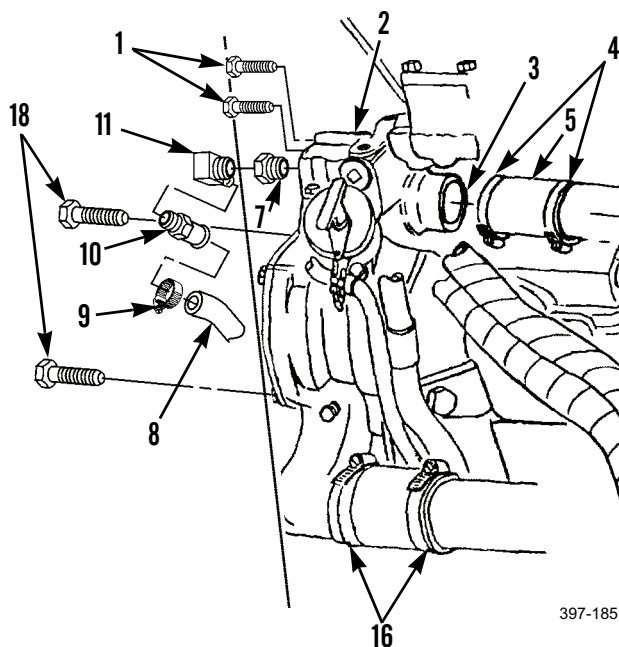8. Install two bolts (18) and bolts (1).
9. Tighten two clamps (16).
10. Install bushing (7), elbow (11), and connector (10) on front of water pump (2).
11. Position clamp (9), connect hose (8), and tighten clamp.
12. Connect tube (5) to housing (3).
13. Tighten two clamps (4).



397-185

14. Refill cooling system (WP 0065 00).
15. Install ether starting aid temperature switch (WP 0114 00).
16. Install coolant temperature switch (WP 0114 00).
17. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
18. Check for leaks. Stop engine.
19. Install engine compartment front dash plate (WP 0183 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation, Adjustment

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

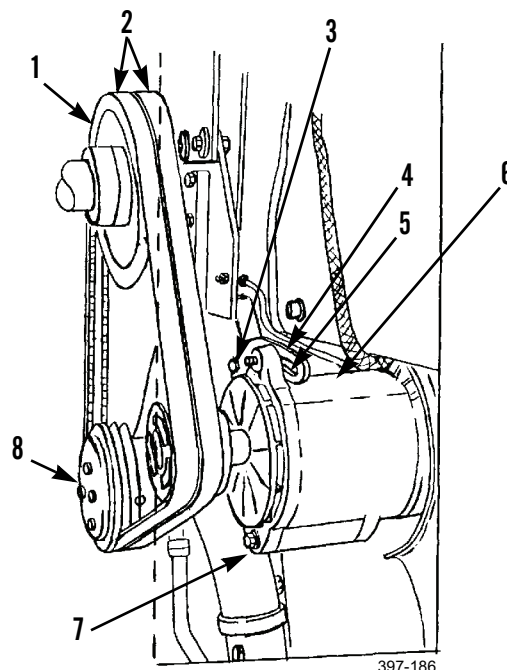
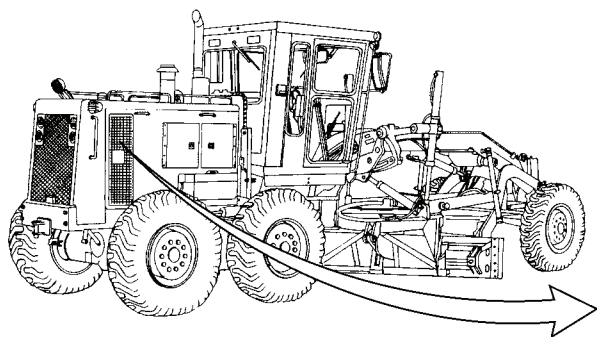
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left and right side screen doors opened (WP 0055 00)

REMOVAL

1. Loosen three bolts (3, 4, and 7).
2. Push in alternator (6) on bracket (5) to relieve belt tension.
3. Remove two belts (2) from pulleys (1 and 8).



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00. Discard both belts if one or both are cracked, worn, broken, frayed, or oil soaked.

INSTALLATION**CAUTION**

When installing belts, use care to avoid cutting belts on fan blades.

NOTE

Belts must be replaced as a matched set.

1. Install two belts (2) on pulleys (8 and 1).
2. Pull out alternator (6) on bracket (5) until two belts (2) are tight.
3. Hand tighten three bolts (7, 4, and 3).

ADJUSTMENT**NOTE**

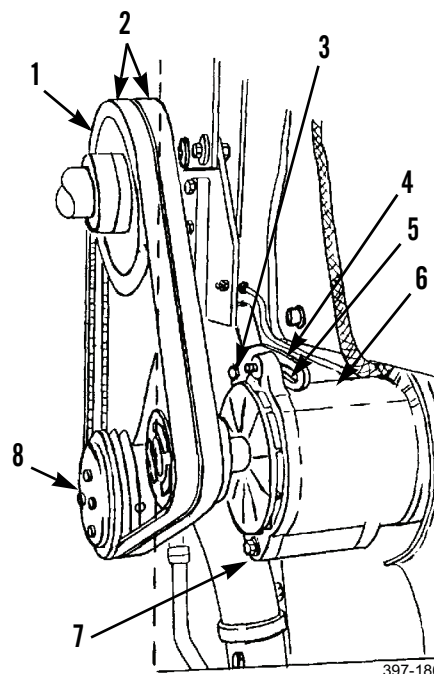
Use only one belt to adjust belt tension.

1. Position belt tension gauge on belt (2) farthest from engine and check tension.

NOTE

New belts should be tightened to 120 ± 5 lb-ft (163 ± 7 Nm). Used belts should be tightened to 90 ± 10 lb-ft (122 ± 14 Nm).

2. Move alternator (6) on bracket (5) in to decrease tension or out to increase tension of belts (2) as necessary.
3. Tighten three bolts (7, 4, and 3).

**WARNING**

Close and fasten screen before performing next step. Failure to do so may cause injury.

4. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10). Operate at high idle for a minimum of 30 minutes.
5. Stop engine.
6. Check tension of two belts (2) with belt tension gauge. Repeat steps 1 through 3 if adjustment is needed.
7. Close left and right side screen doors (WP 0055 00).

END OF WORK PACKAGE

FAN LUBRICATION LINE REPLACEMENT

0062 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Caps

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

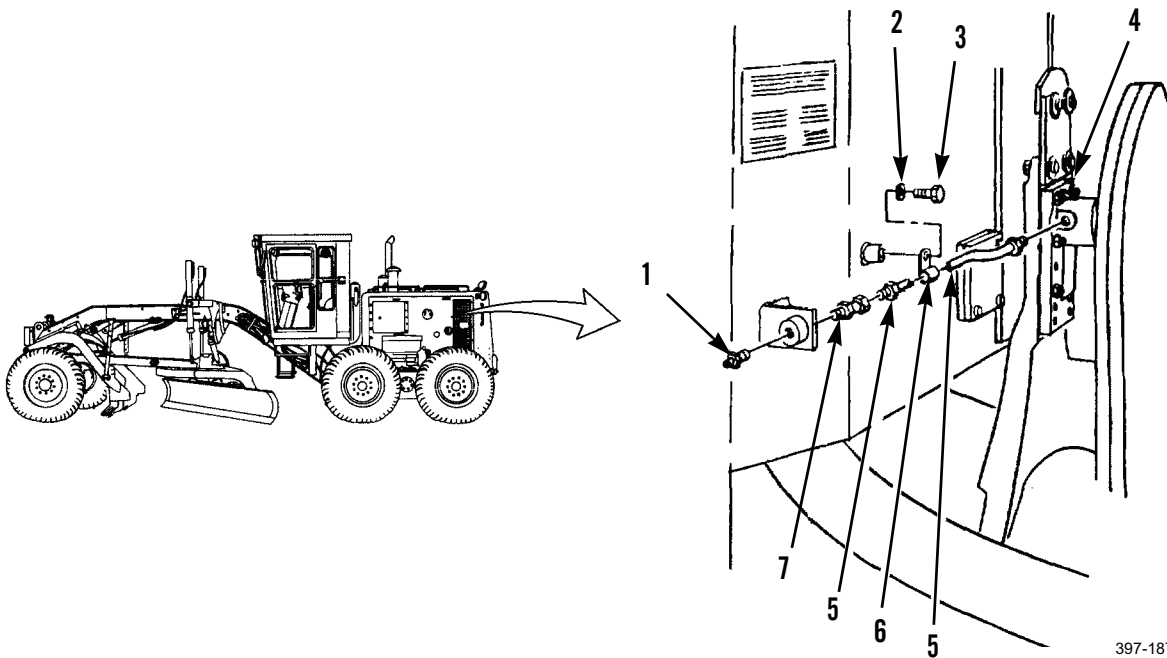
Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side screen door opened (WP 0055 00)

REMOVAL**CAUTION**

Cap all hose ends and plug open port to prevent contamination.

1. Disconnect hose assembly (5) from adapter (7).
2. Remove fitting (1) and adapter (7).
3. Remove bolt (3), washer (2), and clamp (6).
4. Remove hose assembly (5) from fan bracket (4).



397-187

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Connect hose assembly (5) to fan bracket (4).
2. Install clamp (6), washer (2), and bolt (3).
3. Install adapter (7) and fitting (1).
4. Install hose assembly (5) to adapter (7).
5. Lubricate in accordance with WP 0020 00.
6. Close left side screen door WP 0055 00.

END OF WORK PACKAGE

FAN AND FAN DRIVE REPLACEMENT

0063 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Grease, GAA (Item 17, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Bolt, self-locking (2)

Packing, preformed

Pin

Seal

Personnel Required

Two

References

WP 0020 00

WP 0023 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Fan belts removed (WP 0061 00)

Fan drive lubrication line removed (WP 0062 00)

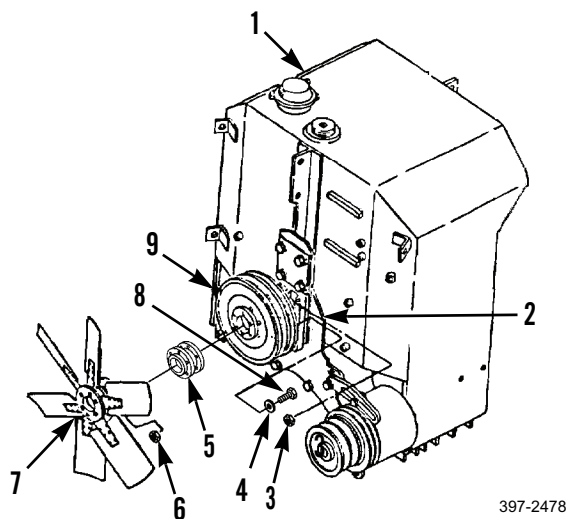
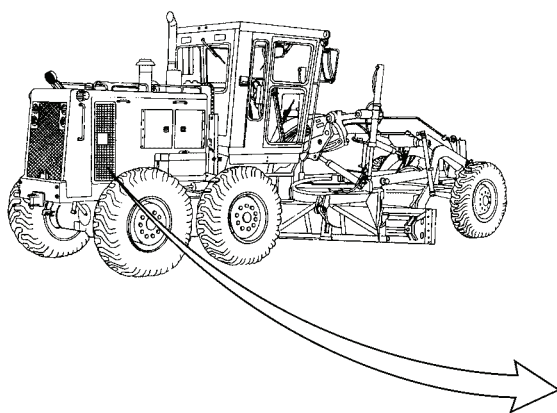
REMOVAL

1. Hold six bolts (8) on back of pulley (9) in rear of fuel tank (1) and remove six nuts (6).


CAUTION

- Do not lean fan blades into radiator.
- Place protection between fan blades and radiator.

2. Remove fan (7) and adapter (5) from bolts (8).
3. Remove fan (7).
4. Remove six bolts (8) and washers (4).
5. Remove adapter (5).
6. Remove four of six nuts (3) from lower four mounting bolts, in bracket (2).



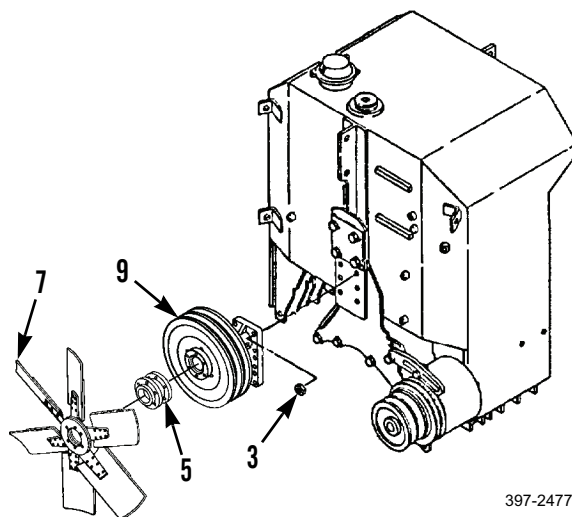7. With assistance, support pulley (9), remove remaining two of six nuts (3), and remove pulley from machine.




REMOVAL - CONTINUED

NOTE

Remove bolts and washers only if inspection indicates replacement is necessary.

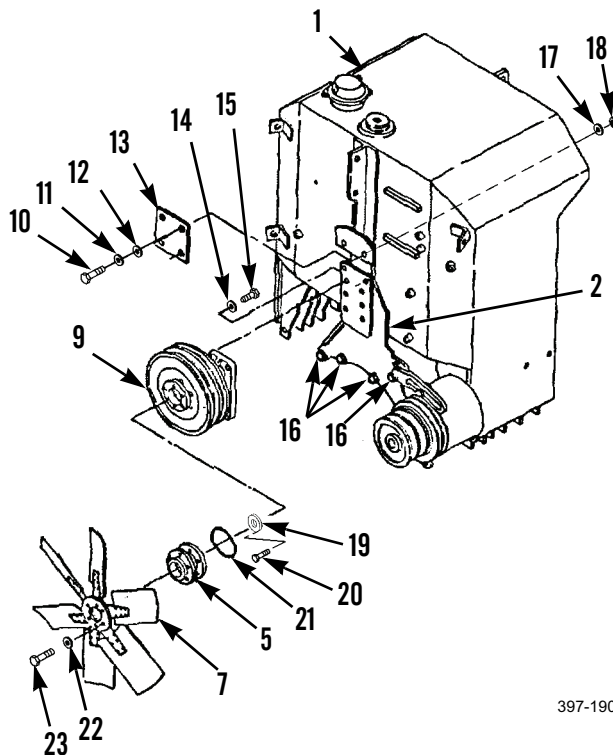8. Loosen four bolts (16).
9. Remove two nuts (18), washers (17), bolts (10), washers (11), mountings (12), and plate (13) from fuel tank (1).
10. Lean bracket (2) forward.
11. Remove six bolts (15) and washers (14) between bracket (2) and fuel tank (1).
12. Remove six bolts (23) and washers (22).
13. Separate fan (7) and adapter (5).
14. Remove two self-locking bolts (20) and spacer (19). Discard self-locking bolts.
15. Remove and discard preformed packing (21).




397-190

16. Stand pulley (9) on end of bracket (24) with hub (25) pointing upward.

NOTE

Drive down on hub to expose bearing.

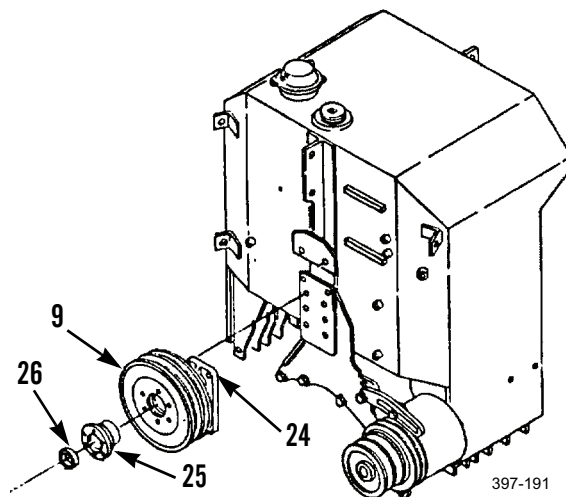
17. Separate hub (25) from bearing (26).
18. Remove bearing (26) and hub (25).



397-191

REMOVAL - CONTINUED

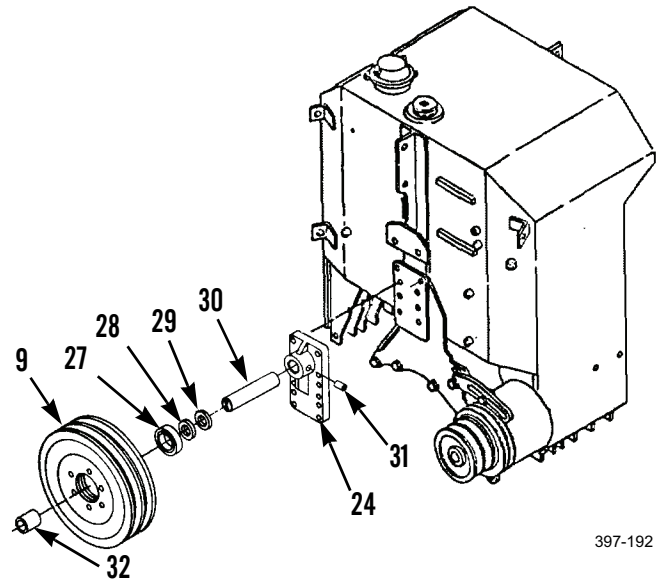19. Remove pulley (9) from shaft (30).
20. Remove spacers (29).
21. Remove seal (28) and bearing (27). Discard seal.
22. Remove and discard pin (31).
23. Remove shaft (30) from bracket (24).



397-192

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

Align pin hole in shaft with hole in bracket.

1. Install shaft (30) in bracket (24).
2. Install new pin (31).

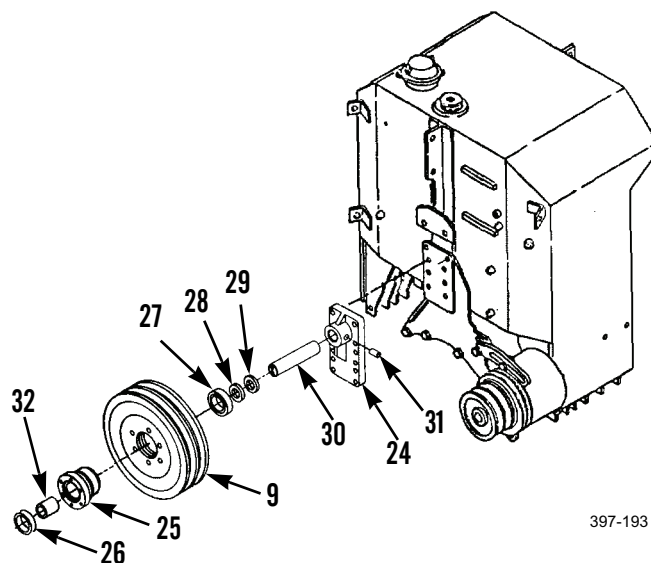
NOTE

Drive new seal in so that it is flush with small end of hub. Lip of new seal must face outward.

3. Install new seal (28).


INSTALLATION - CONTINUED

4. Apply a light coat of clean grease to lip of new seal (28) in hub (25).
5. Install bearing (27) through opposite end of hub (25) until contact with new seal (28) is made
6. Install spacer (32) in hub (25).
7. Fill cavity between bearings of hub (25) with clean grease.
8. Install bearing (31).
9. Position hub (25) with assembled parts (29, 28, and 27) on shaft (30).



397-193

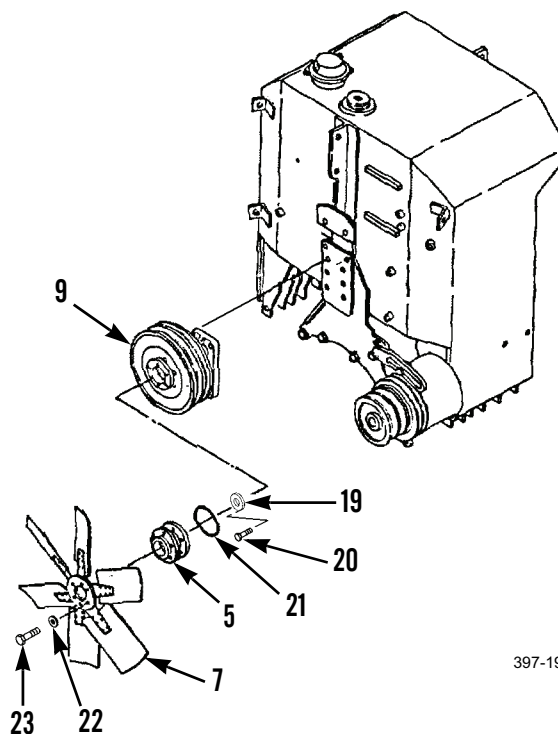
10. Install pulley (9).
11. Install new preformed packing (21).
12. Install spacer (19) and two new self-locking bolts (20).
13. Install adapter (5).
14. Install fan (7) and six washers (22) and bolts (23).



397-194

FAN AND FAN DRIVE REPLACEMENT - CONTINUED**0063 00****INSTALLATION - CONTINUED**

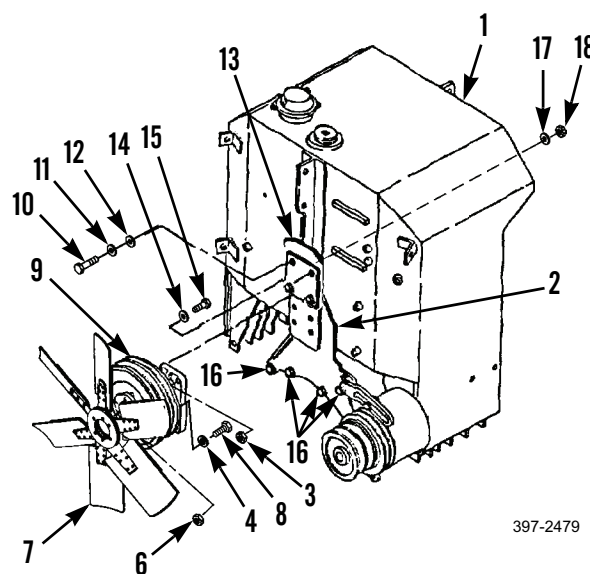15. Position six washers (14) and bolts (15) in rear of fuel tank (1), through back of bracket (2).
16. Position bracket (2) on fuel tank (1), keeping six bolts (15) in place.
17. Install two mountings (12), washers (11), bolts (10), washers (17), and nuts (18), securing plate (13).
18. Tighten four bolts (16).



19. Position fan (7) on radiator baffle.
20. Position pulley (9) on six bolts (15) and washers (14) in bracket (2) and install six nuts (3).
21. Position six washers (4) and bolts (8) through back of pulley (9).
22. Position fan (7) on six bolts (8) and install six nuts (6).
23. Install fan drive lubrication line (WP 0062 00).
24. Install fan belts (WP 0061 00).
25. Lubricate fan drive assembly (WP 0023 00).

END OF WORK PACKAGE

TRANSMISSION OIL PUMP PULLEY REPLACEMENT

0064 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Seal

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

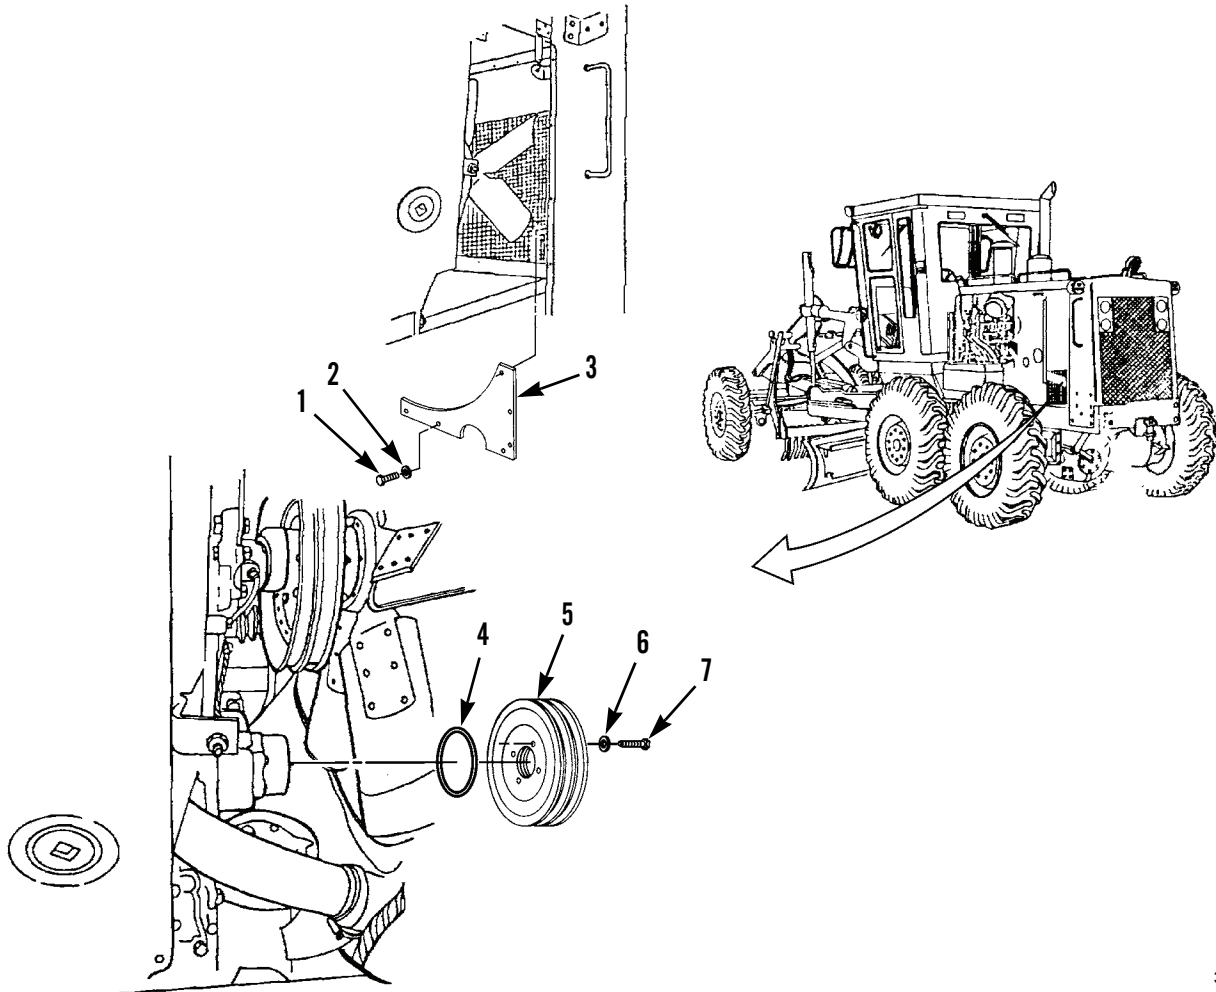
Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side screen door opened (WP 0055 00)

Fan belts removed (WP 0061 00)

REMOVAL

1. Remove five bolts (1), washers (2), and shield (3) from lower-left side of radiator and support.
2. Remove four bolts (7), washers (6), and pulley (5).
3. Remove and discard seal (4).



397-196

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install new seal (4).
2. Install pulley (5), four washers (6), and bolts (7).
3. Install shield (3), five washers (2), and bolts (1) to lower-left side of radiator and support.
4. Install fan belts (WP 0061 00).
5. Close left side screen door (WP 0055 00).

END OF WORK PACKAGE

COOLING SYSTEM SERVICING

0065 00

THIS WORK PACKAGE COVERS

Draining, Flushing, Filling

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Antifreeze (Item 5, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

References

TB 750-651

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

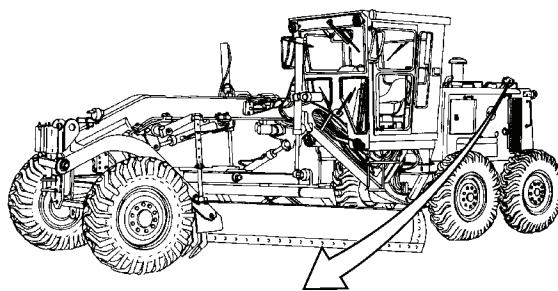
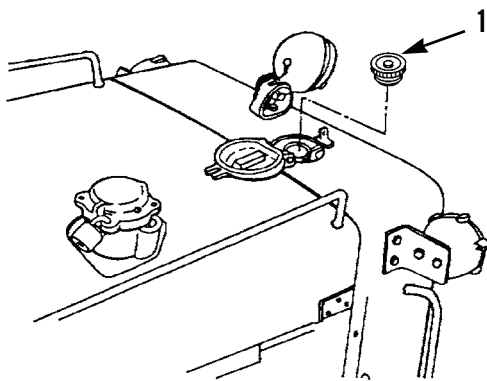
Battery disconnect switch in OFF position (TM 5-3805-261-10)

DRAINING**WARNING**

- DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury to personnel.

CAUTION

- If the machine is to be stored in or shipped to an area with below freezing temperatures, the cooling system must either be protected to the lowest expected ambient temperature, or drained completely.
 - When permanent antifreeze and water solutions are used in the cooling system, the solution should be drained and replaced every 2000 service hours or 1 year, whichever comes first.
1. Slowly loosen radiator cap (1) to relieve pressure. Remove radiator cap.




397-197

DRAINING - CONTINUED

NOTE


Cooling system capacity is 10 gal. (38 L).

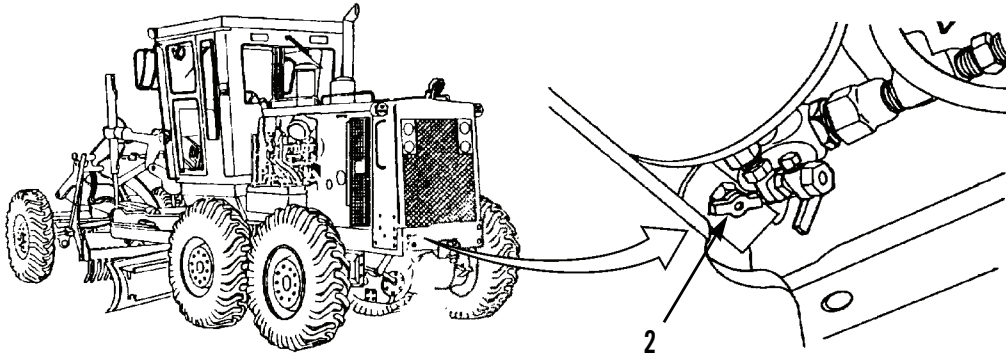2. Place container under radiator drain cock (2). Open drain cock and allow coolant solution to drain.
3. Close drain cock (2).



397-198


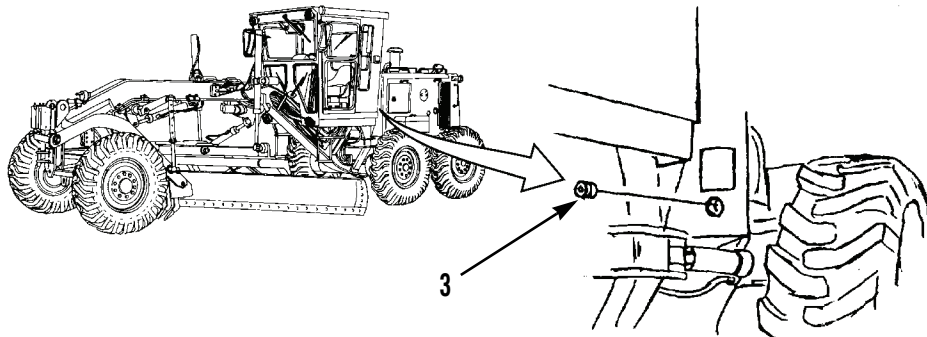
4. Place container under water pump inlet. Remove plug (3) from water pump inlet and allow coolant solution to drain.
5. Install plug (3).



397-199

DRAINING - CONTINUED

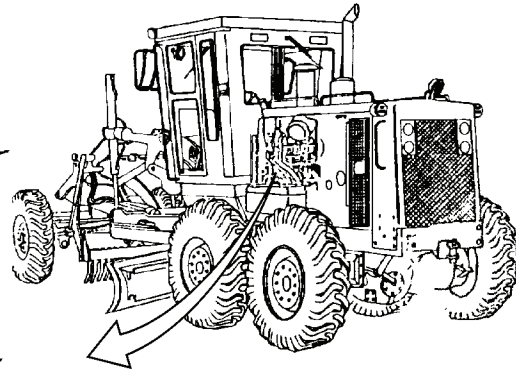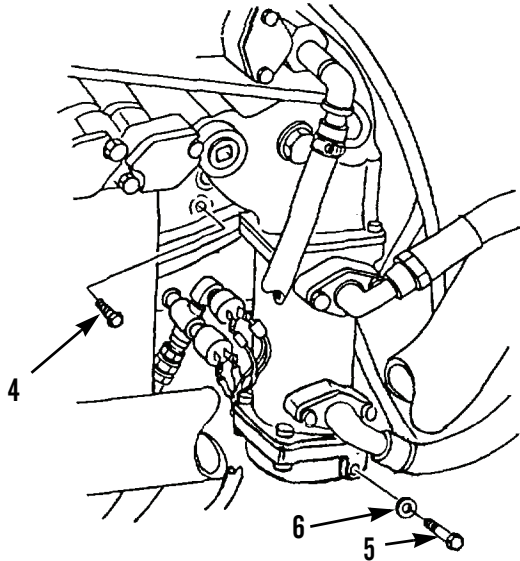6. Place container under engine block. Remove plug (4) from engine block and allow coolant solution to drain.
7. Install plug (4).
8. Place container under transmission oil cooler. Remove plug (5) and washer (6) from transmission oil cooler and allow coolant solution to drain.
9. Install washer (6) and plug (5).



397-200

FLUSHING

1. Fill radiator with clean water.
2. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10). Run engine for 15 minutes.
3. Stop engine.
4. Drain cooling system. Refer to steps 1 through 9 in *Draining* in this work package.

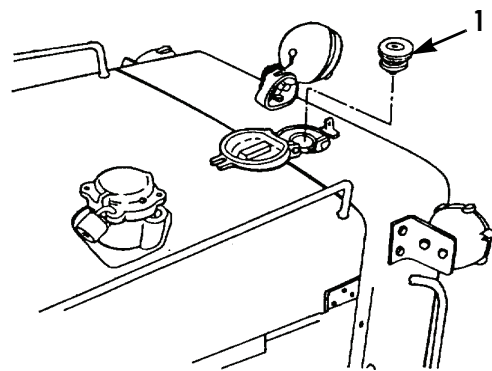
NOTE

Refer to TB 750-651 for use of engine cooling system cleaning compound.

5. Repeat flushing until draining water is clear. Use engine cooling system cleaning compound as necessary to clean heavily rusted or partially clogged cooling system, to neutralize residual acids, and coat interior with silicate.

FILLING

1. Mix 10 gal. (38 L) of coolant solution (50% water and 50% antifreeze).
2. Add coolant solution slowly, 5 gal. (19 L) per minute or less, until level of coolant solution is just below bottom of filler neck.
3. With radiator cap (1) removed, turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10). Let engine run for 15 minutes and check for leaks.
4. Stop engine and recheck coolant solution level. Add coolant solution as needed.
5. Install radiator cap (1).



397-2048

END OF WORK PACKAGE

ALTERNATOR AND MOUNTINGS MAINTENANCE

0066 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation, Testing

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 101, WP 0348 00)

Jumper wire

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Nut

Washer (1 or 2)

Personnel Required

Two

References

WP 0021 00

WP 0061 00

WP 0063 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

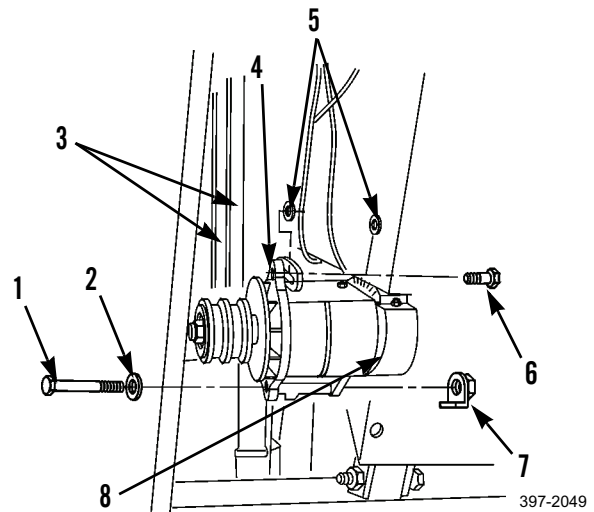
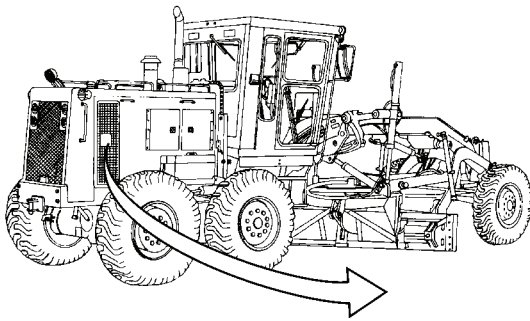
Left and right side screen doors opened (WP 0055 00)

Alternator radio interference suppression capacitor removed (WP 0146 00)

Battery cables disconnected (WP 0125 00)

REMOVAL


1. Loosen bolts (1, 4, and 6).
2. Move alternator (8) to release tension on two fan belts (3).
3. Remove two fan belts (3).
4. Remove bolt (6) and two washers (5).
5. Support alternator (8) and remove bolt (1), washer (2), and nut (7).



NOTE


Tag wires before disconnecting to aid in installation.

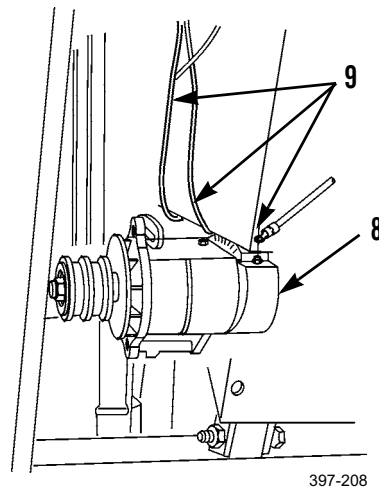6. Disconnect three wires (9) from alternator (8).
7. Remove alternator (8).



Delco Alternator

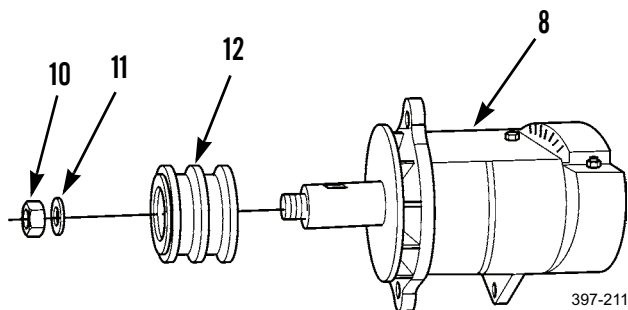
8. Remove and discard nut (10) and washer (11).
9. Use an alternator pulley tool to remove pulley (12) from alternator (8).



397-211

Bosch Alternator

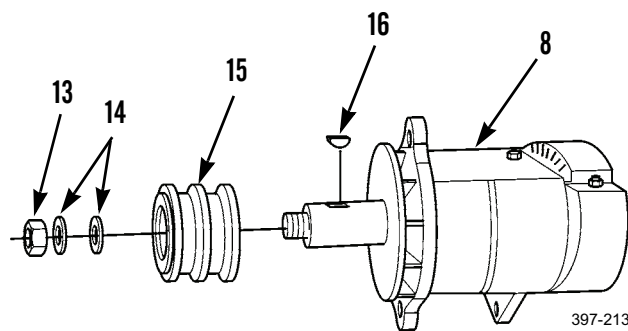10. Remove nut (13), two washers (14), and pulley (15). Discard nut and washers.
11. Remove key (16) from alternator (8).




397-213

NOTE

If bracket needs replacement, remove fan and fan drive (WP 0063 00).

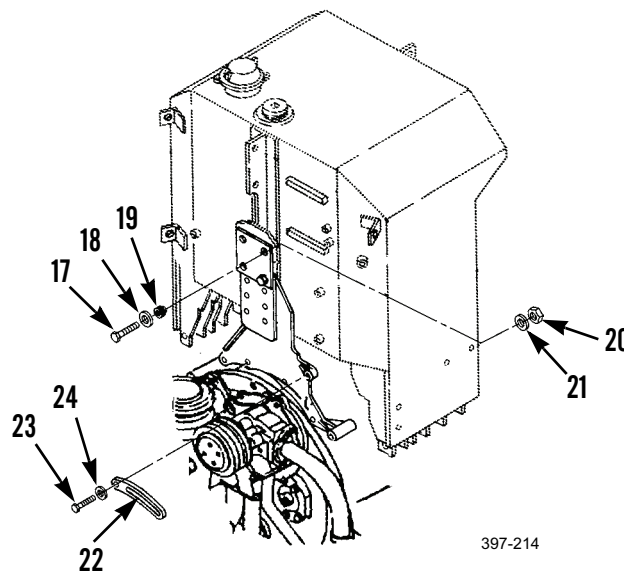
12. Remove bolt (23), washer (24), and arm (22).
13. Remove two nuts (20), washers (21), bolts (17), washers (18), and mountings (19).



397-214

Delco Alternator - Continued

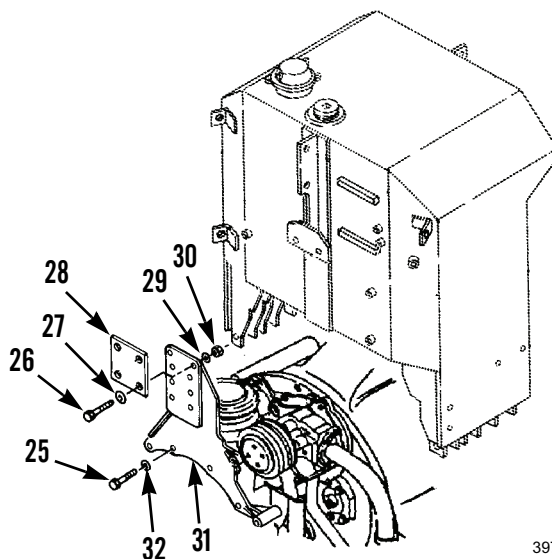14. Remove two nuts (30), washers (29), bolts (26), washers (27), and plate (28).
15. Support bracket (31) and remove four bolts (25), washers (32), and bracket.



397-215

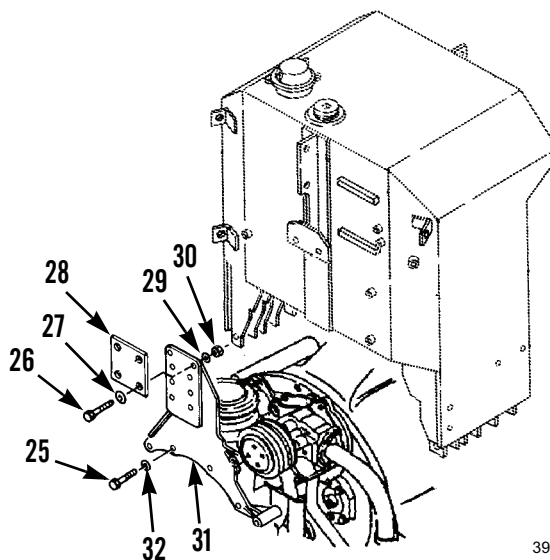
CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION**NOTE**

If bracket was removed, install fan and fan drive (WP 0063 00).


1. Install bracket (31), four washers (32), and bolts (25).
2. Install plate (28), two washers (27), bolts (26), washers (29), and nuts (30).



397-215


INSTALLATION - CONTINUED

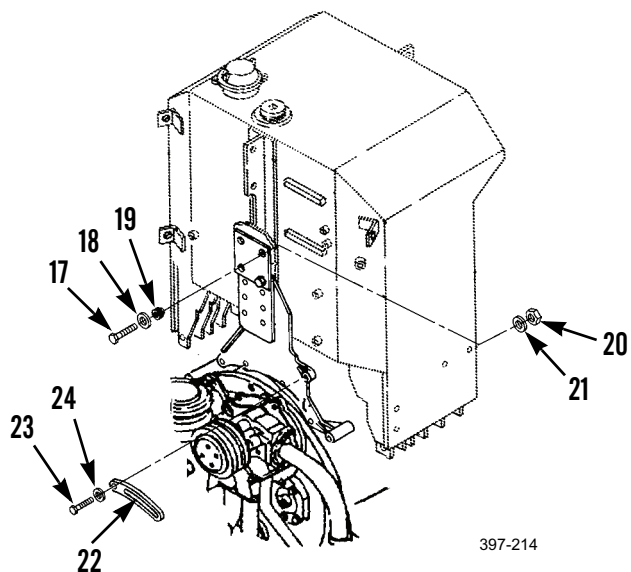3. Install two mountings (19), washers (18), bolts (17), washers (21), and nuts (20).
4. Install arm (22), washer (24), and bolt (23).




Bosch Alternator

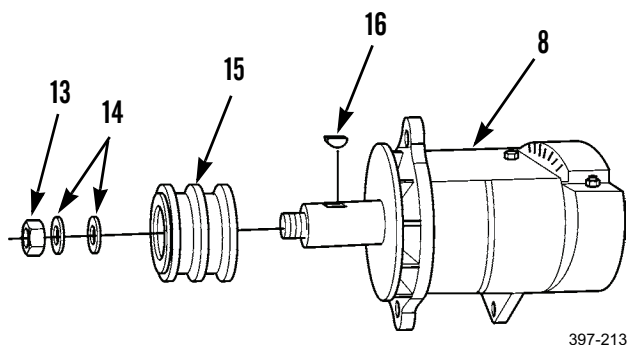5. Install key (16) and pulley (15) on alternator (8).
6. Install two new washers (14) and new nut (13). Tighten nut to 75 lb-ft (102 Nm).



Delco Alternator

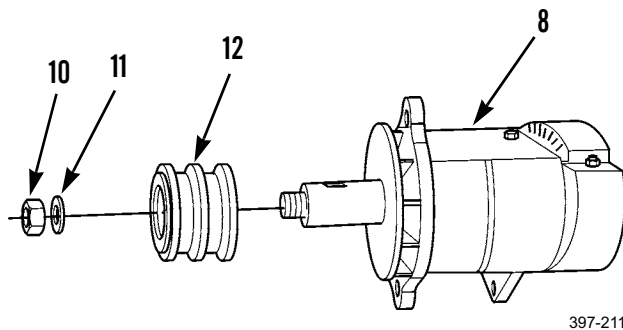
7. Install pulley (12), new washer (11), and new nut (10) on alternator (8). Tighten nut to 79 lb-ft (107 Nm).



INSTALLATION - CONTINUED

Delco Alternator - Continued

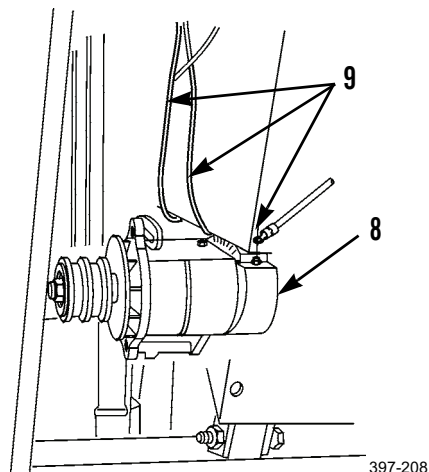8. Connect three wires (9) to alternator (8).



NOTE

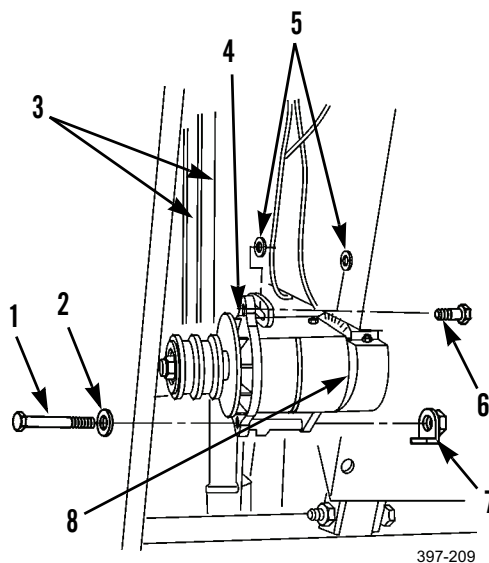
Do not tighten bolt.

9. Position alternator (8) and install nut (7), washer (2), and bolt (1).

NOTE

Do not tighten bolt.

10. Install two washers (5) and bolt (6).
11. Position two fan belts (3).
12. Tighten bolts (1, 4, and 6).



13. Adjust fan belts (WP 0061 00).

TESTING

1. Install alternator radio interference suppression capacitor (WP 0146 00).
2. Connect multimeter voltage leads to output and ground terminals on alternator.
3. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
4. Check voltage. If voltage is not 26.5 to 28, proceed to step 6.

NOTE

Alternator may not charge and still be good. Attempt to restore residual magnetic field prior to replacing.

5. Use a jumper wire to connect positive output terminal of alternator to "R" (relay) terminal on Delco alternators (D+ terminal on Bosch alternators) for approximately 2 seconds. This temporary connection should provide sufficient current from batteries to restore residual magnetic field in alternator.
6. Check voltage. If voltage is still not 26.5 to 28, notify Direct Support Maintenance.
7. Stop engine.
8. Close left and right side screen doors (WP 0055 00).

END OF WORK PACKAGE

STARTING MOTOR REPLACEMENT

0067 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

References

WP 0021 00

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

Lockwasher (4)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Right side engine panel removed (WP 0182 00)

REMOVAL**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Failure to follow this warning may cause injury to personnel.

NOTE

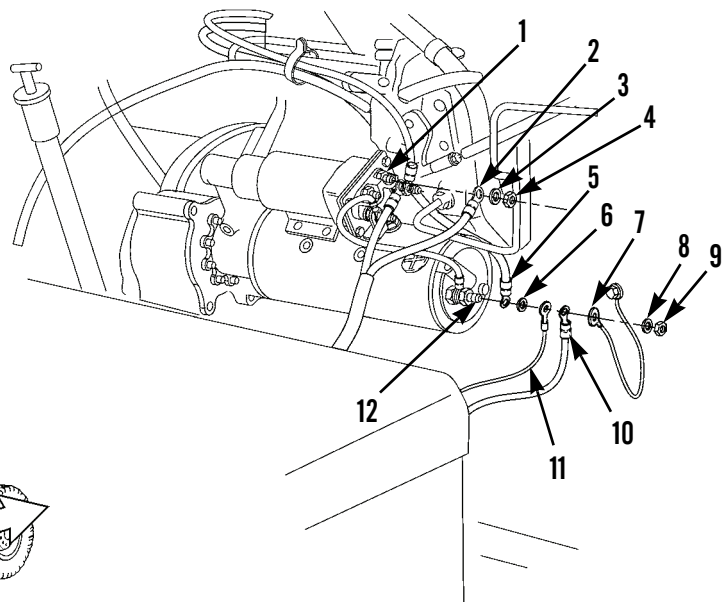
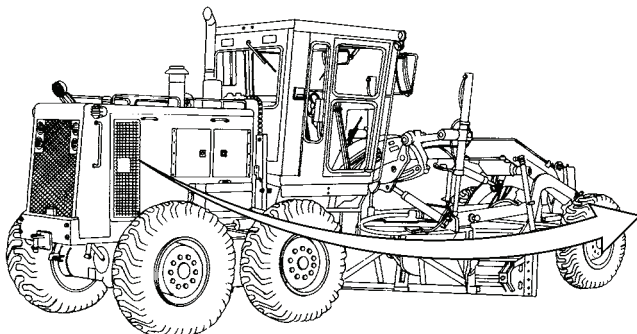
Starting motor weighs 50 lb (23 kg).

1. Remove nut (9) and lockwasher (8) from terminal stud (12). Discard lockwasher.

NOTE

Tag all wire and cable assemblies before disconnecting to aid in installation.

2. Disconnect wire assembly (7), cable assembly (10), and wire assembly (11).
3. Remove and discard lockwasher (6).
4. Disconnect cable assembly (5).
5. Remove nut (4) and lockwasher (3) from terminal stud (1). Discard lockwasher.
6. Disconnect wire assembly (2).




397-222

STARTING MOTOR REPLACEMENT - CONTINUED

0067 00

REMOVAL - CONTINUED

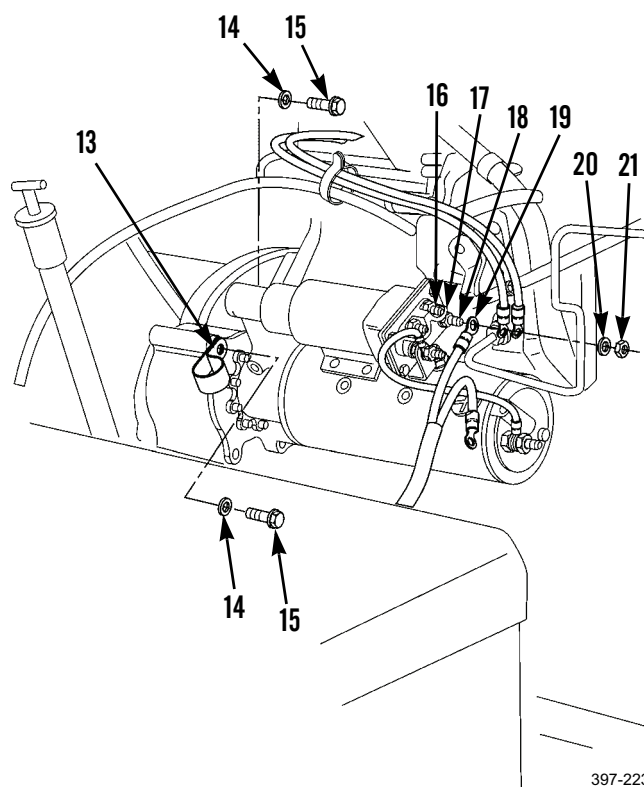7. Remove nut (21) and lockwasher (20) from terminal stud (16). Discard lockwasher.
8. Disconnect wire assemblies (19, 18, and 17).
9. Remove three bolts (15), washers (14), and clamp (13).




397-223

NOTE

Pull starting motor back and turn solenoid to right to clear solenoid of turbocharger oil line.

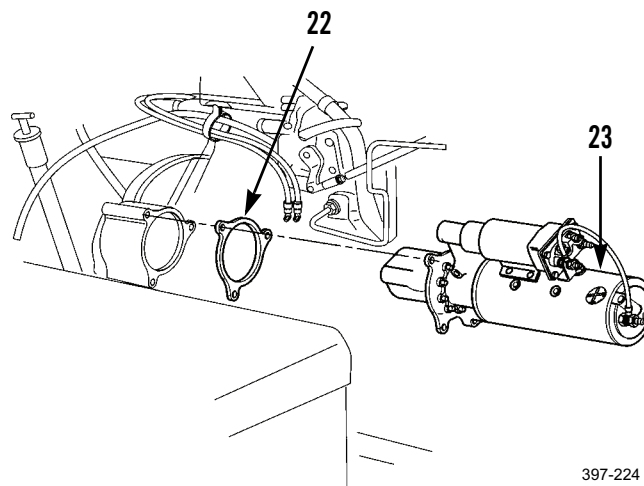10. Remove starting motor (23) and gasket (22). Discard gasket.




397-224

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

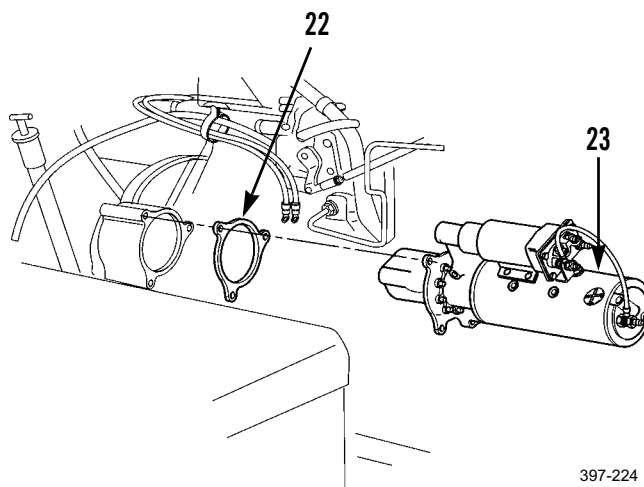
1. Position new gasket (22) and starting motor (23) on flywheel housing.



NOTE


Make sure bolts are starter mounting bolts.

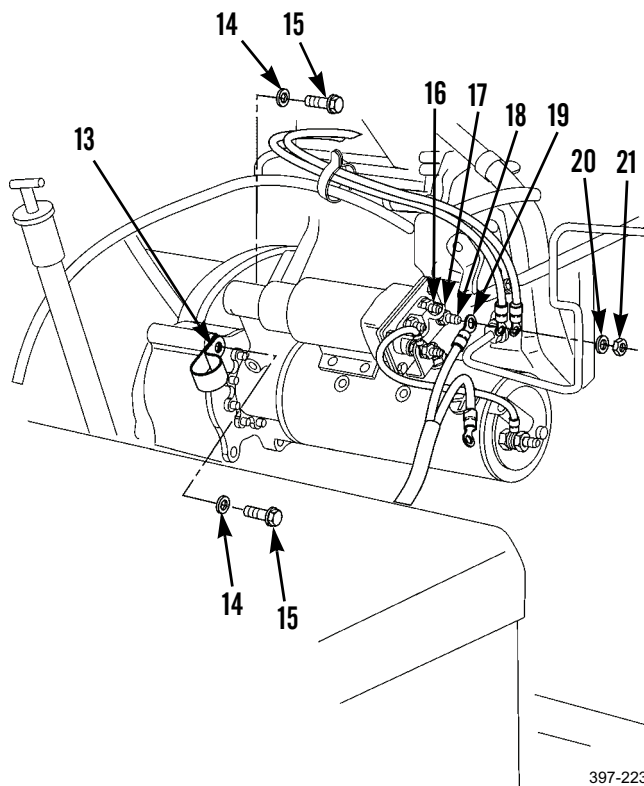2. Install clamp (13), three washers (14), and bolts (15).
3. Position wire assemblies (17, 18, and 19) on terminal stud (16).
4. Install new lockwasher (20) and nut (21). Tighten nut to 22 lb-ft (30 Nm).



INSTALLATION - CONTINUED

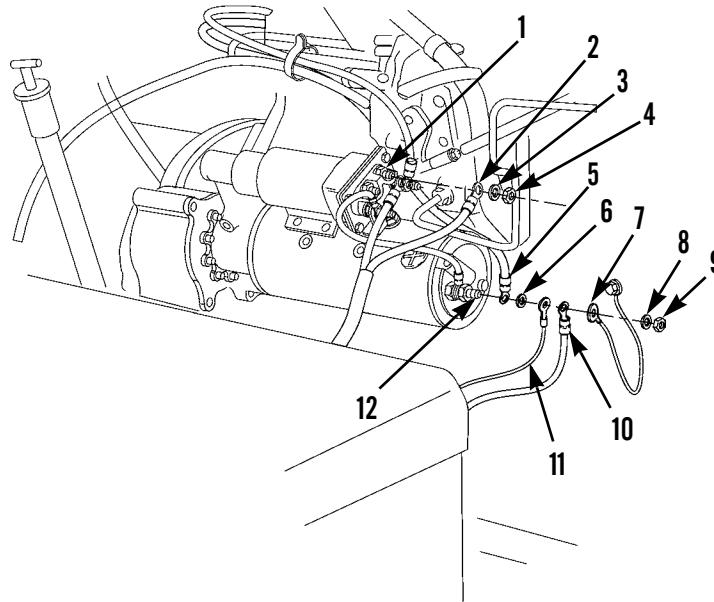5. Position wire assembly (2) on terminal stud (1).
6. Install new lockwasher (3) and nut (4). Tighten nut to 36 lb-ft (49 Nm).
7. Position cable assembly (5) on terminal stud (12).
8. Install new lockwasher (6).
9. Position wire assembly (11), cable assembly (10), and wire assembly (7).
10. Install new lockwasher (8) and nut (9). Tighten nut to 22 lb-ft (30 Nm).



397-222

11. Install right side engine panel (WP 0182 00).
12. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

STARTING MOTOR RELAY REPLACEMENT

0068 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, field maintenance (Item 74, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

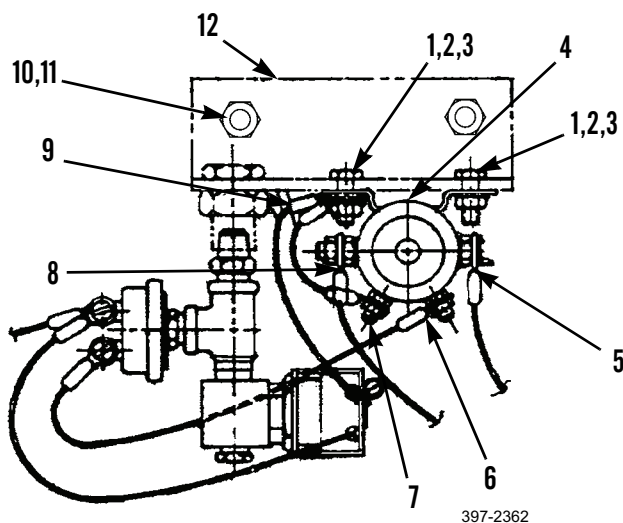
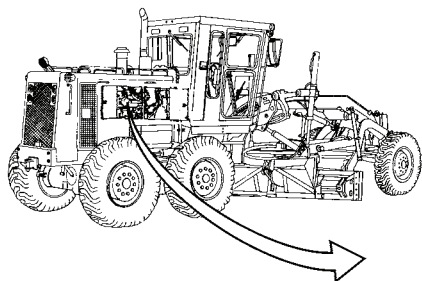
Battery cables disconnected (WP 0125 00)

Right side engine doors opened (TM 5-3805-261-10)

REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect wires (5, 6, 7, and 8) from terminals on starting motor relay (4).
2. Remove two nuts (1), two bolts (2), four washers (3), starting motor relay (4) and disconnect two wires (9).
3. Remove two bolts (10), washers (11), and plate (12).



397-2362

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install plate (12) and two washers (11).
2. Connect two wires (9) and install starting motor relay (4), four washers (3), two bolts (2), and nuts (1).
3. Connect wires (5, 6, 7, and 8) to terminals on starting motor relay (4).
4. Connect battery cables (WP 0125 00).
5. Close right side engine doors (TM 5-3805-261-10).

END OF WORK PACKAGE

ELECTRONIC MONITORING SYSTEM (EMS) PANEL REPLACEMENT

0069 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Steering console hood removed (WP 0196 00)

REMOVAL

1. Disconnect wiring harness (3).
2. Remove nut (9) and disconnect wire assembly (10).
3. Remove two nuts (11), washers (12), bracket (14), and two nuts (13).
4. Remove two nuts (8), washers (7), and bracket (6).
5. Remove two nuts (5) and bracket (4).

NOTE

Remove EMS panel and plate only if inspection indicates replacement is necessary.

6. Remove EMS panel (2) if necessary.
7. Remove plate (1) if necessary.

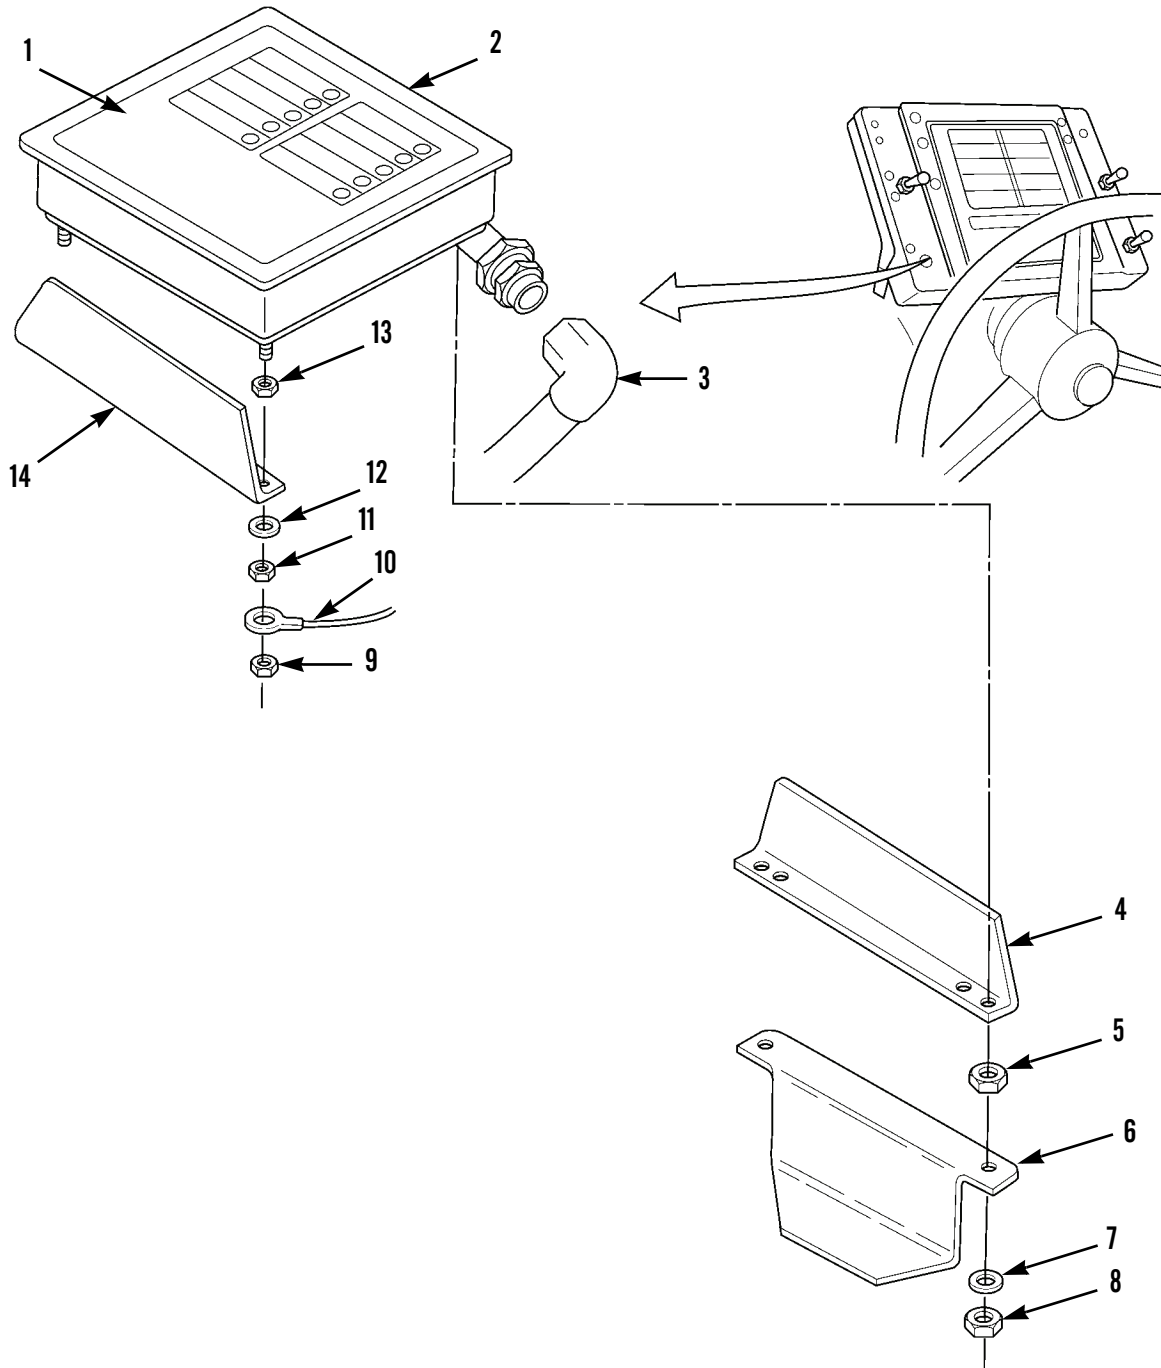
CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install plate (1) to EMS panel (2) if removed.
2. Position EMS panel (2) in steering control console if removed.
3. Install bracket (4) and two nuts (5).
4. Install bracket (6), two washers (7), and nuts (8).
5. Install two nuts (13), bracket (14), two washers (12), and nuts (11).
6. Connect wire assembly (10) and install nut (9).
7. Connect wiring harness (3) and tighten.
8. Install steering console hood (WP 0196 00).
9. Connect battery cables (WP 0125 00).

INSTALLATION - CONTINUED



397-236

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (as required)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

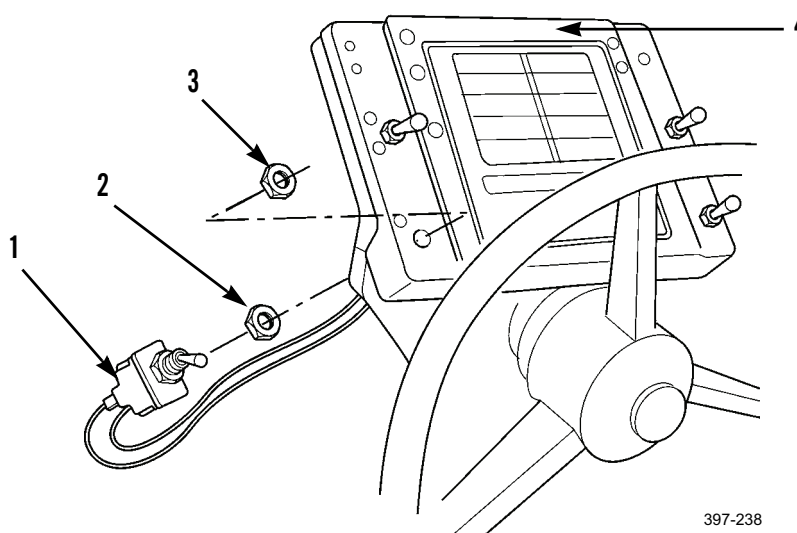
Steering console hood removed (WP 0196 00)

REMOVAL

NOTE

This procedure covers replacement of one switch. Follow these instructions for all switches.

1. Remove knurled nut (3) and switch (1) from EMS panel (4).
2. Remove nut (2) from switch (1).




397-238

REMOVAL - CONTINUED**NOTE**

Tag wire leads before disconnecting to aid in installation.

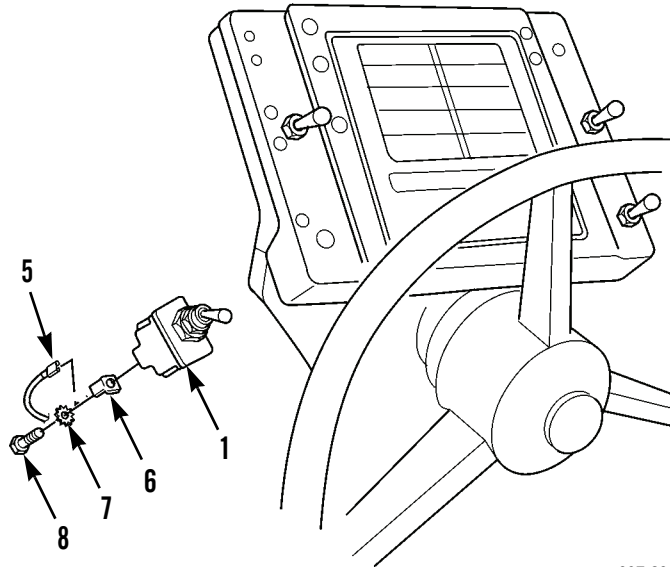3. Disconnect two wire leads (5) at terminals (6).
4. Remove two screws (8), lockwashers (7), and terminals (6) from switch (1). Discard lockwashers.




397-239

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

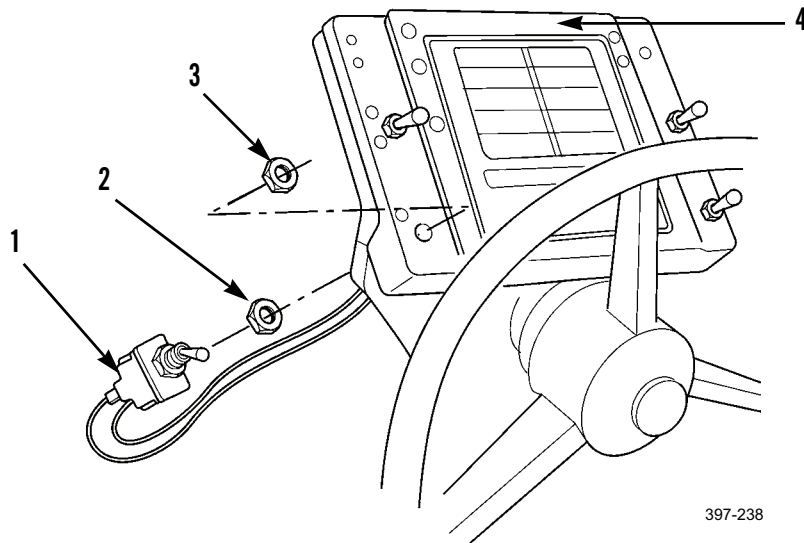1. Install two terminals (6), new lockwashers (7), and screws (8) on switch (1).
2. Connect two wire leads (5) to terminals (6).
3. Install nut (2) on switch (1).
4. Install switch (1) and knurled nut (3) in EMS panel (4).



5. Install steering console hood (WP 0196 00).
6. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

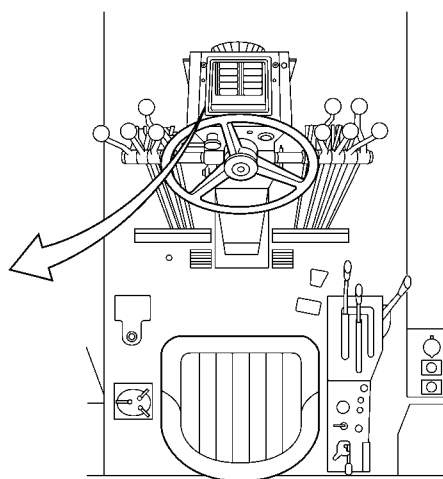
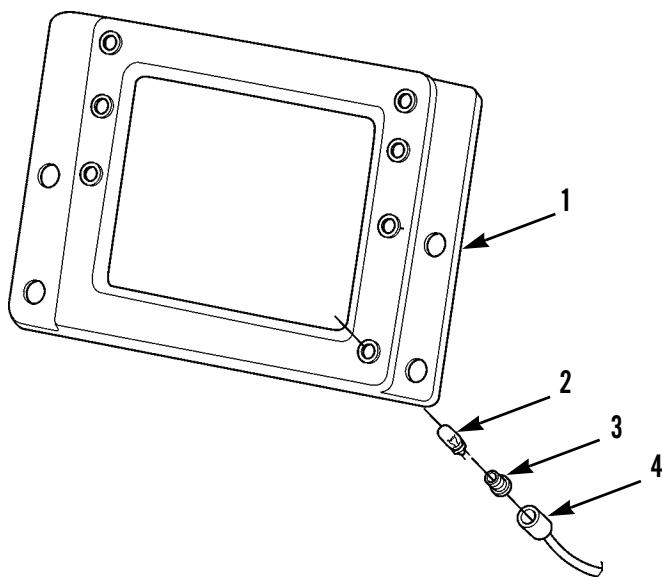
Steering console hood removed (WP 0196 00)

REMOVAL

NOTE

This procedure covers replacement of one function light. Follow these instructions for the remaining six function lights (five on CCE and Type I machines).

1. Disconnect wire assembly (4).
2. Remove socket (3) and lamp (2) from EMS panel (1).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

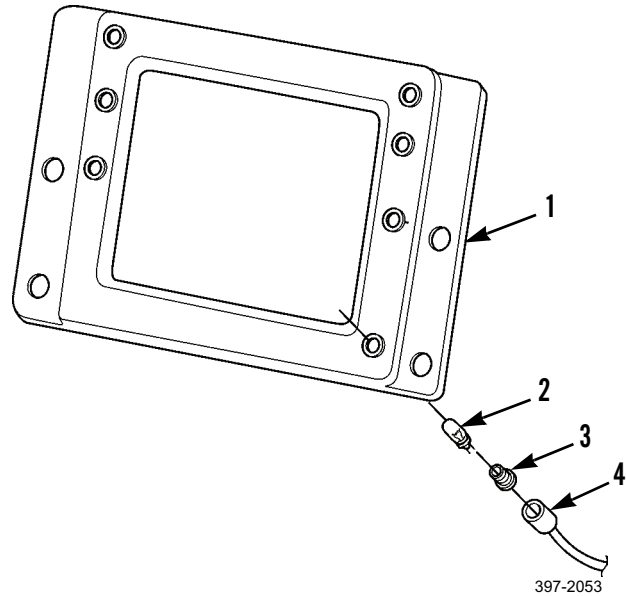1. Install lamp (2) and socket (3) on EMS panel (1).
2. Connect wire assembly (4).



3. Install steering console hood (WP 0196 00).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

ELECTRONIC MONITORING SYSTEM (EMS) FAULT LIGHT REPLACEMENT

0072 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

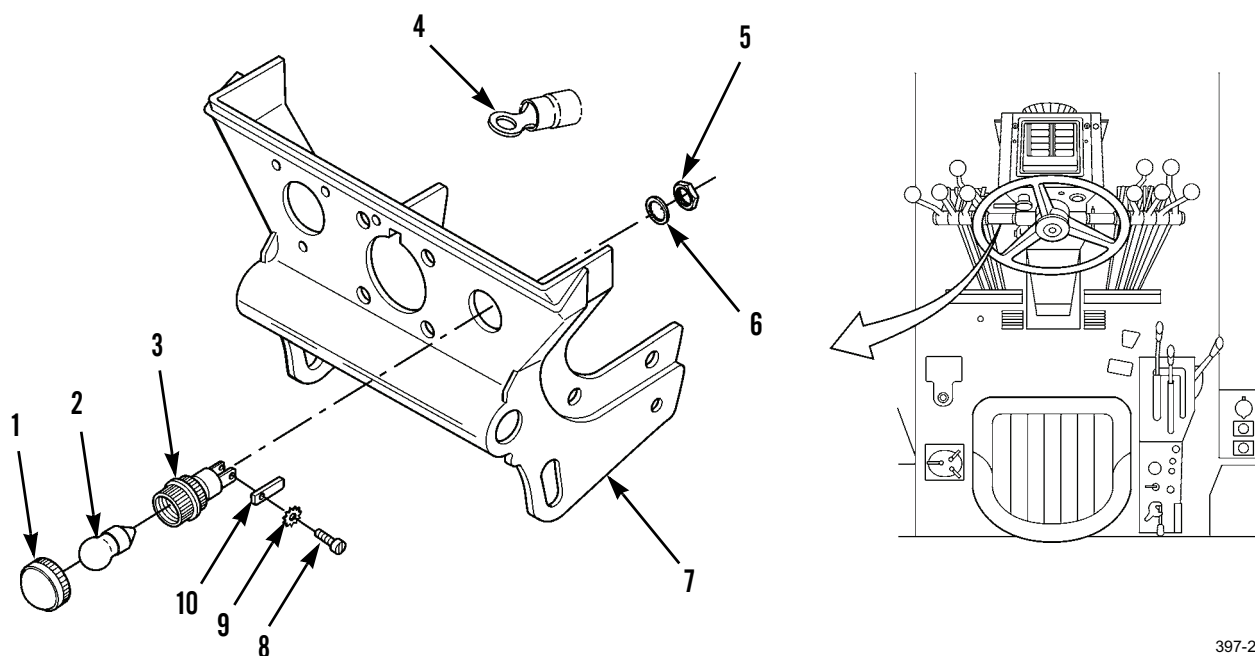
Battery cables disconnected (WP 0125 00)

Steering console hood removed (WP 0196 00)

REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect two wire assemblies (4) from terminals (10) at rear of steering console housing (7).
2. Remove nut (5), washer (6), and socket (3) from steering console housing (7).
3. Remove lens (1) and lamp (2) from socket (3).
4. Remove two screws (8), lockwashers (9), and terminals (10) from socket (3). Discard lockwashers.



397-241

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install two terminals (10), new lockwashers (9), and screws (8) on socket (3).
2. Install lamp (2) and lens (1) on socket (3).
3. Install socket (3), washer (6), and nut (5) on steering console housing (7).
4. Connect two wire assemblies (4) to terminals (10) at rear of steering console housing (7).
5. Install steering console hood (WP 0196 00).
6. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

TURN SIGNAL SWITCH REPLACEMENT

0073 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (3)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

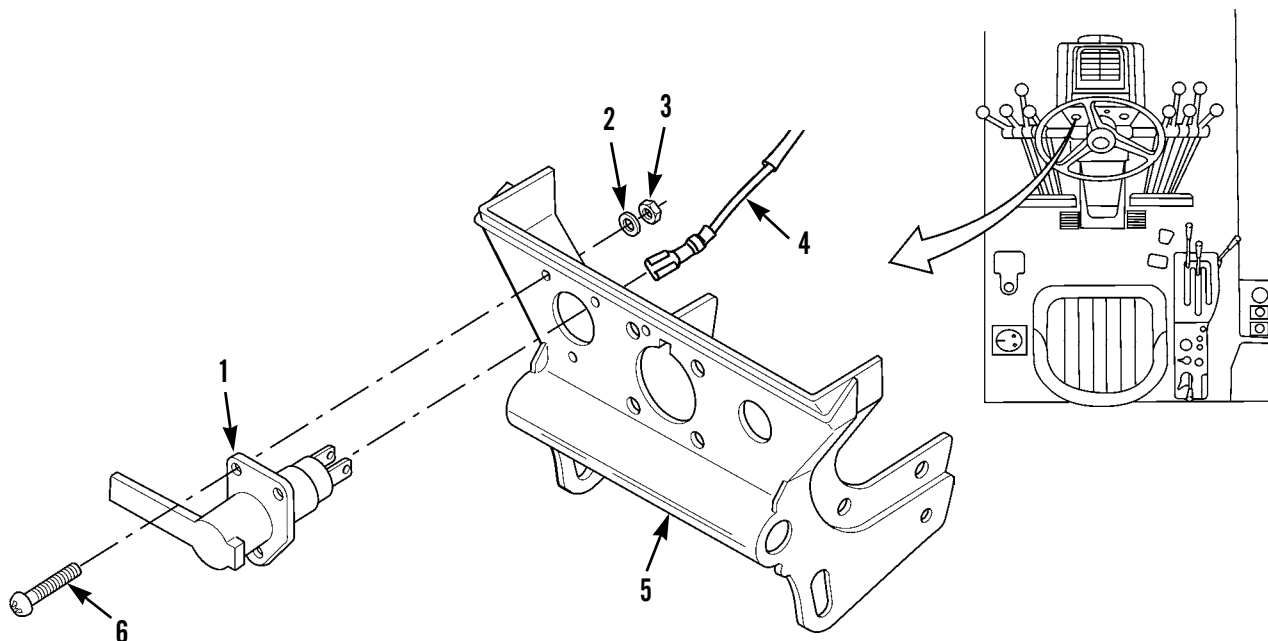
Battery cables disconnected (WP 0125 00)

Steering console hood removed (WP 0196 00).

REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect three wire assemblies (4) at rear of steering console housing (5).
2. Remove three nuts (3), lockwashers (2), bolts (6), and switch (1) from steering console housing (5). Discard lockwashers.



397-242

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install switch (1), three bolts (6), new lockwashers (2), and nuts (3) in steering control console (5).
2. Connect three wire assemblies (4) at rear of steering console housing (5).
3. Install steering console hood (WP 0196 00).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

ARTICULATION INDICATOR LIGHT REPLACEMENT

0074 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Steering console hood removed (WP 0196 00).

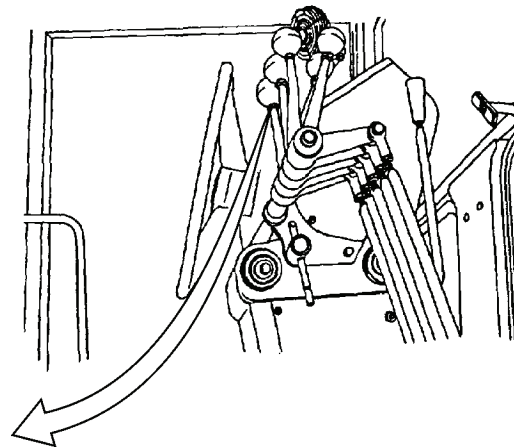
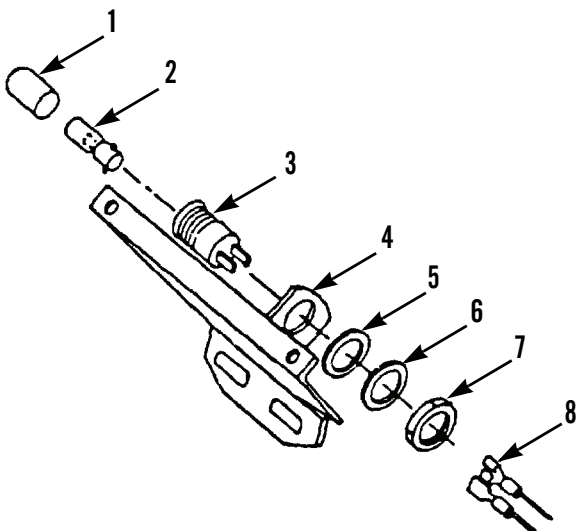
REMOVAL

1. Remove lens (1) and lamp (2) from socket (3).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

2. Disconnect two wire assemblies (8).
3. Remove nut (7), washer (6), spacer (5), and socket (3) from EMS panel (4).




397-243

ARTICULATION INDICATOR LIGHT REPLACEMENT - CONTINUED**0074 00****CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

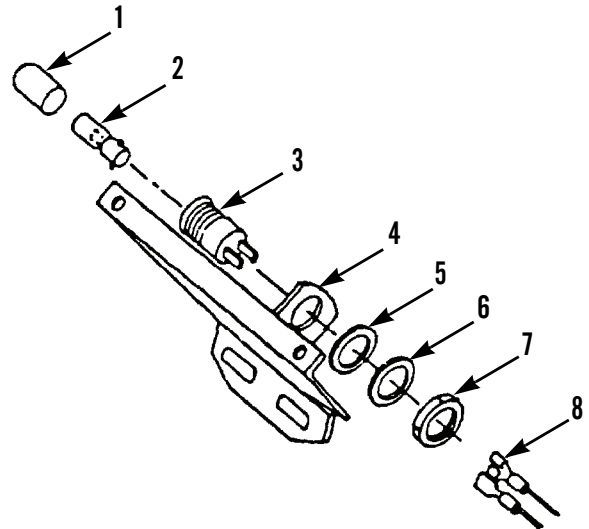1. Install socket (3), spacer (5), washer (6), and nut (7) on monitor system panel (4).
2. Connect two wire assemblies (8).
3. Install lamp (2) and lens (1) on socket (3).



397-2056

4. Install steering console hood (WP 0196 00).
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Adhesive (Item 3, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

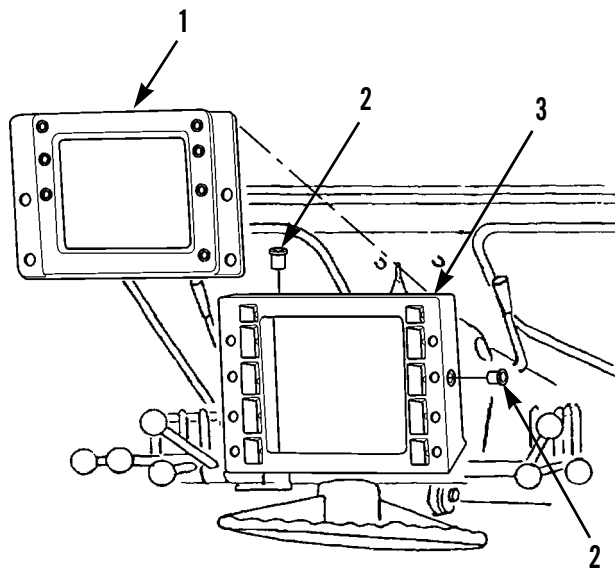
Panel switches removed (WP 0070 00)

Function lights removed (WP 0071 00)

Articulation indicator light removed (WP 0074 00)

REMOVAL

1. Separate cover (1) from panel (3).
2. Remove four nuts (2) from panel (3).



397-244

REMOVAL - CONTINUED**NOTE**

Remove lenses only if inspection proves removal is necessary.

- Remove and discard two green lenses (4), four amber lenses (5), and red lens (7) from cover (1).

NOTE

Remove seals only if inspection proves removal is necessary. Replace if torn, distorted, or deteriorated.

- Remove and discard seals (6) from back of cover (1).

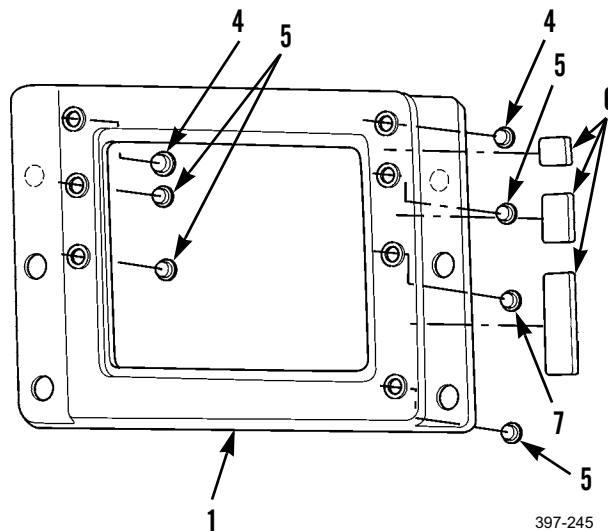
CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION**NOTE**


Cut seal to size from bulk seal.

- If removed, install new seals (6) on cover (1).
- If removed, install new red lens (7), four new amber lenses (5), and two new green lenses (4) on cover (1). Apply a light thin coat of PVC adhesive to outer diameter of lens holes in cover. Apply to backside of cover only.



INSTALLATION - CONTINUED

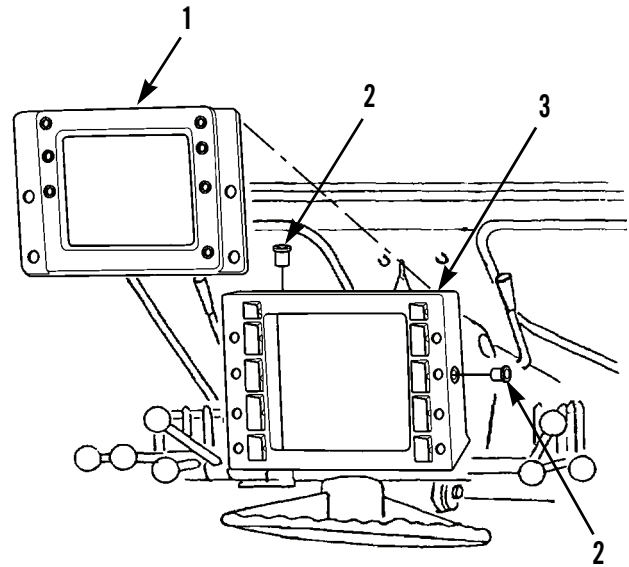3. Install four nuts (2) in panel (3).
4. Install cover (1) on panel (3).



397-244

5. Install articulation indicator light (WP 0074 00).
6. Install function lights (WP 0071 00).
7. Install panel switches (WP 0070 00).
8. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

WORK LIGHT SWITCHES REPLACEMENT

0076 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Left and right side plates removed from operator panel console (WP 0193 00)

REMOVAL**NOTE**

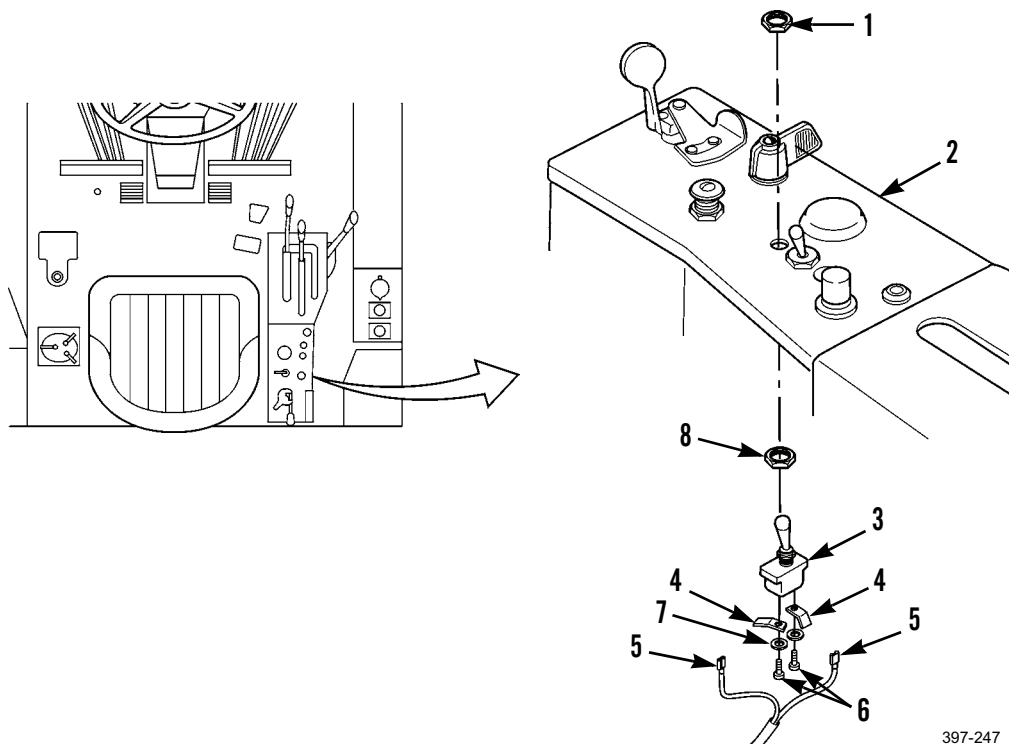
This procedure covers replacement of the rear work light switch. Follow these instructions for the front work light switch.

1. Remove knurled nut (1) and switch (3) from operator panel console (2).
2. Remove nut (8) from switch (3).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

3. Disconnect two wire assemblies (5) from terminals (4).
4. Remove two screws (6), lockwashers (7), and terminals (4) from switch (3). Discard lockwashers.



397-247

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install two terminals (4), new lockwashers (7), and screws (6) on switch (3).
2. Connect two wire assemblies (5) to terminals (4).
3. Install nut (8) on switch (3).
4. Install switch (3) and knurled nut (1) in operator panel console (2).
5. Install left and right side plates to operator panel console (WP 0193 00).
6. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

ETHER CONTROL SWITCH REPLACEMENT

0077 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Left and right side plates removed from operator panel console (WP 0193 00)

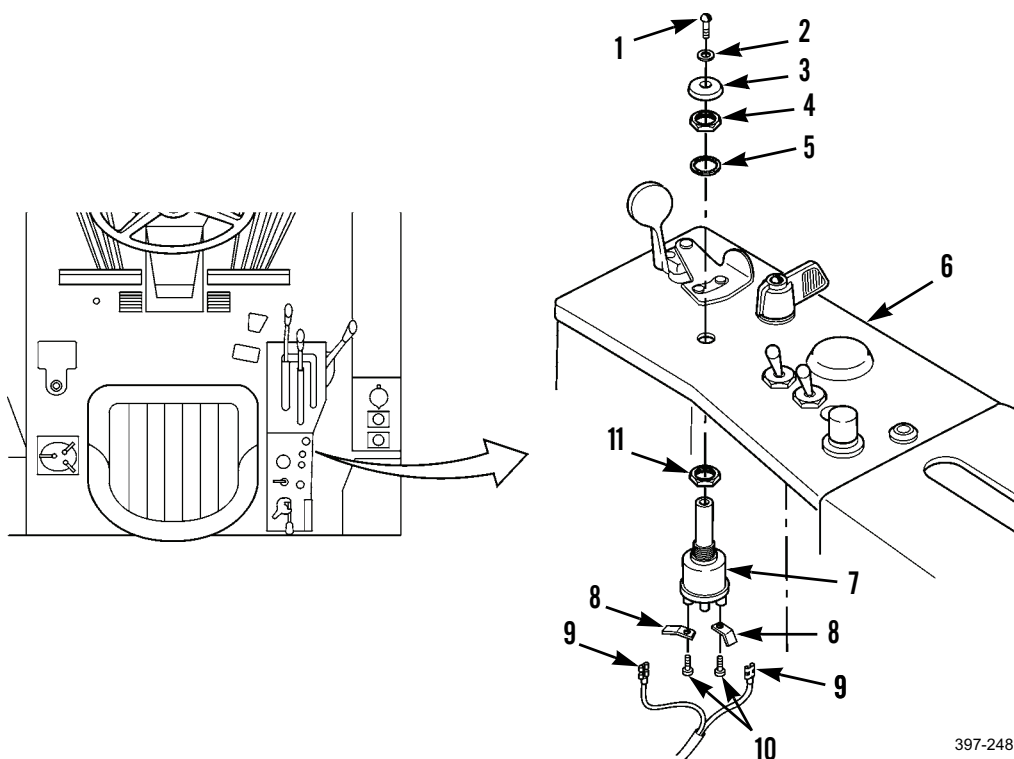
REMOVAL

1. Remove screw (1), lockwasher (2), and push button (3). Discard Lockwasher.
2. Remove nut (4), lockwasher (5), and switch (7) from operator panel console (6). Discard lockwasher.
3. Remove nut (11) from switch (7).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

4. Disconnect two wire assemblies (9) from terminals (8).
5. Remove two screws (10) and terminals (8) from switch (7).



397-248

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install two terminals (8) and screws (10) on switch (7).
2. Connect two wire assemblies (9) to terminals (8).
3. Install nut (11) on switch (7).
4. Install switch (7), new lockwasher (5), and nut (4) on operator panel console (6).
5. Install push button (3), new lockwasher (2), and screw (1).
6. Install left and right side plates to operator panel console (WP 0193 00).
7. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

CONTROL CONSOLE LIGHT REPLACEMENT

0078 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

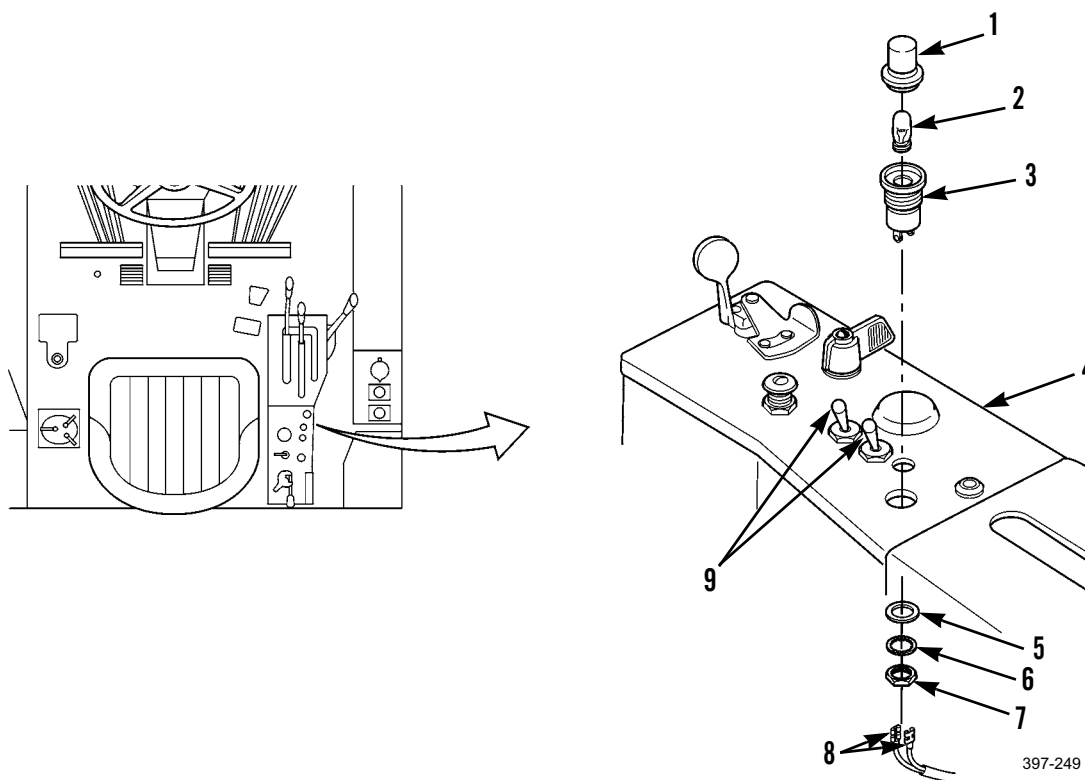
Battery cables disconnected (WP 0125 00)

Left and right side plates removed from operator panel console (WP 0193 00)

REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect two wire assemblies (8).
2. Remove nut (7), lockwasher (6), spacer (5), and socket (3) from operator panel console (4). Discard lockwasher.
3. Remove lens (1) and lamp (2) from socket (3).

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install lamp (2) and lens (1) on socket (3).
2. Position socket (3) in operator panel console (4) with lens (1) window in direction of work light switches (9).
3. Install spacer (5), new lockwasher (6), and nut (7).
4. Connect two wire assemblies (8).
5. Install left and right side plates to operator panel console (WP 0193 00).
6. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

START SWITCH REPLACEMENT

0079 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Left and right side plates removed from operator panel console (WP 0193 00)

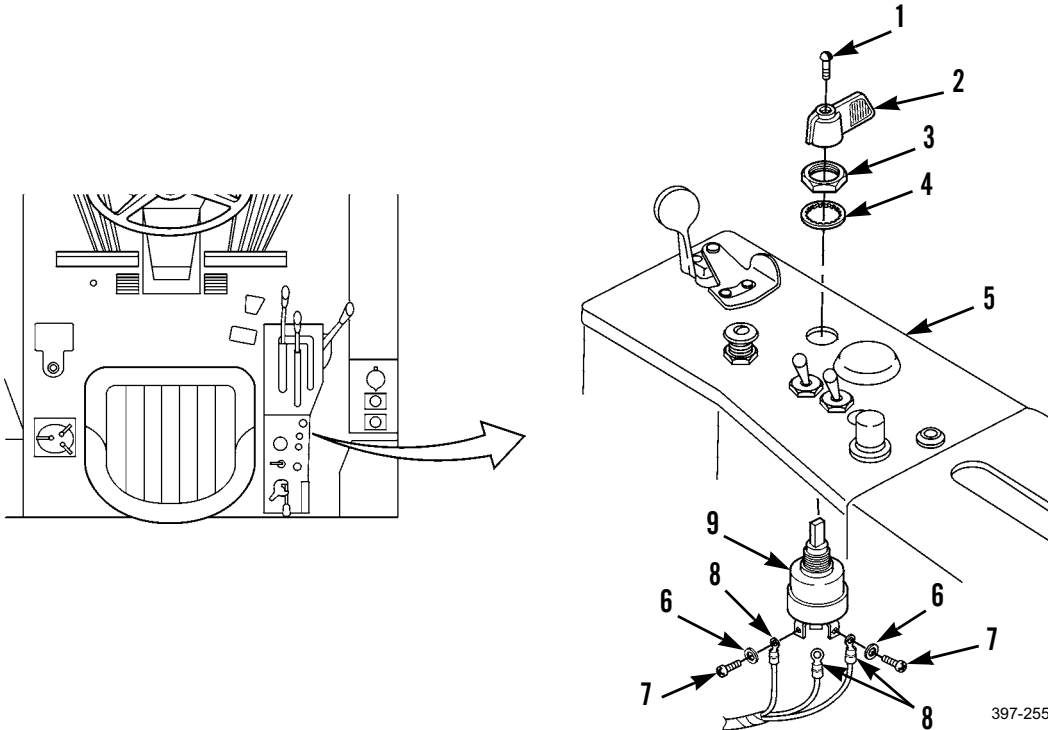
REMOVAL

1. Remove screw (1), knob (2), nut (3), washer (4), and switch (9) from of operator panel console (5).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

2. Remove three screws (7) and washers (6) and disconnect three wire assemblies (8) from switch (9).



397-255

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Connect three wire assemblies (8) and install three washers (6) and screws (7) on switch (9).
2. Install switch (9), washer (4), nut (3), knob (2), and screw (1) on operator panel console (5).
3. Install left and right side plates on operator panel console (WP 0193 00).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

MAIN CIRCUIT BREAKER REPLACEMENT

0080 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

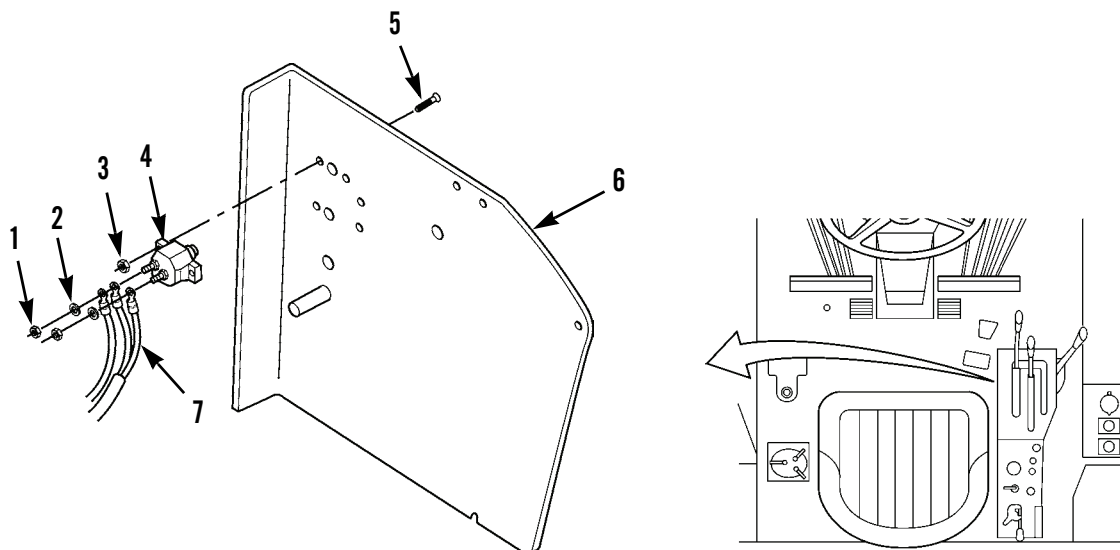
Battery cables disconnected (WP 0125 00)

Left side plate removed from operator panel console (WP 0193 00)

MAIN CIRCUIT BREAKER REPLACEMENT - CONTINUED**0080 00****REMOVAL****NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Remove two nuts (1), lockwashers (2), and disconnect three wire assemblies (7) from main circuit breaker (4). Discard lockwashers.
2. Remove two nuts (3), screws (5), and main circuit breaker (4) from left side plate (6) of operator panel console.



397-2060

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install main circuit breaker (4), two screws (5), and nuts (3) on left side plate (6) of operator panel console.
2. Connect three wire assemblies (7) and install new lockwashers (2) and nuts (1) on main circuit breaker (4).
3. Install left side plate to operator panel console (WP 0193 00).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

BATTERY DISCONNECT SWITCH REPLACEMENT

0081 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

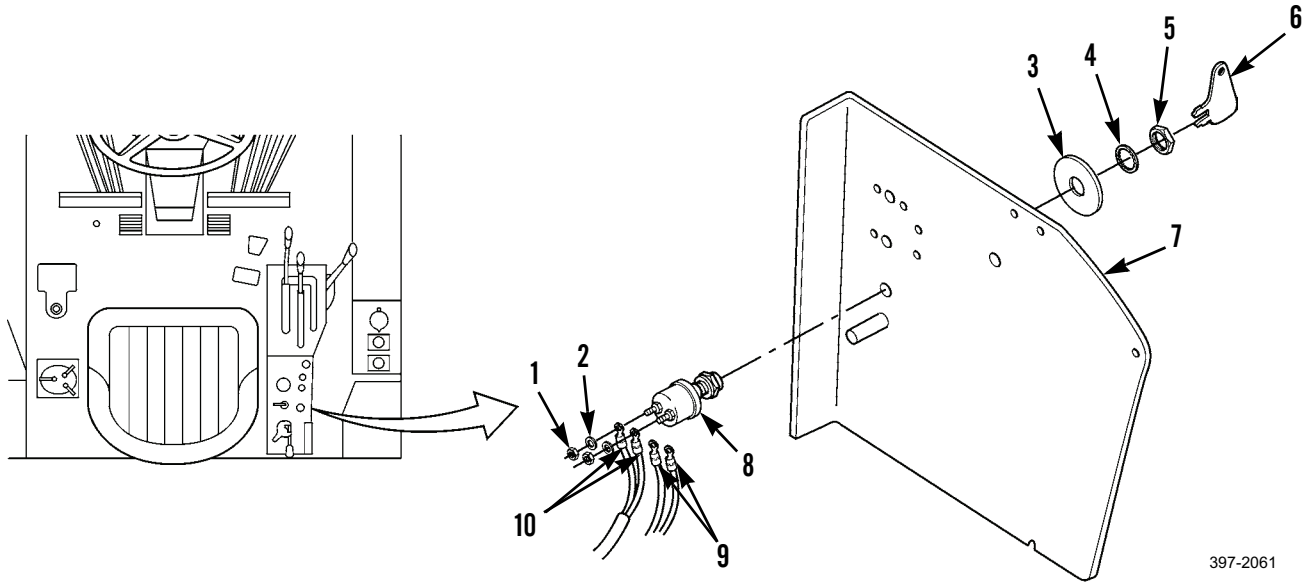
Battery cables disconnected (WP 0125 00)

Left and right side plates removed from operator panel console (WP 0193 00)

BATTERY DISCONNECT SWITCH REPLACEMENT - CONTINUED**0081 00****REMOVAL****NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Remove two nuts (1), washers (2) and disconnect two wire assemblies (9) and two cables (10) from switch (8).
2. Remove nut (5), key (6), washer (4), plate (3), and switch (8) from left side plate (7) of operator panel console.



397-2061

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install switch (8), plate (3), washer (4), and nut (5) on left side plate (7) of operator panel console.
2. Connect two wire assemblies (9) two cables (10) and install two washers (2) and nuts (1) on switch (8).
3. Install left and right side plates to operator panel console (WP 0193 00).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

OPERATOR'S CONSOLE COVER REPLACEMENT

0082 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Nut, self-locking

Washer, spring-tension

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Work light switches removed (WP 0076 00)

Ether control switch removed (WP 0077 00)

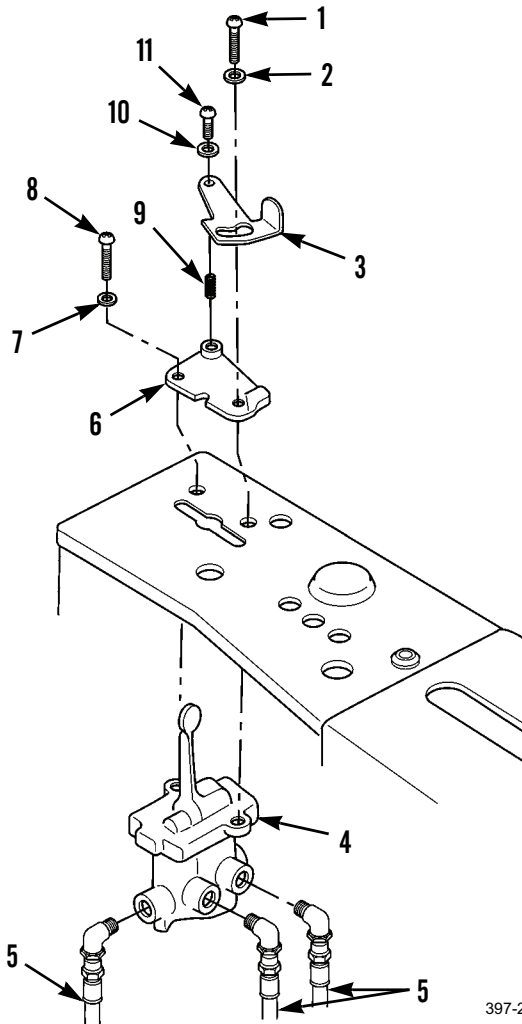
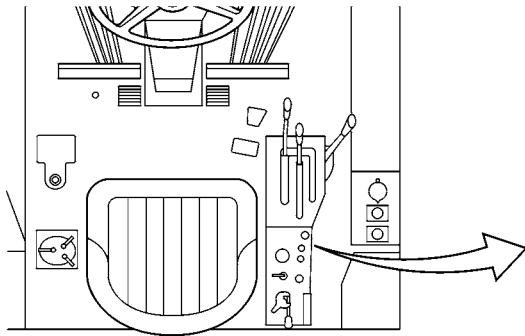
Control console light removed (WP 0078 00)

Start switch removed (WP 0079 00)

Air pressure relieved (TM 5-3805-261-10)

REMOVAL


1. Remove screw (1), washer (2), screw (11), washer (10), bracket (3), spring (9), screw (8), washer (7), base (6) and three hoses (5), from centershift lock valve (4).



397-252

REMOVAL - CONTINUED

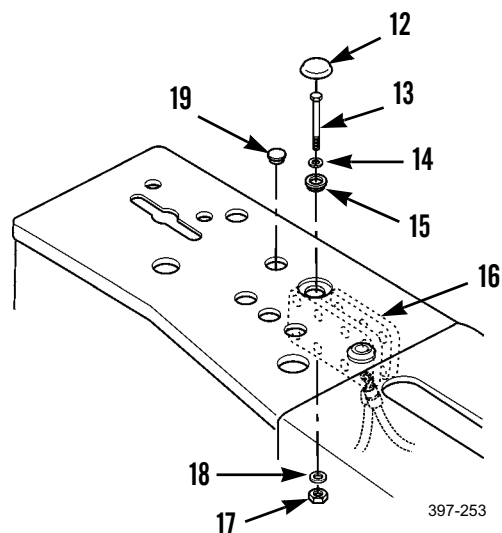2. Remove button (19) and cap (12).
3. Remove self-locking nut (17), washer (18), and plate spacer (16). Discard self-locking nut.
4. Remove screw (13), spring-tension washer (14), and shouldered washer (15). Discard spring-tension washer.




5. Remove instruction plate (20) and cover (21).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

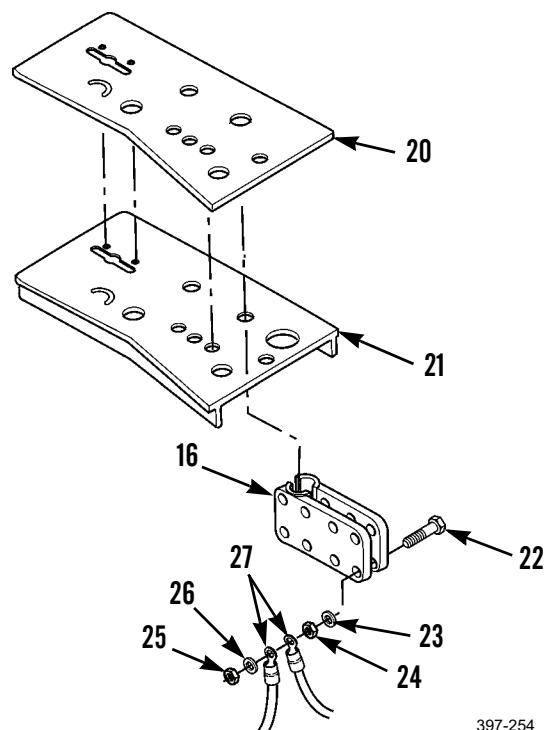6. Remove four nuts (25) and washers (26) and disconnect eight wire assemblies (27).
7. Remove four nuts (24), washers (23), and screws (22) and separate two plate spacer halves (16).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.


INSTALLATION

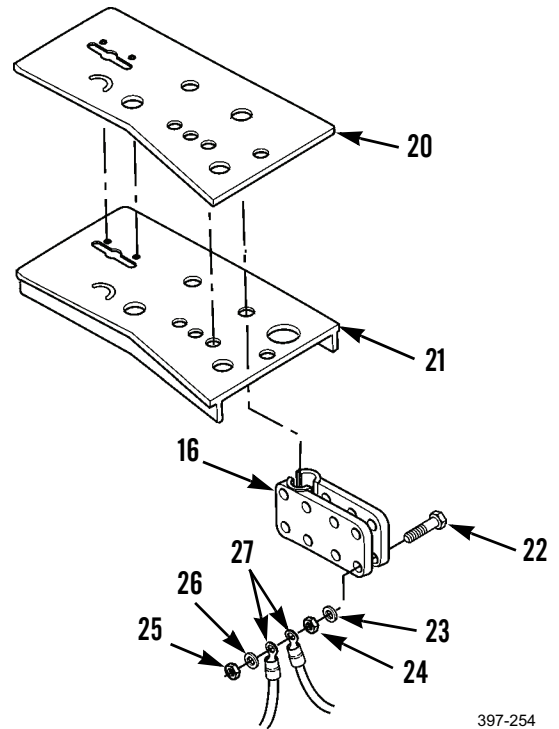1. Position two plate spacer halves (16) together and install four screws (22), washers (23), and nuts (24).
2. Connect eight wire assemblies (27) to four screws (22) and install four washers (26), and nuts (25).
3. Install cover (21) and instruction plate (20).



397-254

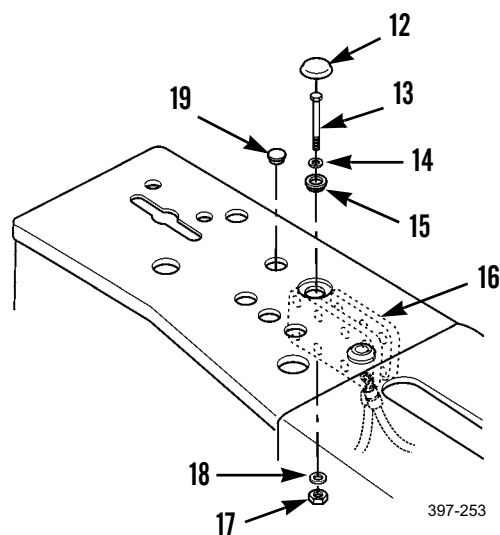
4. Install shouldered washer (15), new spring-tension washer (14), and screw (13).
5. Install plate spacer (16), washer (18), and new self-locking nut (17) on screw (13).
6. Install cap (12) and button (19).



397-253

INSTALLATION - CONTINUED

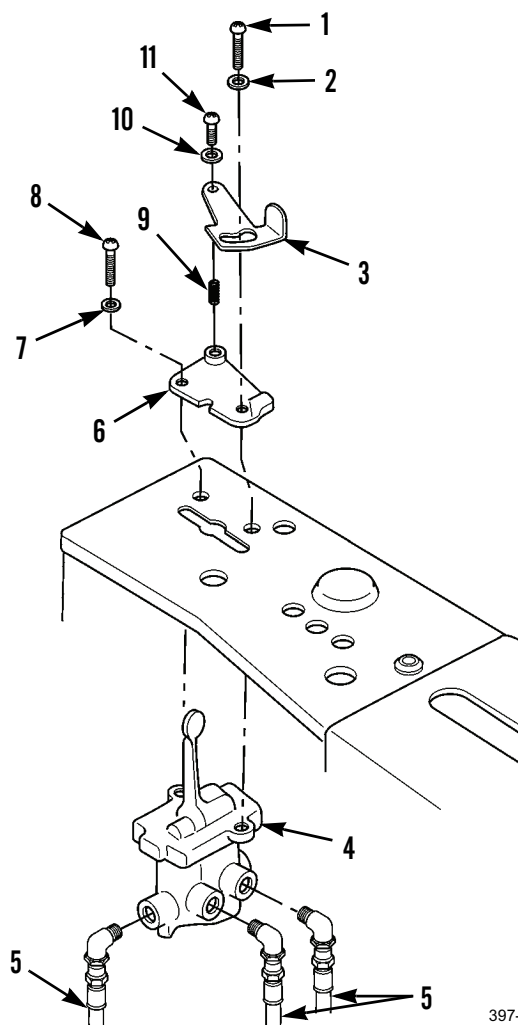7. Install base (6), washer (7), screw (8), spring (9), bracket (3), washer (10), screw (11), washer (2), and screw (1) on centershift lock valve (4).
8. Connect three hoses (5).



397-252

9. Connect start switch (WP 0079 00).
10. Connect battery cables (WP 0125 00).
11. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
12. Check for leaks. Stop engine.
13. Turn disconnect switch to OFF position (TM 5-3805-261-10).
14. Connect control console light (WP 0078 00).
15. Connect ether control switch (WP 0077 00).
16. Connect work light switches (WP 0076 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

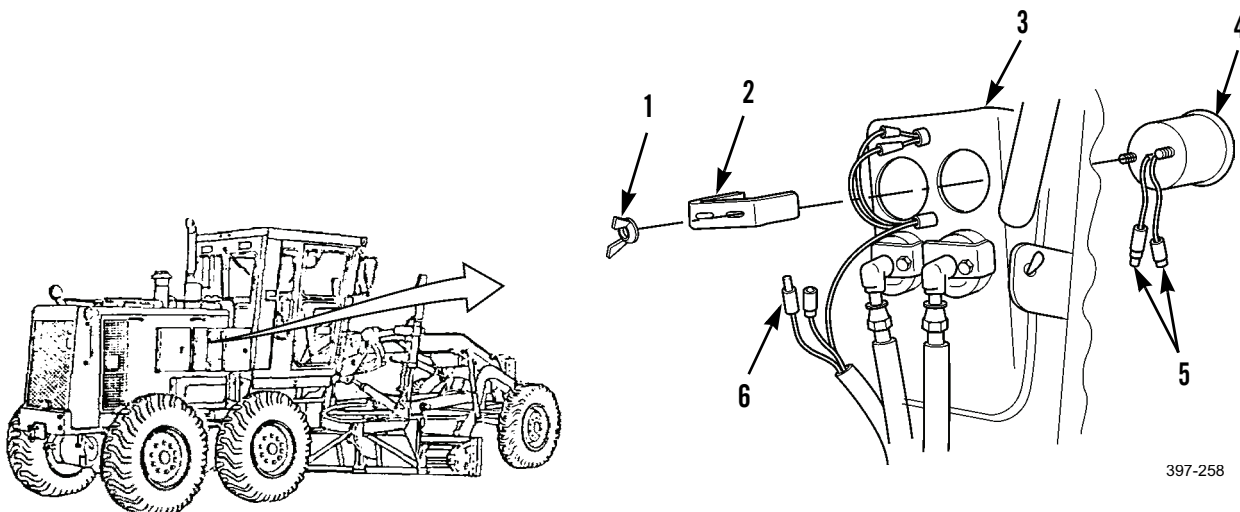
Right side engine doors opened (TM 5-3805-261-10)

REMOVAL

NOTE

Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect two wire assemblies (6) from two connectors (5).
2. Remove two wing nuts (1), clamp (2), and hourmeter (4) from instrument panel (3).




397-258

HOURMETER REPLACEMENT - CONTINUED**0083 00****CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

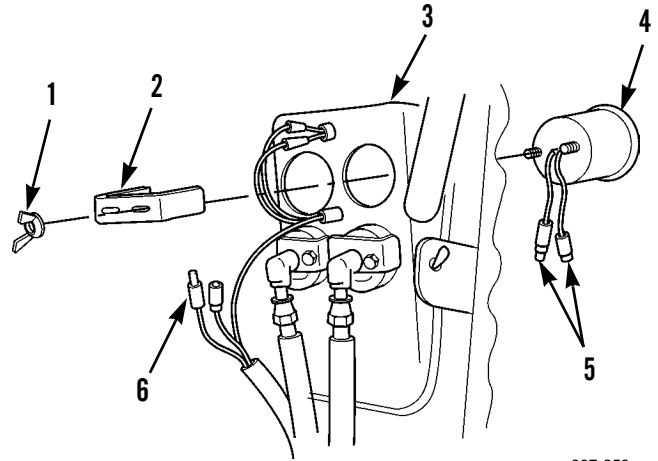1. Install hourmeter (4), clamp (2), and two wing nuts (1) on instrument panel (3).
2. Connect two wire assemblies (6) to two connectors (5).



397-258

3. Close right side engine doors (TM 5-3805-261-10).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

PANEL LIGHTS REPLACEMENT

0084 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Right side engine doors opened (TM 5-3805-161-10)

REMOVAL

NOTE

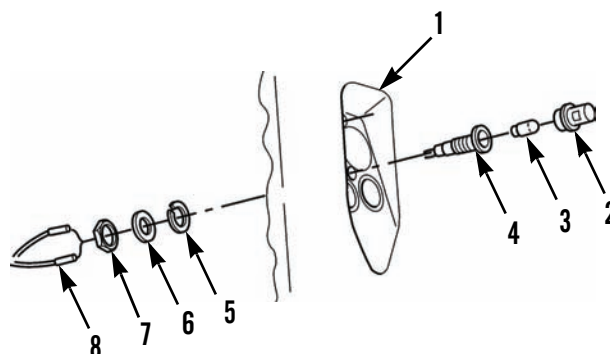
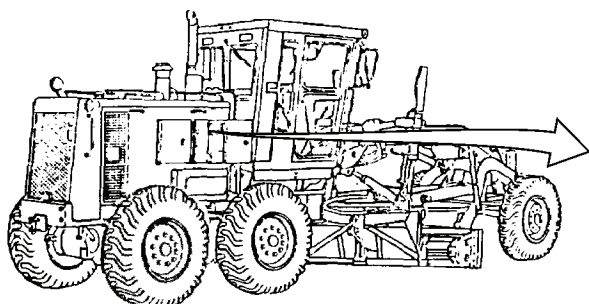
This procedure covers replacement of one panel light. Follow these instructions for the other panel light.

1. Remove lens (2) and lamp (3) from socket (4).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

2. Disconnect two wire assemblies (8).
3. Remove nut (7), washer (6), spacer (5), and socket (4) from instrument panel (1).




397-259

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

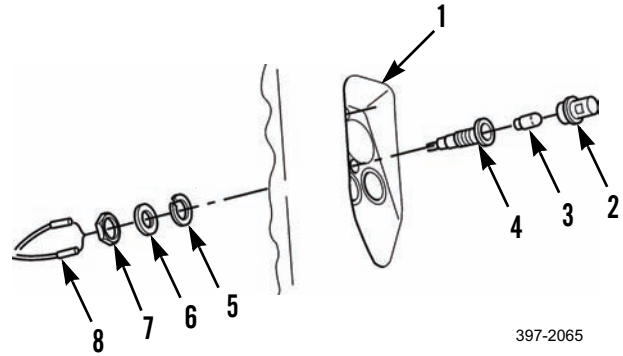1. Install socket (4), spacer (5), washer (6), and nut (7) on instrument panel (1).
2. Connect two wire assemblies (8).
3. Install lamp (3) and lens (2) on socket (4).
4. Close right side engine doors (TM 5-3805-261-10).
5. Connect battery cables (WP 0125 00).



END OF WORK PACKAGE

SWITCH PANEL AND MOUNTING REPLACEMENT (CCE AND TYPE I MACHINES)

0085 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (3)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

SWITCH PANEL AND MOUNTING REPLACEMENT (CCE AND TYPE I MACHINES) - CONTINUED 0085 00

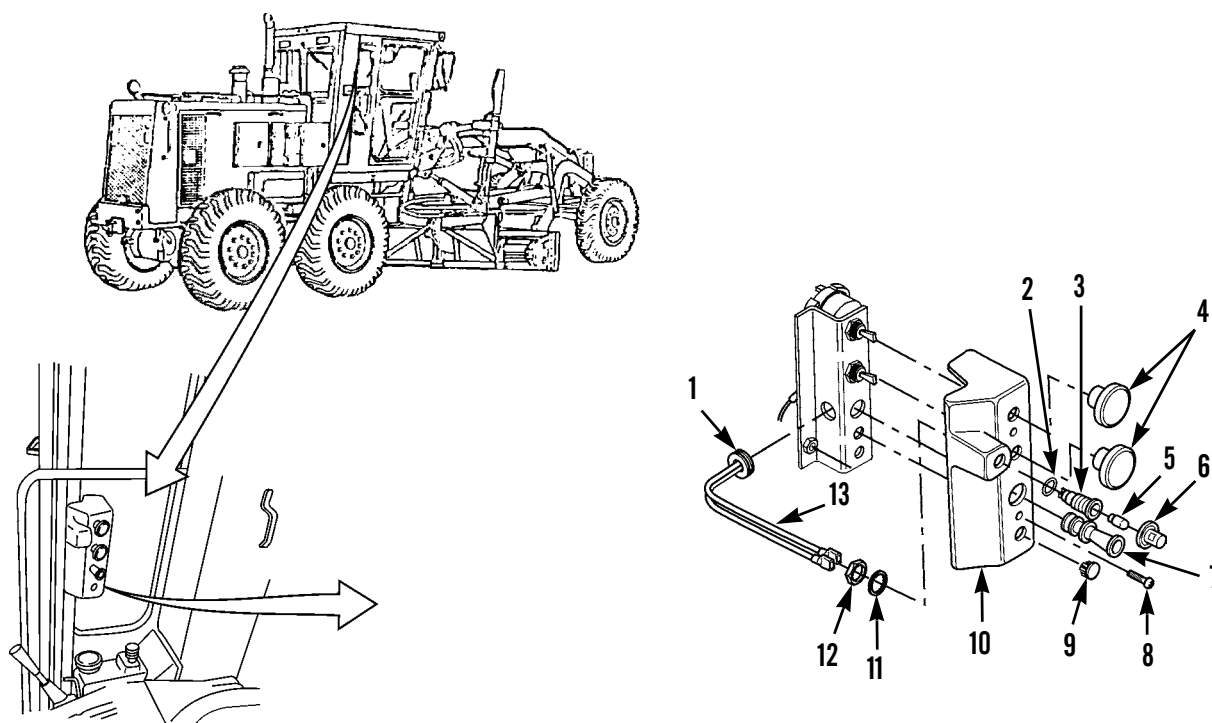
REMOVAL

1. Remove two knobs (4), lens (6), lamp (5), lighter knob (7), button (9), and two screws (8) from switch panel (10) on right side of cab.

NOTE


Tag all wire assemblies before disconnecting to aid in installation.

2. Pull back panel (10), disconnect two wire assemblies (13) from socket (3) and remove panel.
3. Remove nut (12), washer (11), socket (3), and seal (2) from panel (10).
4. Remove grommet (1) and two wire assemblies (13).



397-261

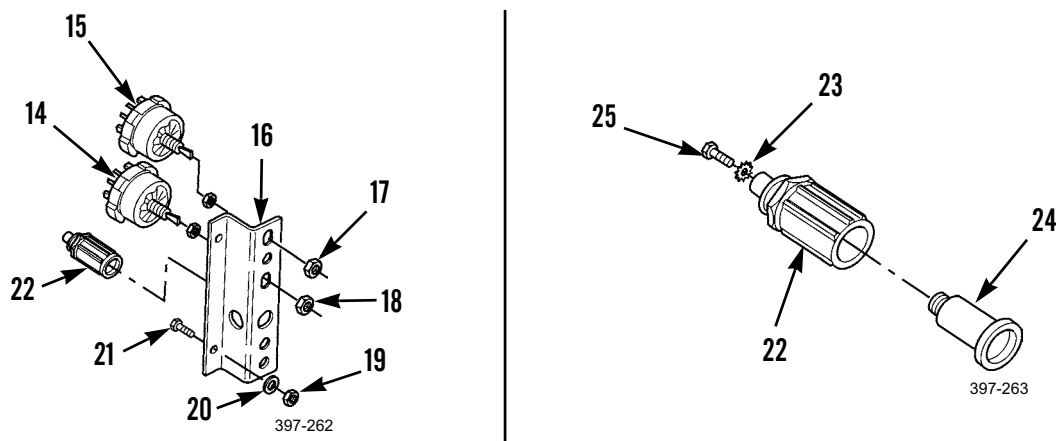5. Remove two nuts (19), lockwashers (20), and bolts (21) and pull back bracket (16). Discard lockwashers.
6. Remove screw (25) and lockwasher (23), disconnect wiring harness from lighter (22) and switches (14 and 15) and remove bracket (16). Discard lockwasher.
7. Remove two nuts (17), nuts (18), and switches (14 and 15) from bracket (16).
8. Remove barrel (24) and lighter (22) from bracket (16).

REMOVAL - CONTINUED**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install lighter (22) and barrel (24) on bracket (16).
2. Install two switches (14 and 15), nuts (18), and nuts (17) on bracket (16).

NOTE

Place two leads of wiring harness that connect to two wire assemblies leading to light socket, through hole in side of bracket.

3. Connect wiring harness to switches (15 and 14) and lighter (22), install new lockwasher (23) and screw (25) to lighter, and place bracket (16) into position.
4. Install two bolts (21), new lockwashers (20), and nuts (19) securing bracket (16).
5. Connect two wire assemblies (13) to leads of wiring harness coming out of hole in side of bracket (16), push connections through hole and install grommet (1).
6. Install seal (2), socket (3), washer (11), and nut (12) on panel (10).
7. Install two wire assemblies (13) to socket (3) and place panel (10) into position.
8. Install two screws (8), button (9), lighter knob (7), lamp (5), lens (6), and two knobs (4).
9. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

SUPPLEMENTAL STEERING PUMP VALVE SWITCH MAINTENANCE

0086 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation/Adjustment

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Pin

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

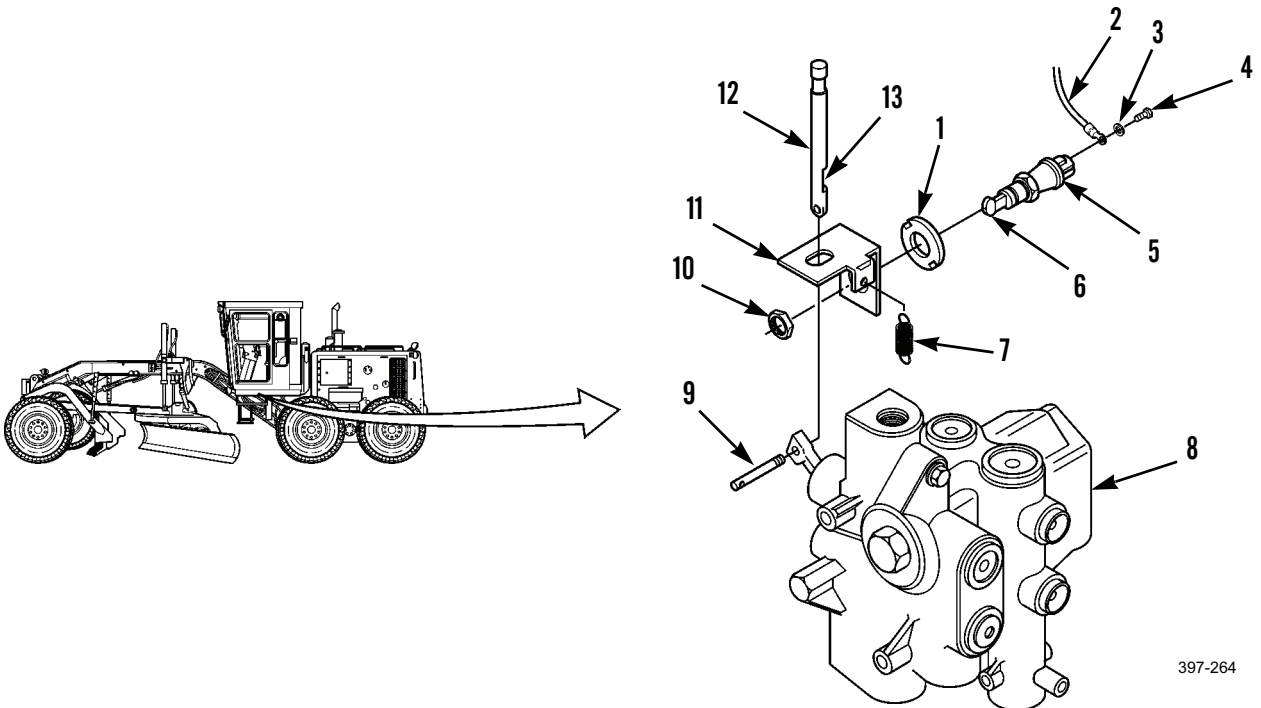
Battery cables disconnected (WP 0125 00)

Hydraulic hose disconnected (as necessary) (WP 0323 00)

REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Remove two screws (4) and washers (3) and disconnect two wire assemblies (2) from switch (5).
2. Remove nut (10), switch (5), and retainer (1) from bracket (11).
3. Remove pin (9) and clevis (12). Discard pin.
4. Remove spring (7) and bracket (11) from combination valve (8).



397-264

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION/ADJUSTMENT**NOTE**

Do not tighten nut.

1. Install retainer (1), switch (5), and nut (10) on bracket (11).
1. Move switch (5) up or down to locate roller (6) in lower half of slot (13) in clevis (12).
2. Tighten nut (10) finger-tight.
3. Move bracket (11) to lightly touch lower half of slot (13) in clevis (12).
4. Tighten nut (10) to 15 lb-ft (20 Nm).

INSTALLATION/ADJUSTMENT - CONTINUED

NOTE

Multimeter must indicate no continuity.

5. Depress clevis (12) on left side of cab floor and check continuity across terminals of switch (5).
6. Release clevis (12).
7. Connect two wire assemblies (2) and install two washers (3) and screws (4) on switch (5).
8. Connect hydraulic hose (as necessary) (WP 0323 00).
9. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Packing, preformed (2)

References

WP 0021 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Hydraulic pressure relieved (WP 0021 00)

**WARNING**

Hydraulic oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

CAUTION

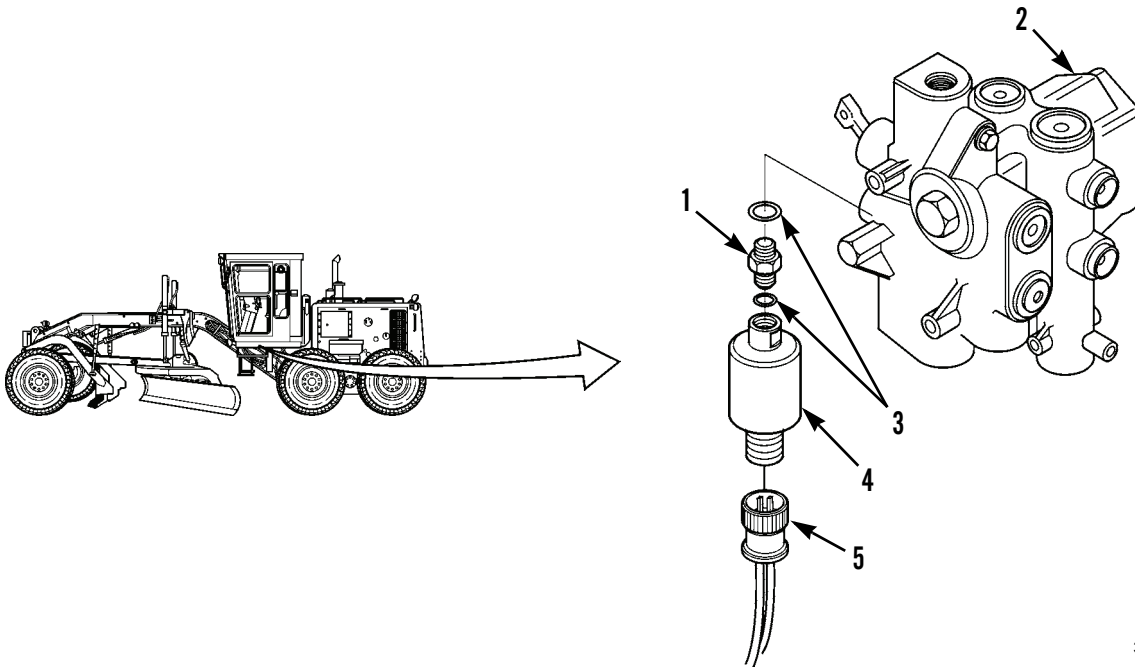
Wipe area clean around hydraulic connection to be opened during removal. Cap oil line and plug opening after removing line. Contamination of hydraulic system could result in premature failure.

NOTE

Use a container to catch any hydraulic oil that may drain from system. Dispose of oil in accordance with local policy and ordinances. Ensure all spills are cleaned up.

REMOVAL

1. Disconnect connector assembly (5) from switch (4) under left side of cab.
2. Remove switch (4).
3. Remove adapter (1) and two preformed packings (3) from combination valve (2). Discard preformed packings.



397-265

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install two new preformed packings (3) on adapter (1).
2. Install adapter (1) on combination valve (2).
3. Install switch (4).
4. Install connector assembly (5) to switch (4).
5. Connect battery cables (WP 0125 00).
6. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
7. Check for leaks. Stop engine.
8. Check hydraulic fluid level. Refill hydraulic tank as required (WP 0216 00).

END OF WORK PACKAGE

SUPPLEMENTAL STEERING GOVERNOR SWITCH MAINTENANCE

0088 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation/Adjustment

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket (2)

Packing, preformed

Washer, spring-tension (2)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

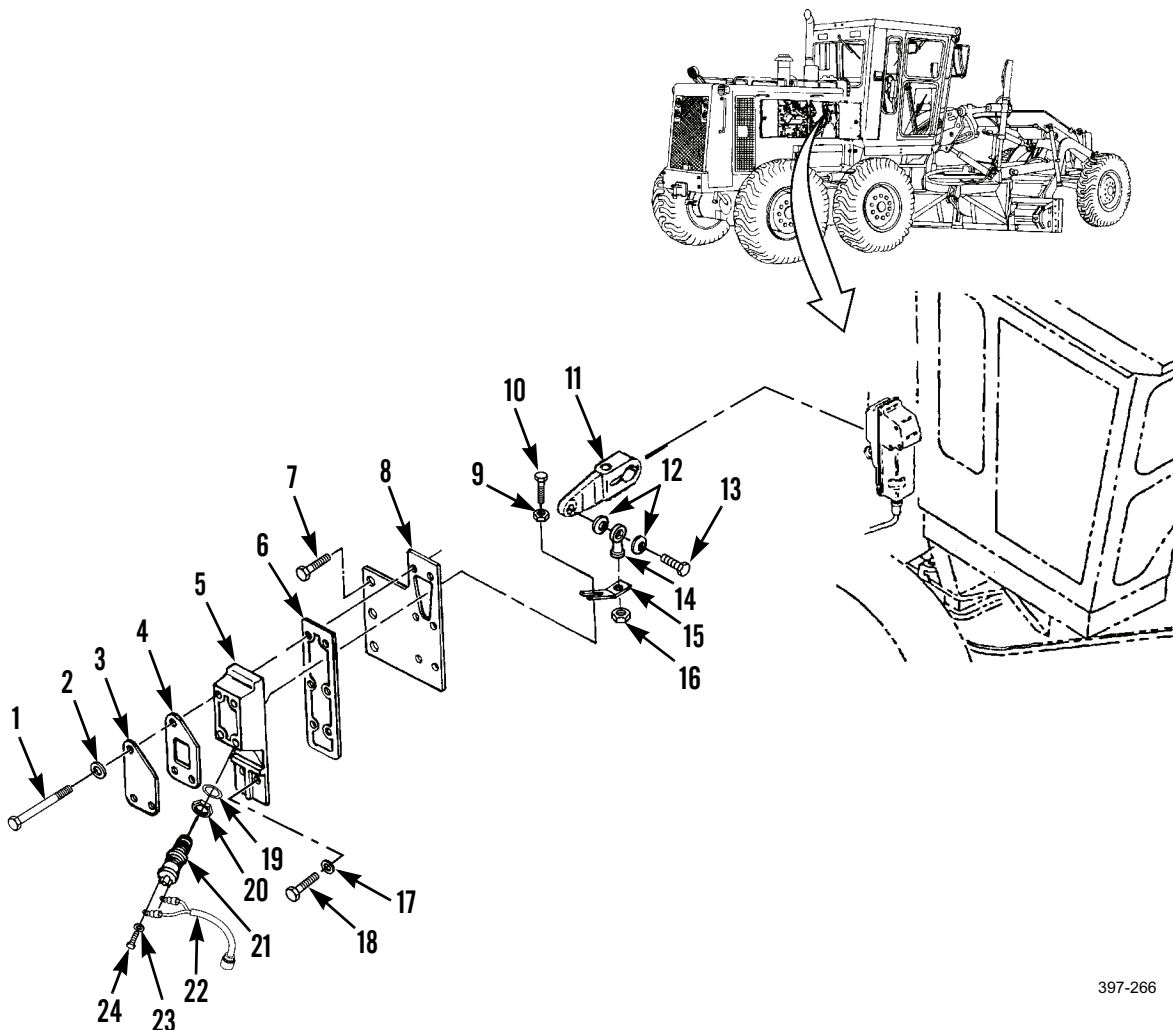
Right side engine doors opened (TM 5-3805-261-10)

REMOVAL

NOTE

Tag wire assemblies before disconnecting to aid in installation.

1. Remove two screws (24) and washers (23) and disconnect two wire assemblies (22) from switch (21).
2. Loosen nut (20) and remove switch (21), preformed packing (19), and nut (20) from housing (5). Discard preformed packing.
3. Remove four bolts (1), washers (2), cover (3), and gasket (4) from housing (5). Discard gasket.
4. Remove two bolts (18), washers (17), housing (5), and gasket (6) from cover (8). Discard gasket.
5. Remove three bolts (7) and cover (8).
6. Loosen nut (9) and remove adjusting screw (10) and nut from actuator (15).
7. Remove nut (16), actuator (15), bolt (13), two spring-tension washers (12), and rod (14) from clevis (11). Discard spring-tension washers.



397-266

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION/ADJUSTMENT

1. Install rod (14), two new spring-tension washers (12), bolt (13), actuator (15), and nut (16) to clevis (11).

NOTE

Do not tighten nut.

2. Install nut (9) on adjusting screw (10) and install screw on actuator (15).
3. Install cover (8) and three bolts (7).
4. Install new gasket (6), housing (5), two washers (17), and bolts (18) to cover (8).
5. Install nut (20) and new preformed packing (19) on switch (21) and install switch to housing (5) with a distance of 0.75 in. (19 mm). Tighten nut to 15 lb-ft (20 Nm).
6. Pull accelerator pedal upward from cab floor to engine shutoff position (TM 5-3805-261-10).
7. Connect multimeter leads to switch (21) terminals. Turn adjusting screw (10) inward until multimeter shows continuity. Then rotate one more turn.
8. Tighten nut (9) on adjusting screw (10).
9. Install new gasket (4), cover (3), four washers (2), and bolts (1) to housing (5).
10. Connect two wire assemblies (22) to switch (21) and install two washers (23) and screws (24).
11. Close right side engine doors (TM 5-3805-261-10).
12. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

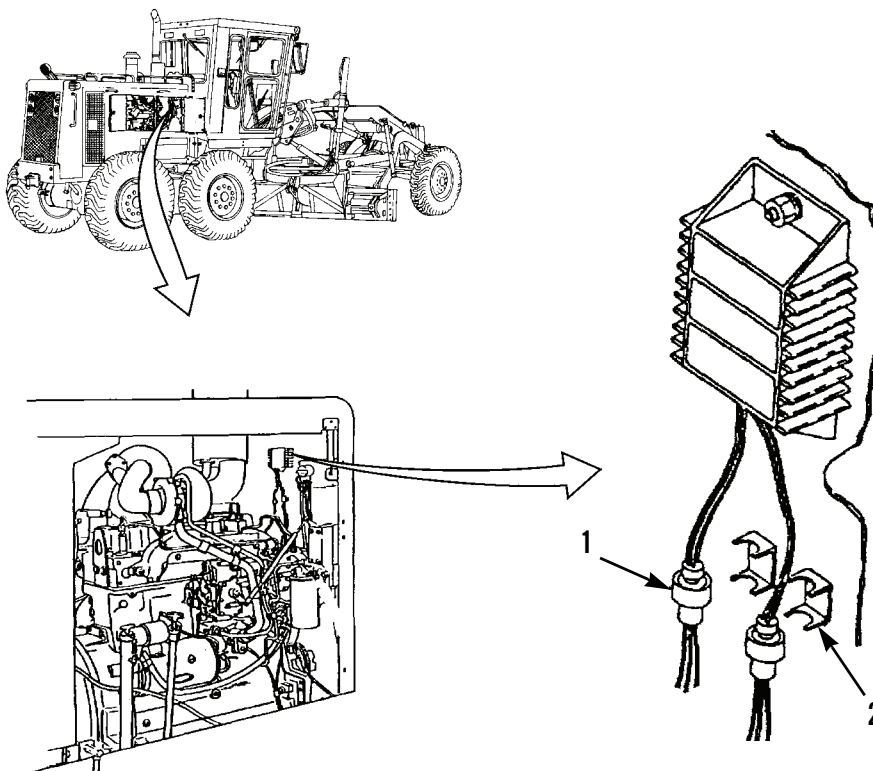
Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Right side engine doors opened (TM 5-3805-261-10)

REMOVAL


1. Remove two sockets (1) from two brackets (2) on inner-right side of engine compartment.



REMOVAL - CONTINUED**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

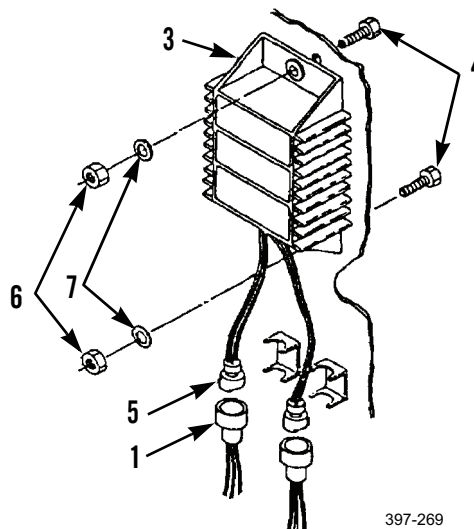2. Disconnect two wire assemblies (5) from sockets (1).
3. Remove two nuts (6), washers (7), bolts (4), and control (3).




397-269

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

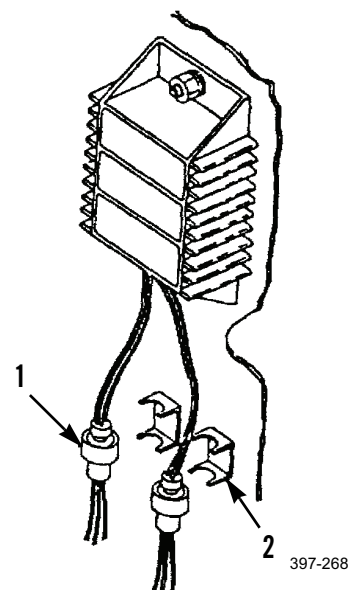1. Install control (3), two bolts (4), washers (7), and nuts (6) in inner-right side of engine compartment.
2. Connect two wire assemblies (5) to sockets (1).
3. Install two sockets (1) in brackets (2).



397-268

4. Close right side engine doors (TM 5-3805-261-10).
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

SUPPLEMENTAL STEERING MAGNETIC SWITCH REPLACEMENT

0090 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (4)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Right side engine doors opened (TM 5-3805-261-10)

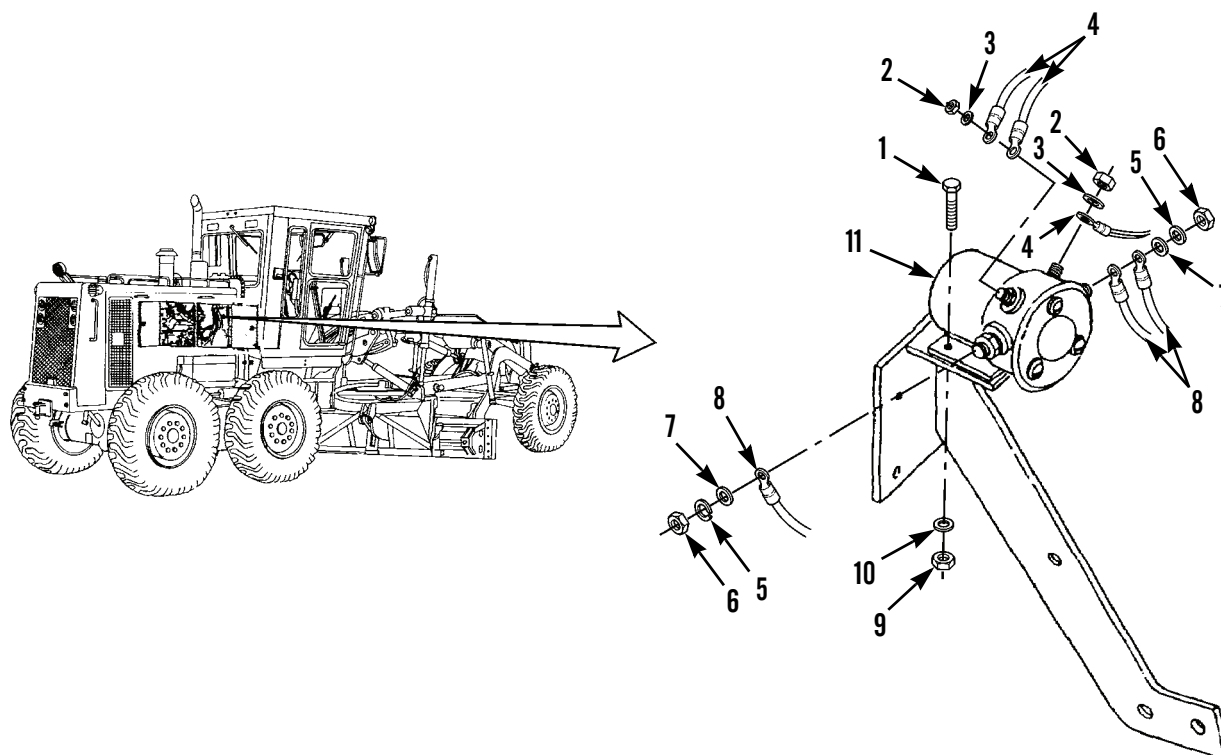
SUPPLEMENTAL STEERING MAGNETIC SWITCH REPLACEMENT - CONTINUED

0090 00

REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Remove two nuts (6), lockwashers (5), and washers (7) and disconnect three wire assemblies (8) from switch (11). Discard lockwashers.
2. Remove two nuts (2) and lockwashers (3) and disconnect two wire assemblies (4) from switch (11). Discard lockwashers.
3. Remove four nuts (9), washers (10), bolts (1), and switch (11).



397-270

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install switch (11), four bolts (1), washers (10), and nuts (9).
2. Connect two wire assemblies (4) and install two new lockwashers (3) and nuts (2) on switch (11).
3. Connect three wire assemblies (8) and install two washers (7), new lockwashers (5), and nuts (6) on switch (11).
4. Close right side engine doors (TM 5-3805-261-10).
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

SUPPLEMENTAL STEERING PUMP AND MOTOR REPLACEMENT**0091 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

Lockwasher (6)

O-ring

Personnel Required

Two

References

WP 0021 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Hydraulic system pressure relieved (WP 0020 00)

Left side engine door opened (TM 5-3805-261-10)

**WARNING**

Hydraulic oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury.

CAUTION

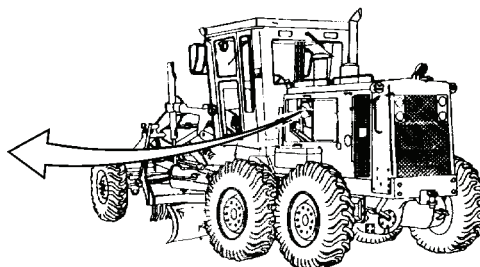
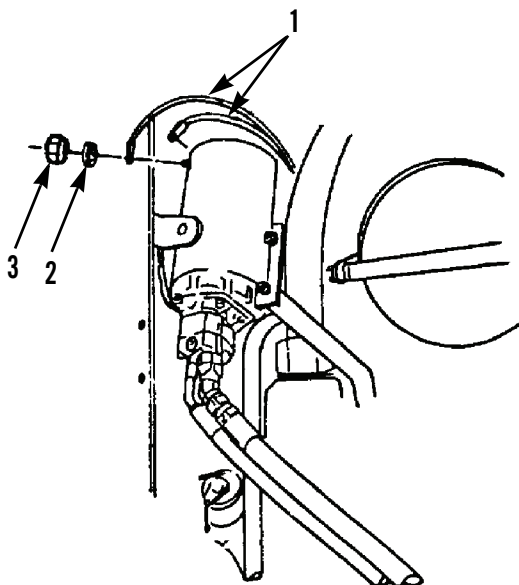
Wipe area clean around hydraulic connection to be opened during removal. Plug openings after removing pump assembly. Contamination of hydraulic system could result in premature failure.

REMOVAL

NOTE


Tag wire assemblies before disconnecting to aid in installation.

1. Remove two nuts (3), lockwashers (2), and disconnect two wire assemblies (1). Discard lockwashers.



397-271

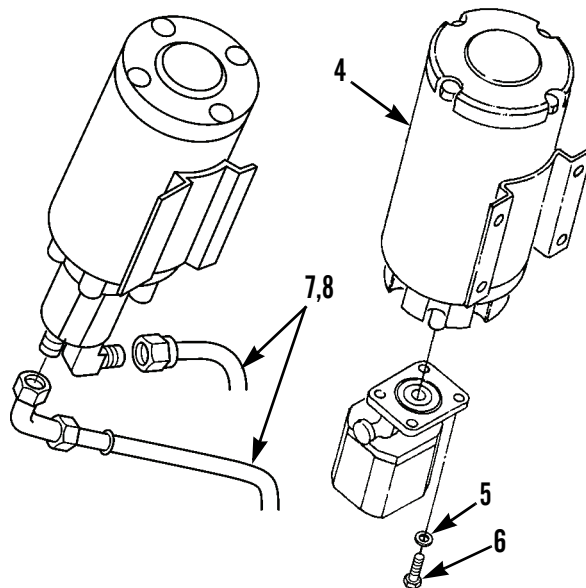
2. Disconnect two hydraulic tubes (7) and remove O-rings (8). Discard O-rings.
3. Remove four bolts (6), washers (5), and supplemental steering pump motor (4).



397-2272


REMOVAL - CONTINUED

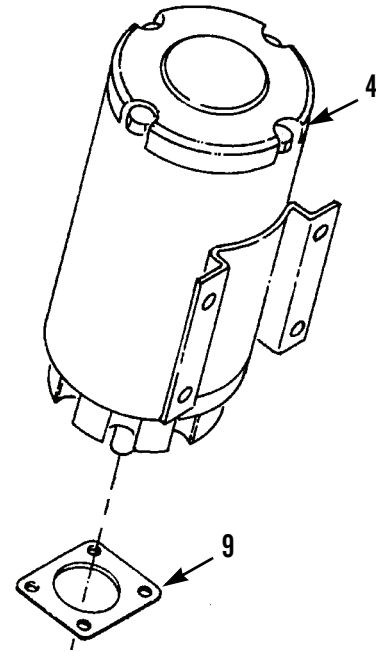4. Remove and discard gasket (9) from supplemental steering pump motor (4).



397-495

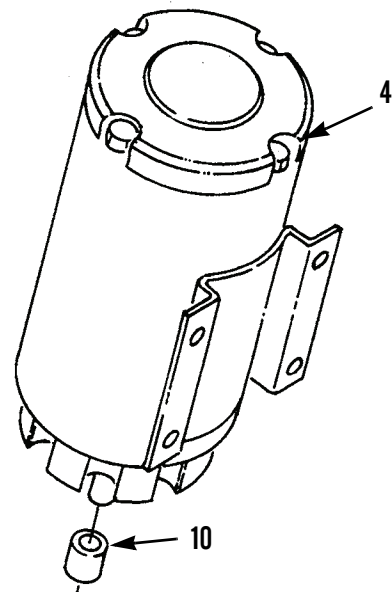
5. Remove coupling (10) from supplemental steering pump motor (4).



397-496

REMOVAL - CONTINUED

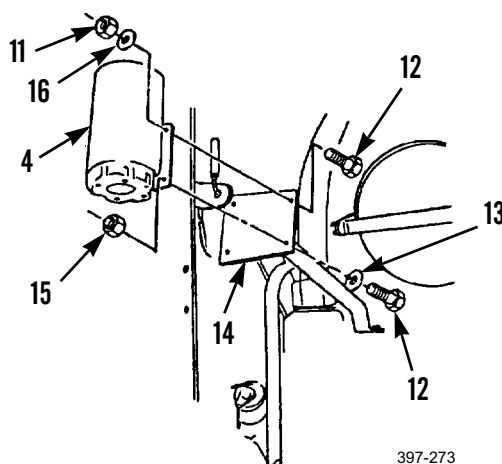
- Remove four nuts (11), three washers (16), four bolts (12), washer (13), and pump motor (4) from bracket (14).

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.


INSTALLATION

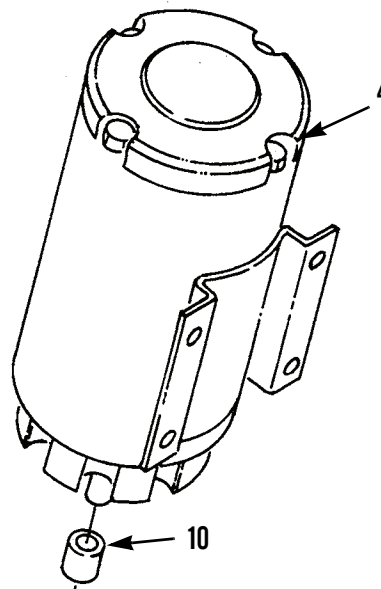- Install pump motor (4), washer (13), four bolts (12), three washers (16), and four nuts (15) on bracket (14).
- Install coupling (10) on supplemental steering pump motor (4).




INSTALLATION - CONTINUED

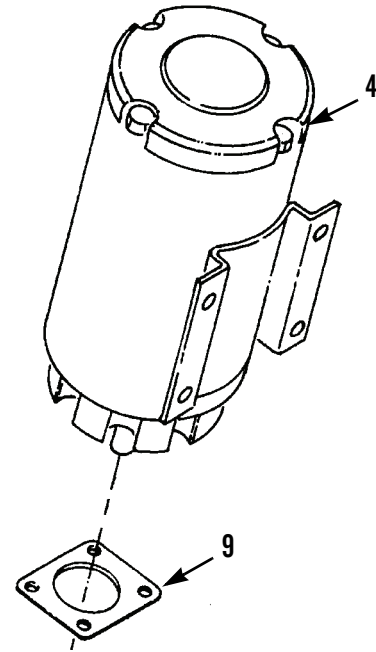3. Install new gasket (9) on supplemental steering pump motor (4).



397-495

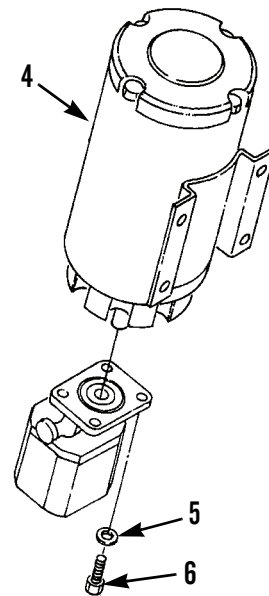
4. Install supplemental steering pump motor (4), four washers (5), and bolts (6).




397-494

INSTALLATION - CONTINUED

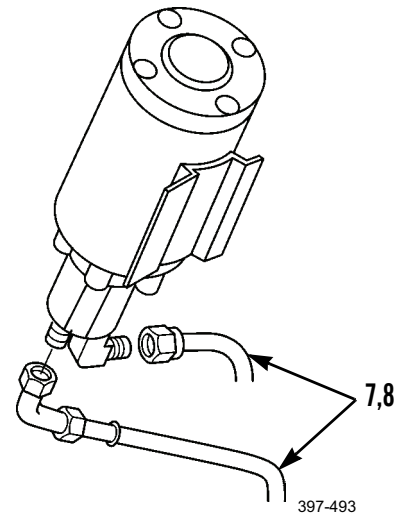5. Connect two hydraulic tubes (7) and install new O-rings (8).



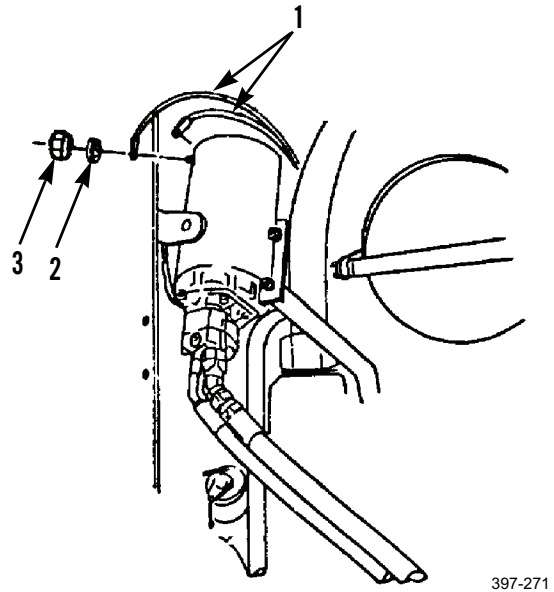6. Connect two wire assemblies (1) and install two new lockwashers (2) and nuts (3).



7. Connect battery cables (WP 0125 00).
8. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
9. Check for leaks. Stop engine.
10. Check hydraulic oil level. Refill hydraulic tank, as required (WP 0216 00).
11. Close left side engine door (TM 5-3805-261-10).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Supplemental steering magnetic switch removed (WP 0090 00)

Supplemental steering pump motor removed (WP 0091 00)

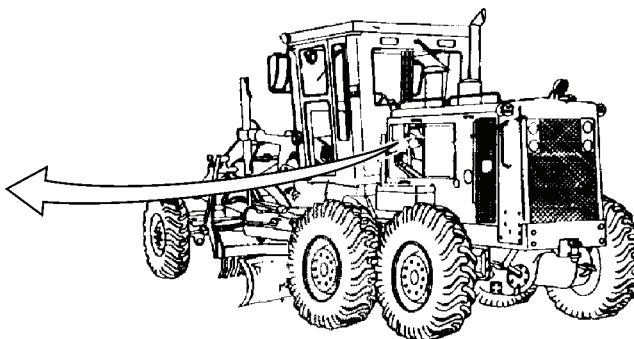
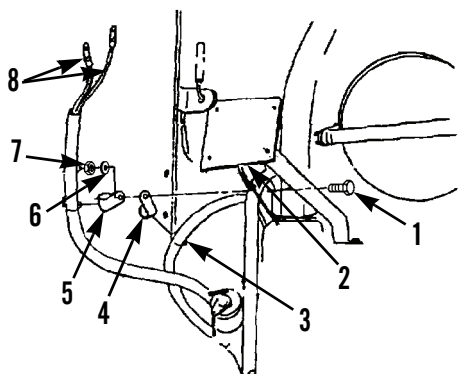
REMOVAL

1. Remove nut (7), washer (6), and bolt (1) from bracket (2).

NOTE

Tag all wire and hose assemblies before disconnecting to aid in installation.

2. Remove clamp (5) from two wire assemblies (8).
3. Remove clamp (4) from hose assembly (3).




397-274

**SUPPLEMENTAL STEERING MAGNETIC SWITCH PUMP MOTOR MOUNTING
REPLACEMENT - CONTINUED**

0092 00

REMOVAL - CONTINUED

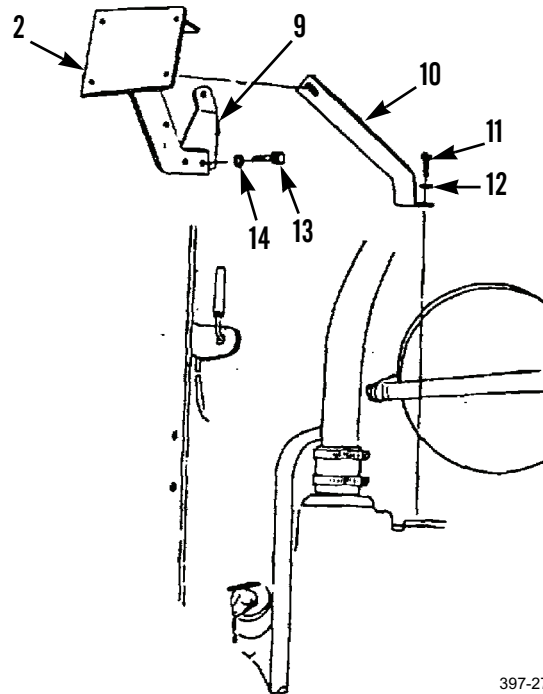4. Remove two bolts (13), washers (14), bracket (9), and bracket (2).
5. Remove bolt (11), washer (12), and bracket (10).




397-275

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

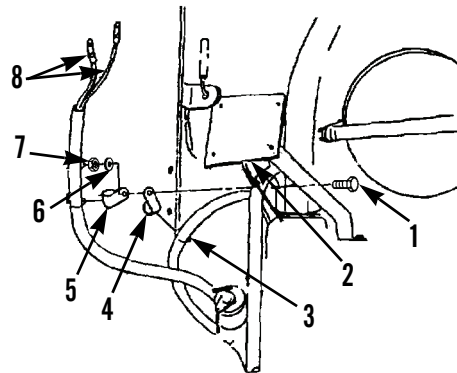1. Install bracket (10), washer (12), and bolt (11).
2. Install bracket (2), bracket (9), two washers (14), and bolts (13).
3. Install clamp (4) on hose assembly (3).
4. Install clamp (5) on two wire assemblies (8).
5. Install bolt (1), washer (6), and nut (7) on bracket (2).



397-274

6. Install supplemental steering pump motor (WP 0091 00).
7. Install supplemental steering magnetic switch (WP 0090 00).
8. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

BLADE FLOAT LIMIT SWITCHES AND MOUNTING REPLACEMENT (CCE MACHINE)

0093 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

Lockwasher (2)

Pin, cotter

Ring, retaining (2)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

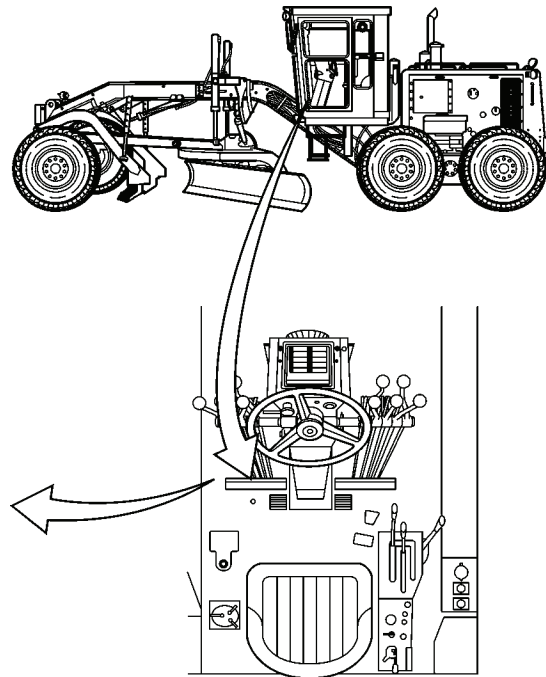
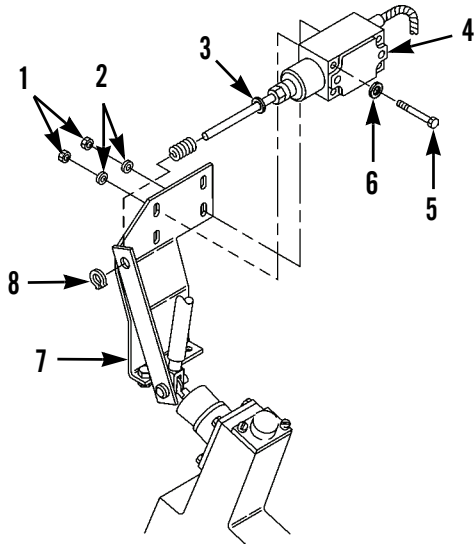
BLADE FLOAT LIMIT SWITCHES AND MOUNTING REPLACEMENT (CCE MACHINE) - CONTINUED 0093 00

REMOVAL

NOTE

This procedure covers replacement for the left blade float limit switch and mounting. Follow these instructions for the right blade float limit switch and mounting.

1. Remove retaining ring (8) from switch (4).
2. Remove two nuts (1), washers (2), bolts (5), lockwashers (6), and switch (4) from bracket (7). Discard lockwashers.
3. Remove retaining ring (3) from switch (4).



397-277

BLADE FLOAT LIMIT SWITCHES AND MOUNTING REPLACEMENT (CCE MACHINE) - CONTINUED 0093 00

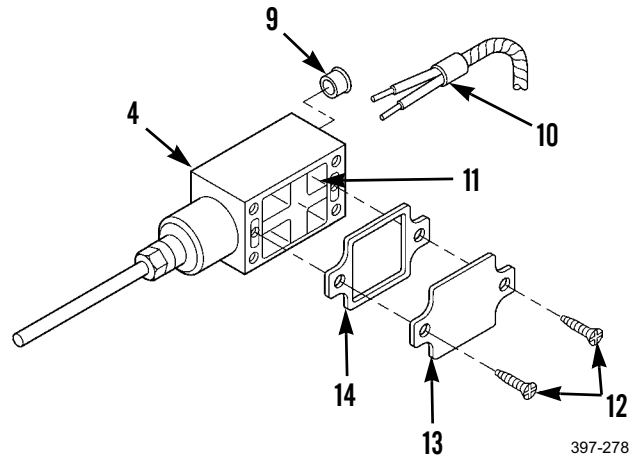
REMOVAL - CONTINUED

4. Remove two screws (12), cover (13), and gasket (14). Discard gasket.


NOTE

Tag wire assemblies before disconnecting to aid in installation.

5. Loosen two screws (11) and disconnect two wire assemblies (10) from switch (4).
6. Remove grommet (9) from switch (4).



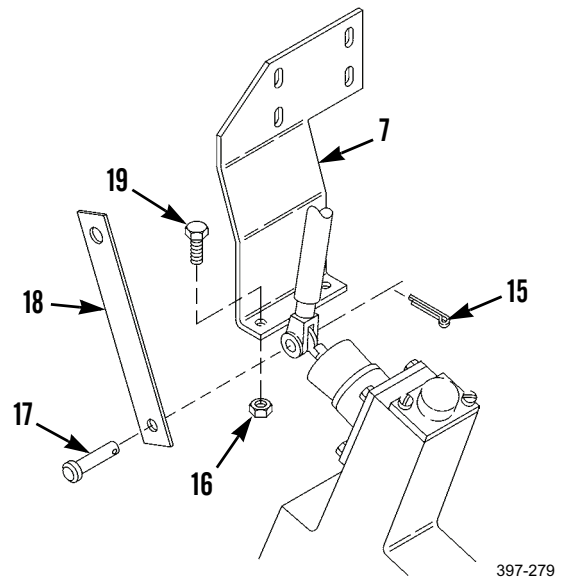7. Remove cotter pin (15), pin (17), and spacer (18). Discard cotter pin.
8. Remove two nuts (16), bolts (19), and bracket (7).




BLADE FLOAT LIMIT SWITCHES AND MOUNTING REPLACEMENT (CCE MACHINE) - CONTINUED 0093 00

CLEANING AND INSPECTION


Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

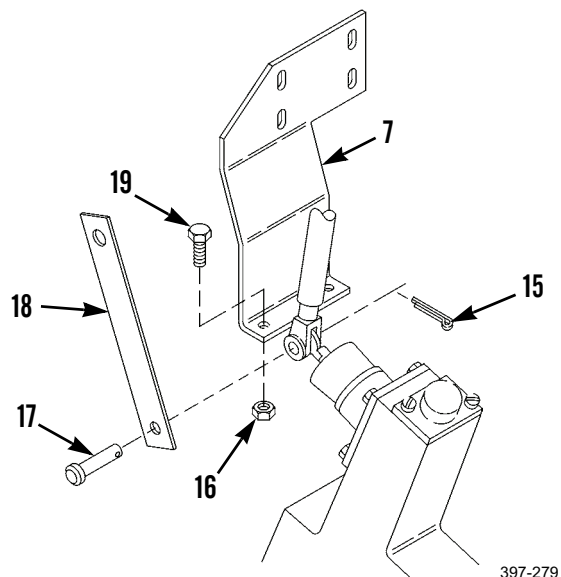1. Install bracket (7), two bolts (19), and nuts (16).
2. Install spacer (18), pin (17), and new cotter pin (15).



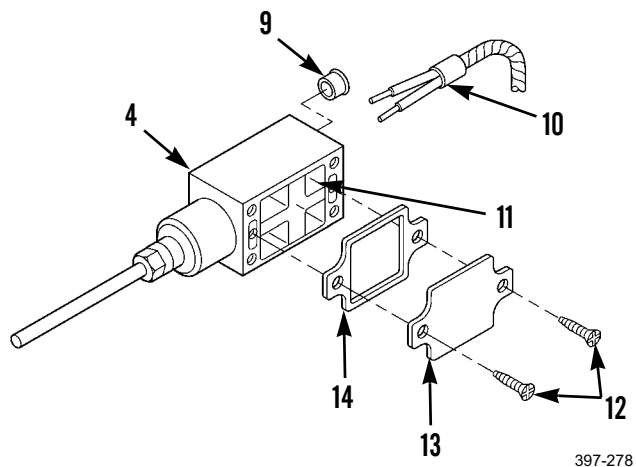
3. Install grommet (9) on switch (4).
4. Connect two wire assemblies (10) and tighten two screws (11) on switch (4).
5. Install new gasket (14), cover (13), and two screws (12).



BLADE FLOAT LIMIT SWITCHES AND MOUNTING REPLACEMENT (CCE MACHINE) - CONTINUED 0093 00

INSTALLATION - CONTINUED

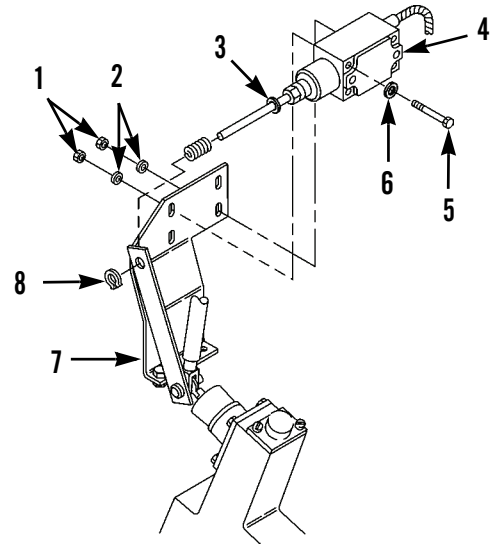6. Install new retaining ring (3) on switch (4).
7. Install switch (4), two new lockwashers (6), bolts (5), washers (2), and nuts (1) on bracket (7).
8. Install new retaining ring (8) on switch (4).



397-277

9. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

FLASHER UNIT REPLACEMENT

0094 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

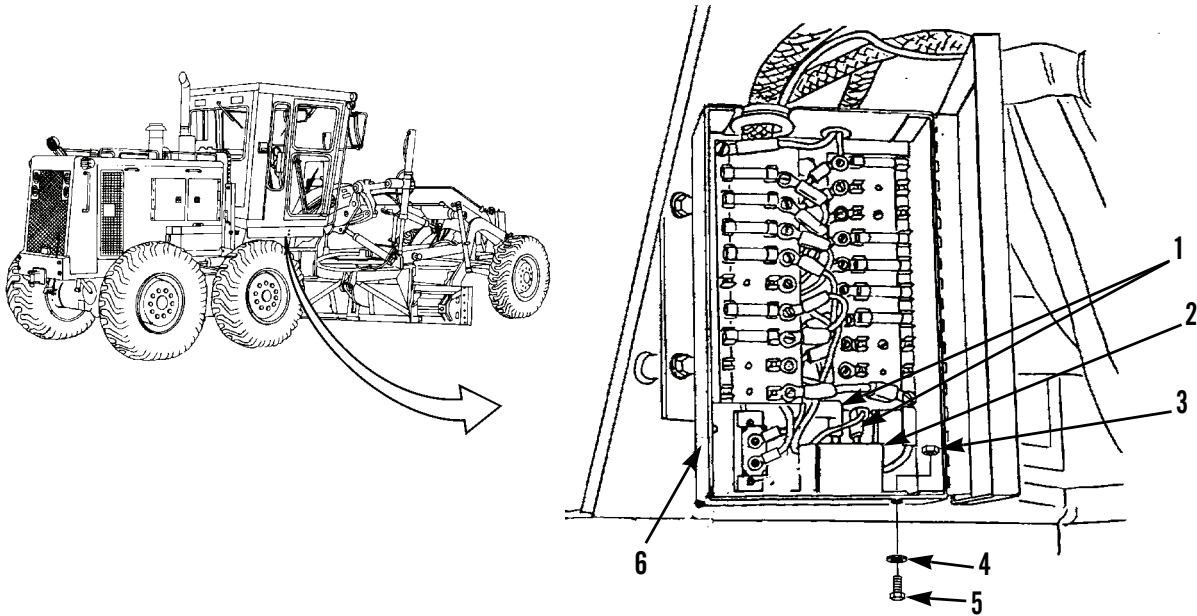
Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect two wire assemblies (1) from flasher unit (2).
2. Remove two nuts (3), screws (5), lockwashers (4), and flasher unit (2) from fuse box (6). Discard lockwashers.



397-281

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install flasher unit (2), two new lockwashers (4), screws (5), and nuts (3) in fuse box (6).
2. Connect two wire assemblies (1) to flasher unit (2).
3. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

CIRCUIT BREAKER REPLACEMENT

0095 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

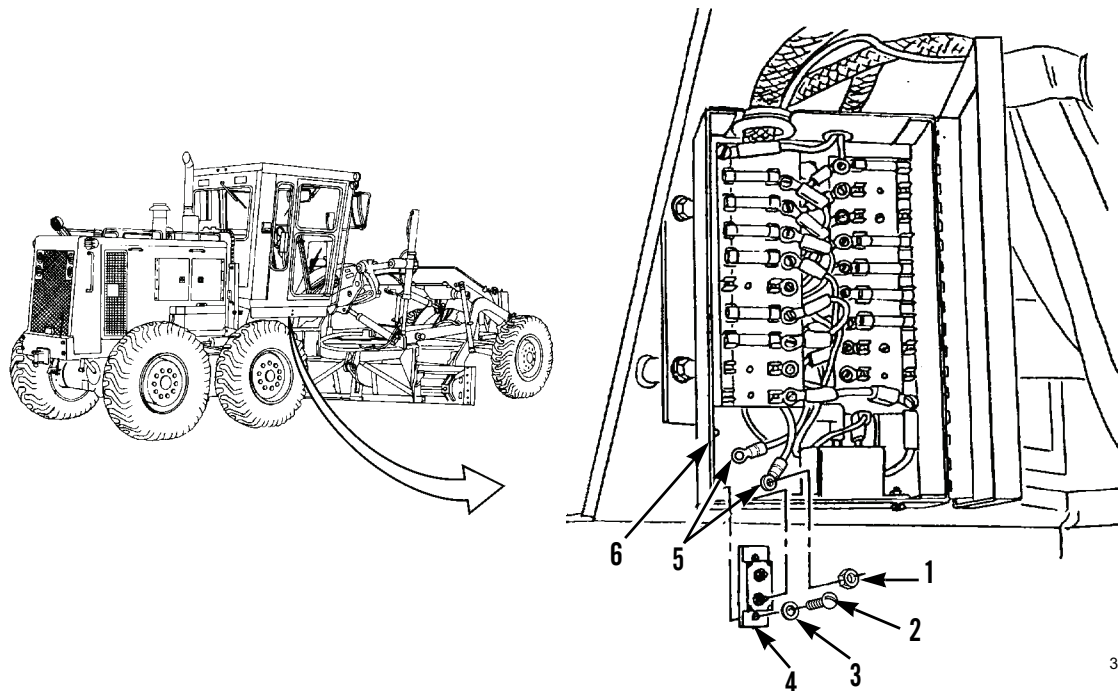
Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

1. Remove two nuts (1) and disconnect two wire assemblies (5) from circuit breaker (4).
2. Remove two screws (2), lockwashers (3), and circuit breaker (4) from fuse box (6). Discard lockwashers.



397-282

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install circuit breaker (4), two new lockwashers (3), and screws (2) in fuse box (6).
2. Connect two wire assemblies (5) and install two nuts (1) on circuit breaker (4).
3. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

MAIN FUSE BOX AND MOUNTING REPLACEMENT

0096 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Tag, marker (Item 44, WP 0349 00)

Engine off (TM 5-3805-261-10)

Lockwasher (2)

Battery cables disconnected (WP 0125 00)

References

WP 0021 00

Flasher unit removed (WP 0094 00)

Circuit breaker removed (WP 0095 00)

Cab signal light wire removed (WP 0107 00)

Table 1. Main Fuse Panel for the CCE and Type I Machines.

Slot	Amperage
1. Spare	10
2. Supplemental Steering	10
3. Turn Signals	10
4. Cushion Blade	10
5. Dozer Float	10
6. Blade Float	10
7. Air Dryer	10
8. Spare	
9. Spare	
10. Blade Lights	15
11. Rear Flood	15
12. Stop Lights	10
13. Operator Panel	5
14. Service Hour Meter	10
15. Differential Lock	10
16. Backup Alarm	15
17. Horn	15
18. Spare	

Table 2. Main Fuse Panel for the CCE and Type II Machines.



Slot	Amperage
1. Spare	
2. Supplemental Steering	10
3. Turn Signals	10
4. Cushion Blade	10
5. Dozer Float	10
6. Blade Float	10
7. Spare	
8. Spare	
9. Beacon	10
10. Blade Lights	15
11. Rear Flood	15
12. Stop Lights	10
13. Operator Panel	5
14. Hour Meter	10
15. Differential Lock	10
16. Backup Alarm	15
17. Horn	15
18. Spare	

REMOVAL

NOTE

Record amperage ratings of fuses to aid in installation.

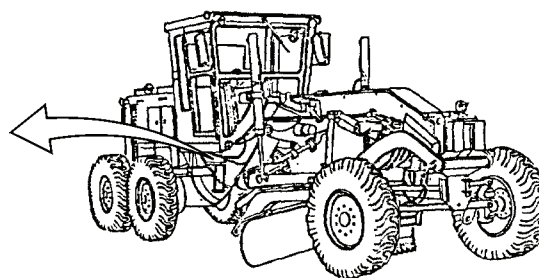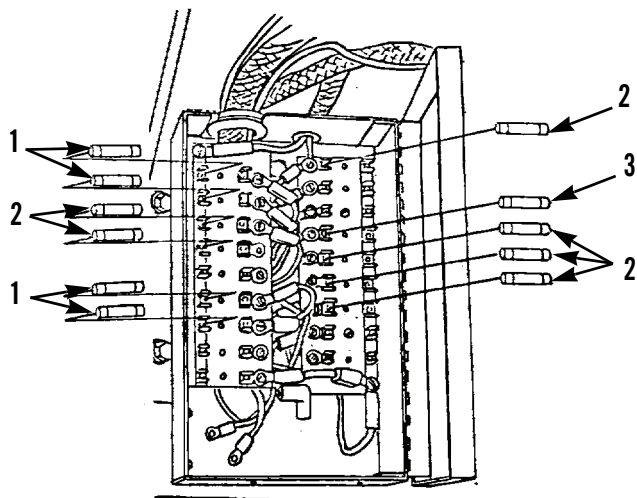1. Remove fuses (1, 2, and 3).




397-283

NOTE

Tag all wiring harnesses before disconnecting to aid in installation.

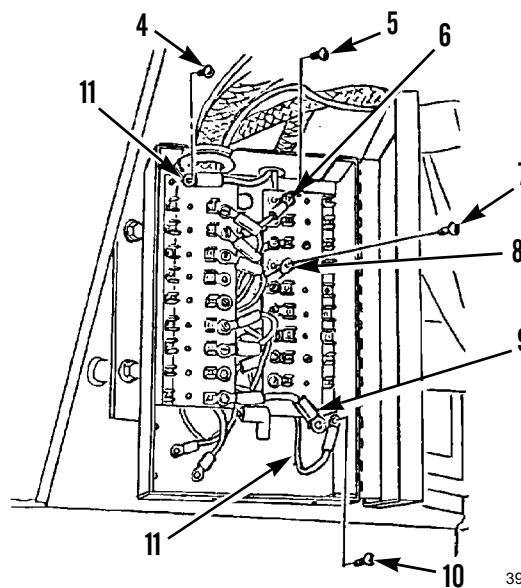
2. Remove screw (4) and disconnect main blackout light wiring harness (11).
3. Remove screw (5) and disconnect supplemental steering main wiring harness (6).
4. Remove screw (7) and disconnect monitor main wiring harness (8).
5. Remove screw (10) and disconnect main wiring harness (9) and main blackout wiring harness (11).




397-284

REMOVAL - CONTINUED

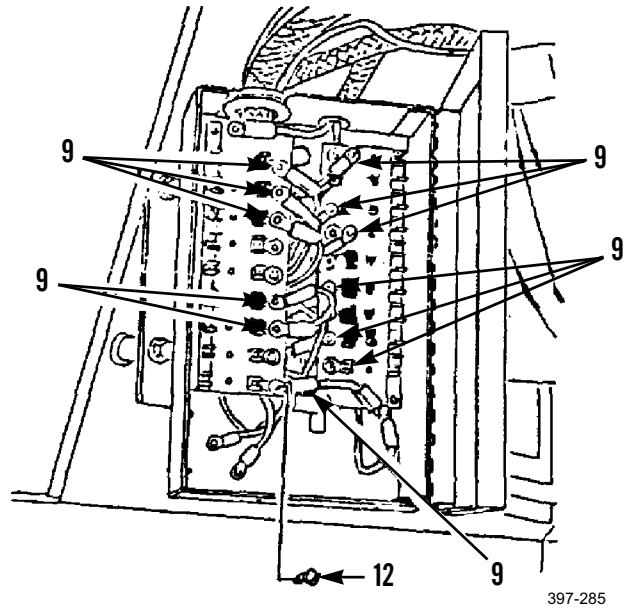6. Remove 12 screws (12) and disconnect main wiring harness (9).




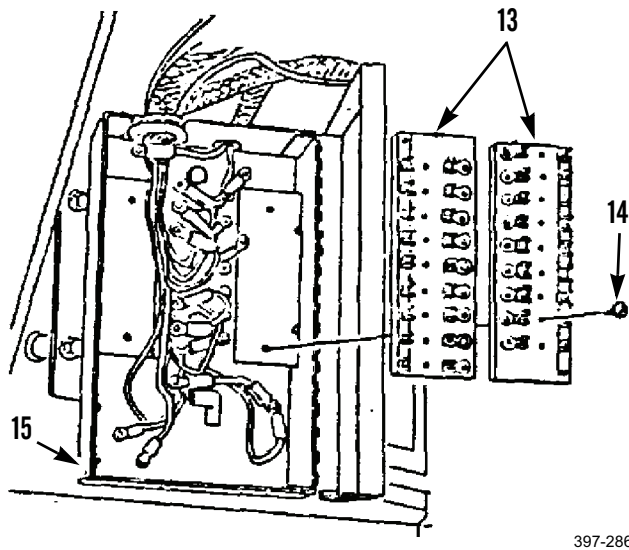7. Remove four screws (14) and two block fuseholders (13) from fuse box (15).



REMOVAL - CONTINUED

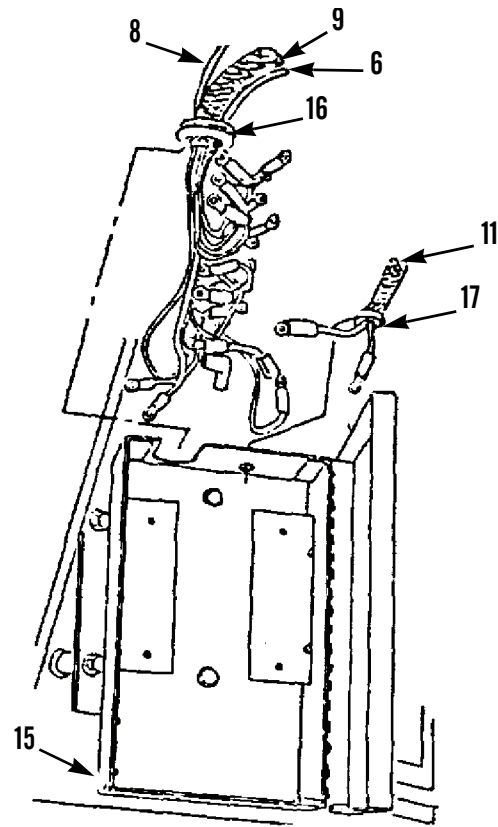
8. Remove grommet (16), supplemental steering main wiring harness (6), monitor main wiring harness (8), and main wiring harness (9) as a unit from fuse box (15).
9. Remove grommet (17) and main blackout light wiring harness (11) as a unit from fuse box (15).



397-287

REMOVAL - CONTINUED

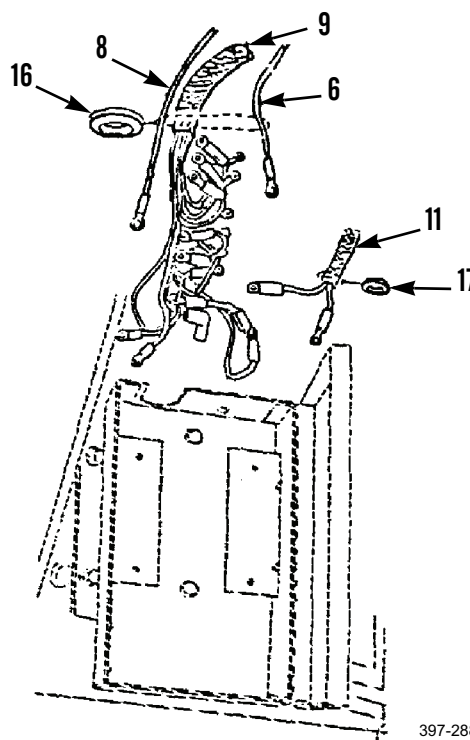10. Remove grommet (16) from supplemental steering main wiring harness (6), monitor main wiring harness (8), and main wiring harness (9).
11. Remove grommet (17) from main blackout light wiring harness (11).




397-288

12. Remove two bolts (22), lockwashers (21), and fuse box (15). Discard lockwashers.

NOTE

Remove decal only if damaged or illegible.

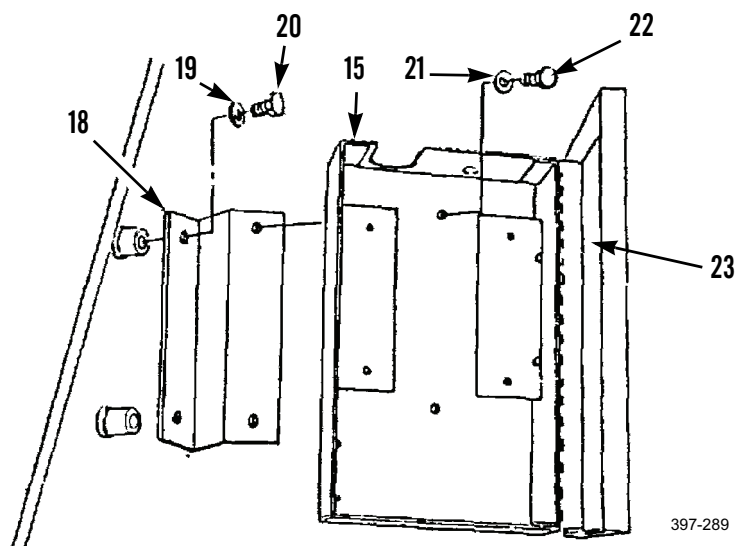13. Remove and discard decal (23) from fuse box (15).
14. Remove two screws (20), washers (19), and bracket (18).




397-289

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

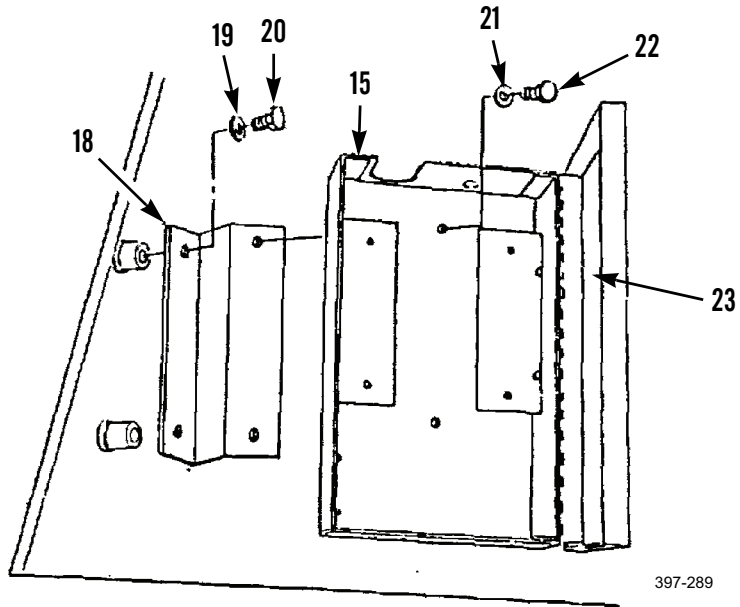
1. Install bracket (18), two washers (19), and screws (20).
2. If removed, install new decal (23) on fuse box (15).
3. Install fuse box (15), two new lockwashers (21), and bolts (22).



397-289


INSTALLATION - CONTINUED

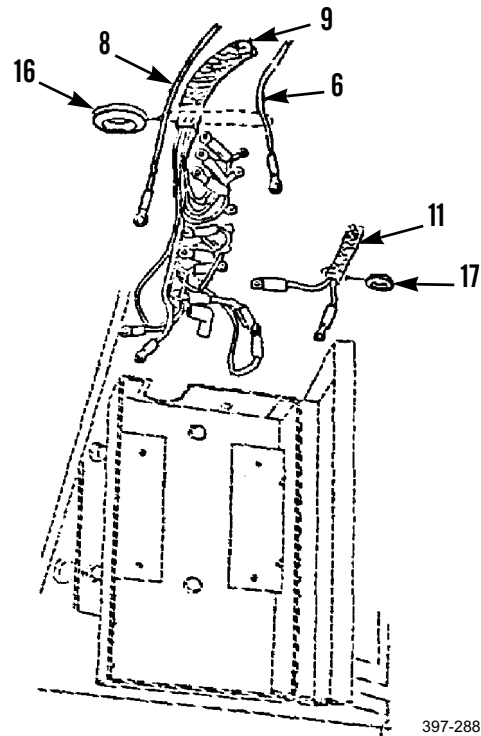4. Install grommet (17) on main blackout wiring harness (11).
5. Install grommet (16) on main wiring harness (9), monitor main wiring harness (8) and supplemental steering main wiring harness (6).



397-288

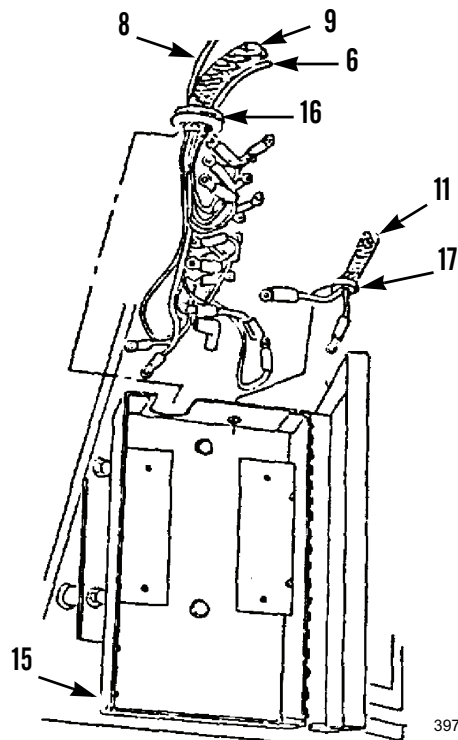
6. Install main blackout light wiring harness (11) and grommet (17) as a unit in fuse box (15).
7. Install main wiring harness (9), monitor main wiring harness (8), supplemental steering main wiring harness (6), and grommet (16) as a unit in fuse box (15).



397-287


INSTALLATION - CONTINUED

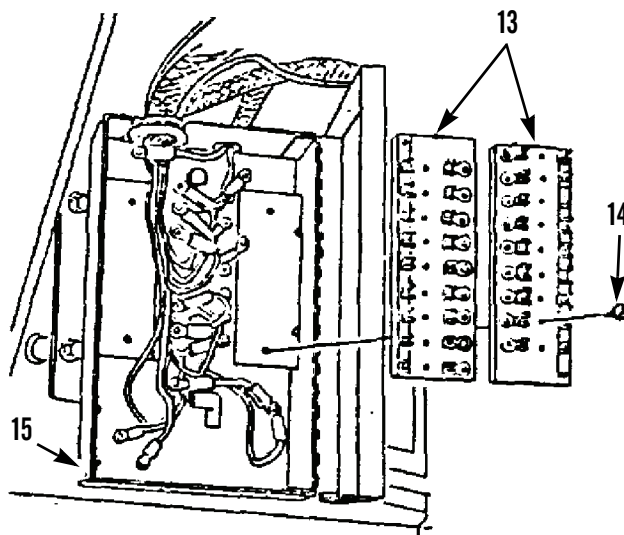8. Install two block fuse holders (13) and four screws (14) in fuse box (15).



397-286

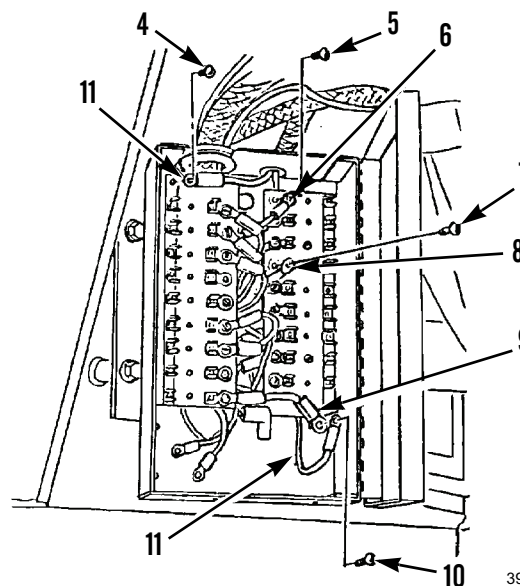
9. Connect main blackout wiring harness (11) and main wiring harness (9), and install screw (10).
10. Connect monitor main wiring harness (8) and install screw (7).
11. Connect supplemental steering main wiring harness (6) and install screw (5).
12. Connect main blackout light wiring harness (11) and install screw (4).



397-284

INSTALLATION - CONTINUED

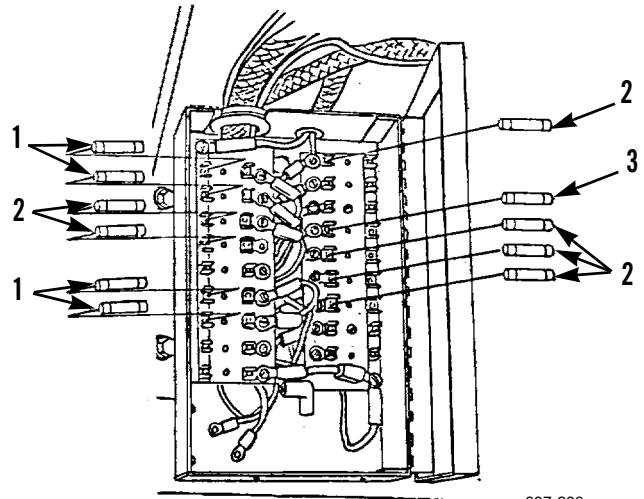13. Install fuses (3, 2, and 1).



397-283

14. Install cab signal light wire (WP 0107 00).
15. Install circuit breaker (WP 0095 00).
16. Install flasher unit (WP 0094 00).
17. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

CAB FUSE BOX AND COVER REPLACEMENT

0097 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Nut, self-locking (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Equipment lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Table 1. Cab Fuse Panel for the CCE Machine.

Slot	Amperage
1. Front Wiper	4 (slow blow)
2. Heater/Air Conditioner	15
3. Beacon	10
4. Fan	10 (rear)
5. Dome Light	5
6. Rear Wiper	4 (slow blow)
7. Lighter	15
8. Spare	

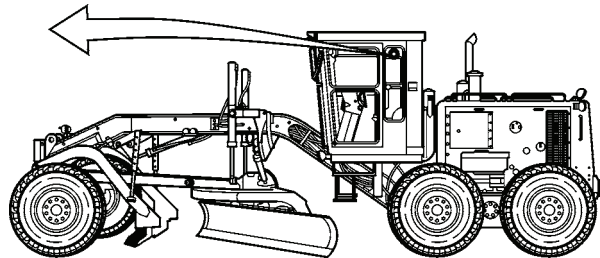
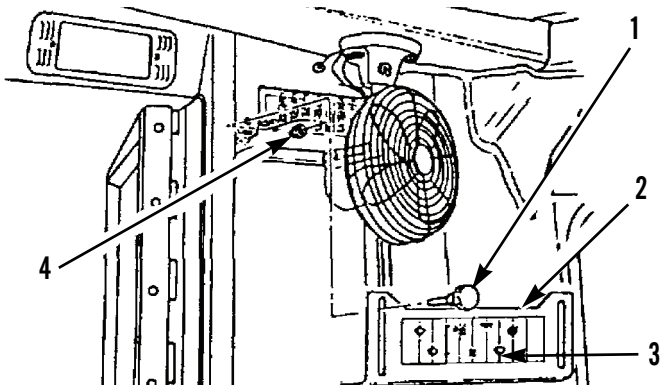
REMOVAL

1. Remove two self-locking nuts (4), knobs (1), and metal molding (2). Discard self-locking nuts.

NOTE

Remove ID marker only if damaged or illegible.


2. Remove and discard ID marker (3).



397-290

REMOVAL - CONTINUED

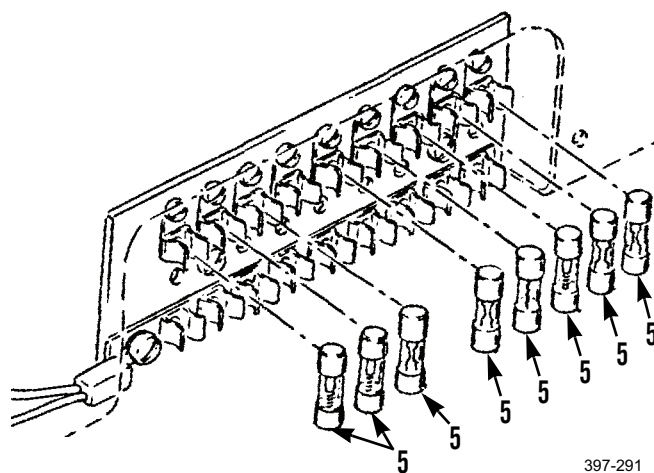3. Remove fuses (5).




397-291

NOTE

Tag all wire assemblies and wiring harness before disconnecting to aid in installation.

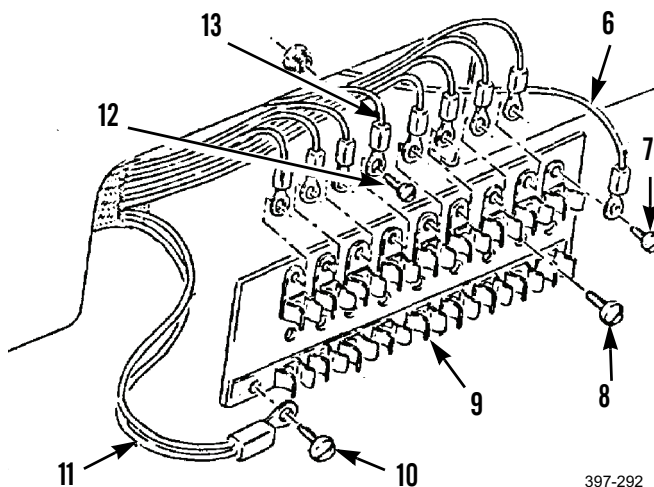4. Remove screw (7) and disconnect front fan wire assembly (6).
5. Remove screw (12) and disconnect rear fan wire assembly (13).
6. Remove eight screws (10) and disconnect cab main wiring harness (11).
7. Remove two screws (8) and block fuse holder (9).




397-292

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

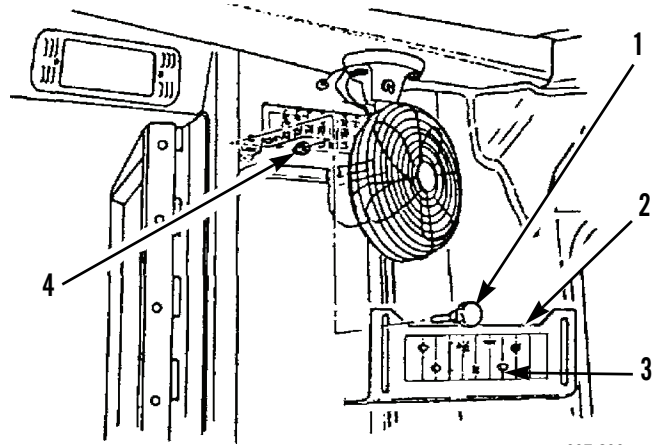1. Install block fuse holder (9) and two screws (8).
2. Connect cab main wiring harness (11) and install eight screws (10).
3. Connect rear fan wire assembly (13) and install screw (12).
4. Connect front fan wire assembly (6) and install screw (7).
5. Install fuses (5).
6. If removed, install new ID marker (3) on metal molding (2).
7. Install metal molding (2), two knobs (1), and new self-locking nuts (4).
8. Connect battery cables (WP 0125 00).



397-290

END OF WORK PACKAGE

NATO SLAVE RECEPTACLE AND CABLES REPLACEMENT

0098 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (4)

Nut, self-locking (4)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Left and right side engine doors opened (TM 5-3805-261-10)

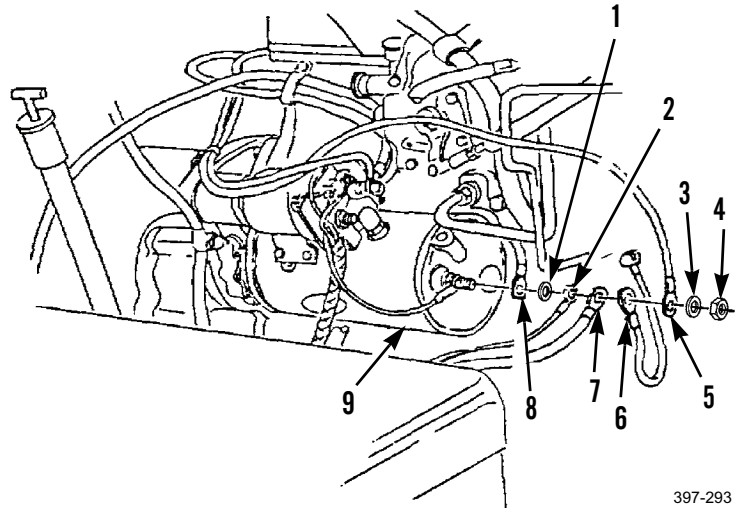
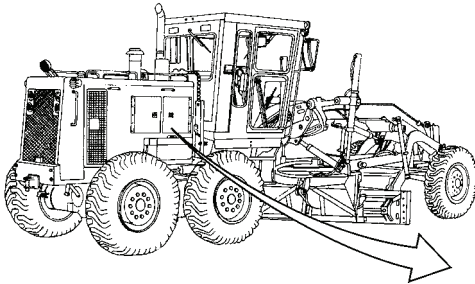
REMOVAL

1. Remove nut (4) and washer (3) from starting motor (9).

NOTE

Tag all wire and cable assemblies before disconnecting to aid in installation.


2. Disconnect cable assembly (5), wire assembly (6), cable assembly (7), and two wire assemblies (2).
3. Remove washer (1) and disconnect cable assembly (8).



397-293


REMOVAL - CONTINUED

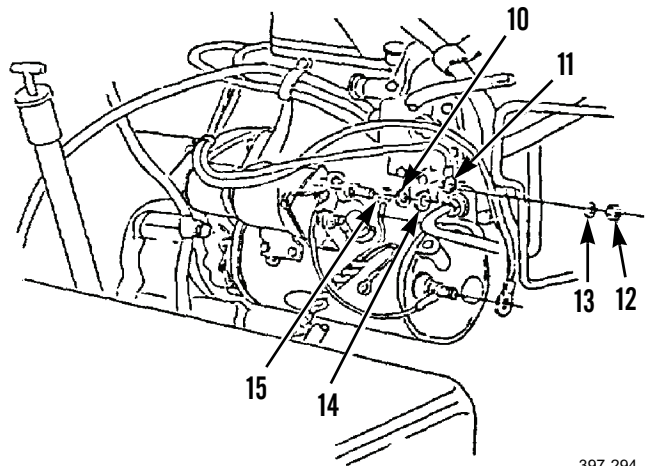4. Remove nut (12) and washer (13).
5. Disconnect cable assembly (11) and wire assemblies (10, 14, and 15).



397-294

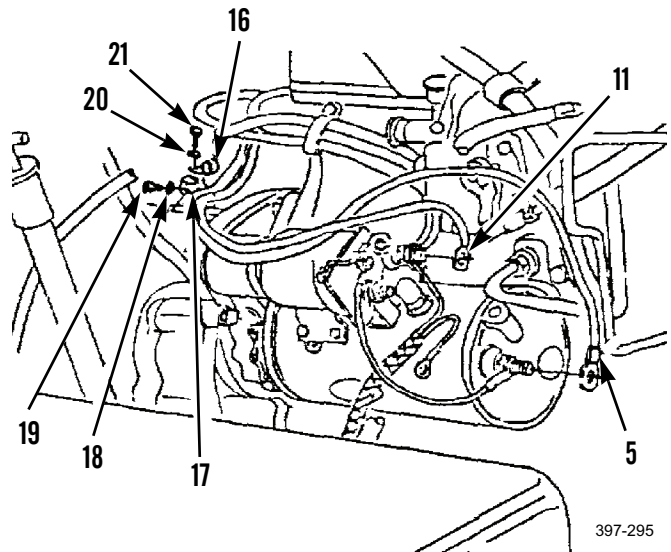
6. Remove bolt (21), washer (20), and clamp (16) from cable assemblies (5 and 11).
7. Remove bolt (19), washer (18), and bracket (17).



397-295

REMOVAL - CONTINUED

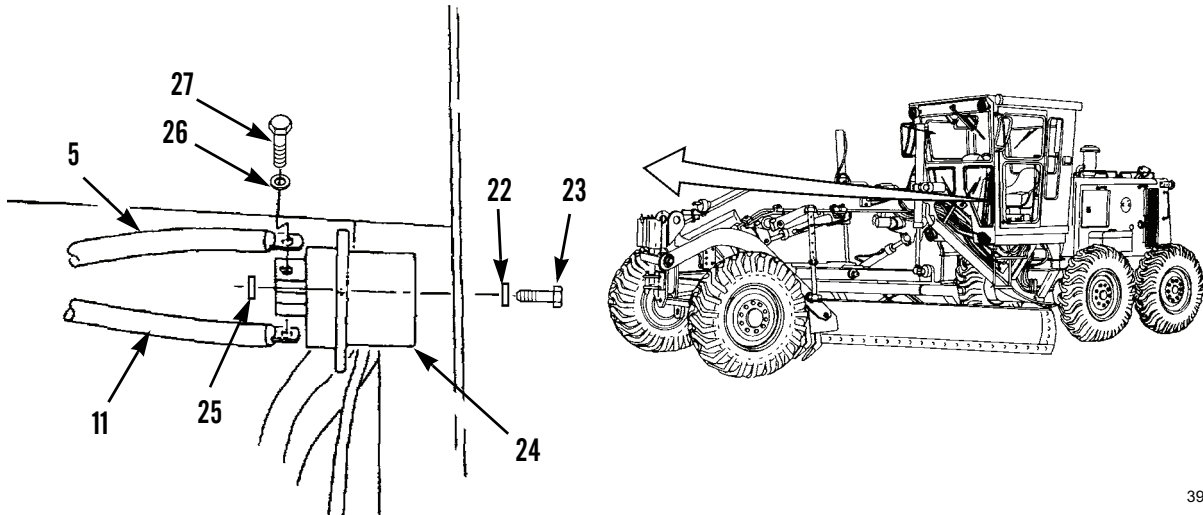8. Remove two screws (27), washers (26), and cable assemblies (5 and 11) from receptacle (24).
9. Remove four self-locking nuts (25), screws (23), lockwashers (22), and receptacle (24). Discard self-locking nuts and lockwashers.



397-296

CLEANING AND INSPECTION

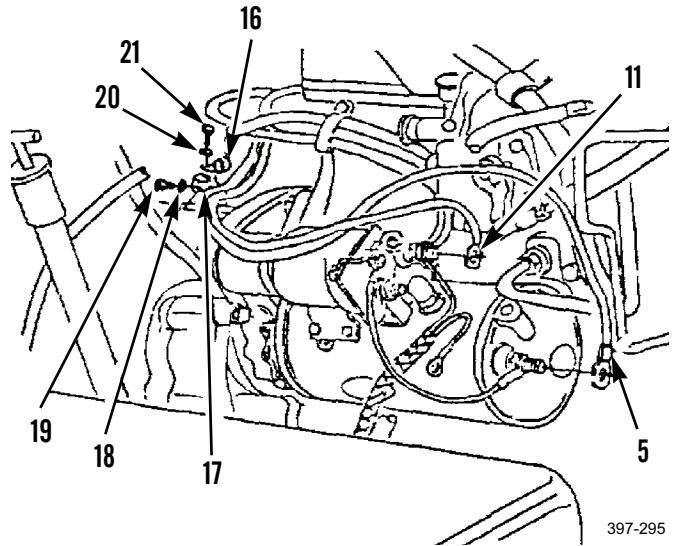
Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION


1. Install receptacle (24), four new lockwashers (22), screws (23), and new self-locking nuts (25).
2. Connect cable assemblies (11 and 5), two washers (26), and screws (27) to receptacle (24).

INSTALLATION - CONTINUED

3. Install bracket (17), washer (18), and bolt (19).
4. Install clamp (16), washer (20), and bolt (21) on cable assemblies (11 and 5).




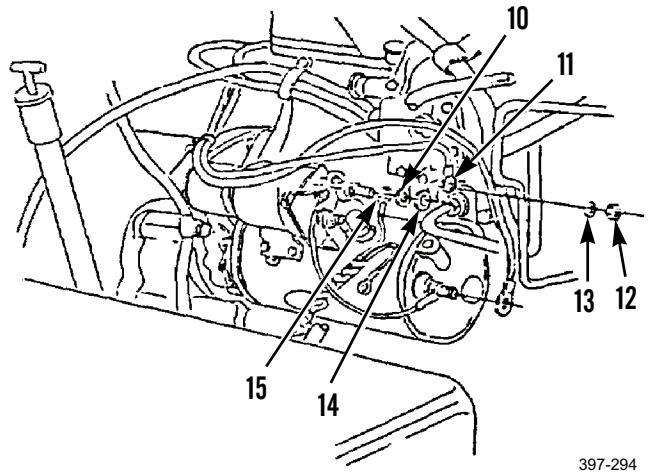5. Connect wire assemblies (15, 14, and 10) and install cable assembly (11).
6. Install washer (13) and nut (12).



INSTALLATION - CONTINUED

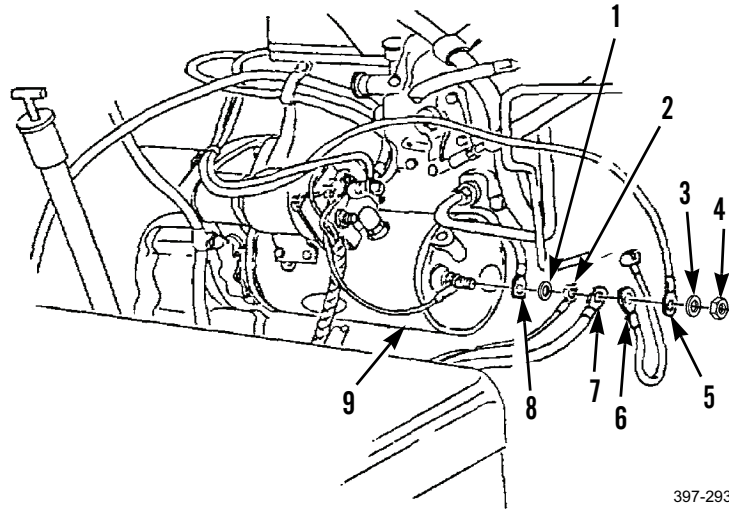7. Connect cable assembly (8) and install washer (1).
8. Connect two wire assemblies (2), cable assembly (7), and wire assembly (6) and install cable assembly (5).
9. Install washer (3) and nut (4) on starting motor (9).



10. Close left and right side engine doors (TM 5-3805-261-10).
11. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (4)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

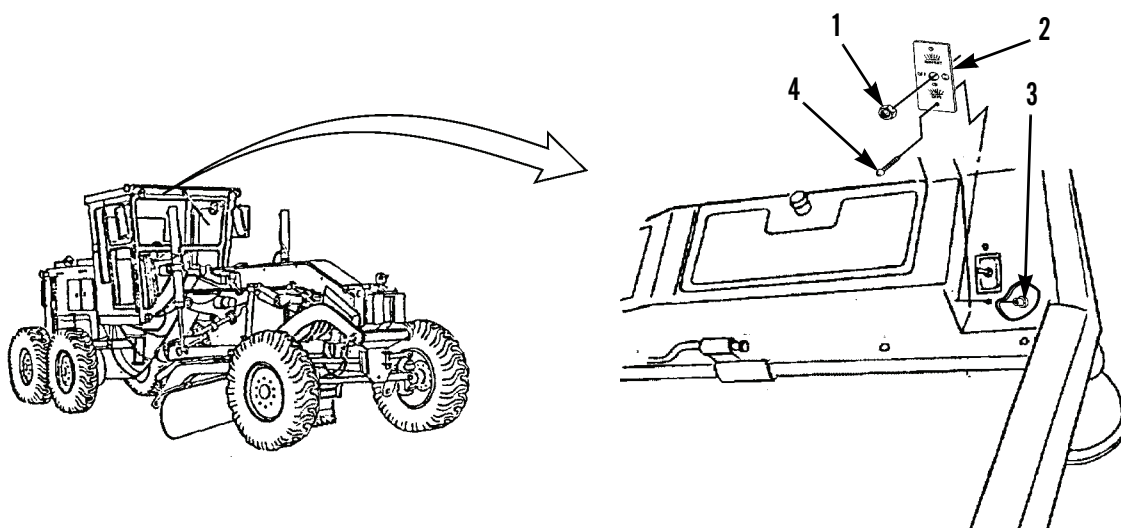
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL

1. Remove two screws (4), nut (1), instruction plate (2), and two nuts (3).




REMOVAL - CONTINUED

- Remove key washer (9), lockwasher (8), nut (7), and switch (6). Discard lockwasher.

NOTE

Tag wire assemblies before disconnecting to aid in installation.

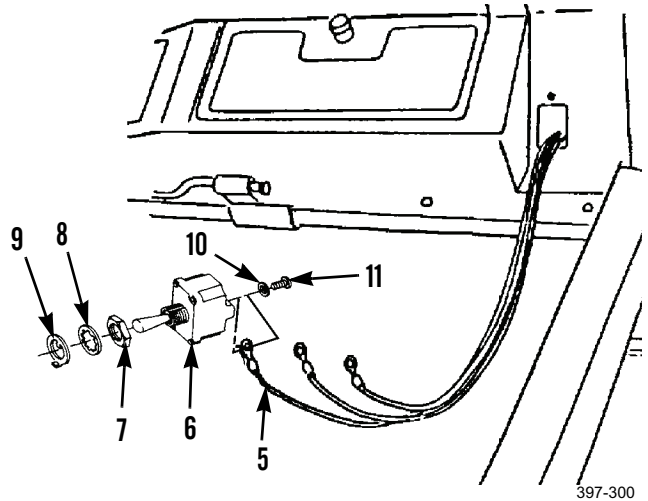- Remove three screws (11) and lockwashers (10) and disconnect three wire assemblies (5) from switch (6). Discard lockwashers.




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

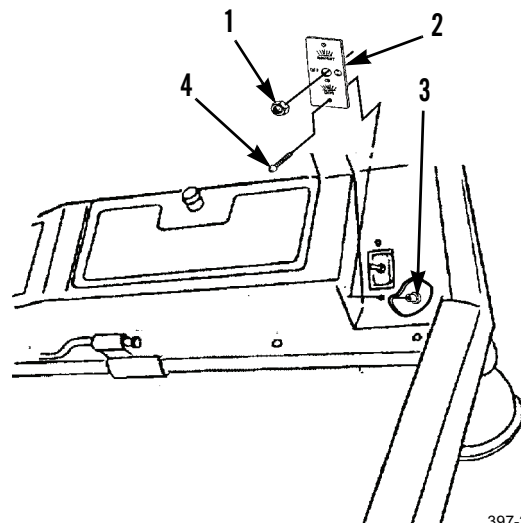- Connect three wire assemblies (5) and install three new lockwashers (10) and screws (11) on switch (6).
- Install switch (6), nut (7), new lockwasher (8), and key washer (9).
- Install two nuts (3), instruction plate (2), nut (1), and two screws (4).



- Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

DOME LIGHT DIMMER RESISTOR AND MOUNTING REPLACEMENT (CCE MACHINE)

0100 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Rivet (2)

Tube, shrinkable (as required)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Dome light switch removed (WP 0099 00)

Right side panel of right side cab storage compartment removed (WP 0189 00)

**DOME LIGHT DIMMER RESISTOR AND MOUNTING REPLACEMENT
(CCE MACHINE - CONTINUED)**

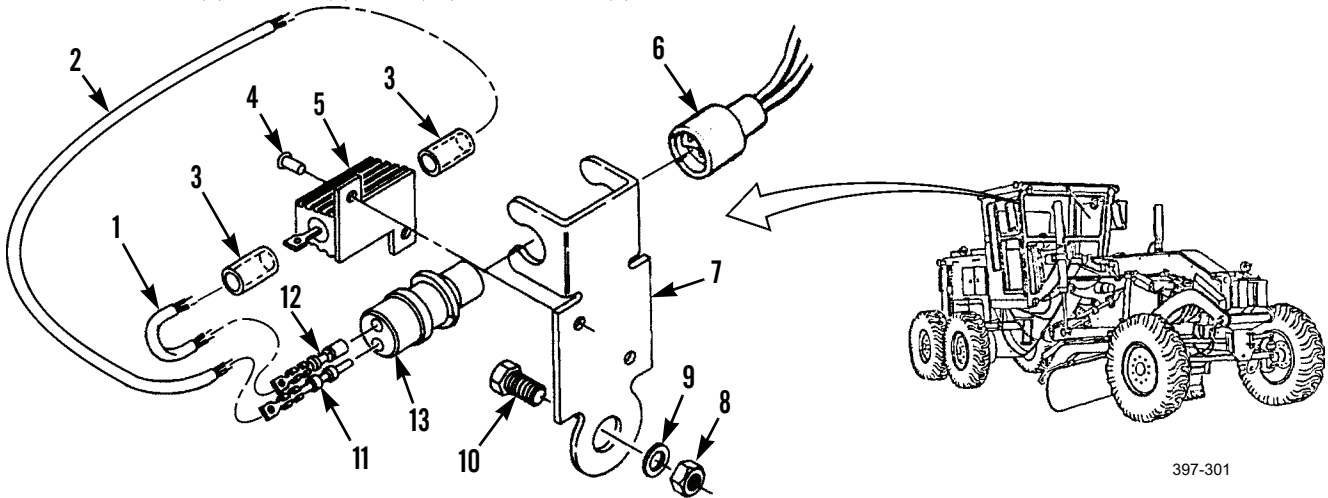
0100 00

REMOVAL

NOTE

Tag all wire and lead assemblies before disconnecting to aid in installation.

1. Disconnect wire assembly (6) from connector (13).
2. Remove shrinkable tube (3) and disconnect lead assembly (2) from resistor (5). Discard shrinkable tube.
3. Remove shrinkable tube (3), lead assembly (2), and pin (11) from connector (13). Discard shrinkable tube.
4. Remove shrinkable tube (3) and disconnect lead assembly (1) from resistor (5). Discard shrinkable tube.
5. Remove shrinkable tube (3), lead assembly (1), and contact (12) from connector (13). Discard shrinkable tube.
6. Remove connector (13) from bracket (7).
7. Remove two rivets (4) and resistor (5) from bracket (7). Discard rivets.
8. Remove nut (8), washer (9), bolt (10), and bracket (7).



397-301

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install bracket (7), bolt (10), washer (9), and nut (8).
2. Install resistor (5) and two new rivets (4) on bracket (7).
3. Install connector (13) on bracket (7).
4. Install contact (12), connect lead assembly (1), and install new shrinkable tube (3) on connector (13).
5. Install lead assembly (1) and new shrinkable tube (3) on resistor (5).
6. Install pin (11), connect lead assembly (2), and install new shrinkable tube (3) on connector (13).
7. Install lead assembly (2) and new shrinkable tube (3) on resistor (5).
8. Connect wire assembly (6) on connector (13).
9. Install right side panel in right side cab storage compartment (WP 0189 00).
10. Install dome light switch (WP 0099 00).
11. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

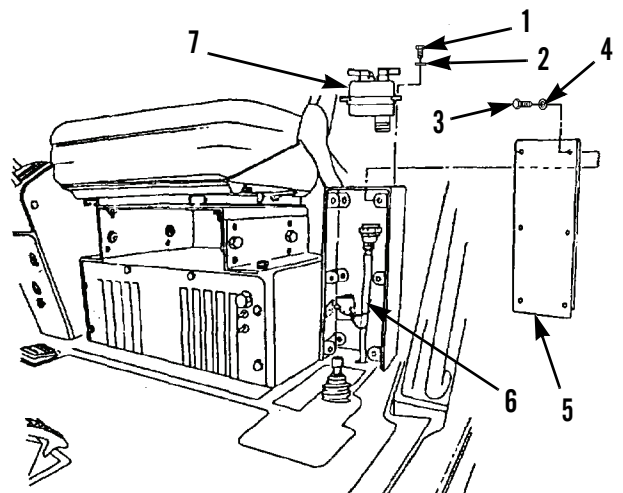
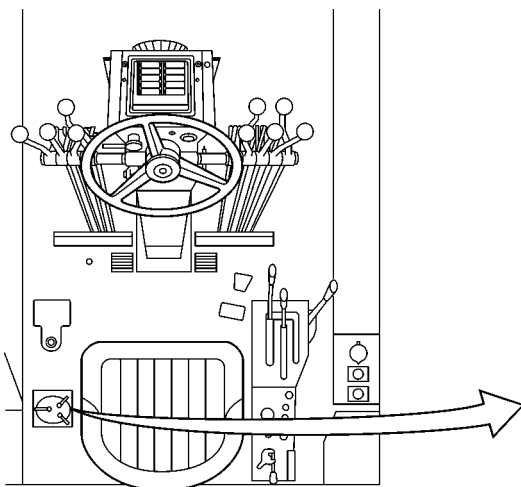
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL


1. Remove six bolts (3), washers (4), and plate (5).
2. Disconnect harness (6) from switch (7).
3. Remove four screws (1), washers (2), and switch (7).



397-304

REMOVAL - CONTINUED

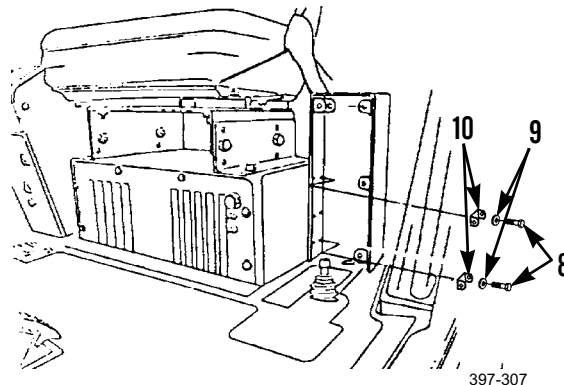
- Remove four bolts (8), washers (9), and two brackets (10).

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

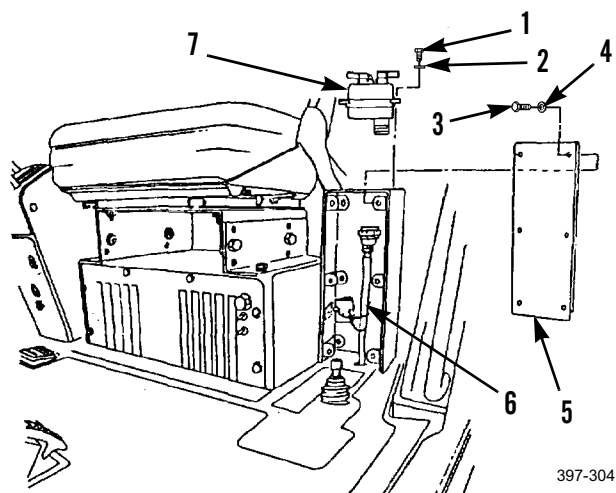- Install two brackets (10), four washers (9), and bolts (8).
- Install switch (7), four washers (2), and screws (1).
- Connect harness (6) on switch (7).
- Install plate (5), six washers (4), and bolts (3).



- Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

BLACKOUT LIGHTING MAGNETIC SWITCH REPLACEMENT

0102 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

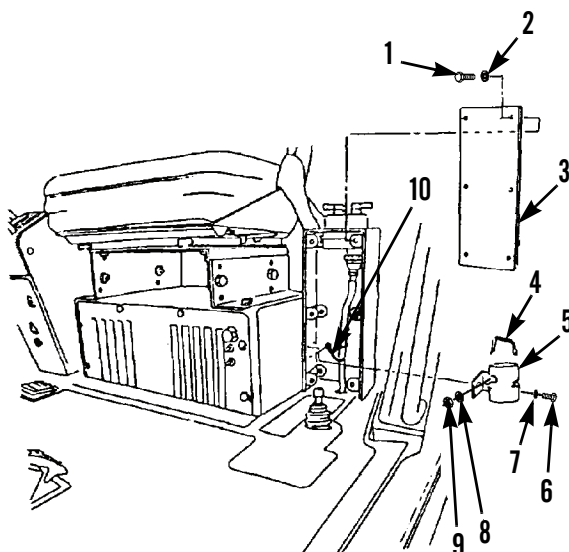
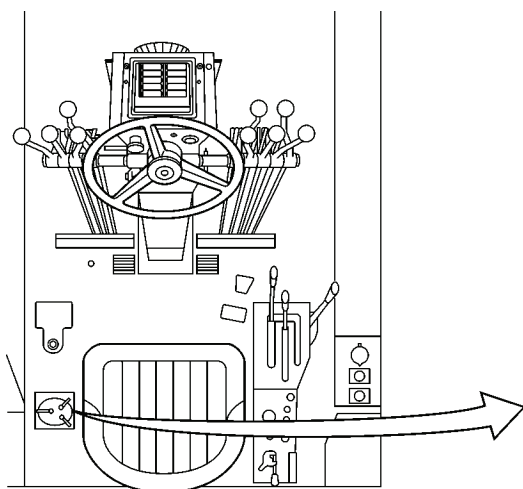
REMOVAL

1. Remove six bolts (1), washers (2), and plate (3).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

2. Remove four nuts (9) and washers (8) and disconnect three wire assemblies (10) from switch (5).
3. Remove two bolts (6), washers (7), lead (4), and switch (5).




397-308

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

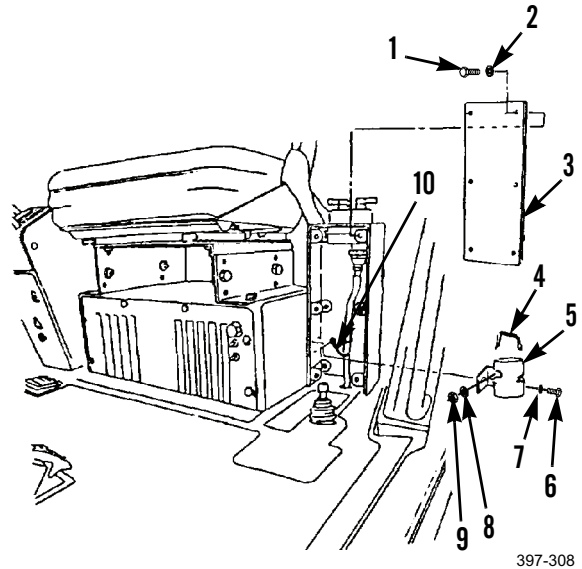1. Install switch (5), lead (4), two washers (7), and bolts (6).
2. Connect three wire assemblies (10) and install four washers (8) and nuts (9) on switch (5).
3. Install plate (3), six washers (2), and bolts (1).



4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

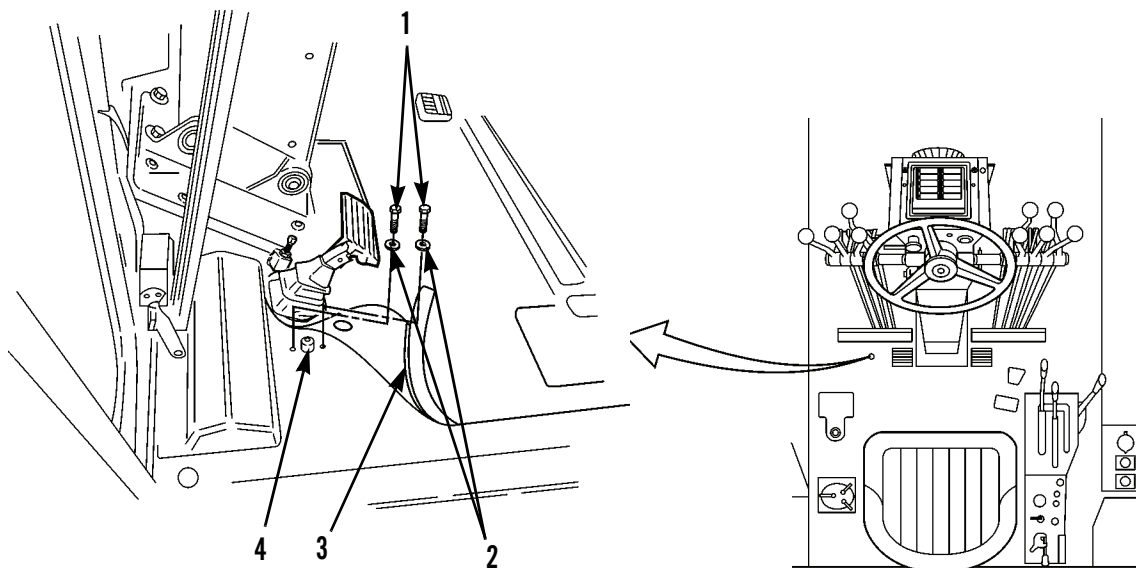
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL

1. Fold back corner of floor mat (3) and remove two screws (1), washers (2), and switch (4).




397-305

REMOVAL - CONTINUED

NOTE

Tag wire assemblies before disconnecting to aid in installation.

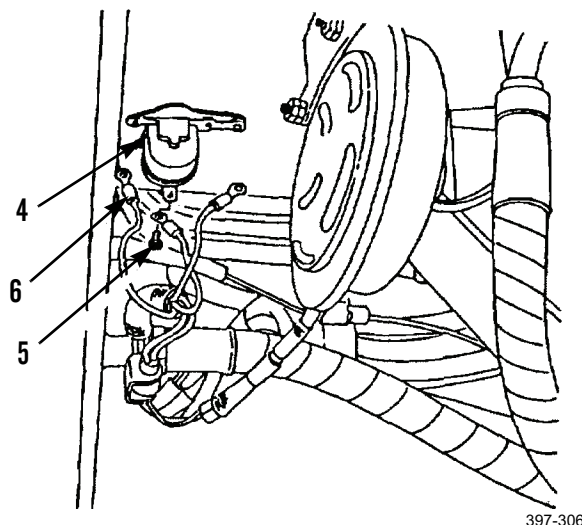2. Under left side of cab floor, remove three screws (5) and disconnect three wire assemblies (6) from switch (4).




397-306

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

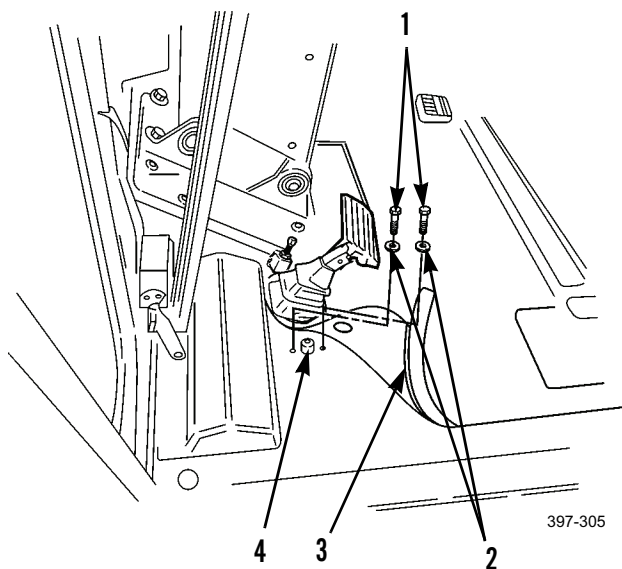1. Under left side of cab floor, connect three wire assemblies (6) and install three screws (5) to switch (4).
2. Install switch (4), two washers (2), and screws (1).
3. Lay down corner of floor mat (3).



397-305

4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Lamp Replacement, Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Tag, marker (Item 44, WP 0349 00)

Engine off (TM 5-3805-261-10)

Washer, spring-tension (2)

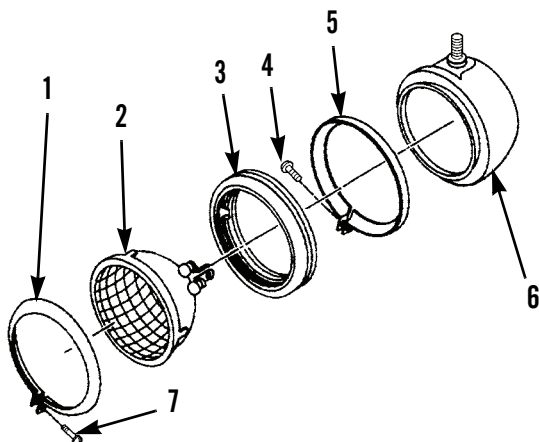
Battery cables disconnected (WP 0125 00)

LAMP REPLACEMENT

NOTE

This procedure covers maintenance of the left headlight. Follow these instructions for the right headlight.

1. Remove screw (7), lens retainer (1), screw (4), lens retainer (5), molding (3), and lamp (2) from housing (6). Discard lamp.
2. Install new lamp (2), molding (3), lens retainer (5), screw (4), lens retainer (1), and screw (7).




397-314

REMOVAL**NOTE**

Support headlight while removing mounting hardware and disconnecting wire assemblies.

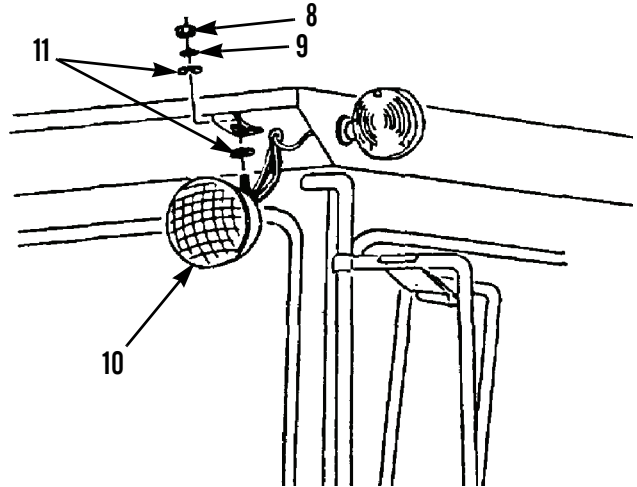1. Remove nut (8), washer (9), and two spring-tension washers (11) from headlight (10). Discard spring-tension washers.




397-2086

NOTE

Tag wire assemblies before disconnecting to aid in installation.

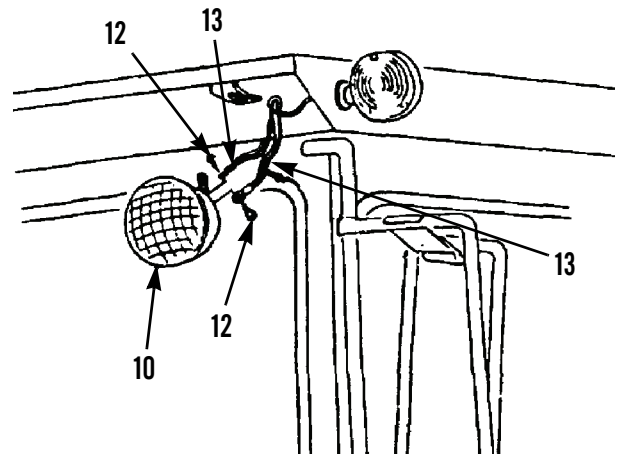
2. Remove two screws (12), disconnect two wire assemblies (13) and remove headlight (10).



397-315

DISASSEMBLY

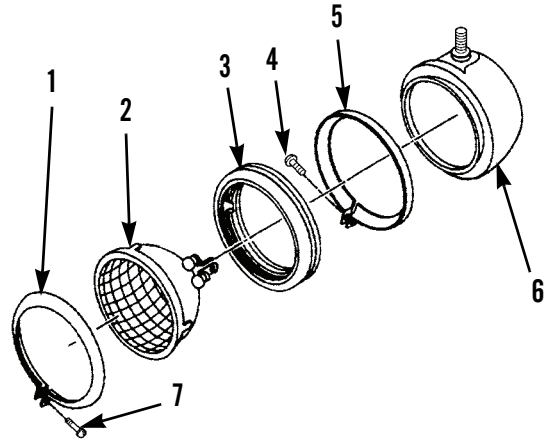Remove screw (7), lens retainer (1), screw (4), lens retainer (5), molding (3), and lamp (2) from housing (6).



397-316

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

ASSEMBLY

Install lamp (2), molding (3), lens retainer (5), screw (4), lens retainer (1), and screw (7) to housing (6).

INSTALLATION

1. Support headlight (10), connect two wire assemblies (13) and install two screws (12).
2. Install headlight (10), two new spring-tension washers (11), washer (9), and nut (8).
3. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Lamp Replacement, Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

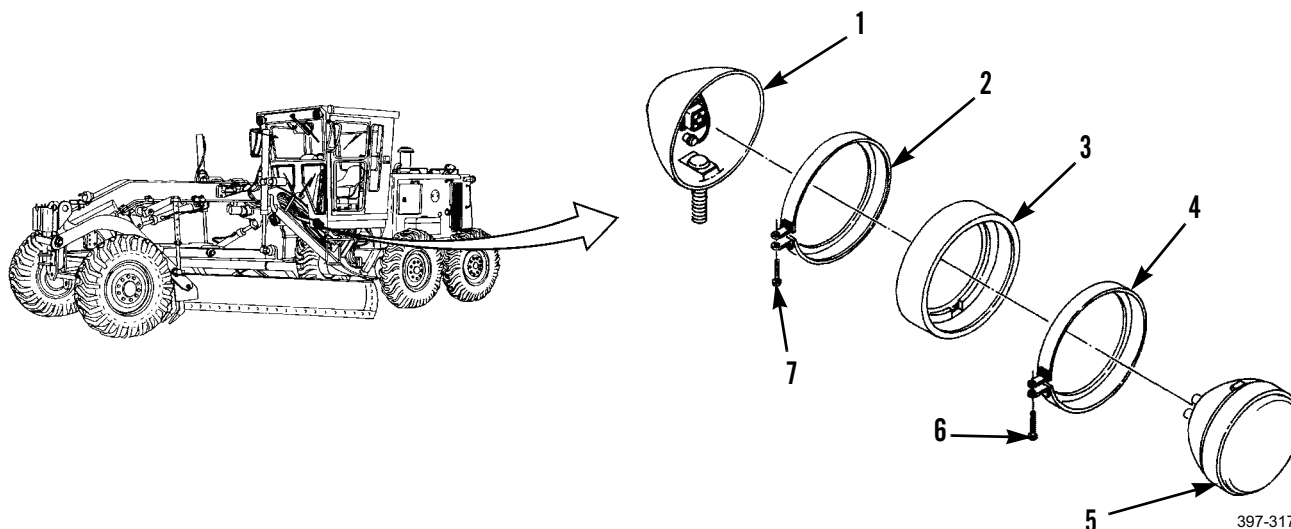
Battery cables disconnected (WP 0125 00)

LAMP REPLACEMENT

NOTE

This procedure covers maintenance of the left front work light. Follow these instructions for the right front work light.

1. Remove screw (6), lens retainer (4), screw (7), lens retainer (2), lamp (5), and molding (3) from housing (1). Discard lamp.
2. Install new lamp (5), molding (3), lens retainer (2), screw (7), lens retainer (4), and screw (6).



397-317

REMOVAL

NOTE

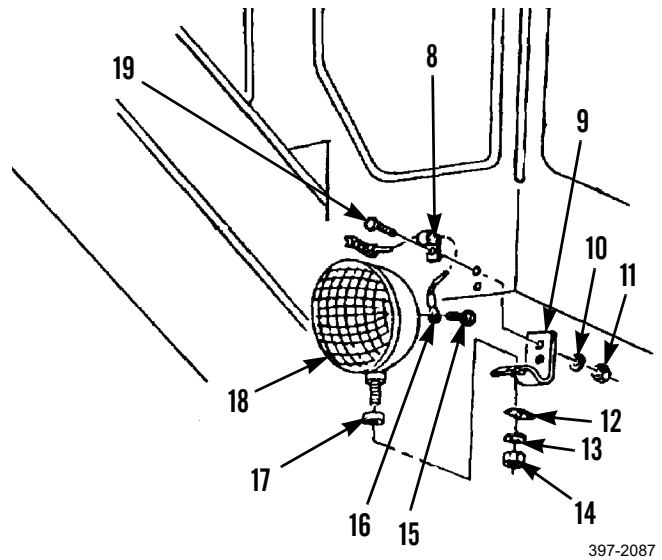
Support work light while removing mounting hardware and disconnecting wire assemblies.

1. Remove nut (14), washer (13), spacer (12), work light (18), and spacer (17).

NOTE


Tag wire assemblies before disconnecting to aid in installation.

2. Remove screw (15) and disconnect wire assembly (16) from work light (18).
3. Remove two nuts (11), washers (10), bolts (19), clamp (8), and bracket (9).



DISASSEMBLY

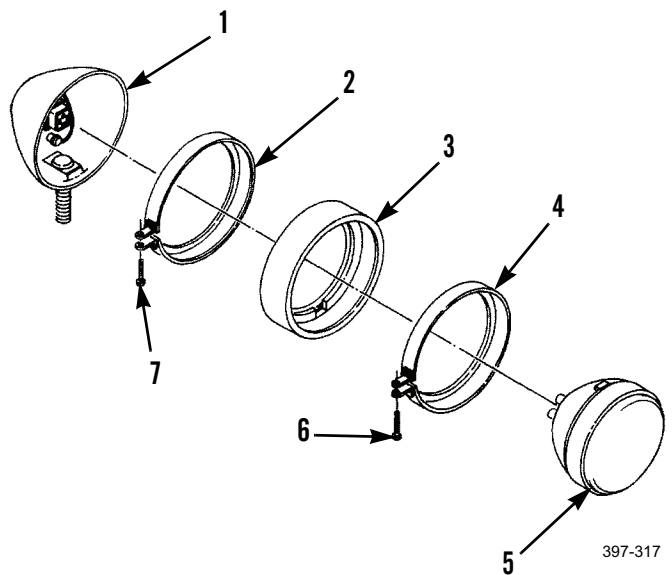Remove screw (6), lens retainer (4), screw (7), lens retainer (2), lamp (5), and molding (3) from housing (1).



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

ASSEMBLY

Install molding (3), lamp (5), lens retainer (2), screw (7), lens retainer (4), and screw (6) to housing (1).

INSTALLATION

1. Install bracket (9), clamp (8), two bolts (19), washers (10), and nuts (11).
2. Support work light (18), connect wire assembly (16) and install screw (15).
3. Install spacer (17), work light (18), spacer (12), washer (13), and nut (14).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Lamp Replacement, Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Tag, marker (Item 44, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Cable tie (2)

Gasket (2)

Engine off (TM 5-3805-261-10)

Lockwasher (2)

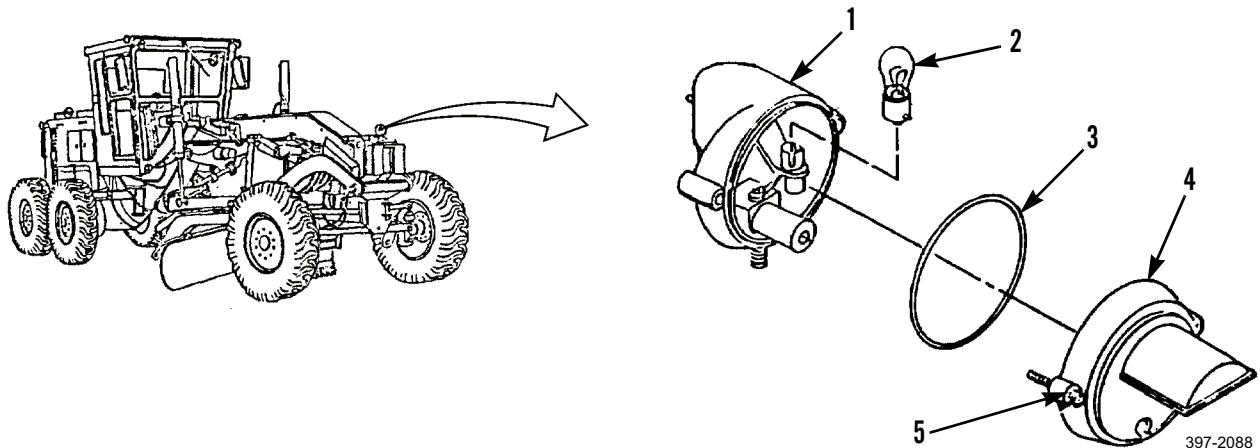
Battery cables disconnected (WP 0125 00)

LAMP REPLACEMENT

NOTE

Three screws cannot be removed from door.

1. Loosen three screws (5) and remove door (4) from housing (1).
2. Remove and discard gasket (3).
3. Remove and discard lamp (2) by pushing in and turning left.
4. Install new lamp (2) by pushing in and turning right.
5. Install new gasket (3).
6. Position door (4) on housing (1) and tighten three screws (5).



397-2088

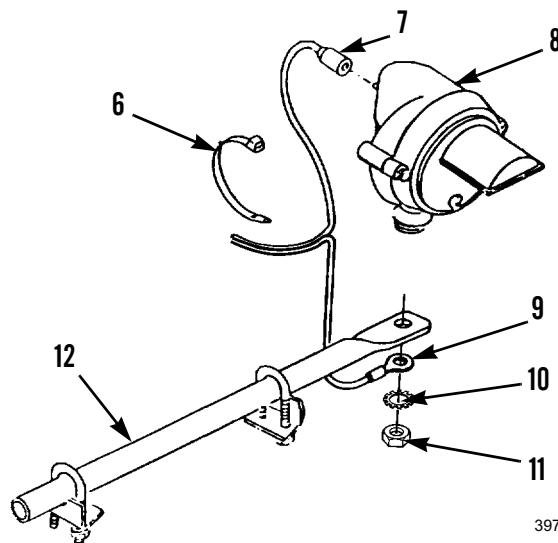
REMOVAL

1. Remove and discard two cable ties (6).

NOTE


Tag wire assemblies before disconnecting to aid in installation.

2. Disconnect wire assembly (7) from back of blackout light (8).
3. Remove nut (11) and lockwasher (10), disconnect wire assembly (9), and remove blackout light (8) from tube (12). Discard lockwasher.



397-319

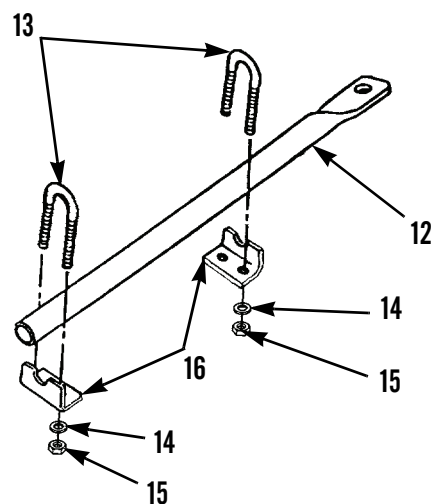4. Remove four nuts (15), washers (14), two brackets (16), U-bolts (13), and tube (12).



397-320

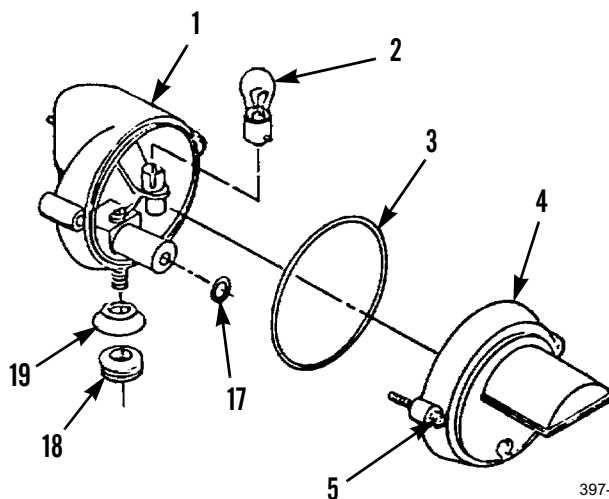
DISASSEMBLY

1. Remove finishing washer (18) and lockwasher (19) from housing (1). Discard lockwasher.

NOTE

Three screws cannot be removed from door.

2. Loosen three screws (5) and remove door (4).
3. Remove and discard two gaskets (3 and 17).
4. Remove lamp (2) by pushing in and turning left.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

ASSEMBLY

1. Install lamp (2) in housing (1) by pushing in and turning right.
2. Install two new gaskets (17 and 3).
3. Position door (4) on housing (1) and tighten three screws (5).
4. Install new lockwasher (19) and finishing washer (18).

INSTALLATION

1. Loosely install two U-bolts (13), brackets (16), four washers (14), and nuts (15) on tube (12) and position as a unit on top of front frame.
2. Slide two brackets (16) under lips of front frame, align rounded end of tube (12) flush with right edge of frame and tighten four nuts (15).
3. Position blackout light (8) in straight level position on tube (12), connect wire assembly (9) and install new lockwasher (10) and nut (11).
4. Connect wire assembly (7) to back of blackout light (8).
5. Install two new cable ties (6).
6. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

FRONT TURN SIGNAL LIGHTS MAINTENANCE

0107 00

THIS WORK PACKAGE COVERS

Lamp Replacement, Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Gasket (2)

Implements lowered to ground (TM 5-3805-261-10)

Lockwasher (2)

Engine off (TM 5-3805-261-10)

Terminal, quick-disconnect (2)

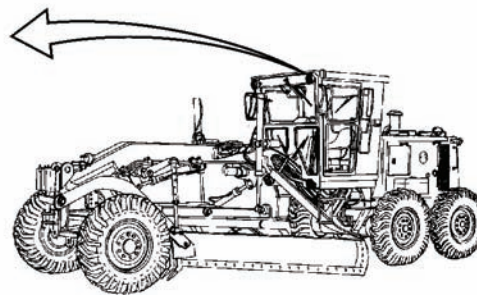
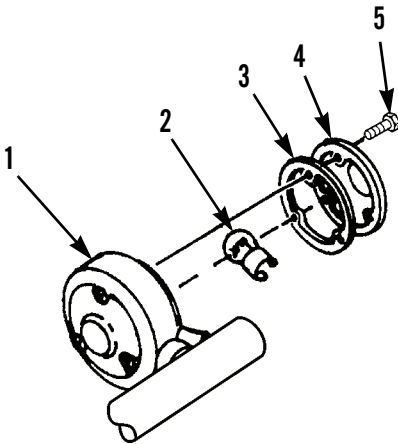
Battery cables disconnected (WP 0125 00)

LAMP REPLACEMENT

NOTE

This procedure covers maintenance of the left front turn signal light. Follow these instructions for the right front turn signal light.

1. Remove three screws (5), lens (4), gasket (3), and lamp (2) from housing (1). Discard gasket and lamp.
2. Install new lamp (2), new gasket (3), lens (4) and three screws (5).




397-324

REMOVAL

1. Disconnect wire assembly (6) and remove grommet (8).
2. Remove nut (9), lockwasher (10), washer (11), and turn signal light (13). Discard lockwasher.
3. Remove two washers (12) from turn signal light (13).

DISASSEMBLY

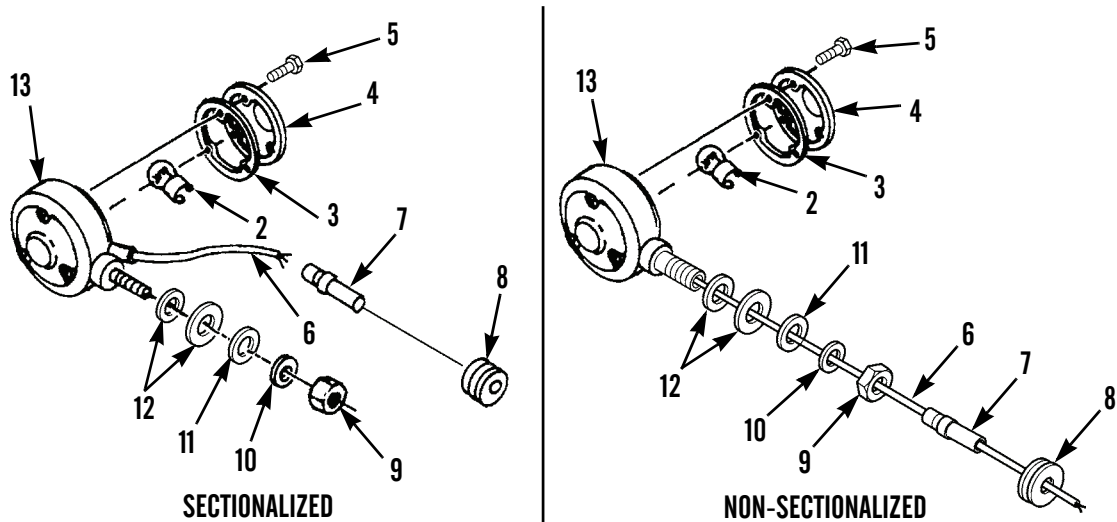Remove three screws (5), lens (4), gasket (3), lamp (2), and quick-disconnect terminal (7). Discard gasket and quick-disconnect terminal.



394-327

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

ASSEMBLY

Install new quick-disconnect terminal (7), lamp (2), new gasket (3), lens (4), and three screws (5).

INSTALLATION

1. Install two washers (12) on turn signal light (13).
2. Install turn signal light (13), washer (11), new lockwasher (10), and nut (9).
3. Install grommet (8) and connect wire assembly (6).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

REAR TURN SIGNAL LIGHTS, STOPLIGHTS, AND MOUNTING MAINTENANCE

0108 00

THIS WORK PACKAGE COVERS

Lamp Replacement, Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Lockwasher (24)

Engine off (TM 5-3805-261-10)

Screw, tapping (12)

Battery cables disconnected (WP 0125 00)

Grille removed (WP 0054 00)

LAMP REPLACEMENT

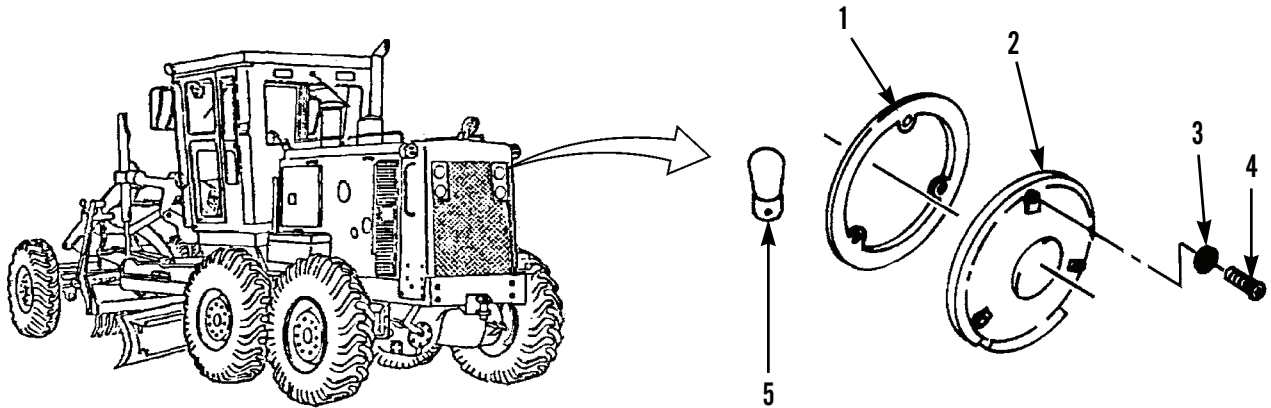
NOTE

This procedure covers maintenance of the right rear turn signal light, stoplight, and mounting. Follow these instructions for the left rear turn signal light, stoplight, and mounting.

LAMP REPLACEMENT - CONTINUED**Stoplight Lamp****NOTE**

Gasket is attached to lens.

1. Remove three tapping screws (4), lockwashers (3), red lens (2), and gasket (1) assembly. Discard tapping screws and lockwashers. Discard lens and gasket assembly if lens is cracked or gasket is deteriorated.
2. Remove and discard lamp (5) by pushing in and turning left.
3. Install new lamp (5) by pushing in and turning right.
4. Install new red lens (2) and gasket (1) assembly if discarded, three new lockwashers (3) and new tapping screws (4).




397-328

LAMP REPLACEMENT - CONTINUED**Rear Turn Signal Lamp****NOTE**

Gasket is attached to lens.

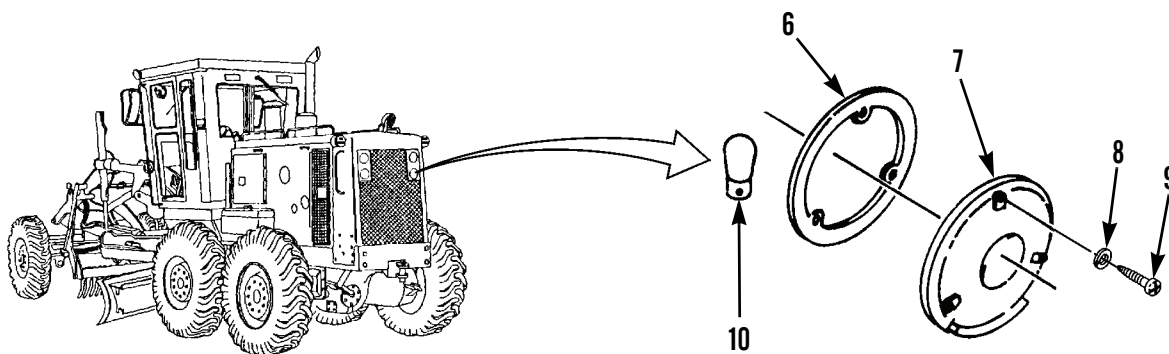1. Remove three tapping screws (9), lockwashers (8), amber lens (7), and gasket (6) assembly. Discard tapping screws and lockwashers. Discard lens and gasket assembly if lens is cracked or gasket is deteriorated.
2. Remove and discard lamp (10) by pushing in and turning to left.
3. Install new lamp (10) by pushing in and turning to right.
4. Install new amber lens (7) and gasket (6) assembly if discarded, three new lockwashers (8) and new tapping screws (9).



397-2089

REMOVAL**Stoplight****NOTE**

Gasket is attached to lens.

1. Remove three tapping screws (4), lockwashers (3), red lens (2), and gasket (1) assembly. Discard tapping screws and lockwashers. Discard lens and gasket assembly if lens is cracked or gasket is deteriorated.
2. Remove lamp (5) by pushing in and turning to left.

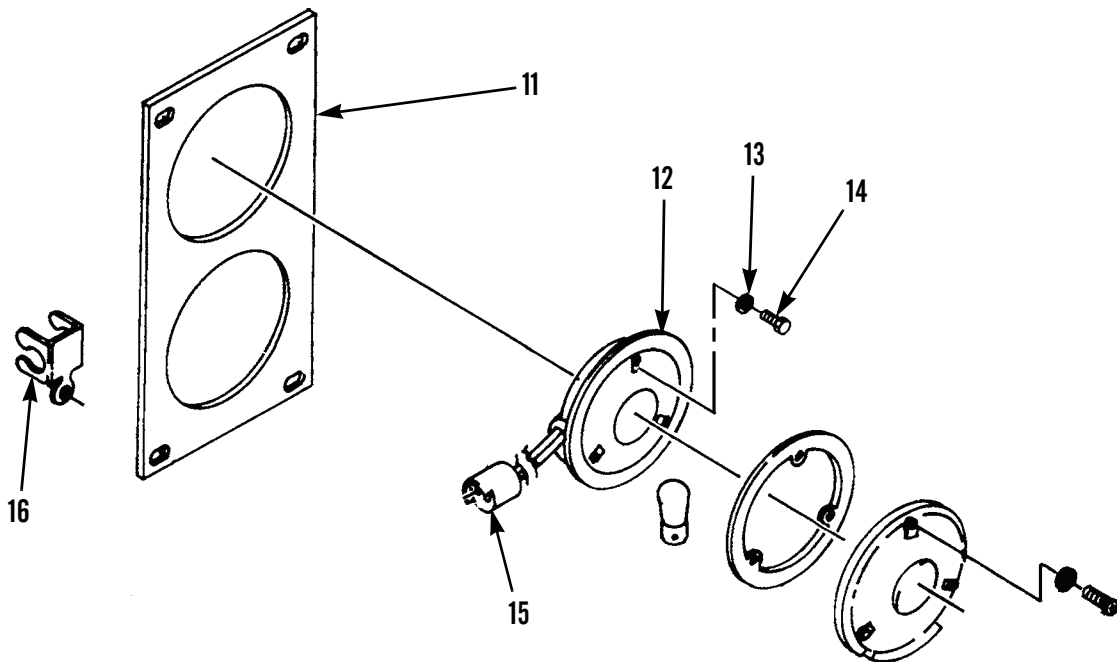
REMOVAL - CONTINUED**Stoptlight - Continued**

3. Remove three screws (14) and lockwashers (13). Discard lockwashers.

NOTE

Tag all connectors and wiring harnesses before disconnecting to aid in installation.


4. Pull out housing (12) from bracket (11), disconnect connector (15) from wiring harness and remove from retaining strap (16) and remove housing.



397-2090

REMOVAL - CONTINUED**Rear Turn Signal Light**

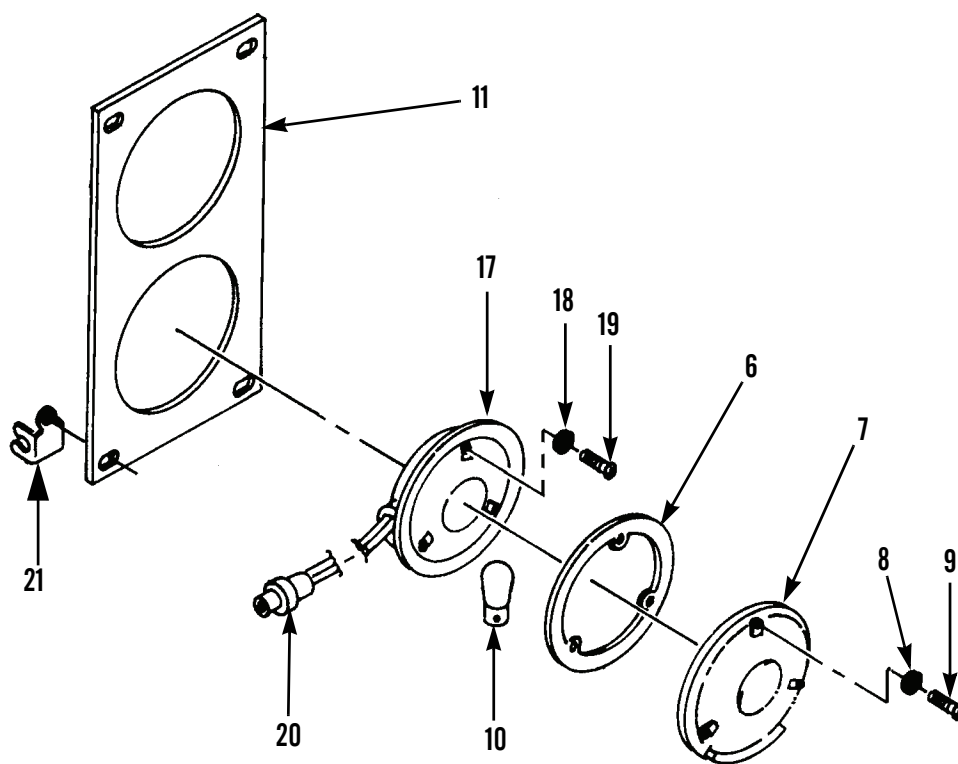1. Remove three tapping screws (9), lockwashers (8), amber lens (7), and gasket (6) assembly. Discard tapping screws and lockwashers. Discard lens and gasket assembly if lens is cracked or gasket is deteriorated.
2. Remove lamp (10) by pushing in and turning to left.
3. Remove three screws (19) and lockwashers (18). Discard lockwashers.
4. Pull out housing (17) from bracket (11), disconnect connector (20) from wiring harness and remove from retaining strap (21) and remove housing.




397-2091

REMOVAL - CONTINUED

Mounting

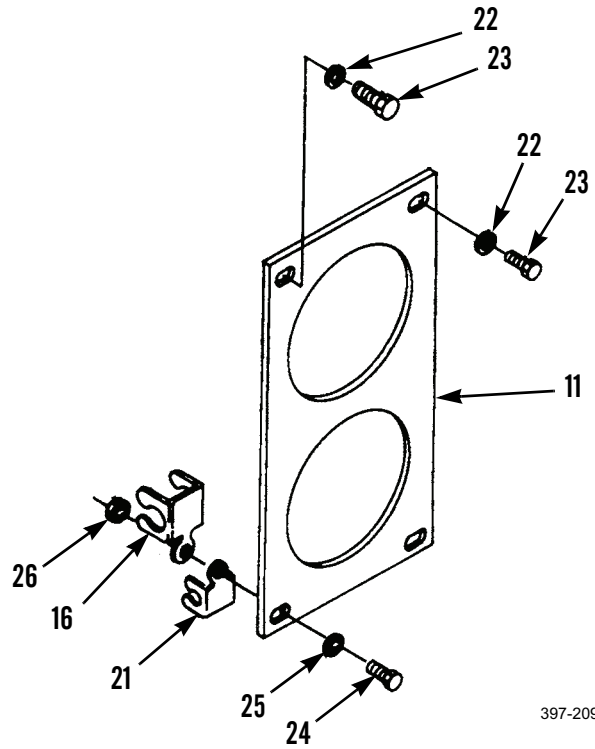1. Remove bolt (24), washer (25), nut (26), and retaining straps (16 and 21).
2. Remove two bolts (23), washers (22), and bracket (11).



397-2092

CLEANING AND INSPECTION

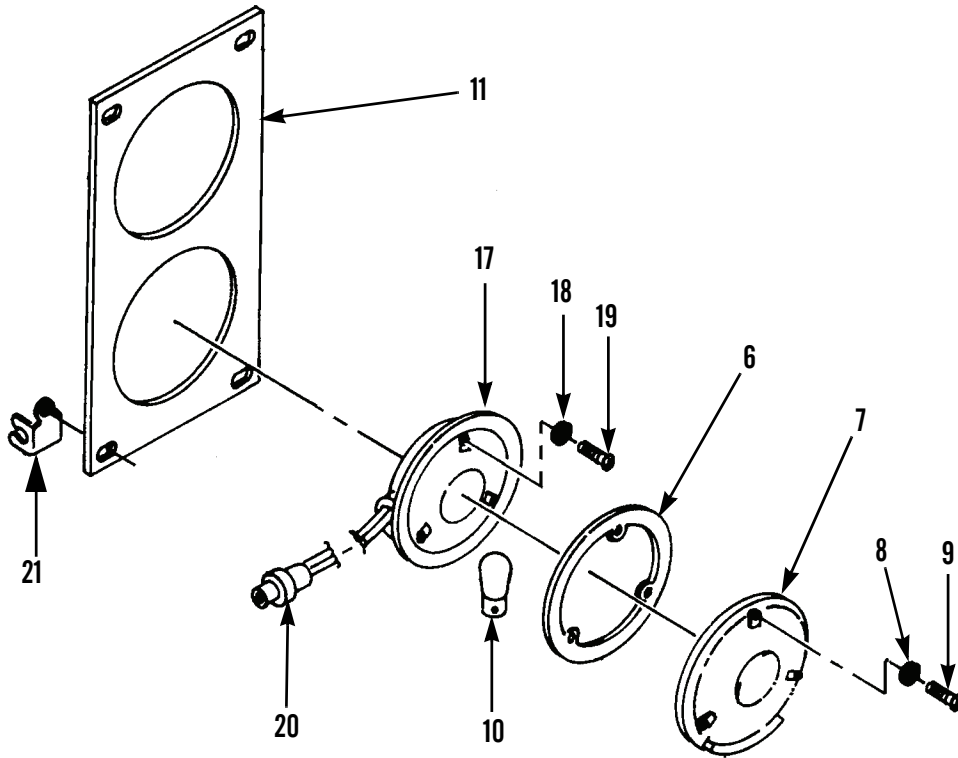
Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION**Mounting**

1. Install bracket (11), two washers (22), and bolts (23).
2. Install retaining straps (21 and 16), nut (26), washer (25), and bolt (24) on bracket (11).

Rear Turn Signal Light


1. Connect connector (20) to wiring harness and attach to retaining strap (21).
2. Install housing (17), three new lockwashers (18), and screws (19).
3. Install lamp (10) by pushing in and turning to right.
4. Install new amber lens (7) and gasket (6) assembly if discarded, three new lockwashers (8) and new tapping screws (9).



397-2091

INSTALLATION - CONTINUED**Stoplight**

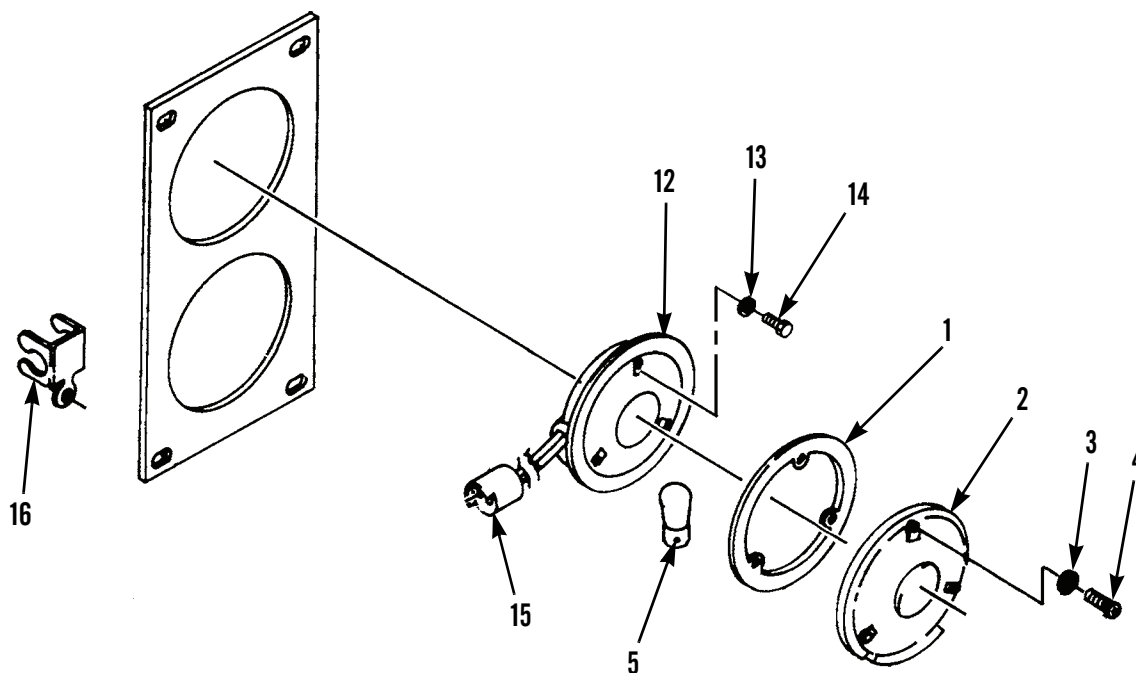1. Connect connector (15) to wiring harness and attach to retaining strap (16).
2. Install housing (12), three new lockwashers (13), and new tapping screws (14).
3. Install lamp (5) by pushing in and turning right.
4. Install new red lens (2) and gasket (1) assembly if discarded, three new lockwashers (3) and new tapping screws (4).



5. Install radiator grille (WP 0054 00).
6. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Lamp Replacement, Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (8)

Engine off (TM 5-3805-261-10)

Packing, preformed (2)

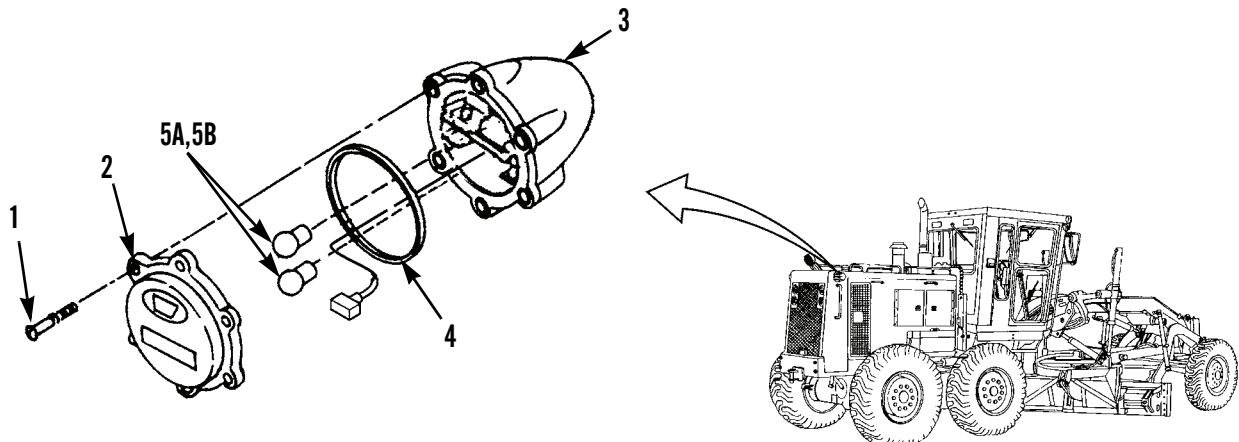
Battery cables disconnected (WP 0125 00)

LAMP REPLACEMENT

NOTE

This procedure covers maintenance of the right stoplight-taillight and mounting. Follow these instructions for the left stoplight-taillight and mounting.


1. Remove six screws (1), lens retainer (2), and preformed packing (4) from housing (3). Discard preformed packing.
2. Remove and discard two lamps (5A) or LED (5B) by pushing in and turning left.
3. Install two new lamps (5A) or LED (5B) by pushing in and turning right.
4. Install new preformed packing (4), lens retainer (2), and six screws (1) to housing (3).



REMOVAL**NOTE**

Tag wire assemblies before disconnecting to aid in installation.

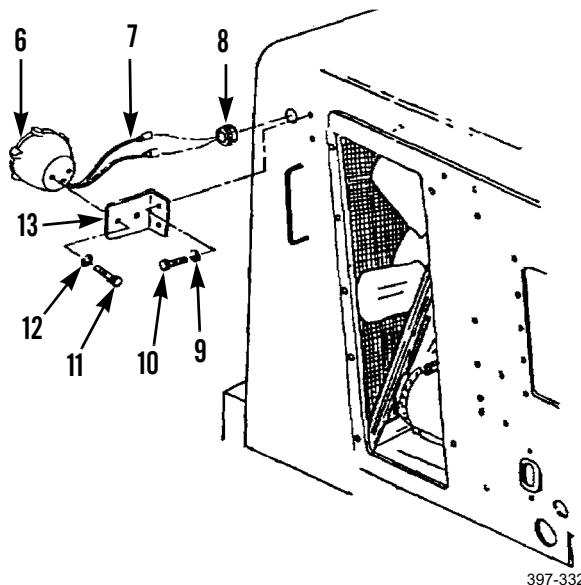
1. Disconnect two wire assemblies (7) from main wiring harness in engine compartment and remove grommet (8) with wire assemblies.
2. Remove grommet (8) from two wire assemblies.
3. Remove two bolts (11), lockwashers (12), and blackout stoplight-taillight (6). Discard lockwashers.
4. Remove two bolts (10), washers (9), and bracket (13).



397-332

DISASSEMBLY

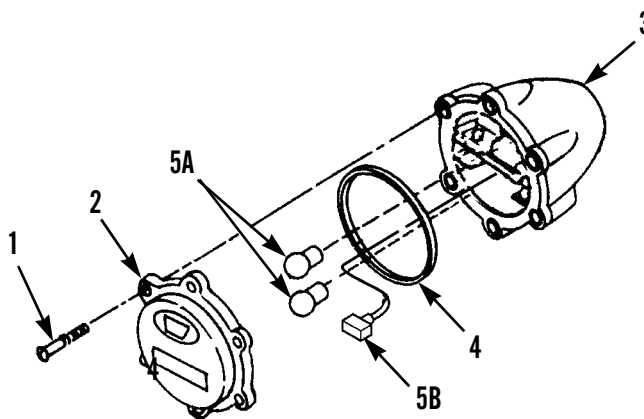
1. Remove six screws (1), lens retainer (2), and preformed packing (4) from housing (3). Discard preformed packing.
2. Remove two lamps (5A) or LED (5B) by pushing in and turning left.



397-334

DISASSEMBLY - CONTINUED

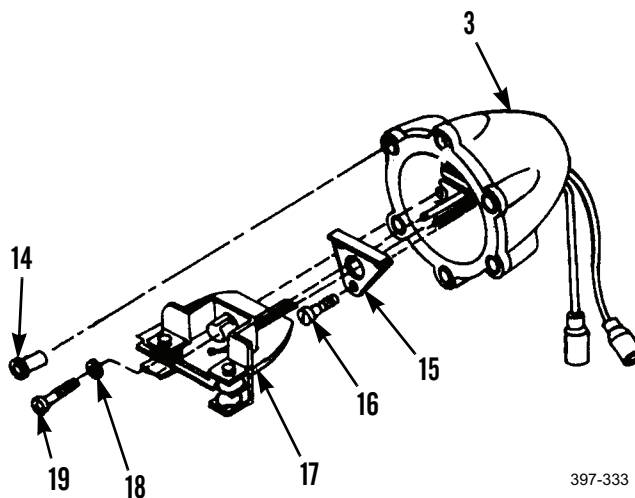3. Remove two screws (19), lockwashers (18), and lamp-holder (17). Discard lockwashers.
4. Remove three screws (16), two plates (15), and six retaining clips (14) from body (3).



397-333

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

ASSEMBLY

1. Install six retaining clips (14), two plates (15), and three screws (16) on body (3).
2. Install lampholder (17), two new lockwashers (18), and screws (19).
3. Install two lamps (5A) or LED (5B) by pushing in and turning right.
4. Install new preformed packing (4), lens retainer (2), and six screws (1) to housing (3).

INSTALLATION

1. Install bracket (13), two washers (9), and bolts (10).
2. Install blackout stoplight-tailight (6), two new lockwashers (12), and bolts (11).
3. Install grommet (8) on two wire assemblies (7).
4. Install grommet (8) and connect two wire assemblies (7) to main wiring harness in engine compartment.
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Lamp Replacement, Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Lockwasher

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

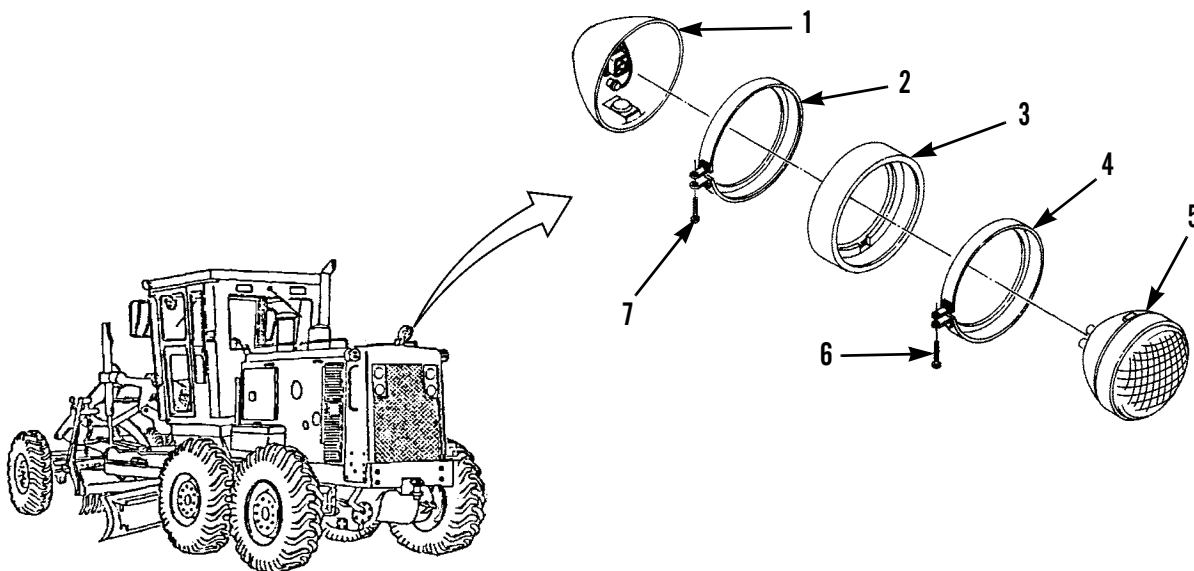
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

LAMP REPLACEMENT

1. Remove screw (6), lens retainer (4), screw (7), lens retainer (2), lamp (5), and molding (3) from housing (1). Discard lamp.
2. Install new lamp (5), molding (3), lens retainer (2), screw (7), lens retainer (4), and screw (6).




REAR WORK LIGHT MAINTENANCE - CONTINUED

0110 00

REMOVAL

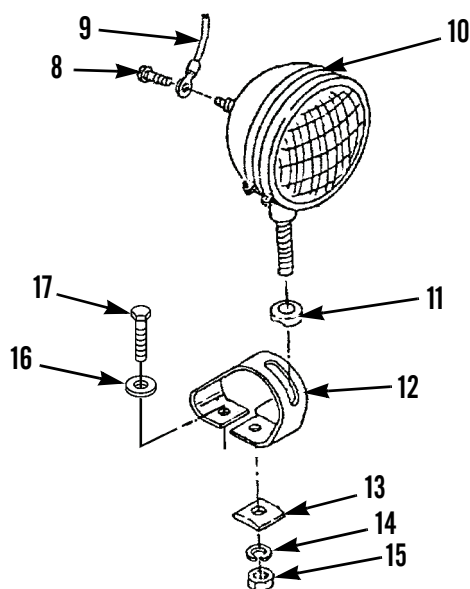
1. Remove screw (8) and disconnect wire assembly (9) from work light (10).
2. Remove nut (15), lockwasher (14), spacer (13), work light (10), and spacer (11). Discard lockwasher.
3. Remove two bolts (17), washers (16), and bracket (12).



397-336

DISASSEMBLY

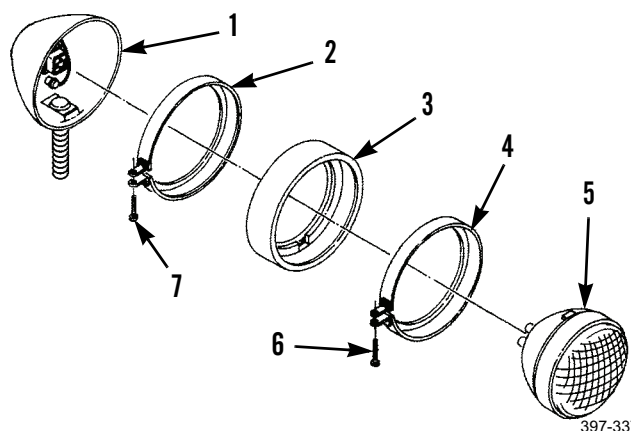Remove screw (6), lens retainer (4), screw (7), lens retainer (2), lamp (5), and molding (3) from housing (1).



397-337

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

ASSEMBLY

Install molding (3), lamp (5), lens retainer (2), screw (7), lens retainer (4), and screw (6) on housing (1).

INSTALLATION

1. Install bracket (12), two washers (16), and bolts (17).
2. Install spacer (11), floodlight (10), spacer (13), new lockwasher (14), and nut (15).
3. Connect wire assembly (9) and install screw (8).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

DOME LIGHT MAINTENANCE (CCE MACHINE)

0111 00

THIS WORK PACKAGE COVERS

Lamp Replacement, Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Screw, tapping (3)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

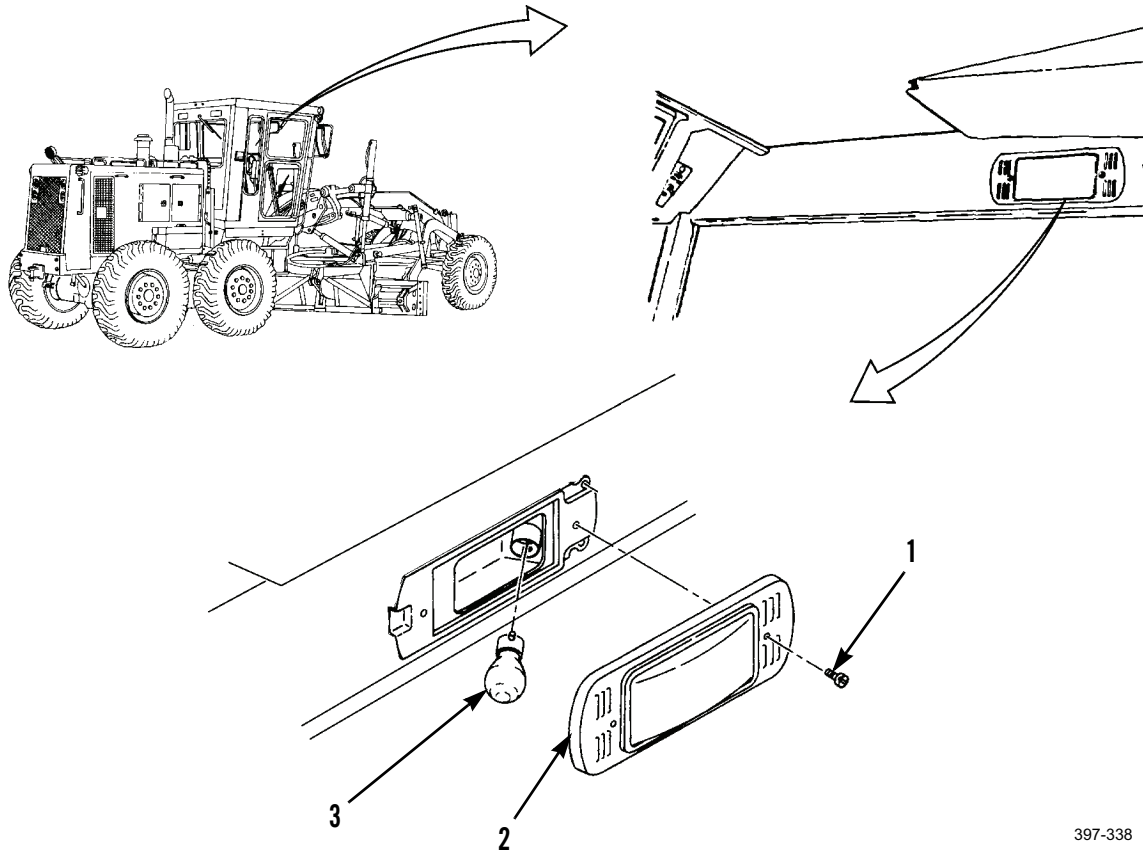
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

LAMP REPLACEMENT

1. Remove two screws (1) and door (2).
2. Remove lamp (3) by pushing in and turning left. Discard lamp.
3. Install new lamp (3) by pushing in and turning right.
4. Install door (2) and two screws (1).



397-338

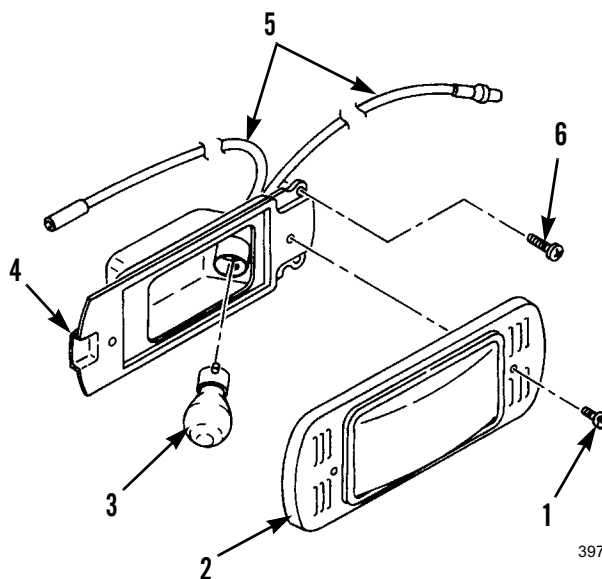
REMOVAL

1. Remove two screws (1) and door (2).
2. Remove lamp (3) by pushing in and turning left.
3. Remove and discard three tapping screws (6).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

4. Pull out housing (4), disconnect two wire assemblies (5) and remove housing.



397-2093

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Connect two wire assemblies (5).
2. Install housing (4) and three new tapping screws (6).
3. Install lamp (3) by pushing in and turning right.
4. Install door (2) and two screws (1).
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

AIR PRESSURE SWITCHES REPLACEMENT

0112 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

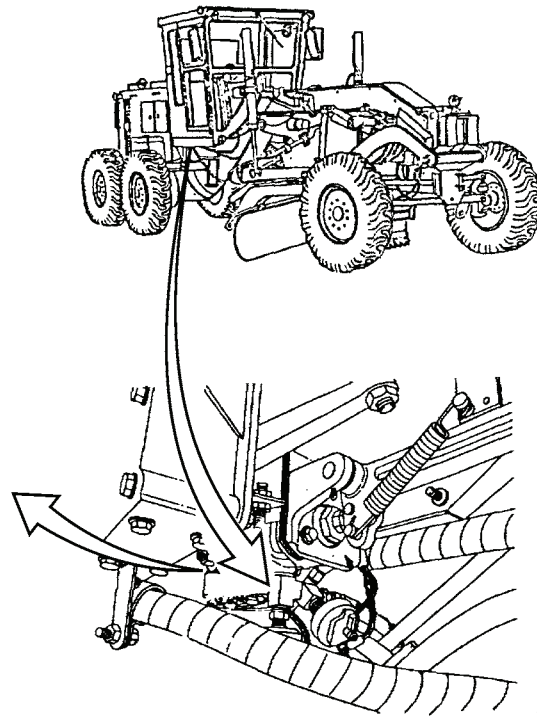
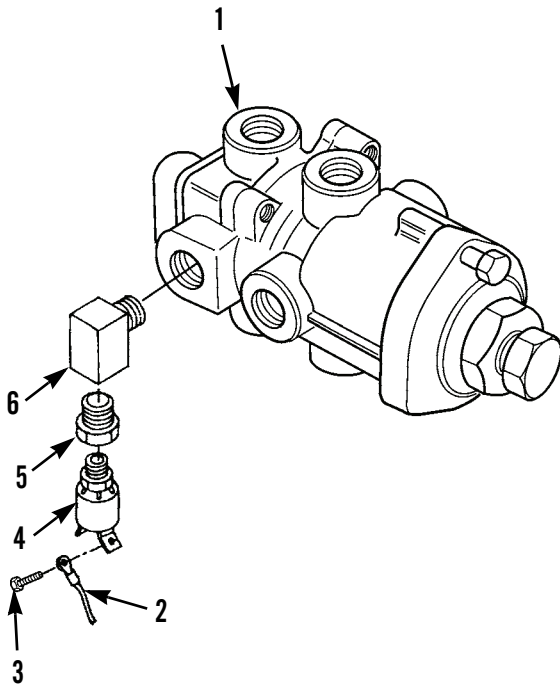
Air pressure relieved (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL**NOTE**

- This procedure covers replacement of one air pressure switch. Follow these instructions for the other air pressure switch.
- Tag wire assemblies before disconnecting to aid in installation.

1. Remove two screws (3) and disconnect two wire assemblies (2) from switch (4) located under right side of cab.
2. Remove switch (4), bushing (5), and elbow (6) from brake control valve (1).



397-344

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install elbow (6), bushing (5), and switch (4) on brake control valve (1).
2. Connect two wire assemblies (2) and install two screws (3) on switch (4).
3. Connect battery cables (WP 0125 00).
4. Start engine. Check for leaks. Stop engine.

END OF WORK PACKAGE

ENGINE OIL PRESSURE AND HOURMETER SWITCHES REPLACEMENT

0113 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Left side engine panel removed (WP 0182 00)

REMOVAL**NOTE**

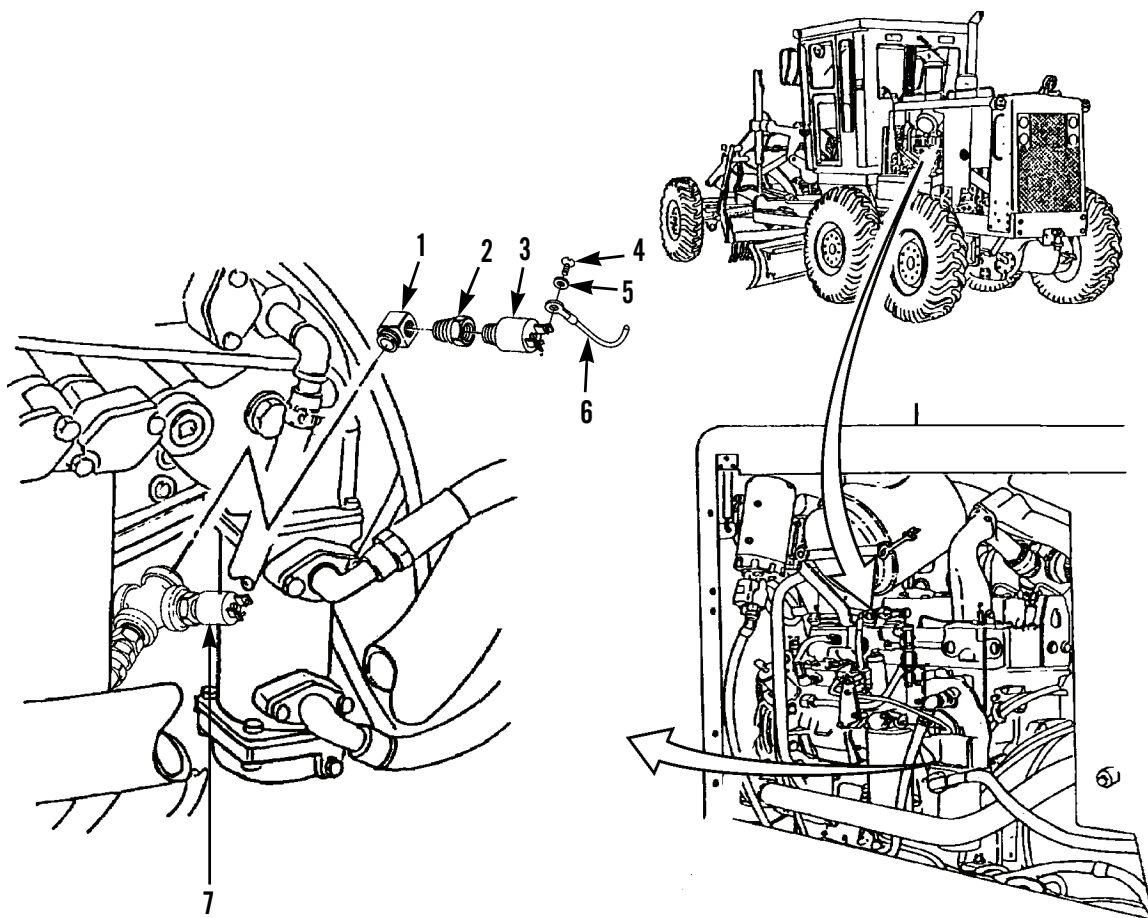
- This procedure covers replacement of the engine oil pressure switch. Follow these instructions for the hourmeter switch (7) except that there is no elbow.
- Tag wire assemblies before disconnecting to aid in installation.

1. Remove two screws (4) and washers (5) and disconnect two wire assemblies (6) from engine oil pressure switch (3) on lower-left-side of engine.

CAUTION

Plug open port to prevent contamination.

2. Remove engine oil pressure switch (3), bushing (2), and elbow (1).



397-345

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install elbow (1), bushing (2), and engine oil pressure switch (3).
2. Connect two wire assemblies (6) and install two washers (5) and screws (4).
3. Connect battery cables (WP 0125 00).
4. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
5. Check for leaks. Stop engine (TM 5-3805-261-10).
6. Install left side engine panel (WP 0182 00).

END OF WORK PACKAGE

COOLANT TEMPERATURE AND ETHER START SWITCHES REPLACEMENT**0114 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Left side engine panel removed (WP 0182 00)

**WARNING**

- DO NOT replace coolant temperature or ether start switches unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant may cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Loosen cap to first stop and let any pressure out of cooling system, then remove cap. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove and skin protection when handling coolants. Failure to do so may cause injury.

REMOVAL**NOTE**

This procedure covers replacement of the coolant temperature switch. Follow these instructions for the ether start switch (6) except that there is only one screw and washer, and one wire assembly connected to it.

1. Slowly loosen and remove radiator cap to relieve cooling system pressure.

NOTE

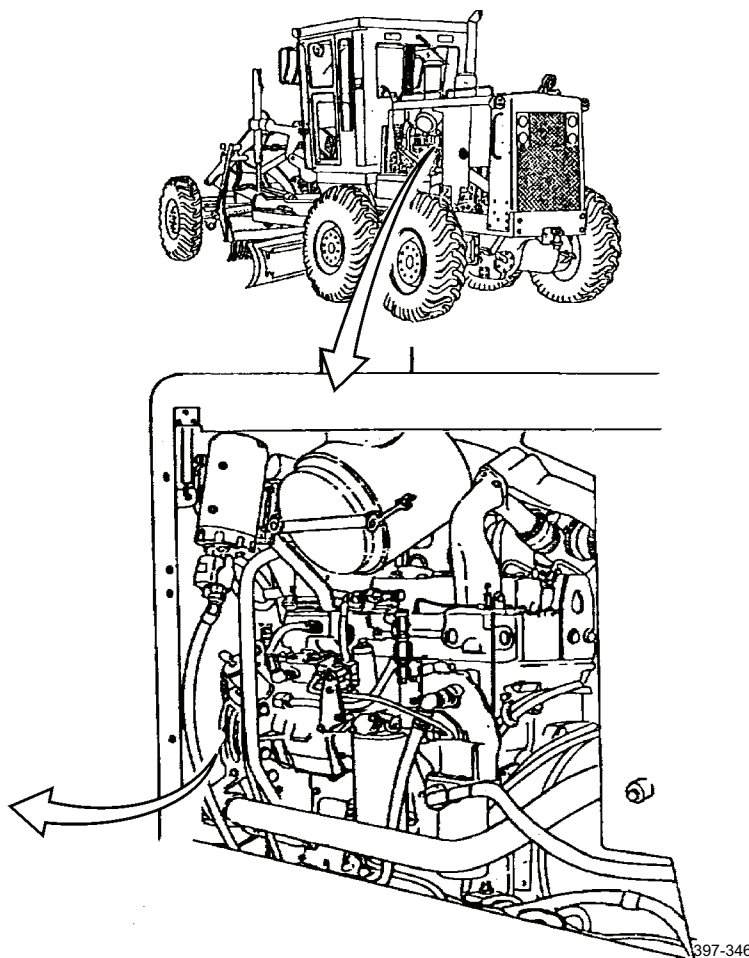
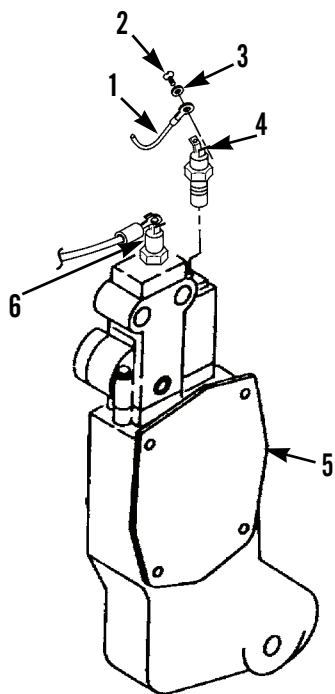
- Tag wire assemblies before disconnecting to aid in installation.
- On some machines, the wire assembly is soldered on to the coolant temperature switch.

2. Remove two screws (2) and lockwashers (3) and disconnect two wire assemblies (1) from coolant temperature switch (4) on top of water pump (5) on left side of engine. Discard lockwashers.

CAUTION

Plug open port to prevent contamination.

3. Remove coolant temperature switch (4).




CLEANING AND INSPECTION


Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION**CAUTION**

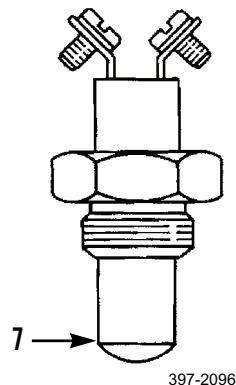- Be careful not to drop or hit the sensing surface (7) of the coolant temperature switch on a rigid surface. Failure to follow this caution may cause the switch to work at an incorrect temperature or not work at all.
- Do not exceed 11 lb-in. (1.2 Nm) when tightening screws of coolant temperature switch. Damage to the switch may result if tightened too much.



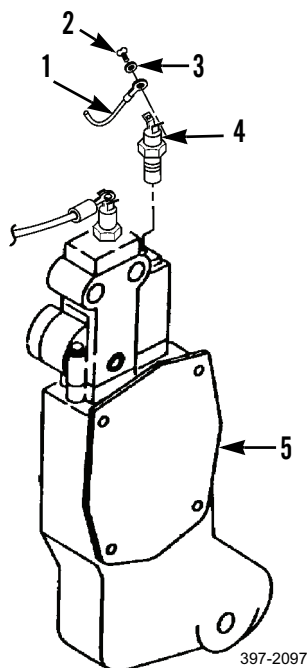1. Install coolant temperature switch (4) on top of water pump (5) and tighten to 10 lb-in. (101 Nm).
2. Connect two wire assemblies (1) to coolant temperature switch (4) and install two new lockwashers (3) and screws (2).



3. Install radiator cap.
4. Connect battery cables (WP 0125 00).
5. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
6. Check for leaks. Stop engine.
7. Install left side engine panel (WP 0182 00).

END OF WORK PACKAGE

FUEL PRESSURE SWITCH REPLACEMENT

0115 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Right side engine panel removed (WP 0182 00)



WARNING



- DO NOT perform fuel system checks, inspections or maintenance while smoking or near fire, flames or sparks. Fuel may ignite, causing injury or death to personnel or damage to machine.
- Operating personnel must wear fuel-resistant gloves when handling fuel. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.

REMOVAL**NOTE**

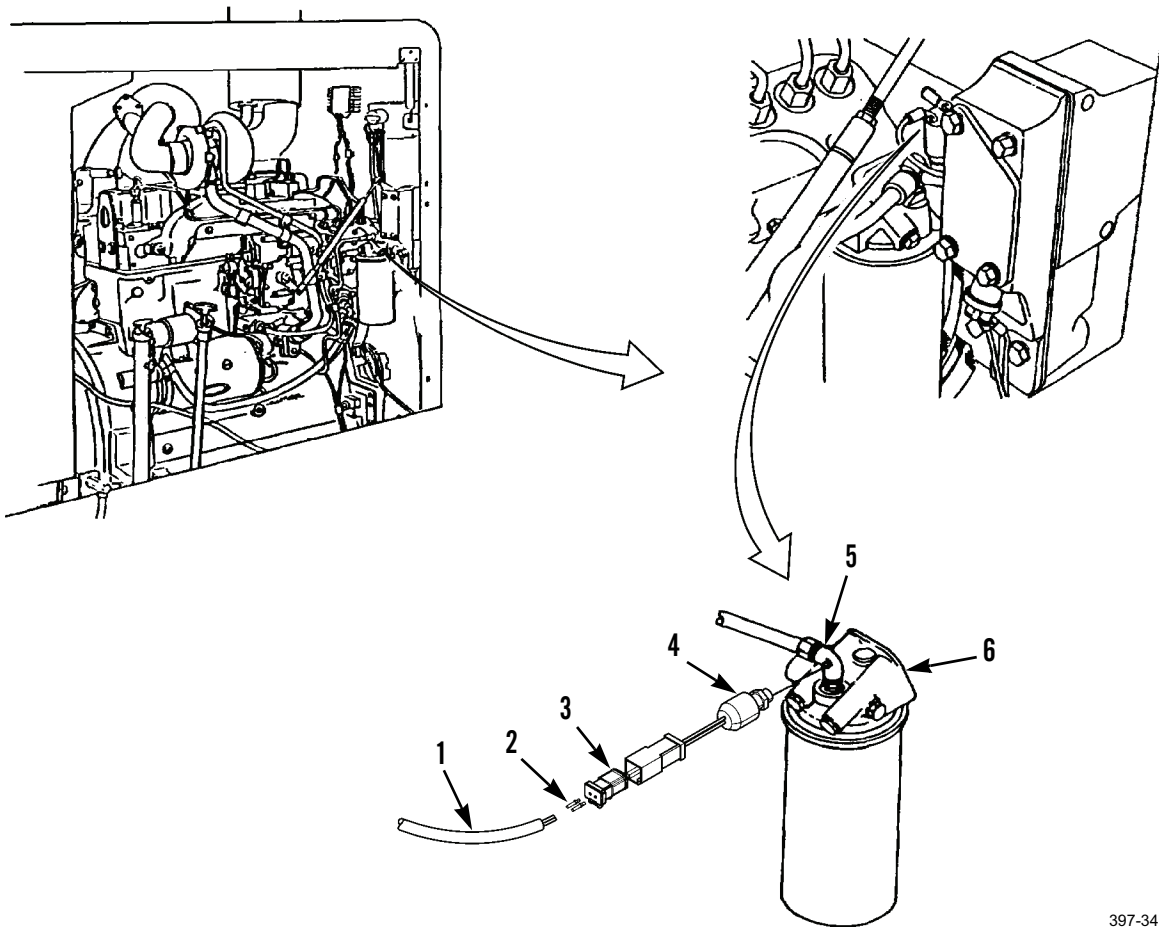
- On models 130GS and 130GNS, the switch is mounted on the fuel injector pump.
- Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect two wire assemblies (1) from two sockets (2).
2. Remove two sockets (2) and plug (3) from switch (4).

CAUTION

Plug open port to prevent contamination.

3. Remove switch (4) from elbow (5) on secondary fuel filter (6).



397-347

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

FUEL PRESSURE SWITCH REPLACEMENT - CONTINUED

0115 00***INSTALLATION***

1. Install switch (4) on elbow (5) on secondary fuel filter (6).
2. Install plug (3) and two sockets (2) on switch (4).
3. Connect two wire assemblies (1) to two sockets (2).
4. Connect battery cables (WP 0125 00).
5. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
6. Check for leaks. Stop engine.
7. Install right side engine panel (WP 0182 00).

END OF WORK PACKAGE

HYDRAULIC OIL TEMPERATURE SWITCH REPLACEMENT

0116 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 00021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)
 Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)
 Parking/emergency brake applied (TM 5-3805-261-10)
 Implements lowered to ground (TM 5-3805-261-10)
 Engine off (TM 5-3805-261-10)
 Battery cables disconnected (WP 0125 00)
 Hydraulic oil drained (WP 0216 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)
 Rag, wiping (Item 35, WP 0349 00)
 Tag, marker (Item 44, WP 0349 00)
 Packing, preformed



WARNING

Hydraulic oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

CAUTION

Wipe area clean around hydraulic oil temperature switch during removal. Plug opening after removing switch. Contamination of hydraulic system could result in premature failure.

NOTE

Use container to catch any hydraulic oil that may drain from system. Dispose of oil in accordance with local policy and ordinances. Ensure all spills are cleaned up.

REMOVAL**NOTE**

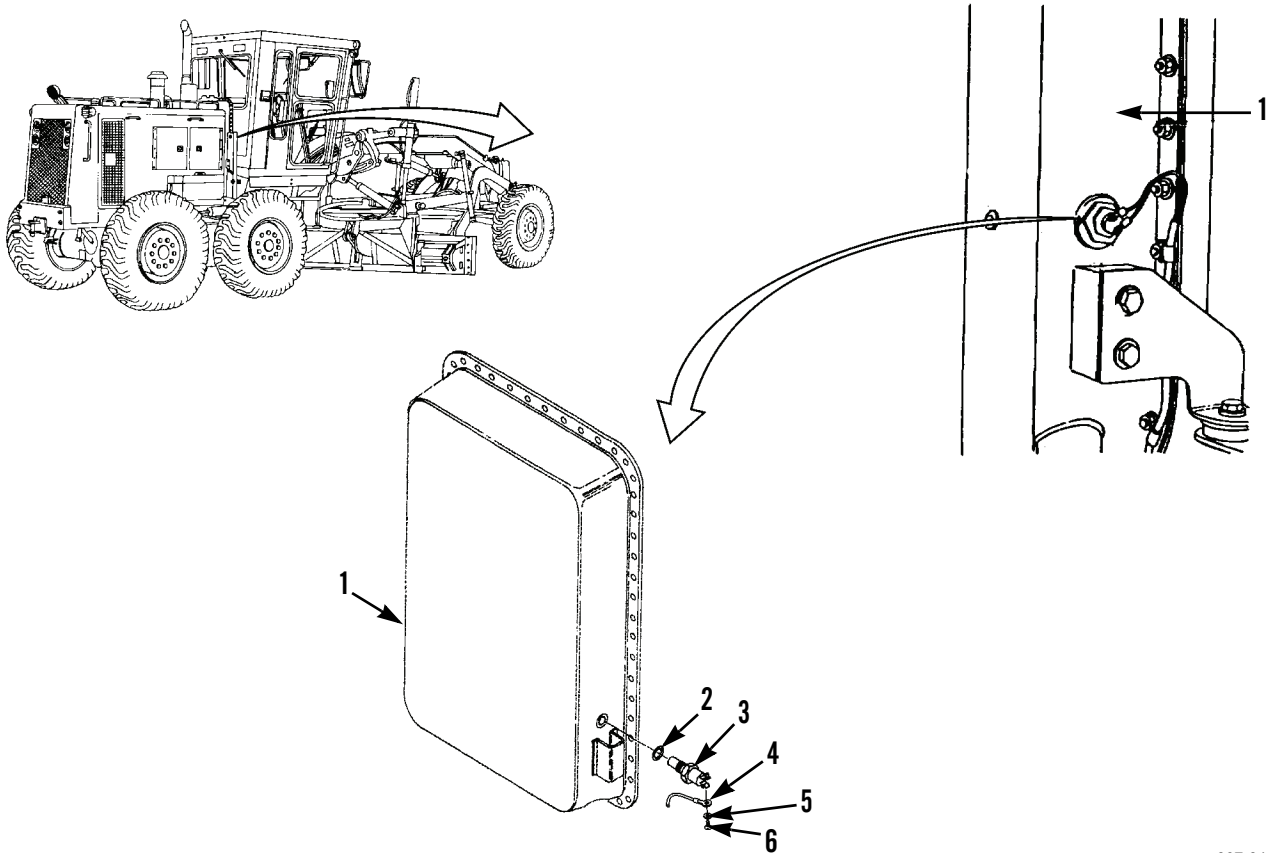
Tag wire assemblies before disconnecting to aid in installation.

1. Remove two screws (6) and washers (5) and disconnect two wire assemblies (4) from switch (3) on right side of hydraulic tank (1).

CAUTION

Plug open port to prevent contamination.

2. Remove switch (3) and preformed packing (2) from hydraulic tank (1). Discard preformed packing.



397-348

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install new preformed packing (2) and switch (3) on hydraulic tank (1).
2. Connect two wire assemblies (4) and install two washers (5) and screws (6).
3. Fill hydraulic tank (WP 0216 00).
4. Connect battery cables (WP 0125 00).
5. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
6. Check for leaks. Stop engine.
7. Check hydraulic oil level. Refill hydraulic tank as required (WP 0216 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Air pressure relieved (TM 5-3805-261-10)

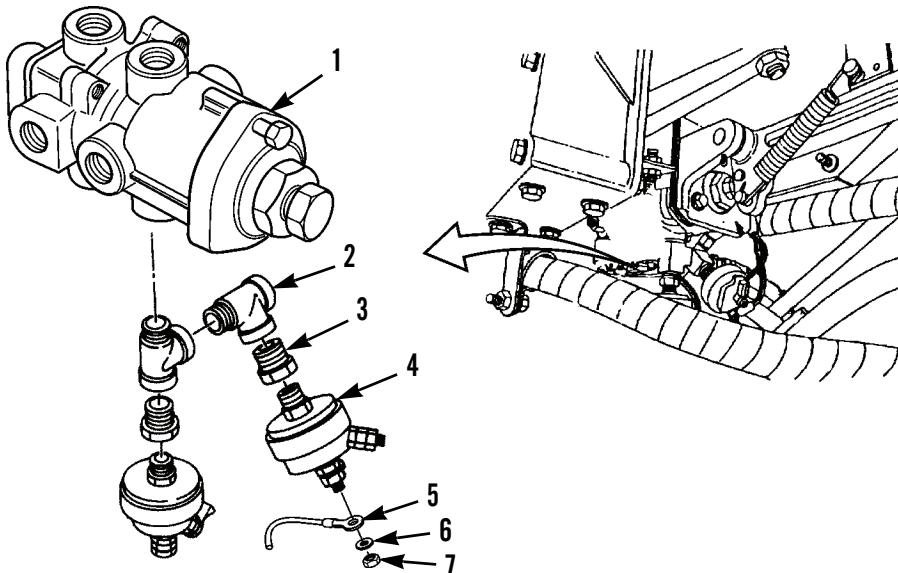
Battery cables disconnected (WP 0125 00)

REMOVAL

NOTE

- This procedure covers replacement of the service stoplight switch. Follow these instructions for the blackout stoplight switch.
- Tag wire assemblies before disconnecting to aid in installation.

1. Remove two nuts (7) and washers (6) and disconnect two wire assemblies (5) from under right side of cab.
2. Remove service stoplight switch (4), bushing (3) and elbow (2) from brake control valve (1).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

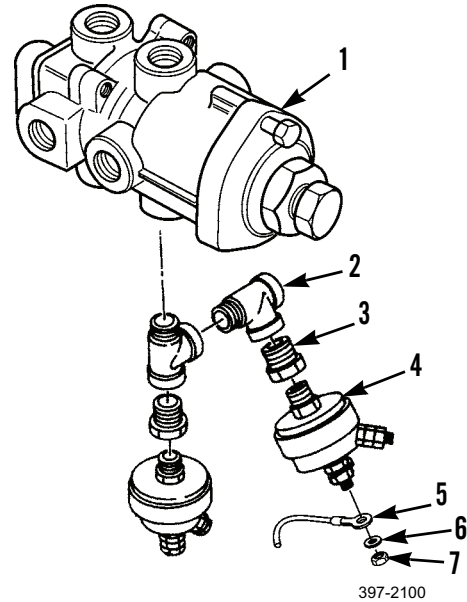1. Install elbow (2), bushing (3), and service stoplight switch (4) to brake control valve (1).
2. Connect two wire assemblies (5) and install two washers (6) and nuts (7).



3. Connect battery cables (WP 0125 00).
4. Start engine (TM 5-3805-261-10).
5. Check for leaks. Stop engine.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

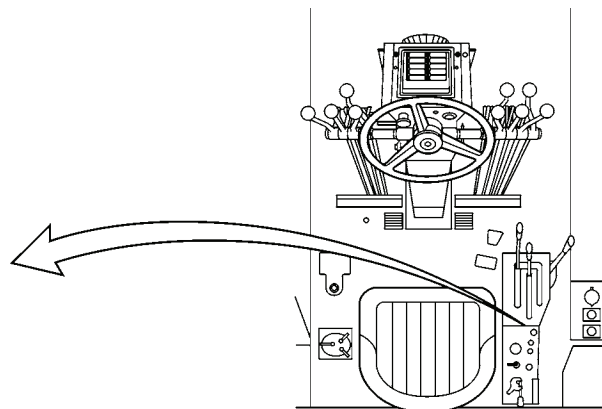
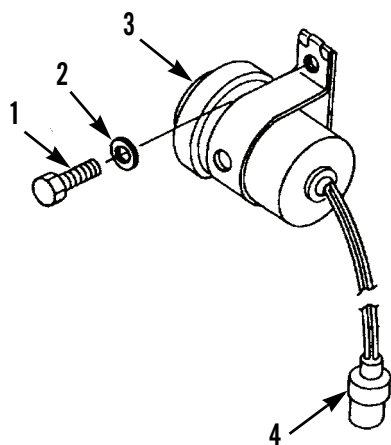
Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Left and right side plates removed from operator panel console (WP 0193 00)

REMOVAL

1. Disconnect wiring harness (4) from plug inside operator panel console.
2. Remove bolt (1), washer (2), and alarm (3).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

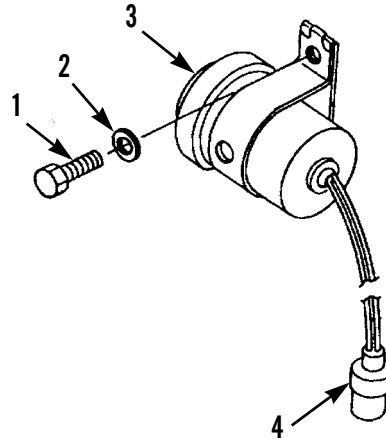1. Install alarm (3), washer (2), and bolt (1).
2. Connect wiring harness (4) to plug inside operator panel console.



397-355

3. Install left and right side plates to operator panel console (WP 0193 00).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

HORN REPLACEMENT

0119 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

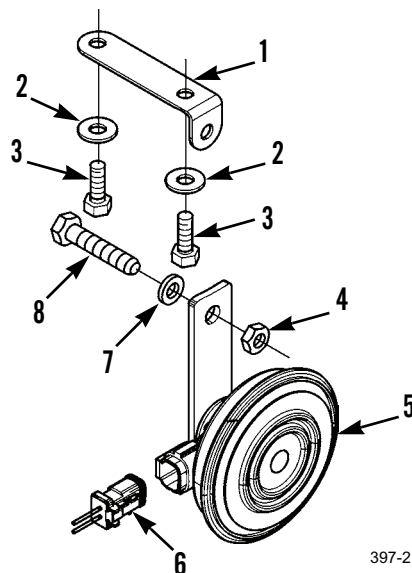
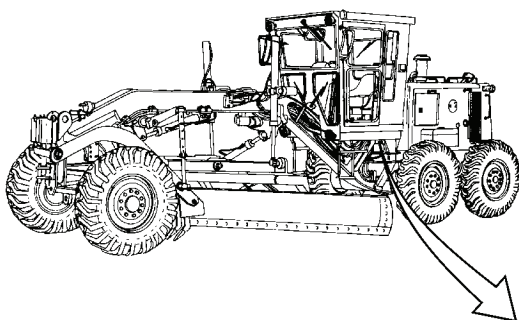
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL

1. Disconnect wire assembly (6) from horn (5) under front-left of cab.
2. Remove nut (4), bolt (8), washer (7), and horn (5) from bracket (1).
3. Remove two bolts (3), washers (2), and bracket (1).




397-2102

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

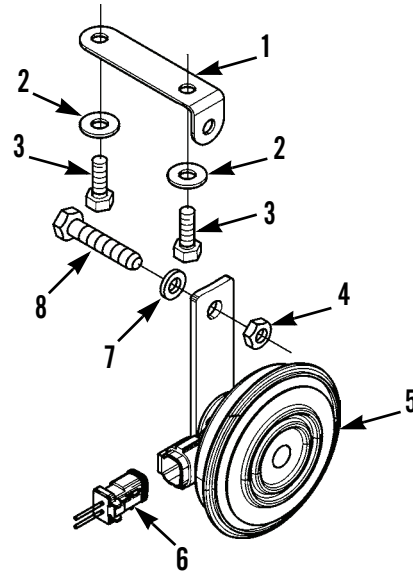1. Install bracket (1), two washers (2), and bolts (3).
2. Install horn (5), washer (7), bolt (8), and nut (4) on bracket (1).
3. Connect wire assembly (6) to horn (5).



397-2102

4. Connect battery cables (WP 0125 00).
5. Check horn for proper operation.

END OF WORK PACKAGE

HORN BUTTON ASSEMBLY AND MOUNTING REPLACEMENT

0120 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Gasket

Screw, tapping (3)

Seal

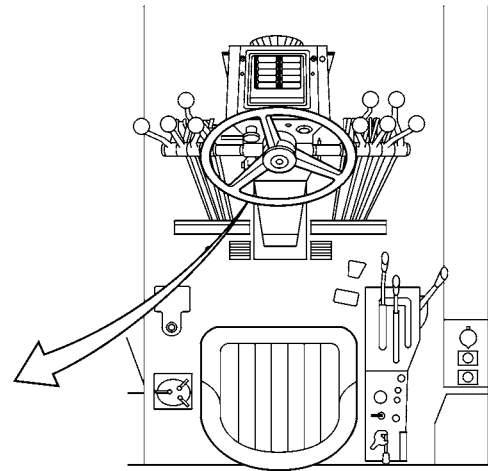
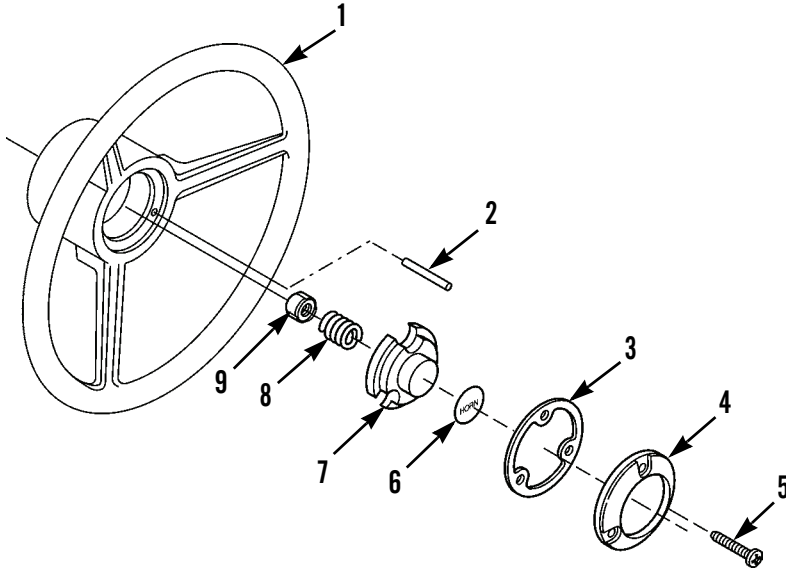
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

HORN BUTTON ASSEMBLY AND MOUNTING REPLACEMENT - CONTINUED**0120 00****REMOVAL**


1. Remove three tapping screws (5), plate base (4), and gasket (3) from steering wheel (1). Discard tapping screws and gasket.
2. Remove ID marker (6), button cover (7), and spring (8).
3. Remove three pins (2) from steering wheel (1).
4. Remove nut (9).
5. Use steering wheel puller to remove steering wheel (1).



397-357

REMOVAL - CONTINUED

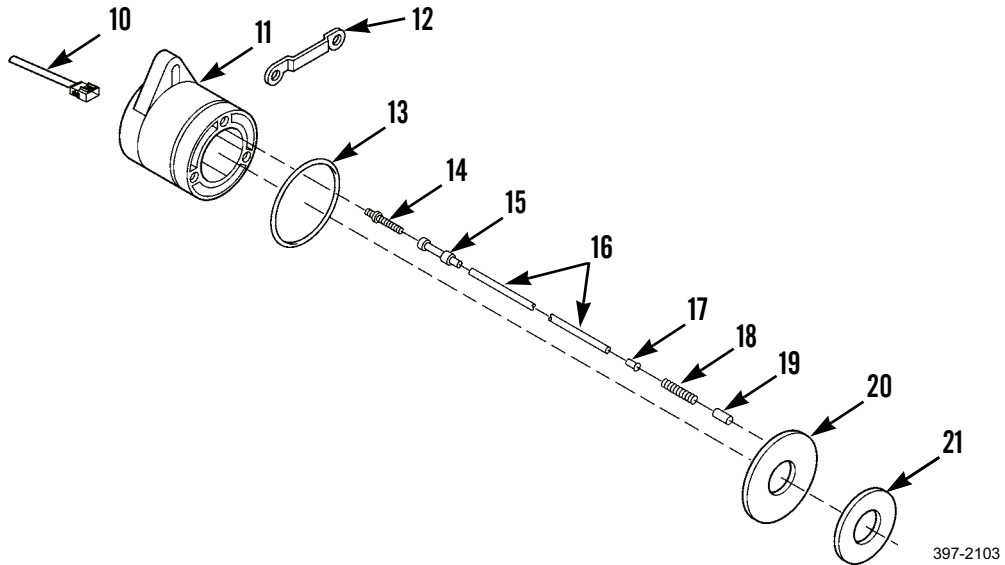6. Remove bushing (21), ring (20), four brushes (19), and springs (18).
7. Disconnect wire harness (10) and remove pin (14), connector body (15), electrical lead (16), and contact (17).
8. Remove seal (13), strap (12), and retainer (11). Discard seal.

**CLEANING AND INSPECTION**

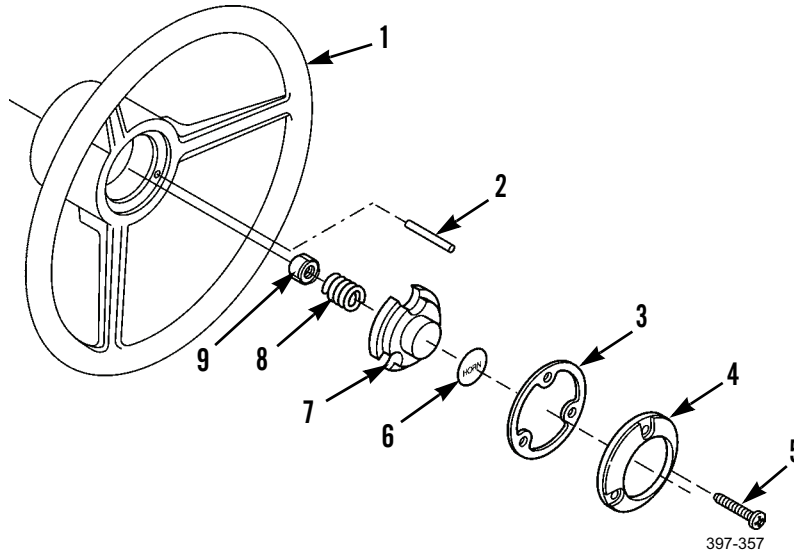
Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install retainer (11), strap (12), and new seal (13).
2. Install contact (17), electrical lead (16), connector body (15), and pin (14), and connect wire harness (10).
3. Install four springs (18), brushes (19), ring (12), and bushing (21).

INSTALLATION - CONTINUED

4. Install steering wheel (1).
5. Install nut (9) and torque to 40 to 48 lb-ft (54 to 65 Nm).
6. Install three pins (2).
7. Install spring (8), button cover (7), and ID marker (6).
8. Install new gasket (3), plate base (4), and three new tapping screws (5) to steering wheel (1).



9. Connect battery cables (WP 0125 00).
10. Check operation of horn and steering.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Locknut (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

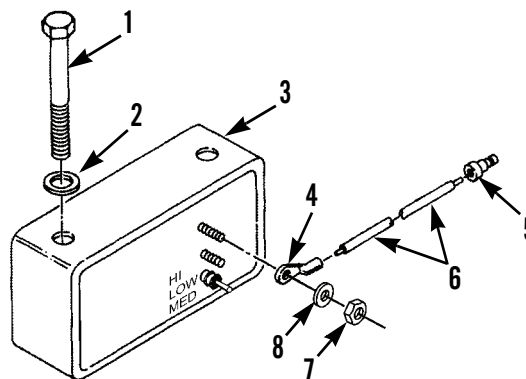
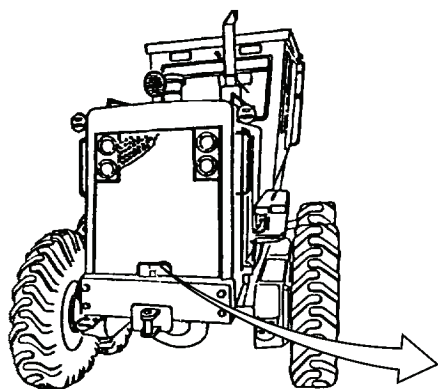
Grille removed (WP 0054 00)

REMOVAL

NOTE

Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect two wire assemblies (6) from connectors of wiring harness on radiator.
2. Remove two locknuts (7), washers (8), and two wire assemblies (6) from alarm (3). Discard locknuts.
3. Inspect two lug terminals (4), wires (6), quick-disconnect terminals (5), and discard any parts that are damaged or deteriorated.
4. Remove two bolts (1), washers (2), and alarm (3).




397-360

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

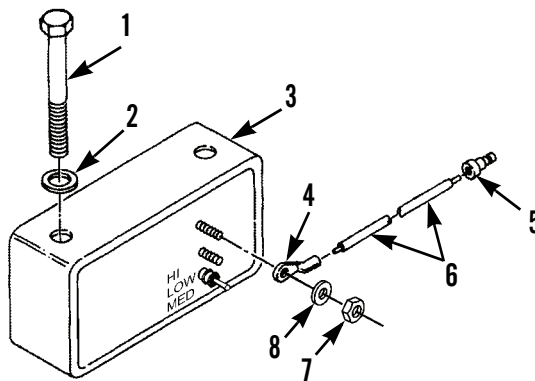1. Position volume switch to high.
2. If discarded, install two new quick-disconnect terminals (5), new wires (6), and new lug terminals (4).
3. Connect two wire assemblies (6) and install two washers (8), and new locknuts (7) on alarm (3).
4. Install two wire assemblies (6) to connectors of wiring harness on radiator.
5. Install alarm (3), two washers (2), and bolts (1).



397-360

6. Install grille (WP 0054 00).
7. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

BACKUP ALARM SWITCH MAINTENANCE

0122 00

THIS WORK PACKAGE COVERSRemoval, Disassembly, Cleaning and Inspection, Assembly, Installation, Adjustment

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0021 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Sealing compound (Item 39, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

Ring, retaining

Engine off (TM 5-3805-261-10)

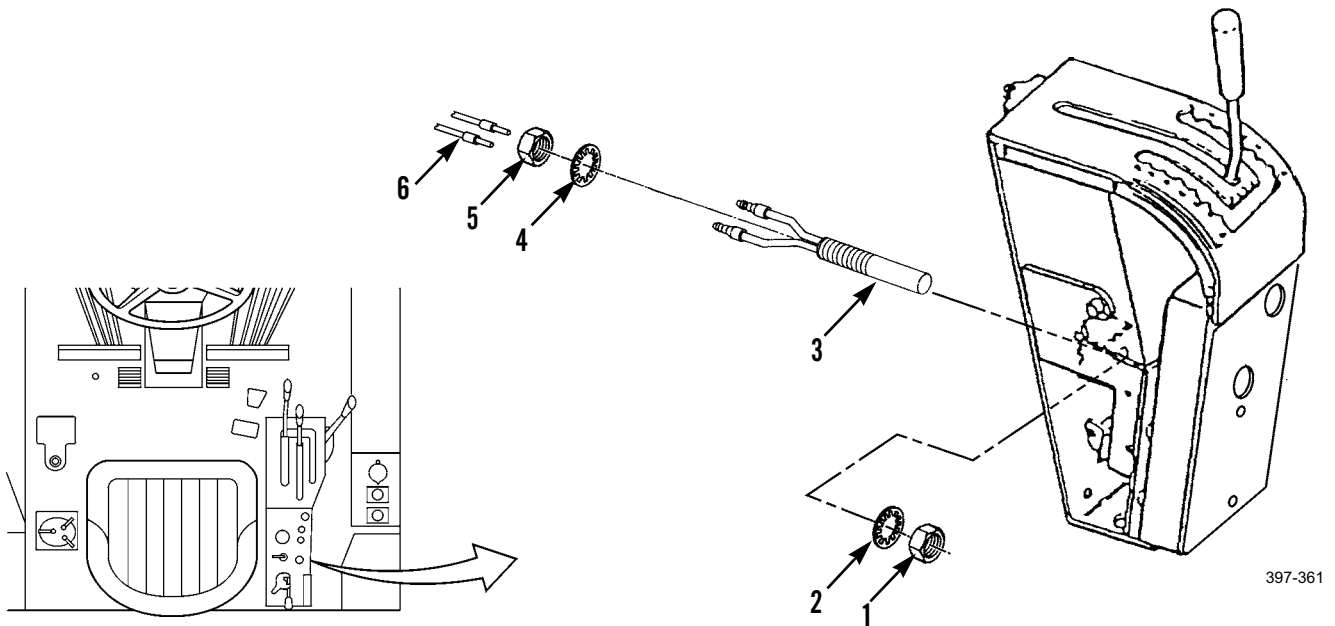
Battery cables disconnected (WP 0125 00)

Left and right side plates removed from operator's panel console (WP 0193 00)

REMOVAL**NOTE**


Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect two wire assemblies (6) from switch (3) inside operator panel console.
2. Remove nut (1), lockwasher (2), and switch (3). Discard lockwasher.
3. Remove nut (5) and lockwasher (4) from switch (3). Discard lockwasher.




REMOVAL - CONTINUED

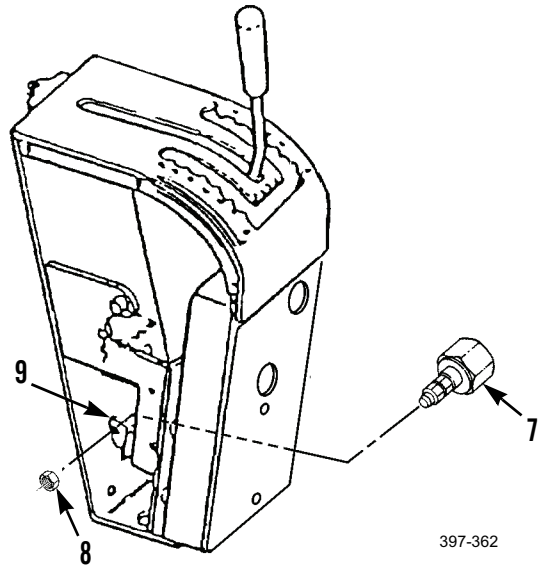4. Remove nut (8) and magnet assembly (7) from weldment (9) inside operator panel console.



DISASSEMBLY

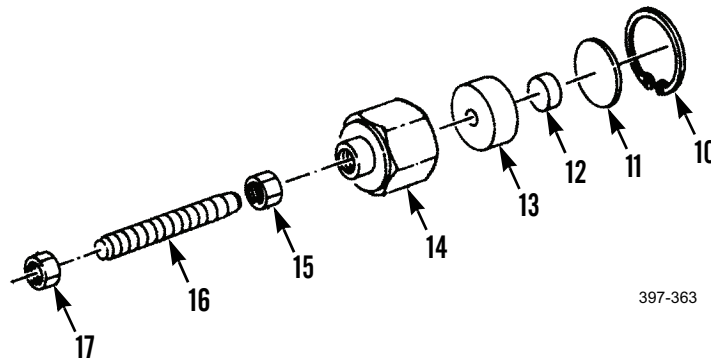1. Loosen nut (15) and remove nut (17), stud (16), and nut from magnet holder (14).
2. Remove retaining ring (10), disk (11), magnet (12), and filter (13) from magnet holder (14). Discard retaining ring.




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.


ASSEMBLY**NOTE**

Side of magnet with part number stamped on it must face disk.

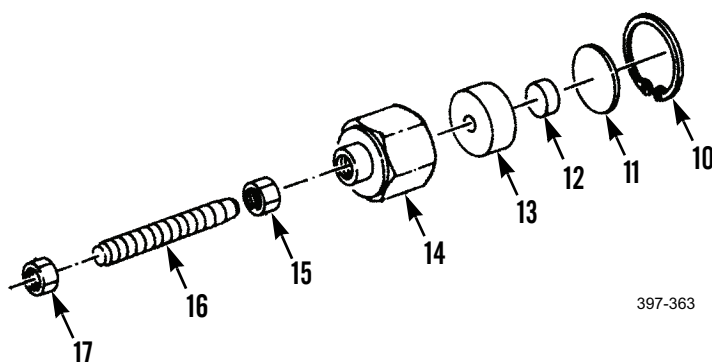1. Install filter (13), magnet (12), disk (11), and new retaining ring (10) in magnet holder (14).
2. Install nut (15) loosely on stud (16) and install stud in magnet holder (14).
3. Apply thread sealant to threads of stud (16) and tighten nut (15) against magnet holder (14) to 18 lb-ft (24 Nm).
4. Install nut (17) loosely on stud (16).


**INSTALLATION**

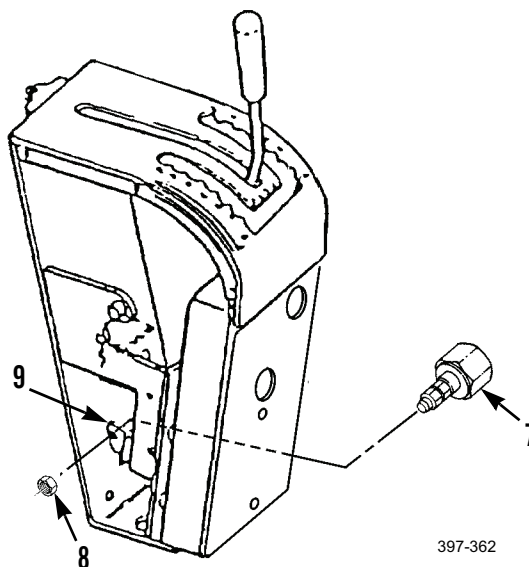1. Install magnet assembly (7) and nut (8) loosely on weldment (9) inside operator panel console.




2. Install new lockwasher (4) and nut (5) on switch (3).
3. Install switch (3), new lockwasher (2), and nut (1).
4. Connect two wire assemblies (6) to switch (3).

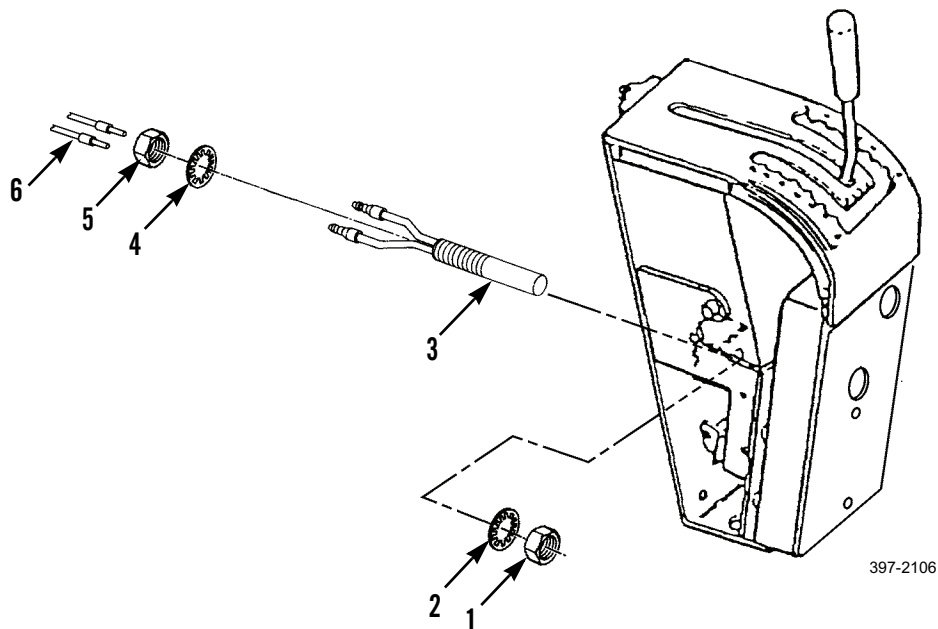INSTALLATION - CONTINUED



ADJUSTMENT

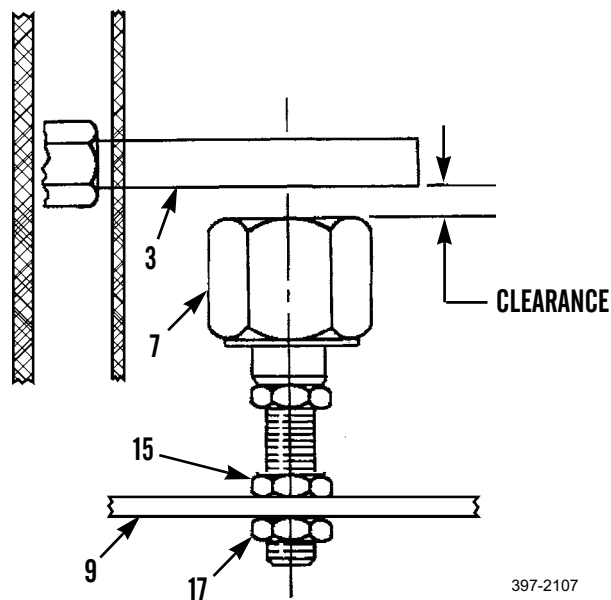1. Position transmission control lever in reverse (TM 5-3805-261-10).
2. Adjust nuts (15 and 17) until a clearance of 0.2 +/- 0.1 in. (5 +/- 2 mm) is made between magnet assembly (7) and switch (3).
3. Tighten nuts (15 and 17) against weldment (9) inside operator panel console.



4. Install left and right side plates on operator panel console (WP 0193 00).
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

BATTERY BOX COVERS MAINTENANCE

0123 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Pin, cotter (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

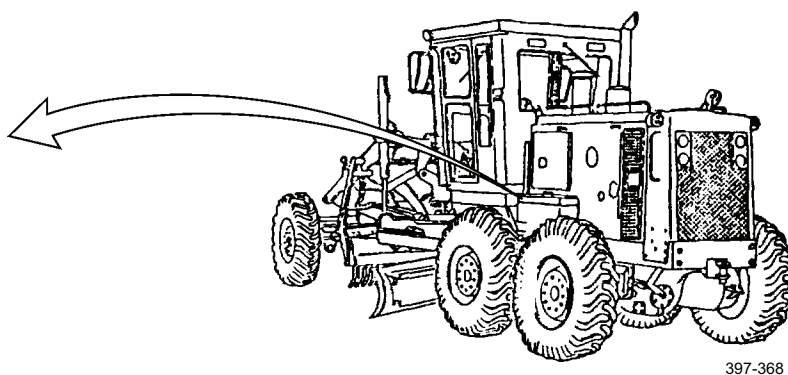
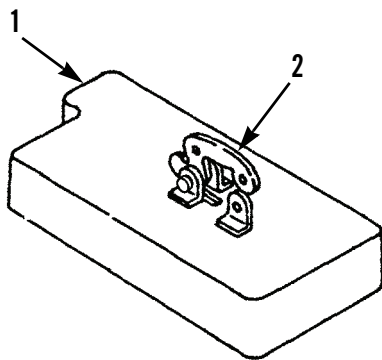
Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL


NOTE

This procedure covers maintenance of the left battery box cover. Follow these instructions for the right battery box cover.

Pull up handle (2) and remove battery box cover (1) from battery box.




397-368

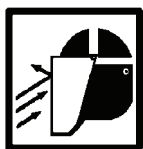DISASSEMBLY**WARNING**

Spring is under tension and can act as a projectile when released. Use caution when removing spring. Failure to follow this warning may result in severe eye injury.

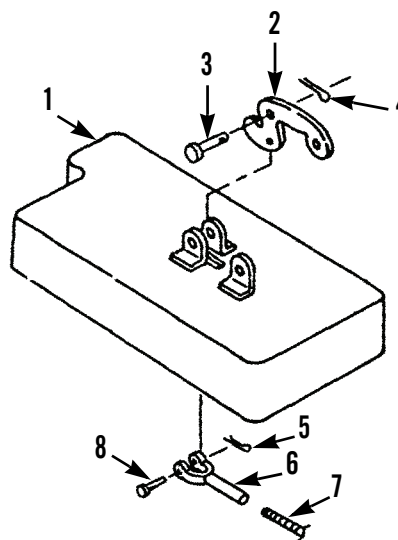1. Remove cotter pin (5), pin (8), rod (6), and spring (7) from handle (2). Discard cotter pin.
2. Remove cotter pin (4), pin (3), and handle (2) from battery box cover (1). Discard cotter pin.



397-370

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

ASSEMBLY

1. Install handle (2), pin (3), and new cotter pin (4) on battery box cover (1).
2. Install spring (7), rod (6), pin (8), and new cotter pin (5) on handle (2).

INSTALLATION

1. Install battery box cover (1) on battery box.
2. Push down handle (2) to latch.

END OF WORK PACKAGE

BATTERY HOLDDOWNS REPLACEMENT

0124 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Locknut (8)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

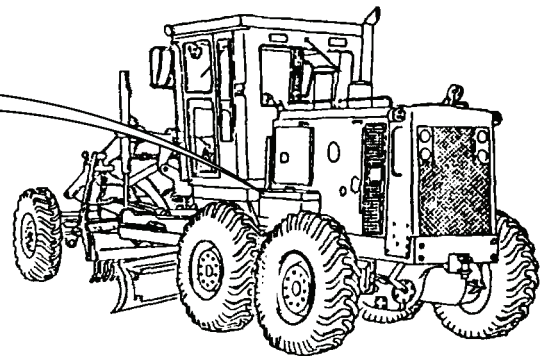
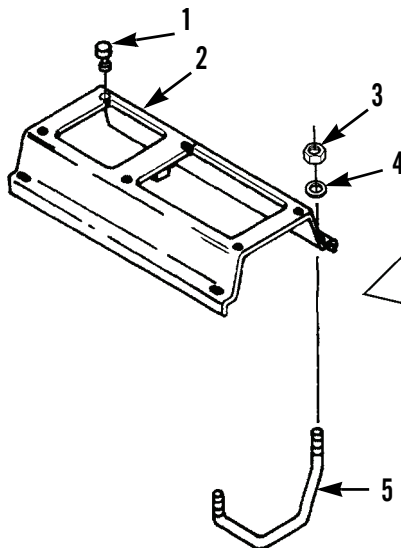
Battery box covers removed (WP 0123 00)

REMOVAL

NOTE

This procedure covers replacement of the left battery holddown. Follow these instructions for the right battery holddown.

1. Remove four locknuts (3), washers (4), holddown (2), and two U-bolts (5) from battery box. Discard locknuts.
2. Remove six bumpers (1) from holddown (2).




397-371

BATTERY HOLDDOWNS REPLACEMENT - CONTINUED**0124 00****CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

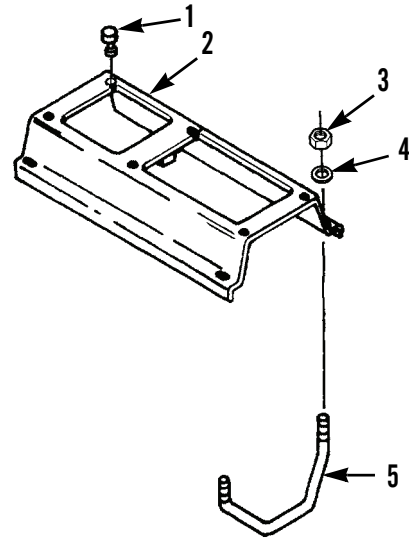1. Install six bumpers (1) on holddown (2).
2. Install two U-bolts (5), holddown (2), four washers (4), and new locknuts (3) on battery box.



397-2109

3. Install battery covers (WP 0123 00).

END OF WORK PACKAGE

BATTERIES AND BATTERY CABLES REPLACEMENT**0125 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

TM 9-6140-200-14

WP 0021 00

WP 0081 00

Personnel Required

Two

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Battery box covers removed (WP 0123 00)

Battery holddowns removed (WP 0124 00)

Left and right side engine panels removed (WP 0182 00)

Left side plate removed from operator panel console (WP 0193 00)


**WARNING**

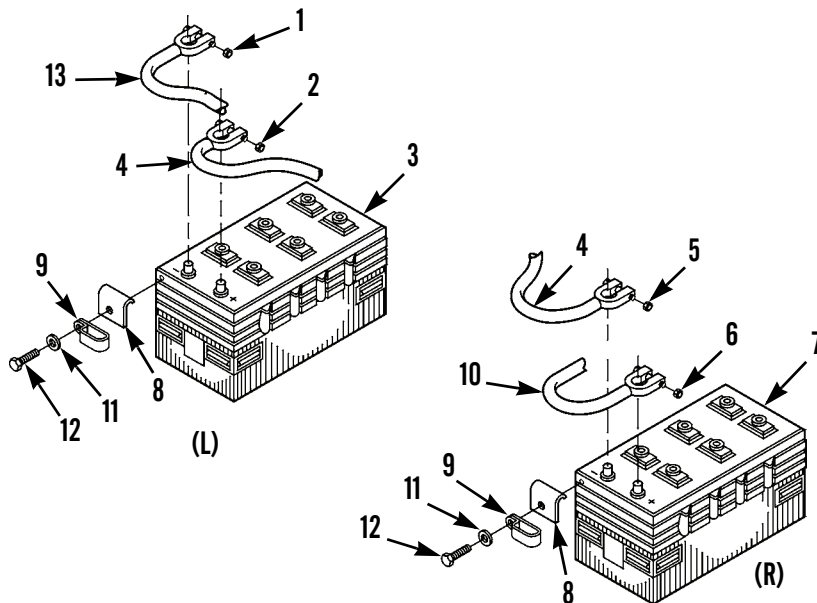- To avoid injury, eye protection and acid-resistant gloves must be worn when working around batteries. Do not smoke, use open flame, make sparks or create other ignition sources around batteries. If a battery is giving off gases, it can explode and cause injury to personnel. Remove all jewelry such as rings, ID tags, watches, and bracelets. If jewelry or a tool contacts a battery terminal, a direct short will result in instant heating, injury to personnel and damage to equipment.
- Sulfuric acid contained in batteries can cause serious burns. If battery corrosion or electrolyte makes contact with skin, eyes or clothing, take immediate action to stop the corrosive burning effects. Failure to follow these procedures may result in injury or death to personnel:
 - (a) Eyes. Flush with cold water for no less than 15 minutes and seek medical attention immediately.
 - (b) Skin. Flush with large amounts of cold water until all acid is removed. Seek medical attention as required.
 - (c) Internal. If corrosion or electrolyte is ingested, drink large amounts of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Seek medical attention immediately.
 - (d) Clothing/Equipment. Wash area with large amounts of cold water. Neutralize acid with baking soda or household ammonia.
- If a defective disconnect switch (WP 0081 00) is suspected, check for voltage between the right side positive terminal and a ground (not the negative post). If voltage is present, use extreme caution and remove the negative battery cable from the left side of the switch and troubleshoot the switch.

REMOVAL**NOTE**

Tag all battery cables and wire assembly before disconnecting to aid in installation.

1. Loosen nut (1) of terminal on battery cable (13) of left side battery (3) negative terminal and disconnect battery cable. Secure battery cable away from battery.
2. Loosen nut (5) of terminal on battery cable (4) of right side battery (7) negative terminal and disconnect battery cable. Secure battery cable away from battery.
3. Loosen nut (6) of terminal on battery cable (10) of right side battery (7) positive terminal and disconnect battery cable. Secure battery cable away from battery.
4. Loosen nut (2) of terminal on battery cable (4) of left side battery (3) positive terminal and disconnect battery cable. Secure battery cable away from battery.
5. Remove two bolts (12), washers (11), clips (9), and guards (8).
6. Remove batteries (3 and 7).



397-372

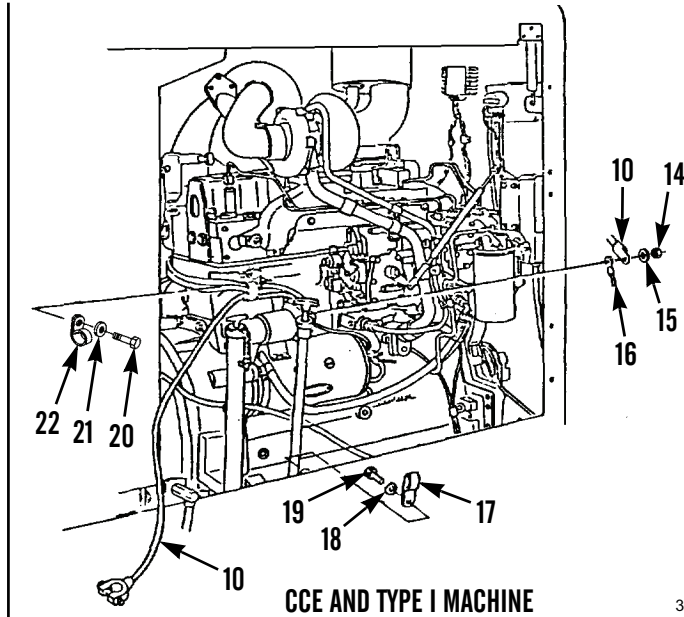
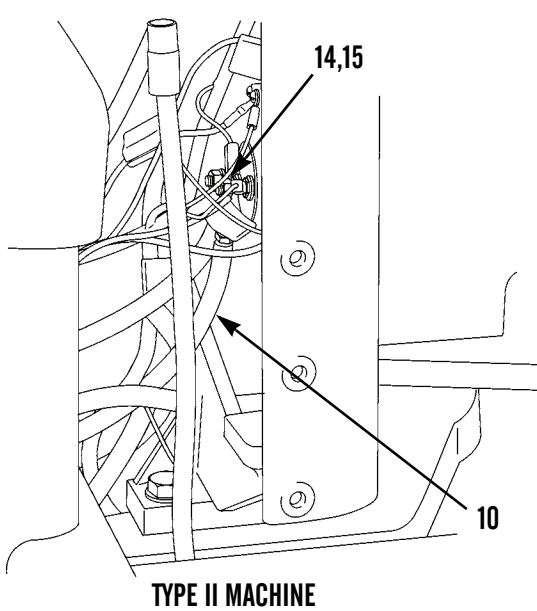
NOTE

For the CCE and Type I machines, the disconnect switch is located on the operator's console. For the Type II machine, the disconnect switch is located on the hood assembly. Instructions apply to both configurations with differences as indicated.

7. For a Type II machine only, go to step 9.

REMOVAL - CONTINUED

8. Remove bolt (19), washer (18), and clip (17) from right side of engine.
9. Remove nut (14), washer (15), and battery cable (10). Disconnect wire assembly (16) from starter solenoid on starting motor assembly. For a Type II machine, go to step 11.
10. Remove bolt (20), washer (21), and clip (22) from right side of frame in engine compartment.




397-373

11. Remove bolt (23), washer (24), and clip (25) from under left side of frame.
12. Remove bolt (26), washer (31), and clip (27) from top of differential case.

NOTE

Clip is mounted in inside of frame below left corner of engine.

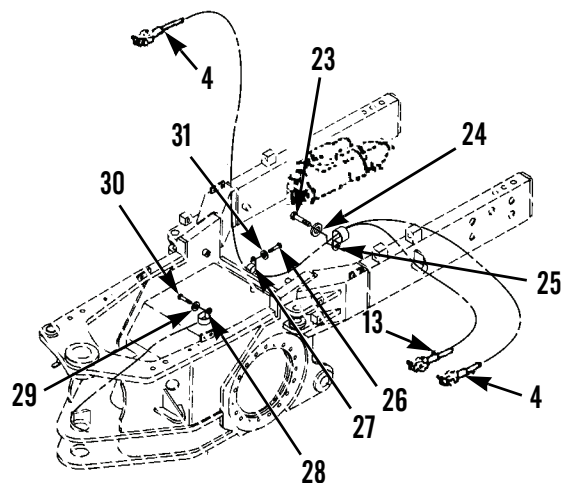
13. Remove bolt (30), washer (29), and clip (28) from left side of articulation area.
14. Remove battery cable (4).




397-374

REMOVAL - CONTINUED

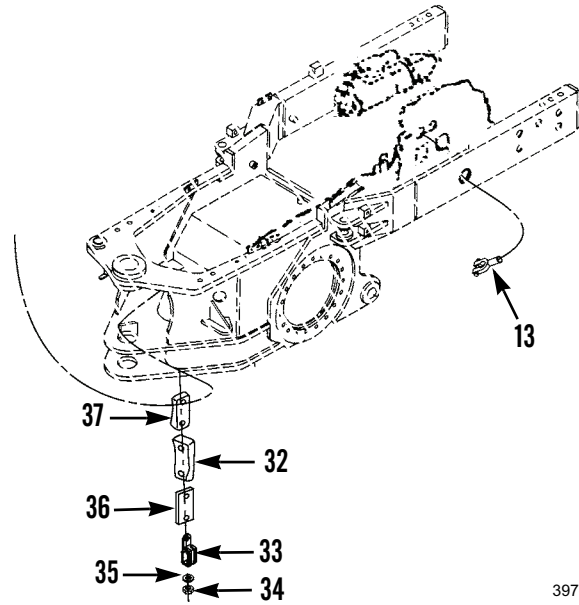15. Remove two nuts (34), washers (35), clip (33), plate (36), and pad (32).
16. Separate battery cable (13) from pad (37).




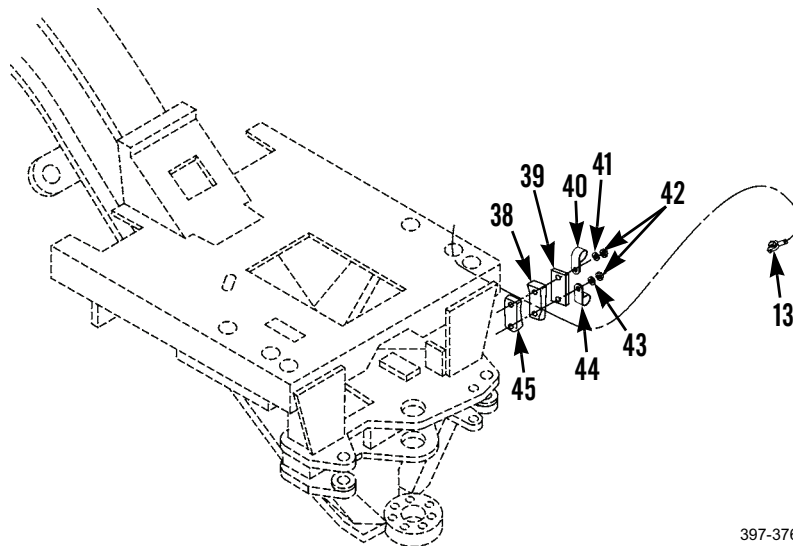17. Remove two nuts (42), washers (41 and 43), clips (40 and 44), plate (39), and pad (38) from left side of articulation area.
18. Separate battery cable (13) from pad (45).



REMOVAL - CONTINUED

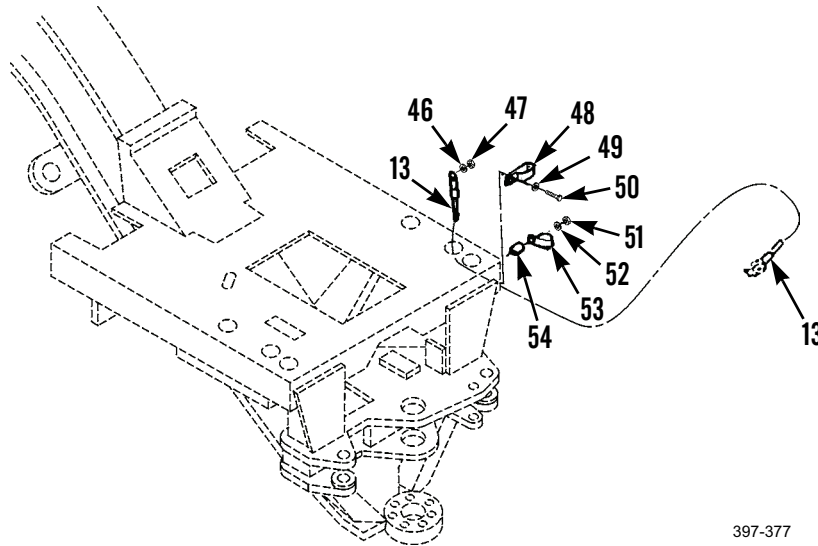19. Remove bolt (50), washer (49), and clip (48).
20. Remove nut (51), washer (52), clip (53), and spacer (54) from under right side of cab.
21. Remove nut (47) and washer (46) and disconnect battery cable (13) from left terminal of disconnect switch inside operator panel console inside cab.
22. Remove battery cable (13) from right and left sides of articulation area.

**CLEANING AND INSPECTION**

1. Clean and inspect batteries and cable assemblies in accordance with TM 9-6140-200-14.
2. Clean and inspect all other parts in accordance with WP 0021 00.

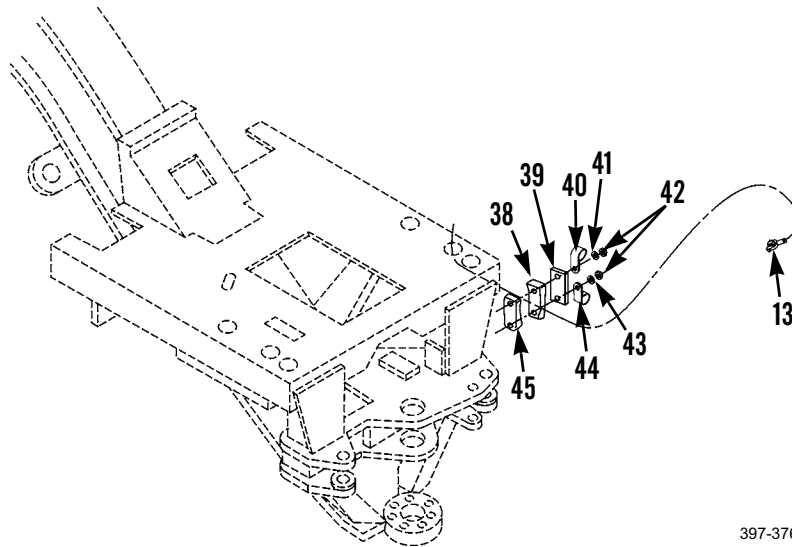
INSTALLATION**NOTE**

Feed battery cable end through floor of cab.


1. Position battery cable (13) on right side of articulation area.
2. Connect battery cable (13) and install washer (46) and nut (47) on left terminal of main disconnect switch inside operator panel console inside cab.
3. Install spacer (54), clip (53), washer (52), and nut (51) under right side of cab.
4. Install clip (48), washer (49), and bolt (50) at right side of articulation area.

INSTALLATION - CONTINUED

5. Position battery cable (13) on pad (45).
6. Install pad (38), plate (39), clips (44 and 40), washers (43 and 41), and two nuts (42).




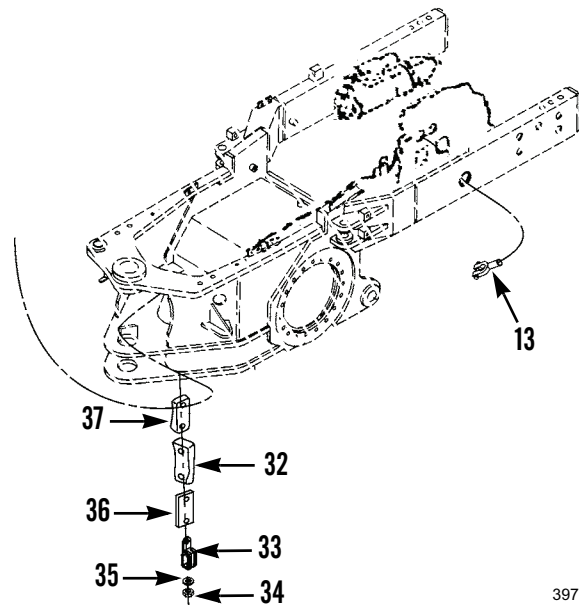7. Position battery cable (13) on pad (37) on left side of articulation area.
8. Install pad (32), plate (36), clip (33), two washers (35), and nuts (34).
9. Feed battery cable (13) end along inside of frame.



INSTALLATION - CONTINUED

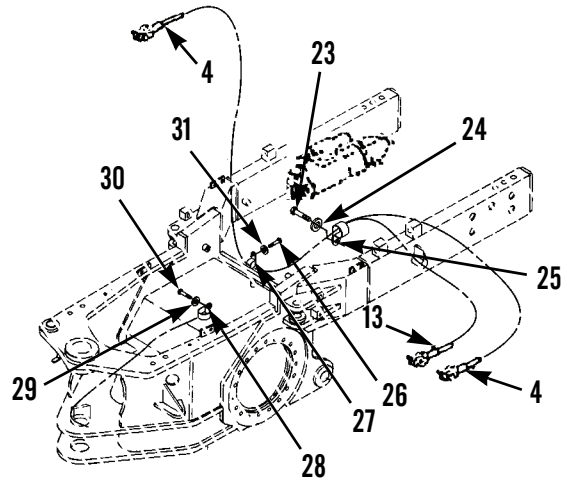10. Position battery cable (4).
11. Install clip (28), washer (29), and bolt (30) to left side of articulation area.
12. Position battery cable (4) on top of differential case.
13. Install clip (27), washer (31), and bolt (26) at top of differential case.





397-374

NOTE

Clip holds battery cable assemblies.

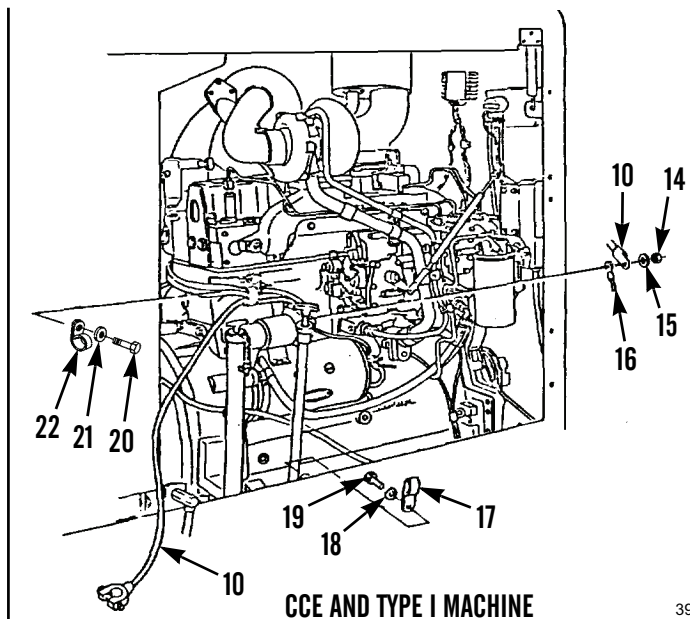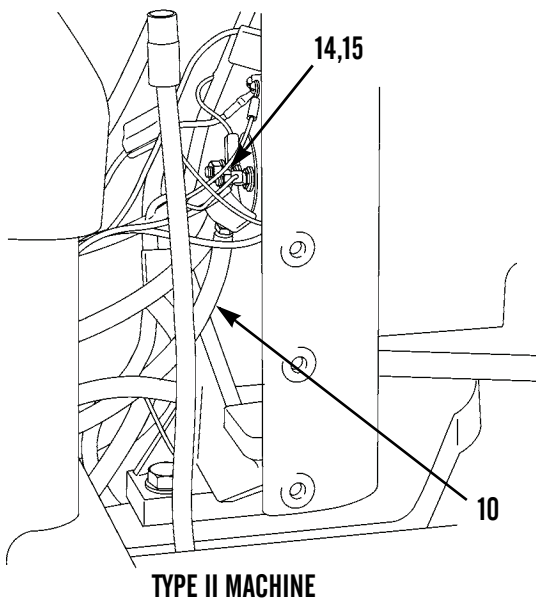
14. Install clip (25), washer (24), and bolt (23) under left side of frame.
 15. For a Type II machine only, go to step 17.
 16. Install clip (22), washer (21), and bolt (20) at right side of frame in engine compartment.
 17. Connect battery cable (10) and wire assembly (16) and install washer (15) and nut (14) on starter solenoid on starting motor assembly. For a Type II machine, go to step 19.
- Install clip (17), washer (18), and bolt (19) on right side of engine.



397-373

INSTALLATION - CONTINUED

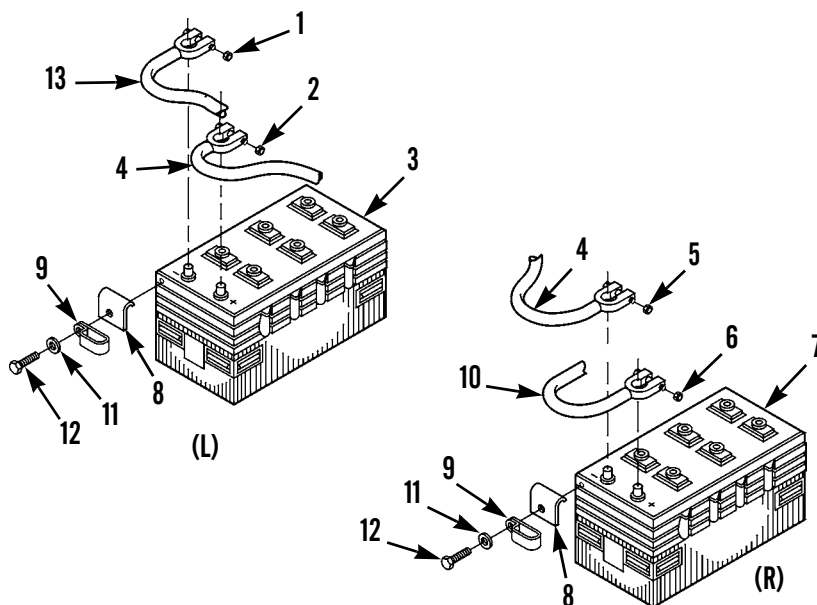18. Install batteries (7 and 3) (TM 9-6140-200-14).
19. Install two guards (8), clips (9), washers (11), and bolts (12) to battery boxes.
20. Install battery cable (4) to left side battery (3) positive terminal and tighten nut (2) of terminal on battery cable.
21. Install battery cable (10) to right side battery (7) positive terminal and tighten nut (6) of terminal on battery cable.
22. Install battery cable (4) to right side battery (7) negative terminal and tighten nut (5) of terminal on battery cable.
23. Install battery cable (13) to left side battery (3) negative terminal and tighten nut (1) of terminal on battery cable.



397-372

24. Install left side plate on operator panel console (WP 0193 00).
25. Install left and right side engine panels (WP 0182 00).
26. Install battery holddowns (WP 0124 00).
27. Install battery box covers (WP 0123 00).

END OF WORK PACKAGE

BATTERY BOXES AND MOUNTING REPLACEMENT

0126 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Lockwasher (4)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Equipment Conditions - Continued

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Battery box covers removed (WP 0123 00)

Battery holddowns removed (WP 0124 00)

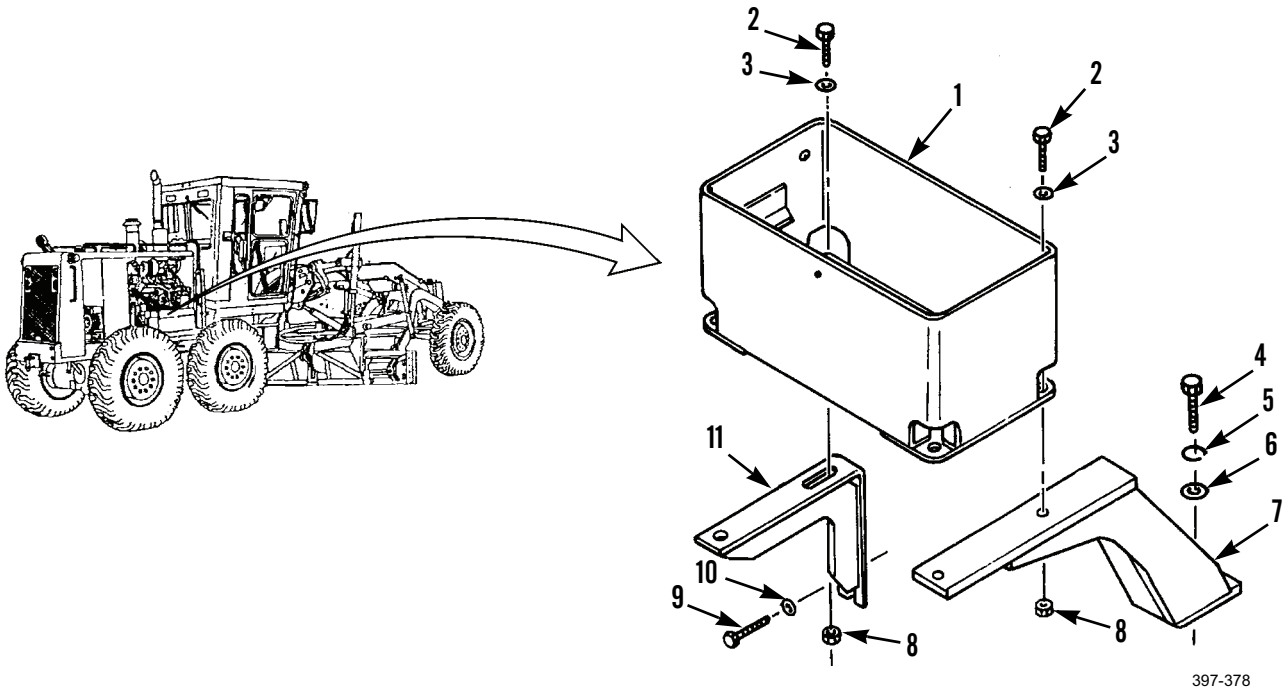
Batteries removed (WP 0125 00)

Left and right side engine panels removed (WP 0182 00)

REMOVAL**NOTE**

This procedure covers replacement of the left battery box and mounting. Follow these instructions for the right battery box and mounting.

1. Remove four bolts (2), washers (3), nuts (8), and battery box (1) from brackets (7 and 11).
2. Remove two bolts (4), lockwashers (5), washers (6), and bracket (7) from frame. Discard lockwashers.
3. Remove two bolts (9), washers (10), and bracket (11) from frame.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

BATTERY BOXES AND MOUNTING REPLACEMENT - CONTINUED

0126 00***INSTALLATION***

1. Install bracket (11), two washers (10), and bolts (9) on frame.
2. Install bracket (7), two washers (6), new lockwashers (5), and bolts (4) on frame.
3. Install battery box (1), four washers (3), bolts (2), and nuts (8) on brackets (11 and 7).
4. Install batteries (WP 0125 00).
5. Install battery holddowns (WP 0124 00).
6. Install battery box covers (WP 0123 00).
7. Install left and right side engine panels (WP 0182 00).

END OF WORK PACKAGE

ALTERNATOR GROUND LEAD REPLACEMENT

0127 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (3)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

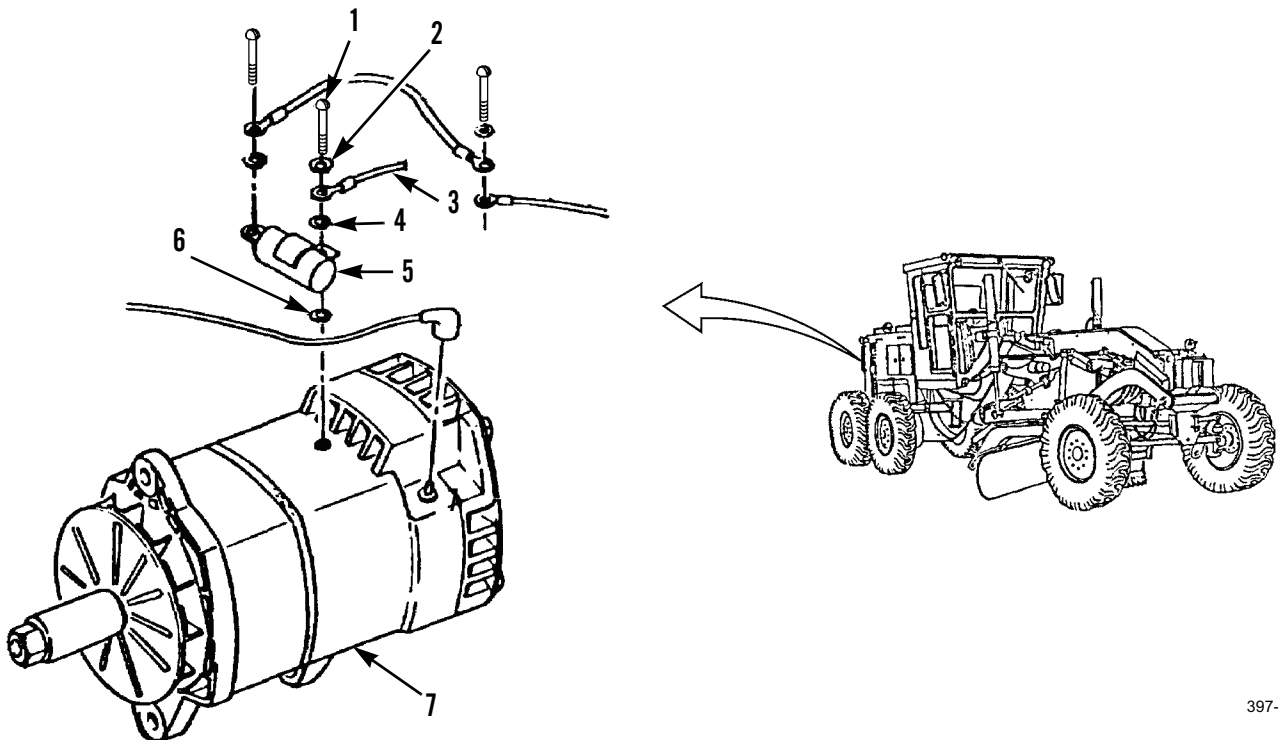
Right side screen door opened (WP 0051 00)

Alternator disconnected as necessary (WP 0066 00)

REMOVAL**NOTE**

Tag alternator ground lead before disconnecting to aid in installation.

1. Remove screw (1) and lockwasher (2) and disconnect alternator ground lead (3) and lockwasher (4) from alternator (7). Discard lockwashers.
2. Disconnect capacitor (5) and remove lockwasher (6). Discard lockwasher.



397-432

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install new lockwasher (6) and connect capacitor (5).
2. Install new lockwasher (4), lead (3), new lockwasher (2), and screw (1) on alternator (7).
3. Connect alternator as necessary (WP 0066 00).
4. Connect battery cables (WP 0125 00).
5. Close right side screen door (WP 0051 00).

END OF WORK PACKAGE

STARTING MOTOR LEAD REPLACEMENT

0128 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Right side engine panel removed (WP 0182 00)

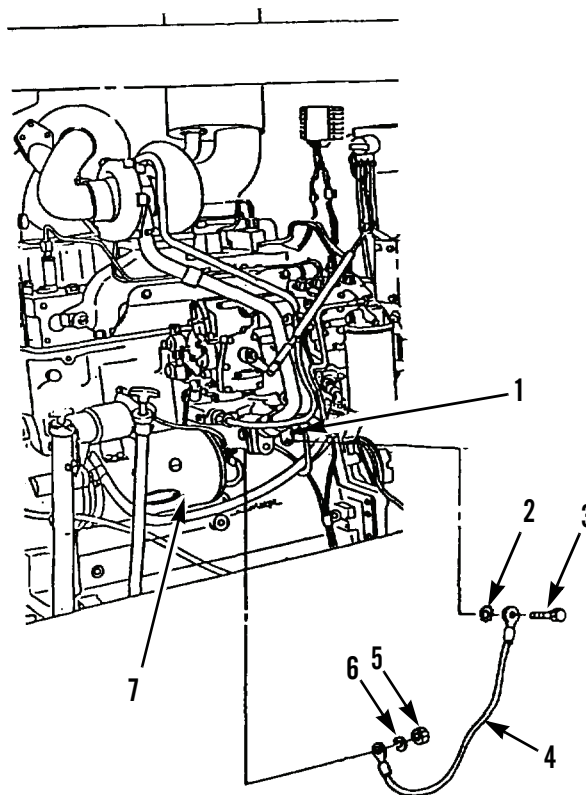
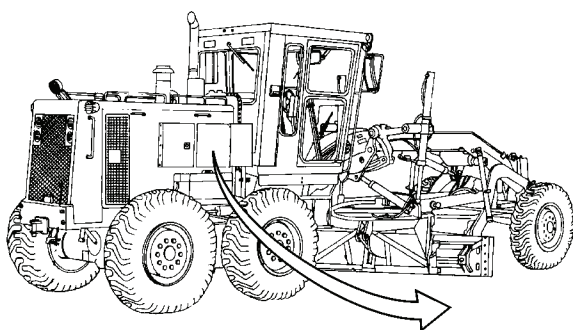
STARTING MOTOR LEAD REPLACEMENT - CONTINUED

0128 00

REMOVAL**NOTE**

Tag starting motor lead before disconnecting to aid in installation.

1. Remove bolt (3), disconnect starting motor lead (4) and remove lockwasher (2) from fuel injection mounting support (1) on right engine block. Discard lockwasher.
2. Remove nut (5), lockwasher (6), and lead (4) from starting motor (7). Discard lockwasher.



397-405

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Connect lead (4) and install new lockwasher (6) and nut (5) on starting motor (7). Tighten nut to 22 lb-ft (30 Nm).
2. Install new lockwasher (2), starting motor lead (4), and bolt (3) on support (1) on right engine block.
3. Install right side engine panel (WP 0182 00).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

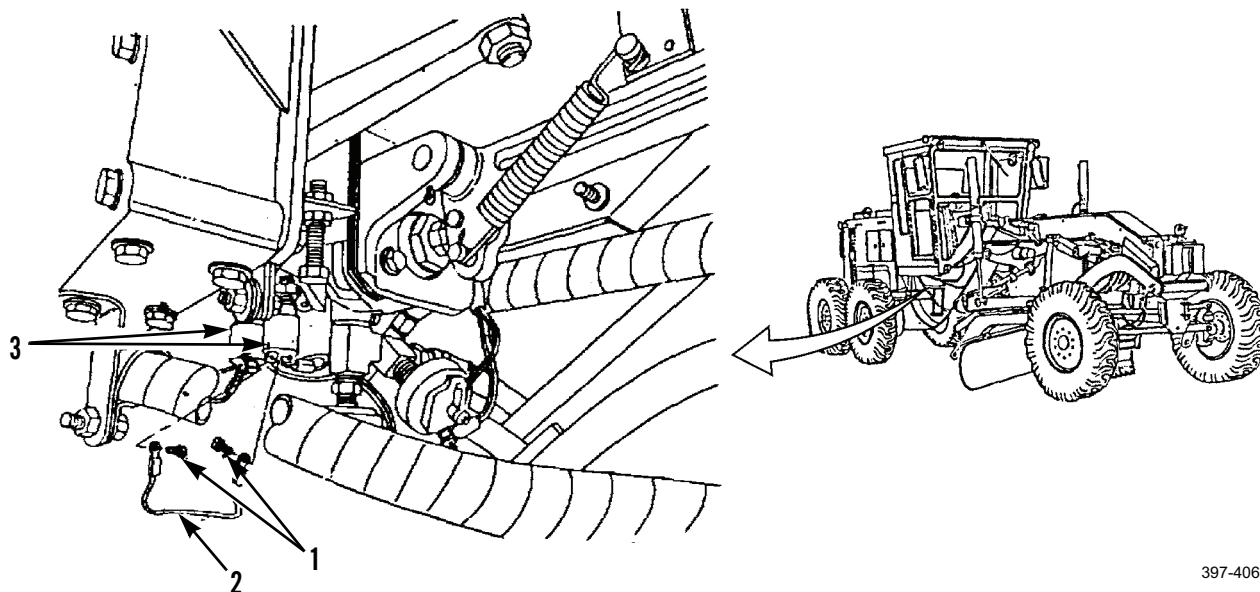
Battery cables disconnected (WP 0125 00)

REMOVAL

NOTE

Tag air pressure switch lead before disconnecting to aid in installation.

Remove two screws (1) and air pressure switch lead (2) from two switches (3) under right side of cab.




397-406

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

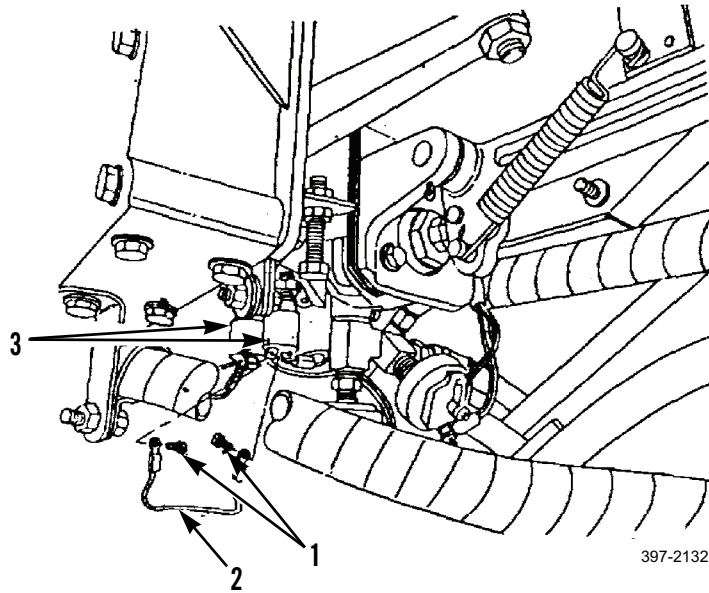1. Install lead (2) and two screws (1) on two switches (3) under right side of cab.



2. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Left side screen door opened (WP 0051 00)

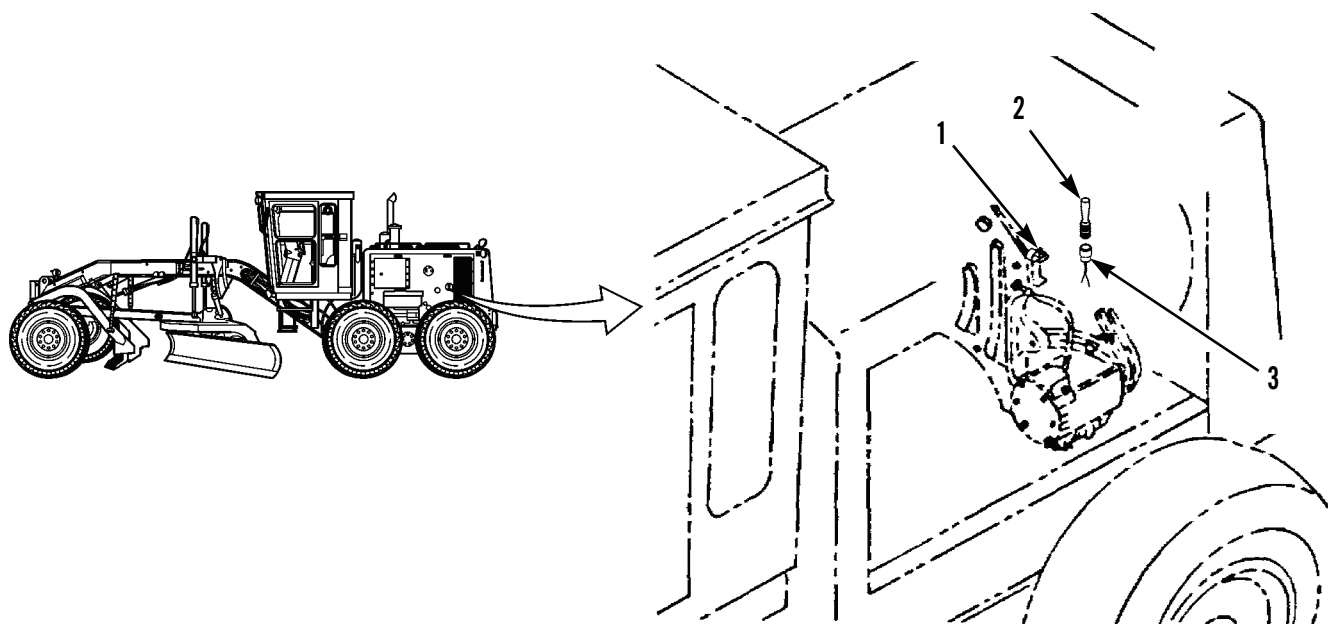
REMOVAL

1. Disconnect EMS jumper wire (2) and wiring harness (3) from clip (1) on fuel tank.

NOTE

Tag jumper wire and wiring harness before disconnecting to aid in installation.

2. Remove jumper wire (2) from wiring harness (3).




397-407

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

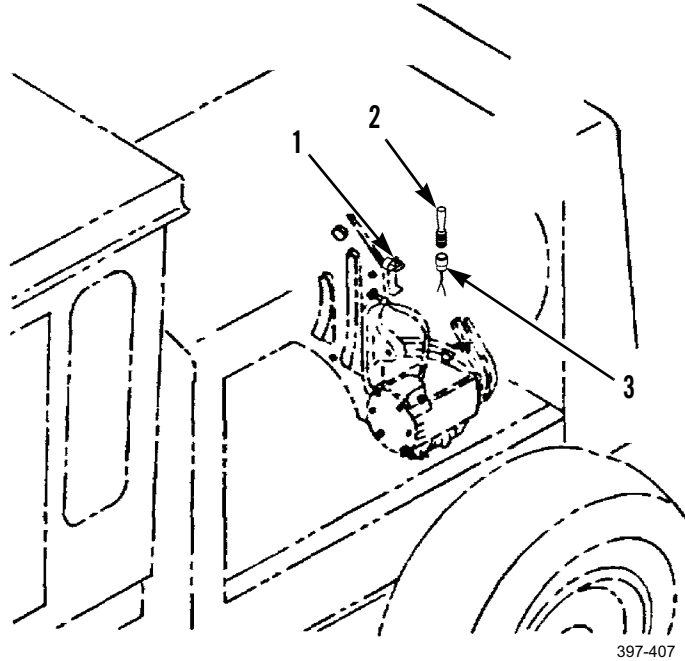1. Install jumper wire (2) to wiring harness (3).
2. Connect jumper wire (2) and wiring harness (3) to clip (1) on fuel tank.



3. Close left side screen door (WP 0051 00).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

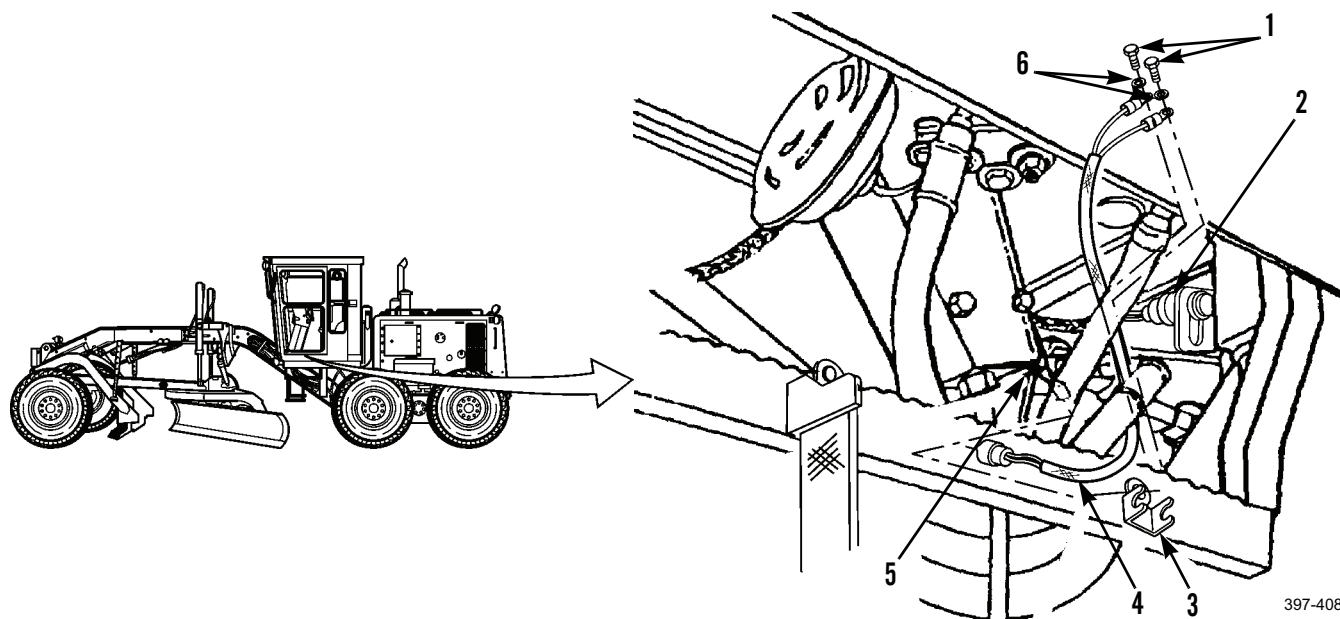
REMOVAL

1. Detach supplemental steering dump valve wiring harness (4) and main wiring harness (5) from clip (3).

NOTE

Tag wiring harnesses before disconnecting to aid in installation.

2. Disconnect dump valve wiring harness (4) from main wiring harness (5).
3. Remove clip (3).
4. Remove two screws (1), lockwashers (6), and dump valve wiring harness (4) from dump valve switch (2). Discard lockwashers.




397-408

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

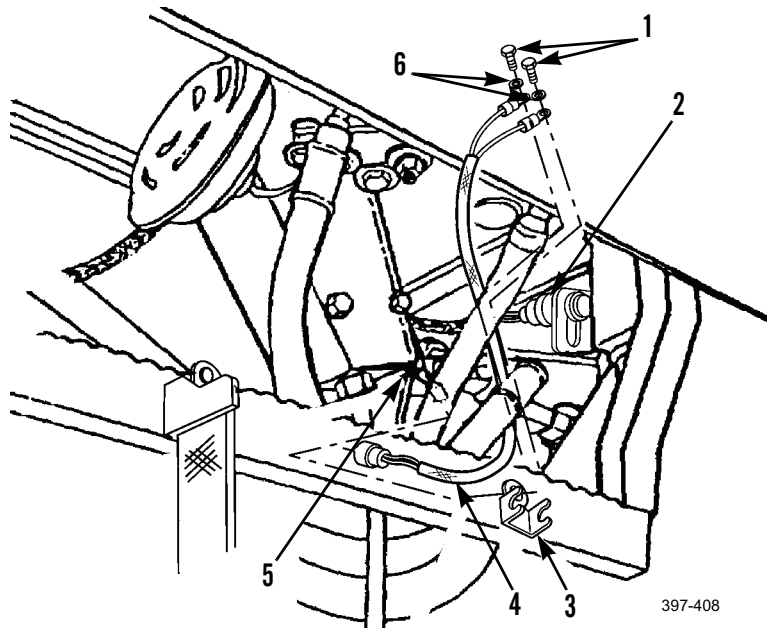1. Connect dump valve wiring harness (4), two new lockwashers (6), and screws (1) on dump valve switch (2).
2. Install clip (3).
3. Install dump valve wiring harness (4) to main wiring harness (5).
4. Attach dump valve wiring harness (4) and main wiring harness (5) to clip (1).



5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Right side engine doors opened (TM 5-3805-261-10)

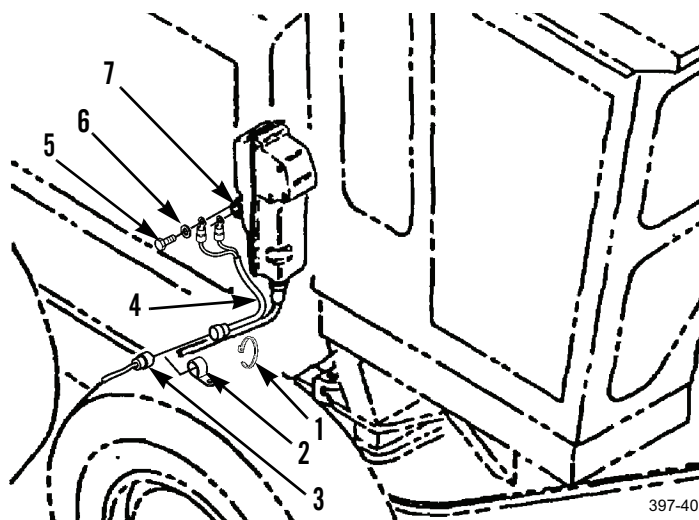
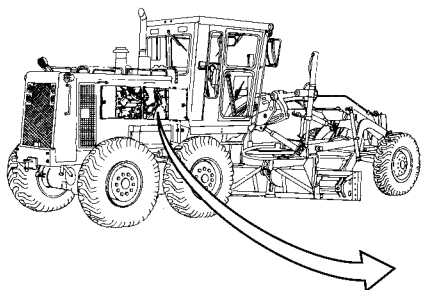
REMOVAL

1. Remove and discard tie strap (1).

NOTE

Tag wiring harnesses before disconnecting to aid in installation.

2. Remove two screws (5), washers (6), and disconnect governor switch wiring harness (4) from supplemental steering governor switch (7).
3. Remove governor switch wiring harness (4) from main wiring harness (3).
4. Remove clip (2).



397-409

**SUPPLEMENTAL STEERING GOVERNOR SWITCH
WIRING HARNESS REPLACEMENT - CONTINUED**

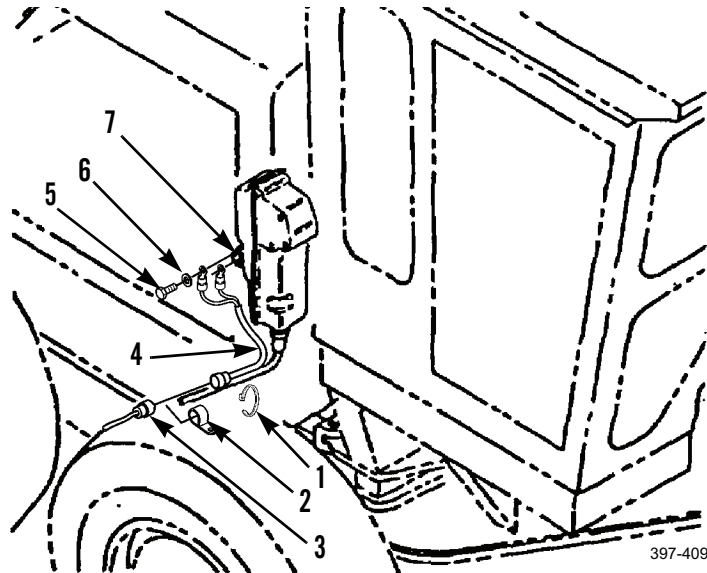
0132 00

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install clip (2).
2. Connect governor switch wiring harness (4) to main wiring harness (3).
3. Install governor switch wiring harness (4), two washers (6), and screws (5) to governor switch (7).
4. Install new tie strap (1).



5. Close right side engine doors (TM 5-3805-261-10).
6. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

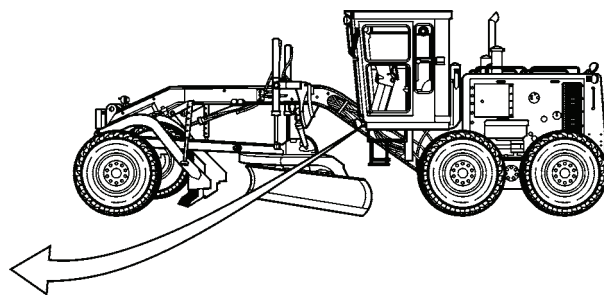
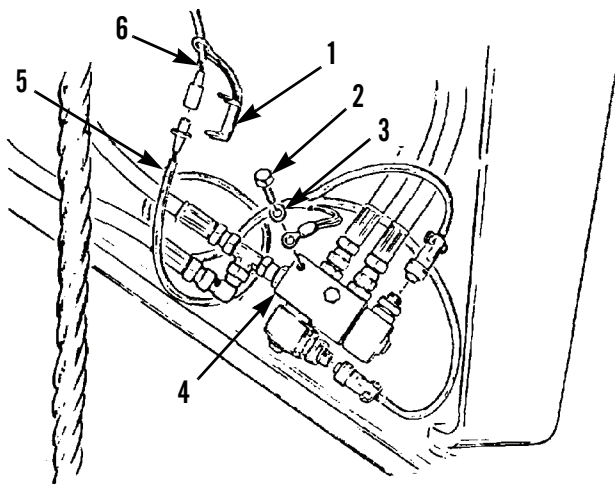
REMOVAL

1. Detach clip (1) from blade float pilot valve wiring harness (5) and main wiring harness (6).

NOTE

Tag wiring harnesses before disconnecting to aid in installation.

2. Disconnect blade float pilot valve wiring harness (5) from main wiring harness (6).
3. Remove bolt (2), washer (3), and blade float pilot valve wiring harness (5) from blade float pilot valve (4).




BLADE FLOAT PILOT VALVE WIRING HARNESS REPLACEMENT (CCE MACHINE) - CONTINUED 0133 00

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

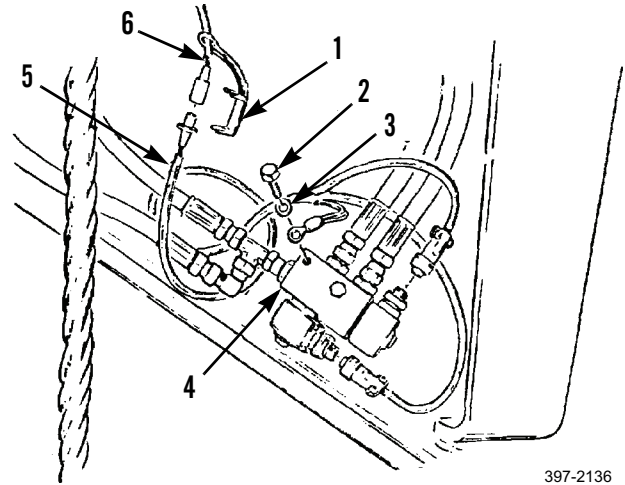1. Connect blade float pilot valve wiring harness (5) and install washer (3) and bolt (2) to blade float pilot valve (4).
2. Install blade float pilot valve wiring harness (5) to main wiring harness (6).
3. Attach clip (1) to blade float pilot valve wiring harness (5) and main wiring harness (6).



397-2136

4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

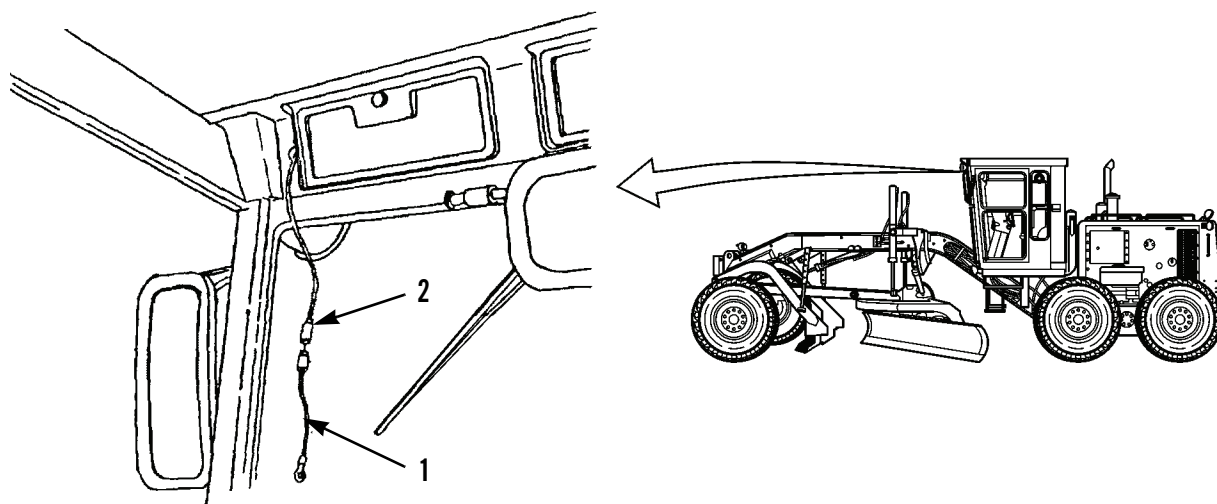
Front window defroster fan removed (WP 0210 00)

REMOVAL

NOTE

Tag front window defroster fan lead before disconnecting to aid in installation.

Remove front window defroster fan lead (1) from wiring harness (2) in front-upper-left of cab.




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

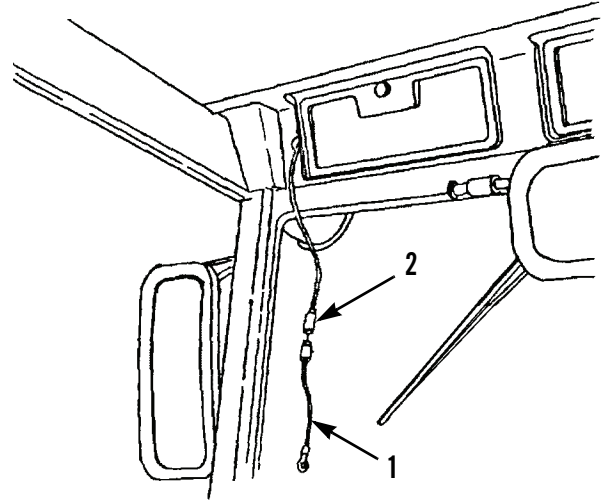1. Install lead (1) to wiring harness (2) in front-upper-left of cab.



397-2137

2. Install front window defroster fan (WP 0210 00).
3. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Rear window defroster fan removed (WP 0210 00)

Fuse box cover removed (WP 0097 00)

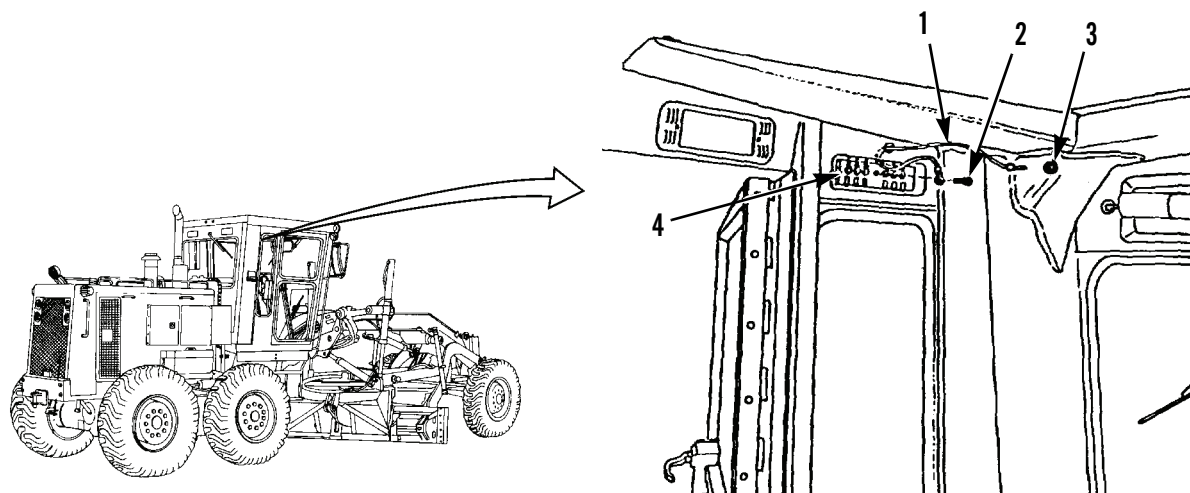
REMOVAL

1. Remove grommet (3) from rear-upper-right of cab.

NOTE

Tag rear window defroster fan lead before disconnecting to aid in installation.

2. Remove screw (2) and rear window defroster fan lead (1) from fuse block (4).




397-412

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

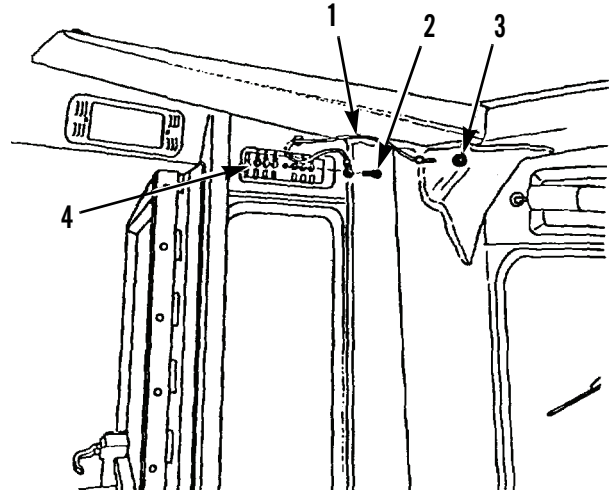1. Install lead (1) and screw (2) on fuse block (4).
2. Install grommet (3) in rear-upper-right of cab.



397-2138

3. Install fuse box cover (WP 0097 00).
4. Install rear window defroster fan (WP 0210 00).
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

FRONT WORK LIGHTS LEAD REPLACEMENT

0136 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

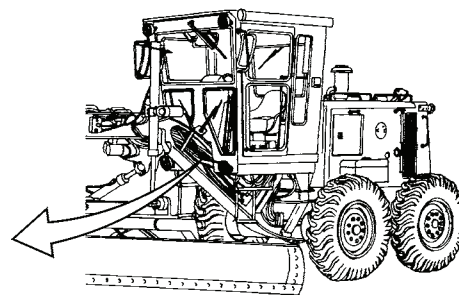
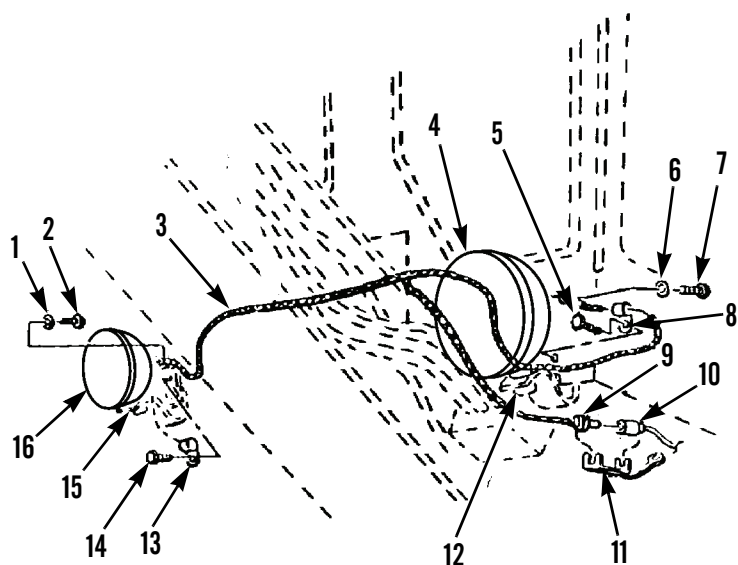
REMOVAL

1. Loosen bolt (15) on bottom of right work light (16) and move forward for access to screw (2).

NOTE

Tag front work lights lead and main wiring harness before disconnecting to aid in installation.

2. Remove screw (2) and lockwasher (1) and disconnect front work lights lead (3) from right work light (16). Discard lockwasher.
3. Remove bolt (14) from clip (13).
4. Loosen bolt (12) on bottom of left work light (4) and move forward for access to screw (7).
5. Remove screw (7) and lockwasher (6) and disconnect lead (3) from left work light (4). Discard lockwasher.
6. Remove bolt (5) from clip (8).
7. Detach clip (11) from lead (3) at connector (9) and main wiring harness connector (10) under left side of cab.
8. Disconnect lead (3) at connector (9) from connector (10).
9. Remove lead (3) from machine.
10. Remove clips (8 and 13) from lead (3).



397-413

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install clips (13 and 8) on lead (3).
2. Position lead (3) on machine.
3. Connect lead (3) at connector (9) to connector (10).
4. Attach clip (11) on connector (10) and lead (3) at connector (9) under left side of cab.
5. Install bolt (5) on clip (8).
6. Connect lead (3) and install new lockwasher (6) and screw (7) on left work light (4).
7. Move left work light (4) back to original position and tighten bolt (12).
8. Install bolt (14) on clip (13).
9. Install lead (3), new lockwasher (1), and screw (2) on right work light (16).
10. Move right work light (16) back to original position and tighten bolt (15).
11. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

REAR WORK LIGHT LEAD REPLACEMENT

0137 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Cable tie

Lockwasher (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

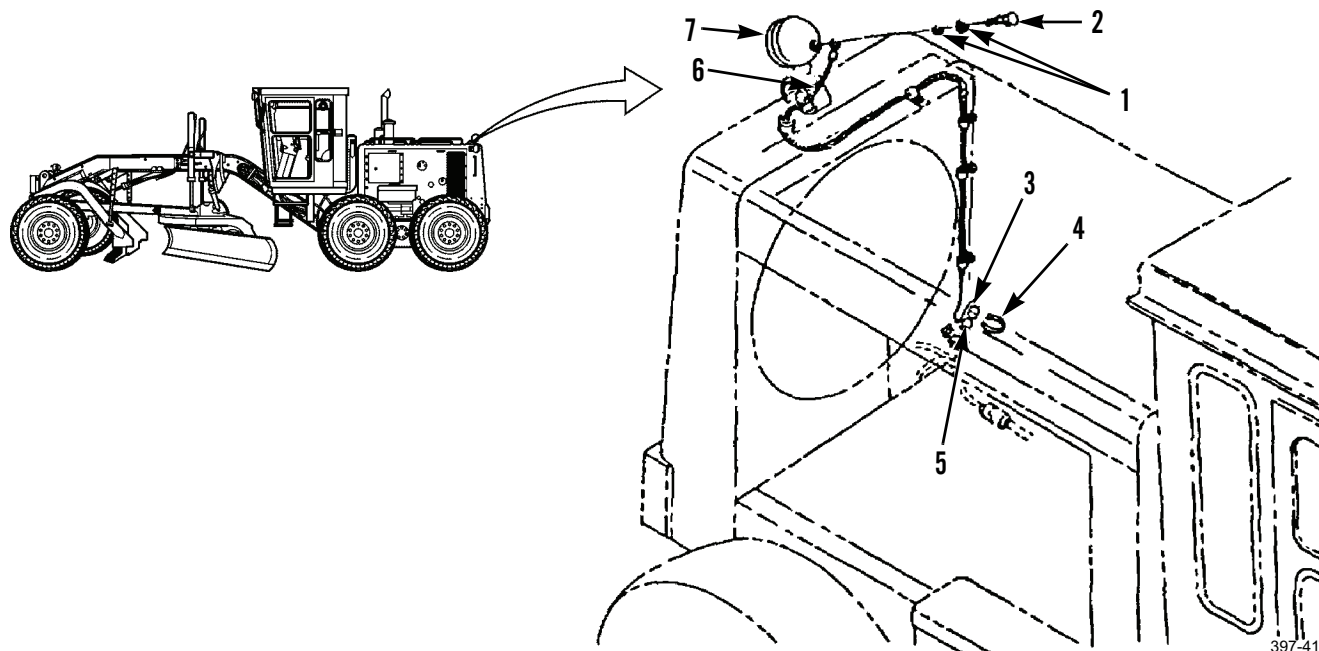
Battery cables disconnected (WP 0125 00)

Left side screen door opened (WP 0051 00)

REMOVAL**NOTE**

Tag rear work light lead before disconnecting to aid in installation.

1. Remove screw (2) and two lockwashers (1) and disconnect rear work light lead (6) from rear work light (7). Discard lockwashers.
2. Remove and discard tie strap (4) from left-rear of engine compartment near radiator.
3. Disconnect lead (6) connector (3) from main wiring harness connector (5).




397-414

REMOVAL - CONTINUED**NOTE**

Snake lead down through grommet.

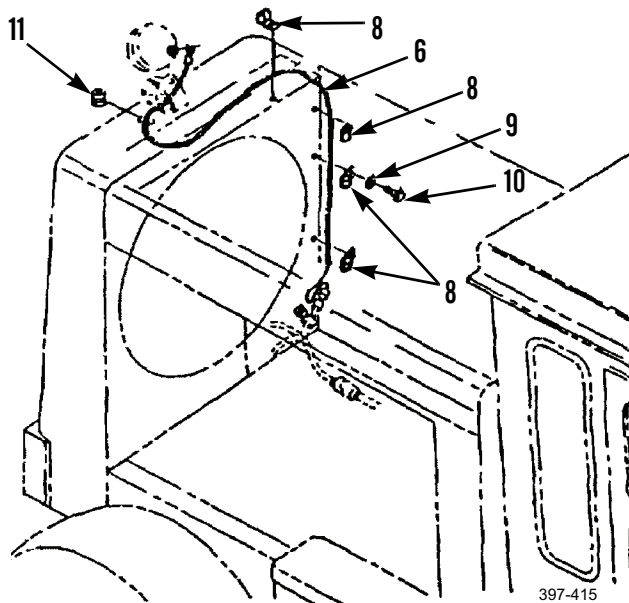
4. Remove four bolts (10), washers (9), and lead (6) from machine.
5. Remove four clamps (8) from lead (6).
6. Remove grommet (11).

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

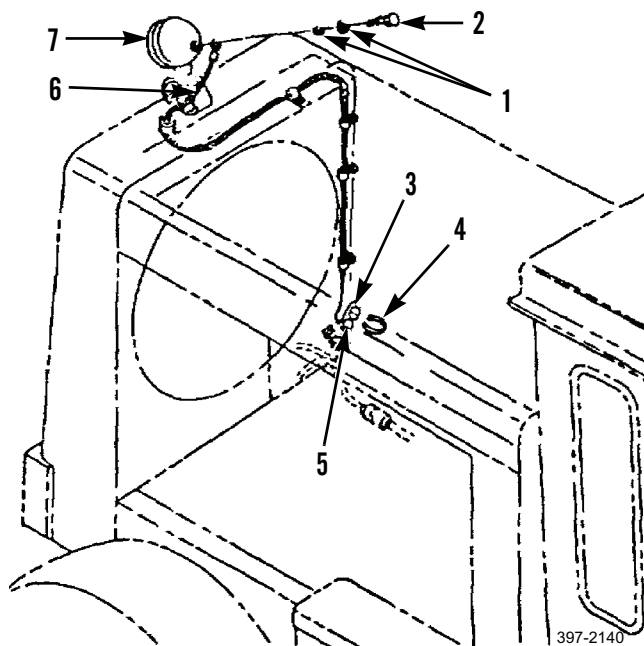1. Install grommet (11).
2. Install four clamps (8) on lead (6).
3. Snake lead (6) up through grommet (11), position lead on machine and install four washers (9) and bolts (10) on clamps (8).
4. Connect lead (6) to main wiring harness connector (5).
5. Install new tie strap (3) on left-rear of engine compartment near radiator.
6. Install lead (6), two new lockwashers (1), and bolts (2) on rear work light (7).
7. Close left side screen door (WP 0051 00).
8. Connect battery cables (WP 0125 00).

**END OF WORK PACKAGE**

TURN SIGNAL LIGHTS FUSE LEAD REPLACEMENT

0138 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

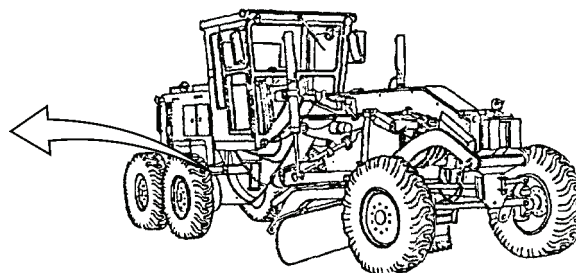
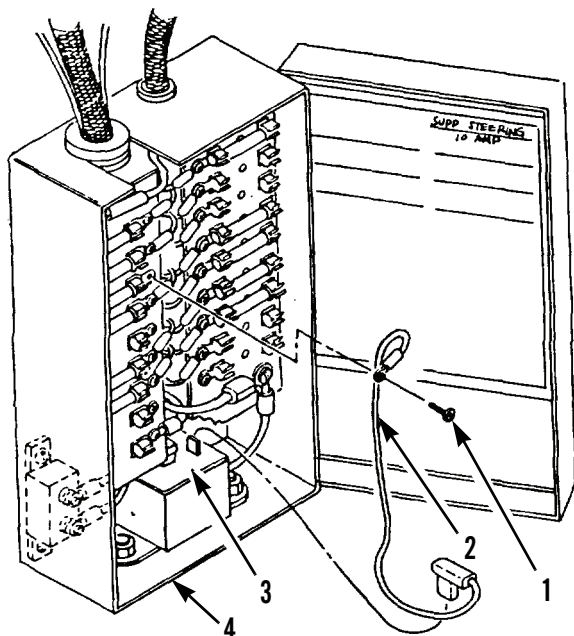
Battery cables disconnected (WP 0125 00)

REMOVAL

NOTE

Tag turn signal lights fuse lead before disconnecting to aid in installation.

1. Remove screw (1) and disconnect turn signal lights fuse lead (2) from fuse box (4).
2. Remove lead (2) from signal flasher (3).




397-416

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

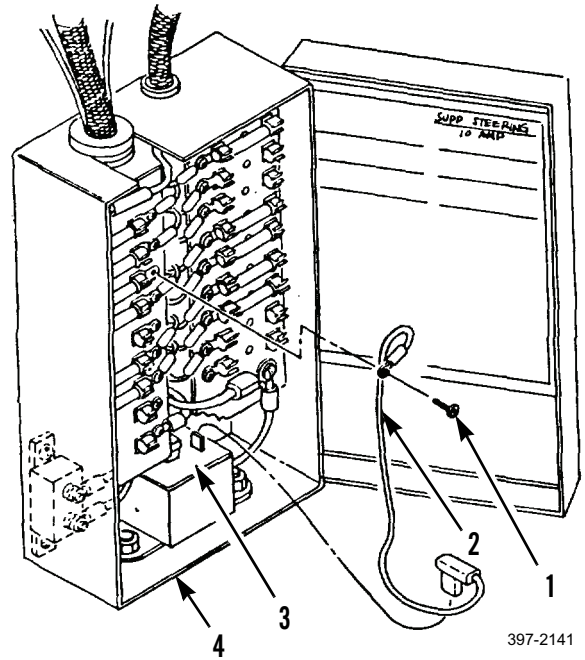1. Connect lead (2) on signal flasher (3).
2. Install lead (2) and screw (1) in fuse box (4).



3. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Dome light switch removed (WP 0099 00)

Dome light removed (WP 0111 00)

Fuse box cover removed (WP 0097 00)

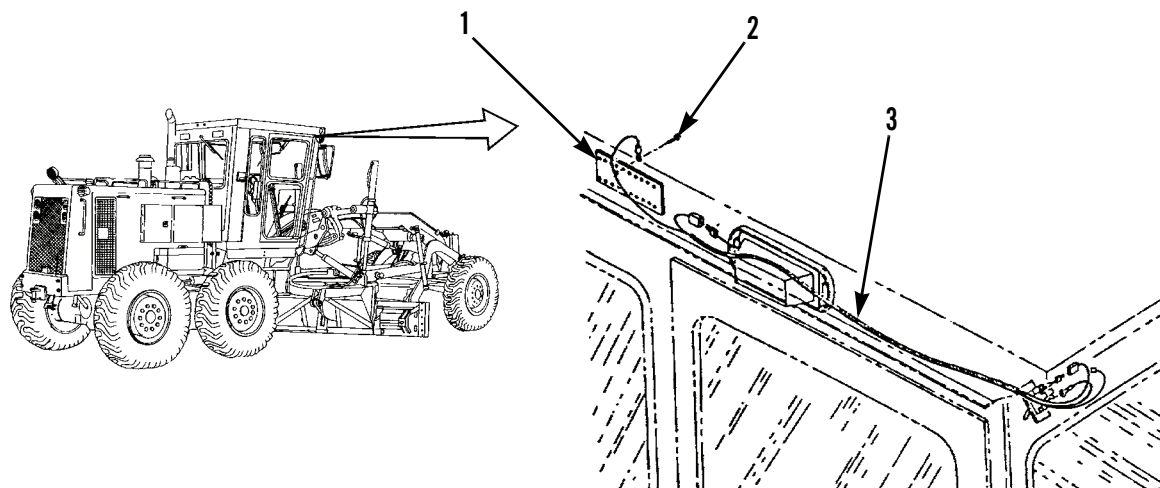
Battery cables disconnected (WP 0125 00)

REMOVAL

NOTE

Tag dome light switch wiring harness before disconnecting to aid in installation.

Remove screw (2) and dome light switch wiring harness (3) from fuse box (1).




397-471

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

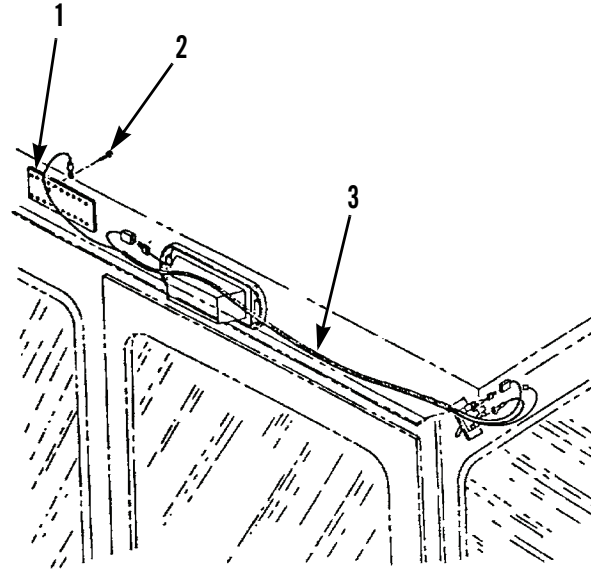1. Install wiring harness (3) and screw (2) on fuse box (1).



397-417

2. Install fuse box cover (WP 0097 00).
3. Install dome light (WP 0111 00).
4. Install dome light switch (WP 0099 00).
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (2) (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Cable tie (2)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Dome light switch removed (WP 0099 00)

Dome light removed (WP 0111 00)

Upper cab storage compartment removed (WP 0189 00)

Battery cables disconnected (WP 0125 00)

REMOVAL

1. Remove and discard two tie straps (1).

NOTE

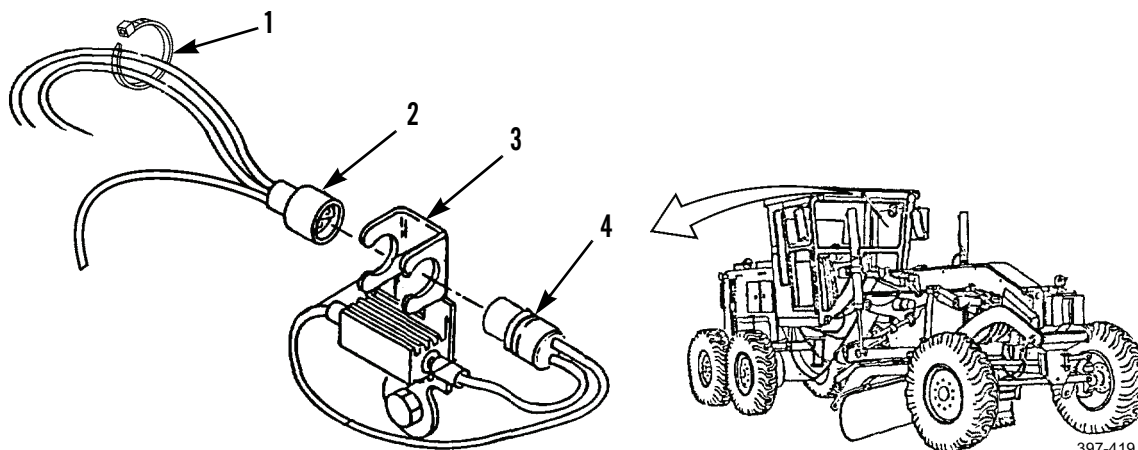
Tag wiring harnesses before disconnecting to aid in installation.

2. Detach connectors of dome light dimmer resistor wiring harness (2) and wiring harness (4) from bracket (3).

NOTE

Tag wiring harnesses before disconnecting to aid in installation.

3. Remove wiring harness (2) from wiring harness (4).



397-419

**DOMELIGHT DIMMER RESISTOR WIRING HARNESS
REPLACEMENT (CCE MACHINE) - CONTINUED**

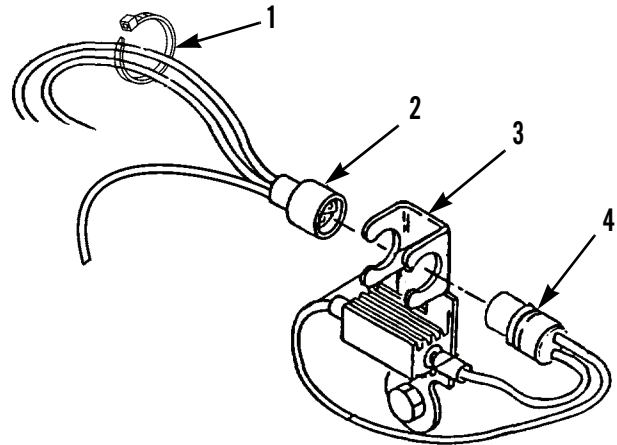
0140 00

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Install wiring harness (2) to wiring harness (4).
2. Attach connectors of wiring harness (2) and wiring harness (4) on bracket (3).
3. Install two new tie straps (1).



397-419

4. Install upper cab storage compartment (WP 0189 00).
5. Install dome light (WP 0111 00).
6. Install dome light switch (WP 0099 00).
7. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

HORN WIRING HARNESS REPLACEMENT

0141 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

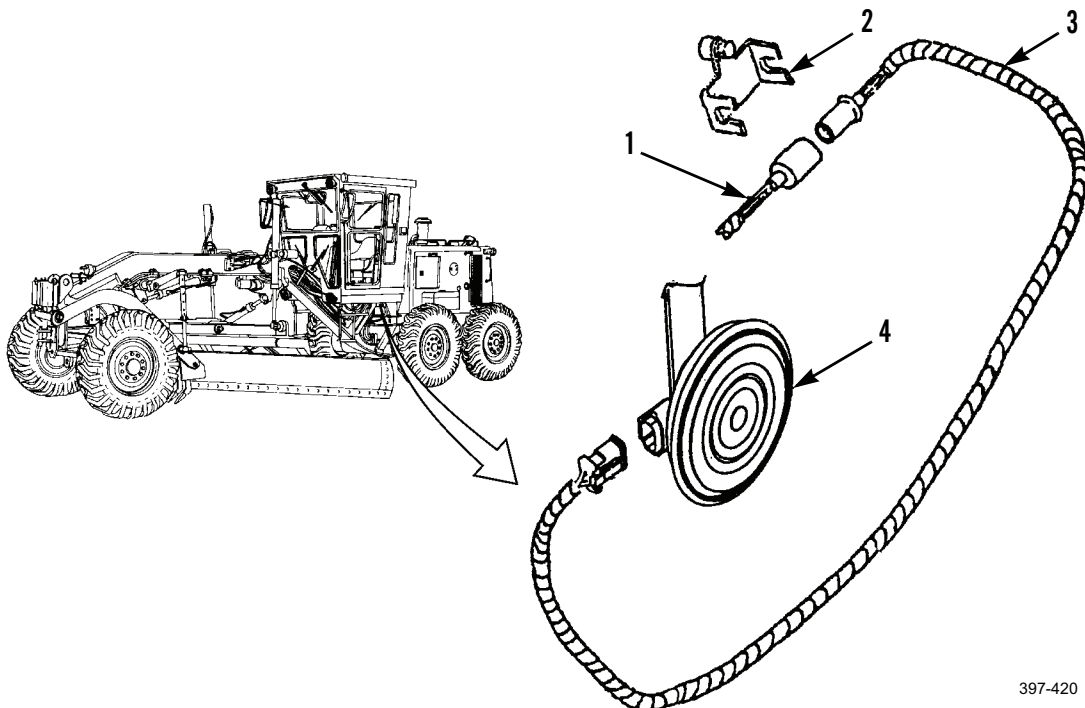
REMOVAL

1. Detach connectors of horn wiring harness (3) and wiring harness (1) from bracket (2).

NOTE

Tag wiring harnesses before disconnecting to aid in installation.

2. Disconnect wiring harness (3) from wiring harness (1).
3. Remove wiring harness (3) from horn (4).



397-420

HORN WIRING HARNESS REPLACEMENT - CONTINUED

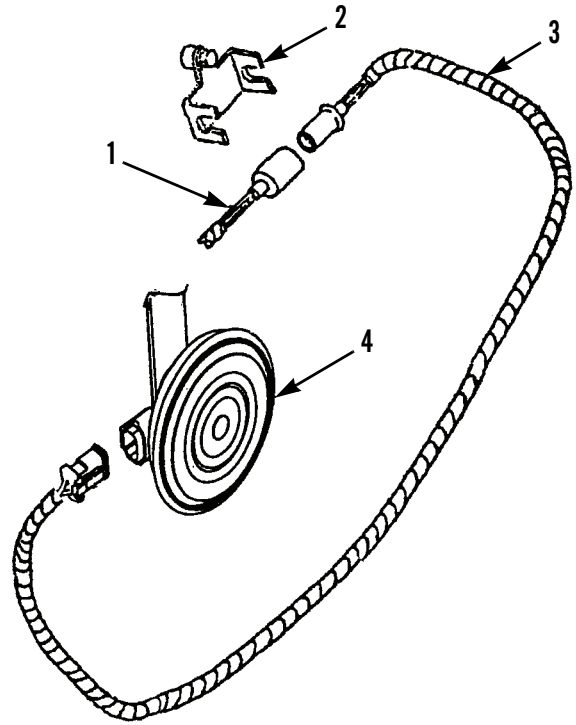
0141 00

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Connect wiring harness (3) on horn (4).
2. Install wiring harness (3) to wiring harness (1).
3. Attach connectors of horn wiring harness (3) and wiring harness (1) on bracket (2).



397-2144

4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

DISCONNECT SWITCH CABLE REPLACEMENT

0142 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (2) (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

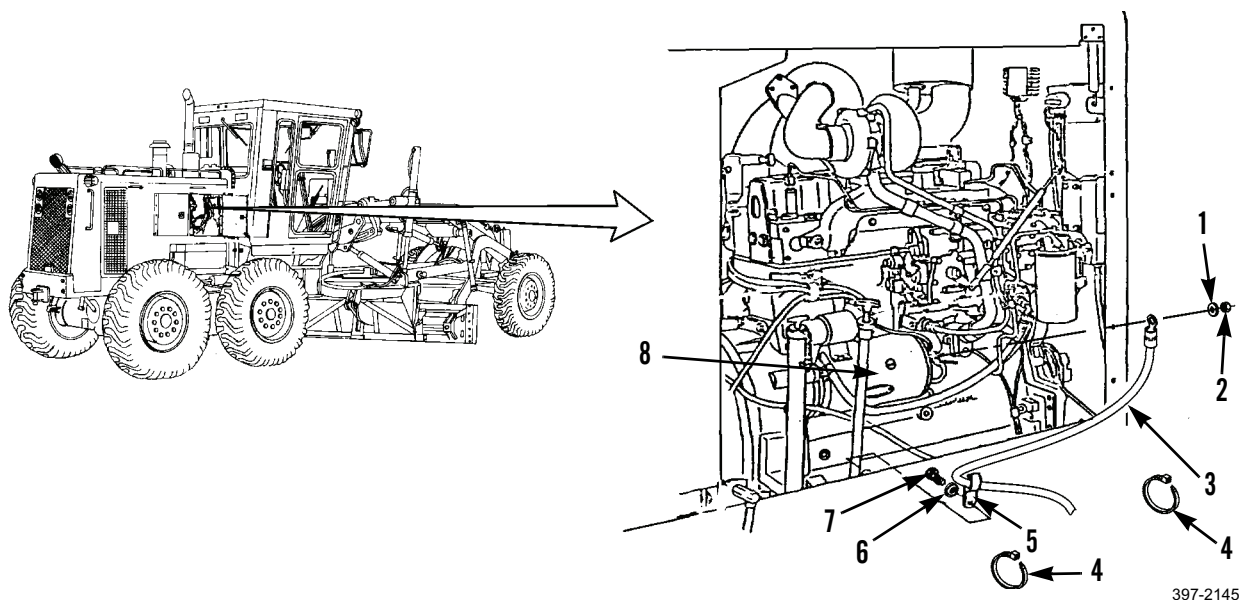
Left and right side plates removed from operator's panel console (WP 0193 00) (CCE and Type I machine)

REMOVAL


NOTE

- Tag cable before disconnecting to aid in installation.
- For the CCE and Type II machines, the disconnect switch is located on the operator's console. For the Type I machine, the disconnect switch is located on the hood assembly. Instructions apply to both configurations with differences as indicated.

1. Remove nut (1) and lockwasher (2) and disconnect cable (3) from starting motor (8). Discard lockwasher.
2. For Type I machine, disregard steps 3 through 10 and go to step 11.
3. Remove and discard two tie straps (4).
4. Remove two bolts (7), washers (6), and clips (5) from inner-right-rear frame.




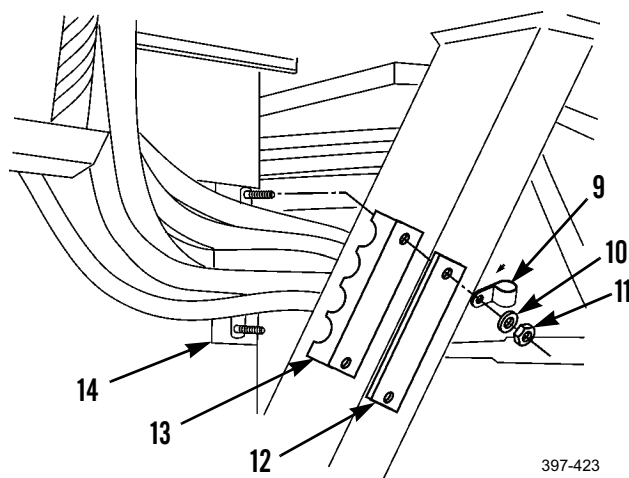5. Remove two nuts (11) and washers (10) from bracket (14).
6. Remove clip (9) from hose.
7. Remove plate (12).
8. Separate two clamps (13) enough to pull cable (3) through.



DISCONNECT SWITCH CABLE REPLACEMENT - CONTINUED**0142 00****REMOVAL - CONTINUED**

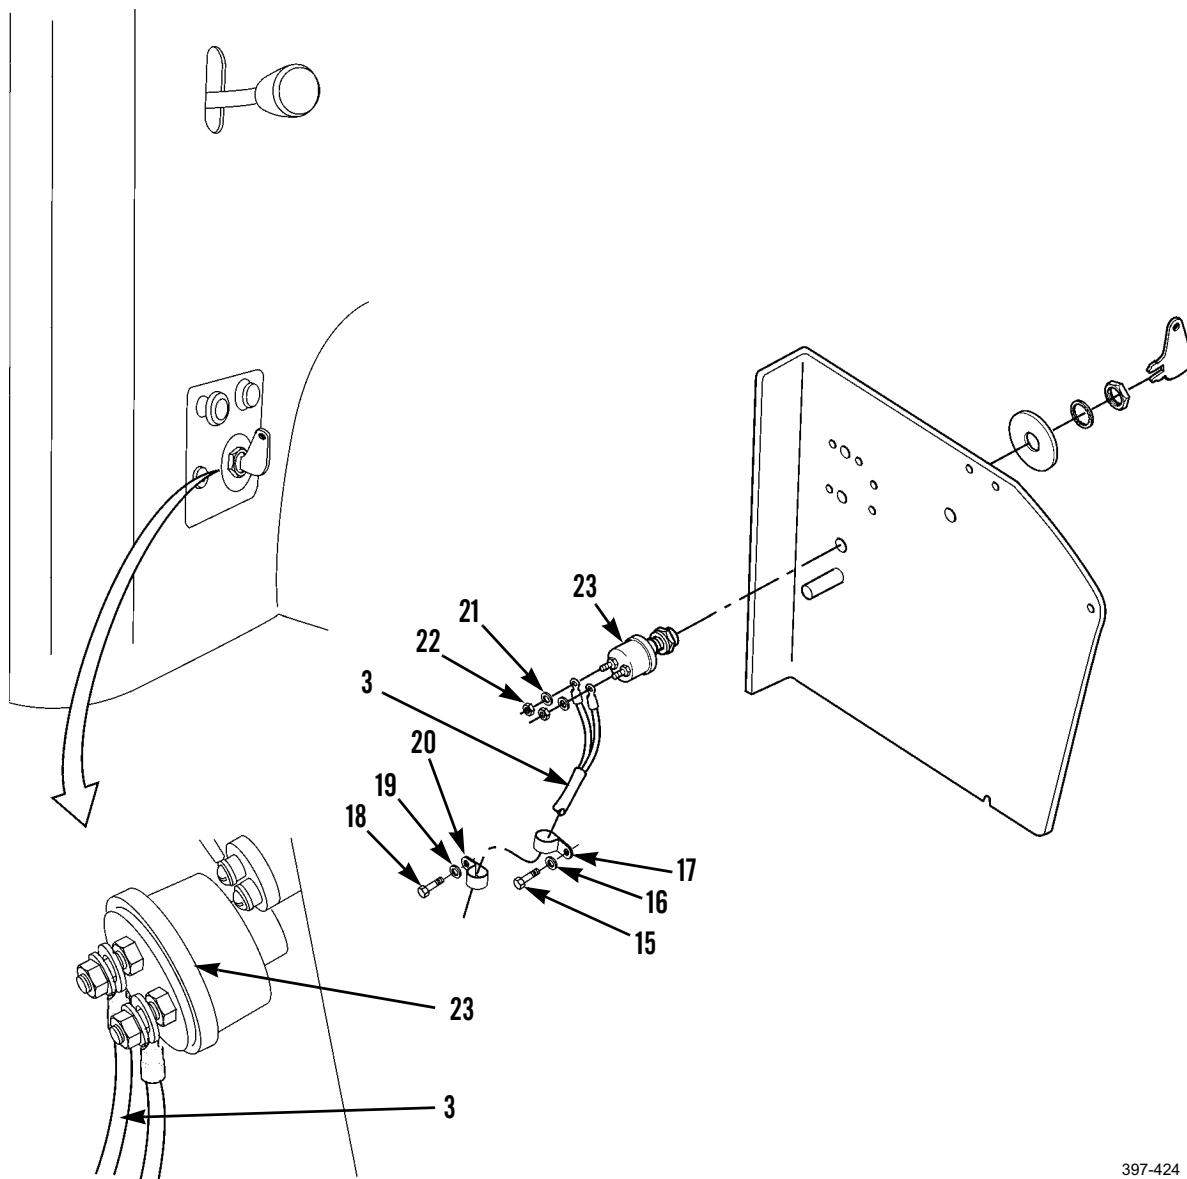9. Remove two bolts (18), washers (19), and clips (20) from under right side of operator compartment.
10. Remove bolt (15), washer (16), and clip (17) from inside operator panel console.
11. Remove two nuts (22), washers (21), and cables (3) from disconnect switch (23).




397-424

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

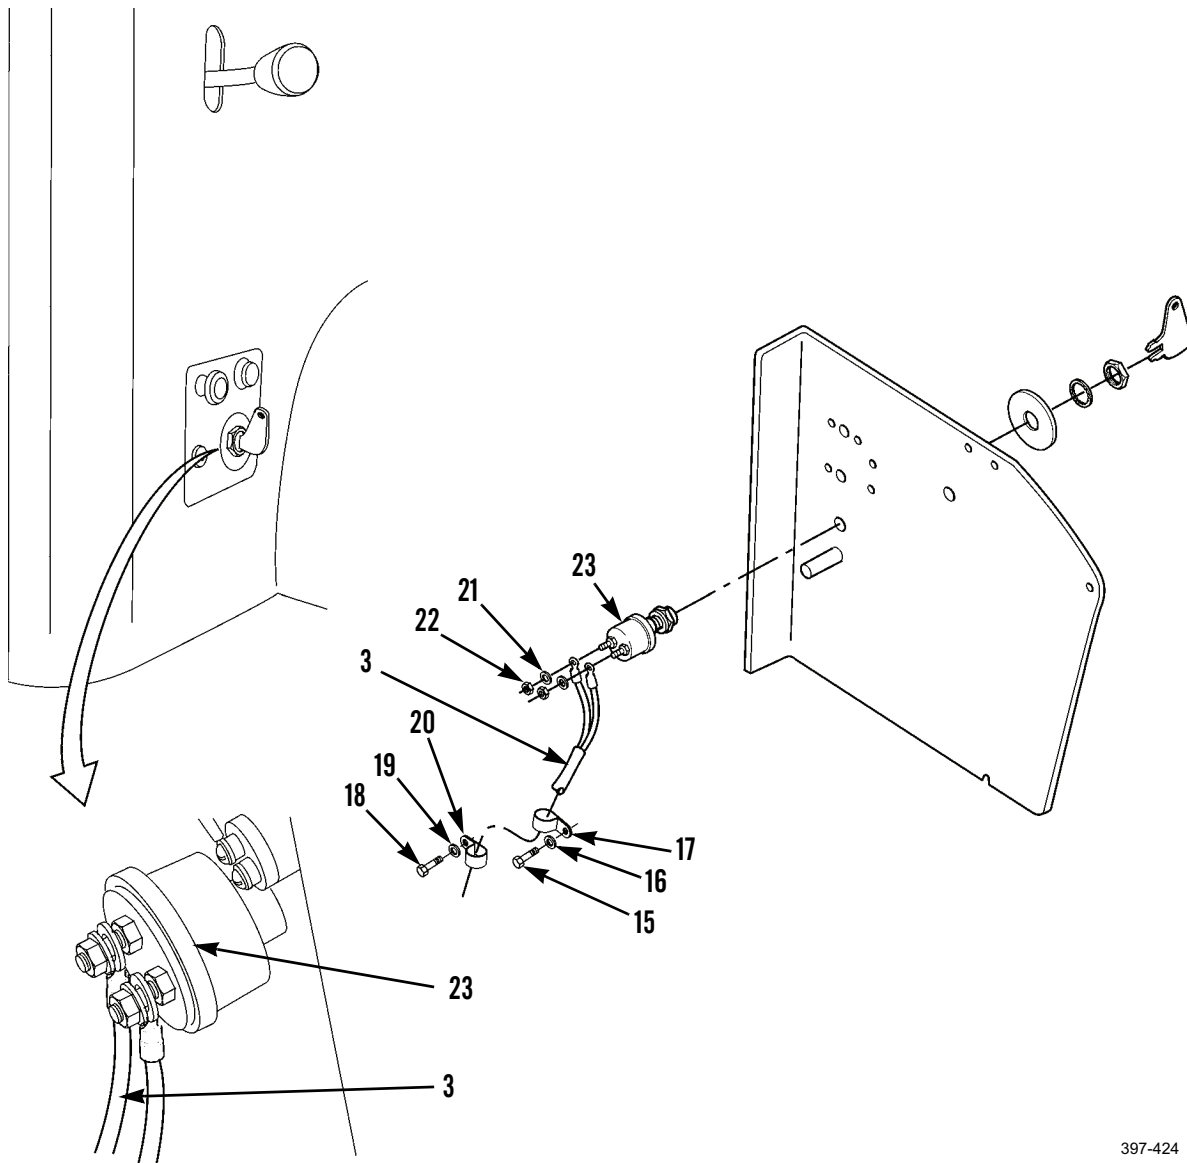
1. Connect cable (3) and install washer (21) and nut (22) on disconnect switch (23) inside operator panel console.
2. For Type I machine, disregard steps 3 through 14 and step 16, perform steps 15 and 17 only.
3. Install clip (17) on cable (3) inside operator panel console.
4. Install washer (16), bolt (15), and clip (17) to frame.
5. Install two clips (20) on cable (3) under right side of operator compartment.
6. Install two washers (19), bolts (18), and clips (20) to frame.




397-424

INSTALLATION - CONTINUED

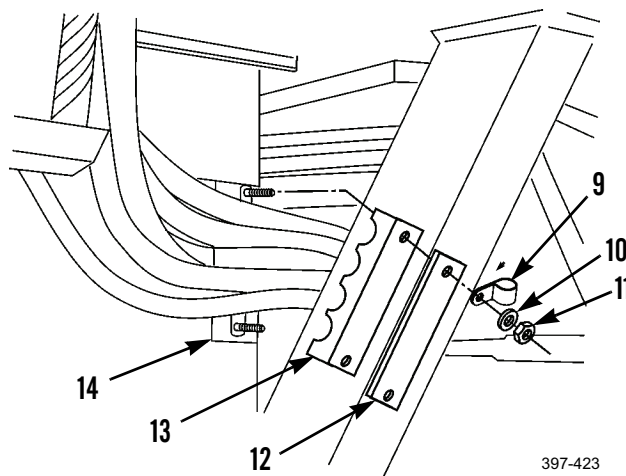7. Position cable (3) between two clamps (13).
8. Install two clamps (13) and plate (12).
9. Install clip (9) on hose.
10. Install two washers (10) and nuts (11) on bracket (14).



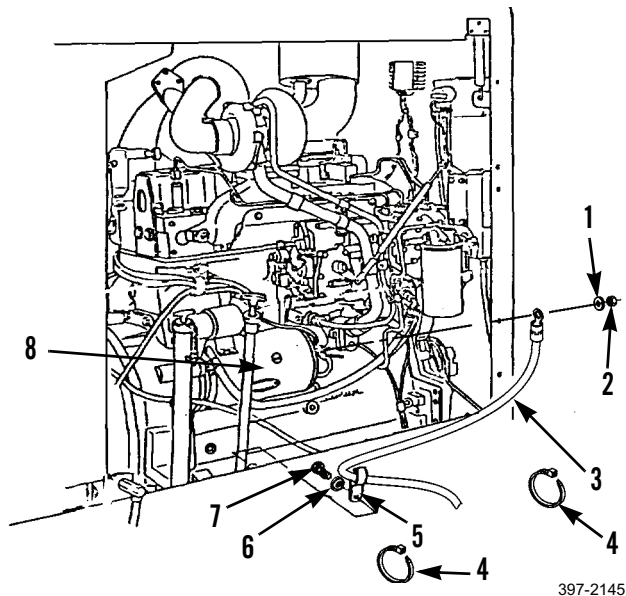11. Position cable (3) through rear frame, under engine and across to right side of engine.
12. Install two clips (5) on cable (3) on inner-right-rear frame.
13. Install two washers (6) and bolts (7).
14. Install two new tie straps (4).
15. Install cable (3), new lockwasher (2), and nut (1) on starting motor (8).



16. Install left and right side plates on operator panel console (WP 0193 00).
17. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

HEATER WIRING HARNESS REPLACEMENT (CCE MACHINE)

0143 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

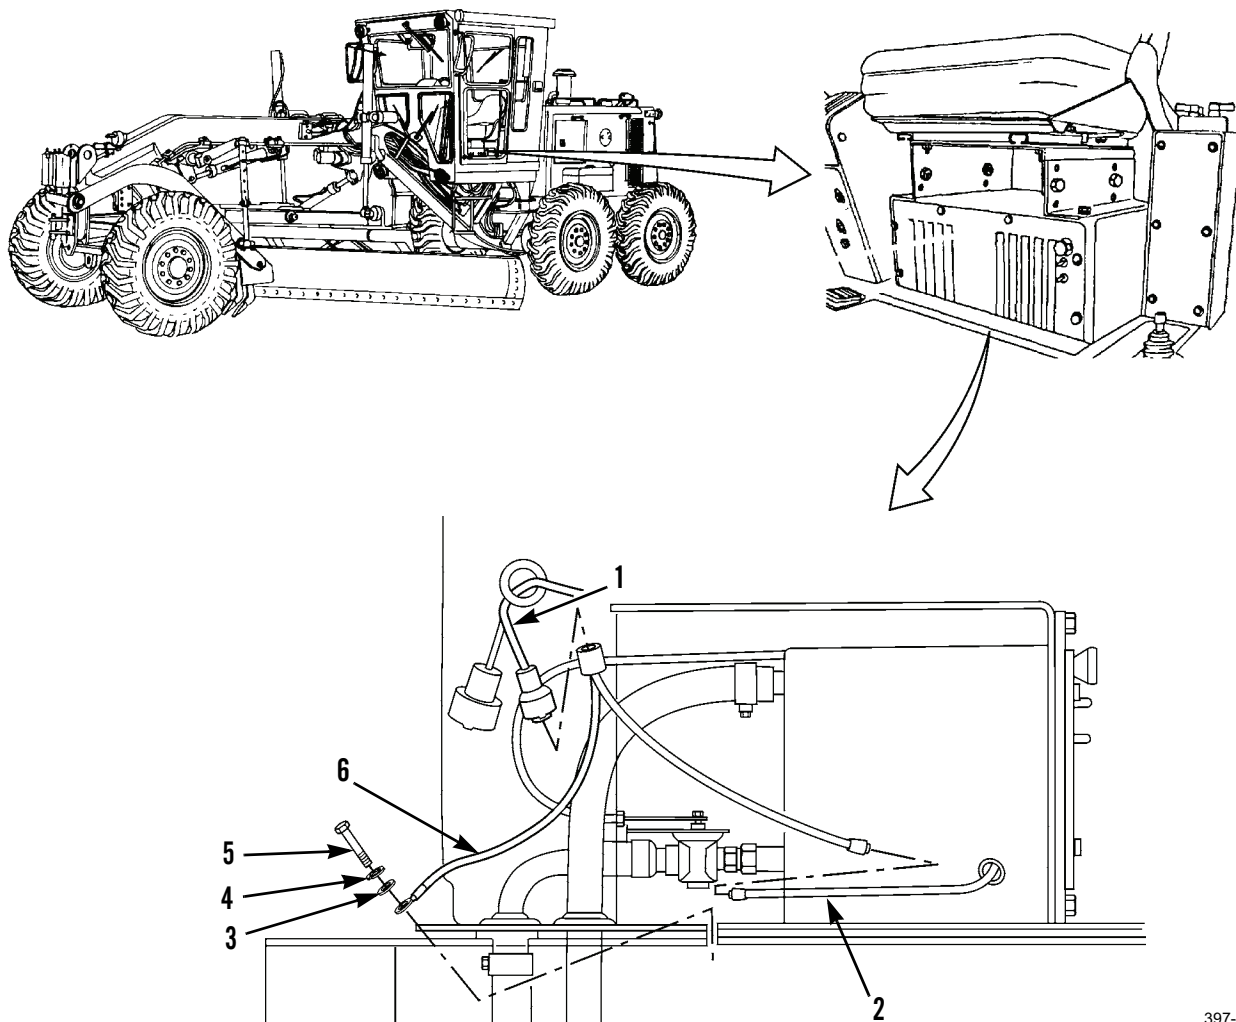
Battery cables disconnected (WP 0125 00)

Seat removed (WP 0200 00)

REMOVAL**NOTE**

Tag wiring harnesses and lead before disconnecting to aid in installation.

1. Disconnect heater wiring harness (6) from main wiring harness (1).
2. Disconnect wiring harness (6) from heater lead (2).
3. Remove bolt (5), lockwasher (4), washer (3), and wiring harness (6). Discard lockwasher.



397-425

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Position wiring harness (6) and install washer (3), new lockwasher (4), and bolt (5).
2. Connect wiring harness (6) to lead (2).
3. Install wiring harness (6) to wiring harness (1).
4. Install seat (WP 0200 00).
5. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

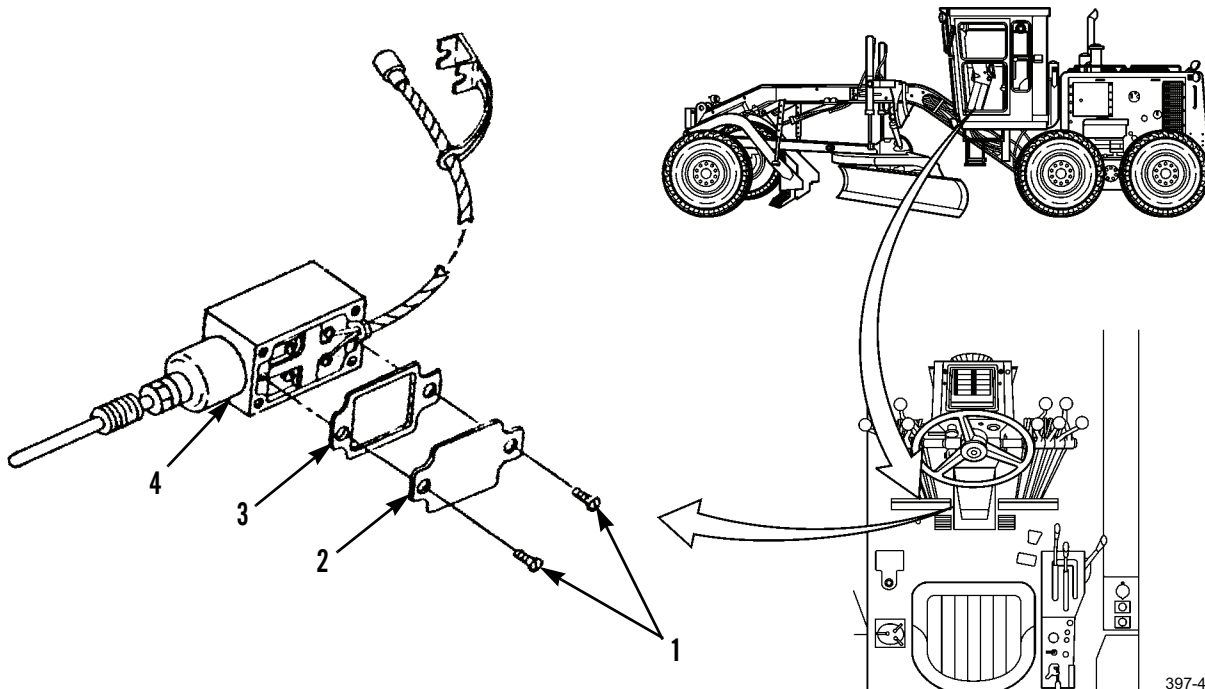
Battery cables disconnected (WP 0125 00)

REMOVAL

NOTE

This procedure covers replacement for the left-hand blade float wiring harness. Follow these instructions for the right-hand blade float wiring harness.

1. Remove two screws (1), cover (2), and gasket (3) from blade float limit switch (4). Discard gasket.



397-426

**LEFT- AND RIGHT-HAND BLADE FLOAT HARNESSES
REPLACEMENT (CCE MACHINE) - CONTINUED**

0144 00

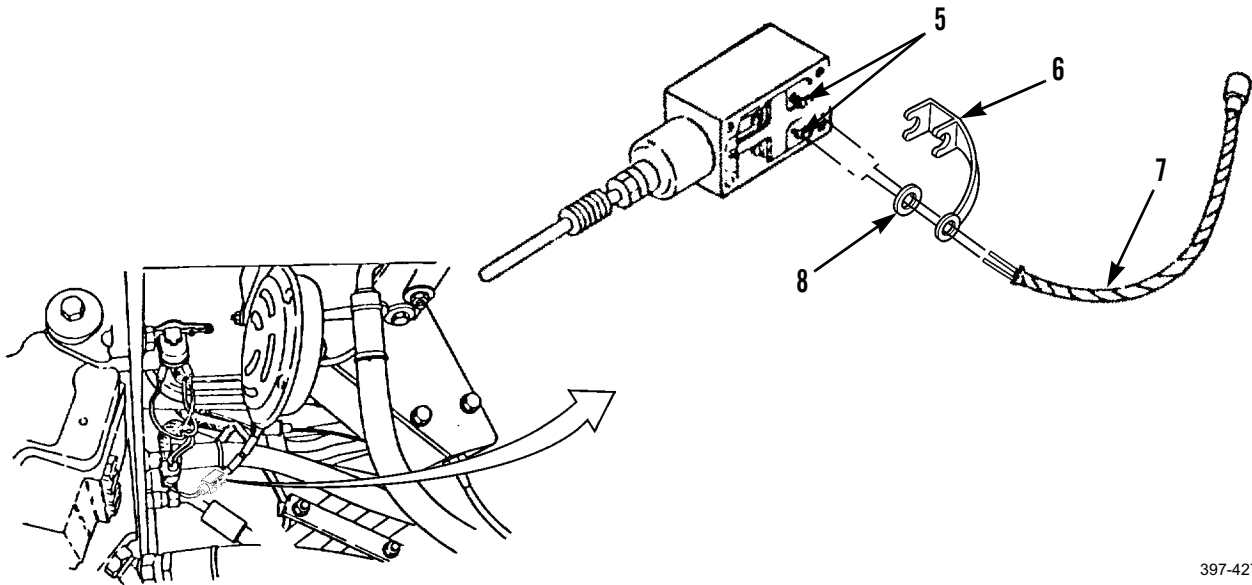
REMOVAL - CONTINUED

2. Loosen but do not remove two screws (5).

NOTE

Tag wiring harnesses before disconnecting to aid in installation.

3. Disconnect blade float wiring harness (7) from two screws (5).
4. Detach clip (6) from wiring harness (7) and main wiring harness under left side of cab.
5. Remove wiring harness (7) from main wiring harness.
6. Remove clip (6) and grommet (8) from wiring harness (7).



397-427

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

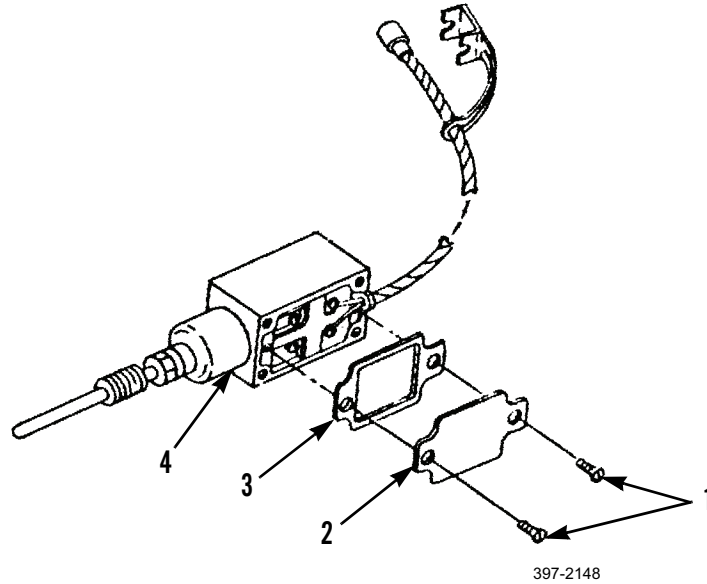
1. Install grommet (8) and clip (6) on wiring harness (7).
2. Connect wiring harness (7) to main wiring harness under left side of cab.
3. Attach clip (6) on wiring harness (7) and main wiring harness.
4. Install wiring harness (7) to two screws (5).
5. Tighten two screws (5).

**LEFT- AND RIGHT-HAND BLADE FLOAT HARNESSSES
REPLACEMENT (CCE MACHINE) - CONTINUED**

0144 00

INSTALLATION - CONTINUED

6. Install new gasket (3), cover (2), and two screws (1) on blade float limit switch (4).



7. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

SUPPLEMENTAL STEERING PUMP WIRING HARNESSES REPLACEMENT

0145 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL**NOTE**

Tag all wiring harnesses before disconnecting to aid in installation.

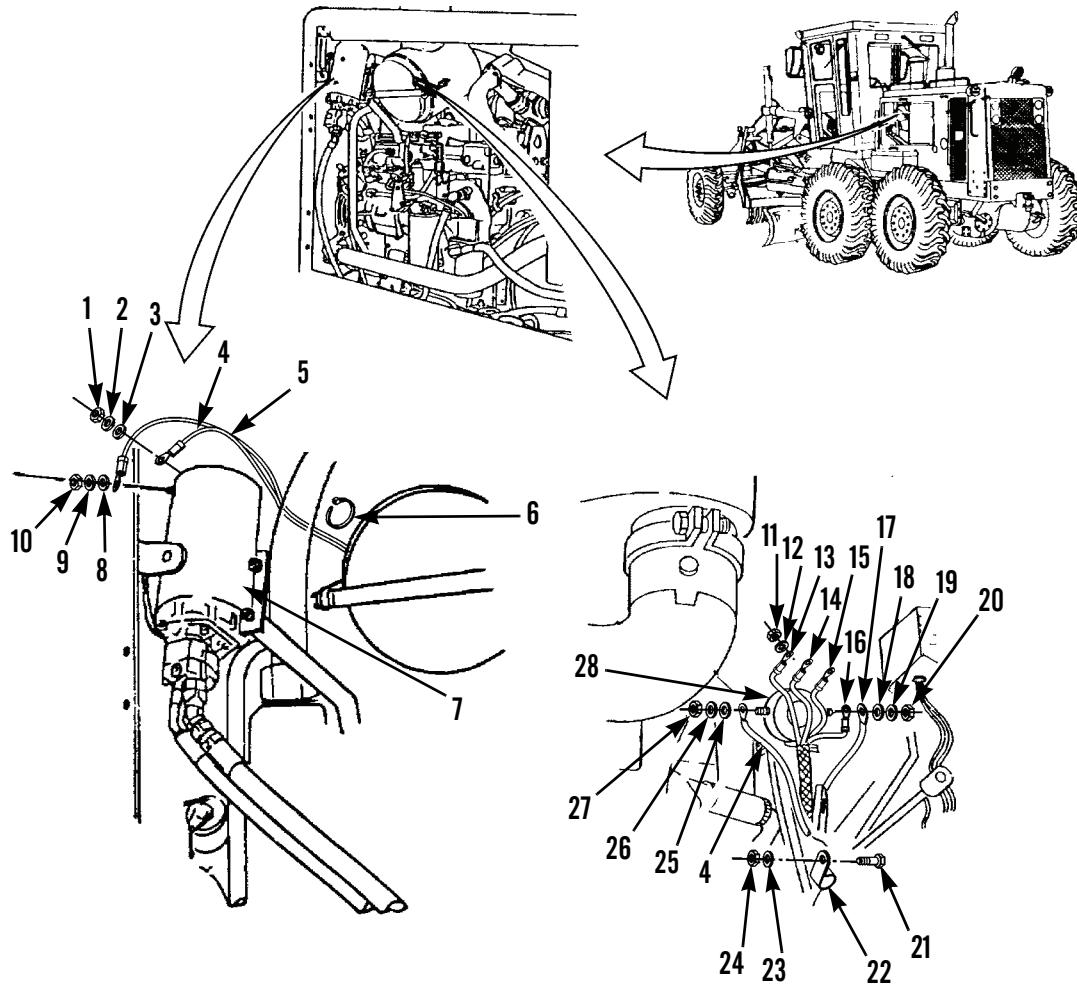
1. Remove nut (1) and washers (2 and 3) and disconnect wiring harness (4) from supplemental steering pump (7).
2. Remove nut (10) and washers (8 and 9) and disconnect wiring harness (5) from supplemental steering pump (7).
3. Remove and discard tie strap (6).
4. Remove nut (27), washers (25 and 26), and wiring harness (4) from supplemental steering switch (28).

NOTE

The Type I machine has an additional wire connected to the supplemental steering switch.

5. For Type I machines, remove two nuts (11), two washers (12), wire (13), wire (14), and wire (15) from supplemental steering switch (28).
6. For CCE and Type II machines, remove two nuts (11), two washers (12), wire (14), and wire (15) from supplemental steering switch (28).
7. Remove nut (20), washers (18 and 19), wire (16), and disconnect wiring harness (17) from supplemental steering switch (28).
8. Remove nut (24), washer (23), clamp (22), and bolt (21).


REMOVAL - CONTINUED



397-428

REMOVAL - CONTINUED

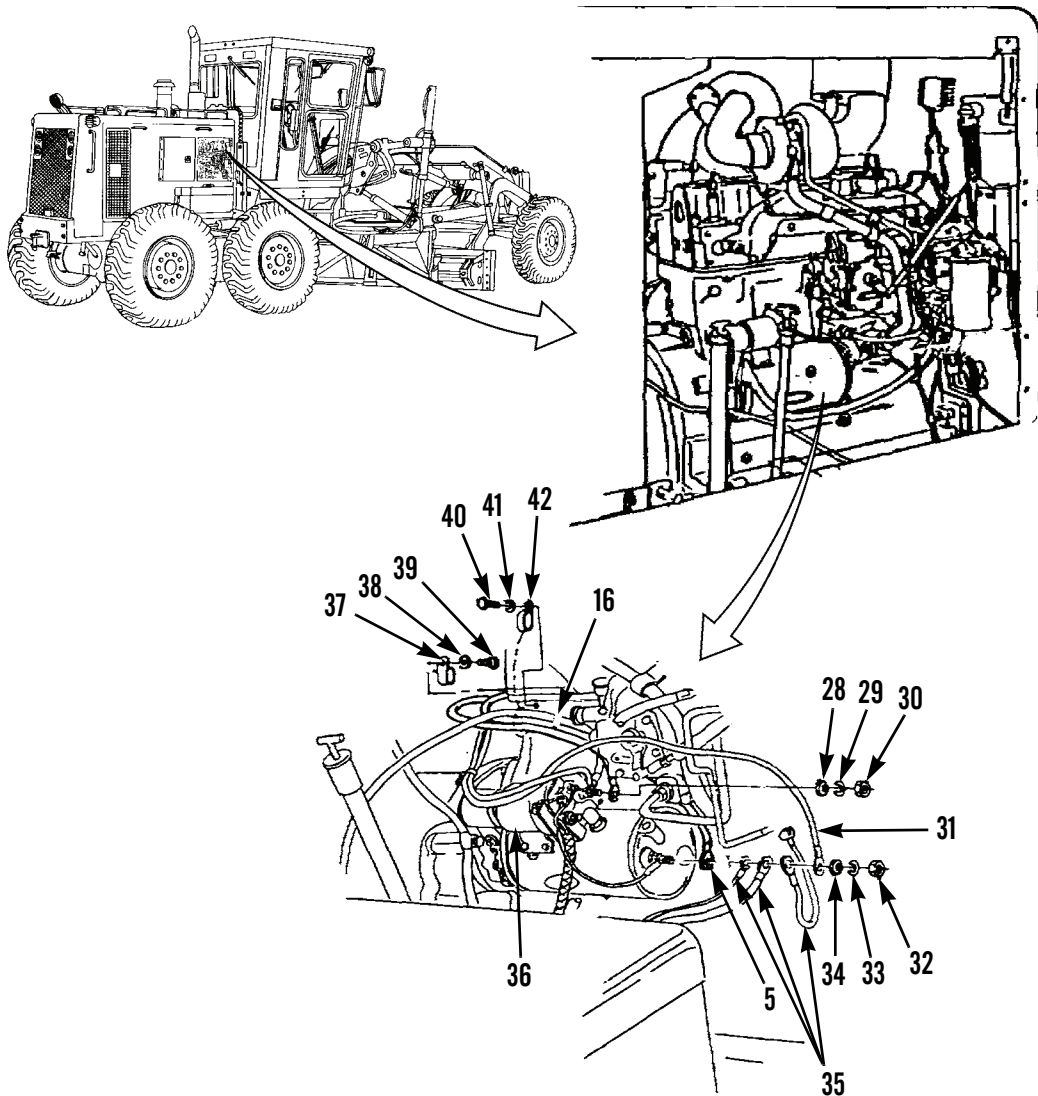9. Remove bolt (39), washer (38), and clamp (37) from right side of engine.
10. Remove bolt (40), washer (41), and clamp (42) from right side of engine.
11. Remove nut (30), washers (28 and 29), and wiring harness (16) from starting motor solenoid (36).
12. Remove nut (32), washers (33 and 34), wire (31), three wires (35), and wiring harness (5) from starting motor solenoid (36).



397-430

CLEANING AND INSPECTION

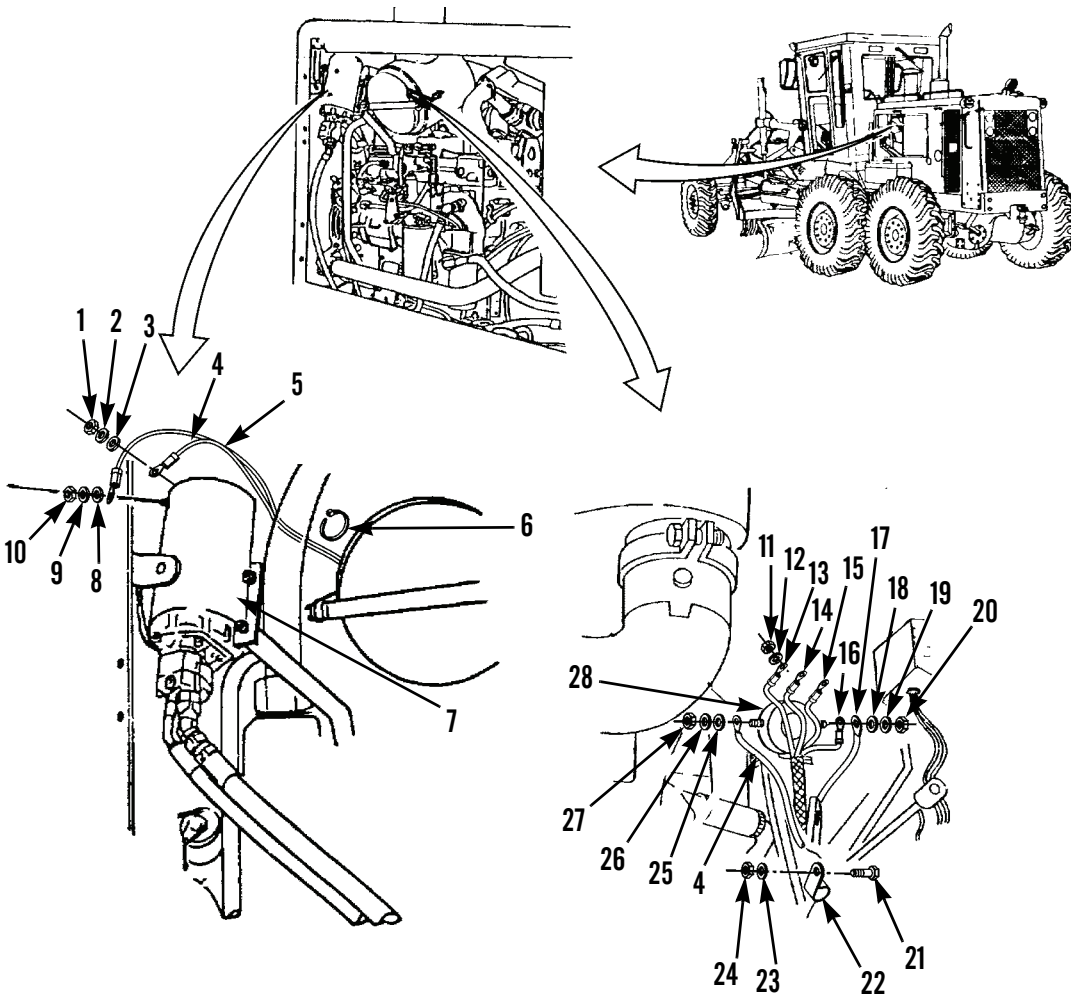
Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

1. Connect three wires (35), wire (31), and wiring harness (5). Install washers (34 and 33) and nut (32) on starting motor solenoid (36).
2. Connect wiring harness (16) and install washers (29 and 28) and nut (30) on starting motor solenoid (36).
3. Install clamp (42), washer (41), and bolt (40) on right side of engine.

INSTALLATION - CONTINUED

4. Install clamp (37), washer (38), and bolt (39) on right side of engine.
5. Install bolt (21), clamp (22), washer (23), and nut (24).
6. Install wire (16), wiring harness (17), washers (19 and 18), and nut (20) on supplemental steering switch (28).
7. For Type I machines, install wire (15), wire (14), wire (13), two washers (12), and two nuts (11) to supplemental steering switch (28).
8. For CCE and Type II machines, install wire (15), wire (14), two washers (12), and two nuts (11) to supplemental steering switch (28).
9. Connect wiring harness (4) and install washers (26 and 25) and nut (27) on supplemental steering switch (28).
10. Install new tie strap (6).
11. Install wiring harness (5), washers (9 and 8), and nut (10) on supplemental steering pump (7).
12. Install wiring harness (4), washers (3 and 2), and nut (1) on supplemental steering pump (7).



13. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

**RADIO INTERFERENCE SUPPRESSION REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE)**

0146 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (8)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Right side screen door opened (WP 0055 00)

**RADIO INTERFERENCE SUPPRESSION REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

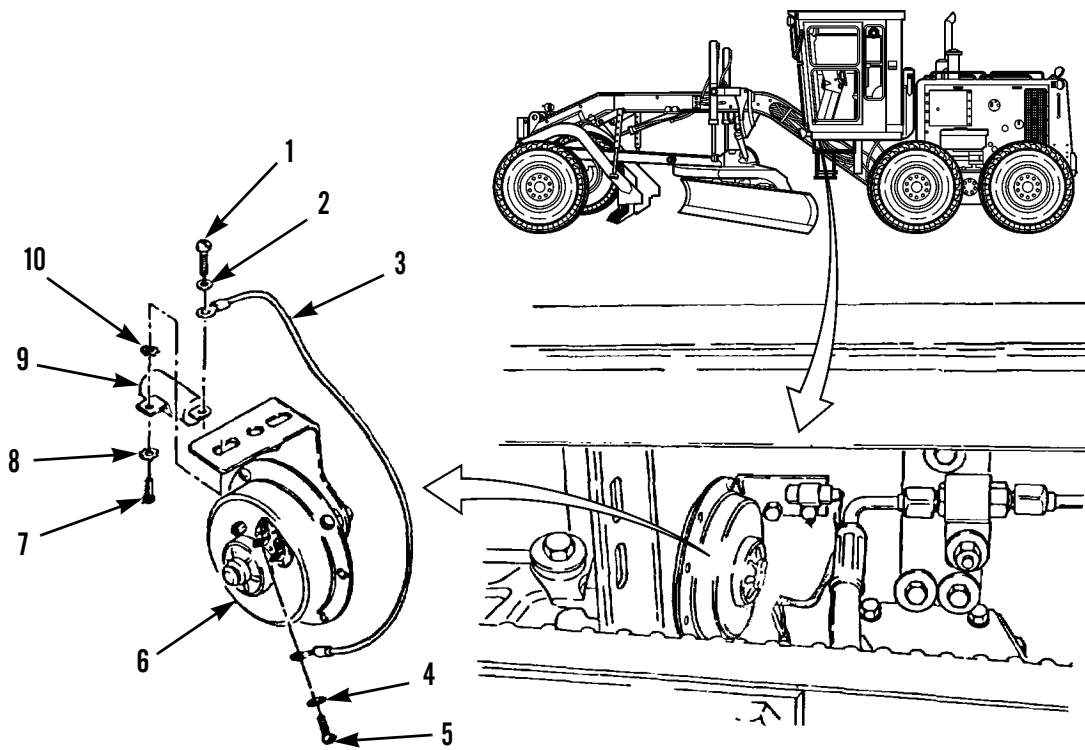
0146 00

REMOVAL

NOTE

- To remove the horn radio interface suppression capacitor, perform steps 1 through 3. To remove the alternator radio suppression capacitor, perform steps 4 through 7.
- Tag all wire assemblies before disconnecting to aid in installation.

1. Remove screw (5) and lockwasher (4) and disconnect wire assembly (3) from horn (6) under front-left of cab. Discard lockwasher.
2. Remove screw (1), lockwasher (2), and wire assembly (3) from horn radio interface suppression capacitor (9). Discard lockwasher.
3. Remove bolt (7), lockwasher (8), horn radio interface suppression capacitor (9), and lockwasher (10). Discard lockwashers.




397-431

4. Disconnect wire assembly (19) from alternator (20).
5. Remove screw (14) and lockwasher (15) and disconnect wire assemblies (13 and 16). Discard lockwasher.
6. Remove screw (24), wire assembly (13), and lockwasher (23) from alternator radio suppression capacitor (22). Discard lockwasher.
7. Remove screw (11), lockwasher (12), disconnect wire assembly (17), remove lockwasher (18), alternator radio suppression capacitor (22), and lockwasher (21). Discard lockwashers.

**RADIO INTERFERENCE SUPPRESSION REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

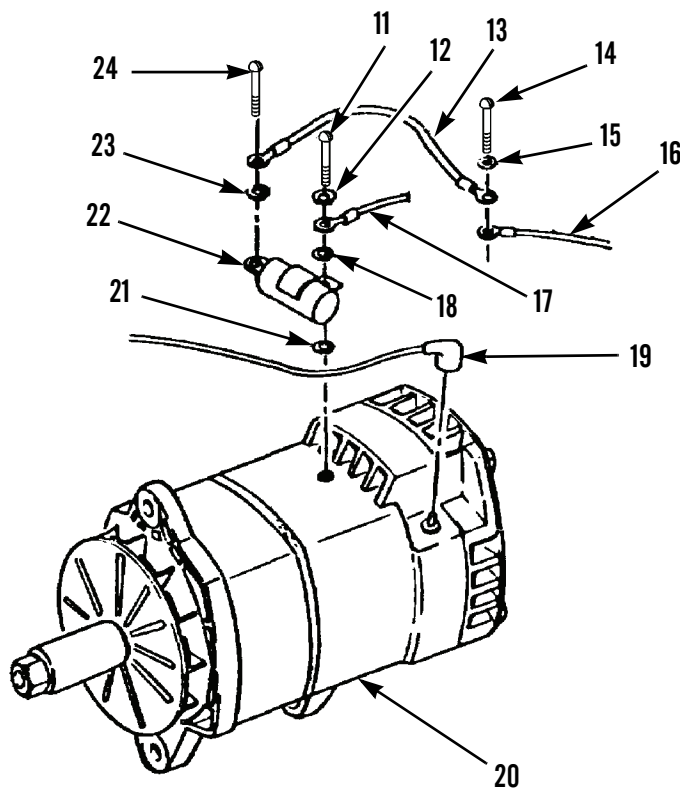0146 00

REMOVAL - CONTINUED

397-432

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION**NOTE**

To install the alternator radio suppression capacitor, perform steps 1 through 4. To install the horn radio interface suppression capacitor, perform steps 5 through 7.

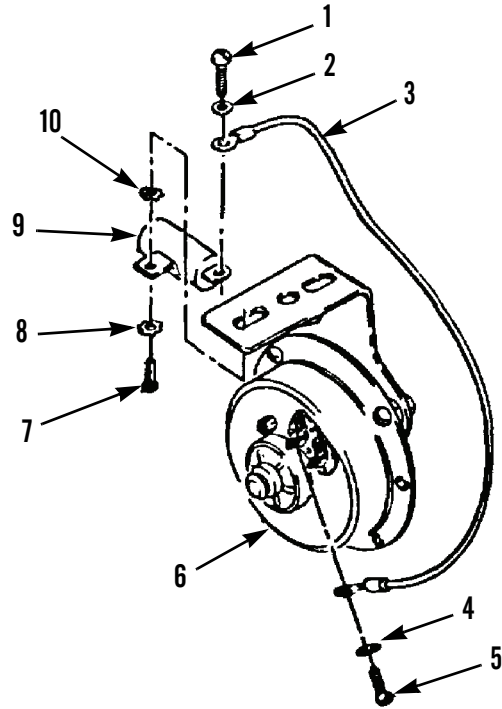
1. Install new lockwasher (21), alternator radio suppression capacitor (22), new lockwasher (18), connect wire assembly (17), install new lockwasher (12), and screw (11).
2. Install new lockwasher (23), connect wire assembly (13), and install screw (24) on alternator radio suppression capacitor (22).
3. Connect wire assembly (16) and install wire assembly (13), new lockwasher (15), and screw (14).
4. Connect wire assembly (19) on alternator (20).

**RADIO INTERFERENCE SUPPRESSION REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0146 00

INSTALLATION - CONTINUED

5. Install new lockwasher (10), horn radio interface suppression capacitor (9), new lockwasher (8), and bolt (7) to horn (6) under front-left of cab.
6. Connect wire assembly (3) and install new lockwasher (2) and screw (1) to horn radio interface suppression capacitor (9).
7. Install wire assembly (3), new lockwasher (4), and screw (5).



397-2115

8. Close right side screen door (WP 0055 00).
9. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Draining, Cleaning and Inspection, Refilling

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Oil, lubricating (Item 26, 27, or 29, WP 0349 00)

Transmission breather

References

WP 0020 00

WP 0022 00

WP 0153 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Right side engine doors opened (TM 5-3805-261-10)

Left side screen door opened (WP 0055 00)



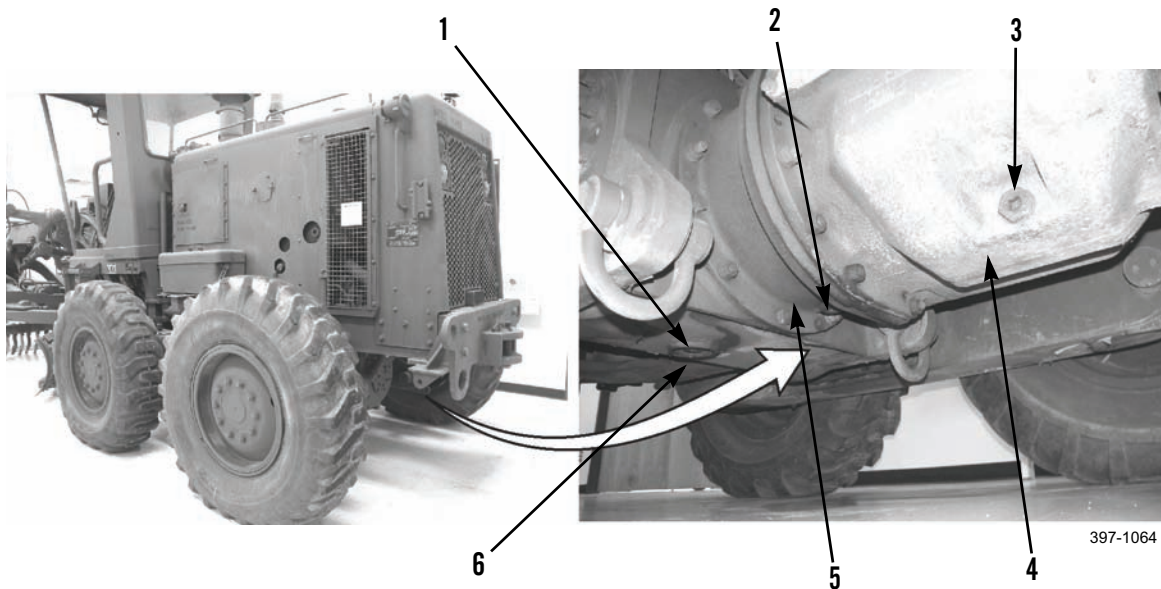
WARNING



- Exercise care when working with hot oil or components saturated with hot oil. Allow to cool before handling. Failure to follow this warning may result in injury to personnel.
- Oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

DRAINING

1. Position drain pan under transmission case (4), transfer gear case (5), and differential case (6).
2. Remove drain plug (1) from differential case (6) and allow to drain.
3. Install drain plug (1) on differential case (6).
4. Remove drain plug (2) from transfer gear case (5) and allow to drain.
5. Install drain plug (2) on transfer gear case (5).
6. Remove drain plug (3) from transmission case (4) and allow to drain.
7. Install drain plug (3) on transmission case (4).




8. Replace transmission oil filter (WP 0153 00).
9. Remove transmission breather (7) from top of transmission and discard.

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


REFILLING

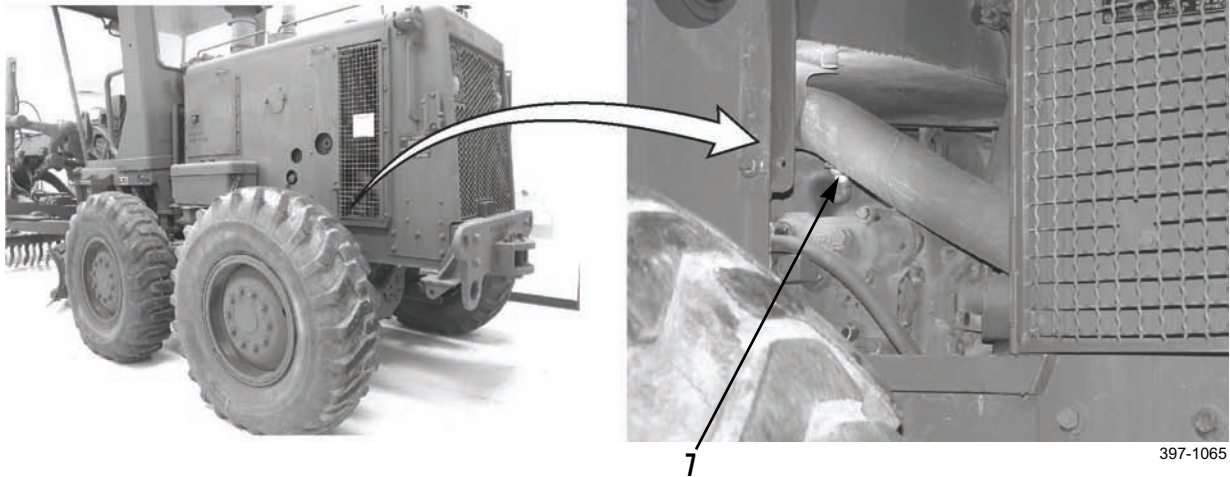1. Install new breather (7) on top of transmission.



397-1065

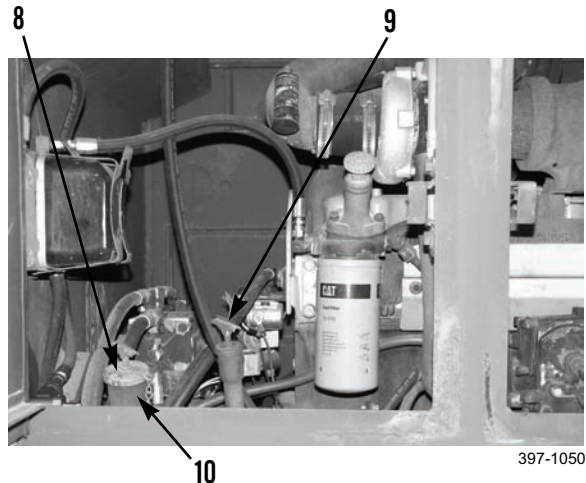2. Remove transmission/differential fill cap (8).
3. Add oil to transmission/differential through fill tube (10). See *Preventive Maintenance Checks and Services* for transmission/differential oil capacity (WP 0022 00).
4. Check oil level with dipstick (9). Oil should be at COLD SAFE START mark.
5. Install transmission/differential fill cap (8).
6. Close left side screen door (WP 0055 00).
7. Close right side engine doors (TM 5-3805-261-10).
8. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
9. Operate machine until transmission is at normal operating temperature (TM 5-3805-261-10).
10. Open right side engine doors (TM 5-3805-261-10).
11. With engine at low idle, check oil level with dipstick (9). Oil should be between ADD and FULL marks.
12. If necessary, remove fill cap (8) and add oil until level is at FULL mark.
13. Install fill cap (8) and shut down engine.



397-1050

14. Inspect for oil leaks.
15. Close right side engine doors (TM 5-3805-261-10).
16. Close left side screen door (WP 0051 00).

END OF WORK PACKAGE

TRANSMISSION MODULATION CONTROL MAINTENANCE**0148 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation, Adjustment

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

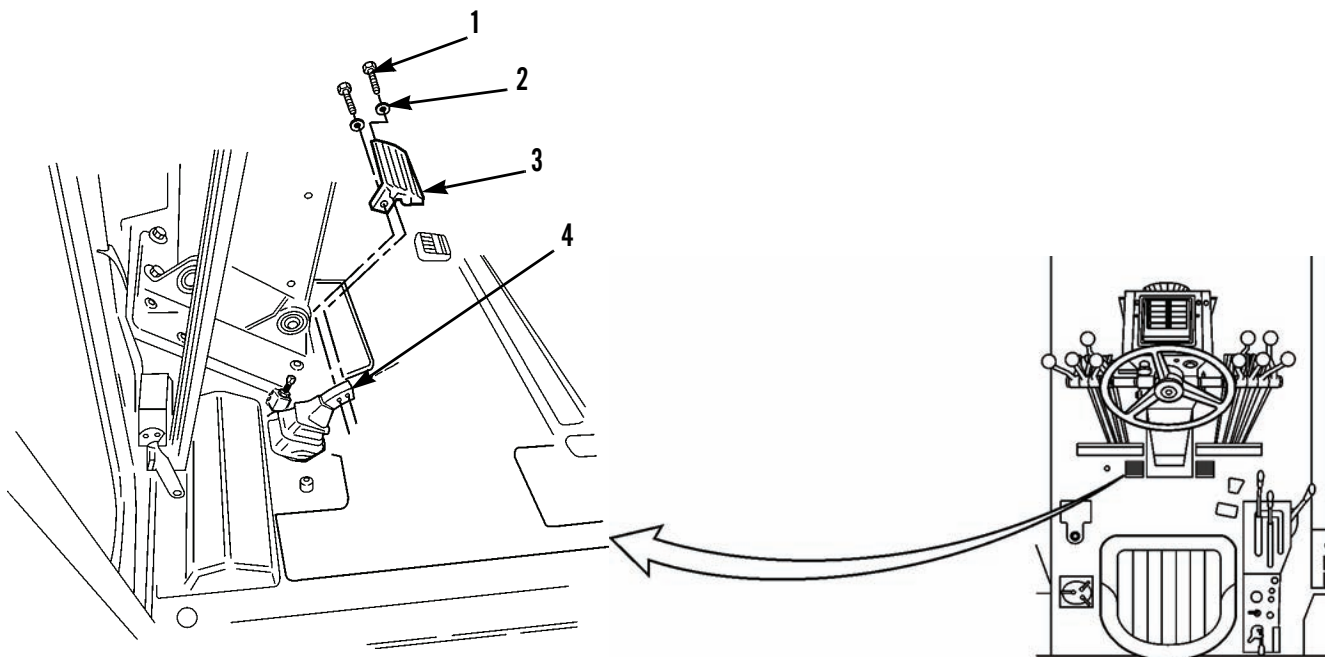
Battery disconnect switch in OFF position (TM 5-3805-261-10)

NOTE

Enclosed cab shown. Procedure is identical for all models.

REMOVAL

1. Remove two screws (1), washers (2), and pedal (3) from lever (4).




397-435


REMOVAL - CONTINUED**NOTE**

Washer is attached to boot with adhesive. Do not separate washer from boot unless replacement of either part is necessary.

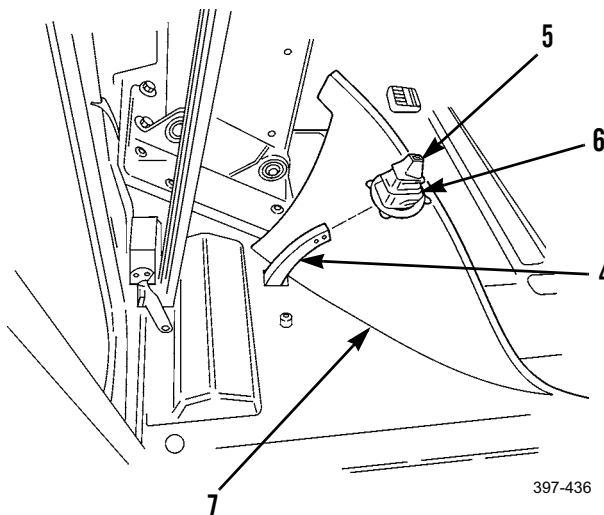- Lift up left-front corner of rubber floor mat (7), remove boot (5) and washer (6) assembly from lever (4) and return floor mat to original position.



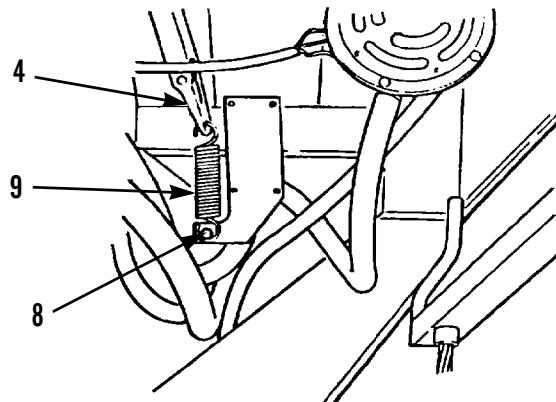- Remove lower end of spring (9) from bolt (8) fastened to cab floor frame weldment on outside of machine, under left side of cab.
- Remove upper end of spring (9) from lever (4) and remove lever.

**CLEANING AND INSPECTION**

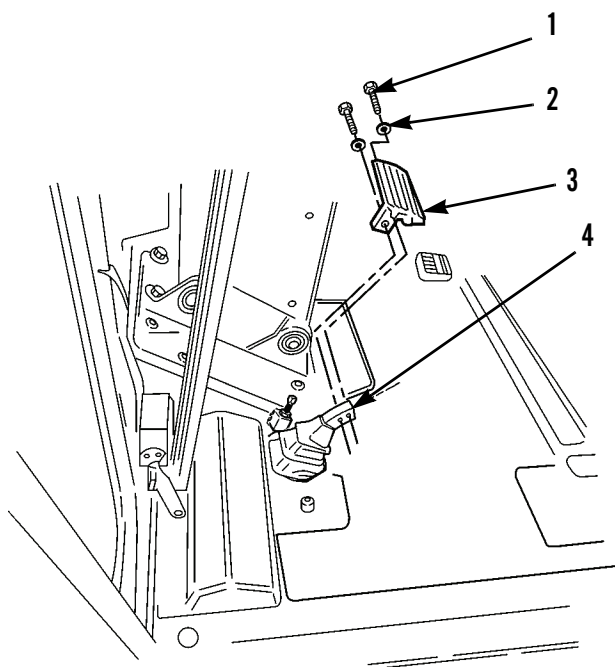
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

- Install lever (4) and connect upper end of spring (8) to lever.
- Install lower end of spring (9) on bolt (8) fastened to cab floor frame weldment on outside of machine, under left side of cab.
- If boot (5) or washer (6) required replacement, attach boot (5) to washer (6) with adhesive.
- Lift up left-front corner of rubber floor mat (7), install boot (5) and washer (6) assembly over lever (4) and return floor mat to original position.

INSTALLATION - CONTINUED


5. Install pedal (3), two washers (2), and screws (1) to lever (4).



397-435

ADJUSTMENT

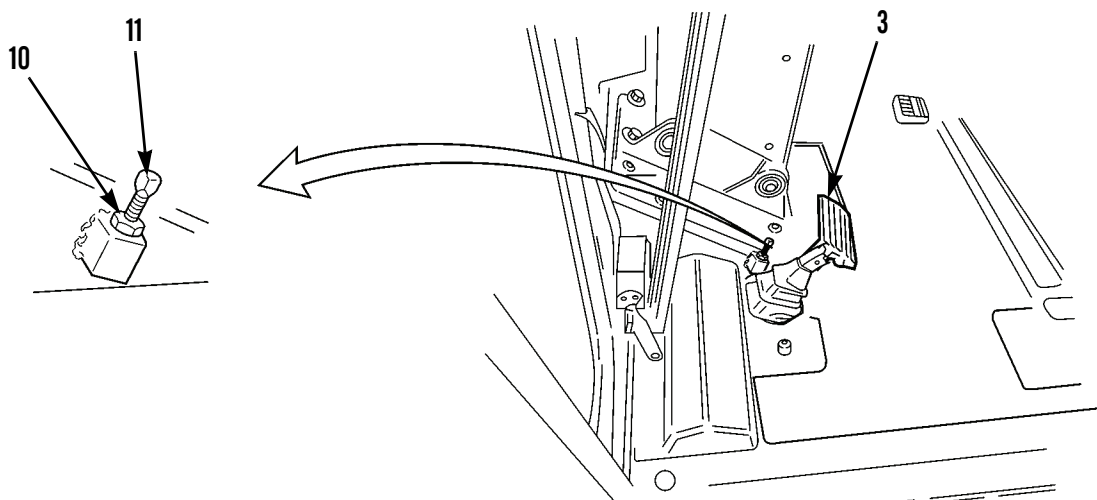1. Loosen nut (10) and turn bolt (11) to right until bottomed out.




397-438

ADJUSTMENT - CONTINUED

WARNING


Adjustment must be made with engine running. Keep all personnel away from machine. Allow only operator on machine. Make sure parking brake is applied. Failure to follow this procedure may cause injury.

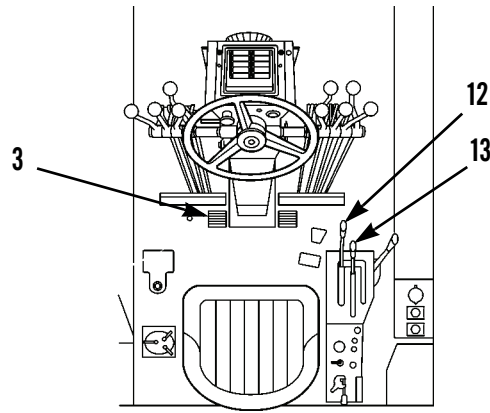2. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
3. Fully depress pedal (3) and hold down until step 5 is completed.
4. Pull lever (13) backward to OFF position to release parking brake.
5. Move lever (12) backward to first speed.
6. Release pedal (3) slowly until wheels start to turn, then depress until wheels stop. Hold pedal in this position.



397-435NL

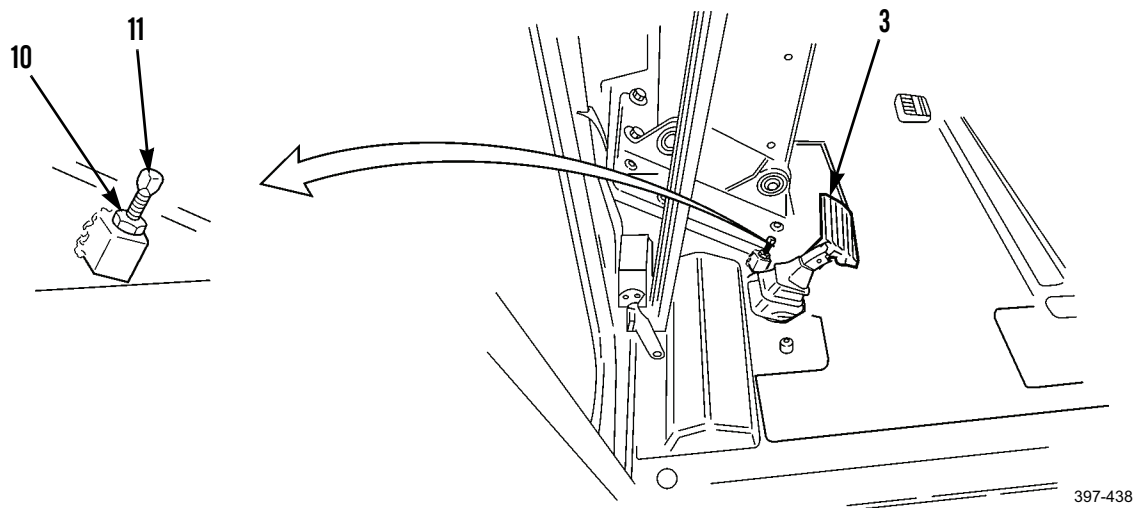7. Move lever (12) forward to NEUTRAL position.
8. Turn bolt (11) to left until head of bolt contacts pedal (3). Back off one complete turn.
9. Tighten nut (10) to secure bolt (11).
10. Depress pedal (3) until contact is made with bolt (11). Hold pedal down.
11. Move lever (12) to all forward and reverse speeds. If wheels do not turn, go to step 12. If wheels turn, repeat steps 5 through 10 until proper adjustment is achieved.
12. Stop engine.
13. Release pedal (3).



397-438

END OF WORK PACKAGE

TRANSMISSION MODULATION CONTROL HOUSING REPLACEMENT

0149 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Arbor press, 1/2-ton capacity

Materials/Parts

Antiseize compound (Item 6, WP 0349 00)

Grease, GAA (Item 17, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Gasket

Lockwasher (2)

References

TM 9-214

WP 0020 00

WP 0150 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

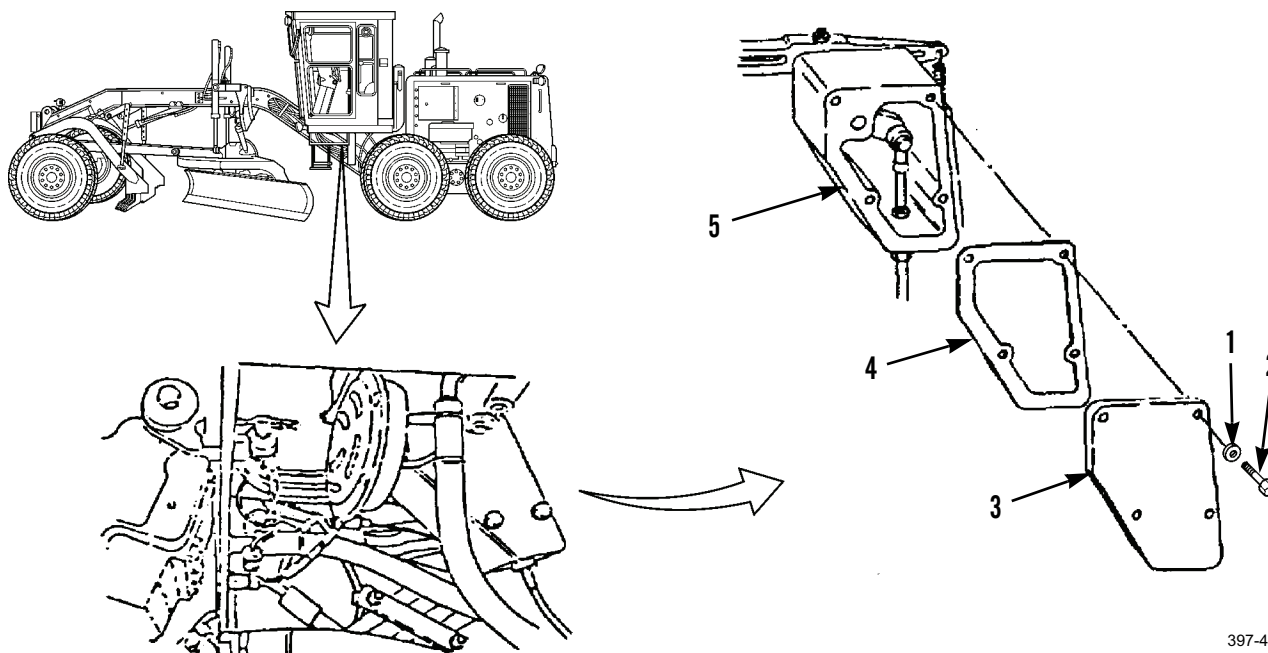
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL


1. Remove four bolts (2), washers (1), cover (3), and gasket (4) from housing (5). Discard gasket.




397-440

REMOVAL - CONTINUED

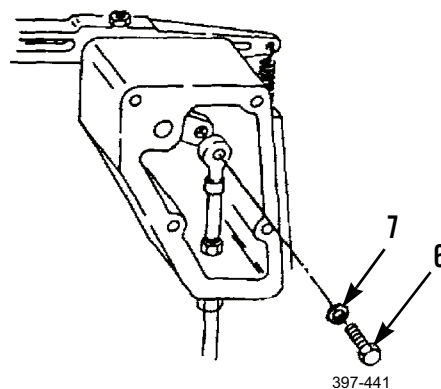
2. Remove bolt (6) and lockwasher (7). Discard lockwasher.



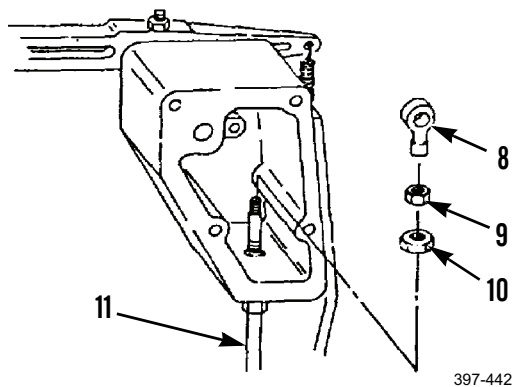3. Remove rod end (8) and nuts (9 and 10) from control assembly (11).



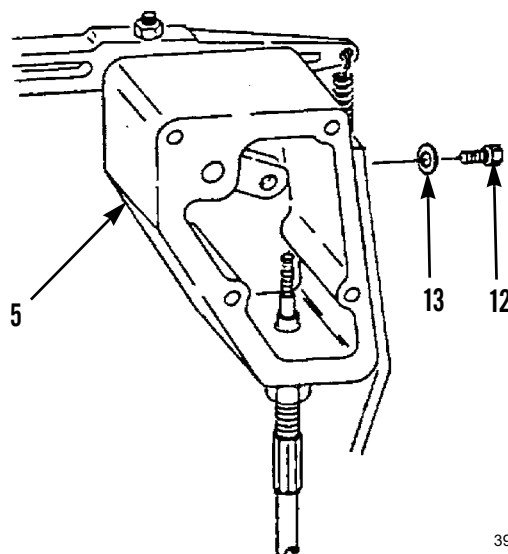4. Remove four bolts (12) and washers (13) securing housing (5) to bracket of cab floor weldment.




REMOVAL - CONTINUED

NOTE


Lever is keyed to shaft and will come loose as housing is removed.

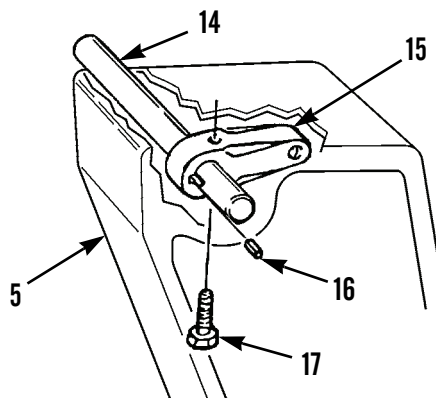5. Remove bolt (17), lever (15), key (16), and housing (5) from shaft (14).



397-443

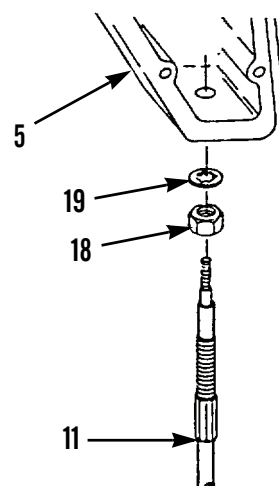6. Loosen nut (18) and disconnect control assembly (11) from housing (5).
7. Remove lockwasher (19) and nut (18) from control assembly (11). Discard lockwasher.




397-446

NOTE

Do not remove bearings unless inspection shows replacement is necessary (TM 9-214).

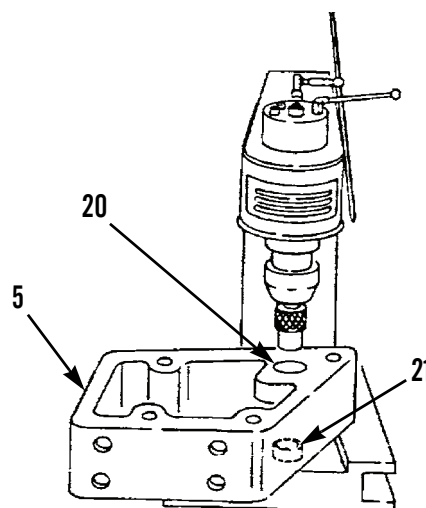8. Using an arbor press, remove bearings (20 and 21) from housing (5).




397-447

REMOVAL - CONTINUED**NOTE**

Lever is keyed to shaft.

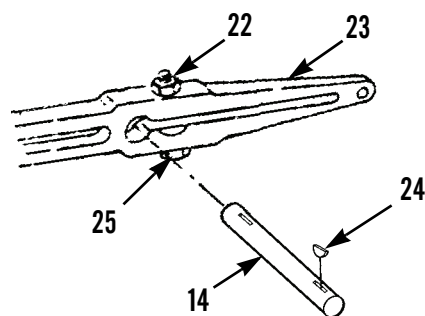9. Remove nut (22), bolt (25), and shaft (14) from lever (23).
10. Remove key (24) from shaft (14).




397-448

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

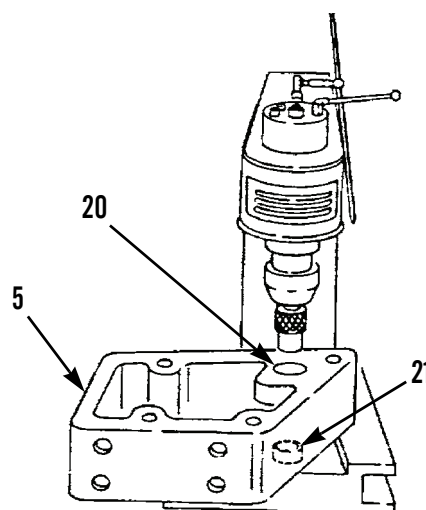11. Pack rollers of bearings (21 and 20) with GAA grease.
12. Coat outside of bearings (21 and 20) with antiseize compound.
13. Using an arbor press, install bearings (21 and 20) in housing (5).



397-447

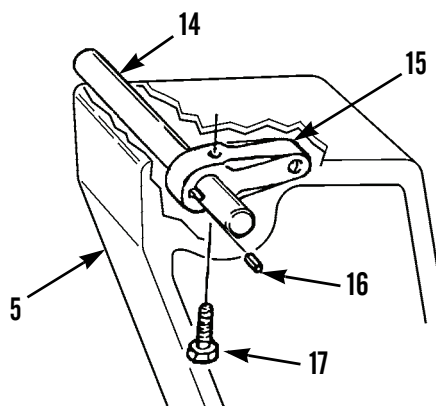
14. Install key (16) on shaft (14).
15. Position lever (15) inside housing (5) and install shaft (14). End of shaft should be positioned 0.098 in. (2.49 mm) below cover mounting surface.
16. Install bolt (17) on shaft (14).



397-443


INSTALLATION - CONTINUED

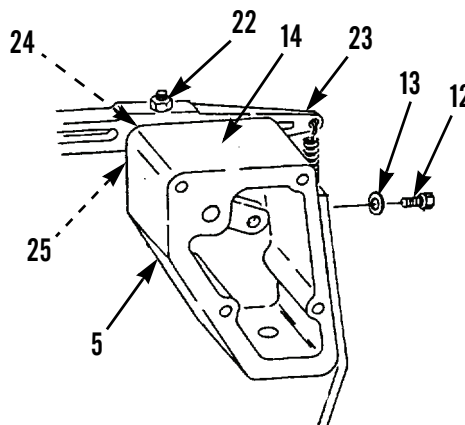17. Install key (24) on shaft (14).
18. Install shaft (14), bolt (25), and nut (22) on lever (23).
19. Install four washers (13) and bolts (12) securing housing (5) to bracket of cab floor weldment.




397-444

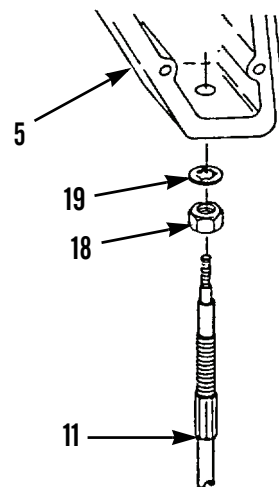20. Install nut (18) and new lockwasher (19) on control assembly (11).
21. Connect control assembly (11) to housing (5) and tighten nut (18).



397-446

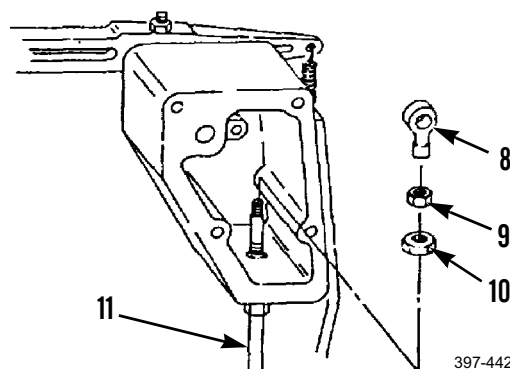
22. Install nuts (10 and 9) and rod end (8) on control assembly (11).




397-442

INSTALLATION - CONTINUED

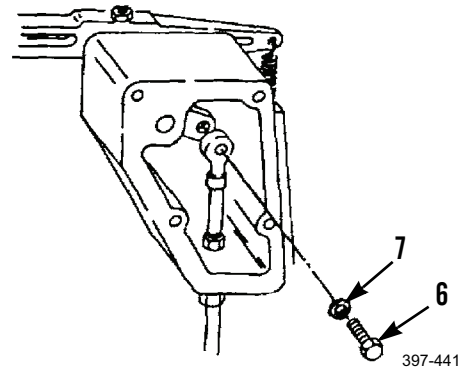23. Install new lockwasher (7) and bolt (6).



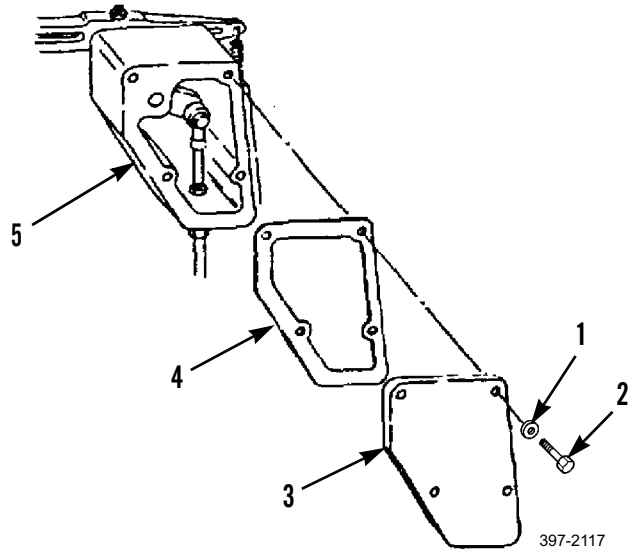24. Install new gasket (4), cover (3), four washers (1), and bolts (2) to housing (5).



25. For adjustment of control assembly, refer to WP 0150 00.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Transmission Direction Control Adjustment, Transmission Speed Control Adjustment, Transmission Modulation Control Adjustment

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Wood block (2 x 4 in.)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Gasket (2)

Lockwasher (3)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

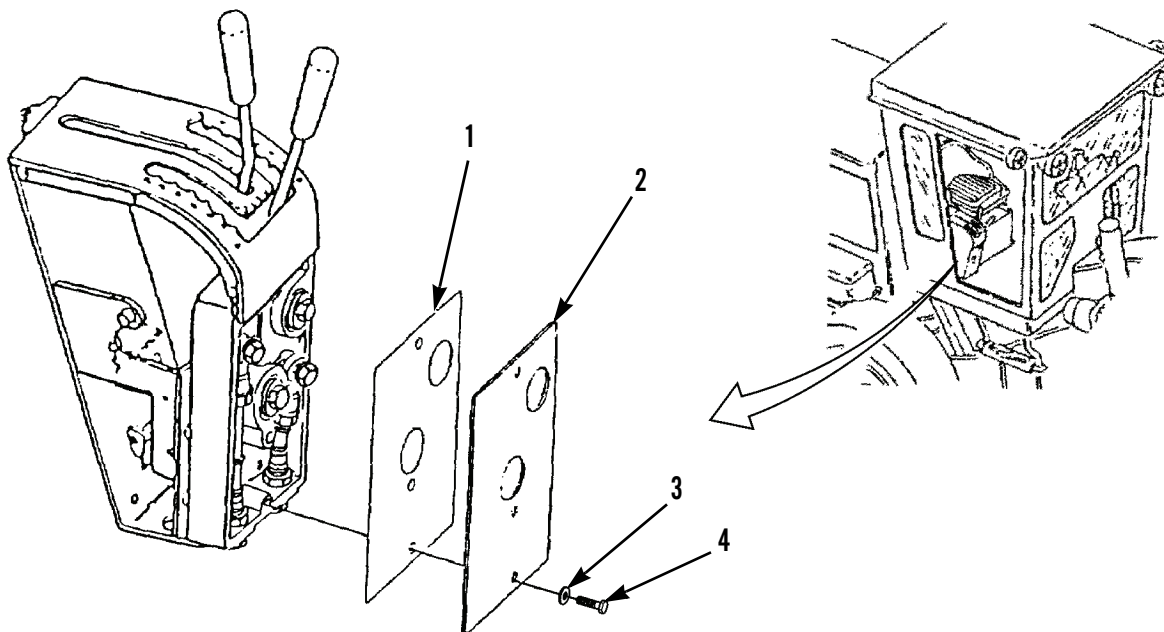
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left and right operator's console plates removed (WP 0193 00)

TRANSMISSION DIRECTION CONTROL ADJUSTMENT


1. Remove three bolts (4), washers (3), cover (2), and gasket (1). Discard gasket and remove all gasket material from mounting surfaces.



397-450


TRANSMISSION DIRECTION CONTROL ADJUSTMENT - CONTINUED

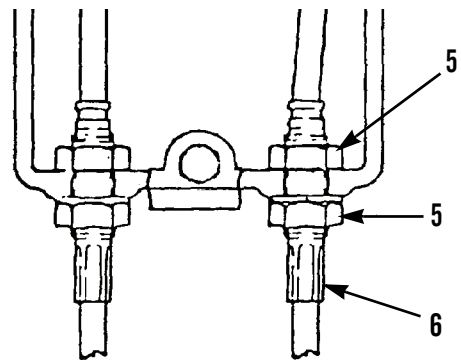2. Adjust two nuts (5) so the extension of threads on both ends of cable housing (6) is the same.



397-451

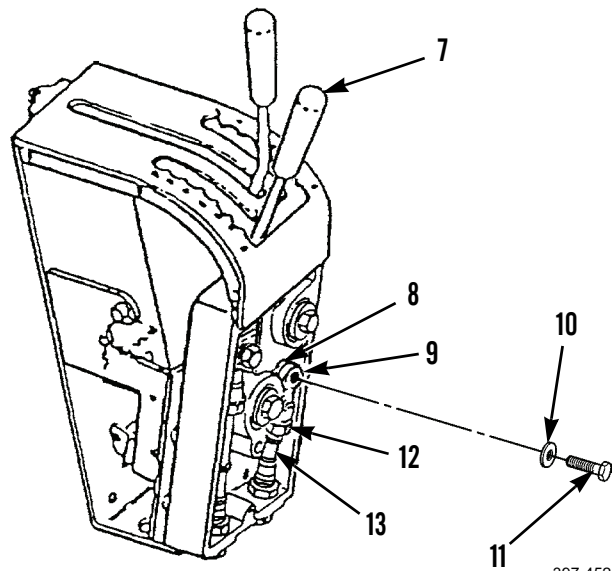
3. Shift transmission control lever (7) to REVERSE-NEUTRAL position.
4. Remove bolt (11) and lockwasher (10). Discard lockwasher.
5. Extend control cable (13). Pull up on rod end (9) as far as control cable will allow.
6. Loosen nut (12).
7. Adjust rod end (9) by threading up or down on control cable (13). Align hole in rod end with hole in lever (8).
8. Tighten nut (12).



397-452


TRANSMISSION DIRECTION CONTROL ADJUSTMENT - CONTINUED

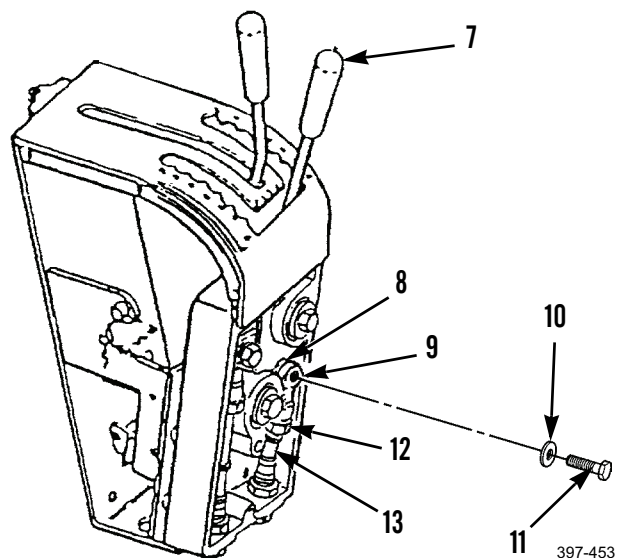9. Shift transmission control lever (7) to FORWARD-NEUTRAL position.
10. Retract control cable (13) by pushing down on rod end (9) as far as control cable will allow.
11. Inspect rod end (9) and lever (8) to see if hole in rod end aligns with hole in lever. If holes are not aligned, measure and record the distance between them.
12. Loosen nut (12).
13. Adjust rod end (9). Thread rod end on control cable (13) half the distance measured in step 11.
14. Install new lockwasher (10) and bolt (11).
15. Tighten nut (12).




TRANSMISSION SPEED CONTROL ADJUSTMENT

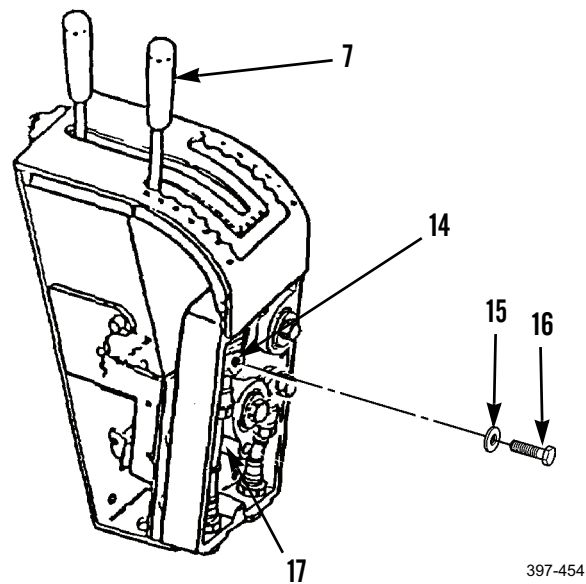1. Remove bolt (16) and lockwasher (15). Discard lockwasher.
2. Retract control cable (17) by pushing down on rod end (14) as far as control cable will allow. The selector spool in the transmission will be in SIXTH speed.




TRANSMISSION SPEED CONTROL ADJUSTMENT - CONTINUED

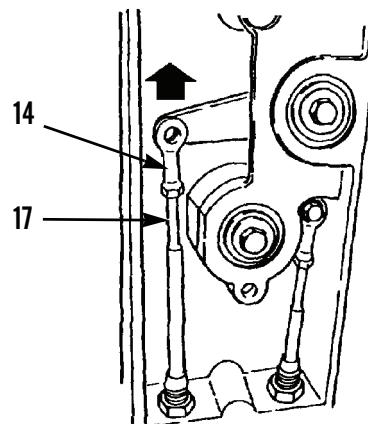3. Extend control cable (17) by pulling up on rod end (14) until detents for FIFTH, FOURTH and THIRD speeds are felt. The selector spool will be in THIRD speed.



397-455

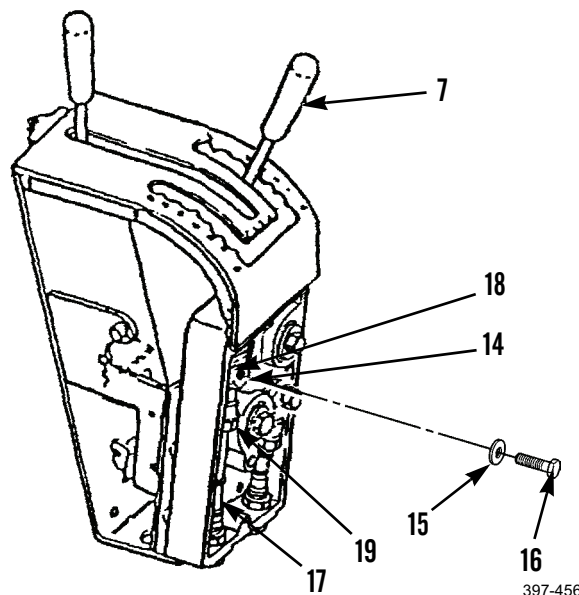
4. Shift transmission control lever (7) to THIRD-FORWARD position. Transmission control lever must be in center of notch.
5. Loosen nut (19).
6. Adjust rod end (14) by threading up or down on control cable (17). Align hole in rod end with hole in lever (18).
7. Install new lockwasher (15) and bolt (16).
8. Tighten nut (19).
9. Shift transmission control lever (7) to all speeds in FORWARD and REVERSE positions. A detent must be felt for all speed positions.



397-456


TRANSMISSION SPEED CONTROL ADJUSTMENT - CONTINUED

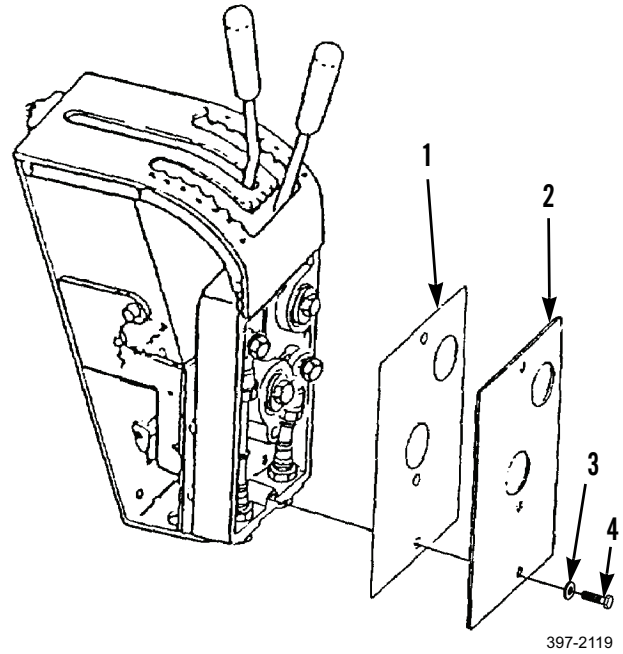10. Install new gasket (1), cover (2), three washers (3), and bolts (4).




TRANSMISSION MODULATION CONTROL ADJUSTMENT

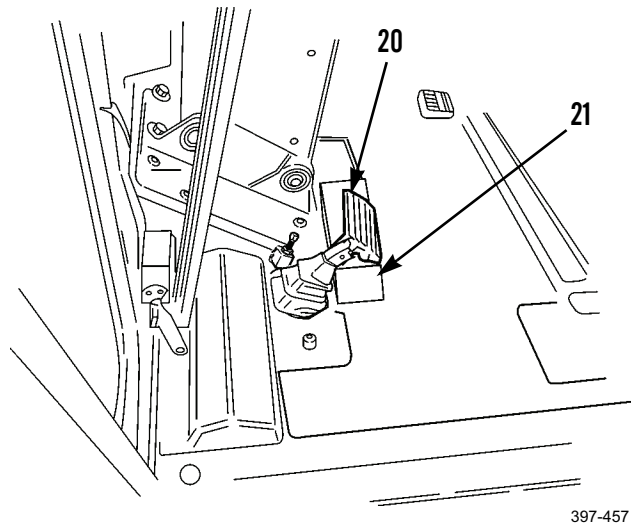1. Place wood block (21) between pedal (20) and cab floor to keep pedal in raised position.




TRANSMISSION MODULATION CONTROL ADJUSTMENT - CONTINUED

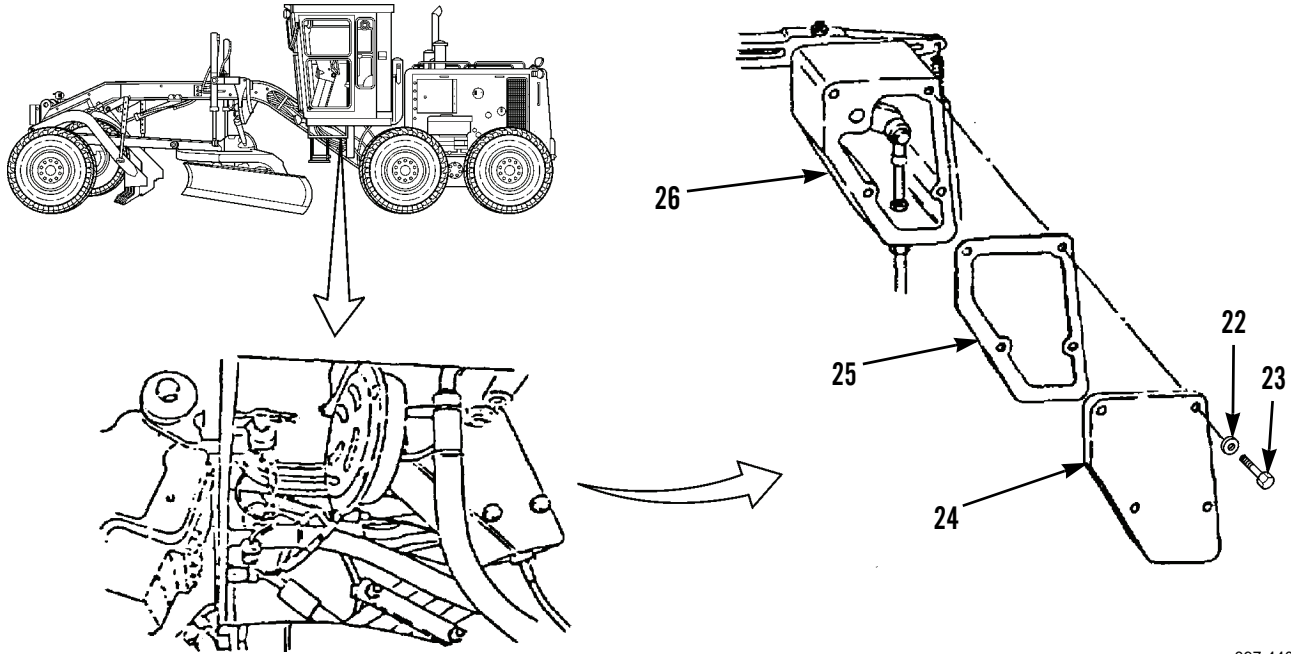2. Remove four bolts (23), washers (22), cover (24), and gasket (25) from housing (26). Discard gasket and remove all gasket material from mounting surfaces.




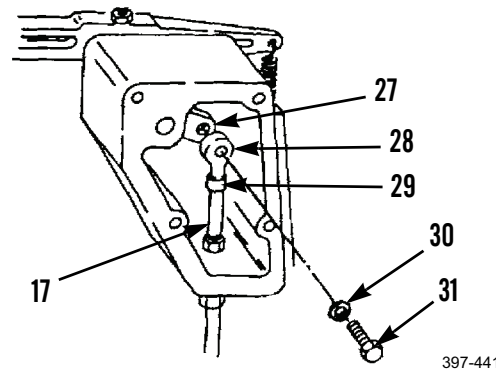3. Remove bolt (31) and lockwasher (30). Discard lockwasher.
4. Push down rod end (28) until a noticeable resistance is felt in the control cable (17).
5. Loosen nut (29).
6. Rotate rod end (28) in half-turn increments until hole in rod end aligns with hole in lever (27).
7. Install new lockwasher (30) and bolt (31).
8. Tighten nut (29).
9. Install new gasket (25), cover (24), four washers (22), and bolts (23) on housing (26).



TRANSMISSION MODULATION CONTROL ADJUSTMENT - CONTINUED

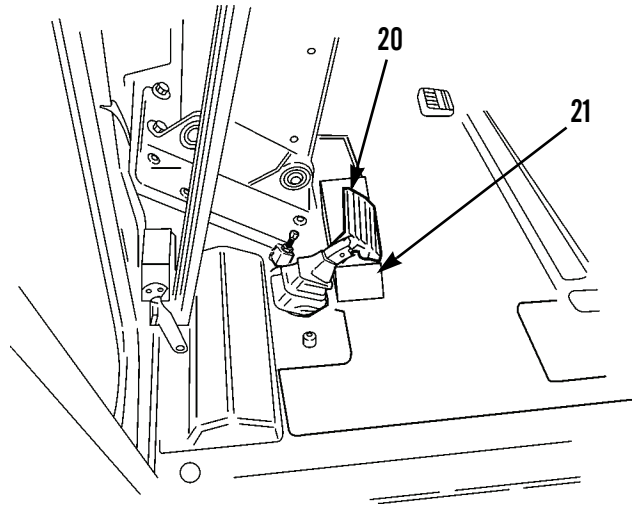10. Remove wood block (21) from between pedal (20) and cab floor.



397-457

11. Install left and right operator's console plates (WP 0193 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

Pin, cotter

References

WP 0020 00

WP 0150 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Switch panel and mounting removed (WP 0085 00)

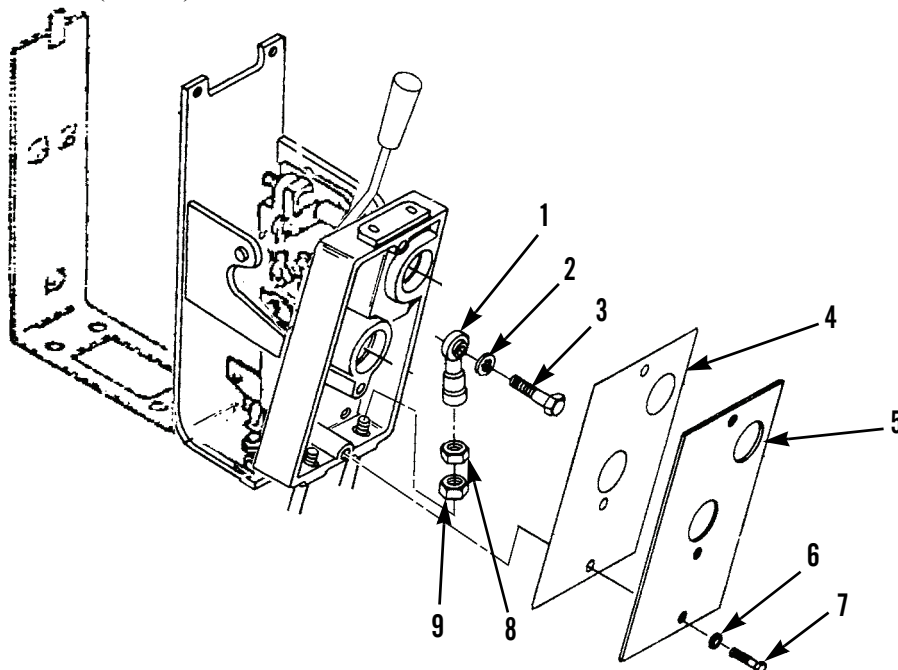
Backup alarm switch removed (WP 0122 00)

Parking brake air control valve removed (WP 0158 00)

Parking brake control removed (WP 0159 00)

REMOVAL

1. Remove three bolts (7), washers (6), cover (5), and gasket (4). Discard gasket.
2. Loosen nut (8).
3. Remove bolt (3) and washer (2).
4. Remove rod end (1) and nuts (8 and 9).



397-4096

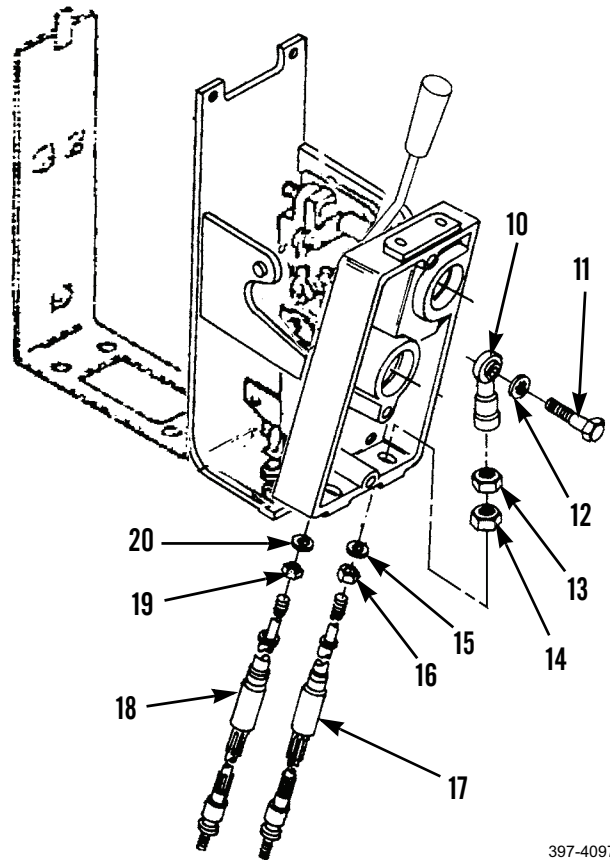
REMOVAL - CONTINUED

5. Loosen nut (13).
6. Remove bolt (11) and washer (12).
7. Remove rod end (10) and nuts (13 and 14).

NOTE


Tag cables before disconnecting to aid in installation.

8. Remove cables (17 and 18) through cab floor.
9. Remove washer (20), nut (19), washer (15), and nut (16).



397-4097

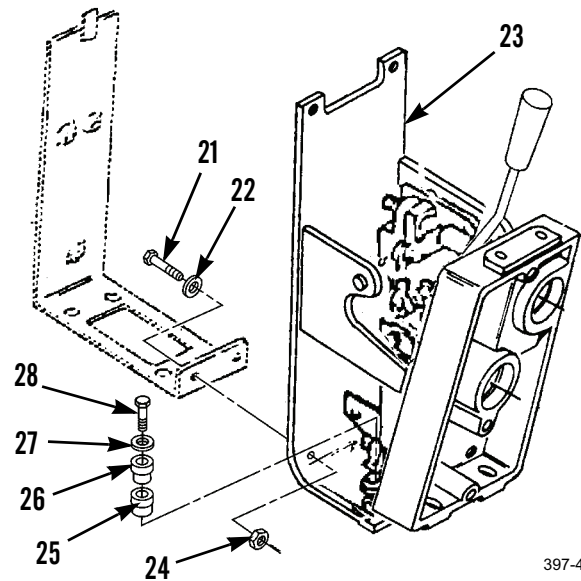
10. Remove two bolts (28), washers (27), spacers (26), and mountings (25) from support (23).
11. Remove two bolts (21), washers (22), and nuts (24).



397-4098


REMOVAL - CONTINUED

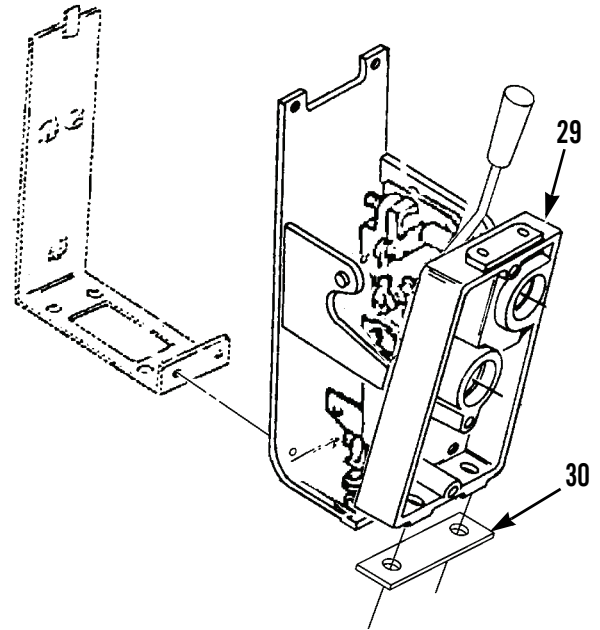12. Remove housing assembly (29) from machine.
13. Remove pad (30).



397-4099

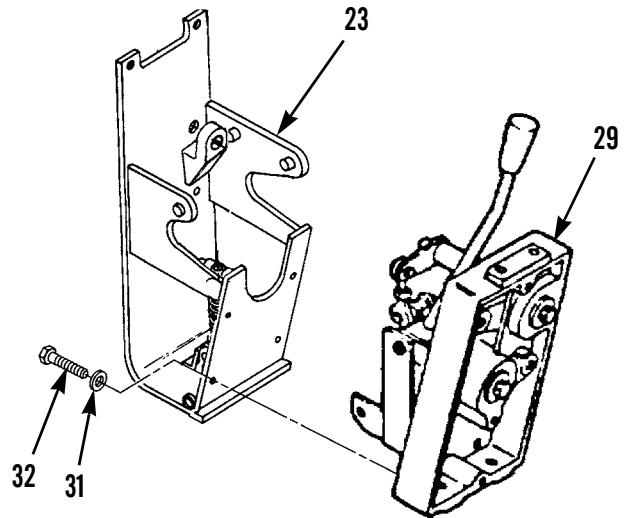
14. Remove four bolts (32) and washers (31).
15. Separate housing assembly (29) from support assembly (23).



397-4100

REMOVAL - CONTINUED

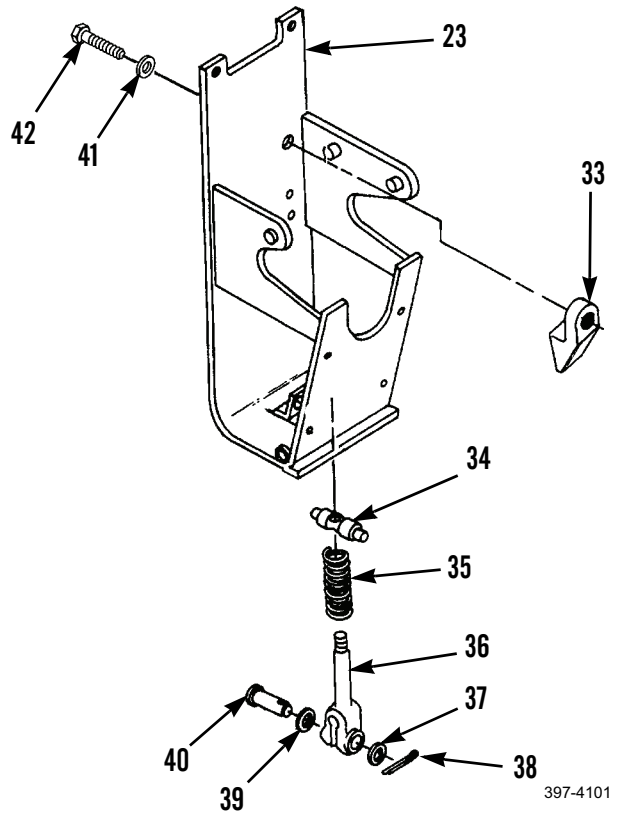
16. Remove pin (34) and spring (35) from support (23).
17. Remove cotter pin (38), washer (37), pin (40), washer (39), and rod (36). Discard cotter pin.
18. Remove two bolts (42), washers (41), and bracket assembly (33) from support (23).



NOTE


Remove bearings only if inspection reveals damage.

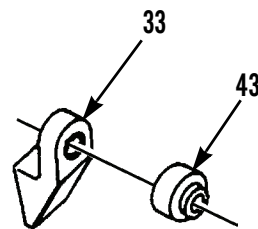19. Remove bearing (43) from bracket (33).




REMOVAL - CONTINUED

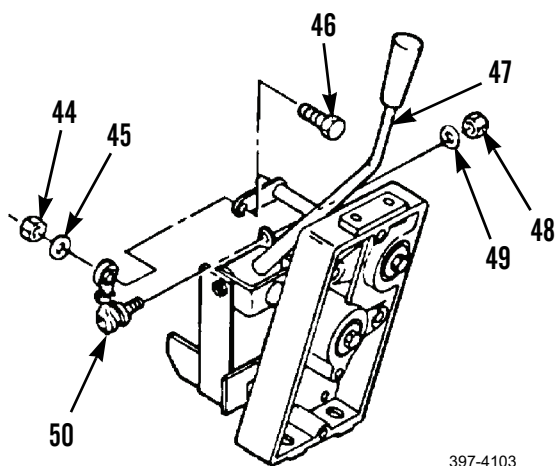20. Remove nut (44), washer (45), and bolt (46).
21. Remove nut (48), washer (49), and rod (50) assembly from lever (47).




397-4103

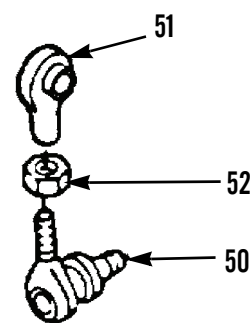22. Loosen nut (52).
23. Remove rod end (51) and nut (52) from rod (50).



397-4104

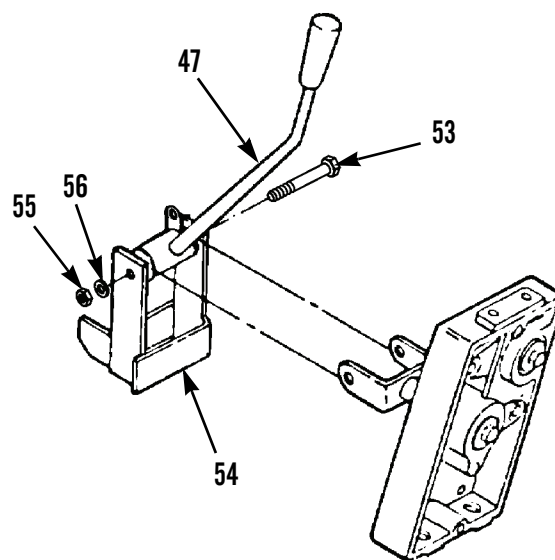24. Remove bolt (53), nut (55), washer (56), and lever assembly (47) from plate (54).




397-4105

REMOVAL - CONTINUED

NOTE


Remove bearings only if inspection reveals damage.

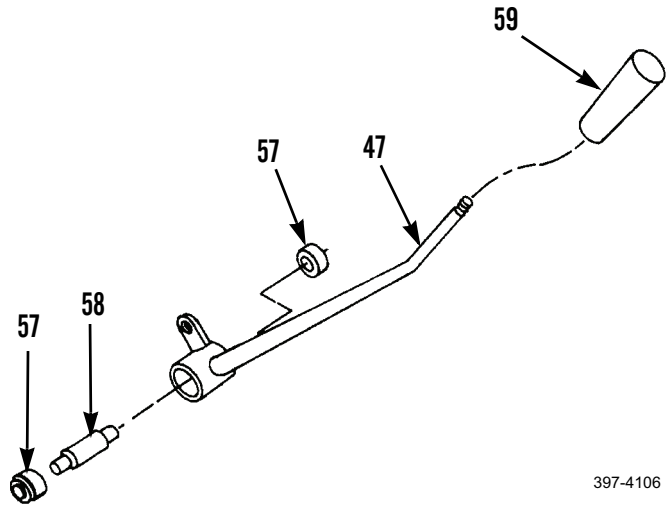- 25. Remove two bearings (57) and shaft (58) from lever (47).
- 26. Remove knob (59).




397-4106

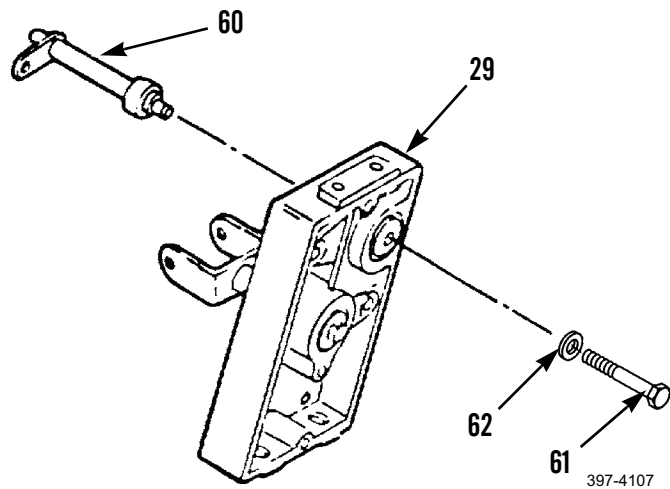- 27. Remove bolt (61) and washer (62).
- 28. Using hammer and punch, drive shaft assembly (60) out of housing (29).



397-4107

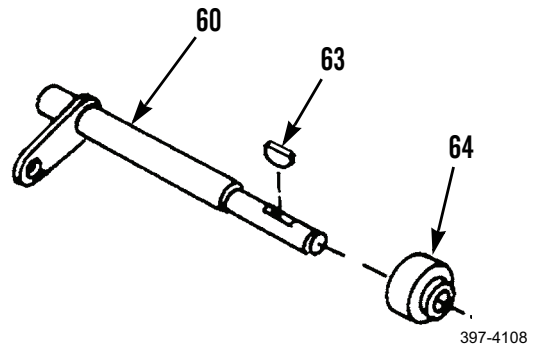
- 29. Remove key (63) and bearing (64) from shaft (60).



397-4108


REMOVAL - CONTINUED

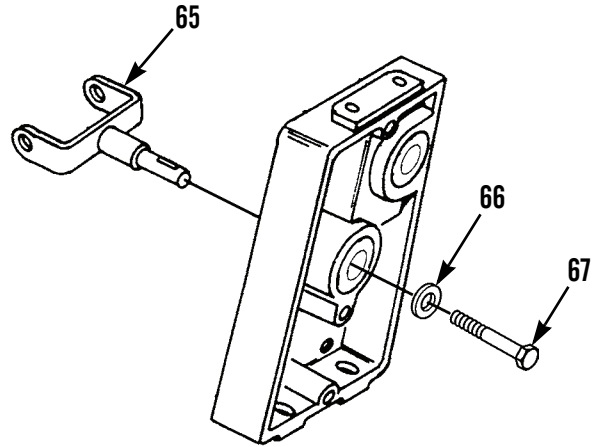30. Remove bolt (67), washer (66), and shaft assembly (65).



397-4109

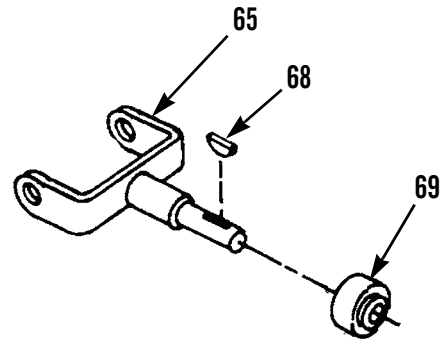31. Remove key (68) and bearing (69) from shaft (65).




397-4110

REMOVAL - CONTINUED**NOTE**

- Tag lever locations in housing to aid in installation.
- Remove bearings only if inspection reveals damage.

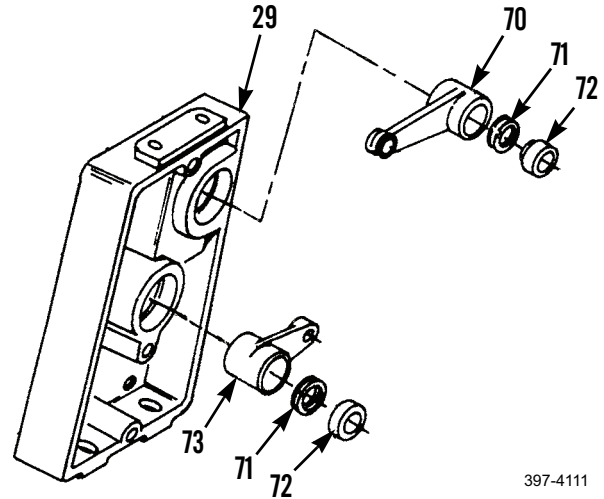32. Remove two bearings (72), rings (71), and levers (70 and 73) from housing (29).




397-4111

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

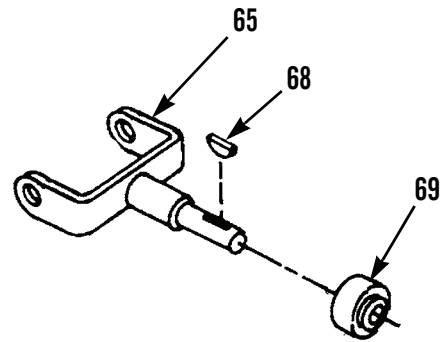
1. Position levers (73 and 70) in housing (29).
2. Install two rings (71) and bearings (72).
3. Install bearing (69) and key (68) on shaft (65).



397-4110


INSTALLATION - CONTINUED

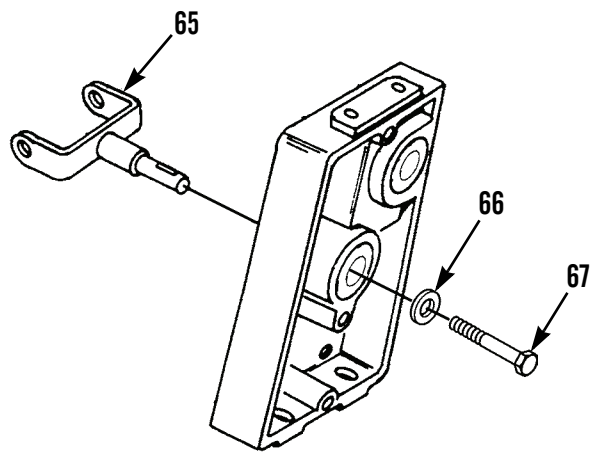4. Install shaft assembly (65).
5. Install washer (66) and bolt (67). Tighten bolt to 25 lb-ft (34 Nm).




397-4109

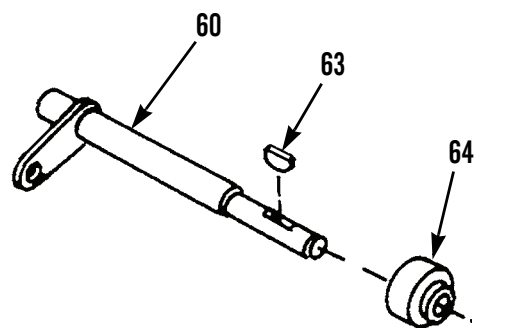6. Install bearing (64) and key (63) on shaft (60).



397-4108

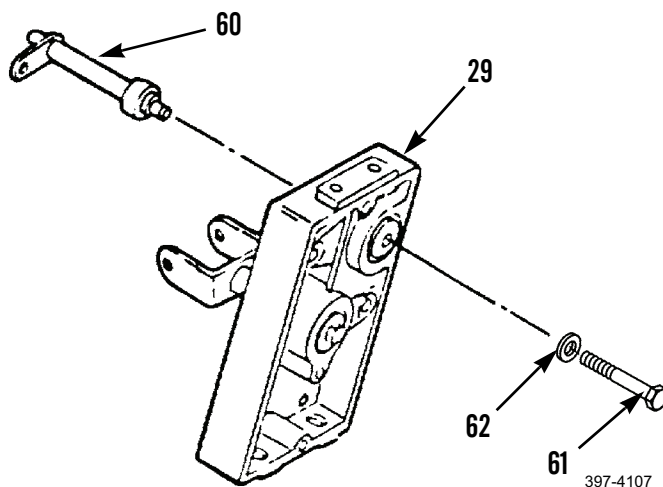
7. Install shaft assembly (60) in housing (29).
8. Install washer (62) and bolt (61). Tighten bolt to 25 lb-ft (34 Nm).




397-4107

INSTALLATION - CONTINUED

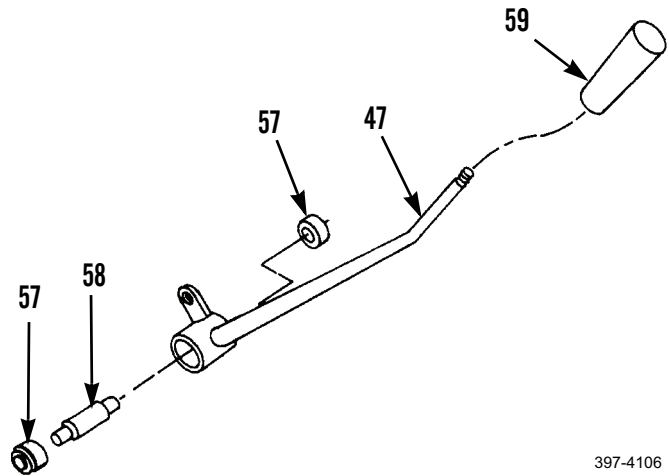
9. Install knob (59) on lever (47).
10. Install shaft (58) and two bearings (57).



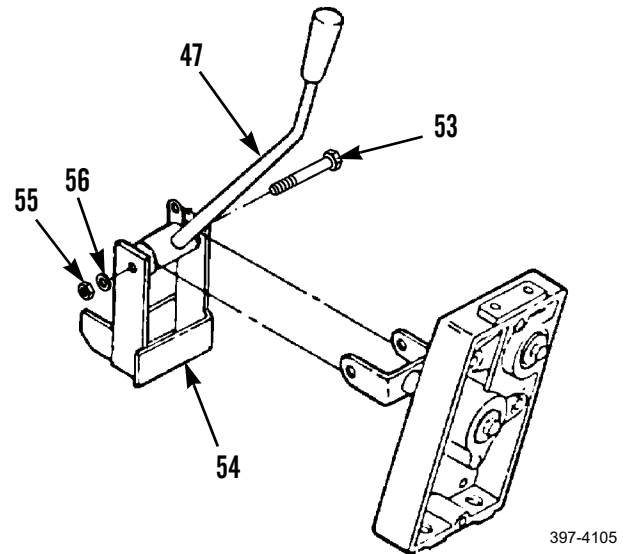11. Install lever assembly (47), washer (56), nut (55), and bolt (53) on plate (54).




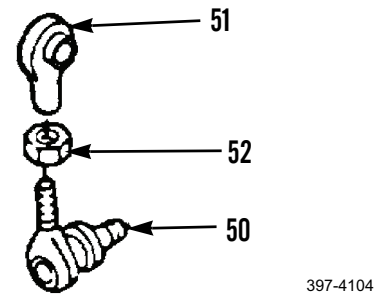12. Install nut (52) and rod end (51) on rod (50).




INSTALLATION - CONTINUED

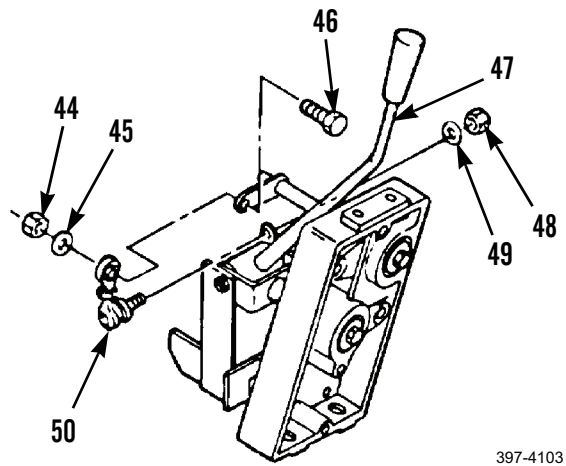13. Install rod assembly (50), washer (49), and nut (48) on lever (47).
14. Install bolt (46), washer (45), and nut (44).




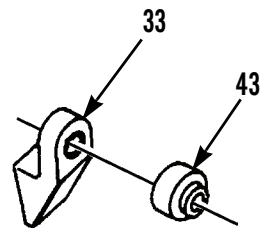15. Install bearing (43) in bracket (33).




INSTALLATION - CONTINUED

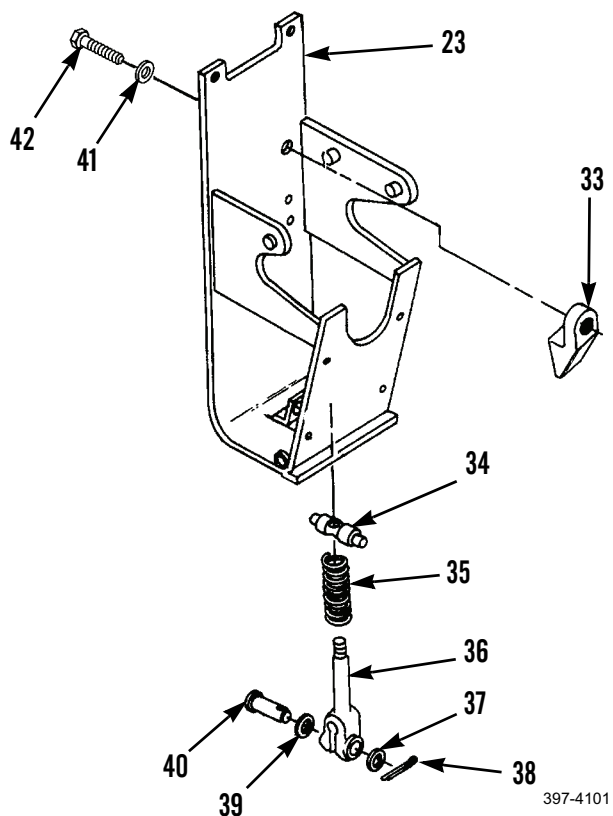16. Install bracket assembly (33), two washers (41), and bolts (42) to support (23).
17. Install rod (36), washer (39), pin (40), washer (37), and new cotter pin (38).
18. Install spring (35) and pin (34).




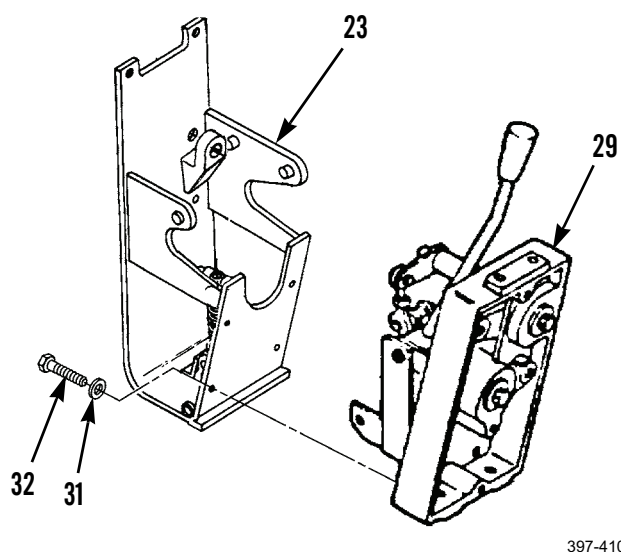19. Install housing assembly (29) to support assembly (23).
20. Install four washers (31) and bolts (32).




INSTALLATION - CONTINUED

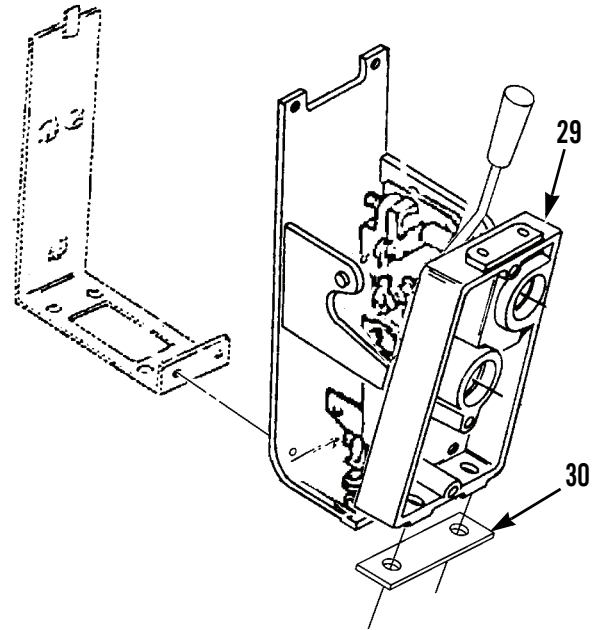21. Position pad (30) and place on cab floor.
22. Position housing assembly (29) on cab floor.



397-4099

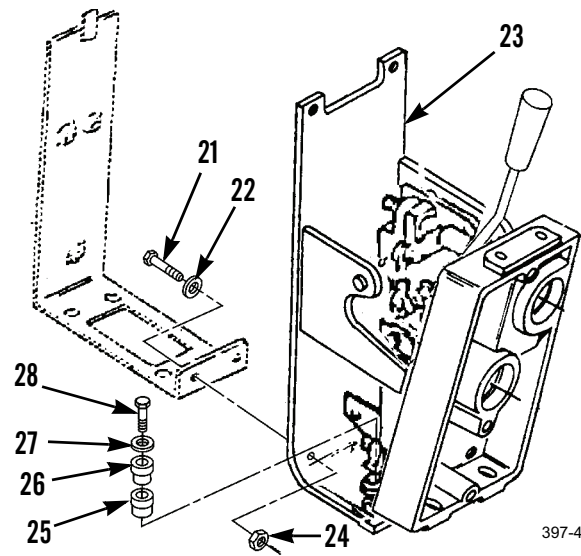23. Install two nuts (24), washers (22), and bolts (21).
24. Install two mountings (25), spacers (26), washers (27), and bolts (28) through support (23).



397-4098

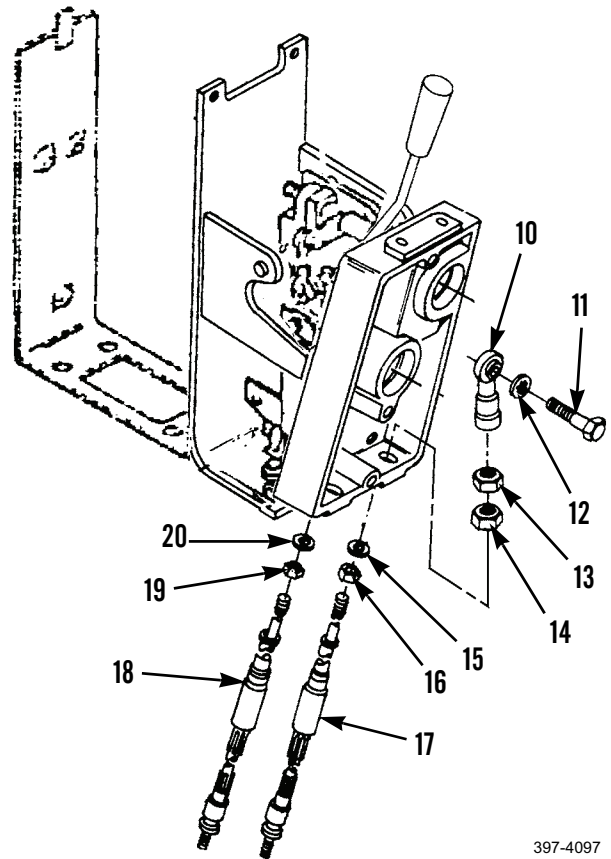
INSTALLATION - CONTINUED

25. Position nut (16), washer (15), nut (19), and washer (20).
26. Position cables (18 and 17) extending up through cab floor.
27. Tighten nuts (19 and 16).

NOTE

Do not tighten nut (13).

28. Install nuts (13 and 14) and rod end (10) on cable (18).
29. Install washer (12) and bolt (11).
30. Tighten nut (13).




397-4097

INSTALLATION - CONTINUED**NOTE**

Do not tighten nut (8).

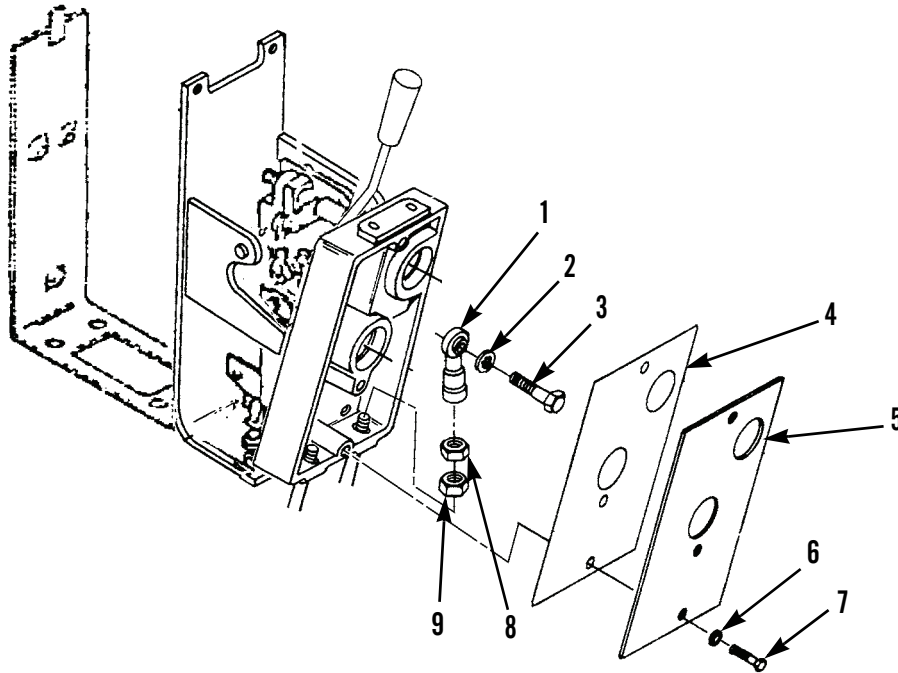31. Install nuts (8 and 9) and rod end (1).
32. Install washer (2) and bolt (3).
33. Tighten nut (8).
34. Install new gasket (4), cover (5), three washers (6), and bolts (7).



397-4096

35. Install parking brake control (WP 0159 00).
36. Install parking brake air control valve (WP 0158 00)
37. Install back-up alarm switch (WP 0122 00)
38. Install switch panel and mounting (WP 0085 00)
39. Adjust controls (WP 0150 00).

END OF WORK PACKAGE

TRANSMISSION CONTROL CABLES REPLACEMENT

0152 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Extractor, tool (Item 24, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

Lockwasher (2)

Packing, preformed (3)

Ring (6)

Seal (3)

Washer, star (2)

References

WP 0020 00

WP 0149 00

WP 0150 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

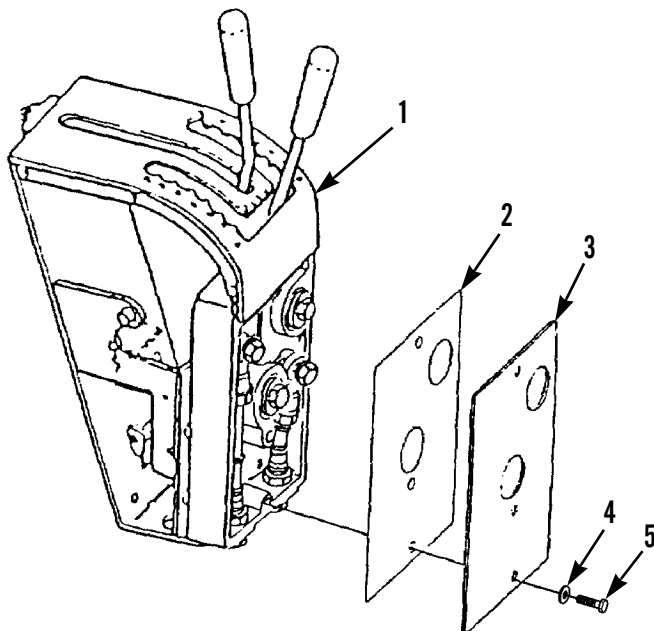
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left and right operator's console plates removed (WP 0193 00)


REMOVAL

1. Remove three bolts (5), washers (4), cover (3), and gasket (2) from front of operator panel console (1). Discard gasket.



397-4112

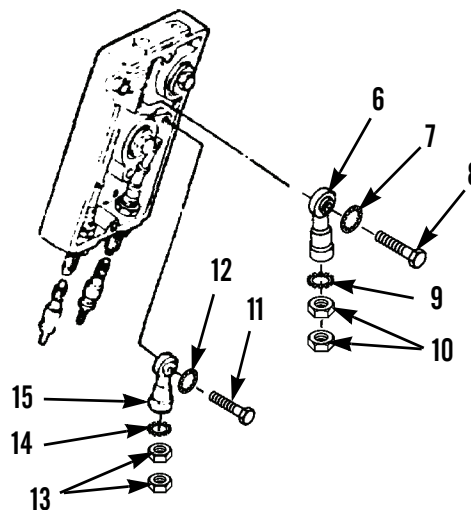2. Loosen nut (13).
3. Remove bolt (11), washer (12), and rod end (15).
4. Remove two nuts (13) and star washer (14). Discard star washer.
5. Loosen nut (10).
6. Remove bolt (8), washer (7), and rod end (6).
7. Remove two nuts (10) and star washer (9). Discard star washer.



397-4113

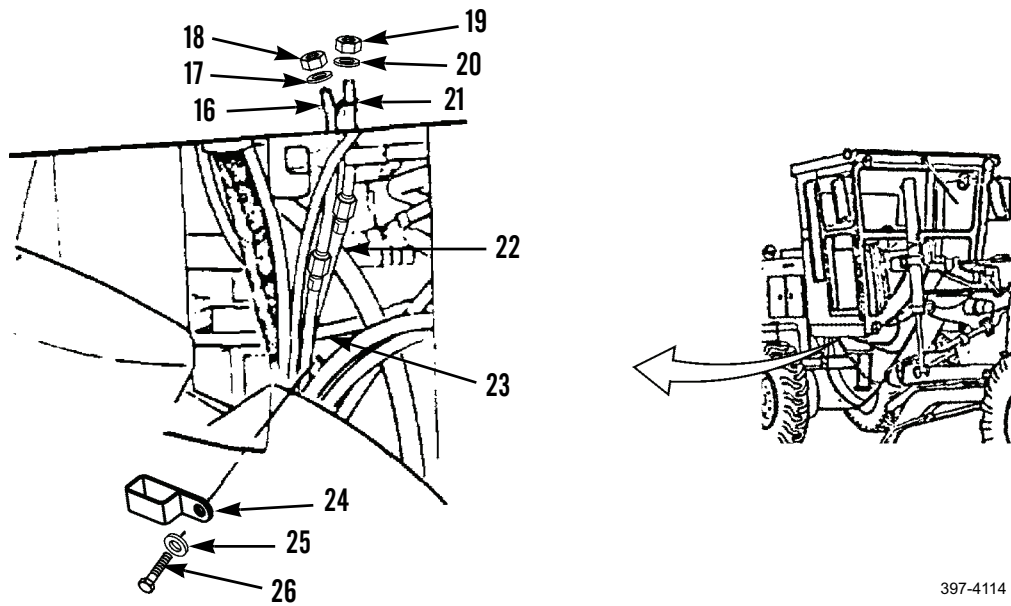
REMOVAL - CONTINUED

8. Remove nut (19), lockwasher (20), nut (18), and lockwasher (17). Discard lockwashers.
9. Remove bolt (26), washer (25), and clip (24) from under right side of cab.

NOTE

Tag cables before disconnecting to aid in installation.


10. Disconnect cables (16 and 21) through cab floor.
11. For CCE and Type I machines, go to step 18.
12. For Type II machine, disconnect cable (16) from cable (23), and disconnect cable bracket (21) from cable (22).




397-4114

REMOVAL - CONTINUED

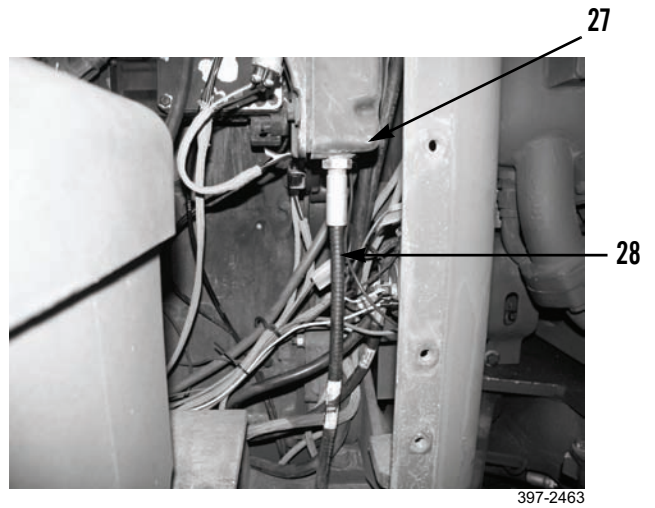13. Disconnect cable (28) from governor control housing (27).




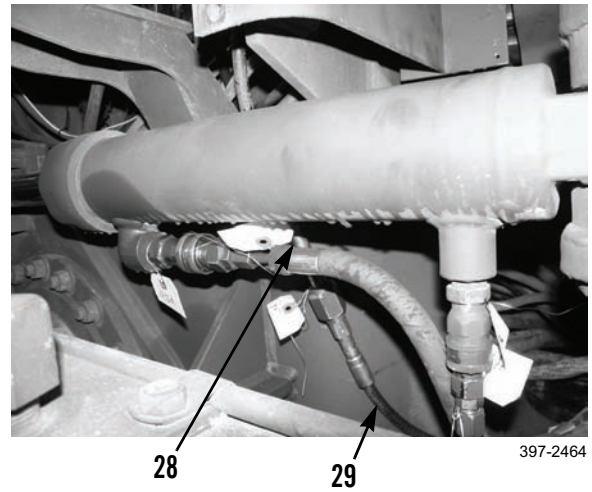14. Disconnect cable (28) from cable (29).




REMOVAL - CONTINUED

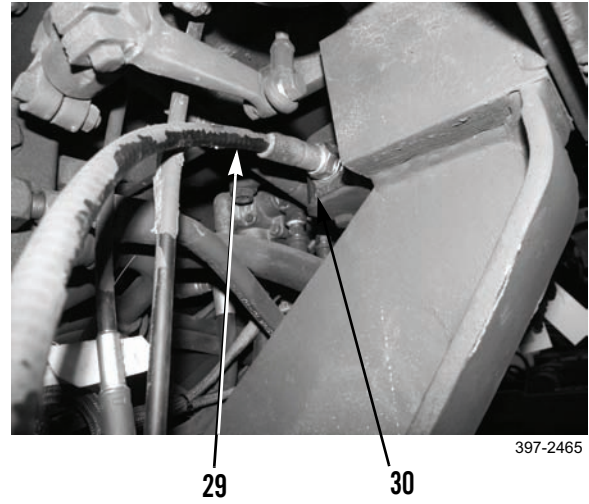15. Disconnect cable (29) from control housing (30).




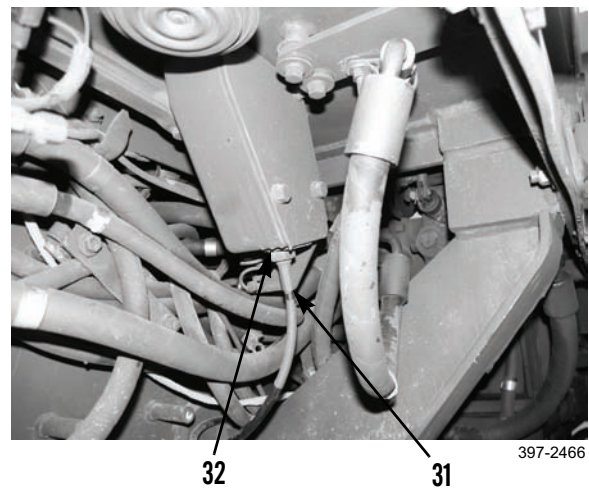16. Disconnect cable (31) from control housing (32).





REMOVAL - CONTINUED

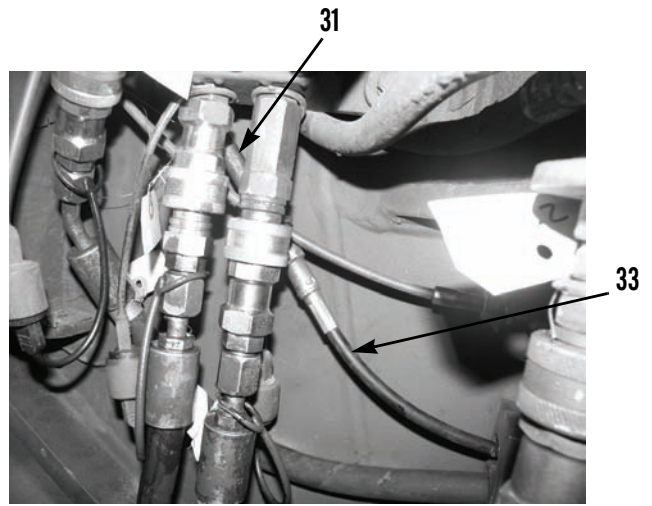17. Disconnect cable (31) from cable (33).



397-2467

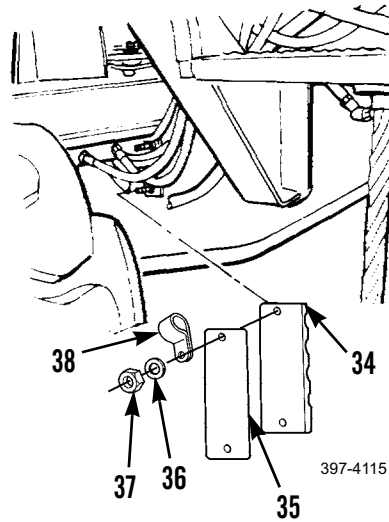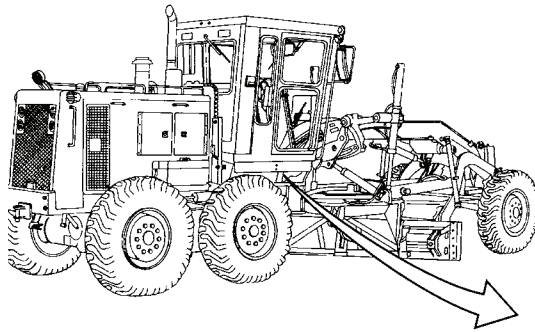
18. Remove two nuts (37) and washers (36).
19. Remove clip (38).
20. Remove plate (35) and clamp (34).



397-4115


REMOVAL - CONTINUED

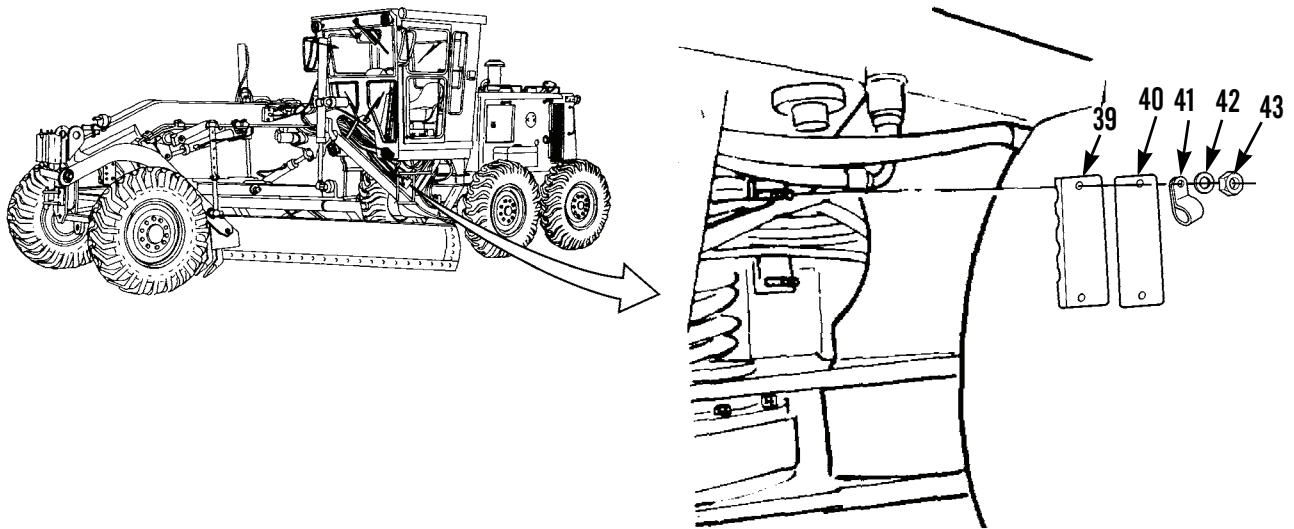21. Remove two nuts (43) and washers (42) from under left-front side of engine compartment.
22. Remove clip (41).
23. Remove plate (40) and clamp (39).
24. Disconnect cable (refer to callout 33 and WP 0149 00) from transmission modulation central housing.



397-4116

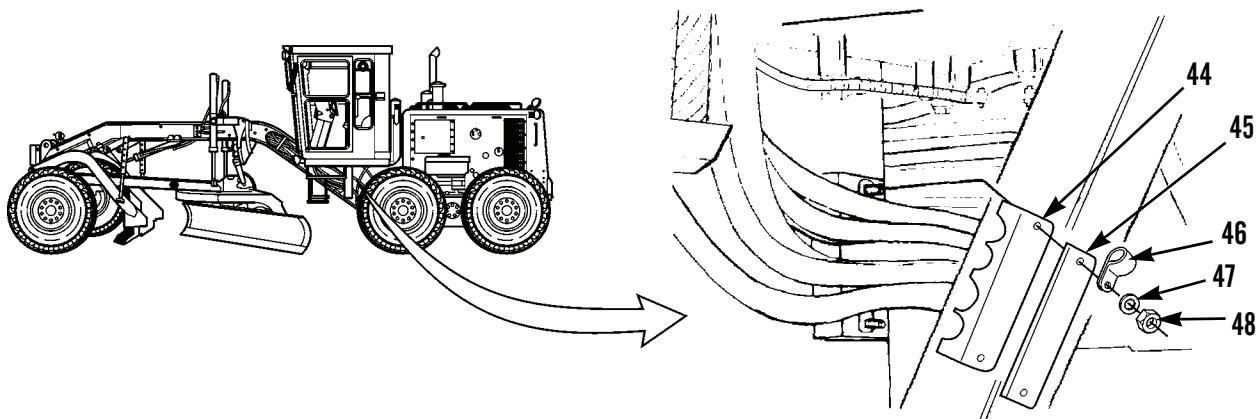
25. Remove two nuts (48) and washers (47) from under left-rear of cab.
26. Remove clip (46).
27. Remove plate (45) and clamp (44).



397-4117


REMOVAL - CONTINUED

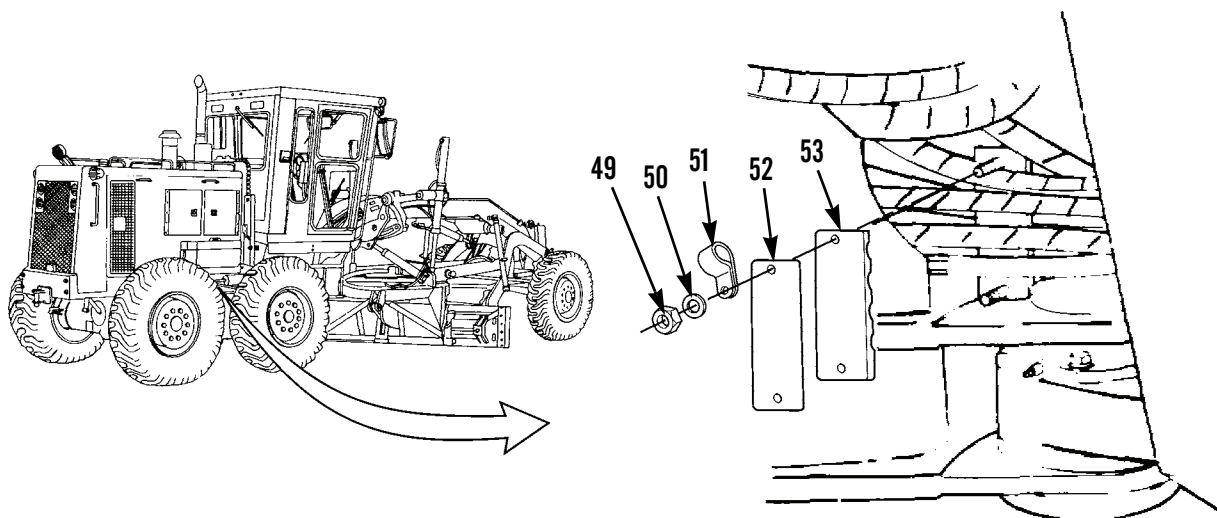28. Remove two nuts (49) and washers (50) from under right-front side of engine compartment.
29. Remove clip (51).
30. Remove plate (52) and clamp (53).



397-4118

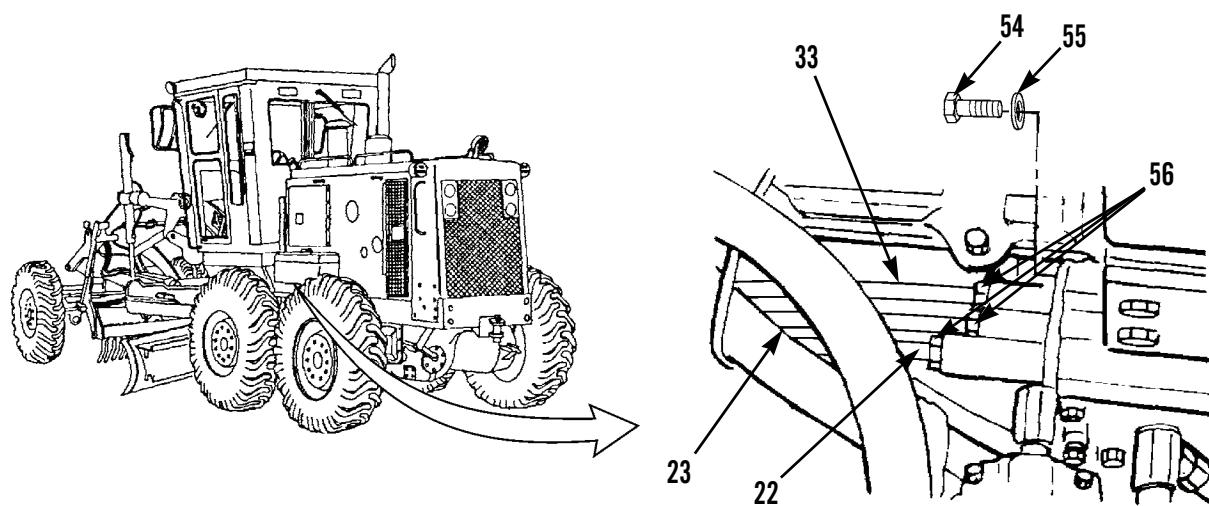
31. Remove two bolts (54) and washers (55) from left-front of transmission in engine compartment.
32. Remove three nuts (56) and slide back on control cables (22, 23, and 33).




397-4119

REMOVAL - CONTINUED

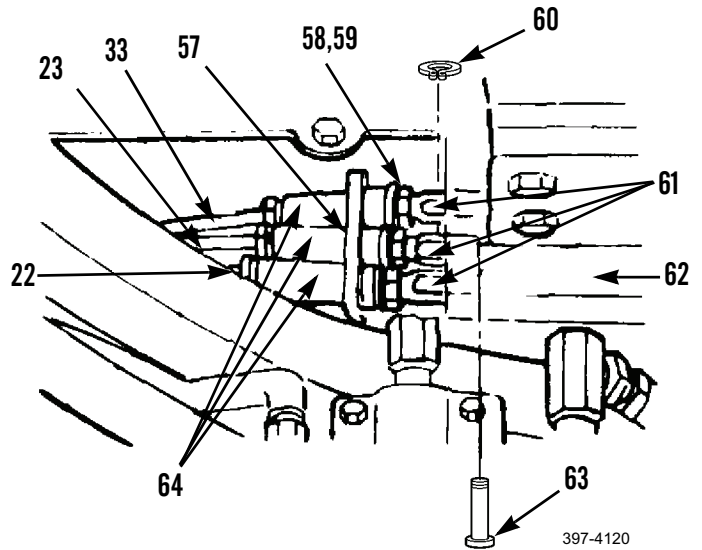- 33. Slide back retainer (57) and remove three couplings (64) with items 58 and 59 attached on cables (33, 23 and 22).
- 34. Separate three rod ends (61) from transmission control valves (62).
- 35. Remove three rings (60) and pins (63) from rod ends (61).




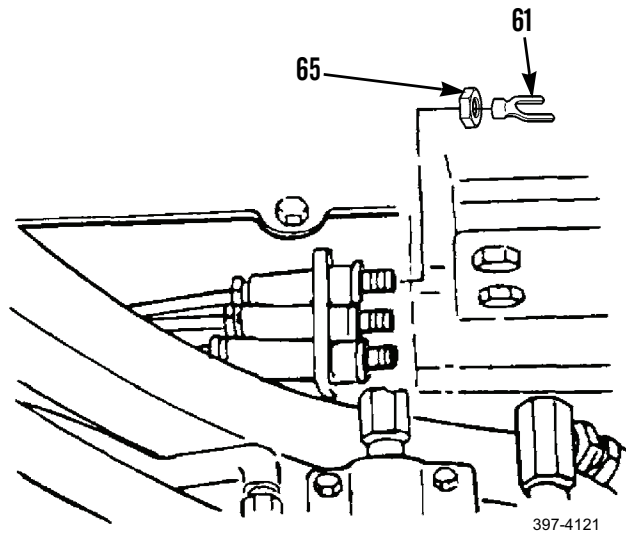- 36. Loosen three nuts (65).
- 37. Remove three rod ends (61) and nuts (65).



REMOVAL - CONTINUED

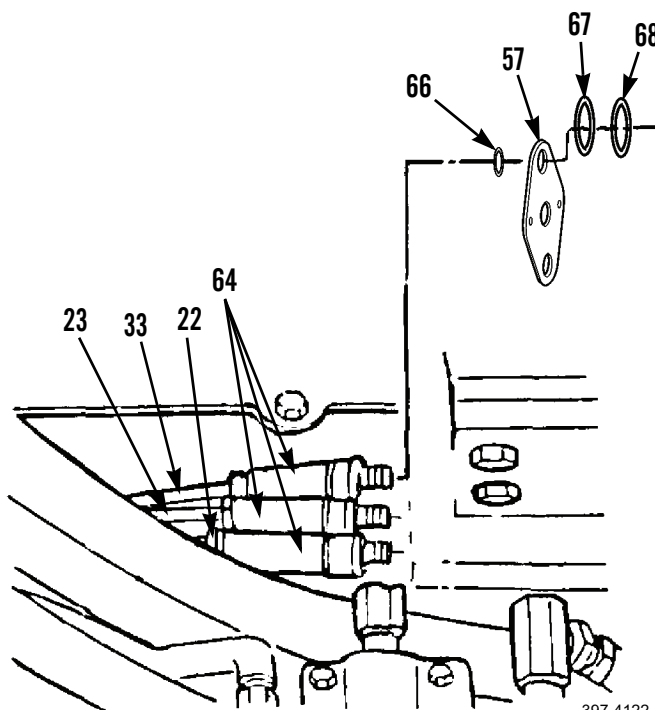38. Remove and discard three seals (68) and six rings (67) from three couplings (64).
39. Remove retainer (57) and three preformed packings (66) from cables (22, 23, and 33). Discard three preformed packings.
40. Remove cables (22, 23, and 33) from machine.




397-4122

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

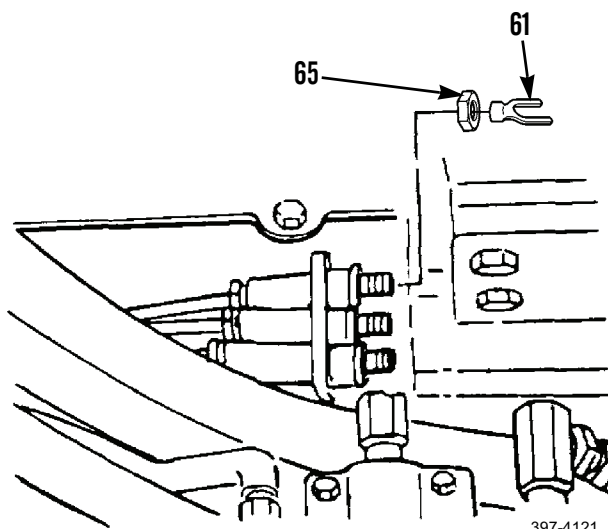
1. Position cables (22, 23, and 33) on machine.
2. Install three new preformed packings (66) on cables (22, 23, and 33) at transmission under left side of engine compartment.
3. Install retainer (57), six new rings (67), and three new seals (68) on three couplings (64).
4. Install three nuts (65) and rod ends (61).





397-4121

INSTALLATION - CONTINUED

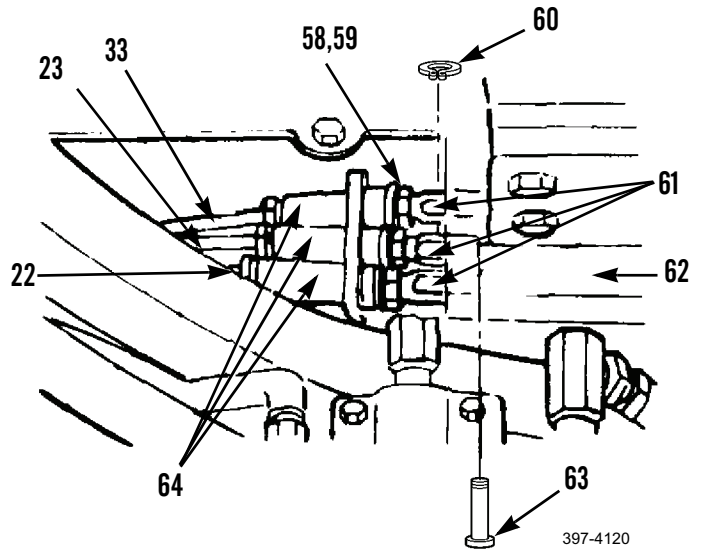5. Install three pins (63) and rings (60).
6. Set three rod ends (61) into transmission control valves (62).
7. Move three couplings (64) with items 58 and 59 attached forward on cables (33, 23, and 22) and position over transmission control valves (62).




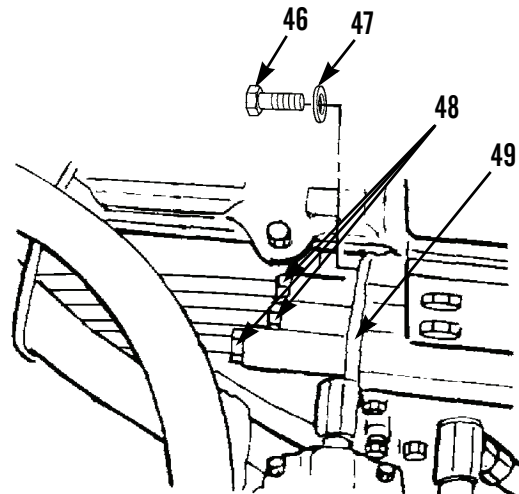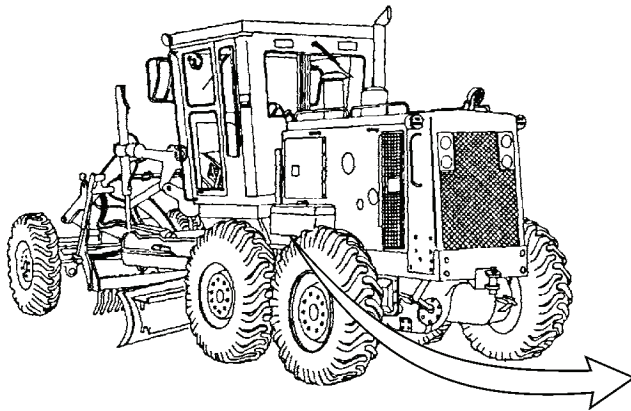8. Slide retainer (49) and three nuts (48) forward. Tighten three nuts.
9. Install two washers (47) and bolts (46).




INSTALLATION - CONTINUED

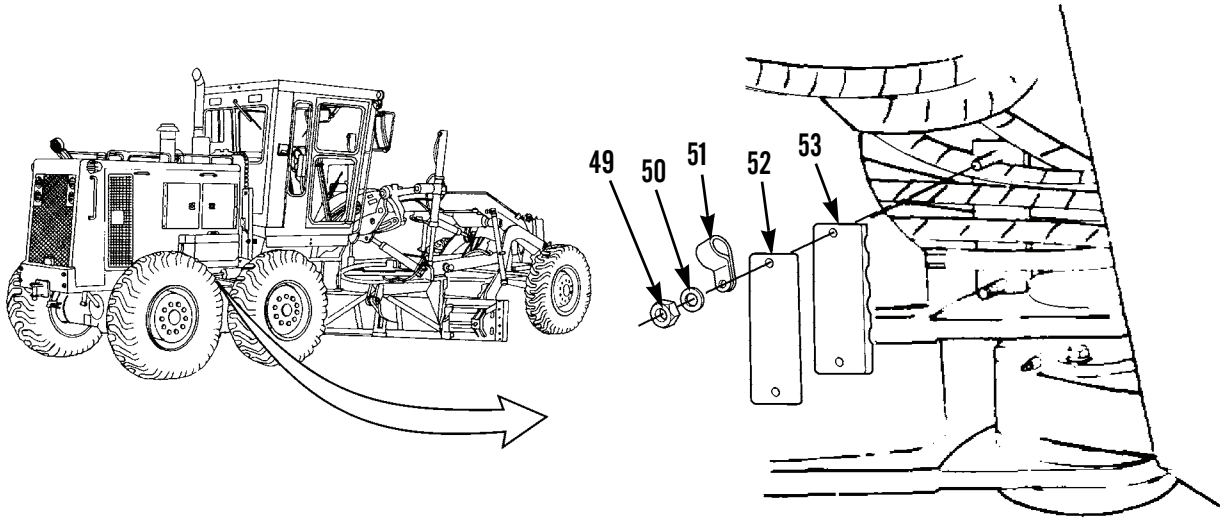10. Install clamp (53), plate (52), and clip (51) under right-front side of engine compartment.
11. Install two washers (50) and nuts (49).



397-4118

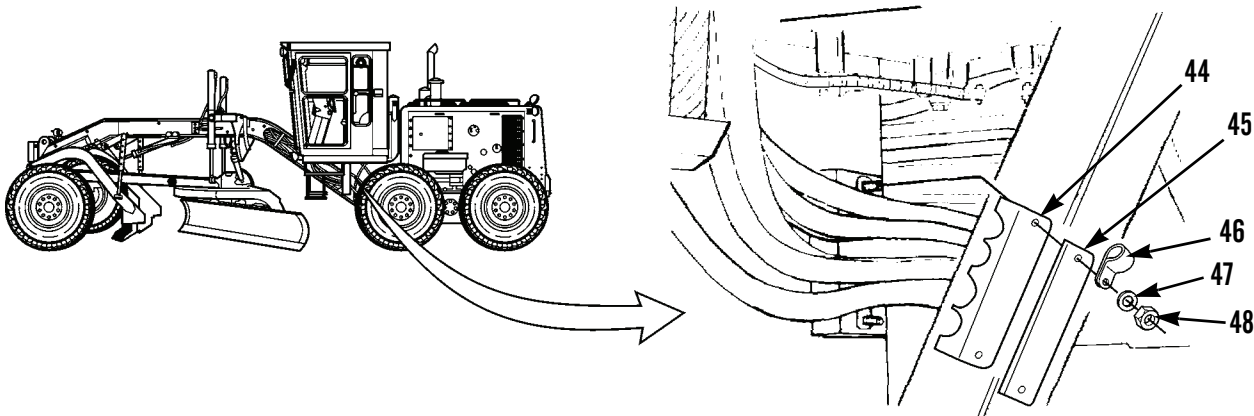
12. Install clamp (44), plate (45), and clip (46) under left-rear side of cab.
13. Install two washers (47) and nuts (48).



397-4117


INSTALLATION - CONTINUED

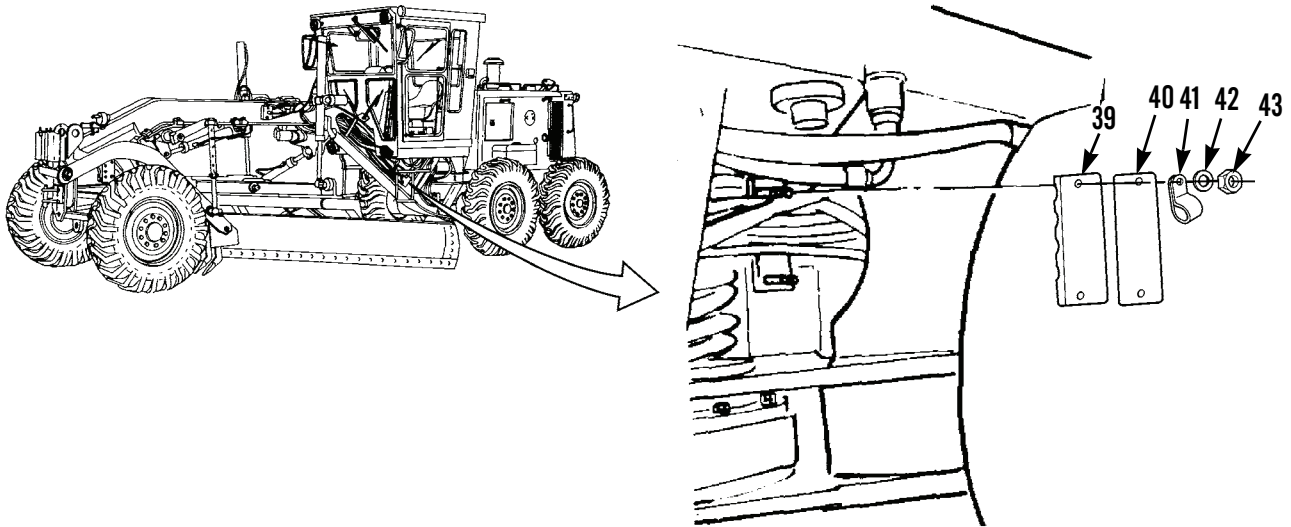14. Connect cable (refer to callout 33 and WP 0149 00) in transmission modulation control housing.
15. Install clamp (39), plate (40), and clip (41) under right-front side of engine compartment.
16. Install two washers (42) and nuts (43).



397-4116

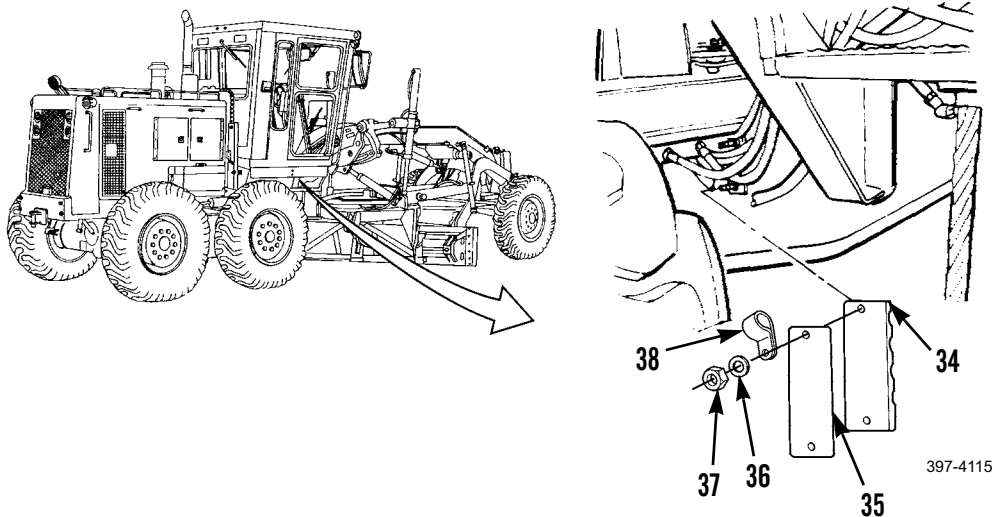
17. Install clamp (34), plate (35), and clip (38) under right side of cab.
18. Install two washers (36) and nuts (37).




397-4115

INSTALLATION - CONTINUED

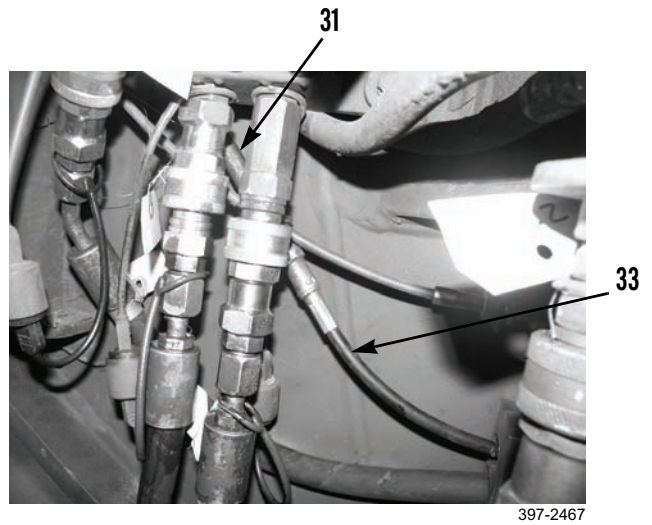19. For CCE and Type I machines, go to step 25.
20. Use extractor assembly to connect cable (33) to cable (31).




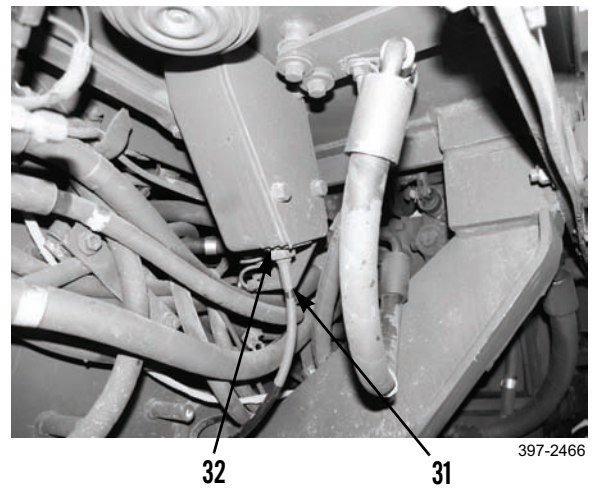21. Connect cable (31) to control housing (32).




INSTALLATION - CONTINUED

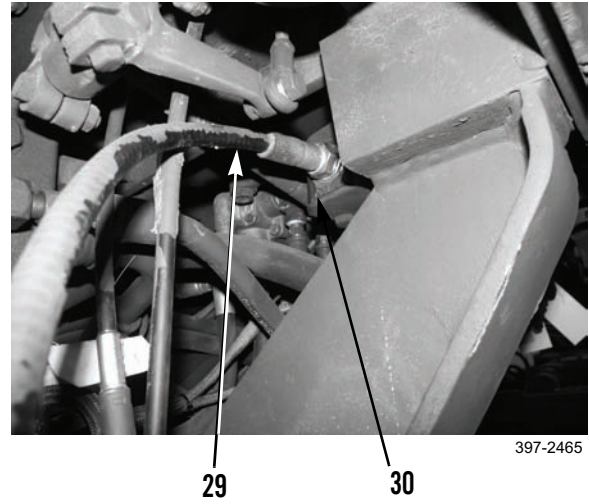22. Connect cable (29) to control housing (30).




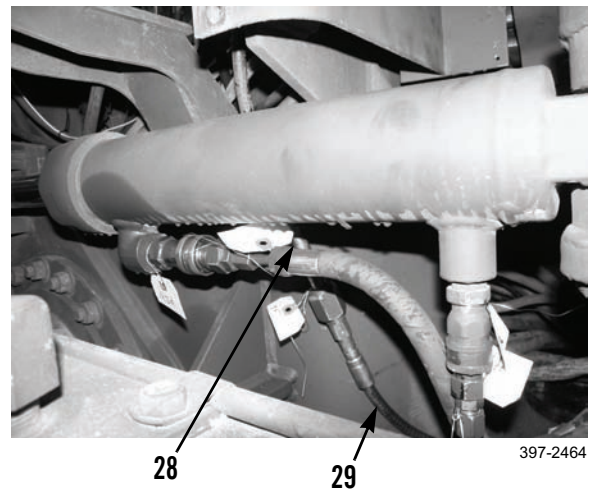23. Use extractor assembly to connect cable (29) to cable (28).





INSTALLATION - CONTINUED

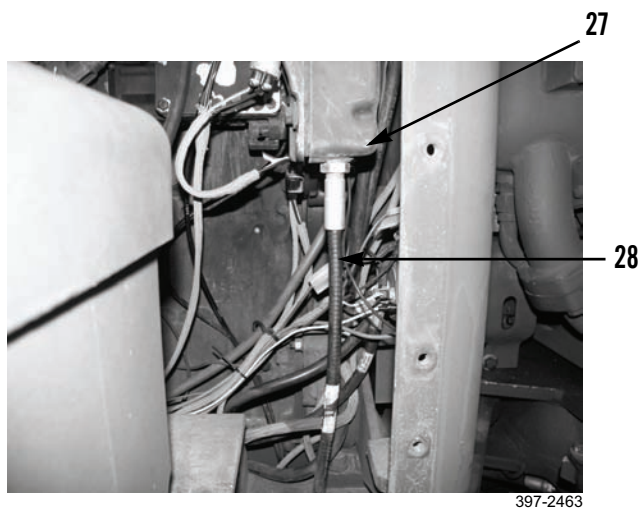24. Connect cable (28) to governor control housing (27).



397-2463

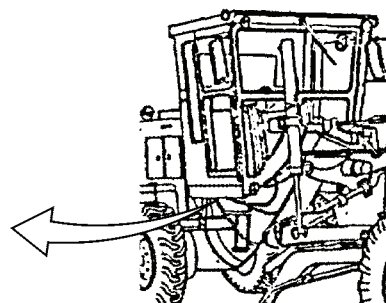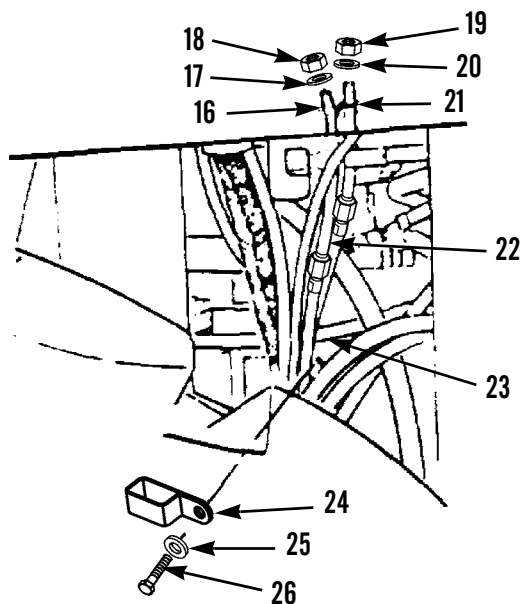
25. For Type II machine, use extractor assembly to connect cable (21) to cable (22), and cable (16) to cable (23).
 26. Connect cables (21 and 16) in transmission control housing.
 27. Install clip (24), washer (25), and bolt (26).
 28. Install new lockwasher (17) and nut (18).
 29. Install new lockwasher (20) and nut (19).



397-4114


INSTALLATION - CONTINUED

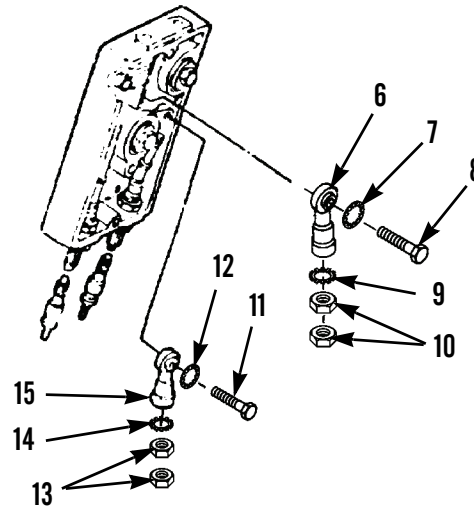30. Install new star washer (9) and two nuts (10) on rod end (6).
31. Adjust cable (refer to callout 21 and WP 0150 00).
32. Install washer (7), bolt (8), and rod end (6).
33. Install new star washer (14), two nuts (13), and rod end (15).
34. Adjust cable (refer to callout 16 and WP 0150 00).
35. Install washer (12) and bolt (11).



397-4113

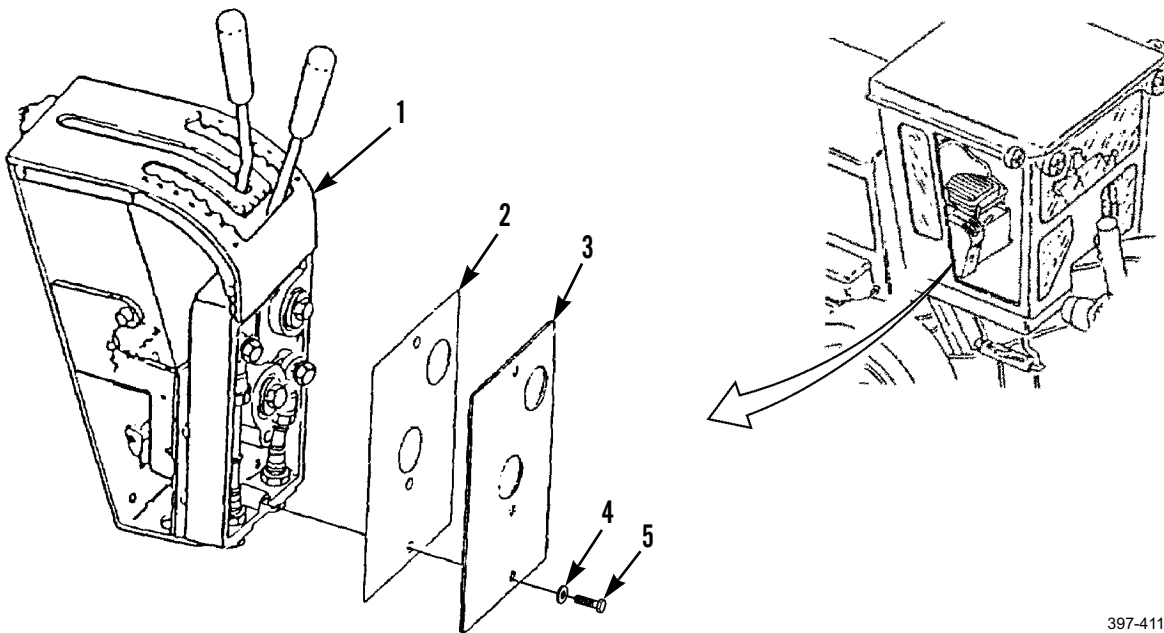36. Install new gasket (2), cover (3), three washers (4), and bolts (5) to front of operator panel console (1).



397-4112

37. Install left and right operator's console plates (WP 0193 00).

END OF WORK PACKAGE

TRANSMISSION OIL FILTER AND MOUNTING MAINTENANCE

0153 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)
 Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)
 Parking/emergency brake applied (TM 5-3805-261-10)
 Implements lowered to ground (TM 5-3805-261-10)
 Engine off (TM 5-3805-261-10)
 Battery disconnect switch in OFF position (TM 5-3805-261-10)
 Left side screen door opened (TM 5-3805-261-10)
 Transmission oil drained (WP 0147 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)
 Rag, wiping (Item 35, WP 0349 00)
 Filter element
 Lockwasher (4)
 Packing, preformed (5)
 Ring, retaining
 Seal



WARNING



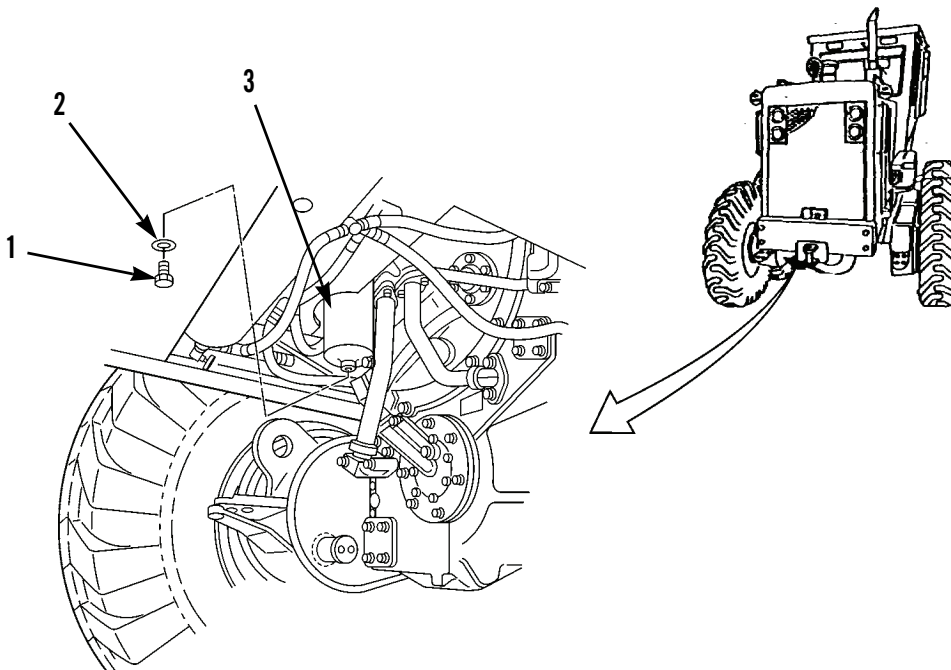
- Exercise care when working with hot oil or components saturated with hot oil. Allow to cool before handling. Failure to follow this warning may result in injury to personnel.
- Transmission oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

REMOVAL

NOTE


Position drain pan under transmission oil filter.

1. Remove plug (1) and preformed packing (2), allowing oil to drain into drain pan. Discard preformed packing.
2. Remove filter body (3).



397-462

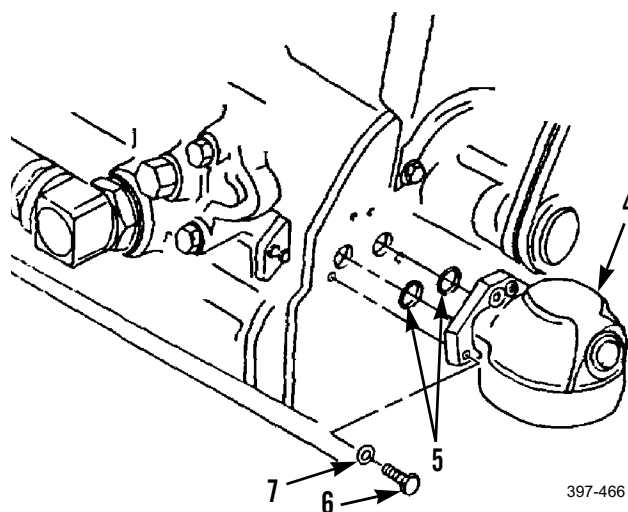
3. Remove four bolts (6), lockwashers (7), and housing (4). Discard lockwashers.
4. Remove and discard two preformed packings (5).



397-466


DISASSEMBLY

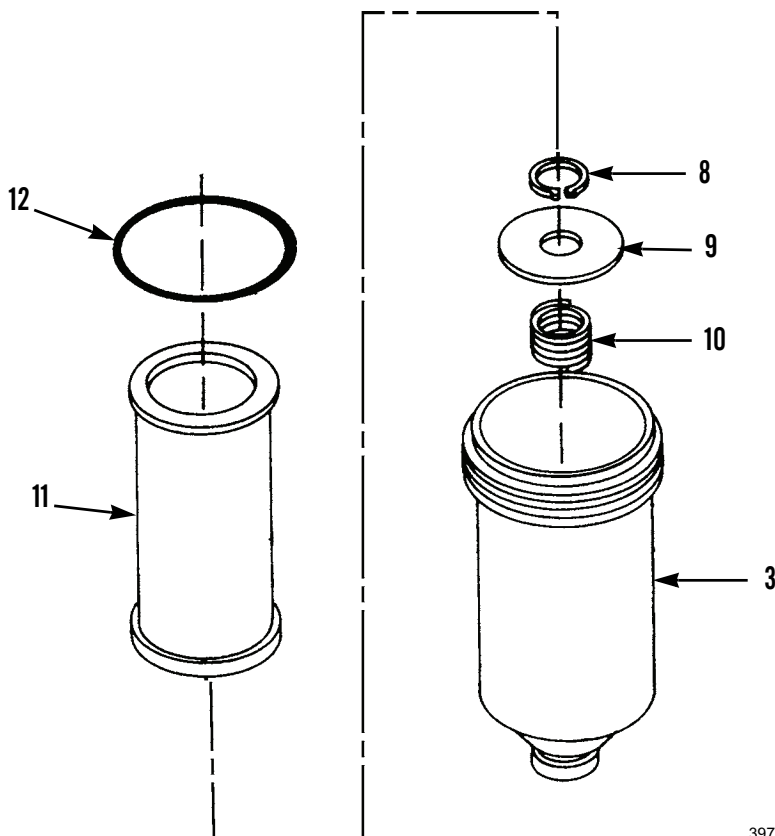1. Remove and discard seal (12) and filter element (11) from filter body (3).
2. Remove retaining ring (8) while pressing retainer (9) downward against spring (10).
3. Remove retainer (9) and spring (10).



397-2121

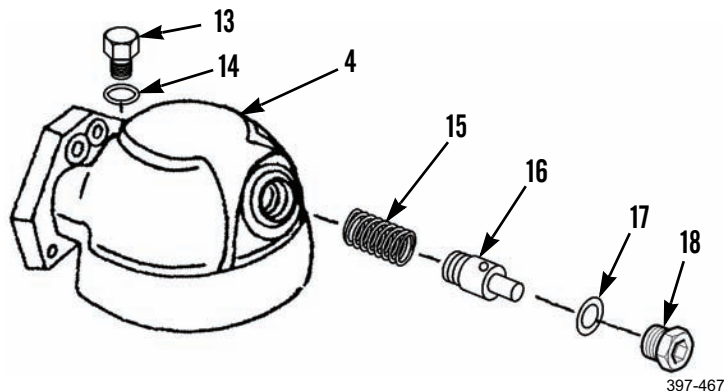4. Remove plug (13) and preformed packing (14) from housing (4). Discard preformed packing.
5. Remove plug (18), preformed packing (17), spool (16), and spring (15). Discard preformed packing.




397-467

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


ASSEMBLY

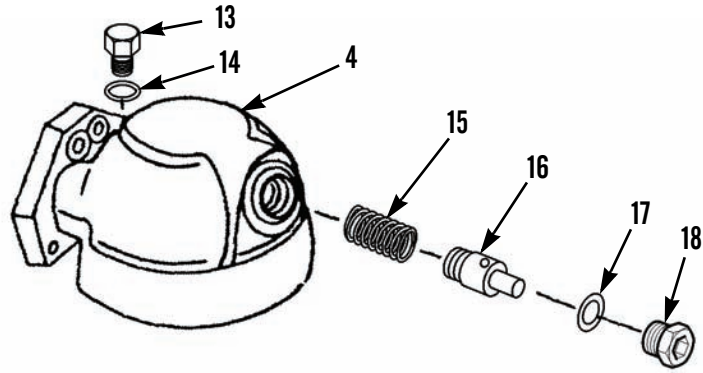1. Install spring (15), spool (16), new preformed packing (17), and plug (18) into housing (4).
2. Install new preformed packing (14) and plug (13).



397-467

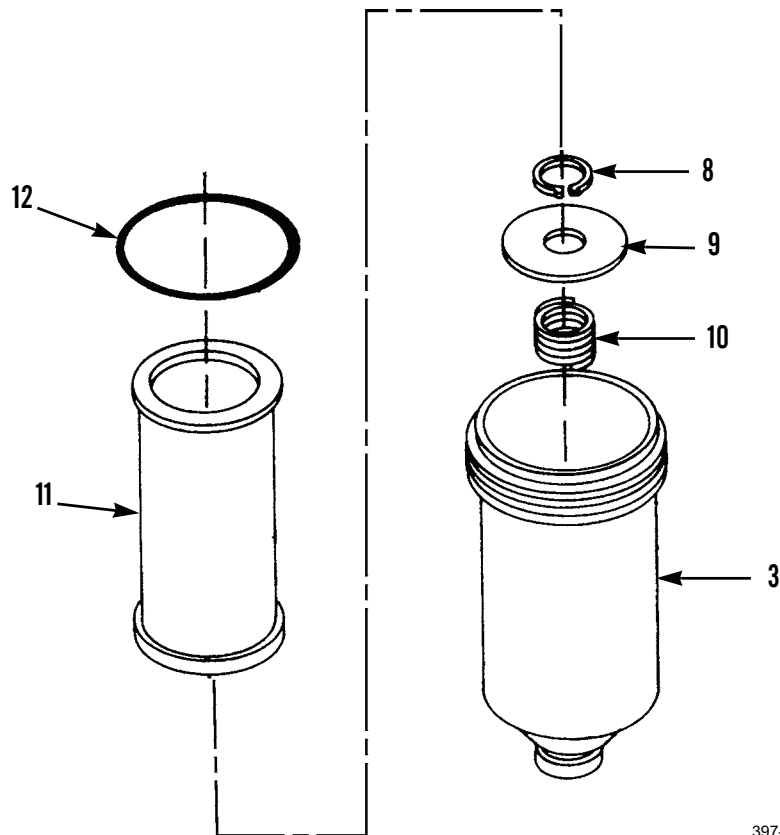
3. Install spring (10) and retainer (9) in filter body (3).
4. Install new retaining ring (8) while pressing retainer (9) downward against spring (10).
5. Install new filter element (11) and new seal (12).




397-2121

INSTALLATION

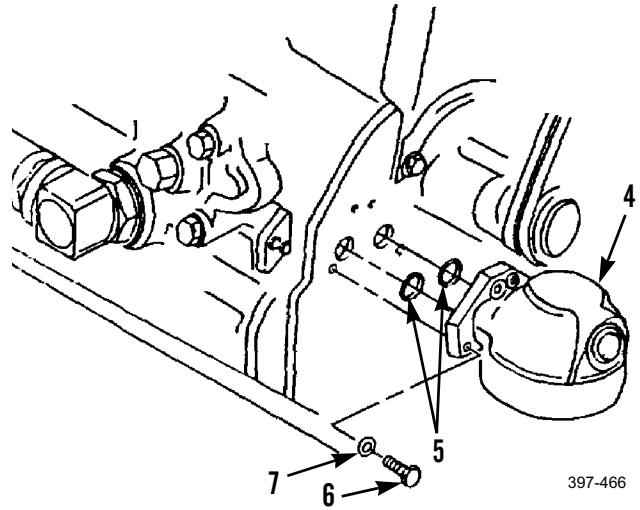1. Install two new preformed packings (5).
2. Install housing (4), four new lockwashers (7), and bolts (6).



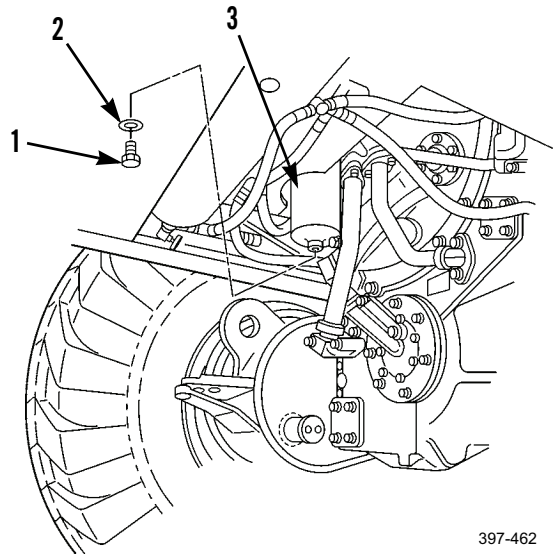3. Install filter body (3).
4. Install new preformed packing (2) and plug (1).



5. Refill transmission oil to proper level (WP 0147 00).
6. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
7. Check for leaks. Stop engine.
8. Close left side screen door (TM 5-3805-261-10).

END OF WORK PACKAGE

TRANSMISSION OIL SAMPLING VALVE AND LINE MAINTENANCE

0154 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

WP 0147 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Packing, preformed (2)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side engine panel removed (WP 0182 00)



WARNING



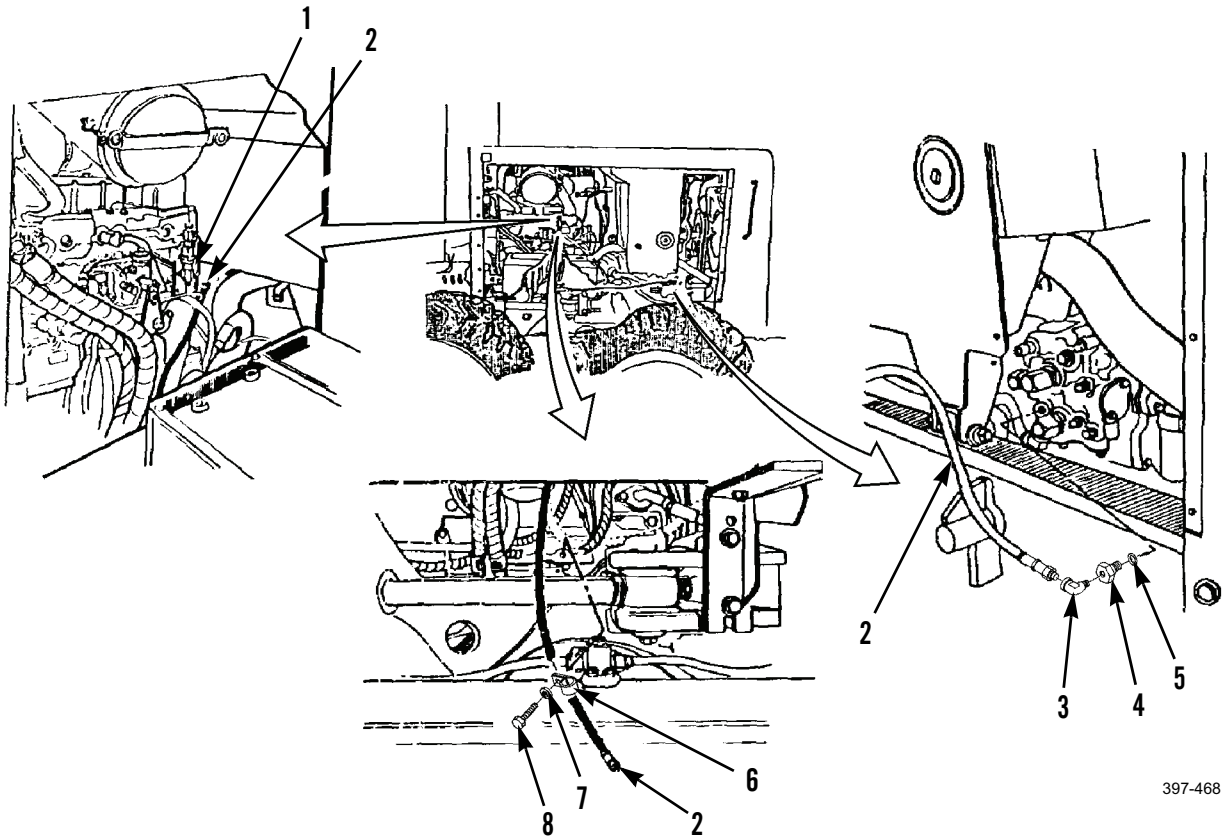
- Exercise care when working with hot oil or components saturated with hot oil. Allow to cool before handling. Failure to follow this warning may result in injury to personnel.
- Transmission oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

REMOVAL

NOTE

Position drain pan under transmission oil sampling valve.


1. Disconnect hose assembly (2) from elbow (3).
2. Remove elbow (3), adapter (4), and preformed packing (5). Discard preformed packing.
3. Remove bolt (8), washer (7), and clamp (6) from hose assembly (2).
4. Remove hose assembly (2) from transmission oil sampling valve (1).



397-468

REMOVAL - CONTINUED

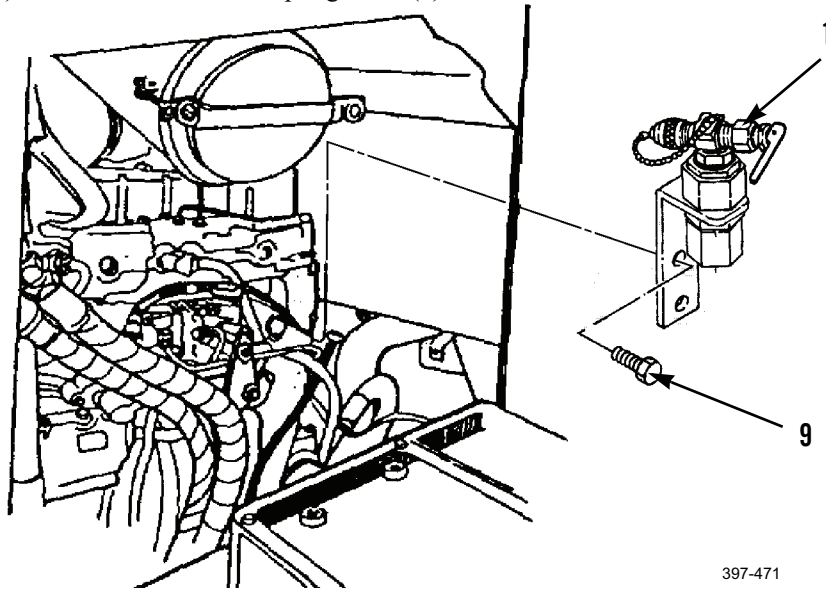- Remove two bolts (9) and transmission oil sampling valve (1).



397-471

DISASSEMBLY

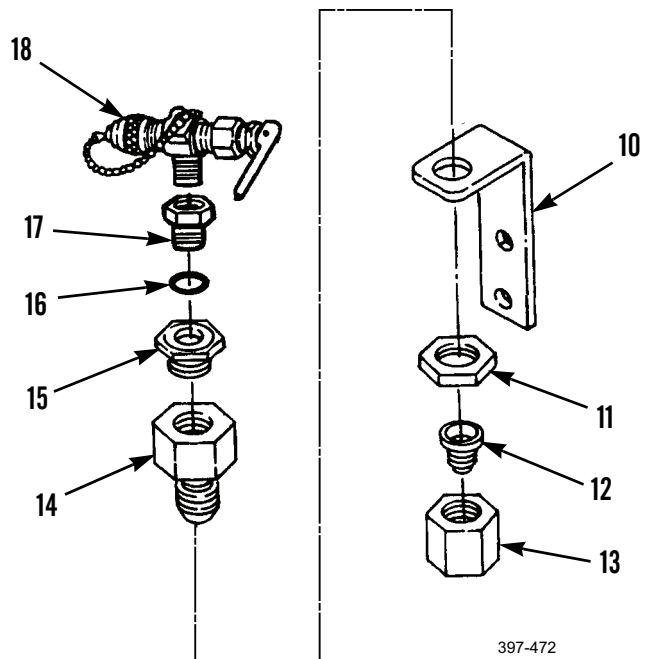
- Remove drain cock (18), adapter (17), preformed packing (16), and adapter (15) from reducer (14). Discard preformed packing.
- Remove nuts (13 and 11) and reducer (14) from bracket (10).
- Remove reducer (12) from nut (13).

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

- Install reducer (12) on nut (13).
- Install reducer (14) and nuts (11 and 13) on bracket (10).
- Install adapter (15), new preformed packing (16), adapter (17), and drain cock (18) on reducer (14).




397-472

INSTALLATION

- Install transmission oil sampling valve (1) and two bolts (9).

INSTALLATION - CONTINUED

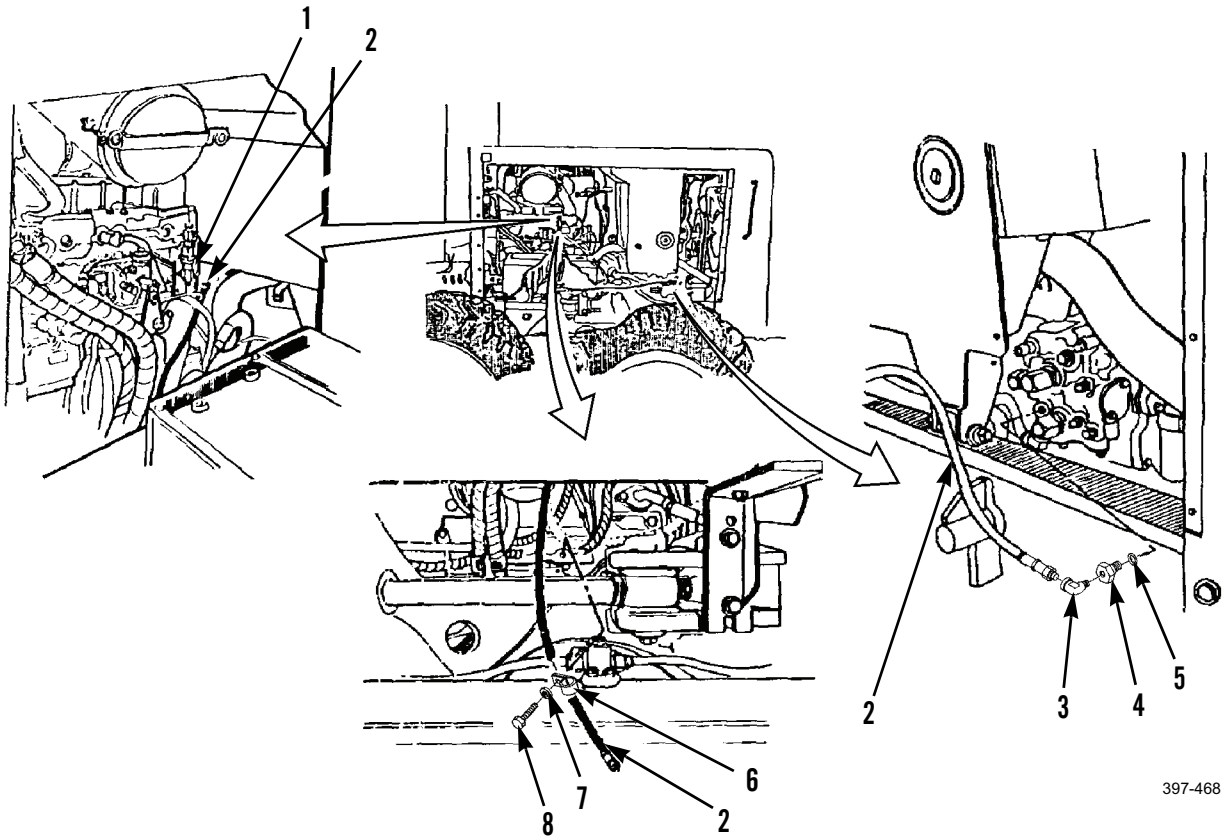2. Connect hose assembly (2) to transmission oil sampling valve (1).
3. Install clamp (6), washer (7), and bolt (8) on hose assembly (2).
4. Install new preformed packing (5), adapter (4), and elbow (3).
5. Install hose assembly (2) to elbow (3).



397-468

6. Check transmission oil level and refill to proper level, if necessary (WP 0147 00).
7. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
8. Check for leaks. Stop engine.
9. Install left side engine panel (WP 0182 00).

END OF WORK PACKAGE

TRANSMISSION OIL LINES REPLACEMENT**0155 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (4)

References

WP 0020 00

WP 0147 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Articulation anti-pivot pin installed (TM 5-3805-261-10)

Transmission linkage adjusted (WP 0150 00)


Left side engine panel removed (WP 0182 00)

**WARNING**

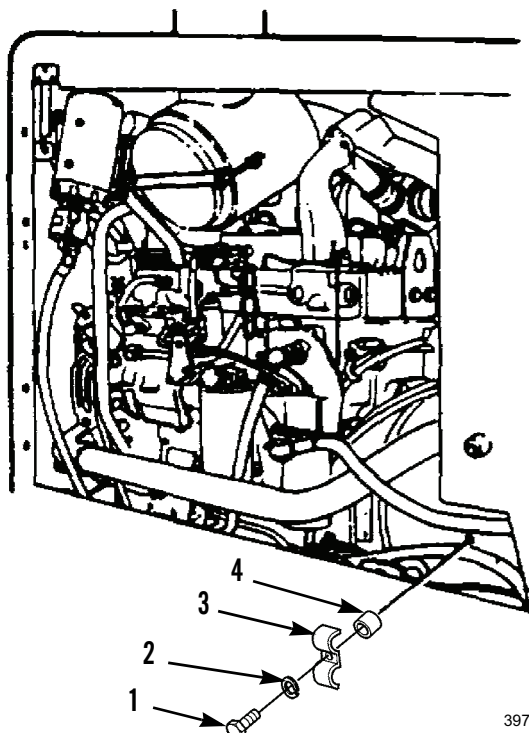- Exercise care when working with hot oil or components saturated with hot oil. Allow to cool before handling. Failure to follow this warning may result in injury to personnel.
- Transmission oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

REMOVAL

1. Remove bolt (1), lockwasher (2), clamp (3), and spacer (4) from left side of engine to transmission adapter.



2. Remove four bolts (8) and washers (7).

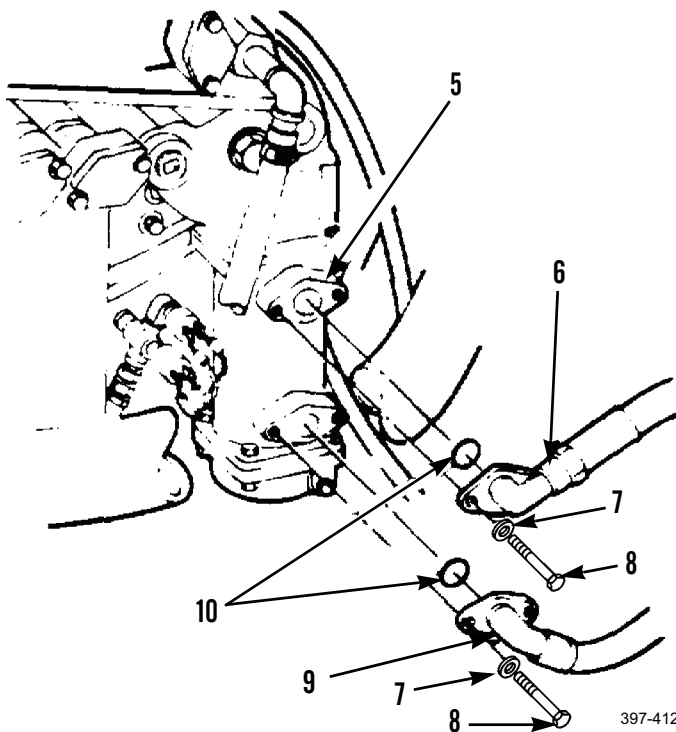
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

3. Disconnect hose assemblies (6 and 9) from transmission oil cooler (5).
4. Remove and discard two preformed packings (10).



REMOVAL - CONTINUED

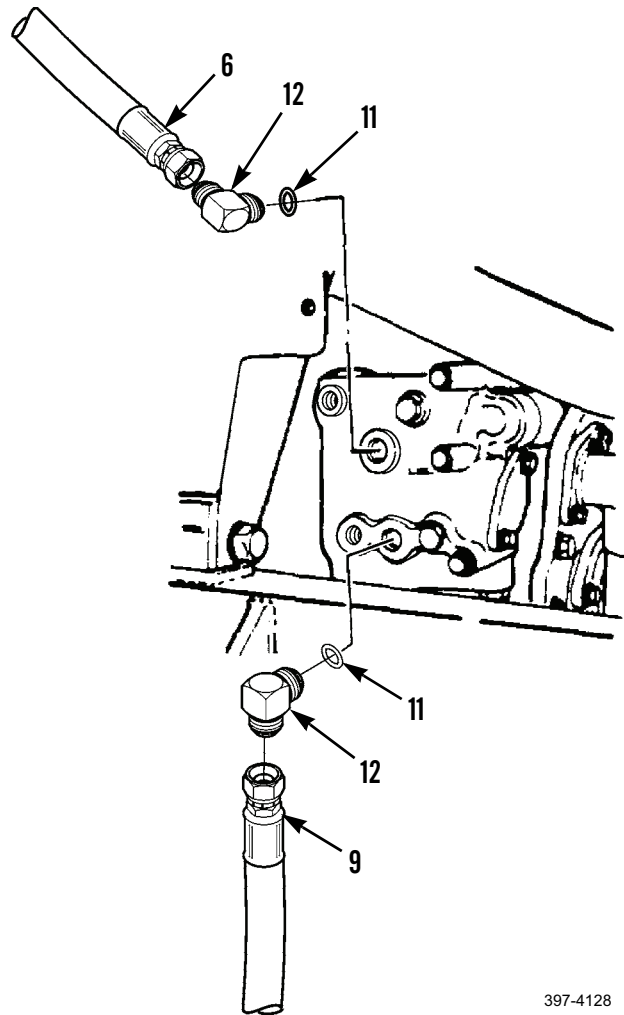5. Remove hose assemblies (6 and 9).
6. Remove two elbows (12) and preformed packings (11). Discard preformed packings.



397-4128

CLEANING AND INSPECTION

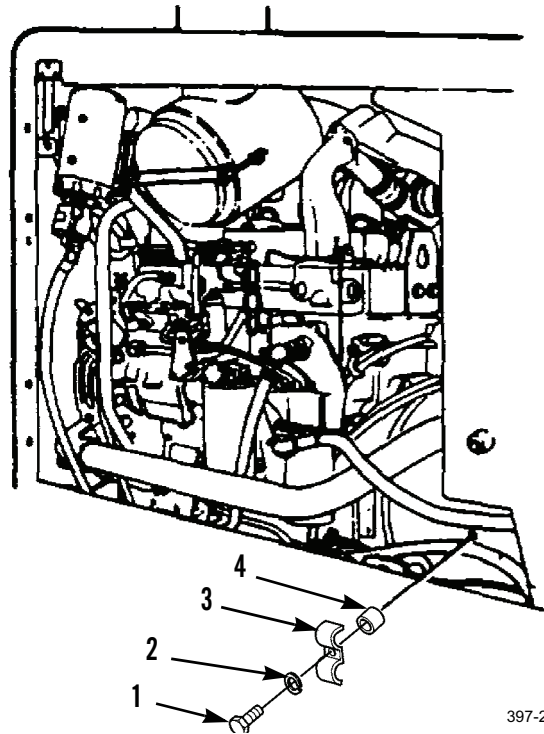
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install two new preformed packings (11) and elbows (12) on rear-left side of transmission.
2. Connect hose assemblies (9 and 6) to two elbows (12).
3. Position two new preformed packings (10) and connect hose assemblies (9 and 6) to transmission oil cooler (5).
4. Install four washers (7) and bolts (8).

INSTALLATION - CONTINUED

5. Install spacer (4), clamp (3), lockwasher (2), and bolt (1).



397-2214

6. Refill transmission to proper level (WP 0147 00).

**WARNING**

If machine is parked indoors, DO NOT run engine unless exhaust fumes are vented to the outside. Failure to follow this warning may cause injury or death due to carbon monoxide poisoning.

7. Place battery disconnect to ON position and start engine (TM 5-3805-261-10).
8. Check for leaks.
9. Stop engine.
10. Install left-side engine panel (WP 0182 00).

END OF WORK PACKAGE

LEANING WHEEL CYLINDER REPLACEMENT

0156 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Sling (Item 78, WP 0348 00)

Lifting device, 100-lb capacity

Woods blocks

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Lubricant, thread (Item 22, WP 0349 00)

Oil, lubricating (Item 27 or 28, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (2)

Materials/Parts - Continued

Ring (2)

Seal (8)

Seal assembly

Personnel Required

Two

References

WP 0020 00

WP 0023 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Wheel lean lock pin installed (TM 5-3805-261-10)

REMOVAL

1. Remove two fittings (2) from right side of front axle on machine.



WARNING

Hydraulic oil can be very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

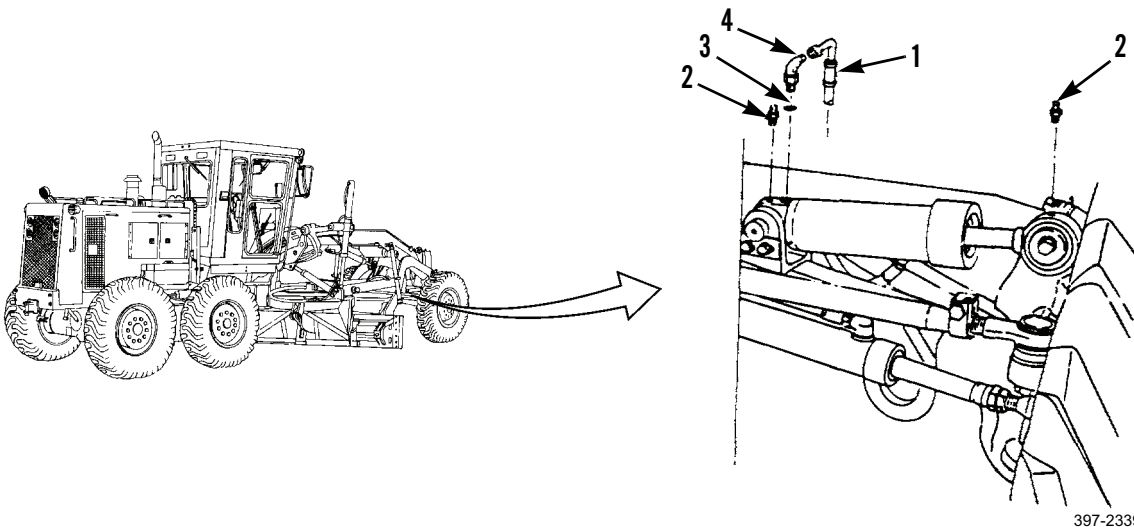
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

2. Disconnect hose assembly (1).




397-2339

REMOVAL - CONTINUED

NOTE

Some machines have O-rings between hose assemblies (1 and 5) and elbows (4 and 6). Remove and discard O-rings if present.

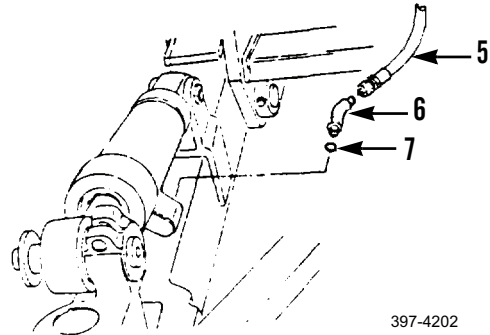3. Remove hose assembly (1), elbow (4), and preformed packing (3). Discard preformed packing.
4. Remove hose assembly (5), elbow (6), and preformed packing (7). Discard preformed packing.





WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Cylinder weighs 55 lb (25 kg).

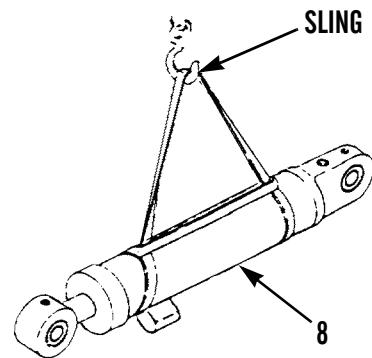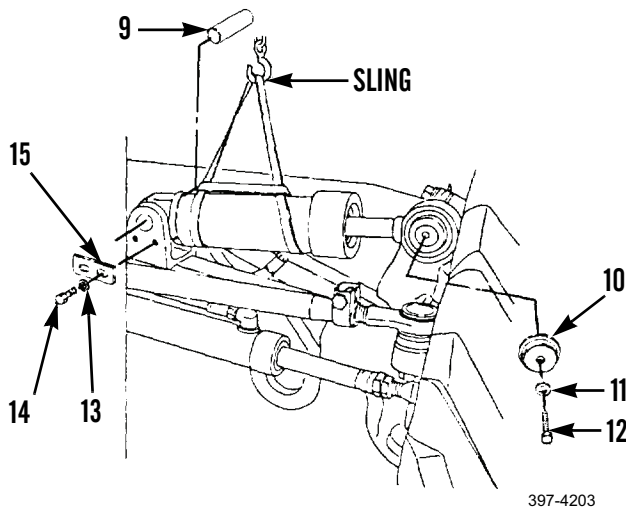5. Install sling on cylinder assembly (8).
6. Remove bolt (12), washer (11), and retainer (10).
7. Remove two bolts (14), washers (13), lock (15), and pin (9).
8. Remove cylinder assembly (8) from machine and set on wood blocks.




9. Remove sling.

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

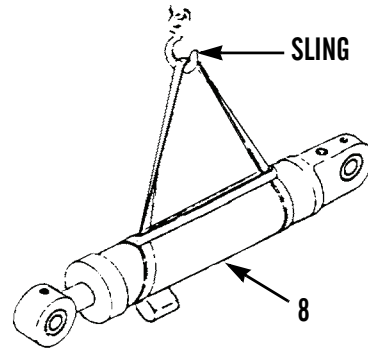1. Install sling.
2. Position cylinder assembly (8).



397-4204

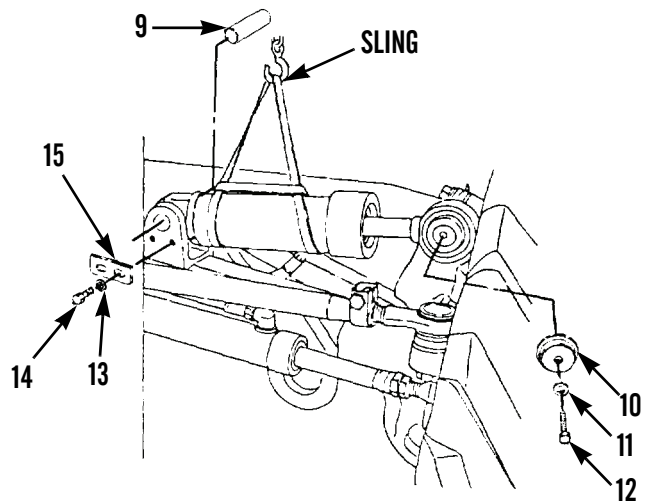3. Install pin (9).
4. Position lock (15).
5. Install two washers (13) and bolts (14).
6. Install retainer (10), washer (11), and bolt (12).




397-4203


INSTALLATION - CONTINUED**NOTE**

Install new O-rings between hose assemblies (5 and 1) and elbows (6 and 4) if discarded in removal.

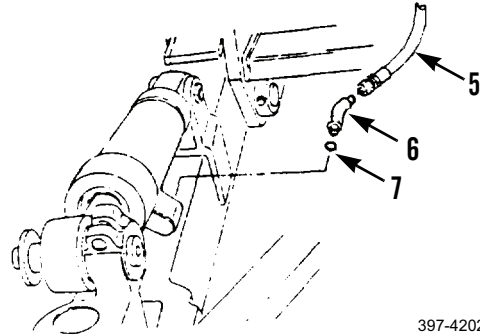7. Install new preformed packing (7) and elbow (6).
8. Install hose assembly (5).



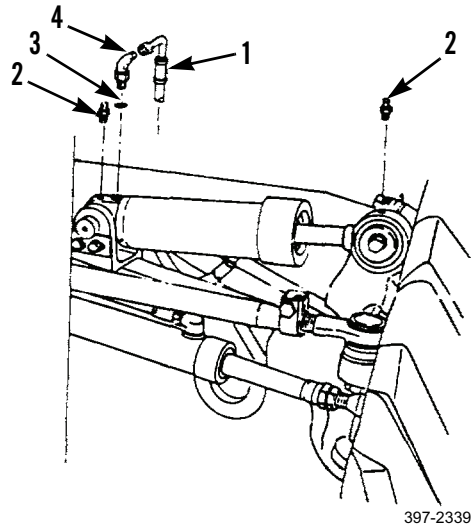9. Install new preformed packing (3) and elbow (4).
10. Connect hose assembly (1).
11. Install two fittings (2). Add new grease (WP 0023 00).



12. Remove wheel lean lock pin (TM 5-3805-261-10).
13. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
14. Check for leaks.
15. Stop engine.

END OF WORK PACKAGE

PARKING BRAKE ACTUATOR AND RELEASE VALVE REPLACEMENT

0157 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air pressure relieved (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (4)

Pin, cotter

REMOVAL**WARNING**

- Do not disconnect air line from parking brake release valve until air pressure is zero. All air must be bled from air tanks. Failure to follow this warning may cause injury to personnel.
- Compressed air must not exceed 30 psi (207 kPa). DO NOT direct compressed air against human skin. Make sure air stream is directed away from user and other personnel in the area. Wear protective goggles or face shield. Failure to follow this warning may cause injury to personnel.

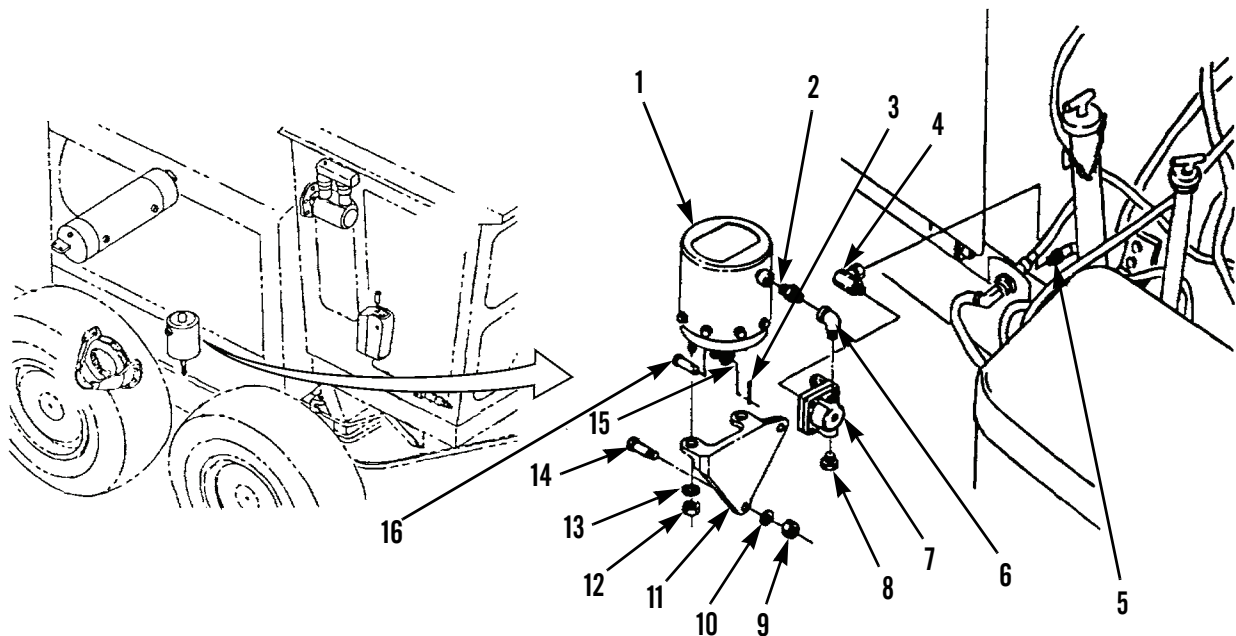
REMOVAL - CONTINUED**CAUTION**

Cap all hose and tube ends to prevent contamination.

NOTE

Tag all parts before removal to aid in installation.

1. Disconnect hose assembly (5) from elbow (4).
2. Connect shop air line to elbow (4) and apply pressure to relieve release valve pressure.
3. Remove cotter pin (3) from pin (16). Discard cotter pin.
4. Remove pin (16) from rod end (15).
5. Remove shop air line from elbow (4).
6. Remove two nuts (9), lockwashers (10), and bolts (14) from bracket (11). Discard lockwashers.
7. Remove elbow (4) and plug (8) from release valve assembly (7).
8. Remove release valve assembly (7).
9. Remove nipple (2) and elbow (6).
10. Remove two nuts (12), lockwashers (13), and bracket (11). Discard lockwashers.
11. Remove air brake chamber assembly (1).



397-2296

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Position air brake chamber assembly (1).
2. Install bracket (11), two new lockwashers (13), and nuts (12).
3. Install elbow (6) and nipple (2).
4. Position release valve assembly (7).
5. Install plug (8) and elbow (4) to release valve assembly (7).
6. Install two bolts (14), new lockwashers (10), and nuts (9) on bracket (11).
7. Connect shop air line on elbow (4).
8. Install pin (16) to rod end (15).
9. Install new cotter pin (3) to pin (16).
10. Apply air pressure with shop air line to release valve assembly (7).
11. Disconnect shop air line from elbow (4).
12. Connect hose assembly (5) to elbow (4).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (2)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Operator's console side panels and gates removed (WP 0193 00)

REMOVAL

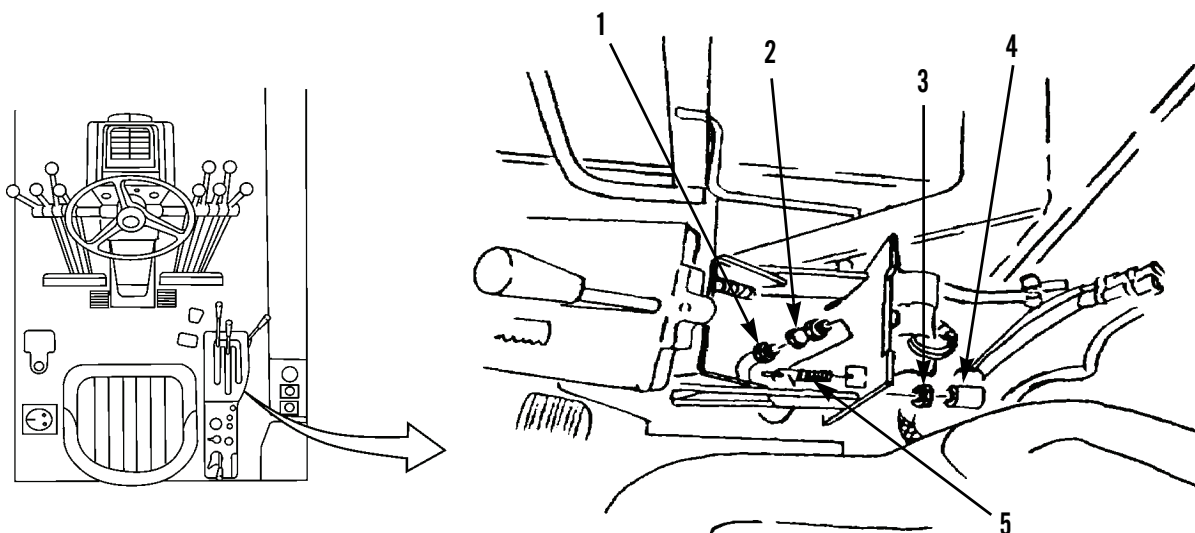
CAUTION

Cap all hose and tube ends to prevent contamination.

NOTE

Tag all parts before removal to aid in installation.

1. Disconnect hose assembly (1) from control console in operator's compartment.
2. Remove connector (2).
3. Remove nut (3), boot (4), and control valve assembly (5).




397-4251

DISASSEMBLY**WARNING**

Use caution when removing parts under spring tension. Wear safety glasses. Uncontrolled release of spring may cause injury.

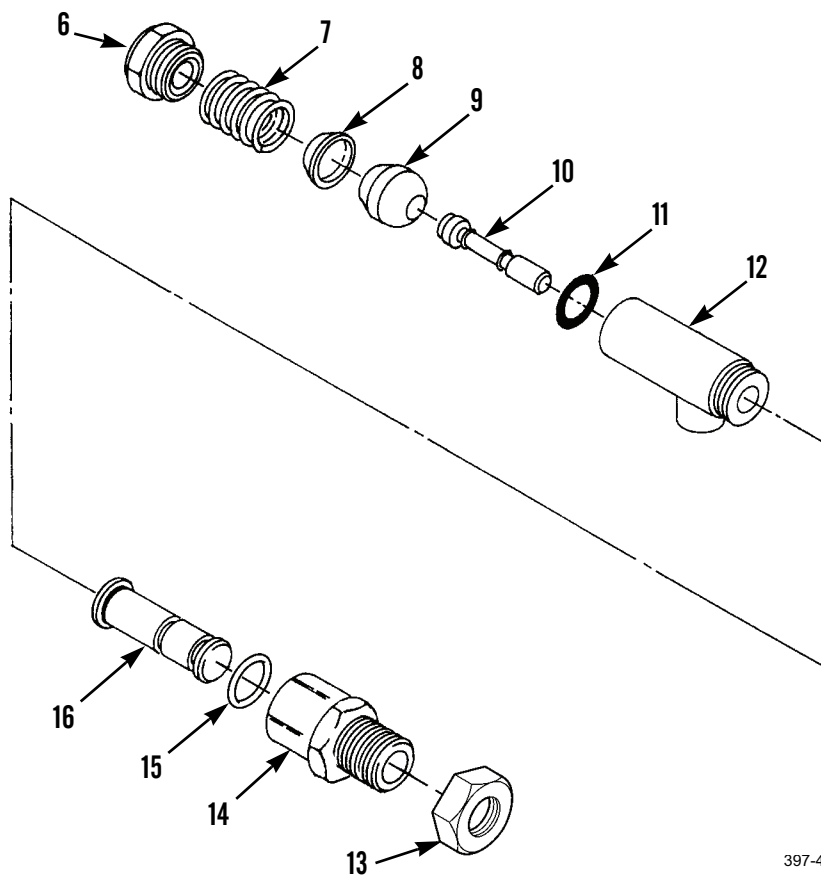1. Remove supply port (6), spring (7), seat (8), valve inlet (9), stem (10), and preformed packing (11) from body (12). Discard preformed packing.
2. Remove body (12), plunger (16), and preformed packing (15) from valve (14). Discard preformed packing.
3. Remove nut (13) from valve (14).



397-4252

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY**WARNING**

Use caution when installing parts under spring tension. Wear safety glasses. Uncontrolled release of spring may cause injury.

1. Install nut (13) to valve (14).
2. Install new preformed packing (15), plunger (16), and body (12) in valve (14).
3. Install new preformed packing (11), stem (10), valve inlet (9), seat (8), spring (7), and supply port (6) on body (12).

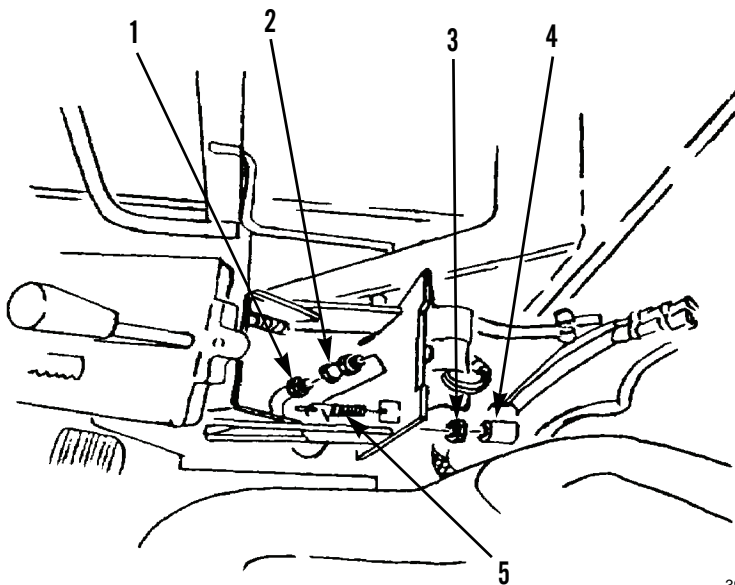
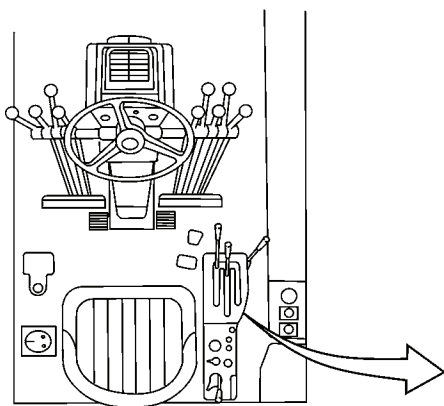
INSTALLATION

1. Install parking brake air control valve assembly (5), boot (4), and nut (3) on control console in operator's compartment.

NOTE

With brake lever in park position, adjust control valve assembly on console to provide 0.03 in. (0.8 mm) clearance with plate.

2. Install connector (2).
3. Connect hose assembly (1).



397-4251

4. Install operator's console side panels and gate (WP 0193 00).

END OF WORK PACKAGE

PARKING BRAKE CONTROL REPLACEMENT

0159 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

WP 0158 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

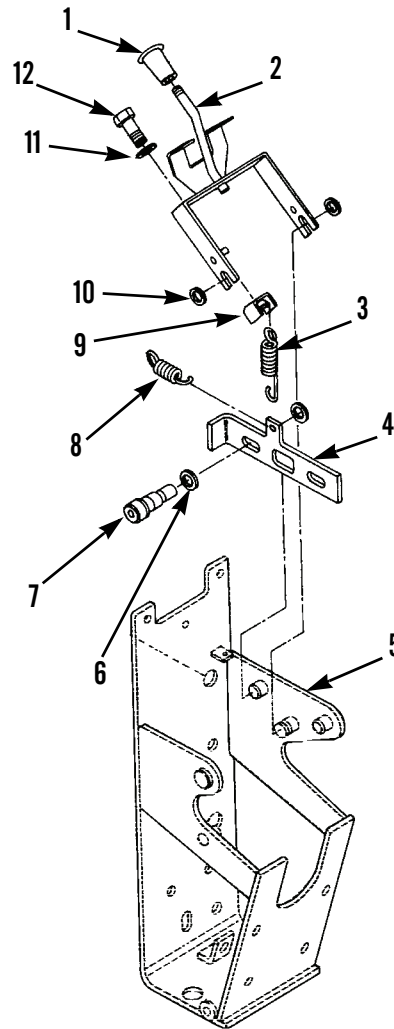
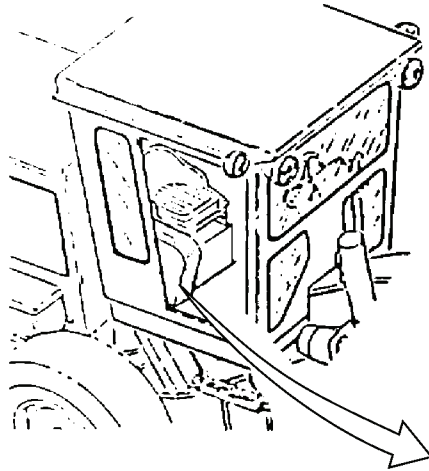
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Operator's console right side panel removed (WP 0193 00)

REMOVAL

1. Remove knob (1) from lever assembly (2) on outside of transmission control console (5).
2. Loosen bolt (12) enough to relieve spring compression preload.
3. Remove springs (3 and 8).
4. Remove two bolts (7), four washers (6), and plate (4).
5. Remove lever (2) and two washers (10).
6. Remove bolt (12), washer (11), and bracket (9) from lever assembly (2).



397-2293

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Position bracket (9) on lever assembly (2) inside of transmission control console (5).
2. Loosely install washer (11) and bolt (12).
3. Install two washers (10) on console weldment (5) and position lever assembly (2).
4. Install plate (4), four washers (6), and two bolts (7).
5. Install springs (3 and 8).
6. Install knob (1).
7. Check adjustment of parking brake air control valve (WP 0158 00).
8. Install operator's console right side panel (WP 0193 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation, Adjustment

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Oil, lubricating (Item 26, 27, or 30, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Pin, cotter (2)

Personnel Required

Two

References

WP 0020 00

WP 0282 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

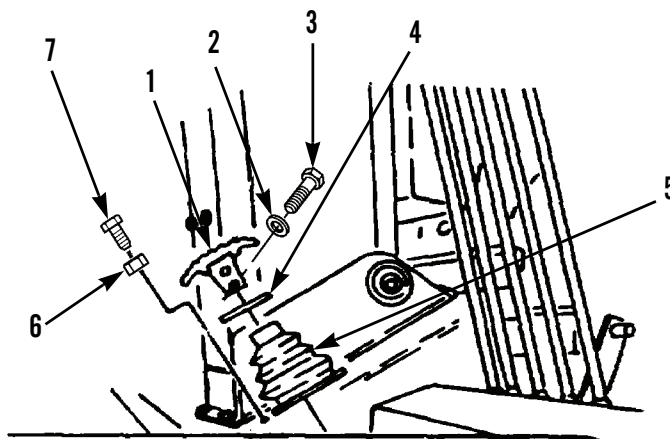
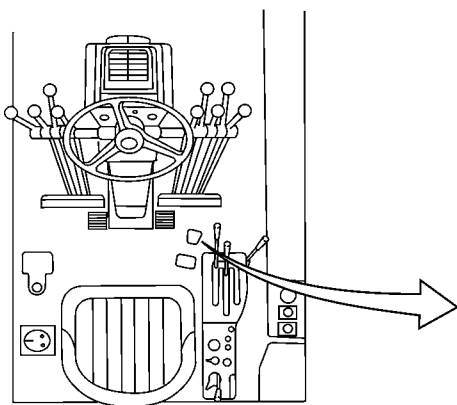
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)


REMOVAL

1. Remove two bolts (3), washers (2), tread (1), washer (4), and boot (5) from right side of cab floor.
2. Remove setscrew (7) and nut (6) from machine.




REMOVAL - CONTINUED

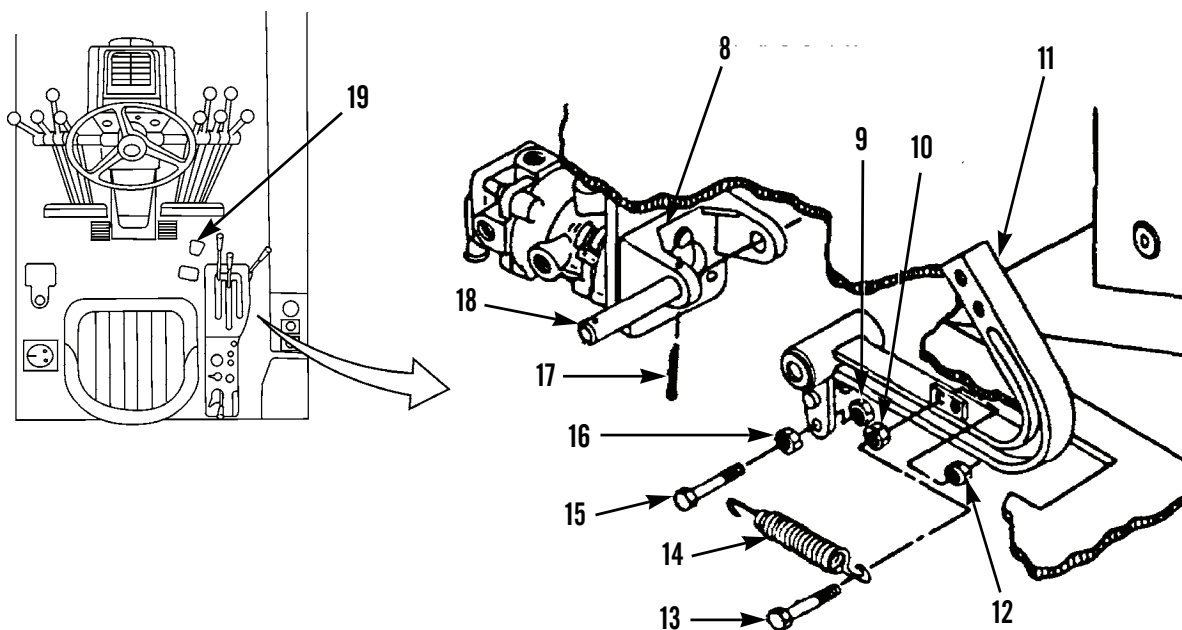3. Remove spring (14), nut (9), bolt (15), and nut (16) under right side of cab floor.
4. Remove nut (12), bolt (13), and nut (10).
5. Disconnect governor control linkage (WP 0282 00).
6. Remove and discard cotter pin (17) from bracket (8) and pedal (11).
7. Drive shaft (18) towards inner frame and lubricate shaft with clean oil.
8. Push shaft (18) toward outside of machine while assistant depresses accelerator pedal.
9. Remove pedal (11) from bracket (8).



397-2302

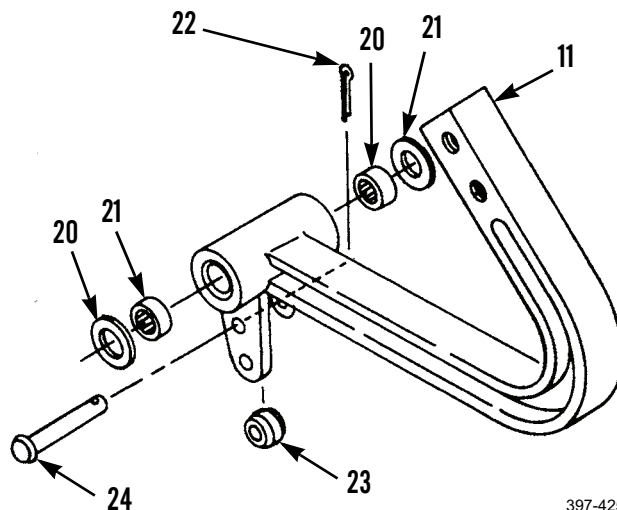10. Remove cotter pin (22), pin (24), and roller (23) from pedal (11). Discard cotter pin.
11. Remove two washers (20) and roller bearings (21) from pedal (11).




397-4259

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

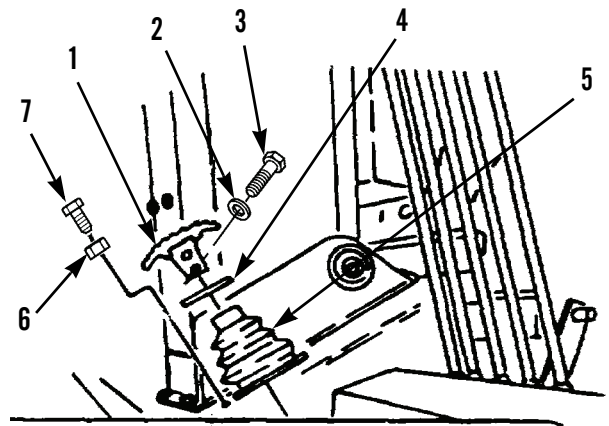1. Install two roller bearings (21) and washers (20).
2. Install roller (23), pin (24), and new cotter pin (22).
3. Install pedal (11), shaft (18), and new cotter pin (17) on bracket (8).
4. Connect governor control linkage (WP 0282 00).
5. Install nut (10), bolt (13), and nut (12).
6. Install nut (16), bolt (15), nut (9), and spring (14).
7. Install nut (6) and setscrew (7) on right side of cab floor.
8. Install boot (5), washer (4), tread (1), two washers (2), and bolts (3).



397-4257

ADJUSTMENT

1. Pump pedal (11) on right side of cab floor to drop line pressure to zero.
2. Turn brake valve plunger adjustment screw (27) after loosening nut (26), until slight drag is felt when turning roller (25).

NOTE

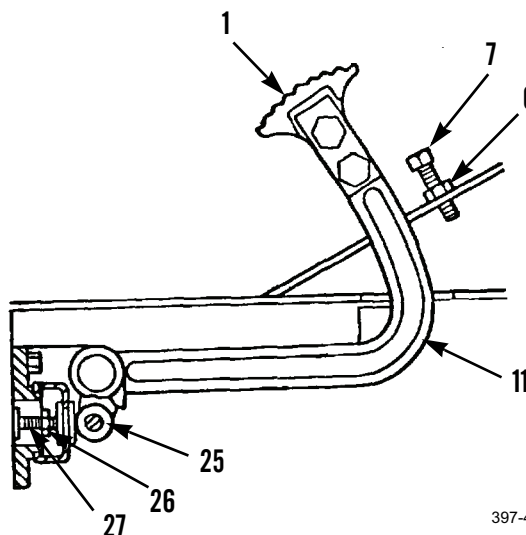
Dirt and foreign material between pedal stop and cab floor must be removed to achieve proper pedal adjustment.

3. Vent all air pressure (TM 5-3805-261-10).
4. Turn setscrew (7) all the way down after loosening nut (6).
5. Pull pedal (11) down and hold until solid stop is felt at end of full movement.

NOTE

If pedal hits floor before end of full valve movement, turn valve plunger adjustment screw (27) out one full turn.

6. Turn valve plunger adjustment screw (27), if necessary.
7. Turn setscrew (7) out until it just touches bottom of tread (1).
8. Release pedal (11).
9. Tighten nut (6). Do not turn setscrew (7) after nut is tightened.
10. Tighten nut (26). Do not turn valve plunger adjustment screw (27) after nut is tightened.



397-4260

END OF WORK PACKAGE

AIR BRAKE LINES REPLACEMENT

0161 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Engine off (TM 5-3805-261-10)

References

WP 0020 00

Battery disconnect switch in OFF position (TM 5-3805-261-10)

WP 0315 00

Air pressure relieved (TM 5-3805-261-10)

REMOVAL



WARNING

- Do not disconnect air line from release valve until air pressure is zero. All air must be bled from air tanks. Failure to follow this warning may cause injury to personnel.
- Compressed air must not exceed 30 psi (207 kPa). DO NOT direct compressed air against human skin. Make sure air stream is directed away from user and other personnel in the area. Wear protective goggles or face shield. Failure to follow this warning may cause injury to personnel.

CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

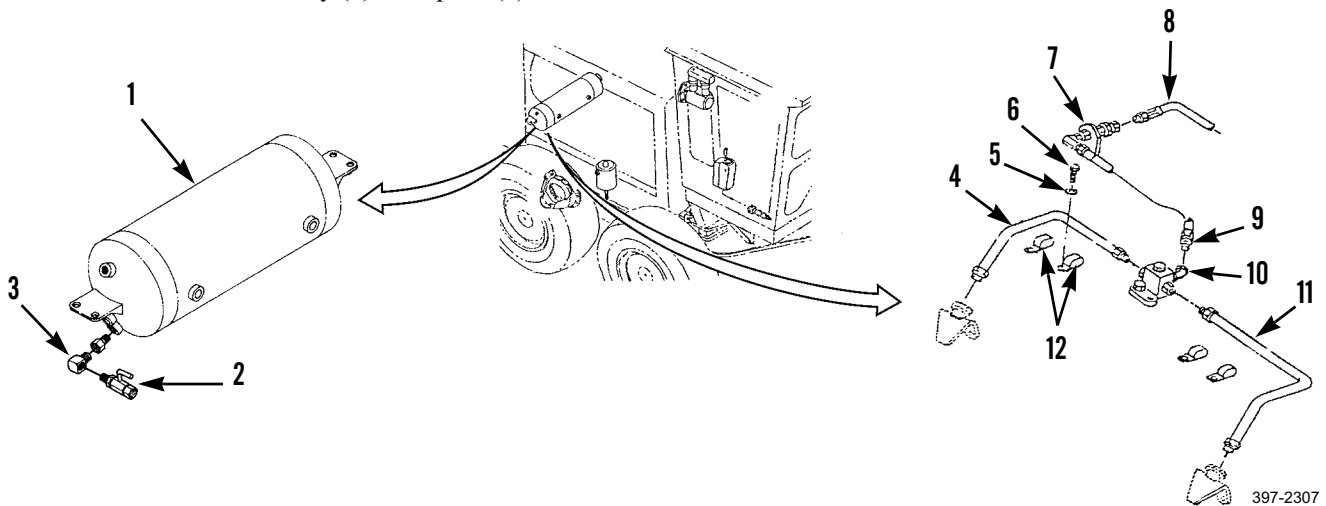
- Tag hose and tube assemblies before disconnecting to aid in installation.
- This procedure covers replacement of the right side air brake lines. Follow these instructions for the left side air brake lines.

REMOVAL - CONTINUED


NOTE

For Type II machines, refer to WP 0315 00

1. Release pressure and drain air tank (1) by opening two valves (2) on two elbows (3).
2. Remove four bolts (6) and washers (5).
3. Remove four clips (12).
4. Disconnect tube assemblies (11 and 4) from block (10) under engine compartment.
5. Remove tube assemblies (11 and 4).
6. Disconnect hose assembly (9) from block (10).
7. Disconnect hose assembly (8) from plate (7).




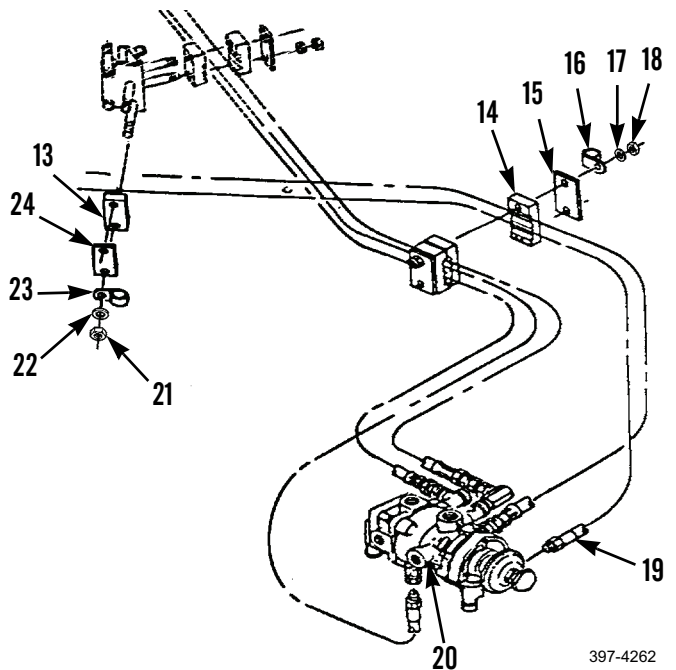8. Remove two nuts (21), washers (22), clip (23), and plate (24) under front-right side of engine compartment.
9. Remove clamp (13).
10. Remove two nuts (18), washers (17), clip (16), and plate (15).
11. Remove clamp (14).
12. Remove hose assembly (19) from air brake valve (20).





REMOVAL - CONTINUED

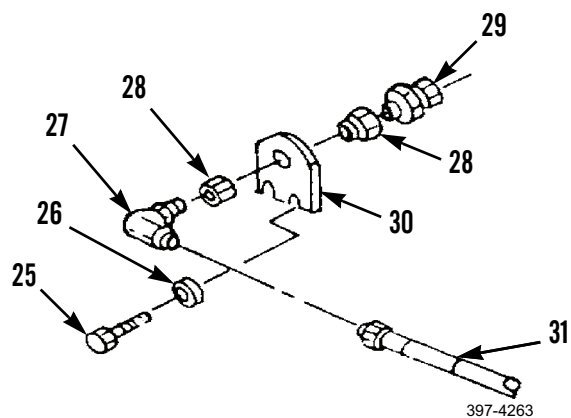13. Remove hose assembly (31) from elbow (27).
14. Remove connector (29), two fittings (28), and elbow (27).
15. Remove two bolts (25), washers (26), and plate (30).



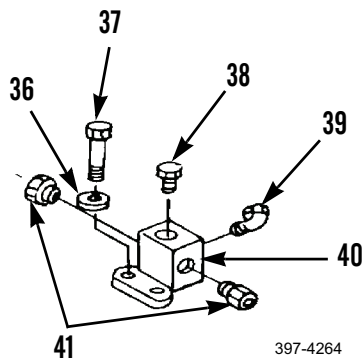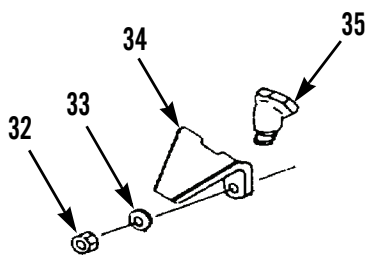16. Remove elbow (39), two connectors (41), plug (38), two bolts (37), washers (36), and block (40).
17. Remove two elbows (35), four nuts (32), washers (33), and two guards (34).




REMOVAL - CONTINUED**NOTE**

Steps 18 through 31 are for the removal of the lines from the right side of the air reservoir to the air brake valve. Follow these instructions for removal of the lines on the left side of the air reservoir.

18. Disconnect hose assemblies (44 and 45) from air brake reservoir (1).
19. Remove bolt (42), washer (49), and clip (50).
20. Remove nut (48), washer (47), and plate (46).
21. Remove clamp (43).
22. Remove hose assembly (45) from air brake valve (20).
23. Disconnect hose assembly (44) from air brake valve (20).

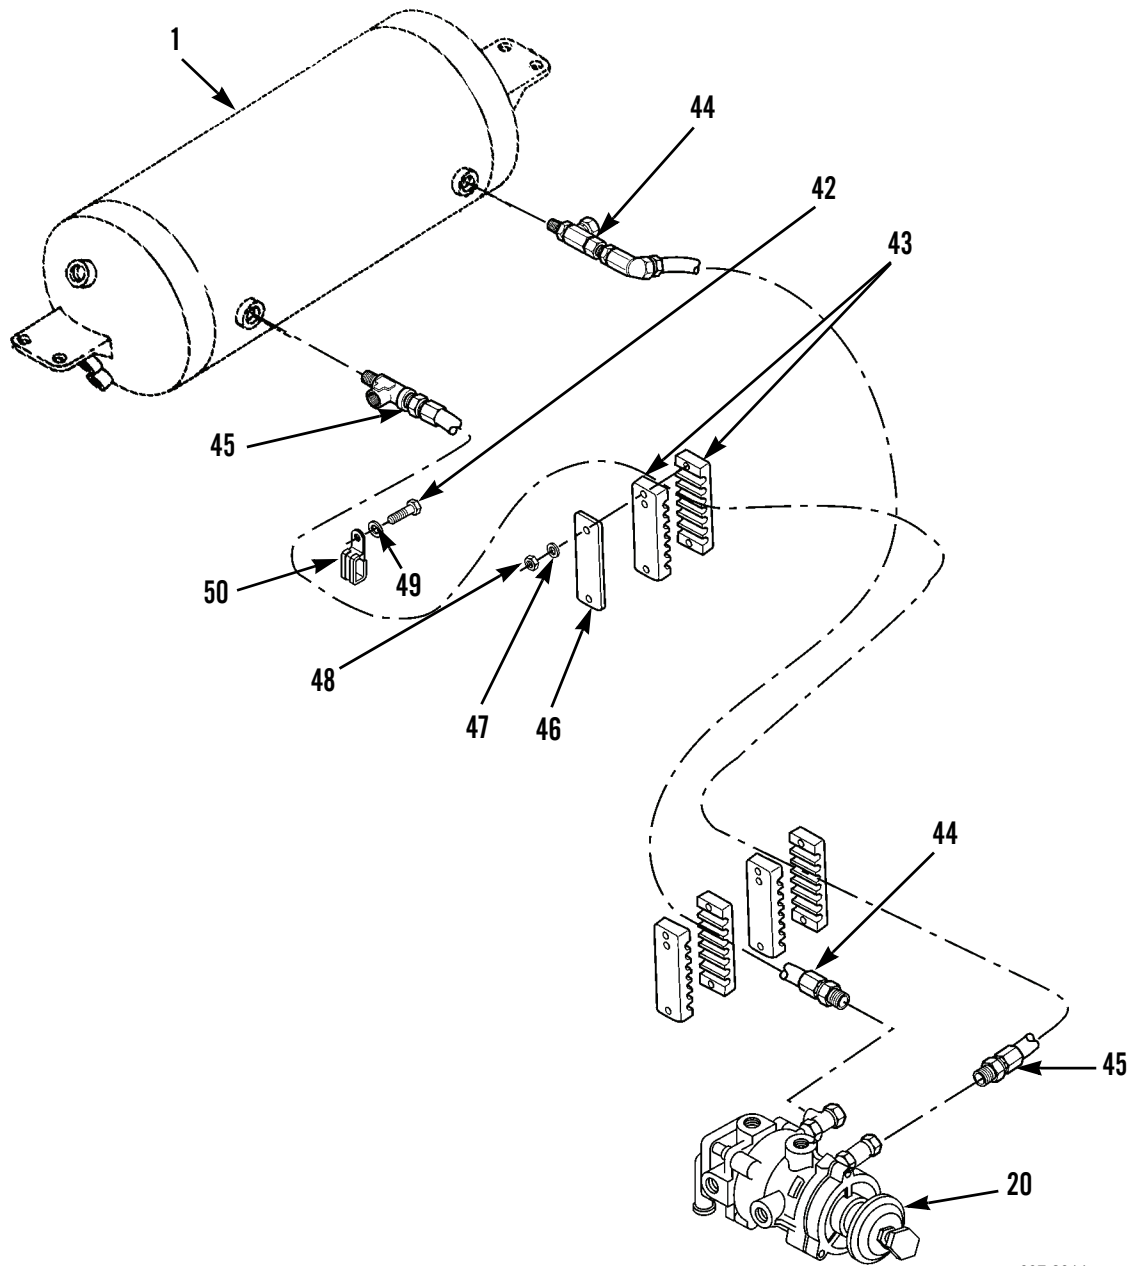REMOVAL - CONTINUED




397-2314

AIR BRAKE LINES REPLACEMENT - CONTINUED

0161 00

REMOVAL - CONTINUED

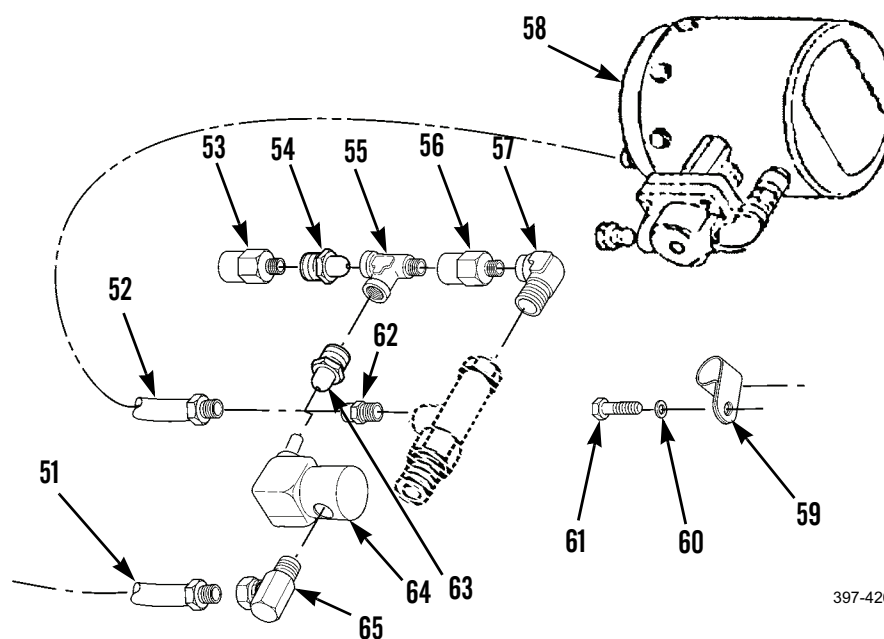24. Remove bolt (61), washer (60), and clip (59).
25. Disconnect hose assembly (52) from release valve assembly (58).
26. Remove hose assembly (52) from connector (62).
27. Remove check valve (53) and nipple (54).
28. Remove hose assembly (51).
29. Remove elbow (65) and solenoid valve (64).
30. Remove nipple (63).
31. Remove tee (55), check valve (56), elbow (57), and connector (62).



397-4266

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

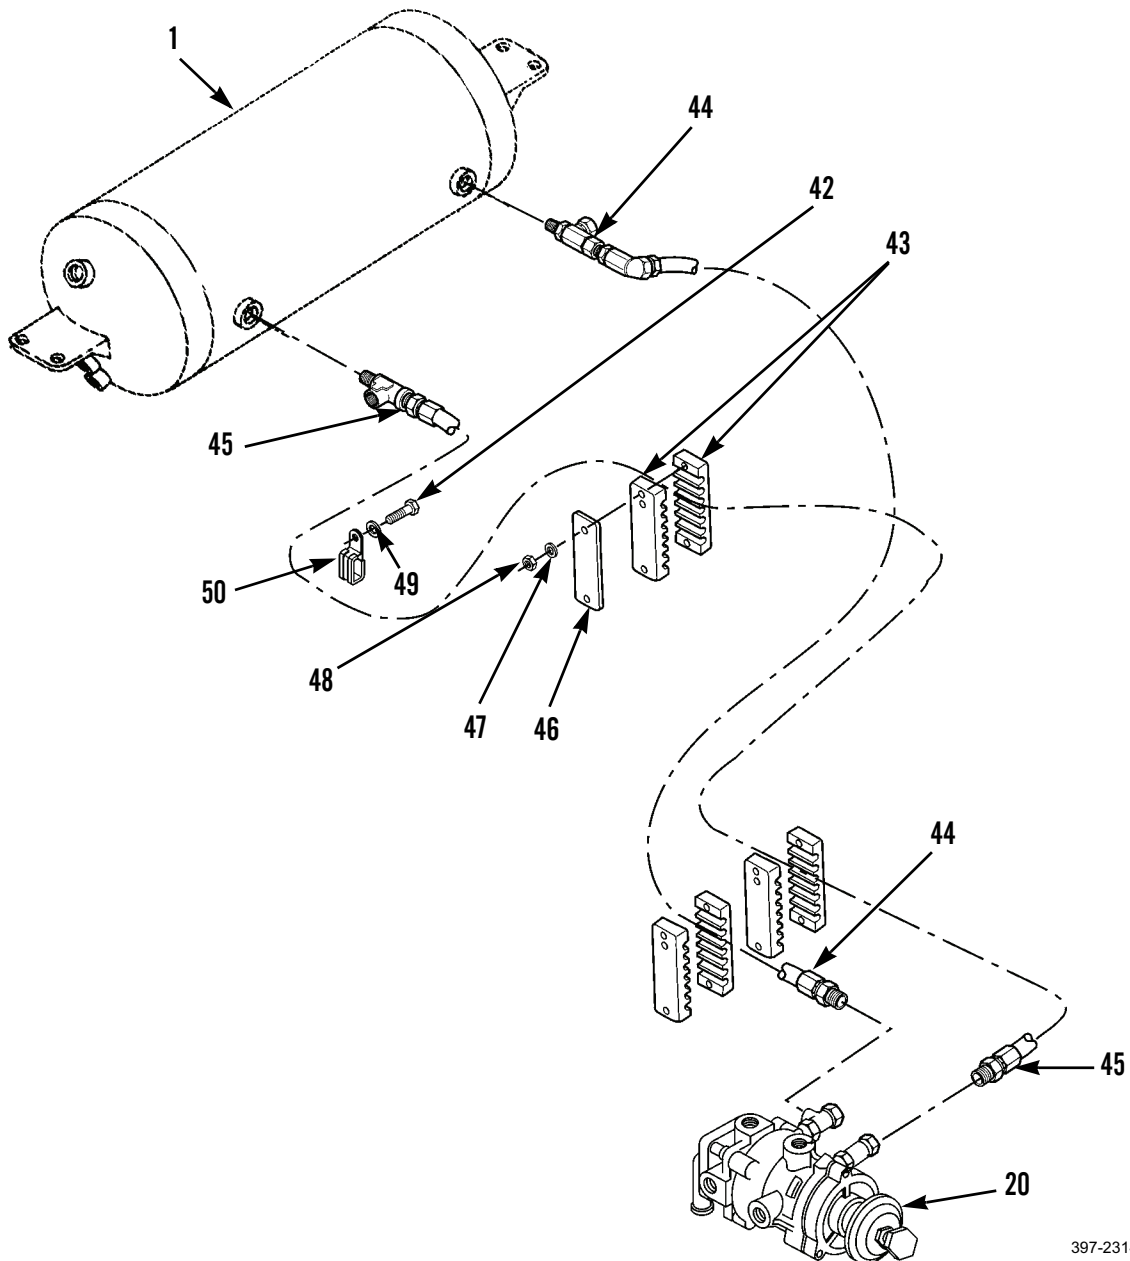
INSTALLATION**NOTE**

Steps 1 through 14 are for the installation of the lines from the right side of the air reservoir to the air brake valve. Follow these instructions for installation of the lines on the left side of the air reservoir.

1. Install connector (62), elbow (57), check valve (56), and tee (55).
2. Install nipple (63).
3. Install solenoid valve (64) and elbow (65).
4. Install hose assembly (51).
5. Install nipple (54) and check valve (53).
6. Install hose assembly (52) to connector (62).
7. Connect hose assembly (52) to release valve assembly (58).
8. Install clip (59), washer (60), and bolt (61).

INSTALLATION - CONTINUED



9. Connect hose assembly (44) to air brake valve (20).
10. Install hose assembly (45) on air brake valve (20).
11. Install clamp (43).
12. Install plate (46), washer (47), and nut (48).
13. Install clip (50), washer (49), and bolt (42).
14. Connect hose assembly (45) to air brake reservoir (1).
15. Connect hose assembly (44) to air brake reservoir (1).



397-2314


INSTALLATION - CONTINUED

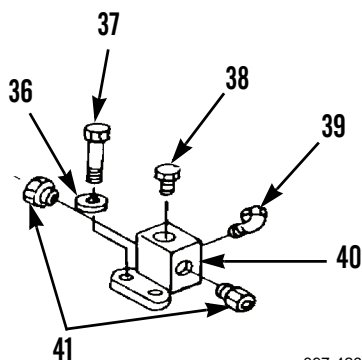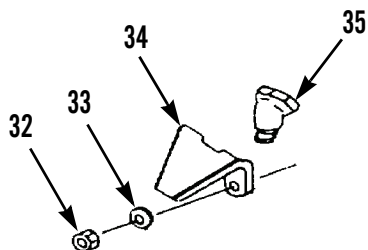16. Install two guards (34), four washers (33), nuts (32), and two elbows (35).
17. Install block (40), two washers (36), bolts (37), plug (38), two connectors (41), and elbow (39).



397-4264

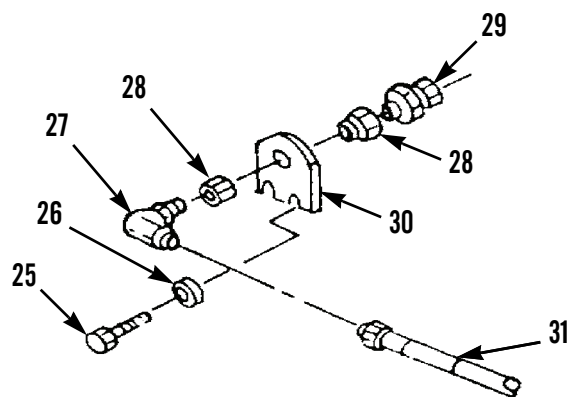18. Install plate (30), two washers (26), and bolts (25).
19. Install elbow (27), two fittings (28), and connector (29) under right-front side of engine compartment.
20. Install hose assembly (31).




397-4263

AIR BRAKE LINES REPLACEMENT - CONTINUED

0161 00



INSTALLATION - CONTINUED

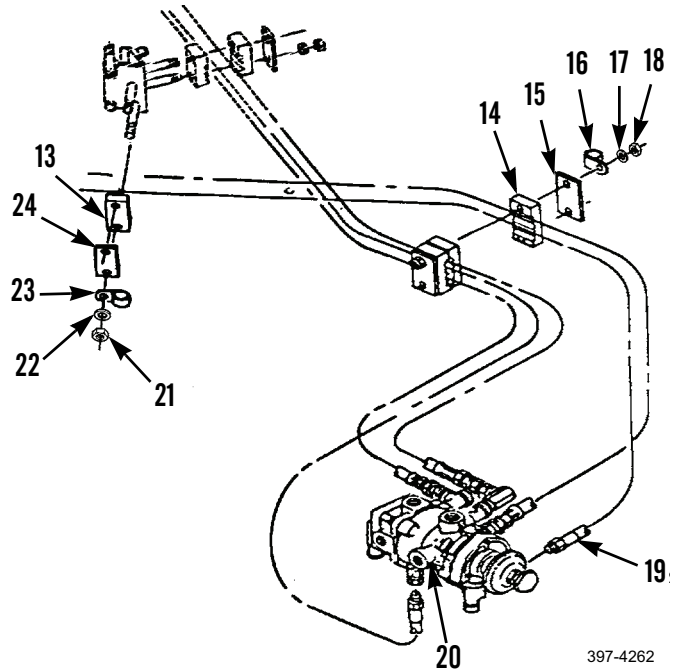21. Install hose assembly (19) on air brake valve (20).
22. Install clamp (14).
23. Install plate (15), clip (16), two washers (17), and nuts (18).
24. Install clamp (13).
25. Install plate (24), clip (23), two washers (22), and nuts (21) under right-front side of engine compartment.



397-4262

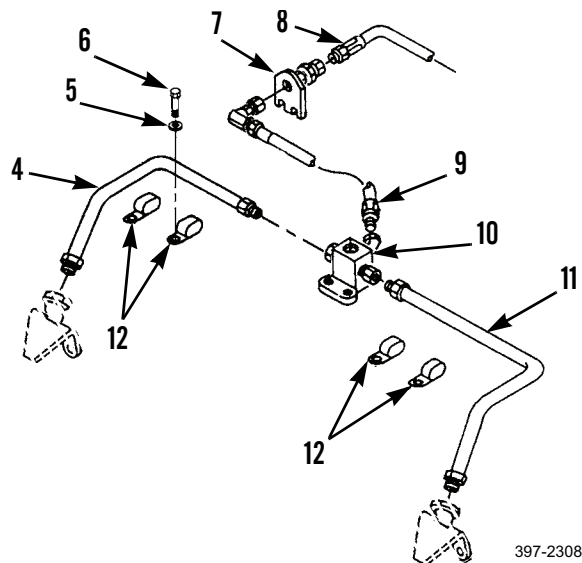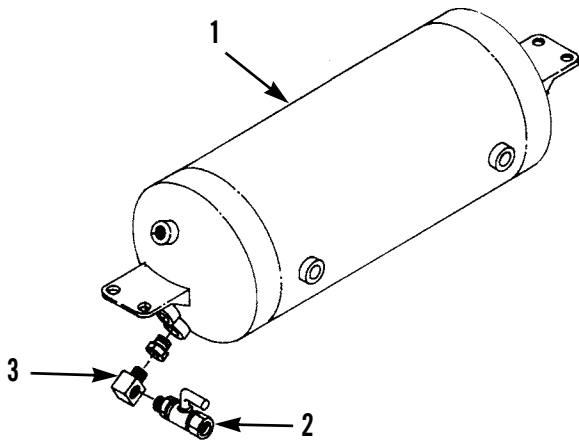26. Connect hose assembly (8) to plate (7).
27. Connect hose assembly (9) to block (10).
28. Install tube assemblies (4 and 11).
29. Connect tube assemblies (4 and 11) to block (10).
30. Install four clips (12).
31. Install four washers (5) and bolts (6).
32. Close two valves (2) on two elbows (3).



397-2308

END OF WORK PACKAGE

AIR BRAKE RESERVOIR REPLACEMENT

0162 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air pressure relieved (TM 5-3805-261-10)

REMOVAL

1. Loosen four nuts (2).



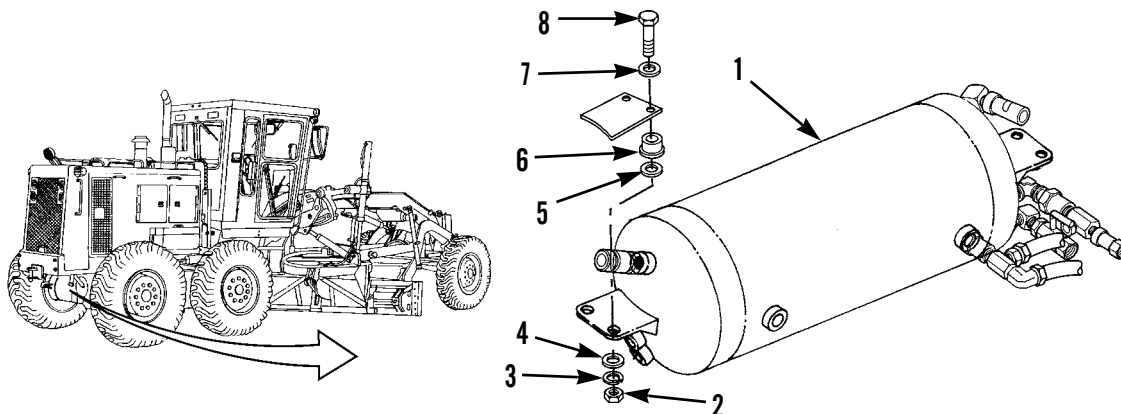
WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Failure to follow this warning may cause injury to personnel.

NOTE

Reservoir weighs 21 lb (9.5 kg).

2. Support reservoir (1).
3. Remove four nuts (2), washers (3 and 4), bolts (8), washers (7), grommets (6), and washers (5).



397-4267

REMOVAL - CONTINUED

4. Remove drain valve (15), elbow (21), and adapter (9) from reservoir (1) from under rear of machine.

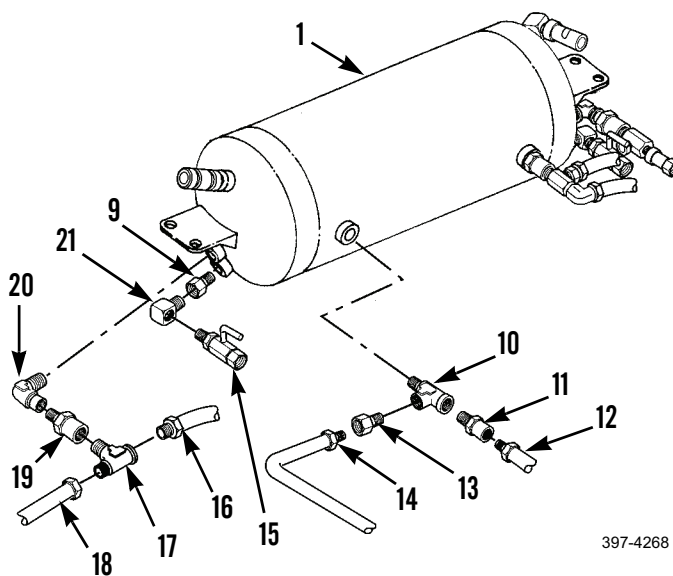
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

5. Disconnect hose assemblies (16 and 18).
6. Remove tee (17), valve (19), and elbow (20).
7. Disconnect hose assembly (14).
8. Remove connector (13).
9. Disconnect hose assembly (12).
10. Remove connector (11) and tee (10).



397-4268

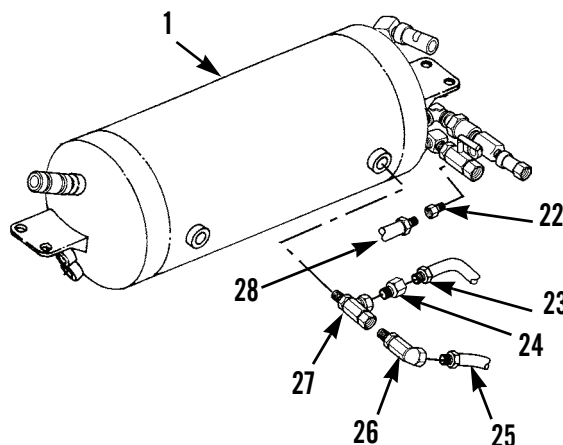
11. Disconnect hose assembly (25).
12. Remove elbow (26).
13. Disconnect hose assembly (23).
14. Remove connector (24) and tee (27) from reservoir (1).
15. Remove hose assembly (28).
16. Remove bushing (22).



397-4269

REMOVAL - CONTINUED

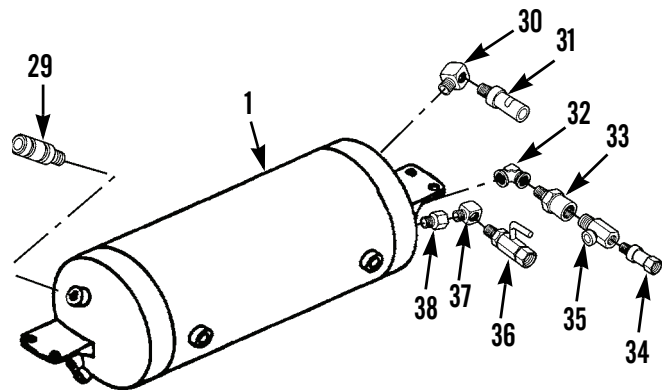17. Remove connector (34), tee (35), valve (33), and elbow (32).
18. Remove drain plug (36), fitting (37), and bushing (38).
19. Remove valves (31 and 29) and fitting (30) from reservoir (1).



397-4270

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

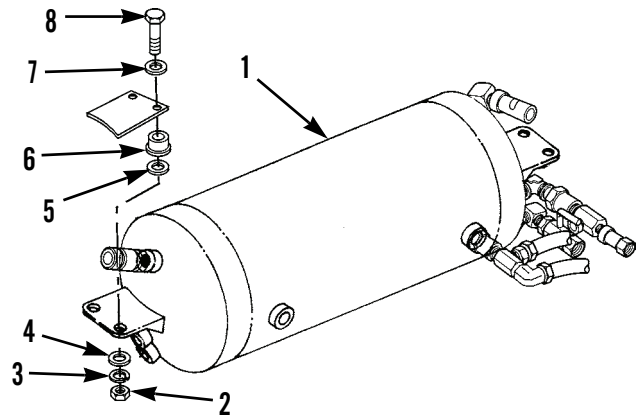
1. Install fitting (30) and two valves (29 and 31) in reservoir (1).
2. Install bushing (38), fitting (37), and drain plug (36).
3. Install elbow (32), valve (33), tee (35), and connector (34).
4. Install bushing (22) and hose assembly (28).
5. Install tee (27) and connector (24) in reservoir (1).
6. Connect hose assembly (23).
7. Install elbow (26).
8. Connect hose assembly (25).
9. Install tee (10) and connector (11) in reservoir (1).
10. Connect hose assembly (12).
11. Install connector (13).
12. Connect hose assembly (14).
13. Install elbow (20), valve (19), and elbow (17).
14. Connect hose assemblies (16 and 18).
15. Install adapter (9), elbow (21), and drain valve (15).

AIR BRAKE RESERVOIR REPLACEMENT - CONTINUED

0162 00

INSTALLATION - CONTINUED

16. Position four washers (7) and bolts (8) in frame weldments under rear of machine.
17. Install reservoir (1), four washers (5), grommets (6), washers (7), bolts (8), washers (3 and 4), and nuts (2).



397-4267

18. Turn battery disconnect switch to ON and start engine (TM 5-3805-261-10).
19. Fill air brake reservoir (TM 5-3805-261-10).
20. Check for leaks.
21. Turn engine off.

END OF WORK PACKAGE

AIR BRAKE RESERVOIR LINES AND FITTINGS REPLACEMENT

0163 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air brake reservoir disconnected (WP 0162 00)

REMOVAL

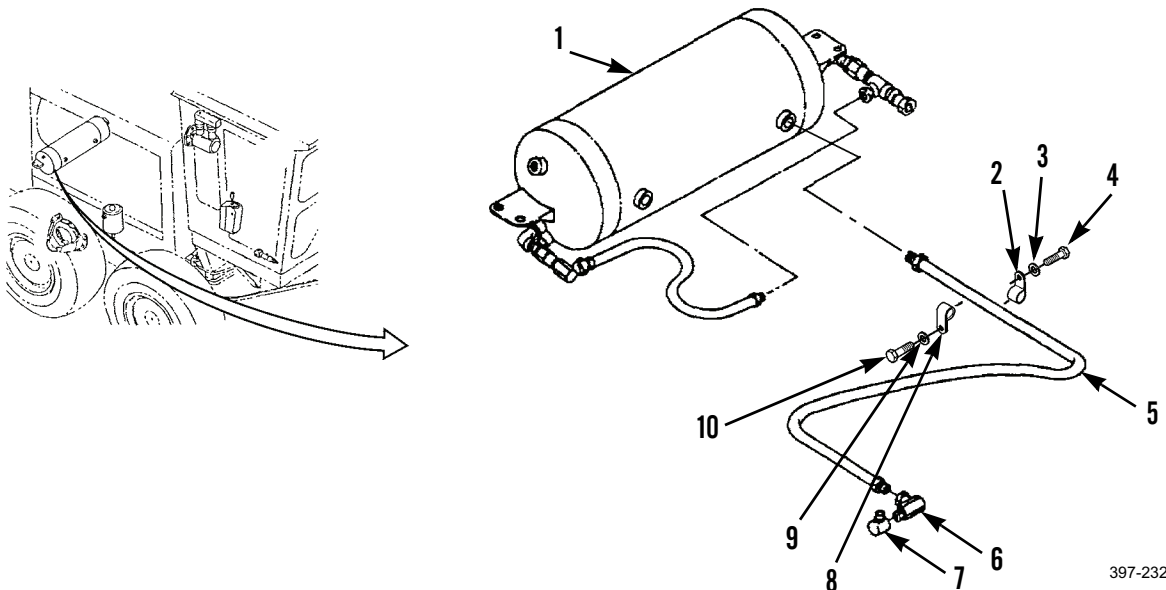
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


1. Disconnect hose assembly (5) from air compressor.
2. Remove elbows (6 and 7).
3. Remove bolt (4), washer (3), clip (2), bolt (10), washer (9), and clip (8).
4. Remove hose assembly (5) from air tank (1).



397-2323

REMOVAL - CONTINUED

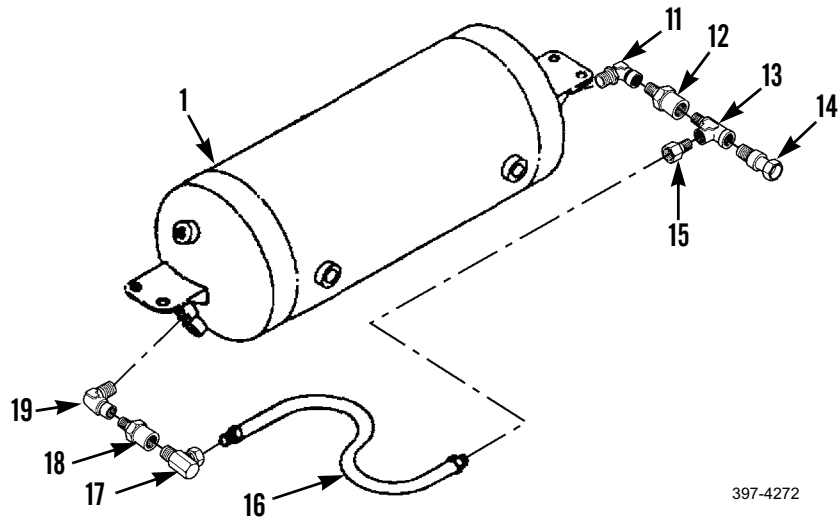5. Disconnect hose assembly (16).
6. Remove elbow (17), valve (18), and elbow (19) from air tank (1).
7. Remove hose assembly (16), connector (14), bushing (15), tee (13), valve (12), and elbow (11).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

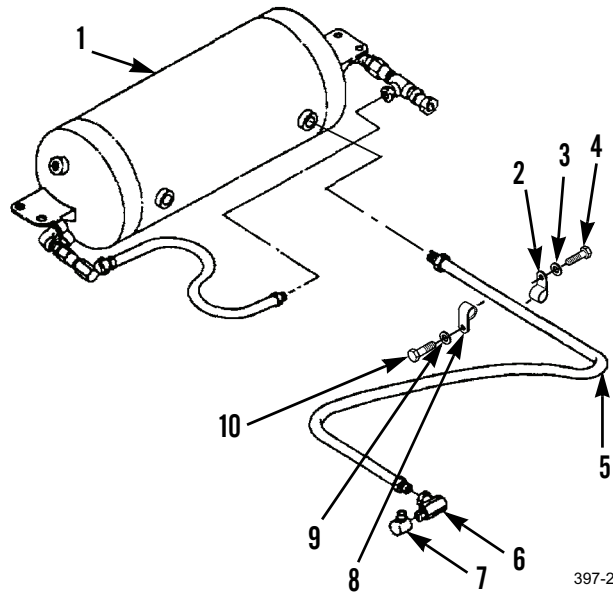1. Install elbow (11), valve (12), tee (13), bushing (15), connector (14), and hose assembly (16) on air tank (1).
2. Install elbow (19), valve (18), and elbow (17).
3. Connect hose assembly (16).
4. Connect hose assembly (5) to air tank (1).
5. Install clip (8), washer (9), bolt (10), clip (2), washer (3), and bolt (4).
6. Install elbows (7 and 6) on air compressor.
7. Install hose assembly (5).



8. Connect air brake reservoir (WP 0162 00).

END OF WORK PACKAGE

AIR DRYER MAINTENANCE (TYPES I AND II MACHINES)

0164 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Dessicant kit

O-ring (7)

Packing, preformed (3)

Seal (2)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air pressure relieved (TM 5-3805-261-10)

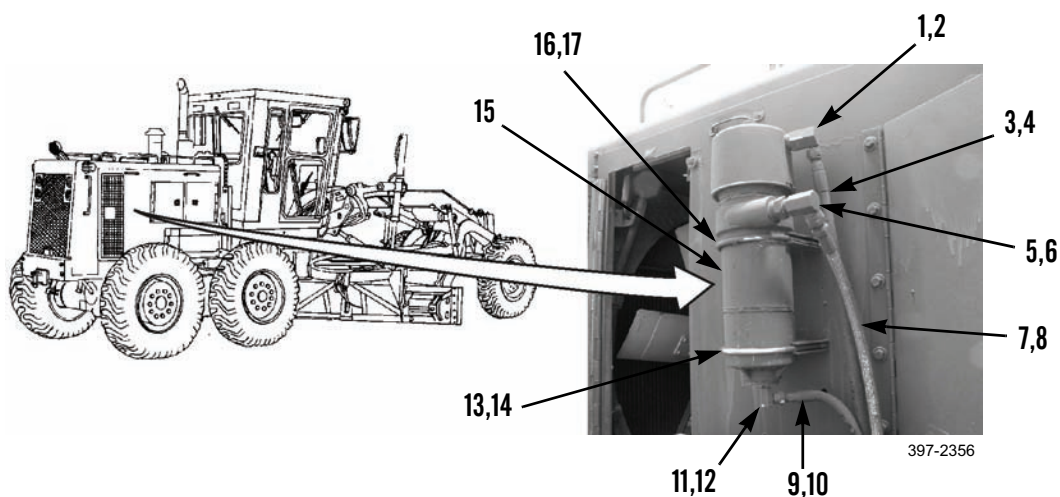
REMOVAL**CAUTION**

Cap hose ends and plug all open fuel ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hoses (3, 7, and 9) and remove O-rings (4, 8, and 10). Discard O-rings.
2. Remove four nuts (14 and 17), two clamps (13 and 16), and air dryer (15).
3. Remove three elbows (1, 5, and 11) and preformed packings (2, 6, and 12) from air dryer (15). Discard preformed packings.

**DISASSEMBLY****CAUTION**

Ensure the outside of air dryer is thoroughly clean prior to disassembly to prevent damage to inner components.

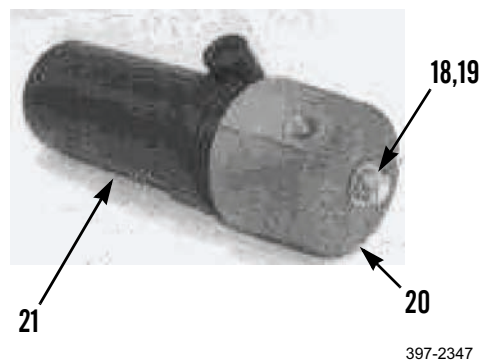1. Matchmark across cap (20) and housing (21) for ease of assembly.
2. Remove two nuts (18) and washer (19) and remove cap (20).




DISASSEMBLY - CONTINUED

3. Remove seal (22) from shaft (23). Discard seal.
4. Remove O-ring (24) from housing (21). Discard O-ring.




397-2348

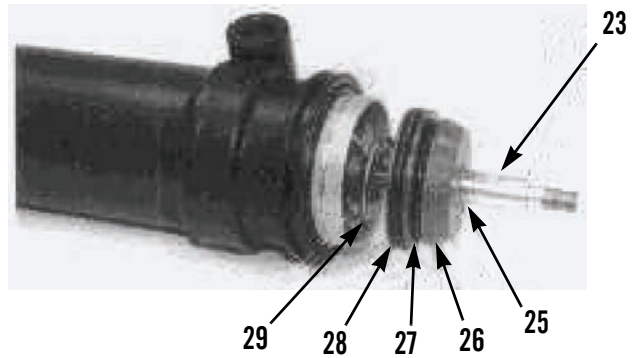5. Remove shaft (23), seal (25), and plate (26). Discard seal.
6. Remove O-rings (27 and 28) from plate (26). Discard O-rings.
7. Remove spring (29).



397-2349

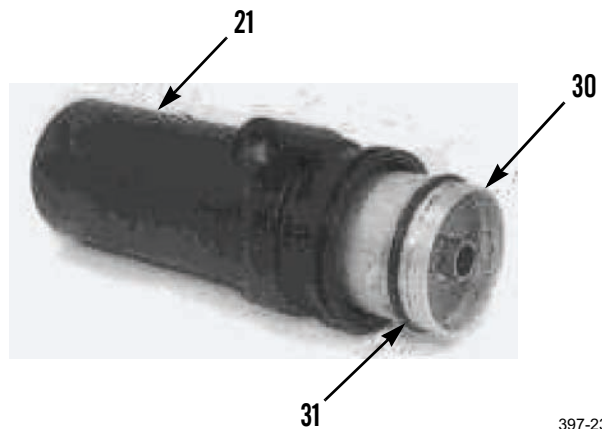
8. Remove cartridge (30) from housing (21). Remove O-ring (31) from cartridge. Discard O-ring.



397-2350


DISASSEMBLY - CONTINUED

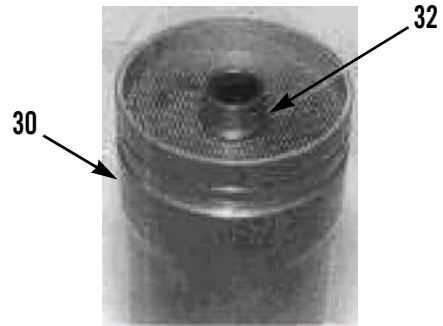9. Remove the retaining ring (32) from cartridge (30).




397-2351

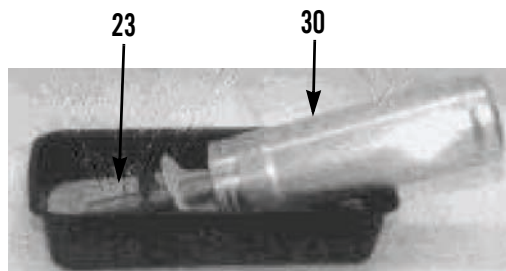10. Place inverted cartridge (30) into a container and allow the dessicant to fall out. Dispose of dessicant properly.
11. Remove shaft (23) from cartridge (30).



397-2352

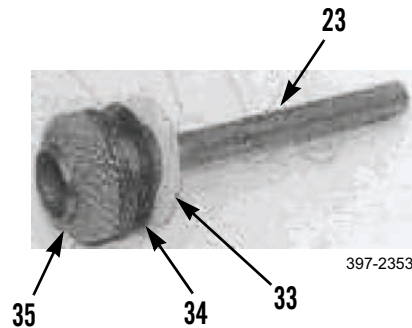12. Remove filter (33), screen (34), and wire mesh (35) from shaft (23).



397-2353

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

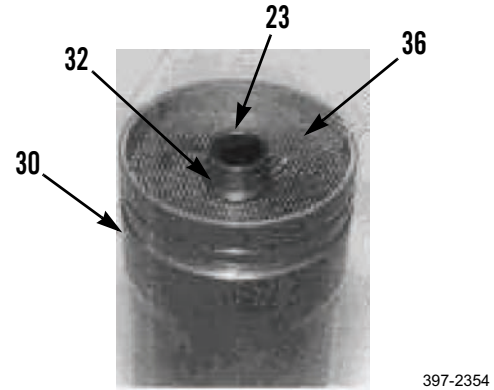
ASSEMBLY

1. Install filter (33), screen (34), and wire mesh (35) on shaft (23).


NOTE

- Ensure shaft is fully seated in cartridge before filling cartridge with dessicant.
- Tap outside of cartridge with soft hammer to settle dessicant.
- Lightly lubricate new O-rings with clean oil.


2. Install shaft (23) in cartridge (30). Fill cartridge with dessicant (36).
3. Install retaining ring (32) in cartridge (30).



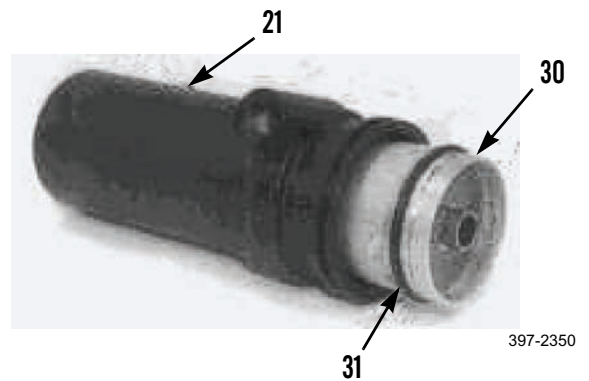4. Install cartridge (30) and new O-ring (31) in housing (21).




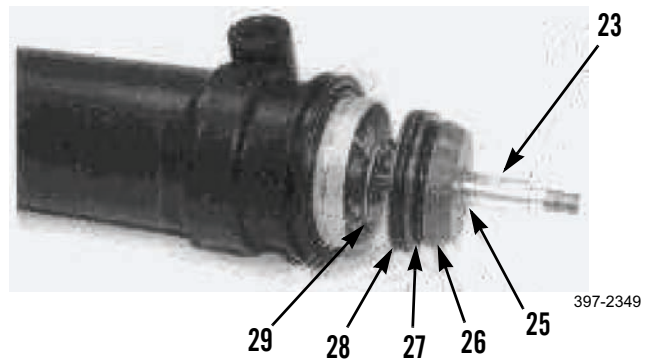5. Install new O-rings (27 and 28) on plate (25).
6. Install spring (29) on shaft (23).
7. Install new seal (25) and plate (26) on shaft (23).




ASSEMBLY - CONTINUED

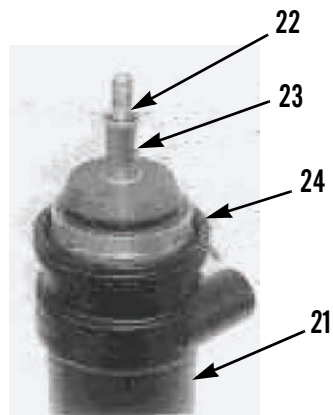8. Install new seal (22) on shaft (23).
9. Install new O-ring (24) on housing (21).



397-2348

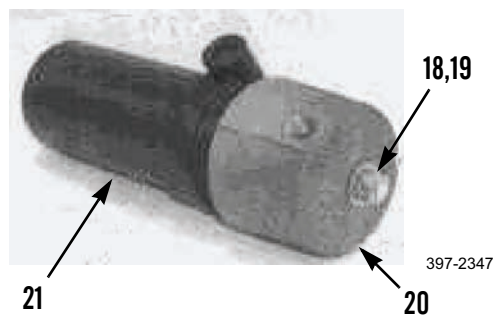
10. Install cap (20) on housing (21), aligning cap and housing with alignment marks. Install washer (19) and two nuts (18).



397-2347

INSTALLATION

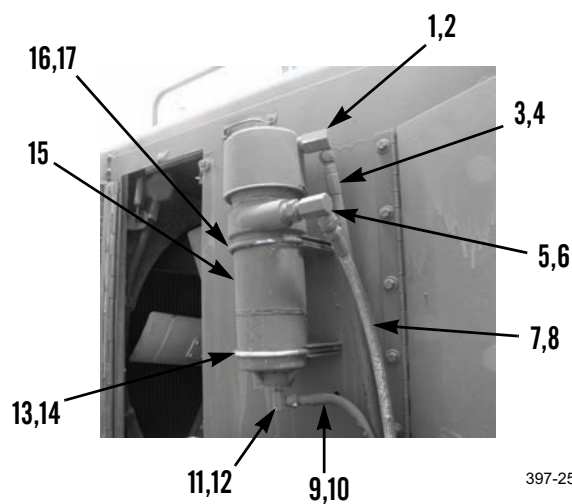1. Install new preformed packings (2, 6, and 12) and three elbows (1, 5, and 11) on air dryer (15).
2. Install two clamps (13 and 16), four nuts (14 and 17), and air dryer (15).
3. Install new O-rings (4, 8, and 10) and connect three hoses (3, 7, and 9).



397-2503

END OF WORK PACKAGE

AIR COMPRESSOR GOVERNOR REPLACEMENT

0165 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Oil, lubricating (Item 29, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side panel removed (WP 0182 00)

Air pressure relieved (TM 5-3805-261-10)

REMOVAL



WARNING

- DO NOT disconnect air line until air pressure is zero. All air must be bled from air tanks. Failure to follow this warning may cause injury to personnel.
- Compressed air must not exceed 30 psi (207 kPa). DO NOT direct compressed air against human skin. Make sure air stream is directed away from user and other personnel in the area. Wear protective goggles or face shield. Failure to follow this warning may cause injury to personnel.

REMOVAL - CONTINUED

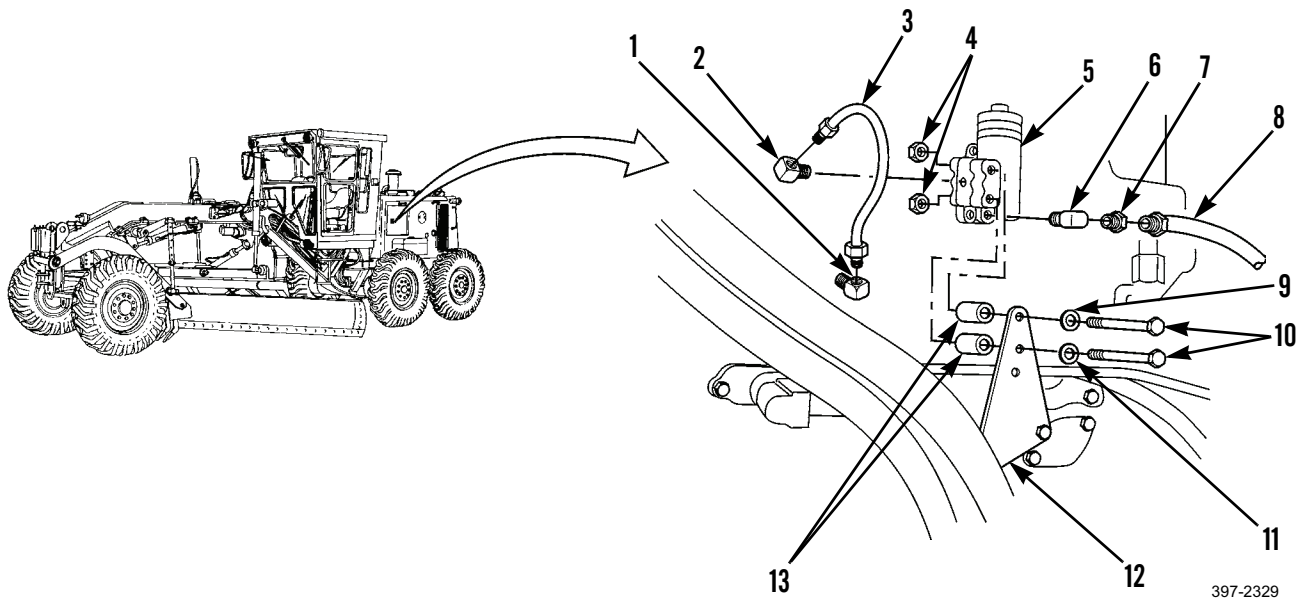
1. Remove air line (3) from elbow (2) on air compressor governor (5).
2. Loosen air line (3) at elbow (1) and move aside.
3. Remove elbows (1 and 2) from air compressor governor (5).

CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

- Do not remove bottom two bolts in mounting bracket.
 - Tag hose and tube assemblies before disconnecting to aid in installation.
4. Remove two bolts (10), washers (11 and 9), two spacers (13), and nuts (4) from bracket (12) and air compressor governor (5).
 5. Disconnect air tank line (8) from connector (7).
 6. Remove connector (7) and elbow (6).
 7. Remove air compressor governor (5).



397-2329

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install air compressor governor (5).
2. Install elbow (6) and connector (7) on air compressor governor (5).
3. Connect air tank line (8).
4. Install two nuts (4), spacers (13), washers (11 and 9), and two bolts (10) to secure governor assembly (5) to bracket (12).
5. Install elbows (1 and 2) on air compressor governor (5).
6. Install air line (3) on elbow (2).
7. Tighten air lines (3) at elbow (1).
8. Install left side engine panel (WP 0051 00).

END OF WORK PACKAGE

FRONT WHEELS REPLACEMENT

0166 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, contact truck (Item 77, WP 0348 00)

Jack, hydraulic (Item 37, WP 0348 00)

Jack stand (Item 84, WP 0348 00)

Sling (Item 78, WP 0348 00)

Wrench, torque (Item 102, WP 0348 00)

Lifting device, 500-lb capacity

Wood blocks

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL**WARNING**

Be sure the parking brake is set before beginning this task. In addition, block the wheel opposite the one being removed. Failure to do so may cause the machine to slip off the jack stand causing injury or death to personnel.

REMOVAL - CONTINUED**NOTE**

- This procedure covers replacement of the right front wheel. Follow these instructions for the left front wheel.
- Some machines have 10 bolts instead of 10 nuts.

1. Loosen 10 nuts (1).
2. Position hydraulic jack under machine and raise front wheels off ground high enough to position jack stand.
3. Position jack stand under machine.


**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Wheel and tire weighs 485 lb (220 kg).

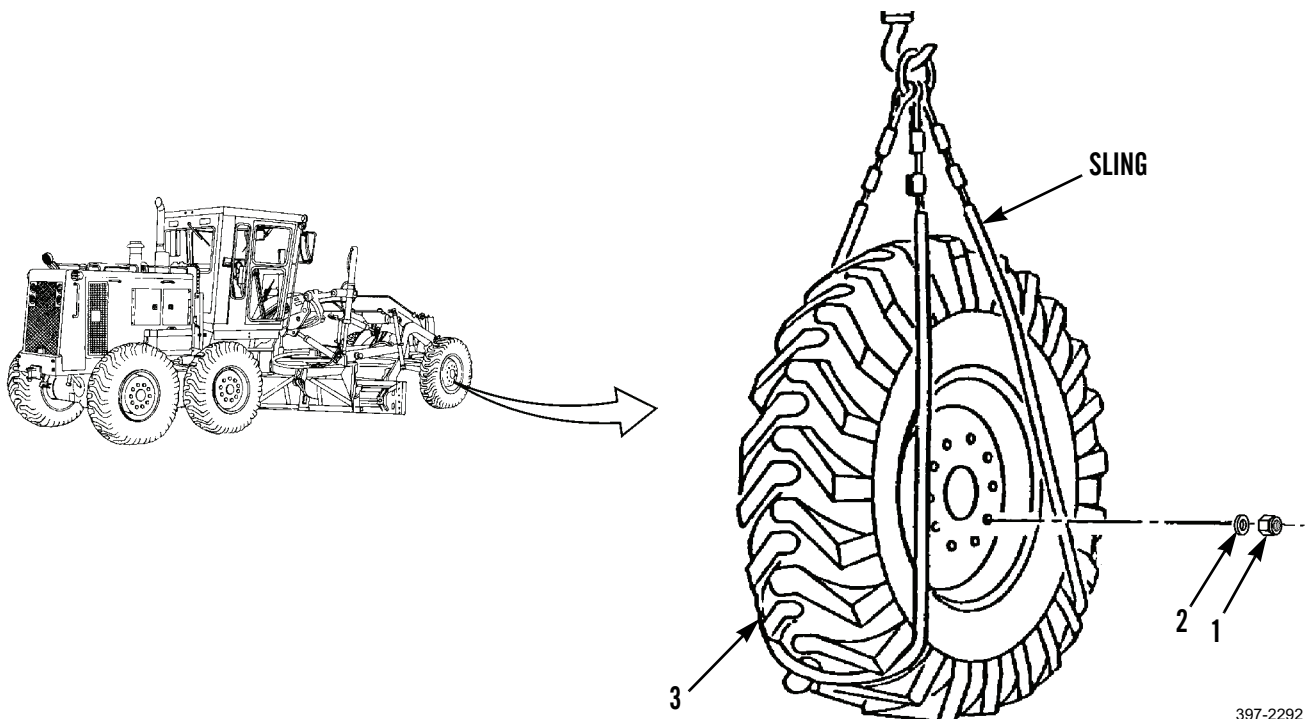4. Attach sling around front wheel (3).
5. Remove 10 nuts (1) and washers (2).
6. Remove front wheel (3) from machine.




397-2292

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

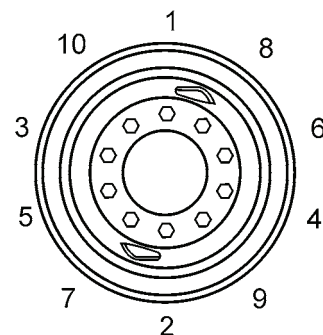1. Install sling on front wheel (3).
2. Position front wheel (3) on machine.
3. Install 10 washers (2) and nuts (1).
4. Use hydraulic jack to lift machine and remove jack stand.
5. Lower front wheel (3) to ground and remove hydraulic jack.

**TIGHTENING PATTERN**

397-2502

WARNING

Whenever any lug nuts require tightening or a wheel has been removed and replaced, all lug nuts must be tightened to the required torque. Failure to follow this warning may result in serious injury to personnel or damage to equipment.

NOTE

- Tightening pattern is the same for all wheel assemblies.
 - After operating vehicle for 50 to 100 miles (80 to 160 km), tighten lug nuts again.
6. Tighten 10 bolts (1) evenly to 450 ± 30 lb-ft (610 ± 41 Nm) or tighten 10 nuts to 365 ± 25 lb-ft (495 ± 34 Nm), in accordance with tightening pattern.
 7. Remove sling.
 8. Check pressure of tire (TM 5-3805-261-10).

END OF WORK PACKAGE

REAR WHEELS REPLACEMENT

0167 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Jack, hydraulic (Item 37, WP 0348 00)

Jack stand (Item 84, WP 0348 00)

Sling (Item 78, WP 0348 00)

Wrench, torque (Item 102, WP 0348 00)

Lifting device, 500-lb capacity

Wood blocks

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

REMOVAL



WARNING

Be sure the parking brake is set before beginning this task. In addition, block the wheel opposite the one being removed. Failure to do so may cause the machine to slip off the jack stand causing injury or death to personnel.

NOTE

- This procedure covers replacement of the right rear wheel. Follow these instructions for the left rear wheel.
- Some machines have 10 bolts instead of 10 nuts.

REMOVAL - CONTINUED

1. Loosen 10 nuts (1).
2. Position hydraulic jack under machine and raise rear wheels off ground high enough to position jack stand.
3. Position jack stand under machine.



**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Rear wheel weighs 430 lb (195 kg).

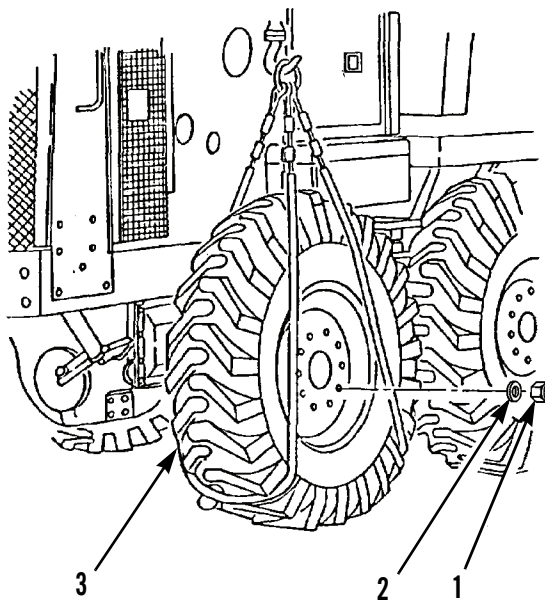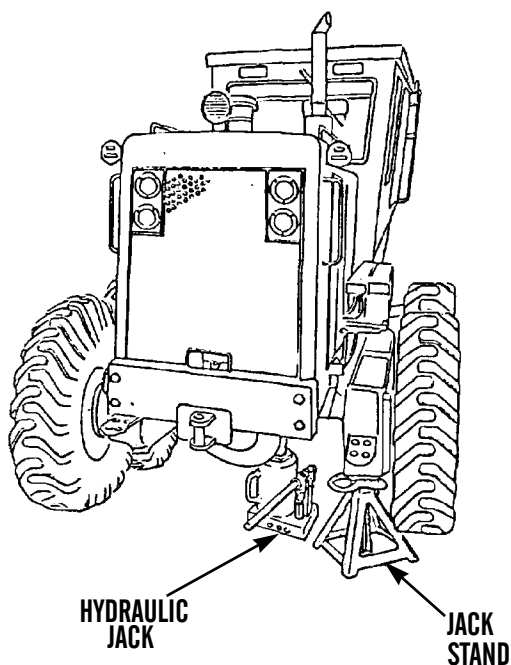4. Attach sling around rear wheel (3).
5. Remove 10 nuts (1) and washers (2).
6. Remove rear wheel (3) from machine.



397-489

REAR WHEELS REPLACEMENT - CONTINUED

0167 00***CLEANING AND INSPECTION***

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install sling on rear wheel (3).
2. Position rear wheel (3) on machine.
3. Install 10 washers (2) and nuts (1).
4. Use hydraulic jack to lift machine and remove jack stand.
5. Lower rear wheel (3) to ground and remove hydraulic jack.
6. Tighten 10 bolts (1) evenly to 420 to 480 lb-ft (569 to 651 Nm). Tighten 10 nuts to 340 to 390 lb-ft (461 to 529 Nm).
7. Remove sling.
8. Check pressure of tire (TM 5-3805-261-10).

END OF WORK PACKAGE

TIRES MAINTENANCE

0168 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Repair, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Guard, safety, tire inflation (Item 29, WP 0348 00)

Sling (Item 78, WP 0348 00)

Lifting device, 500-lb capacity

Materials/Parts

Lubricant (Item 21, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Grommet

Packing, preformed

References

TM 9-2610-200-14

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Wheel removed (WP 0166 00 or WP 0167 00)

REMOVAL

1. Remove valve cap (4) and exhaust air from tire (6).
2. Use pneumatic tire valve repair tool to remove valve core (5).
3. Use hammer and pry bars to remove lock ring (1).
4. Use tire iron to break seal between bead of tire (6) and rim of wheel (7) around entire circumference of tire. Insert pieces of spare metal stock to prevent tire from reseating itself on rim of wheel.
5. Use pry bars to remove flange (2).
6. Remove and discard preformed packing (3).


**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Wheels weigh 485 lb (220 kg).

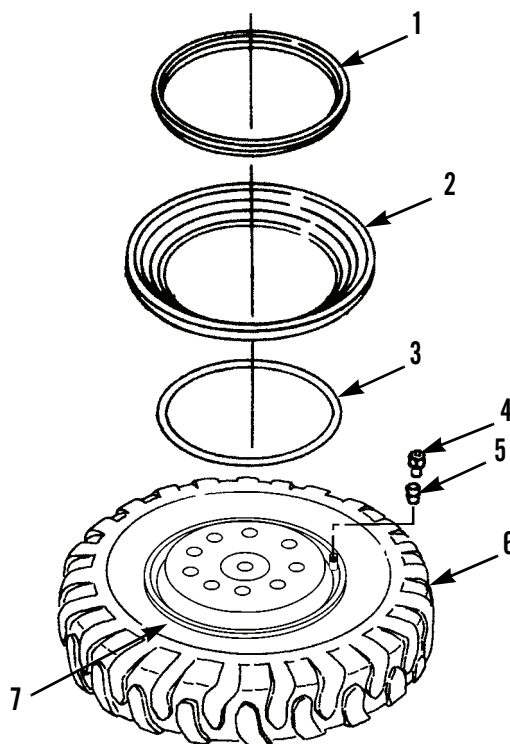
7. Attach sling to tire (6), lift up, turn over, and lower to work area with inside of wheel (7) facing upward.
8. Remove sling.



397-4306


REMOVAL - CONTINUED

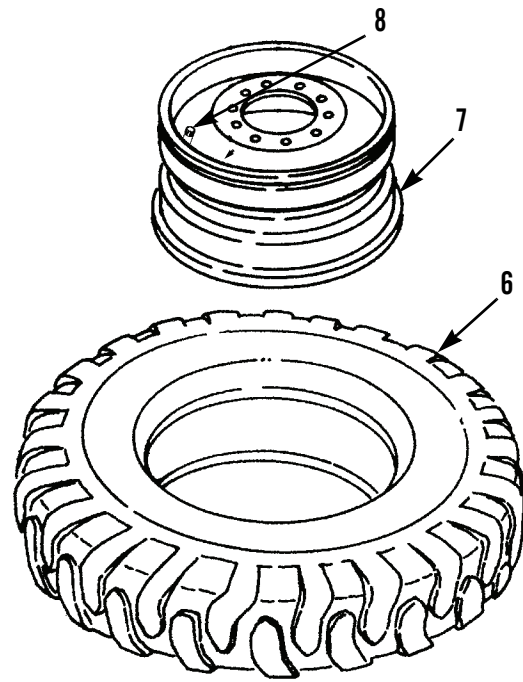9. Use sledge hammer to remove wheel (7) from tire (6) and set down on work surface with valve stem (8) facing upward.



397-4307

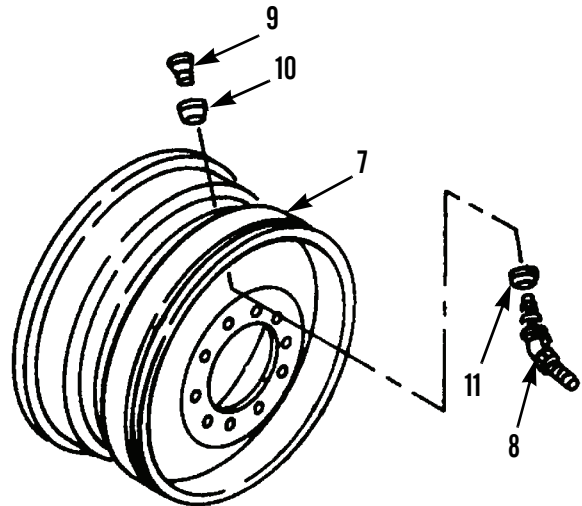10. Remove spud (9), grommet (10), nut (11), and valve stem (8) from wheel (7). Discard grommet.



397-4308

CLEANING AND INSPECTION

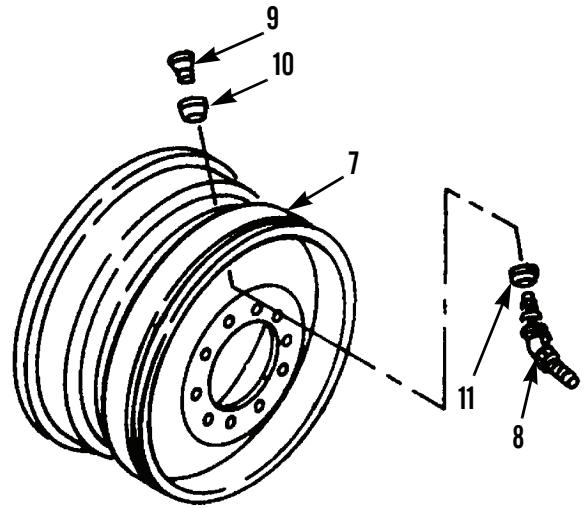
Clean and inspect all parts in accordance with WP 0020 00.

REPAIR

Repair tire in accordance with TM 9-2610-200-14.

INSTALLATION

1. Install valve stem (8), nut (11), new grommet (10), and spud (9) on wheel (7).




397-4308

CAUTION

Do not use soap or detergent solutions to lubricate tire.

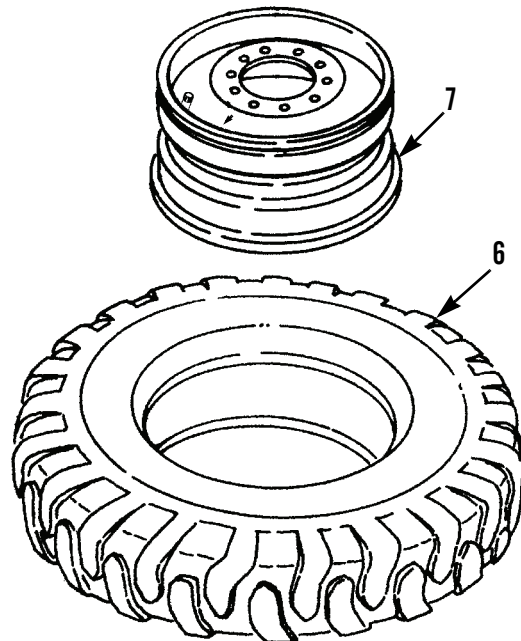
2. Apply rubber lubricant to inside bead of tire (6).
3. Install wheel (7) on tire (6).
4. Attach sling to tire (6), lift up, turn over, and set down on work surface with inside face of wheel (7) downward.
5. Remove sling.



397-4307

INSTALLATION - CONTINUED

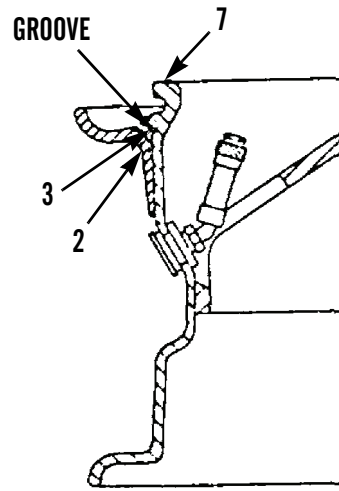6. Install flange (2) on wheel (7), ensuring that groove for preformed packing (3) is exposed around entire circumference of wheel.
7. Apply rubber lubricant to new preformed packing (3).



397-4309

CAUTION

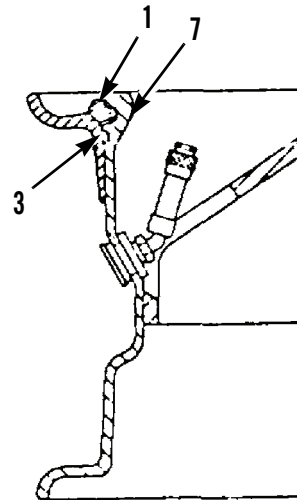
Ensure preformed packing is not twisted or cut during installation.

8. Install new preformed packing (3) in second (shallow) groove of wheel (7).

CAUTION

Ensure lock ring is seated in first groove all around wheel.

9. Install lock ring (1) in first (deep) groove of wheel (7).
10. Apply rubber lubricant to bead of outer side of tire.



397-4310

INSTALLATION - CONTINUED**NOTE**

Ensure that valve core is not installed.

11. Attach pneumatic tire inflator-gauge to valve stem (8).

WARNING

Use large tire inflation guard. Stand behind tread when inflating tires. Ensure that tires are properly seated on rims. Correct tire pressure is 35 psi (241 kPa). Improperly seated and overinflated tires can burst with explosive force. Failure to follow this warning may cause injury or death to personnel.

NOTE

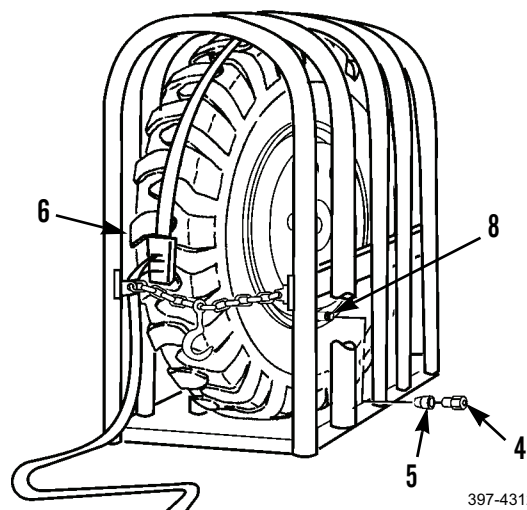
You may have to compress tire using chains and cable hoist to get beads to seat.

12. Place tire inside tire inflation guard. Inflate tire (6) to 35 psi (241 kPa).
13. Remove pneumatic tire inflator-gauge and exhaust air from tire (6).
14. Install valve core (5).

WARNING

Use large tire inflation guard. Stand behind tread when inflating tires. Ensure that tires are properly seated on rims. Correct tire pressure is 35 psi (241 kPa). Improperly seated and overinflated tires can burst with explosive force. Failure to follow this warning may cause injury or death to personnel.

15. Place tire inside tire inflations guard. Inflate tire (6) to 35 psi (241 kPa).
16. Install valve cap (4) and remove tire from guard.
17. Install wheel (WP 0166 00 or WP 0167 00).



END OF WORK PACKAGE

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN)

0169 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (12)

References

WP 0020 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

**WARNING**

- Do NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
- At operating temperature, hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulic lines. Failure to follow this warning may cause injury to personnel.
- Lubricating/hydraulic oils, engine coolant, fuel, and other fluids used in the performance of maintenance can be very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

REMOVAL

1. For hydraulic pressure relief, ensure supplemental steering is off.
2. Operate each implements control lever.
3. Turn steering wheel back and forth.
4. Remove hydraulic tank cap.
5. Install hydraulic tank cap.

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED

0169 00

REMOVAL - CONTINUED

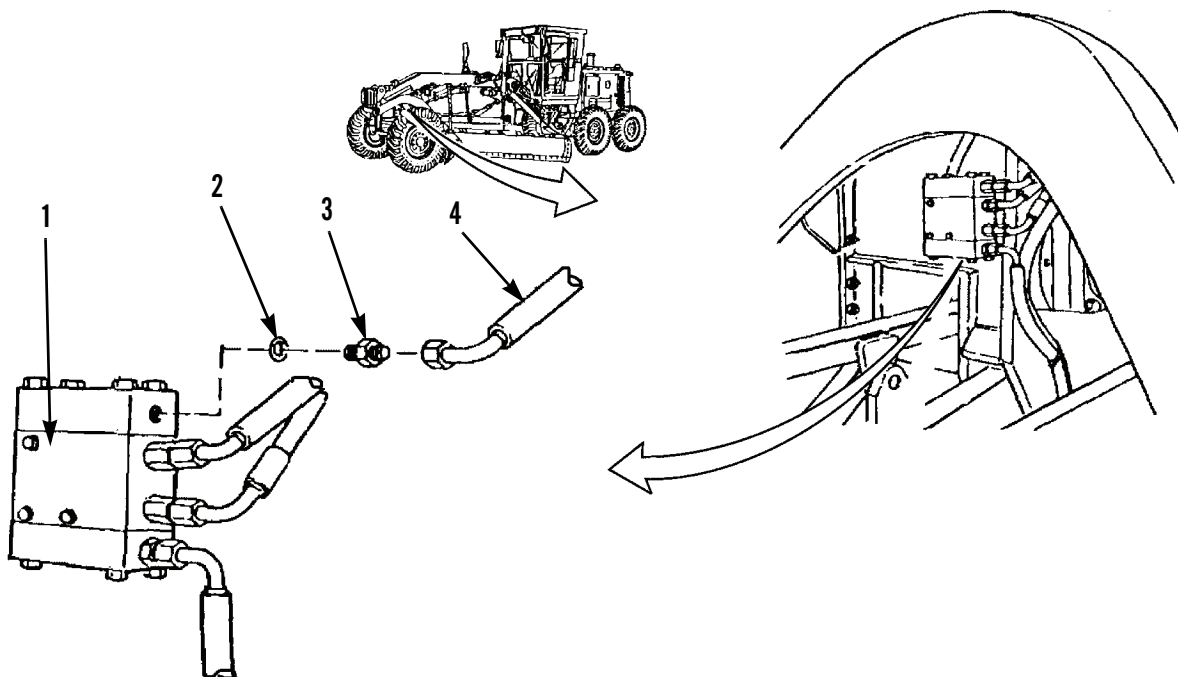
CAUTION

Cap hose ends to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

6. Disconnect hose assembly (4) from top valve port of left steering valve (1).
7. Remove connector (3) and preformed packing (2). Discard preformed packing.



397-497

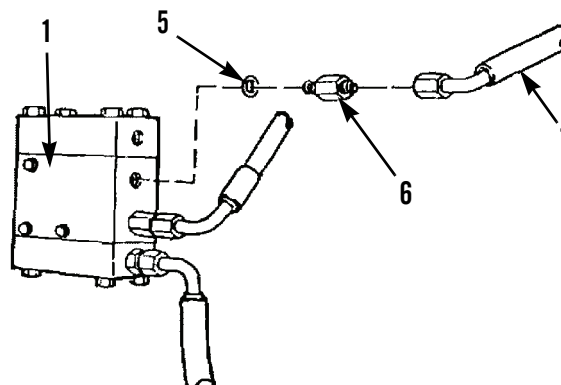8. Disconnect hose assembly (7) from second valve port on top of left steering valve (1).
9. Remove connector (6) and preformed packing (5). Discard preformed packing.




397-498

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED

0169 00


REMOVAL - CONTINUED

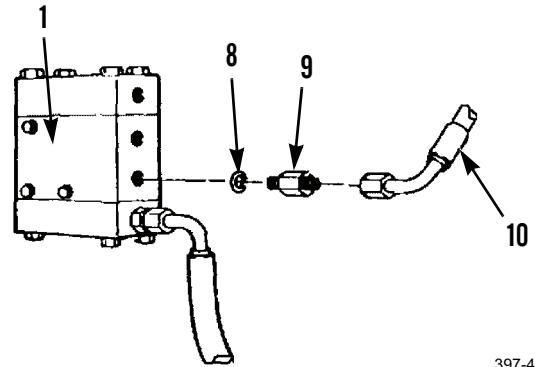10. Disconnect hose assembly (10) from third valve port on top of left steering valve (1).
11. Remove connector (9) and preformed packing (8). Discard preformed packing.



397-499

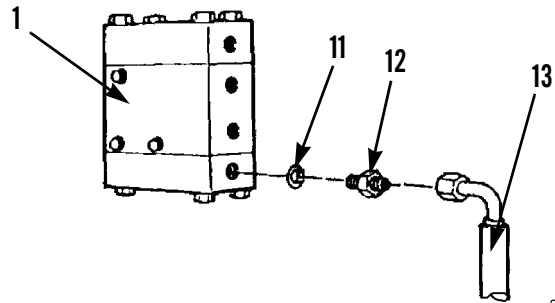12. Disconnect hose assembly (13) from bottom valve port of left steering valve (1).
13. Remove connector (12) and preformed packing (11). Discard preformed packing.




397-500

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED

0169 00


REMOVAL - CONTINUED

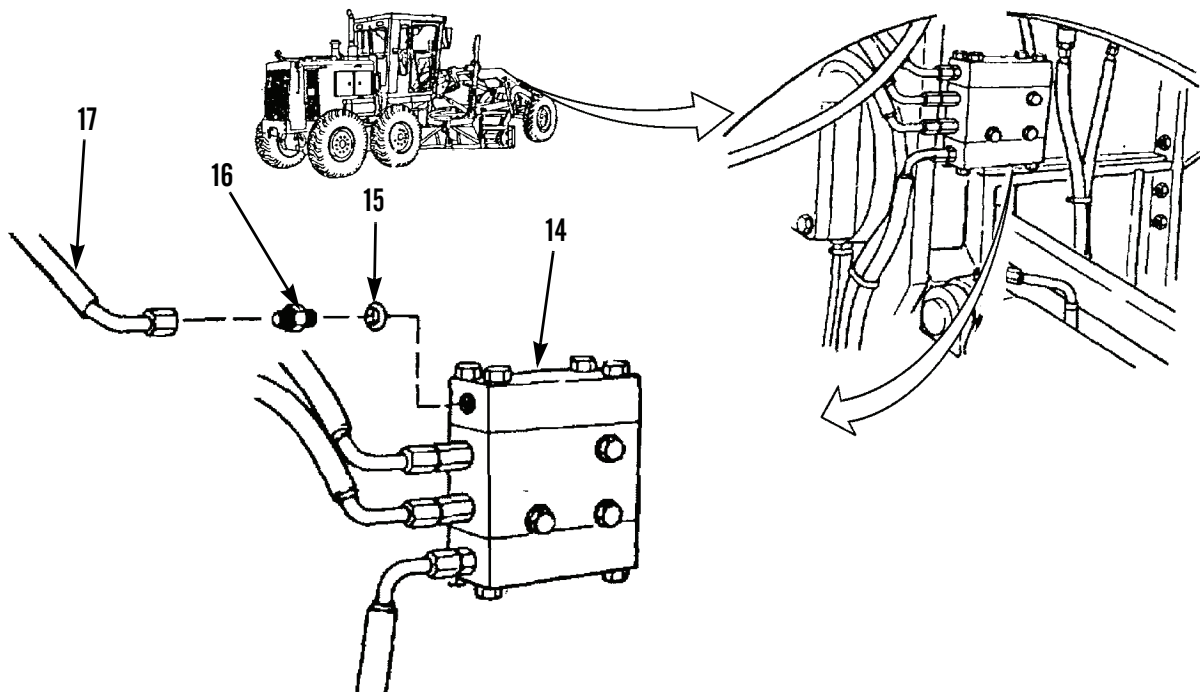14. Remove hose assembly (17) from top valve port of right steering valve (14).
15. Remove connector (16) and preformed packing (15). Discard preformed packing.



397-501

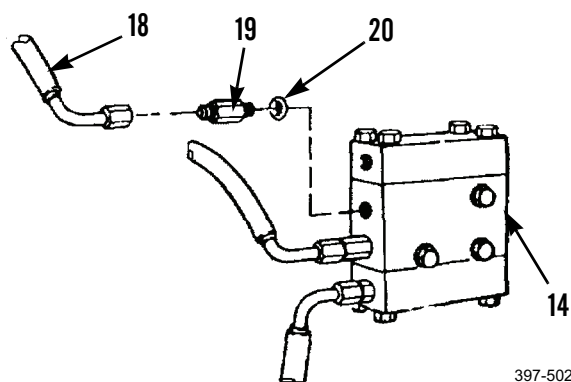16. Remove hose assembly (18) from second valve port on top of right steering valve (14).
17. Remove connector (19) and preformed packing (20). Discard preformed packing.




397-502

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED


0169 00

REMOVAL - CONTINUED

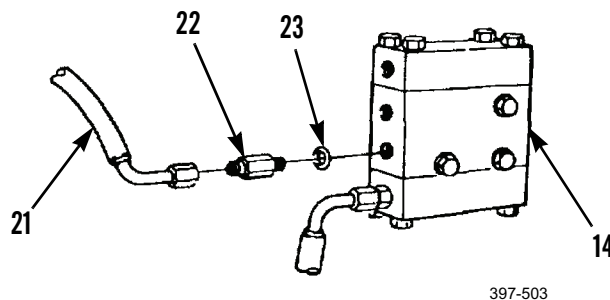
18. Disconnect hose assembly (21) from third valve port on top of right steering valve (14).
19. Remove connector (22) and preformed packing (23). Discard preformed packing.



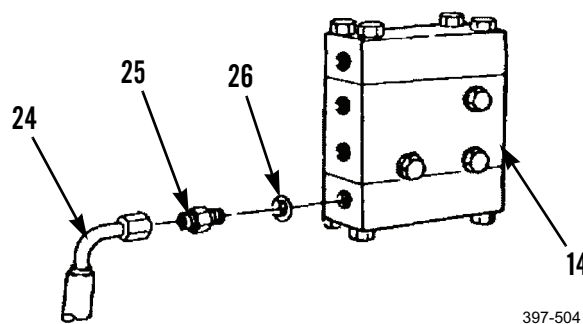20. Disconnect hose assembly (24) from bottom valve port of right steering valve (14).
21. Remove connector (25) and preformed packing (26). Discard preformed packing.



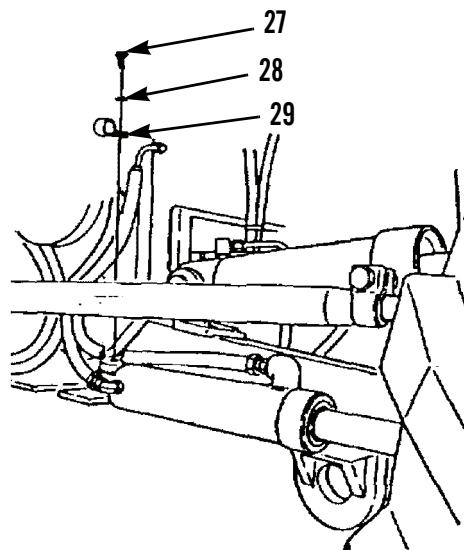22. Remove bolt (27), washer (28), and clip (29).




STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED


0169 00

REMOVAL - CONTINUED

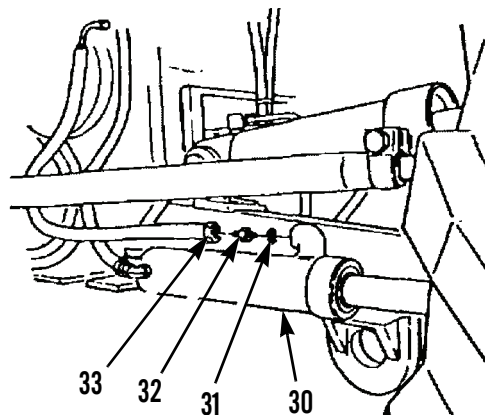
23. Remove hose assembly (33) from top of right steering cylinder (30).
24. Remove connector (32) and preformed packing (31). Discard preformed packing.



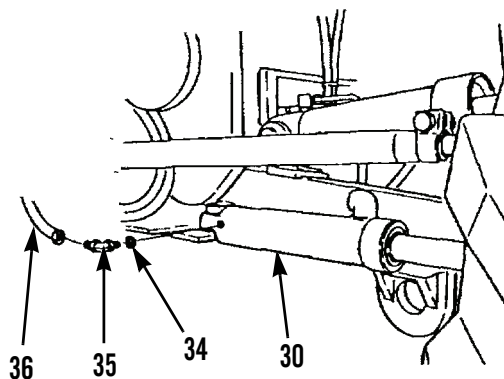25. Remove hose assembly (36) from side of right steering cylinder (30).
26. Remove elbow (35) and preformed packing (34). Discard preformed packing.



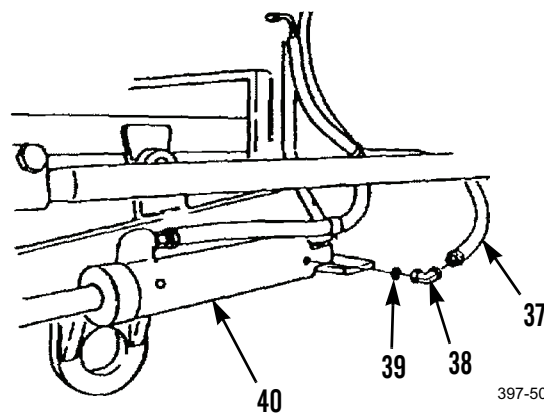27. Remove hose assembly (37) from side of left steering cylinder (40).
28. Remove elbow (38) and preformed packing (39). Discard preformed packing.




STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED

0169 00


REMOVAL - CONTINUED

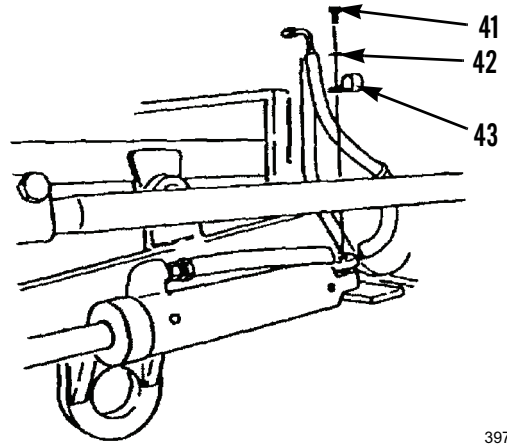29. Remove bolt (41), washer (42), and clip (43).



397-509

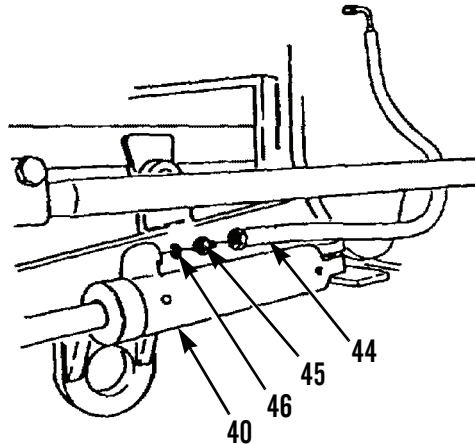30. Remove hose assembly (44) from top of left steering cylinder (40).
31. Remove connector (45) and preformed packing (46). Discard preformed packing.



397-510

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

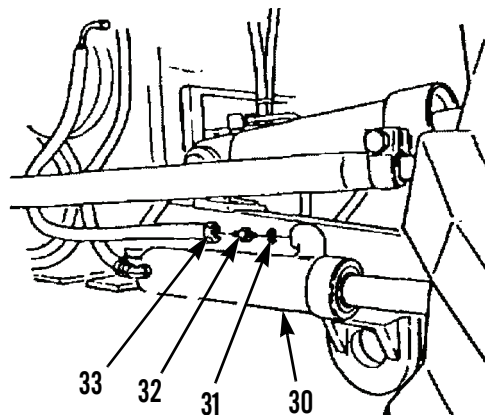
1. Install new preformed packing (46) and connector (45).
2. Connect hose assembly (44) to top of left steering cylinder (40).
3. Install clip (43), washer (42), and bolt (41).
4. Install new preformed packing (39) and elbow (38).
5. Connect hose assembly (37) on side of left steering cylinder (40).
6. Install new preformed packing (34) and elbow (35).
7. Connect hose assembly (36) on side of right steering cylinder (30).

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED

0169 00


INSTALLATION - CONTINUED

8. Install new preformed packing (31) and connector (32).
9. Connect hose assembly (33) on top of right steering cylinder (30).




397-506

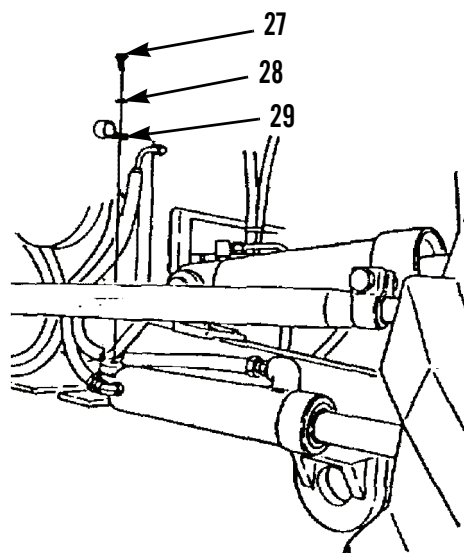10. Install clip (29), washer (28), and bolt (27).



397-505

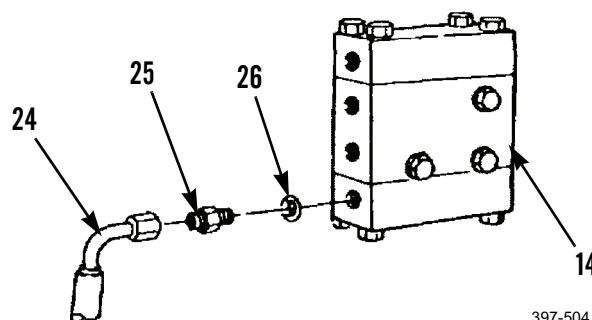11. Install new preformed packing (26) and connector (25).
12. Install hose assembly (24) on bottom valve port of right steering valve (14).




397-504

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED


0169 00

INSTALLATION - CONTINUED

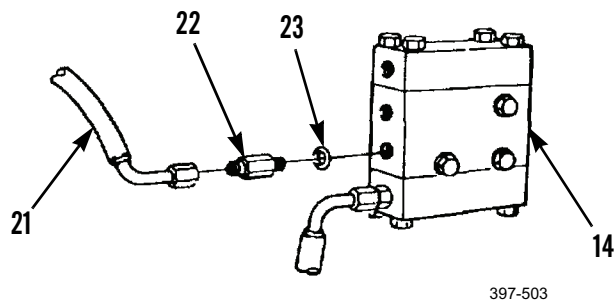
13. Install new preformed packing (23) and connector (22).
14. Install hose assembly (21) on third valve port on top of right steering valve (14).



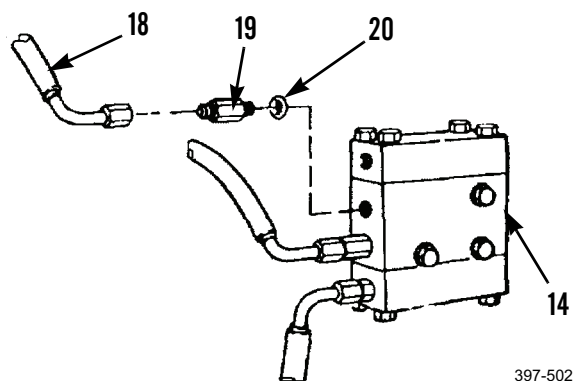15. Install new preformed packing (20) and connector (19).
16. Connect hose assembly (18) on second valve port on top of right steering valve (14).



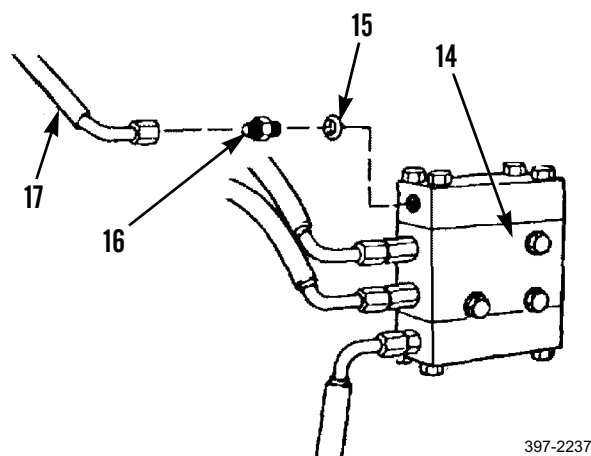17. Install new preformed packing (15) and connector (16).
18. Connect hose assembly (17) on top valve port of right steering valve (14).




STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED


0169 00

INSTALLATION - CONTINUED

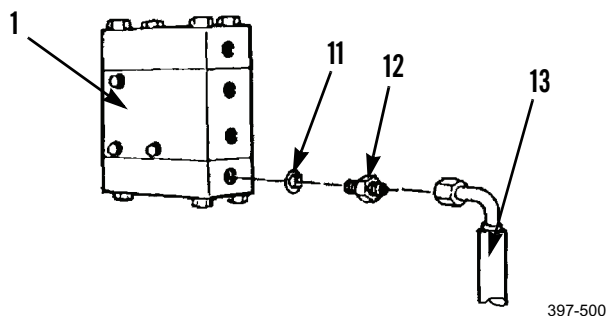
19. Install new preformed packing (11) and connector (12).
20. Install hose assembly (13) on bottom valve port of left steering valve (1).



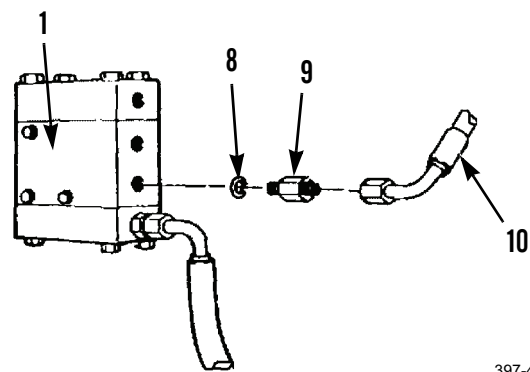21. Install new preformed packing (8) and connector (9).
22. Install hose assembly (10) on third valve port on top of left steering valve (1).



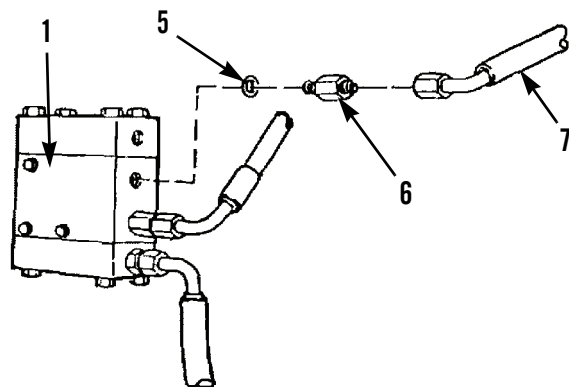23. Install new preformed packing (5) and connector (6).
24. Install hose assembly (7) on second valve port on top of left steering valve (1).




STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED

0169 00

INSTALLATION - CONTINUED

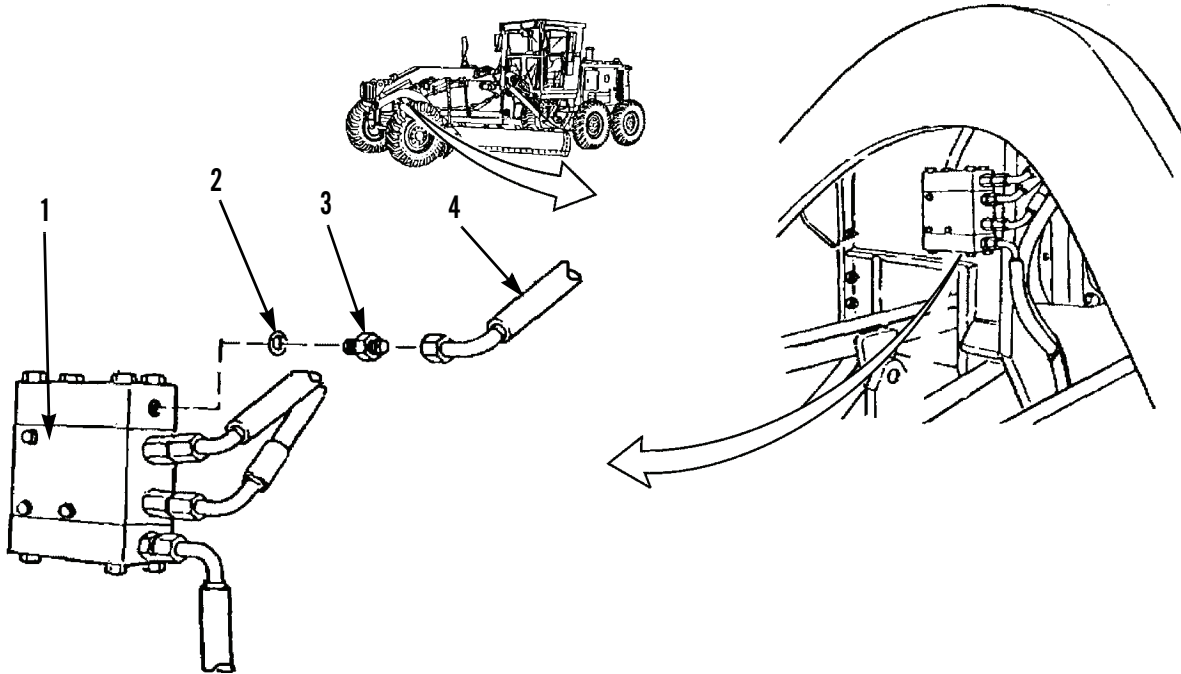25. Install new preformed packing (2) and connector (3).
26. Install hose assembly (4) on top valve port of left steering valve (1).



397-497

27. Start engine (TM 5-3805-261-10).
28. Turn steering wheel to the right while moving machine slowly forward a few feet.
29. Turn steering wheel to the left while moving machine slowly forward a few feet.
30. Repeat steps 28 and 29 at least five times to bleed air from system.
31. Stop engine.
32. Check for leaks.
33. Refill hydraulic tank to proper level (WP 0216 00).

END OF WORK PACKAGE

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (SINGLE VALVE DESIGN)

0170 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (5)

References

WP 0020 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

**WARNING**

- Do NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
- At operating temperature, hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulic lines. Failure to follow this warning may cause injury to personnel.
- Lubricating/hydraulic oils, engine coolant, fuel, and other fluids used in the performance of maintenance can be very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

REMOVAL

1. For hydraulic pressure relief, ensure supplemental steering is off.
2. Operate each implements control lever.
3. Turn steering wheel back and forth.
4. Remove hydraulic tank cap.
5. Install hydraulic tank cap.

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED

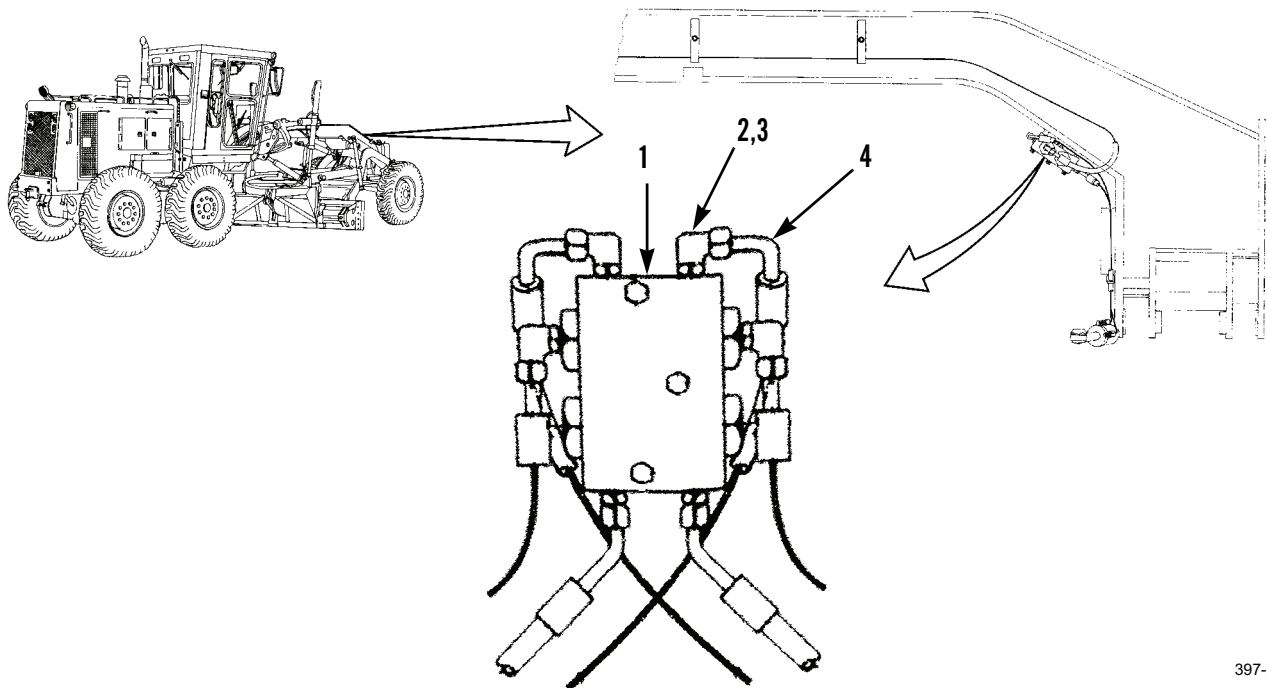
0170 00

REMOVAL - CONTINUED**CAUTION**

Cap hose ends to prevent contamination.

NOTE

- Tag hose assemblies before disconnecting to aid in installation.
 - This procedure covers removal of three right side hose assemblies of steering valve. Follow these instructions for remaining three left side hose assemblies.
 - This procedure covers removal of two hose assemblies of the right steering cylinder. Follow these instructions for remaining two hose assemblies on left steering cylinder.
6. Disconnect hose assembly (4) from valve port on top-right of steering valve (1).
 7. Remove connector (2) and preformed packing (3). Discard preformed packing.




397-2247

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED


0170 00

REMOVAL - CONTINUED

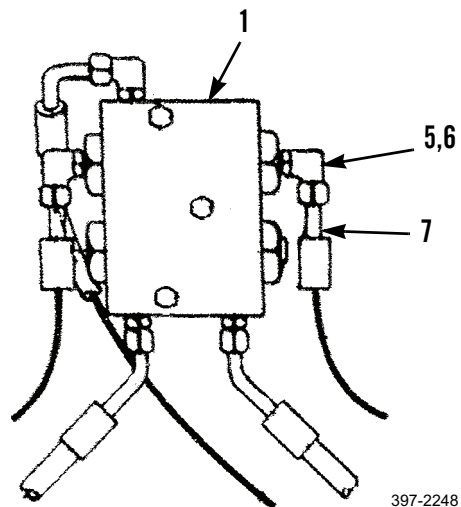8. Disconnect hose assembly (7) from valve port on right side of steering valve (1).
9. Remove connector (5) and preformed packing (6). Discard preformed packing.



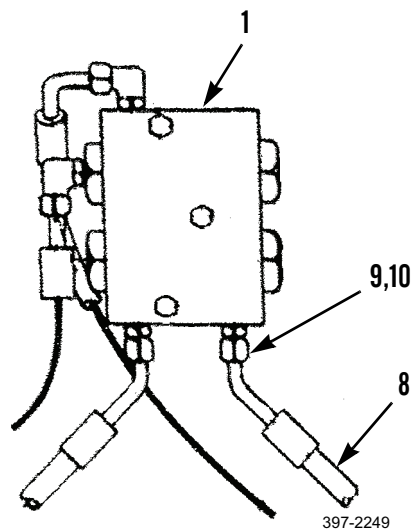10. Disconnect hose assembly (8) from bottom-right valve port of steering valve (1).
11. Remove connector (9) and preformed packing (10). Discard preformed packing.




STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED

0170 00


REMOVAL - CONTINUED

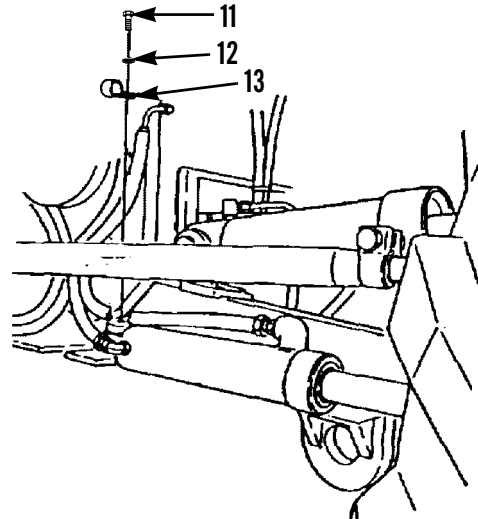12. Remove bolt (11), washer (12), and clip (13).




397-2250

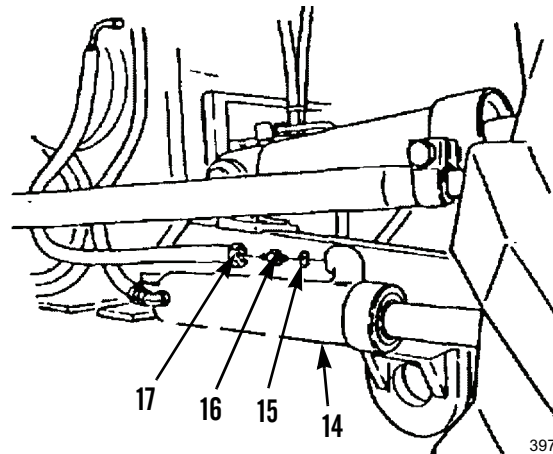13. Remove hose assembly (17) from top of right steering cylinder (14).
 14. Remove connector (16) and preformed packing (15). Discard preformed packing.



397-2251

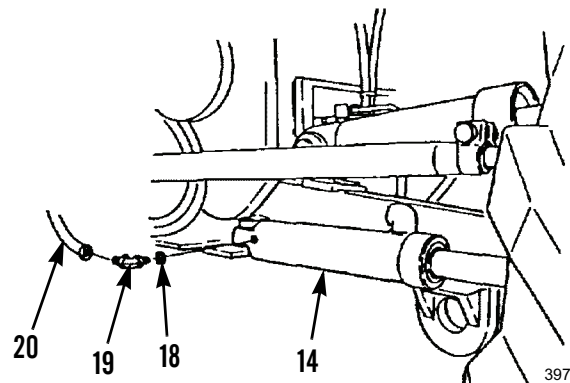15. Remove hose assembly (20) from side of right steering cylinder (14).
 16. Remove elbow (19) and preformed packing (18). Discard preformed packing.



397-2252

STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED

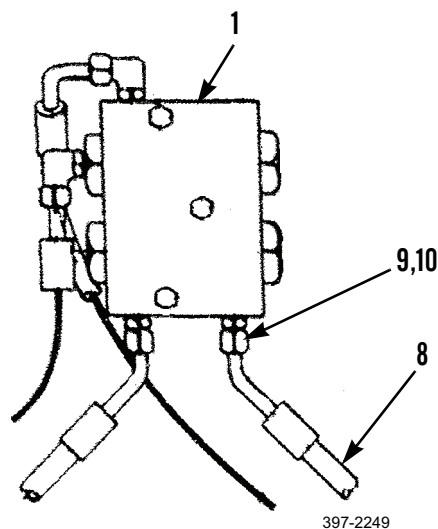
0170 00

CLEANING AND INSPECTION


Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install new preformed packing (15) and connector (16).
2. Connect hose assembly (17) to top of right steering cylinder (14).
3. Install clip (13), washer (12), and bolt (11).
4. Install new preformed packing (18) and elbow (19).
5. Connect hose assembly (20) on side of right steering cylinder (14).
6. Install new preformed packing (10) and connector (9).
7. Install hose assembly (8) on bottom-right valve port of steering valve (1).



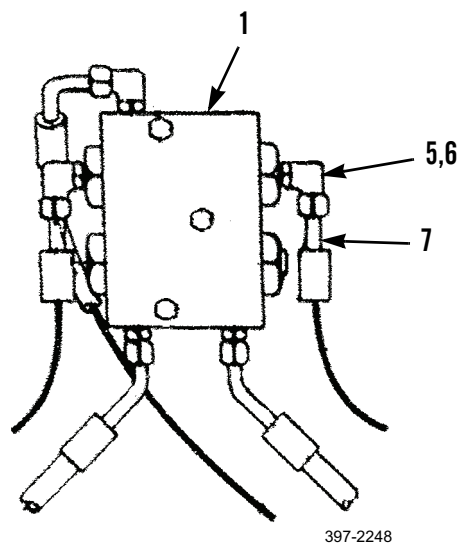8. Install new preformed packing (6) and connector (5).
9. Install hose assembly (7) on valve port on right side of steering valve (1).




STEERING HOSES, LINES, AND FITTINGS: STEERING VALVES TO STEERING CYLINDERS REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED

0170 00

INSTALLATION - CONTINUED

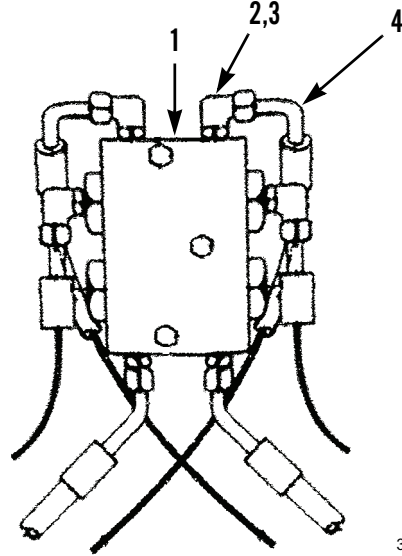10. Install new preformed packing (3) and connector (2).
11. Install hose assembly (4) on valve port on top-right of steering valve (1).



397-2247

12. Start engine (TM 5-3805-261-10).
13. Turn steering wheel to the right while moving machine slowly forward a few feet.
14. Turn steering wheel to the left while moving machine slowly forward a few feet.
15. Repeat steps 13 and 14 at least five times to bleed air from system.
16. Stop engine.
17. Check for leaks.
18. Refill hydraulic tank to proper level (WP 0216 00).

END OF WORK PACKAGE

STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN)

0171 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

WP 0216 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Frame covers removed (WP 0179 00)

Steering wheel and control pump assembly removed (WP 0319 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (3)

Personnel Required

Two



WARNING



- Do NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
- At operating temperature, hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulic lines. Failure to follow this warning may cause injury to personnel.
- Lubricating/hydraulic oils, engine coolant, fuel, and other fluids used in the performance of maintenance can be very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00

REMOVAL

1. For hydraulic pressure relief, ensure supplemental steering is off.
2. Operate each implements control lever.
3. Turn steering wheel back and forth.
4. Remove hydraulic tank cap.
5. Install hydraulic tank cap.

CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

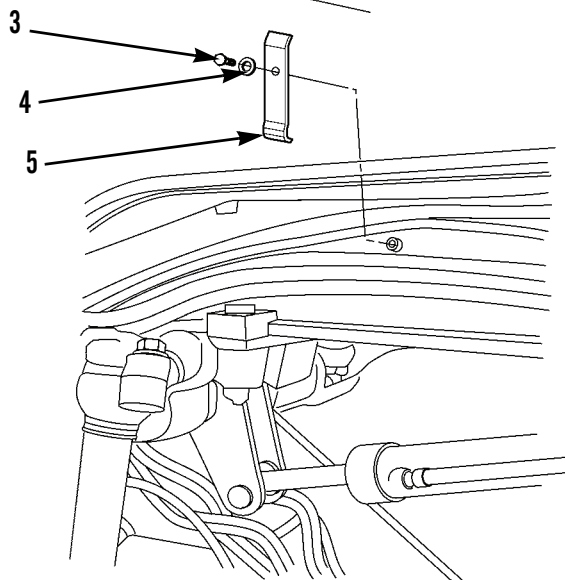
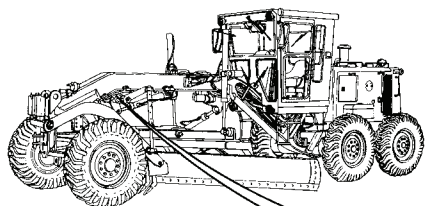
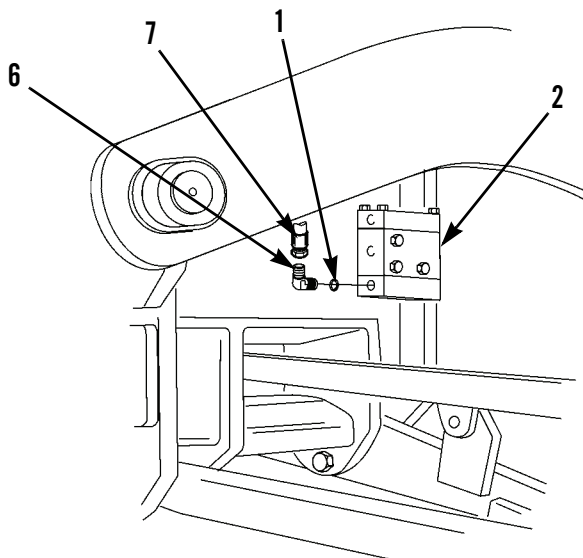
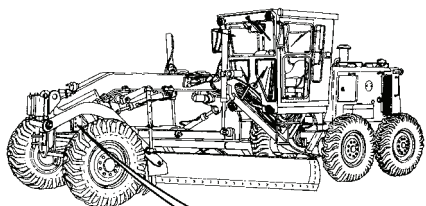
Tag hose assemblies before disconnecting to aid in installation.

6. Disconnect hose assembly (7) from steering valve (2).
7. Remove elbow (6) and preformed packing (1). Discard preformed packing.
8. Remove bolt (3), washer (4), and clamp (5).

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00

REMOVAL - CONTINUED







397-2256

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00

REMOVAL - CONTINUED

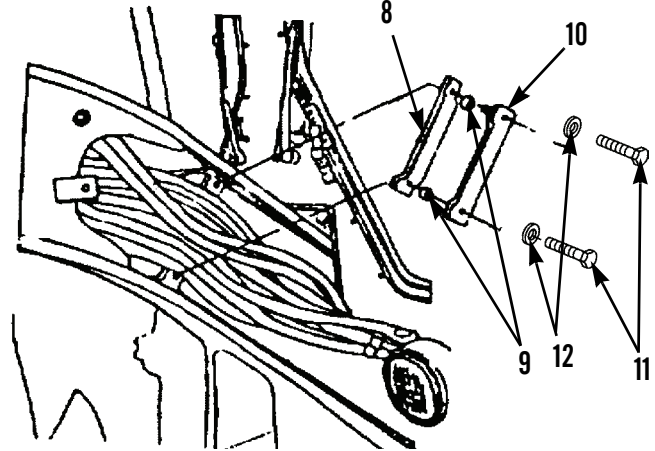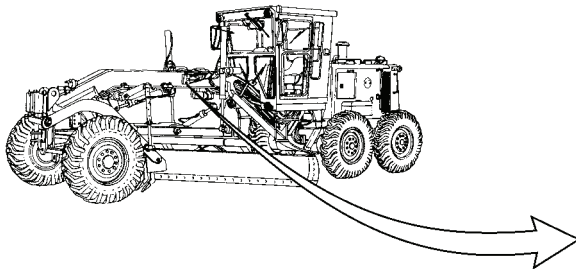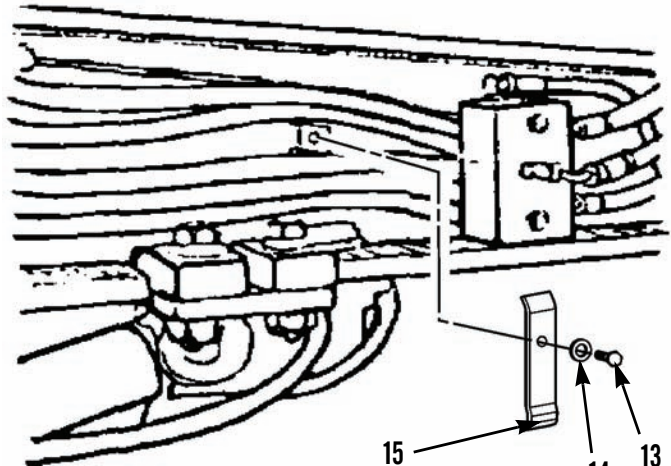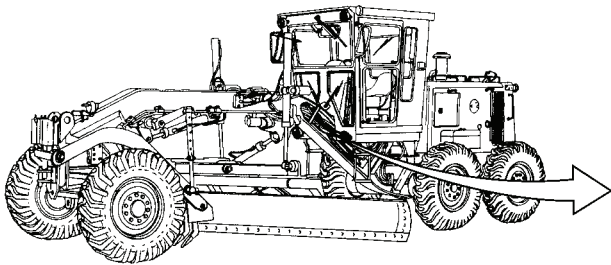9. Remove bolt (13), washer (14), and clamp (15).
10. Remove two bolts (11), washers (12), clamp (10), two spacers (9), and clamp (8).





397-2257

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**



0171 00

REMOVAL - CONTINUED

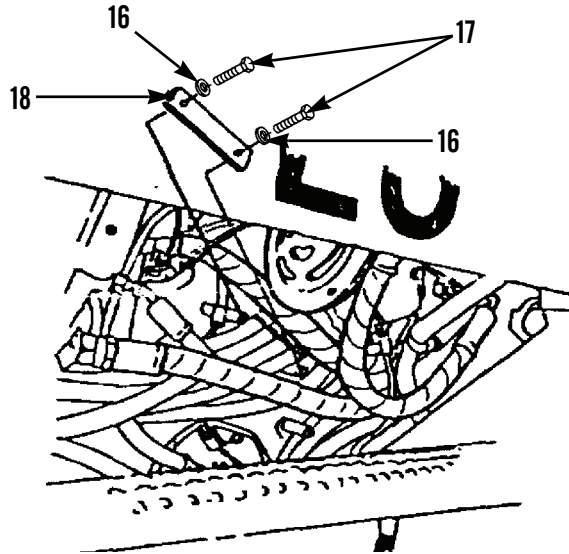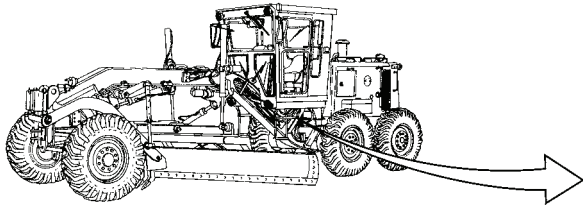11. Remove bolt (21), washer (20), and clip (19).
12. Remove two nuts (17), washers (16), and clamp (18).



397-2258

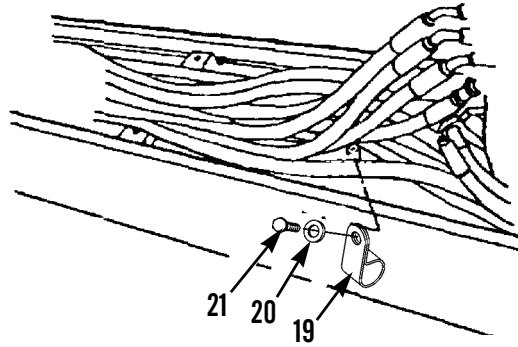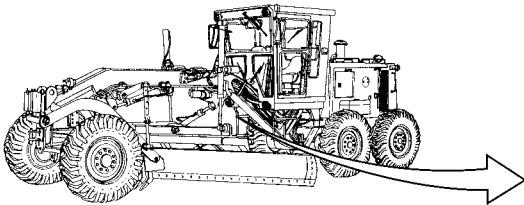


397-515

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00


REMOVAL - CONTINUED

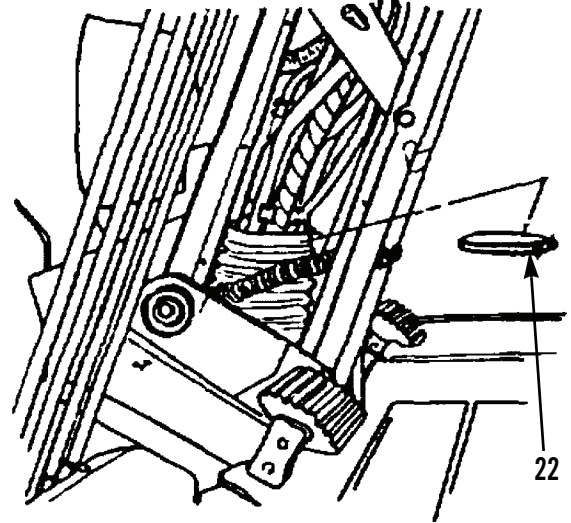13. Remove and discard tie strap (22).



397-517

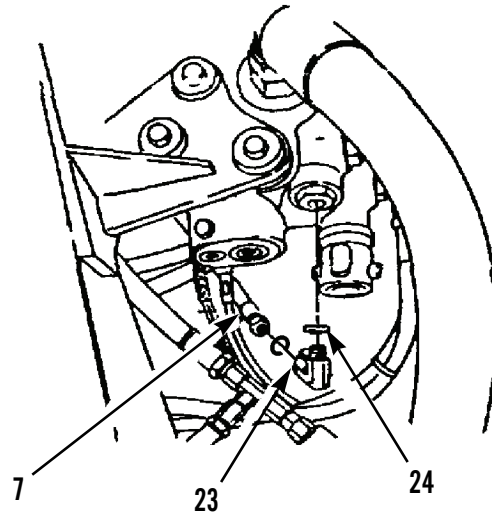14. Remove hose assembly (7).
15. Remove elbow (23) and preformed packing (24). Discard preformed packing.





397-518

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00


REMOVAL - CONTINUED

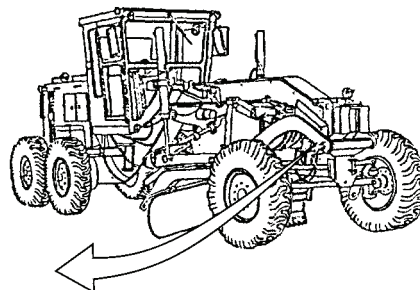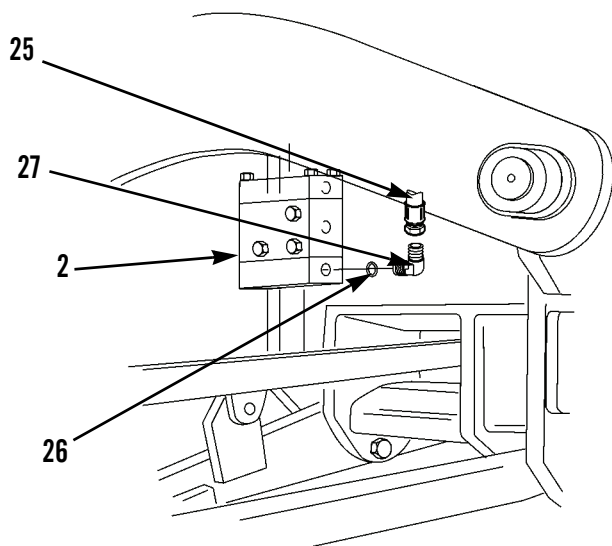16. Disconnect hose assembly (25) from steering valve (2).
17. Remove elbow (27) and preformed packing (26). Discard preformed packing.



397-519

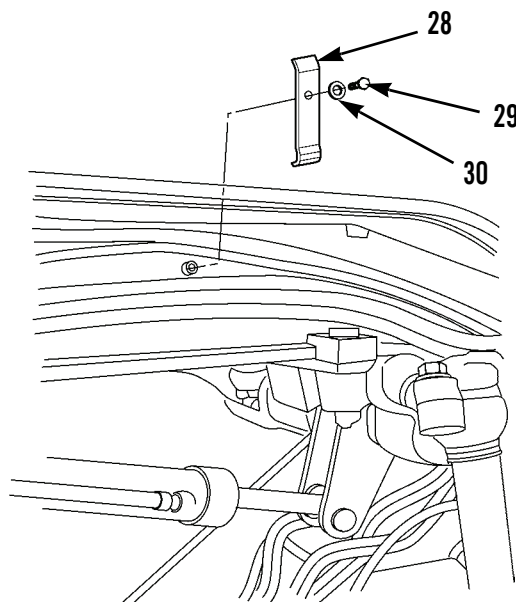18. Remove bolt (29), washer (30), and clamp (28) from left-front side.




397-520

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00


REMOVAL - CONTINUED

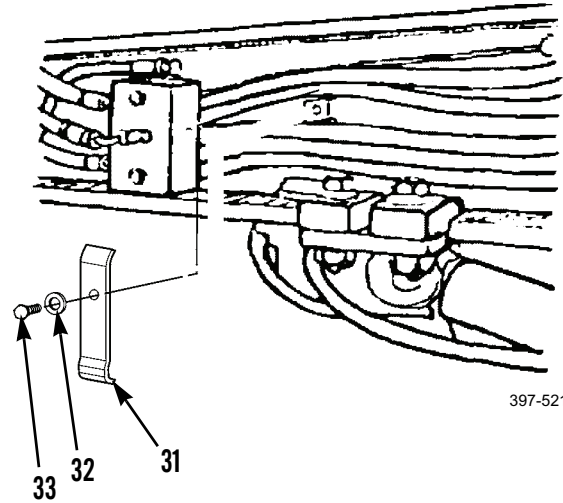19. Remove bolt (33), washer (32), and clamp (31) from left-rear side.



397-521

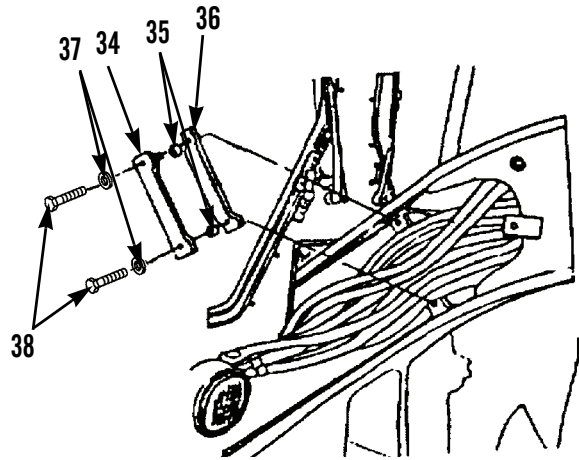20. Remove two bolts (38), washers (37), clamp (34), two spacers (35), and clamp (36).




397-522

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00


REMOVAL - CONTINUED

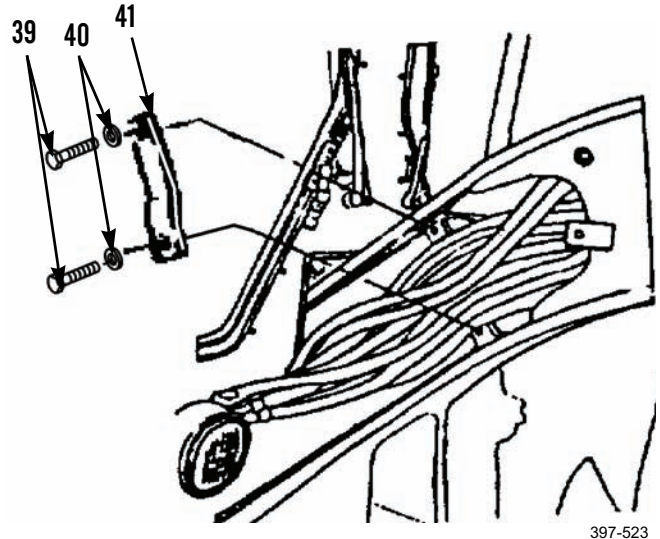21. Remove two bolts (39), washers (40), and clamp (41).



397-523

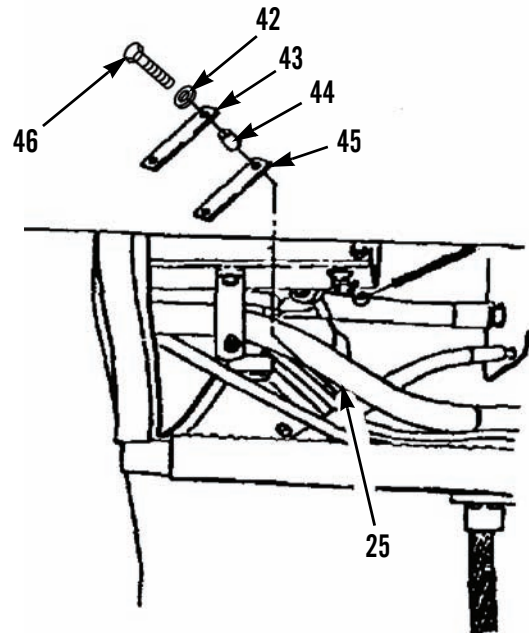22. Remove two bolts (46), washers (42), clamp (43), two spacers (44), and clamp (45).
23. Remove hose assembly (25).



397-524

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

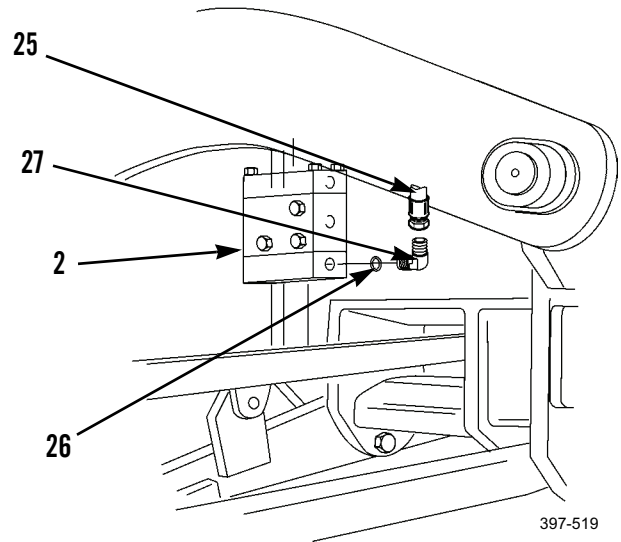
0171 00

CLEANING AND INSPECTION


Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install new preformed packing (26) and elbow (27) on steering valve (2).
2. Connect hose assembly (25) on elbow (27).



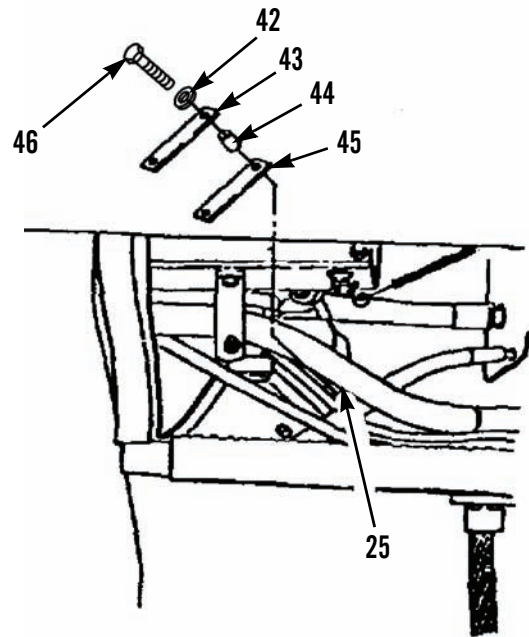3. Install hose assembly (25).
4. Install clamp (45), two spacers (44), clamp (43), two washers (42), and bolts (46)




**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**


0171 00

INSTALLATION - CONTINUED

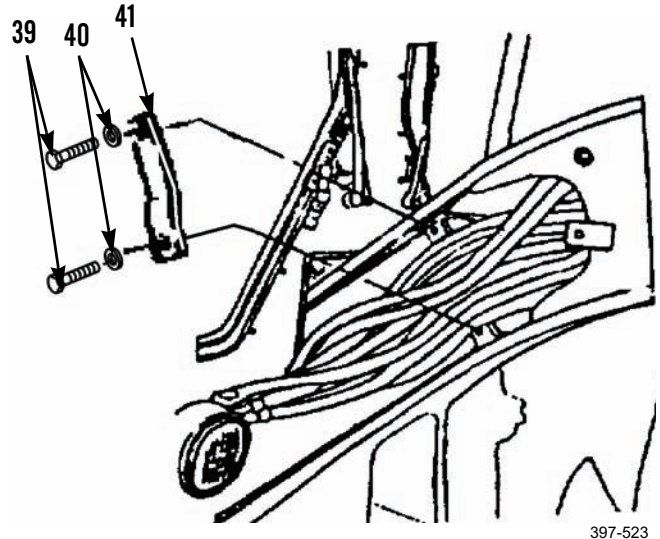5. Install clamp (41), two washers (40), and bolts (39).



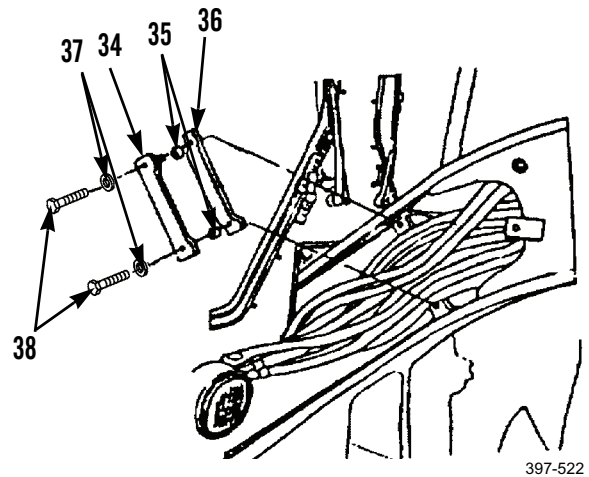6. Install clamp (36), two spacers (35), clamp (34), two washers (37), and bolts (38).




**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**


0171 00

INSTALLATION - CONTINUED

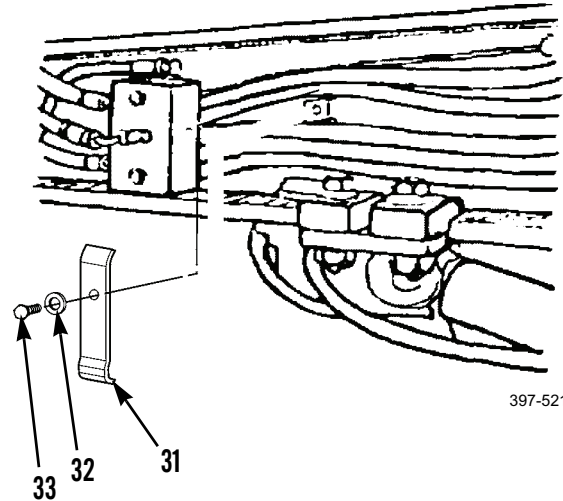7. Install clamp (31), washer (32), and bolt (33) on left-rear side.



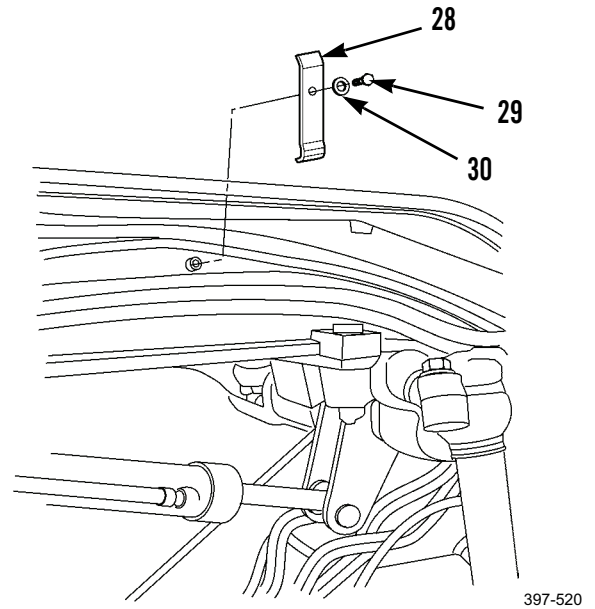8. Install clamp (28), washer (30), and bolt (29) on left-front side.




**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00


INSTALLATION - CONTINUED

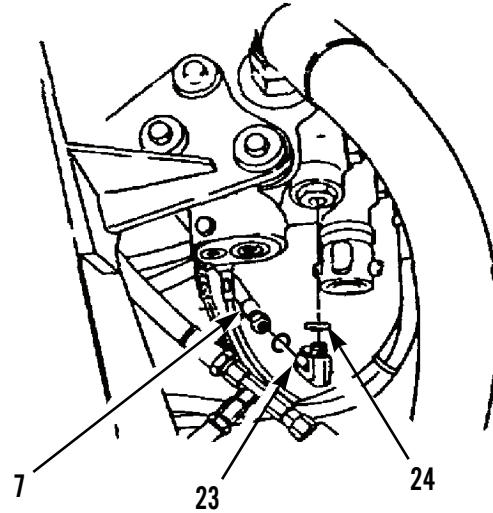9. Install new preformed packing (24) and elbow (23).
10. Connect hose assembly (7) to elbow (23).



397-518

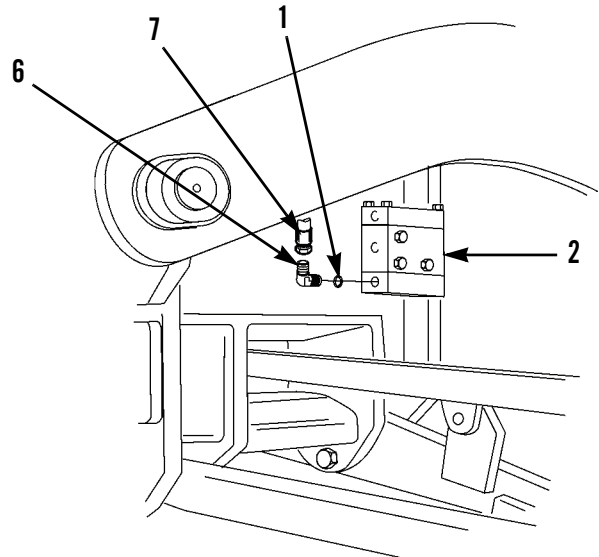11. Install new preformed packing (1) and elbow (6) on front side of left steering valve.
12. Install hose assembly (7) on elbow (6) on left steering valve (2).




397-511

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**


0171 00

INSTALLATION - CONTINUED

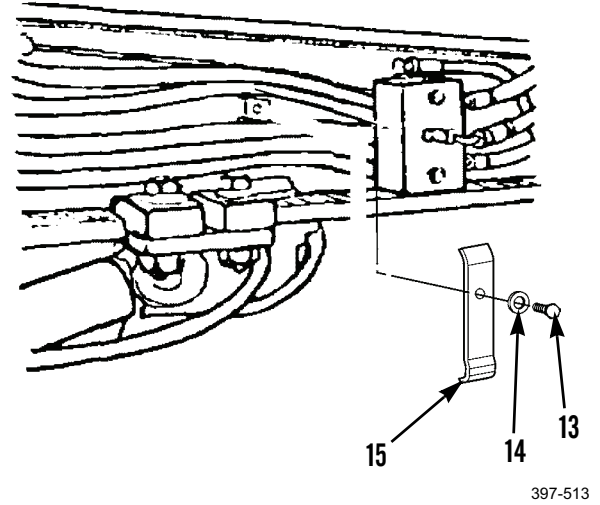13. Install clamp (13), washer (14), and bolt (15) on left-rear side.



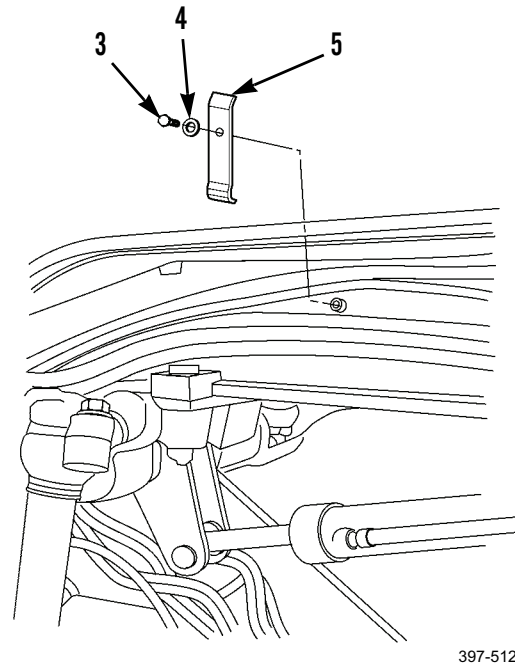14. Install clamp (5), washer (4), and bolt (3) on left-front side.




**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**


0171 00

INSTALLATION - CONTINUED

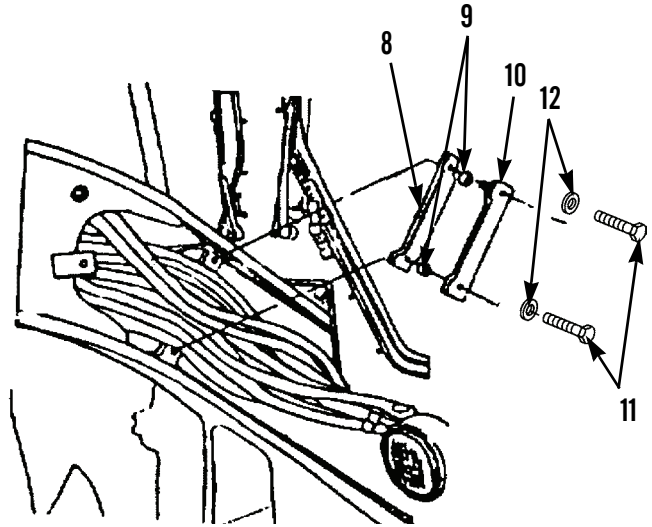15. Install clamp (8), two spacers (9), clamp (10), two washers (12), and bolts (11).



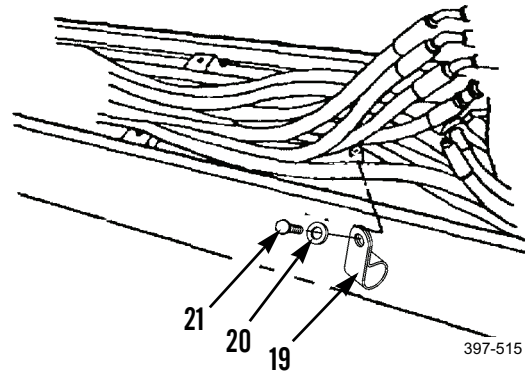16. Install clip (19), washer (20), and bolt (21).




**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP
TO STEERING VALVES REPLACEMENT (DUAL VALVE DESIGN) - CONTINUED**

0171 00


INSTALLATION - CONTINUED

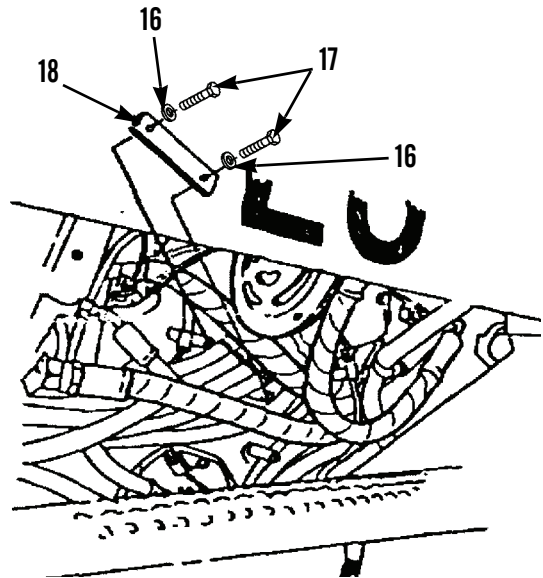17. Install clamp (18), two washers (16), and nuts (17).



397-516

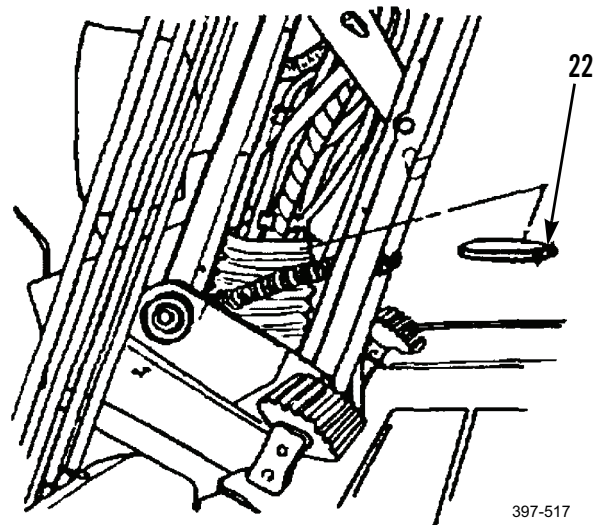18. Install steering wheel and control pump assembly (WP 0319 00).
19. Install new strap (22) on steering console, inside of cab.



397-517

20. Start engine (TM 5-3805-261-10).
21. Turn steering wheel to the right while moving machine slowly forward a few feet.
22. Turn steering wheel to the left while moving machine slowly forward a few feet.
23. Repeat steps 22 and 23 at least five times to bleed air from system.
24. Stop engine.
25. Check for leaks.
26. Install frame covers (WP 0179 00).
27. Refill hydraulic tank to proper level (WP 0216 00).

END OF WORK PACKAGE

STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP TO STEERING VALVE REPLACEMENT (SINGLE VALVE DESIGN)

0172 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no, 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed

References

WP 0020 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Frame covers removed (WP 0179 00)

Steering wheel and control pump assembly removed (WP 0319 00)



WARNING



- Do NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
- At operating temperature, hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulic lines. Failure to follow this warning may cause injury to personnel.
- Lubricating/hydraulic oils, engine coolant, fuel, and other fluids used in the performance of maintenance can be very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

REMOVAL

1. For hydraulic pressure relief, ensure supplemental steering is off.
2. Operate each implements control lever.
3. Turn steering wheel back and forth.
4. Remove hydraulic tank cap.
5. Install hydraulic tank cap.

STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP TO STEERING VALVE REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED

0172 00

REMOVAL - CONTINUED

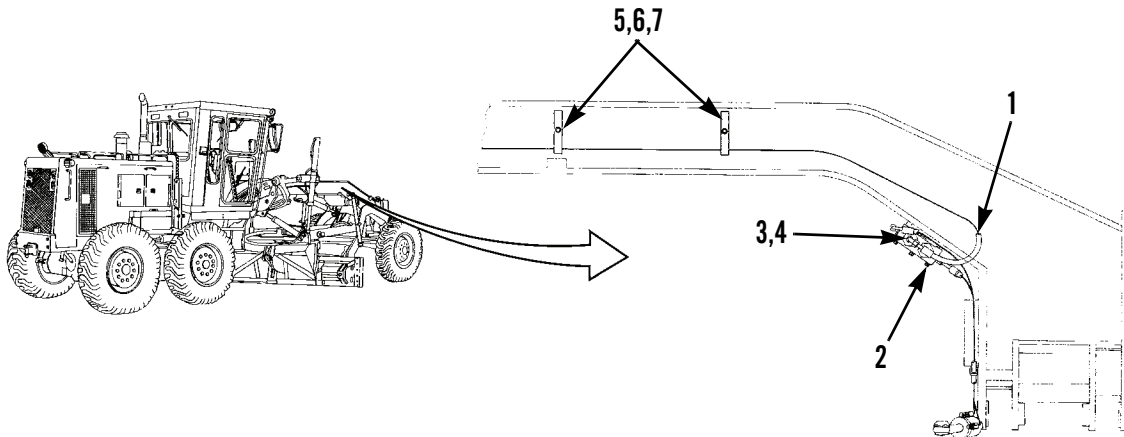
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


- This procedure covers replacement of bottom-right hose assembly on steering valve. Follow these instructions for the bottom-left hose assembly.
- Tag hose assemblies before disconnecting to aid in installation.

6. Disconnect hose assembly (1) from steering valve (2).
7. Remove elbow (3) and preformed packing (4). Discard preformed packing.
8. Remove bolt (5), washer (6), and clamp (7).



397-2263

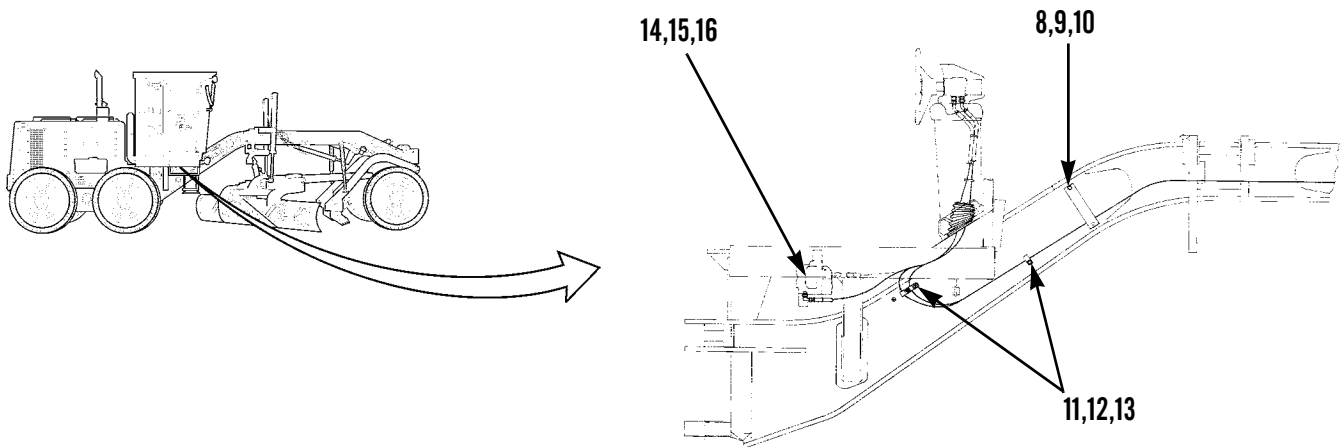9. Remove bolt (8), washer (9), and clamp (10).
10. Remove bolt (11), washer (12), and clip (13).
11. Remove hose (14), elbow (16), and two seals (15).




397-2264

STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP TO STEERING VALVE REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED

0172 00


REMOVAL - CONTINUED

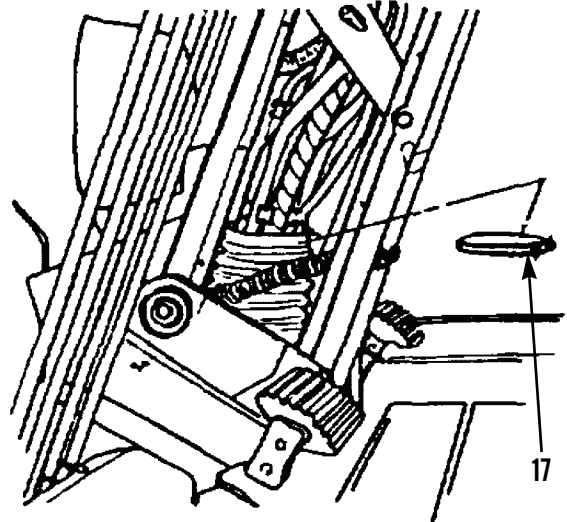12. Remove and discard tie strap (17).



397-517

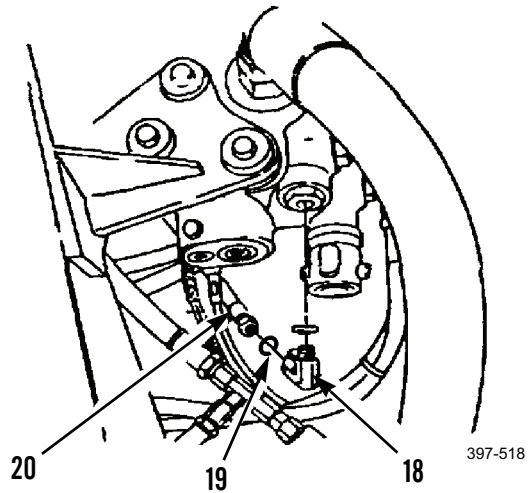13. Remove hose assembly (20).
14. Remove elbow (18) and two preformed packings (19). Discard preformed packing.



397-518

CLEANING AND INSPECTION

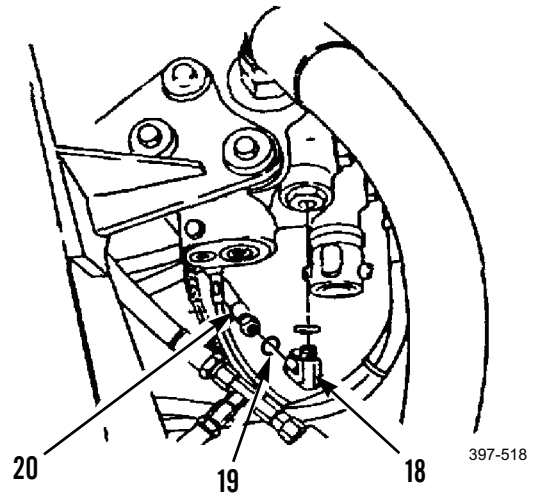
Clean and inspect all parts in accordance with WP 0020 00.

STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP TO STEERING VALVE REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED


0172 00

INSTALLATION

1. Install two new preformed packings (19) and elbow (18).
2. Connect hose assembly (20) to elbow (18).
3. Install hose assembly (20).



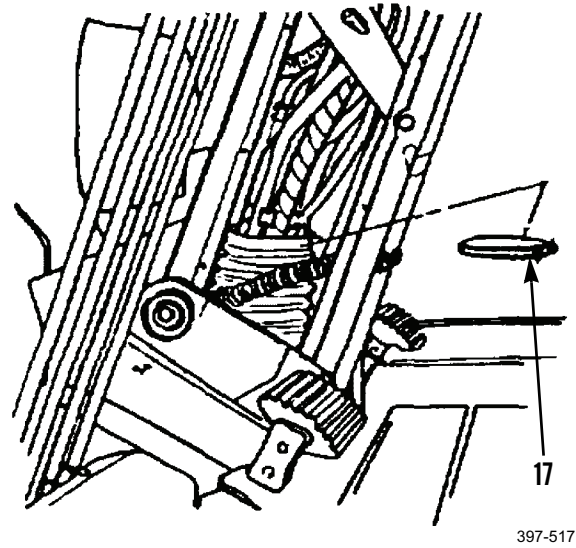4. Install new tie strap (17).




STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP TO STEERING VALVE REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED

0172 00


INSTALLATION - CONTINUED

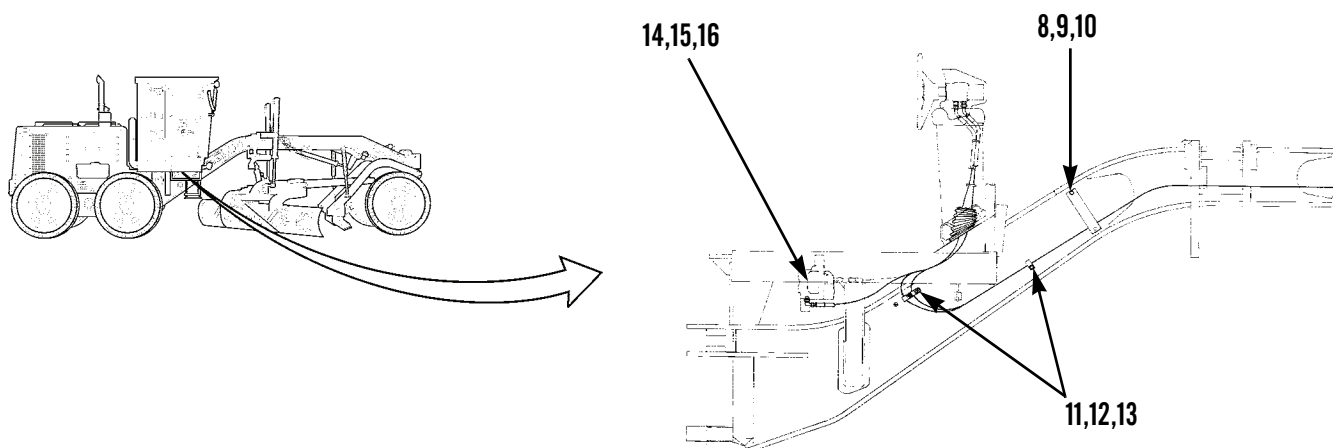5. Install two seals (15), elbow (16), and hose (14).
6. Install clip (13), washer (12), and bolt (11).
7. Install clamp (10), washer (9), and bolt (8).



397-2264

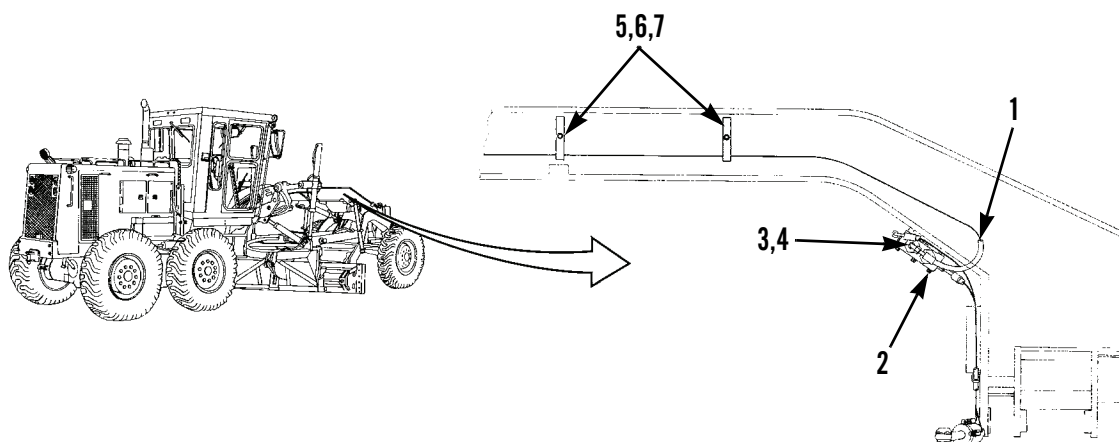8. Install clamp (7), washer (6), and bolt (5).
9. Install elbow (3) and new preformed packing (4) on steering valve (2).
10. Connect hose assembly(1) on steering valve (2).



397-2263

**STEERING HOSES, LINES, AND FITTINGS: STEERING CONTROL PUMP TO
STEERING VALVE REPLACEMENT (SINGLE VALVE DESIGN) - CONTINUED**

0172 00

INSTALLATION - CONTINUED

11. Install steering wheel and control pump assembly (WP 0319 00).
12. Start engine (TM 5-3805-261-10).
13. Turn steering wheel to the right while moving machine slowly forward a few feet.
14. Turn steering wheel to the left while moving machine slowly forward a few feet.
15. Repeat steps 7 and 8 at least five times to bleed air from system.
16. Stop engine.
17. Check for leaks.
18. Install steering wheel and control pump assembly (WP 0319 00).
19. Install frame covers (WP 0179 00).
20. Refill hydraulic tank to proper level (WP 0216 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring (5)

Packing, preformed (7)

References

WP 0020 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

**WARNING**

- Do NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
- At operating temperature, hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulic lines. Failure to follow this warning may cause injury to personnel.
- Lubricating/hydraulic oils, engine coolant, fuel, and other fluids used in the performance of maintenance can be very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

REMOVAL

1. For hydraulic pressure relief, ensure supplemental steering is off.
2. Operate each implements control lever.
3. Turn steering wheel back and forth.
4. Remove hydraulic tank cap.
5. Install hydraulic tank cap.

REMOVAL - CONTINUED

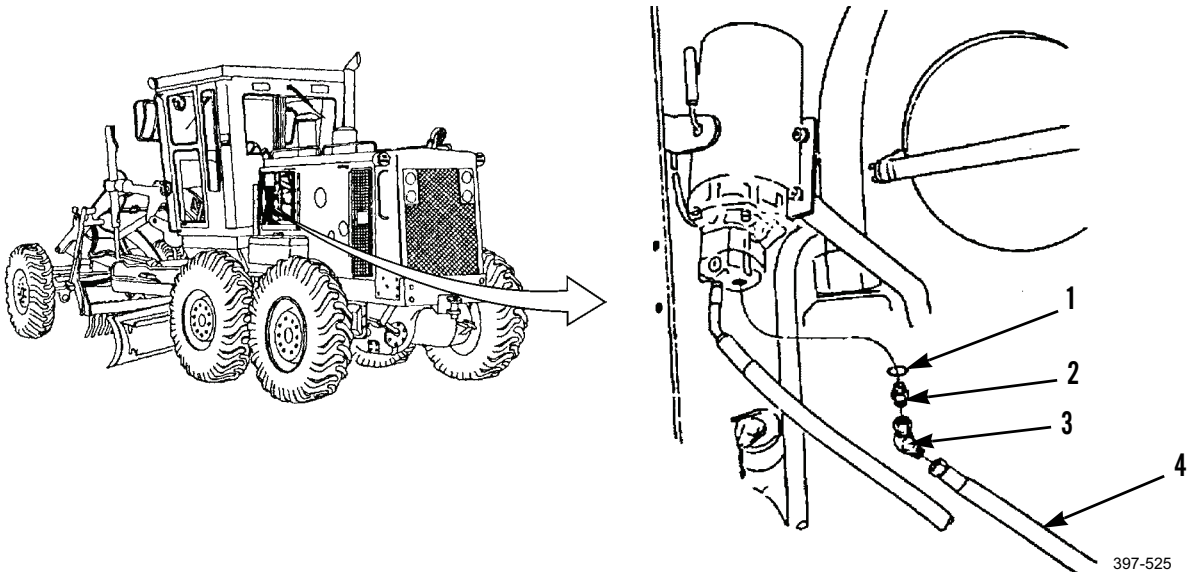
CAUTION

Cap hose ends to prevent contamination.


NOTE

Tag hose assemblies before disconnecting to aid in installation.

6. Disconnect hose assembly (4).
7. Remove elbow (3), connector (2), and preformed packing (1). Discard preformed packing.




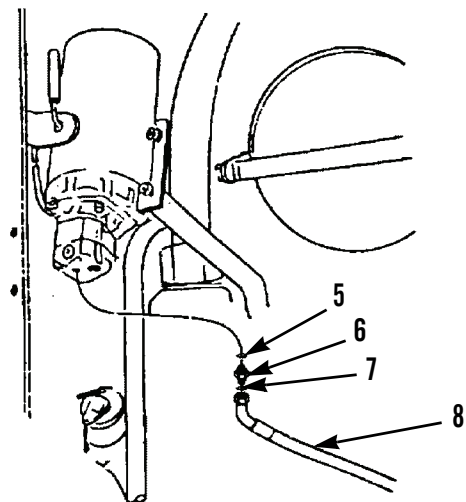8. Disconnect hose assembly (8).
9. Remove connector (6), preformed packing (5), and O-ring (7). Discard preformed packing and O-ring.






REMOVAL - CONTINUED

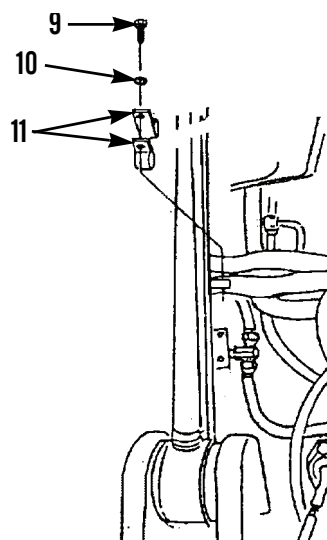10. Remove bolt (9), washer (10), and clip (11).



397-527

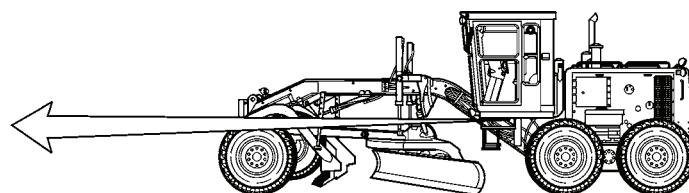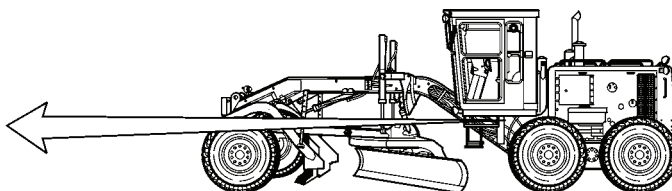
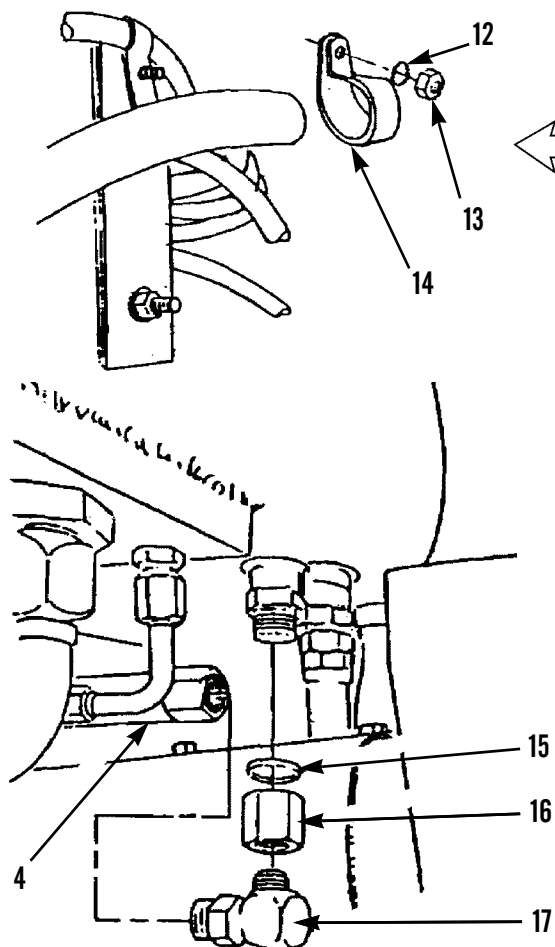
11. Remove nut (13), washer (12), and clip (14).
12. Disconnect hose assembly (4) from bottom of hydraulic tank.
13. Remove elbow (17), connector (16), and preformed packing (15). Discard preformed packing.



397-2268



REMOVAL - CONTINUED

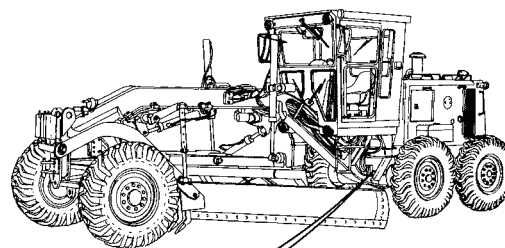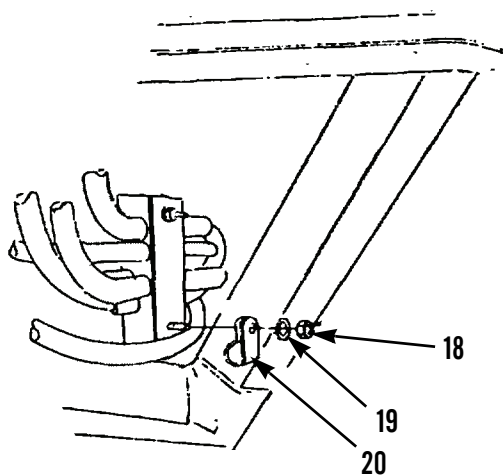14. Remove nut (18), washer (19), and clip (20).




397-530

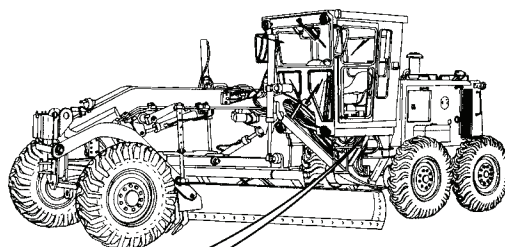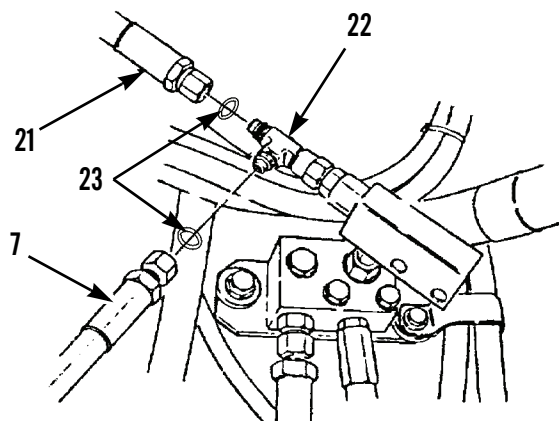15. Disconnect hose assembly (7) and O-ring (23) from the bottom of tee (22). Discard O-ring.
 16. Disconnect hose assembly (21) and O-ring (23) from side of tee (22). Discard O-ring.



397-2270

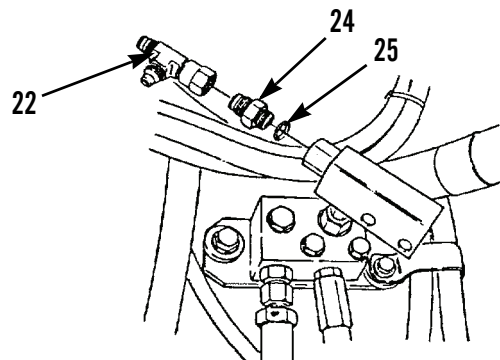
17. Remove tee (22), adapter (24), and preformed packing (25). Discard preformed packing.



397-532


REMOVAL - CONTINUED

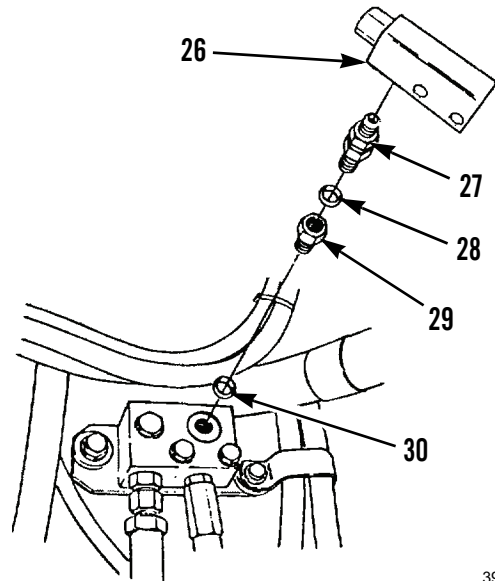18. Remove relief valve (26), union (27), preformed packing (28), adapter (29), and preformed packing (30). Discard preformed packings.




397-533

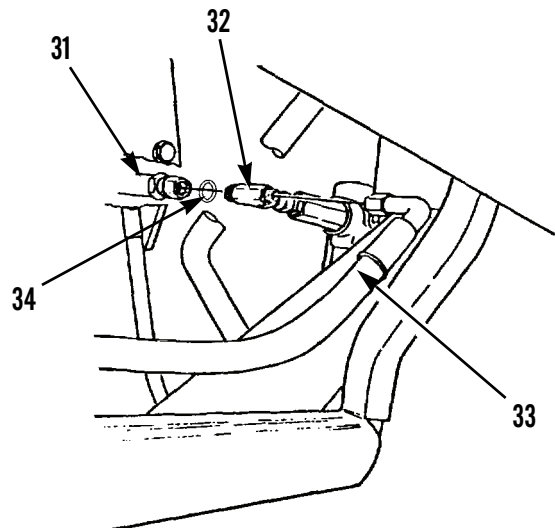19. Disconnect hose assembly (31) and O-ring (34) from tee (32). Discard O-ring.
20. Disconnect hose assembly (33) from tee (32).



397-534

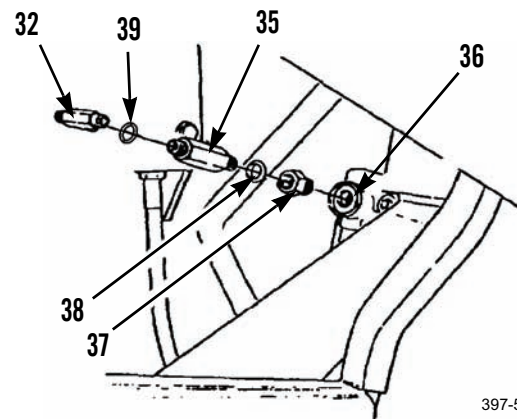21. Remove tee (32), O-ring (39), valve (35), preformed packing (38), and adapter (37) from combination valve (36). Discard preformed packing and O-ring.




397-535

CLEANING AND INSPECTION

Clean all parts in accordance with WP 0020 00.


INSTALLATION

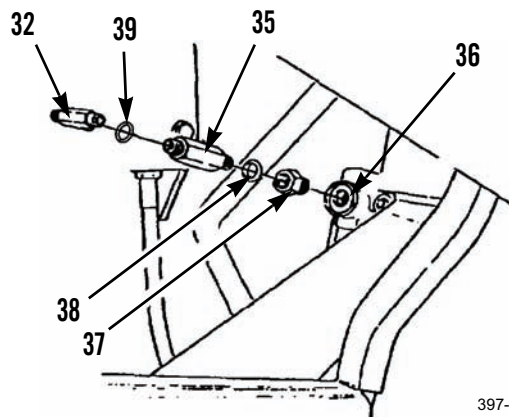1. Install adapter (37), new preformed packing (38), valve (35), new O-ring (39), and tee (32) on combination valve (36).




397-535

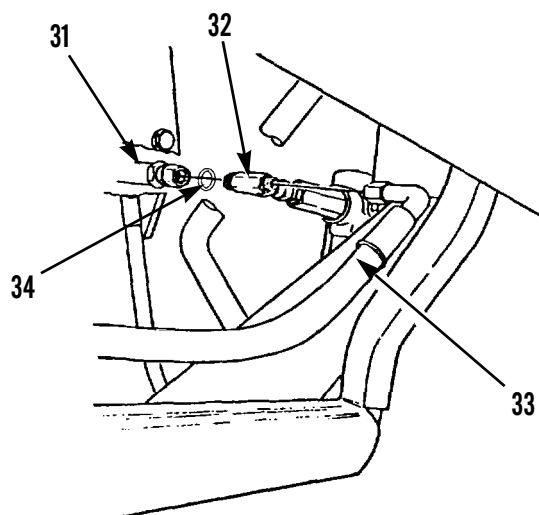2. Connect hose assembly (33) to tee (32).
3. Install new O-ring (34) to tee (32) and connect hose assembly (31).



397-534

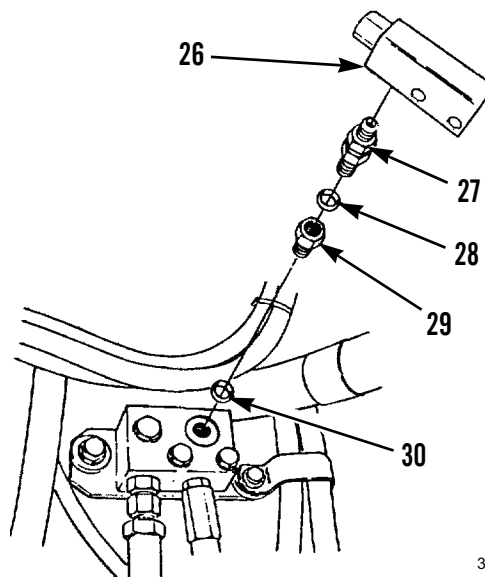
4. Install new preformed packing (30), adapter (29), new preformed packing (28), union (27), and relief valve (26).



397-533


INSTALLATION - CONTINUED

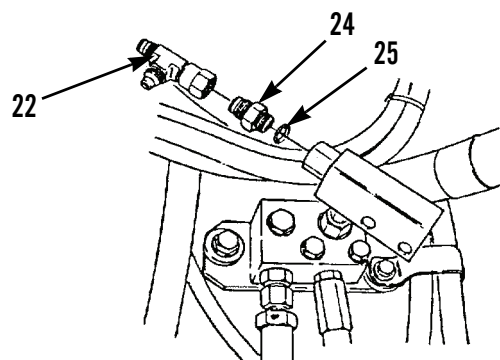5. Install new preformed packing (25), adapter (24), and tee (22).




397-532

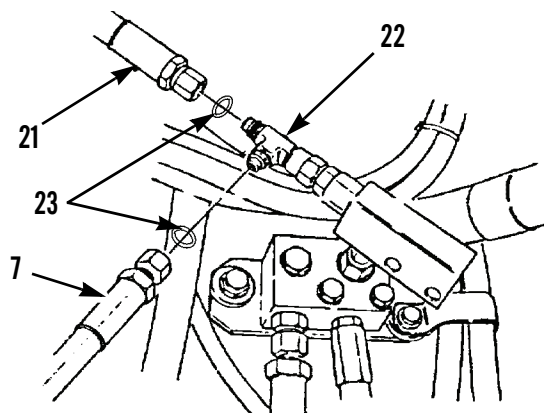6. Connect hose assembly (21) and install new O-ring (23) to side of tee (22).
7. Install new O-ring (23) to bottom of tee (22) and connect hose assembly (7).



397-531

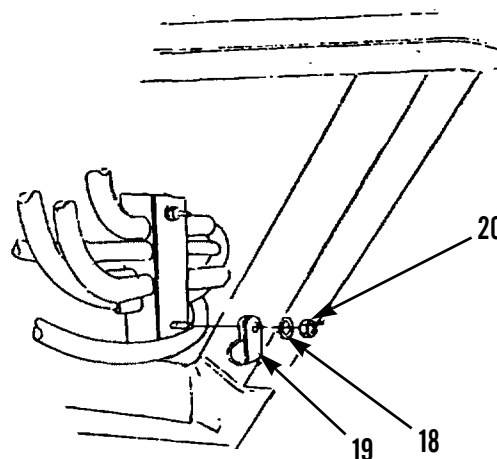
8. Install clip (19), washer (18), and nut (20).



397-530


INSTALLATION - CONTINUED

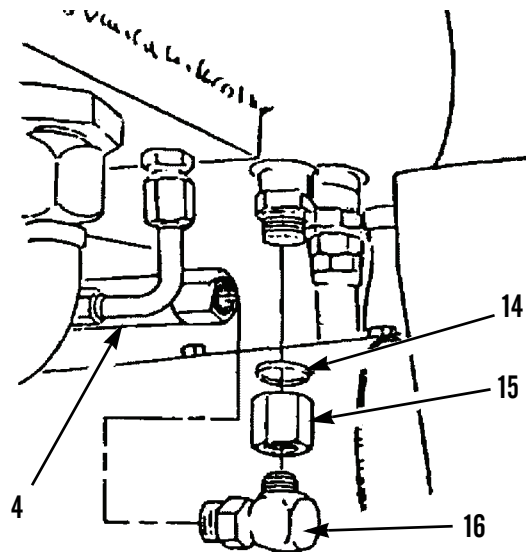9. Install new preformed packing (14), connector (15), and elbow (16).
10. Connect hose assembly (4) to bottom of hydraulic tank.



397-529

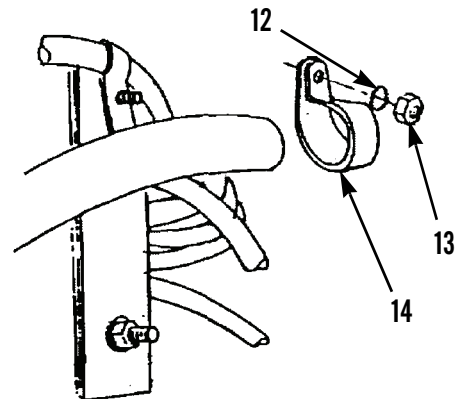
11. Install clip (14), washer (12), and nut (13).




397-528

INSTALLATION - CONTINUED

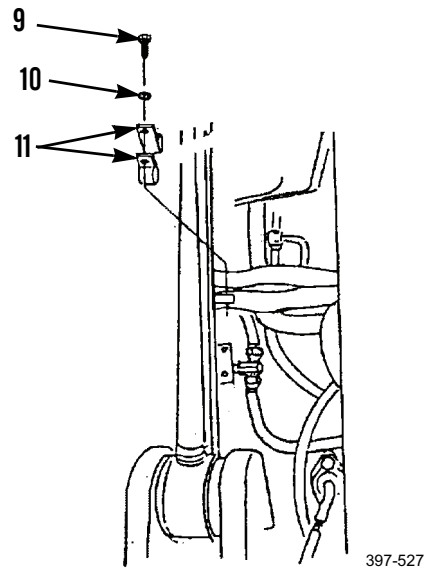12. Install clip (11), washer (10), and bolt (9).




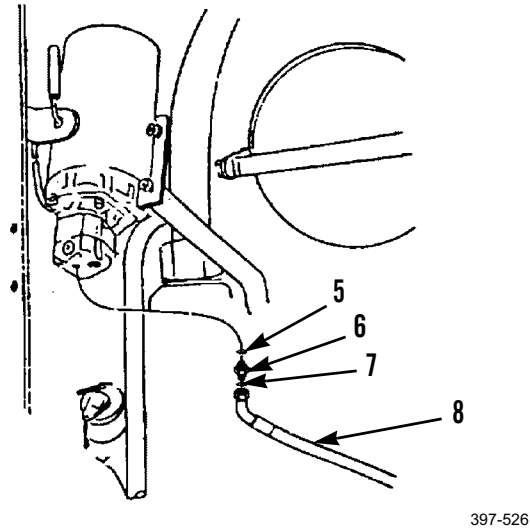13. Install new preformed packing (5), new O-ring (7), and connector (6).
14. Connect hose assembly (8).



INSTALLATION - CONTINUED

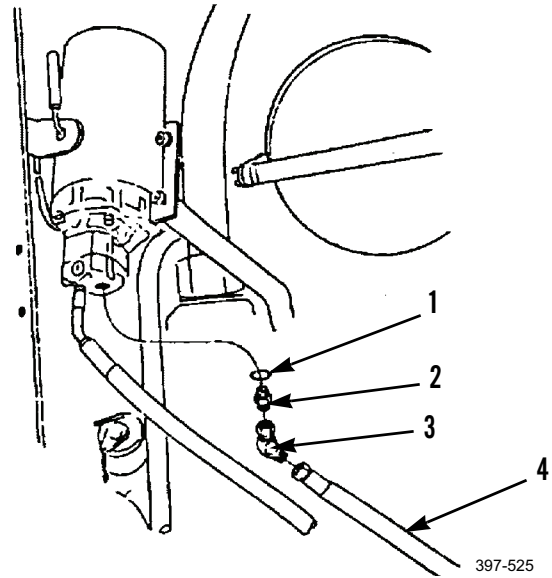15. Install new preformed packing (1), connector (2), and elbow (3).
16. Connect hose assembly (4) to supplemental steering pump.
17. Start engine (TM 5-3805-261-10).
18. Stop engine
19. Check for leaks.
20. Refill hydraulic tank to proper level (WP 0216 00).

**END OF WORK PACKAGE**

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, field maintenance (Item 74, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 26, 27, or 30, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring (2)

References

WP 0020 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

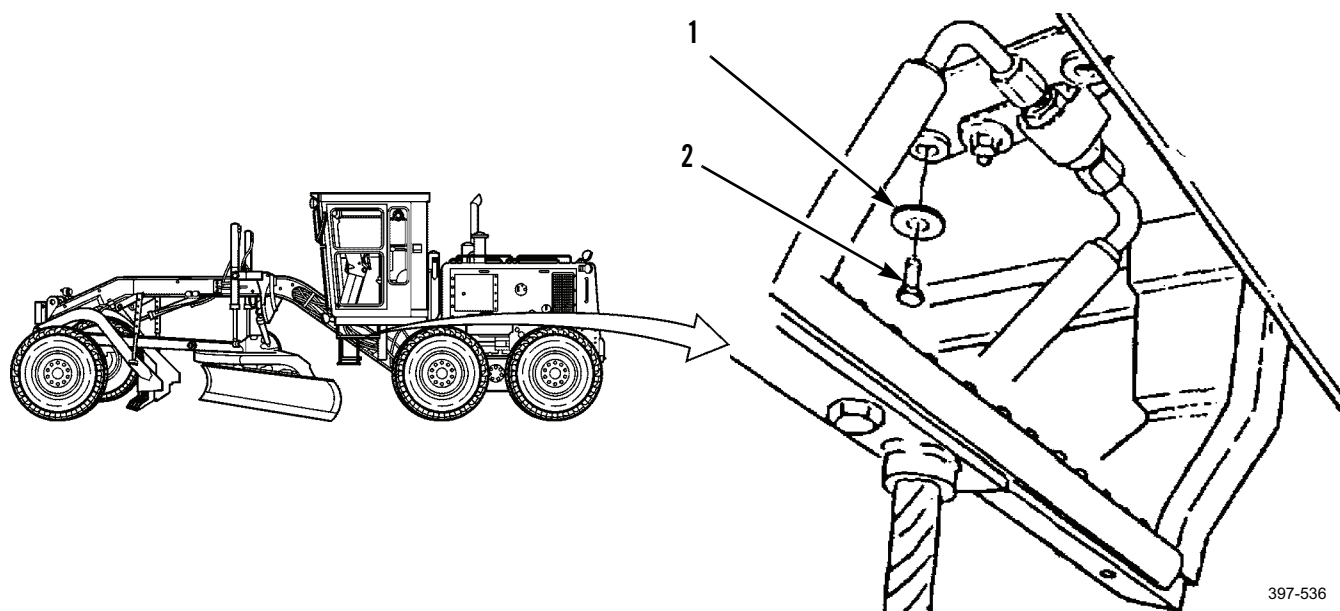
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL


1. Remove three bolts (2) and washers (1).



397-536

REMOVAL - CONTINUED

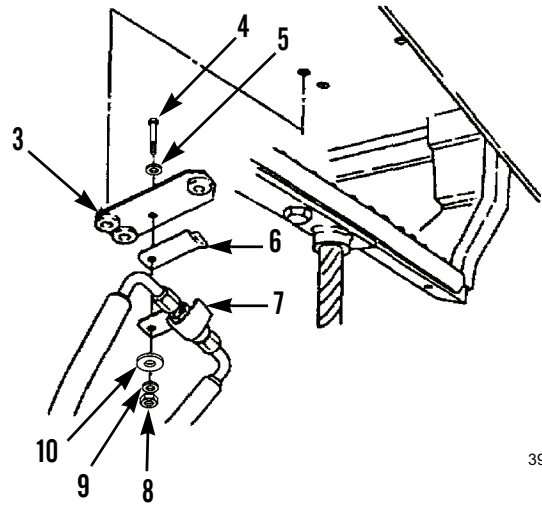2. Remove nut (8), washers (9 and 10), clip (7), bracket (6), bolt (4), washer (5), and plate (3).



397-537

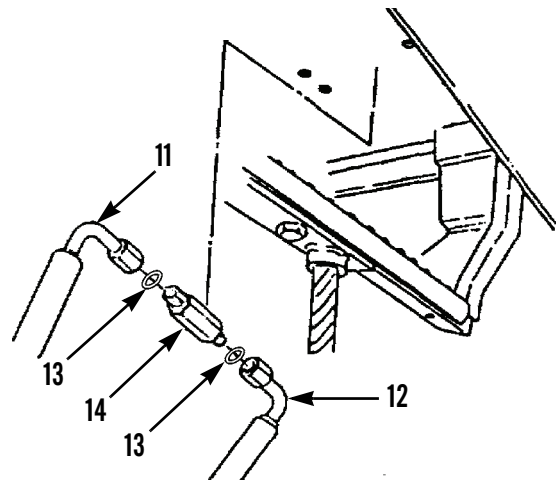
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

3. Disconnect hose assemblies (11 and 12) and remove O-rings (13) while holding body (14). Discard O-rings.




397-538

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

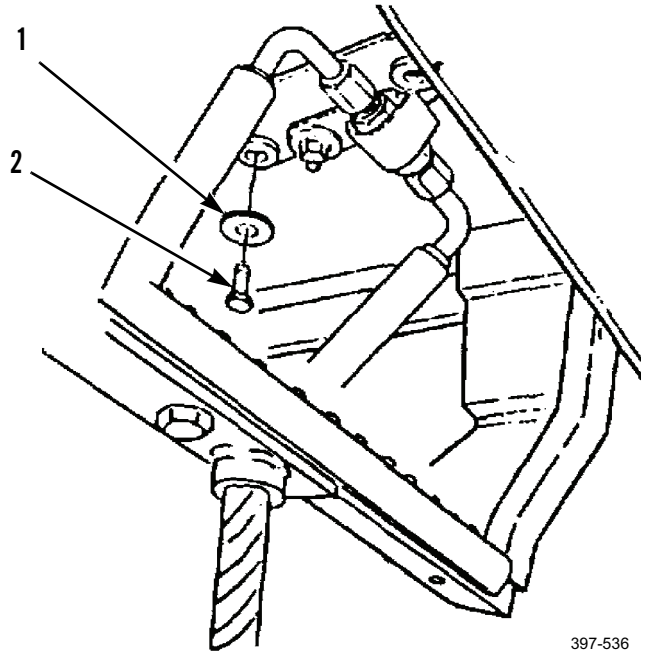1. Holding body (14), connect hose assemblies (11 and 12), and install new O-rings (13) so that adapter end of valve faces forward on machine.
2. Install plate (3), washer (5), bolt (4), bracket (6), clip (7), washers (9 and 10), and nut (8) so that clip hooks over bracket.
3. Install three washers (1) and bolts (2).



4. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
5. Turn engine off.
6. Check for leaks.
7. Refill hydraulic tank to proper level (WP 0216 00).

END OF WORK PACKAGE

REMOTE CONTROL REPAIR (TYPE II MACHINE)

0175 00

THIS WORK PACKAGE COVERS

Disassembly, Cleaning and Inspection, Assembly

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (4)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Remote control removed (TM 5-3805-261-10)

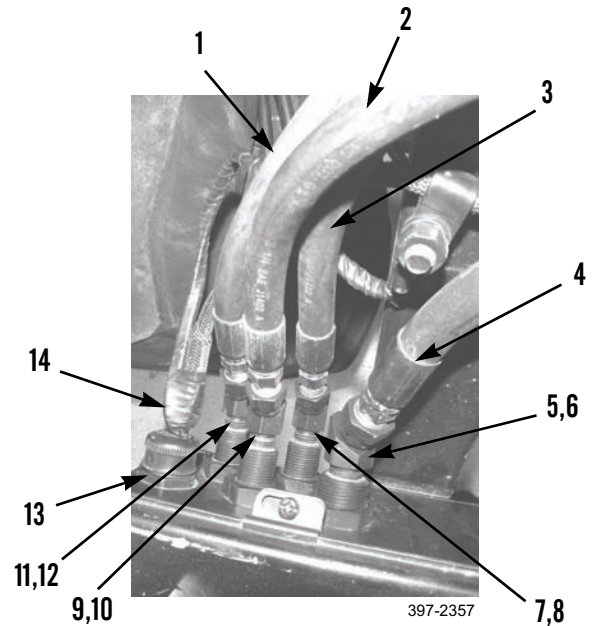
DISASSEMBLY**CAUTION**

Cap hose and tube ends and plug all open fuel ports to prevent contamination.


NOTE

Tag hose and tube assemblies and wires before disconnecting to aid in installation.

1. Disconnect hoses (1, 2, 3, and 4) from elbows (5, 7, 9, and 11).
2. Open cover (15).
3. Remove line fittings from elbows inside remote control unit (13).
4. Remove elbows (5, 7, 9, and 11) and preformed packings (6, 8, 10, and 12) from remote control unit (13). Discard preformed packings.
5. Tag and disconnect wiring inside remote control unit (13). Disconnect wiring harness (14) at fitting and remove wiring harness from remote control unit.



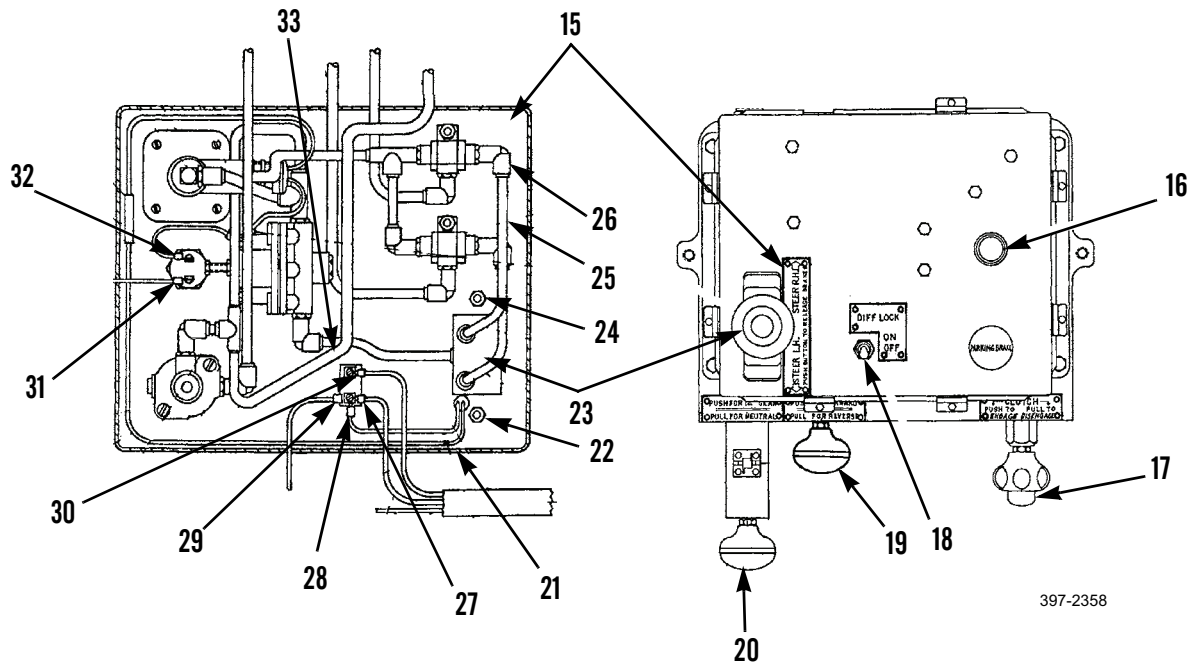6. Loosen jamnuts securing cable assemblies (17, 19, and 20) to remote control unit (13) and remove cable assemblies.
7. Remove steering valve (23) by removing nuts (22 and 24), wire (21), and disconnecting tubes ends (25, 26, and 33).
8. Remove differential lock switch (18) by disconnecting wires (27, 28, 29, and 30) and removing switch from cover (15).
9. Remove low air warning lamp (16) by disconnecting wires (31 and 32) and removing lamp from cover (15).

DISASSEMBLY - CONTINUED

397-2358

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Install low air warning lamp (16) on cover (15) and connect wires (31 and 32).
2. Install differential lock switch (18) on cover (15) and connect wires (27, 28, 29, and 30).
3. Install steering valve (23) on cover (15) with nuts (22 and 24). Connect tube ends (25, 26, and 33) and wire (21).
4. Install new preformed packings (6, 8, 10, and 12) and elbows (5, 7, 9, and 11) on remote control unit (13).
5. Install line fitting on elbows inside remote control unit (13).
6. Connect wiring harness (14) at fitting and connect wiring inside remote control unit (13).
7. Install cover (15).
8. Connect hoses (1, 2, 3, and 4) to elbows (5, 7, 9, and 11).
9. Install cable assemblies (17, 19, and 20) and tighten jamnuts.

END OF WORK PACKAGE

STEERING CYLINDER REPLACEMENT

0176 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation, Adjustment

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Jack, hydraulic (Item 37, WP 0348 00)

Jack stand (2) (Item 84, WP 0348 00)

Wrench, torque (Item 99, WP 0348 00)

Wood blocks

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Lubricant, thread (Item 22, WP 0349 00)

Oil, lubricating (Item 26, 27, or 30, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Materials/Parts Continued

O-ring (2)

Packing, preformed (2)

Pin, cotter

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Leaning wheel lock pin installed (TM 5-3805-261-10)

REMOVAL**NOTE**

This procedure covers maintenance for the left steering cylinder. Follow these instructions for the right steering cylinder.

1. Remove bolt (12), washer (13), clip (11), and pin (10).

**WARNING**

- DO NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
- At operating temperature, hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulic lines. Failure to follow this warning may cause injury to personnel.

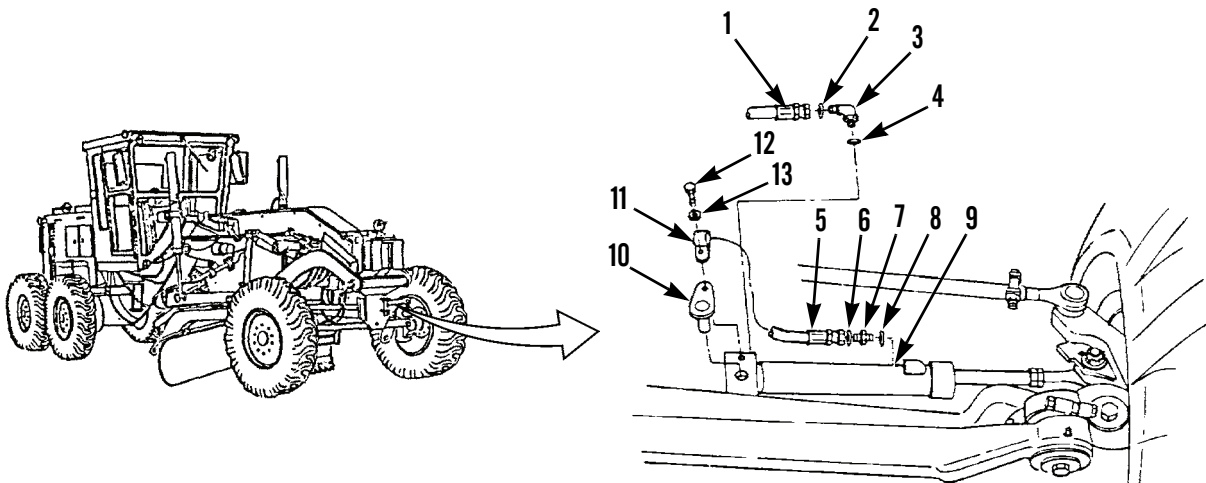
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

2. Disconnect hose assemblies (1 and 5) and remove O-rings (2 and 6) from cylinder (9). Discard O-rings.
3. Remove elbow (3) and preformed packing (4). Discard preformed packing.
4. Remove connector (7) and preformed packing (8). Discard preformed packing.




397-2285

STEERING CYLINDER REPLACEMENT - CONTINUED

0176 00

REMOVAL - CONTINUED

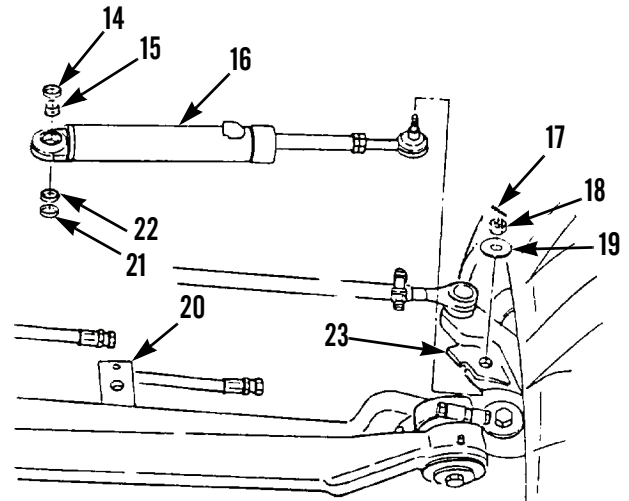5. Remove cotter pin (17), nut (18), and washer (19). Discard cotter pin.
6. Remove steering cylinder assembly (16) from axle bracket (20) from wheel spindle housing (23) by prying or pulling.
7. Remove spacer (14), bearing (15), spacer (21), and ring (22).




397-4326

NOTE

Before removing socket and nut, measure and record the amount of exposed threads on the threaded rod to aid in installation.

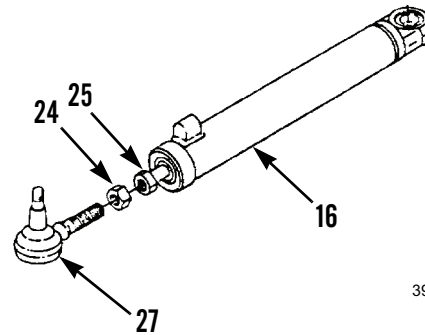8. Loosen nut (24) while holding hex (25) end of rod.
9. Remove socket (27) and nut (24) by unscrewing from cylinder assembly (16).



397-4327

CLEANING AND INSPECTION

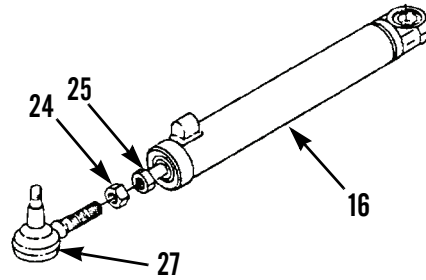
Clean and inspect all parts in accordance with WP 0020 00.

STEERING CYLINDER REPLACEMENT - CONTINUED

0176 00


INSTALLATION

1. Install nut (24) and socket (27) on cylinder (16). Screw socket and nut into cylinder with the same amount of threads exposed as recorded in removal.
2. Tighten nut (24) while holding hex (25) end of cylinder shaft.




397-4327

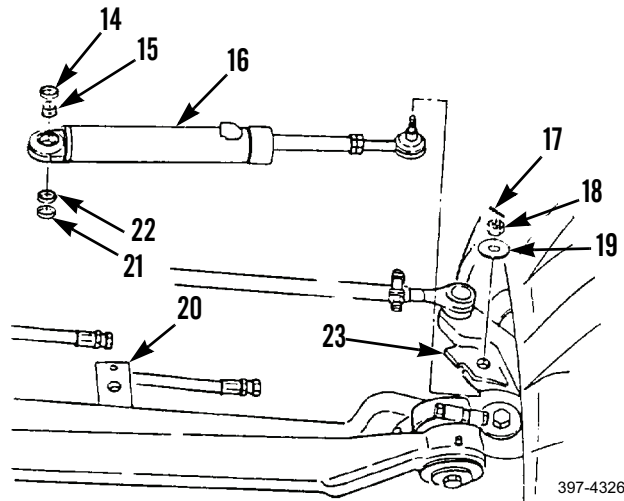3. Install ring (22), spacer (21), bearing (15), and spacer (14) on cylinder assembly (16).
4. Install steering cylinder assembly (16) on axle bracket (20) and wheel spindle housing (23).
5. Install washer (19), nut (18), and new cotter pin (17). Tighten nut to 103 lb-ft (140 Nm).



397-4326

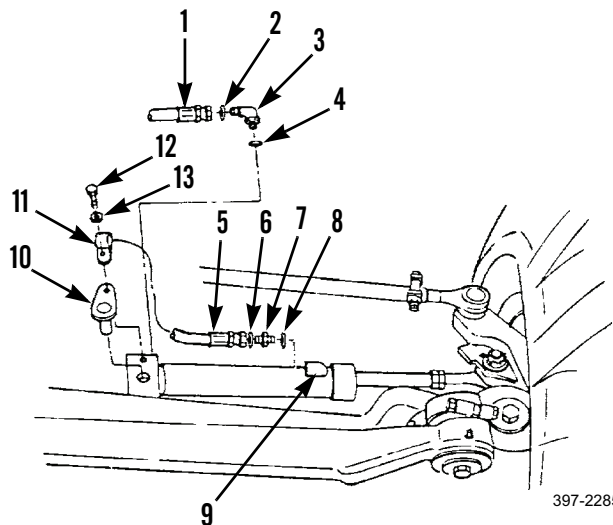6. Install new preformed packing (8), new O-ring (6), and connector (7) to cylinder fitting (9).
7. Install new preformed packing (4), new O-ring (2), and elbow (3).
8. Connect hose assemblies (1 and 5).
9. Install pin (10), clip (11), washer (13), and bolt (12).



397-2285

ADJUSTMENT**WARNING**

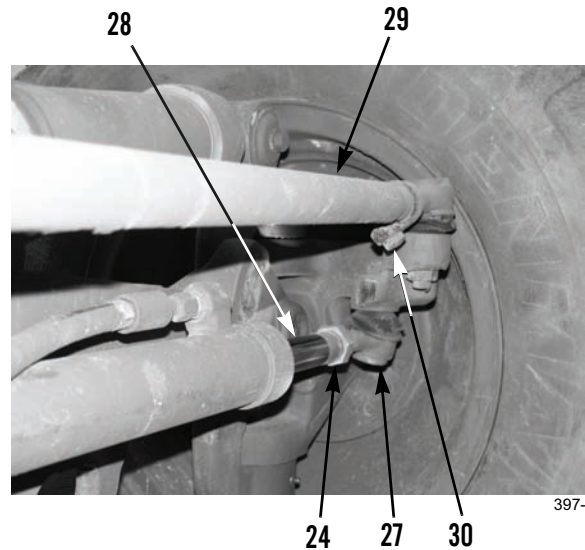
Ensure the machine will not roll or shift. Secure with wood blocks. Failure to follow this warning may cause injury or death to personnel.

1. Install leaning wheel lock pin on front axle (TM 5-3805-261-10).
2. Lift front of machine using hydraulic jack.
3. Install jack stands at both ends of front axle.
4. Turn front wheels in straight ahead position (TM 5-3805-261-10).
5. Mark two front tires at center of tread while turning wheels.
6. Measure distance of front axle between marks at forward point of tires.
7. Measure distance of front axle at rear point of tires.
8. Subtract the larger distance from the smaller distance to determine the amount of toe-in.

NOTE

The toe-in is correct if the front distance is 0.12 to 0.25 in. (3.0 to 6.4 mm) less than the rear distance.

9. Loosen two nuts (30) on clamps at ends of tie-rod (29).
10. Turn rod until toe-in is 0.12 to 0.25 in. (3.0 to 6.4 mm). Tighten rod to 55 lb-ft (75 Nm).
11. Loosen nut (24) and turn left cylinder shaft (28) all the way on threaded rod of socket (27).
12. Repeat step 11 for right steering cylinder.
13. Turn cylinder shaft (28) until right spindle stop is 0.12 in. (3.0 mm) from right axle stop.
14. Tighten nut (24) on cylinder shaft (28) to 250 lb-ft (339 Nm).



397-2286

15. Turn front wheels all the way to the right.
16. Repeat step 15 so that right wheel spindle stop is 0.12 in. (3.0 mm) from left axle stop.
17. Remove jack stands and hydraulic jack.
18. Remove leaning wheel lock pin (TM 5-3805-261-10).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

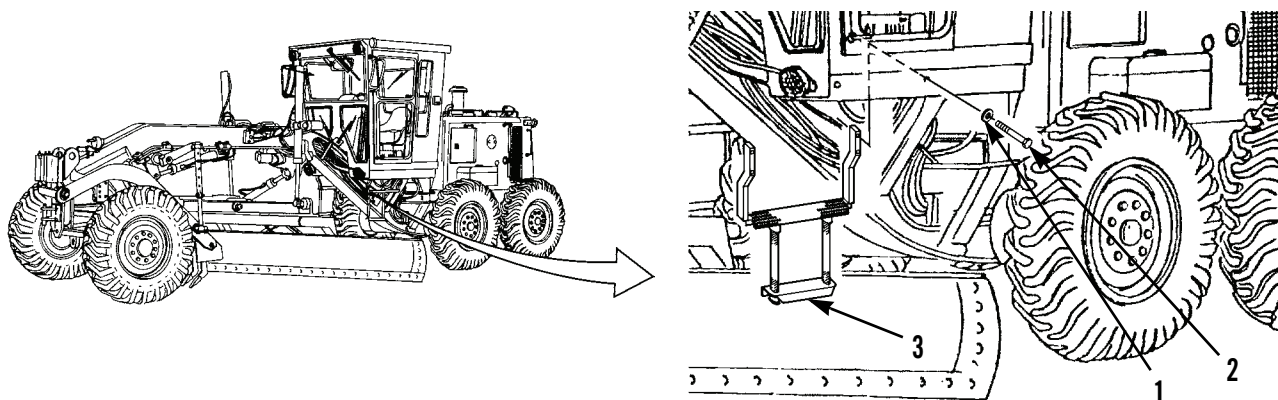
Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

NOTE

This procedure covers maintenance of the left step assembly. Follow these instructions for the right step assembly.

Remove four bolts (2), washers (1), and step assembly (3).



397-555

DISASSEMBLY

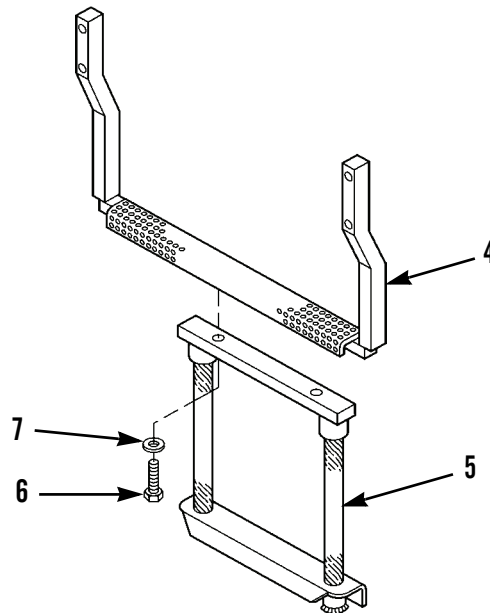
Remove two bolts (6) and washers (7) to separate ladders (4 and 5).

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY


Install two washers (7) and bolts (6) to connect ladders (5 and 4).



397-556

INSTALLATION

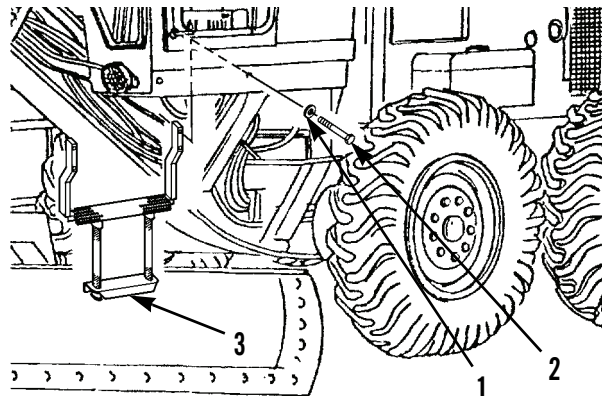Install step assembly (3), four washers (1), and bolts (2).



397-555

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

References

WP 0020 00

Engine off (TM 5-3805-261-10)

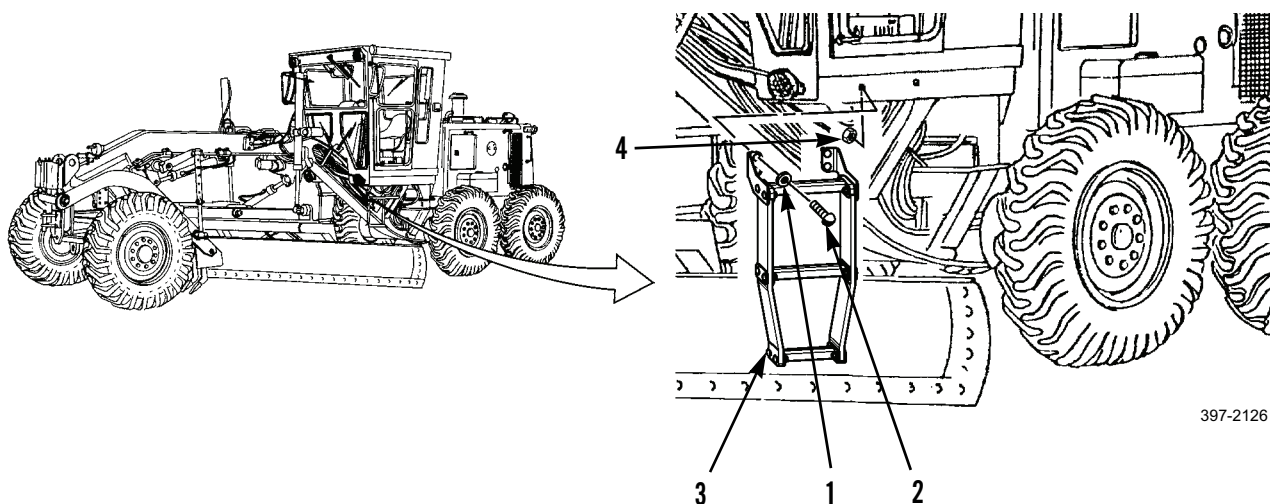
Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

NOTE

This procedure covers maintenance of the left step assembly. Follow these instructions for the right step assembly.

Remove four bolts (2), washers (1), nut (4), and step assembly (3).



397-2126

DISASSEMBLY

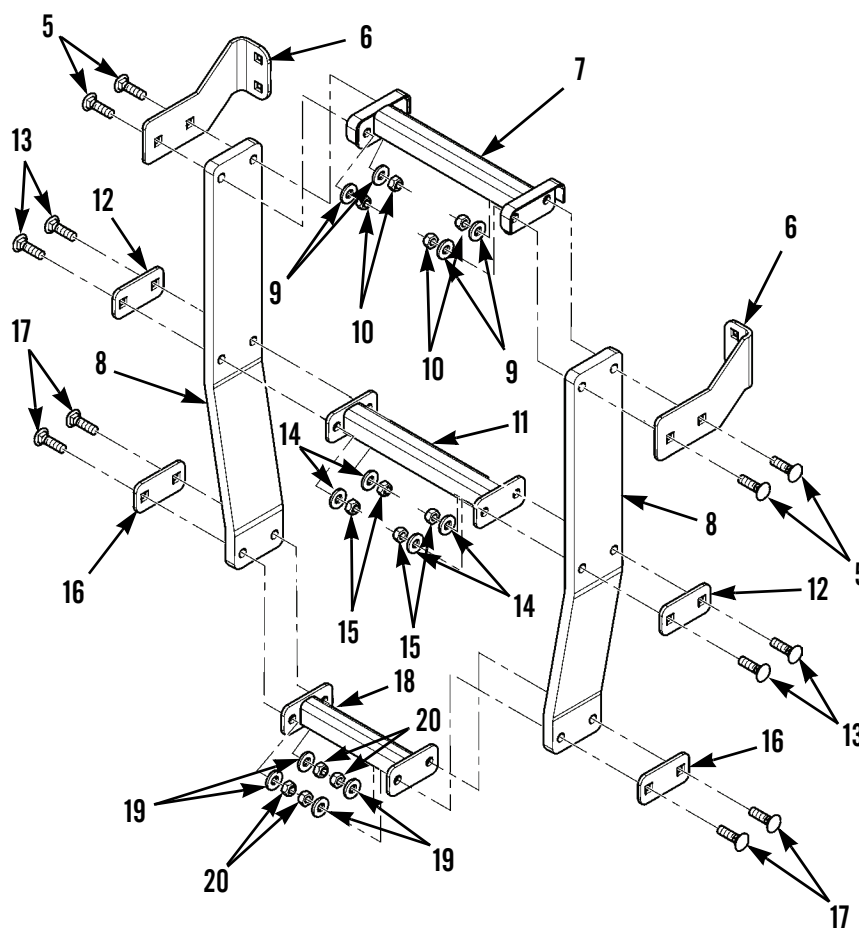
1. Remove four nuts (10), washers (9), bolts (5), two brackets (6), and step (7) from two belts (8).
2. Remove four nuts (15), washers (14), bolts (13), two plates (12), and step (11).
3. Remove four nuts (20), washers (19), bolts (17), two plates (16), and step (18).

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY


1. Install step (18), two plates (16), four bolts (17), washers (19), and nuts (20) on two belts (8).
2. Install step (11), two plates (12), four bolts (13), washers (14), and nuts (15).
3. Install step (7), two brackets (6), four bolts (5), washers (9), and nuts (10).



397-2127

INSTALLATION

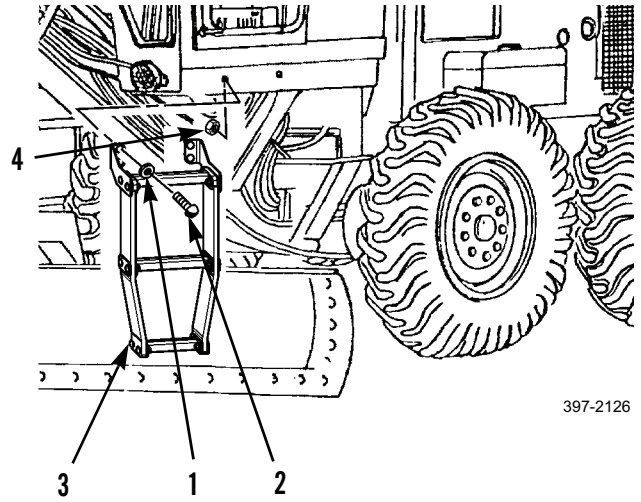Install step assembly (3), four washers (1), and bolts (2).



397-2126

END OF WORK PACKAGE

FRAME COVERS REPLACEMENT**0179 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Rope (Item 36, WP 0349 00)

Engine off (TM 5-3805-261-10)

References

WP 0020 00

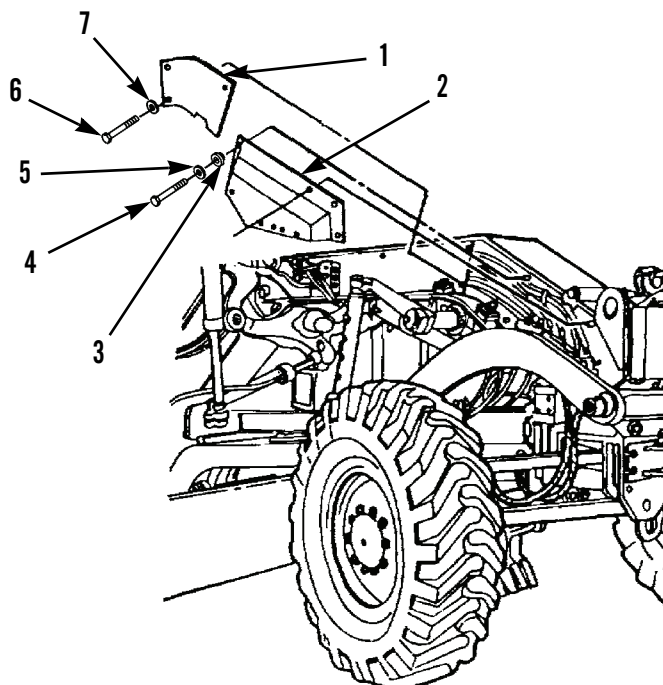
Battery disconnect switch in OFF position (TM 5-3805-261-10)

NOTE

This procedure covers replacement of the right covers. Follow these instructions for the left covers.

REMOVAL

1. Remove eight bolts (4), washers (5), four washers (3), and molding (2) from front-right of frame.
2. Remove two bolts (6), washers (7), and molding (1).




397-557

REMOVAL - CONTINUED

NOTE


Support valve with one hand when removing bolts.

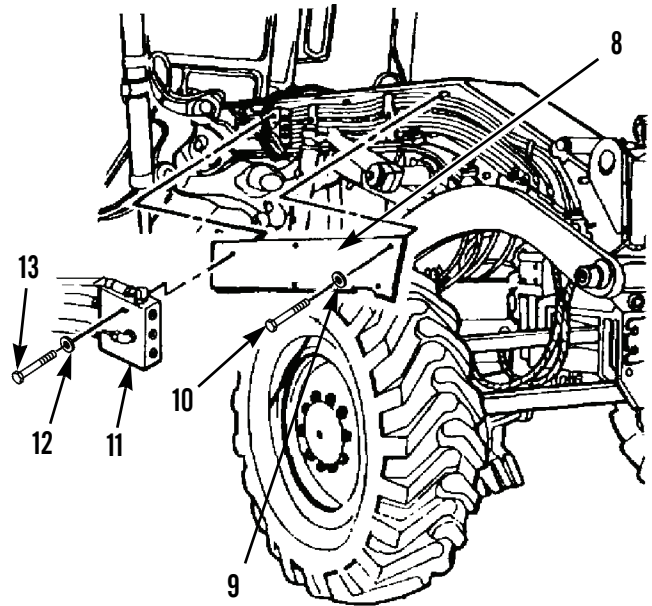3. Remove three bolts (13), washers (12), and valve (11).
4. Remove two bolts (10), washers (9), and cover (8).



397-558

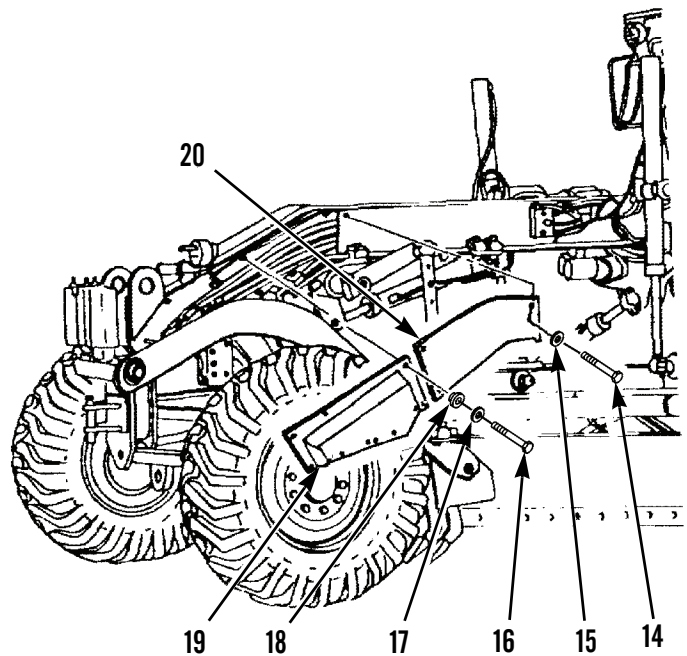5. Remove 7 bolts (16), washers (17), three washers (18), and molding (19) from front-left of frame.
6. Remove two bolts (14), washers (15), and molding (20).



397-559

REMOVAL - CONTINUED**NOTE**

Support valve with one hand when removing bolts.

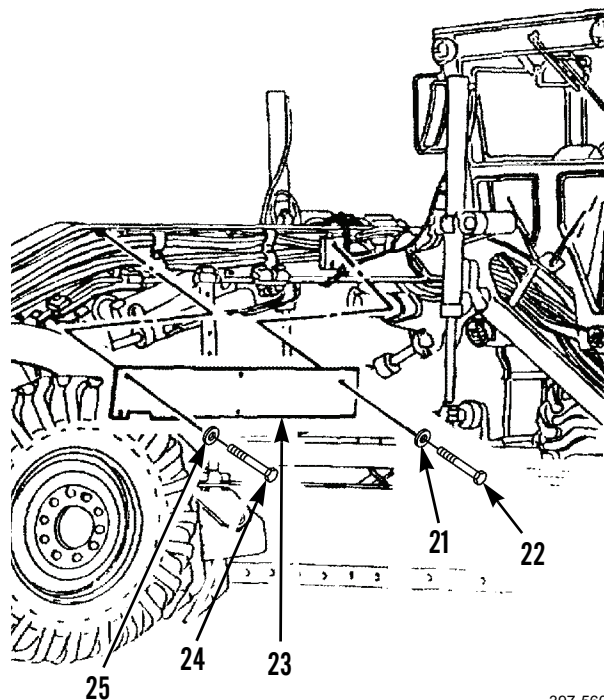
7. Remove two bolts (24), washers (25), and cover (23).

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install cover (23), two washers (25), and bolts (24) on front-left of frame.




397-560

2. Install molding (20), two washers (15), and bolts (14).
3. Install molding (19), eight washers (17), three washers (18), and bolts (16).
4. Install cover (8), two washers (9), and bolts (10) on front-right of frame.

INSTALLATION - CONTINUED

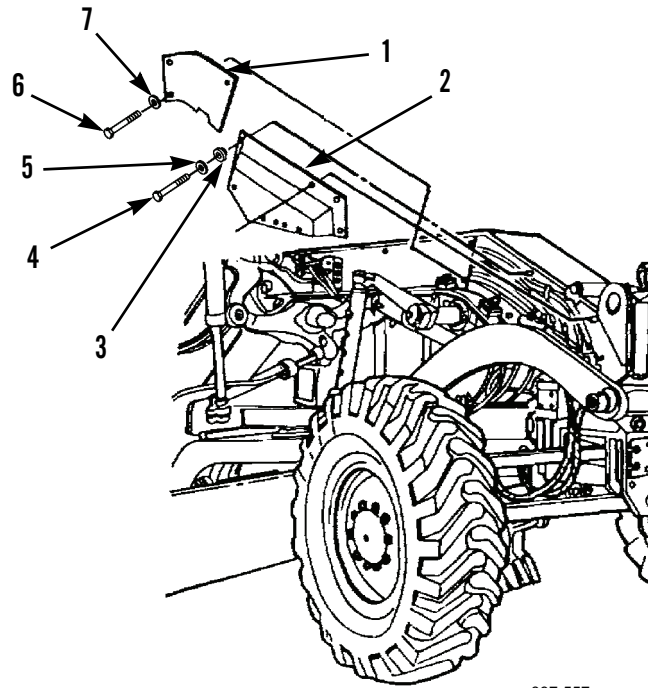5. Install molding (1), two washers (7), and bolts (6).
6. Install molding (2), nine washers (5), four washers (3), and eight bolts (4).



397-557

END OF WORK PACKAGE

FRONT TOW HOOK REPLACEMENT**0180 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Tool kit, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Lockwasher (2)

Nut, self-locking

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

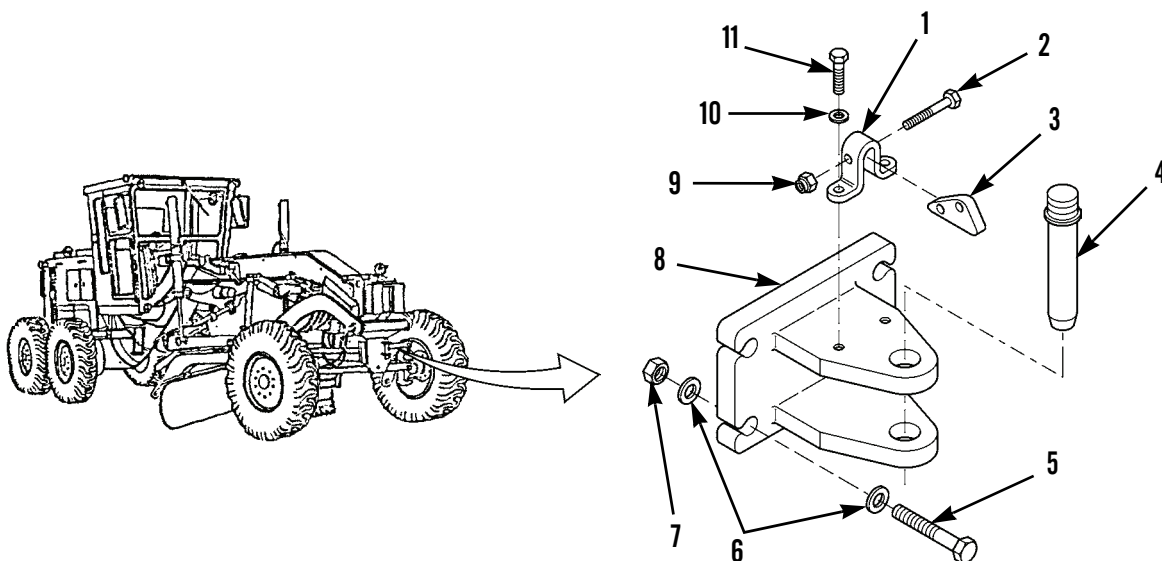
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

1. Remove self-locking nut (9), bolt (2), and latch (3) from lock plate (1). Discard self-locking nut.
2. Remove two bolts (11), lockwashers (10), and lock plate (1) from bracket (8). Discard lockwashers.
3. Remove pin (4).
4. Remove four nuts (7), eight washers (6), four bolts (5), and bracket (8).




397-561

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

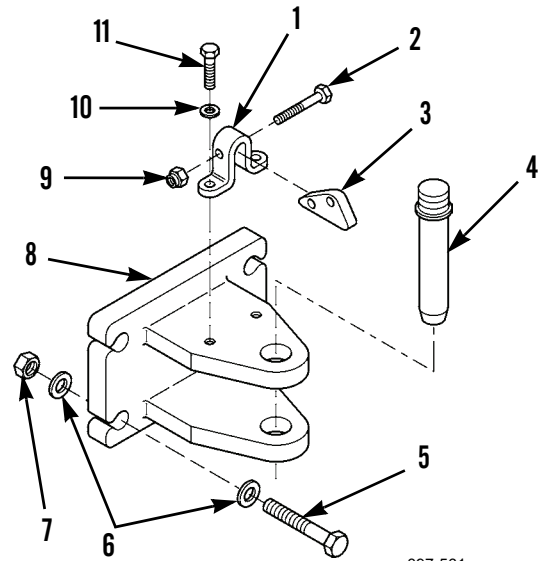1. Install bracket (8), four bolts (5), eight washers (6), and four nuts (7).
2. Install pin (4).
3. Install lock plate (1), two new lockwashers (10), and bolts (11).
4. Install latch (3), bolt (2), and new self-locking nut (9).



397-561

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)
Sling (Item 78, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)
Rivet (12)

Personnel Required

Two

References

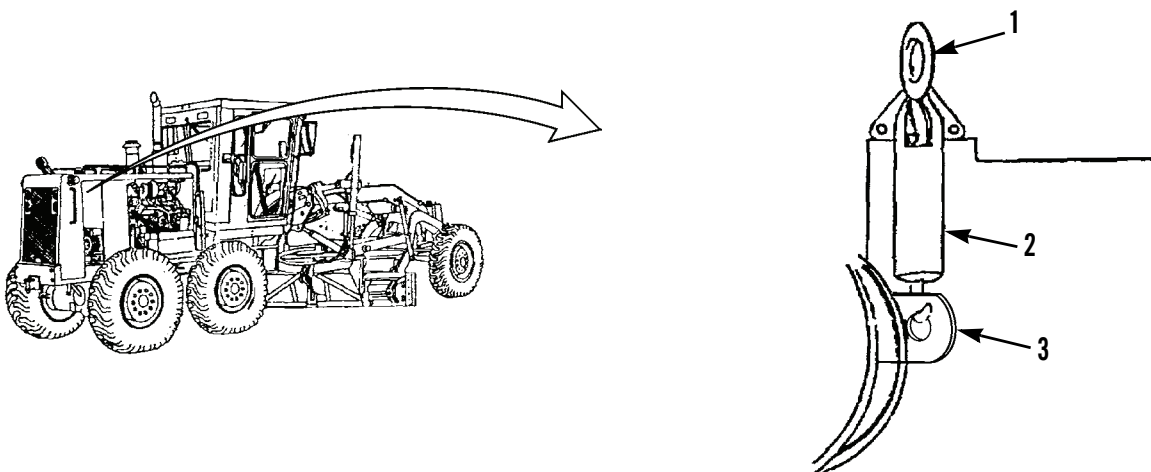
WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)
Parking/emergency brake applied (TM 5-3805-261-10)
Implements lowered to ground (TM 5-3805-261-10)
Engine off (TM 5-3805-261-10)
Battery disconnect switch in OFF position (TM 5-3805-261-10)
Air precleaner removed (WP 0036 00)
Left and right screen doors open (WP 0055 00)

REMOVAL

1. Release four hood latches (2) from brackets (3) by pulling down rings (1).



397-563

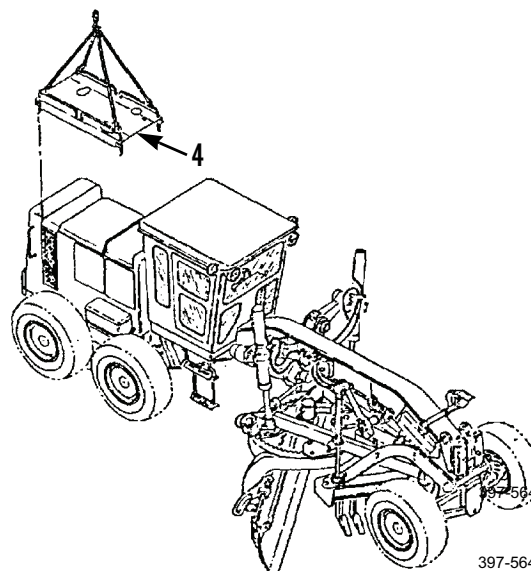
REMOVAL - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may result in injury or death to personnel.

NOTE


Hood assembly weighs 89 lb (40 kg).

2. With assistance, attach sling to hood (4).
3. Remove hood (4).
4. Remove sling.



397-564

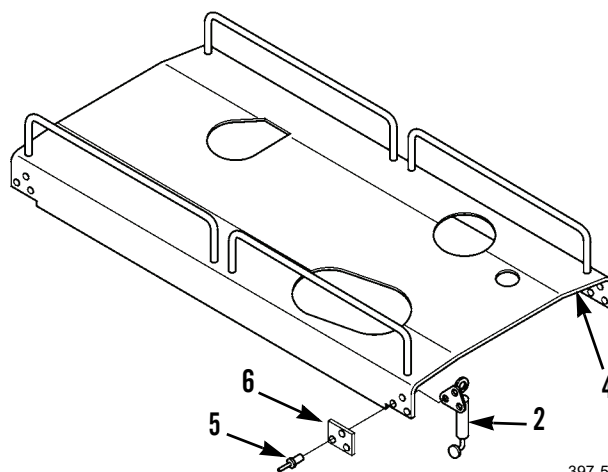5. Inspect 12 rivets (5). If damaged, remove and discard rivets.
6. Remove four plates (6) and hood latches (2) from hood (4).




397-565

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

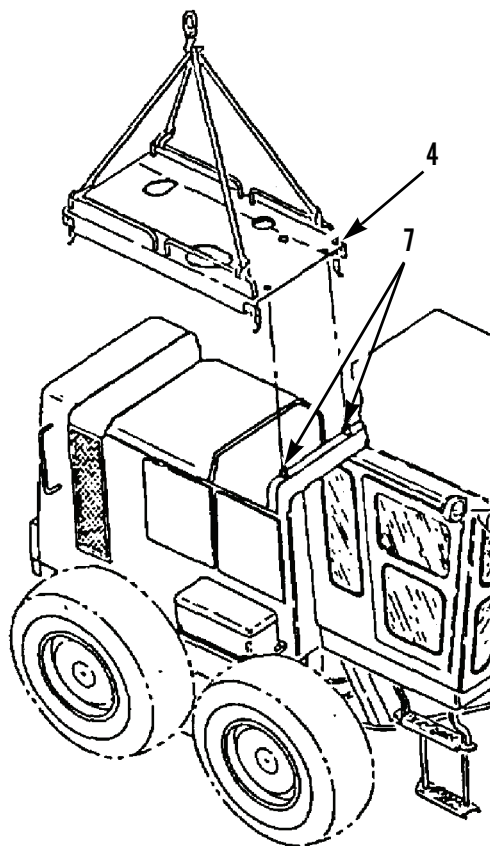1. Position four hood latches (2) and plates (6) on hood (4).
2. If removed, install 12 new rivets (5).
3. Attach sling to hood (4).
4. Install hood (4) on machine. Make sure holes on front of hood align with dash plate guide pins (7).
5. Remove sling.



397-566

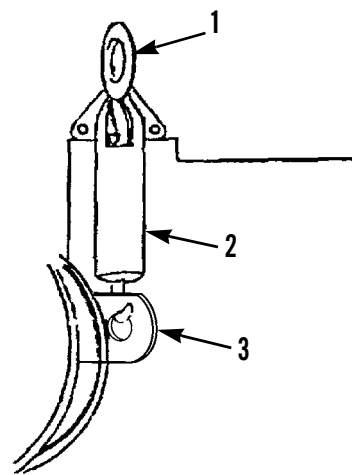6. Fasten four hood latches (2) into bracket (3) by pushing up rings (1).



397-563

7. Install air precleaner (WP 0036 00).
8. Close left and right screen doors (WP 0055 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Sling (Item 78, WP 0348 00)

References

WP 0020 00

Materials/Parts

Adhesive (Item 2, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Gasket

Rivet (10)

Seal (bulk material)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Left and right side screen doors removed (WP 0055 00)

Air dryer removed, if equipped (WP 0164 00)

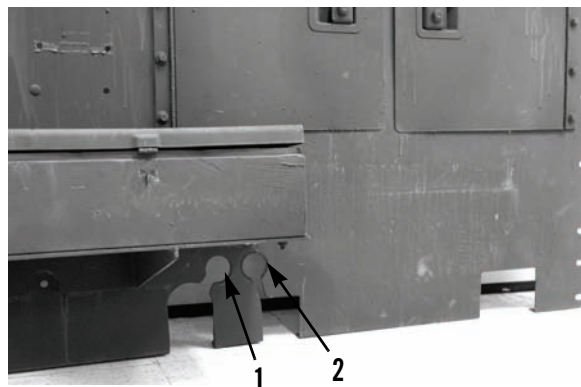
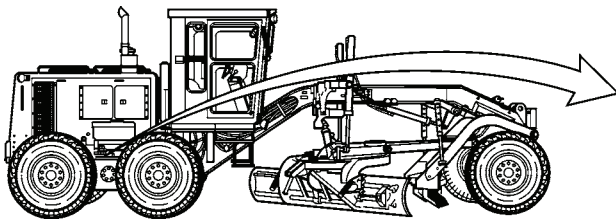
REMOVAL

Right Side

NOTE

There will be either two or four battery cables and grommets, depending on configuration of machine.


1. Push cable and grommet assemblies out of slotted retaining holes (1 and 2) and position out of the way.



397-2447

REMOVAL - CONTINUED**Right Side - Continued**

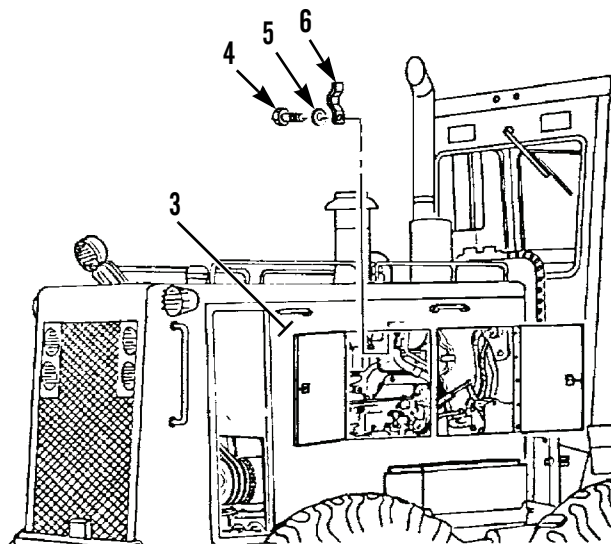- Remove bolt (4), washer (5), and clip (6) from top-center-inside of panel (3).

**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

CAUTION

Do not attach sling to handles for lifting panel. Rivets may not support weight of panel.

NOTE

Right side engine panel weighs 265 lb (120 kg).

- With assistance, wrap sling through door ports and attach sling to panel (3).

REMOVAL - CONTINUED

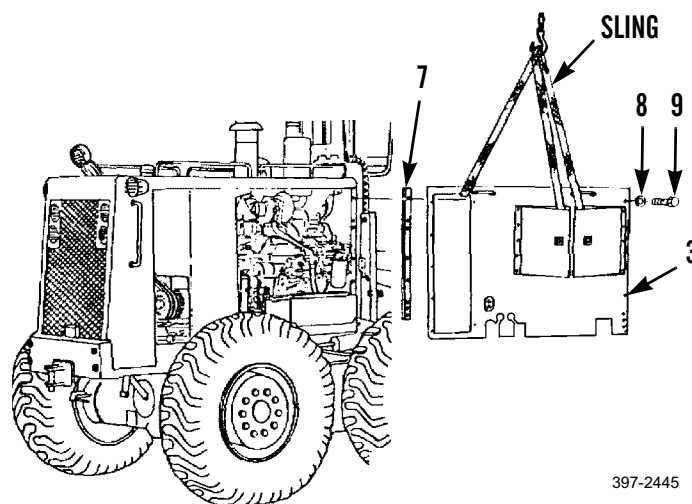
Right Side - Continued



WARNING

Bar will fall out from behind panel when bolts are removed. Failure to follow this warning may cause injury to personnel.

4. Remove 12 bolts (9), washers (8), and bar (7).
5. Remove panel (3).
6. Remove sling.




397-2445

Left Side

NOTE

There may be no grommets or battery cables on left side of machine, depending on configuration of machine.

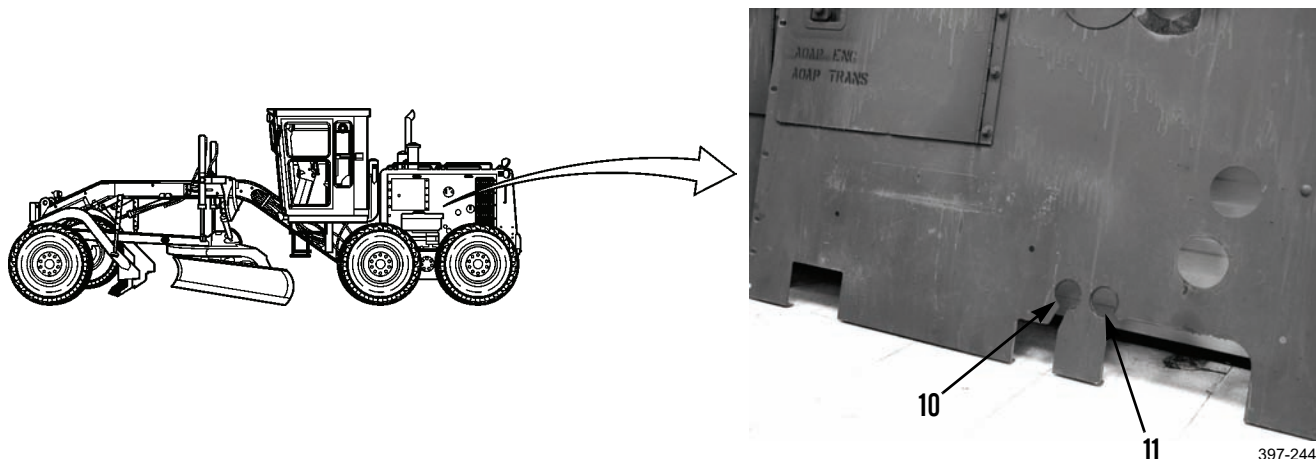
1. Push cable and grommet assemblies out slotted retaining holes (10 and 11) and position out of the way.



397-2446

REMOVAL - CONTINUED**Left Side - Continued**

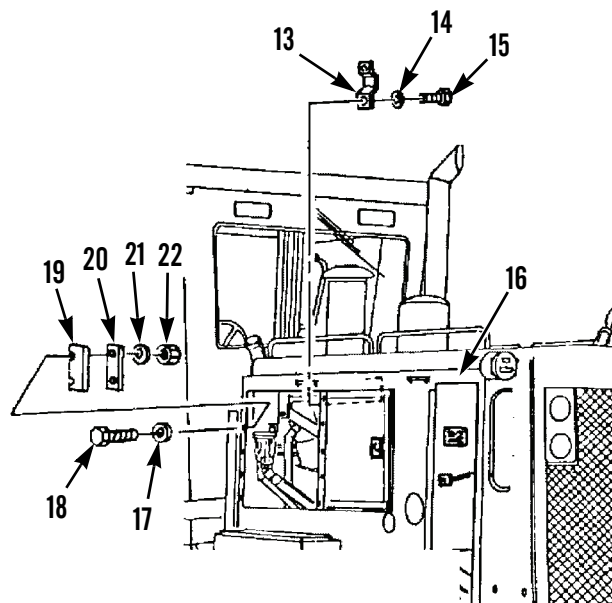- Remove bolt (15), washer (14), and clip (13) from top-center-inside of panel (16).
- Remove two nuts (22), washers (21), catch (20), spacer (19), two bolts (18) and washers (17).



397-575

**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

CAUTION

Do not attach sling to handles for lifting panel. Rivets may not support weight of panel.

NOTE

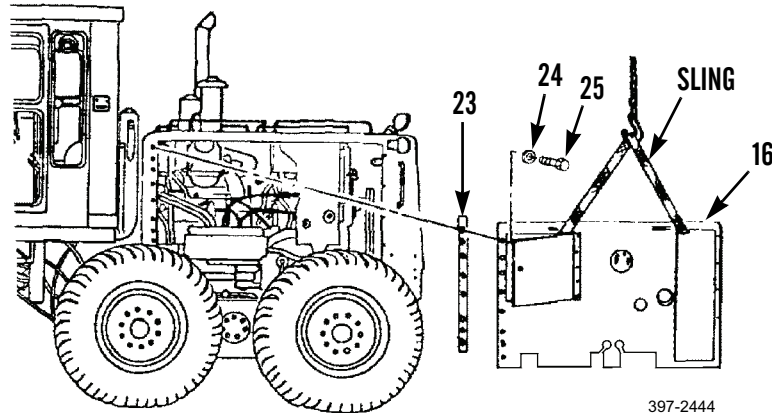
Left side engine panel weighs 265 lb (120 kg).

- With assistance, wrap sling through door ports and attach sling to panel (16).

REMOVAL - CONTINUED**Left Side - Continued****WARNING**

Bar will fall out from behind panel when bolts are removed. Failure to follow this warning may cause injury or death to personnel.


5. Remove 12 bolts (25), washers (24), and bar (23).
6. Remove panel (16).
7. Remove sling.




DISASSEMBLY

Right Side

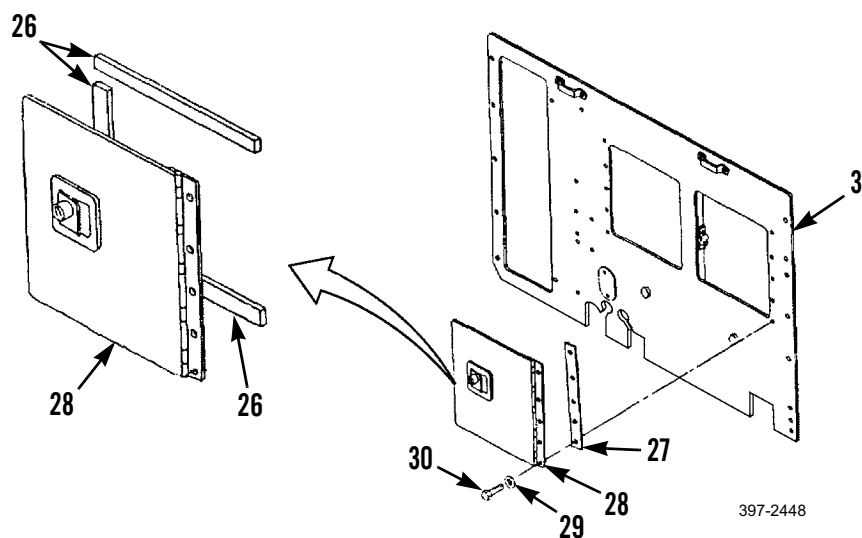1. Remove 10 bolts (30), washers (29), two doors (28), and spacers (27) from panel (3).
2. Remove and discard six seals (26) from two doors (28).



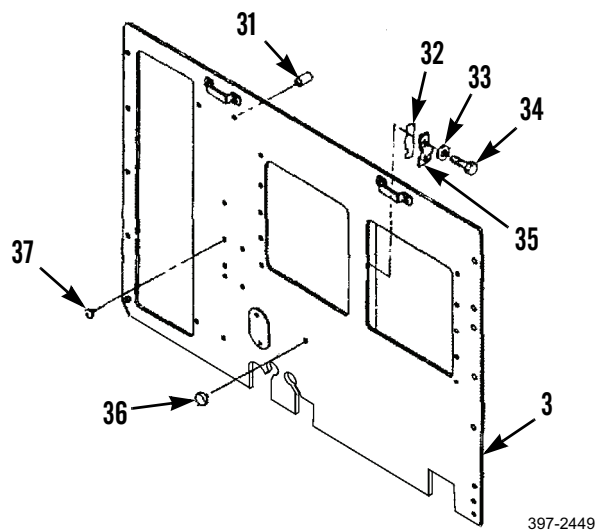
3. Remove four bolts (34), washers (33), two catches (35), and spacers (32) from panel (3).
4. Remove four bumpers (31).
5. Remove two bumpers (36).
6. Remove four plugs (37).



DISASSEMBLY - CONTINUED


Right Side - Continued

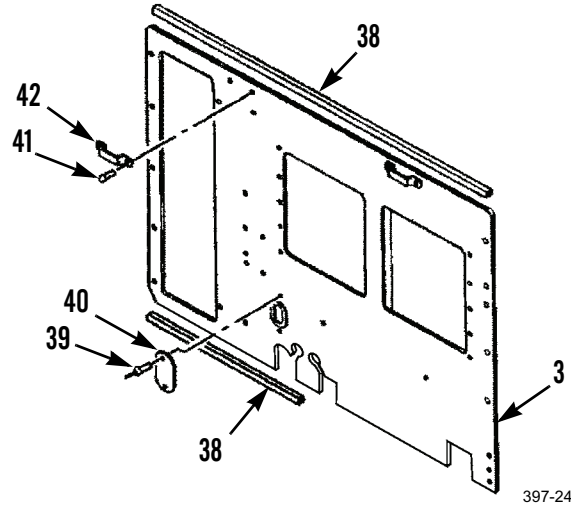7. Remove four rivets (41) and two handles (42). Discard rivets.
8. Remove two rivets (39) and plate (40). Discard rivets.
9. Remove and discard two seals (38) from panel (3).




Left Side

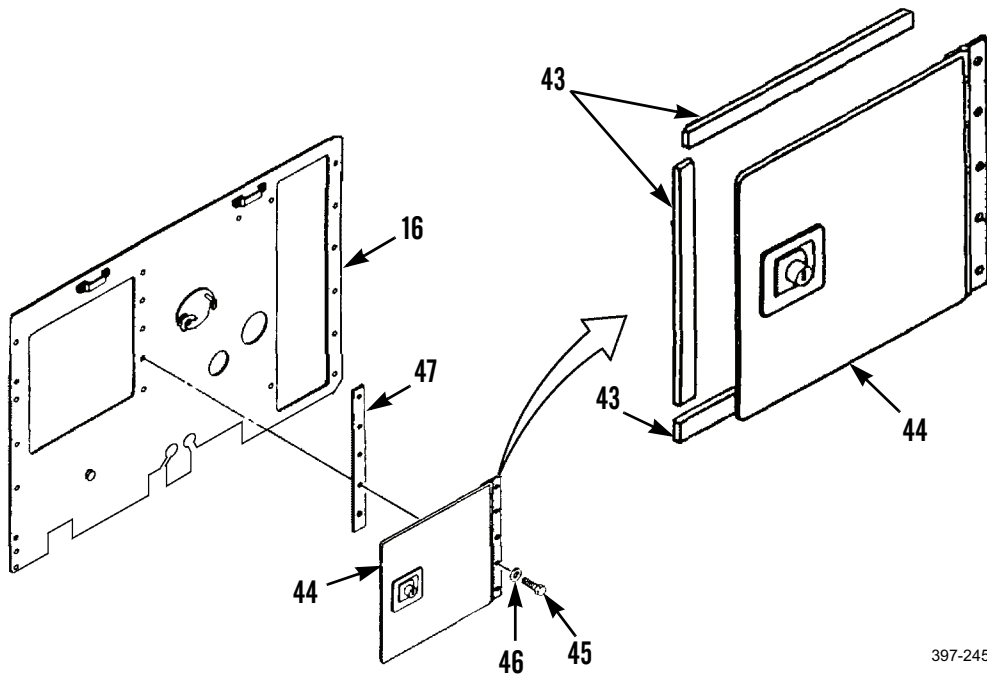1. Remove five bolts (45), washers (46), door (44), and spacer (47) from panel (16).
2. Remove and discard three seals (43) from door (44).



DISASSEMBLY - CONTINUED**Left Side - Continued**

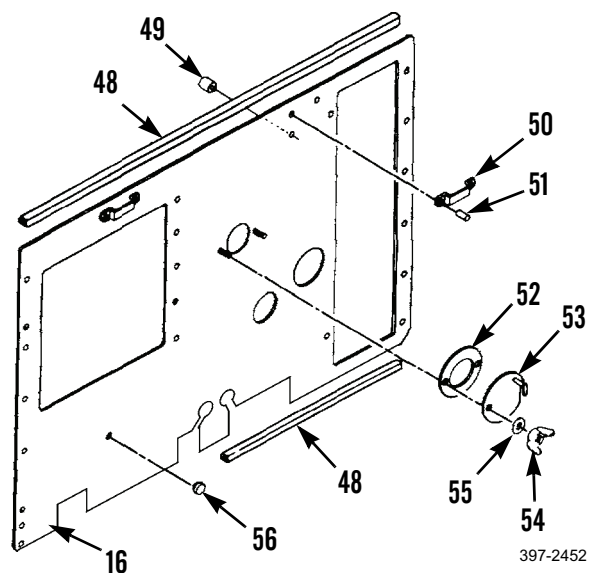3. Remove four bumpers (49).
4. Remove two bumpers (56).
5. Remove two wing nuts (54), washers (55), cover (53), and gasket (52). Discard gasket.
6. Remove four rivets (51) and two handles (50). Discard rivets.
7. Remove and discard two seals (48) from panel (16).

**CLEANING AND INSPECTION**

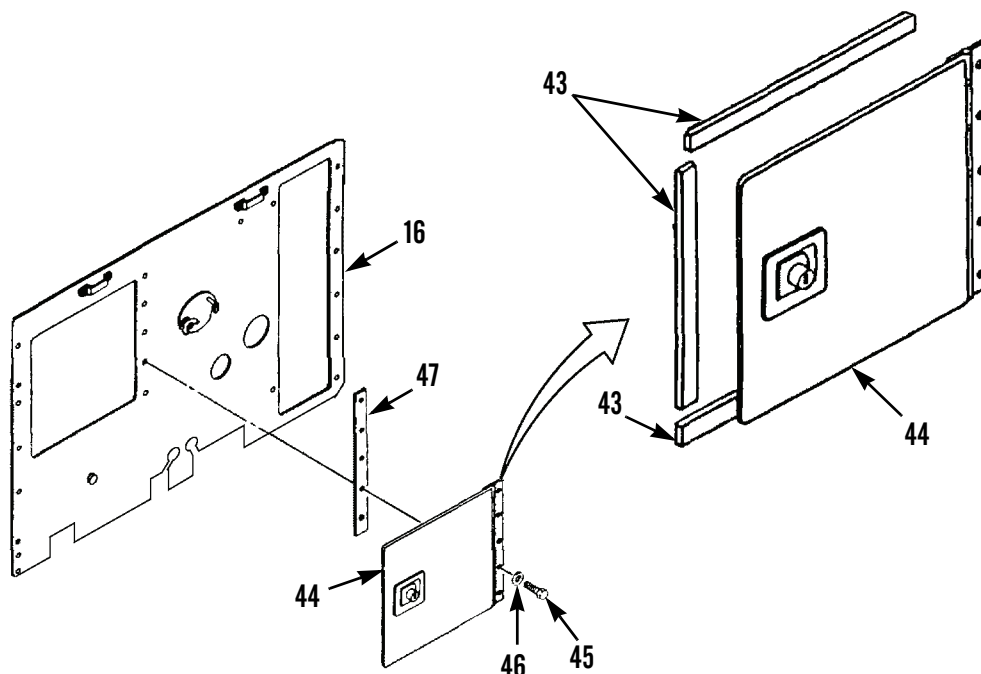
Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY**Left Side**

1. Install two new seals (48) on panel (16). Cut bulk seal to length and apply to clean surface with adhesive.
2. Install two handles (50) and four new rivets (51).
3. Install new gasket (52), cover (53), two washers (55), and wing nuts (54).
4. Install two bumpers (56).
5. Install four bumpers (49).

ASSEMBLY - CONTINUED**Left Side - Continued**


6. Install three new seals (43) on door (44). Cut bulk seal to length and apply to clean surface.
7. Install spacer (47), door (44), five washers (46), and bolts (45) on panel (16).



397-2451

Right Side

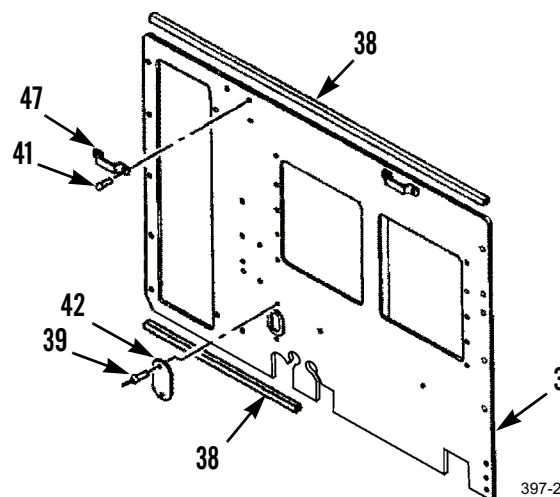1. Install two new seals (38) on panel (3). Cut bulk seal to length and apply to clean surface with adhesive.
2. Install plate (42) and two new rivets (39).
3. Install two handles (47) and four new rivets (41).




397-2450

ASSEMBLY - CONTINUED


Right Side - Continued

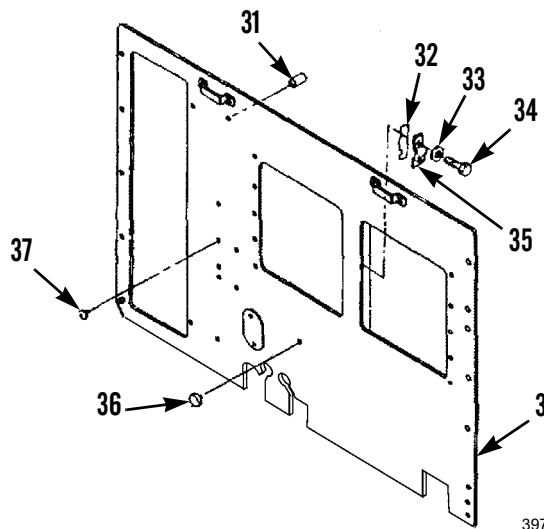4. Install four plugs (37) on panel (3).
5. Install two bumpers (36).
6. Install four bumpers (31).
7. Install two spacers (32), catches (35), four washers (33), and bolts (34).



397-2449

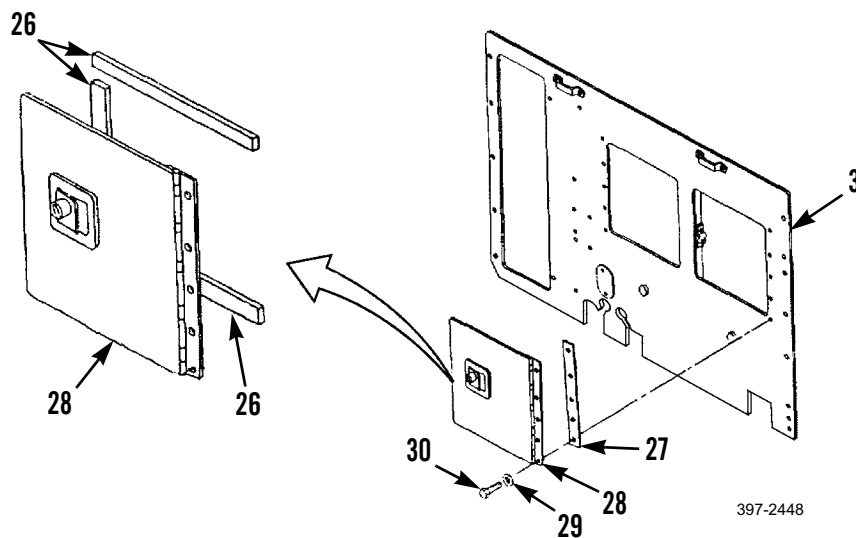8. Install six new seals (26) on two doors (28). Cut bulk seal to length and apply to clean surface.
9. Install two spacers (27), doors (28), 10 washers (29) and bolts (30), on panel (3).



397-2448

INSTALLATION**Left Side****WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

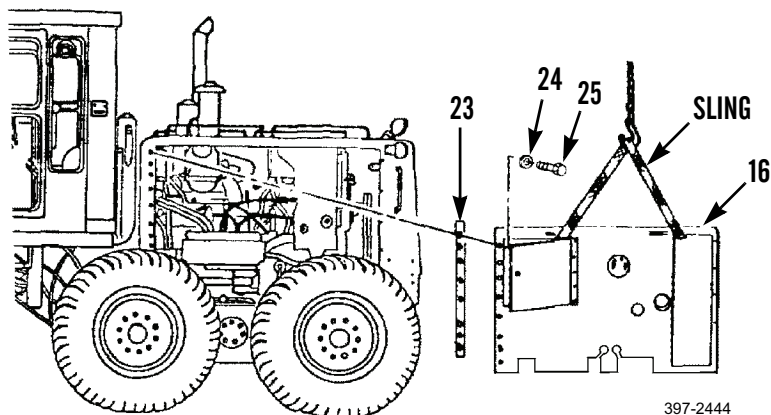
CAUTION

Do not attach sling to handles for lifting panel. Rivets may not support weight of panel.

NOTE


Left side engine panel weighs 265 lb (120 kg).

1. With assistance, wrap sling through door ports and attach sling to panel (17).
2. Position panel (16) and bar (23) on machine.
3. Install 12 washers (24) and bolts (25).
4. Remove sling.



INSTALLATION - CONTINUED**Left Side - Continued**

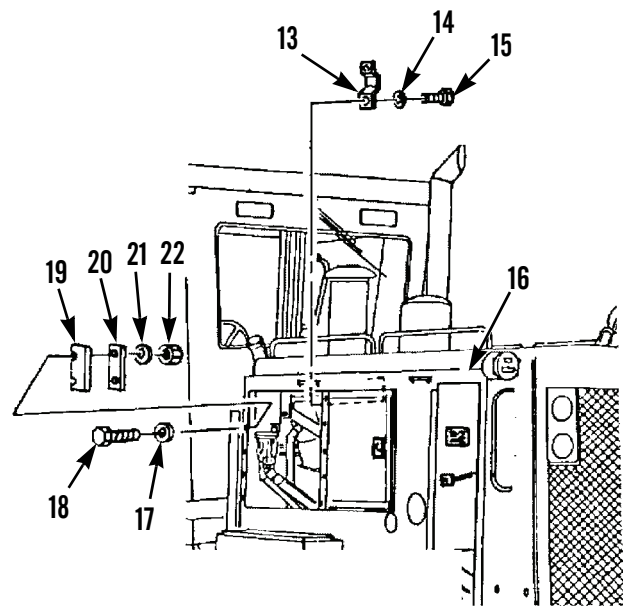5. Install two washers (17), bolts (18), spacer (19), catch (20), two washers (21), and nuts (22).
6. Install clip (13), washer (14), and bolt (15) to top-center-inside of panel (16).



397-575

INSTALLATION - CONTINUED**Right Side****WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

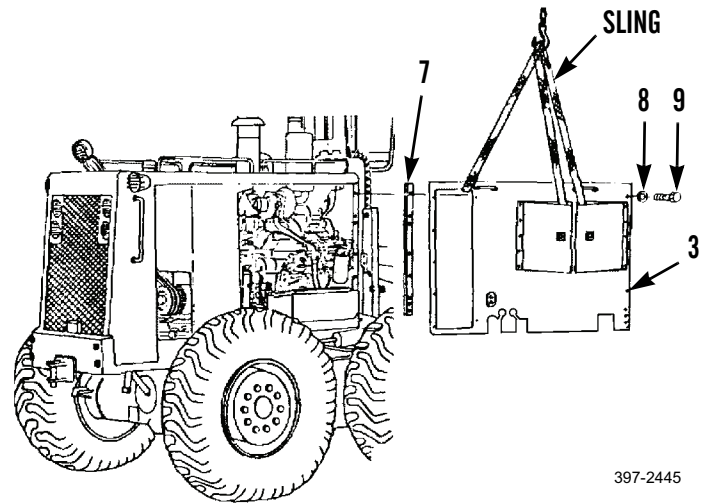
CAUTION

Do not attach sling to handles for lifting panel. Rivets may not support weight of panel.

NOTE

Right side engine panel weighs 265 lb (120 kg).

1. With assistance, wrap sling through door ports and attach sling to panel (3).




397-2445

2. Install panel (3) and bar (7) on machine.
3. Install 12 washers (8) and bolts (9).
4. Remove sling.

INSTALLATION - CONTINUED**Right Side - Continued**

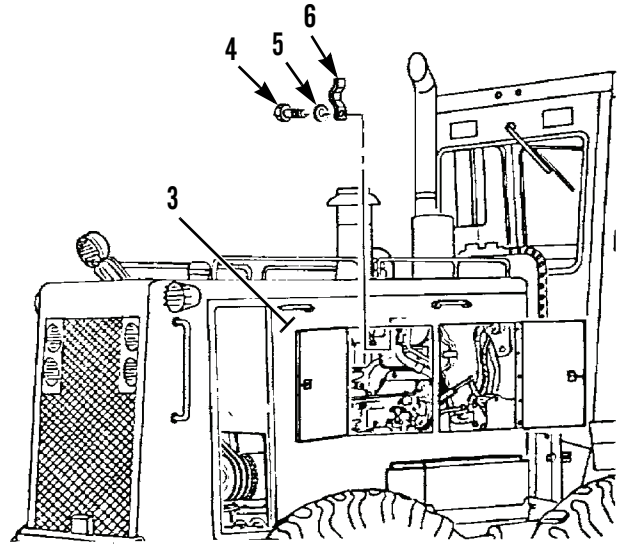5. Install clip (6), washer (5), and bolt (4) to top-center-inside of panel (3).



6. Install air dryer, if removed (WP 0164 00).
7. Install left and right side screen doors (WP 0055 00).

END OF WORK PACKAGE

DASH PLATE REPLACEMENT

0183 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Sling (Item 78, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Personnel Required

Two

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Equipment Conditions - Continued

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Engine hood removed (WP 0181 00)

Left and right side engine panels removed (WP 0182 00)

Supplemental steering electronic control removed (WP 0089 00)

Instrument panel removed (WP 0256 00)

Throttle handle removed (WP 0257 00)

Battery disconnect switch removed (WP 0079 00)

Wire from supplemental steering magnetic switch removed (WP 0088 00)

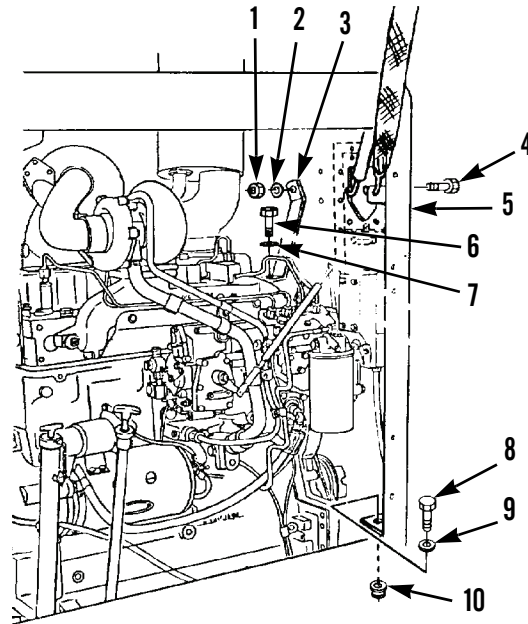
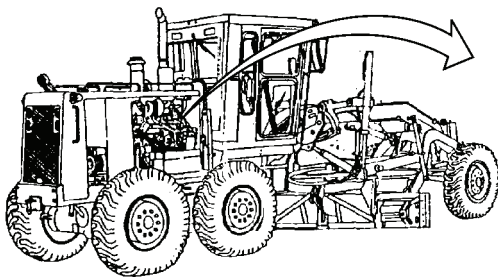
REMOVAL**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Dash plate weighs 70 lb (32 kg).

1. With assistance, install sling to dash plate (5).
2. Remove bolt (6), washer (7), nut (1), washer (2), bolt (4), and bracket (3) from front of engine compartment and dash plate (5).
3. Remove two bolts (8) and washers (9).
4. Using sling, remove dash plate (5).
5. Remove two mountings (10).



397-2154

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install two mountings (10).

**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Dash plate weighs 70 lb (32 kg).

2. With assistance, install sling to dash plate (5).
3. Install two washers (9) and bolts (8).
4. Install bracket (3), bolt (4), washer (2), nut (1), washer (7), and bolt (6).
5. Remove sling.
6. Install wire from supplemental steering magnetic switch (WP 0088 00).
7. Install battery disconnect switch (WP 0079 00).
8. Install throttle handle (WP 0257 00).
9. Install instrument panel (WP 0256 00).
10. Install supplemental steering electronic control (WP 0089 00).
11. Install left and right side engine panels (WP 0182 00).
12. Install engine hood (WP 0181 00).

END OF WORK PACKAGE

ROPS REPLACEMENT (TYPES I AND II MACHINES)

0184 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Sling (Item 78, WP 0348 00)

Wrench, torque (Item 98, WP 0348 00)

Eyebolt, 3/4-10 (2)

Lifting device, 2,500-lb capacity

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Personnel Required

Three

Seat belts removed (WP 0201 00)

REMOVAL

1. Install two 3/4-10 eyebolts (1) in top of ROPS (2).


**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

ROPS weighs 1,732 lb (785 kg).

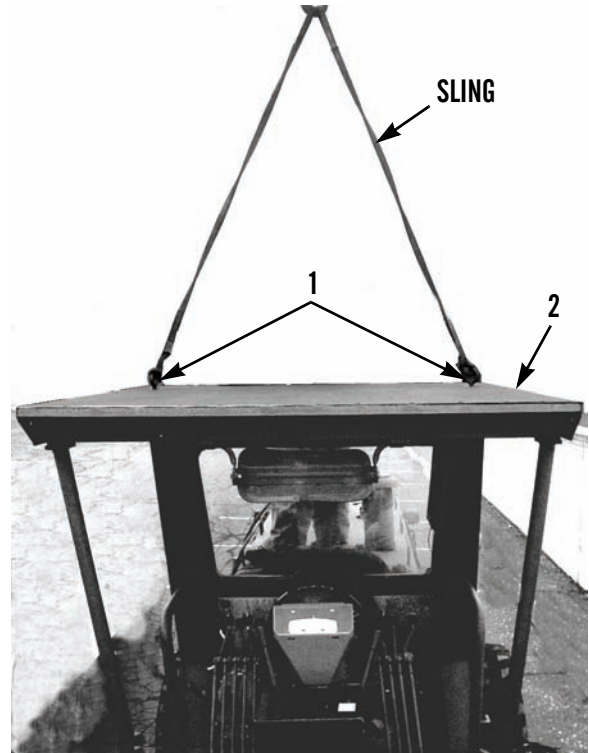
2. Attach sling to two 3/4-10 eyebolts (1).



397-2482


REMOVAL - CONTINUED

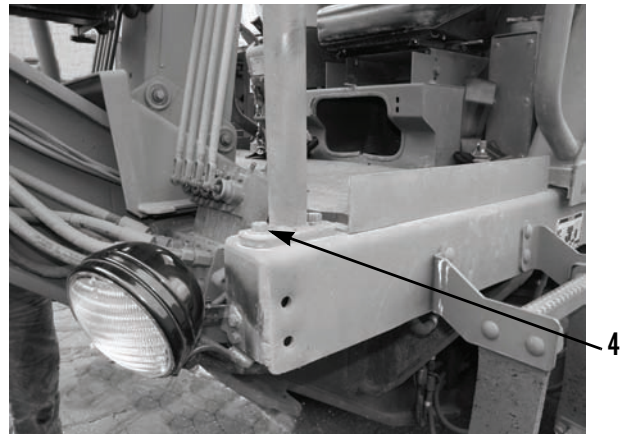3. Remove two lower stanchion mounting bolts (4) on each side of cab.



397-2483

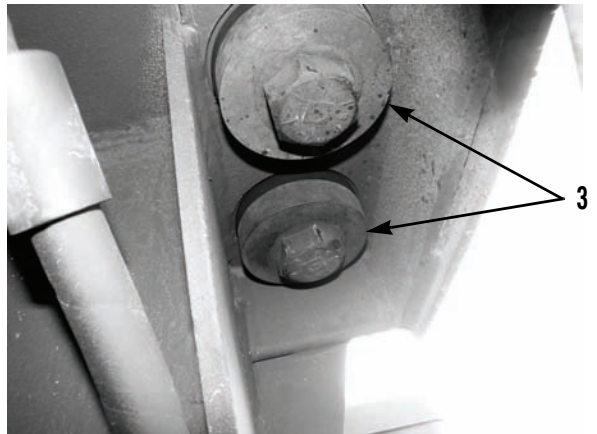4. Remove three rear mounting bolts (3) on each side of cab.




397-2484

5. Carefully raise ROPS (2) from machine with lifting device.

REMOVAL - CONTINUED**WARNING**

Take care to set ROPS down gently to avoid damage to the rear window and injury from broken glass. Failure to follow this warning may cause injury or death to personnel.

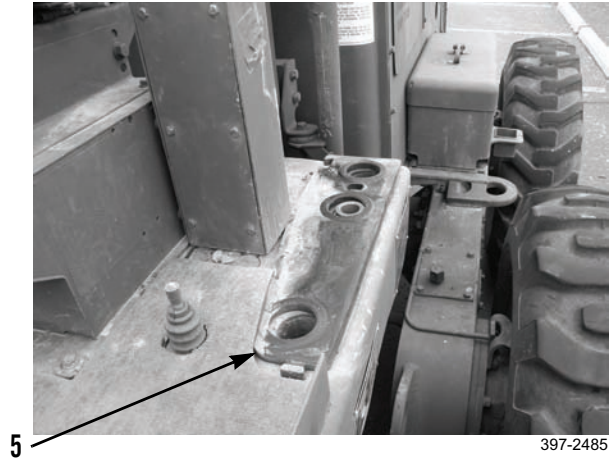6. Lower ROPS (2) onto level surface.
7. Remove sling.
8. Inspect pad (5).
9. Remove pad (5) on each side of cab. Discard pad if damaged.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install pad (5) on each side of cab.
2. Attach sling to two 3/4-10 eyebolts (1) on top of ROPS (2).



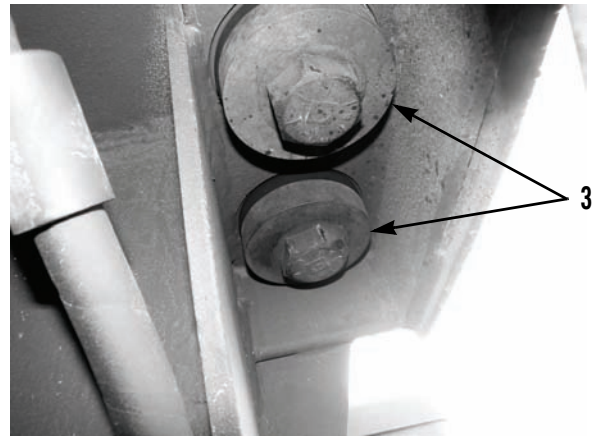
INSTALLATION - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE


ROPS weighs 1,732 lb (785 kg).

3. Raise ROPS (2) with lifting device and carefully lower ROPS onto machine.
4. Install three rear mounting bolts (3) on each side of cab. Tighten bolts to 870 lb-ft (1180 Nm).



397-2484

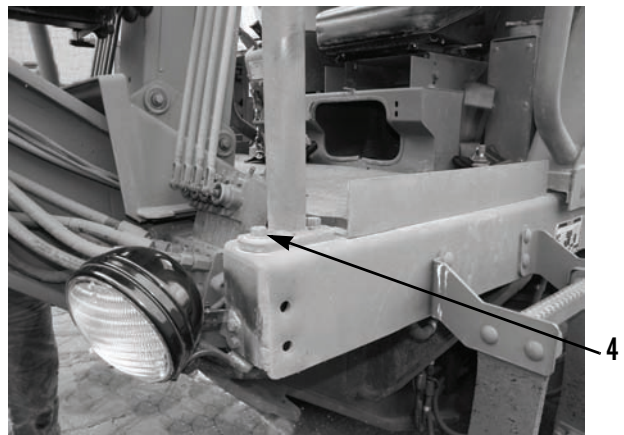5. Install two lower stanchion mounting bolts (4) on each side of cab.



397-2483

6. Install seat belts (WP 0201 00).

END OF WORK PACKAGE

ROPS ACCESSORIES REPLACEMENT (CCE MACHINE)

0185 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Gasket (2)

Engine off (TM 5-3805-261-10)

Rivet (31)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Screw, drive (4)

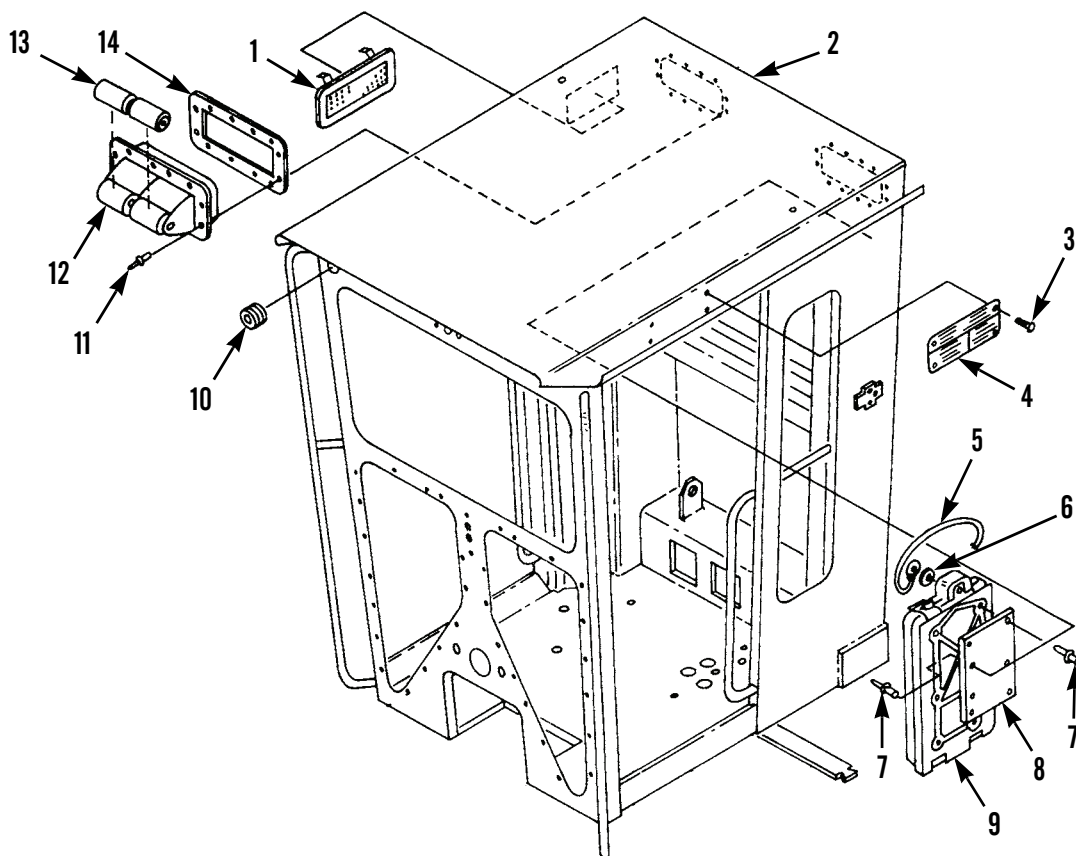
References

WP 0020 00

Cab sound suppression rear panel removed (WP 0192 00)

REMOVAL

1. Remove 12 rivets (11), roller (13), right air door (12), and gasket (14) from upper-right-rear of cab (2). Discard rivets and gasket.
2. Repeat step 1 for left air door.
3. Remove two access covers (1).
4. Remove four drive screws (3) and instruction plate (4). Discard drive screws.
5. Remove four rivets (7), washers (6), wire rope (5), and accessories box (9). Discard rivets.
6. Remove three rivets (7) and cover (8). Discard rivets.



397-2155

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install cover (8) and three new rivets (7).
2. Install accessories box (9), wire rope (5), four washers (6), and new rivets (7).
3. Install instruction plate (4) and four new drive screws (3).
4. Install two access covers (1).
5. Install new gasket (14), right air door (12), roller (13), and 12 new rivets (11) on upper-right-rear of cab (2).
6. Repeat step 5 for left air door.
7. Install cab sound suppression rear panel (WP 0192 00).

END OF WORK PACKAGE

LOWER-FRONT WINDOWS MAINTENANCE (CCE MACHINE)

0186 00**THIS WORK PACKAGE COVERS**Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP**Maintenance Level**

Unit

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Insert, screw (34)

Engine off (TM 5-3805-261-10)

Personnel Required

Two

Battery disconnect switch in OFF position (TM 5-3805-261-10)

References

WP 0020 00

Lower-front sound suppression panels removed (WP 0190 00)

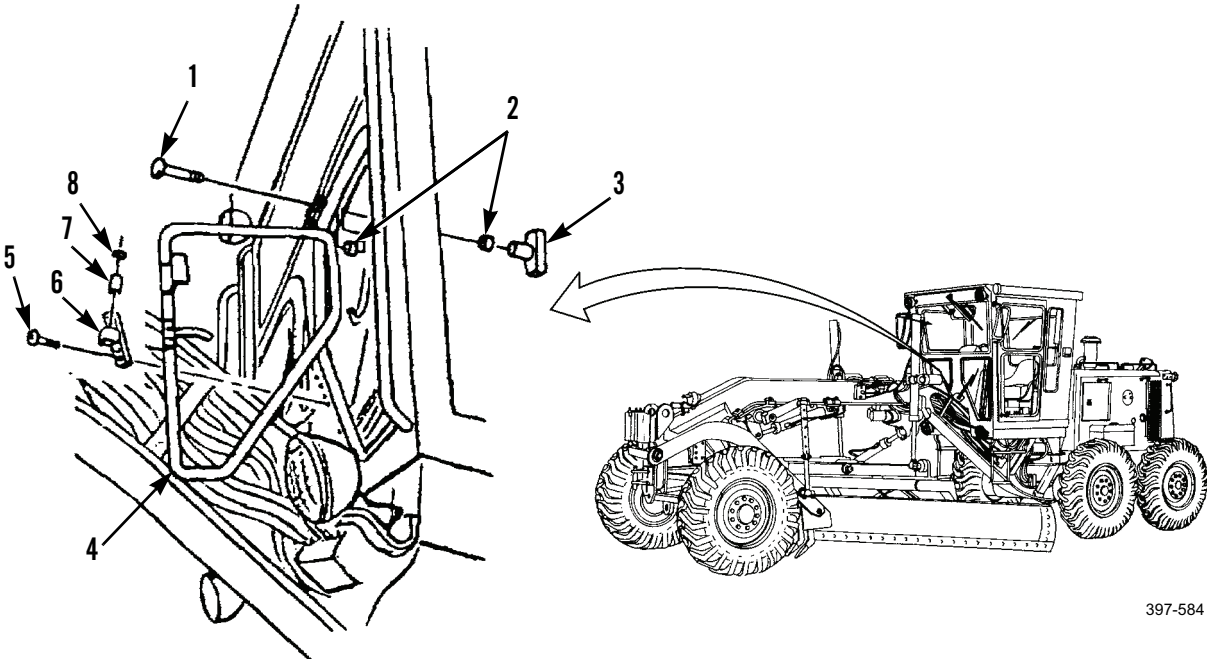
REMOVAL**WARNING**

When working with glass, always wear safety goggles and protective gloves. Failure to take precautions could cause injury to personnel.

NOTE

This procedure covers maintenance of the lower-left-front window. Follow these instructions for the lower-right-front window.


1. Remove pivot (3) and one spacer (2) from inside of cab. Turn pivot left to remove.
2. Remove second spacer (2) and bolt (1).
3. Remove four screws (5) and pivot (6).
4. Remove washer (8) and bearing (7) from pivot (6).
5. Remove lower-front window (4).



397-584


REMOVAL - CONTINUED

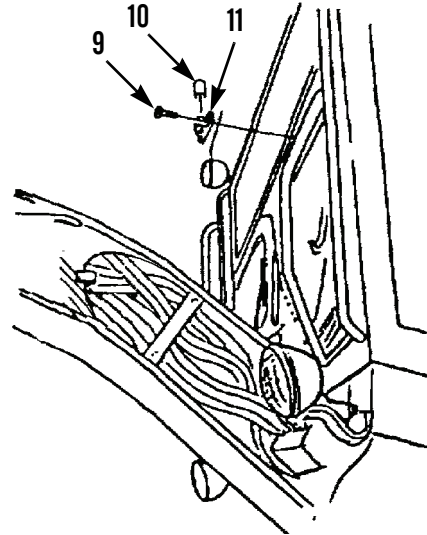6. Remove two screws (9) and pivot (11).
7. Remove bearing (10) from pivot (11).



397-585

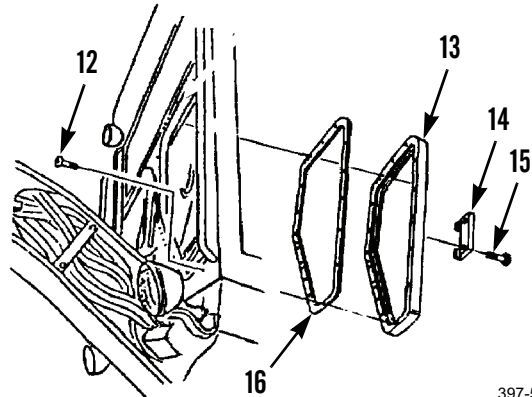
8. Remove 13 screws (12).
9. Remove inner window frame (13).
10. Remove seal (16) from cab frame. Discard seal if damaged.
11. Remove two screws (15) and catch (14) from outer window frame (13).




397-586

DISASSEMBLY

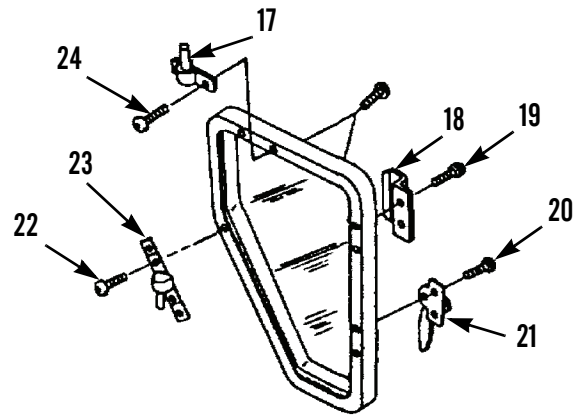1. Remove four screws (22) and pivot (23).
2. Remove three screws (24) and pivot (17).
3. Remove two screws (19) and pull handle (18).
4. Remove two screws (20) and manual handle (21).



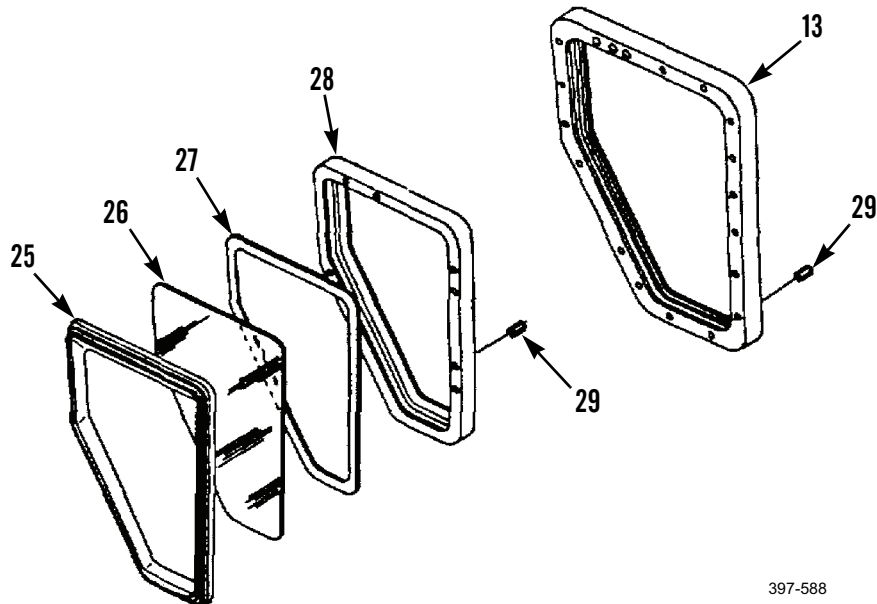5. Remove seal (25), glass (26), and tape (27) from inner window frame (28). Discard seal and tape if damaged.
6. Remove and discard 34 screw inserts (29) from outer and inner window frames (13 and 28).



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY**WARNING**

When working with glass, always wear safety goggles and protective gloves. Failure to take precautions could cause injury to personnel.

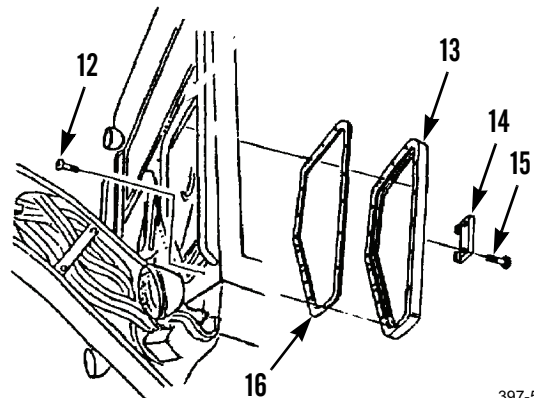
NOTE

This procedure covers maintenance of the left-lower-front window. Follow these instructions for the lower-right-front window.

1. Install 34 new screw inserts (29) in outer and inner window frames (13 and 28).
2. Install tape (27) in inner window frame (28) with adhesive backing on lip of inner window frame. Surface must be clean and dry. Cut new bulk tape material to size if necessary.
3. Install glass (26) and seal (25). Seat lip of seal between glass and inner window frame (28), work lip of seal around inner window frame until ends meet and glass is secured in inner window frame. Cut new bulk seal material to size if necessary.
4. Install handle (21) and two screws (20).
5. Install handle (18) and two screws (19).
6. Install pivot (17) and three screws (24).
7. Install pivot (23) and four screws (22).

INSTALLATION


1. Install catch (14) and two screws (15) on outer window frame (13).
2. Install seal (16). Seat lips of seal into grooves of cab frame, and work seal around cab frame.
3. Position inner window frame (13) against cab wall in front-left-inside of cab.
4. Install 13 screws (12). Move inner window frame (13) to align holes.



397-586


INSTALLATION - CONTINUED

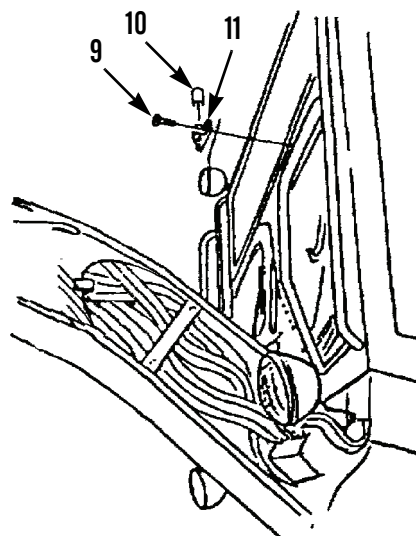5. Install bearing (10) into pivot (11).
6. Install pivot (11) and two screws (9).



397-585

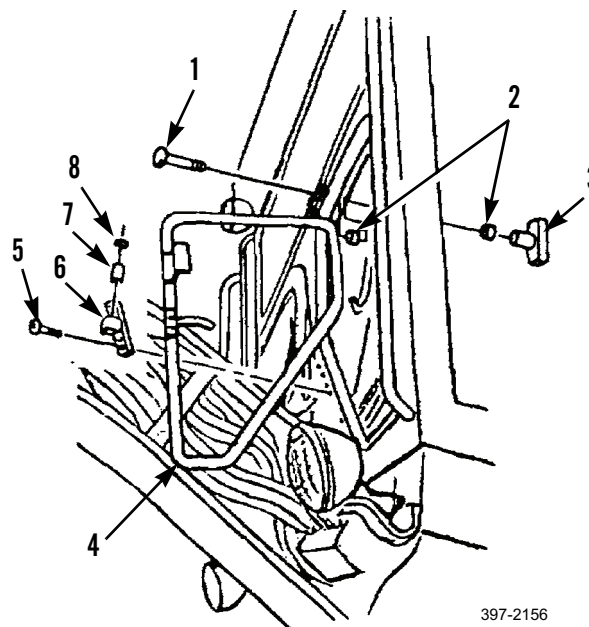7. Position lower-front windshield (4).
8. Install bearing (7) and washer (8) on pivot (6).
9. Install pivot (6) and four screws (5).
10. Install bolt (1) only halfway.
11. Install one spacer (2) under lip, inside of cab. Line up with bolt (1) and push bolt through one of two spacers and cab panel.
12. Install second spacer (2) and pivot (3). Turn pivot right to install.



397-2156

13. Install lower-front sound suppression panels (WP 0190 00).

END OF WORK PACKAGE

CAB WINDOWS REPLACEMENT (CCE MACHINE)

0187 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Installer tool, seal (Item 35, WP 0348 00)

Materials/Parts

Detergent (Item 11, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Personnel Required

Two

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Upper-front windshield wiper arm removed (WP 0207 00)

Rear windshield wiper arm removed (WP 0208 00)

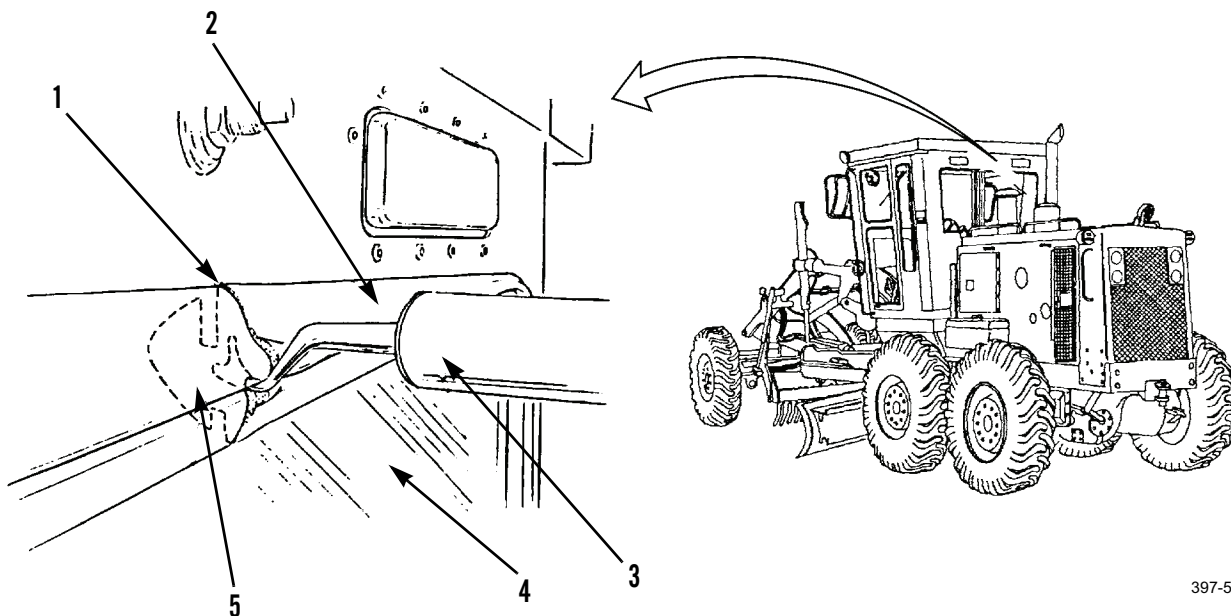
REMOVAL**WARNING**

When working with glass, always wear safety goggles and protective gloves. Failure to take precautions could cause injury to personnel.

NOTE

This procedure covers replacement of the rear window glass. Follow these instructions for the upper-front windshield glass, right and left side window glass, right and left-upper door window glass and right and left-lower door window glass.

1. Use seal installer tool (3) to unlock seal (2) in rear window, outside of cab. Place curved end of seal installer tool in between locking lips (5) at butted ends (1) of seal. Work seal installer tool around circumference of window, pulling locking lip away from cab.
2. Remove glass (4). With assistance, tilt top of glass away from cab and remove from bottom channel.
3. Remove and seal (2) by pulling out from edge of window opening. Discard if damaged.



397-589

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

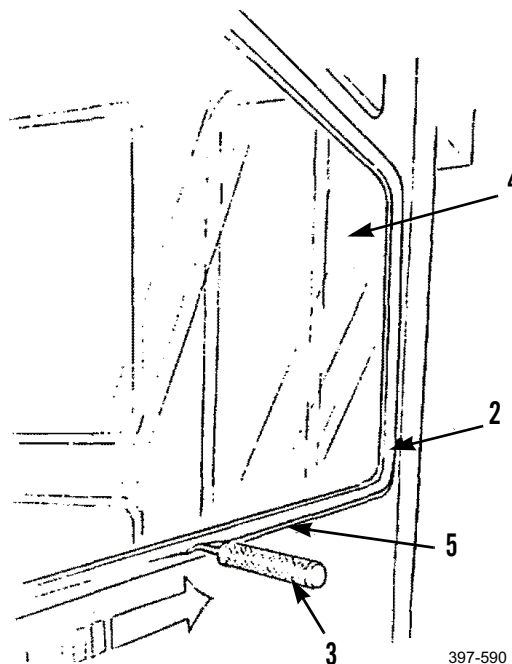
INSTALLATION

1. Install new seal (2). Start one end of seal on side of window opening, with locking lip (5) towards outside of cab.
2. Push seal (2) on edge of window opening around circumference of opening until ends are closed together smooth and tight. Cut bulk seal material 1/8 in. per foot (3 mm per 30.5 cm) of window opening circumference past starting point, then close ends.

INSTALLATION - CONTINUED**CAUTION**

Do not use too much force when positioning bottom of glass. Damage to glass could result.

3. Use assistance to position bottom of glass (4) into channel of seal (2) as far as possible.
4. Install glass (4). Use seal installer tool (3) to lift edge of seal (2) around circumference of window, so glass can slip into position.
5. Inspect seal (2) in rear window, inside of cab. Make sure edge of seal is over glass (4).
6. Lock seal (2) in rear window, outside of cab. Apply detergent and water solution to locking lip (5) around circumference of seal.
7. With seal installer tool (3), insert curved end between locking lip (5) and groove at any point away from butted ends. Work seal installer tool along groove until locking lip is locked into position around circumference of window.



8. Install rear windshield wiper arm (WP 0208 00).
9. Install upper front windshield wiper arm (WP 0207 00).

END OF WORK PACKAGE

CAB DOORS AND LATCH ASSEMBLIES MAINTENANCE (CCE MACHINE)

0188 00**THIS WORK PACKAGE COVERS**Removal, Disassembly, Cleaning and Inspection, Assembly, Installation, Adjustment

INITIAL SETUP**Maintenance Level**

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Sling (Item 78, WP 0348 00)

References

WP 0020 00

Materials/Parts

Adhesive (Item 1, WP 0349 00)

Adhesive (Item 2, WP 0349 00)

Oil, lubricating (Item 25, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Cotter pin (10)

Lockwasher (8)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Cab door windows removed if necessary (WP 0187 00)

REMOVAL



WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

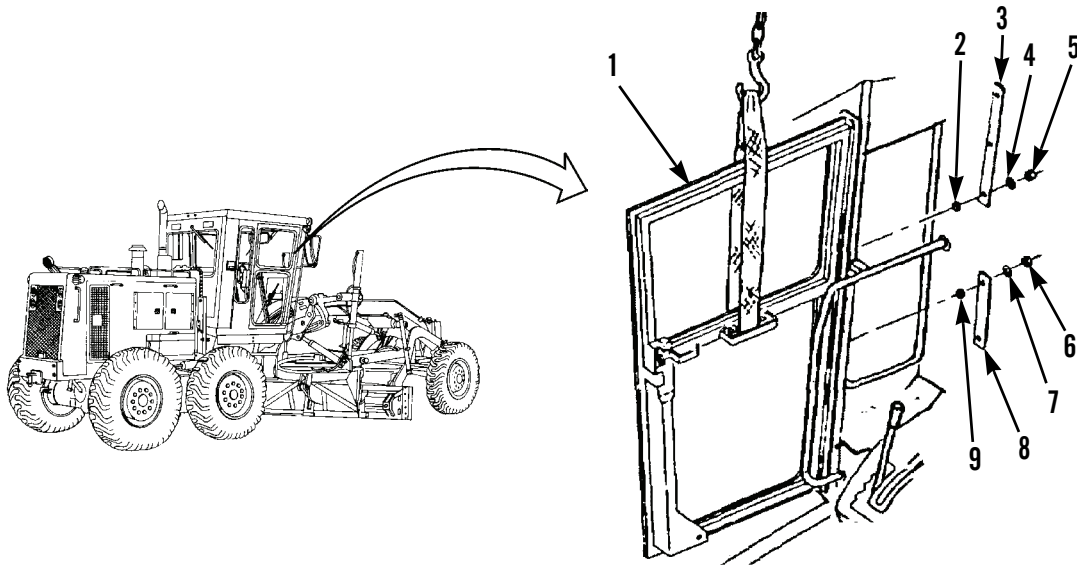
Door weighs 85 lb (39 kg).

1. With assistance, attach sling to right door (1).

NOTE

Outline door hinge in pencil to aid in installation.

2. Remove three nuts (5), washers (4), plate (3), and three spacers (2).
3. Remove two nuts (6), washers (7), plate (8), and two spacers (9).




397-591

REMOVAL - CONTINUED


NOTE

Note location of screws to aid in installation.

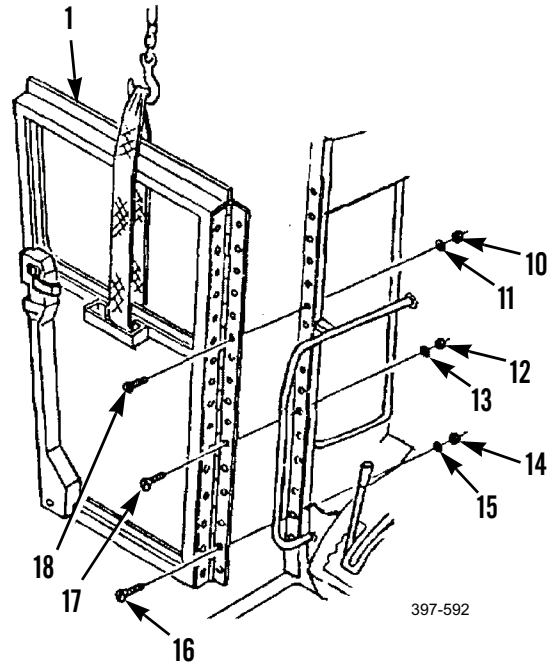4. Remove two nuts (12), washers (13), and screws (17).
5. Remove three nuts (10), washers (11), and screws (18).
6. Remove nine nuts (14), washers (15), and screws (16).
7. Use sling to remove right door (1).
8. Remove sling.




9. Attach sling to left door (1).
10. Remove 14 nuts (21), washers (20), and screws (19).
11. Use sling to remove left door (1).
12. Remove sling.

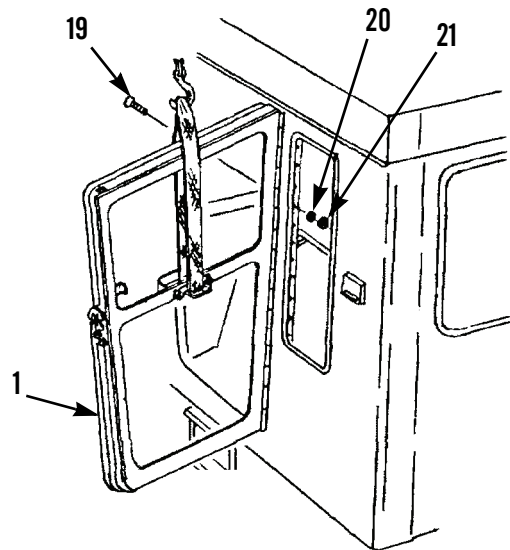

DISASSEMBLY**NOTE**

This procedure covers disassembly of the left door. Follow these instructions for the right door.

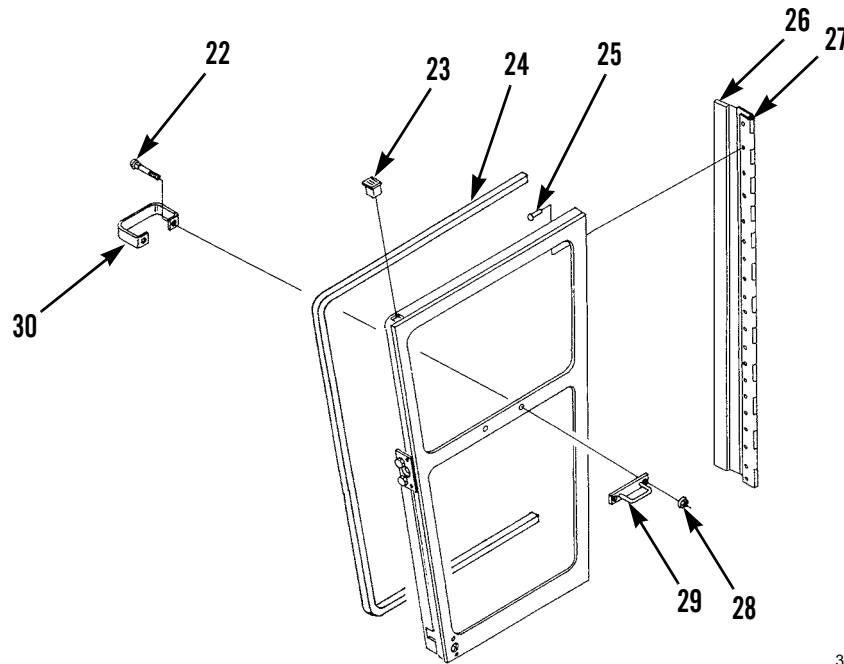
1. Remove 14 rivets (25), hinge (27), and seals (24 and 26). Discard rivets and seals if damaged.
2. Remove plug (23).
3. Remove two nuts (28), handle (29), two bolts (22), and handle (30).




397-594

DISASSEMBLY - CONTINUED

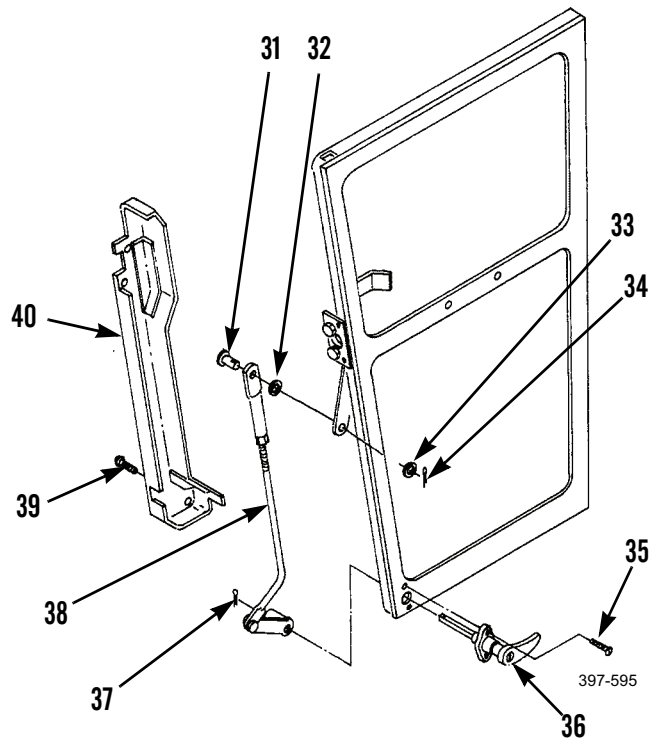4. Remove three screws (39) and cover (40).
5. Remove cotter pin (37), two screws (35), and handle (36). Discard cotter pin.
6. Remove cotter pin (34), washer (33), pin (31), washer (32), and link assembly (38). Discard cotter pin.



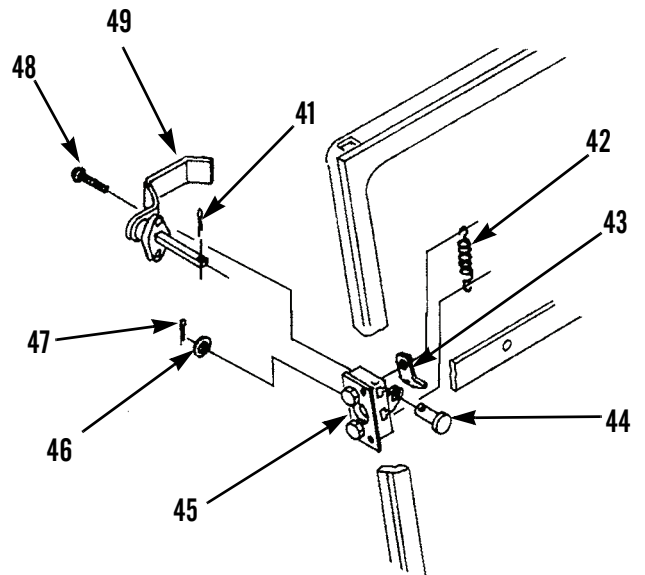
7. Remove cotter pin (47), washer (46), and pin (44). Discard cotter pin.
8. Remove cotter pin (41), two screws (48), and handle (49). Discard cotter pin.
9. Remove spring (42) from plate (43), and latch (45).



397-596


DISASSEMBLY - CONTINUED

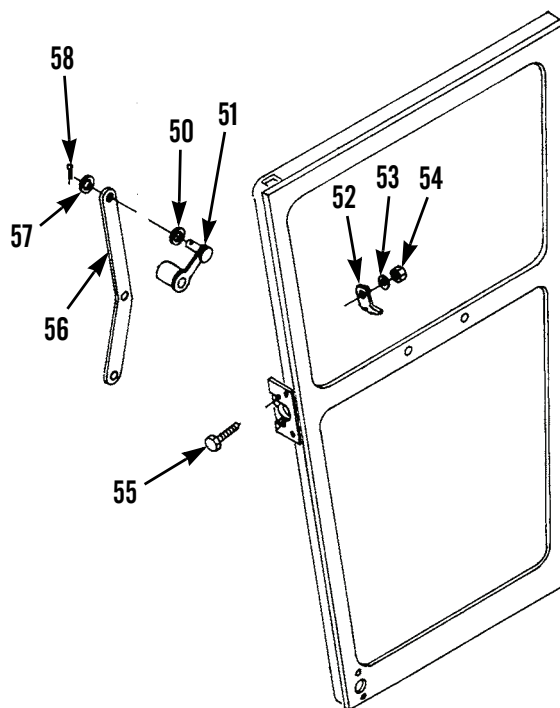10. Remove cotter pin (58), washer (57), lever (51), washer (50), and link (56). Discard cotter pin.
11. Remove nut (54), washer (53), plate (52), and bolt (55).



397-597

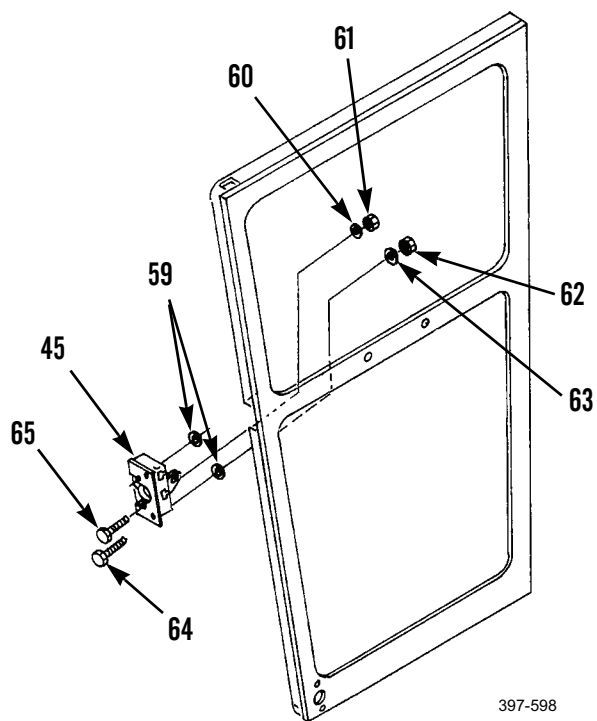
12. Remove nut (62), washer (63), and bolt (64).
13. Remove two nuts (61), washers (60), bolts (65), latch (45), and two washers (59).



397-598


DISASSEMBLY - CONTINUED

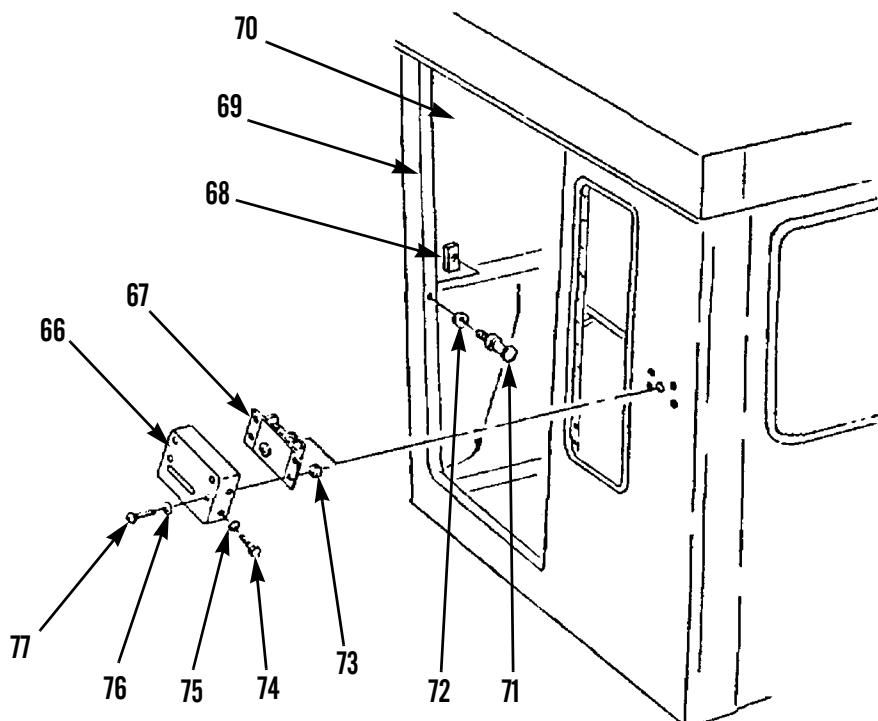14. Remove striker (71), shims (72), and plate (68) from door post (69) in operator compartment (70).
15. Remove four screws (74) and washers (75) from bracket (66).
16. Remove four nuts (73), screws (77), lockwashers (76), bracket (66), and latch (67). Discard lockwashers.



397-599

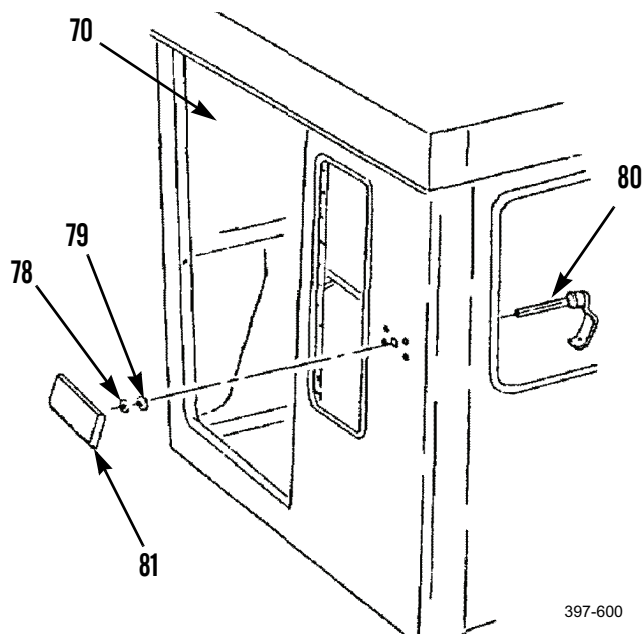
17. Remove strip (81) and discard if damaged.
18. Remove push-on nut (78) and washer (79).
19. Remove handle (80) from inside operator compartment (70).



397-600

DISASSEMBLY - CONTINUED

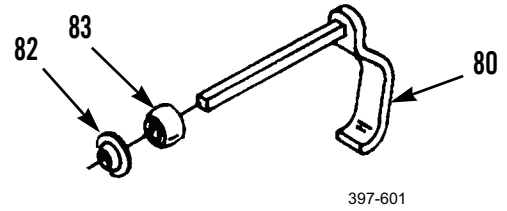20. Remove retainer (82) and knob (83) from handle (80).


**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY**NOTE**


This procedure covers assembly of the left door. Follow these instructions for the right door.

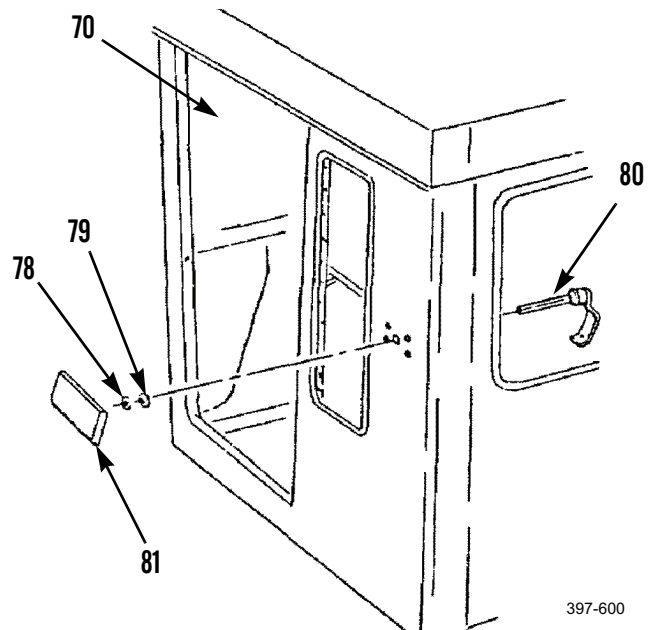1. Install knob (83) and retainer (82) on handle (80).
2. Install handle (80) in rear of operator compartment (70).
3. Install washer (79) and push-on nut (78).
4. Apply thin coat of adhesive to new strip (81) and install on cab.



ASSEMBLY - CONTINUED

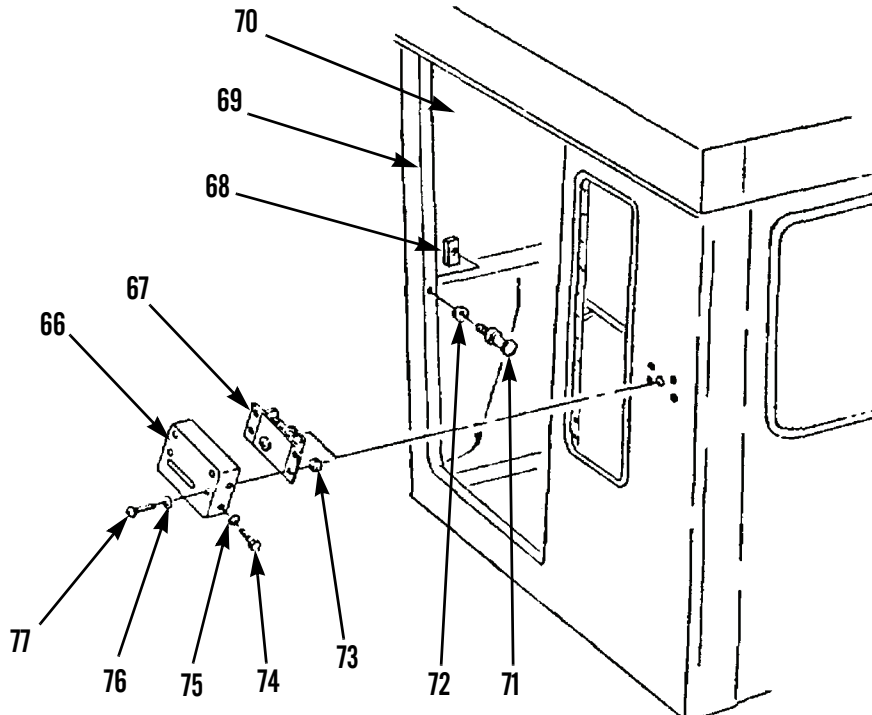
5. Install latch (67), bracket (66), four new lockwashers (76), screws (77), and nuts (73).
6. Install four washers (75) and screws (74) on bracket (66).
7. Install plate (68), shims (72), and striker (71) on door post (69) of operator compartment (70).




397-599

ASSEMBLY - CONTINUED

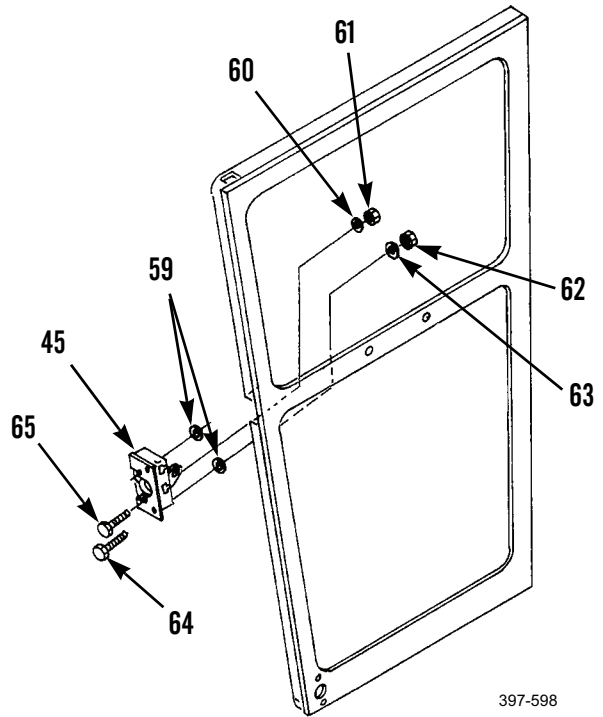8. Install two washers (59), latch (45), two bolts (65), washers (60), and nuts (61). Lubricate all moving parts of latch.
9. Install bolt (64), washer (63), and nut (62).




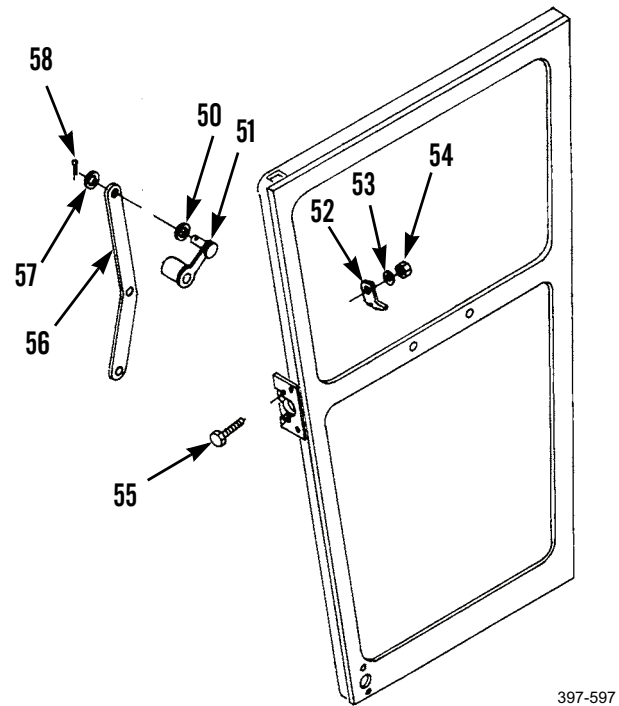10. Install bolt (55), plate (52), washer (53), and nut (54).
11. Install link (56), washer (50), lever (51), washer (57), and new cotter pin (58).




ASSEMBLY - CONTINUED

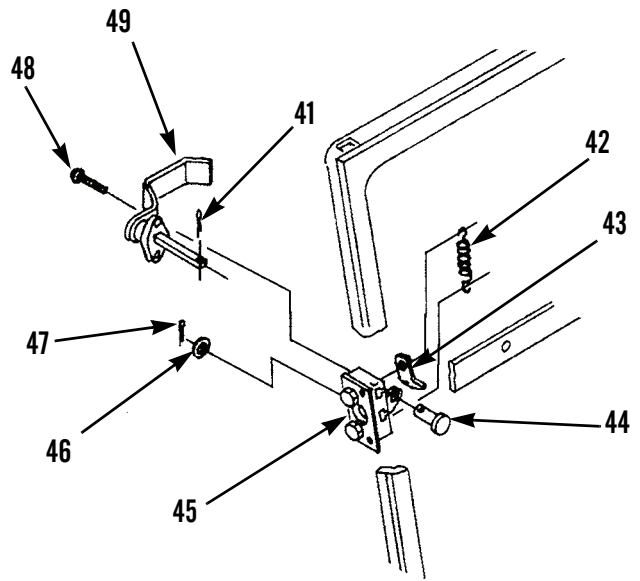12. Install spring (42) on plate (43) and latch (45).
13. Install handle (49), two screws (48) and new cotter pin (41).
14. Install pin (44), washer (46), and new cotter pin (47).




397-596

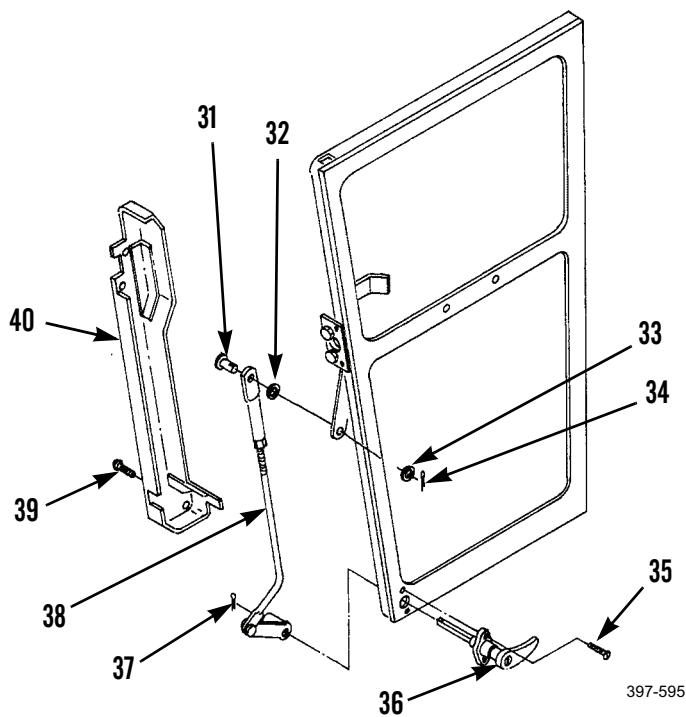15. Install link assembly (38), washer (32), pin (31), washer (33), and new cotter pin (34). Ensure link assembly length (A) is adjusted to 21.65 ± 0.06 in. ($55 \text{ cm} \pm 1.5 \text{ mm}$).
16. Install handle (36), two screws (35), and new cotter pin (37).
17. Install cover (40) and three screws (39). Tighten three screws to 79 lb-in. (9 Nm).



397-595

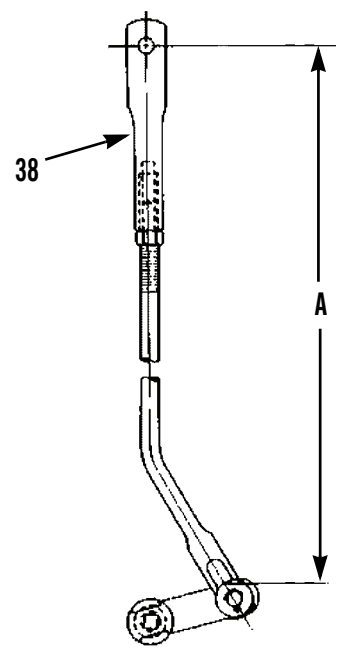

397-2158

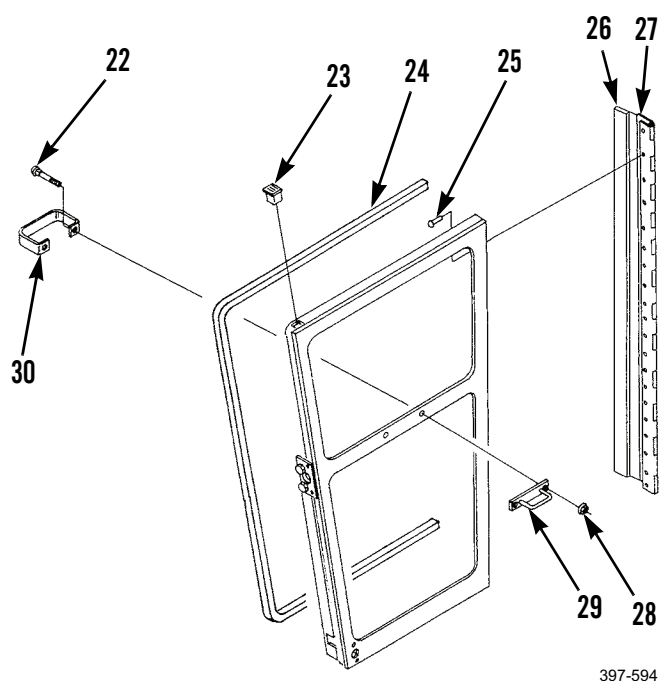
ASSEMBLY - CONTINUED

18. Install handle (30), two bolts (22), handle (29) and two nuts (28).
19. Install plug (23).
20. Install new seals (26 and 24) as follows:
 - a. Cut to size from bulk seal.
 - b. Make sure temperature of adhesive is above 60°F (16°C) and that adhesive is mixed thoroughly.
 - c. Put 0.01 in. (0.25 mm) thickness of adhesive on surface of seal and door that will make contact. See (B) on illustration below.
 - d. Put seals in position on door.


NOTE

Put pressure on seals to make sure all surfaces of adhesive are in contact. Seals can be moved for a short amount of time.

21. Install hinge (27) and 14 new rivets (25).



397-594

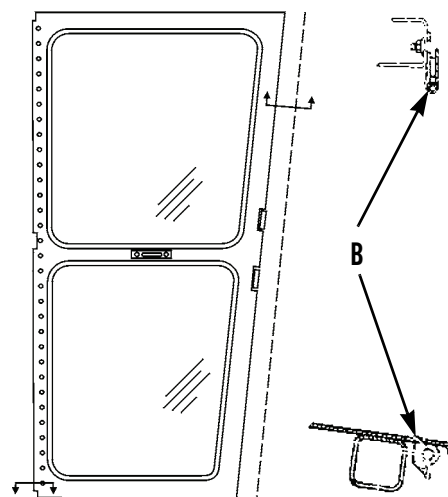

397-2159

INSTALLATION**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Door weighs 85 lb (39 kg).

1. Attach sling to left door (1).
2. Use sling to position door (1) on cab. Align with pencil marks made previously.

NOTE

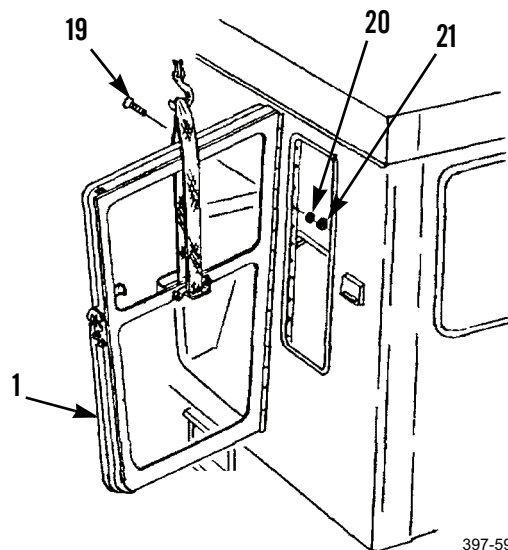
Do not tighten screws.

3. Install 14 screws (19), washers (20), and nuts (21).

NOTE

Space should be 0.16 in. (4 mm).

4. Close left door. Check space between door lip and cab all around door. Tighten nuts (21) when space is correct.
5. Remove sling.



397-593

6. Attach sling to right door (1).

INSTALLATION - CONTINUED

7. Use sling to install right door (1) on cab. Align with pencil marks made previously.

NOTE

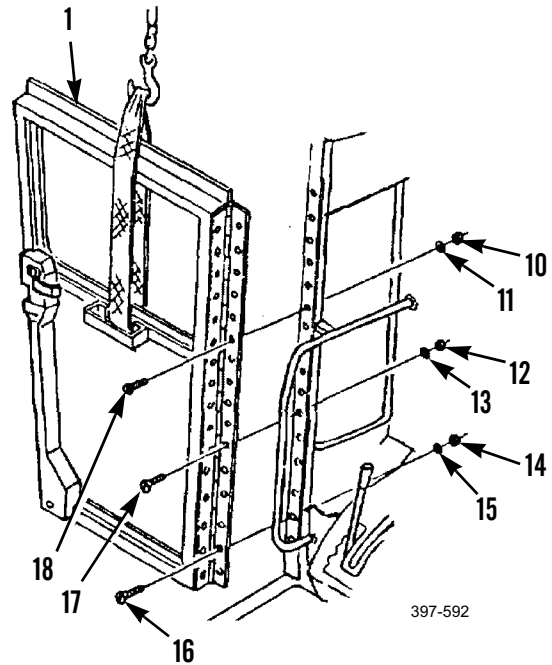
- Do not tighten nuts.
- Install screws as noted during removal.

8. Install nine screws (16), washers (15), and nuts (14).
9. Install three screws (18), washers (11), and nuts (10).
10. Install two screws (17), washers (13), and nuts (12).


NOTE

Space should be 0.16 in. (4 mm).

11. Close right door. Check space between door lip and cab all around door. Tighten nuts (10, 12, and 14) when space is correct.



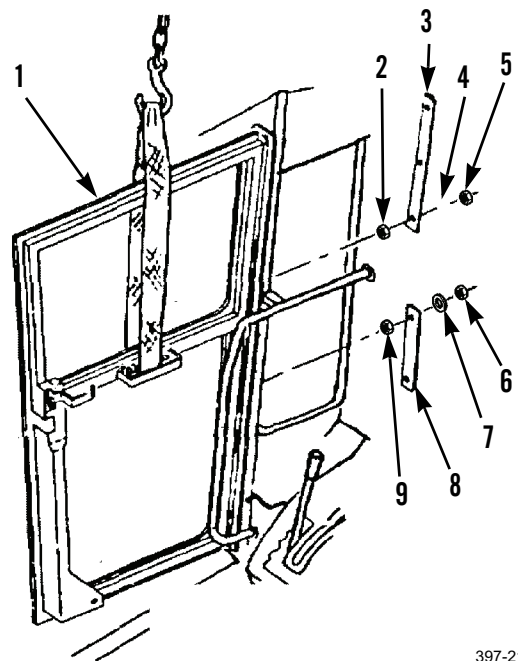12. Install two spacers (9), plate (8), two washers (7), and nuts (6).
13. Install three spacers (2), plate (3), three washers (4), and nuts (5).
14. Remove sling.




ADJUSTMENT

1. Close left and right doors.

NOTE

Striker must guide door up and down.

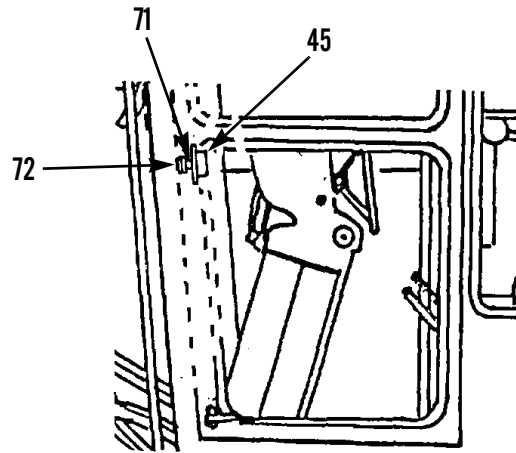2. Inspect striker (71) to see if striker is centered in latch (45).
3. Adjust, if necessary, by removing or installing shims (72).



397-602

4. Install cab windows if removed (WP 0187 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Washer, spring-tension (16)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

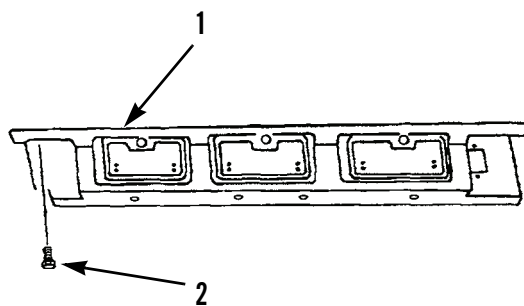
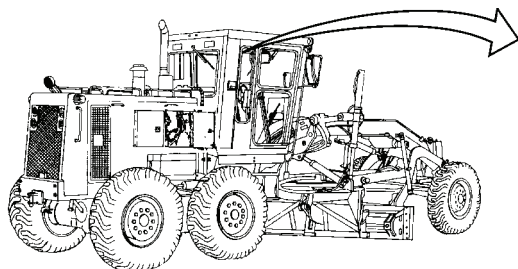
Dome light switch removed (WP 0099 00)

Defroster fan removed (WP 0210 00)

Inside rearview mirror removed (WP 0213 00)

REMOVAL

Remove 14 screws (2) and cab storage compartment assembly (1).



397-603

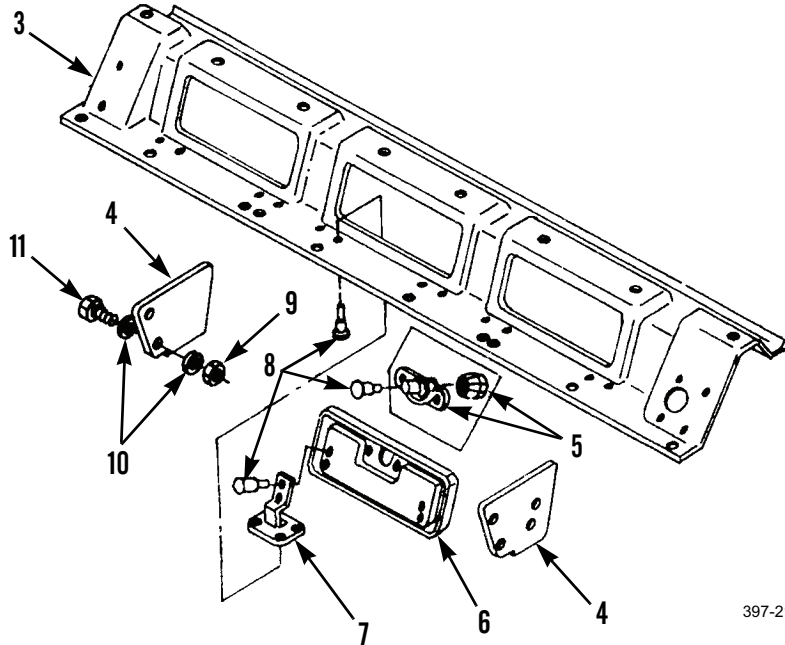
DISASSEMBLY

1. Remove 8 nuts (9), 16 spring-tension washers (10), 8 bolts (11), and 4 plates (4). Discard spring-tension washers.

NOTE

Remove rivets only if necessary.

2. Remove six rivets (8) and three latches (5) from three doors (6). Discard rivets if removed.
3. Remove 24 rivets (8), 6 hinges (7), and 3 doors (6) from cab panel (3). Discard rivets.



397-2160

CLEANING AND INSPECTION

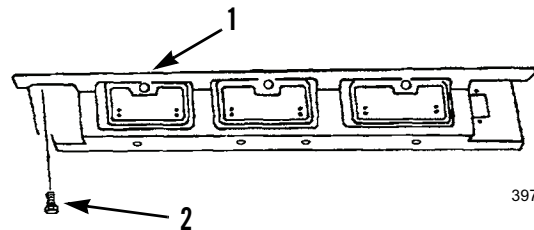
Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Install 3 doors (6), 6 hinges (7), and 24 new rivets (8) to cab panel (3).
2. Install three latches (5) and six new rivets (8) (if removed) on three doors (6).
3. Install 4 plates (4), 16 new spring-tension washers (10), 8 bolts (11), and nuts (9).

INSTALLATION

1. Install cab storage compartment assembly (1) and 14 screws (2).



397-603

2. Install rearview mirror (WP 0213 00).
3. Install defroster fan (WP 0210 00).
4. Install dome light switch (WP 0099 00).

END OF WORK PACKAGE

**CAB SOUND SUPPRESSION PANELS (LOWER-FRONT AND REAR)
REPLACEMENT (CCE MACHINE)**

0190 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

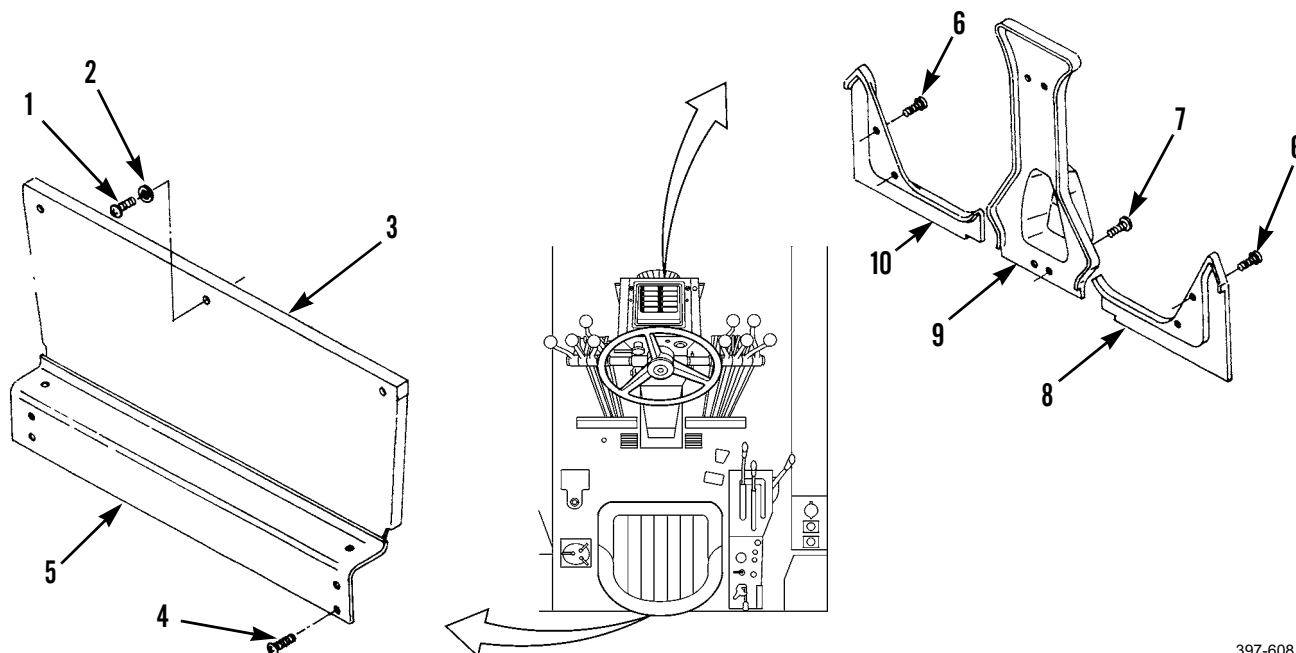
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

1. Remove four screws (6) and panels (8 and 10).
2. Remove four screws (7) and panel (9).
3. Remove three screws (1), washers (2), and insulation (3).
4. Remove six screws (4) and cover (5).



397-608

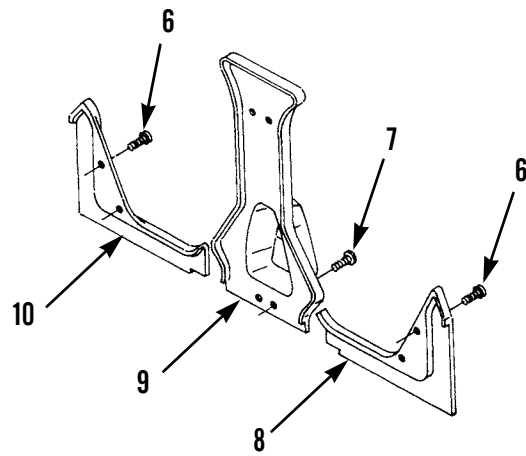
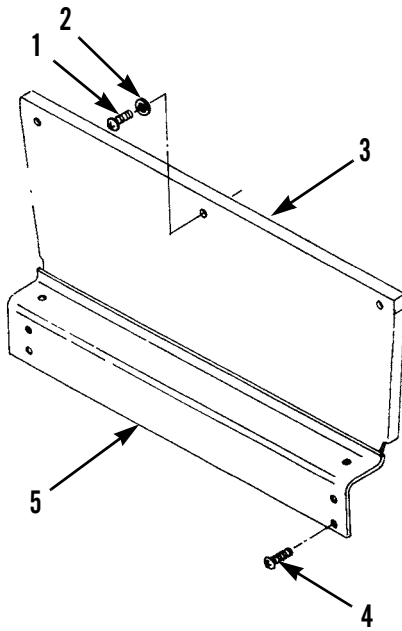
CAB SOUND SUPPRESSION PANELS (LOWER-FRONT AND REAR) REPLACEMENT (CCE MACHINE) -

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install cover (5) and six screws (4).
2. Install insulation (3), three washers (2), and screws (1).
3. Install panel (9) and four screws (7).
4. Install panels (10 and 8) and four screws (6).



397-608

END OF WORK PACKAGE

CAB SOUND SUPPRESSION PANEL (CEILING) REPLACEMENT (CCE MACHINE)

0191 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

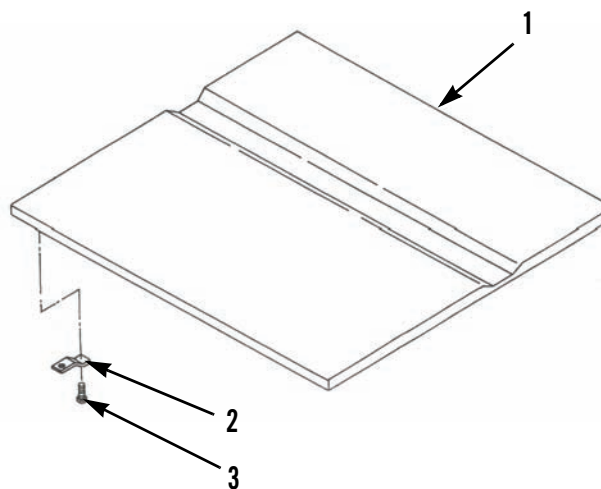
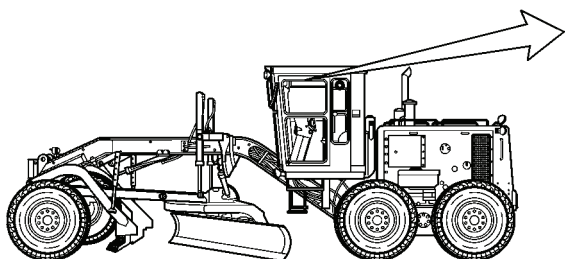
Dome light removed (WP 0111 00)

Defroster fan removed (WP 0210 00)

Inside rearview mirror removed (WP 0213 00)

REMOVAL

1. Remove four screws (3) and brackets (2).
2. Remove insulation (1) by sliding forward out of cab ceiling plates.




397-610

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

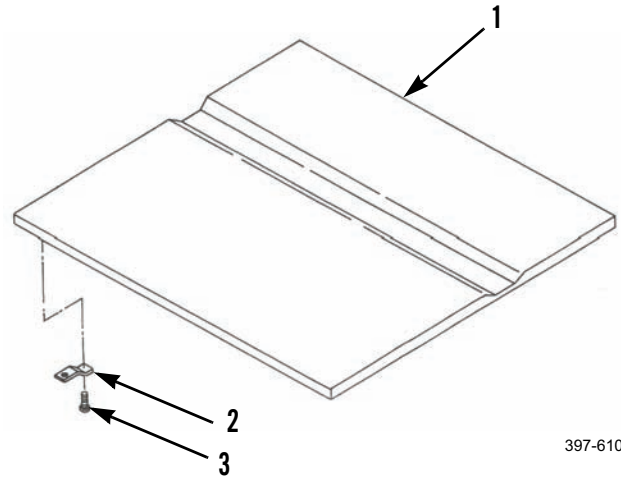1. Install insulation (1) by sliding rearward into cab ceiling plates.
2. Install four brackets (2) and screws (3).



397-610

3. Install inside rearview mirror (WP 0213 00).
4. Install defroster fan (WP 0210 00).
5. Install dome light (WP 0111 00).

END OF WORK PACKAGE

CAB SOUND SUPPRESSION PANEL (REAR) REPLACEMENT

0192 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Washer, spring-tension (4)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Equipment Conditions - Continued

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

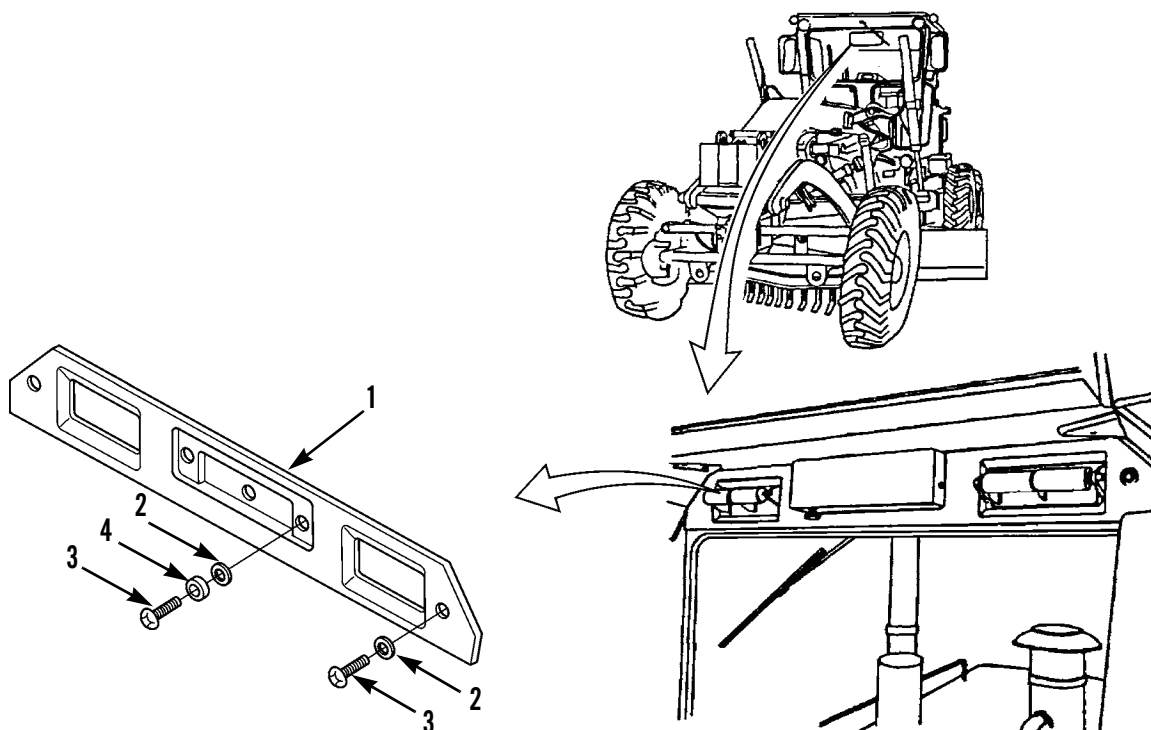
Dome light removed (WP 0111 00)

Rear wiper and wiper motor removed (WP 0208 00)

Defroster fan removed (WP 0210 00)

REMOVAL

Remove four screws (3), two washers (4), four spring-tension washers (2), and panel (1). Discard spring-tension washers.



397-611

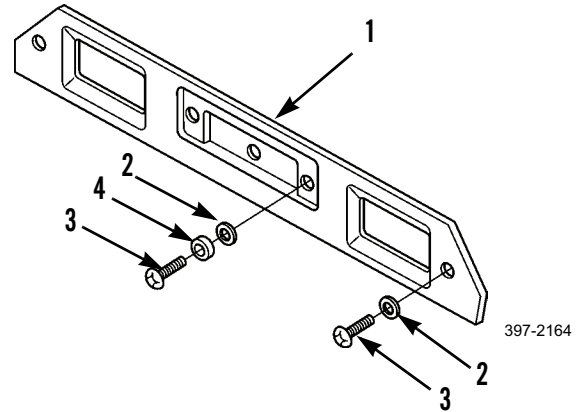
CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

Base of panel is longer than top of panel.

1. Install panel (1), four new spring-tension washers (2), two washers (4) and four screws (3).



2. Install defroster fan (WP 0210 00).
3. Install rear wiper and wiper motor (WP 0208 00).
4. Install dome light (WP 0111 00).

END OF WORK PACKAGE

OPERATOR'S PANEL CONSOLE REPLACEMENT

0193 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Pin, cotter

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Seat removed (WP 0200 00)

Operator's console cover removed (WP 0082 00)

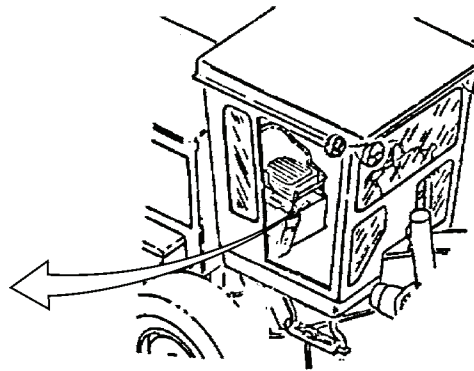
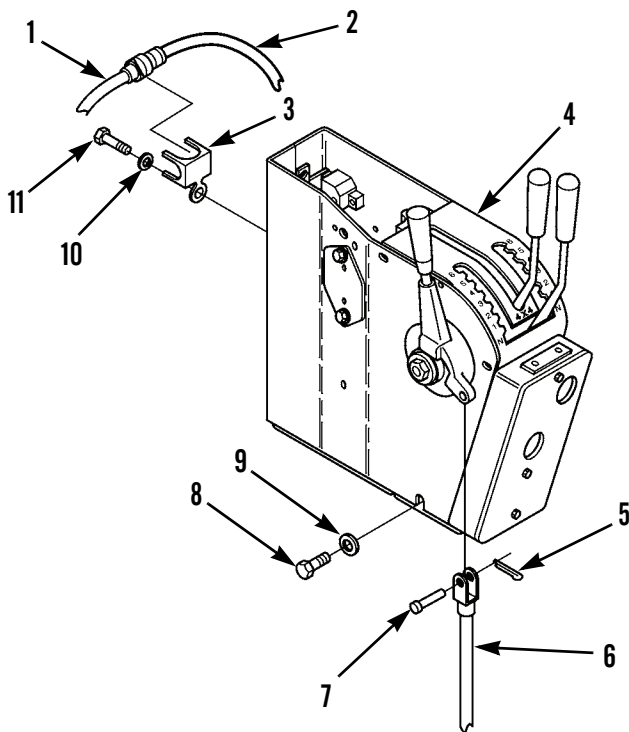
REMOVAL

1. Remove cotter pin (5), clevis pin (7), and disconnect linkage rod (6) from right side of operator panel console (4). Discard cotter pin. Lay linkage rod to one side.
2. Remove four bolts (8) and washers (9).
3. Separate wiring harness (2) from bracket (3) at rear of operator panel console (4).

NOTE

Tag wiring harnesses before disconnecting to aid in installation.


4. Disconnect wiring harness (2) from wiring harness (1).
5. Remove four bolts (11), washers (10), and bracket (3).



397-612

REMOVAL - CONTINUED

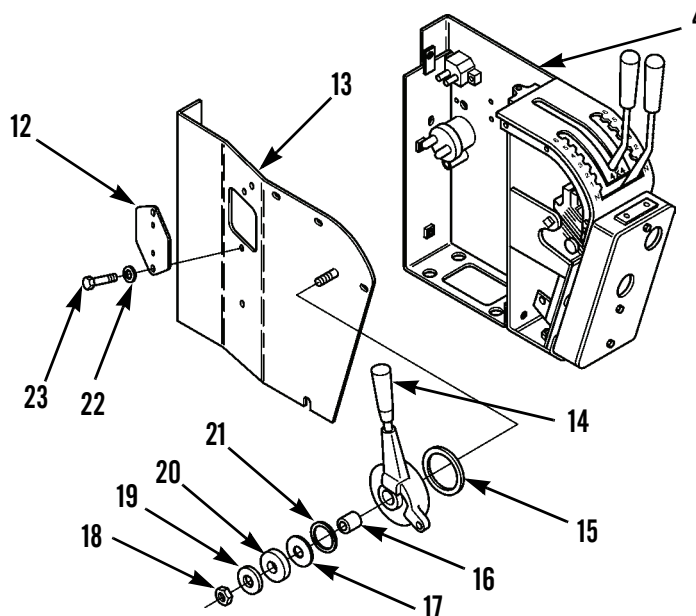6. Remove panel (13) from right side of operator panel console (4).
7. Remove two bolts (23), washers (22), and plate (12).
8. Remove nut (18), washer (19), seat (20), spring (17), washer (21), lever (14), bearing (16), and disc (15).




397-613

9. Remove four bolts (31) and washers (32) from left side of operator panel console (4).
10. Remove nut (30), washer (29), and plate (28) from battery disconnect switch (33).
11. Remove two nuts (34) and screws (27) from main circuit breaker (35).
12. Disconnect wiring harness (24) from wiring harness (25).

NOTE

Separate by pushing grommet through opening along with wiring harnesses.

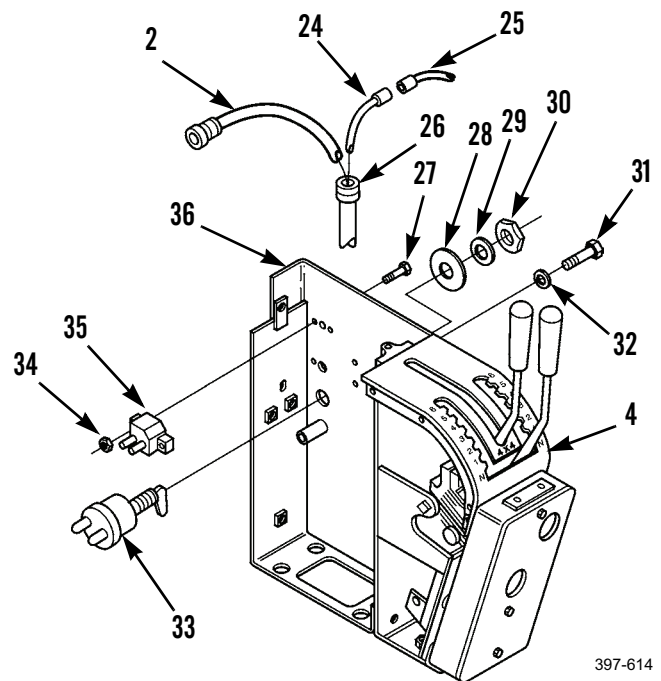
13. Separate wiring harnesses (2 and 24) and grommet (26) from panel (36).



397-614

REMOVAL - CONTINUED

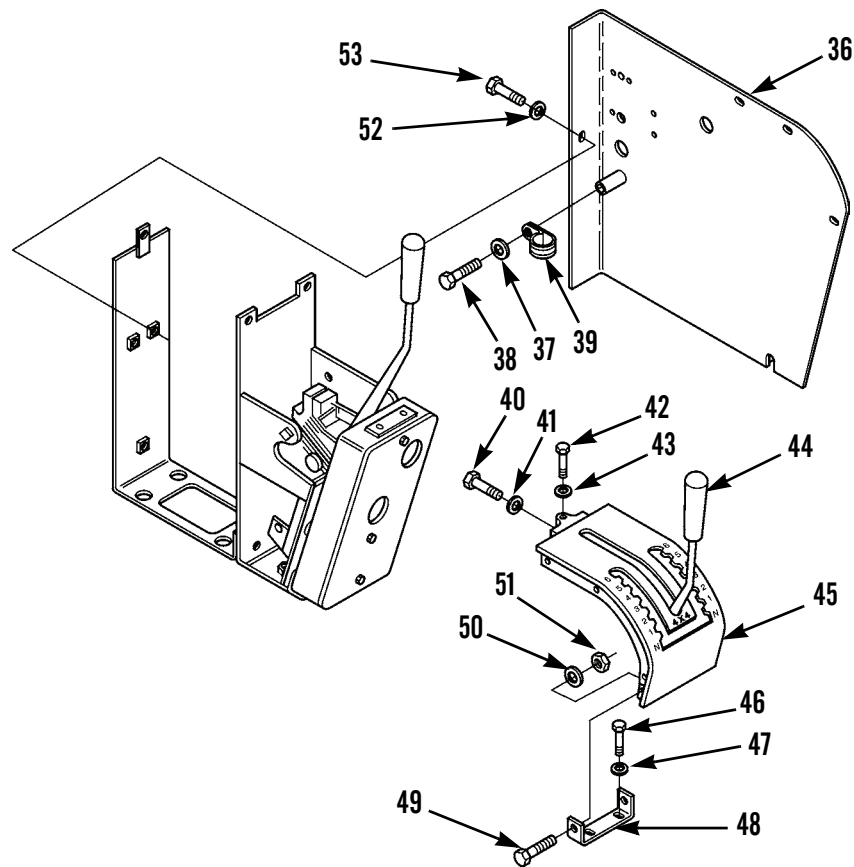14. Remove bolt (38), washer (37), and clip (39).
15. Remove two bolts (53), washers (52), and panel (36).
16. Remove two nuts (51), washers (50), and bolts (49).
17. Remove bolt (42) and washer (43).
18. Remove two bolts (40) and washers (41).
19. Turn handle (44) to the left and remove handle and gate (45).
20. Remove two bolts (46), washers (47), and bracket (48).



397-615

CLEANING AND INSPECTION

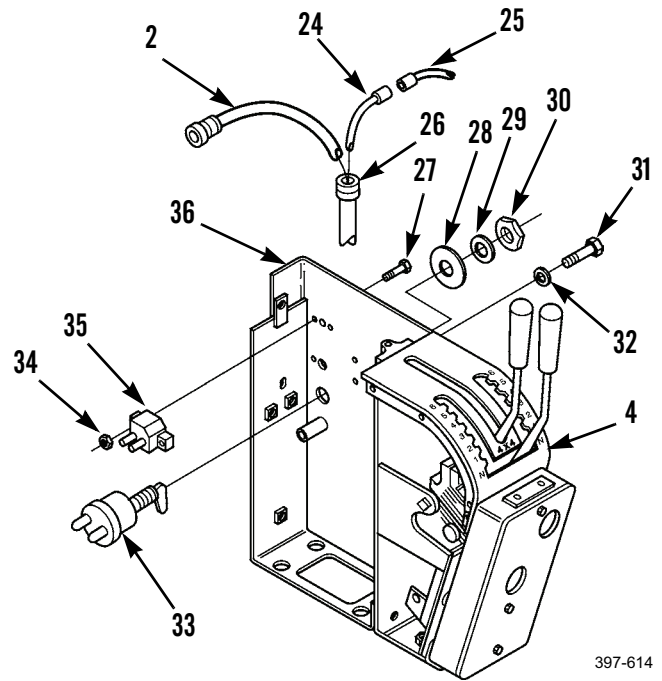
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install bracket (48), two washers (47), and bolts (46).
2. Install gate (45) and handle (44).
3. Install two washers (41) and bolts (40).
4. Install washer (43) and bolt (42).
5. Install two bolts (49), washers (50), and nuts (51).


INSTALLATION - CONTINUED

6. Install panel (36), two washers (52), and bolts (53).
7. Install clip (39), washer (37), and bolt (38).
8. Position grommet (26) and wiring harnesses (24 and 2) and push through opening in panel (36). Seat lips of grommet around edge of opening.
9. Connect wiring harness (25) to wiring harness (24).
10. Install main circuit breaker (35), two screws (27), and nuts (34).
11. Install battery disconnect switch (33), plate (28), washer (29), and nut (30).
12. Install four washers (32) and bolts (31) on left side of operator panel console (4).



397-614

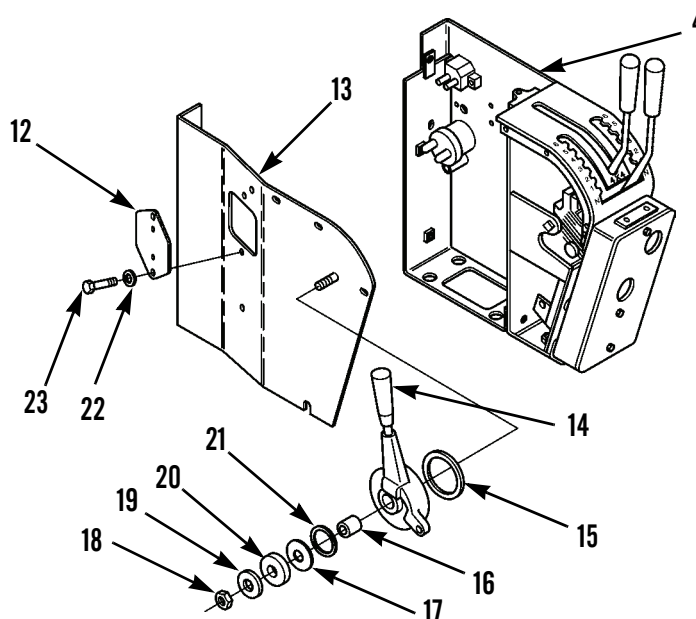
13. Install disc (15), bearing (16), lever (14), washer (21), spring (17), seat (20), washer (19), and nut (18) in panel (13).
14. Install plate (12), two washers (22), and bolts (23).
15. Position panel (13) on right side of operator panel console (4).



397-613

INSTALLATION - CONTINUED

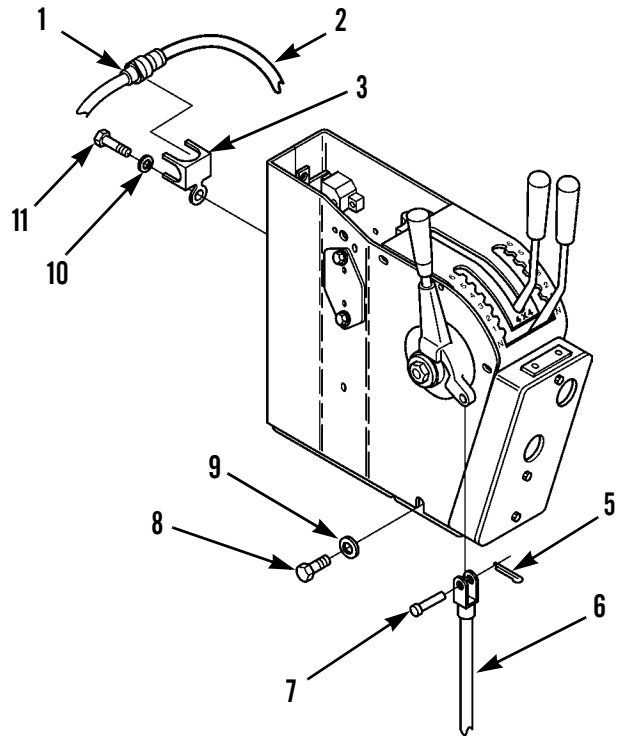16. Install bracket (3), four washers (10), and bolts (11).
17. Connect wiring harness (1) to wiring harness (2).
18. Install wiring harness (2) on bracket (3).
19. Install four washers (9) and bolts (8).
20. Install linkage rod (6), clevis pin (7), and new cotter pin (5).



397-2166

21. Install operator's console panel (WP 0082 00).
22. Install seat (WP 0200 00).
23. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

CAB INSULATION AND MOUNTING REPLACEMENT (CCE MACHINE)

0194 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

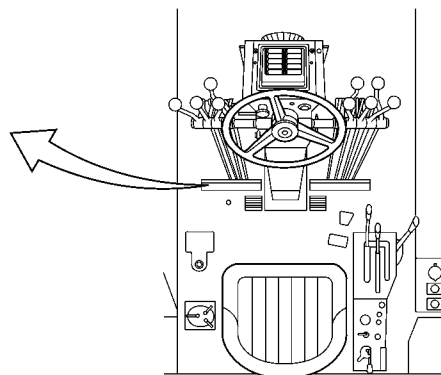
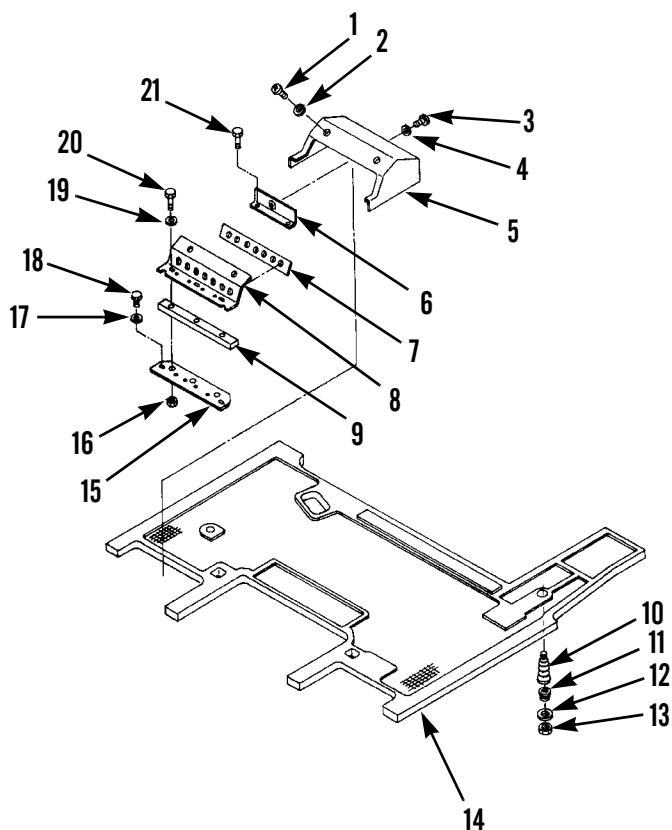
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL**NOTE**

Steps 1 through 4 cover replacement of the left cover. Follow these steps for the right cover.

1. Remove two screws (1), washers (2), three screws (3), washers (4), plastic molding (5), and seal (7).
2. Remove two screws (21) and bracket (6).
3. Remove three nuts (16), screws (20), washers (19), bracket (8), and seal (9).
4. Remove two bolts (18), washers (17), and metal molding (15).
5. Remove dust and moisture boot (10) by pulling out through top of floor mat (14).
6. Remove floor mat (14).
7. Remove nut (13), washer (12), and bushing (11) from floor of cab.



397-616

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install bushing (11), washer (12), and nut (13) in floor of cab.
2. Install floor mat (14).
3. Install dust and moisture boot (10) through top of floor mat (14).
4. Install metal molding (15), two washers (17), and bolts (18).
5. Install seal (9), bracket (8), three washers (19), screws (20), and nuts (16).
6. Install bracket (6) and two screws (21).
7. Install seal (7), plastic molding (5), three washers (4), screws (3), two washers (2), and screws (1).

END OF WORK PACKAGE

GAUGE PANEL VANDALISM GUARD REPLACEMENT

0195 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Rivet (17)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

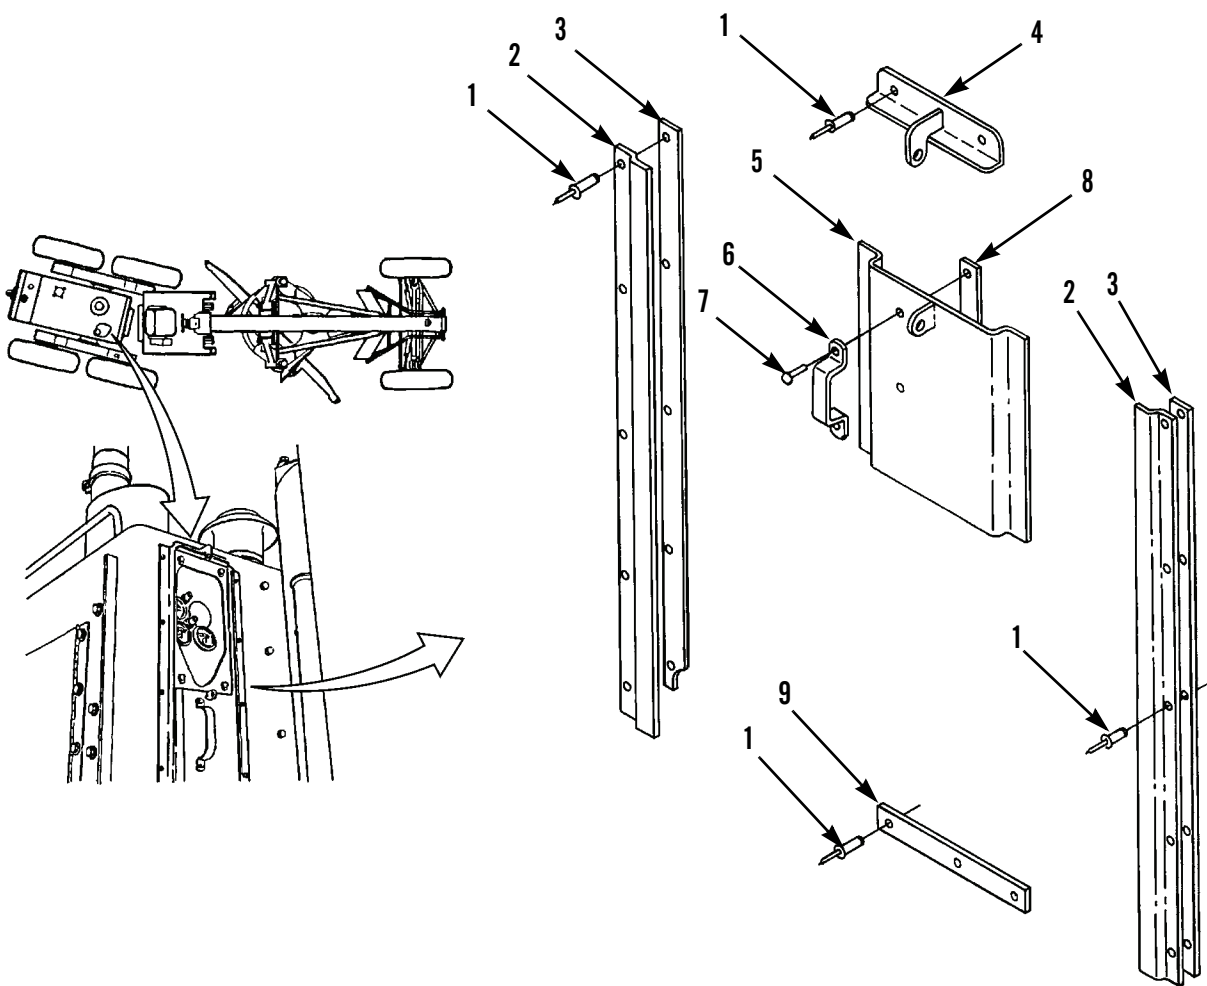
Machine articulated left (TM 5-3805-261-10)

REMOVAL

NOTE

All machines are not equipped with a gauge panel vandalism guard.

1. Remove two rivets (1) and bracket (4).
2. Remove door (5).
3. Remove two rivets (7), handle (6), and plate (8) from door (5).
4. Remove 10 rivets (1), 2 metal moldings (2), and metal strips (3).
5. Remove three rivets (1) and metal strip (9).



397-618

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install metal strip (9) and three new rivets (1).
2. Install 2 metal strips (3), metal moldings (2), and 10 new rivets (1).
3. Install plate (8), handle (6), and two new rivets (7) on door (5).
4. Install door (5).
5. Install bracket (4) and two new rivets (1).

END OF WORK PACKAGE

STEERING CONSOLE HOOD AND PANEL COVER REPLACEMENT

0196 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Locknut

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Equipment Conditions - Continued

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Articulation indicator removed (not necessary if only removing hood) (WP 0255 00)

Monitor system fault light removed (WP 0072 00)

Turn signal switch removed (WP 0073 00)

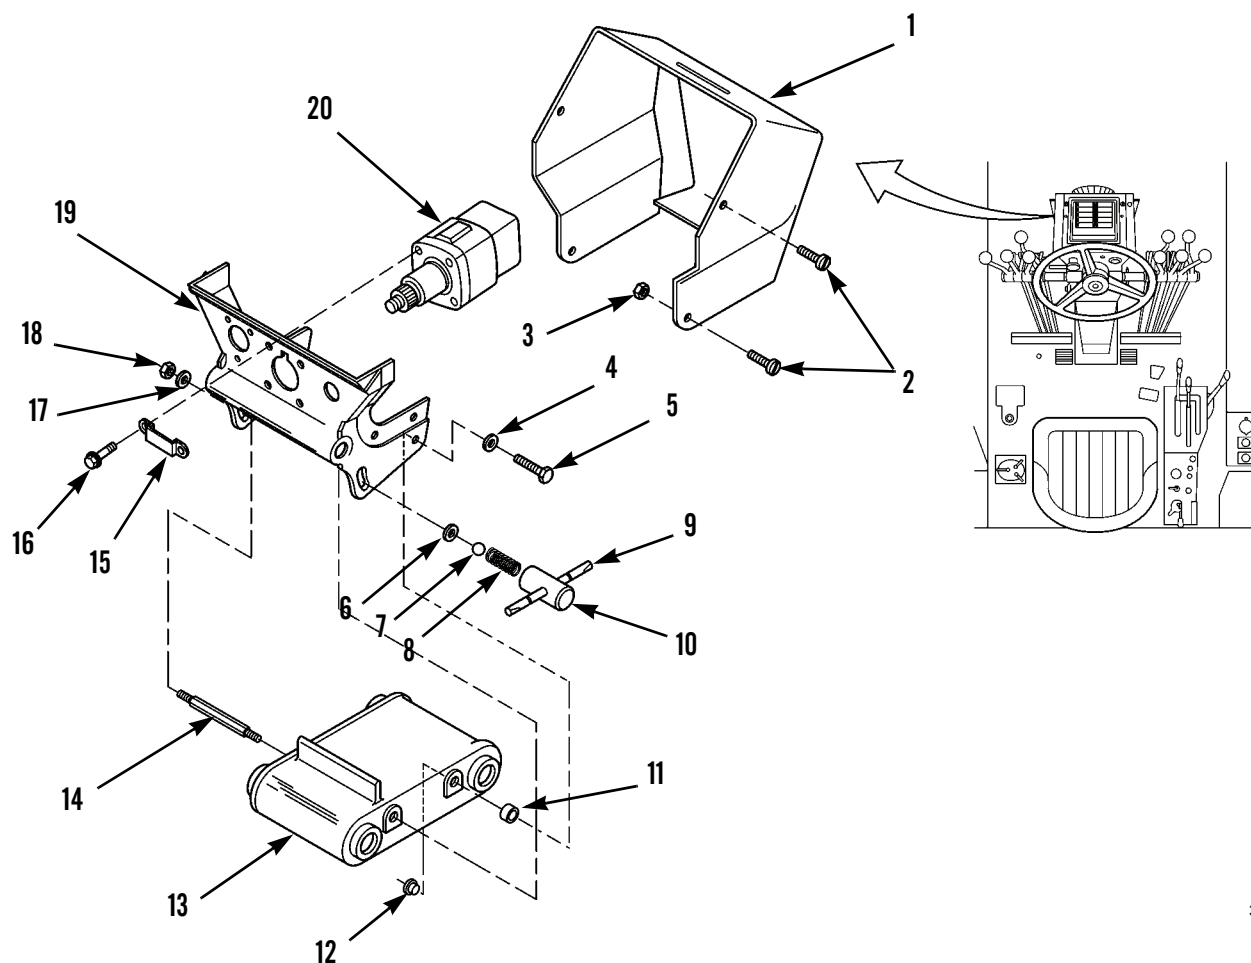
EMS cover removed (WP 0075 00)

Steering wheel/horn switch removed (WP 0120 00)

Hydraulic control levers removed (WP 0219 00)

REMOVAL

1. Remove two nuts (3), six screws (2), and hood (1).
2. Remove four bolts (16) and bracket (15).
3. Position pump assembly (20) away from housing (19).
4. Remove two nuts (12), bolts (5), washers (4), and bearings (11).
5. Remove locknut (18), washer (17), rod (9), boss (10), spring (8), bearing ball (7), and washer (6). Discard locknut.
6. Remove shaft (14) and housing (19) from cover (13).



397-619

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install housing (19) and shaft (14) in cover (13).
2. Install washer (6), bearing ball (7), spring (8), boss (10), rod (9), washer (17), and new locknut (18).
3. Install two bearings (11), washers (4), bolts (5), and nuts (12).
4. Position pump assembly (20) on housing (19).
5. Install bracket (15) and four bolts (16).
6. Install hood (1), six screws (2), and two nuts (3).
7. Install hydraulic control levers (WP 0219 00).
8. Install steering wheel/horn switch (WP 0120 00).
9. Install EMS cover (WP 0075 00).
10. Install turn signal switch (WP 0073 00).
11. Install monitor system fault light (WP 0072 00).
12. Install articulation indicator, if removed (WP 0255 00).

END OF WORK PACKAGE

STEERING CONSOLE SUPPORT REPLACEMENT (MODELS 130GS AND 130GNS)

0197 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Bolt, self-locking (4)

Locknuts (2)

Pin (6)

Screw, tapping (14)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

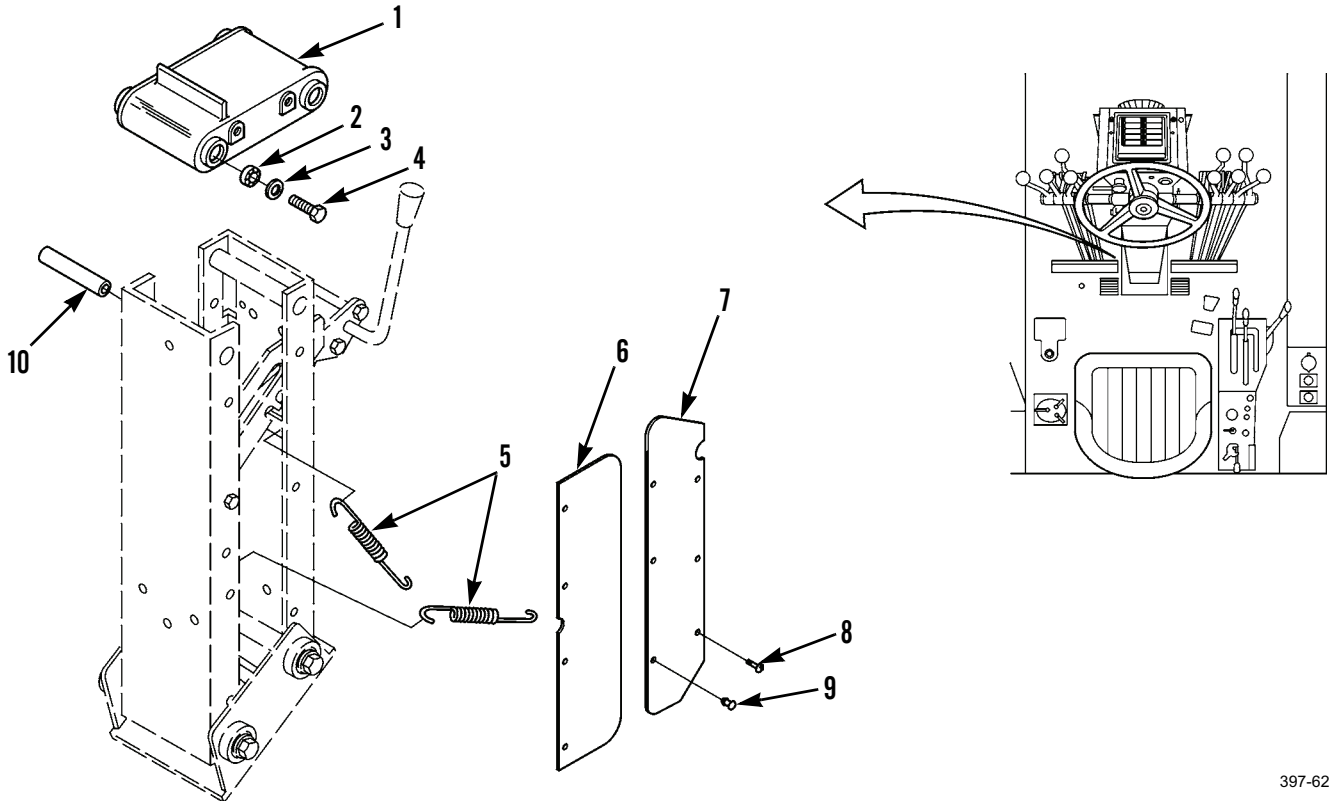
Battery disconnect switch in OFF position (TM 5-3805-261-10)

Steering console hood and panel cover removed (WP 0196 00)

STEERING CONSOLE SUPPORT REPLACEMENT (MODELS 130GS AND 130GNS) - CONTINUED 0197 00

REMOVAL

1. Remove 14 tapping screws (8) from both sides of steering console support. Discard tapping screws.
2. Remove two plates (6 and 7).
3. Remove six pins (9) from two plates (6 and 7). Discard pins.
4. Remove two springs (5).
5. Remove four screws (4), washers (3), and bearings (2).
6. Remove cover (1) and two shafts (10).




397-620

STEERING CONSOLE SUPPORT REPLACEMENT (MODELS 130GS AND 130GNS) - CONTINUED 0197 00


REMOVAL - CONTINUED

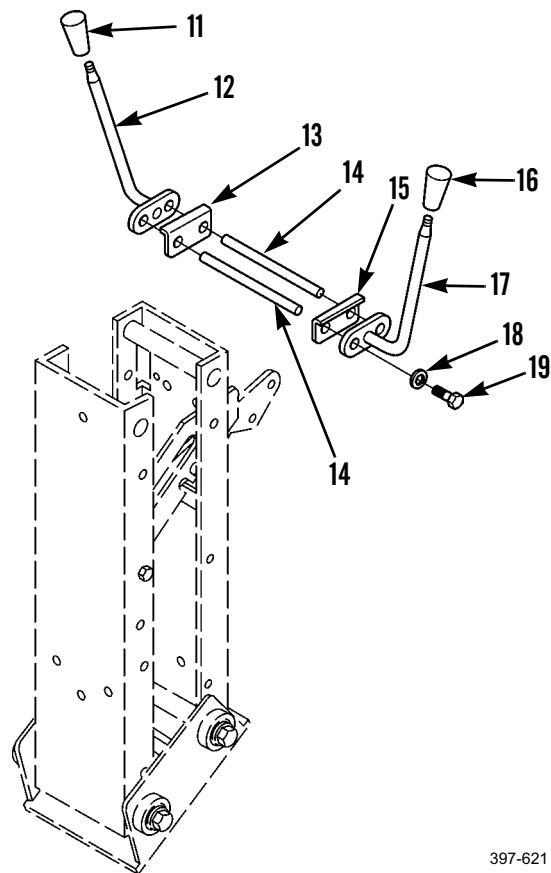7. Remove knobs (11 and 16).
8. Remove four screws (19), washers (18), control rods (12 and 17), brackets (13 and 15), and two shafts (14).



397-621

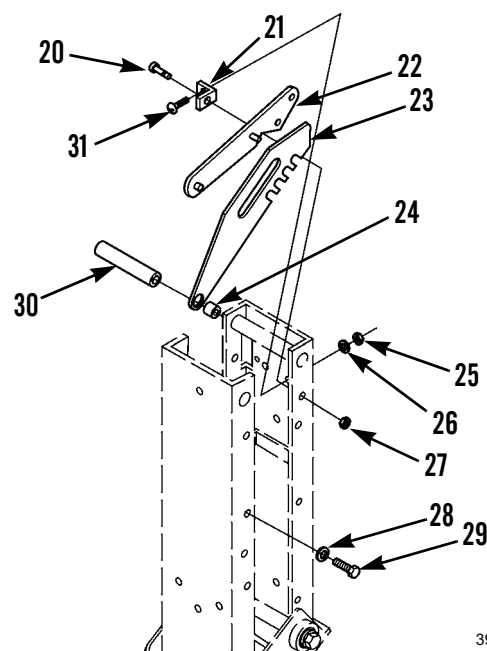9. Remove two screws (20) and nuts (27).
10. Remove two locknuts (26), washers (25), bolts (31), angles (21), and brackets (22). Discard locknuts.
11. Remove two bolts (29), washers (28), spacers (24), brackets (23), and shaft (30).




397-622

STEERING CONSOLE SUPPORT REPLACEMENT (MODELS 130GS AND 130GNS) - CONTINUED 0197 00


REMOVAL - CONTINUED

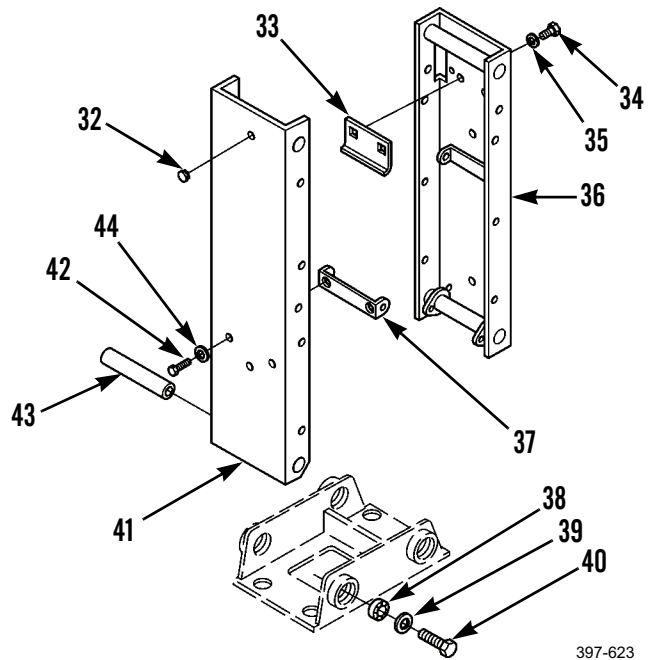12. Remove two bolts (34), washers (35), and angle (33).
13. Remove two bolts (42), washers (44), and bracket (37).
14. Remove two plugs (32).
15. Remove four screws (40), washers (39), bearings (38), two shafts (43), and channels (36 and 41).



397-623

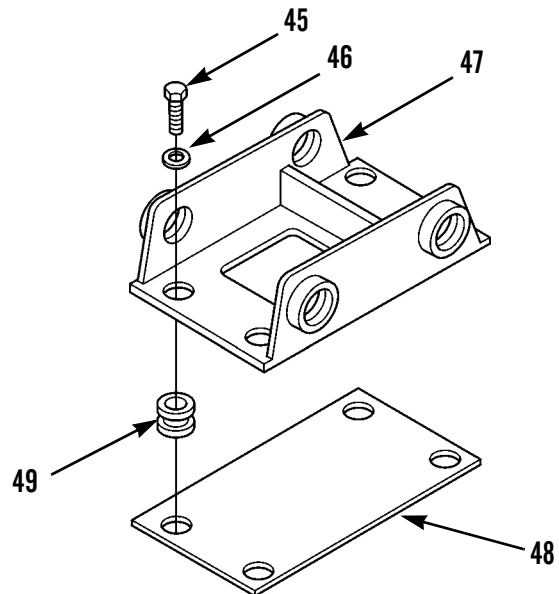16. Remove four self-locking bolts (45), washers (46), grommets (49), console base (47), and pad (48). Discard self-locking bolts.



397-624

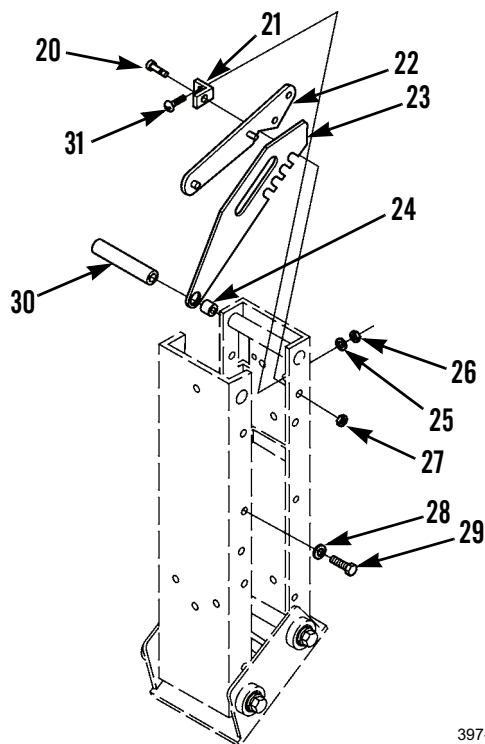
CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

STEERING CONSOLE SUPPORT REPLACEMENT (MODELS 130GS AND 130GNS) - CONTINUED 0197 00

INSTALLATION

1. Install pad (48), four grommets (49), console base (47), four washers (47), and new self-locking bolts (45) in steering console support.
2. Install channels (41 and 36), two shafts (43), four bearings (38), washers (39), and screws (40).
3. Install two plugs (39).
4. Install bracket (37), two washers (44), and bolts (42).
5. Install angle (33), two washers (35), and bolts (34).
6. Install shaft (30), two brackets (23), spacers (24), washers (28), and bolts (29).
7. Install two brackets (22), angles (21), bolts (31), washers (25) and new locknuts (26).
8. Install two nuts (27) and screws (20).




397-622

STEERING CONSOLE SUPPORT REPLACEMENT (MODELS 130GS AND 130GNS) - CONTINUED 0197 00

INSTALLATION - CONTINUED

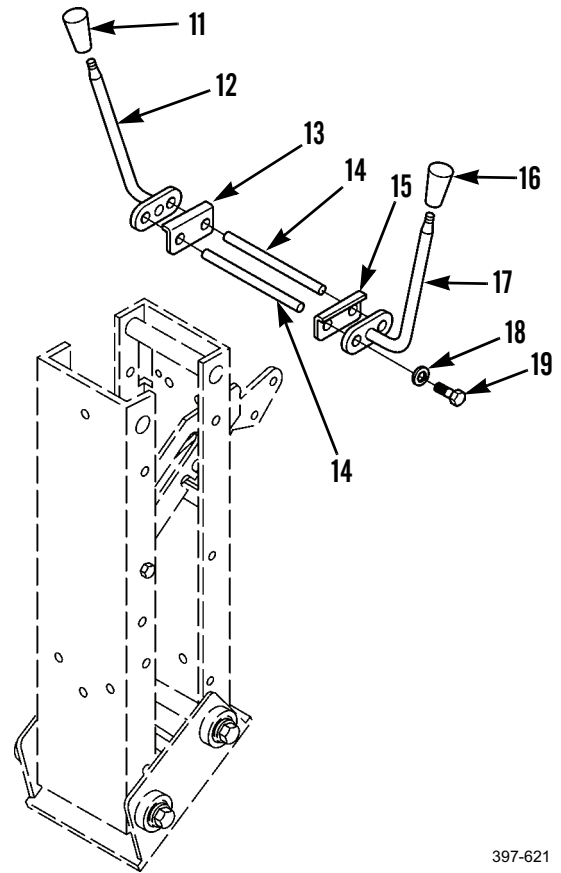
9. Install two shafts (14), brackets (15 and 13), control rods (17 and 12), four washers (18), and screws (19).
10. Install knobs (16 and 11).



397-621

INSTALLATION - CONTINUED

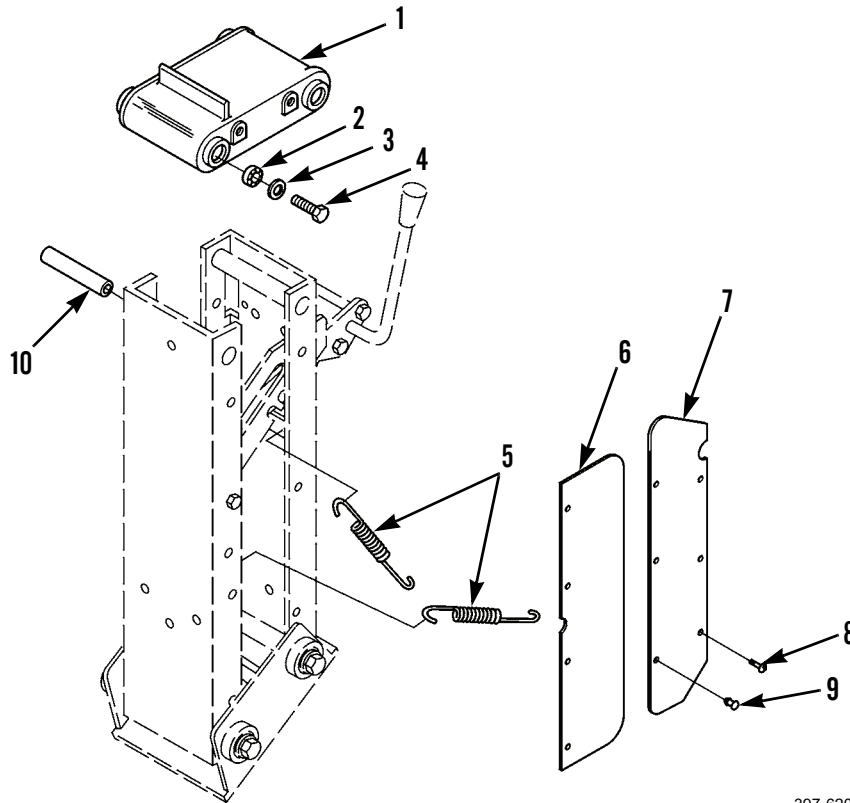11. Install two shafts (10) and cover (1).
12. Install four bearings (2), washers (3), and screws (4).
13. Install two springs (5).
14. Install six new pins (9) on two plates (7 and 6).
15. Install two plates (7 and 6).
16. Install 14 new tapping screws (8).



397-620

17. Install steering console hood and panel cover (WP 0196 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, field maintenance (Item 74, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Bolt, self-locking (4)

Locknuts (6)

Pin, cotter

Screw, tapping (14)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

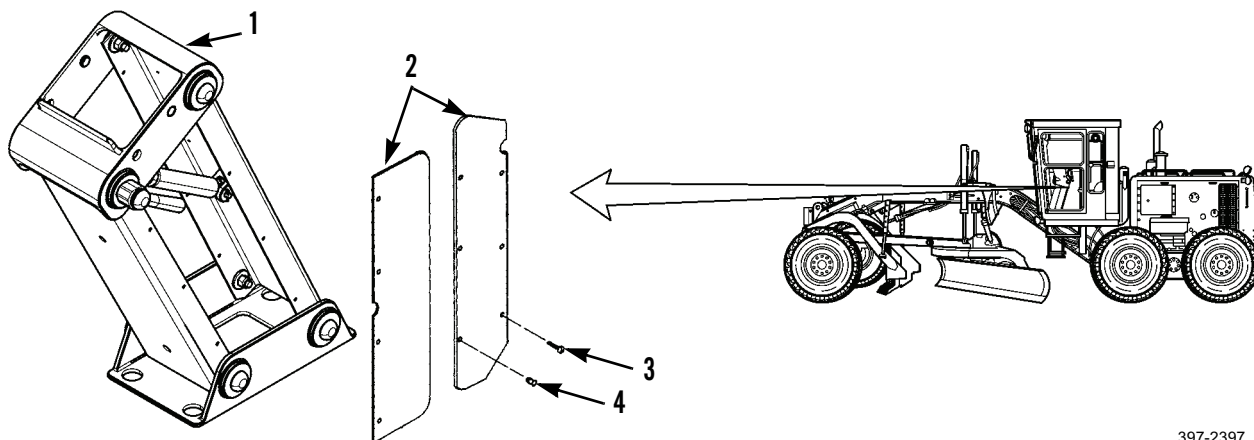
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Steering console hood and panel cover removed (WP 0196 00)

REMOVAL

1. Remove seven tapping screws (3) from steering console support (1). Discard tapping screws.
2. Remove two plates (2).
3. Remove three pins (4).
4. Repeat for other side of steering console support (1).




397-2397

**STEERING CONSOLE SUPPORT REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**


0198 00

REMOVAL - CONTINUED

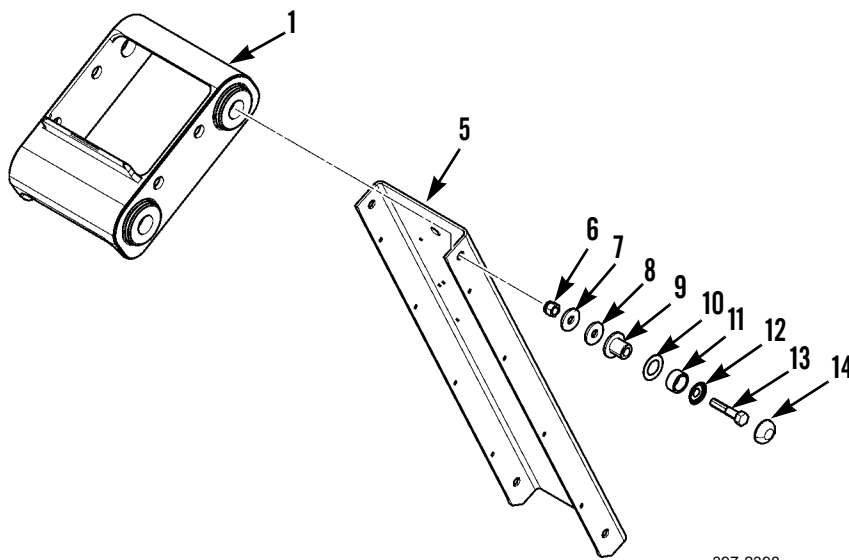- Remove protective cap (14), bolt (13), shouldered washer (12), spacer (11), retainer (10), bearing sleeve (9), washers (7 and 8), and nut (6) and channel assembly (5) from steering console support (1).



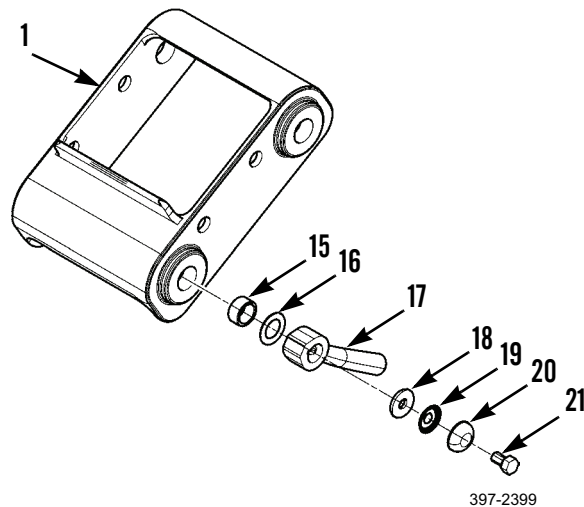- Remove screw (21), protective cap (20), shouldered washer (19), washer (18), lever (17), retainer (16), and bearing (15).




**STEERING CONSOLE SUPPORT REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0198 00

REMOVAL - CONTINUED

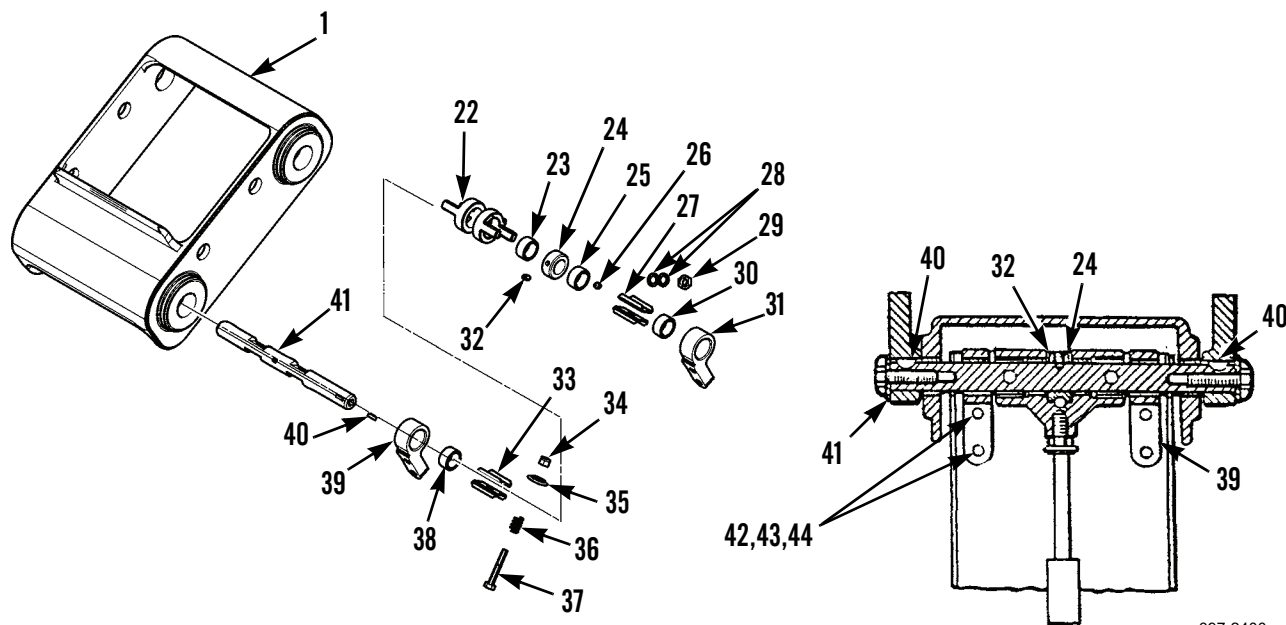7. Remove two screws (37), washers (35), springs (36), locknuts (34), and two plates (33). Discard locknuts.
8. Remove eyebolt (39) and bearing (38) as an assembly.
9. Remove connector (22).
10. Back off setscrew (32) from control cam (24) and remove two woodruff keys (40) and shaft (41).
11. Remove four bolts (42), washers (43), and nuts (44).
12. Remove eyebolt (31) and bearing (30) as an assembly.
13. Remove nut (29), two washers (28), ball bearing (26), and two plates (27).
14. Remove bearings (23 and 25) and cam (24).



397-2400

**STEERING CONSOLE SUPPORT REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

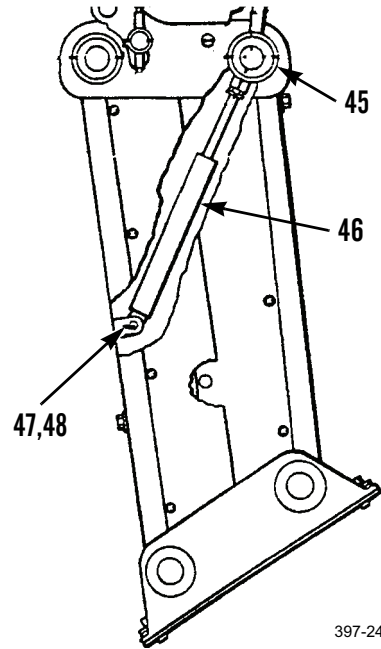
0198 00

REMOVAL - CONTINUED


NOTE

Leave bearing housing, bearings, control cam, ball bearing, and setscrew attached to cylinder as an assembly for ease of removal.

15. Remove cotter pin (47) and straight pin (48). Discard cotter pin.
16. Remove cylinder (46) and bearing assembly (45).



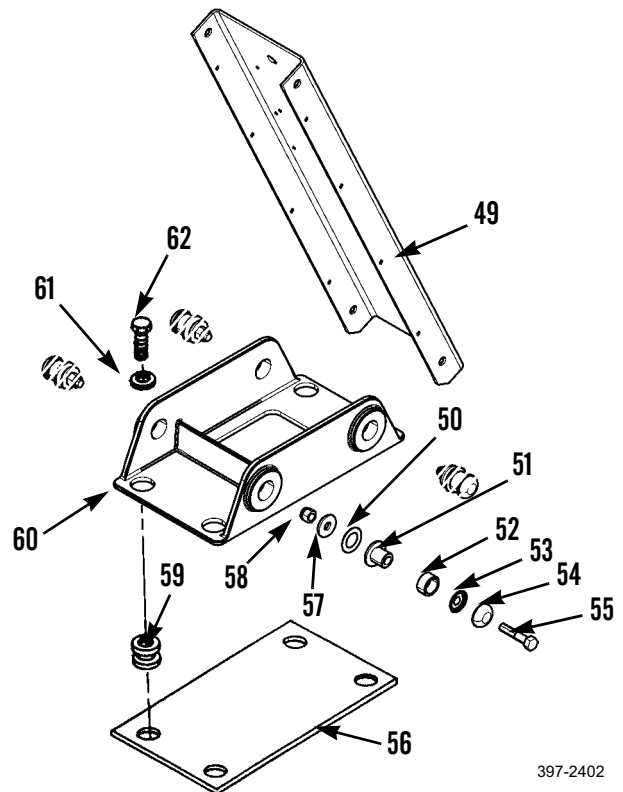17. Remove four protective caps (54), bolts (55), shouldered washers (53), spacers (52), bearings (51), retainers (50), washers (57), and locknuts (58). Discard locknuts.
18. Remove two double angle brackets (49).
19. Remove four self-locking bolts (62), washers (61), grommets (59), console base (60), and pad (56). Discard self-locking bolts.



**STEERING CONSOLE SUPPORT REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

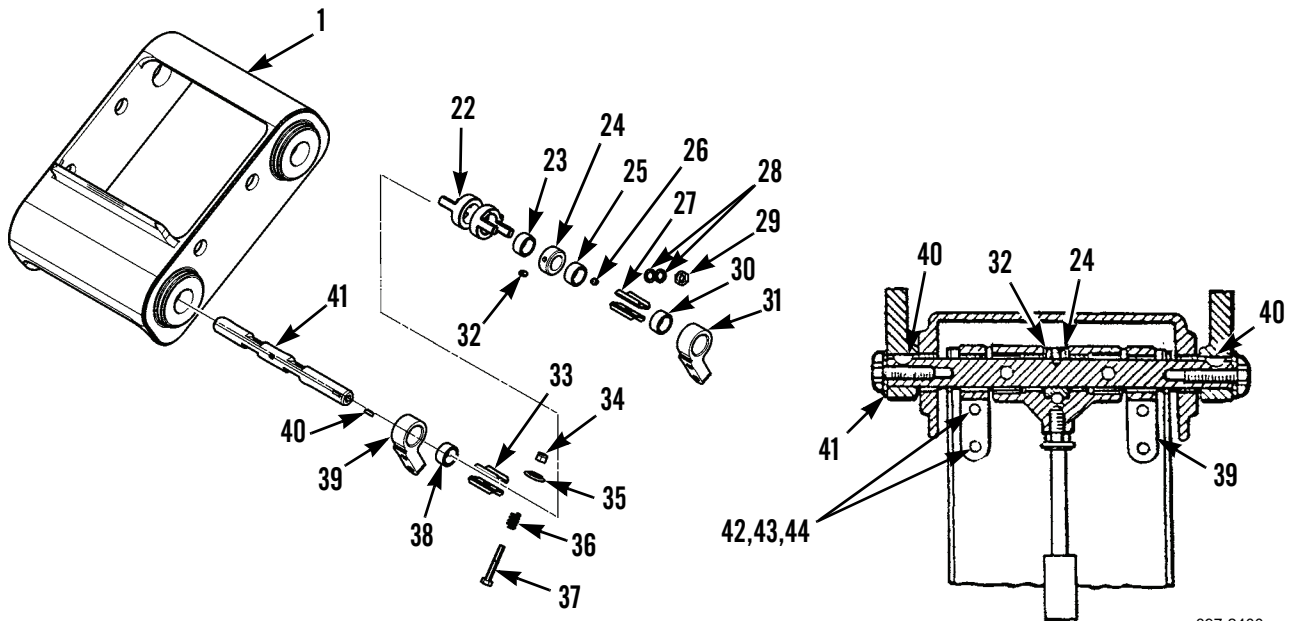
0198 00

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install pad (56), four grommets (59), console base (60), four washers (61), and new self-locking bolts (62).
2. Install two double angle brackets (49).
3. Install four bolts (53), shouldered washers (63), spacers (52), bearings (51), retainers (58), washers (65), new locknuts (58), and protective caps (62).
4. Install cylinder (46) and bearing assembly (45).
5. Install straight pin (48) and new cotter pin (47).
6. Install cam (24) and bearing (23).
7. Install ball bearing (26), two washers (28), and nut (29).
8. Install two eyebolts (31), and bearings (30), as an assembly.
9. Install four bolts (42), washers (43), and nuts (44).
10. Install shaft (41), and two woodruff keys (40), and bearing (25). Tighten setscrew (32) on cam (24).
11. Install connector (22).
12. Install bearing (38) and eyebolt (39) as an assembly.
13. Install two screws (37), washers (35), springs (36), new locknuts (34), and four plates (33).




397-2400

**STEERING CONSOLE SUPPORT REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**


0198 00

INSTALLATION - CONTINUED

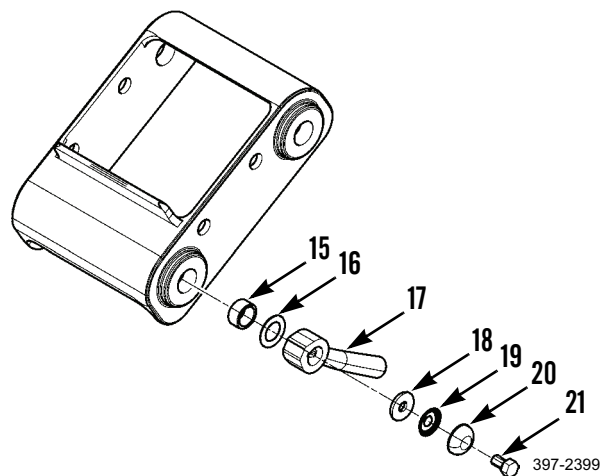14. Install screw (20), shouldered washer (19), washer (18), lever (17), retainer (16), bearing (15), and protective cap (20).



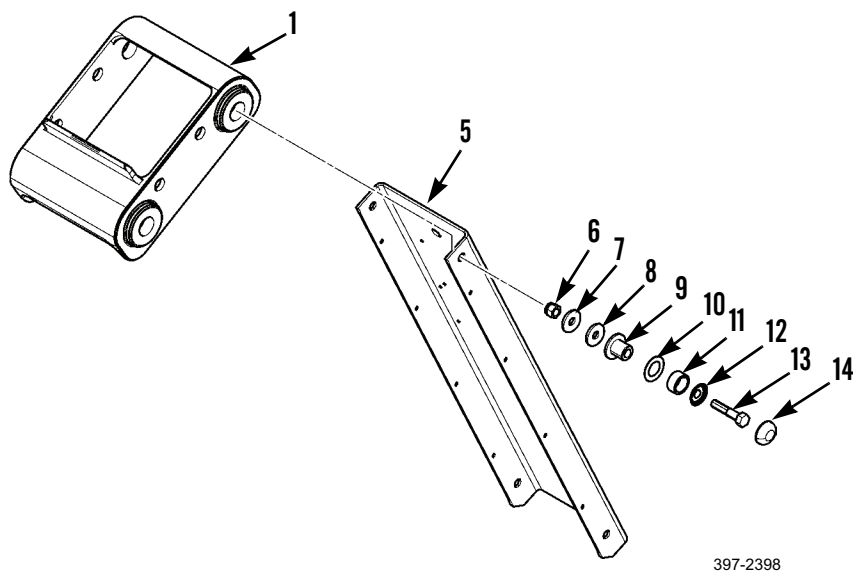15. Install bolt (13), shouldered washer (12), spacer (11), retainer (10), bearing sleeve (9), washers (8 and 7), nut (6), and protective cap (14).




**STEERING CONSOLE SUPPORT REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE) - CONTINUED**

0198 00

INSTALLATION - CONTINUED

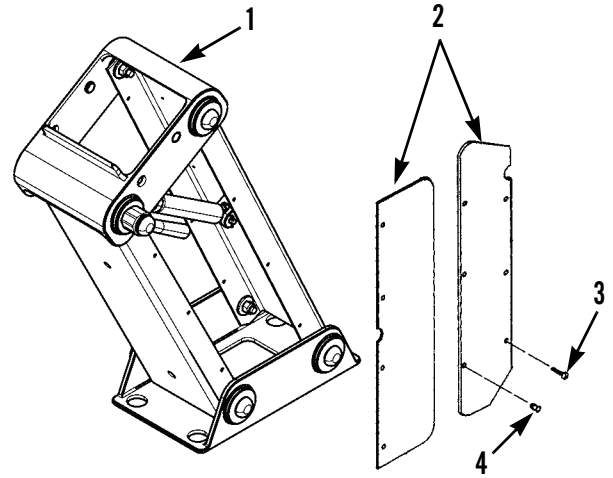16. Install three pins (4) on steering console support (1).
17. Install two plates (2).
18. Install seven new tapping screws (3).
19. Repeat for other side of steering console support (1).



397-2403

20. Install steering console hood and panel cover (WP 0196 00).

END OF WORK PACKAGE

HYDRAULIC DRIVE PROTECTION COVER REPLACEMENT

0199 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

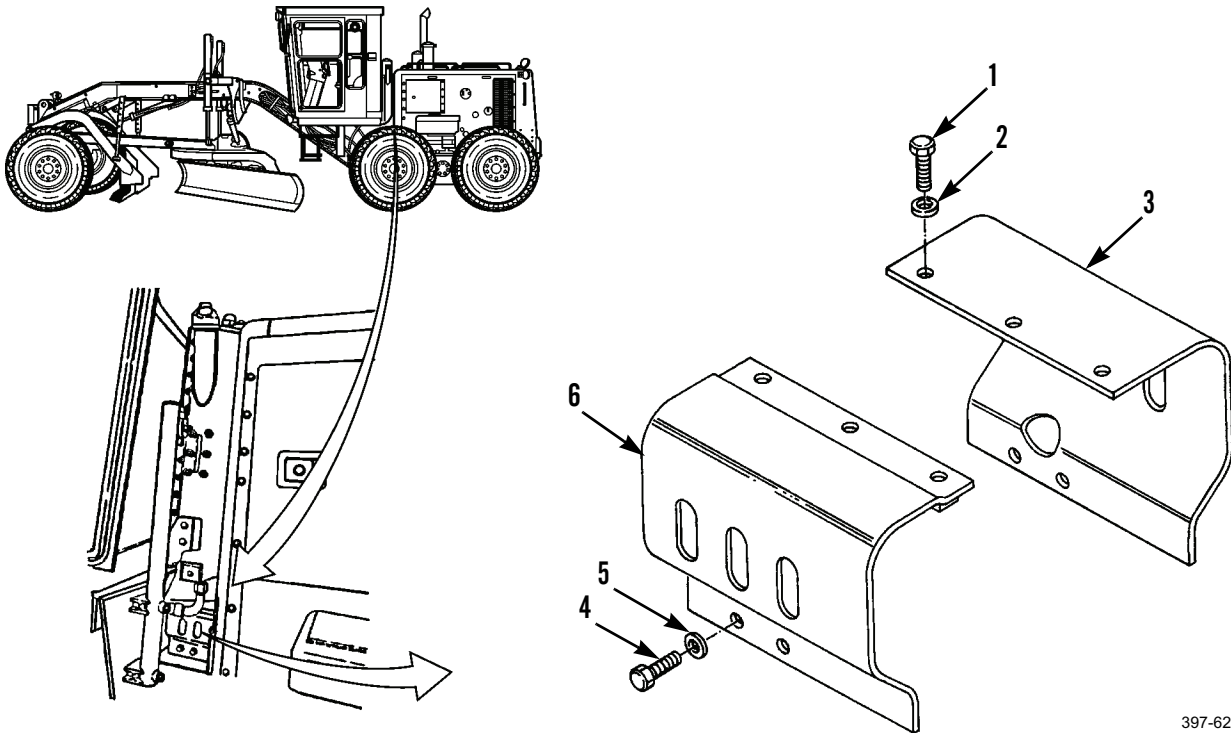
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

1. Remove three bolts (1) and washers (2) from plate (3) and metal molding (6) located below hydraulic tank.
2. Remove two bolts (4), washers (5), and plate (3).
3. Remove remaining two bolts (4), washers (5), and metal molding (6).



397-625

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

Do not tighten bolts.

1. Install metal molding (6), two washers (5), and bolts (4).

NOTE

Do not tighten bolts.

2. Install plate (3), two washers (5), and bolts (4).
3. Install three washers (2) and bolts (1).
4. Tighten four bolts (4).

END OF WORK PACKAGE

SEAT ASSEMBLY AND MOUNTING REPLACEMENT

0200 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Equipment Conditions - Continued

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

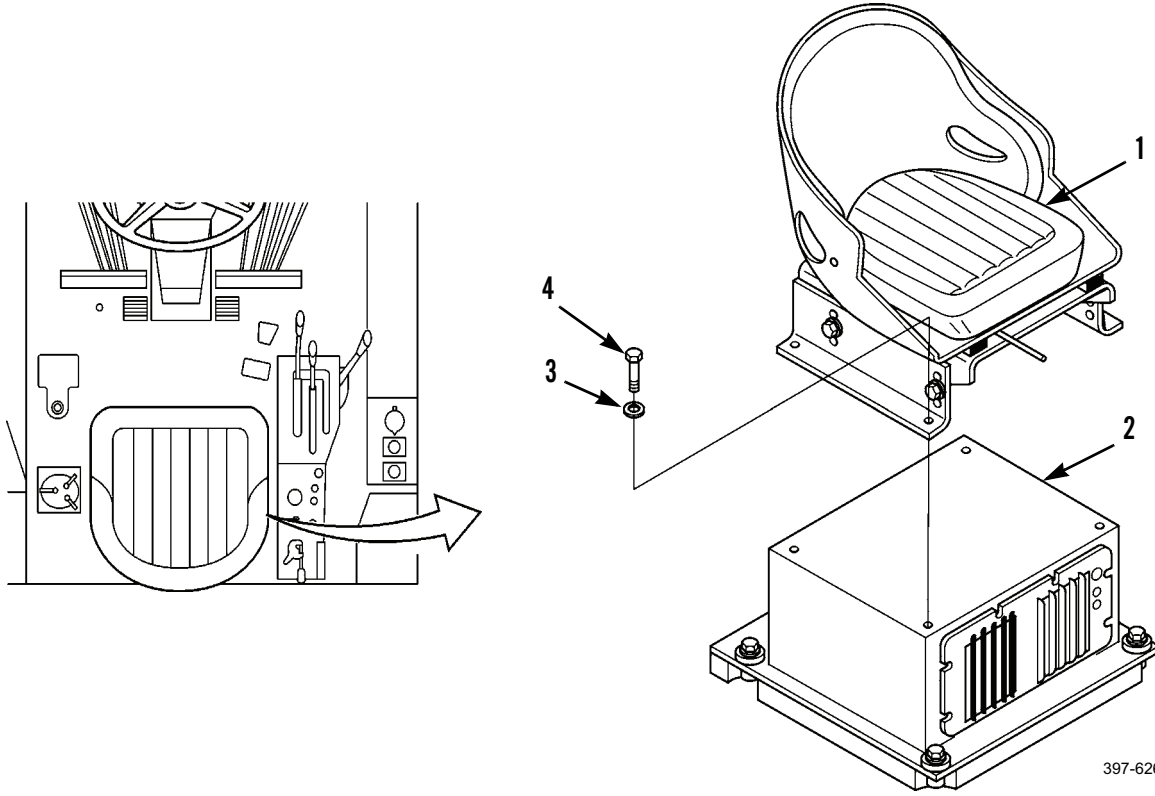
Battery disconnect switch in OFF position (TM 5-3805-261-10)

Seat belt removed from seat (WP 0201 00)

Heater removed, if replacing mounting (CCE machine) (WP 0212 00)

REMOVAL


1. Remove four bolts (4), washers (3), and seat assembly (1) from support (2).



397-626

REMOVAL - CONTINUED

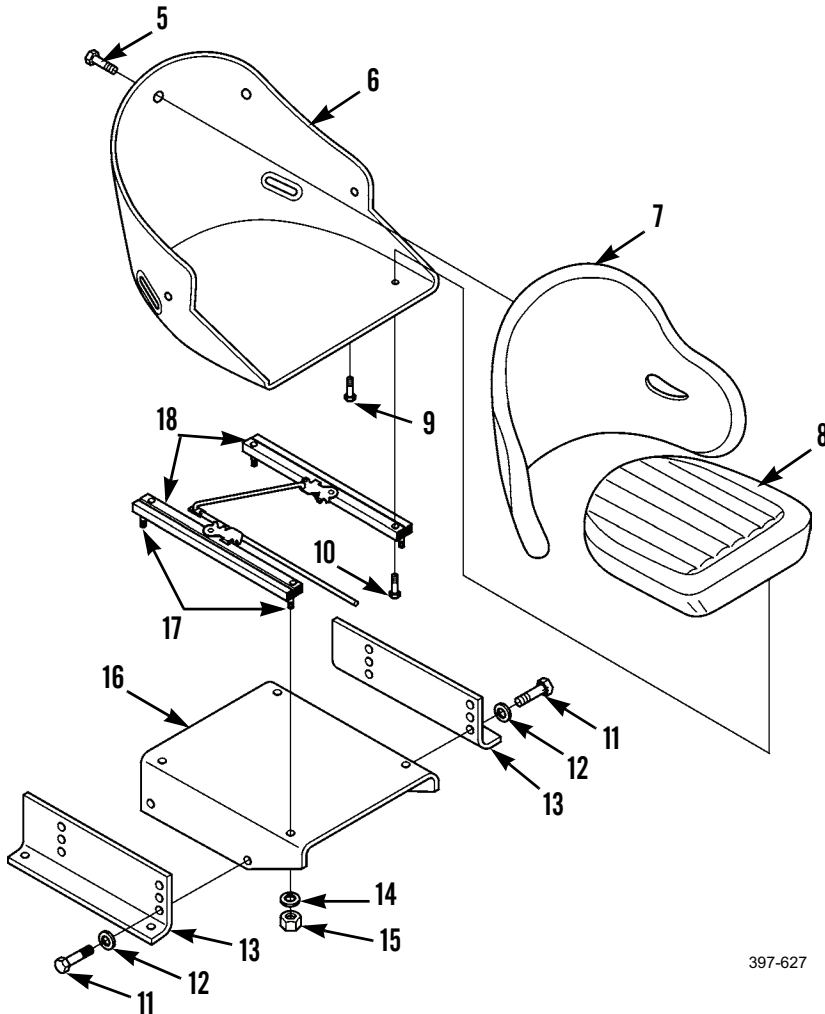
2. Remove four bolts (11), washers (12), and two brackets (13).
3. Remove four nuts (15), washers (14), and bracket (16) from four studs (17).
4. Remove two bolts (9) and seat cushion (8).
5. Remove five bolts (5) and back cushion (7).
6. Remove four bolts (10) and two track adjusters (18) from seat (6).



397-627

REMOVAL - CONTINUED

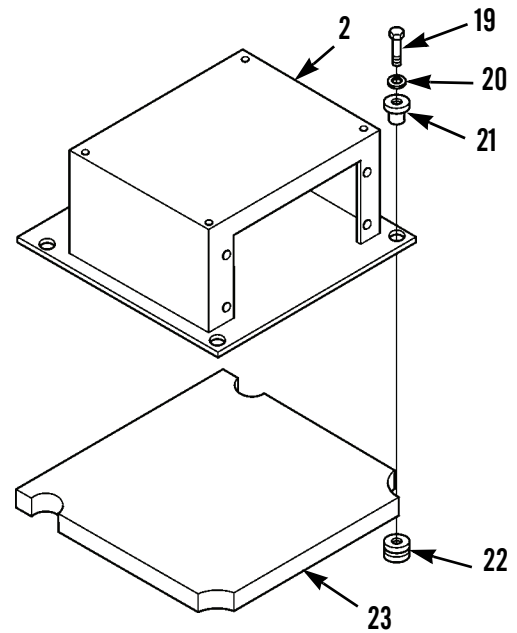7. Remove four bolts (19), washers (20), spacers (21), support (2), gasket (23), and four grommets (22).



397-2172

CLEANING AND INSPECTION

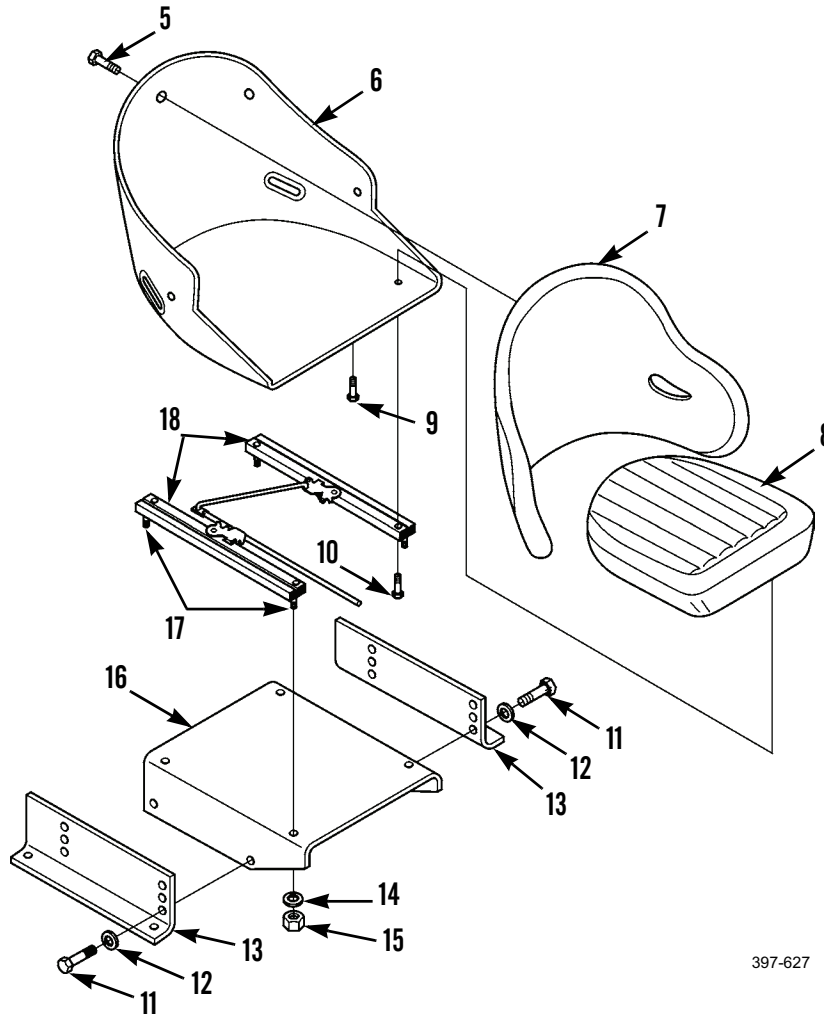
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install four grommets (22), gasket (23), support (2), four spacers (21), washers (20), and bolts (19).

INSTALLATION - CONTINUED


2. Install two track adjusters (18) and four bolts (10) on seat (6).
3. Install back cushion (7) and five bolts (5).
4. Install seat cushion (8) and two bolts (9).
5. Install bracket (16), four washers (14), and nuts (15) on four studs (17).
6. Install two brackets (13), four washers (12), and bolts (11).



397-627

INSTALLATION - CONTINUED

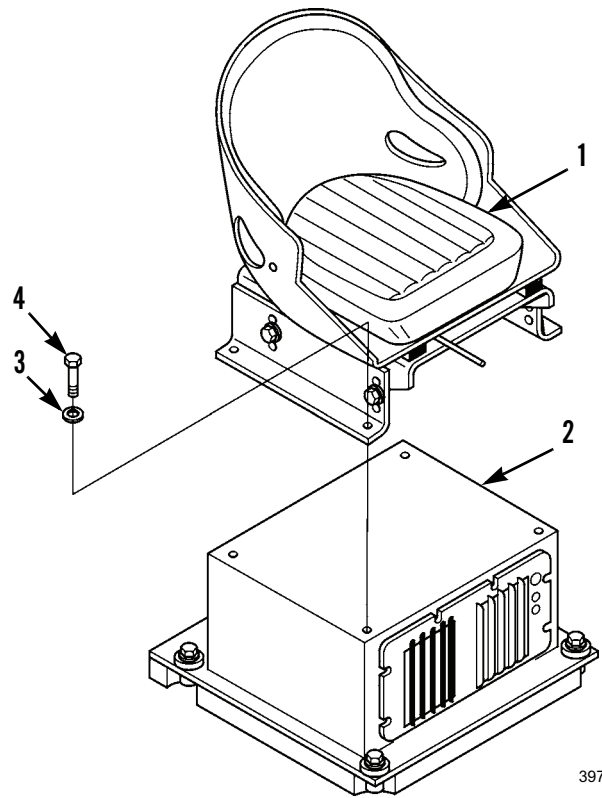7. Install seat assembly (1), four washers (3), and bolts (4) on support (2).



397-626

8. Install heater, if removed (CCE machine) (WP 0212 00).
9. Install seat belt in seat (WP 0201 00).

END OF WORK PACKAGE

SEAT BELT REPLACEMENT

0201 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

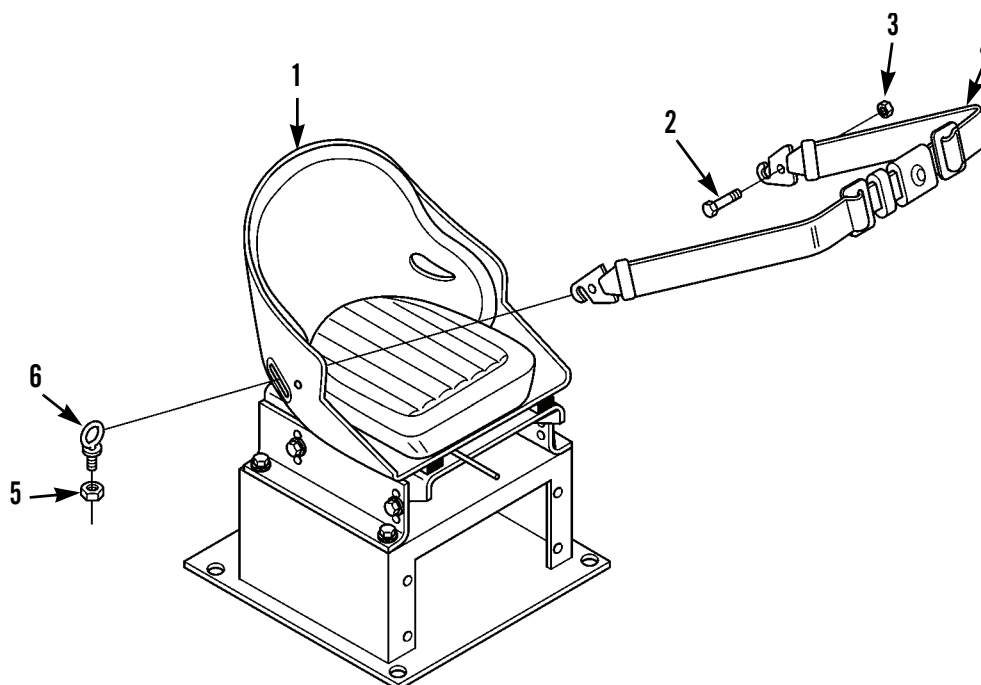
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

1. Detach belt (4) from two eyebolts (6).
2. Remove two nuts (3), bolts (2), and belt (4).
3. Pull belt (4) through seat (1).
4. Remove two nuts (5) and eyebolts (6) from cab.




397-628

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

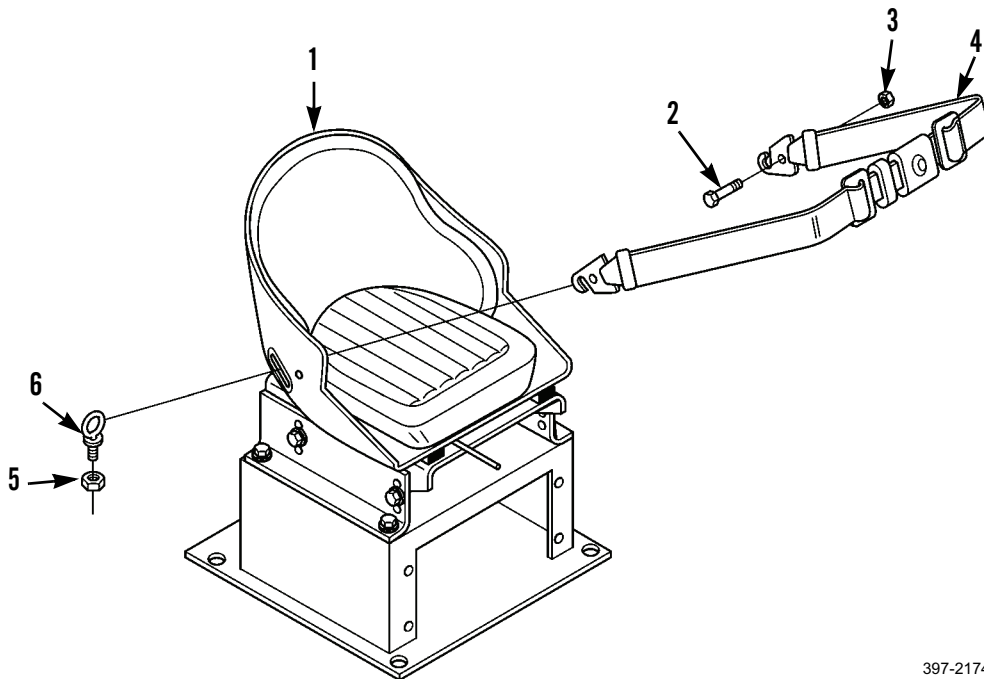1. Install two eyebolts (6) and nuts (5) on cab.
2. Install belt (4) through seat (1).
3. Attach belt (4) to eyebolts (6).
4. Install two bolts (2) and nuts (3).



397-2174

END OF WORK PACKAGE

TOOLBOX REPLACEMENT

0202 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

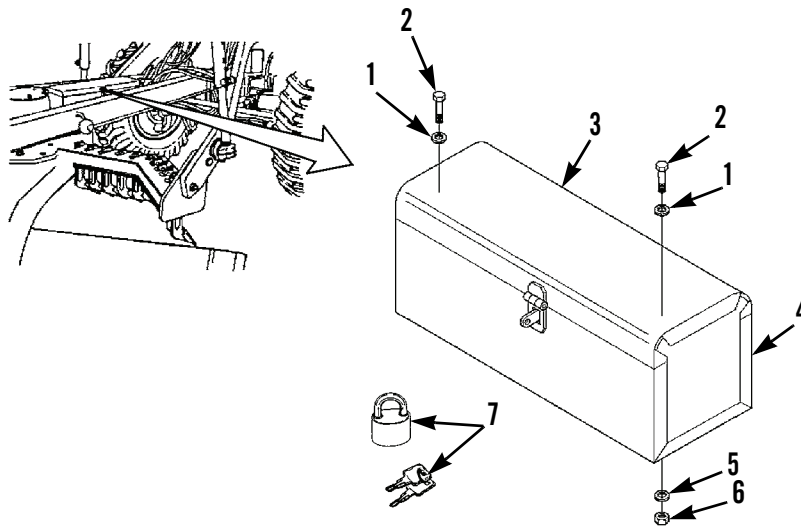
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)


REMOVAL**NOTE**

Toolbox may be mounted on right side panel or center of frame. Sectionalized machines have both triangular and rectangular shaped toolboxes. Each toolbox configuration is shown.

1. Select appropriate figure, following:
 - a. Open lock(s) (7) and cover (3) of toolbox (4).
 - b. Remove two nuts (6) and washers (5) from bottom of toolbox (4) at front corners.
 - c. Remove four bolts (2) and washers (1) from inside toolbox (4) at each corner.
 - d. Remove toolbox (4).



397-2487

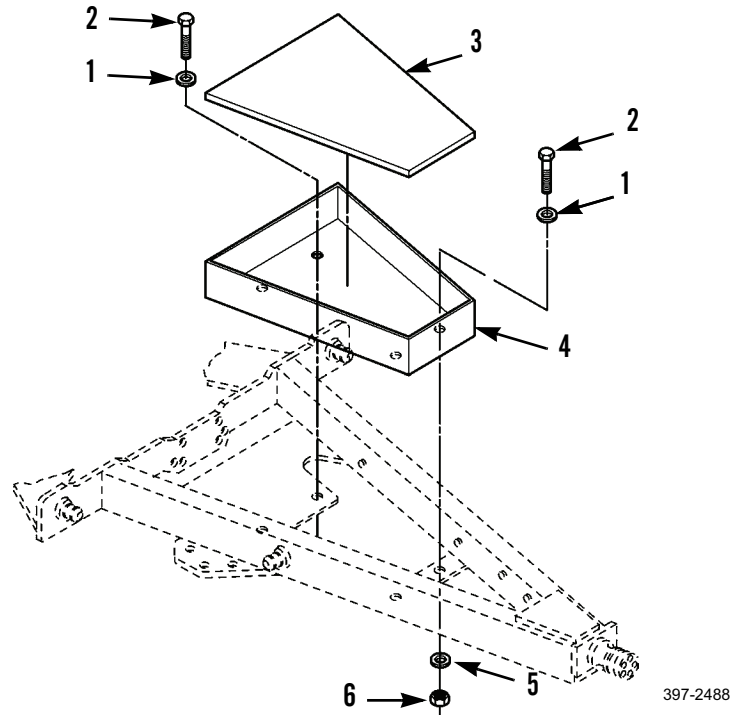REMOVAL - CONTINUED**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install toolbox (4).
2. Install four washers (1) and bolts (2) inside toolbox (4) at each corner.
3. Install two washers (5) and nuts (6) on bottom of toolbox (4) at front corners.
4. Close and lock cover (3) with lock (7).

END OF WORK PACKAGE

SCARIFIER SHANKS STOWAGE RACK REPLACEMENT (CCE MACHINE)

0203 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

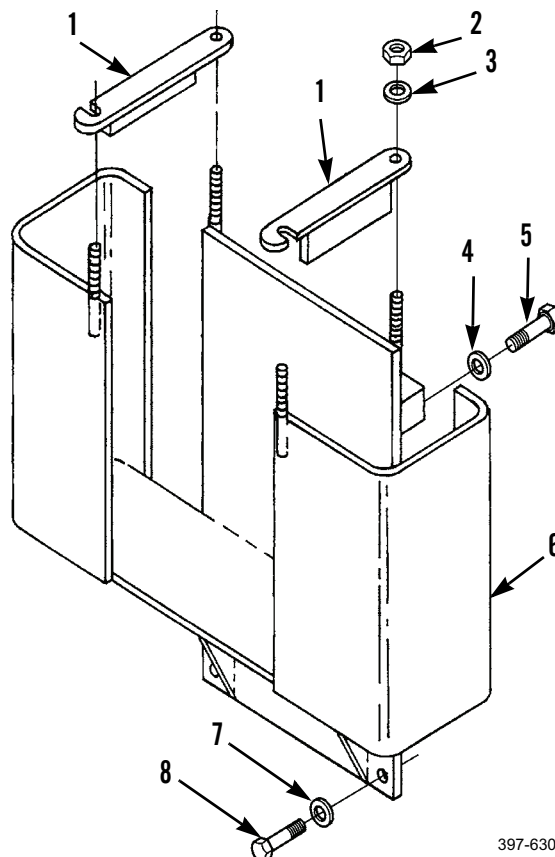
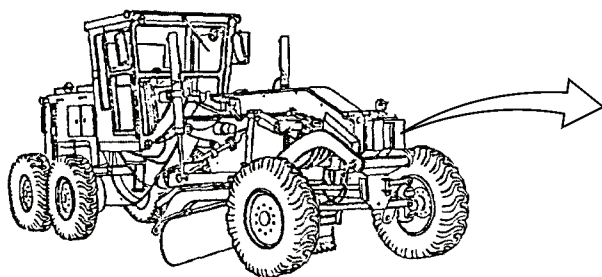
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

1. Remove four nuts (2), washers (3), and two brackets (1) from front frame.
2. Remove two bolts (5) and washers (4).
3. Remove two bolts (8), washers (7), and stowage rack (6).




397-630

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

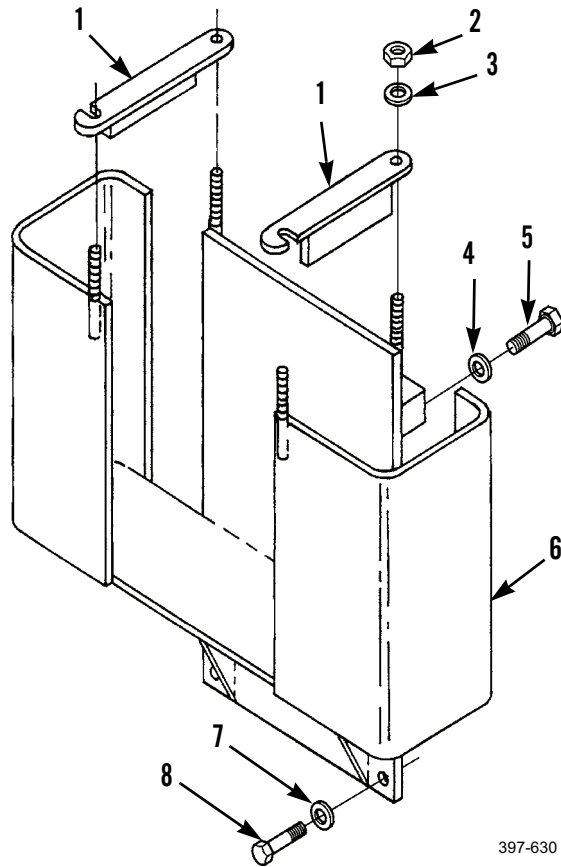1. Install stowage rack (6), two washers (7), and bolts (8) to front frame.
2. Install two washers (4) and bolts (5).
3. Install two brackets (1), four washers (3), and nuts (2).



END OF WORK PACKAGE

REAR BUMPER REPLACEMENT (CCE MACHINE)

0204 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Sling (Item 78, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Pin, cotter

Personnel Required

Two

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

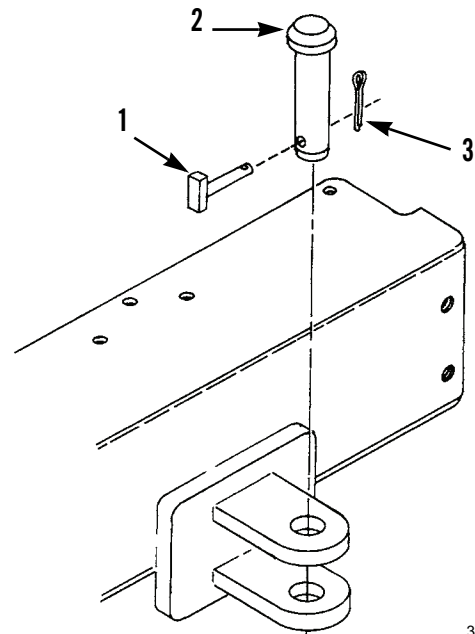
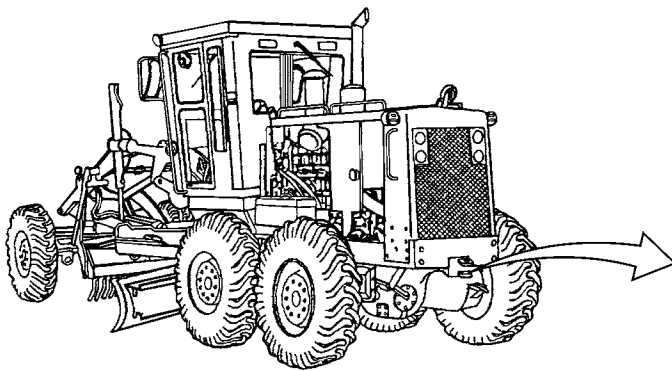
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Backup alarm removed (WP 0121 00)

REMOVAL

1. Remove cotter pin (3), pin (1), and pin (2). Discard cotter pin.



397-631

REMOVAL - CONTINUED


**WARNING**

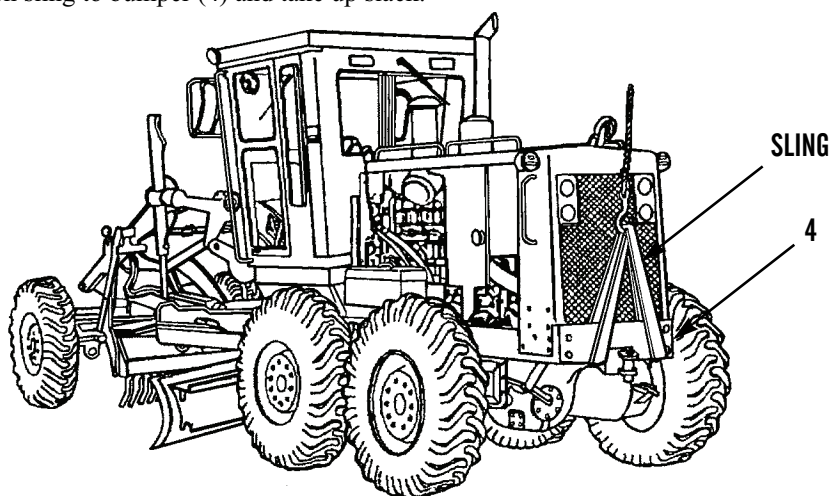Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE


Bumper weighs 100 lb (45 kg).

2. With assistance, attach sling to bumper (4) and take up slack.



397-632

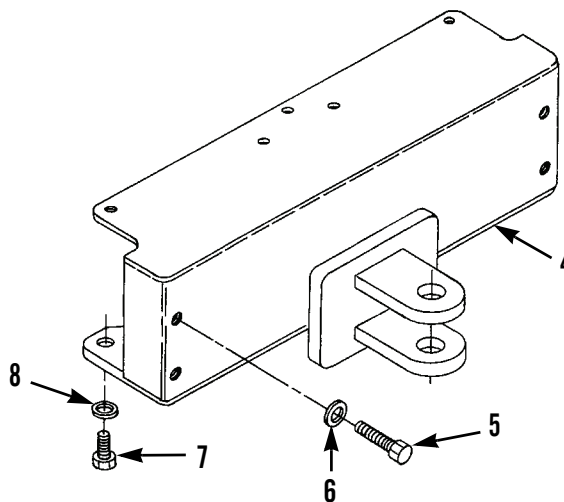3. Remove four screws (7) and washers (8).
4. Remove four bolts (5) and washers (6).
5. Remove bumper (4) by sliding out from rear frame.
6. Remove sling.



397-633

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

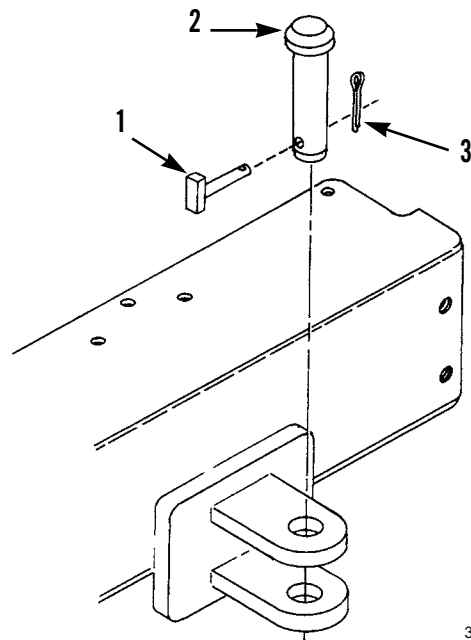
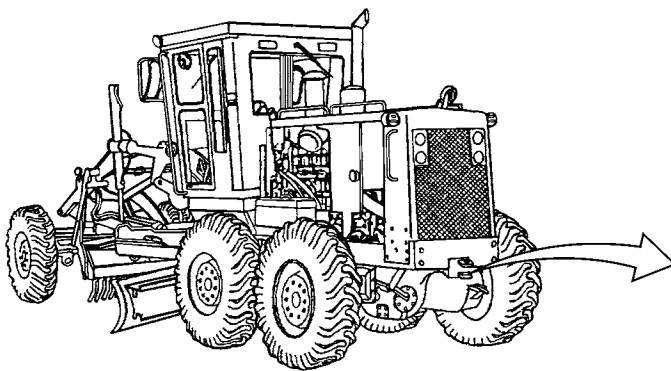
INSTALLATION**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Bumper weighs 100 lb (45 kg).

1. With assistance, attach sling to bumper (4) and position on rear frame.
2. Install four washers (6) and bolts (5).
3. Install four washers (8) and bolts (7).
4. Remove sling.
5. Install pin (2), pin (1), and new cotter pin (3).



397-631

6. Install backup alarm (WP 0121 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Sling (Item 78, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Pin, cotter

Personnel Required

Two

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

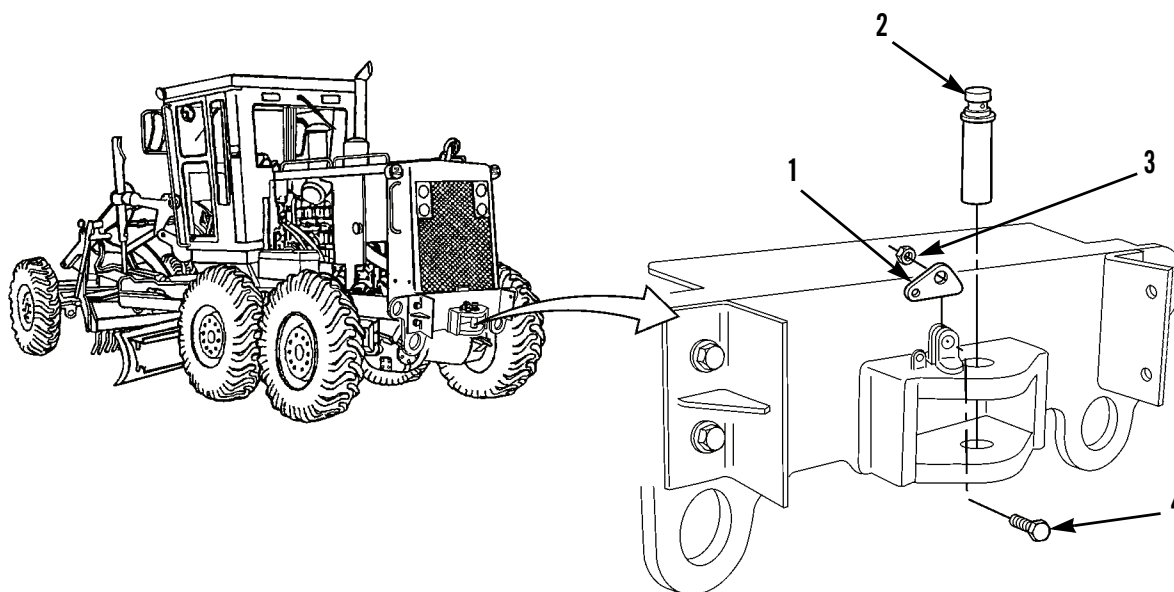
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Backup alarm removed (WP 0121 00)

REMOVAL

1. Remove nut (3) and bolt (4).
2. Remove pin (1) and pin (2).



397-4382

REMOVAL - CONTINUED


**WARNING**

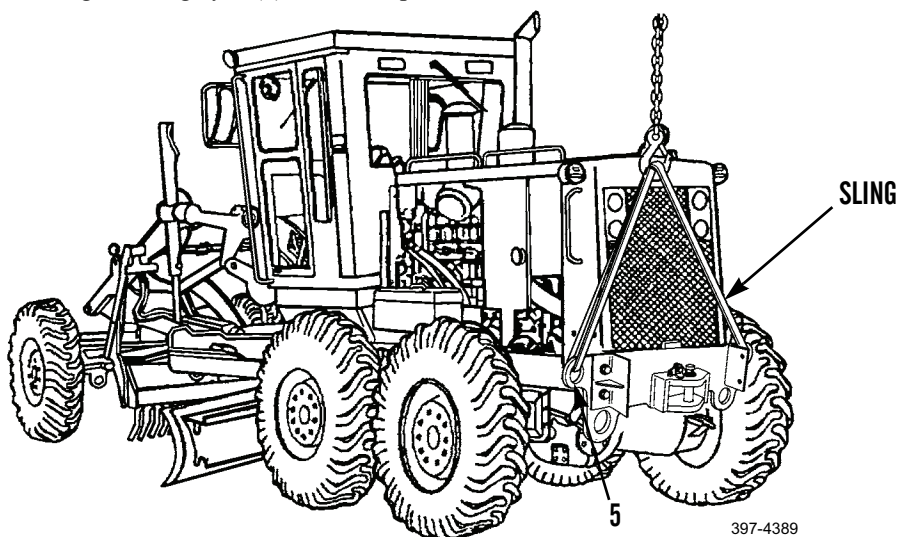Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.


NOTE

Bumper weighs 347 lb (158 kg).

3. With assistance, attach sling to lifting eyes (5) and take up slack.



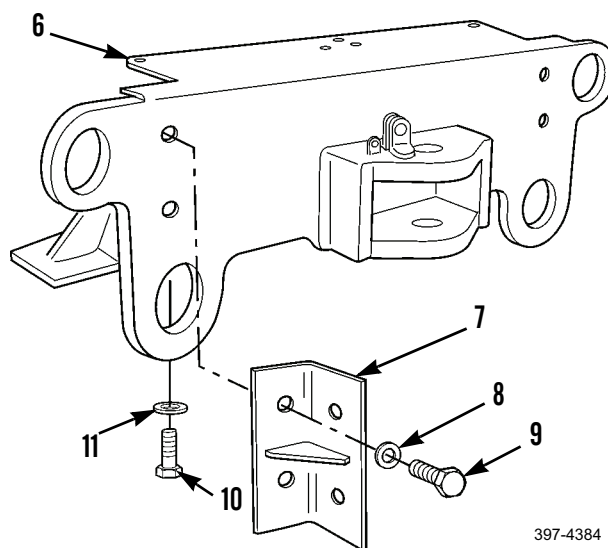4. Remove six bolts (10) and washers (11).
5. Remove four bolts (9), washers (8) and two brackets (7).
6. Remove bumper (6) by sliding out from rear frame.
7. Remove sling.



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

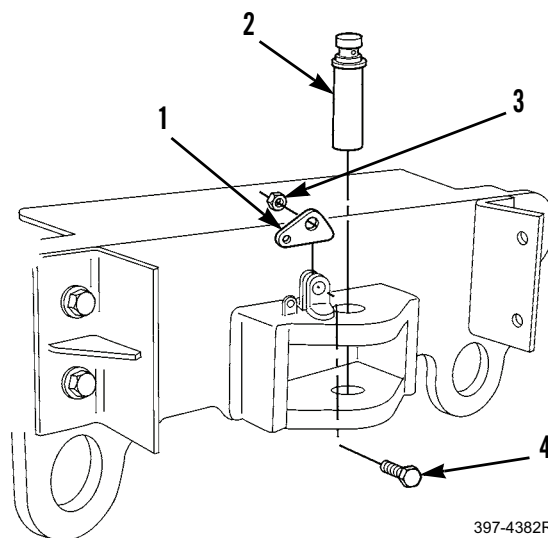
INSTALLATION**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Bumper weighs 100 lb (45 kg).

1. With assistance, attach sling to bumper (6) and position on rear frame.
2. Install two brackets (7), four washers (8), bolts (9).
3. Install six washers (11) and bolts (10).
4. Remove sling.
5. Install pin (2) and pin (1).
6. Install bolt (4) and nut (3).



397-4382R

7. Install backup alarm (WP 0121 00).

END OF WORK PACKAGE

FRONT WIPER (LOWER) MAINTENANCE (CCE MACHINE)

0206 00**THIS WORK PACKAGE COVERS**Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP**Maintenance Level**

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

References

WP 0020 00

WP 0125 00

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket (4)

Locknut (2)

Lockwasher (12)

Ring, snap (2)

Washer, spring (2)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

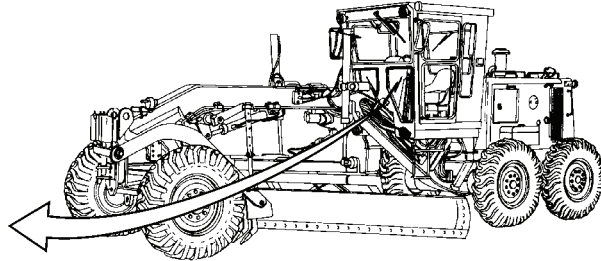
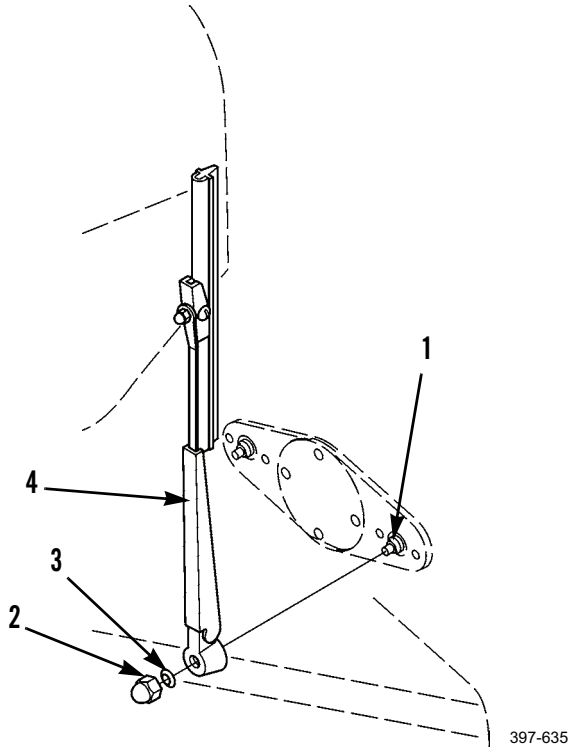
Engine off (TM 5-3805-261-10)

REMOVAL

1. Remove two nuts (2) and lockwashers (3) from lower wiper assembly (4). Discard lockwashers.

NOTE

- Note position of lower wiper assembly before removing to aid in installation.
 - Push in on hinged part to straighten lower wiper assembly and pull from shaft of linkage (1) to remove lower wiper assembly.
2. Remove two lower wiper arm assemblies (4).




REMOVAL - CONTINUED

3. Remove two locknuts (18), screws (19), blades (21), and clips (20) from arm assembly (17). Discard locknuts.
4. Remove two drivers (15), caps (14), nuts (13), washers (12), and gaskets (11) from shaft of linkage (1). Discard gaskets.
5. Remove four screws (16), cover (5), and gasket (6). Discard gasket.

NOTE

Turn wiper switch on. Turn disconnect switch ON and OFF as needed to expose three motor mounting bolts and linkage mounting nut.

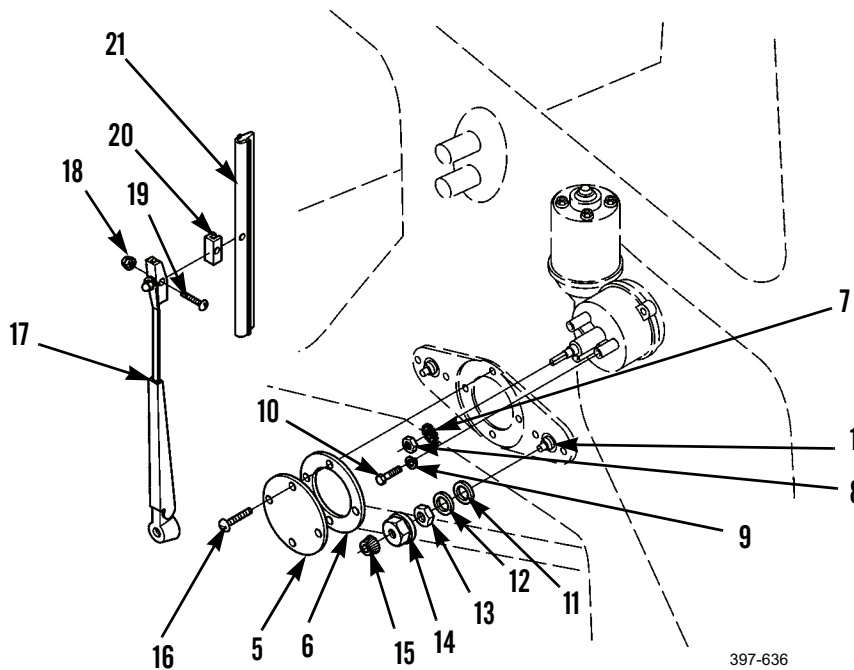6. Remove three bolts (10) and lockwashers (9). Discard lockwashers.
7. Remove nut (8) and lockwasher (7). Discard lockwasher.



REMOVAL - CONTINUED

8. Disconnect battery cables (WP 0125 00).
9. Remove four screws (24) and cover (23) in front of steering column in interior of cab.

NOTE

Tag wire assemblies before disconnecting, to aid in installation.

10. Disconnect three wire assemblies (25) at terminals.

CAUTION

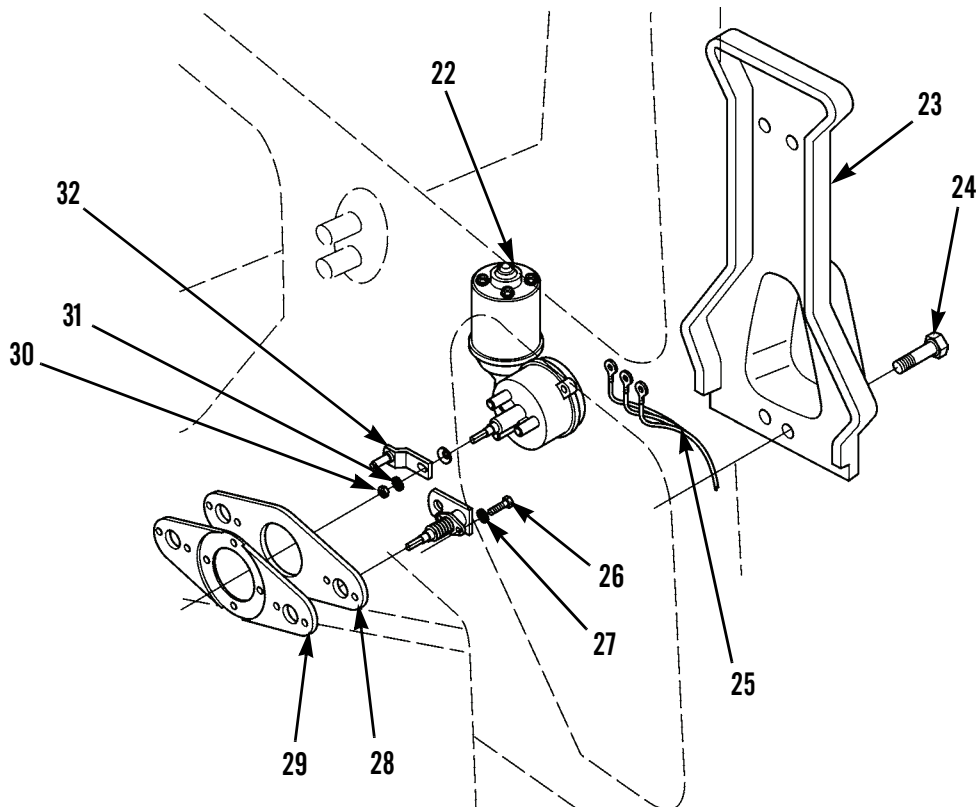
Take care not to damage threads of shaft on wiper motor.

11. Remove nut (30), washer (31), and arm (32).
12. Remove wiper motor (22).

NOTE

If necessary, open lower windshield to perform the next step.

13. Remove four screws (26) and lockwashers (27). Hold flange (29) and gasket (28) while removing four screws.
14. Remove flange (29) and gasket (28). Discard gasket.



397-637

REMOVAL - CONTINUED

15. Remove two nuts (38) and lockwashers (39) from studs (40). Discard lockwashers.
16. Remove two linkages (1) and spacer (41).

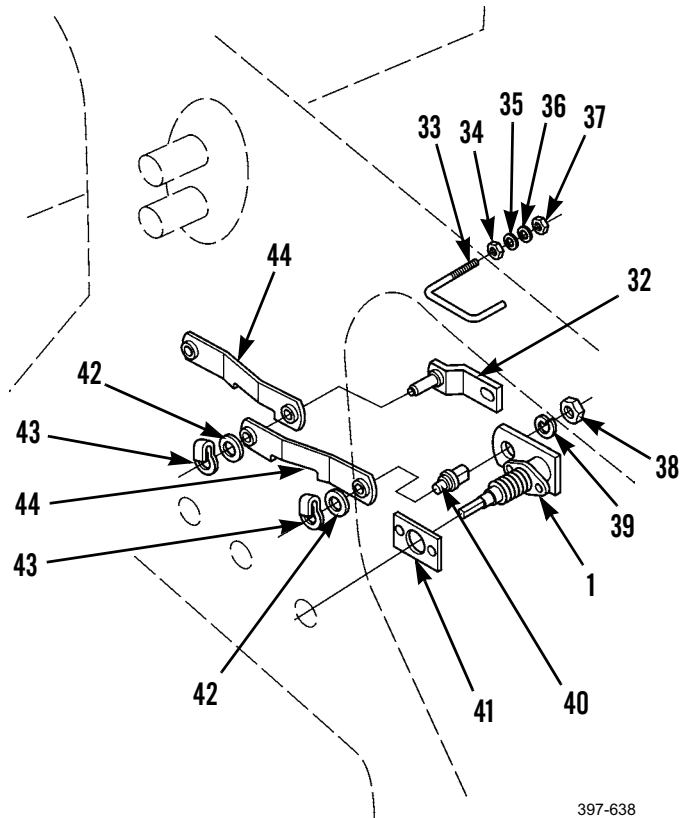
NOTE

- If necessary, open lower windshield to perform the next step.
- Hold two stops while removing nuts.

17. Remove two nuts (37) and washers (36).
18. Remove two stops (33) from machine.
19. Remove two washers (35) and nuts (34) from stops (33).

DISASSEMBLY

1. Remove two clips (43).
2. Separate two washers (42), studs (40), links (44), and arm (32).



397-638

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Position arm (32), two links (44), studs (40), and washers (42). Right link should be down and left link up.
2. Install two clips (43).

INSTALLATION

1. Install two nuts (34) and washers (35) on stops (33).
2. Install two stops (33) in machine.
3. Install two washers (36) and nuts (37) on stops (33) in front of steering column in interior of cab.
4. Position spacer (41) and two linkages (1). Holes of linkages go on studs (40).
5. Install two new lockwashers (39) and nuts (38) on studs (40).
6. Install new gasket (28), flange (29), four new lockwashers (27), and screws (26).
7. Position shaft of wiper motor (22) on arm (32) and install washer (31) and nut (30).
8. Install wiper motor (22).
9. Connect three wire assemblies (25) at terminals.
10. Install cover (23) and four screws (24) in front of steering column in interior of cab.
11. Connect battery cables (WP 0125 00).

INSTALLATION - CONTINUED**NOTE**

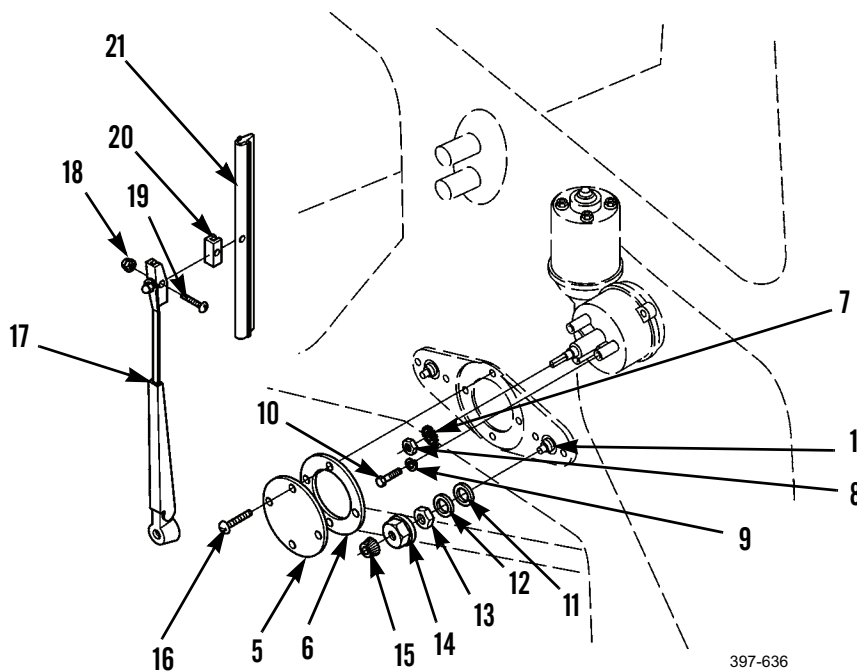
Turn wiper switch on. Turn battery disconnect switch ON and OFF as needed to stop motor so that flat surfaces at sides of threaded motor shaft align with mounting holes in arm.

12. Install new lockwasher (7) and nut (8).

NOTE


Turn wiper switch on. Turn battery disconnect switch ON and OFF as needed so that bolts are exposed.

13. Install three new lockwashers (9) and bolts (10).
14. Install new gasket (6), cover (5), and four screws (16) in lower wiper area of exterior of cab.
15. Install two new gaskets (11), washers (12), nuts (13), caps (14), and drivers (15) on linkage (1) shafts.
16. Install two clips (20), blades (21), screws (19), and new locknuts (18) on arm assembly (17).



INSTALLATION - CONTINUED

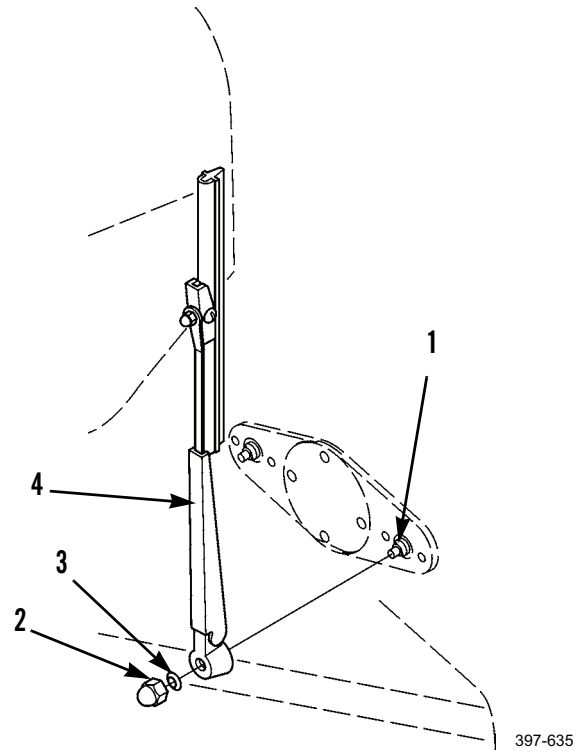17. Install two lower wiper assemblies (4) to shaft of linkage (1) in same position as removed.
18. Install two new lockwashers (3) and nuts (2).

**END OF WORK PACKAGE**

FRONT WIPER (UPPER) MAINTENANCE (CCE MACHINE)

0207 00

THIS WORK PACKAGE COVERSRemoval, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP**Maintenance Level**

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

References

WP 0020 00

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

Locknut

Lockwasher (4)

Ring, snap

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

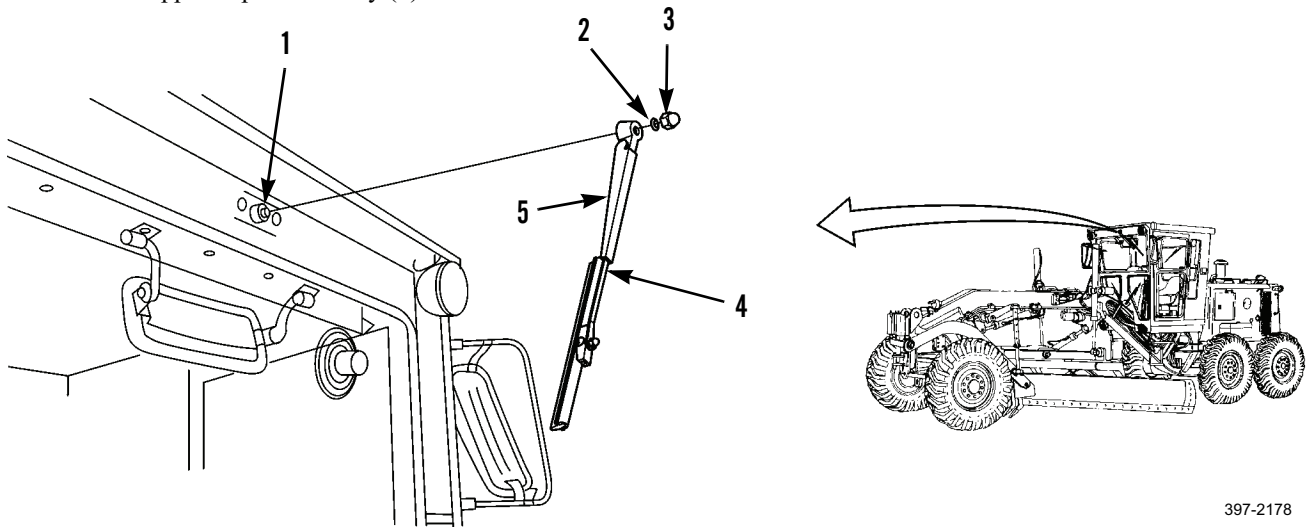
REMOVAL

1. Remove nut (3) and lockwasher (2) from upper wiper assembly (4). Discard lockwasher.


NOTE

- Note position of upper wiper assembly before removing to aid in installation.
- Push in on hinged part of arm assembly (5) to straighten upper wiper assembly and pull from motor (1) shaft to remove upper wiper assembly.

2. Remove upper wiper assembly (4).



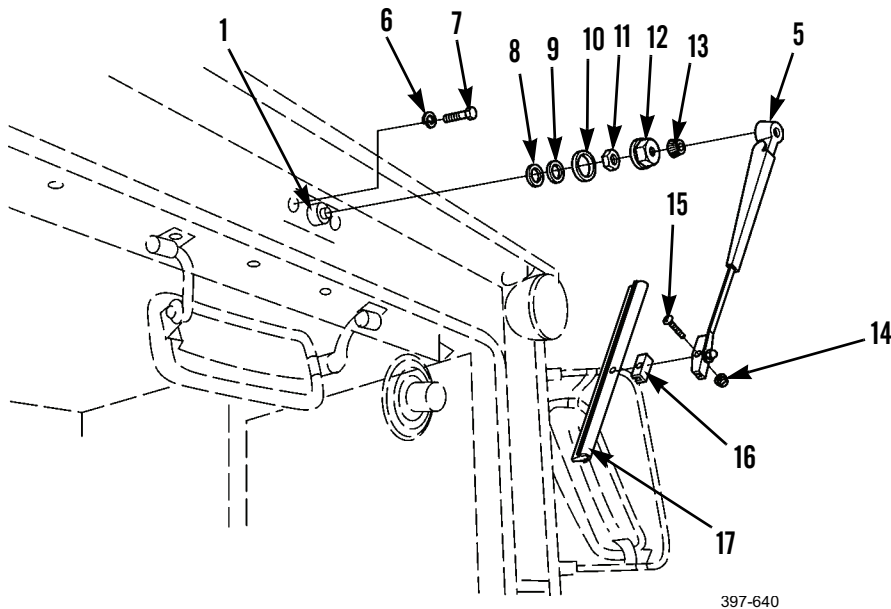3. Remove locknut (14), screw (15), blade assembly (17), and clip (16) from arm assembly (5). Discard locknut.
4. Remove driver (13), cap (12), nut (11), snap ring (10), washer (9), and gasket (8). Discard snap ring and gasket.
5. Remove two bolts (7) and lockwashers (6) from motor (1) shaft. Discard lockwashers.



397-640

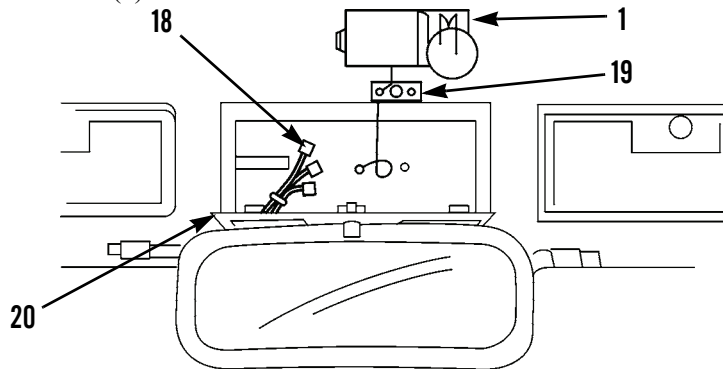
REMOVAL - CONTINUED

6. Open center door (20) in upper storage compartment inside cab.

NOTE

Tag and mark wire assemblies before disconnecting to aid in installation.


7. Disconnect three wire assemblies (18) from terminals of motor (1).
8. Remove plate (19) and motor (1).



397-641

DISASSEMBLY

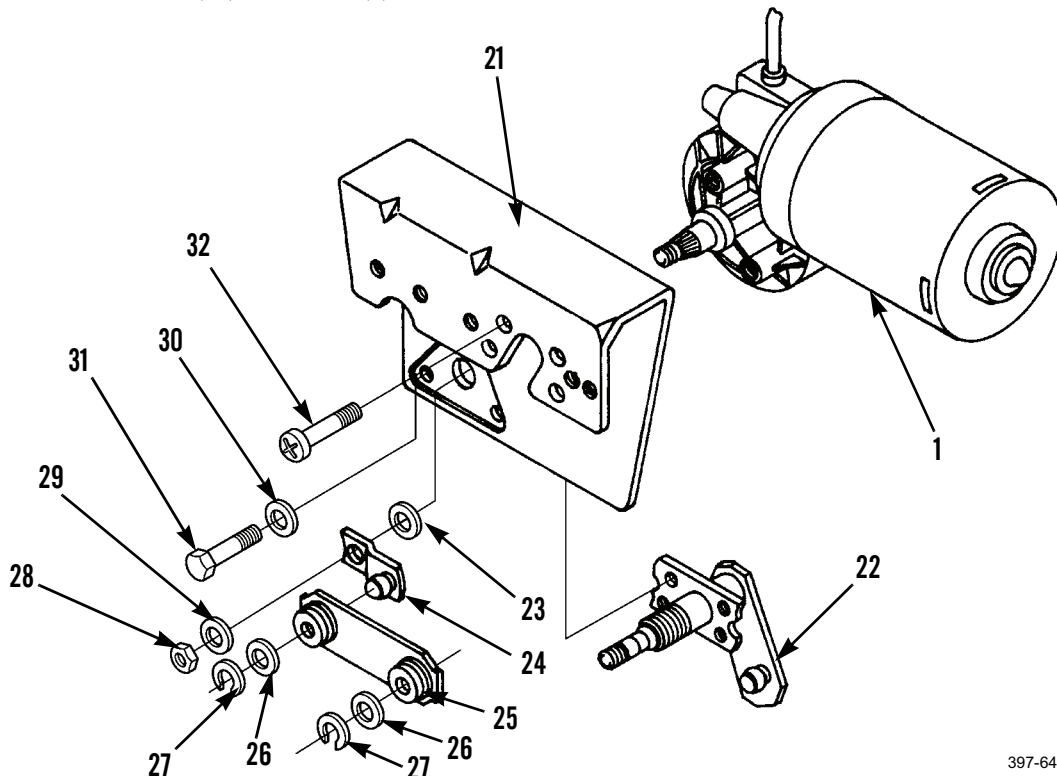1. Remove nut (28), lockwasher (29), and washer (23) from shaft of motor (1). Discard lockwasher.
2. Remove two clips (27) and washers (26) from link assembly (25).
3. Remove link assembly (25), crank assembly (24), washer (23), and shaft assembly (22).
4. Remove three bolts (31) and washers (30).
5. Remove two screws (32).
6. Remove bracket (21) and motor (1).




397-642

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

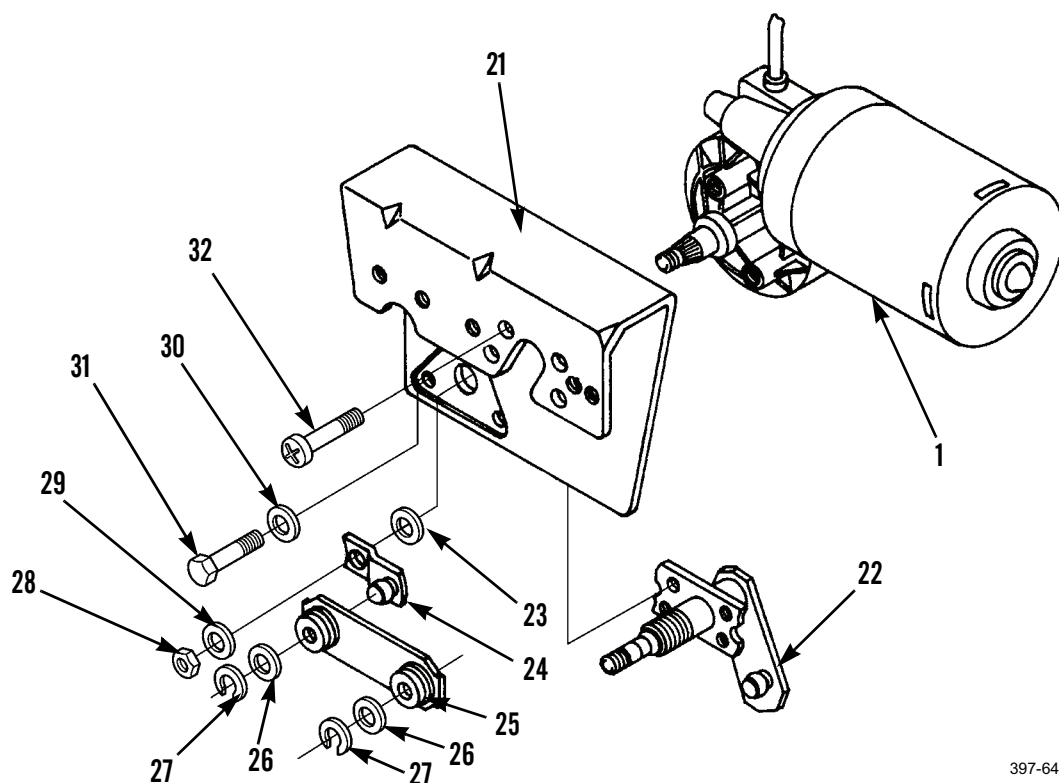
1. Position motor (1) and bracket (21). Insert motor shaft through bracket.
2. Install two screws (32) and tighten to 51 lb-in. (6 Nm).
3. Install three washers (30) and bolts (31). Tighten bolts to 43 lb-in. (5 Nm).
4. Install shaft assembly (22), washer (23), crank assembly (24), link assembly (25), two washers (26), clips (27), and position on bracket (21).
5. Install new lockwasher (29) and nut (28) on motor (1) shaft. Tighten nut to 120 lb-in (14 Nm).




397-642

INSTALLATION

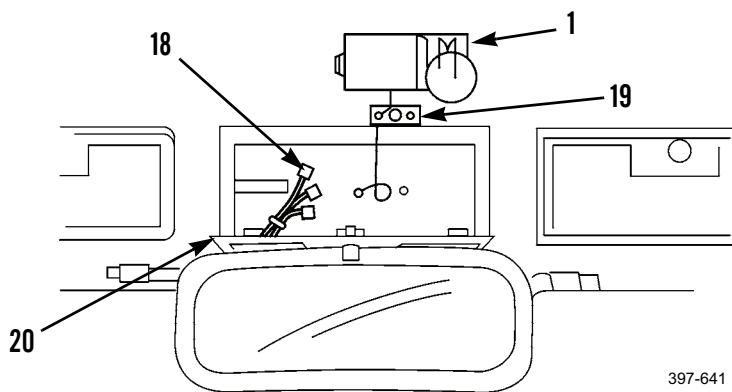1. Position motor (1) and plate (19) in upper storage compartment inside cab.
2. Connect three wire assemblies (18) at terminals to motor (1). Close center door (20).





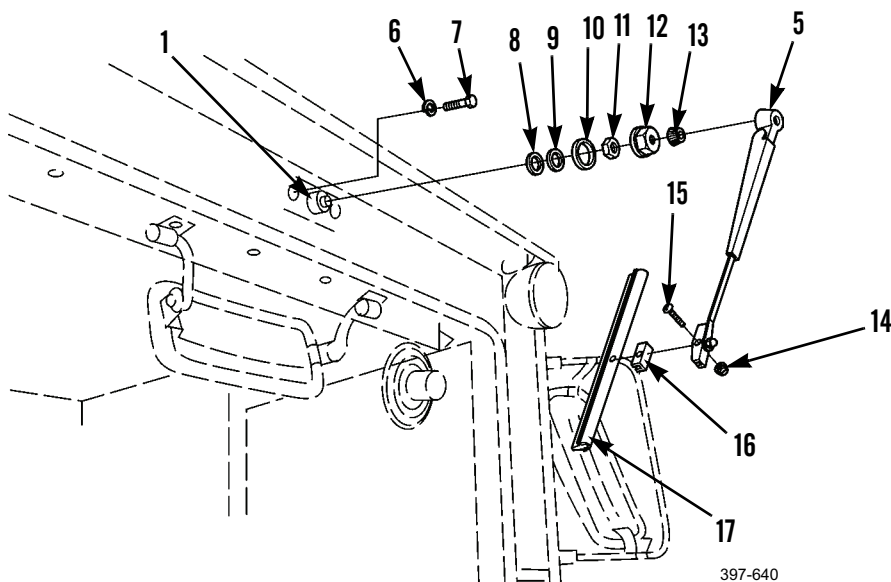3. Install two new lockwashers (6) and bolts (7) in upper-front exterior of cab while assistant holds motor (1) in cab interior.
4. Install new gasket (8), washer (9), new snap ring (10), nut (11), cap (12), and driver (13). Tighten nut to 180 lb-in. (20 Nm).
5. Install clip (16), blade assembly (17), screw (15), and new locknut (14) on arm assembly (5).



INSTALLATION - CONTINUED

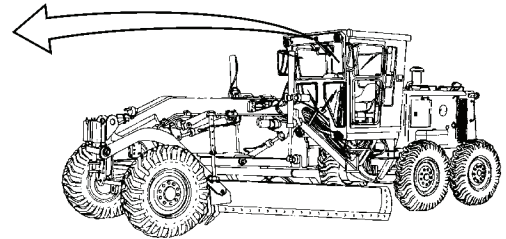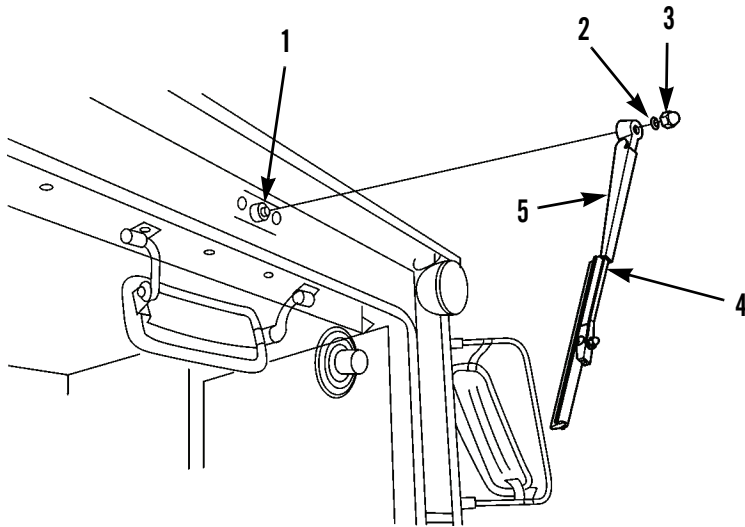6. Install arm assembly (5) of upper wiper assembly (4) to shaft of motor (1) in same position as when removed.
7. Install new lockwasher (2) and nut (3). Tighten nut to 144 lb-in. (16 Nm).



397-2178

8. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

REAR WIPER REPLACEMENT (CCE MACHINE)

0208 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

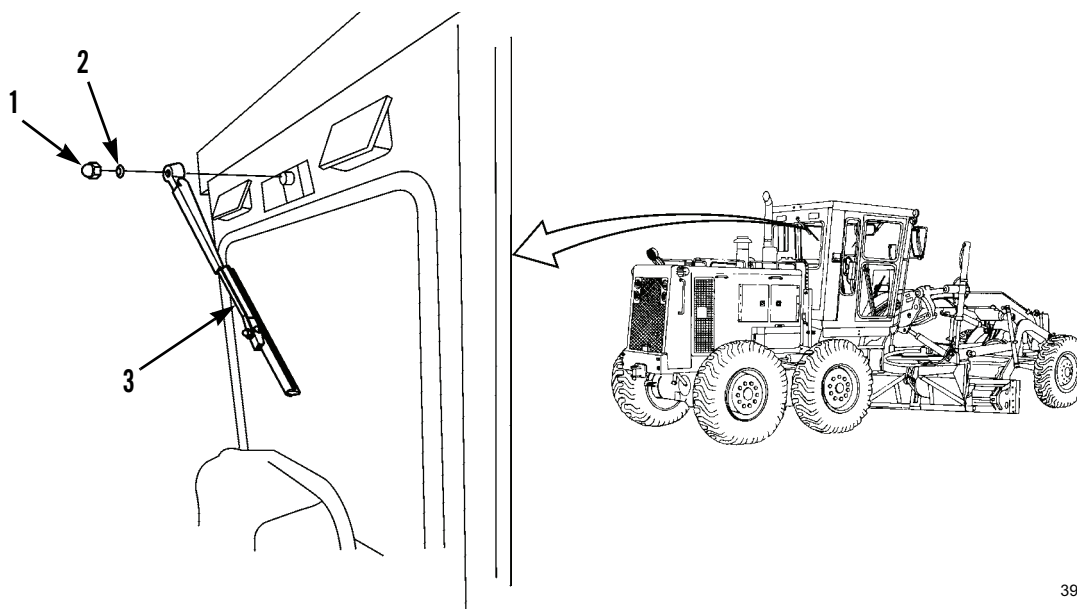
Battery cables disconnected (WP 0125 00)

REMOVAL

NOTE

- Note position of rear wiper assembly before removing to aid in installation.
- Push in on hinged part of arm assembly to straighten rear wiper assembly and pull from shaft of motor to remove rear wiper assembly.


1. Remove nut (1), washer (2), and rear wiper assembly (3).



397-643

REMOVAL - CONTINUED

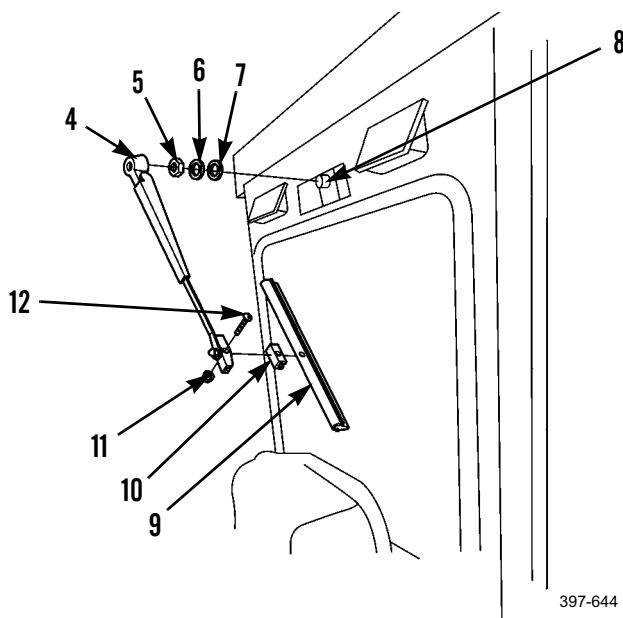2. Remove nut (11) and screw (12).
3. Separate clip (10), blade (9), and arm assembly (4).
4. Remove nut (5) and washers (6 and 7) from shaft of motor (8).




5. Remove knob (18) and nut (19).
6. Remove two screws (16).
7. Separate cover (15) from two brackets (17).
8. Separate switch (21) from cover (15).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

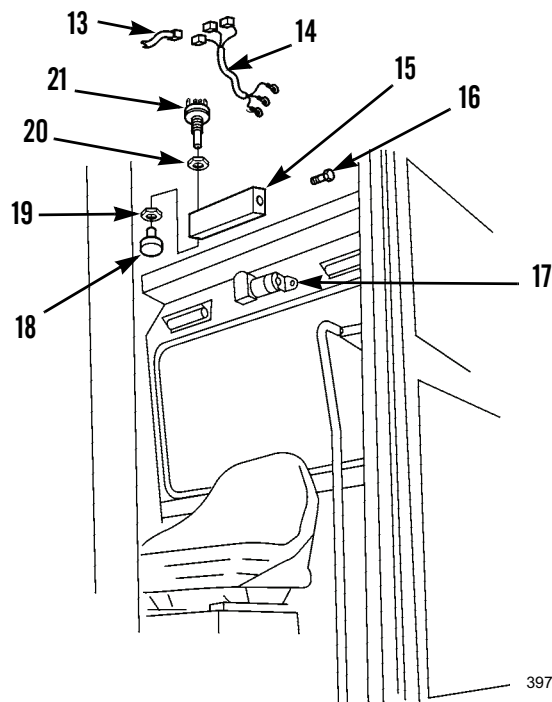9. Disconnect wire assembly (13) and three wire assemblies (14) from switch (21).
10. Remove switch (21) and nut (20).




REMOVAL - CONTINUED

- Remove screws (22 and 23), two brackets (26), and motor (8).

NOTE

Note location of nut on shaft of motor before removing to aid in installation.

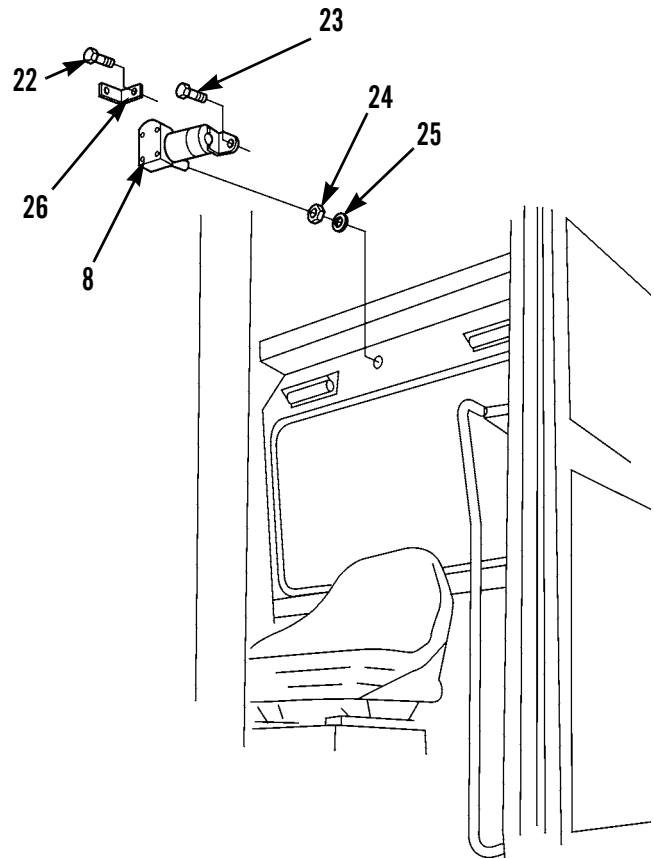- Remove washer (25) and nut (24) from shaft of motor (8).



397-646

CLEANING AND INSPECTION

Clean and inspect all components in accordance with WP 0020 00.

INSTALLATION

- Install nut (24) and washer (25) on shaft of motor (8).

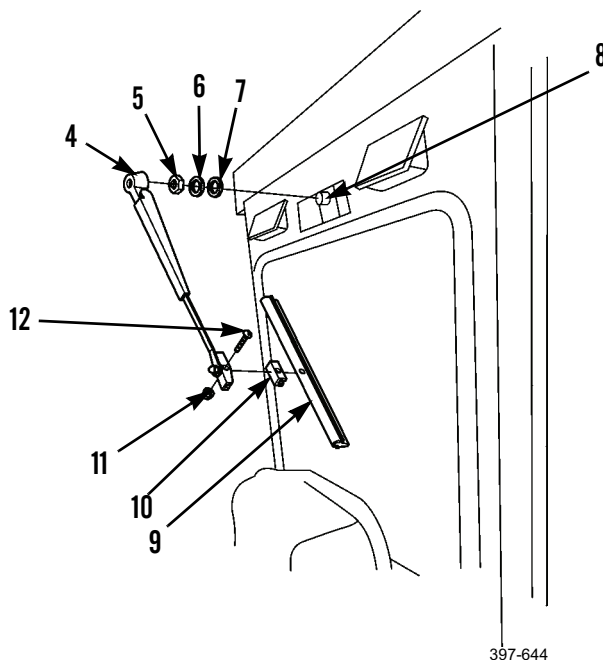
NOTE

Adjust brackets to align with holes in cover.


- Position motor (8) and two brackets (26).
- Install screws (23 and 22).
- Install nut (20) on switch (21).
- Position switch (21) in cover (15).
- Install nut (19).
- Adjust nuts (20 and 19) to obtain proper shaft length of switch (21).
- Connect three wire assemblies (19) and wire assembly (13) to switch (21).
- Position cover (15) on two brackets (26).
- Install two screws (16).
- Install knob (18).

INSTALLATION - CONTINUED

12. Install washers (7 and 6) and nut (5).
13. Position blade (9) and clip (10) on arm assembly (4).
14. Install screw (12) and nut (11).



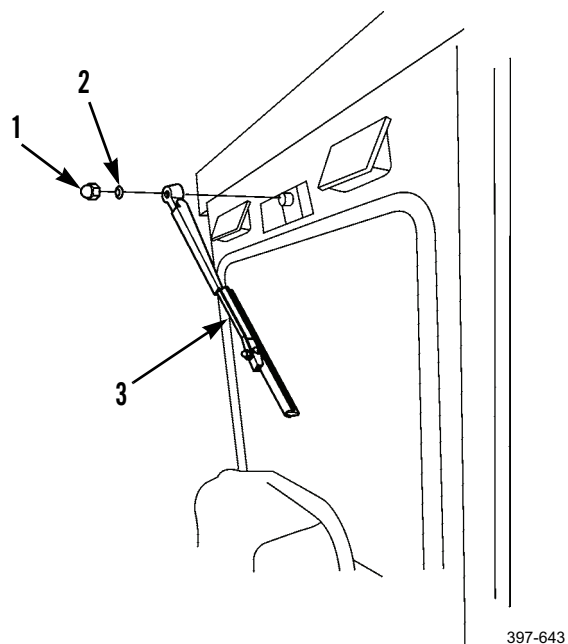15. Install washer (2), nut (1), and rear wiper assembly (3) on shaft of motor (8) in same position as removed.



16. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

WINDSHIELD WASHER REPLACEMENT (CCE MACHINE)

0209 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL

NOTE

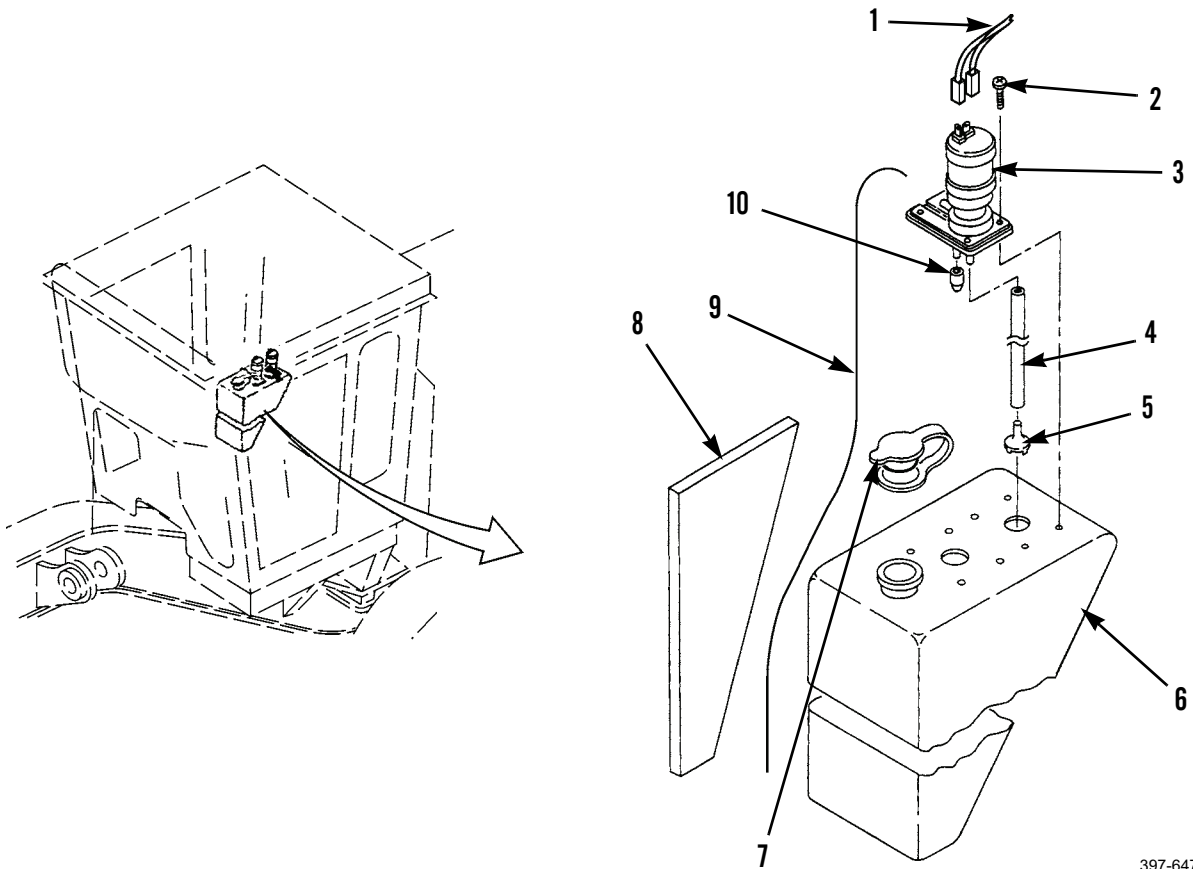
Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect four wire assemblies (1).

NOTE

Tag hoses before disconnecting to aid in installation.

2. Disconnect two hoses (9).
3. Remove eight screws (2) and two pump assemblies (3).
4. Remove two nozzles (10), strainers (5), and hoses (4) from pump assemblies (3).
5. Remove cover (7), reservoir (6), and pad (8).



397-647

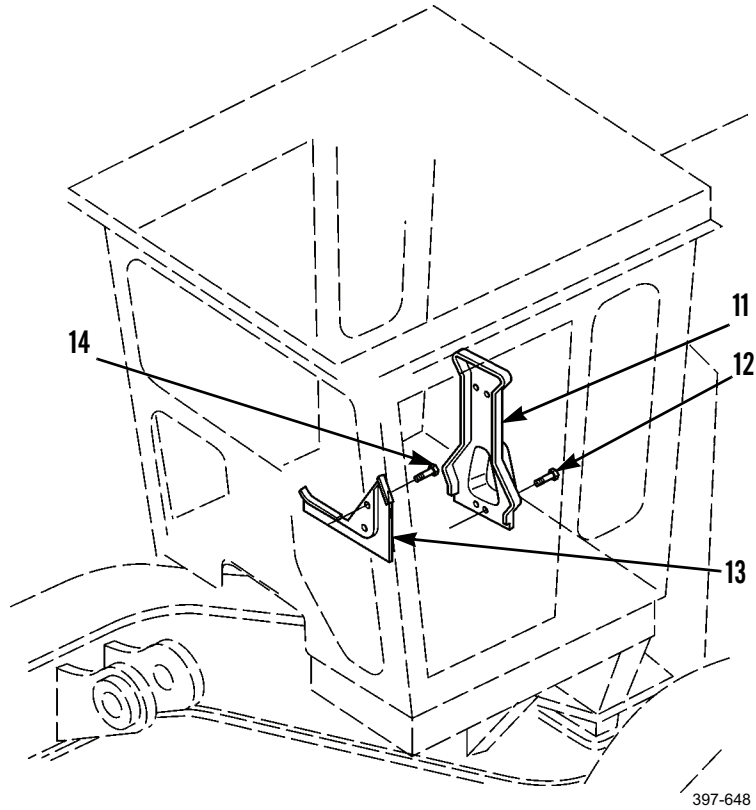
REMOVAL - CONTINUED

6. Remove two screws (14) and cover (13) from left-front interior of cab.

NOTE


Open bottom-left window to aid in removal.

7. Remove four screws (12) and panel (11).



REMOVAL - CONTINUED

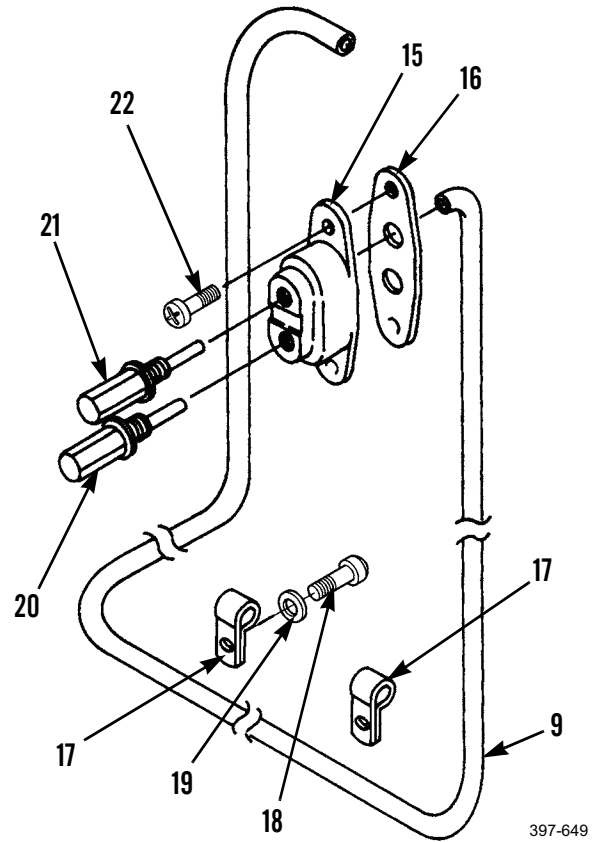8. Remove three screws (18), washers (19), and six clips (17).
9. Remove two hoses (9).
10. Remove upper nozzle assembly (21), lower nozzle assembly (20), two screws (22), bracket (15), and gasket (16) from center exterior of cab. Discard gasket.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

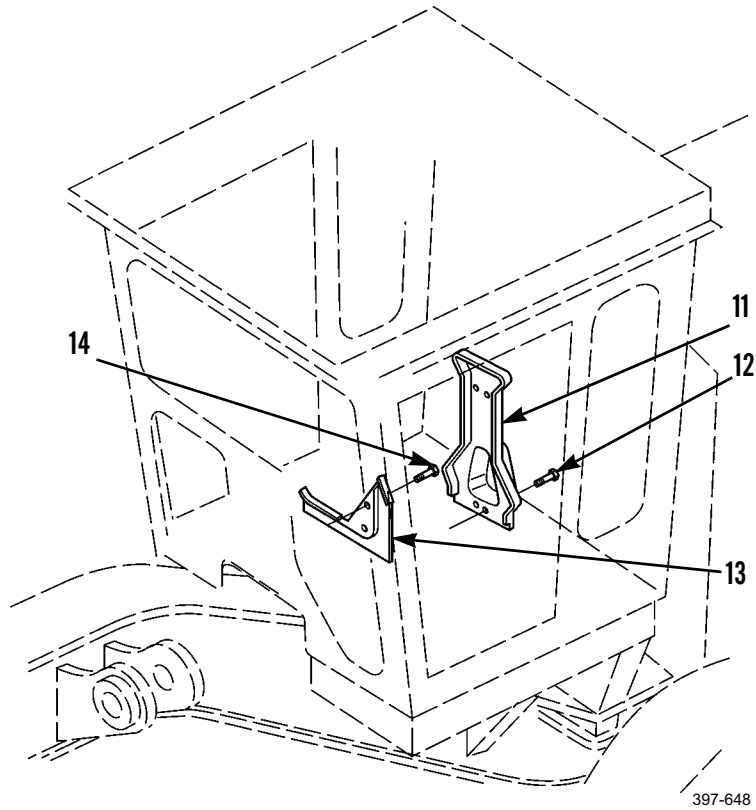
1. Install new gasket (16), bracket (15), two screws (22), lower nozzle assembly (20), and upper nozzle assembly (21) in center exterior of cab.
2. Install two hoses (9).
3. Install six clips (17), three washers (19), and screws (18).

NOTE

Open bottom-left window to aid in installation.


INSTALLATION - CONTINUED

4. Install panel (11) and four screws (12) in left-front interior of cab.
5. Install cover (13) and two screws (14).



INSTALLATION - CONTINUED

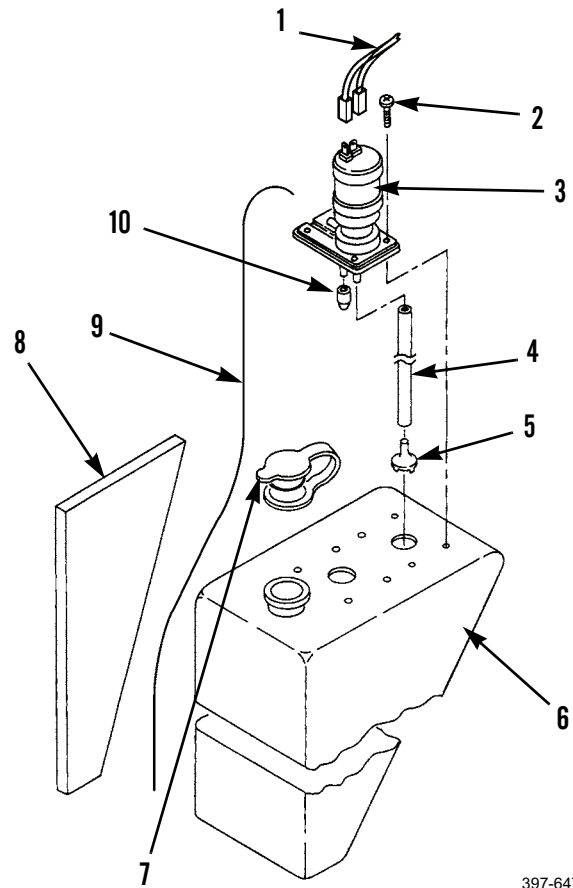6. Install pad (8), reservoir (6), and cover (7).
7. Install two hoses (4), strainers (5), and nozzles (10).
8. Install two pump assemblies (3) and eight screws (2).
9. Connect two hoses (9) and four wire assemblies (1).



397-647

10. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

FRONT AND REAR DEFROSTER FANS AND MOUNTING MAINTENANCE (CCE MACHINE)

0210 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Bolt, self-locking

Lockwasher (4)

Nut, self-locking (2)

Screw, tapping

Parking/emergency brake applied (TM 5-3805-261-10)

Equipment lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

REMOVAL

NOTE

- This procedure covers maintenance of the rear defroster fan. Follow these instructions for the front defroster fan.
- Support defroster fan with one hand when removing final bolt. Do not let defroster fan hang by wire assembly.

**FRONT AND REAR DEFROSTER FANS AND MOUNTING
MAINTENANCE (CCE MACHINE) - CONTINUED**

0210 00

REMOVAL - CONTINUED

1. Remove four bolts (6) and lockwashers (5). Discard lockwashers.

NOTE

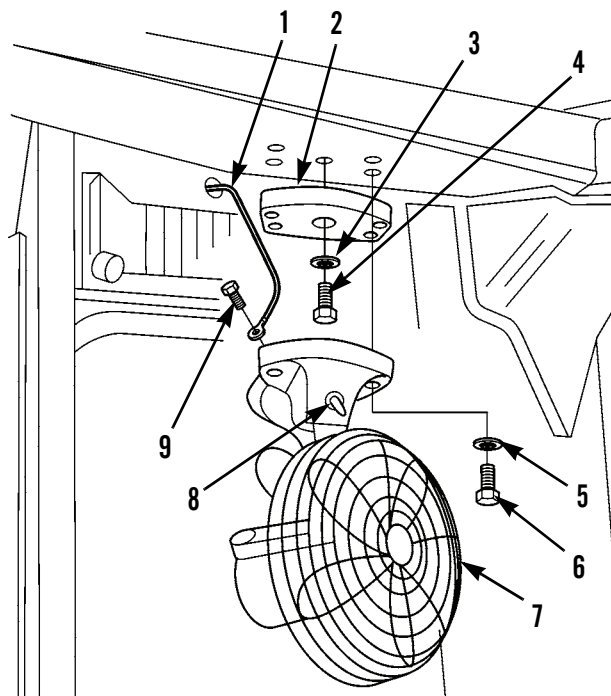
Tag wire assemblies before disconnecting to aid in installation.

2. Remove screw (9) and disconnect wire assembly (1) from terminal of switch (8).
3. Remove defroster fan (7).

NOTE

Front defroster fan has extra bracket, two screws, and washers. Rear defroster fan has extra self-locking bolt and washer. Both front and rear defroster fans have spacer.


4. Remove self-locking bolt (4), washer (3), and spacer (2). Discard self-locking bolt.



397-650

DISASSEMBLY

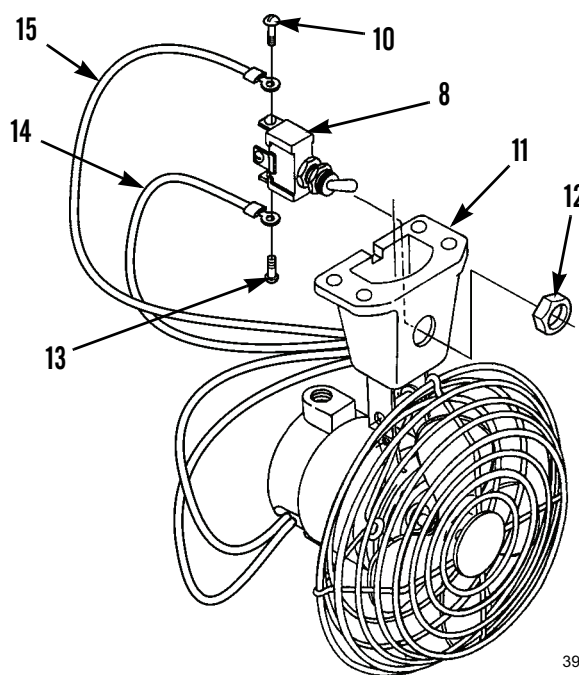1. Remove nut (12) and lift switch (8) out of base (11).
2. Remove screw (10) and disconnect wire assembly (15) from terminal of switch (8).
3. Remove screw (13) and disconnect wire assembly (14) from terminal of switch (8).
4. Remove switch (8).




397-651

**FRONT AND REAR DEFROSTER FANS AND MOUNTING
MAINTENANCE (CCE MACHINE) - CONTINUED**

0210 00

DISASSEMBLY - CONTINUED

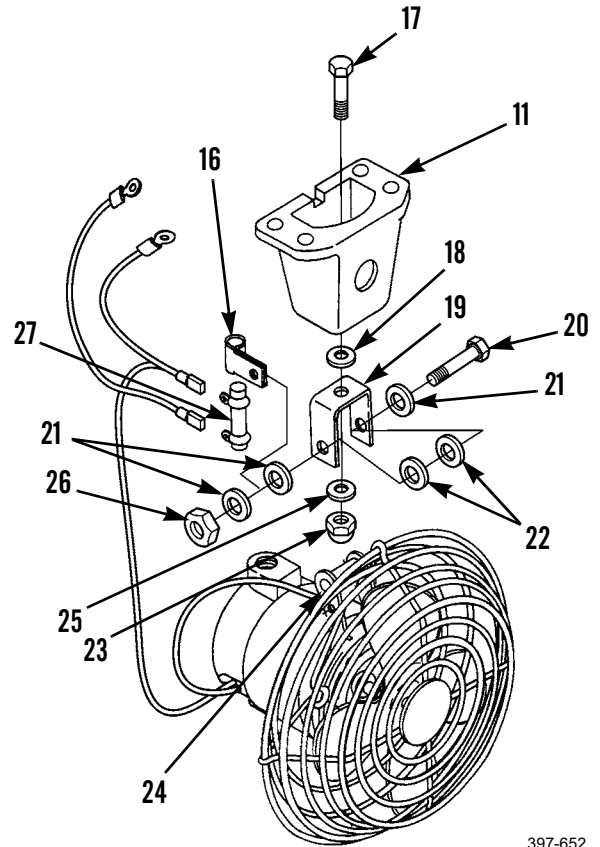5. Remove self-locking nut (26), three washers (21), clip (16), resistor (27), two washers (22), and bolt (20) from support (24). Discard self-locking nut.
6. Remove self-locking nut (23), washer (25), bracket (19), washer (18), bolt (17), and base (11). Discard self-locking nut.




397-652

**FRONT AND REAR DEFROSTER FANS AND MOUNTING
 MAINTENANCE (CCE MACHINE) - CONTINUED**

0210 00

DISASSEMBLY - CONTINUED

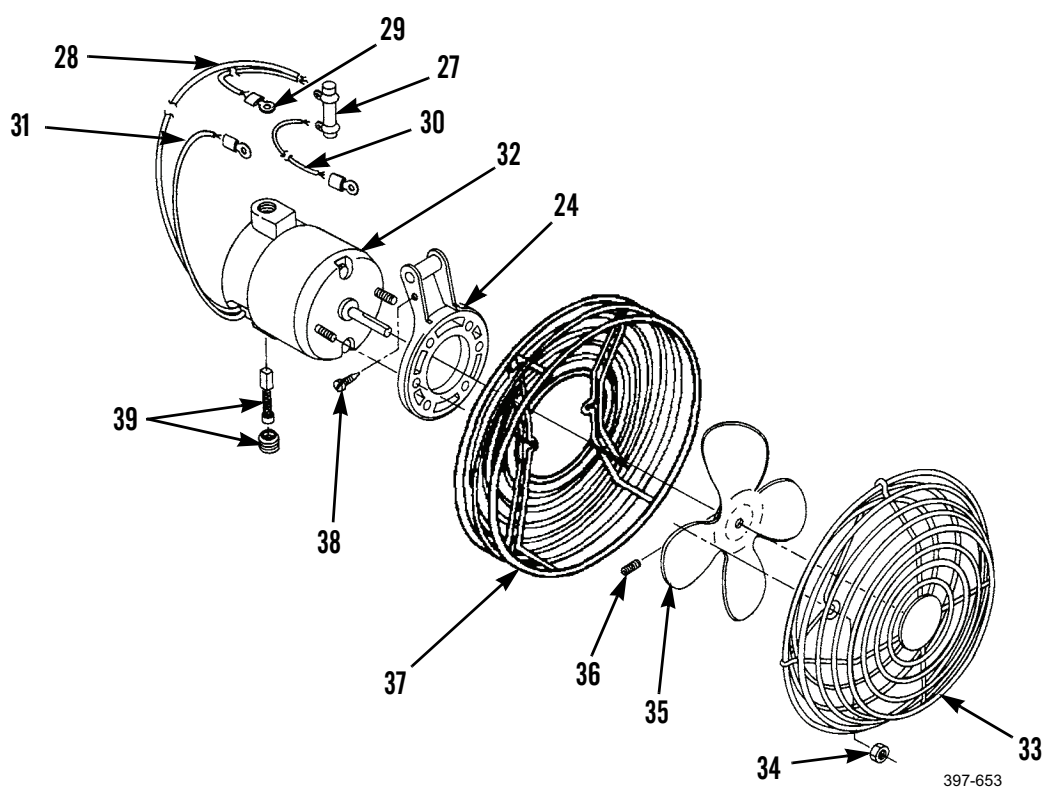7. Remove outer fan guard (33) from inner fan guard (37) by detaching four hooks on outer fan guard.
8. Remove setscrew (36) and fan (35) from motor (32).
9. Remove tapping screw (38) and disconnect wire assembly (31) from terminal of support (24). Discard tapping screw.
10. Remove two nuts (34), inner fan guard (37), and support (24) from motor (32).
11. Remove brush set (39) from motor (32).
12. Remove wire assemblies (28, 29, and 30) from terminals of resistor (27).


CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

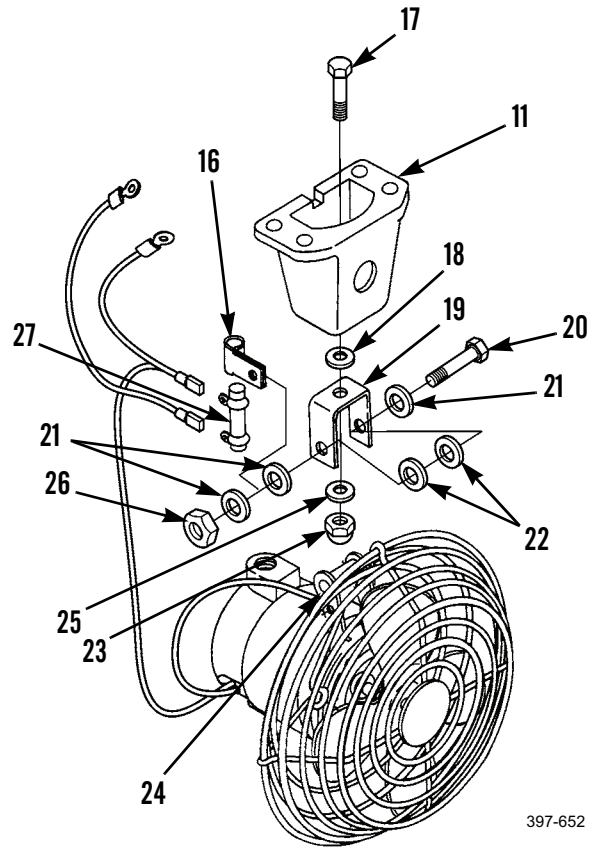
1. Install wire assemblies (30, 29, and 28) to terminals of resistor (27).
2. Install brush set (39) in motor (32).
3. Install support (24), inner fan guard (37), and two nuts (34) on motor (32).
4. Connect wire assembly (31) and install new tapping screw (38) to terminal of support (24).
5. Install fan (35) and setscrew (36) on motor (32).
6. Attach outer fan guard (33) to inner fan guard (37) by using hooks on outer fan guard.

**FRONT AND REAR DEFROSTER FANS AND MOUNTING
MAINTENANCE (CCE MACHINE) - CONTINUED**

0210 00


ASSEMBLY - CONTINUED

7. Install base (11), bolt (17), washer (18), bracket (19), washer (25), and new self-locking nut (23).
8. Install bolt (20), two washers (22), resistor (27), clip (16), three washers (21), and new self-locking nut (26) on support (24).



397-652

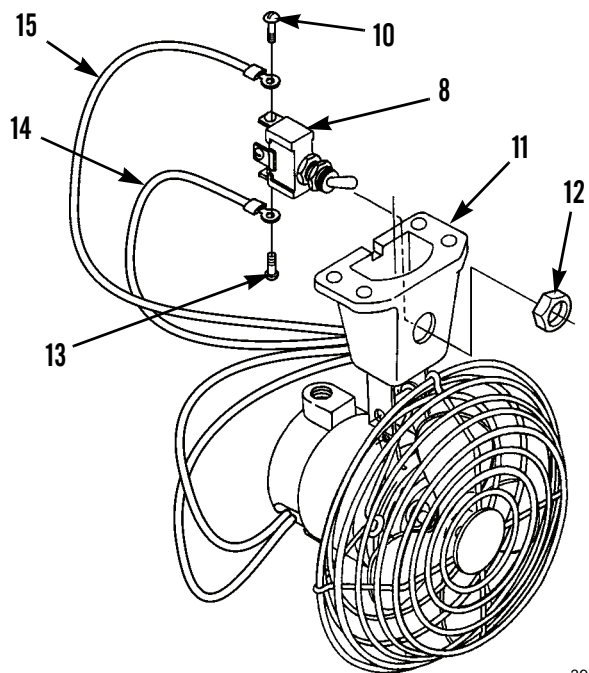9. Connect wire assembly (14) and install screw (13) to terminal of switch (8).
10. Connect wire assembly (15) and install screw (10) to terminal of switch (8).
11. Position switch (8) in base (11) and install nut (12).



397-651

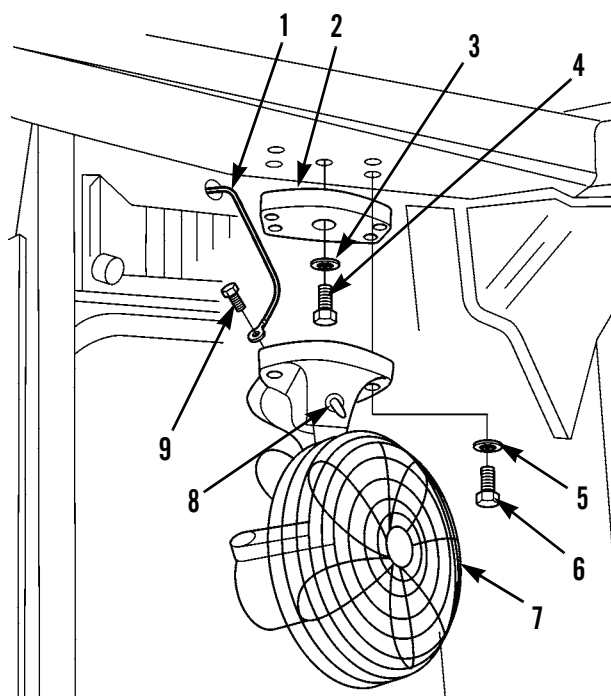
**FRONT AND REAR DEFROSTER FANS AND MOUNTING
MAINTENANCE (CCE MACHINE) - CONTINUED**

0210 00

INSTALLATION**NOTE**

Front defroster fan has extra bracket, two screws, and washers. Rear defroster fan has extra self-locking bolt and washer. Both front and rear defroster fans have spacer.

1. Install spacer (2), washer (3), and new self-locking bolt (4).
2. Connect wire assembly (1) and install screw (9) to terminal of switch (8).
3. Install defroster fan (7), four new lockwashers (5), and bolts (6).



397-650

4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

HEATER LINES AND FITTINGS REPLACEMENT (CCE MACHINE)

0211 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Heater removed (WP 0212 00)

REMOVAL

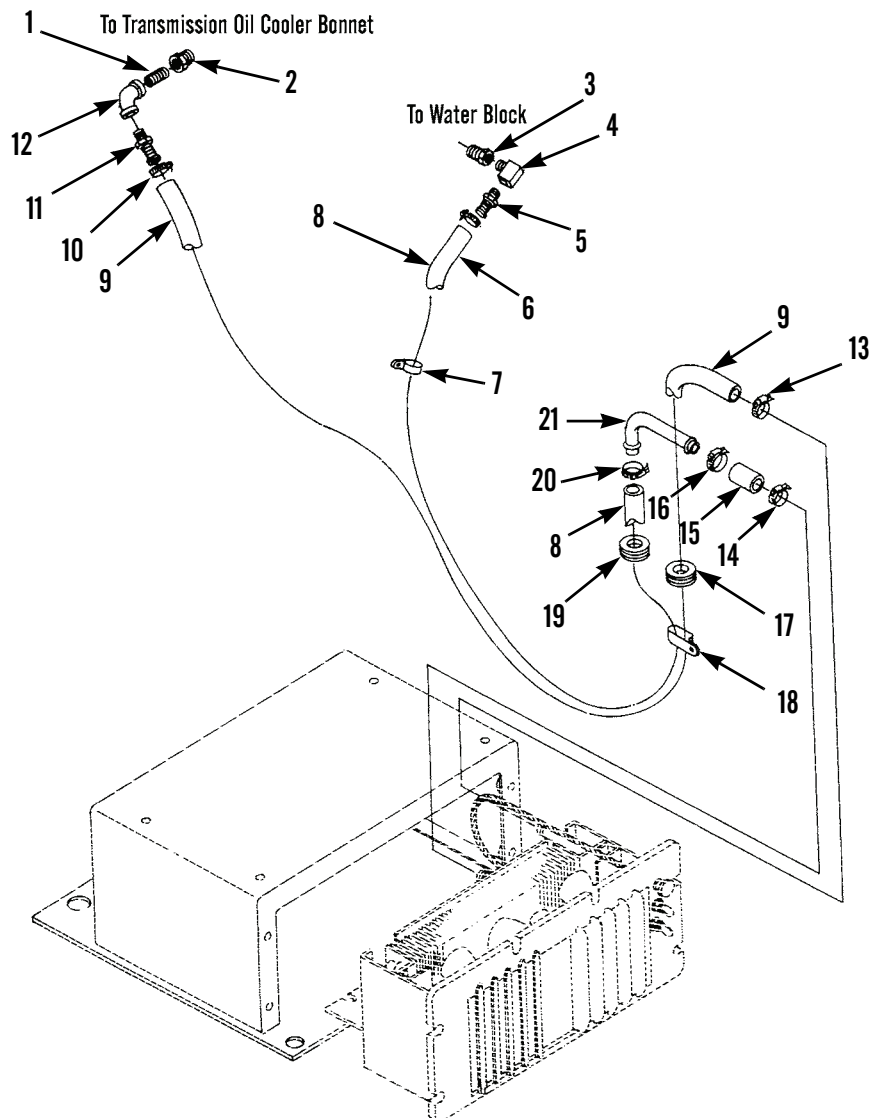
CAUTION

Cap hose ends and plug openings to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

1. Remove clip (7).
2. Remove clamps (6 and 10) and disconnect hoses (8 and 9) from adapters (5 and 11).
3. Remove adapters (5 and 11), elbows (4 and 12), nipple (1), and bushings (2 and 3).
4. Remove clamps (14 and 16) from hose (15).
5. Remove clamp (13) and grommet (17) from hose (9).
6. Remove tube (21), clamp (20), and grommet (19) from hose (8).
7. Remove clip (18).



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install clip (18).
2. Install grommet (19), clamp (20), and tube (21) to hose (8).
3. Install grommet (17) and clamp (13) to hose (9).
4. Install clamps (14) and (16) to hose (15).
5. Install bushings (2 and 3), nipple (1), elbows (4 and 12), and adapters (5 and 11).
6. Install hoses (8 and 9) and clamps (6 and 10) on adapters (5 and 11).
7. Install clip (7).
8. Install heater (WP 0212 00).

END OF WORK PACKAGE

HEATER MAINTENANCE (CCE MACHINE)

0212 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Gasket

Grommet

Lockwasher

Screw, tapping (4)

Seal

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

Cooling system drained (WP 0065 00)

Seat removed (WP 0200 00)

REMOVAL

1. Remove six bolts (16), washers (15), and cover (17) from front seat support (6).

NOTE

Tag wire assemblies before disconnecting to aid in installation.

2. Disconnect wire assembly (12) from connector (11).
3. Remove and discard grommet (13).
4. Pull heater wiring harness (1) out of heater assembly (2).

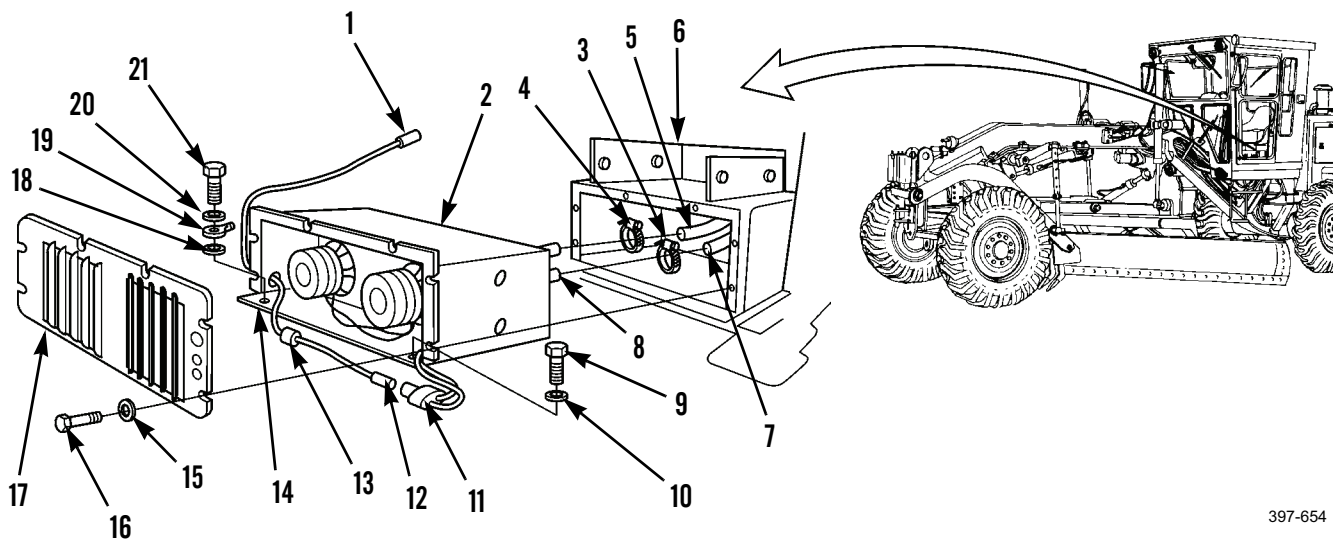
CAUTION

Cap hose ends and plug openings to prevent contamination.

NOTE

Tag hoses before disconnecting to aid in installation.

5. Loosen clamp (4) and disconnect hose (5) from outlet.
6. Loosen clamp (3) and disconnect hose (7) from valve (8).
7. Remove bolt (21), lockwasher (20), clip (19), and washer (18) from right side of plate (14) of heater assembly (2). Discard lockwasher.
8. Remove bolt (9) and washer (10) from left side of plate (14) of heater assembly (2).
9. Remove heater assembly (2) from front seat support (6).



397-654

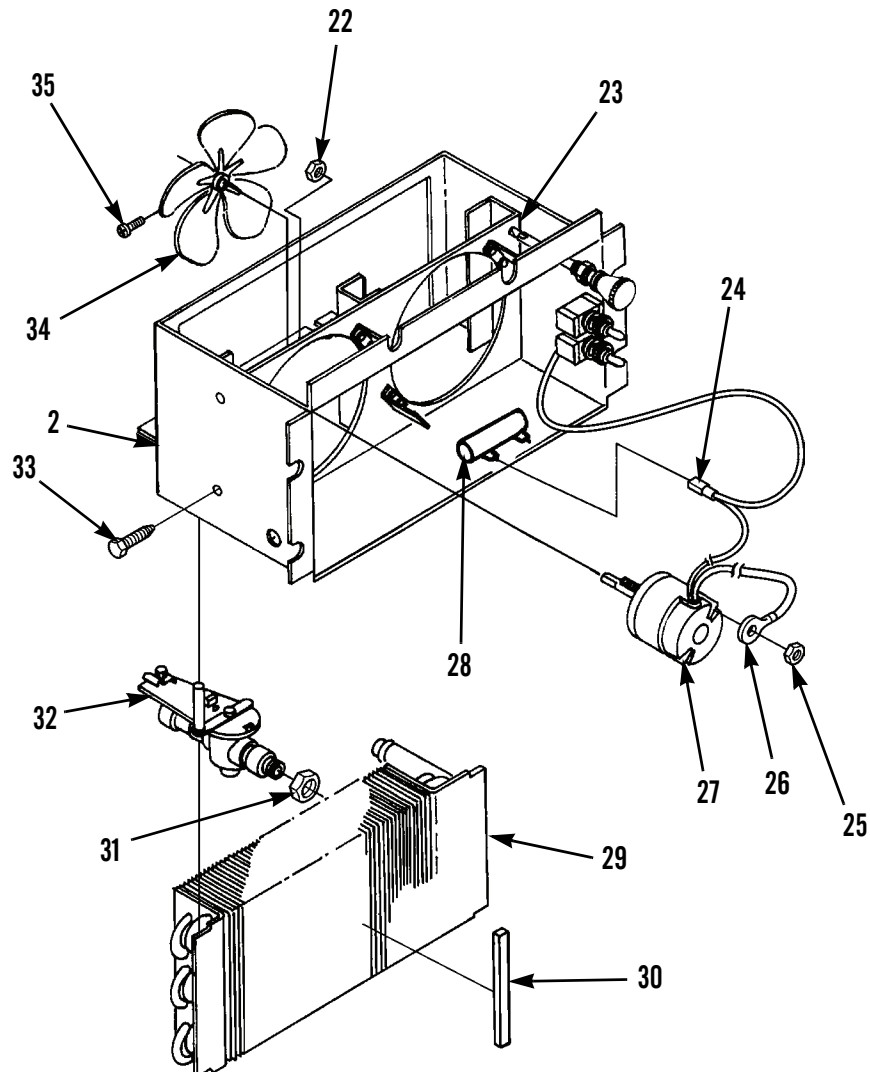
DISASSEMBLY

1. Loosen nut (31) and remove valve (32) from heater assembly (2).
2. Remove and discard four tapping screws (33).
3. Remove heater core (29) and seal (30). Discard seal.

NOTE

This procedure covers removal of the right side fan and motor assembly, resistor, and switch. Follow these instructions for the left side fan and motor assembly, resistor, and switch.


4. Loosen screw (35) and remove fan (34).
5. Remove nut (25) and disconnect wire assembly (26).
6. Disconnect wire assembly (24) from terminal of resistor (28).
7. Remove two nuts (22) and motor (27) from bracket (23).



397-655

DISASSEMBLY - CONTINUED

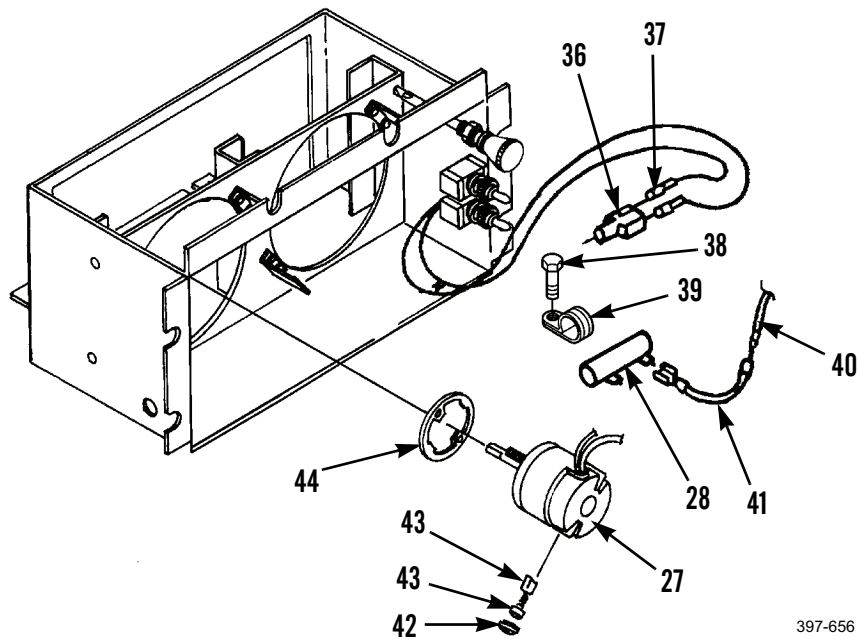
8. Remove gasket (44), cap (42), and brush set (43) from motor (27). Discard gasket.
9. Disconnect wire assembly (41) from terminal of resistor (28).
10. Remove bolt (38), clamp (39), and resistor (28).
11. Disconnect two wire assemblies (37) from connector (36).
12. Remove connector (36).
13. Disconnect wire assemblies (40 and 41).
14. Remove wire assembly (41).



397-656

DISASSEMBLY - CONTINUED

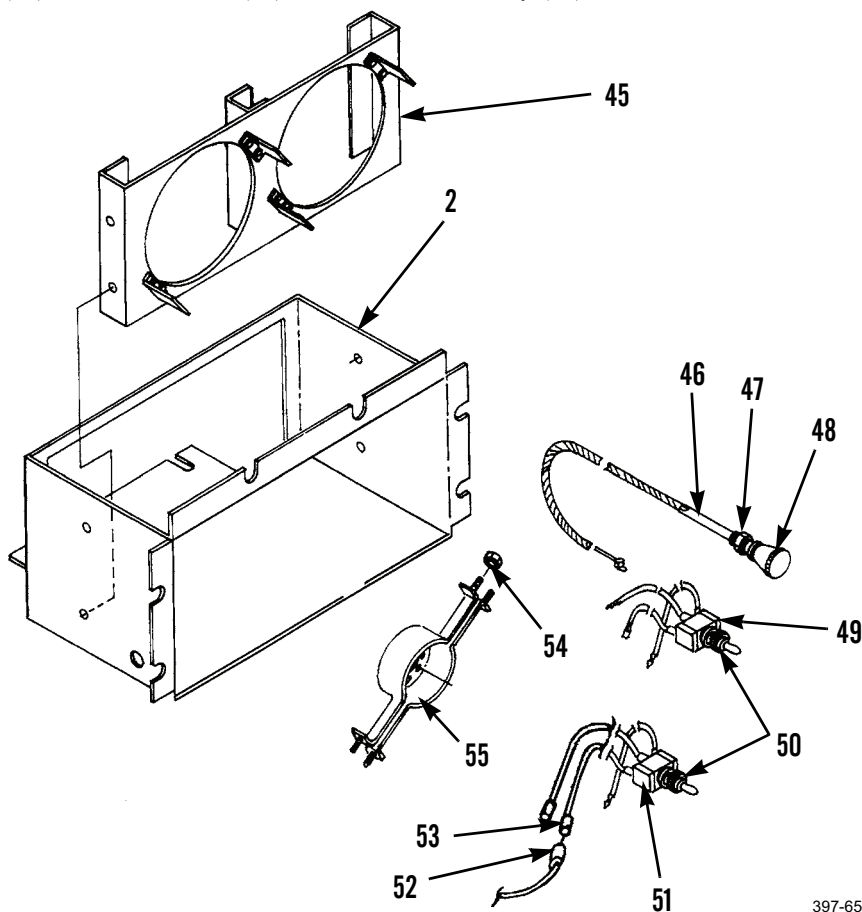15. Disconnect two wire assemblies (52 and 53) from connectors.
16. Remove two nuts (50) and switches (49 and 51).
17. Remove nut (47) and disconnect cable assembly (46).
18. Remove knob (48).
19. Remove bracket assembly (45) from heater assembly (2).
20. Remove eight nuts (54) and two brackets (55) from bracket assembly (45).



397-657

CLEANING AND INSPECTION

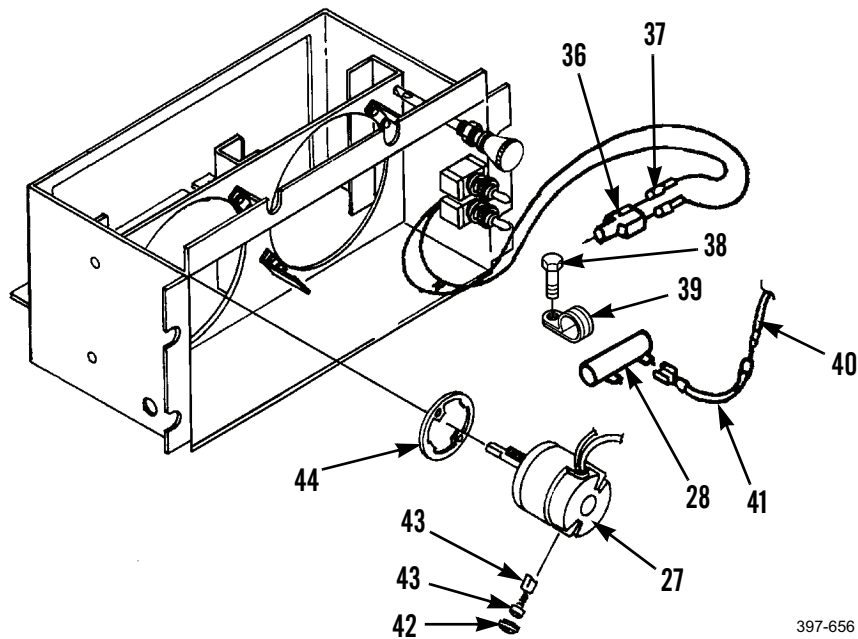
Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Install two brackets (55) and eight nuts (54) on bracket assembly (45).
2. Install bracket assembly (45) in heater assembly (2).
3. Install knob (48).
4. Connect cable assembly (46) and install nut (47).
5. Install switches (51 and 49) and two nuts (50).
6. Connect two wire assemblies (53 and 52).

ASSEMBLY - CONTINUED

7. Install wire assembly (41).
8. Connect two wire assemblies (41 and 40) to connectors.
9. Install connector (36).
10. Connect two wire assemblies (37) to connector (36).
11. Install resistor (28), clamp (39), and bolt (38).
12. Connect wire assembly (41) to terminal of resistor (28).
13. Install brush set (43), cap (42), and new gasket (44) on motor (27).




397-656

ASSEMBLY - CONTINUED

NOTE

This procedure covers installation of the right side fan and motor assembly, resistor, and switch. Follow these instructions for the left side fan and motor assembly, resistor, and switch.

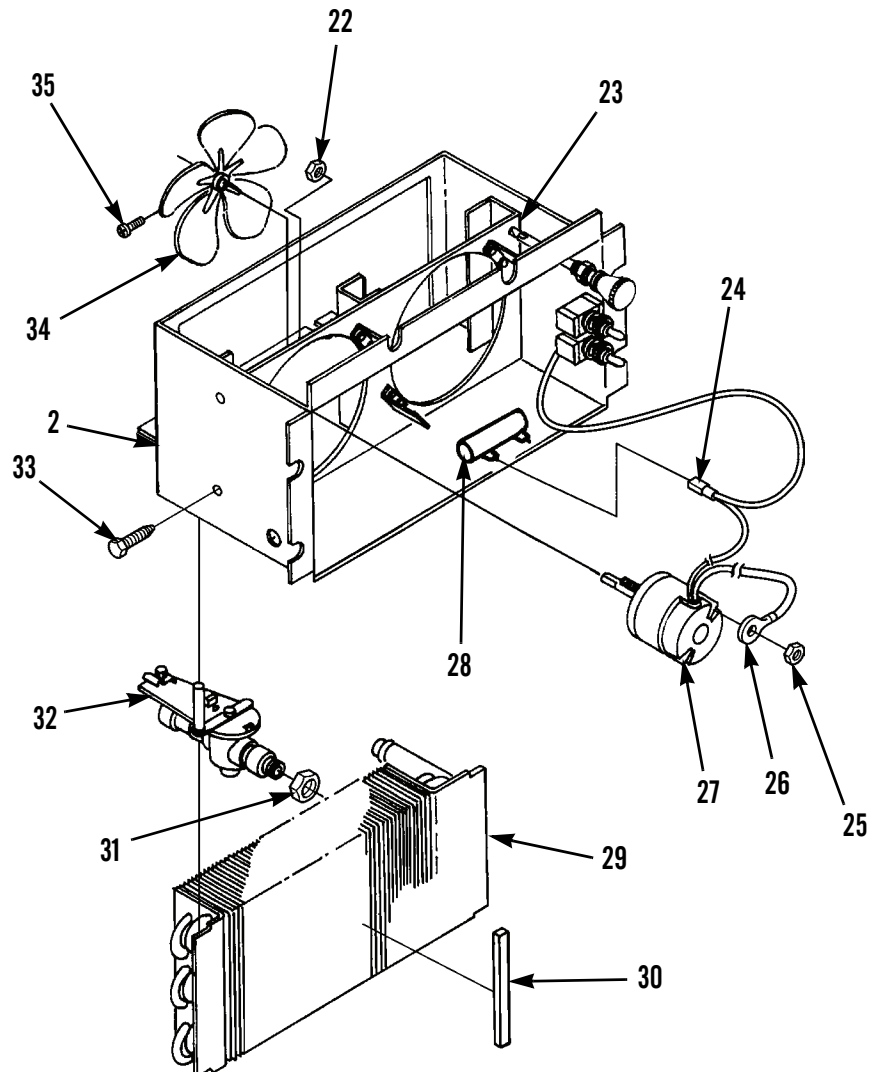
14. Install motor (27) and two nuts (22) on bracket (23).
15. Connect wire assembly (24) to terminal of resistor (28).
16. Connect wire assembly (26) and install nut (25).
17. Install fan (34) and tighten screw (35).
18. Install new seal (30) and heater core (29) in heater assembly (2).
19. Install four new tapping screws (33).
20. Install valve (32) on heater assembly (2) and tighten nut (31).



397-655

INSTALLATION

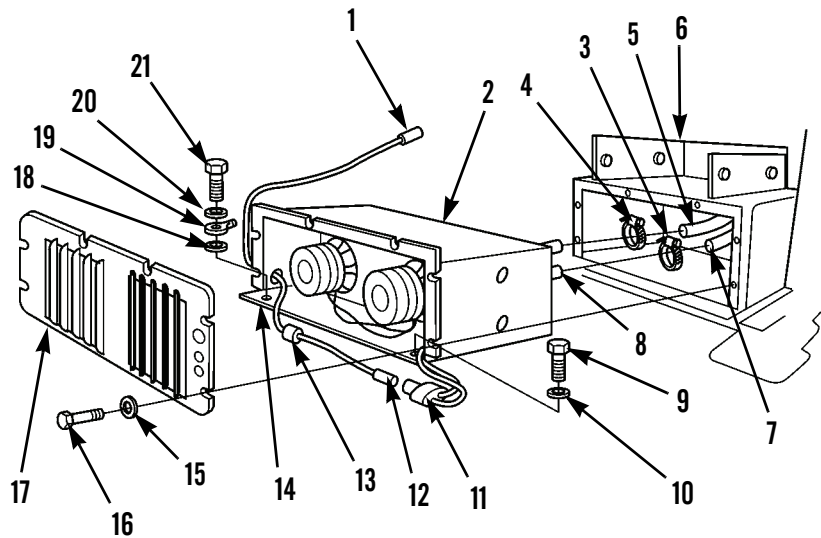1. Install heater assembly (2) in front seat support (6).
2. Install washer (10) and bolt (9) in left side of plate (14) of heater assembly (2).
3. Install washer (18), clip (19), new lockwasher (20), and bolt (21) in right side of plate (14) of heater assembly (2).
4. Connect hose (7) to valve (8) and tighten clamp (3).
5. Connect hose (5) to outlet and tighten clamp (4).
6. Place heater wiring harness (1) into heater assembly (2).
7. Install new grommet (13).
8. Connect wire assembly (12) to connector (11).
9. Install cover (17), six washers (15), and bolts (16).



397-2181

10. Install seat (WP 0200 00).
11. Fill cooling system (WP 0065 00).
12. Connect battery cables (WP 0200 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Lockwasher (4)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

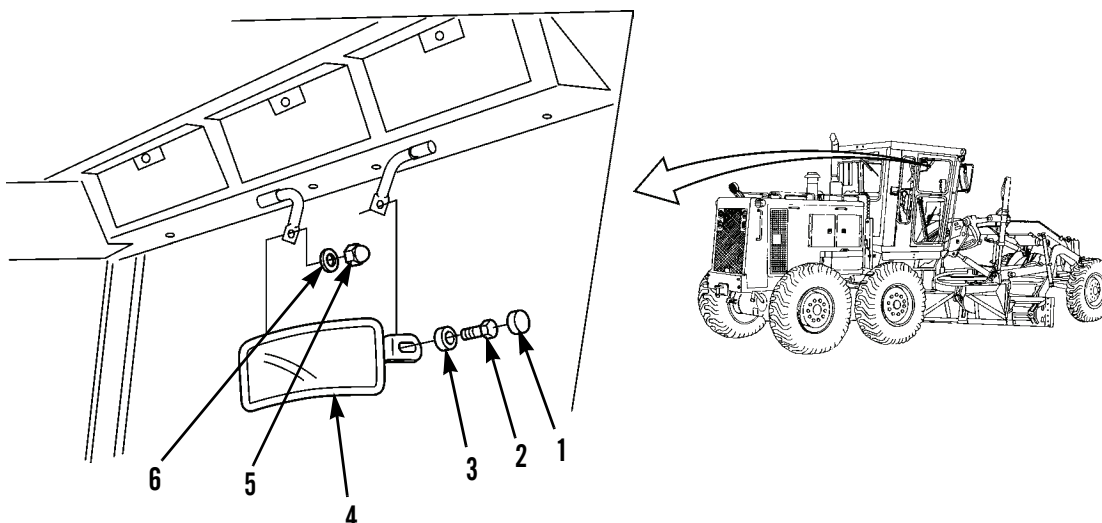
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)


REMOVAL

1. Remove two caps (1).
2. Remove two nuts (5), washers (6), bolts (2), washers (3), and mirror (4).



REMOVAL - CONTINUED

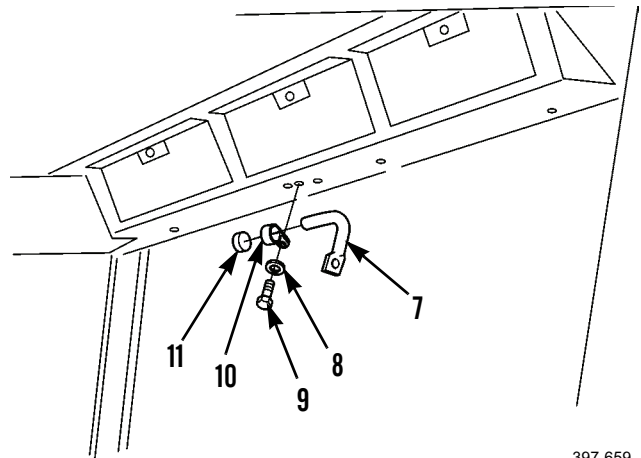3. Remove four bolts (9) and lockwashers (8). Discard lockwashers.
4. Remove two plugs (11), clamps (10), and arms (7).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

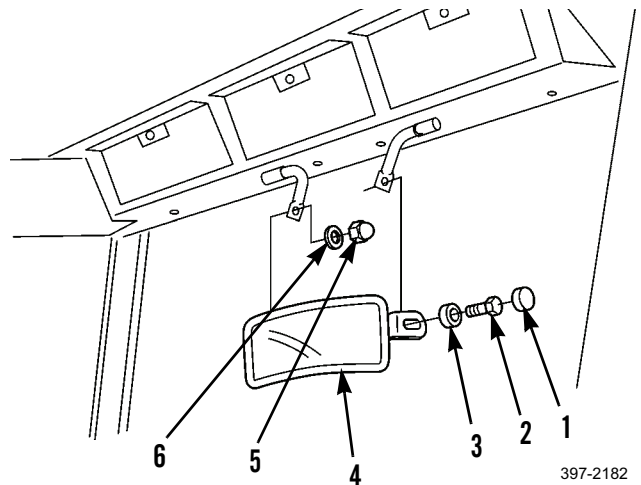1. Install two arms (7), clamps (10), and plugs (11).
2. Install four new lockwashers (8) and bolts (9).
3. Install mirror (4), two washers (3), bolts (2), washers (6), and nuts (5).
4. Install two caps (1).



END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Lockwasher (4)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

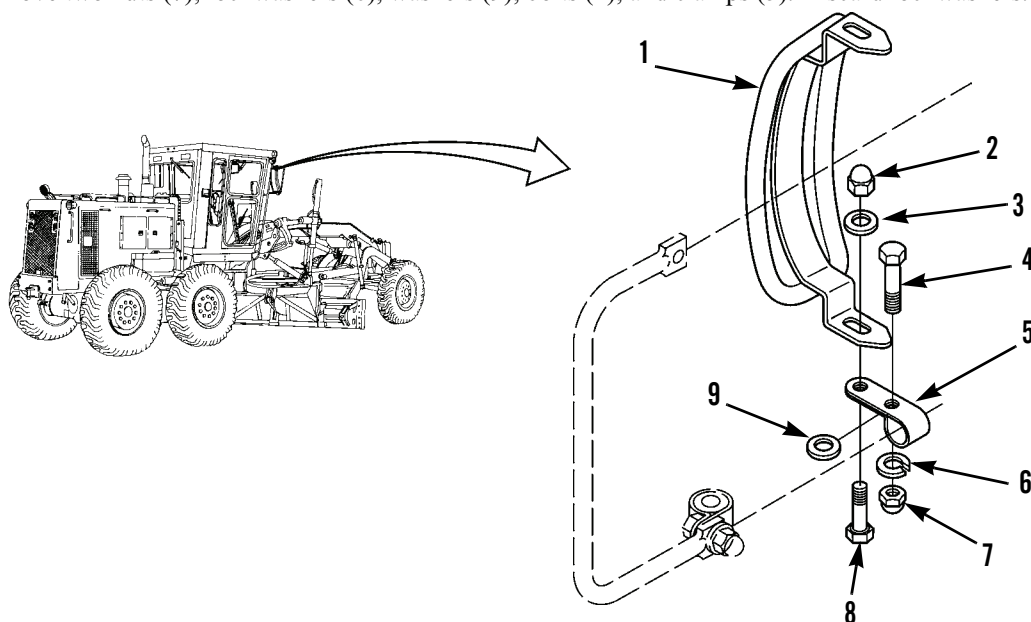
Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

NOTE

This procedure covers replacement of the right outside sideview mirror. Follow these instructions for the left outside sideview mirror.

1. Remove two nuts (2), washers (3), bolts (8), and mirror (1).
2. Remove two nuts (7), lockwashers (6), washers (9), bolts (4), and clamps (5). Discard lockwashers.




397-660

**OUTSIDE SIDEVIEW MIRRORS REPLACEMENT
(MODELS 130G, 130GSCE, AND 130GNSCE - CONTINUED)**

0214 00

REMOVAL - CONTINUED

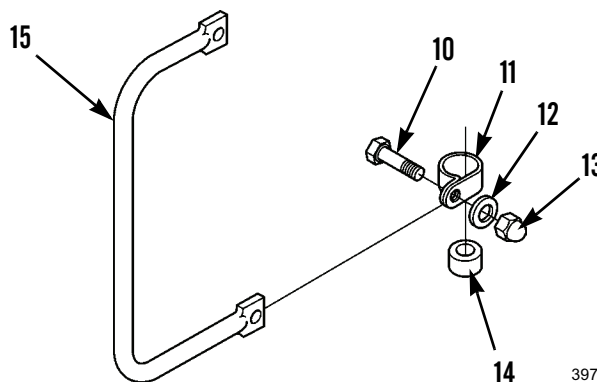3. Remove two nuts (13), washers (12), bolts (10), clamps (11), tread spacers (14), and arm (15).




397-661

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

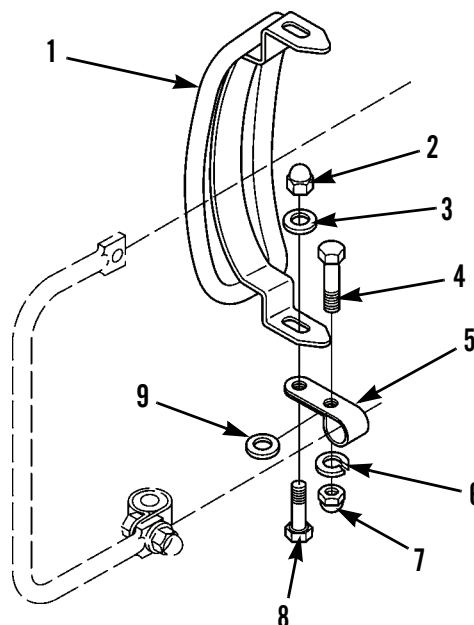1. Install two tread spacers (14) on two clamps (11) with knurled side on clamp halves.
2. Install arm (15), two clamps (11), bolts (10), washers (12), and nuts (13). Tighten nuts to 19 lb-ft (26 Nm).
3. Install two clamps (5), bolts (4), washers (9), new lockwashers (6), and nuts (7).
4. Install mirror (1), two bolts (8), washers (3), and nuts (2).



397-2183

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Data Plate (Drive Screw) Replacement, Data Plate (Machine Screw) Replacement, Decal Replacement

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Heater, gun type, electric (Item 30, WP 0348 00)

Materials/Parts

Detergent (Item 11, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Lockwasher (as required)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

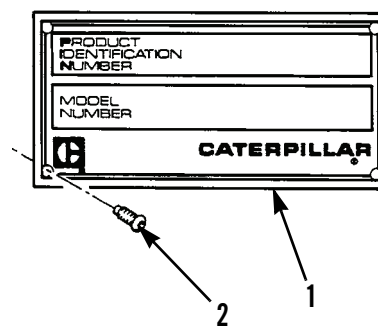
Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

DATA PLATE (DRIVE SCREW) REPLACEMENT


1. Remove four drive screws (2) and data plate (1).
2. Install data plate (1) and four drive screws (2).



397-663

DATA PLATE (MACHINE SCREW) REPLACEMENT

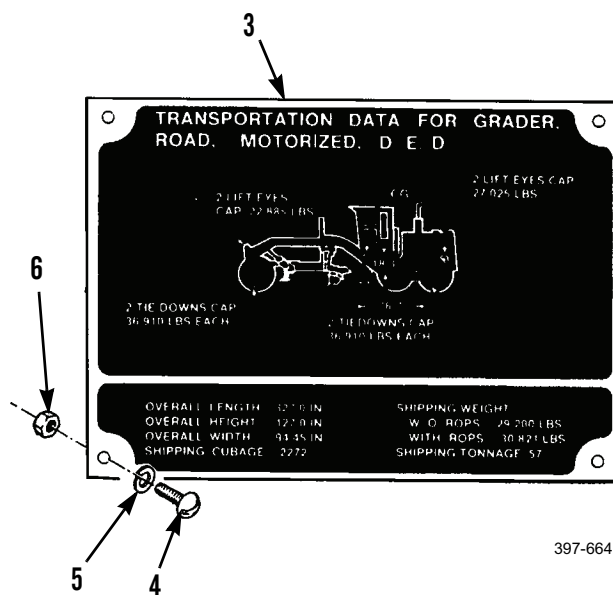1. Remove four nuts (6), machine screws (4), lockwashers (5), and data plate (3). Discard lockwashers.
2. Install data plate (3), four new lockwashers (5), machine screws (4), and nuts (6).




397-664

DECAL REPLACEMENT

NOTE

Use heat gun as necessary to aid in removing decal.

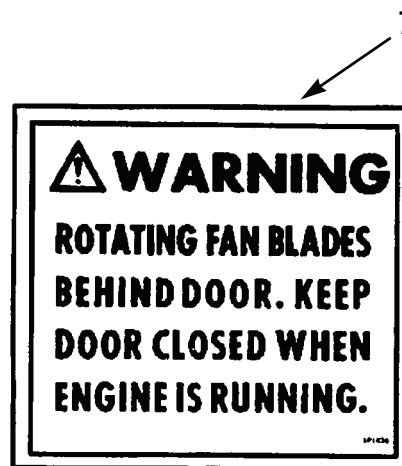1. Lift and peel off decal (7) to remove from surface of machine.
2. Clean any remaining adhesive from surface of machine using detergent. Rinse and dry area.
3. Peel off paper backing from new decal (7) and apply to surface of machine.



397-665

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Draining, Cleaning and Inspection, Refilling

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Oil, lubricating (Item 26, 27, or 29, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)



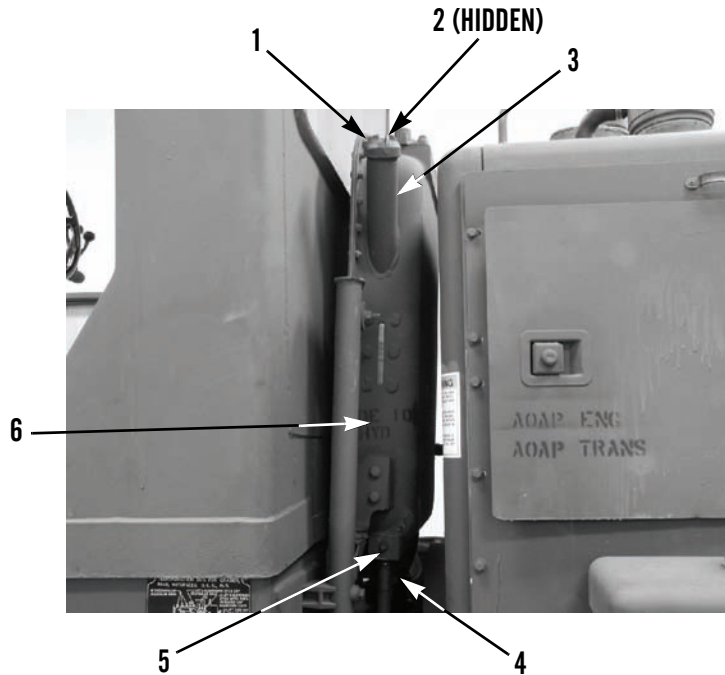
WARNING



- Exercise care when working with hot oil or components saturated with hot oil. Allow machine to cool before draining oil. Failure to follow this warning may cause injury to personnel.
- Oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

DRAINING

1. Remove hydraulic tank fill cap (1).
2. Remove filter screen (2) from fill tube (3).
3. Position drain pan under drain hose (4).
4. Loosen drain plug (5) on hydraulic tank (6) and allow oil to drain.



397-1090A

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

REFILLING

1. Tighten drain plug (5) on hydraulic tank (6).
2. Install filter screen (2) in fill tube (3).
3. Add oil to hydraulic tank through fill tube (3). See WP 0020 00 for hydraulic tank capacity.
4. Check oil level with sight gauge (7). Oil should be at FULL mark.
5. Install hydraulic tank fill cap (1).
6. Turn battery disconnect switch to ON position and start engine (TM 5-3805-261-10).
7. Operate each hydraulic control through its full motion at least three times (TM 5-3805-261-10).
8. Shut down engine and check hydraulic oil level. Oil level should be at FULL mark.
9. If necessary, remove hydraulic tank fill cap (1) and add oil until level is at FULL mark.
10. Check for oil leaks.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring (2) or seal (4)

References

WP 0020 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL**WARNING**

Oil is very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

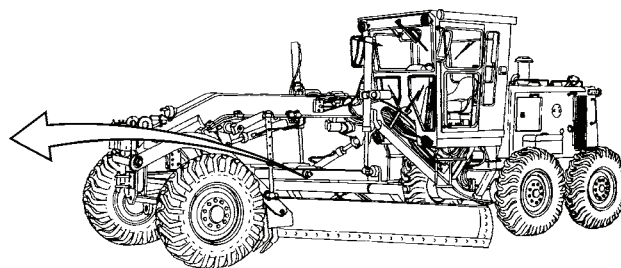
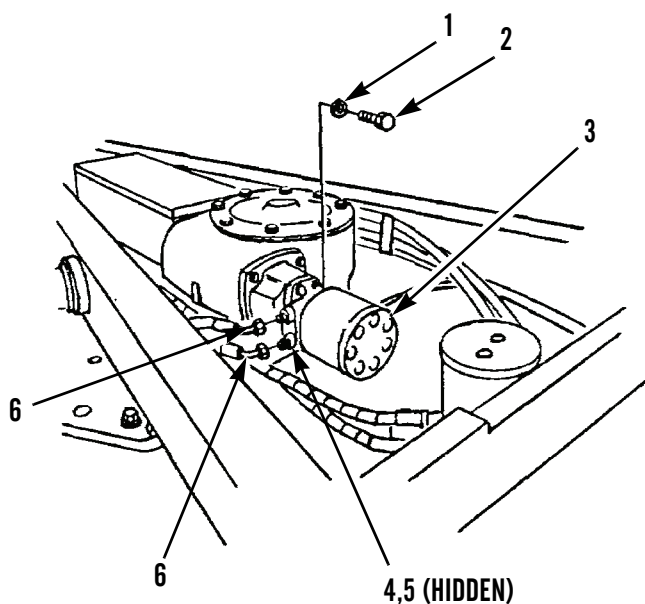
Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect two hose assemblies (6) from connectors (4) on circle drive motor (3).

NOTE

Later configuration machines have four seals instead of two O-rings.

2. Remove and discard two O-rings (5) or four seals (5).
3. Remove two connectors (4).
4. Remove four bolts (2), washers (1), and circle drive motor (3).



397-668

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

Hose ports of circle drive motor face outside left.

1. Install circle drive motor (3), four washers (1), and bolts (2).

NOTE

Later configuration machines have four seals instead of two O-rings.

2. Install two new O-rings (5).
3. Install two connectors (4).
4. Connect two hose assemblies (6) to connectors (4) on circle drive motor (3).

**WARNING**

If machine is parked indoors, DO NOT run engine unless exhaust fumes are vented to the outside. Failure to follow this warning may cause injury or death due to carbon monoxide poisoning.

5. Start engine (TM 5-3805-261-10).
6. Operate circle drive control lever. Move system through at least five full movements of travel to bleed air from system (TM 5-3805-261-10).
7. Stop engine.
8. Inspect hose assemblies and connections. Check for leaks.
9. Refill hydraulic tank to proper level (WP 0216 00).

END OF WORK PACKAGE

HYDRAULIC CONTROL LINKAGES MAINTENANCE

0218 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation, Adjustment

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Lockwasher

Pin, cotter

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805 261-10)

Parking/emergency brake applied (TM 5-3805 261-10)

Implements lowered to ground (TM 5-3805 261-10)

Engine off (TM 5-3805 261-10)

Battery disconnect switch in OFF position (TM 5-3805 261-10)

Plastic moldings removed (CCE machine) (WP 0194 00)

REMOVAL**NOTE**

This procedure covers replacement of the scarifier control lever. Follow these instructions for the remaining control levers.

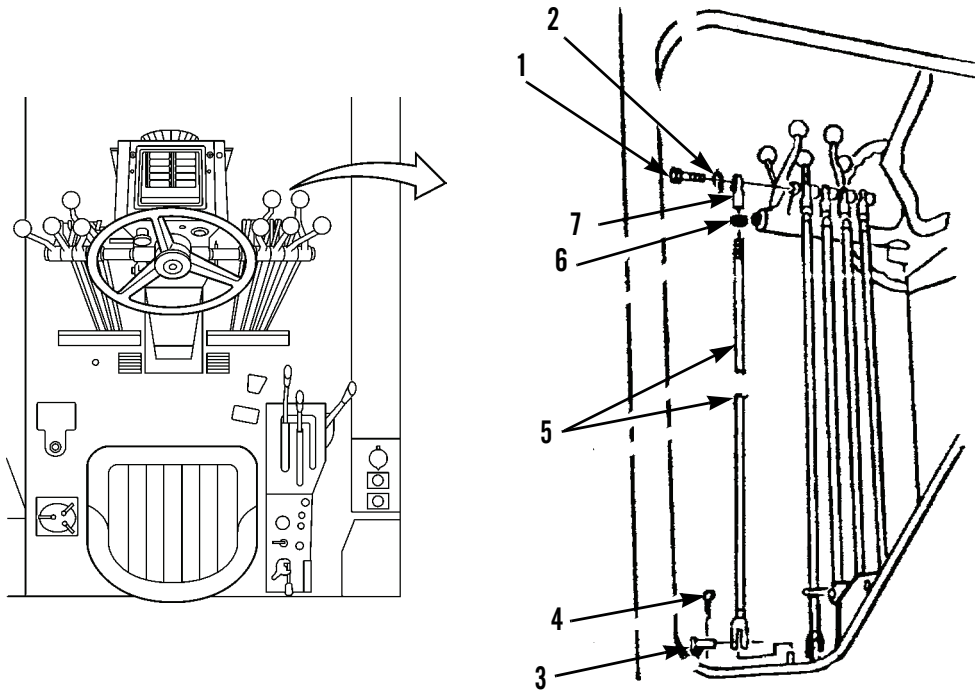
REMOVAL - CONTINUED

1. Remove bolt (1) and lockwasher (2). Discard lockwasher.
2. Remove rod end (7) and nut (6) from rod (5).

NOTE

Control levers must be out of alignment to provide adequate clearance for removal of pins and bolts.

3. Remove cotter pin (4), pin (3), and rod (5). Discard cotter pin.



397-703

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install rod (5), pin (3), and new cotter pin (4).
2. Install nut (6) and rod end (7).
3. Install new lockwasher (2) and bolt (1).

ADJUSTMENT**NOTE**

The following is an adjustment procedure for the scarifier control lever. The adjustment procedure for the remaining control levers is identical.

1. Remove bolt (1) and lockwasher (2).
2. Loosen nut (6) on rod (5).
3. Adjust rod end (7) on rod (5) so that bolt (1) will slide through rod end (7) without putting tension on bolt when installed.
4. Install new lockwasher (2) and bolt (1).
5. Tighten nut (6) on rod (5) against rod end (7).
6. Install plastic moldings (CCE machine) (WP 0194 00).

END OF WORK PACKAGE

HYDRAULIC CONTROL LEVERS REPLACEMENT

0219 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (9)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

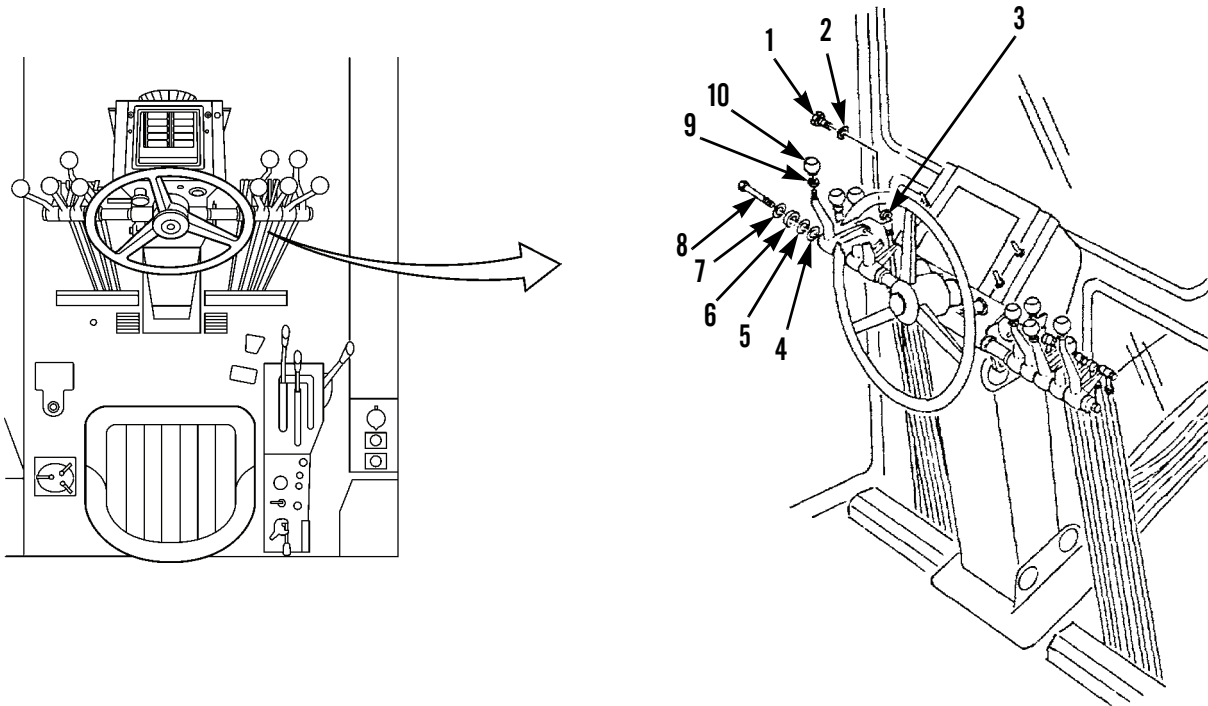
REMOVAL

1. Remove bolt (8), washer (7), retainer (6), shim (5), and bearing (4).

NOTE

Control levers must be out of alignment to provide adequate clearance for removal of linkage bolts.

2. Remove bolt (1) and lockwasher (2). Discard lockwasher.
3. Disconnect linkage (3).
4. Loosen nut (9).
5. Remove blade lift knob (10) and nut (9).




397-704

REMOVAL - CONTINUED

NOTE


Tag levers before removing to aid in installation.

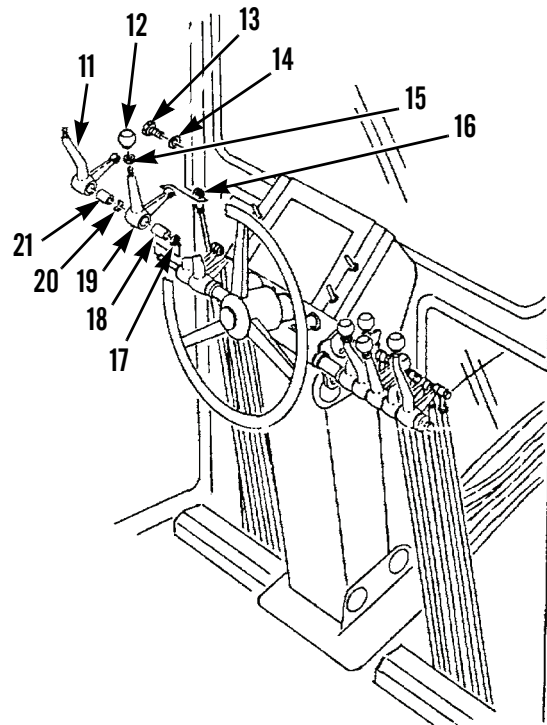6. Remove lever (11) and bearings (21 and 20).
7. Remove bolt (13) and lockwasher (14). Discard lockwasher.
8. Disconnect linkage (16).
9. Loosen nut (15).
10. Remove sideshift knob (12) and nut (15).
11. Remove lever (19) and bearings (18 and 17).



397-705

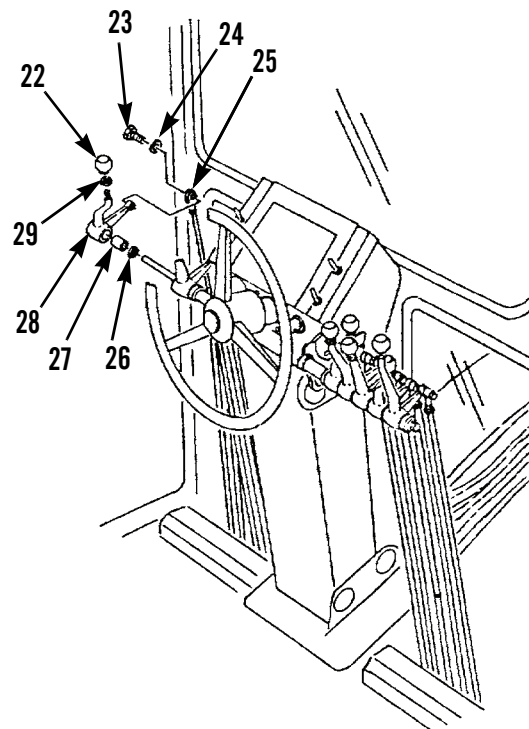12. Remove bolt (23) and lockwasher (24). Discard lockwasher.
13. Disconnect linkage (25).
14. Loosen nut (29).
15. Remove circle drive knob (22) and nut (29).
16. Remove lever (28) and bearings (27 and 26).




397-706

HYDRAULIC CONTROL LEVERS REPLACEMENT - CONTINUED

0219 00


REMOVAL - CONTINUED

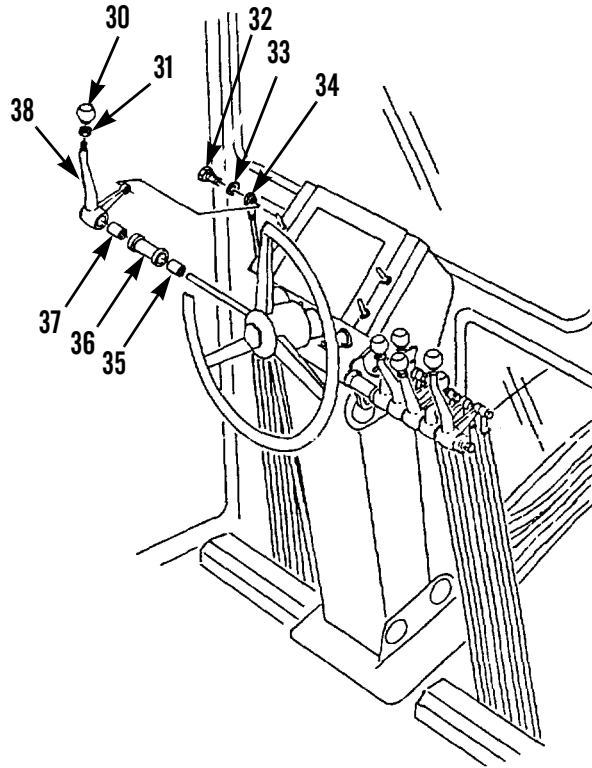17. Remove bolt (32) and lockwasher (33). Discard lockwasher.
18. Disconnect linkage (34).
19. Loosen nut (31).
20. Remove blade tip knob (30) and nut (31).
21. Remove lever (38), bearing (37), spacer (36), and bearing (35).



397-707

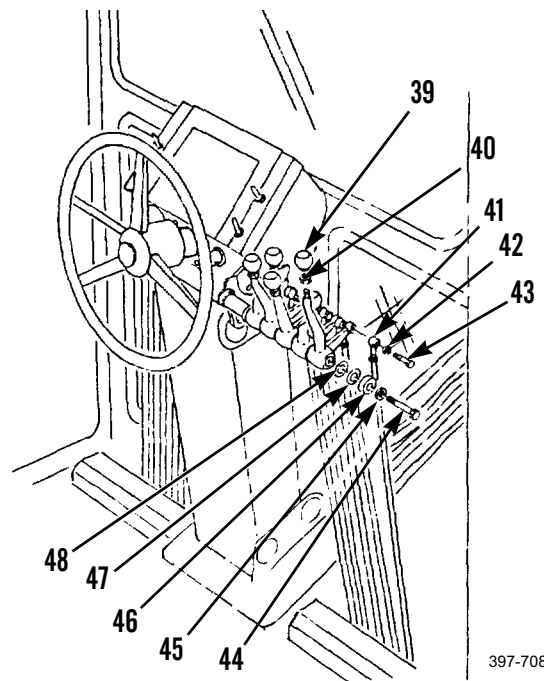22. Remove bolt (44), washer (45), retainer (46), shim (47), and bearing (48).
23. Remove bolt (43) and lockwasher (42). Discard lockwasher.
24. Disconnect linkage (41).
25. Loosen nut (40).
26. Remove scarifier knob (39) and nut (40).




397-708

HYDRAULIC CONTROL LEVERS REPLACEMENT - CONTINUED


0219 00

REMOVAL - CONTINUED

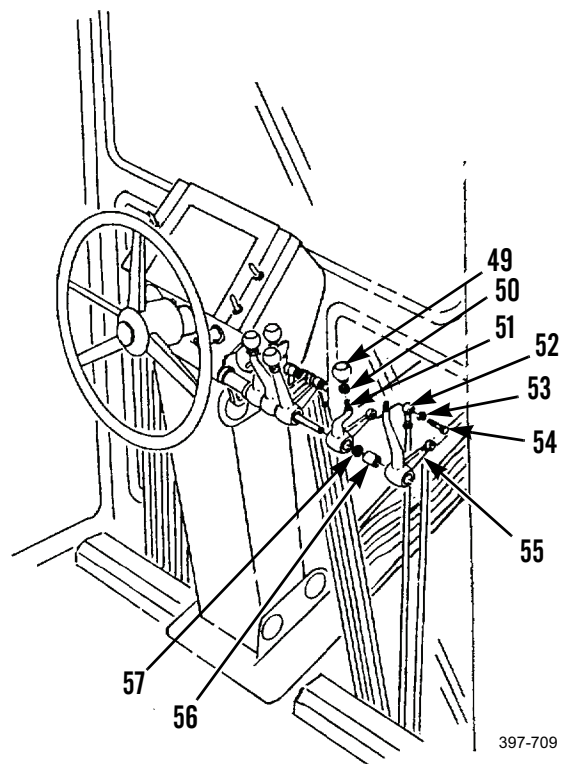27. Remove lever (55) and bearings (56 and 57).
28. Remove bolt (54) and lockwasher (53). Discard lockwasher.
29. Disconnect linkage (52).
30. Loosen nut (50).
31. Remove blade lift knob (49), nut (50), and lever (51).




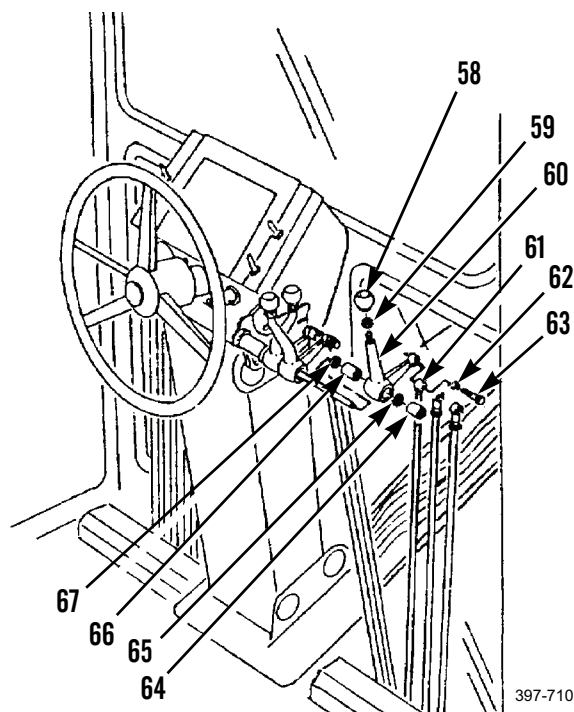32. Remove bearings (64 and 65).
33. Remove bolt (63) and lockwasher (62). Discard lockwasher.
34. Disconnect linkage (61).
35. Loosen nut (59).
36. Remove leaning wheel knob (58) and nut (59).
37. Remove lever (60) and bearings (66 and 67).




REMOVAL - CONTINUED

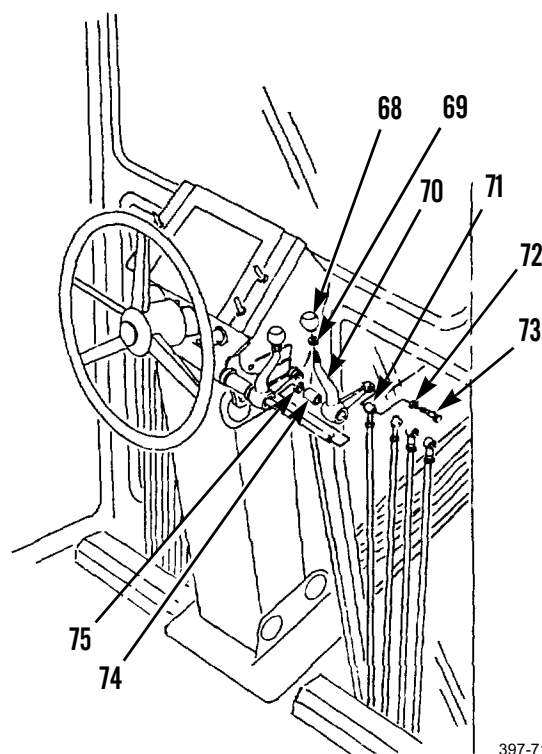38. Remove bolt (73) and lockwasher (72). Discard lockwasher.
39. Disconnect linkage (71).
40. Loosen nut (69).
41. Remove centershift knob (68) and nut (69).
42. Remove lever (70) and bearings (74 and 75).



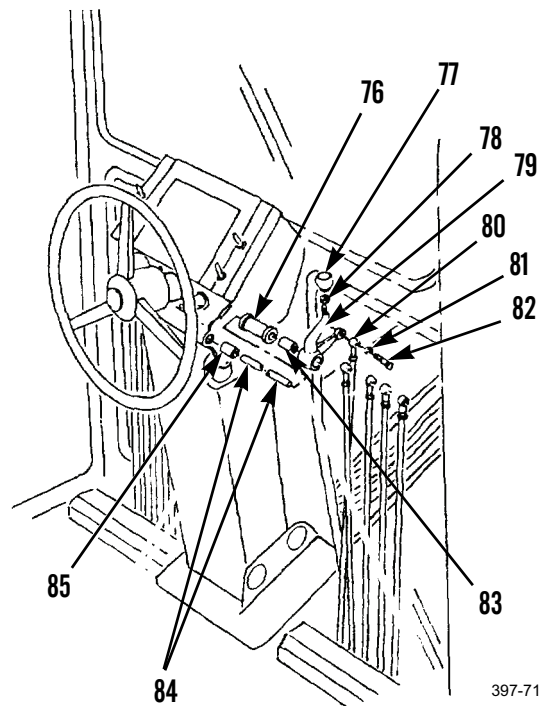43. Remove bolt (82) and lockwasher (81). Discard lockwasher.
44. Disconnect linkage (80).
45. Loosen nut (78).
46. Remove articulation knob (77) and nut (78).
47. Remove lever (79), bearing (83), spacer (76), bearing (85), and shaft (84).



CLEANING AND INSPECTION

Clean and inspect in accordance with WP 0020 00.

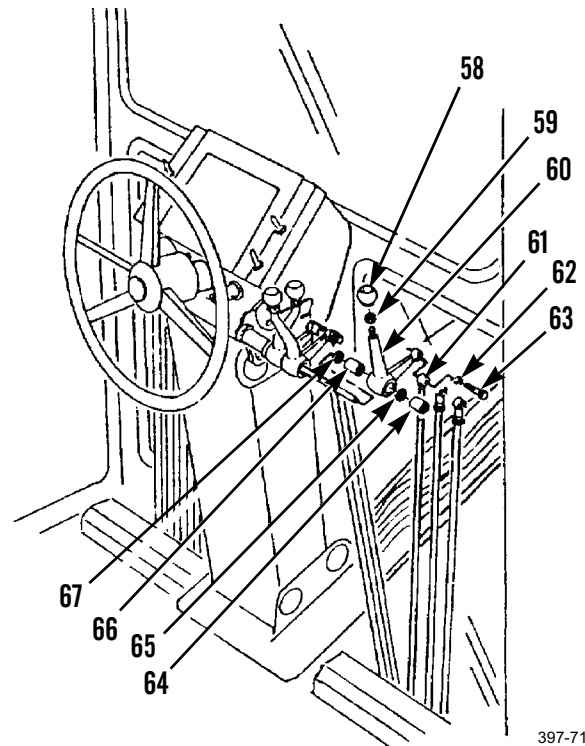
INSTALLATION

1. Install shaft (84), bearing (85), spacer (76), bearing (83), and lever (79).
2. Install nut (78) and articulation knob (77).

NOTE

Control levers must be out of alignment to provide adequate clearance for installation of bolts.

3. Connect linkage (80).
4. Install new lockwasher (81) and bolt (82).
5. Install bearings (75 and 74) and lever (70).
6. Install nut (69) and centershift knob (68).
7. Connect linkage (71).
8. Install new lockwasher (72) and bolt (73).
9. Install bearings (67 and 66) and lever (60).
10. Install nut (59) and leaning wheel knob (58).
11. Connect linkage (61).
12. Install new lockwasher (62) and bolt (63).
13. Install bearings (65 and 64).




397-710

HYDRAULIC CONTROL LEVERS REPLACEMENT - CONTINUED

0219 00


INSTALLATION - CONTINUED

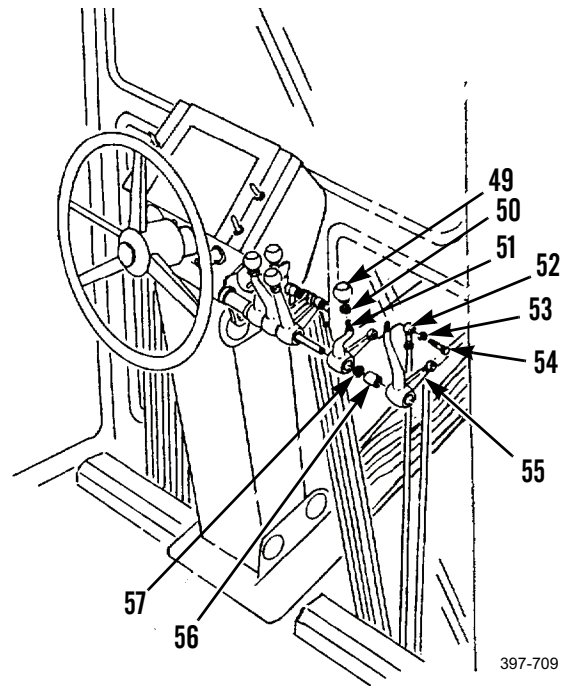14. Install lever (51).
15. Install nut (50) and blade lift knob (49).
16. Connect linkage (52).
17. Install new lockwasher (53) and bolt (54).
18. Install bearings (57 and 56) and lever (55).



397-709

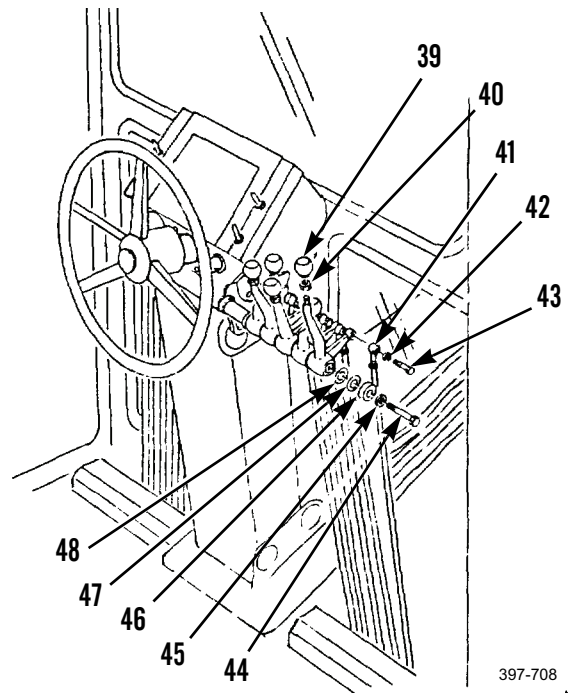
19. Install nut (40) and scarifier knob (39).
20. Connect linkage (41).
21. Install new lockwasher (42) and bolt (43).
22. Install bearing (48), shim (47), retainer (46), washer (45), and bolt (44).



397-708


INSTALLATION - CONTINUED

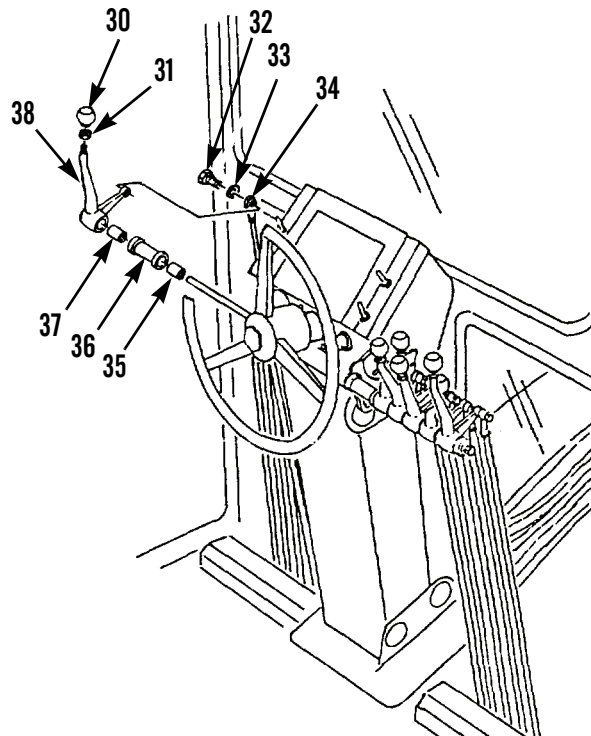23. Install bearing (35), spacer (36), bearing (37), and lever (38).
24. Install nut (31) and blade tip knob (30).
25. Connect linkage (34).
26. Install new lockwasher (33) and bolt (32).



397-707

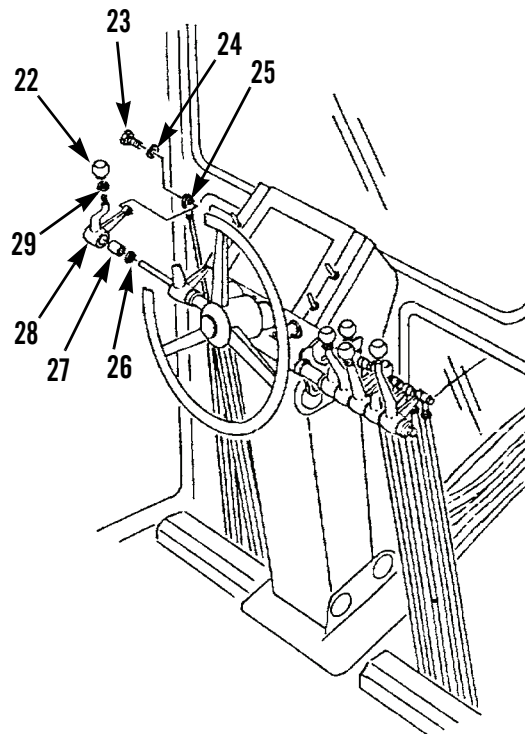
27. Install bearings (26 and 27) and lever (28).
28. Install nut (29) and circle drive knob (22).
29. Connect linkage (25).
30. Install new lockwasher (24) and bolt (23).



397-706


INSTALLATION - CONTINUED

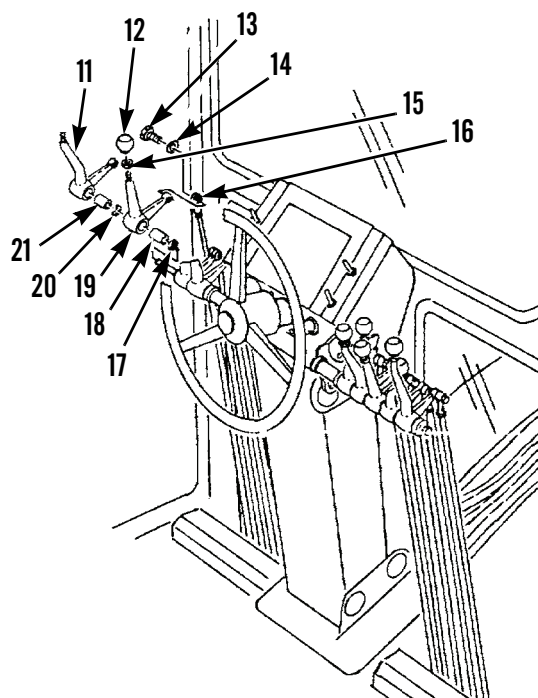31. Install bearings (17 and 18) and lever (19).
32. Install nut (15) and sideshift knob (12).
33. Connect linkage (16).
34. Install new lockwasher (14) and bolt (13).
35. Install bearings (20 and 21) and lever (11).



397-705

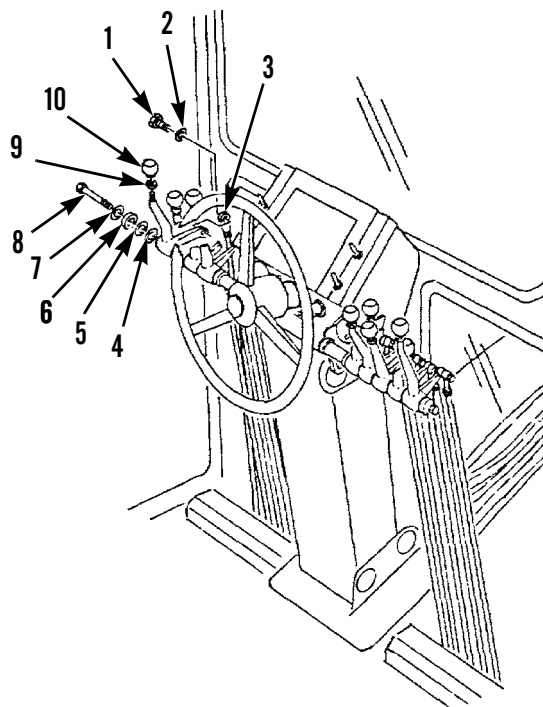36. Install nut (9) and blade lift knob (10).
37. Connect linkage (3).
38. Install new lockwasher (2) and bolt (1).
39. Install bearing (4), shim (5), retainer (6), washer (7), and bolt (8).



397-4358

END OF WORK PACKAGE

HYDRAULIC PUMP JUNCTION BLOCK AND LINES REPLACEMENT

0220 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 26, 27, or 29, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (20)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic tank drained (WP 0216 00)

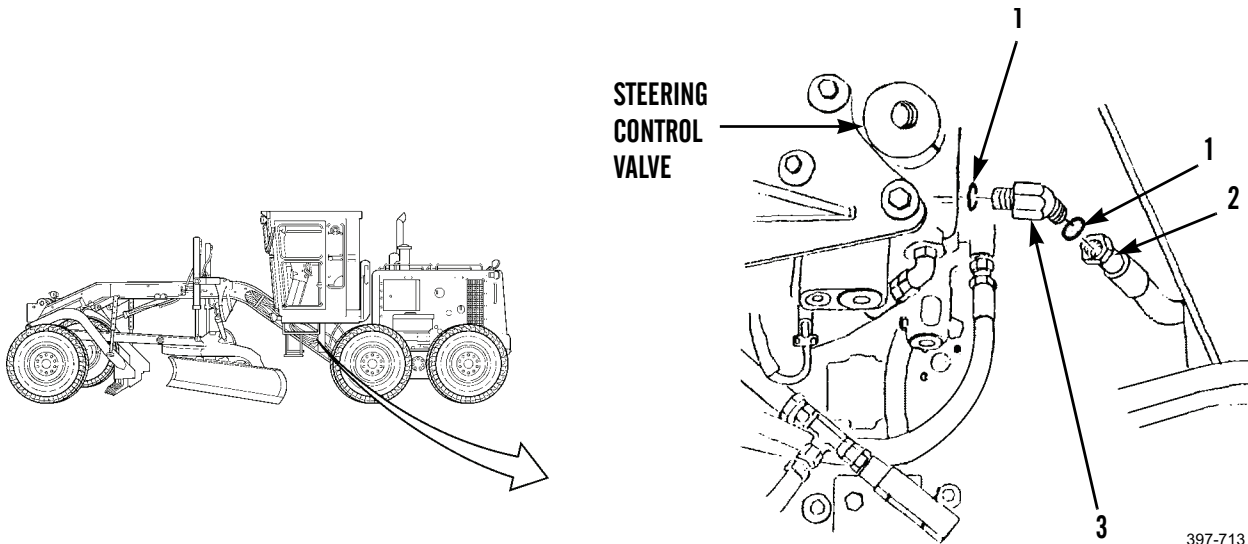
REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


1. Disconnect hose assembly (2) from elbow (3).
2. Remove elbow (3) and two preformed packings (1) from steering control valve. Discard preformed packings.



397-713

REMOVAL - CONTINUED

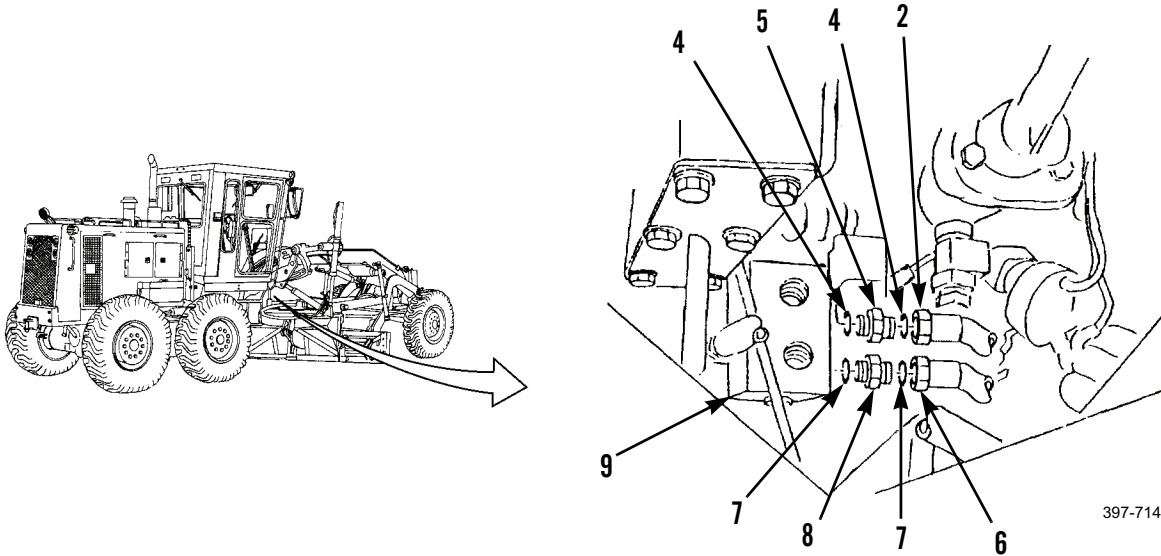
3. Disconnect hose assembly (2) from connector (5).
4. Remove hose assembly (2) from machine.
5. Remove connector (5) and two preformed packings (4) from junction block (9). Discard preformed packings.
6. Disconnect hose assembly (6) from connector (8).
7. Remove connector (8) and two preformed packings (7) from junction block (9). Discard preformed packings.



397-714

REMOVAL - CONTINUED

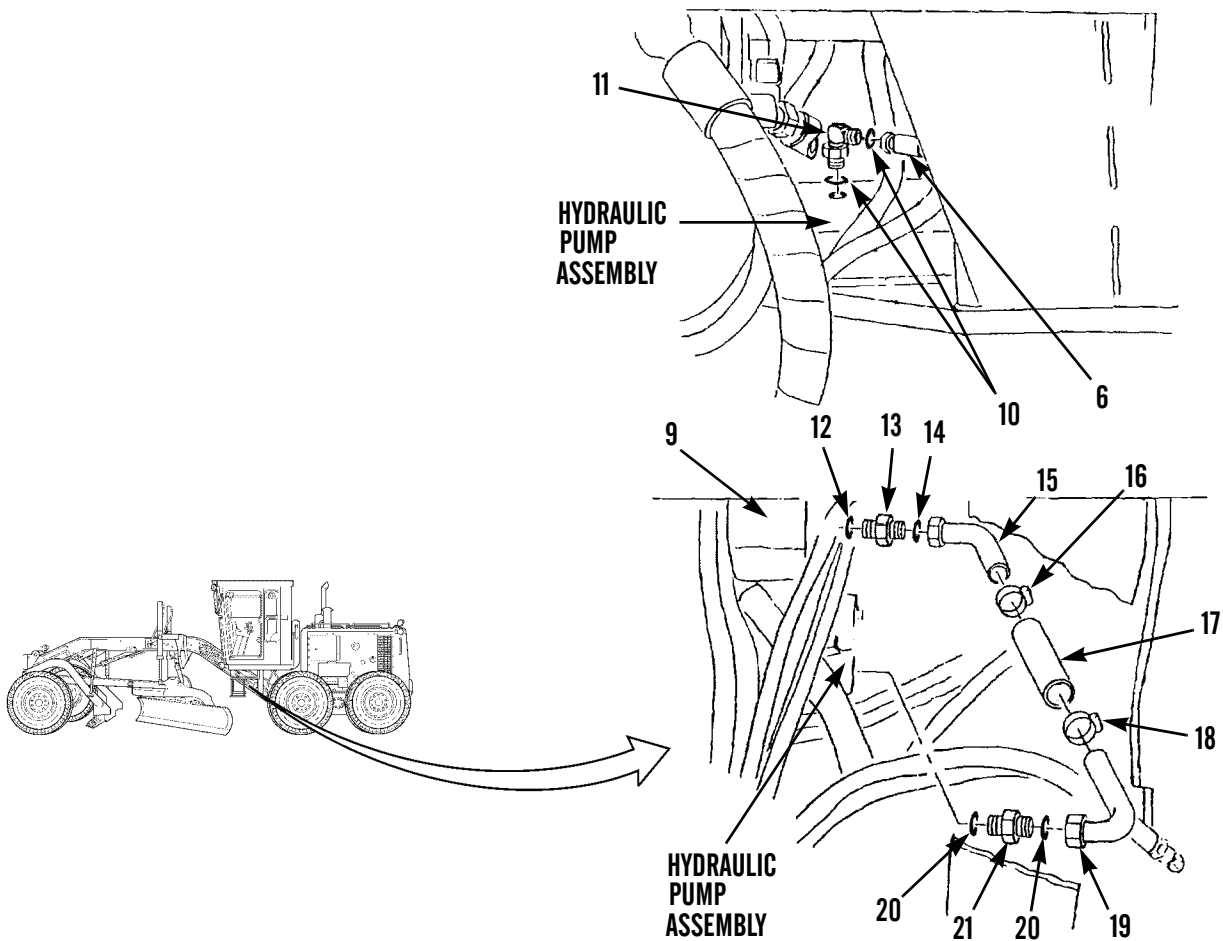8. Disconnect hose assembly (6) from elbow (11).
9. Remove hose assembly (6) from machine.
10. Remove elbow (11) and two preformed packings (10) from top of hydraulic pump assembly. Discard preformed packings.
11. Disconnect tube assembly (19) from connector (21).
12. Remove connector (21) and two preformed packings (20). Discard preformed packings.
13. Loosen clamps (16 and 18).
14. Remove clamp (16), hose (17), and clamp (18).
15. Disconnect tube assembly (15) from connector (13).
16. Remove connector (13) and two preformed packings (12 and 14) from junction box (9). Discard preformed packings.




HYDRAULIC PUMP JUNCTION BLOCK AND LINES REPLACEMENT - CONTINUED

0220 00


REMOVAL - CONTINUED

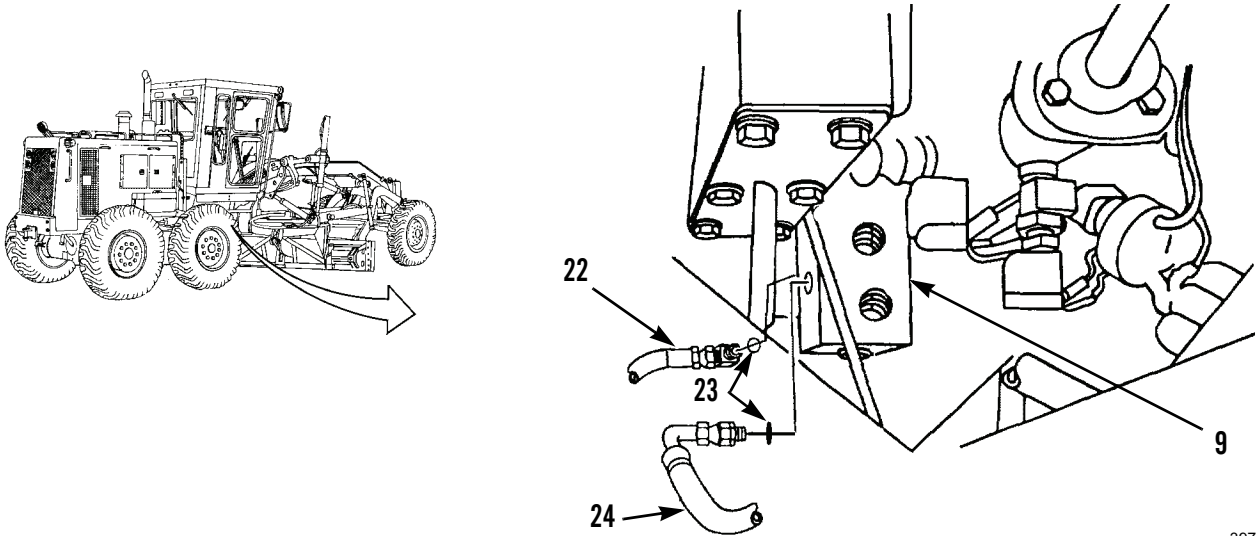17. Disconnect hose assemblies (22 and 24) and remove two preformed packings (23) from junction block (17). Discard preformed packings.
18. Disconnect other end of hose assembly (22) from hydraulic tank and remove from machine.
19. Disconnect other end of hose assembly (24) from hydraulic control valve and remove from machine.



397-717

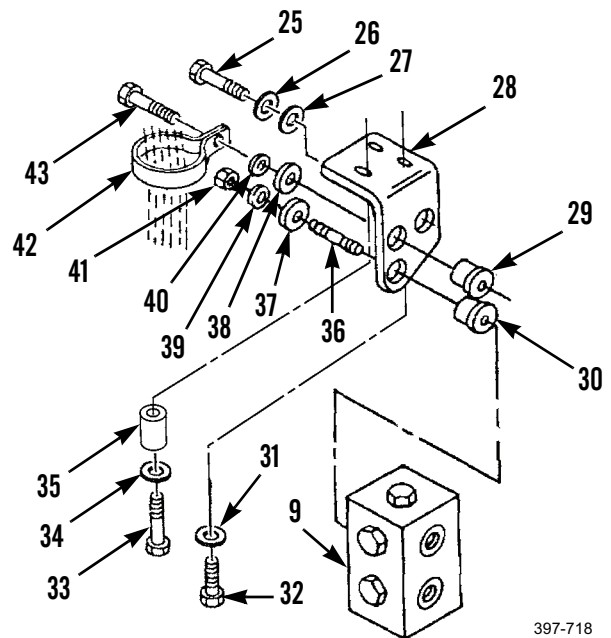
20. Remove two bolts (32) and washers (31) from bracket (28).
21. Remove bolt (33), washer (34), and spacer (35) from bracket (28)
22. Remove bolt (43), clamp (42), washers (40 and 38) from junction block (9).
23. Remove bolt (25) and washers (26 and 27).
24. Remove nut (41), washers (39 and 37), and stud (36).
25. Remove junction block (9).
26. Remove bracket (28) and three grommets (29 and 30).



397-718

REMOVAL - CONTINUED

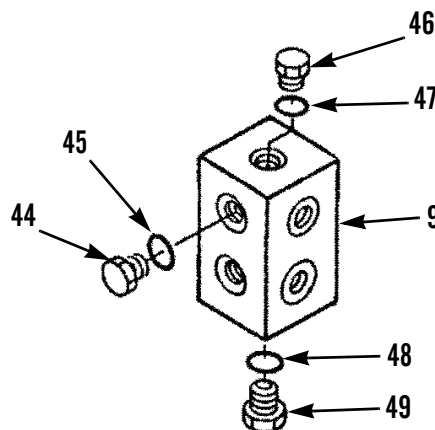- Remove plugs (44, 46, and 49) and preformed packings (45, 47, and 48) from junction block (9). Discard preformed packings.



397-719

CLEANING AND INSPECTION

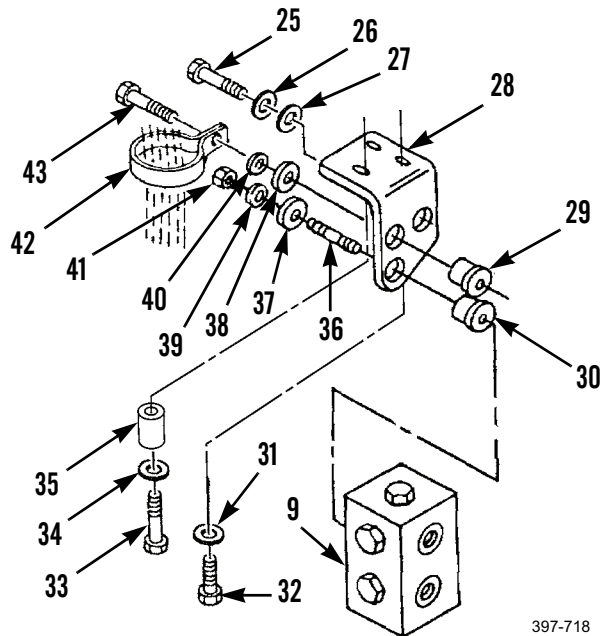
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

NOTE

Lightly lubricate all preformed packings with clean oil before installation.


- Install new preformed packings (48, 47, and 45) and plugs (49, 46, and 44) on junction block (9).
- Position three grommets (30 and 29) and bracket (28) on junction block (9).
- Install stud (36), washers (39 and 37), and nut (41).
- Install washers (27 and 26) and bolt (25).
- Install washers (38 and 40), clamp (42), and bolt (43).



397-718


INSTALLATION - CONTINUED

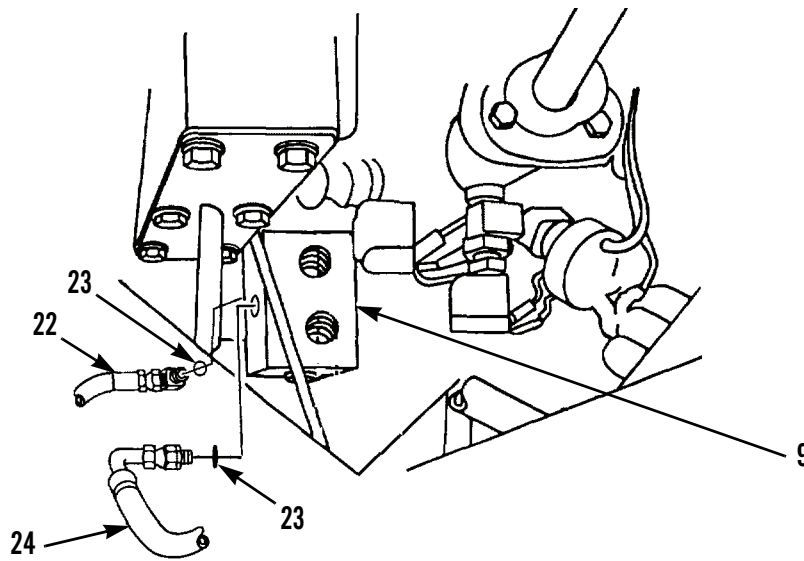6. Install junction block (9) in position, aligning with mounting holes and secure with spacer (35), washer (34), and bolt (33).
7. Install two washers (31) and bolt (32).
8. Connect hose assembly (24) to hydraulic control valve.
9. Connect hose assembly (22) to hydraulic tank.
10. Connect hose assemblies (24 and 22) on machine.
11. Install two new preformed packings (23) and connect hose assemblies (24 and 22) to junction box (9).



397-4364

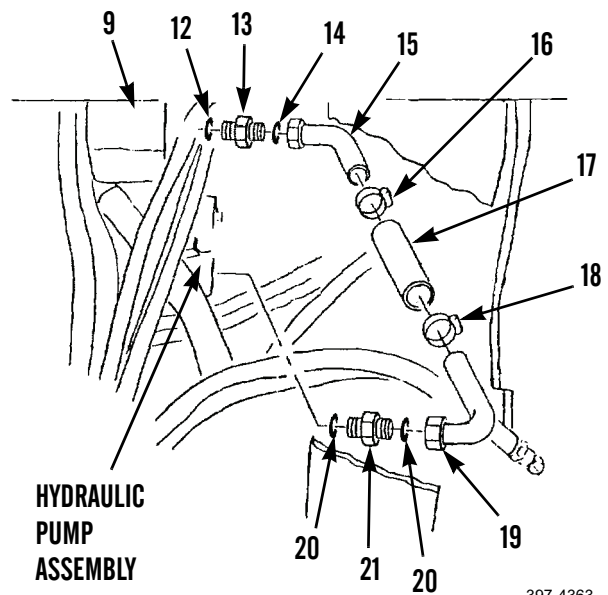
12. Install two new preformed packings (14 and 12) and connector (13) on junction box (9).
13. Connect tube assembly (15) to connector (13).
14. Install clamp (16), hose (17), and clamp (18).
15. Tighten clamps (16 and 18).
16. Install two new preformed packings (20) and connector (21) to hydraulic pump assembly.
17. Connect tube assembly (19) to connector (21).



397-4363


INSTALLATION - CONTINUED

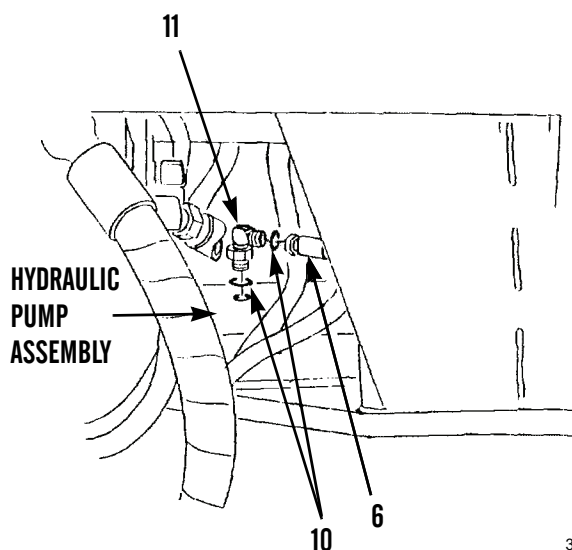18. Install two new preformed packings (10) and elbow (11) to top of hydraulic pump assembly.
19. Position hose assembly (6) on machine.
20. Connect hose assembly (6) to elbow (11).



397-4362

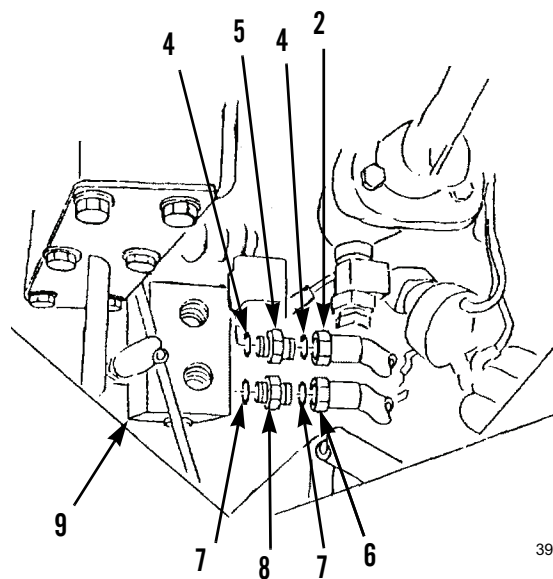
21. Install two new preformed packings (4) and connector (5) to junction block (9).
22. Position hose assembly (2) on machine.
23. Connect hose assembly (2) to connector (5).
24. Install two new preformed packings (7) and connector (8) on junction box (9).
25. Connect hose assembly (6) to connector (8).



397-4361

INSTALLATION - CONTINUED

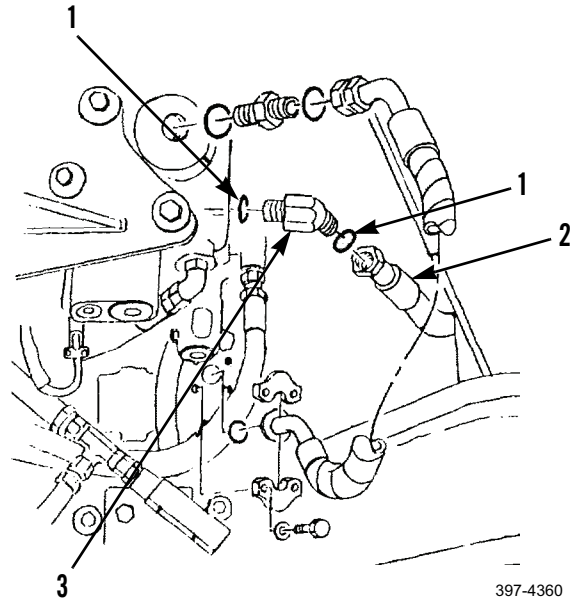26. Install two new preformed packings (1) and elbow (3) on steering control valve.
27. Connect hose assembly (2) to elbow (3).



28. Start engine (TM 5-3805-261-10).
29. Turn steering wheel. Move wheels back and forth at least five times to bleed air from the system.
30. Turn engine off.
31. Check for leaks.
32. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

BLADE FLOAT LINES, FITTINGS, AND HOSES REPLACEMENT (CCE MACHINE)

0221 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 26, 27, or 29, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (18)

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5 3805-261-10)

Parking/emergency brake applied (TM 5 3805-261-10)

Implements lowered to ground (TM 5 3805-261-10)

Engine off (TM 5 3805-261-10)

Battery disconnect switch in OFF position (TM 5 3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

Blade float pilot valve removed (WP 0233 00)

REMOVAL

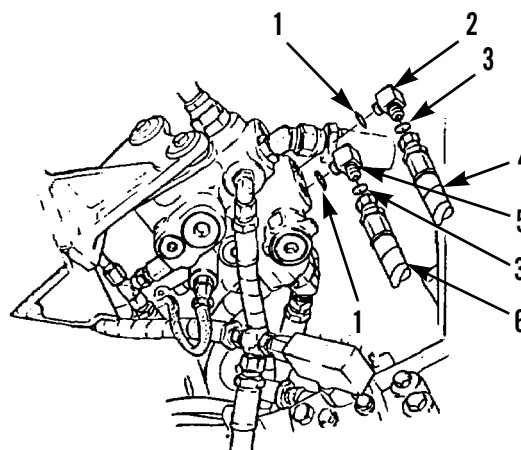
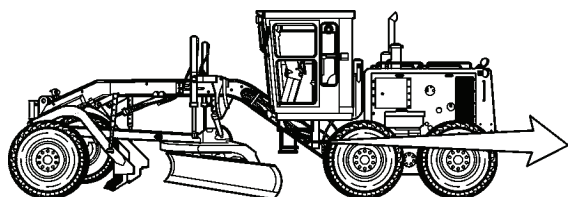
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assemblies (4 and 6) from elbows (2 and 5) at underside of cab and remove two preformed packings (3).
2. Remove hose assemblies (4 and 6) from machine.
3. Remove elbows (2 and 5) and two preformed packings (1). Discard preformed packings.



397-720

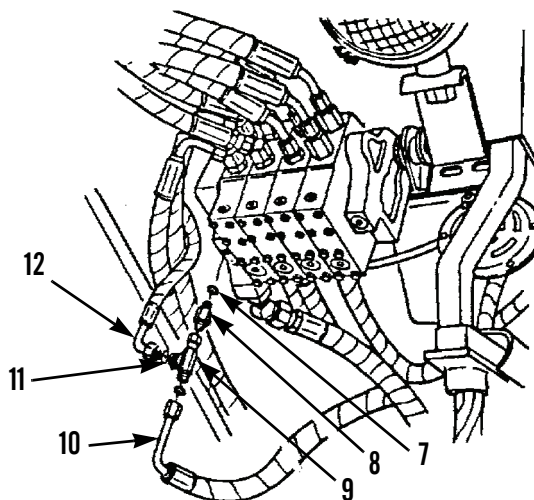
4. Disconnect hose assemblies (10 and 12) from tee (9) and remove two preformed packings (11). Discard preformed packings.
5. Remove tee (9), connector (8), and preformed packing (7). Discard preformed packing.



397-721


REMOVAL - CONTINUED

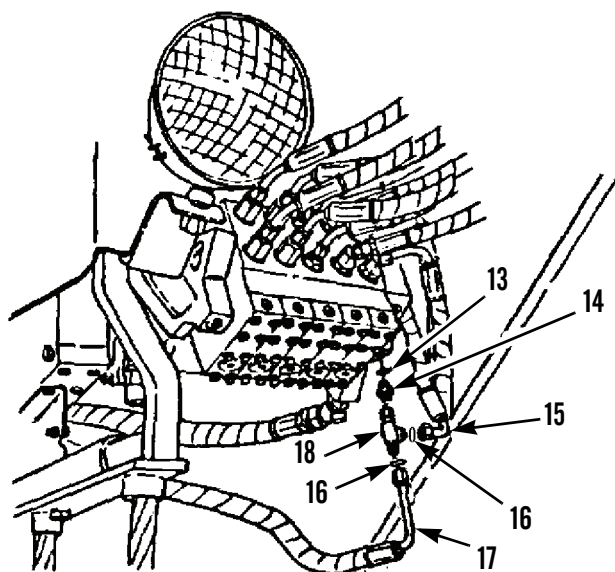6. Disconnect hose assemblies (15 and 17) from tee (18) and remove two preformed packings (16). Discard preformed packings.
7. Remove tee (18), connector (14), and preformed packing (13). Discard preformed packing.



397-722

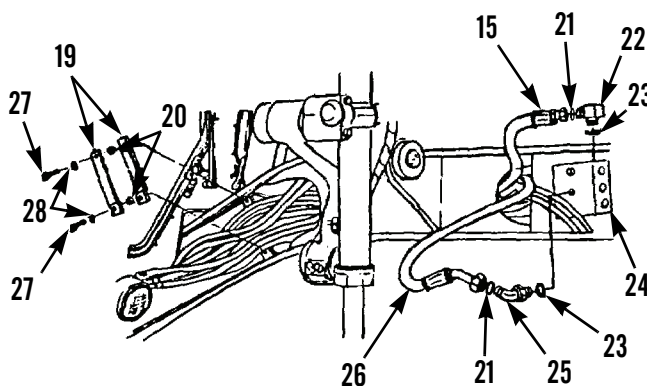
8. Remove two bolts (27), washers (28), clamps (19), and spacers (20).
9. Disconnect hose assemblies (15 and 26) and remove elbows (22 and 25) from valve assembly (24) on right side of machine.
10. Remove and discard two preformed packings (21).
11. Remove hose assemblies (15 and 26) from machine.
12. Remove elbows (22 and 25) and two preformed packings (23). Discard preformed packings.



397-723

REMOVAL - CONTINUED

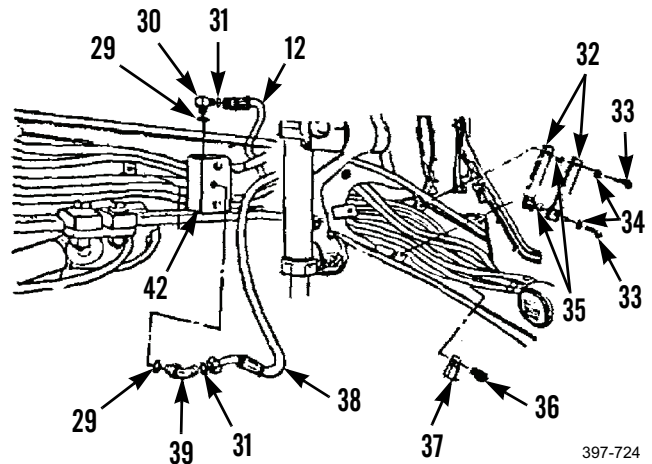13. Remove two bolts (33), washers (34), clamps (32), and spacers (35).
14. Remove bolt (36) and clip (37).
15. Disconnect hose assemblies (12 and 38) from elbows (30 and 39) at valve assembly (42) on left side of machine.
16. Remove hose assemblies (12 and 38) from machine.
17. Remove elbows (30 and 39) and two preformed packings (29). Discard preformed packings.
18. Remove and discard two preformed packings (31).



397-724

CLEANING AND INSPECTION

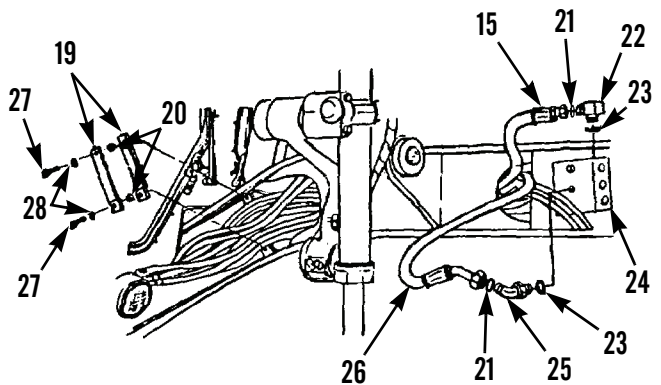
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

NOTE

Lightly lubricate all preformed packings with clean oil before installation.


1. Install two new preformed packings (29) and elbows (30 and 39) to valve assembly (42) on left side of machine.
2. Position two hose assemblies (12 and 38) to machine.
3. Install two new preformed packings (31) and connect hose assemblies (12 and 38) to elbows (30 and 39).
4. Install clip (37) and bolt (36).
5. Install two spacers (35), clamps (32), washers (34), and bolts (33).
6. Install two new preformed packings (23) and elbows (22 and 25) to valve assembly (24) on right side of machine.
7. Position two hose assemblies (15 and 26) to machine.
8. Install two new preformed packings (21) and connect hose assemblies (15 and 26) to elbows (22 and 25).
9. Install two spacers (20), clamps (19), washers (28), and bolts (27).



397-723


INSTALLATION - CONTINUED

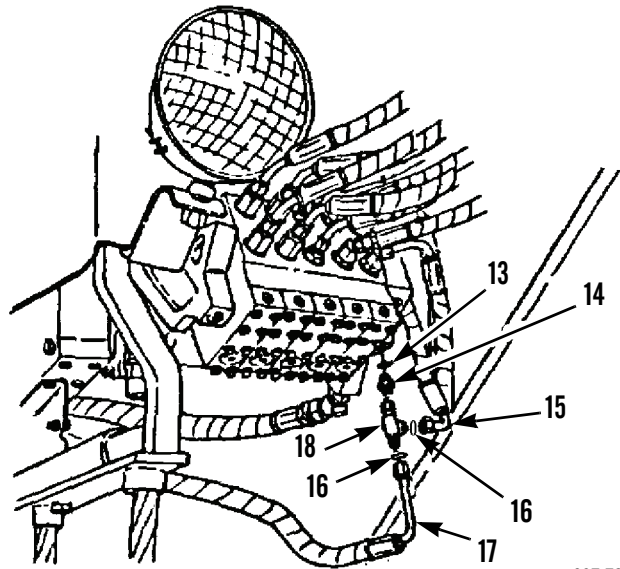10. Install new preformed packing (13), connector (14), and tee (18).
11. Install two new preformed packings (16) and connect hose assemblies (15 and 17).



397-722

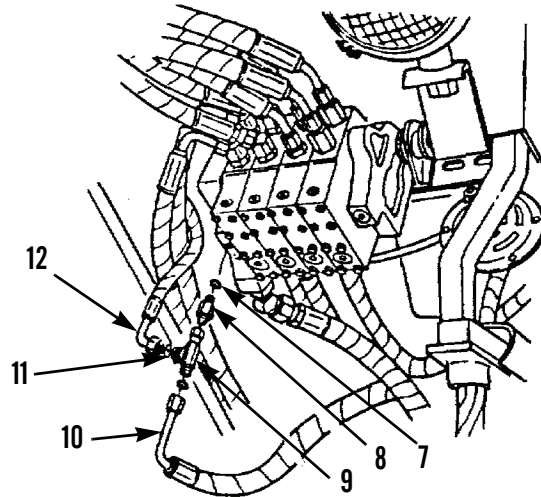
12. Install new preformed packing (7), connector (8), and tee (9).
13. Install two new preformed packings (11) and connect hose assemblies (10 and 12).



397-721

INSTALLATION - CONTINUED

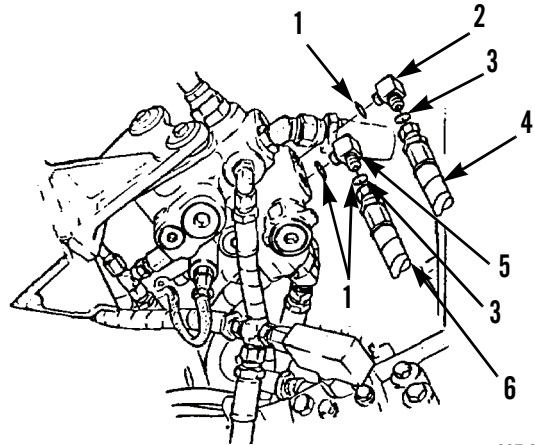14. Install two new preformed packings (1) and elbows (2 and 5) at underside of cab.
15. Install two new preformed packings (3) and connect hose assemblies (4 and 6) to elbows (2 and 5).



397-2375

16. Install blade float pilot valve (WP 0233 00).
17. Operate control levers. Move system through at least five full-travel movements to bleed air from system.
18. Start engine (TM 5-3805-261-10)
19. Check for leaks.
20. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

BLADE LIFT LINES, FITTINGS, AND HOSES REPLACEMENT

0222 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 2, WP 0349 00)

Oil, lubricating (Item 26, 27, or 29, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (48)

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

Scarifier hoses removed (WP 0229 00)

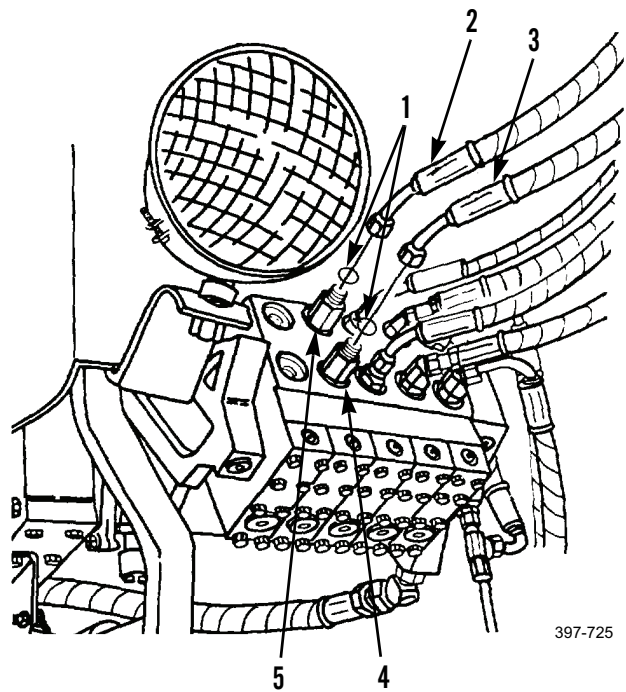
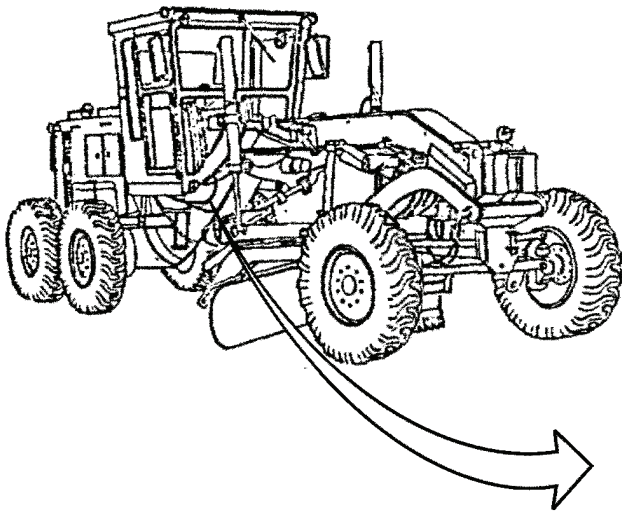
REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect two hose assemblies (2 and 3) from connectors (4 and 5) at right hydraulic control valve and remove two preformed packings (1). Discard preformed packings.




REMOVAL - CONTINUED

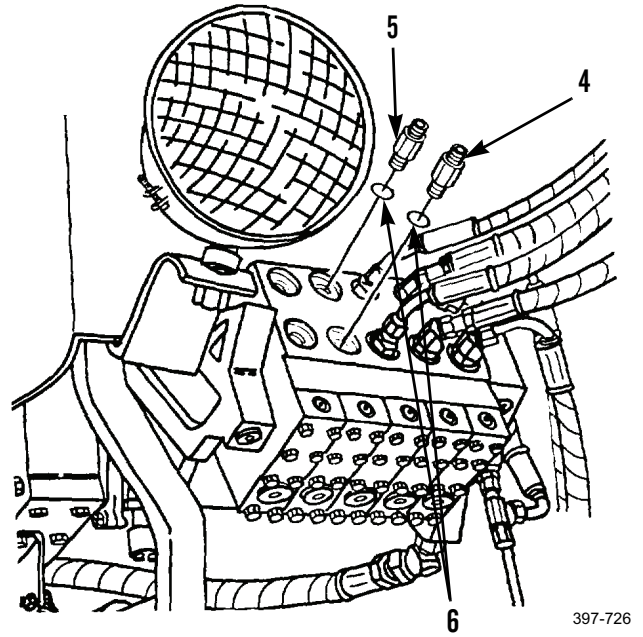2. Remove two connectors (4 and 5) and preformed packings (6). Discard two preformed packings.



397-726

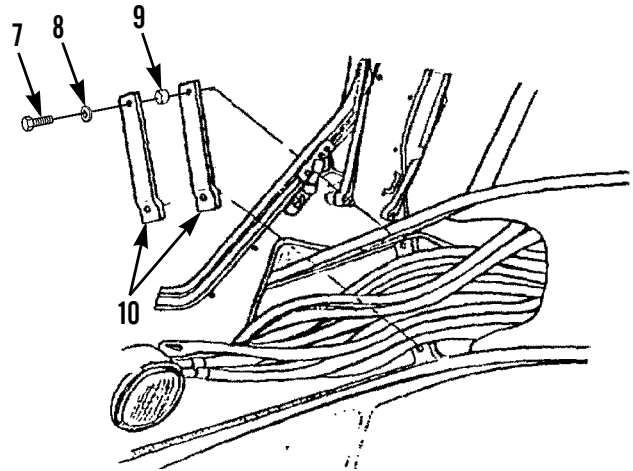
3. Remove two bolts (7), washers (8), clamps (10), and spacers (9).




397-727

REMOVAL - CONTINUED

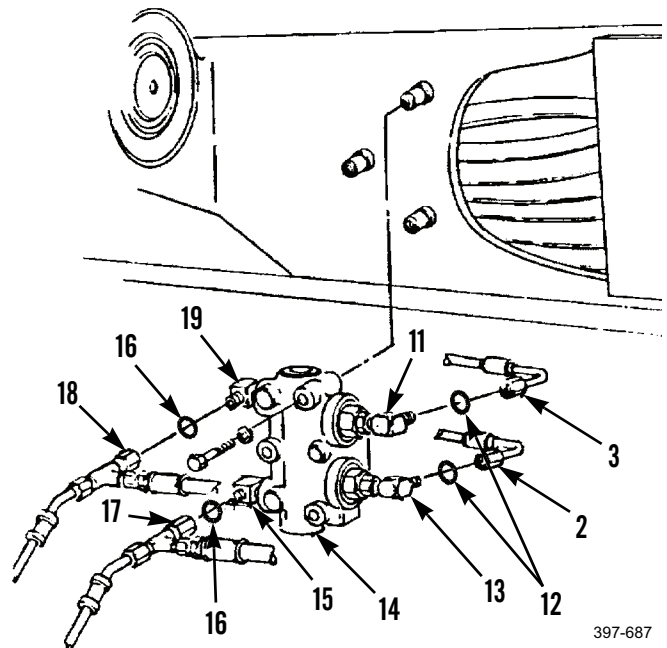4. Disconnect hose assemblies (2 and 3) from elbows (11 and 13) on right blade lift check and relief valve (14).
5. Remove two preformed packings (12). Discard preformed packings.
6. Remove hose assemblies (2 and 3) from machine.
7. Disconnect tees (17 and 18) from elbows (15 and 19) on right blade lift check and relief valve (14). Remove two preformed packings (16). Discard preformed packings.




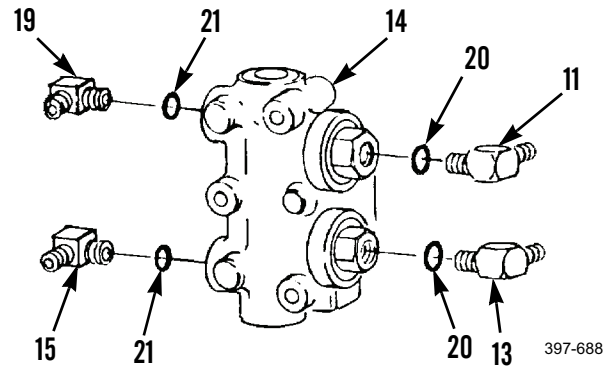8. Remove elbows (11 and 13) and two preformed packings (20). Discard preformed packings.
9. Remove elbows (15 and 19) and two preformed packings (21). Discard preformed packings.
10. Disconnect hose assemblies (24 and 30) from tees (18 and 17) and remove two preformed packings (23). Discard preformed packings.
11. Disconnect hose assemblies (24 and 30) from connectors (26 and 29).
12. Remove two preformed packings (25). Discard preformed packings.
13. Remove hose assemblies (24 and 30) from machine.




REMOVAL - CONTINUED

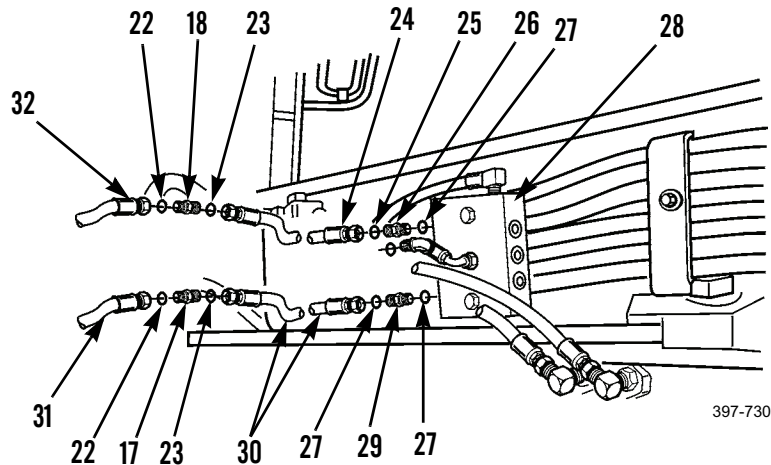14. Remove connectors (26 and 29) from right check valve assembly (28).
15. Remove two preformed packings (27). Discard preformed packings.
16. Remove two tees (18 and 17) from hose assemblies (31 and 32).
17. Remove two preformed packings (22). Discard preformed packings.




18. Remove nut (33), washer (34), two clips (46), spacer (38), clamp (39), washer (40), and bolt (41) from right blade lift cylinder (42).
19. Disconnect hose assembly (31) from connector (36).
20. Remove preformed packing (37). Discard preformed packing.
21. Remove hose assembly (31) from machine.
22. Remove connector (36) and preformed packing (35) from top of right blade lift cylinder (42). Discard preformed packing.
23. Disconnect hose assembly (32) from connector (44).
24. Remove preformed packing (45). Discard preformed packing.
25. Remove hose assembly (32) from machine.
26. Remove elbow (44) and preformed packing (43) from bottom of right blade lift cylinder (42). Discard preformed packing.

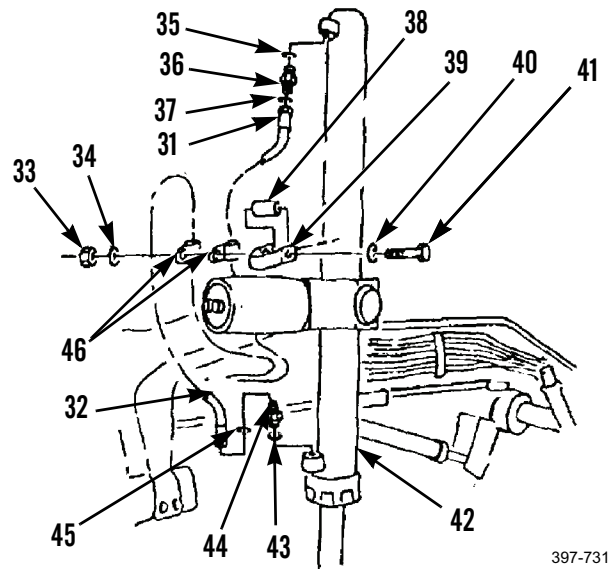


REMOVAL - CONTINUED

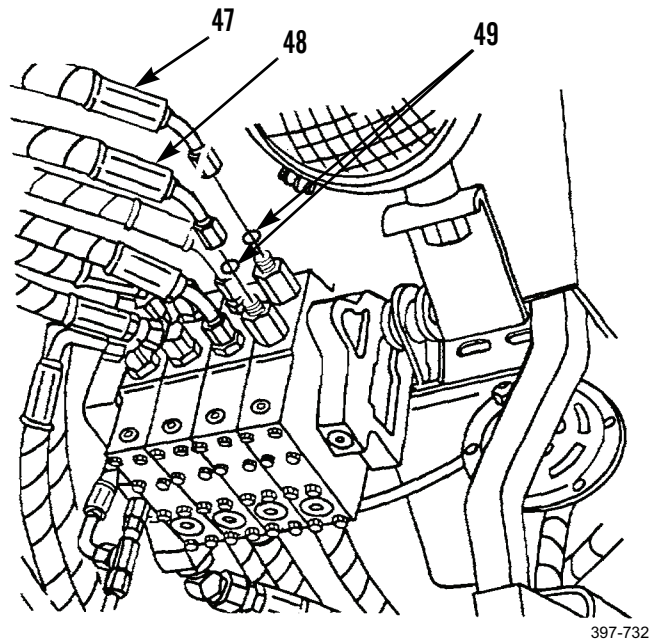27. Disconnect hose assemblies (47 and 48) from left control valve and remove two preformed packings (49). Discard preformed packings.



397-732

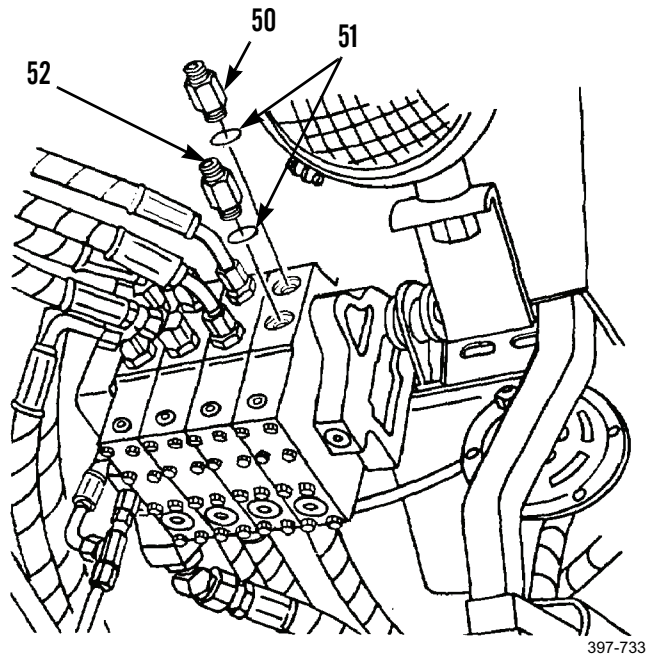
28. Remove connectors (50 and 52) and two preformed packings (51). Discard preformed packings.




397-733

REMOVAL - CONTINUED

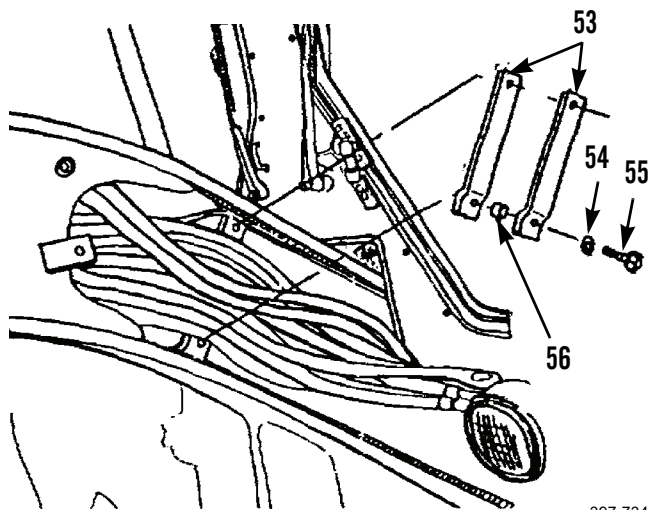29. Remove two bolts (55), washers (54), clamps (53), and spacers (56).




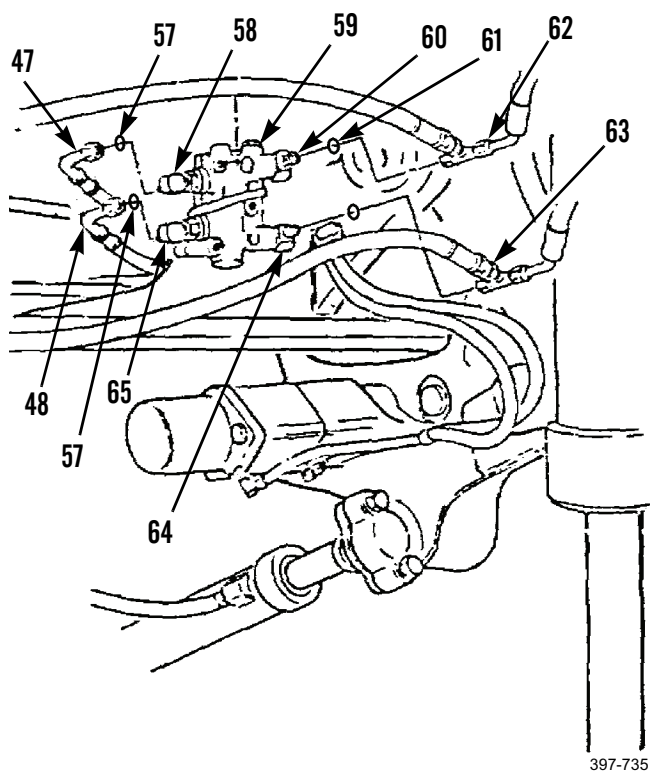30. Disconnect hose assemblies (47 and 48) from elbows (58 and 65) at left blade lift check and relief valve (59). Remove two preformed packings (57). Discard preformed packings.
31. Remove hose assemblies (47 and 48) from machine.
32. Remove tees (62 and 63) from elbows (60 and 64) and remove two preformed packings (61). Discard preformed packings.




REMOVAL - CONTINUED

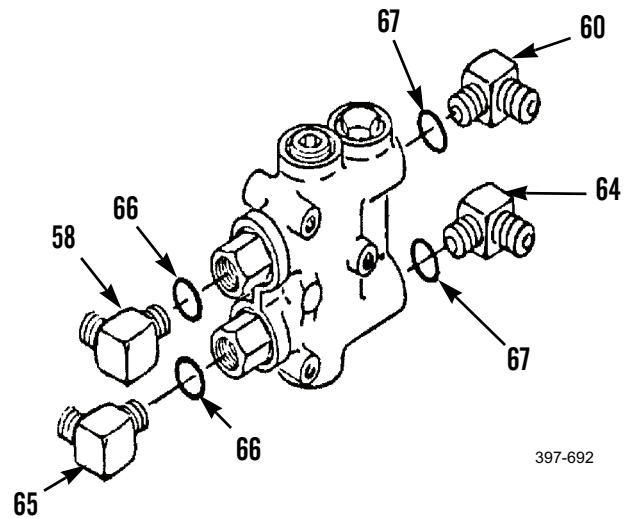- 33. Remove elbows (58 and 65) and two preformed packings (66). Discard preformed packings.
- 34. Remove elbows (60 and 64) and two preformed packings (67). Discard preformed packings.



397-692

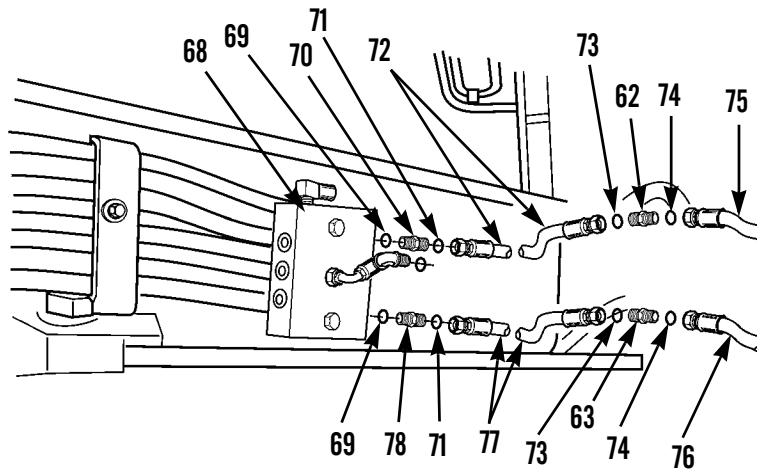
- 35. Disconnect hose assemblies (72 and 77) from tees (62 and 63) and remove two preformed packings (73). Discard preformed packings.
- 36. Disconnect hose assemblies (72 and 77) from connectors (70 and 78) and remove two preformed packings (71). Discard preformed packings.
- 37. Remove hose assemblies (72 and 77) from machine.
- 38. Remove connectors (70 and 78) from left check valve assembly (68) and remove two preformed packings (69). Discard preformed packings.
- 39. Remove tees (62 and 63) from hose assemblies (75 and 76) and remove two preformed packings (74). Discard preformed packings.



397-737

REMOVAL - CONTINUED

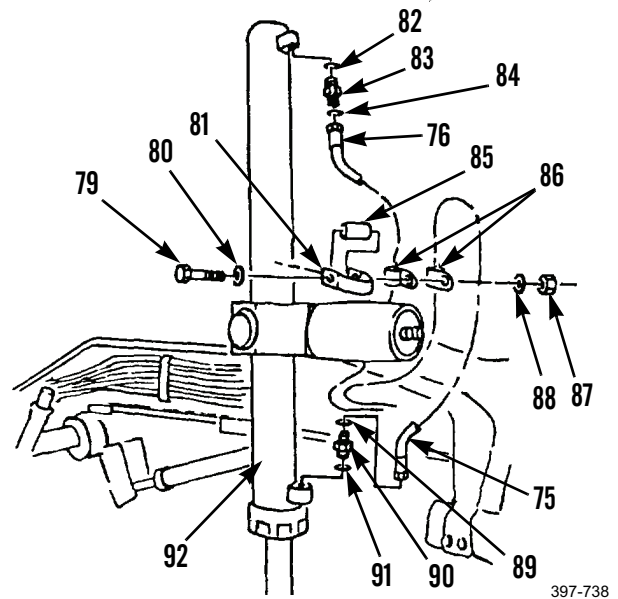40. Remove nut (87), washer (88), two clips (86), spacer (85), clamp (81), washer (80), and bolt (79) from left blade lift cylinder (92).
41. Disconnect hose assembly (76) from connector (83) and remove preformed packing (84). Discard preformed packing.
42. Remove hose assembly (76) from machine.
43. Remove connector (83) and preformed packing (82) from top of left blade lift cylinder (92). Discard preformed packing.
44. Disconnect hose assembly (75) from connector (90) and remove preformed packing (89). Discard preformed packing.
45. Remove hose assembly (75) from machine.
46. Remove connector (90) and preformed packing (91) from bottom of left blade lift cylinder (92). Discard preformed packings.



397-738

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

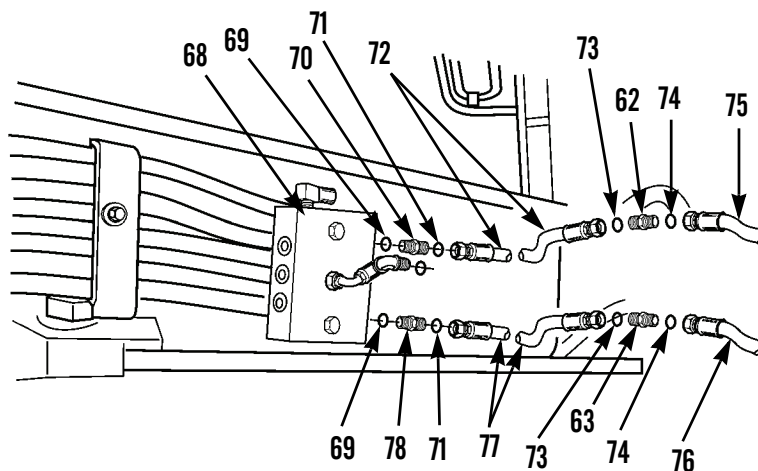
NOTE

Lightly lubricate all preformed packings with clean oil before installation.

1. Install new preformed packing (91) and connector (90) on bottom of left blade lift cylinder (92).
2. Install new preformed packing (89) and hose assembly (75) on connector (90).
3. Install new preformed packing (82) and connector (83) on top of left blade lift cylinder (92).
4. Install new preformed packing (84) and hose assembly (76) on connector (83).
5. Install bolt (79), washer (80), clamp (81), spacer (85), two clips (86), washer (88), and nut (87) on left blade lift cylinder (92).


INSTALLATION - CONTINUED

6. Install two new preformed packings (74) and tees (62 and 63) to hose assemblies (75 and 76).
7. Install two new preformed packings (69) and connectors (70 and 78) to left check valve assembly (68).
8. Position hose assemblies (72 and 77) to machine.
9. Install two new preformed packings (71) and connect hose assemblies (72 and 77) to connectors (70 and 78).



397-737

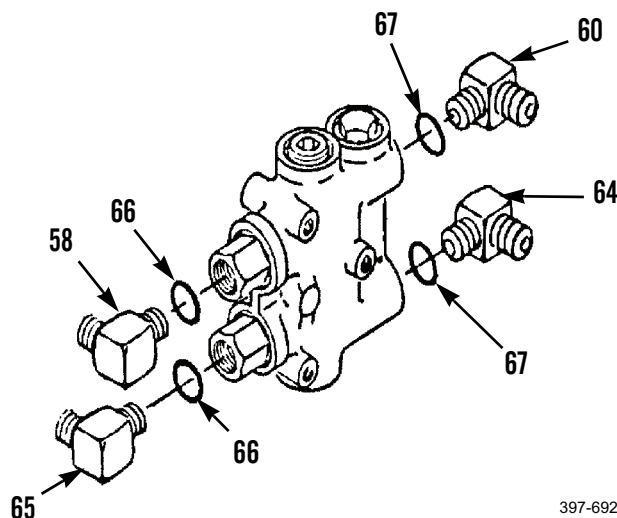
10. Install two new preformed packings (73) and connect hose assemblies (72 and 77) to tees (62 and 63).
11. Install two new preformed packings (67) and elbows (60 and 64) to left blade lift check and relief valve (59).
12. Install two new preformed packings (66) and elbows (58 and 65).



397-692


INSTALLATION - CONTINUED

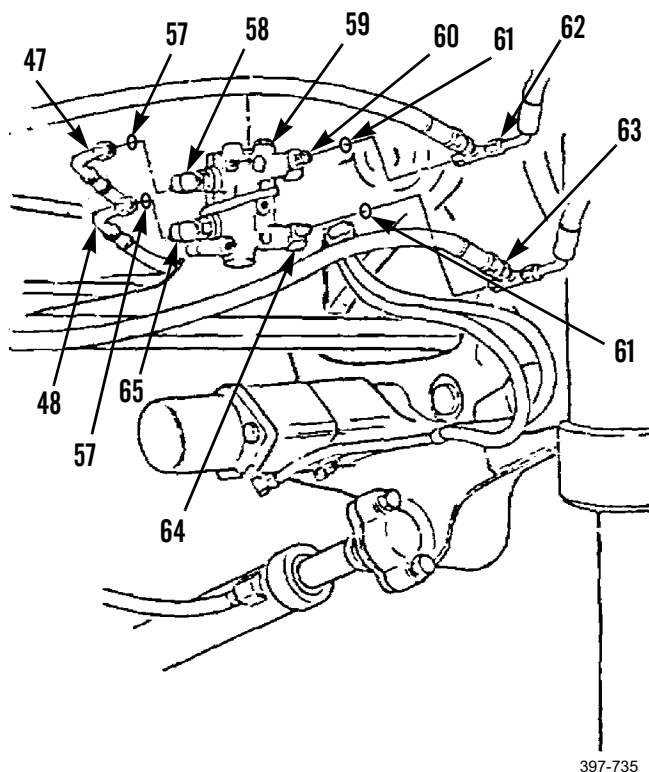13. Install two new preformed packings (61) and two tees (62 and 63) to two elbows (60 and 64).
14. Position hose assemblies (47 and 48) to machine.
15. Install two new preformed packings (57) and connect hose assemblies (47 and 48) to elbows (58 and 65).



397-735

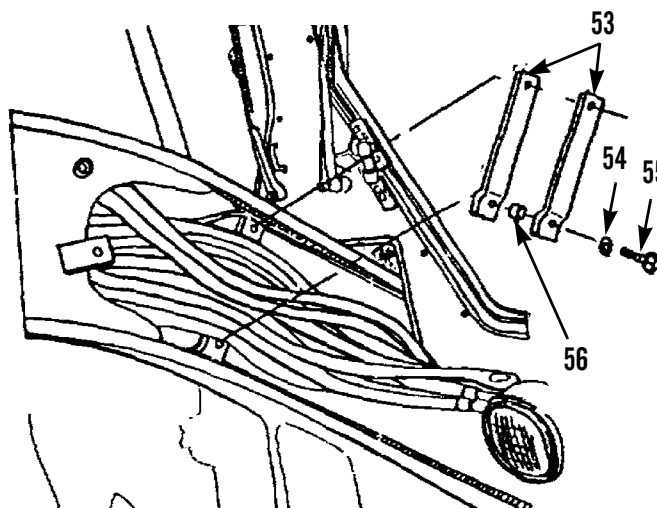
16. Install two clamps (53), spacers (56), washers (54), and bolts (55).




397-734

INSTALLATION - CONTINUED

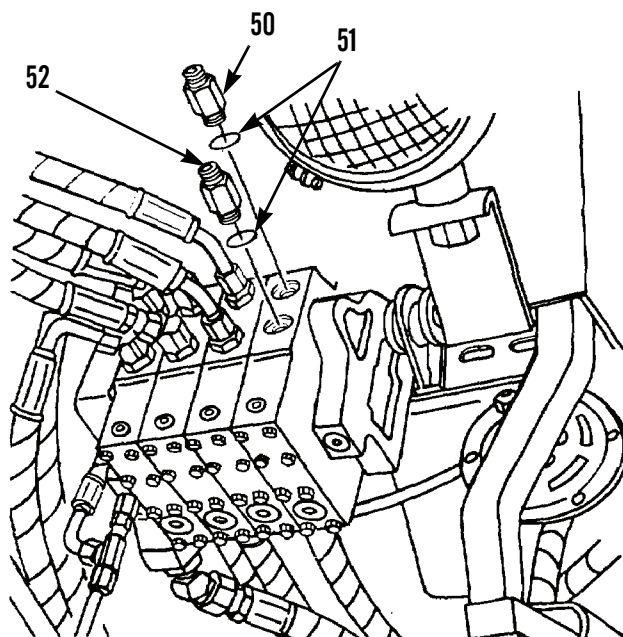17. Install two new preformed packings (51) and connectors (50 and 52) to left control valve.




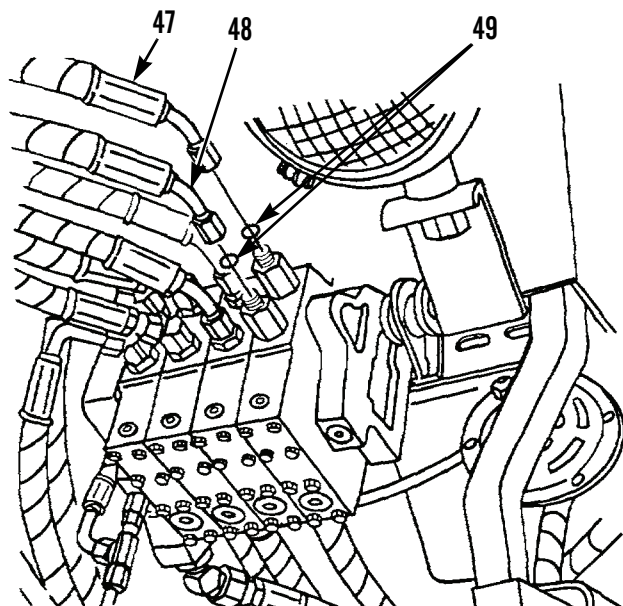18. Install two new preformed packings (49) and connect hose assemblies (47 and 48) to left control valve.




INSTALLATION - CONTINUED

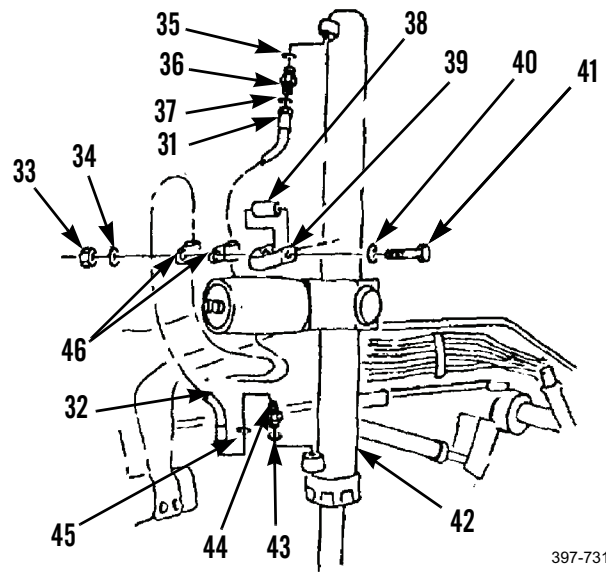19. Install new preformed packing (43) and elbow (44) to bottom of right blade lift cylinder (42).
20. Position hose assembly (32) to machine.
21. Install new preformed packing (45) and hose assembly (32) to elbow (44).
22. Install new preformed packing (35) and connector (36) on top of right blade lift cylinder (42).
23. Position hose assembly (31) to machine.
24. Install new preformed packing (37) and hose assembly (31) to connector (36).
25. Install bolt (41), washer (40), clamp (39), spacer (38), two clips (46), washer (34), and nut (33).



397-731

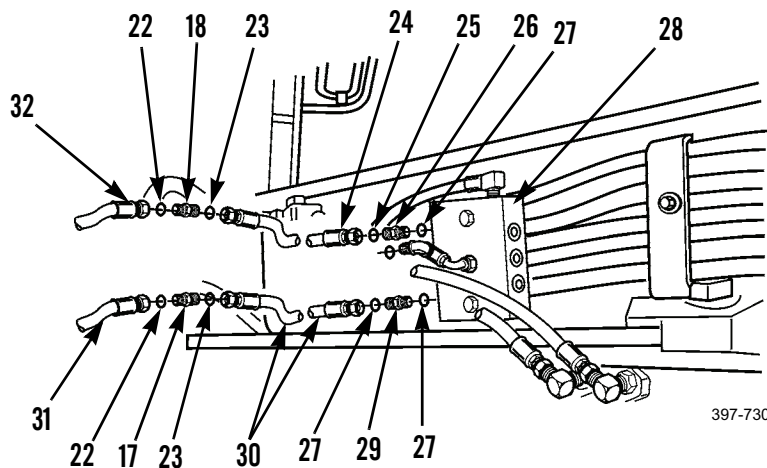
26. Install two new preformed packings (22) and tees (17 and 18) to hose assemblies (31 and 32).
27. Install two new preformed packings (27) and connectors (26 and 29) to right check valve assembly (28).
28. Position hose assemblies (24 and 30) to machine.
29. Install two new preformed packings (25) and connect hose assemblies (24 and 30) to connectors (26 and 29).
30. Install two new preformed packings (23) and connect hose assemblies (24 and 30) to tees (18 and 17).




397-730

INSTALLATION - CONTINUED

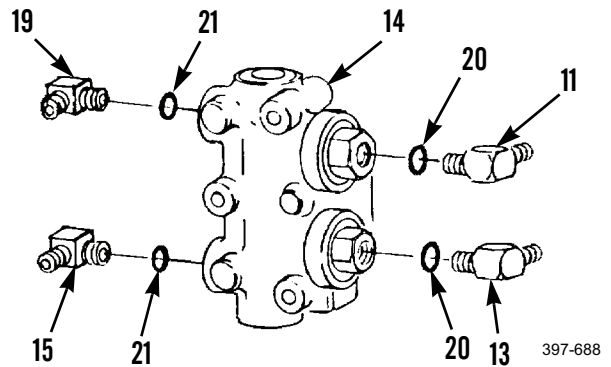31. Install two new preformed packings (21) and elbows (15 and 19) to right blade lift check and relief valve (14).




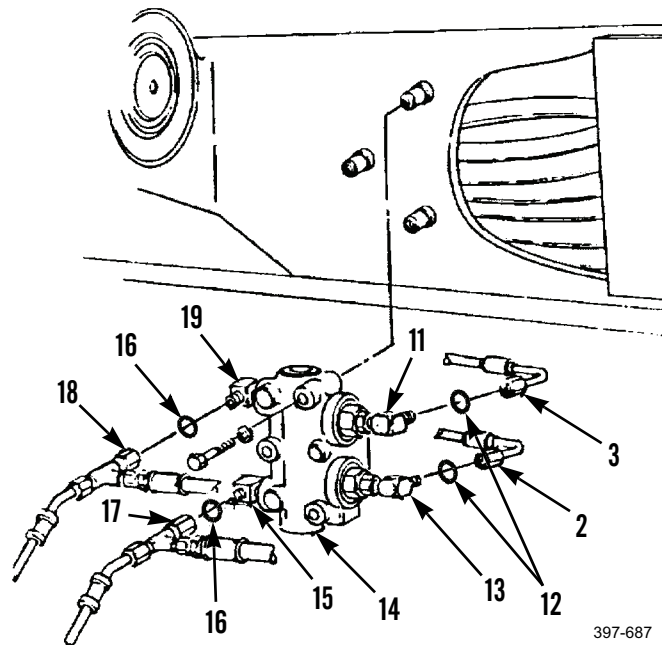32. Install two new preformed packings (20) and elbows (11 and 13).
33. Install two new preformed packings (16) and connect tees (17 and 18) to elbows (15 and 19).
34. Position hose assemblies (2 and 3) on machine.
35. Install two new preformed packings (12) and connect hose assemblies (2 and 3) to elbows (11 and 13).




INSTALLATION - CONTINUED

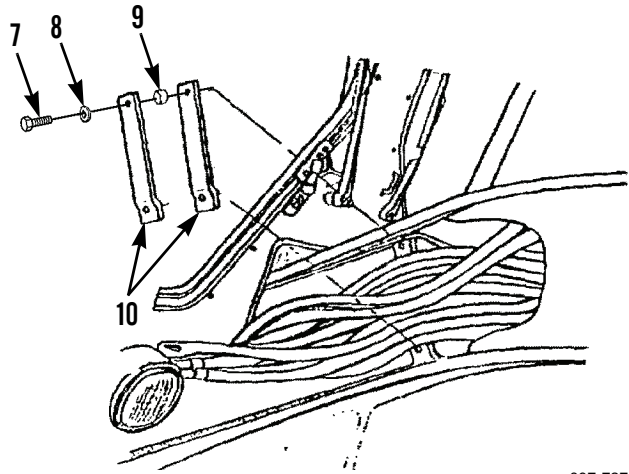36. Install two clamps (10), spacers (9), washers (8), and bolts (7).





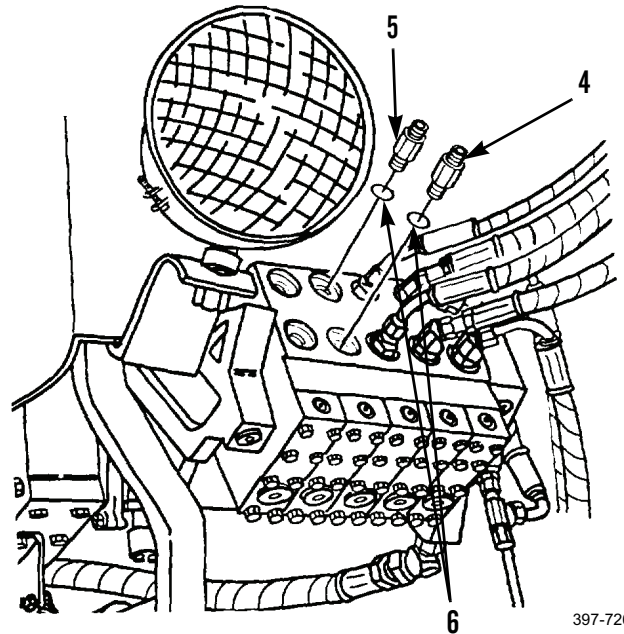37. Install two new preformed packings (6) and connectors (4 and 5) to right control valve.



INSTALLATION - CONTINUED

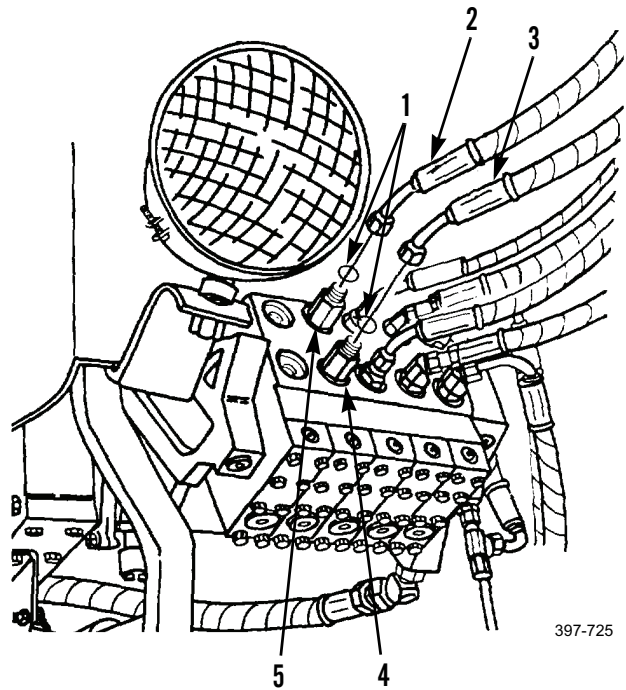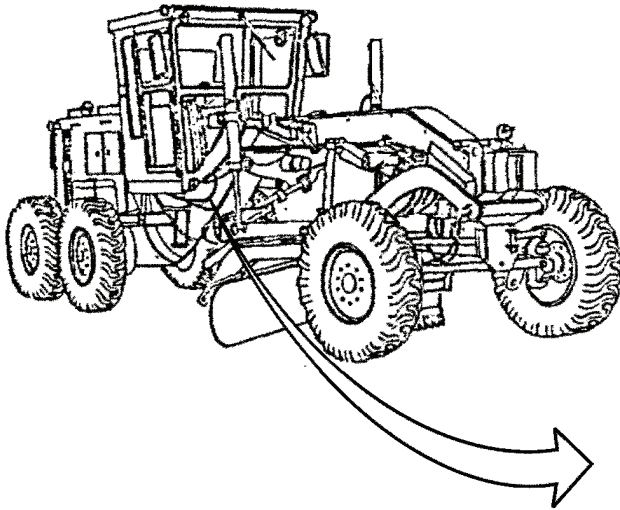38. Install two new preformed packings (1) on connect hose assemblies (2 and 3) to connectors (4 and 5).
39. Connect scarifier hoses (WP 0229 00).



397-725

40. Start engine (TM 5-3805-261-10).
41. Operate control levers. Move system through at least five full-travel movements to bleed air from system.
42. Stop engine.
43. Check for leaks.
44. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

BLADE TIP LINES, FITTINGS, AND HOSES REPLACEMENT

0223 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 26, 27, or 27.3, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (24)

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

Right frame covers removed (WP 0179 00)

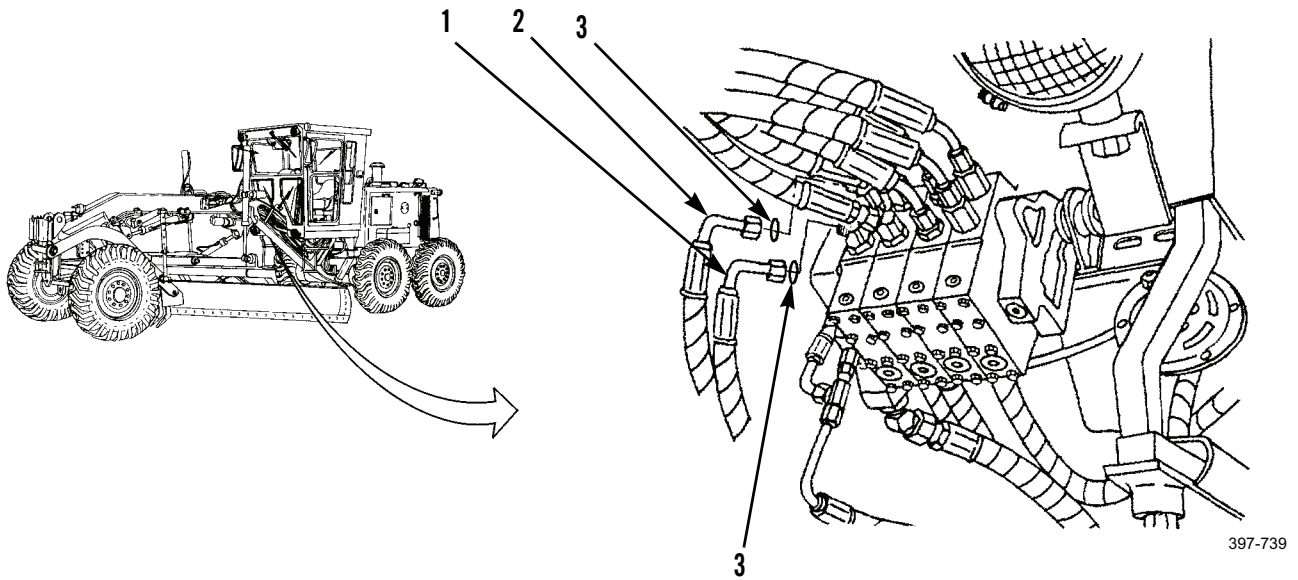
REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assemblies (1 and 2) from left control valve located under front-left side of cab and remove two preformed packings (3). Discard preformed packings.




REMOVAL - CONTINUED

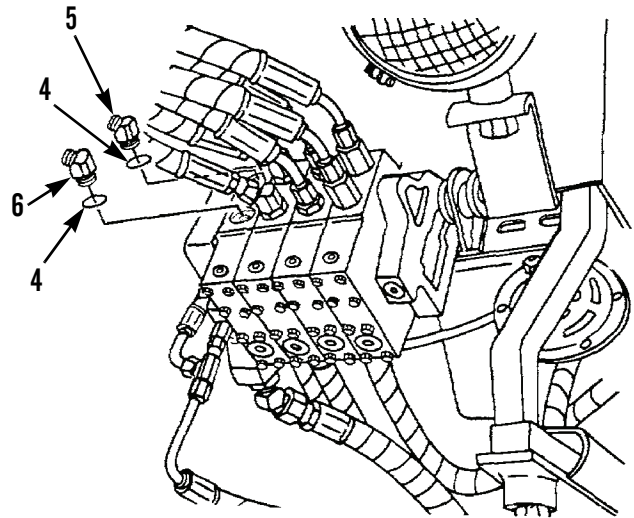2. Remove elbows (5 and 6) and two preformed packings (4). Discard preformed packings.



397-740

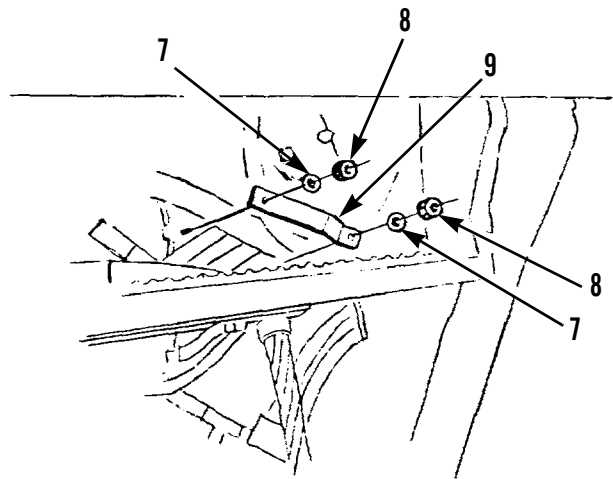
3. Remove two nuts (8), washers (7), and clamp (9) under left side of cab.



397-741


REMOVAL - CONTINUED

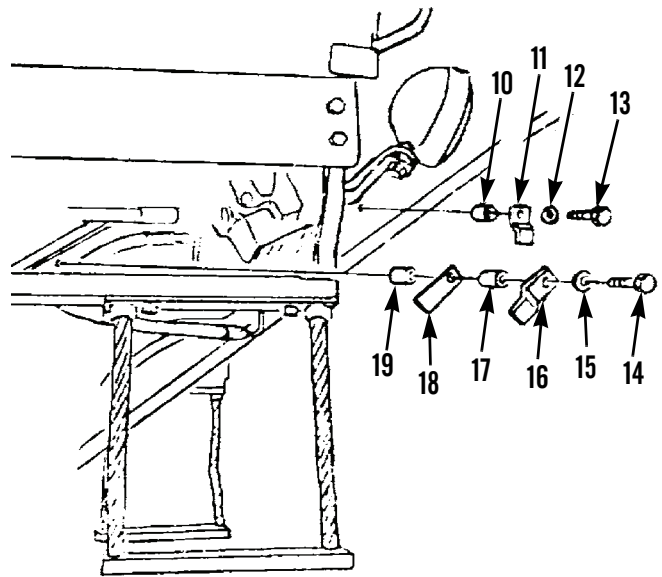4. Remove two bolts (14), washers (15), clamp (16), spacers (17), plate (18), and spacers (19) in right-front side of cab.
5. Remove two bolts (13), washers (12), clamp (11), and spacers (10).



397-742

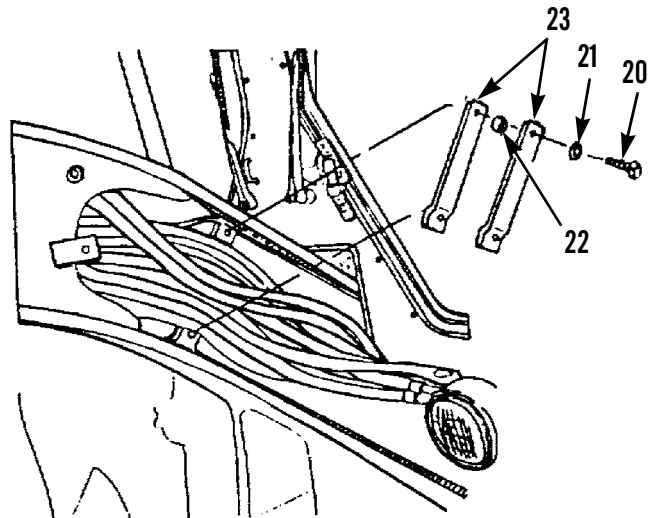
6. Remove two bolts (20), washers (21), clamps (23), and spacers (22) in right-rear side of front frame.



397-743


REMOVAL - CONTINUED

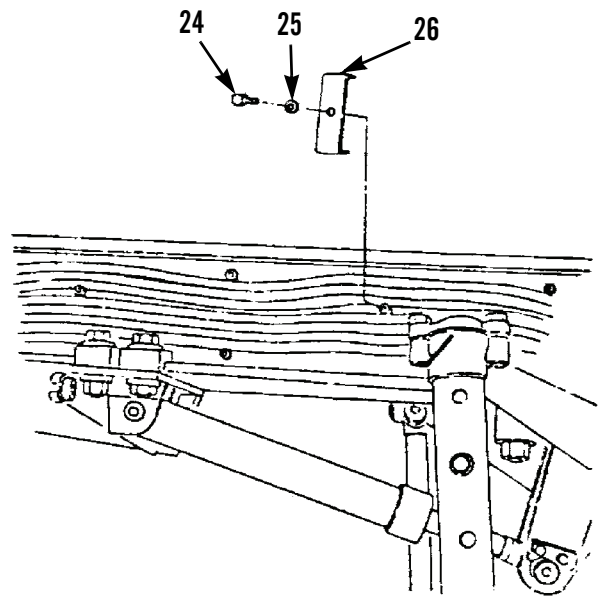7. Remove two bolts (24), washers (25), and clamps (26) in right-center side of front frame.



397-744

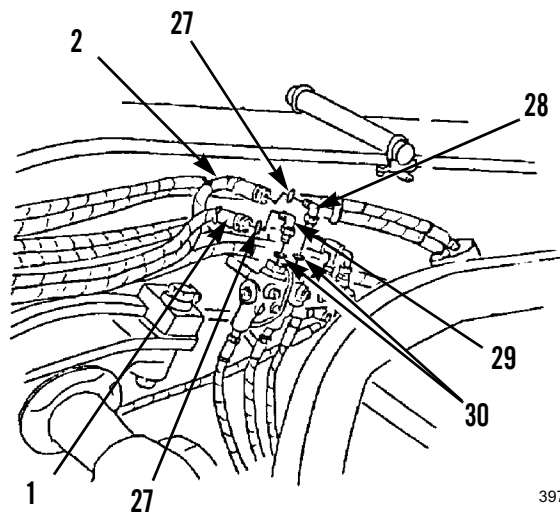
8. Disconnect hose assemblies (1 and 2) from elbows (28 and 29) and remove two preformed packings (27). Discard preformed packings.
9. Remove hose assemblies (1 and 2) from machine.
10. Remove elbows (28 and 29) and two preformed packings (30) from blade tip check and relief valve. Discard two preformed packings.



397-745


REMOVAL - CONTINUED

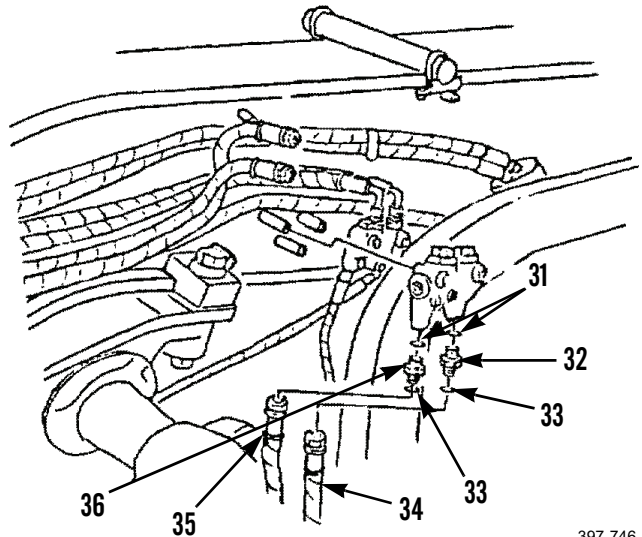11. Disconnect hose assemblies (34 and 35) from connectors (32 and 36) and remove two preformed packings (33). Discard preformed packings.
12. Remove connectors (32 and 36) and two preformed packings (31). Discard two preformed packings.



397-746

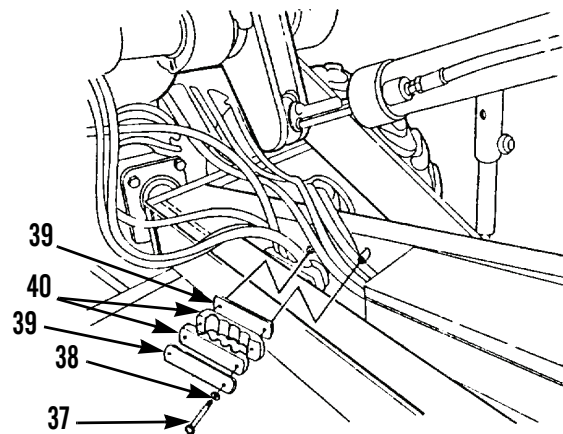
13. Remove two bolts (37), washers (38), plates (39), and clamps (40) from right-front side of drawbar.




397-747

REMOVAL - CONTINUED

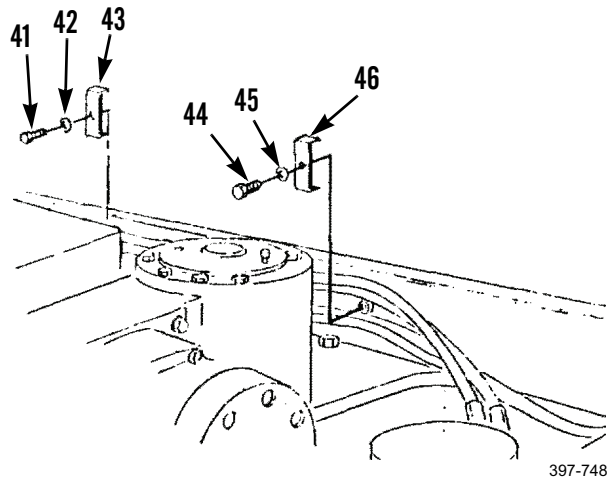14. Remove bolt (41), washer (42), and clamp (43) from inner-right side of drawbar.
15. Remove bolt (44), washer (45), and clamp (46).




16. Disconnect hose assemblies (34 and 35) from elbows (48 and 58) and remove two preformed packings (47). Discard preformed packings.
17. Remove hose assemblies (34 and 35) from machine.
18. Remove elbows (48 and 58) from circle drive swivel assembly and remove two preformed packings (49). Discard preformed packings.
19. Disconnect hose assembly (53) from elbow (51) and remove preformed packing (52). Discard preformed packing.
20. Remove elbow (51) and preformed packing (50). Discard preformed packing.
21. Disconnect hose assembly (54) from elbow (56) and remove preformed packing (55). Discard preformed packing.
22. Remove elbow (56) and preformed packing (57). Discard preformed packing.

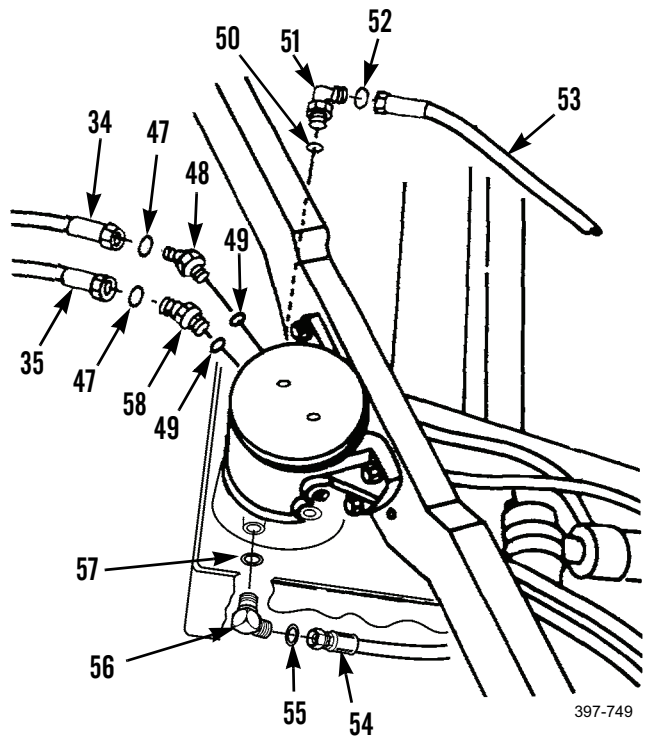


REMOVAL - CONTINUED

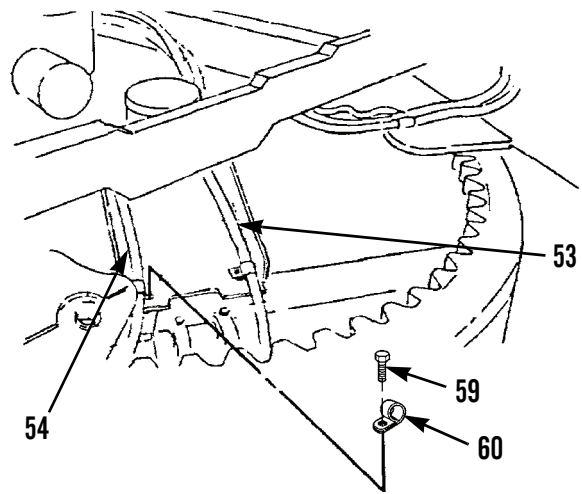23. Remove two bolts (59) and clamps (60) from hose assemblies (53 and 54).



397-750

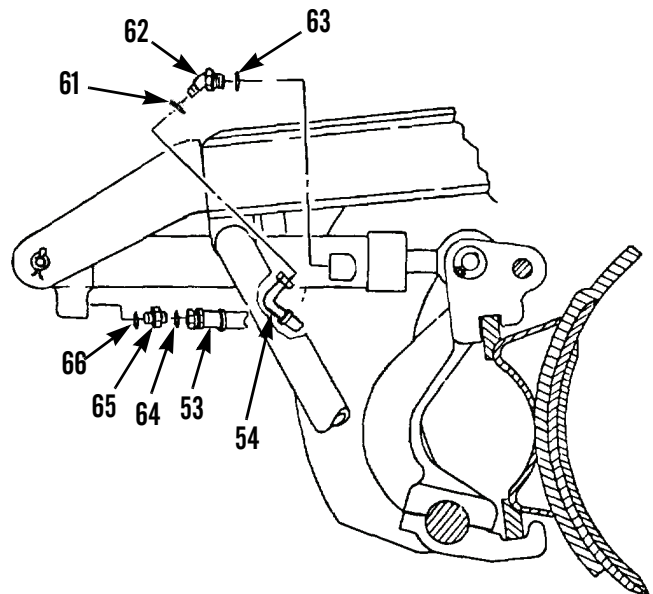24. Disconnect hose assembly (54) from elbow (62) and remove preformed packing (61). Discard preformed packing.
25. Remove hose assembly (54) from machine.
26. Remove elbow (62) and preformed packing (63) from cylinder. Discard preformed packing.
27. Disconnect hose assembly (53) from connector (65) and remove preformed packing (64). Discard preformed packing.
28. Remove hose assembly (53) from machine.
29. Remove connector (65) and preformed packing (66) from end of cylinder. Discard preformed packing.



397-751

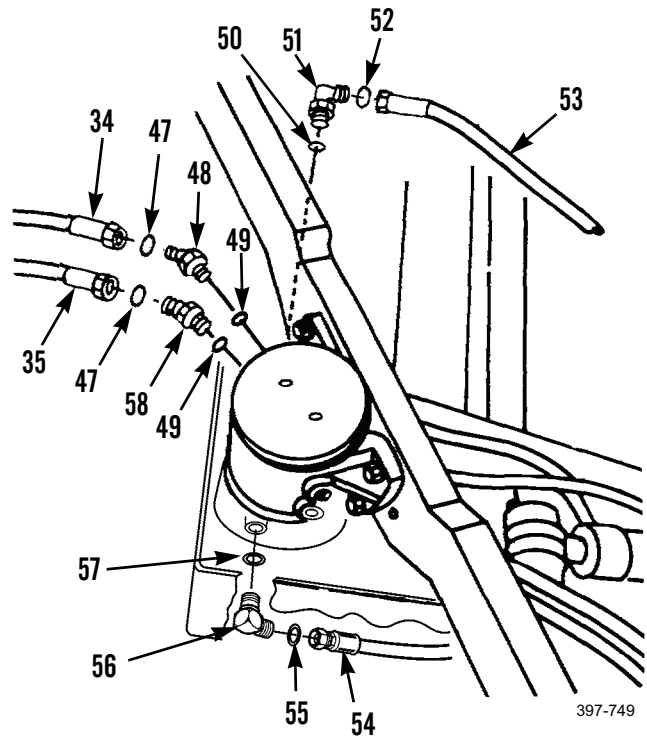
CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**


Lightly lubricate all preformed packings with clean oil before installation.

1. Install new preformed packing (66) and connector (65) to end of blade tip cylinder.
2. Position hose assembly (53) to machine.
3. Install new preformed packing (64) and connect hose assembly (53) to connector (65).
4. Install new preformed packing (63) and elbow (62) on rod end of blade tip cylinder.
5. Position hose assembly (54) on machine.
6. Install new preformed packing (61) and connect hose assembly (54) to elbow (62).
7. Install two clamps (60) and bolts (59) on hose assemblies (53 and 54).
8. Install new preformed packing (57) and elbow (56) on circle drive swivel assembly.
9. Install new preformed packing (55) and connect hose assembly (54) to elbow (56).
10. Install new preformed packings (50) and elbows (51) on circle drive swivel assembly.
11. Install new preformed packing (52) and connect hose assembly (53) to elbow (51).
12. Install two new preformed packing (49) and install elbows (48 and 58) on circle drive swivel assembly.
13. Position hose assemblies (34 and 35) on machine.
14. Install two new preformed packings (47) and connect hose assemblies (34 and 35) to elbows (48 and 58).




INSTALLATION - CONTINUED

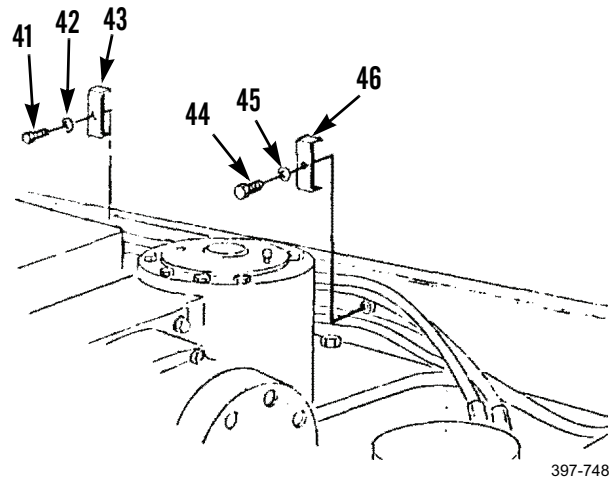15. Install clamp (46), washer (45), and bolt (44) to inner-right side of drawbar.
16. Install clamp (43), washer (42), and bolt (41).



397-748

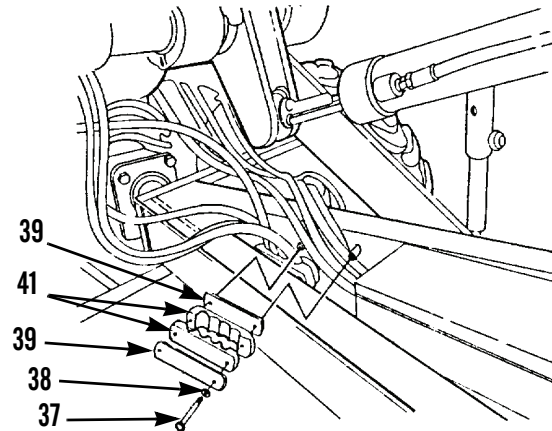
17. Install two plates (39), clamps (41), two washers (38), and bolts (37).



397-747


INSTALLATION - CONTINUED

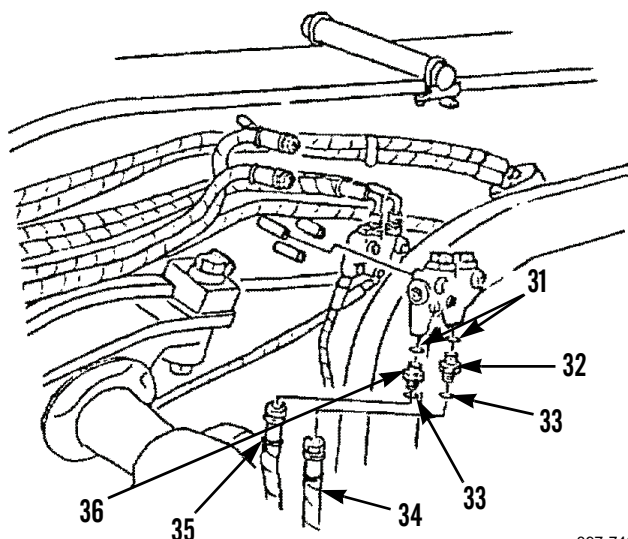18. Install two new preformed packings (31) and connectors (32 and 36) to blade tip check and relief valve in front-right side of front frame.
19. Install two new preformed packings (33) and connect hose assemblies (34 and 35) to connectors (32 and 36).



397-746

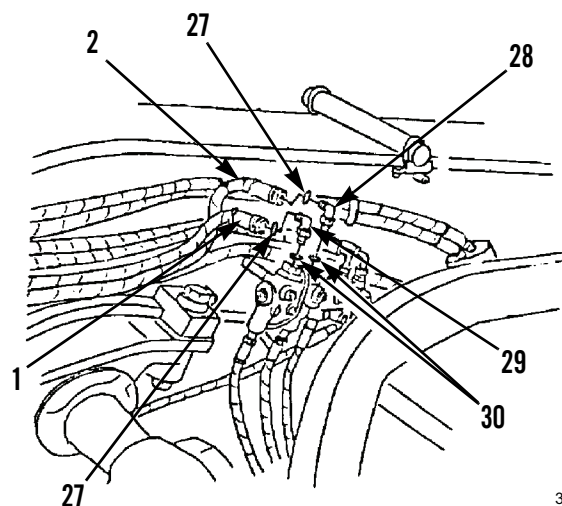
20. Install two new preformed packings (30) and elbows (28 and 29).
21. Position hose assemblies (1 and 2) on machine.
22. Install new preformed packings (27) and connect hose assemblies (1 and 2) to elbows (28 and 29).



397-745


INSTALLATION - CONTINUED

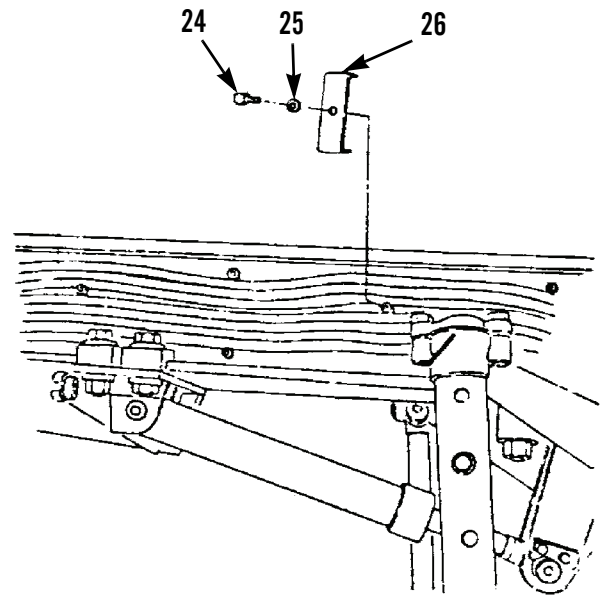23. Install two clamps (26), washers (25), and bolts (24) in center-right side of front frame.



397-744

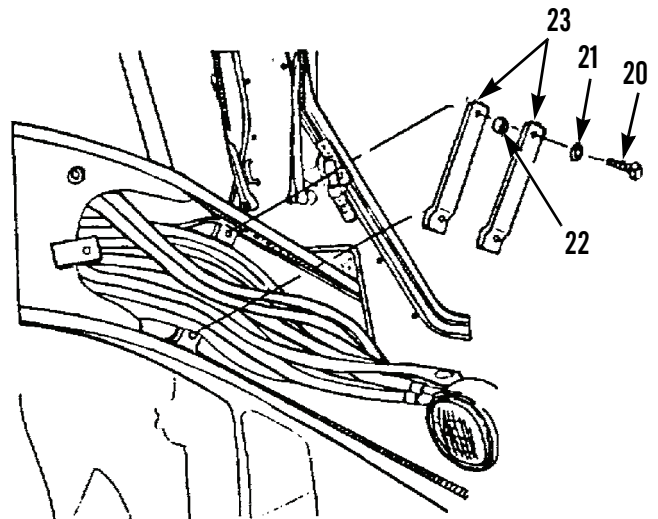
24. Install two spacers (22), clamps (23), washers (21), and bolts (20) in right-rear side of front frame.



397-743


INSTALLATION - CONTINUED

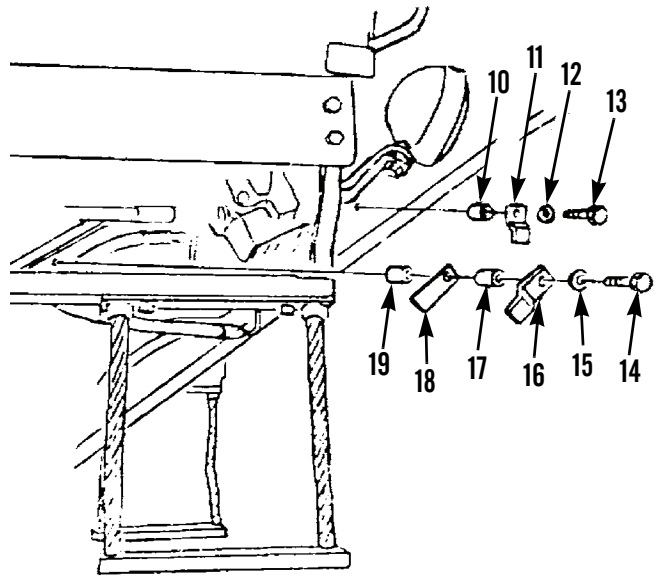- 25. Install two spacers (10), clamp (11), two washers (12), and bolts (13) under right-front side of cab.
- 26. Install two spacers (19), shim (18), two spacers (17), clamp (16), two washers (15), and bolts (14).



397-742

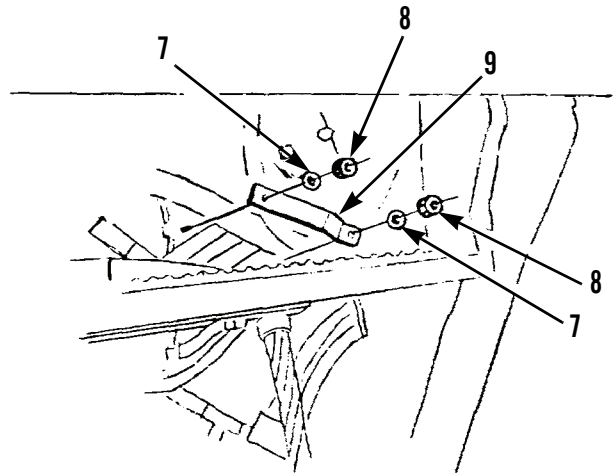
- 27. Install clamp (9), two washers (7), and nuts (8) under left side of cab.



397-741


INSTALLATION - CONTINUED

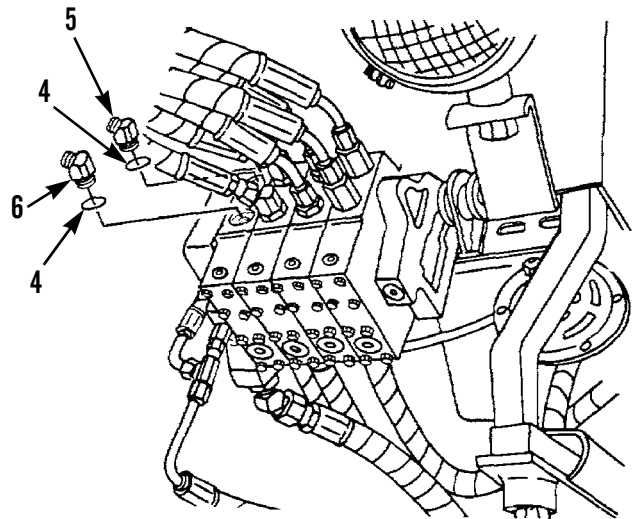28. Install new preformed packings (4) and elbows (5 and 6) to left control valve under left-front side of cab.



397-740

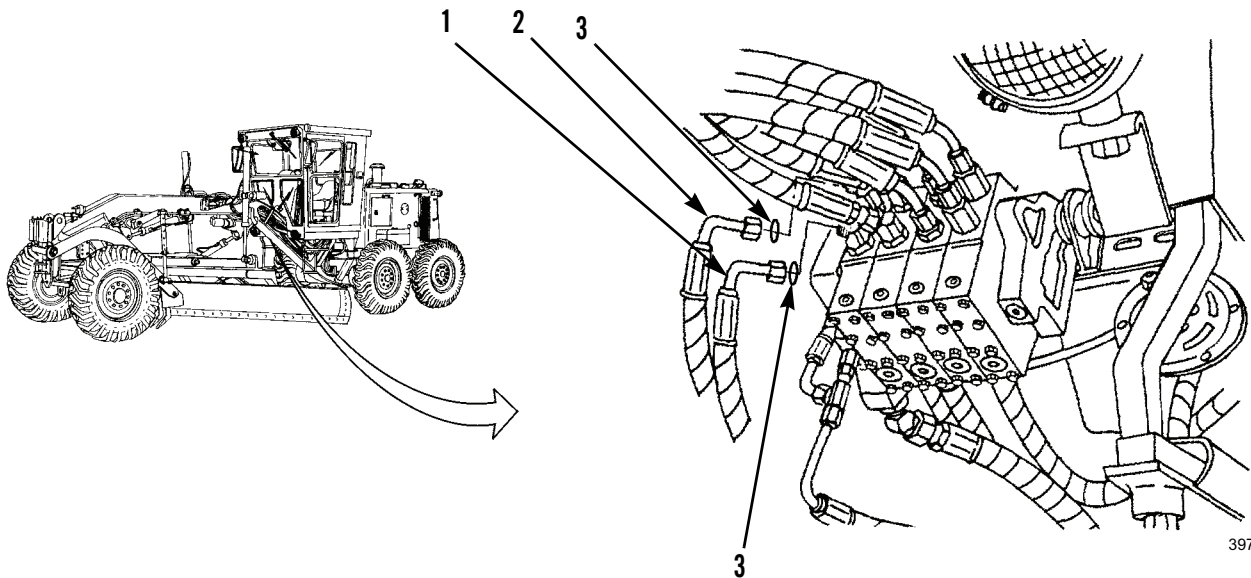29. Install new preformed packings (3) and connect hose assemblies (1 and 2).



397-739

30. Start engine (TM 5-3805-261-10).
 31. Operate control levers. Move system through at least five full-travel movements to bleed air from system.
 32. Stop engine and check for leaks.
 33. Install right frame covers (WP 0179 00).
 34. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

LEANING WHEEL HOSES AND FITTINGS REPLACEMENT

0224 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring

Packing, preformed (8)

References

WP 0020 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Leaning wheel lock pin installed (TM 5-3805-261-10)

Right side front frame cover removed (WP 0179 00)

Blade lift hoses disconnected (WP 0222 00)

Scarifier hoses disconnected (WP 0229 00)

REMOVAL

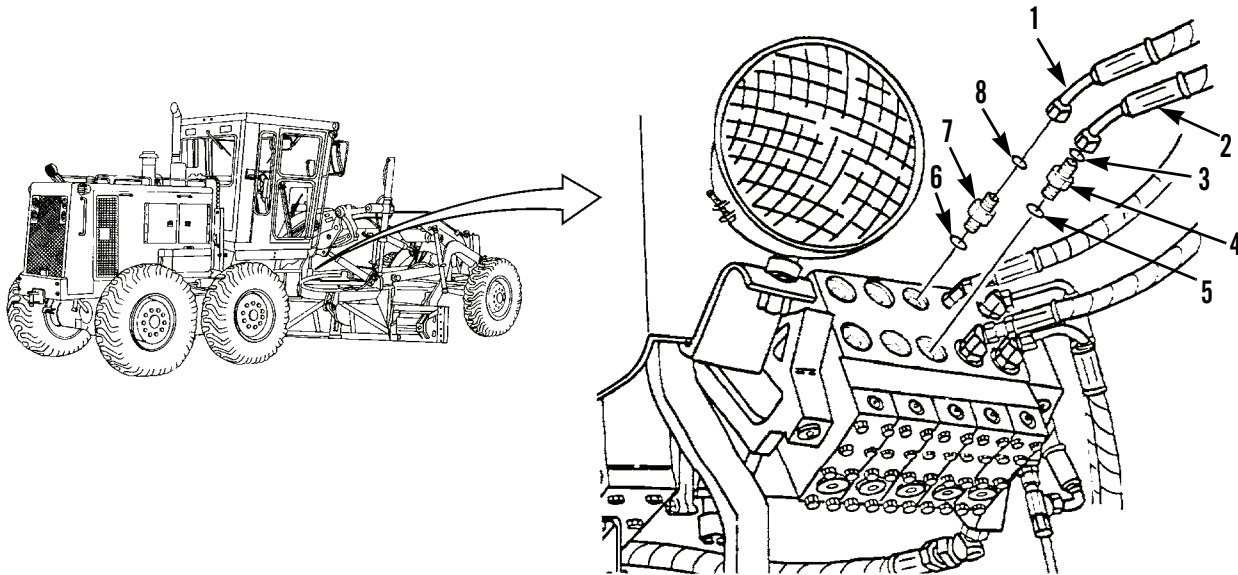
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hoses (1 and 2).
2. Remove O-ring (3), connector (4), preformed packing (5), O-ring (8), connector (7), and preformed packing (6). Discard O-rings and preformed packings.



397-2366

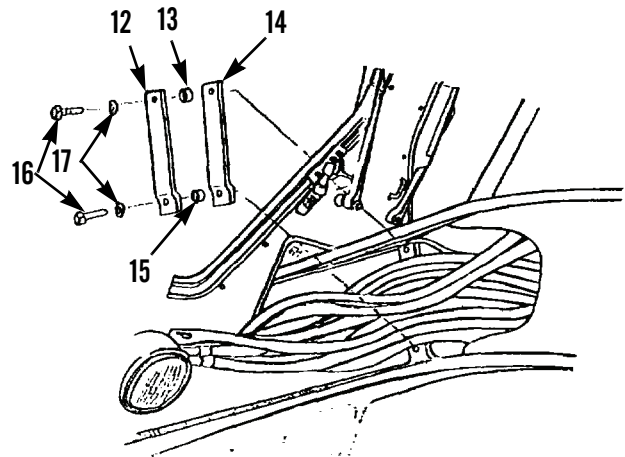
3. Remove two bolts (16), washers (17), clamp (12), two spacers (13 and 15), and clamp (14).




397-754

REMOVAL - CONTINUED

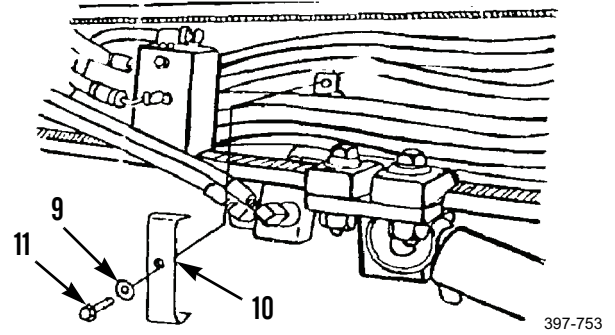4. Remove bolt (11), washer (9), and clamp (10) from right-center section of frame.




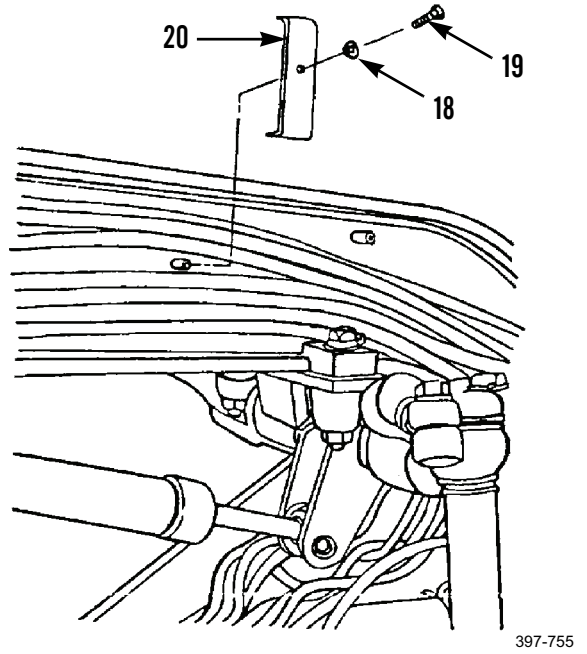5. Remove bolt (19), washer (18), and clamp (20) from right-forward section of frame.




REMOVAL - CONTINUED

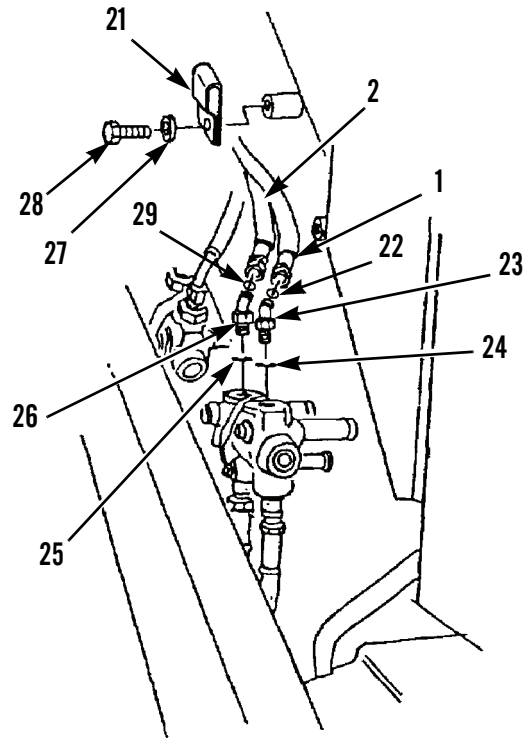6. Remove bolt (28), washer (27), and clip (21) from frame.
7. Remove hoses (1 and 2) and O-rings (22 and 29) from elbows (23 and 26). Discard O-rings.
8. Remove hoses (1 and 2) from frame.
9. Remove elbow (23), preformed packing (24), elbow (26), and preformed packing (25). Discard preformed packings.



397-756

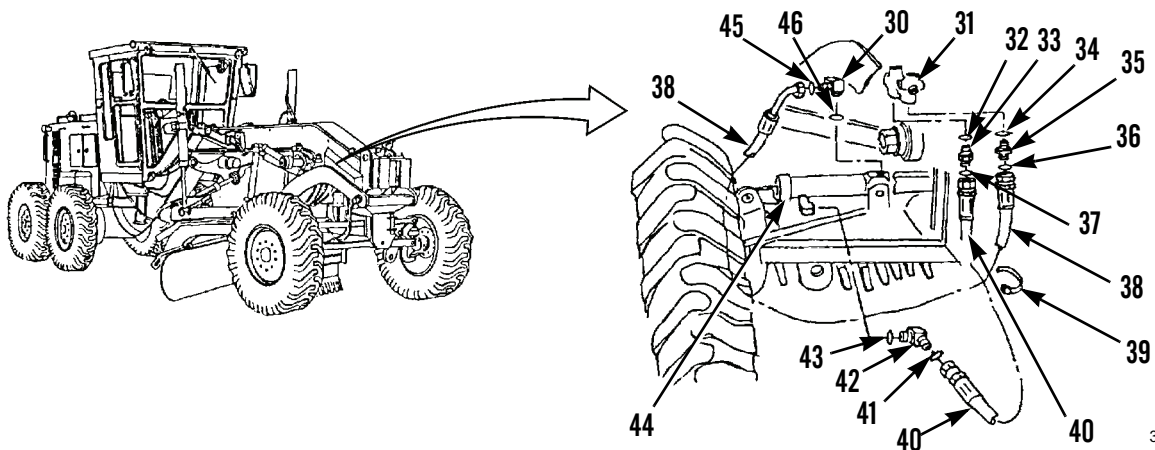10. Disconnect hoses (38 and 40) and O-rings (36 and 37) from bottom of leaning wheel check and relief valve (31). Discard O-rings.
11. Remove connector (35), preformed packing (34), connector (33), and preformed packing (32). Discard preformed packings.
12. Remove and discard tie strap (39).
13. Remove hoses (38 and 40) and O-rings (41 and 45) from leaning hydraulic cylinder (44). Discard O-rings.
14. Remove elbow (30), preformed packing (46), elbow (42), and preformed packing (43) from leaning wheel hydraulic cylinder (44). Discard preformed packings.




397-2367

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

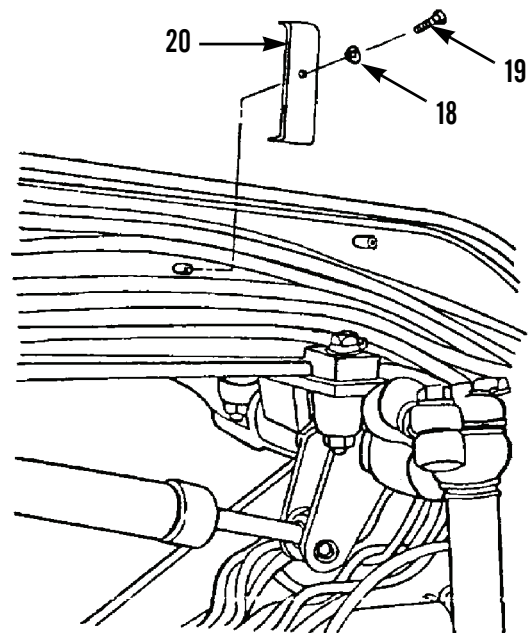
1. Install new preformed packing (43), elbow (42), new O-ring (41), new preformed packing (46), new O-ring (45), and elbow (30) on leaning wheel hydraulic cylinder (44).
2. Connect hoses (38 and 40).
3. Install new tie strap (39).
4. Install new preformed packing (32), connector (33), new O-ring (37), new preformed packing (34), connector (35), and new O-ring (36).
5. Install hoses (38 and 40) to bottom of leaning wheel check and relief valve (31).
6. Install new preformed packing (25), elbow (26), new preformed packing (24) and elbow (23).
7. Install new O-rings (29 and 22) on elbows (26 and 23).
8. Position hoses (1 and 2) on frame and connect to elbows (26 and 23).
9. Install clip (21), washer (27), and bolt (28) on frame.
10. Install clamp (20), washer (18), and bolt (19) on right-forward section of frame.




397-755

INSTALLATION - CONTINUED

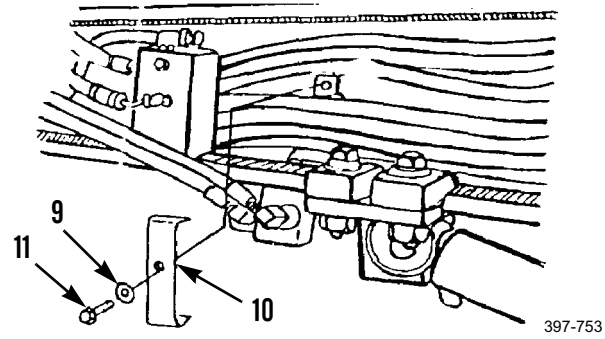11. Install clamp (10), washer (9), and bolt (11) on right-center section of frame.




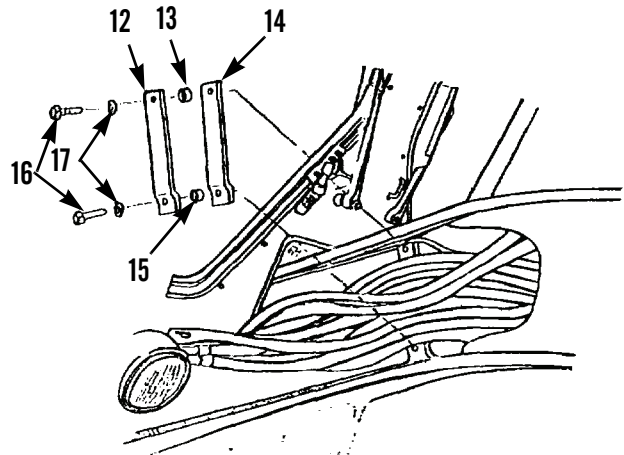12. Install clamp (14), spacers (13 and 15), clamp (12), two washers (17), and bolts (16).



INSTALLATION - CONTINUED

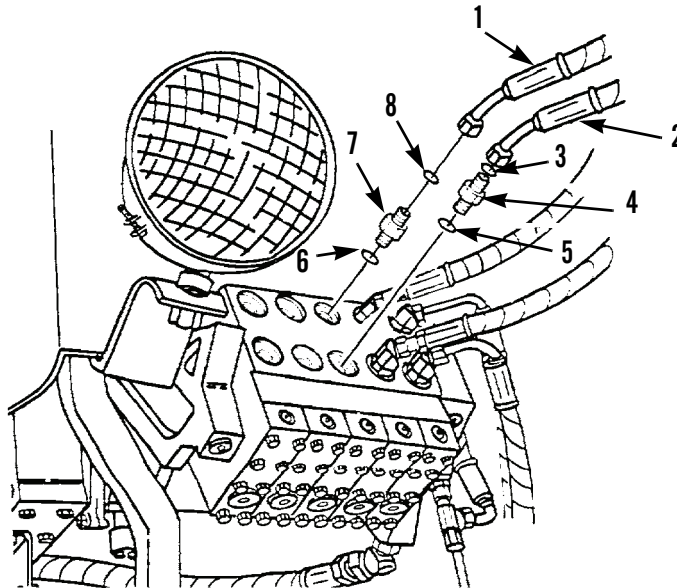13. Install new preformed packing (6), connector (7), new O-ring (8), new preformed packing (5), connector (4), and new O-ring (3).
14. Install hoses (1 and 2).



397-752

15. Connect blade lift hoses (WP 0222 00).
16. Connect scarifier hoses (WP 0229 00).
17. Remove leaning wheel lock pin (TM 5-3805-261-10).
18. Check lever of hydraulic tank and refill to proper level (WP 0216 00).
19. Start engine (TM 5-3805-261-10).
20. Operate control levers. Move system through at least five full movements of travel to bleed air from system.
21. Stop engine.
22. Check for leaks.
23. Install right side front frame cover (WP 0179 00).

END OF WORK PACKAGE

CIRCLE DRIVE MOTOR HOSES AND FITTINGS REPLACEMENT

0225 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring (8)

Packing, preformed (8)

References

WP 0202 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

Left side front frame covers removed (WP 0179 00)

Blade lift hoses disconnected (WP 0222 00)

Sideshift hoses disconnected (WP 0228 00)

REMOVAL

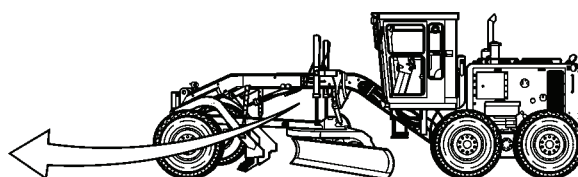
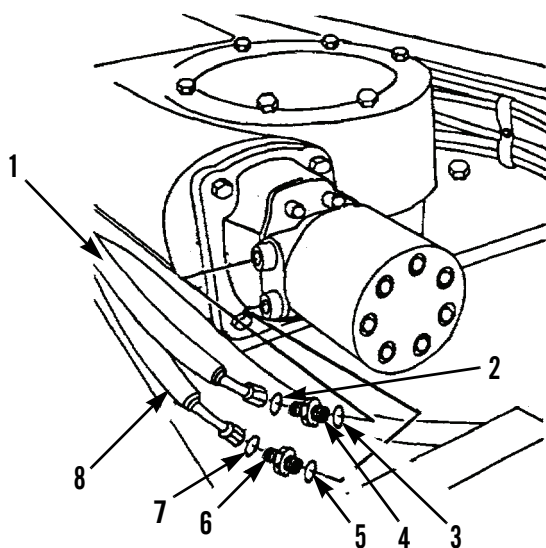
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assemblies (1 and 8).
2. Remove O-ring (7), connector (6), preformed packing (5), O-ring (2), connector (4), and preformed packing (3). Discard preformed packings and O-rings.




397-2373

NOTE

It may be necessary to remove toolbox to access bolt (WP 0202 00).

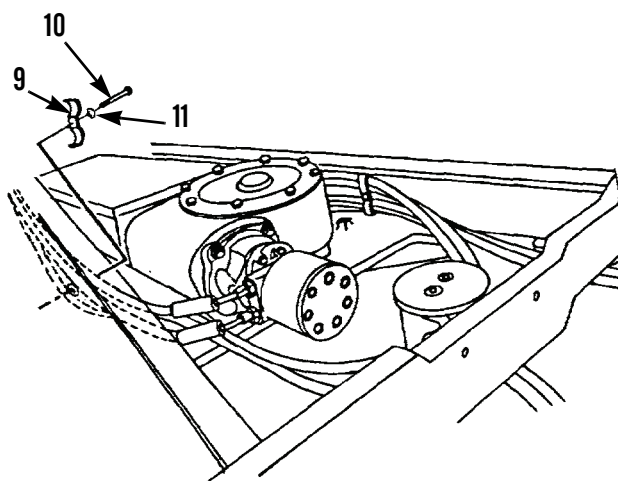
3. Remove bolt (10), washer (11), and clamp (9).



397-759


REMOVAL - CONTINUED

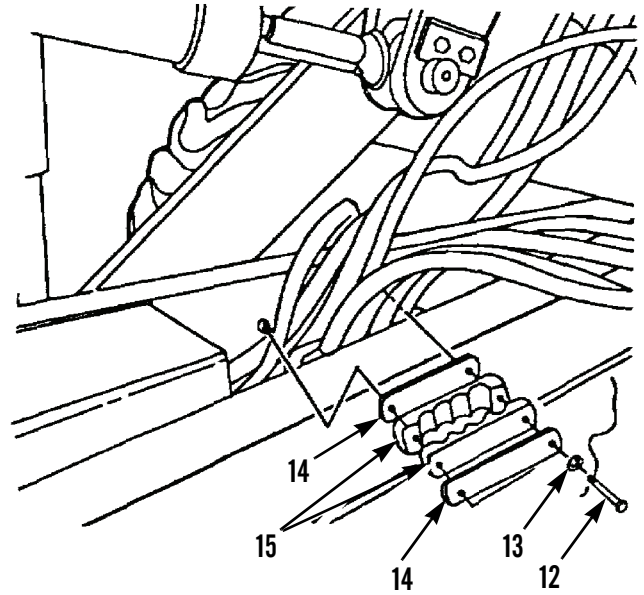4. Remove two bolts (12), washers (13), plates (14), and clamps (15).



397-760

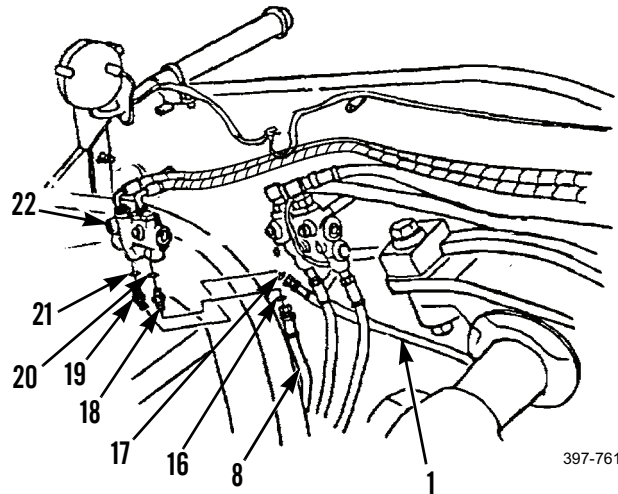
5. Remove hose assemblies (1 and 8).
6. Remove O-rings (16 and 17), connectors (18 and 19), and preformed packings (20 and 21) from bottom of check valve (22). Discard O-rings and preformed packings.



397-761


REMOVAL - CONTINUED

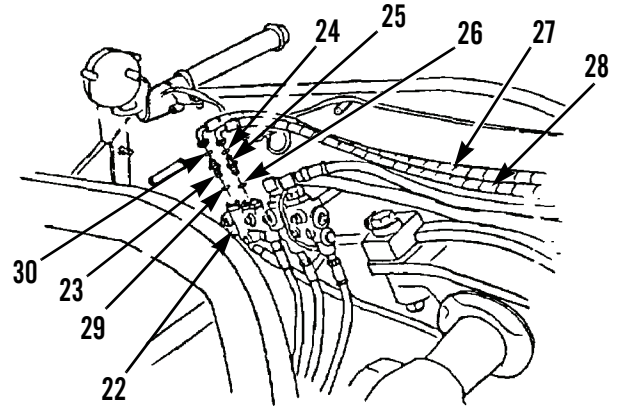7. Disconnect hose assemblies (27 and 28).
8. Remove O-rings (24 and 30), connectors (23 and 25), and preformed packings (26 and 29) from top of check valve (22). Discard O-rings and preformed packings.



397-762

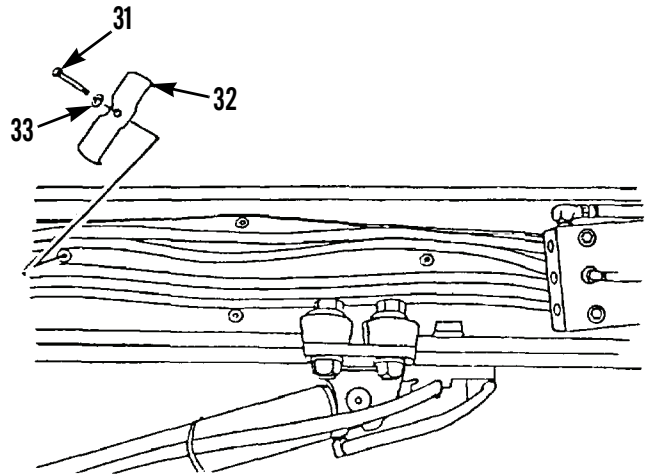
9. Remove two bolts (31), washers (33), and clamps (32).



397-763


REMOVAL - CONTINUED

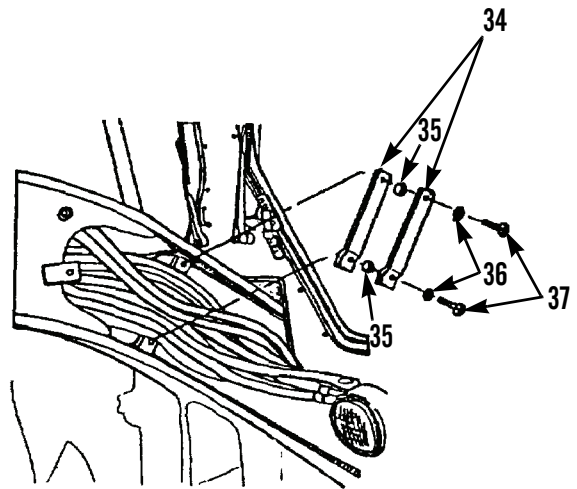10. Remove two bolts (37), washers (36), clamps (34), and spacers (35).



397-764

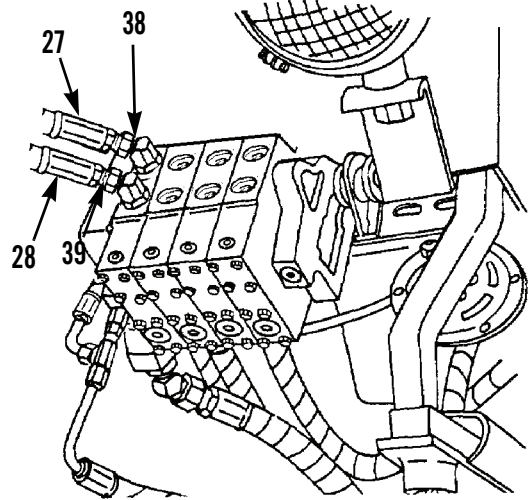
11. Remove hose assemblies (28 and 27) and O-rings (38 and 39). Discard O-rings.
12. Remove hose assemblies (28 and 27) from frame.



397-765

REMOVAL - CONTINUED

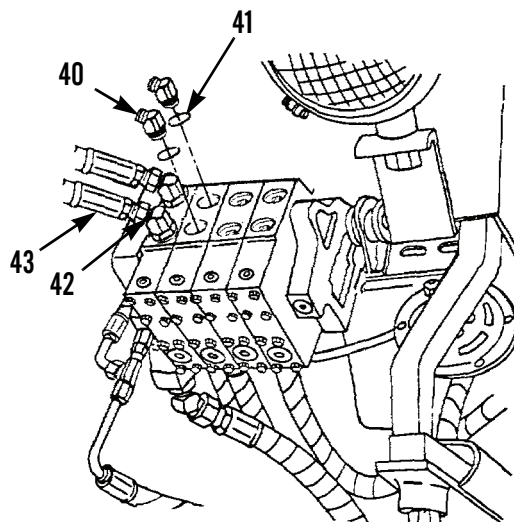13. Remove two elbows (40 and 43) and preformed packings (41 and 42). Discard preformed packings.




397-766

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

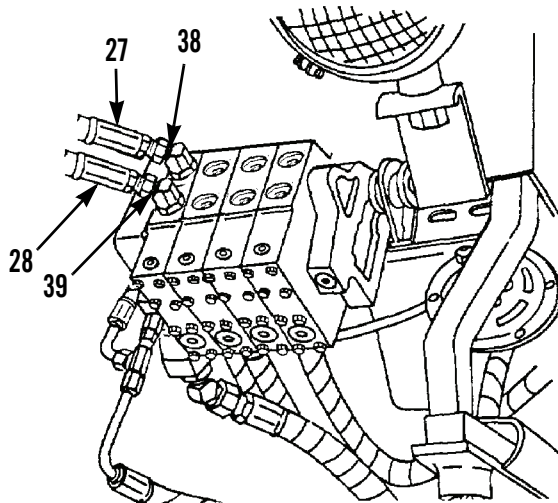
1. Install two new preformed packings (41 and 42) and elbows (40 and 43).
2. Position hose assemblies (27 and 28) on frame.
3. Connect hose assemblies (27 and 28) and new O-rings (38 and 39).



397-765


INSTALLATION - CONTINUED

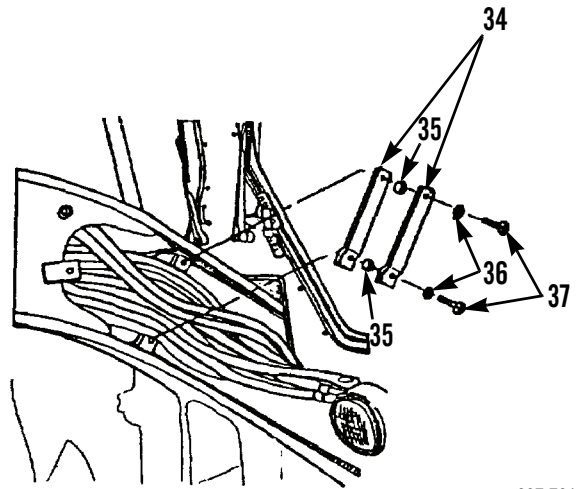4. Install two spacers (35), clamps (34), washers (36), and bolts (37).



397-764

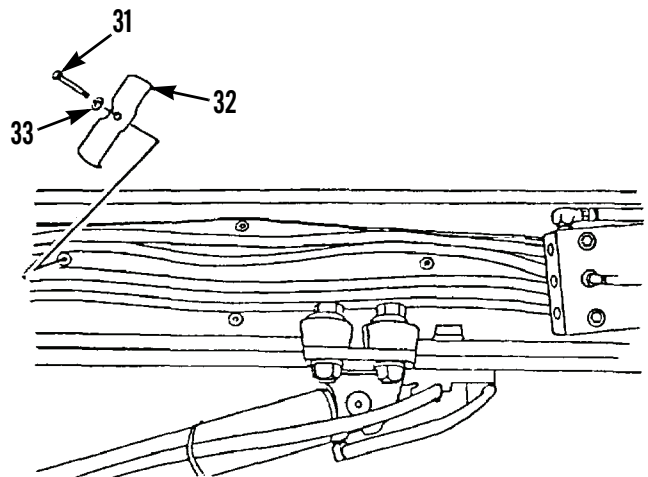
5. Install two clamps (32), washers (33), and bolts (31).



397-763


INSTALLATION - CONTINUED

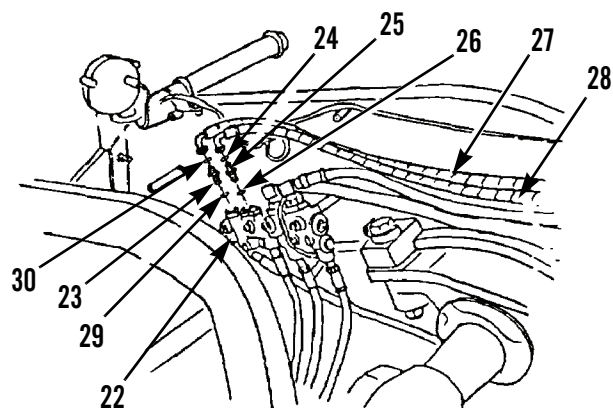6. Install new preformed packings (26 and 29), connectors (23 and 25), and new O-rings (24 and 30) on top of check valve (22).
7. Install hose assemblies (27 and 28).



397-762

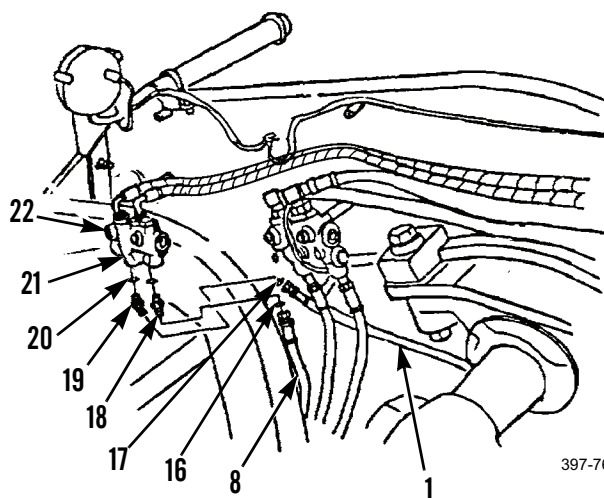
8. Install new preformed packings (20 and 21), connectors (18 and 19), and new O-rings (16 and 17) on bottom of check valve (22).
9. Connect hose assemblies (1 and 8).



397-761

INSTALLATION - CONTINUED

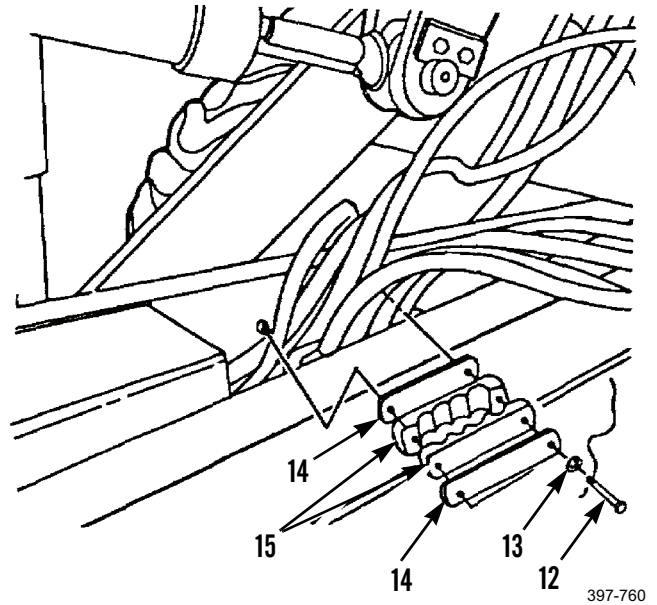10. Install two clamps (15), plates (14), washers (13), and bolts (12).




397-760

11. Install clamp (9), washer (11), and bolt (10).

NOTE

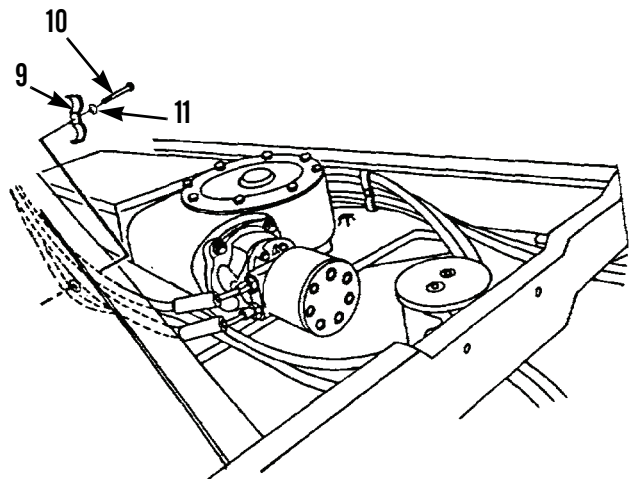
Install toolbox if removed (WP 0202 00).



397-759

INSTALLATION - CONTINUED

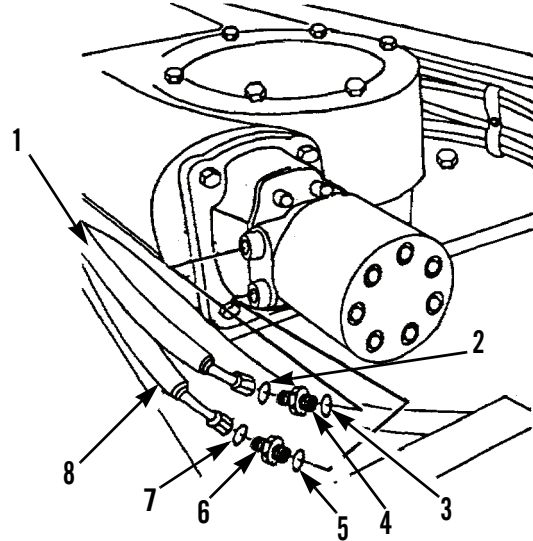12. Install new preformed packing (3), connector (4), new O-ring (2), new preformed packing (5), connector (6), and new O-ring (7).
13. Install hose assemblies (1 and 8).
14. Connect sideshift hoses (WP 0228 00).
15. Connect blade lift hoses (WP 0222 00).



397-2373

16. Check level of hydraulic tank and fill as necessary (WP 0216 00).
17. Start engine (TM 5-3805-261-10).
18. Operate control levers. Move system through at least five-full movements of travel to bleed air from system.
19. Stop engine and check for leaks.
20. Install left side front frame covers (WP 0179 00).

END OF WORK PACKAGE

CENTERSHIFT LINES, FITTINGS, AND HOSES REPLACEMENT

0226 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring (8)

Packing, preformed (8)

References

WP 0202 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

Right side front frame covers removed (WP 0179 00)

Scarifier hoses disconnected (WP 0229 00)

Blade lift hoses disconnected (WP 0222 00)

Wheel lean hoses disconnected (WP 0224 00)

REMOVAL

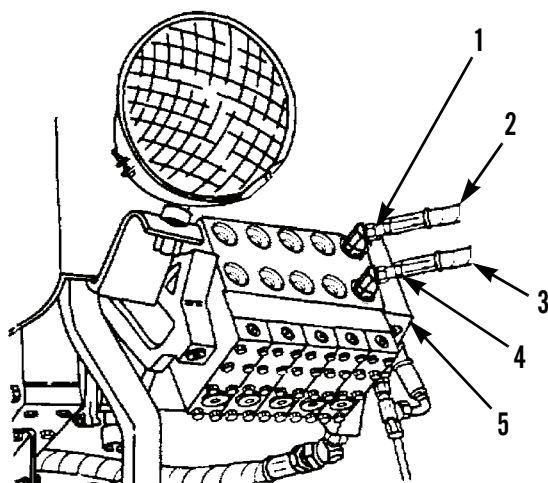
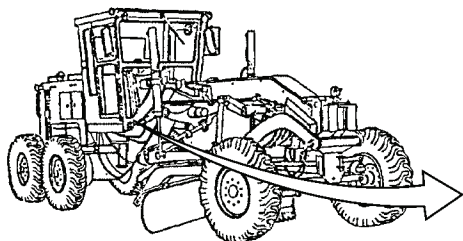
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assemblies (2 and 3) and remove O-rings (1 and 4) from right control valve group (5). Discard O-rings.



397-2374

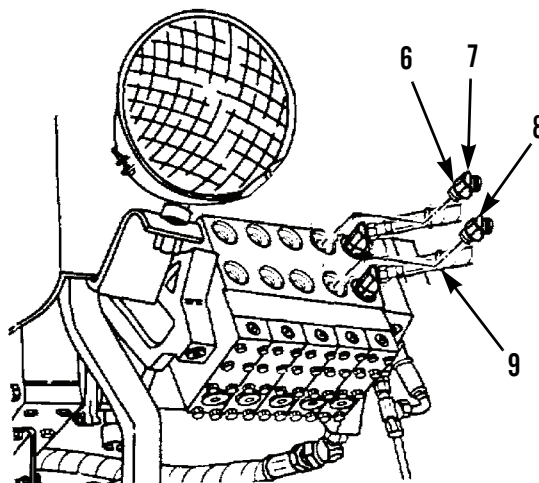
2. Remove elbows (7 and 8) and preformed packings (6 and 9). Discard preformed packings.




397-768

REMOVAL - CONTINUED

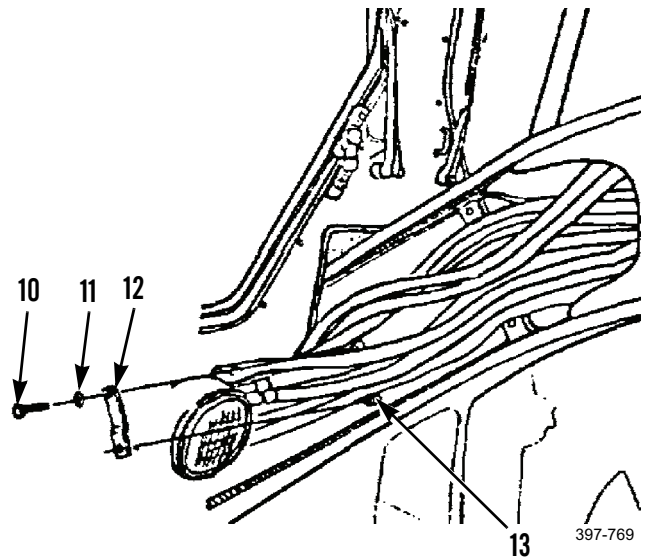3. Remove two bolts (10), washers (11), and clamps (12 and 13).




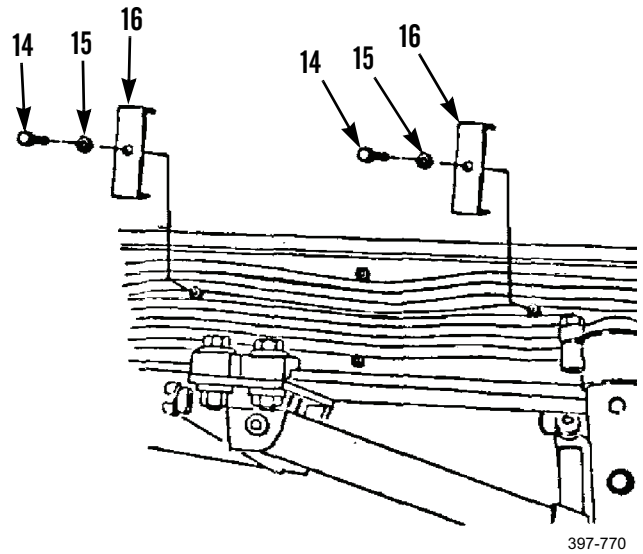4. Remove two bolts (14), washers (15), and clamps (16).




REMOVAL - CONTINUED

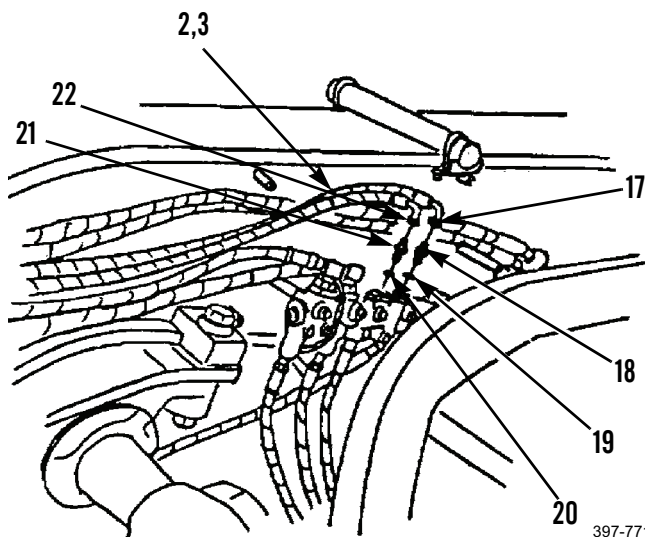5. Remove hose assemblies (2 and 3), O-rings (17 and 22), connectors (18 and 21), and preformed packings (19 and 20). Discard O-rings and preformed packings.
6. Remove hose assemblies (2 and 3) from frame.



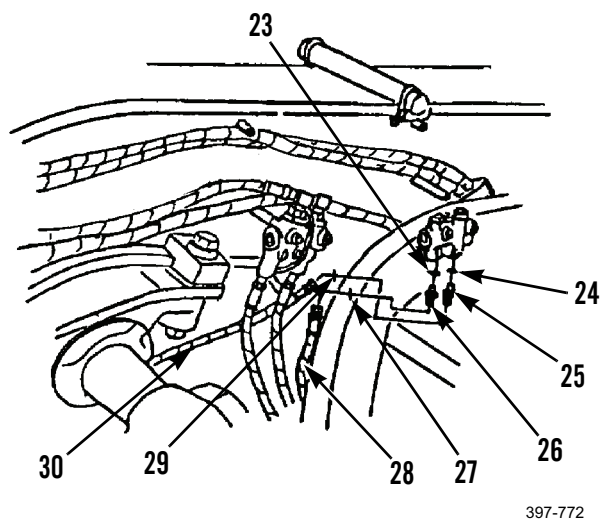7. Disconnect hose assemblies (28 and 30) and remove O-rings (27 and 29), connectors (25 and 26), and preformed packings (23 and 24). Discard O-rings and preformed packings.




REMOVAL - CONTINUED

8. Remove bolts (33 and 34), washers (32 and 35), plates (36), and clamps (31).


NOTE

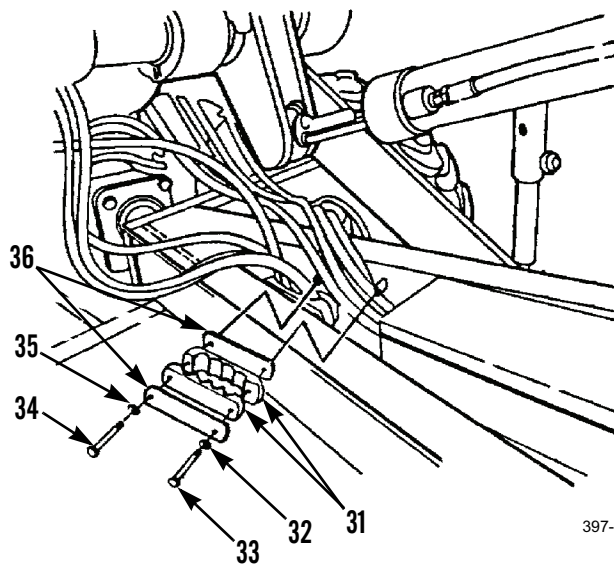It may be necessary to remove toolbox to access bolts (WP 0202 00).



397-773

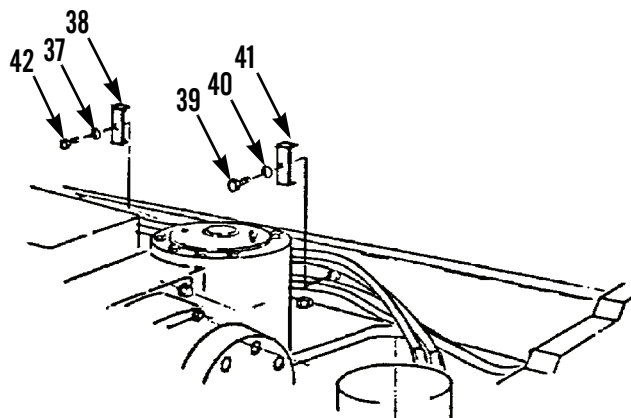
9. Remove bolt (42), washer (37), clamp (38), bolt (39), washer (40), and clamp (41).




397-774

REMOVAL - CONTINUED

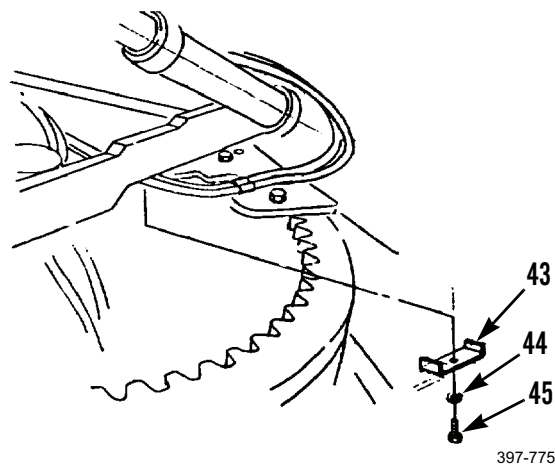10. Remove bolt (45), washer (44), and clamp (43).




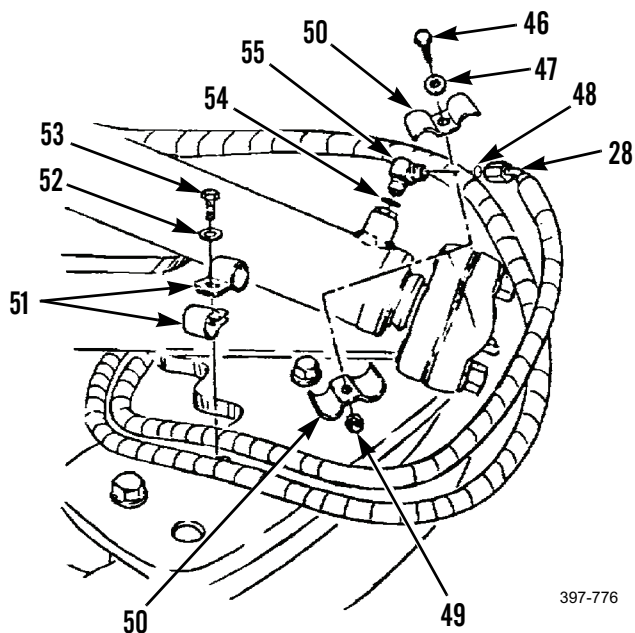11. Remove bolt (53), washer (52), and two clips (51).
12. Remove nut (49), two clips (50), washer (47), and bolt (46).
13. Remove hose assembly (28), O-ring (48), elbow (55), and preformed packing (54). Discard preformed packing.



REMOVAL - CONTINUED

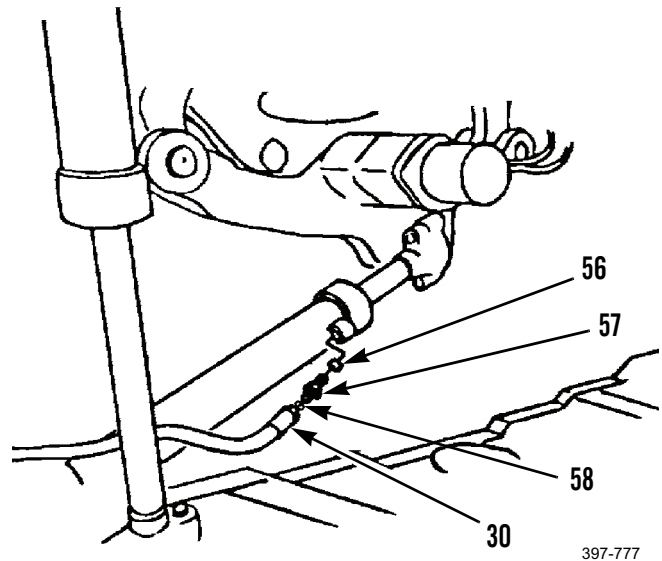14. Remove hose assembly (30), O-ring (58), connector (57), and preformed packing (56). Discard preformed packing.
15. Remove hose assemblies from machine.



CLEANING AND INSPECTION

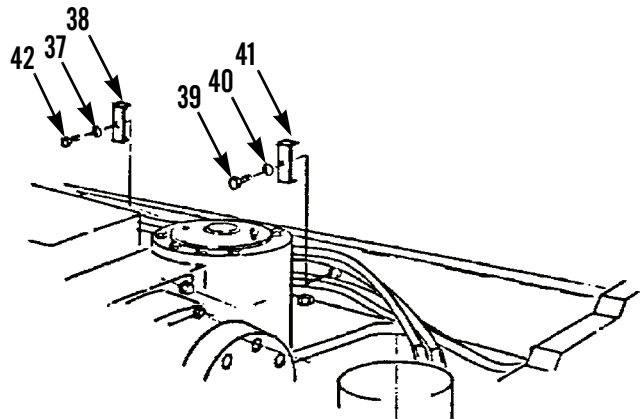
Clean and inspect all parts in accordance WP 0020 00.

INSTALLATION

1. Position hose assemblies on machine.
2. Install new preformed packing (56), connector (57), new O-ring (58), and hose assembly (30).
3. Install new preformed packing (54), elbow (55), new O-ring (48), and hose assembly (28).
4. Install bolt (46), washer (47), two clips (50), and nut (49).
5. Install two clips (51), washer (52), and bolt (53).
6. Install clamp (43), washer (44), and bolt (45).
7. Install clamp (41), washer (40), bolt (39), clamp (38), washer (37), and bolt (42).

NOTE


Install toolbox if removed (WP 0202 00).




397-774

INSTALLATION - CONTINUED

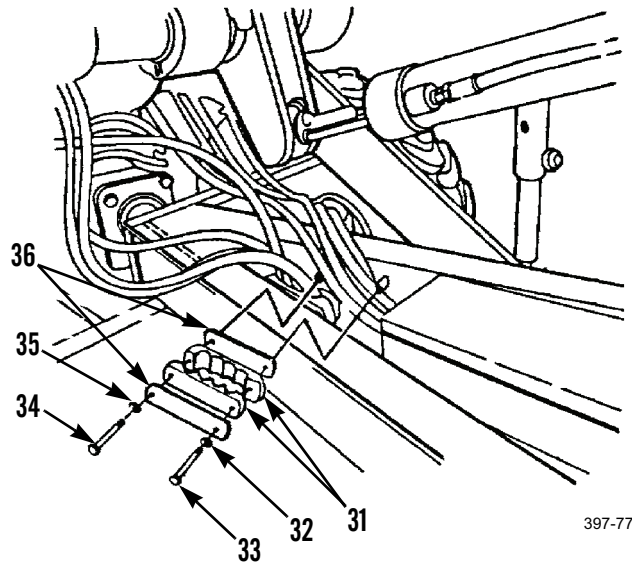8. Install two clamps (31), plates (36), washers (32 and 35), and bolts (33 and 34).
9. Position hose assemblies (28 and 30).




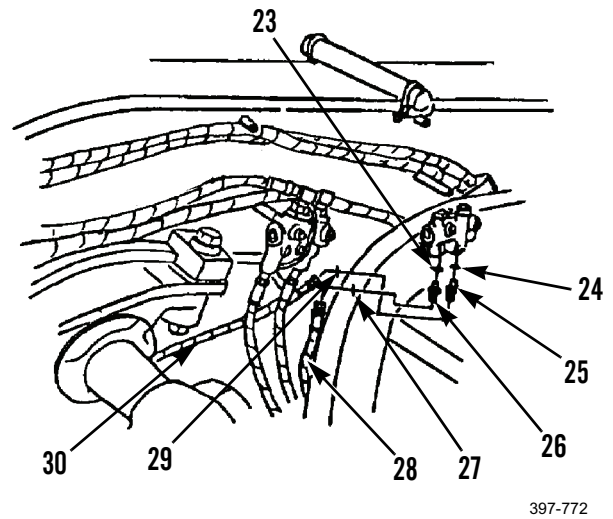10. Install new preformed packings (23 and 24), connectors (25 and 26), new O-rings (27 and 29), and connect hose assemblies (28 and 30).




INSTALLATION - CONTINUED

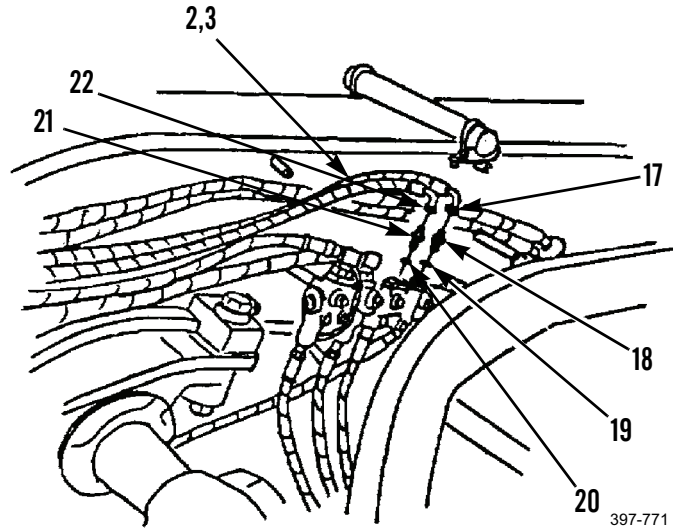11. Position hose assemblies (2 and 3).
12. Install new preformed packings (19 and 20), connectors (18 and 21), new O-rings (17 and 22), and hose assemblies (2 and 3).




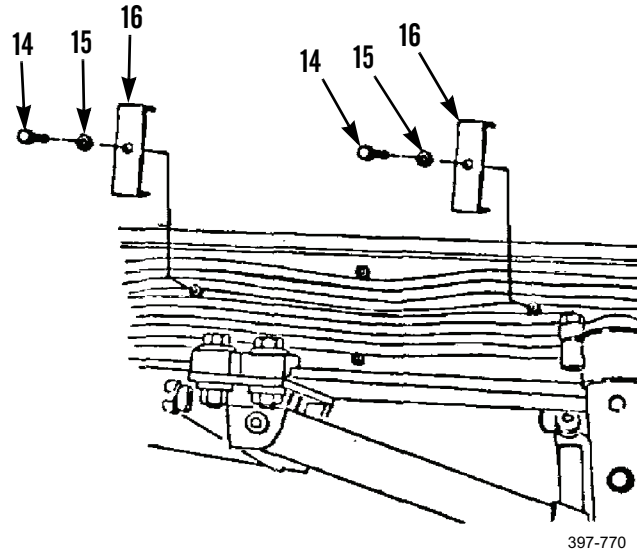13. Install two clamps (16), washers (15), and bolts (14).




INSTALLATION - CONTINUED

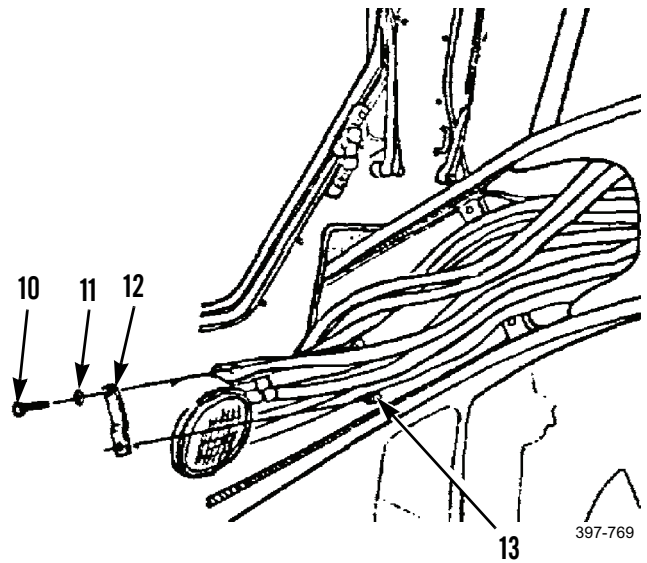14. Install clamps (12 and 13), washers (11), and bolts (10).




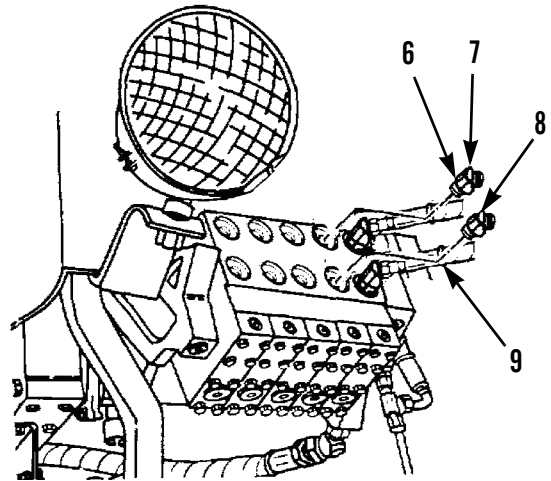15. Install new preformed packings (6 and 9) and elbows (7 and 8).



INSTALLATION - CONTINUED

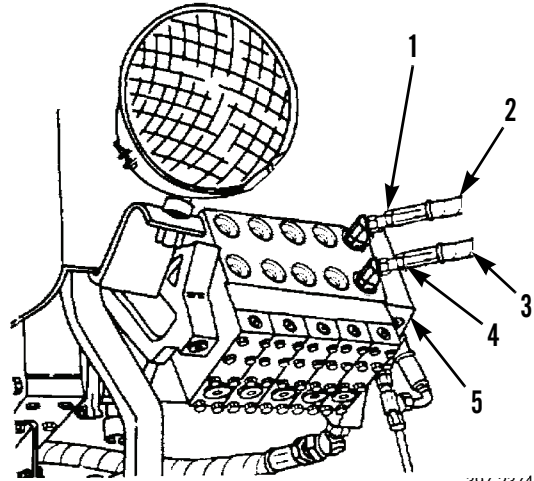16. Install new O-rings (1 and 4) and hose assemblies (2 and 3) on right control valve group (5).
17. Connect wheel lean hoses (WP 0224 00).
18. Connect blade lift hoses (WP 0222 00).
19. Connect scarifier hoses (WP 0229 00).



397-2374

20. Check level of hydraulic tank and fill as necessary (WP 0216 00).
21. Start engine (TM 5-3805-261-10).
22. Operate control levers. Move system through at least five-full movements of travel to bleed air from system.
23. Stop engine.
24. Check for leaks.
25. Install right side front frame covers (WP 0179 00).

END OF WORK PACKAGE

ARTICULATION LINES, FITTINGS, AND HOSES REPLACEMENT

0227 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring (16)

Packing, preformed (16)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

Scarifier hoses disconnected (WP 0229 00)

Blade lift hoses disconnected (WP 0222 00)

Wheel lean hoses disconnected (WP 0224 00)

Centershift hoses disconnected (WP 0226 00)

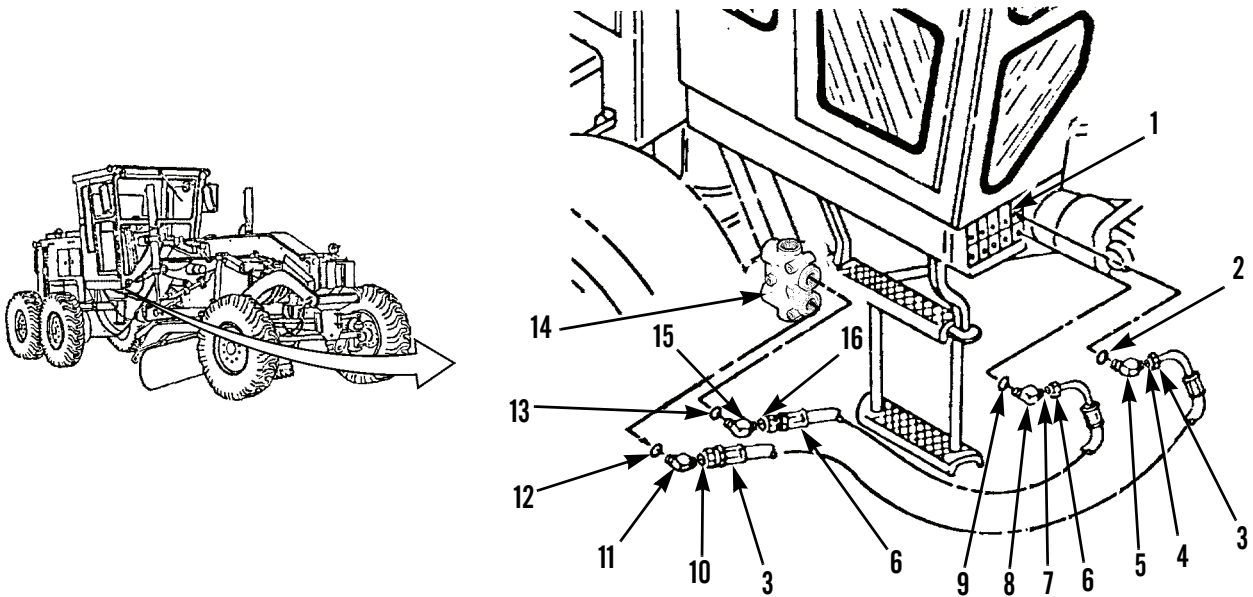
REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


1. Disconnect hose assemblies (3 and 6) from right control valve group (1).
2. Remove O-ring (7), elbow (8), preformed packing (9), O-ring (4), elbow (5), and preformed packing (2). Discard O-rings and preformed packings.
3. Remove hose assemblies (3 and 6) from articulation check valve (14).
4. Remove hose assemblies (3 and 6) from machine.
5. Remove O-ring (16), elbow (15), preformed packing (13), new O-ring (10), elbow (11), and preformed packing (12). Discard O-rings and preformed packings.



397-2377


REMOVAL - CONTINUED

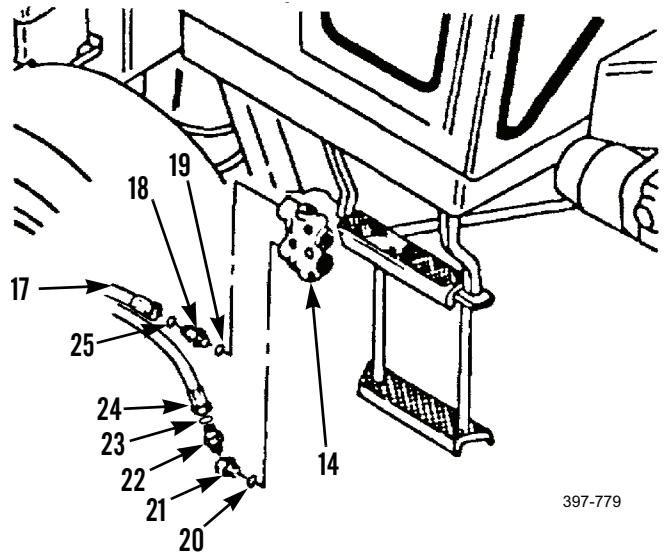6. Disconnect hose assemblies (17 and 24) from articulation check valve (14).
7. Remove O-ring (25), fitting (18), preformed packing (19), elbow (22), O-ring (23), fitting (21), and preformed packing (20).



397-779

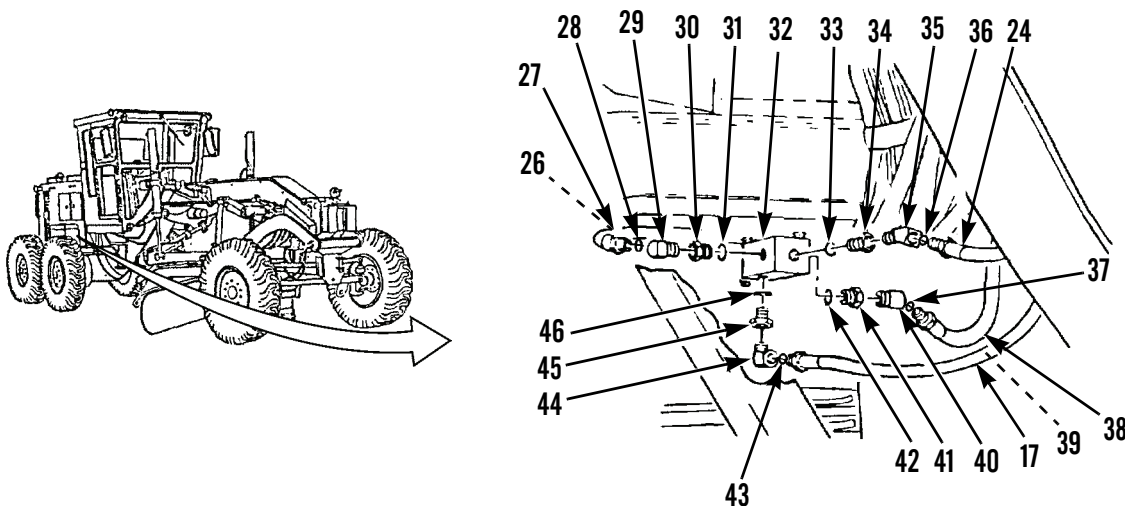
8. Remove hose assemblies (17 and 24) from centering valve (32).
9. Remove hose assemblies (17 and 24) from machine.
10. Remove O-ring (36), elbow (35), fitting (34), preformed packing (33), O-ring (43), elbow (44), fitting (45), and preformed packing (46).
11. Disconnect hose assemblies (26 and 27) from centering valve (32) on front side.
12. Remove two O-rings (28), elbows (29), fittings (30), and preformed packings (31). Discard O-rings and preformed packings.
13. Disconnect hose assemblies (38 and 39) from centering valve (32) on rear side.
14. Remove two O-rings (37), elbows (40), fittings (41), and preformed packings (42). Discard O-rings and preformed packings.



397-2378


REMOVAL - CONTINUED

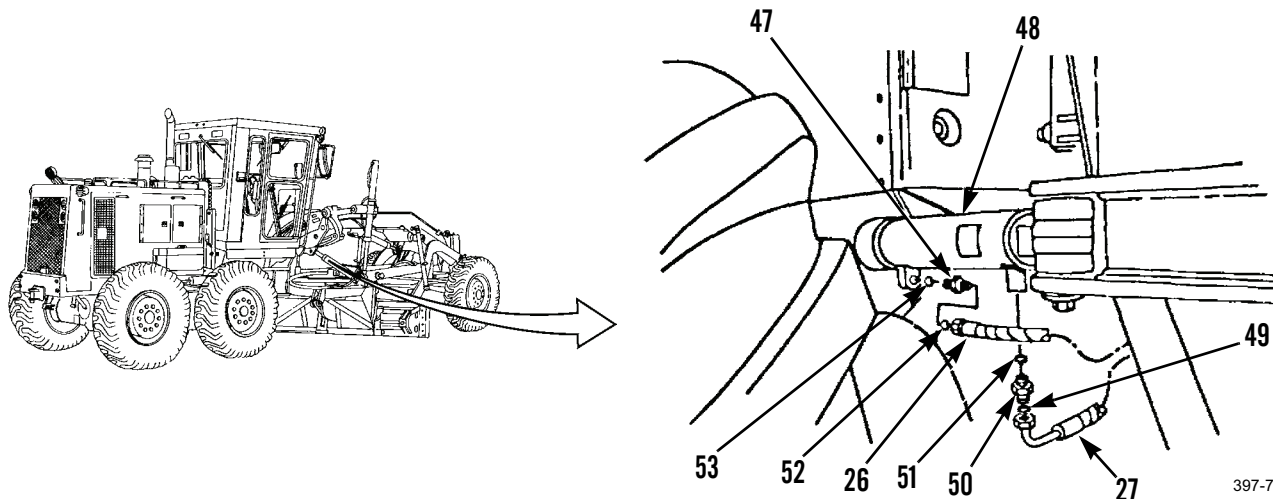15. Remove hose assemblies (26 and 27) from articulation cylinder (48).
16. Remove hose assemblies (26 and 27) from machine.
17. Remove O-ring (49), connector (50), preformed packing (51), O-ring (52), connector (47), and preformed packing (53). Discard O-rings and preformed packings.



397-781

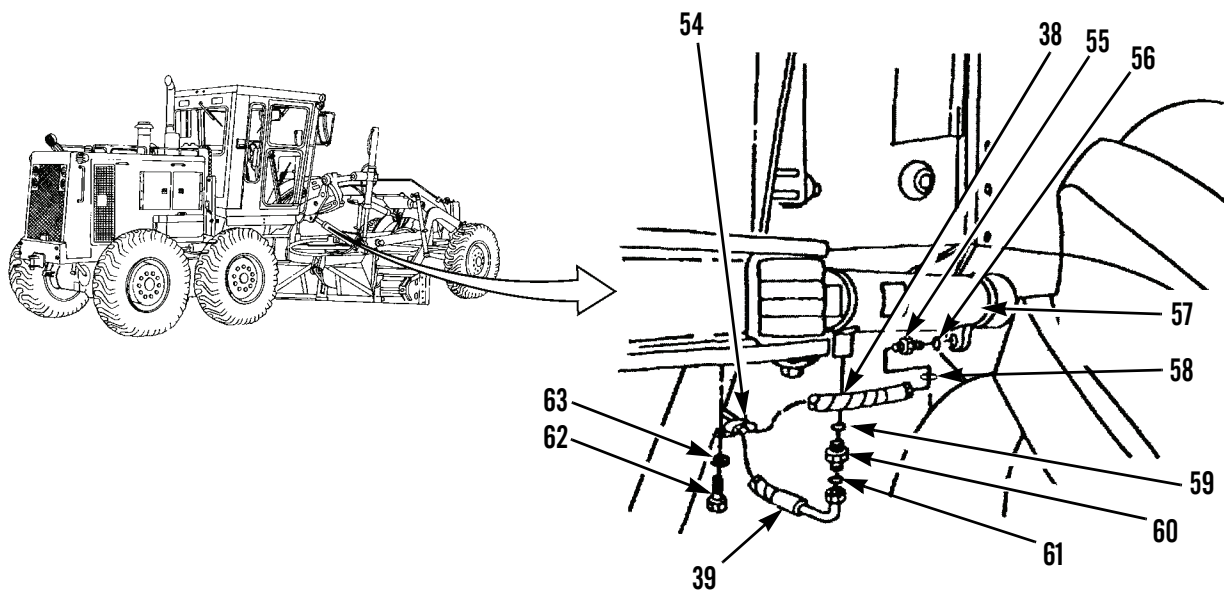18. Remove bolt (62), washer (63), and clamp (54).
19. Remove hose assemblies (38 and 39) from articulation cylinder (57) under left side of engine compartment.
20. Remove hose assemblies (38 and 39) from machine.
21. Remove O-ring (61), connector (60), preformed packing (59), O-ring (58), connector (55), and preformed packing (56). Discard O-rings and preformed packings.




397-2379

CLEANING AND INSPECTION


Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

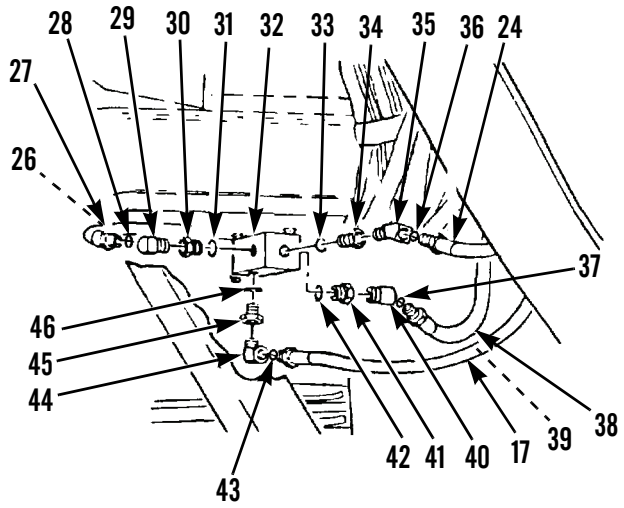1. Install new preformed packing (56), connector (55), new O-ring (58), new preformed packing (59), connector (60), and new O-ring (61) to articulation cylinder (57) under left side of engine compartment.
2. Position hose assemblies (38 and 39) on machine.
3. Connect hose assemblies (38 and 39) to connectors (55 and 60).
4. Install clamp (54), washer (63), and bolt (62).
5. Install new preformed packing (53), connector (47), new O-ring (52), new preformed packing (51), connector (50), and new O-ring (49) to articulation cylinder (48) under right side of engine compartment.
6. Position hose assemblies (26 and 27) on machine.
7. Connect hose assemblies (26 and 27) to connectors (47 and 50).
8. Install two new preformed packings (42), fittings (41), elbows (40), and new O-rings (37) to centering valve (32) under right rear side of cab.
9. Install hose assemblies (38 and 39) to elbows (40).
10. Install two new preformed packings (31), fittings (30), elbows (29), and new O-rings (28) to centering valve (32) on front side.
11. Install hose assemblies (26 and 27) to elbows (29).
12. Install new preformed packing (46), fitting (45), elbow (44), new O-ring (43), new preformed packing (33), fitting (34), elbow (35), and new O-ring (36) to centering valve (32).
13. Position hose assemblies (17 and 24) on machine.
14. Install hose assemblies (17 and 24) elbow (44 and 35).
15. Install new preformed packing (20), fitting (21), elbow (22), new O-ring (23), new preformed packing (19), fitting (18), and new O-ring (25) to articulation check valve (14).
16. Install hose assemblies (17 and 24) to fitting (18) and elbow (22).




397-2378

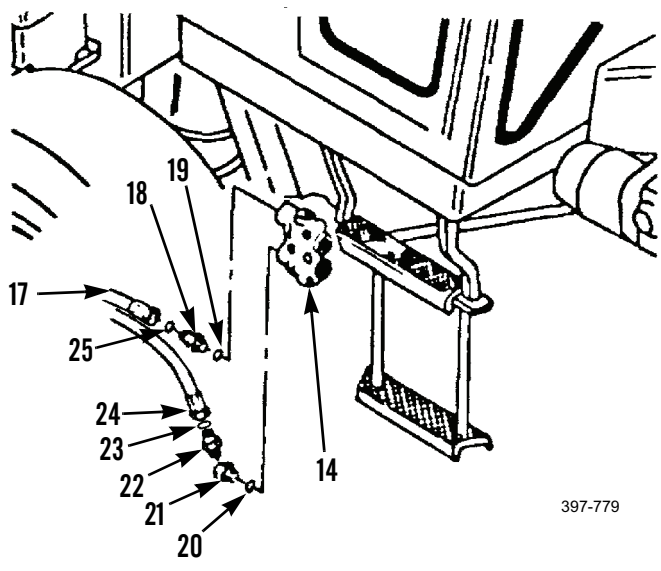

397-779

INSTALLATION - CONTINUED

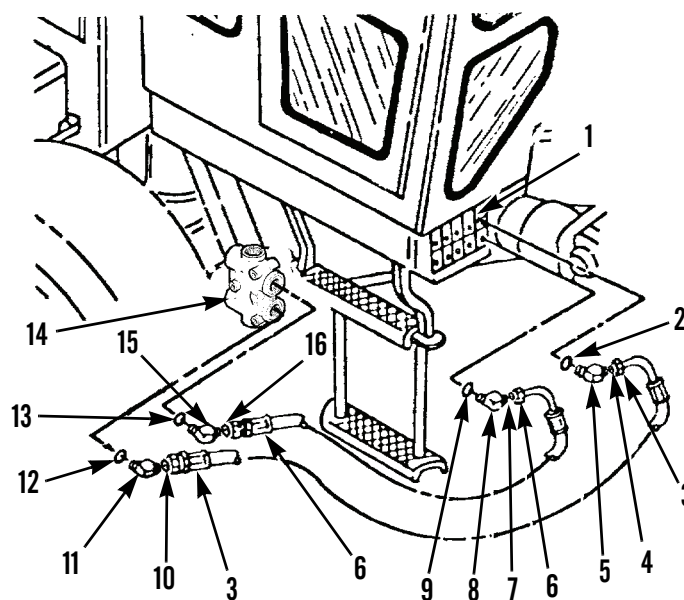17. Install new preformed packing (12), elbow (11), new preformed packing (13), elbow (15), and new O-ring (16) to articulation check valve (14).
18. Position hose assemblies (3 and 6) on machine.
19. Connect hose assemblies (3 and 6).
20. Install new preformed packing (2), elbow (5), new O-ring (4), new preformed packing (9), elbow (8), and new O-ring (7) to right control valve group (1).
21. Install hose assemblies (3 and 6).
22. Connect centershift hoses (WP 0226 00).
23. Connect wheel lean hoses (WP 0224 00).
24. Connect blade lift hoses (WP 0222 00).
25. Connect scarifier hoses (WP 0229 00).



397-2377

26. Check level of hydraulic tank and fill as necessary (WP 0216 00).
27. Start engine (TM 5-3805-261-10).
28. Operate control levers. Move system through at least five full movements of travel to bleed air from system.
29. Stop engine and check for leaks.

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring (12)

Packing, preformed (12)

References

WP 0202 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left side frame covers removed (WP 0179 00)

Hydraulic pressure relieved (WP 0020 00)

Blade lift hoses disconnected (WP 0222 00)

REMOVAL

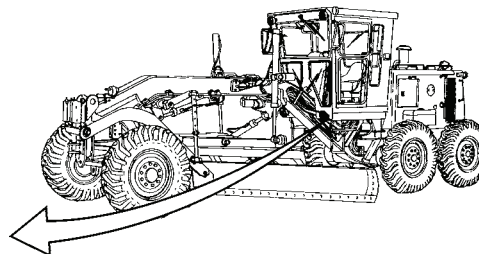
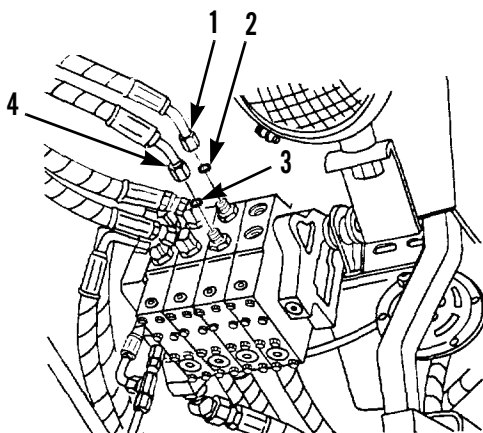
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assemblies (1 and 4) and remove O-rings (2 and 3). Discard O-rings.




REMOVAL - CONTINUED

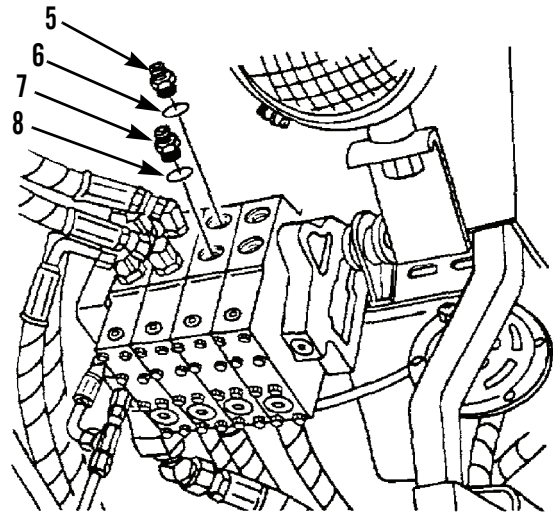2. Remove connectors (5 and 7) and preformed packings (6 and 8). Discard preformed packings.



397-784

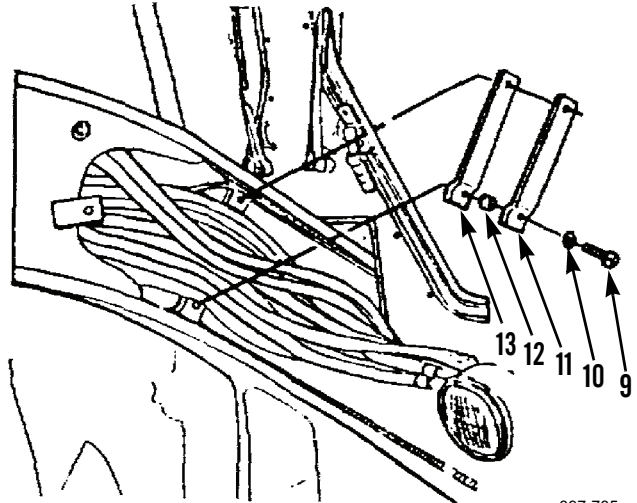
3. Remove two bolts (9), washers (10), clamp (11), two spacers (12), and clamp (13).



397-785


REMOVAL - CONTINUED

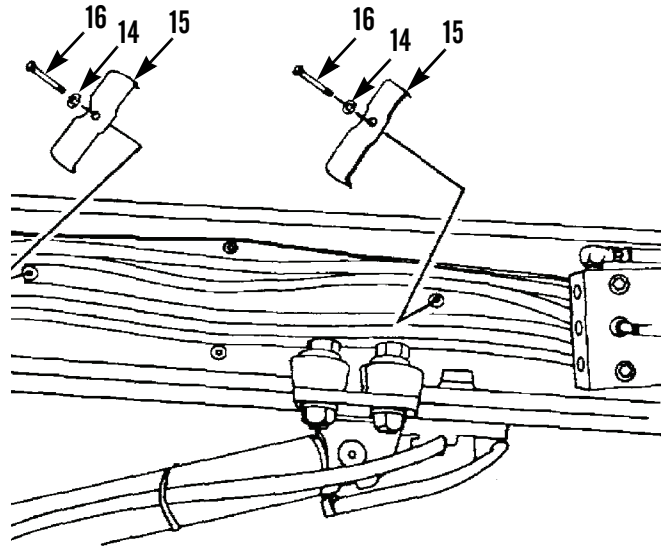4. Remove two bolts (16), washers (14), and clamps (15).



397-786

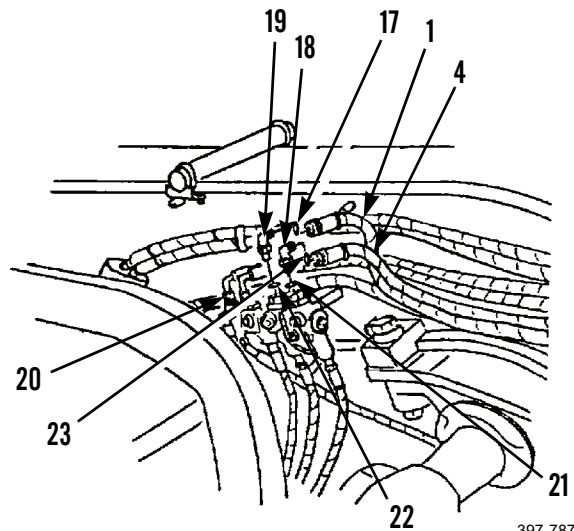
5. Remove hose assemblies (1 and 4), O-rings (17 and 23), elbows (18 and 19), and preformed packings (21 and 22) from top of sideshift check valve (20). Discard O-rings and preformed packings.
6. Remove hose assemblies (1 and 4) from machine.



397-787


REMOVAL - CONTINUED

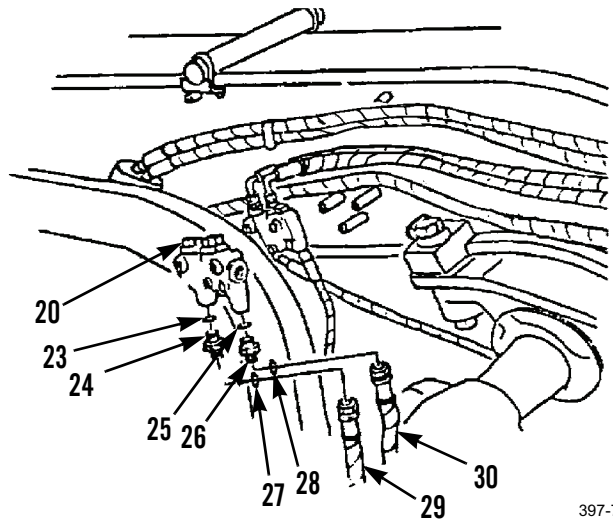7. Disconnect hose assemblies (29 and 30) and remove O-rings (27 and 28), adapters (24 and 26), and preformed packings (23 and 25) from bottom of sideshift check valve (20). Discard O-rings and preformed packings.



397-788

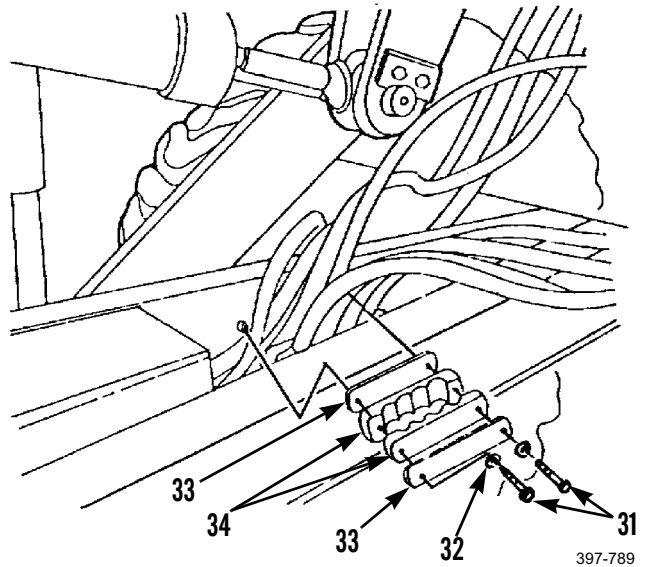8. Remove two bolts (31), washers (32), plates (33), and clamps (34).




397-789

REMOVAL - CONTINUED

NOTE


It may be necessary to remove toolbox to access bolts.

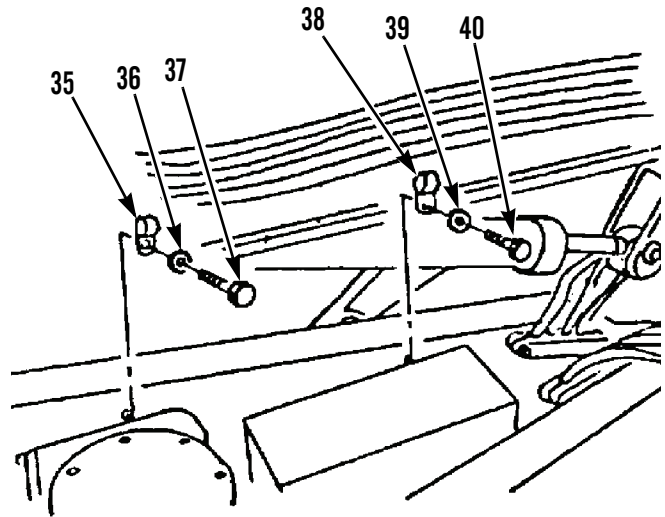9. Remove bolt (37), washer (36), clamp (35), bolt (40), washer (39), and clamp (38).



397-790

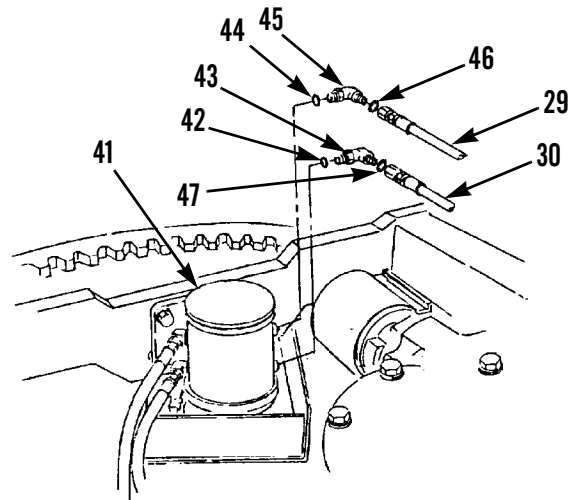10. Remove hose assemblies (29 and 30), O-rings (46 and 47), elbows (43 and 45), and preformed packings (42 and 44) from circle swivel assembly (41). Discard O-rings and preformed packings.
11. Remove hose assembly (29 and 30) from machine.




397-791

SIDESHIFT LINES REPLACEMENT - CONTINUED


0228 00

REMOVAL - CONTINUED

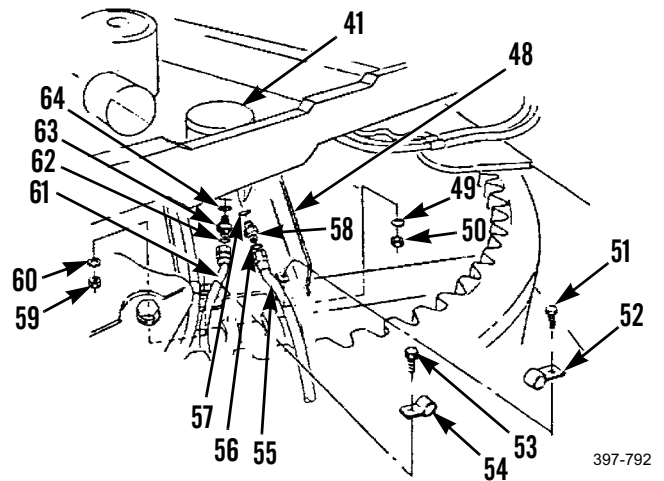
12. Disconnect hose assemblies (55 and 61), and remove O-rings (56 and 62) from circle swivel assembly (41). Discard O-rings.
13. Remove connectors (58 and 63) and preformed packings (57 and 64). Discard preformed packings.
14. Remove nuts (50 and 59), washers (49 and 60), bolts (51 and 53), and clips (52 and 54) from guide assembly (48).



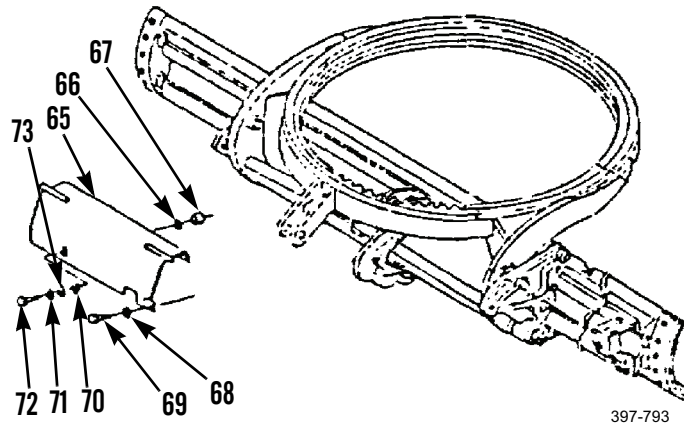15. Remove bolt (69), washer (68), bolt (72), spacer (67), washer (66), spacer (70), washers (71 and 73), and guard assembly (65).




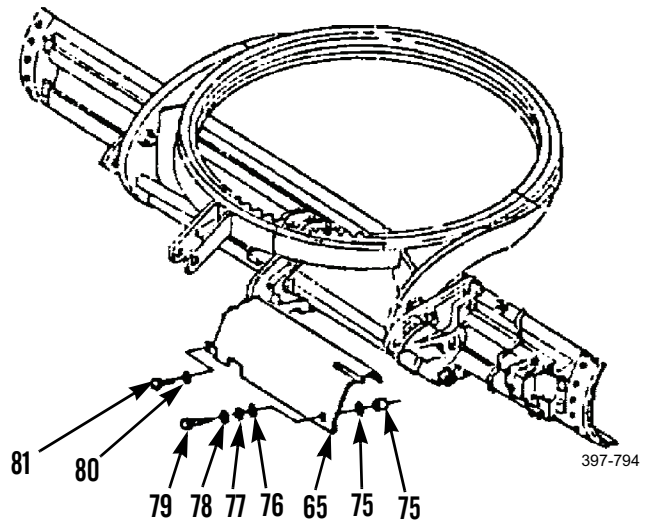16. Remove bolt (81), washer (80), bolt (79), spacer (74), washer (75), spacer (76), washers (77 and 78), and guard assembly (65).



REMOVAL - CONTINUED

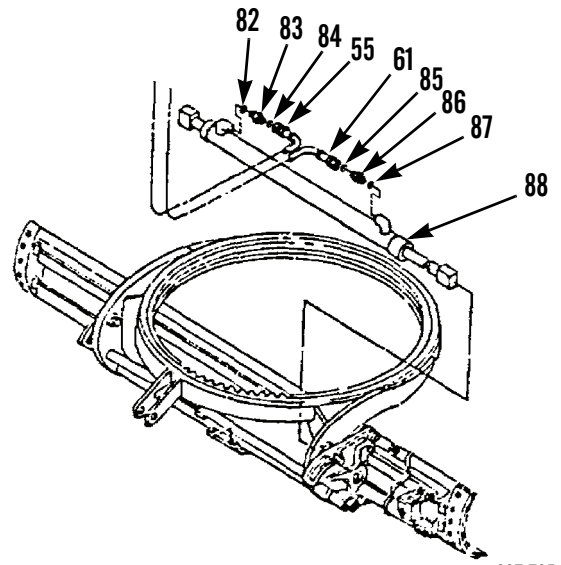17. Remove hose assembly (61), O-ring (85), connector (86), and preformed packing (87) from left end of blade shift hydraulic cylinder (88). Discard O-ring and preformed packing.
18. Remove hose assembly (55), O-ring (84), connector (83), and preformed packing (82) from right end of blade shift hydraulic cylinder (88). Discard O-ring and preformed packing.

**CLEANING AND INSPECTION**

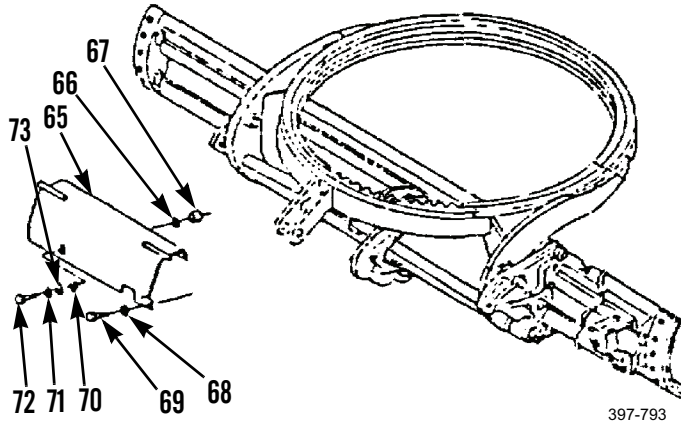
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION


1. Install new preformed packing (82), connector (83), new O-ring (84), and hose assembly (55) on right end of blade shift hydraulic cylinder (88).
2. Install new preformed packing (87), connector (86), new O-ring (85), and hose assembly (61) on left end of blade shift hydraulic cylinder (88).
3. Install guard assembly (65), washers (77 and 78), spacer (76), washer (75), spacer (74), bolt (79), washer (80), and bolt (81).

INSTALLATION - CONTINUED


4. Install guard assembly (65), washers (71 and 73), spacer (70), washer (66), spacer (67), bolt (72), washer (68), and bolt (69).



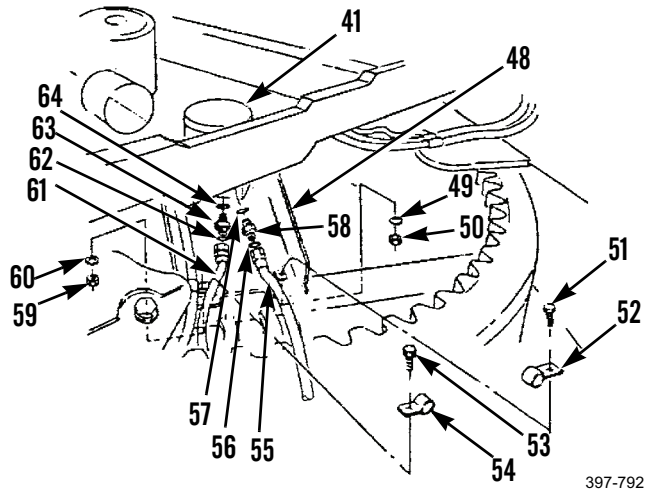5. Install clips (52 and 54), bolts (51 and 53), washers (49 and 60), and nuts (50 and 59) on guide assembly (50).
6. Install new preformed packings (57 and 64), connectors (56 and 63), and new O-rings (58 and 62) on circle swivel assembly (41).
7. Connect hose assemblies (55 and 61).



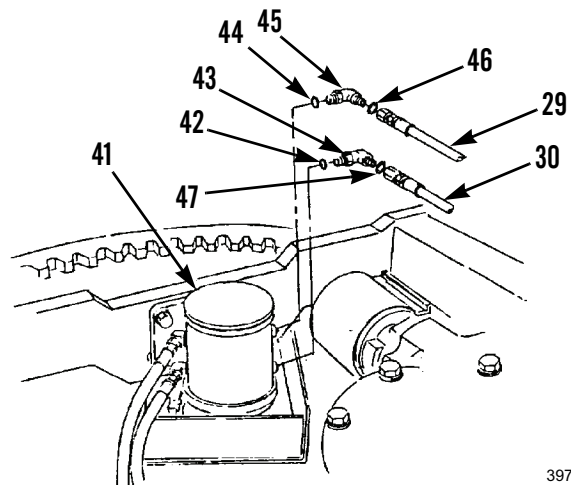8. Position hose assemblies (29 and 30) on machine.
9. Install new preformed packings (42 and 44), elbows (43 and 45), new O-rings (46 and 47), and hose assemblies (29 and 30) on circle swivel assembly (41).




INSTALLATION - CONTINUED

10. Install clamp (38), washer (39), bolt (40), clamp (35), washer (36), and bolt (37).


NOTE

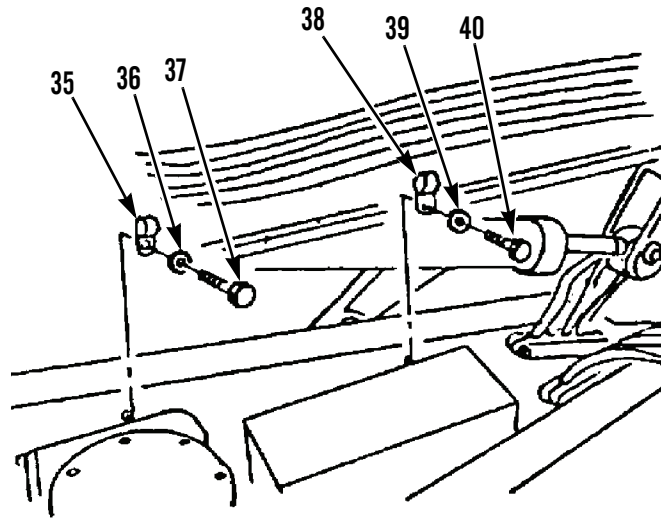Install toolbox if removed (WP 0202 00).



397-790

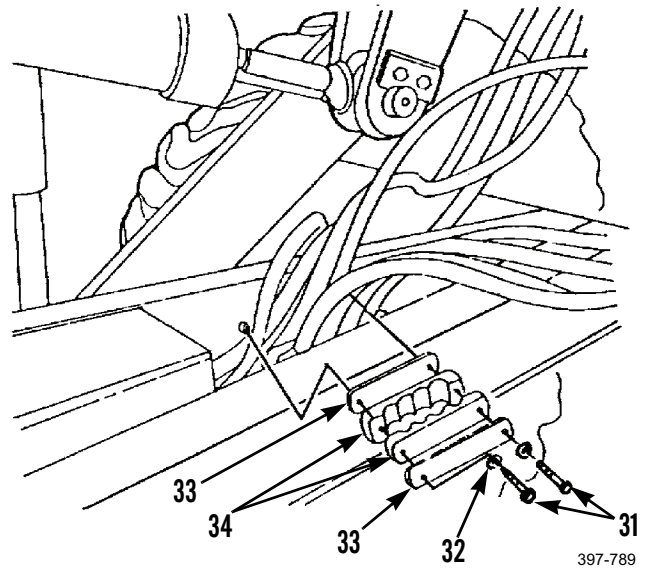
11. Install two clamps (34), plates (33), washers (32), and bolts (31).



397-789


INSTALLATION - CONTINUED

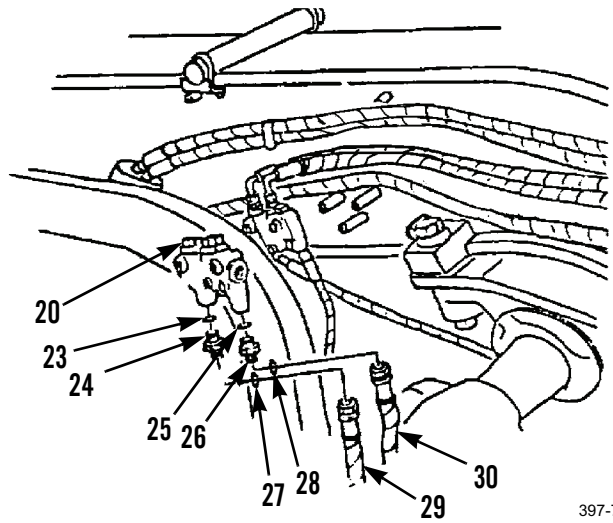12. Install new preformed packings (23 and 25), adapters (24 and 26), new O-rings (27 and 28), and connect hose assemblies (29 and 30) to bottom of sideshift check valve (20)



397-788

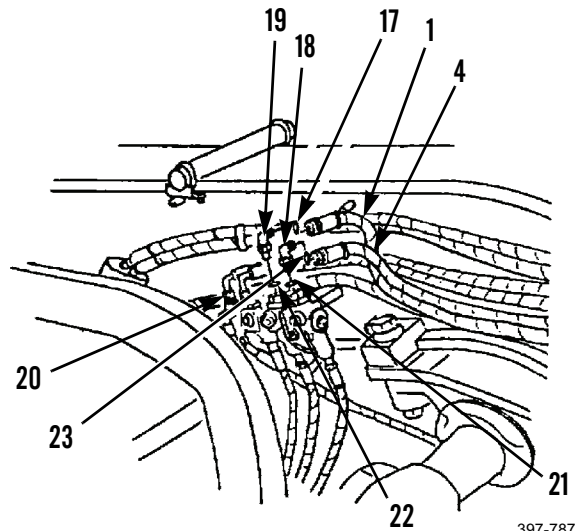
13. Position hose assemblies (1 and 4) on machine.
14. Install new preformed packings (21 and 22), adapters (18 and 19), and new O-rings (17 and 23) and connect hose assemblies (1 and 4) on top of sideshift check valve (20).



397-787


INSTALLATION - CONTINUED

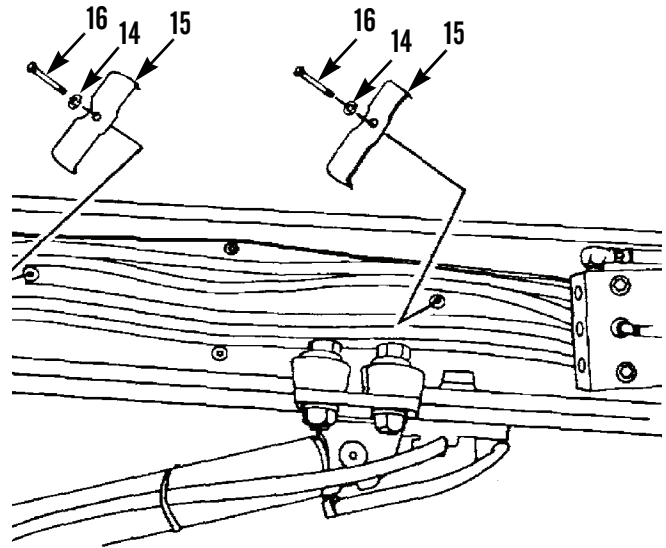15. Install two clamps (15), washers (14), and bolts (16).



397-786

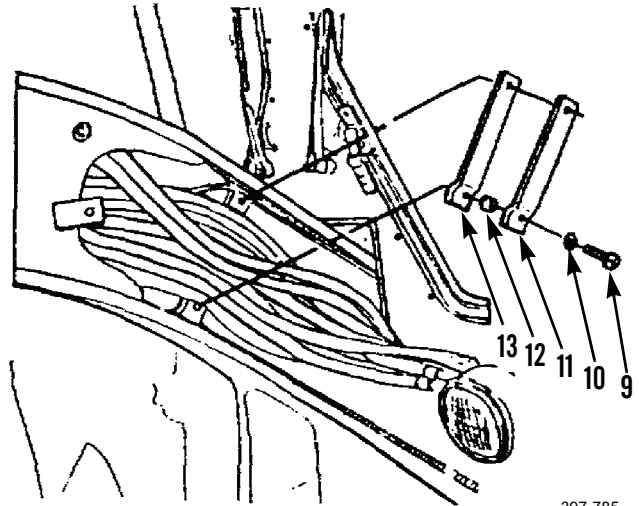
16. Install clamp (13), two spacers (12), clamp (11), two washers (10), and bolts (9).



397-785


INSTALLATION - CONTINUED

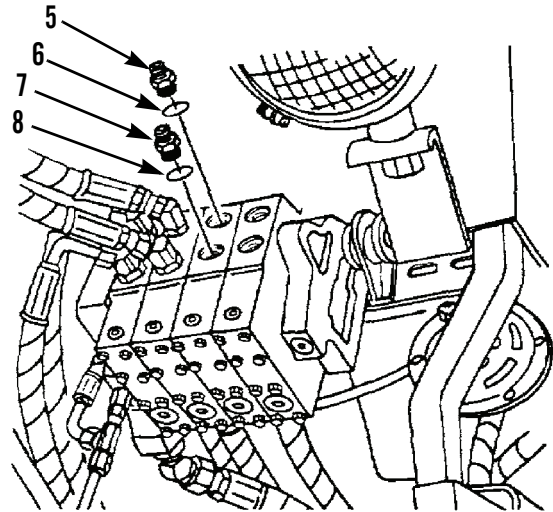17. Install new preformed packings (6 and 8) and connectors (5 and 7).



397-784

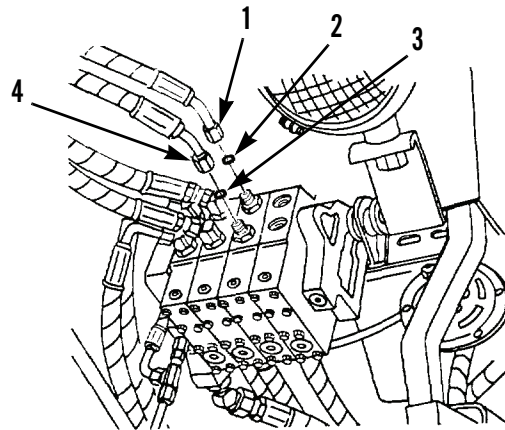18. Install new O-rings (2 and 3) and hose assemblies (1 and 4).



397-783

19. Connect blade lift hoses (WP 0222 00).
 20. Check level of hydraulic tank and fill as necessary (WP 0216 00).
 21. Start engine (TM 5-3805-261-10).
 22. Operate control levers. Move system through at least five-full movements of travel to bleed air from system.
 23. Stop engine and check for leaks.
 24. Install left side frame covers (WP 0179 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no.1 (Item 75, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

O-ring (6)

Packing, preformed (8)

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Right side frame covers removed (WP 0179 00)

Hydraulic pressure relieved (WP 0020 00)

REMOVAL

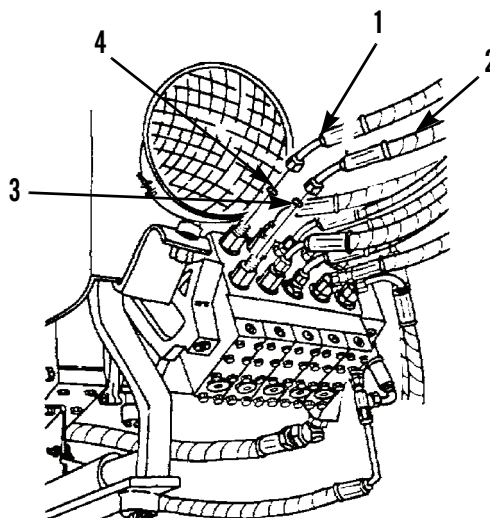
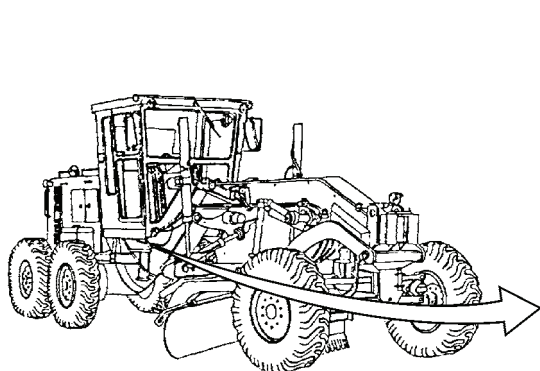
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies disconnecting to aid in installation.


1. Disconnect hose assemblies (1 and 2) and remove O-rings (3 and 4). Discard O-rings.



397-2382


REMOVAL - CONTINUED

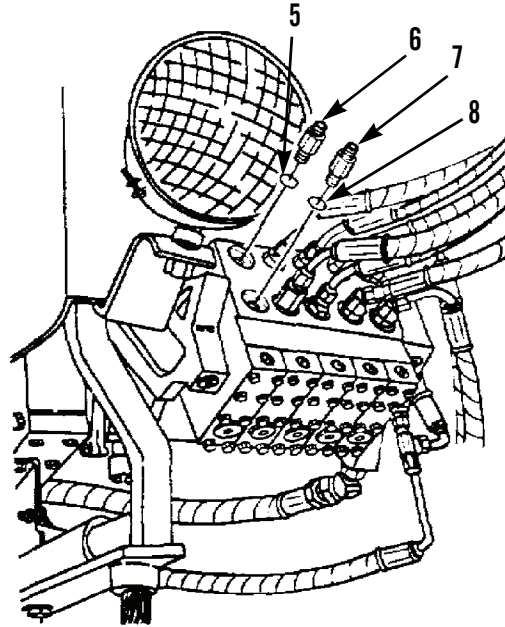2. Remove connectors (6 and 7) and preformed packings (5 and 8). Discard preformed packings.



397-797

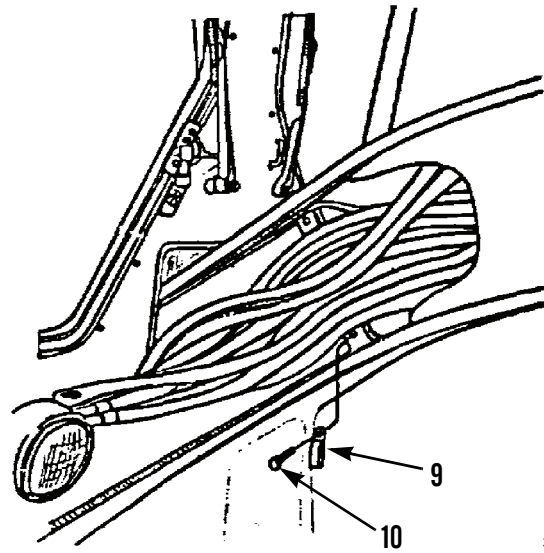
3. Remove bolt (10) and clip (9) from right-center-front frame.



397-798


REMOVAL - CONTINUED

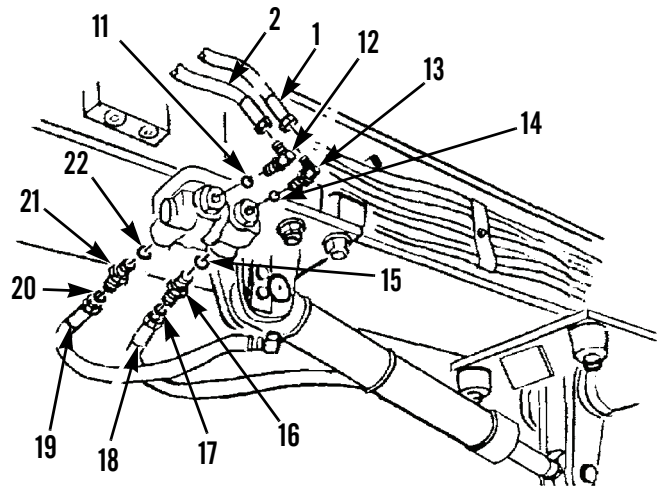4. Remove hose assemblies (1 and 2) from elbows (12 and 13).
5. Remove hose assemblies (1 and 2) from machine.
6. Remove elbows (12 and 13) and preformed packings (11 and 14). Discard preformed packings.
7. Disconnect hose assemblies (18 and 19).
8. Remove O-rings (17 and 20), connectors (16 and 21), and preformed packings (15 and 22). Discard O-rings and preformed packings.



397-799

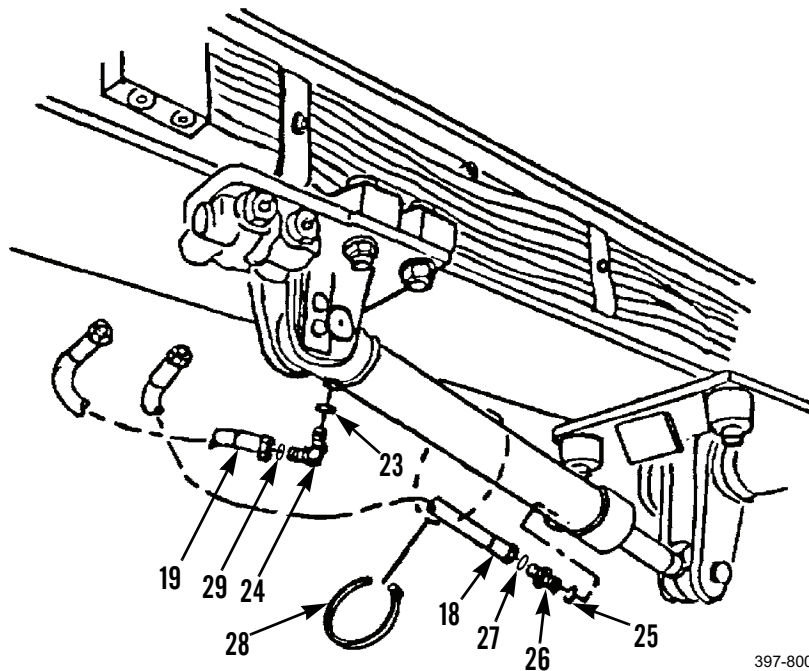9. Remove and discard tie strap (28).
10. Remove hose assemblies (18 and 19) and O-rings (27 and 29). Discard O-rings.
11. Remove connector (26) and preformed packing (25). Discard preformed packing.
12. Remove elbow (24) and preformed packing (23). Discard preformed packing.




397-800

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

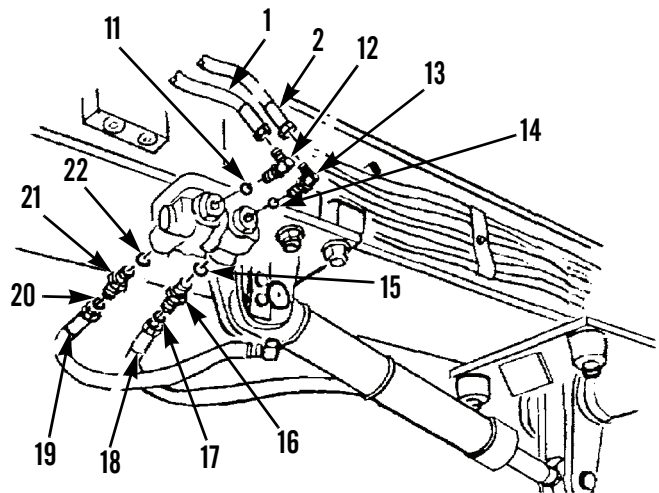1. Install new preformed packing (23) and elbow (24).
2. Install new preformed packing (25) and connector (26).
3. Install O-rings (27 and 29) and connect hose assemblies (18 and 19).
4. Install new tie strap (28).
5. Install new preformed packings (15 and 22) and connectors (16 and 21).
6. Install new O-rings (17 and 20) and hose assemblies (18 and 19).
7. Install new preformed packings (11 and 14) and elbows (12 and 13).
8. Position hose assemblies (1 and 2) on machine.
9. Connect hose assemblies (1 and 2) to elbows (12 and 13).



397-799

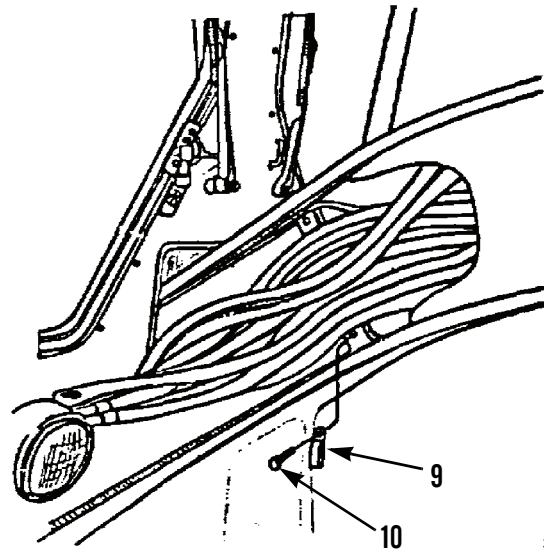
10. Install clip (9) and bolt (10).



397-798


INSTALLATION - CONTINUED

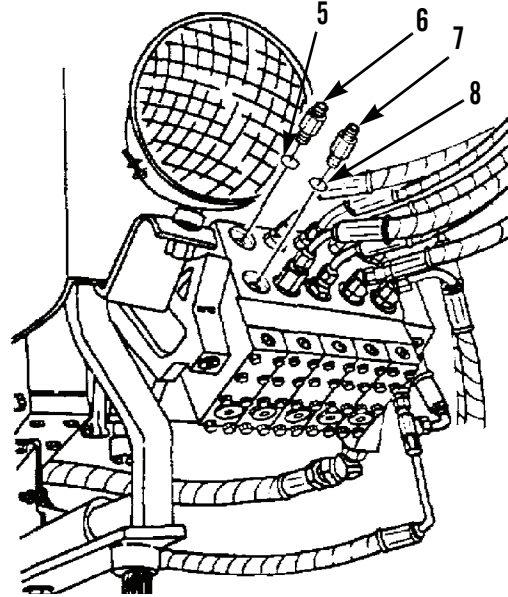11. Install new preformed packings (5 and 8) and connectors (6 and 7).



397-797

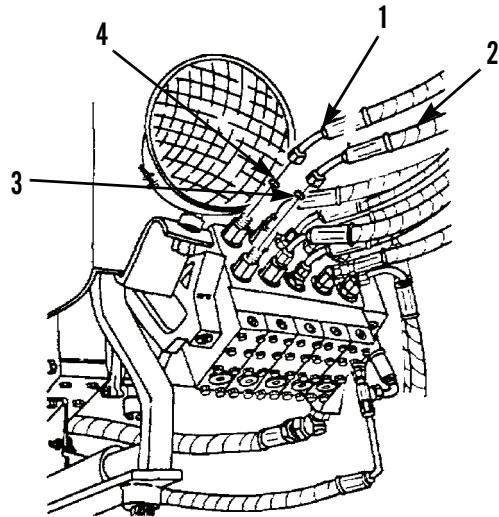12. Install new O-rings (3 and 4) and hose assemblies (1 and 2).



397-2382

13. Check level of hydraulic tank and fill to proper level (WP 0216 00).
14. Start engine (TM 5-3805-261-10).
15. Operate control levers. Move system through at least five-full movements of travel to bleed air from system.
16. Stop engine.
17. Check for leaks.
18. Install right side frame covers (WP 0179 00).

END OF WORK PACKAGE

HYDRAULIC OIL COOLER REPLACEMENT

0230 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)
 Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)
 Parking/emergency brake applied (TM 5-3805-261-10)
 Implements lowered to ground (TM 5-3805-261-10)
 Engine off (TM 5-3805-261-10)
 Battery disconnect switch in OFF position (TM 5-3805-261-10)
 Hydraulic tank drained (WP 0216 00)
 Shields, baffles, and plates removed (WP 0053 00)
 Fan removed (WP 0063 00)
 Rear signal lights removed (WP 0108 00)
 Left side engine panel removed (WP 0182 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)
 Rag, wiping (Item 35, WP 0349 00)
 Tag, marker (Item 44, WP 0349 00)
 O-ring (2)
 Packing, preformed (2)

References

WP 0020 00
 WP 0052 00

REMOVAL**NOTE**

Place container under two plugs.

1. Remove two plugs (8) to drain core assembly (9).
2. Install two plugs (8) to prevent contamination.

CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hoses before disconnecting to aid in installation.

3. Disconnect two hose assemblies (7).
4. Remove two O-rings (6), connectors (5) and preformed packings (4). Discard two preformed packings.
5. Remove two nuts (3), washers (2), and brackets (1).

NOTE

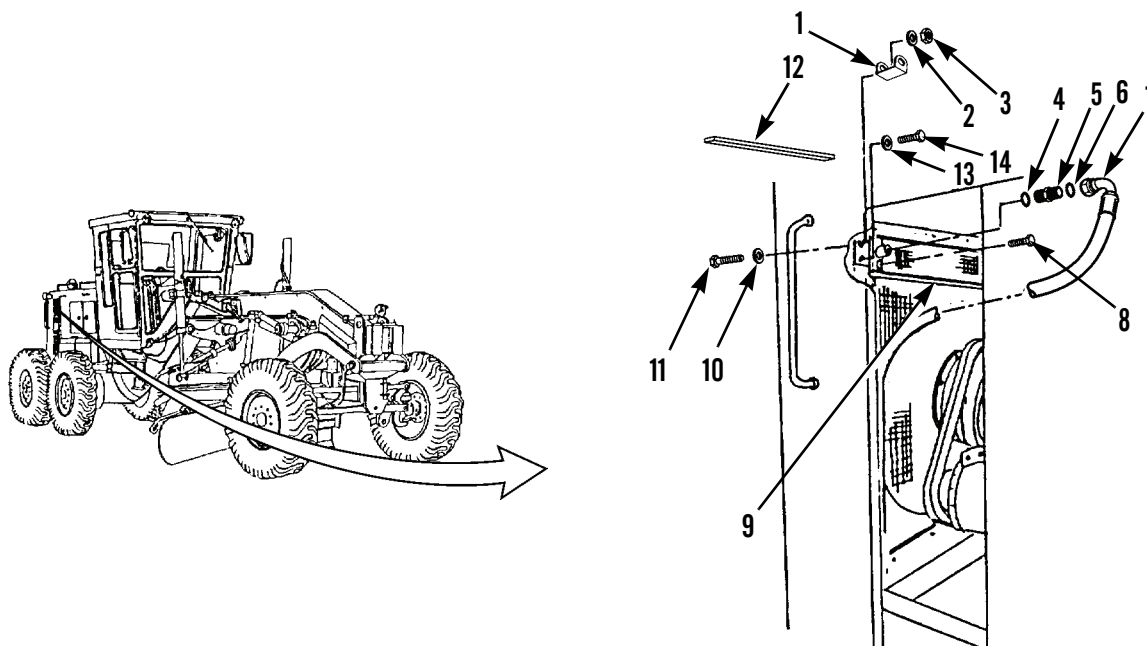
Remove two bolts (11) only if inspection indicates replacement is necessary. If bolts must be removed, it will first be necessary to remove radiator support (WP 0052 00).

6. Remove two bolts (11) and washers (10) through cut-outs for rear signal lights in radiator grille. Discard two bolts, if necessary.
7. Support core assembly (9).
8. Remove two bolts (14) and washers (13).
9. Remove core assembly (9).

NOTE

Remove seal only if inspection indicates replacement is necessary.

10. Remove and discard seal (12) from front of radiator, if necessary.



CLEANING AND INSPECTING

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install new seal (12) on front of radiator, if removed.
2. Position core assembly (9) on radiator.
3. Install two washers (13) and bolts (14).
4. Install two washers (10) and new bolts (11) through rear signal light cut-outs in radiator grille, if removed.
5. Install two brackets (1), washers (2), and nuts (3).
6. Install two new preformed packings (4) and connectors (5).
7. Install two new O-rings (6) and connect two hose assemblies (7) to left and right front core assembly (9).
8. Install rear signal lights (WP 0108 00).
9. Install fan (WP 0063 00).
10. Install shields, baffles, and plates (WP 0053 00).
11. Install left side engine panel (WP 0182 00).
12. Start engine (TM 5-3805-261-10).
13. Stop engine and check for leaks.
14. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

HYDRAULIC TANK FILTERS REPLACEMENT

0231 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, field maintenance (Item 74, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Filter element (3)

Gasket

Packing, preformed (4)

References

WP 0020 00

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

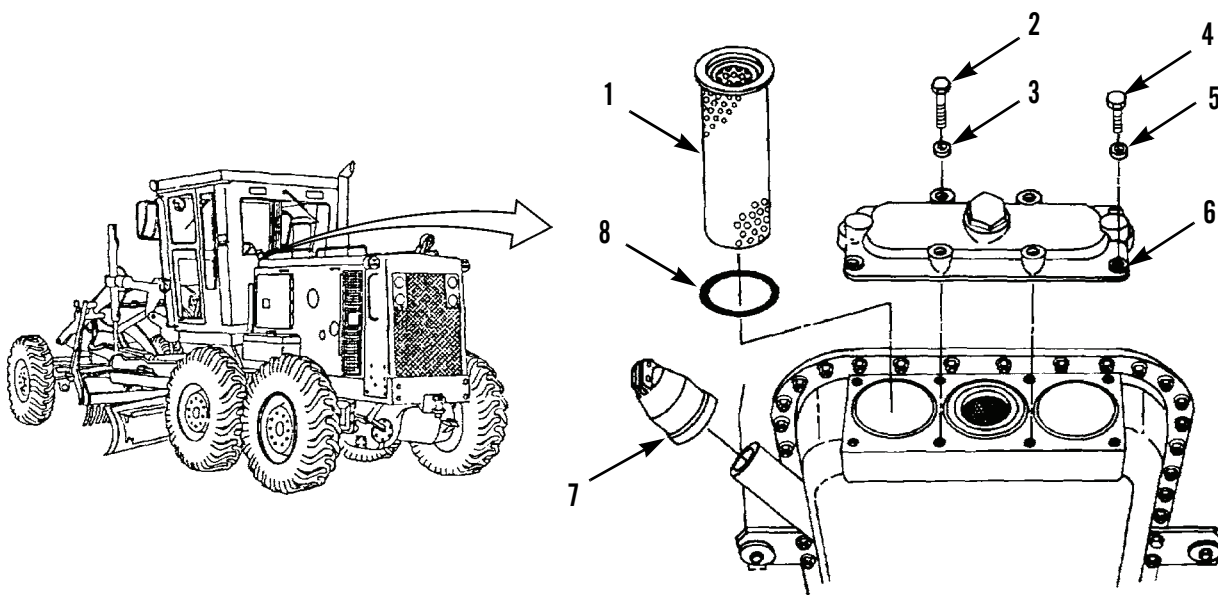
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL**WARNING**

- DO NOT disconnect or remove any hydraulic system line or fitting unless engine is shut down and hydraulic system pressure has been relieved. Tighten all connections before applying pressure. Escaping hydraulic fluid under pressure can penetrate the skin, causing injury to personnel.
- At operating temperature, hydraulic oil is hot. Allow hydraulic oil to cool before disconnecting any hydraulic lines. Failure to follow this warning may cause injury to personnel.


1. Remove cover (7) slowly to relieve vapor pressure.
2. Remove four bolts (2), washers (3), bolts (4), washers (5), and manifold (6).
3. Remove and discard two filter elements (1) and preformed packings (8).



397-803

REMOVAL - CONTINUED

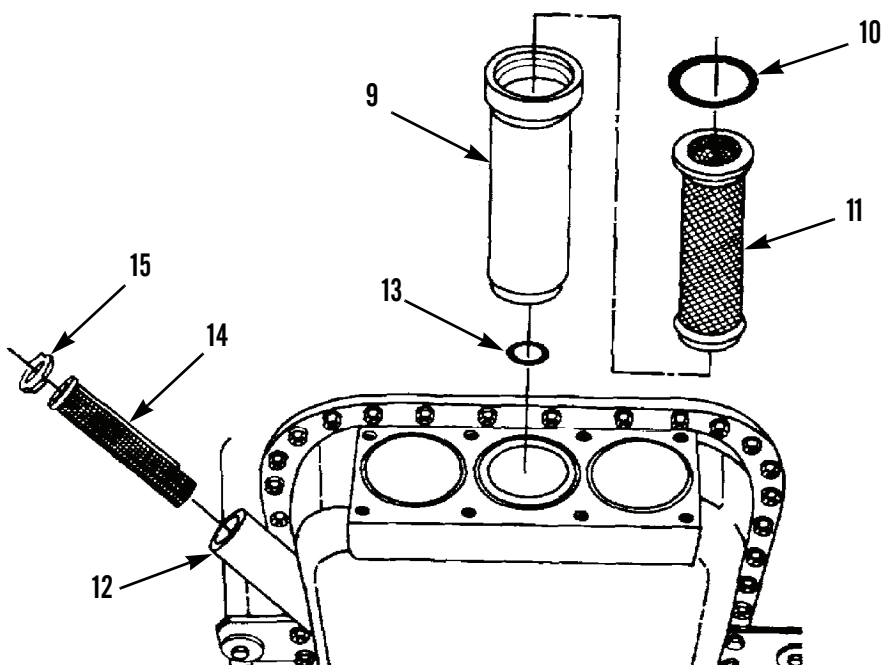
4. Remove and discard preformed packing (10).
5. Remove filter element (11) and tube (9). Discard filter element.
6. Remove and discard preformed packing (13).
7. Remove ring (15).
8. Remove strainer (14) from neck of tank (12).



NOTE

Do not disassemble cover unless inspection indicates it is necessary.

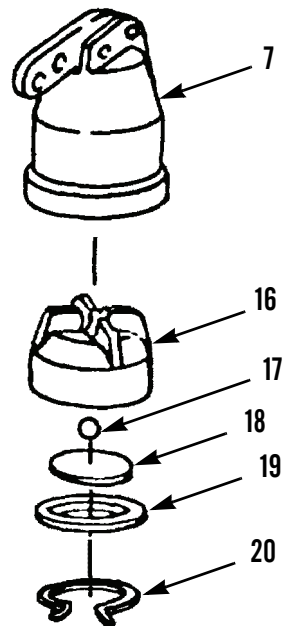9. Remove ring (20), gasket (19), plate (18), ball (17), and cap (16) from cover (7). Discard gasket.



397-804

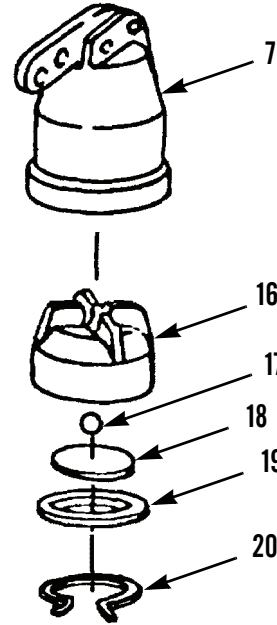
397-805

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

1. Install cap (16), ball (17), plate (18), new gasket (19), and ring (20) in cover (7).



397-805

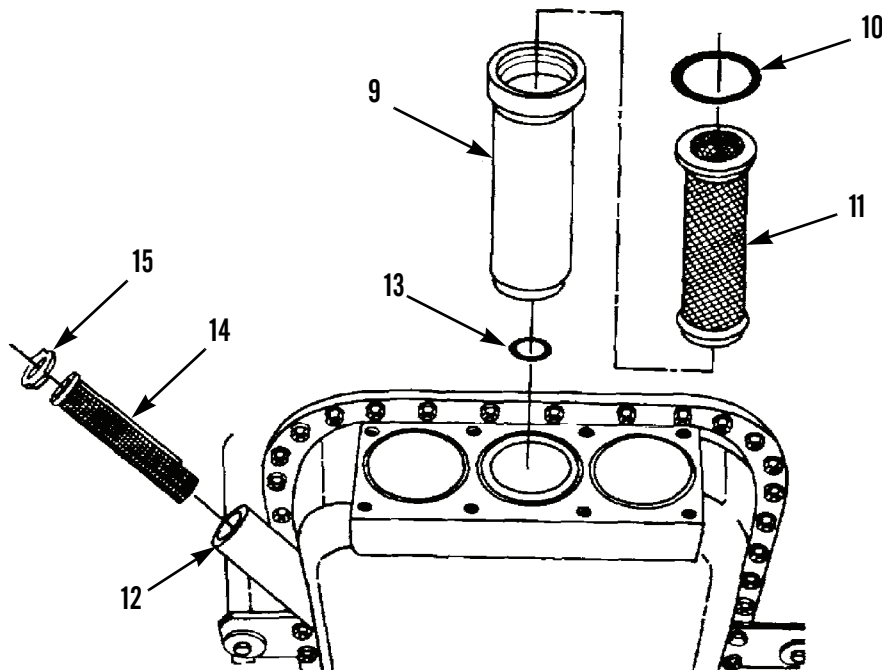
2. Install strainer (14) and ring (15) in neck of tank (12).
3. Install new preformed packing (13), tube (9), new filter element (11), and new preformed packing (10).



397-804

INSTALLATION - CONTINUED

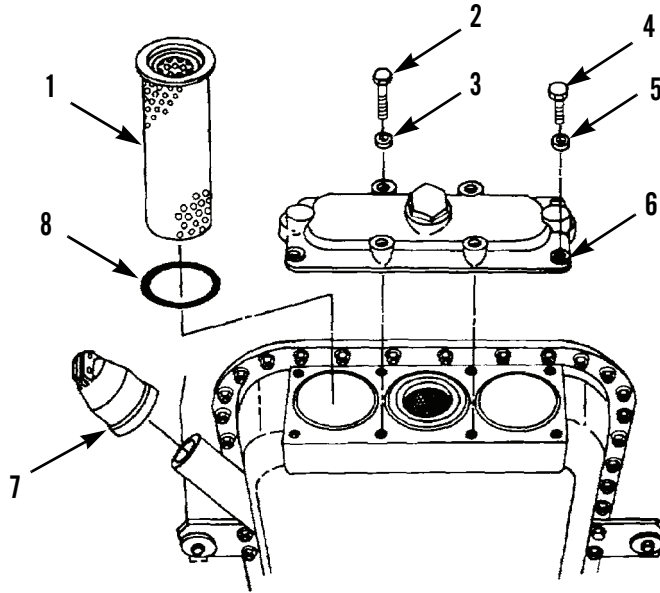4. Install two new preformed packings (8) and new filter elements (1).
5. Install manifold (6), four washers (5), bolts (4), washers (3), and bolts (2).
6. Install cover (7).



397-803

7. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

HYDRAULIC PUMP DRIVE MAINTENANCE

0232 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Wrench, torque (Item 99, WP 0348 00)

Materials/Parts

Antiseize compound (Item 6, WP 0349 00)

Cleaning compound, solvent (Item 8, WP 0349 00)

Grease, GAA (Item 17, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Seal

References

WP 0020 00

WP 0023 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine stopped (TM 5-3805-261-10)

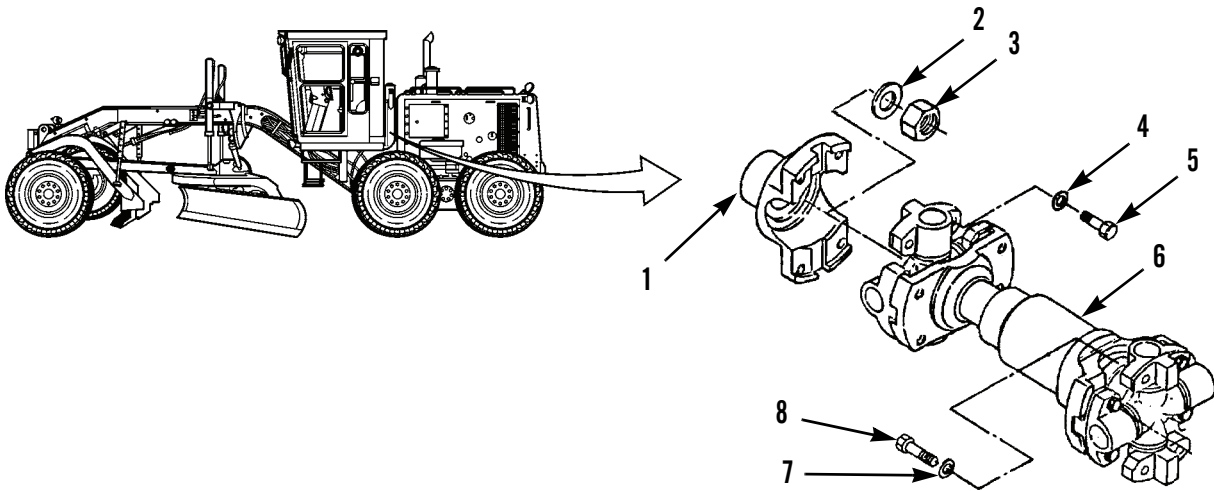
Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic drive protection cover removed (WP 0219 00)

REMOVAL**NOTE**

Bolts (5) have fine threads. Bolts (8) have coarse threads.

1. Remove four bolts (5) and washers (4) to separate U-joint of propeller shaft (6) from U-joint yoke (1).
2. Remove four bolts (8), washers (7), and propeller shaft (6) assembly from machine.
3. Remove nut (3), washer (2), and U-joint yoke (1) from pump shaft.




397-1466

DISASSEMBLY


CAUTION

Use care when removing U-joints (11 and 12) so as not to allow caps to fall off.

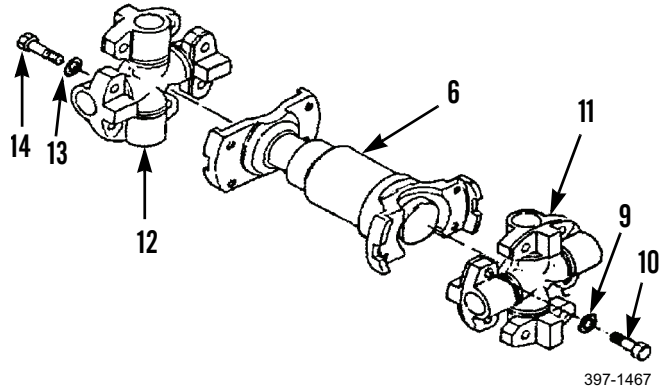
1. Remove four bolts (14), washers (13), and U-joint assembly (12) from propeller shaft (6) assembly.
2. Remove four bolts (10), washers (9), and U-joint assembly (11) from propeller shaft (6).



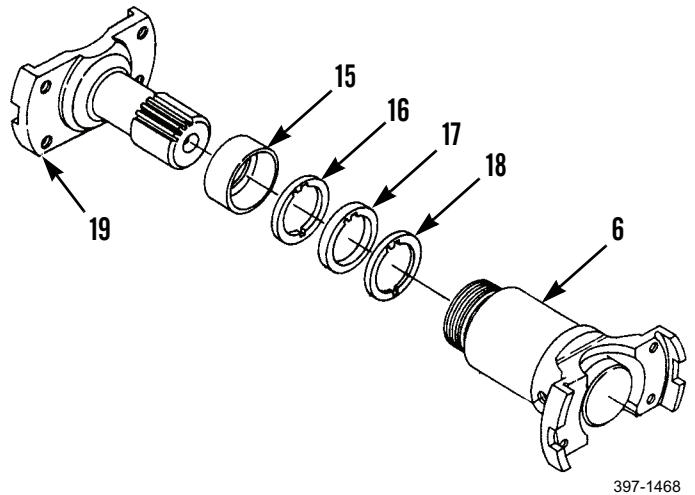3. Loosen retainer (15). Slide retainer, washer (16), seal (17), and washer (18) onto yoke (19). Discard seal.




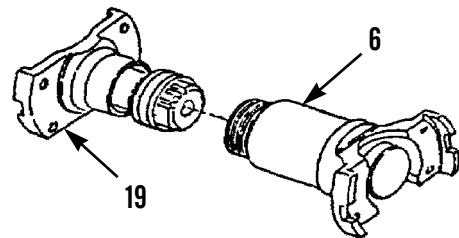4. Remove yoke (19) from propeller shaft (6).



DISASSEMBLY - CONTINUED

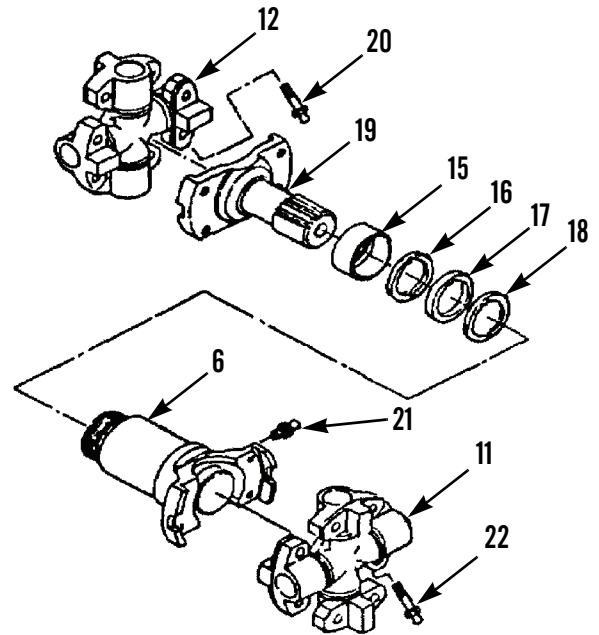5. Remove washer (18), seal (17), washer (16), and retainer (15) from yoke (19). Discard seal.
6. Remove lube fitting (21) from propeller shaft (6).
7. Remove lube fitting (20) from U-joint assembly (12).
8. Remove lube fitting (22) from U-joint assembly (11).




397-1470

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

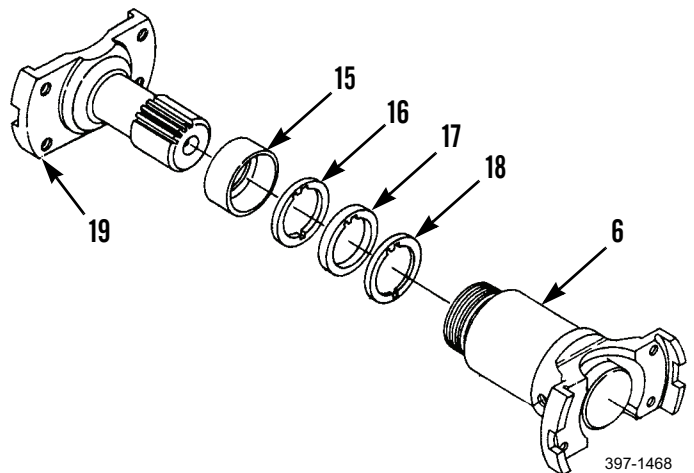
1. Install lube fitting (22) in U-joint assembly (11).
2. Install lube fitting (20) in U-joint assembly (12).
3. Install lube fitting (21) in propeller shaft assembly (6).
4. Slide retainer (15), washer (16), new seal (17), and washer (18) onto yoke (19).
5. Apply thin coat of grease to splines of yoke (19) and install into propeller shaft (6).
6. Install washer (18), new seal (17), washer (16), and retainer (15) on propeller shaft (6).



397-1468

ASSEMBLY - CONTINUED

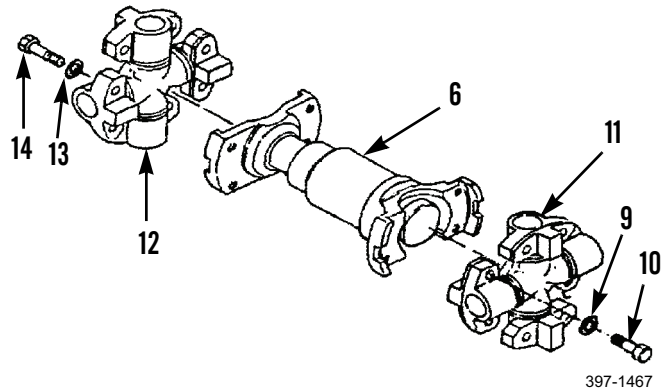7. Install propeller shaft (6) assembly on U-joint assembly (11) with four washers (9) and bolts (10). Tighten bolts to 35 to 45 lb-ft (47 to 61 Nm).
8. Install propeller shaft assembly (6) to U-joint assembly (12) with four washers (13) and bolts (14). Tighten bolts to 35 to 45 lb-ft (47 to 61 Nm).




INSTALLATION

1. Apply antiseize compound to pump shaft.
2. Install U-joint yoke (1), washer (2), and nut (3). Tighten nut to 125 to 145 lb-ft (169 to 197 Nm).

NOTE

Bolts (8) have coarse threads. Bolts (5) have fine threads.

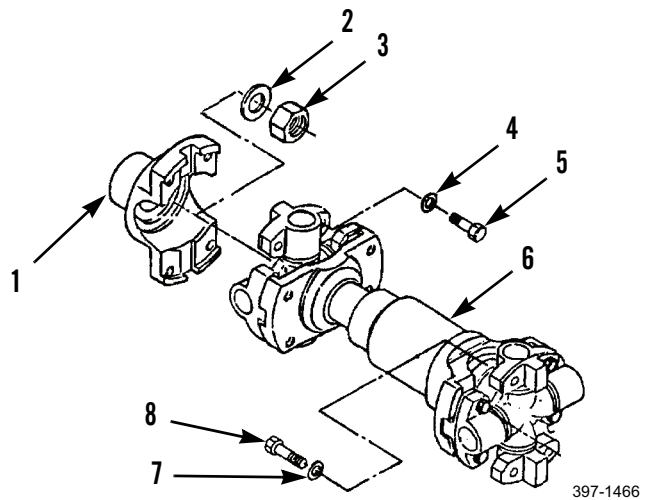3. Install propeller shaft (6) assembly, four washers (7), and bolts (8). Tighten bolts to 35 to 45 lb-ft (47 to 61 Nm).
4. Install U-joint of propeller shaft (6) on U-joint yoke (1) with four washers (4) and bolts (5). Tighten bolts to 35 to 45 lb-ft (47 to 61 Nm).
5. Apply grease to three lube fittings (WP 0023 00).
6. Install hydraulic drive protection cover (WP 0219 00).



END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Packing, preformed (7)

Seal (6)

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Blade float pilot valve wiring harness removed (WP 0133 00)

Hydraulic pressure relieved (WP 0020 00)

REMOVAL

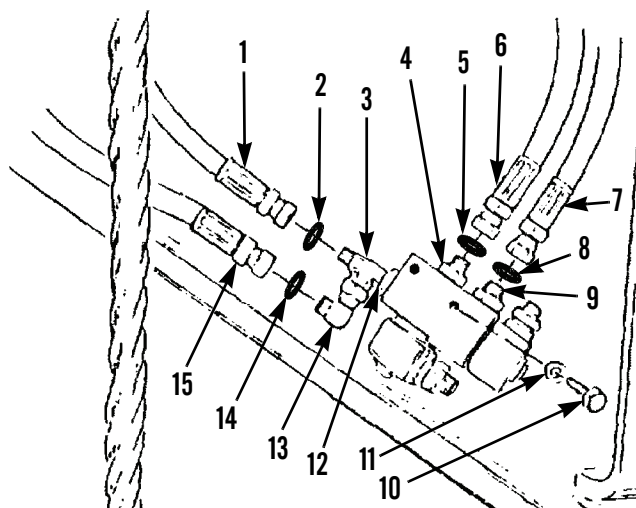
CAUTION

Cap hose and tube ends to prevent contamination.

NOTE

Tag hose and tube assemblies before disconnecting to aid in installation.


1. Disconnect hose assembly (15) from elbow (13). Remove and discard preformed packing (14).
2. Disconnect hose assembly (1) from tee (3). Remove and discard preformed packing (2).
3. Disconnect hose assembly (6) from connector (4). Remove and discard preformed packing (5).
4. Disconnect hose assembly (7) from connector (9). Remove and discard preformed packing (8).
5. Remove bolt (10) and washer (11).
6. Remove blade float pilot valve (12).



397-669

REMOVAL - CONTINUED

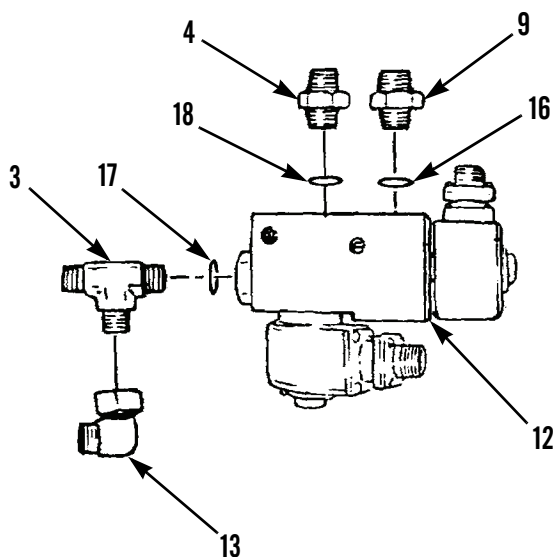
7. Remove connector (4) and preformed packing (18). Discard preformed packing.
8. Remove connector (9) and preformed packing (16). Discard preformed packing.
9. Remove elbow (13) from tee (3).
10. Remove tee (3) and preformed packing (17). Discard preformed packing.



397-670

DISASSEMBLY

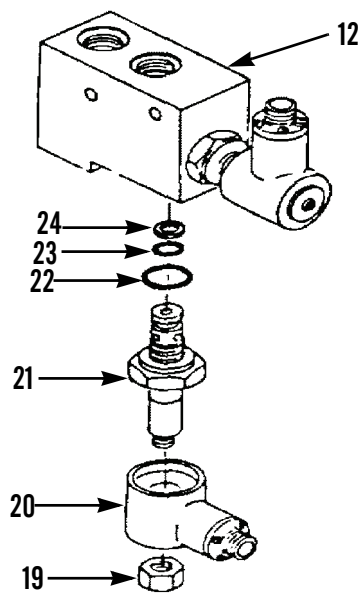
1. Remove nut (19), coil (20), valve cartridge (21), and three seals (22, 23, and 24) from body (12). Discard seals.



397-1534

DISASSEMBLY

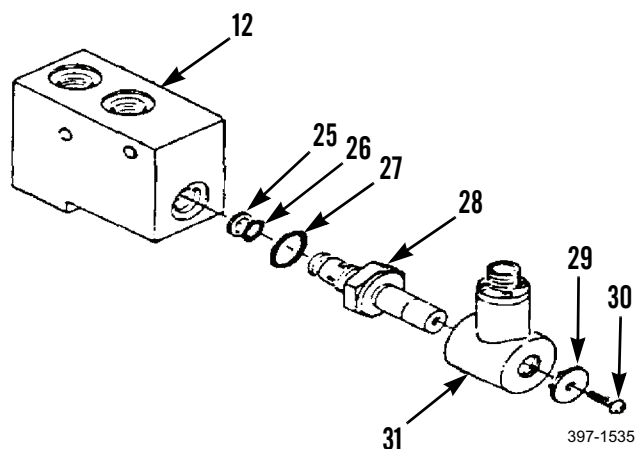- Remove screw (30), shouldered washer (29), coil (31), valve cartridge (28), and three seals (27, 26, and 25). Discard seals.



CLEANING AND INSPECTION

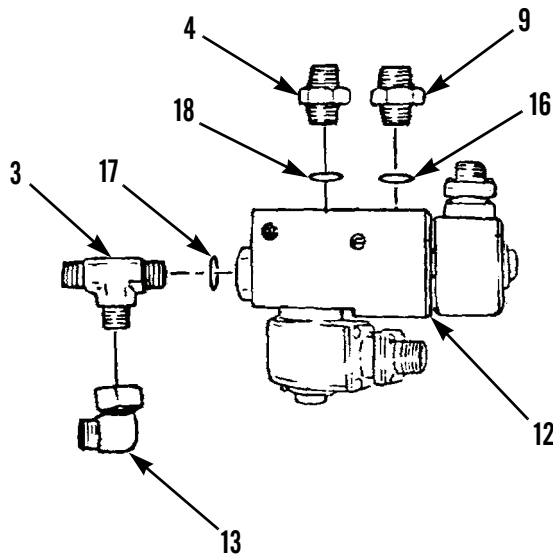
Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

- Install new seals (25, 26, and 27), valve cartridge (28), coil (31), shouldered washer (29), and screw (30) in body (12).
- Install new seals (24, 23, and 22), valve cartridge (21), coil (20), and nut (19).


INSTALLATION

- Install new preformed packing (17) and tee (3) into valve body (12).
- Install elbow (13).
- Install new preformed packing (16) and connector (9).
- Install new preformed packing (18) and connector (4).



INSTALLATION - CONTINUED

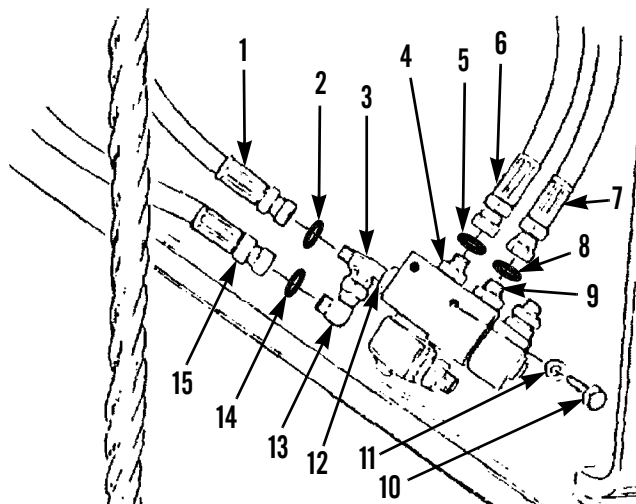5. Position blade float pilot valve (12) assembly on vehicle.
6. Install washer (11) and bolt (10).
7. Install new preformed packing (8) and connect hose assembly (7) to connector (9).
8. Install new preformed packing (5) and connect hose assembly (6) to connector (4).
9. Install new preformed packing (2) and connect hose assembly (1) to tee (3).
10. Install new preformed packing (14) and connect hose assembly (15) to elbow (13).



11. Install blade float pilot valve wiring harness (WP 0133 00).
12. Start engine (TM 5-3805-261-10).
13. Operate control levers and cycle system through at least five full-travel movements to bleed air from hydraulic system.
14. Stop engine and check for leaks.
15. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

BLADE FLOAT CHECK VALVE MAINTENANCE (CCE MACHINE)

0234 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0216 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (14)

Seal

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

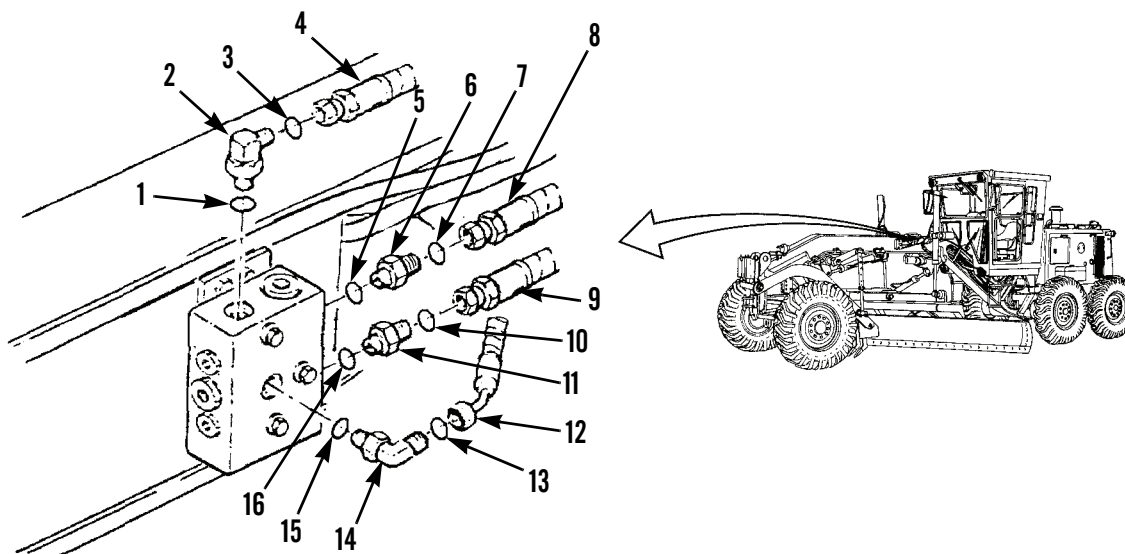
REMOVAL**CAUTION**

Cap hose ends to prevent contamination.

NOTE

- Tag hose assemblies before disconnecting to aid in installation.
- This procedure covers maintenance of the left side blade float check valve. Follow these instructions for the right side blade float check valve.


1. Disconnect hose assembly (4) from elbow (2). Remove and discard preformed packing (3).
2. Remove elbow (2) and preformed packing (1). Discard preformed packing.
3. Disconnect hose assembly (12) from elbow (14). Remove and discard preformed packing (13).
4. Remove elbow (14) and preformed packing (15). Discard preformed packing.
5. Disconnect hose assembly (9) from connector (11). Remove and discard preformed packing (10).
6. Remove connector (11) and preformed packing (16). Discard preformed packing.
7. Disconnect hose assembly (8) from connector (6). Remove and discard preformed packing (7).
8. Remove connector (6) and preformed packing (5). Discard preformed packing.



397-671

REMOVAL - CONTINUED

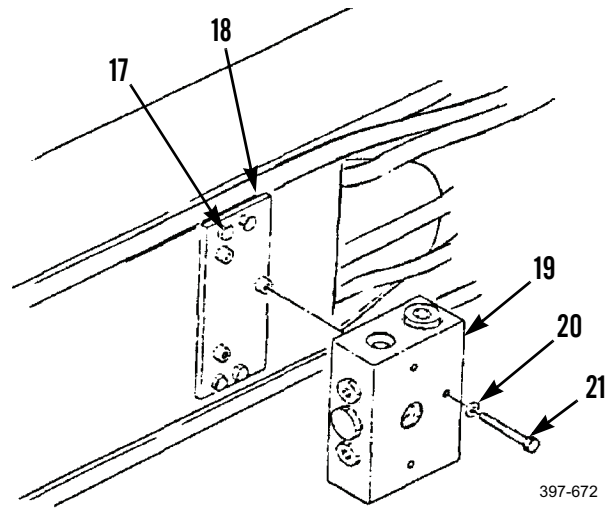9. Remove three bolts (21), washers (20), and blade float check valve (19) from mounting plate (18).
10. Remove four bolts (17) and mounting plate (18) from machine.




DISASSEMBLY



WARNING


Wear safety glasses when removing plug. Removal of plug may cause accidental release of spring, which may cause injury to personnel.

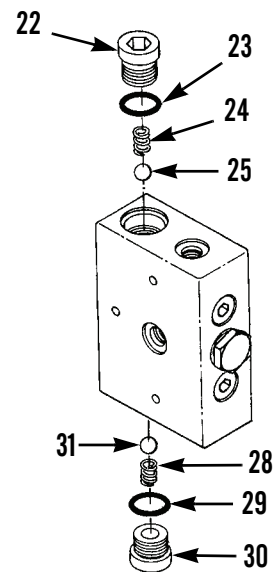1. Loosen plug (22) carefully to relieve spring (24) tension. Remove plug, preformed packing (23), spring (24), and ball (25). Discard preformed packing.
2. Loosen plug (30) carefully to relieve spring (28) tension. Remove plug, preformed packing (29), spring (28), and ball (31). Discard preformed packing.



DISASSEMBLY - CONTINUED

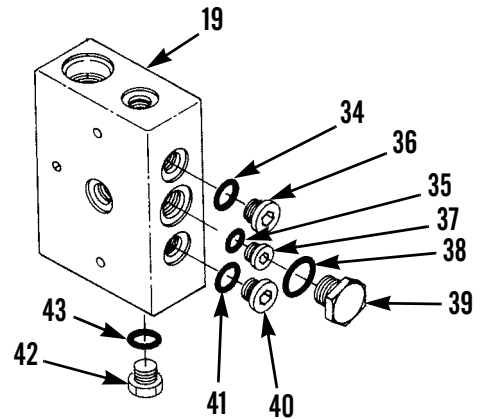3. Remove plug (36) and preformed packing (34). Discard preformed packing.
4. Remove plug (40) and preformed packing (41). Discard preformed packing.
5. Remove plug (39) and preformed packing (38). Discard preformed packing.
6. Remove plug (37) and seal (35). Discard seal.
7. Remove plug (42) and preformed packing (43). Discard preformed packing.




397-1537

CAUTION

Brass rod and hammer must be used to remove seat and piston to prevent damage.

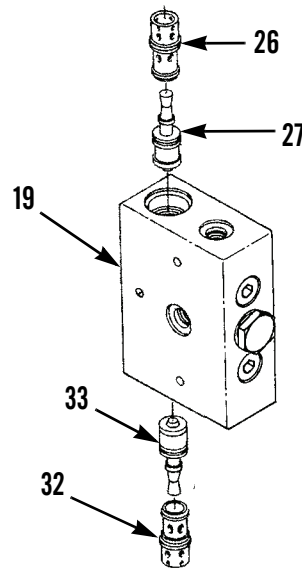8. Use a 0.25 in. (6.4 mm) diameter brass rod and hammer to remove valve seat (26) and piston (27) from body (19).
9. Use a 0.69 in. (17 mm) diameter brass rod and hammer to remove seat (32) and piston (33) from body (19).



397-4385

CLEANING AND INSPECTION

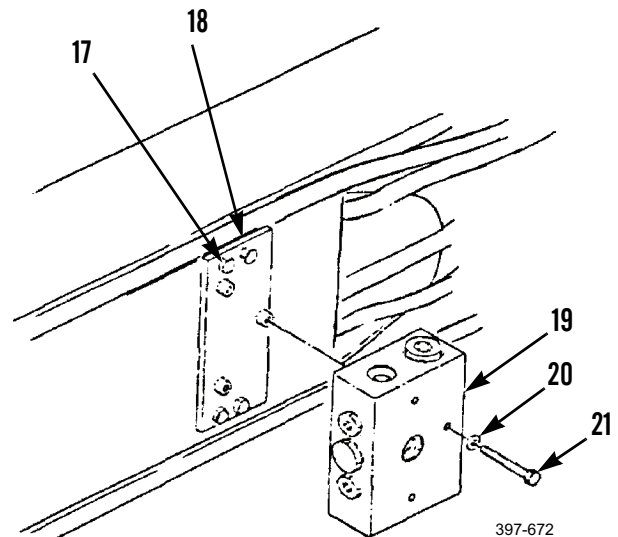
Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Lower temperature of seat (32).
2. Use a 0.69 in. (17.5 mm) diameter brass rod and hammer to install seat (32) in body (19).
3. Install pistons (33 and 27) in body (19).
4. Lower temperature of seat (26).
5. Use a 0.69 in. (17.5 mm) diameter brass rod and hammer to install seat (26) in body (19).
6. Move pistons (27 and 33), checking for free travel.
7. Install ball (31), spring (28), new preformed packing (29), and plug (30) in body (19). Tighten plug to 25 lb-ft (34 Nm).
8. Install ball (25), spring (24), new preformed packing (23), and plug (22) in body (19). Tighten plug to 25 lb-ft (34 Nm).
9. Install new preformed packing (43) and plug (42) in body (19).
10. Install new seal (35) and plug (37) in body (19).
11. Install new preformed packing (38) and plug (39) in body (19).
12. Install new preformed packing (41) and plug (40) in body (19).
13. Install new preformed packing (34) and plug (36) in body (19).


INSTALLATION

1. Install mounting plate (18) on machine with four bolts (17).
2. Install blade float check valve (19) on mounting plate (18) with three washers (20) and bolts (21).



INSTALLATION - CONTINUED

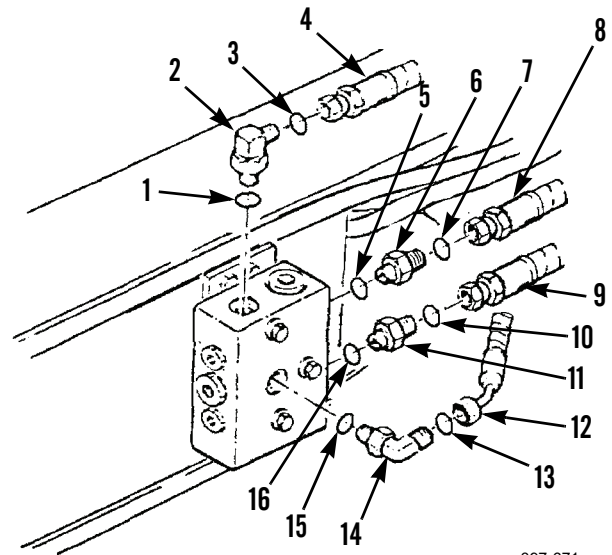3. Install new preformed packing (5) and connector (6).
4. Install new preformed packing (7) and connect hose assembly (8) to connector (6).
5. Install new preformed packing (16) and connector (11).
6. Install new preformed packing (10) and connect hose assembly (9) to connector (11).
7. Install new preformed packing (15) and elbow (14).
8. Install new preformed packing (13) and connect hose assembly (12) to elbow (14).
9. Install new preformed packing (1) and elbow (2).
10. Install new preformed packing (3) and connect hose assembly (4) to elbow (2).



397-671

11. Start engine (TM 5-3805-261-10).
12. Operate control levers and cycle system through at least five full-travel movements to bleed air from hydraulic system.
13. Stop engine and check for leaks.
14. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (29)

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
 MAINTENANCE - CONTINUED**

0235 00

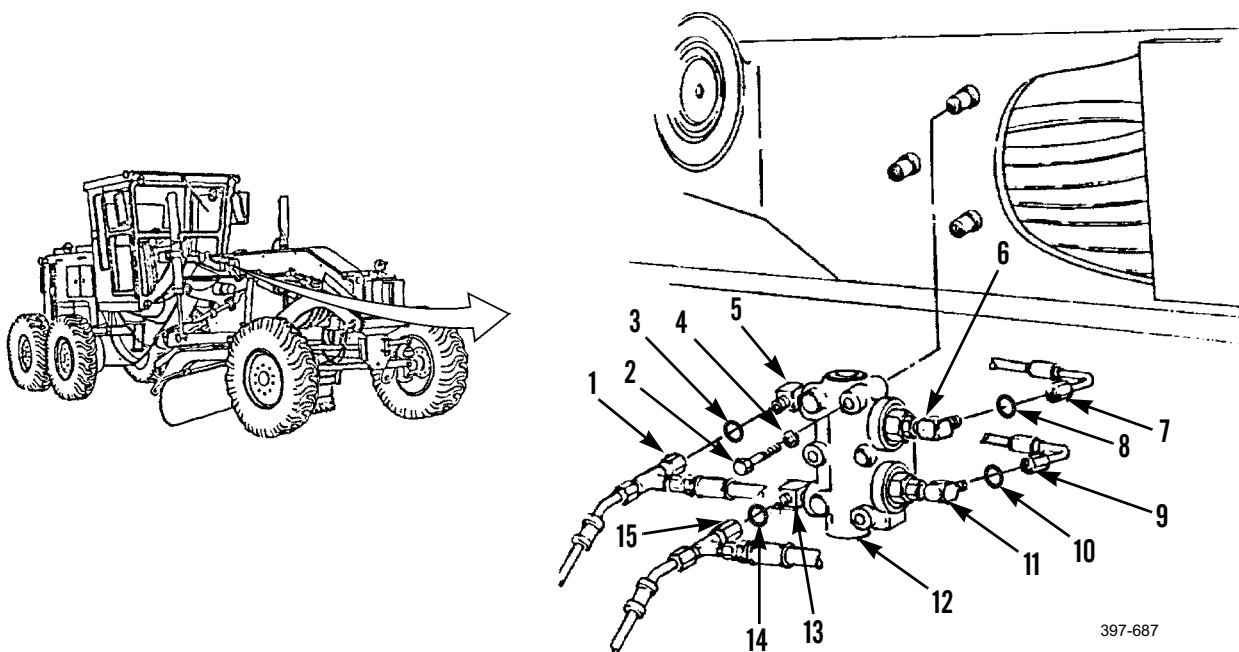
REMOVAL**CAUTION**

Cap hose and tube ends to prevent contamination.

NOTE

- Perform steps 1 through 9 to remove valve that functions as right blade lift check valve.
- Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect tee (1) from elbow (5). Remove and discard preformed packing (3).
2. Disconnect tee (15) from elbow (13). Remove and discard preformed packing (14).
3. Disconnect hose assembly (7) from elbow (6). Remove and discard preformed packing (8).
4. Disconnect hose assembly (9) from elbow (11). Remove and discard preformed packing (10).
5. Remove three bolts (2), washers (4), and check valve (12) assembly.




397-687

**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

0235 00

REMOVAL - CONTINUED


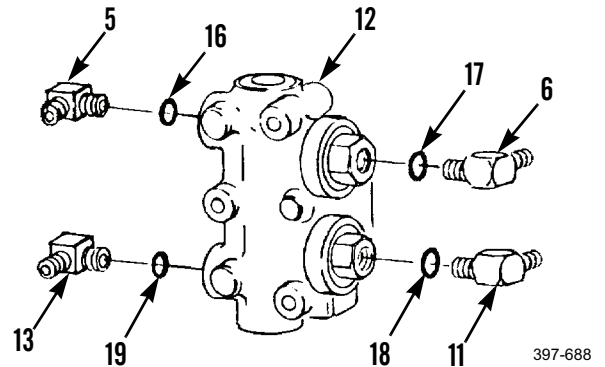
6. Remove elbow (5) and preformed packing (16) from check valve (12). Discard preformed packing.
7. Remove elbow (6) and preformed packing (17). Discard preformed packing.
8. Remove elbow (11) and preformed packing (18). Discard preformed packing.
9. Remove elbow (13) and preformed packing (19). Discard preformed packing.
10. Disassemble check valve (12). Refer to *Disassembly* in this work package.



NOTE

Perform steps 11 through 20 to remove valve that functions as articulation check valve.

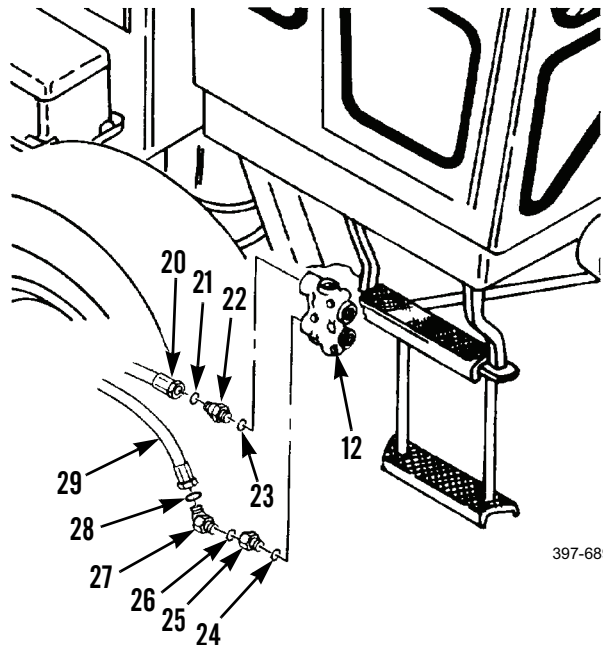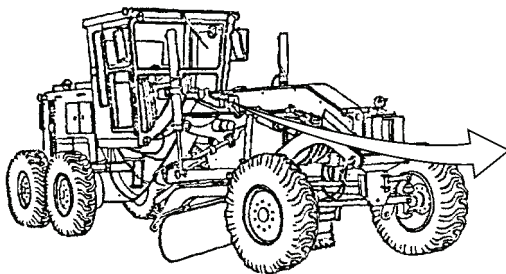11. Disconnect hose assembly (29) from connector (27). Remove and discard preformed packing (28).
12. Remove connector (27) and preformed packing (26). Discard preformed packing.
13. Remove elbow (25) and preformed packing (24) from check valve (12) assembly. Discard preformed packing.
14. Disconnect hose assembly (20) from fitting (22). Remove and discard preformed packing (21).
15. Remove fitting (22) and preformed packing (23). Discard preformed packing.




**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

0235 00

REMOVAL - CONTINUED

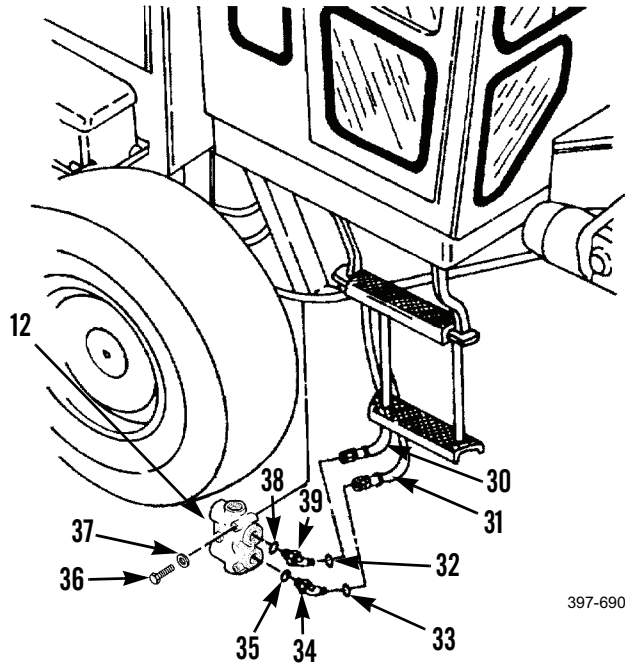16. Disconnect hose assembly (30) from elbow (39). Remove and discard preformed packing (32).
17. Remove elbow (39) and preformed packing (38). Discard preformed packing.
18. Disconnect hose assembly (31) from elbow (34). Remove and discard preformed packing (33).
19. Remove elbow (34) and preformed packing (35). Discard preformed packing.
20. Remove three bolts (36), washers (37), and check valve (12).
21. Disassemble check valve (12). Refer to *Disassembly* in this work package.



397-690

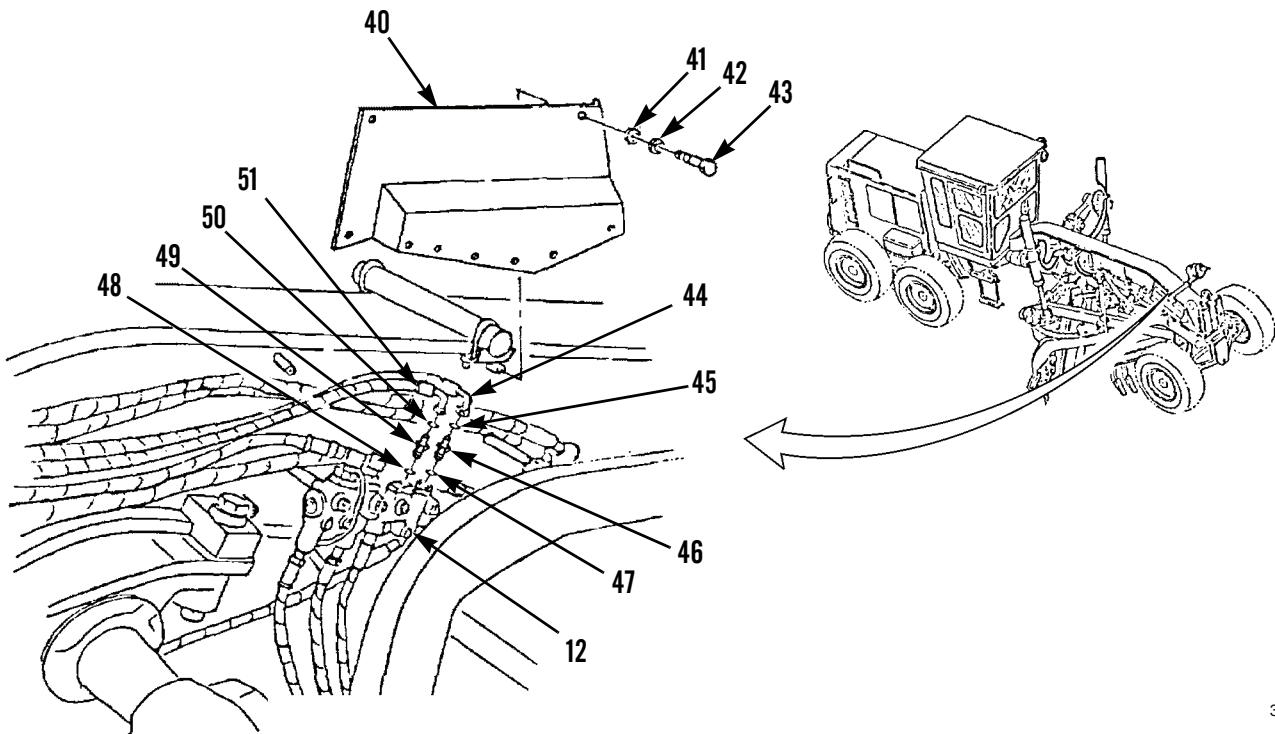
**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

0235 00

REMOVAL - CONTINUED**NOTE**

Perform steps 22 through 31 to remove valve that functions as centershift check valve.


22. Remove nine bolts (42), washers (41 and 43), and frame cover (40) from machine.
23. Disconnect hose assembly (51) from connector (49). Remove and discard preformed packing (50).
24. Remove connector (49) and preformed packing (48) from check valve (12) assembly. Discard preformed packing.
25. Disconnect hose assembly (44) from connector (46). Remove and discard preformed packing (45).
26. Remove connector (46) and preformed packing (47). Discard preformed packing.



397-685

**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED****0235 00****REMOVAL - CONTINUED**

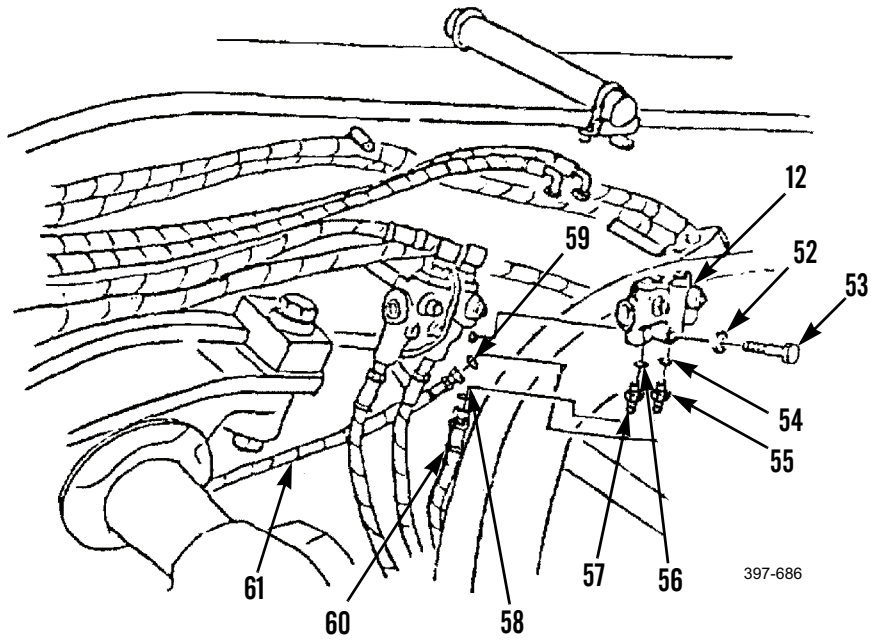27. Disconnect hose assembly (60) from connector (57). Remove and discard preformed packing (58).
28. Remove connector (57) and preformed packing (56) from check valve (12) assembly. Discard preformed packing.
29. Disconnect hose assembly (61) from connector (55). Remove and discard preformed packing (59).
30. Remove connector (55) and preformed packing (54). Discard preformed packing.
31. Remove bolt (53), washer (52), and check valve (12).
32. Disassemble check valve (12). Refer to *Disassembly* in this work package.



**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

0235 00

DISASSEMBLY

1. Remove adapter (70), preformed packing (69), and choke (68) from check valve (12). Discard preformed packing.
2. Remove adapter (71), preformed packing (72), and choke (73). Discard preformed packing.



WARNING

Spring is under pressure. Loosen plug carefully to relieve pressure of spring. Failure to follow this warning may cause injury to personnel.

NOTE

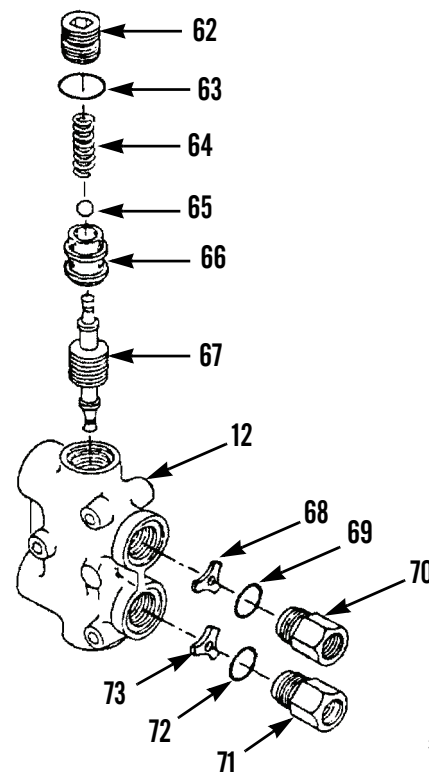
Loosen plug carefully to relieve tension of spring.

3. Remove plug (62), preformed packing (63), spring (64), and ball (65). Discard preformed packing.

CAUTION

Use brass punch and hammer to remove seat and piston. Use caution not to damage seat.

4. Use a brass punch and hammer to remove seat (66) and piston (67).




397-1538

**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

0235 00

DISASSEMBLY - CONTINUED

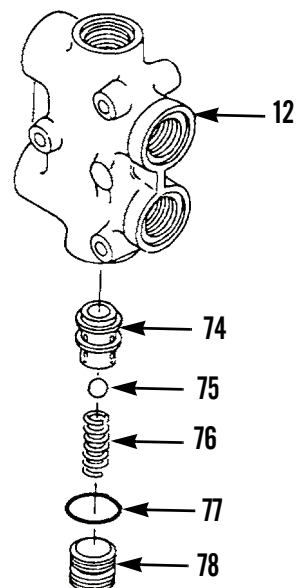5. Loosen plug (78) carefully to relieve tension of spring (76). Remove plug, preformed packing (77), spring (76), and ball (75). Discard preformed packing.
6. Use brass punch and hammer to remove seat (74) from check valve (12) body.




397-1539

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

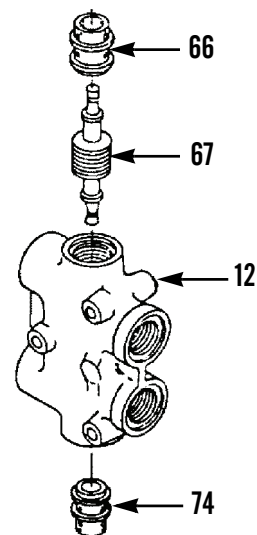1. Lower temperature of seat (74).
2. Use brass punch and hammer to install seat (74) in check valve (12) body.
3. Install pinion (67).
4. Lower temperature of seat (66).
5. Use brass punch and hammer to install seat (66).
6. Move piston (67) to check for free travel.




397-1540

**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

0235 00

ASSEMBLY - CONTINUED

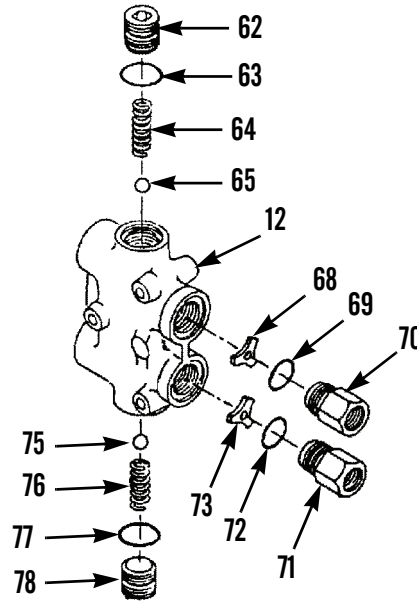7. Install ball (65), spring (64), new preformed packing (63), and plug (62). Tighten plug to 26 lb-ft (35 Nm).
8. Install ball (75), spring (76), new preformed packing (77), and plug (78). Tighten plug to 25 lb-ft (34 Nm).
9. Install choke (73), new preformed packing (72), and adapter (71). Tighten adapter to 55 lb-ft (75 Nm).
10. Install choke (68), new preformed packing (69), and adapter (70). Tighten adapter to 55 lb-ft (75 Nm).




397-1541

INSTALLATION

NOTE

Perform steps 1 through 14 to install valve that functions as centershift check valve.

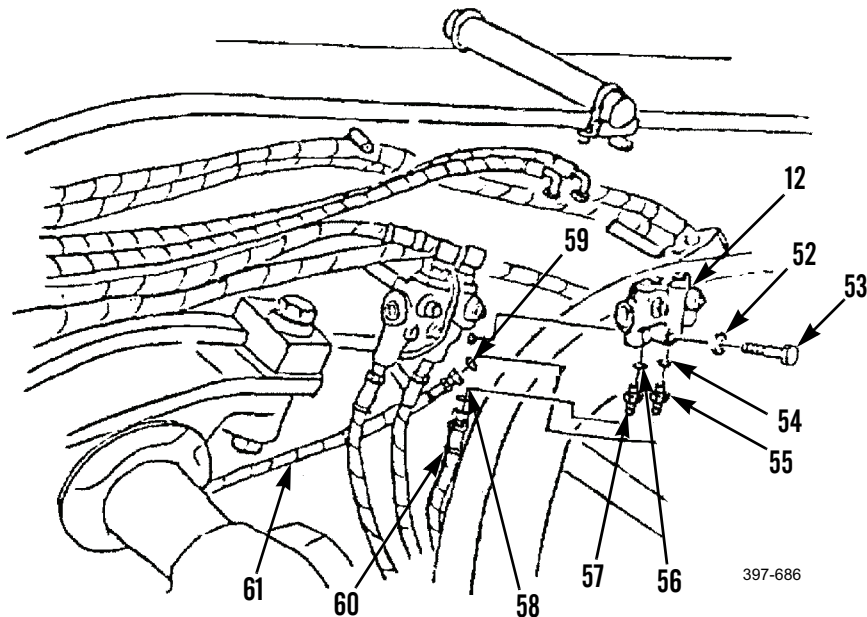1. Install check valve (12) to machine with washer (52), and bolt (53).
2. Install new preformed packing (54) and connector (55) to check valve (12) assembly.
3. Install new preformed packing (56) and connector (57).
4. Install new preformed packing (59) and connect hose assembly (61) to connector (55).
5. Install new preformed packing (58) and connect hose assembly (60) to connector (57).




397-686

**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

0235 00

INSTALLATION - CONTINUED

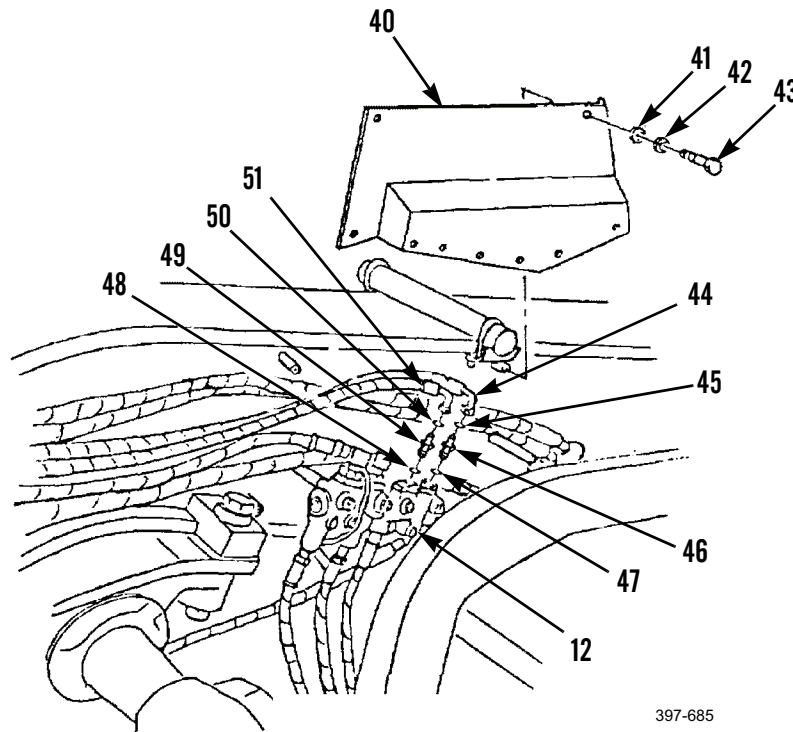6. Install new preformed packing (48) and connector (49) to check valve (12) assembly.
7. Install new preformed packing (47) and connector (46).
8. Install new preformed packing (50) and connect hose assembly (51) to connector (49).
9. Install new preformed packing (45) and connect hose assembly (44) to connector (46).
10. Start engine (TM 5-3805-261-10).
11. Operate control levers and cycle system through five or more full travel movements to bleed air from system.
12. Stop engine and check for leaks.
13. Install frame cover (40) to machine with nine washers (41), washers (42), and bolts (43).



397-685

14. Check hydraulic oil level and fill as necessary (WP 0216 00).

**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

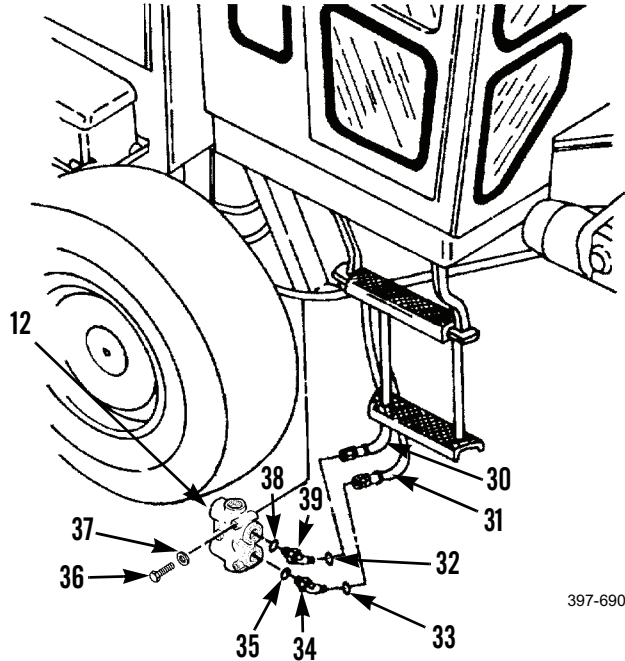
0235 00

INSTALLATION - CONTINUED


NOTE

Perform steps 15 through 29 to install valve that functions as articulation check valve.

15. Install check valve (12) assembly to machine with three washers (37) and bolts (36).
16. Install new preformed packing (35) and elbow (34) to check valve (12) assembly.
17. Install new preformed packing (33) and connect hose assembly (31) to elbow (34).
18. Install new preformed packing (38) and elbow (39).
19. Install new preformed packing (32) and connect hose assembly (30).



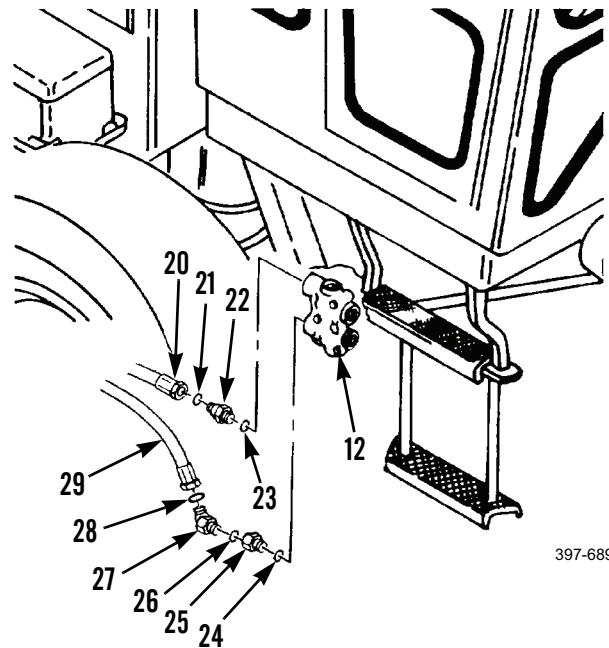20. Install new preformed packing (23) and fitting (22) to check valve (12) assembly.
21. Install new preformed packing (21) and connect hose assembly (20) to fitting (22).
22. Install new preformed packing (24) and fitting (25).
23. Install new preformed packing (26) and elbow (27) to fitting (25).
24. Install new preformed packing (28) and connect hose assembly (29) to fitting (25).



**RIGHT BLADE LIFT, ARTICULATION, AND CENTERSHIFT CHECK VALVE
MAINTENANCE - CONTINUED**

0235 00

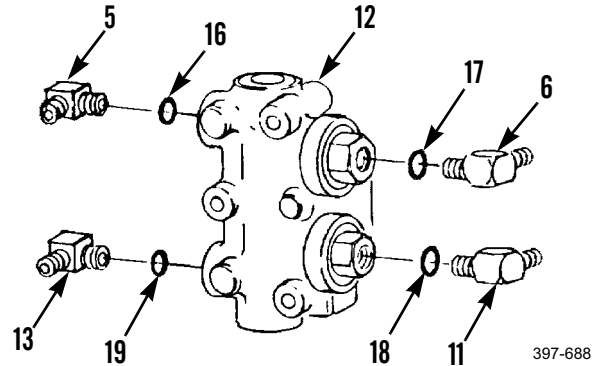
INSTALLATION - CONTINUED

25. Start engine (TM 5-3805-261-10).
26. Operate control levers and cycle system through at least five or more full-travel movements to bleed air from system.
27. Stop engine and check for leaks.
28. Check hydraulic oil level and fill as necessary (WP 0216 00).


NOTE

Perform steps 29 through 42 to install valve that functions as right blade lift check valve.

29. Install new preformed packing (19) and elbow (13) to check valve (12) assembly.
30. Install new preformed packing (18) and elbow (11).
31. Install new preformed packing (17) and elbow (6).
32. Install new preformed packing (16) and elbow (5).



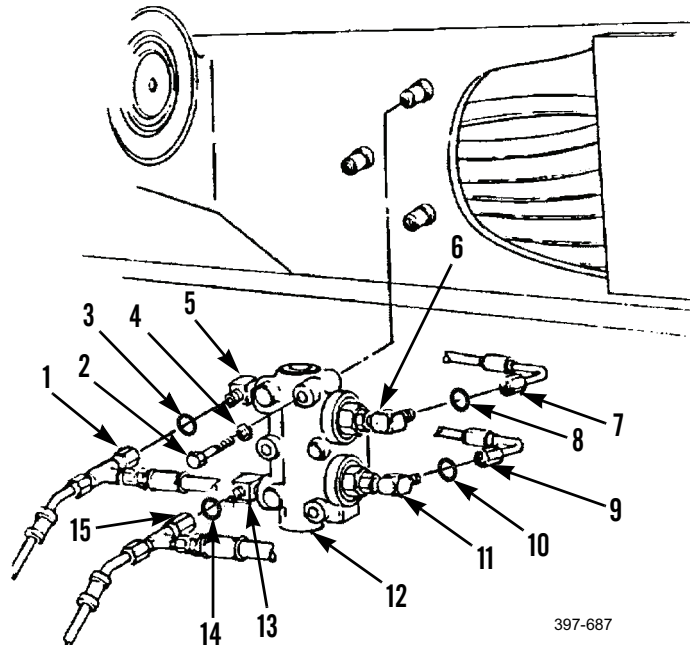33. Install check valve (12) assembly to machine with three washers (4) and bolts (2).
34. Install new preformed packing (10) and connect hose assembly (9) to elbow (11).
35. Install new preformed packing (8) and connect hose assembly (7) to elbow (6).
36. Install new preformed packing (14) and connect tee (15) to elbow (13).
37. Install new preformed packing (3) and connect tee (1) to elbow (5).



38. Start engine (TM 5-3805-261-10).
39. Operate control levers and cycle system through at least five full-travel movements to bleed air from system.
40. Stop engine and check for leaks.
41. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

LEFT BLADE LIFT AND RELIEF VALVE MAINTENANCE

0236 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0216 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, field maintenance (Item 74, WP 0348 00)

Wrench, torque (Item 96, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (13)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

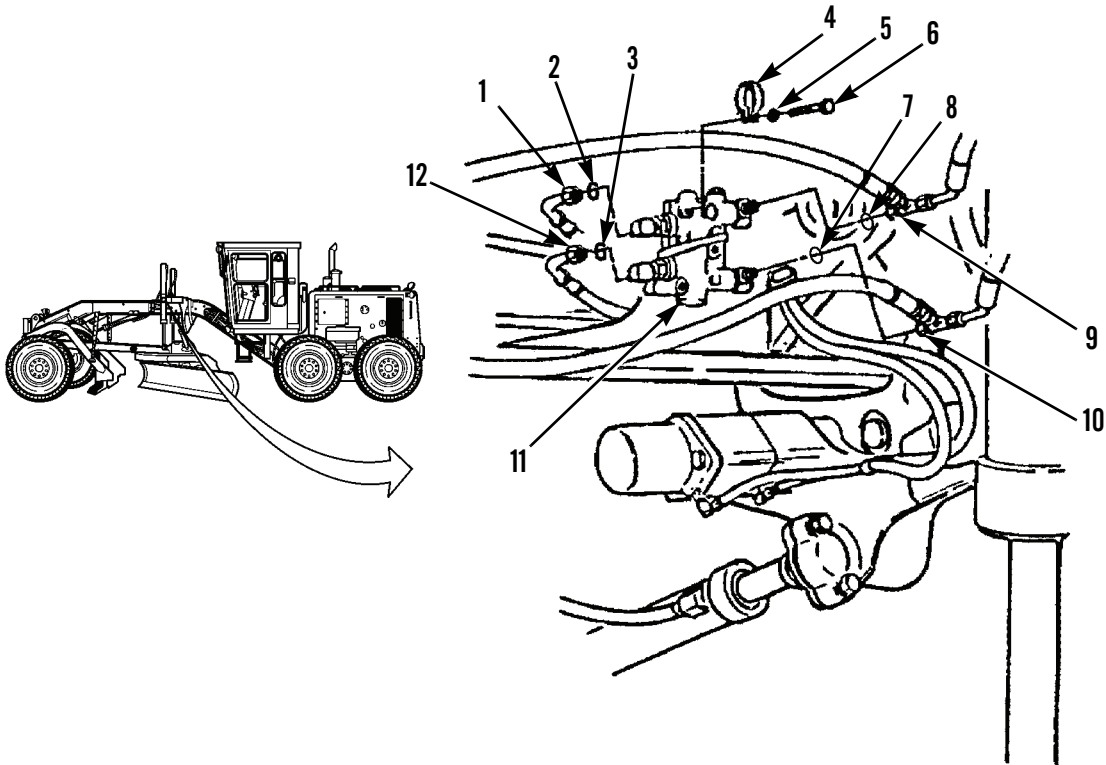
REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


1. Disconnect hose assemblies (1 and 12) from check valve (11) assembly. Remove and discard preformed packings (2 and 3).
2. Disconnect tees (9 and 10) from check valve (11) assembly. Remove and discard preformed packings (7 and 8).
3. Remove three bolts (6), washers (5), and check valve (11) assembly from machine.



397-691

REMOVAL - CONTINUED

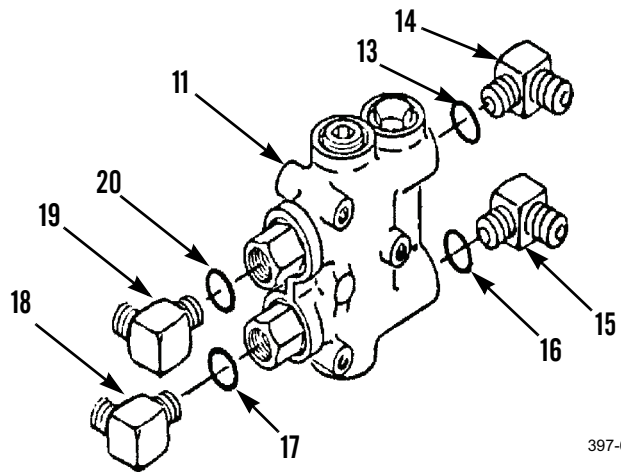4. Remove elbow (19) and preformed packing (20) from check valve (11) assembly. Discard preformed packing.
5. Remove elbow (14) and preformed packing (13). Discard preformed packing.
6. Remove elbow (15) and preformed packing (16). Discard preformed packing.
7. Remove elbow (18) and preformed packing (17). Discard preformed packing.



397-692

DISASSEMBLY

1. Remove adapter (29), preformed packing (28), and choke (27) from check valve (11). Discard preformed packing.
2. Remove adapter (30), preformed packing (31), and choke (32). Discard preformed packing.



WARNING

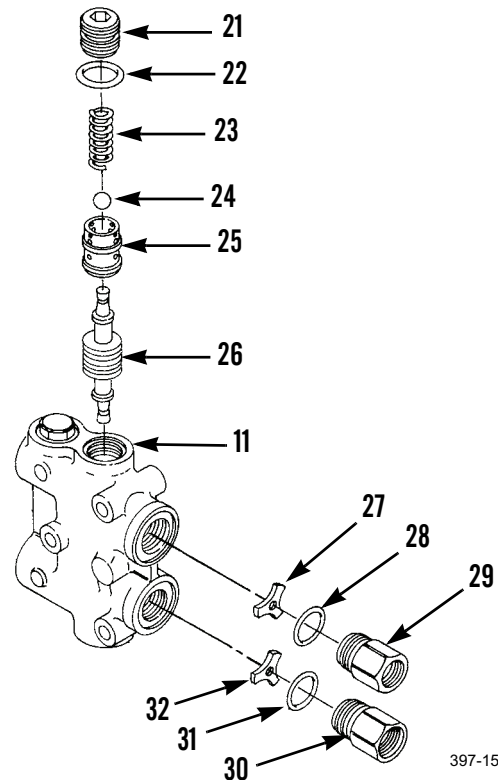
Springs are under pressure. Loosen plugs carefully to relieve tension of springs. Failure to follow this warning may cause injury to personnel.

3. Loosen plug (21) carefully to relieve tension of spring (23). Remove plug, preformed packing (22), spring, and ball (24). Discard preformed packing.

CAUTION

Use brass punch and hammer to remove seat and piston. Use caution not to damage seat.

4. Use brass punch and hammer to remove seat (25) and piston (26).



397-1542

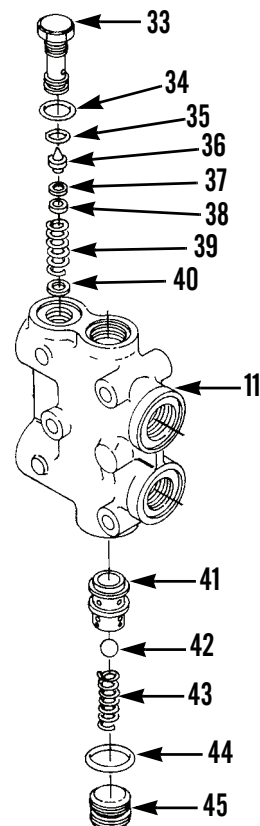
DISASSEMBLY - CONTINUED

5. Loosen plug (45) carefully to relieve tension of spring (43). Remove plug, preformed packing (44), spring, and ball (42). Discard preformed packing.
6. Use brass punch and hammer to remove seat (41).

NOTE

Keep groups of shim(s) together and tag for identification.

7. Loosen plug (33) carefully to relieve tension of spring (39). Remove plug, preformed packings (34 and 35), valve (36), shim(s) (37), four shims (38), spring, and four washers (40) from check valve (11). Discard preformed packings.




397-1543

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

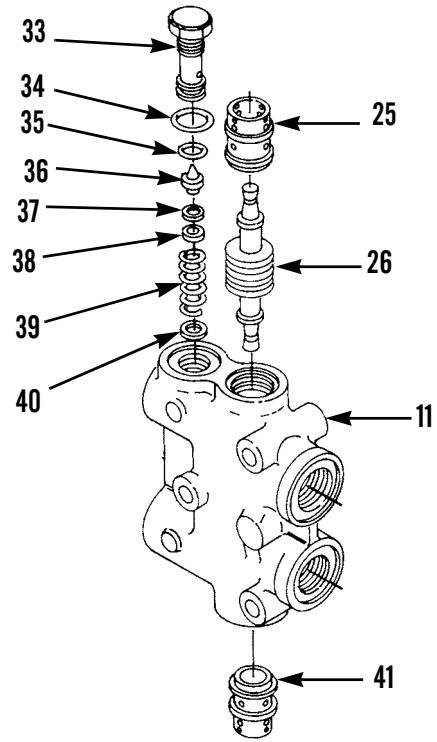
1. Install four washers (40), spring (39), four shims (38), shim(s) (37), valve (36), new preformed packings (35 and 34), and plug (33) in check valve (11).
2. Lower temperature of seat (41).
3. Use brass punch and hammer to install seat (41).
4. Install piston (26).
5. Lower temperature of seat (25).
6. Use brass punch and hammer to install seat (25).
7. Move piston (26) to check for free travel.



397-1544

ASSEMBLY - CONTINUED

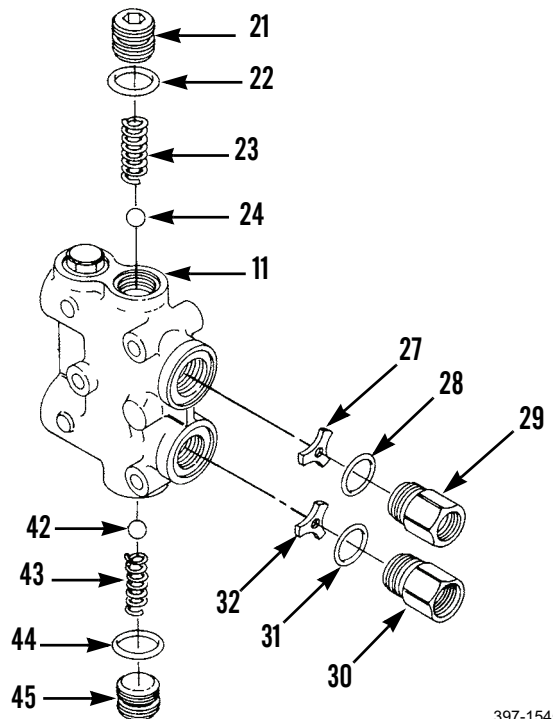
8. Install ball (42), spring (43), new preformed packing (44), and plug (45). Tighten plug to 25 lb-ft (34 Nm).
9. Install ball (24), spring (23), new preformed packing (22), and plug (21). Tighten plug to 25 lb-ft (34 Nm).
10. Install choke (32), new preformed packing (31), and adapter (30). Tighten adapter to 55 lb-ft (75 Nm).
11. Install choke (27), new preformed packing (28), and adapter (29). Tighten adapter to 55 lb-ft (75 Nm).



397-1545

INSTALLATION

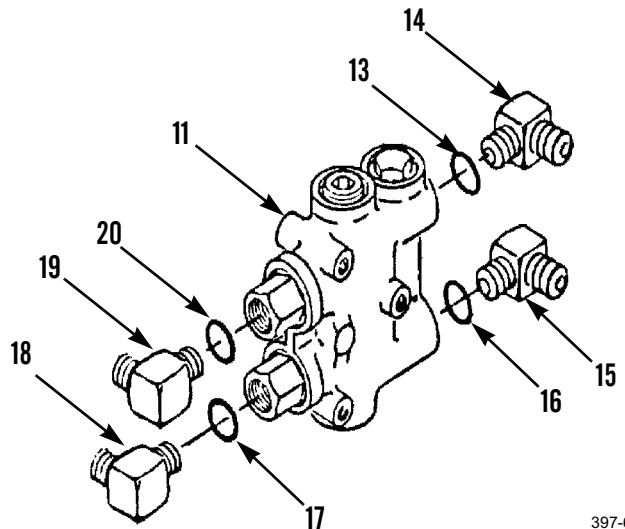
1. Install new preformed packing (17) and elbow (18) to check valve (11) assembly.
2. Install new preformed packing (16) and elbow (15) to check valve (11) assembly.
3. Install new preformed packing (13) and elbow (14).
4. Install new preformed packing (20) and elbow (19).



397-692

INSTALLATION - CONTINUED

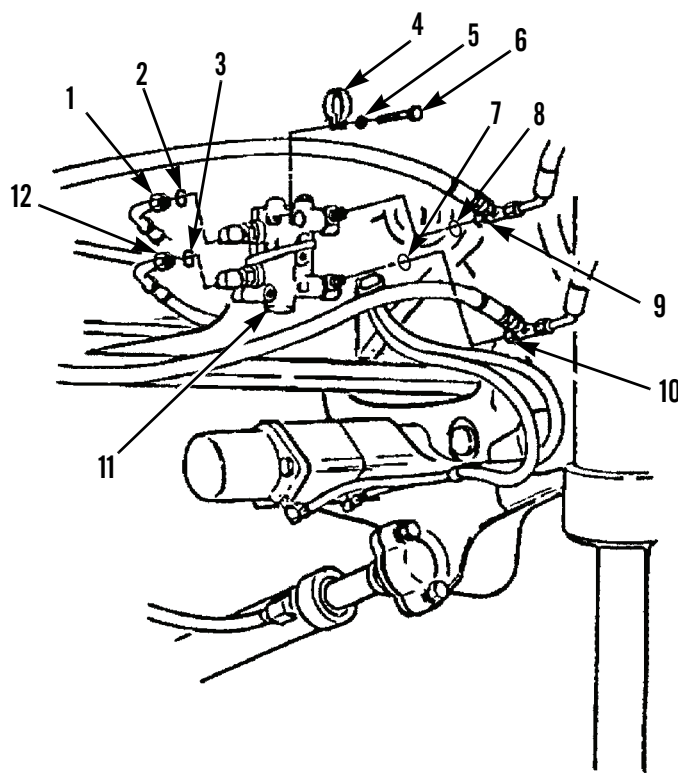5. Position check valve (11) assembly to machine.
6. Install clamp (4), three washers (5), and bolts (6).
7. Install new preformed packings (8 and 7) and connect tees (10 and 9) to check valve (11) assembly.
8. Install new preformed packings (3 and 2) and connect hose assemblies (12 and 1) to check valve (11) assembly.



397-691

9. Start engine (TM 5-3805-261-10).
10. Operate control levers and cycle system at least five full-travel movements to bleed air from system.
11. Stop engine and check for leaks.
12. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

HYDRAULIC CONTROL VALVES REPLACEMENT

0237 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation, Hydraulic Oil Pressure Tests

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 27, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (18)

Personnel Required

Two

References

WP 0020 00

WP 0216 00

WP 0323 00

WP 0329 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-2805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic control rods disconnected (WP 0218 00)

Scarifer hoses disconnected (WP 0229 00)

Blade lift hoses disconnected (WP 0222 00)

Wheel lean hoses disconnected (WP 0224 00)

Centershift hoses disconnected (WP 0226 00)

Articulation hoses disconnected (WP 0227 00)

Side shift hoses disconnected (WP 0228 00)

Circle drive hoses disconnected (WP 0225 00)

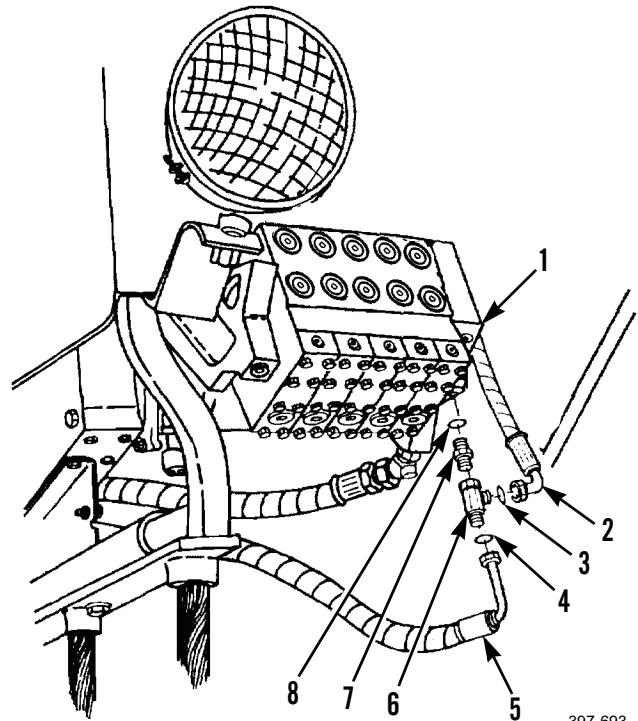
Blade tip hoses disconnected (WP 0223 00)

REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE


- Perform steps 1 through 9 to remove hydraulic control valve under RIGHT side of cab.
 - Tag hose assemblies before disconnecting to aid in installation.
1. Disconnect hose assemblies (11 and 14) from tee (15). Remove and discard preformed packings (12 and 13) under front-right side of cab.
 2. Remove tee (15), connector (16), and preformed packing (17) from control valve (1) assembly. Discard preformed packing.



397-693

REMOVAL - CONTINUED

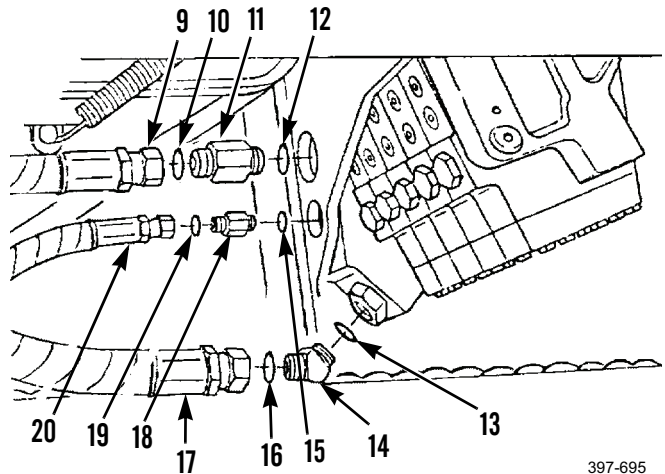3. Disconnect hose assemblies (17, 20, and 9) from elbow (14) and connectors (18 and 11). Remove and discard preformed packings (16, 15, and 10).
4. Remove elbow (14), and preformed packing (13). Discard preformed packing.
5. Remove connector (18) and preformed packing (15). Discard preformed packing.
6. Remove connector (11) and preformed packing (12). Discard preformed packing.



397-695

7. Remove bolt (24), washer (25), and rubber mount (26).



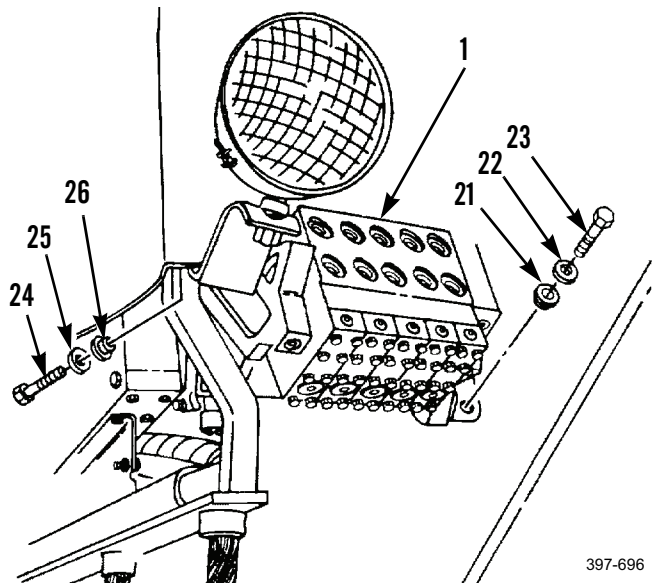
WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Control valve assembly weighs 85 lb (39 kg).


8. With assistance, remove two bolts (23), washers (22), rubber mounts (21), and control valve (1) assembly from machine.



397-696


REMOVAL - CONTINUED

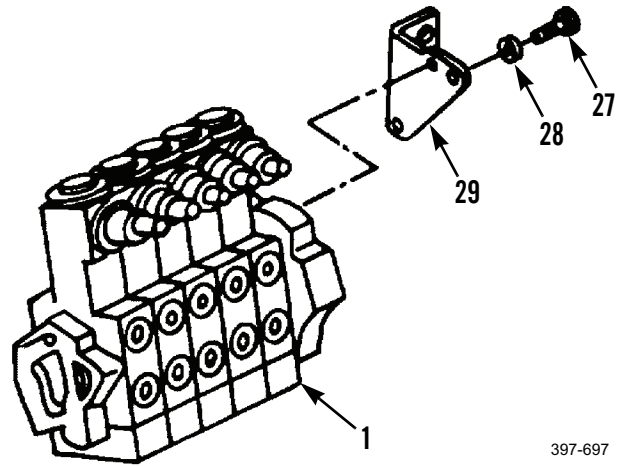9. Remove three bolts (27), washers (28), and bracket (29) from control valve (1) assembly.



397-697

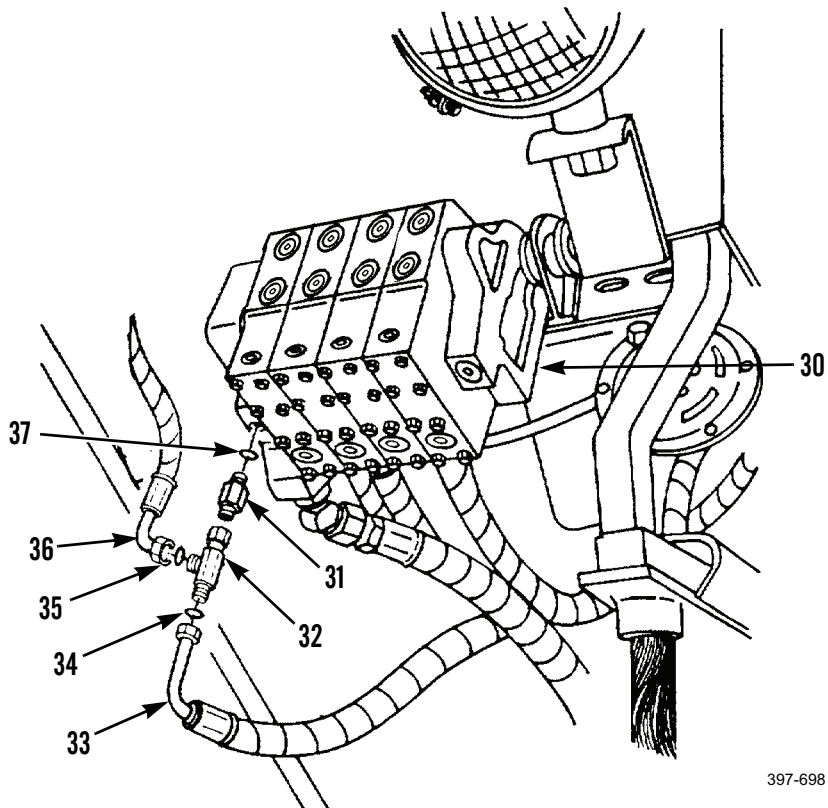
10. Disconnect two hose assemblies (33 and 36) from tee (32). Remove and discard two preformed packings (59 and 60).
11. Remove tee (32), connector (31), and preformed packing (37) from control valve (30) assembly. Discard preformed packing.



397-698


REMOVAL - CONTINUED

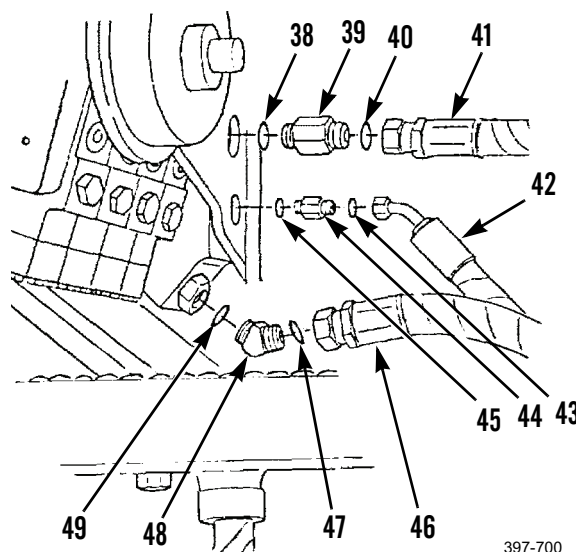12. Disconnect hose assemblies (46, 42, and 41) from elbow (48) and connectors (44 and 39). Remove and discard preformed packings (47, 43, and 40).
13. Remove elbow (48) and preformed packing (49). Discard preformed packing.
14. Remove connector (44) and preformed packing (45). Discard preformed packing.
15. Remove connector (39) and preformed packing (38). Discard preformed packing.



397-700

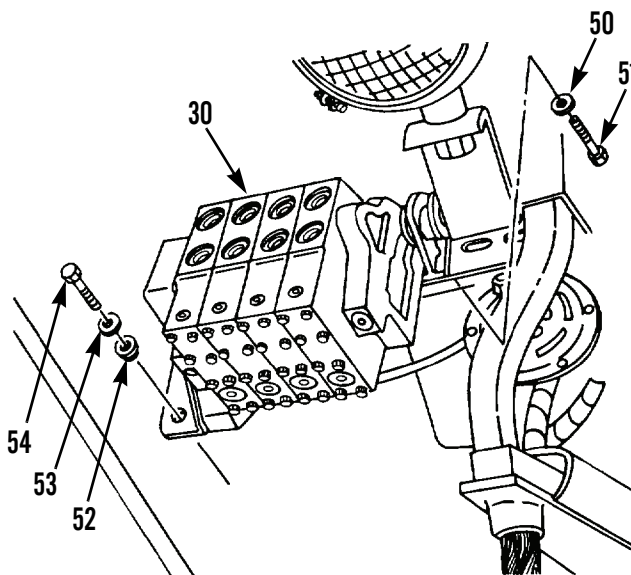
16. Remove bolt (51) and washer (50).
17. With assistance, remove two bolts (54), washers (53), and control valve (30) assembly from machine.



397-701

REMOVAL - CONTINUED

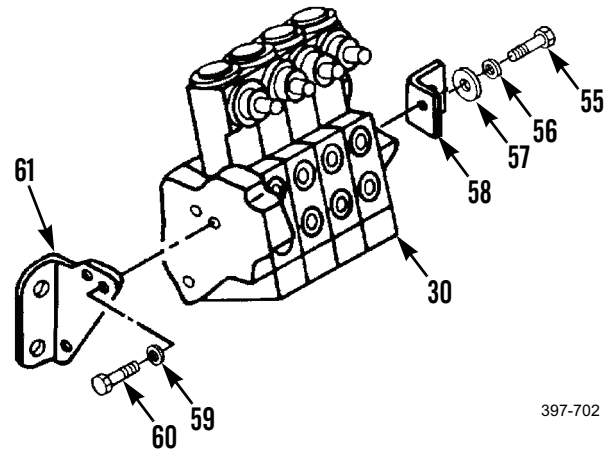18. Remove three bolts (60), washers (59), and bracket (61) from control valve (30) assembly.
19. Remove bolt (55), washer (56), rubber mount (57), and bracket (58) from control valve (30) assembly.



397-702

CLEANING AND INSPECTION

Clean all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

Perform steps 1 through 10 to install hydraulic control valve under left side of cab.

1. Install bracket (58), rubber mount (57), washer (56), and bolt (55) on control valve (30) assembly.
2. Install bracket (61), with washer (59) and bolt (60).

INSTALLATION - CONTINUED



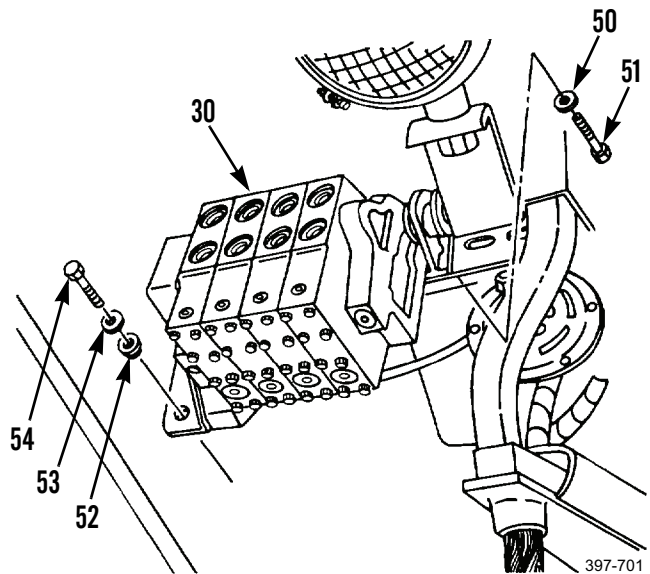
WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.


NOTE

Control valve assembly weighs 85 lb (39 kg).

3. With assistance, install control valve (30) assembly on machine with two mountings (52), washers (53), and bolts (54).
4. Install washer (50) and bolt (51).




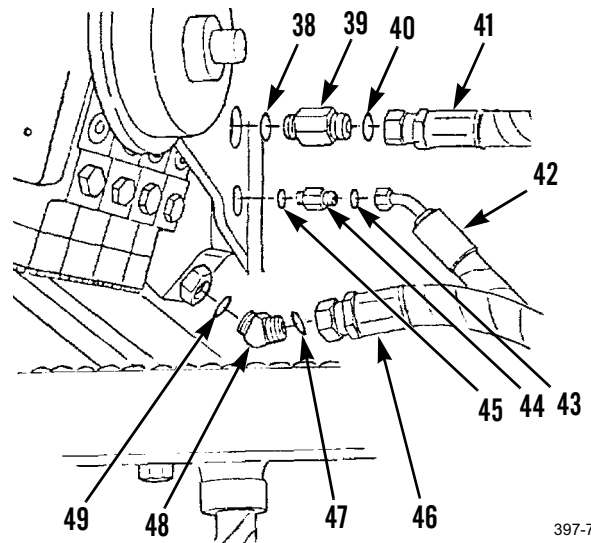5. Install new preformed packing (38) and connector (39).
6. Install new preformed packing (45) and connector (44).
7. Install new preformed packing (49) and elbow (48).
8. Install new preformed packings (40, 43, and 47) and connect hose assemblies (41, 42, and 46) to connectors (39 and 44) and elbow (48).



INSTALLATION - CONTINUED

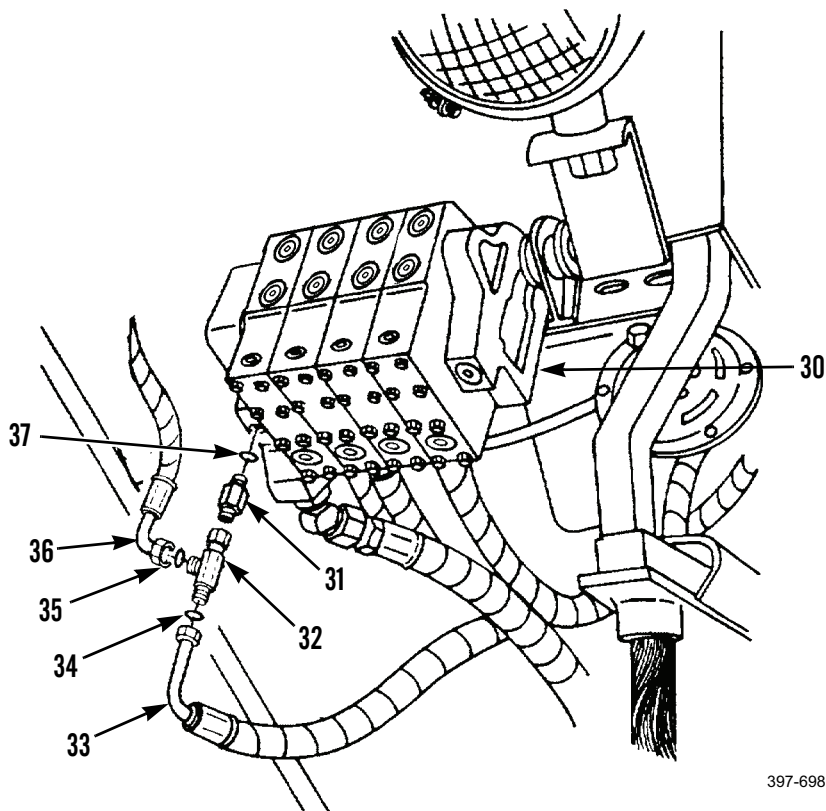9. Install new preformed packing (37), connector (31), and tee (32) on control valve (30) assembly.
10. Install new preformed packings (35 and 34) and connect hose assemblies (36 and 33) to tee (32).




397-698

NOTE

Perform steps 11 through 19 to install hydraulic control valve under right side of cab.

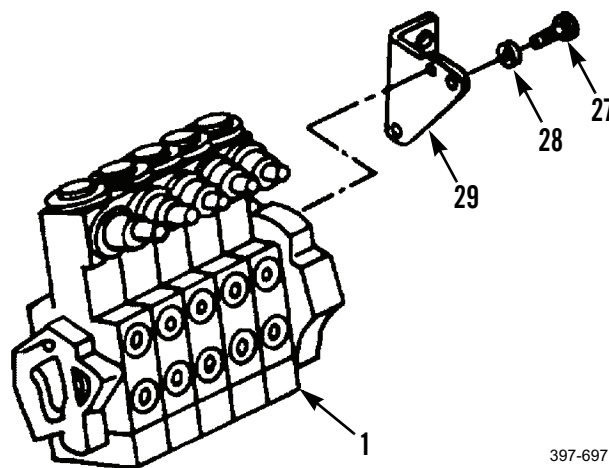11. Install bracket (29) to control valve (1) assembly with three washers (28) and bolts (27).



397-697

INSTALLATION - CONTINUED



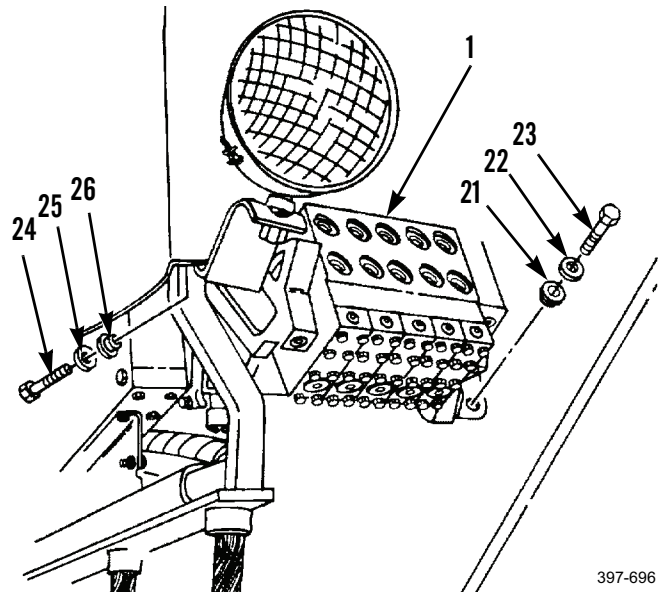
WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE


Control valve assembly weighs 85 lb (39 kg).

12. With assistance, install control valve (1) to machine with two rubber mounts (21), washers (22), and bolts (23).
13. Install rubber mount (26), washer (25), and bolt (24).



397-696

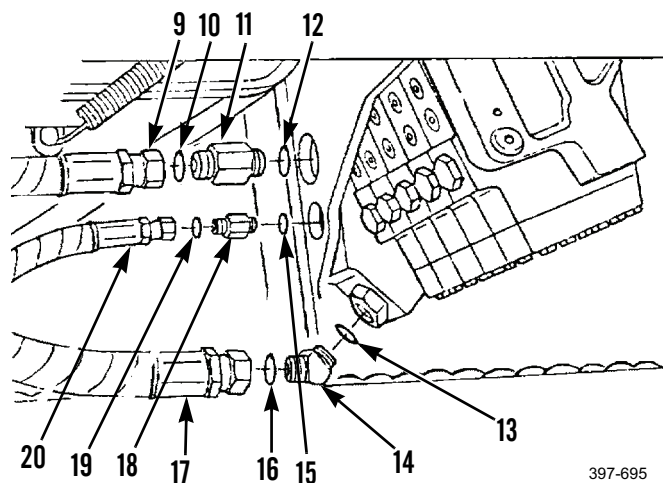
14. Install new preformed packing (12) and connector (11).
15. Install new preformed packing (15) and connector (18).
16. Install new preformed packing (13) and elbow (14).
17. Install preformed packings (16, 19, and 10) and connect hose assemblies (17, 20, and 9).



397-695

INSTALLATION - CONTINUED

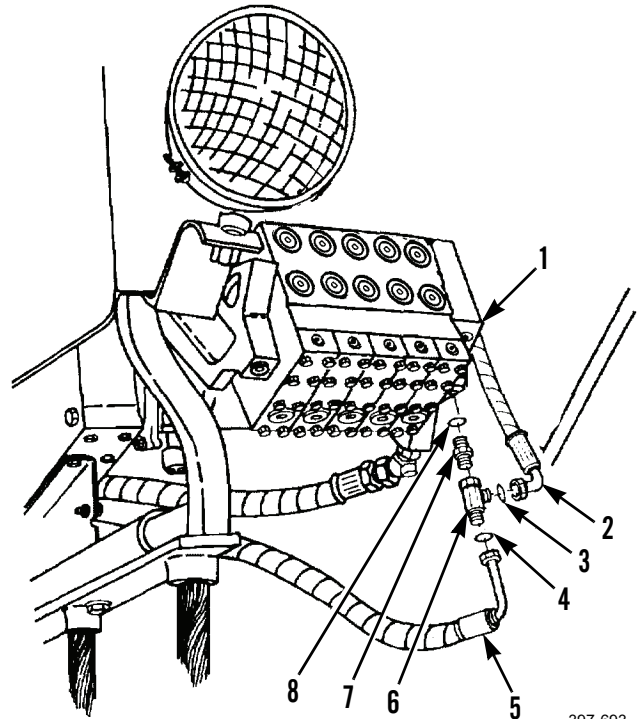18. Install new preformed packing (8), connector (7), and tee (6) on control valve assembly (1).
19. Install new preformed packings (4 and 3) and connect hose assemblies (5 and 2) to tee (6).




397-693

20. Connect blade tip hoses (WP 0223 00).
21. Connect circle drive hoses (WP 0225 00).
22. Connect side shift hoses (WP 0228 00).
23. Connect articulation hoses (WP 0227 00).
24. Connect centershift hoses (WP 0226 00).
25. Connect wheel lean hoses (WP 0224 00).
26. Connect blade lift hoses (WP 0222 00).
27. Connect scarifier hoses (WP 0229 00).
28. Connect hydraulic control rods (WP 0218 00).
29. Start engine (TM 5-3805-261-10).
30. Operate control levers. Cycle system through at least five full-travel movements to bleed the air from hydraulic system.
31. Stop engine and check for leaks.
32. Check hydraulic oil level and fill as necessary (WP 0216 00).

HYDRAULIC OIL PRESSURE TESTS

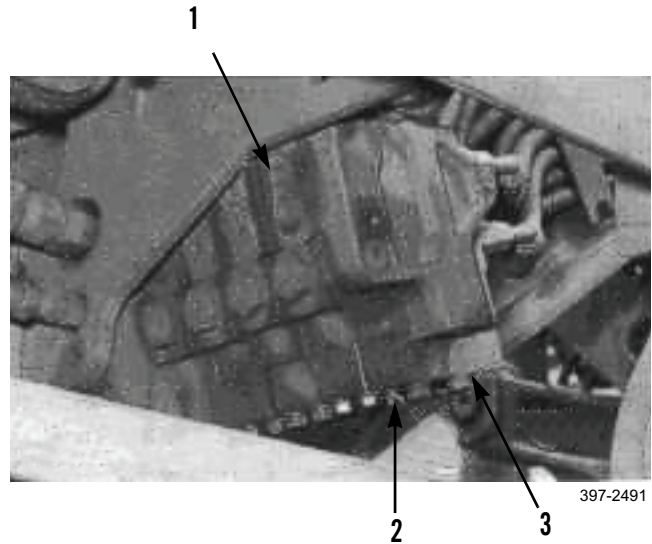1. Remove hollow hex plug (1) to the passage for the pump oil. Install an oil pressure gauge, hose, and fittings in the plug opening.
2. Start and run the engine at high idle RPM. Move the control levers that operate the hydraulic cylinders to get an increase in the temperature of the hydraulic oil. When the temperature of the hydraulic oil is approximately 30°F (17°C) more than the temperature of the atmosphere, run the engine at high idle RPM. With all of the control levers in HOLD position, look at the oil pressure gauge.
3. The correct pressure is 2150 ± 30 psi ($14,824 \pm 207$ kPa). If the pressure of the pump oil is too low, the pump or the combination valve or both the pump and the combination valve need repair (WP 0323 00 or WP 0329 00).
4. With the engine at high idle RPM, look at the oil pressure gauge and move each control lever separately. Hold the lever in position after the rod is either, in to, or out of the cylinder as far as it will move. The correct pressure is 3550 ± 20 psi ($24,476 \pm 136$ kPa) when a control lever is held both forward and to the rear.
5. If the pressure is too low, make a record of the pressure and the position of the rod, either in, or out of the cylinder. Test each control.
6. To test the circle drive control, stop engine. Disconnect the two oil lines to the hydraulic motor at the control valve. Install metal caps on the fittings in the control valve. The caps must keep the oil in the control when it is being tested.
7. Start and run the engine at high idle RPM. Look at the oil pressure gauge when the control lever is moved, both forward and to the rear. If the oil pressure is too low, make a record of the position of the control lever and the pressure.
8. If the oil pressure for both positions of each control lever is too low, the pump or the combination valve, or both the pump and the combination valve need repair (WP 0323 00 or WP 0329 00).
9. If the oil pressure for both positions of only one lever is correct and all of the other lever positions have too low oil pressure, the check valve is open in the control valve with the correct oil pressures.
10. If the oil pressure for one position of a control lever for one valve section is low and the other lever position has correct oil pressure, there is damage in the resolver valve.

**END OF WORK PACKAGE**

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Implements lowered to ground (TM 5-3805-261-10)

Rag, wiping (Item 35, WP 0349 00)

Engine off (TM 5-3805-261-10)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (13)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

References

WP 0216 00

Hydraulic pressure relieved (WP 0020 00)

REMOVAL

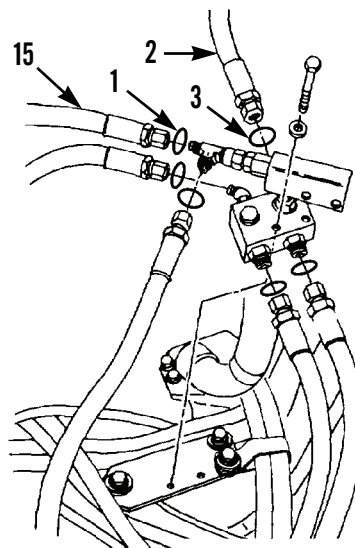
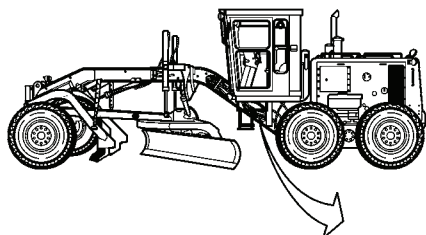
CAUTION

Cap hose ends to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assembly (15). Remove and discard preformed packing (1).
2. Disconnect hose assembly (2). Remove and discard preformed packing (3).




397-673

REMOVAL - CONTINUED**NOTE**


For Type II machines, hose assemblies (8, 10, and 11) are equipped with quick disconnect fittings.

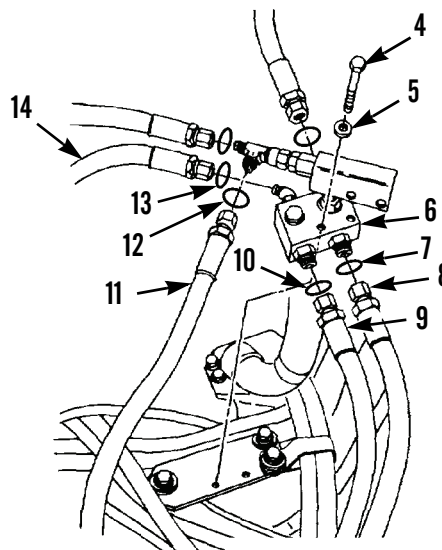3. Disconnect hose assembly (8). Remove and discard preformed packing (7).
4. Disconnect hose assembly (10). Remove and discard preformed packing (9).
5. Disconnect hose assembly (11). Remove and discard preformed packing (12).
6. Disconnect hose assembly (14). Remove and discard preformed packing (13).
7. Remove two bolts (4), washers (5), and relief valve (6) assembly from machine.



397-673

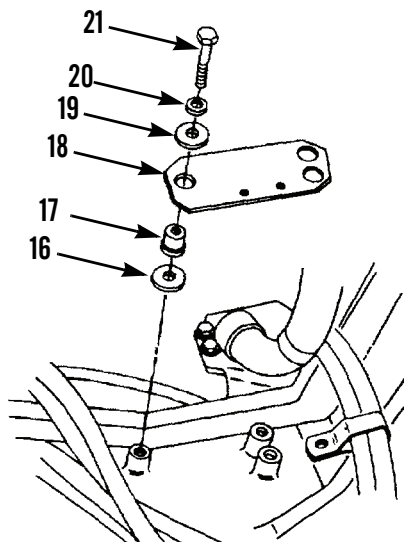
8. Remove three bolts (21), washers (20 and 19), bracket (18), three grommets (17), and washers (16) from machine.



397-674


DISASSEMBLY

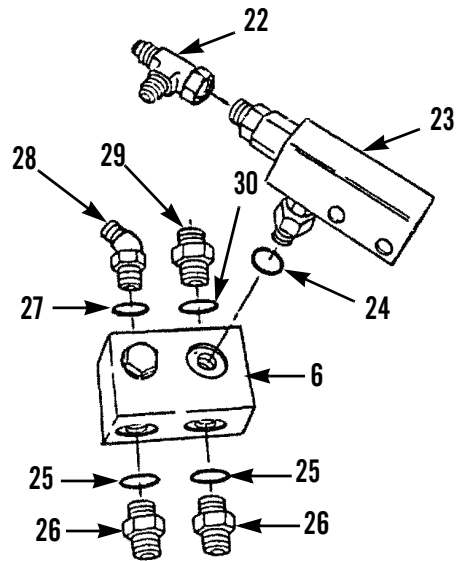1. Remove tee (22) from valve (23).
2. Remove valve (23) and preformed packing (24) from relief valve (6) assembly. Discard preformed packing.
3. Remove elbow (28) and preformed packing (27). Discard preformed packing.
4. Remove connector (29) and preformed packing (30). Discard preformed packing.
5. Remove two connectors (26) and preformed packings (25). Discard preformed packings.




397-1570

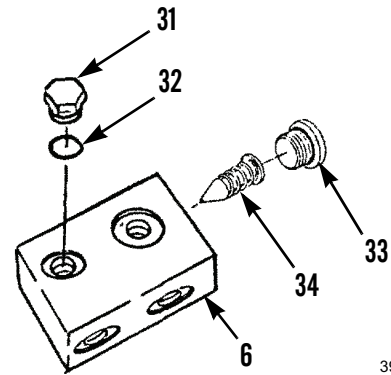6. Remove plug (31) and preformed packing (32) from relief valve (6). Discard preformed packing.
7. Remove plug (33) assembly and valve (34) assembly.



397-1571

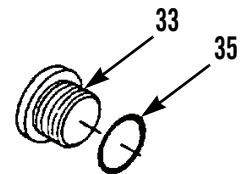8. Remove preformed packing (35) from plug (33). Discard preformed packing.



397-1572

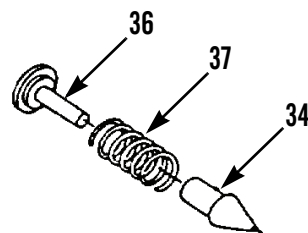
DISASSEMBLY - CONTINUED



WARNING

Spring is under pressure. Loosen valve and retainer carefully to relieve pressure of spring. Failure to follow this warning may cause injury to personnel.

9. Remove retainer (36) and spring (37) from valve (34).




397-1573

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


ASSEMBLY

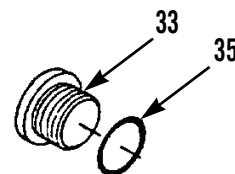1. Install spring (37) and retainer (36) on valve (34).
2. Install new preformed packing (35) on plug (33).



397-1572

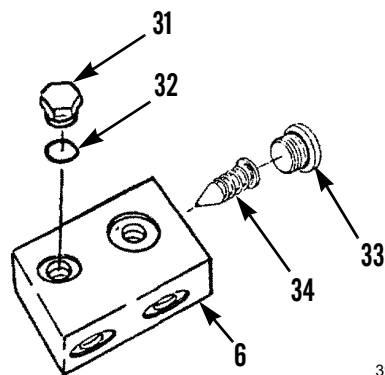
3. Install valve (34) assembly and plug (33) assembly in relief valve (6).
4. Install new preformed packing (32) and plug (31).



397-1571

ASSEMBLY - CONTINUED

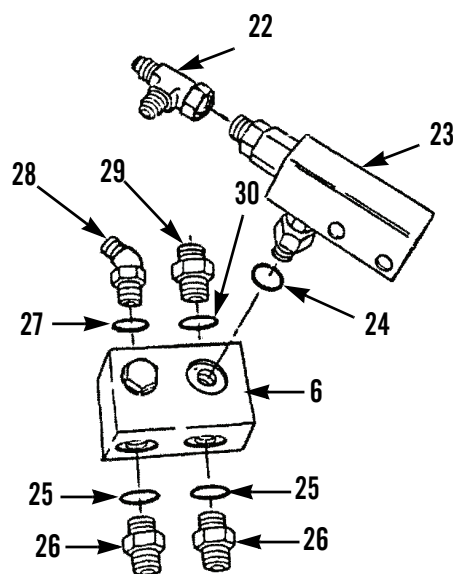
5. Install two new preformed packings (25) and connectors (26) on relief valve (6).
6. Install new preformed packing (30) and connector (29).
7. Install new preformed packing (27) and elbow (28).
8. Install new preformed packing (24) and valve (23).
9. Install tee (22) on valve (23).



397-1570

INSTALLATION

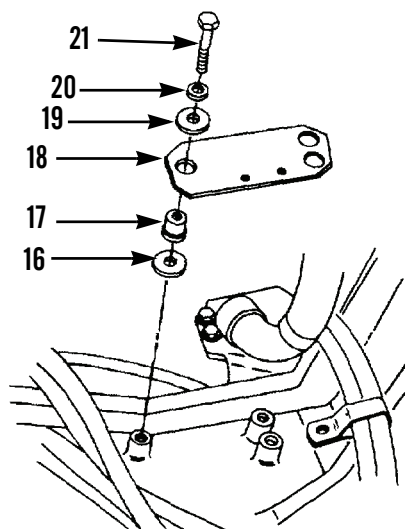1. Install bracket (18) on machine with three washers (16), grommets (17), washers (19 and 20), and three bolts (21).



397-674

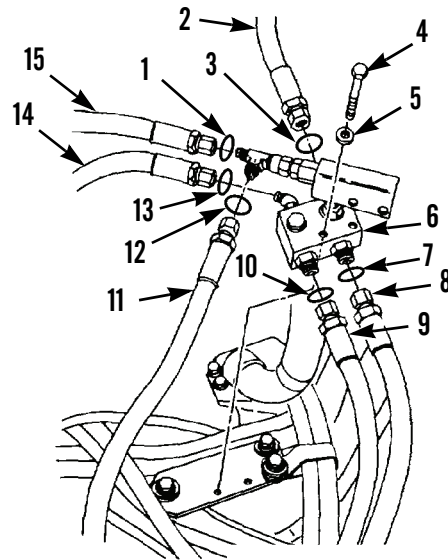
INSTALLATION - CONTINUED

2. Install relief valve (6) assembly with two washers (5) and bolts (4).
3. Install new preformed packing (13) and connect hose assembly (14).

NOTE

For Type II machines, hose assemblies (11, 10, and 8) are equipped with quick connect fittings.

4. Install new preformed packing (12) and connect hose assembly (11).
5. Install new preformed packing (9) and connect hose assembly (10).
6. Install new preformed packing (7) and connect hose assembly (8).
7. Install new preformed packing (3) and connect hose assembly (2).
8. Install new preformed packing (1) and connect hose assembly (15).
9. Start engine (TM 5-3805-261-10).
10. Operate control levers. Cycle system through at least five full-travel movements to bleed air from system.
11. Stop engine and check for leaks.
12. Check hydraulic oil level and fill as necessary (WP 0216 00).



397-673

END OF WORK PACKAGE

CIRCLE DRIVE AND LEANING WHEEL CHECK VALVE MAINTENANCE

0239 00

THIS WORK PACKAGE COVERSRemoval, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0216 00

Tools and Special Tools

Tool kit, general mechanic's, (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (19)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

REMOVAL**NOTE**

Perform steps 1 through 8 to remove circle drive check valve.

1. Remove eight bolts (1), washers (2 and 3), and frame cover (4) from left side of machine.

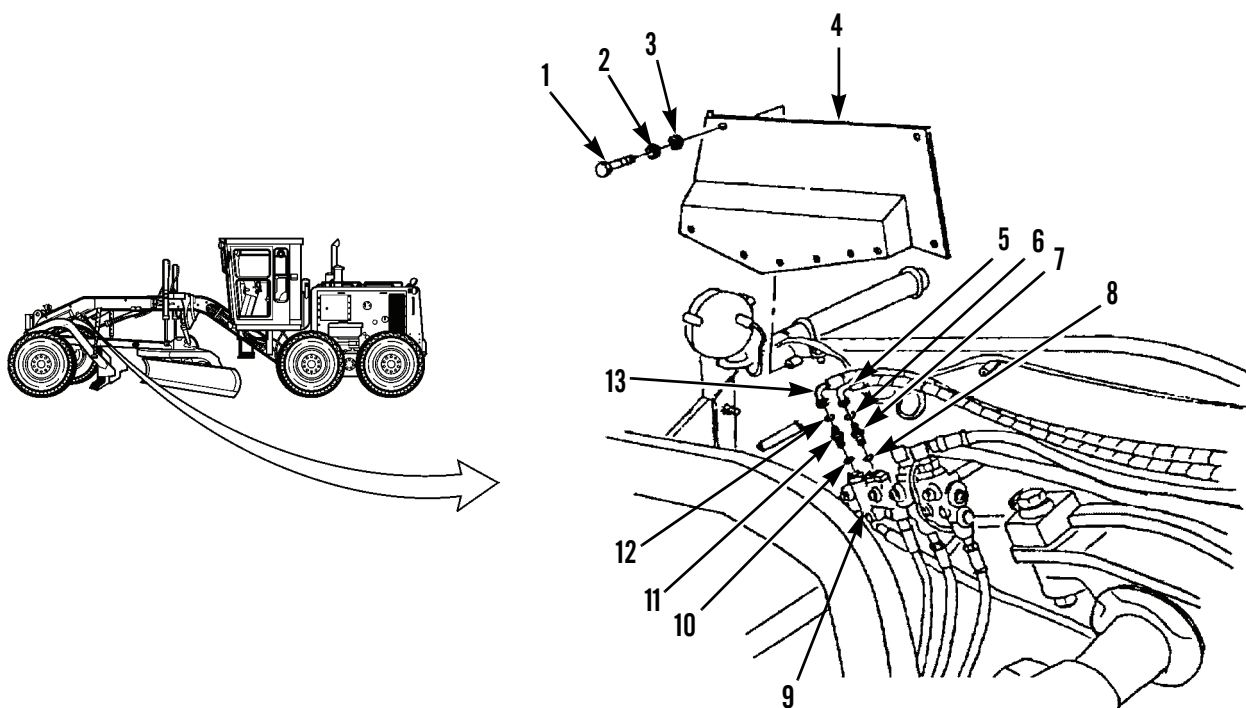
CAUTION

Cap hose ends to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


2. Disconnect hose assemblies (5 and 13) from connectors (7 and 11). Remove and discard preformed packings (6 and 12).
3. Remove connector (7) and preformed packing (8) from circle drive check valve (9). Discard preformed packing.
4. Remove connector (11) and preformed packing (10). Discard preformed packing.



397-675

REMOVAL - CONTINUED

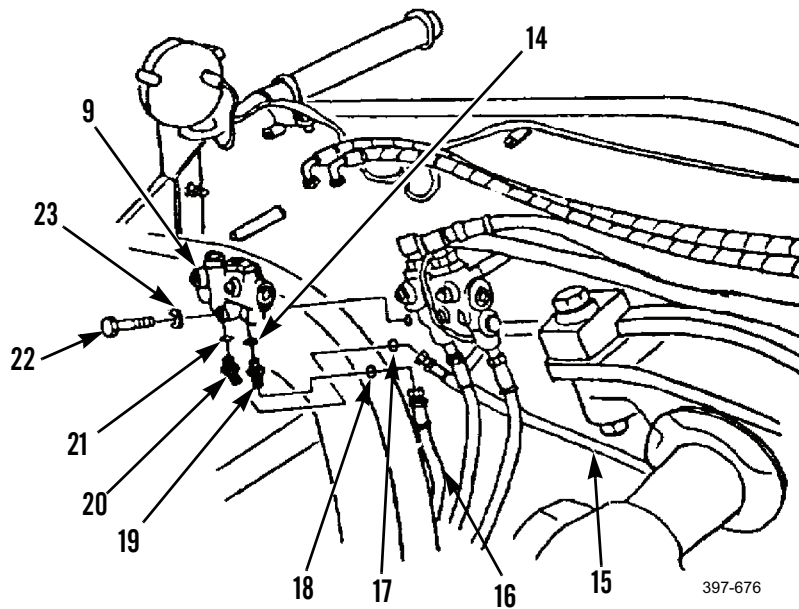5. Disconnect two hose assemblies (15 and 16) from connector (19) and elbow (20). Remove and discard preformed packings (17 and 18).
6. Remove connector (19) and preformed packing (14). Discard preformed packing.
7. Remove elbow (20) and preformed packing (21). Discard preformed packing.
8. Remove bolt (22), washer (23), and circle drive check valve (9) from machine.
9. Disassemble circle drive check valve (9). Refer to *Disassembly* in this work package.



REMOVAL - CONTINUED**NOTE**

Perform steps 10 through 17 to remove leaning wheel check valve.

10. Remove eight bolts (24), washers (25 and 26), and frame cover (27) from right side of machine.

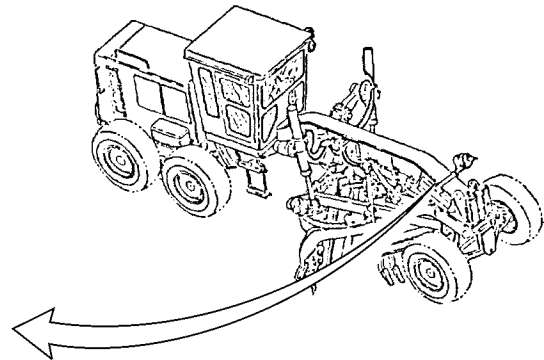
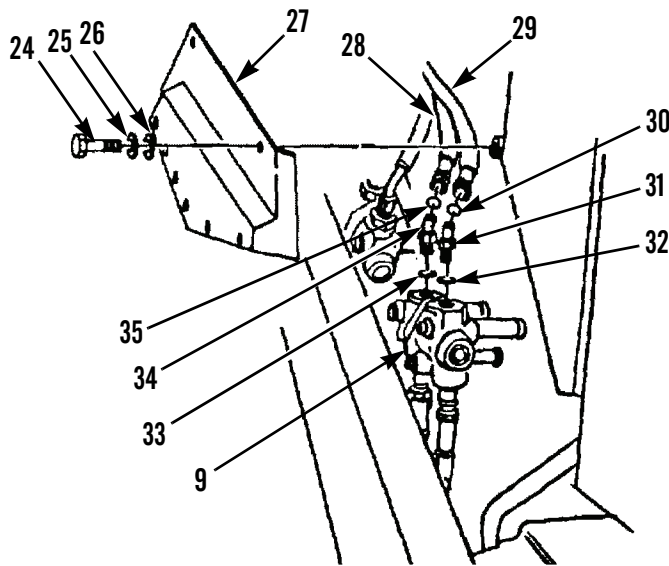
CAUTION

Cap all hose ends to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


11. Disconnect hose assemblies (28 and 29) from elbows (34 and 31). Remove and discard preformed packings (35 and 30).
12. Remove elbow (31) and preformed packing (32) from leaning wheel check valve (9).
13. Remove elbow (34) and preformed packing (33). Discard preformed packing.



397-677

REMOVAL - CONTINUED

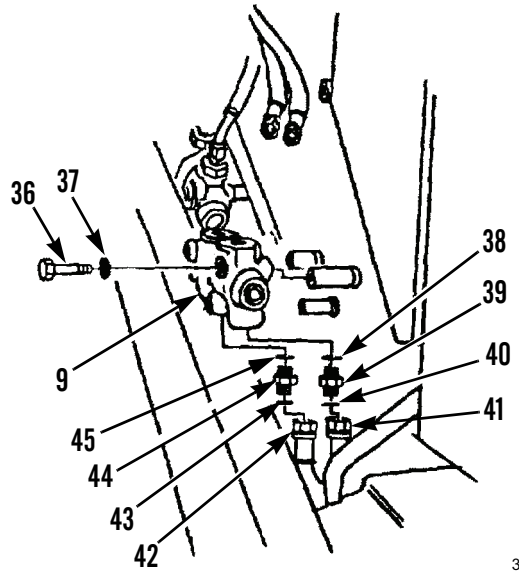14. Disconnect hose assemblies (41 and 42) from connectors (39 and 44). Remove and discard preformed packings (40 and 43).
15. Remove connector (39) and preformed packing (38). Discard preformed packing.
16. Remove connector (44) and preformed packing (45). Discard preformed packing.
17. Remove bolt (36), washer (37), and leaning wheel check valve (9) from machine.



397-678

DISASSEMBLY



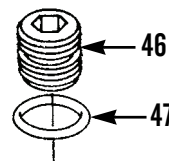
WARNING

Springs are under pressure. Loosen plugs carefully to relieve pressure of springs. Failure to follow this warning may cause injury to personnel.

NOTE


This procedure covers disassembly of the circle drive check valve. Follow these instructions for the leaning wheel check valve.

1. Remove two plugs (46) from check valve (9) assembly.
2. Remove and discard two preformed packings (47) from plugs (46).



397-1575

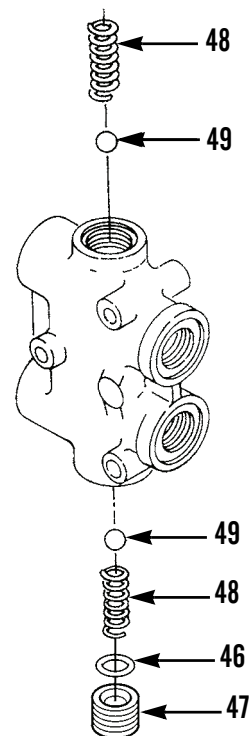
3. Remove two springs (48) and balls (49).



397-1576

DISASSEMBLY - CONTINUED

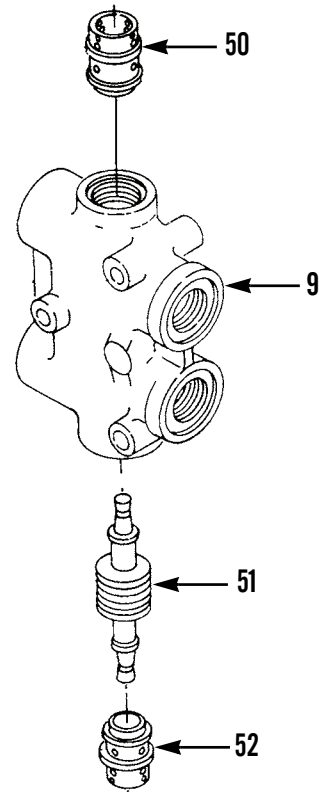4. Using brass punch and hammer, remove seat (52) and piston (51) from check valve (9).
5. Using brass punch and hammer, remove seat (50).




397-1577

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

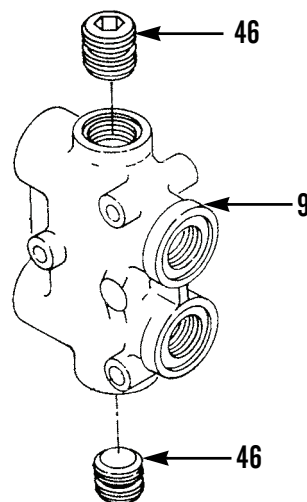1. Lower temperature of seat (50) and install using brass punch and hammer until seated against counterbore in check valve (9).
2. Position piston (51) in seat (52).
3. Lower temperature of seat (52) and install using brass punch and hammer until seated against counterbore in check valve (9).
4. Install two balls (49) and springs (48).
5. Install two preformed packings (47) on plugs (46).
6. Install two plugs (46) to check valve (9). Tighten two plugs to 25 lb-ft (34 Nm).




397-1574

INSTALLATION

NOTE

Perform steps 1 through 12 to install leaning wheel check valve.

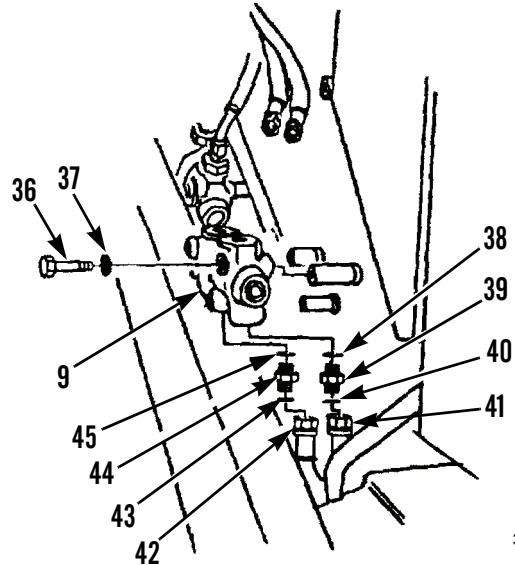1. Install leaning wheel check valve (9) to machine with washer (37) and bolt (36).
2. Install new preformed packing (45) and connector (44).
3. Install new preformed packing (38) and connector (39).
4. Install new preformed packings (43 and 40) and connect hose assemblies (42 and 41) to connectors (44 and 39).




397-678

5. Install new preformed packing (33) and elbow (34).
6. Install new preformed packing (32) and elbow (31).
7. Install new preformed packings (30 and 35) and connect two hose assemblies (29 and 28) to elbows (31 and 34).

NOTE

If circle drive check valve was removed, install per steps 13 through 24 before starting engine.

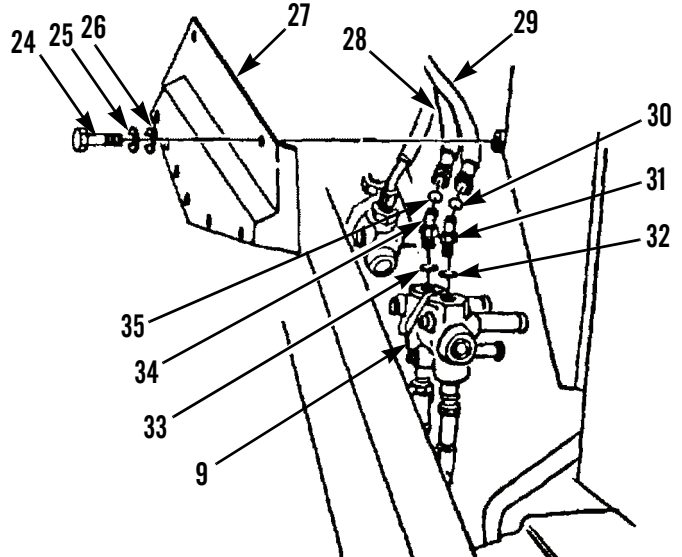8. Start engine (TM 5-3805-261-10).
9. Operate control levers and cycle system through five or more full-travel movements to bleed air from system.
10. Stop engine and check for leaks.
11. Check hydraulic oil level and fill as necessary (WP 0216 00).
12. Install frame cover (27) to machine with eight washers (26 and 25) and bolts (24).




397-677

INSTALLATION - CONTINUED**NOTE**


Perform steps 13 through 24 to install circle drive check valve.

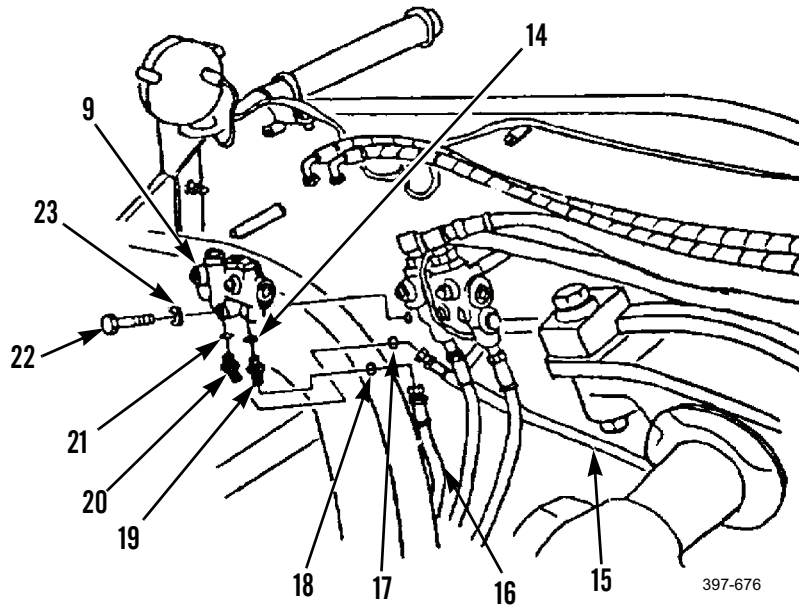13. Install circle drive check valve (9) to machine with washer (23) and bolt (22).
14. Install new preformed packing (21) and elbow (20).
15. Install new preformed packing (14) and connector (19).
16. Install new preformed packings (18 and 17) and connect hose assemblies (16 and 15) to elbow (20) and connector (19).



INSTALLATION - CONTINUED

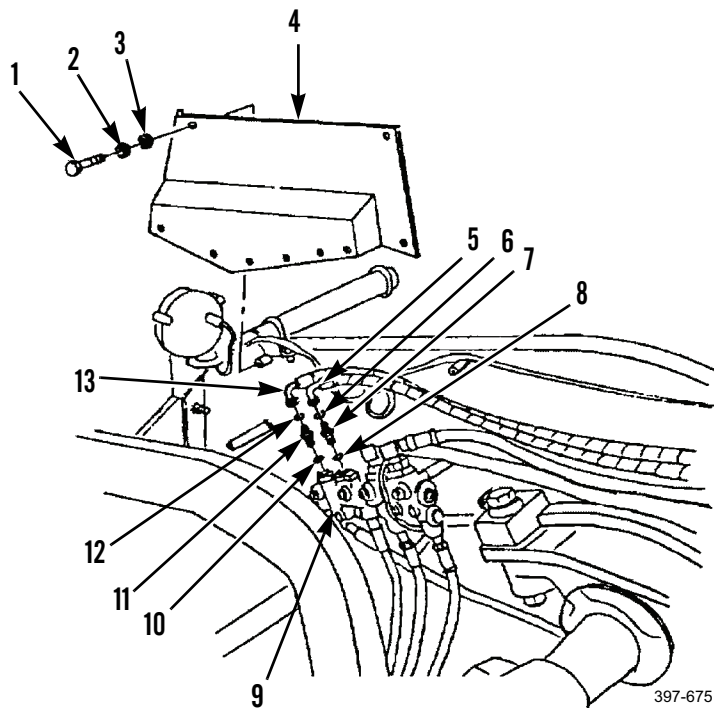17. Install new preformed packing (10) and connector (11) to circle drive check valve (9).
18. Install new preformed packing (8) and connector (7).
19. Install new preformed packings (12 and 6) and connect hose assemblies (13 and 5) to connectors (11 and 7).
20. Start engine (TM 5-3805-261-10).
21. Operate control levers and cycle system through at least five full-travel movements to bleed air from system.
22. Stop engine and check for leaks.
23. Check hydraulic oil level and fill as necessary (WP 0216 00).
24. Install frame cover (4) to machine with eight washers (3 and 2) and bolts (1).

**END OF WORK PACKAGE**

SIDESHIFT CHECK AND RELIEF VALVE REPLACEMENT

0240 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (8)

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

REMOVAL

1. Remove eight bolts (1), washers (2 and 3), and frame cover (4) from left side of machine.

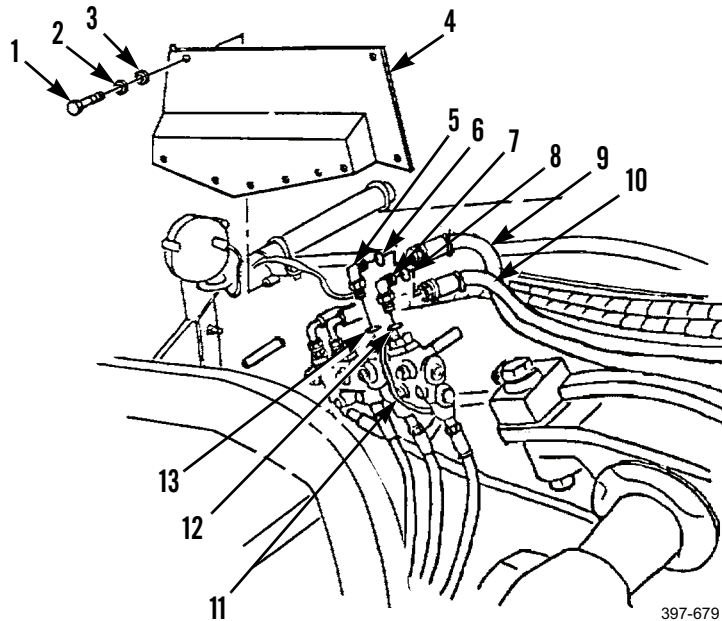
CAUTION

Cap hose ends to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

2. Disconnect two hose assemblies (9 and 10) from elbows (5 and 7). Remove and discard preformed packings (6 and 8).
3. Remove elbow (7) and preformed packing (12) from check valve (11). Discard preformed packing.
4. Remove elbow (5) and preformed packing (13). Discard preformed packing.



REMOVAL - CONTINUED

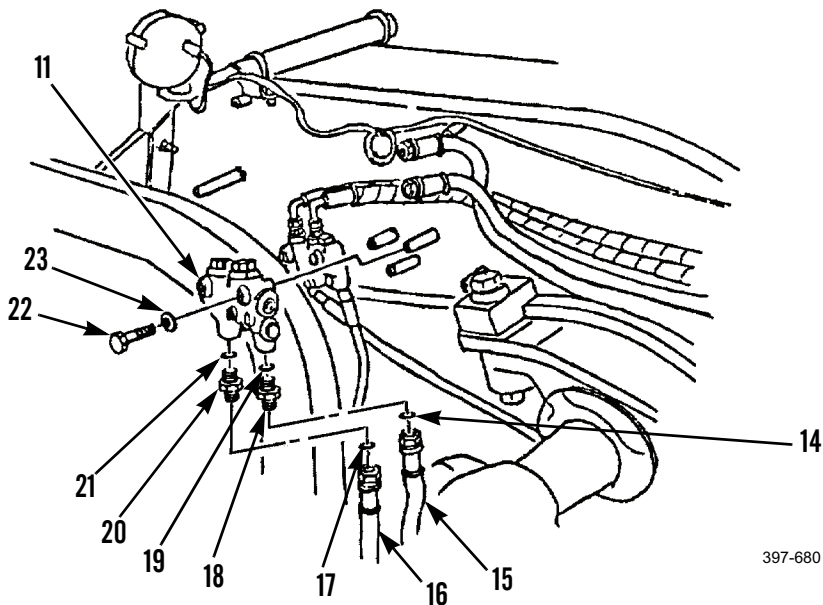5. Disconnect two hose assemblies (16 and 15) from connectors (18 and 20). Remove and discard preformed packings (14 and 17).
6. Remove connector (18) and preformed packing (19). Discard preformed packing.
7. Remove connector (20) and preformed packing (21). Discard preformed packing.
8. Remove bolt (22), washer (23), and check valve (11) from machine.

**CLEANING AND INSPECTION**

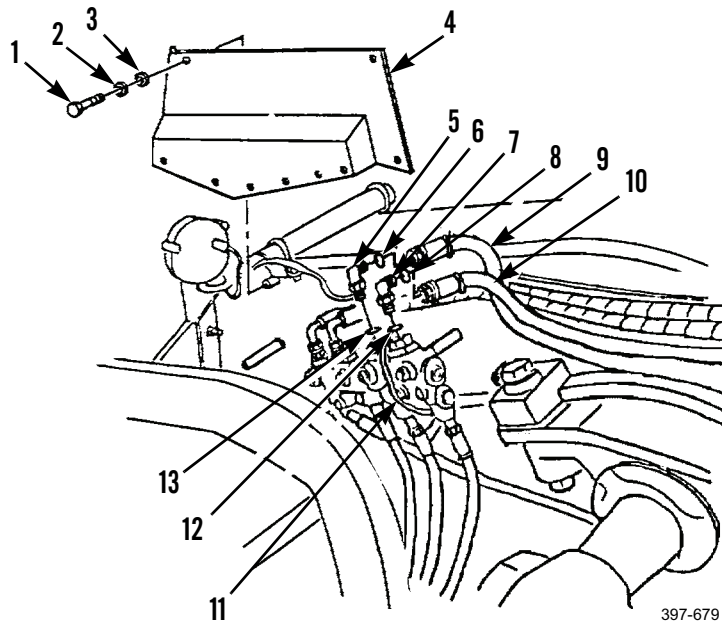
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install check valve (11) on machine with washer (23) and bolt (22).
2. Install new preformed packing (21) and connector (20).
3. Install new preformed packing (19) and connector (18).
4. Install new preformed packings (14 and 17) and connect hose assemblies (16 and 15) to connectors (18 and 20).

INSTALLATION - CONTINUED

5. Install new preformed packing (13) and elbow (5).
6. Install new preformed packing (12) and elbow (7) on check valve (11).
7. Install new preformed packings (6 and 8).
8. Connect hose assemblies (10 and 9) on elbows (7 and 5).
9. Start engine (TM 5-3805-261-10).
10. Operate levers and cycle system through at least five full-travel movements to bleed air from system.
11. Stop engine and check for leaks.
12. Check hydraulic oil level and fill as necessary (WP 0216 00).
13. Install frame cover (4) on machine with eight washers (3 and 2) and bolts (1).

**END OF WORK PACKAGE**

POWER BLADE AND BLADE TIP CHECK AND RELIEF VALVE MAINTENANCE

0241 00

THIS WORK PACKAGE COVERS

Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP

Maintenance Level

Unit

References

WP 0216 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Capset, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 27, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (14)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

REMOVAL

1. Remove nine bolts (6), washers (4 and 5), and frame cover (3) from right side of machine.

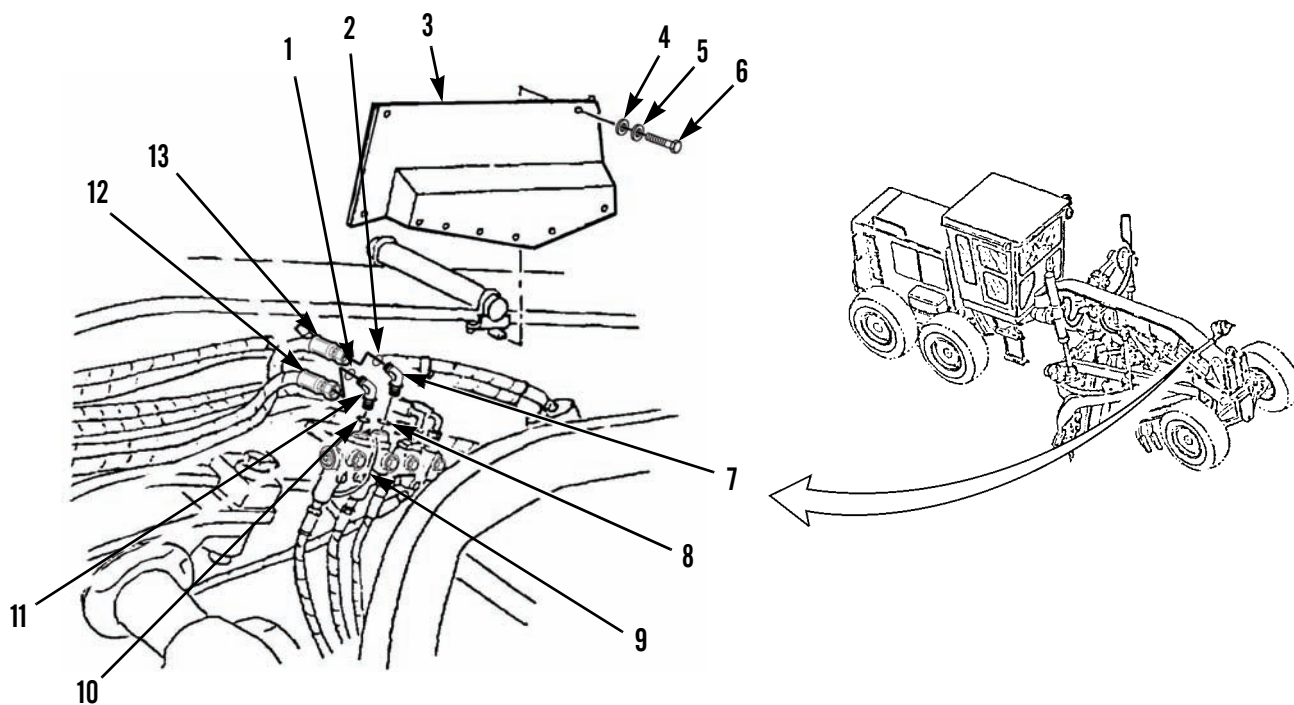
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


2. Disconnect hose assemblies (12 and 13) from elbows (11 and 7). Remove and discard preformed packings (1 and 2).
3. Remove elbow (11) and preformed packing (10) from check valve (9).
4. Remove elbow (7) and preformed packing (8). Discard preformed packing.



397-681


REMOVAL - CONTINUED

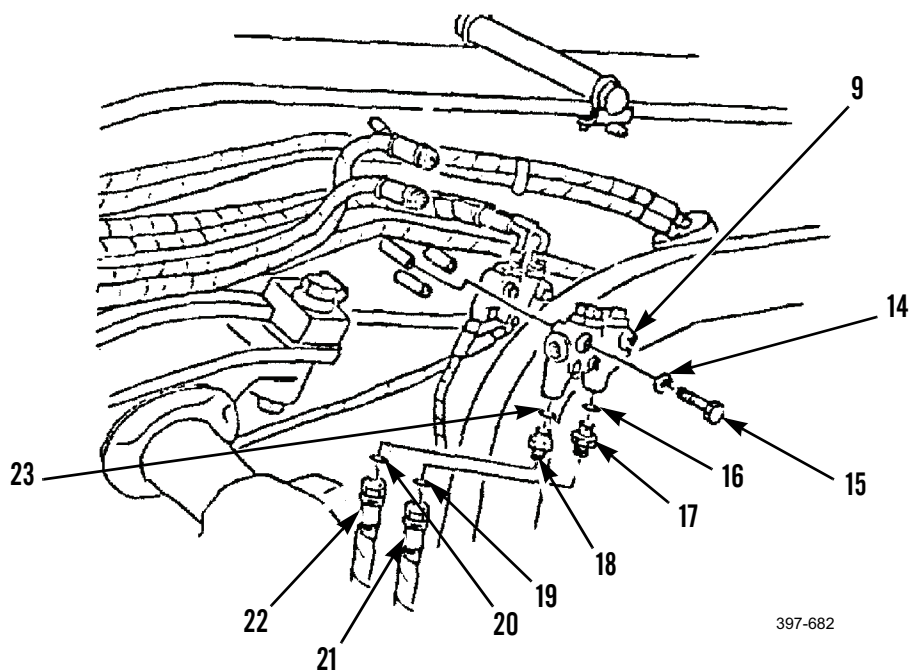5. Disconnect hose assemblies (22 and 21) from connectors (18 and 17). Remove and discard preformed packings (20 and 19).
6. Remove connector (18) and preformed packing (23). Discard preformed packing.
7. Remove connector (17) and preformed packing (16). Discard preformed packing.
8. Remove bolt (15), washer (14), and check valve (9) from machine.




DISASSEMBLY

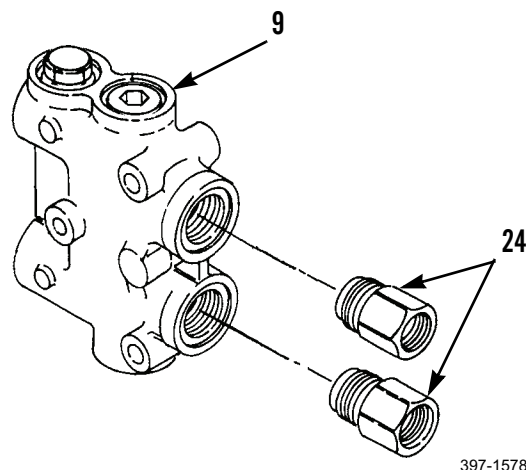1. Remove two adapters (24) from check valve (9).



DISASSEMBLY - CONTINUED

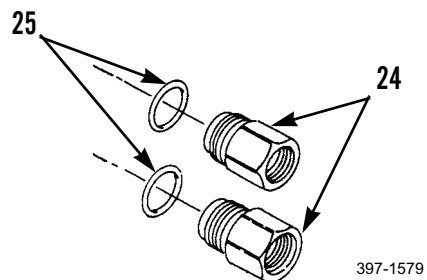
2. Remove and discard two preformed packings (25) from adapters (24).




WARNING

Springs are under pressure. Loosen plugs carefully to relieve pressure of springs. Failure to follow this warning may cause injury to personnel.

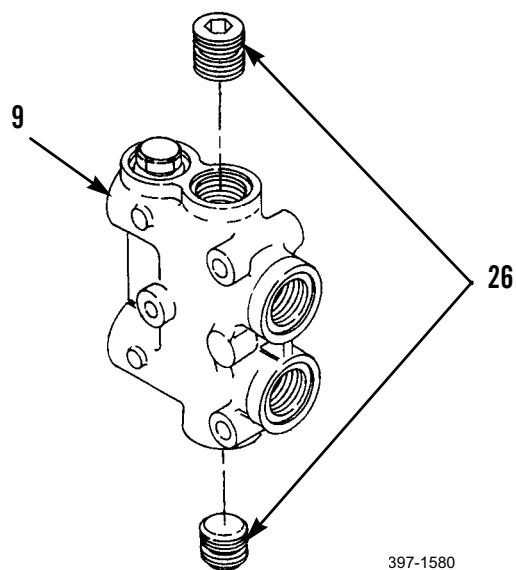3. Remove two plugs (26) from check valve (9).



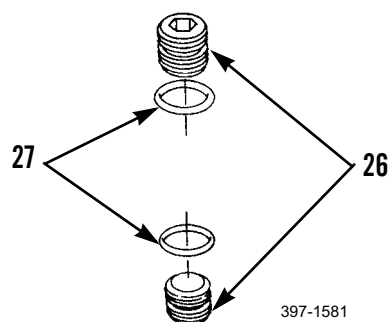4. Remove and discard two preformed packings (27) from plugs (26).



DISASSEMBLY - CONTINUED

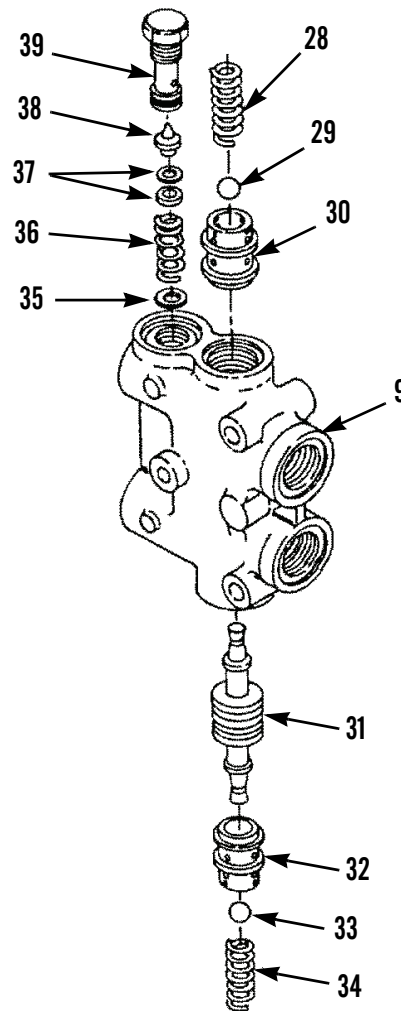
5. Remove springs (28 and 34) and balls (29 and 33) from check valve (9).
6. Use brass punch and hammer to remove seat (32) and piston (31).
7. Use brass punch and hammer to remove seat (30).



WARNING

Springs are under pressure. Loosen valve carefully to relieve pressure of spring. Failure to follow this warning may cause injury to personnel.


8. Remove valve assembly (39), valve (38), shim(s) (37), spring (36), and washer (35).



397-1582

DISASSEMBLY - CONTINUED

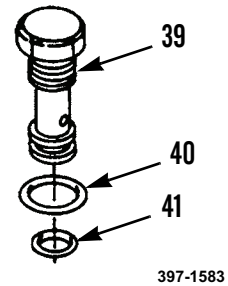9. Remove and discard preformed packings (41 and 40) from valve (39).



397-1583

CLEANING AND INSPECTION

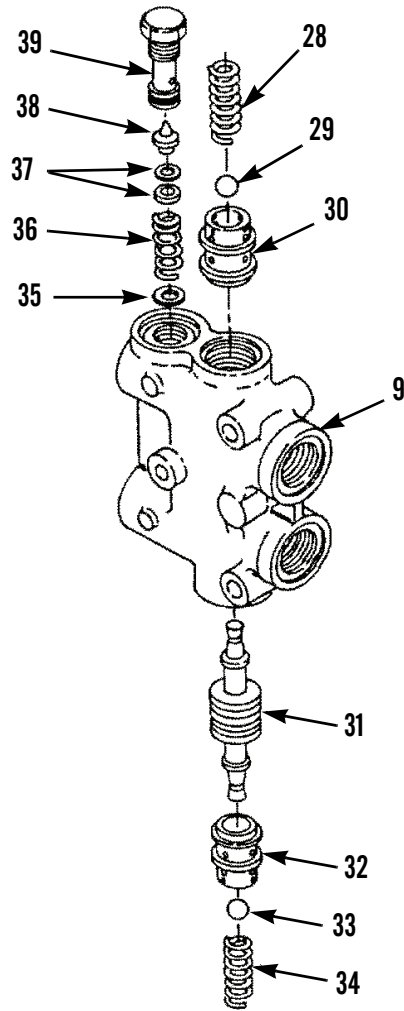
Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

1. Apply thin coat of clean oil to two new preformed packings (40 and 41) and install preformed packings to valve (39).

ASSEMBLY - CONTINUED


2. Install washer (35), spring (36), shim(s) (37), valve (38) in check valve (9).
3. Install valve (39) assembly.
4. Lower temperature of seat (30) and use brass punch and hammer to install seat in check valve (9).
5. Position piston (31) in seat (30).
6. Lower temperature of seat (32) and use brass punch and hammer to install seat in check valve (9). Move piston (31) to check for free travel.
7. Install balls (29 and 33) and springs (28 and 34).




397-1582

ASSEMBLY - CONTINUED

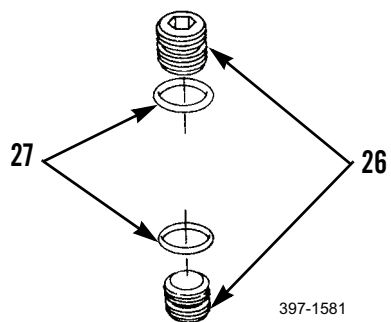
8. Install two new preformed packings (27) on plugs (26).



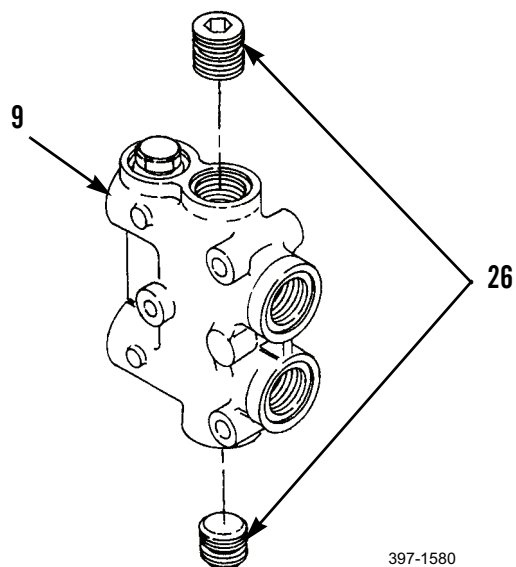9. Install two plugs (26) on check valve (9). Tighten plugs to 25 lb-ft (34 Nm).




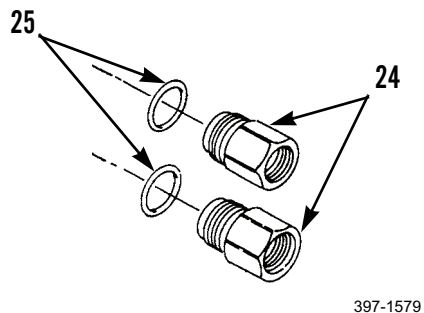10. Install two new preformed packings (25) on adapters (24).



ASSEMBLY - CONTINUED

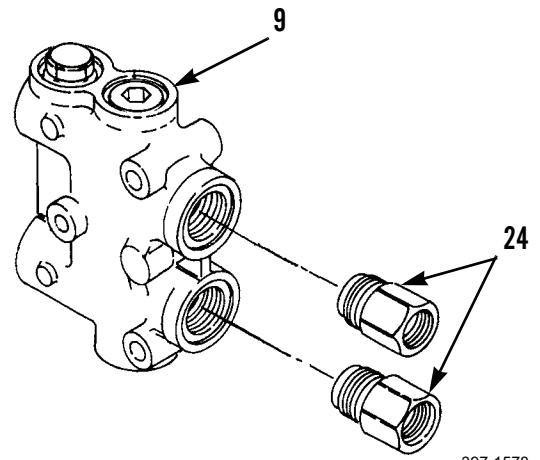
11. Install two adapters (24) to check valve (9). Tighten two adapters to 55 lb-ft (75 Nm).



397-1578

INSTALLATION

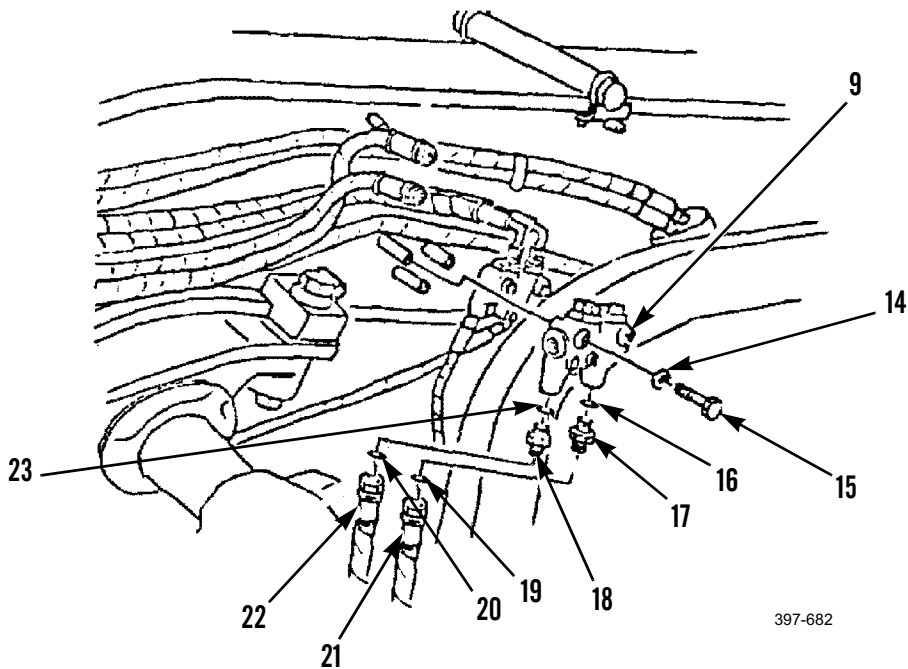
1. Install check valve assembly (9) on machine with washer (14) and bolt (15).
2. Install new preformed packing (16) and connector (17).
3. Install new preformed packing (23) and connector (18).
4. Install new preformed packings (19 and 20) and connect hose assemblies (21 and 22) to connectors (17 and 18).



397-682

INSTALLATION - CONTINUED

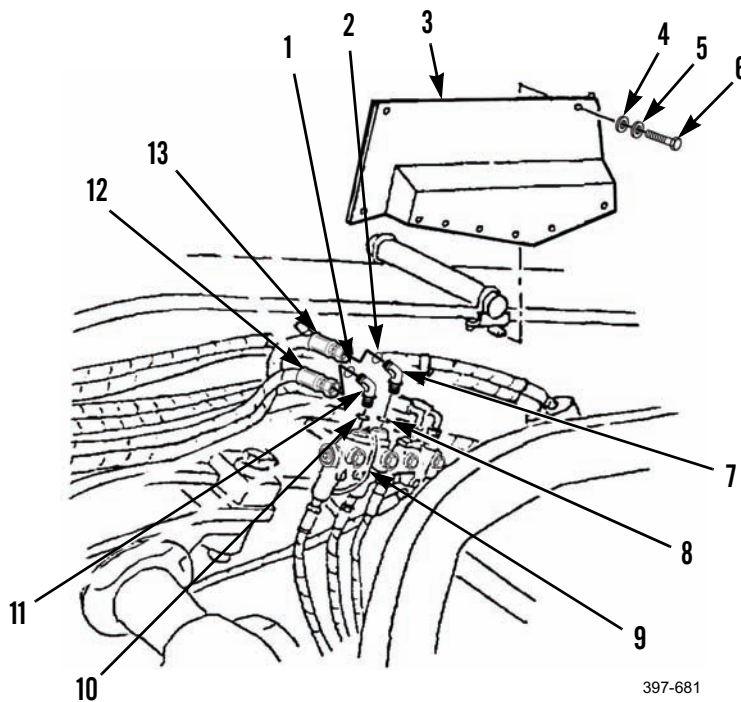5. Install new preformed packing (8) and elbow (7) to check valve (9).
6. Install new preformed packing (10) and elbow (11).
7. Install new preformed packings (1 and 2) and connect two hose assemblies (12 and 13) to elbows (11 and 7).
8. Start engine (TM 5-3805-261-10).
9. Operate control levers and cycle system through five or more full-travel movements to bleed air from system.
10. Stop engine and check for leaks.
11. Check hydraulic oil level and fill as necessary (WP 0216 00).
12. Install frame cover (3) on machine with eight washers (4 and 5) and bolts (6).



397-681

END OF WORK PACKAGE

SCARIFIER CHECK AND RELIEF VALVE MAINTENANCE

0242 00**THIS WORK PACKAGE COVERS**Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0216 00

Tools and Special Tools

Tool kit, general mechanic's, (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Wrench, torque (Item 97, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 27, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (12)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

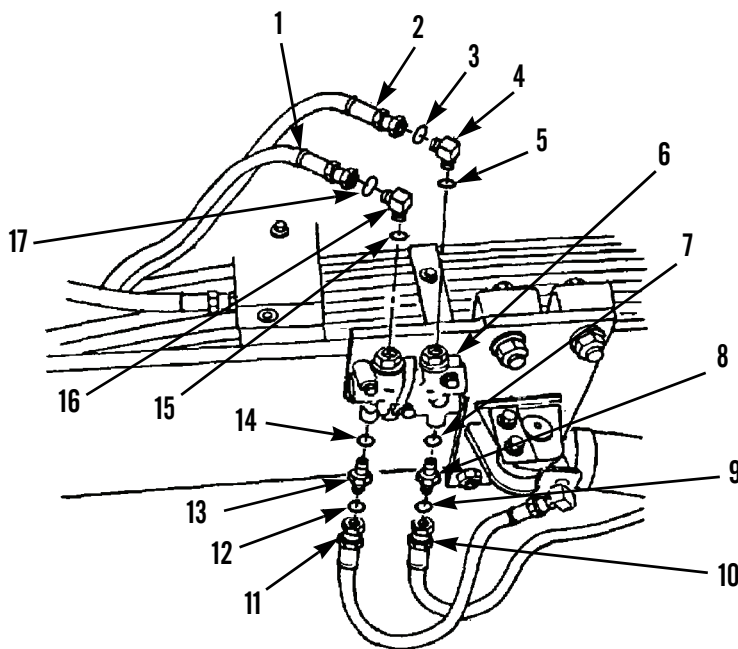
REMOVAL**CAUTION**

Cap hose ends to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


1. Disconnect hose assemblies (1 and 2) from elbows (16 and 4). Remove and discard preformed packings (17 and 3).
2. Remove elbow (16) and preformed packing (15) from check valve (6) assembly. Discard preformed packing.
3. Remove elbow (4) and preformed packing (5). Discard preformed packing.
4. Disconnect hose assemblies (10 and 11) from connectors (8 and 13). Remove and discard preformed packings (9 and 12).
5. Remove connector (13) and preformed packing (14). Discard preformed packing.
6. Remove connector (8) and preformed packing (7). Discard preformed packing.



397-683

REMOVAL - CONTINUED

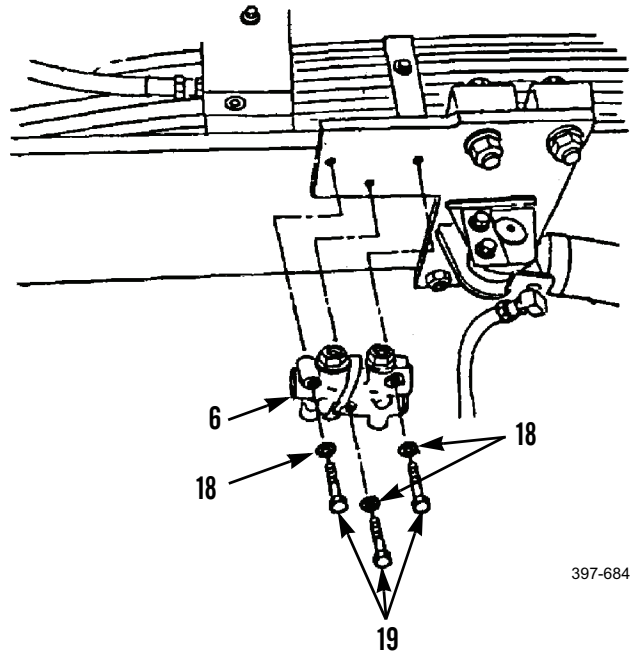
- Remove three bolts (19), washers (18), and check valve (6) assembly from machine.



397-684

DISASSEMBLY

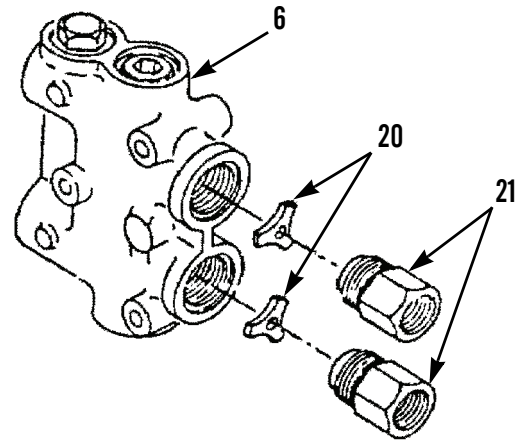
- Remove two adapters (21) and chokes (20) from check valve (6).



397-1584

DISASSEMBLY - CONTINUED

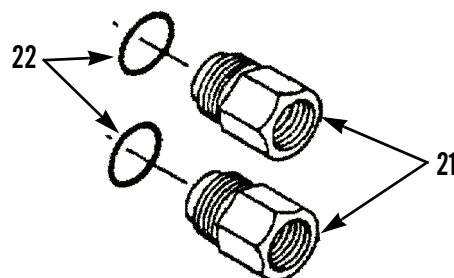
2. Remove and discard two preformed packings (22) from adapters (21).



397-1585


Springs are under pressure. Loosen plugs carefully to relieve pressure of springs. Failure to follow this warning may cause injury to personnel.

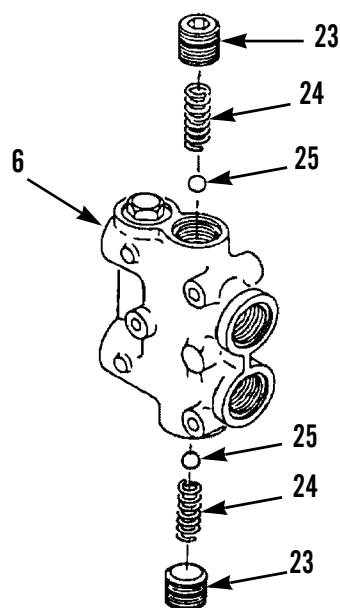3. Remove two plugs (23) from check valve (6).
4. Remove two springs (24) and balls (25).



397-1586

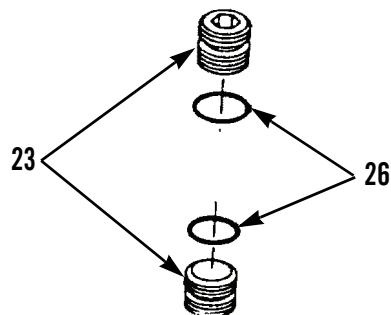5. Remove and discard two preformed packings (26) from plugs (23).



397-1587

DISASSEMBLY - CONTINUED

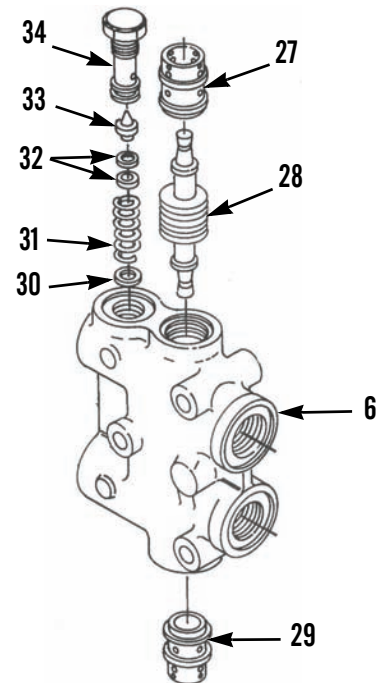
6. Using brass punch and hammer, remove seat (27) and piston (28) from check valve (6).
7. Using brass punch and hammer, remove seat (29).



WARNING


Springs are under pressure. Loosen plugs carefully to relieve pressure of springs. Failure to follow this warning may cause injury to personnel.

8. Remove valve (34) assembly.
9. Remove valve (33), shim(s) (32), spring (31), and washers (30).



397-1588

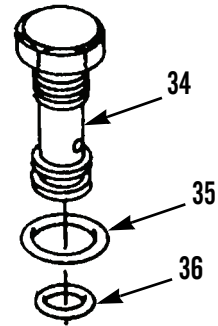10. Remove and discard preformed packings (36 and 35) from valve (34).




397-1589

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


ASSEMBLY

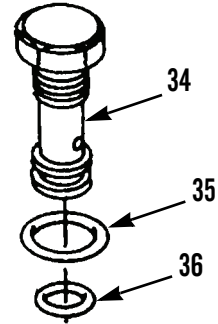1. Apply thin coat of clean oil to new preformed packings (35 and 36) and install preformed packings on valve (34).



397-1589

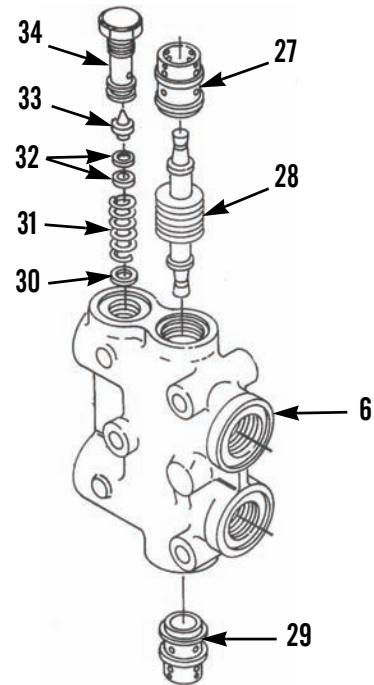
2. Install washers (30), spring (31), shim(s) (32), and valve (33) in check valve (6).
3. Install valve (34) assembly.
4. Lower temperature of seat (29) and use brass punch and hammer to install seat in check valve (6).
5. Position piston (28) in seat (29).
6. Lower temperature of seat (27) and use brass punch and hammer to install seat in check valve (6). Move piston (28) to check for free travel.



397-1588


ASSEMBLY - CONTINUED

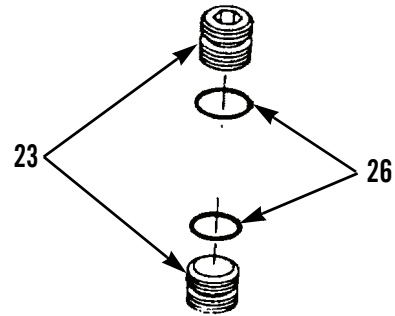7. Install two new preformed packings (26) on plugs (23).



397-1587

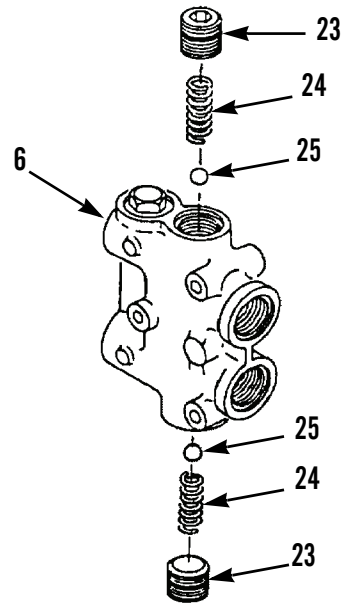
8. Install two balls (25) and springs (24) in check valve (6).
9. Install two plugs (23) on check valve (6). Tighten plugs to 25 lb-ft (34 Nm).



397-1586


ASSEMBLY - CONTINUED

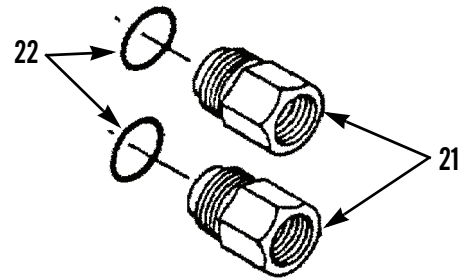10. Install two new preformed packings (22) on adapters (21).



397-1585

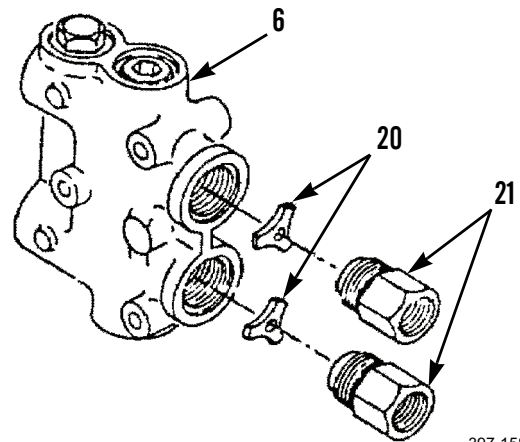11. Install two chokes (20) and adapters (21) on check valve (6). Tighten adapters to 55 lb-ft (75 Nm).




397-1584

INSTALLATION**NOTE**

Ensure that side of valve with two plugged ports is facing front of machine and side with one plugged port is facing rear of machine.

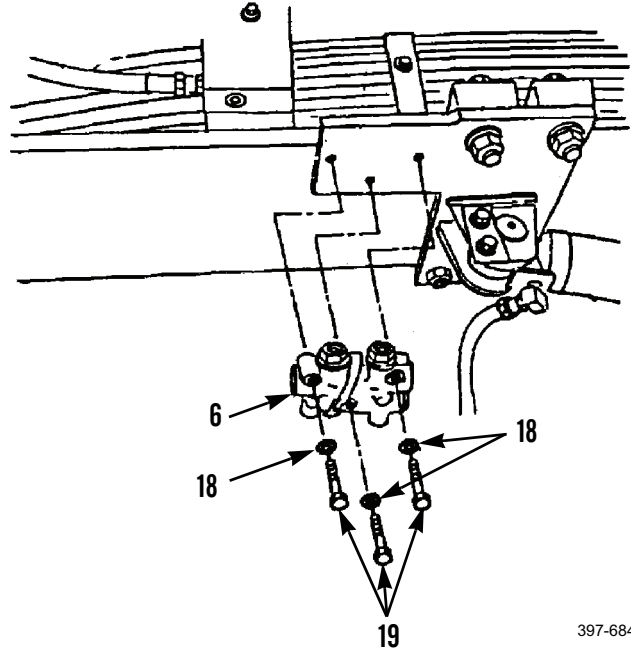
1. Install check valve (6) assembly on machine with three washers (18) and bolts (19).



397-684

INSTALLATION - CONTINUED

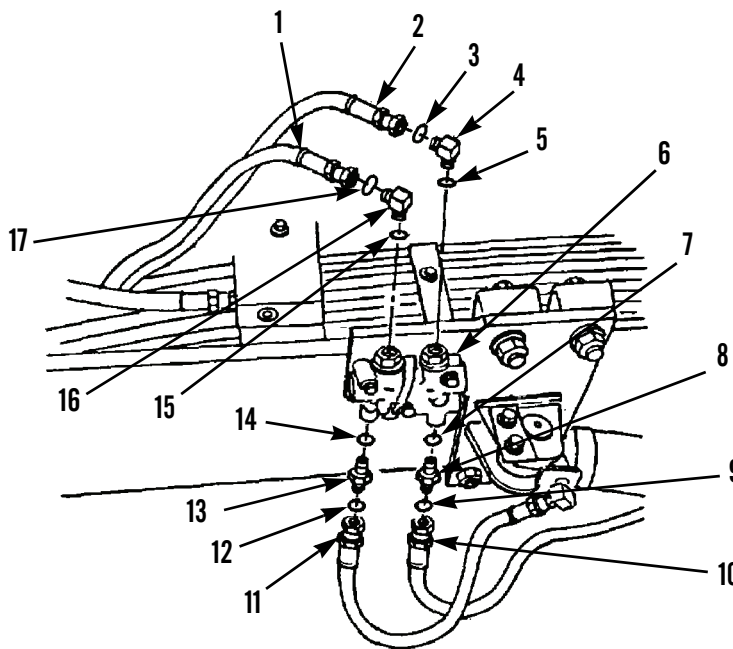2. Install new preformed packing (7) and connector (8) on check valve (6) assembly.
3. Install new preformed packing (14) and connector (13).
4. Install new preformed packings (9 and 12) and connect hose assemblies (10 and 11) to connectors (8 and 13).
5. Install new preformed packing (5) and elbow (4).
6. Install new preformed packing (15) and elbow (16).
7. Install new preformed packings (3 and 17) and connect hose assemblies (2 and 1) to elbows (4 and 16).



397-683

8. Start engine (TM 5-3805-261-10).
9. Operate control levers and cycle system through five or more full-travel movements to bleed air from system.
10. Stop engine and check for leaks.
11. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

CENTERSHIFT CYLINDER REPLACEMENT

0243 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Sling (Item 78, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (4)

Packing, preformed (4)

Personnel Required

Two

References

WP 0216 00

WP 0245 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

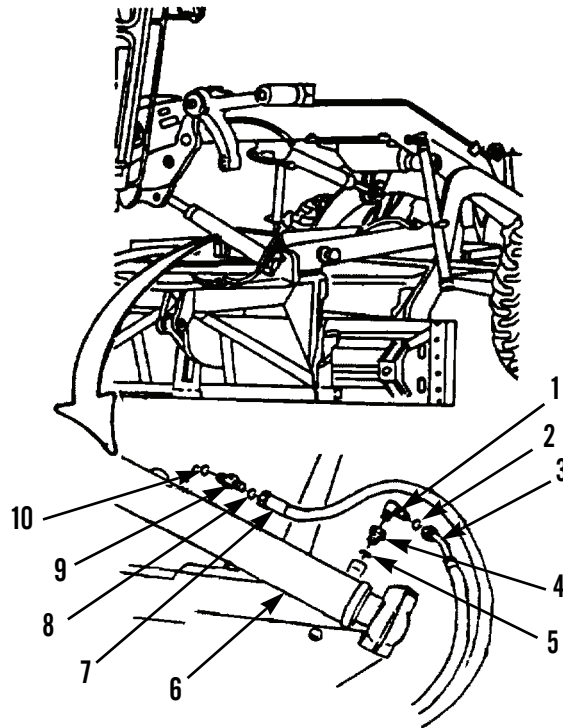
REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assembly (7) from connector (9). Remove and discard preformed packing (8).
2. Remove connector (9) and preformed packing (10). Discard preformed packing.
3. Disconnect hose assembly (3) from elbow (1). Remove and discard preformed packing (2).
4. Remove elbow (1), connector (4), and preformed packing (5). Discard preformed packing.



397-1590

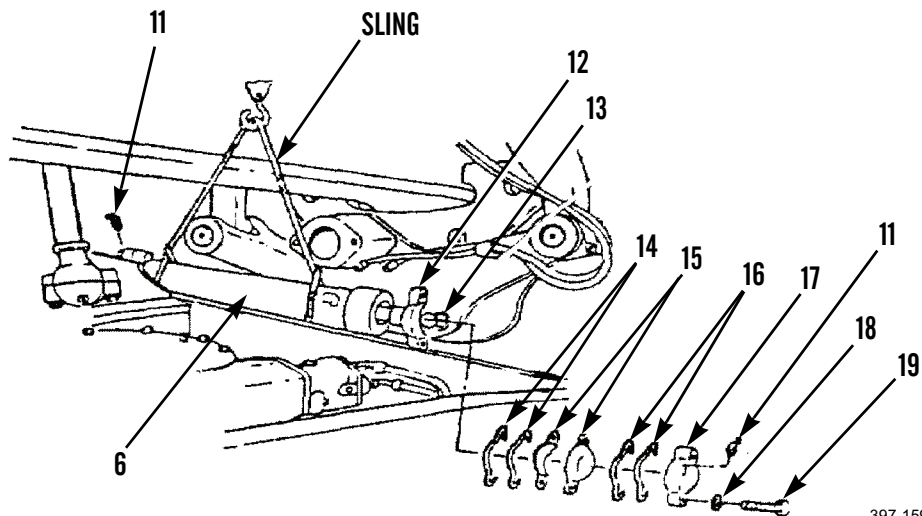
REMOVAL - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE


Centershift cylinder weighs 80 lb (36 kg).

5. With assistance, attach sling to cylinder (6) assembly. Remove slack from sling.
6. Remove two lube fittings (11), bolts (19), lockwashers (18), and cap (17) from rod (12). Discard lockwashers.
7. Separate rod (12) from ballstud (13) of machine.
8. Remove spacer plate(s) (16), two inserts (15), and spacer plate(s) (14).



CENTERSHIFT CYLINDER REPLACEMENT - CONTINUED**0243 00****REMOVAL - CONTINUED**

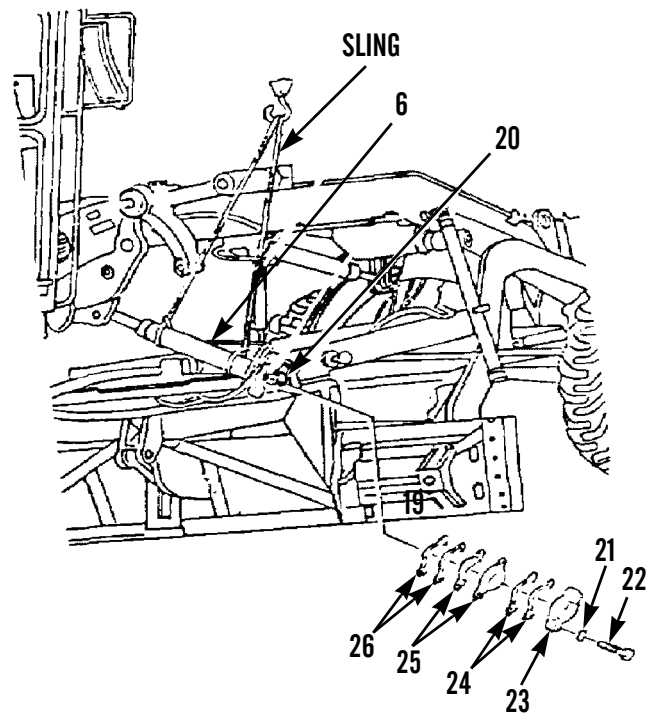9. Remove two bolts (22), lockwashers (21), and cap (23). Discard lockwashers.
10. Separate centershift cylinder (6) assembly from ball-stud (20) of machine and place cylinder in work area.
11. Remove spacer plate(s) (24), two inserts (25), and spacer plate(s) (26).
12. Remove sling from centershift cylinder (6) assembly.



397-1592

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

1. Attach sling to centershift cylinder (6) assembly.
2. Apply thin coat of grease to ballstud (20) and two inserts (25) of machine.


NOTE

Install enough spacer plate(s) to prevent excessive clearance around ballstuds. Be sure there is an equal number of spacer plate(s) on each side of ballstud. Inserts must fit snugly on ballstuds.

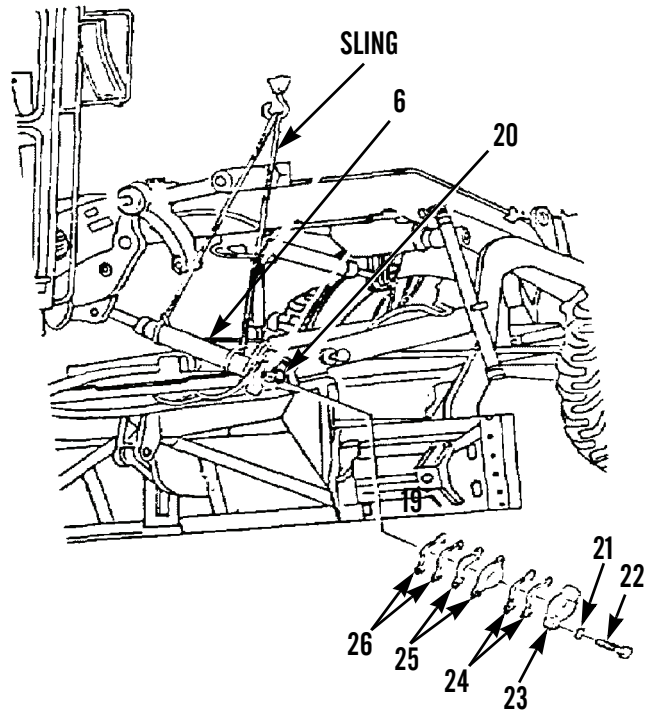3. Install spacer plate(s) (26) and one of two inserts (25) on centershift cylinder (6) assembly.
4. Position cylinder (6) on ballstud (20).
5. Install one of two inserts (25), spacer plate(s) (24), cap (23), two new lockwashers (21), and bolts (22). Adjust for free play between ballstud (20) and inserts (25) (WP 0245 00).




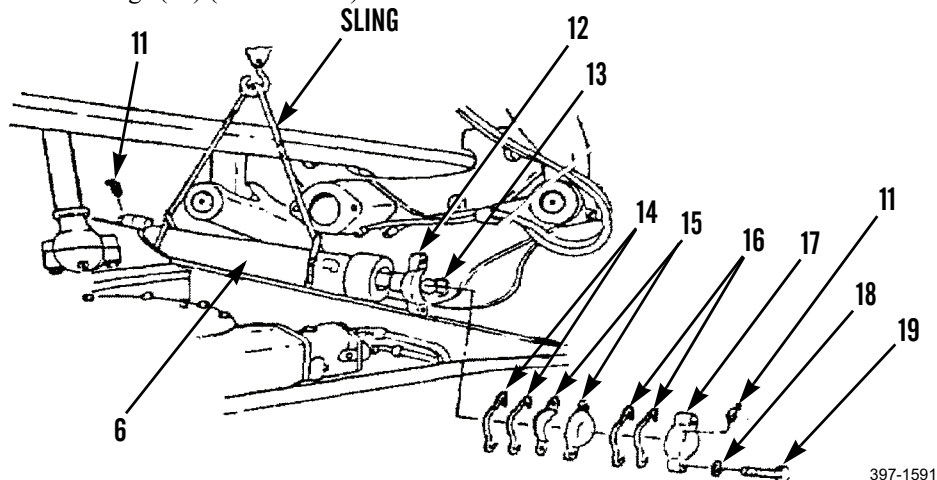6. Apply thin coat of grease to ballstud (13) and two inserts (15).
7. Install spacer plate(s) (14) and one of two inserts (15) on cylinder (6) assembly.
8. Position rod (12) on ballstud (13) of machine.
9. Install other inserts (15), spacer plate(s) (16), cap (17), two new lockwashers (18), and bolts (19). Adjust for free play between ballstud (13) and inserts (15) (WP 0245 00).
10. Remove sling.
11. Install two lube fittings (11).
12. Lubricate two lube fittings (11) (WP 0020 00).



CENTERSHIFT CYLINDER REPLACEMENT - CONTINUED**0243 00****INSTALLATION - CONTINUED**

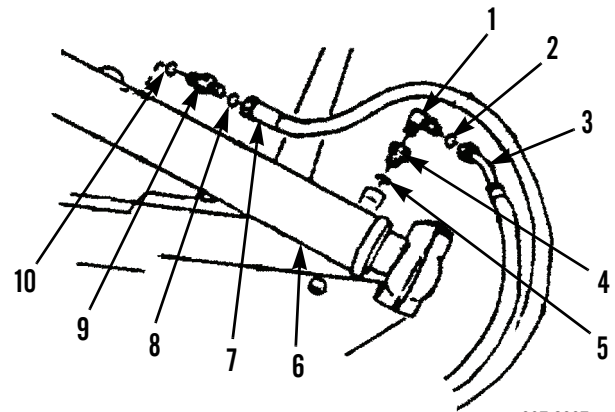13. Install new preformed packing (5) and connector (4) on centershift cylinder (6) assembly.
14. Install elbow (1) on connector (4).
15. Install new preformed packing (2) and elbow (1).
16. Install new preformed packing (10) and connector (9).
17. Install new preformed packing (8) and connect hose assembly (7) to connector (9).



18. Start engine (TM 5-2805-261-10).
19. Operate control levers and cycle system through at least five full-travel movements to bleed air from system.
20. Stop engine and check for leaks.
21. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

BLADE TIP CYLINDER REPLACEMENT

0244 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's, (Item 89, WP 0348 00)

Sling (Item 78, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (3)

Pin, cotter

Personnel Required

Two

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Blade tipped fully forward (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assembly (7) from connector (9). Remove and discard preformed packing (8).
2. Remove connector (9) and preformed packing (10). Discard preformed packing.
3. Disconnect hose assembly (6) from elbow (1).
4. Remove elbow (1) and preformed packing (2) from blade tip cylinder (3) assembly. Discard preformed packing.

**WARNING**

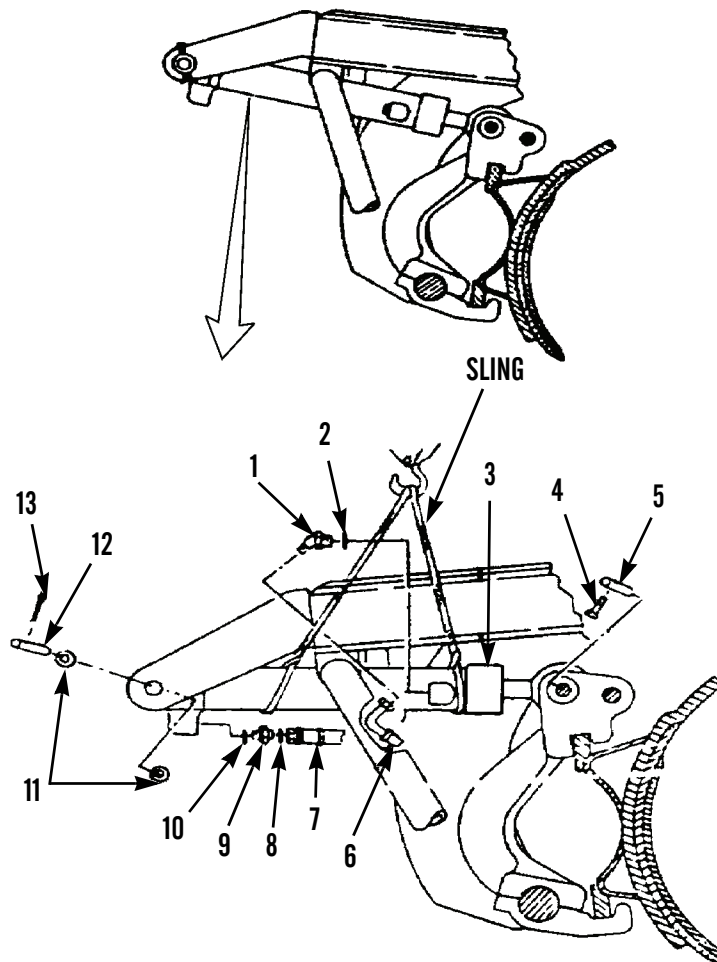
Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Blade tip cylinder weighs 50 lb (23 kg).

REMOVAL - CONTINUED

5. With assistance, attach sling to blade tip cylinder (3) assembly. Remove slack from sling.
6. Remove and discard cotter pin (13).
7. Remove pin (12) and two spacers (11) to disconnect one end of blade tip cylinder (3) assembly from machine.
8. Remove bolt (4) from pin (5).
9. Remove pin (5) to disconnect other end of blade tip cylinder (3).
10. Place blade tip cylinder (3) in work area.
11. Remove sling.



397-1596


INSTALLATION

1. Attach sling to blade tip cylinder (3) assembly.
2. Use sling to position blade tip cylinder (3) assembly to machine.
3. Install pin (5) to connect one end of cylinder (3) to machine.
4. Install bolt (4) through pin (5).
5. Position other end of cylinder (3) to machine and position two spacers (11) in alignment with hole through cylinder.

CAUTION

Use care not to damage seals of cylinder.

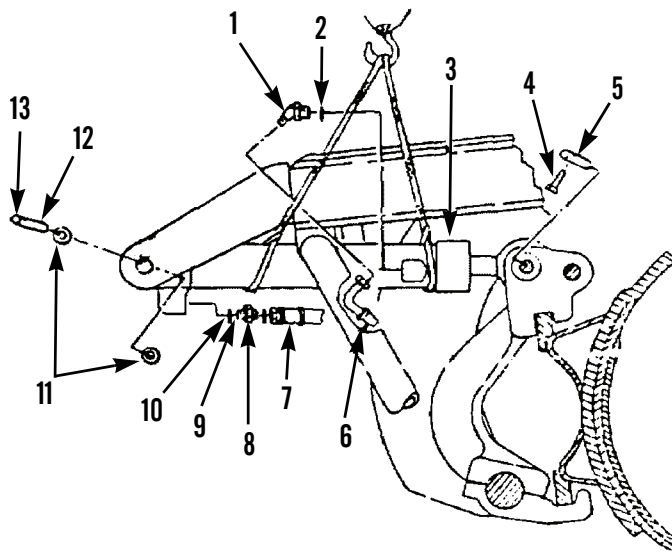6. Carefully push pin (12) through machine, spacers (11), and cylinder (3).
7. Install new cotter pin (13) in pin (12).
8. Remove sling.
9. Install new preformed packing (2) and elbow (1) to cylinder (3).
10. Connect hose assembly (6) to elbow (1).
11. Install new preformed packing (10) and connector (9) to cylinder (3).
12. Install new preformed packing (9) and connect hose assembly (7) to connector (8).



397-1599

13. Start engine (TM 5-3805-261-10).
14. Operate control levers and cycle system through at least five full-travel movements to bleed air from system.
15. Stop engine and check for leaks.
16. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

BLADE LIFT CYLINDER REPLACEMENT

0245 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Sling (Item 78, WP 0348 00)

References

WP 0023 00

WP 0216 00

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Grease, GAA (Item 17, WP 0349 00)

Lubricant, thread (Item 22, WP 0349 00)

Oil, lubricating (Item 27, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (2)

Packing, preformed (4)

Retainer, packing

Seal (2)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

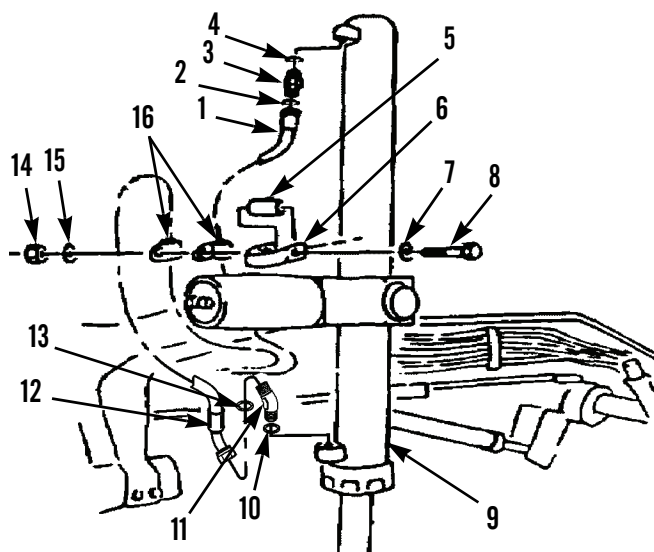
REMOVAL**CAUTION**

Cap hose ends to prevent contamination.

NOTE

- Tag hose assemblies before disconnecting to aid in installation.
- This procedure covers the left blade lift cylinder. Follow these instructions for the right blade lift cylinder.


1. Disconnect hose assembly (1) from connector (3). Remove and discard preformed packing (2).
2. Remove connector (3) and preformed packing (4) from cylinder (9). Discard preformed packing.
3. Disconnect hose assembly (12) from elbow (11). Remove and discard preformed packing (13).
4. Remove elbow (11) and preformed packing (10). Discard preformed packing.
5. Remove nut (14), washer (15), spacer tube (5), clamp (6), washer (7), and bolt (8).
6. Separate two clips (16) with hose assemblies (1 and 12) from blade lift cylinder (9) assembly.



397-1600

REMOVAL - CONTINUED

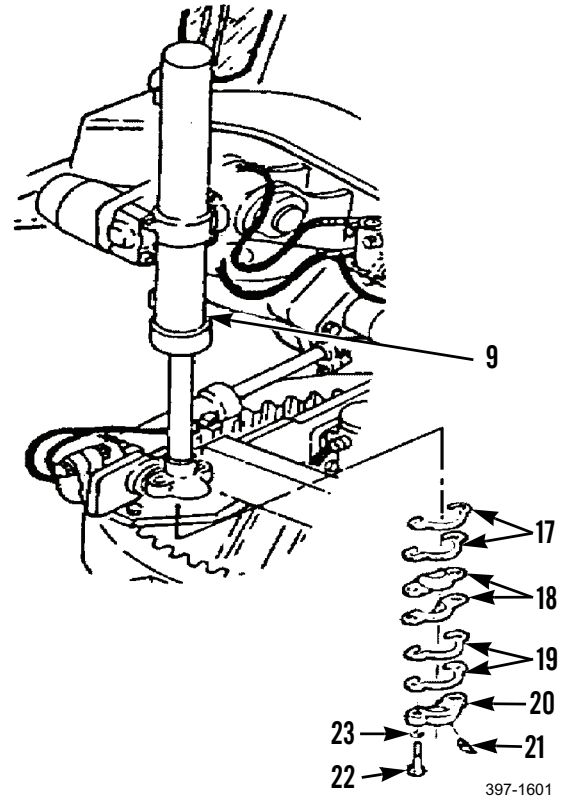7. Remove lube fitting (21).
8. Remove two bolts (22) and lockwashers (23). Discard lockwashers.
9. Remove cap (20), two spacer plates (19), inserts (18), and spacer plates (17).




REMOVAL - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Blade lift cylinder weighs 175 lb (79 kg).

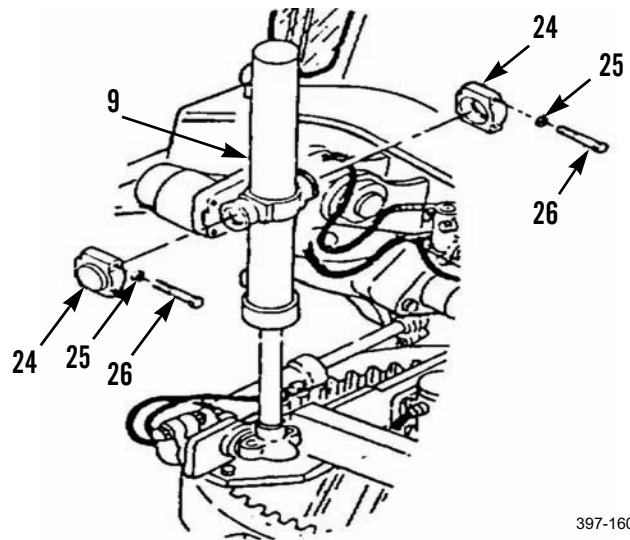10. With assistance, attach sling to cylinder (9). Remove slack from sling.
11. Remove two bolts (26), washers (25), and end cap (24) from each side of blade lift cylinder (9) assembly.
12. Remove blade lift cylinder (9) assembly from machine and place in work area. Remove sling.




397-1602

NOTE

Each of these two sleeve bearings may have already been removed with caps.

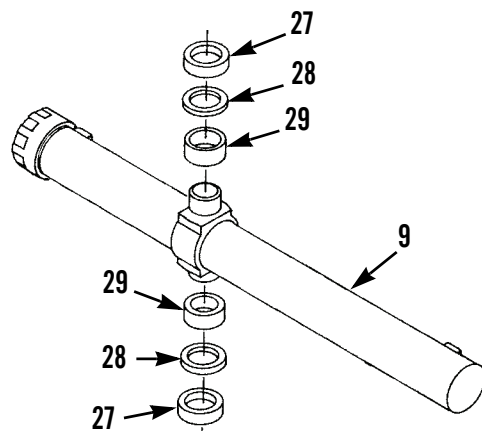13. Use a puller to remove two sleeve bearings (27) and seals (28). Discard seals.
14. Use a puller to remove two sleeve bearings (29), if necessary, from cylinder (9).



397-1603

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

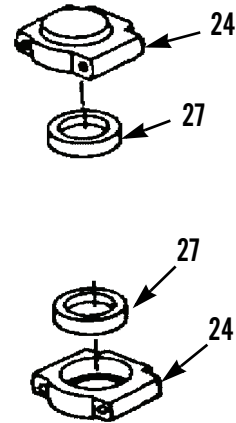
INSTALLATION

1. Install two new sleeve bearings (29) on cylinder (9), if removed.
2. Apply coat of grease to sleeve bearings (29).
3. Install two new seals (28) on cylinder (9) with lip on seals facing outward.

CAUTION


Do not use impact-type drive to install two sleeve bearings.

4. Install two sleeve bearings (27) into two caps (24).



397-1604

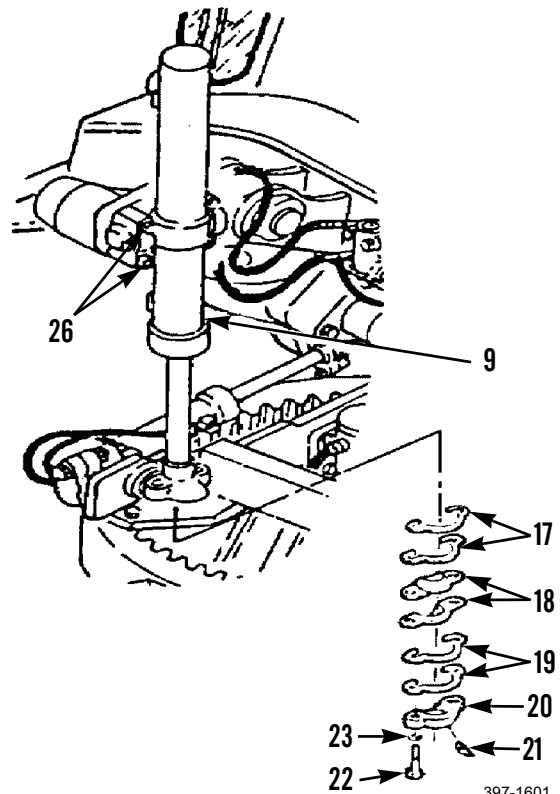5. Attach sling to cylinder (9). Tighten slack from sling.
6. Position cylinder (9) to machine.
7. Install cap (24), two washers (25), and two bolts (26) to each side of cylinder (9) assembly. Leave bolts loose.
8. Apply coat of grease to ballstud of machine and two inserts (18).
9. Install two spacer plates (17) and one of two inserts (18) on lower end of cylinder (9).
10. Install other insert (18), two spacer plates (19), and cap (20) with two new lockwashers (23) and bolts (22).




397-1601

NOTE


If removing two spacer plates, remove one spacer plate from each side of ballstud. Inserts should have a snug fit on ballstud.

11. Move rod of cylinder (9) to check for free play between ballstud and inserts (18) without allowing cap (24) to touch socket (25). Add or remove spacer plates (17 or 19) as necessary.

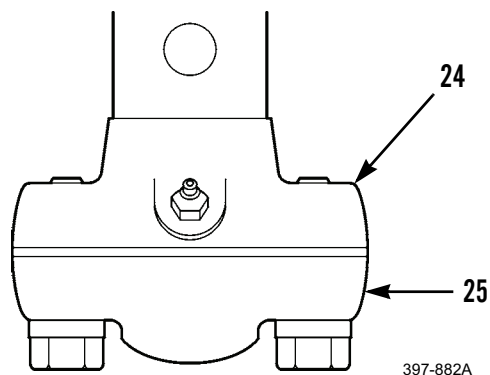INSTALLATION - CONTINUED




**CORRECT CLEARANCE
(TYPICAL)**

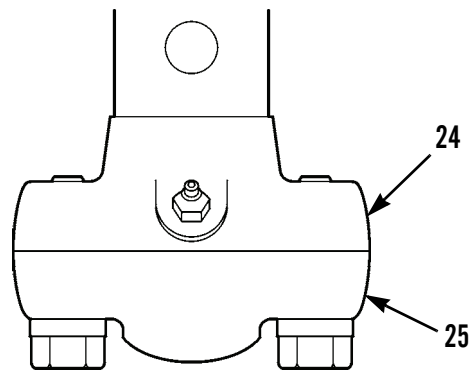


**INCORRECT CLEARANCE
TOO TIGHT
(CAP TOUCHING SOCKET)**

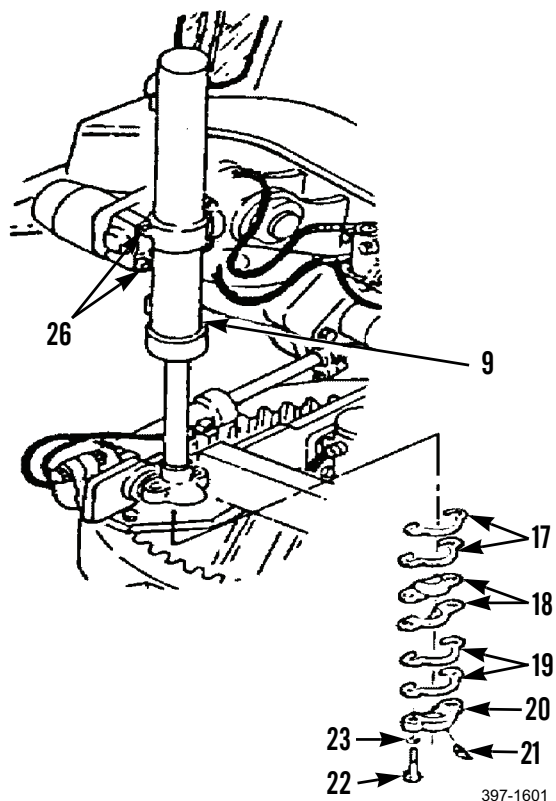12. Fully tighten four bolts (26) to 95 lb-ft (129 Nm).
13. Remove sling.
14. Install lube fitting (21) and lubricate with grease (WP 0023 00).



BLADE LIFT CYLINDER REPLACEMENT - CONTINUED**0245 00****INSTALLATION - CONTINUED**

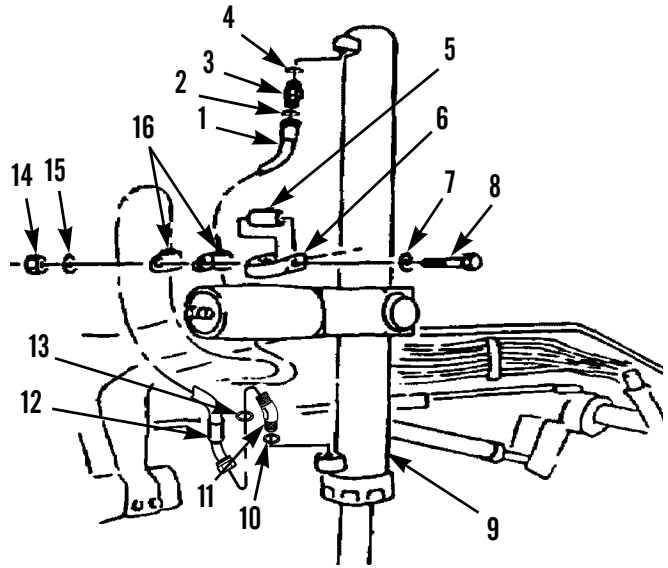15. Install bolt (8), washer (7), clamp (6), two clips (16), spacer tube (5), washer (15), and nut (14) to blade lift cylinder (9).
16. Install new preformed packing (10) and install elbow (11) to lower end of blade lift cylinder (9).
17. Install new preformed packing (13) and connect hose assembly (12) to elbow (11).
18. Install new preformed packing (4) and install connector (3) to upper end of blade lift cylinder (9).
19. Install new preformed packing (2) and connect hose assembly (1) to connector (3).



397-1600

20. Start engine (TM 5-3805-261-10).
21. Operate control levers and cycle system through at least five full-travel movements to bleed air from system.
22. Stop engine and check for leaks.
23. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

ARTICULATION CYLINDER REPLACEMENT

0246 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Sling (Item 78, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (4)

Packing, preformed (4)

Ring

Seal (7)

Personnel Required

Two

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

Left or right engine side panel removed (WP 0182 00)

Pivot locking pin installed (TM 5-3805-261-10)

REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE

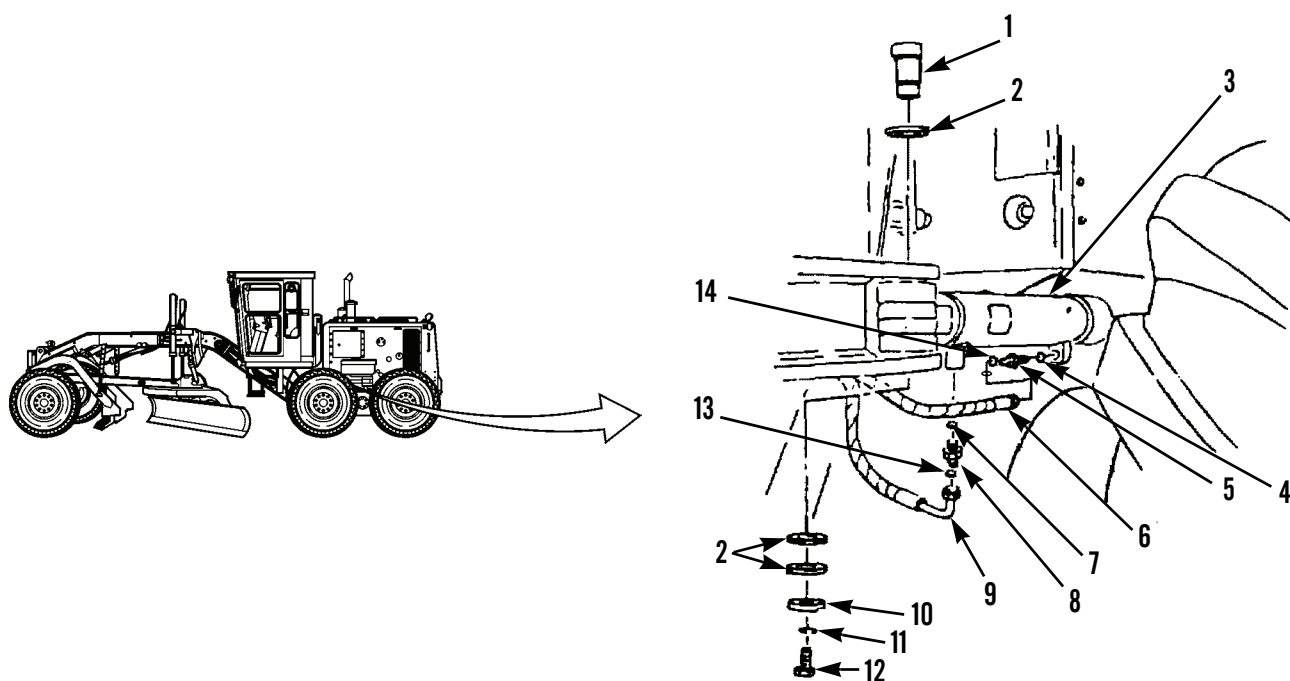
- This procedure covers the left articulation cylinder. Follow these instructions for the right articulation cylinder.
- Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assembly (6) from connector (5) of articulation cylinder (3) assembly. Remove and discard preformed packing (14).
2. Remove connector (5) and preformed packing (4). Discard preformed packing.
3. Disconnect hose assembly (9) from connector (8). Remove and discard preformed packing (13).
4. Remove connector (8) and preformed packing (7). Discard preformed packing.

NOTE

Note number and location of washers when removing pin.

5. Remove screw (12), lockwasher (11), washer (10), and washer(s) (2) from left side of front frame. Discard lockwasher.
6. With assistance, attach sling to articulation cylinder (3). Remove slack from sling.
7. Use brass drift and hammer to remove pin (1) and washer(s) (2).



397-1607

REMOVAL - CONTINUED

8. Remove screw (19), lockwasher (18), washer (17), and washer(s) (16) from left side of rear frame. Discard lockwasher.
9. Use a puller to remove pin (15) and washer(s) (16) from machine.


**WARNING**

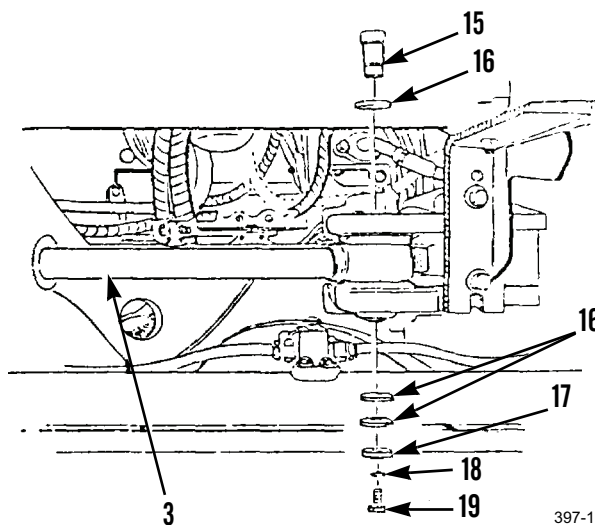Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Articulation cylinder weighs 65 lb (30 kg).

10. Remove articulation cylinder (3) and place in work area.
11. Remove sling.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

1. Attach sling to articulation cylinder (3) assembly and on machine.

NOTE

Use washers as required to ensure that cylinder is level.

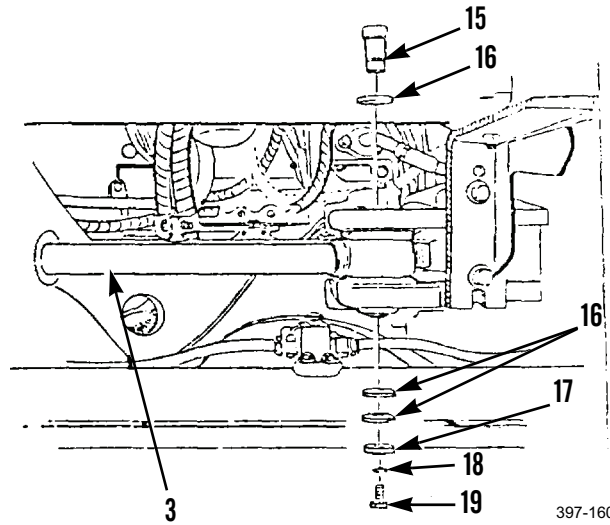2. Install washer(s) (16) as noted during removal.
3. Align washer(s) (16), rear frame mountings and cylinder (3) rod eye.
4. Install pin (15).
5. Install washer (17), new lockwasher (18), and screw (19).




397-1608

INSTALLATION - CONTINUED**NOTE**

Use washers as required to ensure that cylinder is level.

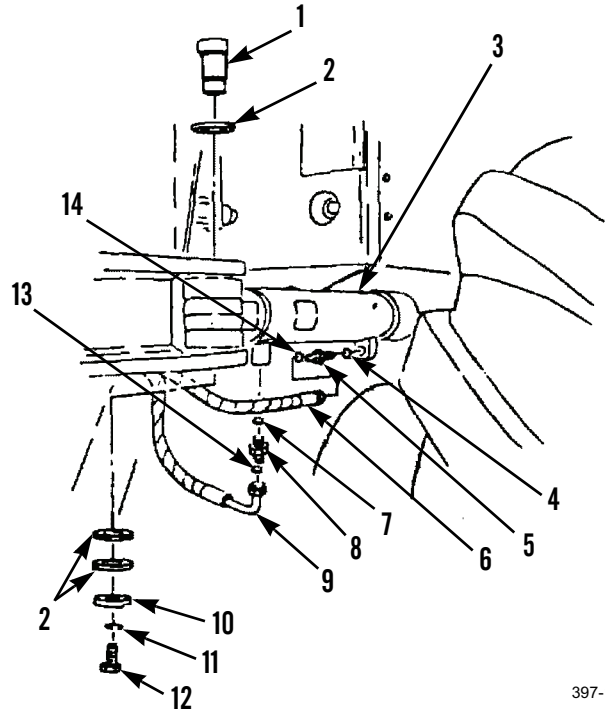6. Install three washers (2) as required.
7. Align three washers (2), front frame mountings, and cylinder (3) eye.
8. Install pin (1).
9. Install washer (10), new lockwasher (11), and screw (12).
10. Install new preformed packing (7) and connector (8).
11. Install new preformed packing (13) and hose assembly (9) to connector (8).
12. Install new preformed packing (4) and connector (5).
13. Install new preformed packing (14) and connect hose assembly (6).



397-1610

14. Remove pivot locking pin (TM 5-3805-261-10).
15. Install left or right side engine panel (WP 0182 00).
16. Start engine (TM 5-3805-261-10).
17. Articulate machine slowly left and right to bleed air from hydraulic system (TM 5-3805-261-10).
18. Stop engine and check for leaks.
19. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

SIDESHIFT CYLINDER AND MOUNTING REPLACEMENT

0247 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Personnel Required

Two

Tools and Special Tools

- Tool kit, general mechanic's (Item 89, WP 0348 00)
- Shop equipment, contact truck (Item 77, WP 0348 00)
- Sling (Item 78, WP 0348 00)
- Wrench, torque (Item 102, WP 0348 00)

References

WP 0216 00

Equipment Conditions

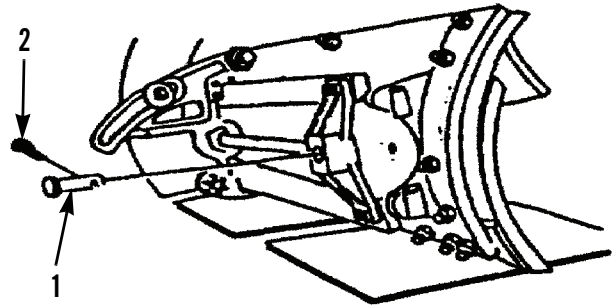
- Machine parked on level ground (TM 5-3805-261-10)
- Parking/emergency brake applied (TM 5-3805-261-10)
- Blade tilted fully forward (TM 5-3805-261-10)
- Implements lowered to ground (TM 5-3805-261-10)
- Engine off (TM 5-3805-261-10)
- Battery disconnect switch in OFF position (TM 5-3805-261-10)
- Guards removed (WP 0259 00)

Materials/Parts

- Cap set, protective (Item 7, WP 0349 00)
 - Rag, wiping (Item 35, WP 0349 00)
 - Tag, marker (Item 44, WP 0349 00)
 - Chain
 - Packing, preformed (4)
 - Pin, cotter (2)
 - Wood blocks
-


REMOVAL

1. Remove cotter pin (2) and pin (1). Discard cotter pin.



397-1611

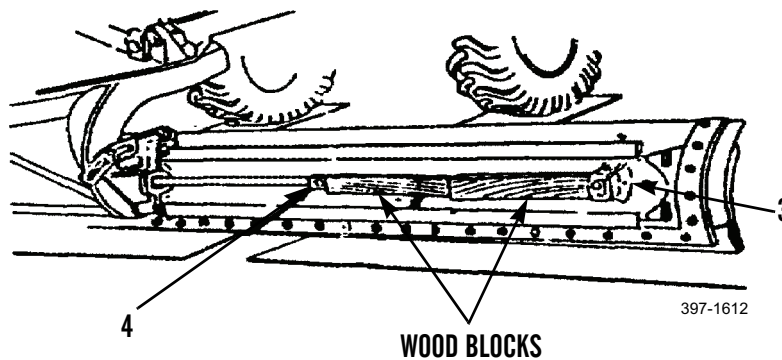2. Start engine (TM 5-3805-261-10).
3. Retract cylinder rod (4) from bracket (3).
4. Position wood blocks between cylinder rod (4) and bracket (3).
5. Extend cylinder rod (4) to move blade far enough to the right for access to cylinder.
6. Retract cylinder rod (4).
7. Stop engine.
8. Relieve hydraulic pressure (WP 0020 00).
9. Remove wood blocks.



397-1612

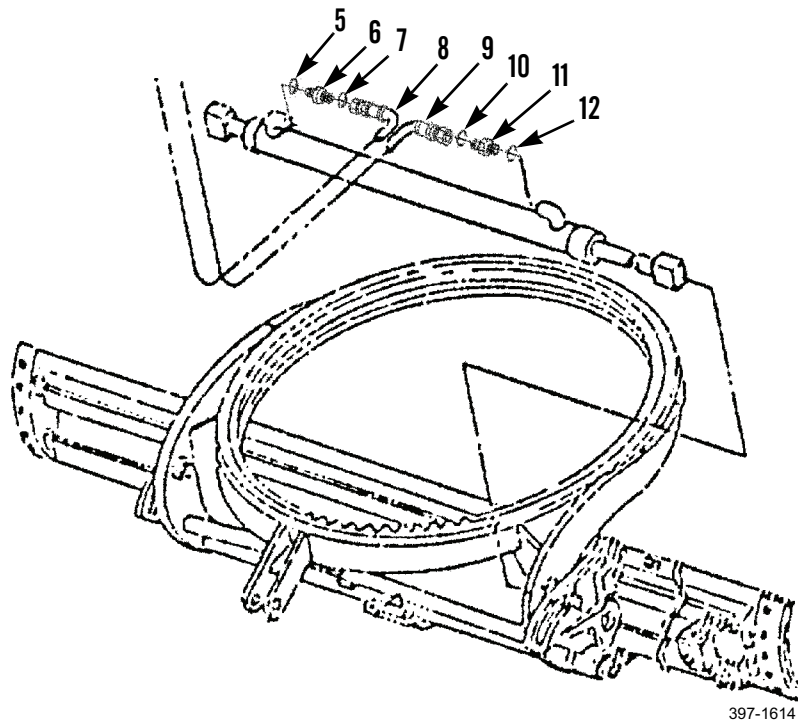
REMOVAL - CONTINUED**CAUTION**

Cap hose ends to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

10. Disconnect hose assembly (9) from connector (11). Remove and discard preformed packing (10).
11. Remove connector (11) and preformed packing (12). Discard preformed packing.
12. Disconnect hose assembly (8) from connector (6). Remove and discard preformed packing (7).
13. Remove connector (6) and preformed packing (5). Discard preformed packing.



397-1614

REMOVAL - CONTINUED

14. Remove nut (27), washer (26), bolt (23), pin (18), and washers (28 and 19).

**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

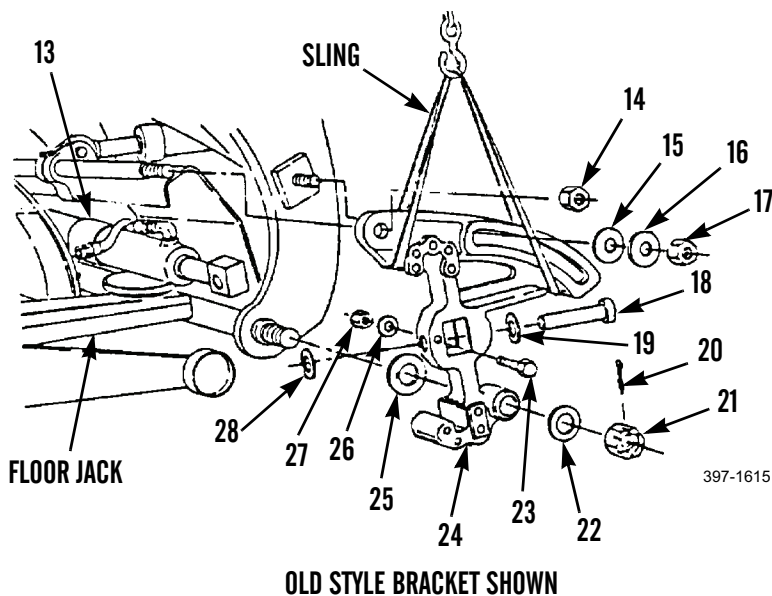
Old style bracket weighs 72 lb (33 kg); new style bracket weighs 50 lb (23 kg).

15. With assistance, attach sling to bracket (24) and position floor jack under side shift cylinder (13).

NOTE

New style bracket (24) does not have nut (17) and washers (15 and 16).

16. Remove cotter pin (20), nut (21), washer (22), nut (17), washers (16 and 15), nut (14), bracket (24), and washer (25) from machine. Discard cotter pin.
17. Set bracket (24) on ground and remove sling from bracket.




REMOVAL - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Side shift cylinder weighs 130 lb (60 kg).

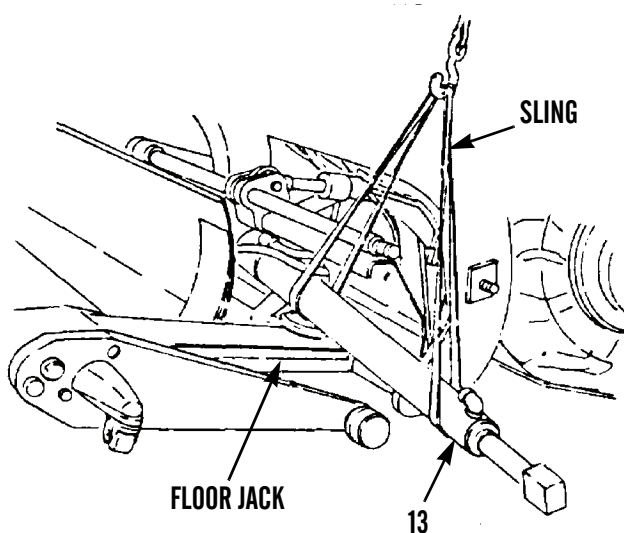
18. With assistance, attach sling to side shift cylinder (13) assembly. Place cylinder in work area.
19. Remove sling from cylinder (13).



397-1616

REMOVAL - CONTINUED

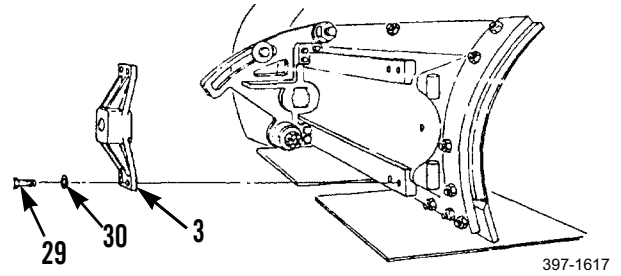20. Remove four bolts (29), washers (30), and bracket (3) from machine.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

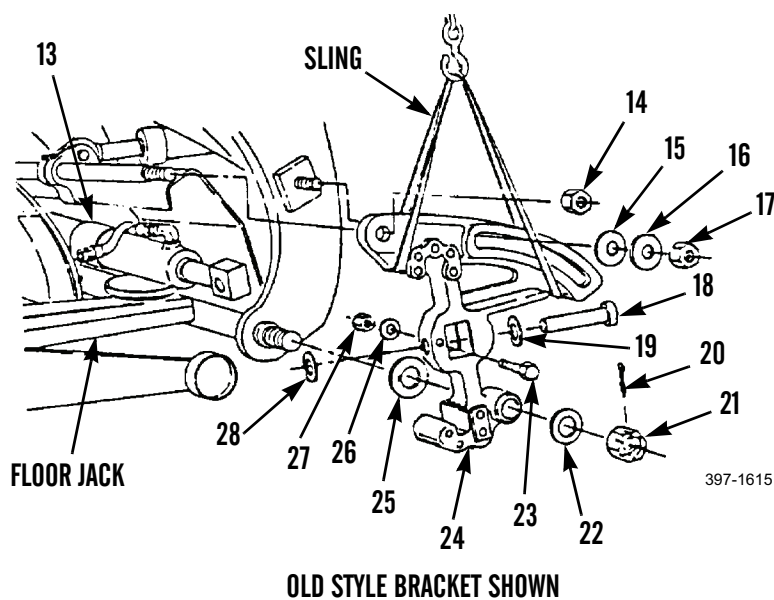
INSTALLATION

1. Install bracket (3), four washers (30), and bolts (29) to machine.
2. Use a sling to position side shift cylinder (13) assembly to machine. Support with floor jack.
3. Remove sling.
4. Attach sling to bracket (24).
5. Use lifting device and sling to position washer (25) and bracket (24) to machine.

INSTALLATION - CONTINUED**NOTE**


New style bracket (24) does not have nut (17) and washers (15 and 16).

6. Install bracket (24), nut (14), washers (15 and 16), nut (17), washer (22), nut (21), and new cotter pin (20). Tighten nut (21) to zero clearance then back off nut one slot to install cotter pin. Tighten nut (14) to 1,200 lb-ft (1,627 Nm). Maintain clearance of 1/8 in. (32 mm) or larger .
7. Install washer (28 and 19), pin (18), bolt (23), washer (26), and nut (27).
8. Remove sling from bracket (24).




INSTALLATION - CONTINUED

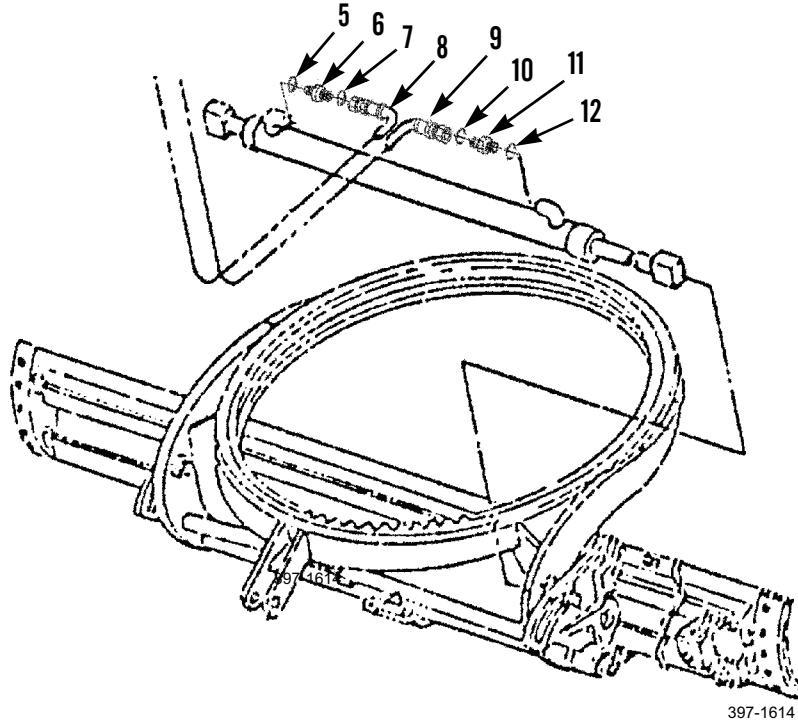9. Install new preformed packing (5) and connector (6) to side shift cylinder.
10. Install new preformed packing (7) and connect hose assembly (8) to connector (6).
11. Install new preformed packing (12) and connector (11).
12. Install new preformed packing (10) and connect hose assembly (9) to connector (11).




INSTALLATION - CONTINUED

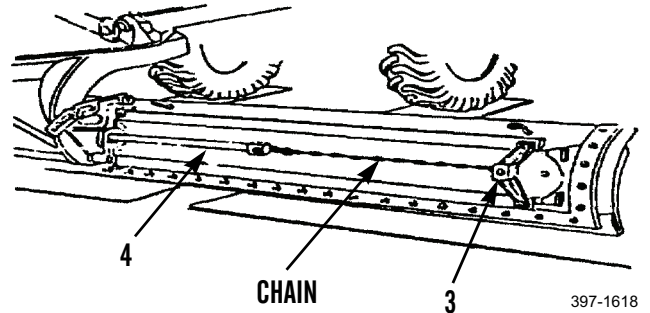13. Connect chain to rod (4) end of cylinder and bracket (3).
14. Start engine (TM 5-3805-261-10).
15. Retract rod (4) end of cylinder and pull blade into position.
16. Stop engine.
17. Remove chain from bracket (3) and rod (4).



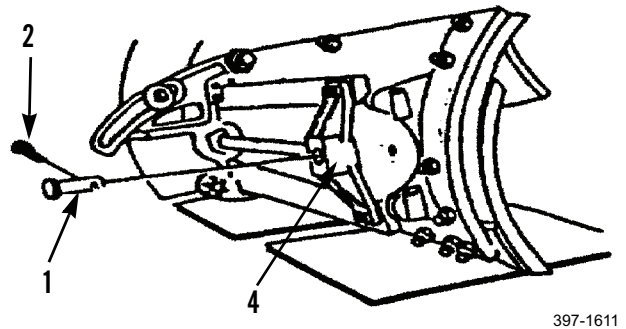18. Extend rod (4) to align with pin (1).
19. Install pin (1) and new cotter pin (2).



20. Install guards (WP 0259 00).
21. Start engine (TM 5-3805-261-10).
22. Raise blade from ground (TM 5-3805-261-10).
23. Operate control levers and cycle system through at least five full-travel movements to bleed air from system.
24. Stop engine and check for leaks.
25. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

SCARIFIER CYLINDER REPLACEMENT

0248 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0216 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Sling (Item 78, (WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (4)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Personnel Required

Two

Hydraulic pressure relieved (WP 0020 00)

REMOVAL

1. Remove and discard tie strap (6) from scarifier cylinder (1) assembly.

CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

2. Disconnect hose assemblies (9) from elbow (7). Remove and discard preformed packing (8).
3. Remove elbow (7) and preformed packing (10). Discard preformed packing.
4. Disconnect hose assembly (5) from connector (3). Remove and discard preformed packing (4).
5. Remove connector (3) and preformed packing (2). Discard preformed packing.


**WARNING**

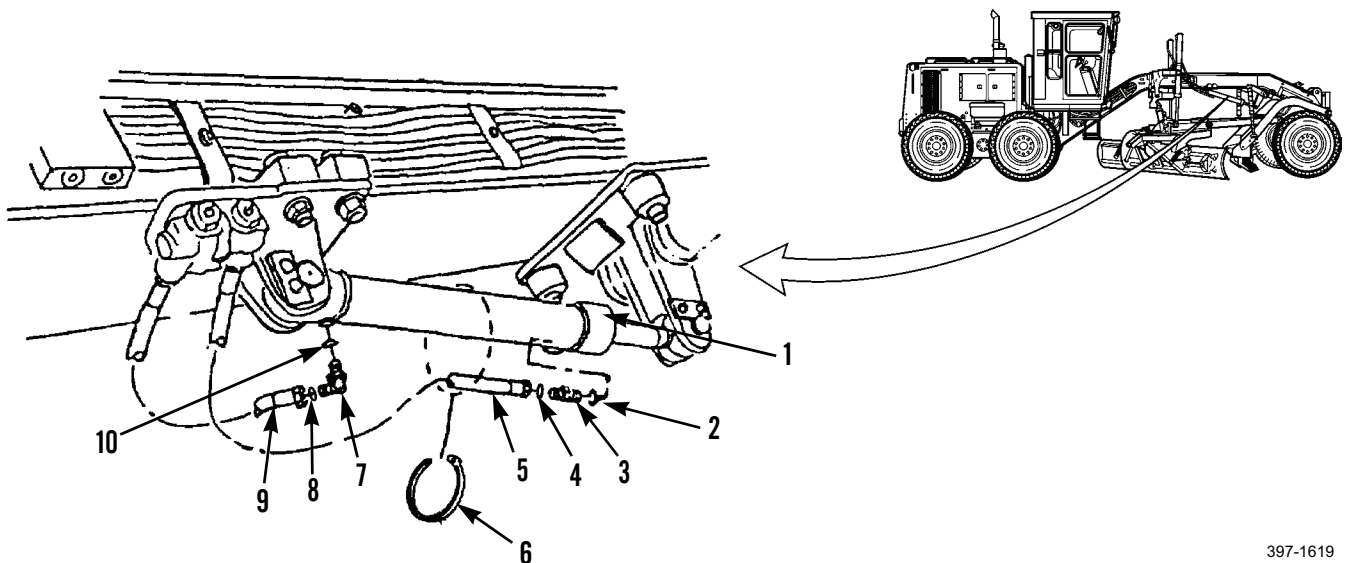Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Scarifier cylinder weighs 65 lb (29 kg).

6. With assistance, attach sling to scarifier cylinder (1) assembly. Remove slack from sling.



397-1619

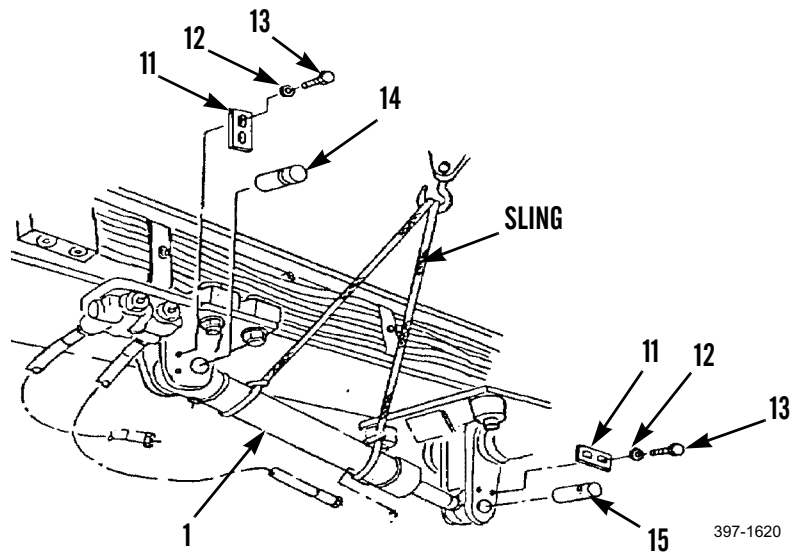
REMOVAL - CONTINUED

- Remove four bolts (13), four washers (12), and two plates (11) from machine.

WARNING

Use care when removing scarifier cylinder to prevent it from swinging. Failure to follow warning may cause injury to personnel.

- Remove two pins (14) and swing one end of scarifier cylinder (1) out.
- Remove pin (15) and scarifier cylinder (1) assembly from mounting brackets of machine and place cylinder in work area.
- Remove sling.

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

1. Attach lifting device and sling to scarifier cylinder (1) assembly.
2. Use sling to position one end of cylinder (1) assembly in mounting bracket of machine.
3. Position other end of cylinder (1) in mounting bracket.

CAUTION


When installing two pins, use care not to damage four new seals or two bearings.

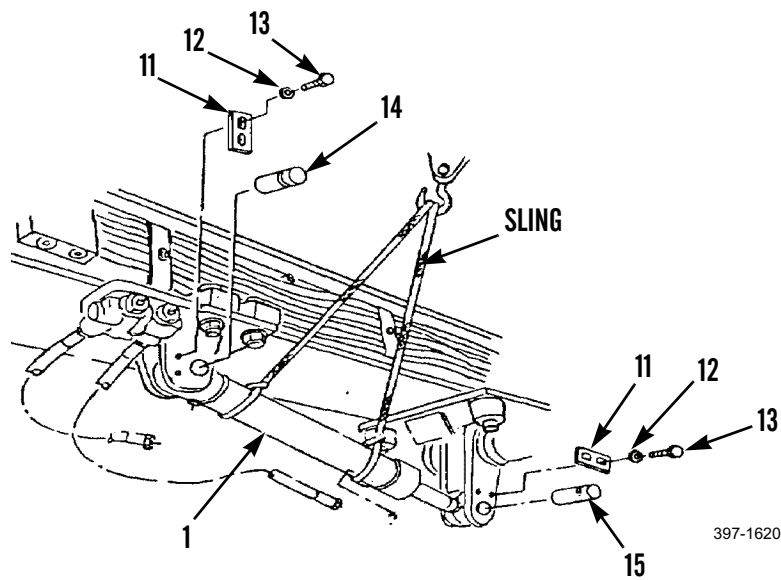4. Install two pins (15 and 14), plates (11), four washers (12), and bolts (13).
5. Remove sling.



INSTALLATION - CONTINUED

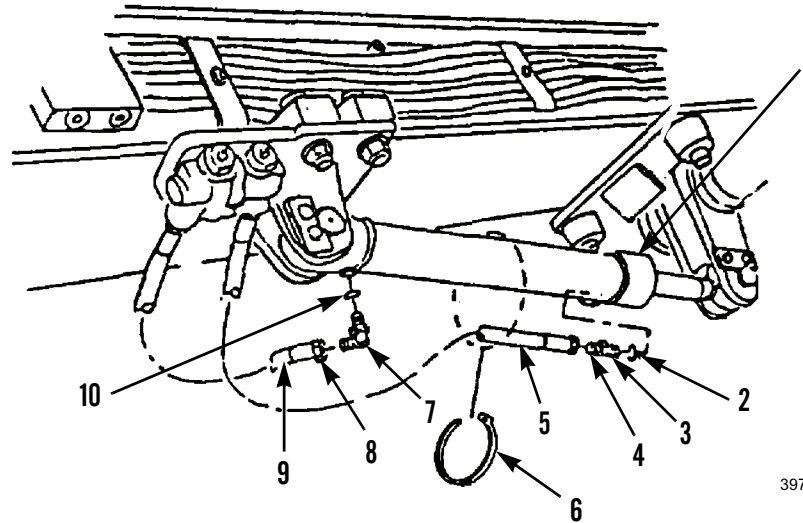6. Install new preformed packing (2) and connector (3) to scarifier cylinder (1) assembly. Install new preformed packing (4) and connect hose assembly (5) to connector.
7. Install new preformed packing (10) and elbow (7).
8. Install new preformed packing (8) and connect hose assembly (9) to elbow (7).
9. Install new tie strap (6) on cylinder (1) to secure hose assembly (9).



397-1622

10. Start engine (TM 5-3805-261-10).
11. Operate control levers and cycle system through at least five full-travel movements to bleed air from system.
12. Stop engine and check for leaks.
13. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT

0249 00

THIS WORK PACKAGE COVERS

Removal, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's, (Item 89, 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 27, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0216 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

REMOVAL

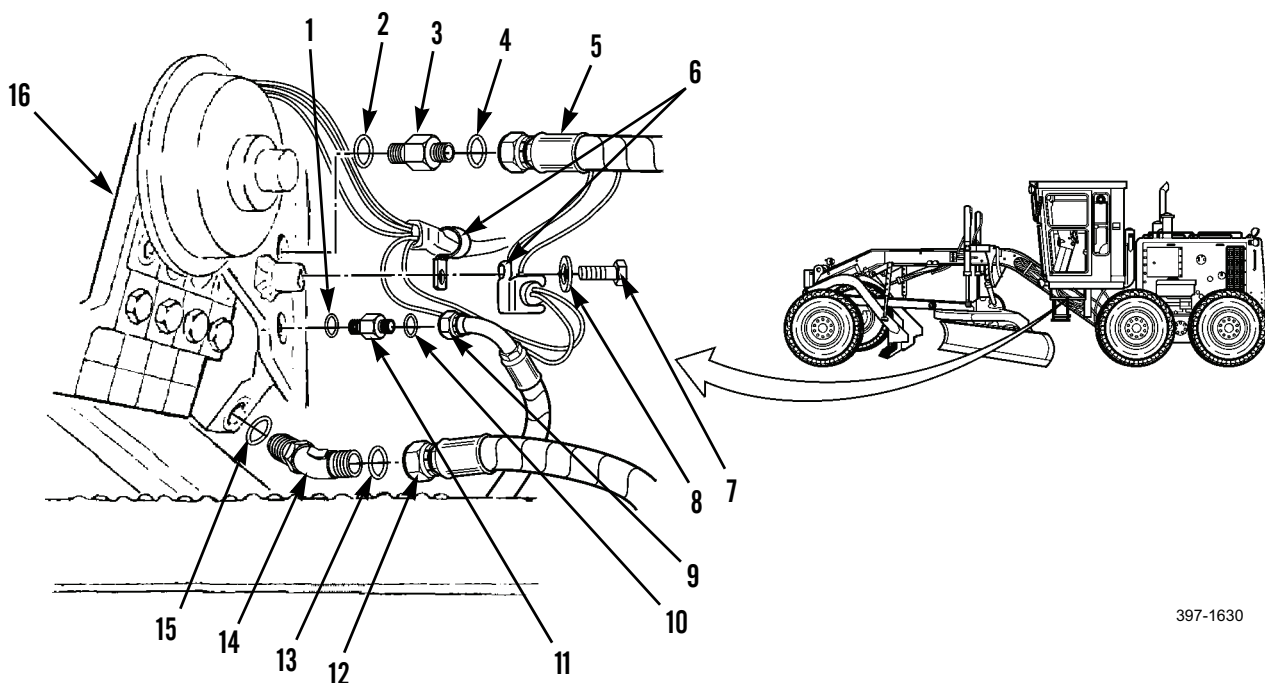
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assembly (12) from elbow (14). Remove and discard preformed packing (13).
2. Remove elbow (14) and preformed packing (15) from hydraulic control valve (16). Discard preformed packing.
3. Disconnect hose assembly (9) from connector (11). Remove and discard preformed packing (10).
4. Remove connector (11) and preformed packing (1). Discard preformed packing.
5. Remove bolt (7), washer (8), and two clips (6).
6. Disconnect hose assembly (5) from connector (3). Remove and discard preformed packing (4).
7. Remove connector (3) and preformed packing (2). Discard preformed packing.




397-1630

HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00

REMOVAL - CONTINUED

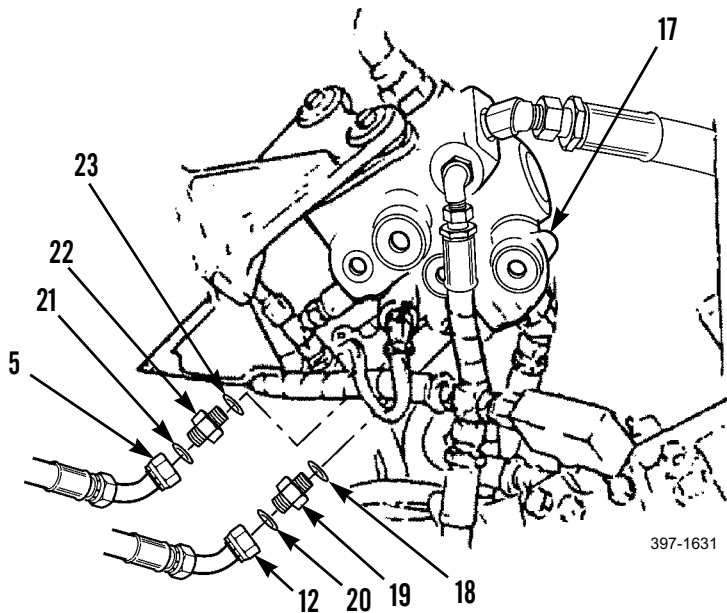
8. Disconnect hose assembly (12) from connector (19). Remove and discard preformed packing (20). Remove hose assembly from machine.
9. Remove connector (19) and preformed packing (18) from combination valve (17). Discard preformed packing
10. Disconnect hose assembly (5) from connector (22). Remove and discard preformed packings (21 and 23). Remove hose assembly from machine.
11. Remove connector (19) and preformed packing (18) from combination valve (17). Discard preformed packing.



HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00

REMOVAL - CONTINUED

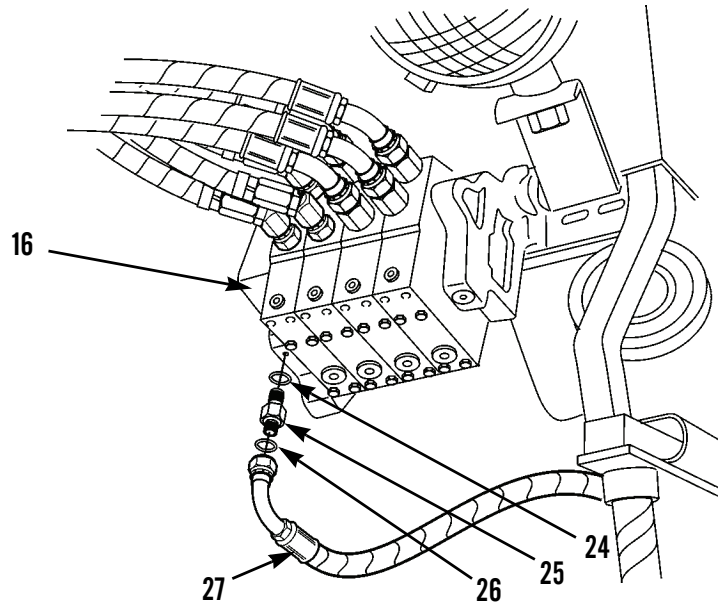12. Disconnect hose assembly (27) from connector (25).
13. Remove and discard preformed packing (26).
14. Remove connector (25) and preformed packing (24). Discard preformed packing.





397-1632

HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00

REMOVAL - CONTINUED

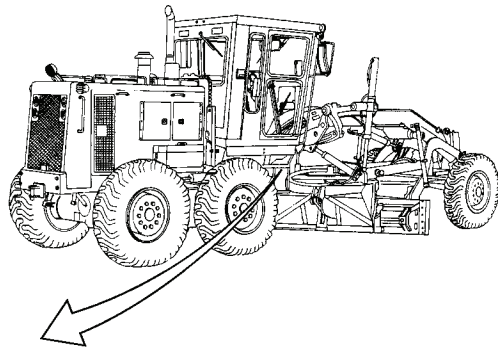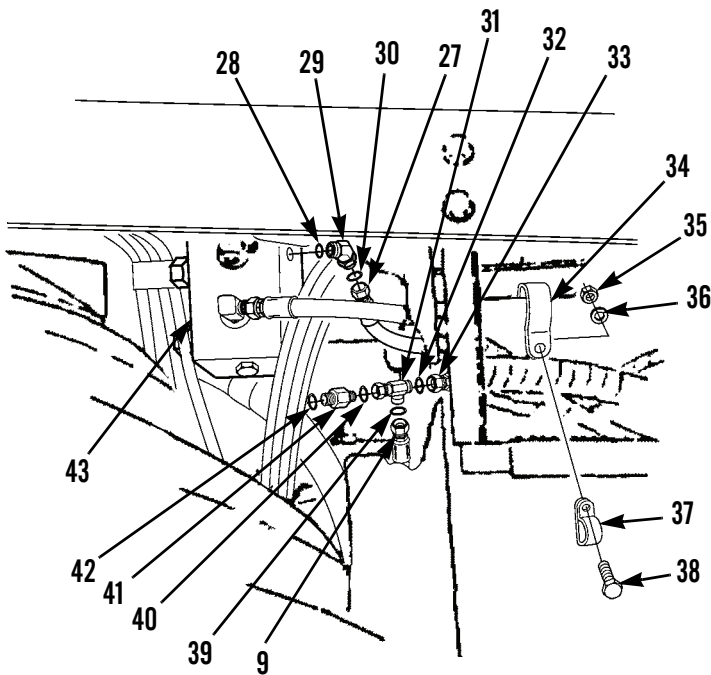15. Disconnect hose assembly (27) from elbow (29). Remove and discard preformed packing (30). Remove hose assembly from machine.
16. Remove elbow (29) and preformed packing (28) from junction block (43). Discard preformed packing.
17. Disconnect hose assembly (9) from middle of tee (31). Remove and discard preformed packing (39). Remove hose assembly from machine.
18. Disconnect hose assembly (33) from end of tee (31). Remove and discard preformed packing (32).
19. Remove tee (31) from connector (41). Remove and discard preformed packing (40).
20. Remove connector (41) and preformed packing (42) from junction block (43). Discard preformed packing.
21. Remove nut (35), washer (36), bolt (38), and hose clamp (37) from support (34).




397-1633

HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00

REMOVAL - CONTINUED

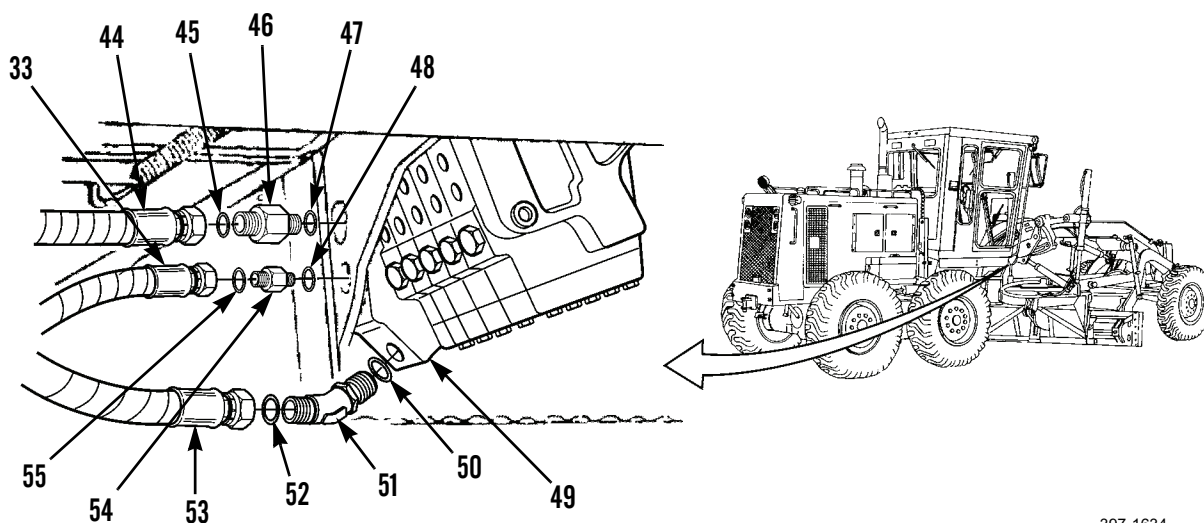22. Disconnect hose assembly (53) from elbow (51). Remove and discard preformed packing (52).
23. Remove elbow (51) and preformed packing (50) from right hydraulic control valve (49).
24. Disconnect hose assembly (33) from connector (54). Remove and discard preformed packing (55). Remove hose assembly from machine.
25. Remove connector (54) and preformed packing (48). Discard preformed packing.
26. Disconnect hose assembly (44) from connector (46). Remove and discard preformed packing (45). Remove hose assembly from machine.
27. Remove connector (46) and preformed packing (47). Discard preformed packing.





397-1634

HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00

REMOVAL - CONTINUED

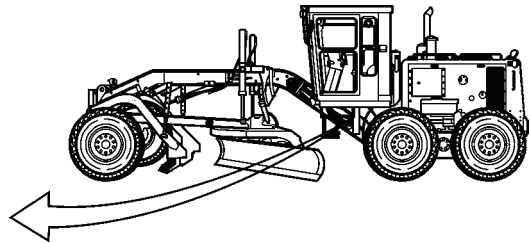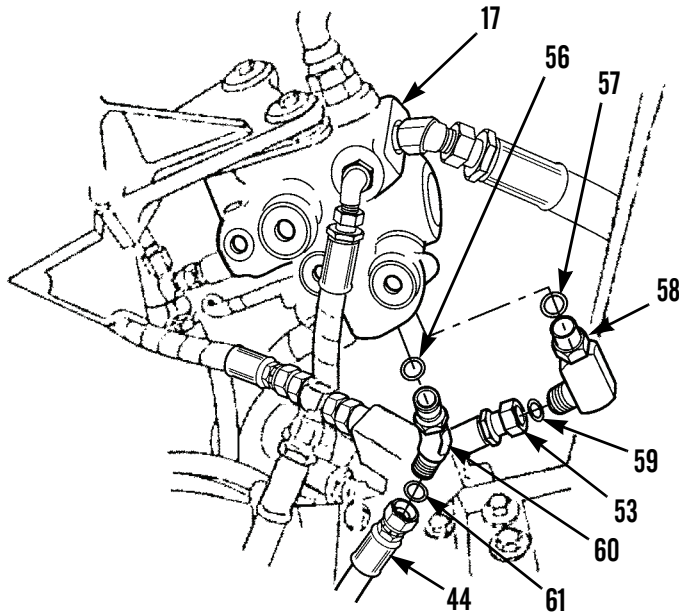28. Disconnect hose assembly (53) from elbow (58). Remove and discard preformed packing (59).
29. Remove elbow (58) and preformed packing (57) from combination valve (17). Discard preformed packing.
30. Disconnect hose assembly (44) from elbow (60). Remove and discard preformed packing (61).
31. Remove elbow (60) and preformed packing (56) from steering control valve (17). Discard preformed packing.




397-1635

HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00


REMOVAL - CONTINUED

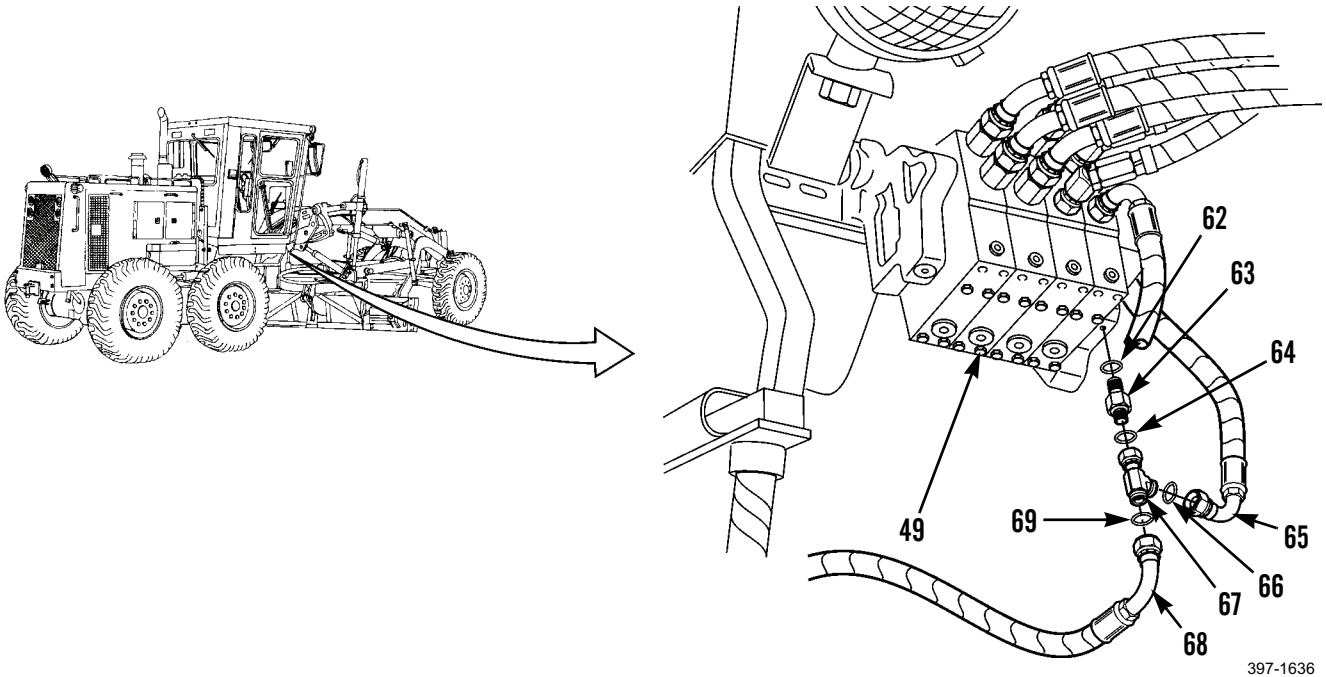32. Disconnect hose assembly (68) from end of tee (67). Remove and discard preformed packing (69).
33. Disconnect hose assembly (65) from middle of tee (67). Remove and discard preformed packing (66).
34. Remove tee (67) from connector (63). Remove and discard preformed packing (64).
35. Remove connector (63) and preformed packing (62) from right hydraulic control valve (49).



397-1636

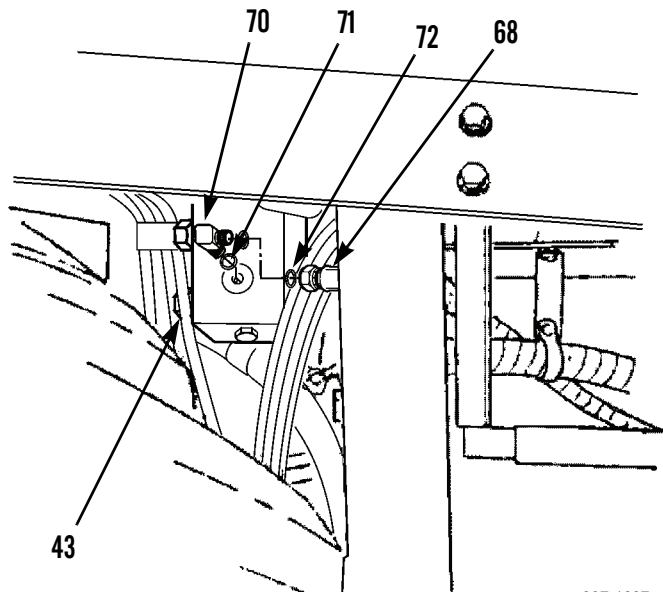36. Disconnect hose assembly (68) from elbow (70). Remove and discard preformed packing (72). Remove hose assembly from machine.
37. Remove elbow (70) and preformed packing (71) from junction block (43). Discard preformed packing.




397-1637

HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00

INSTALLATION

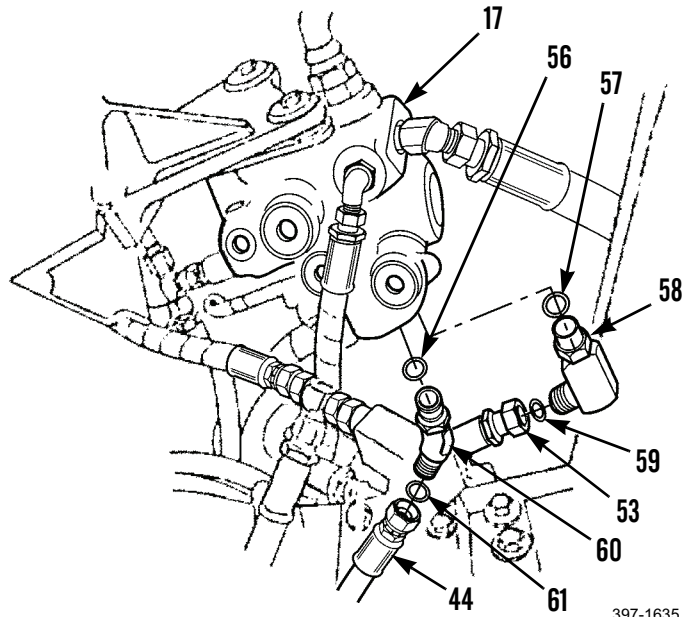1. Install new preformed packing (71) and elbow (70) on brake control valve (43).
2. Position hose assembly (68) to machine. Install new preformed packing (72) and connect hose assembly to elbow (70).
3. Install new preformed packing (62) and connector (63) to right hydraulic control valve (49).
4. Install new preformed packing (64) and tee (67) to connector (63).
5. Install new preformed packing (66) and hose assembly (65) to middle of tee (67).
6. Install new preformed packing (69) and connect hose assembly (68) to end of tee (67).
7. Install new preformed packing (56) and elbow (60) to combination valve (17).
8. Install new preformed packing (61) and connect hose assembly (44) to elbow (60).
9. Install new preformed packing (57) and elbow (58) to steering control valve (17).
10. Install new preformed packing (59) and connect hose assembly (53) to elbow (58).




397-1635


HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00

INSTALLATION - CONTINUED

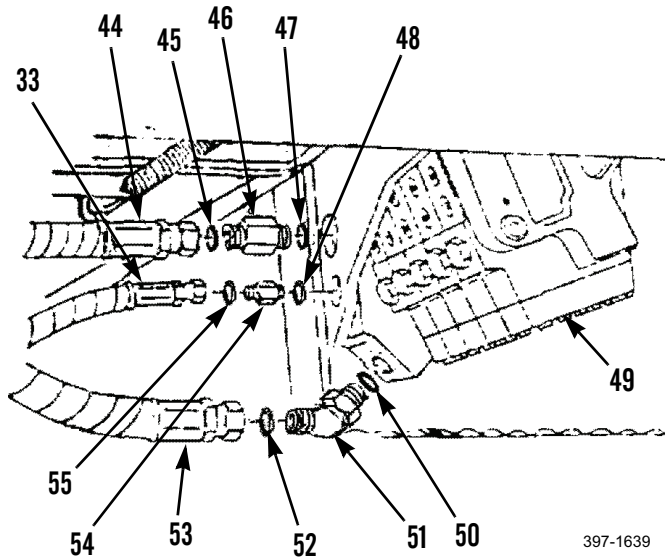11. Install new preformed packing (47) and connector (46) to right hydraulic control valve (49).
12. Position hose assembly (44) to machine. Install new preformed packing (45) and connect hose assembly to connector (46).
13. Install new preformed packing (48) and connector (54).
14. Position hose assembly (33) to machine. Install new preformed packing (55) and connect hose assembly to connector (54).
15. Install new preformed packing (50) and elbow (51).
16. Install new preformed packing (52) and connect hose assembly (53) to elbow (51).




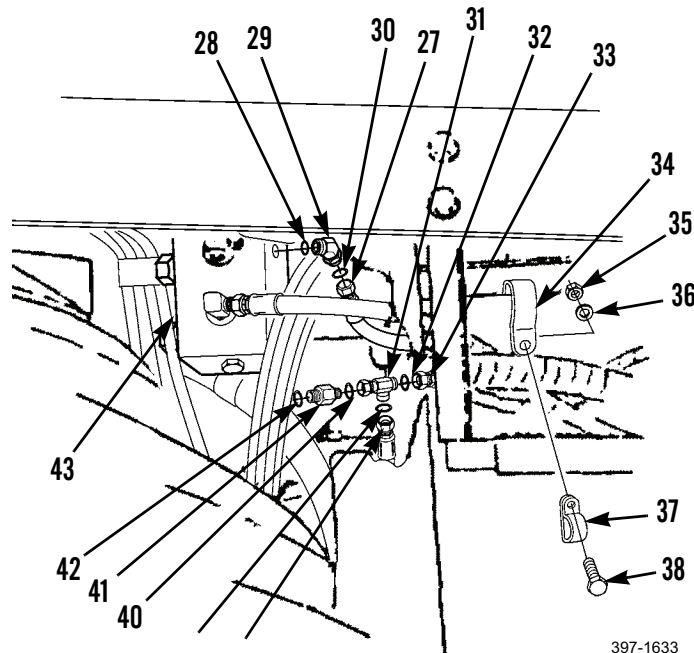17. Install hose clamp (37) to support (34) with bolt (38), washer (36), and nut (35).
18. Install new preformed packing (40) and install tee (31) to connector (41).
19. Install new preformed packing (32) and connect hose assembly (33) to end of tee (31).
20. Position hose assembly (9) to machine. Install new preformed packing (39) and connect hose assembly to middle of tee (31).
21. Install new preformed packing (28) and elbow (29).
22. Position hose assembly (27) to machine. Install new preformed packing (30) and connect hose assembly to elbow (29).



INSTALLATION - CONTINUED

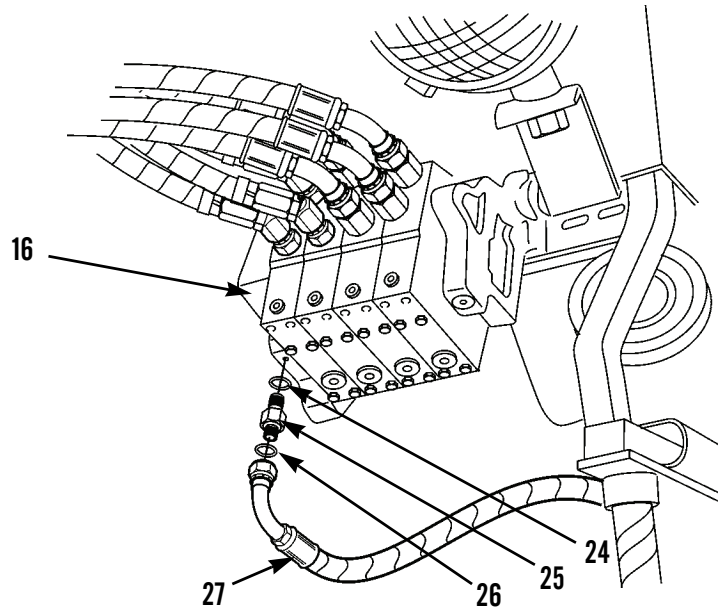23. Install new preformed packing (24) and connector (25) to left hydraulic control valve (16).
24. Install new preformed packing (26).
25. Connect hose assembly (25) to connector (25).




397-1632


HYDRAULIC PUMP AND CONTROL VALVE LINES AND FITTINGS REPLACEMENT - CONTINUED 0249 00

INSTALLATION - CONTINUED

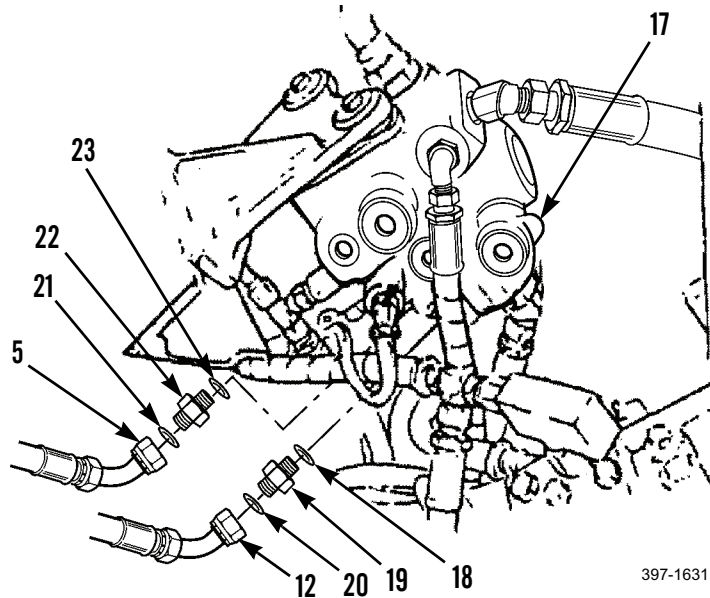26. Install new preformed packing (23) and connector (22) to combination valve (17).
27. Position hose assembly (5) on machine. Install new preformed packing (21) and connect hose assembly to connector (22).
28. Install new preformed packing (18) and connector (19).
29. Position hose assembly (12) on machine. Install new preformed packing (20) and connect hose assembly to connector (19).



30. Install new preformed packing (2) and connector (3) on left hydraulic control valve (16).
31. Install new preformed packing (4) and connect hose assembly (5) to connector (3).
32. Install two clips (6) with washer (8) and bolt (7).
33. Install new preformed packing (1) and connector (11).
34. Install new preformed packing (10) and connect hose assembly (9) to connector (11).
35. Install new preformed packing (15) and elbow (14).
36. Install new preformed packing (13) and connect hose assembly (12) to elbow (14).
37. Start engine (TM 5-3805-261-10).
38. Operate control levers and cycle system through at least five full-travel movements to bleed air from system.
39. Stop engine and check for leaks.
40. Check hydraulic oil level and fill as necessary (WP 0216 00).

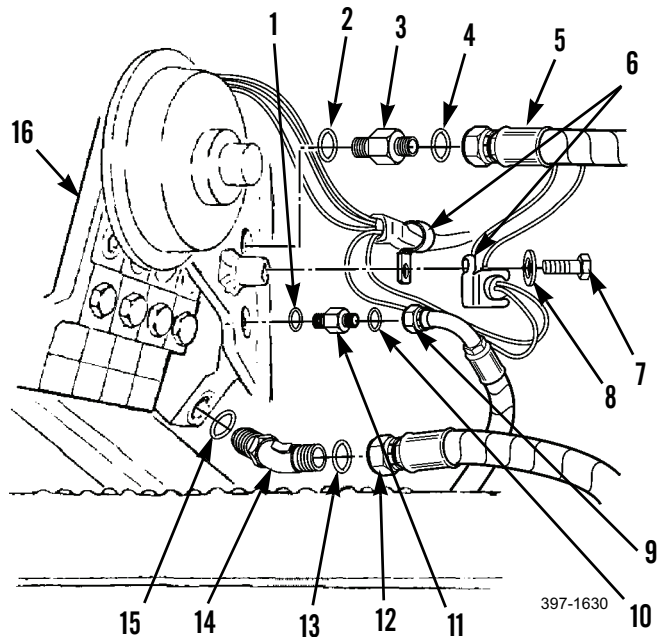

END OF WORK PACKAGE

OIL COOLER TO RELIEF VALVE AND HYDRAULIC TANK LINES AND FITTINGS REPLACEMENT 0250 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 27, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (27)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Hydraulic tank drained (WP 0216 00)

Left and right side engine panels removed (WP 0182 00)

**OIL COOLER TO RELIEF VALVE AND HYDRAULIC
TANK LINES AND FITTINGS REPLACEMENT - CONTINUED**

0250 00

REMOVAL

1. Loosen two clamps (8).

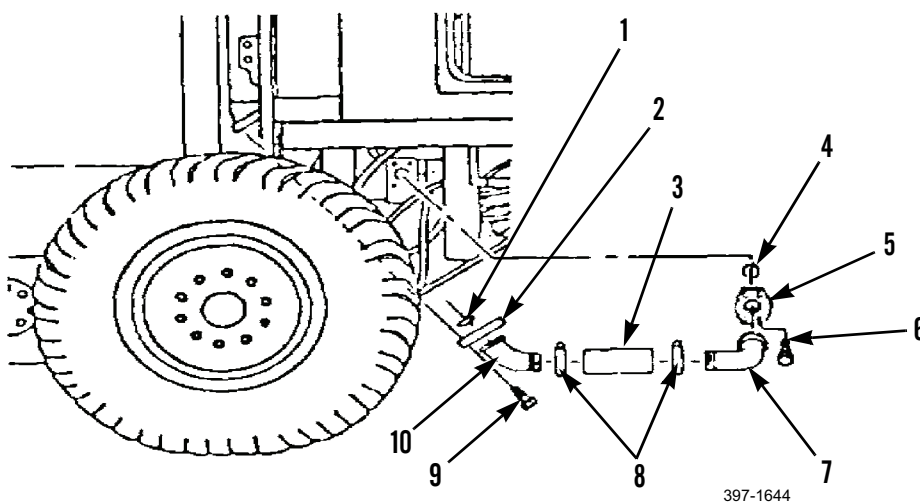
CAUTION

Cap hose and tube ends and plug open ports to prevent contamination.

NOTE

Tag hose and tube assemblies before disconnecting to aid in installation.

2. Remove hose (3) and two clamps (8) from under right-rear of cab.
3. Remove four bolts (9), seat (2), tube (10), and preformed packing (1) from right-bottom side of hydraulic tank. Discard preformed packing.
4. Remove four bolts (6), flange (5), elbow (7), and preformed packing (4) from hydraulic pump under right-rear of cab. Discard preformed packing.




OIL COOLER TO RELIEF VALVE AND HYDRAULIC TANK LINES AND FITTINGS REPLACEMENT - CONTINUED

0250 00


REMOVAL - CONTINUED

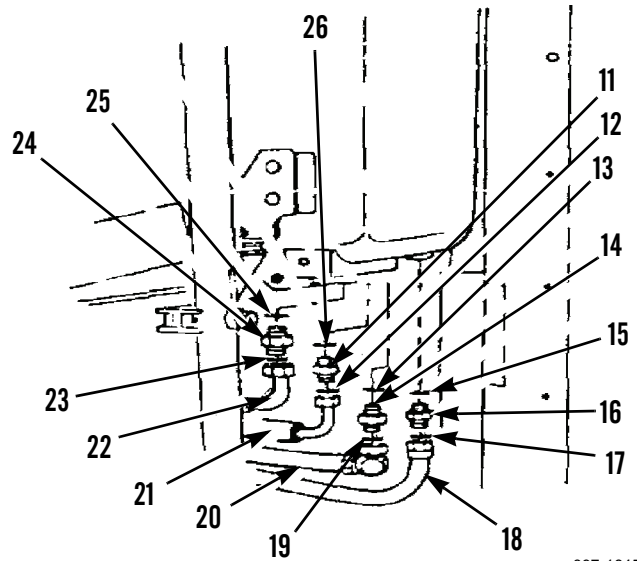5. Disconnect tube (18) and hose assemblies (20, 21, and 22) from bottom of hydraulic tank.
6. Remove and discard preformed packings (17, 19, 12, and 23).
7. Remove connector (16), preformed packing (15), connector (14), and preformed packing (13). Discard preformed packings.
8. Remove connector (11), preformed packing (26), connector (24), and preformed packing (25). Discard preformed packings.



397-1645

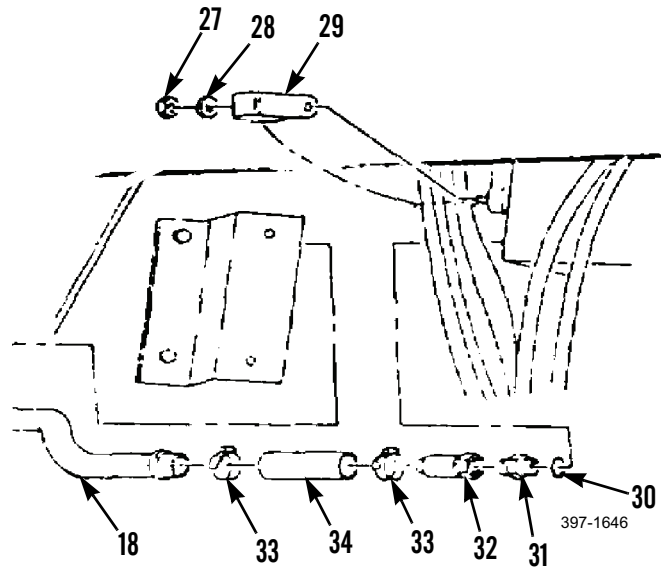9. Loosen two clamps (33).
10. Remove nut (27), washer (28), clip (29), and move wires and cable assemblies to one side.
11. Remove hose (34), two clamps (33), and tube (18) from machine.
12. Remove tube assembly (32), connector (31), and preformed packing (30) from junction block under right-center of cab. Discard preformed packing.




397-1646

OIL COOLER TO RELIEF VALVE AND HYDRAULIC TANK LINES AND FITTINGS REPLACEMENT - CONTINUED

0250 00


REMOVAL - CONTINUED

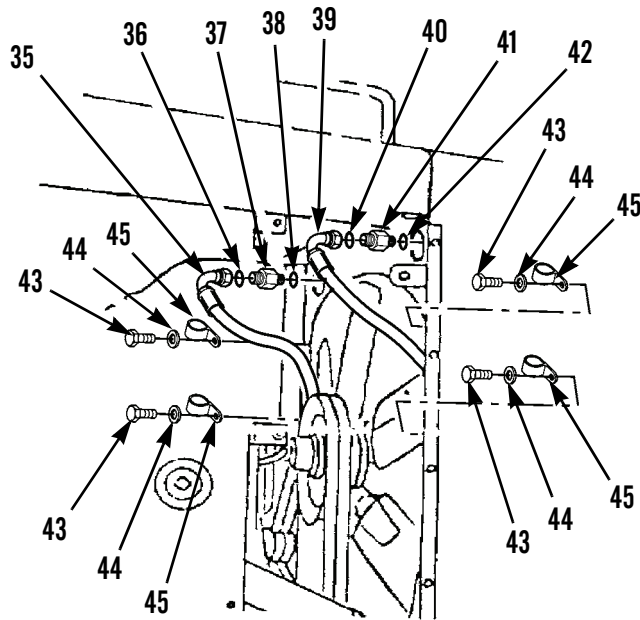13. Disconnect hose assembly (35) from connector (37) at right side of oil cooler. Remove and discard preformed packing (36).
14. Remove connector (37) and preformed packing (38). Discard preformed packing.
15. Remove four bolts (43), washers (44), and clamps (45).
16. Disconnect hose assembly (39) from connector (41) at left side of oil cooler. Remove and discard preformed packing (40).
17. Remove connector (41) and preformed packing (42). Discard preformed packing.



397-1647

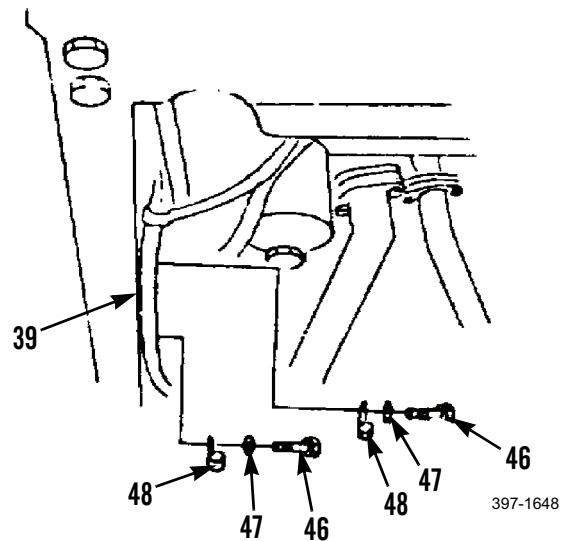18. Remove two bolts (46), washers (47), clamps (48), hose assembly (39) from left frame rail.




397-1648

**OIL COOLER TO RELIEF VALVE AND HYDRAULIC
TANK LINES AND FITTINGS REPLACEMENT - CONTINUED**

0250 00


REMOVAL - CONTINUED

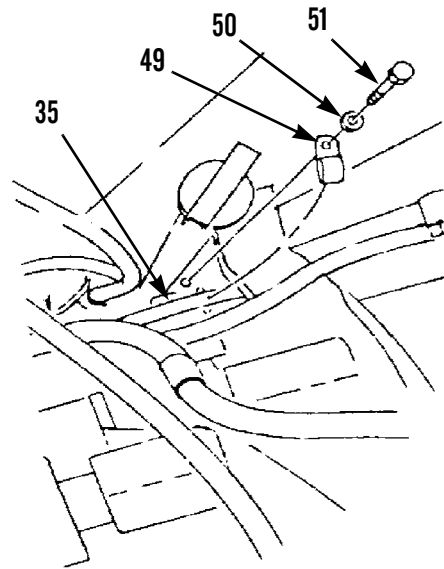19. Remove bolt (51), washer (50), clamp, (49) from right frame rail and hose assembly (35).



397-1649

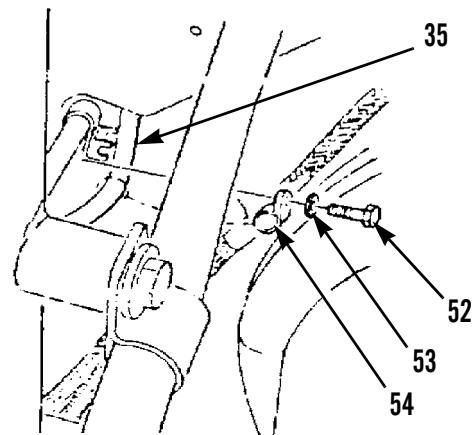20. Remove bolt (52), washer (53), clamp (54) from right frame rail and hose assembly (35).




397-1650

**OIL COOLER TO RELIEF VALVE AND HYDRAULIC
TANK LINES AND FITTINGS REPLACEMENT - CONTINUED**


0250 00

REMOVAL - CONTINUED

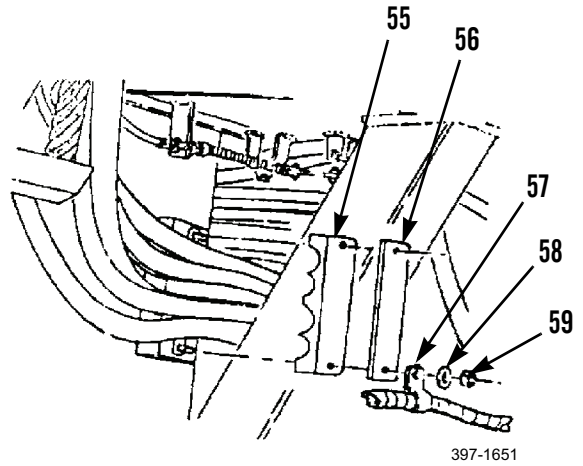21. Remove two nuts (59), washers (58), clamp (57), plate (56), and clamp (55) from under left side of cab.



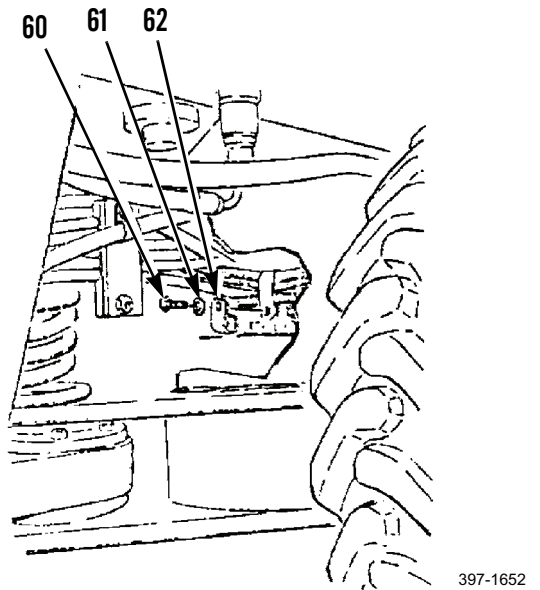22. Remove bolt (60), washer (61), and clamp (62) from under center of engine.




OIL COOLER TO RELIEF VALVE AND HYDRAULIC TANK LINES AND FITTINGS REPLACEMENT - CONTINUED

0250 00

REMOVAL - CONTINUED

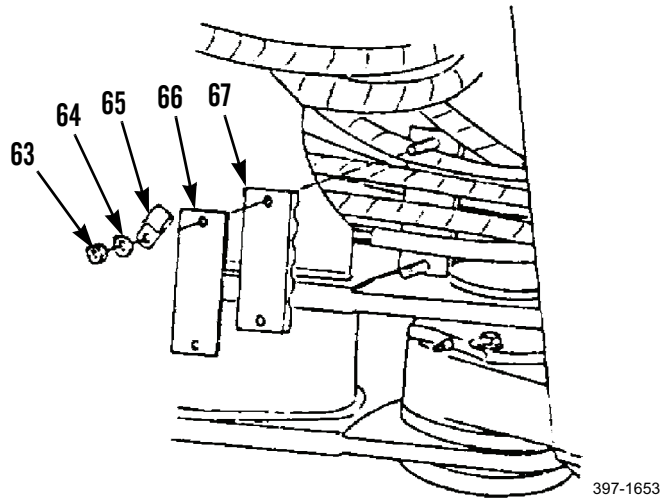
23. Remove two nuts (63), washers (64), clamp (65), plate (66), and clamp (67) from under hydraulic tank.



NOTE

Type II machines are equipped with quick-disconnect fittings on hose assemblies (35 and 39).

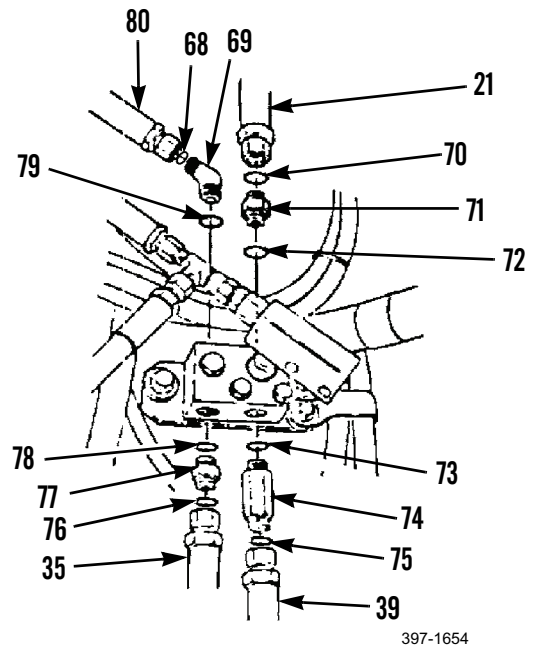24. Disconnect hose assemblies (35 and 39) from connectors (74 and 77) at bottom of hydraulic pump relief valve. Remove and discard preformed packings (75 and 76).
25. Remove hose assemblies (35 and 39) from machine.
26. Remove connectors (74 and 77) and preformed packings (73 and 78). Discard preformed packing.
27. Disconnect hose assembly (21) from connector (71) at top of hydraulic pump relief valve. Remove and discard preformed packing (70).
28. Remove hose assembly (21) from machine.
29. Remove connector (71) and preformed packing (72). Discard preformed packing.
30. Disconnect hose assembly (80) from elbow (69). Remove and discard preformed packing (68).
31. Remove elbow (69) and preformed packing (79). Discard preformed packing.




**OIL COOLER TO RELIEF VALVE AND HYDRAULIC
TANK LINES AND FITTINGS REPLACEMENT - CONTINUED**

0250 00

REMOVAL - CONTINUED

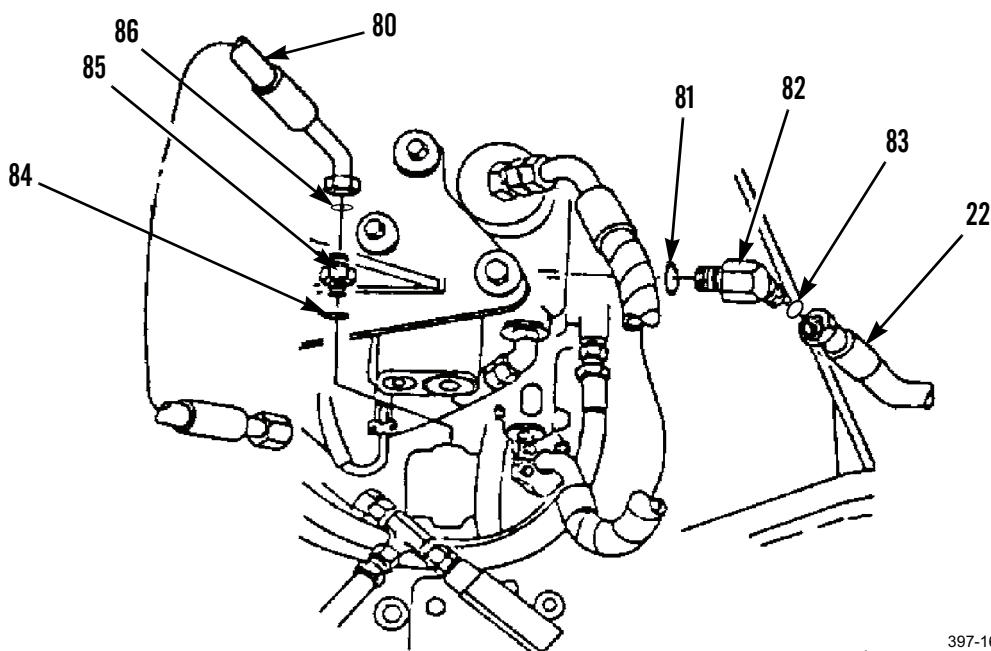32. Disconnect hose assembly (80) from connector (85) of hydraulic pump under center of cab. Remove and discard preformed packing (86).
33. Remove hose assembly (80) from machine.
34. Remove connector (85) and preformed packing (84). Discard preformed packing.
35. Remove hose assembly (22) from elbow (82) of hydraulic unloading valve. Remove and discard preformed packing (83).
36. Remove hose assembly (22) from machine.
37. Remove elbow (82) and preformed packing (81). Discard preformed packing.



397-1655

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

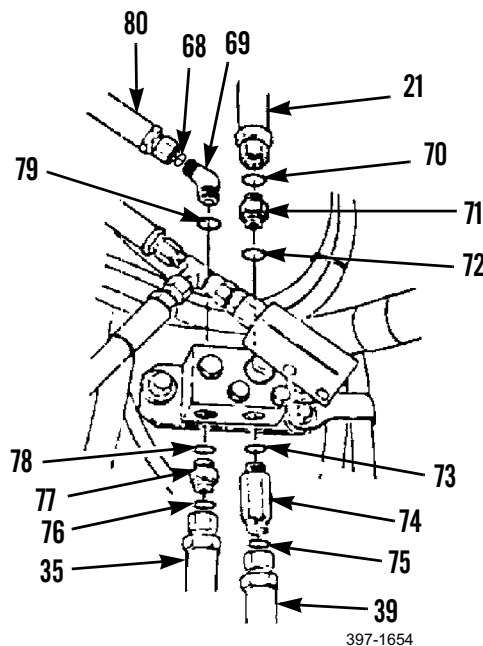
1. Install new preformed packing (81) and elbow (82) to hydraulic unloader valve.
2. Position hose assembly (22) to machine.
3. Install new preformed packing (83) and connect hose assembly (22) to elbow (82).
4. Install new preformed packing (84) and connector (85) to hydraulic pump.
5. Position hose assembly (80) to machine.
6. Install new preformed packing (86) and connect hose assembly (80) to connector (85).

OIL COOLER TO RELIEF VALVE AND HYDRAULIC TANK LINES AND FITTINGS REPLACEMENT - CONTINUED

0250 00

INSTALLATION - CONTINUED


7. Install new preformed packing (79) and elbow (69) to top of hydraulic pump relief valve.
8. Install new preformed packing (68) and connect hose assembly (80) to elbow (69).
9. Install new preformed packing (72) and connector (71).
10. Position hose assembly (21) to machine.
11. Install new preformed packing (70) and connect hose assembly (21) to connector (71).
12. Install new preformed packing (73 and 78) and install connectors (74 and 77) to bottom of hydraulic pump relief valve.
13. Position hose assemblies (35 and 39) to machine.



NOTE

Type II machines are equipped with quick-disconnect fittings on hose assemblies (35 and 39).

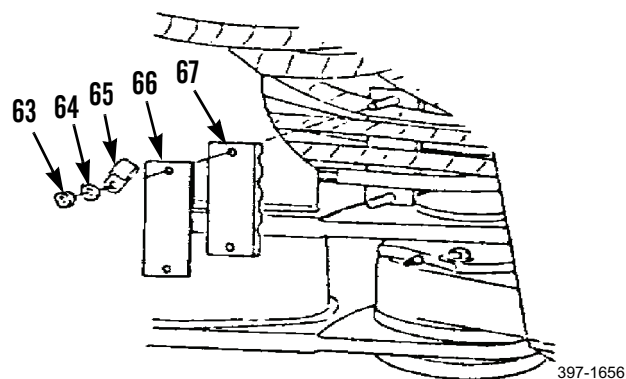14. Install new preformed packings (75 and 76) and connect hose assemblies (35 and 39) to connectors (74 and 77).
15. Position clamp (67), plate (66), and clamp (65) under hydraulic tank.
16. Install two washers (64) and nuts (63).




**OIL COOLER TO RELIEF VALVE AND HYDRAULIC
TANK LINES AND FITTINGS REPLACEMENT - CONTINUED**

0250 00


INSTALLATION - CONTINUED

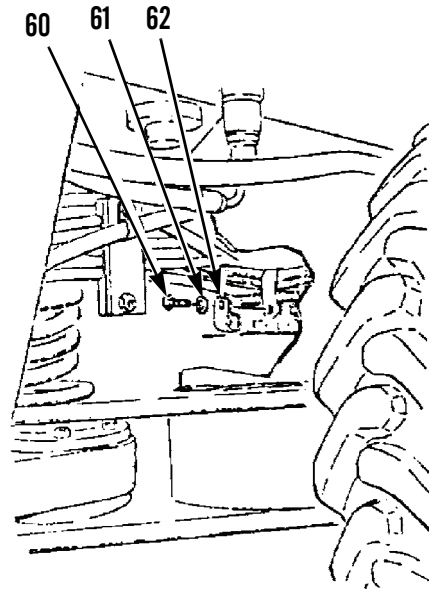17. Install clamp (62), washer (61), and bolt (60) under center of engine.



397-1652

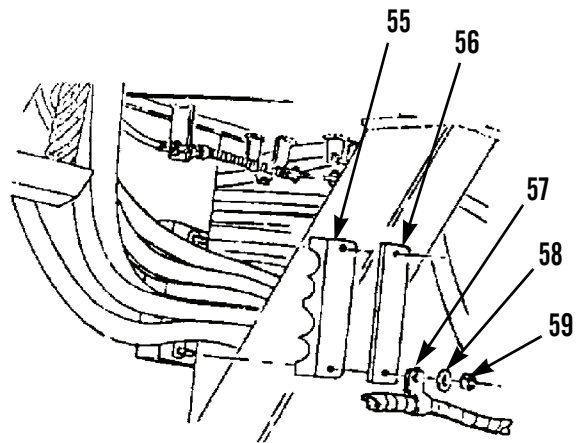18. Install clamp (55), plate (56), and clamp (57) under left side of cab.
19. Install two washers (58) and nuts (59).




397-1651

**OIL COOLER TO RELIEF VALVE AND HYDRAULIC
TANK LINES AND FITTINGS REPLACEMENT - CONTINUED**


0250 00

INSTALLATION - CONTINUED

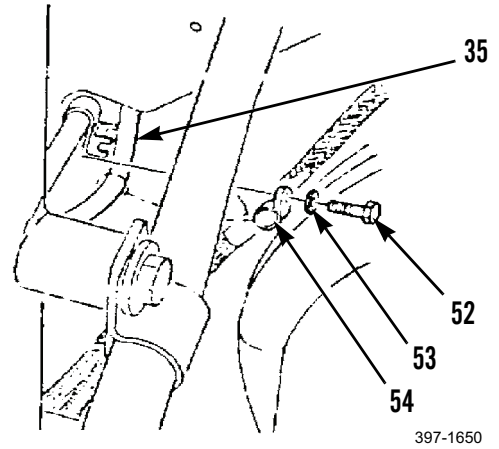20. Install clamp (54), washer (53), and bolt (52) to hose assembly (35) on right frame rail.



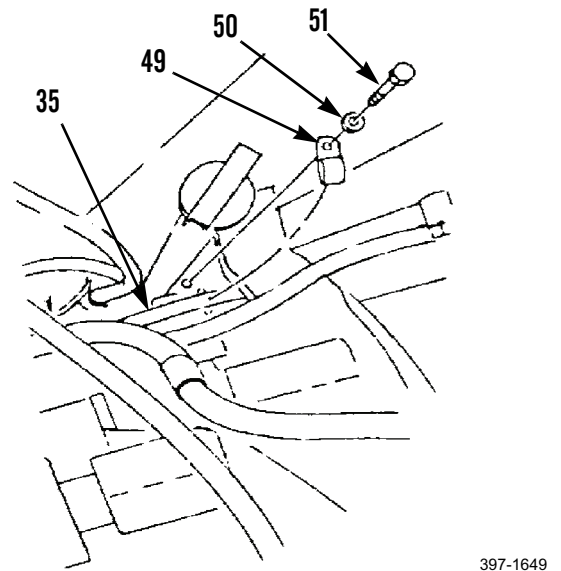21. Install clamp (49), washer (50), and bolt (51) on right frame rail.




OIL COOLER TO RELIEF VALVE AND HYDRAULIC TANK LINES AND FITTINGS REPLACEMENT - CONTINUED


0250 00

INSTALLATION - CONTINUED

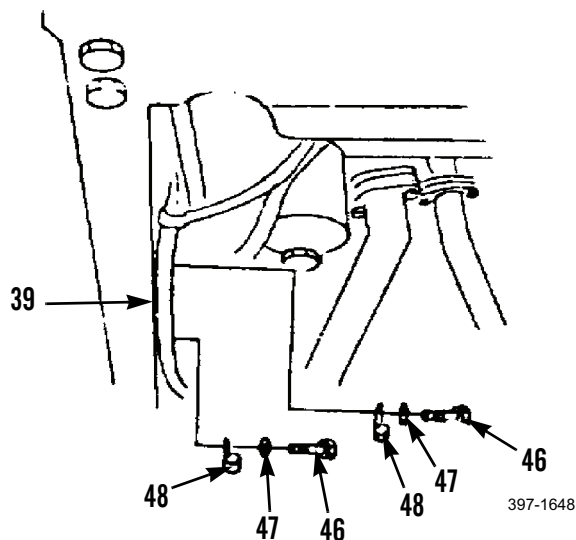22. Install two clamps (48), washers (47), and bolts (46) to hose assembly (39) on left frame rail.



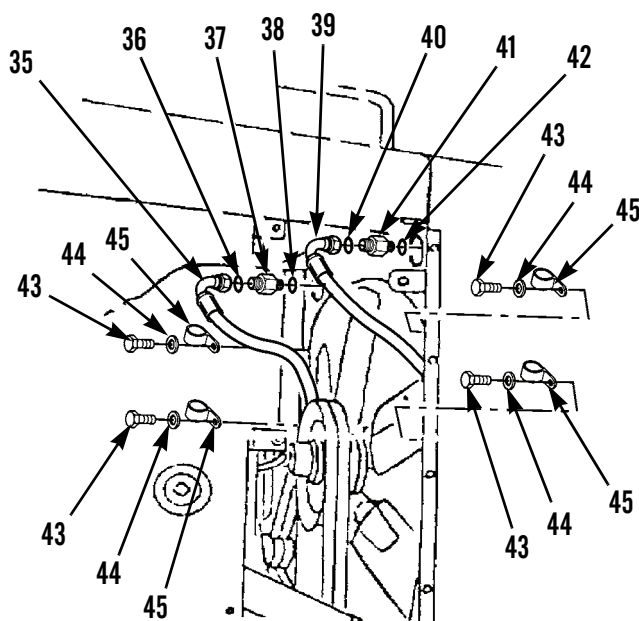23. Install new preformed packing (42) and connector (41) on left side of oil cooler.
24. Install new preformed packing (40) and connect hose assembly (39) to connector (41).
25. Install new preformed packing (38) and connector (37) to right side of oil cooler.
26. Install four clamps (45), washers (44), and bolts (43).
27. Install new preformed packing (36) and connect hose assembly (35) to connector (37).




OIL COOLER TO RELIEF VALVE AND HYDRAULIC TANK LINES AND FITTINGS REPLACEMENT - CONTINUED

0250 00


INSTALLATION - CONTINUED

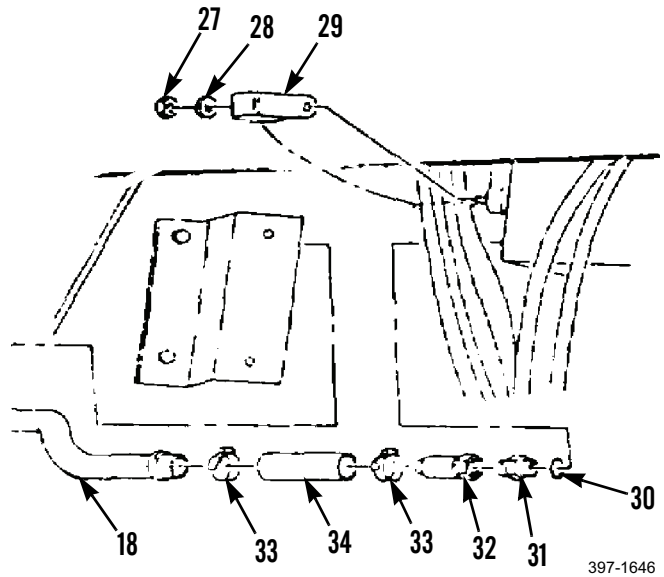28. Install new preformed packing (30), connector (31), and tube assembly (32) to junction block under right-center of cab.
29. Install tube (18), two clamps (33), and hose (34) to machine.
30. Install clip (29), washer (28), and nut (27).



397-1646

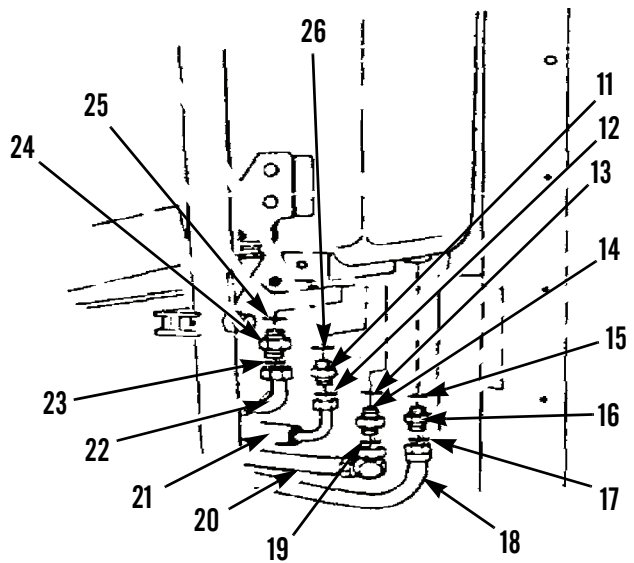31. Install new preformed packing (25) and connector (24) to bottom of hydraulic tank.
32. Install new preformed packing (26) and connector (11).
33. Install new preformed packing (13) and connector (14).
34. Install new preformed packing (15) and connector (16).
35. Install new preformed packings (23, 12, 19, and 17) and connect hose assemblies (22, 21, and 20) and tube (18) to connectors (24, 11, 14, and 16).




397-1645

**OIL COOLER TO RELIEF VALVE AND HYDRAULIC
TANK LINES AND FITTINGS REPLACEMENT - CONTINUED**

0250 00

INSTALLATION - CONTINUED

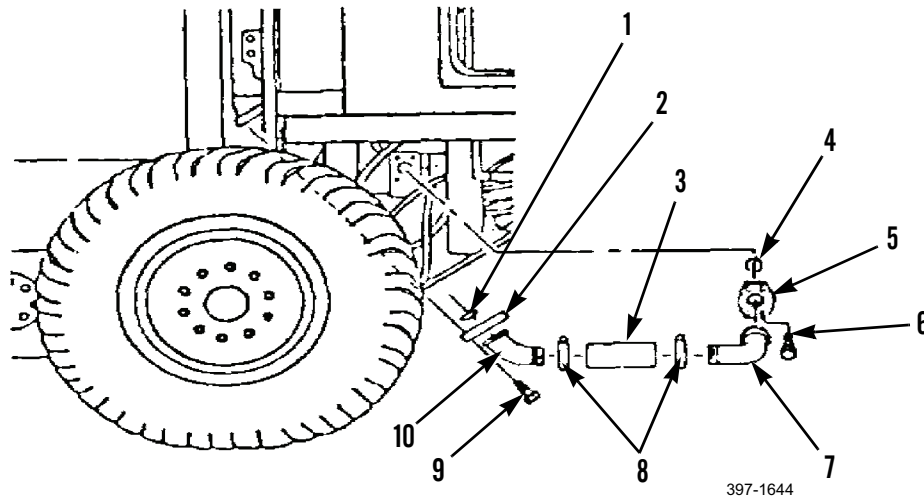36. Install new preformed packing (4), elbow (7), flange (5) to hydraulic pump with four bolts (6).
37. Install new preformed packing (1), tube (10), and seat (2) to bottom of hydraulic tank with four bolts (9).
38. Install two clamps (8) and hose (3).



39. Install side engine panels (WP 0182 00).
40. Check hydraulic oil level and fill as necessary (WP 0216 00).

END OF WORK PACKAGE

AIR CLEANER INDICATOR REPLACEMENT

0251 00

THIS WORK PACKAGE COVERSRemoval, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Sealant, thread (Item 40, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

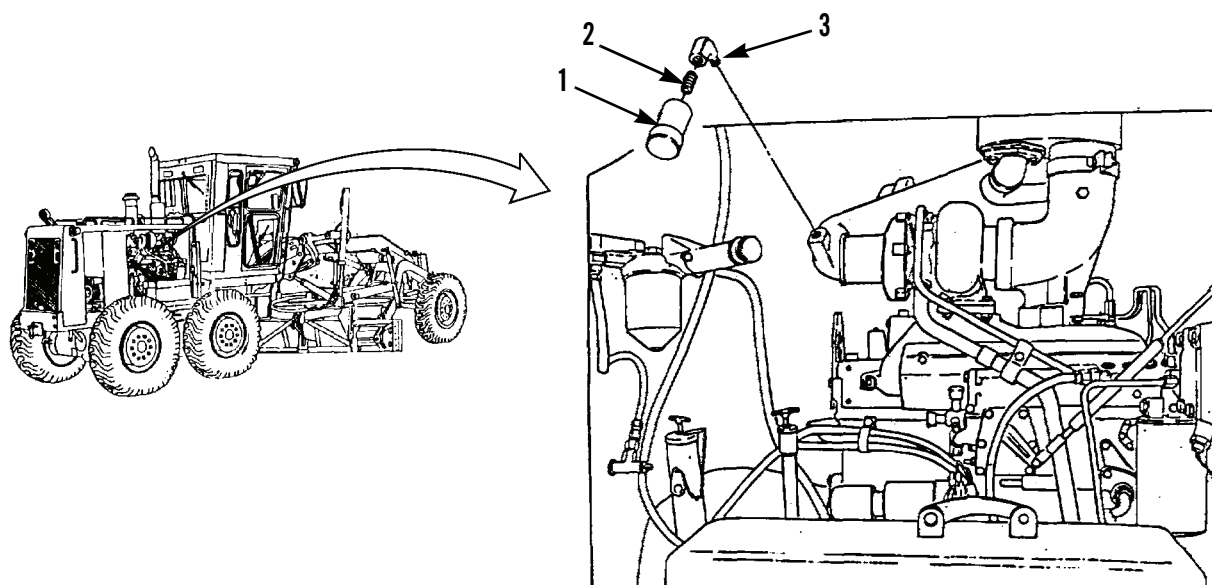
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Right side engine doors opened (TM 5-3805-261-10)

REMOVAL

1. Remove indicator (1) by hand.
2. Remove elbow (3).
3. Remove nipple (2) from elbow (3).




397-808

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

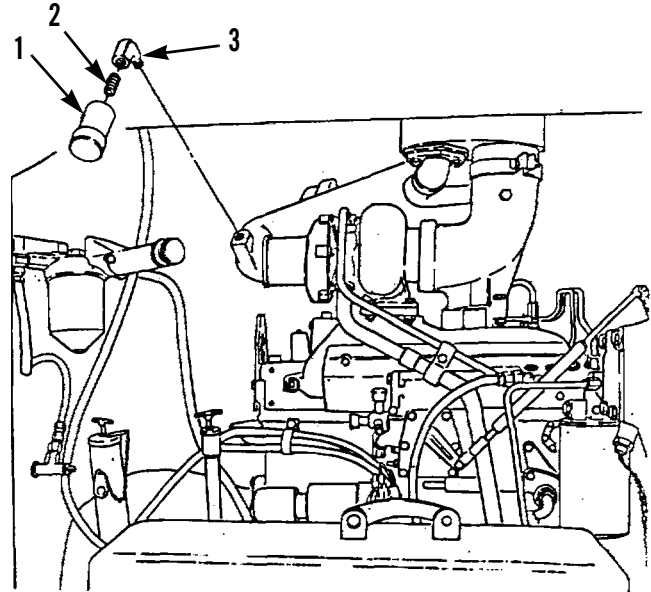1. Install nipple (2) in elbow (3).
2. Install elbow (3).
3. Install indicator (1) by hand on nipple (2).



397-2185

4. Close right side engine doors (TM 5-3805-261-10).

END OF WORK PACKAGE

AIR PRESSURE GAUGES REPLACEMENT

0252 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Adhesive (Item 4, WP 0349 00)

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (4)

Packing, preformed (2)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air pressure relieved (TM 5-3805-261-10)

Right side engine doors opened (TM 5-3805-261-10)

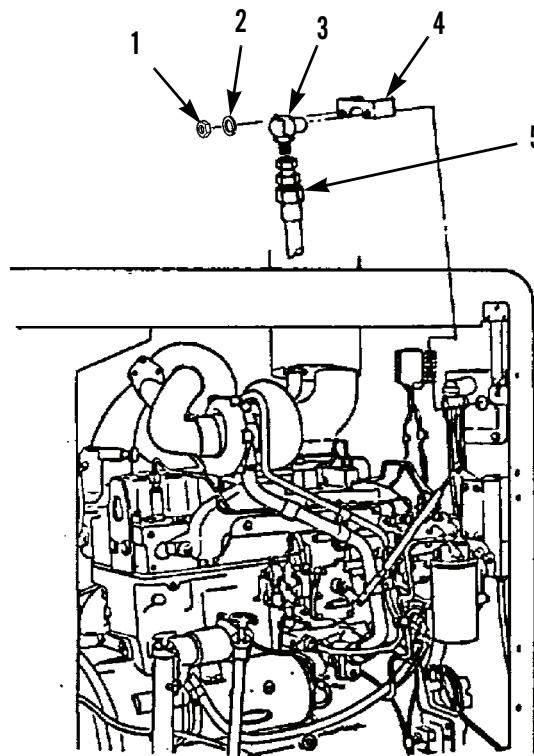
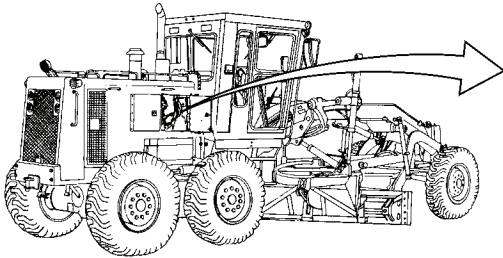
REMOVAL**CAUTION**

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disconnecting to aid in installation.


1. Disconnect two hose assemblies (5) from elbows (3).
2. Remove two elbows (3).
3. Remove four nuts (1), lockwashers (2), and two brackets (4). Discard lockwashers.



397-809

REMOVAL - CONTINUED

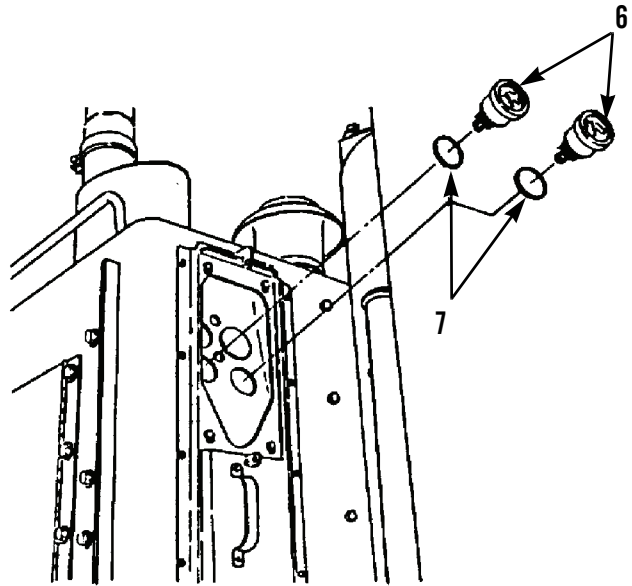4. Remove two air pressure gauges (6) and preformed packings (7) from outside of machine, right-front of engine compartment. Discard preformed packings.



397-810

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install two new preformed packings (7) and air pressure gauges (6) on outside of machine, right-front of engine compartment.
2. Install two brackets (4), four new lockwashers (2), and nuts (1).
3. Install two elbows (3).
4. Apply adhesive and connect two hose assemblies (5) to elbows (3).
5. Close right side engine doors (TM 5-3805-261-10).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air pressure relieved (TM 5-3805-261-10)

Left and right side engine panels removed (WP 0182 00)

REMOVAL

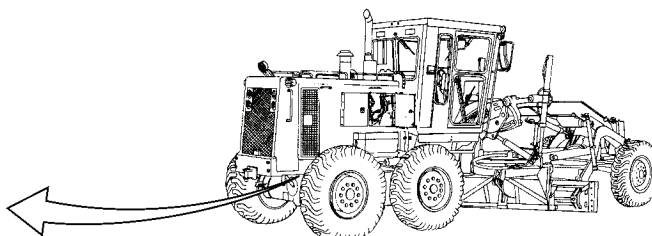
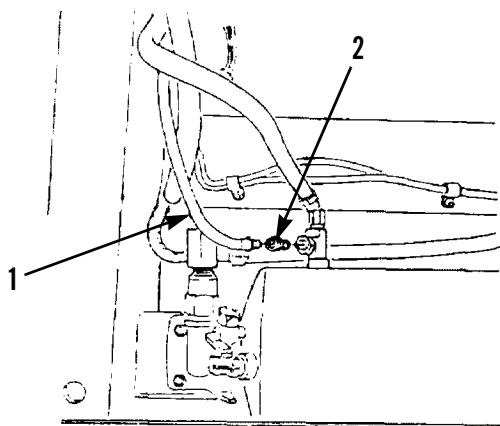
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE

Tag hose assemblies before disassembling to aid in installation.


1. Disconnect hose assembly (1) from air tank under right-rear side of machine.
2. Remove connector (2) from air tank fitting.



397-1657


REMOVAL - CONTINUED

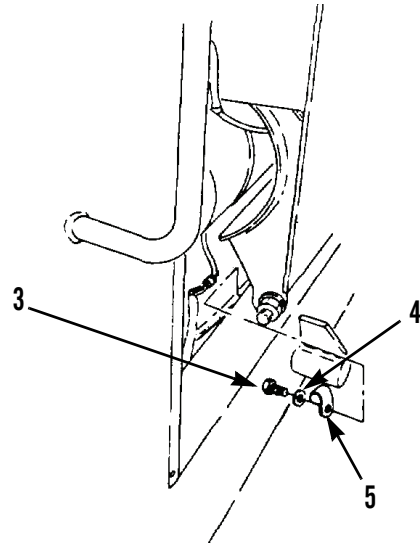3. Remove bolt (3), washer (4), and clip (5).



397-1658

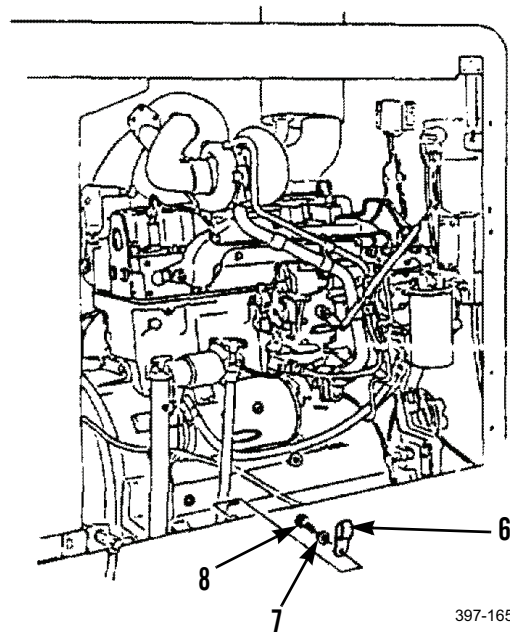
4. Remove bolt (8), washer (7), and clip (6) from right side of engine compartment.




397-1659

REMOVAL - CONTINUED

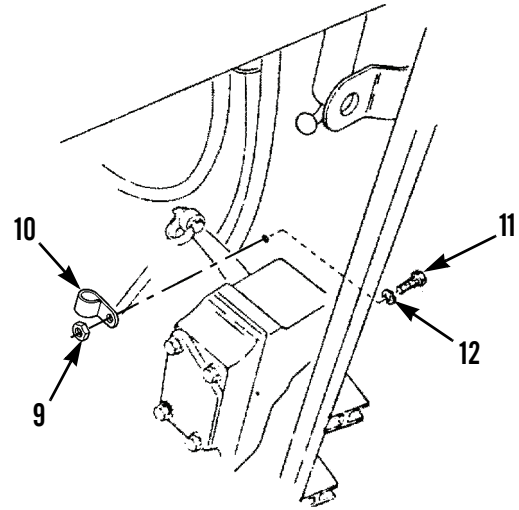5. Remove nut (9), bolt (11), washer (12), and clip (10) from right-front side of engine compartment.




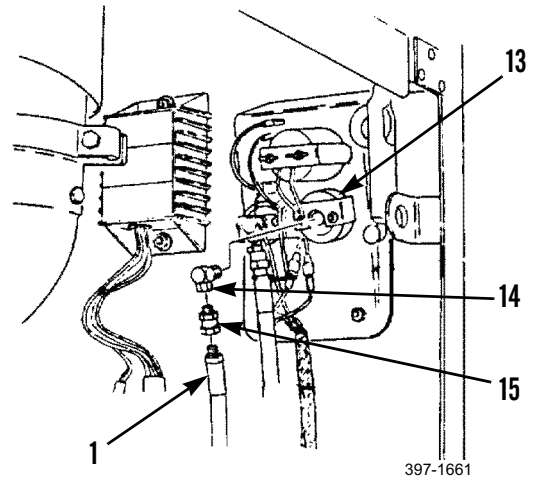6. Disconnect hose assembly (1) from connector (15).
7. Remove hose assembly (1) from machine.
8. Remove connector (15) and elbow (14) from right air pressure gauge (13).




REMOVAL - CONTINUED

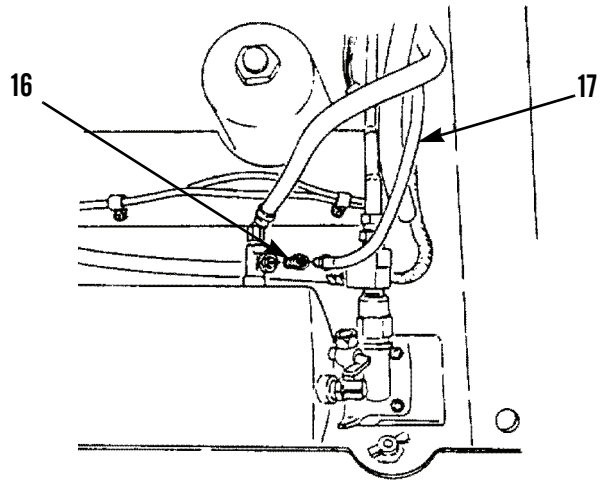9. Disconnect hose assembly (17) from air tank under left-rear side of machine.
10. Remove connector (16) from air tank fitting.



397-1662

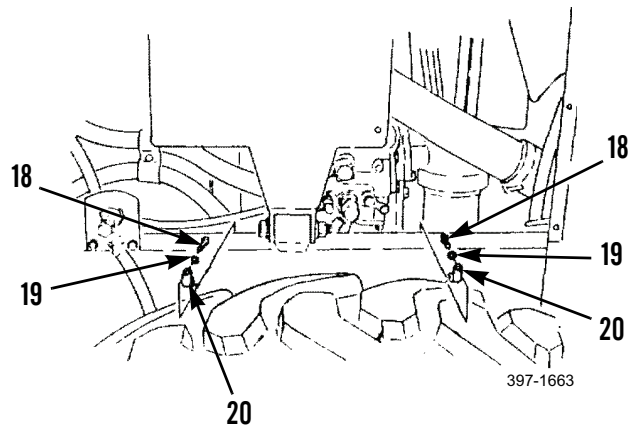
11. Remove two bolts (18), washers (19), and clips (20) from left side of engine compartment.




397-1663

REMOVAL - CONTINUED

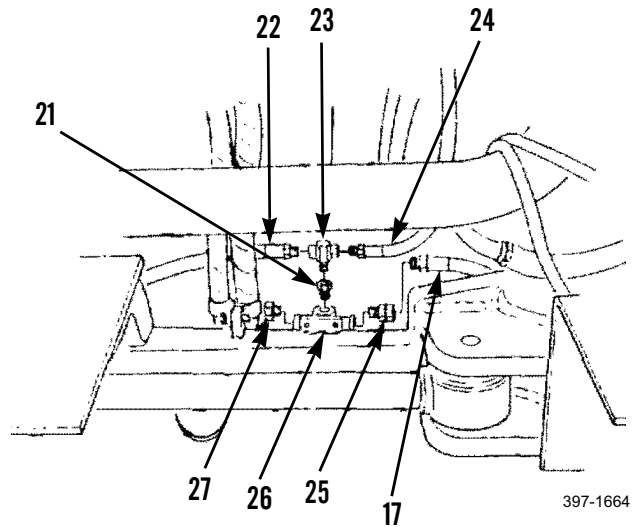12. Disconnect air compressor hose assembly (24) from tee (23).
13. Remove hose assembly (17) and connector (25) from tee (26).
14. Disconnect hose assembly (22) from tee (23).
15. Remove tee (23), bushing (21), and plug (27) from tee (26).




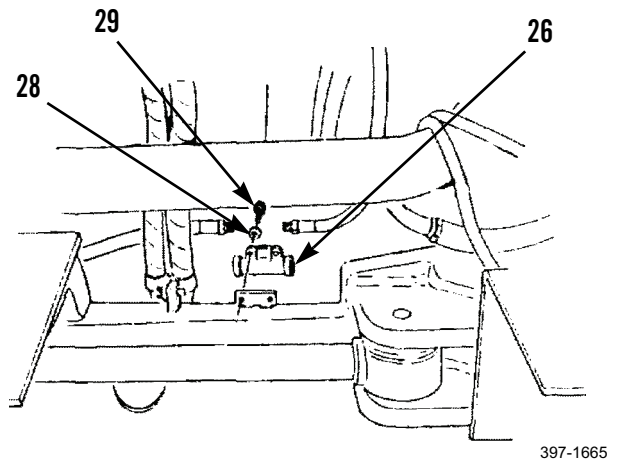16. Remove two bolts (29), washers (28), and tee (26).




REMOVAL - CONTINUED

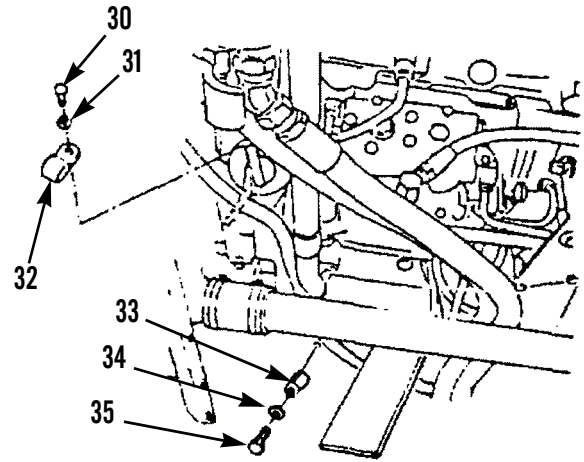17. Remove bolts (30 and 35), washers (31 and 34), and clips (32 and 33) from left-front side of engine.



397-1666

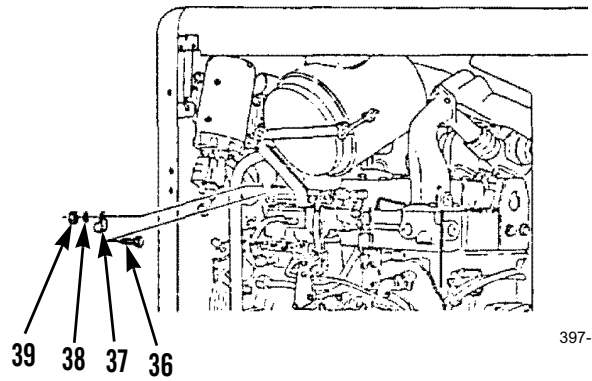
18. Remove nut (39), washer (38), bolt (36), and clip (37).



397-1667

REMOVAL - CONTINUED

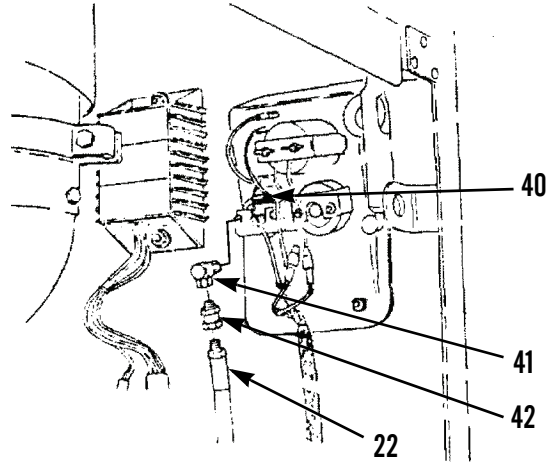19. Disconnect hose assembly (22) from connector (42) from right-front side of engine compartment.
20. Remove hose assembly (22) from machine.
21. Remove connector (42) and elbow (41) from left air pressure gauge (40).




397-1668

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

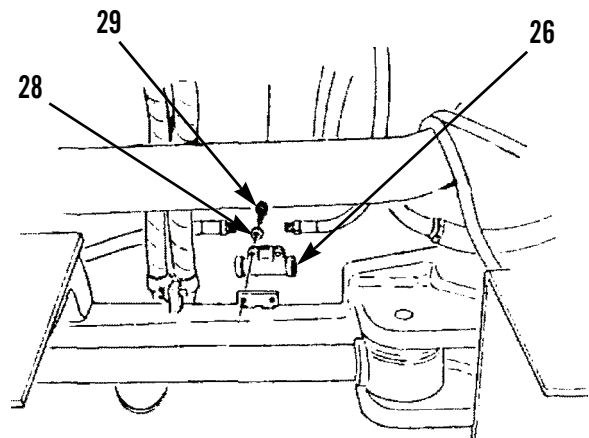
1. Install elbow (41) and connector (42) on left air pressure gauge (40).
2. Position hose assembly (22) on machine.
3. Connect hose assembly (22) to connector (42).
4. Install clip (37), bolt (36), washer (38), and nut (39).
5. Install clips (32 and 33), washers (31 and 34), and bolts (30 and 35).
6. Install tee (26), two washers (28), and bolts (29).




397-1665

INSTALLATION - CONTINUED

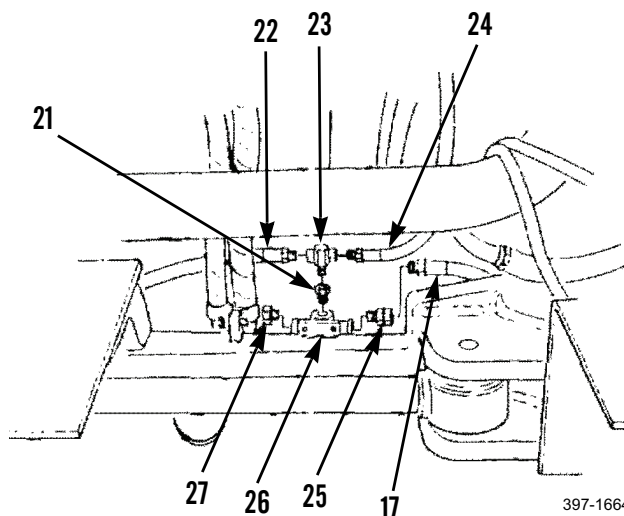
7. Install plug (27), bushing (21), and tee (23) on tee (26).
8. Connect hose assembly (22) to tee (23).
9. Position hose assembly (17) on machine.
10. Install connector (25) on tee (26).
11. Connect hose assembly (17) to tee (26).
12. Connect air compressor hose assembly (24) to tee (23).



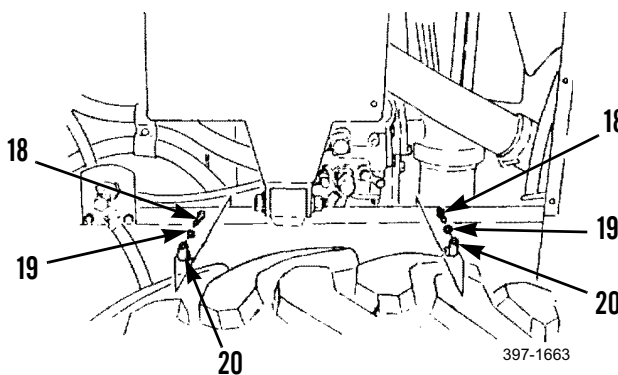13. Install two clips (20), washers (19), and bolts (18) at left side of engine compartment.




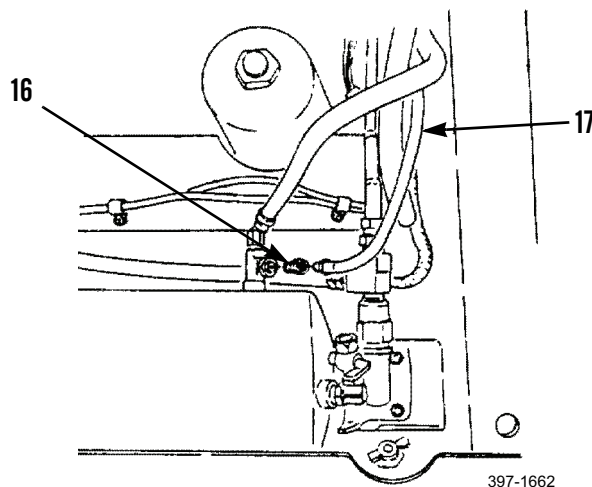14. Install connector (16) on air tank under left-rear side of machine.
15. Install hose assembly (17) to connector (16).




INSTALLATION - CONTINUED

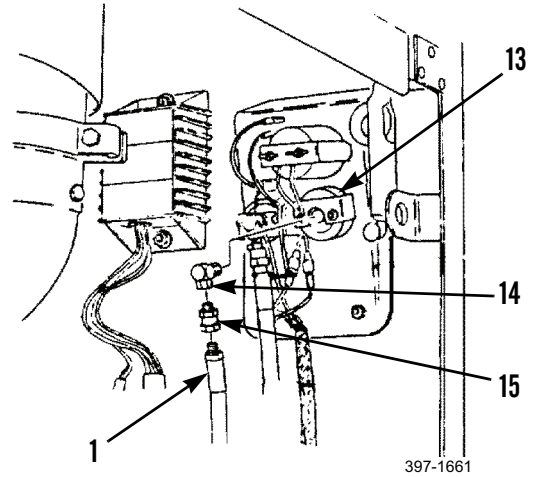16. Install elbow (14) and connector (15) on right air pressure gauge (13) at right-front side of engine compartment.
17. Position hose assembly (1) on machine.
18. Connect hose assembly (1) to connector (15).




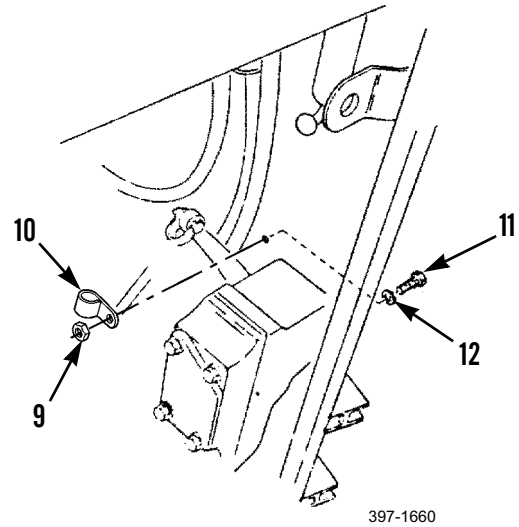19. Install clip (10), washer (12), bolt (11), and nut (9).




INSTALLATION - CONTINUED

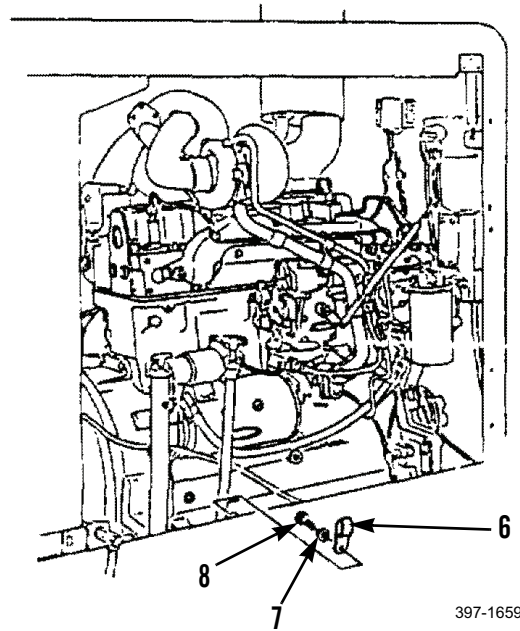20. Install clip (6), washer (7), and bolt (8) at right side of engine compartment.




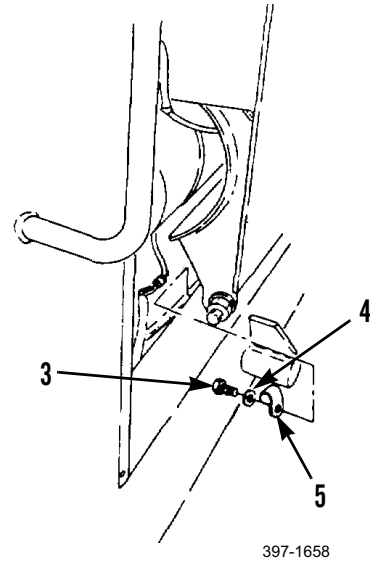21. Install clip (5), washer (4), and bolt (3) on rear-right frame, near alternator.



INSTALLATION - CONTINUED

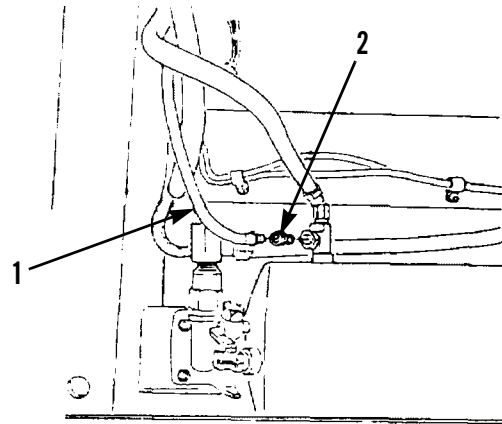22. Install connector (2) on air tank under right-rear side of machine.
23. Install hose assembly (1) to connector (2).



397-1657

24. Install left and right side engine panels (WP 0182 00).

END OF WORK PACKAGE

TEMPERATURE GAUGE REPLACEMENT

0254 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0021 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery cables disconnected (WP 0125 00)

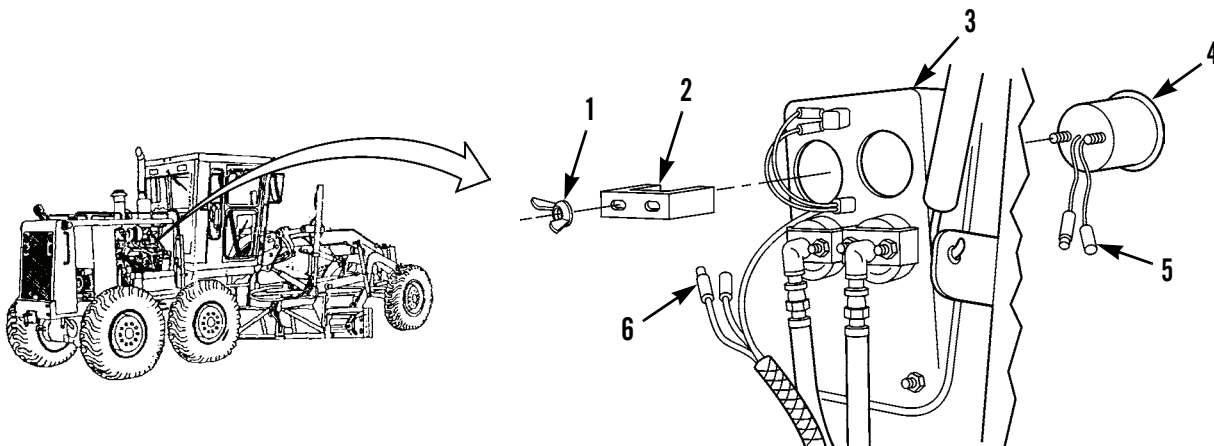
Right side engine doors opened (TM 5-3805-261-10)

REMOVAL

NOTE

Tag wire assemblies before disconnecting to aid in installation.

1. Disconnect two wire assemblies (6) from two connectors (5).
2. Remove two nuts (1), clamp (2), and temperature gauge (4) from instrument panel (3).




397-2188

TEMPERATURE GAUGE REPLACEMENT - CONTINUED**0254 00****CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0021 00.

INSTALLATION

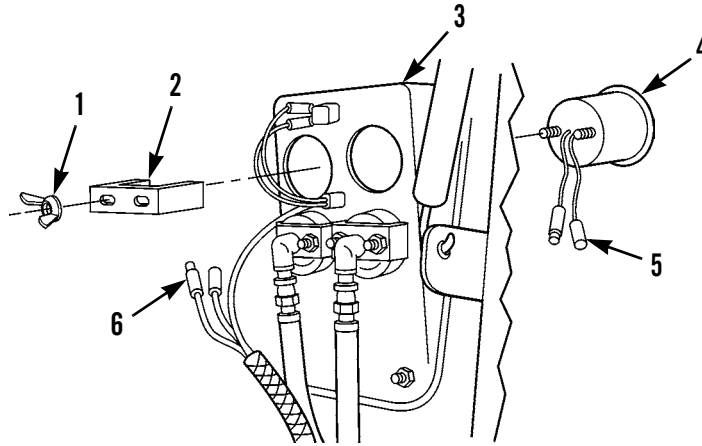1. Install temperature gauge (4), clamp (2), and two nuts (1) on instrument panel (3).
2. Connect two wire assemblies (6) to two connectors (5).



397-2188

3. Close right side engine doors (TM 5-3805-261-10).
4. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

ARTICULATION INDICATOR MECHANISM REPLACEMENT

0255 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Lockwasher (3)

Nut, self-locking

Pin, cotter (4)

References

WP 0020 00

WP 0196 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

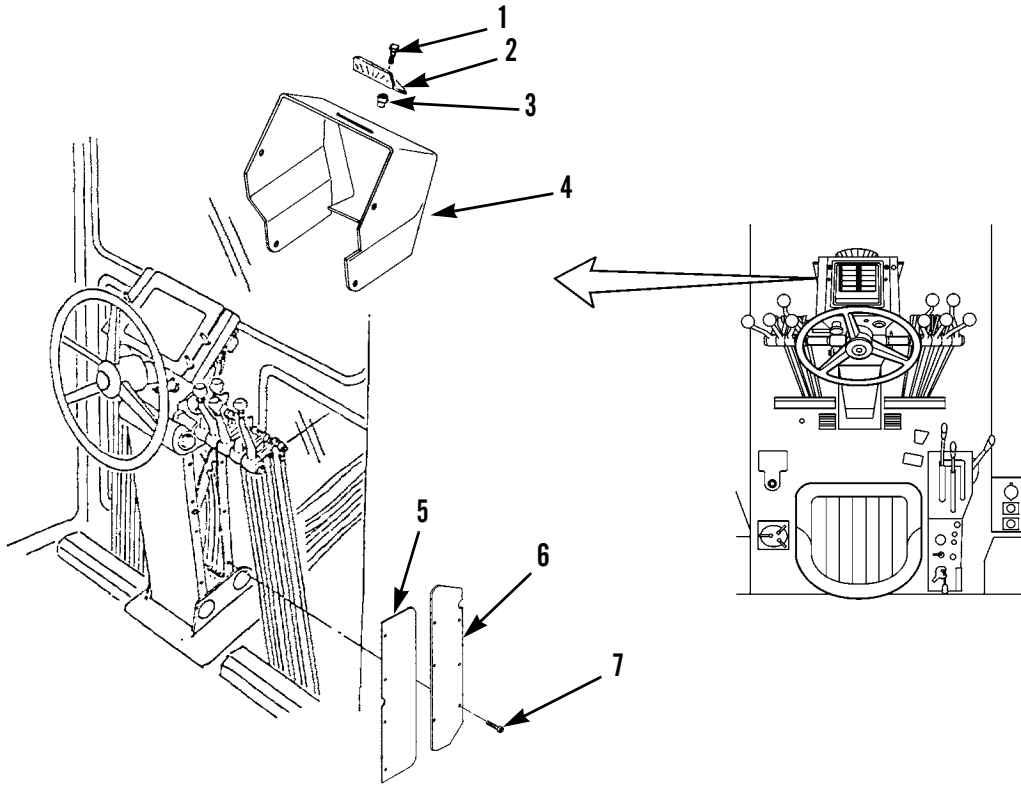
Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Left and right console panels removed (WP 0193 00)

REMOVAL


1. Remove two nuts (3), screws (1), and indicator (2) from steering console hood (4).
2. Remove steering console hood (4) (WP 0196 00).
3. Remove seven screws (7) and plates (5 and 6).



397-2187

REMOVAL - CONTINUED

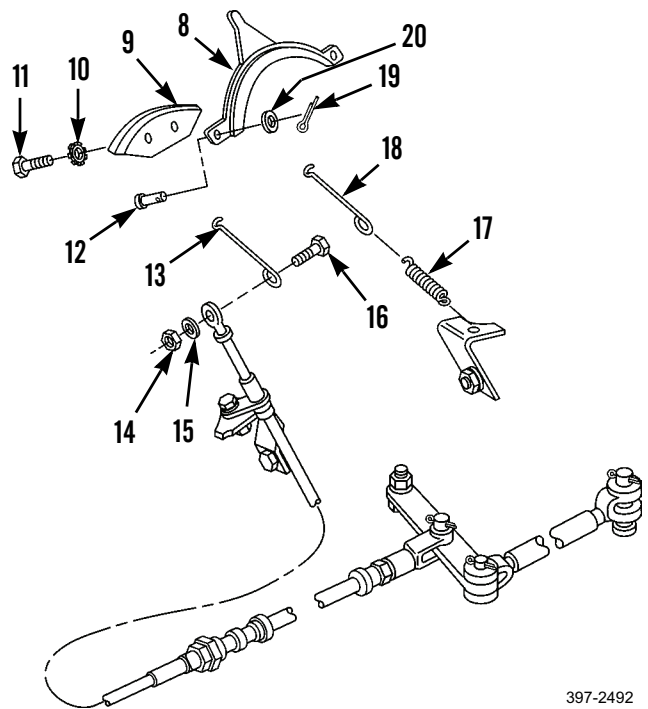4. Remove cotter pin (19), washer (20), and pin (12). Discard cotter pin.
5. Remove nut (14), washer (15), bolt (16), and link (13).
6. Remove link (18), spring (17), and pointer (8).
7. Remove two screws (11), lockwashers (10), and guide (9). Discard lockwashers.




397-2492

NOTE

Tag wire assemblies before disconnecting to aid in installation.

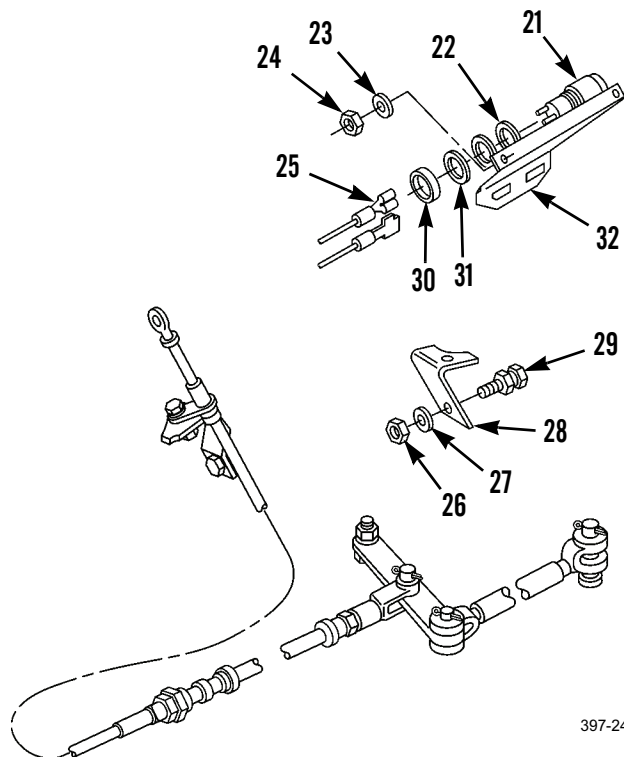8. Disconnect two wire assemblies (25) at terminals from lamp assembly (21).
9. Remove nut (30), lockwasher (31), spacer (22), and lamp assembly (21) from bracket (32). Discard lockwasher.
10. Remove two nuts (24), washers (23), and bracket (32).
11. Remove nut (26), washer (27), and bracket (28) to bolt (29).




397-2493

ARTICULATION INDICATOR MECHANISM REPLACEMENT - CONTINUED

0255 00


REMOVAL - CONTINUED

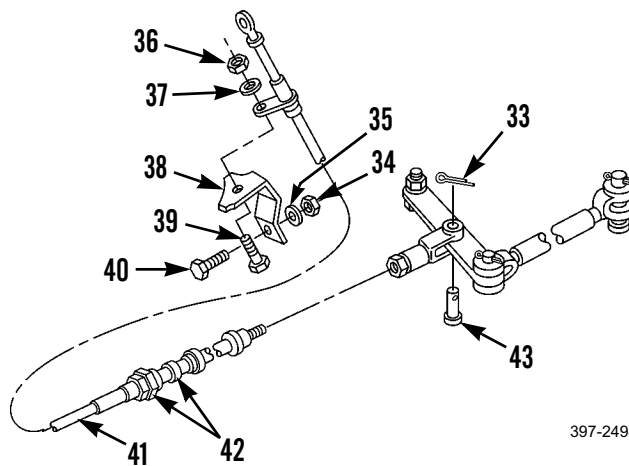12. Remove nut (36), washer (37), and bolt (39).
13. Remove nut (34), washer (35), bolt (40), and bracket (38).
14. Remove cotter pin (33) and pin (43) from left-front side of rear frame. Discard cotter pin.
15. Loosen two nuts (42) and remove cable (41).



397-2494

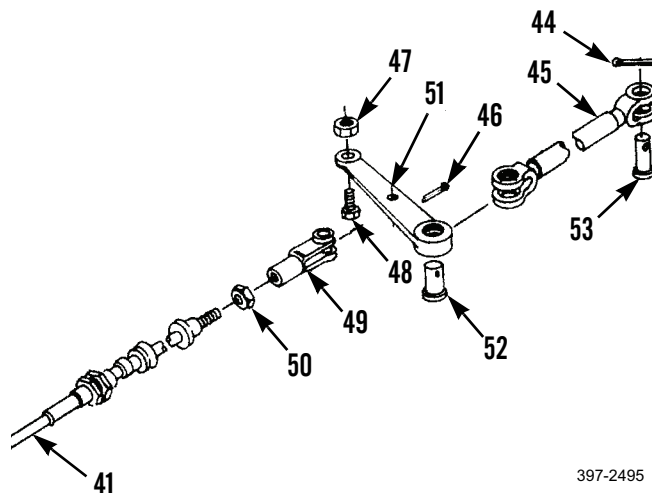16. Remove rod end (49) and nut (50).
17. Remove cotter pin (46), pin (52), cotter pin (44), pin (53), and rod (45). Discard cotter pins.
18. Remove self-locking nut (47), bolt (48), and lever (51). Discard self-locking nut.



397-2495

CLEANING AND INSPECTION

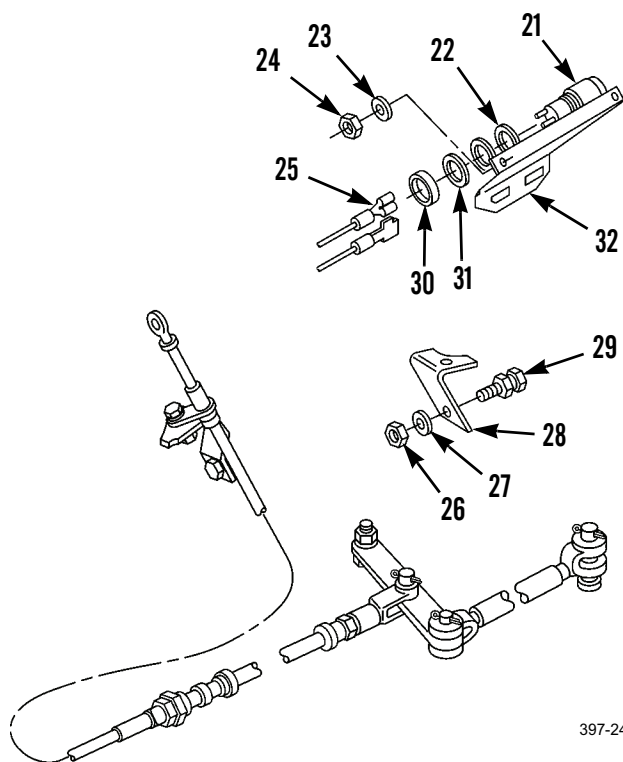
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install lever (51), bolt (48), and new self-locking nut (47) to left-front side of rear frame.
2. Install rod (45), pin (53), new cotter pin (44), pin (52), and new cotter pin (46).
3. Install nut (50) and rod end (49).
4. Install cable (41) and tighten two nuts (42).
5. Install pin (43) and new cotter pin (33).
6. Install bracket (38), bolt (40), washer (35), and nut (34) to steering console.
7. Install bolt (39), washer (37), and nut (36).


INSTALLATION - CONTINUED

8. Install bracket (28), washer (27), and nut (26) to bolt (29).
9. Install bracket (32), two washers (23), and nuts (24).
10. Install lamp assembly (21), spacer (22), new lock-washer (31), and nut (30) on bracket (32).
11. Connect two wire assemblies (25) at terminals to lamp assembly (21).



397-2493

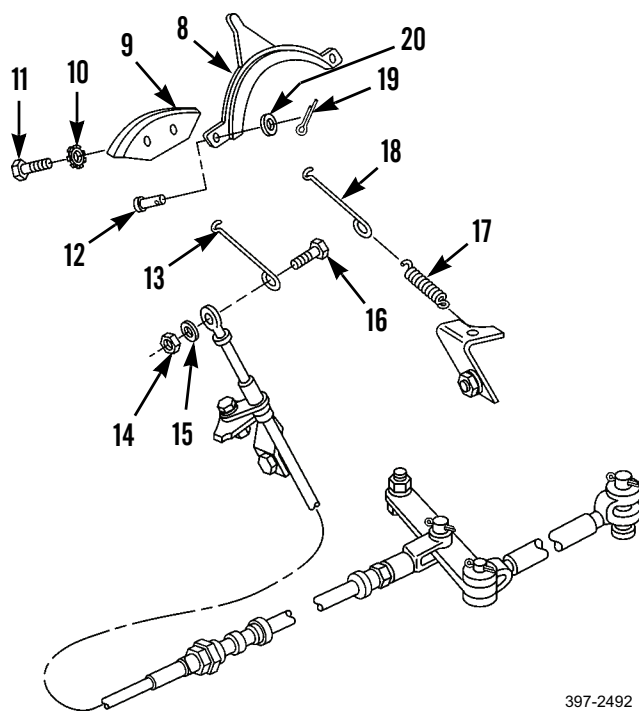
12. Install guide (9), two new lockwashers (10), and screws (11).
13. Install pointer (8), spring (17), and link (18).
14. Install link (13), bolt (16), washer (15), and nut (14).
15. Install pin (12), washer (20), and new cotter pin (19).



397-2492

INSTALLATION - CONTINUED

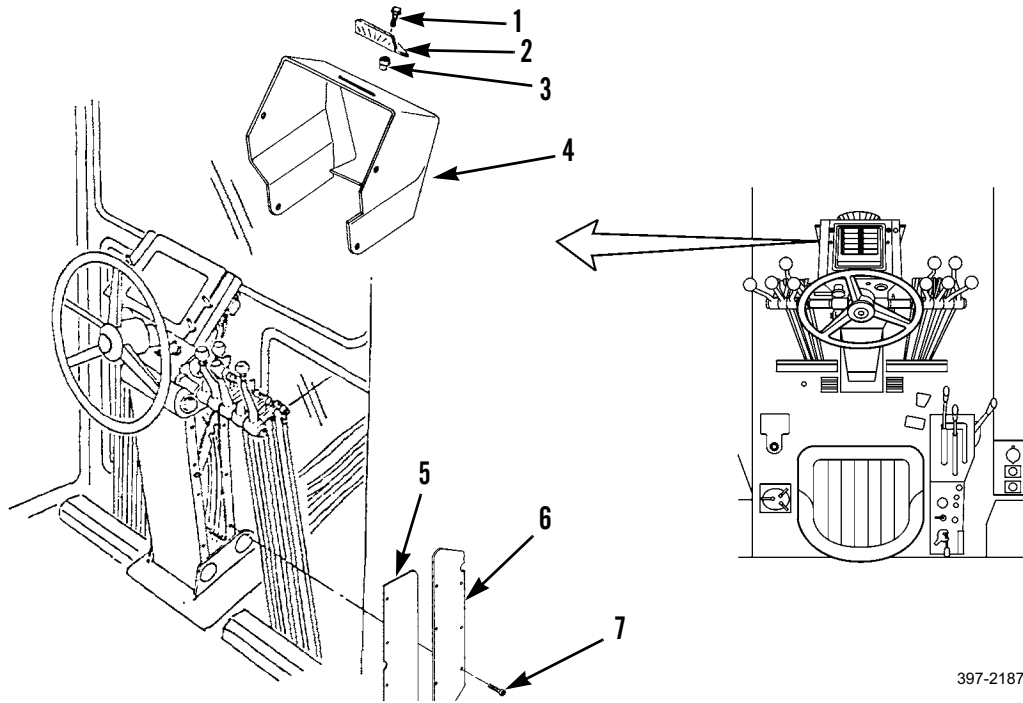16. Install plates (5 and 6) and seven screws (7).
17. Install steering console hood (4) (WP 0196 00).
18. Install indicator (2), two screws (1), and nuts (3) on steering console hood (4).
19. Install left and right console panels (WP 0193 00).



397-2187

END OF WORK PACKAGE

INSTRUMENT PANEL REPLACEMENT

0256 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Equipment Conditions - Continued

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hourmeter removed (WP 0083 00)

Panel lamps removed (WP 0084 00)

Air pressure gauges removed (WP 0252 00)

Temperature gauge removed (WP 0254 00)

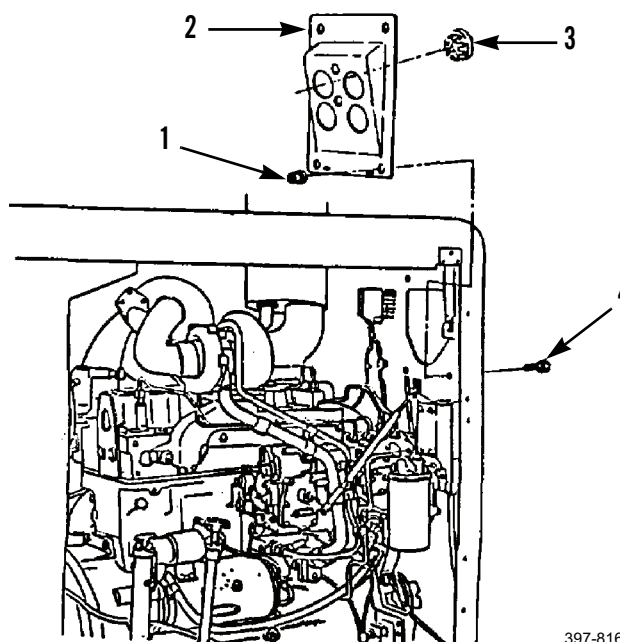
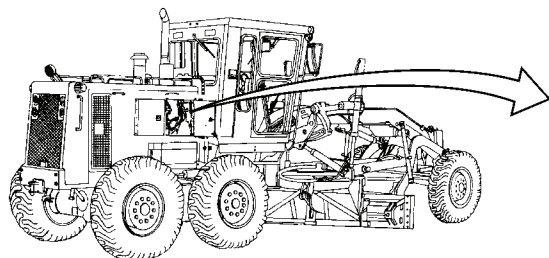
REMOVAL

1. Remove four sleeve nuts (1), screws (4), and mounting base (2).

NOTE

Not all machines have plug.

2. Remove plug (3) from mounting base (2).



397-816

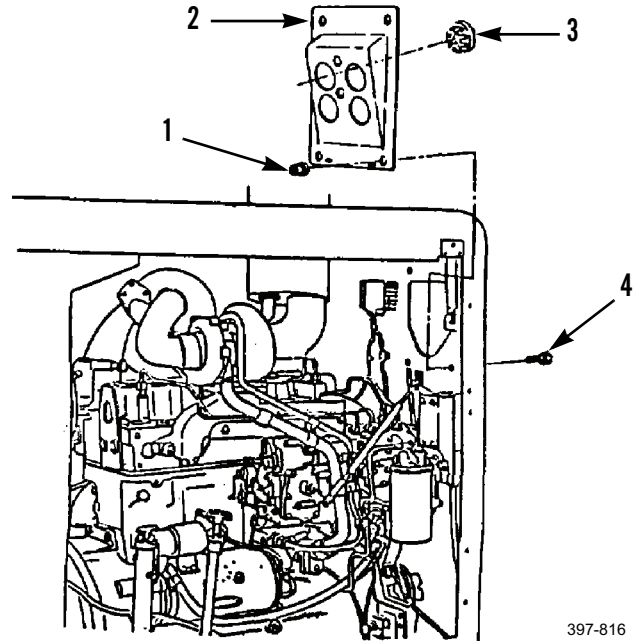
CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION**NOTE**

Not all machines have plug.

1. Install plug (3) in mounting base (2).
2. Install mounting base (2), four screws (4), and sleeve nuts (1).



397-816

3. Install temperature gauge (WP 0254 00).
4. Install air pressure gauges (WP 0252 00).
5. Install panel lamps (WP 0084 00).
6. Install hourmeter (WP 0083 00).

END OF WORK PACKAGE

REMOTE THROTTLE LEVER REPLACEMENT (TYPE II MACHINE)

0257 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

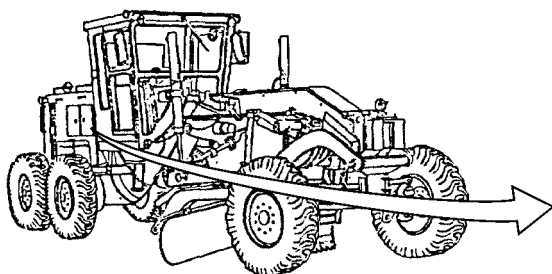
Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

Grasp shaft and knob assembly (1) and turn counterclockwise and remove handle and knob assembly.

INSTALLATION

Insert shaft and knob assembly (1) into threaded hole and turn clockwise until snug.



397-2453

END OF WORK PACKAGE

REMOTE START PANEL REPLACEMENT (TYPE II MACHINE)

0258 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

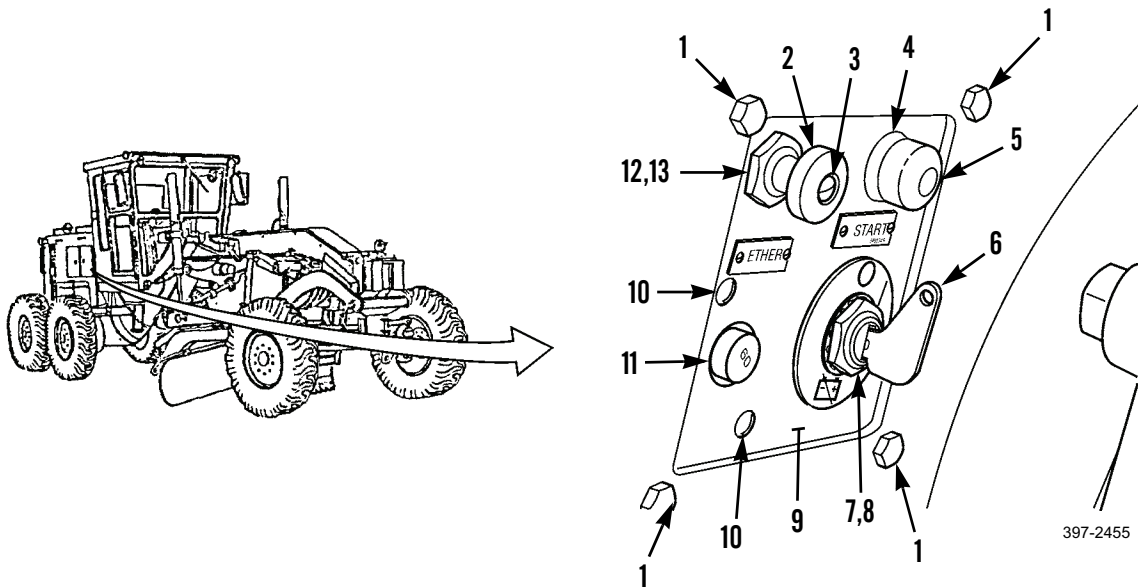
Engine off (TM 5-3805-261-10)

Battery cable disconnected (WP 0125 00)

REMOVAL**NOTE**



Tag all battery cables and wire assemblies before disconnecting to aid in installation.

1. Disconnect three wires from back of start switch (5).
2. Remove rubber boot (4) and remove start switch (5) from remote start panel (9).
3. Disconnect one wire from back of ether switch (13). Leave jumper wires connected.
4. Remove screw (3) and ether switch button (2).
5. Remove jamnut (12) and remove ether switch (13) from remote start panel (9).
6. disconnect four wires from back of remote battery disconnect switch (8).
7. Remove key (6) from remote battery disconnect switch (8). Remove jamnut (7) and remove remote battery disconnect switch from remote start panel (9).



REMOVAL - CONTINUED

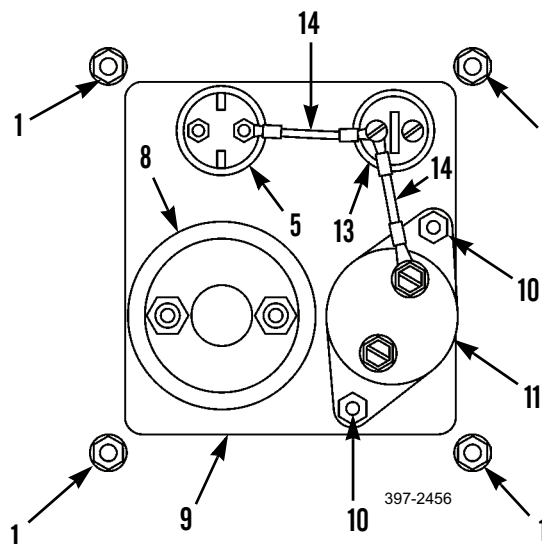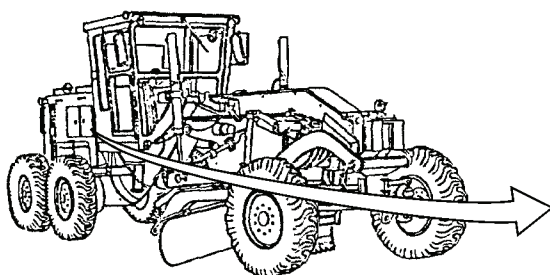8. Disconnect four wires from back of circuit breaker switch (11).
9. Remove two mounting screws and nuts (10) and remove circuit breaker switch (11) from remote start panel (9).
10. Remove four mounting nuts and bolts (1) and remove remote start panel (9) from machine.

**CLEANING AND INSTALLATION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install remote start panel (9) and four mounting nuts and bolts (1).
2. Install circuit breaker switch (11) and two mounting screws and nuts (10).
3. Install remote battery disconnect (8) and jamnut (7) and install key (6).
4. Install ether switch (13) and jamnut (12).
5. Install ether switch button (2) and screw (3).
6. Install start switch (5) and rubber boot (4).
7. Connect all wires.
8. Connect battery cables (WP 0125 00).

END OF WORK PACKAGE

BLADE (MOLDBOARD) ASSEMBLY REPLACEMENT

0259 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Bracket, link (2) (Item 17, WP 0348 00)

Sling (Item 78, WP 0348 00)

Chain

Lifting device, 1,500-lb capacity

Wood blocks

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Blade tip cylinder disconnected (WP 0334 00)

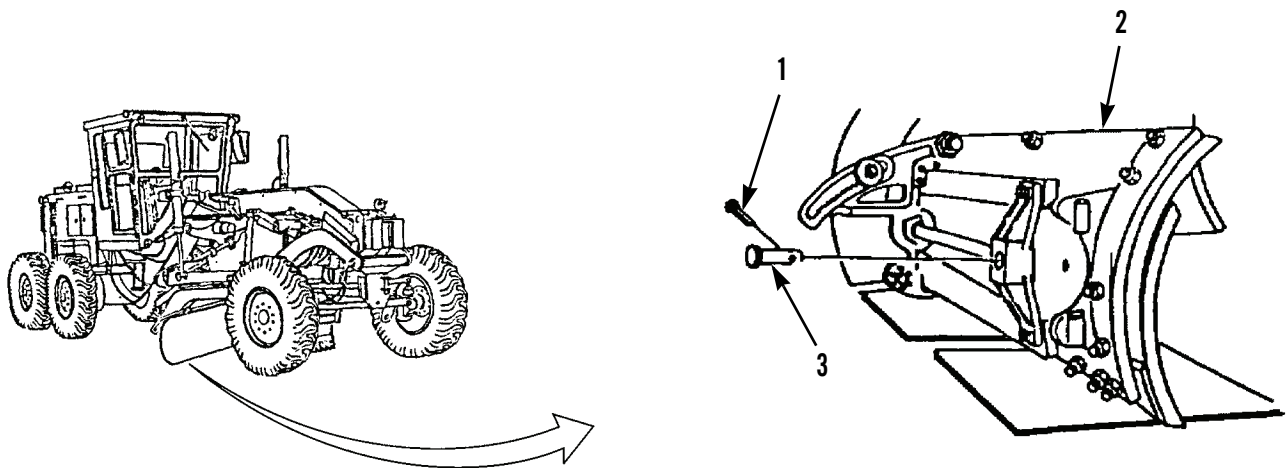
Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Pin, cotter

REMOVAL


1. Move blade assembly (2) as far to right as possible and lower until just off ground.
2. Remove cotter pin (1) and pin (3). Discard cotter pin.



397-1669

REMOVAL - CONTINUED

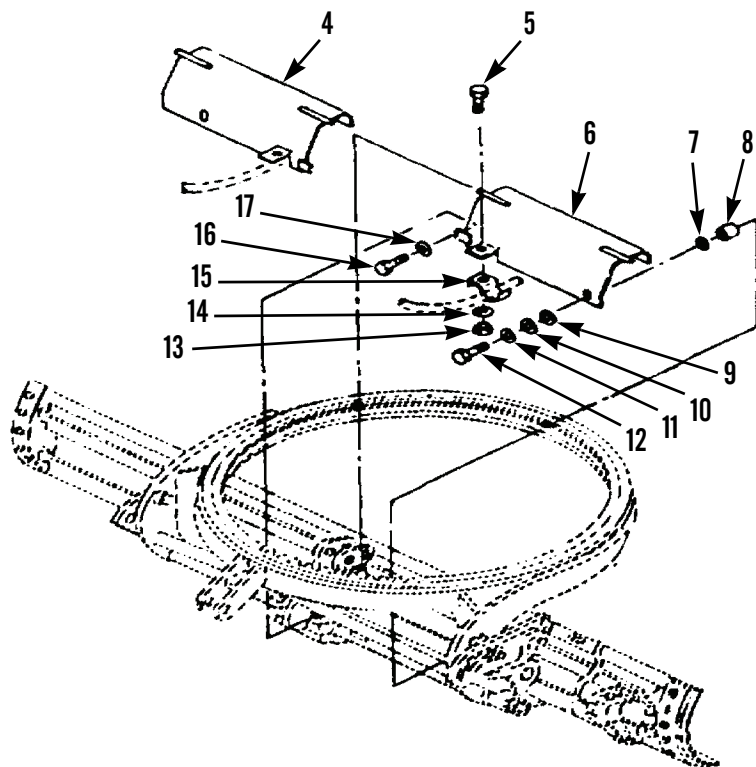3. Start engine (TM 5-3805-261-10).
4. Operate blade sideshift control to retract cylinder rod into cylinder as far as possible.
5. Remove two nuts (13), washers (14), bolts (5), and clamps (15).
6. Remove two bolts (12), washers (10 and 11), and spacers (9).
7. Remove two bolts (16) and washers (17).
8. Remove guards (4 and 6), two washers (7), and spacers (8).



397-1613

9. Position wood blocks between blade bracket (18) and end of cylinder rod (19).
10. Operate blade sideshift control and expand cylinder rod (19) to push blade assembly (2) away from circle (20) until two link brackets can be installed.

WARNING

Use grade 8 3/4-in. bolts and nuts to attach link brackets. Tighten nuts to 265 lb-ft (359 Nm). Failure to follow this warning may cause injury or death to personnel.

11. Install two link brackets on blade assembly (2).

REMOVAL - CONTINUED



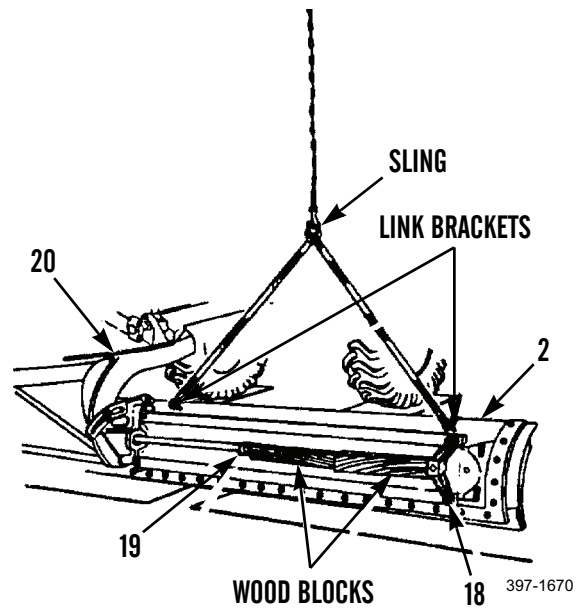
WARNING

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.


NOTE

Blade assembly weighs 1,500 lb (680 kg).

12. With assistance, attach sling to two link brackets on blade assembly (2).
13. Remove blade assembly (2). Operate blade sideshift control and extend cylinder rod (19) to push blade assembly away from circle (20).
14. Stop engine.
15. Remove sling and two link brackets.



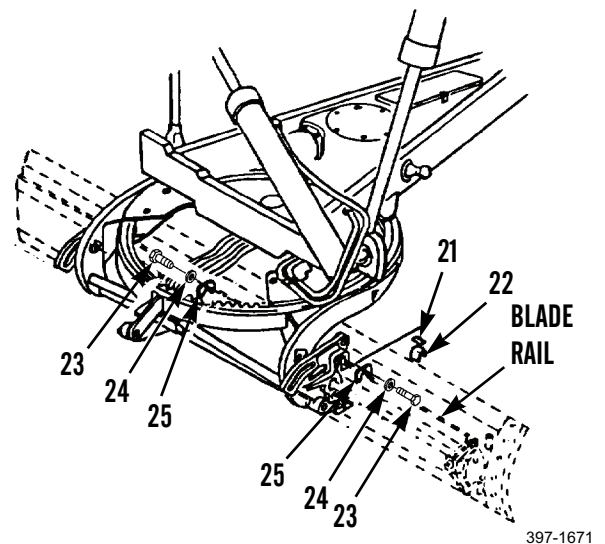16. Remove 40 bolts (23), washers (24), 10 plates (25), 5 strips (22), and shim(s) (21).



CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

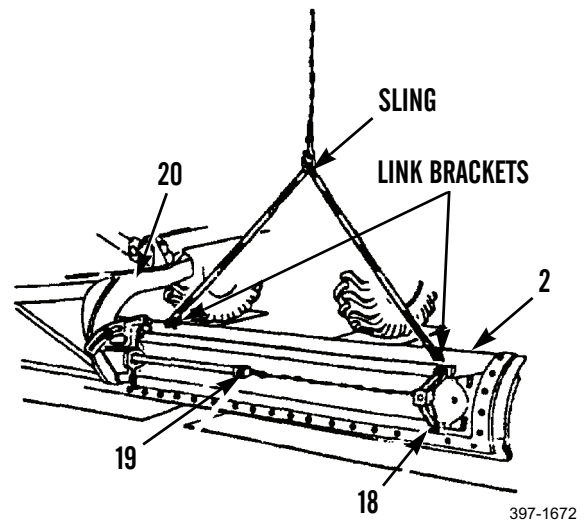
INSTALLATION**WARNING**

- Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.
- Use grade 8 3/4-in. bolts and nuts to attach link brackets. Tighten nuts to 265 lb-ft (359 Nm). Failure to follow this warning may cause injury or death to personnel.

NOTE

Blade assembly weighs 1,500 lb (680 kg).


1. Install two link brackets on blade assembly (2).
2. With assistance, attach sling to two link brackets on blade assembly (2).
3. Use sling to install blade assembly (2) on circle (20).
4. Attach chain to bracket (18) and end of cylinder rod (19).
5. Start engine (TM 5-3805-261-10).
6. Operate blade sideshift control to retract cylinder rod (19) and blade assembly (2) up to link bracket nearest to circle (20).
7. Remove one side of sling and one of two link brackets from side of blade assembly (2) nearest to circle (20). Remove chain from bracket (18) and end of cylinder rod (19).



397-1672


INSTALLATION - CONTINUED

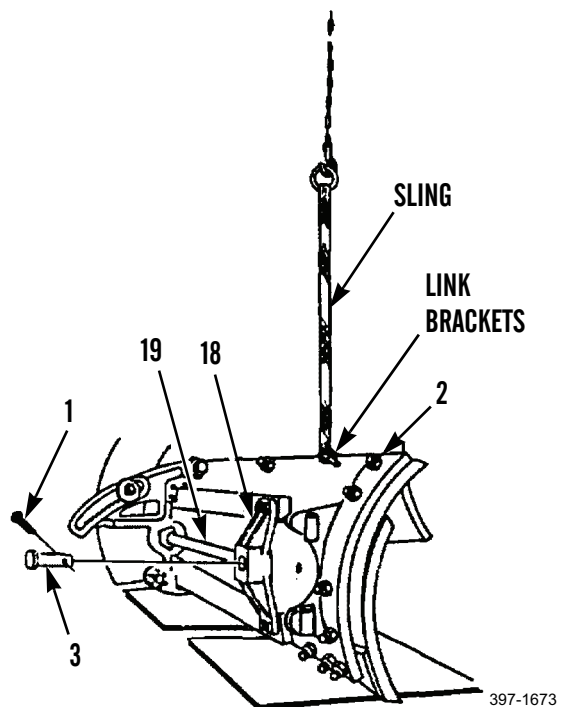8. Operate blade sideshift control and extend cylinder rod (19) to align with bracket (18) on blade assembly (2).
9. Install pin (3) and new cotter pin (1).
10. Operate blade sideshift control to retract cylinder rod (19) and blade assembly (2) into place.
11. Remove remaining side of sling and second of two link brackets from blade assembly (2).

**NOTE**


Shims are installed between strip and blade bracket. Add or remove shim(s) as required to get a minimum of 0.125 in. (3.2 mm) gap between blade rail and strip.

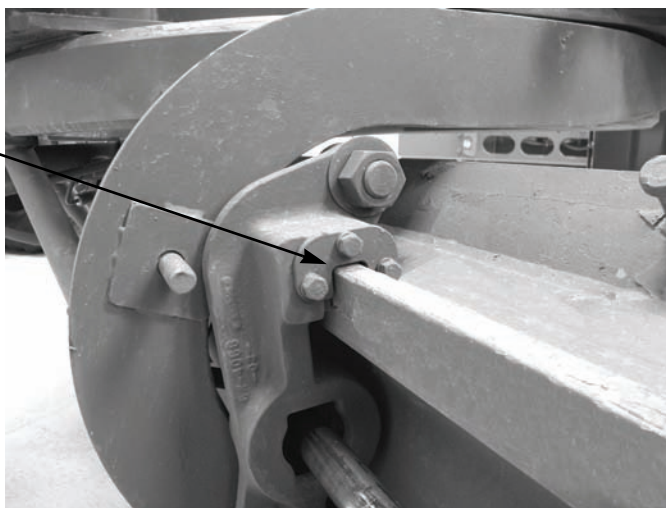**MUST BE
MORE THAN
1/8 IN. GAP
(3.2 MM)**




INSTALLATION - CONTINUED

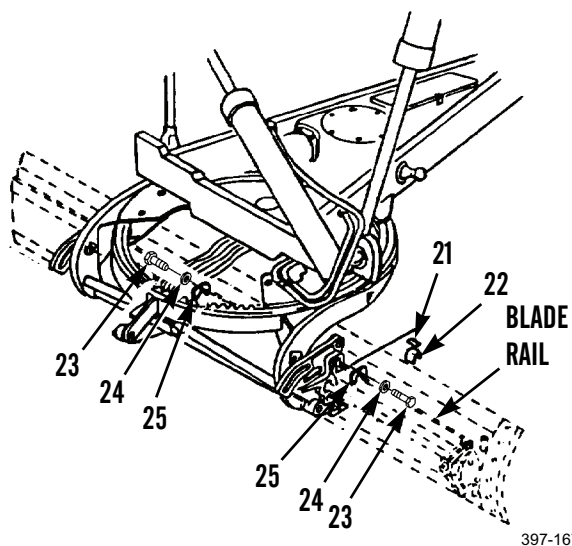12. Install shim(s) (21), 5 strips (22), 10 plates (25), 40 washers (24), and bolts (23).



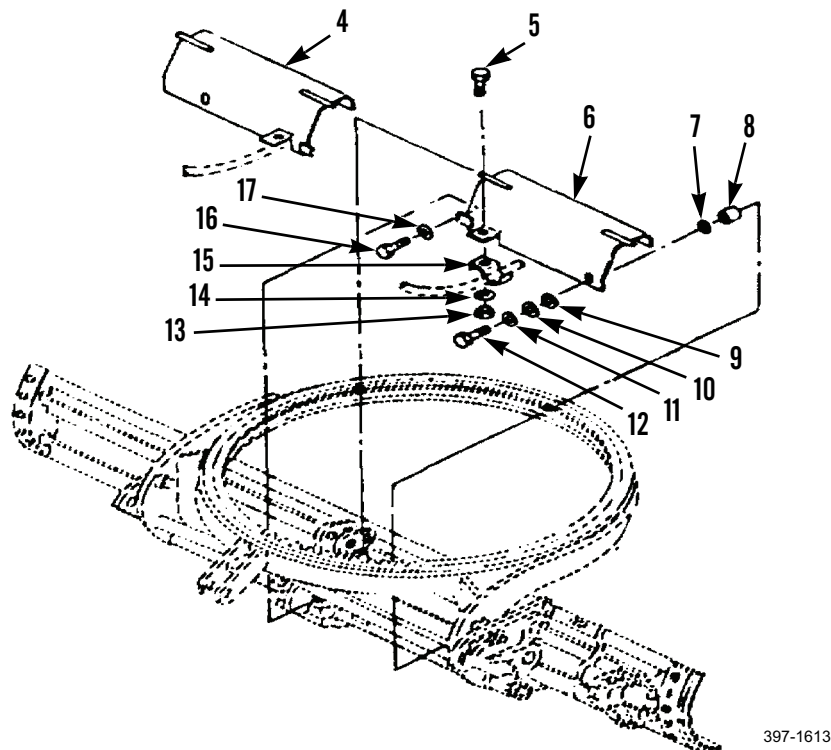13. Install two spacers (8), washers (7), and guards (6 and 4).
14. Install two washers (17) and bolts (16).
15. Install two spacers (9), washers (11 and 10), and bolts (12).
16. Install two clamps (15), bolts (5), washers (14), and nuts (13).



17. Connect blade cylinder (WP 0334 00).

END OF WORK PACKAGE

CENTERSHIFT LOCK ASSEMBLY REPLACEMENT

0260 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Oil, lubricating (Item 27, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air pressured relieved (TM 5-3805-261-10)

REMOVAL

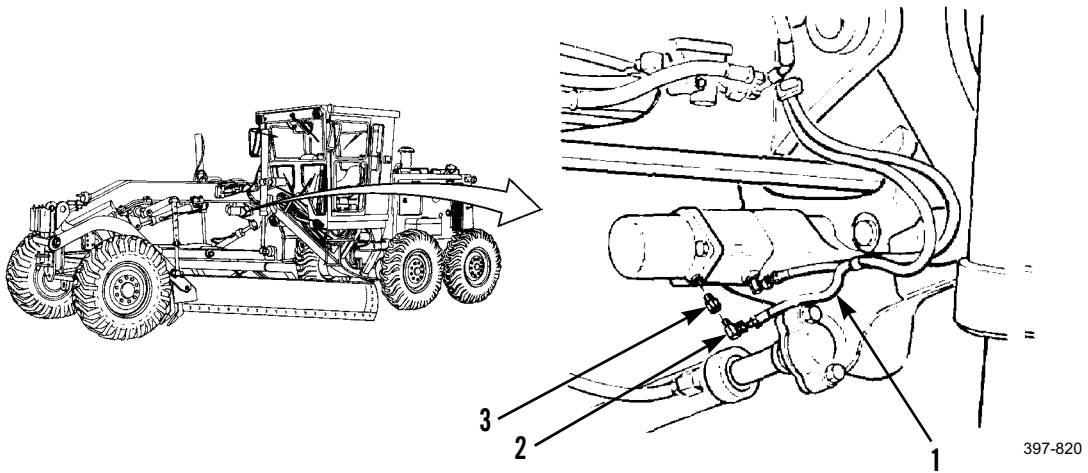
CAUTION

Cap hose ends and plug open ports to prevent contamination.


NOTE

Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assembly (1).
2. Remove elbow (2) and adapter (3).



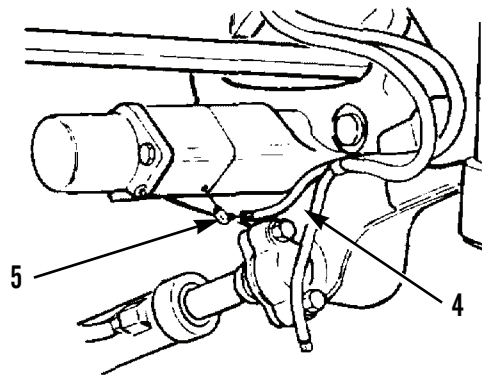3. Disconnect hose assembly (4).
4. Remove elbow (5).




REMOVAL - CONTINUED




WARNING

Spring is compressed under high tension. Remove bolts slowly to relieve tension on spring gradually. Failure to follow this procedure may cause injury to personnel.

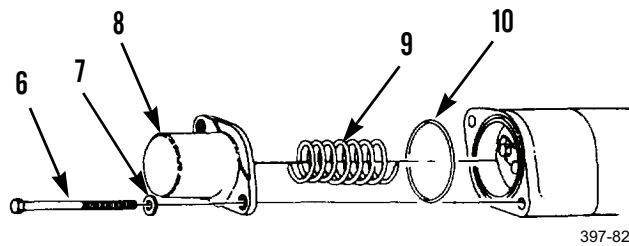5. Remove two bolts (6), washers (7), housing (8), and spring (9).
6. Remove and discard preformed packing (10).




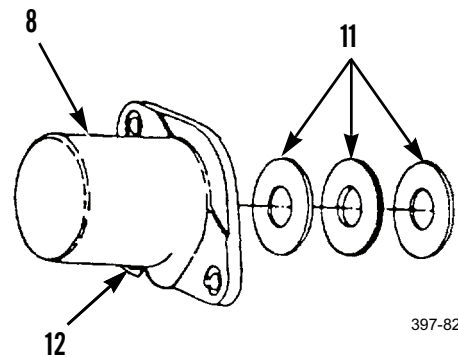7. Remove three washers (11) from housing (8).
8. Remove plug (12) from housing (8).




REMOVAL - CONTINUED

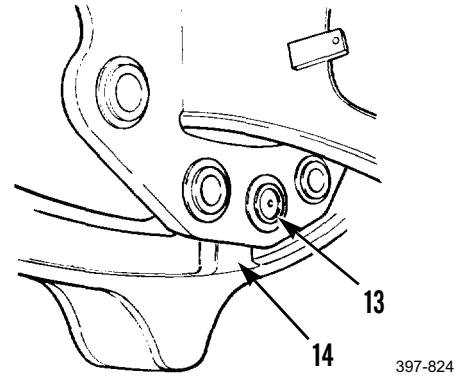9. Use a hammer and brass driver to strike pin (13) to loosen it from lock bar (14).



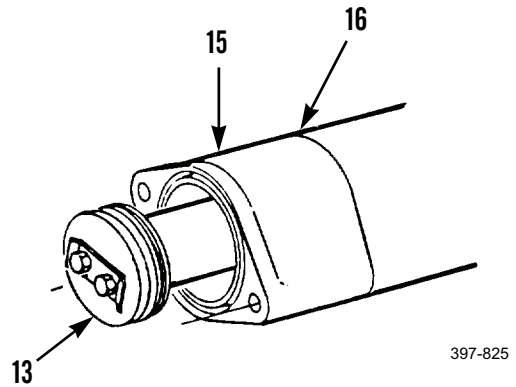
10. Remove pin (13) and housing assembly (15) from blade lift bar (16).

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

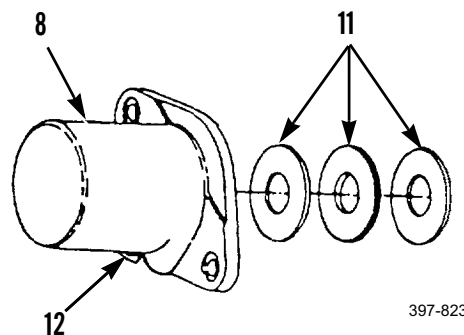1. Coat inside surface of housing assembly (15) with lubricating oil.
2. Coat outside of pin (13) with lubricating oil.
3. Position housing assembly (15) against blade lift bar (16), aligning holes of housing assembly with holes in blade lift bar.
4. Install pin (13) into housing assembly (15) and blade lift bar (16).
5. Install plug (12) on housing (8).
6. Install three washers (11).




7. Install new preformed packing (10).

WARNING


Bolts that hold housing to blade lift bar must be tightened evenly, a thread or two at a time, to prevent injury to personnel or damage to housing.

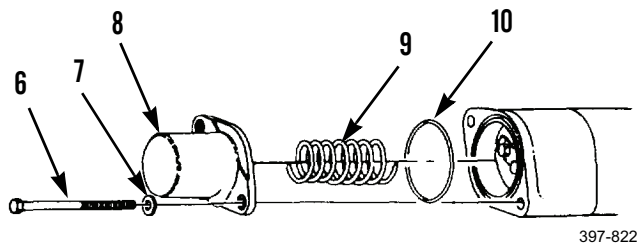8. Install spring (9), housing (8), two washers (7), and bolts (6).




INSTALLATION - CONTINUED

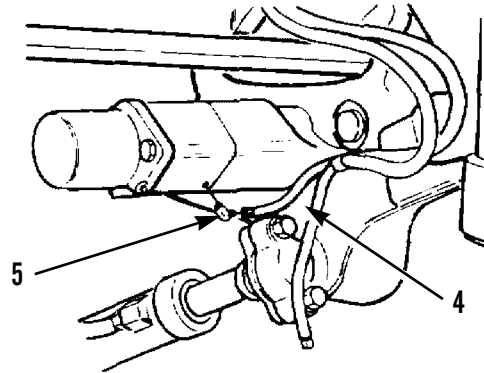9. Install elbow (5).
10. Connect hose assembly (4).



397-821

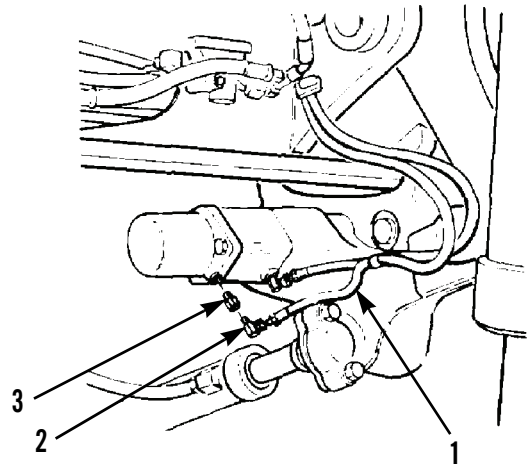11. Install adapter (3) and elbow (2).
12. Connect hose assembly (1).



397-2191

13. Turn disconnect switch to ON position and start engine (TM 5-3805-261-10).
14. Check for leaks.
15. Stop engine.

END OF WORK PACKAGE

CENTERSHIFT LOCK CONTROL VALVE ASSEMBLY REPLACEMENT

0261 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Air pressure relieved (TM 5-3805-261-10)

Control console cover removed (WP 0082 00)

Left and right console panels removed (WP 0193 00)

REMOVAL

1. Remove and discard tie strap (2).

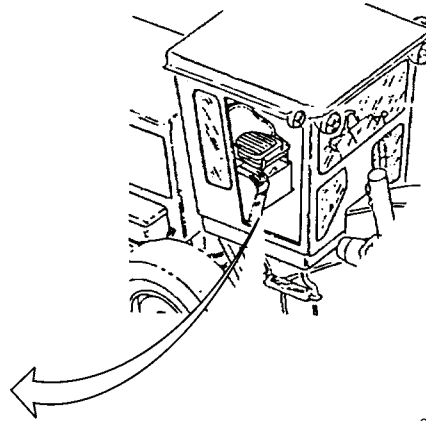
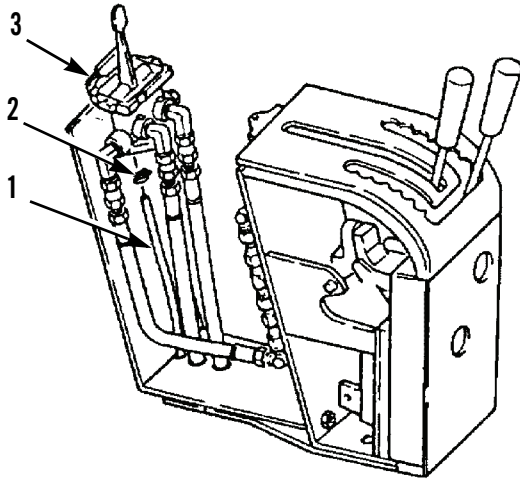
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hoses before disconnecting to aid in installation.

2. Disconnect hose (1) from valve assembly (3).



397-826

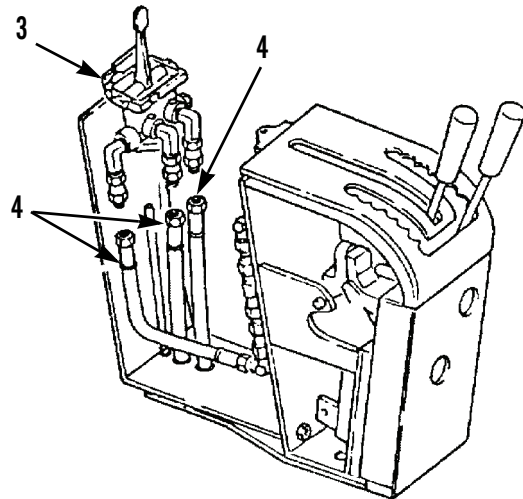
3. Disconnect three hose assemblies (4).
4. Remove valve assembly (3).



397-827

REMOVAL - CONTINUED

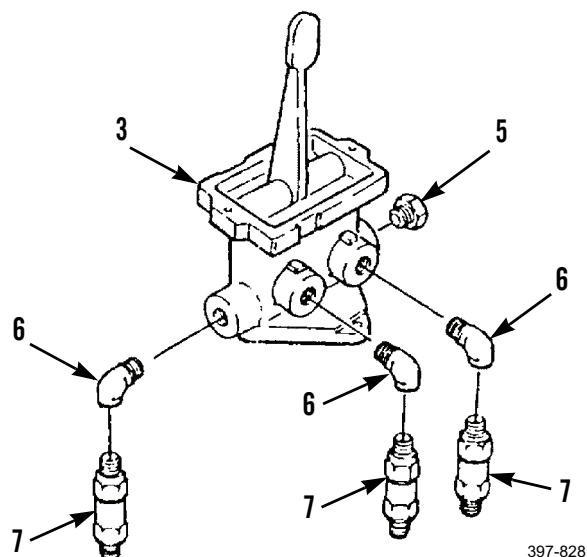5. Remove three reducers (7), elbows (6), and plug (5) from valve assembly (3).

**CLEANING AND INSPECTION**

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install plug (5) and three elbows (6) on valve assembly (3).
2. Install three reducers (7) on elbows (6).
3. Install valve assembly (3).
4. Connect three hose assemblies (4).
5. Connect hose (1) to valve assembly (3).
6. Install new tie strap (2) around hose assembly (4) and hose (2).
7. Install left and right console panels (WP 0193 00).
8. Install control console cover (WP 0082 00).

END OF WORK PACKAGE

CENTERSHIFT LOCK AND LOCK VALVE LINES AND FITTINGS REPLACEMENT

0262 00

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Strap, tie (Item 43, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

References

WP 0020 00

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Centershift lock control valve assembly removed (WP 0261 00)

REMOVAL

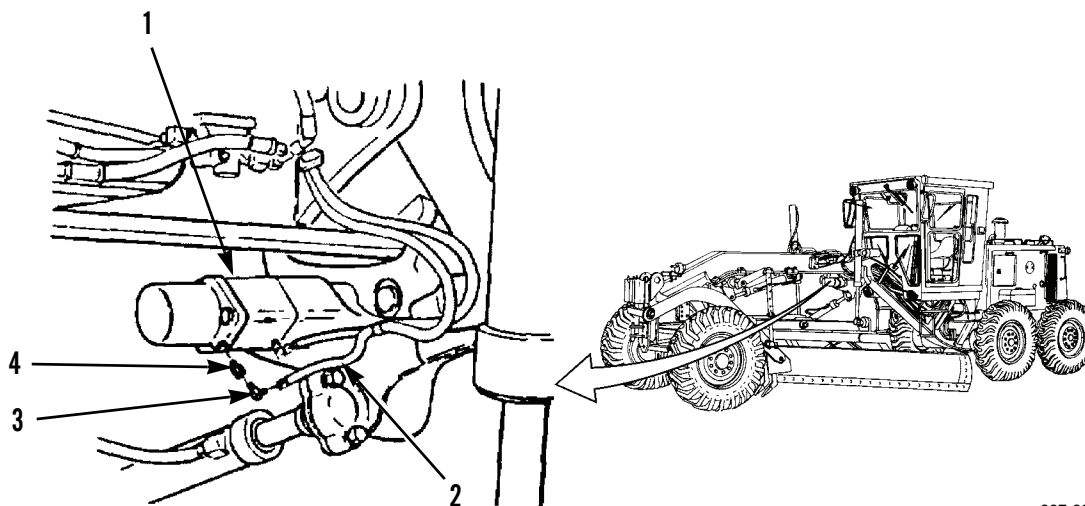
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assembly (2) from elbow (3).
2. Remove elbow (3) and adapter (4) from centershift (1).



397-829

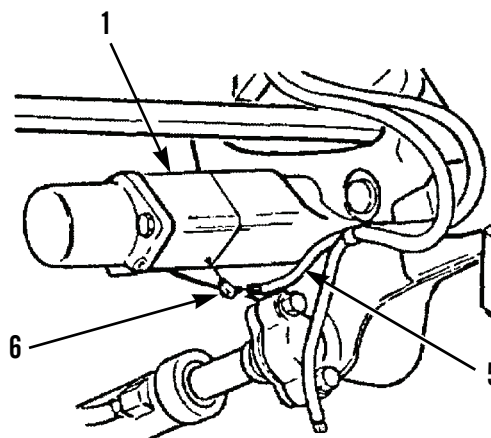
3. Disconnect hose assembly (5) from elbow (6).
4. Remove elbow (6) from centershift (1).



397-830


REMOVAL - CONTINUED

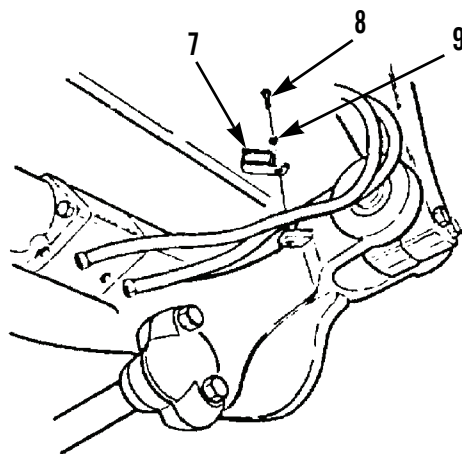5. Remove bolt (8), lockwasher (9), and clip (7). Discard lockwasher.




397-831

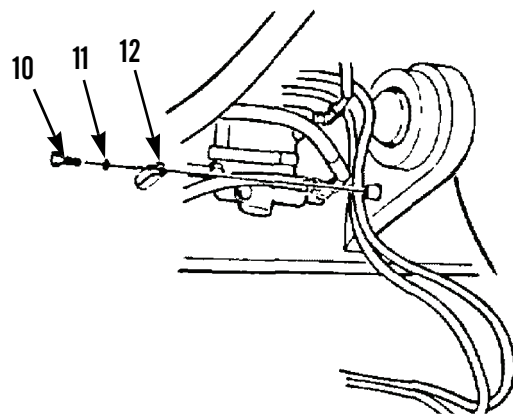6. Remove bolt (10), lockwasher (11), and clip (12). Discard lockwasher.



397-832

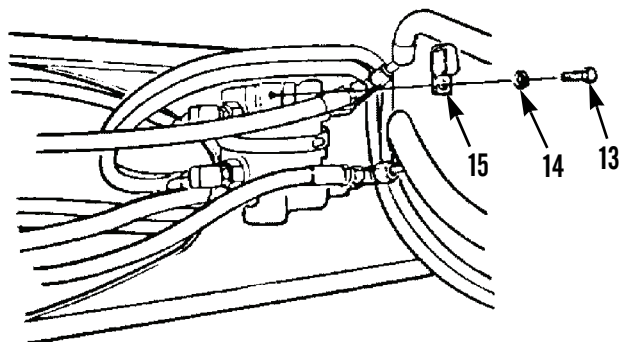
7. Remove bolt (13), lockwasher (14), and clip (15). Discard lockwasher.



397-833


REMOVAL - CONTINUED

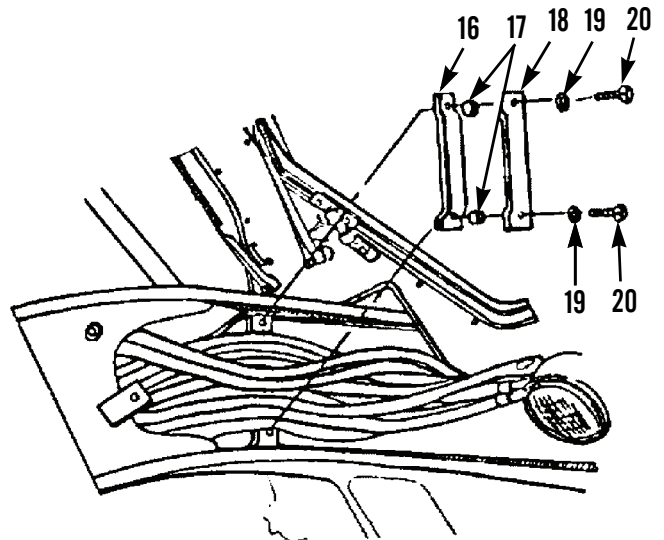8. Remove two bolts (20), washers (19), clamp (18), two spacers (17), and clamp (16).



397-834

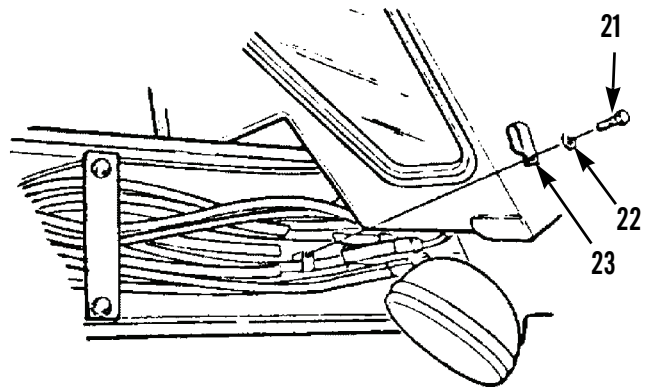
9. Remove bolt (21), washer (22), and clamp (23).



397-835


REMOVAL - CONTINUED

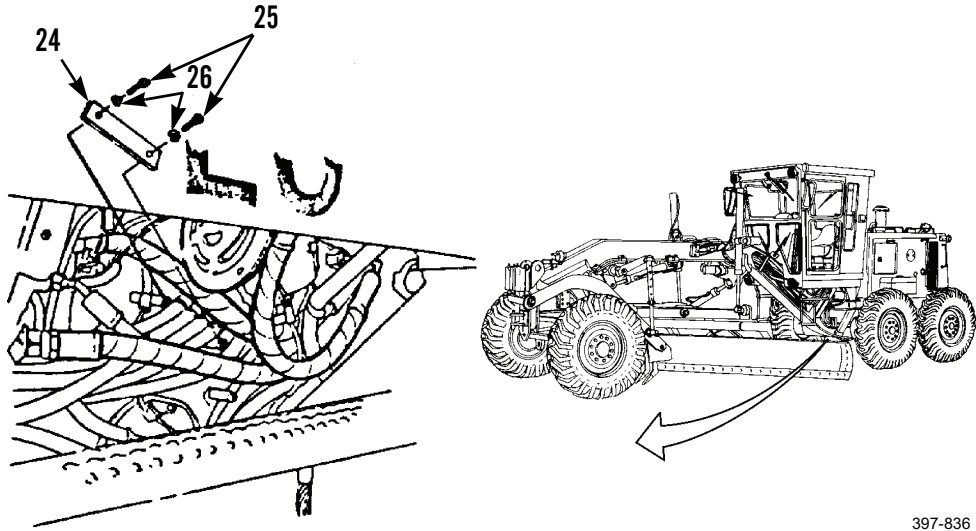10. Remove two bolts (25), washers (26), and clamp (24).



397-836

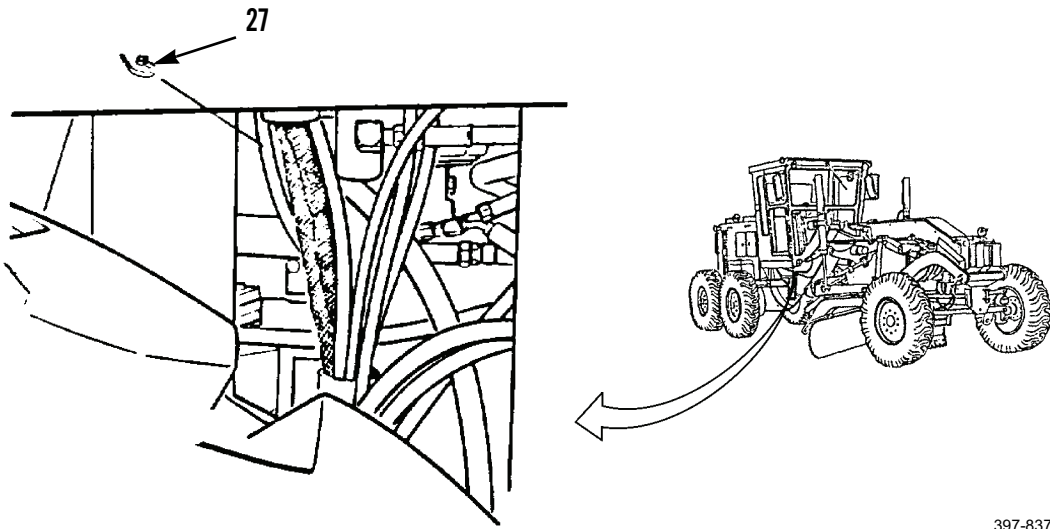
11. Remove and discard tie strap (27).



397-837


REMOVAL - CONTINUED

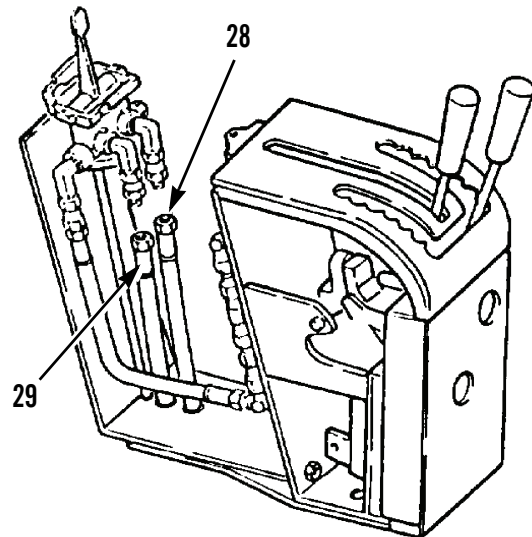12. Disconnect hose assemblies (28 and 29).



397-838

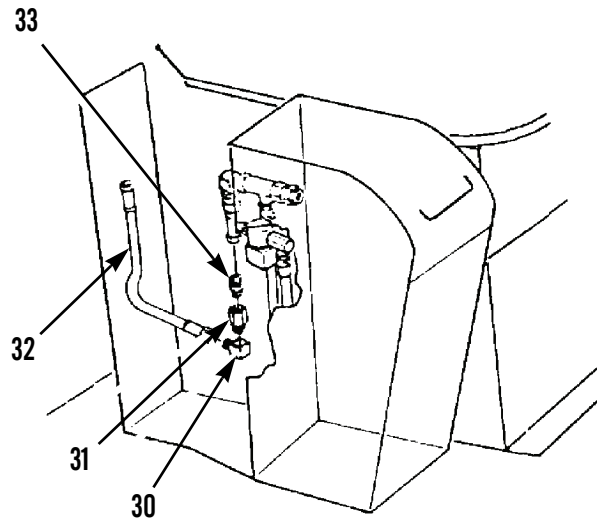13. Disconnect hose assembly (32) from elbow (30).
14. Remove elbow (30), valve (31), and nipple (33).




397-839

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.


INSTALLATION

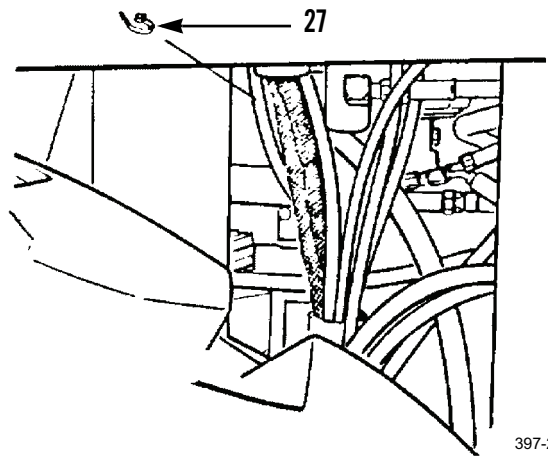1. Install nipple (33), valve (31), and elbow (30).
2. Connect hose assembly (32) to elbow (30).
3. Connect hose assemblies (29 and 28).
4. Install new tie strap (27).



397-2262

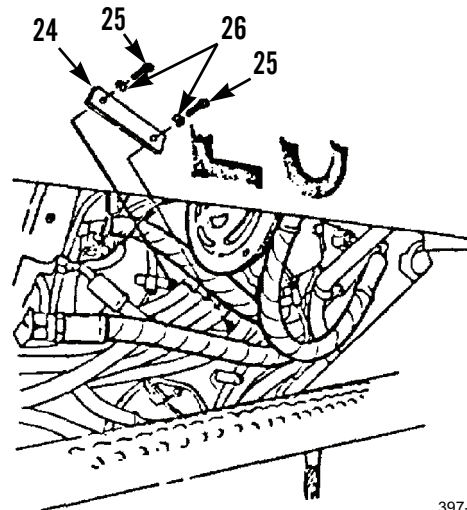
5. Install clamp (24), two washers (26), and bolts (25).




397-2261

INSTALLATION - CONTINUED

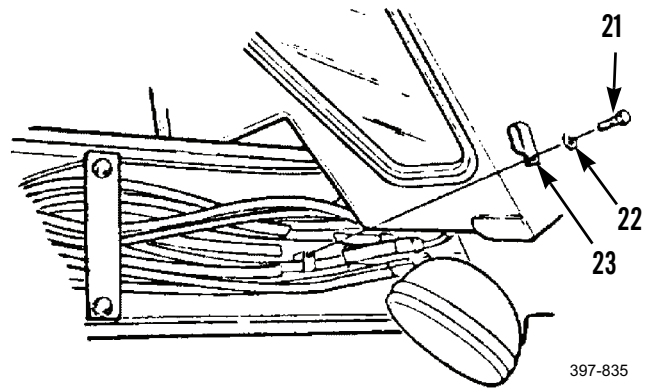
6. Install clamp (23), washer (22), and bolt (21).



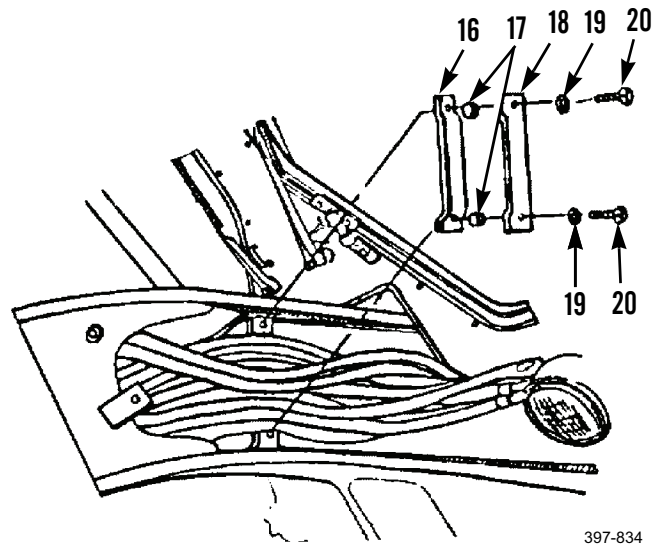7. Install clamp (16), two spacers (17), clamp (18), two washers (19), and bolts (20).




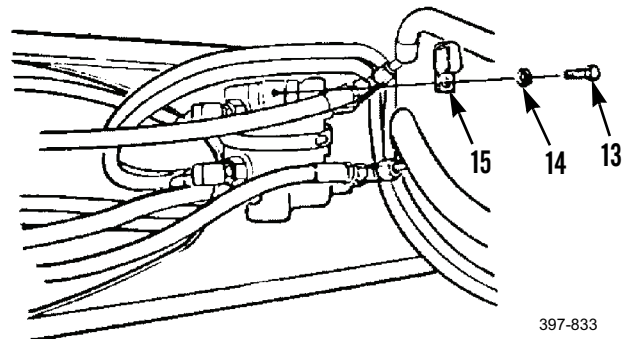8. Install clip (15), new lockwasher (14), and bolt (13).




INSTALLATION - CONTINUED

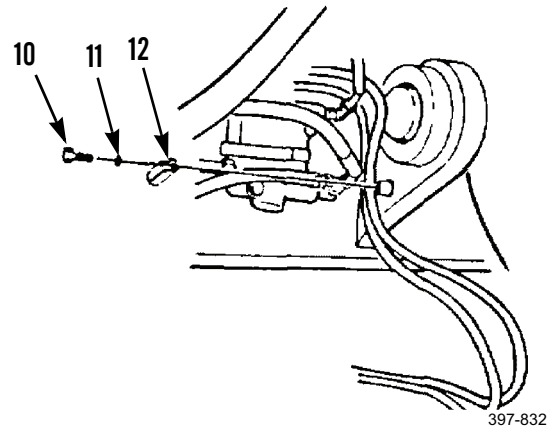9. Install clip (12), new lockwasher (11), and bolt (10).




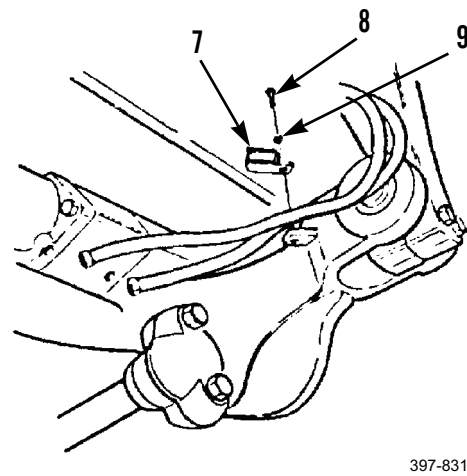10. Install clip (7), new lockwasher (9), and bolt (8).




INSTALLATION - CONTINUED

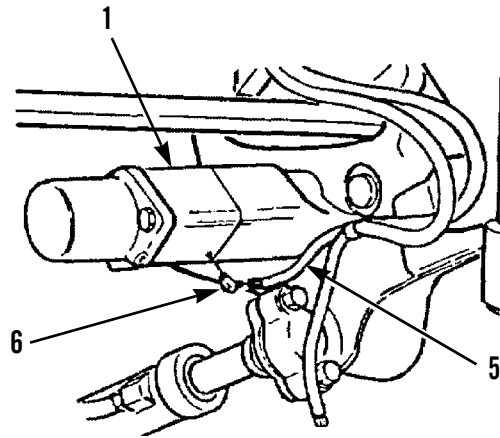11. Install elbow (6) on centershift (1).
12. Connect hose assembly (5) to elbow (6).



397-830

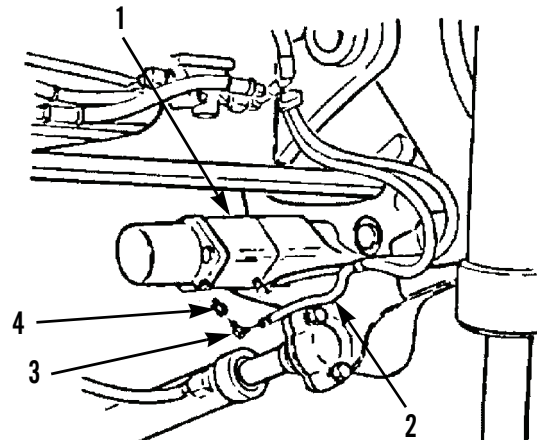13. Install adapter (4) and elbow (3) on centershift (1).
14. Connect hose assembly (2) to elbow (3).



397-2260

15. Install centershift lock control valve assembly (WP 0261 00).
16. Turn disconnect switch to ON position and start engine (TM 5-3805-261-10).
17. Stop engine.

END OF WORK PACKAGE

CIRCLE DRIVE SWIVEL ASSEMBLY REPLACEMENT

0263 00**THIS WORK PACKAGE COVERS**Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0216 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Materials/Parts

Cap set, protective (Item 7, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Packing, preformed (8)

Pin, cotter (2)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Personnel Required

Two

Hydraulic pressure relieved (WP 0020 00)

REMOVAL**WARNING**

Lubricating/hydraulic oils, engine coolant, fuel, and other fluids used in the performance of maintenance can be very slippery. Immediately wipe up any spills. Failure to follow this warning may cause injury to personnel.

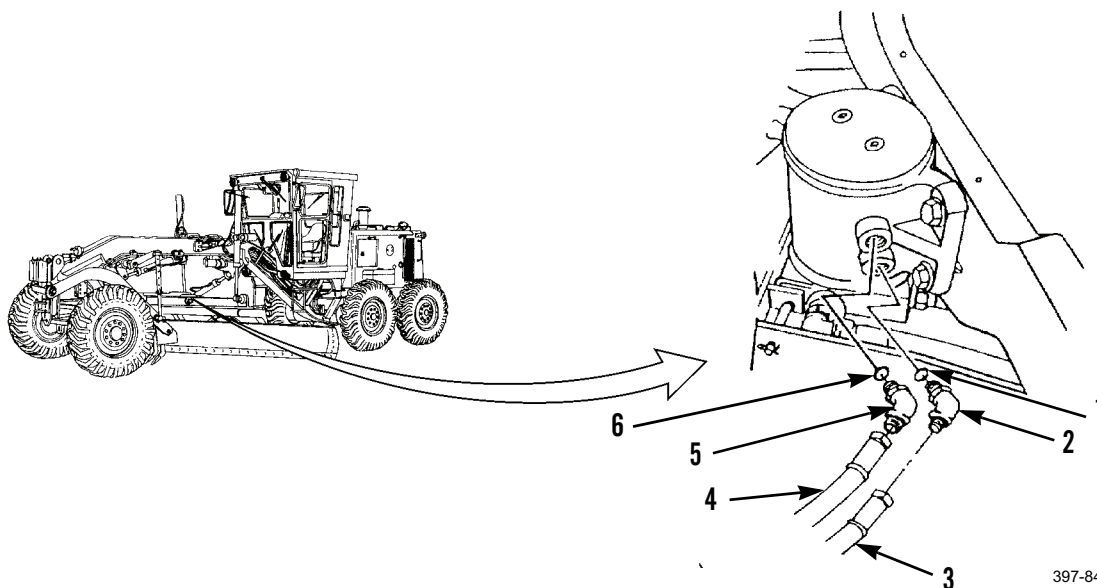
CAUTION

Cap hose ends and plug open ports to prevent contamination.

NOTE


- Blade must be horizontal to cab.
- Tag hose assemblies before disconnecting to aid in installation.

1. Disconnect hose assembly (4).
2. Remove elbow (5) and preformed packing (6). Discard preformed packing.
3. Disconnect hose assembly (3).
4. Remove elbow (2) and preformed packing (1). Discard preformed packing.




REMOVAL - CONTINUED

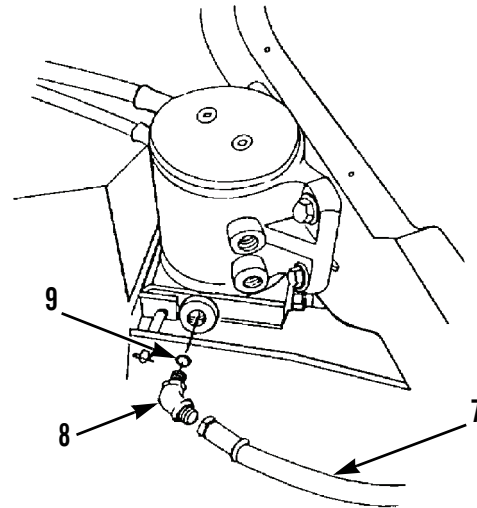5. Disconnect hose assembly (7).
6. Remove elbow (8) and preformed packing (9). Discard preformed packing.



397-841

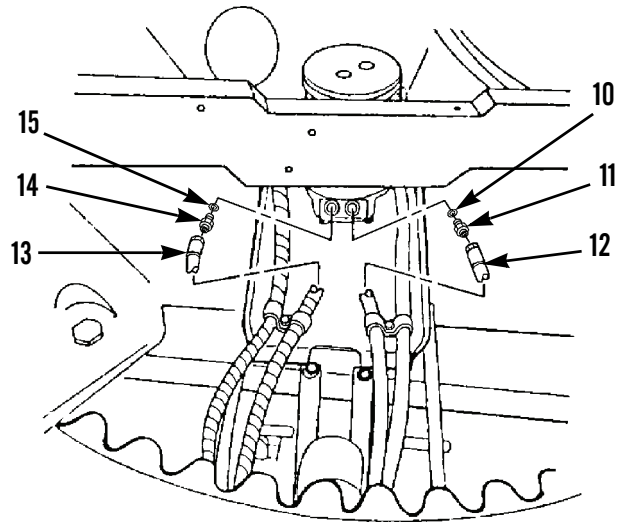
7. Disconnect hose assembly (13).
8. Remove connector (14) and preformed packing (15). Discard preformed packing.
9. Disconnect hose assembly (12).
10. Remove connector (11) and preformed packing (10). Discard preformed packing.



397-842


REMOVAL - CONTINUED

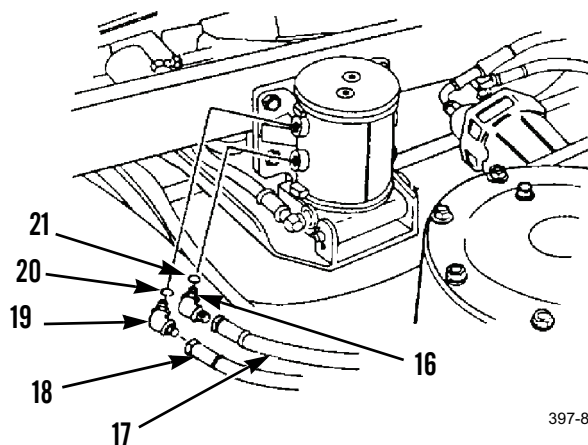11. Disconnect hose assembly (18).
12. Remove elbow (19) and preformed packing (20). Discard preformed packing.
13. Disconnect hose assembly (17).
14. Remove elbow (16) and preformed packing (21). Discard preformed packing.




397-843

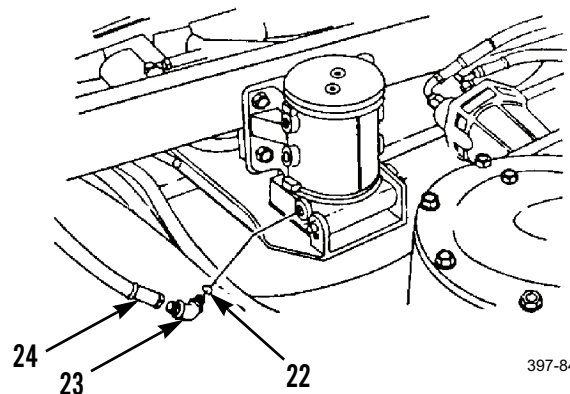15. Disconnect hose assembly (24).
16. Remove elbow (23) and preformed packing (22). Discard preformed packing.



397-844

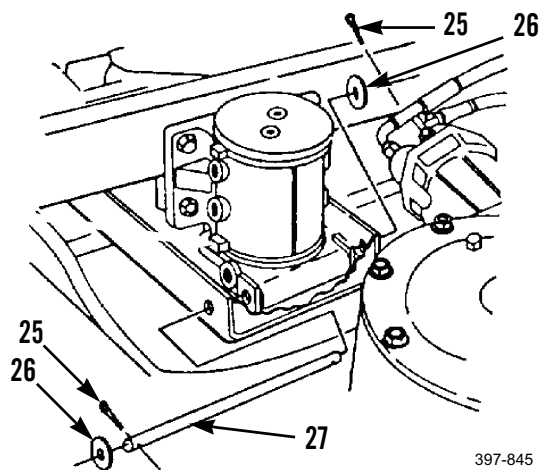17. Remove two cotter pins (25), washers (26), and pin (27). Discard cotter pins.



397-845

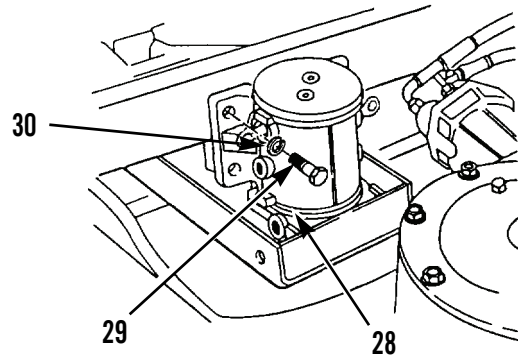
REMOVAL - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Circle drive swivel assembly weighs 70 lb (32 kg).

18. Remove four bolts (29), washers (30), and circle drive swivel assembly (28).



397-847

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

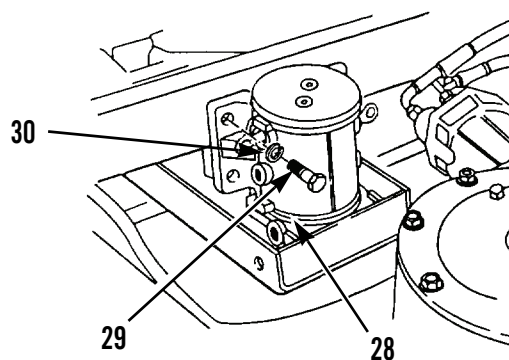
INSTALLATION**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE


Circle drive swivel assembly weighs 70 lb (32 kg).

1. Position circle drive swivel assembly (28) in drawbar yoke, aligning holes for four bolts (29).
2. Install four washers (30) and bolts (29).
3. Install pin (27) through holes in guide assembly and circle drive swivel assembly (28).



397-847

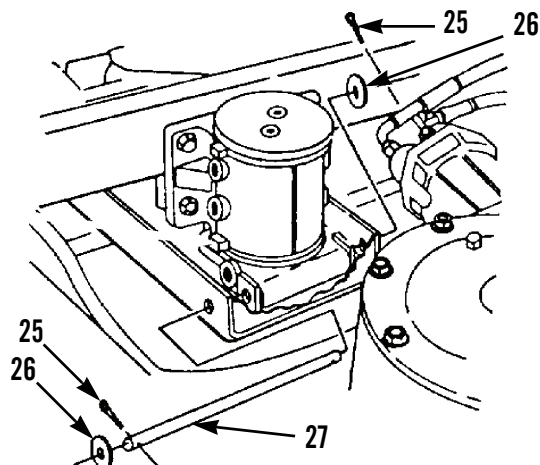
4. Install two washers (26) and new cotter pins (25) on pin (27).




397-845

INSTALLATION - CONTINUED

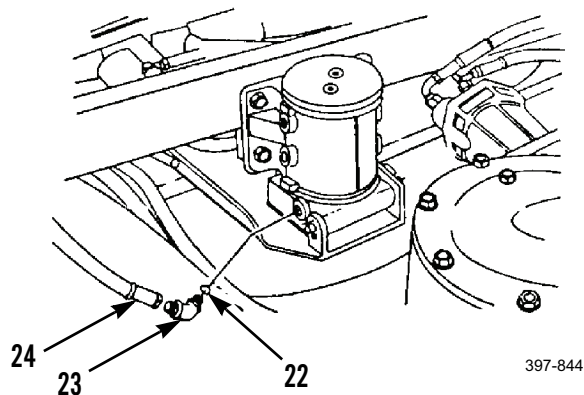
5. Install new preformed packing (22) and elbow (23).
6. Connect hose assembly (24).



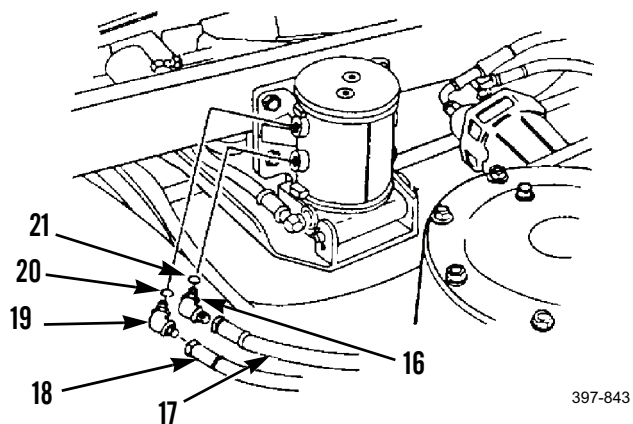7. Install new preformed packing (21) and elbow (16).
8. Connect hose assembly (17).
9. Install new preformed packing (20) and elbow (19).
10. Connect hose assembly (18).




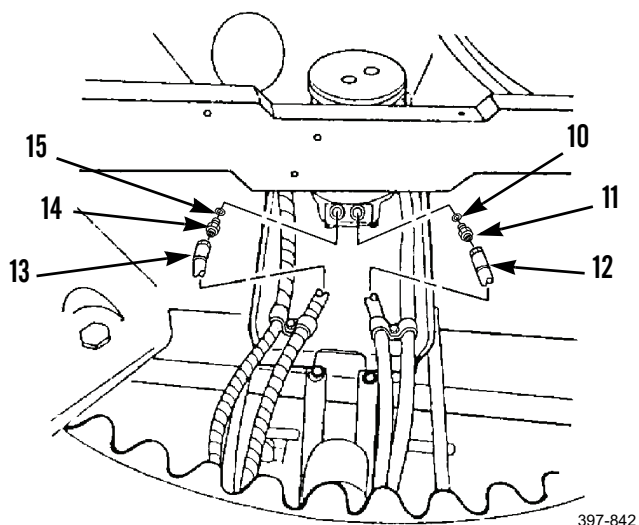11. Install new preformed packing (10) and connector (11).
12. Connect hose assembly (12).
13. Install new preformed packing (15) and connector (14).
14. Connect hose assembly (13).




INSTALLATION - CONTINUED

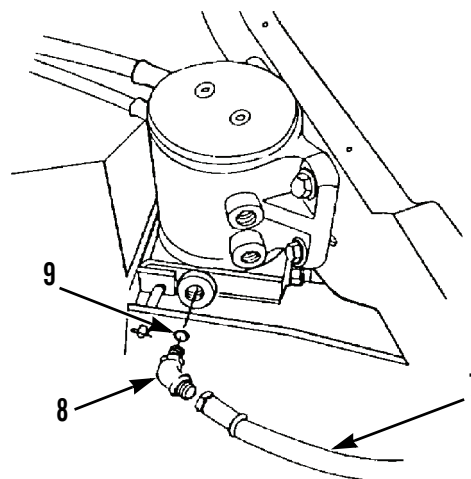15. Install new preformed packing (9) and elbow (8).
16. Connect hose assembly (7).



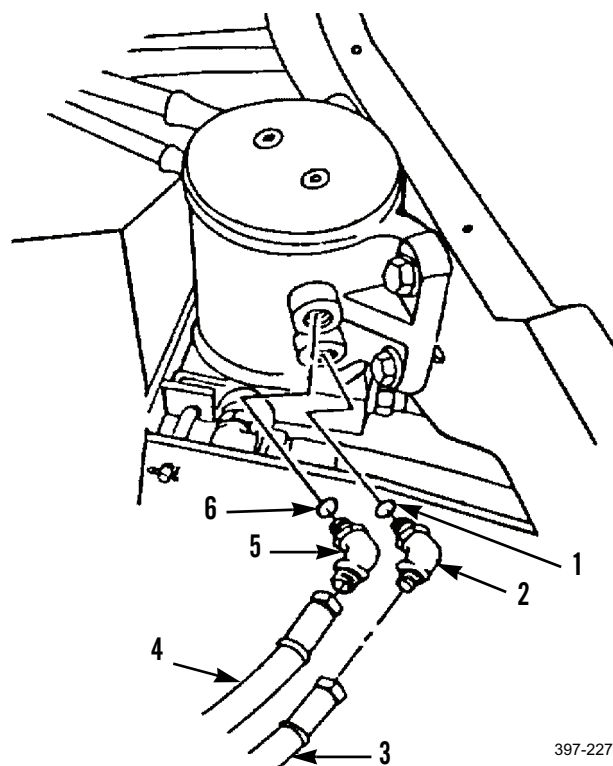17. Install new preformed packing (1) and elbow (2).
18. Connect hose assembly (3).
19. Install new preformed packing (6) and elbow (5).
20. Connect hose assembly (4).



21. Start engine (TM 5-3805-261-10).
22. Operate side shift blade tip controls. Move blade through at least five full movements of travel to bleed air from system.
23. Stop engine.
24. Inspect hose assemblies and connections. Check for leaks.
25. Refill hydraulic tank to proper level (WP 0216 00).

END OF WORK PACKAGE

SCARIFIER ASSEMBLY REPLACEMENT**0264 00****THIS WORK PACKAGE COVERS**

Removal, Cleaning and Inspection, Installation

INITIAL SETUP**Maintenance Level**

Unit

References

WP 0020 00

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Sling (Item 78, WP 0348 00)

Forklift truck

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Personnel Required

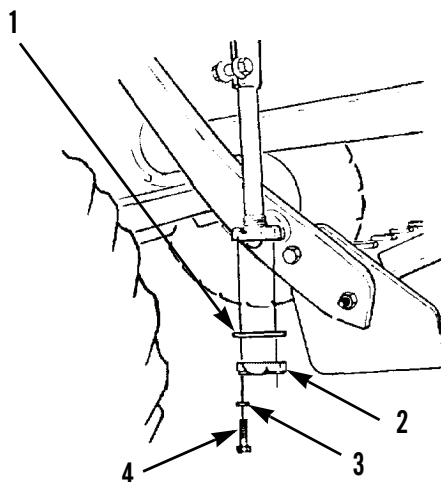
Two

Scarifier shanks and teeth removed (WP 0265 00)

REMOVAL**NOTE**

Steps 1 through 3 cover removal of the left scarifier actuating assembly. Follow these instructions for the right scarifier actuating assembly.


1. Remove two bolts (4), washers (3), cap (2), and spacer(s) (1).



397-850

REMOVAL - CONTINUED

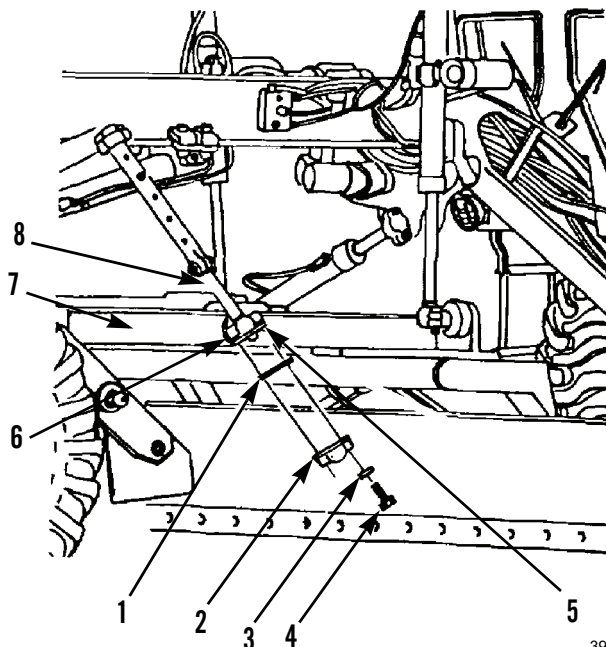2. Position socket (6) of rod (8) on ball (5) of drawbar and yoke assembly (7).
3. Install spacer(s) (1), cap (2), two washers (3), and bolts (4) to retain rod (8) on ball (5) of drawbar and yoke assembly (7).

**WARNING**

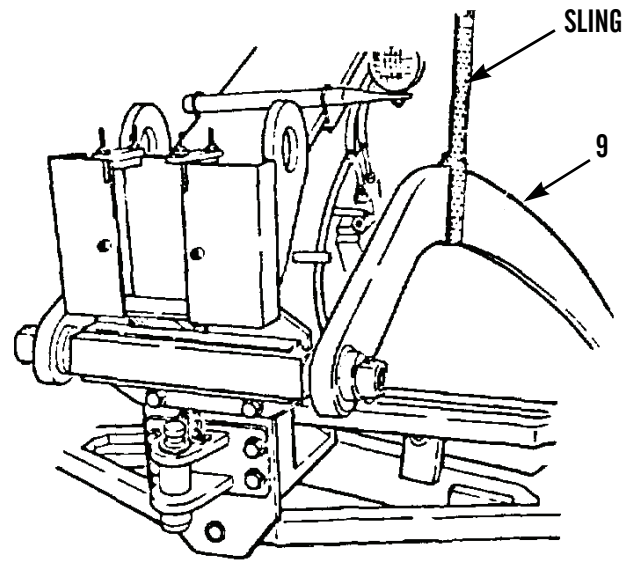
Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

- Drawbar weighs 1010 lb (458 kg).
- Steps 4 through 10 cover removal of the left drawbar. Follow these instructions for the right drawbar connecting link.


REMOVAL - CONTINUED

4. With assistance, attach sling to drawbar (9) and take up slack.



397-852

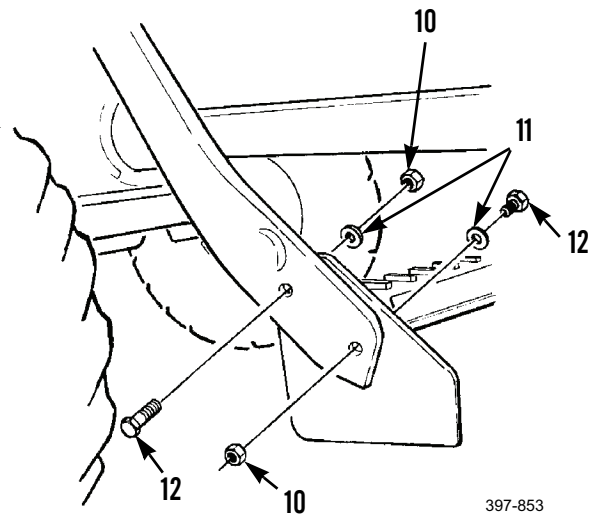
5. Remove two nuts (10), bolts (12), and washers (11).



397-853

REMOVAL - CONTINUED

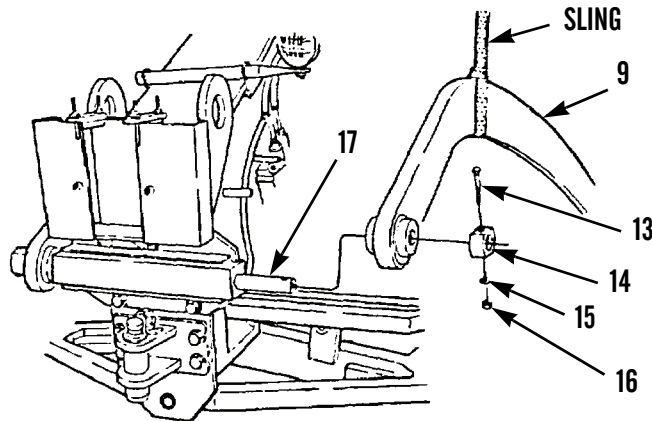6. Remove nut (16), washer (15), and screw (13).
7. Remove collar (14) from shaft (17).
8. Remove drawbar (9) from shaft (17), move drawbar away from machine, and lower to ground.
9. Remove sling from drawbar (9).
10. Repeat steps 1 through 9 for right scarifier actuating assembly and drawbar connecting link.



397-854


**WARNING**

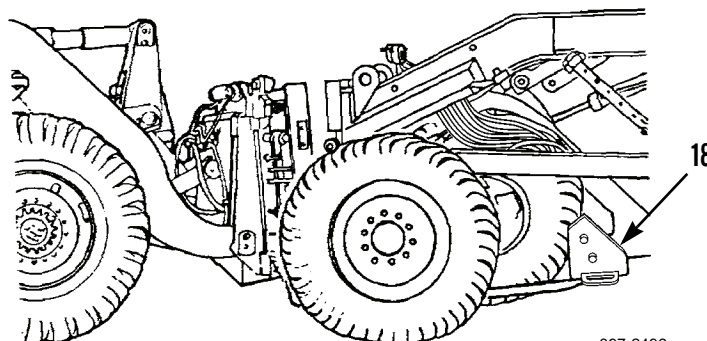Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Scarifier weighs 434 lb (197 kg).


11. Remove scarifier (18) using forklift truck.




397-2496

REMOVAL - CONTINUED

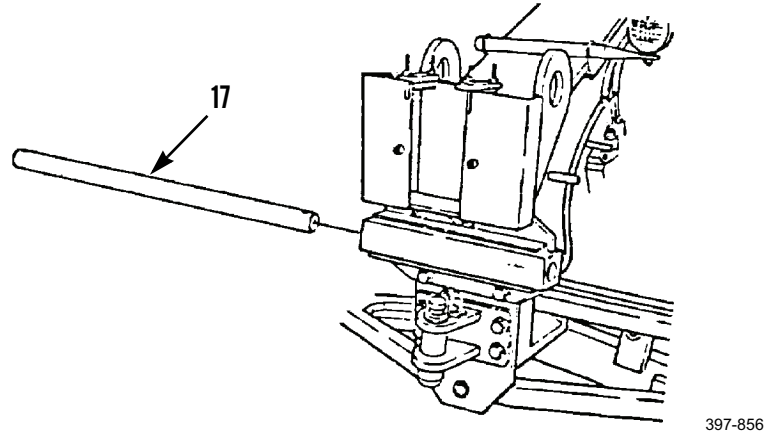12. With assistance, remove shaft (17).




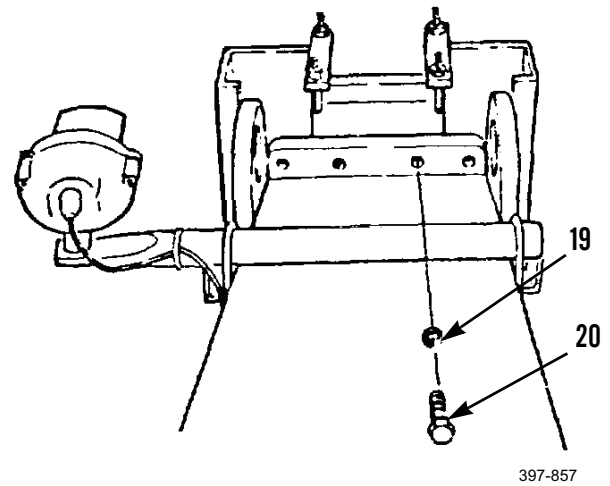13. Remove two bolts (20) and washers (19).




REMOVAL - CONTINUED

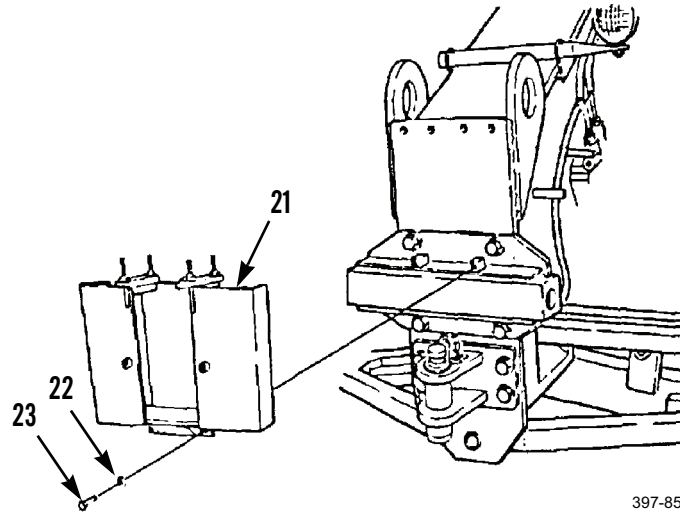14. Remove two bolts (23), washers (22), and scarifier shanks and tips stowage box (21).



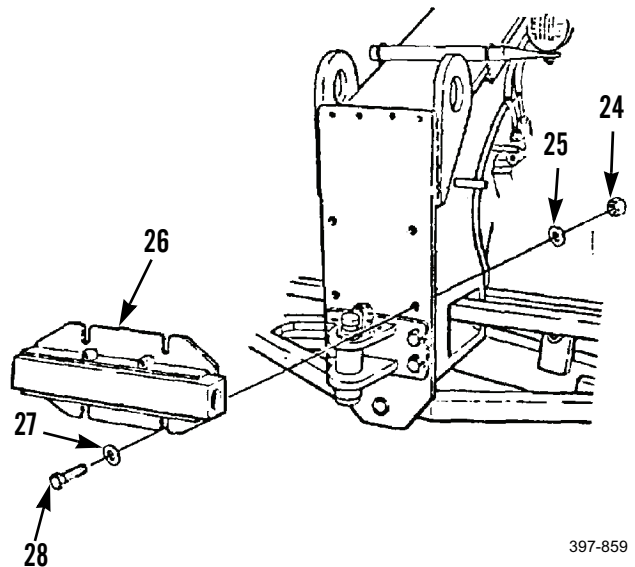15. Remove four nuts (24), washers (25), bolts (28), washers (27), and bracket (26).



CLEANING AND INSPECTION

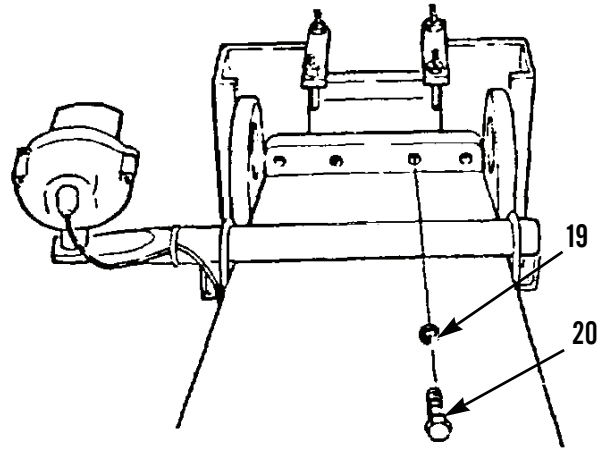
Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

1. Install bracket (26), four washers (27), bolts (28), washers (25), and nuts (24).
2. Install scarifier shanks, tips stowage box (21), two washers (22), and bolts (23).


INSTALLATION - CONTINUED

3. Install two washers (19) and bolts (20).



397-857

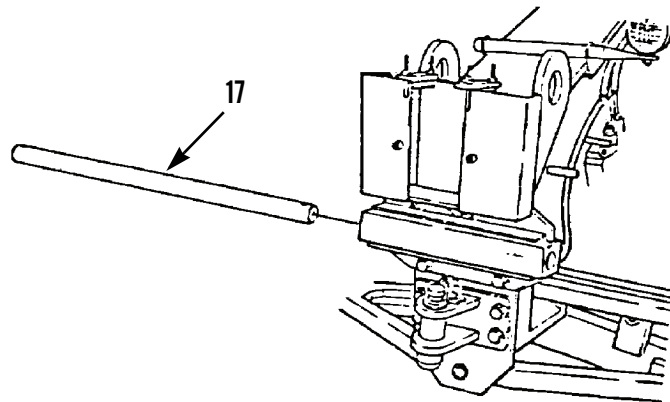4. Install shaft (17).



397-856

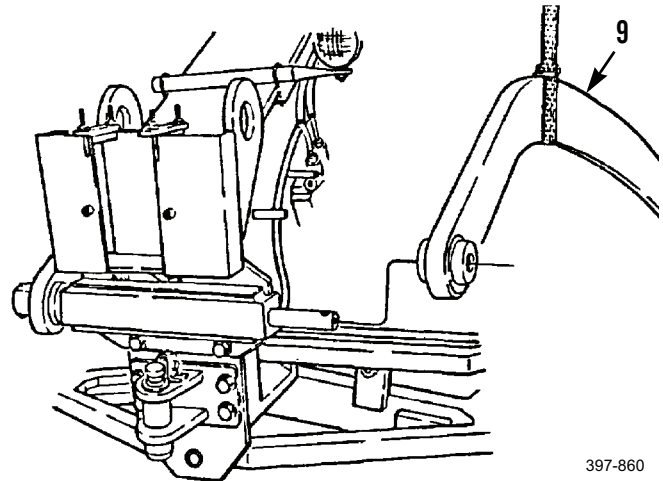
INSTALLATION - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE


- Drawbar weighs 1,010 lb (458 kg).
- Steps 5 through 13 cover installation of the left drawbar. Follow these instructions for the right drawbar connecting link.

5. With assistance, attach sling to drawbar (9).



397-860

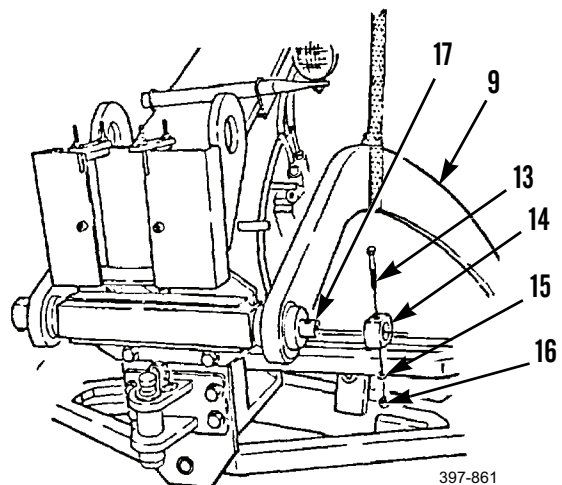6. Install drawbar (9) on shaft (17).
7. Install collar (14) on shaft (17).
8. Install screw (13), washer (15), and nut (16).
9. Lower drawbar (9) and rest free end against steering tie rod.



397-861

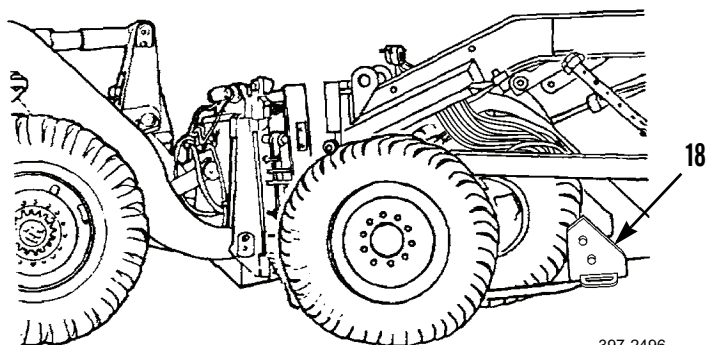
INSTALLATION - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE


Scarifier weighs 434 lb (197 kg).

10. Use forklift truck to position scarifier (18).



397-2496

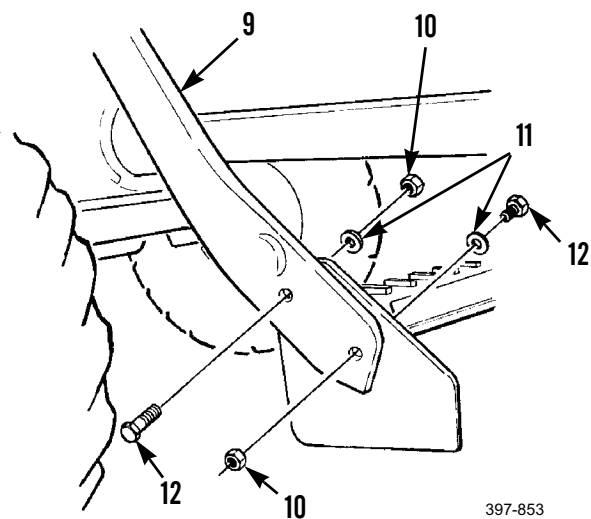
11. With assistance, lift drawbar (9) with hoist and align drawbar bolt holes with scarifier (18) bolt holes.
12. Install two washers (11), bolts (12), and nuts (10).



397-853

INSTALLATION - CONTINUED

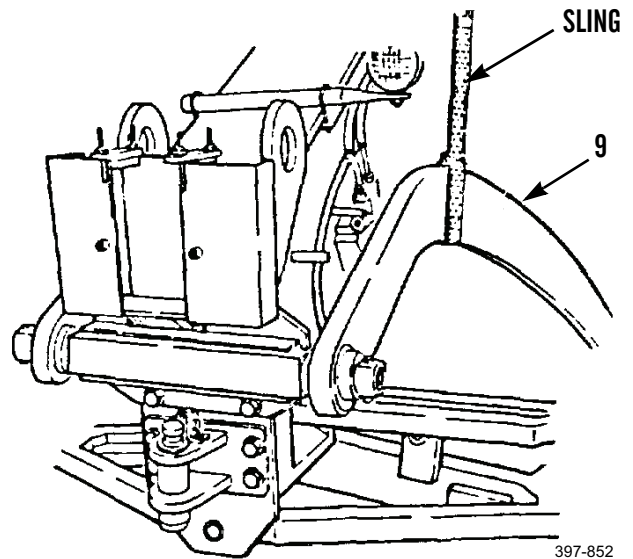13. Remove sling from drawbar (9).




14. Repeat steps 5 through 13 for right drawbar connecting link.

NOTE

Steps 15 through 25 cover installation of the left scarifier actuating assembly. Follow these instructions for the right scarifier actuating assembly.

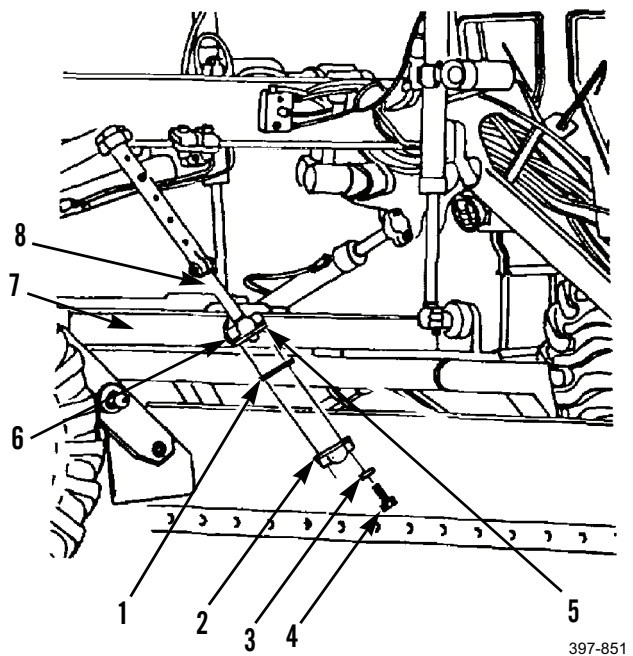15. Remove two bolts (4), washers (3), cap (2), and spacer(s) (1).
16. Position socket (6) of rod (8) on ball (5) of drawbar and yoke assembly (7).




INSTALLATION - CONTINUED

NOTE

Tighten bolts hand-tight only.

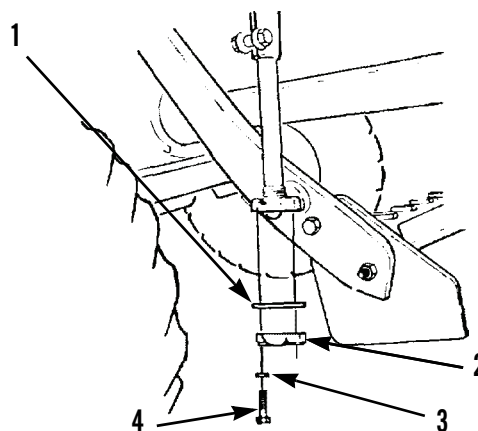17. Install spacer (s) (1), cap (2), two washers (3), and bolts (4).



397-2192

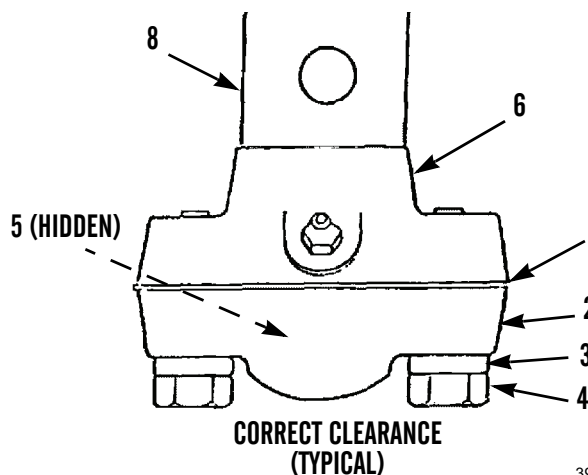
CAUTION

For proper final assembly, ball inside cap must have free play (clearance) of 0.015 to 0.045 in. (0.38 to 1.14 mm) after bolts are fully tightened. Failure to obtain the correct clearance could cause damage to machine.

NOTE

Do not overtighten bolts.

18. Tighten two bolts (4) evenly only until there is no free play (clearance) between ball (5) and cap (2).
19. Examine cap (2), socket (6) of rod (8), and spacer (1) from side. If cap is touching spacer, additional spacer(s) must be installed.
20. Remove two bolts (4), washers (3), and cap (2).
21. Install one spacer (1).
22. Repeat steps 17 and 18.
23. Examine cap (2), socket (6) of rod (8), and spacer(s) (1) from side.
24. If cap (2) is touching spacer (1), repeat steps 17 through 23 until there is a small gap between cap and spacer(s).
25. Tighten bolts (4).



397-863

26. Repeat steps 15 through 25 for right scarifier actuating assembly.
27. Install scarifier shanks and teeth (WP 0265 00).

END OF WORK PACKAGE

THIS WORK PACKAGE COVERS

Removal, Cleaning and Inspection, Installation

INITIAL SETUP

Maintenance Level

Unit

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Removing tool, scarifier tooth (Item 67, WP 0348 00)

Wood block

Materials/Parts

Rag, wiping (Item 35, WP 0349 00)

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Scarifier in raised position (TM 5-3805-261-10)

Blade lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

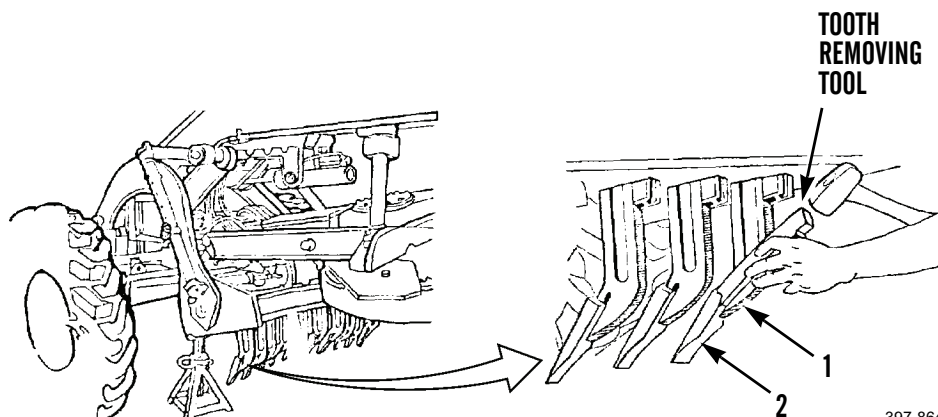
Battery disconnect switch in OFF position (TM 5-3805-261-10)

REMOVAL

WARNING

Support scarifier in raised position to prevent injury to personnel.


1. Support scarifier in raised position.
2. Use tooth removing tool and hammer to remove 11 teeth (2) from shanks (1).



397-864


REMOVAL - CONTINUED

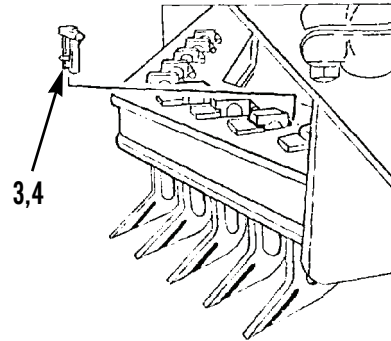3. Remove 11 bushing/pin assemblies (3 and 4).




397-865

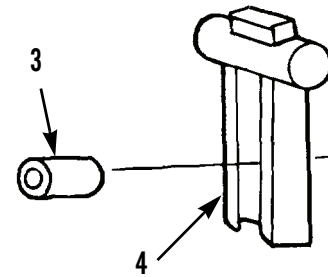4. Remove 11 bushings (3) from pins (4).



397-866

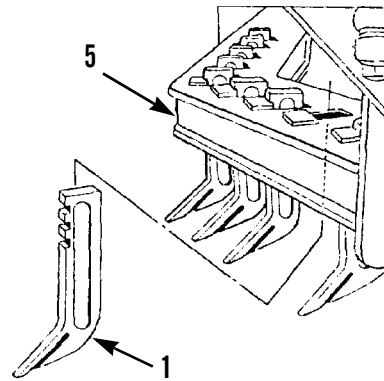5. Remove 11 shanks (1) by pulling shanks downward from scarifier (5).




397-867

CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

INSTALLATION

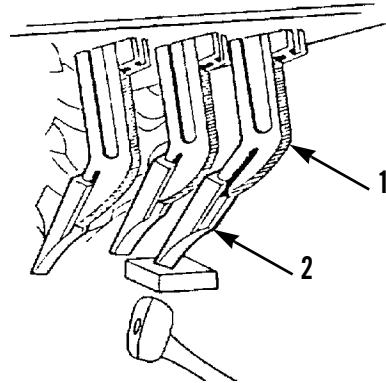1. Install 11 shanks (1), from below, into scarifier (5).
2. Install 11 bushings (3) into pins (4).
3. Install 11 bushing/pin assemblies (3 and 4).
4. Use hammer and wood block to install 11 teeth (2) on shanks (1).
5. Remove scarifier from support.



397-2193

END OF WORK PACKAGE

SCARIFIER ACTUATING ASSEMBLY MAINTENANCE

0266 00**THIS WORK PACKAGE COVERS**Removal, Disassembly, Cleaning and Inspection, Assembly, Installation

INITIAL SETUP**Maintenance Level**

Unit

Personnel Required

Two

Tools and Special Tools

Tool kit, general mechanic's (Item 89, WP 0348 00)

Shop equipment, common no. 1 (Item 75, WP 0348 00)

Sling (Item 78, WP 0348 00)

Lifting device, 750-lb capacity

Equipment Conditions

Machine parked on level ground (TM 5-3805-261-10)

Parking/emergency brake applied (TM 5-3805-261-10)

Implements lowered to ground (TM 5-3805-261-10)

Engine off (TM 5-3805-261-10)

Battery disconnect switch in OFF position (TM 5-3805-261-10)

Hydraulic pressure relieved (WP 0020 00)

Materials/Parts

Grease, GAA (Item 17, WP 0349 00)

Rag, wiping (Item 35, WP 0349 00)

Tag, marker (Item 44, WP 0349 00)

Nut, self-locking (4)

Seal (4)

REMOVAL**NOTE**

Steps 1 through 13 cover removal of the right scarifier actuating assembly. Follow these instructions for the left scarifier actuating assembly.

1. Remove two bolts (4), washers (3), and spacer (2).


**WARNING**

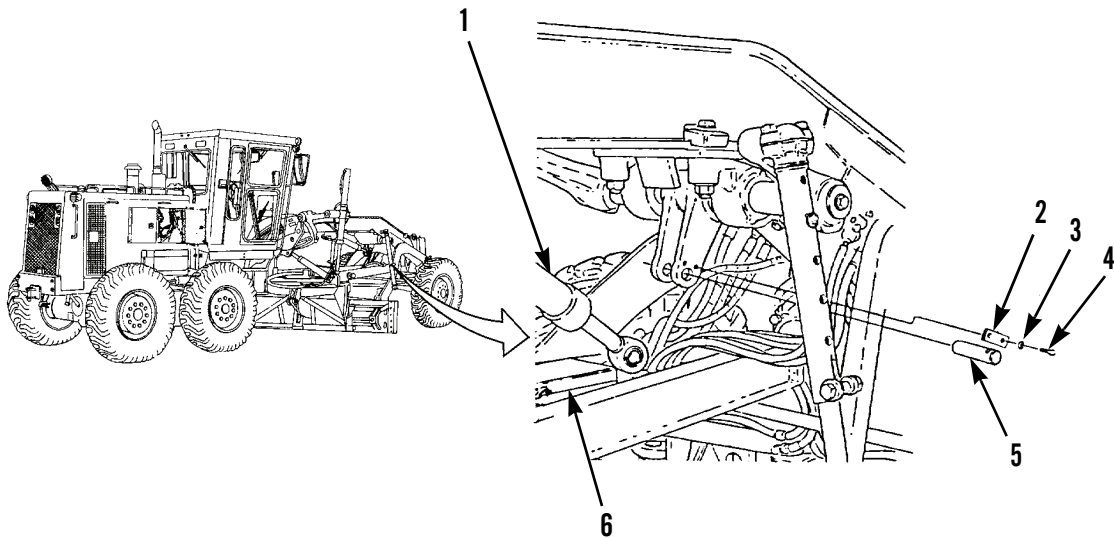Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Hydraulic cylinder weighs 51 lb (23 kg).


2. Support scarifier actuating assembly hydraulic cylinder (1) and drive pin (5) out.
3. Set free end of cylinder (1) on drawbar frame toolbox (6).



397-868


REMOVAL - CONTINUED

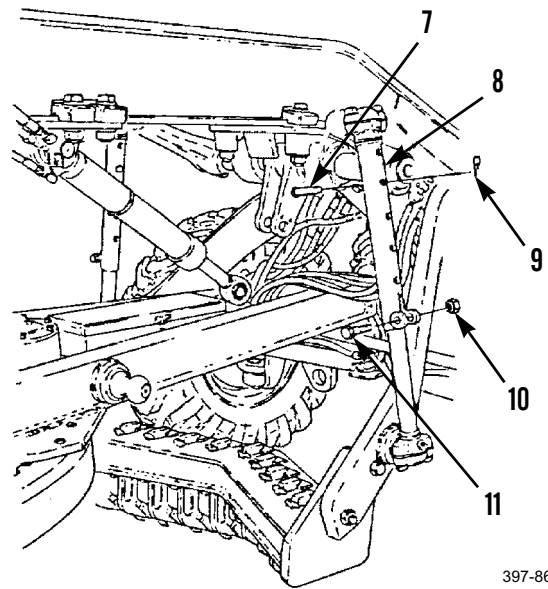4. Remove nut (10) and screw (11) from right side sleeve (8).
5. Remove pin (9) and pin (7).



397-869

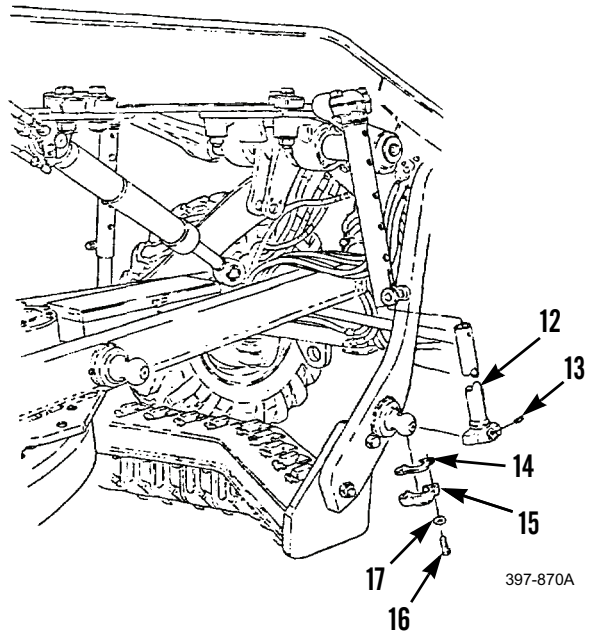
6. Remove two bolts (16), washers (17), cap (15), spacer(s) (14), and rod (12). Tie spacers together and tag for identification.
7. Remove lubrication fitting (13) from rod (12).




397-870A

REMOVAL - CONTINUED

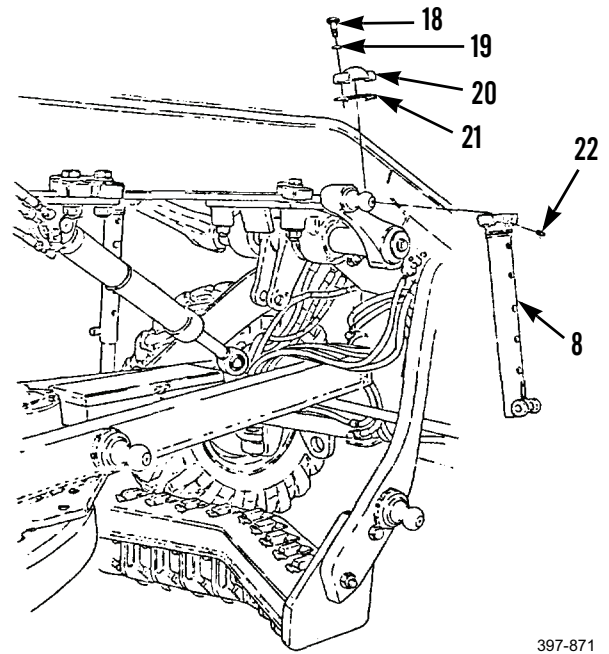8. Support sleeve (8) and remove two bolts (18), washers (19), cap (20), and spacer(s) (21). Tie spacers together and tag for identification.
9. Remove sleeve (8).
10. Remove lubrication fitting (22) from sleeve (8).




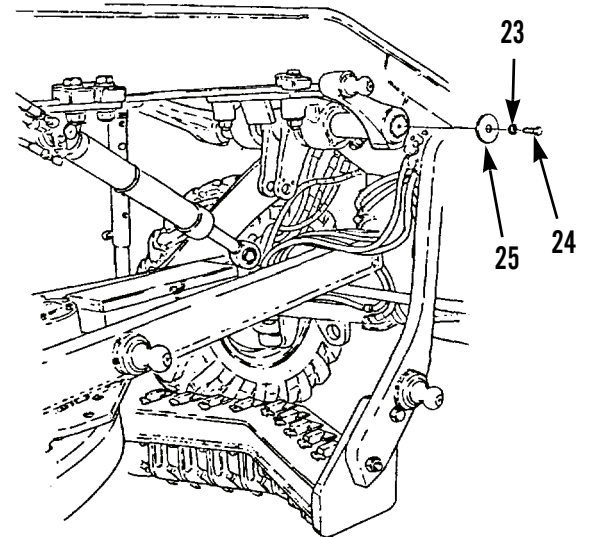11. Remove bolt (24) and washers (23 and 25).




REMOVAL - CONTINUED

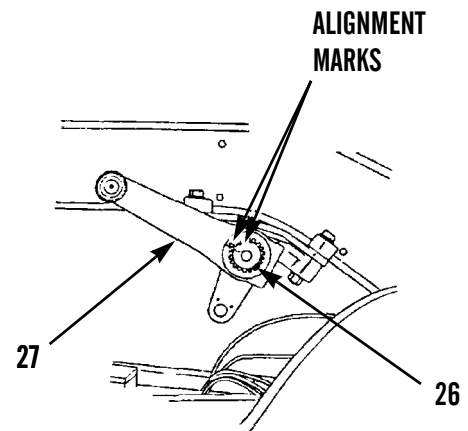12. Scribe alignment marks on arm (27) and end of shaft (26), to aid during installation.



397-873

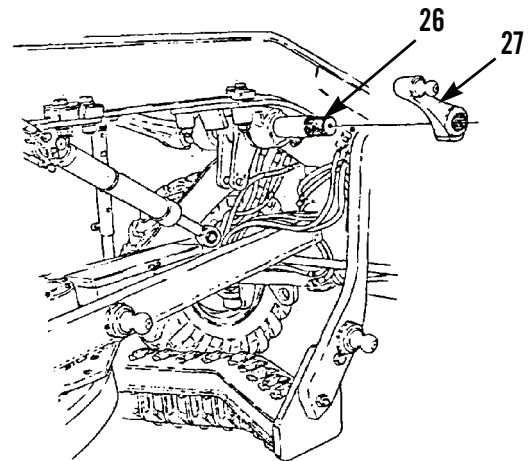13. Remove arm (27) from shaft (26).



397-874

REMOVAL - CONTINUED

14. Repeat steps 1 through 13 for left scarifier actuating assembly.


**WARNING**

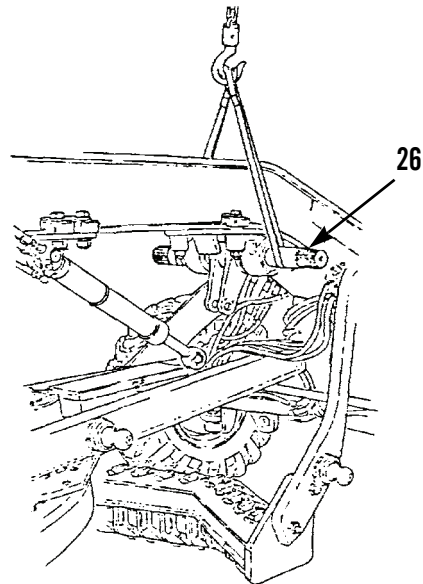Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

Shaft weighs 500 lb (227 kg).

15. With assistance, attach sling to each end of shaft (26) and take up slack.



397-875

REMOVAL - CONTINUED

16. Remove four self-locking nuts (32), washers (31), cap screws (30), and blocks (29) from plate (28). Discard self-locking nuts.
17. Lower slings just enough to allow removal of plate (28).


**WARNING**

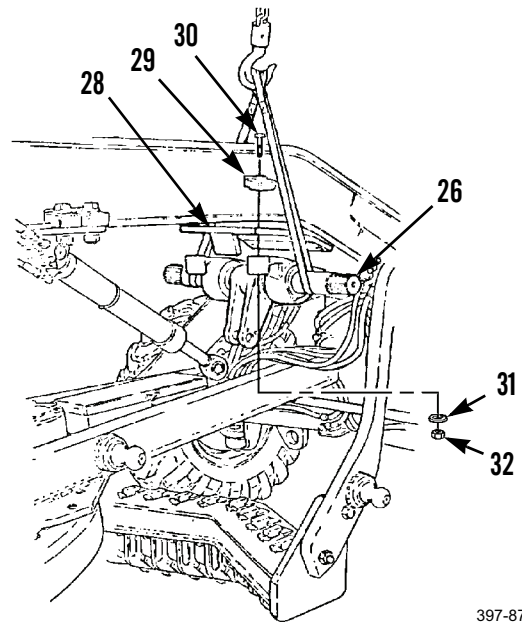Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

The plate weighs 82 lb (37 kg).


18. With assistance, remove plate (28).
19. Remove shaft assembly (26).



397-876


DISASSEMBLY

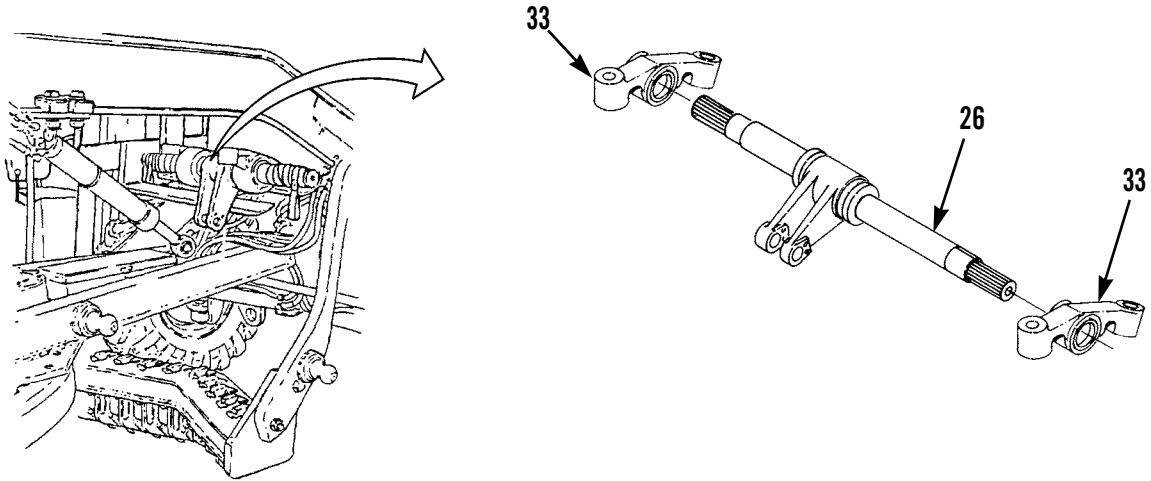1. Remove bracket assembly (33) from each side of shaft assembly (26).




397-2405

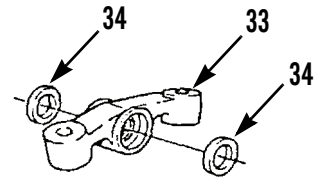2. Remove two seals (34) from each bracket assembly (33).



397-1708

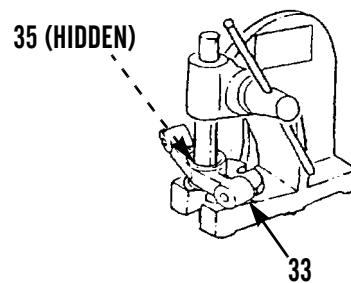3. Remove bearing (35) from each bracket (33).




397-1709

DISASSEMBLY - CONTINUED


NOTE

Note location and number of spacers to aid in installation.

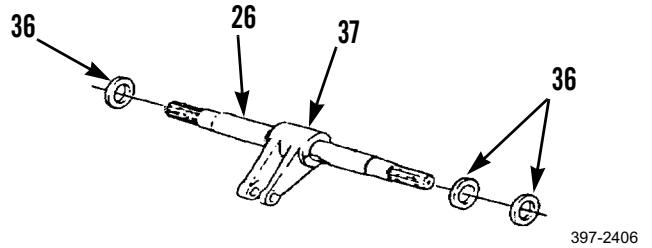4. Remove three spacers (36) from shaft assembly (26).
5. Matchmark arm (37) and shaft assembly (26) to aid in installation.



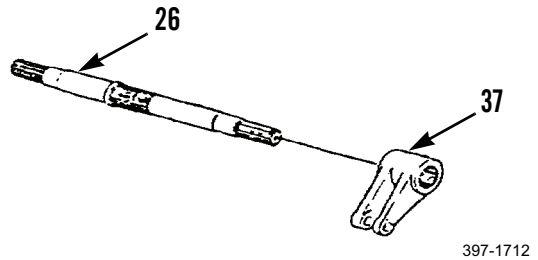6. Remove arm (37) from shaft assembly (26).




CLEANING AND INSPECTION

Clean and inspect all parts in accordance with WP 0020 00.

ASSEMBLY

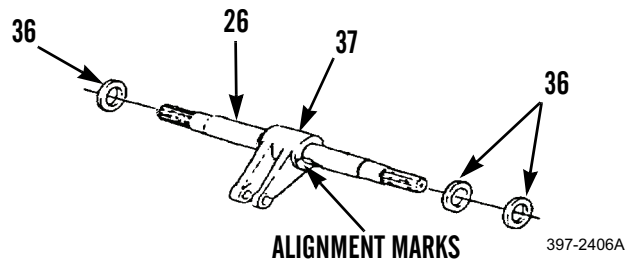
1. Install arm (37) on shaft assembly (26), ensuring that alignment marks are aligned.
2. Install two spacers (36) next to flange on right side of shaft assembly (26) and remaining spacer on left side of shaft assembly.



3. Install bearing (35) on each bracket (33).


ASSEMBLY - CONTINUED

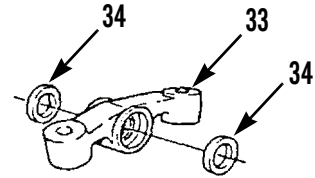4. Install two new seals (34) on each bracket (33).



397-1708

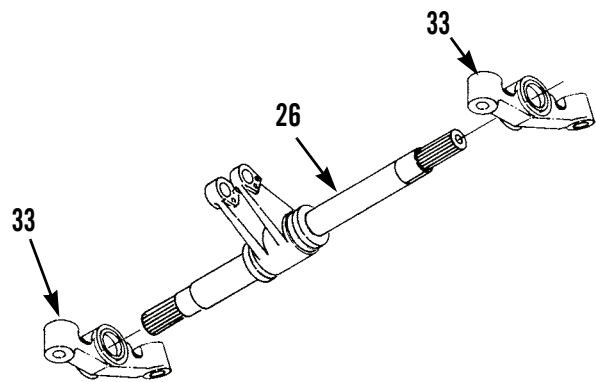5. Install bracket assembly (33) on each side of shaft assembly (26).
6. Attach sling to shaft assembly (26) and remove slack.
7. Position shaft assembly (26) under frame.



397-2405A

8. Remove sling.

INSTALLATION**NOTE**

Steps 1 through 24 cover installation of the right scarifier actuating assembly. Follow these instructions for the left scarifier actuating assembly.


**WARNING**

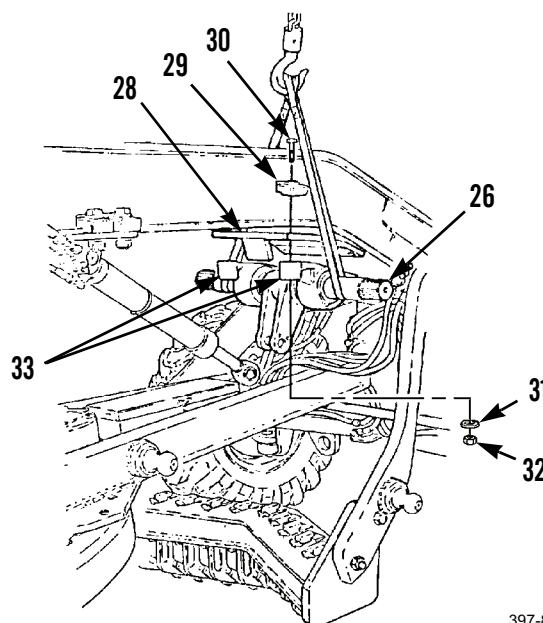Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

The plate weighs 82 lb (37 kg).

1. With assistance, position plate (28) over two brackets (33).
2. Install four blocks (29), cap screws (30), washers (31), and new self-locking nuts (32) to secure plate (28) to frame. Tighten cap screws (30) to 900 lb-ft (1,220 Nm).




397-876

INSTALLATION - CONTINUED

- Remove slings.


NOTE

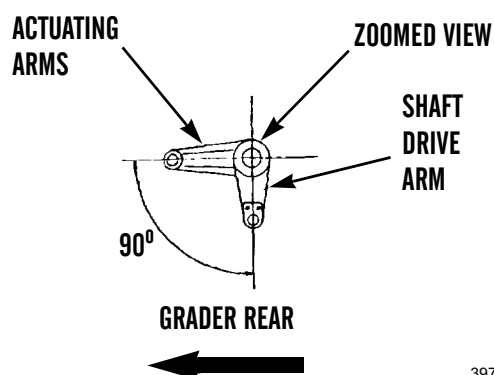When installing an arm without alignment marks, install arm at a 90 degree angle to arm.




397-880

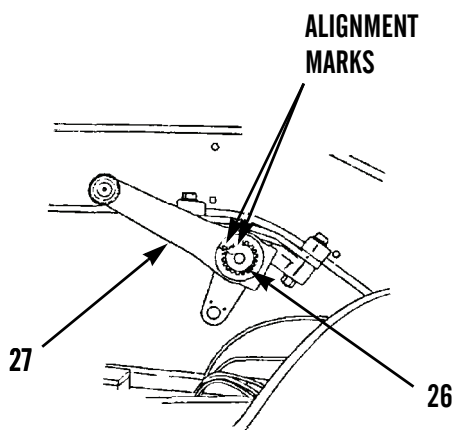- Install arm (27) on shaft (26). Ensure that alignment marks are aligned.




397-873

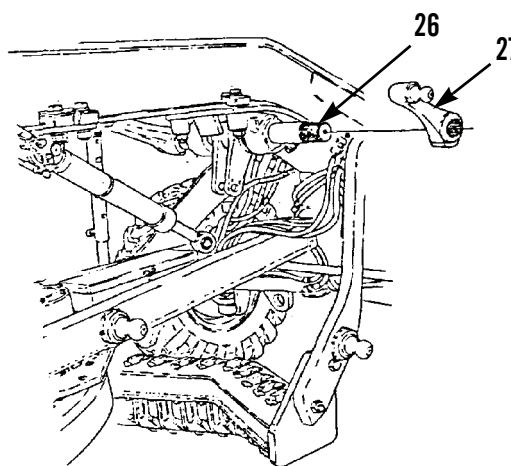

397-874


INSTALLATION - CONTINUED

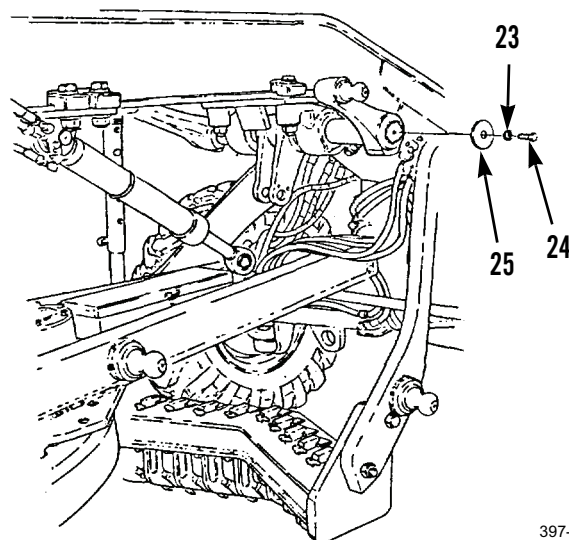5. Install washers (25 and 23) and bolt (24).



397-872

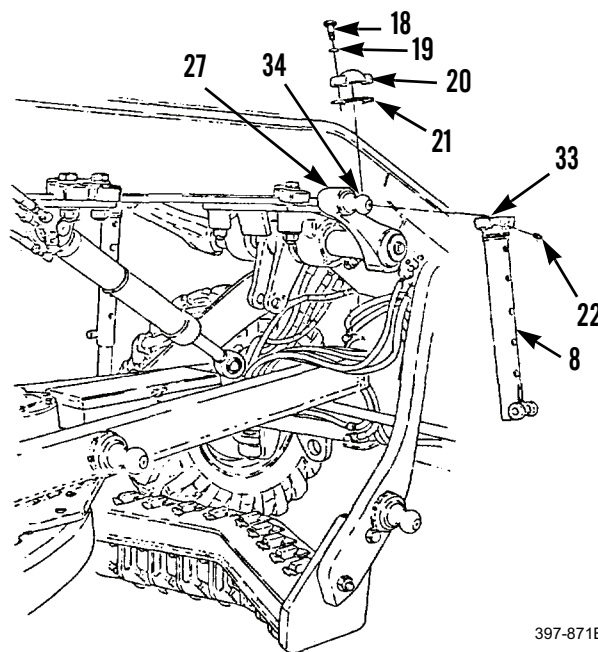
6. Install lubrication fitting (22) on socket (33) of sleeve (8).
7. Support sleeve (8) and position socket (33) over ball (34) of arm (27) and install spacer(s) (21), cap (20), two washers (19), and bolts (18).
8. Tighten bolts (18) hand-tight only. Tighten two bolts (18) evenly until there is no free play (clearance) between the ball (34) and cap (20). Do not over-tighten.



397-871B

INSTALLATION - CONTINUED

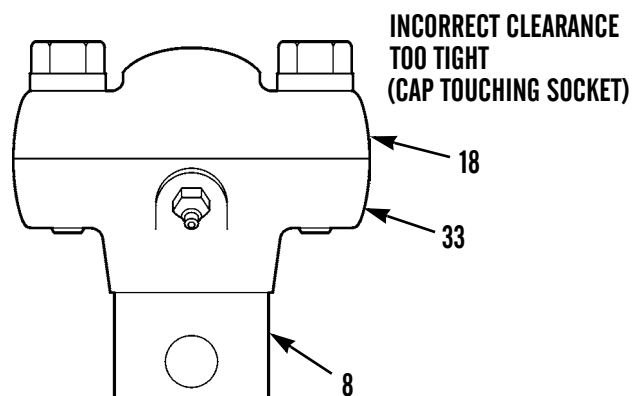9. Examine cap (18) and socket (33) of sleeve (8) from the side. If cap is touching socket, cap is too tight.




397-881A

10. If cap is too tight, remove two bolts (18), washers (19), and cap (20).

NOTE

Addition of one more spacer to spacers removed results in proper amount of free play between ball (34) and cap.

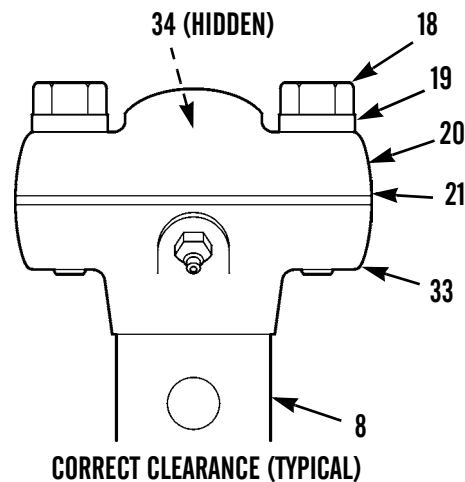
11. Add one spacer (21) and repeat steps 7 through 9 until two bolts (18) can be tightened to remove free play without allowing cap (20) to touch socket (33) of sleeve (8).
12. Install cap (20), two washers (19), and bolts (18) if removed to add additional spacer(s) (21).




397-882A

INSTALLATION - CONTINUED

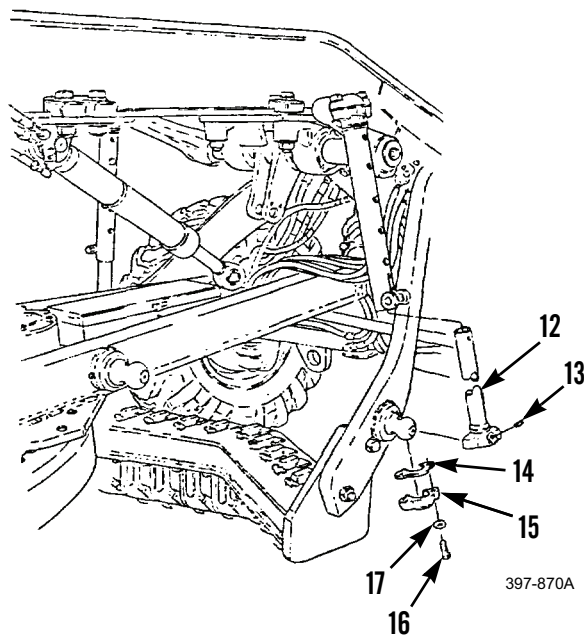13. Install lubrication fitting (13) on socket (36) of rod (12).
14. First mechanic install rod (12) in sleeve (8) and position socket (36) of rod (12) on ball (35) of drawbar (37).
15. Second mechanic install spacer(s) (14), cap (15), two washers (17), and bolts (16).
16. Tighten bolts (16) hand-tight only. Tighten two bolts evenly until there is no free play (clearance) between the ball (35) and cap (15); do not overtighten.



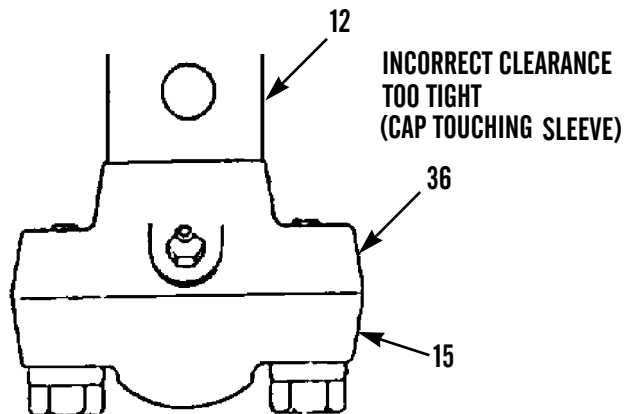17. Examine cap (15) and socket (36) of rod (12) from the side. If cap is touching socket, cap is too tight.



397-881B

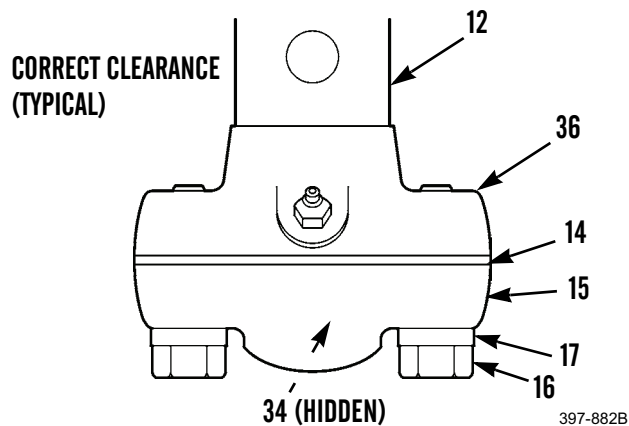
INSTALLATION - CONTINUED

18. If cap is too tight, remove two bolts (16), washers (17), and cap (15).


NOTE

Addition of one more spacer to spacers removed results in proper amount of free play between ball (34) and cap.

19. Add one spacer (14) and repeat steps 14 through 18 until two bolts (16) can be tightened to remove free play without allowing cap (15) to touch socket (36) of rod (12).
20. Install cap (15), two washers (17), and bolts (16) if removed to add additional spacer(s) (14).



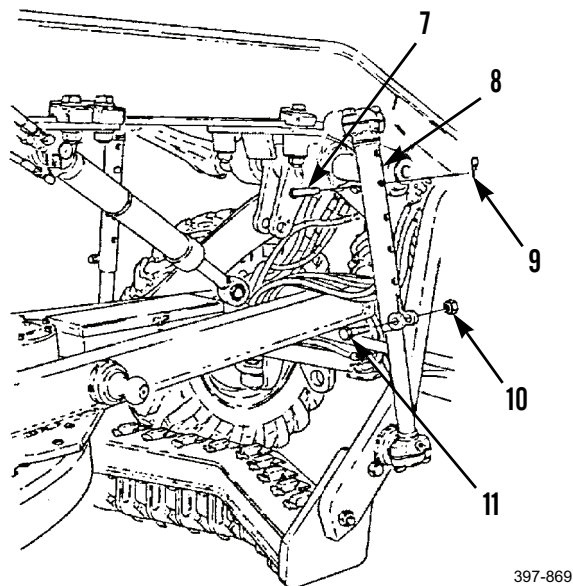21. Install pin (7) and pin (9).
22. Install screw (11) and nut (10).




INSTALLATION - CONTINUED**WARNING**

Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause injury or death to personnel.

NOTE

The hydraulic cylinder weighs 51 lb (23 kg).

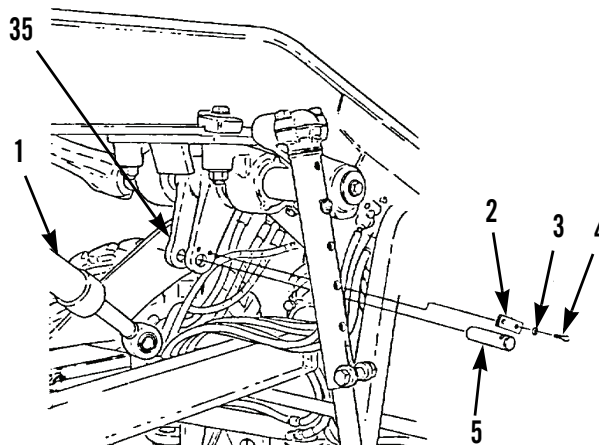23. Align hydraulic cylinder (1) with yoke (35) and install pin (5).
24. Install spacer (2), two washers (3), and bolts (4).
25. Repeat steps 4 through 22 for left scarifier actuating assembly.
26. Start engine (TM 5-3805-261-10).
27. Operate scarifier lift cylinder.
28. Stop engine.
29. Check for leaks.
30. Refill hydraulic tank to proper level (WP 0216 00).



397-2194

END OF WORK PACKAGE

CHAPTER 5
SUPPORTING INFORMATION

SCOPE

This work package lists all publication indexes, forms, field manuals, technical bulletins, technical manuals and other publications referenced in this manual and which apply to maintenance of the 130G Grader.

PUBLICATION INDEXES

The following indexes should be consulted frequently for latest changes or revisions and for new publications relating to material covered in this technical manual.

- Consolidated Army Publications and Forms Index. DA PAM 25-30
- Functional Users Manual for the Army Maintenance Management System (TAMMS) PAM 738-750

FORMS

NOTE

Refer to PAM 738-750, *Functional Users Manual for the Army Maintenance Management System (TAMMS)*, for instructions on the use of maintenance forms.

- Accident Identification Card DD Form 518
- Equipment Inspection and Maintenance Worksheet DA Form 2404, DA Form 5988-E
- Maintenance Request DA Form 2407
- Motor Vehicle Accident Report. SF Form 91
- Product Quality Deficiency Report. SF Form 368
- Recommended Changes to Publications and Blank Forms. DA Form 2028
- Uncorrected Fault Record DA Form 2408-14

FIELD MANUALS

- Army Motor Transport Unit and Operations. FM 55-30
- Basic Cold Weather Manual FM 31-70
- Chemical and Biological Contamination Avoidance FM 3-3
- Desert Operations FM 90-3
- First Aid. FM 4-25.11
- NBC Decontamination FM 3-5
- NBC Field Handbook FM 3-7
- Northern Operations FM 31-71
- Nuclear Contamination Avoidance FM 3-3-1
- Operations and Maintenance of Ordnance Materiel in Cold Weather FM 9-207
- Recovery and Battlefield Damage Assessment and Repair FM 9-43-2
- Rigging Techniques, Procedures, and Applications FM 5-125

TECHNICAL BULLETINS

- CARC Spot Painting TB 43-0242
- Color, Marking, and Camouflage Painting of Military Vehicles, Construction Equipment and Materials Handling Equipment. TB 43-0209
- Solder and Soldering TB SIG 222

REFERENCES - CONTINUED

0346 00

TECHNICAL BULLETINS - CONTINUED

Use of Antifreeze Solutions, Antifreeze Extender, Cleaning Compounds and Test Kit in Engine
Cooling Systems TB 750-651

TECHNICAL MANUALS

Inspection, Care, and Maintenance of Antifriction Bearings TM 9-214
Materials Used for Cleaning, Preserving, Abrading and Cementing Ordnance Materiel and
Related Materiels Including Chemicals TM 9-247
Operator’s and Organizational Maintenance Manual Including RPSTL
for STE/ICE-R. TM 9-4910-571-12&P
Operator’s Manual for the 130G Grader TM 5-3805-261-10
Operator’s, Unit, Direct Support, and General Support Maintenance
Manual for Lead-Acid Storage Batteries TM 9-6140-200-14
Painting Instructions for Army Materiel TM 43-0139
Procedures for Destruction of Equipment to Prevent Enemy Use (Mobility Equipment Command) TM 750-244-3
Transportability Guidance for the 130G Grader TM 55-3805-261-14
Unit, Direct Support and General Support Including Depot Maintenance RPSTL for the 130G Grader. . . TM 5-3805-261-24P

OTHER PUBLICATIONS

Abbreviations and Acronyms ASME Y14.38-1999
Army Medical Department Expendable/Durable Items CTA 8-100
Expendable/Durable Items (Except Medical, Class V Repair Parts, and Heraldic Items) CTA 50-970
Fuels and Lubricants Standardization Policy for Equipment AR 70-12
Operator’s Circular for Welding Theory and Application TC 9-237

END OF WORK PACKAGE

THE ARMY MAINTENANCE SYSTEM MAC

1. This introduction provides a general explanation of all maintenance and repair functions authorized at the two maintenance levels under the Two-Level Maintenance System concept.
2. The MAC immediately following this introduction designates overall authority and responsibility for the performance of maintenance functions on the identified end item or component. The application of the maintenance functions to the end item or component shall be consistent with the capacities and capabilities of the designated maintenance levels, which are shown in the MAC (WP 0348 00) in column (4) as:

Field - includes subcolumns:

C - Operator/Crew

O - Unit

F - Direct Support

Sustainment - includes subcolumns:

H - General Support

D - Depot

3. The tools and test equipment requirements (immediately following the MAC) list the tools and test equipment (both special tools and common tool sets) required for each maintenance function as referenced from the MAC.
4. The remarks (immediately following the tools and test equipment requirements) contain supplemental instructions and explanatory notes for a particular maintenance function.

MAINTENANCE FUNCTIONS

Maintenance functions are limited to and defined as follows:

1. **Inspect.** To determine the serviceability of an item by comparing its physical, mechanical, and/or electrical characteristics with established standards through examination (e.g., by sight, sound, or feel).
2. **Test.** To verify serviceability by measuring the mechanical, pneumatic, hydraulic, or electrical characteristics of an item and comparing those characteristics with prescribed standards on a scheduled basis, i.e., load testing of lift devices and hydrostatic testing of pressure hoses.
3. **Service.** Operations required periodically to keep an item in proper operating condition; e.g., to clean (includes decontaminate, when required), preserve, drain, paint, or replenish fuel, lubricants, chemical fluids, or gases.
4. **Adjust.** To maintain or regulate, within prescribed limits, by bringing into proper position, or by setting the operating characteristics to specified parameters.
5. **Align.** To adjust specified variable elements of an item to bring about optimum or desired performance.
6. **Calibrate.** To determine and cause corrections to be made or to be adjusted on instruments of test, measuring, and diagnostic equipment used in precision measurement. Calibration consists of comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.
7. **Remove/Install.** To remove and install the same item when required to perform service or other maintenance functions. Installation may be the act of emplacing or seating a spare, repair part, or module (component or assembly) into position in a manner to allow the proper functioning of an equipment or system.
8. **Replace.** To remove an unserviceable item and install a serviceable counterpart in its place. Replacement is authorized by the MAC and the assigned maintenance level is shown as the third position code of the Source, Maintenance and Recoverability (SMR) code.
9. **Repair.** Repair is the application of maintenance services, including fault location/troubleshooting, removal/installation, disassembly/assembly procedures, and maintenance actions to identify troubles and restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.

MAINTENANCE FUNCTIONS - CONTINUED**NOTE**

The following definitions are applicable to the “repair” maintenance function:

- Services - Inspecting, testing, service, adjustment, alignment, calibration, and/or replacement.
 - Fault location/troubleshooting - The process of investigating and detecting the cause of equipment malfunctioning; the act of isolating a fault within a system or Unit Under Test (UUT).
 - Disassembly/assembly - The step-by-step breakdown (taking apart) of a spare/functional group coded item to the level of its least component, assigned a SMR code for the level of maintenance under consideration (i.e., identified as maintenance significant).
 - Actions - Welding, grinding, riveting, straightening, facing, machining, and/or resurfacing.
10. **Overhaul.** That maintenance effort (service/action) prescribed to restore an item to a completely serviceable/operational condition as required by maintenance standards in appropriate technical publications. Overhaul is normally the highest degree of maintenance performed by the Army. Overhaul does not normally return an item to like new condition.
11. **Rebuild.** Consists of those services/actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (hours/miles, etc.) considered in classifying Army equipment/components.

EXPLANATION OF COLUMNS IN THE MAC, TABLE 1

1. **Column (1) - Group Number.** Column (1) lists Group numbers, the purpose of which is to identify maintenance significant components, assemblies, subassemblies, and modules with the Next Higher Assembly (NHA).
2. **Column (2) - Component/Assembly.** Column (2) contains the item names of components, assemblies, subassemblies, and modules for which maintenance is authorized.
3. **Column (3) - Maintenance Function.** Column (3) lists the functions to be performed on the item listed in Column (2). (For a detailed explanation of these functions refer to “Maintenance Functions” outlined above).
4. **Column (4) - Maintenance Level.** Column (4) specifies each level of maintenance authorized to perform each function listed in column (3), by indicating work time required (expressed as manhours in whole hours or decimals) in the appropriate subcolumn. This work time figure represents the active time required to perform that maintenance function at the indicated level of maintenance. If the number or complexity of the tasks within the listed maintenance function varies at different maintenance levels, appropriate work time figures are to be shown for each level. The work time figure represents the average time required to restore an item (assembly, subassembly, component, module, end item, or system) to a serviceable condition under typical field operating conditions. This time includes preparation time (including any necessary disassembly/assembly time), troubleshooting/fault location time, and quality assurance time in addition to the time required to perform the specific tasks identified for the maintenance functions authorized in the MAC. The symbol designations for the various maintenance levels are as follows:

Field:

- C - Operator/Crew Maintenance
- O - Unit Maintenance
- F - Direct Support Maintenance

Sustainment:

- H - General Support Maintenance
- D - Depot Maintenance

EXPLANATION OF COLUMNS IN THE MAC, TABLE 1- CONTINUED**NOTE**

The "L" maintenance level is not included in column (4) of the MAC. Functions to this level of maintenance are identified by a work time figure in the "H" column of column (4), and an associated reference code is used in the REMARKS CODE column (6). This code is keyed to the remarks, and the SRA complete repair application is explained there.

5. **Column (5) - Tools and Equipment Reference Code.** Column (5) specifies, by code, common tool sets (not individual tools), common Test, Measurement, and Diagnostic Equipment (TMDE), special tools, special TMDE, and special support equipment required to perform the designated function. Codes are keyed to the entries in the tools and test equipment table.
6. **Column (6) - Remarks Code.** When applicable, this column contains a letter code, in alphabetical order, which is keyed to the remarks table entries (Table 3).

EXPLANATION OF COLUMNS IN THE TOOLS AND TEST EQUIPMENT REQUIREMENTS, TABLE 2

1. **Column (1) - Tool or Test Equipment Reference Code.** The tool and test equipment reference code correlates with a code used in column (5) of the MAC.
2. **Column (2) - Maintenance Level.** The lowest level of maintenance authorized to use the tool or test equipment.
3. **Column (3) - Nomenclature.** Name or identification of the tool or test equipment.
4. **Column (4) - National Stock Number (NSN).** The NSN of the tool or test equipment.
5. **Column (5) - Tool Number (ICAGEC).** The manufacturer's part number, model number, or type number. The manufacturer's Commercial and Government Entity Code (CAGEC) is also included.

EXPLANATION OF COLUMNS IN THE REMARKS, TABLE 3

1. **Column (1) - Remarks Code.** The code recorded in column (6) of the MAC.
2. **Column (2) - Remarks.** This column lists information pertinent to the maintenance function being performed as indicated in the MAC.

END OF WORK PACKAGE

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader .

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL					(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE
			FIELD			SUSTAINMENT			
			UNIT		DS	GS	DEPOT		
			C	O	F	H	D		
01 0100	ENGINE Engine Assembly	Test		1.0				12,75,89	A
		Service		1.0				75,89	
0101	Crankcase, Block, Cylinder Head: Cylinder Block	Replace			14.0			74,78,85,89, 96,100	B
		Repair			3.0	95.0			
		Inspect			0.8			62,74, 89,94,96	C
		Inspect			4.0				
0102	Crankshaft: Crankshaft Hub Crankshaft Assembly	Replace			1.5			54,74,89,101	D
		Inspect				0.5			
		Replace				35.0			
0103	Flywheel Assembly: Flywheel Flywheel Housing	Replace			16.0			15,74,78,89,101	D
		Replace			10.0			18,74,78,89	
		Repair			2.0			74,89	
0104	Pistons, Connecting Rods: Piston Assemblies	Replace				14.0			
0105	Valves, Camshafts, and Timing System: Rocker Arm Assembly Valves	Adjust			1.0			28,31,74,89,96	C
		Replace			3.0			28,31,74,89,101	
		Repair			1.0			28,31,74,89,101	
		Replace			4.0			19,20,25,74,88, 89	
0106	Engine Lubrication System: Oil Pan Engine Oil Pump	Replace			2.0			74,89	
		Replace			4.0			74,89,96	

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL				(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE	
			FIELD		SUSTAINMENT				
			UNIT		DS	GS			DEPOT
			C	O	F	H			D
03	FUEL SYSTEM								
0301	Fuel Injector Nozzle	Test			1.0		87		
		Replace			1.0		8,58,74,89		
0302	Governor and Fuel Injection Pump Assembly	Adjust			2.0		74,89		
		Replace			2.0		74,89		
		Repair				4.0			
0304	Air Cleaner	Service	0.3	0.5			75,89,96	A	
		Replace		0.5			89		
0305	Turbocharger	Replace			1.5		74,89,96		
		Repair				2.0			
0306	Tanks, Lines, and Fittings Headers: Fuel Tank	Service	0.3					A	
		Replace		2.0			75,78,89,96		
		Repair		2.0			89	D	
0308	Engine Speed Governor and Controls	Adjust			1.0		74,89		
		Replace			2.0		74,89,96		
		Repair				3.0	74,89	E	
0309	Fuel Filters:								
	Primary Fuel Filter	Service	0.2	0.3			75,89,96		
		Replace		0.5			75,89,96		
	Secondary Fuel Filter	Service	0.2	0.3			75,89		
		Replace		0.5			75,89,96		
0311	Engine Starting Aids	Service		0.5			89	A	
		Replace		1.0			89		
		Repair		1.0			89		
04	EXHAUST SYSTEM								
0401	Muffler and Pipes	Replace		2.0			75,89		
05	COOLING SYSTEM								
0501	Radiator Assembly	Inspect	0.2						
		Service		1.0			75,89	A	
		Replace		3.0			16,78,89		
		Repair		3.0			89	D	
0504	Water Pump: Water Pump Assembly	Replace		2.5			89		
		Repair				1.0	74,89,96		

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL				(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE	
			FIELD		SUSTAINMENT				
			UNIT		DS	GS			DEPOT
			C	O	F	H			D
05	COOLING SYSTEM								
	- Continued								
0505	Fan Assembly:								
	Fan Drive	Service	0.2				A		
		Replace		1.0		75,89			
		Repair		0.5		75,89			
	Fan Belts	Inspect	0.1	0.1					
		Adjust		0.2		75,89			
		Replace		0.5		75,89			
06	ELECTRICAL								
	SYSTEM								
0601	Alternator	Test		0.5		12,75,89			
		Replace		1.5		89			
		Repair			2.0	74,89	F		
0603	Starting Motor:	Test		0.5		12,75,89			
		Replace		1.0		75,89,96			
		Repair			2.0	74,89,94,96	G		
0607	Instrument or Engine Control Panel:								
	Instrument Panel/ Electronic Monitoring System (EMS)	Test	0.1						
		Replace		1.0		75,89,94			
		Repair			1.0	75,89,94			
	Operator's Console Assembly	Replace		0.4		89			
		Repair		1.0		89			
0608	Miscellaneous Items:								
	Switches	Replace		0.3		89			
	Fuse Box and Fuses	Replace		0.5		89			
	NATO Slave Receptacle	Replace		0.5		89			
0609	Lights:								
	Headlights	Test	0.1						
		Replace		0.5		89			
	Turn Signal Lights	Test	0.1						
		Replace		0.5		89			

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL				(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE	
			FIELD		SUSTAINMENT				
			UNIT		DS	GS			DEPOT
			C	O	F	H			D
06	ELECTRICAL SYSTEM - Continued								
	Taillights	Test	0.1						
		Replace		0.5			89		
	Floodlights	Test	0.1						
		Replace		0.5			89		
0610	Sending Units and Warning Switches	Replace		0.5			75,89,96		
0612	Batteries, Storage: Batteries	Inspect	0.2						
		Test		0.5			12,75		
		Service		0.5			75,89		
		Replace		0.5			75,89		
	Battery Boxes	Replace		0.5			89		
		Repair		0.5			89		
	Battery Cables	Replace		0.3			89		
0613	Hull or Chassis Wiring Harness:								
	Small Harness (Lights etc.)	Test		1.0			75,89		
		Replace		0.5	2.5		74,75,89		
		Repair		1.0			75,89		
07	TRANSMISSION								
0705	Transmission Shifting Components	Adjust		0.5			89		
		Replace		1.5			75,89,96		
0710	Transmission Assembly and Associated Parts:								
	Transmission Assembly	Inspect	0.2						
		Test		0.2					
		Service		0.5			75,89		
		Replace			8.0		37,74,89		
		Repair			3.0	29.0	16,17,18, 56,62,74, 89,93		
0714	Servo Unit: Control Valve Assembly	Test			0.5		74,89		
		Replace			1.0		66,74		
0719	Transfer Shaft, Engine- to-Transmission	Replace			2.0		37,74,89		

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL					(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE
			FIELD		SUSTAINMENT				
			UNIT		DS	GS	DEPOT		
			C	O	F	H	D		
07	TRANSMISSION - Continued								
0721	Oil Cooler, Pump, and Filters:								
	Oil Coolers	Replace			1.0			89	
		Repair			1.0			89	
	Oil Pump	Replace			2.0			37,74,89	
	Oil Filter	Service		0.3				75,89	
		Replace		0.7				75,89	
10	FRONT AXLE								
1000	Front Axle Assembly	Service		0.3					
		Replace			3.0			9,44,60,65, 71,74,75,84, 89,92	
		Repair			5.0				
1004	Steering and Leaning Wheel:	Service	0.4						
		Replace			3.0			33,36,39,53,64, 74,77,89,100	
		Repair			5.0			33,36,39,53,64, 74,77,89,100	
	Steering Arm Assemblies	Adjust			0.3			37,74,84,89,96	
		Replace			5.0			11,37,40,49,57, 61,63,65,73,78, 80,82,84,89,92, 96,100	
		Repair			2.0			11,37,40,49,57, 61,63,65,73,78, 80,82,84,89,92, 96,100	
	Leaning Wheel Mechanism	Adjust			2.0			74,89	
		Replace			4.0			1,9,45,50,65,66, 71,74,78,82,89, 100	
	Leaning Wheel Cylinder	Replace		0.5				74,78,89	
		Repair			2.0			23,34,74,89,102	
11	REAR AXLE								
1100	Rear Axle Assembly:	Service		0.3				75,89	
		Replace			10.0			74,89	
		Repair			2.0	32.0		74,89	

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL					(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE
			FIELD		SUSTAINMENT				
			UNIT		DS	GS	DEPOT		
			C	O	F	H	D		
11	REAR AXLE - Continued								
	Differential	Service	0.5				75,89	A	
		Replace			10.0		74,78,89		
	Differential Lock Control	Service	0.5					A	
		Replace			1.0		74,89		
1103	Final Drive Assembly	Repair			1.0		74,89		
		Service	0.5					A	
		Replace			18.0		7,17,37,41,51, 55,56,62,66,70, 74,77,78,79,83, 89,90,93,102		
1105	Tandem Drive and Chain Assemblies:								
	Tandem Drive Housing	Service	0.3				75,89	A	
		Replace			8.5		66,74,78,89,100		
		Repair			8.0		75,89	D	
	Chain Assemblies	Replace			4.5		38,56,66,74,89		
		Repair			3.0		38,56,74,89		
12	BRAKES								
1201	Handbrakes:								
	Parking Brake Control Handle	Replace		1.0			89		
	Parking Brake Actuator Assembly	Adjust	0.5				89		
		Replace	1.0				74,89		
		Repair			1.0		58,63,74,81, 89		
1202	Service Brakes	Adjust			0.8		74,89		
		Replace			1.5		17,33,55,56,74, 78,89,96,100		
1206	Mechanical Brake System:								
	Air Brake Pedal and Linkage	Adjust	0.5				89		
		Replace	1.5				89		

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL				(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE	
			FIELD		SUSTAINMENT				
			UNIT		DS	GS			DEPOT
			C	O	F	H			D
12	BRAKES - Continued								
1208	Airbrake System:								
	Brake Control Valve	Replace		0.3				74,89	
	Air Reservoir	Service	0.3						A
		Replace		0.8				89	
		Repair			2.0			89	D
1209	Air Compressor Assembly	Replace			4.0			74,89	
		Repair				2.0		74,89,96	
13	WHEELS								
1311	Wheel Assembly (Front)	Replace		1.0				37,75,77,78,84, 89,102	
	Wheel Assembly (Rear)	Replace		1.0				37,75,77,78,84, 89,101	
1313	Tires	Service	0.3						A
		Replace		2.0				75,79,89	
		Repair		1.0				89	
14	STEERING								
1410	Hydraulic Pump or Fluid Motor Assembly:								
	Steering Control Pump and Steering Wheel	Replace		1.5				74,89	
		Repair			2.0			74,89,94,96	
	Supplemental Steering Pump and Motor	Replace		4.0				74,89	
1411	Hoses, Lines, and Fittings	Replace		2.0				89	
1412	Hydraulic Cylinder	Replace		0.5				74,89,100	
		Repair			2.0			74,89,101	H
1414	Relief Valve	Test			1.0			74,88,89	
		Replace			0.8			74,89	
		Repair			3.0			32,74,89	H

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL					(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE
			FIELD		SUSTAINMENT				
			UNIT		DS	GS	DEPOT		
			C	O	F	H	D		
15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS								
1501	Frame Assembly:								
	Front Frame Assembly	Repair			3.0			74,89	D
	Frame and Case Assembly, Rear	Repair			3.0			74,89	D
1503	Pintles and Towing Attachments:								
	Articulation Hitch	Service Repair	0.2	0.5	2.0			89 2,3,4,5, 46,59,60,65, 68,74,89,91, 96	A
18	BODY, CAB, HOOD, AND HULL								
1801	Body, Cab, Hood, and Hull Assemblies:								
	Hood Assemblies	Replace		1.0				75,78,89	
	ROPS/Cab Assembly (Types I & II)	Replace		4.0				75,78,89	
	ROPS/Cab Assembly (CCE)	Repair		2.0				75,78,89	
	ROPS/Cab Assembly (CCE)	Replace			8.0			75,78,89	
	ROPS/Cab Assembly (CCE)	Repair			4.0			75,78,89	
	Seat Assembly	Replace		0.8				89	
	Seat Belt	Inspect	0.2						
	Seat Belt	Replace		0.3				89	
1808	Toolboxes	Replace		0.3				89	
21	BUMPERS, GUARDS, AND MARINE FENDERS								
	Bumper	Replace			1.0			78,89	
22	BODY, CHASSIS AND HULL ACCESSORY ITEMS								
2202	Accessory Items:								
	Windshield Wiper Assembly	Replace		1.0				75,89	
	Windshield Wiper Assembly	Repair		2.0				75,89	D

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL				(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE	
			FIELD		SUSTAINMENT				
			UNIT		DS	GS			DEPOT
			C	O	F	H			D
22	BODY, CHASSIS AND HULL ACCESSORY ITEMS - Continued								
	Defroster Fans	Replace		1.0				89	
		Repair		1.0				89	
	Heater Assembly	Replace		1.5				89	
		Repair		1.5				89	
	Data Plates and Decals	Replace		0.2				30,89	
24	HYDRAULIC AND FLUID SYSTEMS								
2401	Hydraulic Pump Assembly:	Test			0.4				
		Service		0.3				89	
		Replace			2.5			74,78,89,96	
		Repair			3.0			13,43,52,69,74, 89,94,96	
	Circle Drive Motor	Replace		1.0				89	
		Repair			3.0			74,89,96	
2402	Pilot Check and Pressure Control Valve Assemblies	Adjust			1.0				
		Replace			3.0			74,89	
		Repair			2.5			74,89,94,96	
2403	Hydraulic Control Levers and Linkage	Adjust		1.5				89	
		Replace		2.0				89	
2406	Strainers, Filters, Lines, and Fittings, Etc.:	Inspect	0.2						
		Replace		2.0				74,89	
	Oil Cooler Assembly	Replace		2.0				74,89	
2407	Hydraulic Cylinders	Replace		1.5				74,78,89,100	
		Repair			3.0			74,89,101	
2408	Hydraulic Tank and Mounting Assembly	Inspect	0.2						
		Service		0.2				75,89	
		Replace			2.0			74,78,89,96	
		Repair			2.0			74,89,96	
47	GAUGES (NON- ELECTRICAL)								
	Gauges: Pressure, Temperature, and Articulation Indicator	Replace		0.5				89	

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 1. Maintenance Allocation Chart (MAC) for the 130G Series Grader - Continued.

(1) GROUP NUMBER	(2) COMPONENT/ ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE LEVEL					(5) TOOLS AND EQUIPMENT REF CODE	(6) REMARKS CODE
			FIELD		SUSTAINMENT				
			UNIT		DS	GS	DEPOT		
			C	O	F	H	D		
74	CRANES, SHOVELS, AND EARTHMOVING EQUIPMENT COMPONENTS								
7435	Moldboard Assembly:	Inspect	0.2						
		Service		0.3				A	
		Replace		3.0			17,78,89		
		Repair			2.0		74,89	D	
	Cutting Edges	Inspect	0.1						
		Replace		2.0			75,89		
	End Bits	Inspect	0.1						
		Replace		1.5			75,89		
7436	Moldboard Lift Arms and Pivot Assembly	Service	0.3	0.3				A	
		Replace			2.4		4,6,22,23, 48,61,65,72, 74,78,89,92		
		Repair			3.0		10,47,60,74, 86,89,91		
7438	Circle and Drawbar Assembly:								
	Drawbar Assembly	Service	0.3					A	
		Replace			2.4		74,78,89,101		
		Repair			3.4		74,89		
	Circle Turn Assembly	Inspect	0.1						
		Service		0.3			75,89	A	
		Replace			2.0		74,77,78,84,89, 101		
		Repair			3.0		74,78,89,100		
7439	Centershift Lock Assembly	Replace		1.0			89		
		Repair			1.5		89		
7440	Scarifier Assembly	Inspect	0.1						
		Service	0.3					A	
		Replace		2.0			74,78,89		
		Repair		3.0			74,78,89		

Table 2. Tools and Test Equipment Requirements for the 130G Series Grader .

(1) ITEM NO.	(2) MAINTENANCE LEVEL	(3) ITEM NAME	(4) NATIONAL STOCK NUMBER	(5) PART NUMBER/ CAGEC
1	F	Adapter, Bearing Remover	5120-01-300-4502	1P1832 (11083)
2	F	Adapter, Mechanical Puller	5120-00-357-5181	8B7555 (11083)
3	F	Adapter, Mechanical Puller	5120-01-286-8431	1P1838 (11083)
4	F	Adapter, Mechanical Puller	5120-01-286-8432	1P1837 (11083)
5	F	Adapter, Mechanical Puller	5120-01-288-2717	5P4184 (11083)
6	F	Adapter, Mechanical Puller	5120-01-286-8435	1P1835 (11083)
7	F	Adapter, Mechanical Puller	5120-00-316-9172	8B7556 (11083)
8	F	Adapter, Nozzle	5120-01-345-4526	FT1533 (11083)
9	F	Adapter, Puller	5120-01-286-8433	1P1833 (11083)
10	F	Adapter, Puller	5120-01-286-8434	1P1834 (11083)
11	F	Adapter, Puller	5120-01-295-3618	5F7340 (11083)
12	O	Analyzer Set, Engine	4910-00-124-2554	2389409 (16331)
13	F	Block		FT1017 (11083)
14	F	Bolt, Machine		0S1602 (11083)
15	F	Bracket, Lifting	5340-01-336-2459	FT0120 (11083)
16	O	Bracket, Link	5120-01-451-1401	1387575 (11083)
17	O	Bracket, Link	5340-01-476-1734	1387574 (11083)
18	F	Bracket, Link	4940-01-268-2201	1387573 (11083)
19	F	Bushing Driver, Valve	5120-01-030-1625	7S8858 (11083)
20	F	Compressor, Valve Spring	5120-00-314-6138	5S1330 (11083)
21	O	Driver Bit, T-15 TORX		1943532 (11083)
22	F	Driver Set, Bushing	5120-01-030-1626	1P0510 (11083)
23	F	Expander Assembly	5120-00-489-8167	4S9181 (11083)
24	O	Extractor, Tool	2520-01-201-4146	5R7047 (11083)
25	F	Extractor, Valve Group	4910-01-296-3862	1667441 (11083)
26	F	Gage, Profile	5220-01-296-4296	6V7058 (11083)
27	F	Gage, Profile	5220-01-296-4297	6V7068 (11083)

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 2. Tools and Test Equipment Requirements for the 130G Series Grader - Continued.

(1) ITEM NO.	(2) MAINTENANCE LEVEL	(3) ITEM NAME	(4) NATIONAL STOCK NUMBER	(5) PART NUMBER/ CAGEC
28	F	Gear, Engine Turning	4910-01-137-0662	5P7305 & 5P7306 (11083)
29	O	Guard, Safety, Tire Inflation	4910-00-025-0623	64E33077 (80049)
30	O	Heater, Gun-Type, Electric	4940-01-028-7493	EP-5UL (59164)
31	F	Housing, Gear Shaft	5120-01-119-1747	5P7306 (11083)
32	F	Indicator, Dial	5210-01-354-9255	6V3075 (11083)
33	F	Insertor, Seal	5120-01-122-6012	1U8698 (11083)
34	F	Insertor, Seal	5120-01-288-2777	5P2980 (11083)
35	O	Installer Tool, Seal		5H4845 (11083)
36	F	Jack Group		5P2968 (11083)
37	O	Jack, Dolly Type, Hydraulic: 10-ton capacity	4910-00-289-7233	93660 (36251)
38	F	Leg		7S7786 (11083)
39	F	Leg		4S5415 (11083)
40	F	Leg, Mechanical Puller	5120-01-345-5328	1H3109 (11083)
41	F	Leg, Puller	5120-01-275-9480	8B7549 (11083)
42	F	Leveler, Load	3950-01-263-9513	6V3145 (11083)
43	F	Maintenance Fixture, Automotive	4910-01-286-8364	2P5573 (11083)
44	F	Nut		1P544 (11083)
45	F	Nut		5P0637 (11083)
46	F	Nut, Plain, Hexagon	5310-00-404-3787	7H7539 (11083)
47	F	Nut, Fastener	5310-01-483-6594	1P-0544 (11083)
48	F	Nut		5S7351 (11083)
49	F	Nut, Plain, Hexagon	5310-00-656-6973	5F7351 (11083)
50	F	Nut, Plain, Round	5310-01-480-6692	1P-0543 (11083)
51	F	Pin	5315-01-270-2832	8S7615 (11083)
52	F	Plate, Protective	5120-01-288-242	5P975 (11083)
53	F	Plate, Step		8B7560 (11083)
54	F	Puller		FT0530 (11083)
55	F	Puller Attachment, Bearing	5120-00-288-6756	8B7551 (11083)

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 2. Tools and Test Equipment Requirements for the 130G Series Grader - Continued.

(1) ITEM NO.	(2) MAINTENANCE LEVEL	(3) ITEM NAME	(4) NATIONAL STOCK NUMBER	(5) PART NUMBER/ CAGEC
56	F	Puller Attachment, Cup	5120-00-293-1430	8B7554 (11083)
57	F	Puller Attachment, Mechanical	5120-00-288-6756	8B7551 (11083)
58	F	Puller Group, Nozzle	2910-01-250-1608	6V6980 (11083)
59	F	Puller, Hydraulic	5130-01-294-0717	6V3170 (11083)
60	F	Puller, Hydraulic	5130-01-296-4277	6V3175 (11083)
61	F	Puller, Hydraulic	5130-00-363-6680	6V3160 (11083)
62	F	Puller, Mechanical	5120-00-633-5085	GGG-P-781 (11083)
63	F	Puller, Mechanical	5120-00-633-5074	939 (45225)
64	F	Puller, Mechanical	5120-00-600-3306	1P2322 (11083)
65	F	Pump, Hydraulic Ram, Hand Driven	4320-00-374-1403	4C4865 (11083)
66	F	Ratchet Assembly	5120-01-275-2286	8S9906 (11083)
67	O	Removing Tool, Scarifier Tooth	3805-00-423-9746	6B3260 (11083)
68	F	Ring Installer		2P5498 (11083)
69	F	Rod, Guide		FT1016 (11083)
70	F	Saddle	2510-01-264-8424	8S8048 (11083)
71	F	Screw		8S6586 (11083)
72	F	Screw		8S6585 (11083)
73	F	Screw, Machine	5305-01-295-3554	5F7366 (11083)
74	F	Shop Equipment, Automotive Maintenance and Repair: Field Maintenance, Basic, Less Power	4910-00-754-0705	SC4910-95CLA31 (19204) (LIN: W32593)
75	O	Shop Equipment, Automotive Maintenance and Repair: Organizational Maintenance, Common No. 1, Less Power	4910-00-754-0654	SC 4910-95CLA74 (19204) (LIN: W32593)
76	O	Shop Equipment, Automotive Maintenance and Repair: Organizational Maintenance, Common No. 2, Less Power	4910-00-754-0650	SC4910-95CLA72 (19204)
77	O	Shop Equipment, Contact Maintenance: Truck Mounted	4940-00-294-9518	MILS45854 (81349)
78	O	Sling	2835-01-078-2081	4-8FTX2IN (91796)
79	F	Socket, Spanner	5120-01-288-2545	5P4204 (11083)

MAINTENANCE ALLOCATION CHART (MAC) - CONTINUED

0348 00

Table 2. Tools and Test Equipment Requirements for the 130G Series Grader - Continued.

(1) ITEM NO.	(2) MAINTENANCE LEVEL	(3) ITEM NAME	(4) NATIONAL STOCK NUMBER	(5) PART NUMBER/ CAGEC
80	F	Spacer		L-1774 (11083)
81	F	Spacer, Puller Screw	5120-00-423-8162	0T0774 (11083)
82	F	Spacer, Sleeve	5365-01-288-2658	5P4197 (11083)
83	F	Stand, Lifting and B	5120-01-134-8085	4C6486 (11083)
84	O	Stand, Maintenance, Automotive Axle: 24,000 lb capacity, height range 19–29-1/2 in.	4910-01-480-0147	1778A (45225)
85	F	Stand, Maintenance, Automotive Engine	4910-01-117-4344	1750A (45225)
86	F	Stud, Plain	5307-01-485-7432	4C-9634 (11083)
87	F	Tester Group, Nozzle	4320-01-263-9716	5P4150 (11083)
88	F	Tester, Spring Resiliency	6635-01-124-1771	8S2263 (11083)
89	O	Tool Kit, General Mechanic's: Automotive	5180-01-454-3787	12B470000 (59678)
90	F	Tool, Special	4910-01-265-0428	8S7611 (11083)
91	F	Washer, Flat	5310-01-526-7006	3H-0467 (11083)
92	F	Washer	5310-01-485-7439	5F7353 (11083)
93	F	Wrench, Ratchet	5120-01-350-5274	8H684 (11083)
94	F	Wrench, Torque: 3/8 in. drive, 0-150 lb-in.	5120-00-230-6380	TQ12B (55719)
95	O	Wrench, Torque: 3/8 in. drive, 0-200 lb-in.	5120-00-853-4538	
96	O	Wrench, Torque, 3/8 in. drive, 0-75 lb-ft	5120-00-554-7292	GGG-W-00686 (81348)
97	O	Wrench, Torque, 3/8 in. drive, 5-75 lb-ft	5120-01-355-1734	
98	F	Wrench, Torque: 1/2 in. drive, 0-300 lb-in.	5120-00-247-2563	
99	O	Wrench, Torque: 1/2 in. drive, 50-250 lb-ft	5120-01-399-5604	TVW250 (76377)
100	F	Wrench, Torque: 1/2 in. drive, 50-250 lb-ft	5120-01-042-0982	
101	O	Wrench, Torque: 3/4 in. drive, 0-600 lb-ft	5120-01-113-9564	7379 (45225)
102	O	Wrench, Torque: 3/4 in. drive, 120-600 lb-ft	5120-01-399-5605	TWZ600 (76377)

Table 3. Remarks for the 130G Series Grader.

(1) REFERENCE CODE	(2) REMARKS
A	Preventive Maintenance Checks and Services (PMCS)
B	Limited Field Repair Authorized (Seals, Gaskets, Bearings, Plugs, and Cylinder Head)
C	Limited Field Repair Authorized (Seals, Gaskets, Injectors, Springs, and Valves)
D	Limited Field Repair Authorized (Replacement of Broken or Missing Parts and/or Minor Welding)
E	Limited Field Repair Authorized (Seals, Gaskets, and Bearings)
F	Limited Field Repair Authorized (Seals, Gaskets, Bearings, and Brushes)
G	Limited Field Repair Authorized (Seals, Gaskets, Bearings, Brushes, and Starter Gear)
H	Limited Field Repair Authorized (Seals, Gaskets, Wipers, and Rings)
I	Limited Field Repair Authorized (Seals, Gaskets, and Missing/Broken Parts)
J	Refer to TM 9-2610-200-14

END OF WORK PACKAGE

SCOPE

This work package lists expendable and durable items you will need to maintain the 130G Grader. This listing is for informational purposes only and is not authority to requisition the listed items. These items are authorized to you by CTA 50-970, *Expendable/Durable Items (Except Medical, Class V Repair Parts, and Heraldic Items)*, or CTA 8-100, *Army Medical Department Expendable/Durable Items*.

EXPLANATION OF COLUMNS

1. **Column (1) - Item Number.** This number is assigned to the entry in the listing and is referenced in the narrative instructions to identify the item [e.g., Use antifreeze (Item 5, WP 0349 00)].
2. **Column (2) - Level.** This column identifies the lowest level of maintenance that requires the listed item.
 - C - Operator/Crew
 - O - Unit Maintenance
 - F - Direct Support Maintenance
3. **Column (3) - National Stock Number.** This is the National Stock Number assigned to the item which you can use to requisition it.
4. **Column (4) - Description, CAGEC, and Part Number.** This provides the other information you need to identify the item.
5. **Column (5) - Unit of Measure (U/M).** This column shows the physical measurement or count of an item, such as gallon, dozen, gross, etc.

EXPENDABLE AND DURABLE ITEMS LIST - CONTINUED

0349 00

(1) ITEM NUMBER	(2) LEVEL	(3) NATIONAL STOCK NUMBER	(4) DESCRIPTION, CAGEC, AND PART NUMBER	(5) U/M
1	O	8040-01-023-4173	ADHESIVE (1A9T3) EC-1300	PT
2	O		ADHESIVE (81348) MMM-A-1617	
		8040-00-262-9025	4 Ounce Tube	TU
		8040-00-262-9026	1/2 Pint Can	CN
3	O		ADHESIVE: PVC (25472) A541B	
		8040-00-573-1502	1 Pint Can	
4	O	8040-01-250-3969	ADHESIVE: Type 2 (05972) 242	BT
5	C		ANTIFREEZE: Permanent, Ethylene Glycol, Inhibited (58536) AA52624-1-A	
		6850-01-441-3218	1 Gallon Can	CN
		6850-01-441-3223	55 Gallon Drum	DR
6	O		ANTISEIZE COMPOUND (05972) 76764	
		8030-00-251-3980	1 Pound Tube or Can	TU or CN
7	O	5340-00-450-5718	CAP SET, PROTECTIVE, DUST AND MOISTURE (19207) 10935405	EA
8	C		CLEANING COMPOUND: Solvent, Type III (81349) MIL-PRF-680	
		6850-01-474-2318	1 Gallon Can	CN
		6850-01-474-2320	5 Gallon Can	CN
		6850-01-474-2321	55 Gallon Drum	DR
9	O		CLOTH: Abrasive, Emery, Fine (80204) ANSI B74.18	
		5350-00-584-4654	50 Sheet Package	PG
10	O		COMPOUND, RETAINING MIL-R-46082A	
11	C		DETERGENT: General Purpose, Liquid (83421) 7930-00-282-9699	
		7930-00-282-9699	1 Gallon Can	CN

EXPENDABLE AND DURABLE ITEMS LIST - CONTINUED

0349 00

(1) ITEM NUMBER	(2) LEVEL	(3) NATIONAL STOCK NUMBER	(4) DESCRIPTION, CAGEC, AND PART NUMBER	(5) U/M
12	O	3439-00-255-9935	FLUX: Soldering (58536) A-A-51145TY FORM A 1 Pound Can	CN
13	C	9140-00-286-5286 9140-00-286-5287 9140-00-286-5288	FUEL: Diesel, DF-1 Grade, Winter (81346) ASTM D 975 Bulk 5 Gallon Can 55 Gallon Drum	GL CN DR
14	C	9140-00-286-52 9140-00-286-52 9140-00-286-52	FUEL: Diesel, DF-2 Grade (81346) ASTM D 975 Bulk 5 Gallon Can 55 Gallon Drum	GL CN DR
15	C	9130-01-031-5816	FUEL, TURBINE: Aviation (81349) MILT83133 GR JP8 Bulk	GL
16	O	8040-01-038-5043	GASKET CEMENT (11083) 5H2471 8 Ounce Can	CN
17	C	9150-01-197-7688 9150-01-197-7690 9150-01-197-7692 9150-01-197-7693	GREASE: Automotive and Artillery, GAA (81349) M-10924-A 2-1/4 Ounce Tube (81349) M-10924-C 1-3/4 Pound Can (81349) (81349) M-10924-E 35 Pound Pail (81349) M-10924-B 14 Ounce Cartridge	TU CN CN CA
18	O	9150-01-361-8919	GREASE, ELECTRICALLY CONDUCTIVE (53711) 5190179	OZ
19	O	5970-00-815-1295	INSULATING SLEEVING, ELECTRICAL (11530) 08-196485-06 250 Foot Spool	FT

EXPENDABLE AND DURABLE ITEMS LIST - CONTINUED

0349 00

(1) ITEM NUMBER	(2) LEVEL	(3) NATIONAL STOCK NUMBER	(4) DESCRIPTION, CAGEC, AND PART NUMBER	(5) U/M
20	O	5970-00-476-6717	INSULATING VARNISH, ELECTRICAL (75037) 1602 13 Ounce Aerosol Can	CN
21			LUBRICANT: Rubber (11083) 5P-3975 1 Gallon Can	CN
22			LUBRICANT, THREAD (11083) 2P2506	
23	O	9150-01-035-5390 9150-01-035-5391	LUBRICATING OIL, GEAR: GO 75 (81349) MIL-PRF-2105 1 Quart Can 5 Gallon Can	CN CN
24	O	9150-01-035-5392 9150-00-001-9395 9150-01-035-5394	LUBRICATING OIL, GEAR: GO 80/90 (81349) MIL-PRF-2105 1 Quart Can 5 Gallon Can 55 Gallon Drum	CN CN DR
25	O	9150-00-543-7220	LUBRICATING OIL: Molybdenum Disulfide, Silicone (81349) DOD-L-25681 1 Pound Can	CN
26	C	9150-00-402-4478 9150-00-402-2372 9150-00-491-7197	OIL, LUBRICATING: OEA, Arctic (81349) MIL-L-46167 1 Quart Can 5 Gallon Can 55 Gallon Drum	CN CN DR
27	C	9150-00-189-6727 9150-00-186-6668 9150-00-191-2772	OIL, LUBRICATING: OE/HDO-10 (81349) MIL-PRF-2104 1 Quart Can 5 Gallon Can 55 Gallon Drum	CN CN DR
28		9150-00-247-0481	OIL, LUBRICATING: OE/HDO-10/30 (2R128) BRAYCO413J	QT
29	C	9150-00-186-6681 9150-00-188-9858	OIL, LUBRICATING: OE/HDO-30 (81349) MIL-PRF-2104 1 Quart Can 5 Gallon Can	CN CN

EXPENDABLE AND DURABLE ITEMS LIST - CONTINUED

0349 00

(1) ITEM NUMBER	(2) LEVEL	(3) NATIONAL STOCK NUMBER	(4) DESCRIPTION, CAGEC, AND PART NUMBER	(5) U/M
30	C		OIL, LUBRICATING: OE/HDO-15/40 (81349) MIL-PRF-2104	
		9150-01-152-4117	1 Quart Can	CN
		9150-01-152-4118	5 Gallon Can	CN
		9150-01-152-4119	55 Gallon Drum	DR
31	F	5350-00-619-9167	PAPER, ABRASIVE: 80 Grit, 9x11 Sheets (80204) ANSI B74.18	PG
32	O	9150-00-905-1387	PENETRATING OIL: AEROKROIL (13868)	
			10 Ounce Can, Pressurized	CN
33			PETROLATUM, TECHNICAL (81348) VV-P-236	
		9150-00-250-0933	7.5 Pound Can	CN
34	O		PIGMENT, PAINT PRODUCTS: Prussian Blue (58536) AA3108-2A-001Q	
		8010-00-664-1414	1 Quart Can	CN
35			RAG, WIPING (80244) 7920-00-205-1711	
		7290-00-205-1711	50 Pound Bale	BL
36	O		ROPE	
37	O		SANDPAPER: No. 00	
38			SEALING COMPOUND (05972) 26241	
		8030-01-142-3131	250 CC Bottle	BT
39	O, F		SEALING COMPOUND MIL-S-22473	
40	O	6920-01-239-1562	SEALANT, THREAD: 11784488 (19200)	TV
41	F		SILICONE COMPOUND (19207) 12273204	
		6850-00-927-9461	5 Ounce Tube	TU
42	O		SOLDER: Lead-Tin Alloy, Rosin Core (81346) SN60WRP2 0.032 1LB	
		3439-00-555-4629	1 Pound Spool	LB

EXPENDABLE AND DURABLE ITEMS LIST - CONTINUED

0349 00

(1) ITEM NUMBER	(2) LEVEL	(3) NATIONAL STOCK NUMBER	(4) DESCRIPTION, CAGEC, AND PART NUMBER	(5) U/M
43		5975-00-903-2284	STRAP, TIEDOWN, ELECTRICAL COMPONENTS 4 Inch Length, Black, Package of 100 (96906) MS3367-4-0	HD
		5975-00-984-6582	6 Inch Length, Black, Package of 100 (96906) MS3367-1-0	HD
		5975-00-935-5946	13.35 Inch Minimum Length, Brown (96906) MS3367-2-1	EA
44		9905-00-537-8954	TAG, MARKER (64067) 9905-00-537-8954 Bundle of 50	BD
45		5640-00-103-2254	TAPE, DUCT 2 Inches Wide (39482) 1791K70 60 Yard Roll	RL
46		9905-00-596-0191	WIRE, NONELECTRICAL (81346) ASTM A641 283 Foot Coil	CL

END OF WORK PACKAGE


INTRODUCTION

1. This work package includes complete instructions for making items authorized to be manufactured by maintenance personnel.
2. An index, in alphabetical order by nomenclature, is provided for cross-referencing the item to be manufactured to the Figure number and page number where manufacturing instructions are located. Refer to Table 1 below.
3. Manufacture from steel or aluminum stock to specifications on the illustrations.
4. All dimensions on illustrations are in standard units.

Table 1. Manufactured Items Cross-Reference Index.

NOMENCLATURE	FIGURE NUMBER	PAGE NUMBER
Adapter Tool	Figure 1	0325 00-1
Interference Block	Figure 2	0325 00-2

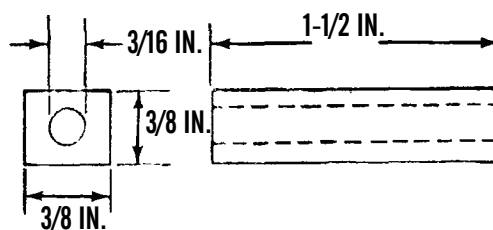
MANUFACTURING INSTRUCTIONS



397-883

Figure 1. Adapter Tool.

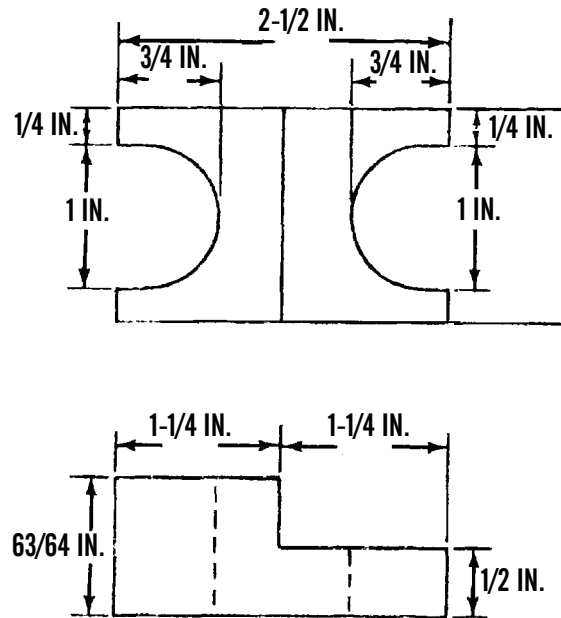MANUFACTURING INSTRUCTIONS - CONTINUED



397-4359

Figure 2. Interference Block.

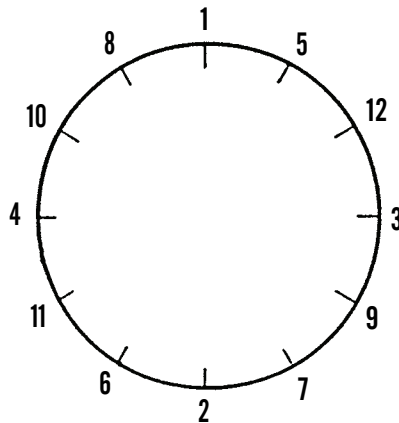
END OF WORK PACKAGE

SCOPE


This work package lists standard torque values and provides general information for applying torque. Special torque values and tightening sequences are indicated in the maintenance procedures for applicable components.

GENERAL

1. Always use torque values listed in Tables 1 and 2 when a maintenance procedure does not give a specific torque value.
 - a. Table 1 provides torque limits for SAE standard fasteners.
 - b. Table 2 provides torque limits for metric fasteners.
2. Unless otherwise indicated, standard torque tolerance shall be $\pm 10\%$.
3. Torque values listed are based on clean, dry threads. Reduce torque by 10% when engine oil is used as a lubricant. Reduce torque by 20% if new plated capscrews are used.
4. If the maintenance procedures do not specify a tightening order, use the following guides:
 - a. Unless otherwise specified, lubricate threads of fasteners with oil (OE/HDO-10 or OEA-30).
 - b. When tightening fasteners above 30 lb-ft (41 Nm), use the torque pattern but only tighten to 70% of final value (multiply final value by 0.7). Repeat pattern until final value is reached.
 - c. Tighten circular patterns using circular torque pattern and tighten straight patterns using straight torque pattern.



CIRCLULAR TORQUE PATTERN



STRAIGHT TORQUE PATTERN

CAUTION

If replacement capscrews are of higher grade than originally supplied, use torque specifications for the original. This will prevent equipment damage due to overtorquing.

Table 1. Torque Limits - SAE Standard Fasteners.









Current Usage	Much Used	Much Used	Used at Times	Used at Times
QUALITY OF MATERIAL	INDETERMINATE	MINIMUM COMMERCIAL	MEDIUM COMMERCIAL	BEST COMMERCIAL
SAE Grade Number	1 or 2	5	6 or 7	8
Cap Screw Head Markings				
Manufacturer's marks may vary				
These are all SAE Grade 5 (3 line)				
CAP SCREW BODY SIZE IN. - THREAD	TORQUE LB-FT (NM)	TORQUE LB-FT (NM)	TORQUE LB-FT (NM)	TORQUE LB-FT (NM)
1/4 20 28	5 (7) 6 (8)	8 (11) 10 (14)	10 (14)	12 (16) 14 (19)
5/16 18 24	11 (15) 13 (18)	17 (23) 19 (26)	19 (26)	24 (33) 27 (37)
3/8 16 24	18 (24) 20 (27)	31 (42) 35 (47)	34 (46)	44 (60) 49 (66)
7/16 14 20	28 (38) 30 (41)	49 (66) 55 (75)	55 (75)	70 (95) 78 (106)
1/2 13 20	39 (53) 41 (56)	75 (102) 85 (115)	85 (115)	105 (142) 120 (163)
9/16 12 18	51 (69) 55 (75)	110 (149) 120 (163)	120 (163)	155 (210) 170 (231)
5/8 11 18	83 (113) 95 (129)	150 (203) 170 (231)	167 (226)	210 (285) 240 (325)
3/4 10 16	105 (142) 115 (156)	270 (366) 295 (400)	280 (380)	375 (508) 420 (569)
7/8 9 14	160 (217) 175 (237)	395 (536) 435 (590)	440 (597)	605 (820) 675 (915)
1 8 14	235 (319) 250 (339)	590 (800) 660 (895)	660 (895)	910 (1234) 990 (1342)

Table 2. Torque Limits - Metric Fasteners.

Torque values for metric thread fasteners with lubricated* or plated threads†				
Thread Diameter-Pitch				
	Class 8.8 Bolt	Class 8 Nut	Class 10.9 Bolt	Class 10 Nut
	Torque: lb-ft (Nm)		Torque: lb-ft (Nm)	
M6	5 (7)		7 (9)	
M8	12 (16)		17 (23)	
M8 x 1	13 (18)		18 (24)	
M10	24 (33)		34 (46)	
M10 x 1.25	27 (37)		38 (52)	
M12	42 (57)		60 (81)	
M12 x 1.5	43 (58)		62 (84)	
M14	66 (89)		95 (129)	
M14 x 1.5	72 (98)		103 (140)	
M16	103 (140)		148 (201)	
M16 x 1.5	110 (149)		157 (213)	
M18	147 (199)		203 (275)	
M18 x 1.5	165 (224)		229 (310)	
M20	208 (282)		288 (390)	
M20 x 1.5	213 (313)		320 (434)	
M22	283 (384)		392 (531)	
M22 x 1.5	315 (427)		431 (584)	
M24	360 (488)		498 (675)	
M24 x 2	392 (531)		542 (735)	
M27	527 (715)		729 (988)	
M27 x 2	569 (771)		788 (1068)	
M30	715 (969)		990 (1342)	
M30 x 2	792 (1074)		1096 (1486)	

* All plated and unplated fasteners should be coated with oil before installation.

† Use these torque values if either the bolt or nut is lubricated or plated (zinc-phosphate conversion-coated, cadmium-plated, or waxed).

END OF WORK PACKAGE

INTRODUCTION

1. This work package contains schematic diagrams for the 130G Series Grader.
2. The following schematic diagrams are included in this work package:

Figure 1. 130GNS and 130GNSCE Electrical Schematic

Figure 2. 130GS and 130GSCE Electrical Schematic

Figure 3. Fuse and Switch Logic Schematic

Figure 4. Hydraulic System Schematic

Figure 5. Steering System Schematic

Figure 6. 130G, 130GNS, and 130GNSCE Air Brake System Schematic

Figure 7. 130GS and 130GSCE Air Brake System Schematic

Figure 8. Supplemental Steering Electrical Schematic

Figure 9. Supplemental Steering Hydraulic Schematic (Non-actuated)

Figure 10. Supplemental Steering Hydraulic Schematic (Actuated)

Figure 11. Engine Charging System Schematic

Figure 12. Cooling System Schematic

Figure 13. Fuel System Schematic

Figure 14. Lubrication System Schematic

Figure 15. Transmission Hydraulic Schematic

Figure 16. Transmission Control Valves Schematic

Figure 17. 130 G Electrical Schematic

TO SHEET 2

TO SHEET 3


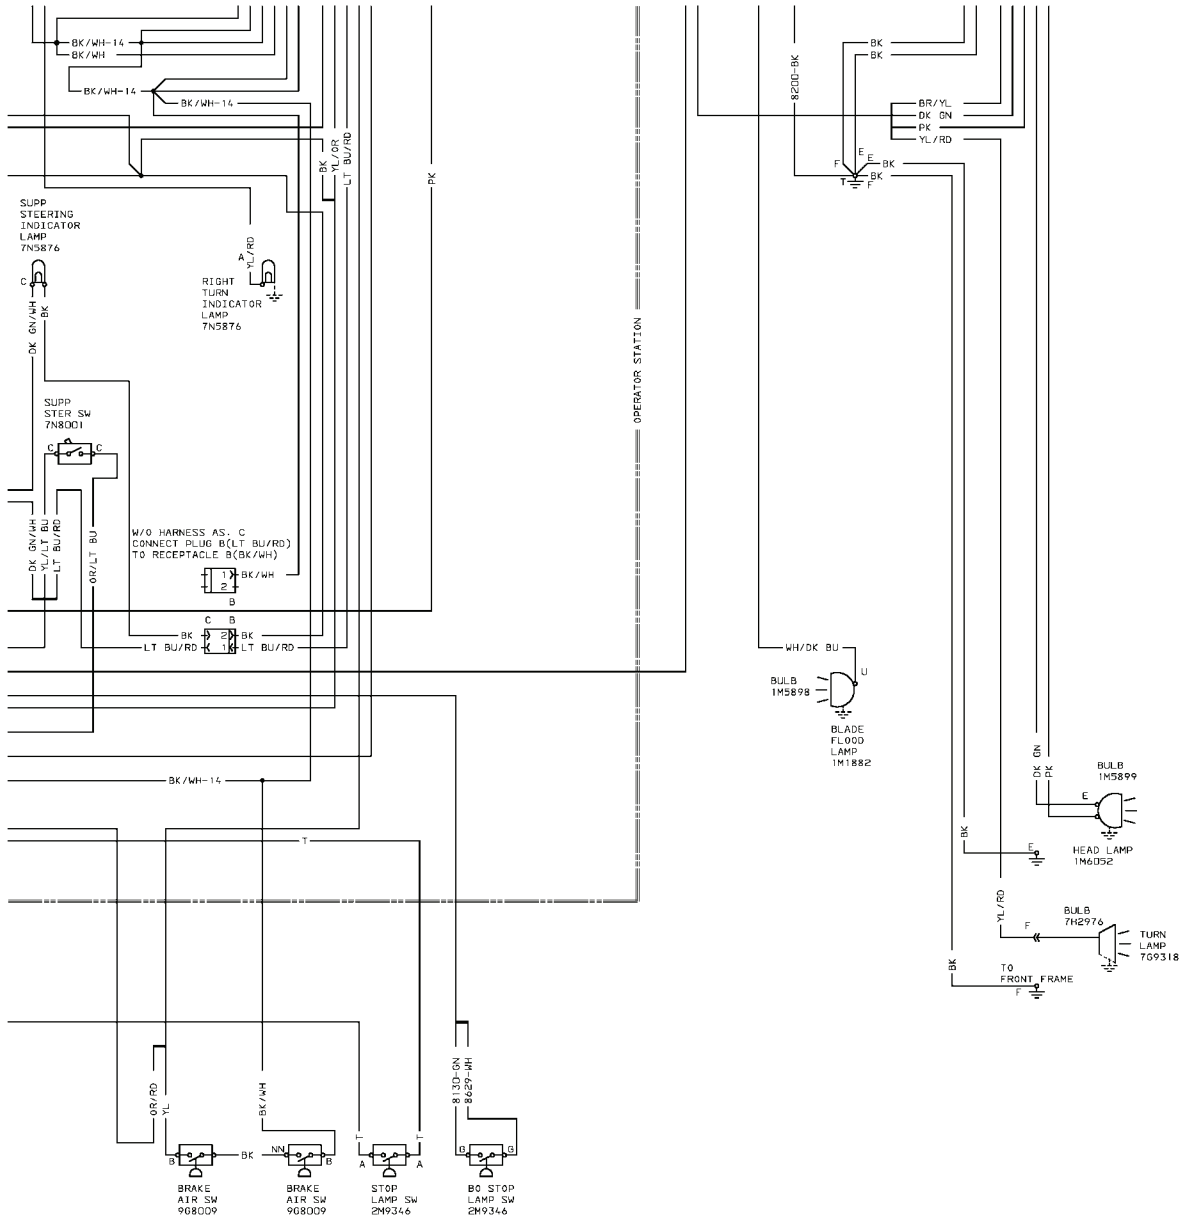


Figure 1. 130GNS and 130GNSCE Electrical Schematic (Sheet 1 of 6).

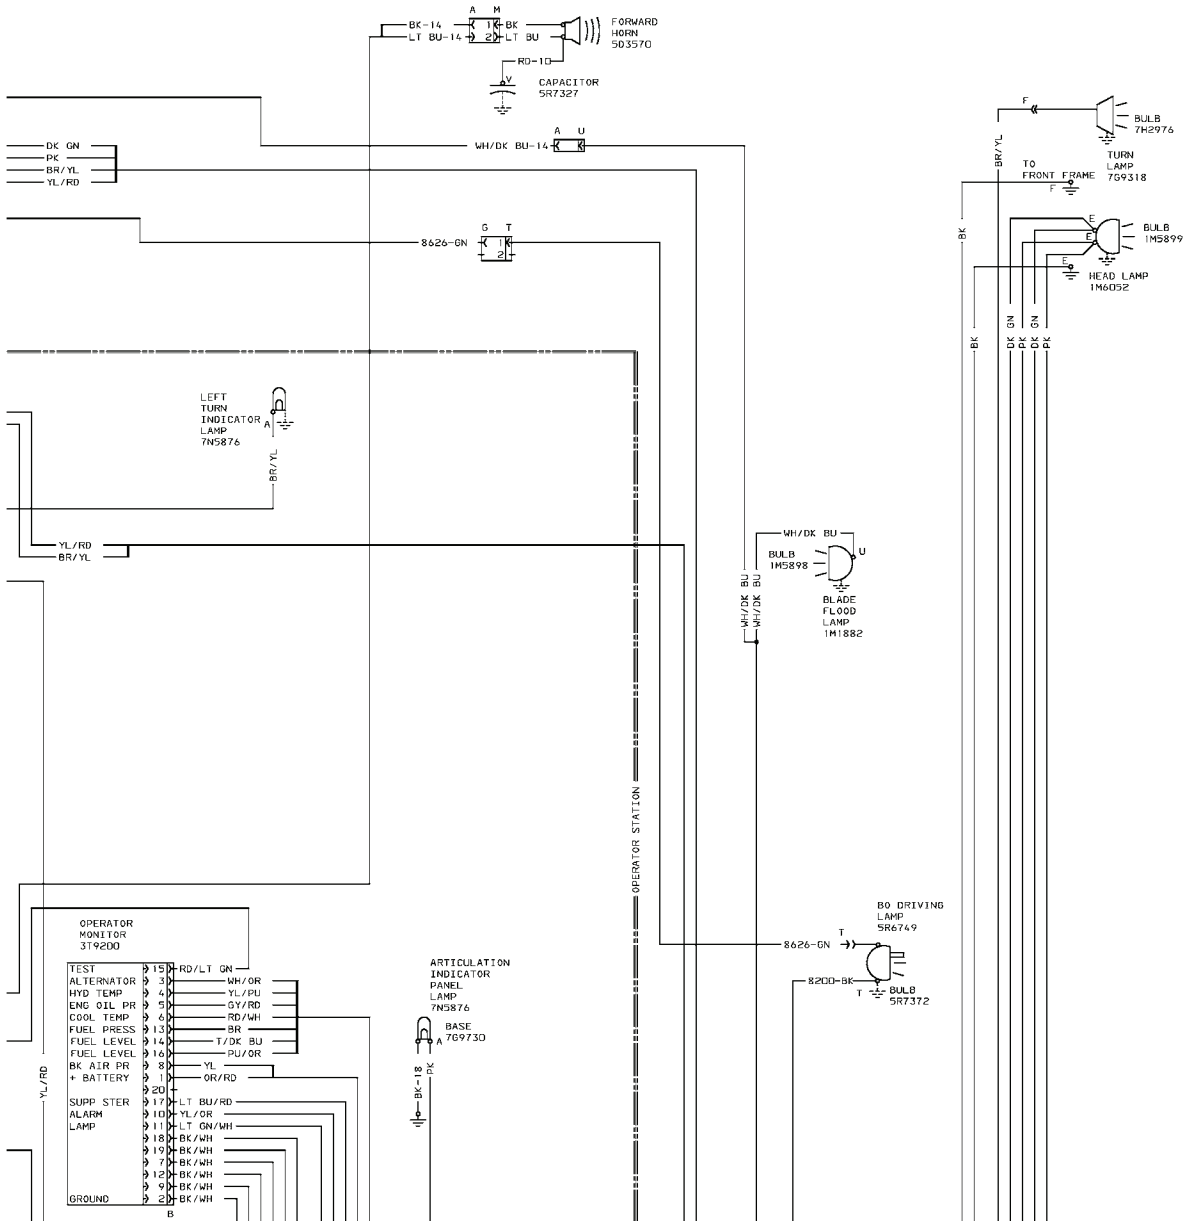TO SHEET 4



TO SHEET 1

Figure 1. 130GNS and 130GNSCE Electrical Schematic (Sheet 2 of 6).

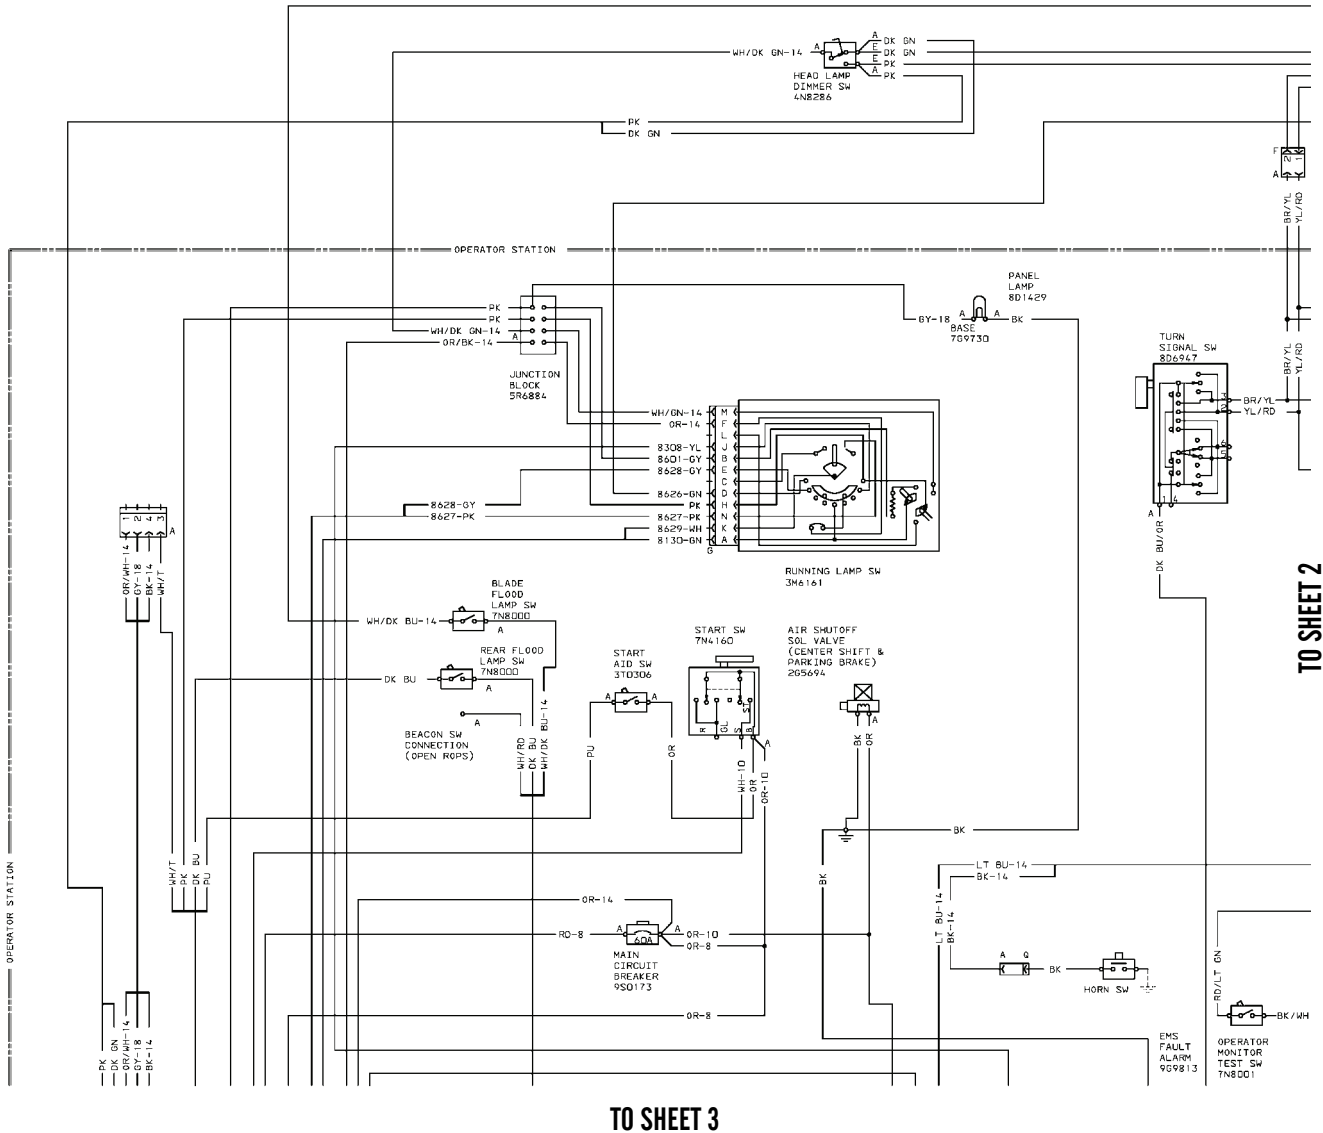


Figure 1. 130GNS and 130GNSCE Electrical Schematic (Sheet 4 of 6).

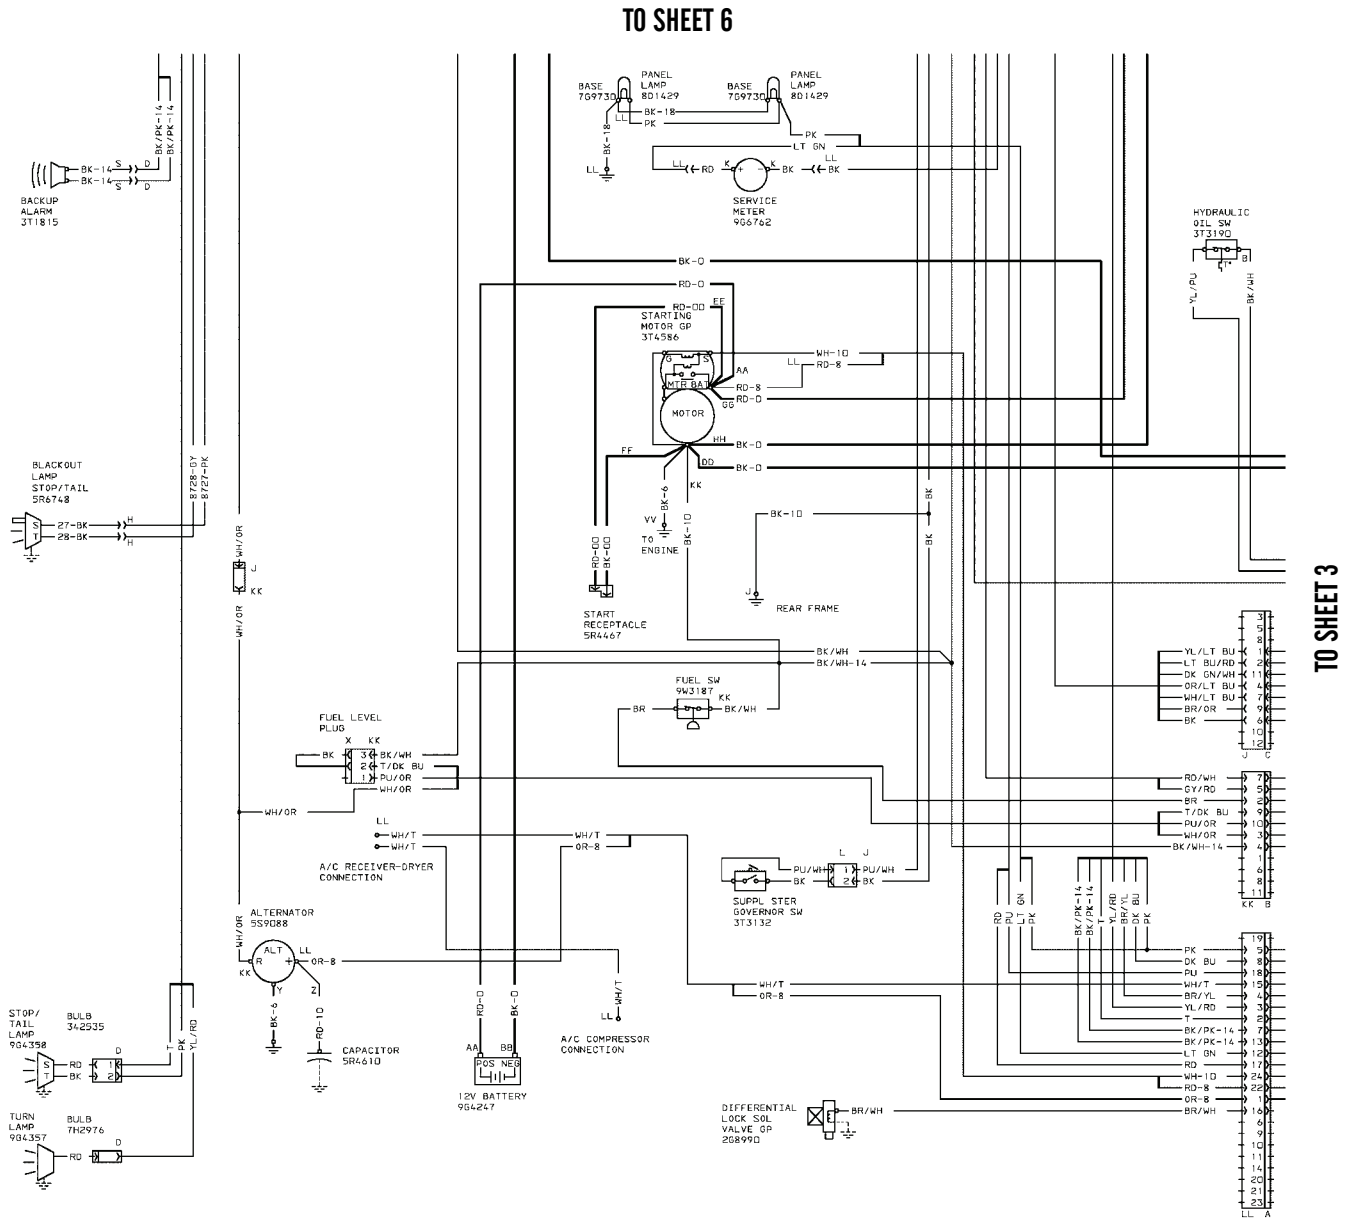


Figure 1. 130GNS and 130GNSCE Electrical Schematic (Sheet 5 of 6).

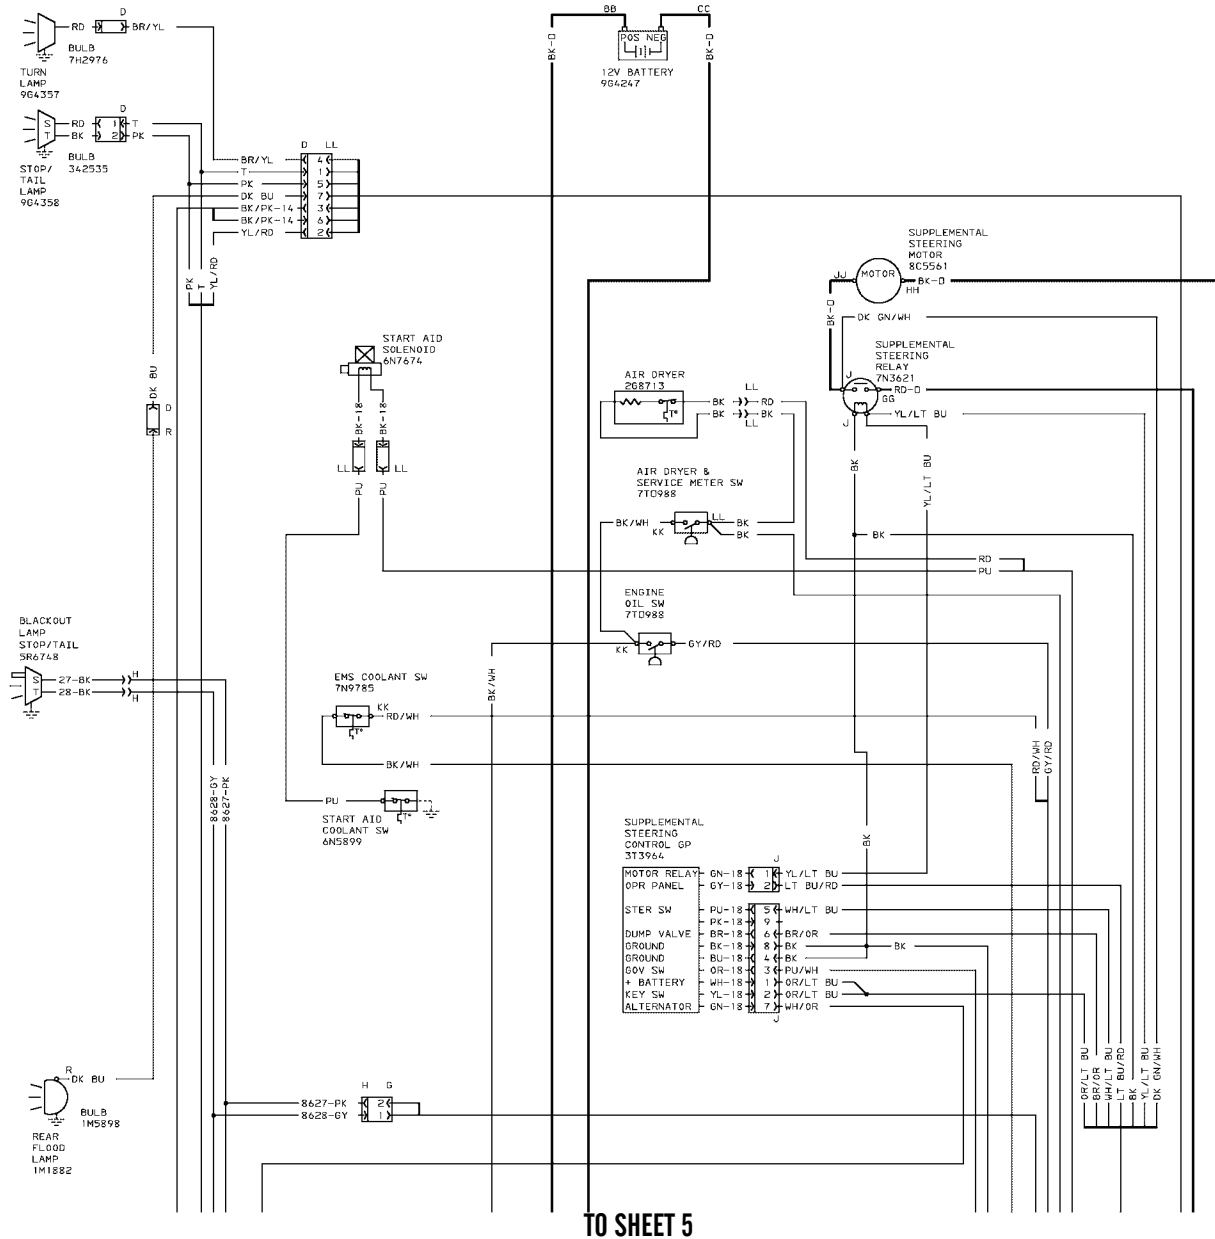


Figure 1. 130GNS and 130GNSCE Electrical Schematic (Sheet 6 of 6).


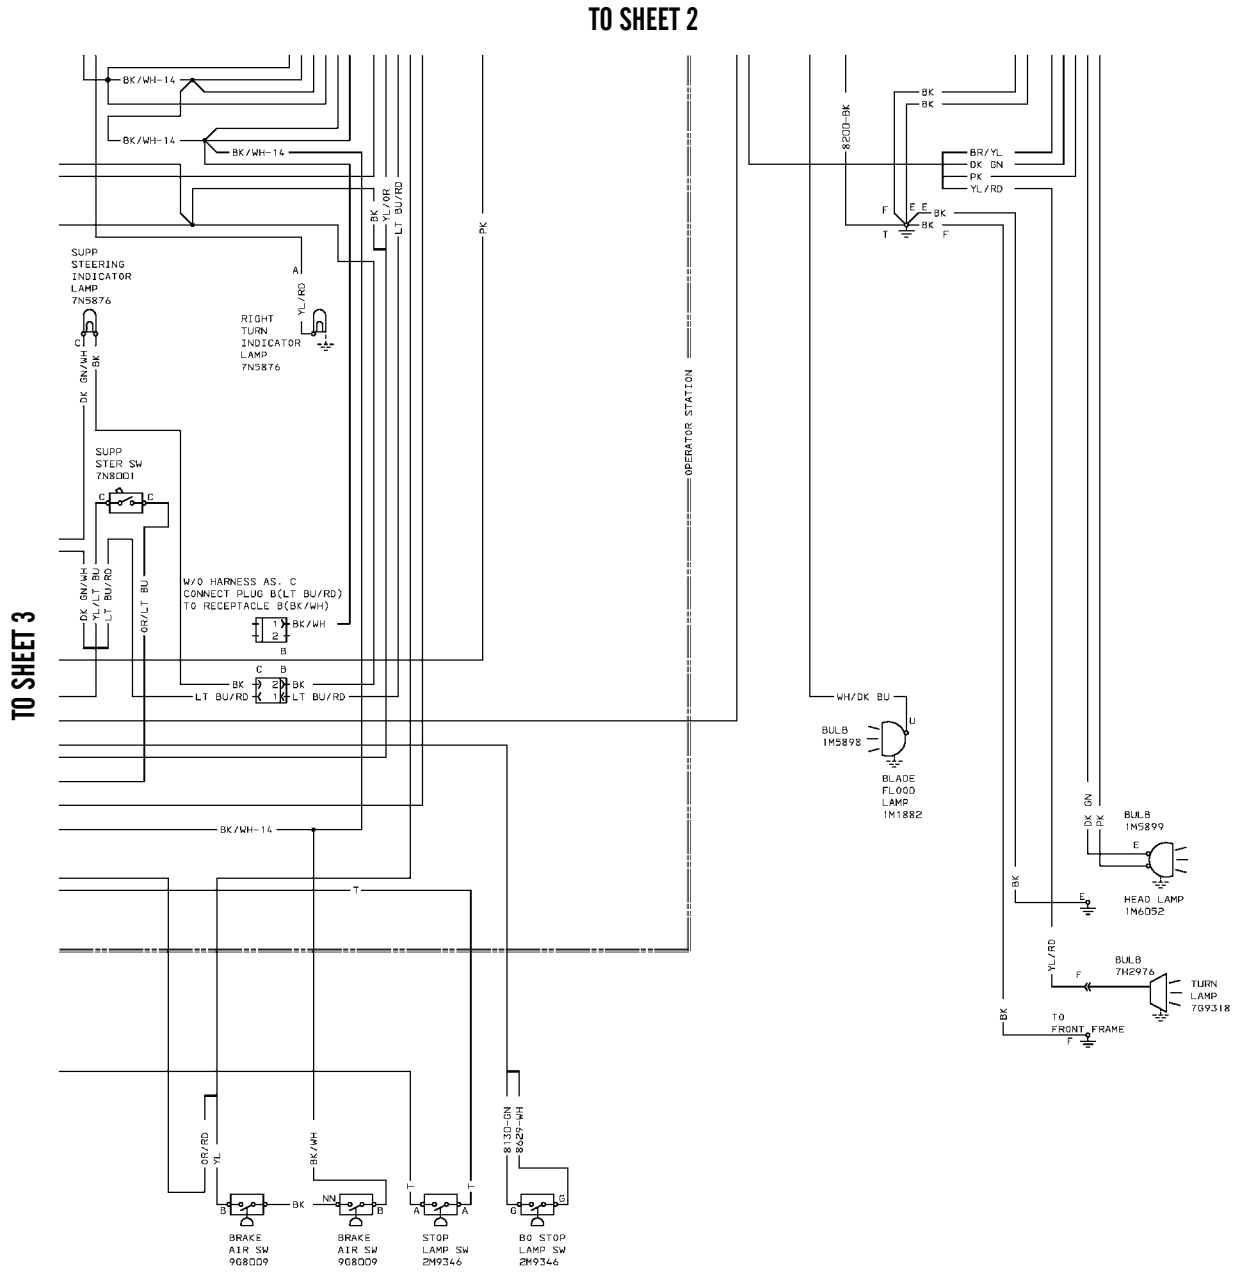


Figure 2. 130GS and 130GSCE Electrical Schematic (Sheet 1 of 6).

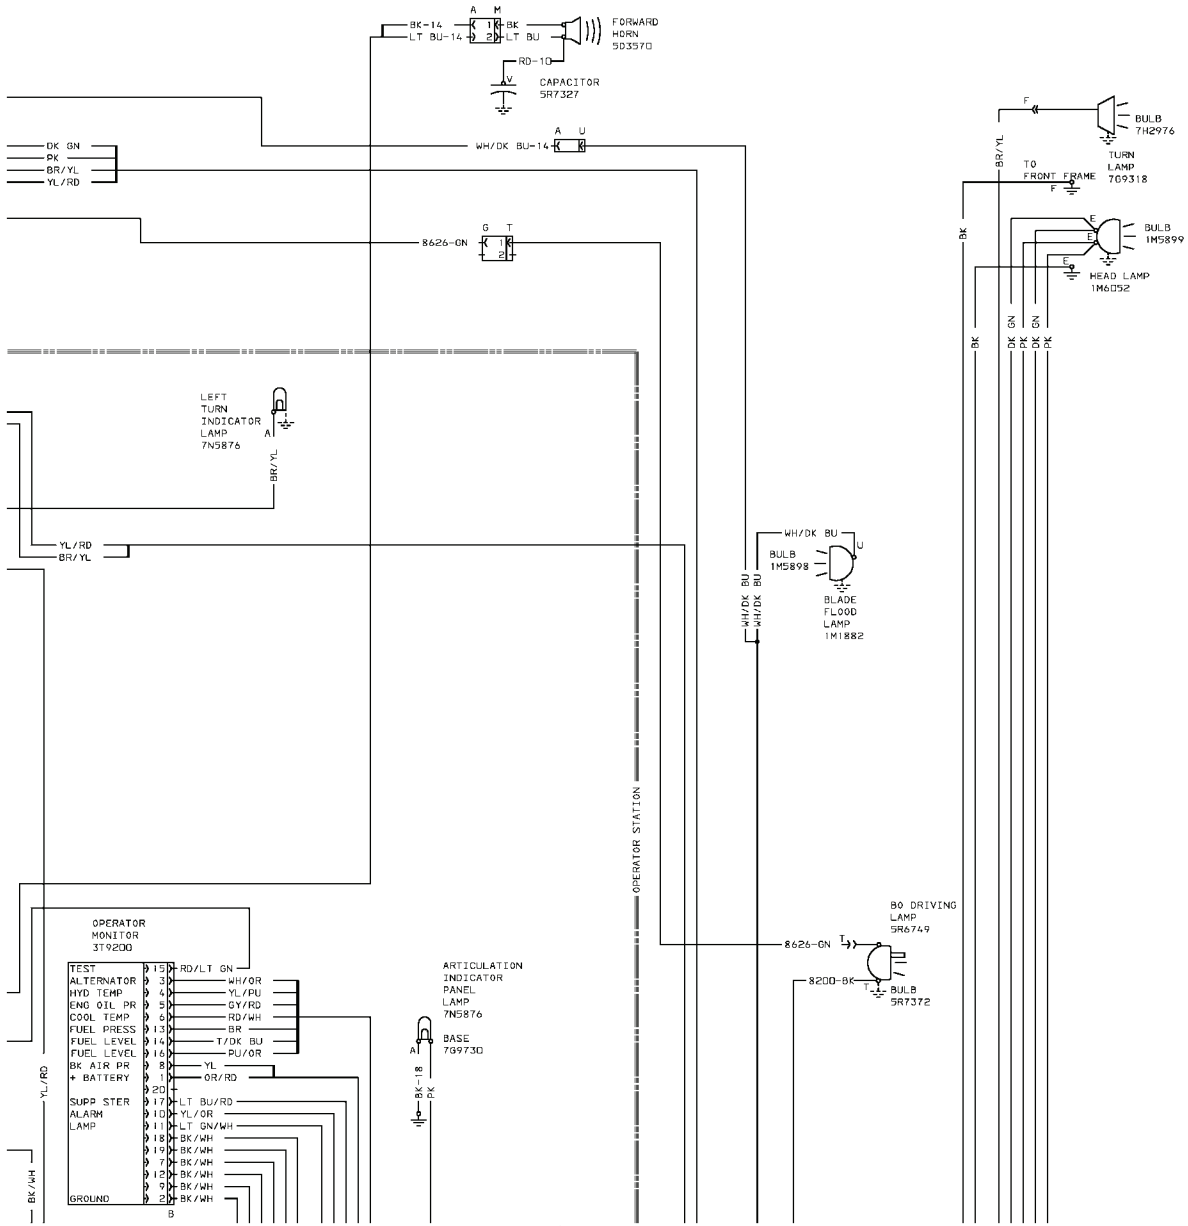
TO SHEET 4



TO SHEET 1


Figure 2. 130GS and 130GSCE Electrical Schematic (Sheet 2 of 6).

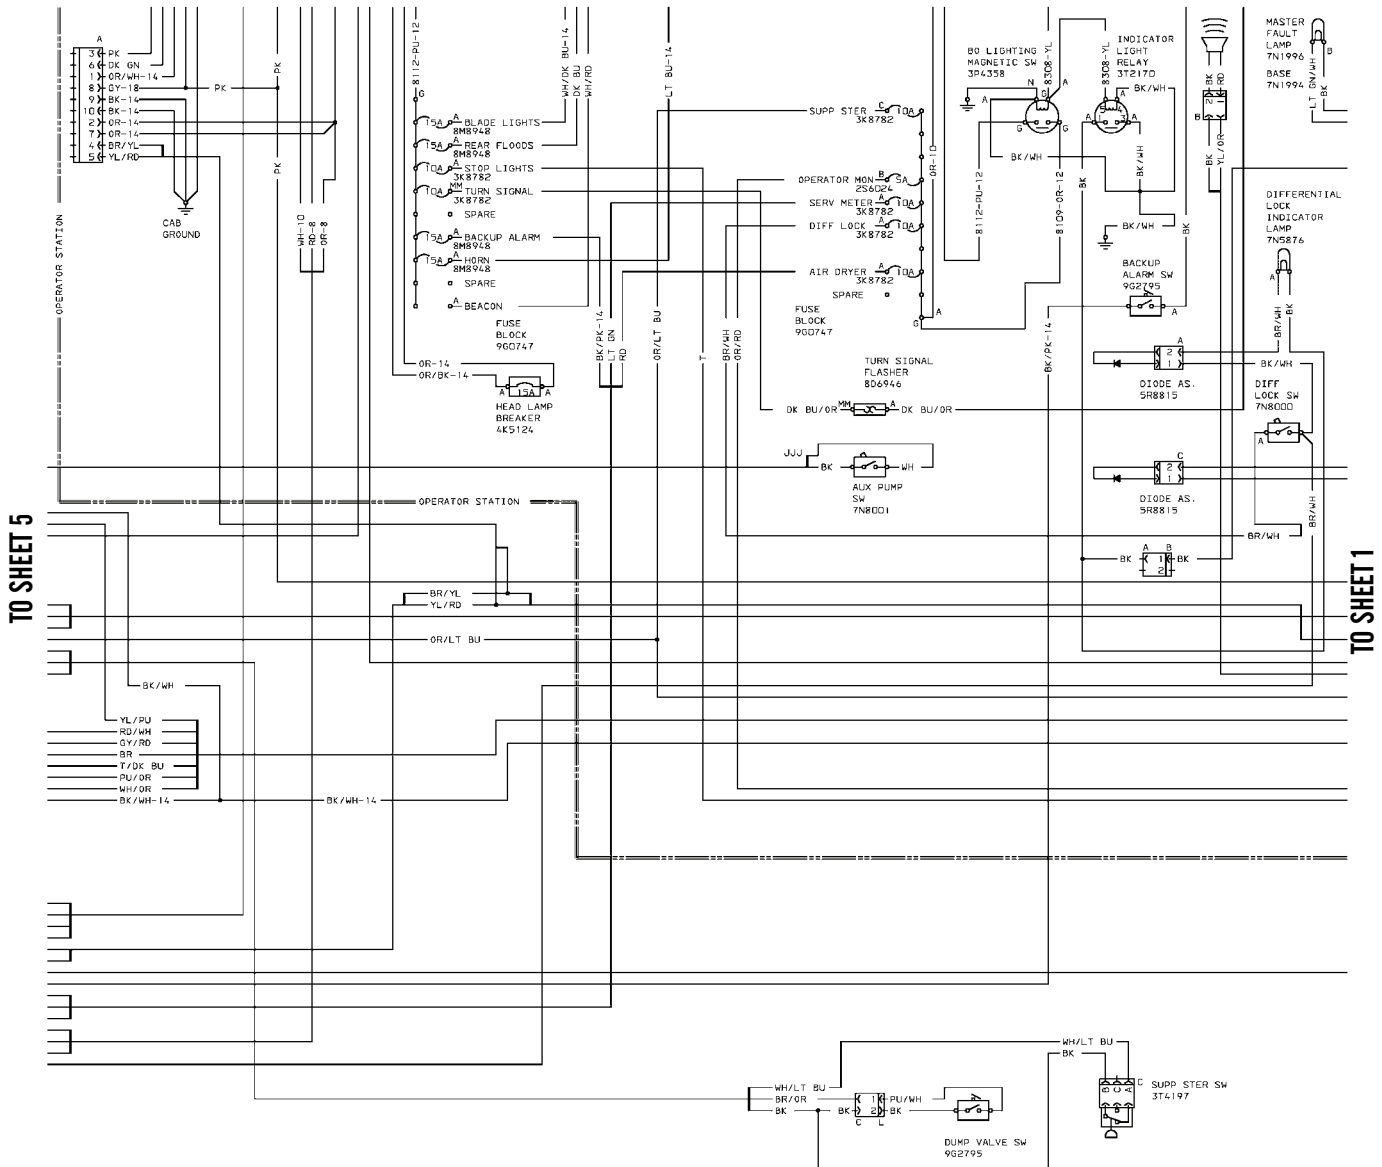TO SHEET 4



397-4373

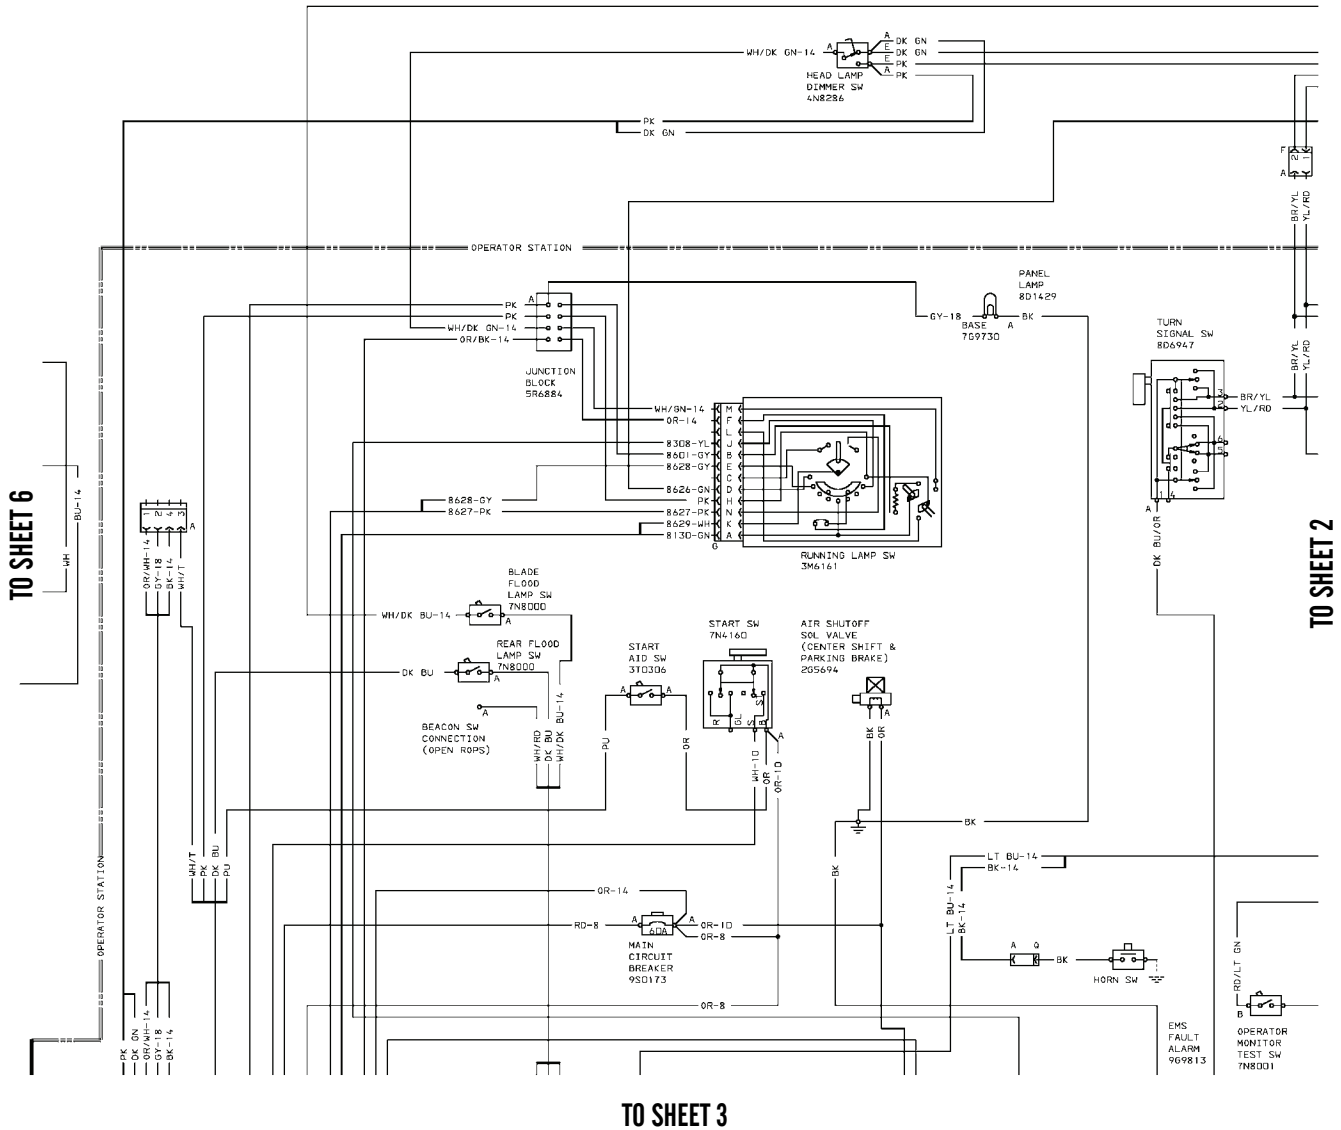Figure 2. 130GS and 130GSCE Electrical Schematic (Sheet 3 of 6).



397-4374

Figure 2. 130GS and 130GSCE Electrical Schematic (Sheet 4 of 6).

TO SHEET 6

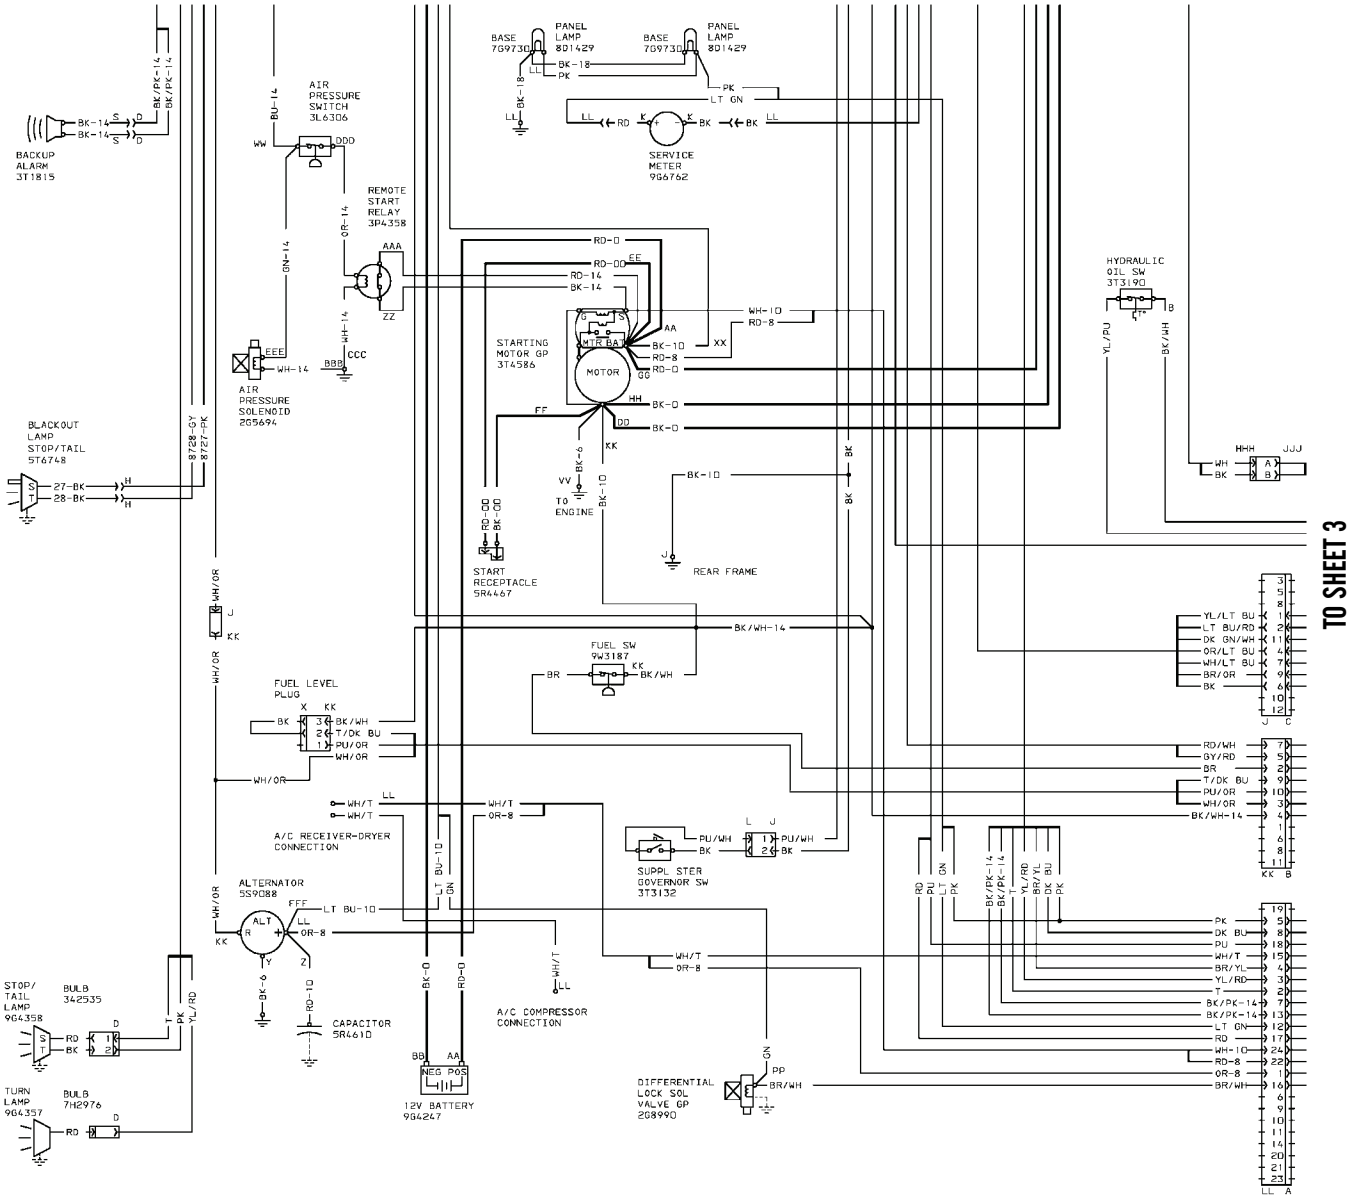


Figure 2. 130GS and 130GSCE Electrical Schematic (Sheet 5 of 6).


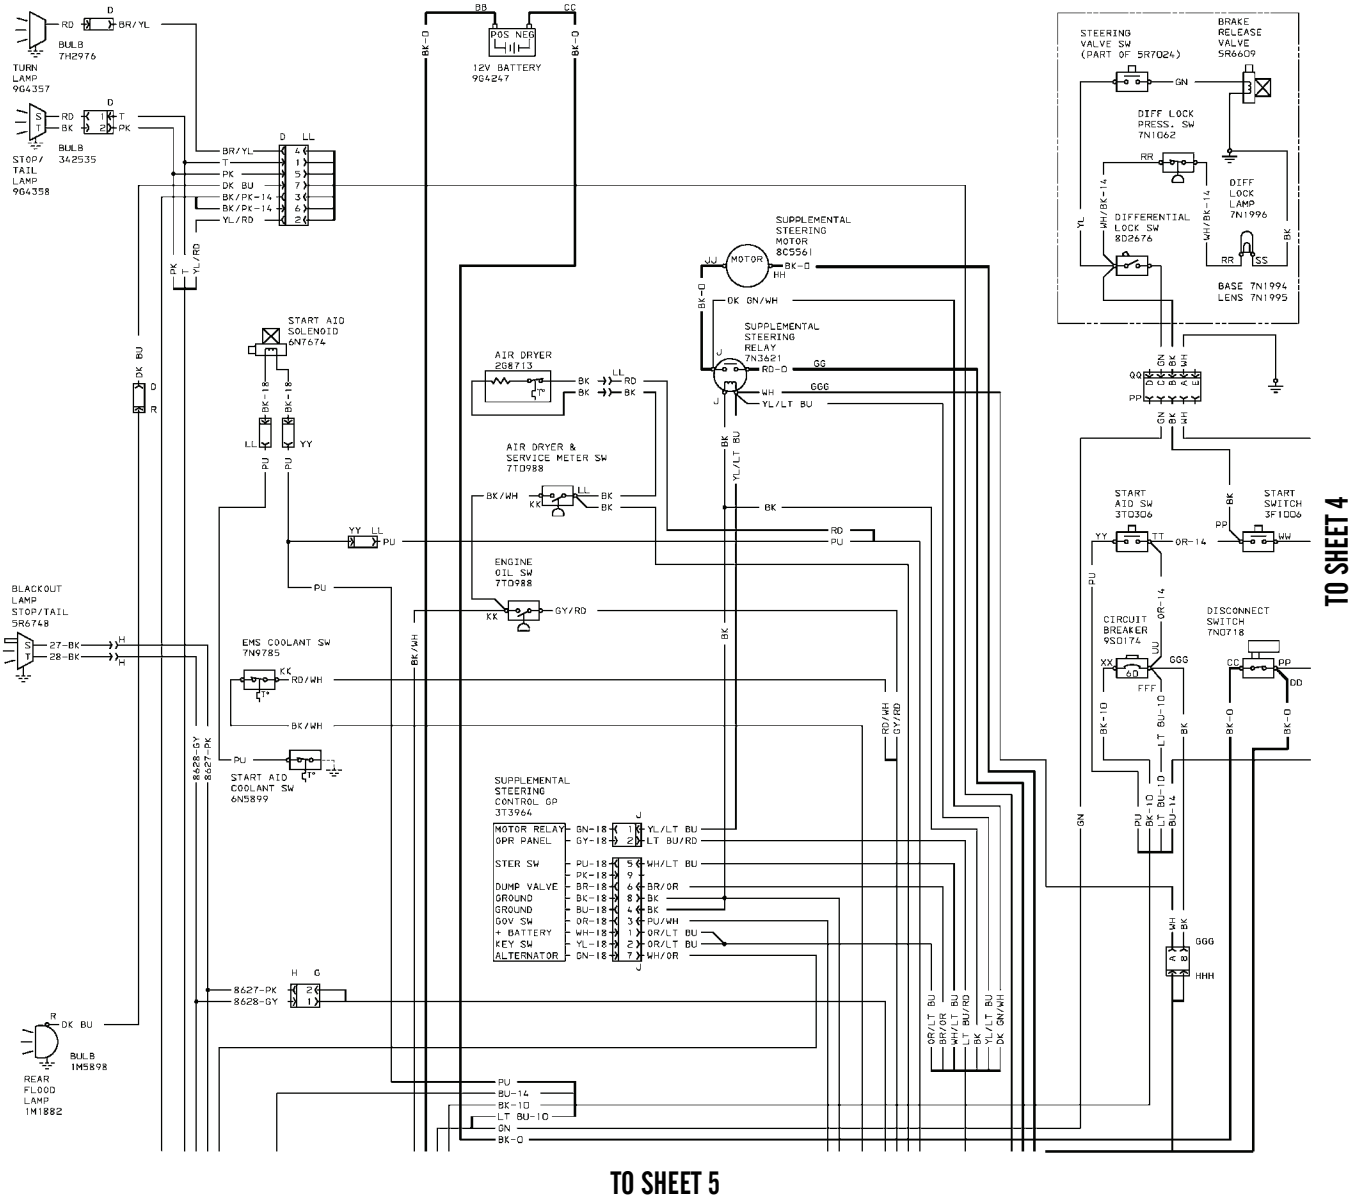



Figure 2. 130GS and 130GSCE Electrical Schematic (Sheet 6 of 6).

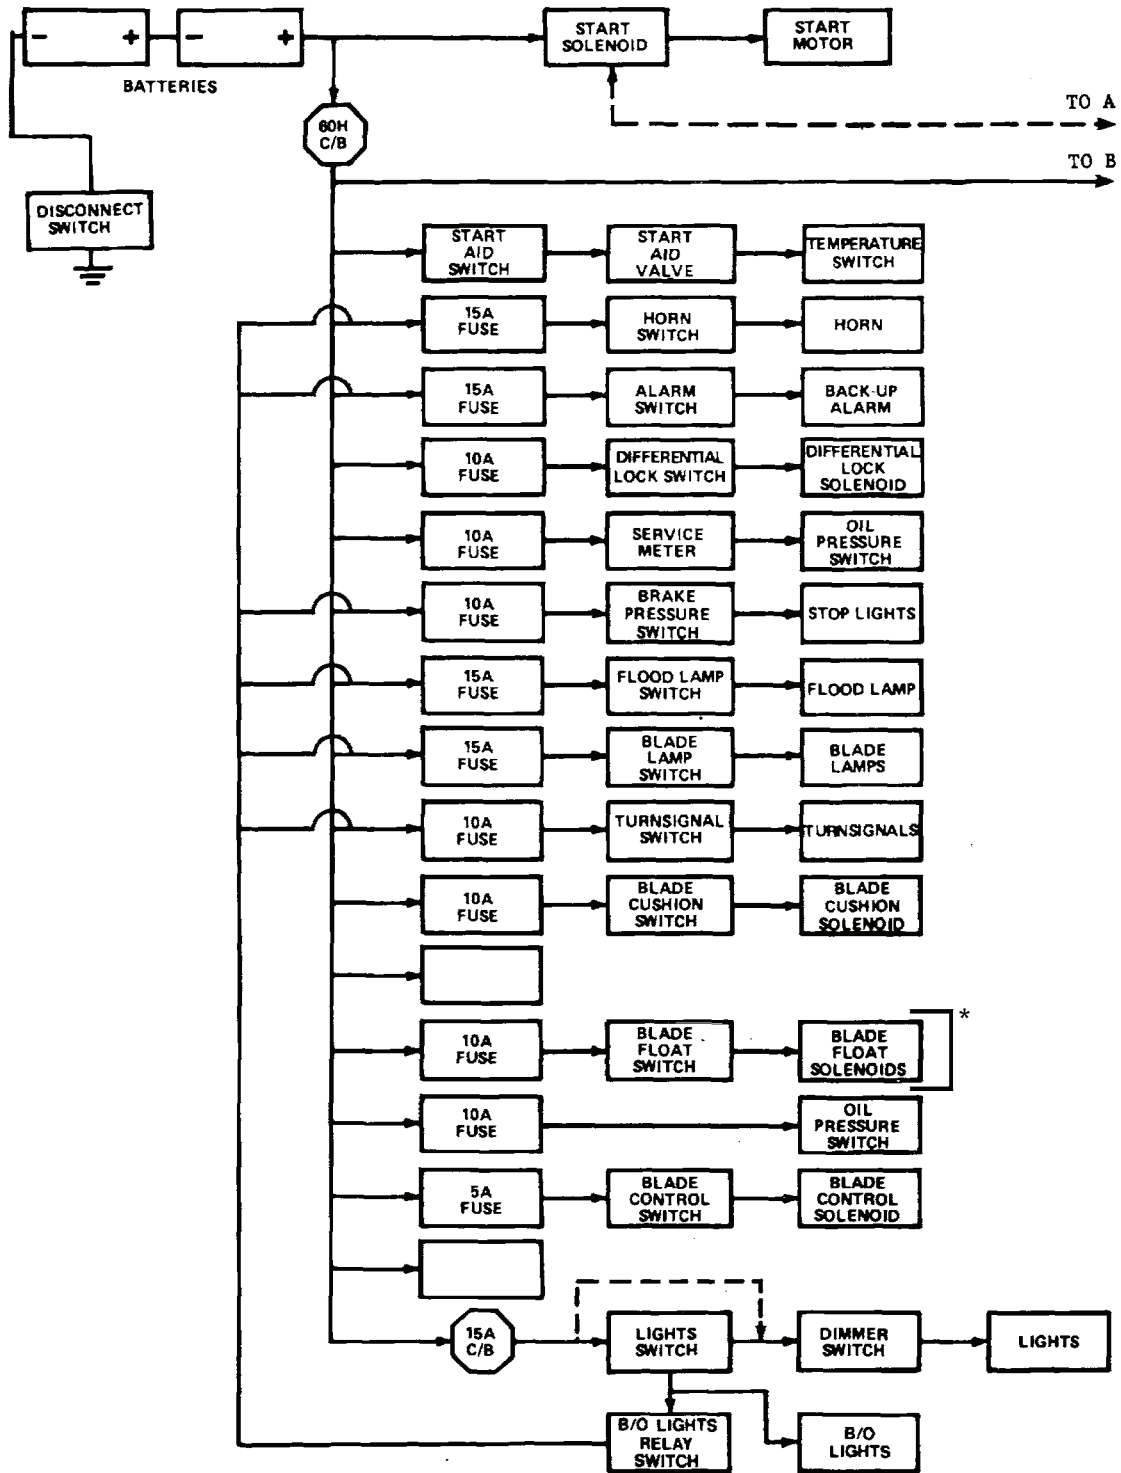

*130G Only

397-888

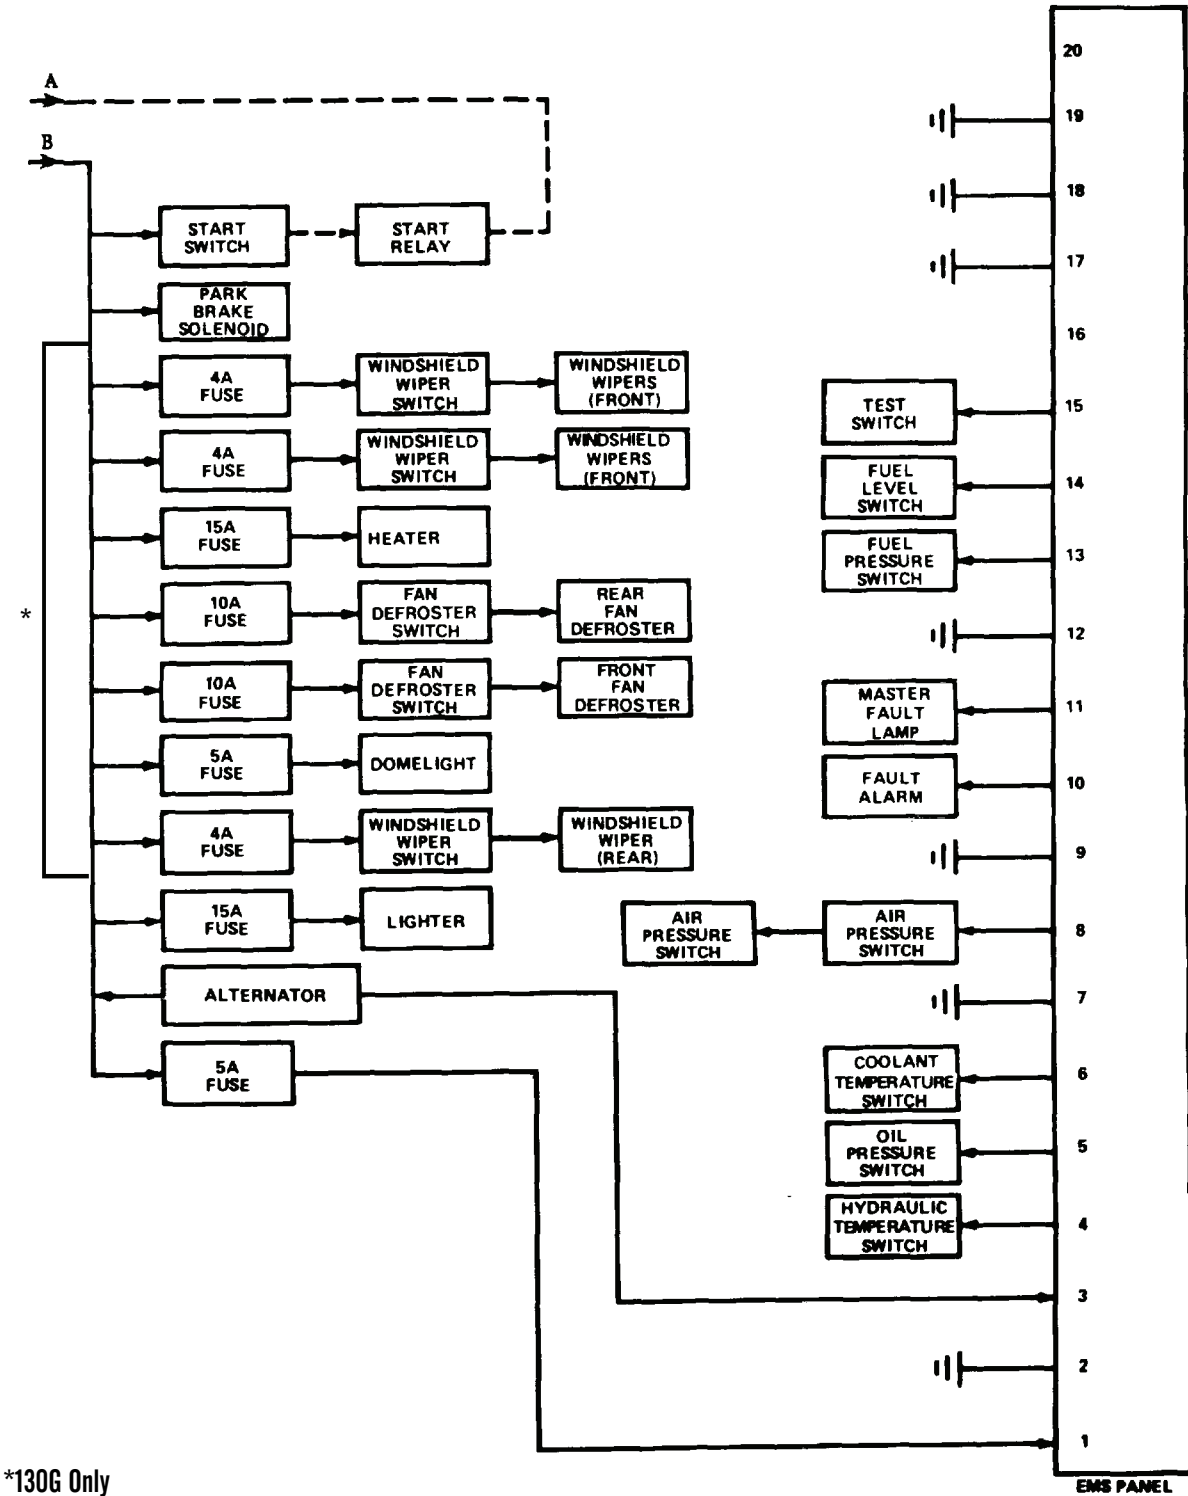Figure 3. Fuse and Switch Logic Schematic (Sheet 1 of 2).



*130G Only

397-889

Figure 3. Fuse and Switch Logic Schematic (Sheet 2 of 2).

LEGEND

1. Cylinder for leaning wheel
2. Cylinder for center shift
3. Cylinders for blade lift
4. Cylinder for blade side shift
5. Cylinder for blade tip
6. Cylinders for articulation
7. Cylinder for steering (L.H.)
8. Cylinder for steering (R.H.)
9. Metering pump for steering
10. Combination valve
11. Relief and reducing valve
12. Unloading valve
13. Relief valve for cooler
14. Implement pump
15. Variable displacement pump
16. Pump for cooling
17. Cooler
18. Control valve group
19. Control valve group
20. Valve for articulation
21. Valve for center shift
22. Valve for wheel lean
23. Hydraulic pump relief valve
24. Valve for scarifier
26. Valve for blade tip
27. Valve for circle drive
28. Valve for blade side shift
31. Lock check valve
32. Lock check valve
33. Lock check valve
34. Relief valves for steering
35. Hydraulic motor for circle drive
37. Hydraulic tank
38. Filters
39. Swivel
41. Lock check valve
45. Cylinder for scarifier
46. Lock check valve (with relief)
47. Pilot valve (solenoid operated)
48. Lock check valves (pilot operated)
49. Supplemental steering


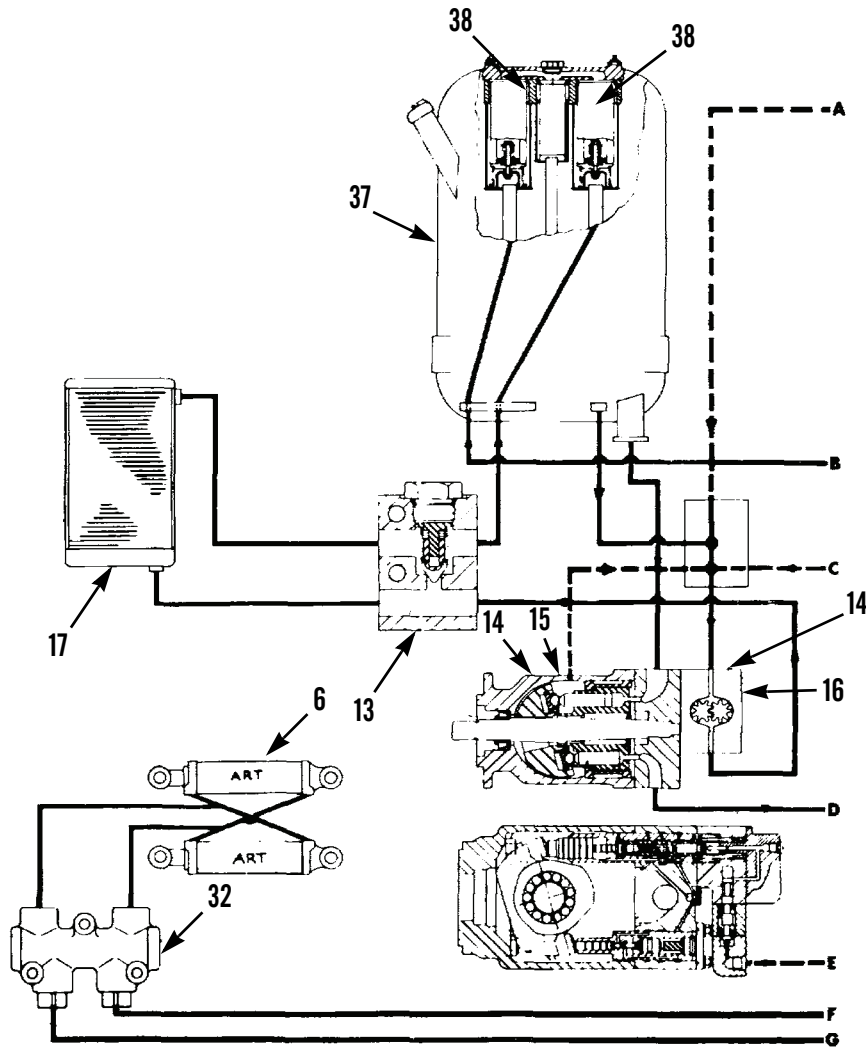



Figure 4. Hydraulic System Schematic (Sheet 1 of 5).

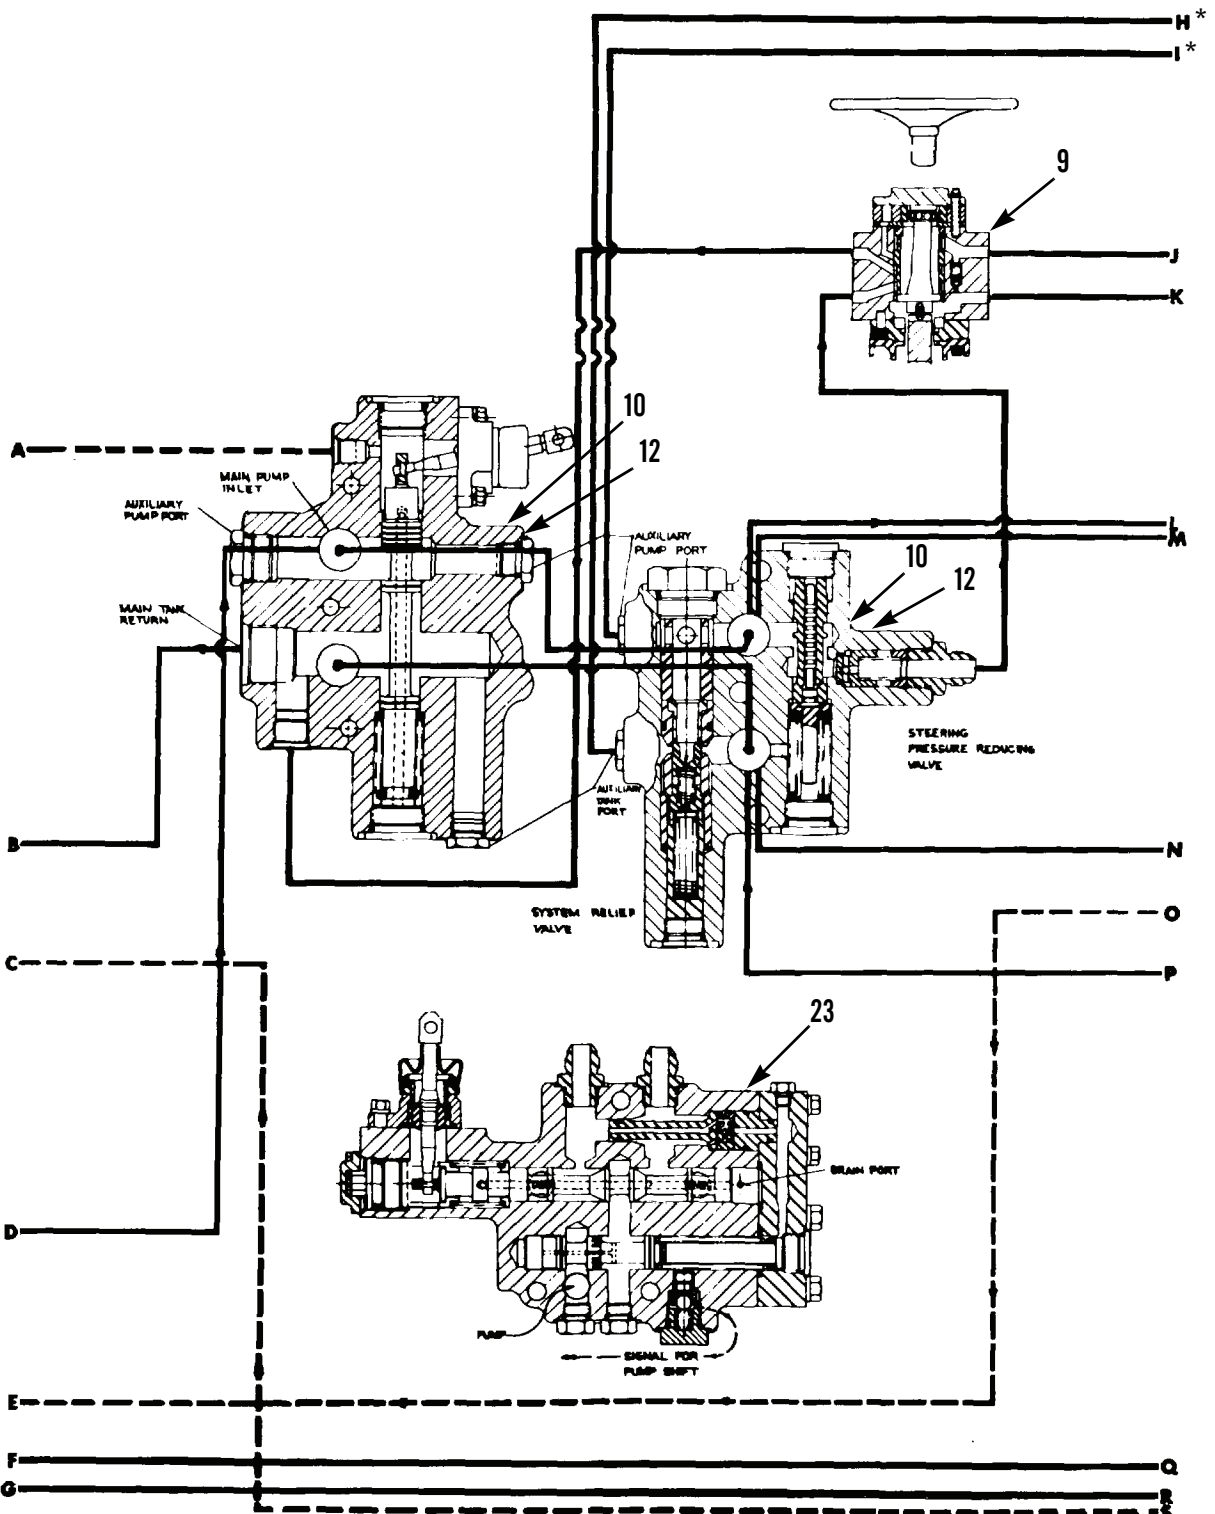

*130G ONLY

397-891

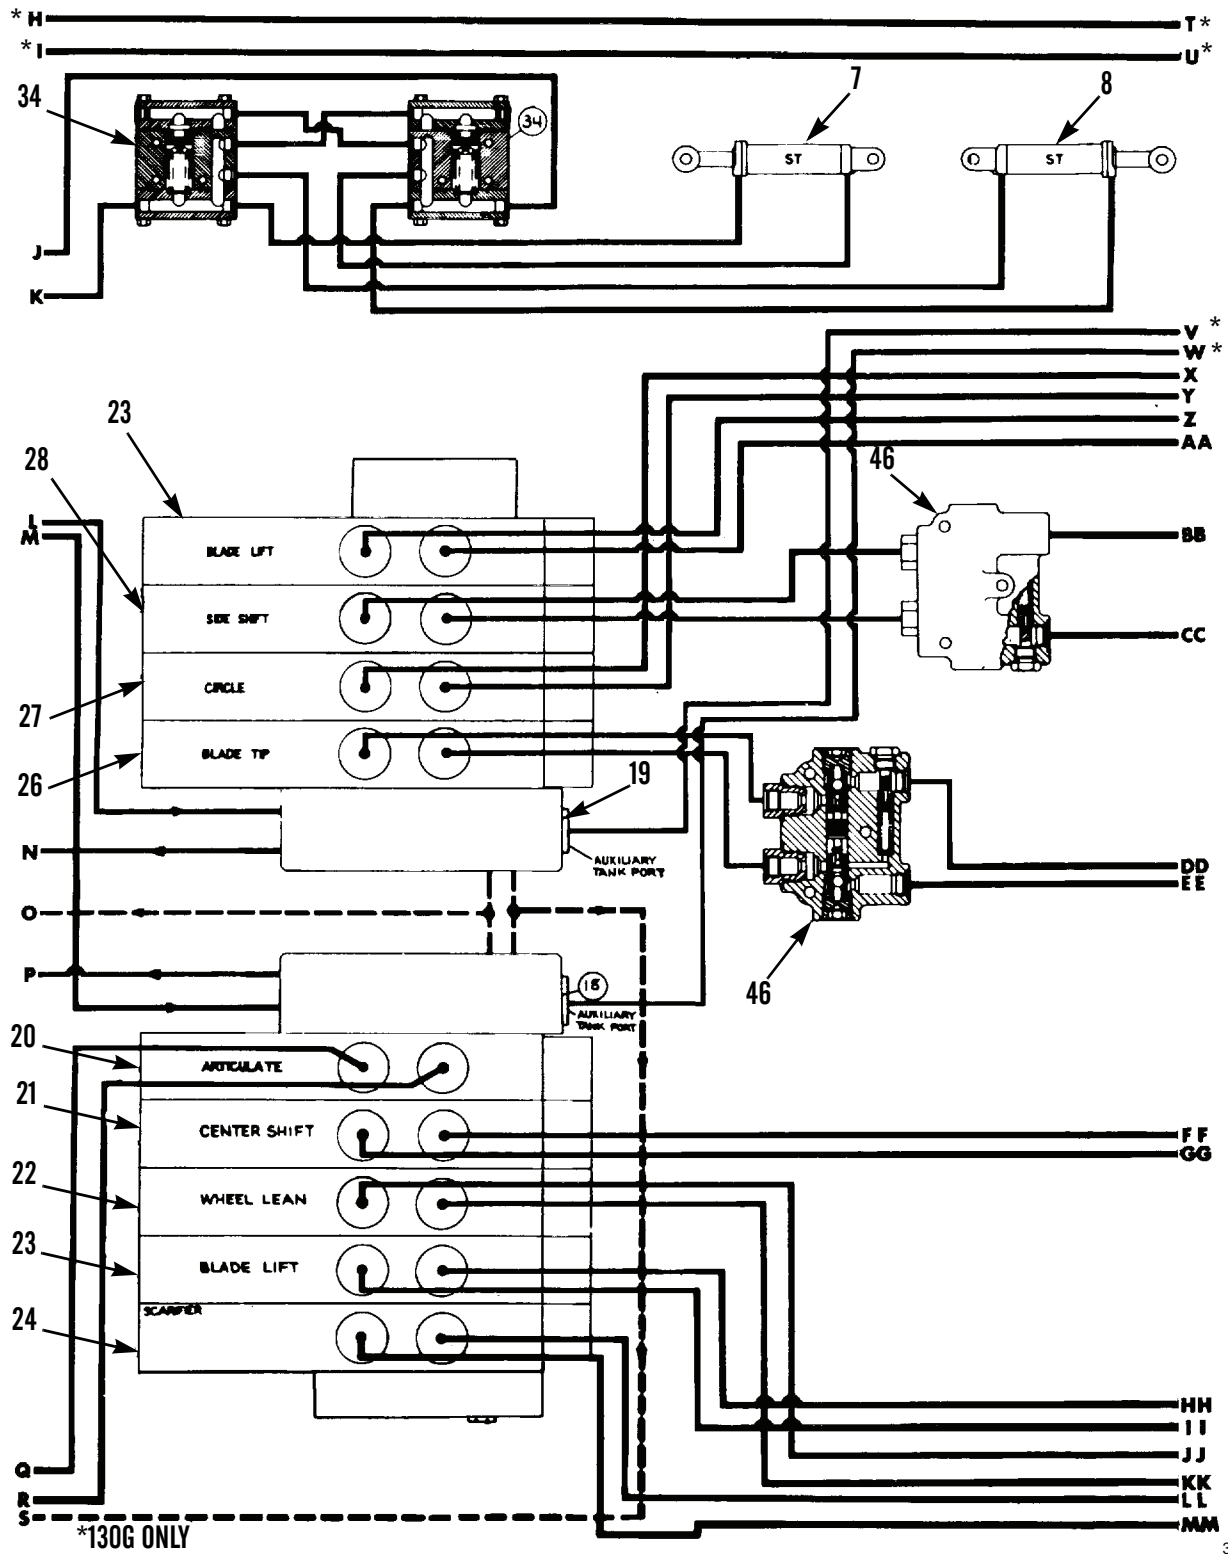Figure 4. Hydraulic System Schematic (Sheet 2 of 5).



397-892

Figure 4. Hydraulic System Schematic (Sheet 3 of 5).


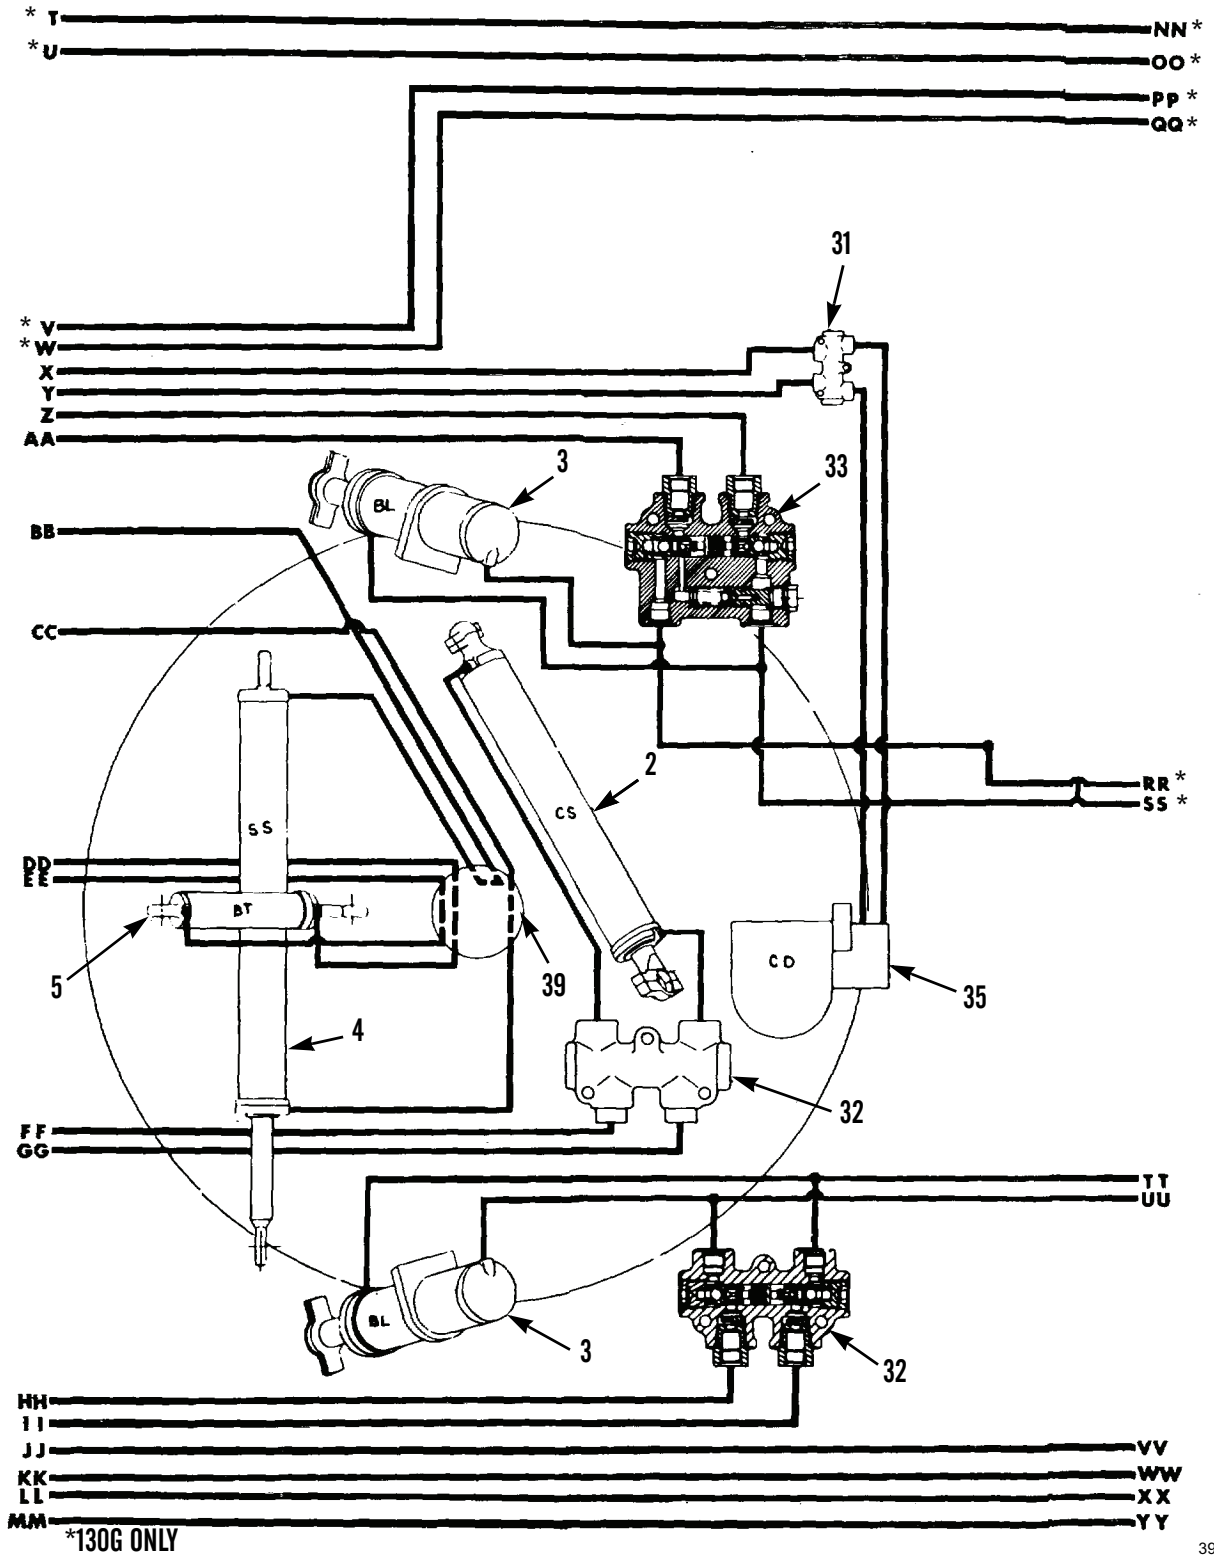


Figure 4. Hydraulic System Schematic (Sheet 4 of 5).

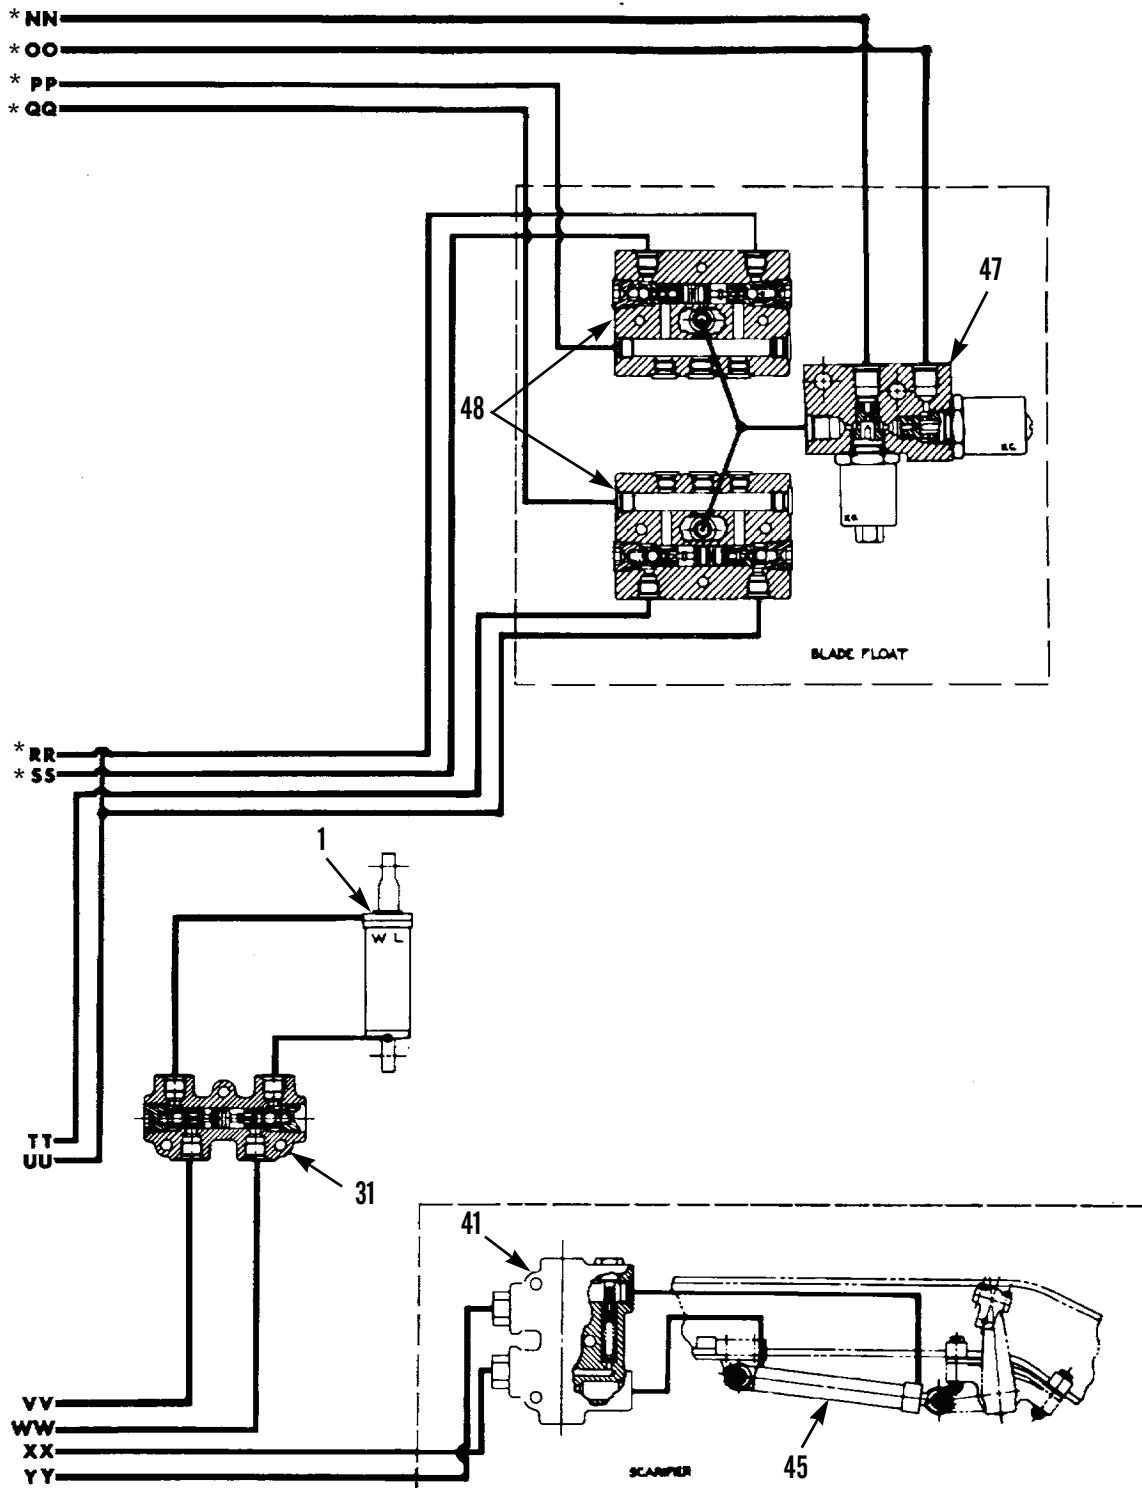

*130G ONLY

397-894

Figure 4. Hydraulic System Schematic (Sheet 5 of 5).

LEGEND

1. Steering wheel
2. Crossover relief valve
3. Crossover relief valve
4. Plug
5. Oil return line to tank
6. Steering metering pump
7. Plug
8. Shims
9. Shims
10. Oil supply line from pump
11. Left steering cylinder
12. Right steering cylinder
13. Oil return line to tank
14. Shims
15. Steering pressure reducing valve
16. Plug

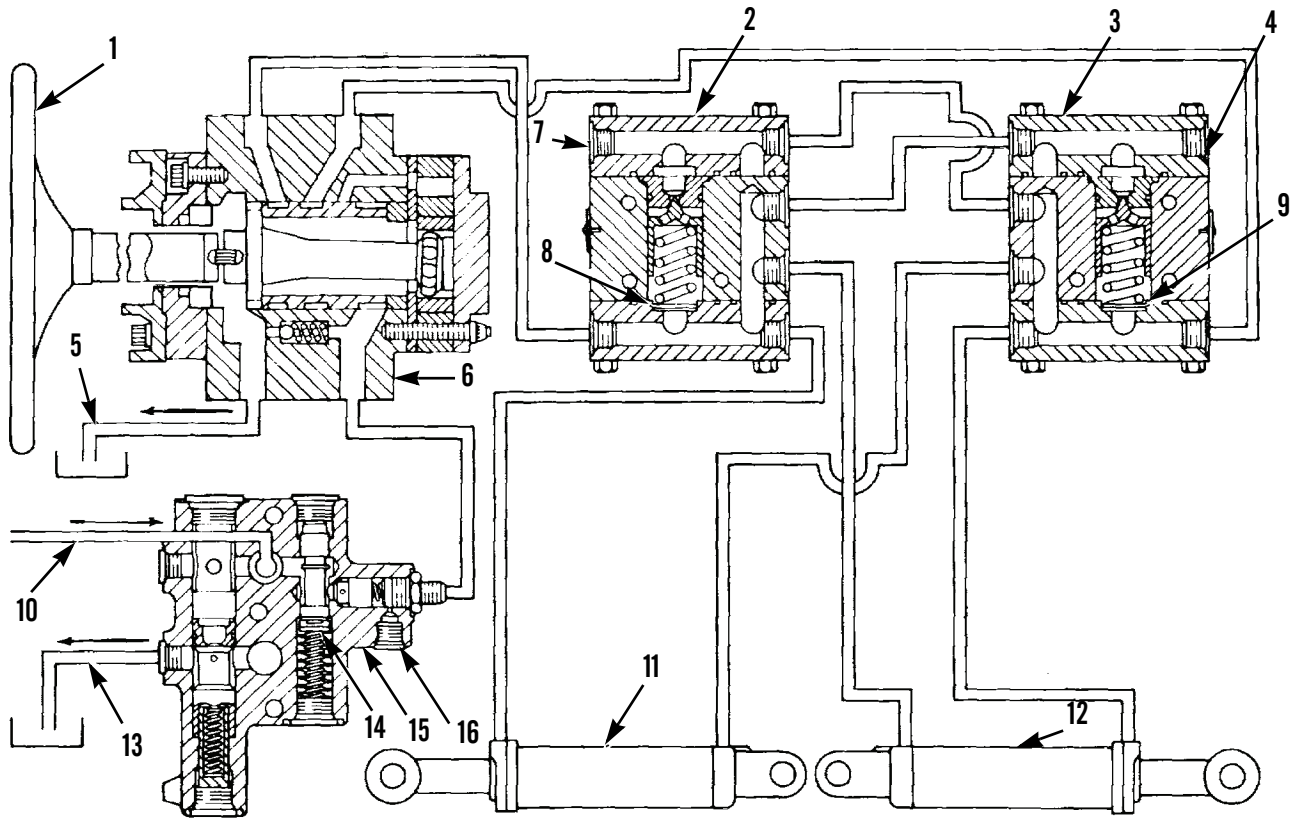


Figure 5. Steering System Schematic.

LEGEND

- A. System pressure
- B System pressure from left section of air tank
- C. System pressure from right section of air tank
- 1. Service brakes (four)
- 2. Air compressor
- 3. Air compressor governor
- 4. Safety relief valve
- 5. One-way check valve
- 6. Air tank with two sections
- 7. Quick release valve
- 8. Rotochamber for parking brake
- 9. Safety relief valve
- 10. One-way check valve
- 11. Air pressure gauges
- 12. Low air pressure sending units (to EMS)
- 13. Control valve for service brakes
- 14. Blackout stoplight switch
- 15. Stoplight switch
- 16. One-way check valve
- 17. Control valve for parking brake
- 18. Center shift control valve
- 19. Center shift lock pin


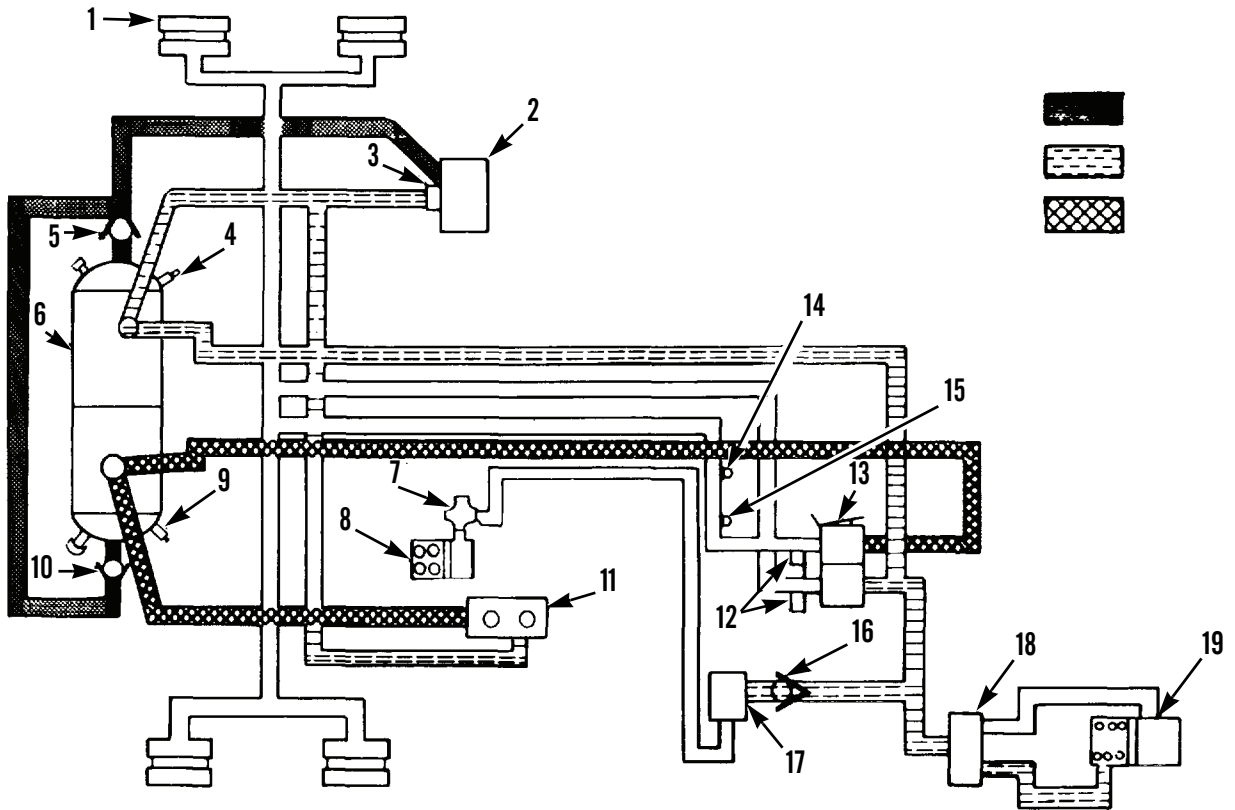


Figure 6. 130G, 130GNS, and 130GNSCE Air Brake System Schematic.

LEGEND

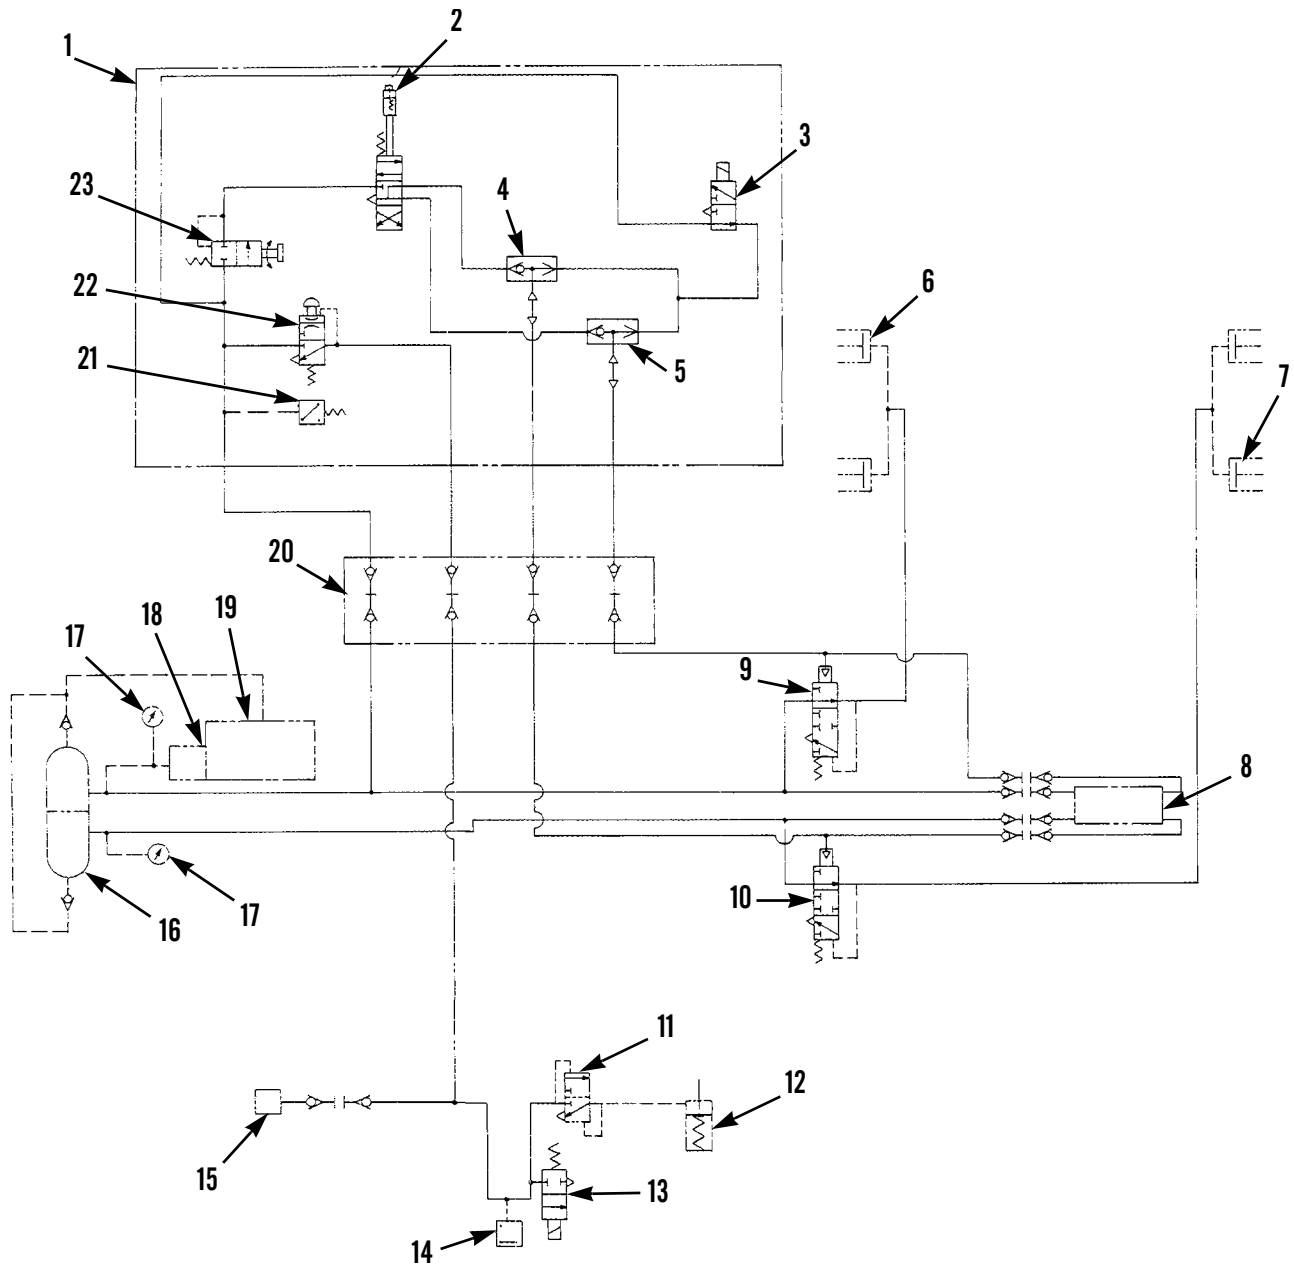1. Remote control panel
2. Control valve (4-way)
3. Solenoid (24V, N.O.)
4. Check valve
5. Check valve
6. Brake (service)
7. Brake (service)
8. Dual brake control valve (service) (in cab)
9. Relay valve
10. Relay valve
11. Quick release valve
12. Actuator (parking brake)
13. Solenoid (24V, N.C.)
14. Pressure switch (6-8 psi, N.C.)
15. Parking brake valve (in cab)
16. Air reservoir (service)
17. Air gauges
18. Air compressor governor
19. Air compressor
20. Disconnect plate
21. Pressure switch (60 psi, N.C.)
22. Parking brake valve
23. Pressure regulator



397-4377


Figure 7. 130GS and 130GSCE Air Brake System Schematic.

IDENT.	HARNESS AS.
A	5T2340*
B	5T2343

*HARNESS ASSEMBLY 5T2340 USED ON ALL "G" SERIES GRADERS EXCEPT 160 WHICH USES 5T1096.

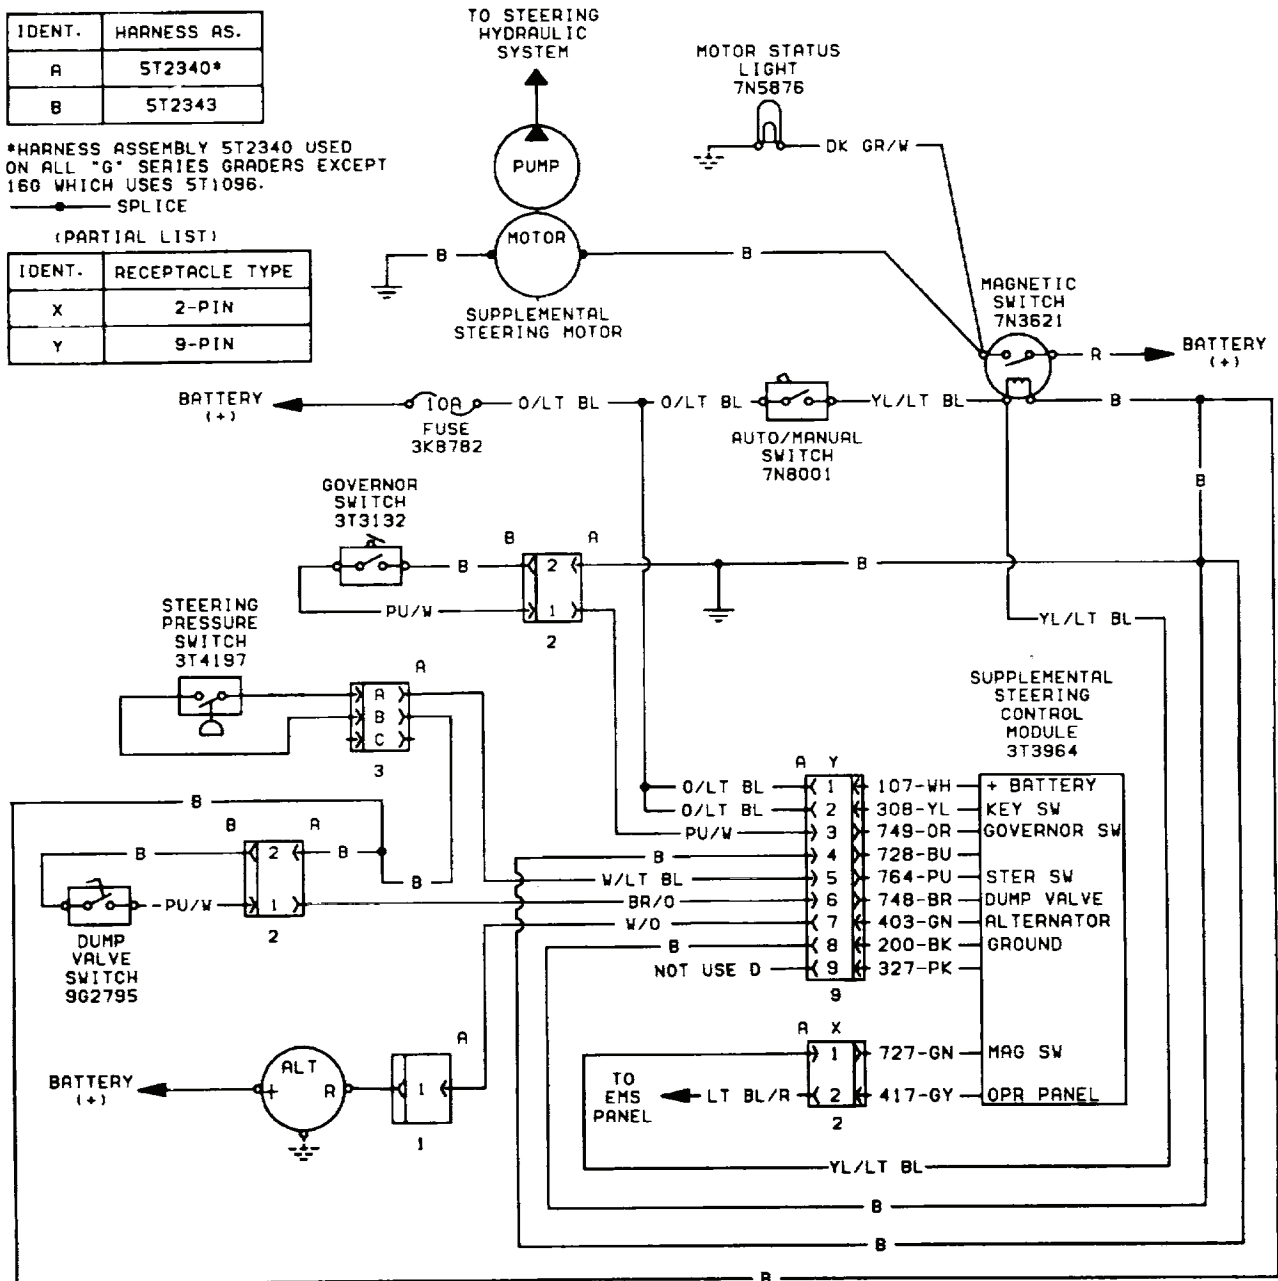
—●— SPLICE
(PARTIAL LIST)





IDENT.	RECEPTACLE TYPE
X	2-PIN
Y	9-PIN

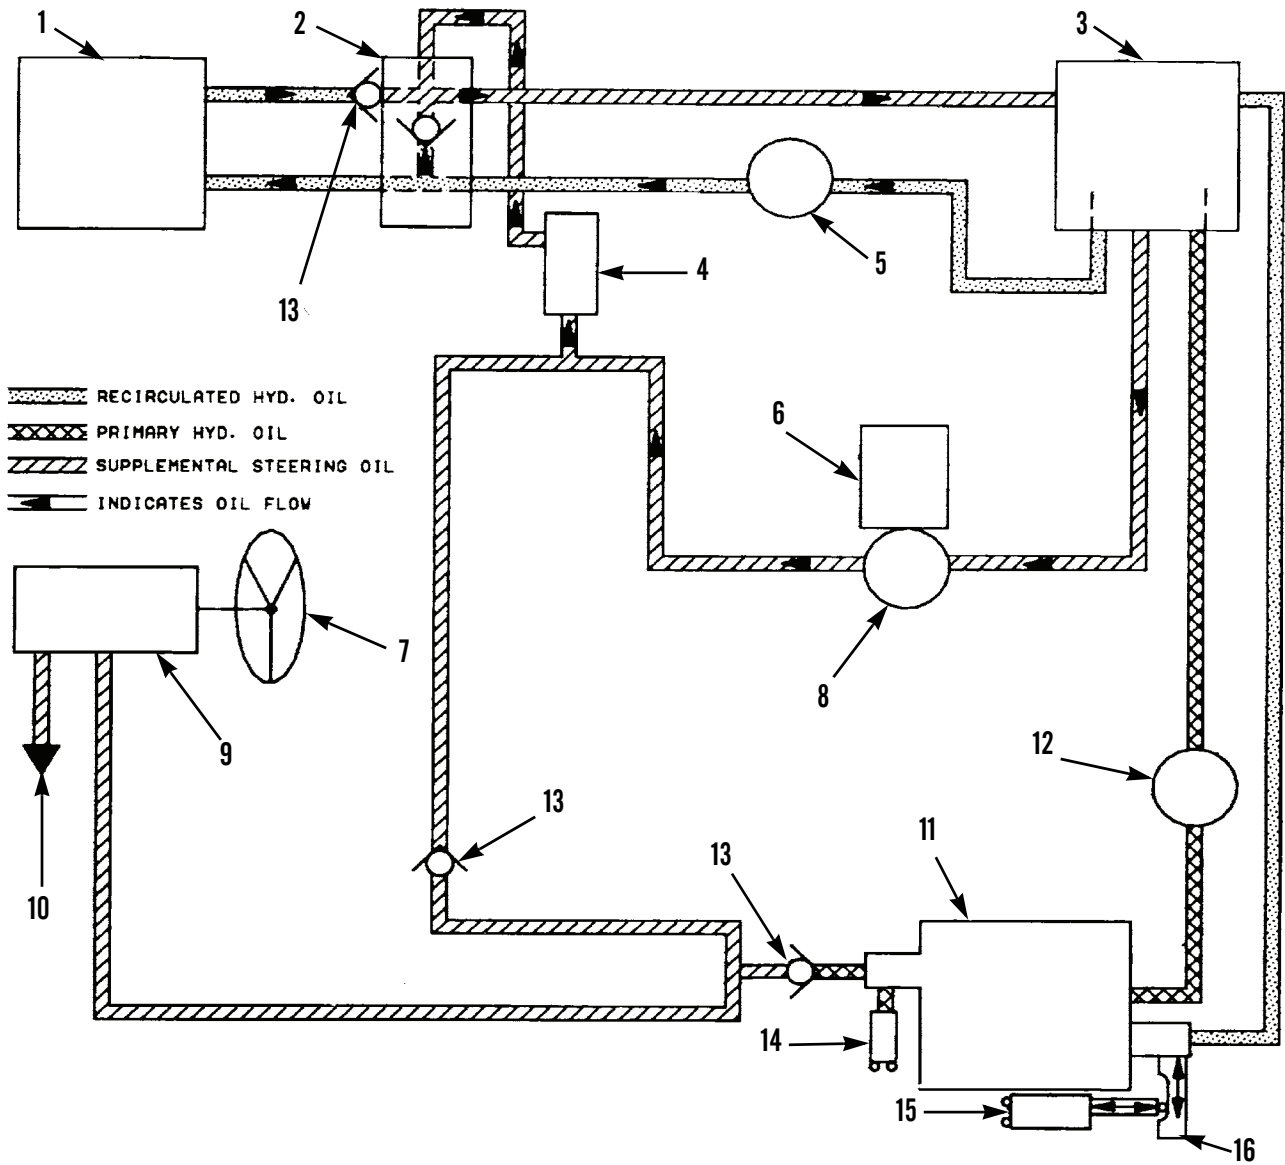

397-897

Figure 8. Supplemental Steering Electrical Schematic.



 RECIRCULATED HYD. OIL
 PRIMARY HYD. OIL
 SUPPLEMENTAL STEERING OIL
 INDICATES OIL FLOW

LEGEND

- | | |
|---|---|
| 1. Cooler for hydraulic oil | 9. Metering valve for steering |
| 2. By-pass valve for oil cooler | 10. Flow to relief valves and steering cylinder |
| 3. Hydraulic tank | 11. Combination valve |
| 4. Relief valve (supplemental steering) | 12. Implement pump |
| 5. Pump for oil to oil cooler | 13. Check valves |
| 6. Electric motor | 14. Pressure sensing switch |
| 7. Steering wheel | 15. Dump valve switch |
| 8. Supplemental steering pump | 16. Dump valve |

397-898

Figure 9. Supplemental Steering Hydraulic Schematic (Non-actuated).

LEGEND

1. Cooler for hydraulic oil
2. By-pass valve for oil cooler
3. Hydraulic tank
4. Relief valve (supplemental steering)
5. Pump for oil to oil cooler
6. Electric motor
7. Steering wheel
8. Supplemental steering pump
9. Metering valve for steering
10. Flow to relief valves and steering cylinders
11. Combination valve
12. Implement pump
13. Check valves
14. Pressure sensing switch
15. Dump valve switch
16. Dump valve


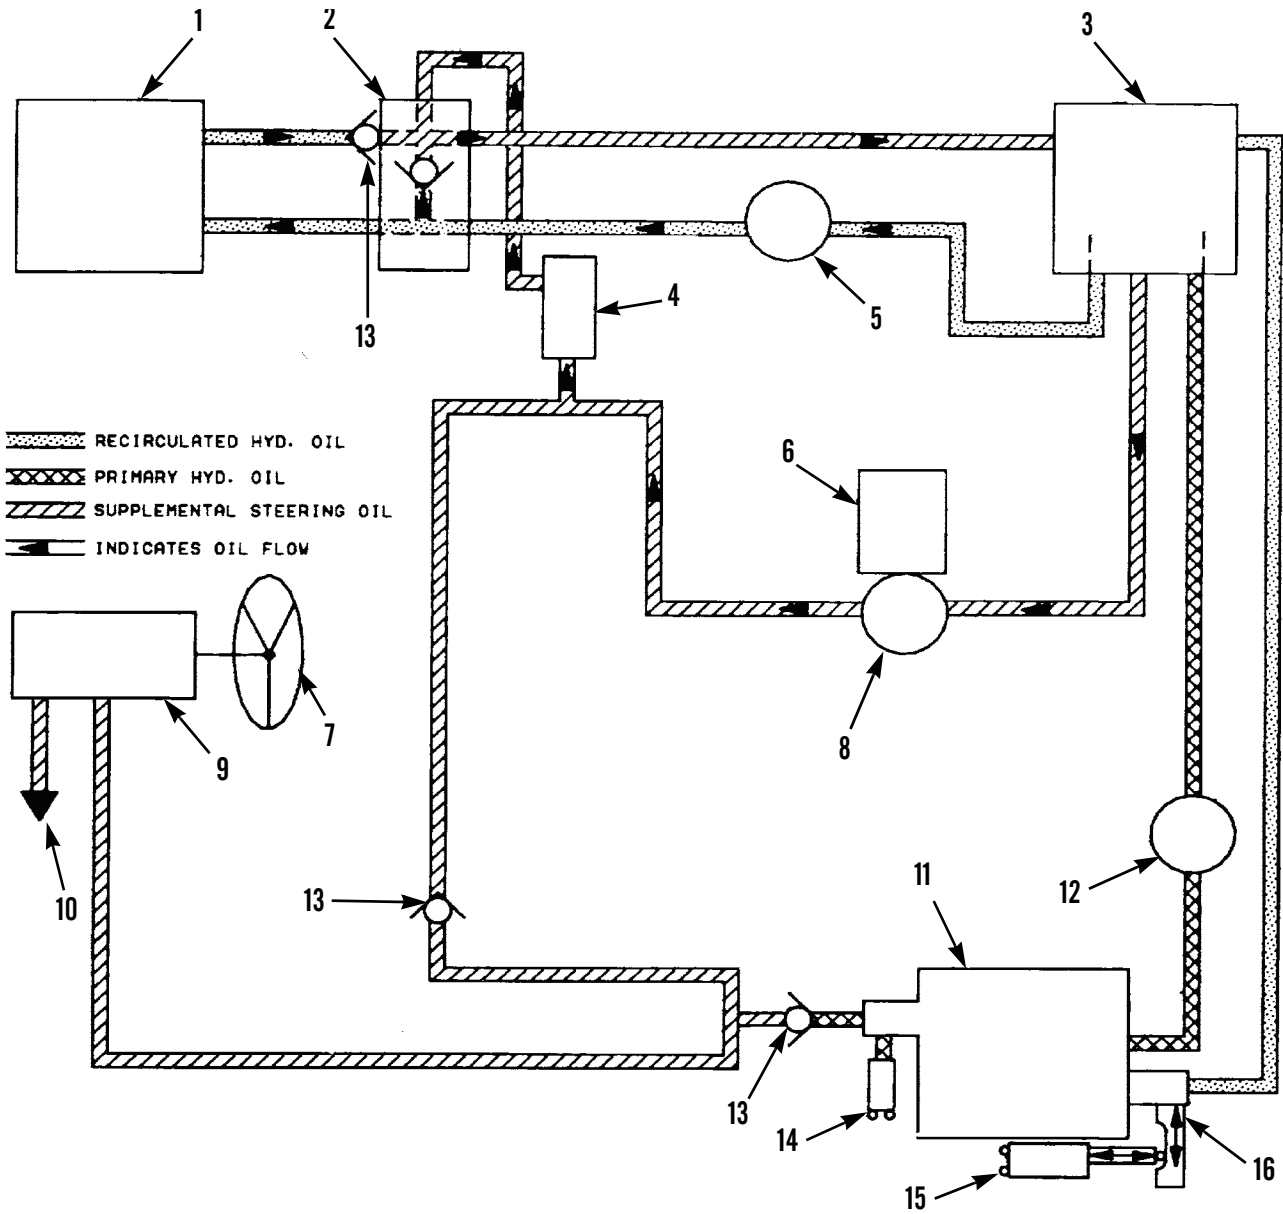



Figure 10. Supplemental Steering Hydraulic Schematic (Actuated).

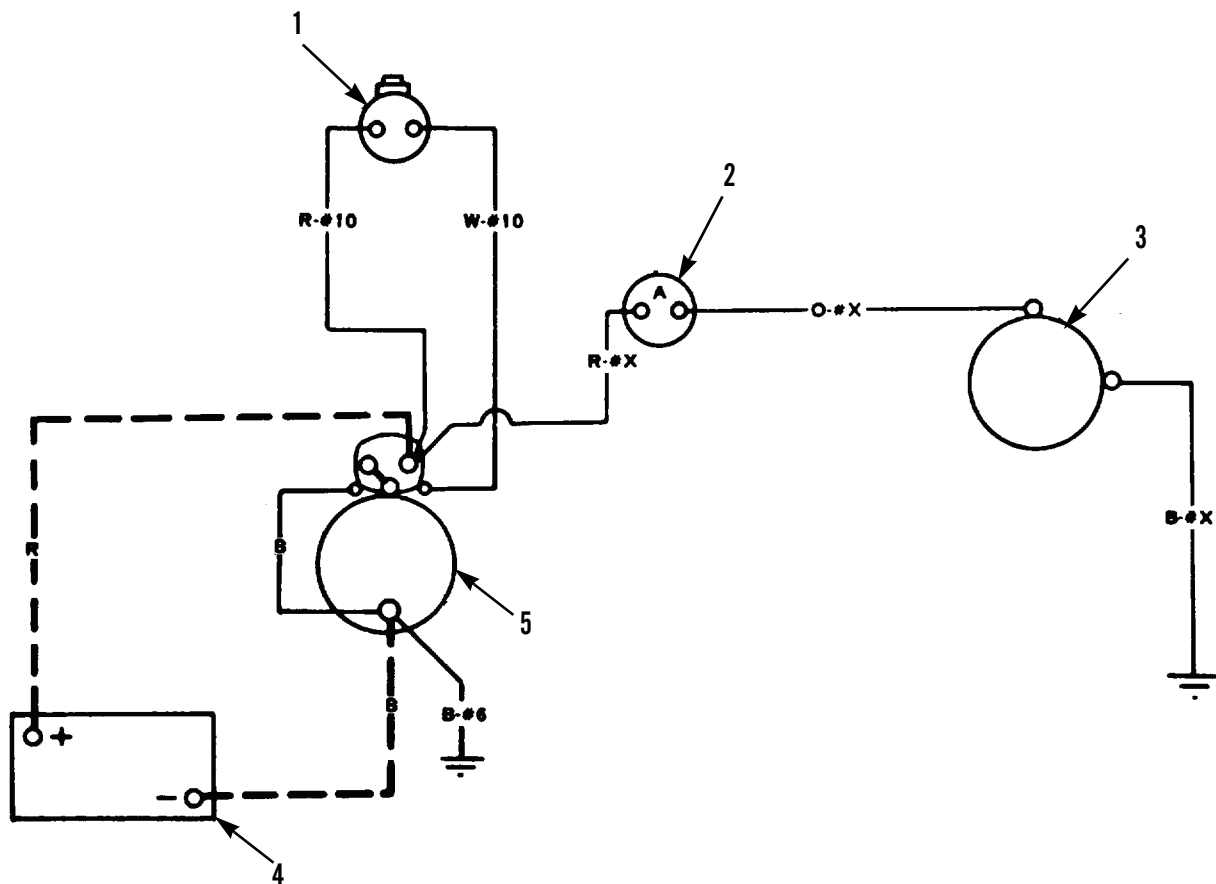

LEGEND

- 1. Start switch
- 2. Ammeter
- 3. Alternator
- 4. Battery
- 5. Starting motor

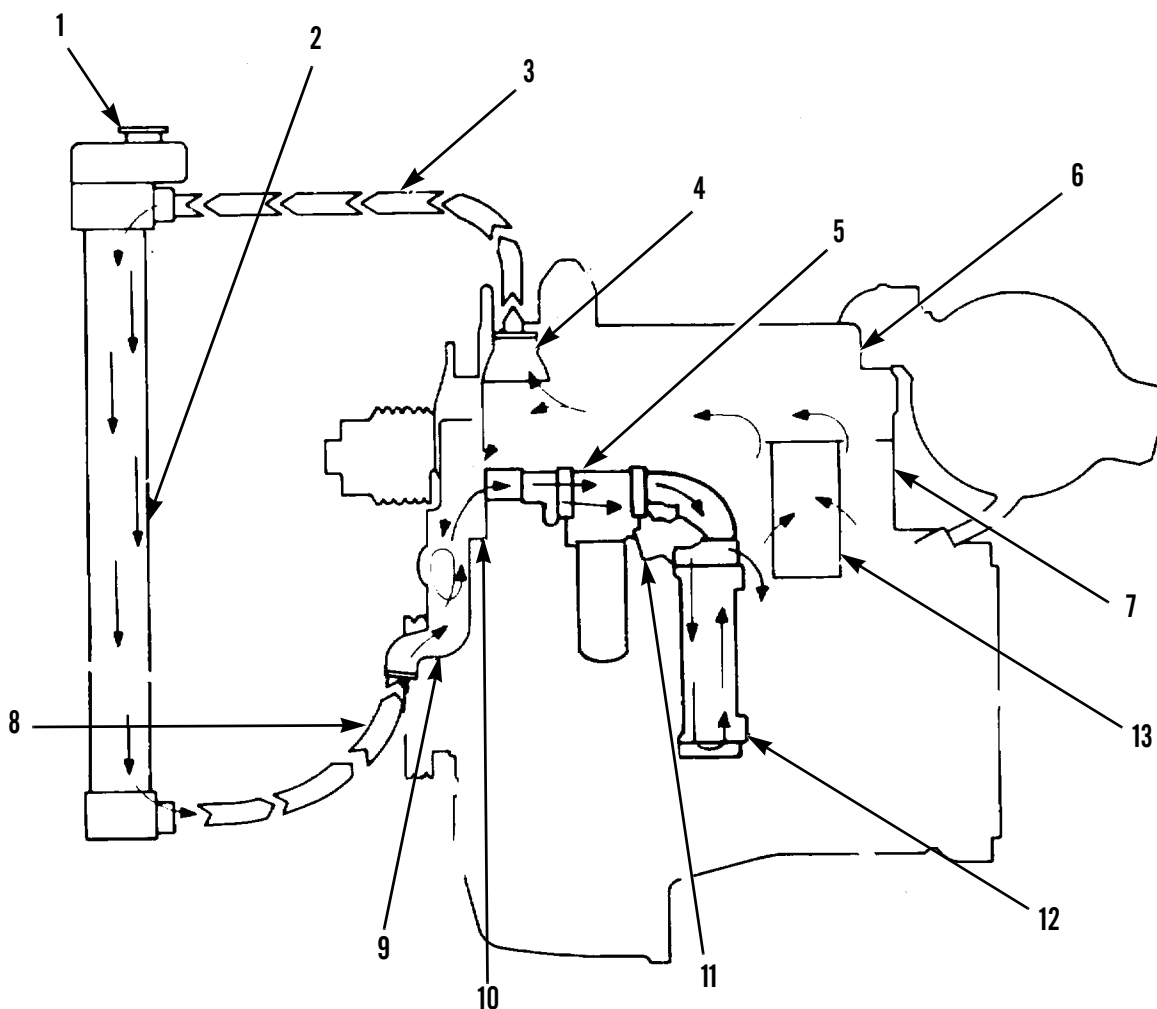Figure 11. Charging System Schematic.



LEGEND

- | | |
|--------------------------------|------------------------------|
| 1. Filler cap | 8. Inlet line for water pump |
| 2. Radiator | 9. Water pump |
| 3. Inlet line for radiator | 10. Internal bypass |
| 4. Water temperature regulator | 11. Bonnet |
| 5. Engine oil cooler | 12. Transmission oil cooler |
| 6. Cylinder head | 13. Cylinder liner |
| 7. Cylinder block | |

Figure 12. Cooling System Schematic.

LEGEND

1. Fuel tank
2. Fuel return line
3. Priming pump
4. Fuel injection nozzle
5. Fuel injection line
6. Fuel injection pump
7. Primary fuel filter
8. Check valves
9. Fuel transfer pump
10. Secondary fuel filter
11. Constant bleed valve
12. Fuel injection pump housing

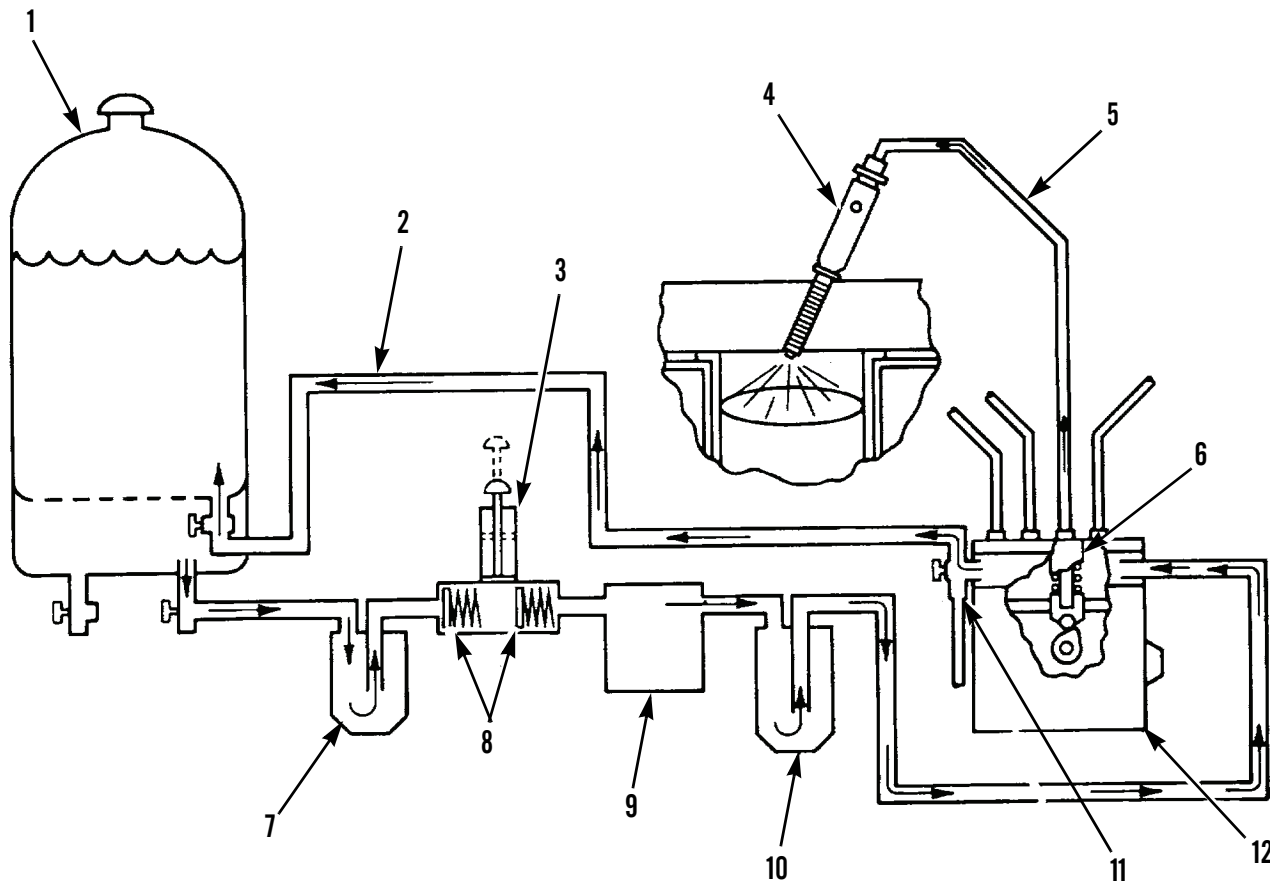


Figure 13. Fuel System Schematic.

LEGEND

1. Oil pressure connection
2. Piston cooling orifices
3. Oil supply for turbocharger
4. Oil passage through rocker shaft to rocker arms
5. Oil pressure connection
6. Camshaft bores
7. Oil manifold
8. Filter bypass
9. Turbocharger
10. Oil filter
11. Oil cooler
12. Oil sump
13. Oil pump
14. Oil cooler bypass
15. Balancer shaft bores

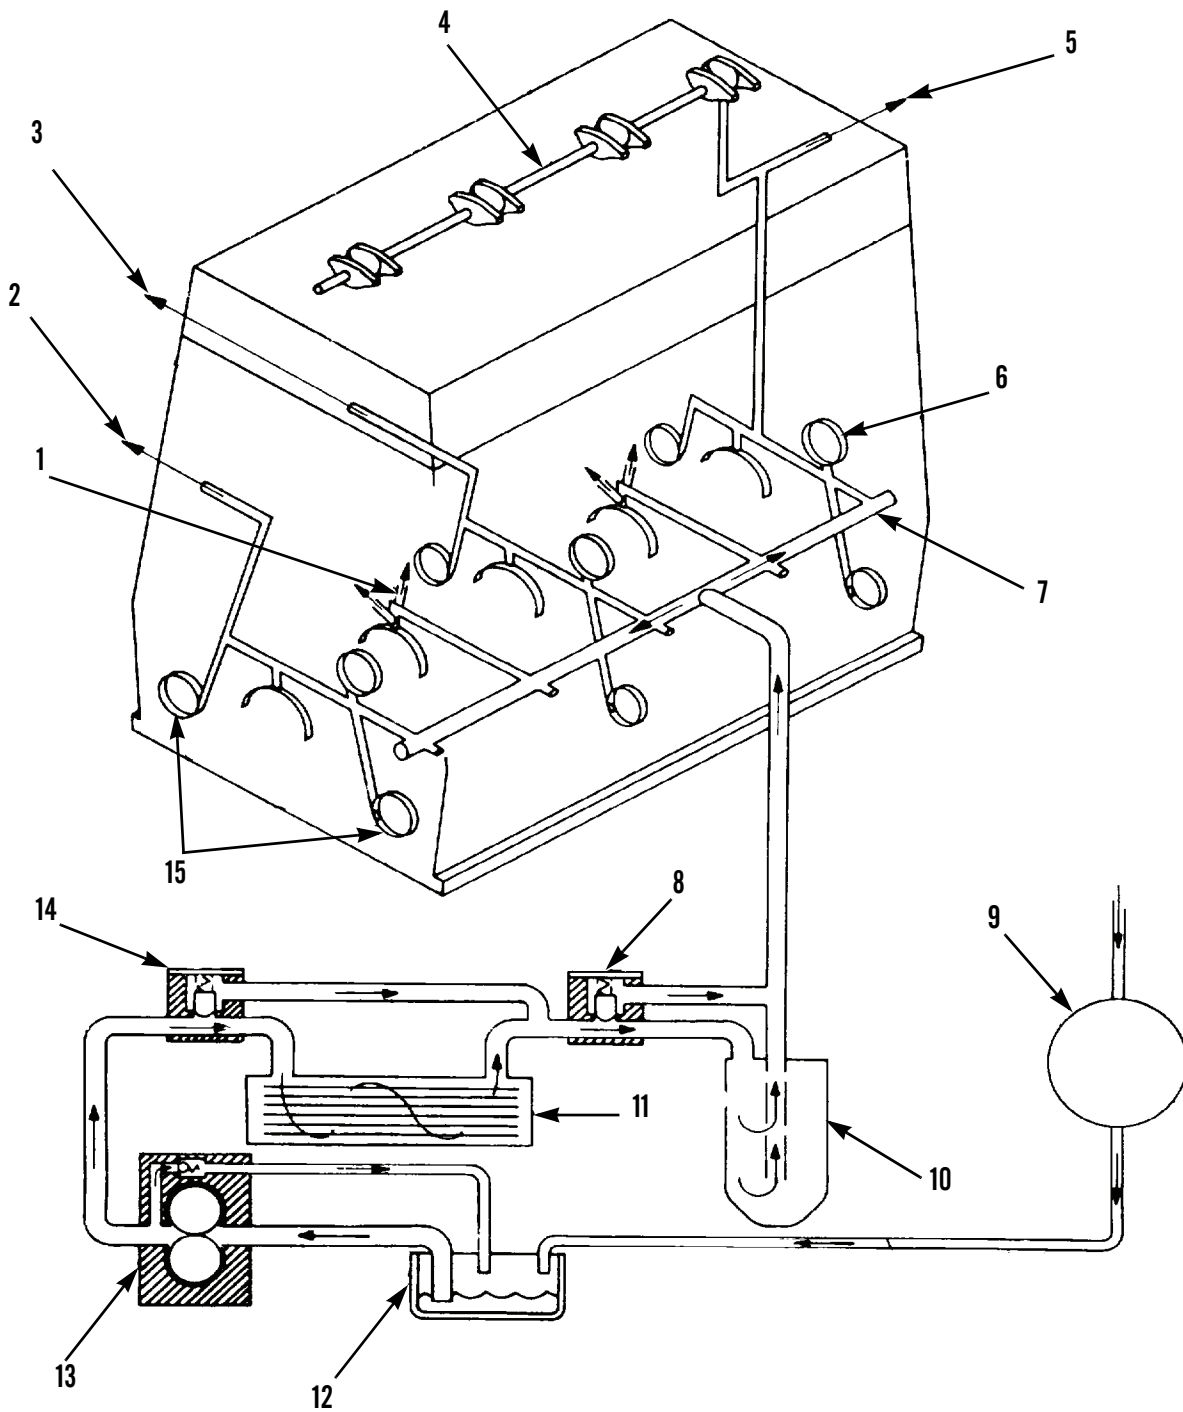


Figure 14. Lubrication System Schematic.

LEGEND

1. Oil filter
2. No. 1 clutch lubrication passage
3. No. 2 clutch lubrication passage
4. Main relief valve
5. Oil cooler
6. Housing for transfer gears
7. Oil pump
8. Planetary transmission
9. Differential lock valve
10. Selector valve group
11. Transmission reservoir
12. Main reservoir in intermediate housing
13. Differential reservoir
14. Magnetic screen filter
15. Magnetic screen filter
16. No. 1 direction clutch
17. No. 2 direction clutch

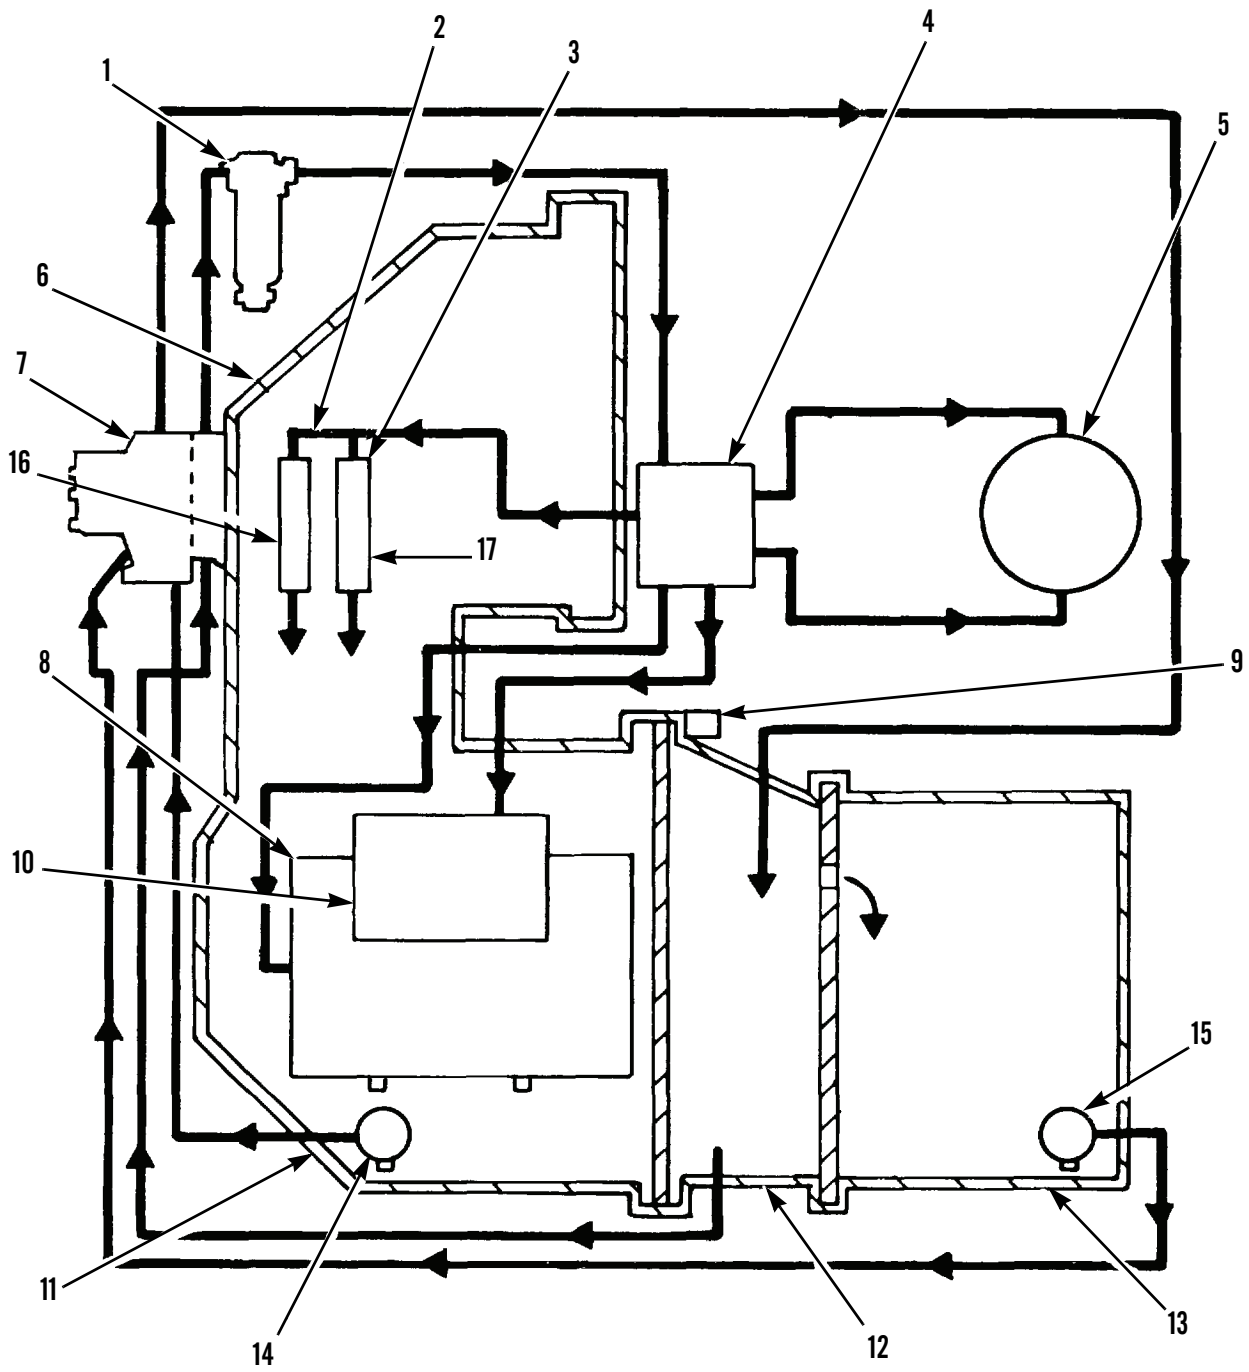


Figure 15. Transmission Hydraulic Schematic.

LEGEND

- A. Passage for signal pressure
- B. Passage for signal pressure
- E. Passage for signal pressure
- F. Passage for signal pressure
- G. Passage for signal pressure
- 1. Oil filter
- 4. Main relief valve
- 5. Oil cooler
- 7. Oil pump
- 9. Differential lock valve
- 14. Manual modulation valve
- 15. Differential, check and safety spool
- 16. Pilot selector spool
- 17. Speed selector spool (No. 4 clutch)
- 18. Speed selector spool (No. 5 clutch)
- 19. Passage from load piston
- 20. Relief valve
- 21. Passage to differential, check and safety valve
- 22. Passage to No. 4 clutch
- 23. Passage to No. 5 clutch
- 24. Cooler bypass valve
- 25. Lubrication relief valve
- 26. Passage to differential lock clutch
- 27. Passage to differential, check and safety valve
- 28. Direction selector valve
- 29. Priority reducing valve
- 30. Passage to No. 6 clutch
- 31. Modulating reducing valve
- 32. Load piston
- 33. Passage to No. 1 clutch (FORWARD)
- 34. Passage to No. 2 clutch (REVERSE)
- 35. Speed selector spool (No. 6 and No. 7 clutches)
- 36. Speed selector spool (No. 3 clutch)
- 37. Passage to No. 7 clutch
- 38. Passage to No. 3 clutch


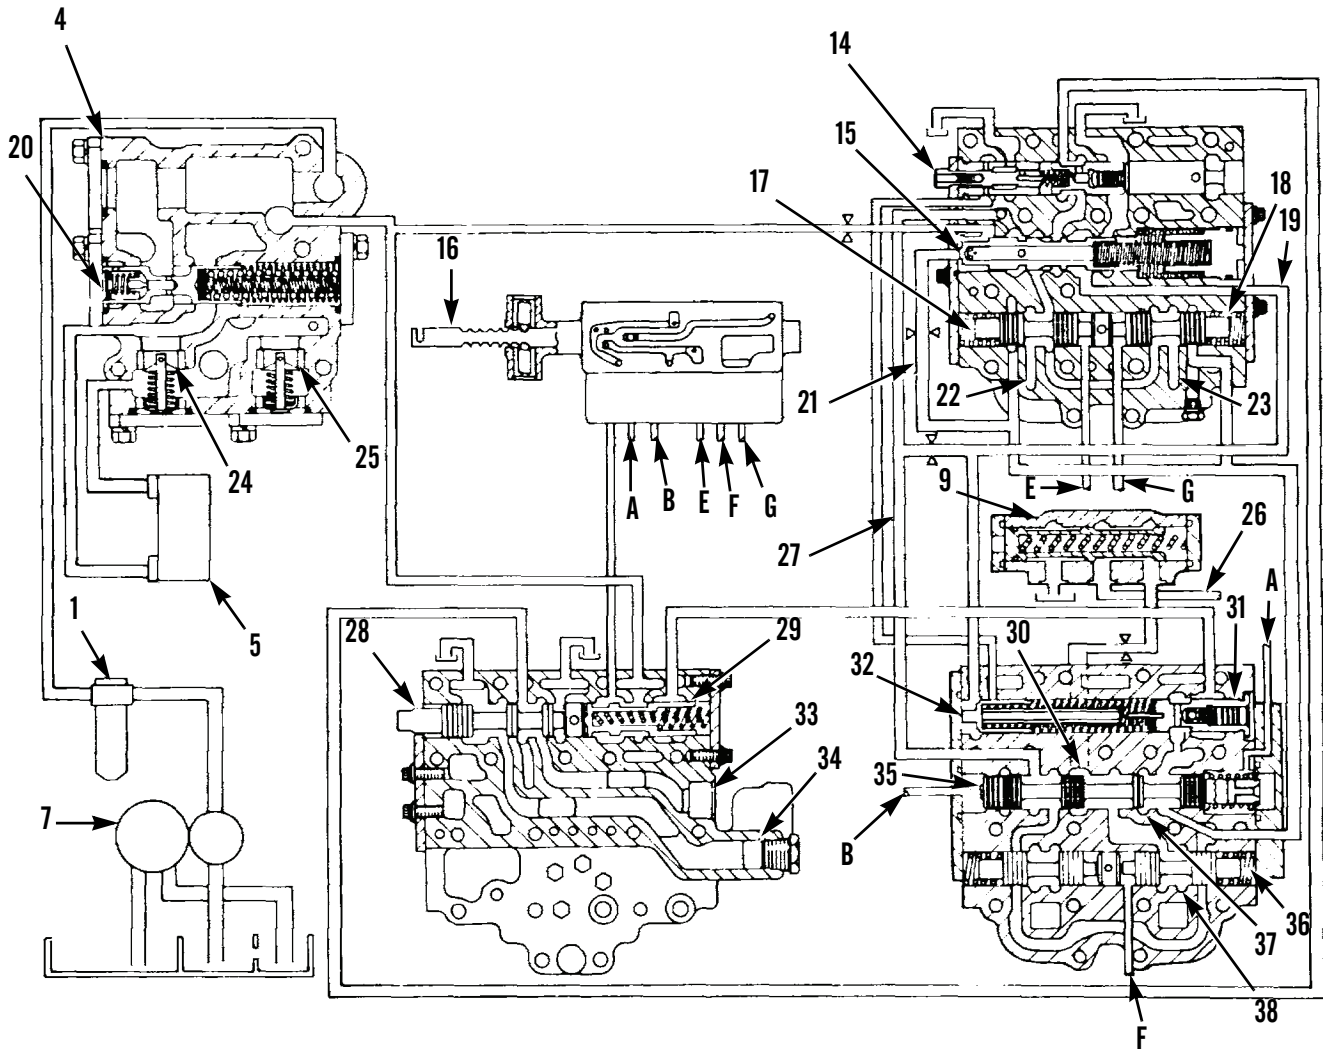


Figure 16. Transmission Control Valves Schematic.

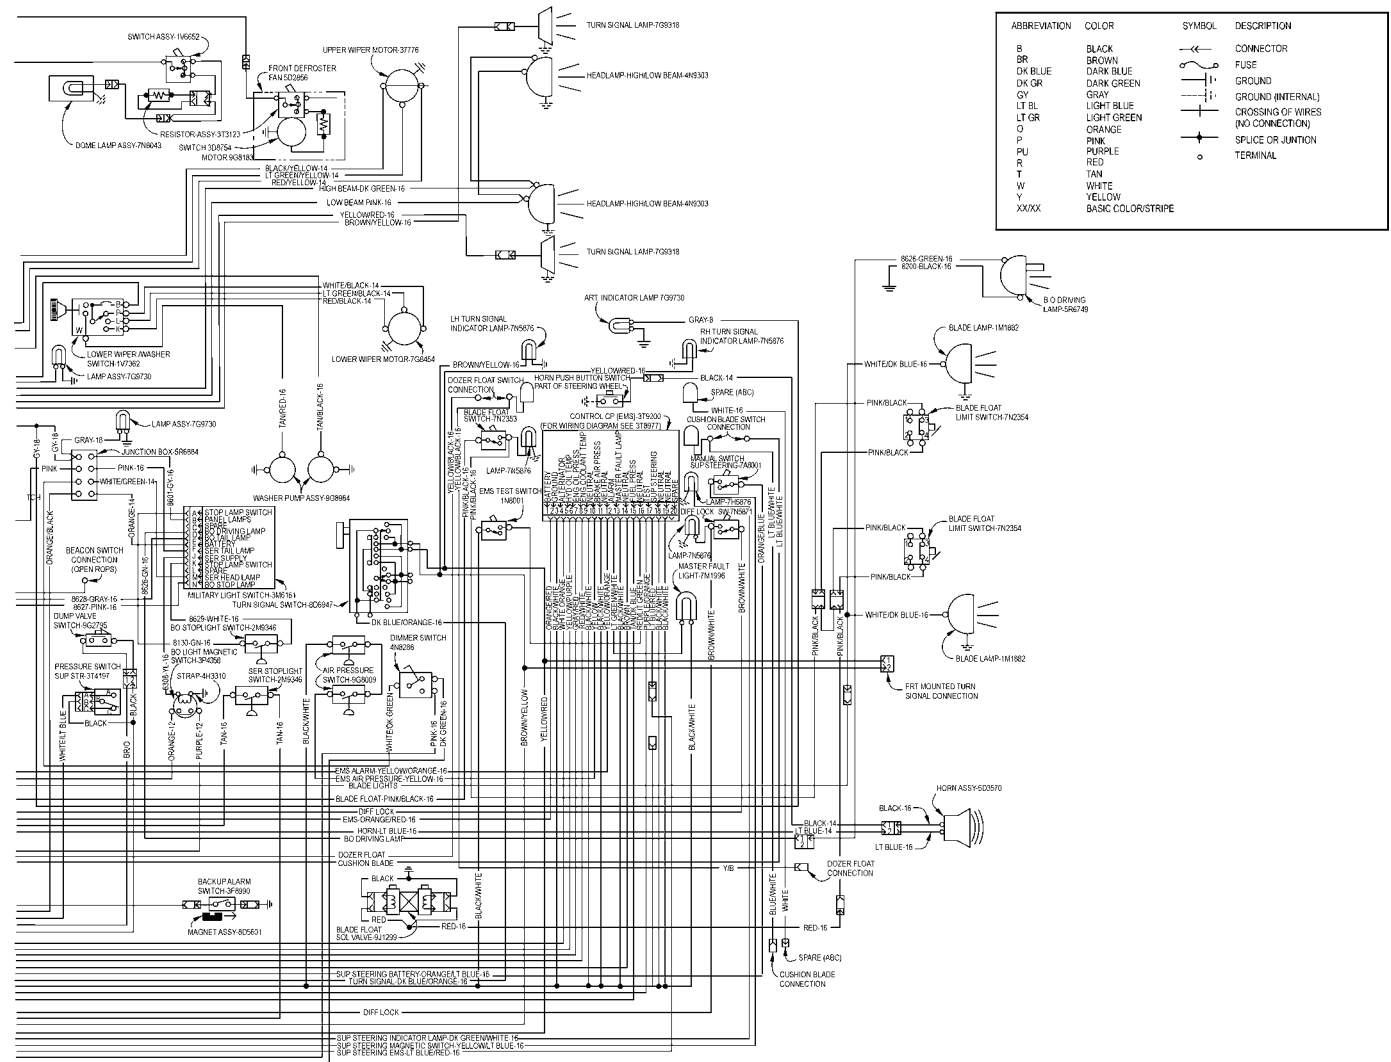

ABBREVIATION	COLOR	SYMBOL	DESCRIPTION
B	BLACK	—	CONNECTOR
BR	BROWN	—	FUSE
DK BLUE	DARK BLUE	—	GROUND (INTERNAL)
DK GR	DARK GREEN	—	CROSSING OF WIRES (NO CONNECTION)
GY	GRAY	—	SPICE OR JUNCTION
LT BL	LIGHT BLUE	—	TERMINAL
LT GR	LIGHT GREEN	—	
O	ORANGE	—	
P	PINK	—	
PU	PURPLE	—	
R	RED	—	
T	TAN	—	
W	WHITE	—	
Y	YELLOW	—	
XXX/XX	BASIC COLOR/STRIPE	—	

Figure 17. 130G Electrical Schematic (Sheet 1 of 2).

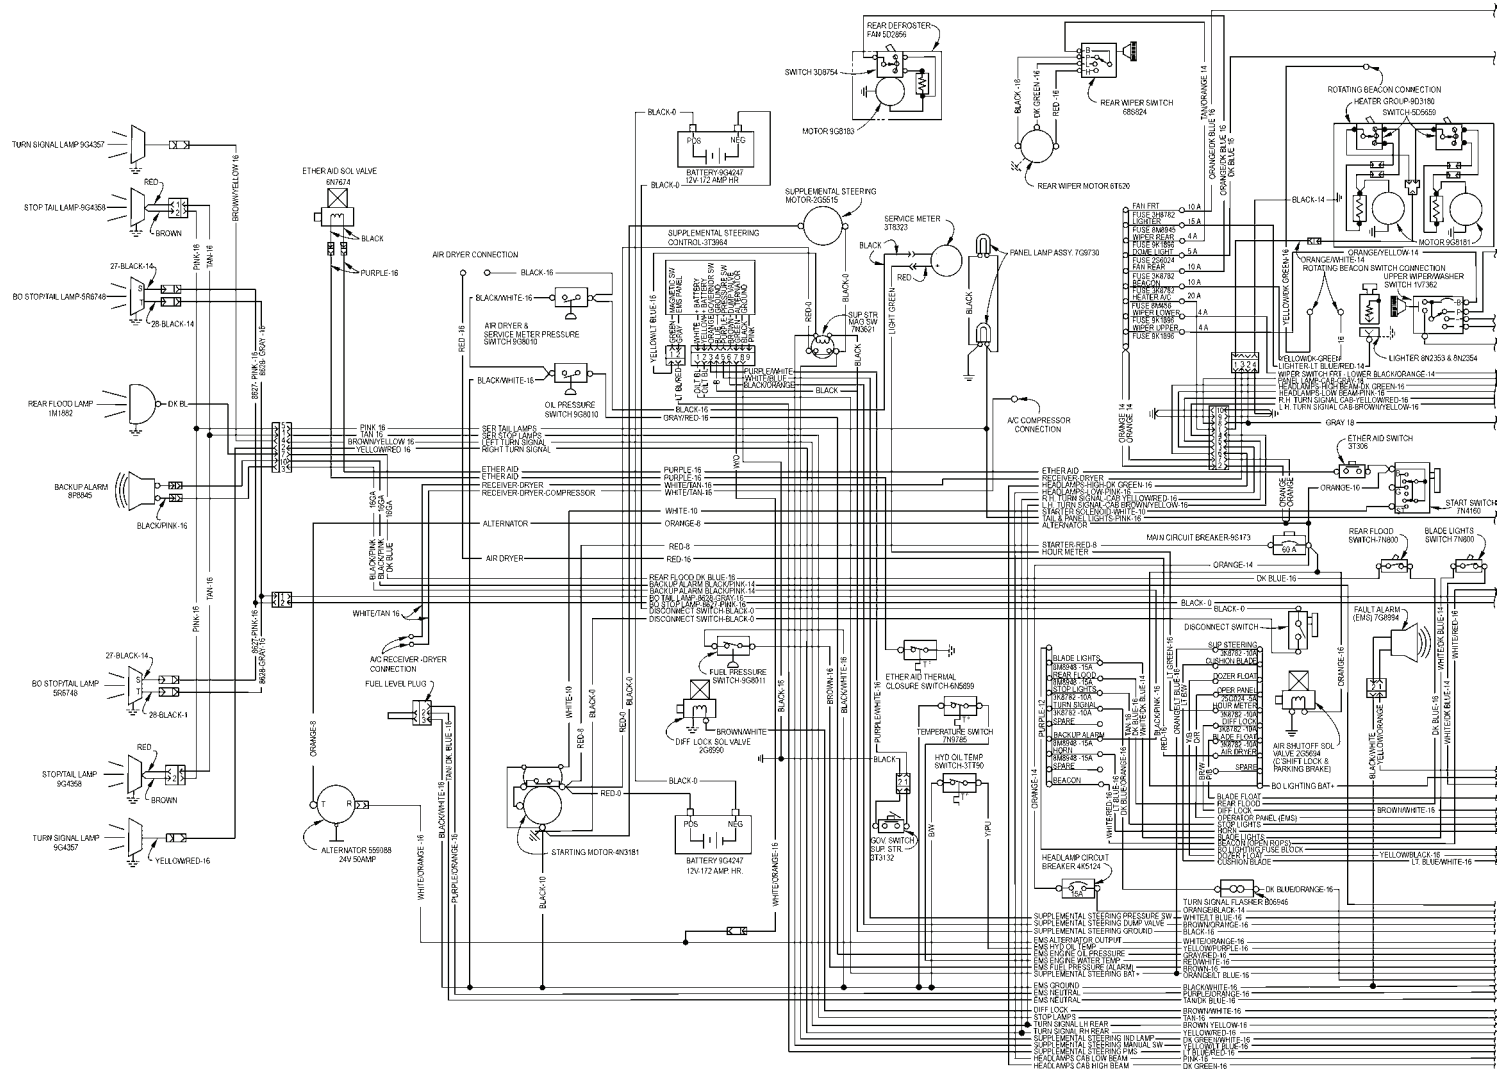


Figure 17. 130G Electrical Schematic (Sheet 2 of 2).

INDEX

<i>Subject</i>	<i>Work Package/Page</i>
Numerics	
130G Series Grader, Theory of Operation	0003 00-1
A	
Abbreviations/Acronyms, List of	0001 00-2
Actuating Assembly Maintenance, Scarifier	0266 00-1
Actuator and Release Valve, Parking Brake Repair	0312 00-1
Adapter Replacement, Engine-To-Transmission	0295 00-1
Air Brake	
Lines Replacement	0161 00-1
Pedal and Linkage Maintenance	0160 00-1
Reservoir Lines and Fittings Replacement	0163 00-1
Reservoir Replacement	0162 00-1
Valve Replacement	0316 00-1
Air Brake System, Theory of Operation	0003 00-18
Air Cleaner	
Body Replacement	0038 00-1
Primary and Secondary Filter Elements Replacement	0037 00-1
Air Compressor	
Assembly Replacement	0317 00-1
Governor Replacement	0165 00-1
Lines and Fittings Replacement	0318 00-1
Air Control Valve Maintenance, Parking Brake	0158 00-1
Air Dryer Maintenance (Types I and II Machines)	0164 00-1
Air Precleaner Replacement	0036 00-1
Air Pressure	
Gauge to Air Tank Lines and Fittings Replacement	0253 00-1
Gauges Replacement	0252 00-1
Switch Lead Replacement	0129 00-1
Switches Replacement	0112 00-1
Alarm Replacement	
Backup	0121 00-1
Monitor Warning	0118 00-1
Alternator	
and Mountings Maintenance	0066 00-1
Ground Lead Replacement	0127 00-1
Testing	0066 00-1
Arm Replacement, Blade Lift	0341 00-1
Articulation	
Check Valve Maintenance	0235 00-1
Cylinder Repair	0336 00-1
Cylinder Replacement	0246 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
A - Continued	
Articulation - Continued	
Hitch Bearing Replacement (CCE and Type I Machines)	0325 00-1
Hitch Bearing Replacement (Type II Machine)	0326 00-1
Indicator Light Replacement	0074 00-1
Indicator Mechanism Replacement	0255 00-1
Lines, Fittings, and Hoses Replacement	0227 00-1
Axle Assembly Replacement, Front	0300 00-1
Axles Replacement, Drive	0307 00-1
B	
Backup	
Alarm Replacement	0121 00-1
Alarm Switch Maintenance	0122 00-1
Bar Assembly Maintenance, Blade Lift	0340 00-1
Battery	
Box Covers Maintenance	0123 00-1
Boxes and Mounting Replacement	0126 00-1
Cables Replacement	0125 00-1
Disconnect Switch Cable Replacement	0142 00-1
Disconnect Switch Replacement	0081 00-1
Holddowns Replacement	0124 00-1
Replacement	0125 00-1
STE/ICE-R Testing	0018 00-1
Belt Replacement, Seat	0201 00-1
Belts Maintenance, Fan	0061 00-1
Blackout	
and Service Stoplight Switches Replacement	0117 00-1
Drive Light Maintenance, Front	0106 00-1
Light Wiring Harness Replacement, Front	0288 00-1
Light Wiring Harness Replacement, Rear	0289 00-1
Lighting Magnetic Switch Replacement	0102 00-1
Stoplights-Taillights and Mounting Maintenance	0109 00-1
Blade	
(Moldboard) Assembly Replacement	0259 00-1
Brackets Replacement	0343 00-1
Blade Float	
Check Valve Maintenance (CCE Machine)	0234 00-1
Harnesses Replacement (CCE Machine), Left and Right-Hand	0144 00-1
Limit Switches and Mounting Replacement (CCE Machine)	0093 00-1
Lines, Fittings, and Hoses Replacement (CCE Machine)	0221 00-1
Pilot Valve Maintenance (CCE Machine)	0233 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
B - Continued	
Blade Float - Continued	
Pilot Valve Wiring Harness Replacement (CCE Machine)	0133 00-1
Blade Lift	
and Relief Valve Maintenance	0236 00-1
Arm Replacement	0341 00-1
Bar Assembly Maintenance	0340 00-1
Check Valve Maintenance, Right	0235 00-1
Cylinder Repair	0335 00-1
Cylinder Replacement	0245 00-1
Lines, Fittings, and Hoses Replacement	0222 00-1
Blade System, Theory of Operation	0003 00-34
Blade Tip	
Check and Relief Valve Maintenance	0241 00-1
Cylinder Repair	0334 00-1
Cylinder Replacement	0244 00-1
Lines, Fittings and Hoses Replacement	0223 00-1
Body, Cab, Hood, and Hull, Theory of Operation	0003 00-22
Body, Chassis, and Hull Accessory Items, Theory of Operation	0003 00-25
Brake and Wheel Spindle Housing Assembly, Replacement	0314 00-1
Brake Control Replacement, Parking	0159 00-1
Brake System Troubleshooting Procedures	0010 00-1
Brakes Maintenance, Service	0313 00-1
Breather Replacement, Valve Cover	0032 00-1
Bumper Replacement, Rear	
CCE Machine	0204 00-1
Models 130GSCE and 130GNSCE	0205 00-1
C	
Cab	
Doors and Latch Assemblies Maintenance (CCE Machine)	0188 00-1
Fuse Box and Cover Replacement	0097 00-1
Insulation and Mounting Replacement (CCE Machine)	0194 00-1
Main Wiring Harness Replacement (CCE Machine)	0292 00-1
Sound Suppression Panel (Ceiling) Replacement (CCE Machine)	0191 00-1
Sound Suppression Panel (Rear) Replacement	0192 00-1
Sound Suppression Panels (Lower-Front and Rear) Replacement (CCE Machine)	0190 00-1
Storage Compartment Maintenance (CCE Machine)	0189 00-1
Windows Replacement (CCE Machine)	0187 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
C - Continued	
Cable(s) Replacement	
Battery	0125 00-1
Battery Disconnect Switch	0142 00-1
NATO Slave Receptacle	0098 00-1
Transmission Control	0152 00-1
Cap Guard Replacement	0056 00-1
Cap Maintenance, Fuel Tank	0043 00-1
Centershift	
Check Valve Maintenance	0235 00-1
Cylinder Repair	0333 00-1
Cylinder Replacement	0243 00-1
Lines, Fittings, and Hoses Replacement	0226 00-1
Centershift Lock	
and Lock Valve Lines and Fittings Replacement	0262 00-1
Assembly Replacement	0260 00-1
Control Valve Assembly Replacement	0261 00-1
Chain Assembly Replacement, Tandem Drive	0311 00-1
Changing	
Engine Oil	0024 00-1
Hydraulic Oil	0216 00-1
Transmission and Differential Oil	0147 00-1
Charging System STE/ICE-R Testing	0016 00-1
Check and Relief Valve Maintenance	
Power Blade and Blade Tip	0241 00-1
Scarifier	0242 00-1
Check and Relief Valve Replacement, Sideshift	0240 00-1
Check Valve Maintenance	
Blade Float (CCE Machine)	0234 00-1
Circle Drive and Leaning Wheel	0239 00-1
Right Blade Lift, Articulation, and Centershift	0235 00-1
Check Valve Replacement, Supplemental Steering	0174 00-1
Circle Assembly Replacement	0344 00-1
Circle Drive and Leaning Wheel Check Valve Maintenance	0239 00-1
Circle Drive Motor	
Assembly Replacement	0217 00-1
Hoses and Fittings Replacement	0225 00-1
Repair	0331 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
C - Continued	
Circle Drive Swivel Assembly	
Repair	0345 00-1
Replacement	0263 00-1
Circuit Breaker	
Main, Replacement	0080 00-1
Replacement	0095 00-1
Combination Valve Maintenance	0323 00-1
Compressor, Air	
Assembly Replacement	0317 00-1
Governor Replacement	0165 00-1
Lines and Fittings Replacement	0318 00-1
Console Base Replacement, Operator's Panel	0328 00-1
Console Replacement, Operator's Panel	0193 00-1
Console Steering	
Hood and Panel Cover Replacement	0196 00-1
Support Replacement (Models 130G, 130GSCE, and 130GNSCE)	0198 00-1
Support Replacement (Models 130GS and 130GSN)	0197 00-1
Control Console Light Replacement	0078 00-1
Control Lever and Housing Replacement, Transmission	0151 00-1
Control Levers Replacement, Hydraulic	0219 00-1
Control Linkages Maintenance, Hydraulic	0218 00-1
Control Pump Maintenance, Steering	0319 00-1
Control Valve	
Centershift Lock, Replacement	0261 00-1
Differential Lock, Replacement	0306 00-1
Hydraulic Repair	0332 00-1
Hydraulic Replacement	0237 00-1
Parking Brake, Air Maintenance	0158 00-1
Coolant Temperature Switch Replacement	0114 00-1
Cooling System	
Servicing	0065 00-1
Theory of Operation	0003 00-6
Troubleshooting Procedures	0007 00-1
Corrosion Prevention and Control (CPC)	0001 00-1
Cover Replacement	
(Electronic Monitoring System) EMS	0075 00-1
Hydraulic DRive	0199 00-1
Operator's Console	0082 00-1
Valve	0031 00-1

INDEX - Continued

Subject *Work Package/Page*

C - Continued

Covers Replacement, Frame	0179 00-1
Cylinder Block Head Assembly Maintenance	0270 00-1
Cylinder Repair	
Articulation	0336 00-1
Blade Lift	0335 00-1
Blade Tip	0334 00-1
Centershift	0333 00-1
Leaning Wheel	0304 00-1
Scarifier	0338 00-1
Sideshift	0337 00-1
Steering	0320 00-1
Cylinder Replacement	
Articulation	0246 00-1
Blade Lift	0245 00-1
Blade Tip	0244 00-1
Centershift	0243 00-1
Ether Starting Aid	0049 00-1
Leaning Wheel	0156 00-1
Scarifier	0248 00-1
Sideshift	0247 00-1
Steering	0176 00-1

D

Dash Plate Replacement	0183 00-1
Data Plates and Decal Replacement	0215 00-1
Decals and Data Plates Replacement	0215 00-1
Defroster Fan(s) (CCE Machine)	
Lead Replacement, Front Window	0134 00-1
Lead Replacement, Rear Window	0135 00-1
Destruction of Army Materiel to Prevent Enemy Use	0001 00-1
Diagrams, Schematic	0352 00-1
Differential	
and Transmission Oil Changing	0147 00-1
Lock Control Valve Replacement	0306 00-1
Replacement	0294 00-1, 0305 00-1
Dimmer Resistor and Mounting Replacement (CCE Machine), Dome Light	0100 00-1
Dimmer Switch Replacement	0103 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
D - Continued	
Dome Light	
Dimmer Resistor and Mounting Replacement (CCE Machine)	0100 00-1
Dimmer Resistor Wiring Harness Replacement (CCE Machine)	0140 00-1
Maintenance (CCE Machine)	0111 00-1
Switch Replacement (CCE Machine)	0099 00-1
Switch Wiring Harness Replacement (CCE Machine)	0139 00-1
Doors and Latch Assemblies Maintenance, Cab (CCE Machines)	0188 00-1
Drawbar Assembly Replacement	0342 00-1
Drive	
Axles Replacement	0307 00-1
Sprockets Replacement	0308 00-1
Drive Assembly Replacement, Final	0309 00-1
Drive Tandem	
Chain Assembly Replacement	0311 00-1
Drive, Tandem	
Housing Assembly Maintenance	0310 00-1
Dryer, Air, Maintenance (Types I and II Machines)	0164 00-1
E	
Electrical System	
Theory of Operation	0003 00-8
Troubleshooting Procedures	0008 00-1
Electrical System General Maintenance Instructions	0021 00-1
Electromagnetic pulse (EMP) exposure	0001 00-1
Electronic Control Replacement, Supplemental Steering	0089 00-1
Electronic Monitoring System (EMS)	
Cover Replacement	0075 00-1
Fault Light Replacement	0072 00-1
Function Lights Replacement	0071 00-1
Jumper Wire Replacement	0130 00-1
Main Wiring Harness Replacement	0291 00-1
Panel Repair	0284 00-1
Panel Replacement	0069 00-1
Panel Switches Replacement	0070 00-1
Engine	
Front Covers Replacement	0269 00-1
Hood Replacement	0181 00-1
Panels and Doors Maintenance	0182 00-1
Replacement	0267 00-1
STE/ICE-R Testing	0014 00-1

INDEX - Continued

Subject *Work Package/Page*

E - Continued

Engine - Continued	
Theory of Operation	0003 00-3
Troubleshooting Procedures	0006 00-1
Engine Oil	
Changing	0024 00-1
Cooler Replacement	0029 00-1
Pressure Switch Replacement	0113 00-1
Sampling Valve and Line Replacement	0030 00-1
Engine, Mounting and Trunnion Replacement	0268 00-1
Engine-To-Transmission Adapter Replacement	0295 00-1
Equipment Characteristics, Capabilities, and Features	0002 00-1
Equipment Data	0002 00-8, 0002 00-9
Equipment Improvement Recommendations (EIRS), Reporting	0001 00-1
Ether	
Control Switch Replacement	0077 00-1
Start Switch Replacement	0114 00-1
Ether Starting Aid	
Assembly Replacement	0050 00-1
Cylinder Replacement	0049 00-1
Exhaust	
Elbow Replacement, Turbocharger	0040 00-1
Manifold Replacement	0277 00-1
Exhaust Pipe and Muffler Replacement	0051 00-1
Exhaust System, Theory of Operation	0003 00-6
Expendable and Durable Items List	0349 00-1

F

Fan	
Belts Maintenance	0061 00-1
Drive Replacement	0063 00-1
Lubrication Line Replacement	0062 00-1
Replacement	0063 00-1
Filers Replacement, Hydraulic Tank	0231 00-1
Final Drive Assembly	
Replacement	0309 00-1
Theory of Operation	0003 00-16
Flasher Unit Replacement	0094 00-1
Flywheel and Flywheel Housing Replacement	0272 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
F - Continued	
Frame	
Covers Replacement	0179 00-1
Separation and Connection Replacement (CCE and Type I Machines)	0324 00-1
Towing Attachments, Drawbars, and Articulation System, Theory of Operation	0003 00-20
Front and Rear Defroster Fans and Mounting Maintenance (CCE Machine)	
Mounting Maintenance, Front and Rear	0210 00-1
Front Axle Assembly	
Replacement	0300 00-1
Theory of Operation	0003 00-17
Fuel Filter Maintenance (Models 130G, 130GSCE, and 130GNSCE)	
Primary Fuel Filter/Priming Pump and Mounting	0045 00-1
Secondary Fuel Filter and Mounting	0047 00-1
Fuel Filter Maintenance (Models 130GS and 130GNS), Primary Fuel Filter/Priming Pump and Mounting	0046 00-1
Fuel Injection	
Lines Maintenance	0035 00-1
Nozzles Maintenance	0278 00-1
Pump Mounting Replacement	0280 00-1
Pump Replacement	0279 00-1
Fuel Pressure Switch Replacement	0115 00-1
Fuel System	
STE/ICE-R Testing	0015 00-1
Theory of Operation	0003 00-4
Fuel Tank	
Cap Maintenance	0043 00-1
Draining	0044 00-1
Hoses, Lines, and Fittings Replacement (Models 130G, 130GSCE, and 130GNSCE) ...	0041 00-1
Hoses, Lines, and Fittings Replacement (Models 130GS and 130GNS)	0042 00-1
Maintenance	0044 00-1
Fuel Transfer Pump Maintenance (Models 130G, 130GSCE, and 130GNSCE)	0281 00-1
Fuse Box	
and Cover Replacement, Cab	0097 00-1
and Mounting Replacement, Main	0096 00-1
G	
Gauge Panel Vandalism Guard Replacement	0195 00-1
Gauge Tube Assembly Replacement, Oil Level	0027 00-1
Gauge(s) Replacement	
Air Pressure	0252 00-1
Temperature	0254 00-1
Transmission Oil Level	0299 00-1

INDEX - Continued

Subject *Work Package/Page*

G - Continued

General Maintenance Instructions	0020 00-1
Governor Controls	
Adjustment	0282 00-1
Replacement	0282 00-1
Governor Replacement, Air Compressor	0165 00-1
Grille Replacement	0054 00-1

H

Head Assembly Maintenance, Cylinder	0270 00-1
Headlights Maintenance	0104 00-1
Heater (CCE Machine)	
Lines and Fittings Replacement	0211 00-1
Maintenance	0212 00-1
Wiring Harness Replacement	0143 00-1
Hitch Bearing Replacement, Articulation	
CCE and Type I Machines	0325 00-1
Type II Machine	0326 00-1
Holddowns Replacement, Battery	0124 00-1
Hood Replacement, Engine	0181 00-1
Horn	
Button Assembly and Mounting Replacement	0120 00-1
Replacement	0119 00-1
Wiring Harness Replacement	0141 00-1
Hoses, Lines and Fittings Replacement	0228 00-1
Blade Float (CCE Machine)	0221 00-1
Blade Tip	0223 00-1
Circle Drive Motor	0225 00-1
Scarifier	0229 00-1
Steering Control Pump to Steering Valve (Single Valve Design)	0172 00-1
Steering Valves to Steering Cylinders (Dual Valve Design)	0169 00-1
Hoses, Lines, and Fittings Replacement	
Air Brake	0161 00-1
Air Brake Reservoir	0163 00-1
Air Compressor	0318 00-1
Air Pressure Gauge to Air Tank	0253 00-1
Articulation	0227 00-1
Blade Lift	0222 00-1
Centershift	0226 00-1
Centershift Lock and Lock Valve	0262 00-1
Fuel Tank (Models 130G, 130GSCE, and 130GNSCE)	0041 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
H - Continued	
Hoses, Lines, and Fittings Replacement - Continued	
Fuel Tank (Models 130GS and 130GNS)	0042 00-1
Hydraulic Pump and Control Valve	0249 00-1
Leaning Wheel	0224 00-1
Oil Cooler to Relief Valve and Hydraulic Tank	0250 00-1
Radiator	0057 00-1
Steering Control Pump to Steering Valves (Dual Valve Design)	0171 00-1
Steering Valves to Steering Cylinders (Single Valve Design)	0170 00-1
Supplemental Steering	0173 00-1
Hourmeter	
Replacement	0083 00-1
Switch Replacement	0113 00-1
Housing Assembly Maintenance, Tandem Drive	0310 00-1
Hub Driver Replacement	0271 00-1
Hydraulic Control	
Levers Replacement	0219 00-1
Linkages Maintenance	0218 00-1
Valve Lines and Fittings Replacement	0249 00-1
Valves Repair	0332 00-1
Valves Replacement	0237 00-1
Hydraulic Drive Protection Cover Replacement	0199 00-1
Hydraulic Oil	
Changing	0216 00-1
Cooler Replacement	0230 00-1
Pressure Tests	0237 00-1
Temperature Switch Replacement	0116 00-1
Hydraulic Pump	
Assembly and Mounting Replacement	0329 00-1
Assembly Repair	0330 00-1
Break-In	0330 00-1
Drive Maintenance	0232 00-1
Junction Block and Lines Replacement	0220 00-1
Lines and Fittings Replacement	0249 00-1
Relief Valve Maintenance	0238 00-1
Hydraulic System	0012 00-1
Theory of Operation	0003 00-26
Troubleshooting	0012 00-1
Hydraulic System Pressure, Relieving	00020 00-2

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
H - Continued	
Hydraulic Tank	
Filters Replacement	0231 00-1
Lines and Fittings Replacement	0250 00-1
Maintenance	0339 00-1
Mounting Maintenance	0339 00-1
I	
Illustrated List of Manufactured Items	0350 00-1
Indicator Mechanism Replacement, Articulation	0255 00-1
Injection Lines Maintenance, Fuel	0035 00-1
Instrument Panel Replacement	0256 00-1
Insulation and Mounting Replacement, Cab (CCE Machine)	0194 00-1
J	
Jumper Wire Replacement, Electronic Monitoring System (EMS)	0130 00-1
Junction Block and Lines Replacement, Hydraulic Pump	0220 00-1
L	
Lead Replacement	
Air Pressure Switch	0129 00-1
Alternator Ground	0127 00-1
Front Window Defroster Fan (CCE Machine)	0134 00-1
Front Work Lights	0136 00-1
Fuse, Turn Signal Lights	0138 00-1
Rear Window Defroster Fan (CCE Machine)	0135 00-1
Rear Work Light	0137 00-1
Starting Motor	0128 00-1
Leaning Wheel	
and Circle Drive Check Valve Maintenance	0239 00-1
Cylinder Repair	0304 00-1
Cylinder Replacement	0156 00-1
Hoses and Fittings Replacement	0224 00-1
Mechanism Maintenance	0303 00-1
Light(s) Replacement	
Articulation Indicator	0074 00-1
Blackout Drive, Front	0106 00-1
Blackout Stoplights-Taillights	0109 00-1
Control Console	0078 00-1
Dome Light (CCE Machine)	0111 00-1
EMS Fault	0072 00-1
EMS Function	0071 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
L - Continued	
Light(s) Replacement - Continued	
Headlights	0104 00-1
Panel	0084 00-1
Stoplights, Rear	0108 00-1
Turn Signals, Rear	0108 00-1
Turn Signal, Front	0107 00-1
Work Light, Rear	0110 00-1
Work Lights, Front	0105 00-1
List	
Abbreviations/Acronyms	0001 00-2
Expendable and Durable Items	0349 00-1
Manufactured Items, Illustrated	0350 00-1
Location and Description of Major Components	0002 00-3, 0002 00-4
Lock Assembly Replacement, Centershift	0260 00-1
M	
Main	
Blackout Light Wiring Harness Replacement	0287 00-1
Fuse Box and Mounting Replacement	0096 00-1
Wiring Harness Replacement	0286 00-1
Main Circuit Breaker Replacement	0080 00-1
Maintenance Allocation Chart (MAC) Tables	0348 00-1
Maintenance Forms, Records, and Reports	0001 00-1
Maintenance Instructions	
Electrical General	0021 00-1
General	0020 00-1
Major Components, Location and Description of	0002 00-3, 0002 00-4
Manufactured Items, Illustrated List	0350 00-1
Mirror(s) Replacement	
Inside Rearview	0213 00-1
Outside Sideview (Models 130G, 130GSCE, and 130GNSCE)	0214 00-1
Miscellaneous Troubleshooting Procedures	0013 00-1
Model Difference Chart	0002 00-2
Modulation Control, Transmission	
Housing Replacement	0149 00-1
Maintenance	0148 00-1
Monitor Warning Alarm Replacement	0118 00-1
Mounting Replacement, Supplemental Steering Magnetic Switch and Pump Motor	0092 00-1
Muffler and Exhaust Pipe Replacement	0051 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
N	
NATO Slave Receptacle and Cables Replacement	0098 00-1
Nonelectrical Gauges, Indicators, and Dipsticks, Theory of Operation	0003 00-31
Nozzles Maintenance, Fuel Injection	0278 00-1
O	
Oil Cooler Replacement	
Engine	0029 00-1
Hydraulic	0230 00-1
Transmission Oil	0298 00-1
Oil Filler and Cap Replacement	0028 00-1
Oil Filter	
Head Replacement	0026 00-1
Mounting Maintenance, Transmission	0153 00-1
Replacement	0025 00-1
Oil Level Gauge Tube Assembly Replacement	0027 00-1
Oil Pan	
Plate Replacement	0275 00-1
Replacement	0275 00-1
Oil Pump	
Engine, Lines Replacement	0276 00-1
Engine, Replacement	0276 00-1
Transmission, Pulley Replacement	0064 00-1
Oil Sampling Valve Replacement	
Engine	0030 00-1
Transmission	0154 00-1
Operator's Console Cover Replacement	0082 00-1
Operator's Panel Console	
Base Replacement	0328 00-1
Replacement	0193 00-1
P	
Panel Lights Replacement	0084 00-1
Panels and Doors Maintenance, Engine	0182 00-1
Parking Brake	
Air Control Valve Maintenance	0158 00-1
Control Replacement	0159 00-1
Parking Brake Actuator and Release Valve	
Repair	0312 00-1
Replacement	0157 00-1
Pedal and Linkage Maintenance, Air Brake	0160 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
P - Continued	
Pilot Valve Maintenance Blade Float (CCE Machine)	0233 00-1
Power Blade and Blade Tip Check and Relief Valve Maintenance	0241 00-1
Precleaner Replacement, Air	0036 00-1
Preparation for Storage or Shipment	0001 00-1
Preventive Maintenance Checks and Services (PMCS)	
Introduction	0022 00-1
Procedures	0023 00-1
Primary Fuel Filter/Priming Pump and Mounting Maintenance	
Models 130G, 130GSCE, and 130GNSCE	0045 00-1
Models 130GS and 130GNS	0046 00-1
Propeller Shaft Maintenance, Hydraulic Pump Drive	0232 00-1
Pump Replacement	
Engine Oil	0276 00-1
Fuel Injection	0279 00-1
Hydraulic	0329 00-1
Transmission Oil	0297 00-1
Water	0060 00-1
R	
Radiator	
and Support Replacement	0052 00-1
Drain Line Replacement	0058 00-1
Hoses, Lines, and Fittings Replacement	0057 00-1
Shields, Baffles, and Plate Replacement	0053 00-1
Radio Interference Suppression Replacement (Models 130G, 130GSCE, and 130GNSCE) ..	0146 00-1
Rear Axle/Differential and Lock Differential, Theory of Operation	0003 00-17
Rear Signal Light and Backup Alarm Wiring Harness Replacement	0285 00-1
Rearview Mirror Replacement, Inside	0213 00-1
Receptacle and Cables Replacement, NATO Slave	0098 00-1
References	0346 00-1
Relay Replacement, Starting Motor	0068 00-1
Relief Valve Maintenance, Hydraulic Pump	0238 00-1
Relief Valve Maintenance, Transmission Control	0296 00-1
Relieving Hydraulic System Pressure	00020 00-2

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
R - Continued	
Remote	
Control Repair (Type II Machine)	0175 00-1
Start Panel Replacement (Type I Machine)	0258 00-1
Steer Air Valves Replacement (Type II Machine)	0315 00-1
Throttle Lever Replacement (Type II Machine)	0257 00-1
Replacement Actuator and Release Valve, Parking Brake Replacement	0157 00-1
Reporting Equipment Improvement Recommendations (EIRs)	0001 00-1
Reservoir Replacement, Air Brake	0162 00-1
Rocker Arm Assembly Maintenance	0273 00-1
ROPS	
Accessories Replacement (CCE Machines)	0185 00-1
Replacement (CCE Machine)	0327 00-1
Replacement (Types I and II Machines)	0184 00-1
S	
Safety, Care, and Handling	0001 00-3
Scarifier	
Assembly Replacement	0264 00-1
Check and Relief Valve Maintenance	0242 00-1
Cylinder Repair	0338 00-1
Cylinder Replacement	0248 00-1
Lines, Fittings, and Hoses Replacement	0229 00-1
Shanks and Teeth Replacement	0265 00-1
Shanks Stowage Rack Replacement (CCE Machine)	0203 00-1
Scarifier Actuating Assembly Maintenance	0266 00-1
Scarifier Assembly, Theory of Operation	0003 00-37
Schematic Diagrams	0352 00-1
Screen Doors Replacement, Side	0055 00-1
Seat	
Assembly and Mounting Replacement	0200 00-1
Belt Replacement	0201 00-1
Secondary Fuel Filter and Mounting Maintenance	
Models 130G, 130GSCE, and 130GNSCE	0047 00-1
Models 130GS and 130GNS	0048 00-1
Separation and Connection, Frame (CCE and Type I Machine)	0324 00-1
Service Brake and Wheel Spindle Housing Assembly Replacement	0314 00-1
Service Brakes Maintenance	0313 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
S - Continued	
Service Upon Receipt	
Inspection Instructions	0019 00-1
Servicing Instructions	0019 00-1
Servicing Cooling System	0065 00-1
Shanks and Teeth Replacement, Scarifier	0265 00-1
Shields, Baffles, and Plate Replacement	0053 00-1
Side Screen Doors Replacement	0055 00-1
Sideshift	
Check and Relief Valve Replacement	0240 00-1
Cylinder and Mounting Replacement	0247 00-1
Cylinder Repair	0337 00-1
Lines and Replacement	0228 00-1
Sideview Mirrors Replacement (Models 130G, 130GSCE, and 130GNSCE), Outside	0214 00-1
Sound Suppression Panel(s), Cab	
Lower-Front (CCE Machine)	0190 00-1
Rear (CCE Machine)	0190 00-1
Sound Suppression Panel(s), Cab	
Ceiling (CCE Machine)	0191 00-1
Rear	0192 00-1
Sprockets Replacement, Drive	0308 00-1
Start Panel Replacement, Remote (Type I Machine)	0258 00-1
Start Switch Replacement	0079 00-1
Starting Motor	
Lead Replacement	0128 00-1
Relay Replacement	0068 00-1
Replacement	0067 00-1
Starting System STE/ICE-R Testing	0017 00-1
STE/ICE-R Testing	
Battery	0018 00-1
Charging System	0016 00-1, 0017 00-1
Engine	0014 00-1
Fuel	0015 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
S - Continued	
Steering	
Control Pump Maintenance	0319 00-1
Hoses, Lines, and Fittings - Steering Control Pump to Steering Valves Replacement	
Dual Valve Design	0171 00-1
Single Valve Design	0172 00-1
Hoses, Lines, and Fittings - Steering Valves to Steering Cylinders Replacement	
Dual Valve Design	0169 00-1
Single Valve Design	0170 00-1
Steering Arms and Tie Rod Maintenance	0301 00-1
Steering Console	
Hood and Panel Cover Replacement	0196 00-1
Support Replacement (Models 130G, 130GSCE, and 130GNSCE)	0198 00-1
Support Replacement (Models 130GS and 130GSN)	0197 00-1
Steering Cylinder	
Repair	0320 00-1
Replacement	0176 00-1
Steering System	
Theory of Operation	0003 00-19
Troubleshooting Procedures	0011 00-1
Steering Valve Maintenance	
Dual Valve Design	0321 00-1
Single Valve Design	0322 00-1
Step Assemblies Maintenance	
New Design	0178 00-1
Old Design	0177 00-1
Stoptlights Maintenance, Rear	0108 00-1
Storage Compartment Maintenance, Cab (CCE Machine)	0189 00-1
Storage or Shipment, Preparation for	0001 00-1
Stowage Rack Replacement, Scarifier Shanks (CCE Machine)	0203 00-1
Supplemental Steering	
Check Valve Replacement	0174 00-1
Dump Valve Wiring Harness Replacement	0131 00-1
Electronic Control Replacement	0089 00-1
Governor Switch Maintenance	0088 00-1
Governor Switch Wiring Harness Replacement	0132 00-1
Hoses, Lines, and Fittings Replacement	0173 00-1
Hydraulic Pressure Switch Replacement	0087 00-1
Magnetic Switch and Pump Motor Mounting Replacement	0092 00-1
Magnetic Switch Replacement	0090 00-1
Main Wiring Harness Replacement	0290 00-1

INDEX - Continued

Subject *Work Package/Page*

S - Continued

Supplemental Steering - Continued	
Pump Motor Replacement	0091 00-1
Pump Valve Switch Maintenance	0086 00-1
Pump Wiring Harnesses Replacement	0145 00-1
Support, Radiator, Replacement	0052 00-1
Switch Panel and Mounting Replacement (CCE and Type I Machines)	0085 00-1
Switch(es) Replacement	
Air Pressure	0112 00-1
Backup Alarm	0122 00-1
Battery Disconnect	0081 00-1
Blackout and Service Stoplight	0117 00-1
Blackout Lighting, Magnetic	0102 00-1
Blade Float Limit (CCE Machine)	0093 00-1
Coolant Temperature	0114 00-1
Dimmer	0103 00-1
Dome Light (CCE Machine)	0099 00-1
EMS Panel	0070 00-1
Engine Oil Pressure	0113 00-1
Ether Control	0077 00-1
Ether Start	0114 00-1
Fuel Pressure	0115 00-1
Hourmeter	0113 00-1
Hydraulic Oil Temperature	0116 00-1
Magnetic, Supplemental Steering	0090 00-1
Start	0079 00-1
Supplemental Steering Hydraulic Pressure	0087 00-1
Supplemental Steering Pump Valve	0086 00-1
Supplemental Steering Governor	0088 00-1
Turn Signal	0073 00-1
Vehicle Light	0101 00-1
Work Light	0076 00-1
Swivel Assembly, Circle Drive	
Repair	0345 00-1
Replacement	0263 00-1

T

Tachometer Drive Replacement (Models 130G, 130GSCE, and 130GNSCE)	0034 00-1
Tandem Drive	
Housing Assembly Maintenance	0310 00-1
Chain Assembly Replacement	0311 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
T - Continued	
Temperature	
Gauge Replacement	0254 00-1
Regulator (Thermostat) Replacement	0059 00-1
Theory of Operation	
130G Series Grader	0003 00-1
Air Brake System	0003 00-18
Blade System	0003 00-34
Body, Cab, Hood, and Hull	0003 00-22
Body, Chassis, and Hull Accessory Items	0003 00-25
Cooling System	0003 00-6
Electrical System	0003 00-8
Engine	0003 00-3
Exhaust System	0003 00-6
Final Drive Assembly	0003 00-16
Frame, Towing Attachments, Drawbars, and Articulation System	0003 00-20
Front Axle Assembly	0003 00-17
Fuel System	0003 00-4
Hydraulic System	0003 00-26
Nonelectrical Gauges, Indicators, and Dipsticks	0003 00-31
Rear Axle/Differential and Lock Differential	0003 00-17
Scarifier Assembly	0003 00-37
Steering	0003 00-19
Transmission	0003 00-16
Wheels and Tires	0003 00-18
Thermostat (Temperature Regulator) Replacement	0059 00-1
Throttle Lever Replacement, Remote (Type II Machine)	0257 00-1
Tie Rod Maintenance	0301 00-1
Tires Maintenance	0168 00-1
Toolbox Replacement	0202 00-1
Torque Limits	0351 00-1
Tow Hook Replacement	0180 00-1
Transfer Pump Maintenance, Fuel (Models 130G, 130GSCE, and 130GNSCE)	0281 00-1
Transmission	
Modulation Control Housing Replacement	0149 00-1
Modulation Control Maintenance	0148 00-1
Theory of Operation	0003 00-16
Troubleshooting Procedures	0009 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
T - Continued	
Transmission Control	
Adjustment	0150 00-1
Cables Replacement	0152 00-1
Lever and Housing Replacement	0151 00-1
Relief Valve Maintenance	0296 00-1
Transmission Oil	
Changing	0147 00-1
Cooler Maintenance	0298 00-1
Filler and Oil Level Gauge Replacement	0299 00-1
Filter and Mounting Maintenance	0153 00-1
Lines Replacement	0155 00-1
Pump Pulley Replacement	0064 00-1
Pump Replacement	0297 00-1
Sampling Valve and Line Maintenance	0154 00-1
Transmission, Adapter, and Differential Replacement	0294 00-1
Troubleshooting	
Introduction	0004 00-1
Procedures	0012 00-1
Brake System	0010 00-1
Cooling System	0007 00-1
Electrical System	0008 00-1
Engine	0006 00-1
Miscellaneous	0013 00-1
Steering System	0011 00-1
Transmission	0009 00-1
Symptom Index	0005 00-1
Trunnion Replacement, Engine	0268 00-1
Turbocharger	
Air Lines Replacement	0039 00-1
Exhaust Elbow Replacement	0040 00-1
Oil Lines Replacement	0033 00-1
Replacement	0283 00-1
Turn Signal	
Lamp Replacement, Rear	0108 00-1
Lights Fuse Lead Replacement	0138 00-1
Lights Maintenance, Front	0107 00-1
Lights Maintenance, Rear	0108 00-1
Switch Replacement	0073 00-1

INDEX - Continued

<i>Subject</i>	<i>Work Package/Page</i>
V	
Valve Cover	
Breather Replacement	0032 00-1
Replacement	0031 00-1
Valve Maintenance	
Combination	0323 00-1
Steering (Dual Valve Design)	0321 00-1
Steering (Single Valve Design)	0322 00-1
Valves Maintenance, Cylinder Blade Head Assembly	0274 00-1
Vandalism Guard Replacement, Gauge Panel	0195 00-1
Vehicle Light Switch and Mounting Replacement	0101 00-1
W	
Washer, Windshield, Replacement (CCE Machine)	0209 00-1
Water Pump Replacement	0060 00-1
Wheel Spindle, Bearings, and Seals Replacement	0302 00-1
Wheels and Tires, Theory of Operation	0003 00-18
Wheels Replacement	
Front	0166 00-1
Rear	0167 00-1
Windows (CCE Machine)	
Cab	0187 00-1
Lower-Front	0186 00-1
Windshield Washer Replacement (CCE Machine)	0209 00-1
Wiper (CCE Machine)	
Front (Lower)	0206 00-1
Front (Upper)	0207 00-1
Rear	0208 00-1
Wiring Harness Replacement, Rear	0293 00-1
Wiring Harness(es) Replacement	
Blade Float Pilot Valve (CCE Machine)	0133 00-1
Blade Float, Left- and Right-Hand (CCE Machine)	0144 00-1
Cab, Main (CCE Machine)	0292 00-1
Dome Light Dimmer Resistor (CCE Machine)	0140 00-1
Dome Light Switch (CCE Machine)	0139 00-1
Electronic Monitoring System (EMS), Main	0291 00-1
Front Blackout Light	0288 00-1
Heater (CCE Machine)	0143 00-1
Horn	0141 00-1
Main	0286 00-1
Main Blackout Light	0287 00-1

INDEX - Continued

Subject

Work Package/Page

W - Continued

Wiring Harness(es) Replacement - Continued

Rear Blackout Light	0289 00-1
Rear Signal Light and Backup Alarm	0285 00-1
Supplemental Steering Dump Valve	0131 00-1
Supplemental Steering Governor Switch	0132 00-1
Supplemental Steering Pump	0145 00-1
Supplemental Steering, Main	0290 00-1
Wiper, Rear (CCE Machine)	0293 00-1

Work Light

Lamp Replacement

Maintenance, Front	0105 00-1
Maintenance, Rear	0110 00-1
Lead Replacement, Front	0136 00-1
Lead Replacement, Rear	0137 00-1
Switches Replacement	0076 00-1

By Order of the Secretary of the Army:

Official:



JOYCE E. MORROW
*Administrative Assistant to the
Secretary of the Army*

0604103

PETER J. SCHOOMAKER
*General, United States Army
Chief of Staff*

Distribution:

To be distributed in accordance with the initial distribution number (IDN) 255785,
requirements for TM 5-3805-261-23-1.

RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is OAASA	Use Part II (<i>reverse</i>) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM).	DATE 1 July 2006
---	--	--------------------------------

TO: (<i>Forward to proponent of publication or form</i>) (<i>Include ZIP Code</i>) AMSTA-LC-LMIT/TECH PUBS, TACOM-RI 1 Rock Island Arsenal Rock Island, IL 61299-7630	FROM: (<i>Activity and location</i>) (<i>Include ZIP Code</i>)
---	---

PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS

PUBLICATION/FORM NUMBER TM 5-3805-261-23-1	DATE 28 April 2006	TITLE Field Maintenance Manual (Includes Unit and DS Maintenance) for Grader, Road, Motorized, DED Heavy CCE
---	-----------------------	--

ITEM	PAGE	PARA-	LINE	FIGURE NO.	TABLE	RECOMMENDED CHANGES AND REASON
	0017 00-2					Part number supplied for item 2 is incorrect.

SAMPLE

TYPED NAME, GRADE OR TITLE	TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION	SIGNATURE
----------------------------	---	-----------

TO: (Forward direct to addressee listed in publication)

FROM: (Activity and location) (Include ZIP Code)

DATE

PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS

PUBLICATION NUMBER

DATE

TITLE

PAGE NO.	COLM NO.	LINE NO.	NATIONAL STOCK NUMBER	REFERENCE NO.	FIGURE NO.	ITEM NO.	TOTAL NO. OF MAJOR ITEMS SUPPORTED	RECOMMENDED ACTION
----------	----------	----------	-----------------------	---------------	------------	----------	------------------------------------	--------------------

SAMPLE

PART III - REMARKS (Use this section for remarks, or suggestions for improvement of publications and for additional sheets may be used where space is needed.)

TYPED NAME, GRADE OR TITLE

TELEPHONE EXCHANGE/AUTOVON,
PLUS EXTENSION

SIGNATURE

RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is OAASA						Use Part II (<i>reverse</i>) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM).	DATE
TO: (<i>Forward to proponent of publication or form</i>) (<i>Include ZIP Code</i>) AMSTA-LC-LMIT/TECH PUBS, TACOM-RI 1 Rock Island Arsenal Rock Island, IL 61299-7630						FROM: (<i>Activity and location</i>) (<i>Include ZIP Code</i>)	
PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS							
PUBLICATION/FORM NUMBER TM 5-3805-261-23-1						DATE 28 April 2006	TITLE Field Maintenance Manual (Includes Unit and DS Maintenance) for Grader, Road, Motorized, DED Heavy CCE
ITEM	PAGE	PARA-	LINE	FIGURE NO.	TABLE	RECOMMENDED CHANGES AND REASON	
TYPED NAME, GRADE OR TITLE					TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION		SIGNATURE

TO: (Forward direct to addressee listed in publication)

FROM: (Activity and location) (Include ZIP Code)

DATE

PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS

PUBLICATION NUMBER

DATE

TITLE

PAGE NO.	COLM NO.	LINE NO.	NATIONAL STOCK NUMBER	REFERENCE NO.	FIGURE NO.	ITEM NO.	TOTAL NO. OF MAJOR ITEMS SUPPORTED	RECOMMENDED ACTION
----------	----------	----------	-----------------------	---------------	------------	----------	------------------------------------	--------------------

PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)

TYPED NAME, GRADE OR TITLE

TELEPHONE EXCHANGE/AUTOVON,
PLUS EXTENSION

SIGNATURE

RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is OAASA						Use Part II (<i>reverse</i>) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM).	DATE
TO: (<i>Forward to proponent of publication or form</i>) (<i>Include ZIP Code</i>) AMSTA-LC-LMIT/TECH PUBS, TACOM-RI 1 Rock Island Arsenal Rock Island, IL 61299-7630						FROM: (<i>Activity and location</i>) (<i>Include ZIP Code</i>)	
PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS							
PUBLICATION/FORM NUMBER TM 5-3805-261-23-1						DATE 28 April 2006	TITLE Field Maintenance Manual (Includes Unit and DS Maintenance) for Grader, Road, Motorized, DED Heavy CCE
ITEM	PAGE	PARA-	LINE	FIGURE NO.	TABLE	RECOMMENDED CHANGES AND REASON	
TYPED NAME, GRADE OR TITLE					TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION		SIGNATURE

TO: (Forward direct to addressee listed in publication)

FROM: (Activity and location) (Include ZIP Code)

DATE

PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS

PUBLICATION NUMBER

DATE

TITLE

PAGE NO.	COLM NO.	LINE NO.	NATIONAL STOCK NUMBER	REFERENCE NO.	FIGURE NO.	ITEM NO.	TOTAL NO. OF MAJOR ITEMS SUPPORTED	RECOMMENDED ACTION
----------	----------	----------	-----------------------	---------------	------------	----------	------------------------------------	--------------------

PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)

TYPED NAME, GRADE OR TITLE

TELEPHONE EXCHANGE/AUTOVON,
PLUS EXTENSION

SIGNATURE

RECOMMENDED CHANGES TO PUBLICATIONS AND BLANK FORMS For use of this form, see AR 25-30; the proponent agency is OAASA						Use Part II (<i>reverse</i>) for Repair Parts and Special Tool Lists (RPSTL) and Supply Catalogs/Supply Manuals (SC/SM).	DATE
TO: (<i>Forward to proponent of publication or form</i>) (<i>Include ZIP Code</i>) AMSTA-LC-LMIT/TECH PUBS, TACOM-RI 1 Rock Island Arsenal Rock Island, IL 61299-7630						FROM: (<i>Activity and location</i>) (<i>Include ZIP Code</i>)	
PART I - ALL PUBLICATIONS (EXCEPT RPSTL AND SC/SM) AND BLANK FORMS							
PUBLICATION/FORM NUMBER TM 5-3805-261-23-1						DATE 28 April 2006	TITLE Field Maintenance Manual (Includes Unit and DS Maintenance) for Grader, Road, Motorized, DED Heavy CCE
ITEM	PAGE	PARA-	LINE	FIGURE NO.	TABLE	RECOMMENDED CHANGES AND REASON	
TYPED NAME, GRADE OR TITLE					TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION		SIGNATURE

TO: (Forward direct to addressee listed in publication)

FROM: (Activity and location) (Include ZIP Code)

DATE

PART II - REPAIR PARTS AND SPECIAL TOOL LISTS AND SUPPLY CATALOGS/SUPPLY MANUALS

PUBLICATION NUMBER

DATE

TITLE

PAGE NO.	COLM NO.	LINE NO.	NATIONAL STOCK NUMBER	REFERENCE NO.	FIGURE NO.	ITEM NO.	TOTAL NO. OF MAJOR ITEMS SUPPORTED	RECOMMENDED ACTION
----------	----------	----------	-----------------------	---------------	------------	----------	------------------------------------	--------------------

PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)

TYPED NAME, GRADE OR TITLE

TELEPHONE EXCHANGE/AUTOVON,
PLUS EXTENSION

SIGNATURE

THE METRIC SYSTEM AND EQUIVALENTS

<p>Linear Measure</p> <p>1 Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches 1 Meter = 100 Centimeters = 1000 Millimeters = 39.37 Inches 1 Kilometer = 1000 Meters = 0.621 Miles</p> <p>Weights</p> <p>1 Gram = 0.001 Kilograms = 1000 Milligrams = 0.035 Ounces 1 Kilogram = 1000 Grams = 2.2 Pounds 1 Metric Ton = 1000 Kilograms = 1 Megagram = 1.1 Short Tons</p> <p>Liquid Measure</p> <p>1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces 1 Liter = 1000 Milliliters = 33.82 Fluid Ounces</p>	<p>Square Measure</p> <p>1 Sq Centimeter = 100 Sq Millimeters = 0.155 Sq Inches 1 Sq Meter = 10,000 Sq Centimeters = 10.76 Sq Feet 1 Sq Kilometer = 1,000,000 Sq Meters = 0.386 Sq Miles</p> <p>Cubic Measure</p> <p>1 Cu Centimeter = 1,000 Cu Millimeters = 0.06 Cu Inches 1 Cu Meter = 1,000,000 Cu Centimeters = 35.31 Cu Feet</p> <p>Temperature</p> <p>$5/9 (^{\circ}\text{F} - 32) = ^{\circ}\text{C}$ 212° Fahrenheit is equivalent to 100° Celsius 90° Fahrenheit is equivalent to 32.2° Celsius 32° Fahrenheit is equivalent to 0° Celsius $9/5 \text{ C}^{\circ} + 32 = \text{F}^{\circ}$</p>
--	--

APPROXIMATE CONVERSION FACTORS

To Change	To	Multiply By
Inches	Centimeters	2.540
Feet	Meters	0.305
Yards	Meters	0.914
Miles	Kilometers	1.609
Sq Inches	Sq Centimeters	6.451
Sq Feet	Sq Meters	0.093
Sq Yards	Sq Meters	0.836
Sq Miles	Sq Kilometers	2.590
Acres	Sq Hectometers	0.405
Cubic Feet	Cubic Meters	0.028
Cubic Yards	Cubic Meters	0.765
Fluid Ounces	Milliliters	29.573
Pints	Liters	0.473
Quarts	Liters	0.946
Gallons	Liters	3.785
Ounces	Grams	28.349
Pounds	Kilograms	0.454
Short Tons	Metric Tons	0.907
Pound-Feet	Newton-Meters	1.356
Pounds per Sq Inch	Kilopascals	6.895
Miles per Gallon	Kilometers per Liter	0.425
Miles per Hour	Kilometers per Hour	1.609

To Change	To	Multiply By
Centimeters	Inches	0.394
Meters	Feet	3.280
Meters	Yards	1.094
Kilometers	Miles	0.621
Sq Centimeters	Sq Inches	0.155
Sq Meters	Sq Feet	10.764
Sq Meters	Sq Yards	1.196
Sq Kilometers	Sq Miles	0.386
Sq Hectometers	Acres	2.471
Cubic Meters	Cubic Feet	35.315
Cubic Meters	Cubic Yards	1.308
Milliliters	Fluid Ounces	0.034
Liters	Pints	2.113
Liters	Quarts	1.057
Liters	Gallons	0.264
Grams	Ounces	0.035
Kilograms	Pounds	2.205
Metric Tons	Short Tons	1.102
Newton-Meters	Pound-Feet	0.738
Kilopascals	Pounds per Sq Inch	0.145
Kilometers per Liter	Miles per Gallon	2.354
Kilometers per Hour	Miles per Hour	0.621

