

**TECHNICAL MANUAL**

**OPERATOR'S ORGANIZATIONAL,  
DIRECT SUPPORT, GENERAL SUPPORT, AND  
DEPOT MAINTENANCE MANUAL  
(INCLUDING REPAIR PARTS INFORMATION AND  
SUPPLEMENTAL OPERATING, MAINTENANCE  
AND REPAIR PARTS INSTRUCTIONS)**

**FOR**

**ROLLER, PNEUMATIC TIRED  
VARIABLE PRESSURE, SELF-PROPELLED (CCE)  
HYSTER MODEL C530A**

**NSN 3895-01-013-3630**

**WARNING:** Changing the quantity of shims in the relief valves is not recommended.

**WARNING:** .When assembling the steering control unit, alignment of the cross slot in the drive with the valleys between the teeth of the meter gear star determines proper valve timing of the unit. There are 12 teeth on the spline and 6 pump teeth on the star. Alignment is exactly right in 6 positions and exactly wrong in 6 positions. If the parts slip out of position during this part of assembly, repeat until you are certain correct alignment is obtained (see figure 9-57).

**WARNING:** When checking water spray motor brushes, be sure Ignition key switch and water spray switch are in the OFF position before inspecting brushes.

**WARNING:** Support heavy components securely BEFORE attempting to remove them.

**WARNING:** Always block the unit securely to prevent movement while performing maintenance or repairs.

**WARNING:** DO NOT extend the hands or arms through the center of the steering wheel during start-up after the steering control unit has been reassembled. If the steering control unit has been disassembled and incorrectly timed, the steering wheel may suddenly become motorized or rotate abruptly with extreme force.


**WARNING:** When checking a hot radiator, place a rag over the cap and loosen the cap to the first notch to relieve pressure. If the cap is completely removed without the pressure being relieved, severe scalding may result.

**WARNING:** DO NOT look directly into the tower while removing the yoke shaft from the 3-speed range transmission (section 7, page 7-17, step 4). During this procedure a spring-loaded detent ball is released.

**WARNING:** When cleaning with alkali solution, exercise care to avoid skin rashes and inhalation of vapors.

**WARNING:** During hitch removal and disassembly block both ends of each frame section (2) is necessary because varying ballast distribution may cause the ends to tip in either direction.

**WARNING:** During brake disassembly, while removing the snap ring on the brake cylinder bore, keep pressure against piston. The internal components are spring loaded and when the lock ring is removed the components could be released with considerable force.

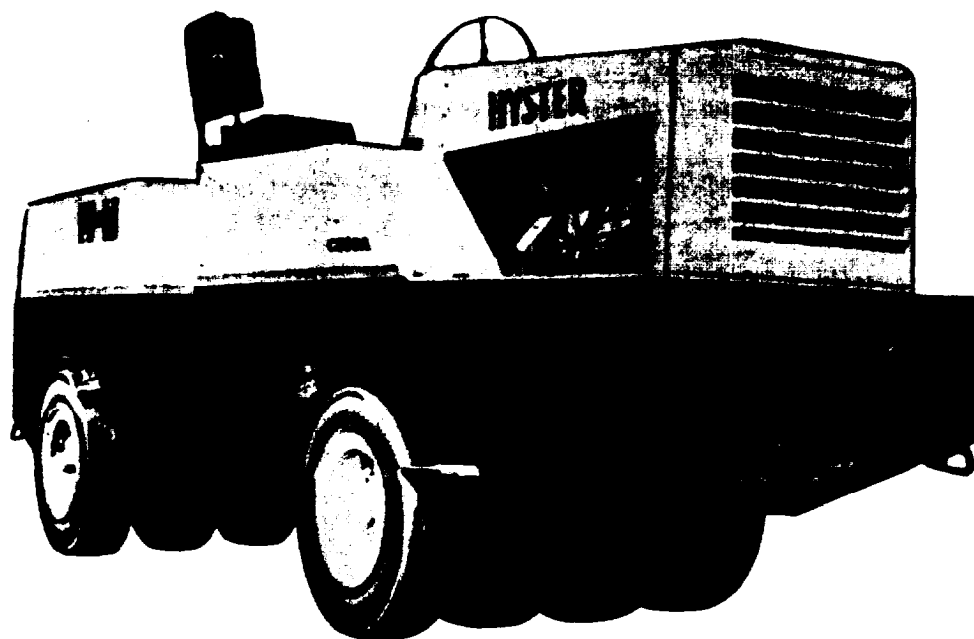

TM 5-3895-347-14&P

TECHNICAL MANUAL }  
NO. 5-3895-347-14&P }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
Washington, DC, 7 January 1983

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT,  
GENERAL SUPPORT, AND DEPOT MAINTENANCE MANUAL  
(INCLUDING REPAIR PARTS INFORMATION AND SUPPLEMENTAL  
OPERATING, MAINTENANCE AND REPAIR PARTS INSTRUCTIONS)

ROLLER, PNEUMATIC TIRED  
VARIABLE PRESSURE, SELF-PROPELLED (CCE)  
HYSTER MODEL C530A  
NSN 3895-01-013-3630

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Tank-Automotive Command, ATTN: DRSTA-MB, Warren, MI 48090. A reply will be furnished direct to you.

	Page
Part I	OPERATOR AND SERVICE MANUAL
Section	1. Introduction ..... 1-1
	2. Specification ..... 2-1
	3. Operations ..... 3-1
	4. Hyster-Care Maintenance ..... 4-1
	5. Troubleshooting ..... 5-1
	6. Electrical ..... 6-1
	7. Transmission ..... 7-1
	8. Final Drive ..... 8-1
	9. Steering ..... 9-1
	10. Brakes and Rear Wheel Assembly ..... 10-1
	11. Water Spray System ..... 11-1
	12. Tire Inflation System ..... 12-1
Part II	SUPPLEMENTAL OPERATING, MAINTENANCE AND REPAIR PARTS INSTRUCTIONS
Section	I General ..... 1
	II Maintenance ..... 4
	III Repair Parts Supply ..... 7
Appendix	A. EQUIPMENT PUBLICATIONS ..... 9
	B. WARRANTY GUIDELINES ..... 10

C.	MAINTENANCE ALLOCATION CHART	12
D.	MODIFICATION PROCEDURE	25
E.	BASIC ISSUE ITEMS List	26
F.	PRESCRIBED LOAD LIST & AUTHORIZED STOCKAGE LIST	27
G.	ADDITIONAL REPAIR PARTS	28
H.	SAMPLE FORMAT, DA FORM 2765 REQUEST (PART NUMBER)	30
I.	SAMPLE FORMAT, MILSTRIP REQUEST (NSN)	31
J.	SAMPLE FORMAT, MILSTRIP REQUEST (NON-NSN)	32
K.	SAMPLE FORMAT, MILSTRIP REQUEST (NON-NSN MANUAL)	34
L.	MAINTENANCE & OPERATING SUPPLY LIST	36
M.	PREVENTIVE MAINTENANCE CHECKS & SERVICES	38
	OPERATOR/CREW PMCS	40
	ORGANIZATIONAL PMCS	43

Part III  
Section

PARTS MANUAL

A.	Introduction	A-1
B.	Cowling and Floor Plate	B-1
C.	Power Unit	C-1
D.	Fuel System	D-1
E.	Electrical Equipment	E-1
G.	Transmission and Power Train	G-1
H.	Brakes and Linkage	H-1
K.	Steering and Linkage	K-1
P.	Optional Equipment	P-1
Q.	Numerical Index	Q-1

Part IV  
Section

DIESEL ENGINE OPERATIONS MANUAL

1.	Table of Contents	3
2.	Description	4
3.	Engine System	13
4.	Engine Equipment	31
5.	Operating Instructions	47
6.	Lubrication and Preventive Maintenance	55
7.	Engine Tune-Up Procedures	75
8.	Trouble Shooting	113
9.	Storage	119
10.	Built-In Parts Book	123

Part V

DIESEL ENGINE SERVICE MANUAL

	Alphabetical Index	1
	General Information	4
Section	1. Engine (Less Major Assemblies)	1-1
	2. Fuel System and Governors	2-1
	3. Air Intake System	3-1
	4. Lubrication System	4-1
	5. Cooling System	5-1
	6. Exhaust System	6-1
	7. Electrical Equipment	7-1
	13. Operating Instructions	13-1
	14. Engine Tune-up	14-1
	15. Preventive Maintenance-Trouble Shooting Storage	15-1

	Page
Part VI	DIESEL ENGINE PARTS MANUAL
	General Information.....
	Alphabetical Index .....
	Group Nomenclature Index .....
Group	A. Engine (Less Major Assemblies).....
	B. Fuel System .....
	C. Air System. ....
	D. Lubricating System.....
	E. Cooling System .....
	F. Exhaust System.....
	G. Electrical System .....
	1
	4
	13
	A1
	B1
	C1
	E1
	F1
	G1

This technical manual is an authentication of the manufacturers commercial literature and does not conform with the format and content specified in AR 310-3, Military Publications. This technical manual does, however, contain available information that is essential to the operation and maintenance of the equipment.

# **OPERATING INSTRUCTIONS**

## **PNEUMATIC COMPACTER**

### **STARTING**

1. SET PARK BRAKE, PUT THROTTLE - DIRECTIONAL CONTROL LEVER IN NEUTRAL AND START ENGINE.
2. WARM ENGINE TO 140 F PRIOR TO OPERATING AT FULL LOAD.

### **OPERATING**

1. RELEASE PARK BRAKE.
2. STOP MACHINE, USING BRAKE PEDAL, PRIOR TO CHANGING DIRECTION.
3. STOP MACHINE PRIOR TO CHANGING MANUAL TRANSMISSION SPEED RANGE.
4. USE EMERGENCY ENGINE STOP, IDENTIFIED ON DASH IN RED, ONLY IF ENGINE OVERSPEEDS (DETROIT DIESEL ONLY).

### **STOPPING**

1. PUT THROTTLE CONTROL LEVER IN NEUTRAL.
2. PUT RANGE TRANSMISSION IN NEUTRAL IF ENGINE IS LEFT RUNNING.
3. SET PARK BRAKE.
4. TURN IGNITION SWITCH TO OFF POSITION.

## **FOR SAFETY**

1. OPERATORS MUST BE TRAINED AND QUALIFIED.
2. USE LOWER SPEED AND ADDED CAUTION WHEN OPERATING CLOSE TO FILL EDGE AND WHEN TRAVELING DOWNHILL.
3. OPERATE AT RIGHT ANGLES TO FILL EDGE IF IT APPEARS TOO LOOSE TO SUPPORT MACHINE.
4. TRAVEL UP AND DOWN THE GRADE WHEN OPERATING ON SLOPES.
5. REPORT DAMAGE AND FAULTY OPERATION IMMEDIATELY—DO NOT OPERATE MACHINE UNTIL CORRECTED.
6. FOLLOW THE OPERATING INSTRUCTIONS ABOVE AND IN THE OWNERS AND OPERATORS GUIDE, AVAILABLE FROM YOUR HYSTER DEALER.

# **PART I**

## **OPERATOR AND SERVICE MANUAL**



# TABLE OF CONTENTS

<b>SECTION 1. INTRODUCTION</b>	<b>PAGE</b>
GENERAL.. . . . .	1-1.
UNIT NAME PLATE . . . . .	1-1.
SERIAL NUMBER DATA . . . . .	1-1.
SYSTEM SPECIFICATIONS . . . . .	1-1.
OPERATING INSTRUCTIONS . . . . .	1-1.
HYSTER-CARE MAINTENANCE . . . . .	1-1.
TROUBLESHOOTING . . . . .	1-1.
SYSTEM DESCRIPTIONS AND REPAIRS. . . . .	1-2.
 <b>SECTION 2. SPECIFICATIONS</b>	
GENERAL . . . . .	2-1.
COMPACTOR DIMENSIONS AND WEIGHT SPECIFICATIONS. . . . .	2-2.
PERFORMANCE SPECIFICATIONS . . . . .	2-3.
ENGINE SPECIFICATIONS . . . . .	2-4.
FUEL SYSTEM SPECIFICATIONS. . . . .	2-5.
ELECTRICAL SYSTEM SPECIFICATIONS. . . . .	2-6.
TRANSMISSION AND TORQUE CONVERTER. . . . .	2-7.
FINAL DRIVE AND TRANSFER CASE . . . . .	2-8.
STEERING SYSTEM SPECIFICATIONS. . . . .	2 -15.
BRAKE ASSEMBLY SPECIFICATIONS . . . . .	2-15.
WATER SPRAY SYSTEM SPECIFICATIONS. . . . .	2-16.
TIRE INFLATION SYSTEM SPECIFICATIONS. . . . .	2-16.
TORQUE SPECIFICATIONS FOR STANDARD HARDWARE . . . . .	2-19.
 <b>SECTION 3. OPERATION</b>	
GENERAL . . . . .	3-1.
OPERATING CONTROLS AND INDICATORS . . . . .	3-1.
SAFETY PRECAUTIONS . . . . .	3-3.
STARTING THE UNIT . . . . .	3-4.
OPERATING THE UNIT . . . . .	3-5.
UNIT SHUTDOWN . . . . .	3-5.
DETROIT DIESEL EMERGENCY ENGINE STOP . . . . .	3-6.
RESETTING EMERGENCY ENGINE STOP . . . . .	3-6.
WATER SPRAY SYSTEM OPERATION. . . . .	3-6.
COCO MATS . . . . .	3-6.
TIRE INFLATION SYSTEM OPERATION . . . . .	3-6.
TOWING THE UNIT . . . . .	3-6.
SHIPPING THE UNIT. . . . .	3-7.
BALLAST INSTRUCTIONS. . . . .	3-7.
 <b>SECTION 4. HYSTER-CARE MAINTENANCE</b>	
GENERAL . . . . .	4-1.
HYSTER-CARE MAINTENANCE SCHEDULE . . . . .	4-1.
HYSTER-CARE MAINTENANCE PROCEDURES . . . . .	4-1.
MISCELLANEOUS LUBRICATION . . . . .	4-1.

**SECTION 4. MAINTENANCE (CONT.)**

**PAGE**

STORAGE .....	4-5.
WATER SPRAY SYSTEM .....	4-5.
FUEL SYSTEM .....	4-5.
ENGINE COOLING SYSTEM .....	4-5.
ENGINE CYLINDERS .....	4-5.
BATTERY .....	4-5.
ENGINE OIL .....	4-5.
ENGINE OIL FILTER .....	4-5.
DETROIT DIESEL ENGINE .....	4-5.
FUEL FILTER .....	4-6.
DETROIT DIESEL ENGINE .....	4-6.
AIR CLEANER AND FILTER .....	4-6.
ELECTRICAL SYSTEM .....	4-6.
CHECKING BATTERY ELECTROLYTE LEVEL .....	4-6.
DRIVE BELTS .....	4-6.
ELECTRICAL WIRING .....	4-9.
COOLING SYSTEM .....	4-9.
FORWARD-REVERSE TRANSMISSION .....	4-9.
TRANSMISSION OIL FILTER .....	4-10.
STEERING SYSTEM .....	4-10.
STEERING HYDRAULIC OIL .....	4-10.
STEERING HYDRAULIC FILTER .....	4-10.
STEERING HYDRAULIC TANK .....	4-11.
WATER SPRAY SYSTEM .....	4-11.
TIRE INFLATION SYSTEM .....	4-11.
AIR LEAKAGE TESTS .....	4-12.
REAR CENTER WHEEL SPRING ADJUSTMENT .....	4-12.

**SECTION 5. TROUBLESHOOTING**

GENERAL .....	5-1.
ENGINE .....	5-1.
FUEL SYSTEM .....	5-19.
ELECTRICAL SYSTEM .....	5-42.
TRANSMISSION AND TORQUE CONVERTER .....	5-47.
FINAL DRIVE AND TRANSFER CASE .....	5-49.
STEERING ASSEMBLY .....	5-51.
BRAKE ASSEMBLY .....	5-54.
WATER SPRAY SYSTEM .....	5-54.
TIRE INFLATION SYSTEM .....	5-55.

**SECTION 6. ELECTRICAL**

**PAGE**

GENERAL ..... 6-1.

ELECTRICAL SCHEMATIC -DETROIT DIESEL, ..... 6-7.

INSTRUMENT PANEL - DETROIT DIESEL ..... 6-8.

ELECTRICAL ROUTING - DETROIT DIESEL ..... 6-9.

**SECTION 7. TRANSMISSION AND TORQUE CONVERTER**

GENERAL ..... 7-1.

TORQUE CONVERTER ..... 7-1.

    GENERAL..... 7-1.

    REMOVAL OF TORQUE CONVERTER ..... 7-1.

    DISASSEMBLY OF TORQUE CONVERTER. .... 7-1.

    REASSEMBLY OF TORQUE CONVERTER. .... 7-2.

    INSTALLATION OF TORQUE CONVERTER. .... 7-3.

    CHECKING RUNOUT ..... 7-3.

FORWARD-REVERSE TRANSMISSION ..... 7-3.

    GENERAL ..... 7-3.

    REMOVAL OF TRANSMISSION ..... 7-5.

    DISASSEMBLY OF FORWARD-REVERSE TRANSMISSION ..... 7-5.

        CLUSTER GEAP REMOVAL ..... 7-6.

        IDLER GEAR REMOVAL ..... 7-6.

        FORWARD CLUTCH PACK DISASSEMBLY ..... 7-6.

        FORWARD CLUTCH CYLINDER DISASSEMBLY ..... 7-7.

        REVERSE CLUTCH CYLINDER DISASSEMBLY ..... 7-7.

    CLEANING AND INSPECTION. .... 7-8.

    REASSEMBLY OF FORWARD-REVERSE TRANSMISSION ..... 7-8.

        REASSEMBLY OF FORWARD AND REVERSE CLUTCH CYLINDERS. .... 7-8.

        REASSEMBLY OF REVERSE CLUTCH-SHAFT AND PACK ..... 7-9.

        REASSEMBLY OF FORWARD CLUTCH-SHAFT AND PACK ..... 7-10.

        INSTALLATION OF IDLER GEAR SHAFT ..... 7-11.

        CLUSTER GEAR AND SHAFT ..... 7-11.

        INSTALLATION OF CONVERTER CHARGING PUMP ..... 7-12.

        INSTALLATION OF CONTROL VALVE ..... 7-12.

    INSTALLATION OF FORWARD-REVERSE TRANSMISSION ..... 7-12.

    FORWARD-REVERSE CONTROL VALVE ..... 7-13.

        GENERAL ..... 7-13.

        DISASSEMBLY OF CONTROL VALVE ..... 7-13.

        INSPECTION AND CLEANING. .... 7-14.

        REASSEMBLYOF CONTROL VALVE ..... 7-14.

        INSTALLATION OF CONTROL VALVE ..... 7-14.

        CONTROL CABLE ADJUSTMENT ..... 7-14.

PERFORMANCE CHECKS ..... 7-14.

    HIGH IDLE ..... 7-14.

    CONVERTER STALL SPEED ..... 7-14.

    PRESSURE CHECKS ..... 7-15.

**SECTION 7. TRANSMISSION AND TORQUE CONVERTER (CONT.)**

**PAGE**

3-SPEED RANGE TRANSMISSION . . . . .	7-16.
GENERAL . . . . .	7-16.
REMOVAL OF 3-SPEED RANGE TRANSMISSION . . . . .	7-16.
DISASSEMBLY OF 3-SPEED RANGE TRANSMISSION . . . . .	7-16.
CLEANING AND INSPECTION . . . . .	7-18.
REASSEMBLY OF 3-SPEED RANGE TRANSMISSION . . . . .	7-19.
INSTALLATION OF 3-SPEED RANGE TRANSMISSION. . . . .	7-21.

**SECTION 8. FINAL DRIVE AND TRANSFER CASE**

GENERAL . . . . .	8-1.
TRANSFER CASE. . . . .	8-1.
GENERAL . . . . .	8-1.
REMOVAL OF TRANSFER CASE . . . . .	8-1.
DISASSEMBLY OF TRANSFER CASE . . . . .	8-1.
DISASSEMBLY OF GEAR ASSEMBLY . . . . .	8-3.
DISASSEMBLY OF PINION SHAFT . . . . .	8-3.
REASSEMBLY. . . . .	8-5.
REASSEMBLY OF TRANSFER BOX . . . . .	8-4.
SHIM THICKNESS. . . . .	8-4.
REASSEMBLY OF PINION SHAFT . . . . .	8-5.
REASSEMBLY OF PARKING BRAKE . . . . .	8-6.
REASSEMBLY OF OUTPUT SHAFT . . . . .	8-6.
ADJUSTMENT OF BACKLASH OF BEVEL GEAR SET . . . . .	8-6.
FINAL DRIVE . . . . .	8-7.
GENERAL . . . . .	8-7.
REMOVAL . . . . .	8-7.
DIFFERENTIAL REMOVAL . . . . .	8-7.
PINION REMOVAL . . . . .	8-8.
DISASSEMBLY . . . . .	8-8.
DISASSEMBLY OF PINION . . . . .	8-8.
DISASSEMBLY OF DIFFERENTIAL . . . . .	8-9.
CLEANING . . . . .	8-9.
INSPECTION . . . . .	8-10.
REASSEMBLY . . . . .	8- 10.
REASSEMBLY OF PINION SHAFT . . . . .	8-10.
PINION BEARING PRELOAD . . . . .	8-10.
REASSEMBLY OF DIFFERENTIAL. . . . .	8-11.
INSTALLATION . . . . .	8-12.
PINION INSTALLATION. . . . .	8-12.
INSTALLATION OF DIFFERENTIAL AND CARRIER . . . . .	8-13.
DIFFERENTIAL ADJUSTMENT. . . . .	8-13.
THRUST BLOCK ADJUSTMENT . . . . .	8- 14.
WHEEL HUB INSTALLATION . . . . .	8-14.
AXLE SHAFT INSTALLATION . . . . .	8-15.
RIM INSTALLATION . . . . .	8-15.
CHECKING GEAR TEETH CONTACT PATTERN. . . . .	8-15.

**SECTION 9. STEERING**

**PAGE**

GENERAL ..... 9-1.  
OPERATION. .... 9-1.  
    POWER OPERATION. .... 9-1.  
    MANUAL OPERATION. .... 9-2.

POWER STEERING CONTROL UNIT. .... 9-5.  
    GENERAL ..... 9-5.  
    REMOVAL OF STEERING CONTROL UNIT ..... 9-5.  
    DISASSEMBLY OF STEERING CONTROL UNIT ..... 9-6.  
    CLEANING AND INSPECTION ..... 9-9.  
    REASSEMBLY OF STEERING CONTROL UNIT. .... 9-9.  
    INSTALLATION ..... 9-13.  
STEERING CYLINDERS ..... 9-13.  
    GENERAL.. ..... 9-13.  
    REMOVAL.. ..... 9-13.  
    DISASSEMBLY. .... 9-14.  
    CLEANING AND INSPECTION ..... 9- 14.  
    REASSEMBLY ..... 9-14.  
    INSTALLATION ..... 9-14.  
STEERING HYDRAULIC TANK ..... 9-14.  
    GENERAL ..... 9-14.  
    REMOVAL ..... 9-15.  
    INSTALLATION ..... 9-15.  
CENTER POINT HITCH ..... 9-15.  
    GENERAL ..... 9-15.  
    REMOVAL ..... 9-16.  
    INSTALLATION ..... 9-17.

STEERING-DETROIT DIESEL ..... 9-18.  
    GENERAL ..... 9- 18.  
    OPERATION ..... 9-18.  
    STEERING PUMP ..... 9-18.  
        GENERAL ..... 9-18.  
        DISASSEMBLY ..... 9-19.  
        CLEANING AND INSPECTION ..... 9-19.  
        REASSEMBLY ..... 9-20.  
        INSTALLATION ..... 9-21.  
    FLOW DIVIDER ..... 9-21.  
        GENERAL ..... 9-21.  
        OPERATION ..... 9-21.  
        REMOVAL ..... 9-21.  
        DISASSEMBLY. .... 9-22.  
        INSPECTION ..... 9-22.  
        REASSEMBLY AND INSTALLATION ..... 9-22.  
        ADJUSTMENT ..... 9-22.

**SECTION 10. BRAKE AND REAR WHEEL ASSEMBLY**

**PAGE**

GENERAL ..... 10-1.  
SERVICE BRAKE SYSTEM. .... 10-1.  
    GENERAL ..... 10-1.  
    MASTER CYLINDER ..... 10-2.  
        GENERAL.. ..... 10-2.  
        REMOVAL.. ..... 10-2.  
        DISASSEMBLY ..... 10-2.  
        CLEANING AND INSPECTION ..... 10-2.  
        REASSEMBLY ..... 10-2.  
        INSTALLATION ..... 10-3.  
        ADJUSTMENT ..... 10-3.  
OUTSIDE REAR WHEELS ..... 10-3.  
    GENERAL ..... 10-3.  
    REMOVAL OF OUTSIDE REAR WHEEL ASSEMBLY ..... 10-3.  
    CLEANING AND INSPECTION ..... 10-4.  
    INSTALLATION.. ..... 10-4.  
WHEELBRAKES ..... 10-4.  
    REMOVAL OF WHEEL BRAKES ..... 10-4.  
    DISASSEMBLY OF WHEEL BRAKES. .... 10-5.  
    CLEANING AND INSPECTION ..... 10-5.  
    REASSEMBLY OF WHEEL BRAKES ..... 10-6.  
    REAR WHEEL HUB INSTALLATION ..... 10-6.  
    CENTERING BRAKE SHOE ASSEMBLY.. ..... 10-6.  
    REAR WHEEL INSTALLATION ..... 10-6.  
    WHEEL BEARING ADJUSTMENT. .... 10-6.  
    BLEEDING BRAKES WITH PRESSURE BLEEDER. .... 10-6.  
    WHEEL BRAKE CYLINDERS ..... 10-7.  
CENTER WHEEL.. ..... 10-7.  
    CENTER WHEEL REMOVAL ..... 10-7.  
    DISASSEMBLY ..... 10-7.  
    CLEANING AND INSPECTION ..... 10-8.  
    REASSEMBLY ..... 10-8.  
    CENTER WHEEL BEARING ADJUSTMENT. .... 10-8.  
    INSTALLATION ..... 10-9.  
    ADJUSTMENT ..... 10-9.  
PARKING BRAKE ..... 10-9.  
    GENERAL ..... 10-9.  
    REMOVAL AND DISASSEMBLY ..... 10-9.  
    CLEANING AND INSPECTION ..... 10-10.  
    REASSEMBLY ..... 10-10.  
    ADJUSTMENT.. ..... 10-11.

**SECTION 11. WATER SPRAY SYSTEM**

GENERAL ..... 11-1.  
PRESSURE SPRAY SYSTEM. .... 11-1.  
    DESCRIPTION ..... 11-1.  
    WATER SPRAY PUMP ..... 11-1.  
    STRAINERS ..... 11-1.  
        GENERAL ..... 11-1.  
        MAINTENANCE ..... 11-2.  
    PUMP AND MOTOR. .... 11-2.  
        GENERAL ..... 11-2.

**SECTION 11. WATER SPRAY SYSTEM (CONT.)**

REMOVAL .....	11-3.
DISASSEMBLY. ....	11-3.
REASSEMBLY. ....	11-3.
INSTALLATION .....	11-3.

**SECTION 12. TIRE INFLATION SYSTEM**

GENERAL .....	12-2
COMPRESSOR.. .....	12-2.
DESCRIPTION.. .....	12-2.
OPERATION .....	12-2.
GENERAL .....	12-2.
INTAKE AND COMPRESSION (LOADED) .....	12-2.
NON-COMPRESSION (UNLOADED). ....	12-2.
LUBRICATION .....	12-3.
REMOVAL.. .....	12-3.
PREPARATION FOR DISASSEMBLY. ....	12-3.
DISASSEMBLY .....	12-4.
DISASSEMBLY OF CYLINDER HEAD. ....	12-4.
DISASSEMBLY OF CONNECTING ROD ASSEMBLY .....	12-4.
DISASSEMBLY OF CRANKCASE .....	12-4.
DISASSEMBLY OF CYLINDER BLOCK .....	12-4.
CLEANING, INSPECTION AND REPAIR .....	12-6.
CLEANING .....	12-6.
INSPECTION .....	12-6.
REPAIR....., .....	12-7.
REASSEMBLY .....	12-8.
REASSEMBLY AND INSTALLATION OF CYLINDER BLOCK .....	12-8.
REASSEMBLY AND INSTALLATION OF PISTONS AND CONNECTING RODS .....	12-8.
REASSEMBLY AND INSTALLATION OF UNLOADER MECHANISM .....	12-8.
REASSEMBLY AND INSTALLATION OF CYLINDER HEAD ASSEMBLY .....	12-9.
INSTALLATION .....	12-9.
GOVERNOR .....	12-9.
DESCRIPTION .....	12-9.
OPERATION.. .....	12-9.
CHECKS AND ADJUSTMENTS. ....	12-10.
CHECKING PRESSURE .....	12-10.
ADJUSTING PRESSURE. ....	12-10.
LEAKAGE TEST .....	12-10.
REMOVAL .....	12-10.
DISASSEMBLY .....	12-10.
REASSEMBLY AND INSTALLATION .....	12-10.
PRESSURE REGULATOR VALVE .....	12-11.
OPERATION .....	12-11.
MAINTENANCE .....	12-11.
AIR PRESSURE GAUGES. ....	12-11.
QUICK RELEASE VALVE .....	12-12.
PRESSURE HOLDING VALVE .....	12-12.
AIR TANK SAFETY VALVE .....	12-12.
TIRE SAFETY VALVE .....	12-12.

# OPERATOR AND SERVICE MANUAL

## SECTION 1 INTRODUCTION

### 1-1. GENERAL.

1-2. This publication contains operation and maintenance instructions for the C530A Pneumatic compactor (see figure 1-1). The operating instructions must be carefully reviewed and understood before attempting to operate the unit. The individual assigned to operate the unit should be responsible for maintaining the unit in good condition to ensure prolonged efficiency.

### 1-3. UNIT NAMEPLATE (see figure 1-2).

1-4. The unit nameplate is located immediately below the instrument panel. The nameplate must remain attached, legible and complete at all times.

### 1-5. SERIAL NUMBER DATA (see figure 1-2).

**NOTE:** The COMPLETE serial number must be identified when ordering parts or communicating service information to Hyster Company.

1-6. The unit serial number is located on the unit nameplate. It is also stamped in the unit

frame directly below the nameplate. The serial number indicates the design series, manufacturing plant, serial number and year manufactured. Example: A91C1501 V.

### 1-7. SYSTEM SPECIFICATIONS.

1-8. Unit specifications for the individual systems are listed in Section 2.

### 1-9. OPERATING INSTRUCTIONS (see figure 1-2).

1-10. instructions necessary for safe and efficient operation are given in Section 3.

### 1-11. HYSTER-CARE MAINTENANCE.

1-12. Hyster-Care maintenance procedures, such as servicing intervals, are presented in Section 4. Always follow the maintenance schedule and recommended procedures to ensure prolonged efficiency and service life.

### 1-13. TROUBLESHOOTING.

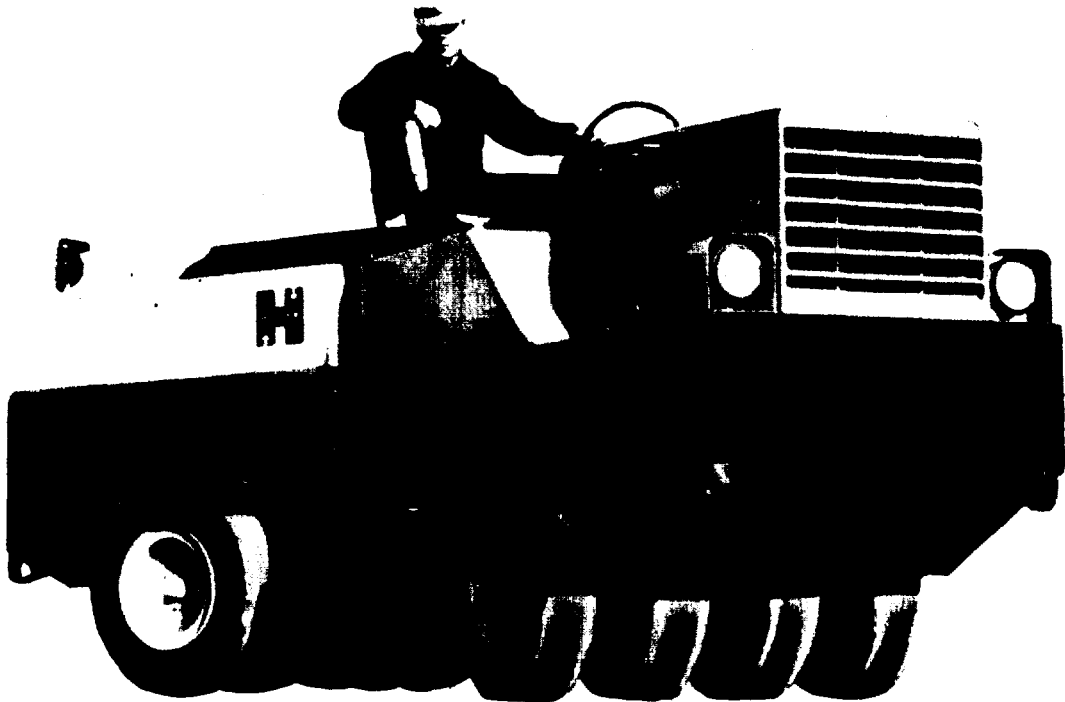


FIGURE 1-1.



SECTION 1  
INTRODUCTION

1-14. Refer to Section 5 for complete troubleshooting analysis tables of each major system.

1-15. SYSTEM DESCRIPTIONS AND REPAIRS

1-16. Refer to the C530A Service Manual for complete function descriptions and repair procedures for each major system.

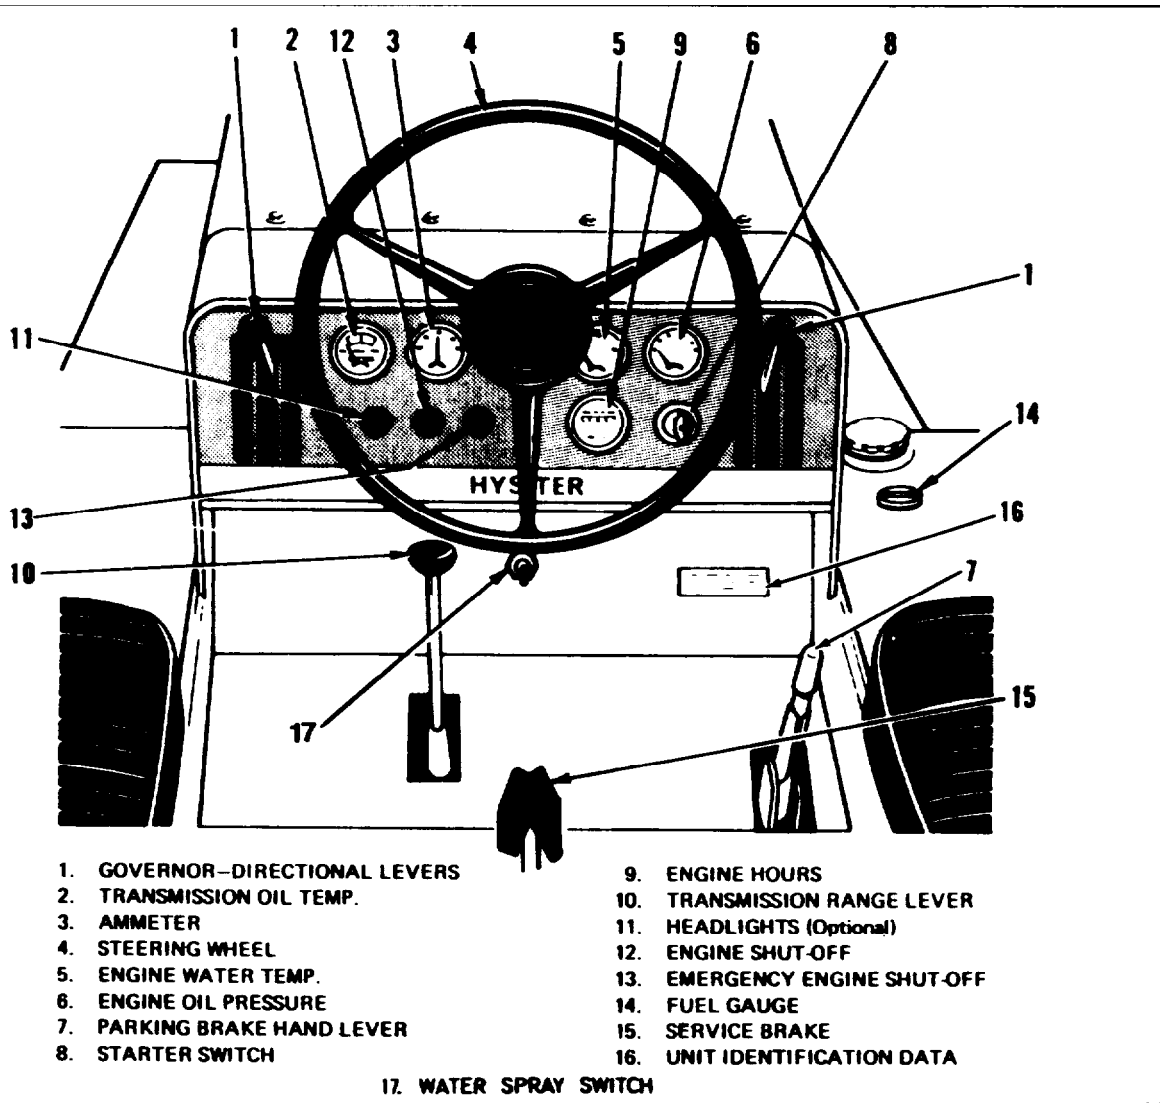


FIGURE 1-2 OPERATIONS CONTROLS AND INDICATORS.

**2-1. GENERAL.**

2-2. This section contains specifications tables for each major system of the compactor. Additional

specification tables are included for unit dimensions, weight, performance and torques. The following is a list of specification tables included in this section.

TABLE	TITLE
2-1.	Compactor Dimensions and Weight Specifications
2-2.	Performance Specifications
2-3.	Engine Specifications
2-4.	Fuel System Specifications
2-5.	Electrical System Specifications
2-6.	Transmission and Torque Converter Specifications
2-7.	Final Drive and Transfer Case Specifications
2-8.	Steering System Specifications
2-9.	Brake Assembly Specifications
2-10.	Water Spray System Specifications
2-11.	Tire Inflation System Specifications
2-12.	Torque Specifications for Standard Hardware

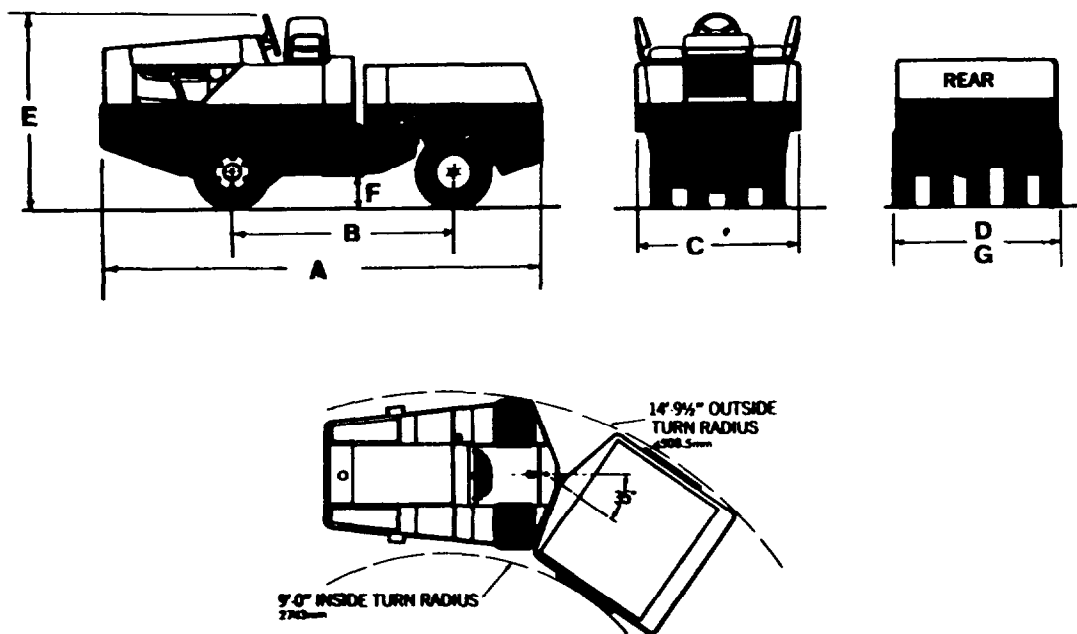


FIGURE 2-1. COMPACTOR DIMENSIONS.

**SECTION 2  
SPECIFICATIONS**

**TABLE 2-1. COMPACTOR DIMENSIONS AND WEIGHT SPECIFICATIONS (See figure 2-1).**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
A. LENGTH	175 In.	4 445 mm
B. WHEELBASE	88 In.	2 235 mm
C. WIDTH (Front Unit)	64 In.	1626 mm
D. WIDTH (Rear Unit)	68 in.	1727 mm
E. HEIGHT	78 In.	1 975 mm
F. GROUND CLEARANCE	13 In.	330 mm
G. COMPACTION WIDTH	68 In.	1 727 mm
COMPACTOR WEIGHT		
Without Ballast	8,000 Lbs.	3 630 kg
With Ballast	25,000 Lbs.	11 340 kg
<b>COMPONENT WEIGHTS</b>		
<b>REAR UNIT</b>		
Rear frame before assembly	1,820 Lbs.	826 kg
Brake drum, backing plate and hub	22 Lbs.	10 kg
Center wheel spring	17 Lbs.	8 kg
Center wheel support bracket	58 Lbs.	26 kg
Axle:	87 Lbs.	39 kg
Axle pin	13 Lbs.	6 kg
Rim assembly	31 Lbs.	14 kg
Hitch:	225 Lbs.	116 kg
Horizontal pins	17 Lbs.	8 kg
Vertical pins	14 Lbs.	6 kg
<b>FRONT UNIT</b>		
Front frame before assembly	1,900 Lb.	862 kg
Drive wheel hubs	168 Lbs. ea.	76 kg
Differential (ring and pinion)	125 Lbs.	57 kg
Differential carrier	33 Lbs.	15 kg
Axles	40 Lbs. ea.	18 kg
Steering cylinders	40 Lbs. ea.	18 kg
Engine:		
(Diesel)	800 Lbs.	363 kg
Transmission and dropbox combined	120 Lbs.	54 kg
Transfer adaptor	30 Lbs.	14 kg
Instrument panel with instruments	13 Lbs.	6 kg

TABLE 2-2. PERFORMANCE SPECIFICATIONS.

ITEM	DESIGN DATA	
	ENGLISH	METRIC
MAXIMUM TRAVEL SPEED (Forward or Reverse)	17 mph	27.3 kph
INSIDE TURNING RADIUS	9 ft.	2 743 mm
OUTSIDE TURNING RADIUS	14 ft. 9.5 in.	4 508 mm

**SECTION 2  
SPECIFICATIONS**

**TABLE 2-3B. ENGINE SPECIFICATIONS - DETROIT DIESEL.**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
<b>GENERAL SPECIFICATIONS</b>		
Engine Model	2-53	
Type	3 Cylinder	
Cycle	2 Stroke	
Bore	3.875 in.	98.425 mm
Stroke	4.5 in.	114.3 mm
Total Displacement	159.3 cu. in.	2 610.5 cc
Horsepower	82 @- 2200 RPM	
Compression Ratio	17 to 1	
Firing Order	1-3-2	
Number of Main Bearings	4	
Idle Speed	500-600 RPM	
High Idle Speed		
No Load	2200 RPM	
Full Load	2025 RPM	
Governor	Variable Speed Mechanical	
Cooling System		
Type	Liquid Pressure	
Capacity	14 Qts.	13.2 Ltrs.
Thermostat	Opens at 160-185°F	
Pressure Cap Rating	7 PSI-	0.49 kg/cm <sup>2</sup>
Lubrication System		
Oil Pressure		
1200 RPM	18 PSI	1.27 kg/cm <sup>2</sup>
2200 RPM	30 PSI	2.11 kg/cm <sup>2</sup>
Oil Pump	Gear Type	
Oil Filter	9 in. Full-Flow Replaceable Element	229 mm Full-Flow Replaceable Element
Oil Capacity (with filter)	12 Qts.	11.36 Ltrs.
Valve Clearance		
Cold	0.025 in.	0.635 mm
Hot	0.023 in.	0.584 mm

TABLE 2-4B. FUEL SYSTEM SPECIFICATIONS - DETROIT DIESEL.

ITEM	DESIGN DATA	
	ENGLISH	METRIC
Fuel Type	Diesel No. 2D (Dark) ASTM-975	
Fuel Tank Capacity	30 Gal.	113.6 ltrs.
Fuel Strainer	Suction Line, Replaceable Element	
Fuel Filter	Pressure Line, Replaceable Element	
Fuel Pump		
Type	Positive-Displacement Gear Type	
Relief Valve Setting	Opens at 65-70 PSI	4.57-4.92 kg/cm <sup>2</sup>
Fuel Injectors		
Quantity	3	
Type Spray Tip	Crown Valve	
Number of Holes	8	
Diameter	0.0005 in.	0.0127 mm
Hole Angle	165°	

**SECTION 2  
SPECIFICATIONS**

**TABLE 2-5. ELECTRICAL SPECIFICATIONS.**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
REGULATOR		
Field Relay		
Air Gap	.015 in.	0.381 mm
Point Opening	.030 in.	0.762 mm
Closing Voltage	3.8-7.2	
Voltage Regulator		
Point Opening	.014 in.	0.356 mm
Voltage Setting	13.9-15.0	

**TABLE 2-5. ELECTRICAL SPECIFICATIONS (CONT.)**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
STARTER		
Rotation Viewing Drive End	Clockwise	
Min. Brush Tension	35 oz.	994.5 cu. cm.
No Load Test		
Volts	20	
Min. Amps.	65 <sup>***</sup>	
Max. Amps.	100 <sup>***</sup>	
Min. RPM	3600	
Max. RPM	5100	
Resistance Test		
Volts	3.5	
Min. Amps.	300	
Max. Amps.	360	
Pinion Clearance	.010-.140 in.	0.254-3.556 mm

\*\*\*Includes Solenoid

**TABLE 2-6. TRANSMISSION AND TORQUE CONVERTER SPECIFICATIONS.**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
TORQUE CONVERTER AND CLUTCH PACKS		
Engine RPM at converter stall	1850 ± 100 RPM	
Torque converter diameter	11 3/4 in.	298.5 mm
Torque multiplication	2.54	
Clutch Pressure	160-170 PSI	11.25-11.95 kg/cm <sup>2</sup>
Converter charging pressure	75-80 PSI	5.27-5.62 kg/cm <sup>2</sup>
Converter relief pressure	10-25 PSI	0.70-0.76 kg/cm <sup>2</sup>
Number of separator plates (forward and reverse)	6	
Number of friction plates (forward and reverse)	6	
Gear Ratio		
Forward-Reverse	1:1	
Three Speed		
1st Gear	3.74: 1	
2nd Gear	1.9: 1	
3rd Gear	1:1	



**SECTION 2  
SPECIFICATIONS**

**TABLE 2-6. TRANSMISSION AND TORQUE CONVERTER SPECIFICATIONS (CONT.)**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
<b>TORQUE VALUES</b>		
	Ft.-Lbs.	kg-m
Control valve attaching bolts	19	2.63
Oil pump attaching bolts	14	1.93
5/16 in. (7.94 mm) dia. bolts	19	2.63
3/8 in. (9.53 mm) dia. bolts	25	3.46
7/16 in. (11.11 mm) dia. bolts	40	5.53
9/16 in. (14.29 mm) dia. bolts	90	12.44
Pressure regulator caps	25	3.46
<b>OIL</b>		
Capacity	13 Qts.	12.3 Ltr
Type	Dexron is preferred, but Type A may be used. However, DO NOT mix Dexron and Type A.	

**TABLE 2-7. FINAL DRIVE AND TRANSFER CASE SPECIFICATIONS.**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
<b>GEAR RATIO</b>		
Transfer Case	1.73:1	
Different	7.8: 1	
<b>LUBRICANT</b>		
Transfer Case		
Type	SAE 90 EP	
Capacity	5 Qts.	4.73 Ltr.
Final Drive		
Type	SAE 90	
Capacity	20 Qts.	18.93 Ltr.
<b>TORQUES</b>		
NOTE: Unless specified, all values are given with threads lubricated.	Ft.-Lbs.	kg-m
Final Drive		
Wheel Nuts	150-175	20.73-24.19
Axle Flange Nut	30	4.15
Speed Reducer Mounting Nut	140-155	19.35-21.42

TABLE 2-7. FINAL DRIVE AND TRANSFER CASE SPECIFICATIONS (CONT.).

ITEM	DESIGN DATA	
	ENGLISH	METRIC
	Ft.-Lbs.	kg - m.
Differential		
Pinion Shaft Capscrews	55	7.60
Carrier Mounting Nut	85	11.75
Bearing Cop Bolts	510-570	70.48-78.77
Spindle Mounting Capscrews	170	23.49
Transfer Case		
Mounting Capscrews	88	12.16
All ½ in. (12.7 mm) Capscrews	80	11.06
All 3/8 in. (9.53 mm) Capscrews	30	4.15

**DELETED PAGES 2-10 THRU 2-14.**

**TABLE 2-8C. STEERING SPECIFICATIONS - DETROIT DIESEL.**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
PUMP OUTPUT	18.6 GPM @ 2400 Engine RPM	70.4 LPM @ 2400 Engine RPM
PUMP ROTATION (viewed from drive side)	Counterclockwise	
PUMP DIMENSIONS		
Gear Diameter	2.1965-2.1970 in.	55.7911-55.8038 mm
Gear Width	1.1545-1.550 in.	29.3243-39.3700 mm
Gear Lash	.006-.010 in	0.1524-o. 2540 mm
Gear to Body	.00175 in.	0.04445 mm
Body Bore	2.199-2.200 in.	55.8546-55.8800 mm
Bearing Diameter	2.1970-2.1975 in.	55.8038-56.8165 mm
Bearing Bore	.995-1.000 in.	25.2730-25.4000 mm
Bearing Width	1.9990-1.9993 in.	50.7746-50.7822 mm
Bearing to Shaft	Total .0025 in.	Total 0.0635 mm
Between Flats	.0002-.0005 in.	0.00508-0.01270 mm

**TABLE 2-9. BRAKE ASSEMBLY SPECIFICATIONS.**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
MASTER CYLINDER DIAMETER	1 1/8 in.	28.58 mm
PARKING BRAKE SIZE	7 1/4 x 1 1/2 in.	184.2 x 38.1 mm
SERVICE BRAKE SIZE	12 X 2 in.	304.8 x 50.8 mm
TORQUEVALUES		
NOTE: All values are given in ft.-lbs. with threads lubricated, unless otherwise specified.	Ft.-Lbs.	kg-m
Backing Plate Copscrews	30	4.15
Brake hub to brake drum capscrews	30	4.15
Broke shaft nut	100	13.82
Rear center wheel mounting pin capscrews	30	4.15
Rear wheel assemblies (right and left) mounting pin capscrews	80	11.06

**SECTION  
SPECIFICATIONS**

**TABLE 2-10. WATER SPRAY SYSTEM SPECIFICATIONS.**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
TANK CAPACITY	75 gallons	283.9 ltr.
PUMP TYPE	Centrifugal	
OPERATING PRESSURE	Approx. 10 PSI (non-adjustable)	Approx. 0.7 kg/cm <sup>2</sup> (non-adjustable)
NOZZLE FLOW	Approx. 1 pint/minute	Approx. 0.5 ltr/minute
NUMBER OF NOZZLES	9	

**TABLE 2-11. TIRE INFLATION SYSTEM SPECIFICATIONS.**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
COMPRESSOR CUT-OUT PRESSURE	160-170 PSI	11.25-11.95 kg/cm <sup>2</sup>
PRESSURE REGULATOR RANGE	35-140 PSI	2.46-9.84 kg/cm <sup>2</sup>
AIR TANK RELIEF PRESSURE	185 PSI	13.01 kg/cm <sup>2</sup>
TIME REQUIREMENTS		
To inflate tires from 35 to 85 PSI (2.46 to 5.98 kg/cm <sup>2</sup> )	2.3 minutes	
To deflate tires from 80 to 40 PSI (5.62-2.81 kg/cm <sup>2</sup> )	4.8 seconds	
TIRE SAFETY RELIEF PRES-		
4 ply tires	45 PSI	3.16 kg/cm <sup>2</sup>
6 ply tires	70 PSI	4.92 kg/cm <sup>2</sup>
10 ply tires	100 PSI	7.03 kg/cm <sup>2</sup>
12 ply tires	120 PSI	8.44 kg/cm <sup>2</sup>
14 ply tires	140 PSI	9.84 kg/cm <sup>2</sup>
COMPRESSOR		
Capacity at 1250 RPM	7 1/4 cu. ft.	0.205 m <sup>3</sup>
Lubrication	Engine lubricated	
Bore and Stroke	2 3/8 x 1 5/8 in.	60.3 x 41.3 mm
Connecting Rod Bearing Clearance	.002 in.	0.0508 mm
MINIMUM OIL PRESSURE REQUIRED AT MAXIMUM ENGINE GOVERNED SPEED	15 PSI	1.05 kg/cm <sup>2</sup>

**TABLE 2-11. TIRE INFLATION SYSTEM SPECIFICATIONS (CONT.)**

ITEM	DESIGN DATA	
	ENGLISH	METRIC
COMPRESSOR (CONT.)		
Connecting Rod to Crankshaft Side Clearance	.003-.006 in.	0.0762-0.1524 mm
No. of Rings Each Piston	3	
Piston Rings Ring Gap		
Compression Ring	.005-.010 in.	0.1270-0.2540 mm
Oil Ring	.006-.015 in.	0.1524-0.3810 mm
Grove Clearance		
1st Compression Ring	.0015-.0035 in.	0.0381-0.0889 mm
2nd Compression Ring	.001-0.003 in.	0.0254-0.0762 mm
Oil Ring	.001-0.0035 in.	0.0254-0.0889 mm
PISTON PIN CLEARANCE	-0002 in. loose - .0005 in. tight	0.00508 mm loose - 0.01270 mm tight
CYLINDER HEAD NUTS TORQUE	190-100 in.-lbs.	2.19-2.30 kg-m
CONNECTING ROD CAP BOLTS	96-100 in.-lbs.	1.11-1.15 kg-m
UNLOADER VALVE CAPSCREWS	15 - 20 in.-lbs.	0.17-0.23 kg-m
NUMBER CYLINDERS	2	
BORE SIZE	2 1/16 in.	52.39 mm
STROKE	1 1/2 in.	38.10 mm
PISTON DISPLACEMENT AT 1250 RPM	7 1/4 cu. ft.	0.205 m <sup>3</sup>
PISTON DISPLACEMENT PER REVOLUTION AT 1250 RPM	10 in. <sup>3</sup>	163.87 cm <sup>3</sup>
MAXIMUM RECOMMENDED SPEED	3000 RPM	
MINIMUM COOLING WATER FLOW FOR WATER-COOLED COMPRESSORS AT MAXIMUM SPEED	2.5 gal./min.	9.46 ltr./min.
HORSEPOWER REQUIRED AT 1250 RPM AGAINST 100 PSI (7.03 kg/cm <sup>2</sup> )	1.2	
MINIMUM OIL PRESSURE RE- QUIRED At ENGINE IDLING SPEED	5 PSI	0.35 kg/cm <sup>2</sup>

TABLE 2-11. TIRE INFLATION SYSTEM SPECIFICATIONS (CONT.).

TIRE INFLATION PRESSURE P.S.I. (kg/cm <sup>2</sup> )			35 (2.46)	50 (3.52)	70 (4.92)	90 (6.33)*	110 (7.73)**	
Wheel Loads	Ballast Combinations		Plys	Ground Contact Pressure - PSI (kg/cm <sup>2</sup> )				
250 lbs. (113 kg)	Front 0	Rear 3250 lbs. (1 474 kg) (wet sand)						
			12 ply	39 (2.74)	47 (3.30)	54 (3.80)	63 (4.43)	68 (4.78)
300 lbs. (136 kg)	4200 lbs. (1 905 kg) (wet sand only)	8500 lbs. (3 856 kg) (wet sand only)						
			12 ply	48 (3.37)	55 (3.87)	63 (4.43)	72 (5.06)	77 (5.41)
800 lbs. (3 63 kg)	6200 lbs. (2 812 kg) (wet sand and steel)	11,000 lbs. (4 990 kg) (wet sand and steel)						
			12 ply	52 (3.66)				81 (5.69)


**TABLE 2-12. TORQUE SPECIFICATIONS FOR STANDARD HARDWARE.**

<b>SAE GRADE 5 CARBON STEEL CAPSCREWS</b>											
<b>FOOT-POUNDS (U.S.)</b>						<b>KILOGRAM-METERS (EUROPEAN)</b>					
<b>SIZE</b>	<b>TORQUE</b>		<b>SIZE</b>	<b>TORQUE</b>		<b>SIZE</b>	<b>TORQUE</b>		<b>SIZE</b>	<b>TORQUE</b>	
	<b>UNC</b>	<b>UNF</b>		<b>UNC</b>	<b>UNF</b>		<b>UNC</b>	<b>UNF</b>		<b>UNC</b>	<b>UNF</b>
1/4	6	7	3/4	200	220	1/4	0.83	0.97	3/4	27.66	30.43
5/16	13	14	7/8	300	320	5/16	1.80	1.94	7/8	41.49	44.26
3/8	23	25	1	440	480	3/8	3.18	3.46	1	60.85	66.38
7/16	35	40	1-1/8	600	660	7/16	4.84	5.53	1-1/8	82.98	91.28
1/2	55	65	1-1/4	840	920	1/2	7.16	8.99	1-1/4	116.17	127.24
9/16	80	90	1.318	1100	1260	9/16	11.06	12.45	1-3/8	152.13	174.26
5/8	110	130	1-1/2	1460	1460	5/8	15.21	17.98	1-1/2	201.92	226.81

<b>SAE GRADE 8 CARBON STEEL CAPSCREWS AND PLACEBOLTS</b>											
1/4	9	10	3/4	280	320	1/4	1.24	1.38	3/4	38.13	44.26
5/16	18	20	7/8	460	500	5/16	2.49	2.77	7/8	63.62	69.15
3/8	35	35	1	680	740	3/8	4.84	4.84	1	94.04	102.34
7/16	55	60	1-1/8	960	1080	7/16	7.61	8.29	1-1/8	132.77	149.36
1/2	80	90	1-1/4	1360	1500	1/2	11.06	12.45	1-1/4	188.08	207.45
9/16	110	130	1-3/8	1780	2040	9/16	15.21	17.98	1-3/8	246.17	282.13
5/8	170	180	1-1/2	2360	2660	5/8	23.51	24.89	1-1/2	326.39	356.81

**NOTE** This table lists torque values for standard hardware and is intended as a guide for average applications involving typical stresses and machined surfaces. Values are based on the physical limitations of clean, plated and lubricated hardware. In all cases, when an individual torque value is specified, it should take priority over values given in this table. Replace original equipment with hardware of equal grade.

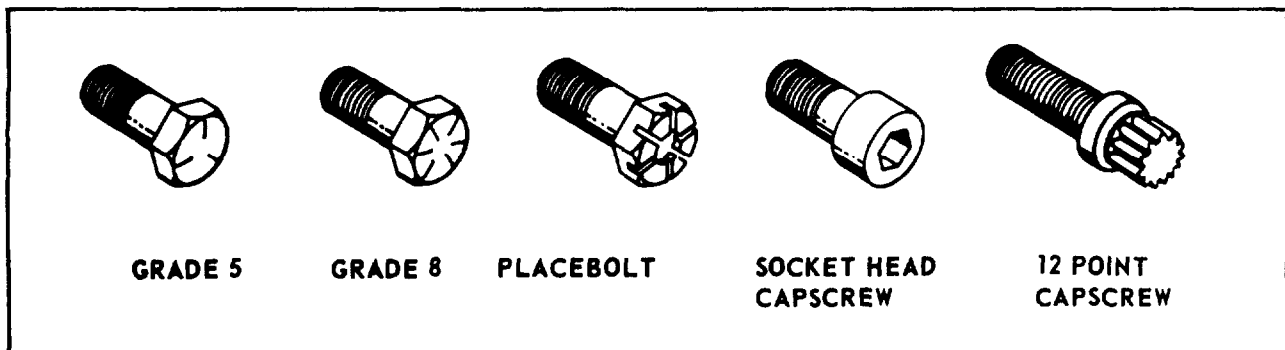

**FIGURE 2-2. TYPES OF HARDWARE.**



**SECTION 3  
OPERATION**

**3-1. GENERAL.**

3-2. This section contains instructions necessary for operation of the C530A Compactor. These instructions must be carefully reviewed before operating the unit. New operators must be thoroughly trained by a skilled operator before attempting to operate the unit unassisted.

3-3. The individual assigned to operate the compactor should always maintain it in good condition to ensure prolonged efficiency. Report damage or faulty operation immediately for correction. Even minor failures or damage may eventually result in major failures in an

individual system.

**NOTE:** Follow all operating instructions in the order given on the operating instruction decal illustrated on the inside front cover of this publication.

**3-4. OPERATING CONTROLS AND INDICATORS.**


3-5. The controls and indicators necessary for operation of the compactor are listed and described in Table 3-1 and illustrated in figure 3-2.

**TABLE 3-1. OPERATING CONTROLS AND INDICATORS.**

INDEX NO.	NOMENCLATURE	TYPE	FUNCTION
1	GOVERNOR DIRECTIONAL LEVER	Lever (with mechanical linkage)	Controls direction of travel and governor setting. Dual controls are provided for operation from either seat. Three vertical slots are Forward,*Neutral and Reverse. Moving knob up decreases engine speed and moving knob down accelerates engine.
2	TRANSMISSION OIL TEMPERATURE	Gauge	Indicates temperature of oil in transmission system. Shutdown unit if gauge pointer moves to RED zone.
3	AMMETER	Gauge	Indicates output current of alternator. Gauge may show slight discharge (RED) at engine idle, but should indicate charge (GREEN) when engine speed is increased.
4	STEERING WHEEL	Wheel (with mechanical linkage)	Control unit direction. Mounted at the center of the control panel for operation from either seat.
5	ENGINE WATER TEMPERATURE	Gauge	Indicates temperature of water circulating through engine.
6	ENGINE OIL PRESSURE	Gauge	Indicates pressure of oil pumped through engine. Gauge may indicate high pressure when engine is first started but should drop to normal level as engine warms. Stop engine immediately if no pressure is indicated.
7	PARKING BRAKE HAND LEVER	Level (with mechanical linkage)	To set park brake, pull lever up until it toggles over center. To release, pull back and down until lever stops.

3-1.

TABLE 3-1. OPERATING CONTROLS AND INDICATORS (CONT.).

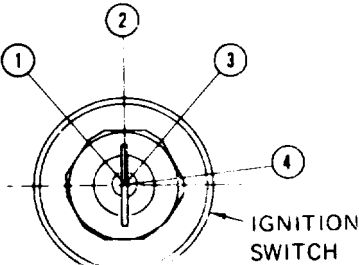INDEX NO	NOMENCLATURE	T Y P E	FUNCTION
8		Your-position, key-operated interlock switch	<p>No. 1 Position: Accessory position. Applies power to lights and spray switches (if so equipped).</p> <p>No. 2 Position: Off position. Removes all power to the electrical circuits.</p> <p>No. 3 Position: On position. Applies power to all electrical circuits with engine running. This position is also a lockout position. It prevents accidental engagement of the starter motor when engine is running. Ignition Key must be rotated back past this position to the No. 2 (OFF) position before starter motor can be energized again.</p> <p><b>NOTE:</b> Later production units are not equipped with this feature.</p> <p>No. 4 Position: Start position. Applies power to starter motor to crank engine. Switch spring returns to No. 3 position when key is released.</p>
 <p>FIGURE 3-1.</p>			
9	HOURMETER	M e t e r	Indicates total hours of engine operation.
10	TRANSMISSION RANGELEVER	Lever (with me linkage)	Controls transmission speed range. Moving lever from the front of the unit in a straight line towards rear of unit will shift transmission from first, neutral, second, neutral then third.

**SECTION 3  
OPERATION**

**TABLE 3-1. OPERATING CONTROLS AND INDICATORS (CONT.).**

INDEX NO.	NOMENCLATURE	TYPE	FUNCTION
11	LIGHT SWITCH (opt.)	Push-pull switch	Turns lights off and on.
12	ENGINE SHUT-OFF	Push-pull knob	Engine Shut-off: Pull to shutdown diesel engine.
13	EMERGENCY ENGINE SHUT-OFF	Contact switch button Push-pull handle	Emergency engine shutt-off: Shuts down engine if engine RPM cannot be controlled by ENGINE speed control lever. This control shuts off air to engine. Lever must be manually reset at the engine. (Refer to paragraph 3-15). Detroit Diesel only.
14	FUEL	Gauge	Indicates quantity of fuel remaining in fuel tank.
15	SERVICE BRAKE	Pedal	Stop unit for directional changes, changing gears and speed control.
16	UNIT NAMEPLATE	Plate	Provide necessary data for unit identification.
17	WATER SPRAY (opt.)	Toggle Switch	Engages water spray system.

**3-6. SAFETY PRECAUTIONS.**

3-7. Always observe the following safety precautions to prevent possible injury to personnel or damage to the equipment.

a. TRAINED, AUTHORIZED OPERATORS ONLY.

b. Always use slower speed and added caution when operating close to a slope or when traveling downhill. Operate at speeds safe for the unit, lift and weather conditions.

c. Use extreme caution when operating close

to a slope. Always operate the unit at right angles to a slope edge if it appears too loose to support the machine.

d. Never travel across a slope. Always travel up or down a grade.

e. Use extreme caution when operating close to personnel or other machines.

f. Always engage the park brake before dismounting; the unit.

g. Never shut down the engine when traveling downhill. Always move the direction

**3-3.**

control lever toward the "neutral" position before dismounting unit.

h. When it is necessary for operator training, the trainee must be properly seated before moving the compactor.

i. Report damage or faulty operation immediately. DO NOT operate the unit until corrected.

j. Make sure that the operating instruction decal (see illustration inside front cover) is attached to the unit and legible at all times.

k. Never attempt to clean, oil or adjust machine while it is in motion.

l. Readjust center rear wheel spring after changing rear ballast weight.


m. DO NOT grab the steering wheel when mounting unit with engine running.

n. KEEP CLEAR OF HITCH AREA when unit is operational. Hitch area closes when unit is turned.

**3-8. STARTING THE UNIT (see figures 3-1 and 3-2).**

a. Set the park brake and place the governor-direction control in the "neutral" position one (1) or two (2) inches (25.4-50.8 mm) below the low idle position.

b. Turn the IGNITION KEY to the number 4 start position (fully clockwise - see figure 3-1) and start the engine.

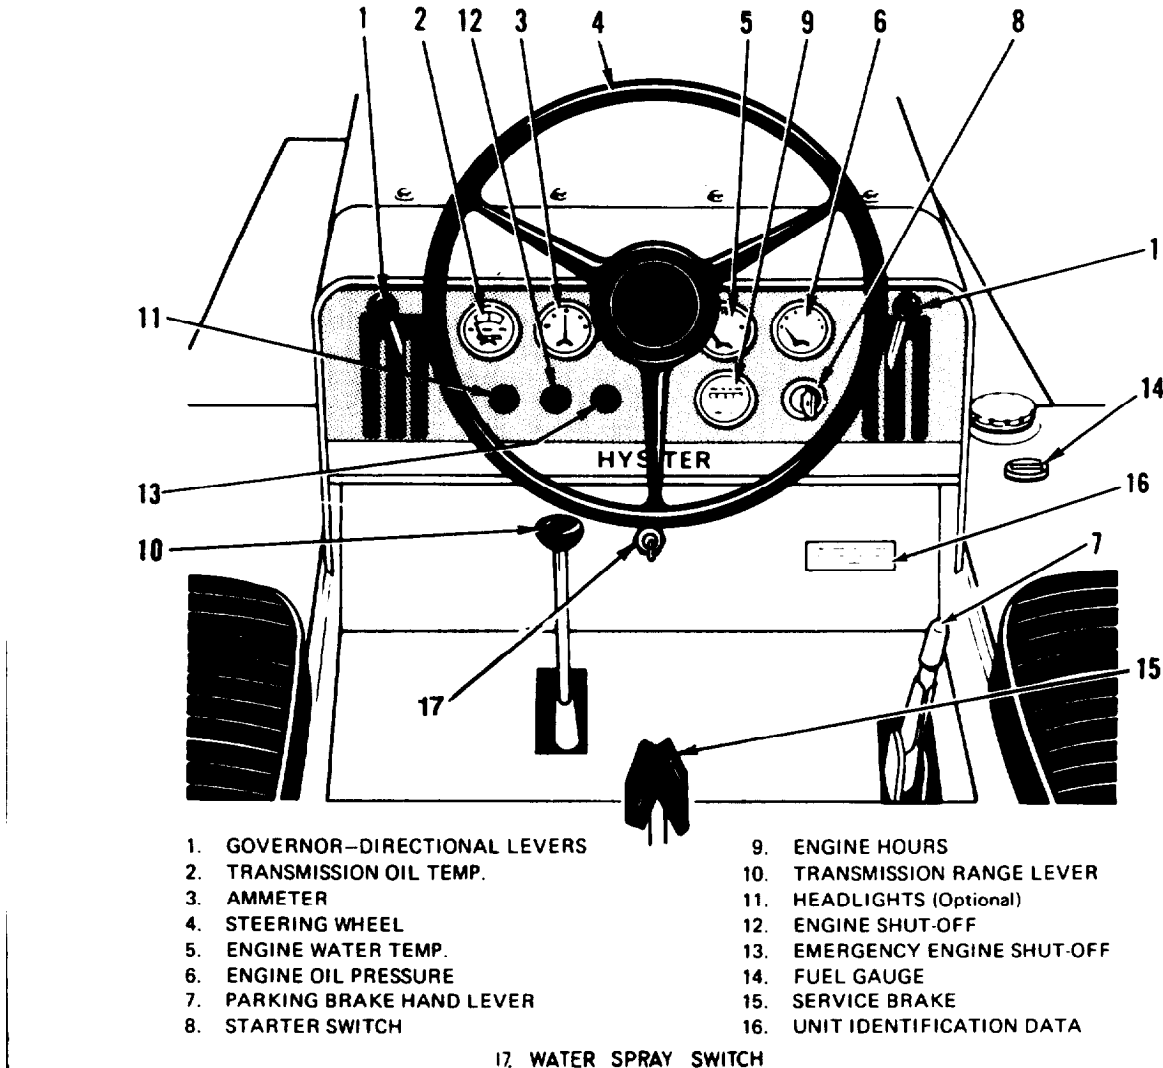

**FIGURE 3-2. OPERATING CONTROLS AND INDICATORS.**

## SECTION 3 OPERATION

**NOTE:** Unit will not start unless in neutral position due to the Neutral Start Safety Switch.

**CAUTION:** DO NOT crank the engine for more than THIRTY SECONDS at any one time. If the engine fails to start, set the IGNITION KEY to "off" and wait one (1) minute, allowing the starter motor to cool.

c. If the engine fails to start after the third attempt, check that the EMERGENCY STOP CONTROL (Detroit only) has been manually reset as described in paragraph 3-15. If it has been reset properly, refer to Section 5 for troubleshooting procedures.

**NOTE:** Before operating the unit, allow the engine to idle at 700 RPM for approximately two (2) minutes to allow engine and hydraulic oil to begin to reach operating temperatures.

**NOTE:** For information on cold weather starting for Detroit diesel engines, consult the engine manufacturers service manual.

### 3-9. OPERATING THE UNIT (sw figure 3-2).

a. With the engine running and the governor-direction control in the neutral low idle position, release the parking brake. Check the choke on the gasoline engine to ensure it is pushed in all the way.

b. Slowly move the governor-direction control knob in the direction of desired travel. The further the knob is moved down the faster the machine will travel. To brake, or slow the machine, move the governor-direction control knob up and apply brakes to obtain the desired travel speed.

3-5.

c. To change the travel direction, move the governor-direction control to the top of the directional slot and select the other directional slot.

**CAUTION:** Always stop the machine before reversing direction.

d. Range selection is made by moving the governor-direction control lever to neutral low idle position. Move the range selection lever in a straight line from the forward position toward the rear of the compactor.

e. The transmission has the following ranges, from front to rear: first gear, neutral, second gear, neutral and third gear.

**CAUTION:** Come to a complete stop before changing speed range.

**CAUTION:** Watch your engine speed downhill.

1. The engine provides efficient braking when run at or near top rpm in the operating range - but remember, the governor has no control over engine speed when it is being pushed by a loaded vehicle. When you allow engine speed to exceed the rated governed speed when descending a grade or down-shifting at the high end of the operating range, you are overspeeding the engine which can result in serious damage. On grades, employ vehicle brakes and gears in combination to keep vehicle speed under control and engine RPM below rated governed RPM.

### 3-10. UNIT SHUTDOWN (sw figure 3-2).

a. Bring the unit to a stop by slowly moving the governor-direction control knob to low idle and neutral. Set the parking brake and shut off the engine.

The diesel engine is shut off by putting the engine shut off knob out.

**NOTE:** If the engine fails to stop, pull out the EMERGENCY ENGINE STOP LEVER (Detroit only) located on the instrument panel. Reset the control by following the procedure specified in paragraph 3-15. Troubleshoot the system before operating the unit again.

b. Before leaving the unit, be sure the parking brake is set.

**3-11. DETROIT DIESEL EMERGENCY ENGINE STOP (see figures 3-2 and 3-3).**


**CAUTION:** The EMERGENCY STOP control should be used only in the event of serious engine malfunction.

3-11. A manually operated EMERGENCY ENGINE STOP CONTROL is mounted on the Instrument panel to shutdown the engine in the event of a serious engine malfunction. If the engine continues to run after the ENGINE SHUT-OFF has been set at "stop", or if the engine overspeeds, the shutdown device will stop the engine by cutting off the air supply.

3-13. The EMERGENCY ENGINE STOP consists of an air shut-off valve mounted in the engine air inlet housing. The shut-off valve is retained in the open position by a latch. A cable connected to the EMERGENCY ENGINE STOP CONTROL is used to remotely trip the latch, closing the shut-off valve.

**3-14. RESETTING EMERGENCY ENGINE STOP.**

3-15. The emergency engine stop must be manually reset before the engine can be restarted. To reset the emergency stop, push the cam-pin handle (located on the engine air Inlet housing) downward. This will open the shut-off valve. Then push the EMERGENCY STOP Control lever against the instrument panel.

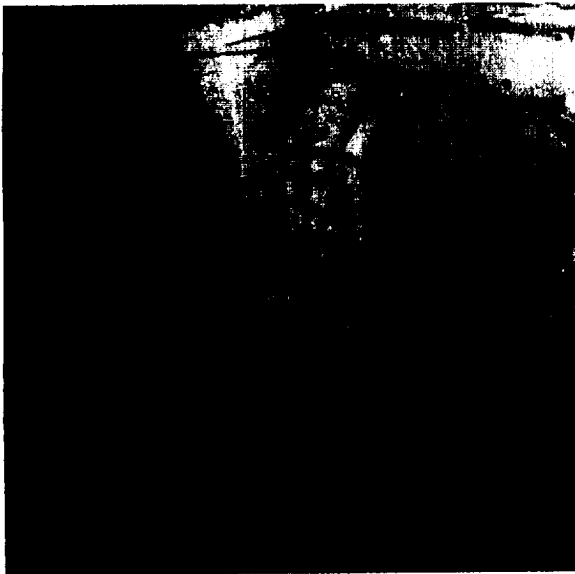

**FIGURE 3-3. EMERGENCY STOP/AIR INTAKE HOUSING.**

**3-16. WATER SPRAY SYSTEM OPERATION.**

3-17. To activate the water spray system, push the WATER SPRAY SWITCH to the "on" position. This will produce a pressurized water spray through nozzles onto the tires.

**3-16. COCO MATS (see figure 3-4).**

3-19. The coco mats can be positioned off the tires when operating conditions are such that they are not needed.

3-20. The coco mats will lift in sections. Lift up on each section and, using the hook provided, place the hook under the end of the coco mat. The coco mats will now remain off the tires.

**3-21. TIRE INFLATION SYSTEM OPERATION.**


3-22. The tire inflation system is installed only on units equipped with Detroit diesel engines. With this system the operator can vary tire pressure while the unit is in motion, thereby varying ground contact pressure. Refer to Section 12 for gauge setting, ballasting and ground contact pressure ratings.

3-23. Control of the pressure gauge is maintained by rotating the valve wheel. Valve wheel and gauge are mounted on the control panel for easy accessibility.

**3-24. TOWING THE UNIT.**

3-25. Before towing a unit that has malfunctioned ensure that the governor-direction control lever is in "neutral" and the park brake has been released.

**NOTE:** Tow the unit only when necessary and at speeds of one to two miles per hour (1.61-3.22 km/h) for as short a distance as possible.

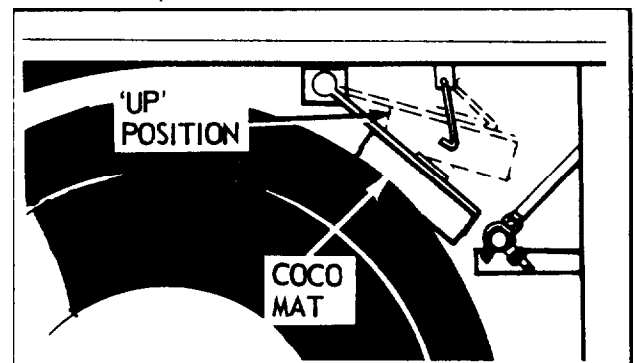

**FIGURE 3-4. COCO MATS.**

**SECTION 3 -  
OPERATION**


**3-26. SHIPPING THE UNIT.**

3-27. When shipping the compactor, at least four (4) tiedowns should be used, the park brake must be engaged and the tires must be blocked front and rear and on both sides. The

steering lock bar **MUST** be installed.

**3-38. BALLAST INSTRUCTIONS.**

3-29. For proper ballast instructions refer to figure 3-5.

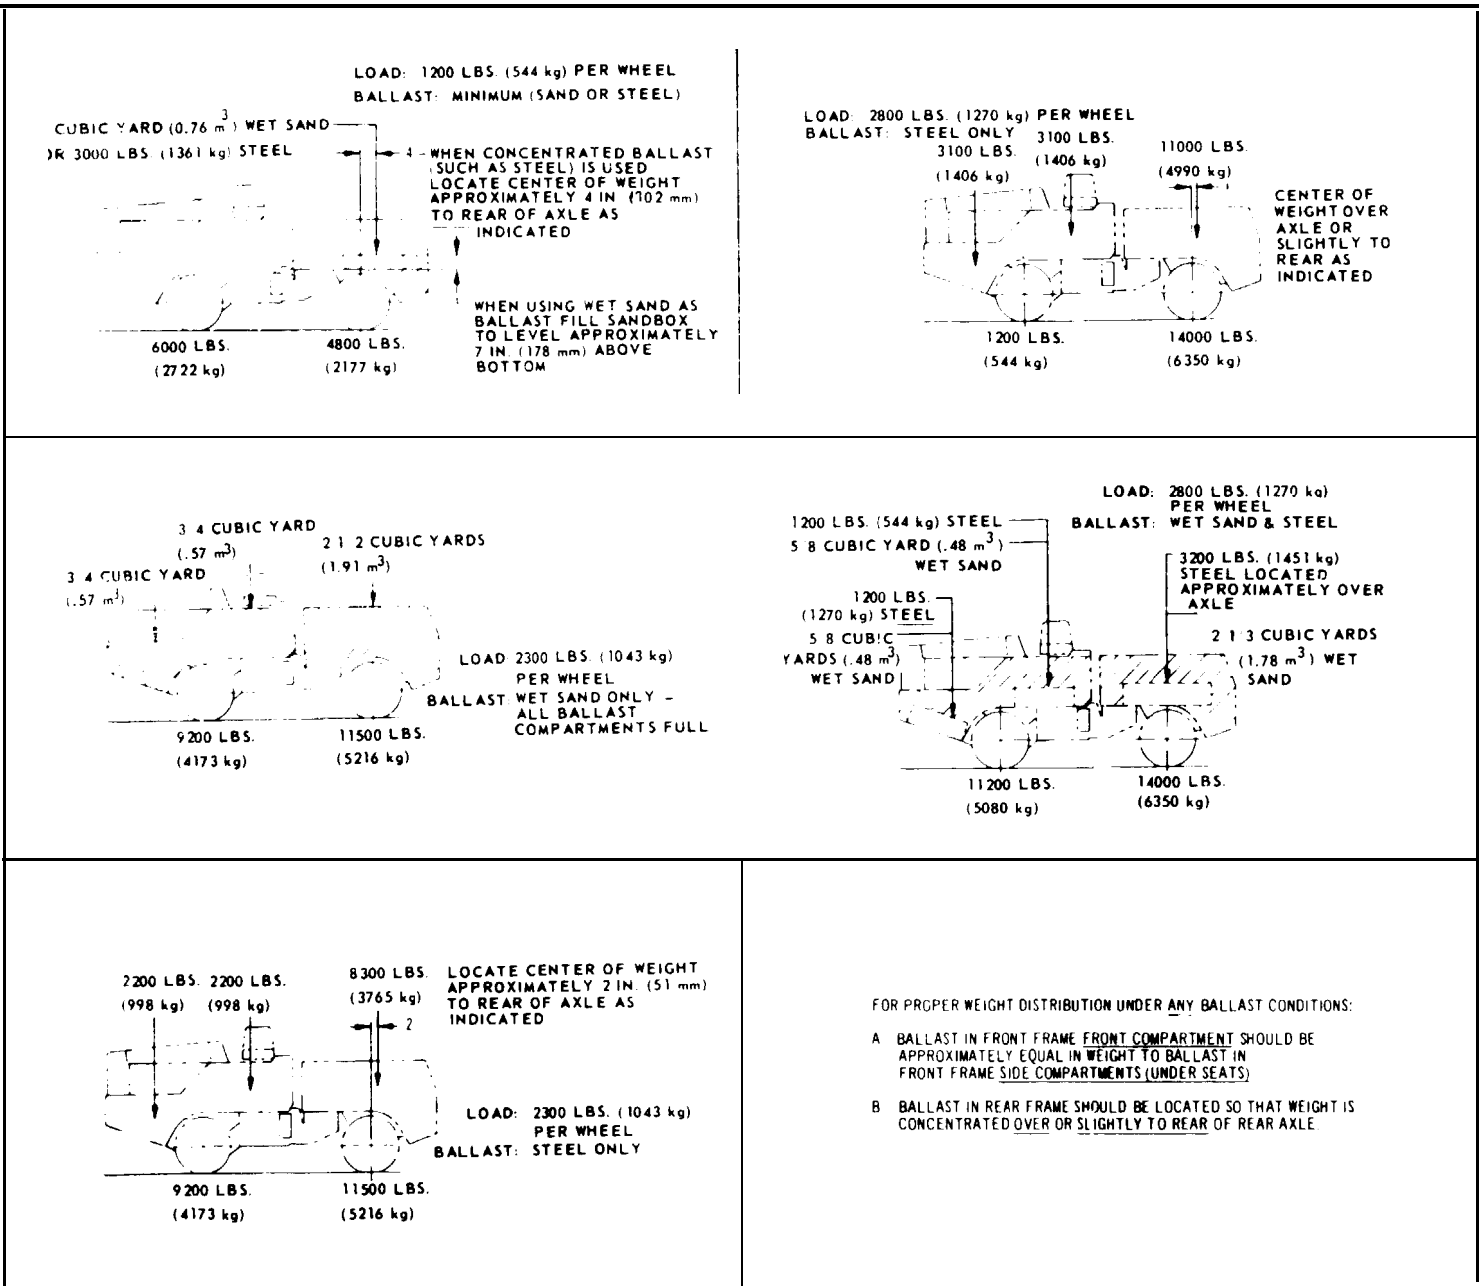

**FIGURE 3-5. BALLASTING INSTRUCTIONS.**

**4-1. GENERAL.**

4-2. This section contains instructions necessary for proper HYSTER-CARE Maintenance of the C530A Compactor. HYSTER-CARE Maintenance is divided into two (2) subsections: HYSTER-CARE Maintenance Schedule and HYSTER-CARE Maintenance Procedures. The HYSTER-CARE Maintenance Schedule lists the recommended time intervals between maintenance checks. The HYSTER-CARE Maintenance Procedures provide detailed instructions for performing the maintenance checks. The instructions listed in the procedures subsection are given by systems and are not necessarily in the order listed in Table 4-1.

**4-3. HYSTER-CARE MAINTENANCE SCHEDULE.**

4-4. HYSTER-CARE Maintenance is a planned maintenance program that includes periodic inspection and lubrication. HYSTER-CARE Maintenance should be correlated closely with the operating hours recorded on the hourmeter located on the instrument panel.

4-5. Table 4-1 lists the recommended maintenance checks. It is listed in two (2) schedules: the hourly schedule and the periodic schedule. If the unit is operated more than eight (8)

hours per day, the hourly schedule should be followed. If the unit is operated less than eight (8) hours per day, the periodic schedule should be followed.


4-6. The maintenance checks given in Table 4-1 are listed in systematic order within each time interval, starting with the eight (8) hour checks and are in the same order as the maintenance decal located on the left-hand side of the front unit. The last column of Table 4-1 should be used to locate the applicable maintenance procedure. Figure 4-1 shows the location of all maintenance points.

**4-7. HYSTER-CARE MAINTENANCE PROCEDURES.**

**4-8. MISCELLANEOUS LUBRICATION.**

4-9. Miscellaneous parts such as rod ends, small bushings and hinges should be lubricated with a few drops of SAE 30 engine oil. Always wipe the area to be lubricated clean before adding oil. Wipe away any excess lubrication.

**NOTE:** Excessive lubrication is wasteful and often as damaging as lack of lubrication. Analyze each lube point to determine the amount of lubrication necessary. Keep the machine clean and

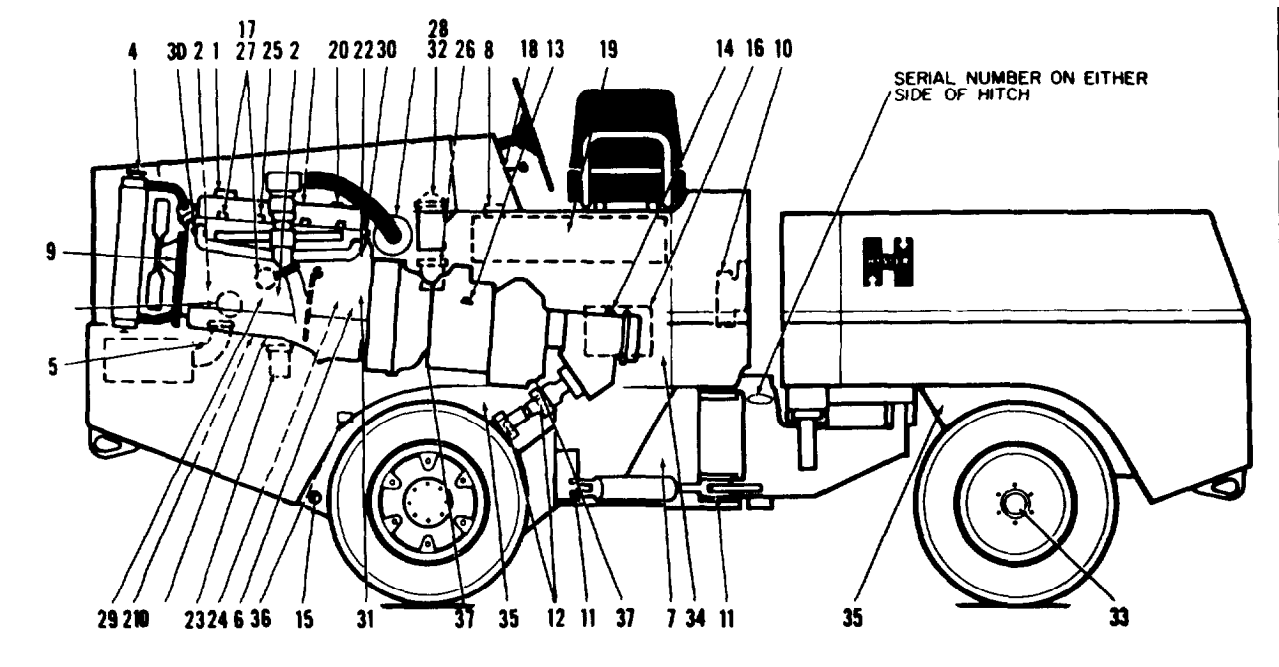

**FIGURE 4-1. MAINTENANCE CHART.**





TABLE 4-1. HYSTER-CARE MAINTENANCE SCHEDULE (CONT.).

FIGURE ITEM NO.	ITEM	SCHEDULE HOUR/PERIOD								QUAN.	TYPE	REFER TO PARA- GRAPH
		8/ day	50/ wk	100/ 2wks	200/ mo	300/ 6wks	500/ 3mo	1000/ 6mo	2000/ yr			
7	AIR TANK (Opt.) D)	X										
8	FUEL TANK	X								30 Gals. (113.6 ltr.)	fuel	No. 2 diesel
9	DRIVE BELTS		X									4-50
10	BRAKE MASTER CYLINDER		X							1 Pt. (.5 ltr.)	Hydraulic Brake SAE 70 R3 Fluid	
11	STEERING CYLINDER ANCHOR PINS		X								Multi-purpose Grease	
12	DRIVE SHAFT UNIVERSAL JOINTS		X								Multi-purpose Grease	
1 & 37	TRANSMISSION & CONVERTER		X					C20		13 Qts. (12.3 ltr.)	Dexron	4-56
14	TRANSFER CASE		X						C	5 Qts. (4.7 ltr.)	SAE 90 EP MIL-L-2105B	
15	FINAL DRIVE		X						C	20-22 Qts. (18.9-20.8 ltr.)	SAE 90 EP MIL-L-2105B	
16	BATTERY			X								4-47
19	PARKING BRAKE LEVER & CABLE			X						A. R.	Engine Oil	

TABLE 4-1. HYSTER-CARE MAINTENANCE SCHEDULE (CONT.).

FIGURE ITEM NO.	ITEM ITEM	SCHEDULE HOUR PERIOD								QUAN.	TYPE	REFER TO PARA- GRAPH	
		8 day	50 wk	100 2wks	200 mo	300 6wks	500 3mo	1000 6mo	2000 yr				
21	ENGINE OIL FILTER											SEE PARTS MANUAL	
21D	DETROIT DIESEL			C									4-33
22+	THROTTLE CONTROL MECHANISM (D)										A. R.	Multi-purpose Grease	
25+	INJECTORS D)						X						
28	TRANSMISSION FILTER								C20			SEE PARTS MANUAL	4-57
29+	BLOWER SCREEN (D)								X				
30+	CRANKCASE BREATHER (D)								X				
31+	ENGINE AIR BOX DRAIN (D)								X				
32	STEERING HYDRAULIC FILTER									C125		SEE PARTS MANUAL	4-62
33	WHEEL BEARINGS									C	A. R.		
34	WATER SPRAY STRAINER (Opt.)										A. R.		4-65
35	WATER SPRAY NOZZLE (Opt.)										A. R.		

Key to signs and symbols.

X Check only.  
C Change or

C20 - No. next to C indicates hours for first change.

A.R. - As Required.

Opt. - Optional.

D = Detroit Diesel engine.

+ = Refer to Engine Manufacturer's Maintenance Manual for complete instructions

wipe away excess lubrication to prevent accumulation of dirt.

**4-10. STORAGE.**

4-11. To prevent deterioration of unit components, certain precautions should be taken when storing the unit for any length of time:

**4-12. WATER SPRAY SYSTEM.**

4-13. To prevent freezing of the water in the water spray tank, the drain plug should be removed and the tank completely drained. Water in the spray lines should also be drained. Replace drain plug for storage.

**4-14. FUEL SYSTEM.**

4-16. Diesel fuel will leave a waxy substance that plugs the system. If the unit is placed in storage for any appreciable length of time, it should have all the fuel drained from the tank and the engine run until the fuel in the lines is used.

**4-17. ENGINE COOLING SYSTEM.**

4-18. When storing the unit, the engine cooling system should be protected against freezing. This can be done by either draining the system or adding one of the various anti-freeze mixtures. To drain the system, open the drain cock on the bottom of radiator and the one on the side of the engine. When using anti-freeze, drain the system and add an anti-freeze of ethylene-glycol base (Prestone, G.M., Permaguard, Zerex, etc.). Test the anti-freeze solution to determine the freezing point. Record this information on a tag and attach it to the radiator overflow tube.

**4-19. ENGINE CYLINDERS.**

4-20. Over a long period of storage, the cylinder walls may rust from lack of lubrication, permitting moisture condensation within the cylinder. To prevent rusting of cylinder walls, injectors should be removed and a small amount of engine oil squirted into each cylinder. Turn the engine over several times with the starter to spread the oil on the entire cylinder wall. Replace the injectors. Repeat this procedure prior to starting after prolonged storage.

**4-21. BATTERY.**

4-22. A fully charged battery will maintain itself for a long period of time, if kept cool and disconnected. The electrolyte in the battery should be checked periodically to insure a proper level. If it is low, add distilled water until proper level is obtained. (Recharge the battery if below-freezing temperatures are expected.) Clean and dry the battery, especially the terminals. Coat the terminals with lubricant to prevent corrosion.

**4-25. ENGINE OIL.**

4-26. The lubricating oil in the crankcase should be kept up to the full mark on the dipstick. Stop the engine and let it sit for a few minutes before checking the oil level. Withdraw the dipstick; wipe it clean, then insert it all the way and again withdraw it to take the reading.

4-27. Engine oil is drained through a frame mounted drain hose on the right side of the unit in front of the drive wheels.

**4-28. ENGINE OIL FILTER.**

4-34. A replaceable element type oil filter is located at the bottom right side of the engine. Install new oil filter element and gasket each oil change. Check for oil leaks after starting the engine.

## SECTION 4 MAINTENANCE

### 4-35. FUEL FILTER.

### 4-40. DETROIT DIESEL ENGINE.

4-41. Drain approximately 1/4 pint (.12 ltr.) of fuel to remove sediment and water from the filter and strainer daily by opening drain cock in each shell.

### 4-42. AIR CLEANER AND FILTER (see figure 4-2).

4-43. The air cleaner should be serviced as indicated by the air restriction indicator. The dry-type, paper air cleaner element is cleaned by tapping alternate ends of the element "lightly" on a flat surface to dislodge dirt particles.

4-44. Low pressure compressed air may be used to aid in cleaning this air cleaner. Hold the air stream into the inside of the filter. Trap the air by putting a rag around the nozzle. Blow the air out through the filter rather than into it.



FIGURE 4-2. AIR CLEANER LOCATION ON GASOLINE ENGINES.

4-6.

4-45. Keep the rubber nipple on the pre-cleaner side of the housing free from restrictions or large particles. The rubber nipple must always point down.

### 4-46. ELECTRICAL SYSTEM.

### 4-47. CHECKING BATTERY ELECTROLYTE LEVEL (see figure 4-3).

4-48. The electrolyte level in each battery cell should never be below the top of the plates. If the electrolyte level is low, fill battery with pure water to the level as shown on the battery. Tighten loose terminals and keep them clean. Specific gravity of a fully charged battery is 1.250 to 1.275.

4-49. Diesel powered compactors have two batteries under the floor board.

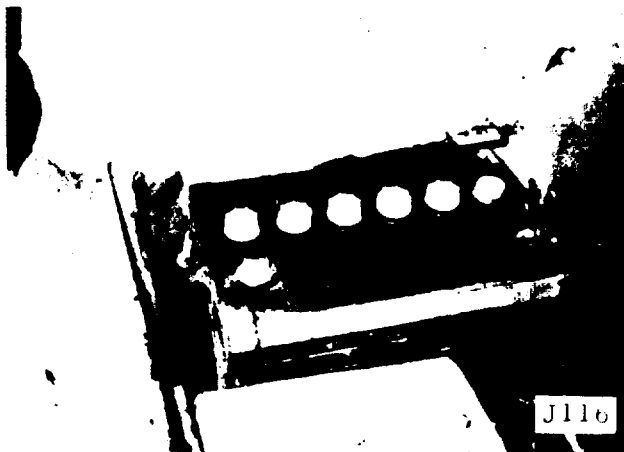


FIGURE 4-3. BATTERY LOCATION.

### 4-50. DRIVE BELTS. (see figure 4-4).

4-51. Examine the belts for cracks on the inner surface of the plies before making tension adjustments. A belt that is adjusted too tightly places an added load on the water pump and alternator bearings as well as the belt. A belt that is too loose allows slippage, premature failure of the belt and may lower the output of the charging system. The drive belts should be checked and adjusted every 50 hours of operation or weekly. Adjust the belt tension so that a firm push with the thumb, at a point midway between the two pulleys, will depress the belt 1/2 to 3/4 of an inch (12.7 - 19.1 mm).

**CAUTION:** When adjusting the fan belts, adjust the fan shroud as necessary to center the fan within the shroud.

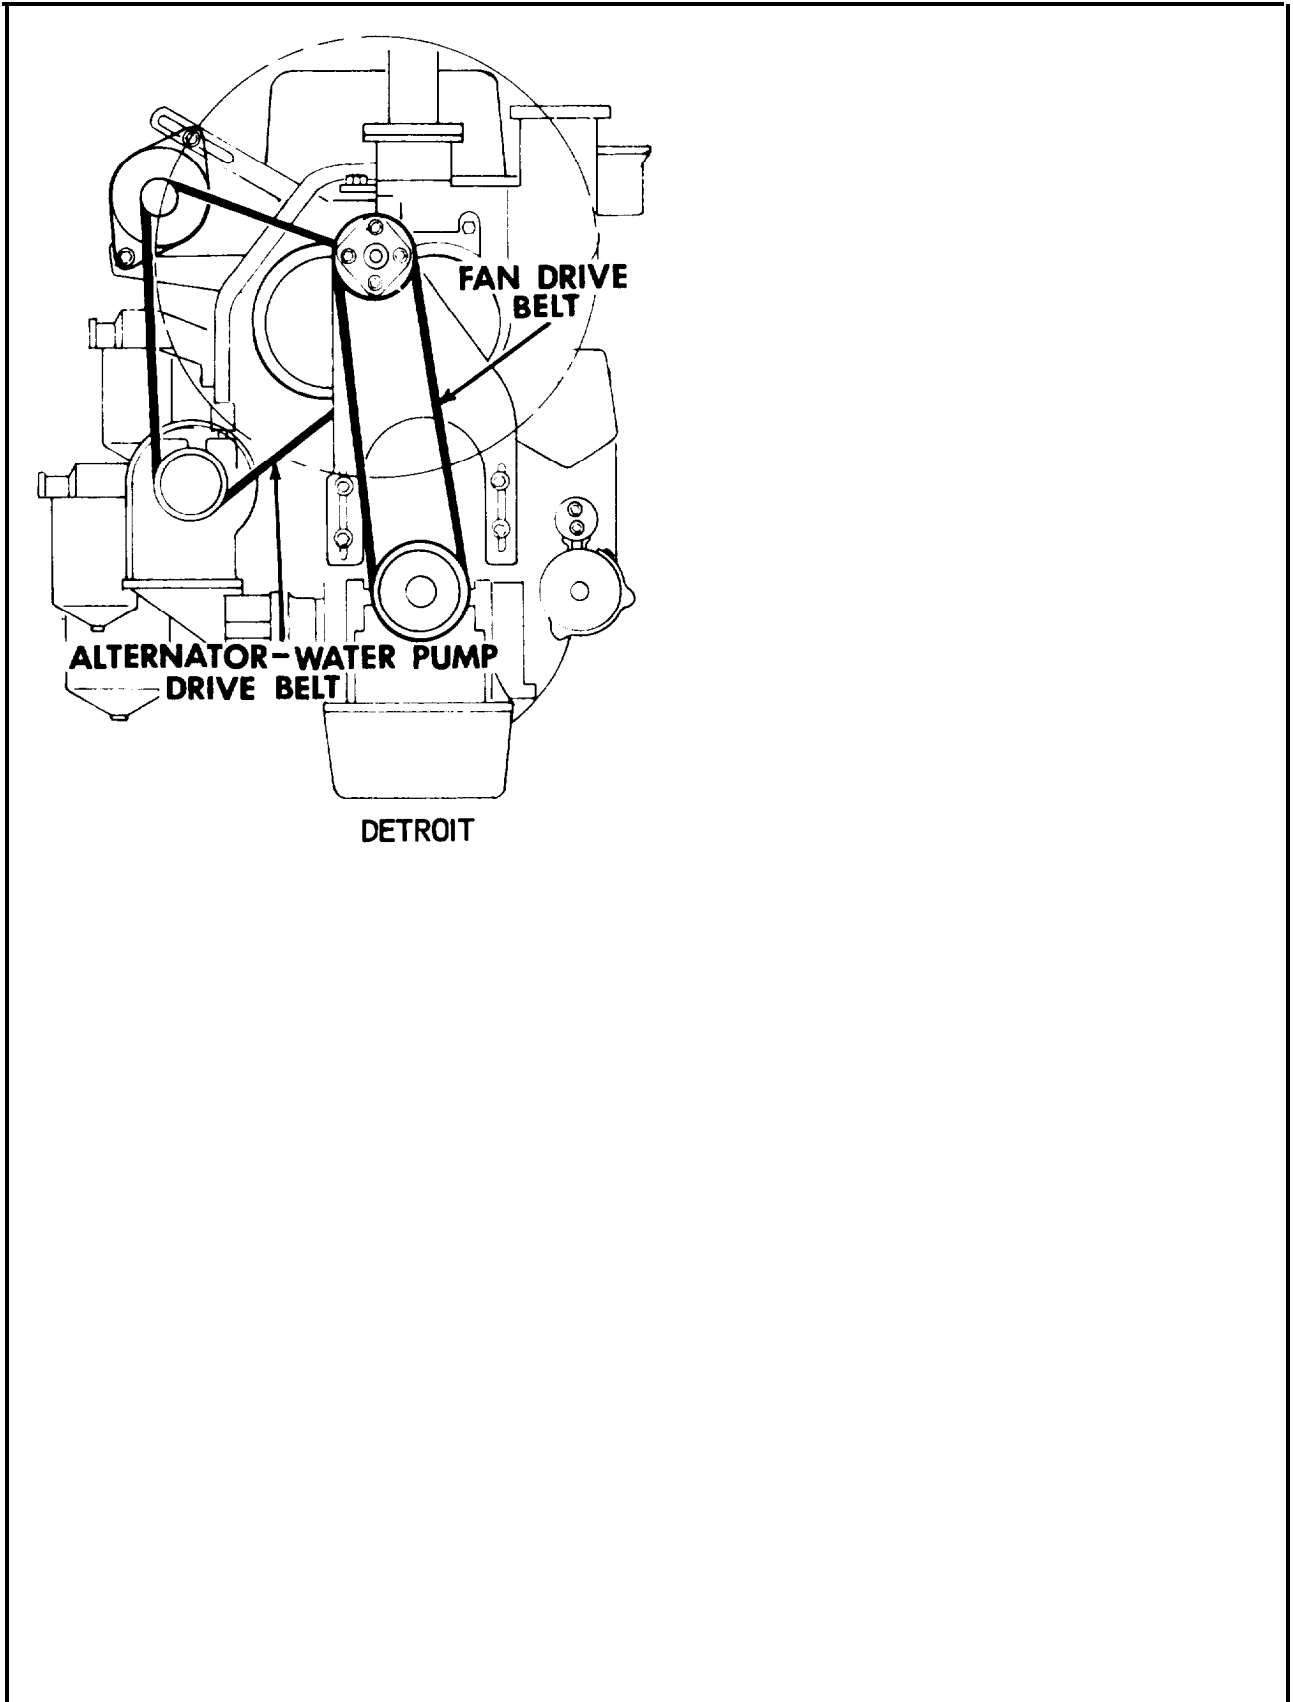


FIGURE 4-4. DRIVE BELTS.

**DELETED PAGE 4-8.**

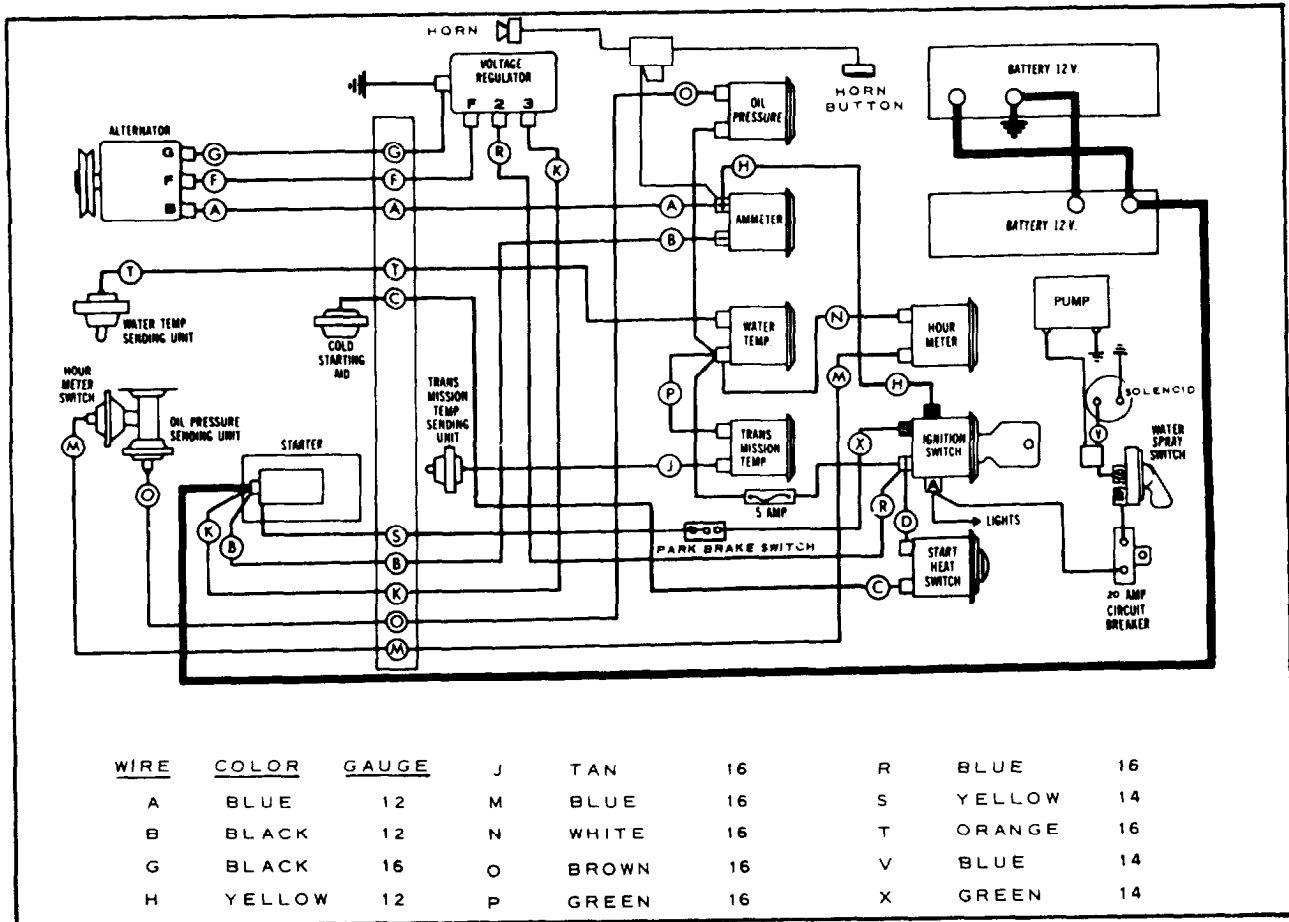


FIGURE 4-5C. ELECTRICAL SCHEMATIC-DETROIT DIESEL.

**NOTE:** Replace the drive belts as a matched set when one is worn. Single belts of similar size should not be used as a substitute for a matched belt set. Premature belt wear can result because of belt length variations.

**4-52. ELECTRICAL WIRING (SW figure 4-5).**

4-53. Periodically inspect all wiring for proper routing, loose terminal connections, cracks, wear, faulty insulation, brittleness and that they are free from oil and grease. Electrical components should be corrected as shown in figure 4-5 when components are replaced.

**CAUTION:** DO NOT use a wire smaller than the original factory installed wires.

**4-54. COOLING SYSTEM.**

4-55. Fill the radiator with clean, soft water and inhibitor to about one inch (25.4 mm) below the bottom of the filler neck. In cold weather, add a good quality ethylene-glycol

anti-freeze according to the manufacturer's directions.

**CAUTION:** Never add cold water to an overheated engine.

**WARNING:** When checking a hot radiator, place a rag over the cap and loosen the cap to the first notch to relieve the pressure. If the cap is completely removed without the pressure being relieved, severe scalding may result.

**4-56. FORWARD-REVERSE TRANSMISSION.**

**CAUTION:** STOP THE ENGINE BEFORE CHECKING OR ADDING OIL.

a. Always check the oil level on the forward-reverse transmission immediately after stopping the engine.

b. Clean around the oil fill before removing the dipstick.



## SECTION 4 MAINTENANCE

c. Change the oil and oil filter element after the first 20 operating hours and every 500 hours thereafter. The oil in the system must be changed whenever it shows traces of dirt or the effects of high operating temperature, evidenced by discoloration or strong odor.

d. If the oil in the system has become contaminated with metal particles, all the components of the system (oil tubes, oil pump, oil filter, control valve, converter clutches, heat exchanger and sump) must be thoroughly cleaned. The presence of metal particles in the oil is evidence of the failure of some part of the system.

e. Drain dirty oil while it is still warm, examining it for contamination. The forward-reverse and the 3-speed transmission have separate drain plugs. Clean the magnetic drain plugs before replacing them.

f. Always use clean oil and clean containers.

g. Fill oil to the FULL mark on the dipstick. Do not overfill.

h. Keep all shifting joints on the shifting linkage lubricated.

### 4-57. TRANSMISSION OIL FILTER.

4-58. The full-flow oil filter which serves the transmission is bolted to a mounting bracket on top and back of the engine. It is to the right side of the steering hydraulic filter. Both filters are identical.

### 4-59. STEERING SYSTEM.

### 4-60. STEERING HYDRAULIC OIL (see figure 4-6).

4-61. Check the hydraulic oil level at the sight gauge. This check should be made with cold oil. Add hydraulic oil when oil is no longer visible in the sight gauge. When adding hydraulic oil, use extreme care not to introduce foreign particles into the system.

### 4-62. STEERING HYDRAULIC FILTER.

4-63. The steering hydraulic filter is located on top and to the rear of the engine. The filter is located to the left of the transmission filter. The filter has a disposable element and should be replaced at recommended service intervals.

a. Clean the shell and the top to keep dirt  
4-10.

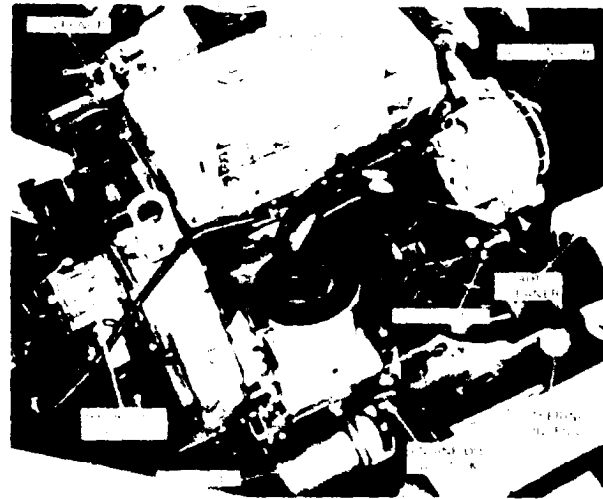


FIGURE 4-6. STEERING HYDRAULIC OIL.

from entering the system.

b. Remove the stud from the bottom of the shell (see figure 4-7). Remove the shell with the element.

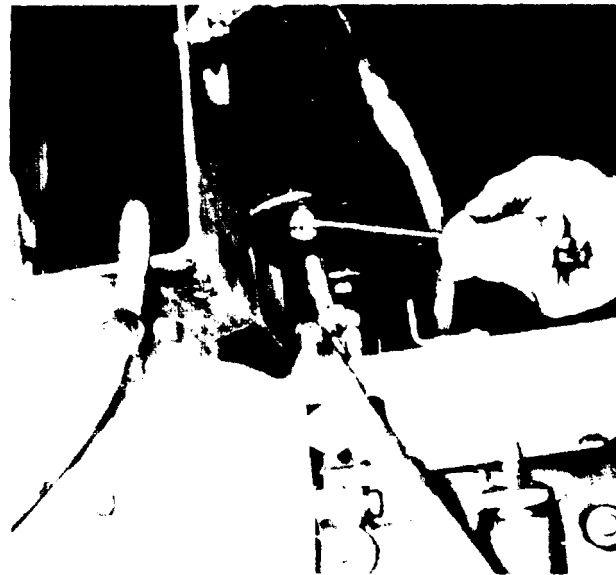


FIGURE 4-7. CHANGING STEERING HYDRAULIC FILTER.

c. Inspect the filter element. If metal particles are found, make a thorough inspection of the entire system.

d. Discard the used filter according to the service schedule (refer to Table 4-1).

e. Remove the relief valve assembly (see figure 4-8). Check the o-ring for wear or damage.



FIGURE 4-8. RELIEF VALVE ASSEMBLY.

f. Wash all parts in solvent and blow them dry with air.

g. Install the relief valve.

h. Smear the o-ring with oil or grease and install it on the container.

i. Insert into the shell in this order, the spring, gasket, washer and retainers. Insert the new filter element.

j. Install the shell assembly with the stud and washer.

#### 4-64. STEERING HYDRAULIC TANK.

a. Inspect all hoses, fittings and tubes.

b. Replace hoses or tubing that are frayed, cracked, cross-threaded, or otherwise damaged. Check hoses for softness and peeling or flaking on the inside.

c. If the tank was removed for welding, clean all new welds completely. Remove any scale, slack or other foreign material from the inside of the hydraulic tank.

**CAUTION:** Any foreign particles in the tank or loose material in the hoses may be drawn into the pump and the steering control unit before being filtered.

#### 4-65. WATER SPRAY SYSTEM (Gravity System Shown - see figure 4-9).

4-66. Located beneath the removable floor plate is a water system strainer. Located inside of the tank (use access cover) is the sump strainer. These strainers prevent clogging of the water spray nozzles by water contaminants. To keep the water spray system in proper operation, the strainers should be cleaned at intervals dependent upon the water conditions. Clean the strainers with water, directing the flow into the center of the strainer.



FIGURE 4-9. WATER SYSTEM STRAINER.

#### 4-67. TIRE INFLATION SYSTEM.

4-68. Every 500 operating hours clean or replace governor filters. To clean, use a cleaning solvent known to have no detrimental effect on metal or rubber.

4-69. Every 1000 operating hours remove compressor discharge valve cap nuts and check for excessive carbon deposits. Check the discharge line for carbon. If excessive carbon is found in either check, the cylinder head or discharge line should be cleaned or replaced.

4-70. Every 3,000 operating hours disassemble governor and clean and inspect all parts. Replace broken or badly worn parts. Wipe rubber parts dry.

4-71. Every 3,000 operating hours disassemble the compressor. Clean and inspect all parts thoroughly. Repair or replace all worn or damaged parts, or replace the compressor with a factory reconditioned, repair-exchange unit.

**CAUTION:** If it is necessary to drain the engine cooling system to prevent damage from freezing, the compressor must be drained. Drain the block and the head.

4-72. Make sure that the compressor takes in clean air. Install the air strainer properly and keep it clean. Air intake connections must be properly installed and maintained.

4-73. Check mounts for tightness and drive belt for proper tension.

4-74. Inspect oil supply line and water lines for proper installation. Check the unloader mechanism for operation.

#### **4-75. AIR LEAKAGE TESTS.**

4-76. Leakage past the discharge valves can be detected by removing the discharge line, applying shop air back through the discharge port and listening for escaping air.

4-77. The discharge valves and the unloader pistons can be checked for leakage by building up the air system until the governor cuts out, and by stopping the engine. Listen for escaping air at the intake. To pin-point air leakage, squirt soapy water around the unloader pistons. If they don't leak, then the discharge valves may leak.

#### **4-78. REAR CENTER WHEEL SPRING ADJUSTMENT (see figure 4-10).**

**NOTE:** Spring adjustment depends on the rear ballast load.

a. Place the compactor on a flat, even surface.

b. Load compactor to desire weight.

c. Loosen jam nut and turn adjusting screw until the center wheel is vertical using wheel rim for reference point (see figure 4-10).

d. Tighten jam nut.

e. Readjust when ballast weight is changed.

**NOTE:** If the wheel is tilted to the right, it is loaded too much. If it tilts to the left, it is not sufficiently loaded.



**FIGURE 4-10. REAR CENTER WHEEL SPRING ADJUSTMENT.**

**5-1. GENERAL.**

5-2, Tables 5-1 through 5-9 are trouble analysis check charts for the individual systems. These tables list the most common troubles that may be en-

countered, the probable causes of the trouble, and the corrective action that should be taken to restore the unit to normal operating condition.

**TABLE 5-1 TROUBLE ANALYSIS FOR DETROIT DIESEL ENGINE.**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Engine Will Not Start Or Starts Hard.	Low fuel pressure.	Check engine fuel pump and all hose connections.
	No fuel in the tank.	Fill tank and bleed the fuel system.
	Plugged or restricted fuel filters, both primary and secondary.	Clean primary filter, change secondary filter.
	Air in the fuel system.	Bleed the fuel system. If system becomes aerated again, check for air leaks on pick-up side of the transfer pump. Repair as necessary.
	Plugged or restricted fuel lines.	Clean lines and tank.
	Fuel transfer pump excessively worn.	Repair or replace pump.

**DELETED PAGES 5-2 THRU 5-14.**

**TABLE 5-1 TROUBLE ANALYSIS FOR DETROIT DIESEL ENGINE (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Engine Will Not Start Or Starts Hard (Cont.)	Wrong type of fuel - fuel with poor burning qualities.	Drain and refill tank with specified fuel (Refer to Section 4). Bleed the fuel system to remove undesirable fuel.
	Engine not cranking fast enough.	Check battery starter, and battery cables. Recharge battery. Repair or replace electric components as necessary.
	Water in the fuel system.	Drain fuel tank. Refill with clean fuel. Bleed the fuel system.
	Low compression caused by valves not seating, worn rings, blown head gasket, injectors not properly seated.	Reface valves. Replace pistons and rings as necessary. Rebore or replace liners. Replace head gasket. Clean dirty injector seats and install injectors, using new gaskets.
	Plugged air cleaner.	Service air cleaner as necessary.
	Blower not functioning.	Inspect blower drive shaft and drive coupling. Replace damaged parts.
	Uneven Running Or Frequent Stalling	Low coolant temperature.
Insufficient fuel.		Perform a "Fuel Flow Test". Not less than 0.5 gallon per minute (1.89 Litres per minute) should return to fuel tank.
Faulty injectors.		Check injector timing and position of injector rack. Replace faulty injector.
Low compression pressures.		Remove air box cover and inspect the compression rings through the ports in the cylinder liners. Overhaul the cylinder assembly if the rings are badly worn or broken.
Lock of Power	Governor instability '(hunting).	Adjust governor linkages.
	Improper engine adjustments and gear train timing.	Tune-up engine.
	Insufficient fuel.	Perform "Fuel Flow Test". Not less than 0.5 gallon per minute (1.89 Litres per minute) should return to fuel tank.

**SECTION 5  
TROUBLESHOOTING**

**TABLE 5-1 TROUBLE ANALYSIS FOR DETROIT DIESEL ENGINE (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Lack Of Power (Cont.)	Insufficient air.	Replace damaged or clogged air cleaner.
	High return fuel temperature.	Temperature must be less than 150° F. (64°C). Install larger fuel lines.
	High ambient air temperature.	Relocate engine air intake to provide cooler air source.
Detonation	Oil picked up by air stream.	Clean the air box and drain tubes. Inspect blower oil seals; if seals are defective, overhaul blower. Check for defective blower-to-cylinder block gasket.
	Faulty injectors.	Check injector timing and position of each injector rack. Replace injector if necessary.
No Fuel Or Insufficient Fuel	Low fuel supply.	Fill fuel tank with specified fuel Refer to Section 4).
	Loose fuel line connections.	Tighten loose connections.
	Damaged fuel oil strainer gasket.	Replace gasket-
	Faulty injector tip assembly.	Replace faulty injectors.
	Fuel strainer or lines restricted.	Replace fuel filter, strainers or lines if necessary.
	Fuel pump relief valve not seating.	Clean and inspect valve assembly.
	Worn gears or pump body.	Replace gear and shaft assembly or the pump body.
	Fuel pump not rotating.	Check the condition of the fuel pump drive and blower drive and replace the defective parts.
High Lubricating Oil Consumption	Oil lines or connections leaking.	Tighten or replace defective ports.
	Gasket or oil seal leaks	Replace defective gasket or oil seal.
	Excessive oil in air box.	Clean air box and drain tubes. Inspect blower oil seals; if seals are defective, overhaul blower. Check for defective blower-to-cylinder block gasket.

TABLE 5-1 TROUBLE ANALYSIS FOR DETROIT DIESEL ENGINE (CONT.).

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
High Lubrication Oil Consumption (Cont.)	Blower oil seal leaking.	Remove the air inlet housing and inspect the blower end plates while engine is running. If oil is seen on the end plate radiating away from the seal, overhaul the blower.
	Oil cooler core leaking.	Inspect the engine coolant for lubricating oil contamination; if contaminated, replace the oil cooler core. Then, use a good grade of cooling system cleaner to remove oil from the cooling system.
	Oil control rings worn, broken or improperly installed.	Replace oil control rings on the piston.
	Piston pin retainer loose.	Replace the piston pin retainer and defective ports.
	Scored liners pistons or oil rings.	Remove and replace defective parts.
	Excessive piston and rod misalignment (worn crank shaft thrust washers)	Replace worn and defective parts.
	Excessive oil in crankcase.	Fill crankcase to proper level only.
Excessive Crankcase Pressure	Cylinder head gasket leaking.	Check the compression pressure and, if only one cylinder has low compression, remove the cylinder head and replace the head gaskets.
	Piston or liner damaged.	Inspect the piston and liner and replace damaged parts.
	Piston rings worn or broken.	Install new piston rings.
	Obstruction or damage to breather.	Clean, repair or replace the breather assembly.
	Damaged blower-to-block gasket.	Replace the gasket.
	Cylinder block end plate gasket leaking.	Replace gasket.
	Excessive muffler resistance.	Check the exhaust back pressure and repair or replace the muffler if on obstruction is found.
Low oil pressure	Strainer clogged.	Remove and clean oil strainer.
	Cooler clogged.	Remove and clean oil cooler core.



SECTION 5  
TROUBLESHOOTING

TABLE 5-1 TROUBLE ANALYSIS FOR DETROIT DIESEL ENGINE (CONT.).

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Low Oil Pressure (Cont.)	<p>Cooler by-pass valve not functioning properly.</p> <p>Pressure regulator valve not functioning properly.</p> <p>Excessive wear on crankshaft bearings.</p> <p>Gallery, crank shaft or camshaft plugs missing.</p> <p>Faulty gouge.</p> <p>Oil pump intake screen partially clogged.</p> <p>Oil pump relief valve faulty.</p> <p>Air leak in oil pump section.</p> <p>Oil pump worn or damaged.</p>	<p>Remove by-pass valve and clean the valve and valve seat and inspect. Replace defective parts.</p> <p>Remove the pressure regulator valve and clean the valve seat and inspect. Replace defective parts.</p> <p>Change bearings.</p> <p>Replace missing plugs.</p> <p>Check oil pressure with a reliable gouge. Replace gauge if faulty.</p> <p>Remove and clean the oil pan and oil intake screen. Change oil filter and replace oil.</p> <p>Remove and inspect the valve, valve bore and spring; replace faulty parts.</p> <p>Disassemble piping and install new gaskets.</p> <p>Remove the pump, clean and replace defective parts.</p>
Engine Overheating	<p>Lock of coolant.</p> <p>Collapsed or disintegrated hoses.</p> <p>Thermostat stuck shut.</p> <p>Water pump defective.</p> <p>Exhaust system partially blocked.</p> <p>Fan belt too loose or slipping.</p> <p>Radiator clogged (external).</p> <p>Radiator clogged (internal).</p>	<p>Fill cooling system. Check for leaks. Tighten clomps.</p> <p>Replace all faulty hoses.</p> <p>Test thermostot and replace if faulty.</p> <p>Repair or replace pump.</p> <p>Check exhaust manifold.</p> <p>Replace if hard, crocked or frayed. Check pulleys for cracks or misalignment. Replace if necessary. Check belt tension.</p> <p>Clean radiator with water or compressed air.</p> <p>Flush radiator os described in section 4.</p>

**DELETED PAGES 5-19 THRU 5-40.**




TABLE 5-2 TROUBLE ANALYSIS FOR DETROIT DIESEL FUEL SYSTEM.

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION	
Insufficient Injector Holding Time	Poor bushing to body fit.	Lap the injector body.	
	Injector nut not tightened to specified torque.	Tighten the nut to 75-85 ft.-lb. (10.4-11.8 kg-m) torque.	
	Cracked valve parts.	Replace valve parts.	
	Valve seat chipped at point of contact.	Lop the surface of the seat and the I.D. of the hole.	
	Worn or broken valve spring.	Replace the spring. Check the valve cage and valve stop for wear, replace them if necessary.	
	Worn valve.	Replace valve.	
	Defective seal ring.	Replace seal ring.	
	Body plug leaks.	Install new body plugs.	
	Filter gasket leaks.	Replace the filter gasket and tighten filter cops to 67-75 ft.-lb. (9.3-10.4 kg-m) torque.	
	Dirt or foreign material on injectors.	Disassemble the injector and clean all parts.	
	incorrect Fuel output	Spray tip or orifices partially plugged.	Clean orifice.
		Spray tip orifice enlarged.	Replace the spray tip.
		Carbon buildup in tip.	Clean injector tip.
Worn plunger and bushing.		Replace defective parts.	
Cracked valve parts.		Replace cracked parts.	
Cracked bushing.		Replace plunger and bushing assembly.	
Improperly lapped surfaces.		Re-lap sealing surfaces.	
Foreign material between valve and seat.		Disassemble the injector and clean the parts.	
Rack and gear not in time.	Assemble the gear with the drill spot mark on the tooth engaged between the two marked teeth of the rack.		

SECTION 5  
TROUBLESHOOTING

TABLE 5-2 TROUBLE ANALYSIS FOR DETROIT DIESEL FUEL SYSTEM (CONT.).

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Low Needle Valve Injector Opening Pressure	Worn or eroded needle valve or valve seat in tip.	Replace the needle valve and tip assembly.
	Worn or damaged needle valve grill.	Replace the needle valve and tip assembly.
	Worn or damaged needle valve spring seat.	Replace the spring seat.
	Worn or broken valve spring.	Replace the valve spring.
	Dirt or foreign matter in injector.	Disassemble the injector and clean the parts.
High Needle Valve injector Opening Pressure	Carbon or foreign material on spray tip.	Remove carbon with tip reamer.
	Carbon in tip orifice.	Clean orifice with the proper size wire cleaner.

TABLE 5-3. TROUBLE ANALYSIS FOR ELECTRICAL SYSTEM.

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
STARTING CIRCUIT		
NOTE: For units not equipped with running lights, a sealed beam light can be made up for test purposes. Attach one side of the filament to the battery terminal on the alternator and ground the other side of the filament on the unit's chassis.		
No Cranking, No Lights	Battery dead.	Recharge or replace battery.
	Open circuit.	Clean and tighten connections. Replace wiring,
	Poor connection, probably at the battery terminals.	Clean battery terminals and cable ends.
No Cranking, Lights Go Out When Cranking Is Attempted	Defective cables.	Replace defective cables.
	Pinion not engaging with the flywheel ring gear.	Clean or replace defective parts.
No Cranking, Lights Dim Slightly When Cranking Is Attempted	Excessive resistance or open in cranking motor.	Clean commutator. Replace brushes. Check and repair solenoid contacts. Repair poor connections.

**TABLE 5-3. TROUBLE ANALYSIS FOR ELECTRICAL SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
<p>No Cranking, Lights Glow Very Dim When Cranking Is Attempted</p> <p>No Cranking, Lights Stay Bright When Cranking Is Attempted</p> <p>Engine Cranks Slowly, But Does Not Start</p> <p>Engine Cranks At Normal Speed But Does Not Start</p> <p>Solenoid Plunger Chatters</p>	Engine locked or turns too hard.	Check engine. Repair as necessary
	Battery low.	Recharge or replace battery.
	Pinion jammed; defective mechanism.	Free-up and replace defective parts.
	Damaged shaft bearings; dragging armature short in cranking motor.	Repair cranking motor.
	Open in control circuit.	Check ignition switch, connections and wiring. Check solenoid contacts and connections. Repair or replace as necessary.
	Battery in o discharged condition.	Check, charge or replace battery.
	Very low temperature.	Battery must be fully charged, eliminate all resistance possible.
Undersize cables.	Install cable of correct diameter.	
Mechanical trouble in the engine.	Check and repair os necessary.	
Defective engine system other than the starting system.	Check other engine systems.	
Hold-in winding of solenoid open.	Replace solenoid.	
<b>BATTERY AND CHARGING CIRCUIT</b>		
<p>Remains In An Overcharged State</p> <p>Uses Excessive Water</p>	High charging voltage.	Check and reset voltage regulator.
	Excessive resistance in the regulating circuit.	Remove the resistance in the voltage circuit. Clean and tighten connections. Replace wires having broken strands.
	High ambient temperature.	Adjust voltage regulator accordingly.
Overcharging.	Check charging circuit.	

**Table 5-3. TROUBLE ANALYSIS FOR ELECTRICAL SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Uses Excessive Water Cont.)	Cover seal leaking.	Reseal or replace battery.
	Case cracked.	Replace battery.
Will Not Remain In A Charged State	Defective alternator, regulator or external short.	Check alternator regulator and wiring. Repair as needed.
	Excessive load demands.	Reduce electrical load.
	High self-discharge.	Clean battery top and recharge. Replace if necessary.
	Defective or old battery.	Recharge and make high discharge test. Replace if defective.
Crooked Case	Battery not secured or hold-down loose.	Install new battery. Tighten hold-down correctly.
	Battery frozen.	Install new battery. Keep battery charged.
Bulging Case	Battery overheated.	Battery overcharged.
	Hold-down too tight.	Loosen and tighten properly.
<b>IGNITION CIRCUIT</b>		
Engine Cranks Normally But Will Not Start	Open primary circuit.	Check connections, coil, contact points and ignition switch for open.

**DELETED PAGE 5-45.**



**SECTION 5  
TROUBLESHOOTING**

**TABLE 5-3. TROUBLE ANALYSIS FOR ELECTRICAL SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Rapid Wear Of Centrifugal Advance Mechanism	Loose or worn timing chain or worn drive and camshaft gears.	Replace ports as necessary.
<b>LIQUID SPRAY CIRCUITS</b>		
Spray Motor Will Not Operate	Toggle switch open.  Circuit breaker not resetting.  Motor brushes worn excessively.	Replace switch.  Replace breaker.  Replace brushes.
Spray Motor Will Not Turn Off	Toggle switch shorted.	Replace switch.

**TABLE 5-3. TROUBLE ANALYSIS FOR ELECTRICAL SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Motor Operates But Solenoid Not Energized	Open solenoid winding.	Check resistance of solenoid(s) winding. Replace if winding is open circuited. Resistance should be approximately 18 OHM.
	Shorted or grounded solenoid winding.	Check resistance of solenoid(s) winding. Replace if winding is shorted or grounded. Resistance should be approximately 18 OHM.

**TABLE 5-4. TROUBLE ANALYSIS FOR TRANSMISSION & TORQUE CONVERTER.**

**NOTE:** Troubleshooting should always start by making certain preliminary checks before it is assumed that the transmission is faulty, **OR** before carrying out any other troubleshooting procedures.

1. Check the coolant level in the engine radiator.
2. Check the oil level in the transmission. A low oil level can affect the operation of the transmission and may indicate fluid leaks that could cause transmission damage. A high oil level can cause foaming of the oil which, in turn, may result in clutch slippage or leakage at the breather or filler tube.
3. Check the adjustment of the governor. Make sure that the engine starts to rev up immediately after the accelerator pedal is depressed. All interferences that limit top engine RPM should be remedied.

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
<b>FORWARD-REVERSE TRANSMISSION</b>		
Jerking Starts	Idle speed too low.  Control valve out of adjustment.	Adjust idle speed to 550 RPM.  Adjust control valve so that it is completely open before the engine starts to rev up.
Transmission Overheating	Improper oil level.	Adjust to proper level.
	Abnormal clutch slipping.	Inspect the control and linkage for malfunction. Check the control valve for proper pressure. Inspect the oil pump for proper performance.
	Glazed or wrong clutch friction disc and/or separator plates.  Insufficient clutch pressure.	Replace the clutch pack that is slipping.  Check oil pressure and adjust to specified PSI if necessary.

**SECTION 5  
TROUBLESHOOTING**

**TABLE 5-4. TROUBLE ANALYSIS FOR TRANSMISSION & TORQUE CONVERTER (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Transmission Overheating (Cont.)	Warped or worn clutch friction discs.	Replace clutch packs as necessary.
	Broke dragging (foot or hand broke).	Adjust brakes. Inspect and repair as necessary.
	Driving with hand broke partially applied.	Release hand broke.
	Restricted oil cooler and /or circuit.	Defective or kinked hoses. Straighten or replace as necessary.
	Dirty filter.	Replace filter element.
Foams At Filler Tube	Improper oil level.	Adjust to proper level.
Lack of Power	Low oil level.	Adjust to proper level.
	Engine not developing specified torque.	Check engine stall speed. Adjust or repair as necessary.
	Clutches slipping or dragging.	Refer to the specific operational default.
Unit Doesn't Move In Either Direction	Low oil level.	Add oil to proper level.
	Hand or foot broke locked.	Release brakes.
	Broke shoes dragging.	Adjust or repair as necessary.
	Clutches not applying.	Check pressures. Adjust if necessary. Defective clutch. Repair as necessary.
Clutch Foiling To Release	Oil level too high.	Adjust to proper level.
	Separator plates misaligned.	Align missing teeth on the separator plates with the oil drain holes. Make sure that drains ore not clogged.
Noisy Torque Converter	Improper oil level.	Adjust to proper level.
	Converter parts worn.	Replace worn parts or replace torque converter if necessary.
	Faulty charging pump.	Replace pump if necessary.

**TABLE 5-4. TROUBLE ANALYSIS FOR TRANSMISSION & TORQUE CONVERTER (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
<p>Partial Clutch Application Or Clutch Slipping</p>	<p>Oil leaking into clutch oil passage when not desired to do SO.</p> <p>Weak or broken retraction springs.</p> <p>Indentations worn in the clutch hub or clutch ring.</p> <p>Jammed piston or limited piston travel.</p> <p>Defective seal rings.</p> <p>Glazed, worn, wrong or warped clutch, friction discs or separator plates.</p>	<p>Spool valve clearance too great. Replace spool and, if necessary, replace valve assembly. Valve mounting gasket defective or valve body loose on its mounting. Replace or tighten mounting screws as necessary.</p> <p>Replace the springs.</p> <p>Replace both if necessary.</p> <p>Foreign particles between piston and housing. Repair as necessary. Remove piston and eliminate restriction.</p> <p>Replace seals as necessary. If seals are defective, inspect mating bore and replace bore component if the ring sealing surface is not in good condition.</p> <p>Remove, inspect and replace parts as necessary.</p>
<b>3-SPEED TRANSMISSION</b>		
<p>No Low Gear</p> <p>Jumps Out Of High Gear</p>	<p>Law gear on output shaft installed backward.</p> <p>High gear on countershaft installed backward.</p> <p>Pocket bearing foiled.</p>	<p>Turn low gear around and install it with the dental teeth toward the sliding gear.</p> <p>Turn the gear around and install it with the hub away from the bearing.</p> <p>Repair</p>

**TABLE 5-5. TROUBLE ANALYSIS FOR FINAL DRIVE & TRANSFER CASE.**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
<p>Will Not Move</p>	<p>Broken axle shaft.</p>	<p>Replace defective part. Check bearings in differential for damage. Check shafts and yokes for twisted splines.</p>

**SECTION 5  
TROUBLESHOOTING**

**TABLE 5-5. TROUBLE ANALYSIS FOR FINAL DRIVE & TRANSFER CASE (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Will Not Move (Cont.)	Broken propeller shaft.	Replace defective port. Determine cause of failure, and correct, before placing compactor back in service. Check entire drive train for possible damage.
	Ring and pinion gears jammed.	Remove differential from compactor for complete teardown and inspection. Check all parts for damage. Replace as needed. Check alignment of components. Check ring gear runout.
	Park brake not releasing.	Inspect for jammed linkage or material jammed against brake drum. Remove brake drum OS necessary to make operational. Check for jammed lever.
Noisy Differential	Universal joints out of alignment.	Separate, align and reassemble. Grease joints with specified lubricant (Refer to Section 4).
	Dry or defective bearings.	Remove carrier assembly from housing. Disassemble as needed to check for damaged ports. Replace as needed. Assemble and fill with proper lubricant (Refer to Section 4).
	Incorrect ring and pinion gear adjustment.	Adjust ring gear and pinion backlash. Check bearing preload and tooth contact. Check gear teeth for wear or damage. Replace gears as needed.
	Incorrect bearing adjustment.	Adjust the differential side bearing preload and pinion shaft bearing preload.
	Worn or broken gear teeth.	Replace ports as needed. Check for use of proper lubricant. Install and adjust gears according to instructions given in Section 8.
	Incorrect lubricant.	See Specifications for correct lubricant (Section 4). Check for worn or damaged ports.

**TABLE 5-5. TROUBLE ANALYSIS FOR STEERING SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Noisy Differential (Cont.)	Lack of lubricant.	Fill with specified lubricant (Refer to Section 4). Check for worn or damaged parts. Check for leaks.
	Loose mounting bolts.	Tighten all bolts and capscrews to specified torque values.
Losing Lubricant	Worn pinion shaft seal.	Replace seal. Lubricate before installation.
	Defective gaskets.	Replace gaskets. Replace lost lubricant.
	Incorrect lubricant.	Drain old lubricant. Refill according to Specifications (Refer to Section 4).
	Over-filling.	Drain to correct level. Replace gaskets or seals as necessary.

**TABLE 5-6. TROUBLE ANALYSIS FOR STEERING SYSTEM.**

GENERAL		
Slow Steering	Insufficient pump pressure and flow.	Check pump pressure with gouge.
	Sticky relief valve in power control unit.	Replace relief valve in power control unit.
	Low fluid level (loss of hydraulic oil due to leaks or damaged lines).	Eliminate leaks and refill system and reservoir with specified fluid (Refer to Section 4).
	Dirt in hydraulic system.	Drain and flush the complete hydraulic system. Change hydraulic filter. Refill with specified hydraulic oil (Refer to Section 4).
	Broken piston or O-rings in steering cylinder. Scored cylinder.	Replace. Check condition of cylinder wall.
Excessive Lost Motion At Steering Wheel	Loose mounting pin on steering cylinder.	Replace mounting pins to remove free play.
	Worn bushings.	Replace bushings.

**SECTION 5  
TROUBLESHOOTING**

**TABLE 5-6. TROUBLE ANALYSIS FOR STEERING SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
	VANE PUMP	
<p>Pump Not Delivering Oil</p>	<p>Cam ring installed for opposite pump rotation.</p> <p>Pump drive shaft engaged or sheared, belt slipping.</p> <p>Flow control valve stuck open.</p> <p>Vane or vanes stuck in rotor slots.</p> <p>Oil viscosity too heavy to pick up prime.</p> <p>Restricted intake hose; may be collapsing.</p>	<p>Disassemble pump and install cam correctly. Direction of rotation is indicated by the arrow on the surface of the ring.</p> <p>Determine damage to cartridge ports. Replace sheared shaft and needed ports.</p> <p>Wash control valve in clean solvent, slide it back and forth in its bore. No stickiness in movement should occur. If gritty feeling is noted, polish spool with fine crocus cloth. Avoid removal of excess material or rounding of the spool edges. Do not polish the bore. Wash all ports before reassembly of the pump.</p> <p>Examine rotor slots for dirt, grime and small metal chips. Clean rotor slots and vanes. Reassemble parts and check for free vane movement.</p> <p>Use oil of proper viscosity (Refer to Section 4).</p> <p>Clean and check intake hose. Replace if soft or deteriorated.</p>
<p>Pump Making Noise</p>	<p>Restricted intake hose; may be collapsing.</p> <p>Air entering system on the intake side of the pump.</p> <p>Loose manifold or defective manifold seal.</p>	<p>Clean and check intake hose. Replace if soft or deteriorated.</p> <p>Test by pouring oil on joints and around drive shaft. Listen for change in noise during operation. Tighten joints affected. Replace hose or pump shaft seal, if necessary.</p> <p>Tighten manifold. Replace O-ring if necessary.</p>

**TABLE 5-6. TROUBLE ANALYSIS FOR STEERING SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
	POWER STEERING CONTROL	
Steering Wheel Does Not Center	Broken centering springs.	Replace springs.
No Response When Steering Wheel Is Turned Slowly.	Dirt in hydraulic system.	Drain and flush complete hydraulic system. Change filter and refill system with specified hydraulic fluid (Refer to Section 4).
	Oil level is low.	Fill to proper level.
	Spool and sleeve jammed in neutral.	Repair control valve.
Slow Or Hard Steering	Dirt in hydraulic system.	Drain and flush complete hydraulic system. Change filter and refill system with specified hydraulic fluid (Refer to Section 4).
	Wear on sleeve and spool.	Replace sleeve and spool as a unit.
	Wear on metering gears.	Replace metering gears as a set.
	Oil level low.	Fill to proper level.
	Clogged filter or line.	Check filter and lines. Clean or replace as necessary.
Wrong Response To Steering Wheel	Lines connection at power steering control reversed.	Reverse connections.
	Metering gear star misaligned on drive.	Realign gear star on drive.
Continuous Steering Wheel Rotation	Dirt in hydraulic system.	Drain and flush complete hydraulic system. Change filter and refill system with specified hydraulic fluid (Refer to Section 4) :
	Broken centering springs.	Replace centering springs.
	Burr on sleeve or spool.	Repair sleeve or spool.
No Response	Sleeve and spool lacked.	Disassemble control unit. Repair or replace sleeve and spool as necessary.
	Relief valve stuck.	Drain, flush and refill system.



**SECTION 5  
TROUBLESHOOTING**

**TABLE 5-7. TROUBLE ANALYSIS FOR BRAKE ASSEMBLY SYSTEM.**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Will Not Release Or Drags	Improperly adjusted brake.	Readjust brake.
	Weak or broken retracting springs.	Replace.
	Retracting springs in outer spring slots.	Move retracting springs to inner spring slots.
	Drum out-of-round.	Service drum as necessary.
	Broke not released or cable seized.	Release or adjust. Free or replace cable.
Will Not Apply	Cable seized.	Free or replace cable.
	Brake out of adjustment.	Adjust as necessary (Refer to Section 10).
Applies But Will Not Hold	Worn lining.	Replace as necessary.
	Brake out of adjustment.	Adjust as necessary (Refer to Section 10).
	Oil on lining.	Take necessary steps to prevent future contamination. Replace lining.

**TABLE 5-8. TROUBLE ANALYSIS FOR LIQUID SPRAY SYSTEM.**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Pump Will Not Operate	Motor not functional.	Refer to Table 5-4.
Pump Operates But Has Little Or No Spray Pattern	Insufficient liquid in reservoir.	Replenish liquid supply.
	Water filter plugged.	Clean water filter and tank.
	Spray nozzles plugged.	Clean nozzles and nozzle manifold.
	Pump housing cracked from freezing.	Replace pump.
Spray Pattern Not Completely Covering the Tire	Spray angle incorrect.	Adjust nozzle manifold so spray pattern completely covers tire surface. Refer to Section 11.
	One or more nozzles plugged.	Clean nozzle(s).
	Charging system malfunctioning. (Low voltage to motor.)	Check charging system. Refer to Section 11.

**TABLE 5-9. TROUBLE ANALYSIS FOR TIRE INFLATION SYSTEM.**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Compressor Fails To Maintain Sufficient Pressure In the Air System	Restriction in compressor cylinder head intake or discharge cavities, or in discharge line.	Remove restriction. Replace collapsed hoses.
	Leaking or broken discharge valves.	Repair or replace defective valves.
	Excessive wear.	Overhaul or exchange compressor.
	Drive belt slipping.	Tighten drive belt or replace.
	Inlet valves stuck open.	Repair or replace inlet valves.
Noisy Operation	Worn inlet valves.	Repair or replace inlet valves.
	Excessive system leakage or usage.	Perform leakage test and repair as necessary.
	Loose drive pulley.	Tighten drive pulley.
	Restrictions in cylinder head or discharge line.	Remove restrictions.
	Worn or burned out bearings.	Replace bearings.
Compressor Passes Excessive Oil	Compressor not getting proper lubrication.	Remove oil flow restrictions. Replace oil feeder line.
	Excessive wear.	Overhaul to proper dimensions or exchange compressor.
	Excessive wear.	Overhaul to proper dimensions or exchange compressor.
	High inlet vacuum.	Clean engine air cleaner.
	Excessive oil pressure.	Check engine oil pressure.
Compressor Not Unloading	Defective or worn oil seal rings in end cover.	Repair compressor as necessary.
	Piston rings not properly installed.	Install piston rings OS recommended in Section 12.
	Back pressure from engine crankcase.	Check engine crankcase ventilation for restriction.
	Defective unloader pistons or bores.	Repair unloader pistons as necessary.
	Intake cavity restrictions.	Remove restrictions.

**SECTION 5  
TROUBLESHOOTING**

**TABLE 5-9. TROUBLE ANALYSIS FOR TIRE INFLATION SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Compressor Not Unloading (Cont.)	Defective governor.	Repair or replace governor.
Slow Pressure Buildup	Unloader line or cavity to governor restricted.	Remove restrictions.
	Unloader mechanism binding or stuck.	Free or repair unloader mechanism.
	Clogged air cleaner.	Clean air cleaner.
	Leaking lines or connections.	Tighten fittings. Replace components as necessary.
	Reservoir drain cock open or leaking.	Close or replace drain cock as necessary.
	Leaking compressor exhaust valve.	Replace or repair exhaust valves and/or seats.
	Worn piston and rings in compressor.	Overhaul compressor.
	Defective governor.	Overhaul governor.
	Defective inlet valve in compressor.	Replace or repair inlet valves and associated parts.
Air Pressure Above Normal	Defective air gauge.	Replace gauge.
	Governor out of adjustment or defective.	Adjust or repair.
	Restricted line between governor and compressor.	Clean line.
	Compressor unloader inoperative.	Clean and repair as required.
Quick Loss Of Pressure When Engine Is Stopped	Leaking lines or connections.	Tighten fittings. Replace components as necessary.
	Worn or leaking compressor exhaust valve.	Replace or repair exhaust valves and/or seats.
	Leaking governor.	Overhaul governor.
	Reservoir draincock open or leaking.	Close or replace draincock as necessary.

**TABLE 5-9. TROUBLE ANALYSIS FOR TIRE INFLATION SYSTEM (CONT.).**

TROUBLE	PROBABLE CAUSE	CORRECTIVE ACTION
Safety Valve "Blows Off"	Safety valve out of adjustment.	Adjust safety valve. Observe tire ply vs. air pressure table.
	Governor out of adjustment.	Adjust governor.
Regulator Pressure "Creeps"	Dirty screen.	Clean screen.
	Valve disc dirty, rough or pitted.	Clean, repair, or replace as necessary.
	Valve seat dirty, rough or pitted.	Clean, repair, or replace as necessary.
Regulating Valve Action Is Uneven Or Faulty	Guide plug or O-ring dirty.	Clean guide plug or O-ring.
	No grease in O-ring groove.	Grease O-ring groove.
	Valve pin O-ring nicked, scratched, dirty, or not lubricated.	Lubricate, repair, or replace O-ring as necessary.
Little Or No Air Flow Through Regulating Valve	Dirty screen.	Clean screen.
	Dirty valve.	Clean valve.
Air Leaks Between Regulator Bonnet and Body	Bonnet screws loose.	Tighten bonnet screws.
	Defective diaphragm.	Replace diaphragm.
Air Leaks Continuously From Regulator Bonnet Hole	Defective valve pin and relief seat.	Replace valve pin and relief seat.
	Defective diaphragm.	Replace diaphragm.
	Regulating spring not seated in lower spring rest.	Seat regulating spring in lower spring rest.
	Valve disc and seat nicked, scratched or dirty.	Clean, repair, or replace valve disc and/or seat as necessary.
Tires go flat over night.	Rotary unions leaking.	Replace
	Pressure holding valve defective.	Replace.


## **SECTION 6 ELECTRICAL**

**6-1. GENERAL** (see figure 6-1).

6-2. The electrical system consists of several subsystems, they are: starting circuit, charging circuit and the discharge circuit (gauges, lights,

etc.). When checking for default each subsystem should be considered because of their interdependence. The electrical system specifications are given in Section 2, and a troubleshooting guide is presented in Section 5.

**DELETED PAGES 6-2 THRU 6-6.**

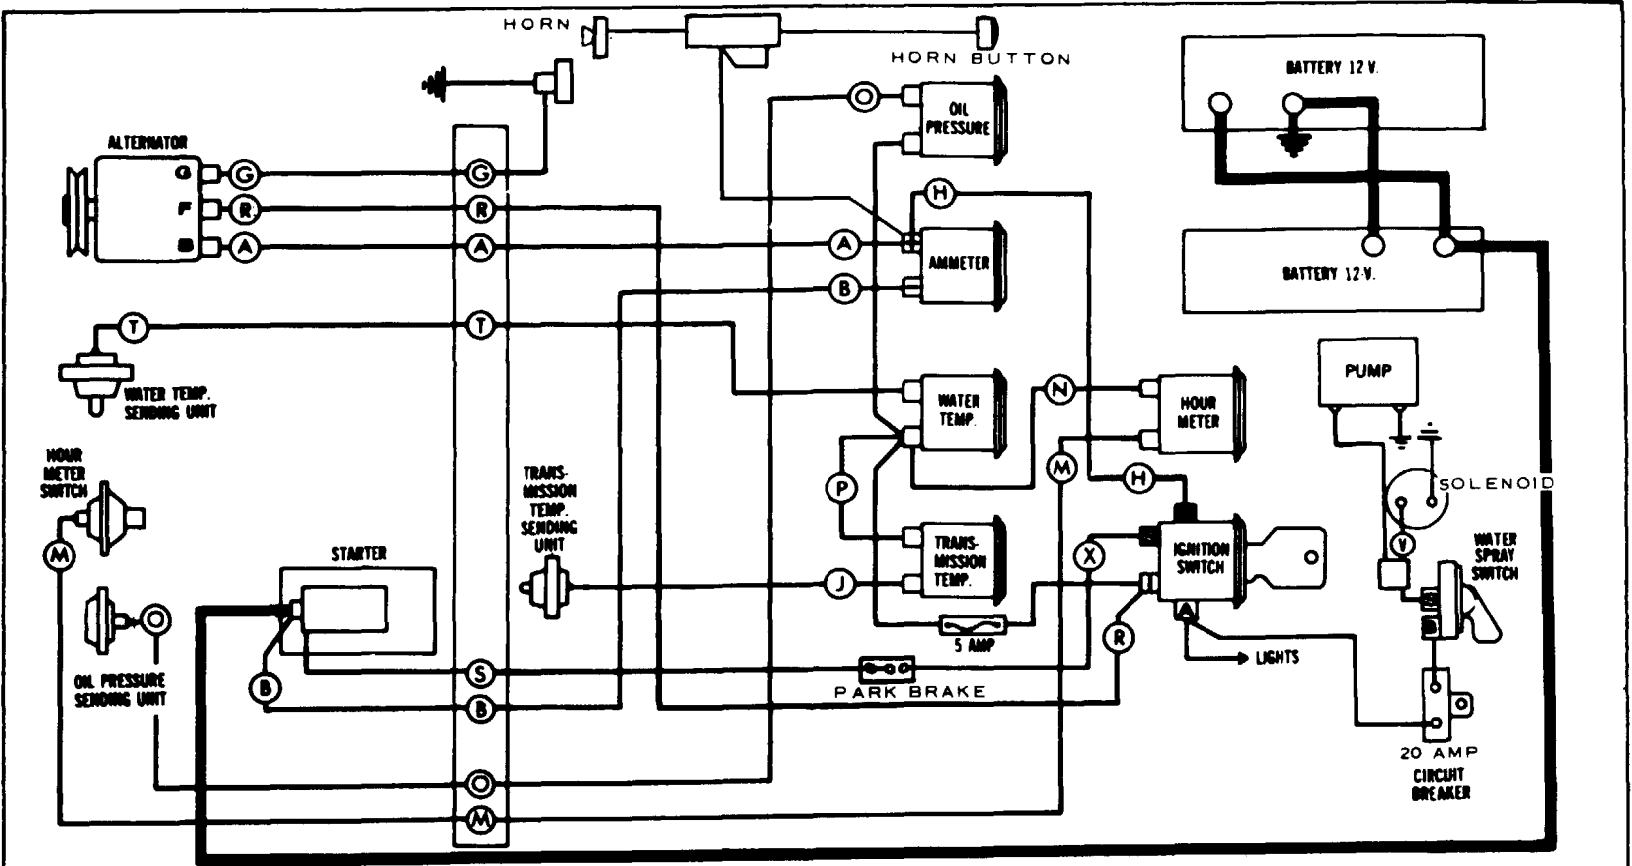

WIRE	COLOR	GAUGE	WIRE	COLOR	GAUGE
A	BLUE	12	O	BROWN	16
B	BLACK	12	P	GREEN	16
F	GREEN	16	R	BLUE	16
G	BLACK	16	S	YELLOW	14
H	YELLOW	12	T	ORANGE	16
J	TAN	16	V	BLUE	14
M	BLUE	16	W	WHITE	14
N	WHITE	16	X	GREEN	14

FIGURE 6-4. ELECTRICAL SCHEMATIC - DETROIT DIESEL

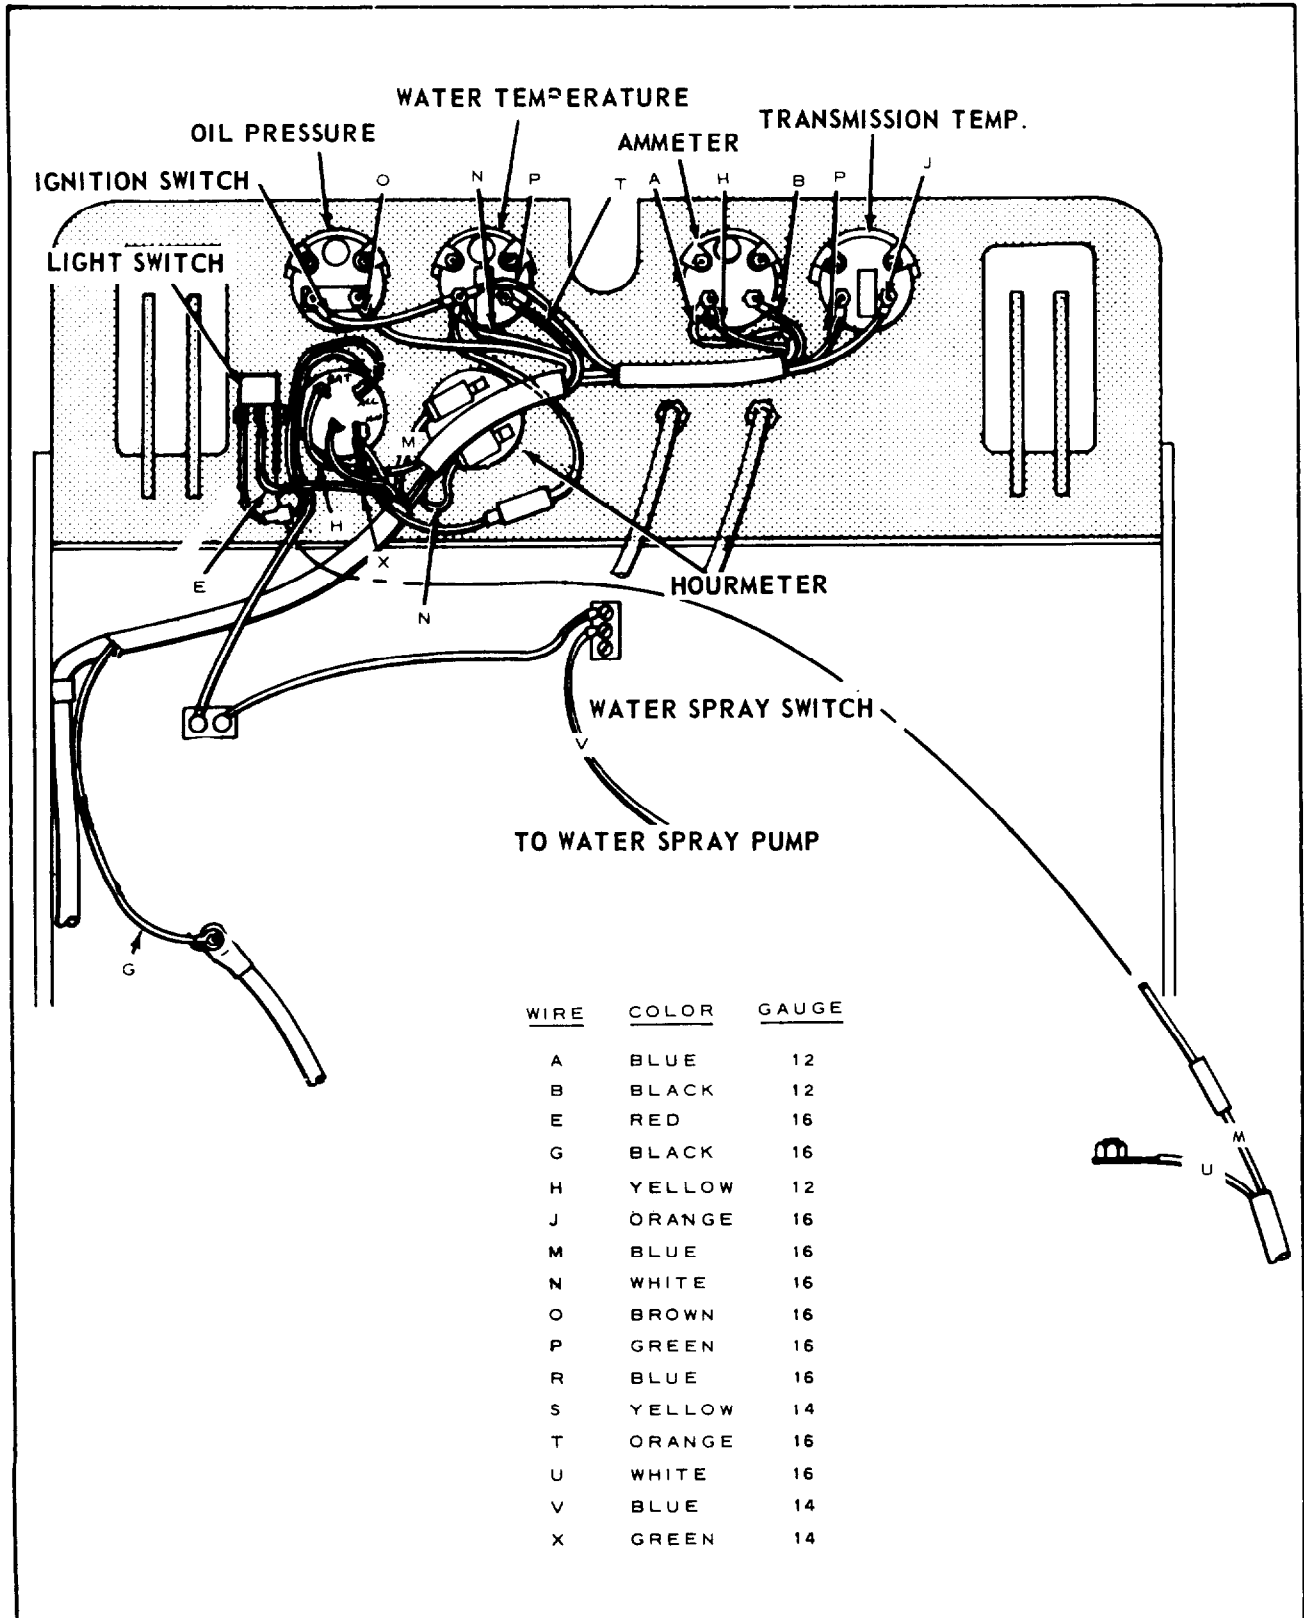


FIGURE 6-8. INSTRUMENT PANEL - DETROIT DIESEL.



SECTION 6  
ELECTRICAL

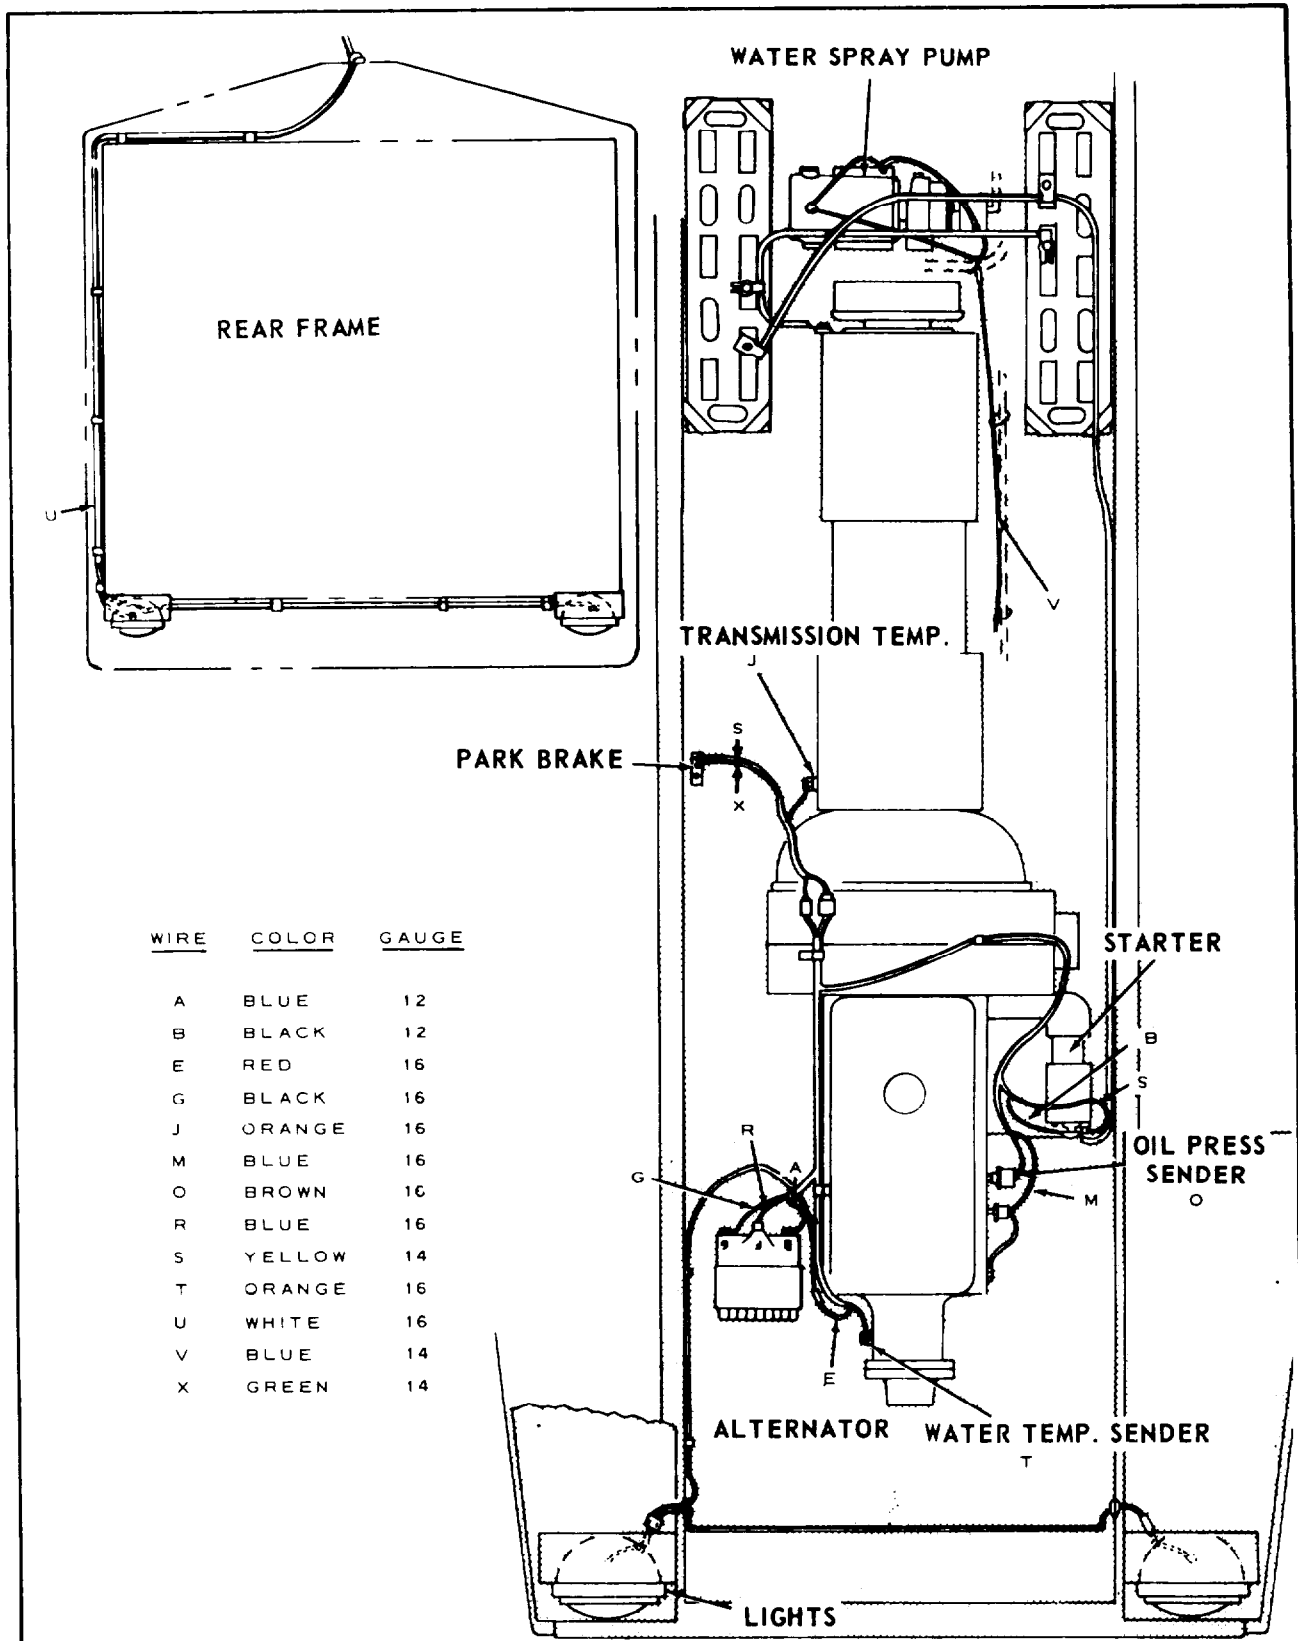


FIGURE 6-6. ELECTRICAL ROUTING - DETROIT DIESEL.

**7-1. GENERAL.** (See figure 7-2).

7-2. The transmission assembly consists of three basic components: the torque converter, the forward-reverse transmission, and the 3-speed constant mesh transmission. These three components share one common oil supply. A converter charging pump, driven by the converter impeller, supplies oil flow to the torque converter and the clutch packs. The oil is cooled in a heat exchanger at the bottom of the radiator.

**7-3. TORQUE CONVERTER** (see figure 7-3).

**7-4. GENERAL.**

7-5. This 11 $\frac{3}{4}$  inch (298.5 mm) torque converter is a serviceable unit. It consists of an impeller which is driven by the engine flywheel, a turbine which is splined to the transmission input shaft, a stator, and a sprag clutch.

**7-6. REMOVAL OF TORQUE CONVERTER.**

7-7. To remove the torque converter, the engine and transmission have to be removed as one unit.

7-8. To separate the converter from the power train, sling the transmission and remove the capscrews which connect the converter housing to the flywheel housing. Remove the capscrews fastening the converter to the mounting plate. Remove the top screw last and lift the converter out. Scribe lines to mark the original converter position in relation to the mounting plate.

**7-9. DISASSEMBLY OF TORQUE CONVERTER**  
(see figure 7-4).

**NOTE:** Mark all parts for reassembly.

a. Support the converter with a square of two by four's large enough to seat the impeller

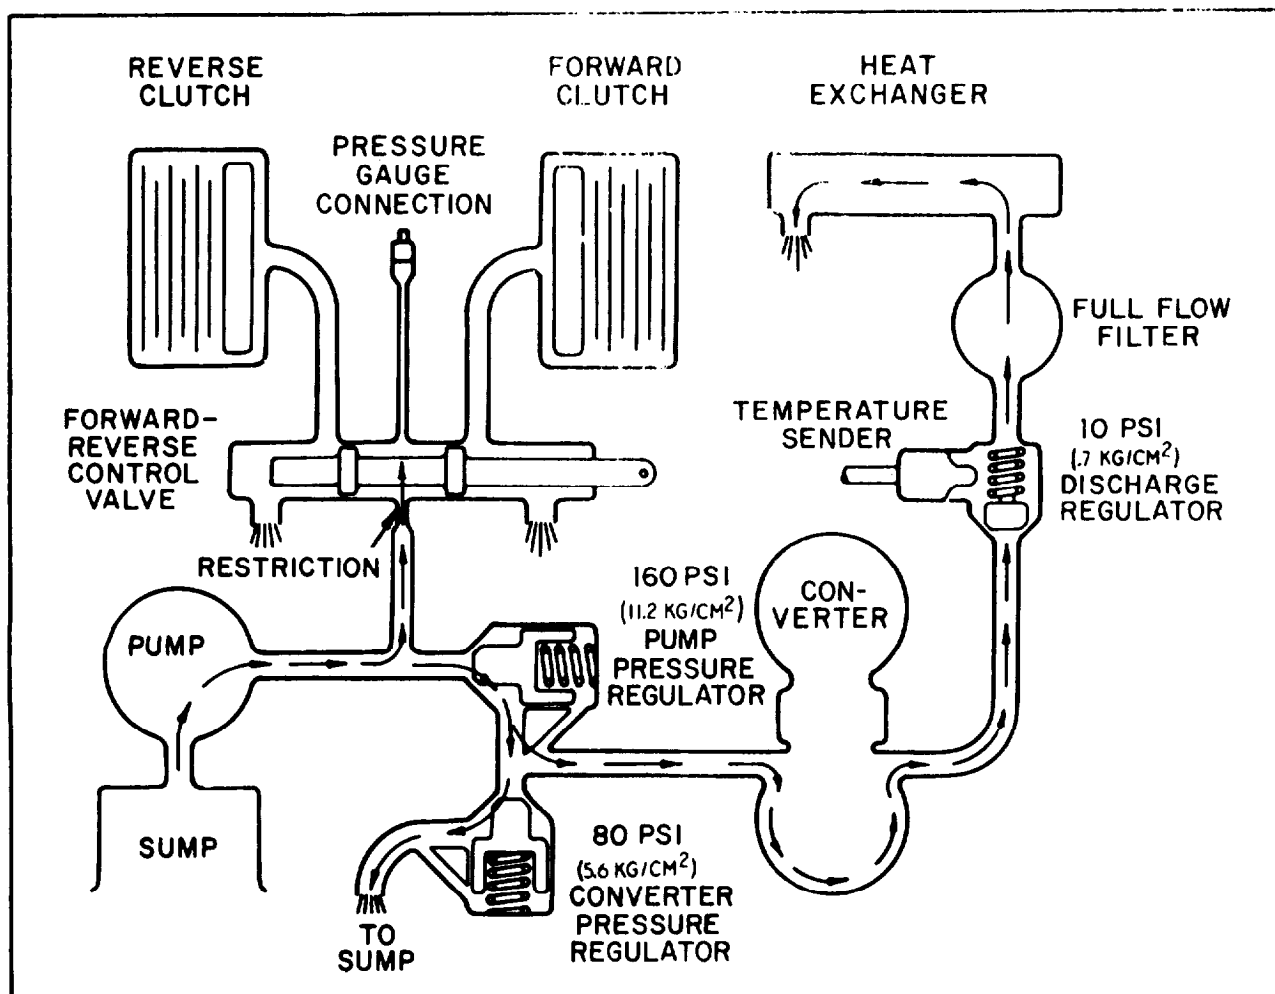


FIGURE 7-1.

SECTION 7  
TRANSMISSION

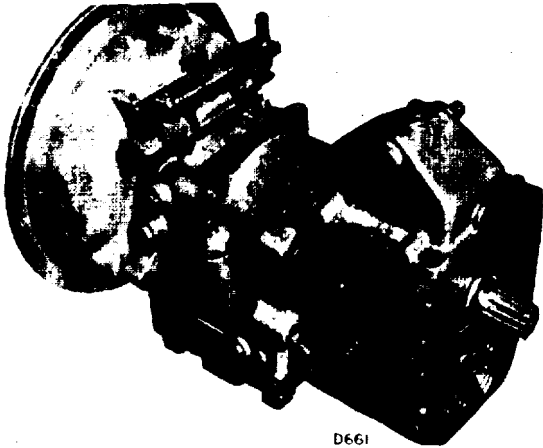


FIGURE 7-2.

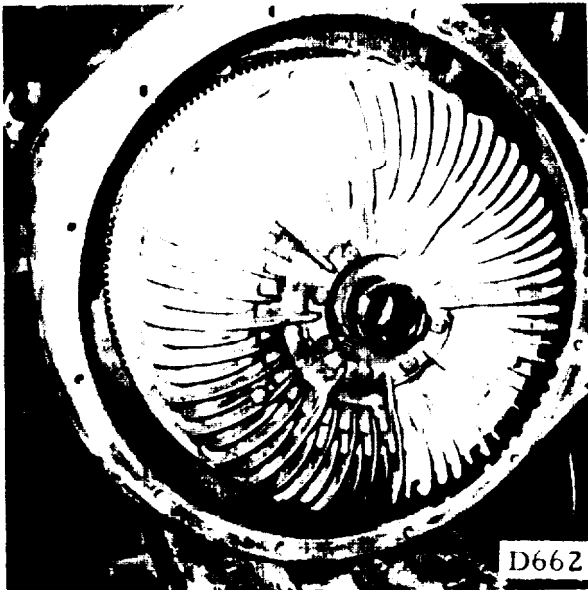


FIGURE 7-3.

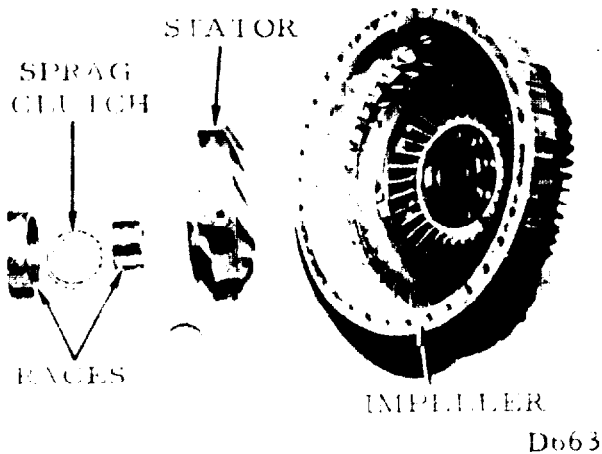


FIGURE 7-4.

hub.

b. Unscrew the capscrews which hold the front cover to the impeller. Before separating the two parts, scribe lines for assembly.

c. Remove the turbine and the stator and sprag clutch.

d. To remove the sprag clutch from the groove in the stator, remove the two snap rings.

**NOTE:** Do not drop thrust washers and races, because the polished surfaces may become damaged.

**7-10. REASSEMBLY OF TORQUE CONVERTER (see figures 7-4 and 7-5).**

**NOTE:** It is possible to reverse the sprag clutch and the stator during installation. Therefore, observe marks made during removal.

a. If there is any question in which direction to install the sprag clutch, slide it over the pump drive. It will fit only one way. Join the sprag clutch and stator with two lock rings.

b. The stator, if properly installed, should freewheel in the direction of engine rotation.

c. Assemble all parts in their respective order and position as previously marked: Oil the o-ring, which seals the converter between the front cover and the impeller, with Dexron automatic transmission fluid and torque the capscrews to 22 ft.-lbs. (3.04 kg-m).

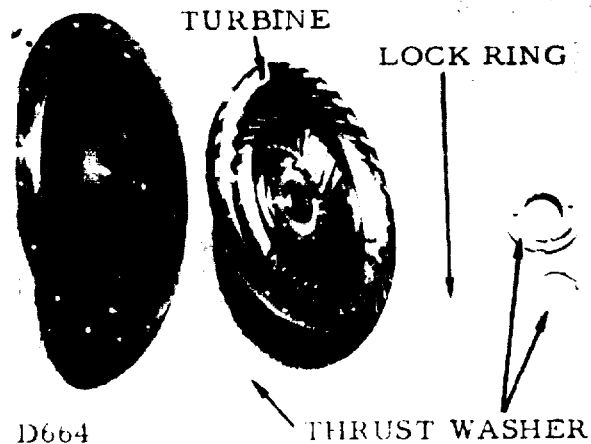


FIGURE 7-5.

### 7-11. INSTALLATION OF TORQUE CONVERTER.

a. Connect the torque converter to the drive plate and torque capscrews to 15 ft.-lbs. (2.07 kg-m).

b. Adjust converter runout to .020 inch (.508 mm) maximum (refer to paragraph 7-12).

### 7-12. CHECKING RUNOUT (see figure 7-6).

a. Attach a dial indicator to the converter housing with its point resting on the impeller hub (pump drive sleeve).

b. Rotate the engine one full turn. The indicator should register not more than .020 inch (508 mm) total variation (see figure 7-7).

c. If the indicator variation is substantially more than .020 inch (508 mm), remove the torque converter housing, torque converter and drive plate and check the flywheel for runout.

d. Then attach the converter drive plate to the flywheel and check for runout on the rear of the drive plate. Using a pry bar, the plates can be brought into tolerance.

e. If the indicator reading is out of tolerance only a small amount like .030 inch (.762 mm), a pry bar applied between the converter and the flywheel at the proper place may bring the reading into tolerance.

### 7-13. FORWARD-REVERSE TRANSMISSION.

### 7-14. GENERAL.

7-15. The torque converter turbine drives the forward-reverse transmission input -shaft. The

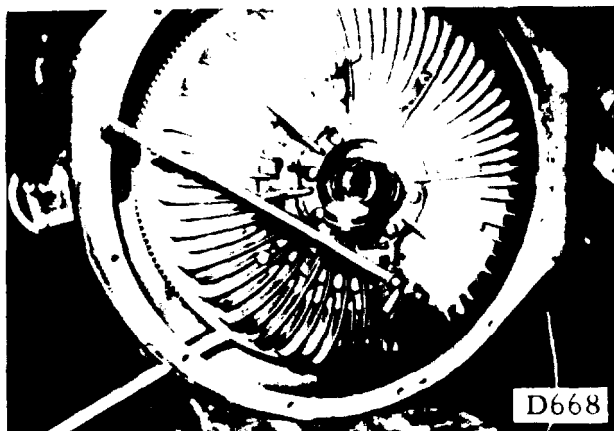


FIGURE 7-6.

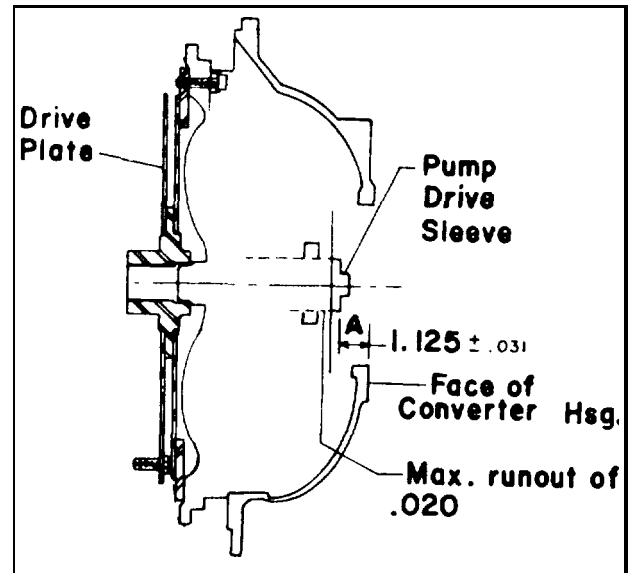


FIGURE 7-7.

charging pump, which is bolted to the front of the transmission, is driven by the impeller (see figure 7-8).

7-16. The transmission consists of a forward and a reverse clutch pack, an idler gear, and a countershaft that is parallel to the idler gear shaft (see figure 7-8).

7-17. The gear on the input shaft is integrally attached to the forward clutch pack housing. Both turn in the same direction of engine output. The input gear, turning counterclockwise, meshes with the idler gear and turns it clockwise. The idler gear turns the cluster gear counterclockwise. The cluster gear turns the reverse clutch clockwise through its attached gear. Hence, both clutch pack housings turn at all times, but in opposite directions (see figures 7-8 and 7-9).

7-18. The friction plates in each clutch pack are of sintered bronze. They are internally splined to a clutch hub which splines to the output shaft. The separator plates of polished steel are splined to the clutch housings. When a clutch pack is hydraulically locked up, power flows through the input shaft, the clutch pack housing, the separator plates and the friction plates to the output shaft (see figure 7-9).

7-19. The clutch packs are splash lubricated. Oil is splashed by the gears through holes in the side of the clutch pack housings. This oil escapes through holes in the housings.

SECTION 7  
TRANSMISSION

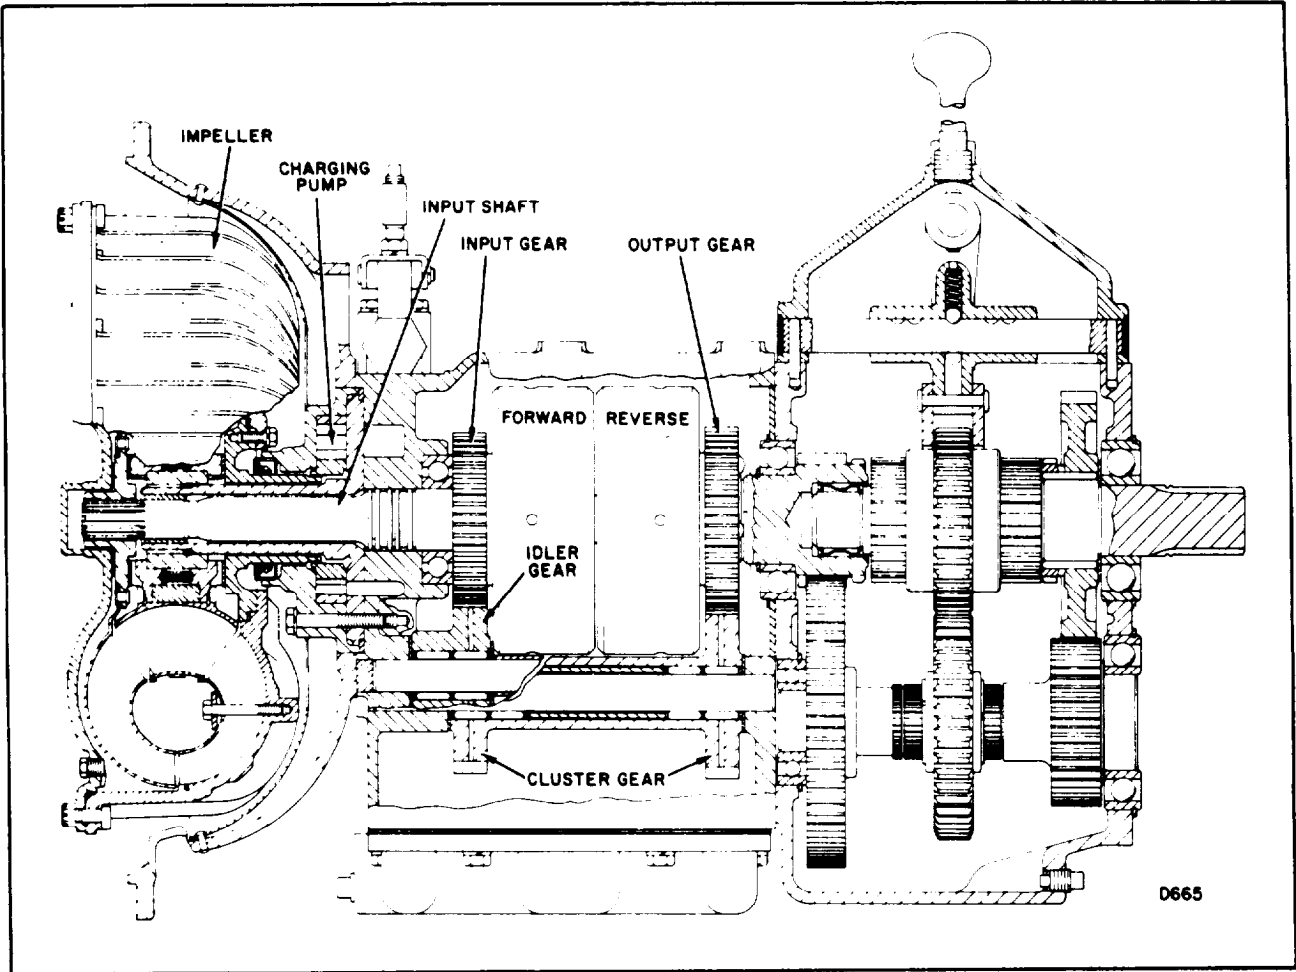


FIGURE 7-8.

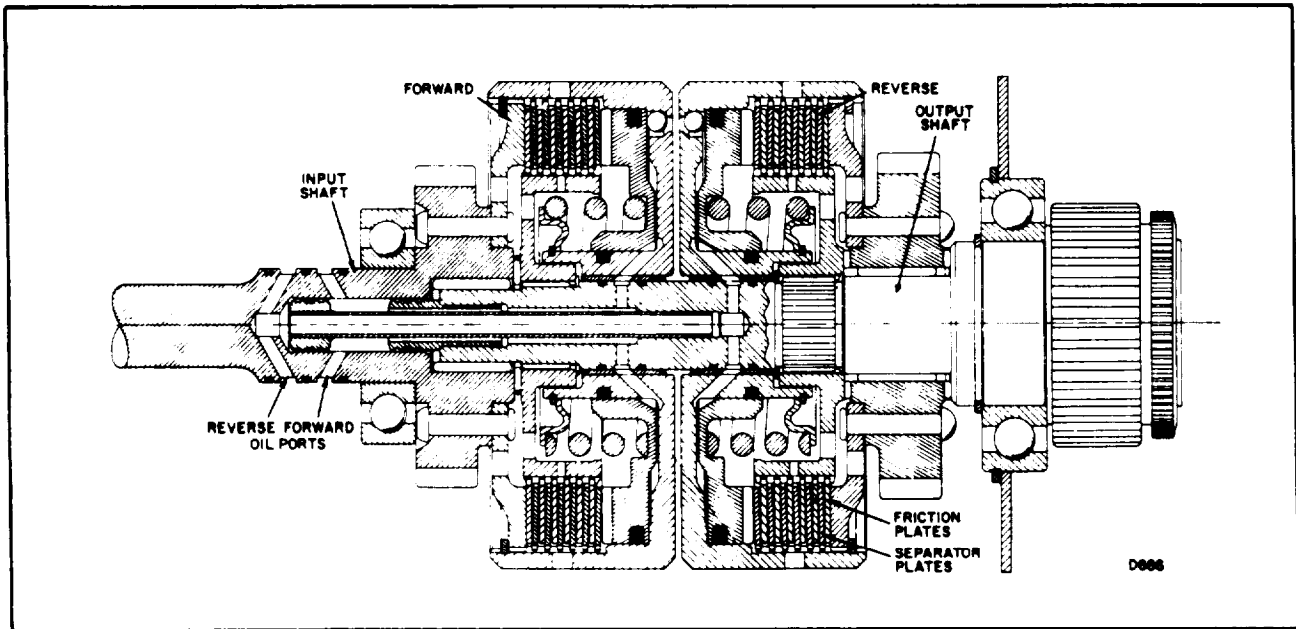


FIGURE 7-9.

7-20. Part of the output shaft is centered inside the end of the input shaft. Hydraulic oil flows from the forward-reverse control valve on top of transmission through appropriate porting and through channels in the shaft to the clutch pack which is to be locked up (see figure 7-9).

#### 7-21. REMOVAL OF TRANSMISSION.

a. Refer to TORQUE CONVERTER – Removal.

b. Support the assembly, with the torque converter housing down, on two by fours.

c. Remove the three-speed transmission mounting capscrews (see figure 7-10) and lift the transmission off.

d. Separate the converter housing by removing its mounting capscrews.

#### 7-22. DISASSEMBLY OF FORWARD-REVERSE TRANSMISSION.

a. Remove the four mounting capscrews which fasten the forward-reverse control valve to the top of the housing (see figure 7-11). Remove the valve and the o-rings.

b. Remove the dipstick (see figure 7-10).

c. Turn the transmission upside down with the bottom plate up.

**NOTE:** The pictures show a similar model without a split sump.

d. Remove the split sump cover and the sump screen.

e. Clean the screen in solvent and blow it dry.

f. Remove the charging pump mounting bolts and remove the pump and the pump gasket. Unscrew one flathead screw to disassemble the pump (see figure 7-12).



FIGURE 7-11.



FIGURE 7-10.



FIGURE 7-12.

SECTION 7  
TRANSMISSION

**NOTE:** The various parts of the pump are a matched assembly and cannot be separately serviced. If the pump has become damaged, replace the whole assembly.

**7-23. CLUSTER GEAR REMOVAL.**

a. Remove the cork and drive out the cluster gear shaft toward the large opening in the case (see figure 7-13).

**NOTE:** The cluster gear shaft and idler gear shaft are tapered and can, therefore, be removed only toward the large opening in the housing.

**NOTE:** Drive the cluster gear shaft out with a 67/16 x 3/4 inch (163.5x19.1 mm) dummy shaft. This dummy will support the 68 needle bearings which are arranged in four sets, two sets at each end (see figure 7-13).

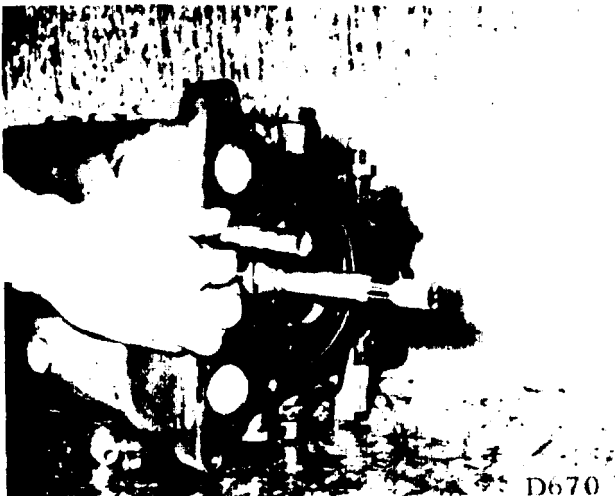


FIGURE 7-13.

b. Remove the two thrust washers between the bosses and the cluster gear (see figure 7-15).

c. Raise the cluster gear assembly up high enough so that the clutch pack assembly can be removed. Hold the gear to the nearest side.

d. Slide the whole clutch pack assembly out (see figure 7-14).

e. Remove the cluster gear from the housing (see figure 7-15).

**NOTE:** Keep track of the needle bearings. There are 68 for the cluster gear, four rows of 17 each.

7-6.



FIGURE 7-14.

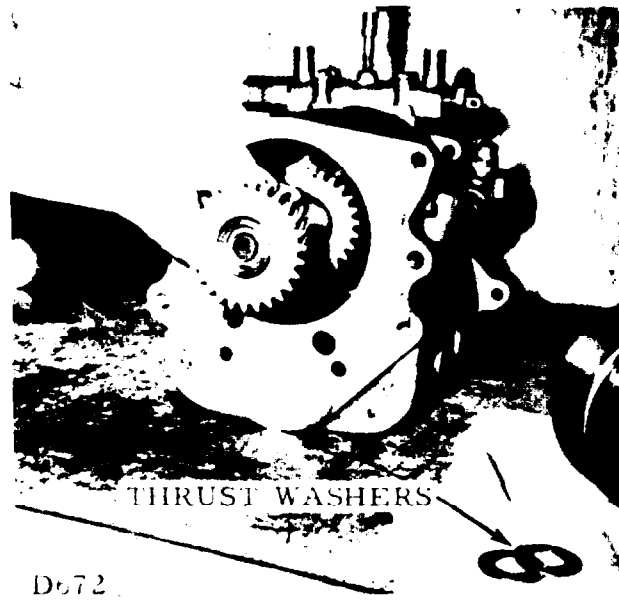


FIGURE 7-15.

**7-24. IDLER GEAR REMOVAL.**

7-25. If removal of the idler gear is necessary, follow the instructions given for the counter gear removal. This gear can be removed without removing the clutch pack assembly.

**7-26. FORWARD CLUTCH PACK DISASSEMBLY.**

a. Remove the snap ring from the front clutch cylinder. Remove the input gear assembly (see figure 7-16).

b. Remove the pilot bearing and the thrust bearing (see figures 7-17 and 7-18).

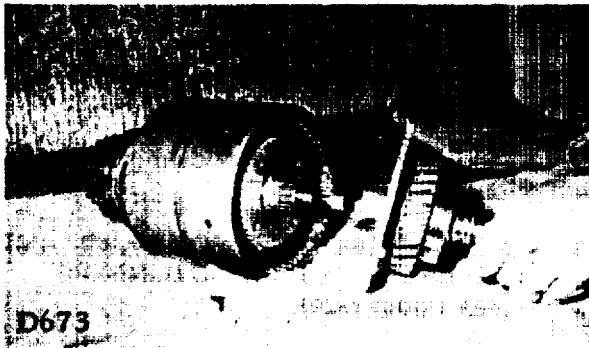


FIGURE 7-16.



FIGURE 7-17.

FIGURE 7-18.

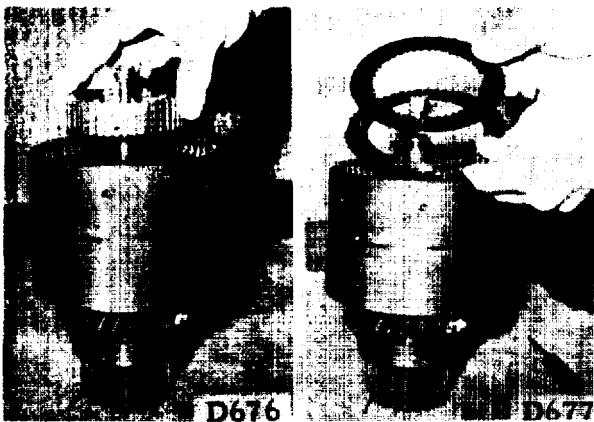


FIGURE 7-19.

FIGURE 7-20.

c. Insert the nose of a pair of needle nose pliers into one of the holes in the forward clutch hub and lift it out (see figure 7-19).

d. Remove the separator and the friction plates (see figure 7-20).

e. Remove the snap ring (see figure 7-21) from the output shaft which frees the front clutch cylinder. Remove this cylinder (see figure 7-22).



FIGURE 7-21.



FIGURE 7-22.

**7-27. FORWARD CLUTCH CYLINDER DISASSEMBLY.**

a. Put the clutch cylinder under an arbor press and compress the springs with a set of bars. Remove the lock ring and unload the spring (see figure 7-23).

b. Apply an air pressure nozzle to the oil holes in the bore of the clutch cylinder to force the clutch piston out.

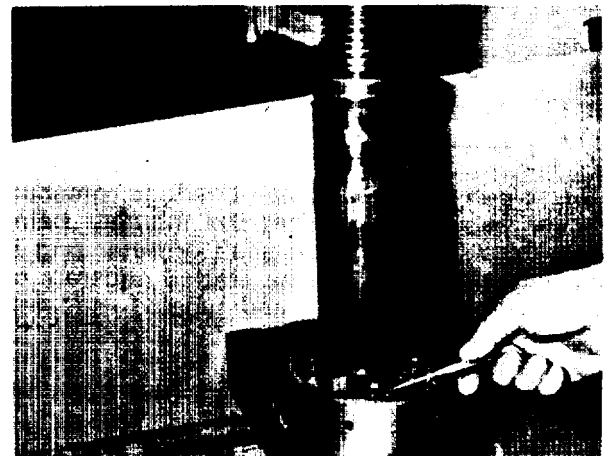


FIGURE 7-23.

**7-28. REVERSE CLUTCH CYLINDER DISASSEMBLY.**

a. Repeat procedures in paragraphs 7-26 and 7-27 to disassemble the reverse clutch pack.

b. If necessary, remove the bearings from the input and output shafts and the cast iron oil seals from the output shafts.



SECTION 7  
TRANSMISSION

**7-20. CLEANING AND INSPECTION.**

a. Clean all parts in solvent and blow them dry with compressed air.

b. Inspect the clutch friction discs and separator plates for excessive wear. Replace them if badly worn.

c. Examine piston seals closely. Replace scratched or worn seals.

d. Inspect all gears and bearings for excessive wear. Replace badly worn parts. Examine oil seals; replace worn or deteriorated seals.

e. Inspect all thrust washers for wear and replace them if necessary.

f. Before assembly, apply Dexron transmission fluid to all surfaces.

**7-30. REASSEMBLY OF FORWARD-REVERSE TRANSMISSION.**

**CAUTION:** Cleanliness is extremely important during the repair and assembly of this transmission. Take every possible precaution to prevent dirt and foreign matter from entering. Apply Dexron transmission fluid to all surfaces.

**NOTE:** Please observe the following general assembly hints.

7-31. When assembling ball bearings, pressure should be applied against the member being assembled (inner ring on shaft or outer ring in housing). Bearing must be started squarely on shaft or in housing, and seated squarely against shoulder. Check housing and shaft for nicks and scratches prior to bearing installation. Always lubricate bearings and bushings during assembly.

7-32. Before installing oil seals, check the shaft and bore for nicks and scratches. Make sure that the seal is started squarely. Always press the seals on the outside diameter, using a thin piece of shim stock around the shaft to protect the sealing edge of the seal against possible damage from keyways and splines. Prelubricate all seals and o-rings immediately before installation.

7-33. Check all snap rings after installation to see that they are securely seated in their

**7-8.**

grooves .

7-34. Check all capscrews and bolts for tightness.

7-35. Read and observe the following assembly instructions.

**7-36. REASSEMBLY OF FORWARD AND REVERSE CLUTCH CYLINDERS (see figure 7-24).**

a. Place the ball bearing into the oil drain hole in the back face of the clutch cylinder assembly (see figure 7-25).

b. Install the outer seal on the clutch piston and the inner seal in the clutch cylinder, prelubricating the seals immediately before installation (see figure 7-26).



FIGURE 7-24.

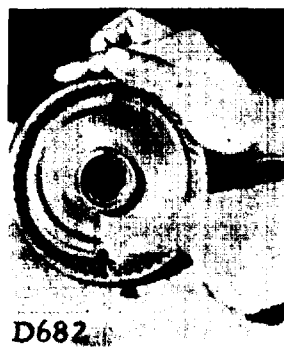


FIGURE 7-25.



FIGURE 7-26.

c. Lower the piston into the clutch cylinder to the bottom of its travel, using an arbor press if necessary (see figure 7-27).

d. Insert the oil clutch spring into the piston. Place the spring retainer in position (see figure 7-28) and depress the spring with a pair of bars under an arbor press so that the snap ring may be installed to retain the spring.

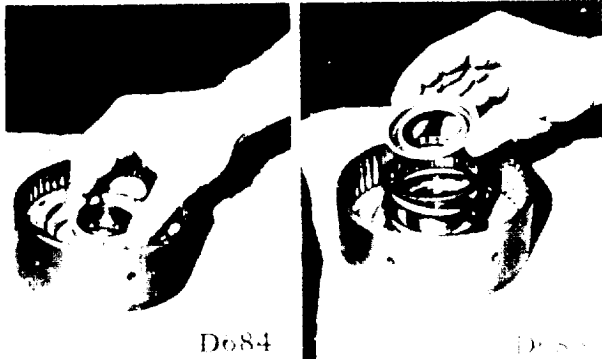


FIGURE 7-27. FIGURE 7-28.  
Make sure that the snap ring is securely seated in its groove (see figure 7-23).

**7-37. REASSEMBLY OF REVERSE CLUTCH-SHAFT AND PACK.**

a. Press the output bearing on the output shaft assembly and secure it with a lock ring (see figures 7-29 and 7-30).

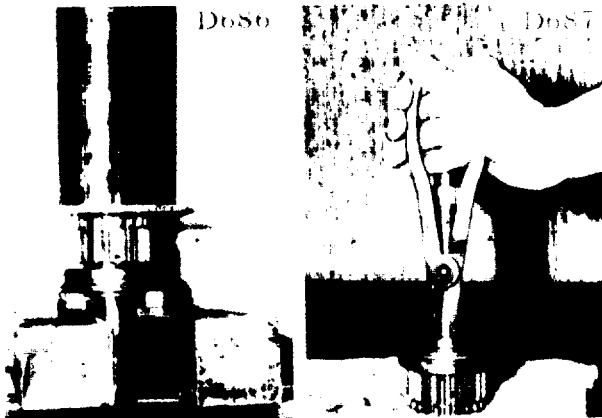


FIGURE 7-29. FIGURE 7-30.

b. Install a thrust bearing. Slide an oiled caged needle bearing over the shaft.

c. Install the output gear assembly, followed by another thrust bearing (see figure 7-31).

d. Lower the reverse clutch hub on the output shaft, thrust face down (see figure 7-32).

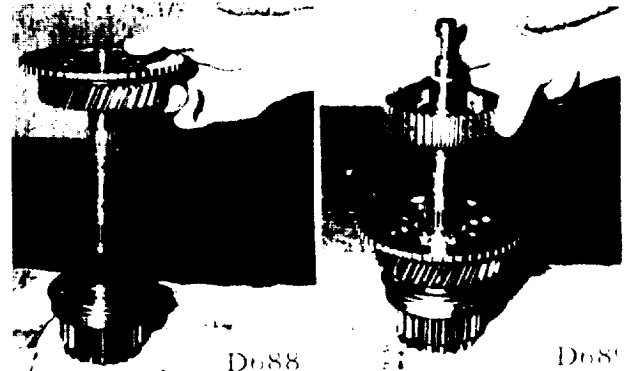


FIGURE 7-31. FIGURE 7-32.

e. Install the snap ring (see figure 7-33) on the output shaft to retain the rear clutch hub, making sure that the ring is securely seated in its groove. Check the output gear for free motion.

f. Prelubricate and install the two seal rings in the two grooves on the output shaft.

**CAUTION:** Do not place a friction plate against the clutch piston. Use a steel separator plate.

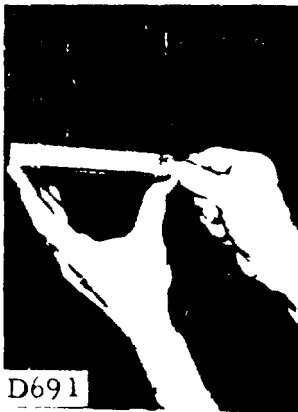


FIGURE 7-33.

**NOTE:** The steel separator plates are slightly conical (dished). Install all plates the same way - with the "dished" side up (see figure 7-34).


**CAUTION:** Center the seal rings in the shaft grooves so that they are not damaged when the clutch cylinder assembly is lowered into place.

**SECTION 7  
TRANSMISSION**



D691

FIGURE 7-34.

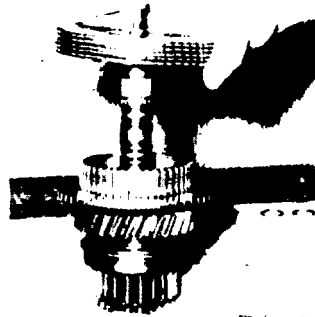

D692

FIGURE 7-35.

g. Place a set of six friction plates and six separator plates over the clutch hub, starting with a steel separator plate against the clutch piston and alternating the plates (see figure 7-35).

h. Lower the clutch cylinder assembly over the clutch stack, aligning the oil drain holes with the missing teeth on the separator plates (see figure 7-36).

i. Install the outer snap ring into the rear clutch cylinder, making sure that the ring is securely seated in its groove (see figure 7-37).



D693

FIGURE 7-36.



D694

FIGURE 7-37.

**7-38. REASSEMBLY OF FORWARD CLUTCH-SHAFT AND PACK.**

a. Prelubricate and install the two seal rings in the upper two grooves on the output shaft.

**CAUTION:** Center the seal rings before lowering the clutch cylinder.

7-10.

b. Lower the front clutch cylinder, with the spring installed as described under items a to d, paragraph 7-37 on the output shaft.

c. Install the snap ring on the output shaft, making sure that the ring is securely seated in its groove (see figure 7-21).

d. Lower the front clutch hub on the splined output shaft with the thrust face up (see figure 7-19).


**CAUTION:** Do not place a bronze frictionplate against the clutch piston. Use a steel separator plate.

**NOTE:** Align the missing teeth on the separator plates with the oil drain holes. The steel separator plates are slightly conical (dished). Install all plates the same way – with the “dished” side down (see figure 7-34).

e. Install a set of six separator and six friction plates, alternating them (see figure 7-20).

f. Install the thrust washer and the caged needle bearing over the output shaft in front of the clutch hub (see figure 7-17 and 7-18).

g. Prelubricate and install the two seal rings on the oil tube and oil sleeve at the inner end of the output shaft assembly (see figure 7-38).

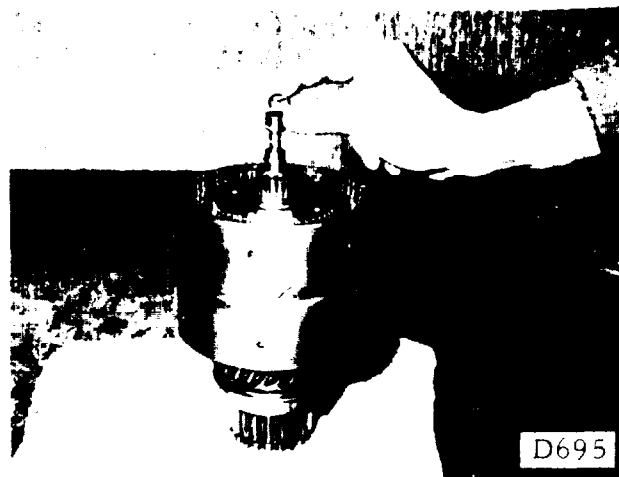

D695

FIGURE 7-38.

**CAUTION:** Center the seal rings in their grooves before lowering the input shaft in place to avoid damage to the seal rings.

h. Install the input bearing on the input shaft assembly and lever the assembly into the front clutch cylinder (see figure 7-16).

i. Install the outer snap ring into the front clutch cylinder, making sure that the ring is securely seated in its groove.

j. Prelubricate and install the three seal rings in the grooves on the input shaft.

**7-38. INSTALLATION OF IDLER GEAR SHAFT.**

a. Install the needle bearings in two rows of 16 and install the three spacers. One spacer goes between the two rows of bearings and one on each side (see figure 7-39).

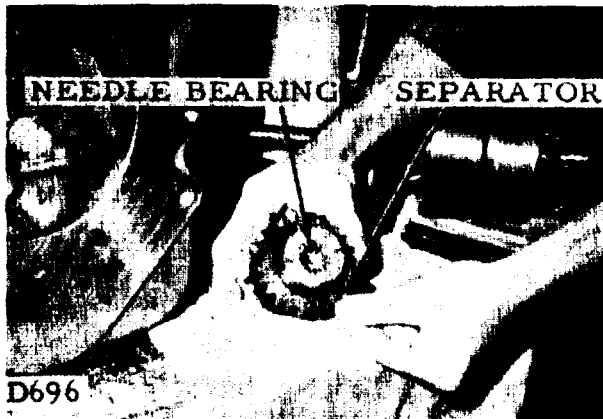


FIGURE 7-39.

b. Install the idler gear to the left of center in this order: (1) thrust washer, (2) gear (with hub toward front), and (3) spacer (see figure 7-40).

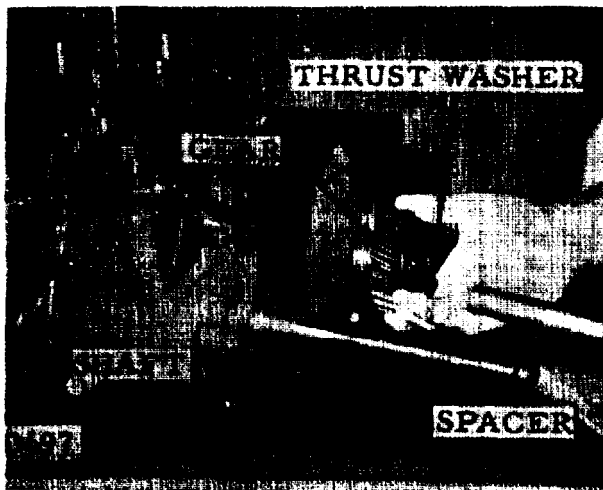


FIGURE 7-40.

c. Put the shaft through the case and idler gear assembly. The shaft should slip freely through until it starts to enter the front end of the case. In this position there exists a press fit between the large end of the idler gear shaft and the rear face of the cage. Use a soft hammer and drift to drive the idler gear shaft into place with the large end just slightly below the rear surface of the case.

**T-40. CLUSTER GEAR AND SHAFT**

a. Place the gear on end. Install one row of bearings with grease (see figure 7-41) then position a bearing spacer at the end (see figure 7-42). Turn the gear over on the end. Install one bearing spacer and the spacer tube, followed by another spacer (see figure 7-43). Then install one row of bearings, bearing spacer, row of bearings and another bearing spacer in this order.



FIGURE 7-41.



FIGURE 7-42.

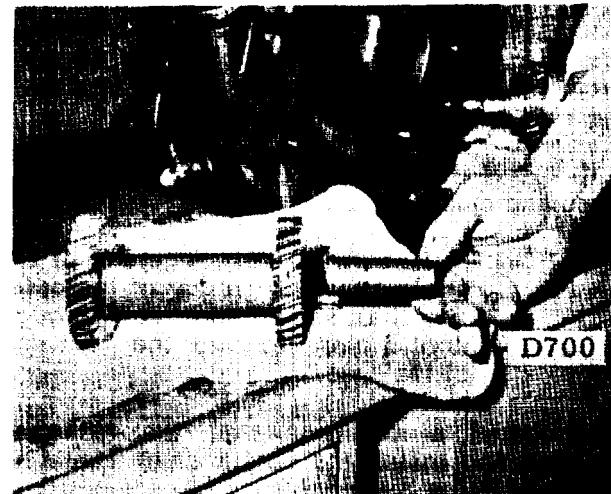


FIGURE 7-43.

## SECTION 7 TRANSMISSION

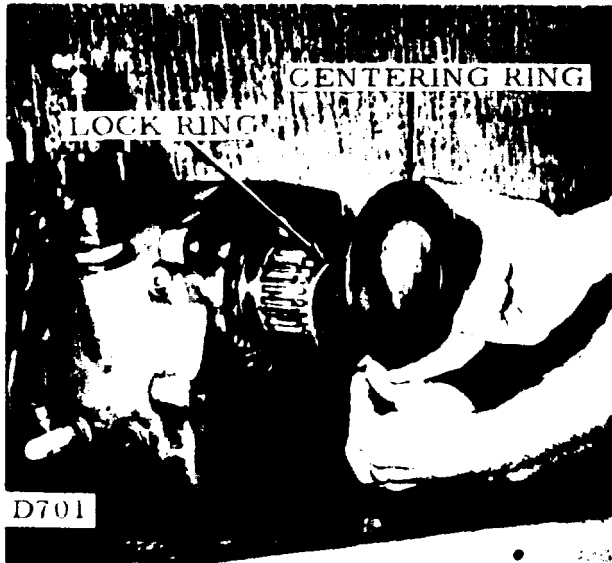


FIGURE 7-44.

**NOTE:** A total of 68 needle bearings should be installed – four rows with 17 each.

b. Carefully lower the cluster gear assembly with the smallest diameter gear forward and hold it so that it will be out of the way for further assembly.

c. Oil the seal rings, bearings, and clutch plates in the shaft and clutch assembly prior to installation in the case.

d. Slide the shaft and clutch assembly into the case, being very careful not to damage the seal rings at the head of the assembly.

e. Lower the cluster gear assembly in place and install a thrust washer at each end. Align the cluster gear, bearings, and thrust washers from each end of the case to allow the cluster gear shaft to drop freely through.

f. Insert the cluster gear shaft through the case and cluster gear assembly.

**CAUTION:** Make sure that the large end of the shaft is toward the rear of the case. The shaft should slip freely through until it starts to enter the front end of the case.

g. Install a lock ring over the rear ball bearing and install the output shaft centering ring (see figure 7-44).

h. Install both corks over the idler and cluster gear shafts (see figure 7-45).

7-12.

### 7-41. INSTALLATION OF CONVERTER CHARGING PUMP.

a. Assemble the pump, making sure that the flathead screw in the rear face of the pump is securely tightened.

b. Soak the pump gasket in oil and install in the front face of the case. Attach the oil pump to the case with the four capscrews and sealing washers.

### 7-42. INSTALLATION OF CONTROL VALVE.

a. Place the control valve assembly on top of the case in the proper position, using five o-rings between the valve body and case and a new gasket. The shift crank is on the right side of the housing.

**NOTE:** Refer to FORWARD-REVERSE CONTROL VALVE in this section for disassembly and assembly of this valve.

b. Install the mounting capscrews and lockwashers. Use Permatex Super 300 type gasket seal (or equivalent) on threads of the capscrews.

c. Install the shifter brackets with the capscrews and lockwashers.

### 7-43. INSTALLATION OF FORWARD-REVERSE TRANSMISSION.

7-44. Refer to the 3-SPEED RANGE TRANSMISSION in this section for installation of the entire assembly.

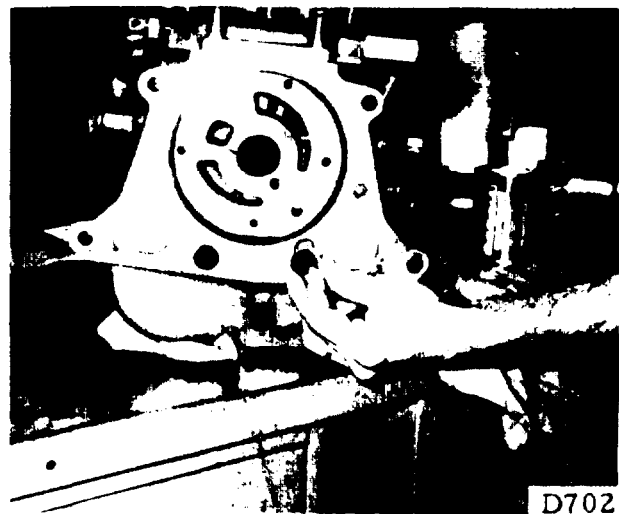


FIGURE 7-45.

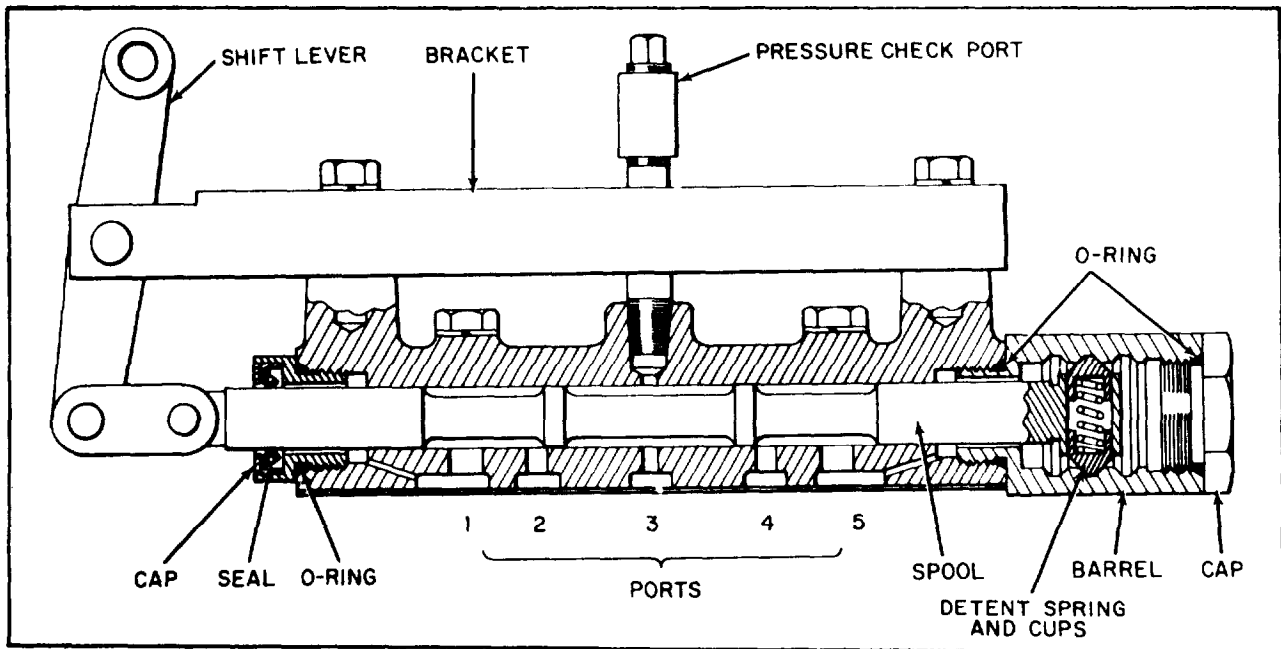


FIGURE 7-46.

**7-45. FORWARD-REVERSE CONTROL VALVE (SW figure 7-46).**

**7-46. GENERAL.**

7-47. The control valve is actuated by the directional throttle control on the dashboard. A detent mechanism on the right side holds the spool in the desired position.

7-48. There are five ports in the housing: (1) reverse dump, (2) reverse charging, (3) neutral, (4) forward charging, and (5) forward dump.

7-49. There is always 160 PSI (11.25 kg/cm<sup>2</sup>) at the pressure check port with the engine running at 1800 RPM.

**7-50. DISASSEMBLY OF CONTROL VALVE.**

a. Disconnect the shift lever from the spool by removing a cotter pin and a connecting pin from spool (see figure 7-47).

b. Remove the four mounting capscrews and lift the valve off the case. Keep track of the o-rings.

c. Remove the link, cap, seal, and o-ring from crank side of the body (SW figure 7-49).

d. Unscrew the barrel and remove the spool with the barrel (SW figure 7-48).

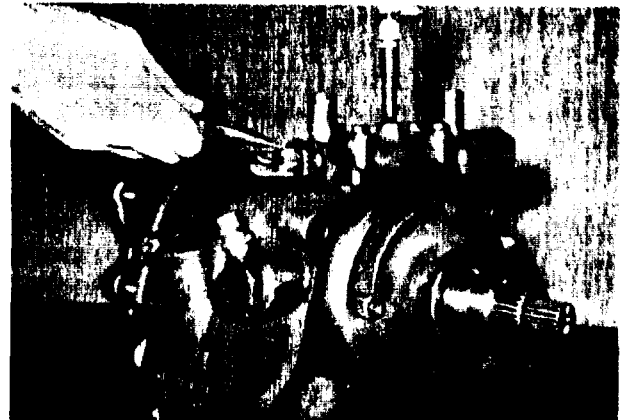


FIGURE 7-47.

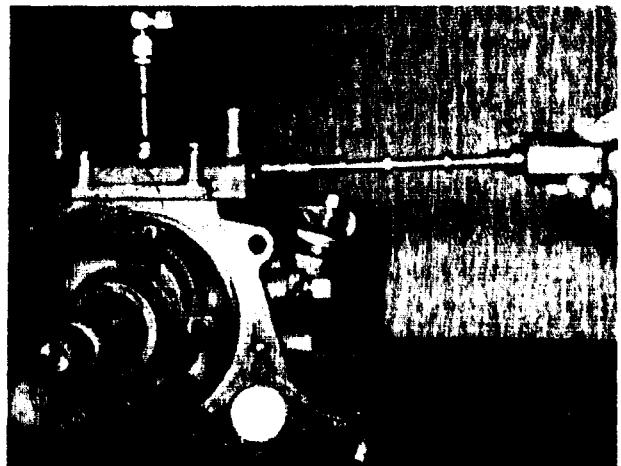


FIGURE 7-48.

## SECTION 7 TRANSMISSION



D706

FIGURE 7-49.



D707

FIGURE 7-50.

e. Clamp the barrel into a soft vise and unscrew the cap (see figure 7-50).

f. Extract the detent mechanism from the barrel, catching the spring and cups with a rag.

### 7-51. INSPECTION AND CLEANING.

a. Wash all parts with clean solvent.

b. Blow dry with air. Do not wipe parts dry with a rag to prevent lint from entering the valve.

c. Inspect the spool for nicks, scratches and burrs. Small scratches can be removed with crocus cloth. Large nicks and burrs require replacement of the part.

d. Inspect o-rings and the seal for wear or nicks and replace them if necessary.

### 7-52. REASSEMBLY OF CONTROL VALVE.

a. install the o-ring, seal and cap at the crank side of the case.

b. Assemble the spring and detent cups in the spool.

c. Compress the spring with the cups and slide assembly into the barrel.

d. install the cap.

e. install the spool in the housing. Attach the crank mechanism with the crosspin and cotter pin.

### 7-53. INSTALLATION OF CONTROL VALVE.

a. Place the control valve assembly on top of the case with the shift on the right side of

the case. Replace the gasket and the five o-rings.

b. Install the four mounting capscrews and lockwashers. Use Permatex 300 type gasket seal (or equivalent) on the threads of the capscrews.

### 7-54. CONTROL CABLE ADJUSTMENT (see figure 7-51).

a. Put the control valve spool into neutral.

b. Put the direction-control lever into neutral - low idle position.

c. Tighten jam nuts on each side of cable mounting bracket.

d. Adjust rod ends at the control valve and under the dash board so that they will fit the ball joints.

e. Tighten jam nuts against rod ends.

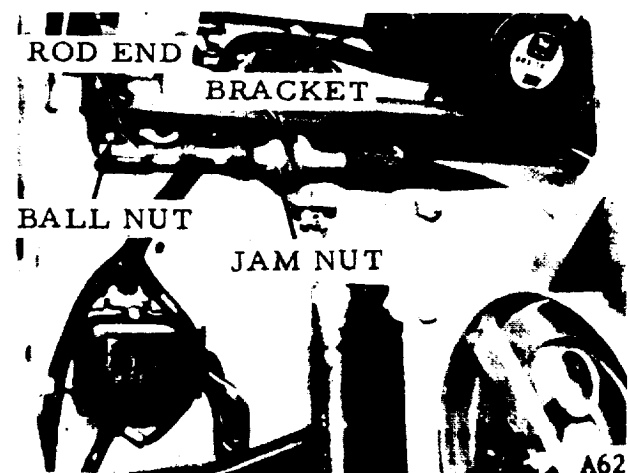


FIGURE 7-51.

### 7-55. PERFORMANCE CHECKS.

#### 7-56. HIGH IDLE.

7-57. Attach a tachometer to the engine with the transmission in neutral. Rev up the engine to governed RPM with the transmission in forward. if governed RPM of 2800 is not reached, check the control and governor linkage to make sure that the governor is held wide open, or tune up the engine. Make the same check with the transmission in reverse.

#### 7-58. CONVERTER STALL SPEED (1850 ± 100 RPM).

7-59. Place the transmission in high gear and lock the brakes. Turn up the engine to the minimum static RPM (refer to Section 2). If the RPM is less than this, tune up the engine. If the engine speed is over the maximum static RPM, the torque converter or the hydraulic clutches in the transmission are slipping.

**7-60. PRESSURE CHECKS.**

7-61. If a check indicated problems with the converter or the forward-reverse transmission, first check the oil level (see figure 7-10). Then check the oil pressures.

7-62. Install a 300 PSI (21.1 kg/cm<sup>2</sup>) pressure gauge in the pipe fitting located on top and the front end of the transmission (see figure 7-52). With the engine turning approximately 1500 RPM, the pressure should read 150 PSI (10.5 kg/cm<sup>2</sup>) minimum. If there is less pressure, remove, clean and check the pressure regulator valves as follows:

a. Remove the upper regulator cap on the left hand side of the transmission near the front end of the case (see figure 7-52). Remove the spring, valve and guide pin (see figure 7-53). Thoroughly clean the valve port as well as the various parts of the valve. Set the parts of the upper regulator valve aside so that they will not be mixed up with other parts.

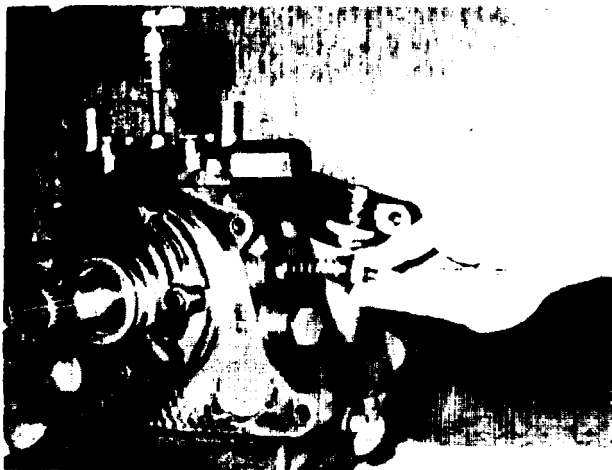


FIGURE 7-52.

b. Install the upper regulator cap only in the upper regulator valve.

c. Remove the lower regulator cap, spring, valve and guide pin (see figure 7-53). Thoroughly clean the valve port as well as the various parts of the valve.

d. Reassemble the lower regulator valve completely.

e. A pressure reading can now be taken on the lower regulator valve, using the gauge previously installed in the check port. The lower regulator should be set at 75 to 80 PSI (5.27-5.62 kg/cm<sup>2</sup>).

f. The pressure of the regulators can be adjusted by adding (increased pressure) or removing (decreased pressure) 5/16 inch (7.94 mm) washers under the springs in the regulator caps.

g. Remove the upper regulator cap and reassemble the upper regulator valve completely.

h. The upper regulator valve should now be set to read 160-170 PSI (11.25-11.95 kg/cm<sup>2</sup>) at 1800 RPM in neutral. However, the pressure will drop momentarily to about 60 PSI (4.22 kg/cm<sup>2</sup>) when the clutches are engaged. With the engine idling, the regulator should read approximately 100 PSI (7.03 kg/cm<sup>2</sup>).

i. With new oil in the unit, the pressure regulator valves may buzz. This is due to foaming in the oil. Do not read the pressure gauge when the regulator valves are buzzing. Idle the engine for several minutes, then rev up and read the pressure gauge.

j. The 10 PSI (.703 kg/cm<sup>2</sup>) pressure regulator valve (see figure 7-54) located on the right hand side of the unit, is rarely a source of service problems. However, if the valve should require cleaning, follow the steps described above for the other two regulator valves. Pressure will read as high as 25 PSI (1.76 kg/cm<sup>2</sup>) at high idle. This is normal. No adjustments should be made unless pressure reading is less than 10 PSI (.703 kg/cm<sup>2</sup>).


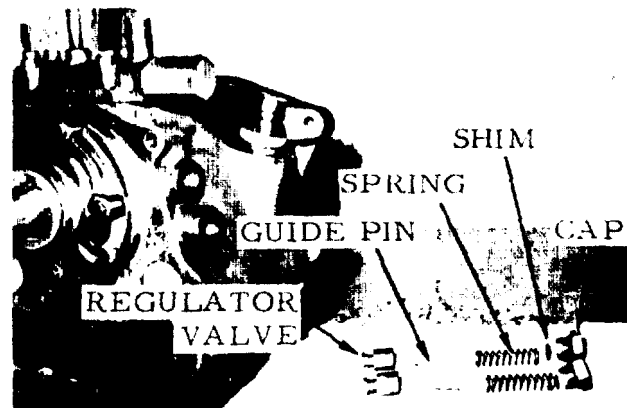


FIGURE 7-53.



**SECTION 7  
TRANSMISSION**

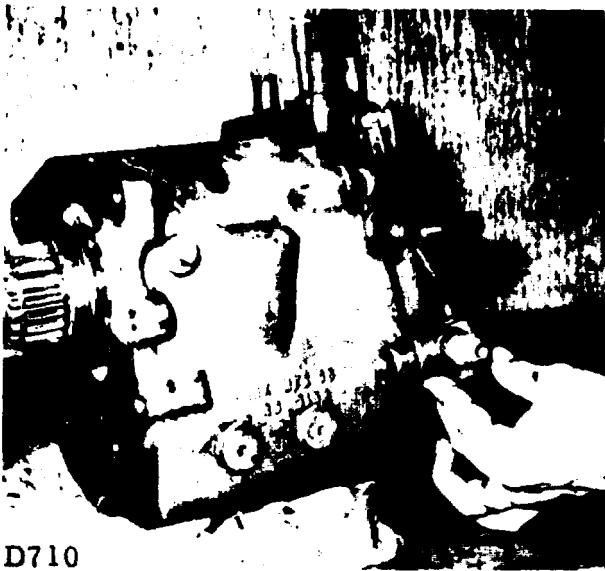

D710

FIGURE 7-54.

**7-63. 3-SPEED RANGE TRANSMISSION (see figure 7-55).**

**7-64. GENERAL.**

7-65. The 3-speed, constant mesh transmission has its oil supply common with the forward-reverse transmission. The output shaft-of the forward-reverse transmission serves as an input

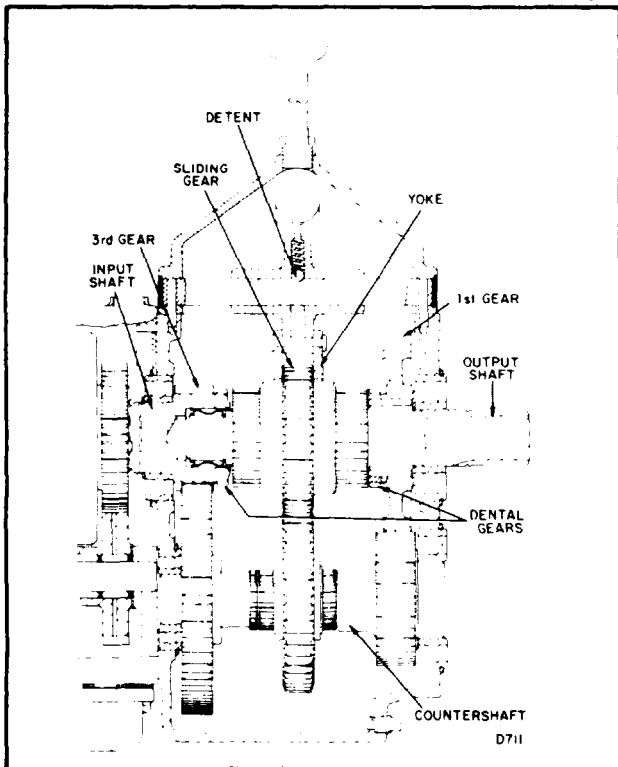


FIGURE 7-55.

7-16.

shaft for the range transmission. The speed ranges are selected with a sliding clutch and two dental clutches.

**7-66. REMOVAL OF 3-SPEED RANGE TRANSMISSION.**

7-67. To separate the range transmission, remove the capscrews which fasten the forward-reverse transmission and the transfer box adapter to it.

**7-68. DISASSEMBLY OF 3-SPEED RANGE TRANSMISSION.**

a. Unscrew the capscrews securing the shift tower to the case. Jar the cover to loosen it. Lift the cover off the case. Remove the gasket.

**CAUTION:** The tower is doweled to the case with two roll pins. Using undue force to loosen or remove the tower may result in a damaged case, tower or pins.

b. Remove the shifter yoke only if necessary and as follows:

(1). Clamp the tower in a vise equipped with soft jaws. Extract the roll pins (see figure 7-56).

(2). Drill a hole in the center of the expansion plug at one end of the yoke shaft. Insert a drift in the hole and pry the plug out.

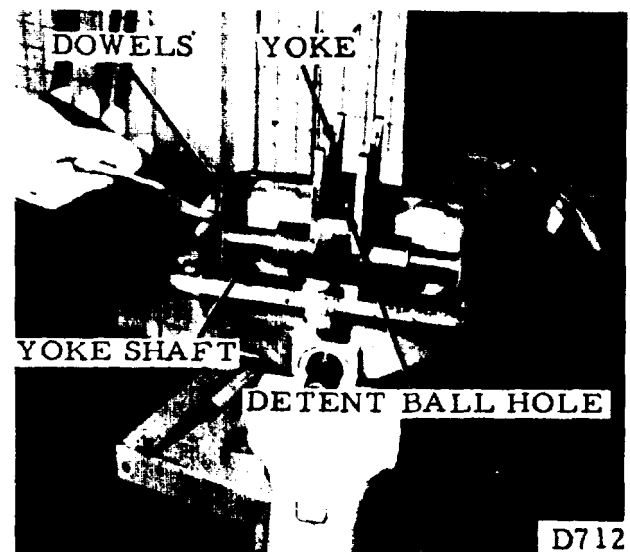


FIGURE 7-56.

(3). Using soft bar stock with a diameter smaller than that of the yoke shaft and pressing against the exposed end of the shaft, press the shaft out of the tower.

**WARNING:** Do not look directly into the tower during step (4). During this step a spring-loaded detent ball is released.

(4). Cover the detent ball hole with a cloth and wrap the cloth around the yoke shaft. Extract the drift.

**NOTE:** The detent ball and spring are trapped in the yoke by the bar stock when the split line between shaft and bar passes over them.

c. Remove the shifter crank only if necessary and as follows:

(1). Remove the shifter yoke. Refer to step b.

(2). Unscrew the plug in the apex of the shift tower. Using a hammer and drift, drive out the roll pin securing the crank to its shaft (see figure 7-57).



FIGURE 7-57.

(3). Extract the crank shaft.

(4). Pry the shaft seal out only if necessary (see figure 7-58).

d. Push on the front end of the countershaft until the bearing and gear are out of the case. Allow the assembly to rest on the bottom of the case.

e. Remove the snap ring from the output shaft rear bearing. While supporting the front

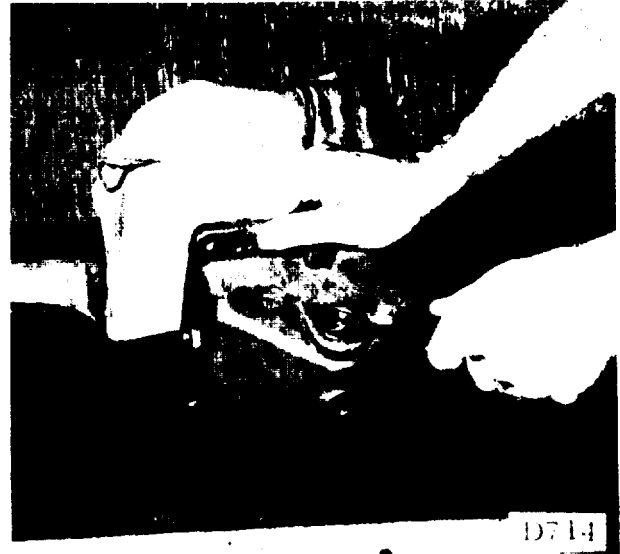


FIGURE 7-58.

end of the output, push on the bearing to force it and the shaft into the case.

**NOTE:** An alternate method to step e is to extract the bearing first and then to push the output shaft into the case. This, however, increases the possibility of pushing the shaft through the large gear and allowing the needle bearings to drop into the case.

f. Lift the output end of the shaft out the top of the case (see figure 7-59). Grasping the end of the shaft, lift the gear and output shaft assembly out of the case.

**NOTE:** In step f, do not lift the assembly by the large gear. Doing so will pull the gear off the shaft and allow the bearing to drop into the case.


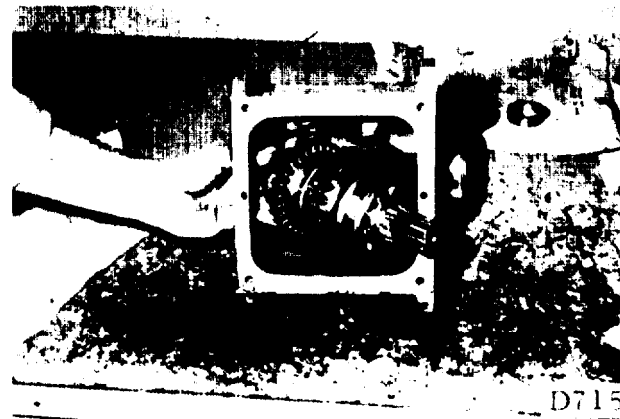


FIGURE 7-59.

**SECTION 7  
TRANSMISSION**

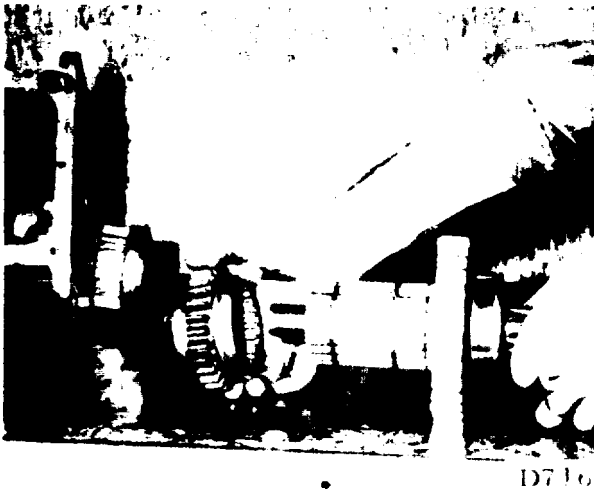


**FIGURE 7-60.**


- g. Pull the bearing off the output shaft.
- h. Pull the sliding gear off the output shaft (see figure 7-69).
- i. Set the forward end of the output shaft on a clean surface. Lift the thrust washer off the output end of the shaft (see figure 7-61). Lift the gear off the shaft. Be careful not to lose any bearings. Place them in a container.

**NOTE:** Count the bearings; there should be 39.

- j. Pull the rear countershaft bearing out of the housing (see figure 7-62).
- k. Lift the large gear end of the countershaft. Pull the shaft and gear assembly out the top of

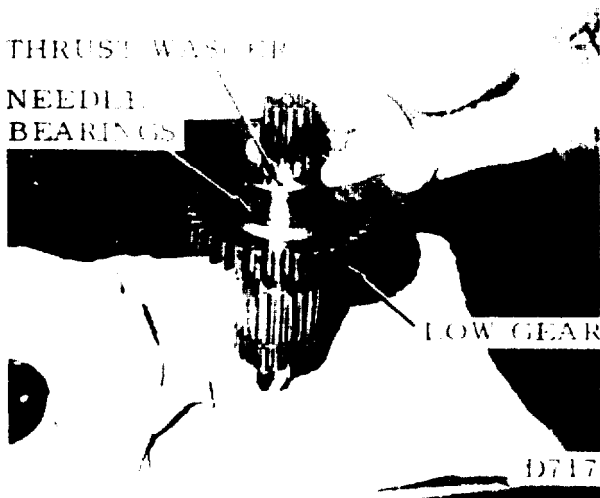

**FIGURE 7-61.**

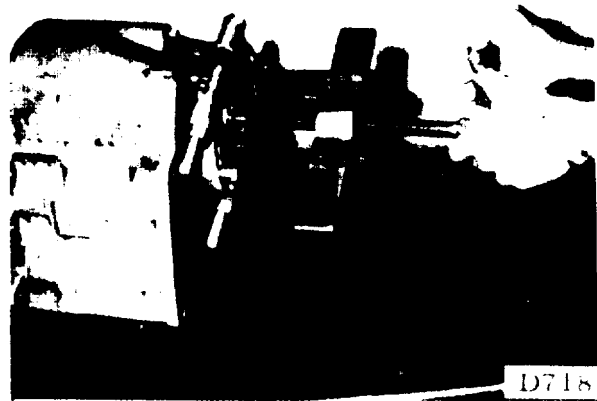

**FIGURE 7-62.**


the case (see figure 7-63).

l. Disassemble the countershaft only if necessary and as follows:

- (1). Press the shaft out of the drive gear and bearings (see figure 7-64).
- (2). Remove the snap ring, retaining the intermediate gear (see figure 7-65). Press the shaft out of the gear. Remove the second snap ring only if necessary.

**7-69. CLEANING AND INSPECTION.**

a. The case may be steam cleaned. If caustic solution is used, rinse all the caustic from the case. Apply oil to all machined

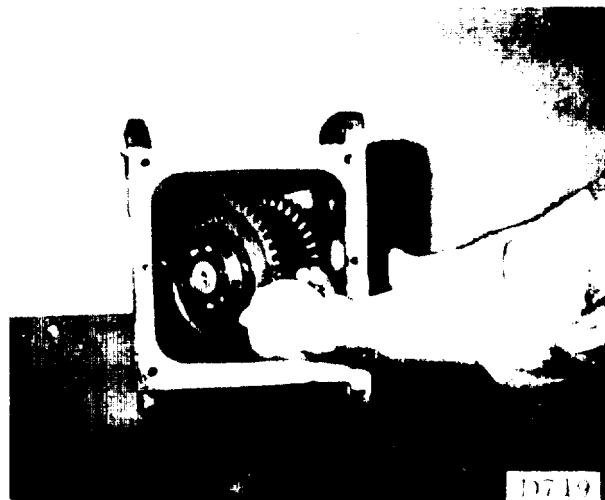

**FIGURE 7-63.**

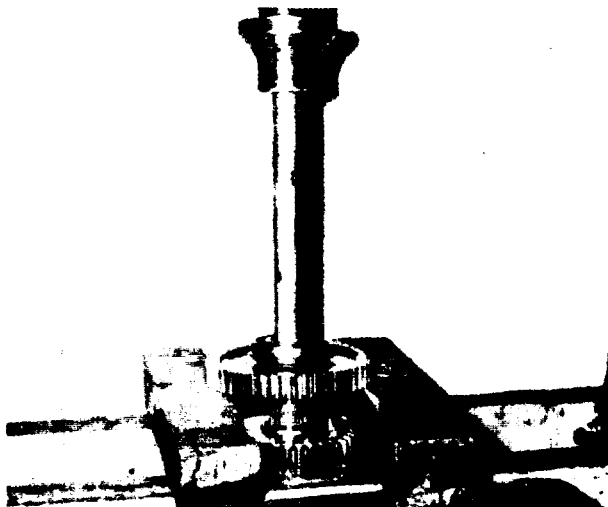


FIGURE 7-64.

surfaces.

b. Use solvent to clean gears, shafts and bearings.

c. When drying bearings with air, do not spin them or the dry surfaces may wear quickly.

d. Inspect shafts and shifter fork for excessive wear and replace them as necessary. The shaft bores should not be elongated.

e. Inspect gears and splines for wear, nicks, burrs and chips. Minor defects can be removed with fine sandpaper or India stone.

#### 7-70. REASSEMBLY OF 3-SPEED RANGE TRANSMISSION.

a. Assemble the countershaft as follows:

(1). Install a snap ring in the groove closest to the low gear.

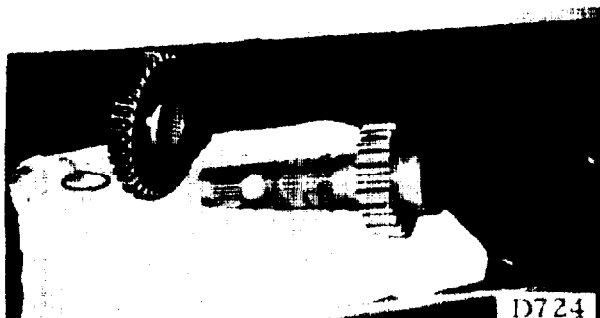


FIGURE 7-65.

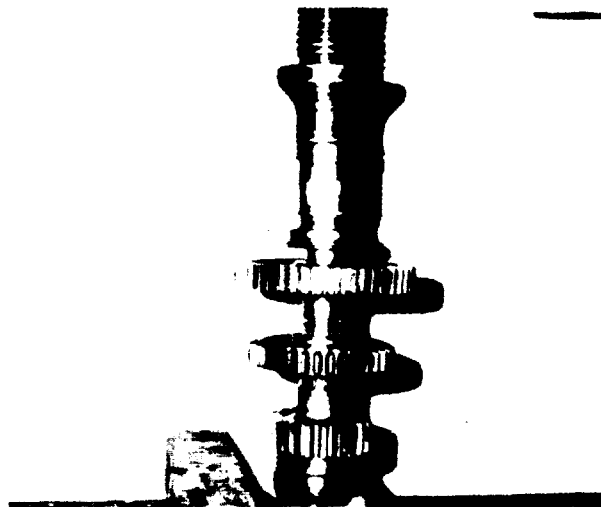


FIGURE 7-66.

(2). Press the counter-shaft into the intermediate gear. Secure the gear with the other snap ring.

**NOTE:** The gear hub must be away from the bearing or the high gear cannot be engaged.

(3). Press the drive gear and bearing on the front end of the shaft (see figure 7-66).

**NOTE:** The bearing snap ring should be close to the gear.

b. Lower the countershaft and gear assembly into the transmission, rear end first and guide this end through its bore in the back of the case (see figure 7-63).

c. Push the countershaft into its rear bore nearly to the intermediate gear. Place a 2x4 wooden block between the front of the shaft and case. Rest the case on its front face and the countershaft on the block. Set the rear bearing on the countershaft, snap ring out. Drive the bearing onto the shaft using a sleeve which contacts the bearing inner race only (see figure 7-67).

**NOTE:** Install the low driver gear with the dental teeth toward the sliding gear.

d. Insert the small splined end of the output shaft through the low driven gear. Fill the space between the gear and shaft with needle bearings with oil or grease. Manually spin the gear. Slide the wear plate over the splined end of the shaft (see figure 7-68).

SECTION 7  
TRANSMISSION

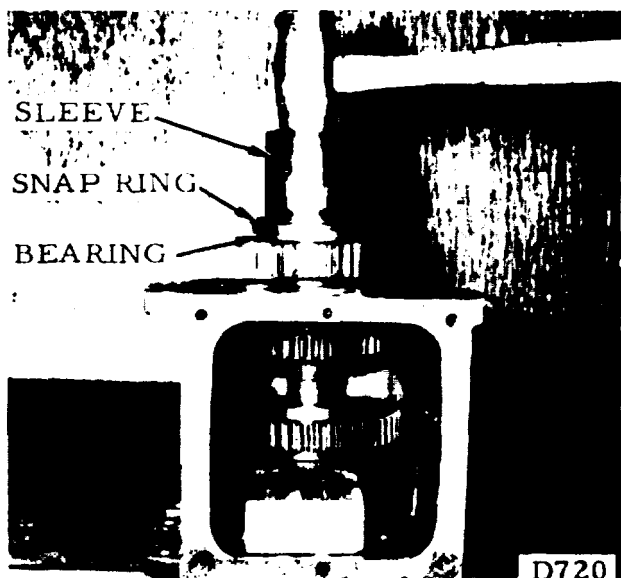


FIGURE 7-67.

f. Work the output shaft back into its bore as far as possible.

g. Install the snap ring on the output shaft bearing. With snap ring out, slide the bearing over the shaft and push it against the wear plate.

h. Lift the output shaft by both ends. Align the bearing with its bore. Start the bearing into its bore (see figure 7-69). Push the bearing into the bore until the snap ring contacts the case.

i. Install the shifter yoke, if it has been removed, as follows:

(1). Start the yoke shaft into one of its bores in the tower. Push the shaft partially into the

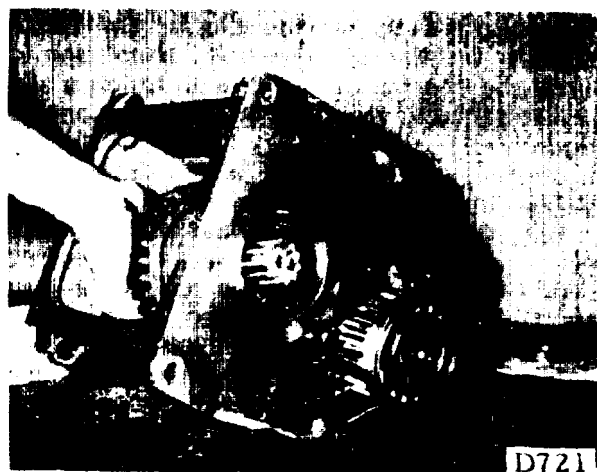


FIGURE 7-68.

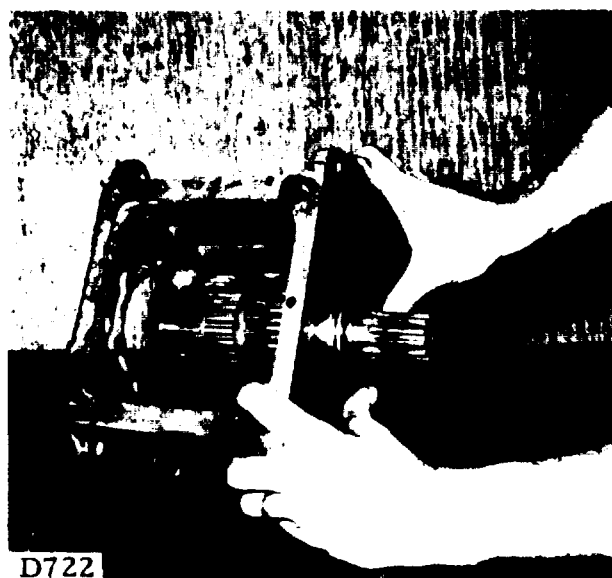


FIGURE 7-69.

tower.

(2). With the crank pin slot in the yoke in line with the crank pin, lower the yoke into the tower (see figure 7-70). Align the yoke bore with the end of the shaft in the tower. Push the shaft partially into the bore.

(3). Drop the spring into the hole between the yoke plates. Place the detent ball on top of it. Insert a punch into the hole. Push the detent ball down and push the shaft into the yoke bore and over the detent ball and spring, withdrawing the punch at the same time (see figure 7-71).

(4). Rotate the shaft until the detents are on the ball side. Push the shaft through the

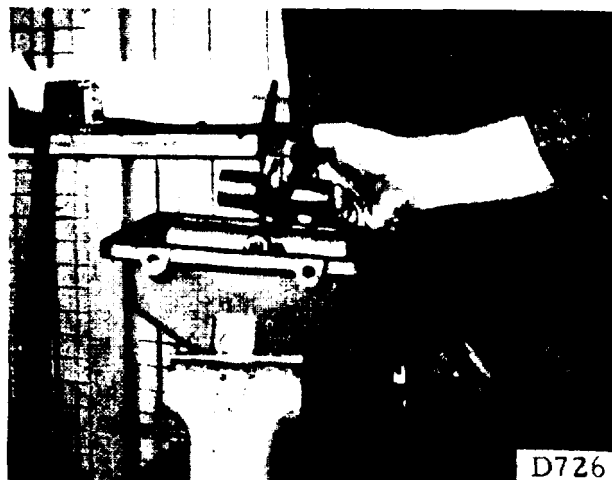


FIGURE 7-70.

yoke and into the other tower bore.

(5). Align the pin holes. Start the pins into the tower and drive them into position. Install the expansion plugs at each end of the shaft (see figure 7-72).

j. Install the shift tower crank and shaft, if removed, as follows:

(1). Press the new seal into the shift tower with the lips towards the inside.

(2). Make sure the shaft chamfered end is smooth. Lubricate the shaft. Push the chamfered end of the shaft through the seal and partially into the tower.

(3). Align the pin hole end of the crank with the chamfered end of the shaft. Press the shaft through the crank until it protrudes slightly from the other end. Slide the o-ring over the chamfered end of the shaft (see figure 7-73).



FIGURE 7-71.



FIGURE 7-73.



FIGURE 7-72.

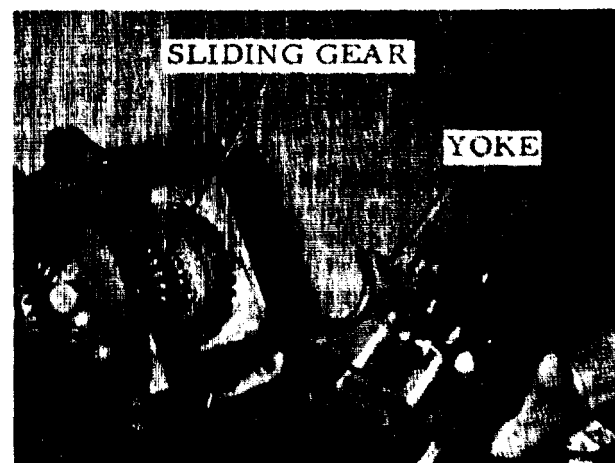


FIGURE 7-74.

(4). Press the shaft completely into position. Align the crank pin hole with the shaft pin hole. Start the pin into the crank and drive it into place (see figure 7-57).

(5). Screw the plug into the apex of the tower securely. Install the shifter yoke as outlined in step k.

k. Place a gasket on the shift tower mounting surface. Align the shifter yoke with the sliding gear. Set the cover in place on the transmission case, making sure the yoke straddles the sliding gear (see figure 7-74). Secure the tower with its capscrews.

### 7-71. INSTALLATION OF 3-SPEED RANGE TRANSMISSION.

7-72. To attach the 3-speed transmission to the forward-reverse transmission and the transfer case adapter, install the mounting capscrews between these components.

## SECTION 8

### FINAL DRIVE AND TRANSFER CASE

#### 8-1. GENERAL.

8-2. This section contains a description of the final drive and transfer case for the C530A Compactor. Also included are overhaul instructions with removal, disassembly, cleaning and inspection, reassembly and installation of components.

8-3. Design specifications are presented in Section 2 and a troubleshooting guide is presented in Section 5.

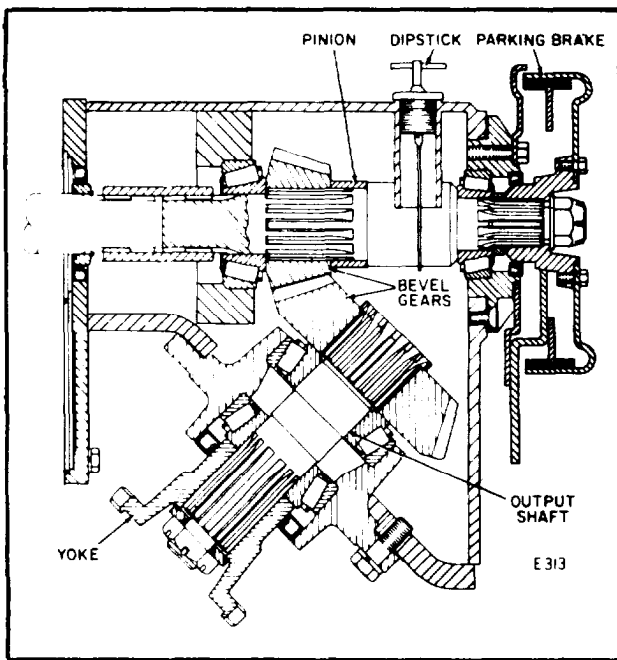


FIGURE 8-1.

8-4. TRANSFER CASE (see figure 8-1).

#### 8-5. GENERAL.

8-6. The transfer case is located behind the 3-speed transmission. It provides a redirection of the power flow to the differential and additional gear reduction of 1.73:1.

8-7. The transfer case consists of a housing which contains a set of bevel gears whose shafts lie at 45° angles.

#### 8-8. REMOVAL OF TRANSFER CASE.

8-9. The transfer case may be removed by one of two methods:

a. Removal of transfer case by itself through the cockpit.

8-1.

b. Removal with the engine, transmission and transfer case as a package.

8-10. Removal of transfer case alone.

a. Remove floor plate from cockpit.

b. Remove parking brake actuating cable.

c. Disconnect universal joint, (this must be done from below) and slide companion flange back.

d. Remove capscrews holding the transfer box to the transmission.

e. Sling the transfer box.

f. Pull rearward to disengage the spline and hoist the transfer box away.

#### 8-11. DISASSEMBLY OF TRANSFER CASE.

**NOTE:** Drain the oil and remove the dipstick.

a. Remove the eight (8) capscrews that secure the bevel gear bearing retainer (see figure 8-2). Remove the bevel gear assembly (see figure 8-3).

b. Remove the six (6) capscrews holding the forward pinion shaft bearing retainer, and remove the retainer (see figure 8-4).



FIGURE 8-2.



FIGURE 8-3.

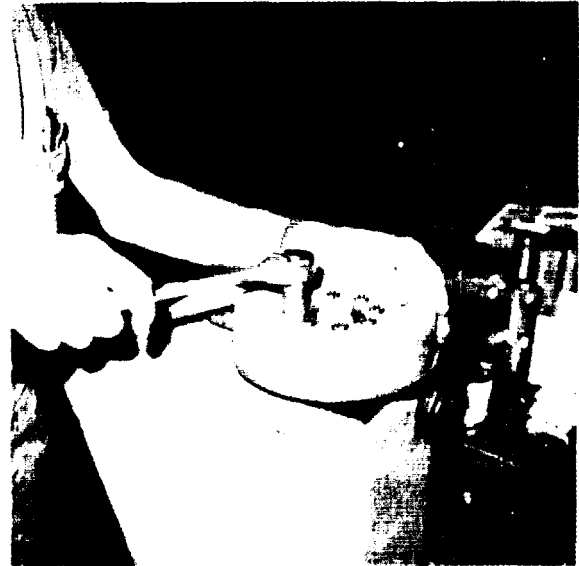


FIGURE 8-5.



FIGURE 8-4.

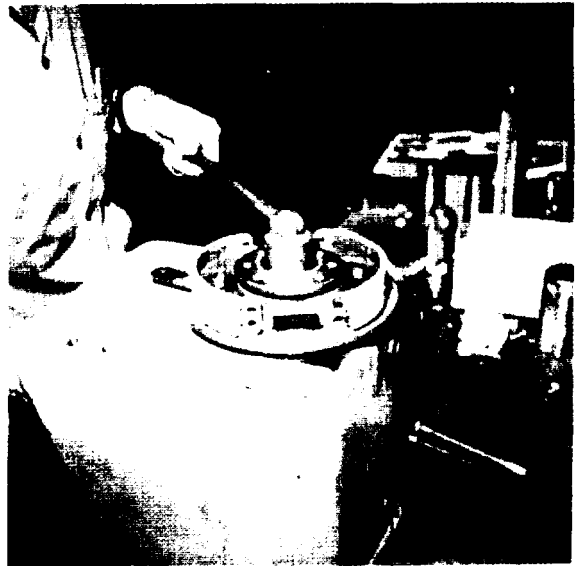


FIGURE 8-6.

c. Remove the parking brake.

(1). Remove the capscrews from the drum and remove the drum (see figure 8-5).

(2). Remove the brake shoes and pivot plate.

(3). Remove the castle nut. It will be necessary to clamp onto the spline hub at the opposite end of the pinion shaft to keep the shaft from turning (see figure 8-8).

(4). Remove the hub and spacer.

(5). Remove the capscrews from the backing plate and remove the backing plate.

d. Remove the capscrews and the two (2) Allen head screws from the rear pinion shaft bearing retainer. Remove the retainer and shims (see figure 8-7).

e. Remove the bearing cup, preferably with a press.

f. Pull the bearing. Start with a drift, then apply a puller.



**SECTION 8  
FINAL DRIVE AND TRANSFER CASE**

g. The pinion shaft with the pinion and forward bearing still installed may be removed by pushing it back through the rear bearing bore and then tilting the forward end downward and through the lower bore (see figure 8-8).

h. The cup may be removed.

**8-12. DISASSEMBLY OF GEAR ASSEMBLY.**

a. Unstake and remove the nut at the end of the gear shaft (see figure 8-9).

b. Remove the o-ring from the spacer and remove the spacer (see figure 8-10).

c. Remove the yoke.

d. Press the shaft, gear and Inboard bearing from the outboard bearing and retainer (see figure 8-11).

e. Press the shaft from the gear and inboard bearing (see figure 8-12).

f. Remove the cups from the retainer.

**8-13. DISASSEMBLY OF PINION SHAFT.**


a. Press the shaft from the pinion (see figure 8-13).



**FIGURE 8-7.**



**FIGURE 8-9.**

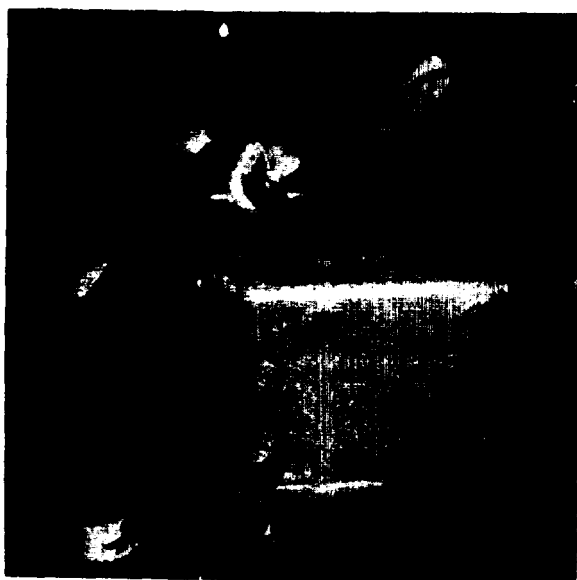

**FIGURE 8-8**



**FIGURE 8-10.**

b. Slip off the spacer.

**8-14. REASSEMBLY.**

**8-15. REASSEMBLY OF TRANSFER BOX.**

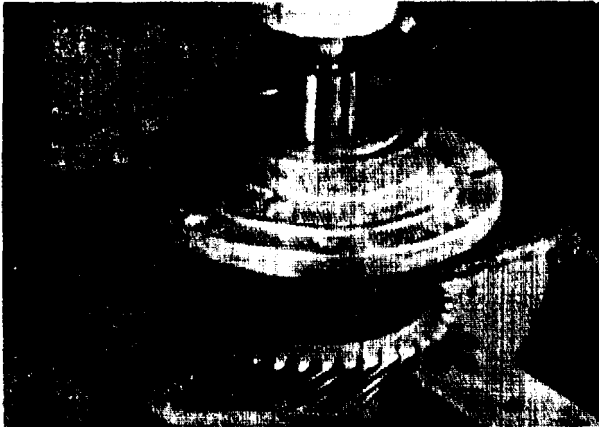


FIGURE 8-11.



FIGURE 8-12.

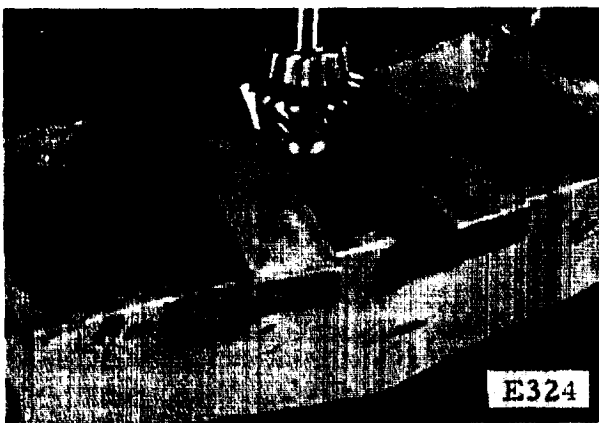


FIGURE 8-13.

**8-16. SHIM THICKNESS (see figure 8-14).**

**NOTE:** If a new pinion shaft bearing or pinion is not installed, skip Instruction a, this paragraph and step g in this paragraph.

a. For proper positioning of the pinion it may be necessary to adjust the shim thickness behind the forward bearing retainer. To determine the shim thickness, proceed as follows:

(1). Take distance "D" from the housing mounting face to the imaginary intersection of the two shafts, which is stamped on the mounting face (see figures 8-14 and 8-15).

(2). From "D" subtract mounting distance "A", (etched on rear of pinion) (see figure 8-16) plus width across bearing races "B" (see NOTE below). The remainder equals the shim thickness.

$$\text{Example: } D - (A + B) = \text{Shim Thickness}$$

**NOTE FOR DIMENSION "B":** To measure the bearing thickness, insert bearing cone into cup. Measure the thickness with a micrometer (see figure 8-17).

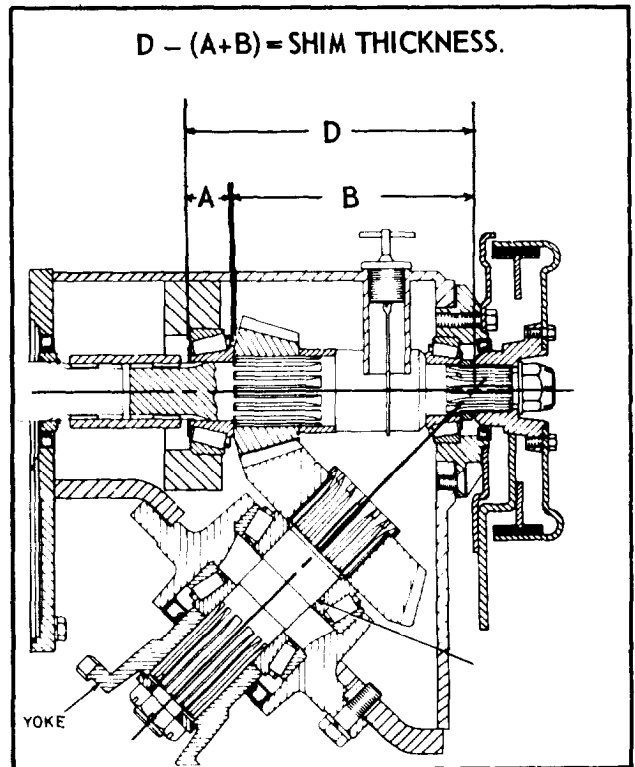


FIGURE 8-14.

SECTION 8  
FINAL DRIVE AND TRANSFER CASE



FIGURE 8-15.

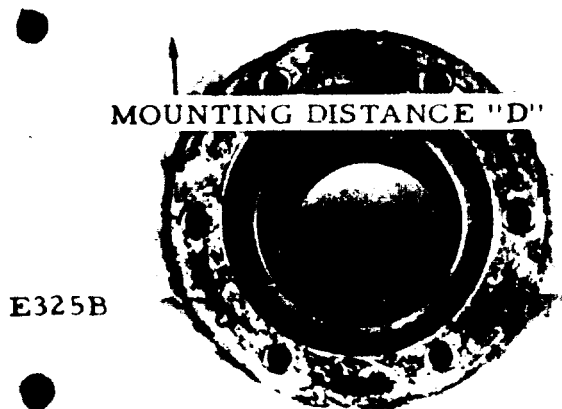


FIGURE 8-16.



FIGURE 8-17.

8-17. REASSEMBLY OF PINION SHAFT.

a. Assemble the spacer, pinion and forward bearing onto the pinion shaft (see figure 8-18).

b. Install the rear bearing onto the pinion shaft (see figure 8-19).

c. install the cup for the forward bearing.

d. Put the assembled pinion shaft through the lower bearing retainer bore. Project it through the rear bearing bore and bring it into position (see figure 8-20).

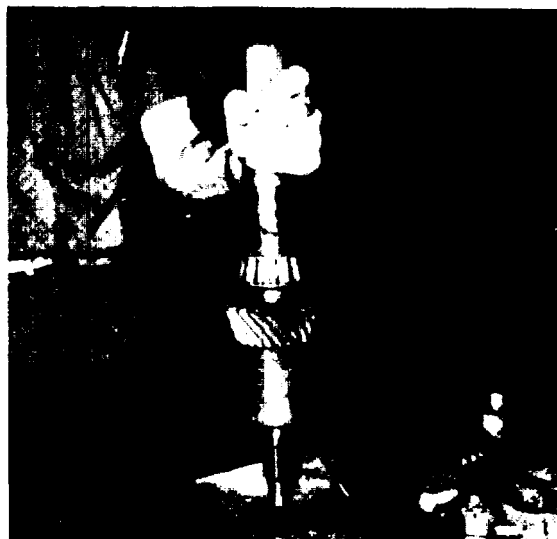


FIGURE 8-18.

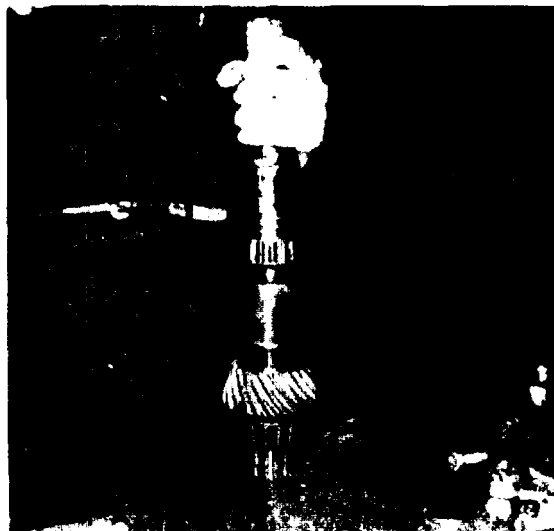


FIGURE 8-19.



FIGURE 8-20.

e. Install the shims (as calculated in step a) and forward bearing retainer. Tighten the retainer capscrews to 30 ft.-lbs. (4.15 kg-m).

1. Install the cup-for the rear bearing.

NOTE: Skip step g if new bearings or pinion are NOT installed.

g. Assemble the rear bearing retainer to the case. By using a feeler gauge between the retainer and the housing, approximate shim thickness can be determined. Remove the retainer.

h. Assemble the rear retainer with the shims onto the case. Tighten the capscrews to 30 ft.-lbs. (4.15 kg-m). The preload on the bearings should be 5-15 in.-lbs. (.058-.173 kg-m).

- i. insert the seal into the retainer.

#### 8-18. REASSEMBLY OF PARKING BRAKE.

NOTE: See PARKING BRAKE In the BRAKE Section.

a. Install the backing plate onto the bearing retainer. Tighten the place bolts to 30 ft.-lbs. (4.15 kg-m).

b. Assemble the spacer and brake drum hub onto the shaft.

- c. Assemble the washer and nut onto shaft

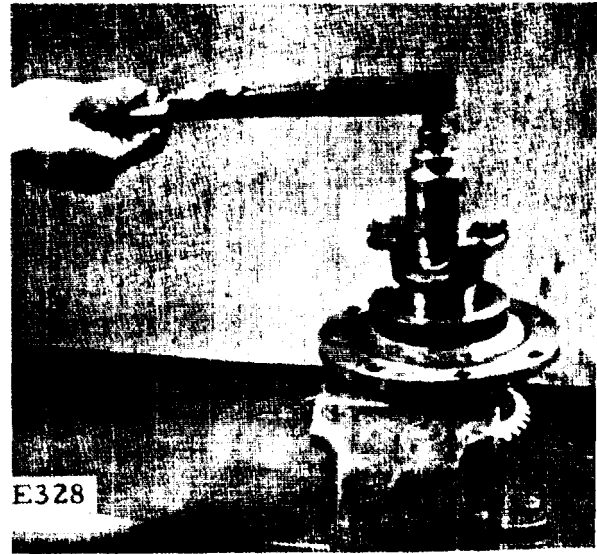


FIGURE 8-21.

The nut should be tightened to 100 ft.-lbs. (13.82 kg-m) minimum.

- d. Secure the cotter pin into the nut.

e. Assemble the brake drum onto the hub. Tighten the place bolts to 30 ft.-lbs. (4.15 kg-m).

#### 8-19. REASSEMBLY OF OUTPUT SHAFT.

- a. Press the gear onto its shaft.

- b. Press the inboard bearing onto the shaft.

c. Assemble both bearing cups into the retainer.

d. Install gear-shaft assembly into bearing retainer and press the outboard bearing on.

- e. Insert the oil seal.

- f. Insert the oil seal into the retainer.


g. Assemble drive shaft yoke, washer with two o-rings, and stake nut. When the stake nut is tight, the preload on the bearing is 10-20 in.-lbs. (.115-.230 kg-m) (see figure 8-21).

#### 8-20. ADJUSTMENT OF BACKLASH OF BEVEL GEAR SET.

a. As a starting point, put a .030 in. (.782 mm) shim behind the gear bearing retainer.

- b. Adjust shim thickness so that backlash is

**SECTION 8**  
**FINAL DRIVE AND TRANSFER CASE**

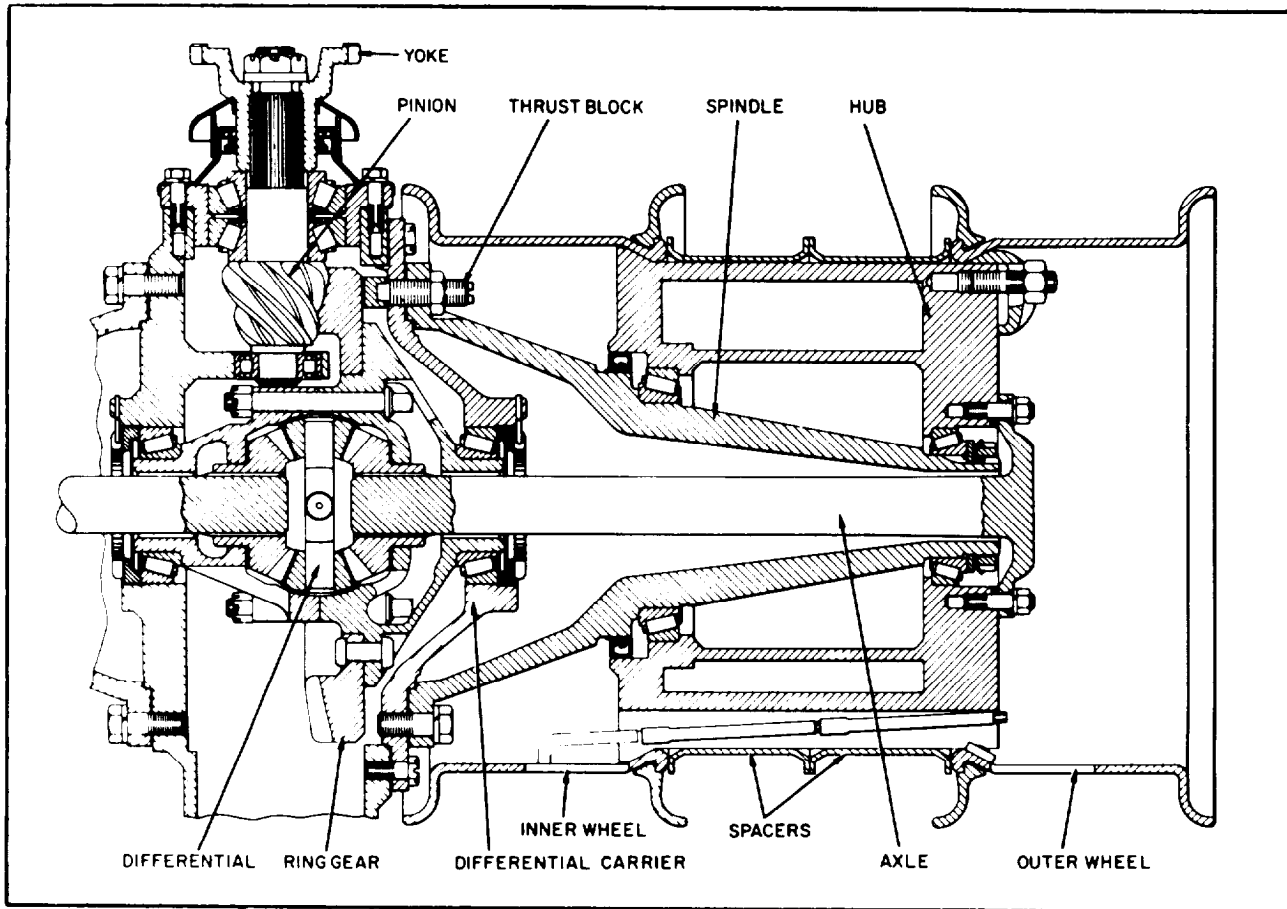

**FIGURE 8-22.**

.004 to .006 in. (.102 to .152 mm) when the retainer nuts are tightened to 80 ft.-lbs. (11.06 kg-m).

**8-21. FINAL DRIVE (see figure 8-22).**

**8-22. GENERAL.**

8-23. A single reduction, over-center pinion type differential is used to drive the front drive tires. Power is transmitted from the transfer case to the final drive by a universal shaft.


6-24. The differential and ring gear assembly is mounted on tapered roller bearings. The pinion turns on two (2) tapered roller bearings in front of the gear and a roller bearing behind the gear.

**8-25. REMOVAL (see figure 8-22).**

**8-26. DIFFERENTIAL REMOVAL.**

a. Block up the left side of the front frame just enough that the drive tires are off the ground.

**8-7.**

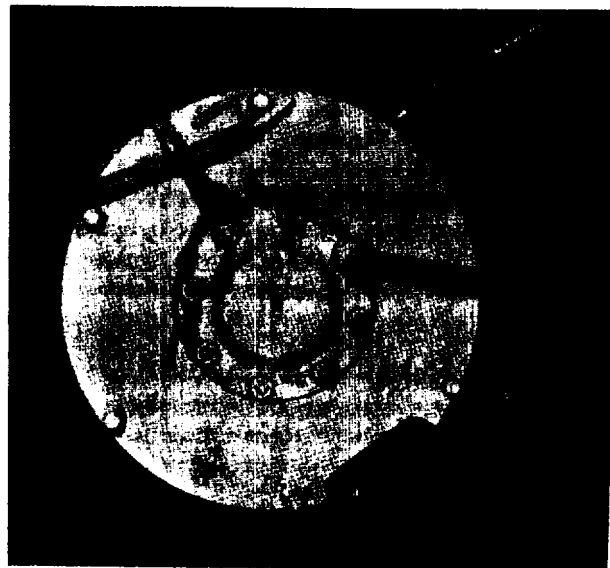

**FIGURE 8-23.**

b. Remove the lug nuts and sim retainer. Pull off the outer wheel, two (2) spacers and inner wheel.

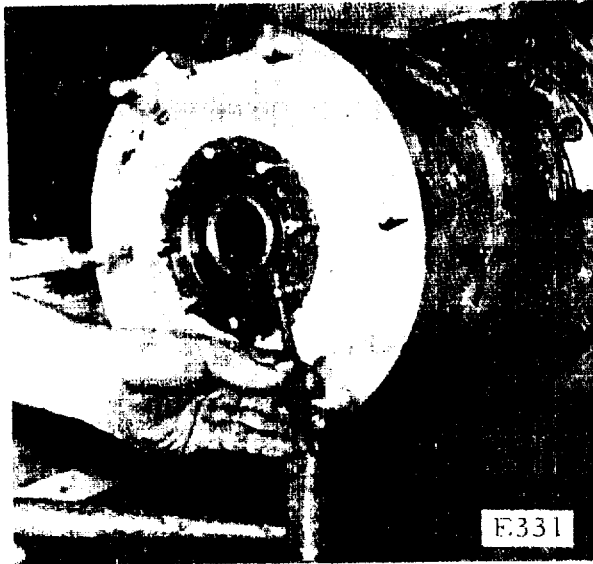


FIGURE 8-24.

c. Remove the hub retainer nuts (see figure 8-23), lockwashers and split thimbles that retain the axle shaft and remove the shaft.

d. Remove the bearing locknut (see figure 8-24) and the tanged washer. Wiggle the hub to free the bearing and remove the bearing.

e. Remove the wheel hub.

f. Pull out the hub assembly with a moveable floor jack.

**CAUTION:** Oil, trapped in the wheel hub, will be spilled during hub removal. Place a pan under the hub at the seal end (toward the differential). Do not damage the oil seal during hub removal.

g. Support the spindle with a moveable floor jack. Remove the spindle mounting capscrews. Take the locknut off the thrust block adjusting screw.

**NOTE:** Do not lose the velocity pump springs when removing the spindle.

h. Remove the spindle.

i. Remove the differential carrier mounting capscrews and the carrier.

**NOTE:** The right hand axle shaft must be installed to support the ring gear assembly when the carrier is removed.

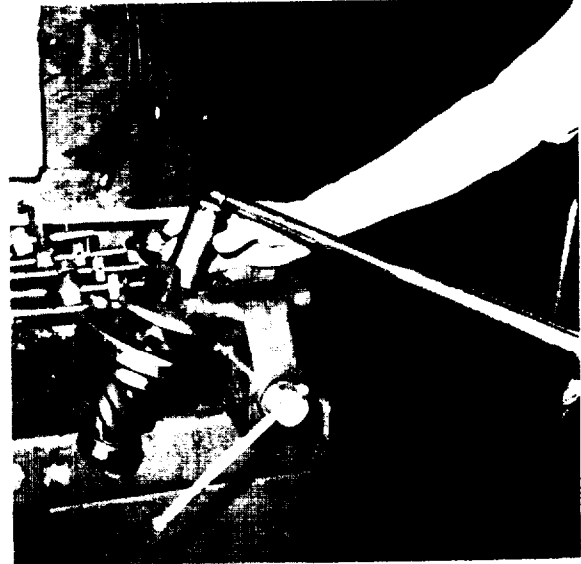


FIGURE 8-25.

j. Remove the differential assembly.

**NOTE:** Do not lose the velocity pump slippers and the thrust block.

#### 8-27. PINION REMOVAL.

**NOTE:** The pinion can only be removed after the differential assembly has been removed.

a. Remove the universal shaft mounting capscrews and lockplates at both ends. Lift out the shaft.

b. Remove the pinion bearing capscrews.

c. Slide out the pinion assembly. Take care of the shims.

#### 8-28. DISASSEMBLY.

#### 8-29. DISASSEMBLY OF PINION.

a. Clamp companion flange into vise and remove the cotter pin, nut and washer (see figure 8-25).

b. Remove the cover and oil seal (see figure 8-26). It may be necessary to use a drift and hammer because of the oil gasket between the cover and cage.

c. Press the pinion shaft out of the bearing cage (see figure 8-27). Remove the upper tapered roller bearing from the cage.

SECTION 8  
FINAL DRIVE AND TRANSFER CASE



FIGURE 8-26.

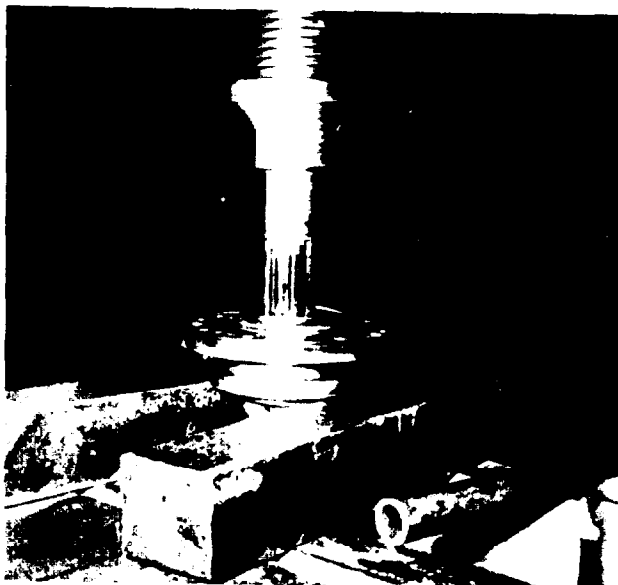


FIGURE 8-27.

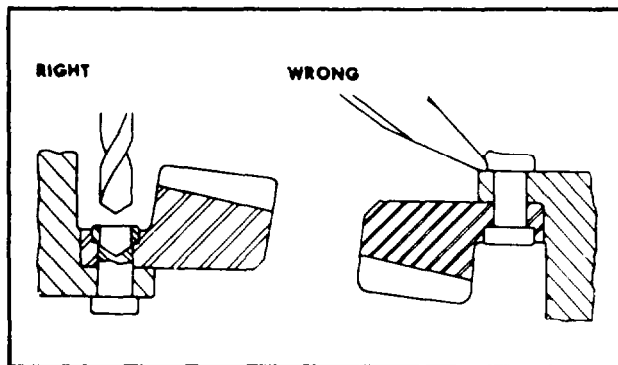


FIGURE 8-28.

d. Remove the lower tapered roller bearing and the roller bearing from the shaft end.

**8-30. DISASSEMBLY OF DIFFERENTIAL.**

a. Mark the differential case halves for reassembly.

b. Cut lock wire and remove bolts from case.

c. Separate the halves.

**NOTE:** Remove ring gear only if necessary.

d. Mark gear and case and remove rivets as shown in figure 8-28. Separate the gear from the case.

e. If it is necessary to replace the differential bearings, place the case in a press (see figure 8-29) and press the bearing from the journal.

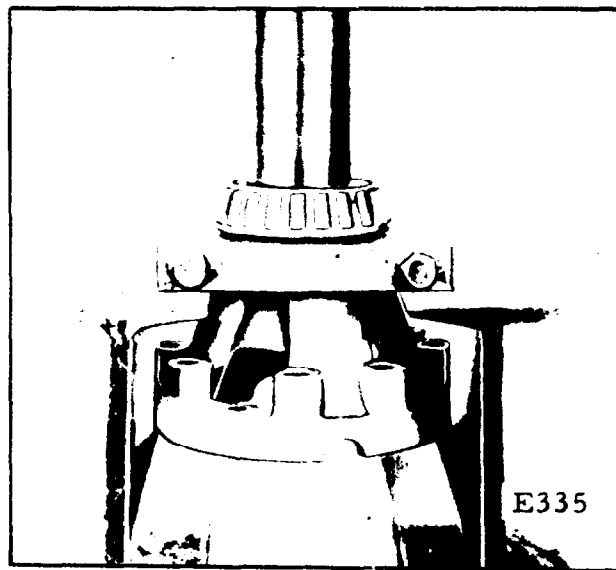


FIGURE 8-29.

**8-31. CLEANING.**

a. Clean parts having ground and polished surfaces, such as gears, bearings and shafts with solvent type cleaners such as emulsion cleaners or petroleum solvent excluding gasoline. Do not clean these parts in a hot solution tank or with water and alkaline solution.

b. Rough parts such as differential carrier casting may be cleaned in hot solution tanks with mild alkali solutions, providing these parts are not ground or polished.

**NOTE:** Parts cleaned in solution tanks or with alkali cleaners should be thoroughly rinsed after cleaning to remove all traces of alkali.

**CAUTION:** Exercise care to avoid skin rashes and inhalation of vapors during cleaning process used.

c. Parts should be completely dried immediately after cleaning.

### 8-32. INSPECTION.

a. Inspect all bearings, cups and cones, including those not removed from parts of the drive unit. Replace if rollers or cups are worn, pitted or damaged in any way. Remove parts needing replacement with a puller or press. Avoid the use of drifts and hammers.

b. Inspect hypoid gears for wear or damage. Gears which are worn, ridged, pitted or scored should be replaced. When necessary to replace either the pinion or ring gear of the hypoid set, the gear set should be replaced.

c. Inspect the differential assembly for the following:

(1). Pitted, scored or worn thrust surfaces of differential case halves, thrust washers, spider trunions and differential gears. Thrust washers must be replaced in sets. The use of a combination of used and new washers will result in premature failure.

(2). Wear or damage to the differential pinions and side gear teeth.

d. Inspect differential shafts for twisted or cracking splines and any other signs of impending failure.

### 8-33. REASSEMBLY.

#### 8-34. REASSEMBLY OF PINION SHAFT.

a. Press the roller bearing firmly against the pinion shoulders with a sleeve that will bear only on the bearing inner race (see figure 8-30). Install the lock ring and squeeze the ring into the pinion shaft groove.

b. Press the inner tapered bearing (see figure 8-30) on the shaft. Press bearing cups firmly against bearing shoulders in the cage.

c. Lubricate bearing and cups with light machine oil.

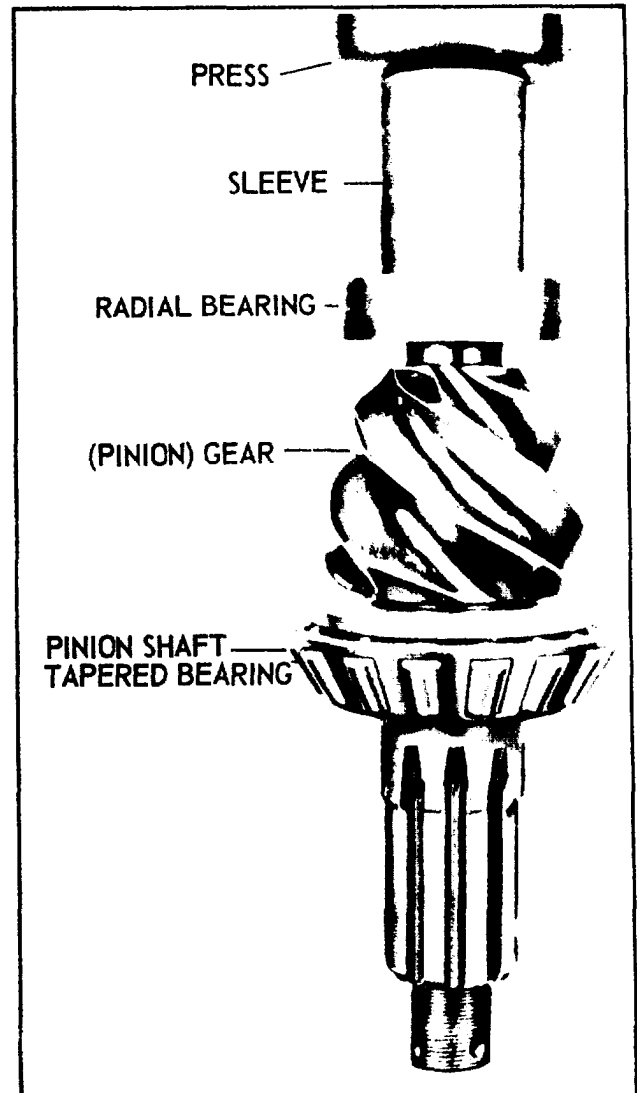


FIGURE 8-30.

d. Insert pinion and bearing assembly in pinion cage and position spacer combination over the pinion shaft.

e. Press the front bearing firmly against the spacer (see figure 8-31). Rotate cage several revolutions to assure normal bearing contact.

**NOTE:** Bearing preload adjustment is only made if new bearings are installed.

#### 8-35. PINION BEARING PRELOAD.

a. While in the press under pressure, check the bearing preload with one of the following


(1). Wrap a soft wire around the cage and pull on a horizontal line with a pound scale




**SECTION 8  
FINAL DRIVE AND TRANSFER CASE**

(see figure 8-32). If a press is not available, tighten the pinion nut to 300-400 ft.-lbs. (41.46-55.28 kg-m) torque and check preload. If rotating torque is not within 5 to 15 in.-lbs. (.058-.173 kg-m) preload torque, use thinner spacer to increase preload or thicker spacer to decrease preload.


(2). After assembling the pinion shaft as outlined in paragraph 8-33, install the cover assembly without the oil seal and install the washer and yoke. Torque the pinion nut to 300-400 ft.-lbs. (41.46-55.28 kg-m) torque. Clamp the bearing cage into a soft vise. Do not damage the cage! Measure bearing preload of 5-15 in.-lbs. (.058-.173 kg-m). Torque with a torque wrench on the pinion nut (see figure 8-33). If rotating torque is not

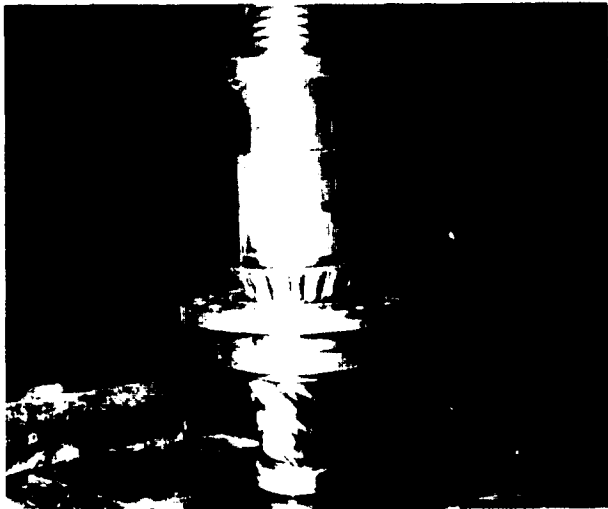

**FIGURE 8-31**

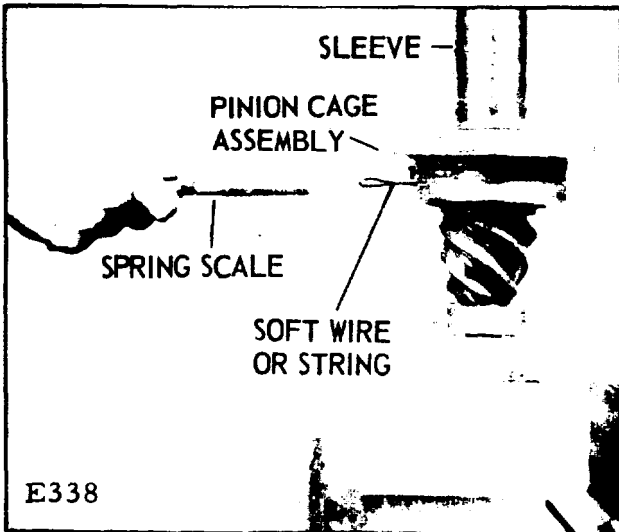

**FIGURE 8-32.**

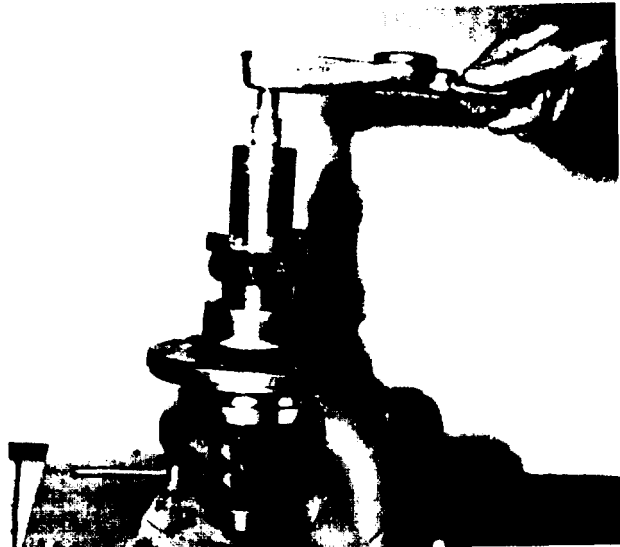

**FIGURE 8-33.**

within 5-15 in.-lbs. (.058-.173 kg-m) use thinner spacer to increase preload or thicker spacer to decrease preload. Mark position of nut and yoke to finish assembly.

b. Install oil seal into cover. Install a gasket on the cover contact face and apply gasket sealer.

c. Install the cover assembly, yoke and washer. Tighten pinion nut to previously marked position. Turn it to the next position where the cotter pin can be installed. Check preload again.

**8-36. REASSEMBLY OF DIFFERENTIAL.**

a. If the ring gear was removed from the case, rivet the gear to the case half with new rivets. Rivets should not be heated. They are upset cold. When the correct rivet is used, the head being formed will be at least 1/8 larger in diameter than the rivet. The head will then be approximately the same height as the pre-formed head.

**CAUTION:** Excessive pressure will cause distortion of the case holes and result in gear runout.

**NOTE:** Tonnage required for squeezing cold rivets is charted below. These pressures are approximate for annealed steel rivets and pressure can be adjusted to

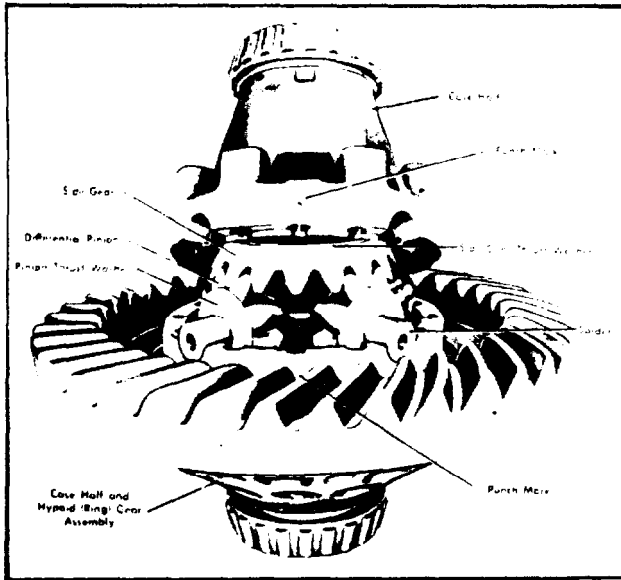


FIGURE 8-34.

suit individual working conditions.

Rivet Diameter	Tonnage Required
7/16 In. (11.11 mm)	22
1/2 In. (12.70 mm)	30
9/16 In. (14.29 mm)	36
5/8 In. (15.88 mm)	45

b. Lubricate differential case inner walls and all component parts with axle lubricant. Position thrust washer and side gear in case half assembly. Place spider with pinions and thrust washers in position. Then install remaining side gear and thrust washer.

c. Align mating marks and draw case halves together with four (4) equally spaced capscrews (see figure 8-34). Check assembly for free rotation of differential gears and correct if necessary. Install the remaining capscrews and torque them to 185-205 ft.-lbs. (25.57-28.33 kg-m). Install the lock wire.

d. Install the two (2) tapered roller bearings.

### 8-37. INSTALLATION.

**NOTE:** The pinion shaft assembly has to be completely assembled and the pinion nut torqued as described under RE-ASSEMBLY OF PINION SHAFT before measurements for shimming can be taken.

### 8-38. PINION INSTALLATION (see figure 8-35).

a. The nominal mounting distance is 3.551

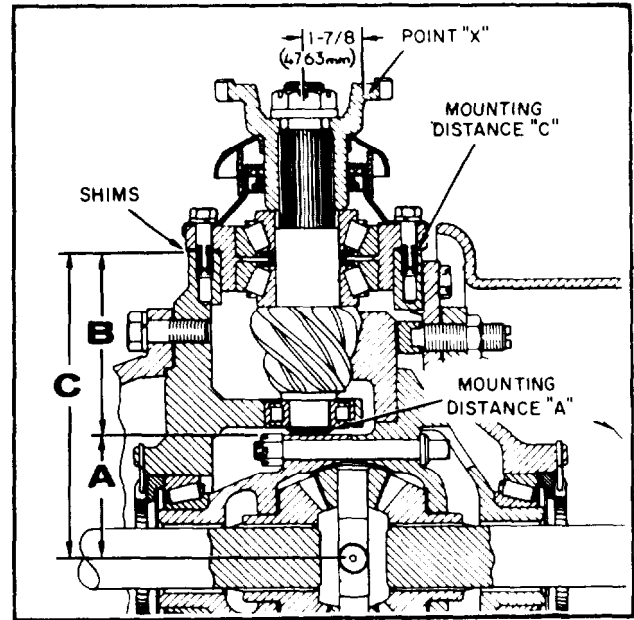


FIGURE 8-35.




FIGURE 8-36.

in. (90.2 mm) from the end of the pinion to the center line of the bevel ring gear and is stamped on the pinion shaft end (see figure 8-35). Add or subtract, as indicated, the variation from the nominal value to obtain the actual mounting distance "A".

b. Install pinion within  $\pm .001$  in. (.0254 mm) by installing shims where shown in figure 8-35. Coat capscrews with John Crane No. 2 sealer or equivalent and torque them to 55 ft.-lbs. (7.60 kg-m). Shim requirement may be determined as follows:

(1). Measure the distance from the pinion

**SECTION 8**  
**FINAL DRIVE AND TRANSFER CASE**

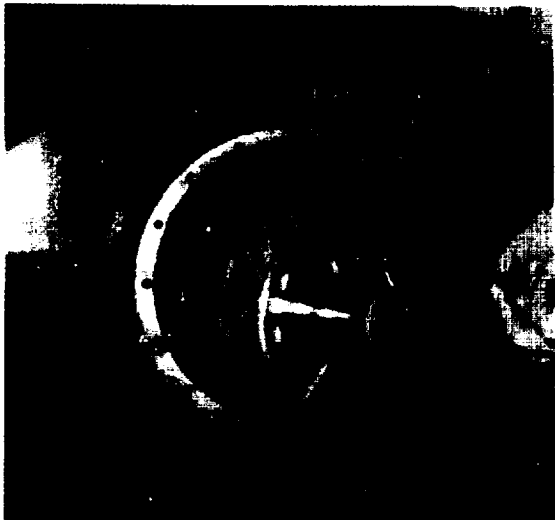

**FIGURE 8-37.**

shaft end to the mounting face of cage-dimension "B".

(2). Add dimension "A" to dimension "B".

(3). From the sum of "A" plus "B" subtract the mounting distance "C" from pinion cage mounting surface to center line of the bevel ring gear. This dimension is stamped on the final drive housing adjacent to the mounting surface (see figures 8-35 and 8-36). The difference is the required shim thickness.

(4). Note in.-lb. torque drag on pinion shaft.

**8-39. INSTALLATION OF DIFFERENTIAL AND CARRIER.**


a. Install the differential in the final drive housing (see figure 8-37).

**NOTE:** Do not install velocity pump and thrust block if tooth contact is checked with white lead.

b. To install the velocity oil pump (see figure 8-38) assemble tube to slipper plates with the roll pin. When installing velocity pump into the differential carrier, make sure that the face of the slipper plate does not protrude more than 3/32 in. (2.88 mm) beyond the carrier (dimension "E") when inserted as far as possible. This assures that the carrier can be installed into final drive housing without bottoming the slipper on the carrier.

c. Install thrust block adjusting nut into carrier. Secure the thrust block to the adjusting nut with grease.

**8-13.**

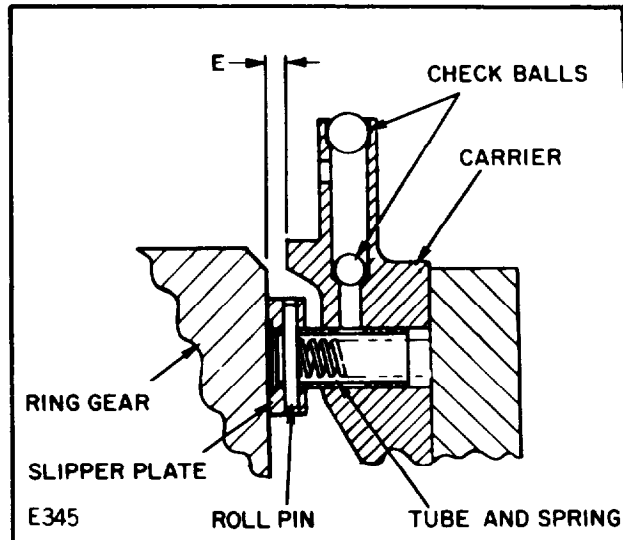

**FIGURE 8-38.**

d. Place gasket between the housing and the carrier and apply gasket sealer.

**NOTE:** Align velocity pump oil hole in the carrier with the oil hole in the differential housing.

e. Install the carrier with the velocity pump and the thrust block.

f. Apply John Crane No. 2 sealer or equivalent to capscrews and torque them to 85 ft.-tbs. (11.75 kg-m).

**8-40. DIFFERENTIAL ADJUSTMENT.**

**NOTE:** If new gears or bearings were installed into the differential, the drive tires on the right side have to be removed also to gain access to both differential adjusting rings. If no parts were replaced, adjustment can be made with the adjusting ring on the left hand side of the differential.

a. Turn the adjusting ring (or rings - see figure 8-39) until a correct contact pattern is obtained with a total backlash of .008-.016 in. (.203-.406 mm) when measured at point "X" on the pinion yoke.

b. Refer to CHECKING GEAR TEETH CONTACT PATTERN in this section.

c. Tighten the adjusting ring (or rings) and equal amount (see figure 8-39) until there is an increase of 2-3 in.-lbs. (.023-.035 kg-m) torque drag at the pinion shaft over that measured in paragraph 8-38, step b (4).

d. Install cotter pin(s) as shown in figure 8-40.

SECTION 8  
FINAL DRIVE AND TRANSFER CASE



FIGURE 8-39.

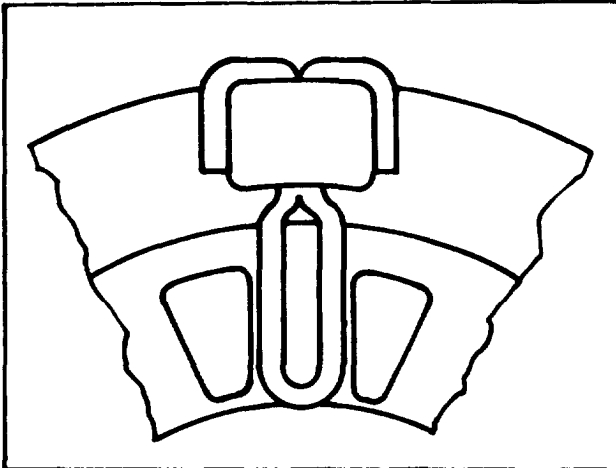


FIGURE 8-40.



FIGURE 8-41.

e. Install gasket between the differential carrier and the spindle and apply gasket sealer.

f. Apply John Crane No. 2 sealer or equivalent to the spindle mounting capscrews and install the spindle, using lockwashers. Torque capscrews to 170 ft.-lbs. (23.49 kg-m).

**8-41. THRUST BLOCK ADJUSTMENT.**

a. Tighten adjusting screw so that the thrust block bottoms against the highest point of the ring gear back face.

b. Back off the adjusting screw 1/6 to 1/4 turn and tighten the locknut.

**8-42. WHEEL HUB INSTALLATION.**

a. Install the bearing cups into the wheel hub.

b. Install the inner bearing cone over the spindle (see figure 8-41).

c. Install the oil seal into the wheel hub large hole.

d. Slide the wheel hub over the spindle. Be careful not to damage the oil seal as it slides over the wear sleeve on the spindle.

e. Install the outer bearing cone (see figure 8-42).

f. Install the tongued washer, the bearing lockwasher and the locknut.

g. Torque the locknut to 150 ft.-lbs. (20.73 kg-m) lubed while rotating the wheel hub.

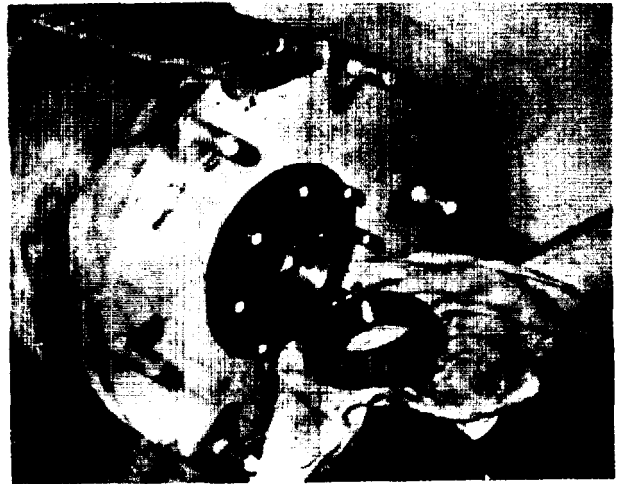


FIGURE 8-42.

**SECTION 8**  
**FINAL DRIVE AND TRANSFER CASE**

h. Back off the locknut while the wheel hub turns freely with no end play. Torque on locknut at this point should be less than 20 ft.-lbs. (2.76 kg-m).

i. Retorque to 25 ft.-lbs. (3.46 kg-m) and lock in place at first alignment position which occurs at or above 25 ft.-lbs. (3.46 kg-m). Bend over tab on the lockwasher.

**8-43. AXLE SHAFT INSTALLATION.**

a. Install new o-ring into the face of the wheel hub.

**CAUTION:** Do not damage the o-ring when removing or installing axle shaft.

b. Install the axle shaft and install the tapered thimbles, studs, lockwashers and nuts. Torque nuts to 30 ft.-lbs. (4.15 kg-m).

**8-44. RIM INSTALLATION.**

**NOTE:** Make sure that all parts, including rims, spacers, wheel studs, wedge clamps and 28° mounting bevel on hub are free from damage, burrs, dirt and grease.

- a. Place rims and spacers on the hub.
- b. Secure the wedge clamps evenly in position.
- c. Place the wheel in position and tighten wheel lug bolts or nuts to 50% of the

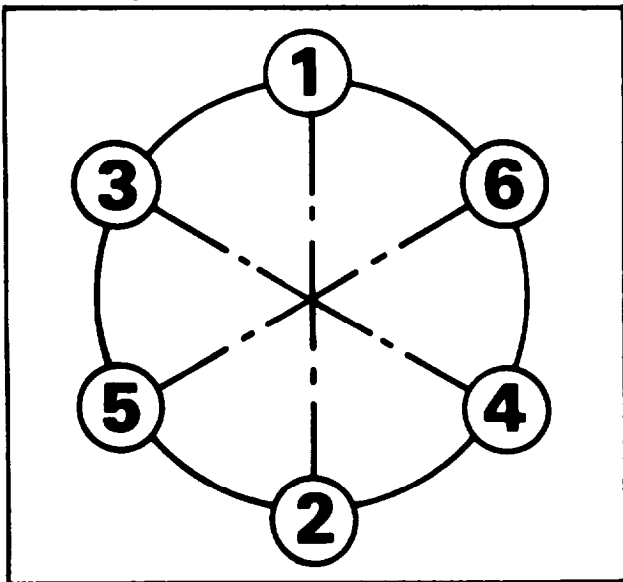


FIGURE 8-43.

recommended torque value, using an alternate sequence as shown in figure 8-43. Recommended torque is 165 ft.-lbs. (22.86 kg-m).

d. Repeat the sequence, and tighten to 75% of the recommended torque value.

**NOTE:** Observe that the heel of a properly installed wedge clamp does not necessarily contact the hub. This is normal and no attempt should be made to cause this part of the clamp to contact the hub.

e. Lower the frame. Fill differential to specification and capacity. See HYSTER-CARE MAINTENANCE, Section 4.

f. Place unit in operation and recheck torque after 8 hours of operation. If torque is less than recommended value, retighten to proper specification.

**8-45. CHECKING GEAR TEETH CONTACT PATTERN.**

8-46. Correct contact pattern can be determined as follows after white lead was applied sparingly to the gear teeth.

- a. Figures 8-44 and 8-45 show correct tooth contact.
- b. Figure 8-46 shows short contact at heel. To correct, move gear toward pinion. Then move pinion away from gear to again obtain correct backlash.
- c. Figure 8-47 shows short contact at toe.

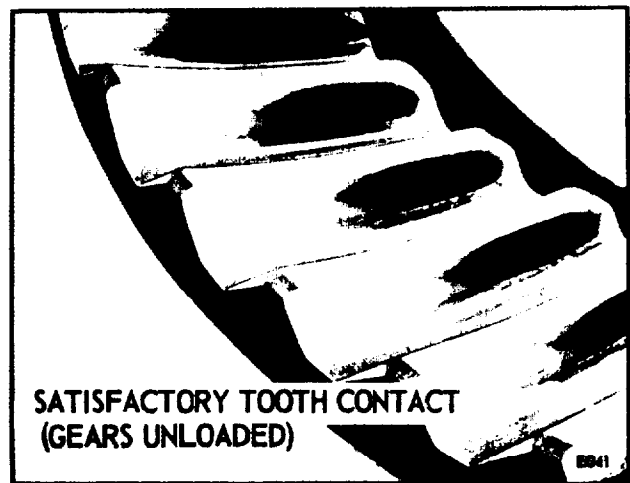


FIGURE 8-44.

SECTION 8  
FINAL DRIVE AND TRANSFER CASE



FIGURE 8-45.

To correct, move gear away from pinion. Then move pinion toward gear to again obtain correct backlash.

d. Figure 8-48 shows heavy contact on flank or lower portion of tooth. To correct, move pinion away from gear until contact to full working depth of tooth without breaking contact at flank. Then move gear toward pinion to secure correct backlash.

e. Figure 8-49 shows heavy contact on face of upper portion of tooth. To correct, move pinion toward gear until contact covers flank of tooth without breaking contact at face. Then move gear away from pinion to secure correct backlash.

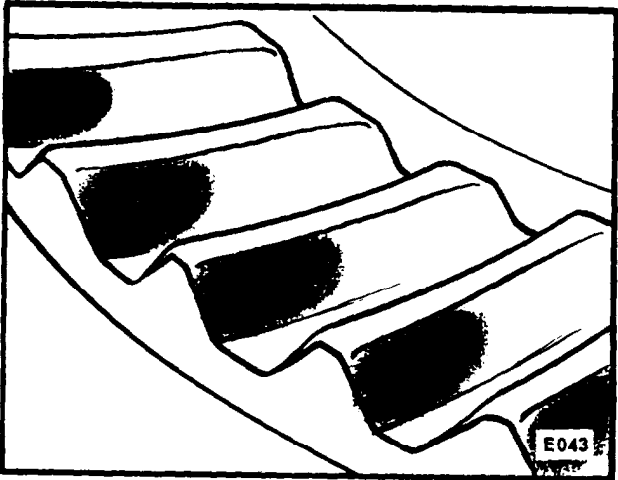


FIGURE 8-46.



FIGURE 8-48.

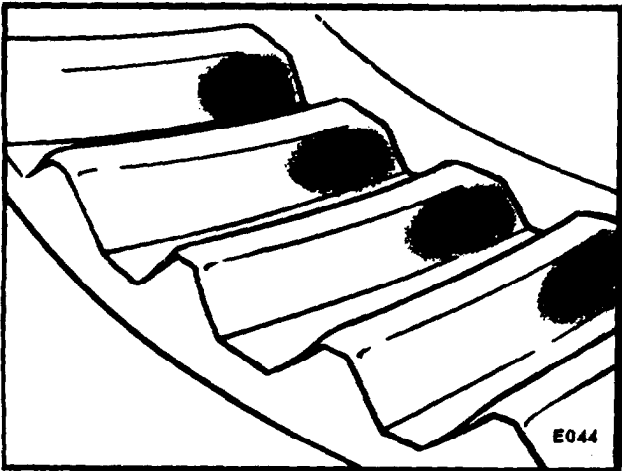


FIGURE 8-47.

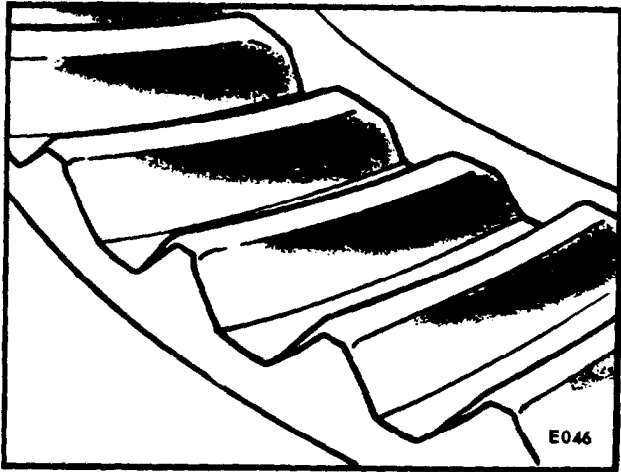


FIGURE 8-49

**SECTION 9  
STEERING**

**9-1. GENERAL.**

9-2. This section contains a description of the steering system operation and overhaul instructions for the major components. Overhaul instructions include removal, disassembly, inspection and installation procedures. Specifications are given in Section 2 and a troubleshooting guide is presented in Section 5.

9-3. The steering system has a neutral feel to the operator by providing a direct relation between the steering wheel position and the

position of the steering cylinders.


9-4. Components of the steering arrangement are:

- (1). an engine mounted hydraulic power pump
- (2). the dashboard mounted basic power steering control unit
- (3). two double acting hydraulic steering cylinders
- (4). steering wheel
- (5). hydraulic fluid reservoir
- (6). hydraulic lines and fittings
- (7). hydraulic filter (see figure 9-1).

**9-5. OPERATION.**

**9-6. POWER OPERATION.**

9-7. With no turning force yet applied, the power pump (engine mounted) circulates oil

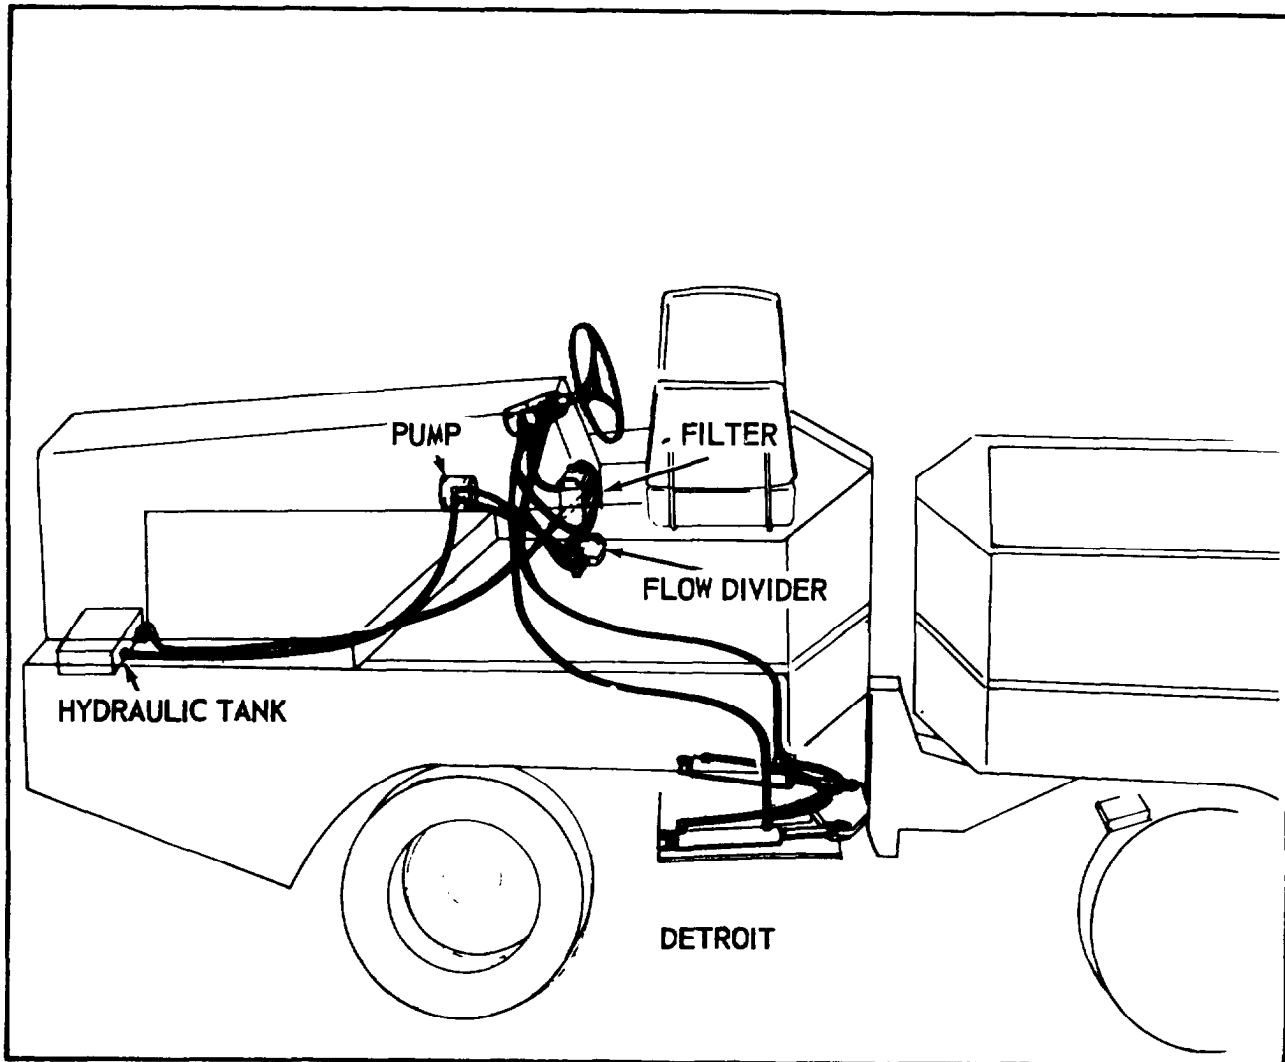

**FIGURE 9-1.**

through the primary control valve of the power steering control unit (dashboard mounted) and back to the pump reservoir. When steering action is initiated by rotation of the steering wheel, the control spool is rotated, thereby allowing fluid to be fed to the power steering control metering section. This section meters out only the amount of oil required to make the turn indicated by the steering wheel position. The fluid is then ported to feed the proper actuator control port and thus the correct steering cylinder end. The alternate actuator port is simultaneously coupled to return displaced fluid from the opposite end of the cylinder to the system reservoir.

9-8. Once the correct amount of fluid is measured out, the control valve is repositioned by a spring to its open center, neutral setting, hence causing a rotary follow-up action in the steering wheel. The spool then maintains pressure in the steering cylinder for the desired turn until steering action is again initiated.

#### 9-9. MANUAL OPERATION.

9-10. In manual operation the fluid metering section becomes a rotary pump and directs fluid to move the spool in either direction when the steering wheel is manually rotated. A check valve within the unit develops a closed circuit between the hydraulic cylinder and the metering area.

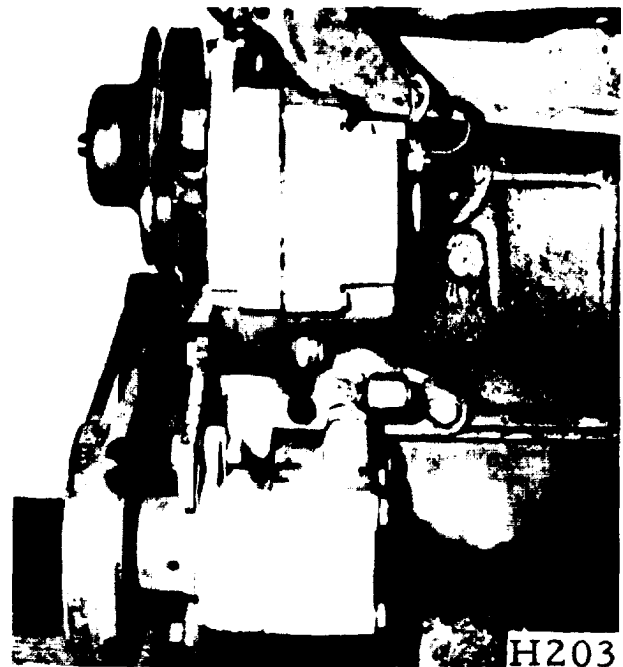


FIGURE 9-2.



**DELETED PAGES 9-3 AND 9-4.**



**SECTION 9  
STEERING**

**9-36. POWER STEERING CONTROL UNIT.**

**9-37. GENERAL.**

9-38. The dashboard mounted power steering control unit meters the oil flow to the steering cylinder. Provisions are also made for manual operation. For operation, see OPERATION, this section.

**9-39. REMOVAL OF STEERING CONTROL UNIT.**

- a. Remove the engine hood.
- b. Pry out the steering wheel center hub.
- c. Remove the steering wheel jam nut and pull the steering wheel with a steering wheel puller.
- d. Disconnect the four hydraulic hoses from

the control unit. Note the position of each hose with respect to the control unit. Plug or cap all hoses and fittings.

e. Remove the dashboard mounting screws. Lower the dashboard.

f. Remove the two (2) control unit mounting capscrews. Support the control unit in back of the dashboard (see figure 9-5).

g. Carefully remove the control unit (see figure 9-6).

**9-40. DISASSEMBLY OF STEERING CONTROL UNIT (see figure 9-36).**

9-41. If there is a functional problem or leakage at the control end of the unit only, the disassembly of the control end of the unit only will be required and it is generally advisable to leave the metering section assembled.

9-42. If a complete tear down and reassembly of the control is planned, clean all paint and surface contamination from the control at points of separation. This is extremely important at the meter end of the control so that no paint flakes or particles will enter these closely fitted parts as they are being reassembled. To clean the control adequately, first plug all four ports then wire brush around the meter area and rinse and blow away all surface contamination before disassembly is begun.

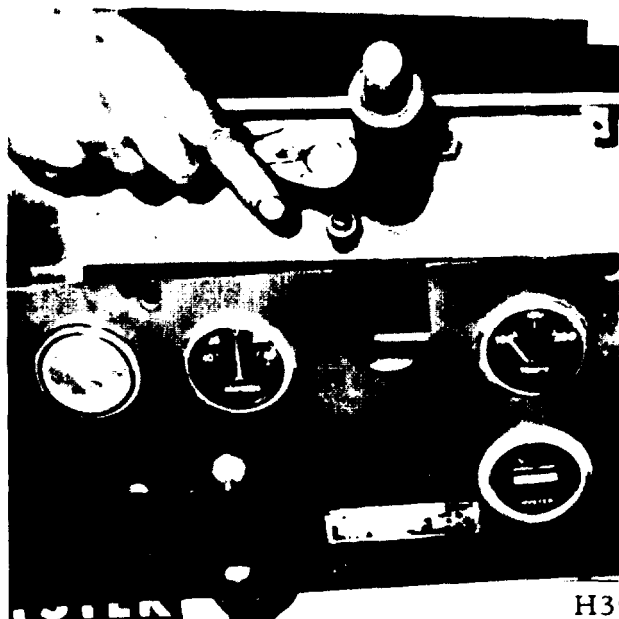


FIGURE 9-5.



FIGURE 9-6.

9-43. For any disassembly, an extremely clean bench area is necessary. Do not use shop clothes or cotton waster to wipe or clean the parts. The lint deposited by these can cause leaks or disrupt proper function. The clean inside surface or a corrugated container is an adequate assembly surface. Assembly is generally easier and more satisfactory with clean dry parts. After parts are rinsed clean in

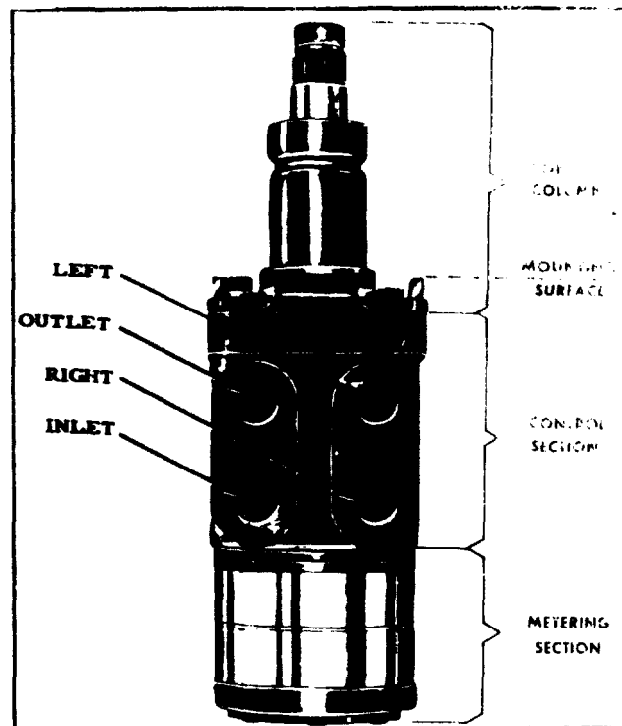


FIGURE 9-7.

**SECTION 9  
STEERING**


solvent, they should be blown dry with an air hose and stored in a clean place.

a. Place the unit in a vise with soft jaws, control end up. Clamp across port surface and opposite side of housing lightly. Remove the two capscrews that fasten the column to lower unit (see figure 9-8). Remove the column (see figure 9-9). Mark the two capscrew holes so that the ports will be in the proper direction when reassembled.


b. Turn the housing assembly over so that metering section is up. Holding the assembly in the soft jaws of the vise, remove the seven (7) capscrews (see figure 9-10).

c. Lift off the meter end cap (see figure 9-11).


d. Remove the meter gear ring (see figure 9-12).

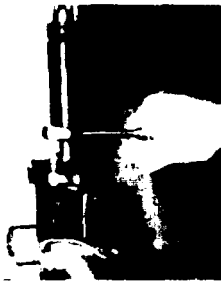

**FIGURE 9-8.**

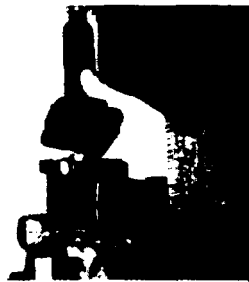


**FIGURE 9-9.**

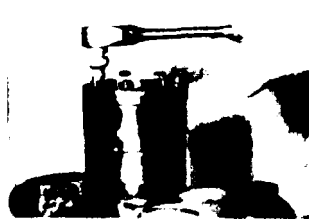

**FIGURE 9-10.**



**FIGURE 9-11.**

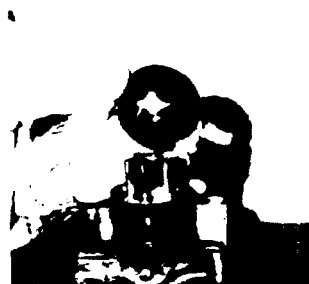

**FIGURE 9-12.**




**FIGURE 9-13.**

e. Lift off the meter gear star (see figure 9-13) and place it in the meter gear ring removed in step d.

f. Remove the long spacer (see figure 9-14).

g. Remove the splined spacer (see figure 9-15).

h. Lift off the second meter gear ring (see figure 9-16).

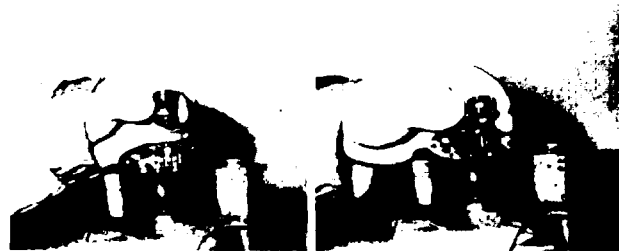

**FIGURE 9-14.**

**FIGURE 9-15.**

i. Remove the second meter gear star and place it in the second meter gear ring (see figure 9-17).

**CAUTION:** Do not mix the ring and star gears between the two tandem mounted metering assemblies.

j. Remove the short spacer (see figure 9-17) and lift out the drive (see figure 9-18).



**FIGURE 9-16.**



**FIGURE 9-17.**



**FIGURE 9-18.**



**FIGURE 9-19.**

k. Remove the porting plate (see figure 9-19).

l. Place a clean wooden block across the throat of the vise to support the spool parts. Clamp the unit across the port face with the control end up. Remove the four (4) capscrews (see figure 9-20).

m. Hold the spool assembly down against the wooden block in the vise and lift off the end cap (see figure 9-21). Inspect the mating surfaces for leakage paths, wear, and seal condition (see figure 9-22).

n. Remove cap locator bushing (see figure 9-23).

o. Place the housing on the wooden block with the port face down (see figure 9-24). Holding the assembly securely, remove the spool-sleeve assembly from the 14 hole end of the housing (see figure 9-25).

**NOTE:** Be careful to prevent these parts from binding as they are closely fitted and must be rotated slightly as they are withdrawn.

p. Place the housing in the vise, control end up. Insert a seal ring remover tool in the upper left port and push the check plug (with o-ring) out of the check hole (see figure 9-26).

q. Using a 3/16 in. (4.763 mm) hex wrench unscrew and remove the check valve seat (see

figure 9-27).

r. Up-end the housing and tap slightly with palm of hand. Hold the check valve hole towards the lowest corner and remove the check valve seat, ball and spring (see figure 9-28).

s. Push the cross pin to loosen it from the spool-sleeve assembly (see figure 9-29). Remove the nylon disc at each end of the crosspin and remove the pin.



FIGURE 9-24.



FIGURE 9-25.



FIGURE 9-26.



FIGURE 9-27.



FIGURE 9-20.



FIGURE 9-21.



FIGURE 9-28.



FIGURE 9-29.

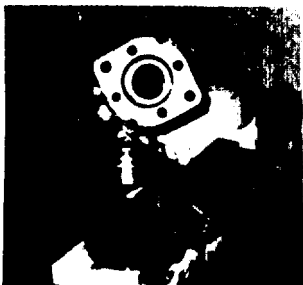


FIGURE 9-22.



FIGURE 9-23.



FIGURE 9-30.



FIGURE 9-31.

**SECTION 9  
STEERING**

t. Push the inside lower edge of the spool so that spool moves towards the splined end and remove it carefully from the sleeve (see figures 9-30 and 9-31).

u. Push the centering spring set out of the spring slot in the spool (see figure 9-32).

**9-44. CLEANING AND INSPECTION.**

9-45. At, this point all parts have been disassembled and removed from the unit. Each should be rinsed carefully in clean solvent. Replace all seals when unit is reassembled.

a. Inspect all moving surfaces to insure that they have not been scored or abraded by dirt particles or otherwise disrupted. Smooth burnished surfaces are normal in many areas. Slightly scored parts can be cleaned with 600 grit abrasive paper by hand rubbing only.

b. To prepare all surfaces of the meter section for reassembly and insure that all edges of the parts are burr free, place a piece of 600 grit abrasive paper face up on an extremely flat, clean hard surface. Plate glass is an appropriate surface. If the 600 grit paper is new, it should first be rubbed down with a scrap steel part to remove sharp grit which would produce scratches. The ends of the star gear can be used for this purpose if necessary. Then both sides of the ring gear, both sides of the plate, the 14 hole end of the housing and the flat side of the end cap should be cleaned lightly (see figures 9-33, 9-34, and 9-35).



FIGURE 9-32.

FIGURE 9-33.

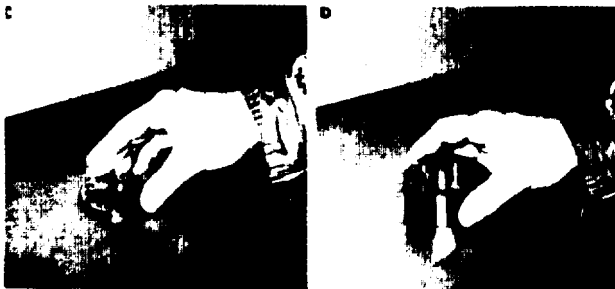


FIGURE 9-34.

FIGURE 9-35.

c. Stroke each surface across the abrasive several times and observe the part. Any small bright area near an edge indicates a burr which must be removed. Hold the part so that contact with abrasive is as flat as possible. (Do not push one edge down hard or the flatness will become rounded). Check each part after 6 to 10 strokes across the abrasive. After polishing each part, rinse clean in solvent and blow dry. Keep these parts absolutely clean until they are assembled.

**9-46. REASSEMBLY OF STEERING CONTROL UNIT.**

a. Place housing on a clean wood block with control end up.

b. Drop check valve spring into check hole with large end down (see figure 9-37). Drop check ball into check hole and insure that it rests on top of the small end of the spring within the hole (see figure 9-36). Place the check valve seat on hex wrench and screw it into the check valve hole so that the machined counterbore of the check seat is towards the ball (see figure 9-36).

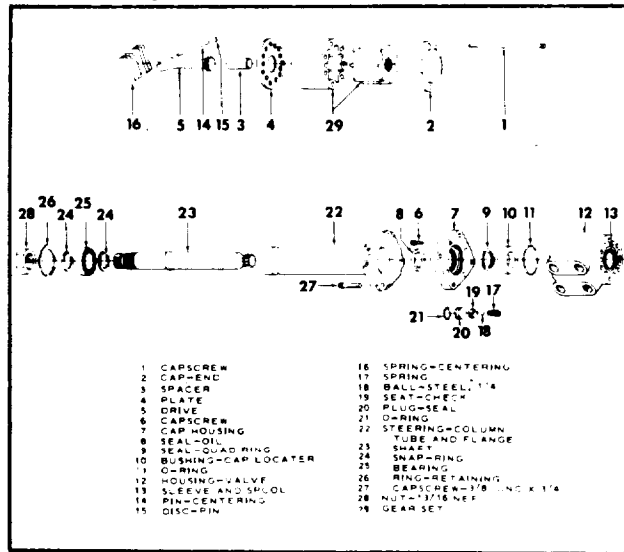


FIGURE 9-36.



FIGURE 9-37.

FIGURE 9-38.

c. Torque check seat per specification (see figure 9-38). Test check ball action by pushing ball with a small clean pin against spring force. Ball need NOT be snug against seat for proper function.

d. Check the condition of the o-ring seal on the check plug and replace it if necessary. Install the check plug (with o-ring) in the check hole with a steady pressure while rocking it slightly so that the o-ring feeds in smoothly without cutting (see figure 9-36).


e. Set control spool on the clean wooden block with the splined end up. Position 3 pairs of centering springs (or 2 sets of 3 each) on the block so that notched edge is down and arched center sections are together. In this position, enter one end of entire spring set into a "bobbypin" (see figure 9-39). Insert spring set and "bobbypin" through the control spool.

f. Set the control spool with spring set and "bobbypin" on the slotted end of the control sleeve. The control spool has probably expanded from the heat of the mechanic's hands to the point that it will not enter the sleeve. Permit the spool to cool, while sitting on the sleeve. Gravity will pull the spool into the sleeve (see figure 9-40). Rotate the spool slightly if necessary.

g. Bring spring slots of the spool and sleeve in line and insert the springs into the sleeve. Remove "bobbypin", being careful not to disturb the spring set.



**FIGURE 9-39.**

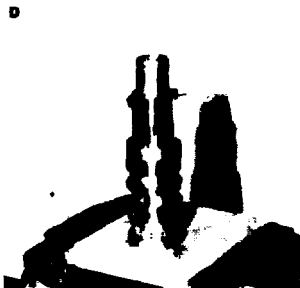

**FIGURE 9-40.**



**FIGURE 9-41.**



**FIGURE 9-42.**

h. Center the spring set in the parts so that they push down evenly and flush with the upper surface of the spool and sleeve (see figure 9-41).

i. Install cross pin through spool assembly (see figure 9-41). Push until cross pin is flush or slightly below the sleeve diameter at both ends. Insert a nylon disc on each end of the cross pin in the sleeve (see figure 9-42).

j. Position the housing on a solid surface with the port face down. Start the spool assembly so that the splined end of the spool enters the 14 hole end of the housing first (see figure 9-43).


k. Be careful that the parts do not cock while entering. Push parts gently into place with a slight rotating motion (see figure 9-44). Bring the spool assembly entirely within the housing bore until the parts are flush at the 14 hole end of the housing. Do not pull the spool assembly beyond this point or the cross pin may drop into the discharge groove of the housing. With the spool assembly in this flush position, check for free rotation within the housing by turning the spool assembly with light finger force at the splined end.

l. Hold the parts in this flush position and rest the 14 hole end of the assembly on the protective block on the vise throat and clamp lightly across the port face with the vise.


**CAUTION:** When changing positions of the housing be careful to hold spool and sleeve assembly in the housing as they are free to slip out.

m. Position the cap locator bushing, with large O.D. chamfer UP, partly into end of housing (see figure 9-45). Insure that the bushing seats against the spool assembly.

n. Check the mounting plate and shaft seal carefully to insure that they are clean and in

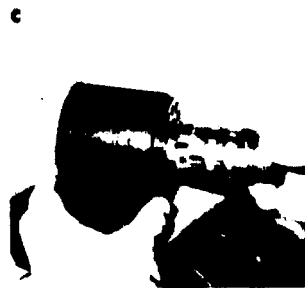

**FIGURE 9-43.**

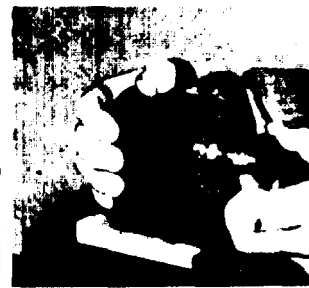

**FIGURE 9-44.**



**SECTION 9  
STEERING**

good condition. Insure that the mounting plate seal grooves are clean and smooth. Each of these seals is slightly larger than its seal groove so that they will be adequately retained in service. Push each gently into place and smooth down into seal groove with finger tip (see figure 9-46).

o. The thin oil seal at the exterior of the mounting plate is a dirt exclusion seal and does not generally need replacement. If this is replaced it should be pressed into the counter bore so that the lip is directed away from the unit.

p. Place the mounting plate sub-assembly over the spool shaft and slide it down into place over the cap locator bushing smoothly so the seals will not be disrupted in assembly (see figure 9-47). Align bolt holes with tapped holes. Be certain that the mounting plate rests flush against end of housing assembly so that the cap locator bushing is not cocked and install four (4) mounting plate capscrews (see figure 9-48). Torque evenly and gradually to specification. The spool and sleeve are flush or slightly below the 14 hole surface of the control housing (see figure 9-49).

r. Clean the upper surface of the housing by wiping with the back of a clean hand or the butt of the thumb. Clean each of the flat surfaces of the meter section parts as it is ready for assembly in a similar way (see figure 9-50).

s. Place the plate over this assembly so that the bolt holes in the plate align with the tapped holes in the housing (see figure 9-51).

t. Place the splined end of the drive within the meter gear star so that the slot at the control end of the drive is in alignment with the valleys between the meter gear teeth (see figure 9-52). Push the splined end of the drive through the gear so that the spline extends about one half its length beyond the meter gear star and hold it in this position while installing into the unit. Note the position or direction of the cross pin within the unit. Rotate the meter gear star slightly to bring the cross slot of the drive into engagement with the cross pin and the splined end of the drive will drop down against the plate (see figure 9-54).

**CAUTION:** Alignment of the cross slot in the drive with alleys between the teeth of the meter gear star determines proper valve timing of the unit. There are twelve (12) teeth on the spline and six (6) pump teeth on the star. Alignment is exactly right in six (6) positions and exactly wrong in six (6) positions. If the parts slip out of position during this part of the assembly, repeat until you are certain that correct alignment is obtained (see figure 9-53).



FIGURE 9-45.

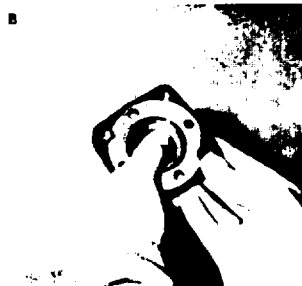


FIGURE 9-46.



FIGURE 9-49.



FIGURE 9-50.

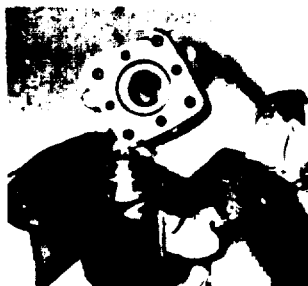


FIGURE 9-47.



FIGURE 9-48.

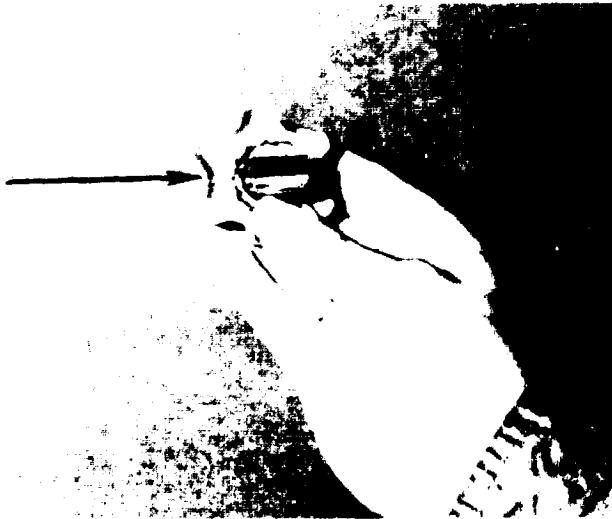


FIGURE 9-51.



FIGURE 9-52.

**SECTION 9  
STEERING**



**FIGURE 9-53.**

u. Place the meter gear ring on the assembly so that the bolt holes align (see figure 9-55).

v. Place the small spacer in position within the end of the meter gear star (see figure 9-56).

w. Place the splined spacer in the meter gear star (see figure 9-57). If the splined spacer does not drop half way into the meter gear star (that is, one row of splined teeth in the gear and one row above the gear), the drive has not properly engaged the cross pin - RECHECK.

x. Place the second meter gear star on the exposed splined teeth of the splined spacer.



**FIGURE 9-54.**

**FIGURE 9-55.**



**FIGURE 9-56.**

**FIGURE 9-57.**

The valleys of both meter gear stars must match (see figure 9-58).

y. Place the long spacer in position within the end of the meter gear star (see figure 9-59).

z. Place the meter gear ring on the assembly so that the bolt holes align (see figure 9-60).

aa. Pour a small quantity of Type "A" transmission oil in each valley of the meter gear star (see figure 9-61).


bb. Place the meter end cap over the assembly (see figure 9-62) and install two capscrews, finger tight, to maintain alignment of the parts. Install all seven (7) capscrews and bring them gradually and evenly to torque specifications (see figure 9-63).

cc. Check the condition of the column assembly, clean it, and replace on the unit with two (2) capscrews oriented as before. Rotate the steering shaft while bringing the



**FIGURE 9-58.**

**FIGURE 9-59.**

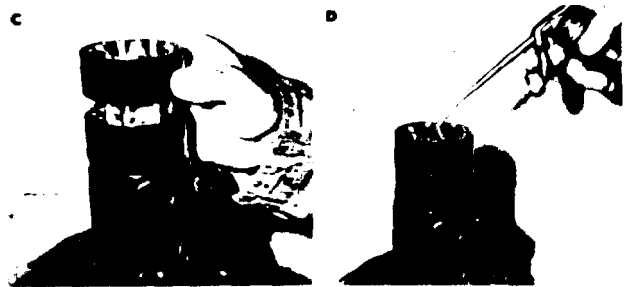

**FIGURE 9-60.**


**FIGURE 9-61.**



**FIGURE 9-62.**

**FIGURE 9-63.**

**SECTION 9  
STEERING**

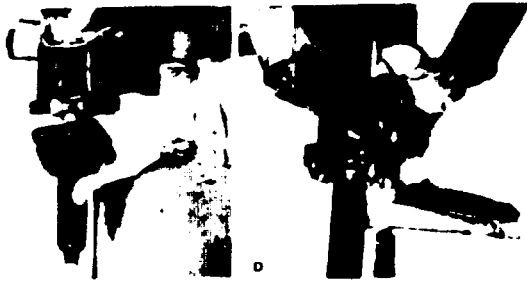

**FIGURE 9-64.**



**FIGURE 9-66.**

**FIGURE 9-65.**

surfaces into contact to allow splines to engage (see figure 9-64). Torque capscrews per specification (see figure 9-65).

**9-47. INSTALLATION.**

a. Position the power steering control unit in the dashboard mounting (see figure 9-6).

b. Install the two (2) mounting capscrews (SW figure 9-5).

c. Connect the four (4) hydraulic hoses to their respective fittings as previously marked during removal. Tighten connections to prevent leakage.

**9-48. STEERING CYLINDERS (see figure 9-66).**

**9-49. GENERAL.**

9-50. Two double-acting hydraulic cylinders, one on each side of the unit, are connected to each other so that when one extends, the other retracts and vice versa.

9-51. The rod ends of the cylinders are connected to the hitch and the bodies are

connected to the front frame.


4-52. Since the two cylinders are identical, the following instructions apply to both cylinders.

**9-54. REMOVAL (see figure 9-67).**

a. Disconnect the hydraulic lines and plug or cap the openings to keep out dirt and reduce loss of oil.

b. Remove the capscrews and anchor pins from both ends of the cylinder.

c. Slide out both mounting pins and remove the cylinder.

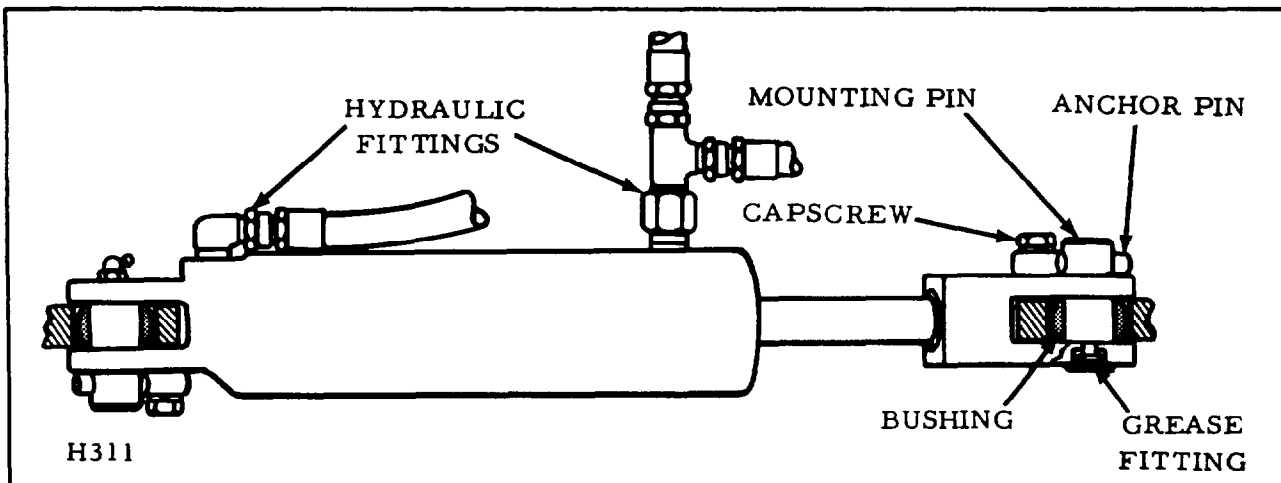

**FIGURE 9-67.**

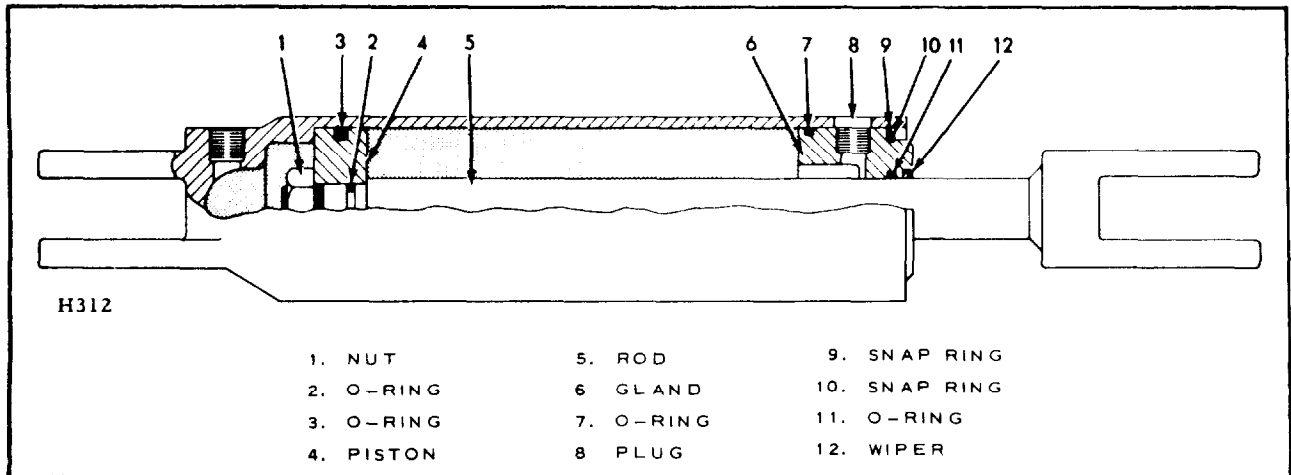


FIGURE 9-68.

**9-54. DISASSEMBLY (see figure 9-68).**

a. Remove the snap rings (9) and (10).

b. Remove the hydraulic fittings from the rod end of the cylinder (8).

**NOTE:** Turn the cylinder with the ports down so that the hydraulic oil can run out of the cylinder into a container.

c. Extract the piston (4), rod (5) and gland (6) slowly.

d. Remove the piston nut (1) and slide the piston (4) and gland (6) off the rod (5).

**9-55. CLEANING AND INSPECTION.**

a. Clean all parts in solvent.

b. Check for scratches, grooves and metal particles in the shell. If metal particles are found, check hydraulic oil and filter for contamination. Change oil and filter if necessary.

c. Remove minor scratches and grooves with fine sandpaper and solvent.

d. Replace any defective part where the defect cannot be removed without causing further Impairment or defect.

e. Clean the mounting pin bushings. Replace bushings If necessary.

**9-56. REASSEMBLY (see figure 9-68).**

**NOTE:** Use new o-rings and wiper.

a. Wet o-rings (2, 3, 7 and 11) in hydraulic oil or other lubricant and install them in their respective grooves. Install the new wiper (12).

b. Slide the gland and the piston over the rod. Install the piston nut.

c. Push the piston (4) and rod (5) into the body to the end of the stroke.

d. Install the gland (6) making sure that the fitting hole in the gland aligns with the hole in the body.

e. Install the snap rings (9 and 10) and the fitting (8).

**9-57. INSTALLATION (see figure 9-87).**

a. Position the cylinder in place and install the mounting pins.

b. Install the anchor pins and the capscrews and lockwashers.

c. Attach the hydraulic lines to the cylinder. Be careful to keep dirt out of the system.

d. Lubricate both pins with multi-purpose grease.


e. Run the engine and replenish oil in the hydraulic tank to the top of the sight gauge.

**9-58. STEERING HYDRAULIC TANK.**

**9-59. GENERAL (see figure 9-69).**

9-60. The steering system hydraulic tank is located under the radiator in the frame. The

**SECTION 9  
STEERING**

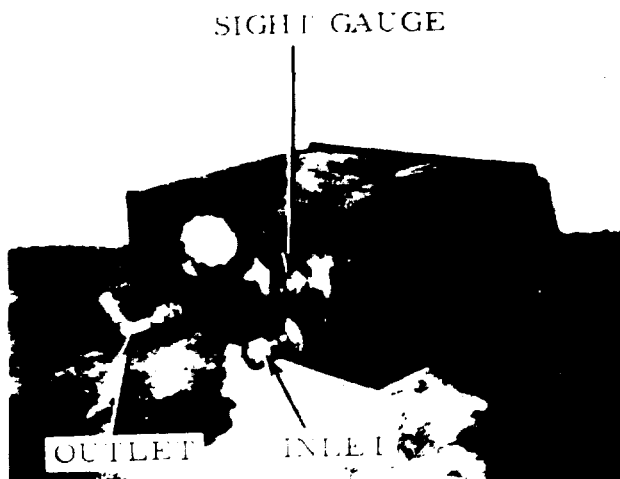

**FIGURE 9-69.**

tank has a filler tube, an inlet and an outlet connection and a sight gauge. Proper oil level is maintained just at the top of the sight gauge.

**9-61. REMOVAL.**

a. Remove the hydraulic hose between the pump and the steering control unit. Hold the end of the hose into a container and run the engine until the hydraulic tank is drained. Reconnect the hose to the control unit.

b. If ballast is kept in the front compartment, remove the ballast.

c. Remove the capscrews from the ballast cover (see figure 9-70).



**FIGURE 9-70.**

9-15.



**FIGURE 9-71.**

d. Remove the tank mounting capscrews (see figure 9-71).

e. Disconnect the inlet and outlet hoses, catching the oil which remained in the hoses in a container.

f. Cap the hoses and the connections on the tank.

g. Remove the tank through the ballast hole.

**9-62. INSTALLATION.**

a. Place the tank through the front ballast hole in its original position.

b. Replace the mounting capscrews and lockwashers and tighten them securely (see figure 9-71).

c. Connect the inlet and outlet hoses. Tighten all connections sufficiently to prevent pressure and vacuum leaks.

d. Fill the hydraulic tank to the top of the sight gauge with new oil.

e. Run the engine to check for leaks and observe if there is a loss of oil supply in the tank. Add oil until it again covers the sight gauge.

**9-63. CENTERPOINT HITCH.**

**9-64. GENERAL.**

9-65. The centerpoint hitch between the front

and rear frames consists of a vertical coupling to provide 35 degrees of centerpoint steering and a horizontal coupling for 20 degrees of oscillation between the frames. Loads are carried on self-lubricating, non-metallic bushings and thrust washers.

9-66. The horizontal coupling consists of two (2) pins. Each pin turns in a bushing with a thrust washer on each side.

9-67. The vertical coupling also consists of two (2) pins and bushings, but only one thrust washer is used with each pin. The washers are located on the top side of the upper bushing and on the bottom side of the lower bushing to carry thrust loads.

**9-66. REMOVAL.**


**NOTE:** Make sure to mark the pins. Only the two (2) vertical pins are identical.

a. Block both ends of the front and rear units.

**CAUTION:** Blocking of both ends of each half is necessary because varying ballast distribution may cause the ends to tip either direction.

b. Disconnect all hoses between the front and rear units. Disconnect the steering cylinders.

c. Remove the capscrews from the two

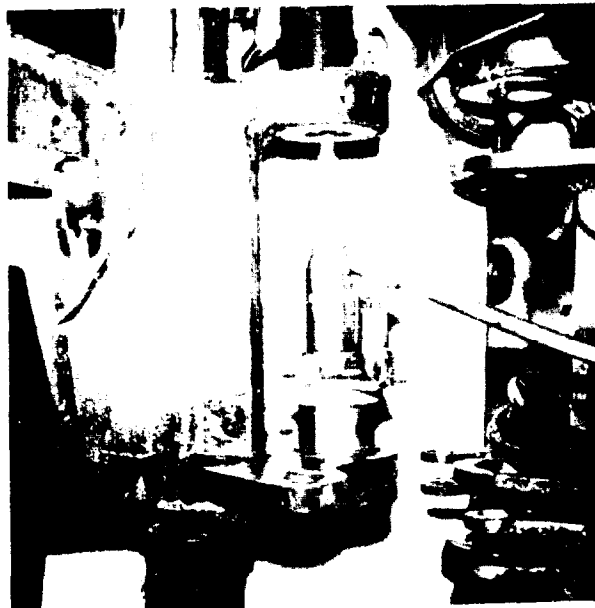


**FIGURE 9-73.**


vertical pins (see figure 9-72). Remove the pins with a drift and hammer or a hydraulic jack. Be careful not to damage the bushings.

d. Using an overhead crane or a PortaPower, separate the two halves far enough so that the hitch can be removed.

e. Using a tube with the same outer diameter as the bushings and a hydraulic jack, drive the bushings from the two (2) vertical pin holes (see figures 9-73 and 9-74).

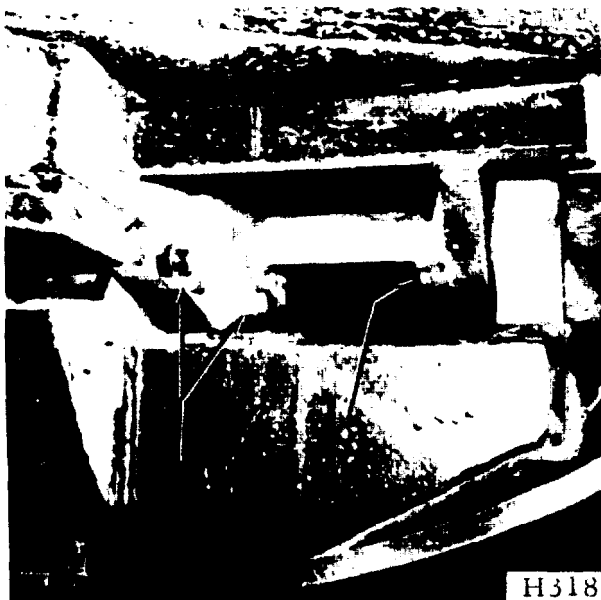

**FIGURE 9-72.**

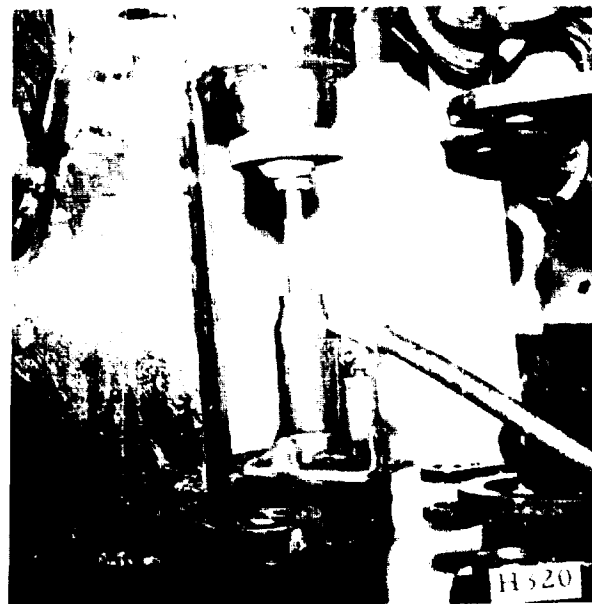

**FIGURE 9-74.**

**SECTION 9**  
**STEERING**

f. Support the hitch with blocks.

g. After removing the capscrews from the horizontal pins, force out the pins by prying with a bar between the pin heads and the bosses.

h. Lower and remove the hitch.

i. Inspect the bushings and remove them, if necessary, the same way as the vertical bushings (refer to step e).

**9-69. INSTALLATION.**

a. Press bushings into all four (4) holes and lubricate them with multi-purpose grease.

b. Apply grease to two (2) thrust washers and attach them to each side of the forward horizontal hole (see figure 9-75).

c. Raise the hitch so that the horizontal holes in the hitch line up with the holes in the mounting bosses.

d. Lubricate pins. Using a hydraulic jack, force both horizontal pins into place. Be careful that they do not bind.

e. Install the lock washers and capscrews.

f. Move the two (2) halves together so that the vertical pin holes on the front unit line up with those on the hitch (see figure 9-76).

g. Lubricate and force the bottom vertical pin with the washer into place with a hydraulic jack.



**FIGURE 9-75.**



**FIGURE 9-76.**

h. Install the lock washers and capscrews.

i. Carefully align the top hole and drive the lubricated pin with washer into place using a drift and hammer.

j. Reconnect the hoses and the steering cylinders.

k. Bleed the brakes at the wheel cylinders, and replenish any lost hydraulic oil. Fill tank to the top of the sight gauge.

**9-73. STEERING - DETROIT DIESEL (see figure 9-78).**

**9-74. GENERAL.**

9-75. The steering system for a C530A equipped with the Detroit Diesel engine is basically the same as its gasoline engine counterpart, except for the hydraulic pump and the flow divider. Figure 9-78 shows a schematic view of the steering system components and the connecting hoses.

**9-76. OPERATION.**

9-77. Fluid is transferred by the pump from the tank to the flow divider. Controlled flow is routed to the steering control unit, excess flow

to the inlet side of the pump and relief flow to the outlet side of the filter.

9-78. When the steering wheel is turned, the control unit meters fluid to the steering cylinders. When the compactor is turned, one piston is extended and the other retracted. Because of the hose routing between the cylinders, fluid enters the rod end of one cylinder and the base end of the other cylinder. The return fluid flows to the control unit, where it is routed to the filter. Relief flow from the flow divider joins the filtered flow and returns to the tank.

**9-79. STEERING PUMP (Detroit Diesel).**

**9-80. GENERAL.**

9-81. The steering pump is a positive displacement gear pump. It is located at the right rear of the Detroit Diesel engine and is gear driven.

9-82. The pump is made up of a housing, two (2) gears, four (4) bearings, a front cover and a rear cover. Pressure loading the front bearing assures correct gear-to-bearing clearance. During pump operation, pressurized oil is directed to an area between the front cover and

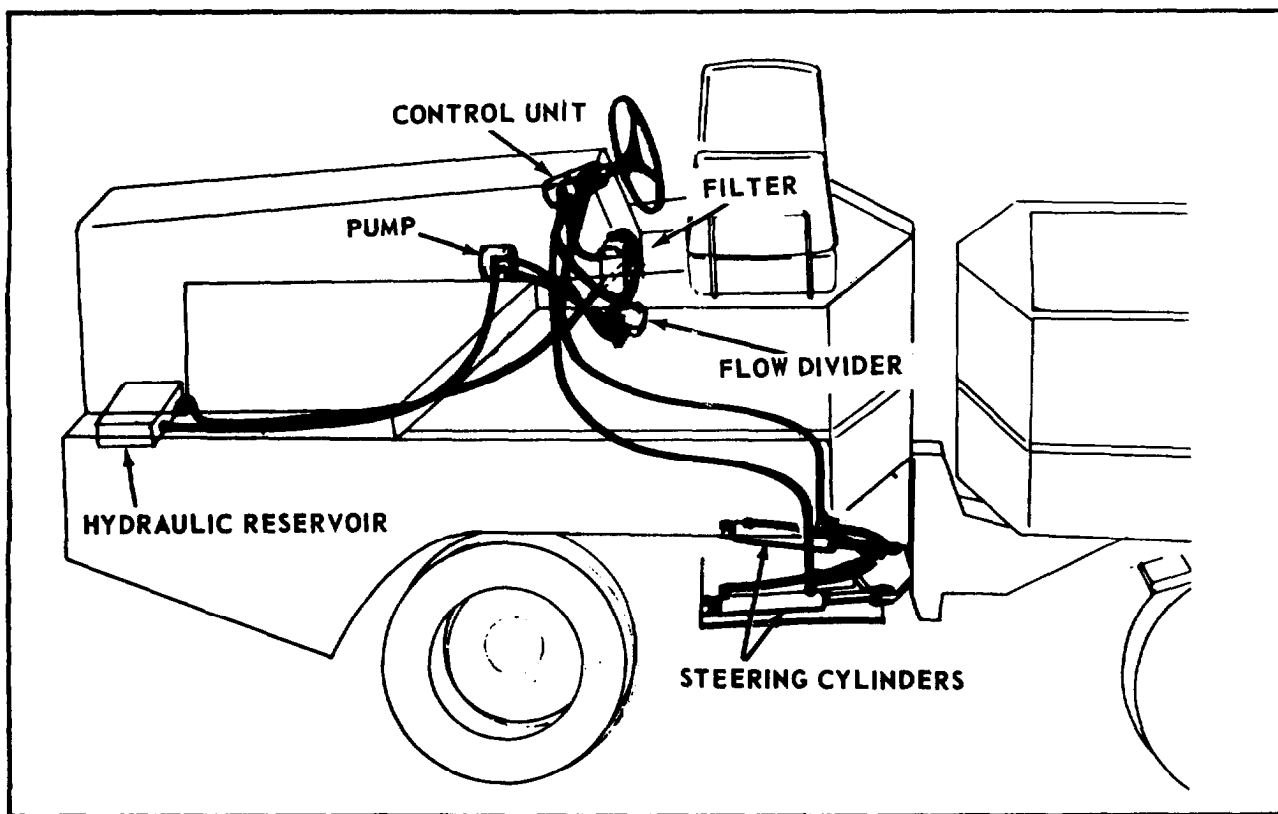


FIGURE 9-78.



**SECTION 9  
STEERING**


bearings, forcing them towards the gears. Pressure from the outlet side of the pump is against the opposite side of the bearings. When the two (2) pressures are balanced, a thin film of oil exists between the gears and bearings, and actual gear-to-bearing contact is prohibited.

9-83. Oil is prevented from by-passing the body and end covers by neoprene gaskets between the components. A replaceable shaft seal is pressed into the front cover. Communication of the high pressure and low pressure oils between the bearings and front cover is prevented by a "W" shaped seal. The two (2) pressures are separated by an o-ring and back-up ring placed on each bearing hub and between the bearings and cover.


**9-84. DISASSEMBLY.**

a. Clean pump exterior. Remove woodruff key and capscrews. Separate rear cover from body. Remove and discard gasket. Remove front cover. Remove and discard front cover gasket. Lift out "W" shaped gasket seal and neoprene spacer (see figure 9-79). Drive out shaft seal.


b. Mark relative position of front and rear bearings and body (see figure 9-80). Do not scratch. Use Prussian blue for marking of all pump parts. Push on rear of gear shafts until front bearings are free of the housing (see figure 9-81). Remove bearings. Mark relative position of gears, then extract gears. Match mark and remove rear bearings.

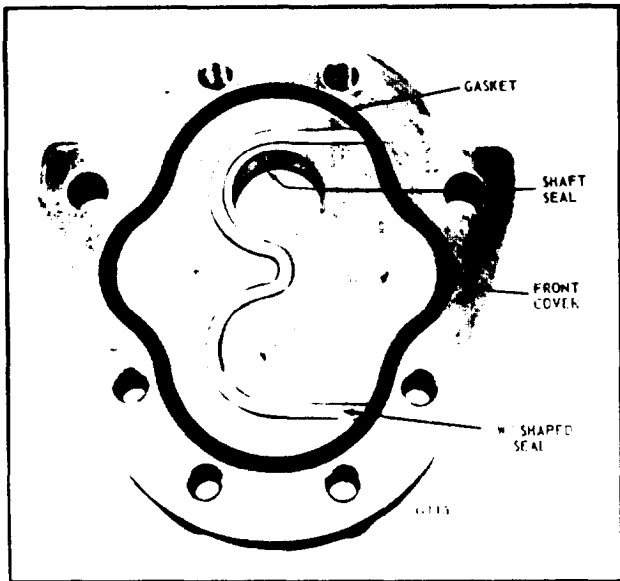

**FIGURE 9-79.**

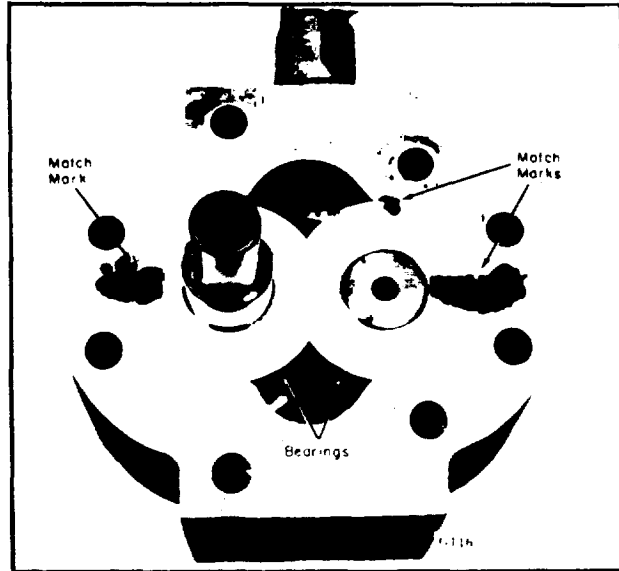

**FIGURE 9-80.**

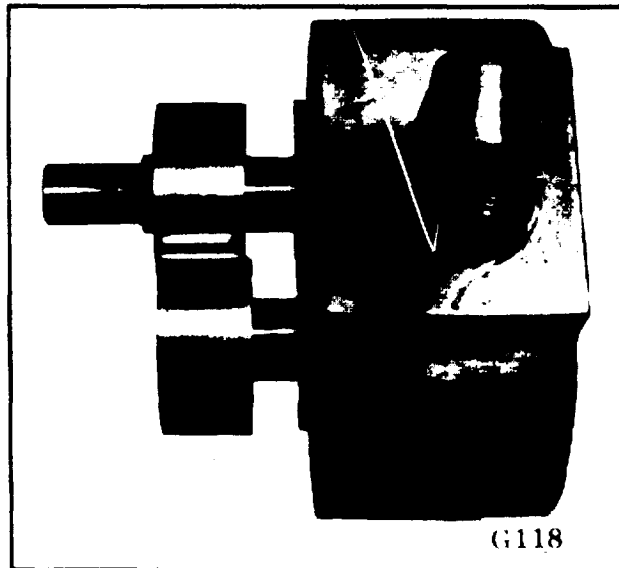

**FIGURE 9-81.**

**9-85. CLEANING AND INSPECTION.**

a. Clean all parts thoroughly in cleaning solvent.

b. Check gears and shafts for nicks, burrs, cracks, or chipping. Discard defective components.

c. Examine gear chamber of body for contact between gears and body, especially the Intake cavity of the body. Although wear of more than 1/64 of inch (.397 mm) is abnormal, it is not critical if the bearings are not defective. The intake cavity is shown in figure 9-82.

d. Inspect the body and bearing for irregularities of the bore caused by bearing attempting to turn or signs of working (see figure 9-63).

e. Examine bearings and body for scratches and pitting (see figure 9-84). Use fine sandpaper on a surface plate to dress out any slight imperfections of bearings. Do not attempt to remove deep scratches or gouges. Figure 9-85 illustrates method of dressing the bearing. Check bearing bores for concentricity or smearing (see figure 9-86). Place bearings in their respective positions in the body and check clearance between bearing flats. Under no circumstances should these clearances exceed specifications.



FIGURE 9-84.

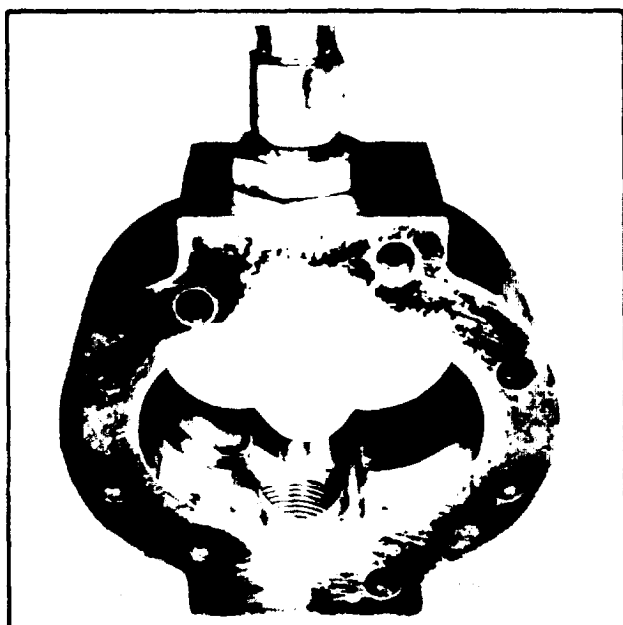


FIGURE 9-82.

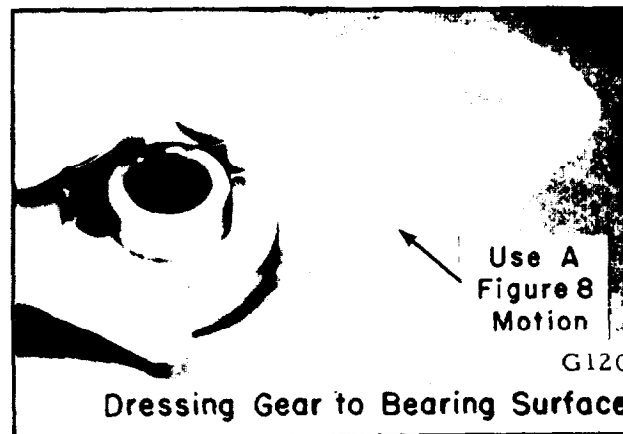


FIGURE 9-85.

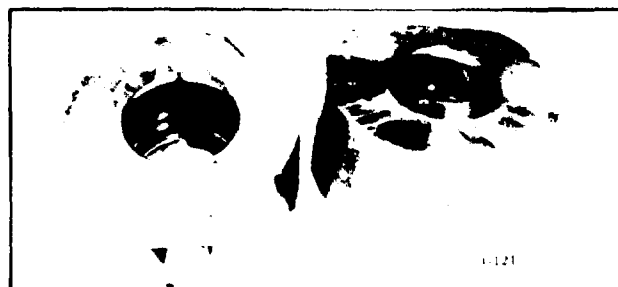


FIGURE 9-86.

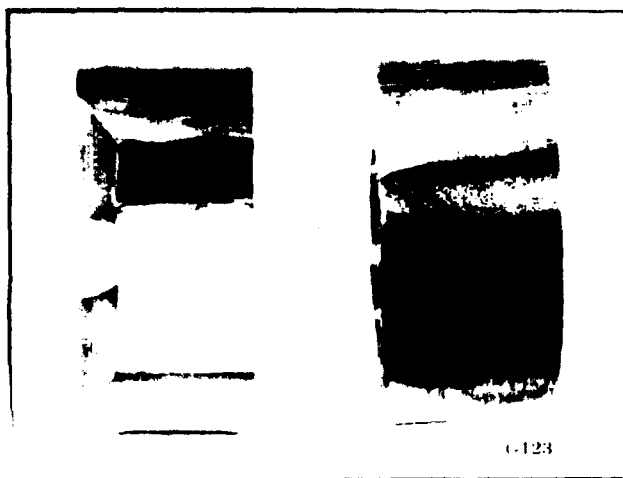


FIGURE 9-83.


f. Check milled seal and gasket recesses of the cover for any obstruction that would prevent normal seating. Make sure Internal threads of front cover and threads on capscrews are in good conditions.

**9-86. REASSEMBLY (see figure 9-87).**

a. Apply a light coat of non-hardening gasket cement to the bore in the front cover. Press new shaft seal into the bore and wipe off excess cement. Stake seal in three places.

**NOTE:** Generously lubricate all parts with SAE 10W oil during pump assembly.

**SECTION 9  
STEERING**

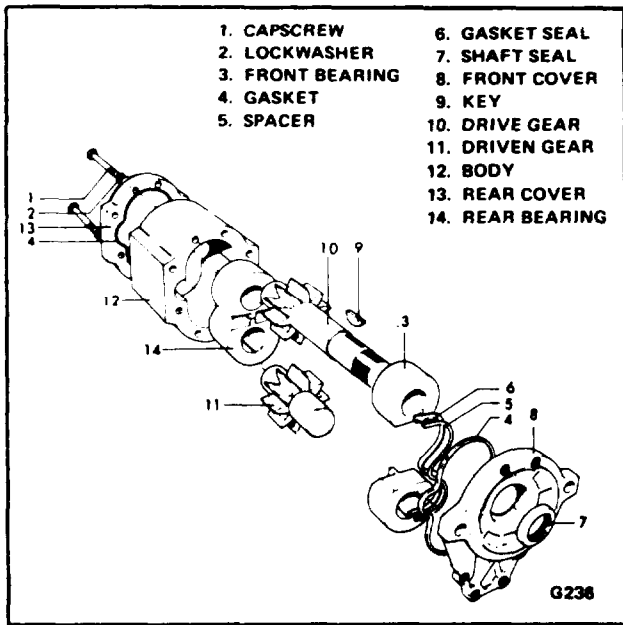

**FIGURE 9-87.**

b. Install front bearing, gears and rear bearings in their respective positions. Make sure all marks previously made during disassembly are aligned.

c. Position gasket, spacer and "W" shaped gasket seal in front cover recesses.

d. Assemble front and rear cover to the body, being careful that the "W" gasket seal retains its position in the recess of the front cover. Tighten capscrews to specified torque.

**NOTE:** The pump rotation is identified by an arrow stamped on the pump body. When assembling the pump, the front cover (drive end of the pump) should be located on the "arrow" end.

**9-87. INSTALLATION.**

a. Check engine RPM to see that pump will not be run beyond maximum design speed. Erratic high idle speed is probably caused by dirty or faulty governor.

b. Check all hoses for frayed, worn or soft spots. Replace as necessary to prevent filling system with foreign matter. A soft suction line may collapse and cause pump damage or failure.

c. Clean the entire hydraulic system by draining and refilling with clean oil of proper specifications. Change the hydraulic filter.

**9-21.**

d. Start engine at 1,000 RPM for at least 10 minutes after the pump has been primed, then check for abnormal hot spots. If any particular area is hot, disassemble and inspect

f. Adjust pressure relief valve to specified pressure. Operate the unit, turning it in one direction, then in the other, several times. Check for abnormal hot spots. If no hot spots are felt, the unit may be placed in service. Otherwise, disassemble, inspect and repair the pump as necessary.

**9-88. FLOW DIVIDER (Detroit Diesel).**

**9-89. GENERAL.**

9-90. The flow divider is mounted on top of the powershift transmission. Four hoses are routed to and from the flow divider.

9-91. The unit consists of a body, a pressure-compensated piston and a pilot operated relief valve.

9-92. Port "P" is for pump supply hose. Port "CF" is for controlled flow and is connected to the steering control unit at the dashboard. Port "EF" is for excess flow and is connected to the inlet fitting of the pump. Port "S" is for relief flow and is connected to the outlet fitting on the steering oil filter.

**9-93. OPERATION (sw figure 9-88).**

9-94. At low pump speed, with input flow equal or less than set controlled flow, all flow is directed to the controlled flow "CF" port. The pressure-compensating piston prevents or blocks any flow to the excess flow port. Controlled flow in this situation may be used up to the full integral relief valve pressure; however, the rate of controlled flow will decrease if the input flow decreases.

9-95. When input flow is increased, the pressure-compensated piston, in maintaining a fixed pressure drop across the orifice, moves further away from its stop position to allow fluid to flow from the input port to the excess flow "EF" port in maintaining the set controlled flow.

9-96. The pilot operated relief valve is factory set to 1500 ± 50 PSI (105.5 ± 3.5 kg/cm) and cannot be adjusted. This valve relieves excessive pressures due to shock loads or other causes.

**9-97. REMOVAL.**

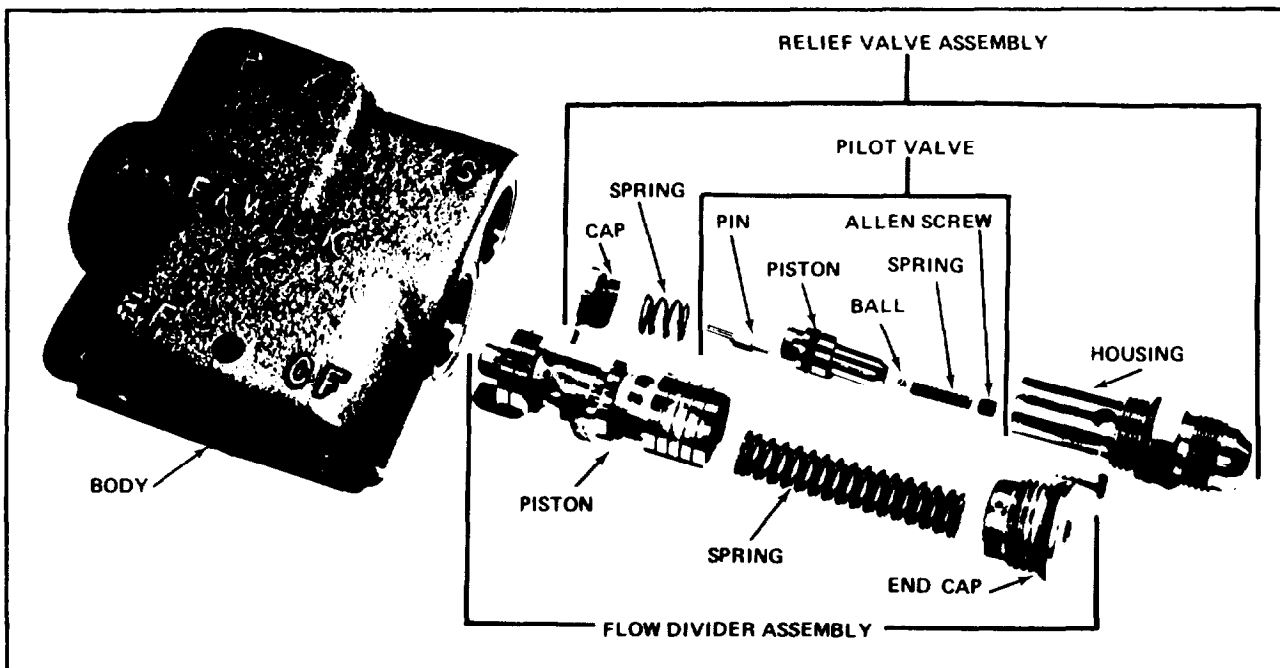


FIGURE 9-88.

a. Remove all hydraulic lines from the flow divider and cap all openings.

b. Unscrew mounting capscrews and remove flow divider from mounting bracket.

**9-98. DISASSEMBLY (see figure 9-88).**

**CAUTION:** The piston end cap is spring loaded.

a. Remove end cap, spring and piston.

b. Remove relief valve assembly. If further disassembly of the relief valve is required, follow these steps:

(1). Remove the spring loaded end cap and remove the spring and pin.

(2). Push the piston out of the housing by inserting a small drift into the hose end of the housing. Removal of piston may be difficult because the o-ring has to slide past threads.

**9-99. INSPECTION.**

a. Clean all parts thoroughly.

b. Check bores and spools for nicks and scratches. Spools must slide freely in their

bores.

c. Ports and orifices must be free of obstructions.

**9-100. REASSEMBLY AND INSTALLATION (see figure 9-88).**

**NOTE:** Replace and oil all o-rings.

a. Insert the relief valve piston into the relief valve housing. Insert the pin into the piston (the short side goes into the piston) and the spring. Screw the end cap into relief valve housing.

b. Screw the relief valve housing assembly into the flow divider.

c. Install the piston, spring and cap.

d. Install the mounting capscrews.

e. Connect the hydraulic lines.

**9-101. ADJUSTMENT.**

9-102. The relief valve is factory set  $1500 \pm 50$  PSI ( $105.5 \pm 3.5$  kg/cm<sup>2</sup>). Do not try to adjust or repair the relief valve, but replace the whole valve.

**SECTION 10**  
**BRAKES MO REAR WHEEL ASSEMBLY**

**10-1. GENERAL.**

10-2. This section contains overhaul instructions for the components of the brake and rear wheel assemblies. The overhaul instructions include removal, disassembly, cleaning, inspection, reassembly and installation procedures. Design specifications are given in Section 2 and a troubleshooting guide is presented in Section 5.


**10-3. SERVICE BRAKE SYSTEM.**

**10-4. GENERAL.**

10-5. The service brake system consists of a master cylinder assembly, four brake cylinder assemblies and the necessary lines and connections. The master cylinder and brake cylinders are fitted with pistons which act as a seal to maintain pressure and to prevent loss of brake fluid.

10-6. Pressing the brake pedal moves the piston within the master cylinder, thus displacing the brake fluid from the master cylinder through its outlet orifices, tubing and connections into the wheel cylinders. The non-compressible brake fluid enters each of the wheel cylinders, causing the cylinders piston to move outward and actuate the brake shoes. As the force on the pedal is increased, greater hydraulic pressure is built up within the wheel cylinders and, consequently, greater force is exerted against the shoes.

10-7. When the pressure on the pedal is released, the brake shoe retracting springs return the brake shoes to their normal released position. The return movement of the brake shoes, in turn, causes movement of the wheel cylinder pistons toward their release position, thus forcing the fluid back through the tubing into the master cylinder.

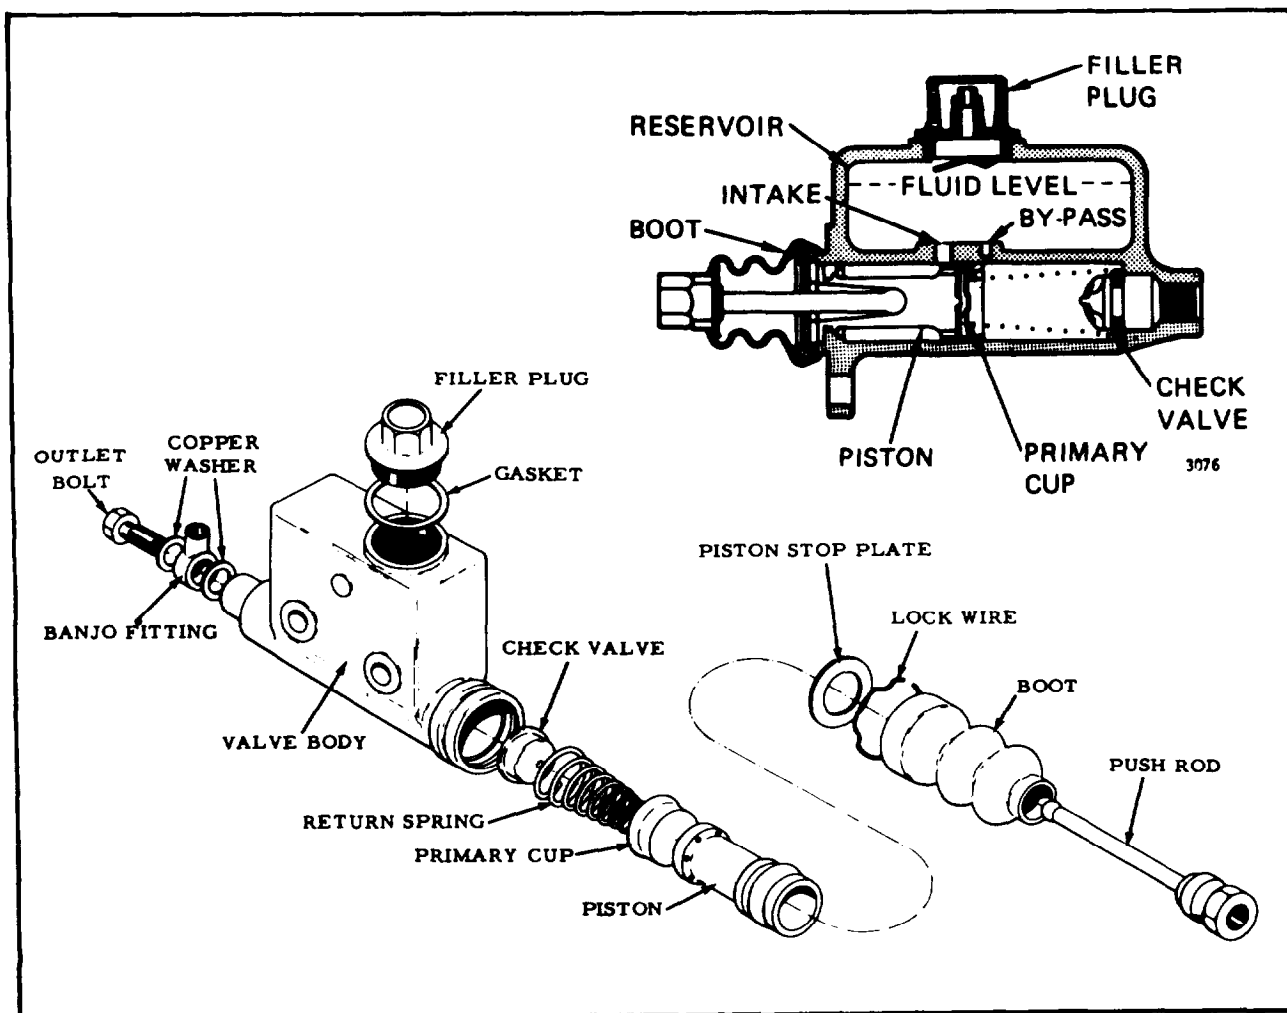

**FIGURE 10-1.**

### **10-8. MASTER CYLINDER.**

### **10-9. GENERAL.**

10-10. The master cylinder is bolted to the center of the rear panel of the cockpit in a horizontal position.

### **10-11. REMOVAL.**

- a. Remove the floor plate.
- b. Disconnect the hydraulic line from the cylinder and plug or tape the opening.
- c. Disconnect the pedal return spring.
- d. Remove cotter key and slide the pin out that mounts the cylinder actuator rod to the lever.
- e. Remove the mounting capscrews and remove master cylinder.

### **10-12. DISASSEMBLY (see figure 10-1).**

- a. Thoroughly clean the exterior of the cylinder with denatured alcohol.
- b. Remove the filler plug and gasket. Empty the reservoir.
- c. Place the cylinder in a vise equipped with soft jaws. Remove the rod end and push rod as an assembly.
- d. Remove the cylinder boot and the brake line fittings.
- e. Carefully snap the lock ring out of the groove in the cylinder bore.

**WARNING:** While removing the lock wire, keep pressure against the piston. The internal parts are spring loaded and when the lock wire is removed, the parts could be released with considerable force.

- f. Remove the piston stop plate, piston, primary cup, spring, and check valve.

### **10-13. CLEANING AND INSPECTION.**

10-14. Clean all parts in denatured alcohol making sure there is no trace of dirt, sludge, metal particles, or other foreign materials on or in the cylinder components.

**NOTE:** Do not use mineral base solvents to

clean cylinder components, as they will attack and deteriorate rubber parts.

10-15. Hold cylinder toward a strong light and sight through cylinder bore. Inspect wall for pitting and scratches. If any of these or other defects are noticed, hone the cylinder wall.

10-16. Measure if cylinder bore diameter is 1-1/8 inch (28.58 mm). Discard cylinder if diameter is increased to .005 inch (.127 mm) over standard. Pressure marks and discolorations may be polished out with crocus cloth. Make sure intake and by-pass ports are open. The by-pass port may be probed with a soft iron wire (see figure 10-1).

**NOTE:** Burrs in the by-pass port are caused by honing the cylinder wall and probing the by-pass port. These must be removed. Otherwise, the primary cup may be damaged during assembly or brake operation.

10-17. Check piston bearing surface for scratches or corrosion and rubber parts for swelling, softening and tackiness. The spring must be free of corrosion and pits. Make sure the vent in the filler cap is open.

### **10-18. REASSEMBLY (see figure 10-1).**

a. Always use the repair part kit listed in the Hyster parts manual. Installation of "will fit" parts is not recommended.

b. Lubricate all of the master cylinder internal parts with clean brake fluid prior to reassembly.

c. Make sure that all burrs are removed from the cylinder housing bore before installing new parts. Make sure that the bore is clean.

d. Install the check valve, spring, primary cup, piston, and piston stop plate.

e. Keeping pressure on the piston, carefully install the lock ring into the groove of the cylinder bore.

f. Place the cylinder in a vise equipped with soft jaws. Install the brake line fitting using new gaskets. Install the push rod and rod end assembly.

g. Install the filler plug, using a new gasket.

h. After the cylinder has been assembled,

## SECTION 10 BRAKES AND REAR WHEEL ASSEMBLY

purge it with clean hydraulic fluid. To purge the cylinder:

- (1). Fill the reservoir with fluid. Work the piston through the entire stroke until fluid is forced from the fitting end of the cylinder.
- (2). Fill the reservoir with fluid. Work the fitting hole, continue to work the piston until at least 1/4 pint (.118 ltr.) of fluid is expelled from the fitting hole. Throughout the purging, keep sufficient fluid in the reservoir to prevent air from being pumped into the cylinder.
- (3). Cap fitting end of cylinder. Then fill reservoir.
- (4). Place a new gasket on the filler cap and screw the cap into the reservoir.

### 10-19. INSTALLATION.

- a. Attach the master cylinder with the capscrews, lockwashers and nuts.
- b. Attach brake lever by installing the round pin. Secure them with a cotter pin.
- c. Connect the hydraulic line.
- d. Install the pedal return spring.

### 10-20. ADJUSTMENT (see figure 10-2).

- a. Loosen both rod ends on linkage rods at base of pedal.

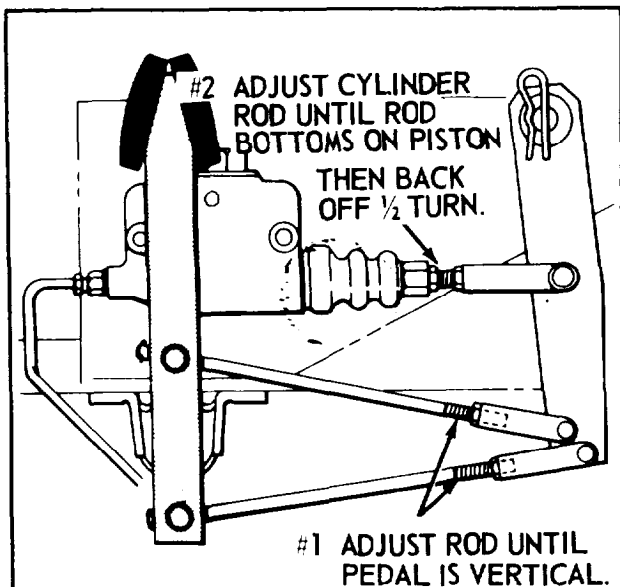


FIGURE 10-2.

- b. Adjust rod ends to allow pedal a vertical position. Tighten rod ends.

- c. Loosen master cylinder rod end and screw rod in until contact is made with the piston (very light pressure). Back off rod 1/2 turn.

### 10-21. OUTSIDE REAR WHEELS.

### 10-22. GENERAL.

10-23. There are five (5) wheels attached to the rear unit. Four (4) identical internal expanding brakes act on the four (4) outside wheels. The two (2) oscillating wheels on each side of the center wheel are pin mounted. The center wheel is separately mounted and is spring adjusted. It will be described in detail later.

10-24. The removal and installation procedures for each outside rear wheel assembly are identical.

### 10-25. REMOVAL OF OUTSIDE REAR WHEEL ASSEMBLY.

- a. Block up the rear unit far enough to take the load off the rear wheels and the mounting pin.
- b. Disconnect the brake hose clamps from the frame (see figure 10-3).

**NOTE:** It is not necessary to disconnect the


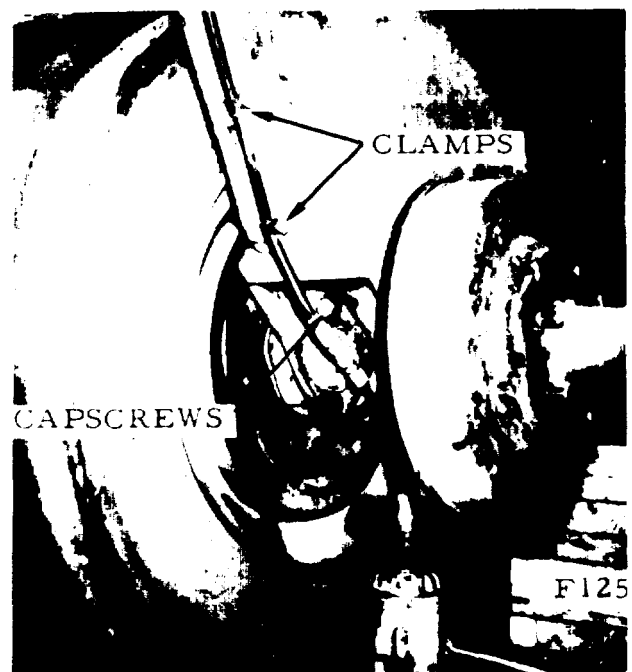


FIGURE 10-3.

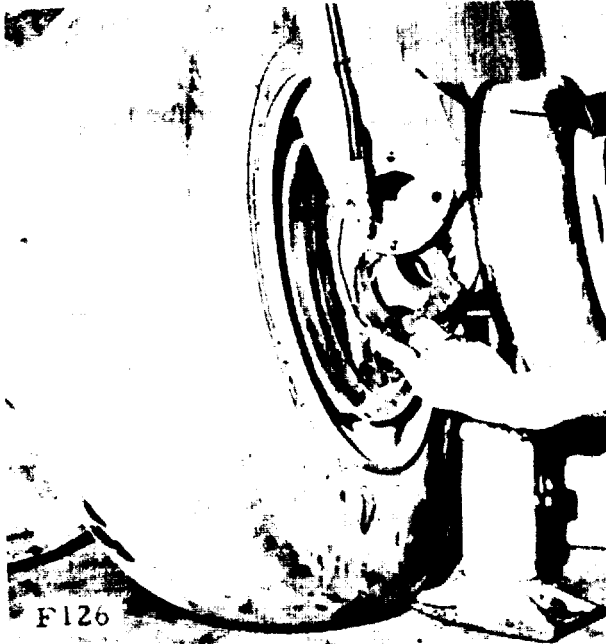

**FIGURE 10-4.**

brake lines unless the wheel assembly is rolled away from the unit.

c. Remove the pin retaining capscrews and the pin (see figure 10-4).

d. Raise the frame high enough so that the axle will clear the mount. Remove the thrust washers and roll out the wheel assembly toward the hitch.

**CAUTION:** The axle may turn with the wheels as the wheels roll. This can sever the brake tube if it was not disconnected from the hose.

#### 10-26. CLEANING AND INSPECTION.

a. Inspect the bushings for cuts. If they have to be replaced, drive the old bushings out and the new bushings in with a round of the same diameter as the bushing and a hammer. Lube the inside of the hole before installing the bushings.

b. Inspect the thrust washers for wear.

#### 10-27. INSTALLATION.

a. Jack up the rear unit far enough that the rear axle will clear the mount when the wheel assembly is rolled in place from the hitch side of the rear frame.


**NOTE:** The flat machined part of the axle is on top.

b. Lower the frame so that the hole in the mount and the axle line up.

c. Grease and install the thrust washers between the axle and the mounts (see figure 10-5).

d. Grease the pin and install it making sure that it does not bind and damage the bushings.

e. Install the lockwashers and capscrews and torque them to 80 ft.-lbs. (11.06 kg-m) lubed.

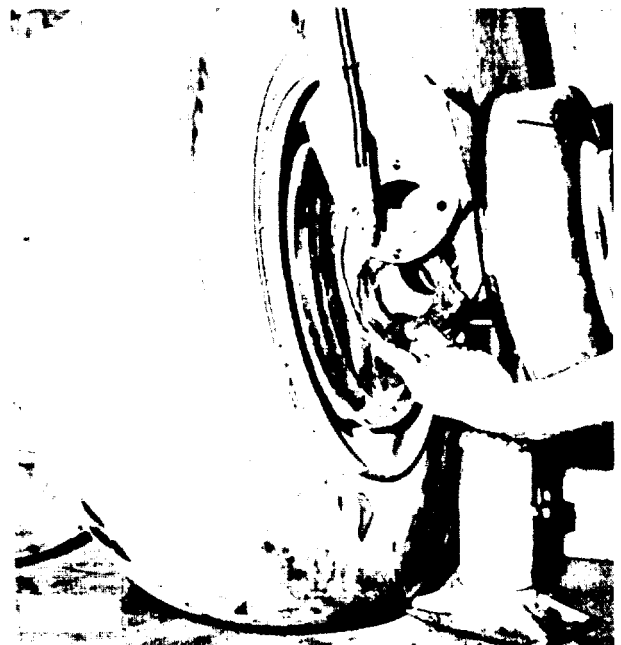

**FIGURE 10-5.**

#### 10-28. WHEEL BRAKES.

#### 10-29. REMOVAL OF WHEEL BRAKES.

**NOTE:** To work on the outer brake alone, only the outboard wheel needs to be removed. To service the inner brake assembly, the whole wheel assembly has to be removed as described under OUTSIDE REAR WHEELS - Removal.

a. Remove the wheel nuts and the wheel.

b. Remove the brake lines.

c. Remove the grease cap, cotter pin, wheel



**SECTION 10  
BRAKES AND REAR WHEEL ASSEMBLY**

nut and washer.


d. Remove the outer bearing (see figure 10-6).

e. Slide the brake drum and hub off the axle.

f. Remove the brake assembly by removing the mounting capscrews.



**FIGURE 10-6.**

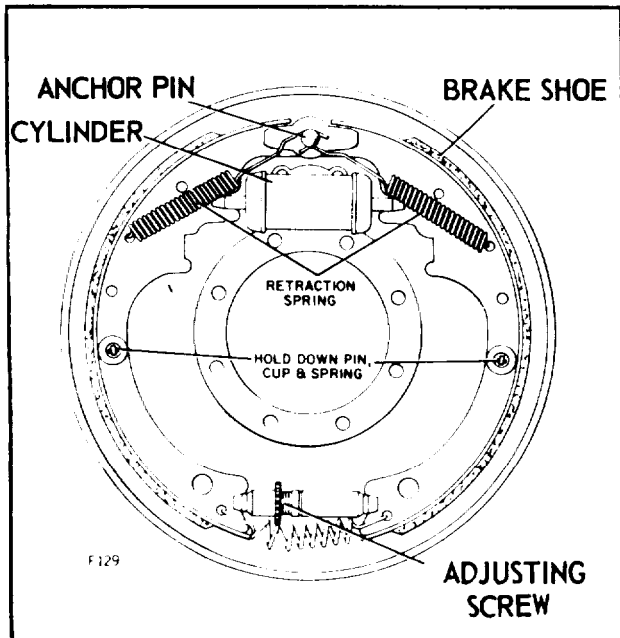

**FIGURE 10-7.**

10-5.

**10-30. DISASSEMBLY OF WHEEL BRAKES  
(see figure 10-7).**

a. Remove the two (2) retraction springs from the anchor pins.

b. Remove the spring and adjusting screw assembly.

c. Remove the hold-down cup so that the hold-down pin can be rotated and removed with the spring.

d. Remove the brake shoes.

e. Remove the wheel cylinder.

**10-31. CLEANING AND INSPECTION.**

10-32. Use solvent to clean all metal parts, except the brake shoe assemblies. The shoe rib and table can be wiped with solvent dampened cloth. No solvent should get on the lining. Since solvent may not readily remove brake fluid residue, use denatured alcohol for this purpose.

10-33. Examine drums for cracks, heat checks, and deep grooves. The drums should not be bell-mouthed or barrel-shaped nor should any mounting holes be elongated. If any of these exist, the drums should be replaced. Glaze on drums, otherwise in good condition, can be removed by sanding with coarse sandpaper.

10-34. The brake shoe linings should be replaced if worn almost to the table or if the bonding agent is failing. Do not attempt to save lining with deep scores or soaked with either grease or brake fluid.

**NOTE:** The wheel cylinder should be overhauled whenever brake linings are replaced. Refer to figure 10-9 for parts arrangement.

10-35. Check all springs and shoe hold-down parts. Discard any part that is broken, rusted, twisted, nicked or appears fatigued.

10-37. Check backing plate for distortion.

10-37. Inspect the tapered roller bearings on the axle for wear and replace if necessary.

**NOTE:** The brake shoe abutments should be lightly coated with brake lubricant.

10-38. Inspect the brake drum for replacement

or turning before reassembly.

**10-39. REASSEMBLY OF WHEEL BRAKES**  
(see figure 10-7).

- a. Install the wheel cylinder.
- b. Replace the brake shoes and install the hold-down pins, cups and springs.
- c. Install the bottom spring and adjusting screw assembly.
- d. Install the retraction springs.

**10-40. REAR WHEEL HUB INSTALLATION.**

- a. Install the brake assembly with lock-washers and capscrews. Torque to 65 ft.-lbs. (8.98 kg-m).
- b. Pack the inner bearing with grease and install it.
- c. Install a new grease seal in the brake drum and hub. Install drum and hub.
- d. Pack the outer bearing and install it. Install the washer and locknut.

**10-41. CENTERING BRAKE SHOE ASSEMBLY**

- a. Center brake assembly in the drum.
- b. Loosen anchor pin nut.
- c. Expand shoes by taking up on adjusting screw until drum can barely be turned by hand.
- d. Tap backing plate near anchor pin to center shoes in the drum.
- e. Torque anchor pin nut to 175 ft.-lbs. (24.19 kg-m).
- f. Back off on adjusting screw until brake is just free of drag (10-12 clicks).

**10-42. REAR WHEEL INSTALLATION.**

- a. Place the wheel in position and tighten wheel lug bolts or nuts to 50% of the recommended torque value, using an alternating sequence as shown in Section 8, figure 8-43. Recommended torque is 80 ft.-lbs. (11.06 kg-m).
- b. Repeat the sequence, and tighten to 75% of the recommended torque value.

c. Repeat procedure until full torque is obtained.

d. Place unit in operation and recheck torque after 8 hours of operation. If torque is less than recommended value, retighten to proper specification.


**10-43. WHEEL BEARING ADJUSTMENT.**

a. Torque locknut to 150 ft.-lbs. (20.73 kg-m) while rotating wheel hub. Back off locknut until wheel hub turns freely with no end play (torque on locknut at this point should be less than 20 ft.-lbs. (2.76 kg-m)). Retorque to 25 ft.-lbs. (3.46 kg-m) and turn to next position where cotter pin can be installed.

b. Install grease cap. Bleed the brakes.

**10-44. BLEEDING BRAKES WITH PRESSURE BLEEDER.**

a. Remove the master cylinder fill plug and attach the pressure brake bleeder (see figure 10-8).

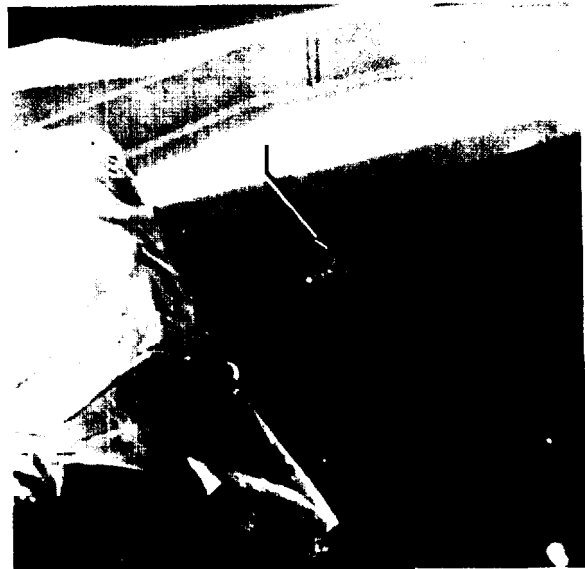

**FIGURE 10-8.**

b. Jack up the rear frame so that the rear wheel assemblies can be oscillated. This is necessary to get to the bleed port on the backing plate.

c. Loosen the bleed screw and allow brake fluid and air to escape. Continue until only brake fluid is flowing from the bleed screw. Tighten the bleed screw.


**SECTION 10  
BRAKES AND REAR WHEELASSEMBLY**

**NOTE:** It will be easier to reach the bleed screws if a long reach 7/16 inch wrench is used.

d. Repeat step c for all bleed screws.

**10-45. WHEEL BRAKE CYLINDERS (see figure 10-9).**

There are four (4) wheel brake cylinders. For removal refer to WHEEL BRAKES - Removal and Disassembly.

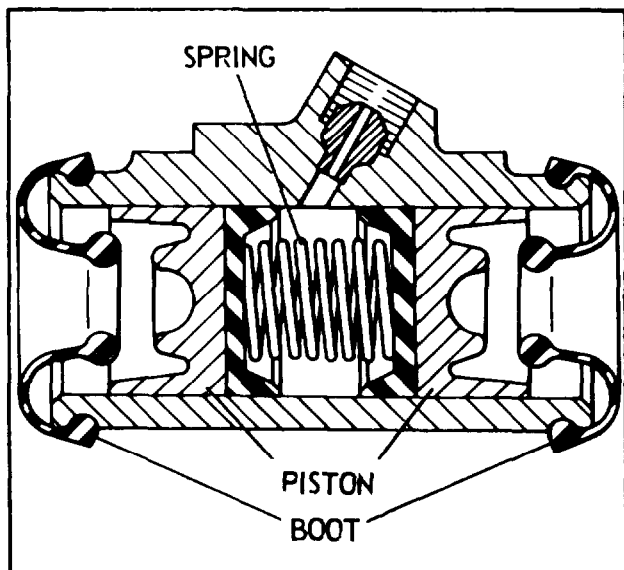

**FIGURE 10-9.**

**10-46. CENTER WHEEL.**

**NOTE:** To remove the center wheel, the left rear wheel assembly must be removed as described under OUTSIDE REAR WHEELS - Removal.

**10-47. CENTER WHEEL REMOVAL.**

a. After removing the left rear wheel assembly, remove the wheel nuts and the center wheel.

b. Remove the mounting pin capscrews (see figure 10-10) and remove the pins (see figure 10-11).

c. Remove the wheel support bracket with the spring, pin and pivot block.

d. Remove the thrust washers.

**10-48. DISASSEMBLY.**


**10-7.**



**FIGURE 10-10.**



**FIGURE 10-11.**

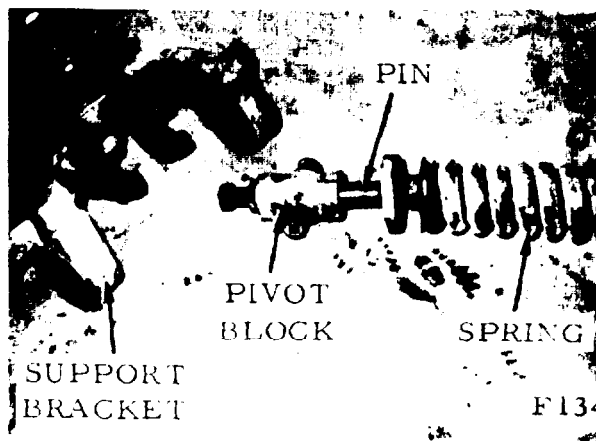

**FIGURE 10-12.**


**SECTION 10**  
**BRAKES AND REAR WHEEL ASSEMBLY**

a. Remove the spring, pin and pivot block from the wheel support bracket (see figure 10-12).

b. Remove the grease cap, locknut, washer and outer bearing from the axle (see figure 10-13).

c. Remove the hub (see figure 10-14).

d. Remove the inner bearing and the grease seal.

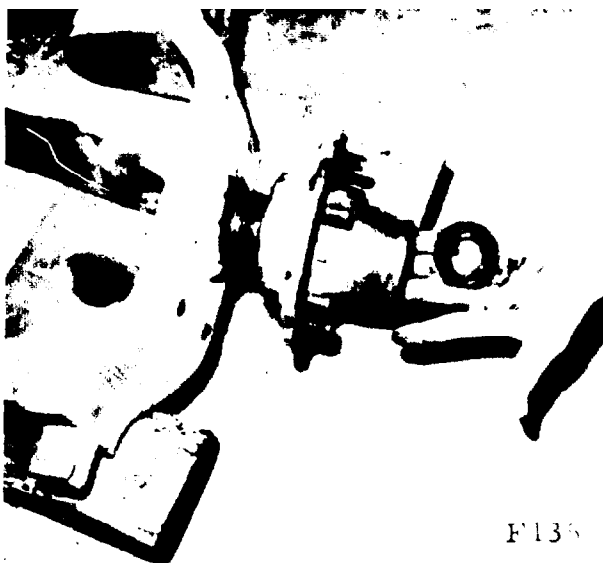

**FIGURE 10-13.**



**FIGURE 10-14.**

e. If the bushings have to be replaced, drive them out with a round and hammer (see figure 10-15).

**10-49. CLEANING AND INSPECTION.**

a. Clean all parts in solvent or denatured alcohol.

b. Inspect the bearings and races for wear, nicks and burrs. Replace bearings if necessary.



**FIGURE 10-15.**

**10-50. REASSEMBLY.**

a. Pack the inner bearing and install it in the hub.

b. Install the grease seal in the hub.

c. Slide the hub over the axle.

d. Pack the outer bearing and install it and the washer and locknut. Bend the cotter pin.

**10-51. CENTER WHEEL BEARING ADJUSTMENT.**

a. Torque locknut to 150 ft.-lbs. (20.73 kg-m) while rotating wheel hub. Back off locknut until wheel hub turns freely with no end play. Torque on locknut at this point should be less than 20 ft.-lbs. (2.76 kg-m). Retorque to 25 ft.-lbs. (3.46 kg-m) and turn to next position where cotter pin can be installed.

**SECTION 10**  
**BRAKES AND REAR WHEEL ASSEMBLY**

- b. Install the grease cap.

**10-52. INSTALLATION.**

a. Install the lubed thrust washers. One goes against the inside of rear mounting boss and the other against the inside of the front mounting boss (see figure 10-16).

b. Assemble the spring, pin and pivot block and rest them in the wheel support bracket (see figure 10-12).

- c. Install the whole assembly.

d. Install the mounting pins and secure them with lockwashers and capscrews. Torque to 30 ft.-lbs. (4.15 kg-m).

- e. Install the wheel.

**10-53. ADJUSTMENT.**

**NOTE:** Spring adjustment depends on the rear ballast load.

a. Place the compactor on a flat, even surface.

- b. Load compactor to desired weight.

c. Loosen jam nut and turn adjusting screw until the center wheel is vertical (using wheel rim for reference point - see figure 10-17).

- d. Tighten jam nut.

- e. Readjust when ballast weight is changed.

**NOTE:** If the wheel is tilted to the right, it is loaded too much. If it tilts to the left, it is not sufficiently loaded.


**10-54. PARKING BRAKE.**

**10-55. GENERAL.**


10-56. The parking brake is of the Internal expanding shoe type, mechanically actuated by means of a cable and linkage.

10-57. The brake drum and shoe assembly is mounted to the rear of the transfer box under the cockpit floorboard. An over-center hand-lever, mounted to the right side frame under the cockpit floor plate, actuates the two internal expanding shoes. An adjustable knob on the end of the lever allows for quick and accurate brake adjustment.

**10-9.**

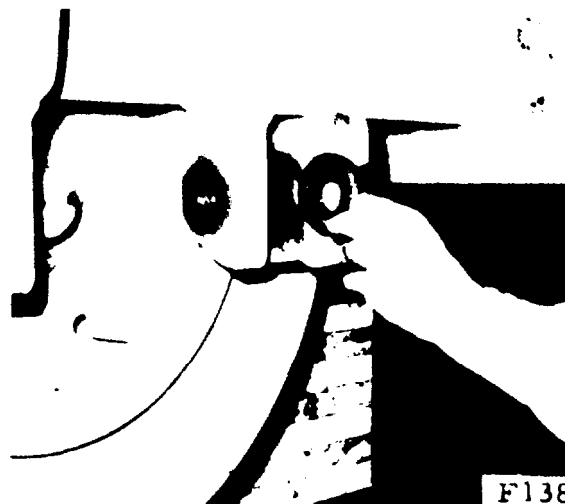

**FIGURE 10-16**

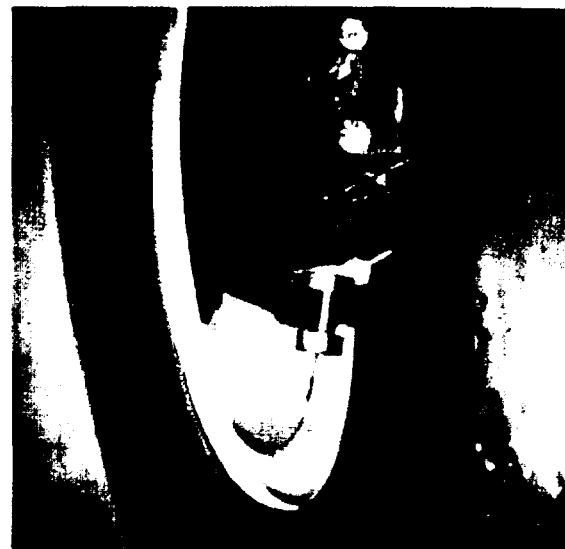

**FIGURE 10-17.**

10-58. The parking brake is for static parking only. Braking of a moving vehicle should be done with the rear wheel brakes.

**10-59. REMOVAL AND DISASSEMBLY (see figure 10-18).**

- a. Remove the floor plate.
- b. Remove the brake drum locknut. Release the brake and remove the brake drum.
- c. Remove the spacer seated around the splined brake shaft.
- d. Disconnect and remove the brake return springs. Remove the brake shoes.

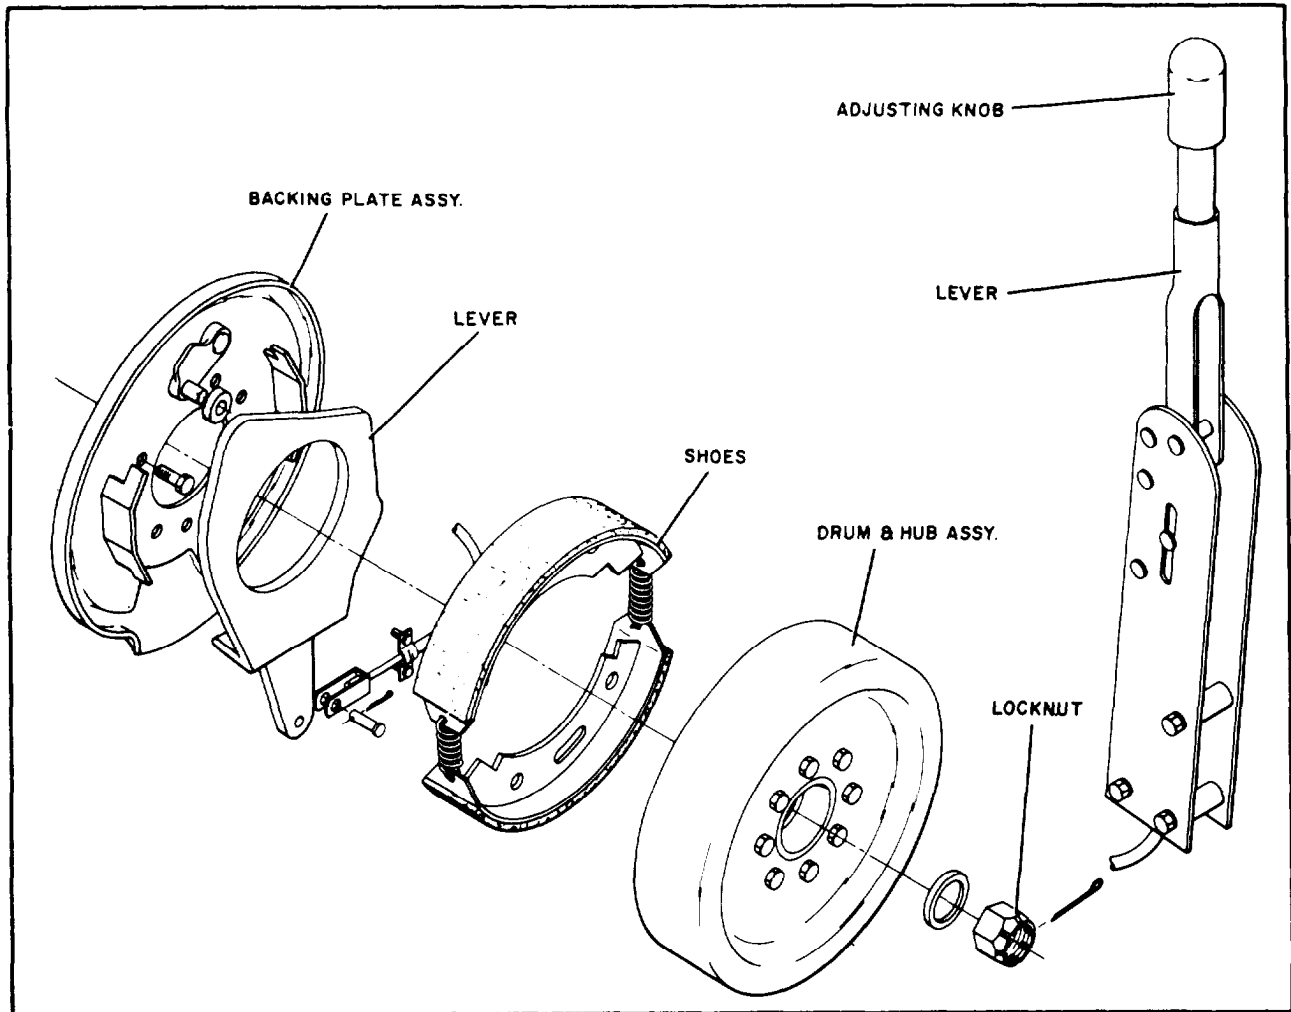


FIGURE 10-18

e. Lift out the brake shoe actuating lever and disconnect it from the brake cable.

f. Remove the nylon bushings from the brake shoe actuating cranks.

g. Remove the backing plate.

#### 10-60. CLEANING AND INSPECTION.

a. Use solvent to clean all metal parts, except the brake shoe assemblies. The shoe rib and table can be wiped with solvent dampened cloth. No solvent should get on the lining.

b. Examine drum for cracks, heat checks and deep grooves. The drums should not be bell-mouthed or barrel-shaped, nor should the mounting holes be elongated. If any of these exist, the drum should be replaced. Glaze on the drum, which is otherwise in good condition, can be removed by sanding with coarse sandpaper.

c. The brake shoe linings should be replaced if worn almost to the table or if the bonding agent is falling. Do not attempt to save lining soaked with oil or with deep scores.

d. Check springs and discard them if broken, rusted, twisted, nicked or appear fatigued.

#### 10-61. REASSEMBLY (see figure 10-18).

a. Install backing plate with the actuating lever depression at the top. Torque capscrews to 30 ft.-lbs. (4.2 kg-m).

b. Install the nylon bushings on the brake shoe actuating cranks. Connect the actuating lever to the brake cable and position the lever so that its arm lies in the backing plate depression.

c. Position brake shoes on the backing plate and actuating cranks.

**SECTION 10**  
**BRAKES AND REAR WHEEL ASSEMBLY**

d. Connect brake shoe return springs in slots nearest the backing plate.

e. Install the spacer on the splined shaft and bottom the spacer against the exposed bearing.

f. Install a new oil seal on the brake drum hub. Carefully push the brake drum on the splined shaft, over the brake assembly, until the hub bottoms.

g. Install the hub locknut and tighten. Set the hand brake and torque locknut to 100 ft.-lbs. (13.82 kg-m) minimum. Back off one

slot and install cotter pin.

**10-62. ADJUSTMENT.**

10-63. Normally the parking brake requires only one adjustment, which can be made by turning the knob on the handlever (see figure 10-18). Turn the knob clockwise to obtain more braking power and counterclockwise when the lever cannot be pulled up into locking position.

10-64. Whenever the hand lever is used to adjust the parking brake, it should be in the released position. Push the hand lever down to release the brake.

**11-1. GENERAL.**

11-2. This section contains a description of the water spray system for the C530A Compactor.

11-3. Design specifications are presented in Section 2 and a troubleshooting guide is presented in Section 5.

**11-4. PRESSURE SPRAY SYSTEM.**

**11-5. DESCRIPTION (see figure 11-2).**

11-6. Gravity feeds the liquid from the tank to a solenoid valve, through the valve (when energized by the electrical circuit) and to the liquid pump. Since the pump and motor are activated at the same time as the solenoid valve, the liquid is pressurized and flows to the spray manifold.

11-7. The water spray system consists of a tank, inlet screen, sump strainer, solenoid valve, pump, motor, drain cock, drum spray manifold and spray nozzles. The tank features an access cover for cleaning the tank and

sump strainer when required. Also a drain plug is located in the bottom of the tank for flushing or draining the tank.

**11-8. WATER SPRAY PUMP (see figure 12-4).**

11-9. The water spray pump consists of an impeller, seal, main housing and an end housing. It is a centrifugal type pump which maintains flow under pressure of about 10 PSI (0.7 kg/cm<sup>2</sup>).

**11-10. STRAINER.**

**11-11. GENERAL.**

11-12. This strainer assembly is located inside the tank and connected in series with the pump and shut-off valve.

11-13. The inlet straining element is made of 40x36 mesh .0095 inch (.2413 mm) thick stainless steel wire. This is fine enough to remove objects large enough to damage or plug the water system.

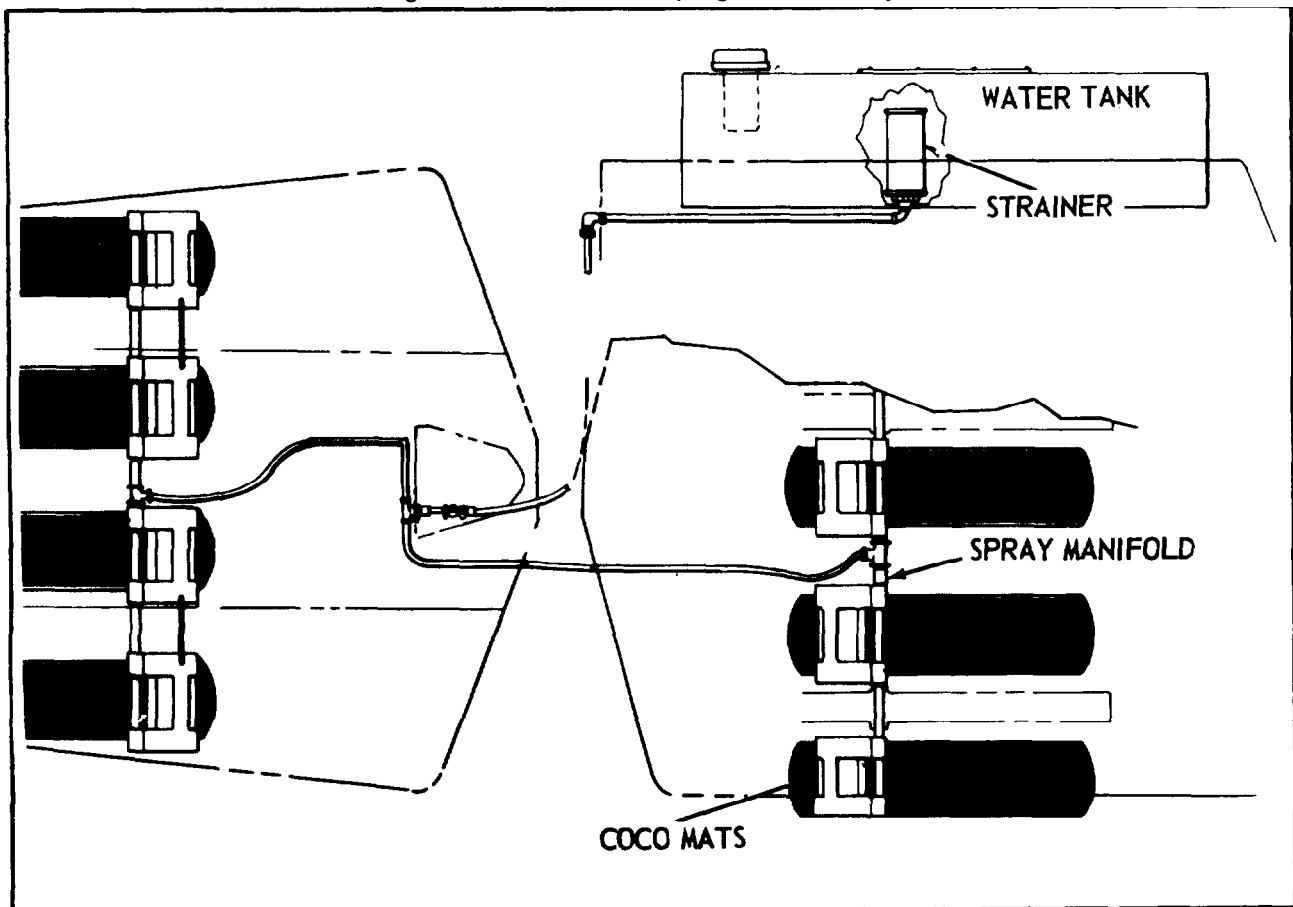


FIGURE 11-1. GRAVITY WATER SPRAY SYSTEM.



SECTION 11  
WATER SPRAY SYSTEM

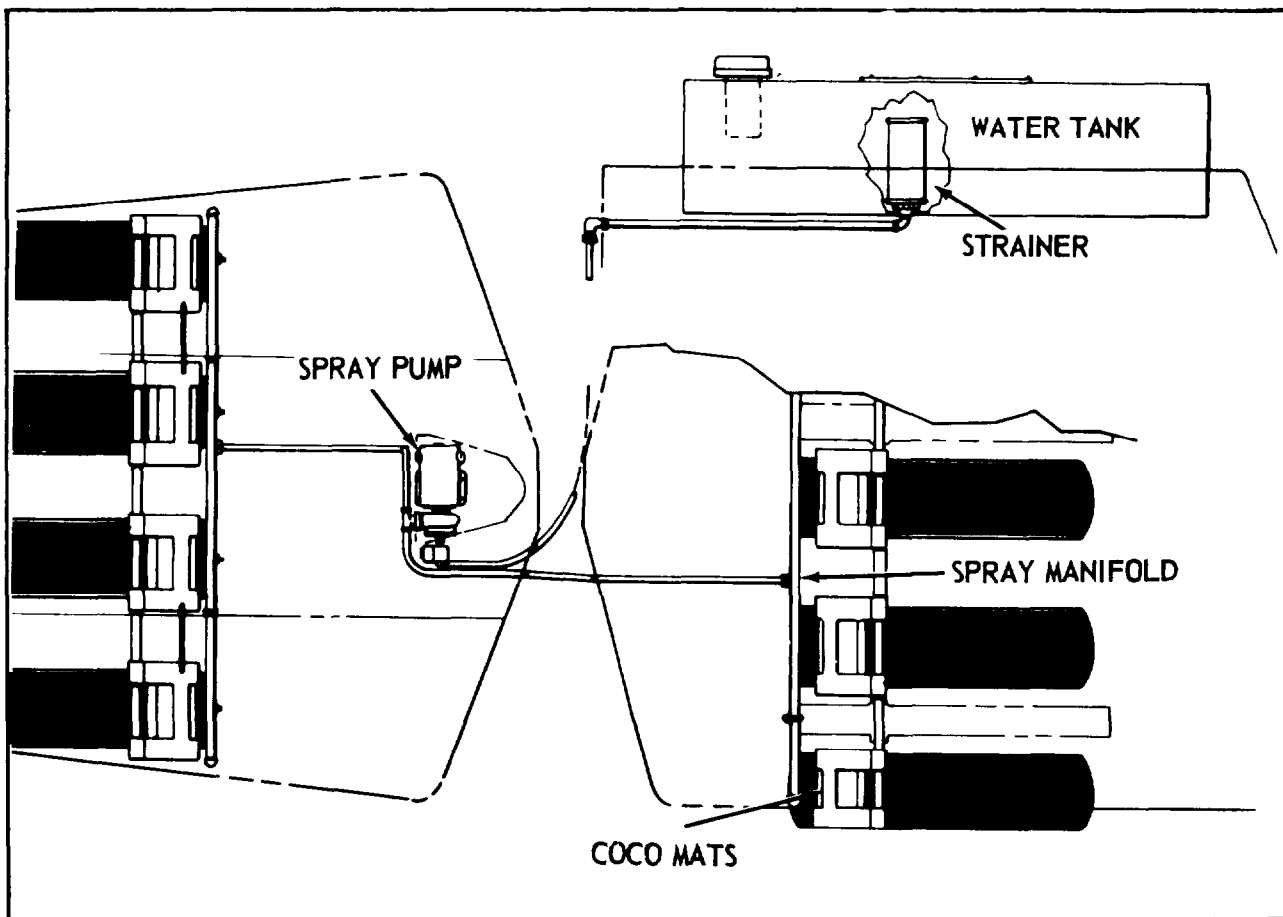


FIGURE 11-2. PRESSURE WATER SPRAY SYSTEM.

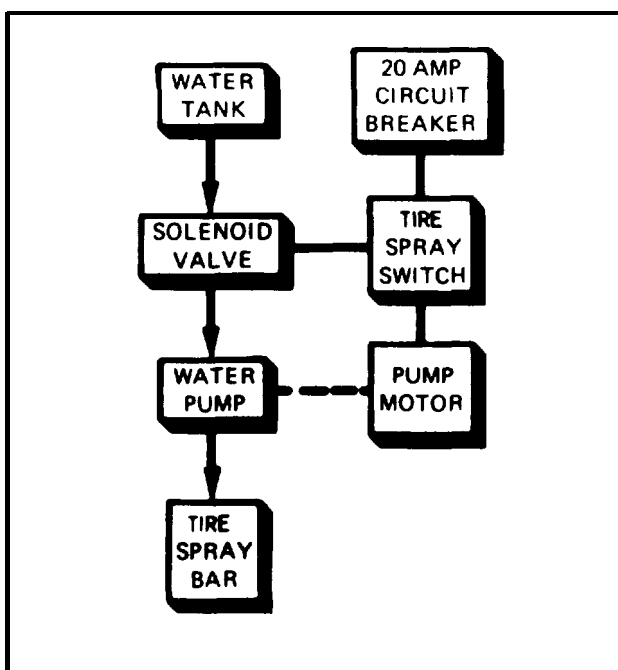


FIGURE 11-3.

11-14. MAINTENANCE.

11-15. The Inlet end sump strainers should be cleaned as often as necessary to assure an unrestricted flow of water to the pump. Local conditions and water source determine the service schedule.

**NOTE:** To prevent water draining from the tank, close the manual valve. Make sure the manual valve is open before spraying is attempted.

11-16. PUMP AND MOTOR.

11-17. GENERAL.

11-18. Located directly below the floor plate are the water spray pump and motor (see figure 11-2).

11-19. The pump and motor is a single assembly, combining an electric motor with a small Impeller type pump.

**11-20. REMOVAL.**


- a. Remove the driver compartment floor plate.
- b. Disconnect the ground and hot wires.
- c. Disconnect the inlet and outlet hoses from the pump.
- d. Remove the mounting nuts.
- e. Lift out the pump motor assembly.

**11-21. DISASSEMBLY.**

- a. Remove the two (2) pump-to-motor mounting capscrews and lift off pump.
- b. Remove the eight (8) pump cover screws (see figure 11-4).
- c. Remove the brass impeller.
- d. Remove the impeller seal.
- e. Inspect all parts for wear, nicks, cracks or other signs of impending failures. Replace as necessary.

**11-22. REASSEMBLY.**

- a. Install the impeller seal.
- b. Insert the brass impeller.
- c. Align gasket and pump cover with their mounting holes in the housing. Insert cover screws and tighten securely.

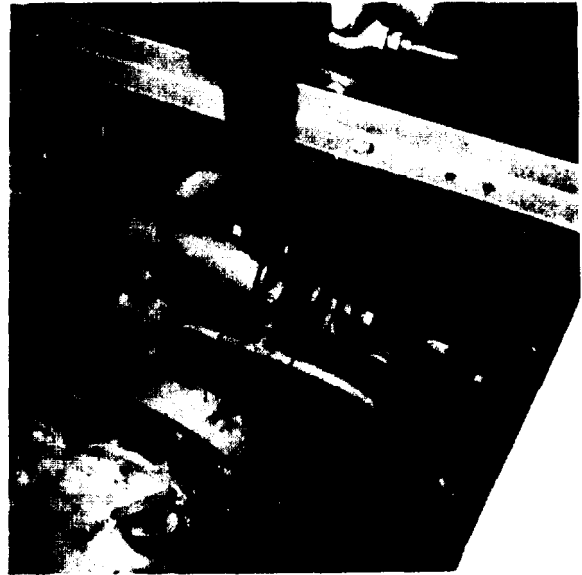

**FIGURE 11-4.**

- d. Mount the pump on the motor and check for free pump rotation by operating the motor.

**11-23. INSTALLATION.**

- a. Position pump-motor assembly on the frame. Connect the ground wire and tighten the mounting nuts.
- b. Connect inlet and outlet hoses to the pump.
- c. Connect the hot wires to the pump.
- d. Operate the pump and check for leaks.
- e. Replace operator compartment floor plate.

SECTION 12  
TIRE INFLATION SYSTEM

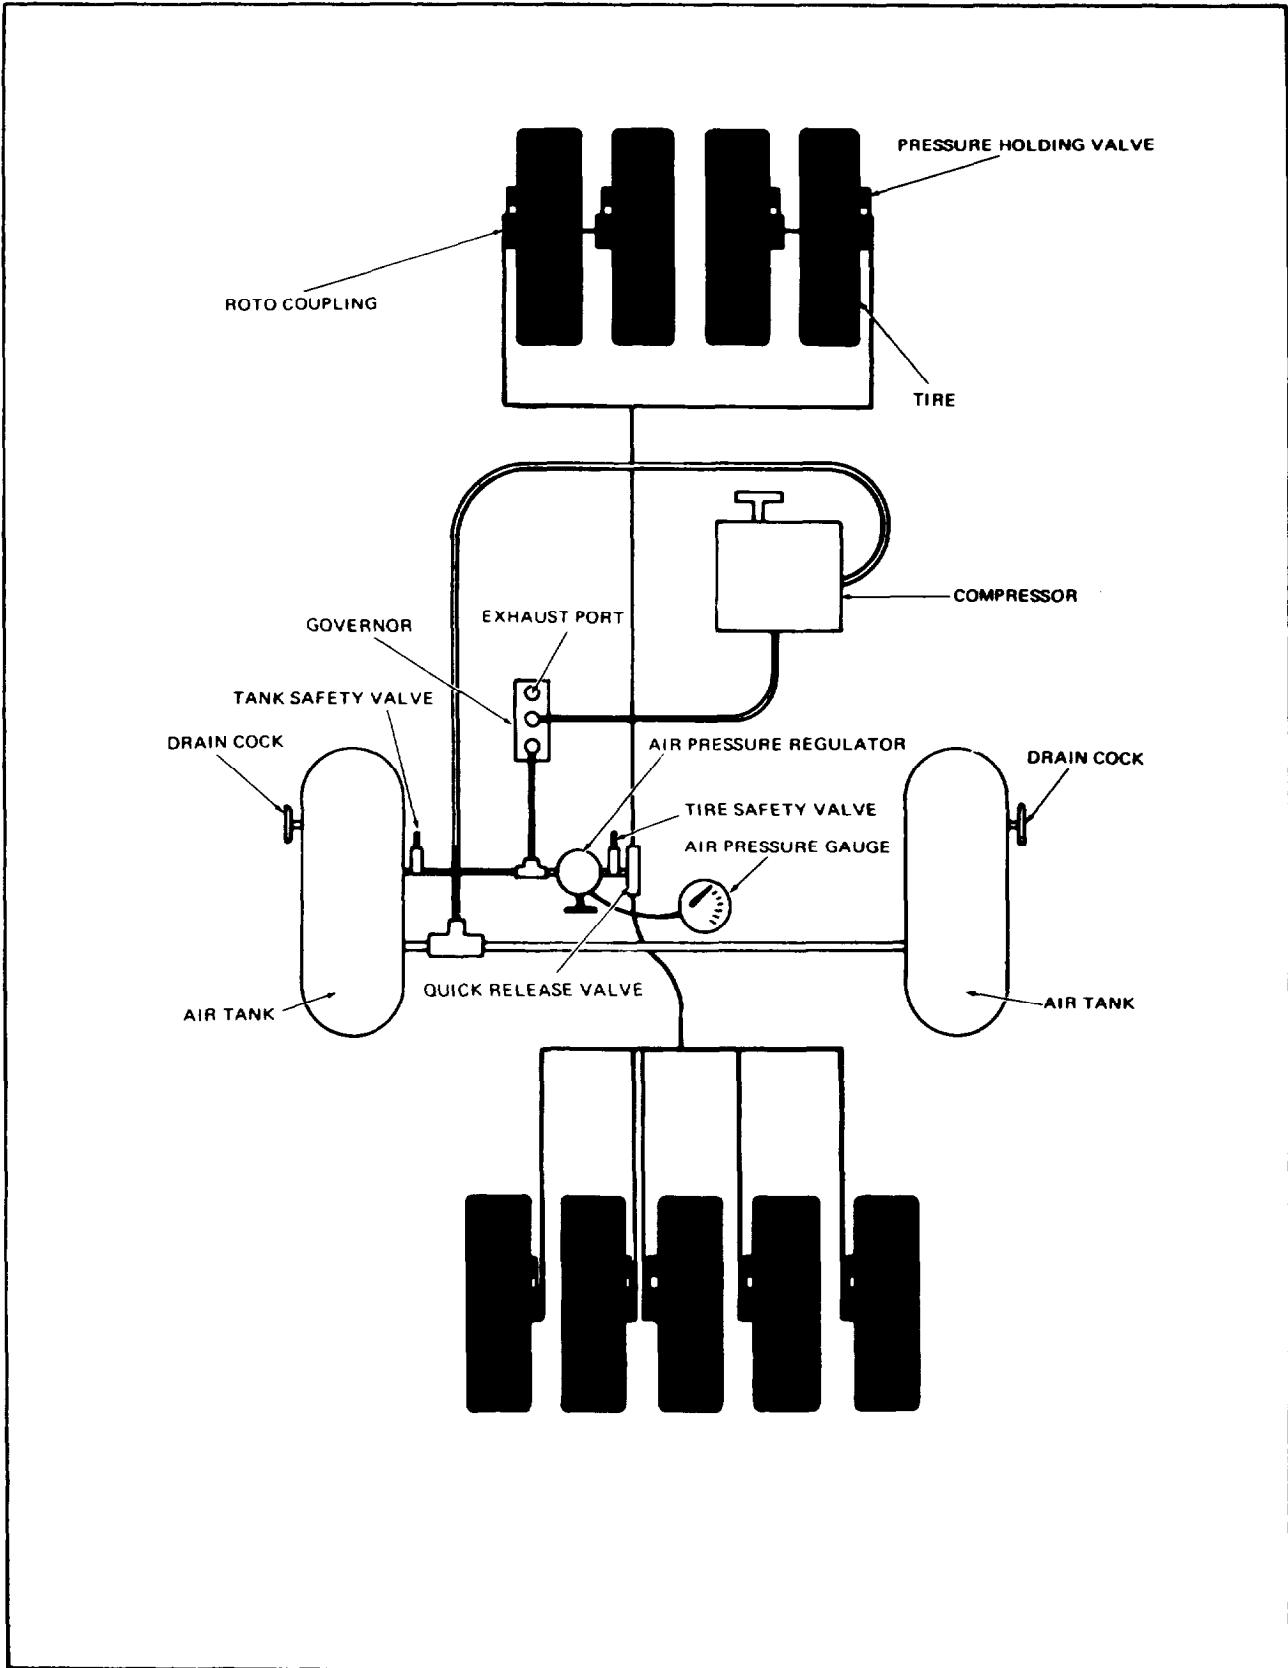


FIGURE 12-1.

### 12-1. GENERAL.

12-2. This section contains a description and overhaul Instructions for the tire Inflation system for the C530A Compactor.

12-3. Design specifications are presented in Section 2 and a troubleshooting guide is presented in Section 5.

12-4. The tire inflation system is installed only on units which are equipped with a Detroit Diesel engine. With this system the operator can vary tire pressure while the unit is in motion, thereby varying ground contact pressure.

12-5. The system consists of the following components which will be discussed in detail:

1. Compressor
2. Two air tanks and safety valve
3. Air pressure regulator
4. Air pressure gauge
5. Tire safety valve
6. Quick release valve
7. Pressure holding valve

### 12-6. COMPRESSOR.

#### 12-7. DESCRIPTION.

12-8. The compressor which delivers air to the tires is watercooled and is lubricated from the engine oil system. It has a capacity of 7-1/4 cubic feet (.205 m<sup>3</sup>) per minute at 1250 RPM.

12-9. The compressor is mounted at the front right side of the engine. It is belt driven by the crankshaft pulley.

It has automatic type inlet valves. Their unloading mechanisms are located in the cylinder block.

#### 12-10. OPERATION.

##### 12-11. GENERAL (see figure 12-2).

12-12. The compressor runs whenever the engine runs. But air compression is controlled by a governor which stops or starts the compression of air by loading or unloading the compressor in conjunction with its unloading mechanism. This is done when the air pressure in the system reaches the desired maximum or minimum pressures.

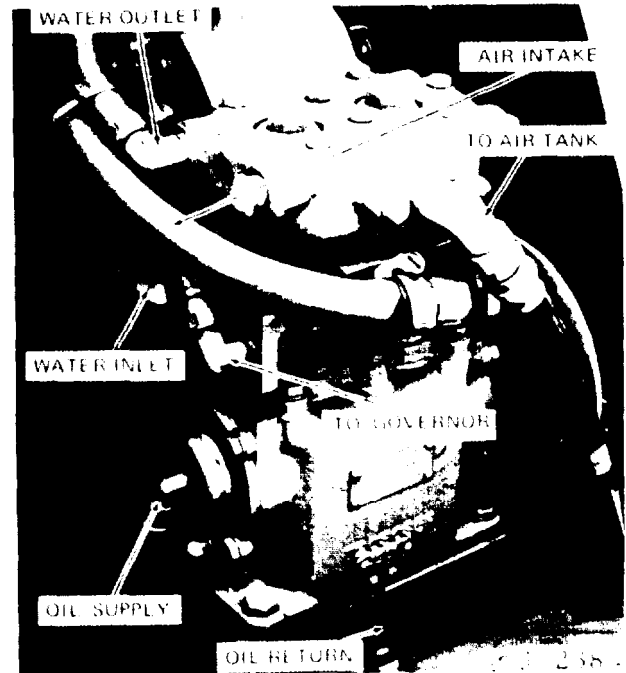


FIGURE 12-2.

##### 12-13. INTAKE AND COMPRESSION (Loaded) (see figures 12-3 and 12-4).


During the downstroke of the piston, a slight vacuum, created above the piston, causes the inlet valve to move off its seat. Atmospheric air is drawn in through the compressor intake, by the open inlet valve, and on top of the piston. As the piston starts its upward stroke, the air that was drawn in on the downstroke is compressed. Air pressure on top of the inlet valve, plus the force of its spring, return the inlet valve to its seat. The piston continues its upward stroke and compresses the air sufficiently to overcome the discharge valve spring and unseat the discharge valve. The compressed air then flows by the open discharge valve, into the discharge line and on to the reservoir.

12-14. As the piston reaches the top of its stroke and starts down, the discharge valve spring returns the discharge valve to its seat. This prevents the compressed air in the discharge line from returning to the cylinder bore as the intake and compression cycle is continued.


##### 12-15. NON-COMPRESSION (Unloaded) (see figure 12-5).

12-16. When the air pressure in the reservoir


**SECTION 12  
TIRE INFLATION SYSTEM**

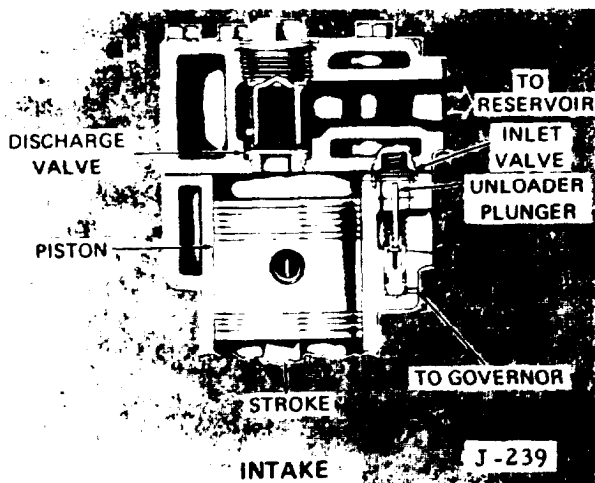

**FIGURE 12-3.**

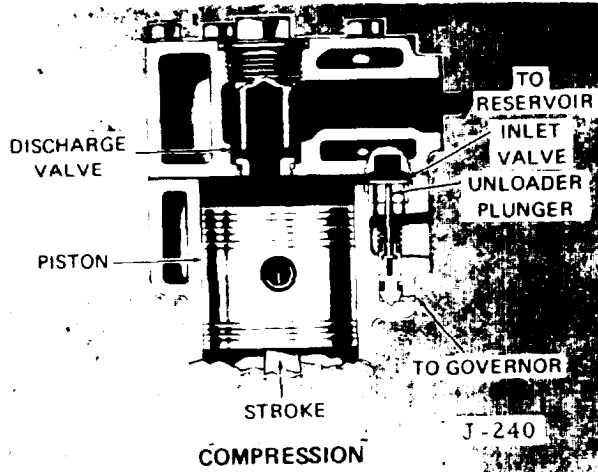

**FIGURE 12-4.**

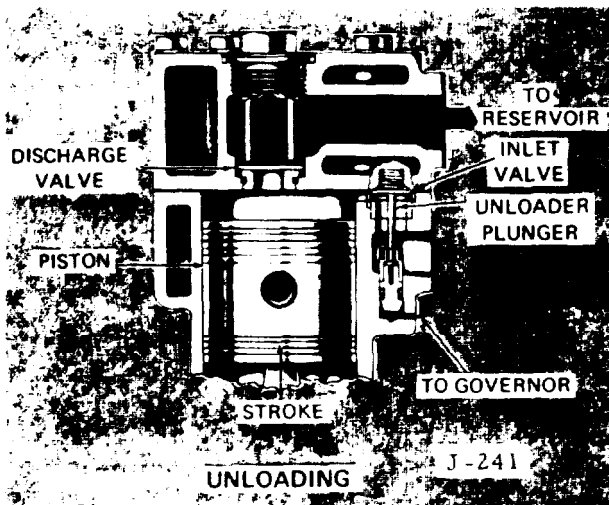

**FIGURE 12-5.**

reaches the high pressure setting of the governor, the governor opens, allowing air to pass from the reservoir through the governor and into the cavity beneath the unloader pistons. This lifts the unloader pistons and plungers. The plungers move up and hold the inlet valves off their seats.

12-17. With the inlet valves held off their seats by the unloader pistons and plungers, air is merely pumped back and forth between the two cylinders. When air is used from the reservoir and the pressure drops to low pressure setting of the governor, the governor closes and in doing so exhausts the air from beneath the unloader pistons. The unloader saddle spring forces the saddle, pistons and plungers down and the inlet valves return to their seats. Compression is then resumed.

**12-18. LUBRICATION.**

12-19. Oil from the engine is forced through the oil passage in the crankshaft and out around each connecting rod journal. The turning motion of the crankshaft throws the oil, which is forced out at the journals, against the cylinder bores and crankcase walls, lubricating the bores and crankshaft bearings.

12-20. The die cast aluminum connecting rods are drilled at the top of the rods. The wrist pins and bushings are lubricated by oil dripping from the drip-boss on the piston into a catch funnel at the top of the rod and through the drilled passage to the bushings and pins.

**12-21. REMOVAL.**

- a. Drain the air system.
- b. Drain the engine coolant, compressor block and cylinder head.
- c. Disconnect air hoses from the compressor and cap all openings.
- d. Remove the mounting capscrews. Remove the bolt from the pulley and lift out the compressor.

**12-22. PREPARATION FOR DISASSEMBLY.**

- a. Clean compressor exterior of road dirt and grease, using a good cleaning solvent.
- b. Before complete disassembly, mark the following items to show their relationship:


**SECTION 12**  
**TIRE INFLATION SYSTEM**

- (1). The cylinder block and crankcase.
- (2). End cover and crankcase.
- (3). Position of crankshaft in relation to crankcase.
- (4). Cylinder head and block.

**12-23. DISASSEMBLY.**

**12-24. DISASSEMBLY OF CYLINDER HEAD**  
(see figure 12-6).

- a. Remove capscrews and lift off cylinder head. If necessary, tap it with a soft hammer to break gasket joint.
- b. Remove inlet valve springs from the head and inlet valves from their guides in the block.
- c. Scrape off cylinder head gasket from cylinder head and block.
- d. Remove discharge valve cap nuts and lift out discharge valve springs and valves. The

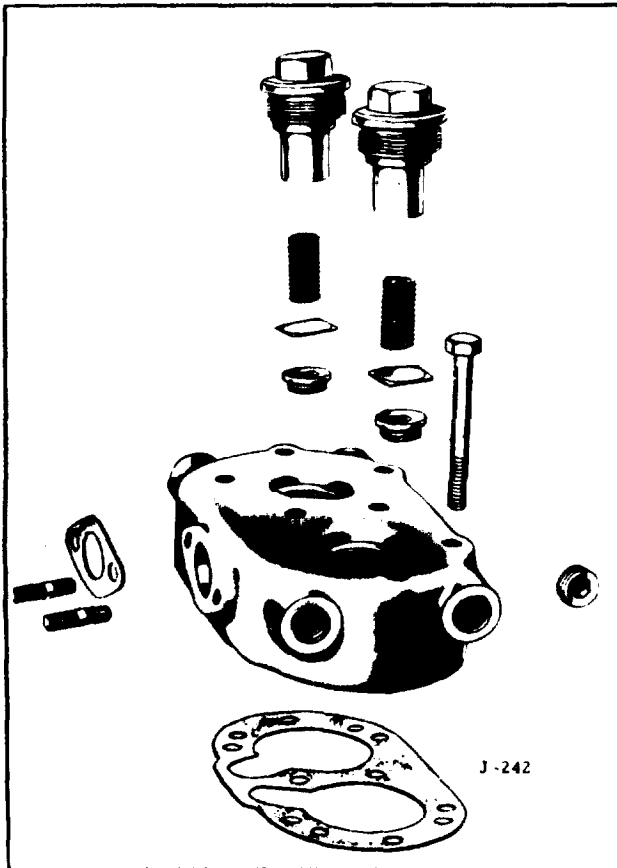

**FIGURE 12-6.**

valve seats can be removed: Their removal is not necessary unless they are badly worn or nicked.

**12-25. DISASSEMBLY OF CONNECTING ROD ASSEMBLY** (see figure 12-7).

- a. Straighten prongs of connecting rod bolt lockwashers and remove bolts, lockwashers and bearing caps.
- b. Push piston with connecting rods attached out the top of the cylinder block.
- c. Replace bearing caps.
- d. To remove pistons from connecting rods, remove wrist pin lock wires and press wristpins from pistons and connecting rods.
- e. Remove capscrews securing end cover at drive end of crankshaft.

**12-26. DISASSEMBLY OF CRANKCASE** (see figure 12-8).

- a. Remove end cover and oil seal. Remove end cover gasket. Replace oil seal after cleaning end cover.
  - b. Remove capscrews that hold the opposite end cover to the crankcase. Remove end cover and gasket.
- NOTE:** If the crankcase has a shoulder for positioning of the crankshaft, the crankshaft can be removed through one end only.

- c. Press the crankshaft and ball bearings from the crankcase and press the bearings from the crankshaft.

**12-27. DISASSEMBLY OF CYLINDER BLOCK**  
(see figure 12-7).

- a. Remove the capscrews securing cylinder block to crankcase. Separate crankcase and cylinder block and scrape off gasket.
- b. Remove unloader spring, spring saddle and spring seat from cylinder block.
- c. Remove unloader guides and plungers. With the use of shop air, blow unloader pistons out of cylinder block unloader piston bores.
- d. Remove inlet valve guides. Remove inlet

SECTION 12  
TIRE INFLATION SYSTEM

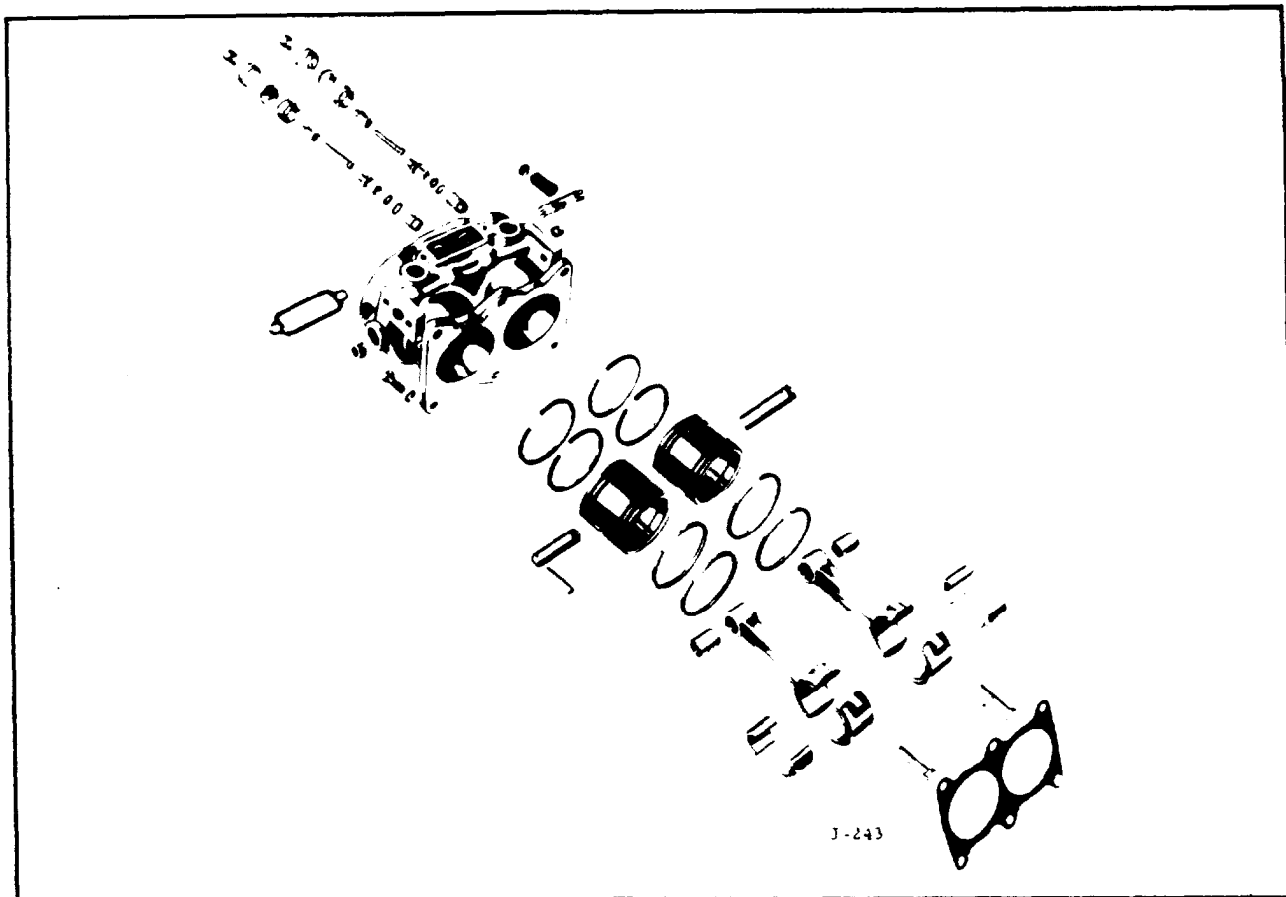


FIGURE 12-7 .

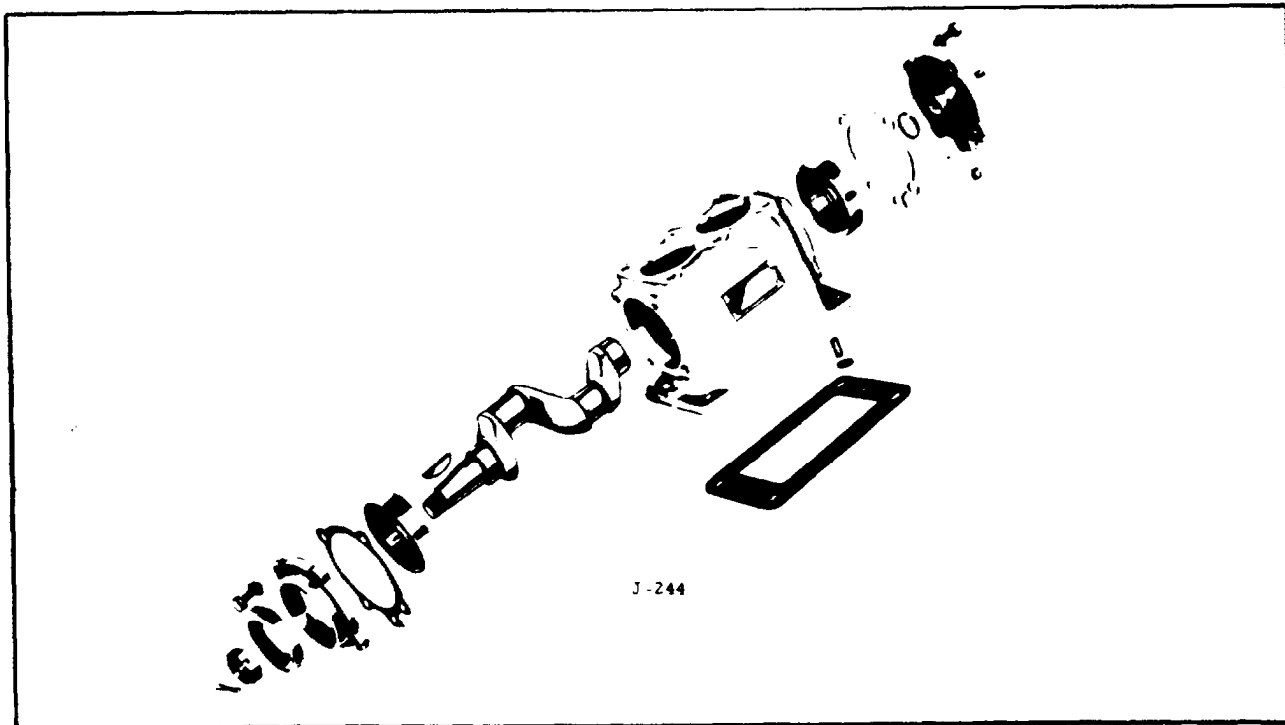


FIGURE 12-8.

**SECTION 12**  
**TIRE INFLATION SYSTEM**

valve seats only if they are worn or damaged and are being replaced. Unloader bore bushings should be inspected, but not removed unless they are damaged.

**12-28. CLEANING, INSPECTION AND REPAIR.**

**12-29. CLEANING.**

a. Clean all parts in solvent before inspection.

b. Remove all carbon deposits from discharge cavities and all rust and scale from cooling cavities of cylinder head body. Scrape all foreign matter from body surfaces and use air pressure to blow dirt particles from all cavities.

c. Discharge valves can be dressed by lapping them on a piece of fine crocus cloth on a flat surface, provided they are not excessively worn.

d. Clean carbon and dirt from inlet and unloader passages. Use air pressure to blow carbon and dirt deposits from unloader passages.

e. Inlet valves, as in the case of discharge valves, not worn excessively can be cleaned by lapping them on a piece of fine crocus cloth on a fiat surface.

f. Clean thoroughly all oil passages through crankshaft, connecting rods, crankcase, end covers and base plate. If necessary, inspect passages with a wire and blow foreign matter out with air pressure.

**12-30. INSPECTION.**

a. Inspect cylinder head body for cracks or damage.

b. Use air pressure to test water jackets of cylinder head and block for leakage. Replace unit if leakage is found.

c. If discharge valves are worn and grooved where they contact the seats, they should be replaced. If the discharge valve seats are worn excessively so that there is no longer enough metal left to reclaim them by lapping, the seats should be replaced.

d. Replace all used discharge valve springs and cap nuts.

e. Check for cracks or broken lugs in

crankcase and end covers. Also check their oil passages to make sure they are open and clean.

f. If an oil seal ring is used in the end cover, check fit of ring in ring groove. There should be 0.008 to 0.015 inch (.203-.361 mm) clearance at the gap when placed in the end bore of the crankshaft. If the oil ring is worn thin or is damaged, it should be replaced. Inspect oil ring groove in end cover; if groove is worn excessively, replace end cover or machine groove for next oversize oil seal ring.

g. With cylinder block installed on crankcase check fit of ball bearings in bearing bores. They must be a tight press fit. The crankcase should be replaced if bores are worn or damaged.

h. Check for cracks or broken lugs on cylinder block. Also check unloader bore bushings to be sure they are not worn, rusted or damaged. If these bushings are to be replaced, they can be removed by running a 1/8 inch (3.175 mm) pipe thread tap inside the bushing. Insert a 1/8 inch (3.175 mm) pipe threaded rod and pull the bushing straight up and out. **Do Not** use an easy-out for removing these bushings.

i. If inlet valves are grooved or worn where they contact the seat, they should be replaced. If the inlet valve seats are worn or damaged so they cannot be reclaimed by facing, they should be replaced.

j. Cylinder bores which are scored or out of round by more than 0.002 inch (.0508 mm) or tapered more than 0.003 inch (.0762 mm) should be rebored or honed oversize. Oversize pistons are available in 0.010, 0.020, and 0.030 inch (.254, .508, .762mm) oversizes.

k. Cylinder bores must be smooth, straight and round.

l. Clearance between cast iron pistons and cylinder bores should be between 0.002 inch minimum and 0.004 inch maximum (.0508 mm to .1016 mm) (see figure 12-8). Aluminum pistons are cam ground.

m. Check pistons for scores, cracks or enlarged ring grooves; replace pistons if any of these conditions are found. Measure each piston with a micrometer in relation to the cylinder bore diameter to be sure the clearance is between 0.002 and 0.004 inch (.0508 to .1016 mm).



## SECTION 12 TIRE INFLATION SYSTEM

n. Check fit of wrist pins on pistons and connecting rod bushings. Wrist pin should be light press fit in pistons. If wrist pin is loose fit, the pin, piston, or both should be replaced. Check fit of wrist pin in connecting rod bushing by rocking the piston. This clearance should not exceed 0.0015 inch (.0381 mm). Replace wrist pin bushings if excessive clearance is found. Wrist pin bushings should be reamed after being pressed into connecting rods. Replace used wrist pin lock wires.

o. Check fit of piston rings in piston ring grooves. Check ring gap with rings installed in cylinder bores. Refer to figure 12-10 for correct gap and groove clearance.



FIGURE 12-9.

p. Check crankshaft screw threads, keyways, tapered ends and all machined and ground surfaces for wear, scores or damage. Crankshaft journals which are out of round more than 0.001 inch (.0254 mm) must be reground. Bearing inserts are available in 0.010, 0.020, and 0.030 Inch (.254, .508, and .762 mm) undersizes for reground crankshafts. Main bearing journals must be maintained so bearings are snug fit. The oil seal ring groove or grooves in crankshafts fitted with oil seal rings must not be worn. The ring groove walls must have a good finish and they must be square. Make sure the oil passages are open and clean through the crankshaft.

q. Check connecting rod bearings on crankshaft journals for proper fit. Used bearing Inserts should be replaced. Connecting rod caps are not interchangeable. The locking slots of the connecting rod and cap should be positioned adjacent to each other.

12-7.

r. Clearance between the connecting rod journal and the connecting rod bearing must not be less than 0.0003 inch (.00762 mm) or more than 0.0021 inch (.0533 mm) after rebuilding.

s. Check for wear or flat spots; If found, bearings should be replaced. If type with sleeve bearing, this bearing should be checked for scores and wear and replaced if necessary.

t. Used unloader mechanism should be replaced by Repair Kit (refer to parts manual). The new unloader pistons should be a loose sliding fit in the unloader piston bores of the cylinder block.

### 12-31. REPAIR.

a. If discharge valves show slight wear, dress them by using a lapping stone, grinding compound and grinding tool. If discharge valve seats merely show signs of slight wear, they can be dressed by using a lapping stone, grinding compound and grinding tool. Install new discharge valves, valve springs and cap nuts. The discharge valve travel should be between .036 -.058 inch (.914 - 1.473 mm).

b. To test for leakage by the discharge valves, apply about 100 PSI (7.0 kg/cm<sup>2</sup>) of air pressure through the cylinder head discharge port and apply soap suds at the discharge valves and seats. Leakage forming soap bubbles is permissible.

c. If excessive leakage is found, leave the air pressure applied and, with the use of a fibre or hardwood dowel and hammer, tap the discharge valves off their seats several times. This will help the valves to seat and should reduce any leakage.

d. With the air pressure still applied at the discharge port of the cylinder head, check for leakage at the discharge valve cap nuts. No leakage is permissible.

e. If inlet valve seats show slight nicks or scratches, they can be redressed with a fine piece of emery cloth or by lapping with a lapping stone, grinding compound and grinding tools. If the seats are excessively damaged to the extent that they cannot be reclaimed, they should be replaced. The dimension from the top of the cylinder block to the inlet valve seat should not exceed 0.145 inch (3.663 mm) nor be less than 0.101 inch (2.565 mm).

f. Slightly worn or scratched inlet valves can be reclaimed by lapping them on a piece of fine crocus cloth on a flat surface, but it is suggested that new inlet valves be installed.

**12-32. REASSEMBLY.**

**12-33. REASSEMBLY AND INSTALLATION OF CYLINDER BLOCK.**

a. Position cylinder block gasket and block on crankcase according to markings made prior to disassembly. Using capscrews with lockwashers, secure cylinder block to crankcase.

b. If the crankshaft is fitted with oil seal rings, install rings. Position ball bearings and crankshaft in crankcase making sure the drive end of the crankshaft is positioned as marked before disassembly.

c. If one end of the crankcase is counter-bored for holding a bearing, be sure the crankshaft is installed through the correct end of the crankcase.

d. Carefully press crankshaft and bearings into crankcase using arbor press.

e. Position a new rear end cover gasket over the rear end of the crankcase making sure the oil hole in the gasket lines up with the oil hole in the crankcase. Position and cover with oil seal ring. If used, install over crankcase and end cover. The end cover should be positioned correctly in relation to the oil holes in the gasket and crankcase. Secure end cover to crankcase with capscrews and lockwashers.

f. If your opposite end cover requires an oil seal which was removed on disassembly, a new seal should be pressed into end cover. Position new end cover gasket and carefully install end cover over crankshaft and to crankcase, avoiding damage to the seal. Secure end cover with capscrew and lockwashers.

**12-34. REASSEMBLY AND INSTALLATION OF PISTONS AND CONNECTING RODS**


a. If new wrist pin bushings are to be used, they should be pressed into the connecting rods so that the oil hole in the bushing lines up with the one in the rod. The new bushings should then be reamed or honed to provide between 0.0001 and 0.0006 inch (.00254mm - .01524mm) clearance on the wrist pin. Position connecting rod in piston and press in wristpin so that lockwire hole in the pin aligns with that of the piston. Install new lockwire through

piston and wrist pin and lock same by snapping short end into lockwire hole at the bottom of the piston.

b. Install piston rings in correct location with ring pipemarks up (figure 12-10). Stagger the position of the ring gaps.

c. Prelubricate piston, piston rings, wrist pin and connecting rod bearings with clean engine oil before installing them in the compressor.

d. Remove connecting bolts and bearing cap from one connecting rod. Turn crankshaft so one of its connecting rod journals is in the downward, center position and attach the bearing cap to the connecting rod making sure

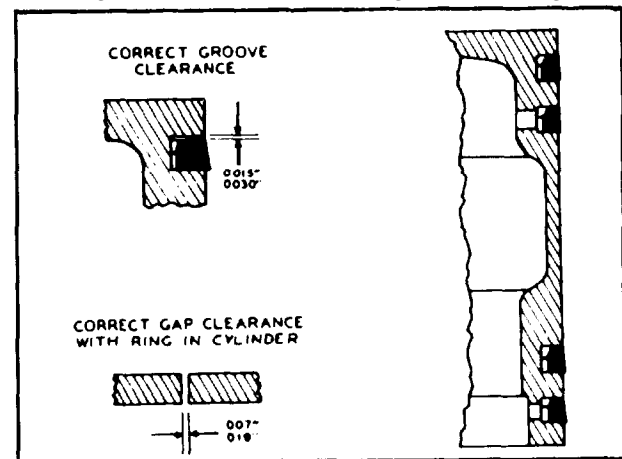

**FIGURE 12-10.**

the bolt lockwashers are properly positioned on the cap. Tighten connecting rod bolts evenly and bend the two (2) new lockwasher prongs up against the hex head of the bolt. Install the other connecting rod and piston in the same manner.


**12-35. INSTALLATION AND REASSEMBLY OF UNLOADER MECHANISM (see figure 12-11).**

a. The unloader pistons and their bores must be lubricated prior to installation. If new unloader kits are being installed, the pistons in the kit are already lubricated.

b. Install the unloader pistons in their bores. Do not cut the grommets or distort the back-up rings. Position unloader plungers in their guides and slip them in and over the tops of the pistons.

c. Install the unloader spring seat in the cylinder block; a small hole is drilled in the block for this purpose. Position the saddle

**SECTION 12**  
**TIRE INFLATION SYSTEM**

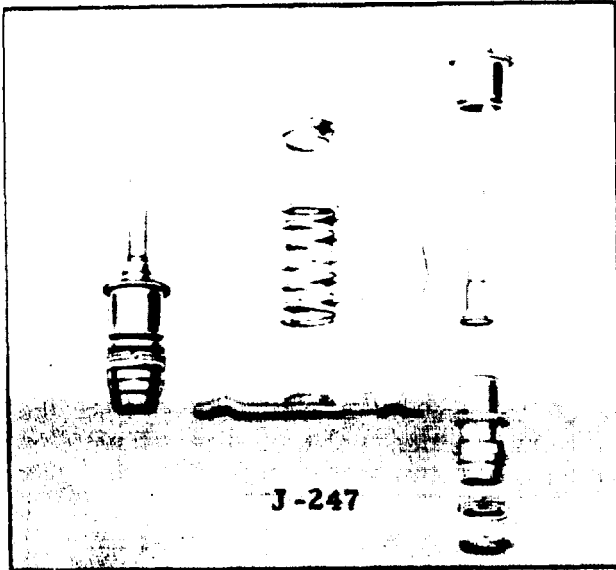

**FIGURE 12-11.**

between unloader piston guides so its forks are centered on the guides. Install the unloader spring making sure it seats over the spring seats both in the block and on the saddle.

d. install inlet valve seats if they have been previously removed. Position and install inlet valve guides, then drop inlet valves in their guides. There should be a loose sliding fit **between guides and valves.**

**12-36. REASSEMBLY AND INSTALLATION OF CYLINDER HEAD ASSEMBLY.**


a. Install the discharge valve seats. Drop discharge valves into their seats. install **discharge valve springs and cap nuts.**

b. Stick the inlet valve springs in the cylinder head. Use a small quantity of grease to keep the springs from falling out. Place cylinder head gasket on cylinder block and install capscrews with lockwashers. Tighten capscrew that holds cylinder head to block **securely and evenly.**

**12-37. INSTALLATION.**

- a. Lift the compressor into place.
- b. install the mounting capscrews. Torque them to 50-55 ft.-lbs. (6.91-7.69 kg-m).
- c. Install air hoses as shown in figure 12-1.
- d. Install the keyed pulley half with the threaded hub. Apply molybdenum disulfide dry film lubricant (aerosol can) to the threads.

**12-9.**

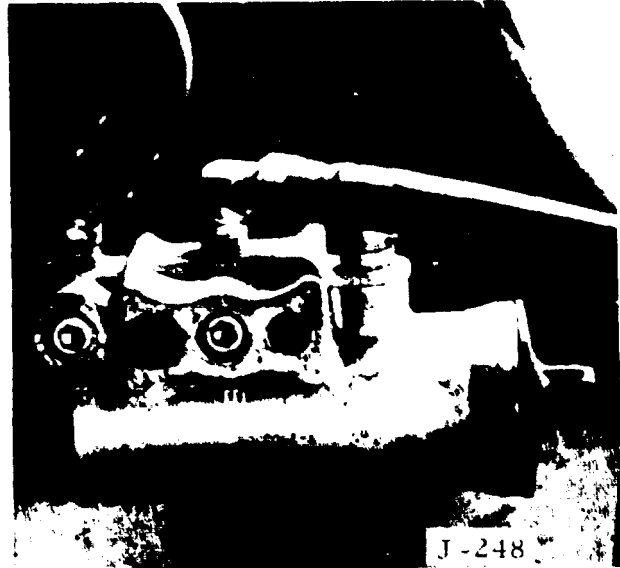

**FIGURE 12-12.**

e. Install the drive belt by turning the variable pulley half on the threads so that the drive belt is located in the Vee of the two **pulley halves.**

**NOTE:** No further adjustment is necessary because the variable pulley half acts as an adjuster during operation.

f. install the slotted nut and cotter pin on the compressor crankshaft.

**12-38. GOVERNOR.**


**12-39. DESCRIPTION (see figure 12-12).**

12-40. The compressor governor is mounted separately from the compressor. it is bolted to the left side frame under the hood, and is connected to the compressor and to the air tanks. It consists of a housing, a spring loaded piston and an inlet-exhaust valve.

**12.41. OPERATION (see figure 12-13).**

12-42. When the tank pressure reaches the maximum pressure setting, the governor piston is subjected to sufficient air pressure to overcome the spring force. This allows the mechanism to move up, permitting the exhaust stem to close the exhaust valve and to open the inlet valve. Reservoir pressure then passes through the governor to operate the compressor unloading mechanism and hold the intake valves open to prevent further compression of air by the compressor.

12-43. When the reservoir pressure is reduced

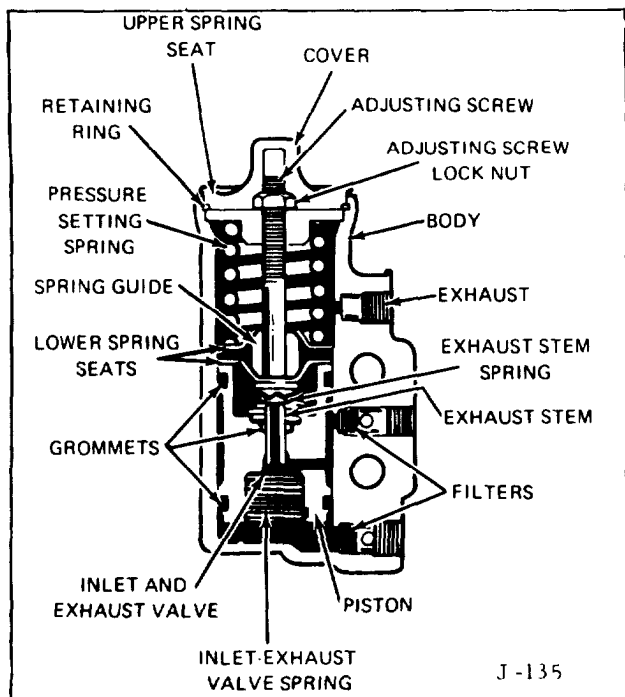

**FIGURE 12-13.**

to the minimum pressure setting, the spring loading within the governor overcomes the developed force of the air pressure under the piston. The valve mechanism is actuated, closing the inlet valve and opening the exhaust valve. This shuts off and exhausts the air from the compressor unloading mechanism and compression is resumed.

**12-44. CHECKS AND ADJUSTMENTS.**

**12-45. CHECKING PRESSURE.**

a. Start engine and build up pressure. Note pressure at time the unloading mechanism operates.

b. With the engine still running, fill tires with air to reduce tank pressure and note at what pressure the compressor cuts in. Adjust if necessary.

**12-46. ADJUSTING PRESSURE.**

a. Unscrew cover at top and loosen screw locknut.

b. Turn adjusting screw counterclockwise to raise pressure and clockwise to lower pressure.

c. Tighten adjusting screw locknut.

**12-47. LEAKAGE TEST.**

a. in the unloading position, check exhaust port for inlet valve leakage by applying a soap solution at the port. Leakage could also be past the bottom piston grommet.

b. In the compressor operative position, check the exhaust port to determine leakage at the exhaust valve seat or grommet. in this position, leakage could also be past the upper piston grommet.

**12-48. REMOVAL (see figure 12-13).**

a. Remove all hoses and cap all openings.

b. Remove the mounting capscrews and remove the governor.

**12-49. DISASSEMBLY (see figure 12-13).**

a. Clean exterior of dirt or grease.

b. Unscrew top cover and remove retaining ring.

c. Remove adjusting screw and spring assembly.

d. Remove locknut and upper spring seat from adjusting screw.

e. Remove pressure setting spring, lower spring gear, spring guide and other lower spring seat from adjusting screw.

f. Remove exhaust stem and spring from top of piston.

g. invert body, tap lightly and the piston should fall out.

h. Remove the inlet and exhaust spring and valve from the piston.

i. Remove the two (2) piston grommets, and with a hooked wire, remove the exhaust from stem grommet.


j. Clean or remove filters.

**12-50. REASSEMBLY AND INSTALLATION (see figure 12-13).**

a. Prior to assembly lubricate the lower body bore, the top of the piston, piston grooves, grommets, spring guide and adjusting screw.

b. Install exhaust stem grommet in its groove in stem bore of piston.

**SECTION 12**  
**TIRE INFLATION SYSTEM**

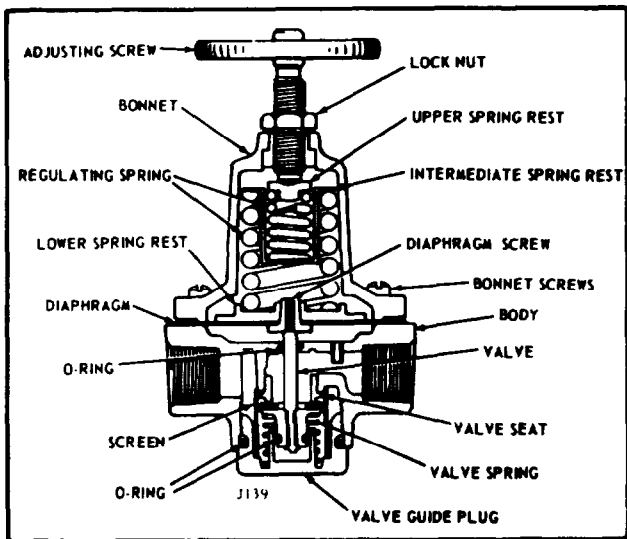

**FIGURE 12-14.**

c. Drop inlet and exhaust valve into place at bottom of piston.

d. install inlet valve spring with narrow end against valve. Press down until large colled end snaps into groove inside piston.

e. Position exhaust stem spring over exhaust stem and carefully press stem into stem bore of piston.

1. install piston in governor body.

g. install one (1) lower spring seat, spring guide, the other lower spring seat, pressure setting spring and hex-shaped upper spring seat on adjusting screw.

h. Screw upper spring seat down until dimension from top of seat to bottom of stem head is approximately 1-7/8 Inches (47.6 mm) and install locknut.

i. Check to see that the exhaust stem and its spring are in place In the piston and Install adjusting screw.


j. install retaining ring.

k. Check pressure and adjust as required. Refer to paragraph 12-44.

l. Tighten locknut and install top cover. Screw down tightly to prevent entrance of foreign matter.

m. If required, install new filters (can be installed with head of a pencil). if filters are

**12-11.**

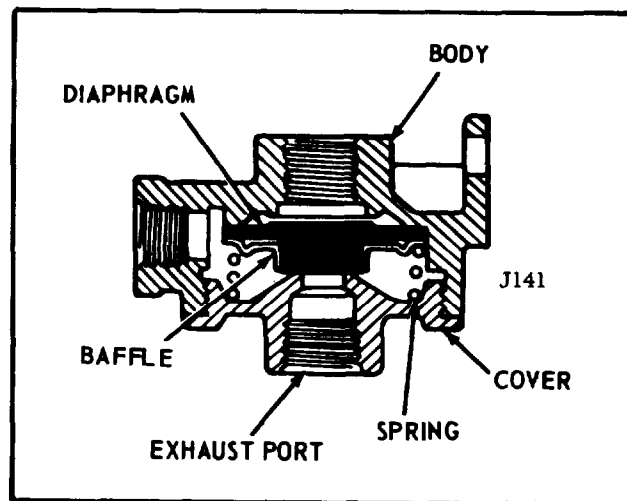

**FIGURE 12-15.**

removed from body, new filters should be installed.

**12-51. PRESSURE REGULATING VALVE (see figure 12-14).**

**12-52. OPERATION.**

12-63. Before starting the engine, back off the adjusting handle on the dash by turning counterclockwise until it turns freely. This releases all compression on the regulating spring. Run engine to build up maximum tank pressure of 150 PSI (10.66 kg/cm<sup>2</sup>). Turn the handle clockwise until the gauge shows the desired tire pressure. If this pressure is not immediately available, continue to turn handle. As the gauge reading nears the desired pressure, turn the handle back until the needle stops at the proper reading. The compressor will continue to fill the air tank until the governed pressure is reached. if desired tire pressure cannot be reached, check complete system for leaks.

**12-54. MAINTENANCE.**

12-55. To prevent abrasive solids such as rust, sand and pipe scale from entering the valve, all regulators are fitted with a screen. Clean this screen regularly for best performance. It can be removed by removing the valve guide plug at the bottom of the regulator.

**NOTE:** When reassembling valve guide plug, regulator must be in a vertical position.

**12-56. AIR PRESSURE GAUGES.**

12-57. if an air pressure gauge appears to be

malfunctioning, check by connecting a gauge that is known to be accurate into the air system next to the faulty gauge. Compare readings. if the gauge is faulty, replace it.

**12-55. QUICK RELEASE VALVE (see figure 12-15).**

12-59. This valve exhausts whenever the air regulator pressure is set below the existing tire pressure. If the valve exhausts continually, check the following:

12-60. Some dirt may be lodged on the valve seat. if this is the case, let the valve try to seat several times by operating the regulator valve. in most cases this will dislodge any dirt present and allow the valve to close completely at the proper pressure as indicated on the regulator valve gauge.

b. if leakage persists, check the valve components for the following:

- (1). Broken spring.
- (2). Ruptured diaphragm.
- (3). Sprung or cracked baffle.
- (4). Rough or pitted seats ,in the cover or in the valve body.

c. Correct items (1) through (3) above by installing the repair kit. if the valve body or cover is pitted or scored, replace the complete unit.

**12-61. PRESSURE HOLDING VALVE (see figure 12-16).**

12-62. This valve maintains at least 35 PSI (2.46 kg/cm<sup>2</sup>) In the tires in event of a leak in the air system.

a. Align the valve leaks between the two body halves, tighten the two parts.

b. if the valve allows air to flow back to the tank below 35 PSI (2.46 kg/cm<sup>2</sup>), replace the internal parts with the repair kit available.

**12-63. AIR TANK SAFETY VALVE (see figure 12-17).**

12-64. The safety valve should be set to 185 PSI (13.007 kg/cm<sup>2</sup>). To increase pressure, turn clockwise. Drain tank after each eight (8) hour shift through petcock located at the bottom of tank.

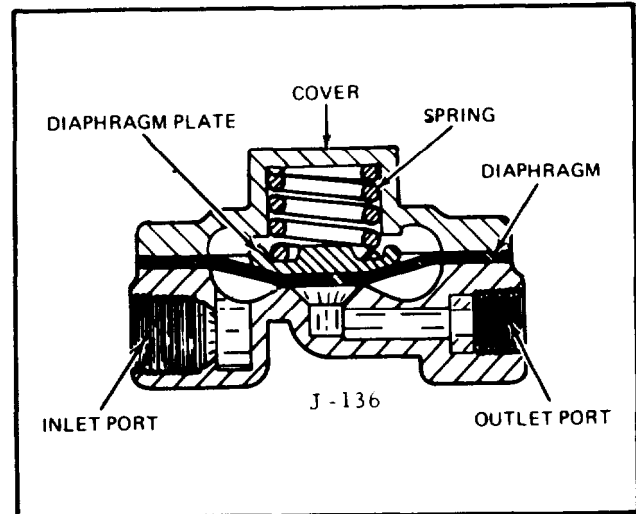


FIGURE 12-16.

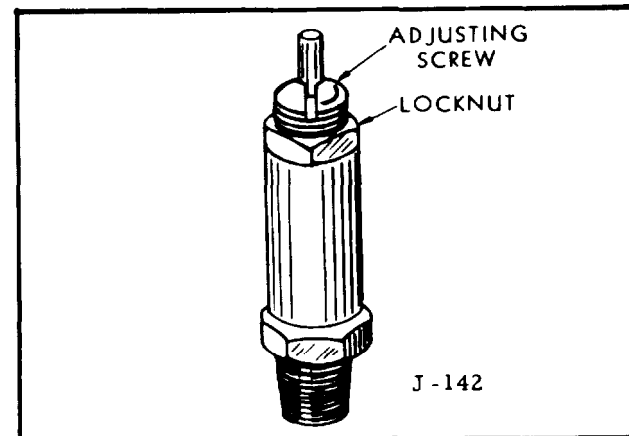


FIGURE 12-17.

**12-65. TIRE SAFETY VALVE (see figure 12-17).**

12-66. This safety valve protects the tires from over-inflation. Pressure setting can be increased by turning the adjusting screw clockwise, and lowered by turning it counterclockwise. Pressures should be adjusted to the halves in the table:

TIRE (PLY)	PRESSURE
4	45 PSI (3.16 kg/cm <sup>2</sup> )
6	76 PSI (5.34 kg/cm <sup>2</sup> )
10	100 PSI (7.03 kg/cm <sup>2</sup> )
12	120 PSI (8.44 kg/cm <sup>2</sup> )
14	140 PSI (9.84 kg/cm <sup>2</sup> )

---

**PART II**  
**SUPPLEMENTAL OPERATING MAINTENANCE**  
**AND**  
**REPAIR PARTS INSTRUCTIONS**

---

# SUPPLEMENTAL OPERATING MAINTENANCE AND REPAIR PARTS INSTRUCTIONS

## TABLE OF CONTENTS

Section I GENERAL	Paragraph	Page
Purpose	1-1	1
Scope	1-2	1
CCE Item	1-3	1
Description	1-4	1
Operational Concept	1-5	1
Procurement Status	1-6	1
Equipment Publications	1-7	2
Personnel and Training	1-8	2
Logistics Assistance	1-9	2
Warranty	1-10	3
Reporting	1-11	3
Section II MAINTENANCE		
Maintenance Concept	2-1	4
Maintenance Allocation Chart	2-2	4
Modifications	2-3	4
Equipment Improvement Recommendations	2-4	5
Equipment Serviceability Criteria	2-5	5
Maintenance Expenditure Limits	2-6	5
Shipment and Storage	2-7	5
Destruction to Prevent Enemy Use	2-3	5
Fire Protection	2-9	5
Basic Issue Items List	2-10	5
Maintenance and Operating Supply List	2-11	5
Special Tools and Equipment	2-12	5
Maintenance Forms and Records	2-13	5
Towing the Roller	2-114	6
Starting the Holler	2-15	6
Safety Precautions	2-16	6
Section III REPAIR PARTS SUPPLY		
General	3-1	7
Prescribed Load List	3-2	7
Authorized Stockage List	3-3	7
Requisitionig Repair Parts	3-4	8
Submitting Requisitions	3-5	8

\* This publication supersedes USMP 5-3895-347, dated Apr 78



## TABLE OF CONTENTS (Continued)

APPENDIXES		PAGE
A	Equipment Publications	9
B	Warranty Guidelines	10
C	Maintenance Allocation Chart	12
D	Modification Procedure	25
E	Basic Issue Item List	26
F	Prescribed Load List (PLL) & Authorized Stockage List (ASL)	27
G	Additional Repair Parts	28
H	Sample Format, DA Form 2765, Request (Part Number)	30
I	Sample Format, MILSTRIP Request (NSN)	31
J	Sample Format, MILSTRIP Request (Non-NSN)	32
K	Sample Format, MILSTRIP Request (Non-NSN Manual)	34
L	Maintenance & Operating Supply List	36
M	Preventive Maintenance Checks & Services	38
	Operator/Crew PMCS	40
	Organizational PMCS	43

## SECTION I

### GENERAL

1-1. Purpose. To provide User and Support personnel supplemental maintenance and repair parts instructions that have special application to Commercial Construction Equipment (CCE) items.

1-2. Scope. This publication applies to Department of the Army Units, Organizations and Activities that use and/or support the CCE Roller, Pneumatic Tired, Self-Propelled.

1-3. CCE Item. The term "CCE Item" used in this publication applies to a standard commercial item of commercial equipment that has been approved for a specific TOE requirements and is procured and supported under the CCE System Plan. This plan permits maximum utilization of the civilian construction industry's competitive research and development, manufacturer's equipment publications and commercial sources for repair parts.

1-4. Description. The CCE Roller, Pneumatic Tired is manufactured by the Hyster Co of Kewanee, Ill. The roller is powered by an in-line three cylinder (3-53 series) Detroit Diesel Engine. The transmission assembly consists of three basic components; (1) Torque Converter, (2) Forward-Reverse Transmission, and (3) Three-Speed Constant Mesh Transmission. A transfer case is used to redirect the power flow from the transmission assembly to the front drive wheels. Steering is a manually controlled hydraulic system. A pressure water spray system and a tire inflation system that enables the operator to vary tire pressure while the machine is in motion are also included.

1-5. Operational Concept. The CCE Roller, Pneumatic Tired will be deployed worldwide as a replacement for pneumatic tired towed rollers, LINS S12164, S12301, and S12438. The roller is intended for use in construction operations for:

(1) Compacting to a high density all earthen materials except clean sand and large aggregates.

(2) Compacting to a high density base course, bituminous and stabilized mixes and pavement.

1-6. Procurement Status. The procurement contract number is DSA 700 75-C-8687 and was awarded on 30 June 75.

1-7. Equipment Publications.

a. Initially two sets of the manufacturer's commercial publications will be over packed and shipped with each roller (reference Appendix A).

b. Additional commercial manuals may be obtained by requisitioning from Defense Construction Supply Center (DCSC). Requisitions to DCSC should be prepared in the same manner as for part numbered repair parts, using the Federal Supply Code for manufacturer's FSCM and manual numbers listed in Appendix A. If DD Form 1348-6 is used, mail it direct to Commander, DCSC, ATTN: DCSC-OSR, Columbus, OH 43215.

c. If additional assistance is required, contact the address in paragraph 1-11 of this publication.

1-8. Personnel and Training.

a. MOS Requirements:

(1) Operator: 62J20, General Construction Machine Operator.

(2) Organizational Maintenance: 62B20, Construction Equipment Repairman.

(3) Direct and General Support Maintenance: 62B30, Construction Equipment Repairman; 63G20, Fuel and Electrical Systems Repairman, 44B20 Metal Body Repairman.

b. New Equipment Training: New Equipment Training Teams (NETTs) are available to major field commands. Requests for NETTs should be forwarded to Commander, US Army Tank-Automotive Command

ATTN: DRSTA-MLT, Warren, MI 48090. Training teams / should be requested only when trained personnel are not available in the command to operator and/or maintain the roller

1-9. Logistics Assistance.

a. Tank-Automotive Command Field Maintenance Technicians stationed at CONUS and OCONUS installations will be fully qualified and available to furnish on-site training and or assistance concurrent with receipt of the roller.

b. Assistance can be obtained by contacting the Logistics Assistance Office listed in Appendix B of AR 700-4.

1-10. Warranty. The CCE Roller contractor warrants the products furnished under this contract according to the terms and conditions described in the equipment publications and Appendix B of this publication. All warranties furnished to the roller contractor by suocontractora of assemblies or components utilized in the manufacture of the end item will be extended to the Government. See Appendix B for warranty guidelines.

1-11. Reporting. You can improve this publication oy recommending improvements, using DA Form 2028 (Recommended Changes to Publications and Blank Forms) and mail direct to Commander, US Army Tank-Automotive Command, ATTN: DRSTA-M B, Warren, MI 48090.

## SECTION II

### MAINTENANCE

2-1. Maintenance Concept. The CCE Roller will not require any new or special maintenance considerations. All maintenance functions can be accomplished within the current maintenance concepts established for construction equipment.

a. Operator/Crew Maintenance: Operator and crew maintenance is limited to daily preventive maintenance checks and services.

b. Organizational Maintenance: Organizational maintenance consists of scheduled preventive maintenance services, minor repairs and adjustments.

c. Direct Support Maintenance: Direct support maintenance consists of repairs on-site or in a direct support unit's shops. Repairs are accomplished with a minimum of tools and test equipment; the assemblies and end items thus repaired are returned to their users.

d. General Support Maintenance: General support maintenance overhauls selected assemblies and repairs items designated by the area support command for return to stock.

e. Depot Maintenance: Depot maintenance overhauls end items and selected major assemblies when they are required to satisfy overall Army requirements. Overhaul of the end item may also be performed by contract with the manufacturer.

2-2. Maintenance Allocation Chart. Maintenance will be performed as necessary by the category indicated in the Maintenance Allocation Chart (MAC) (Appendix C) to retain or restore serviceability. All authorized maintenance within the capability of a using organization will be accomplished before referring the item to, support maintenance. Higher categories will perform the maintenance functions of lower categories when required or directed by the appropriate Commanders. Using and support units may exceed their authorized scope and functions in the MAC when approval is granted by the next higher support maintenance Commander.

2-3 Modifications. Modifications will be accomplished by the end item manufacturer after TARCOM approves the field campaign or modification plan. See Appendix D.

2-4. Equipment Improvement Recommendations (EIR). Equipment Improvement Recommendations will be submitted in accordance with TM 38-750.

2-5. Equipment Serviceability Criteria (ESC). Equipment Serviceability Criteria are not applicable to the Roller (AR 750-1).

2-6. Maintenance Expenditure Limits. The average life expectancy for the Roller is 15 years.

<u>PERCENT OF REPAIR</u>	<u>YEAR</u>
50%	1979
45%	1982
40%	1984
35%	1986
30%	1988
20%	1990
10%	1991

2-7. Shipment and Storage

a. Shipment and Storage. Refer to TB 740-90-2 for procedures covering preservation of equipment for shipment and storage.

b. Administrative Storage. Refer to TM 740-90-1 for instructions covering administrative storage of equipment.

2-8. Destruction to Prevent Enemy Use. Refer to TM 750-244-3 for procedures covering destruction of equipment to prevent enemy use.

2-9. Fire Protection.

a. A hand operated fire extinguisher may be installed at the discretion of the using unit.

Approved hand-portable fire extinguishers are listed in TB 5-4200-200-10.

2-10. Basic Issue Items List (BILL). See Appendix E for a list of items which accompany the end item or are required for operation and/or operator's maintenance.

2-11. Maintenance and Operating Supply List. See Appendix L for a list of maintenance and operating supplies required for initial operation.

2-12. Special Tools and Equipment. No special tools or equipment are required for operation and maintenance of the roller.

2-13. Maintenance Forms and da. Operational, maintenance and historical records will be maintained as required by the current TM 38-750.

2-14. Towing The Roller.

a. Before towing a unit that has malfunctioned ensure that the governor-direction control lever is in "neutral" and the park brake has been released.

b. \*NOTE\* Tow the unit only when necessary and at speeds of one to two miles per hour for as short a distance as possible.

2-15. Starting the Roller.

"WARNING: This Roller will start when in gear. Make sure that the handbrake is set and the governor-direction control is in the neutral position."

2-16. Safety Precautions. Always observe the following safety precautions to prevent possible injury to personnel and damage to the equipment:

a. TRAINED OPERATORS ONLY.

b. Always slower unit speeds and added caution when operating close to a lift edge or when traveling downhill.

c. Never travel across a slope. Always travel up or down a slope.

d. Always engage the park brake before dismounting the unit.

e. Never shut down the engine when traveling up or down a slope. Always move the direction control lever toward the neutral position before dismounting.

f. DO NOT grab the steering wheel when mounting unit with engine running.

g. KEEP CLEAR OF HITCH AREA when unit is operational. Hitch area closes when unit is turned.

## SECTION III

### REPAIR PARTS SUPPLY

#### 3-1. General.

a. The basic policies and procedures in AR 710-2 and AR 725-50 are generally applicable to repair parts management for construction equipment .

b. Manufacturer's parts manuals are furnished with the Roller instead of Department of the Army Repair Parts and Special Tool List (RPSTL).

c. National Stock Number (NSNs) are initially assigned-only to PLL/ASL parts and major assemblies, i.e., engines transmissions, etc. Additional NSNs are assigned by the supply support activities as demands warrant.

d. Automated Processing (AUTODIN) of Federal Supply Code Manufacturer (FSCM) part number requisitions, without edit for matching NSNs and exception data, is authorized.

e. Proper use of project codes on parts requisitions is essential.

f. Repair parts are available from commercial sources and may be purchased locally in accordance with AR 710-2 and AR 735-110.

g. Initial Prescribed Load List (PLL) and Authorized Stock List (ASL) will be distributed by US Army Tank-Automotive Command (TACOM), ATTN: DRSTA-FH, Warren, Michigan 48090.

3-2. Prescribed Load List (PLL). The PLL distributed by TACOM is an estimated 15 days supply recommended for initial stockage at organizational maintenance. Management of PLL items will be governed by the provisions of AR 710-2 and local command procedures. Selection of PLL parts for shipment to CONUS/OCONUS units is based upon the receiving Commands recommendation after their review of the TACOM prepared list. Organizations and activities in CONUS/OCONUS will establish PLL stocks through normal requisitioning process.

3-3. Authorized Stockage List (ASL). The ASL distributed by TACOM is an estimated 45 days supply of repair parts for support units and activities. The ASL parts will be shipped according to the recommendations of the receiving commands, after they have reviewed the initial list distributed by TACOM. Support units and activities in CONUS/OCONUS will establish ASL stocks through normal requisitioning process.



### 3-4. Requisitioning Repair Parts.

a. Using Units/Organizations: Requisitions (DA Form 2765 Series) will be prepared according to AR 710-2 and local command directives. All requisitions will have the Weapons System Designator Code "BE", AR 710-2, per DA Message, DAL0-SMS-09400Z Jun 78) entered in the 2nd and 3rd positions of block 18. units in CONUS will use DSS code "BGW" in block 19. Units OCONUS will enter in block 19 project code "JZC", Appendix H.

b. Support Units and Activities:

(1) General All MILSTRIP requisitions (DD Form 1348 Series) prepared for repair parts support of CCE items will include distribution and project codes, see Appendixes I, J, and K.

(2) Distribution Code: Supply customers in CONUS will use code "IF" in card column 54. Customers OCONUS will use the appropriate code from Appendix P, paragraph P-3a(1) AR 725-50. Weapons System Designator Code "BE" (DA Message DAL0-SMS, 091400Z Jun 78). will be entered in card columns 55 and 56 of all requisitions for parts to support the Roller.

(3) Project Codes: The applicable DSS project code will be entered in card columns 57-59 of requisitions for NSN parts, whether CONUS or OCONUS customers. The DSS code will already be used by CONUS customers when requisitioning part numbered parts. Supply customers OCONUS will use project code "JZC" for part numbered parts.

### 3-5. Submitting Requisitions.

a. Using Units and Organizations will submit DA Form 2765 Series requisitions to designated support units or activities in accordance with local procedures.

b. Support units and activities will forward MILSTRIP requisitions for NSN parts through the Defense Automated Addressing System (DAAS) to the Managing Supply Support Activity. Requisitions for part numbered part will be forwarded through DAAS to the Defense Construction Supply Center (DCSC).

NOTE: When the manufacturer's part number and Federal Supply code for Manufacturer (FSCM) exceed the space in card columns 8 through 22 of A02/A0B requisitions, prepare an A05A0E requisition (DD form 1348-6 and mail it to Commander, Defense Construction Supply Center, ATTN: DCSC-OSR, Columbus, Ohio 43215.

**APPENDIX A**

PUBLICATIONS

DA EQUIPMENT PUBLICATIONS			
NOMENCLATURE	EQUIPMENT PUBLICATION NUMBER	DATE AVAILABLE	
Utilization of Engineer Construction Equipment: Vol A, Earthmoving, Compaction, Grading and Ditching Equipment.  **NOTE* Supervisors and operators should refer to TM- 5-331A to get the most use from this equipment.			
OTHER THAN OFFICIAL DA EQUIPMENT PUBLICATIONS			
NOMENCLATURE	EQUIPMENT PUBLICATION NUMBER OR TYPE	DATE AVAILABLE	SOURCE OF SUPPLY
Operator"s and Service Manual (Roller)	7110M (30076)	shipped w/Roller	DCSC
Parts Manual (Roller)	599225m (30076)	shipped w/Roller	DCSC
Operator"s Manual (Engine)	7115M (30076)	shipped w/Roller	DCSC
Service Manual (Engine)	7112M (30076)	shipped w/Roller	DCSC
Parts Manual (Engine)	7114M (30076)	shipped w/Roller	DCSC
Supplemental Operating Maintenance & Repair Parts Instructions	SOMARPI 5-3895-347	Feb 79	TACOM

## APPENDIX B

### WARRANTY GUIDELINE

1. A Warranty period of 12 months applies to the Roller, Pneumatic Tired, Model C530A, Contract Number DSA700-75-C-8687, manufactured by HYSTER Co. after delivery to the Government. This warranty applies to the end item, components and all supplies furnished under the contract.

2. Using units may not contact their local dealer. You must mail DA Form 2407 to the Maintenance Directorate, TACOM, at the following address: US Army Tank-Automotive Command, ATTN: DRSTA-MVB, Warren, Michigan 48090. To expedite actions you may call the information to AUTOVON 786-7439, 7349 or 7387 with the information from your DA 2407, section 1, block 1 through 11, blocks 16, 17, 18, and 20.

3. General information:

a. DA Form 2407 (prepared in accordance with warranty claim actions in TM 38-750) will be used to submit warranty claims actions for end items when components, parts or assemblies are defective and are covered by a manufacturer's warranty. End items under warranty are identified by a decal plate and/or warranty statement included in the operator's and maintenance manual for the end item. All warranty actions settled or unsettled will be reported to the National Maintenance Point (NMP) on DA Form 2407. For warranties settled locally the DA Form 2407 will contain a statement "For Information Only" in block 35.

b. Maintenance activities in support of organizational maintenance are the responsible points of contact between the originator of warranty claims and the National Maintenance Point (US Army Tank-Automotive Command, DRSTA-MVB, AUTOVON 786-7439, 786-7349, 786-7387, Warren, Michigan 48090, which serves as the DA Representative with the contractor in warranty matters.

NOTE: In certain instances, the originating organization and the support activity are one and the same.

Before you take your equipment to a dealer for repair, whether or not it was necessary for you to go through the NMP ( TACOM ), check with your local procurement office to see if a funds commitment document is needed. Sometimes, even though the majority of the repairs are covered by the warranty, there may be a small charge for normal maintenance costs, i.e., oil filters, oil, etc.

## APPENDIX B

Further, the cause of damage could be determined by the dealer to be directly related to "operator abuse." In that case, the Government may be obligated to pay for teardown services even if the repairs are no longer desired, or for the complete cost if repairs are to be completed by the dealer.

d. When the equipment is given to the dealer for repairs, find out how long the work will take, the extent of the problem, if possible and the charges, if any, which may be involved. Leave the name and telephone number of the person to be contacted for pickup of the equipment and specifically state that he should be called as soon as the repairs are finished. In addition, state he should be telephoned if unexpected problems, costs, and/or delays are encountered. Get the name and telephone number of the Service Manager, for any required follow-up purposes.

e. When you arrive to pick up your equipment after completion of services, make certain that you know exactly what repairs were performed and/or parts replaced. This is required for overall problem trend evaluation by the NMP and must be identified upon completion of warranty services.

f. Telephone the NMP at TACOM, AUTOVON 786-7439, 786-7349 and/or **786-7387** if:

(1) Your equipment requires repairs and you cannot obtain these services using the procedures listed above.

(2) The length of time required for repairs may seriously hamper your mission, or if the dealer's overall response to your requirements are not satisfactory.

(3) You have any questions regarding warranty procedures - either in general or about a specific job. Do not wait until your problems become critical.

g. Do not attempt to conduct negotiations regarding a breach of warranty. This is a function of the Contracting Officer, through the NMP at TACOM.

## APPENDIX C

### MAINTENANCE ALLOCATION CHART

FOR

### ROLLER, PNEUMATIC TIRED, VARIABLE PRESSURE, SELF-PROPELLED (CCE)

#### Section I. INTRODUCTION

1. General: This Maintenance Allocation Chart designates responsibility for performance of Maintenance functions to specific Maintenance categories

2. Maintenance functions:

a. Inspect: To determine the serviceability of an item by comparing its physical, mechanical and/or electrical characteristics with established standards through examination.

b. Test: To verify serviceability and detect incipient failures by measuring mechanical or electrical characteristics of an item and comparing those characteristics with prescribed standards.

c. Service: Operations required periodically to keep an item in proper operating condition, i.e., to clean (decontaminate), to preserve, to drain, to paint, or to replenish fuel, lubricants, hydraulic fluids, or compressed air supplies.

d. Adjust: To maintain, within prescribed limits, by bringing into proper or exact position, or by setting the operating characteristics to specified parameters.

e. Align: To adjust specified variable elements of an item to bring about optimum or desired performance.

f. Calibrate: To determine and cause corrections to be made or to be adjusted on instruments or test measuring and diagnostic equipment used in precision measurement. Consists of comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.

g. Install: The act of emplacing, seating or fixing into position an item, part, or module (component or assembly) in a manner to allow the proper functioning of an equipment or system.

h. Replace: The act of substituting a serviceable like type part, subassembly, or module (component or assembly) for an unserviceable counterpart.

i. Repair: The application of maintenance services or other maintenance actions to restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.

j. Overhaul: That maintenance effort (service/action) necessary to restore an item to a completely serviceable operational condition as prescribed by maintenance standards (i.e., DMWR) in appropriate technical publications. Overhaul is normally the highest degree of maintenance performed by the Army. Overhaul does not normally return an item to like new condition.

k. Rebuild: Consists of those services/actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (hours/miles, etc) considered in classifying Army equipment s/components.

3. Column entries: Columns used in the Maintenance allocation chart are explained below:

a. Column 1, Group Number: Column 1 lists group numbers, the purpose of which is to identify components, assemblies, subassemblies, and modules with the next higher assembly.

b. Column 2, Component/Assembly: Column 2 contains the noun names of components, assemblies, subassemblies, and modules for which maintenance is authorized.

c. Column 3, Maintenance Functions: Column 3 lists the functions to be performed on the item listed in Column 2.

d. Column 4, Maintenance Category: Column 4 specifies, by the listing of a "work time" figure in the appropriate subcolumn(s), the lowest level of maintenance authorized to perform the function listed in Column 3. This figure represents the active time required to perform that maintenance function at the indicated category of maintenance. If the number or complexity of the tasks within the listed maintenance function vary at different maintenance categories, appropriate "Work time" figures will be shown for each category. The number of manhours specified by the "work time" figure represents the average time required to restore an item (assembly, subassembly, component, module, end item or system) to a serviceable condition under typical field operating conditions. This time includes preparation time, troubleshooting time, and quality assurance/quality control time in addition to the time required to perform the specific tasks identified for the maintenance functions authorized in the Maintenance Allocation Chart.

e. Column 5, Tools and Equipment: Column 5 specifies by code those common tool sets (not individual tools) and special tools, test, and support equipment required to perform the designated function.

f. Column 6, Remarks: Column 6 contains an alphabetic code which leads to the remark in Section IV, Remarks, which is pertinent to the item opposite the particular code.

APPENDIX C

Section II. MAINTENANCE ALLOCATION CHART  
FOR  
ROLLER, PNEUMATIC TIRED, VARIABLE PRESSURE, SELF-PROPELLED (CCE)

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY*					(5) TOOLS AND EQUIP- MENT	(6) RE- MARKS
			C	O	F	H	D		
01	ENGINE								
0100	Engine Assembly	Test Service Replace Repair Overhaul	0.2	2.0	16.0 21.0	48.0		1,2,3,4	
	Engine Mounts	Replace			3.0				
0101	Cylinder Block	Replace Repair				40.0 20.0		1,2,3,4	
	Cylinder Sleeve	Replace				3.0			
	Cylinder Head	Replace Repair Overhaul			4.0	4.0 8.0			
0102	Crankshaft	Replace				5.0		1,2,3,4	
	Main Bearings	Replace				4.0			
	Drive Pulley	Replace		2.0					
0103	Flywheel	Replace			3.0			1, 2	
0104	Pistons and Connecting Rods	Replace Repair				3.0 2.0		1, 2	
	Rings and Bearing	Replace				0.5			
0105	Rocker Arms	Replace			0.5				
	Valve Springs	Test Replace				.8 .3			
	Valves Exhaust	Adjust Replace Repair			2.0	1.0 2.0			

\*The subcolumns are as follows:  
C-operator/crew  
O-organizational  
F-direct support  
H-general support  
D-depot

APPENDIX C

Section II. MAINTENANCE ALLOCATION CHART

ROLLER, PNEUMATIC TIRES, VARIABLE PRESSURE SELF-PROPELLED (CCE)

(1) GROUP NUM- BER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY*					(5) TOOLS AND EQUIP- MENT	(6) RE- MARKS
			C	O	F	H	D		
0106	Camshaft, Bearings and Gears	Replace				4.0			
	Oil Cooler	Service Replace		.2	1.0			1, 2	
	Oil Pan	Replace Repair			1.5 1.0				
	Oil Pump	Replace Repair			0.8 2.0				
	Oil Pressure Regulator	Adjust Replace			0.2 0.5				
	Oil Filter Assembly	Service Replace		0.5	1.0				
	Oil Filter Element	Replace		0.5					
0108	Exhaust Manifold	Replace Repair			1.0 1.0			1,2,3,4	
03	FUEL SYSTEM								
0301	Fuel Injector	Test Replace			1.0 1.5			1, 2	
0302	Fuel Pump	Replace Repair		1.0	1.0			1, 2	
0304	Air Cleaner	Service Replace Repair	0.4	1.0 0.5				1	
0305	Air Cleaner Element	Replace	0.5						
	Blower, Air Intake	Service Replace Repair		0.3	1.0 2.0			1, 2	

\*The subcolumns are as follows:  
 C-operator/crew  
 O-organizational  
 F-direct support  
 H-general support  
 D-depot



**APPENDIX C**

**Section II MAINTENANCE ALLOCATION CHART  
FOR  
ROLLER, PNEUMATIC TIRES, VARIABLE PRESSURE SELF-PROPELLED (CCE)**

(a) GROUP NUM- BER	(c) COMPONENT/ASSEMBLY	(d) MAINTENANCE FUNCTION	(e) MAINTENANCE CATEGORY*					(f) TOOLS AND EQUIP- MENT	(g) RE- MARKS
			C	O	F	H	D		
	Air Shut-Down	Adjust Replace Repair			0.5 1.5 2.0				
0306	Fuel Tank	Service Replace Repair		0.2 1.5				1, 2	
	Lines and Fittings	Replace		1.0					
0308	Governor, Engine Speed	Test Adjust Replace Repair			0.5 0.5 1.0		2.0	1, 2	
0309	Fuel Filters	Service Replace	0.2	0.5				1	
	Fuel Filter Ele- ment	Replace		0.5					
0312	Throttle Control/ Linkage	Adjust Replace Repair		0.5 0.5 0.5				1	
04	EXHAUST SYSTEM								
0401	Muffler and Exhaust Pipes	Replace Repair		1.0 1.0				1	
05	COOLING SYSTEM								
0501	Radiator	Service Replace Repair	0.2		2.0		2.0	1, 2	
	Thermostat	Replace		1.0					
	Hoses and Clamps	Replace		0.5					
0504	Water Pump	Replace Repair		2.0	1.0			1, 2	

\*The subcolumns are as follows:

C-operator/crew  
O-organizational  
F-direct support  
H-general support  
D-depot

APPENDIX C

Section II MAINTENANCE ALLOCATION CHART  
FOR

ROLLER, PNEUMATIC TIRES, VARIABLE PRESSURE SELF-PROPELLED (CCE)

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY*					(5) TOOLS AND EQUIPMENT	(6) RE MARKS
			C	O	F	H	D		
0505	Fan Assembly	Replace Repair		1.0	1.0			1	
	Fan Belts	Inspect Adjust Replace	0.1	0.5 1.0					
06	ELECTRICAL SYSTEM								
0601	Alternator	Test Replace Repair		0.1 0.5	1.5			1, 2, 5	
	Alternator Drive Belt	Inspect Adjust Replace	0.1	0.5 1.0					
0603	Starting Motor	Test Replace Repair		1.0 1.0	1.5			1, 2, 5	
0607	Instrument Panel Accessories	Replace Repair		0.5 0.7				1, 5	
0608	Miscellaneous Electrical Items (Switches, Circuit Breakers, etc)	Test Replace		0.1 0.5				1, .5	
0609	Head Light Assembly	Replace Repair		0.3 0.5				1, 5	
	Head light Lamp	Replace		0.2					
0610	Sending Units/ Warning Switches	Replace		0.2				1, 5	
0611	Horn Assembly	Replace		0.3				1, 5	
0612	Battery	Inspect Test Service Replace	0.1  0.1	0.3  0.5				1, 5	

\*The subcolumns are as follows:  
C-operator/crew  
O-organizational  
F-direct support  
H-general support  
D-depot

**APPENDIX C**

**Section II. MAINTENANCE ALLOCATION CHART**

**FOR  
ROLLER, PNEUMATIC TIRES, VARIABLE PRESSURE SELF-PROPELLED (CCE)**

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY*					(5) TOOLS AND EQUIP- MENT	(6) RE- MARKS
			C	O	F	H	D		
0613	Battery Cables	Replace		0.4				1 , 5	
		Repair		0.5					
07	Wiring Harness	Replace		1.0				1 , 5	
		Repair		1.0					
0700	TRANSMISSION								
0700	Transmission	Test			2.0			1,2,3,4	
		Service	0.3						
0700	Transmission	Replace			16.0			1,2,3,4	
		Repair			16.0				
0700	Transmission	Overhaul				20.0		1,2,3,4	
		3-Speed Transmis- sion	Service		0.5				
0700	3-Speed Transmis- sion	Replace			16.0			1,2,3,4	
		Repair			8.0				
0700	3-Speed Transmis- sion	Overhaul				8.0		1,2,3,4	
		Forward-Reverse Transmission	Service		0.5				
0700	Forward-Reverse Transmission	Replace			16.0			1,2,3,4	
		Repair			8.0				
0700	Forward-Reverse Transmission	Overhaul				8.0		1,2,3,4	
		Clutch Pack	Replace			4.0			
0703	Clutch Pack	Repair			4.0			1,2	
		Control Valve	Adjust			1.0			
0703	Control Valve	Replace			1.0			1,2	
		Repair			1.0				
0703	Control Valve	Control Cable	Adjust		0.5			1,2	
		Replace			2.0				
0708	Control Valve	Repair			1.0			1,2	
		Torque Converter	Replace			16.0			
0708	Torque Converter	Repair			8.0			1,2	
		Transmission Oil Filter	Service		0.5				
0708	Transmission Oil Filter	Replace			1.0			1,2	
		Oil Filter Element	Replace		0.5				

\*The subcolumns are as follows  
 C-operator/crew  
 O-organizational  
 F-direct support  
 H-general support  
 D-depot

**APPENDIX C**

**Section II MAINTENANCE ALLOCATION CHART**

**FOR  
ROLLER, PNEUMATIC TIRED, VARIABLE PRESSURE SELF-PROPELLED (CCE)**

(1) GROUP NUM- BER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY*					(5) TOOLS AND EQUIP- MENT	(6) RE- MARKS
			C	O	F	H	D		
08	TRANSFER CASE								
0801	Transfer Assembly	Service Replace Repair Overhaul	0.2		4.0 4.0	6.0			
09	PROPELLER SHAFT								
0901	Transfer Drive Shaft	Replace Repair		1.0 1.0			1		
10	FRONT AXLE								
1000	Front Axle Assembly	Replace Repair			8.0 8.0		1, 2		
1002	Differential/Final Drive	Service Replace Repair	0.3		8.0 8.0		1, 2		
11	REAR AXLE								
1100	Rear Axle Assembly				2.0 2.0				
12	BRAKE SYSTEM								
1201	Parking Brake Assembly	Adjust Replace Repair		0.2 3.0 3.0			1, 2		
	Service Brakes	Adjust Replace Repair		2.0 4.0 4.0					
1204	Master Cylinder	Service Replace Repair	0.2	1.5	1.0				
	Wheel Cylinders	Replace Repair		2.0	1.0				

\*The subcolumns are as follows  
 C-operator/crew  
 O-organizational  
 F-direct support  
 H-general support  
 D-depot

**APPENDIX C**

**Section II. MAINTENANCE ALLOCATION CHART**

**ROLLER, PNEUMATIC TIRED, VARIABLE PRESSURE SELF-PROPELLED (CCE)**

(a) GROUP NUMBER	(b) COMPONENT/ASSEMBLY	(c) MAINTENANCE FUNCTION	(d) MAINTENANCE CATEGORY*					(e) TOOLS AND EQUIPMENT	(f) REMARKS
			C	O	F	H	D		
13	Lines and Fittings	Replace Repair		2.0 1.0					
	WHEELS								
	1311 Wheel Assembly	Inspect Replace		0.5 1.0				1	
1313	Hub, Bearings, Seals	Adjust Replace		0.5 1.0					
	Tires	InSpect Replace Repair	0.2		1.0 1.0			1	
14	STEERING.								
1401	Steering Wheel	Replace		1.0				1	
1405	Center Point Hitch	Service Replace Repair		0.5	3.0 3.0			1, 2	
1407	Steering Control Unit	Replace Repair			2.0 2.0			1, 2	
1410	Hydraulic: Steering	Replace Repair Overhaul			2.0 2.0	4.0		1, 2	
1411	Hoses, Lines and Fittings	Replace Repair						1, 2	
1412	Hydraulic Steering Cylinders	Replace Repair			1.0 2.0			1, 2	
1414	Flow Divider	Replace Repair			1.0 1.0			1, 2	
15	FRAME								
1501	Frame Assembly	Repair			4.0			2	

\*The subcolumns are as follows:

- C-operator/crew
- O-organizational
- F-direct support
- H-general support
- D-depot

**APPENDIX C**

**Section II. MAINTENANCE ALLOCATION CHART**

**ROLLER, PNEUMATIC TIRED, VARIABLE PRESSURE SELF-PROPELLED (CCE)**

(1) GROUP NUM- BER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY*					(5) TOOLS AND EQUIP- MENT	(6) RE- MARKS
			C	O	F	H	D		
	BODY, HOOD AND COWLING								
1801	Hood and Cowling	Replace Repair		1.0	1.5			1, 2	
1802	Heat Shields	Replace Repair		2.0 3.0				1, 2	
1805	Floor Plates	Replace Repair		2.0	3.0			1, 2	
1806	Seat Assembly	Adjust Replace Repair		0.1 1.0	1.0			1, 2	
1808	Tool Box	Replace Repair		0.5 0.5				1, 2	
43	TIRE INFLATION SYSTEM								
4315	Compressor	Replace Repair			2.0 4.0			1, 2	
4316	Hoses, Lines and Fittings	Replace Repair		1.0 2.0				1	
4317	Air Pressure Regulating Valve	Replace Repair		1.0	1.0			1, 2	
	Air Pressure Gauge	Test Replace		0.5 1.0					
	Quick Release Valve	Replace Repair		1.0	1.0				
	Pressure Holding Valve	Replace Repair		1.0	1.0				
	Tire Safety Valve	Adjust Replace		0.5 0.5					

\*The subcolumns are as follows:

C-operator/crew  
O-organizational  
F-direct support  
H-general support  
D--depot

APPENDIX C

Section II. MAINTENANCE ALLOCATION CHART.

FOR

ROLLER, PNEUMATIC TIRED, VARIABLE PRESSURE SELF-PROPELLED (CCE)

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY*					(5) TOOLS AND EQUIP- MENT	(6) RE- MARKS
			C	O	F	H	D		
	Reservoirs	Replace		4.0					
	EARTH MOVING EQUIP- MENT COMPONENTS								
	Spray Pump and Motor	Replace Repair		2.0	2.0			1	
	Water Tank Inlet Screen	Replace		0.3					
	Water Tank Sump Filter	Replace		0.3					
	Spray Manifolds and Nozzles	Replace Repair		0.5 1.0					
	Spray Pipes, Valves and Hoses	Replace Repair		1.0 1.0					

\*The subcolumns are as follows:

- C-operator/crew
- O-organizational
- F-direct support
- H-general support
- D-depot

**APPENDIX C**

**MAINTENANCE ALLOCATION CHART FOR  
ROLLER, PNEUMATIC TIRED, VARIABLE PRESSURE, SELF-PROPELLED(CCE)**

SECTION III - TOOL. AND TEST EQUIPMENT REQUIREMENTS

TOOL OR TEST EQUIPMENT REFERENCE CODE	MAINTENANCE CATEGORY	NOMENCLATURE	NATIONAL/NATO STOCK NUMBER	TOOL NUMBER
		Unless otherwise noted, all maintenance functions can be accomplished with the tools contained in the following common two sets.		
1	O, F, H	Shop Equip Contact Maint. TRK MTD (SC 4940-97-CL-E05)	4940-00-294-9518	T10138
1	O, F, H	Shop Equip Org Repair, Light TRK MTD (SC 4940-97-CL-E04)	4940-294-9516	T13152
1	O, F, H	Tool Kit Automotive Maint Org Maint Common #1 (SC 4910-95-CL-A74)	4910-754-0654	W32593
1	O, F, H	Tool Kit Automotive Maint Org Maint Common #2 (SC 4910-95-CL-A72)	4910-754-0650	w32730
1	O, F, H	Tool Kit, Light Weight (SC 5180-90-CL-W26)	5180-00-177-7033	W33004
1	O, F, H	Shop Equip Auto Maint and Repair Org Maint Supp #1 (SC 4910-95-CL-A73)	4910-00-754-0653	W32867
1	O, F, H	Shop Equip Welding Field Maint (SC 3470-95-CL-A08)	3470-357-7268	T16714
1	O, F, H	Tool Set, Veh Full Tracked Sugg #2 SC 4940-95-CL-A08	4940-00-754-0743	W65747
2	F, H,	Shop Equip Gen Purp Repair Semitrir MTD (SC 4940-97-CL-E03)	4940-00-287-4894	T10549
2	F, H	Tool Kit Automotive, Fuel and Elec Sys Repair (SC 4910-95-CL-A50)	4910-00-754-0655	W32456
2	F, H	Tool Kit, Master Mechanic and Equip Maint and Repair (SC 5180-90-CL-E05)	5180-00-699-5273	W4506



**APPENDIX C**


**MAINTENANCE ALLOCATION CHART FOR  
ROLLER, PNEUMATIC TIRED, VARIABLE PRESSURE, SELF-PROPFLLED (CCF)**

SECTION III - TOOL AND TEST EQUIPMENT REQUIREMENTS

TOOL OR TEST EQUIPMENT REFERENCE CODE	MAINTENANCE CATEGORY	NOMENCLATURE	NATIONAL/NATO STOCK NUMBER	TOOL NUMBER
2	F,H	Shop Set, Fuel and Elec Sys Field Maint Basic (SC 4910-95-CL-A01)	4910-00-754-0714	T30414
2	F,H	Shop Set, fuel and Elec Sys Field Maint Basic Sup #2 (SC 4910-95-CL-A65)	4910-00-390-7775	T30688
2	F, H	Shop Equip Machine Shop, Field Maint Basic (SC 3470-95-CL-A02)	3470-00-754-0708	T15644
2	F, H	Measuring and Lay Out Too Set Mach (SC 5280-95-CL A02)	5280-00-511-1950	W44512
2	F, H	Tool Kit Body and Fender Repair	5180-00-754-0643	W33689
3	F, H	Wrench Set Socket, 3/4" Drive Hex Type	5310-00-754-0743	W65747
4	O, F, H	Wench Torque, 3/4* Drive 500 lb Cap	5120-00-542-5577	Y84966
5	O, F, H	Multimeter	6625-00-999-7465	M80242

# APPENDIX D

## CCE MANUFACTURER FIELD CAMPAIGNS AND MODIFICATION PROCEDURES

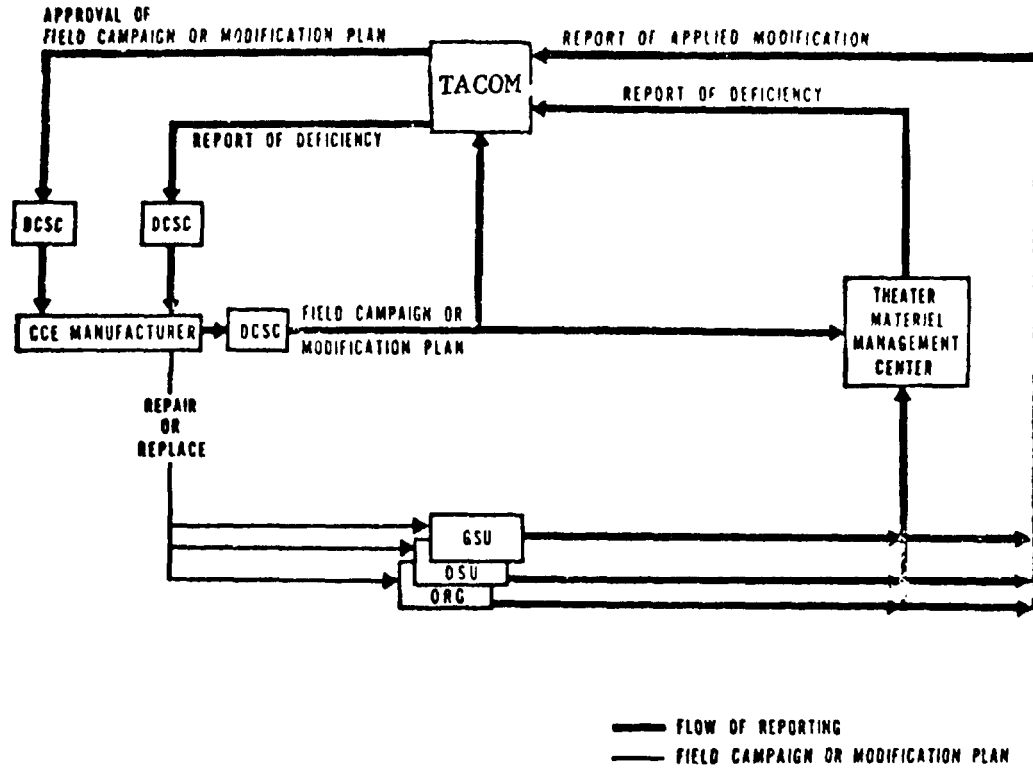

**APPENDIX E**

<b>BASIC ISSUE ITEMS LIST</b>				
NOMENCLATURE: MANUFACTURER: SERIAL NUMBER RANGE:				DATE:
(1)	(2)	(3)	(4)	(5)
MFR PART NO.	MFR FED CODE	DESCRIPTION	UNIT OF ISSUE	QUANTITY FURNISHED W/EQUIP

<b>ITEMS TROOP INSTALLED OR AUTHORIZED LIST</b>				
(1)	(2)	(3)	(4)	(5)
SMR CODE	NATIONAL STOCK NUMBER	REF No & MFR CODE                      USABLE ON CODE	UNIT OF MEAS	QTY AUTH
	Note: The following roller.	items are overpacked with	the	
	7520-00-559-9618	Case, Cotton Duck: MIL- B-11748(81349)	EA	1
	7510-00-889-3494	Log Book Binder: MIL-B- 43064	EA	1
	NOTE: The following issued with	items are authorized but the roller.	not	
	4210-00-889-2221	Extinguisher, Fire Dry Chemical	EA	1

**APPENDIX F**

INITIAL RECOMMENDATION  
PRESCRIBED LOAD LIST (PLL)  
AUTHORIZED STOCKAGE LIST (ASL)

END ITEM: Roller Pneumatic Tired Variable Pressure Self-Propelled (CCE)		MAKE: Hyster		MODEL: 0530A					
MFR PART NO: N/A		NSN: 3895-01-013-3630		SERIAL NUMBER RANGE _____ TO _____		DATE Feb 79			
SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	PART DESCRIPTION	U/M	QTY OF PARTS REQ'D FOR NO. OF END ITEMS			
						PLL		ASL	
						1-5	1-5	6-20	21-50
PAOZZ	2940-01-029-6905	170075	30076	ELEMENT, Air Filter	EA	1	3	6	12
PAOZZ	2940-00-825-4400	5574540 155092	22852 30076	ELEMENT, Trans Oil Filter	EA	1	1	2	4
PAOZZ	2940-00-019-8087	5574978	72582	ELEMENT, Eng Oil Filter	EA	1	1	2	4
PAOZZ	2910-00-792-8985	5574961	72582	ELEMENT, Primary Fuel Filter	EA	1	1	2	4
PAOZZ	2910-00-377-5548	PR151-6	81321	ELEMENT, Secondary Fuel Filter	EA	1	1	2	4
PAOZZ	3030-00-982-1212	5126447	72582	V-BELT SEAT, Fan	EA	1	1	2	3
PAOZZ	3030-00-208-7495	5133173	72582	V-BELT SET, Alternator	EA	1	1	2	3

## APPENDIX G

### ADDITIONAL REPAIR PARTS

<u>NSN</u>	<u>P/N</u>	<u>FSCM</u>	<u>DESCRIPTION</u>
4720-00-738-1303	169436	30076	HOSE, Radiator, Lower
4720-01-013-1355	100434	30076	HOSE, Radiator, Upper
2940-01-029-6905	170075	30076	ELEMENT, Air Filter
5920-00-284-6787	F02A250V5A 53123-10	81349 30076	FUSE, 5-Amp (Inst Panel)
2940-00-825-4400	5574540 155092	22852 30076	ELEMENT, Trans Oil Filter
5330-01-029-6879	171865	30076	O-RING, Rear Axle
5330-01-028-5626	39347	30076	O-RING, Rear Axle
2530-01-028-9276	157723	30076	REPAIR KIT, Hyd Whl Cy 1
5330-01-028-9697	156544	30076	REPAIR KIT, Steering Cy 1
5920-00-011-7142	F02A125V10A	81349	FUSE, 10-Amp (Horn)
4820-01-028-9032	176821	30076	VAVLE, Relief, Water Spray Sys
5930-00-983-2896	55983	30076	SWITCH, Pressure
2920-00-718-1764	1116529	16764	SWITCH, Water Spray Motor
5925-01-028-6503	182046	30076	CIRCUIT BREAKER, Wtr, Spray Mtr
2530-00-971-1910	276121	06853	REPAIR KIT, Air Comp Governor
2530-00-062-4260	229416	06853	REPAIR KIT, Air Compressor
4310-01-028-9278	180580	30076	UNLOADER KIT, Air Compressor
5330-01-039-6595	180757	30076	GASKET KIT, Air Comp
4730-01-033-1023	171873	30076	ROTATING UNION, Air Sys

<u>NSN</u>	<u>P / N</u>	<u>FSCM</u>	<u>DESCRIPTION</u>
5920-00-131-9915	F02A32V20A	81349	FUSE, 20-Amp Wtr Spray Mtr
6240-00-733-2984	156776	30076	SEALED BEAM, Head Light
2990-01-029-4594	79247	30076	REPAIR KIT, Air Regulator
4820-01-071-3785	78409	30076	REPAIR KIT, Quick Relief Valve
2940-00-019-8087	PF147	70040	ELEMENT, Eng Oil Filter
2910-00-890-2436	5574961	70040	ELEMENT, Primary Fuel Filter
2910-00-377-5548	PR151-6	81321	ELEMENT, Secondary Fuel Filter
6620-00-993-3594	77328	30076	SENDER, Trans & Wtr Temp Gages
5930-00-220-6716	169776	30076	SENDER, Oil Pressure
5330-00-860-9956	16484	30076	O-RING, Hyd Bose, Str Control
5330-00-810-7493	16486	30076	O-RING, Hyd Hose, Str Pump
3030-00-982-1212	5126447	72582	V-BELT SET, Fan
3030-00-208-7495	5133173	72582	V-BELT SET, Alternator
6140-00-917-2141	74325	30076	BATTERY, 12 Volt
2610-01-066-7805	156643	30076	Tire Pneumatic
2530-01-028-5288	163616	30076	Control Assembly
4320-01-037-4815	169150	30076	Steering Pump
2520-01-054-5336	169541	30076	Differential, Driven
4310-01-043-7974	175908	30076	Compressor
2520-01-028-8802	393303	30076	Transmission
2815-01-015-4647	5033-7201	72582	Engine Diesel

APPENDIX H

SAMPLE FORMAT

DA FORM 2765 PART NUMBER REQUEST

(CONUSREQUESTOR)

BALTIMORE BUSINESS FORMS, INC. BANCHEP-C-687  
USE TYPEWRITER OR BALL POINT PEN  
PRESS HARD TO ASSURE LEGIBILITY ON ALL COPIES  
PRINT AS THIS INVOICE ENCLOSED

SEND TO: \_\_\_\_\_

USE THE FSCM AS THE FIRST 5 DIGITS OF THE PART NUMBER

WEAPONS SYS DSG CODE

3341346020

B G W

**SAMPLE**

PROJECT CODE

REQUEST FOR ISSUE OR TURN-IN (AR 710-3)

QTY	UNIT OF MEAS	QUANTITY	UNIT PRICE	TOTAL PRICE

FUND	SYMBOL	PROJECT	PRIORITY	REQ DEL DATE	TURNS

(CONUS REQUESTOR)

BALTIMORE BUSINESS FORMS, INC. BANCHEP-C-687  
USE TYPEWRITER OR BALL POINT PEN  
PRESS HARD TO ASSURE LEGIBILITY ON ALL COPIES  
PRINT AS THIS INVOICE ENCLOSED

SEND TO: \_\_\_\_\_

USE THE FSCM AS THE FIRST 5 DIGITS OF THE PART NUMBER

WEAPONS SYS DSG CODE

3341346020

J Z C

**SAMPLE**

PROJECT CODE

REQUEST FOR ISSUE OR TURN-IN (AR 710-3)

QTY	UNIT OF MEAS	QUANTITY	UNIT PRICE	TOTAL PRICE

FUND	SYMBOL	PROJECT	PRIORITY	REQ DEL DATE	TURNS

APPENDIX I

SAMPLE FORMAT - MILSTRIP REQUISITION FOR (NSN)

<u>Card Column</u>	<u>Description of Data</u>	<u>Mandatory Entry for CCE</u>
1-3	Document Identifier Code	A0A - CONUS A01 - Overseas
4-6	Routing Identifier Code	
7	Media/Status Code	
8-22	NSN	
23-24	Unit of Issue	
25-29	Quantity	
30-43	Document Number	
44	Demand Code	
45-50	Supplementary Address	
51	Signal Code	
52-53	Fund Code	
54-56	Distribution Code CC-54	"F" for CONUS; see AR 725-50 for OCONUS
	CC-55-56	Weapon System Code
57-59	Project Code	"BWG" for CONUS; "JZC" For OCONUS
60-61	Priority Code	
62-64	Required Delivery Date	
65-66	Advice Code	



APPENDIX J

SAMPLE FORMAT - MILSTRIP REQUISITION FOR (NON-NSN)

<u>Cord Column</u>	<u>Description of Data</u>	<u>Mandatory Entry for CCE</u>
1-3	Document Identifier Code	A0B - CONUS A02 - Overseas
4-6	Routing Identifier Code	Always S9C
7	Media/Status Code	
8-22	FSCM and Part Number	
23-24	Unit of Issue	
25-29	Quantity	
30-43	Document Number	
44	Demand Code	
45-50	Supplementary Address	
51	Signal Code	
52-53	Fund Code	
54-56	Distribution Code CC-54	'F' for CONUS; see AR 725-50 for OCONUS
	CC-55-56	Weapon System Code
57-59	Project Code	"BWG" for CONUS; "JZC" for OCONUS
60-61	Priority Code	
62-64	Required Delivery Date	
65-66	Advice Code	

APPENDIX J (CONT'D)

<u>CARD COLUMN</u>	<u>DESCRIPTION OF DATA</u>	<u>MANDATORY ENTRY FOR CCE</u>
67-69	Blank	
70	Identification code applicable to entry in cc 71-80.  A - Technical order or Technical Manual.  B - End Item Identification  C - Noun Description  D- Drawing or Specification No.	
71-80	Reference Identification	Identification of reference specified in cc 70

APPENDIX K

SAMPLE FORMAT- MILSTRIP REQUISITION FOR CCE (NON-NSN) (MANUAL)

1	2	3	4	5	6	7	MANUFACTURER'S CODE * AND PART NUMBER															UNIT OF ISSUE	QUANTITY						DOCUMENT NUMBER												
							FSCM					PART NUMBER																	SERV	REQUISITIONER			DATE			SERIAL					
							8	9	10	11	12	13	14	15	16	17	18	19	20	21	22		23	24	25	26	27	28		29	30	31	32	33	34	35	36	37	38	39	40
DEMAND SERV	SUPPLEMENTARY ADDRESS							SIGNAL CODE	FUND CODE	DISTRI- BUTION CODE	PRO- JECT CODE	PRIOR- ITY	RE- QUIRED DELIV- ERY DATE	ADVICE CODE	BLANK															REJECT CODE (FOR USE BY SUPPLY SOURCE ONLY)											
44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	65	66			

**IDENTIFICATION DATA**

* 1. MANUFACTURER'S CODE & PART NO. (When they exceed Card Columns 8 thru 22)	2. MANUFACTURER'S NAME		
3. MANUFACTURER'S CATALOG IDENTIFICATION AND DATE	4. TECHNICAL ORDER NUMBER		
5. TECHNICAL MANUAL NUMBER	6. NAME OF ITEM REQUESTED		
7. DESCRIPTION OF ITEM REQUESTED			
<div style="border: 2px solid black; padding: 10px; display: inline-block;"> <p style="font-size: 2em; margin: 0;"><b>SAMPLE</b></p> </div>			
7a. COLOR			
7b. SIZE			
8. END ITEM APPLICATION AND SOURCE OF SUPPLY			
8a. MAKE	8b. MODEL NUMBER	8c. SERIES	8d. SERIAL NUMBER
9. REQUISITIONER (Clear Text Name and Address)		10. REMARKS	

DD FORM 1348-6  
1 APR 77

EDITION OF 1 MAR 74 MAY BE  
USED UNTIL EXHAUSTED

**NON-NSN REQUISITION (MANUAL)**

APPENDIX K

INSTRUCTIONS

This form will only be used in those cases where the manufacturer's code and part number exceed the spaces allocated in card columns 8 - 22 of the requisition.

<u>CARD COLUMN</u>	<u>DESCRIPTION DATA</u>	<u>MANDATORY ENTRY FOR CCE</u>
1 - 3	Document Identifier Code	AøE - CONUS Aø5 - OCONUS
4 - 6	Routing Identifier Code	Always S9C
7	Media Status Code	
8 - 22	FSCM and Part Number	Leave Blank Enter In Block 1 under Identification Data
23-24	Unit of Issue	
25-29	quantity	
30-43	Document Number	
44	Demand Code	
45-50	Supplementary Address	
51	Signal Code	
52-53	Fund Code	
54-56	Distribution Code CC 54 cc 55-56	"F" for CONUS. (See AR 725-50 for OCONUS) Weapon System Code
57-59	Project Code	"BWG" for CONUS; "JZC" for OCONUS
60-61	Priority Code	
62-64	Required Delivery Date	
65-66	Advice Code	
67-80		Blank

IDENTIFICATION DATA - Lower half of DD Form 1348-6, complete Blocks 1 thru 9.

**APPENDIX     L**  
**MAINTENANCE AND OPERATING SUPPLY LIST**

NOMENCLATURE: Roller, Pneumatic Tired, Variable Pressure, Self-Propelled (CCE)		MAKE: HYSTER		MODEL: C530A	
M.F.R. PART NO:		NSN: 3895-01-013-3630		DATE: Feb 79	
SERIAL NO. RANGE: -----TO-----					
(1)	(2)	(3)	(4)	(5)	(6)
COMPONENT APPLICATION	MFR PART NO. OR NAT'L TOCK NO.	DESCRIPTION	QTY REQ F/INITIAL OPN	QTY REQ F/8 HRS OPN	NOTES
Fuel Tank	9150-00-286-5296	Diesel Fuel DF-, VV-F-800	30 Gal		55 Gal Drum
Engine Crank Case	9150-00-188-9858	Oil Lubricating OE/HDO 30 MIL-L-2104C	12 Qts		5 Gal
	9150-00-186-6668	Oil Lubricating OW/HDO 10 MIL-L-2104C			5 Gal
Brake Master Cylinder	9150-00-190-0932	Brake Fluid , Automotive VV-B-680	1 Pt		
Transmission and Converter	9150-00-698-2382	Automotive Transmission Fluid (DEXRON)	13 Qts		
Transfer Case	9150-01-035-5392	Lubricating Oil Gar MIL-L-2105 G080W/90	5 Qts		1 Qt
Final Drive	9150-01-035-5392	Lubricating Oil Gear MIL-L-2105 G080W/90	22 Qts		1 Qt
36	9150-01-035-5393				5 Gal
	9150-01-035-5394				55 Gal

APPENDIX     L      
 MAINTENANCE AND OPERATING SUPPLY LIST

NOMENCLATURE: Roller, Pneumatic Tired, Variable Pressure, Self-Propelled (CCE)		MAKE: HYSTER		MODEL: C530A	
M.F.R. PART NO:		NSN: 3895-01-013-3630		SERIAL NO. RANGE: -----TO-----	
				DATE: Feb 79	
(1)	(2)	(3)	(4)	(5)	(6)
COMPONENT APPLICATION	MFR PART NO. OR NAT'L TOCK NO.	DESCRIPTION	QTY REQ F/INITIAL OPN	QTY REQ F/8 HRS OPN	NOTES
General Application	9150-00-190-0905	GAA Grease MIL-G-10924	A/R		
Cooling System	6850-00-181-7933	Anti-Freeze Permanent MIL-A-46153	13 Qts		50-50 solution
Steeling Hydraulic Tank	9150-00-186-6668	Oil Lubricating OE/HDO 10 MIL-L-2104C	4 Gal		5 Gal
	9150-00-189-6727				1 Qt
	9150-00-191-2772				55 Gal

## APPENDIX M

### PREVENTIVE MAINTENANCE CHECKS AND SERVICES

#### Maintenance Forms and Records

Every mission begins and ends with the paperwork. There isn't much of it, but you have to keep it up. The forms and records you fill out have several uses. They are a permanent record of the services, repairs, and modifications made on your vehicle. They are reports to organizational maintenance and to your commander. And they are a checklist for you when you want to know what is wrong with the vehicle after its last use, and whether those faults have been fixed. For the information you need on forms and records, see TM 38-750.

#### Preventive Maintenance Checks and Services

1. Do your before (B) PREVENTIVE MAINTENANCE just before you operate the vehicle. Pay attention to the CAUTIONS and WARNINGS.
2. DURING checks and services (D) of PREVENTIVE MAINTENANCE will be performed while the equipment and/or its component systems are in operation.
3. Do your after (A) PREVENTIVE MAINTENANCE right after operating the vehicle. Pay attention to the CAUTIONS and WARNINGS.
4. Do your weekly (W) PREVENTIVE MAINTENANCE weekly.
5. Do your monthly (M) PREVENTIVE MAINTENANCE once a month.
6. If something doesn't work, troubleshoot it with the instructions in this manual or notify your supervisor.
7. Always do your PREVENTIVE MAINTENANCE in the same order so it gets to be a habit. Once you've had some practice, you'll spot anything wrong in a hurry.
8. If anything looks wrong and you can't fix it, write it on your DA Form 2404. If you find something seriously wrong, report it to organizational maintenance RIGHT NOW.
9. When you do your PREVENTIVE MAINTENANCE, take along the tools you need to make all the checks. You always need a rag or two.

A - Keep it clean: Dirt, grease, oil, and debris only get in the way and may cover up a serious problem. Clean as you work and as needed. Use dry cleaning solvent (SD-2) on all metal surfaces. Use soap and water when you clean rubber or plastic material.

#### WARNING

Dry cleaning solvent, used to clean parts is potentially dangerous to personnel and property. Do not use near open flame or excessive heat. Flash point of solvent is 100°F - 138°F.

## APPENDIX M

B- Bolts, nuts, and screws: Check them all for obvious looseness, missing, bent or broken condition. You can't try them all with a tool, of course, but look for chipped paint, bare metal, or rust around bolt heads. If you find one you think is loose, tighten it, or report it to organizational maintenance if you can't tighten it.

C- Welds: Look for loose or chipped paint, rust, or gaps where parts are welded together. If you find a bad weld, report it to organizational maintenance.

D- Electric wires and connectors: Look for cracked or broken insulation, bare wires, and loose or broken connectors. Tighten loose connectors and make sure the wires are in good shape.

E- Hoses and fluid lines: Look for wear, damage, and leaks, and make sure clamps and fittings are tight. Wet spots show leaks, of course. But a stain around a fitting or connector can mean a leak. If a leak comes from a loose fitting or connector, tighten it. If something is broken or worn out, report it to organizational maintenance.

10. It is necessary for you to know how fluid leakage affects the status of your vehicle. The following are definitions of the types/classes of leakage an operator-or crew member needs to know to be able to determine the status of his/her vehicle. Learn, then be familiar with them and REMEMBER - WHEN IN DOUBT, NOTIFY YOUR SUPERVISOR!

### Leakage Definitions for Crew/Operator PMCS

Class I	Seepage of fluid (as indicated by wetness or discoloration) not great enough to form drops.
Class II	Leakage of fluid great enough to form drops but not enough to cause drops to drip from item being checked/inspected.
Class III	Leakage of fluid great enough to form drops that fall from the item being checked/inspected,

### CAUTION

EQUIPMENT OPERATION IS ALLOWABLE WITH MINOR LEAKAGES (CLASS I OR II). OF COURSE, CONSIDERATION MUST BE GIVEN TO THE FLUID CAPACITY IN THE ITEM/SYSTEM BEING CHECKED/INSPECTED. WHEN IN DOUBT, NOTIFY YOUR SUPERVISOR.



OPERATOR/CREW PREVENTIVE MAINTENANCE CHECKS AND SERVICES  
 B-Before                      D-During                      A-After                      W-Weekly                      M-Monthly

APPENDIX M

ITEM NO	INTERVAL					ITEM TO BE INSPECTED PROCEDURE: Check for and have repaired, filled or adjusted as needed	Equipment is not ready/ AVIALABLE IF:
	B	D	A	w	M		
1	●					<p style="text-align: center;">NOTE PERFORM WEEKLY AS WELL AS BEFORE PMCS'S IF:</p> <p>a. You are the assigned operator but have not operated equipment since the last weekly.</p> <p>b. You are operating the equipment for the first time.</p> <p><u>GENERAL</u></p> <p>a. Visually check for loose wiring, damaged piping or hoses.</p> <p>b. Look for evidence of fluid leakage (oil, fuel, coolant).</p> <p><u>ENGINE CRANKCASE</u></p> <p>Check dipstick for proper level. Add oil as necessary to FULL mark.</p> <p><u>RADIATOR</u></p> <p>Check coolant level. Add coolant as required. (Level should be approximately 1 inch from bottom of filler neck.)</p> <p><u>FUEL STRAINER</u></p> <p>Drain approximately ¼ pint to remove sediment and water.</p>	Class III leaks or any fuel leakages are found.
	●	●					
	●						
	●						
2	●						
3	●						
4	●						

07

OPERATOR/CREW PREVENTIVE MAINTENANCE CHECKS AND SERVICES  
 B-Before      D-During      A-After      W-Weekly      M-Monthly

APPENDIX M

ITEM NO	INTERVAL					ITEM TO BE INSPECTED PROCEDURE : Check for and have repaired, filled or adjusted as needed	Equipment is not ready/ AVAILABLE IF:
	B	D	A	W	M		
5		●				<u>TIRES</u>  a. Check for cuts and general condition. b. Check operation of tire inflation system.	One or more missing, flat, and/or unserviceable. Tires fail to inflate.
6						<u>CONTROLS AND INSTRUMENTS</u> (Check for proper indication and operation)  a. <u>Ammeter</u> Slight (+) Charge b. <u>Engine Coolant Temperature Gage</u> 160°-185°F normal operation c. <u>Engine Oil Pressure</u> 40-60 PSI normal operation d. <u>Transmission Oil Temperature</u> GREEN/RED e. <u>Hourmeter</u> Total hours of engine operation f. <u>Fuel Gage</u> g. <u>Gage Tire Pressure</u> 35-140 PSI max depending on tire PLY and mission. h. <u>Controls</u> (i.e., steering, shifting, etc) Check for proper operation	Engine oil pressure and coolant gages indicate abnormal operation.  Gages indicate red.
7						<u>WATER SPRAY SYSTEM/TANK</u>  a. Check strainer and clean with water if required. b. Check water spray nozzle and clean if required.	
8						<u>COCO MATS</u>  Check for missing or worn mats.	One or more missing.

APPENDIX M

ITEM NO	INTERVAL					ITEM TO BE INSPECTED PROCEDURE: Check for and have repaired, filled or adjusted as needed	Equipment is not ready/ AVAILABLE IF:
	B	D	A	W	M		
9				●		<u>TRANSFER CASE</u>  Check fluid level. Add as necessary to FULL mark.	
10				●		<u>STEERING HYDRAULIC TANK</u>  Check fluid level at sight gage. Check should be mad with cold oil. Add as required.	
11				●		<u>TRANSMISSION</u>  Check dipstick for proper level. Add oil as necessary to FULL mark.	
12				●		<u>BRAKE MASTER CYLINDER</u>  Check fluid level. Add as required.	
13		●				<u>AIR CLEANER</u>  a. Check air cleaner indicater; if red, clean and service element b. Inspect air cleaner element.	
14				●		<u>V-BELTS</u>  Check for frayed, cracked, or broken belts.	
15				●		<u>BATTERY</u>  Check fluid level. Fill as required to split ring. Inspect for obvious defects; such as cracked case or burnt, broken or loose terminals and cables.	
42							

ORGANIZATIONAL PREVENTIVE MAINTENANCE CHECKS AND SERVICES

Q-Quarterly

S-Semiannually

A-Annually

B-Biennially

ii-Hours

M-Miles

APPENDIX M

ITEM NO	INTERVAL						ITEM TO BE INSPECTED PROCEDURE: Check for and have repaired, filled, or adjusted as needed
	Q	S	A	B	H	MI	
1	•						<u>ENGINE</u> Check for leaks, loose mounts and proper operation.
2					100		<u>OIL FILTER</u> Change oil and filter.
3					300		<u>FUEL FILTER AND STRAINER</u> Change. filter and strainer elements.
4					200		<u>V-BELTS</u> (All belts) Check tension.
5							<u>RADIATOR</u> a. Check for leaks and clean exterior as required. b. Check antifreeze protection. c. Drain and flush radiator and engine.
6					1000		<u>AIR CLEANER</u> a. Check filter element and clean as required. b. Change filter element.
7	•				500		<u>BLOWER SCREEN</u> Clean
8		•					<u>BATTERY</u> Check specific gravity of electrolyte in each cell.

ORGANIZATIONAL PREVENTIVE MAINTENANCE CHECKS AND SERVICES

Q-Quarterly

S-Semiannually

A-Annually

B-Biennially

H-Hours

M-Miles

APPENDIX M

ITEM NO	INTERVAL						ITEM TO BE INSPECTED PROCEDURE: Check for and have repaired, filled, or adjusted as needed
	Q	S	A	B	H	MI	
9		●					<u>TRANSMISSION &amp; CONVERTER</u> Drain fluid, change filter and refill.
10			●				<u>TRANSFER CASE</u> Drain fluid and refill.
11			●				<u>FINAL DRIVE</u> Drain fluid and refill.
12			●				<u>HYDRAULIC STEERING SYSTEM</u> Drain fluid, change filter and refill.
13			●				<u>GAGES AND CONTROLS</u> Check operation.
14			●				<u>WHEEL BEARING</u> Clean, inspect and repack or replace if required.
15			●				<u>WATER SPRAY SYSTEM</u> Inspect and clean if required, the tank, strainer and nozzles.
16			●				<u>TIRES</u> Check for cuts and general condition and operation of tire inflation system.











---

**PART III**  
**PARTS MANUAL**

---

C530A


## INDEX

SECTION A	INTRODUCTION .....	
SECTION B	COWLING AND FLOOR PLATE .....	
SECTION C	POWER UNIT .....	
SECTION D	FUEL SYSTEM .....	
SECTION E	ELECTRICAL -EQUIPMENT .....	
SECTION G	TRANSMISSION AND POWER TRAIN .....	
SECTION H	BRAKES AND LINKAGE .....	
SECTION K	STEERING AND LINKAGE .....	
SECTION P	OPTIONAL EQUIPMENT .....	
SECTION Q	NUMERICAL INDEX .....	



## UNIT IDENTIFICATION


### UNIT SERIAL NO.



- (1) & (2) The first letter and number denote the design series and model of the unit.
- (3) The second letter denotes the plant at which the unit was manufactured.
- (4) The number series denotes the serial number of the unit.
- (5) The final letter denotes the year of manufacture starting with "A" in 1957. The letters "I", "O", and "Q" will not be used.

**Parts Referred To In This Book As Right Or Left Hand Parts  
Are In Accordance With The Sketch Below**

R. H. Side

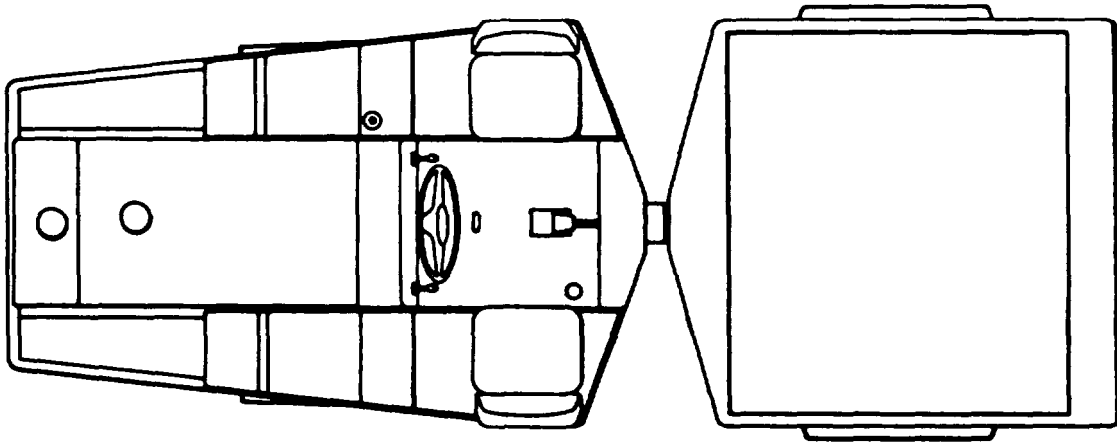

L. H. Side

**CAUTION!**  
**Never Attempt To Clean, Oil Or Adjust A Machine  
While It Is In Motion**


---





# Section A

## INTRODUCTION

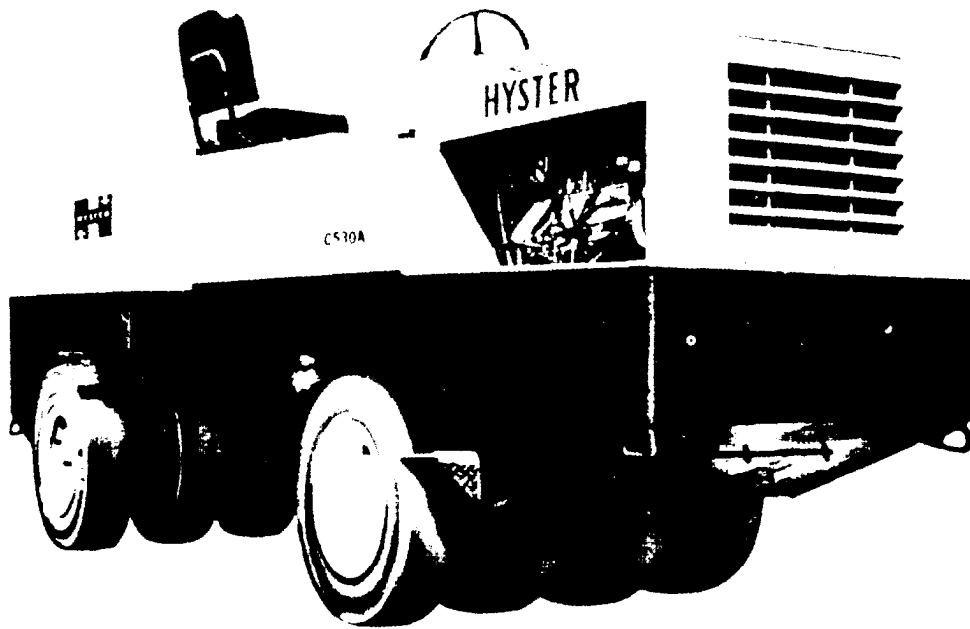

## How To Use The Illustrated Parts Manual

This Parts Book describes and illustrates assemblies, sub-assemblies and detail parts needed for service replacement.

**REVISION No 3**  
16/M

**INDEX**

**SECTION A** Service and Operating Instructions  
**SECTION B** Frame and G...  
**SECTION C** Power Unit  
**SECTION D** Fuel Syst...  
**SECTION E** Electr...  
**SECTION F** Clut...  
**SECTION G** D...  
**SECTION P**  
**SECTION Q**

**NUMERICAL INDEX**

Page	Part No.	Page	Part No.	Page	Part No.
139	85	16180	C1	16830	
141	C9	16201	C5	16831	
142	G14	16271	C1	16833	
150	G14	16370	C4	16836	
152	P1	16397	P1	16838	
153	P1	16401	C2	16866	
157	A	16403	C8		
157	9	16405	G1		
157	1	16407	P3		
157	3				
157	4				
157	5				
157	6				
157	7				
157	8				
157	10				
157	11				
157	12				
157	13				
157	14				
157	15				
157	16				
157	17				
157	18				
157	19				
157	20				
157	21				
157	22				
157	23				
157	24				
157	25				
157	26				
157	27				
157	28				
157	29				
157	30				
157	31				
157	32				
157	33				
157	34				
157	35				
157	36				
157	37				
157	38				
157	39				
157	40				
157	41				
157	42				
157	43				
157	44				
157	45				
157	46				
157	47				
157	48				
157	49				
157	50				
157	51				
157	52				
157	53				
157	54				
157	55				
157	56				
157	57				
157	58				
157	59				
157	60				
157	61				
157	62				
157	63				
157	64				
157	65				
157	66				
157	67				
157	68				
157	69				
157	70				
157	71				
157	72				
157	73				
157	74				
157	75				
157	76				
157	77				
157	78				
157	79				
157	80				
157	81				
157	82				
157	83				
157	84				
157	85				
157	86				
157	87				
157	88				
157	89				
157	90				
157	91				
157	92				
157	93				
157	94				
157	95				
157	96				
157	97				
157	98				
157	99				
157	100				

**LEVELING BLADE HYDRAULIC SYSTEM**

KEY:  
 4-FOR FRONT UNIT.  
 5-FOR REAR UNIT.

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	16162	ELBOW	1
2	16487	O-RING	1
3	16490	LOCKWASHER	1
4	16493	HOSE	1
5	16732	ELBOW	1
6	139621	CONNECTOR	1
7	15028	TUBE	2
8	139623	HOSE-VALVE TO REAR UNIT	2
9	16490	VALVE-CONTROL	1
10	15158	CAPSCREW-1/2 UNF X 1/2	2
11	15158	NUT-1/2 UNF	4
12	139624	HOSE	1
13	167916	TUBE	1
14	167927	PLATE-CLAMP	1
15	167916	LAPSCREW-1/2 UNF X 1 3/4	1
16	167916	NUT-1/2 UNF	1
17	167916	HOSE	1
18	167916	PLATE	1
19	167916	TUBE	1
20	167916	HOSE	1
21	167916	FITTING-NUT	1
22	167916	FITTING-REDUCER	1
23	167916	O-RING	1
24	167916	LOCKWASHER	1
25	17906	CONNECTOR	1
26	139620	TUBE	1
27	17513	CONNECTOR	1
28	152717	HOSE	1
29	152717	CLAMP	1
30	16490	CAPSCREW-1/2 UNF X 1	1
31	15158	NUT-1/2 UNF	1
32	16490	LOCKWASHER-1/2	1
33	16490	O-RING	1
34	139618	LOCKWASHER	1
35	139618	BLOCK	1
36	16490	GATRET	1
37	16490	CAPSCREW-1/8 UNC X 1 3/4	1
38	132	LOCKWASHER-1/8	1
39	132	ROM END	1
40	132	ROM END	1
41	132	COTTER-1/4 X 1	1
42	132	LINE	1
43	15020	NUT-1/2 UNF	1
44	152111	ROM-CONTROL	1
45	139615	BEARING-PILLOW BLOCK	1
46	152000	ARM	1
47	15027	NUT-1/2 UNF	1
48	167916	HANDLE-TAPPED	1
49	167916	CAPSCREW-1/4 UNC X 1 1/4	1
50	167916	NUT-3/16 UNC	1
51	167916	LOCKWASHER	1
52	167916	CAPSCREW-1/4 UNC X 1 1/4	1
53	167916	LOCKWASHER	1

### When The Part Number Is Not Known

- USE: Determine the function and application of the part required. Turn to the index page immediately behind the front cover and select the most appropriate section.
- Line up the black tab with the black tab on

the index page of the selected section. Use the section index to determine the assembly which would normally contain the part required. Proceed then to locate the part on the assembly breakdown page.

### When The Part Number Is Known

3. Use the numerical index (section Q) to find the part number. Turn to the page listed and locate the required part in the assembly breakdown.

GENERAL: The assembly breakdowns include part numbers, description, quantities required, keys and footnotes to help in selecting the correct parts.

4. Keys are used to show effective serial numbers, two or more similar assemblies. Select the appropriate key, "A," "B," "C" or "D" and find the required part in the corresponding column.
5. Indent numbers are used to indicate assemblies and sub-parts of assemblies. Number 1 is the major assembly. Part descriptions which are indented under 2, 3 or 4 are sub-parts of that major assembly shown above.
6. Quantities shown are for one assembly. Note that two assemblies are shown, but the quan-

ties of the sub-parts are indicated as one. This means one per assembly.

- 7 The revision number and date on the index page, indicates the latest printing of the manual.

DEALERS NOTE: When supplements are issued to up-date the manuals, the index page with the latest revision number and date are included with the supplement. Be sure the index pages are added to the manuals in your possession.

---

## **FIRE PRECAUTION**

To avoid fires, operators should be instructed to refuel compacters in well lighted areas outside of buildings. Repairs and adjustments should be made on only those compacters which have been taken to a garage or maintenance shop.

## **STORAGE OF COMPACTER**

Lubricate the compacter according to lubrication recommendations if it is to be left standing for any length of time. This will protect against rusting.

The engine should be run once a week until it is thoroughly warm. This will circulate the oil and prevent rusting from condensation, in addition to keeping the battery charged.

If freezing weather is expected before the engine will be started again, see that the cooling system is adequately protected against freezing.

If the engine is to be stored or left standing longer than a normal day, fill the fuel tank with clean fuel to keep out moisture laden air. This will prevent condensation and rust from forming inside the tank.

## **OPERATION AND MAINTENANCE TIPS**

The following tips will help increase compacter life and contribute to the reduction of expensive downtime.

1. Check lubricating and hydraulic oils and engine coolant at the beginning of each work shift. Use only recommended oils.
2. Don't work compacter until engine and hydraulic oils are warm.
3. Don't let engine idle for extended periods.
4. Don't operate compacter with faulty engine governor or with excessive hydraulic pressure. Have qualified personnel make these checks.
5. Make sure the air cleaner and oil filters are serviced correctly. All connections must be tight with no leaks in the system.
6. Do not add coolant to an overheated engine.
7. After working compacter let engine idle a few minutes before stopping.
8. Fill fuel tank at the end of the shift, when compacter is warm.
9. Do not reverse direction of travel when compacter is traveling above engine idle speeds.
10. Repair minor defects immediately.
11. Do not downshift compacter at vehicle speeds that exceeds the low gear speed at governed engine R.P.M.
12. Adhere to lubrication and maintenance recommendations.

NOTE: For complete information see your OPERATORS and SERVICE MANUAL.

---



# Section B


## COWLING AND FLOOR PLATE

### INDEX

COWLING AND FLOOR PLATE .....	B1
HITCH .....	B2
SEAT AND ADJUSTER .....	B3



## COWLING AND FLOOR PLATES

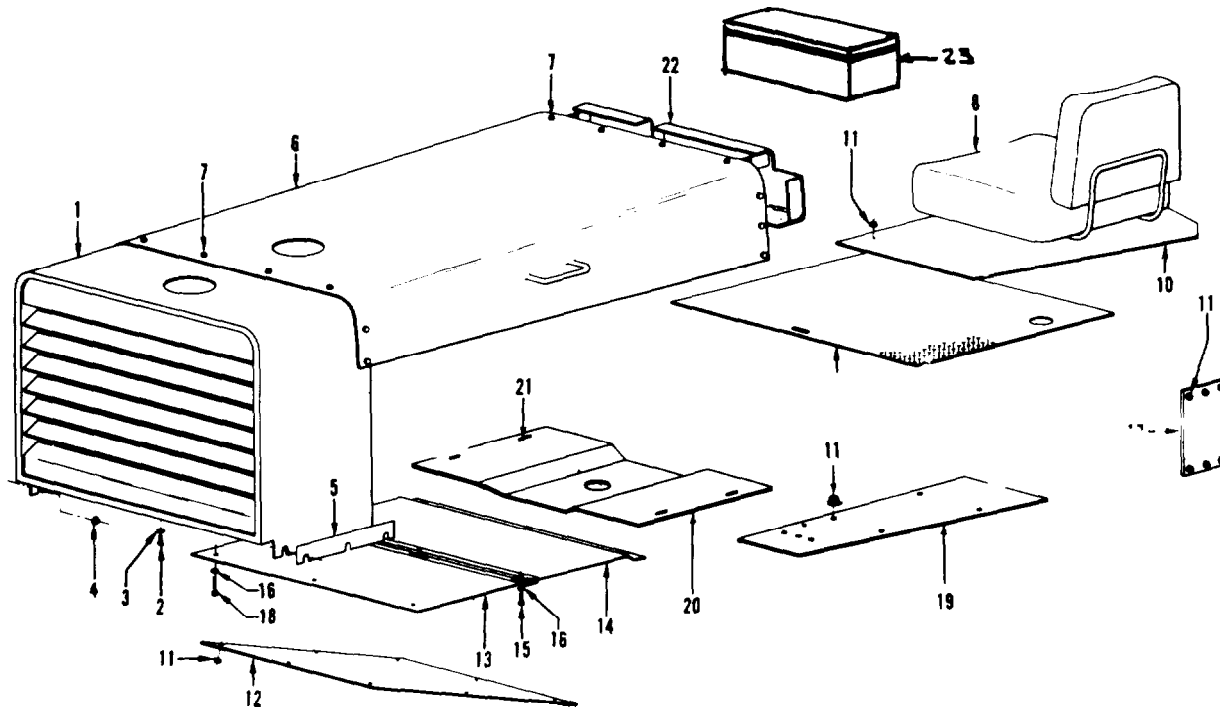


KEY

C-FOR 3-53 DIESEL ENGINE.

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.		REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	
			1	C				1	C
1	169413	SUPPORT-RADIATOR	1		16	15155	LOCKWASHER-5/16		9
2	16829	CAPSCREW-1/2 UNC X 1	3		17	156144	PLATE-COVER		2
3	15158	LOCKWASHER-1/2	3		18	* 16836	CAPSCREW-HT 5/16 UNC x 3/4		1
4	156133	NUT-FLANGE, 3/8 UNC	6		19	173252	PLATE-COVER		2
5	156134	SHIM		AR	20	● 173276	PLATE-COVER		1
6	169415	HOOD	1		21	● 156133	NUT-FLANGE, 3/8 UNC		4
7	139589	CAPSCREW-5/16 UNC x 1/2	17		21	● 15176	WASHER-3/8		4
7	170554	CAPSCREW-5/16 UNC X 1	1		22	177290	VANDAL GUARD		1
8	392450	SEAT	2		22	152296	NUT-WING 3/8 UNC		2
9	165585	PLATE-FLOOR	1			169410	FRAME-FRONT UNIT WITHOUT REMOTE AIR		1
9	173423	PLATE-FLOOR	1			156085	FRAME-REAR UNIT		1
9	166863	PLATE-FLOOR	1			158820	DECAL KIT		1
10	156143	PLATE-COVER	2			145689	WARNING PLATE-CLEARANCE		1
11	156133	NUT-FLANGE, 3/8 UNC	46		23	391777	TOOL BOX		1
12	156142	PLATE-COVER, FRONT UNIT	1						
12	156145	PLATE-COVER, REAR UNIT	1						
13	156139	PLATE-COVER	1						
14	156140	PLATE-COVER	1						
14	* 169418	PLATE-COVER	1						
15	18498	CAPSCREW-5/16 UNC x 3/4	9						

HITCH

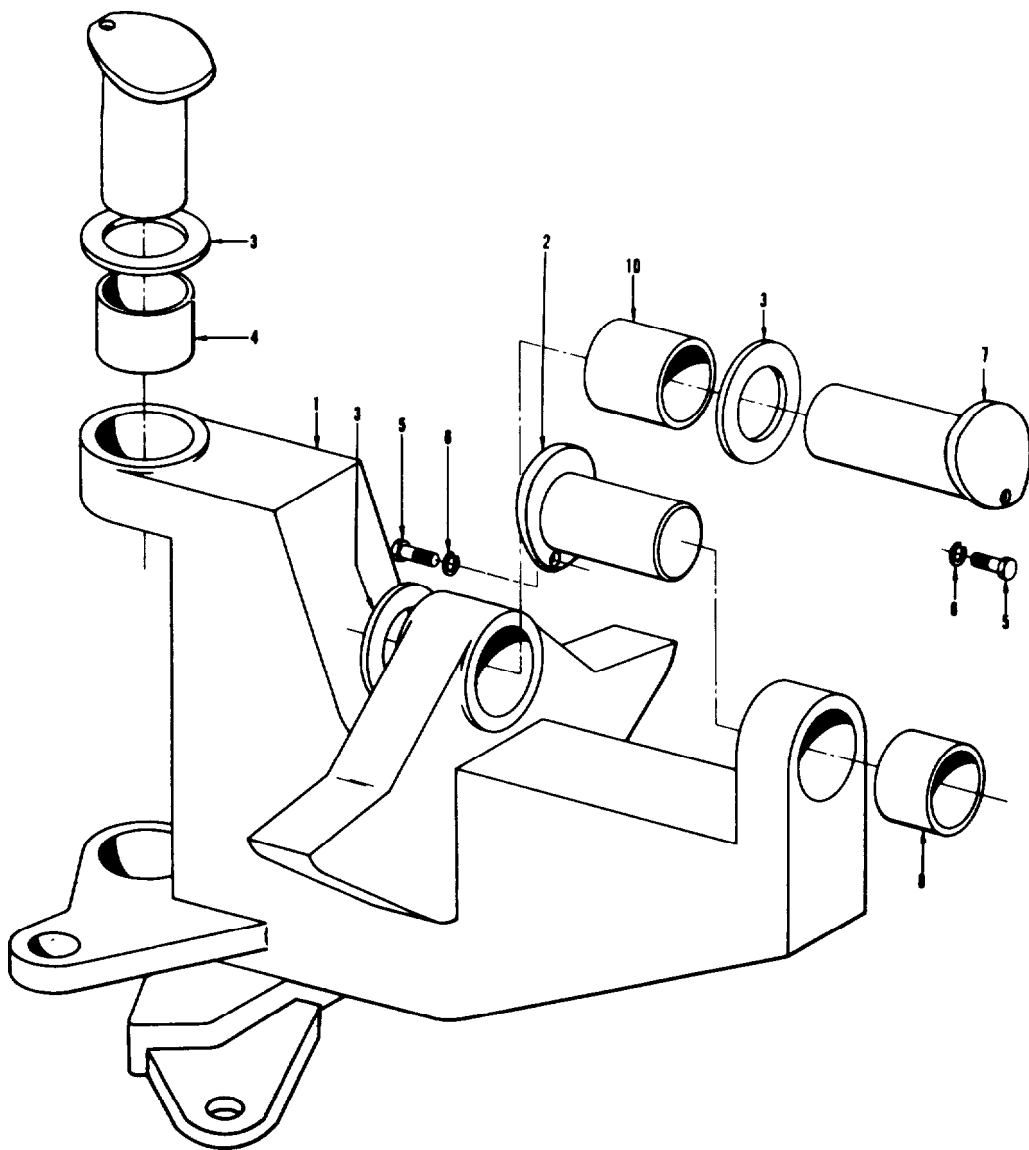

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	391578	HITCH	1
2	391753	PIN	3
3	156113	WASHER	4
4	156112	BUSHING	2
5	18620	CAPSCREW-3/4 UNC x 1 1/2	4

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
6	15162	LOCKWASHER-3/4	4
7	391755	PIN	1
8	156118	BUSHING	1
9	156117	BUSHING	1

DETROIT DIESEL ENGINE - SERIES 3-53

NOTE: For service of this engine, see your Detroit Diesel  
Manual and contact your local Detroit dealer.

# Section C

## POWER UNIT

### INDEX

ENGINE MOUNTS (3-53 Diesel) ..... C20


EXHAUST SYSTEM (3-53 Diesel) ..... C21

OIL DRAIN LINE (3-53 Diesel) ..... C20





## COOLING SYSTEM

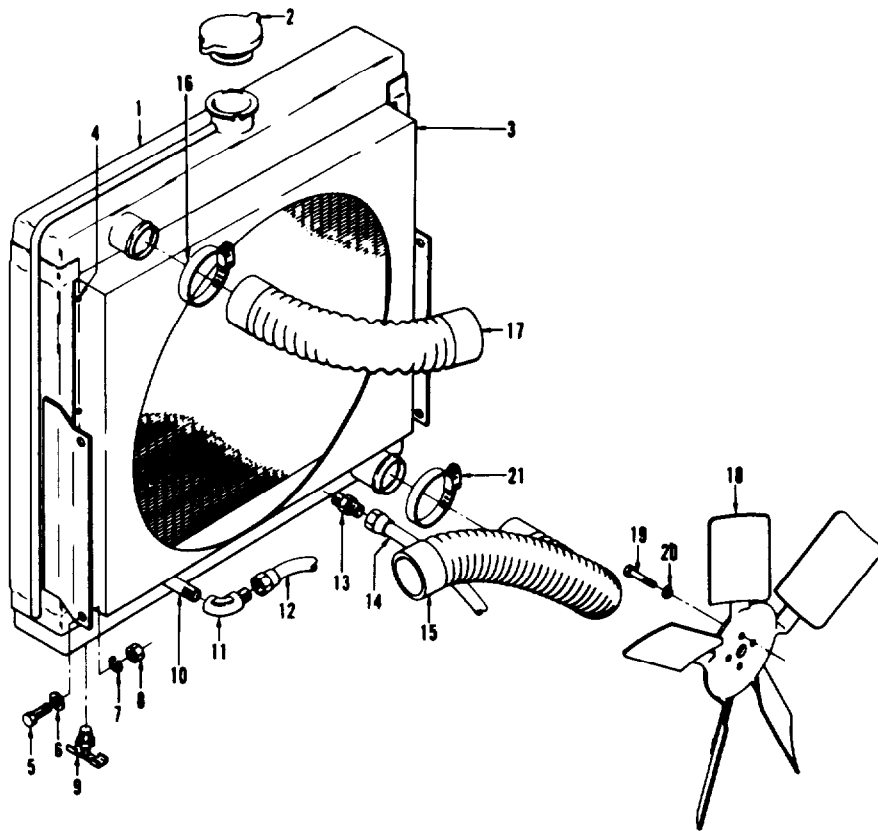


## KEY

C-FOR 3-53 DIESEL ENGINE.

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.		REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	
			1	C				1	C
1	169434	RADIATOR	1		14	164285	TUBE	1	
2	106483	CAP	1		14	174005	CLAMP	1	
3	169435	SHROUD	1		15	169436	HOSE-OUTLET	1	
4	134102	SCREW-NO. 8 X 3/8	6		16	119236	CLAMP	2	
5	17150	CAPSCREW-7/16 UNF X 1	4		17	100434	HOSE	1	
6	15129	WASHER-7/16	4						
7	15157	LOCKWASHER-7/16	4		21	119236	CLAMP	4	
8	15007	NUT-7/16 UNF	4						
9	12815	COCK-DRAIN, 1/4	1						
11	17096	ELBOW-45 DEGREE	1						
12	85830	HOSE-TO SUMP	1						
13	24270	ELBOW-45 DEGREE	1						
14	164288	HOSE-FROM TRANS. FILTER	1						

**ENGINE MOUNTS AND OIL DRAIN LINE**

FOR 3-53 DIESEL ENGINE

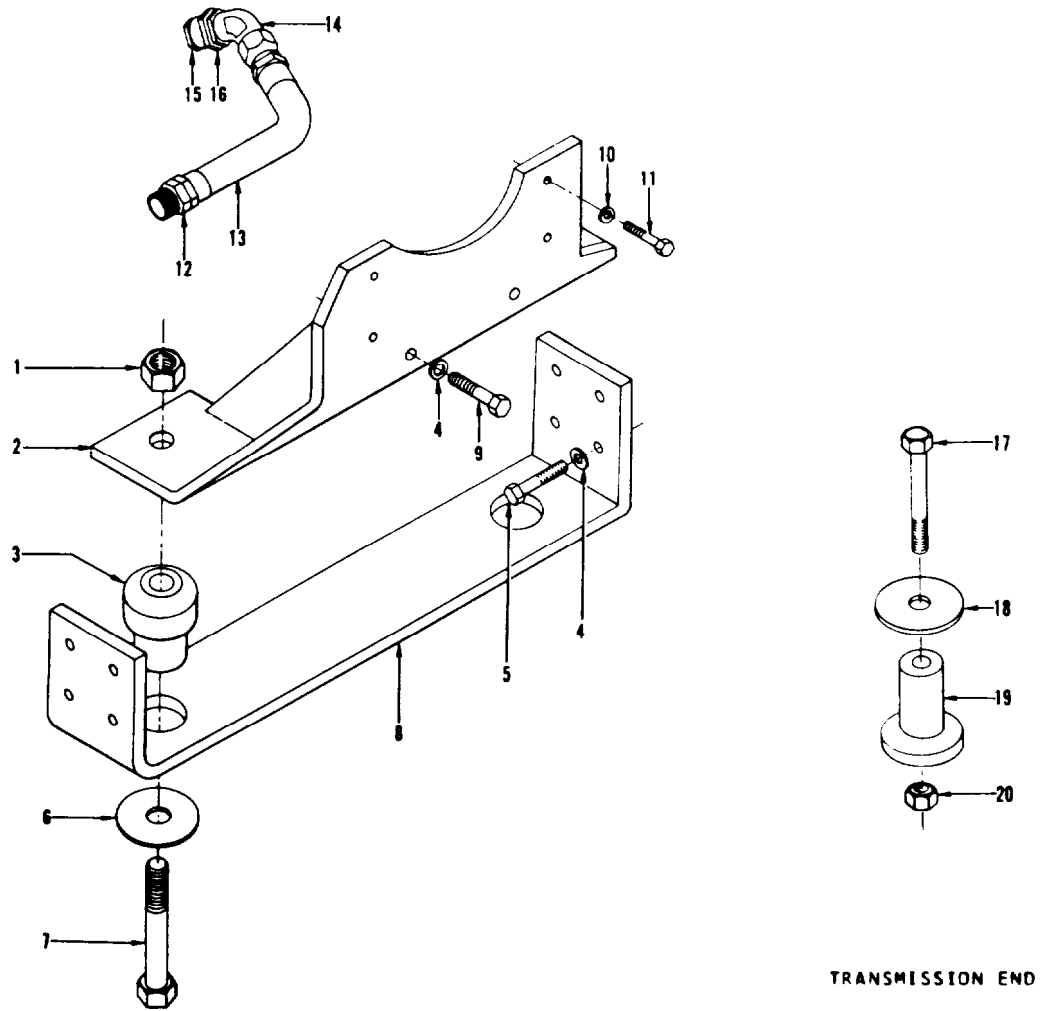


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	174056	LOCKNUT- 3/4 UNF	2
2	169422	BRACKET	1
3	159367	MOUNT-ENGINE	2
4	15157	LOCKWASHER-7/16	10
5	16375	CAPSCREW-HT 7/16 UNF X 1 1/2	8
6	159368	WASHER	2
7	16801	CAPSCREW-HT 3/4 UNF X 3 1/2	2
8	169425	SUPPORT-ENGINE	1
9	18558	CAPSCREW-HT 7/16 UNC X 1 1/2	2
10	15156	LOCKWASHER-3/8	4

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
11	18543	CAPSCREW-HT 3/8 UNC X 3 3/4	4
12	12845	BUSHING	1
13	169442	HOSE	1
14	14550	ELBOW-45 DEGREE	1
15	14387	PLUG	1
16	157912	ADAPTER	1
17	18607	CAPSCREW-HT 5/8 UNF X 3 1/4	2
18	164281	WASHER	2
19	164280	MOTOR MOUNT	2
20	17405	LOCKNUT-5/8 UNF	2

---

**EXHAUST SYSTEM**

FOR 3-53 DIESEL ENGINE

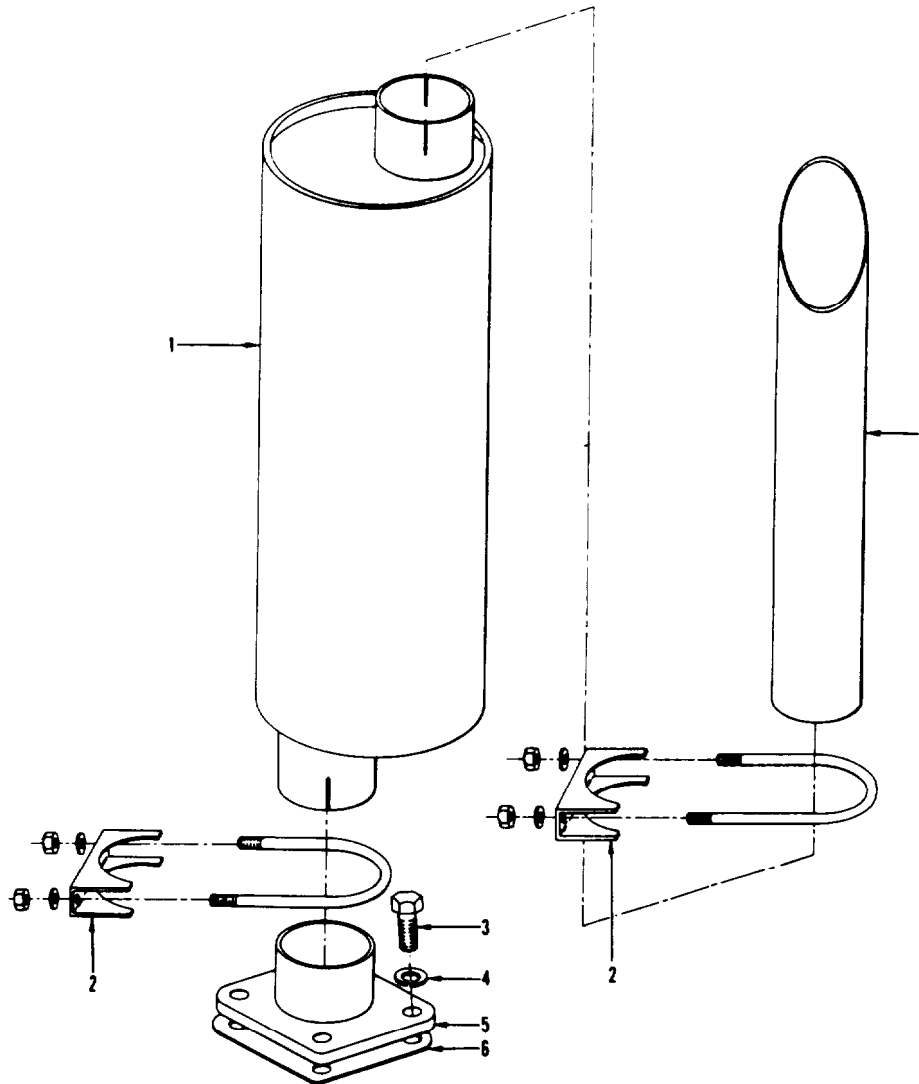

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	153025	MUFFLER	1
2	30375	CLAMP	2
3	16805	CAPSCREW-HT 3/8 UNC X 1	4
4	15156	LOCKWASHER-3/8	4

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
5	169438	ADAPTOR	1
6	.....	GASKET-COMES WITH ENGINE	1
7	170555	TAIL PIPE	1

---

# Section D

## FUEL SYSTEM

### INDEX


AIR FILTER (3-53 Diesel) ..... D10

FUEL SYSTEM (3-53 Diesel) ..... D11



**AIR FILTER**


FOR 3-53 DIESEL ENGINE

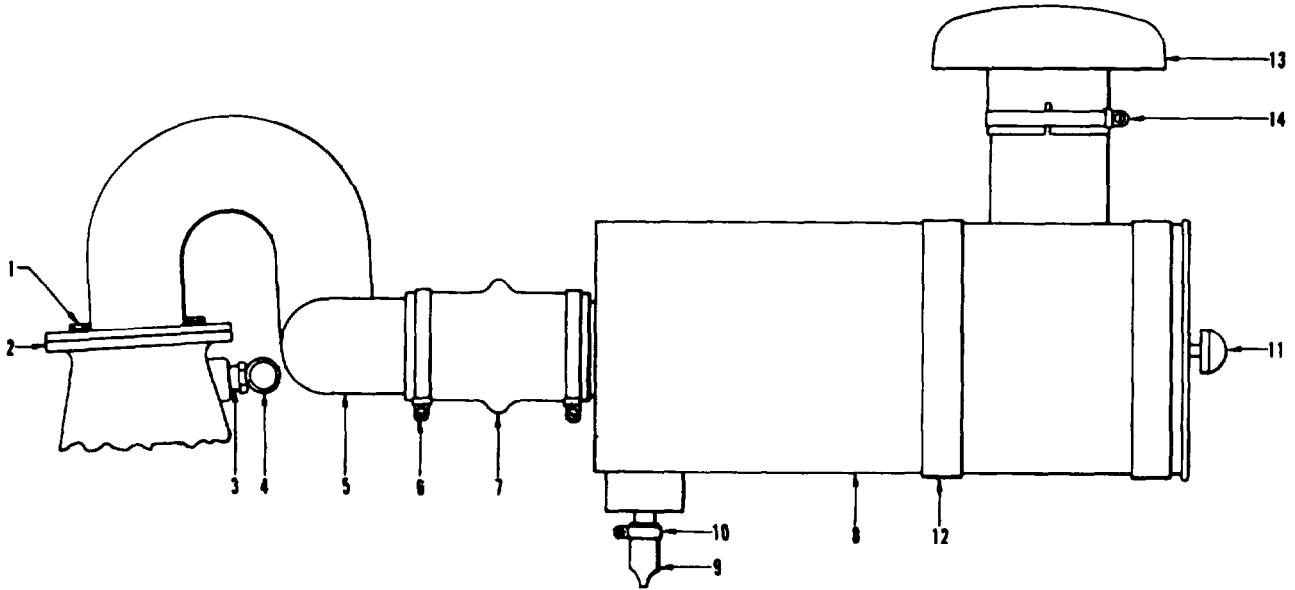

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	18497	CAPSCREW-HT 5/16 UNC X 1	4	8	169426	FILTER-AIR	1
1	15155	LOCKWASHER-5/16	4	8	170075	ELEMENT-FILTER	1
2	170306	GASKET	1	9	164953	UNLOADER-DUST	1
3	12844	BUSHING	1	10	130845	CLAMP	1
3	16151	ELBOW	1	11	170076	RETAINER-BAR	1
4	156479	RESTRICTION INDICATOR	1	12	169428	BRACKET-AIR FILTER	1
4	141259	FITTING-FILTER	1	12	18535	CAPSCREW-HT 3/8 UNC X 5/8	4
5	169430	ELBOW-AIR INLET	1	12	15156	LOCKWASHER-3/8	4
6	115696	CLAMP	2	13	169429	CAP-AIR STACK	1
7	169432	HOSE-HUMP	1	14	78286	CLAMP	1

**FUEL SYSTEM**

3-53 DIESEL ENGINE

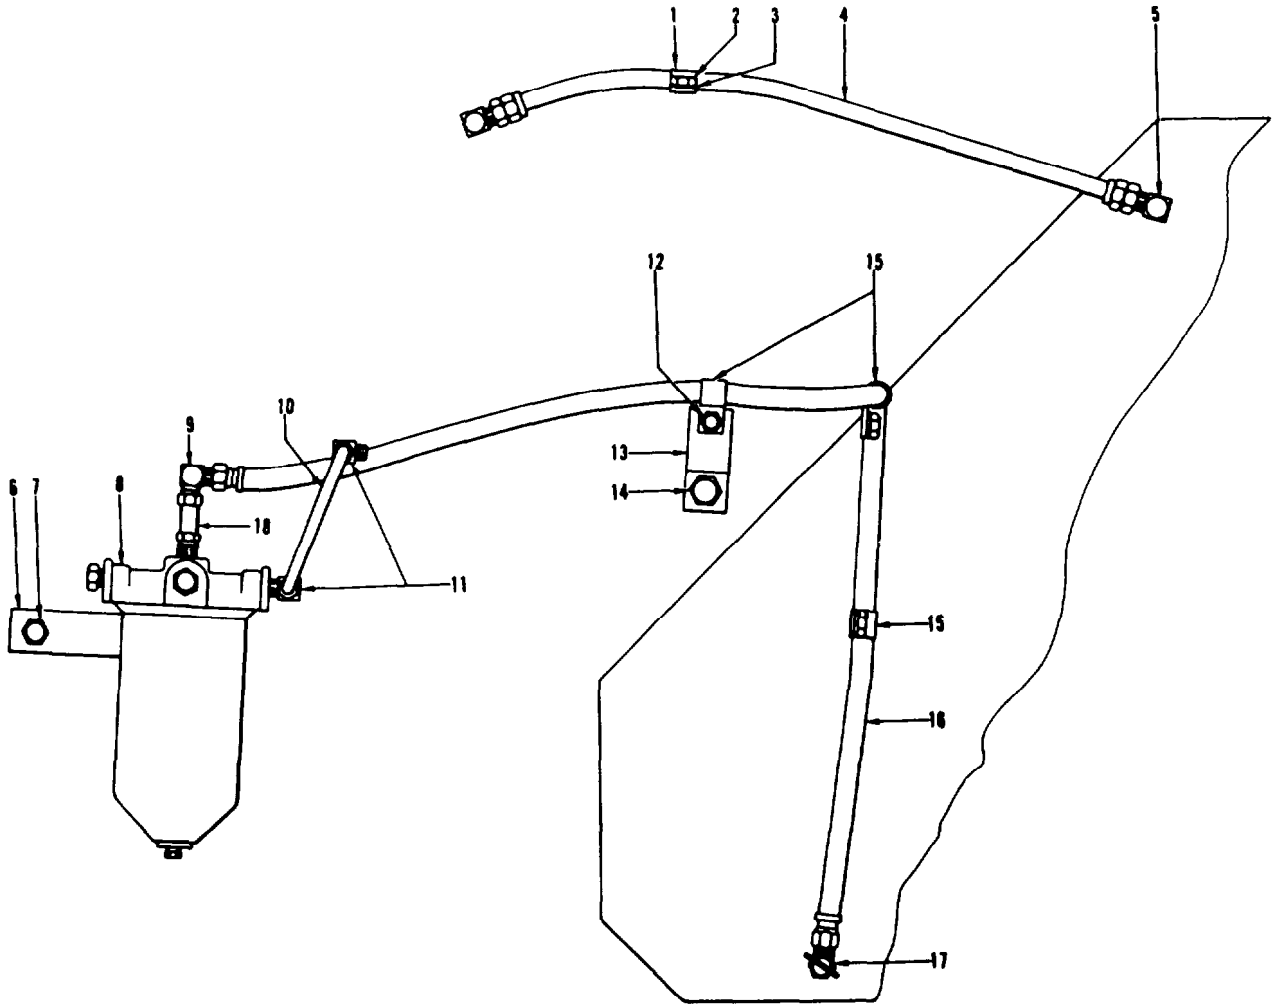

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	119074	CLAMP	2	10	154494	TUBE	1
2	15534	CAPSCREW-3/8 UNC X 5/8	1	11	14273	ELBOW	2
3	15156	LOCKWASHER-3/8	1	12	15525	CAPSCREW-3/8 UNC x 3/4	1
4	16 1 1 9	HOSE	1	12	15156	LOCKWASHER-3/8	1
5	169119	ELBOW	1	12	15056	NUT-3/8 UNC	1
6	169122	BRACKET	1	13	169447	BRACKET	1
7	16805	CAPSCREW-HT 3/8 UNC X 1	2	14	17268	CAPSCREW-1/2 UNC X 5/8	1
7	15156	LOCKWASHER-3/8	3	14	15158	LOCKWASHER-1/2	1
7	16815	CAPSCREW-HT 3/8 UNC X 1 1/2	1	15	128408	CLAMP	2
8	.....	FUEL FILTER-SEE PAGE D6	1	16	169446	HOSE	1
8	.....	FUEL FILTER-COMES WITH ENGINE	1	17	16192	VALVE-SHUT OFF	1
9	14358	ELBOW	1	18	160622	VALVE-CHECK	1



# Section E

ELECTRICAL EQUIPMENT

## INDEX



ELECTRIC SYSTEM


(3-53 Diesel).....E2





## ELECTRICAL SYSTEM

FOR DIESEL ENGINE

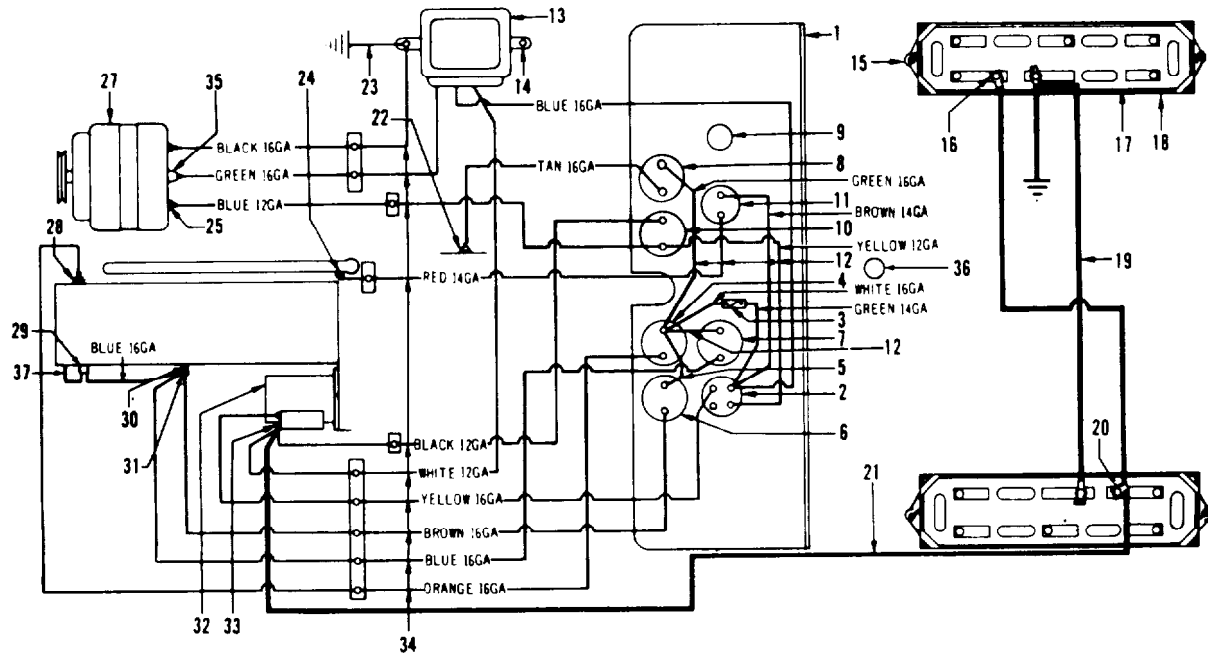

## KEY

8-FOR 3-53 DIESEL ENGINE.

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.		REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.	
			A	B				A	B
1	175007	PANEL-INSTRUMENT	1		20	147633	PROTECTOR-BATTERY	1	
1	17209	CAPSCREW-1/4 UNC X 3/8	6		21	164263	CABLE-BATTERY	1	
2	181332	SWITCH-IGNITION	1		22	17328	SENDER-TRANSMISSION TEMP.	1	
2	181333	KEY	1		23	101618	CABLE-GROUND	1	
3	163928	WIRE	1						
3	53123	FUSE-5 AMP	1		25	157065	BOOT-PROTECTOR	1	
4	169779	GAUGE-WATER TEMPERATURE	1						
5	87415	WIRE	1		27	.....	ALTERNATOR-COMES WITH ENGINE	1	
6	169759	GAUGE-OIL PRESSURE	1		28	77328	SENDER-WATER TEMPERATURE	1	
7	119379	HOUR METER	1		29	55983	SWITCH-PRESSURE	1	
8	169781	GAUGE-TRANSMISSION TEMP.	1		29	981878	SWITCH-HOUR METER	1	
9	85800	PLUG-BUTTON, LIGHT SWITCH	1						
10	169758	AMMETER	1		31	15002	NUT-NO. 10 UNF	1	
					31	169776	SENDER-PRESSURE	1	
					31	15916	LOCKWASHER-NO. 10	1	
12	177513	WIRE HARNESS			32	.....	STARTING MOTOR-COMES W/ENG.	1	
13	126380	CONNECTOR-VOLTAGE REG.	1		33	111766	BOOT-RUBBER	1	
13	134796	REGULATOR-VOLTAGE	1						
14	15054	CAPSCREW-1/4 UNC	2						
14	15154	LOCKWASHER-1/4	2		34	169461	WIRE HARNESS	1	
15	11095	LINK	4		35	126381	CONNECTOR	1	
15	129883	NUT	4		36	67654	PLUG-SPRAY SYSTEM BUTTON	1	
15	18515	WASHER-5/16	4		37	132853	WIRE	1	
15	16690	NUT-WING, 5/16	4						
16	111770	PROTECTOR-BATTERY	1						
17	74325	BATTERY	2						
18	74751	HOLD DOWN-BATTERY	2						
19	164264	CABLE-BATTERY	1						

# Section G


## TRANSMISSION POWER TRAIN

### INDEX

CLUTCHPACK-TRANSMISSION . . . . .	G3
CONTROLS-FORWARD AND REVERSE . . . . .	G7
CONTROL VALVE . . . . .	G2
DRIVE PLATE AND TORQUE CONVERTER HOUSING (Diesel).....	G11
FILTER-TRANSMISSION . . . . .	G5
FINAL DRIVE . . . . .	G9
TRANSMISSION CASE AND REGULATOR.....	G4
REAR WHEELS . . . . .	G8
TORQUE CONVERTER . . . . .	G1
TRANSFER DRIVE . . . . .	G6
TRANSMISSION . . . . .	G1-G4
TRANSFER DRIVE SHAFT . . . . .	G10



## TRANSMISSION

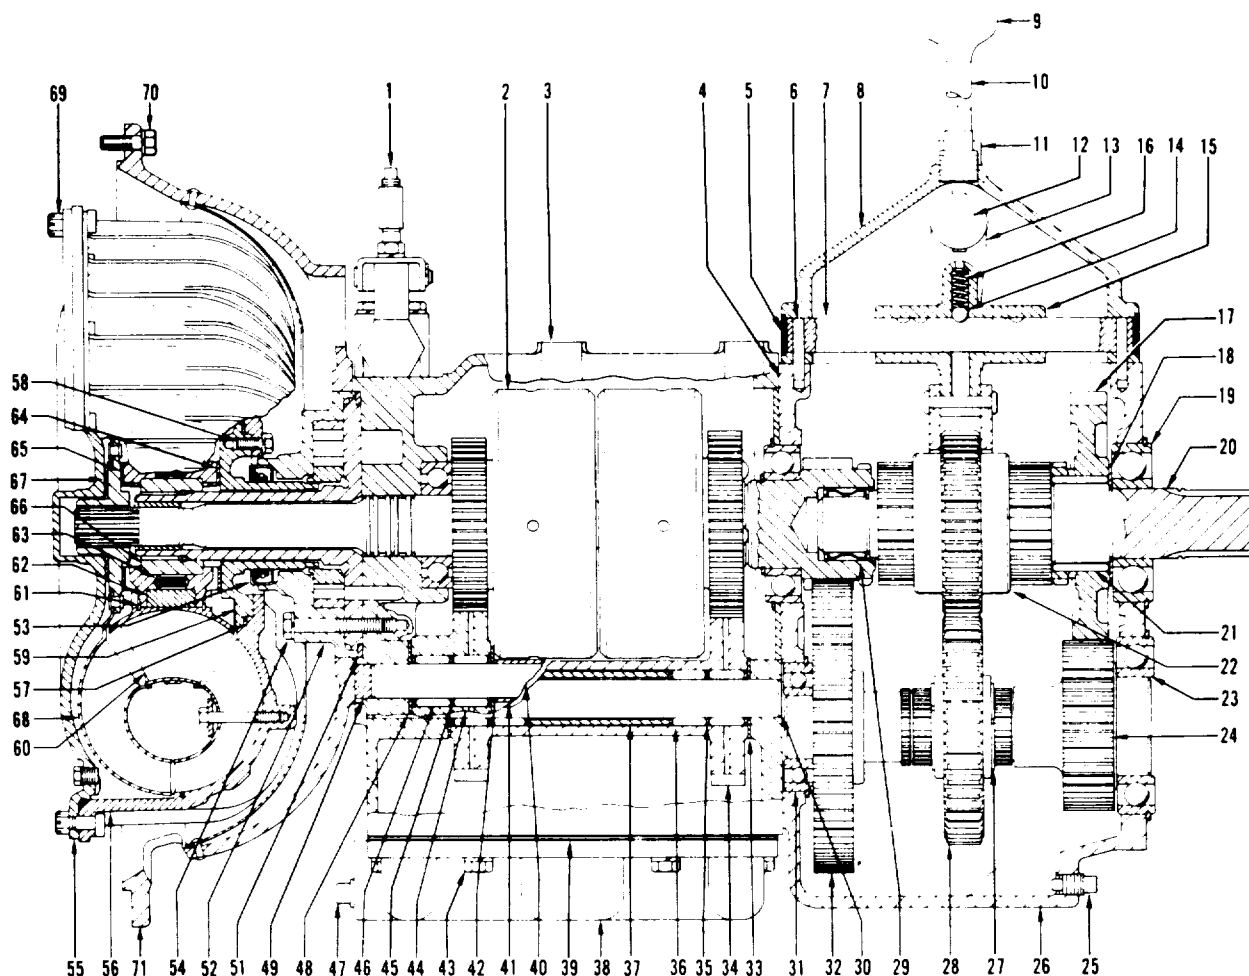


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY
	393303	TRANSMISSION	1	15	162853	FORK	1
1	.....	VALVE-CONTROL, SEE PAGE G2	1	16	162854	SPRING-DETENT	1
2	.....	SHAFT AND CLUTCH PASKS - SEE PAGE G3	1	17	162845	GEAR-FIRST, MAIN SHAFT	1
3	.....	FORWARD AND REVERSE CASE AND REGULATOR - SEE PAGE G4	1	18	162846	WASHER-FIRST GEAR	1
4	162859	GASKET-TRANSMISSION CASES	1	19	124682	BEARING-MAIN SHAFT OUTPUT	1
5	162855	PLUG-EXPANSION	3	21	263371	SHAFT-MAIN	1
6	91527	ROLL PIN - 1/4 X 1 3/8	2	21	162844	BEARING-MAIN SHAFT FIRST GEAR	39
7	162852	RAIL-SHIFT	1	22	263372	GEAR-SECOND, MAIN SHAFT	1
8	162848	CAP	1	23	124744	BEARING-COUNTER SHAFT REAR	1
8	162857	GASKET-CAP	1	24	162839	GEAR-FIRST, COUNTER SHAFT	1
8	162849	SEAL-OIL	1	25	17116	PLUG-DRAIN, 1/4 NPT MAGNETIC	1
8	16805	CAPSCREW - 3/8 UNC X 1 H.T.	4	26	162838	CASE-3-SPD, TRANSMISSION	1
8	15156	LOCKWASHER - 3/8	4	27	58941	SNAP RING	2
9	175212	KNOB-HANDLEVER	1	28	162840	GEAR-SECOND, COUNTER SHAFT	1
10	162856	HANDLEVER	1	29	162847	BEARING-PILOT	1
10	16815	CAPSCREW - 3/8 UNC X 1 1/2 H.T.	1	30	162797	SHAFT-COUNTER	1
10	15156	LOCKWASHER - 3/8	1	31	124635	BEARING-COUNTER SHAFT FRONT	1
11	15315	PLUG-PIPS, 1/2 NPT	1	32	162841	GEAR-DRIVEN, COUNTER SHAFT	1
12	177590	PIN-CLEVIS	1	33	162796	WASHER-THRUST, DRIVEN GEAR	2
12	162851	SHAFT-LEVER	1	34	162792	GEAR-COUNTER SHAFT	1
12	15201	PIN-COTTER	1	35	162795	WASHER-COUNTER SHAFT GEAR BRG	6
13	162850	LEVER-INSIDE	1	36	162794	BEARING-ROLLER	68
13	53171	ROLL PIN - 3/8 X 1	1	37	162793	SPACER-COUNTER SHAFT GEAR	1
14	21278	BALL-DETENT, 3/8 DIA.	1	38	162803	SUMP OIL	1

## TRANSMISSION


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY
39	162804	GASKET-OIL SUMP	2	57	159818	RING-SEAL	1
39	162805	SCREEN-OIL SUMP	1	58	150085	CAPSCREW	8
40	162800	SHAFT-IDLER GEAR	1	58	15154	LOCKWASHER-1/4	8
41	162801	TUBE-IDLER GEAR SPACER	1	59	159817	HUB-IMPELLER	1
42	162802	WASHER-IDLER GEAR REAR	1	60	147536	STATOR	4
43	16805	CAPSCREW - 3/8 UNC X 1 H.T.	8	61	150087	SNAP RING	2
43	15156	LOCKWASHER - 3/8	8	62	147537	RACE-OUTER	1
44	162798	GEAR-IDLER	1	63	147539	SPRAG	1
45	162799	WASHER-IDLER GEAR BEARING	3	64	159823	WASHER-IMPELLER THRUST	2
46	162794	BEARING-ROLLER	32	65	159820	WASHER-STATOR THRUST	2
47	15482	PLUG-DRAIN, 3/8 NPT MAGNETIC	1	66	147538	RACER-INNER	1
48	162796	WASHER-THRUST, IDLER GEAR	1	67	159821	WASHER-TURBINE THRUST, FWD	1
49	259145	CORK-IDLER GEAR SHAFT	2	68	159819	TURBINE	1
51	162937	GASKET-PUMP TO CASE	1	69	97927	BOLT-COVER	12
52	173323	PUMP-CONVERTER CHARGING	1	69	120212	LOCKNUT-COVER	18
53	163912	SEAL-OIL PUMP	1	69	Z .....	CAPSCREW - 5/16 UNF X 1 1/2	6
54	18509	CAPSCREW-5/16 UNC X 1 3/4 H.T.	2	70	Z .....	CAPSCREW	12
54	16835	CAPSCREW - 5/16 UNC X 2 H.T.	2	70	Z .....	LOCKWASHER	12
54	162938	WASHER-SEAL	4	71	162927	HOUSING-TORQUE CONVERTER, GAS ENGINE	1
55	158906	TORQUE CONVERTER	1				
55	159822	COVER-FRONT	1				
55	150088	PLUG DRAIN	1				
55	147543	GASKET-COVER TO IMPELLER	1				
56	159816	IMPELLER	1				

## TRANSMISSION CONTROL VALVE

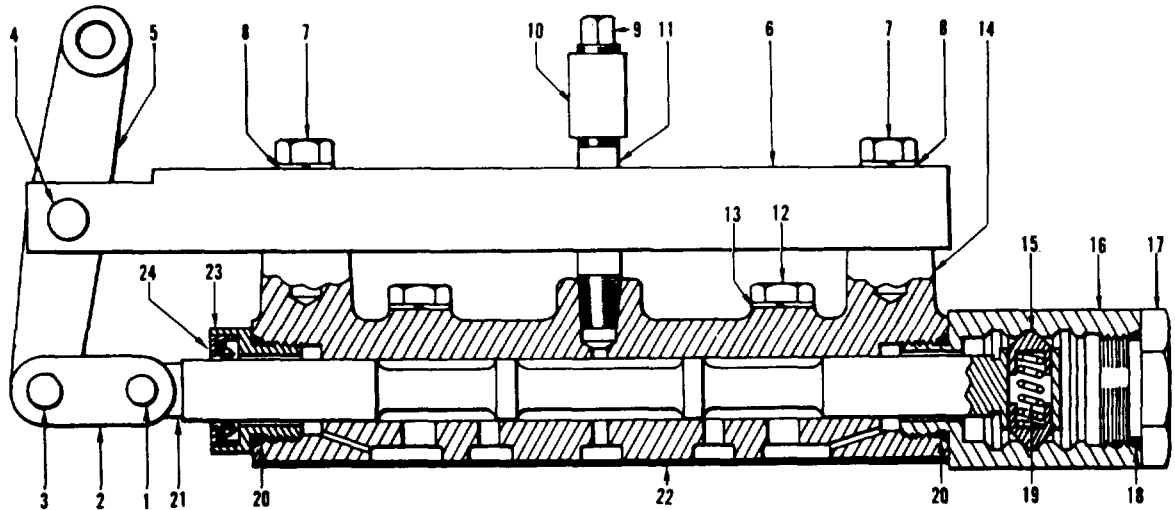


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY
1	162831	CONTROL-FORWARD AND REVERSE	1	11	12865	NIPPLE-PIPE, 1/8 NPT X 2	1
1	162837	PIN-CLEVIS	1	12	16835	CAPSCREW- 5/16 UNC X 2 H.T.	4
1	15200	COTTER - 1/16 X 1/2	1	13	15932	LOCKWASHER - 5/16	4
2	162835	LINK-CONNECTING	2	14	162821	BODY	1
3	162836	PIN-CLEVIS	1	15	162824	CUP-DETENT	2
3	15212	COTTER - 3/32 X 3/4	1	16	162822	BARREL	1
4	162834	PIN-CLEVIS	1	17	162826	CAP-VALVE	1
4	15212	COTTER - 3/32 X 3/4	1	18	95716	O-RING	1
5	162833	BELL CRANK	1	19	162825	SPRING-DETENT	1
6	162832	BRACKET	1	20	16485	O-RING	2
7	162572	CAPSCREW - 3/8 UNC X 3/4 H.T.	2	21	162823	VALVE	1
8	15156	LOCKWASHER - 3/8	2	22	162830	GASKET	1
9	162820	VALVE-CONTROL	1	23	162828	CAP-VALVE SEAL	1
9	15306	PLUG - 1/8 NPT	1	24	162829	SEAL-OIL	1
10	259147	COUPLING	1				

## CLUTCH PACK

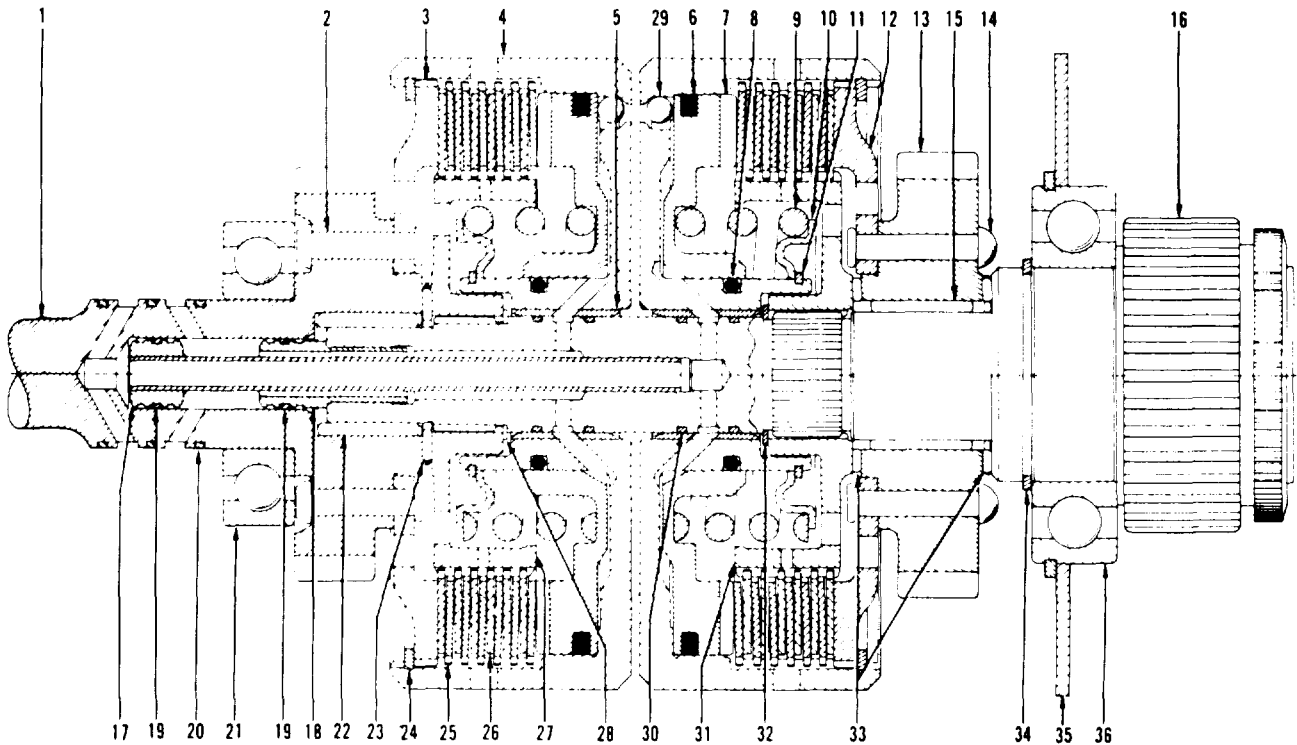

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY
	167334	PACK-CLUTCH	1	17	.....	TUBE-OIL	1
1	162720	SHAFT-INPUT	1	18	.....	SLEEVE-OIL	1
1	.....	SHAFT-INPUT	1	19	162717	SEAL-RING, TUBE & SLEEVE	2
2	.....	RIVET-PLATE TO SHAFT	8	20	162790	SEAL-RING, INPUT SHAFT	3
3	.....	PLATE-CLUTCH DRIVE	1	21	162789	BEARING-FRONT BALL	1
4	162721	CYLINDER-CLUTCH	2	22	162788	BEARING-OUTPUT SHAFT PILOT	1
5	162723	BUSHING-CYLINDER TO SHAFT	1	23	162787	BEARING-FRONT CLUTCH THRUST	1
6	162779	SEAL-PISTON OUTER	2	24	162785	SNAP RING-CLUTCH PACK RETAIN.	2
7	162778	PISTON-CLUTCH	2	25	242147	PLATE-SEPARATOR	12
8	55287	SEAL-PISTON INNER O-RING	2	26	162784	PLATE-CLUTCH	12
9	162780	SPRING-CLUTCH	2	27	162786	HUB-FRONT CLUTCH	1
10	162781	RETAINER-CLUTCH SPRING	2	28	58937	SNAP RING-FRONT HUB RETAINING	1
11	58906	SNAP RING	2	29	61141	BALL-1/4 DIA.	2
				30	162716	SEAL RING-CYL. BUSH. TO SHAFT	4
12	162933	GEAR-OUTPUT	1	31	162934	HUB-REAR CLUTCH	1
12	.....	PLATE-CLUTCH DRIVE	1	32	125606	SNAP RING-REAR HUB RETAINING	1
13	.....	GEAR-OUTPUT	1				
14	.....	RIVET-PLATE TO GEAR	8	33	162931	BEARING-THRUST, OUTPUT GEAR	2
15	162932	BEARING-GEAR TO SHAFT	1	34	12944	SNAP RING-REAR BRG. RETAINING	1
16	167335	SHAFT-OUTPUT	1	35	162701	RING-OUTPUT SHAFT CENTERING	1
16	.....	SHAFT-OUTPUT	1	36	128462	BEARING-REAR BALL	1


## TRANSMISSION CASE AND REGULATORS

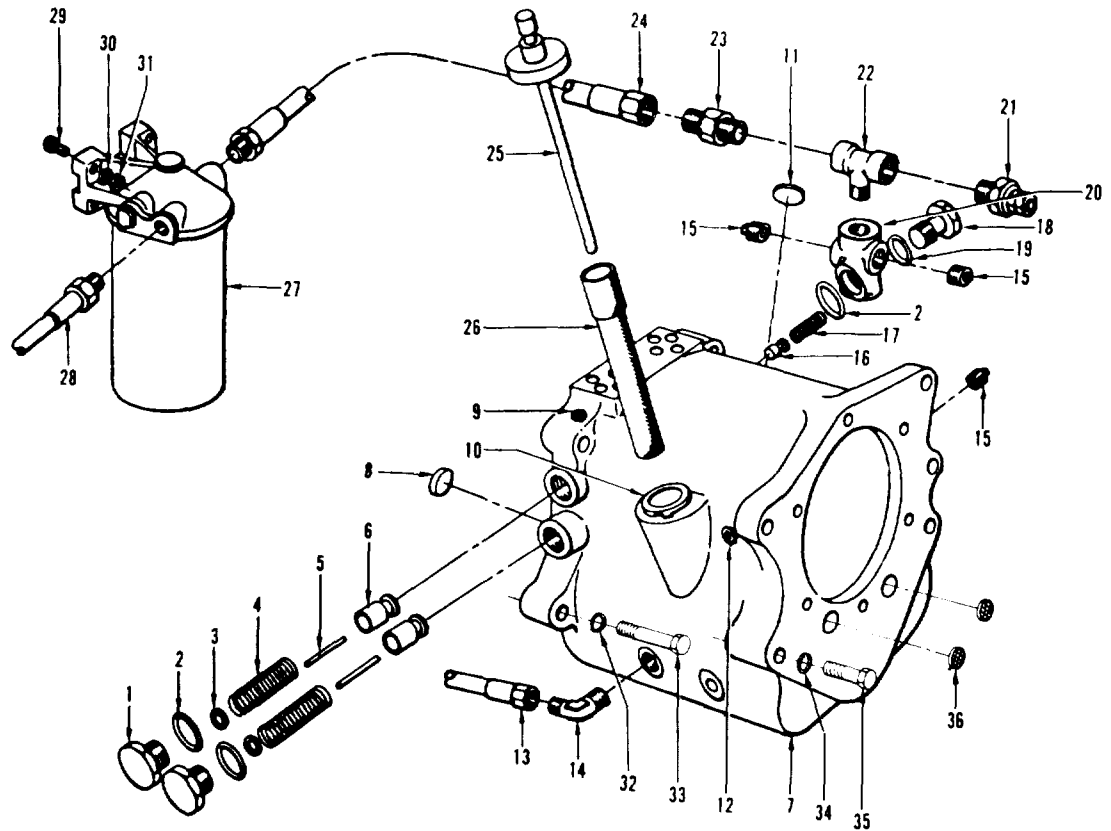

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY
1	162811	CAP-REGULATOR VALVE	2
2	60836	O-RING	3
3	242145	WASHER	AR
4	162808	SPRING	2
5	242144	PIN	2
6	162806	VALVE-REGULATOR	2
7	242143	CASE-FORWARD AND REVERSE TRANS.	1
7	15314	PLUG-PIPE	1
8	162709	PLUG	1
9	162708	PLUG	1
10	262751	NECK-FILLER PLUG	1
11	162710	PLUG	1
12	15347	PLUG	2
13	.....	HOSE-RADIATOR TO SUMP SEE PG. C3	1
13	181089		1
13	140660	CLAMP	1
13	16805	CLAMP	1
14	17096	CAPSCREW 3/8 UNC X 1	1
15	15307	ELBOW-45 DEGREE	3
16	162812	PLUG	1
17	242146	VALVE-REGULATOR	1
18	162816	SPRING	1
19	95716	CAP-REGULATOR O-RING	1

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY
20	162814	BLOCK-REGULATOR VALVE	1
21	77328	SENDER-TRANS. OIL TEMPERATURE	1
22	17666	TEE	1
23	42681	CONNECTOR	1
24	263378	HOSE-TRANSMISSION TO FILTER	1
25	162819	FILLER CAP AND DIPSTICK	1
26	242148	SCREEN-OIL FILTER	1
27	.....	TRANSMISSION FILTER SEE PAGE G5	1
28	.....	HOSE-FILTER TO RAD. SEE PAGE C3	1
28	163904	CLAMP-RADIATOR TO SUMP HOSE	1
28	174005	CLAMP	1
29	16815	CAPSCREW-3/8 UNC X 1 1/2 H.T.	4
30	15156	LOCKWASHER - 3/8	5
31	15056	NUT - 3/8 UNC	5
32	15157	LOCKWASHER - 7/16	4
33	18561	CAPSCREW - 7/16 UNC X 2	4
34	15159	LOCKWASHER - 9/16	5
35	162858	BOLT	5
36	162860	PLUG-SCREEN	2

**TRANSMISSION OIL FILTER**

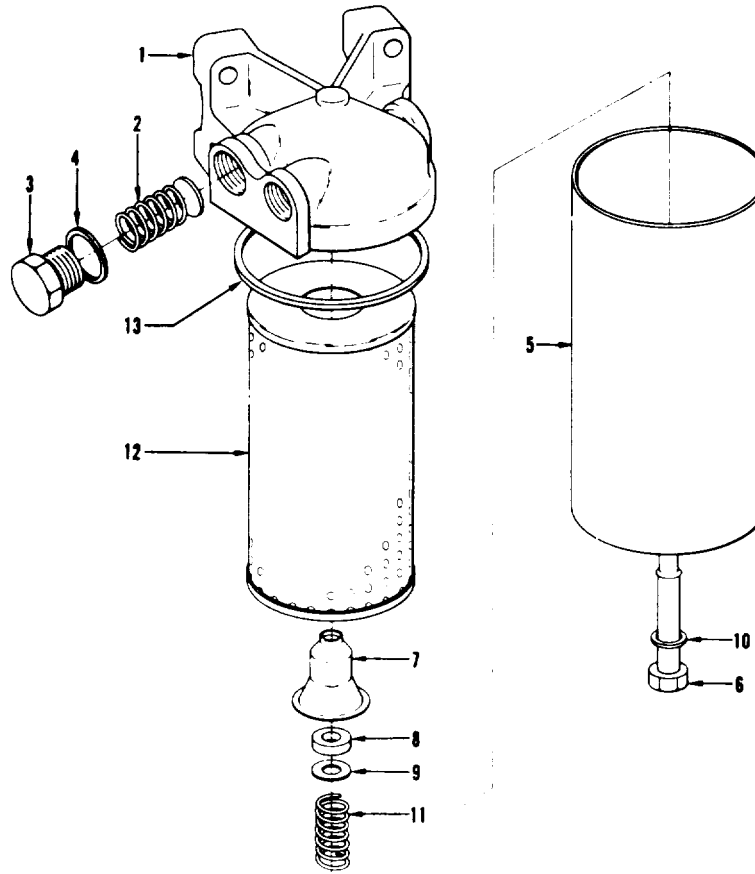


REF. NO.	HYSTER PART NO.	NAME OF PART				QTY
		1	2	3	4	
	155462	TRANSMISSION FILTER				2
1	156546	BASE				1
2	154547	BY-PASS VALVE				1
2	.....	SPRING				1
3	156548	PLUG				1
4	156549	GASKET				1
5	156778	SHELL AND STUD				1
5	156779	SHELL				1
6	.....	STUD				1
7	155089	RETAINER				1

REF. NO.	HYSTER PART NO.	NAME OF PART				QTY
		1	2	3	4	
8	.....	GASKET				1
9	.....	WASHER				1
10	.....	GASKET				1
11	155090	SPRING				1
12	155092	ELEMENT				1
13	155093	GASKET				1

NOTE- THIS PAGE IS ALSO THE SERVICE PARTS BREAK-DOWN FOR STEERING FILTER 155462.

## TRANSFER DRIVE

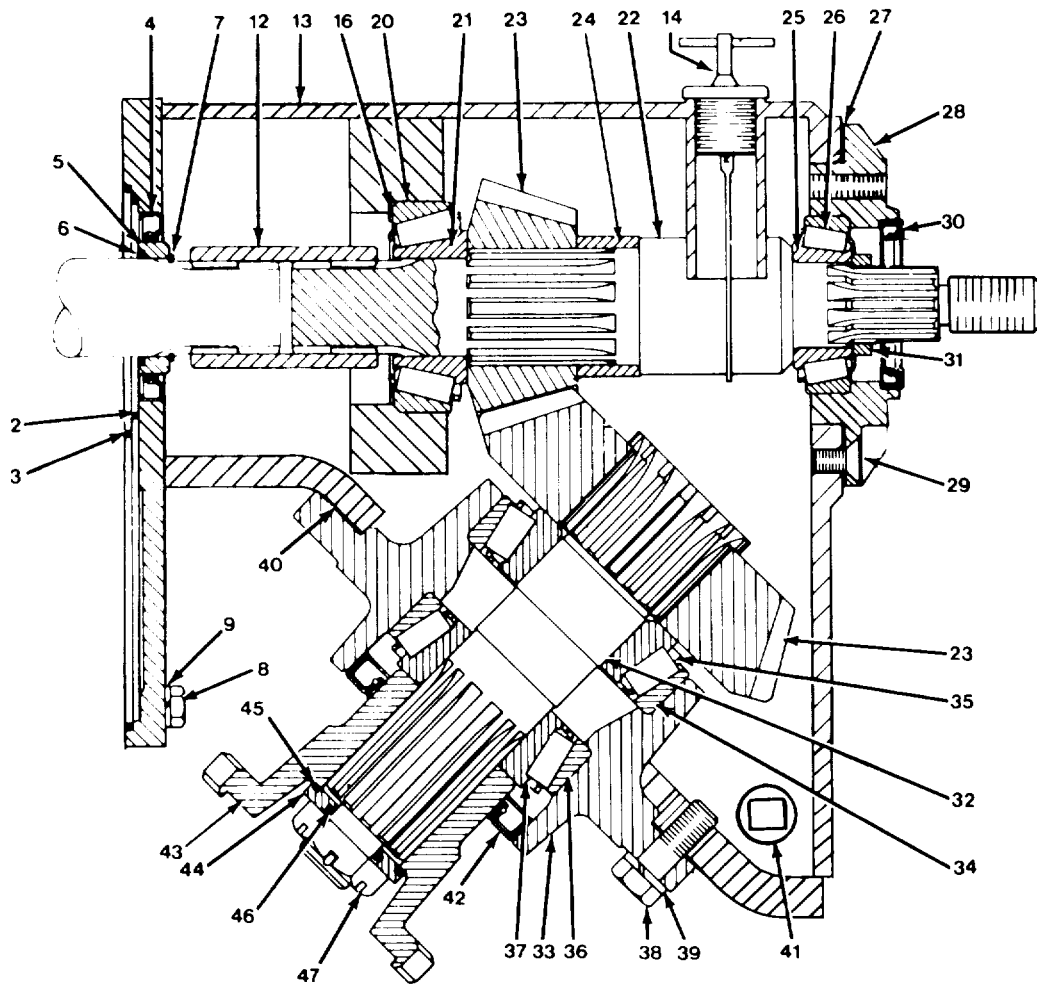


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY
		1 2 3 4	
2	15884	O-RING	1
3	15887	O-RING	1
4	155314	SEAL-OIL	1
5	155315	SPACER	1
6	57545	O-RING	1
7	12891	SNAP RING	1
8	16828	CAPSCREW-3/8 UNC X 1 1/4	2
9	15156	LOCKWASHER-3/8	2
10	18588	CAPSCREW-1/2 UNC X 1 1/2	4
11	15158	LOCKWASHER-1/2	4
12	390275	COUPLING	1
13	390047	HOUSING-TRANSFER	1
13	15305	PLUG-PIPE, 1 INCH	1
14	158647	DIPSTICK	1
16	390277	SHIM-.005	AR
16	390278	SHIM-.007	AR
20	30195	CUP-BEARING	1
21	155330	CONE-BEARING	1
22	155325	SHAFT	1
23	154625	GEAR SET	1
24	155326	SPACER	1
25	30283	CONE-BEARING	1
26	30282	CUP-BEARING	1
27	177603	SHIM-.005	AR

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY
		1 2 3 4	
27	177602	SHIM-.007	AR
27	177601	SHIM-.020	AR
28	390245	RETAINER-BEARING	1
29	138924	CAPSCREW-3/8 UNC X 7/8	2
29	16805	CAPSCREW-3/8 UNC X 1	7
29	15156	LOCKWASHER-3/8	7
30	44562	SEAL-OIL	1
31	155337	SPACER	1
32	391786	SHAFT	1
33	155341	RETAINER-BEARING	1
34	30068	CUP-BEARING	1
35	155344	CONE-BEARING	1
36	230351	CUP-BEARING	1
37	155345	CONE-BEARING	1
38	18588	CAPSCREW-1/2 UNC X 1 1/2	8
39	15158	LOCKWASHER-1/2	8
40	155348	SHIM-.005	AR
40	155349	SHIM-.007	AR
41	15302	PLUG-PIPE, 3/8	1
42	155346	SEAL-OIL	1
43	152862	YOKE	1
44	155350	WASHER	1
45	39360	O-RING	1
46	15863	O-RING	1
47	241665	NUT-SLOTTED	1
49	16201	PLUG-SOCKET HEAD	4




## FORWARD AND REVERSE CONTROL

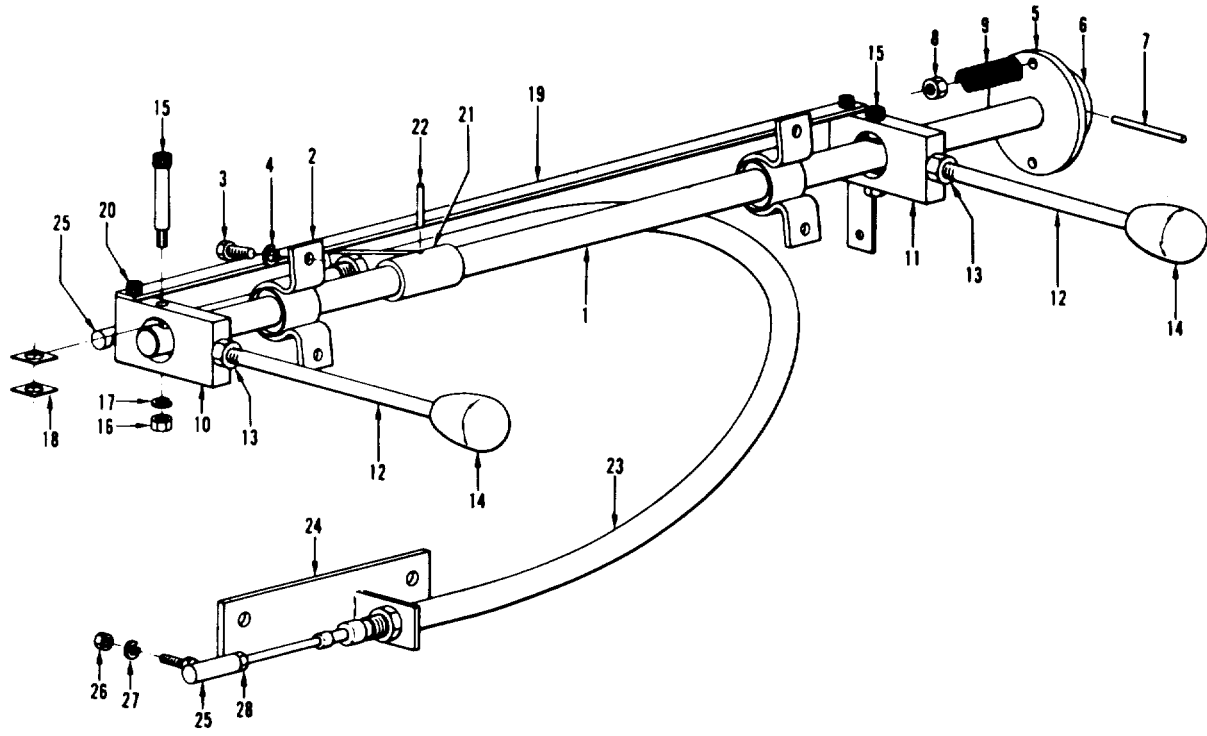

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY
1	157586	ROD	1
2	157596	BEARING-PILLOW BLOCK	2
3	16836	CAPSCREW-5/16 UNC X 3/4	4
4	15155	LOCKWASHER-5/16	4
5	157588	PLATE	1
6	157587	PLATE	1
7	19877	PIN-ROLL, 3/16 X 1 7/8	1
8	15054	NUT-1/4 UNC	1
9	177965	SPRING	1
10	157590	BLOCK-PIVOT	1
11	157589	BLOCK-PIVOT	1
12	157585	LEVER	2
13	15026	NUT-JAM, 3.8 UNF	2
14	66716	KNOB	2

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY
15	157592	BOLT-SHOULDER	2
16	15054	NUT-1/4 UNC	2
17	15154	LOCKWASHER-1/4	2
18	157623	SPACER	4
19	157595	LINK	1
20	85749	BOLT-SHOULDER	2
21	157599	BRACKET	1
22	19872	PIN-ROLL, 3/16 X 1 1/8	1
23	157598	CABLE	1
24	149055	BRACKET	1
25	139024	BALL JOINT	2
26	15004	NUT-1/4 UNF	1
27	15923	LOCKWASHER-1/4	2
28	15024	NUT-JAM, 1/4 UNF	2

## REAR WHEELS

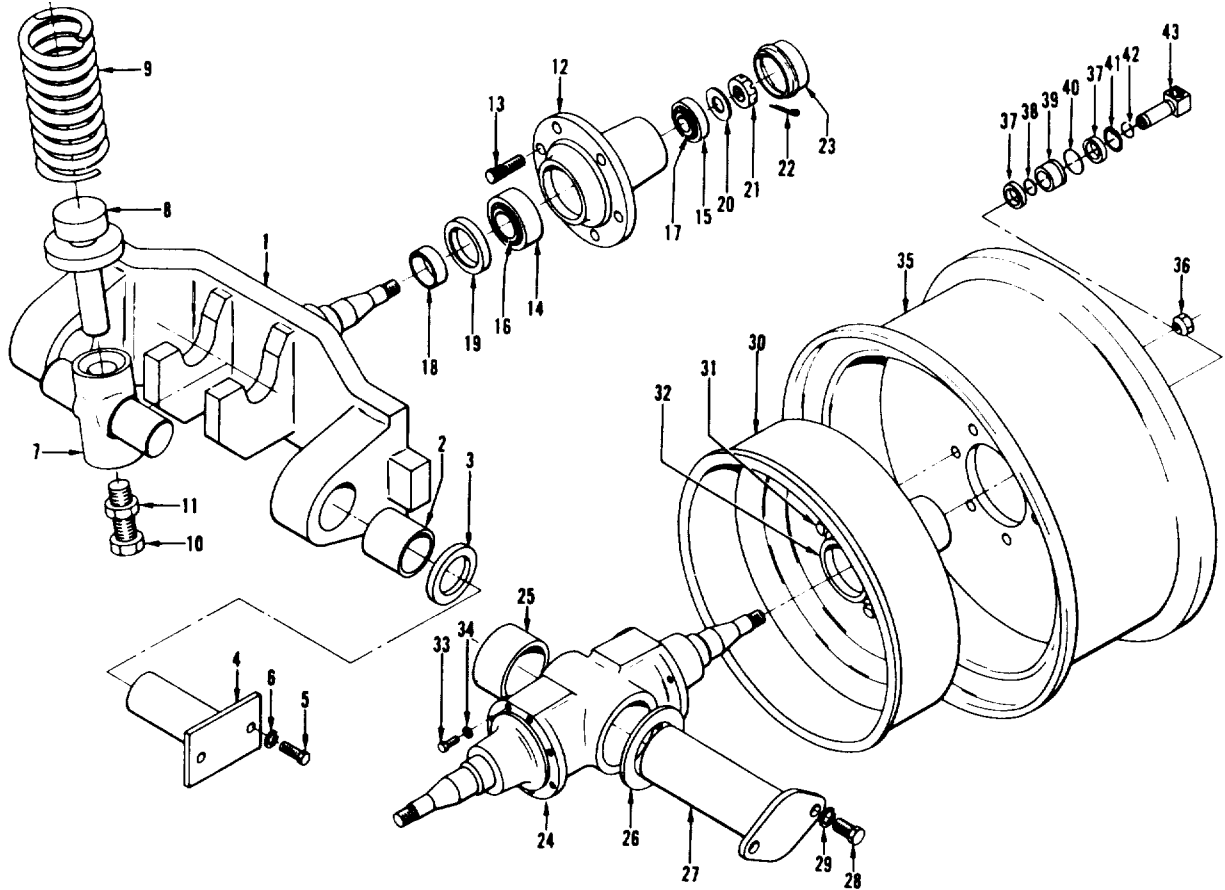


## KEY

B-FOR COMPACTORS WITH TIRE INFLATION SYSTEM.

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.	
				B
1	155389	BRACKET-WHEEL SUPPORT	1	
2	155395	BUSHING	2	
3	155396	WASHER	2	
4	155397	PIN	2	
5	16805	CAPSCREW-3/8 UNC X 1	4	
6	15156	LOCKWASHER-3/8	4	
7	169813	BLOCK-PIVOT	1	
8	155381	BRACKET-SPRING SUPPORT	1	
9	155380	SPRING	1	
10	155388	CAPSCREW-SPECIAL	1	
11	15021	NUT-JAM, 1 UNC	1	
12	155400	HUB	1	
13	15096	STUD	6	
14	163970	CUP-BEARING	1	
15	163971	CUP-BEARING	1	
16	30273	CONE-BEARING	5	
17	155401	CONE-BEARING	3	
17	174230	CONE-BEARING, OUTSIDE	2	
18	155402	SLEEVE-WEAR	5	
19	155403	SEAL-SLEEVE	5	
20	162087	WASHER-SPECIAL	5	
21	133861	NUT-1 UNS	3	
21	175191	NUT-HEX SLOTTED, OUTSIDE	2	
22	15226	COTTER-1/8 X 1 3/4	3	
22	175249	WIRE-NUT LOCK, OUTSIDE	2	
23	155404	CPA-GREASE	3	
23	171969	CAP-GREASE, OUTSIDE	2	

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.	
				B
24	171860	AXLE		2
25	155409	BUSHING		4
26	155410	WASHER		4
27	155406	PIN		2
28	16830	CAPSCREW-1/2 UNC X 1 1/4		4
29	15158	LOCKWASHER-1/2		4
30	.....	WHEEL BRAKE-SEE PAGE H2		4
30	159728	HUB AND DRUM		4
30	163980	DRUM		1
31	165065	HUB		1
31	164079	STUD		6
32	163970	CUP-BEARING, LARGE		1
32	163971	CUP-BEARING, SMALL		1
33	163180	CAPSCREW-7/16 UNC X 1		32
34	15157	LOCKWASHER-7/16 UNC		32
35	.....	WHEEL-SEE PAGE P4		5
36	155414	NUT-WHEEL		30
37	171863	BEARING		4
38	171865	O-RING		2
39	176177	BUSHING		2
40	39347	O-RING		2
41	182982	SNAP RING		2
42	54115	SNAP RING		4
43	171861	SHAFT		2

## FINAL DRIVE

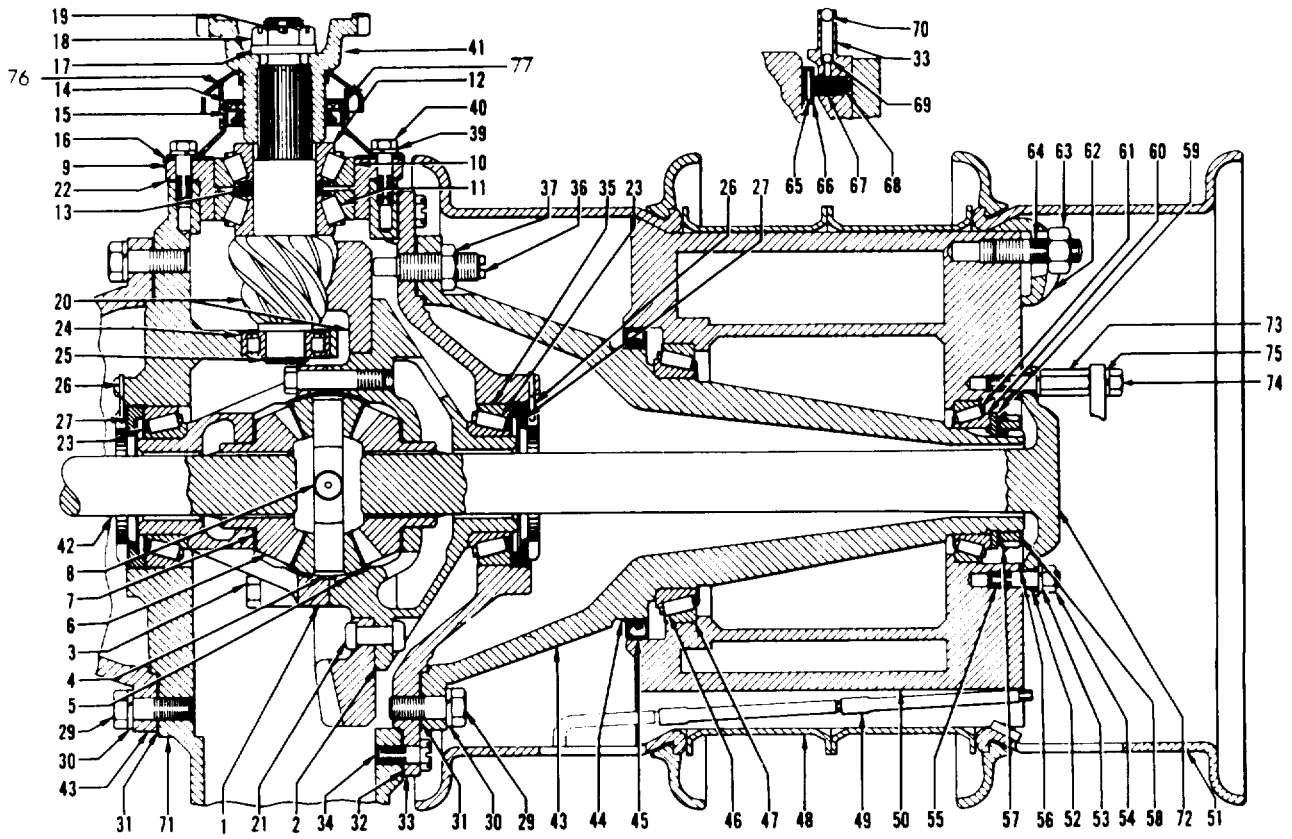


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY
	169541	DIFFERENTIAL AND CARRIER	1
1	163879	DIFFERENTIAL	1
1	162864	DIFFERENTIAL CASE	1
1	.....	CASE-DIFF., PLAIN HALF	1
2	.....	CASE-DIFF., FLANGE HALF	1
3	162865	CAPSCREW-SHORT	4
3	162866	CAPSCREW-LONG	8
4	234072	PINION-DIFFERENTIAL	4
5	234071	WASHER-THRUST	4
6	234067	SIDE-GEAR	2
7	234069	WASHER-THRUST	2
8	234066	SPIDER	1
9	177388	CAGE-PINION BEARING AND CUP	1
10	30175	CUP-BEARING	2
11	138076	CONE-PINION BEARING	1
12	162867	CONE-PINION BEARING	1
13	234048	SPACER-.219	AR
13	234049	SPACER-.220	AR
13	234050	SPACER-.221	AR
13	234051	SPACER-.222	AR
13	234052	SPACER-.223	AR
13	234053	SPACER-.224	AR
13	534054	SPACER-.230	AR
13	534055	SPACER-.236	AR
13	534056	SPACER-.242	AR
13	534058	SPACER-.248	AR
13	534059	SPACER-.254	AR
14	177386	COVER AND OIL SEAL	1
15	234047	SEAL-OIL	1
16	234764	GASKET-COVER	1
17	234045	WASHER	1
18	53849	NUT	1
19	15226	COTTER-DRIVE PINION	1

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY
20	165791	DRIVE GEAR AND PINION	1
21	53867	RIVET	12
22	177391	SHIM-.003	AR
22	177392	SHIM-.005	AR
22	177393	SHIM-.010	AR
23	30161	CONE	2
24	149684	BEARING-REAR	1
25	202908	RING-LOCK	1
26	86008	COTTER	2
27	234034	RING-ADJUSTING	2
29	16833	CAPSCREW-5/8 UNC X 1 3/4	24
30	15160	LOCKWASHER-5/8	24
31	155360	GASKET	2
32	155357	GASKET	1
33	159127	CARRIER-DIFFERENTIAL	1
34	56998	BOLT-1/2 UNC X 1 1/4	15
35	230413	CUP-BEARING	2
36	165932	SCREW	1
37	234036	NUT	1
39	15157	LOCKWASHER-7/16	8
40	18559	CAPSCREW-7/16 UNC X 1 3/4	8
41	159128	FLANGE	1
42	159131	SHAFT-AXLE, R.H.	1
43	159130	SPINDLE	2
44	155361	SLEEVE-WEAR	2
45	150194	SEAL	2
46	155369	BEARING-CONE	2
47	155370	CUP-BEARING	2
48	163938	SPACER-FOR 4 & 6 PLY TIRES	2
48	155374	SPACER-FOR 10, 12, 14 PLY TIRES	4
49	141721	EXTENSION-VALVE, OUTSIDE	2
49	49189	EXTENSION-VALVE, INSIDE	2

## FINAL DRIVE

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.
50	163936	HUB-FOR 4 & 6 PLY TIRES	2	65	160538	PIN-GROOVE	2
50	155362	HUB-FOR 10, 12, 14 PLY TIRES	2	66	160537	PLATE-SLIPPER	2
51	.....	RIM-SEE PAGE P4	4	67	160536	TUBE	2
52	155480	THIMBLE-TAPERED	16	60	160539	SPRING	2
53	15157	LOCKWASHER-7/16	16	69	61141	BALL	2
54	17159	NUT-7/16 UNF	12	70	149601	BALL	2
55	111805	STUD	16	71	.....	FRAME-SEE PAGE EI	1
56	1599940	O-RING	2	71	15316	PLUG	2
57	155888	LOCKWASHER-BEARING	2	72	21420	VENT-AIR	1
58	155889	NUT-LOCK. BEARING	2	72	159132	SHAFT-AXLE, L.H.	1
59	155328	WASHER-TONGUED	2	73	171877	NUT-LONG	4
60	230425	BEARING-CONE	2	74	18556	CAPSCREW-7/16 UNF X 7/8	4
61	230424	BEARING-CUP	2	75	15157	LOCKWASHER	4
62	155376	CLAMP-WEDGE	12	76	210092	COVER-DUST	1
63	1908	NUT	12	77	391862	GASKET	1
64	1906	STUD	12				


## TRANSFER DRIVE SHAFT

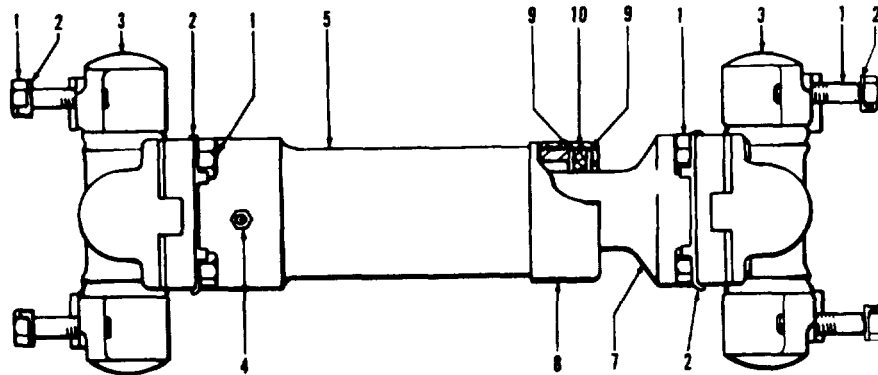

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.
	159133	SHAFT-TRANSFER DRIVE	1	5	163964	YOKE-SLIP	1
1	53038	CAPSCREW	16	5	53029	CUP-OUST	1
2	15039	PLATE-LOCK	8	7	163968	YOKE-STUB	1
3	163966	SPIDER AND BEARING	2	8	53030	RETAINER-FELT	1
3	163967	RETAINER AND SEAL	4	9	53032	WASHER-FELT RETAINING	1
3	16041	FITTING-GREASE	1	10	53031	WASHER-FELT	1
4	16001	FITTING-GREASE	1				

**DRIVE PLATE AND TORQUE CONVERTER HOUSING**

FOR DIESEL ENGINE

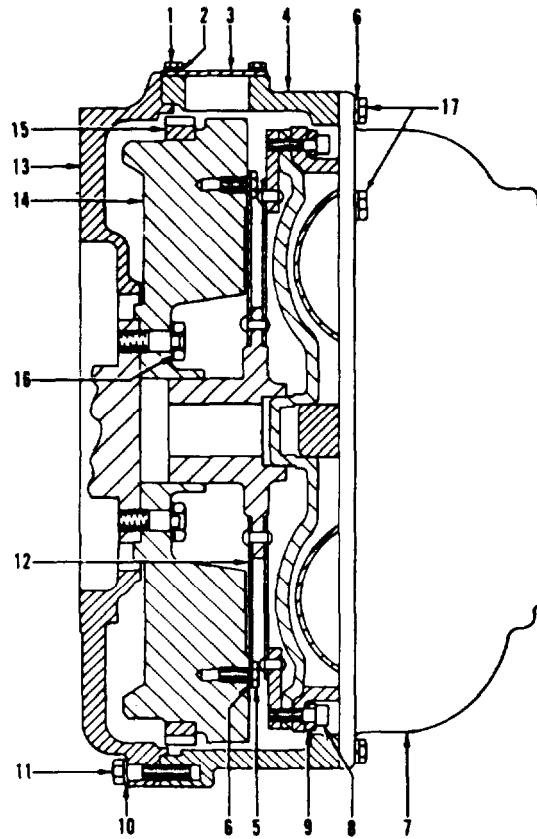

KEY

R-FOP 3-53 DIESEL ENGINE.

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
		1 2 3 4	B			1 2 3 4	B
5	16805	CAPSCREW-HT 3/8 UNC X 1	8				
6	15156	LOCKWASHER-3/8	20				
7	162927	HOUSING-TORQUE CONVERTER	1				
8	16313	CAPSCREW-5/16 UNF X 1 1/4	8				
9	164277	WASHER-HALF ROUND	8				
				17	16805	CAPSCREW-3/8 UNC X 1	12
11	16805	CAPSCREW-HT 3/8 UNC X 1	12				
12	164276	DRIVE PLATE	1				

# Section H


## BRAKES AND LINKAGE

### INDEX

BRAKE SYSTEM.....	H1
MASTER CYLINDER.....	H3
PARKING BRAKE.....	H4
PARKING BRAKE LEVER .....	H5
WHEEL BRAKE.....	H2
WHEEL CYLINDER.....	H2




**BRAKE SYSTEM**

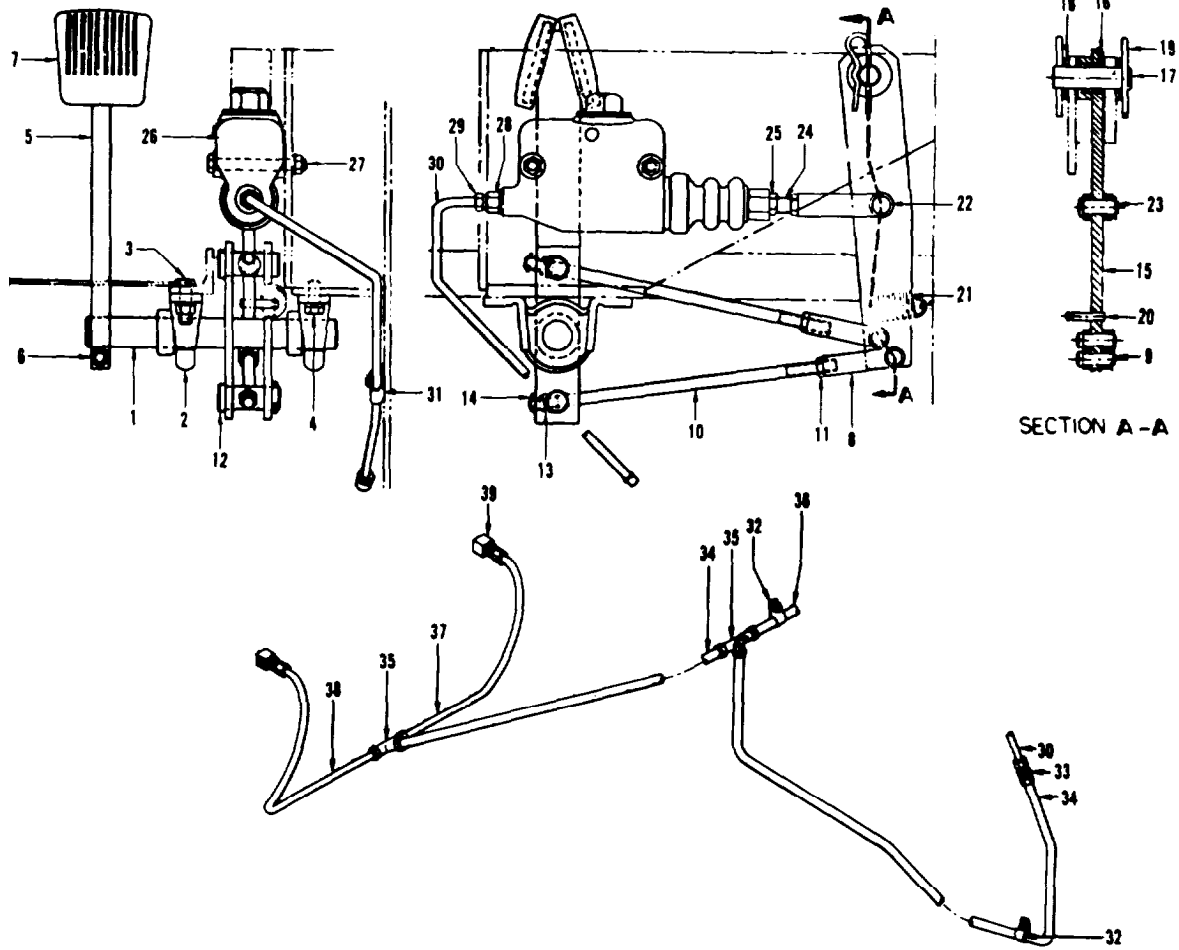

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	390055	CRANK	1
2	390058	BEARING-PILLOW BLOCK	2
3	16815	CAPSCREW-3/8 UNC x 1 1/2	2
3	15156	WASHER-3/8	7
3	15056	NUT-3/8 UNC	5
4	16828	CAPSCREW-3/8 UNC x 1 1/4	2
5	186204	PEDEL-BRAKE	1
6	16376	CAPSCREW-3/8 UNC x 2	1
7	114496	PAD-PEDAL	2
8	141	ROD END	2
9	142	PIN-ROD END	2
9	15212	PIN-3/32 x 3/4	2
10	390059	LINK	2
11	15056	NUT-3/8 UNF	2
12	390065	PIN	2
12	15234	PIN-5/32 X 1 1/4	2
13	139743	NUT-3/8 UNF	2
14	15222	PIN-1/8 x 3/4	2
15	390060	LEVER	1
16	61885	BUSHING	1
17	8022	PIN	1
18	15136	WASHER-3/4	2
19	18839	PIN	2
20	59819	PIN-GROOVE	1

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
21	112662	SPRING	1
22	149	ROD END	1
23	150	PIN-ROD END	1
23	15212	PIN-3/32 X 3/4	1
24	390062	LINK	1
25	15027	NUT-7/16 UNF	2
26	.....	CYLINDER-MASTER, SEE PACE H3	1
27	16741	CAPSCREW-3/8 UNC X 3 1/4	2
28	29467	GASKET	1
29	390063	ADAPTER	1
30	390064	TUBE	1
31	146432	CLAMP	1
31	15055	NUT-5/16 UNC	13
31	15155	WASHER-5/16	13
32	165120	CLAMP	12
33	14689	CONNECTOR	1
34	157617	HOSE	2
35	14558	TEE	3
36	157618	HOSE	1
37	157620	TUBE	2
38	157621	TUBE	2
39	157622	ELBOW	4


**BRAKES**

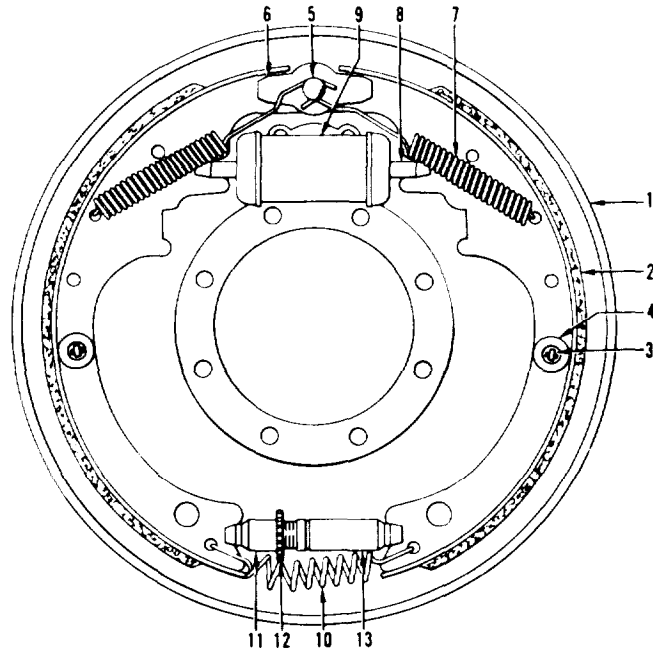

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
		1 2 3 4				1 2 3 4	
	163064	BRAKE-WHEEL, RIGHT HAND	2	5	15160	WASHER-5/8	1
	163065	BRAKE-WHEEL, LEFT HAND	2	5	157731	NUT-5/8 UNC	1
1	166316	BACKING PLATE	1	6	157772	PLATE-SHOE GUIDE	1
1	157774	COVER-ADJUSTING SCREW	1	7	38003	SPRING	2
2	162410	SHOE AND LINING	2	8	157735	LINK-WHEEL CYL. TO SHOE	2
2	* 162985	LINING SET	1	9	.....	WHEEL CYLINDER-SEE BELOW	1
3	54515	PIN-SHOE HOLD-DOWN	2	9	157732	SCREW AND LOCKWASHER	2
4	157773	CUP-SHOE HOLD-DOWN	4	10	38006	SPRING	1
4	38005	SPRING-SHOE HOLD DOWN	2	11	54912	SOCKET-ADJUSTING SCREW	1
5	54510	PIN-ANCHOR	1	12	38011	SCREW-ADJUSTING	1
5	157730	WASHER-SPECIAL	1	13	54916	NUT-PIVOT	1

\* INCLUDES LININGS AND RIVETS FOR FOUR SHOES.

**WHEEL CYLINDER**

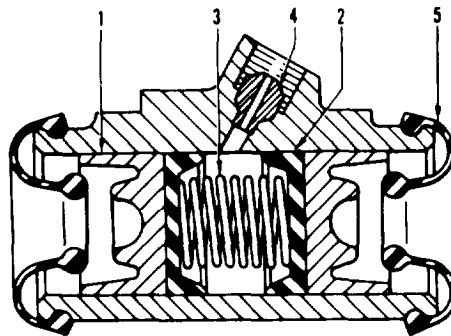


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
		1 2 3 4				1 2 3 4	
	157779	WHEEL CYLINDER-R.H.	1	5	* 157725	BOOT	2
	157718	WHEEL CYLINDER-L.H.	1		157722	SCREW-BLEEDER	1
1	157124	PISTON	2				
2	* 157720	CUP	2				
3	157721	SPRING	1				
4	157719	SEAT-TUBE	1				

\* INCLUDED IN WHEEL CYLINDER REPAIR KIT 157123.



**MASTER CYLINDER**

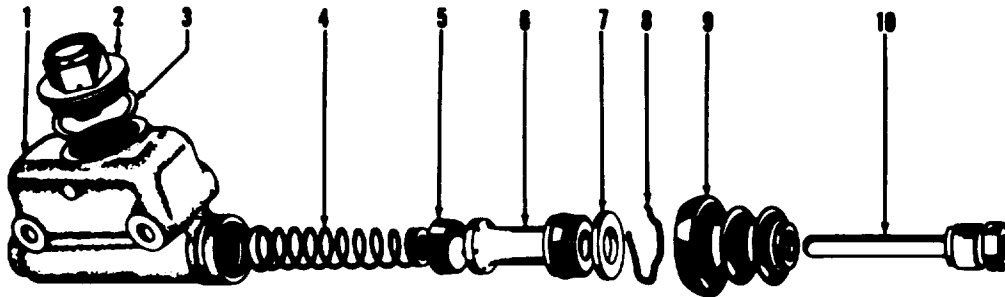


REF. No.	HYSTER PART NO.	NAME OF FART 1 2 3 4	QTY.
1	176442	MASTER CYLINDER	1
2	236213	PLUG-FILLER	1
3	● 54659	CASKET-FILLER PLUG	1
4	54573	SPRING	1
5	● 54574	CUP-PRIMARY	1
6	● 54575	PISTON	1

REF. NO.	HYSTER FART NO.	NAME OF FART 1 2 3 4	QTY.
7	54576	PLAT-STOP	1
8	● 54577	WIRE-LOCK	1
9	54579	BOOT	1
10	96231	ROD-PUSH	1

\*INCLUDED IN REPAIR KIT 54584.


PARKING BRAKE

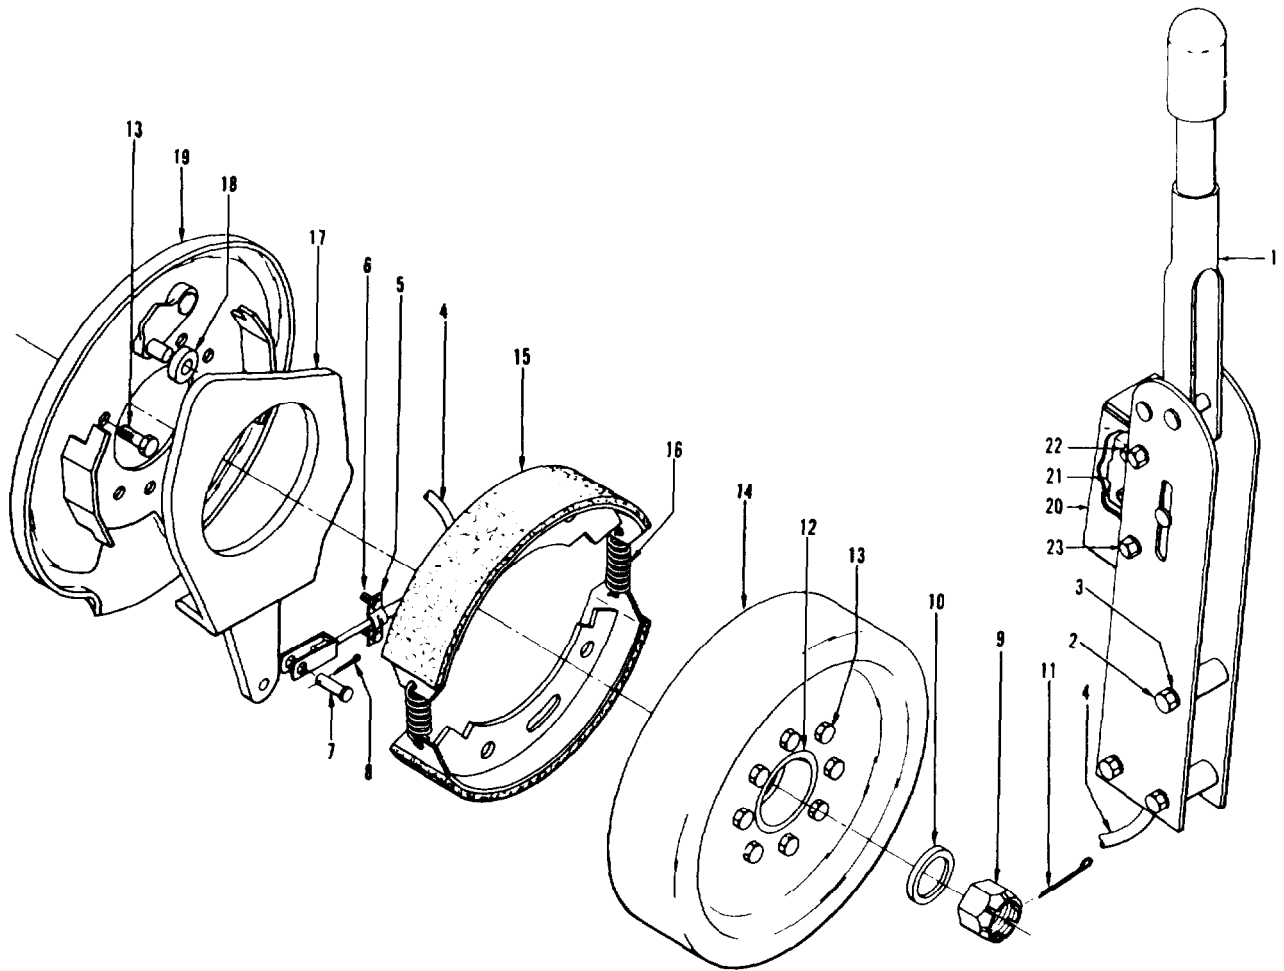

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1		HANDLE LEVER SEE PAGE H5	1
2	18510	CAPSCREW-5/16 UNF X 1 3/4	3
3	15155	LOCKWASHER-5/16	3
4	157603	CABLE	1
5	119879	CLAMP	1
6	16597	CAPSCREW-3/8 UNC x 3/4	2
5	15156	LOCKWASHER-3/8	2
7	142	PIN-ROD END	1
8	15212	COTTER	1
9	41184	NUT-SLOTTED, 7/8 UNF	1
10	109502	WASHER	1
11	15225	COTTER-L/B X 1 1/2	1
12	155338	HUB-BRAKE DRUM	1
13	18854	CAPSCREW-3/8 UNF X 5/8	14

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
14	119847 A	BRAKE	1
14	77720	DRUM	1
15	77716	SHOE AND LINING	2
16	77717	SPRING	2
17	71718	LEVER	1
18	77719	ROLLER	2
19	77685	BACKING PLATE	1
20	165786	COVER	1
21	139773	SWITCH-MICRO	1
22	16743	LOCKWASHER-#6	2
22	12425	NUT-#6 UNF	2
22	18815	SCREW-AC UNF X 1 1/4	2
23	15155	LOCKWASHER-5/16	2
23	17484	CAPSCREW-5/16 UNF 3/8	2

PARKING BRAKE LEVER

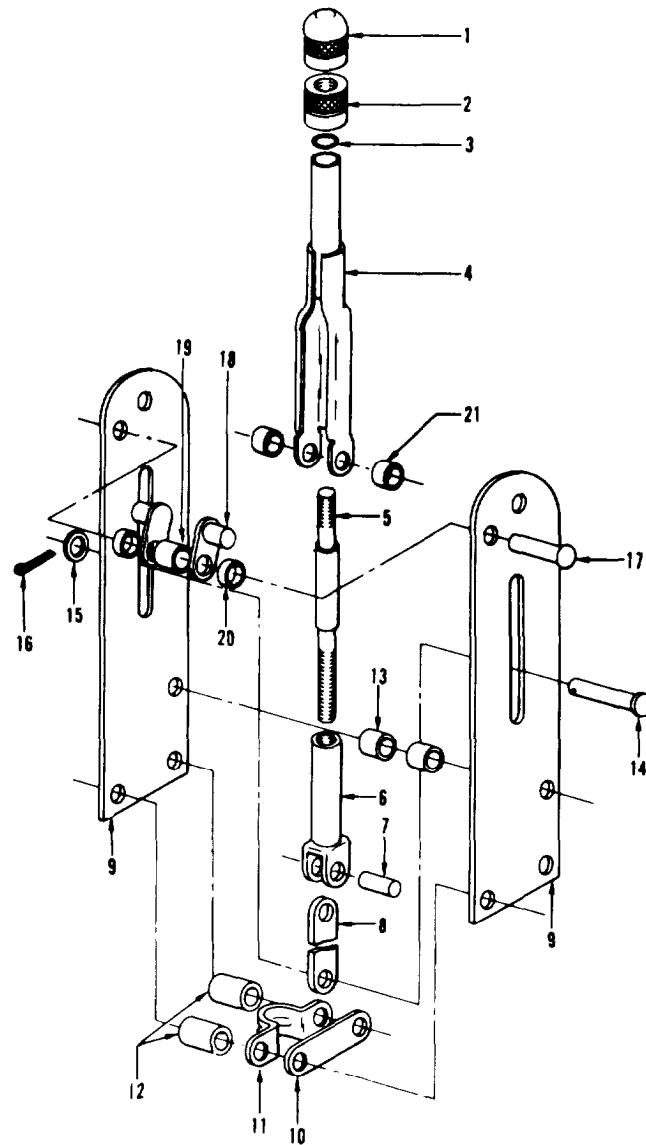

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
	85724	A PARKING BRAKE LEVER	1				
1	54867	KNOB-ADJUSTING, UPPER	1	11	121876	CLAMP	1
2	54868	KNOB-ADJUSTING, LOWER	1	12	127875	SPACER	2
3	54866	O-RING	1	13	127874	SPACER	2
4	54869	BODY	1	14	54861	PIN	1
4	54869	BOOY	1	1 5	18515	WASHER	1
6	54860	TUBE-ADJUSTING	1	15	18515	WASHER	1
7	54871	PIN	1	17	54872	RIVET	1
8	54863	LINK	1	18	77585	BRACKET-PIVOT	2
9	77584	BRACKET-MOUNTING	2	19	54865	SPACER	1
10	119878	SPACER	1	20	54873	SPACER	2
				21	54874	SPACER	2

# Section K


## STEERING AND LINKAGE

### INDEX

CONTROL-STEERING .....	K2
CYLINDER-STEERING .....	K3
FLOW DIVIDER (3-53 Diesel).....	K5
HORN .....	K4
PUMP-STEERING (3-53 Diesel) .....	K4
STEERING SYSTEM (3-53 Diesel) .....	K5




### STEERING CONTROL

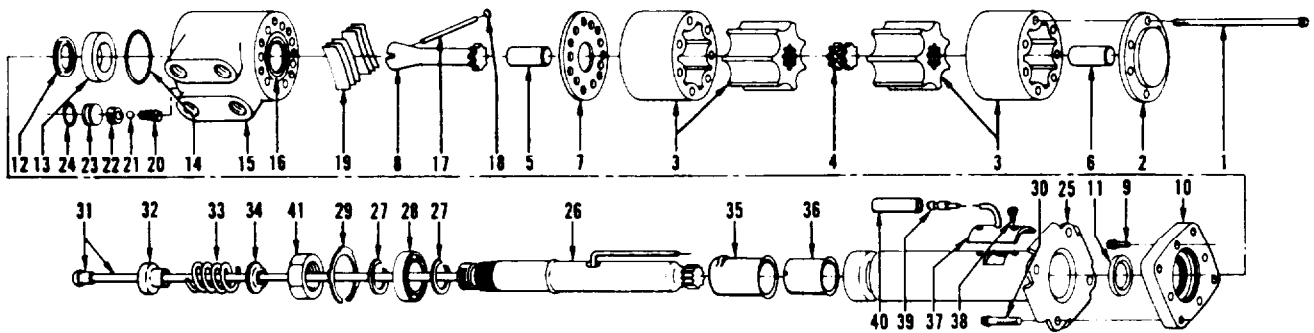

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
	163616	STEERING CONTROL	1	22	158843	SE AL-CHECK	1
	162552	CONTROL	1	23	158844	PLUG-SEAL	1
1	158826	CAPSCREW	1	24	* 158845	D-RING	1
2	158827	CAP-END	1	25	165316	STEERING COLUMN	1
3	158828	GEAR SET	2	25	165317	TUBE AND FLANGE	1
4	158829	SPLINE	1	26	165318	SHAFT	1
5	158830	SPACER	1	27	159764	SNAP RING	2
6	138907	SPACER	1	28	159703	BEARING	1
7	158831	PLATE	1	29	159701	RING-RETAINING	1
8	158832	ORIVE	1	30	159812	CAPSCREW-3/8 UNC X 3/4	2
9	138145	CAP SCREW	4	31	165201	TERMINAL & WIRE	1
10	158833	CAP-HOUSING	1	32	165202	ISULATOR-CONTACT	1
11	158834	SEAL-OIL	1	33	165203	SPRING-CONTACT	1
12	* 158835	SEAL-QUAD RING	1	34	165204	WASHER-CONTACT	1
13	158836	BUSHING-CAP LOCATER	1	35	165205	RING-CONTACT	1
14	* 158837	O-RING	1	36	165205	INSULATOR-CONTACT RING	1
15	158838	CONTROL PARTS	1	37	165207	HORN BRUSH	1
16	.....	SLEEVE AND SPOOL	1	38	141461	SCREW	1
16	158839	PIN-CENTERING	1	39	165314	TERMINAL-WIRE	1
18	158846	DISC-PIN	2	40	165313	CONNECTOR	1
19	158840	SPRING-CENTERING	6	41	161865	NUT-13/16 NEF	1
20	158841	SPRING	1				
21	158842	BALL-STEEL, 1/4	1				

\*INCLUDED IN SEAL KIT 158847.

## STEERING CYLINDER

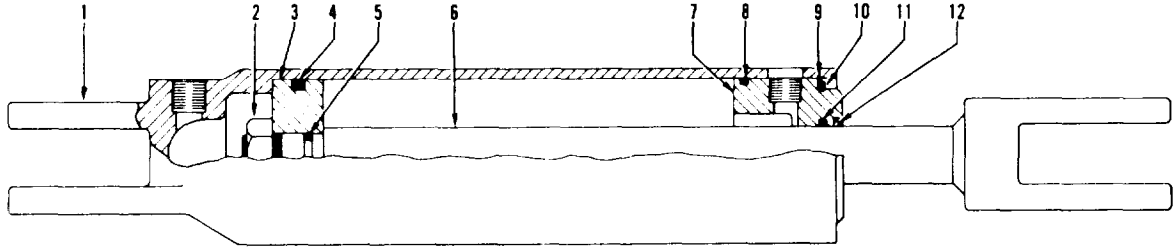


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
		1 2 3 4				1 2 3 4	
	155474	STEERING CYLINDER	1	8 *	55146	O-RING	1
1	156541	BODY	1	9	156538	SNAP RING	1
2	61206	NUT-PISTON	1	10	156537	SNAP RING	1
3	156542	PISTON	1	11 *	15865	O-RING	1
4 *	61393	O-RING	1	12 *	156545	RING-WIPER	1
5 *	1001154	O-RING	1				
6	156543	ROD	1				
7	156533	GLAND	1				

\* INCLUDED IN SEAL KIT 156544.

## STEERING PUMP

FOR 3-53 DIESEL ENGINE

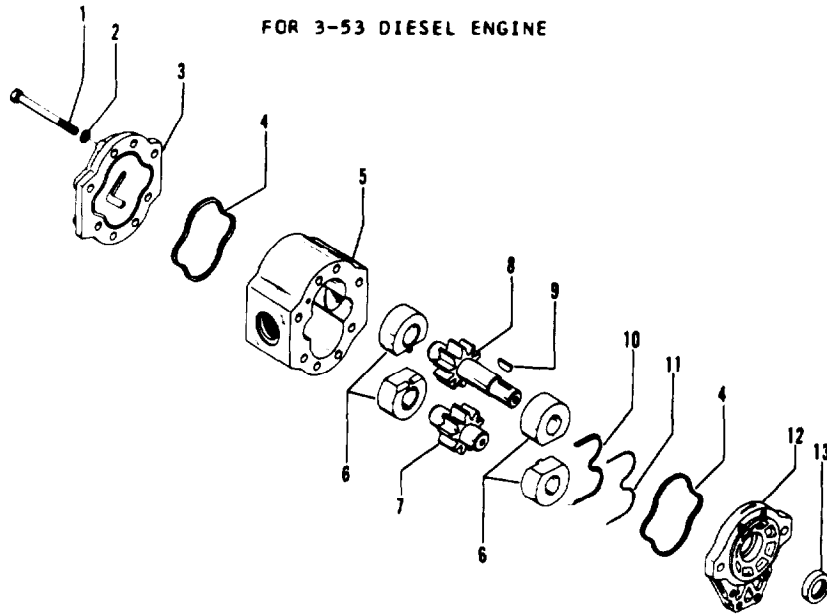


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
		1 2 3 4	
	* 169150	PUMP-STEERING	1
1	* 129446	CAPSCREW	6
2	129447	WASHER	6
3	170078	COVER-REAR	1
4	▢ 168941	GASKET-SEAL	2
4	168941	BODY	2
6	* 168947	BEARING	4
7	#	GEAR-DRIVEN	1
8	*	GEAR-DRIVE	1
9	206	KEY	1

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
		1 2 3 4	
10	▢ 155806	GASKET-SEAL	1
11	155807	SPACER	1
12	158908	COVER-FRONT	1
13	▢ 235933	SEAL-SHAFT	1
	129445	KIT-MAJOR	1
	129445	KIT-MINOR	1

} NOT ILLUSTRATED  
 \* INCLUDED IN MAJOR KIT.  
 ▢ INCLUDED IN MINOR KIT.  
 # INCLUDED IN GEAR KIT 129444.

## HORN

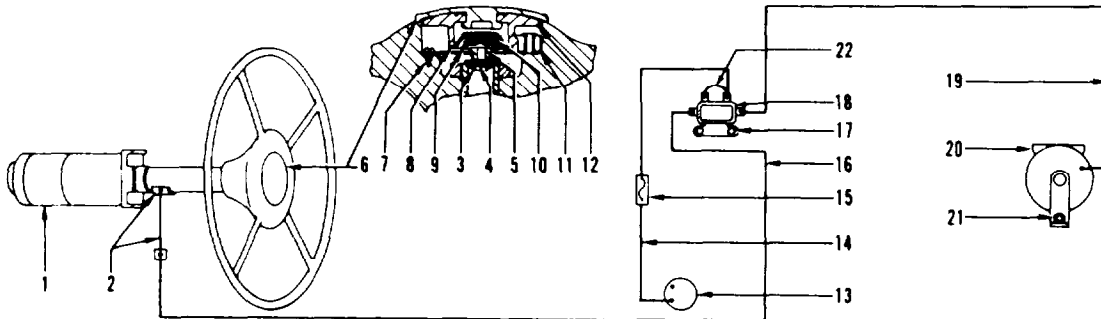


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
		1 2 3 4	
1	.....	CONTROL AND COLUMN	1
2	.....	BRUSH-HORN	1
3	.....	WASHER-CONTACT	1
4	.....	SPRING-CONTACT	1
5	.....	INSULATOR-CONTACT	1
6	163910	KIT-HORN BUTTON	1
6	166169	COVER-WEATHER	1
7	166174	SCREW	3
8	166171	CUP-CONTACT	1
9	166173	CAP-CONTACT	1
10	166172	SPRING	1
11	166175	PLATE-CASE	1
12	166170	BUTTON-HORN	1
13	.....	AMMETER	1

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
		1 2 3 4	
14	163657	WIRE	1
15	53124	FUSE-10 AMP	1
16	163661	WIRE	1
17	15054	NUT-1/4 UNC	2
17	15174	WASHER	2
18	132855	RELAY	1
19	163634	WIRE	1
20	126364	HORN	1
21	15055	NUT-5/16 UNC	1
21	15932	LOCKWASHER-5/16	1
22	143289	WIRE	1

\*SEE PAGE K3.

# STEERING SYSTEM

FOR 3-53 DIESEL

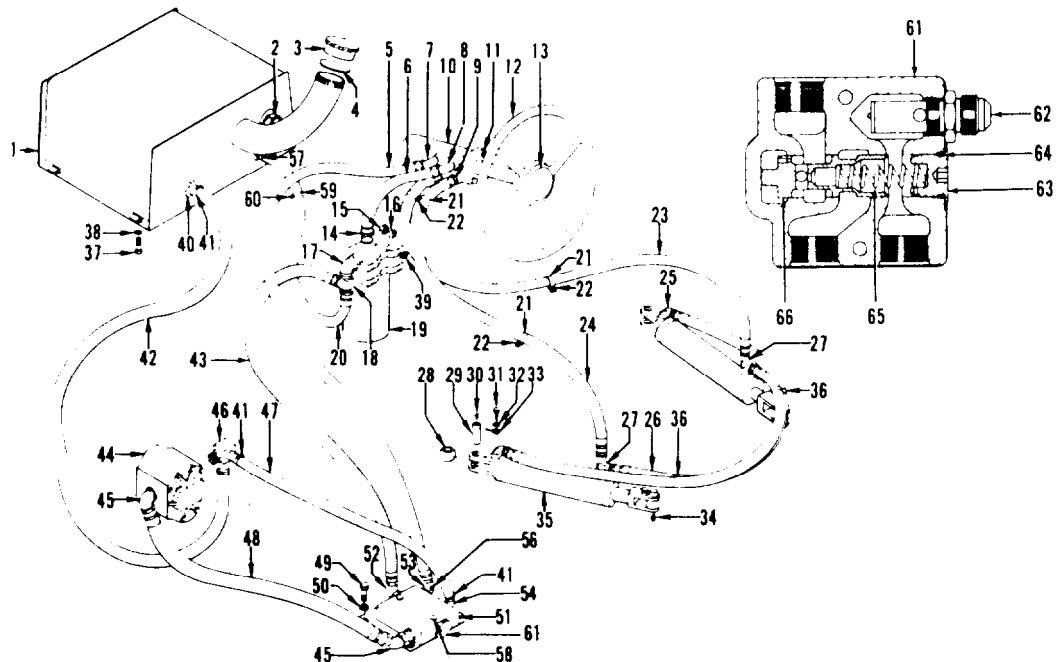

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	155333	TANK-HYDRAULIC	1	33	.....	CYLINDER-STEERING, SEE FACE K3	2
2	146073	VIEW GAUGE-LEVEL	1	36	137852	CLAMP-STRAP	2
3	164227	CAP-FILLER	1	37	16597	CAPSCREW-HT 3/8 UNC X 3/4	4
4	118742	GASKET-CAP	1	38	15156	LOCKWASHER-3/8	4
5	169452	HOSE-HYDRAULIC	1	39	15129	WASHER-7/16	4
6	96522	HOSE-HYDRAULIC	1	40	17585	NIPPLE	1
7	16559	ELBOW	1	41	130845	CLAMP	4
7	16586	LOCKNUT	1	42	174166	HOSE-HYDRAULIC	1
7	16484	O-RING	1	43	170548	HOSE-HYDRAULIC	1
8	170549	CONNECTOR	1	44	.....	PUMP-HYD.. SEE PAGE K4	1
9	16541	CONNECTOR	2	45	16561	EL BOW	2
9	16586	LOCKNUT	1	45	16588	LOCKNUT	1
9	16484	O-RING	1	45	16486	O-RING	1
10	163616	CONTROL-POWER STEERING	1	46	169450	FITTING-SPECIAL	1
11	16815	CAPSCREW-HT 3/8 UNC x 1 1/2	2	46	16589	LOCKNUT	1
11	15156	LOCKWASHER-3/8	2	46	16487	O-RING	1
12	155387	STEERING WHEEL	1	47	169451	HOSE-HYDRAULIC	1
12	161865	NUT	1	48	75382	HOSE-HYDRAULIC	1
13	155459	BUTTON-PLUG	1	49	15525	CAPSCREW-3/8 UNC X 3/4	4
14	17306	ELBOW	1	50	15156	LOCKWASHER-3/8	4
15	15056	NUT-3/8 UNC	4	51	169454	PLATE	1
16	15156	LOCKWASHER-3/8	4	52	16989	ELBOW	1
17	66885	ELBOW	1	53	145503	ELBOW	1
18	17063	TEE	1	53	16587	LOCKNUT	1
19	.....	FILTER-HYDRAULIC, SEE PAGE G5	1	53	16485	O-RING	1
20	164270	HOSE-HYDRAULIC	1	54	169453	NIPPLE-90 DEGREE	1
21	153069	CLAMP	4	54	16486	O-RING	1
22	15156	LOCKWASHER-3/8	4	56	15306	PLUG	1
22	15056	NUT-3/8 UNC	4	57	66885	ELBOW	1
23	155464	HOSE-HYD., RIGHT HAND	1	58	14673	CAPSCREW-1/4 UNC X 2 1/4	2
24	76230	HOSE-HYD., LEFT HAND	1	58	15154	LOCKWASHER-1/4	2
25	17306	ELBOW	2	58	15054	NUT-1/4 UNC	2
26	155487	HOSE-HYDRAULIC	2	59	140612	CLAMP	1
27	153488	TEE	2	60	15639	CAPSCREW-5/16 UNC X 1	1
27	16344	ADAPTER	2	60	15155	LOCKWASHER-5/16	1
28	155484	BUSHING	4	61	169128	FLOW DIVIDER	1
29	155485	PIN	4	61	.....	BODY	1
30	16018	FITTING-GREASE	2	62	161878	VALVE-RELIEF	1
31	97663	CAPSCREW	4	63	161873	CAP-END	1
32	15158	LOCKWASHER	4	64	161874	O-RING	1
33	155486	ANCHOR	4	65	187436	SPRING	1
34	16001	FITTING-GREASE	2	66	.....	PISTON	1





# Section P



## OPTIONAL EQUIPMENT

### INDEX

AIR COMPRESSOR .....	P7
AIR REGULATOR .....	P10
FILTER-WATER SPRAY SYSTEM.....	P4
GOVERNOR .....	P6
HEAT SHIELDS .....	P11
LIGHTING SYSTEM .....	P9
QUICK RELIEF VALVE .....	P10
ROTATING UNION .....	P8
TIRE AND WHEEL CHART .....	P4
TIRE INFLATION SYSTEM .....	P5
WATER SPRAY SYSTEM .....	P1



# WATER SPRAY SYSTEM

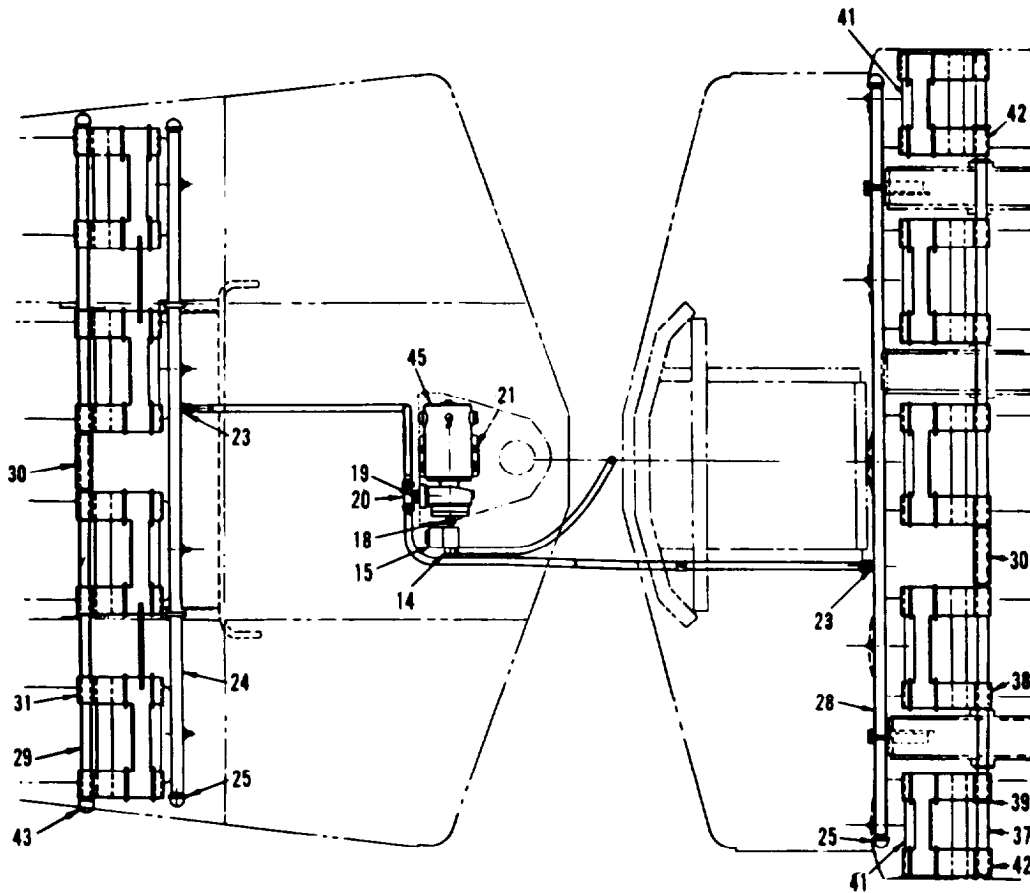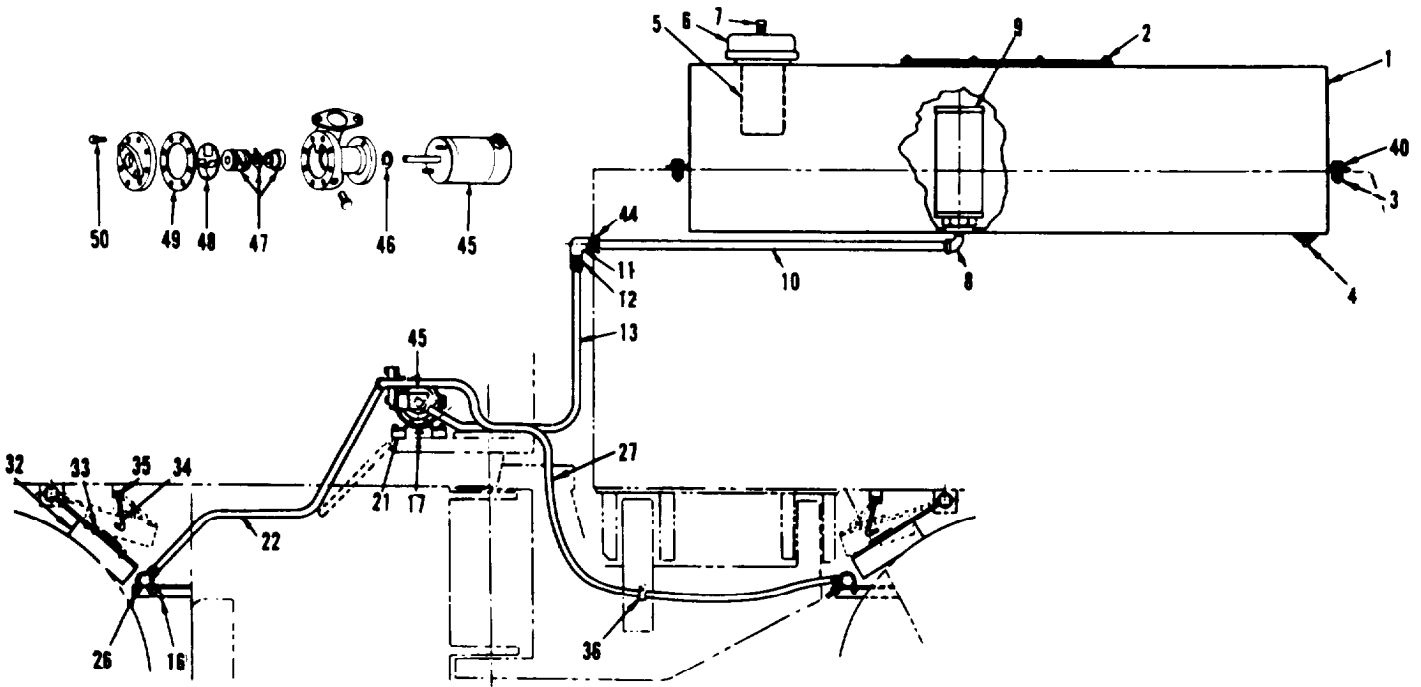

---

**WATER SPRAY SYSTEM**


---

REF. NO.	HYSTER PART NO.	NAME OF PART				QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART				QTY.
		1	2	3	4				1	2	3	4	
1	390038	TANK-WATER				1	25	199844	CAP-PIPE				4
2	172627	PLATE-COVER				1	26	199843	U-BOLT				9
2	172628	GASKET				1	27	153685	HOSE				1
2	156133	FLANGE NUT 3/8 UNC				10	28	203429	PIPE-MANIFOLD				1
3	16830	CAPSCREW-1/2 UNC X 1 1/4				4	29	164799	PIPE				1
3	15158	WASHER-1/2				4	30	157915	SPACER				2
3	15058	NUT-1/2 UNF				4	31	203426	BRACKET				2
4	15305	PLUG				1	32	157922	MAT				7
5	77527	STRAINER				1	33	89469	COTTER				36
6	87393	CAP				1	34	157923	HOOK				7
7	21420	PLUG-BREATHER				1	35	15200	PIN-1/16 x 1/2				7
8	15345	ELBOW				1	36	128408	CLAMP				1
9	199401	STRAINER-SUMP				1	36	15156	WASHER				1
10	203432	PIPE				1	36	15056	NUT-3/8 UNC				1
11	15448	ELBOW				1	37	169628	PIPE				1
12	17315	CONNECTOR				1	38	203427	BRACKET				3
13	99440	HOSE				1	39	9571	SET-COLLAR				4
14	14506	ELBOW				1	40	15135	WASHER-1/2				4
15	87565	SOLENOID				1	41	169625	MAT				2
16	199400	NOZZLE				9	42	203431	BRACKET				2
17	15329	DRAIN COCK				1	43	15463	CAP				2
18	17689	NIPPLE				1	44	94724	GROMMET				1
19	15357	BUSHING				1	45	184325	PUMP AND MOTOR				1
20	69241	TEE				1	45	196281	MOTOR				1
21	18465	CAPSCREW-1/4 UNC X 1				4	45	197861	CAP-BRUSH				2
21	15154	WASHER-1/4				12	45	197862	BRUSH AND SPRING				2
21	15127	WASHER-1/4				4	46	196431	SLINGER				1
21	184322	BLOCK SUPPORT				2	47	196284	SEAL				1
22	130326	HOSE				1	46	196283	IMPELLER				1
23	14674	CONNECTOR				2	49	196286	GASKET				1
24	203430	PIPE-MANIFOLD				1	50	196285	SCREW AND WASHER				8

---


**TIRE AND WHEEL CHART**

A-FOR DRIVE WHEELS.  
B-FOR REAR WHEELS.

DESCRIPTION 1 2 3 4	PLY RATING		QTY.	
	12 PLY		A	B
TIRE-750 x 15	156643		4 4	5 5
TUBE	155582		4 4	5 5
WHEEL-DRIVE	155375		4	.
WHEEL-REAR	a 174864 a 155416		.	5 3 2
RING-SIDE	157430 157430		.	5 4 5
RING-LOCK			.	5

a FOR TIRE INFLATION SYSTEM.

# TIRE INFLATION SYSTEM

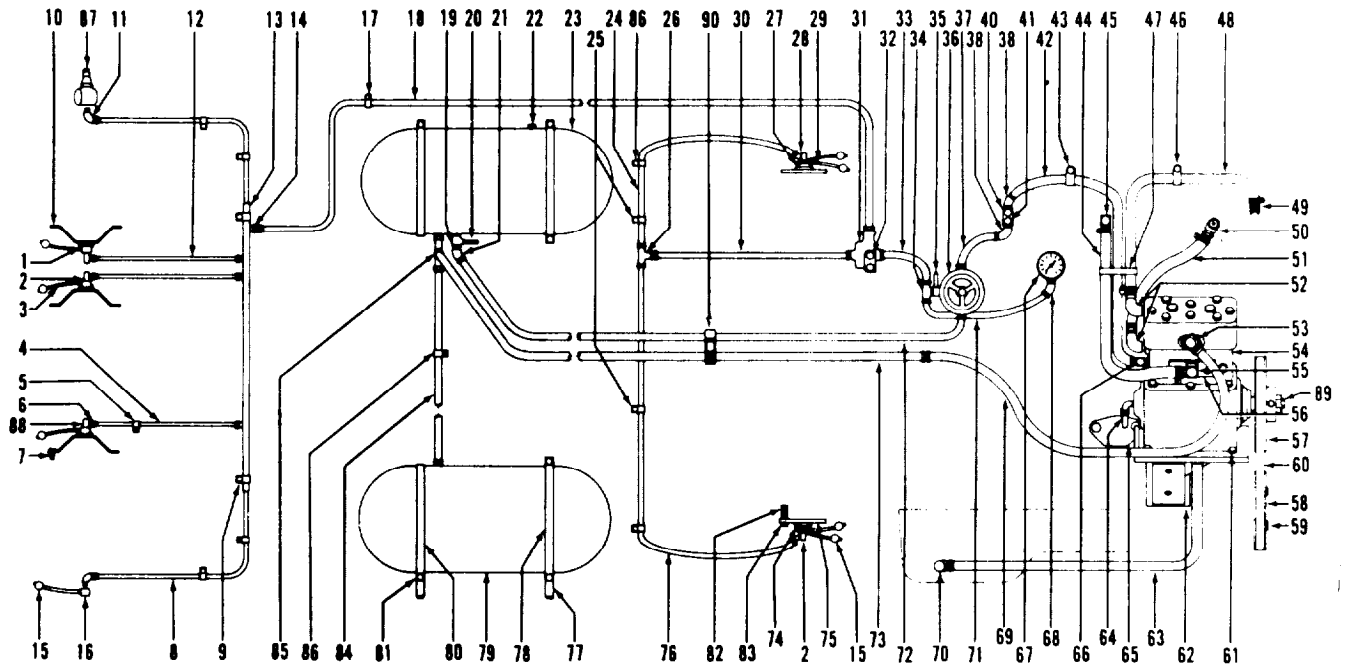


REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	15054	NUT-HEX, 1/4 UNC	6
1	15154	LOCKWASHER. 1/4	6
1	18341	CAPSCREW 1/4 UNC X 1	6
2	.....	ROTATING UNION-SEE PAGE P8	5
3	171981	HOSE	3
4	171975	HOSE	1
5	136516	CLAMP	5
6	14669	CONNECTOR	5
7	15056	NUT-3/8 UNC	6
7	15156	LOCKWASHER-3/8	6
8	171980	HOSE	2
9	144067	HOSE CLAMP	2
10	171871	BRACKET-REAR UNION	3
11	14501	ELBOW-37 DEGREE	2
12	171978	HOSE	2
13	175199	MANIFOLD-AIR	1
14	17315	CONNECTOR	1
15	85827	A PRESSURE HOLDING VALVE	9
16	171977	HOSE	2
17	101625	CLAMP	2
18	171972	HOSE	1
19	19535	TEE	1
19	17315	CONNECTOR	1
20	85803	SAFETY VALVE	1
21	17344	ELBOW-45 DEGREE	1
22	16123	DRAIN COCK-3/8 NPTF	2
23	391101	AIR TANK	1
24	171967	HOSE	1
25	136516	CLAMP	4
25	15056	NUT-HEX. 3/8 UNC	4
25	15156	LOCKWASHER-3/8	4
26	14558	TEE	1
27	17316	TEE	2
28	14539	ELBOW	2
29	171970	HOSE	4
30	171890	HOSE	1
31	.....	QUICK RELIEF VALVE-SEE PAGE P 10	1
31	14506	ELBOW-37 DEGREE	1

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
31	14501	ELBOW-37 DEGREE	1
32	15552	CAPSCREW-1/4 UNC X 3/4	2
32	15054	NUT-HEX, 1/4 UNC	2
32	15154	LOCKWASHER-1/4	2
33	174018	HOSE	1
34	17665	TEE	1
34	17315	FITTING-37 DEGREE	1
35	88482	SAFETY VALVE	1
36	.....	AIR PRESSURE REGULATOR- SEE P.P10	1
36	88460	TIRE PRESSURE PLATE	1
37	17319	FITTING-NUT & SLEEVE	1
37	171984	HOSE	1
37	16143	ELBOW	1
37	14590	TEE	1
37	17777	REDUCER	1
38	14500	ELBOW-37 DEGREE	2
40	.....	COVERNOR-SEE PAGE P6	1
41	15055	NUT-HEX, 5/16 UNC	2
41	15155	LOCKWASHER-5/16	2
41	18518	CAPSCREW-5/16 UNC X 3	2
42	176471	HOSE	1
43	136516	CLAMP	1
43	18536	CAPSCREW-3/8 UNF X 5/8	1
43	15156	LOCKWASHER 3/8	1
44	129727	HOSE	1
44	130845	CLAMP	6
45	125305	NIPPLE	1
46	153069	CLAMP	1
47	137852	CLAMP-STRAP	1
48	111509	HOSE	1
49	102919	NIPPLE	2
49	16116	FITTING	2
50	12840	TEE	1
50	12832	NIPPLE	1
51	78456	HOSE	1
51	102919	NIPPLE	1
52	102898	ELBOW	2

## TIRE INFLATION SYSTEM

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.
53	66885	ELBOW	1	70	17306	ELBOW	1
54	.....	COMPRESSOR-SEE PAGE P7	1	71	171888	HOSE	1
55	16155	NIPPLE	1	71	16168	FITTING	1
56	176048	MANIFOLD PLATE	1	72	171974	HOSE	1
56	18497	CAPSCREW-S/1b UNC X 1	2	73	181026	HOSE	1
56	15155	LOCKWASHER-5/16	2	74	15654	CAPSCREW-1/4 UNC X 5/8	4
57	176047	PULLEY-COMPRESSOR	1	74	15154	LOCKWASHER-1/4	4
58	175907	PULLEY-CRANKSHAFT	1	75	171876	BRACKET-UNION FRONT	2
59	15157	LOCKWASHER-7/16	4	76	171971	HOSE	1
59	16375	CAPSCREW-7/16 UNF 1 1/2	4	77	171882	BRACKET-TANK MOUNT	4
60	115911	V-BELT	1	77	15056	NUT-HEX, 3/8 UNC	10
61	17159	NUT-7/16 UNF	4	77	15156	LOCKWASHER-3/8	10
61	15157	LOCKWASHER-7/16	4	78	171880	BANDED TANK MOUNT	2
61	16375	CAPSCREW-7/16 UNF 1 1/2	4	79	391101		1
62	176049	BRACKET-COMP. MOUNT	1	80	171881	BANDED TANK MOUNT	2
63	99440	HOSE	1	81	16816	CAPSCREW-3/8 UNC X 1 3/4	2
63	17315	CONNECTOR	1	82	171877	NUT-LONG, 7/16 UNF	4
64	171977	HOSE	1	83	15544	CAPSCREW-7/16 UNF X 7/8	4
64	46944	ELBOW-37 DEGREE	1	83	15157	LOCKWASHER-7/16	4
65	176017	ADAPTOR-COMPRESSOR LUB	1	84	171887	HOSE	1
65	161389	GASKET	1	85	14593	TEE	1
66	14501	ELBOW-37 DEGREE	1	86	127408	CLAMP	1
67	87387	AIR GAUGE	1	87	.....	AXLE REAR WHEEL, SEE PAGE G8	2
68	14500	ELBOW-37 DEGREE	1	88	14539	ELBOW-45 DEGREE	1
68	16168	FITTING	1	89	15225	COTTER PIN-1/8 X 1 1/8	1
69	95925	HOSE	1	90	129563	CLAMP-STRAP	1


## GOVERNOR

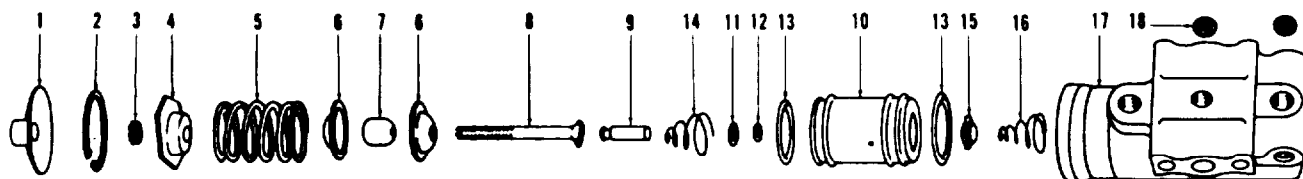

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.
1	133743	GOVERNOR	1	10	97258	PISTON	1
1	97342	COVER	1	11	97260	MASHER	1
2	131255	SNAP RING	1	12	235780	GROMMET-EXHAUST STEM	1
3	97335 A	SCREW AND SPRING	1	13	97256	GROMMET	2
3	15000	NUT-HEX, 1/4 UNC	1	14	97262	SPRING-EXHAUST STEM	1
4	97339	SEAT-SPRING, UPPER	1	15	97255	VALVE	1
5	97337	SPRING	1	16	97254	SPRING-VALVE	1
6	97336	SEAT-SPRING, LOWER	2	17	97252	BODY	1
7	97338	GUIDE-SPRING	1	18	97253	FILTER	2
8	97340	SCREW-ADJUSTING	1				
9	97261	STEM-EXHAUST	1				
10	97257 A	PISTON	1				

\* INCLUDED IN REPAIR KIT 134449.

# AIR COMPRESSOR

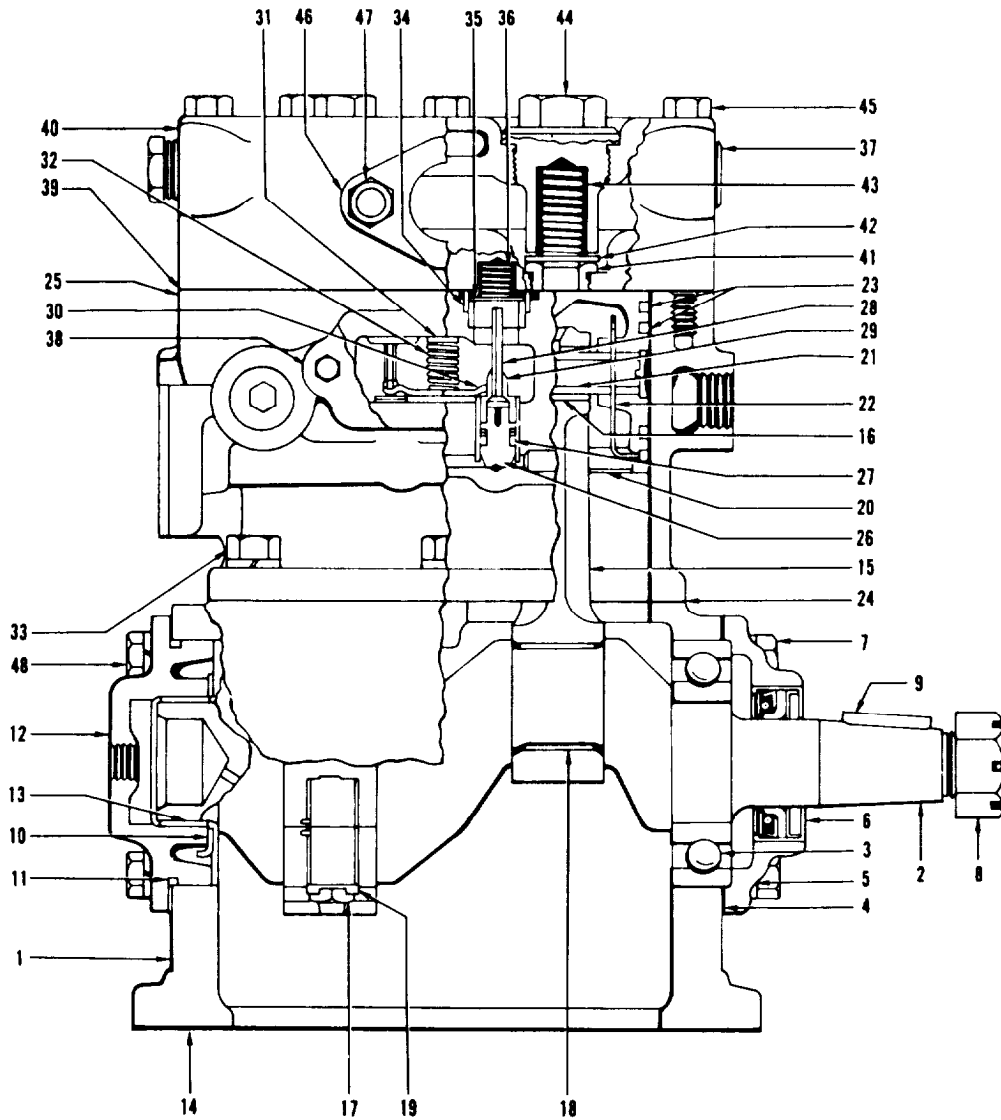

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
	175908	AIR COMPRESSOR	1	15	131238	ROD-CONN. STD.	2
1	151556	CRANKCASE	1	15	180418	ROD-CONN.,.010 U/S	2
2	131228	CRANKSHAFT	1	15	180551	ROD-CONN.,.020 U/S	2
3	235818	BEARING-BALL	1	15	180559	ROD-CONN.,.030 U/S	2
4	131229	GASKET-FRONT END COVER	1	16	131240	BUSHING	1
5	235819	COVER-FRONT END	1	17	131241	BOLT	2
6	151557	OIL SEAL	1	10	131242	INSERT-STD	2
7	77931	CAPSCREW-5/16	4	10	110419	INSERT-.010 U/S	2
7	235797	LOCKWASHER-5/16	4	18	180552	INSERT-.020 U/S	2
8	24236	NUT-CRANKSHAFT	1	18	180560	INSERT-.030 U/S	2
9	17253	KEY	1	19	131243	LOCKWASHER	2
10	131230	WASHER-THRUST	1	20	235824 A	PISTON AND PIN-STD	2
11	131231	GROMMET	1	20	180553	PISTON AND PIN-.010 O/S	2
12	151558	COVER-REAR END	1	20	180555	PISTON AND PIN-.020 O/S	2
13	131234	@EARING	1	20	180557	PISTON AND PIN-.030 O/S	2
14	235811	GASKET-FLANGE	1	21	235825	PIN-WRIST	1




## AIR COMPRESSOR

REF. NO.	MISTER PART NC.	NAME OF PART 1 2 3 4	QTY.	REF. NO.	HYSTER PART NC.	NAME OF PART 1 2 3 4	QTY.
22	235826	WIRE-WRIST PIN LOCK	2	37	15314	PLUG- 3/8	2
23	235827	PISTON RING-STD	1	38	131257	GASKET, STRAINER	1
23	180554	PISTON RING-.010 O/S	1	39	235829	GASKET-CYLINDER HEAD	1
23	180556	PISTON RING-.020 O/S	1	40	131182	CYLINDER HEAD	1
23	180558	PISTON RING-.C30 O/S	1	41	235787	SEAT-DISCHARGE VALVE	2
24	235805	GASKET-CYLINDER BLOCK	1	41	235787	VALVE-DISCHARGE	2
25	77924	CYLINDER BLOCK	1	43	235791	SPRING-DISCHARGE VALVE	2
26	131246	PISTON-UNLOADER	2	44	235792	NUT-DISCHARGE VALVE CAP	2
27	97270	BACK-UP RING	1	45	77923	CAPSCREW-5/16	8
27	97271	GROMMET	1	46	235833	GASKET-DISCHARGE FITTING	1
28	131248	PLUNGER-UNLOADER	2	46	180296	DISCHARGE MANIFOLD	1
29	131249	GUIDE-UNLOADER PLUNGER	2	47	180291	STUD-5/16	2
30	131250	SADDLE-UNLOADER PLUNGER	1	47	15005	NUT-5/16	2
31	235799	SEAT-UNLOADER SPRING	1	48	16836	CAPSCREW	4
32	235800	SPRING	1	48	235797	LOCKWASHER	4
33	15507	CAPSCREW	6				
33	15156	LOCKWASHER	6				
34	235830	GUIDE-INLET VALVE	2				
35	235831	VALVE- INLET	2				
36	235832	SPRING-INLET VALVE	2				


\* INCLUDED IN REPAIR KIT 180579.  
 □ INCLUDED IN UNLOADER KIT 180580.  
 # INCLUDED IN GASKET SET 180757.

## ROTATING UNION

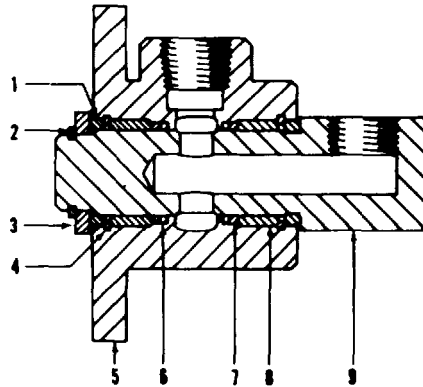

REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.	REF. NO.	HYSTER PART NO.	NAME OF PART 1 2 3 4	QTY.
	171873	ROTATING UNION	1	5	175854	HOUSING	1
1	148834	SHIELD-OUST	2	6	78404	C-RING	1
2	78407	SNAP RING	1	7	96951	BACK-UP WASHER	2
3	175855	THRUST WASHER	1	8	78403	BEARING	2
4	78406	SNAP RING	2	9	181222	ROTOR	1


## LIGHTING-SYSTEM

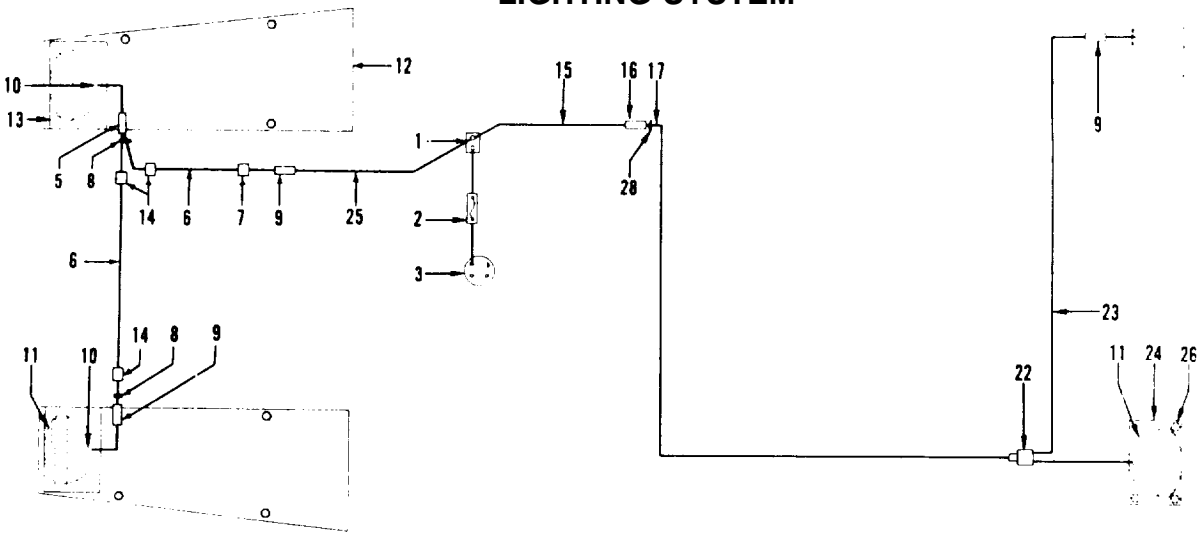

REF. NC.	HYSTER PART NO.	NAME OF PART				QTY.
		1	2	3	4	
1	62886	LIGHT SWITCH				1
2	71217	A WIRE				1
2	21778	FUSE-20 AMP				1
3	.....	SWITCH-IGNITION				1
5	73510	CONNECTOR-FEMALE				1
6	174163	WIRE				1
7	154208	CLAMP				1
8	132095	GROMMET				2
9	42958	CONNECTOR-FEMALE				3
10	26284	GROMMET				2
11	139646	HEAD LIGHT				4
11	156776	ELEMENT-SEALED BEAM				1
11	149519	RETAINER-ELEMENT				1
11	156777	SHELL				1
11	149513	BUSHING-PIVOT				1
11	149514	WASHER				1
11	149516	NUT				1
12	.....	COVER, SEE PAGE B1				2

REF. NC.	HYSTER PART NO.	NAME OF PART				QTY.
		1	2	3	4	
13	173251	BRACKET-LIGHT GUARD				4
14	124359	CLAMP				3
15	161142	WIRE				1
16	42958	CONNECTOR-FEMALE				1
17	163960	WIRE				1
22	73510	CONNECTOR-FEMALE				1
23	163959	WIRE				1
25	.....	HARNES <sup>o</sup> -WIRE, SEE PAGE E2				1
26	15514	NUT-1/2 UNF				8
26	15158	LOCKWASHER-1/2				8
26	15008	NUT-1/2 UNF				8
20	104718	GROMMET				1

## AIR REGULATOR

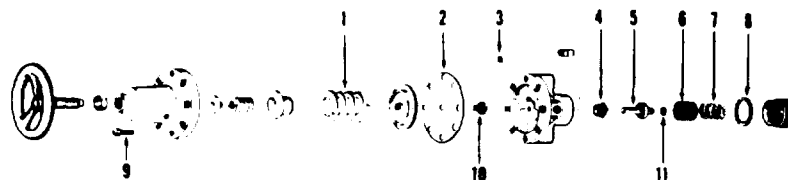


REF. NO.	HYSTER PART NC.	NAME OF PART	QTY.
1	85804 A	AIR REGULATOR	1
2	79243	SPRING-REGULATING	1
3	.....	DIAPHRAGM	1
4	.....	O-RING	1
5	79244	SEAT-VALVE	1
6	.....	VALVE	1
7	.....	SCREEN-STRAINER	1

REF. NO.	HYSTER PART NC.	NAME OF PART	QTY.
7	* 79245	SPRING-VALVE	1
8	* .....	O-RING	1
9	* 79246	SETScrew	1
10	* .....	SEAT-RELIEF	1
11	* .....	O-RING	1

\* INCLUDED IN REPAIR KIT 79247.

## QUICK RELIEF VALVE

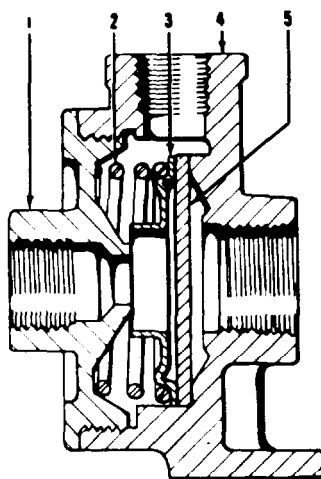

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	85817 A	QUICK RELIEF VALVE	1
2	122331	COVER	1
3	* .....	SPRING	1
4	122330	BAFFLE	1
5	122329	BODY	1
6	* .....	DIAPHRAGM	1

REF. NO.	HYSTER PART NO.	NAME OF PART	QTY.
1	15621	CAPSCREW-5/16 UNF X 1 1/4	2
2	15155	LOCKWASHER-5/16	2
3	15005	NUT-5/16 UNF	2

\* INCLUDED IN RELIEF VALVE REPAIR KIT 78409.

# Section Q

NUMERICAL

INDEX



## NUMERICAL INDEX

PART ND.	PAGE	PART No.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
125	D3	15026	G7	15525	D11	16568	K5	17319	P5	30161	G9
126	D3	15039	E1	15526	C1	16589	K5	17324	P1	30175	G9
142	H4	15052	E3	15529	H1	16594	C19	17344	C6	30195	G6
206	K4	15054	D1	15534	D11	16597	G2	17405	C1	30273	G8
1906	G10	15055	C2	15544	P6	16598	C2	17408	K1	30282	G6
1908	C10	15056	C1	15551	E3	16634	K1	17443	D4	30283	G6
7882	C6	15066	E1	15552	P5	16663	C16	17484	H4	30368	C2
9033	C18	15096	G8	15553	P1	16690	E1	17585	K5	30370	C2
11095	E1	15107	B3	15556	K1	16691	C13	17664	P2	30375	C21
12425	H4	15127	D3	15586	P1	16696	C13	17665	P1	35159	C6
12624	C3	15129	C3	15621	P10	16701	D9	17666	G4	37562	G11
12815	C3	15132	D9	15639	K5	16707	E4	17730	P2	38003	H2
12817	P1	15134	E5	15640	D4	16708	D3	17742	P1	38005	H2
12831	P3	15135	K1	15654	P6	16711	E4	17777	P5	38006	H2
12832	P1	15151	D3	15702	H3	16713	E5	17946	E3	38011	H2
12836	P3	15152	E1	15863	G6	16719	E4	18202	D4	39347	G8
12840	P5	15154	C14	15865	K3	16720	C6	18341	P5	39360	G6
12844	D10	15155	B1	15884	G6	16733	D6	18425	K1	39373	G2
12845	C20	15156	C1	15887	G6	16741	E5	18461	C16	41184	H4
12857	P2	15157	C1	15889	G6	16743	H4	18497	D1	42681	G4
12865	G2	15158	B1	15916	E2	16761	E1	18498	B1	42958	P9
12871	P2	15159	G4	15923	C7	16764	P1	18508	C8	43740	D3
12872	P3	15160	G9	15931	C6	16775	83	18509	G2	44562	G6
12891	G6	15163	E1	15932	D3	16779	C16	18510	H4	46944	P6
12944	G3	15165	E1	16001	G10	16801	C20	18512	C13	49189	G9
12949	K1	15174	K4	16018	K2	16805	C21	18514	C11	53030	C10
14271	D11	15175	E5	16041	G10	16811	C8	18515	E2	53031	G10
14273	D11	15176	B1	16114	C19	16814	C13	18518	P5	53032	G10
14349	P3	15180	C1	16116	P1	16815	D11	18535	C1	53038	G10
14358	D11	15200	D3	16123	P3	16816	D2	18536	C8	53123	E1
14386	C6	15201	C1	16143	P5	16818	D9	18537	C8	53124	K4
14387	C6	15212	G2	16149	D2	16825	C3	18543	C20	53138	D4
14467	C12	15213	H5	16151	D10	16828	C2	18556	C10	53171	G1
14500	P5	15223	H1	16155	P6	16829	B1	18558	C1	53849	G6
14501	P5	15225	H4	16168	G2	16830	G8	18559	E5	53867	G9
14506	P5	15226	G8	16186	E2	16833	G9	18561	G4	54115	G8
14509	K1	15227	G6	16187	D2	16835	G2	18588	B2	54510	H2
14539	P5	15243	H1	16190	P2	16836	B1	18607	C1	54515	H2
14549	K2	15302	G6	16192	D1	16979	K1	18815	H4	54767	K3
14550	C6	15303	C16	16201	G6	16982	K1	18854	H4	54860	H5
14558	H1	15305	G6	16313	C11	16989	K2	18858	C19	54861	H5
14590	P5	15306	C11	16316	C11	17063	K5	19510	E1	54863	H5
14593	P6	15307	D1	16344	K2	17096	C3	19535	P5	54865	H5
14669	P5	15314	G4	16370	P3	17116	G1	19536	K2	54866	H5
14673	K5	15315	C1	16375	C20	17150	C3	19589	C3	54867	H5
14678	K2	15316	G10	16376	D2	17154	C15	19841	P1	54868	H5
14681	K2	15319	D1	16378	C4	17158	C13	19869	E3	54869	H5
14683	K1	15324	E1	16483	K2	17159	C11	19872	D3	54871	H5
14689	H1	15338	P1	16484	K5	17174	P1	19877	G7	54872	H5
15000	D4	15345	P1	16485	G2	17180	E5	19987	P3	54873	H5
15001	H3	15347	C11	16486	K5	17209	E1	21278	G1	54874	H5
15002	E1	15370	P1	16487	K5	17231	C18	21420	G10	54912	H2
15004	D3	15455	P1	16526	C2	17253	P7	21778	P2	54916	H2
15005	B3	15463	P1	16541	K2	17268	D11	24236	P7	55146	K3
15006	D1	15468	P3	16559	KS	17300	P3	24270	C3	55287	G3
15007	C3	15482	G2	16561	K5	17301	K1	24274	C3	55528	E4
15008	P1	15483	H1	16568	K1	17306	K1	26284	P9	55580	E5
15021	G8	15502	P1	16585	K2	17314	D2	27991	G1	55585	E4
15024	D3	15507	P8	16586	K5	17315	P5	28584	E1	55590	E4
15025	C13	15514	P1	16587	K5	17316	P5	30068	G6	55894	E4

## NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART No.	PAGE	PART NO.	PAGE	PART ND.	PAGE	PART ND.	PAGE
55965	E3	85766	C8	97373	D1	100154	K3	124239	D6	131174	E4
55972	E3	85777	D1	97374	D1	100434	C3	124359	E1	131182	P8
55978	E4	65800	E1	97491	E3	100792	P1	124635	G1	131228	P7
55983	E2	85803	P5	97497	E4	101618	E1	124682	G1	131229	P7
56998	G9	85804 A	P10	97498	E1	101625	P1	124744	C1	131230	P7
57545	G6	85817 A	P10	97499	E4	101650	C3	125305	P5	131231	P7
58937	G3	85827 A	P5	97502	E3	101985	C11	125509	C12	131234	P7
58941	G1	85830	C3	97504	E3	102898	P1	125519	C16	131238	P7
60416 A	P2	86008	G9	97531	E3	102919	P1	125520	C13	131240	P7
61141	G3	86985	E3	97663	K2	104718	P9	125522	C13	131241	P7
61206	K3	87344	P4	97847	K3	106483	C3	125606	G3	131242	P7
61393	K3	87345	P4	97850	K3	109502	H4	125830	C18	131243	P7
62886	P9	87346	P4	97882	P2	109983 A	B3	126358	E5	131246	P8
63049	P2	87347 A	P4	97927	G2	110279	P1	126364	K4	131248	P8
63108	P3	87387	P6	98541	E2	110497	P2	126380	E2	131249	P8
63111	P2	87393	P1	99440	P6	111114	C2	126381	E2	131250	P8
63116	C2	87415	E1	99570	C13	111120	C1	127045	D4	131255	P6
64037	H1	88127	D2	99571	C13	111331	K1	127125	C12	131257	P8
66716	G7	88460	P5	99572	C13	111509	P5	127583	P3	131461	K2
66885	K1	88482	P5	99573	C13	111766	E1	127642	D1	132005	K2
67353	D1	88572	E3	99574	C13	111770	E2	127644	C8	132011	C16
67654	E1	88576	E3	99576	C11	111805	C10	127645	C8	132095	P9
71217 A	P9	89469	P1	99577	C11	112989	D4	127804	E1	132728	E3
73510	P9	90263	P4	99585	C11	113339	C1	127874	H5	132818	E4
74751	E1	91527	G1	99599	C11	114496	H1	127875	H5	132820	E4
75382	K5	95925	P6	99600	C11	115696	D10	127876	H5	132823	E4
76230	K2	96480	K2	99601	C11	116871	P1	127915	C8	132853	E2
77326	E1	96522	K2	99602 A	C11	118742	K1	128408	D11	132893	C6
77328	E1	96951	P8	99604	C11	119074	D11	128436	E1	132972	E1
77527	P1	96952	K3	99609	C15	119236	C3	128462	G3	133573	C15
77584	H5	97007	C8	99610	C12	119379	E1	128831	E5	133575	C17
77585	H5	97041	C8	99611	C15	119546	E1	128834	E5	133743	P6
77685	H4	97066	C6	99612	C15	119847 A	H4	128835	E5	133816	K3
77716	H4	97132	C8	99613	C15	119878	H5	128836	E5	133817	K3
77717	H4	97252	P6	99614	C15	119879	H4	128837	E5	133819	K3
77718	H4	97253	P6	99615	C15	119963	K3	128838	E5	133820	K3
77719	H4	97254	P6	99623	C14	120212	G2	128839	E5	133821	K3
77720	H4	97255	P6	99631	D9	120247	G12	128840	E5	133861	G8
77923	P8	97256	P6	99636	C15	120637	E1	128841	E3	134102	ES
77924	P8	97257 A	P6	99637	C15	120640	E1	128842	E5	134796	E1
77931	P7	97258	P6	99641	C15	122296	C18	128844	E5	134915	D8
78187	E1	97260	P6	99644	C14	122300	C18	128845	E5	134919	D7
78278	D1	97261	P6	99646	C12	122329	P10	128846	E5	134920	D7
78286	D10	97262	P6	99647	C12	122330	P10	128848	E5	134921	D7
78294	P1	97270	P8	99663	C12	122331	P10	128851	E5	134923	D7
78403	P8	97271	P8	99668	C12	122333	D7	128852	E5	134924	D7
78404	P8	97335 A	P6	99709	C16	122336	D7	129444	K4	134925	D7
78406	P8	97336	P6	99722	C14	122343	D7	129445	K4	134926	D7
78407	P8	97337	P6	99723	C14	122345	D7	129446	K4	134928	D7
78456	P5	97338	P6	99724	C14	122346	D7	129447	K4	134929	D7
79243	P10	97339	P6	99725	C14	122347	D7	129563	P6	134930	D8
79244	P10	97340	P6	99726	C14	122348	D7	129727	P5	134932	D8
79245	P10	97342	P6	99727	C14	123046	P2	129883	E1	134933	D8
79246	P10	97344	E3	99728	C14	123672	E3	129986	E1	134935	D6
79852	D9	97345	E3	99742	C14	123675	E4	130496	C6	134936	D8
79870	C14	97358	E3	99756	D9	124215	D6	130676	E3	134937	D8
79882	E3	97359	E3	99772 A	D6	124216	D2	130793	B3	134938	D8
85724 A	H5	97360	E4	99779	D9	124217	D6	130845	C8	134939	D8
85749	G7	97361	E3	99780	D9	124218	D6	131172	E4	134940	D8
85765	P2	97372	D1	99786	D9	124219	D6	131173	E4	134941	D8

## NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
134943	D8	144613	C11	148891	C3	149919	C6	155092	G5	155411	H2
134944	D8	145169	C6	149055	G7	149923	C8	155093	G5	155412	H2
134948	D8	145172	C8	149220	C6	149929	C8	155098	P4	155414	G8
134949	D8	145173	C8	149293	D4	149934	D1	155099	P4	155416	P4
134950	D8	145174	C8	149294	D4	149945	C1	155239	E4	155423	C6
134951	D8	145176	C4	149513	P9	149952	C9	155303	C6	155431	C6
134953	D8	145177	C4	149514	P9	149965	E4	155304	C6	155432	C1
134954	D8	145178	C8	149516	P9	149967	E4	155305	C3	154436	C1
134956	D8	145231	C13	149519	P9	149976	C6	155308	G6	155437	E5
134958	D8	145242	D5	149601	G10	149977	C8	155314	G6	155442	C8
134958	D8	145243	D5	149684	G9	149978	C8	155315	G6	155443	E1
135140	D8	145244	D5	149801	C5	150085	G2	155316	G6	155444	E1
136111	B3	145245	D5	149802	C5	150087	G2	155317	G6	155445	D1
136112	B3	145246	D5	149804	C5	150088	G2	155325	G6	155446	D1
136122	C18	145247	D5	149817	C6	150194	G9	155326	G6	155449	D4
136125	E3	145315	D5	149818	C6	151316	D9	155328	G10	155451	D4
136486	D3	145316	D5	149819	C6	151556	P7	155330	G6	155452	D4
136516	P5	145317	D5	149830	C6	151557	P7	155331	G6	155453	C7
137679	E4	145319	D5	149832	C6	151558	P7	155333	K1	155455	C2
137697	E3	145503	K5	149842	C6	151837	E4	155335	G6	155459	K1
137698	E4	145569	C14	149843	C6	151838	E3	155336	G6	155460	C2
137852	C3	145570	C14	149844	C4	151840	E4	155337	G6	155461	C2
138076	G9	145639	D4	149845	C6	151842	D5	155338	H4	155462	G5
137145	K2	145689	B1	149846	C4	151843	D5	155339	G6	155464	K2
138552	E5	146073	K1	149847	C4	151844	D5	155340	G6	155465	K1
138554	E5	146630	C10	149848	C6	151845	D5	155341	G6	155466	C3
138555	E5	146633	D4	149849	C6	151846	D5	155344	G6	155467	C3
138559	E5	146634	D4	149851	C6	151847	D5	155345	G6	155474	K3
138590	C11	146635	D4	149852	C6	152230	E4	155346	G6	155480	G10
138601	C11	146644	C3	149853	C6	152231	E4	155348	G6	155484	K2
138724	E5	146689	E5	149857	C8	152232	E4	155349	G6	155485	K2
138907	K2	146812	E4	149858	C8	152233	E5	155350	G6	155486	K2
138924	G6	146813	E4	149859	C8	152234	E5	155352	K1	155487	K2
138981	C11	147299	G11	149860	C8	152235	E5	155357	G9	155488	K2
138982	C11	147527	K3	149861	C8	152236	E4	155360	G9	155581	P4
138986	C13	147528	K3	149862	C8	152237	E5	155361	G9	155582	P4
139024	G7	147536	G2	149863	C8	152238	E5	155362	G10	155806	K4
139589	B1	147537	G2	149864	C8	152296	B1	155369	G9	155807	K4
139646	P9	147538	G2	149865	C8	152597	D6	155370	G9	155888	G10
139773	H4	147539	G2	149866	C8	152598	D6	155374	G9	155889	G10
140598	C15	147543	G2	149867	C8	152608	C19	155375	P4	156085	B1
140608	C8	147544	D5	149868	C8	152609	C19	155376	G10	156088	K1
140612	K5	147545	D5	149869	C8	152612	C16	155377	K3	156102	B2
140660	G4	147548	D5	149870	C8	152618	D9	155380	G8	156112	B2
141082	E4	147571	D5	149871	C8	152621	C19	155381	G8	156113	B2
141259	D10	147616	D1	149872	C8	152780	E4	155387	K1	156114	B2
141457	E4	147633	E2	149873	C8	152862	G6	155388	G8	156117	B2
141461	K2	147990	K3	149876	C4	153025	C21	155389	G8	156118	B2
141721	G9	148252	P1	149883	C8	153069	K1	155395	G8	156119	B2
141781	E3	148260	B3	149884	C9	153070	P2	155396	G8	156122	B2
141794	D6	148266	P 2	149885	C9	154208	P9	155397	G8	156125	B1
142340	E3	148475	C19	149886	C8	154221	E3	155400	G8	156133	B1
142526	C18	148497	D6	149887	C8	154222	E3	155401	G8	156134	B1
142550	E3	148506	G11	149888	C8	154440	C11	155402	G8	156135	B1
147682	K1	148524	D6	149889	C8	154494	D11	155403	G8	156139	B1
142826	G11	148525	D6	149892	C6	154565	D3	155404	G8	151140	B1
143289	K4	148763	E1	149893	C6	154625	G6	155405	G8	156142	B1
143891	K1	148626	C6	149894	C6	155056	K3	155406	G8	156143	B1
144020	D6	148827	C6	149899	C6	155089	G5	155409	G8	156144	B1
144067	P5	148834	P8	149901	C6	155090	G5	155410	G8	156145	B1

## NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
156289	E4	157595	C1	158576	P2	159820	G2	160374	C8	161419	C13
156479	D10	157596	C1	158647	G6	159821	G2	160375	C9	161419	C13
156537	K3	157598	G7	158760	C19	159822	G2	160376	C9	161420	C13
156538	K3	157599	G7	158820	B1	159823	G2	160377	C9	161421	C13
156539	K3	157603	H4	158826	K2	159937	E4	160378	C9	161422	C2
156540	K3	157606	H1	158827	K2	159938	E4	160379	C9	161423	C13
156541	K3	157612	H1	158828	K2	159939	E4	160380	E1	161424	C12
156542	K3	157613	H1	158829	K2	159950	G10	160381	C6	161425	C12
156543	K3	157614	H1	158830	K2	159942	C8	160423	C6	161429	C12
156544	K3	151617	H1	158831	K2	159944	D1	160536	G10	161430	C12
156545	K3	157618	H1	158832	K2	159945	C1	160537	G10	161431	C12
156546	G5	157620	H1	158833	K2	159946	C1	160538	G10	161440	C12
156547	G5	157621	H1	158834	K2	159947	E5	160539	G10	161446	C14
156548	G5	157622	H1	158835	K2	159948	C8	160600	C6	161448	C14
156549	G5	157623	G7	158836	K2	159949	C8	160601	C6	161449	C14
156625	E1	157703	D2	158837	K2	159953	P1	160602	C6	161450	C14
156628	E1	157718	H2	158838	K2	159954	P2	160603	C6	161451	C14
156629	E1	157719	H2	158839	K2	159958	P2	160604	C6	161452	C14
156637	P4	157720	H2	158840	K2	159961	P2	160622	D11	161453	C14
156639	P4	157721	H2	158841	K2	159969	C8	160650	C6	161454	C14
156641	P4	157722	H2	158842	K2	159971	C5	160773	D1	161455	C14
156643	P4	157723	H2	158843	K2	159972	C5	161142	P9	161456	C14
156776	P9	157724	H2	158844	K2	159973	C5	161145	C3	161457	C14
156777	P9	157725	H2	158845	K2	159974	C6	161195	C8	161458	C19
156778	G5	157730	H2	158846	K2	159975	C5	161200	C8	161459	C19
156779	G5	157731	H2	158864	C6	159976	C6	161201	C8	161460	C19
156908	D5	157732	H2	158867	H3	159977	C6	161249	C3	161461	C19
156940	K1	157735	H2	158868	H3	159979	C6	161258	C4	141462	C19
157065	E1	157772	H2	158869	H3	159980	C6	161291	C12	161463	C15
157111	D1	157773	H2	158870	H3	159981	C6	161292	C12	161468	C15
157112	D1	157774	H2	158871	H3	159982	C6	161296	C12	161469	C15
157113	D1	157776	H2	158872	H3	159983	C6	161297	C12	161489	C15
157115	D4	157779	H2	158873	H3	159985	C6	161381	C11	161491	C16
157116	D4	157896	C3	158874	H3	159986	C6	161382	C11	161492	C16
157117	D4	157906	P1	158876	H3	159987	C6	161383	C11	161493	C16
157118	C2	157910	P1	158877	H3	159988	C6	161385	C11	161494	C16
157119	C2	157911	P1	158878	H3	159989	C6	161387	C11	161495	C16
157120	C8	157912	C6	158906	G2	159990	C6	161398	C11	161496	C16
157121	C8	157913	P1	156908	K1	159991	C8	161389	C11	161497	C16
157122	D3	157914	P1	158913	K4	159992	C6	161390	C11	161498	C16
157125	D3	157915	P1	159064	K3	159993	C6	161395	G11	161499	C16
151127	D3	157916	P1	159105	D9	160248	C6	161396	G11	161500	C16
157128	D3	157917	P1	159127	G9	160249	C6	161397	C13	161501	C16
157131	D3	157922	C1	159128	G9	160250	C8	161398	C13	161502	C16
157290	C4	157923	P1	159130	G9	160251	C6	161399	C13	161503	C16
151370	C6	157924	P1	159131	G9	160252	C6	161400	C13	161504	C16
157419	D1	157925	P1	159132	G10	160253	C6	161401	C13	161505	C16
151625	D1	157926	P1	159133	G10	160360	C8	161403	C13	161506	C16
151428	D1	158045	C18	159367	C20	160361	C8	161404	C13	161508	C16
151430	P4	158114	C19	159368	C20	160362	C8	161405	C13	161509	C16
157449	C3	158115	C19	159701	K2	160363	C8	161406	C13	161513	C17
157585	C7	158116	C19	159703	K2	160364	C8	161407	C13	161514	C17
157586	G7	158161	C17	159708	C6	160365	C8	161409	C13	161515	C17
157587	G7	158162	C17	159728	G8	160366	C8	161410	C13	161516	C18
157588	G7	158163	C17	159764	K2	160367	C8	161411	C13	161517	C18
157589	D3	158164	C17	159812	K2	160368	C8	141412	C13	161518	C18
157590	D3	158165	C17	159816	G2	160369	C8	161413	C13	161519	C18
157592	G7	158186	D2	159817	G2	160370	C4	161414	C13	161520	C18
157593	D3	158187	C14	159818	G2	160372	C4	161415	C13	161522	C18
157594	D3	158193	D9	159819	G2	160373	E5	161416	C13	161523	C18



---

**NUMERICAL INDEX**


---

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
161525	C18	162543	D8	162798	G2	162860	G4	163960	P9	164223	C6
161527	C18	162544	D7	162799	G2	162864	G9	163964	G10	164224	C6
161529	D6	162545	D7	162800	G2	162865	G9	163966	G10	164227	K1
161530	D6	162552	K2	162801	G2	162866	G9	163967	G10	164232	B1
161531	DC	162572	CR	162802	G2	162867	G9	163968	G10	164235	C11
161532	C19	162688	E4	162803	G1	162868	G9	163969	G3	164238	D4
161533	C19	162705	G4	162804	G2	162927	G2	163970	G8	164243	C3
161534	C19	162707	G4	162805	G2	162931	G3	163971	G8	164244	C3
161535	D6	162708	G4	162806	G4	162932	G3	163980	G8	164245	C3
161536	D6	162709	G4	162807	G4	162933	G3	163994	P4	164248	C2
161537	D6	162710	G4	162808	G4	162934	G3	164005	E4	164249	C2
161540	D9	162711	G3	162809	G4	162935	G2	164015	C8	164250	C2
161543	D9	162712	G3	162810	G4	162937	G2	164017	C6	164253	D1
161544	D9	162713	G3	162811	G4	162938	G2	164021	C5	164255	D2
161545	D9	162714	G3	162812	G4	162985	H2	164022	C5	164256	D2
161546	D9	162715	G3	162813	G4	163064	HZ	164023	C5	164263	E2
161548	D9	162716	G3	162814	G4	163065	H2	164024	C6	164264	E2
161549	D9	162717	G3	162815	G4	163180	G8	164025	C4	164269	K1
141550	D9	162718	G3	162816	G4	163183	G8	164026	C6	164270	K1
161551	D9	162719	G3	162818	G4	163202	C5	164027	C6	164276	G11
161552	D9	162720	G3	162819	G4	163203	C5	164028	C6	164277	G11
161553	D9	162721	G3	162820	G2	163241	D6	164029	C6	164278	G11
141607	D3	162723	G3	162821	G2	163256	D6	164030	C6	164280	C1
161648	C12	162724	E4	162822	G2	163257	D6	164031	C6	164281	C1
161665	D7	162725	E4	162823	G2	163258	D6	164032	C6	164283	G1
161666	D7	162726	E4	162824	G2	163259	D6	164033	C6	164285	C3
161670	D7	162727	E4	162825	G2	163260	D6	164034	C6	164287	K1
161671	D7	162728	E4	162826	G2	163262	D6	164036	C8	164288	C3
141675	D8	162729	E4	162628	G2	163263	D6	164037	C8	164289	D1
161678	D8	162730	E4	162829	G2	163264	D6	164038	C8	164299	C6
161680	D8	162731	E4	162830	G2	163266	D6	164039	C8	164359	C13
161681	D8	162732	E4	162831	G2	163267	D6	164043	C4	164368	K1
161682	D8	162765	C5	162832	G2	163269	D6	164045	C9	164507	E3
161683	D8	162766	C6	162833	G2	163270	D6	164047	E4	164508	E3
161865	K2	162767	C6	162834	G2	163552	D1	164048	E4	164510	E3
161873	K5	162768	C6	162835	G2	163616	K2	164049	E4	164515	E4
161874	K5	162771	C6	162836	G2	163634	K4	164050	C8	164526	K3
161907	P2	162772	C8	162837	G2	163657	K4	164055	E4	164793	P2
161908	P2	162773	C8	162838	G1	163661	K4	164079	G8	164794	P1
161909	P2	162774	C9	162839	G1	163730	D4	164080	C8	164795	P2
161910	P2	162777	G3	162840	G1	163736	D3	164082	C1	164796	P2
161911	P2	162778	G3	162841	G1	163737	K1	164083	E5	164797	P2
161912	P2	161779	G3	162842	G1	163738	K1	164084	C6	164798	P2
161913	P2	162780	G3	162843	G1	163755	P2	164085	C6	164799	P2
161914	P2	162781	G3	162844	G1	163849	P2	164086	C6	164800	P2
161915	P2	162783	G3	162845	G1	163850	P2	164081	C6	164801	P2
161916	P2	162784	G3	162846	G1	163851	P2	164088	C8	164002	P2
162087	G8	162785	G3	162847	G1	163852	P2	164090	C4	164803	P2
162278	C12	162786	G3	162848	G1	163853	P2	164091	C4	164808	D3
162410	H2	162787	G3	162849	C1	163854	P2	164092	C4	164809	D3
162532	D7	162788	G3	162850	G1	163879	G9	164093	C9	164810	D3
162533	D7	162789	G3	162851	G1	163900	G9	164095	E4	164953	D4
162534	D7	162790	G3	162852	G1	163904	C3	164097	C4	165065	G8
162535	D7	162791	G3	162853	G1	163910	K4	164122	P2	165120	H1
162536	D7	162792	G1	162854	G1	163912	G2	164124	C6	165193	D5
162537	D8	162793	C1	162855	G1	163928	E2	164148	C10	165194	C5
162538	D8	162794	C1	162856	G1	163936	G10	164186	C6	165201	K2
162539	D8	162795	G1	162857	G1	163937	P4	164187	D1	165202	K2
162540	D8	162196	G1	162858	G4	163938	G9	164189	C5	165203	K2
162542	D8	162797	G1	162859	G1	163959	P9	164222	D4	165204	K2

---

## NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE	PART NO.	PAGE
165206	K2	167055	C16	169308	E3	169951	E1	171871	P5	174791	P1
165207	K2	167056	C16	169410	B1	169952	E4	171873	P8	174864	P4
165313	K2	167222	G1	169413	B1	169953	C6	171876	P6	174961	D5
165314	K2	167334	G3	169415	B1	169954	C6	171877	G10	175007	E1
165315	G3	167335	G3	169417	B1	169926	C8	171878	P5	175109	P1
165316	K2	167486	C14	169422	C20	169957	E4	171879	P6	175191	G8
165317	K2	167492	C15	169425	C20	169958	E4	171880	P6	175199	P5
165318	K2	167505	C18	169426	D10	169959	E4	171881	P6	175249	G8
165444	D5	167506	D6	169428	D10	169960	E4	171882	P6	175629	D5
165445	D5	167507	D6	169429	D10	169974	D2	171887	P6	175630	D5
165446	D5	167508	D6	169430	D10	170024	P11	171888	P6	175631	D5
165585	B1	167515	D9	169432	D10	170025	P11	171890	P5	175825	D7
165786	H4	167516	D9	169434	C3	170026	P11	171957	P5	175854	P8
165791	G9	167517	D9	169435	C3	170027	P11	171969	G8	175855	P8
165804	C8	167518	D9	169436	C3	170028	P11	171970	P5	175907	P6
165908	D1	167519	D9	169438	C21	170029	P11	171971	P6	175908	P7
165920	D1	167520	D9	169442	C20	170030	P11	171972	P5	175911	P6
165932	G9	167521	D9	169446	D11	170031	P11	171974	P6	176017	P6
165986	D1	167523	D9	169447	D11	170032	P11	171975	P5	176047	P6
166021	E2	167531	D1	169450	K5	170033	P11	171977	P5	176048	P6
166091	G4	167549	D6	169451	K5	170034	P11	171978	P5	176049	P6
166118	D1	167657	D1	169452	K5	170035	P11	171980	P5	176157	E3
166119	C6	167876	P11	169453	K5	170075	D10	171981	P5	175177	G8
166169	K4	167385	P11	169454	K5	170076	D10	171984	P5	176471	P5
166170	K4	168068	C17	169455	D3	170078	K4	172115	D1	176510	C19
166171	K4	168069	C17	169458	D4	170079	C12	172128	D1	176511	D9
166172	K4	168352	K1	169461	E2	170080	C12	172198	P3	176535	C13
166173	K4	168695	C13	169463	D3	170081	C12	172199	P3	176538	C14
166174	K4	169696	C13	169472	C5	170082	C12	172202	P1	176821	P3
166175	K4	168697	C13	169541	G9	170087	K1	172626	P1	176892	E3
166316	H2	168698	C13	169625	P1	170095	P11	172627	P1	176893	E3
166336	E4	168699	C12	169628	P3	170306	D10	172628	P1	177290	B1
166337	E4	168700	C12	169629	P1	170548	K5	172812	EC	177386	G9
166479	E4	168701	C12	169710	P3	170549	K5	172850	D2	177388	G9
166538	E3	168702	C12	169718	C5	170553	D3	172851	D2	177391	G9
166541	E4	168703	G11	169719	C5	170554	B1	172852	D2	177392	G9
166557	E3	168704	C15	169758	E1	170555	C21	172858	B1	177393	G9
166558	E3	168705	C15	169759	E1	170601	G6	173218	E3	177407	D2
166566	E3	168706	C15	169776	E1	170602	G6	173251	P9	177469	C6
166567	E3	168887	K3	169779	E1	170603	G6	173252	B1	177512	E1
166572	E3	168889	K1	169781	E1	170607	E3	173255	C11	177513	E2
166578	E3	168890	K1	169813	G8	170614	P1	173276	B1	177514	E2
166643	E3	168891	C15	169828	G11	170615	P3	173316	D4	177574	C16
166645	E3	168892	C15	169873	D2	170643	P2	173317	D4	177575	C16
166655	E3	166893	D7	169933	C5	170645	P2	173318	D3	177576	C16
166697	K3	168894	D9	169934	C5	170646	P2	173323	G2	177590	G1
166824	E3	168895	E5	169935	C6	170652	P1	173417	P2	177814	P3
166825	E3	168896	C12	169936	C6	170687	D2	173423	B1	177941	G11
166828	E3	168898	E5	169937	C6	170688	D2	173631	D5	177965	G7
166829	E3	168899	E5	169938	C6	170689	D2	173710	D3	178215	D6
166830	E3	168901	C11	169939	C6	170690	D2	173867	K1	179686	C11
166831	E3	168941	K4	169940	C6	170693	D2	173897	C13	179687	C11
166832	E3	168947	K4	169941	C6	170694	D2	173910	C14	179805	K1
166845	E3	169009	K3	169942	C8	170695	D2	174005	C3	180291	P8
166857	D1	169119	D11	169943	C6	170750	C8	174018	P5	180296	P8
166863	B1	169122	D11	169944	C8	171226	C8	174056	C20	180389	P11
167009	E3	169128	K5	169947	K1	171860	G8	174163	P9	180390	P11
167010	E4	169150	K4	169948	K1	171861	G8	174166	K5	180391	P11
167013	K1	169240	D6	169949	C4	171863	G8	174230	G8	180393	P11
167054	C16	169293	P2	169950	C4	171865	G8	174232	P1	180395	P11

## NUMERICAL INDEX

PART NO.	PAGE	PART NO.	PAGE	PART No.	PAGE	PART NO.	PAGE	PART ND.	PAGE	PART ND.	PAGE
180419	P7	234054	G9	982235	D6	985218	C14				
180551	P7	234055	G9	982298	C16	985222	C19				
180552	P7	234056	G9	982299	C16	975224 A	D6				
180553	P7	234058	G9	982302	C16	985265	C17				
180556	P8	234059	G9	982352	D9	985266	C17				
180555	P7	234065	G9	983249	C14	985267 A	D6				
180556	P8	234066	G9	983271	C16	985258	DE				
180557	P7	234067	G9	983288	C2	985269	D6				
180558	P8	234069	G9	983331	C18	985270					
180559	P7	234071	G9	983340	D9	985273	C17				
180560	P7	234072	G9	983346	D6	985274	C17				
180579	P8	234764	G9	983348	D6	985275	C17				
180580	P8	235780	P6	983484	C15	985276	D6				
180757	P8	235787	P8	983503	C15	985281	D7				
181026	P6	235790	P8	983561	C17	985287	D7				
181041	P4	235791	P8	983563	C17	985299	C15				
181043	P4	235792	P8	983586	D6	985425	G11				
181089	G4	235797	P7	983791	C19	985567	D9				
181222	P8	235799	P8	983827	D6	985576	C13				
181329	D4	235800	P8	983956	C19	985626	D7				
181331	E1	235805	P8	983993	D6	985627	D7				
181333	E1	235811	P7	984003	D7	985628	D7				
182046	P2	235818	P7	984204	D7	985629	D7				
162389	P4	235819	P7	984206	D7	985701	D7				
192815	P4	235824 A	P7	984209	D7	985702	D7				
182943	D7	235825	P7	984212	D7	985704	D7				
182982	G8	235826	P8	984214	D7	986000	D8				
183057	C8	235827	P8	984217	D7	986002	D7				
183586	D4	235829	P8	984218	D7	986104	C19				
184146	H3	235830	P8	984219	D7	986180	C18				
184147	H3	235031	P8	984224	D8	986181	C18				
187436	K5	235032	P8	984231	D7	986182	C18				
200555	E3	235833	P8	984236	D8	986475	C13				
201820	P2	235933	K4	984237	D7	990332	C16				
202004	E5	235950	E5	984248	D7	990334	C11				
202078	P2	236011	K3	984250	D8	990429	C14				
202164	E3	236012	K3	984251	D8	990430	C11				
202908	G9	236018	K3	904252	D8	992003	C12				
230351	G6	236022	K3	984253	D8	992025	C13				
230413	G9	236024	K3	984254	D8	992393	C11				
230424	G10	236026	K3	984256	D7	992536	C3				
230425	G10	236065	E3	984257	D1	992583	E5				
233126 A	B3	236066	E3	984261	D7	992628	C14				
233155	B3	236068	E3	984262	D7	992629	C16				
233156	B3	236069	E3	984264	D7	992630	C13				
233157	B3	236070	E3	984268	D7	992631	C2				
233161 A	B3	236074	E3	984270	D7	992632	C14				
233162	B3	236075	E3	984271	D7	992633	C18				
233163	B3	236078	E4	984273	D7	992716	C16				
233164 A	B3	236081	E4	984274	D7	992829	C14				
234034	G9	980735	G11	984275	D7						
234036	G9	971878	E2	984300	D7						
234045	G9	981965	P1	984336	C16						
234047	G9	982143	G11	984383	D6						
234048	G9	982161	K1	984474	D7						
234049	G9	982197	C19	984477	D7						
234050	G9	982198	C19	984565	C15						
234051	G9	982211	C11	984581	C16						
234052	G9	982222	C15	984632	C11						
234053	G9	982226	C15	984645	D2						

# **PART IV**

## **DIESEL ENGINE OPERATOR'S MANUAL**

# TABLE OF CONTENTS

SUBJECT	PAGE
<b>DESCRIPTION</b>	
Principles of Operation . . . . .	4
General Description . . . . .	5
Model Description . . . . .	6
General Specifications . . . . .	8
Engine Model and Serial Number Designation . . . . .	9
Built-In Parts Book . . . . .	9
Cross Section Views of Engine . . . . .	10
<b>ENGINE SYSTEMS</b>	
Fuel System . . . . .	13
Air System . . . . .	17
Lubricating System . . . . .	22
Cooling System . . . . .	25
<b>ENGINE EQUIPMENT</b>	
Instrument Panel, Instruments and Controls . . . . .	31
Engine Protective Systems . . . . .	33
Electrical Starting System . . . . .	37
Hydraulic Starting System . . . . .	38
Cold Weather Starting Aids . . . . .	41
Governors . . . . .	44
Transmissions . . . . .	44
<b>OPERATING INSTRUCTIONS</b>	
Engine Operating Instructions . . . . .	47
A.C. Power Generator Set Operating Instructions . . . . .	51
<b>LUBRICATION AND PREVENTIVE MAINTENANCE</b>	
Lubrication and Preventive Maintenance . . . . .	55
Fuel, Lubricants and Coolants . . . . .	66
<b>ENGINE TUNE-UP PROCEDURES</b>	
Engine Tune-U Procedures . . . . .	75
Exhaust Valve Clearance Adjustment . . . . .	76
Timing Fuel Injector . . . . .	78
Limiting Speed Mechanical Governor (In-Line Engines) . . . . .	79
Limiting Speed Mechanical Governor (6V-53 Engine) . . . . .	84
Variable Speed Mechanical Governor (In-Line Open Linkage) . . . . .	89
Variable Speed Mechanical Governor (In-Line Enclosed Linkage) . . . . .	93
Variable Speed Mechanical Governor (6V-53 Engine) . . . . .	98
Supplementary Governing Device Adjustment . . . . .	103
Hydraulic Governor (In-Line Engine) . . . . .	108
Hydraulic Governor (6V-53 Engine) . . . . .	111
<b>TROUBLE SHOOTING</b> . . . . .	113
<b>STORAGE</b> . . . . .	119
<b>BUILT-IN PARTS BOOK</b> . . . . .	123
<b>ALPHABETICAL INDEX</b> . . . . .	147

## DESCRIPTION

### PRINCIPLES OF OPERATION

The diesel engine is an internal combustion power unit, in which the heat of fuel is converted into work in the cylinder of the engine.

In the diesel engine, air alone is compressed in the cylinder; then, after the air has been compressed, a charge of fuel is sprayed into the cylinder and ignition is accomplished by the heat of compression.

#### The Two-Cycle Principle

In the two-cycle engine, intake and exhaust take place during part of the compression and power strokes respectively, as shown in Fig. 1. In contrast, a four-cycle engine requires four piston strokes to complete an operating cycle; thus, during one half of its operation, the four-cycle engine functions merely as an air pump.

A blower is provided to force air into the cylinders for expelling the exhaust gases and to supply the cylinders with fresh air for combustion. The cylinder wall contains a row of ports which are above the piston when it is at the bottom of its stroke. These ports admit the air from the blower into the cylinder as soon as the rim of the piston uncovers the ports as shown in Fig. 1 (scavenging).

The unidirectional flow of air toward the exhaust valves produces a scavenging effect, leaving the cylinders full of clean air when the piston again covers the inlet ports.

As the piston continues on the upward stroke, the exhaust valves close and the charge of fresh air is subjected to compression as shown in Fig. 1 (compression).

Shortly before the piston reaches its highest position, the required amount of fuel is sprayed into the combustion chamber by the unit fuel injector as shown in Fig. 1 (power). The intense heat generated during the high compression of the air ignites the fine fuel spray immediately. The combustion continues until the injected fuel has been burned.

The resulting pressure forces the piston downward on its power stroke. The exhaust valves are again opened when the piston is about halfway down, allowing the burned gases to escape into the exhaust manifold as shown in Fig. 1 (exhaust). Shortly thereafter, the downward moving piston uncovers the inlet ports and the cylinder is again swept with clean scavenging air. This entire combustion cycle is completed in each cylinder for each revolution of the crankshaft, or, in other words, in two strokes; hence, it is a "two-stroke cycle"

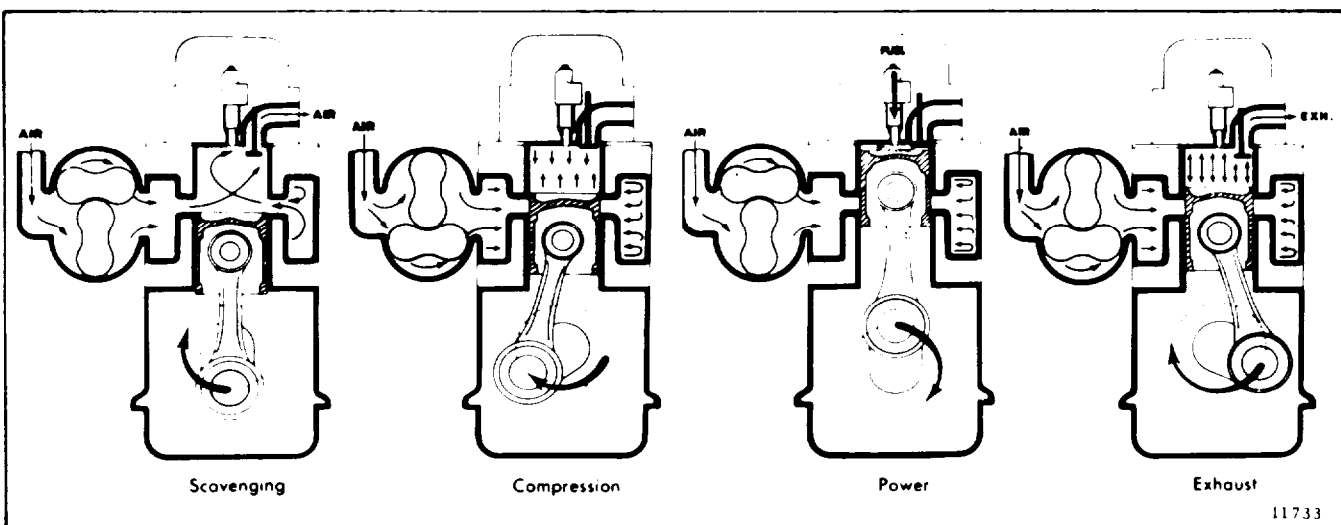


Fig. 1 - The Two-Stroke Cycle

---

## GENERAL DESCRIPTION

The two-cycle diesel engines covered in this manual have the same bore and stroke and many of the major working parts such as injectors, pistons, connecting rods, cylinder liners and other parts are interchangeable.

The In-line engines, including the inclined marine models, include standard accessories such as the blower, water pump, governor and fuel pump, which, on some models, may be located on either side of the engine regardless of the direction the crankshaft rotates. Further flexibility in meeting installation requirements is achieved with the cylinder head which can be installed to accommodate the exhaust manifold on either side of the engine.

The V-type engine uses many In-line engine parts, including the 3-53 cylinder head. The blower is mounted on top of the engine between the two banks of cylinders and is driven by the gear train. The governor is mounted on the rear end of the 6V-53 blower.

The meaning of each digit in the model numbering system is shown in Figs. 2 and 3. The letter L or R indicates left or right-hand engine rotation as viewed from the front of the engine. The letter A,B,C or D designates the blower and exhaust manifold location on the In-line engines as viewed from the rear of the engine while the letter A or C designates the location of the oil cooler and starter on the 6V-53 engine.

Each engine is equipped with an oil cooler, replaceable element type lubricating oil filter, fuel oil strainer, fuel oil filter, an air cleaner or air silencer, a governor, a heat exchanger and raw water pump or a fan and radiator, and a starting motor.

Full pressure lubrication is supplied to all main

bearings, connecting rod bearings, and camshaft bearings, and to other moving parts.

Oil is drawn by suction from the oil pan through the intake screen and pipe to the oil pump where it is pressurized and delivered to the oil filter and the oil cooler. From the oil cooler, the oil enters oil galleries in the cylinder block and cylinder head for distribution to the main bearings, connecting rod bearings, camshaft bearings, rocker arm mechanism and other functional parts.

The cooling system has a centrifugal water pump which circulates the engine coolant through the oil cooler and water jackets. The engine temperature is regulated by a thermostat(s).

Fuel is drawn from the supply tank through the fuel strainer and enters a gear type fuel pump at the inlet side. Upon leaving the pump under pressure, the fuel is forced through the fuel filter into the inlet manifold where it passes through fuel pipes into the inlet side of the fuel injectors. The fuel is filtered through elements in the injectors and then atomized through small spray tip orifices into the combustion chamber. Excess fuel is returned to the fuel tank through the fuel outlet galleries and connecting lines.

Air for scavenging and combustion is supplied by a blower which pumps air into the engine cylinders via the air box and cylinder liner ports. All air entering the blower first passes through an air cleaner or air silencer.

The engine may be started by either a hydraulic or an electric starting system.

The engine speed is regulated by a mechanical or hydraulic type engine governor, depending upon the engine application.

**5 0 4 3 - 5 1 0 1**


<b>SERIES 53</b>	<b>NUMBER OF CYLINDERS</b>	<b>APPLICATION DESIGNATION</b>	<b>BASIC ENGINE ARRANGEMENTS</b> • (see below)	<b>DESIGN VARIATION</b>	<b>SPECIFIC MODEL NUMBER AND STARTER-BLOWER ARRANGEMENT</b>
----------------------	------------------------------------	------------------------------------	---	-----------------------------	---

<u>APPLICATION DESIGNATION</u>	<u>DESIGN VARIATION</u>	<u>STARTER-BLOWER ARRANGEMENT</u>
5042-5100 MARINE	5043-5000 "N" ENGINE	Odd number in last digit designates starter opposite blower.
5043-5100 FAN TO F/W-INDUSTRIAL	5043-5100 2 VALVE HEAD	Even number in last digit designates starter same side as blower.
5044-5100 POWER-BASE	5043-5200 4 VALVE HEAD	
5045-5100 GENERATOR	5042-2302 TURBOCHARGER	
5047-5100 FAN TO F/W-VEHICLE		

**\* 2, 3, 4-53 BASIC ENGINE ARRANGEMENTS**

Rotation: R-(right) and L-(left) designates rotation as viewed from the end of the engine opposite the flywheel.

Type: A-B-C-D designates location of exhaust manifold and blower as viewed from the flywheel end of the engine.

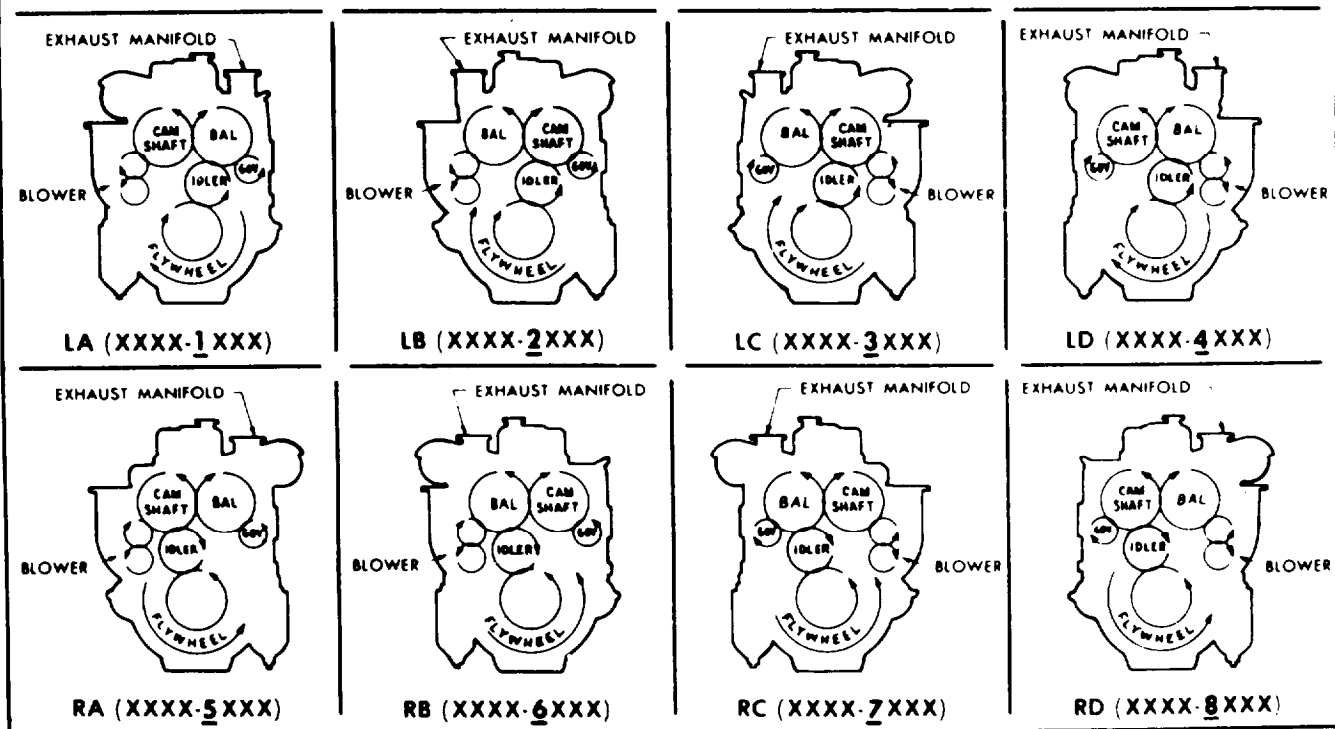


ALL ABOVE VIEWS FROM REAR (FLYWHEEL) END OF ENGINE

12223

Fig. 2 - In-Line Engine Model Description, Rotation and Accessory Arrangement



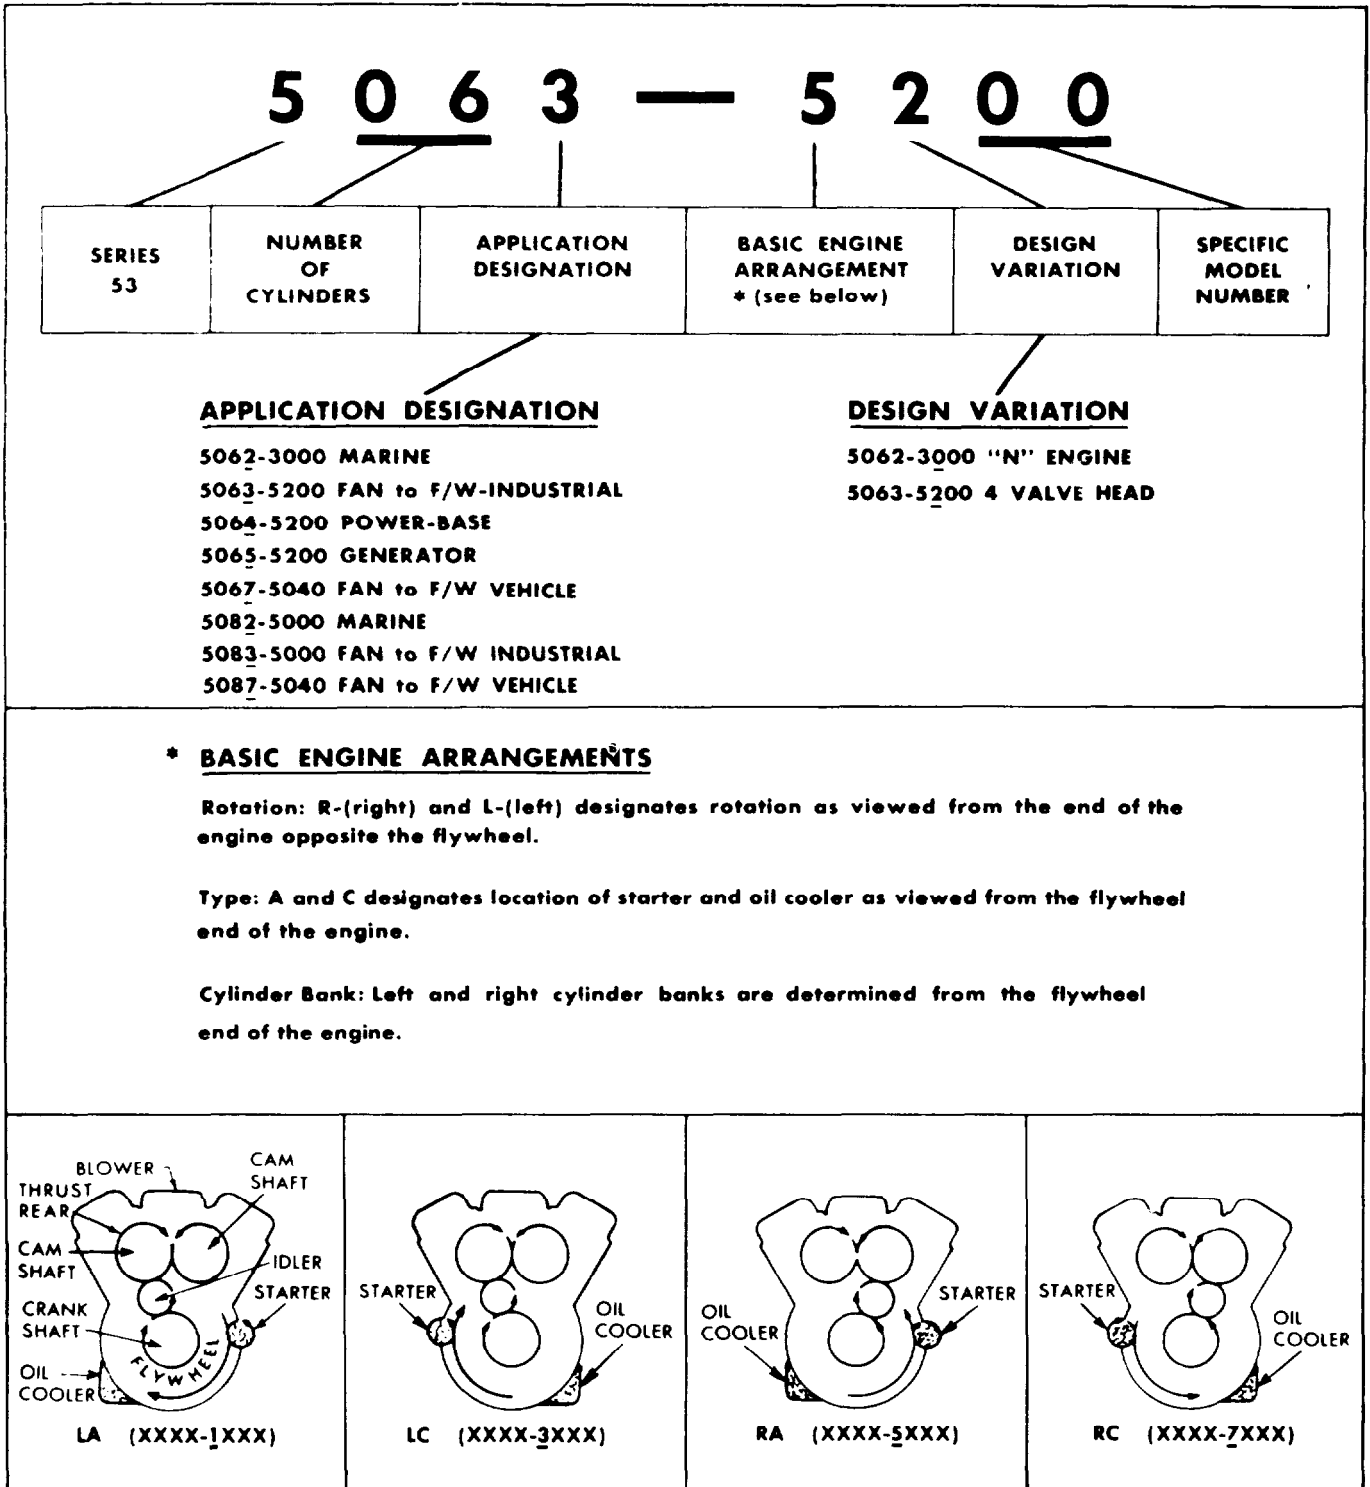

ALL ABOVE VIEWS FROM REAR FLYWHEEL END OF ENGINE

11783

Fig. 3 - 6V Engine Model Description, Rotation and Accessory Arrangement

GENERAL SPECIFICATIONS

	3-53	4-53	6V-53
Type	2 Cycle	2 Cycle	2 Cycle
Number of cylinders	3	4	6
Bore	3.875 in. (98mm)	3.875 in. (98 mm)	3.875 in. (98 mm)
Stroke	4.5 in. (114 mm)	4.5 in. (114 mm)	4.5 in. (114 mm)
Compression Ratio (nominal)(standard engines)	17 to 1	17 to 1	17 to 1
Compression Ratio (nominal)("N" engines)	21 to 1	21 to 1	21 to 1
Total Displacement - cubic inches	159	212	318
Total Displacement - litres	2.61	3.48	5.22
Number of main bearings	4	5	4

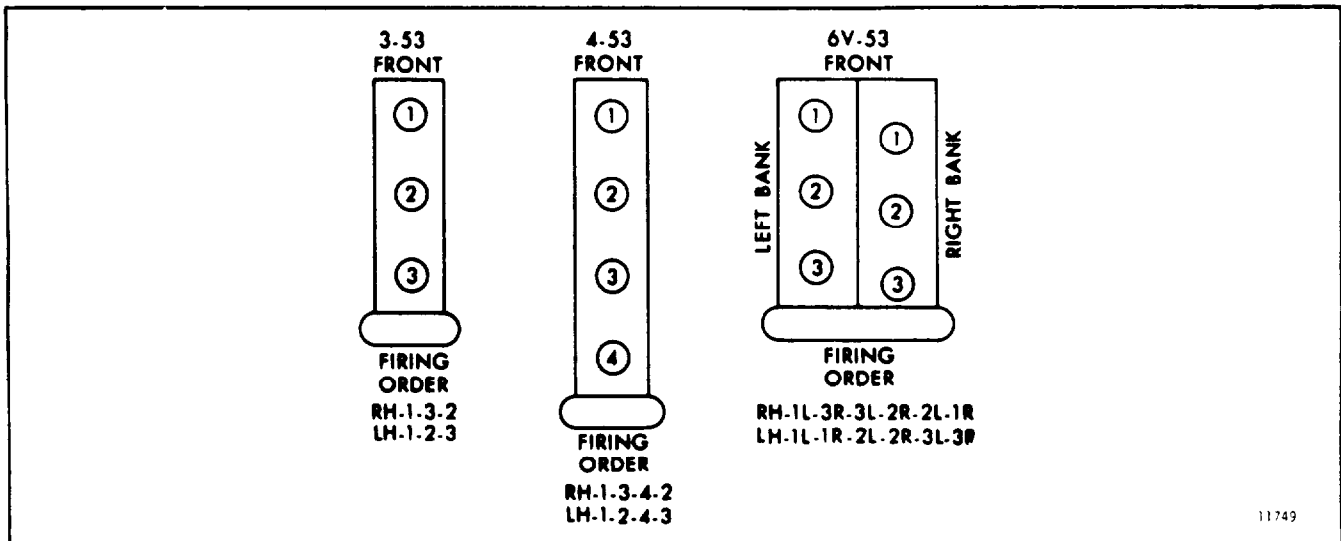


Fig. 4 - Series 53 Cylinder Arrangement

ENGINE MODEL AND SERIAL NUMBER DESIGNATION

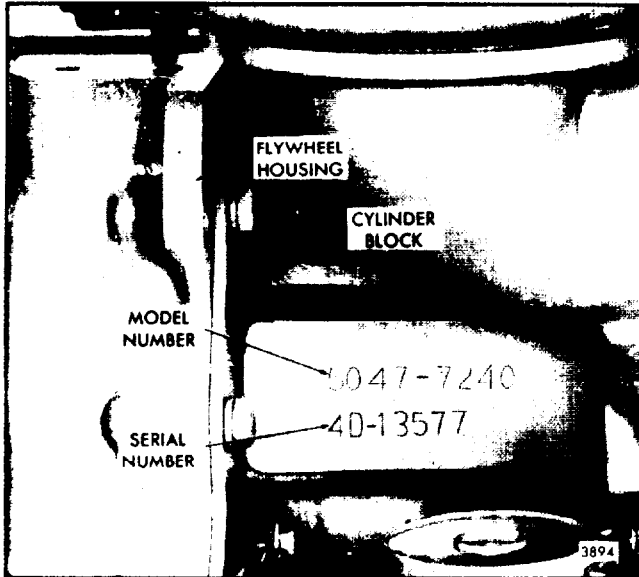


Fig. 5 - Typical Model and Serial Numbers as Stamped on Cylinder Block (In-Line Engine)

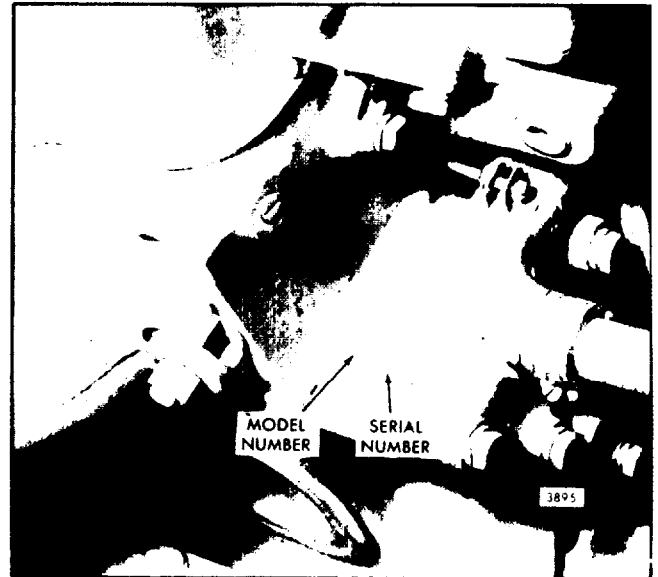


Fig. 6 - Typical Model and Serial Numbers as Stamped on Cylinder Block (6V Engine)

On the In-line engines, the model number and serial number are stamped on the right-hand side of the cylinder block in the upper rear corner (Fig. 5). The model number and serial number on the V-type engine is located on the top right-hand front corner of the cylinder block, as viewed from the rear of the engine (Fig. 6).

An option plate, attached to the valve rocker cover, is also stamped with the engine serial number and model number and, in addition, lists any optional equipment used on the engine (Fig. 7).

With any order for parts, the engine model number and serial number must be given. In addition, if a type number is shown on the option plate covering the equipment required, this number should also be included on the parts order.

Power take-off assemblies, torque converters, hydraulic marine gears, etc. may also carry name plates pertaining to the particular assembly to which they are attached. The information on these name plates is useful when ordering parts for these assemblies

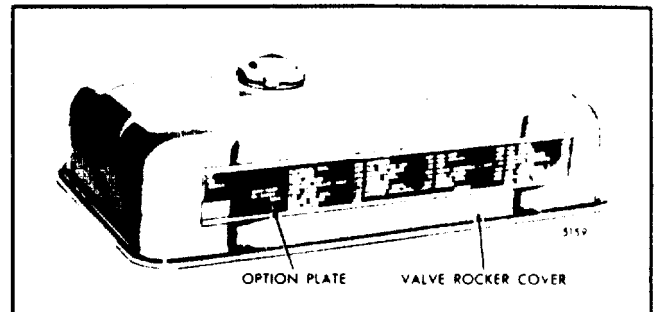



Fig. 7 - Option Plate

BUILT-IN PARTS BOOK


The Built-In Parts Book is an anodized aluminum plate (Option Plate) that fits into a retainer on the engine valve rocker cover and contains the necessary information required when ordering parts. It is recommended that the engine user read the section on the Built-In Parts Book in order to take full advantage

of the information provided on the engine option plate.

Numerous exploded view type illustrations are included to assist the user in identifying and ordering service parts.

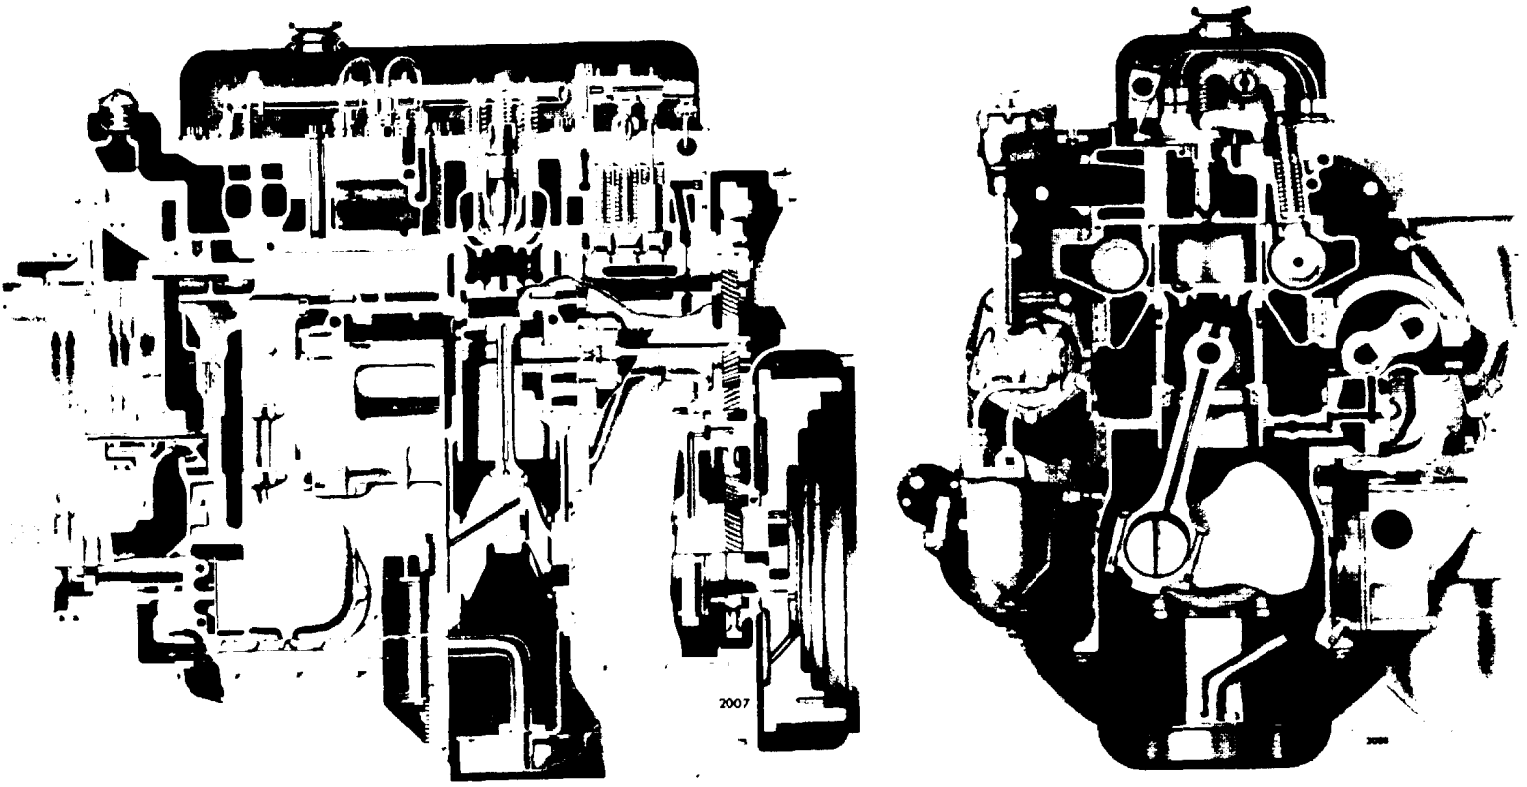

Cross Section Views of a Typical In-Line Engine

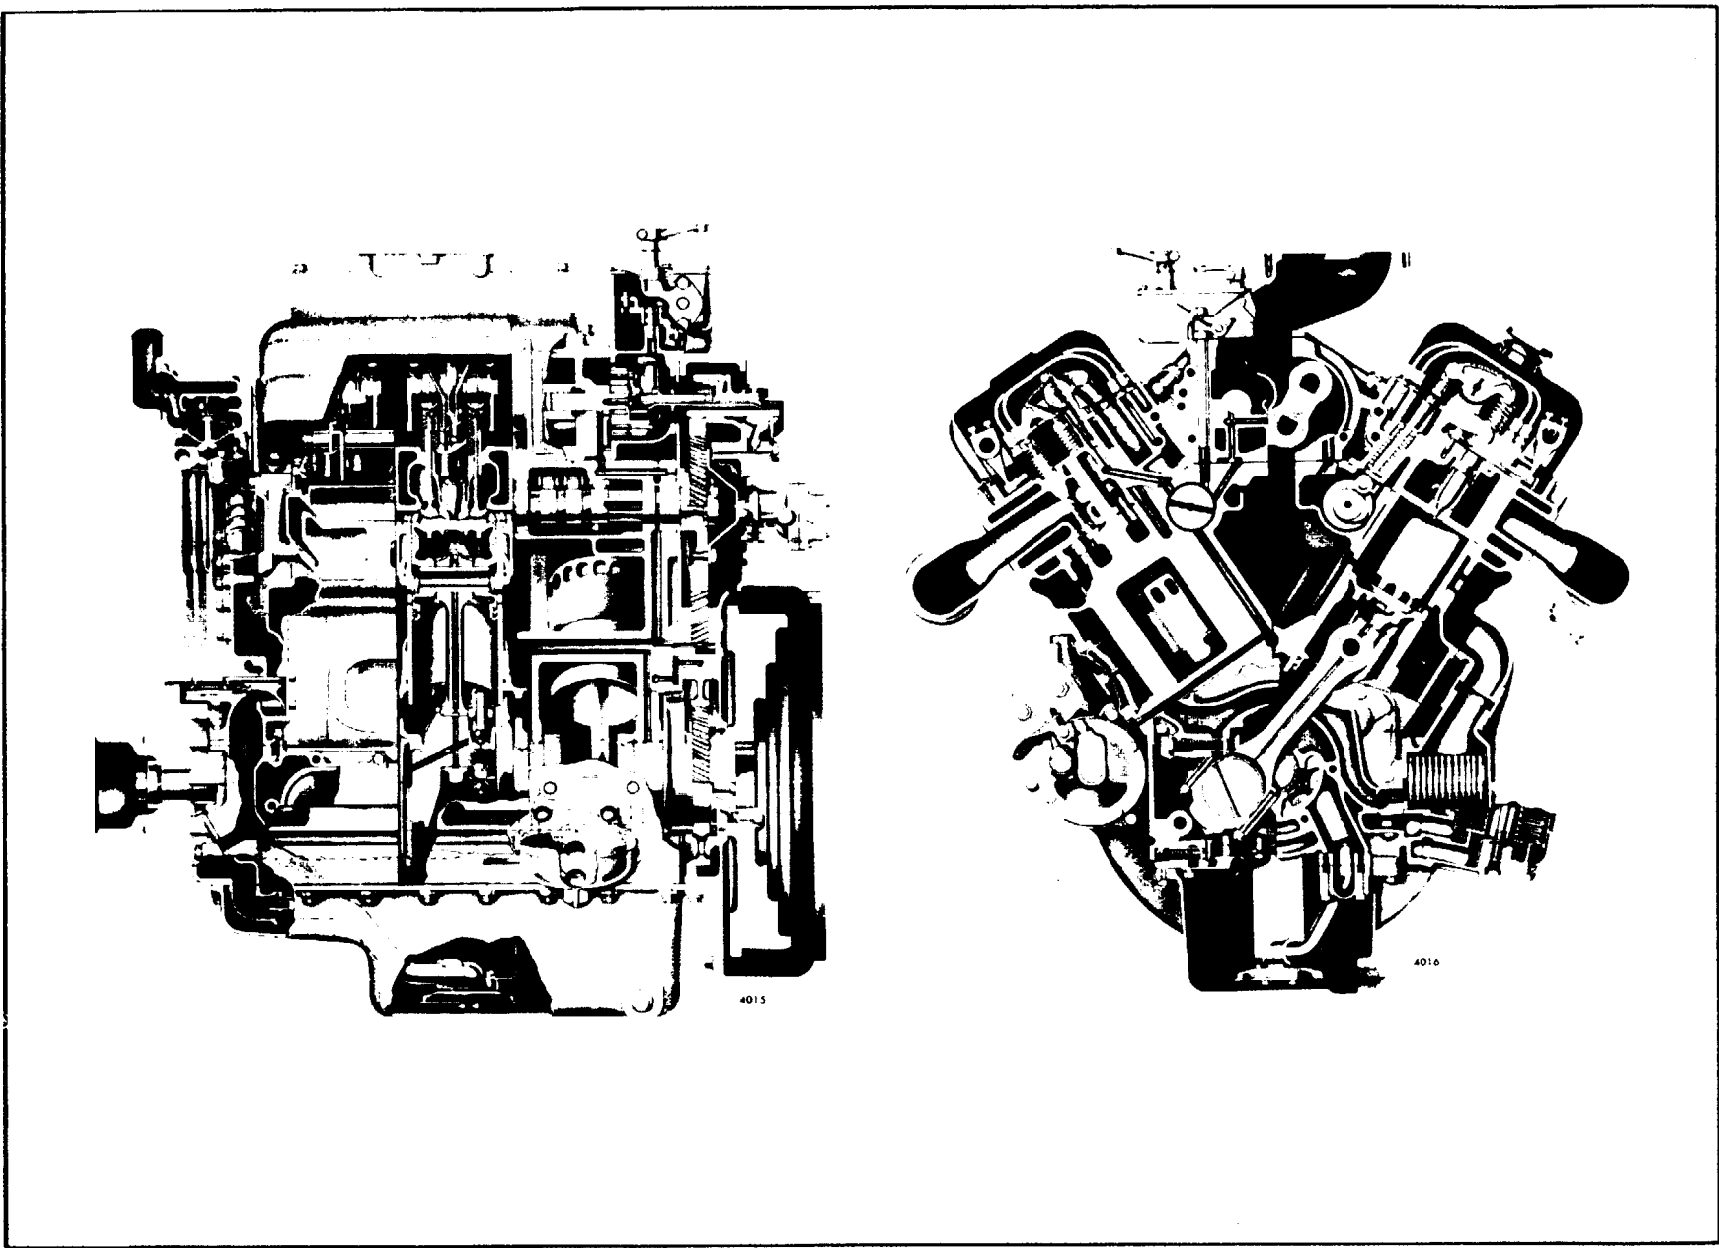

Cross Section Views of a Typical 6V-53 Engine

ENGINE SYSTEMS

The Series 53 Detroit Diesel engines incorporate four basic systems which direct the flow of fuel, air, lubricating oil, and engine coolant.

A brief description of each of these systems and their components, and the necessary maintenance and adjustment procedures are given in this manual.

FUEL SYSTEM

The fuel system (Figs. 1 and 2) consists of the fuel injectors, fuel pipes, fuel manifolds (integral with the cylinder head), fuel pump, fuel strainer, fuel filter and the necessary connecting fuel lines.

A check valve may be installed between the fuel strainer and the source of supply as optional equipment to prevent fuel drain back when the engine is not running.

On In-line engines, a restricted fitting is located in the cylinder head fuel return manifold outlet to maintain pressure within the fuel system. On V-type engines, this restricted fitting is located in the left-bank cylinder head.

Fuel Injector

The fuel injector combines in a single unit all of the parts necessary to provide complete and independent fuel injection at each cylinder. The injector creates the high pressure necessary for fuel injection, meters the proper amount of fuel, atomizes the fuel and times the injection into the combustion chamber.

Fuel is drawn from the supply tank through the fuel strainer and enters the fuel pump at the inlet side. Upon leaving the pump under pressure, the fuel is forced through the fuel filter and into the fuel inlet manifold where it passes through fuel pipes into the inlet side of each fuel injector. The fuel is filtered through elements in the injectors and atomized through small spray tip orifices into the combustion chamber. Surplus fuel, returning from the injectors, passes through the fuel return manifold and connecting fuel lines back to the fuel tank.

Since the injector is one of the most important and carefully constructed parts of the engine, it is recommended that the engine operator replace the injector as an assembly if it is not operating properly. Authorized Detroit Diesel Allison Service Outlets are properly equipped to service injectors.

The continuous flow of fuel through the injectors helps to cool the injectors and remove air from the fuel system

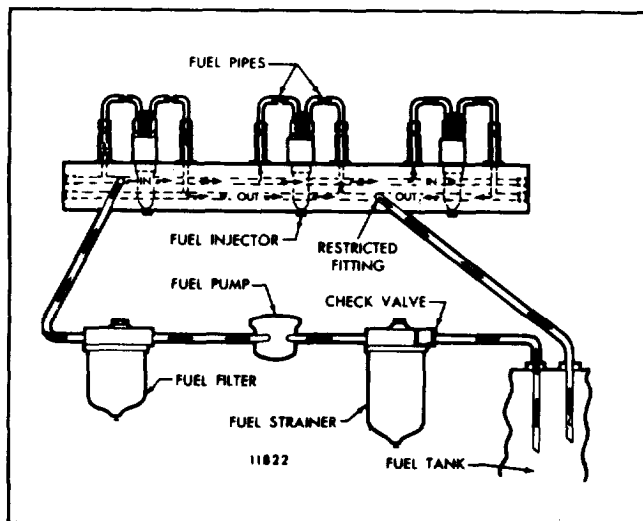


Fig. 1 - Schematic Diagram of Typical Fuel System - In-Line Engine

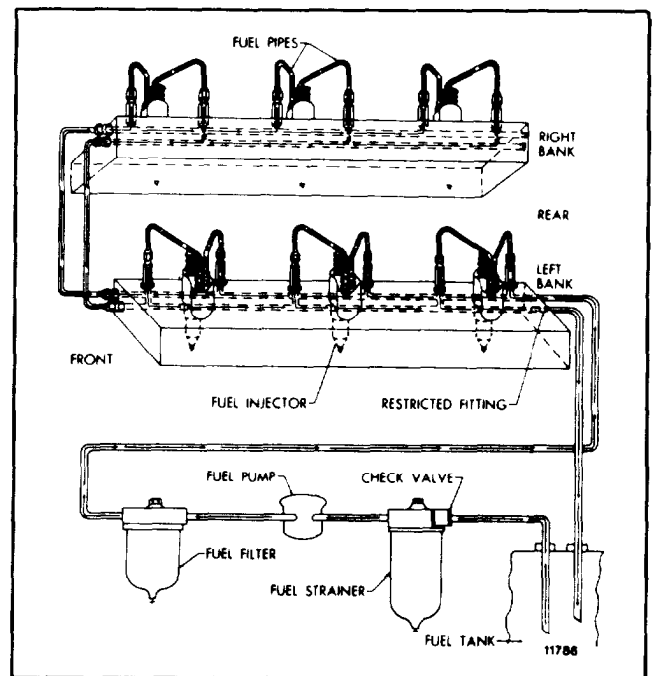


Fig. 2 - Schematic Diagram of Typical Fuel System - V-type Engine

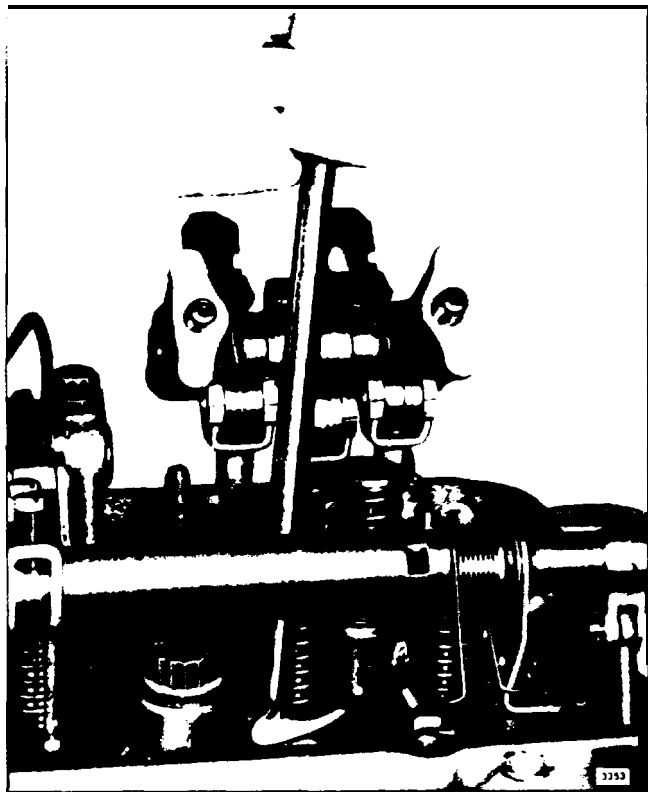


Fig. 3 - Removing Injector from Cylinder Head

### Remove Injector

An injector may be removed in the following manner:

1. Clean and remove the valve rocker cover.
2. Disconnect the fuel pipes from both the injector and the fuel connectors.
3. Immediately after removing the fuel pipes, cover the injector inlet and outlet fittings with shipping caps to prevent dirt from entering.
4. Turn the crankshaft manually in the direction of engine rotation or crank the engine with the starting motor, if necessary, until the rocker arms for the particular cylinder are aligned in a horizontal plane.

**CAUTION:** If a wrench is used on the crankshaft bolt at the front of the engine, do not turn the crankshaft in a left-hand direction of rotation as the bolt will be loosened. Remove the starting motor and use a pry bar against the teeth of the flywheel ring gear to turn the crankshaft.

5. Remove the two rocker shaft bracket bolts and swing the rocker arm assembly away from the injector and valves.

6. Remove the injector clamp bolt, washer and clamp.
7. Loosen the inner and outer adjusting screws on the injector rack control lever and slide the lever away from the injector.
8. Free the injector from its seat as shown in Fig. 3 and lift it from the cylinder head.
9. Cover the injector hole in the cylinder head to keep foreign particles out of the cylinder.

### Install Injector

Before installing an injector, be sure the beveled seat of the injector tube is free from dirt particles and carbon deposits.

A new or reconditioned injector may be installed by reversing the sequence of operations given above for removal.

Be sure the injector is filled with fuel oil. If necessary, add clean fuel oil at the inlet filter until it runs out the outlet filter.

**CAUTION:** On four valve cylinder heads, there is a possibility of damaging the exhaust valves if the exhaust valve bridge is not resting on the ends of the exhaust valves when tightening the rocker shaft bracket bolts. Therefore, note the position of the exhaust valve bridge before, during and after tightening the rocker shaft bracket bolts.

Do not tighten the injector clamp bolt to more than 20-25 lb-ft (27-34 Nm) torque, as this may cause the moving parts of the injector to bind. Tighten the rocker shaft bolts to 50-55 lb-ft (68-75 Nm) torque.

Align the fuel pipes and connect them to the injector and the fuel connectors. Use socket J 8932-01 and a torque wrench to tighten the fuel pipe nuts to 12-15 lb-ft (16-20 Nm) torque.

**CAUTION:** Do not bend the fuel pipes and do not exceed the specified torque. Excessive tightening will twist or fracture the flared ends of the fuel pipes and result in leaks. Lubricating oil diluted by fuel oil can cause serious damage to the engine bearings.

Time the injector, position the injector rack control lever and adjust the exhaust valve clearance (cold setting) as outlined in the engine tune-up procedure. If all of the injectors have been replaced, perform a complete tune-up on the engine.

### Fuel Pump

A positive displacement gear-type fuel pump is attached to the governor or blower on the In-line engines and to the flywheel housing on the V-type engines.

A spring-loaded relief valve, incorporated in the pump body, normally remains in the closed position, operating only when the pressure on the outlet side (to the fuel filter) becomes excessive due to a plugged filter or fuel line.

The fuel pump incorporates two oil seals. Two tapped holes are provided in the underside of the pump body, between the oil seals, to permit a drain tube to be attached. If fuel leakage exceeds one drop per minute, the seals must be replaced. An authorized Detroit Diesel Allison Service Outlet is properly equipped to replace the seals.

Fuel pumps are furnished in either left or right-hand rotation, according to the engine model, and are stamped RH or LH. These pumps are not interchangeable and cannot be rebuilt to operate in an opposite rotation.

### Fuel Strainer and Fuel Filter

A replaceable-element type fuel strainer and fuel filter (Fig. 4) are used in the fuel system to remove impurities from the fuel. The strainer removes the larger particles and the filter removes the small foreign particles.

The fuel strainer and fuel filter are basically identical in construction, both consisting of a cover, shell and replaceable element. Since the fuel strainer is placed between the fuel supply tank and the fuel pump, it functions under suction; the fuel filter, which is installed between the fuel pump and the fuel inlet manifold in the cylinder head, operates under pressure.

Replace the elements as follows:

1. With the engine shut down, place a suitable container under the fuel strainer or filter and open the drain cock. The fuel will drain more freely if the cover nut is loosened slightly.
2. Support the shell, unscrew the cover nut and remove the shell and element.
3. Remove and discard the element and gasket. Clean the shell with fuel oil and dry it with a cloth or compressed air.
4. Place a new element, which has been thoroughly

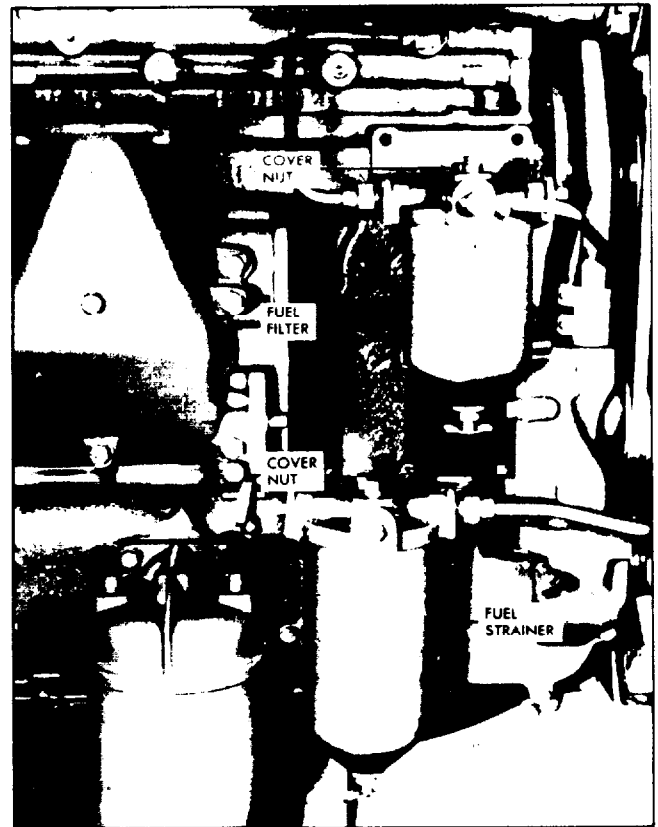


Fig. 4 - Typical Fuel Strainer and Filter Mounting

soaked in clean fuel oil, over the stud and push it down on the seat. Close the drain cock and fill the shell approximately two-thirds full with clean fuel oil.

5. Affix a new shell gasket, place the shell and element into position under the cover and start the cover nut on the shell stud.
6. Tighten the cover nut only enough to prevent fuel leakage.
7. Remove the plug in the strainer or filter cover and fill the shell with fuel. Fuel system primer J 5956 may be used to prime the fuel system.
8. Start and operate the engine and check the fuel system for leaks.

### Spin-On Type Fuel Filter

A spin-on fuel strainer and fuel filter (Fig. 5) is used on certain engines. The spin-on filter cartridge consists of a shell, element and gasket combined into a unitized replacement assembly. No separate springs or seats are required to support the filters.



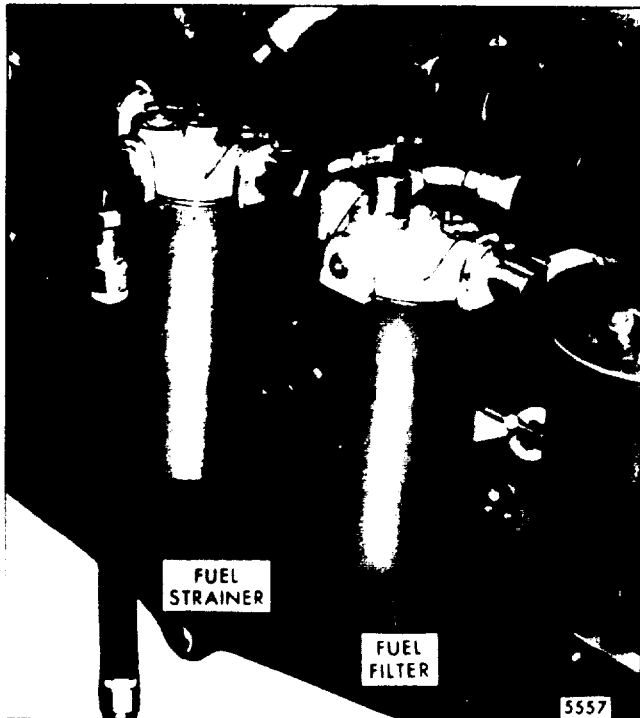


Fig. 5 - Typical Spin-On Type Fuel Strainer and Fuel Filter Mounting

The filter covers incorporate a threaded sleeve to accept the spin-on filter cartridges. The word "Primary" is cast on the fuel strainer cover and the

word "Secondary" is cast on the fuel filter cover for identification.

No drain cocks are provided on the spin-on filters. Where water is a problem, it is recommended that a water separator be installed. Otherwise, residue may be drained by removing and inverting the filter. Refill the filter with clean fuel oil before reinstalling it.

A 1" diameter twelve-point nut on the bottom of the filter is provided to facilitate removal and installation.

Replace the filter as follows:

1. Unscrew the filter (or strainer) and discard it.
2. Fill a new filter replacement cartridge about two-thirds full with clean fuel oil. Coat the seal gasket lightly with clean fuel oil.
3. Install the new filter assembly and tighten it to two-thirds of a turn beyond gasket contact.
4. Start the engine and check for leaks.

#### Fuel Tank

Refill the fuel tank at the end of each day's operation to prevent condensation from contaminating the fuel.

**CAUTION:** A galvanized steel tank should never be used for fuel storage because the fuel oil reacts chemically with the zinc coating to form powdery flakes which quickly clog the fuel strainer and filter and damage the fuel pump and the fuel injectors.

## AIR SYSTEM

In the scavenging system used in two-cycle engines, illustrated in Figs. 6 and 7, a charge of air is forced into the cylinders by the blower and thoroughly sweeps out all of the burned gases through the exhaust valve ports. This air also helps to cool the internal engine parts, particularly the exhaust valves. At the beginning of the compression stroke, each cylinder is filled with fresh, clean air which provides for efficient combustion.

The air, entering the blower from the air silencer or air cleaner, is picked up by the blower rotor lobes and carried to the discharge side of the blower. The continuous discharge of fresh air from the blower enters the air chamber of the cylinder block and sweeps through the intake ports of the cylinder liners.

The angle of the ports in the cylinder liner creates a uniform swirling motion to the intake air as it enters the cylinder. This motion persists throughout the compression stroke and facilitates scavenging and combustion.

## Air Cleaners

Several types of air cleaners are available for use with industrial engines. The light-duty oil bath air cleaner is used on most models. However, a heavy-duty oil bath type or a dry type air cleaner may be installed where the engine is operating in heavy dust concentrations.

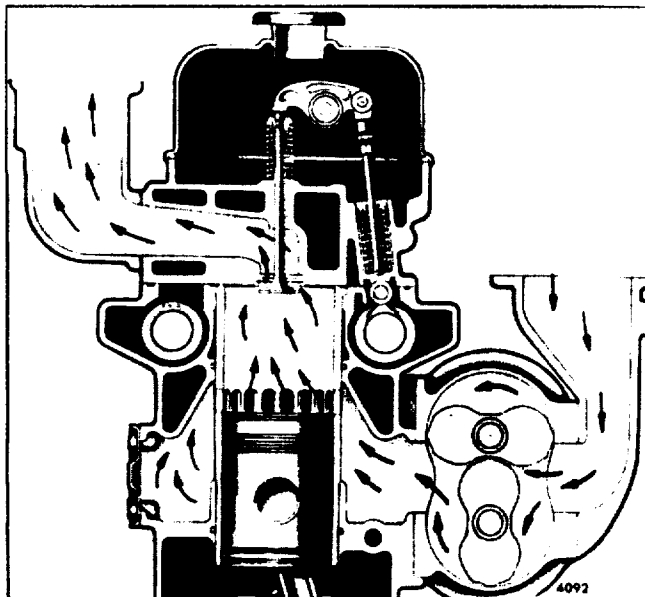


Fig. 6 - Air Intake System Through Blower and Engine (In-line Engine)

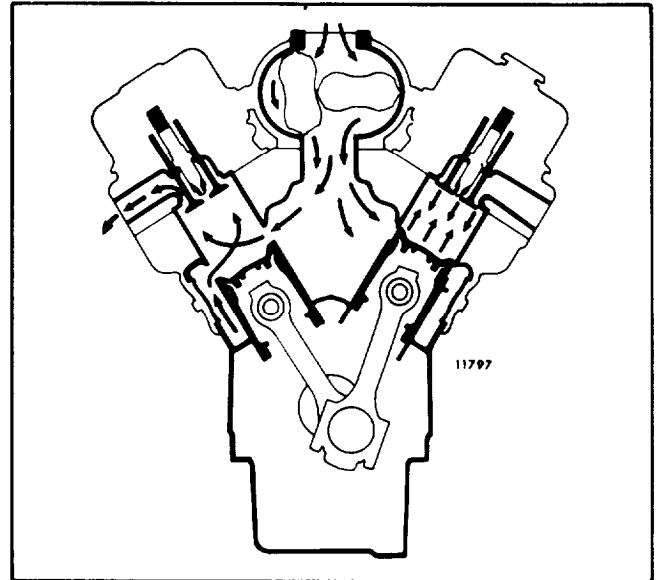


Fig. 7 - Air Intake System Through Blower and Engine (6V-53 Engine)

The air cleaners are designed for fast, easy disassembly to facilitate efficient servicing. Maximum protection of the engine against dust and other forms of air contamination is possible if the air cleaner is serviced at regular intervals.

The *light-duty oil bath type air cleaner* (Fig. 8) consists of a metal wool cleaning element supported inside of a housing which contains an oil reservoir. A chamber beneath the oil reservoir serves as a silencer for the incoming air to the blower. Air is drawn into the cleaner by the blower and passes over the top of the oil bath, where a major portion of the dirt is trapped, then up through the metal wool, where the finer particles are removed, and then down the central duct to the blower.

The *heavy-duty oil bath type air cleaner* (Fig. 9) consists of the body and fixed filter assembly which filters the air and condenses the oil from the air stream so that only dry air enters the engine. The condensed oil is returned to the cup where the dirt settles out of the oil and the oil is recirculated. A removable element assembly removes a major part of the dust from the air stream thereby decreasing the dust load to the fixed element. An inner cup, which can be removed from the outer (oil cup), acts as a baffle in directing the oil-laden air to the element and also controls the amount of oil in circulation and meters the oil to the element. The oil cup supports the inner cup and is a reservoir for oil and a settling chamber for dirt.

Service the *light-duty oil bath air cleaner* as follows:

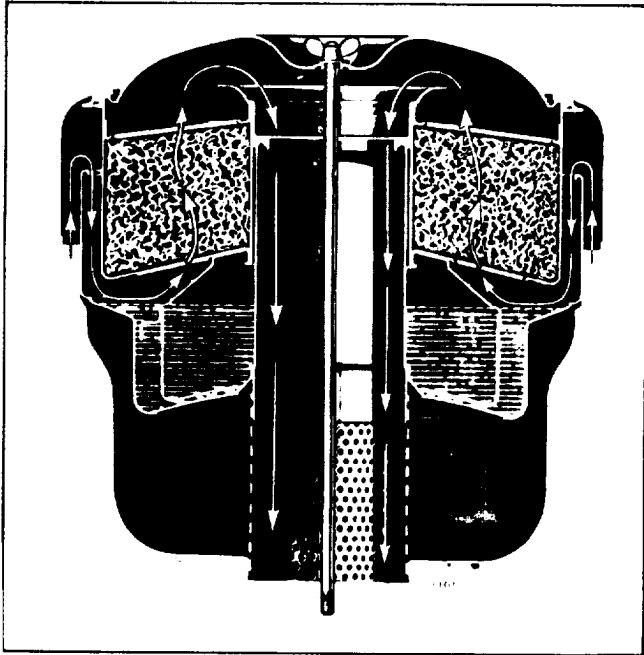


Fig. 8 - Light-Duty Oil Bath Air Cleaner

1. Loosen the wing bolt and remove the air cleaner assembly from the air inlet housing. The cleaner may then be separated into two sections; the upper section or body assembly contains the filter element, the lower section consists of the oil cup, removable inner cup or baffle and the center tube.
2. Soak the body assembly and element in fuel oil to loosen the dirt; then flush the element with clean fuel oil and allow it to drain thoroughly.
3. Pour out the oil, separate the inner cup or baffle from the oil cup, remove the sludge and wipe the baffle and outer cup clean.
4. Push a lint-free cloth through the center tube to remove dirt or oil.
5. Clean and check all of the gaskets and sealing surfaces to ensure air tight seals.
6. Refill the oil cup to the oil level mark only, install the baffle, and reassemble the air cleaner.
7. Check the air inlet housing before installing the air cleaner assembly on the engine. The inlet will be dirty if air cleaner servicing has been neglected or if dust-laden air has been leaking past the air cleaner or air inlet housing seals.
8. Make sure that the air cleaner is seated properly on the inlet housing and the seal is installed correctly.

Tighten the wing bolt until the air cleaner is securely mounted.

Service the *heavy-duty oil bath air cleaner* as follows:

1. Loosen the wing nuts and detach the lower portion of the air cleaner assembly.
2. Remove the detachable screen by loosening the wing nuts and rotating the screen one-quarter turn.

One of the most important steps in properly cleaning the tray type oil bath air cleaner is a step that is most overlooked. Unless the filter tray is thoroughly cleaned, satisfactory performance of the engine cannot be realized. The presence of fibrous material found in the air is often underestimated and is the main cause of the malfunctioning of heavy-duty air cleaners. This material comes from plants and trees during their budding season and later from airborne seed from the same sources. Figure 10 illustrates the severity of plugging in a tray that is 50% plugged. The solid black areas in the mesh are accumulations of this fibrous material. When a tray is plugged in this manner, washing in a solvent or similar washing solution will not clean it satisfactorily. It must be blown out with high pressure air or steam to remove the material that accumulates between the layers of screening. When a

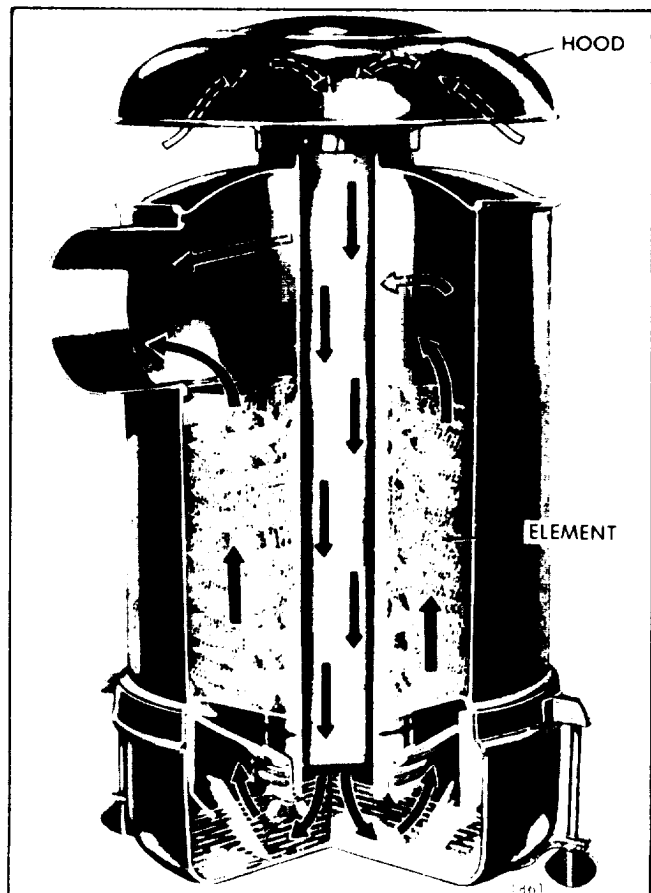


Fig. 9 - Heavy-Duty Oil Bath Air Cleaner

clean tray is held up to the light, an even pattern of light should be visible. It may be necessary, only as a last resort, to burn off the lint. Extreme care must be taken to prevent melting the galvanized coating in the tray screens. Some trays have equally spaced holes in the retaining baffle. Check to make sure that they are clean and open. Figure 11 illustrates a thoroughly cleaned tray. The dark spots in the mesh indicate the close overlapping of the mesh and emphasize the need for using compressed air or steam. It is suggested that users of heavy-duty air cleaners have a spare tray on hand to replace the tray that requires cleaning. Having an extra tray available makes for better service and the dirty tray can be cleaned thoroughly as recommended. Spare trays are well worth their investment.

3. Pour out the oil, separate the inner cup or baffle from the oil or outer cup, remove the sludge and wipe the baffle and outer cup clean.

4. Clean and inspect the gaskets and sealing surfaces to ensure an air tight seal.

5. Reinstall the baffle in the oil cup and refill to the proper oil level with the same grade of oil being used in the engine.

6. Remove the hood and clean by brushing, or by blowing out with compressed air. Push a lint-free cloth through the center tube to remove dirt or oil from the walls.

7. Inspect the lower portion of the air cleaner body

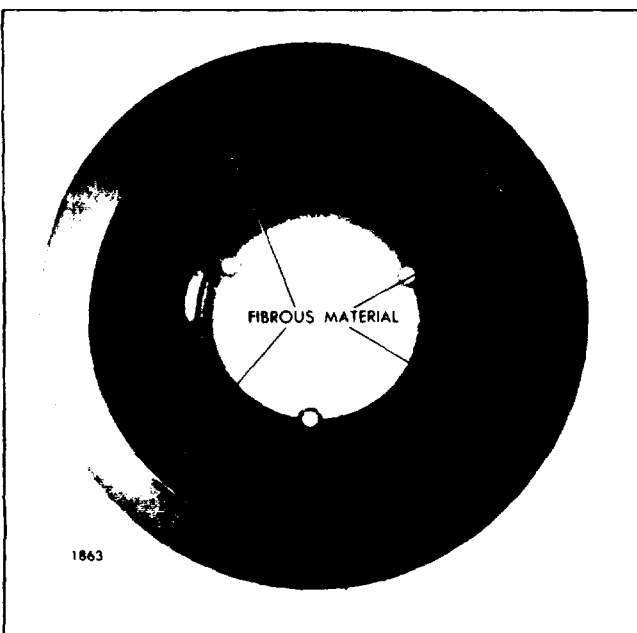


Fig. 10- Air Cleaner Tray (Plugged)

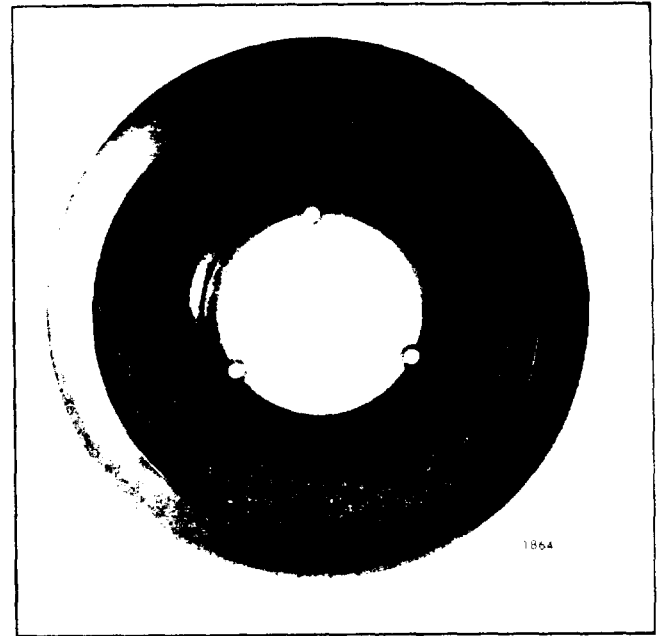


Fig. 11 - Air Cleaner Tray (Clean)

and center tube each time the oil cup is serviced. If there are any indications of plugging, the body assembly should be removed from the engine and cleaned by soaking and then flushing with clean fuel oil. Allow the unit to drain thoroughly.

8. Place the removable element in the body assembly. Install the body if it was removed from the engine for servicing.

9. Install the outer cup and baffle assembly. Be sure the cup is tightly secured to the body assembly.

All oil bath air cleaners should be serviced as operating conditions warrant. At no time should more than 1/2" of "sludge" be allowed to form in the oil cup or the area used for sludge deposit, nor should the oil cup be filled above the oil level mark.

The *United Specialties dry-type air cleaner* shown in Fig. 12 consists of a body, dust unloader and element clamped to a base.

Air is drawn through the cleaner intake pipe and is automatically set into a circular motion. This positive spinning of the dirty air "throws out" the heavier particles of dust and dirt where they are collected in the dust port and then expelled through the dust unloader. The circular action continues even during low air intake at engine idle speeds.

The *United Specialties dry-type air cleaner* should be serviced, as operating conditions warrant, as follows:

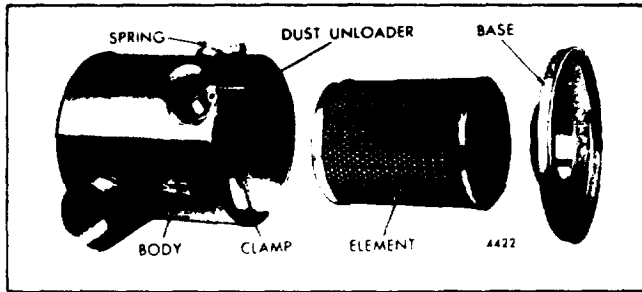


Fig. 12 - United Specialties Dry Type Air Cleaner

1. Loosen the clamp screw and check the dust unloader for obstruction or damage.
2. Unlock the spring clamps that hold the cleaner body to the cleaner base which is bolted to the air inlet housing. Remove the body and then remove the element from the cleaner base.
3. The paper pleated air cleaner element can be cleaned as follows:

- a. For a temporary expedient in the field, tap the side or end of the element carefully against the palm of your hand.

**CAUTION:** Do not tap the element against a hard surface. This could damage the element.

- b. Compressed air can be used when the major contaminant is dust. The compressed air (not to exceed 100 psi) should be blown through the element in a direction opposite to the normal air flow. Insert the air nozzle inside of the element and gently tap and blow out the dust with air. When cleaning the dust from the outside of the element, hold the nozzle at least 6" from the element.
- c. Wash the element if compressed air is not available, or when the contaminant is carbon, soot, oily vapor or dirt which cannot be removed with compressed air.
- d. Agitate the element in warm water containing a non-sudsing detergent.

**CAUTION:** Do not use water hotter than your hand can stand, solvents, oil, fuel oil or gasoline.

Preceding the washing, it helps to direct air (not exceeding 100 psi or 689 kPa) through the element in a direction opposite the normal air flow to dislodge as much dust as possible. Reverse flush with a stream of water (not exceeding 40 psi or 276 kPa) until the water

runs clean to rinse all loosened foreign material from the element. Shake out excess water from the element and allow it to dry thoroughly.

**CAUTION:** Do not attempt to remove excess water by using compressed air.

4. Inspect the cleaned element with a light bulb after each cleaning for damage or rupture. The slightest break in the element will admit sufficient airborne dirt to cause rapid failure of piston rings. If necessary, replace the element.
5. Inspect the gasket on the end of the element. If the gasket is damaged or missing, replace the element.
6. Install the element on the base with the gasket side of the element down against the base. Place the body over the element and base and tighten the spring clamps by hand.
7. Replace the element after 10 washings or 1 year of service, whichever comes first, or any time damage is noted.
8. Install the dust unloader and tighten the clamp.

The *Farr dry-type air cleaner* (Fig. 13) is designed to provide highly efficient air filtration under all operating conditions and is not affected by engine speed. The cleaner assembly consists of a cleaner panel with a replaceable impregnated paper filter element.

The cleaner panel and replaceable filter element are held together in a steel housing with fasteners.

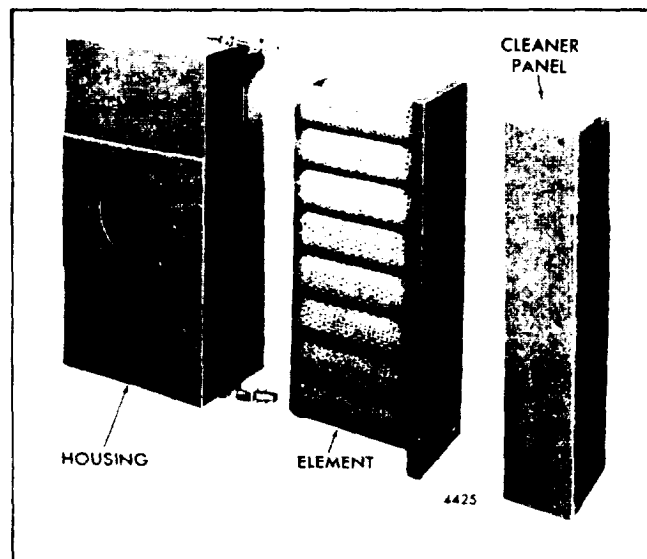


Fig. 13 - Farr Dry Type Air Cleaner

The deflector vanes impart a swirling motion to the air entering the air cleaner and centrifuge the dust particles against the walls of the tubes. The dust particles are then carried to the dust bin at the bottom of the cleaner by approximately 10% bleed-off air and are finally discharged into the atmosphere. The cleaner panel is fully effective at either high or low velocities.

The remainder of the air in the cleaner reverses direction and spirals back along the discharge tubes again centrifuging the air. The filtered air then reverses direction again and enters the replaceable filter element through the center portion of the discharge tubes. The air is filtered once more as it passes through the pleats of the impregnated paper element before leaving the outlet port of the cleaner housing.

The cleaner panel tends to be self-cleaning. However, it should be inspected and any accumulated foreign material removed during the periodic replacement of the impregnated paper filter element. Overloading of the paper element will not cause dirt particles to bypass the filter and enter the engine, but will result in starving the engine for air.

The filter element should be replaced, as operating conditions warrant, as follows:

1. Loosen the wing nuts on the fasteners and swing the retaining bolts away from the cleaner panel.
2. Lift the cleaner panel away from the housing and inspect it. Clean out any accumulated foreign material.
3. Withdraw the paper filter element and discard it.
4. Install a new filter element.
5. Install the cleaner panel and secure it in place with the fasteners.

### Air Silencer

The air silencer, used on some marine engines, is bolted to the intake side of the blower housing. The silencer has a perforated steel partition welded in place parallel with the outside faces, enclosing flame-proof, felted cotton waste which serves as a silencer for air entering the blower.

While no servicing is required on the air silencer proper, it may be removed when necessary to replace the air inlet screen. This screen is used to filter out any

large foreign particles which might seriously damage the blower assembly.

### Air Box Drains

During normal engine operation, water vapor from the air charge, as well as a slight amount of fuel and lubricating oil fumes, condenses and, settles on the bottom of the air box. This condensation is removed by the air box pressure through air box drain tubes mounted on the side of the cylinder block.

The air box drains must be open at all times. With the engine running, a periodic check is recommended for air flow from the air box drain tubes. Liquid accumulation on the bottom of the air box indicates a drain tube may be plugged. Such accumulations can be seen by removing the cylinder block air box cover(s) and should be wiped out with rags or blown out with compressed air. Then remove the drain tubes and connectors from the cylinder block and clean them thoroughly.

Some engines are equipped with an air box drain check valve. Refer to the *Lubrication and Preventive Maintenance* section of this manual for service instructions.

### Crankcase Ventilation

Harmful vapors which may form within the engine are removed from the crankcase, gear train and valve compartment by a continuous, pressurized ventilation system.

A slight pressure is maintained within the engine crankcase by the seepage of a small amount of air from the airbox past the piston rings. This air sweeps up through the engine and is drawn off through a crankcase breather.

In-line engines are equipped with a breather assembly which is mounted on the rocker cover or the flywheel housing. The 6V engines incorporate a breather assembly mounted inside of the upper engine front cover.

The wire mesh pad (element) in the breather assemblies should be cleaned if excessive crankcase pressure is observed. If it is necessary to clean the element, remove the breather housing from the flywheel housing (In-line engines) and the upper engine front cover (6V engines). Wash the element in fuel oil and dry it with compressed air. Reinstall the element and the breather assembly.

LUBRICATING SYSTEM

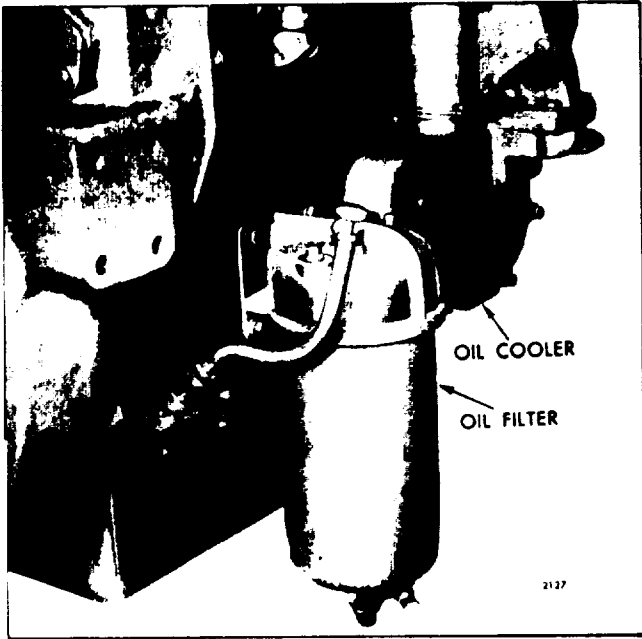


Fig. 14 - Typical In-Line Engine Oil Filter Mounting

The Series 53 engine lubricating system, illustrated in Figs. 16 and 17, includes an oil intake screen and tube assembly, an oil pump, a pressure regulator, a full-flow oil filter or by-pass filter with by-pass valve, and an oil cooler with a by-pass valve.

Lubricating oil from the pump passes from the lower front cover through short oil galleries in the cylinder block. From the block, the oil flows to the full-flow oil filter, then through the oil cooler (if used) and back into the front engine cover and cylinder block oil galleries for distribution to the various engine bearings. The drains from the cylinder head(s) and other engine parts lead back to the oil pan.

Oil pressure is regulated by a pressure relief valve mounted in the engine front cover. Oil cooler and oil filter by-pass valves prevent the stoppage of oil flow if these items become plugged.

**Oil Filters**

Each engine is equipped with a full-flow type lubricating oil filter (Figs. 14 and 15). If additional filtering is required, a by-pass type oil filter may also be installed.

All of the oil supplied to the engine passes through the

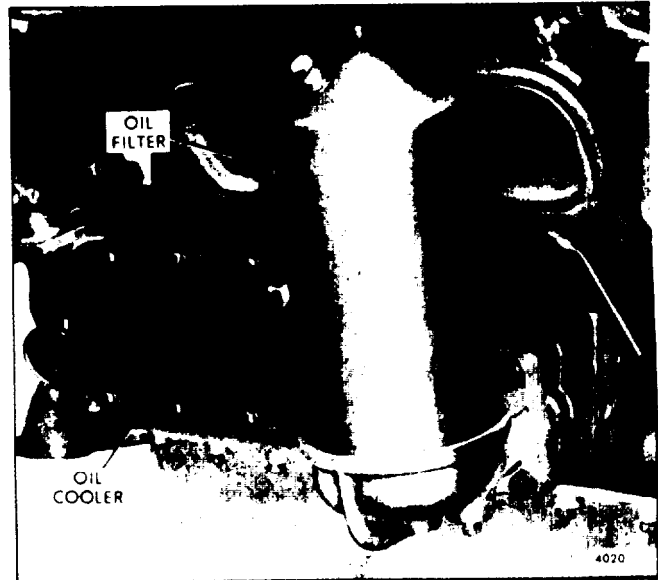


Fig. 15 - Typical V-Type Engine Oil Filter Mounting

full-flow filter that removes the larger foreign particles without restricting the normal flow of oil.

The by-pass filter assembly, when used, continually filters a portion of the lubricating oil that is being bled off the oil gallery when the engine is running. Eventually all of the oil passes through the filter, filtering out minute foreign particles that may be present.

The lubricating oil filter elements should be replaced, each time the engine oil is changed, as follows:

1. Remove the drain plug and drain the oil.
2. The filter shell, element and stud may be detached as an assembly, after removing the center stud from the base. Discard the gasket.
3. Clean the filter base.
4. Discard the used element, wipe out the filter shell and install a new element on the center stud.
5. Place a new gasket in the filter base, position the shell and element assembly on the gasket and tighten the center stud carefully to prevent damaging the gasket or center stud.
6. Install the drain plug and, after the engine is started, check for oil leaks.

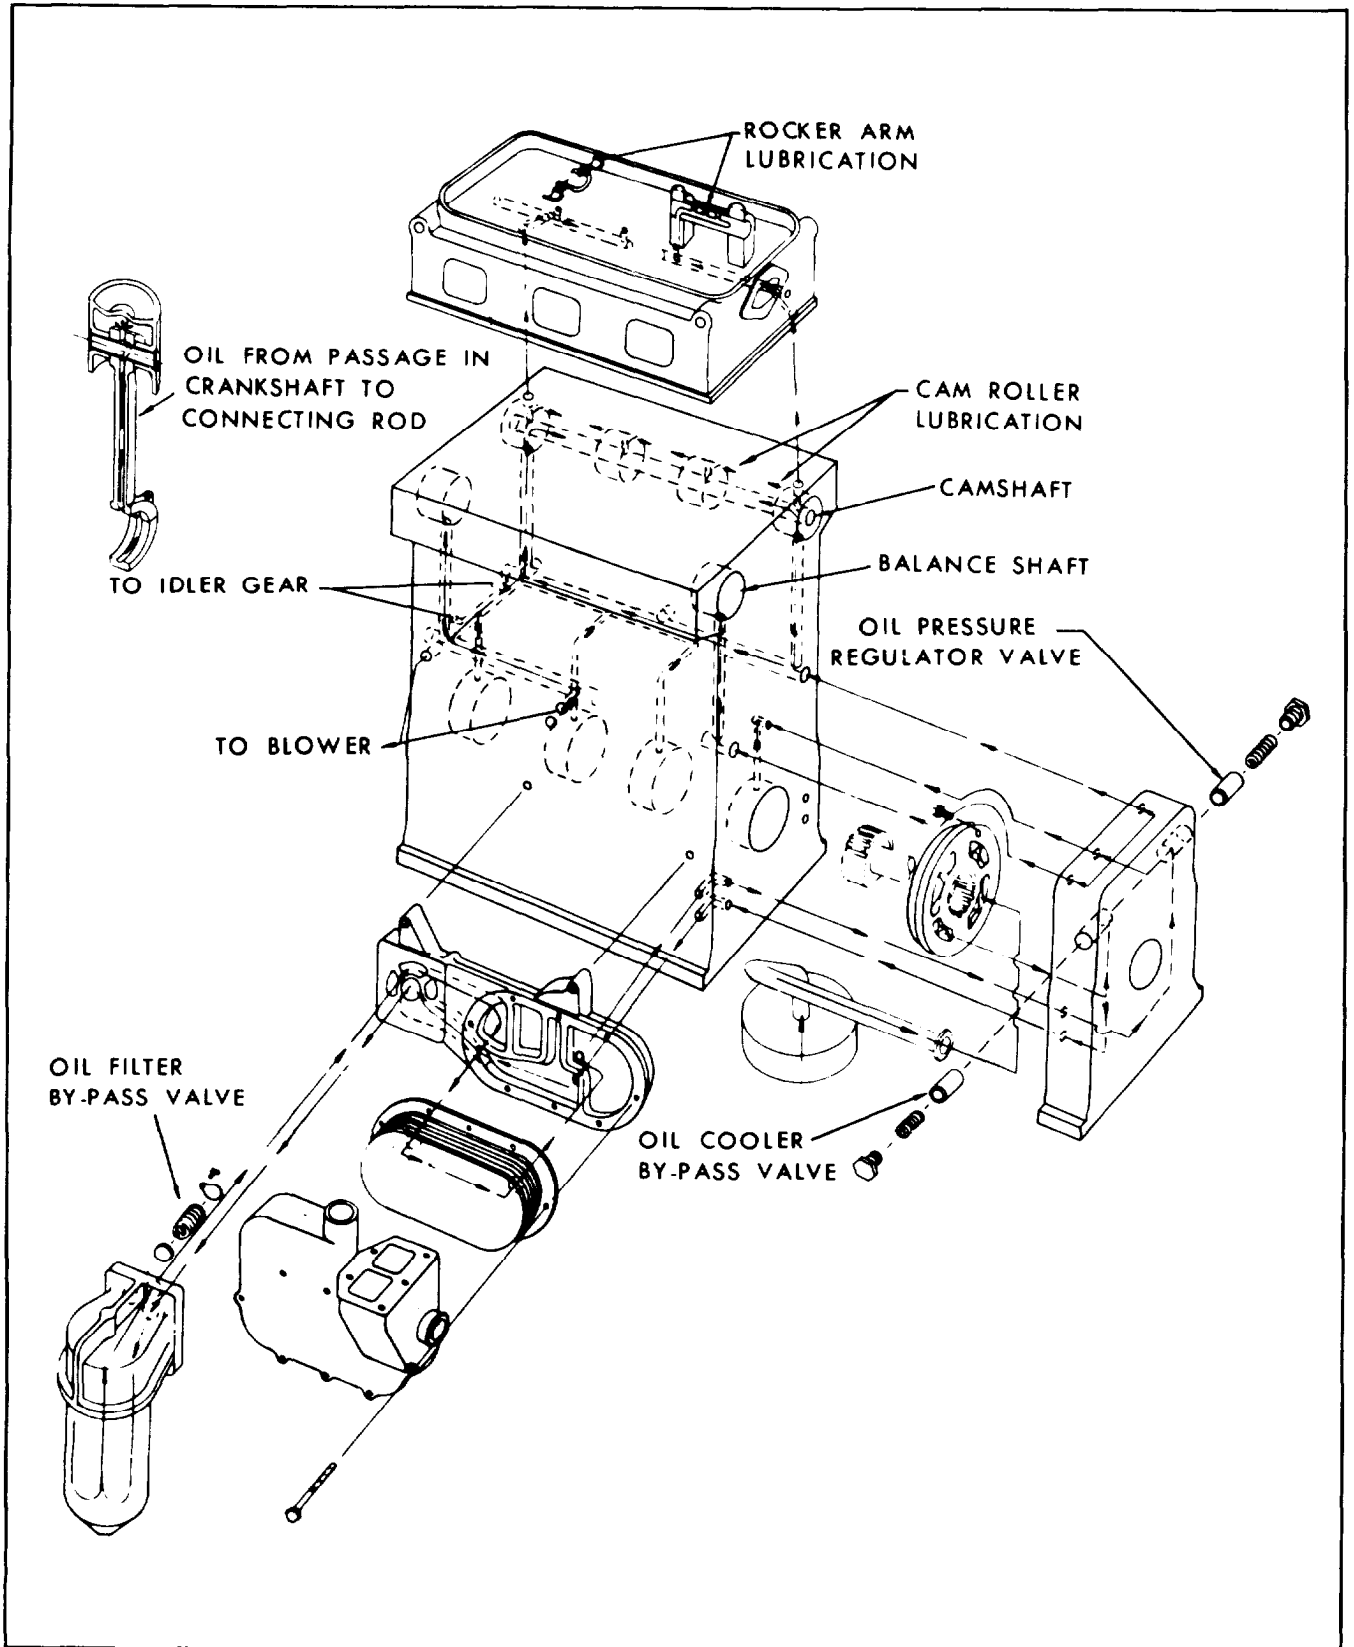


Fig. 16 - Schematic Diagram of Typical In-Line Engine Lubricating System



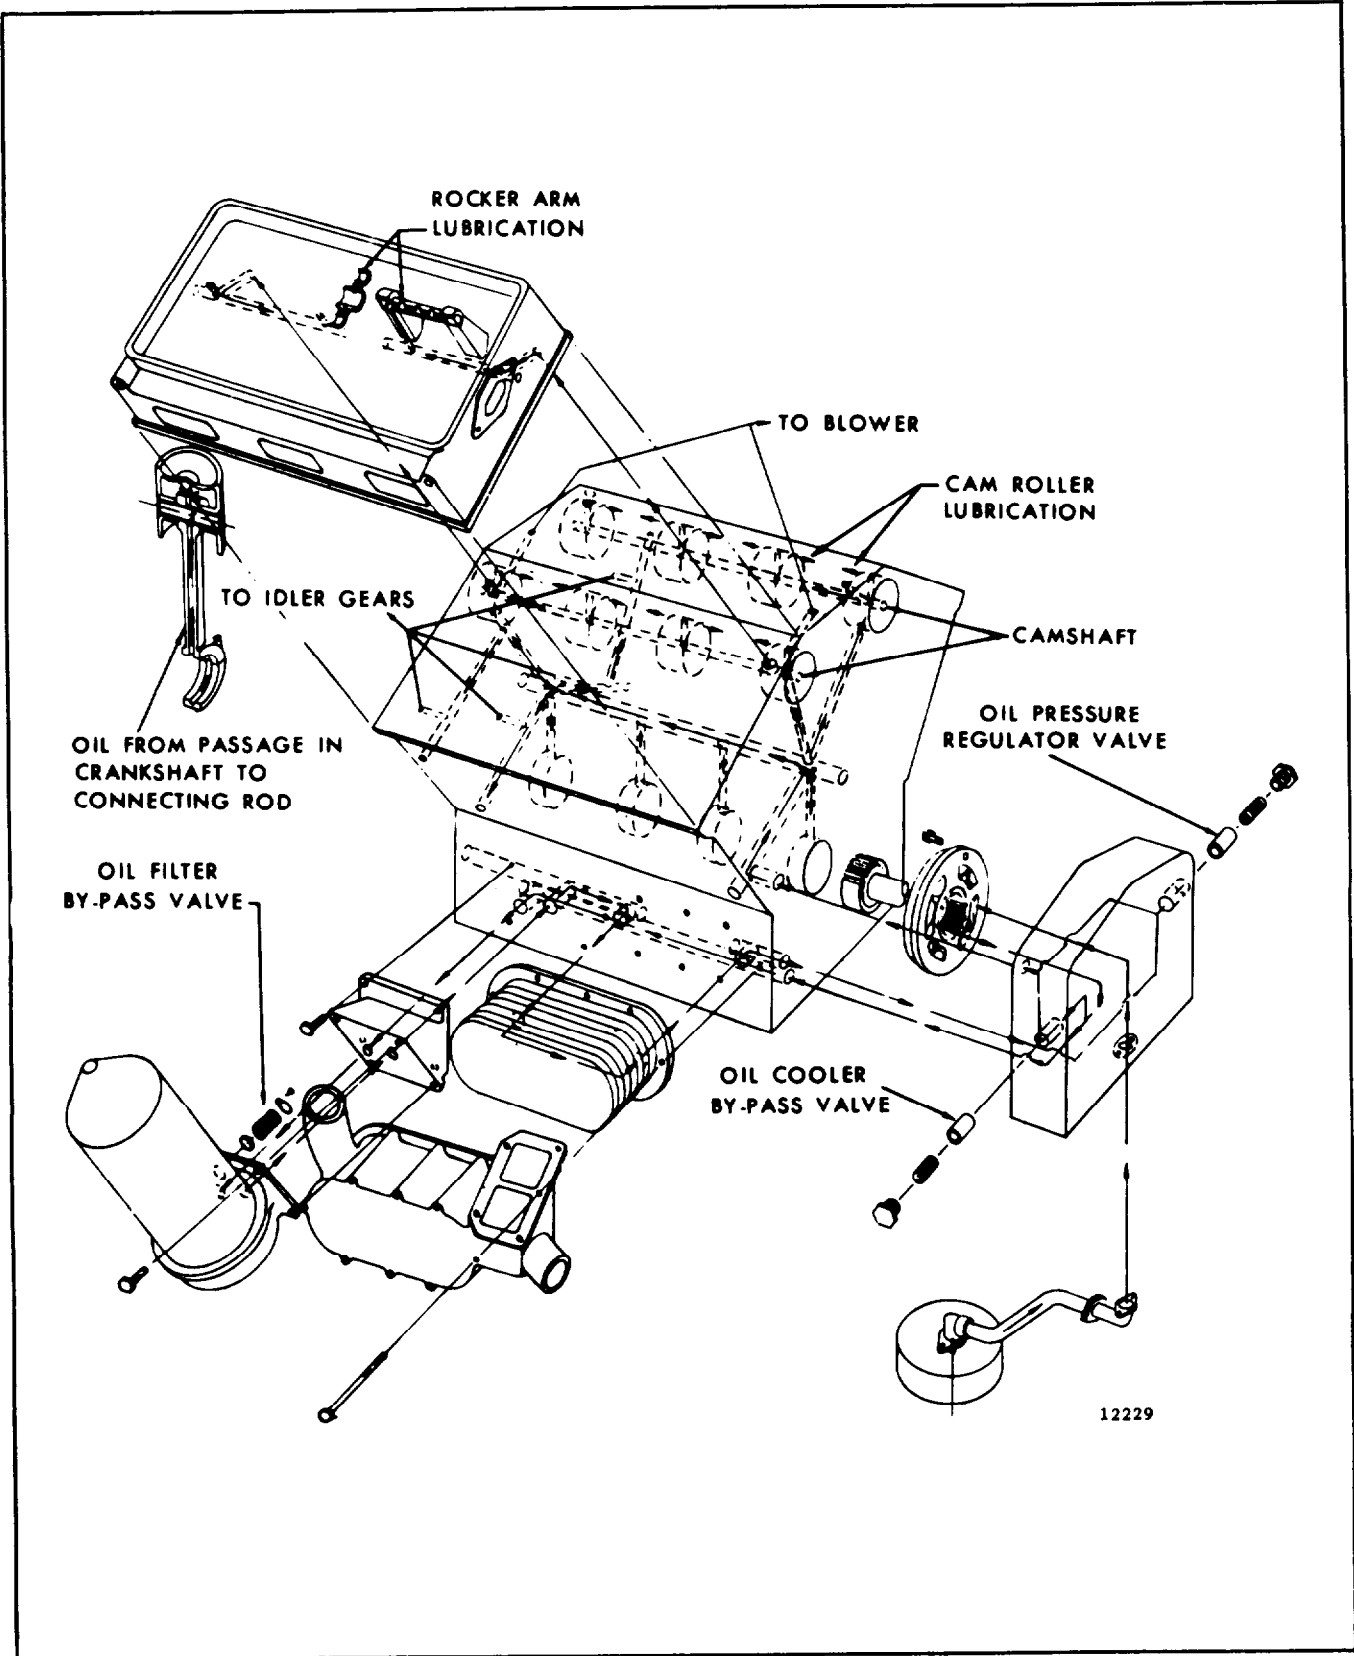


Fig. 17 - Schematic Diagram of Typical 6V Engine Lubricating System

## COOLING SYSTEM

One of three different types of cooling systems is used on a Series 53 engine: radiator and fan, heat exchanger and raw water pump, or keel cooling. A centrifugal type water pump is used to circulate the engine coolant in each system. Each system incorporates thermostats to maintain a normal operating temperature of 160- 185° F (71-85° C). Typical engine cooling systems are shown in Figs. 18 and 19.

### Radiator Cooling System

The engine coolant is drawn from the bottom of the radiator core by the water pump and is forced through the oil cooler and into the cylinder block. The coolant circulates up through the cylinder block into the cylinder head, then to the water manifold and thermostat housing. From the thermostat housing, the

coolant returns to the radiator where it passes down a series of tubes and is cooled by the air stream created by the fan.

When starting a cold engine or when the coolant is below operating temperature, the coolant is restricted at the thermostat housing(s) and a by-pass provides water circulation within the engine during the warm-up period.

### Heat Exchanger Cooling System

In the heat exchanger cooling system, the coolant is drawn by the circulating pump from the bottom of the expansion tank through the engine oil cooler, then through the engine the same as in the radiator and fan system. Upon leaving the thermostat housing, the coolant either passes through the heat exchanger core

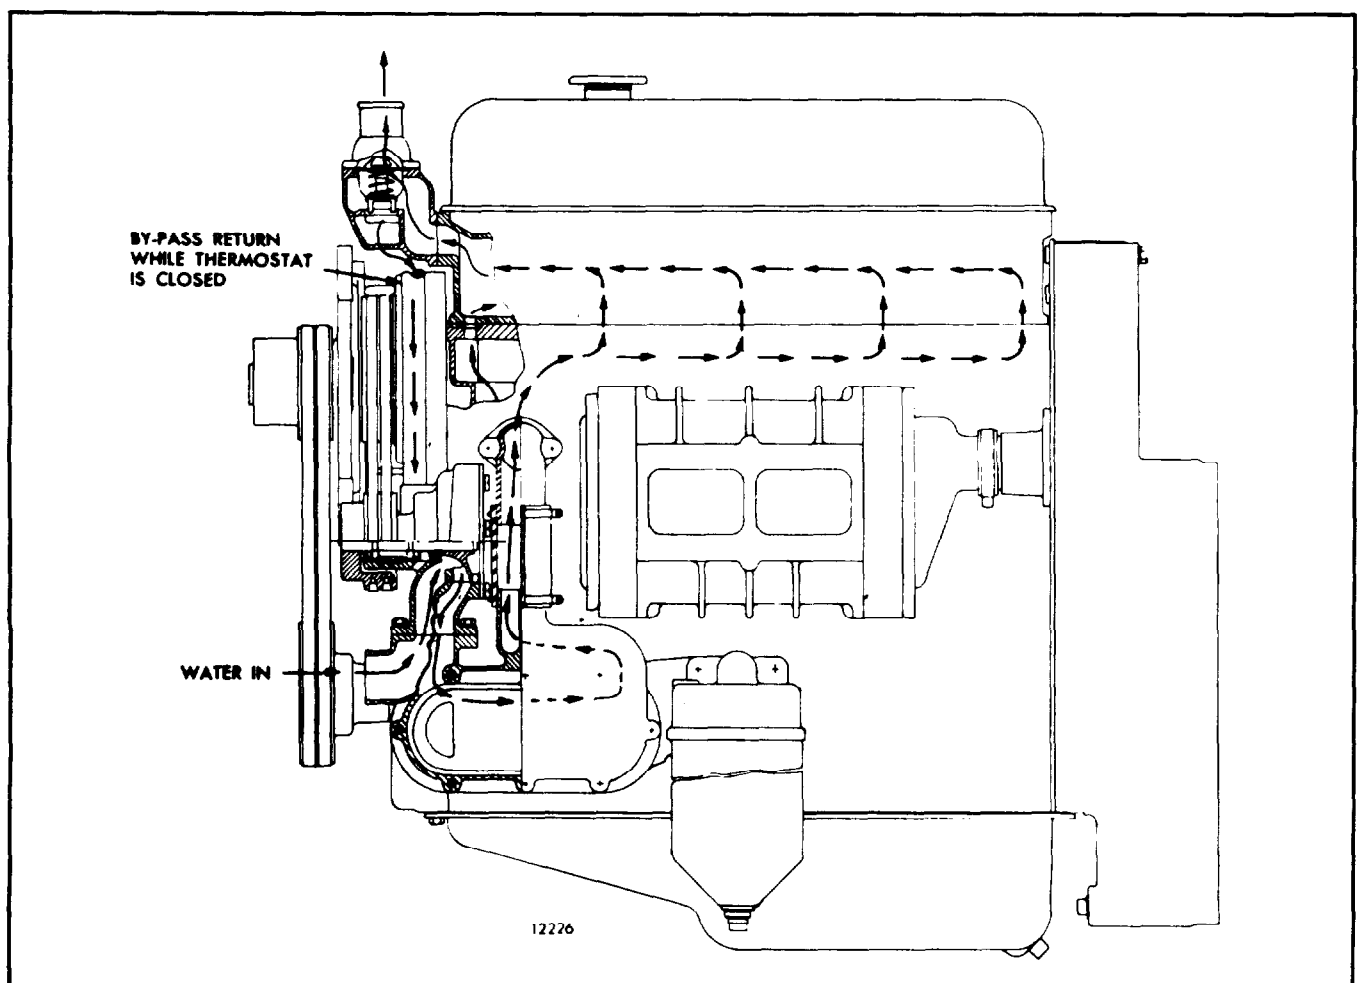


Fig. 18 - Typical Cooling System for In-Line Engines

or by-passes the heat exchanger and flows directly to the water pump, depending on the coolant temperature.

While passing through the core of the heat exchanger, the coolant temperature is lowered by raw water, which is drawn by the raw water pump from an outside supply. The raw water enters the heat exchanger at one side and is discharged at the opposite side.

To protect the heat exchanger element from electrolytic action, a zinc electrode is located in both the heat exchanger inlet elbow and the raw water pump inlet elbow and extends into the raw water passage.

The length of time a heat exchanger will function satisfactorily before cleaning will be governed by the kind of coolant used in the engine and the kind of raw water used. Soft water plus a rust inhibitor or a high boiling point type antifreeze should be used as the engine coolant.

When foreign deposits accumulate in the heat exchanger to the extent that cooling efficiency is impaired, such deposits can, in most instances, be removed by circulating a flushing compound through the fresh water circulating system without removing the heat exchanger. If this treatment does not restore the engine's normal cooling characteristics, contact an authorized *Detroit Diesel Allison Service Outlet*.

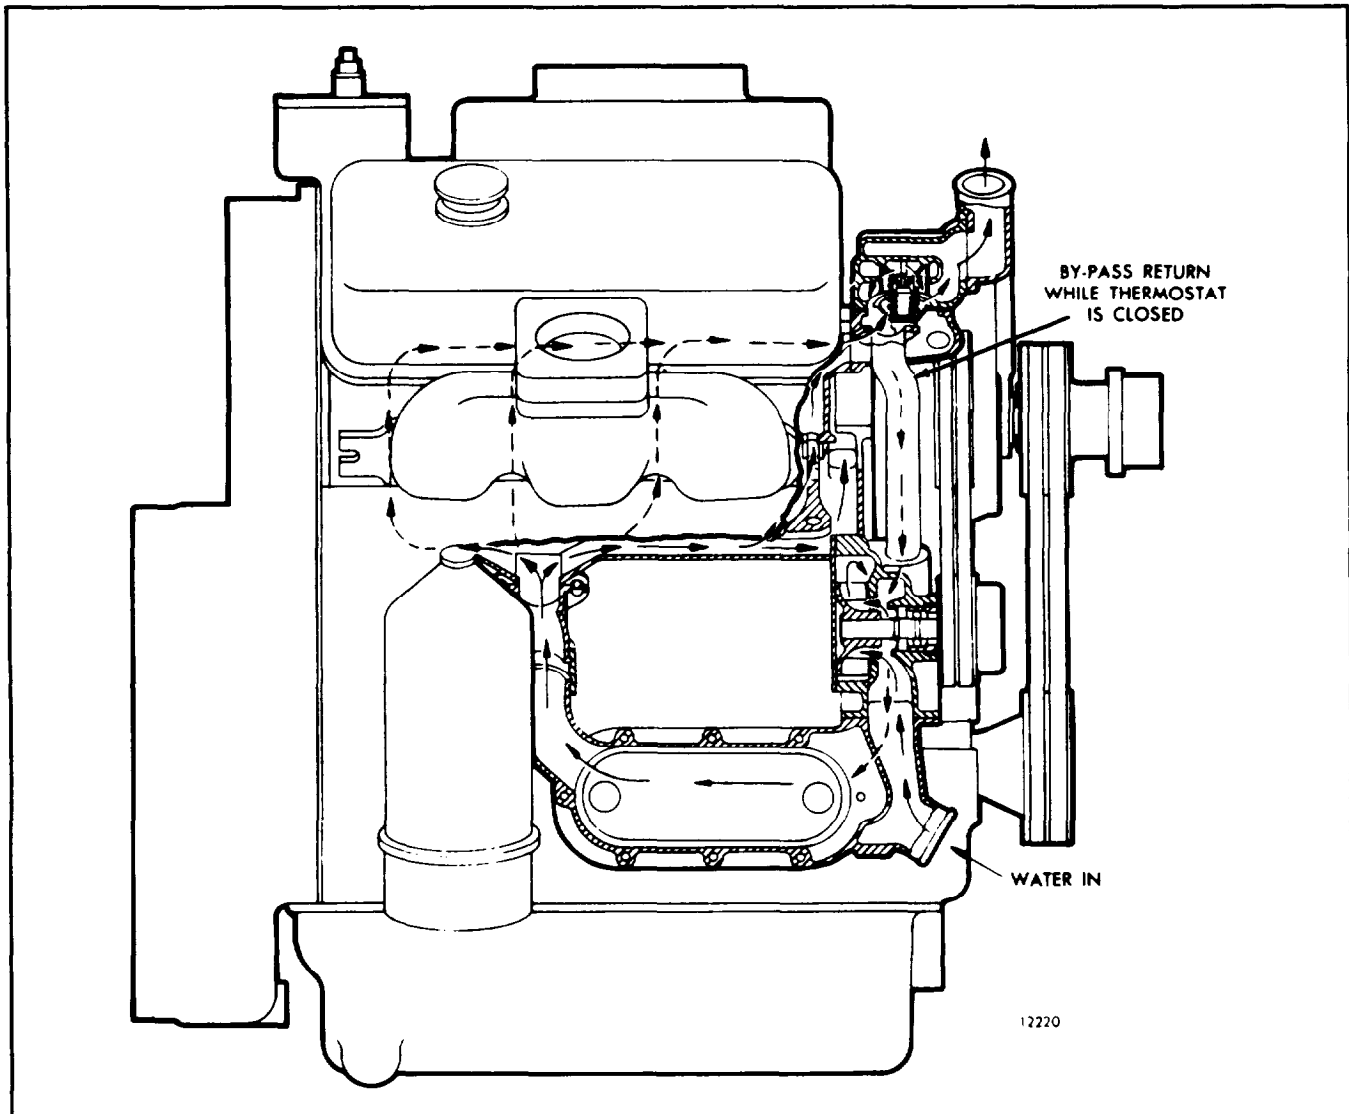


Fig. 19 - Typical Cooling System for V-Type Engine

### Keel Cooling System

The keel cooling system is similar to the heat exchanger system, except that the coolant temperature is reduced in the keel cooler. In this system, the coolant is drawn by the circulating pump from the bottom of the expansion tank through the engine oil

cooler. From the cooler the flow is the same as in the other systems. Upon leaving the thermostat housing, the coolant is by-passed directly to the bottom of the expansion tank until the engine operating temperature, controlled by the thermostat, is reached. As the engine temperature increases, the coolant is directed to the keel cooler, where the temperature of the coolant is reduced before flowing back to the expansion tank.

## ENGINE COOLING SYSTEM MAINTENANCE

### Engine Coolant

The function of the engine coolant is to absorb the heat, developed as a result of the combustion process in the cylinders, from the component parts such as exhaust valves, cylinder liners and pistons which are surrounded by water jackets. In addition, the heat absorbed by the oil is also removed by the engine coolant in the oil-to-water oil cooler.

For the recommended coolant, refer to Engine Coolant.

### Cooling System Capacity

The capacity of the basic engine cooling system (cylinder block, head, thermostat housing and oil cooler housing) is shown in Table 1.

To obtain the complete amount of coolant in the cooling system of an engine, the additional capacity of the radiator, hoses, etc. must be added to the capacity of the basic engine. The capacity of radiators and related equipment should be obtained from the equipment supplier.

### Fill Cooling System

Before starting an engine, close all of the drain cocks and fill the cooling system completely. If the unit has a raw water pump, it should be primed, since operation without water may cause impeller failure.

COOLING SYSTEM CAPACITY CHART (BASIC ENGINE)		
ENGINE	CAPACITY	
	Quarts	Litres
3-53	8	8
4-53	9	9
6V-53	14	13

TABLE 1

Start the engine and, after normal operating temperature has been reached, allowing the coolant to expand to its maximum, check the coolant level. The coolant level should be within 2" of the top of the filler neck.

Should a daily loss of coolant be observed, and there are no apparent leaks, there is a possibility of gases leaking past the cylinder head water seal rings into the cooling system. The presence of air or gases in the cooling system may be detected by connecting a rubber tube from the overflow pipe to a water container. Bubbles in the water in the container during engine operation will indicate this leakage. Another method for observing air in the cooling system is by inserting a transparent tube in the water outlet line.

### Drain Cooling System

The engine coolant is drained by opening the cylinder block and radiator (heat exchanger) drain cocks and removing the cooling system filler cap. Removal of the filler cap permits air to enter the cooling passages and the coolant to drain completely from the system.

Drain cocks or plugs are located on each side of the 4-53 and 6V cylinder blocks. The 3-53 cylinder block has a drain cock or plug located on the side of the block opposite the oil cooler.

**IMPORTANT:** Drain cocks or plugs on both sides of the engine must be opened to drain the engine completely.

In addition to the drains on the cylinder blocks, the In-line engines have a drain cock located on the bottom of the oil cooler housing. The V-type engines have two drain cocks that must be opened when draining the system. Radiators, etc., that do not have a drain cock, are drained through the oil cooler housing drain.

To insure that all of the coolant is drained completely from an engine, all cooling system drains should be opened. Should any entrapped water in the cylinder block or radiator freeze, it will expand and may cause damage. When freezing weather is expected, drain all engines not adequately protected by antifreeze. Leave

all of the drain cocks open until refilling the cooling system.

The exhaust manifolds of marine engines are cooled by the same coolant used in the engine. Whenever the engine cooling system is drained, each exhaust manifold drain cock, located on the bottom near the exhaust outlet, must be opened.

Raw water pumps are drained by loosening the cover attaching screws. It may be necessary to tap the raw water pump cover gently to loosen it. After the water has been removed, tighten the screws.

### Flushing

The cooling system should be flushed each spring and fall. The flushing operation cleans the system of antifreeze solution in the spring and removes the summer rust inhibitor in the fall, preparing the cooling system for a new solution. The flushing operation should be performed as follows:

1. Drain the previous season's solution from the engine.
2. Refill the cooling system with soft clean water. If the engine is hot, fill slowly to prevent rapid cooling and distortion of the engine castings.
3. Start the engine and operate it for 15 minutes to circulate the water thoroughly.
4. Drain the cooling system completely.
5. Refill the system with the solution required for the coming season,

### Cooling System Cleaners

If the engine overheats and the fan belt tension and water level are satisfactory, clean and flush the entire cooling system. Remove scale formation by using a quality de-scaling solvent. Immediately after using the solvent, neutralize the system with the neutralizer. It is important that the directions printed on the container of the de-scaling solvent be thoroughly read and followed.

After the solvent and neutralizer have been used, completely drain the engine and radiator and reverse-flush before filling the cooling system.

### Reverse-Flushing

After the engine and radiator have been thoroughly cleaned, they should be reverse-flushed. The water

pump should be removed and the radiator and engine reverse-flushed separately to prevent dirt and scale deposits clogging the radiator tubes or being forced through the pump. Reverse-flushing is accomplished by hot water, under air pressure, being forced through the cooling system in a direction opposite to the normal flow of coolant, loosening and forcing scale deposits out.

The radiator is reverse-flushed as follows:

1. Remove the radiator inlet and outlet hoses and replace the radiator cap.
2. Attach a hose at the top of the radiator to lead water away from the engine.
3. Attach a hose to the bottom of the radiator and insert a flushing gun in the hose.
4. Connect the water hose of the gun to the water outlet and the air hose to the compressed air outlet.
5. Turn on the water and, when the radiator is full, turn on the air in short blasts, allowing the radiator to fill between air blasts.

**CAUTION:** Apply air gradually. Do not exert more than 30 psi (207 kPa) air pressure. Too great a pressure may rupture a radiator tube.

6. Continue flushing until only clean water is expelled from the radiator.

The cylinder block and cylinder head water passages are reverse-flushed as follows:

1. Remove the thermostat and the water pump.
2. Attach a hose to the water inlet of the cylinder block to drain the water away from the engine.
3. Attach a hose to the water outlet at the top of the cylinder block and insert the flushing gun in the hose.
4. Turn on the water and, when the water jackets are filled, turn on the air in short blasts, allowing the engine to fill with water between air blasts.
5. Continue flushing until the water from the engine runs clean.

If scale deposits in the radiator cannot be removed by chemical cleaners or reverse-flushing as outlined above, it may be necessary to remove the upper tank and rod out the individual radiator tubes with flat steel rods. Circulate water through the radiator core from the bottom to the top during this operation.

### Miscellaneous Cooling System Checks

In addition to the above cleaning procedures, the other components of the cooling system should be checked periodically to keep the engine operating at peak efficiency. The thermostat and the radiator pressure cap should be checked and replaced, if found defective. The cooling system hoses should be inspected and any hose that feels abnormally hard or soft should be replaced immediately.

Also, check the hose clamps to make sure they are tight. All external leaks should be corrected as soon as detected. The fan belt must be adjusted to provide the proper tension, and the fan shroud must be tight against the radiator core to prevent re-circulation of air which may lower cooling efficiency.

### Water Pump

A centrifugal-type water pump is mounted on top of the engine oil cooler housing, either on the right-hand or left-hand side of the engine, depending upon the engine model and rotation. It circulates the coolant through the cooling system.

The pump is belt driven, by either the camshaft or balance shaft (In-line engines) or by one of the camshafts (V-type engines).

An impeller is pressed onto one end of the water pump shaft, and a water pump drive pulley is pressed onto the opposite end. The pump shaft is supported on a sealed double-row combination radial and thrust ball bearing. Coolant is prevented from creeping along the shaft toward the bearing by a seal. The shaft and bearing constitute an assembly and are serviced as such, since the shaft serves as the inner race of the ball bearing.

The sealed water pump shaft ball bearing is filled with lubricant when assembled. No further lubrication is required.

Contact an authorized *Detroit Diesel Allison Service Outlet* if more information is needed.

### Raw Water Pump

The raw water pump (Figs. 20 and 21) is a positive displacement pump, used for circulating raw water through the heat exchanger to lower the temperature of the engine coolant. It is driven by a coupling from the end of the camshaft.

Seal failure is readily noticed by a flow of water visible at the openings in the raw water pump housing, located between the pump mounting flange and the

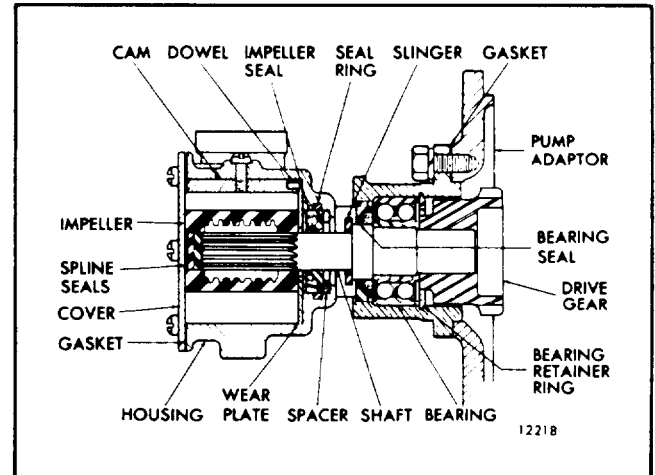


Fig. 20 - Raw Water Pump Used on In-Line Engine

inlet and outlet ports. These openings must remain open at all times.

The impeller, cam and wear plate assembly, and water seal assembly may be serviced without removing the pump from the engine as outlined below.

1. Remove the cover and gasket.
2. Note the position of the impeller blades to aid in the reassembly. Then grasp a blade on each side of the impeller with pliers and pull the impeller off of the shaft.
3. The neoprene spline seal(s) can be removed from the impeller by pushing a screw driver through the impeller from the open end.

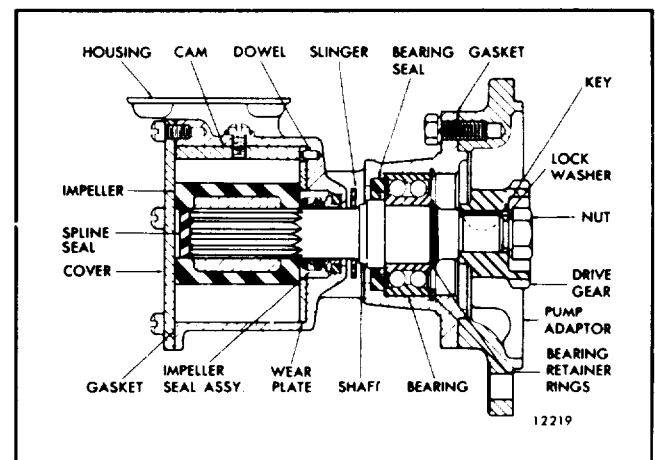


Fig. 21 - Raw Water Pump Used on V-Type Engine

**CAUTION:** If the impeller is reuseable, exercise care to prevent damage to the splined surfaces.

4. Remove the cam retaining screw and withdraw the cam and wear plate assembly.
5. Remove the seal assembly from the pump used on a V-type engine by inserting two wires with hooked ends between the pump housing and seal with the hooks over the edge of the carbon seal. Remove the seal seat and gasket in the same way.
6. The seal may be removed from the pump used on the In-line engine by 'drilling two holes in the seal case and placing metal screws in the holes so that they may be grasped and pulled with pliers. Then remove the rubber seal ring.
7. Clean and inspect the impeller, cam and wear plate assembly and water seal. The impeller must have a good bond between the neoprene and the metal. If the impeller blades are damaged, worn or have taken a permanent set, replace the impeller. Reverse the wear plate if it is worn excessively and remove any burrs. Replace the seal, if necessary.
8. Install the seal assembly in the pump used on a V-type engine as follows:
  - a. If the seal seat and gasket were removed, place the gasket and seal seat over the shaft and press them into position in the seal cavity.
  - b. Place the seal ring securely in the ferrule, and with the carbon seal and washer correctly positioned against the ferrule, slide the ferrule over the shaft and against the seal seat. Use care to ensure that the seal ring is contained within the ferrule so that it grips the shaft.
  - c. Install the flat washer and then the marcel washer.

A new seal may be installed in the pump used on the In-Line engine by placing the rubber seal ring in its groove, starting the seal (with the lip facing the impeller cavity) over the shaft and tapping it into place against the seal spacer.

9. Install the cam and wear plate assembly.

**NOTE:** The wear plate is round and is doweled to the cam. The wear plate must be installed with the cam in the pump housing as an assembly.

10. Apply a non-hardening sealant to the cam retaining screw and the hole in the pump body to prevent any leakage. Then hold the cam with the tapped hole aligned and secure it with the screw.

11. Compress the impeller blades to clear the off-set cam and press the impeller on the splined shaft. The blades must be correctly positioned to follow the direction of rotation.

12. Install the neoprene splined seal(s) in the bore of the impeller.

13. Turn the impeller several revolutions in the normal direction of rotation to position the blades.

14. Affix a new gasket and install the pump cover.

The Jabsco raw water pump is equipped with a synthetic rubber impeller. Since synthetic rubber loses its elasticity at low temperatures, impellers made of natural rubber should be installed when it is necessary to pump raw water that has a temperature below 40° F (4°C).

The natural rubber impeller can be identified by a stripe of green paint between two of the impeller blades.

## ENGINE EQUIPMENT

### INSTRUMENT PANEL, INSTRUMENTS AND CONTROLS

The instruments (Fig. 1) generally required in the operation of a diesel engine consist of an oil pressure gage, a water temperature gage, an ammeter and a mechanical tachometer. Also, closely related and usually installed in the general vicinity of these instruments are certain controls consisting of an engine starter switch, an engine stop knob, an emergency stop knob and, on certain applications, the engine hand throttle.

Torqmatic converters are equipped with an oil pressure gage and, in some instances, an oil temperature gage. These instruments are mounted on a separate panel.

#### Oil Pressure Gage

The oil pressure gage registers the pressure of the lubricating oil in the engine. As soon as the engine is started, the oil pressure gage should start to register. If the oil pressure gage does not register at least the minimum pressure listed under *Running* in the *Engine Operating Instructions*, the engine should be stopped and the cause of low oil pressure determined and corrected before the engine is started again.

#### Water Temperature Gage

The engine coolant temperature is registered on the water temperature gage.

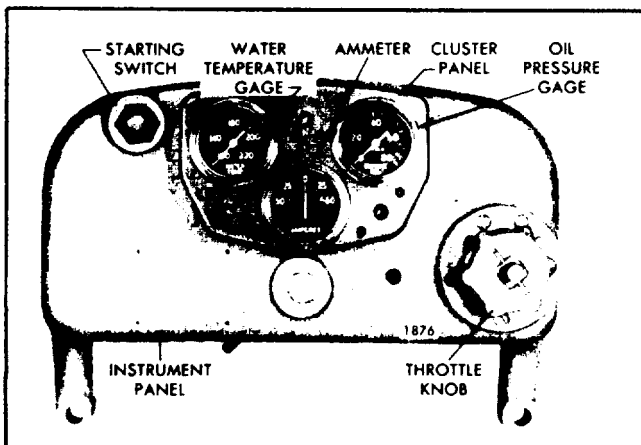


Fig. 1 - Typical Instrument Panel

#### Ammeter

An ammeter is incorporated into the electrical circuit to show the current flow to and from the battery. After starting the engine, the ammeter should register a high charge rate at rated engine speed. This is the rate of charge received by the battery to replenish the current used to start the engine. As the engine continues to operate, the ammeter should show a decline in charge rate to the battery. The ammeter will not show zero charge rate since the regulator voltage is set higher than the battery voltage. The small current registered prevents rapid brush wear in the battery-charging alternator. If lights or other electrical equipment are connected into the circuit, the ammeter will show discharge when these items are operating or the engine speed is reduced.

#### Tachometer

The tachometer is driven by the engine and registers the speed of the engine in revolutions per minute (rpm).

#### Engine Starting Motor Switch

The starting switch is mounted on the instrument panel with the contact button extending through the front face of the panel. The switch is used to energize the starting motor. As soon as the engine starts, release the switch.

#### Stop Knob

A stop knob is used on most applications to shut the engine down. When stopping an engine, the speed should be reduced to idle and the engine allowed to operate at idle for a few minutes to permit the coolant to reduce the temperature of the engine's moving parts. Then the stop knob should be pulled and held until the engine stops. Pulling on the stop knob manually places the injector racks in the "no-fuel" position. The stop knob should be returned to its original position after the engine stops.

#### Emergency Stop Knob

In an emergency or if after pulling the stop knob, the engine continues to operate, the emergency stop knob



may be pulled to stop the engine. The emergency stop knob, when pulled, will trip the air shut-off valve located between the air inlet housing and the blower and shut off the air supply to the engine. Lack of air will prevent further combustion of the fuel and stop the engine.

The emergency stop knob must be pushed back in after the engine stops so the air shut-off valve can be

opened for restarting after the malfunction has been corrected.

#### **Throttle Control**

The engine throttle is connected to the governor speed control shaft through linkage. Movement of the speed control shaft changes the speed setting of the governor and thus the engine speed.

## ENGINE PROTECTIVE SYSTEMS

## MANUAL SHUT-DOWN SYSTEM

The manually operated emergency engine shut-down device, mounted in the air inlet housing, is used to stop the engine in the event an abnormal condition should arise. If the engine throttle is placed in the *no-fuel* position, or if combustible liquids or gases are accidentally introduced into the combustion chamber causing overspeeding of the engine, the shut-down device will prevent damage to the engine by cutting off the air supply and thus stopping the engine.

The shut-down device consists of an air shut-off valve mounted in the air inlet housing which is retained in the open position by a latch. A cable assembly is used to remotely trip the latch. Pulling the emergency shut-down knob all the way out will stop the engine. After the engine stops, the emergency shut-down knob must be pushed all the way in and the air shut-off valve manually reset before the engine can be started again.

## AUTOMATIC MECHANICAL SHUT-DOWN SYSTEM

The automatic mechanical shut-down system illustrated in Fig. 2 is designed to stop the engine if there is a loss of oil pressure, loss of engine coolant, overheating of the engine coolant, or overspeeding of the engine. Engine oil pressure is utilized to activate the components of the system.

A coolant temperature-sensing valve and an adaptor and copper plug assembly are mounted on the exhaust

manifold outlet. The power element of the temperature-sensing valve is placed against one end of the copper plug, and the other end of the plug extends into the exhaust manifold. Engine coolant is directed through the adaptor and passes over the power element of the valve. Engine oil, under pressure, is directed through a restricted fitting to the temperature-sensing valve and to an oil pressure actuated bellows located on the air inlet housing.

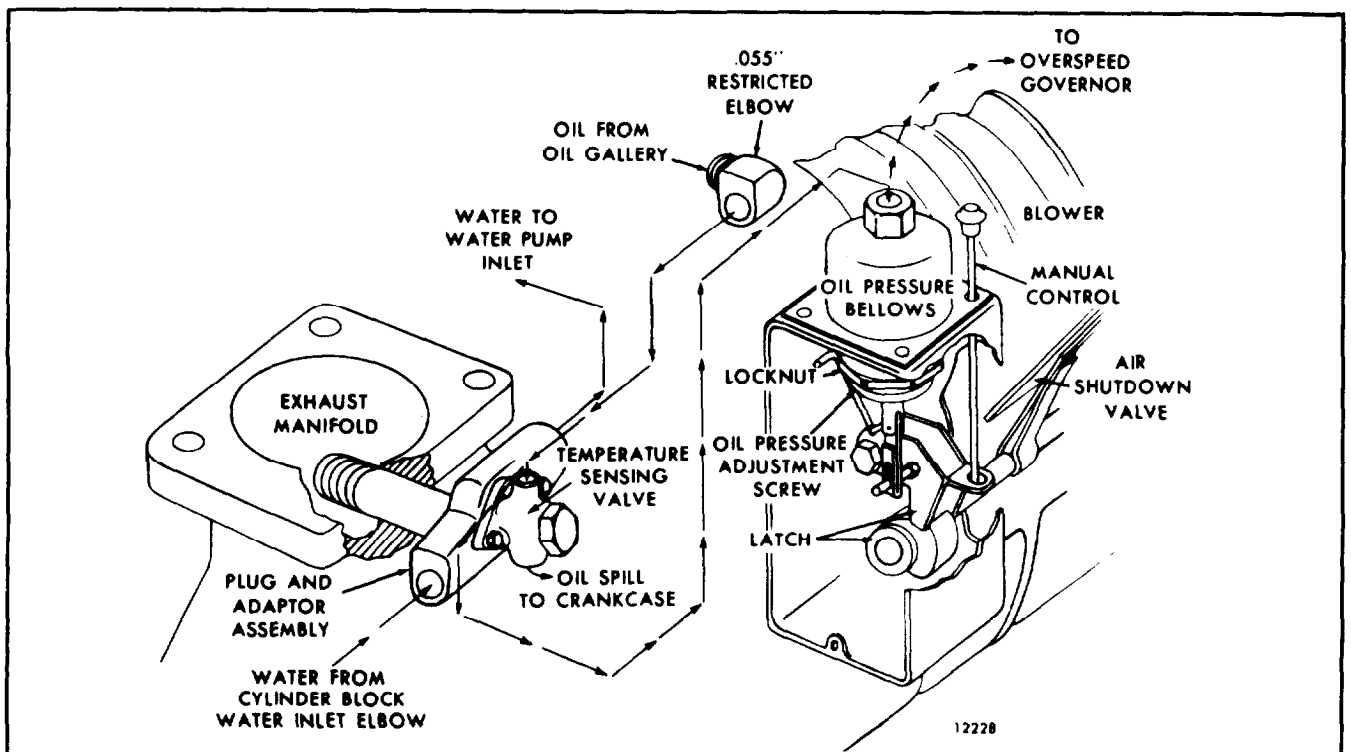


Fig. 2 - Mechanical Shut-Down System Schematically Illustrated

The pressure of the oil entering the bellows overcomes the tension of the bellows spring and permits the latch to retain the air shut-off valve in the open position. If the oil pressure drops below a predetermined value, the spring in the bellows will release the latch and permit the air shut-off valve to close and thus stop the engine.

The overspeed governor, used on certain applications, consists of a valve actuated by a set of spring-loaded weights. Engine oil is supplied to the valve through a connection in the oil line between the bellows and the temperature-sensing valve. An outlet in the governor valve is connected to the engine oil sump. Whenever the engine speed exceeds the overspeed governor setting, the valve (actuated by the governor weights) is moved from its seat and permits the oil to flow to the engine sump. This decreases the oil pressure to the bellows, thus actuating the shut-down mechanism and stopping the engine.

A restricted fitting, which will permit a drop in oil pressure great enough to actuate the shut-down mechanism, is required in the oil line between the cylinder block oil gallery and the shut-down sensing devices.

To be sure the protective system will function properly if an abnormal engine condition occurs, have the system checked periodically by your local *Detroit Diesel Allison Service Outlet*.

Also make sure the air shut-off valves close each time the engine is shut down.

**AUTOMATIC ELECTRICAL SHUT-DOWN SYSTEM**

The automatic electrical shut-down system shown in Fig. 3 protects the engine against a loss of coolant, overheating of the coolant, loss of oil pressure, or overspeeding. In the event one of the foregoing conditions arises, a switch will close the electrical circuit and energize the solenoid switch, causing the shut-down solenoid to release the air shut-down latch and stop the engine.

**Operation**

The electrical circuit is de-energized under normal operating conditions. When the engine is started, the oil pressure switch opens when the oil pressure reaches approximately 10 psi (69 kPa) and the fuel oil pressure

**Operation**

To start an engine equipped with a mechanical shut-down system, first manually open the air shut-off valve and then press the engine starting switch. As soon as the engine starts, the starting switch may be released, but the air shut-off valve must be held in the open position until the engine oil pressure increases sufficiently to permit the bellows to retain the latch in the open position.

During operation, if the engine oil pressure drops below the setting of the pressure sensitive bellows, the spring within the bellows will release the latch and permit the air shut-off valve to close, thus stopping the engine.

If the engine coolant overheats, the temperature-sensing valve will open and permit the oil in the protective system to flow to the engine crankcase. The resulting decrease in oil pressure will actuate the shut-down mechanism and stop the engine. Also if the engine loses its coolant, the copper plug will be heated up by the hot exhaust gases passing over it and cause the temperature-sensing valve to open and actuate the shut-down mechanism.

Whenever the engine speed exceeds the overspeed governor (if used) setting, the oil in the line flows to the sump, resulting in a decrease in oil pressure. The oil pressure bellows then releases the latch and permits the air shut-off valve to close.

When an engine is stopped by the action of the shut-down system, the engine cannot be started again until the particular device which actuated the shut-down mechanism has returned to its normal position. *The abnormal condition which caused the engine to stop must be corrected before attempting to start it again.*

switch closes at approximately 20 psi (138 kPa) fuel pressure. The water temperature switch remains open.

If the oil pressure drops below 10 psi (69 kPa), the oil pressure switch will close the circuit and energize the shut-down solenoid. This will activate the shut-down mechanism and stop the engine.

A loss of coolant or an increase in coolant temperature to approximately 203° F (95° C) will close the contacts in the water temperature switch, thus closing the electrical circuit and activating the shut-down mechanism.

The water temperature switch consists of a temperature-sensing valve and a micro-switch. The valve contacts a copper plug (heat probe) which extends into

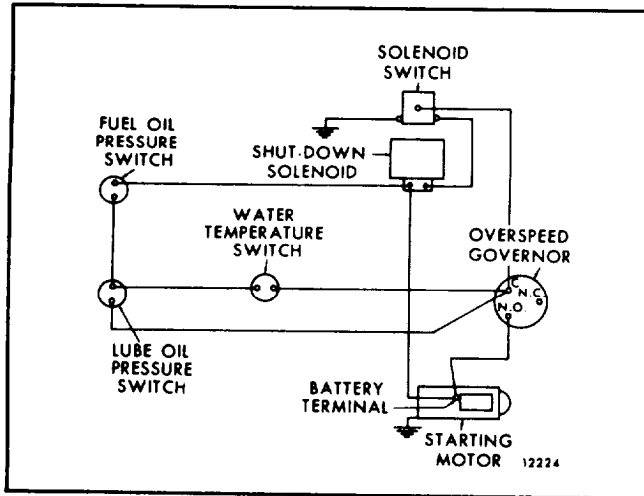


Fig. 3 - Automatic Electrical Shut-Down System Diagram

the exhaust manifold outlet. Engine water is directed over the power element of the valve and should the water temperature exceed approximately 203° F (95° C), the valve will close the contacts in the micro-switch and energize the shut-down circuit. If a loss of water occurs, the heat of the exhaust gases will be transmitted through the copper plug to the temperature-sensing valve and cause the shut-down circuit to be activated.

If the engine speed exceeds the high speed setting of the overspeed governor, the governor switch will close and activate the shut-down mechanism.

When the engine is shut-down, the decrease in speed will open the governor switch, and the decrease in oil and fuel pressures will close the oil pressure switch and open the fuel pressure switch, thus de-energizing the circuit.

The cause of the abnormal conditions must then be determined and corrected before the engine is started again. Also, the air shut-off valve must be manually reset in the open position before the engine can be started.

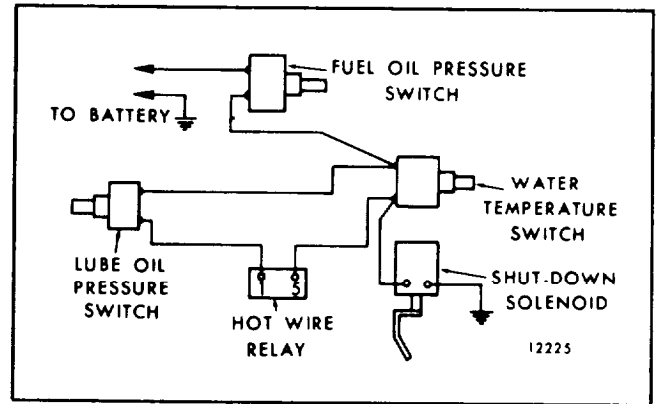


Fig. 4 - Automatic Electrical Shut-Down System Incorporating Hot Wire Relay

Some engines are equipped with an electrically operated automatic shut-down system which incorporates a hot wire relay (Fig. 4).

Since the fuel pressure builds up rapidly, the fuel oil pressure switch could close before the lubricating oil pressure switch opens, and effect a shut-down of the engine. The hot wire relay, however, delays the closing of the fuel oil pressure switch for several seconds to enable the lubricating oil pressure to build up and open the oil pressure switch contacts.

When the lubricating oil pressure falls below 10 ± 2 psi (69 ± 14 kPa), the contacts in the oil pressure switch used in this system will close and current will flow through the hot wire relay to the solenoid. The few seconds required to heat the hot wire relay provides sufficient delay to avoid an engine shut-down when low oil pressure is caused by a temporary condition such as an air bubble or a temporary overlap in the operation of the oil pressure switch and the fuel oil pressure switch when starting or stopping the engine.

The water temperature switch, which remains open during normal engine operation, is installed in the side of the thermostat housing. The switch contacts close when the water temperature reaches approximately 205° F (96° C) and activate the shut-down solenoid.

ALARM SYSTEM

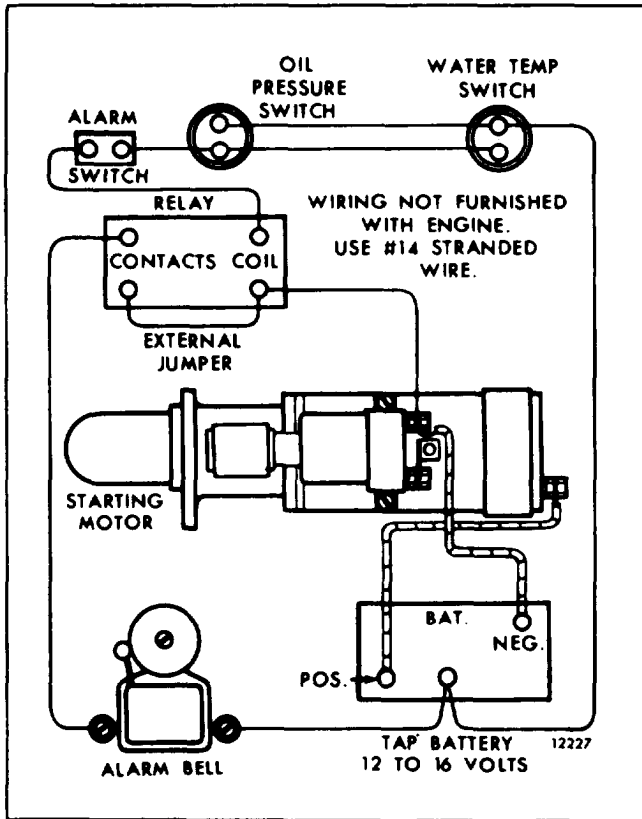


Fig. 5 - Alarm System Wiring Diagram

The alarm system shown in Fig. 5 is similar to the automatic electrical shut-down system, but uses a warning bell in place of the air shut-off valve solenoid. The bell warns the engine operator if the engine coolant overheats or the oil pressure drops below the safe operating limit.

When the engine is started and the oil pressure is sufficient to open the oil pressure switch contacts (opening pressure is stamped on the switch cover), the alarm switch must be turned on manually to put the system in operation. The water temperature switch is normally open. Should the engine coolant exceed  $205^{\circ} \pm 5^{\circ} \text{ F}$  ( $96^{\circ} \pm 15^{\circ} \text{ C}$ ), the water temperature switch will close the electrical circuit and sound the alarm bell. Likewise, if the oil pressure drops below the setting of the oil pressure switch, the switch will close and cause the bell to ring. The bell will continue to ring until the engine operator turns the alarm switch off. The alarm switch must also be turned off before a routine stop since the decreasing oil pressure will close the oil pressure switch and cause the bell to ring.

If the alarm bell rings during engine operation, stop the engine immediately and determine the cause of the abnormal condition. *Make the necessary corrections before starting the engine again.*

## STARTING SYSTEMS

### ELECTRICAL STARTING SYSTEM

The electrical system on the engine generally consists of a battery-charging alternator, a starting motor, voltage regulator, storage battery, starter switch and the necessary wiring. Additional electrical equipment may be installed on the engine unit at the option of the owner.

#### Starting Motor

The starting motor has a Sprag overrunning clutch. Pressing the starting switch engages the starting motor pinion with the teeth of the flywheel ring gear and energizes the starting motor. The starting motor drives the pinion and rotates the crankshaft. When the engine begins to operate, the Sprag clutch permits the pinion to overrun on its shaft, until the starting switch is released, and prevents overspeeding the starting motor.

#### Starter Switch

To start the engine, a switch is used to energize the starting motor. Release the switch immediately after the engine starts.

#### Alternator

The battery-charging alternator provides the electrical current required to maintain the storage battery in a charged condition and to supply sufficient current to carry any other electrical load requirements up to the rated capacity of the alternator.

#### Regulator

A voltage regulator is introduced into the electrical system to regulate the voltage and current output of the battery-charging alternator and to maintain a fully charged storage battery.

#### Storage Battery

The lead-acid storage battery is an electrochemical device, for converting chemical energy into electrical energy,

The battery has three major functions:

1. It provides a source of electrical power for starting the engine.
2. It acts as a stabilizer to the voltage in the electrical system.
3. It can, for a limited time rush current when the electrical demands of the unexceed the output of the alternator.

The battery is a perishable item which requires periodic servicing. A properly cared for battery will give long and trouble-free service.

1. Check the level of the electrolyte regularly. Add water if necessary, but do not overfill. Overfilling can cause poor performance or early failure.
2. Keep the top of the battery clean. When necessary, wash with a baking soda solution and rinse with fresh water. Do not allow the soda solution to enter the cells.
3. Inspect the cables, clamps and hold-down bracket regularly. Clean and re-apply a light coating of grease when needed. Replace corroded, damaged parts.
4. Use the standard, quick in-the-unit battery test as the regular service test to check battery condition.
5. Check the electrical system if the battery becomes discharged repeatedly.

If the engine is to be stored for more than 30 days, remove the battery. The battery should be stored in a cool, dry place. Keep the battery fully charged and check the level of the electrolyte regularly.

The *Lubrication and Preventive Maintenance* section of this manual covers the servicing of the starting motor and alternator.

Consult an authorized *Detroit Diesel Allison Service Outlet* for information regarding the electrical system.

**HYDRAULIC STARTING SYSTEM (HYDROSTARTER)**

The Hydrostarter System schematically illustrated in Fig. 6 is a complete hydraulic system for starting internal combustion engines. The system is automatically recharged after each start, and can be manually recharged. The starting potential remains during long periods of inactivity, and continuous exposure to hot or cold climates has no detrimental effect upon the Hydrostarter system. Also, the Hydrostarter torque for a given pressure remains substantially the same regardless of the ambient temperature.

The Hydrostarter system consists of a reservoir, an engine-driven charging pump, a hand pump, a piston type accumulator, a starting motor and connecting hoses and fittings.

**Operation**

Hydraulic fluid flows by gravity, or a slight vacuum, from the reservoir to either the engine-driven pump or the hand pump inlet. Fluid discharging from either pump outlet at high pressure flows into the accumulator and is stored at 3250 psi (22 383 kPa) under the pressure of compressed nitrogen gas.

When the starter is engaged with the engine flywheel

ring gear and the control valve is opened, fluid under pressure is forced out of the accumulator, by the expanding nitrogen gas, and flows into the starting motor which rapidly accelerates the engine to a high cranking speed. The used fluid returns directly to the reservoir from the starter.

The engine-driven charging pump runs continuously during engine operation and automatically recharges the accumulator. When the required pressure is attained in the accumulator, a valve within the pump body opens and the fluid discharged by the pump is by-passed to the reservoir. The system can be shut down and the pressure in the accumulator will be maintained.

The precharge pressure of the accumulator is the pressure of the nitrogen gas with which the accumulator is initially charged. This pressure must be checked before the system pressure is raised for the initial engine start. To check the precharge pressure, open the relief valve, on the side of the hand pump, approximately 1/2 turn, allowing the pressure gage to return to zero. Close the relief valve and pump several strokes on the hand pump. The gage should show a rapid pressure rise from zero to the nitrogen precharge pressure, where it will remain without change for several additional strokes of the pump.

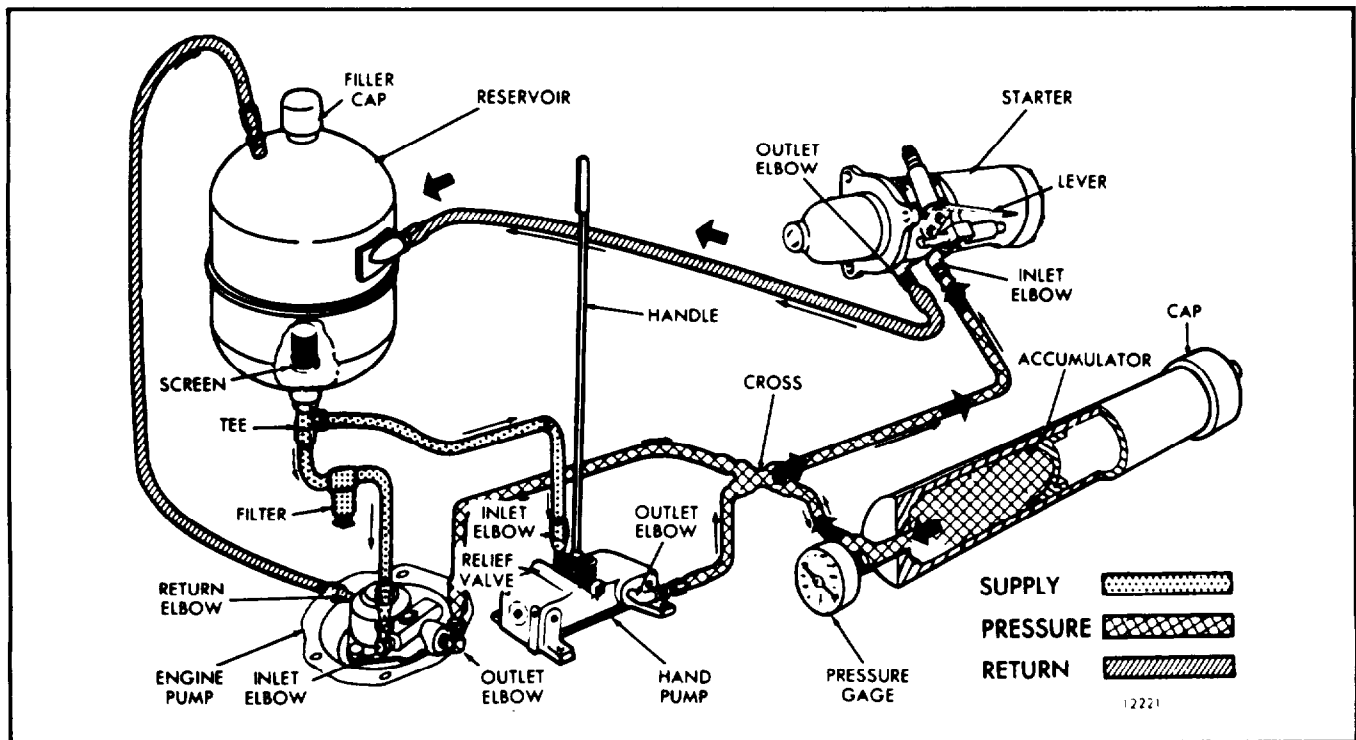


Fig. 6 - Schematic Diagram of Hydrostarter System Showing Oil Flow

### Initial Engine Start

Use the hand pump to raise the accumulator pressure. An accumulator pressure of 1500 psi (10 335 kPa) when the ambient temperature is above 40° F (4° C) will provide adequate cranking to start the engine. Between 40°F (4°C) and 0°F (-18°C), 2500 psi (17 225 kPa) should be sufficient. Below 0° F (-18° C), the accumulator should be charged to the maximum recommended pressure. Although the Hydrostarter cranks the engine faster than other starting systems, starting aids should be used in cold weather.

**NOTE:** Use the priming pump to make sure the filters, lines, manifolds and injectors are full of fuel before attempting to start the engine.

For ambient temperatures below 40° F (4° C), use a fluid starting aid. Add the starting fluid just prior to moving the Hydrostarter lever and during the cranking cycle as required. Do not wait to add the starting fluid after the engine is turning over, otherwise the accumulator charge may be used up before the engine can start. In this case, the accumulator charge must be replaced with the hand pump.

With the engine controls set for start (throttle at least half-open), push the Hydrostarter control lever to simultaneously engage the starter pinion with the flywheel ring gear and to open the control valve. Close the valve quickly when the engine starts, to conserve the accumulator pressure and prevent excessive overrunning of the starter drive clutch assembly.

Three different basic types of flywheel ring gears are used; no chamfer, Bendix chamfer, or Dyer chamfer on the gear teeth. Some difficulty may be encountered in engaging the starter pinion with the Dyer chamfered ring gears. When this happens, it is necessary to disengage and re-engage until the starter pinion is cammed in the opposite direction enough to allow the teeth to mesh.

### Remote Control System

The Hydrostarter remote control system (Fig. 7) consists of a master cylinder, a pedal, a lever arm, two springs and a flexible hose. It is an independent hydraulic system using diesel fuel, oil as a hydraulic fluid to actuate the Hydrostarter control valve by means of the pedal operated master cylinder.

The master cylinder is connected to the control valve on the Hydrostarter by a flexible hose. Pressing on the pedal forces the fluid through the hose to the control valve which engages the starter pinion with the engine

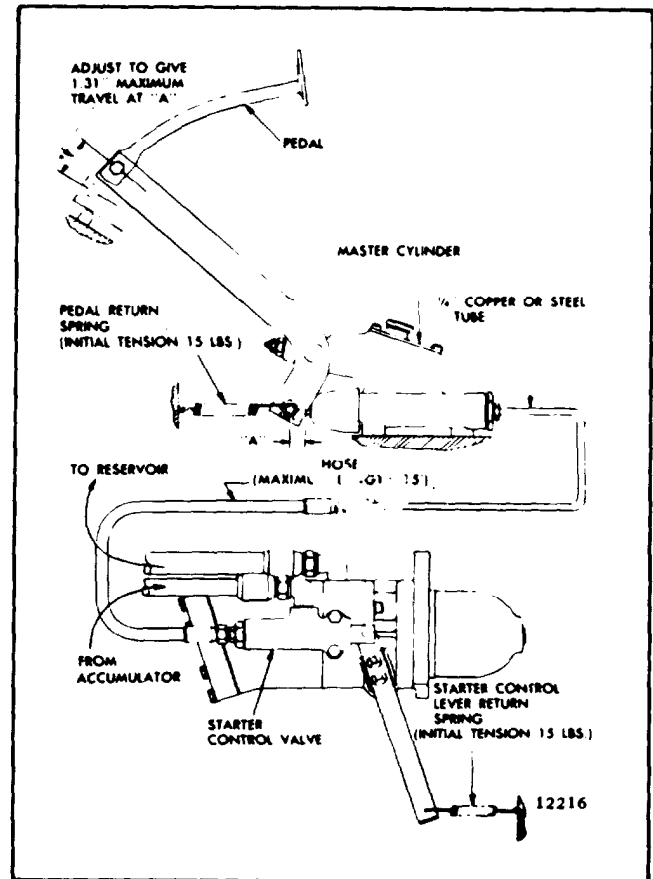


Fig. 7: Hydrostarter Remote Control System

flywheel ring gear. Release the pedal as soon as the engine starts.

The Hydrostarter motor is equipped with a control valve that incorporates a threaded valve housing plug with a 1/8" -27 tapped hole in the center for installation of the flexible hose. A 1/8" -27 pipe plug is installed when the remote control system is not used.

Springs are used to return the master cylinder pedal and the Hydrostarter control lever to the off position.

### Filling

Remove the filler cap from the reservoir and add a sufficient quantity of hydraulic fluid (a mixture of 75% diesel fuel and 25% SAE 10 or 30 lubricating oil) to fill the system.

The required amount of hydraulic fluid will vary depending upon the size of the reservoir, length of hydraulic hoses and the size and number of accumulators. The reservoirs are available in 10, 12, 16 and 23 quart (9, 11, 15, 22 litres) capacities. In a 10



quart (9 litres) capacity reservoir, add approximately 8 quarts (8 litres) of hydraulic fluid, 10 quarts (9 litres) in a 12 quart (11 litres) reservoir, 14 quarts (13 litres) in a 16 quart (15 litres) reservoir or 21 quarts (20 litres) in a 23 quart (22 litres) reservoir.

**NOTE:** When the accumulator is charged to 3000 psi (20 670 kPa) and all hoses are filled, there should be enough hydraulic fluid remaining in the reservoir to completely cover the screen in the bottom of the reservoir.

### Purging

A by-pass valve is located on the inlet side of the hand pump. Loosen the lock nut and rotate this valve approximately one turn counterclockwise with a screw driver. Operate the hand pump for 12 to 15 complete strokes. Do not pump too rapidly. Close the by-pass valve tightly and tighten the lock nut.

1. Move the starter control lever to engage the pinion with the flywheel and open the control valve. While holding the lever in this position, operate the hand pump until the starter has turned several revolutions. Close the control valve. Loosen the swivel hose fitting at the discharge side of the engine-driven pump about two turns. Operate the hand pump to force air out until oil begins to appear at the loose fitting. Tighten the swivel hose fitting and pressurize the system with the hand pump sufficiently to start the engine.

2. Perform the initial starting instructions under *Preparation for Starting Engine First Time*. Then, with the engine running at least 1500 rpm, purge the engine-driven pump of air. Break the hose connection at the discharge side of the engine driven-pump until a full stream of oil is discharged from the pump. Connect the hose to the pump and alternately loosen and tighten the swivel fitting on the discharge hose until the oil leaking out, when the fitting is loose, appears to be free of air bubbles. Tighten the fitting securely and observe the pressure gage. The pressure should rise rapidly to the accumulator precharge pressure (1250 psi or 10 413 kPa at 70°F or 21°C), then increase slowly, reaching 2900 to 3300 psi (19 981 to 22 737 kPa).

3. After the pressure has stabilized near 3000 psi (20 670 kPa), examine all of the high pressure hoses, connections and fittings for leaks.

4. The engine-driven pump must by-pass oil to the reservoir when the accumulator pressure reaches 2900 to 3300 psi (19 981 to 22-737 kPa). To determine whether the pump by-pass valve is operating properly, remove the reservoir filler cap, disconnect the pump by-pass hose at the reservoir, and hold the hose over

the open reservoir filler spout. An occasional spurt of oil may be emitted from the hose prior to by-passing. When the by-pass valve opens, a full and continuous stream of oil will flow from the hose. Reconnect the hose to the reservoir and install the filler cap.

5. Fill the reservoir to the proper level.

The Hydrostarter remote control system may be purged of air as follows:

1. Fill the master cylinder with fuel oil.

2. Loosen the hose fitting at the Hydrostarter control valve.

3. Actuate the master cylinder pedal until all of the air is discharged from the system and a solid stream of fuel oil is being discharged with each stroke.

**NOTE:** Replenish the fluid in the master cylinder as required during the purging operation.

4. Tighten the hose fitting and check for leaks.

### LUBRICATION AND PREVENTIVE MAINTENANCE

Inspect the system periodically for leaks. Primarily, examine the high pressure hoses, connections, fittings and the control valve on the starter. Make certain that the oil level in the reservoir is sufficient to completely cover the screen at the bottom of the tank. Make this check after the accumulator is charged and the engine driven pump is by-passing oil to the reservoir.

Every 2000 hours, or as conditions warrant, drain the reservoir and remove the screen. Flush out the reservoir and clean the screen and filler cap. Then reinstall the screen.

Remove the bowl and element from the filter in the engine-driven pump supply hose. Wash the bowl and element in clean fuel oil and reassemble the filter.

Release the pressure and drain the remaining hydraulic fluid from the system by disconnecting the hoses from the Hydrostarter components. Then reconnect all of the hydraulic hoses.

**CAUTION:** The oil pressure in the system must be released prior to servicing the Hydrostarter motor or other components to prevent possible injury to personnel or equipment.

**NOTE:** Make sure all hoses and fittings are clean before any connections are made.

Fill the Hydrostarter system with new clean fluid.

### Lubrication

Remove the Hydrostarter from the engine every 2000 hours for lubrication. Before removing the Hydrostarter, release the pressure in the system by means of the relief valve in the hand pump. Then remove the three bolts which retain the starting motor to the flywheel housing. Remove the starting motor without disconnecting the hydraulic oil hoses. This will prevent dirt and air from entering the hydraulic system.

Apply a good quality, lightweight grease on the drive clutch pinion to make sure the clutch will slide freely while compressing the spring. Also apply grease to the fingers of the clutch fork and on the spool of the clutch yoke engaged by the fork. This lubrication period may be reduced or lengthened according to the severity of service.

Remove the pipe plug from the starting motor drive housing and saturate the shaft oil wick with engine oil. Then reinstall the plug.

After lubricating, install the starting motor on the flywheel housing and recharge the accumulator with the hand pump.

On engines equipped with a hydraulic remote control system, lubricate the shaft in the master cylinder through the pressure grease fitting every 2000 hours.

### Cold Weather Operation

Occasionally, when an engine is operated in regions of very low temperatures, the starter drive clutch assembly may slip when the starter is engaged. If the clutch slips, proceed as follows:

1. Release the oil pressure in the system by opening the relief valve in the hand pump.

**CAUTION:** The oil pressure in the system must be released prior to servicing the Hydrostarter motor or other components to prevent possible injury to personnel or equipment.

2. Disconnect the hydraulic hoses from the starting motor.
3. Remove the three retaining bolts and lock washers and withdraw the starting motor from the flywheel housing.
4. Disassemble the starting motor.
5. Wash the Hydrostarter drive clutch assembly in clean fuel oil to remove the old lubricant.
6. When the clutch is free, apply SAE 5W lubricating oil.
7. Reassemble the starting motor and reinstall it on the engine. Then attach a tag to the starter noting the lubricant used in the clutch.
8. Recharge the accumulator with the hand pump.

### Marine Application

In addition to the normal Hydrostarter lubrication and maintenance instructions, the following special precautions must be taken for marine installations or other cases where equipment is subject to salt spray and air, or other corrosive atmospheres:

1. Clean all exposed surfaces and apply a coat of zinc-chromate primer, followed by a coat of suitable paint.
2. Apply a liberal coating of Lubriplate, type 130-AA, or equivalent, to the following surfaces:
  - a. The exposed end of the starter control valve and around the control shaft where it passes through the clutch housing.
  - b. The exposed ends of the hand pump cam pin.
3. Operate all of the moving parts and check the protective paint and lubrication every week.

Consult an authorized *Detroit Diesel Allison Service Outlet* for any information relating to the Hydrostarter system.

### COLD WEATHER STARTING AIDS

In a diesel engine, the fuel injected into the combustion chamber is ignited by the heat of the air compressed into the cylinder. However, when starting an engine in extremely cold weather, a large part of the energy of combustion is absorbed by the pistons and cylinder walls, and in overcoming the high friction created by the cold lubricating oil.

When the ambient temperature is low, it may be

necessary to use an air heater or a starting fluid to assist ignition of the fuel.

**NOTE:** Starting aids are NOT intended to correct for a low battery, heavy oil or other conditions which cause hard starting. They are to be used only when other conditions are normal, but the air temperature is too cold for

the heat of compression to ignite the fuel-air mixture.

### FLUID STARTING AID

The fluid starting aid (Fig. 8) is designed to inject a highly volatile fluid into the air intake system at low ambient temperatures to assist in igniting the fuel oil injected. The fluid is contained in suitable capsules to facilitate handling.

The starting aid consists of a cylindrical capsule container with a screw cap, inside of which a sliding piercing shaft operates. A tube leads from the capsule container to a hand operated pump and another tube leads to the atomizing nozzle threaded into a tapped hole in the air inlet housing.

The capsule container should be mounted in a vertical position and away from any heat.

Start the engine, using the fluid starting aid, as follows:

1. Remove the threaded cap and insert a fluid capsule in an upright position within the container.

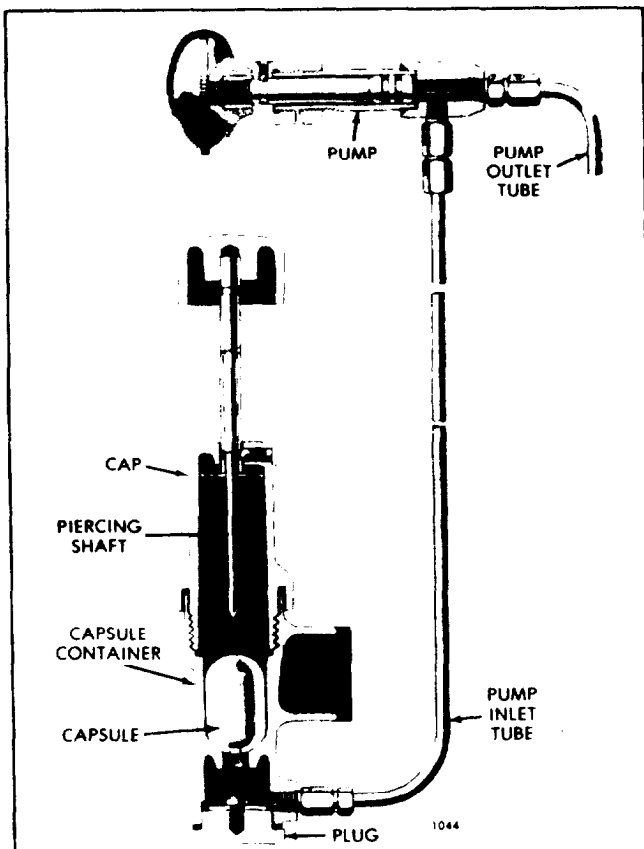


Fig. 8 - Typical Fluid Starting Aid

**CAUTION:** The starting fluid is toxic and inflammable. Use caution when handling.

2. Pull the piercing shaft all the way out and install and tighten the cap on the container.

3. Push the piercing shaft all the way down. This will rupture the capsule and fill the container with the starting fluid.

4. Move the engine throttle to the maximum speed position.

5. Engage the starter and at the same time pull the pump plunger all the way out. Push the plunger in slowly, forcing the starting fluid through the atomizing nozzle into the air intake. Continue to push the pump in until the engine starts. If the plunger is not all the way in when the engine starts, push it in slowly until it locks in the **IN** position.

6. Unscrew the cap and remove the capsule. Do *not* leave the empty capsule in the container.

7. Replace the cap on the capsule container and make sure the piercing shaft is all the way down.

### Service

The cold weather fluid starting aid will require very little service. Replace the piston seal packing if the pump leaks. If there is an excessive resistance to pumping, the nozzle may be plugged. Remove the nozzle and clean it.

### PRESSURIZED CYLINDER STARTING AID

Start the engine during cold weather, using the "Quick Start" starting aid system (Fig. 9) as follows:

1. Press the engine starter button.

2. Pull out the "Quick Start" knob for one or two seconds, then release it.

3. Repeat the procedure if the engine does not start on the first attempt.

**CAUTION:** Do not crank the engine more than 30 seconds at a time when using an electric starting motor. Always allow one minute intervals between cranking attempts to allow the starting motor to cool.

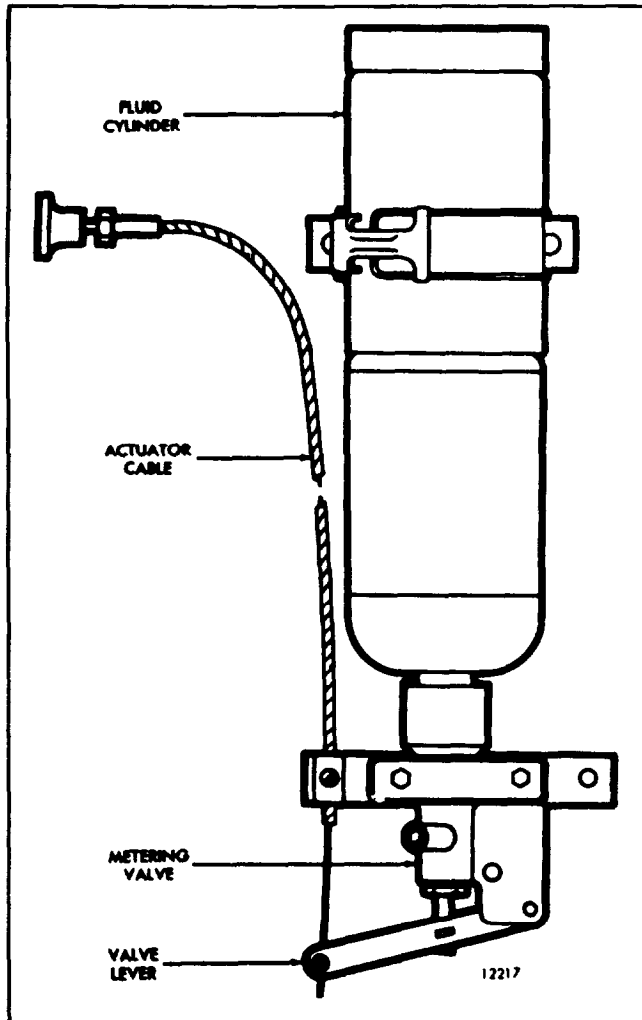


Fig. 9 - Quick-Start Assembly

### Service

Periodically perform the, following service items to assure good performance:

1. Remove the fluid cylinder and lubricate the valve around the pusher pin under the gasket with a few drops of oil.
  2. Lubricate the actuator cable.
  3. Actuate the valve with the cable to distribute the oil on the cable and allow the oil to run down through the valve.
  4. Remove any dirt from the orifice by removing the air inlet housing fitting, the orifice block and the screen. Then blow air through the orifice end only.
  5. Assemble and tighten the air inlet housing fitting to the actuator valve and tube.
  6. Check for leakage of fluid (fogging) on the outside of the engine air inlet housing by actuating the starting aid while the engine is stopped. If fogging occurs, disassemble and retighten the air inlet housing fitting to the housing.
- CAUTION:** Do not actuate the starting aid more than once with the engine stopped. *Over-loading the engine air box with this high volatile fluid could result in a minor explosion.*
7. Check the fluid cylinder for hand tightness.

**GOVERNORS**

Horsepower requirements of an engine may vary continually due to the fluctuating loads; therefore, some means must be provided to control the amount of fuel required to hold the engine speed reasonably constant during such load fluctuations. To accomplish this control, one of three types of governors is used on the engines. Installations requiring maximum and minimum speed control, together with manually controlled intermediate speeds, ordinarily use a *limiting speed* mechanical governor. Applications requiring a near constant engine speed under varying load conditions, that may be changed by the operator, are equipped with a *variable speed* mechanical governor. *The hydraulic governor* is used where uniform engine speed is required under varying load conditions with a minimum speed droop.

**Lubrication**

The mechanical governors are lubricated by oil splash from the engine gear train. Oil entering the governor

is directed by the revolving governor weights to the various moving parts requiring lubrication.

The hydraulic governor is lubricated by oil under pressure from the engine.

**Service**

Governor difficulties are usually indicated by speed variations of the engine. However, speed fluctuations are not necessarily caused by the governor and, therefore, when improper speed variations become evident, the unit should be checked for excessive load, misfiring or bind in the governor operating linkage. If none of these conditions are contributing to faulty governor operation, contact an authorized *Detroit Diesel A Allison Service Outlet*.

**TRANSMISSIONS**

**POWER TAKE-OFF ASSEMBLIES**

The front and rear power take-off units are basically similar in design, varying in clutch size to meet the requirements of a particular application. The power take-off unit is attached to either an adaptor (front power take-off) or the engine flywheel housing (rear power take-off).

**Clutch Adjustment**

These instructions refer to field adjustment for clutch facing wear. Frequency of adjustment depends upon the amount and nature of the load. To ensure a long clutch facing life and the best performance, the clutch should be adjusted before slippage occurs.

When the clutch is properly adjusted, a heavy pressure is required at the outer end of the hand lever to move the throwout linkage to the "over center" or locked position.

Adjust the clutch as follows:

1. Disengage the clutch with the hand lever.
2. Remove the inspection hole cover to expose the clutch adjusting ring. Rotate the clutch, if necessary, to bring the adjusting ring lock within reach.

3. Remove the clutch adjusting ring spring lock screw and lock from the inner clutch pressure plate and adjusting ring. Then, while holding the clutch drive shaft to prevent the clutch from turning, turn the clutch adjusting ring counterclockwise as shown in Fig. 10 and tighten the clutch until the desired pressure on the outer end of the hand lever, or at the

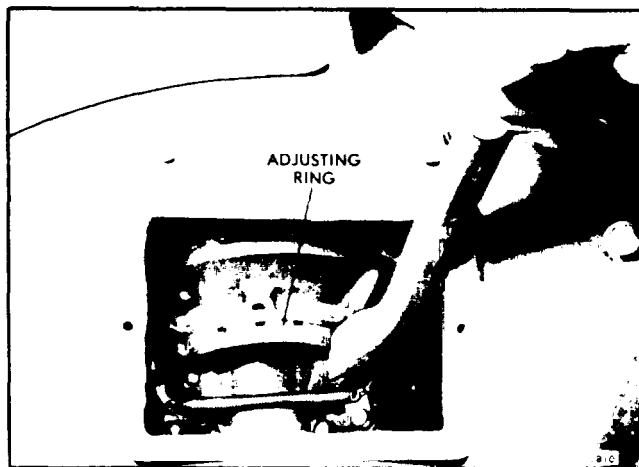


Fig. 10 - Adjusting Clutch

Clutch Diameter	Hand Lever Length	Pressure		Torque	
		PSI	kPa	lb-ft	Nm
8"	15 1/2"	55	379	56-63	76-85
10"	15 1/2"	80	552	87-94	113-127
*11 1/2"	15 3/8"	100	689	129	175
11 1/2"	20"	105	724	112-120	152-163

\*Twin Disc Clutch

TABLE 1

clutch release shaft (Fig. 11), is obtained as shown in Table 1.

When properly adjusted, the approximate pressure required at the outer end of the hand lever to engage the various diameter clutches is shown in the table. These specifications apply only with the hand lever which is furnished with the power take-off,

A suitable spring scale may be used to check the pounds pressure required to engage the clutch. However, a more accurate method of checking the clutch adjustment is with a torque wrench as shown in Fig. 11.

To fabricate an adaptor, saw the serrated end off of a clutch hand lever and weld a 1-1/8" nut (across the hex) on it as shown in Fig. 11. Then saw a slot through the nut.

When checking the clutch adjustment with a torque wrench, engage the clutch slowly and note the amount of torque immediately before the clutch engages (goes over center). The specified torque is shown in Table 1.

**CAUTION:** The thrust load on the bronze clutch release bearing should be kept at an absolute minimum. Therefore, the hand lever should be positioned on the shaft as near the 12 o'clock or 6 o'clock position as possible. The 9 and 3 o'clock positions are to be avoided.

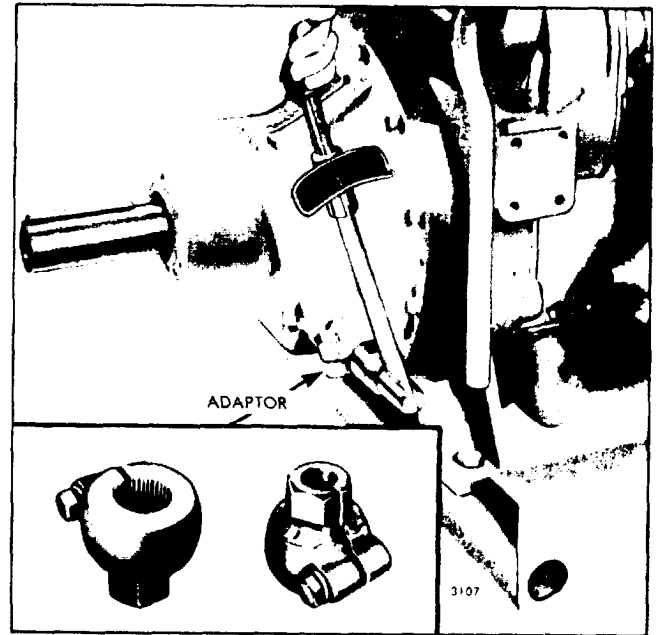


Fig. 11 - Checking Clutch Adjustment with a Torque Wrench and Adaptor

Make a final clutch adjustment with the engine running as follows:

1. Start the engine and operate it at idling speed (approximately 500 rpm) with the clutch disengaged. The speed will be sufficient to move the segments out to the operating position.
2. Check the pressure required to engage the clutch. The engagement pressure should be the same as that following the adjustment. If the clutch engages at a lower pressure, the adjustment was probably made against the unworn portion of the facing.
3. Stop the engine and readjust the clutch, making sure all disc segments are properly positioned. Install the inspection hole cover.

### TORQMATIC CONVERTERS

The Torqmatic converter is a self contained unit which transfers and multiplies the torque of the prime mover. This unit transmits the power through the action of oil instead of through gears and in addition to multiplying the torque also acts as a fluid coupling between the engine and the equipment to be powered. The converter will automatically adjust the output torque to load requirements.

There are various combinations of Torqmatic converters with features such as: an automotive or industrial flange on the shaft, a hydraulically operated

lock-up clutch, a manual input disconnect clutch, and an accessory drive for either a governor or tachometer.

Check the oil level daily. If the converter is equipped with an input disconnect clutch, additional checks and service will be necessary daily or at intervals determined by the type of operation.

Adjust the disconnect clutches as outlined under power take-off clutch adjustment.

Contact an authorized *Detroit Diesel Allison Service Outlet* for service on Torqmatic converters.

**WARNER MARINE GEAR**

The Warner hydraulic marine gear assembly consists of a hydraulically operated multiple disc clutch in combination with a hydraulically actuated reversing gear train, an oil pressure regulator, an oil sump independent of the engine oil system and an oil cooler mounted on the engine.

Oil pressure for the operation of the marine gear is provided by an oil pump incorporated within the gear housing and driven continuously while the engine is running. The oil is delivered under pressure from the pump to a combination marine gear control valve and pressure regulator valve.

The pressure regulator valve maintains constant pressure over a wide speed range and the control valve directs the oil under pressure to either the forward or reverse piston cylinder. The operating oil pressure range for the marine gear at operating speed is 120 to 140 psi (827 to 965 kPa) and the maximum oil temperature is 225° F (107° C). Minimum oil pressure is 100 psi (689 kPa) at idle speed (600 rpm).

Shifting from forward to reverse drive through neutral

may be made at any speed; however, it is advisable to shift at low speeds, below 1000 engine rpm, to avoid damage to the engine, reverse gear or shaft.

The marine reverse and reduction gear is lubricated by pressure and splash. The quantity of oil in the marine gear will vary with the inclination of the engine and must be properly maintained to the *full* mark on the dipstick to ensure satisfactory operation,

It is recommended that vessels utilizing a marine gear have a suitable locking device or brake to prevent rotation of the propeller shaft when the vessel is not under direct propulsion. If the marine gear is not in operation and the forward motion of the vessel causes the propeller shaft to rotate, lubricating oil will not be circulated through the gear because the oil pump is not in operation. Overheating and damage to the marine gear may result unless rotation of the propeller shaft is prevented.

Consult an authorized *Detroit Diesel Allison Service Outlet* for major repairs or reconditioning of the marine gear.

## OPERATING INSTRUCTIONS

### ENGINE OPERATING INSTRUCTIONS

#### PREPARATION FOR STARTING ENGINE FIRST TIME

Before starting an engine for the first time, carefully read and follow these instructions. Attempting to run the engine before studying these instructions may result in serious damage to the engine.

**NOTE:** When preparing to start a new or overhauled engine or an engine which has been in storage, perform all of the operations listed below. Before a routine start (at each shift), see *Daily Operations* in the *Lubrication and Preventive Maintenance Chart*.

#### Cooling System

Install all of the drain cocks or plugs in the cooling system (drain cocks are removed for shipping).

Open the cooling system vents, if the engine is so equipped.

Remove the filler cap and fill the cooling system with clean, soft water or a protective solution consisting of high boiling point type antifreeze, if the engine will be exposed to freezing temperatures. Refer to *Engine Coolant*. Keep the liquid level about two inches below the filler neck to allow for fluid expansion.

Use a quality rust inhibitor if only water is used in the cooling system.

Close the vents, if used, after filling the cooling system.

On marine installations, prime the raw water cooling system and open any sea cocks in the raw water pump intake line. Prime the raw water pump by removing the pipe plug or electrode provided in the pump outlet elbow and pour water in the pump.

**CAUTION:** Failure to prime the raw water pump may result in damage to the pump impeller.

#### Lubrication System

The lubricating oil film on the rotating parts and bearings of a new or overhauled engine, or one which has been in storage, may be insufficient for proper lubrication when the engine is started for the first time.

It is recommended that the engine lubricating system be charged with a pressure prelubricator, set to supply a minimum of 25 psi (172 kPa) oil pressure, to ensure an immediate flow of oil to all bearings at the initial engine start-up. The oil supply line should be attached to the engine so that oil under pressure is supplied to the main oil gallery.

With the oil pan dry, use the prelubricator to prime the engine with sufficient oil to reach all bearing surfaces. Use *heavy-duty* lubricating oil as specified under *Lubricating Oil Specifications*. Then remove the dipstick, wipe it with a clean cloth, insert and remove it again to check the oil level in the oil pan. Add sufficient oil, if necessary, to bring it to the full mark on the dipstick. Do not overfill.

If a pressure prelubricator is not available, fill the crankcase to the proper level with *heavy-duty* lubricating oil as specified. Then pre-lubricate the upper engine parts by removing the valve rocker covers and pouring lubricating oil, of the same grade and viscosity as used in the crankcase, over the rocker arms.

#### Turbocharger

Disconnect the turbocharger oil inlet line and pour approximately one pint of clean engine oil in the line, thus making sure the bearings are lubricated for the initial start. Reconnect the oil line.

#### Air Cleaner

If the engine is equipped with oil bath air cleaners, fill the air cleaner oil cups to the proper level with clean engine oil. *Do not overfill.*

#### Transmission

Fill the transmission case, marine gear or torque converter supply tank to the proper level with the lubricant specified under *Lubrication and Preventive Maintenance*.

#### Fuel System

Fill the fuel tank with the fuel specified under *Diesel Fuel Oil Specifications*.



If the unit is equipped with a fuel valve, it must be opened.

To ensure prompt starting, fill the fuel system between the pump and the fuel return manifold with fuel. If the engine has been out of service for a considerable length of time, prime the filter between the fuel pump and the injectors. The filter may be primed by removing the plug in the top of the filter cover and slowly filling the filter with fuel.

In addition to the above, on an engine equipped with a Hydrostarter, use a priming pump to make sure the fuel lines and the injectors are full of fuel before attempting to start the engine.

**NOTE:** The fuel system is filled with fuel before leaving the factory. If the fuel is still in the system when preparing to start the engine, priming should be unnecessary.

### **Lubrication Fittings**

Fill all grease cups and lubricate at all fittings with an all purpose grease. Apply lubricating oil to the throttle linkage and other moving parts and fill the hinged cap oilers with a hand oiler.

### **Drive Bolts**

Adjust all drive belts as recommended under *Lubrication and Preventive Maintenance*.

### **storage Battery**

Check the battery. The top should be clean and dry, the terminals tight and protected with a coat of petroleum jelly and the electrolyte must be at the proper level.

**NOTE:** When necessary, check the battery with a hydrometer; the reading should be 1.265 or higher. However, hydrometer readings should always be corrected for the temperature of the electrolyte.

### **Generator Set**

Where applicable, fill the generator end bearing housing with the same lubricating oil as used in the engine.

A generator set should be connected and grounded in accordance with the applicable local electrical codes.

**CAUTION:** The base of a generator set must be grounded.

### **Clutch**

Disengage the clutch, if the unit is so equipped.

## **STARTING**

Before starting the engine for the first time, perform the operations listed under *Preparation For Starting Engine First Time*.

Before a routine start, see *Daily Operations* in the *Lubrication and Preventive Maintenance Chart*.

If a manual or an automatic shut-down system is incorporated in the unit, the control must be set in the open position before starting the engine.

The blower will be seriously damaged if operated with the air shut-off valve in the closed position.

Starting at air temperatures below 40° F (4° C) requires the use of a cold weather starting aid. See *Cold Weather Starting*.

The instructions for the use of a cold weather fluid starting aid will vary dependent on the type being used. Reference should be made to these instructions before attempting a cold weather start.

**CAUTION:** Starting fluid used in capsules is highly inflammable, toxic and possesses anesthetic properties.

### **Initial Engine Start (Electric)**

Start an engine equipped with an electric starting motor as follows: Set the speed control lever at part throttle, then bring it back to the desired no-load speed. In addition, on mechanical governors, make sure the stop lever on the governor cover is in the run position. Then press the starting motor switch firmly. If the engine fails to start within 30 seconds, release the starting switch and allow the starting motor to cool a few minutes before trying again. If the engine fails to start after four attempts, an inspection should be made to determine the cause.

**CAUTION:** To prevent serious damage to the starter, if the engine does not start, do not press the starting switch again while the starting motor is running..

### **Initial Engine Start (Hydrestarter)**

Ambient Temperature	Pressure Gage Reading
Above 40°F (4°C)	1500 PSI (10 335 kPa)
40°F to 0°F (4° to – 18°)	2500 PSI (17 225 kPa)
Below 0°F (– 18°C)	3300 PSI (22 737 kPa)

Table 1

An engine equipped with a Hydrostarter may be started as follows:

Raise the Hydrostarter accumulator pressure with the hand pump until the gage reads as indicated in Table 1.

Set the engine controls for starting with the throttle at least half open.

**NOTE:** During cold weather add starting fluid at the same time the Hydrostarter motor lever is moved. Do not wait to add the fluid after the engine is turning over.

Push the Hydrostarter control lever to simultaneously engage the starter pinion with the flywheel ring gear and to open the control valve. Close the valve as soon as the engine starts to conserve the accumulator pressure and to avoid excessive over-running of the starter drive clutch assembly.

## RUNNING

### Oil Pressure

Observe the oil pressure gage immediately after starting the engine. If there is no pressure indicated within 10 to 15 seconds, stop the engine and check the lubricating oil system. The minimum oil pressure should be at least 18 psi (124 kPa) at 1200 rpm. The oil pressure at normal operating speed should be 40-60 psi (276-414 kPa).

### Warm-Up

Run the engine at part throttle and no-load for approximately five minutes, allowing it to warm-up before applying a load.

If the unit is operating in a closed room, start the room ventilating fan or open the windows, as weather conditions permit, so ample air is available for the engine.

### clutch

Do not engage the clutch at engine speeds over 1000 rpm.

### Inspection

While the engine is running at operating temperature, check for coolant, fuel or lubricating oil leaks. Tighten the line connections where necessary to stop leaks.

### Engine Temperature

Normal engine coolant temperature is 160-185° F (71-85° C).

### Crankcase

If the engine crankcase was refilled, stop the engine after normal operating temperature has been reached, allow the oil to drain back into the crankcase for approximately twenty minutes and check the oil level. Add oil, if necessary, to bring it to the proper level on the dipstick.

Use only the *heavy duty* lubricating oil specified under *Lubricating Oil Specifications*.

### Cooling System

Remove the radiator or heat exchanger tank cap slowly after the engine has reached normal operating temperature and check the engine coolant level. The coolant level should be near the top of the opening. If necessary, add clean soft water or a high boiling point type antifreeze (refer to *Engine Coolant*).

### Marine Gear

Check the marine gear oil pressure. The operating oil pressure range for the marine gear at operating speed is 120 to 160 psi (827 to 1103 kPa) and minimum oil pressure is 100 psi (689 kPa) at idle speed (600 rpm).

### Turbocharger

Make a visual inspection of the turbocharger for leaks and excessive vibration. Stop the engine immediately if there is an unusual noise in the turbocharger.

### Avoid Unnecessary Engine Idling

During long engine idling periods, the engine coolant temperature will fall below the normal operating range. The incomplete combustion of fuel in a cold engine will cause crankcase dilution, formation of lacquer or gummy deposits on the valves, pistons and rings and rapid accumulation of sludge in the engine.

**NOTE:** When prolonged engine idling is necessary, maintain at least 800 rpm.

### STOPPING

#### Normal Stopping

1. Release the load and decrease the engine speed. Put all shift levers in the *neutral* position.
2. Allow the engine to run at half speed or slower with no load for a short time, then move the stop lever to *stop* to shutdown the engine.

#### Emergency Stopping

If the engine does not stop after using the normal stopping procedure, pull the "Emergency Stop" knob all the way out. This control cuts off the air to the engine. Do not try to restart again until the cause for the malfunction has been found and corrected.

**CAUTION:** The emergency shut-down system should never be used except in an emergency. Use of the emergency shut-down can cause oil to be sucked past the oil seals and into the blower housing.

The air shut-off valve, located on the blower air inlet housing, must be reset by hand and the "Emergency Stop" knob pushed in before the engine is ready to start again.

#### Fuel System

If the unit is equipped with a fuel valve, close it. Fill the fuel tank; a full tank minimizes condensation.

#### Exhaust System

Drain the condensation from the exhaust line or silencer.

#### Cooling System

Drain the cooling system if it is not protected with antifreeze and freezing temperatures are expected. Leave the drains open. Open the raw water drains of a heat exchanger cooling system.

#### Crankcase

If the engine crankcase was refilled, stop the engine after normal operating temperature has been reached, allow the oil to drain (approximately 20 minutes) back into the crankcase and check the oil level. Add oil, if necessary, to bring it to the proper level on the dipstick.

Use only the *heavy-duty* lubricating oil specified under *Lubricating Oil Specifications*.

#### Transmission

Check and, if necessary, replenish the oil supply in the transmission.

#### Clean Engine

Clean and check the engine thoroughly to make certain it will be ready for the next run.

Refer to *Lubrication and Preventive Maintenance* and perform all of the daily maintenance operations. Also perform the operations required for the number of hours or miles the engine has been in operation.

Make the necessary adjustments and minor repairs to correct difficulties which became apparent to the operator during the last run.

## ALTERNATING CURRENT POWER GENERATOR SET OPERATING INSTRUCTIONS

These instructions cover the fundamental procedures for operating an alternating current power generator set (Fig. 1). The operator should read these instructions before attempting to operate the generator set.

Never operate a generator set for a short (15 minute) interval - the engine will not reach normal operating temperature in so short a period.

Avoid operating the set for extended periods at no-load.

Ideally, operate the set for one hour with at least 40% load (generator rating).

When a test must be made with a line load of less than 40% of the generator rating, add a supplementary load.

Connect the supplementary load to the load terminals of the control cabinet circuit breaker so that the generator can be "loaded" whenever the breaker is closed.

Make certain that the supplementary load is such that

it can be controlled to permit a reduction in the load should a normal load increase occur while the set is operating. Locate the supplementary load outside the engine room, if desirable, to provide adequate cooling.

Loading the generator set to 40% of the generator rating and operating it for one-hour intervals will bring the engine and generator to normal operating temperatures and circulate the lubricants properly. Abnormal amounts of moisture, carbon and sludge are due primarily to low internal operating temperatures which are much less likely to occur when the set is tested properly.

### PREPARATION FOR STARTING

Before attempting to start a new or an overhauled engine or an engine which has been in storage, perform all of the operations listed under *Preparation for Starting Engine First Time*. Before a routine start, see *Daily Operations* in the *Lubrication and Preventive Maintenance Chart*.

In addition to the *Engine Operating Instructions*, the

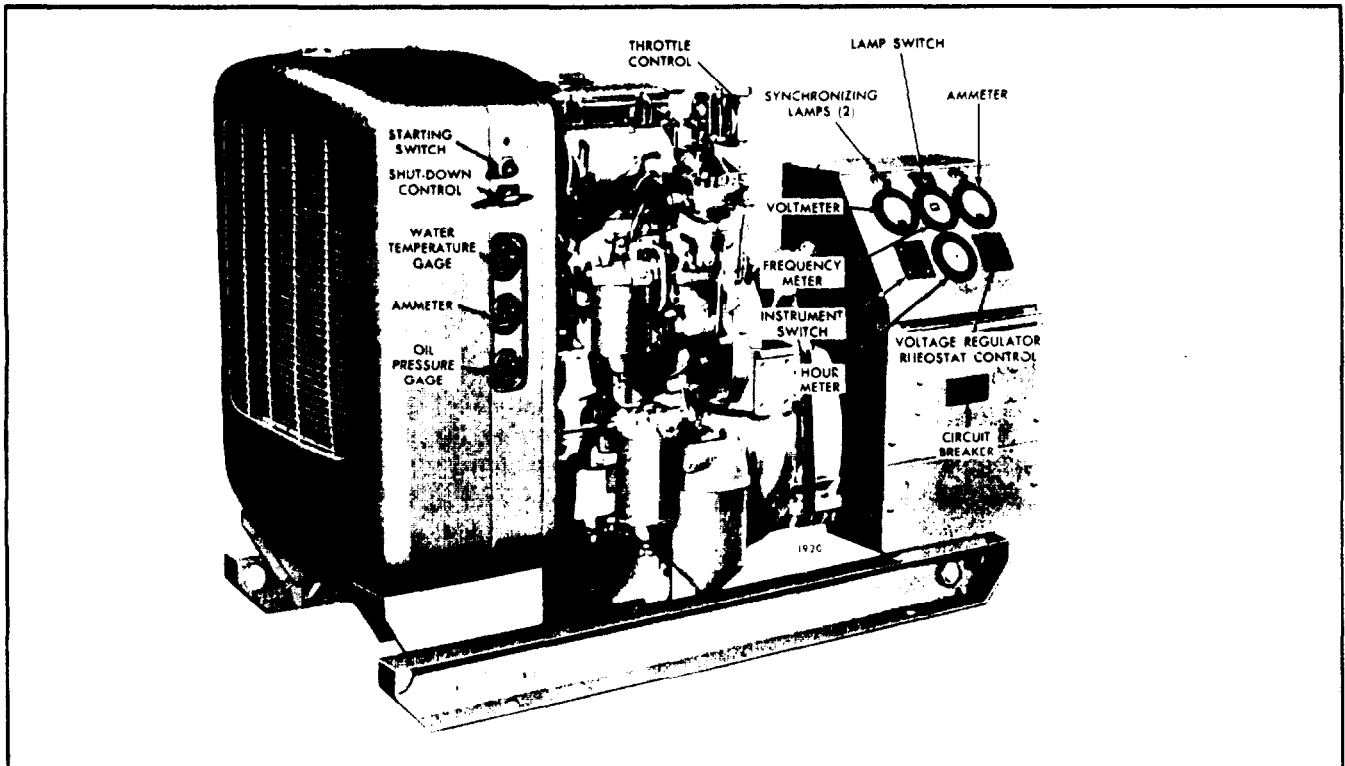


Fig. 1 - Location of Controls on Power Generator Set

following instructions also apply when operating an alternating current power generator set.

1. Before the first start, check the generator main bearing oil reservoir. If necessary, add sufficient lubricating oil, of the same grade as used in the engine crankcase, to bring it to the proper level on the sight gage.
2. Check the interior of the generator for dust or moisture. Blow out dust with low pressure air (25 psi or 172 kPa maximum). If there is moisture on the interior of the generator, it must be dried before the set is started. Refer to the appropriate Delco Products Maintenance bulletin.
3. The air shut-off valve located in the air inlet housing must be in the open or reset position.
4. Refer to Fig. 1 and place the circuit breaker in the **off** position.
5. If the generator set is equipped with synchronizing lamps, place the lamp switch in the **off** position.
6. Turn the voltage regulator rheostat knob counterclockwise to its lower limit.
7. Make sure the power generator set has been cleared of all tools or other objects which might interfere with its operation.

### STARTING

If the generator set is located in a closed space, start the ventilating fan or open the doors and windows, as weather permits, to supply ample air to the engine.

The engine may require the use of a cold weather starting aid if the ambient temperature is below 40° F (4° C). Refer to *Cold Weather Starting Aids*.

Press the throttle button and turn the throttle control (Fig. 1) counterclockwise to a position midway between **run** and **stop**. Then press the starting switch firmly.

If the engine fails to start within 30 seconds, release the starting switch and allow the starting motor to cool a few minutes before trying again. If the engine fails to start after four attempts, an inspection should be made to determine the cause.

**CAUTION:** To prevent serious damage to the starter, if the engine does not start, do not press the starting switch again while the starting motor is rotating.

### RUNNING

Observe the engine oil pressure gage immediately after starting the engine. If there is no oil pressure indicated within 10 to 15 seconds, stop the engine and check the engine lubricating system.

If the oil pressure is observed to be normal, increase the throttle setting to cause the engine to run at its synchronous speed.

### PREPARING GENERATOR FOR LOAD

After the engine is warmed up (or the oil pressure has stabilized) prepare the generator set for load as follows:

1. Bring the engine up to the rated speed.
2. Turn the instrument switch to the desired position.
3. Turn the voltage regulator rheostat knob slowly in a clockwise direction to raise the voltage, while watching the voltmeter, until the desired voltage is attained.
4. If the generator set is equipped with a frequency meter, adjust the engine speed with the vernier throttle knob until the desired frequency is indicated on the meter.
5. Make sure all power lines are clear of personnel, then place the circuit breaker control in the **on** position.

**NOTE:** Perform Step 5 only if the generator set is not being paralleled with an existing power source. If it is being paralleled with a power source already on the line, read and follow the instructions under *Paralleling* before turning the circuit breaker control to the **on** position.

### PARALLELING

If the load conditions require an additional unit to be placed on the line, the following instructions will apply to power generator sets of equal capacity, with one generator set in operation on the line.

1. Prepare the generator set to be paralleled as outlined under *Preparation For Starting, Starting, Running* and Items 1 through 4 under *Preparing Generator for Load*.
2. Check the voltmeter (Fig. 1); the voltage must be the same as the line voltage. Adjust the voltage regulator rheostat control if the voltages are not the same.
3. Place the synchronizing lamp switch, of the generator set to be paralleled, in the **on** position.

4. Turn the vernier throttle knob until both units are operating at approximately the same frequency as indicated by the slow change in the brilliancy of the synchronizing lamps.
5. When the synchronizing lamps glow and then go out at a very slow rate, time the dark interval. Then, in the middle of this interval, turn the circuit breaker control to the on position. This places the incoming generator set on the line, with no load. The proper share of the existing load must now be placed on this generator.
6. The division of the kilowatt load between the alternating current generators operating in parallel depends on the power supplied by the engines to the generators as controlled by the engine governors and is practically independent of the generator excitation. Divide the kilowatt load between the generators by turning the vernier throttle knob counterclockwise on the incoming generator and clockwise on the generator that has been carrying the load (to keep the frequency of the generators constant) until both ammeters read the same, indicating that each generator is carrying its proper percentage of the total K.W. load.
7. The division of the reactive KVA load depends on the generator excitation as controlled by the voltage regulator. Divide the reactive load between the generators by turning the voltage regulator rheostat control on the incoming generator (generally clockwise to raise the voltage) until the ammeters read the same on both generator sets and the sum of the readings is minimum.  
  
**NOTE:** The generator sets are equipped with a resistor and current transformer connected in series with the voltage coil of the regulator (cross-current compensation) which equalizes most but not all of the reactive KVA load between the generators.
8. When the load is 80 per cent power factor lagging (motor and a few lights only), turn the vernier throttle knob on the incoming generator until the ammeter on

that unit reads approximately 40 per cent of the total current load.

9. Rotate the voltage regulator rheostat control on the incoming generator clockwise to raise the voltage until the ammeters read the same on both units.

**NOTE:** If a load was not added during paralleling, the total of the two ammeter readings should be the same as the reading before paralleling. Readjust the voltage regulator rheostat on the incoming generator, if necessary.

10. To reset the load voltage, turn the voltage regulator rheostat controls slowly on each unit. It is necessary to turn the controls the same amount and in the same direction to keep the reactive current equally divided.

Power generator sets with different capacities can also be paralleled by dividing the load proportionately to their capacity.

### STOPPING

The procedure for stopping a power generator set or taking it out of parallel is as follows:

1. Turn off all of the load on the generator when stopping a single engine unit.
2. Shift the load from the generator when taking it out of parallel operation by turning the vernier throttle knob until the ammeter reads approximately zero.
3. Place the circuit breaker control in the **off** position.
4. Turn the voltage regulator rheostat control in a counterclockwise direction to the limit of its travel.
5. Press the throttle button and turn the throttle control to **stop** to shut-down the engine.

**NOTE:** When performing a tune-up on a generator set that will be operated in parallel with another unit, adjust the speed droop as specified in *Engine Tune-Up*.



## **LUBRICATION AND PREVENTIVE MAINTENANCE**

To obtain the best performance and long life from a Detroit Diesel engine, the Operator must adhere to the following schedule and instructions on lubrication and preventive maintenance.

The daily instructions pertain to routine or daily starting of an engine and not to a new engine or one that has not been operated for a considerable period of time. For new or stored engines, carry out the instructions given under *Preparation for Starting Engine First Time under Operating Instructions*.

The time intervals given in the chart on the following page are actual operating hours or miles of an engine. If the lubricating oil is drained immediately after an engine has been run for some time, most of the sediment will be in suspension and, therefore, will drain readily.

All authorized *Detroit Diesel Allison Service Outlets* are prepared to service engines with the viscosity and grade of lubricants recommended on the following pages.



Preventive Maintenance

DETROIT DIESEL

LUBRICATION AND PREVENTIVE MAINTENANCE CHART			Time Interval								
			Hours	8	50	100	200	300	500	1,000	2,000
Item	Operation	Miles	Daily	240	1,500	3,000	6,000	9,000	15,000	30,000	60,000
1. Engine Oil			X								
2. Oil Filter*											
3. Coolant and Filter			X						X	X	
4. Hoses									X		
5. Radiator										X	
6. Heat Exchanger Electrodes and Core									X	X	
7. Raw Water Pump			X								
8. Fuel Tank			X						X		
9. Fuel Strainer and Filter								X			
10. Air Cleaners				X					X		
11. Air Box Drains									X	X	
12. Ventilating System										X	
13. Blower Screen										X	
14. Starting Motor*											
15. Battery-Charging Alternator						X	X		X		X
16. Battery						X					
17. Tachometer Drive and Clutch Controls						X					
18. Throttle Controls							X				
19. Engine Tune-Up*											
20. Drive Belts				X			X				
21. Overspeed Governor									X		
22. Fan Hub Bearings*											
23. Shut-Down System								X			
24. Hydrostarter System*											
25. Air Compressor Air Strainer							X				
26. Turbocharger*											
27. Power Generator						X		X			
28. Power Take-Off				X	X				X		
29. Torqmatic Converter			X		X				X		
30. Marine Gear			X				X			X**	

\*See items on following pages

\*\*Twin Disc Marine Gear

**Item 1**

Check the oil level daily before starting the engine. Add oil, if necessary, to bring it to the proper level on the dipstick.

Select the proper grade of oil in accordance with the instructions in the *Lubricating Oil Specifications*.


It is recommended that new engines be started with 100 hour oil change periods. The drain interval may then be gradually increased, or decreased, following the recommendations of an independent oil analysis laboratory or the oil supplier (based upon the oil sample analysis) until the most practical oil change period has been established.

**Item 2**


Install new engine oil filter elements and gaskets each time the engine oil is changed. Check for oil leaks after starting the engine. If the engine is equipped with a governor oil filter, change the element every 1,000 hours.

**Item 3**

Check the coolant level daily and maintain it near the

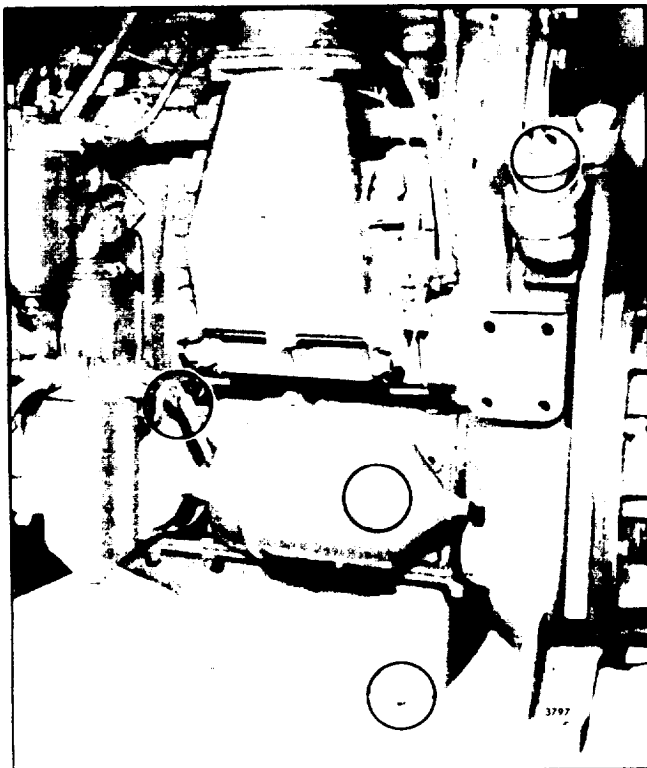

Items 1 and 2

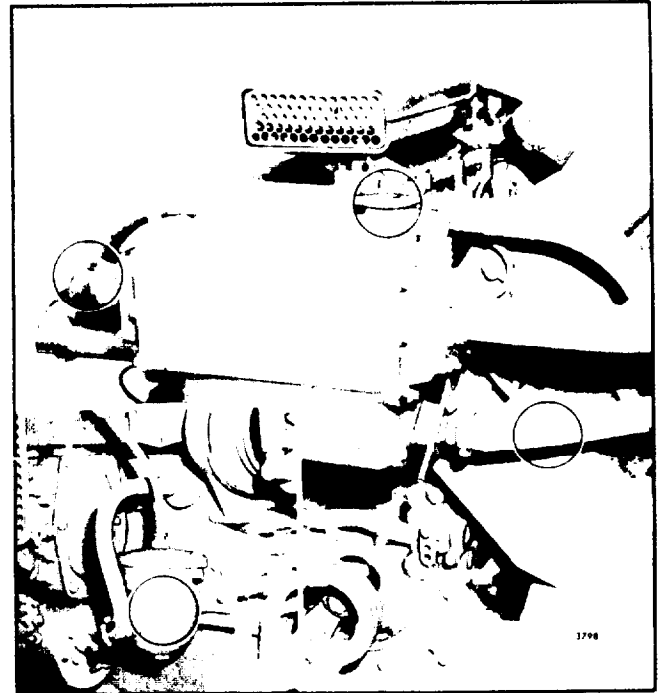

Items 3 and 4

top of the heat exchanger tank or the radiator upper tank.

Clean the cooling system every 1,000 hours or 30,000 miles using a good radiator cleaning compound in accordance with the instructions on the container. After the cleaning operation, rinse the cooling system thoroughly with fresh water. Then fill the system with soft water, adding a good grade of rust inhibitor or a high boiling point type antifreeze (refer to *Engine Coolant*). With the use of a proper antifreeze or rust inhibitor, this interval may be lengthened until, normally, this cleaning is done only in the spring or fall. The length of this interval will, however, depend upon an inspection for rust or other deposits on the internal walls of the cooling system. When a thorough cleaning of the cooling system is required, it should be reverse-flushed.

If the cooling system is protected by a coolant filter and conditioner, the filter element should be changed every 500 hours or 15,000 miles.

**Item 4**


Inspect all of the cooling system hoses at least once every 500 hours or 15,000 miles for signs of deterioration. Replace the hoses if necessary.

**Item 5**

Inspect the exterior of the radiator core every 1,000 hours or 30,000 miles and, if necessary, clean it with a quality grease solvent such as Oleum and compressed air. Do not use fuel oil, kerosene or gasoline. It may be necessary to clean the radiator more frequently if the engine is being operated in extremely dusty or dirty areas.

**Item 6**

Every 500 hours drain the water from the heat exchanger raw water inlet and outlet tubes. Then remove the zinc electrodes from the inlet side of the

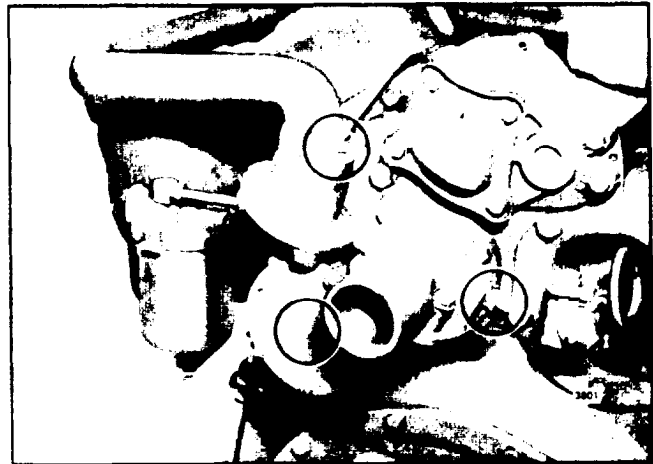

Item 7

raw water pump and the heat exchanger. Clean the electrodes with a wire brush or, if worn excessively, replace with new electrodes. To determine the condition of a used electrode, strike it sharply against a hard surface; a weakened electrode will break.

Drain the cooling system, disconnect the raw water pipes at the outlet side of the heat exchanger and remove the retaining cover every 1,000 hours and inspect the heat exchanger core. If a considerable amount of scale or deposits are present, contact an authorized *Detroit Diesel Allison Service Outlet*.

**Item 7**

Check the prime on the raw water pump; the engine should not be operated with a dry pump. Prime the pump, if necessary, by removing the pipe plug provided in the pump inlet elbow and adding water. Reinstall the plug.

**Item 8**


Keep the fuel tank filled to reduce condensation to a minimum. Select the proper grade of fuel in accordance with the *Diesel Fuel Oil Specifications*.

Open the drain at the bottom of the fuel tank every 500 hours or 15,000 miles to drain off any water or sediment.


**Item 9**

Install new elements every 300 hours or 9,000 miles or when plugging is indicated.

A method of determining when elements are plugged

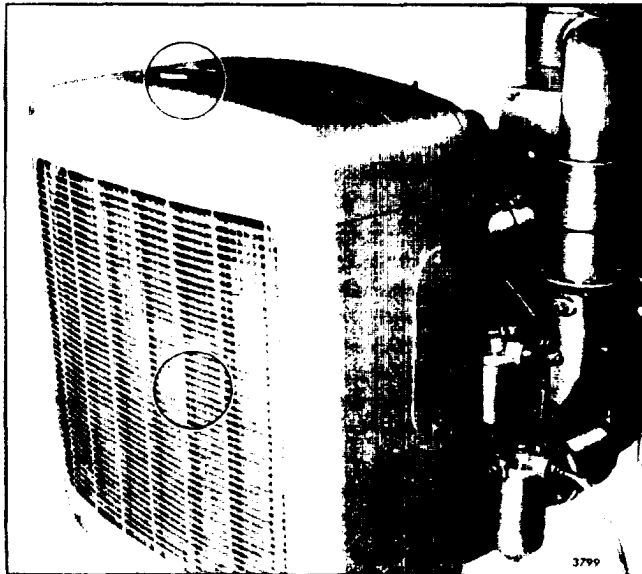

Item 5

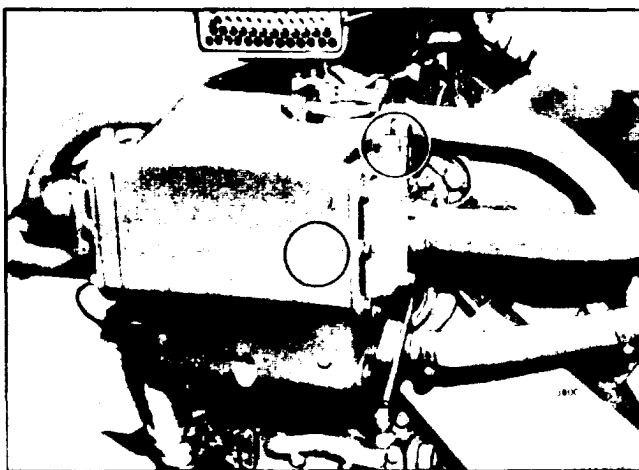


Item 6


to the extent that they should be changed is based on the fuel pressure at the cylinder head fuel inlet manifold and the inlet restriction at the fuel pump. In a clean system, the maximum pump inlet restriction must not exceed 6 inches of mercury. At normal operating speeds (1800-2800 rpm), the fuel pressure is 45 to 70 psi (310 to 483 kPa). Change the fuel filter elements whenever the inlet restriction (suction) at the fuel pump reaches 12 inches of mercury at normal operating speeds and whenever the fuel pressure at the inlet manifold falls to 45 psi (310 kPa).

**Item 10**

Remove the dirty oil and sludge from the oil bath-type

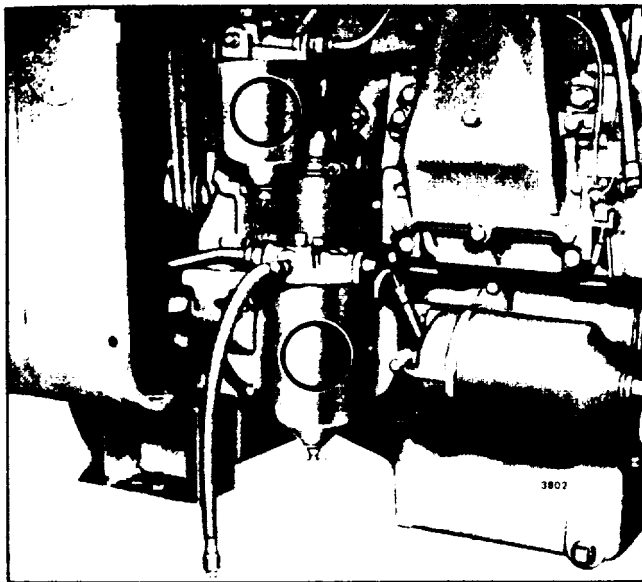

Item 9

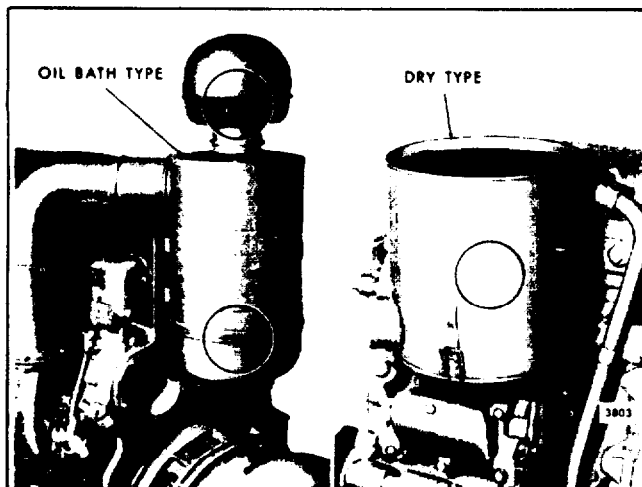

Item 10

air cleaner cups and center tubes every 8 hours or less if operating conditions warrant. Wash the cups and elements in clean fuel oil and refill the cups to the level mark with the same grade of heavy *duty oil* as used in the engine. The frequency of servicing may be varied to suit local dust conditions.

It is recommended that the body and fixed element in the heavy-duty oil bath type air cleaner be serviced every 500 hours, 15,000 miles or as conditions warrant.


Clean or replace the element in the dry-type air cleaner when the restriction indicator instrument indicates high restriction or when a water manometer reading at the air inlet housing indicates the maximum allowable air inlet restriction (refer to the *Air Inlet Restriction* chart in the *Trouble Shooting* section). Refer to the instructions in the *Air System* section for servicing the dry-type air cleaner.

**Item 11**

With the engine running, check for flow of air from the air box drain tubes every 1,000 hours or 30,000 miles. If the tubes are clogged, remove, clean and reinstall the tubes. The air box drain tubes should be cleaned periodically even though a clogged condition is not apparent. If the engine is equipped with an air box drain tank, drain the sediment periodically. If the engine is equipped with an air box drain check valve, replace the valve every 500 hours or 15,000 miles.

**Item 12**

Clean the externally mounted crankcase breather assemblies every 1,000 hours or 30,000 miles. This cleaning period may be reduced or lengthened according to severity of service. Clean the internally

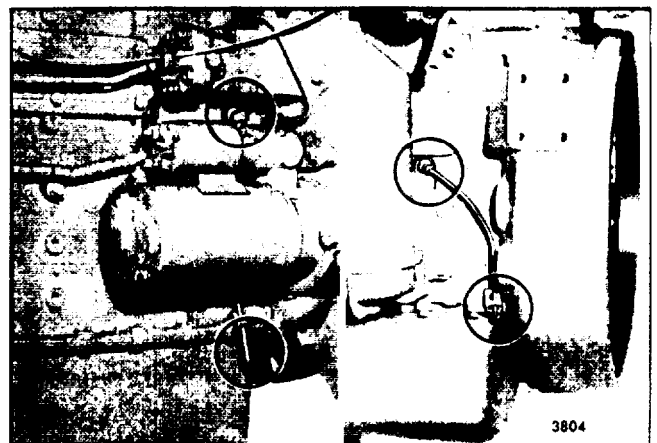

Item 11


mounted breather pads at time of engine overhaul, or sooner if excessive crankcase pressure is observed.

Remove the crankcase breather from the engine and wash the steel mesh pad (element) in fuel oil and dry it with compressed air. Reinstall the breather assembly.

Clean the breather cap, mounted on the valve rocker cover, in clean fuel oil every time the engine oil is changed.

**Item 13**

Inspect the blower screen and gasket assemblies every 1,000 hours or 30,000 miles and, if necessary, clean the screens in fuel oil and dry them with compressed air.

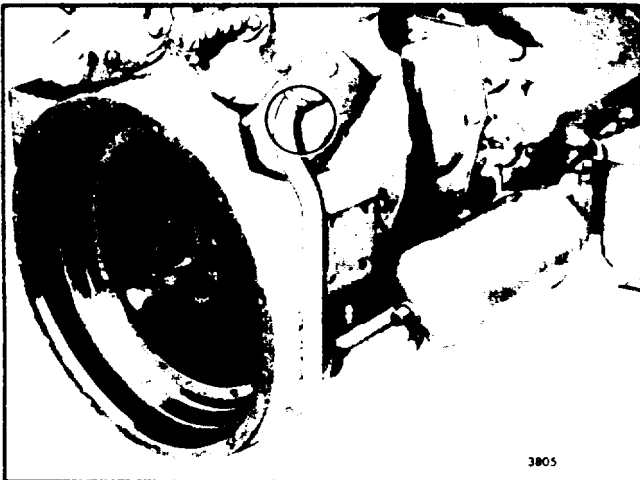

Item 12



Item 13

Reinstall the screen and gasket assemblies with the screen side of the assemblies toward the blower. Inspect for evidence of blower seal leakage.

**Item 14**

The electrical starting motor is lubricated at the time of original assembly. Oil can be added to the oil wicks, which project through each bushing and contact the armature shaft, by removing the pipe plugs on the outside of the motor. The wicks should be lubricated whenever the starting motor is taken off the engine or disassembled.


The Sprag overrunning clutch drive mechanism should be lubricated with a few drops of light engine oil whenever the starting motor is overhauled.

**Item 15**


Lubricate the alternator bearings or bushings with 5 or 6 drops of engine oil at the hinge cap oiler every 200 hours or 6,000 miles.

Some alternators have a built-in supply of grease, while others use sealed bearings. In these latter two cases, additional lubrication is not necessary.

The slip rings and brushes of an alternator can be inspected through the end frame assembly. If the slip rings are dirty, they should be cleaned with 400 grain or finer polishing cloth. Never use emery cloth to clean slip rings. Hold the polishing cloth against the slip rings with the alternator in operation and blow away

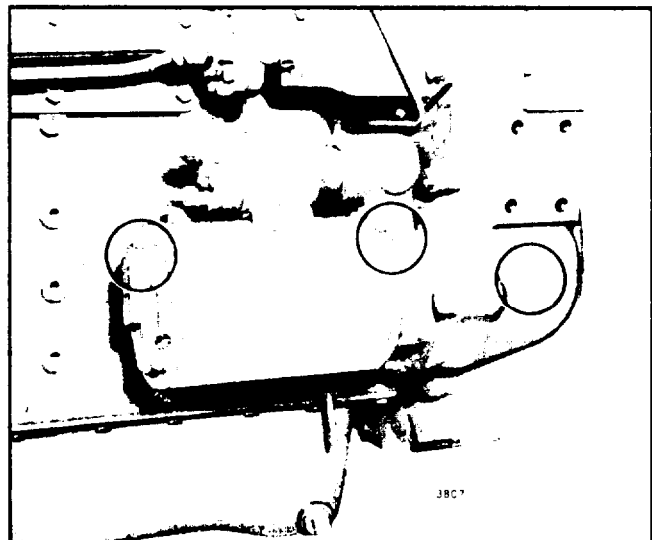

Item 14

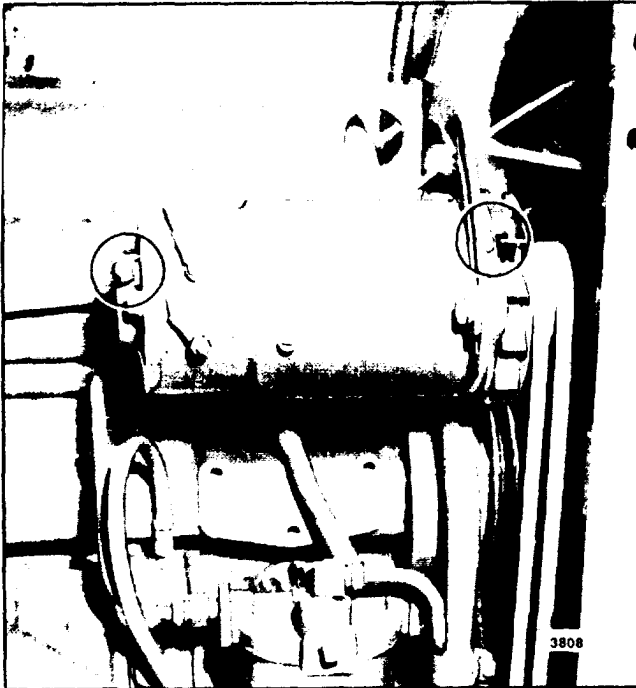

Item 15

all dust after the cleaning operation. If the slip rings are rough or out of round, replace them.

Inspect the terminals for corrosion and loose connections and the wiring for frayed insulation.

**Item 16**


Check the specific gravity of the electrolyte in each cell of the battery every 100 hours or 3,000 miles. In warm weather, however, it should be checked more frequently due to a more rapid loss of water from the electrolyte. The electrolyte level should be maintained in accordance with the battery manufacturer's recommendations.

**Item 17**

Lubricate the tachometer drive every 100 hours or 3,000 miles with an all purpose grease at the grease fitting. At temperatures above + 30° F (-1° C), use a No. 2 grade grease. Use a No. 1 grade grease below this temperature.

**Item 18**

Lubricate the throttle control mechanism every 200 hours or 6,000 miles with an all purpose grease. At

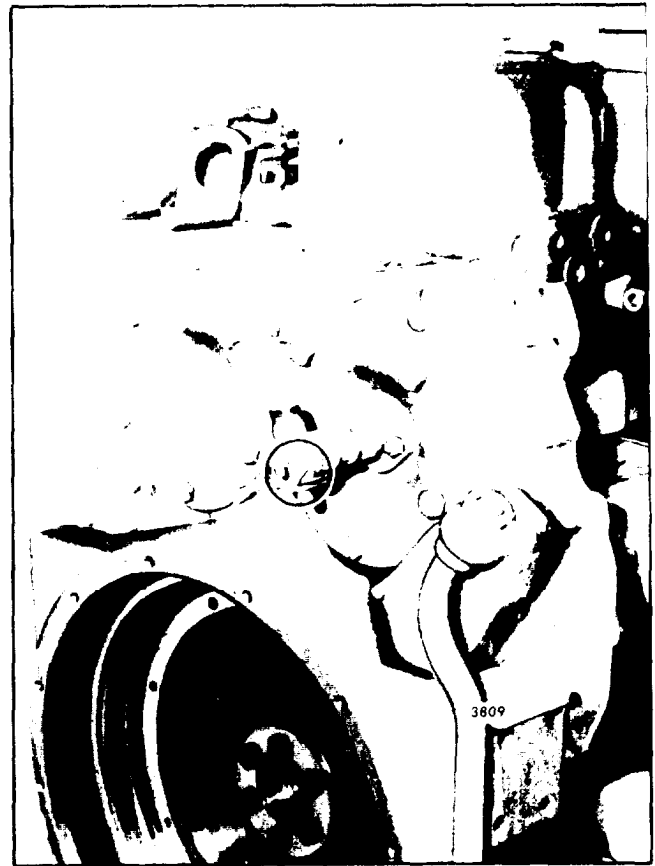

Item 17

temperatures above + 30°F (-1°C), use a No. 2 grade grease. Use a No. 1 grade grease below this temperature. Lubricate all other control mechanisms, as required, with engine oil.

**Item 19**

There is no scheduled interval for performing an engine tune-up. As long as the engine performance is satisfactory, no tune-up should be needed. Minor adjustments in the valve and injector operating mechanisms, governor, etc. should only be required periodically to compensate for normal wear on parts.

**Item 20**

New drive belts will stretch after the first few hours of operation. Run the engine for 15 seconds to seat the belts and readjust the tension. Then check the belts and retighten the fan drive, pump drive and battery-charging alternator drive belts after 1/2 hour or 15 miles and again after 8 hours or 140 miles of operation. Thereafter, check the tension of the drive

belts every 200 hours or 6,000 miles and adjust, if necessary. Too tight a belt is destructive to the bearings of the driven part; a loose belt will slip.

BELT TENSION CHART (lbs/belt)

Model	Fan Drive		Generator Drive		
	2 or 3 belts	Single belt	Two 3/8" or 1/2" belts	One 1/2" belt	One 9/16" belt
3,4-53	40-50	-	40-50	50-70	40-50
6V-53	60-80	80-100	40-50	50-70	40-50
For 3-point or triangular drive use a tension of 90-120.					

Replace all belts in a set when one is worn. Single belts of similar size should not be used as a substitute for a matched belt set; premature belt wear can result because of belt length variation. All belts in a matched set are within .032" of their specified center distances.

**NOTE:** When installing or adjusting an accessory drive belt, be sure the bolt at the accessory adjusting pivot point is properly tightened, as well as the bolt in the adjusting slot.

Adjust the belt tension so that a firm push with the thumb, at a point midway between the two pulleys, will depress the belt 1/2" to 3/4". If a belt tension gage such as BT-33-73FA or equivalent is available, adjust the belt tension as outlined in the chart.

#### Item 21


Lubricate the overspeed governor, if it is equipped with a hinge-type cap oiler or oil cup, with 5 or 6 drops of engine oil every 500 hours. Avoid excessive lubrication and do not lubricate the governor while the engine is running.

#### Item 22

If the fan bearing hub assembly is provided with a grease fitting, use a hand grease gun and lubricate the bearings with one shot of Texaco Premium RB grease, or an equivalent Lithium base multi-purpose grease, every 20,000 miles (approximately 700 hours).

Every 75,000 miles or 2500 hours, clean, inspect and repack the fan bearing hub assembly with the above recommended grease.

At a major engine overhaul, remove and discard the bearings in the fan hub assembly. Pack the hub assembly, using new bearings, with Texaco Premium RB grease or an equivalent Lithium base multi-purpose grease.

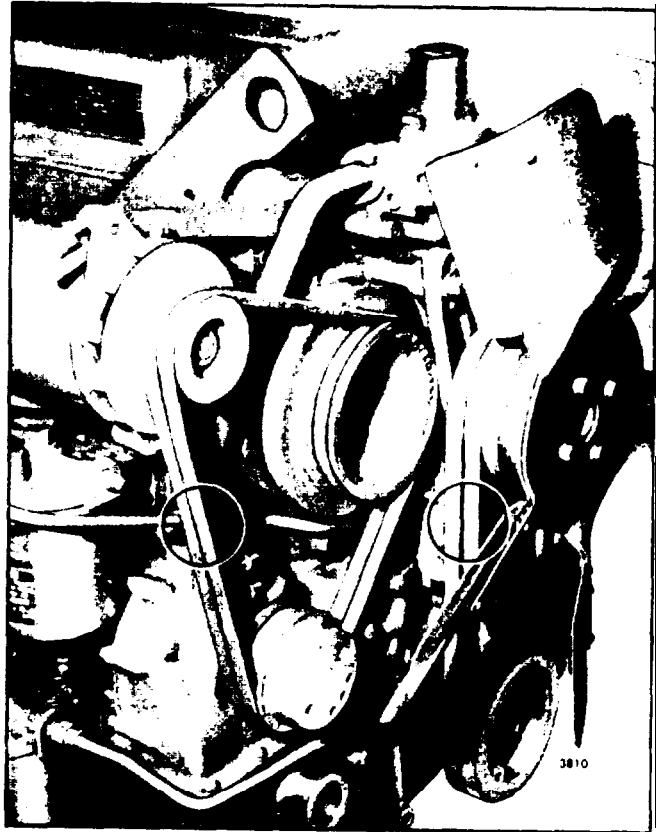

Item 20

#### Item 23

Check the shutdown system every 300 operating hours or each month to be sure it will function when needed.

#### Item 24

On engines equipped with a Hydrostarter, refer to the *Hydraulic Starting System* in the section on *Engine Equipment* for preventive maintenance and lubrication.


#### Item 25

To clean either the hair or polyurethane type air compressor air strainer element, saturate and squeeze it in fuel oil, or any other cleaning agent that would not be detrimental to the element, until dirt free. Then dip it in lubricating oil and squeeze it dry before placing it back in the air strainer.


For replacement of the air strainer element, contact the nearest Bendix Westinghouse dealer; replace with the polyurethane element, if available.

#### Item 26

There is' no scheduled interval for performing an inspection on the Airesearch turbocharger. As long as the turbocharger is operating satisfactorily and there

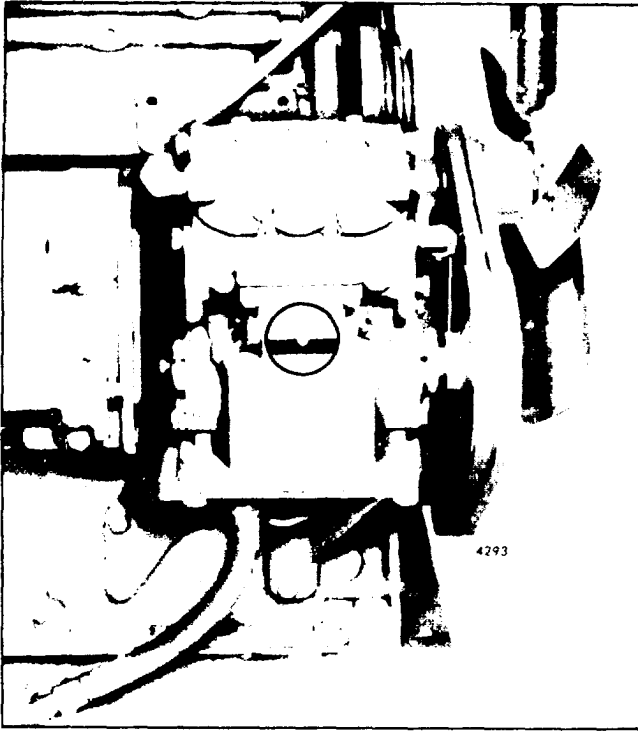

Item 25

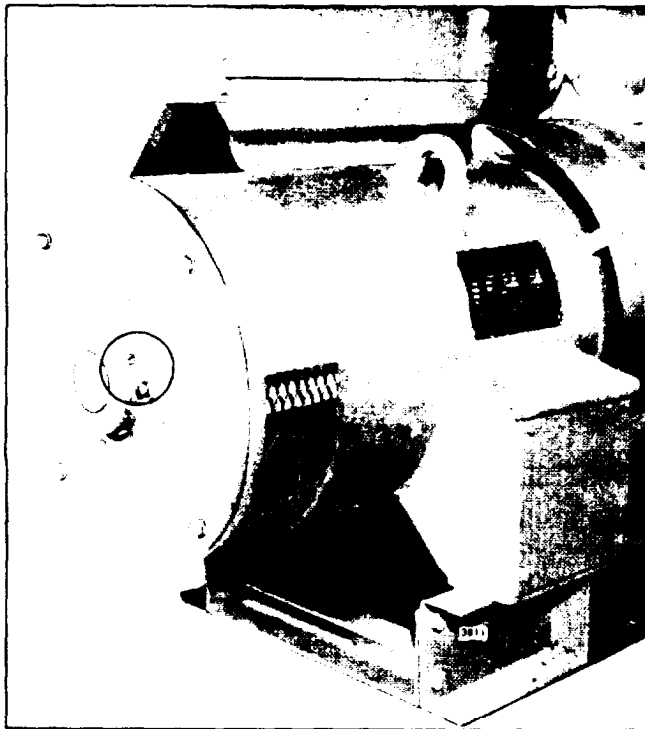

Item 27

is no appreciable loss of power, no vibration or unusual noise and no oil leaks, only a periodic

inspection is necessary. When service is required, contact an authorized *Detroit Diesel Allison Service Outlet*.

#### Item 27

The power generator requires lubrication at only one point - the ball bearing in the end frame.

If the bearing is oil lubricated, check the oil level in the sight gage every 300 hours; change the oil every six months. Use the same grade of oil as specified for the engine. Maintain the oil level to the line in the sight gage. **Do not overfill.** After adding oil, recheck the oil level after running the generator for several minutes.

If the bearing is grease lubricated, a new generator has sufficient grease for three years of normal service. Thereafter, it should be lubricated at one year intervals. To lubricate the bearing, remove the filler and relief plugs on the side and the bottom of the bearing reservoir. Add grease until new grease appears at the relief plug opening. Run the generator a few minutes to vent the excess grease; then reinstall the plugs.

The following greases, or their equivalents, are recommended:

Keystone 44H                      Keystone Lubrication Co.

BRB Lifetime                      Socony Vacuum Oil Co.

NY and NJ F926 or F927 NY and NJ Lubricant Co.

After 100 hours on new brushes, or brushes in generators that have not been in use over a long period, remove the end frame covers and inspect the brushes, commutator and collector rings. If there is no appreciable wear on the brushes, the inspection interval may be extended until the most practicable period has been established (not to exceed six months). To prevent damage to the commutator or the collector rings, do not permit the brushes to become shorter than 3/4 inch.

Keep the generator clean inside and out. Before removing the end frame covers, wipe off the loose dirt. The loose dirt and dust may be blown out with low pressure air (25 psi or 172 kPa maximum). Remove all greasy dirt with a cloth.

#### Item 28

Lubricate all of the power take-off bearings with an all purpose grease such as Shell Alvania No. 2, or



equivalent. Lubricate sparingly to avoid getting grease on the clutch facing.

Open the cover on the side of the clutch housing (8" and 10" diameter clutch) and lubricate the clutch release sleeve collar through the grease fitting every 8 hours. On the 11-1/2" diameter clutch, lubricate the collar through the fitting on the side of the clutch housing every 8 hours.

Lubricate the clutch drive shaft pilot bearing through the fitting in the outer end of the drive shaft (8" and 10" diameter clutch power take-offs) every 50 hours of operation. One or two strokes with a grease gun should be sufficient. The clutch drive shaft pilot bearing used with the 11-1/2" diameter clutch power take-off is prelubricated and does not require lubrication.

Lubricate the clutch drive shaft roller bearings through the grease fitting in the clutch housing every 50 hours under normal operating conditions (not continuous) and more often under severe operating conditions or continuous operation.

Lubricate the clutch release shaft through the fittings at the rear of the housing every 500 hours of operation.

Lubricate the clutch levers and links sparingly with engine oil every 500 hours of operation. Remove the inspection hole cover on the clutch housing and lubricate the clutch release levers and pins with a hand oiler. To avoid getting oil on the clutch facing, do not over lubricate the clutch release levers and pins.


Check the clutch facing for wear every 500 hours. Adjust the clutch if necessary.

**Item 29**

Check the oil level in the Torqmatic converter and supply tank daily. The oil level must be checked while the converter is operating, the engine idling and the oil is up to operating temperature (approximately 200° F). If the converter is equipped with an input disconnect clutch, the clutch must be engaged.

Check the oil level after running the unit a few minutes. The oil level should be maintained at the proper level on the dipstick. If required, add hydraulic transmission fluid type "C-2" (Table 1). Do not overfill the converter as too much oil will cause foaming and high oil temperature.

The oil should be changed every 500 hours of operation. Also, the oil should be changed whenever it shows traces of dirt or effects of high operating temperature as evidenced by discoloration or strong odor. If the oil shows metal contamination, contact an

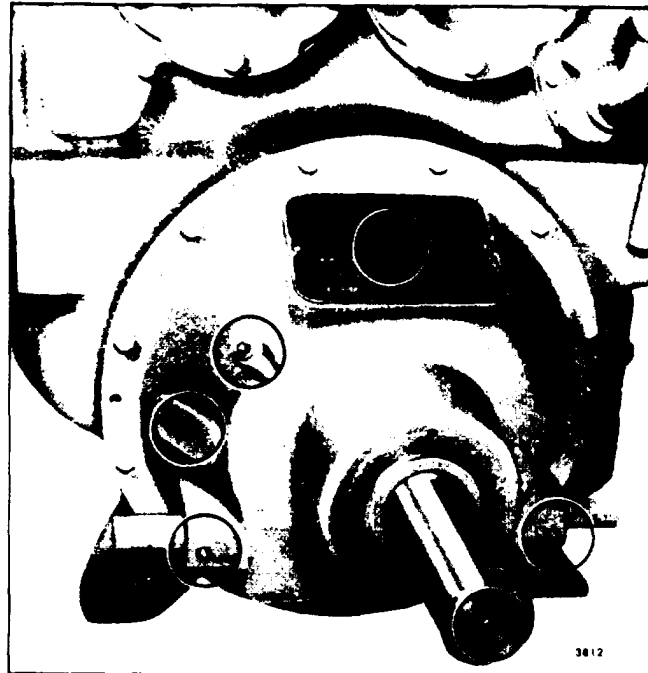

Item 28


OIL RECOMMENDATIONS

Prevailing Ambient Temperature	Recommended Oil Specification
Above -10°F (-23°C)	Hydraulic Transmission fluid, Type C-2.
Below -10°F (-23°C)	Hydraulic Transmission Fluid, Typo C-2. Auxiliary preheat required to raise temperature in the sump to o temperature above -10oF. (-23°C)

TABLE 1

authorized *Detroit Diesel Allison Service Outlet* as this usually requires disassembly. Under severe operating conditions, the oil should be changed more often.

The converter oil breather, located on the oil level indicator (dipstick), should be cleaned each time the converter oil is changed. This can be accomplished by allowing the breather to soak in a solvent, then drying it with compressed air.

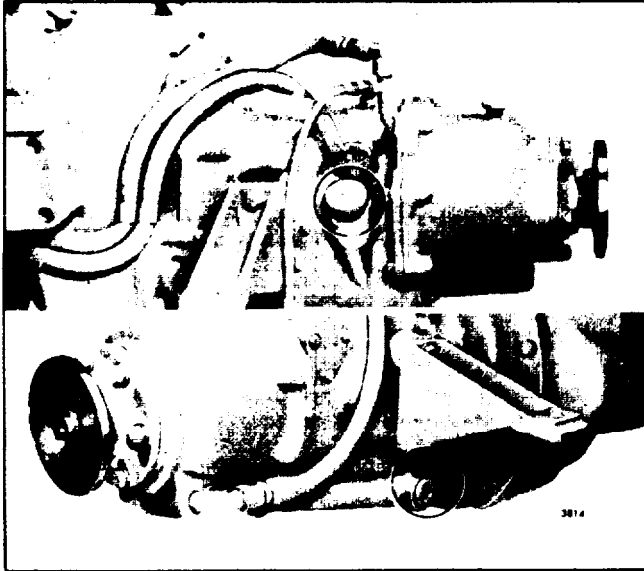

Item 30

The full-flow oil filter element should be removed, the shell cleaned and a new element and gasket installed each time the converter oil is changed.

Lubricate the input clutch release bearing and ball bearing every 50 hours with an all purpose grease through the grease fittings provided on the clutch housing. This time interval may vary depending upon the operating conditions. Over-lubrication will cause

grease to be thrown on the clutch facing, causing the clutch to slip.

### Item 30

#### WARNER MARINE GEAR:

Check the oil level daily. Start and run the engine at idle speed for a few minutes to fill the lubrication system. Stop the engine. Then immediately after stopping the engine, check the oil level in the marine gear. Bring the oil level up to the proper level on the dipstick. Use the same grade of lubricating oil that is used in the engine. **Do not overfill.**

Change the oil every 200 hours. After draining the oil from the unit, clean the removable oil screen thoroughly before refilling the marine gear with oil.

#### TWIN DISC MARINE GEAR:

Check the marine gear oil level daily. Check the oil level with the engine running at low idle speed and the gear in neutral. Keep the oil up to the proper level on the dipstick. Use oil of the same *heavy-duty* grade and viscosity that is used in the engine.

Change the oil every 200 hours. Remove and clean the oil inlet strainer screen after draining the oil and before refilling the marine gear. The strainer is located in the sump at the lower end of the pump suction line. When refilling after an oil drain, bring the oil up to the proper level on the dipstick (approximately 5 quarts or 4.74 litres).

FUEL OIL SPECIFICATIONS

GENERAL CONSIDERATIONS

The quality of fuel oil used for high-speed diesel engine operation is a very important factor in obtaining satisfactory engine performance, long engine life, and acceptable exhaust.

Fuel selected should be completely distilled material. Fuels marketed to meet Federal Specification VV-F-800 (grades DF-1 and DF-2) and ASTM Designation D-975 (grades 1-D and 2-D) meet the completely distilled criteria. Some of the general properties of VV-F-800 and ASTM D-975 fuels are shown below.

FEDERAL SPECIFICATION & ASTM DIESEL FUEL PROPERTIES

Specification or Classification Grade	VV-F-800 DF-1	ASTM D-975 1-D	VV-F-800 DF-2	ASTM D-975 2-D
Flash Pt., °F min.	104 (40°C)	100 (38°C)	122 (50°C)	125 (52°C)
Carbon Residue (10% residuum), % max.	0.15	0.15	0.20	0.35
Water & Sediment, % by vol., max.	0.01	trace	0.01	0.05
Ash, % by wt., max.	0.005	0.01	0.005	0.01
Distillation Temperature, 90% by vol. recovery, min.	—	—	—	540°F (282°C)
max.	572°F (300°C)	550°F (288°C)	626°F (330°C)	640°F (338°C)
End Point, max.	626°F (330°C)	—	671°F (355°C)	—
Viscosity 100°F (38°C)				
Kinematic, cs. min.	1.4	1.4	2.0	2.0
Saybolt, SUS, min.	—	—	—	32.6
Kinematic, cs. max.	3.0	2.5	4.3	4.3
Saybolt, SUS, max.	—	34.4	—	40.1
Sulfur, % by wt., max.	0.50	0.50	0.50	0.50
Cetane No.	45	40	45	40

Residual fuels and domestic furnace oils are not considered satisfactory for Detroit Diesel engines; however, some may be acceptable. (See "DETROIT DIESEL FUEL OIL SPECIFICATIONS").

**NOTE: Detroit Diesel Allison does not recommend the use of drained lubricating oil as a diesel fuel off.**

All diesel fuel oil contains a certain amount of sulfur. Too high a sulfur content results in excessive cylinder wear due to acid build-up in the lubricating oil. For most satisfactory engine life, fuels containing less than 0.5% sulfur should be used.

Fuel oil should be clean and free of contamination. Storage tanks should be inspected regularly for dirt, water or water-emulsion sludge, and cleaned if contaminated. Storage instability of the fuel can lead to the formation of varnish or sludge in the tank. The presence of these contaminants from storage instability must be resolved with the fuel supplier.

SPECIFICATIONS

Detroit Diesel Allison designs, develops, and manufactures commercial diesel engines to operate on diesel fuels classified by the ASTM as Designation D-975 (grades 1-D and 2-D). These grades are very similar to grades DF-1 and DF-2 of Federal Specification VV-F-800. Residual fuels and furnace oils, generally, are not considered satisfactory for Detroit Diesel engines. In some regions, however, fuel suppliers may distribute one fuel that is marketed as either diesel fuel (ASTM D-975) or domestic heating fuel (ASTM D-396) sometimes identified as furnace oil. In this case, the fuel should be investigated to determine whether the properties conform with those shown in the "FUEL OIL SELECTION CHART" presented in this specification.

The "FUEL OIL SELECTION CHART" also will serve as a guide in the selection of the proper fuel for various applications. The fuels used must be clean, completely distilled, stable, and noncorrosive. DISTILLATION RANGE, CETANE NUMBER, and SULFUR CONTENT are three of the most important properties of diesel fuels that must be controlled to insure optimum combustion and minimum wear. Engine speed, load, and ambient temperature influence the selection of fuels with respect to distillation range and cetane number. The sulfur content of the fuel must be as low as possible to avoid excessive deposit formation, premature wear, and to minimize the sulfur dioxide exhausted into the atmosphere.

To assure that the fuel you use meets the required properties, enlist the aid of a reputable fuel oil supplier. The responsibility for clean fuel lies with the fuel supplier as well as the operator.

During cold weather engine operation, the cloud point (the temperature at which wax crystals begin to form in diesel fuel) should be 10°F (6°C) below the lowest expected fuel temperature to prevent clogging of the fuel filters by wax crystals.

At temperatures below -20°F (-29°C), consult an authorized Detroit Diesel Allison service outlet, since particular attention must be given to the cooling system, lubricating system, fuel system, electrical system, and cold weather starting aids for efficient engine starting and operation.

FUEL OIL SELECTION CHART

Typical Application	General Fuel Classification	Final Boiling Point	Cetane No.	Sulfur Content
City Buses	No. 1-D	(Max) 550°F (288°C)	(Min) 45	(Max) 0.30%
All Other Applications	Winter No. 2-D Summer No. 2-D	675°F 675°F (357°C)	45 40	0.50% 0.50%

**NOTE:** When prolonged idling periods or cold weather conditions below 32°F (0°C) are encountered, the use of lighter distillate fuels may be more practical. The same consideration must be made when operating at altitudes above 5,000 ft.

## LUBRICATING OIL SPECIFICATIONS

## GENERAL CONSIDERATIONS

All diesel engines require heavy-duty lubricating oils. Basic requirements of such oils are lubricating quality, high heat resistance, control of contaminants.

**LUBRICATING QUALITY.** The reduction of friction and wear by maintaining an oil film between moving parts is the primary requisite of a lubricant. Film thickness and its ability to prevent metal-to-metal contact of moving parts is related to oil viscosity. The optimums for Detroit Diesel engines are SAE 30 or 40 weight.

**HIGH HEAT RESISTANCE.** Temperature is the most important factor in determining the rate at which deterioration or oxidation of the lubricating oil will occur. The oil should have adequate thermal stability at elevated temperatures, thereby precluding formation of harmful carbonaceous and/or ash deposits.

**CONTROL OF CONTAMINANTS.** The piston and compression rings must ride on a film of oil to minimize wear and prevent cylinder seizure. At normal rates of consumption, oil reaches a temperature zone at the upper part of the piston where rapid oxidation and carbonization can occur. In addition, as oil circulates through the engine, it is continuously contaminated by soot, acids, and water originating from combustion. Until they are exhausted, detergent and dispersant additives aid in keeping sludge and varnish from depositing on engine parts. But such additives in excessive quantities can result in detrimental ash deposits. If abnormal amounts of insoluble deposits form, particularly on the piston in the compression ring area, early engine failure may result.

Oil that is carried up the cylinder liner wall is normally consumed during engine operation. The oil and additives leave carbonaceous and/or ash deposits when subjected to the elevated temperatures of the combustion chamber. The amount of deposits is influenced by the oil composition, additive content, engine temperature, and oil consumption rate.

## SPECIFICATIONS

## OIL QUALITY

**OIL QUALITY** is the responsibility of the oil supplier. (The term *oil supplier* is applicable to refiners, blenders, and rebranders of petroleum products, and does not include distributors of such products.)

There are hundreds of commercial crankcase oils marketed today. Obviously, engine manufacturers or users cannot completely evaluate the numerous commercial oils. The selection of a suitable lubricant in consultation with a reliable oil supplier, observance of his oil drain recommendations (based on used oil sample analysis and experience) and proper filter maintenance, will provide the best assurance of satisfactory oil performance.

Detroit Diesel Allison lubricant recommendations are based on general experience with current lubricants of various types and give consideration to the commercial lubricants presently available.

## RECOMMENDATION

Detroit Diesel engines have given optimum performance and experienced the longest service life with the following oil performance levels having the ash and zinc limits shown:

Former Military and Commercial Lube Identification	New API Letter Code Service Classification	SAE Grade †
MIL-L-2104B/1964 MS Supplement 1	CC/SC CB	30 or 40 30 or 40

\* SAE 40 grade oil has performed satisfactorily and is recommended in Detroit Diesel engines. Obviously, the expected ambient temperatures and engine cranking capability must be considered by the engine owner/operator when selecting the proper grade of oil. Only when the ambient temperatures and engine cranking capabilities result in difficult starting should SAE 30 grade oil be used.

## ASH LIMIT

The sulfated ash limit (ASTM D-874) of the above lubricants shall not exceed 1.000% by weight, except lubricants that contain only barium detergent-dispersant salts where 1.500% by weight is allowed. The majority of lubricants marketed under the performance levels shown above have a sulfated ash content between 0.55 to 0.85% by weight.

## ZINC CONTENT

The zinc content, as zinc diorganodithiophosphate, shall be a minimum of 0.07% by-weight.

## RECOMMENDATIONS REGARDING THE USE OF CURRENT OIL PERFORMANCE LEVEL PRODUCTS MEETING PRESENT MILITARY LUBRICANT SPECIFICATIONS

The petroleum industry is currently marketing engine crankcase oils that may be identified as follows:

Military or Commercial Identification	API Letter Code Service Classification	Comment on Application and Performance
MIL-L-2104C	CD/SC	Supersedes MIL-L-45199B (Series 3) intended for diesel service.
MIL-L-46152	CC/SE	Supersedes MIL-L-2104B intended for gasoline engine passenger cars.
Universal	Numerous	Meets the performance criteria of all industry-accepted tests and all current military specifications including MIL-L-2104C and MIL-L-46152.

Detroit Diesel Allison does not have sufficient experience with any of the above described lubricants to recommend their use. Some oil suppliers have reported satisfactory performance of the above identified products marketed by them. If an owner/operator intends to use any of the above described products, it is recommended he obtain evidence from the oil supplier that the lubricant has performed satisfactorily in Detroit Diesel engines. The above products may be satisfactory for use in Detroit Diesel engines under the following conditions:

1. The sulfated ash (ASTM D-874) limit of the above lubricants shall not exceed 1.000% by weight, except lubricants that contain only barium detergent-dispersant salts where 1.500% by weight is allowed.
2. The zinc content, as zinc diorganodithiophosphate, shall be a minimum of 0.07% by weight.
3. Sufficient evidence of satisfactory performance in Detroit Diesel engines has been provided to Detroit Diesel Allison and/or the customer.

**LUBRICANTS NOT RECOMMENDED**

The following lubricants are NOT recommended because of a history of poor performance in Detroit Diesel engines:

Military or Commercial Identification	API Letter Code Service Classification	Comment on Performance
MIL-L-2104B/1968 MS	CC/SD	Excessive ash deposits formed
MIL-L-45199B (Series 3)	CD	Excessive ash deposits formed
Multigrade oils	Numerous	History of poor performance in most heavy-duty diesel engines

**COLD WEATHER OPERATION**

Cold weather starting will be facilitated when immersion type electrical coolant heaters can be used. Other practical considerations, such as the use of batteries, cables and connectors of adequate size, generators or alternators of ample capacity, proper setting of voltage regulators, ether starting aids, oil and coolant heater systems, and proper fuel selection will accomplish starting with the use of SAE 30 or SAE 40 oils. For complete cold weather starting information, consult an authorized Detroit Diesel Allison service outlet. Ask for Engineering Bulletin No. 38 entitled, *Cold Weather Operation of Detroit Diesel Engines*.

**MIL-L-46167 ARCTIC LUBE OILS FOR NORTH SLOPE & OTHER EXTREME SUB-ZERO OPERATIONS**

The MIL-L-46167 specification was published by the Military on 15 February, 1974. Federal Test Method 354 of Federal Test Standard 791 is an integral test requirement of MIL-L-46167. *Lubricants that have passed the oil performance requirement limits of Method 354 may be used where continuous sub-zero temperatures prevail and where engines are shut down for periods longer than eight (8) hours.* The lubricants that have shown the best performance when subjected to Method 354 evaluation may be described as multigrades having a synthetic base stock and low volatility characteristics. These lubricants are not comparable to the performance of SAE 30 or 40 oils after the engine has started and is operating at elevated engine temperature conditions. For this reason, MIL-L-46167 lubricants should be considered only as a last resort when engine cranking is a severe problem and auxiliary heating aids are not available.

**OIL CHANGES**

The oil change period is dependent on the operating conditions (e.g. load factor, etc.) of an engine that will vary with the numerous service applications. It is recommended that new engines be started with 150 hour oil change periods. For highway vehicles this corresponds to approximately 4,500 miles, and for "city" service vehicles, approximately 2,500 miles. The drain interval may then be gradually increased or decreased with experience on a specific lubricant while also considering the recommendations of the oil supplier (analysis of the drained oil can be helpful here) until the most practical oil drain period for the particular service has been established.

Solvents should not be used as flushing oils in running engines. Dilution of the fresh refill oil supply can occur, which may be detrimental.

Full flow oil filtration systems have been used in Detroit Diesel engines since they have been manufactured. For the best results, the oil filter element should be replaced each time the oil is changed.

**NEW ENGINE OIL CLASSIFICATION SYSTEM**

A relatively new engine oil classification system has been introduced to industry that describes the criteria required to meet each performance level. A simplified cross-reference of oil and current commercial and military specifications is shown below.

**CROSS-REFERENCE OF LUBE OIL CLASSIFICATION SYSTEMS**

API Code Letters	Comparable Military or Commercial Industry spec.
CA	MIL-L-2104A
CB	supplement 1
cc	MIL-L-2104B (see Note below)
CD	MIL-L-45199B (Series 3)
+	MIL-L-46152 (supersedes MIL-L-2104B for Military only)
■	MIL-L-2104C (supersedes MIL-L-45199B for Military only)
SA	none
SB	none
SC	1964 MS oils - Auto passenger car
SD	1968 MS oils - Auto passenger car
SE	1972 MS oils - Auto passenger car

‡ Oil performance meets or exceeds that of CC and SE oils.

■ Oil performance meets or exceeds that of CD and SC oils.

**NOTE:** MIL-L-2104B lubricants are currently marketed and readily available for commercial use. MIL-L-2104B lubricants are obsolete for Military service applications only.

Consult the following publications for complete descriptions:

1. Society of Automotive Engineers (SAE) Technical Report J-183a.
2. Federal Test Method Standard 791a.

**PUBLICATION AVAILABLE SHOWING COMMERCIAL "BRAND" NAME LUBRICANTS**

A list of "brand" name lubricants distributed by the majority of worldwide oil suppliers can be purchased from the Engine Manufacturers Association (EMA). The publication is titled, *EMA Lubricating Oils Data Book for Heavy-Duty Automotive and Industrial Engines*. The publication shows the brand names, oil performance levels, viscosity grades, and sulfated ash contents of most "brands" marketed.

ENGINE MANUFACTURERS ASSOCIATION  
 III EAST WACKER DRIVE  
 CHICAGO, ILLINOIS 60601

### STATEMENT OF POLICY ON FUEL AND LUBRICANT ADDITIVES

In answer to requests concerning the use of fuel and lubricating oil additives, the following excerpts have been taken from a policy statement of General Motors Corporation:

*"It has been and continues to be General Motors policy to build motor vehicles that will operate satisfactorily on the commercial fuels and lubricants of good quality regularly provided by the petroleum industry through retail outlets. It is accordingly contrary to the policy of General Motors to recommend the regular and continued use of supplementary additives in such fuels and lubricants.*

*"This policy should not be confused with the fact that certain supplementary additives may effectively and economically solve specific operating problems which occasionally arise in some vehicles. In such instances, supplementary additives may be developed on the basis of suitable tests to remedy such problems without otherwise causing harm to vehicles. These selected products are then given official GM part numbers and made available for use in appropriate service applications.*

*"While General Motors Corporation assumes responsibility for the additives selected by it to remedy specific operating problems, it cannot, of course, accept responsibility for the many other additives which are constantly being marketed."*

Although the stated Corporation policy is self-explanatory, the following is emphasized: *Detroit Diesel Allison does not recommend or support the use of any supplementary fuel or lubricant additives.* These include all products marketed as fuel conditioners, smoke suppressants, masking agents, reodorants, tune-up compounds, top oils, break-in oils, graphitizers and friction-reducing compounds.

**NOTE: The manufacturer's warranty applicable to Detroit Diesel engine provides in part that the provisions of such warranty shall not apply to any engine unit which has been subject to misuse, negligence or accident. Accordingly, malfunctions attributable to neglect or failure to follow the manufacturer's fuel or lubricating recommendations may not be within the coverage of the warranty.**

### SERVICE AND INSPECTION INTERVALS

Generally, operating conditions will vary for each engine application, even with comparable mileage or hours and, therefore, maintenance schedules can vary. A good rule of thumb for piston, ring, and liner inspections, however, would be at 45,000 miles or 1500 hours for the first such inspection and at 30,000 miles or 1000 hour intervals thereafter.

A suggested preventive maintenance practice is a regularly scheduled testing of fuel and lubricating oils by either the oil supplier or an independent testing laboratory. Since the oil supplier knows the physical properties of his products best and maintains laboratories to determine practical oil drain intervals, take advantage of this service and request him to check drained oil samples frequently and report the results to you.

**ENGINE COOLANT**

Engine coolant is considered as any solution which is circulated through the engine to provide the means for heat transfer from the different engine components. In general, water containing various materials in solution is used for this purpose.

The function of the coolant is basic to the design and to the successful operation of the engine. Therefore, coolant must be carefully selected and properly maintained.

**COOLANT REQUIREMENTS**

A suitable coolant solution must meet the following basic requirements:

1. Provide for adequate heat transfer.
2. Provide a corrosion resistant environment within the cooling system.
3. Prevent formation of scale or sludge deposits in the cooling system.
4. Be compatible with the cooling system hose and seal materials.
5. Provide adequate freeze protection during cold weather operation.

The first four requirements are satisfied by combining a suitable water with reliable inhibitors. When operating conditions dictate the need for freeze protection, a solution of suitable water and a permanent antifreeze containing adequate inhibitors will provide a satisfactory coolant.

**WATER**

Any water, whether of drinking quality or not, will produce a corrosive environment in the cooling system. Also, scale deposits may form on the internal surfaces of the cooling system due to the mineral content of the water. Therefore, water selected as a coolant must be properly treated with inhibitors to control corrosion and scale deposition.

To determine if a particular water is suitable for use as a coolant when properly inhibited, the following characteristics must be considered: the concentration of chlorides, sulfates, total hardness and dissolved solids. Chlorides and/or sulfates tend to accelerate corrosion, while hardness (percentage of magnesium and calcium present) causes deposits of scale. Total dissolved solids may cause scale deposits, sludge

deposits, corrosion or a combination of these. Chlorides, sulfates, magnesium and calcium are among but not necessarily all the materials which make up dissolved solids. Water, within the limits specified in Tables 1 and 2 of Fig. 1, is satisfactory as an engine coolant when proper inhibitors are added.

**CORROSION INHIBITORS**

A corrosion inhibitor is a water soluble chemical compound which protects the metallic surfaces of the cooling system against corrosive attack. Some of the

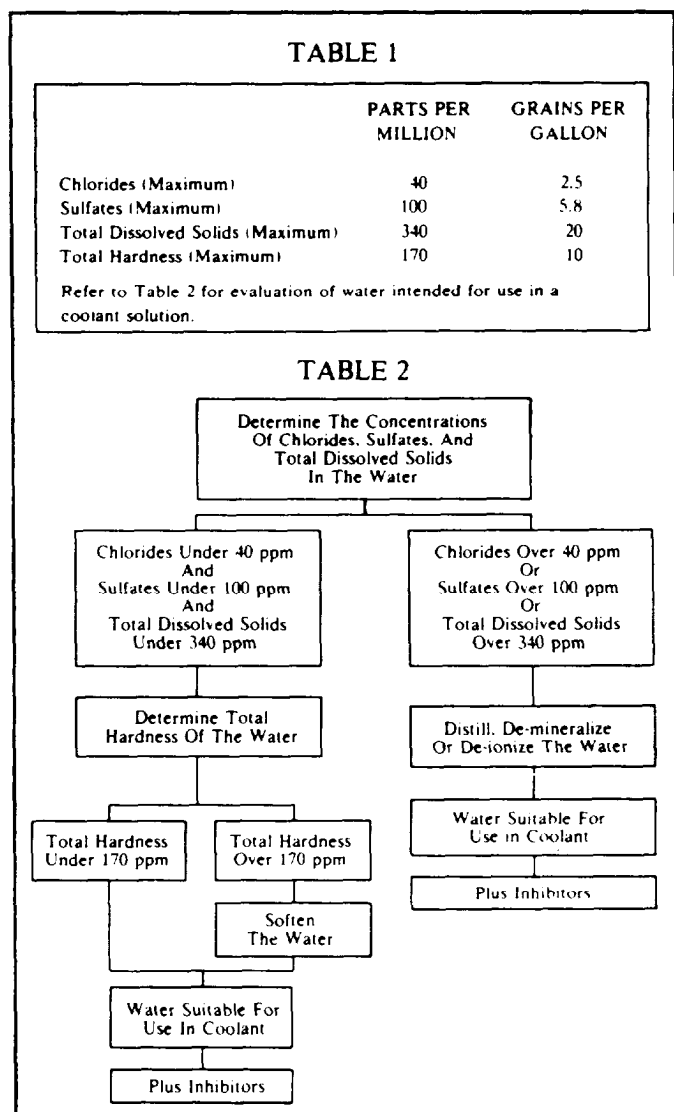


Fig. 1 - Water Characteristics

more commonly used corrosion inhibitors are chromates, borates, nitrates, nitrites and soluble oil. Depletion of all types of inhibitors occurs through normal operation. Therefore, strength levels must be maintained by the addition of inhibitors at prescribed intervals. Always follow the supplier's recommendations on inhibitor usage and handling.

### Chromates

Sodium chromate and potassium dichromate are two of the best and 'most commonly used water system corrosion inhibitors. However, the restrictive use of these materials, due to ecology considerations, has de-emphasized their use in favor of non-chromates. Care should be exercised in handling these materials due to their toxic nature.

Chromate inhibitors should *not* be used in permanent type antifreeze solutions. Chromium hydroxide, commonly called "green slime", can result from the use of chromate inhibitors with permanent type antifreeze. This material deposits on the cooling system passages, reducing the heat transfer rate (Fig. 2) and results in engine overheating. Engines which have operated with a chromate-inhibited water must be chemically cleaned before the addition of permanent antifreeze. A commercial heavy-duty descaler should be used in accordance with the manufacturer's recommendation for this purpose.

### Soluble Oil

Soluble oil has been used as a corrosion inhibitor for many years. It has, however, required very close attention relative to the concentration level due to adverse effects on heat transfer if the concentration exceeds 1% by volume. For example: 1 1/4% of soluble oil in the cooling system increases fire deck temperature 6% and a 2 1/2% concentration raises fire deck temperature up to 15%. Soluble oil is not recommended as a corrosion inhibitor.

### Non-chromates

Non-chromate inhibitors (borates, nitrates, nitrites, etc.) provide corrosion protection in the cooling system with the basic advantage that they 'can be used with either water or a water and permanent antifreeze solution.

## INHIBITOR SYSTEMS

An inhibitor system (Fig. 3) is a combination of

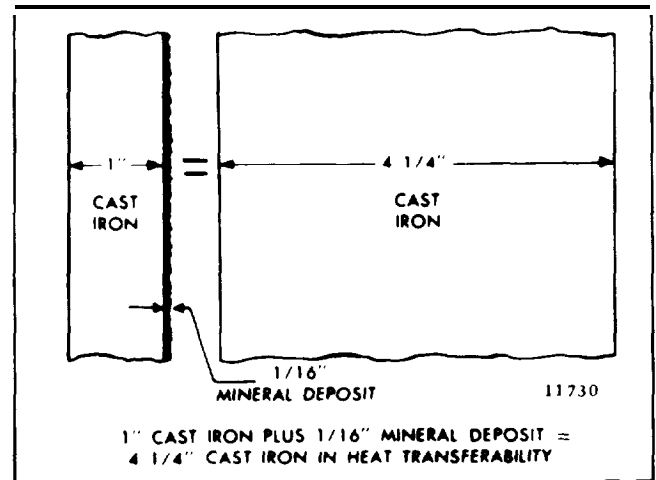


Fig. 2 - Heat Transfer Capacity

chemical compounds which provide corrosion protection, pH control and water softening ability. Corrosion protection is discussed under the heading *Corrosion Inhibitors*. The pH control is used to maintain an acid-free solution. The water softening ability deters formation of mineral deposits. Inhibitor systems are available in various forms such as coolant filter elements, liquid and dry bulk inhibitor additives, and as an integral part of permanent antifreeze.

### Coolant Filter Elements

Replaceable elements are available with various chemical inhibitor systems. Compatibility of the element with other ingredients of the coolant solution cannot always be taken for granted.

Problems have developed from the use of the magnesium lower support plate used by some manufacturers in their coolant filters. The magnesium plate will be attacked by solutions which will not be detrimental to other metals in the cooling system. The dissolved magnesium will be deposited in the hottest zones of the engine where heat transfer is most critical. The use of an aluminum or zinc support plate in preference to magnesium is recommended to eliminate the potential of this type of deposit. High chloride coolants will have a detrimental effect on the water softening capabilities of systems using ion-exchange resins. Accumulations of calcium and magnesium ions removed from the coolant and held captive by the zeolite resin can be released into the coolant by a regenerative process caused by high chloride content solutions.



Inhibitor or Inhibitor System	Corrosion Inhibitor Type	Complete Inhibitor System	Inhibitor Compatability		
			Water	Ethylene Glycol Base Antifreeze	*Methoxy Propanol Base Antifreeze
Sodium chromate	Chromate	No	Yes	No	No
Potassium dichromate	Chromate	No	Yes	No	No
Perry filter elements:					
5020 (type OS)	Chromate	Yes	Yes	No	No
S-453 (Spin-on)	Chromate	Yes	Yes	No	No
5030 (type OS)	@Non-chromate	Yes	Yes	Yes	No
S-331 (Spin-on)	@Non-chromate	Yes	Yes	Yes	No
5070 (type OS)	#Non-chromate	Yes	Yes	Yes	No
S-473 (Spin-on)	#Non-chromate	Yes	Yes	Yes	No
Lenroc filter element	Non-chromate	Yes	Yes	Yes	No
Fleetguard filter elements:					
DCA (canister)	Non-chromate	Yes	Yes	Yes	No
DCA (Spin-on)	Non-chromate	Yes	Yes	Yes	No
AC filter elements:					
DCA (canister)	Non-chromate	Yes	Yes	Yes	No
DCA (Spin-on)	Non-chromate	Yes	Yes	Yes	No
Luber-Finer filter elements:					
LW-4739 (canister)	Non-chromate	Yes	Yes	Yes	No
LFW-4744 (spin-on)	Non-chromate	Yes	Yes	Yes	No
Nalcool 2000 (liquid)	Non-chromate	Yes	Yes	Yes	No
Perry LP-20 (liquid)	Non-chromate	Yes	Yes	Yes	No
Lubercool (liquid)	Non-chromate	Yes	Yes	Yes	No
Dowtherm cooling system conditioner	Non-chromate	Yes	Yes	Yes	Yes

\*Dowtherm 209, or equivalent.  
 @Perry "Year Around" formula.  
 #Perry "Universal" formula.

Fig. 3 - Coolant Inhibitor Chart

**Bulk Inhibitor Additives**

Commercially packaged inhibitor systems are available which can be added directly to the engine coolant or to bulk storage tanks containing coolant solution. Both chromate and non-chromate systems are available and care should be taken regarding inhibitor compatibility with other coolant constituents.

*use in Detroit Diesel engines.* These systems can be used with either water or permanent antifreeze solutions and provide corrosion protection, pH control and water softening. Some non-chromate inhibitor systems offer the additional advantage of a simple on-site test to determine protection level and, since they are added directly to the coolant, require no additional hardware or plumbing.

*Non-chromate inhibitor systems are recommended for*

All inhibitors become depleted through normal

operation and additional inhibitor must be added to the coolant at prescribed intervals to maintain original strength levels. Always follow the supplier's recommendations on inhibitor usage and handling.

**NOTE:** Methoxy propanol base permanent antifreeze (such as Dowtherm 209, or equivalent) must be re-inhibited only with compatible corrosion inhibitor systems.

**ANTIFREEZE**

When freeze protection is required, a permanent antifreeze must be used. An inhibitor system is included in this type of antifreeze and no additional inhibitors are required on initial fill if a minimum antifreeze concentration of 30% by volume is used. Solutions of less than 30% concentration do not provide sufficient corrosion protection. Concentrations over 67% adversely affect freeze protection and heat transfer rates.

Ethylene glycol base antifreeze is recommended for use in Detroit Diesel engines. Methyl alcohol antifreeze is not recommended because of its effect on the non-metallic components of the cooling system and because of its low boiling point. Methoxy propanol base antifreeze may be used for freeze protection in Detroit Diesel Series 53 engines. Before installing methoxy propanol base antifreeze in a unit, the entire cooling system should be drained, flushed with clean water and examined for rust, scale, contaminants, etc. If deposits are present, the cooling system must be chemically cleaned with a commercial grade heavy-duty de-scaler.

The inhibitors in permanent antifreeze should be replenished at approximately 500 hour or 20,000 mile intervals with a non-chromate inhibitor system. Commercially available inhibitor systems may be used to re-inhibit antifreeze solutions.

**Sealer Additives**

Several brands of permanent antifreeze are available with sealer additives. The specific type of sealer varies with the manufacturer. Antifreeze with sealer additives is *not recommended* for use in Detroit Diesel engines due to possible plugging throughout various areas of the cooling system.

**GENERAL RECOMMENDATIONS**

All Detroit Diesel engines incorporate pressurized cooling systems which normally operate at temperatures higher than non-pressurized systems. It is

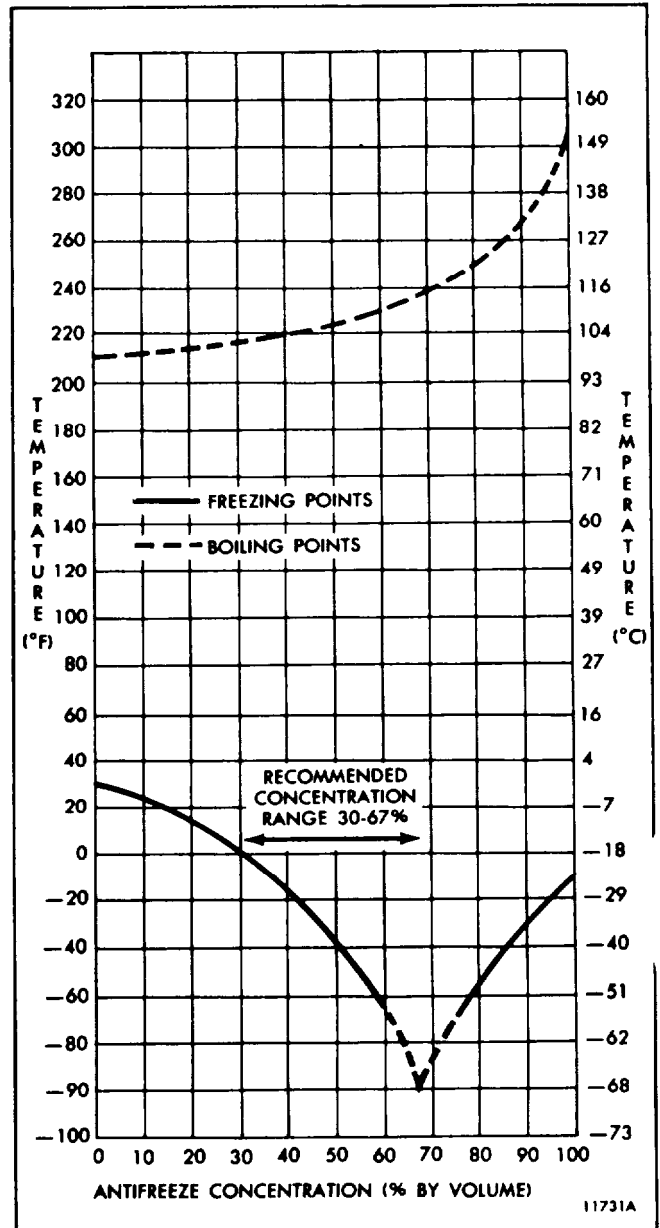


Fig. 4 - Coolant Freezing and Boiling Temperatures vs. Antifreeze Concentration (Sea Level)

essential that these systems be kept clean and leak-free, that filler caps and pressure relief mechanisms be correctly installed at all times and that coolant levels be properly maintained.

**WARNING:** Use extreme care when removing a radiator pressure control cap from an engine. The sudden release of pressure from a heated cooling system can result in a loss of coolant and possible personal injury (scalding) from the hot liquid.

1. Always use a properly inhibited coolant.

2. Do not use soluble oil.
3. Maintain the prescribed inhibitor strength.
4. Always follow the manufacturer's recommendations on inhibitor usage and handling.
5. If freeze protection is required, always use a permanent antifreeze.
6. Re-inhibit antifreeze with a recommended non-chromate inhibitor system.
7. Do not use a chromate inhibitor with permanent antifreeze.
8. DO NOT mix ethylene glycol base antifreeze with methoxy propanol base antifreeze in the cooling system.
9. Do not use an antifreeze containing sealer additives.
10. Do not use methyl alcohol base antifreeze.
11. Use extreme care when removing the radiator pressure control cap.

## ENGINE TUNE-UP PROCEDURES

There is no scheduled interval for performing an engine tune-up. As long as the engine performance is satisfactory, no tune-up should be needed. Minor adjustments in the valve and injector operating mechanisms, governor, etc. should only be required periodically to compensate for normal wear on parts.

Three types of governors are used. Since each governor has different characteristics, the tune-up procedure varies accordingly. The three types are:

1. Limiting speed mechanical.
2. Variable speed mechanical.
3. Hydraulic.

The mechanical engine governors are identified by a name plate attached to the governor housing. The letters D.W.-L.S. stamped on the name plate denote a double-weight limiting speed governor. A single-weight variable speed governor name plate is stamped S.W.-V.S.

Normally, when performing a tune-up on an engine in service, it is only necessary to check the various adjustments for a possible change in the settings. However, if the cylinder head, governor or injectors have been replaced or overhauled, then certain preliminary adjustments are required before the engine is started.

The preliminary adjustments consist of the first four items in the tune-up sequence. The procedures are the same except that the valve clearance is greater for a cold engine.

To tune-up an engine completely, all of the adjustments are made by following the applicable tune-up sequence given below after the engine has reached the normal operating temperature. Since the adjustments are normally made while the engine is stopped, it may be necessary to run the engine between adjustments to maintain normal operating temperature.

### Tune-Up Sequence for Mechanical Governor

**CAUTION:** Before starting an engine after an engine speed control adjustment or after removal of the engine governor cover, the serviceman must determine that the injector racks move to the no-fuel position when the governor stop lever is placed in the stop position. Engine overspeed will result if the injector racks cannot be positioned at no fuel with the governor stop lever.

1. Adjust the exhaust valve clearance.
2. Time the fuel injectors.
3. Adjust the governor gap.
4. Position the injector rack control levers.
5. Adjust the maximum no-load speed.
6. Adjust the idle speed.
7. Adjust the buffer screw.
8. Adjust the throttle booster spring (variable speed governor only).
9. Adjust the supplementary governing device (if used).

### Tune-Up Sequence for Hydraulic Governor

1. Adjust the exhaust valve clearance.
2. Time the fuel injectors.
3. Adjust the fuel rod.
4. Position the injector rack control levers.
5. Adjust the load limit screw.
6. Adjust the speed droop.
7. Adjust the maximum no-load speed.

**NOTE:** Use new valve rocker cover gasket(s) after each tune-up.

## EXHAUST VALVE CLEARANCE ADJUSTMENT

The correct exhaust valve clearance at normal engine operating temperature is important for smooth, efficient operation of the engine.

Insufficient valve clearance can result in loss of compression, misfiring cylinders, and eventually burned valve seats and valve seat inserts. Excessive valve clearance will result in noisy operation, especially in the low speed range.

Whenever the cylinder head is overhauled, the exhaust valves reconditioned or replaced, or the valve

operating mechanism is replaced or disturbed in any way, the valve clearance must first be adjusted to the cold setting to allow for normal expansion of the engine parts during the engine warm-up period. This will ensure a valve setting which is close enough to the specified clearance to prevent damage to the valves when the engine is started.

All of the exhaust valves may be adjusted, in firing order sequence, during one full revolution of the crankshaft. Refer to the *General Specifications* at the front of the manual for the engine firing order.

### TWO VALVE CYLINDER HEADS

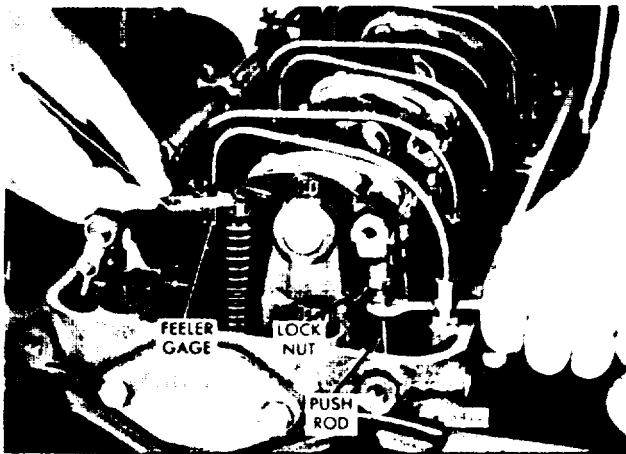


Fig. 1 - Adjusting Valve Clearance (Two-Valve Cylinder Head)

#### Cold Engine

1. Place the speed control lever in the *idle* speed position. If a stop lever is provided, secure it in the *no-fuel* position.
2. Remove the loose dirt from the valve rocker cover(s) and remove the cover(s).
3. Rotate the crankshaft, manually or with the starting motor, until the injector follower is fully depressed on the cylinder to be adjusted.

**CAUTION:** If a wrench is used on the crankshaft bolt, do not turn the engine in a left-hand direction of rotation as the bolt will be loosened.

4. Loosen the exhaust valve rocker arm push rod lock nut.

5. Place a .012" feeler gage, J 9708, between the valve stem and the rocker arm (Fig. 1). Adjust the push rod to obtain a smooth pull on the feeler gage.

6. Remove the feeler gage. Hold the push rod with a 5/16" wrench and tighten the lock nut with a 1/2" wrench.

7. Recheck the clearance. At this time, if the adjustment is correct, the .010" gage will pass freely between the end of the valve stem and the rocker arm and the .012" gage will not pass through.

8. Check and adjust the remaining valves in the same manner as outlined above.

#### Hot Engine

Maintaining normal engine operating temperature is particularly important when making the final valve clearance adjustment. If the engine is allowed to cool off before setting any of the valves, the clearance, when running at full load, may become insufficient.

1. With the engine at normal operating temperature (160-185°F or 71-85°C), recheck the exhaust valve clearance with feeler gage J 9708. At this time, if the valve clearance is correct, the .008" gage will pass freely between the end of the valve stem and the rocker arm and the .010" gage will not pass through. Readjust the push rod, if necessary.

2. After the exhaust valve clearance has been adjusted, check the fuel injector timing.

## FOUR VALVE CYLINDER HEADS

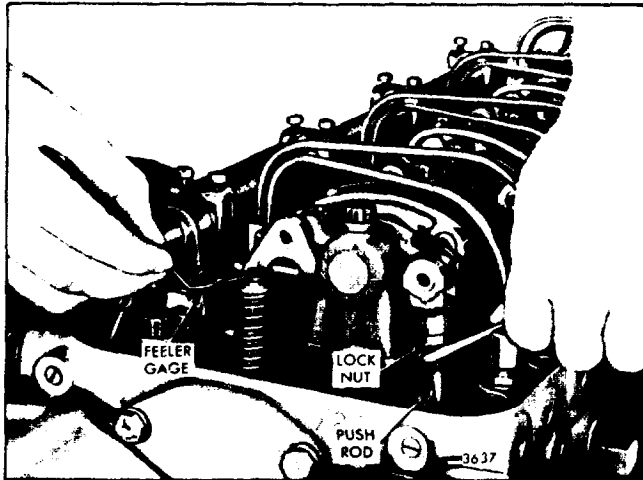


Fig. 2 - Adjusting Valve Clearance (Four-Valve Cylinder Head)

**Cold Engine**

1. Place the speed control lever in the *idle* speed position. If a stop lever is provided, secure it in the *no-fuel* position.
2. Remove the loose dirt from the valve rocker cover(s) and remove the cover(s).
3. Rotate the crankshaft until the injector follower is fully depressed on the cylinder to be adjusted.

**CAUTION:** If a wrench is used on the crankshaft bolt, do not turn the engine in a left-hand direction of rotation as the bolt will be loosened.

4. Loosen the exhaust valve rocker arm push rod lock nut.

5. Place a .027" feeler gage, J 9708, between the end of one valve stem and the rocker arm bridge (Fig. 2). Adjust the push rod to obtain a smooth pull on the feeler gage.

6. Remove the feeler gage. Hold the push rod with a 5/16" wrench and tighten the lock nut with a 1/2" wrench.

7. Recheck the clearance. At this time, if the adjustment is correct, the .025" gage will pass freely between the end of one valve stem and the rocker arm bridge and the .027" gage will not pass through. Readjust the push rod if necessary.

8. Check and adjust the remaining exhaust valves, in the same manner as above.

**Hot Engine**

Maintaining normal engine operating temperature is particularly important when making the final valve clearance adjustment. If the engine is allowed to cool off before setting any of the valves, the clearance, when running at full load, may become insufficient.

1. With the engine at normal operating temperature (160-185°F or 71-85°C), recheck the exhaust valve clearance with gage J 9708. At this time, if the valve clearance is correct, the .023" gage should pass freely between the end of one valve stem and the rocker arm bridge and the .025" feeler gage should not. Readjust the push rod, if necessary.

2. After the exhaust valve clearance has been adjusted, check the fuel injector timing.

TIMING FUEL INJECTOR

Injector	Timing Dimension	Tool Number
*35	1.508	J 8909
35	1.484	J 1242
40	1.484	J 1242
45	1.484	J 1242
S40	1.460	J 1853
S40	1.460	J 1853
S50	1.460	J 1853
L40	1.460	J 1853
N40	1.460	J 1853
N45	1.460	J 1853
N50	1.460	J 1853

\*Reefer Car

To time a fuel injector properly, the injector follower must be adjusted to a definite height in relation to the injector body.

All of the injectors can be timed, in firing order sequence, during one full revolution of the crankshaft.

**Time Fuel Injector**

After the exhaust valve clearance has been adjusted, time the fuel injector as follows:

1. Place the speed control lever in the *idle* speed position. If a stop lever is provided, secure it in the *no-fuel* position.
2. Rotate the crankshaft, manually or with the starting motor, until the exhaust valves are fully depressed on the particular cylinder to be timed.

**CAUTION:** If a wrench is used on the crankshaft bolt at the front of the engine, do not turn the crankshaft in a left-hand direction of rotation or the bolt will be loosened.

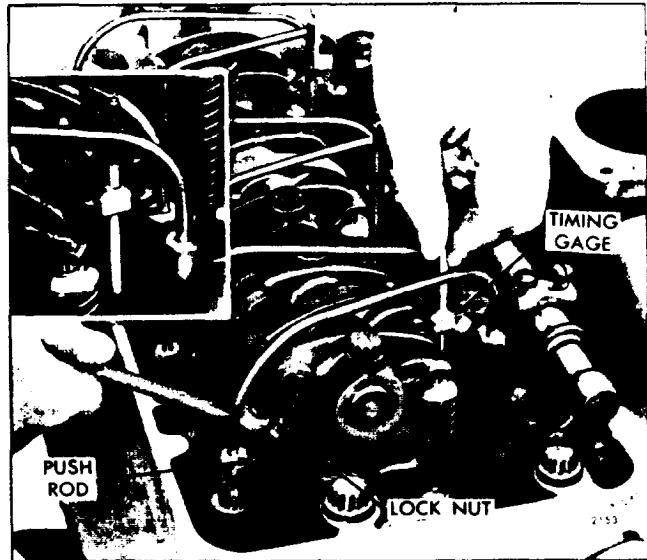


Fig. 3 - Timing Fuel Injector

3. Place the small end of the injector timing gage (see table for correct timing gage) in the hole provided in the top of the injector body, with the flat of the gage toward the injector follower as shown in Fig. 3.
4. Loosen the push rod lock nut.
5. Turn the push rod and adjust the injector rocker arm until the extended part of the gage will just pass over the top of the injector follower.
6. Hold the push rod and tighten the lock nut. Check the adjustment and readjust, if necessary.
7. Time the remaining injectors as outlined above.
8. If no further engine tune-up is required, use a new gasket(s) and install the valve rocker cover(s).

## LIMITING SPEED MECHANICAL GOVERNOR AND INJECTOR RACK CONTROL ADJUSTMENT

### IN-LINE ENGINES

The double-weight limiting speed governor is mounted on the rear end plate of the engine and is driven by a gear that extends through the end plate and meshes with either the camshaft gear or the balance shaft gear, depending upon the engine model.

After adjusting the exhaust valves and timing the fuel injectors, adjust the governor and position the injector rack control levers.

**NOTE:** Before proceeding with the governor and injector rack adjustments, disconnect any supplementary governing device. After the adjustments are completed, re-connect and adjust the supplementary governing device.

#### Adjust Governor Gap

With the engine stopped and at operating temperature, adjust the governor gap as follows:

1. Remove the high-speed spring retainer cover.
2. Back out the buffer screw (Fig. 8) until it extends approximately 5/8" from the lock nut.

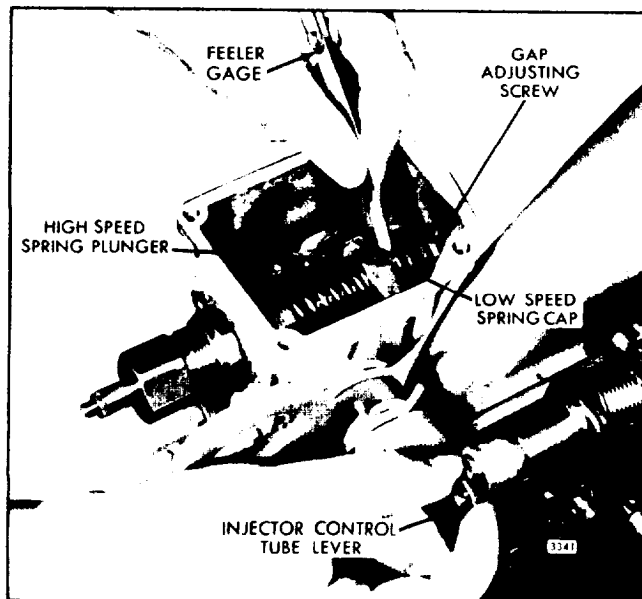


Fig. 1 - Adjusting Governor Gap

3. Start the engine and adjust the idle speed screw (Fig. 7) to obtain the desired engine idle speed. Hold the screw and tighten the lock nut to hold the adjustment.

**NOTE:** The recommended idle speed for non-EPA certified engines is 500-600 rpm, but may vary with special engine applications.

4. Stop the engine, clean and remove the governor cover and the valve rocker cover. Discard the gaskets.
5. Start and run the engine, between 800 and 1000 rpm by manual operation of the injector control tube lever.

**CAUTION:** Do not overspeed the engine.

6. Check the gap between the low-speed spring cap and the high-speed spring plunger with a .0015" feeler gage. If the gap setting is incorrect, reset the gap adjusting screw (Fig. 1). If the setting is correct, the .0015" movement can be seen by placing a few drops of oil into the governor gap and pressing a screw driver against the gap adjusting screw. Movement of

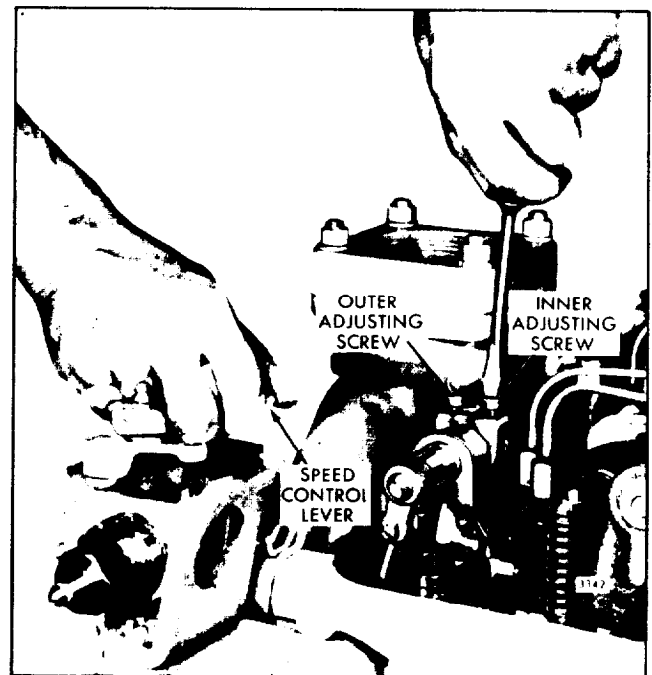


Fig. 2 - Positioning the Rear Injector Rack Control Lever



the cap toward the plunger will force the oil from the gap in the form of a small bead.

7. Hold the gap adjusting screw and tighten the lock nut.
8. Recheck the gap and readjust if necessary.
9. Stop the engine and, using a new gasket, install the governor cover. The governor cover should be placed on the housing with the pin of the speed control lever projecting into the slot of the differential lever.
10. Install the screws and lock washers finger tight. Pull the cover away from the engine and tighten the screws. This step will properly locate the cover on the governor housing.

**Position Injector Rack Control Levers**

The position of the injector racks must be correctly set in relation to the governor. Their position determines the amount of fuel injected into each cylinder and ensures equal distribution of the load. Properly positioned injector rack control levers with the engine at full-load will result in the following:

1. Speed control lever at the full-fuel position.
2. Governor low-speed gap closed.
3. High-speed spring plunger on the seat in the governor control housing.
4. Injector racks in the full-fuel position.

Adjust the rear injector rack control lever first to

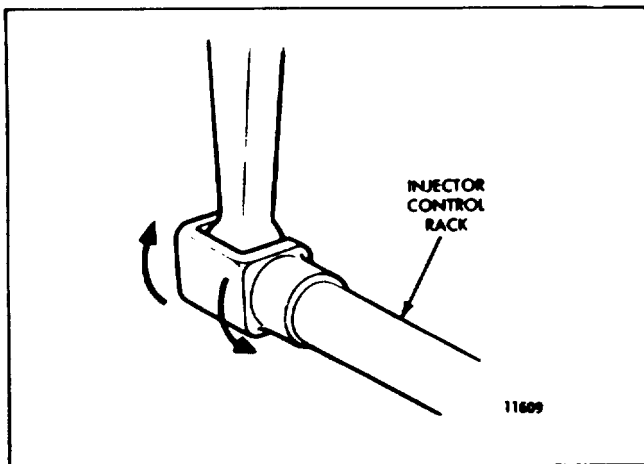


Fig. 3 - Checking Rotating Movement of Injector Control Rack

establish a guide for adjusting the remaining injector rack control levers.

1. Disconnect any linkage attached to the speed control lever.
2. Turn the idle speed adjusting screw until 1/2" of the threads (12-14 threads) project from the lock nut, when the nut is against the high-speed plunger.

**CAUTION:** A false fuel rack setting may result if the idle speed adjusting screw is not backed out as noted above.

**NOTE:** This adjustment lowers the tension of the low-speed spring so it can be easily compressed. This permits closing the low speed gap without bending the fuel rods or causing the *yield mechanism springs to yield or stretch*.

3. Back out the buffer screw approximately 5/8", if it has not already been done.
4. Loosen all of the inner and outer injector rack control lever adjusting screws (Fig. 2). Be sure all of the levers are free on the injector control tube.
5. Move the speed control lever to the maximum speed position. Turn the inner adjusting screw down on the rear injector rack control lever until a step-up in effort is noted. This will place the rear injector rack in the full-fuel position. Turn down the outer adjusting screw until it bottoms lightly on the injector control tube. Then alternately tighten both the inner and outer adjusting screws. This should result in placing the governor linkage and control tube assembly in the

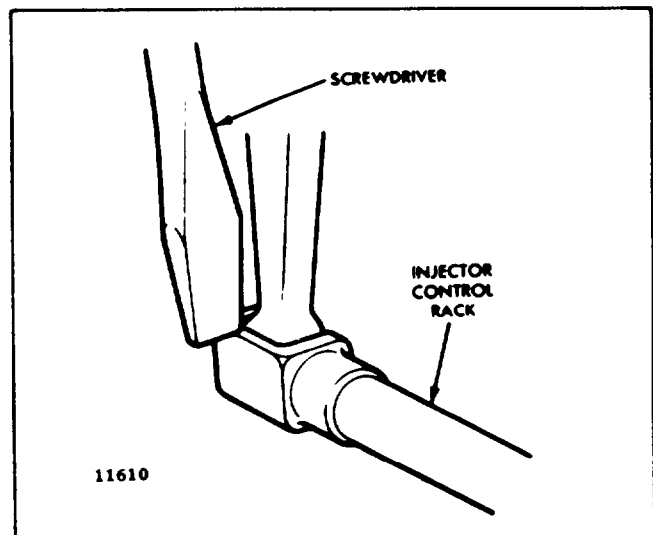


Fig. 4 - Checking Injector Rack "Sgring"

same positions that they will attain while the engine is running at full-load.

6. To be sure of the proper rack adjustment, hold the speed control lever in the full-fuel position and press down on the injector rack with a screw driver or finger tip and note "rotating" movement of the injector control rack (Fig. 3) when the speed control lever is in the maximum speed position. Hold the speed control lever in the maximum speed position and, using a screw driver, press downward on the injector control rack. The rack should tilt downward (Fig. 4) and when the pressure of the screw driver is released, the control rack should "spring" back upward.

If the rack does not return to its original position, it is too loose. To correct this condition, back off the outer adjusting screw slightly and tighten the inner adjusting screw slightly.

The setting is too tight if, when moving the speed control lever from the no-speed to the maximum speed position, the injector rack becomes tight before the speed control lever reaches the end of its travel (as determined by the stop under the governor cover). This will result in a step-up in effort required to move the speed control lever to the end of its travel. To correct this condition, back off the inner adjusting screw slightly and tighten the outer adjusting screw slightly.

**NOTE:** Overtightening of the injector rack control lever adjusting screws during installation or adjustment can result in damage to the injector control tube. The recommended torque of the adjusting screws is 24-36 in-lbs (3-4 Nm).

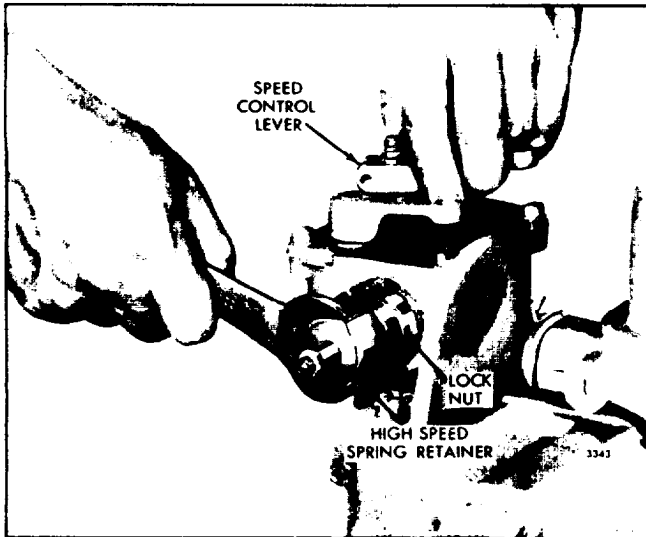


Fig. 5 - Adjusting Maximum No-Load Engine Speed (Type A)

**IMPORTANT:** The above step should result in placing the governor linkage and control tube assembly in the same position that they will attain while the engine is running at full load.

7. To adjust the remaining injector rack control levers, remove the clevis pin from the fuel rod and the injector control tube lever, hold the injector control racks in the full-fuel position by means of the lever on the end of the control tube. Turn down the inner adjusting screw on the injector rack control lever of the adjacent injector until the injector rack has moved into the full-fuel position and the inner adjusting screw is bottomed on the injector control tube. Turn the outer adjusting screw down until it bottoms lightly on the injector control tube. Then alternately tighten both the inner and outer adjusting screws.

8. Recheck the rear injector rack to be sure that it has remained snug on the ball end of the injector rack control lever while adjusting the adjacent injector. If the rack of the rear injector has become loose, back off the inner adjusting screw slightly on the adjacent injector rack control lever. Tighten the outer adjusting screw. When the settings are correct, the racks of both injectors must be snug on the ball end of their respective rack control levers.

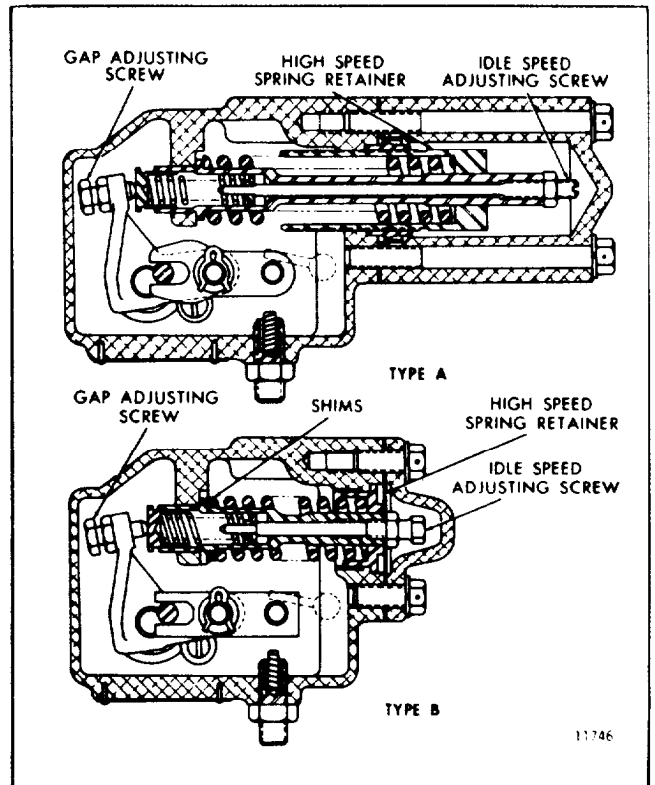


Fig. 6 - Governor Spring Assemblies

9. Position the remaining injector rack control levers as outlined in Steps 6 and 7.

10. Connect the fuel rod to the injector control tube lever.

11. Turn the idle speed adjusting screw in until it projects 3/16" from the lock nut to permit starting the engine. Tighten the lock nut.

12. Use a new gasket and replace the valve rocker cover.

**Adjust Maximum No-load Engine Speed**

All governors are properly adjusted before leaving the factory. However, if the governor has been reconditioned or replaced, and to ensure the engine speed will not exceed the recommended no-load speed as given on the engine option plate, set the maximum no-load speed as follows:

**TYPE A GOVERNOR SPRINGS (Fig. 6):**

1. Loosen the lock nut (Fig. 5) and back off the high-speed spring retainer approximately five turns.

2. With the engine at operating temperature and no-load on the engine, place the speed control lever in the full-fuel position. Turn the high-speed spring retainer IN until the engine is operating at the recommended no-load speed.

The best method of determining the engine speed is with an accurate tachometer.

3. Hold the high-speed spring retainer and tighten the lock nut.

**TYPE B GOVERNOR SPRINGS (Fig. 6):**

1. Start the engine and after it reaches normal operating temperature, remove the load from the engine.

2. Place the speed control lever in the maximum speed position and note the engine speed.

3. Stop the engine and, if necessary, adjust the no-load speed as follows:

a. Remove the high-speed spring retainer, high-speed spring and plunger.

**CAUTION:** To prevent the low-speed spring and sap from dropping into the governor, be careful not to jar the assembly while it is 'being removed.

b. Remove the high-speed spring from the high-speed spring plunger and add or remove shims (Fig. 6) as required to establish the desired engine no-load speed.

**NOTE:** For each .010" shim added, the engine speed will be increased approximately 10 rpm.

c. Install the high-speed spring on the plunger and install the spring assembly in the governor housing. Install the spring retainer in the governor housing and tighten it securely.

d. Start the engine and recheck the engine no-load speed. Repeat the procedure as necessary to establish the no-load speed.

**Adjust Idle Speed**

With the maximum no-load speed properly adjusted, adjust the idle speed as follows:

1. With the engine running at normal operating temperature and with the buffer screw backed out to avoid contact with the differential lever, turn the idle speed adjusting screw (Fig. 7) until the engine is operating at approximately 15 rpm below the recommended idle speed.

**NOTE:** The recommended idle speed for non-EPA certified engines is 500-600 rpm, but may vary with special engine applications.

2. Hold the idle speed adjusting screw and tighten the lock nut.



Fig. 7 - Adjusting Engine Idle Speed

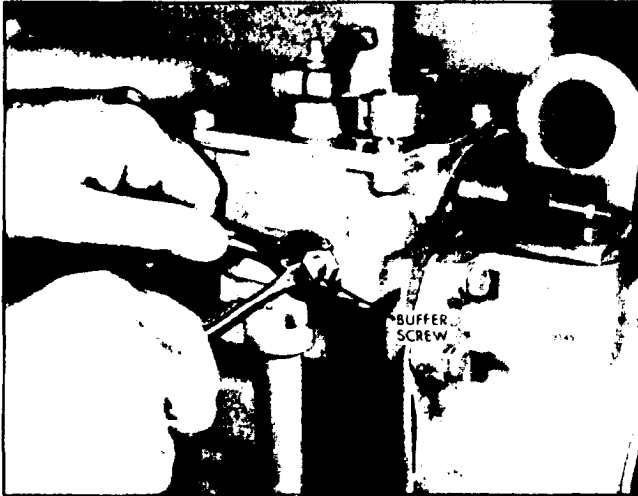


Fig. 8 - Adjusting Buffer Screw

3. Install the high-speed spring cover and tighten the two bolts.

#### Adjust Buffer Screw

With the idle speed properly set, adjust the buffer screw as follows:

1. With the engine running at normal operating temperature, turn the buffer screw in (Fig. 8) so it contacts the differential lever as lightly as possible and still eliminates engine roll.

**NOTE:** Do not increase the engine idle speed more than 15 rpm with the buffer screw.

2. Recheck the maximum no-load speed. If it has increased more than 25 rpm, back off the buffer screw until the increase is less than 25 rpm.

3. Hold the buffer screw and tighten the lock nut.

**LIMITING SPEED MECHANICAL GOVERNOR AND INJECTOR RACK CONTROL ADJUSTMENT**

**6V-53 ENGINE**

The limiting speed mechanical governor is mounted at the rear of the engine, between the flywheel housing and the blower (Fig. 1). The governor is driven by the right blower rotor drive gear. The left blower rotor drive gear is driven by a shaft, that passes through the governor housing, from the engine gear train. There are two types of limiting speed governor assemblies. The difference in the two governors is in the spring mechanism (Fig. 7). One has a long spring mechanism, the other has a short spring mechanism.

After adjusting the exhaust valves and timing the fuel injectors, adjust the governor and position the injector rack control levers.

**NOTE:** Before proceeding with the governor and injector rack adjustments, disconnect any supplementary governing device. After the adjustments are completed, re-connect and adjust the supplementary governing device.

**Adjust Governor Gap**

With the engine stopped and at operating temperature, adjust the governor gap as follows:

1. Remove the high-speed spring retainer cover.

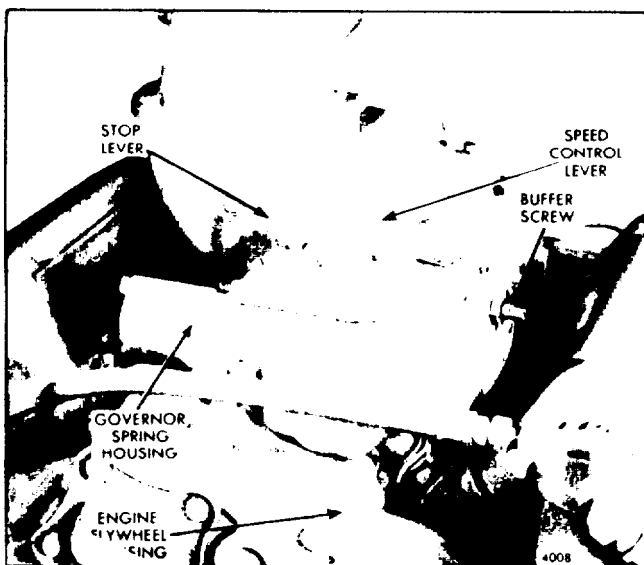


Fig. 1 - Limiting Speed Governor Mounting

2. Back out the buffer screw (Fig. 9) until it extends approximately 5/8" from the lock nut.

**CAUTION:** Do not back the buffer screw out beyond the limits given, or the control link lever may disengage the differential lever.

3. Start the engine and loosen the idle speed adjusting screw lock nut. Then adjust the idle screw (Fig. 8) to obtain the desired engine idle speed. Hold the screw and tighten the lock nut to hold the adjustment.

**NOTE:** The recommended idle speed for non-EPA certified engines is 500-600 rpm, but may vary with special engine applications.

4. Stop the engine, clean and remove the governor cover and the valve rocker covers. Discard the gaskets.
5. Start and run the engine, between 800 and 1000 rpm, by manual operation of the differential lever.

**CAUTION:** Do not overspeed the engine.

6. Check the gap between the low-speed spring cap, and the high-speed spring plunger with a .0015" feeler gage. If the gap setting is incorrect, reset the gap

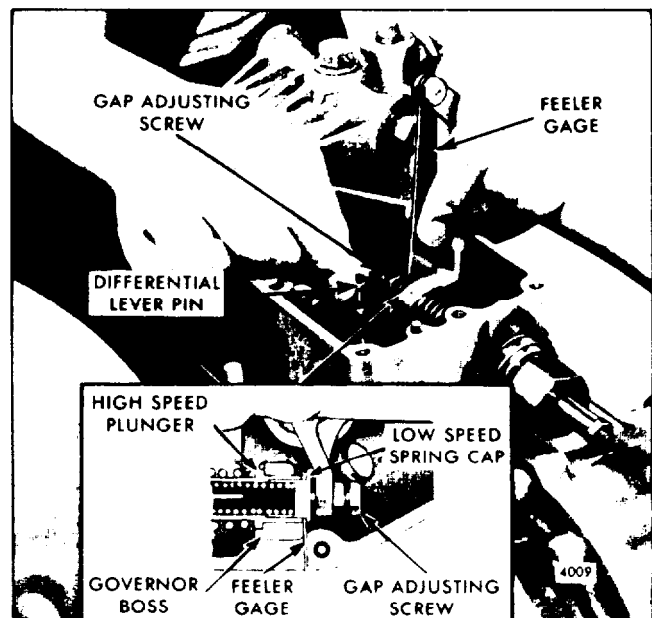


Fig. 2 Adjusting Governor Gap

adjusting screw (Fig. 2). If the setting is correct, the .0015" movement can be seen by placing a few drops of oil into the governor gap and pressing a screw driver against the gap adjusting screw. Movement of the cap toward the plunger will force the oil from the gap in the form of a small bead.

7. Hold the gap adjusting screw and tighten the lock nut.
8. Recheck the gap and readjust if necessary.
9. Stop the engine and, using a new gasket, install the governor cover.

### Position Injector Rack Control Levers

The position of the injector racks must be correctly set in relation to the governor. Their position determines the amount of fuel injected into each cylinder and ensures equal distribution of the load.

Properly positioned injector rack control levers with the engine at full-load will result in the following:

1. Speed control lever at the maximum speed position.
2. Governor low-speed gap closed.
3. High-speed spring plunger on the seat in the governor control housing.
4. Injector fuel control racks in the full-fuel position.

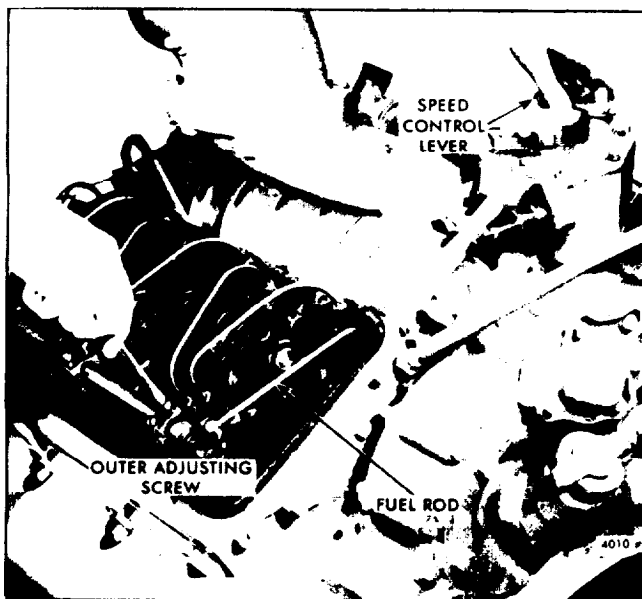


Fig. 3 - Positioning No. 3L Injector Rack Control Lever

The letters R or L indicate the injector location in the right or left cylinder bank, viewed from the rear of the engine. Cylinders are numbered starting at the front of the engine on each cylinder bank. Adjust the No. 3L injector rack control lever first to establish a guide for adjusting the remaining injector rack control levers.

1. Disconnect any linkage attached to the speed control lever.
2. Turn the idle speed adjusting screw until 1/2" of the threads (12-14 threads) project from the lock nut when the nut is against the high-speed plunger.

**CAUTION:** A false fuel rack setting may result if the idle speed adjusting screw is not backed out as noted above.

**NOTE:** This adjustment lowers the tension of the low-speed spring so it can be easily compressed. This permits closing the low speed gap without bending the fuel rods or causing the *yield mechanism springs to yield or stretch*.

3. Back out the buffer screw approximately 5/8", if it has not already been done.
4. Remove the clevis pin from the fuel rod and the right cylinder bank injector control tube lever.
5. Loosen all of the inner and outer injector rack control lever adjusting screws on both injector control tubes. Be sure all of the injector rack control levers are free on the injector control tubes.
6. Move the speed control lever to the maximum speed position; hold it in that position with light finger pressure. Turn the inner adjusting screw on the

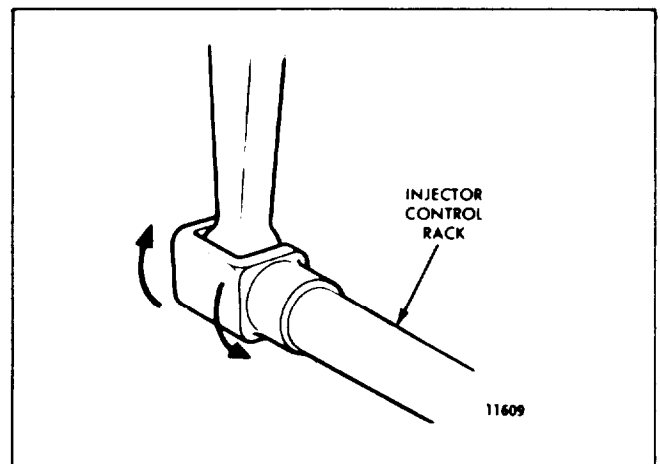


Fig. 4 - Checking Rotating Movement of Injector Control Rack

No. 3L injector rack control lever down as shown in Fig. 3 until a slight movement of the control tube lever is observed or a step-up in effort to turn the screw driver is noted. This will place the No. 3L injector in the full-fuel position. Turn down the outer adjusting screw until it bottoms lightly on the injector control tube. Then alternately tighten both the inner and outer adjusting screws.

**NOTE:** Overtightening of the injector rack control lever adjusting screws during installation or adjustment can result in damage to the injector control tube. The recommended torque of the adjusting screws is 24-36 **in-lbs** (3-4 Nm).

**IMPORTANT:** The above step should result in placing the governor linkage and control tube assembly in the same position that they will attain while the engine is running at full-load.

7. To be sure of the proper rack adjustment, hold the speed control lever in the maximum speed position and press down on the injector rack with a screw driver or finger tip and note "rotating" movement of the injector control rack (Fig. 4) when the speed control lever is in the maximum speed position. Hold the speed control lever in the maximum speed position and, using a screw driver, press downward on the injector control rack. The rack should tilt downward (Fig. 5) and when the pressure of the screw driver is released, the control rack should "spring" back upward.

If the rack does not return to its original position, it is too loose. To correct this condition, back off the outer

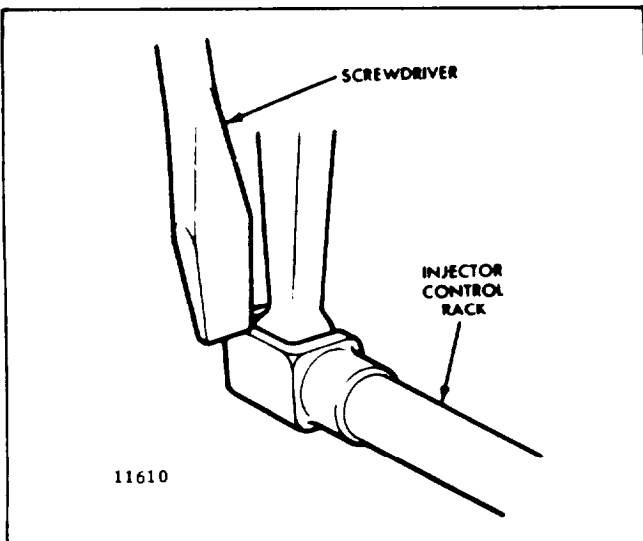


Fig. 5 - Checking Injector Control Rack "Spring"

adjusting screw slightly and tighten the inner adjusting screw slightly.

The setting is too tight if, when moving the speed control lever from the no-speed to the maximum speed position, the injector rack becomes tight before the speed control lever reaches the end of its travel (as determined by the stop under the governor cover). This will result in a step-up in effort required to move the speed control lever to the end of its travel. To correct this condition, back off the inner adjusting screw slightly and tighten the outer adjusting screw slightly.

8. Remove the clevis pin from the fuel rod and the left bank injector control tube lever.

9. Insert the clevis pin in the fuel rod and the right cylinder bank injector control tube lever and position the No. 3R injector rack control lever as previously outlined in Step 6 for the No. 3L injector rack control lever.

10. Insert the clevis pin in the fuel rod and the left cylinder bank injector control tube lever. Repeat the check on the 3L and 3R injector rack control levers as outlined in Step 7. Check for and eliminate any deflection which may occur at the bend in the fuel rod where it enters the cylinder head.

11. To adjust the remaining injector rack control levers, remove the clevis pin from the fuel rods and the injector control tube levers, hold the injector control racks in the full-fuel position by means of the lever on the end of the control tube, and proceed as follows:

- a. Turn down the inner adjusting screw of the injector rack control lever until the screw bottoms (injector control rack in the full-fuel position).
- b. Turn down the outer adjusting screw of the injector rack control lever until it bottoms on the injector control tube.
- c. While still holding the control tube lever in the full-fuel position, adjust the inner and outer adjusting screws to obtain the same condition as outlined in Step 7. Tighten the screws.

**CAUTION:** Once the No. 3L and No. 3R injector rack control levers are adjusted, do not try to alter their settings. All adjustments are made on the remaining control racks.

**NOTE:** Overtightening of the injector rack control tube lever adjusting screws during installation or adjustment can result in damage to the injector control tube. The recommended

torque of the adjusting screws is 24-36 **in-lbs** (3-4 Nm).

12. When all of the injector rack control levers are adjusted, recheck their settings. With the control tube lever in the full-fuel position check each control rack as in Step 7. All of the control racks must have the same "spring" condition with the control tube lever in the full-fuel position.

13. Insert the clevis pin in the fuel rod and the injector control tube levers.

14. Turn the idle speed adjusting screw in until it projects 3/16" from the lock nut to permit starting the engine.

15. Use new gaskets and replace the valve rocker covers.

**Adjust Maximum No-load Engine Speed**

All governors are properly adjusted before leaving the factory. However, if the governor has been reconditioned or replaced, and to ensure the engine speed will not exceed the recommended no-load speed as given on the engine option plate, set the maximum no-load speed as follows:

**TYPE A GOVERNOR SPRINGS (Fig. 7):**

1. Loosen the lock nut with a spanner wrench and back off the high-speed spring retainer several turns. Then start the engine and increase the speed slowly. If the speed exceeds the required no-load speed before the

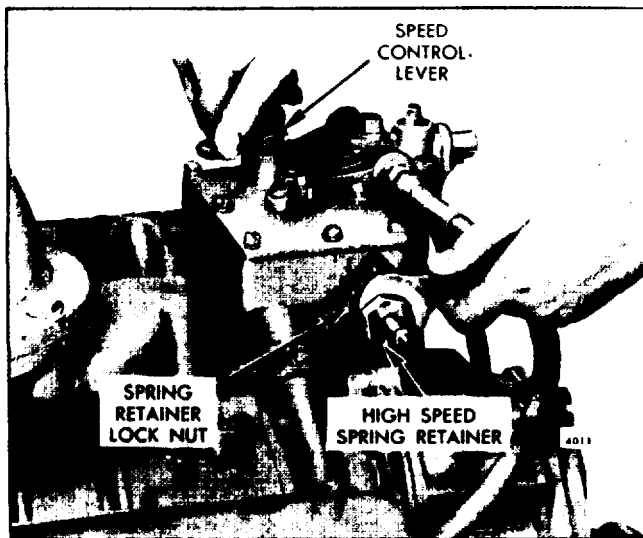


Fig. 6 - Adjusting Maximum No-Load Engine Speed

speed control lever reaches the end of its travel, back off the spring retainer a few additional turns.

2. With the engine at operating temperature and no-load on the engine, place the speed control lever in the maximum speed position. Turn the high-speed spring retainer in (Fig. 6) until the engine is operating at the recommended no-load speed. Use an accurate hand tachometer to determine the engine speed. The maximum no-load speed varies with the full-load operating speed.

3. Hold the spring retainer and tighten the lock nut.

**TYPE B GOVERNOR SPRINGS (Fig. 7):**

1. Start the engine and after it reaches normal operating temperature, remove the load from the engine.

2. Place the speed control lever in the maximum speed position and note the engine speed.

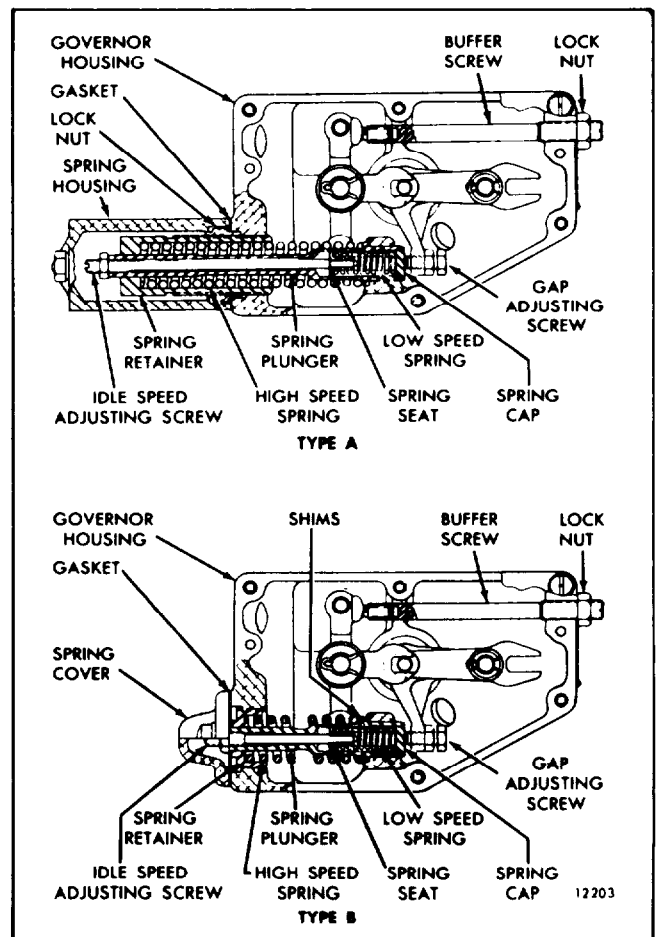


Fig. 7 - Governor Spring Assemblies



3. Stop the engine and, if necessary, adjust the no-load speed as follows:

- a. Remove the high-speed spring retainer with tool J 5895 and withdraw the high-speed spring and plunger assembly.

**CAUTION:** To prevent the low-speed spring and cap from dropping into the governor, be careful not to jar the assembly while it is being removed.

- b. Remove the high-speed spring from the high-speed spring plunger and add or remove shims as required to establish the desired engine no-load speed.

**NOTE:** For each .010" in shims added, the engine speed will be increased approximately 10 rpm.

- c. Install the high-speed spring on the plunger and install the spring assembly in the governor housing. Install the spring retainer in the governor housing and tighten it securely. The maximum no-load speed varies with the full-load operating speed desired.
- d. Start the engine and recheck the no-load speed. Repeat the procedure as necessary to establish the no-load speed required.

**Adjust Idle Speed**

With the maximum no-load speed properly adjusted, adjust the idle speed as follows:

- 1. With the engine running at normal operating temperature and with the buffer screw backed out to

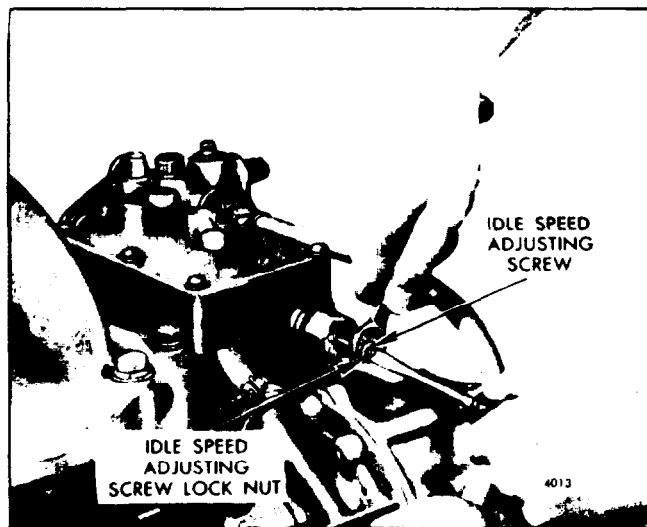


Fig. 8 - Adjusting Engine Idle Speed

avoid contact with the differential lever, turn the idle speed adjusting screw (Fig. 8) until the engine is operating at approximately 15 rpm below the recommended idle speed.

**NOTE:** The recommended idle speed for non-EPA certified engines is 500-600 rpm, but may vary with special engine applications.

If the engine has a tendency to stall during deceleration, install a new buffer screw. The current buffer screw uses a heavier spring and restricts the travel of the differential lever to the off (no-fuel) position.

- 2. Hold the idle screw and tighten the lock nut.

- 3. Install the high-speed spring retainer cover and tighten the two bolts.

**Adjust Buffer Screw**

With the idle speed properly set, adjust the buffer screw as follows:

- 1. With the engine running at normal operating temperature, turn the buffer screw in (Fig. 9) so it contacts the differential lever as lightly as possible and still eliminates engine roll.

**NOTE:** Do not increase the engine idle speed more than 15 rpm with the buffer screw.

- 2. Recheck the maximum no-load speed. If it has increased more than 25 rpm, back off the buffer screw until the increase is less than 25 rpm.

- 3. Hold the buffer screw and tighten the lock nut.

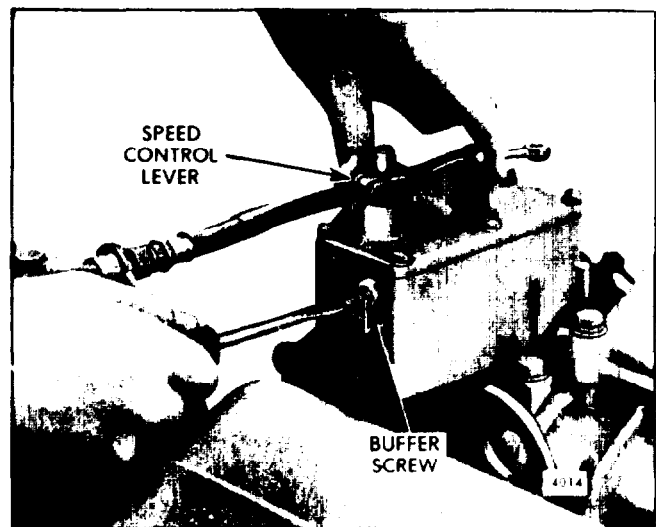


Fig. 9 - Adjusting Buffer Screw

## VARIABLE SPEED MECHANICAL GOVERNOR (OPEN LINKAGE) AND INJECTOR RACK CONTROL ADJUSTMENT

### IN-LINE ENGINES

After adjusting the exhaust valves and timing the fuel injectors, adjust the governor (Fig. 1) and the injector rack control levers.

#### Preliminary Governor Adjustments

1. Clean the governor linkage and lubricate the ball joints and bearing surfaces with clean engine oil.
2. Back out the buffer screw until it projects 9/16" from the boss on the control housing.

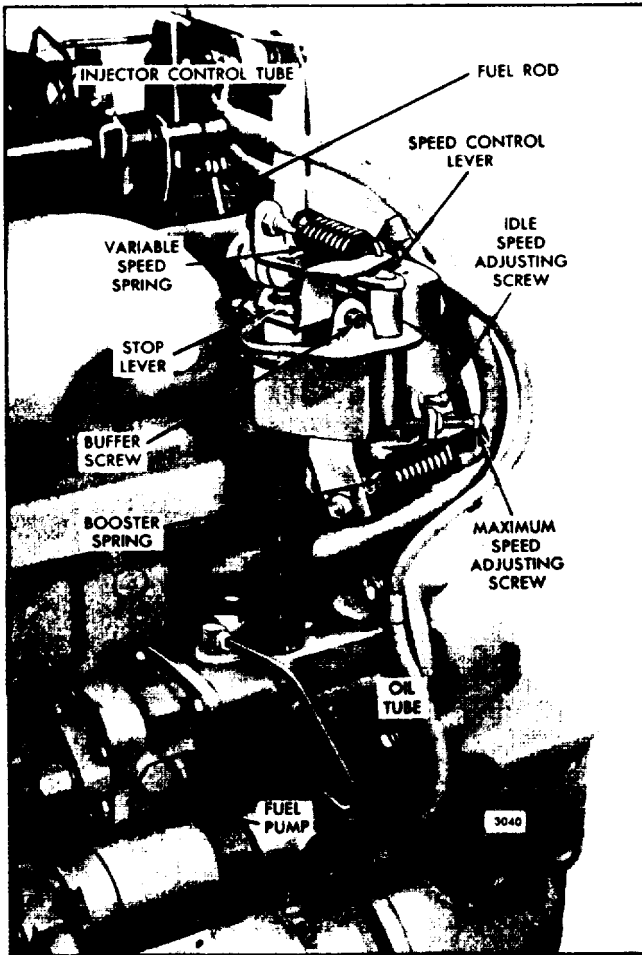


Fig. 1 - Variable Speed Open Linkage Governor Mounted on Engine

3. Back out the booster spring eye bolt until it is flush with the outer lock nut.

#### Adjust Variable Speed Spring Tension

1. Adjust the variable speed spring eye bolt until 1/8" of the threads project from the outer lock nut (Fig. 2).
2. Tighten both lock nuts to retain the adjustment.

**NOTE:** This setting of the eye bolt will produce approximately 7% droop in engine speed from no-load to full-load.

#### Position Injector Rack Control Levers

The position of the injector control racks must be correctly set in relation to the governor. Their position

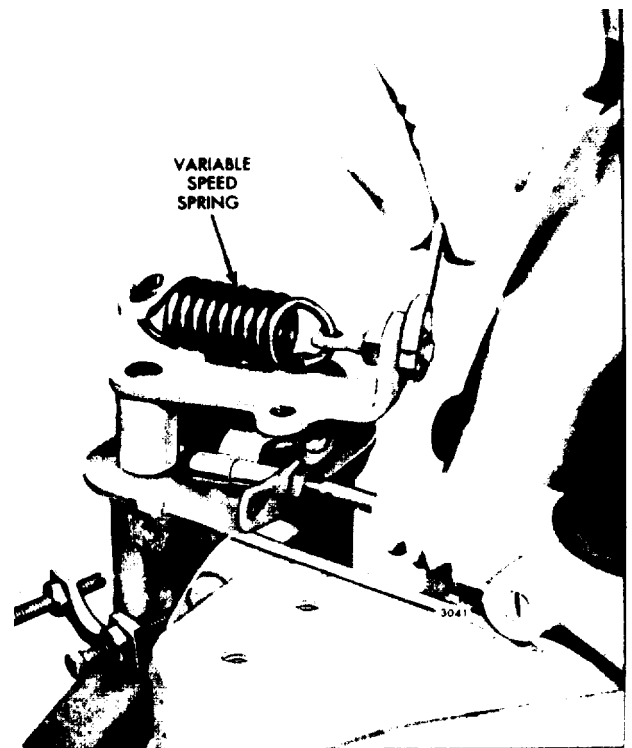


Fig. 2 - Adjusting Governor Spring Eye Bolt

determines the amount of fuel injected into each cylinder and ensures equal distribution of the load. Adjust the rear injector rack control lever first to establish a guide for adjusting the remaining levers.

1. Clean and remove the valve rocker cover. Discard the gasket.
2. Disconnect the fuel rod at the stop lever.
3. Loosen all of the inner and outer injector rack control lever adjusting screws. Be sure all of the injector rack control levers are free on the injector control tube.
4. Move the speed control lever to the maximum speed position.
5. Adjust the rear cylinder injector rack control lever adjusting screws (Fig. 3) until both screws are equal in height and tight on the injector control tube.
6. Move the rear injector control rack into the full-fuel position and note the clearance between the fuel rod and the cylinder head bolt. The clearance should be 1/32" or more. If necessary, readjust the injector rack adjusting screws until a clearance of at least 1/32" to 1/16" exists. Tighten the adjustment screws.

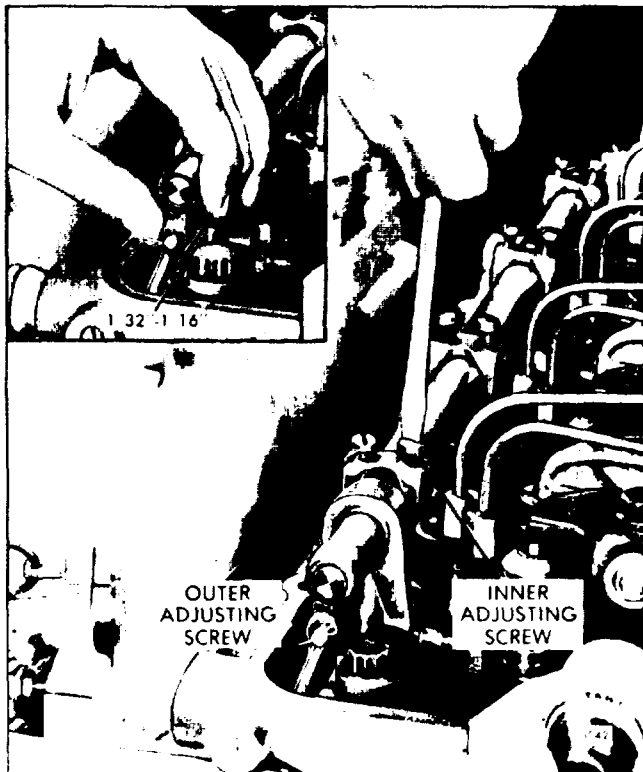


Fig. 3 Adjusting Injector Rack Control Lever Adjusting Screws

7. Loosen the nut which locks the ball joint on the fuel rod. Hold the fuel rod in the full-fuel position and adjust the ball joint until it is aligned and will slide on the ball stud on the stop lever (Fig. 4). Position the shutdown cable clip and tighten the fuel rod lock nut to retain the adjustment.

8. Check the adjustment by pushing the fuel rod toward the engine and make sure the injector control rack is in the full-fuel position. If necessary, readjust the fuel rod.

9. Manually hold the rear injector rack in the full-fuel position, with the lever on the injector control tube, and turn the inner adjusting screw of the adjacent injector rack control lever down until the injector rack moves into the full-fuel position. Turn the outer adjusting screw down until it bottoms lightly on the injector control tube. Then alternately tighten both the inner and outer adjusting screws.

**NOTE:** Overtightening of the injector rack control lever adjusting screws during installation or adjustment can result in damage to the injector control tube. The recommended torque of the adjusting screws is 24-36 **in-lbs** (3-4 Nm).

10. Recheck the rear injector rack to be sure that it has remained snug on the ball end of the rack control lever while adjusting the adjacent injector rack. If the rack of the rear injector has become loose, back off the inner adjusting screw slightly on the adjacent injector rack control lever and tighten the outer adjusting screw. When the settings are correct, the racks of both injectors must be snug on the ball end of their respective control levers.

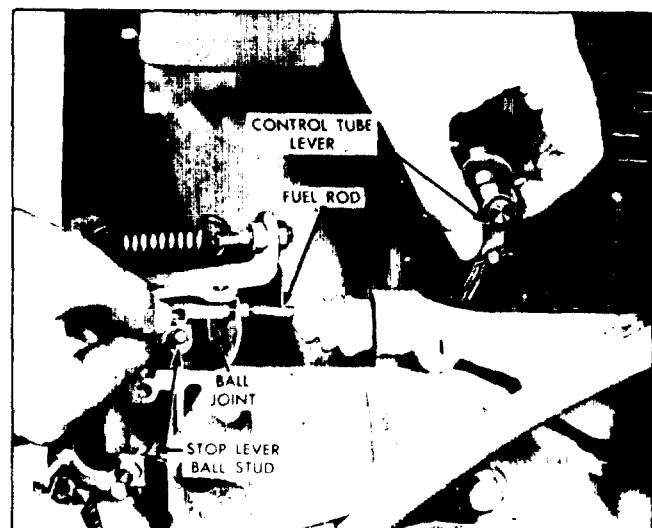


Fig. 4 Adjusting Fuel Rod Length

11. Position the remaining injector rack control levers as outlined in Steps 9 and 10.

### Adjust Maximum No-load Speed

1. With the engine running, move the speed control lever to the maximum speed position. Use an accurate tachometer to determine the no-load speed of the engine.

**NOTE:** Do not overspeed the engine.

2. Loosen the lock nut and adjust the maximum speed adjusting screw (Fig. 5) until the required no-load speed is obtained.

3. Hold the adjusting screw and tighten the lock nut.

### Adjust Engine Idle Speed

1. Make sure the stop lever is in the run position and place the speed control lever in the idle position.

2. With the engine running at normal operating temperature, loosen the lock nut and turn the idle speed adjusting screw (Fig. 6) until the engine idles at the recommended speed. The recommended idle speed



Fig. 5 - Adjusting Maximum No-Load Engine Speed

is 500 rpm. However, the idle speed may vary with special engine applications.

3. Hold the idle speed adjusting screw and tighten the lock nut.

### Adjust Buffer Screw

1. With the engine running at idle speed, turn the buffer screw in (Fig. 7) so that it contacts the stop lever as lightly as possible and still eliminates engine roll.

**NOTE** Do not raise the engine idle speed more than 20 rpm with the buffer screw. Check the maximum no-load speed to make sure it has not increased over 25 rpm by the buffer screw setting.

### Adjust Governor Booster Spring

The governor booster spring is used on some engines to reduce the force necessary to move the speed control lever from the idle speed position to the maximum speed position. Adjust the booster spring as follows:

1. Move the speed control lever to the idle speed position.

2. Reduce the tension on the booster spring, if not

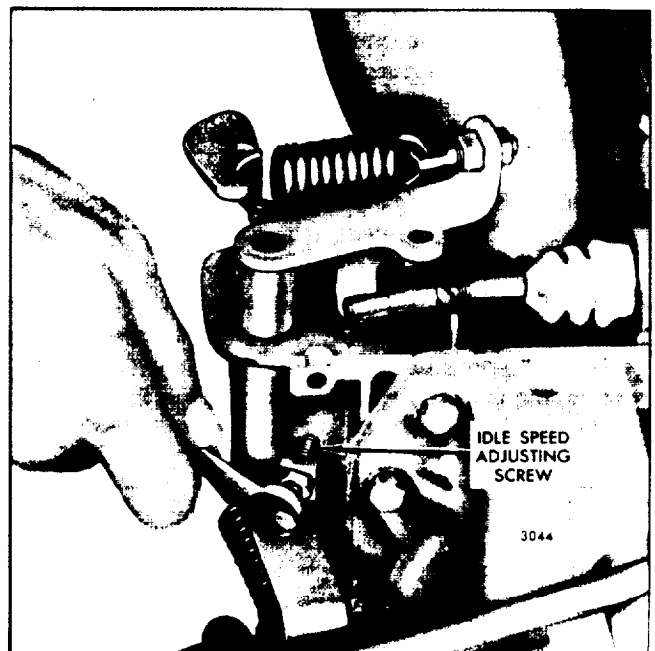


Fig. 6 - Adjusting Idle Speed

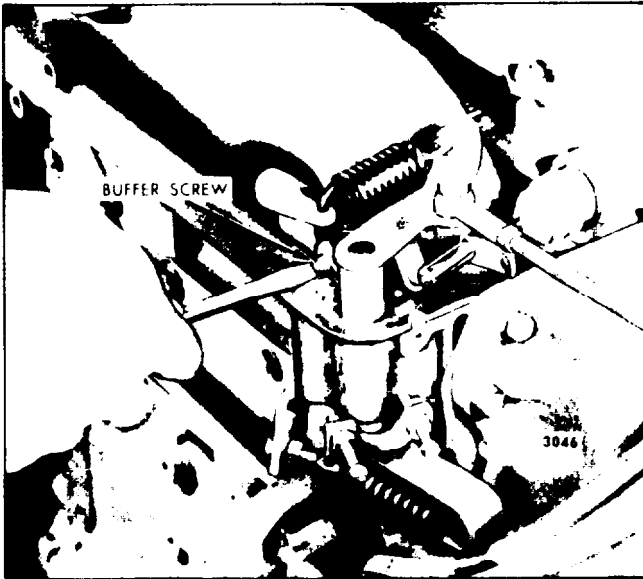


Fig. 7 - Adjusting Buffer Screw

previously performed, to the minimum by backing off the outer lock nut (Fig. 8) until the end of the booster spring eye bolt is flush with the end of the nut.

3. Adjust the eye bolt in the slot in the bracket so that an imaginary line through the booster spring will align with an imaginary center line through the speed control shaft. Secure the lock nuts on the eye bolt to retain the adjustment.

4. Move the speed control lever to the maximum speed position and note the force required. To reduce the force, back off the inner lock nut and tighten the outer lock nut to increase the tension on the booster spring.

**NOTE:** Before tightening the lock nuts, reposition the booster spring as in Step 3.

The setting is correct when the speed control lever can be moved from the idle speed position to the maximum speed position with a constant force, while the engine is running, and when released it will return to the idle speed position.

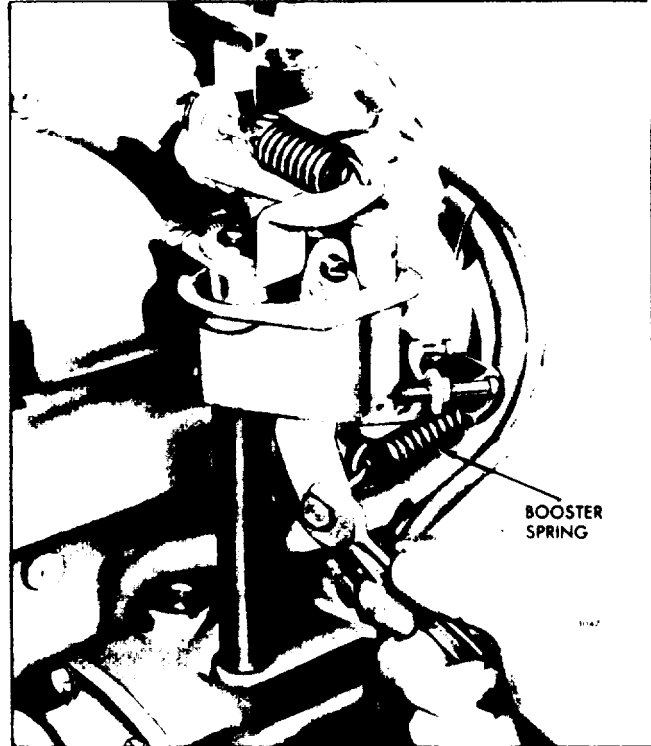


Fig. 8 - Adjusting Booster Spring

### Adjust Engine Speed Droop

The adjustment of the spring tension as outlined under *Adjust Variable Speed Spring Tension* will result in approximately 7% droop from the maximum no-load speed to the full-load speed. This is the optimum droop setting for most applications. However, the droop may be changed as necessary for a particular engine application.

1. Lower the speed droop by increasing the spring tension..
2. Raise the speed droop by decreasing the spring tension.

**NOTE:** A change in the variable speed spring tension will change the maximum no-load speed and the engine idle speed which must also be readjusted.

## VARIABLE SPEED MECHANICAL GOVERNOR (ENCLOSED LINKAGE) AND INJECTOR RACK CONTROL ADJUSTMENT

### IN-LINE ENGINES

The single-weight variable speed governor is mounted on the rear end plate of the engine and is driven by a gear that extends through the end plate and meshes with either the camshaft gear or the balance shaft gear, depending upon the engine model.

After adjusting the exhaust valves and timing the fuel injectors, adjust the governor and position the injector rack control levers.

**NOTE:** Before proceeding with the governor and injector rack adjustments, disconnect any supplementary governing device. After the adjustments are completed, reconnect and adjust the supplementary governing device.

#### Adjust Governor Gap

With the engine stopped and at operating temperature, adjust the governor gap as follows:

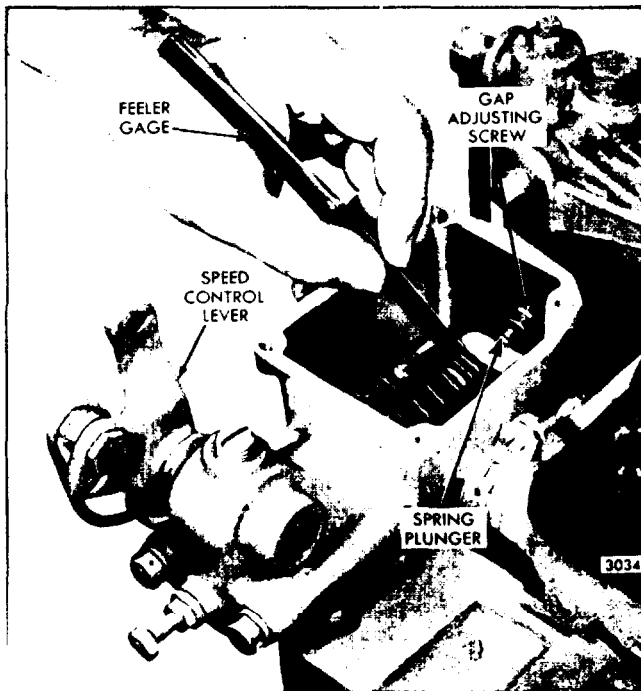


Fig. 1 - Checking Governor Gap

1. Disconnect any linkage attached to the governor levers.
2. Back out the buffer screw until it extends approximately 5/8" from the lock nut.
3. Clean and remove the governor cover and valve rocker cover. Discard the gaskets.
4. Place the speed control lever (Fig. 1) in the maximum speed position.
5. Insert a .006" feeler gage between the spring plunger and the plunger guide as shown in Fig. 1. If required, loosen the lock nut and turn the gap adjusting screw in or out until a slight drag is noted on the feeler gage.
6. Hold the adjusting screw and tighten the lock nut. Check the gap and readjust if necessary.
7. Use a new gasket and install the governor cover as follows:
  - a. Place the cover on the governor housing, with the

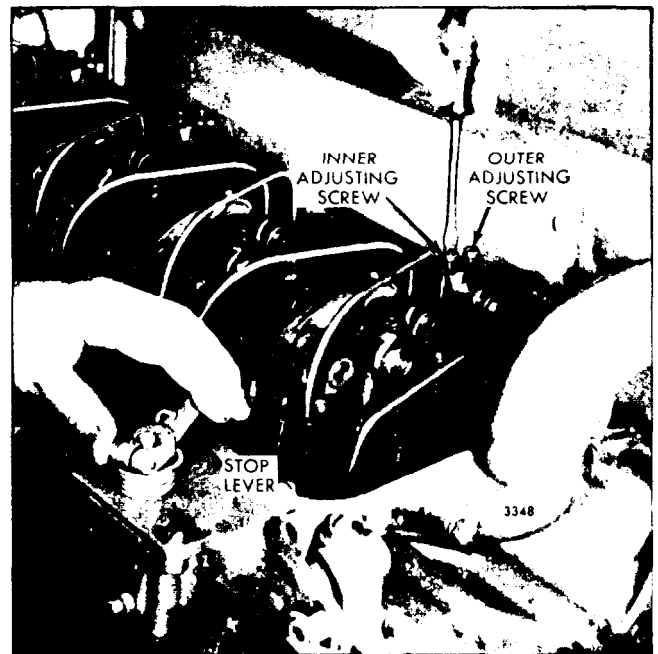


Fig. 2 - Positioning the Rear Injector Rack Control Lever

pin in the throttle shaft assembly entering the slot in the differential lever.

- b. Install the four cover screws and lock washers finger tight.
- c. Pull the cover assembly in a direction away from the engine, to take up the slack, and tighten the cover screws.

**NOTE:** This step is required since no dowels are used to locate the cover on the housing.

**Position Injector Rack Control Levers**

The position of the injector control rack levers must be correctly set in relation to the governor. Their position determines the amount of fuel injected into each cylinder and ensures equal distribution of the load. Properly positioned injector control rack levers with the engine at full-load will result in the following:

- 1. Speed control lever at the maximum speed position.
- 2. Stop lever in the RUN position.
- 3. Injector fuel control racks in the full-fuel position.

Adjust the rear injector rack control lever first to establish a guide for adjusting the remaining levers.

- 1. Loosen all of the inner and outer injector rack control lever adjusting screws (Fig. 2). Be sure all of the levers are free on the injector control tube.
- 2. Move the speed control lever to the maximum speed position.

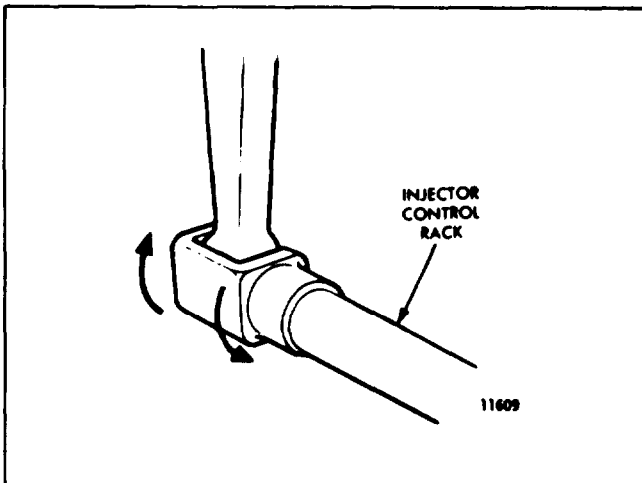


Fig. 3 - Checking Rotating Movement of Injector Control Rack

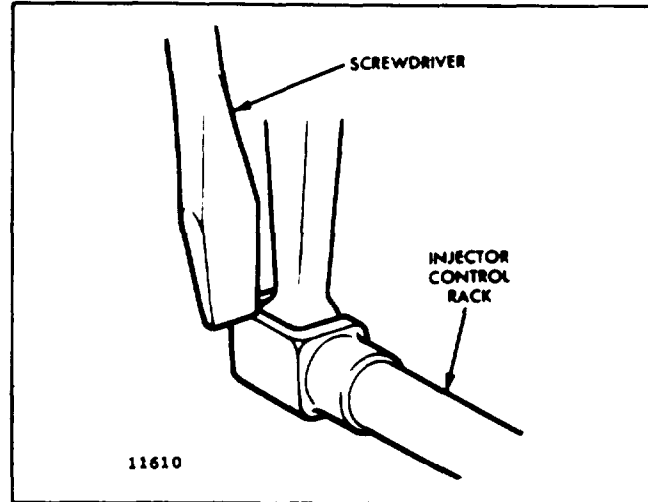


Fig. 4 - Checking Injector Control Rack "Sprint"

3. Move the stop lever to the RUN position and hold it in that position with light finger pressure. Turn the inner adjusting screw of the rear injector rack control lever down until a slight movement of the control tube is observed or a step-up in effort to turn the screw driver is noted. This will place the rear injector rack in the full-fuel position. Turn the outer adjusting screw down until it bottoms lightly on the injector control tube. Then alternately tighten both the inner and outer adjusting screws. This should result in placing the governor linkage and control tube in the respective positions that they will attain while the engine is running at full load.

**NOTE:** Overtightening of the injector rack control lever adjusting screws during installation or adjustment can result in damage to the injector control tube. The recommended torque of the adjusting screws is 24-36 in-lbs (3-4 Nm).

4. To be sure of proper rack adjustment, hold the stop lever in the RUN position and press down on the injector rack with a screw driver or finger tip and note "rotating" movement of the injector control rack (Fig. 3). Hold the stop lever in the RUN position and, using a screw driver, press downward on the injector control rack. The rack should tilt downward (Fig. 4) and, when the pressure of the screw driver is released, the control rack should "spring" back upward.

If the rack does not return to its original position, it is too loose. To correct this condition, back off the outer adjusting screw slightly and tighten the inner adjusting screw. The setting is too tight if, when moving the stop lever from the STOP to the RUN position, the injector rack becomes tight before the stop lever reaches the end of its travel. This will result in a step-up in effort

required to move the stop lever to the RUN position and a deflection in the fuel rod (fuel rod deflection can be seen at the bend). If the rack is found to be too tight, back off the inner adjusting screw slightly and tighten the outer adjusting screw.

5. To adjust the remaining injector rack control levers, remove the clevis pin from the fuel rod and the injector control tube lever, hold the injector control racks in the full-fuel position by means of the lever on the end of the control tube. Turn down the inner adjusting screw on the injector rack control lever of the adjacent injector until the injector rack has moved into the full-fuel position and the inner adjusting screw is bottomed on the injector control tube. Turn the outer adjusting screw down until it bottoms lightly on the injector control tube. Then alternately tighten both the inner and outer adjusting screws.

6. Recheck the rear injector rack to be sure that it has remained snug on the ball end of the rack control lever while adjusting the adjacent injector rack. If the rack of the rear injector has become loose, back off the inner adjusting screw slightly on the adjacent injector rack control lever and tighten the outer adjusting screw. When the settings are correct, the racks of both injectors must be snug on the ball end of their respective control levers.

7. Position the remaining injector rack control levers as outlined in Steps 4, 5 and 6.

8. When all of the injector rack control levers are adjusted, recheck their settings. With the control tube lever in the full-fuel position, check each control rack as in Step 4. All of the control racks must have the same "spring" condition with the control tube lever in the full-fuel position.

9. Insert the clevis pin in the fuel rod and the injector control tube levers.

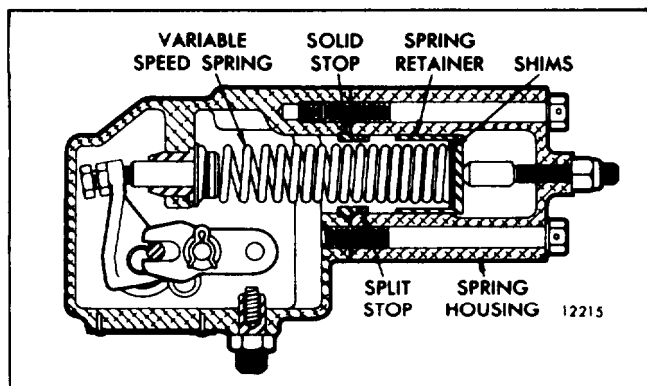


Fig. 5 - Locating of Shims and Stops

10. Use a new gasket and replace the valve rocker cover.

**Adjust Maximum No-load Speed**

All governors are properly adjusted before leaving the factory. However, if the governor has been reconditioned or replaced, and to ensure the engine speed will not exceed the recommended no-load speed as given on the option plate, the maximum no-load speed may be set as follows:

Start the engine and, after it reaches normal operating temperature, determine the maximum no-load speed of the engine with an accurate tachometer. Then stop the engine and make the following adjustments, if required.

1. Refer to Fig. 8 and disconnect the booster spring and the stop lever retracting spring.

2. Remove the variable speed spring housing and the variable speed spring retainer located inside of the housing.

3. Refer to Table I and determine the stops or shims required for the desired full-load speed. Do not use more than four thick and one thin shim. A split stop can only be used with a solid stop (Fig. 5).

4. Install the variable speed spring retainer and housing and tighten the two bolts.

5. Connect the booster spring and stop lever spring. Start the engine and recheck the maximum no-load speed.

6. If required, add shims to obtain the necessary operating speed. For each .001" in shims added, the operating speed will increase approximately 2 rpm.

**IMPORTANT:** If the maximum no-load speed is raised or lowered more than 50 rpm by the

Full Load Speed RPM	STOPS		SHIMS
	Solid Ring	Split Ring	
2575-2800	0	0	As Required
2101-2575	1	0	As Required
1701-2100	1	1	As Required
1200-1700	1	2	As Required

TABLE 1





Fig. 6 Adjusting Idle Speed

installation or removal of shims, recheck the governor gap. If readjustment of the governor gap is required, the position of the injector racks must be rechecked.

**NOTE:** Governor stops are used to limit the compression of the governor spring which determines the maximum speed of the engine.

**Adjust Idle Speed**

With the maximum no-load speed properly adjusted, adjust the idle speed as follows:

1. Place the stop lever in the RUN position and the speed control lever in the IDLE position.
2. With the engine running at normal operating temperature, back out the buffer screw to avoid contact with the differential lever.
3. Loosen the lock nut and turn the idle speed adjusting screw (Fig. 6) until the engine is operating at approximately 15 rpm below the recommended idle speed.

The recommended idle speed is 550 rpm, but may vary with special engine applications.

4. Hold the idle speed adjusting screw and tighten the lock nut.



Fig. 7 Adjusting Buffer Screw

**Adjust Buffer Screw**

1. With the engine running at normal operating temperature, turn the buffer screw in (Fig. 7) so that it contacts the differential lever as lightly as possible and still eliminates engine roll.

**NOTE:** Do not increase the engine idle speed more than 15 rpm with the buffer screw.

2. Hold the buffer screw and tighten the lock nut.

**Adjusting Booster Spring**

With the engine idle speed adjusted, adjust the booster spring as follows:

1. Move the speed control lever to the idle speed position.
2. Refer to Fig. 8 and loosen the booster spring retaining nut on the speed control lever. Loosen the lock nuts on the eye bolt at the opposite end of the booster spring.
3. Move the spring retaining bolt in the slot of the speed control lever until the center of the bolt is on or slightly over center (toward the idle speed position) of an imaginary line through the bolt, lever shaft and eye bolt. Hold the bolt and tighten the lock nut.
4. Start the engine and move the speed control lever to the maximum speed position and release it. The lever should return to the idle speed position. If it does not, reduce the-tension on the booster spring. If it does, continue to increase the spring tension until the point is reached where it will not return to idle. Then reduce

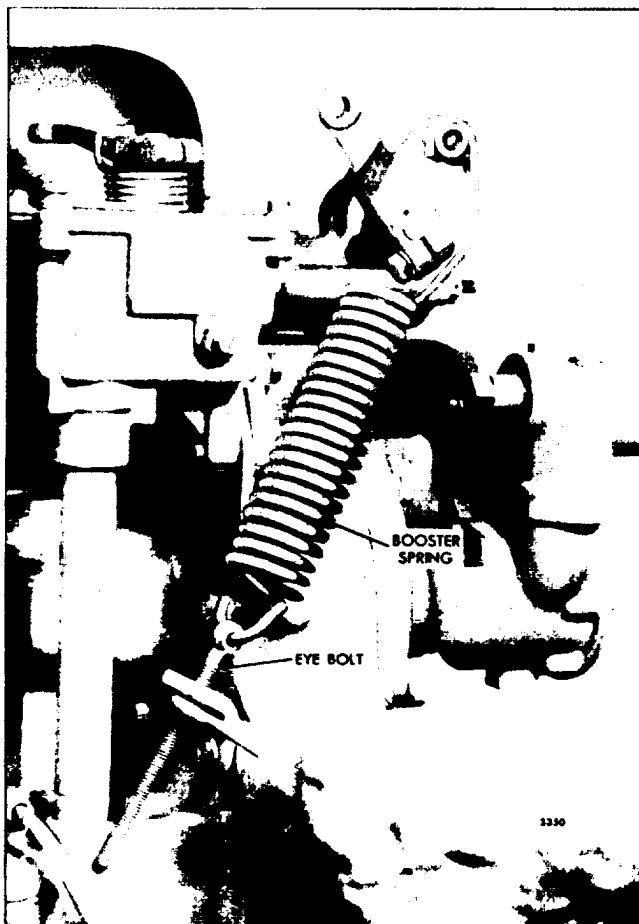


Fig. 8 - Adjusting Booster Spring

the spring tension until the lever does return to idle and tighten the lock nuts on the eye bolt. This setting will result in the minimum force required to operate the speed control lever.

5. Connect the linkage to the governor levers.

VARIABLE SPEED MECHANICAL GOVERNOR AND INJECTOR RACK CONTROL ADJUSTMENT

6V-53 ENGINE

The variable speed mechanical governor assembly is mounted at the rear of the 6V engine, between the flywheel housing and the blower (Fig. 1). The governor is driven by the right-hand blower rotor drive gear.

After adjusting the exhaust valves and timing the fuel injectors, adjust the governor and position the injector rack control levers.

**NOTE:** Before proceeding with the governor and injector rack adjustments, disconnect any supplementary governing device. After the adjustments are completed, reconnect and adjust the supplementary governing device.

Adjust Governor Gap

With the engine stopped and at normal operating temperature, adjust the governor gap as follows:

1. Disconnect any linkage attached to the governor levers.
2. Back out the buffer screw until it extends approximately 5/8" from the lock nut.

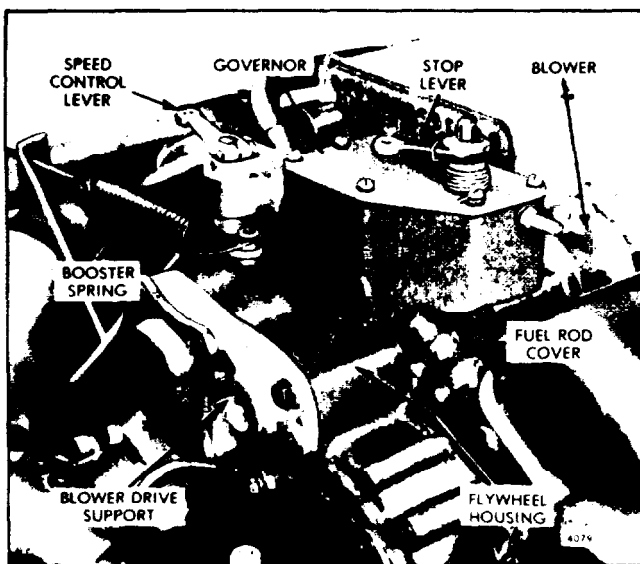


Fig. 1 - Variable Speed Governor Mounting

3. Clean and remove the governor cover and the valve rocker covers. Discard the gaskets.
4. Place the speed control lever in the maximum speed position.
5. Insert a .006" feeler gage between the spring plunger and the plunger guide as shown in Fig. 2. If required, loosen the lock nut and turn the adjusting screw in or out until a slight drag is noted on the feeler gage.
6. Hold the adjusting screw and tighten the lock nut. Check the gap and readjust if necessary.
7. Use a new gasket and install the governor cover.

Position Injector Rock Control Levers

The position of the injector control racks must be correctly set in relation to the governor. Their position determines the amount of fuel injected into each cylinder and ensures equal distribution of the load.

Properly positioned injector rack control levers with the engine at full-load will result in the following:

1. Speed control lever at the maximum speed position.

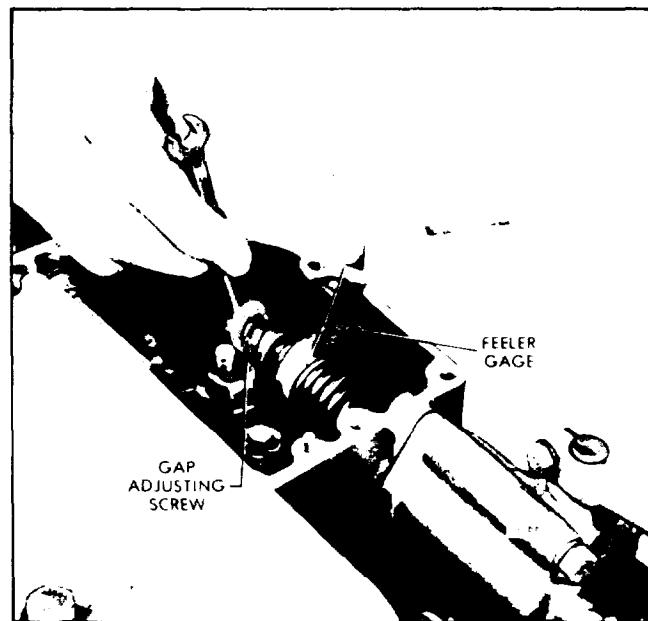


Fig. 2 Adjusting Governor Gap

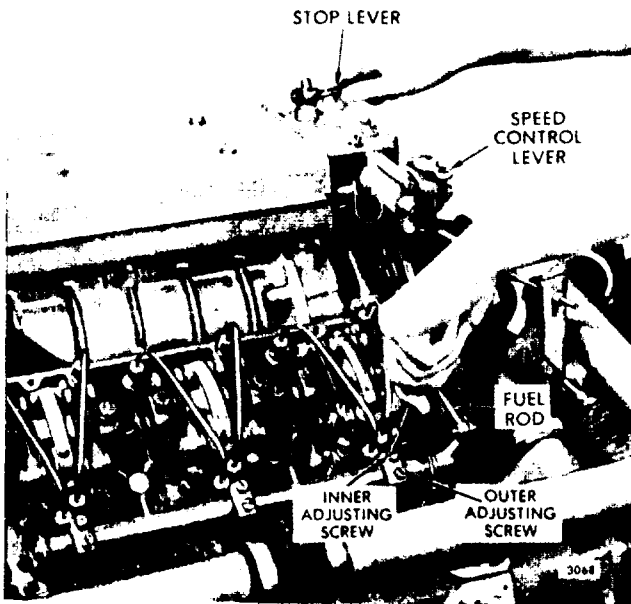


Fig. 3 - Positioning No. 3L Injector Rack Control Lever

2. Stop lever in the RUN position.
3. Injector fuel control racks in the full-fuel position.

The letters R or L indicate the injector location in the right or left cylinder bank, viewed from the rear of the engine. Cylinders are numbered starting at the front of the engine on each cylinder bank. Adjust the No. 3L injector rack control lever first to establish a guide for adjusting the remaining levers.

1. Remove the clevis pin from the fuel rod and the right cylinder bank injector control tube lever.
2. Loosen all of the inner and outer injector rack control lever adjusting screws on both injector control tubes. Be sure all of the injector rack control levers are free on the injector control tubes.
3. Move the speed control lever to the maximum speed position.
4. Move the stop lever to the *run* position and hold it in that position with light finger pressure. Turn the inner adjusting screw of the No. 3L injector rack control lever down (Fig. 3) until a slight movement of the control tube is observed, or a step-up in effort to turn the screw driver is noted. This will place the No. 3L injector rack in the *full-fuel* position. Turn the outer adjusting screw down until it bottoms lightly on

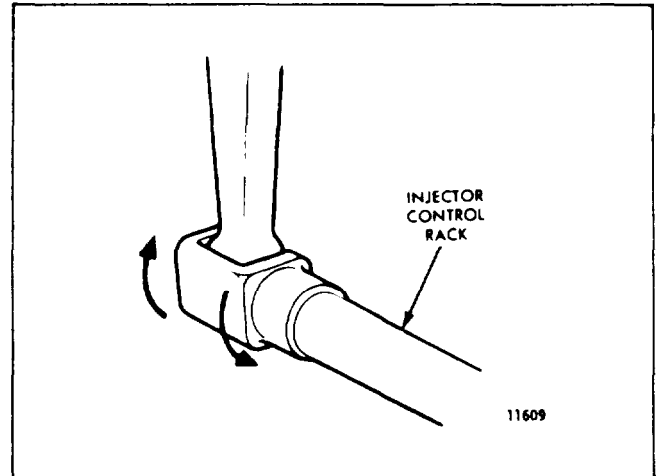


Fig. 4 - Checking Rotating Movement of Injector Control Rack

the injector control tube. Then alternately tighten both the inner and outer adjusting screws.

**NOTE:** Overtightening the injector rack control lever adjusting screws during installation or adjustment can result in damage to the injector control tube. The recommended torque of the adjusting screws is 24-36 **in-lb** (3-4 Nm).

The above steps should result in placing the governor linkage and control tube in the respective positions that they will attain while the engine is running at full load.

5. To be sure of proper rack adjustment, hold the stop

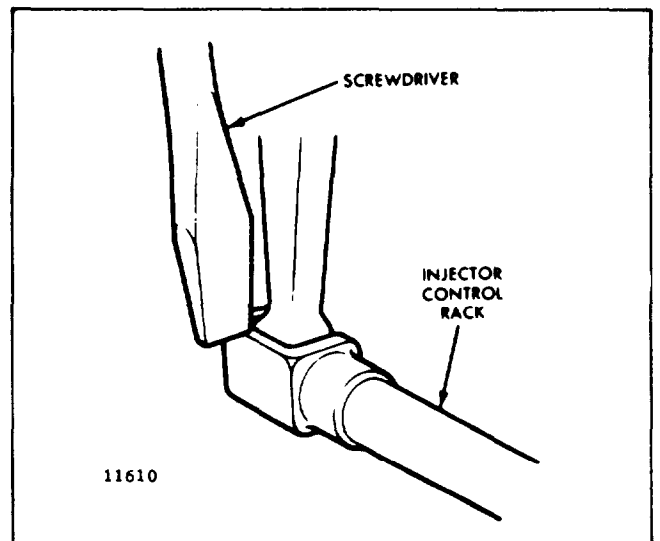


Fig. 5 - Checking Injector Control Rack "Spring"

lever in the *run* position and press down on the injector rack with a screw driver or finger tip and note the "rotating" movement of the injector control rack (Fig 4). Hold the stop lever in the *run* position and, using a screw driver, press downward on the injector control rack. The rack should tilt downward (Fig. 5) and when the pressure of the screw driver is released, the control rack should "spring" bath upward. If the rack does not return to its original position, it is too loose. To correct this condition, back off the outer adjusting screw slightly and tighten the inner adjusting screw. The setting is too tight if, when moving the stop lever from the *stop* to the *run* position, the injector rack becomes tight before the governor stop lever reaches the end of its travel. This will result in a step-up in effort required to move the stop lever to the *run* position and a deflection in the fuel rod (fuel rod deflection can be seen at the bend). If the rack is found to be too tight, back off the inner adjusting screw slightly and tighten the outer adjusting screw.

6. Remove the clevis pin from the fuel rod and the left bank injector control tube lever.

7. Insert the clevis pin in the fuel rod and the right cylinder bank injector control tube lever and position the No. 3R injector rack control lever as previously outlined in Step 4 for the No. 3L control lever.

8. Insert the clevis pin in the fuel rod and the left bank injector control tube lever. Repeat the check on the 3L and 3R injector rack control levers as outlined in Step 5. Check for and eliminate any deflection which may occur at the bend in the fuel rod where it enters the cylinder head.

9. To adjust the remaining injector rack control levers, remove the clevis pin from the fuel rods and the injector control tube levers, hold the injector control racks in the full-fuel position by means of the lever on the end of the control tube and proceed as follows:

- a. Turn down the inner adjusting screw of the injector rack control lever until the screw bottoms (injector control rack in the full-fuel position).
- b. Turn down the outer adjusting screw of the injector rack control lever until it bottoms on the injector control tube.
- c. While still holding the control tube lever in the full-fuel position, adjust the inner and outer adjusting screws to obtain the same condition as outlined in Step 5. Tighten the screws.

**CAUTION:** Once the No. 3L and No. 3R injector rack control levers are adjusted, do not try to alter their settings. All adjustments are made on the remaining control racks.

10. When all of the injector rack control levers are adjusted, recheck their settings. With the control tube lever in the full-fuel position, check each control rack as in Step 5. All of the control racks must have the Same "spring" condition with the control tube lever in the full-fuel position.

11. Insert the clevis pin in the fuel rods and the injector control tube levers.

12. Use new gaskets and install the valve rocker covers.

**Adjust Maximum No-load Speed**

All governors are properly adjusted before leaving the factory. However, if the governor has been reconditioned or replaced, and to ensure the engine speed will not exceed the recommended no-load speed as given on the engine option plate, the maximum no-load speed may be set as follows:

Start the engine and after it reaches normal operating temperature, determine the maximum no-load speed of the engine with an accurate tachometer. Then stop the engine and make the following adjustments, if required.

1. Refer to Fig. 9 and disconnect the booster spring and the stop lever retracting spring.
2. Remove the variable speed spring housing and the spring retainer, located inside of the housing, from the governor housing.
3. Refer to Table 1 and determine the stops or shims required for the desired full-load speed. A split stop can only be used with a solid stop (Fig. 6).
4. Install the variable speed spring retainer and housing and tighten the two bolts.

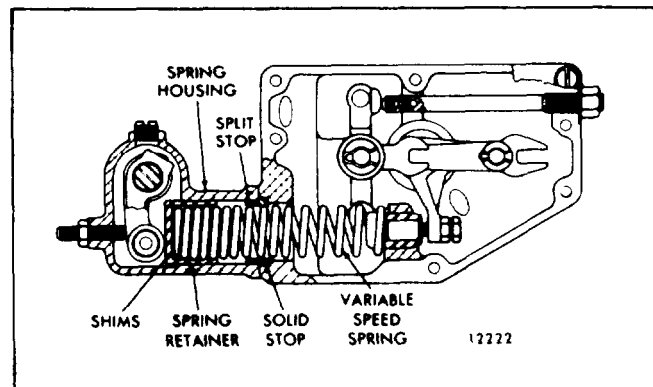


Fig. 6 - Location of Shims and Stops

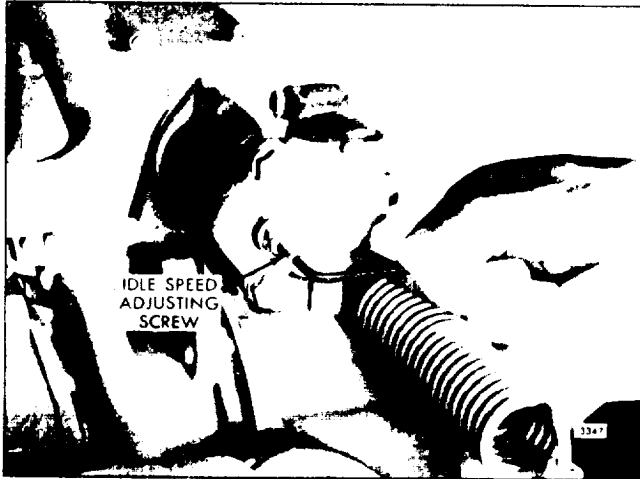


Fig. 7 - Adjusting Idle Speed

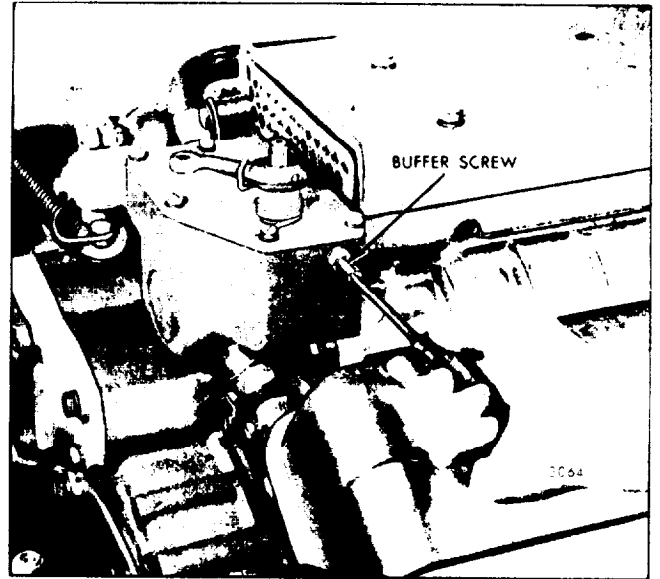


Fig. 8 - Adjusting Buffer Screw

Full-Load Speed	Stops		Shims*
	Solid	Split.	
1200-2100	1	1	As Required
2100-2500	1	0	As Required
2500-2800	0	0	As Required

\*Maximum amount of shims .325"

TABLE 1

5. Connect the booster spring and the stop lever spring. Start the engine and recheck the maximum no-load speed.

6. If required, add shims to obtain the necessary operating speed. For each .001" in shims added, the operating speed will increase approximately 2 rpm.

**IMPORTANT:** If the maximum no-load speed is raised or lowered more than 50 rpm by the installation or removal of shims, recheck the governor gap. If readjustment of the governor gap is required, the position of the injector racks must be rechecked.

**NOTE:** Governor stops are used to limit the compression of the governor spring, which determines the maximum speed of the engine.

**Adjust Idle Speed**

With the maximum no-load speed properly adjusted, adjust the idle speed as follows:

1. Place the stop lever in the run position and the speed control lever in the idle position.

2. With the engine running at normal operating temperature, back out the buffer screw to avoid contact with the differential lever.

3. Loosen the lock nut and turn the idle speed adjusting screw (Fig. 7) until the engine is operating at approximately 15 rpm below the recommended idle speed. The recommended idle speed is 550 rpm, but may vary with special engine applications.

4. Hold the idle speed adjusting screw and tighten the lock nut.

**Adjust Buffer Screw**

1. With the engine running at normal operating temperature, turn the buffer screw in (Fig. 8) so that it contacts the differential lever as lightly as possible and still eliminates engine roll.

**NOTE:** Do not raise the engine idle speed more than 15 rpm with the buffer screw.

2. Hold the buffer screw and tighten the lock nut.

**Adjust Booster Spring**

With the idle speed adjusted, adjust the booster spring as follows:

1. Move the speed control lever to the idle speed position.

2. Refer to Fig. 9 and loosen the booster spring

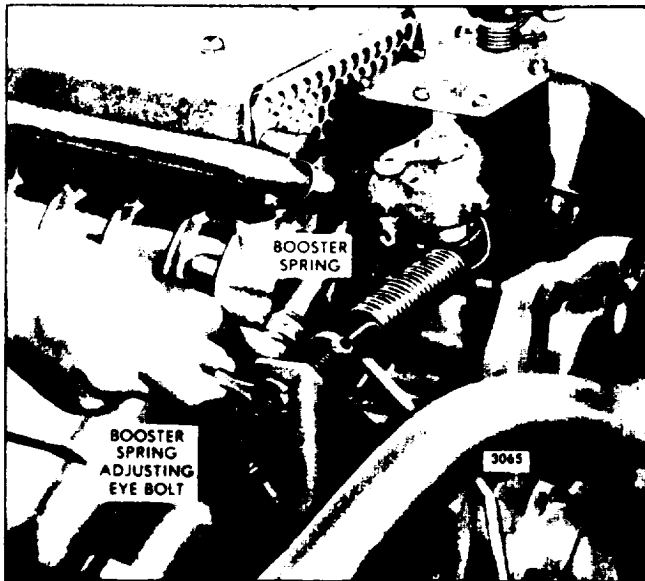


Fig. 9 Adjusting Booster Spring

retaining nut on the speed control lever. Loosen the lock nuts on the eye bolt at the opposite end of the booster spring.

3. Move the spring retaining bolt in the slot of the speed control lever until the center of the bolt is on or slightly over center (toward the idle speed position) of an imaginary line through the bolt, lever shaft and eye bolt. Hold the bolt and tighten the lock nut.

4. Start the engine and move the speed control lever to the maximum speed position and release it. The speed control lever should return to the idle position. If it does not, reduce the tension on the booster spring. If the lever does return to the idle position, continue to increase the spring tension until the point is reached that it will not return to idle. Then reduce the tension until it does return to idle and tighten the lock nut on the eye bolt. This setting will result in the minimum force required to operate the speed control lever.

5. Connect the linkage to the governor levers.

## SUPPLEMENTARY GOVERNING DEVICE ADJUSTMENT

## ENGINE LOAD LIMIT DEVICE

Engines with mechanical governors may be equipped with a load limit device (Fig. 1) to reduce the maximum horsepower.

This device consists of a load limit screw threaded into a plate mounted between two adjacent rocker arm shaft brackets and a load limit lever clamped to the injector control tube.

The load limit device is located between the No. 2 and No. 3 cylinders of a three or four cylinder engine or between the No. 1 and No. 2 cylinders of *each* cylinder head on a V-type engine. However, when valve rocker covers with a breather are used, the load limit device is installed between the No. 1 and No. 2 cylinders on in-line engines and between the No. 2 and No. 3 cylinders on V-type engines to avoid interference with the rocker cover baffles.

When properly adjusted for the maximum horsepower desired, this device limits the travel of the injector control racks and thereby the fuel output of the injectors.

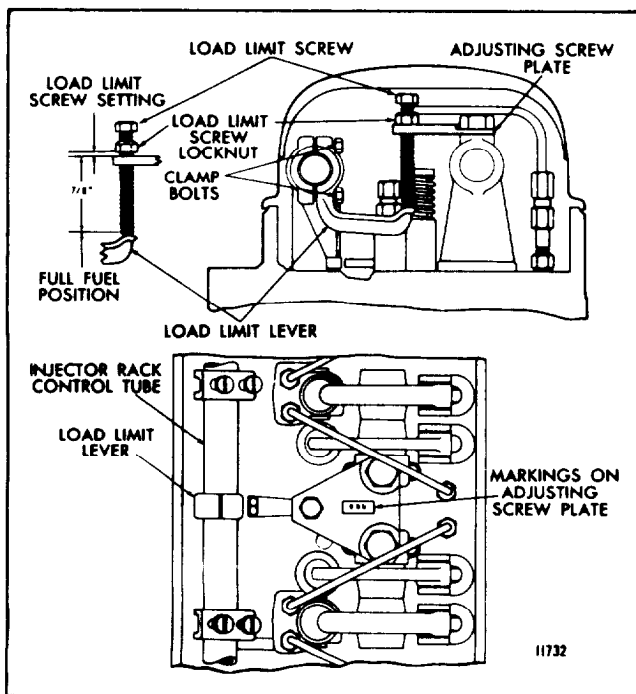


Fig. 1 - Engine Load Limit Device

## Adjustment

After the engine tune-up is completed, make sure the load limit device is properly installed as shown in Fig. 1. Make sure the counterbores in the adjusting screw plate are up. The rocker arm shaft bracket bolts which fasten the adjusting screw plate to the brackets are tightened to 50-55 lb-ft (68-75 Nm) torque. Then adjust the load limit device, on each cylinder head, as follows:

1. Loosen the load limit screw lock nut and remove the screw.
2. Loosen the load limit lever clamp bolts so the lever is free to turn on the injector rack control tube.
3. With the screw out of the plate, adjust the load limit screw lock nut so the bottom of the lock nut is 7/8" from the bottom of the load limit screw (Fig. 1) for the initial setting.
4. Loosen the load limit lever clamp bolts so the lever is free to turn on the injector rack control tube.
4. Thread the load limit screw into the adjusting screw plate until the lock nut *bottoms* against the top of the plate.
5. Hold the injector rack control tube in the full-fuel position and place the load limit lever against the bottom of the load limit screw. Then tighten the load limit lever clamp bolts.
6. Check to ensure that the injector racks will just go into the full-fuel position -- readjust the load limit lever if necessary.
7. Hold the load limit screw to keep it from turning, then *set* the lock nut until the distance between the bottom of the lock nut and the top of the adjusting screw plate corresponds to the dimension (or number of turns) stamped on the plate. Each full turn of the screw equals .042", or .007" for each flat on the hexagon head.
- NOTE:** If the plate is not stamped, adjust the load limit screw while operating the engine on a dynamometer test stand and note the number of turns required to obtain the desired horsepower. Then stamp the plate accordingly.
8. Thread the load limit screw into the plate until the lock nut *bottoms* against the top of the plate. Be sure the nut turns with the screw.
9. Hold the load limit screw to keep it from turning, then tighten the lock nut to secure the setting.



THROTTLE DELAY MECHANISM

The throttle delay mechanism is used to retard full-fuel injection when the engine is accelerated. This reduces exhaust smoke and also helps to improve fuel economy.

The throttle delay mechanism (Fig. 2) is installed between the No. 1 and No. 2 cylinders on three cylinder engines, between the No. 2 and No. 3 cylinders on four cylinder engines, or between the No. 1 and No. 2 cylinders on the right-bank cylinder head of V-type engines. It consists of a special rocker arm shaft bracket (which incorporates the throttle delay cylinder), a piston, throttle delay lever, connecting link, oil supply plug, ball check valve and U-bolt.

A yield lever and spring assembly replaces the standard lever and pin assembly on the rear end of the injector control tube on In-line engines (Fig. 3). A yield lever replaces the standard operating lever in the governor of the 6V-53 engine (Fig. 4).

Operation

Oil is supplied to a reservoir above the throttle delay cylinder through a special plug in the drilled oil passage in the rocker arm shaft bracket (Fig. 2). As the injector racks are moved toward the no-fuel position, free movement of the throttle delay piston is assured by air drawn into the cylinder through the ball check valve. Further movement of the piston uncovers an opening which permits oil from the reservoir to enter the cylinder and displace the air. When the

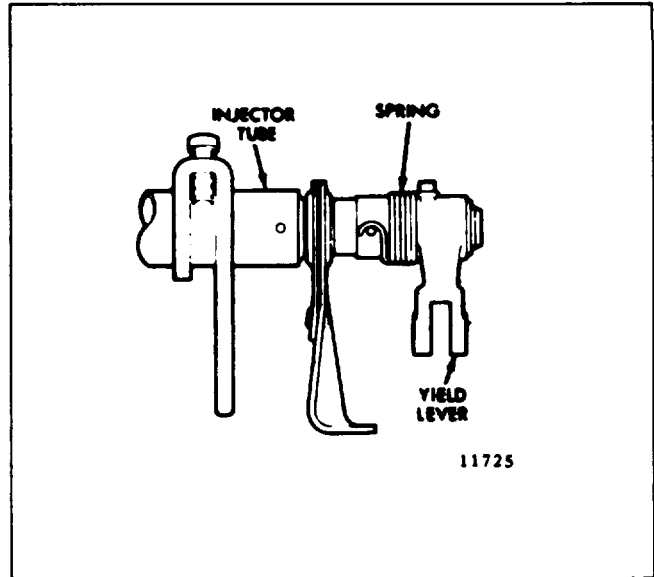


Fig. 3 - Throttle Delay Yield Lever (In-Line Engine)

engine is accelerated, movement of the injector racks toward the full-fuel position is momentarily retarded while the piston expels the oil from the cylinder through a .016" orifice. To permit full accelerator travel, regardless of the retarded injector rack position, a spring loaded yield lever or link assembly replaces the standard operating lever connecting link to the governor.

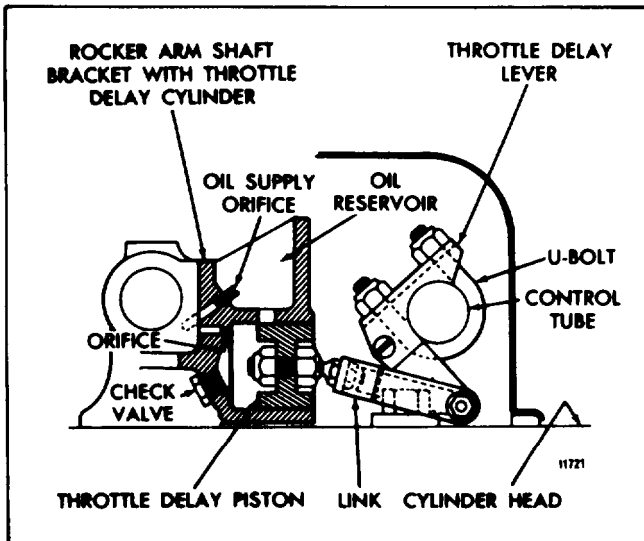


Fig. 2 - Throttle Delay Cylinder

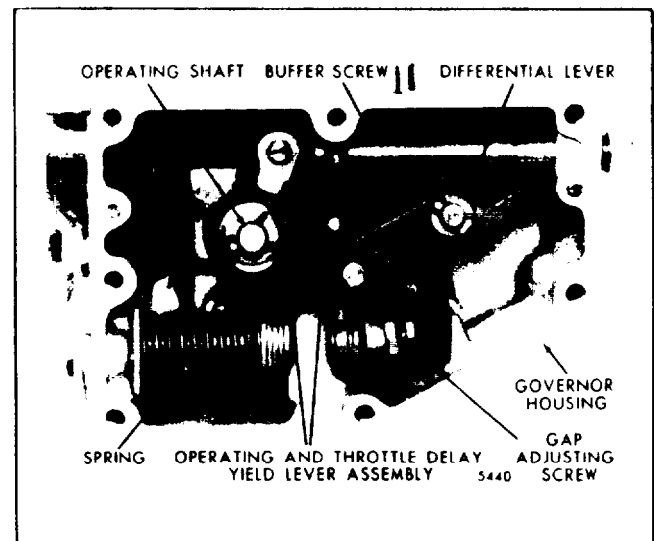


Fig. 4 - Throttle Delay Yield Lever (6V Engine)

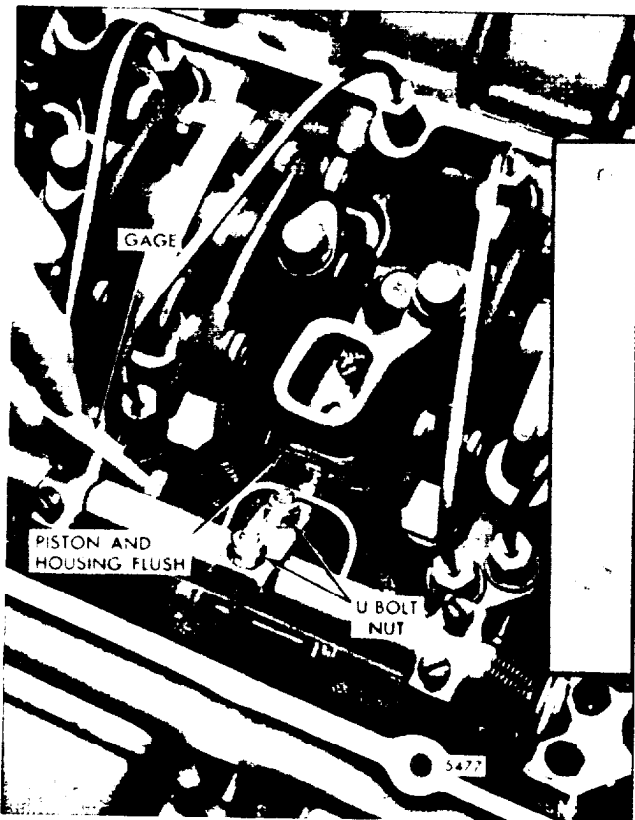


Fig. 5 - Adjusting Throttle Delay Cylinder

### Inspection

When inspecting the throttle delay hydraulic cylinder, it is important that the check valve be inspected for wear. Replace the check valve if necessary.

To inspect the check valve, fill the throttle delay cylinder with diesel fuel oil and watch for check valve leakage while moving the engine throttle from the idle position to the full fuel position.

### Adjustment

Whenever the injector rack control levers are adjusted, disconnect the throttle delay mechanism by loosening the U-bolt which clamps the lever to the injector control tube. After the injector rack control levers have been positioned, the throttle delay mechanism must be re-adjusted. With the engine stopped, proceed as follows:

1. Refer to Fig. 5 and insert gage J 23190 (.454" setting) between the injector body and the shoulder on the injector rack. Then exert a light pressure on the injector control tube in the direction of full fuel.
2. Align the throttle delay piston so it is flush with the edge of the throttle delay cylinder.
3. Tighten the U-bolt on the injector control tube and remove the gage.
4. Move the injector rack from the no-fuel to full-fuel to make sure it does not bind.

ADJUSTMENT OF MECHANICAL GOVERNOR SHUTDOWN SOLENOID

When a governor shutdown solenoid is used on an engine equipped with a mechanical governor, the governor stop lever must be properly adjusted to match the shutdown solenoid plunger travel.

The solenoid plunger can be properly aligned to the governor stop lever as follows:

1. Remove the bolt connecting the rod end eye (variable speed governor), or the right angle clip (limiting speed governor) to the stop lever (Figs. 6 and 7). Align and clamp the lever to the shutdown shaft in such a way that, at its mid-travel position, it is perpendicular to the solenoid plunger. This assures that the linkage will travel as straight as possible. The solenoid plunger has available 1/2" travel which is more than adequate to move the injector control racks from the full-fuel to the complete no-fuel position and shutdown will occur prior to attaining complete travel.

2. With the stop lever in the *run* position, adjust the rod end eye or right angle clip for minimum engagement on the solenoid plunger when the connecting bolt is installed. The oversize hole in the eye or clip will thereby permit the solenoid to start closing the air gap, with a resultant build-up of pull-in force prior to initiating stop lever movement.

3. The bolt through the rod end eye or the right angle clip should be locked to the stop lever and adjusted to a height that will permit the eye or clip to float vertically. The clearance above and below the eye or clip and the bolt head should be approximately 1/32" minimum.

**NOTE:** The lock nut can be either on top of or below the stop lever.

4. Move the lever to the *stop* position and observe the plunger for any possible bind. If necessary, loosen the

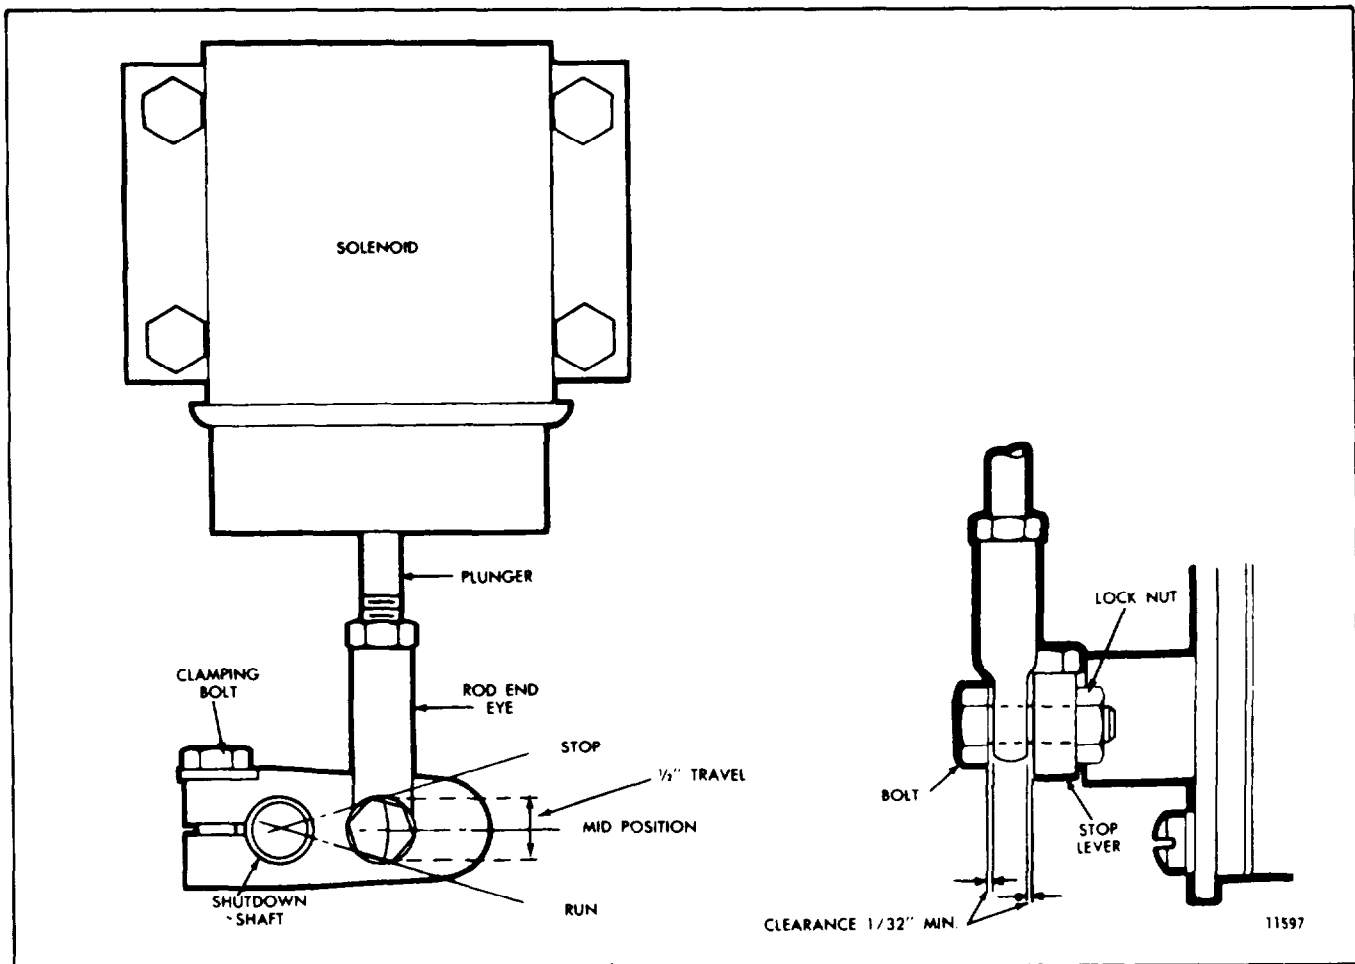


Fig. 6 - Typical Variable Speed Governor Lever Position

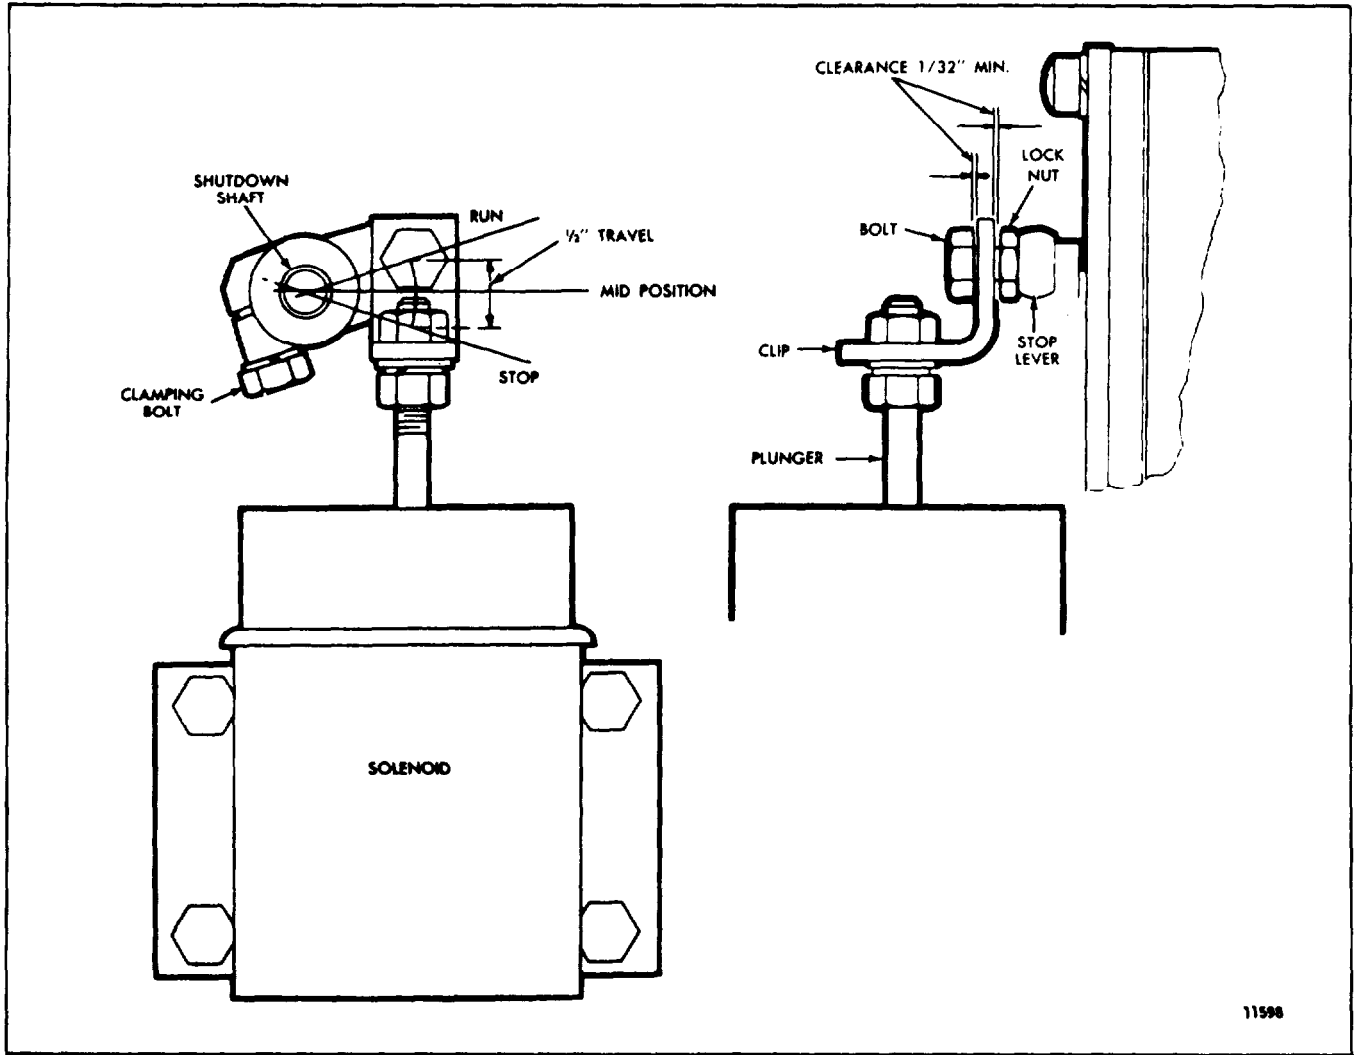


Fig. 7 - Typical Limiting Speed Governor Lever Position

mounting bolts and realign the solenoid to provide free plunger motion.

HYDRAULIC GOVERNOR AND INJECTOR RACK CONTROL ADJUSTMENT

IN-LINE ENGINE

The hydraulic governor is mounted on the 3 and 4-53 engines as shown in Fig. 1. The terminal lever return spring and the fuel rod are attached to an external terminal shaft lever. The maximum fuel position of the governor load limit is determined by the internal governor terminal lever striking against a boss that projects from the governor cover.

Adjust engines having a hydraulic governor assembly after adjusting the exhaust valve clearance and timing the fuel injectors.

Adjust Fuel Rod and Injector Rack Control Lever

1. Adjust the inner and outer adjusting screws (Fig. 2) on the rear injector rack control lever until both screws are equal in height and tight on the control tube. Check the clearance between the fuel rod and the cylinder head casting (below the bolt) for at least 1/16" clearance when the injector rack is in the *full-fuel* position and the rack adjusting screws are tight. If the fuel rod contacts the bolt or cylinder head casting, readjust the screws to obtain the 1/16" clearance.

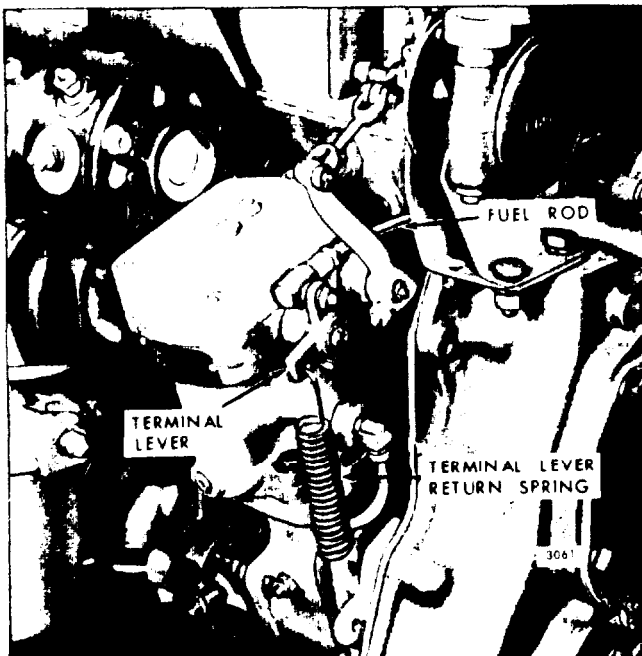


Fig. 1 - Hydraulic Governor Mounted on Engine

**NOTE:** Overtightening the injector rack control lever adjusting screws during installation or adjustment can result in damage to the Injector control tube. The recommended torque of the adjusting screws is 24-36 **in-lbs** (3-4 Nm).

2. Remove the governor terminal lever return spring.
3. Remove the fuel rod end bearing or ball joint from the terminal shaft lever and the terminal lever from the terminal shaft.
4. Place the terminal lever on the terminal shaft so that the hole for attaching the fuel rod end bearing or ball joint is in line vertically above the terminal lever shaft at one half the arc of travel. Do not tighten the clamping bolt.
5. Hold the injector rack control tube and the terminal lever in the *full-fuel* position and adjust the length of the fuel rod until the end bearing or ball joint will slide freely into the hole of the terminal lever as shown in Fig. 3. Tighten the lock nut to retain the ball

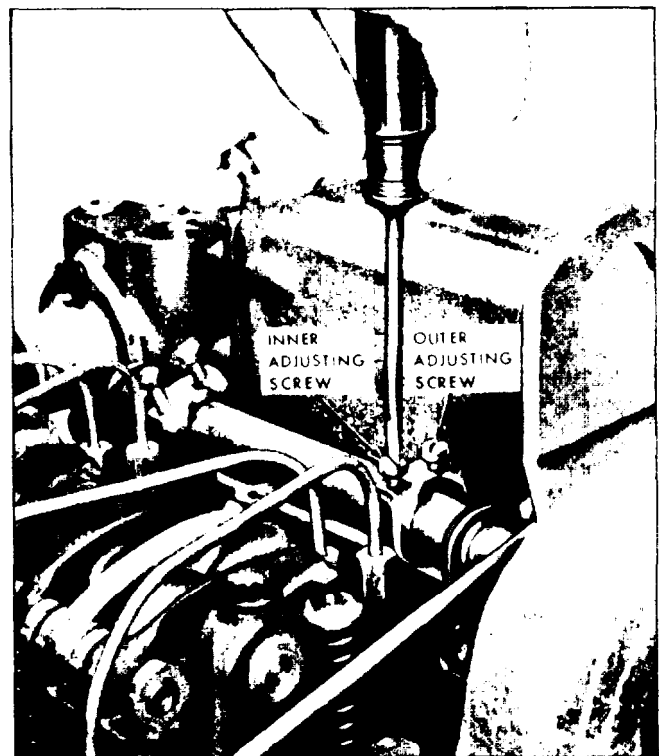


Fig. 2 - Adjusting Height of Rack Control Lever Adjusting Screws

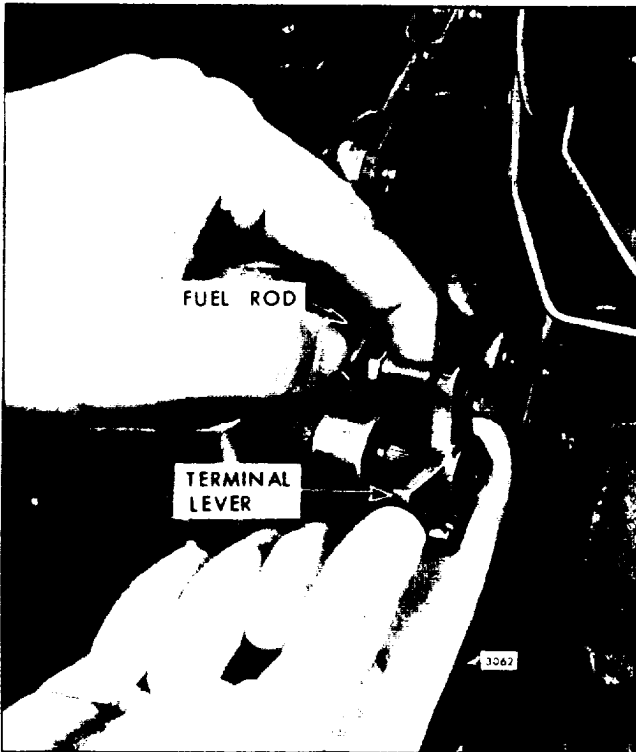


Fig. 3 - Adjusting Length of Fuel Rod

joint or end bearing and the terminal lever clamping bolt securely.

**NOTE:** It will be necessary to slide the terminal lever partially off of the shaft to attach the fuel rod end bearing or ball joint to the terminal lever.

6. Hold the terminal lever in the *full-fuel* position and loosen the inner adjusting screw 1/8 of a turn and tighten the outer adjusting screw 1/8 of a turn to retain the adjustment. This is done to prevent the governor from bottoming the injector racks, since there is no load limit screw on this governor.

7. Remove the clevis pin between the fuel rod and the injector control tube lever.

**NOTE:** Cover the cylinder head oil drain back hole, located under the control lever, when removing the fuel rod clevis pin to prevent its loss and possible damage to the engine.

8. Manually hold the rear injector in the *full-fuel* position and turn down the inner rack control lever adjusting screw of the adjacent injector until the injector rack of the adjacent injector has moved into the *full-fuel* position and the inner adjusting screw is bottomed on the injector control tube. Turn the outer adjusting screw down until it bottoms lightly on the

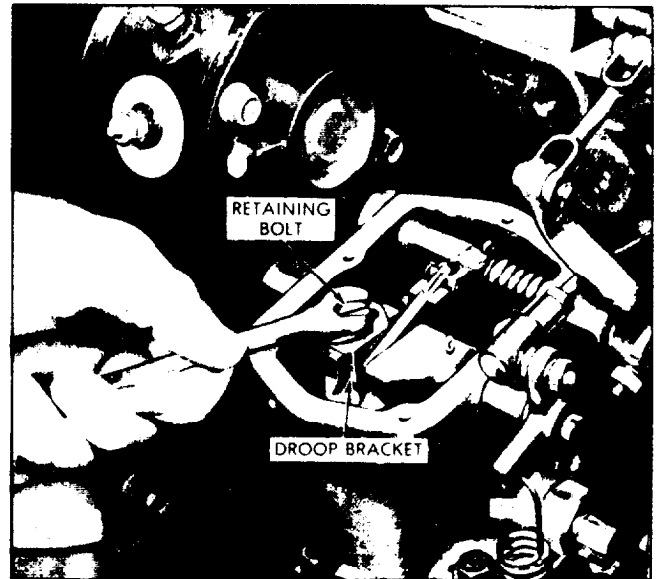


Fig. 4 - Adjusting Droop Bracket

injector control tube. Then alternately tighten both the inner and outer rack control lever adjusting screws.

9. Recheck the rear injector fuel rack to be sure that it has remained snug on the ball end of the rack control lever while adjusting the adjacent injector. If the rack of the rear injector has become loose, back off slightly on the inner adjusting screw on the adjacent injector rack control lever. Tighten the outer adjusting screw. When the settings are correct, the racks of both injectors must be snug on the ball end of their respective rack control levers.

10. Position the remaining rack control levers as outlined in Steps 8 and 9.

11. Insert the clevis pin between the fuel rod and the injector control tube lever.

12. Install the terminal lever return spring.

### Adjust Speed Droop

The purpose of adjusting the speed droop is to establish a definite engine speed at no load with a given speed at rated full load.

The governor droop is set at the factory and further adjustment should be unnecessary. However, if the governor has had major repairs, the speed droop should be readjusted.

The best method of determining the engine speed is with an accurate hand tachometer.

Full Load	No-Load
50 cycles 1000 rpm	52.5 cycles 1050 rpm
60 cycles 1200 rpm	62.5 cycles 1250 rpm
50 cycles 1500 rpm	52.5 cycles 1575 rpm
50 cycles 1800 rpm	62.5 cycles 1875 rpm

TABLE 1

If a full-rated load can be established on the engine and the fuel rod, injector rack control levers and load limit have been adjusted, the speed droop may be adjusted as follows:

1. Start the engine and run it at approximately one-half the rated no-load speed until the lubricating oil temperature stabilizes.

**NOTE:** When the engine lubricating oil is cold, the governor regulation may be erratic. The regulation should become increasingly stable as the temperature of the lubricating oil increases.

2. Stop the engine and remove the governor cover. Discard the gasket.
3. Loosen the lock nut and back off the maximum speed adjusting screw (Fig. 5) approximately 5/8".
4. Refer to Fig. 4 and loosen the droop adjusting bolt. Move the droop bracket so that the bolt is midway between the ends of the slot in the bracket. Tighten the bolt.
5. With the throttle in the *run* position, adjust the engine speed until the engine is operating at 3% to 5% above the recommended full-load speed.
6. Apply the full-rated load on the engine and re-adjust the engine speed to the correct full-load speed.
7. Remove the rated load and note the engine speed after the speed stabilizes under no-load. If the speed droop is correct, the engine speed will be approximately 3% to 5% higher than the full-load speed.

If the speed droop is too high, stop the engine and again loosen the droop bracket retaining bolt and move the droop adjusting bracket *in* toward the engine. Tighten the bolt. To increase the speed droop, move the droop adjusting bracket *out*, away from the engine.

The speed droop in governors which control engines driving generators in parallel must be identical, otherwise, the electrical load will not be equally divided.



Fig. 5 - Adjusting Maximum Engine Speed

Adjust the speed droop bracket in each engine governor to obtain the desired variation between the engine no-load and full-load speeds shown in Table 1.

The recommended speed droop of generator sets operating in parallel is 50 rpm (2-1/2 cycles) for units operating at 1000 and 1200 rpm and 75 rpm (2-1/2 cycles) for units operating at 1500 rpm and 1800 rpm full load. This speed droop recommendation may be varied to suit the individual application.

**Adjust Maximum No-load Speed**

With the speed droop properly adjusted, set the maximum no-load speed as follows:

1. Loosen the maximum speed adjusting screw lock nut and back out the maximum speed adjusting screw three turns.
2. With the engine operating at no-load, adjust the engine speed until the engine is operating at approximately 8% higher than the rated full-load speed.
3. Turn the maximum speed adjusting screw (Fig. 5) in lightly until contact is felt with the linkage in the governor.
4. Hold the maximum speed adjusting screw and tighten the lock nut.
5. Use a new gasket and install the governor cover.

## HYDRAULIC GOVERNOR AND INJECTOR RACK CONTROL ADJUSTMENT

## 6V-53 ENGINE

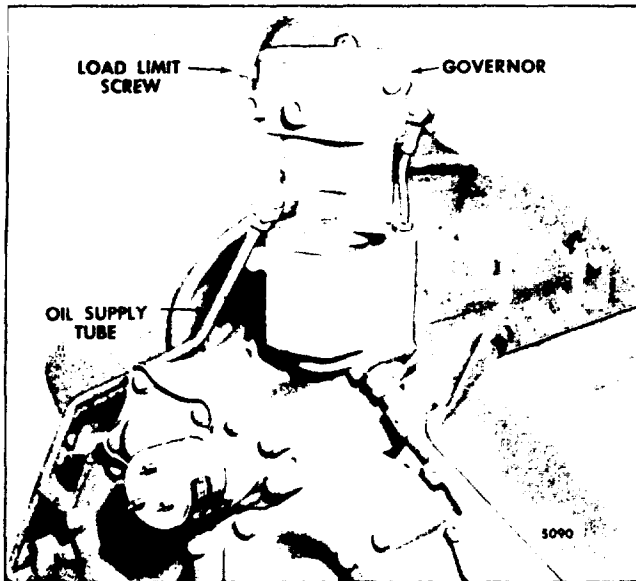


Fig. 1 - Hydraulic Governor Mounting

The hydraulic governor is mounted between the blower and the rear end plate as shown in Fig. 1. The vertical control link assembly is attached to the governor operating lever and the bell crank lever on the governor drive housing (Fig. 2).

After adjusting the exhaust valves and timing the fuel injectors, adjust the governor as follows:

1. Disconnect the vertical control link assembly from the governor operating lever.
2. Loosen all of the injector rack control lever adjusting screws.
3. While holding the bell crank lever (on the governor drive housing) in a horizontal position (full-fuel), set the No. 3 injector rack control levers on each bank to full-fuel.
4. Position the remaining rack control levers to the No. 3 control levers.
5. Remove the governor cover. Discard the gasket.
6. To determine the full-fuel position of the terminal

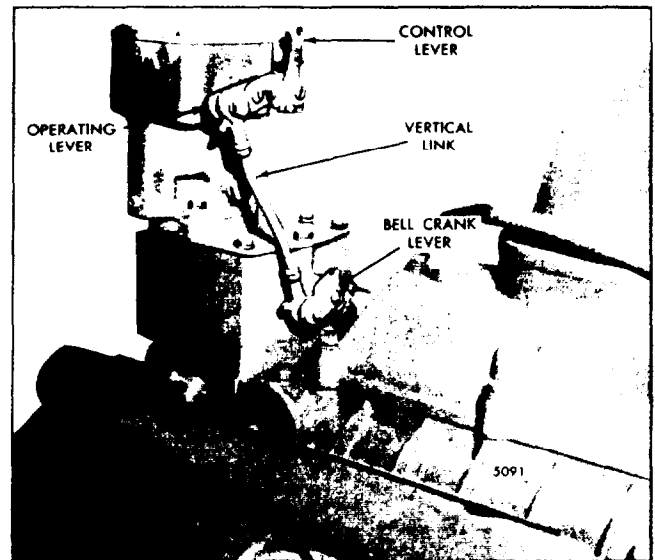


Fig. 2 Hydraulic Governor Controls

lever, adjust the load limit screw to obtain a distance of 2" from the outside face of the boss on the governor sub-cap to the end of the screw.

7. Adjust the operating lever (on the governor) so that it is horizontal, or slightly below (as close as the serrations on the shaft will permit) when the shaft is rotated to the full-fuel position, or clockwise when viewed from the front of the engine.

8. Loosen the lock nut and adjust the length of the vertical link assembly, attached to the bell crank lever, to match the full-fuel position of the governor operating lever and the injector rack control levers. This length should be approximately 6-5/16". Tighten the lock nut.

9. With the governor operating lever held in the *full-fuel* position, turn the load limit screw ((Fig. 1) inward until the injector racks just loosen on the ball end of the control levers, to prevent the injector racks from bottoming.

10. Release the governor operating lever and hold the adjusting screw while tightening the lock nut.

11. Use new gaskets and install the governor cover and the valve rocker covers.





**TROUBLE SHOOTING**

Certain abnormal conditions which sometimes interfere with satisfactory engine operation, together with methods of determining the cause of such conditions, are covered on the following pages,

Satisfactory engine operation depends primarily on:

1. An adequate supply of air compressed to a sufficiently high compression pressure.
2. The injector of the proper amount of fuel at the right time.

Lack of power, uneven running, excessive vibration, stalling at idle speed and hard starting may be caused by either low compression, faulty fuel injection in one or more cylinders, or lack of sufficient air.

Since proper compression, fuel injection and the proper amount of air are important to good engine performance, detailed procedures for their investigation are given as follows:

**locating a Misfiring Cylinder**

1. Start the engine and run it at part load until it reaches normal operating temperature.
2. Stop the engine and remove the valve rocker cover(s). Discard the gasket(s).
3. Check the valve clearance. The clearance should be .009" (two valve cylinder head) or .024" (four valve cylinder head).

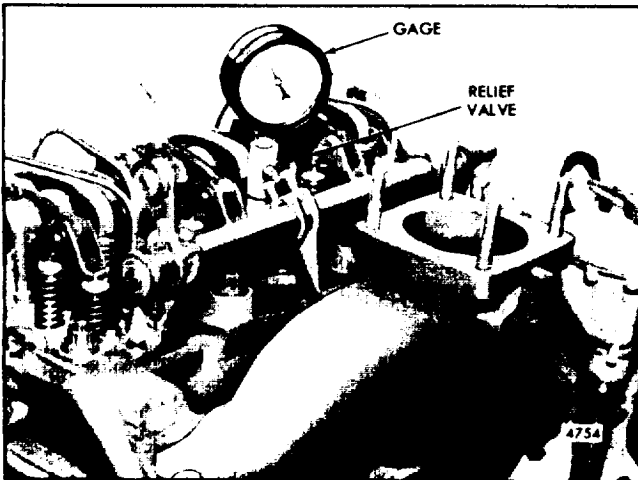


Fig. 1 - Checking Compression Pressure

4. Start the engine and hold an injector follower down with a screw driver to prevent operation of the injector. If the cylinder has been misfiring, there will be no noticeable difference in the sound and operation of the engine. If the cylinder has been firing properly, there will be a noticeable difference in the sound and operation when the injector follower is held down. This is similar to short-circuiting a spark plug in a gasoline engine.

5. If the cylinder is firing properly, repeat the procedure on the other cylinders until the faulty one has been located.

6. If the cylinder is misfiring, check the following:

- a. Check the injector timing (refer to *Engine Tune-Up Procedure*).
- b. Check the compression pressure.
- c. Install a new injector.
- d. If the cylinder still misfires, remove the cam follower and check for a worn cam roller, camshaft lobe, bent push rod or worn rocker arm bushings.

7. If installation of a new injector does not eliminate misfiring, check the compression pressure.

**Checking Compression Pressure**

Compression pressure is affected by altitude as shown in Table 1.

Check the compression pressure as follows:

1. Start the engine and run it at approximately one-half rated load until normal operating temperature is reached.

Minimum Compression Pressure, psi		Altitude, Feet Above Sea Level
Std. Engine	"N" Engine	
430	540	0
400	500	2,500
370	465	5,000
340	430	7,500
315	395	10,000

TABLE 1

2. Stop the engine and remove the fuel pipes from the No. 1 injector and the fuel connectors.

3. Remove the injector and install adaptor J 7915-02 and pressure gage and hose assembly J 6992 (Fig. I).

4. Use a spare fuel pipe and fabricate a jumper connection between the fuel inlet and return fuel connectors to permit fuel to flow directly to the fuel return manifold.

5. Start the engine and run it at 600 rpm. Observe and record the compression pressure indicated on the gage.

**NOTE:** Do not crank the engine with the starting motor to check the compression pressure.

6. Perform Steps 2 through 5 on each cylinder. The compression pressure in any one cylinder should not be less than 430 psi (540 psi for "N" engines) at 600 rpm. In addition, the variation in compression pressures between cylinders of the engine must not exceed 25 psi at 600 rpm.

**EXAMPLE:** If the compression pressure readings were as shown in Table 2, it would be evident that No. 3 cylinder should be examined and the cause of the low compression pressure be determined and corrected.

Note that all of the cylinder pressures are above the low limit for satisfactory engine operation. Nevertheless, the No. 3 cylinder compression pressure indicates that something unusual has occurred and that a localized pressure leak has developed.

Low compression pressure may result from any one of several causes:

A. Piston rings may be stuck or broken. To determine the condition of the rings, remove the air box cover and press on the compression rings with a blunt tool. A broken or stuck compression ring will not have a "spring-like" action.

B. Compression pressure may be leaking past the

Cylinder	Gage Reading
1	525 psi (3617 kPa)
2	520 psi (3583 kPa)
3	485 psi (3342 kPa)
4	515 psi (3548 kPa)

The above pressures are for an engine operating at an altitude near sea level.

TABLE 2

cylinder head gasket, valve seats, injector tubes or through a hole in the piston.

**Engine Out of Fuel**

The problem in restarting the engine after it has run out of fuel stems from the fact that after the fuel is exhausted from the fuel tank, fuel is then pumped from the primary fuel strainer and sometimes partially removed from the secondary fuel filter before the fuel supply becomes insufficient to sustain engine firing. Consequently, these components must be refilled with fuel and the fuel pipes rid of air in order for the system to provide adequate fuel for the injectors.

When an engine has run out of fuel, there is a definite procedure to follow for restarting it. The procedure is outlined below:

1. Fill the fuel tank with the recommended grade of fuel oil. If only partial filling of the tank is possible, add a minimum of ten gallons of fuel.

2. Remove the fuel strainer shell and element from the strainer cover and fill the shell with fuel oil. Install the shell and element.

3. Remove and fill the fuel filter shell and element with fuel oil as in Step 2.

4. Start the engine. Check the filter and strainer for leaks.

**NOTE:** In some instances, it may be necessary to remove a valve rocker cover and loosen a fuel pipe nut in order to bleed trapped air from the fuel system. Be sure the fuel pipe is retightened securely before replacing the rocker cover.

Primer J 5956 may be used to prime the engine fuel system. Remove the filler plug in the fuel filter cover and install the primer. Prime the system. Remove the primer and install the filler plug.

**Fuel Flow Test**

1. Disconnect the fuel return hose from the fitting at the fuel tank and hold the open end in a suitable container.

2. Start and run the engine at 1200 rpm and measure the fuel flow for a period of one minute. At least .6 gallon of fuel should flow from the fuel return hose per minute.

3. Immerse the end of the fuel return hose in the fuel in the container. Air bubbles rising to the surface of the

CRANKCASE PRESSURE (max. in inches of water)					
Engine	Speed (rpm)				
	1800	2000	2200	2500*	2800*
3-53	.5	.5	.5	.9	1.0
4-53	.5	.5	.5	.9	1.0
4-53T	—	—	—	1.0	—
6v-53	—	—	—	.9	1.0

\*Engines with four valve cylinder head(s).

TABLE 3

fuel will indicate air being drawn into the fuel system on the suction side of the pump.

If air is present, tighten all fuel line connections between the fuel tank and the fuel pump.

If the fuel flow fails to meet the amount specified, the fuel strainer, filter or pump should be serviced.

**Crankcase Pressure**

The crankcase pressure. indicates the amount of air passing between the oil control rings and the cylinder liner into the crankcase, most of which is clean air from the air box. A slight pressure in the crankcase is desirable to prevent the entrance of dust. A loss of engine lubricating oil through the breather tube, crankcase ventilator or dipstick hole in the cylinder block is indicative of excessive crankcase pressure.

The causes of high crankcase pressure may be traced to excessive blow-by due to worn piston rings, a hole or crack in a piston crown, loose piston pin retainers, worn blower oil seals, defective blower, cylinder head or end plate gaskets, or excessive exhaust back pressure. Also, the breather tube or crankcase ventilator should be checked for obstructions.

The crankcase pressure may be checked with a manometer connected to the oil level dipstick opening in the cylinder block. Check the readings obtained at various engine speeds with the specifications in Table 3.

**Exhaust Back Pressure**

A slight pressure in the exhaust system is normal. However, excessive exhaust back pressure seriously affects engine operation. It may cause an increase in the air box pressure with a resultant loss in the efficiency of the blower. This means less air for

EXHAUST BACK PRESSURE (max. in inches of Mercury)					
Engine	No-Load Speed (rpm)				
	1800	2000	2200	2500*	2800*
3-53	1.3	1.7	2.1	2.7	2.7†
4-53	3-53	1.3	2.1	2.7	2.7†
4-53T	—	—	—	1.8	—
6V-53	—	—	—	2.7	2.7†

\*Engine! with four valve cylinder head(s).

†3.8 for Marine engines.

TABLE 4

AIR BOX PRESSURE (min. in inches of Mercury)					
Max. Exhaust Rack Pressure (Full Load)					
Engine	Speed (rpm)				
	1800	2000	2200	2500*	2800*
3-53	5.5	6.9	8.6	8.0	9.3
4-53	5.5	6.9	8.6	8.0	9.3
4-53T	—	—	—	33.5	—
6v-53	—	—	—	8.0	9.3
(Zero Exhaust Rack pressure)					
3-53	3.8	4.9	6.2	4.8	6.1
4-53	3.8	4.9	6.2	4.8	6.1
4-53†	—	—	—	31.5	—
6V-53	—	—	—	4.8	6.1

\*Engines with four valve cylinder head(s).

TABLE 5

scavenging, which results in poor combustion and higher temperatures.

Causes of high exhaust back pressure are usually a result of an inadequate or improper type of muffler, an exhaust pipe which is too long or too small in diameter, an excessive number of sharp bends in the exhaust system, or obstructions such as excessive carbon formation or foreign matter in the exhaust system.

The exhaust back pressure, measured in inches of mercury, may be checked with a manometer, or pressure gage, connected to the exhaust manifold. Remove the 1/8" pipe plug, which is provided for that purpose, from the manifold. If there is no opening provided, one can be made by drilling an 11/32" hole

AIR INLET RESTRICTION (inches of water)					
Engine	Speed (rpm)				
	1800	2000	2200	2500*	2800*
Max. with dirty air cleaner (oil bath or dry)					
3-53	13.4	—	18.8	23.0	25.0
4-53	13.4	—	18.8	23.0	25.0
6V-53	—	—	18.8	23.0	25.0
Max. with clean air cleaner (oil bath)					
3-53	9.5	10.8	12.0	14.0	16.0
4-53	9.5	10.8	12.0	14.0	16.0
6V-53	—	—	12.0	14.0	16.0
Max. with clean air cleaner (Dry with precleaner)					
3-53	6.8	10.8	12.0	—	—
4-53	6.8	10.8	12.0	—	—
Max. with clean air cleaner (Dry less precleaner)					
3-53	5.5	6.5	7.4	8.7	10.0
4-53	5.5	6.5	7.4	8.7	10.0
6V-53	—	—	7.4	8.7	10.0
Max. with air silencer (full load)					
4-53T	—	—	—	20.0	—

\*Engines with four valve cylinder heads.

TABLE 6

in the exhaust manifold companion flange and tapping a 1/8" pipe thread.

Check the readings obtained at various speeds (no load) with the specifications in Table 4.

**Air Box Pressure**

Proper air box pressure is required to maintain sufficient air for combustion and scavenging of the burned gases. Low air box pressure is caused by a high air inlet restriction, damaged blower rotors, an air leak from the air box (such as a leaking end plate gasket), or a clogged blower air inlet screen.

Lack of power or black or grey exhaust smoke are indications of low air box pressure.

To check the air box pressure, connect a manometer to an air box drain tube.

Check the readings obtained at various speeds with the specifications in Table 5.

**Air Inlet Restriction**

Excessive restriction of the air inlet will affect the flow of air to the cylinders and result in poor combustion and lack of power. Consequently, the restriction must be kept to a minimum considering the size and capacity of the air cleaner. An obstruction in the air inlet system or dirty or damaged air cleaners will result in a high blower inlet restriction.

The air inlet restriction may be checked with a manometer connected to a fitting in the air intake ducting located 2" above the air inlet housing. When practicability prevents the insertion of a fitting at this point, the manometer may be connected to the engine air inlet housing. The restriction at this point should be checked at a specific engine speed. Then the air cleaner and ducting should be removed from the air inlet housing and the engine again operated at the same speed while noting the manometer reading.

The difference between the two readings, with and without the air cleaner and ducting, is the actual restriction caused by the air cleaner and ducting.

Check the normal air intake vacuum at various speeds (at no-load) and compare the results with Table 6.

## PROPER USE OF MANOMETER

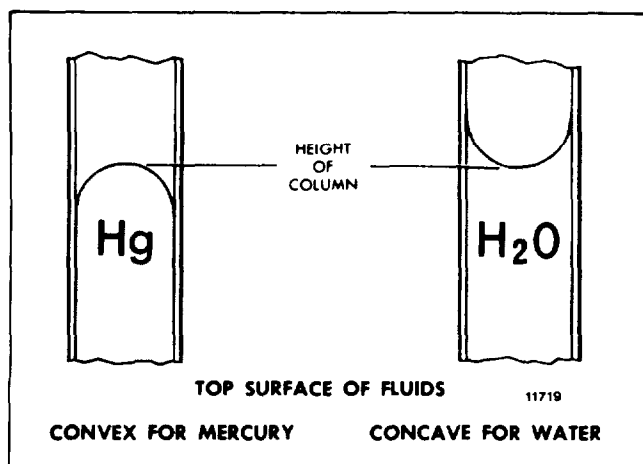


Fig. 2 - Comparison of Column Height for Mercury and Water Manometers

The U-tube manometer is a primary measuring device indicating pressure or vacuum by the difference in the height of two columns of fluid.

Connect the manometer to the source of pressure, vacuum or differential pressure. When the pressure is imposed, add the number of inches one column of fluid travels up to the amount the other column travels down to obtain the pressure (or vacuum) reading.

## ENGINE ELECTRICAL GENERATING SYSTEM

Whenever trouble is indicated in the engine electrical generating system, the following quick checks can be made to assist in localizing the cause.

A fully charged battery and low charging rate indicates normal alternator-regulator operation.

A low battery and high charging rate indicates normal alternator-regulator operation,

A fully charged battery and high charging rate

PRESSURE CONVERSION CHART		
1" water	=	.0735" mercury
1" water	=	.0361 psi
1" mercury	=	.4919 psi
1" mercury	=	13.6000" water
1 psi	=	27.7000" water
1 psi	=	2.0360" mercury

TABLE 7

The height of a column of mercury is read differently than that of a column of water. Mercury does not wet the inside surface; therefore, the top of the column has a *convex* meniscus (shape). Water wets the surface and therefore has a *concave* meniscus. A mercury column is read by sighting horizontally between the top of the convex mercury surface (Fig. 2) and the scale. A water manometer is read by sighting horizontally between the bottom of the concave water surface and the scale.

Should one column of fluid travel further than the other column, due to minor variations in the inside diameter of the tube or to the pressure imposed, the accuracy of the reading obtained is not impaired.

Refer to Table 7 to convert manometer readings into other units of measurement.

condition usually indicates the voltage regulator is set too high or is not limiting the alternator output. A high charging rate to a fully charged battery will damage the battery and other electrical components.

A low battery and low or no charging rate condition could be caused by: Loose connections or damaged wiring, defective battery or alternator, or defective regulator or improper regulator setting.

Contact an authorized *Detroit Diesel Allison Service Outlet* if more information is needed.



## **STORAGE**

### **PREPARING ENGINE FOR STORAGE**

When an engine is to be stored or removed from operation for a period of time, special precautions should be taken to protect the interior and exterior of the engine, transmission and other parts from rust accumulation and corrosion. The parts requiring attention and the recommended preparations are given below.

It will be necessary to remove all rust or corrosion

completely from any exposed part before applying a rust preventive compound. Therefore, it is recommended that the engine be processed for storage as soon as possible after removal from operation.

The engine should be stored in a building which is dry and can be heated during the winter months. Moisture absorbing chemicals are available commercially for use when excessive dampness prevails in the storage area.

### **TEMPORARY STORAGE (30 days or less)**

To protect an engine for a temporary period of time, proceed as follows:

1. Drain the engine crankcase.
2. Fill the crankcase to the proper level with the recommended viscosity and grade of oil.
3. Fill the fuel tank with the recommended grade of fuel oil. Operate the engine for two minutes at 1200 rpm and no load.

**NOTE:** Do not drain the fuel system or the crankcase after this run.

4. Check the air cleaner and service it, if necessary, as outlined under *Air System*.

5. If freezing weather is expected during the storage period, add a high boiling point type antifreeze solution in accordance with the manufacturer's recommendations. Drain the raw water system and leave the drain cocks open.

6. Clean the entire exterior of the engine (except the electrical system) with fuel oil and dry it with air.

7. Seal all of the engine openings. The material used for this purpose must be waterproof, vaporproof and possess sufficient physical strength to resist puncture and damage from the expansion of entrapped air.

An engine prepared in this manner can be returned to service in a short time by removing the seals at the engine openings, checking the engine coolant, fuel oil, lubricating oil, transmission, and priming the raw water pump, if used.

### **EXTENDED STORAGE (30 days or more)**

When an engine is to be removed from operation for an extended -period of time, prepare it as follows:

1. Drain and thoroughly flush the cooling system with clean, soft water.
2. Refill the cooling system with clean, soft water.
3. Add a rust inhibitor to the cooling system (refer to *Corrosion Inhibitor under Cooling System*).
4. Remove, check and recondition the injectors, if necessary, to make sure they will be ready to operate when the engine is restored to service.
5. Reinstall the injectors in the engine, time them, and adjust the valve clearance.

6. Circulate the coolant through the entire system by operating the engine until normal operating temperature is reached (160-185° For 71-85°C).

7. Stop the engine.

8. Remove the drain plug and completely drain the engine crankcase. Reinstall and tighten the drain plug. Install new lubricating oil filter elements and gaskets.

9. Fill, the crankcase to the proper level with a 30-weight preservative lubricating oil MIL-L-21260, Grade 2 (P10), or equivalent.

10. Drain the engine fuel tank.

11. Refill the fuel tank with enough rust preventive fuel oil such as American Oil Diesel Run-In Fuel (LF



4089) Mobil 4Y17, or equivalent, to enable the engine to operate 10 minutes.

12. Drain the fuel filter and strainer. Remove the retaining bolts, shells and elements. Discard the used elements and gaskets. Wash the shells in clean fuel oil and insert new elements. Fill the cavity between the element and shell about two-thirds full of the same rust preventive compound as used in the fuel tank and reinstall the shell.

13. Operate the engine for 10 minutes to circulate the rust preventive throughout the engine.

14. Refer to *Air System* and service the air cleaner.

#### 15. MARINE GEAR

- a. Drain the oil completely and refill with clean oil of the proper viscosity and grade as is recommended. Remove, clean or replace the strainer and replace the filter element.
- b. Start and run the engine at 600 rpm for 5 minutes so that clean oil can coat all of the internal parts of the marine gear. Engage the clutches alternately to circulate clean oil through all of the moving parts.

#### 16. TORQMATIC CONVERTER

- a. Start the engine and operate it until the temperature of the converter oil reaches 150° F (66°C).
- b. Remove the drain plug and drain the converter.
- c. Remove the filter element.
- d. Start the engine and stall the converter for twenty seconds at 1000 rpm to scavenge the oil from the converter. *Due to lack of lubrication, do not exceed the 20 second limit.*
- e. Install the drain plug and a new filter element.
- f. Fill the converter to the proper operating level with a commercial preservative oil which meets Government specifications MIL-L-21260, Grade 1. Oil of this type is available from the major oil companies.
- g. Start the engine and operate the converter for at least 10 minutes at a minimum of 1000 rpm, Engage the clutch; then stall the converter to raise the oil temperature to 225°F (107°C).

**CAUTION:** Do not allow the oil temperature to exceed 225°F (107°C). If the unit does not

have a temperature gage, *do not stall the converter for more than thirty seconds.*

- h. Stop the engine and permit the converter to cool to a temperature suitable to touch.
- i. Seal all of the exposed openings and the breather with moisture proof tape.
- j. Coat all exposed, unpainted surfaces with preservative grease. Position all of the controls for minimum exposure and coat them with grease. The external shafts, flanges and seals should also be coated with grease.

#### 17. POWER TARE-OFF

- a. With an all purpose grease such as Shell Alvania No. 2, or equivalent, lubricate the clutch throwout bearing, clutch pilot bearing, drive shaft main bearing, clutch release shaft, and the outboard bearings (if so equipped).
- b. Remove the inspection hole cover on the clutch housing and lubricate the clutch release lever and link pins with a hand oiler. Avoid getting oil on the clutch facing.
- c. If the unit is equipped with a reduction gear, drain and flush the gear box with light engine oil. If the unit is equipped with a filter, clean the shell and replace the filter element. Refill the gear box to the proper level with the oil grade indicated on the name plate.

#### 18. TURBOCHARGER

The turbocharger bearings are lubricated by pressure through the external oil line leading from the engine cylinder block while performing the previous operations above and no further attention is required. However, the turbocharger air inlet and turbine outlet connections should be sealed off with moisture-resistant tape.

#### 19. HYDROSTARTER SYSTEM

Refer to *Hydraulic Starting System* in the section on *Engine Equipment* for the lubrication and preventive maintenance procedure.

20. Apply a *non-friction* rust preventive compound, to all exposed parts. If it is convenient, apply the rust preventive compound to the engine flywheel. If not, disengage the clutch mechanism to prevent the clutch disc from sticking to the flywheel.

**CAUTION:** Do not apply oil, grease or any wax base compound to the flywheel. The cast iron will absorb these substances which can "sweat"

out during operation and cause the clutch to slip.

21. Drain the engine cooling system.

22. The oil may be drained from the engine crankcase if so desired. If the oil is drained, reinstall and tighten the drain plug.

23. Remove and clean the battery and battery cables with a baking soda solution and rinse them with fresh water. Do not allow the soda solution to enter the battery. Add distilled water to the electrolyte, if necessary, and fully charge the battery. Store the battery in a cool (never below 32°F.) dry place. Keep the battery fully charged and check the level and the specific gravity of the electrolyte regularly.

24. Insert heavy paper strips between the pulleys and belts to prevent sticking.

25. Seal all of the openings in the engine, including the exhaust outlet, with moisture resistant tape. Use cardboard, plywood or metal covers where practical.

26. Clean and dry the exterior painted surfaces of the engine. Spray the surfaces with a suitable liquid automobile body wax, a synthetic resin varnish or a rust preventive compound.

27. Cover the engine with a good weather-resistant tarpaulin or other cover if it must be stored outdoors. A clear plastic cover is recommended for indoor storage.

The stored engine should be inspected periodically. If there are any indications of rust or corrosion, corrective steps must be taken to prevent damage to the engine parts. Perform a complete inspection at the end of one year and apply additional treatment as required.

### PROCEDURE FOR RESTORING AN ENGINE TO SERVICE WHICH HAS BEEN IN EXTENDED STORAGE

1. Remove the covers and tape from all of the openings of the engine, fuel tank, and electrical equipment. *Do not overlook the exhaust outlet.*

2. -Wash the exterior of the engine with fuel oil to remove the rust preventive.

3. Remove the rust preventive from the flywheel.

4. Remove the paper strips from between the pulleys and the belts.

5. Remove the drain plug -and drain the preservative oil from the crankcase. Re-install the drain plug. Then refer to *Lubrication System* in the *Operating Instructions* and fill the crankcase to the proper level with the recommended grade of lubricating oil.

6. Fill the fuel tank with the fuel specified under *Diesel Fuel Oil Specifications*.

7. Close all of the drain cocks and fill the engine cooling system with clean soft water and a rust inhibitor. If the engine is to be exposed to freezing temperatures, add a high boiling point type antifreeze solution to the cooling system (the antifreeze contains a rust inhibitor).

8. Install and connect the battery.

9. Service the air cleaner as outlined under *Air System*.

#### 10. POWER GENERATOR

Prepare the generator for starting as outlined under *Operating Instructions*.

#### 11. MARINE GEAR

Check the Marine gear; refill it to the proper level, as necessary, with the correct grade of lubricating oil.

#### 12. TORQMATIC CONVERTER

a. Remove the tape from the breather and all of the openings.

b. Remove all of the preservative grease with a suitable solvent.

c. Start the engine and operate the unit until the temperature reaches 150°F (66°C). Drain the preservative oil and remove the filter. Start the engine and stall the converter for twenty seconds at 1000 rpm to scavenge the oil from the converter.

**CAUTION:** A Torqmatic converter containing preservative oil should only be operated enough to bring the oil temperature up to 150° F (66°C).

d. Install the drain plug and a new filter element.

- e. Refill the converter with the oil that is recommended under *Lubrication and Preventive Maintenance*.

### 13. POWER TAKE-OFF

Remove the inspection hole cover and inspect the clutch release lever and link pins and the bearing ends of the clutch release shaft. Apply engine oil sparingly, if necessary, to these areas.

### 14. HYDROSTARTER

- a. Open the relief valve on the side of the hand pump and release the pressure in the system.
- b. Refer to the filling and purging procedures

outlined in *Hydraulic Starting System*. Then, drain, refill and purge the Hydrostarter system.

### 15. TURBOCHARGER

Remove the covers from the turbocharger air inlet and turbine outlet connections. Refer to the lubricating procedure outlined in *Preparation for Starting Engine First Time*.


16. After all of the preparations have been completed, start the engine. The small amount of rust preventive compound which remains in the fuel system will cause a smoky exhaust for a few minutes.

**NOTE:** Before subjecting the engine to a load or high speed, it is advisable to check the engine tune-up.

***BUILT-IN***  
**PARTS BOOK**  
for  
**DETROIT DIESEL**  
**ENGINES**


YEAR	MAKE	MODEL	ENGINE TYPE	DISPLACEMENT	POWER	SERIAL NUMBER

SERIAL NO. \_\_\_\_\_ MODEL \_\_\_\_\_  
DETROIT DIESEL ALLISON DIV. G.M.C. U.S.A.  
MAX RPM \_\_\_\_\_ SLIP \_\_\_\_\_

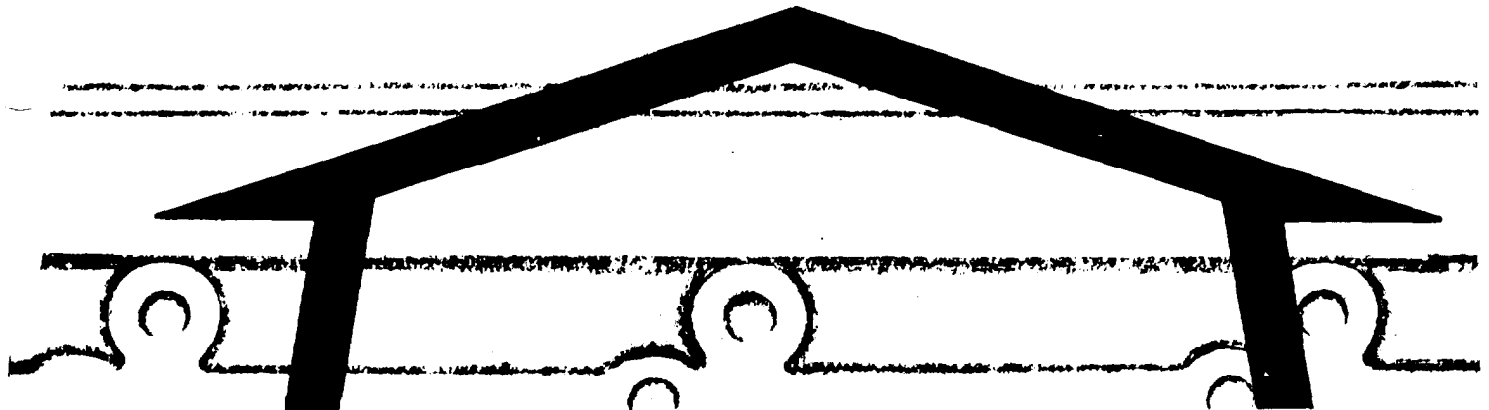


Progress in industry comes at a rapid pace. In order for the engine manufacturer to keep pace with progress he needs a versatile product for the many models and arrangements of accessories and mounting parts needed to suit a variety of equipment. In addition, engine refinements and improvements are constantly being introduced. All of this dynamic action must be documented so that the equipment can be serviced if and when it's needed. It is fully documented in the manufacturer's plant and in dealer Parts Departments with Master Files and adequate supporting records. But, what about YOU the user of this equipment? You have neither the time nor the inclination to ferret out specific part number data. What is the answer? - It is Detroit Diesel's exclusive BUILT-IN PARTS BOOK which is furnished with each engine. It takes the form of an "Option Plate" mounted on the rocker cover of the engine. With it, ordering parts becomes as simple as A, B, C. You have merely to provide the Dealer with . . .

- A. The "Model" number
- B. The "UNIT" number
- C. The "TYPE" number

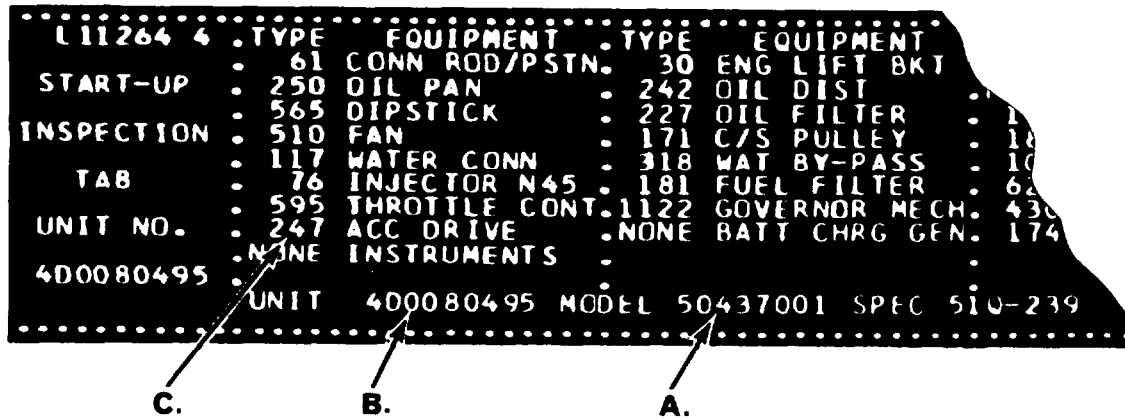


From that much information, the dealer with his complete records on all engine models, can completely interpret your parts requirements.

What is this "built-in" book? It is an anodized aluminum plate that fits into a holding channel on the engine rocker cover.

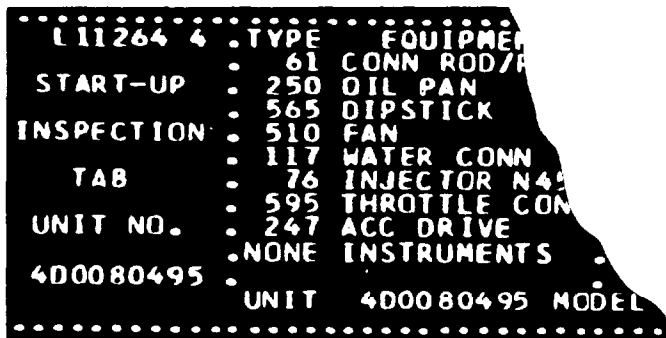

ON THE LEFT SIDE of the plate is the Start-up Inspection Tab which is removed by the dealer when he has completed the inspection.

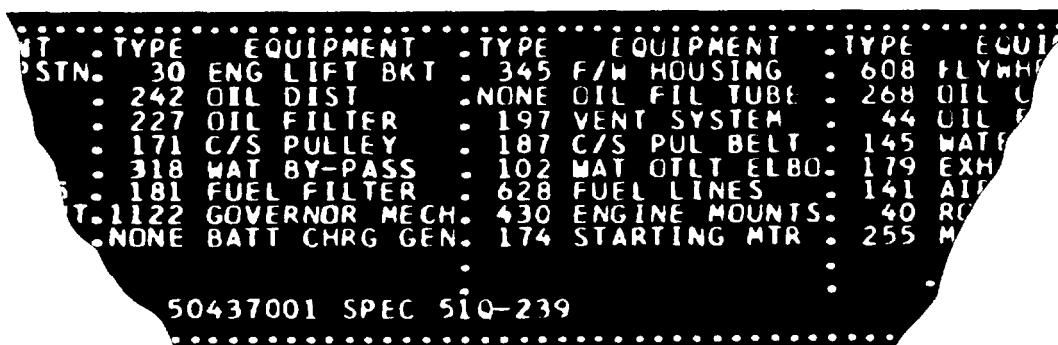

NEXT is the type number and the equipment description. On the left is the type number. The type number designates all service parts applicable to the equipment. On the right is a brief description of the equipment.



ON THE RIGHT SIDE of the plate is pertinent data on the model number, serial number and the related governor setting.

All engine components are divided into groups of functionally related parts. A complete listing of the twelve major groups and their many sub-groups is shown below.

### GROUP NOMENCLATURE

- 1.0000 ENGINE (less major assemblies)
  - 1.1000 Cylinder Block
  - 1.1000A Air Box Drains
  - 1.2000 Cylinder Head
  - 1.2000A Engine Lifter Bracket
  - 1.3000 Crankshaft
  - 1.3000A Crankshaft Front Cover
  - 1.3000B Vibration Damper
  - 1.3000c Crankshaft Pulley
  - 1.3000D Crankshaft Pulley Belt
  - 1.4000A Flywheel
  - 1.5000A Flywheel Housing
  - 1.5000B Flywheel Housing Adaptor
  - 1.6000 Connecting Rod and Piston
  - 1.7000 Camshaft and Gear Train
  - 1.7000A Balance Weight Cover
  - 1.7000B Accessory Drive
  - 1.8000 Valve and Injector Operating Mechanism
  - 1.8000A Rocker Cover
  
- 2.0000 FUEL SYSTEM
  - 2.1000A Fuel Injector
  - 2.2000 Fuel Pump
  - 2.2000A Fuel Pump Drain
  - 2.3000A Fuel Filter
  - 2.4000 Fuel Manifold and/or Connections
  - 2.5000A Fuel Lines
  - 2.6000A Fuel Tank
  - 2.7000A Mechanical Governor
  - 2.8000A Hydraulic Governor
  - 2.9000 Injector Controls
  - 2.9000A Throttle Controls
  
- 3.0000 AIR SYSTEM
  - 3.1000A Air Cleaner and/or Adaptor
  - 3.2000A Air Silencer
  - 3.3000A Air Inlet Housing
  - 3.4000 Blower
  - 3.4000A Blower Drive Shaft
  - 3.5000A Turbocharger
  
- 4.0000 LUBRICATING SYSTEM
  - 4.1000A Oil Pump
  - 4.1000B Oil Distribution System
  - 4.1000C Oil Pressure Regulator
  - 4.2000A Oil Filter
  - 4.3000A Oil Filter Lines
  - 4.4000A Oil Cooler
  - 4.5000A Oil Filler
  - 4.6000A Dipstick
  - 4.7000A Oil Pan
  - 4.6000A Ventilating System
  
- 5.0000 COOLING SYSTEM
  - 5.1000 Fresh Water Pump
  - 5.1000A Fresh Water Pump Cover
  - 5.2000A Water Outlet Manifold and/or Elbow
  - 5.2000B Thermostat
  - 5.2000C Water By-pass Tube
  - 5.3000A Radiator
  - 5.3000B Water Connections
  - 5.4000A Fan
  - 5.4000B Fan Shroud
  - 5.5000A Heat Exchanger or Keel Cooling
  - 5.6000A Raw Water Pump
  - 5.7000A Water Filter
  
- 6.0000 EXHAUST SYSTEM
  - 6.1000A Exhaust Manifold
  - 6.2000A Exhaust Muffler and/or Connections
  
- 7.0000 ELECTRICAL-INSTRUMENTS
  - 7.1000A Battery Charging Generator
  - 7.2000B Automatic Starting
  - 7.3000A Starting Motor
  - 7.4000A Instruments
  - 7.4000B Tachometer Drive
  - 7.4000C Shut-off or Alarm System
  - 7.5000A Power Generator
  - 7.6000A Control Cabinet
  - 7.7000A Wiring Harness
  - 7.8000A Air Heater
  
- 8.0000 POWER TAKE-OFF
  - 8.1000A Power Take-off and/or Clutch
  - 8.3000A Torque Converter
  - 8.3000B Torque Converter Lines
  
- 9.0000 TRANSMISSION AND PROPULSION
  - 9.1000A Hydraulic Marine Gear
  - 9.3000A Power Transfer Gear
  - 9.4000 Transmission-Highway
  - 9.7000 Transmission-Off-highway
  
- 10.0000 SHEET METAL
  - 10.1000A Engine Hood
  
- 11.0000 ENGINE MOUNTING
  - 11.1000A Engine Mounting and Base
  
- 12.0000 MISCELLANEOUS
  - 12.2000A Bilge Pump
  - 12.3000A Vacuum Pump
  - 12.4000A Air Compressor
  - 12.5000A Hydraulic Pump
  - 12.6000A Gasoline Starter
  - 12.6000B Air Starter
  - 12.6000C Cold Weather Starting Aid
  - 12.6000D Hydraulic Starter
  - 12.6000E Hydraulic Starter Accessories

Within each of these sub-groups, various designs of similar equipment are categorized as "Types" and identified by a Type Number.

The Distributor/Dealer has a Model Index for each engine model. The Model Index lists all of the "Standard" and "Standard Option" equipment for that model.

## DETROIT DIESEL 53

## 5063-5000 (RA)

## STANDARD AND STANDARD OPTION EQUIPMENT

GROUP NAME	GROUP NO.	TYPE
Cylinder Block	1.1000	31
Air Box Drains	1.1000A	62
Cylinder Head (4 valve)	1.2000	26
Engine Lifter Bracket	1.2000A	44
Crankshaft	1.3000	44
Crankshaft Front Cover	1.3000A	65
Crankshaft Pulley (2 grooves)	1.3000C	171
Crankshaft Pulley Belt	1.3000D	121
Flywheel (SAE #3)	1.4000A	313
Flywheel Housing (SAE #3)	1.5000A	350
Connecting Rod and Piston	1.6000	68
Camshaft and Gear Train	1.7000	127
Valve Operating Mechanism	1.8000	33
Rocker Cover (with oil filler in one cover)	1.8000A	64
Fuel Injector N50	2.1000A	74
Fuel Pump (3/8" inlet) (mounted on L. Bank camshaft)	2.2000	73
Fuel Filter	2.3000A	358
Fuel Manifold Connections	2.4000	48
Fuel Lines	2.5000A	786
Governor - Mechanical	2.7000A	514

NOTE The option plate reflects which choice of options has been built into the engine. The Distributor/Dealer uses his model index to interpret the standard equipment. The plate, therefore, lists only the non-standard or choice items.

So, give the dealer the

**A-Model No.** \_\_\_\_\_

**B-Unit No.** \_\_\_\_\_

**\*C-Type No.** \_\_\_\_\_

\*(If not shown, indicate "NONE". The dealer knows the "standard" for the model).



FOR READY REFERENCE, Record the information on the Option Plate to this record.

MODEL NO. \_\_\_\_\_

UNIT NO. \_\_\_\_\_

Equipment	TYPE	EQUIPMENT	TYPE	EQUIPMENT	TYPE
Engine Base _____		Water Bypass Tube _____		Battery Chrg. Generator _____	
Engine Lifter Brkt. _____		Thermostat _____		Starter _____	
Flywheel Housing _____		Water Filter _____		Hyd. Starter Acces. _____	
Vibration Damper _____		Exhaust Manifold _____		Starting Aid _____	
Flywheel _____		Air Cleaner or Silencer _____		Marine Gear _____	
Flywheel Hsg. Adptr. _____		Fuel Pump _____		Torque Converter _____	
Oil Pan _____		Injector _____		Torque Converter Lines _____	
Oil Pump _____		Blower _____		Muffler & Conn. _____	
Oil Distribution _____		Blower Drive Shaft _____		Engine Hood _____	
Dipstick _____		Fuel filter _____		Wiring Harness _____	
Oil Drain Tube _____		Fuel Lines _____		Instruments _____	
Oil Filler Tube or Cap _____		Air Inlet Housing _____		Tach. Drive _____	
Oil Cooler _____		Alarm or Shutoff _____		Radiator _____	
Oil Filter _____		Overspeed Governor _____		Heat Ex. or Keel Cooling _____	
Oil Lines _____		Throttle Controls _____		Raw Water Pump _____	
Ventilating System _____		Injector Controls _____		Power Generator _____	
Crankshaft Cover _____		Governor Mech or Hyd _____		Control Cabinet _____	
Balance Wgt. Cover _____		Engine Mounts _____		Cylinder Head _____	
Fan _____		Power Take-off _____		Conn Rod & Piston _____	
Crankshaft Pulley _____		Hydraulic Pump _____		Valve Mechanism _____	
Crankshaft Pulley Belt _____		Air Compressor _____		Fuel Manifold Conn _____	
Fan Shroud _____		Camshaft & Gear Train _____			
Water Connections _____		Rocker Cover _____			
Water Pump Cover _____		Accessory Drive _____			
Water Manifold _____					

**OTHER USEFUL INFORMATION:**

Each fuel and lube oil filter on your engine has a decal giving the service package part number for the element. It is advisable to have your own personal record of these part numbers by filling in the chart provided below:

TYPE	LOCATION	PACKAGE PART NO.
Fuel Strainer		
Fuel Filter		
Lube Oil Filter Full-Flo		
Lube Oil Filter By-Pass*		

\*Not Standard


**AIR CLEANER**

If dry-type, indicate make and number of filter element:


\_\_\_\_\_

\_\_\_\_\_



Wet type, indicate capacity \_\_\_\_\_ qts.

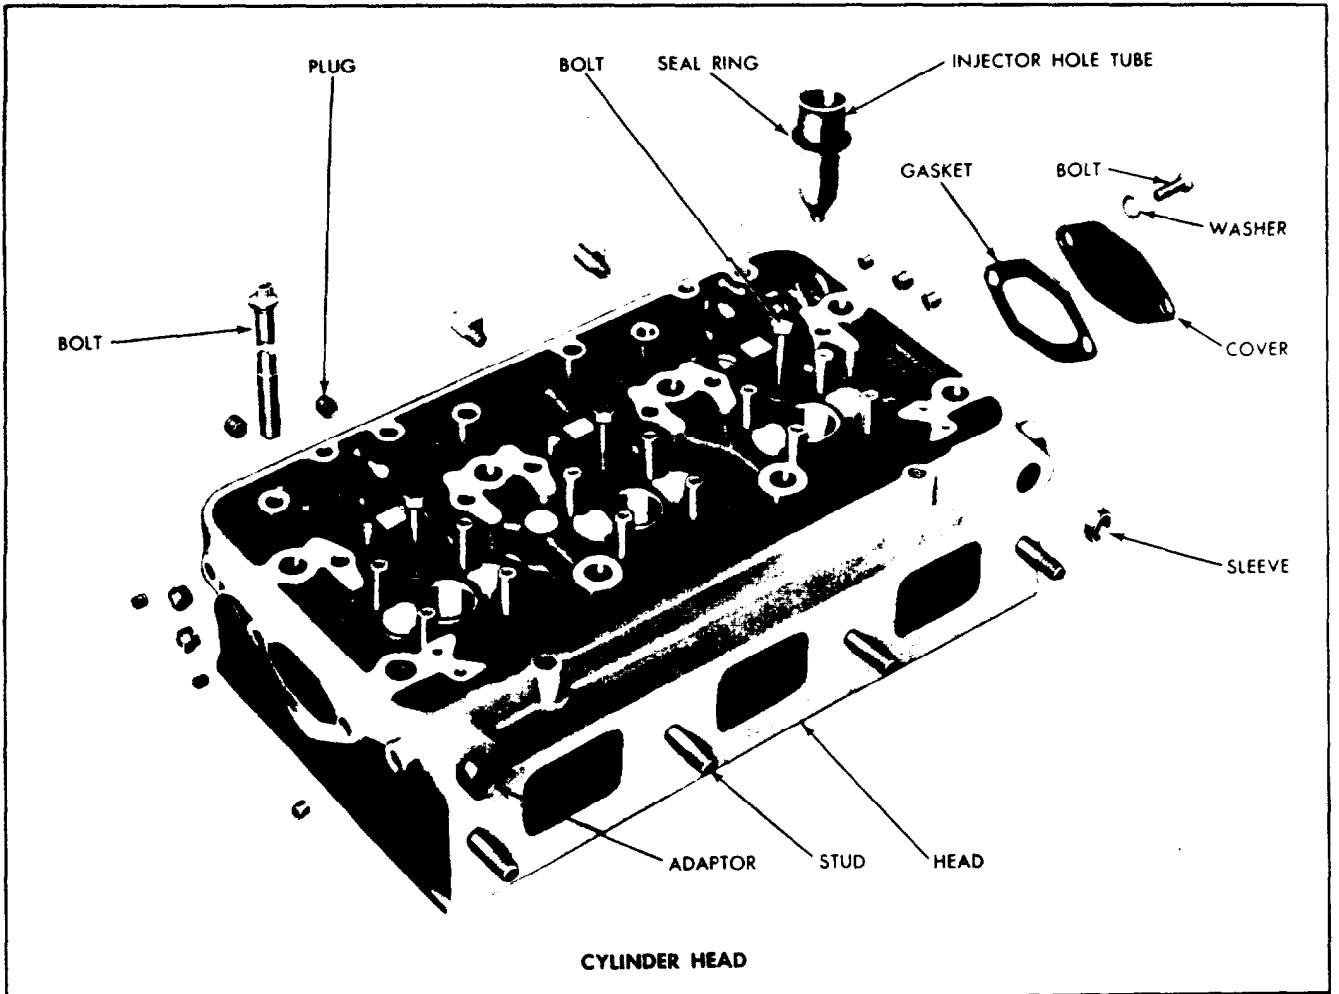


CYLINDER HEAD



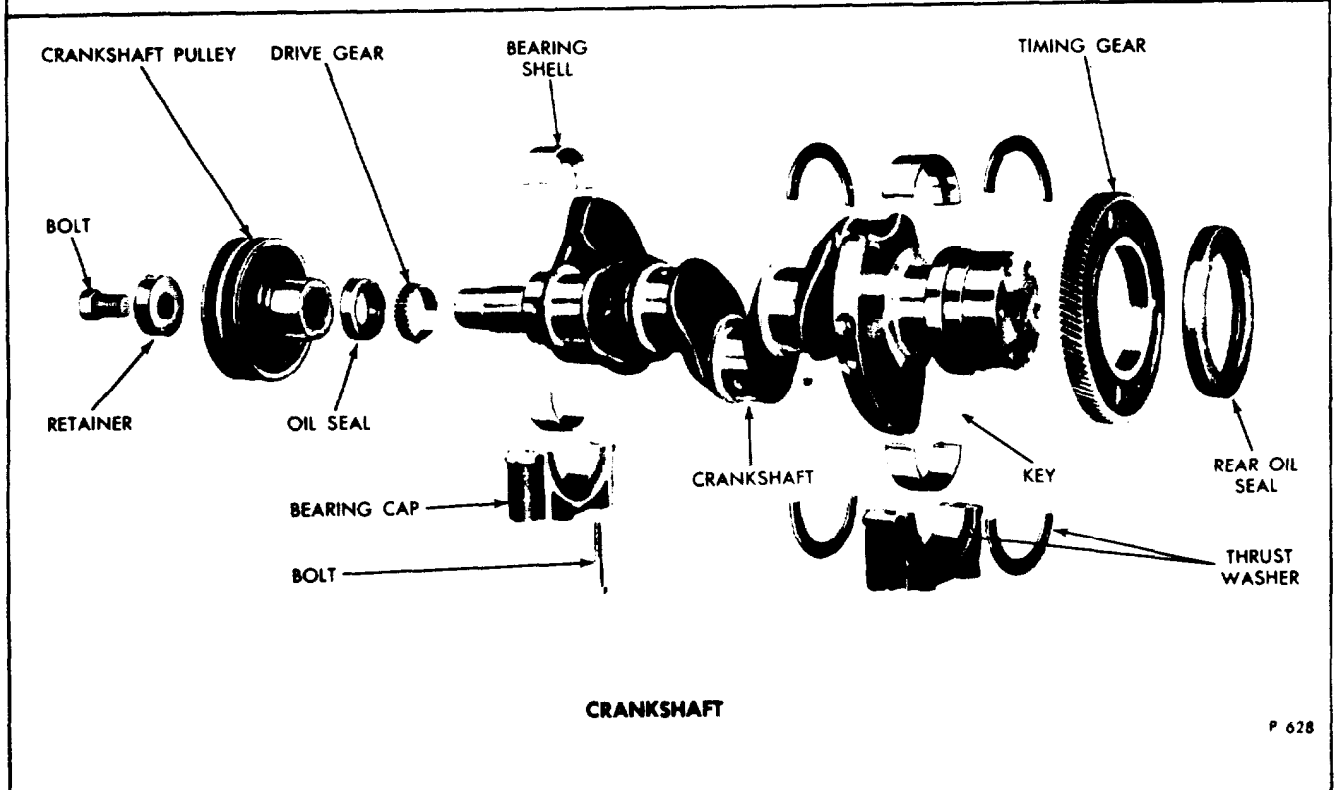



CRANKSHAFT

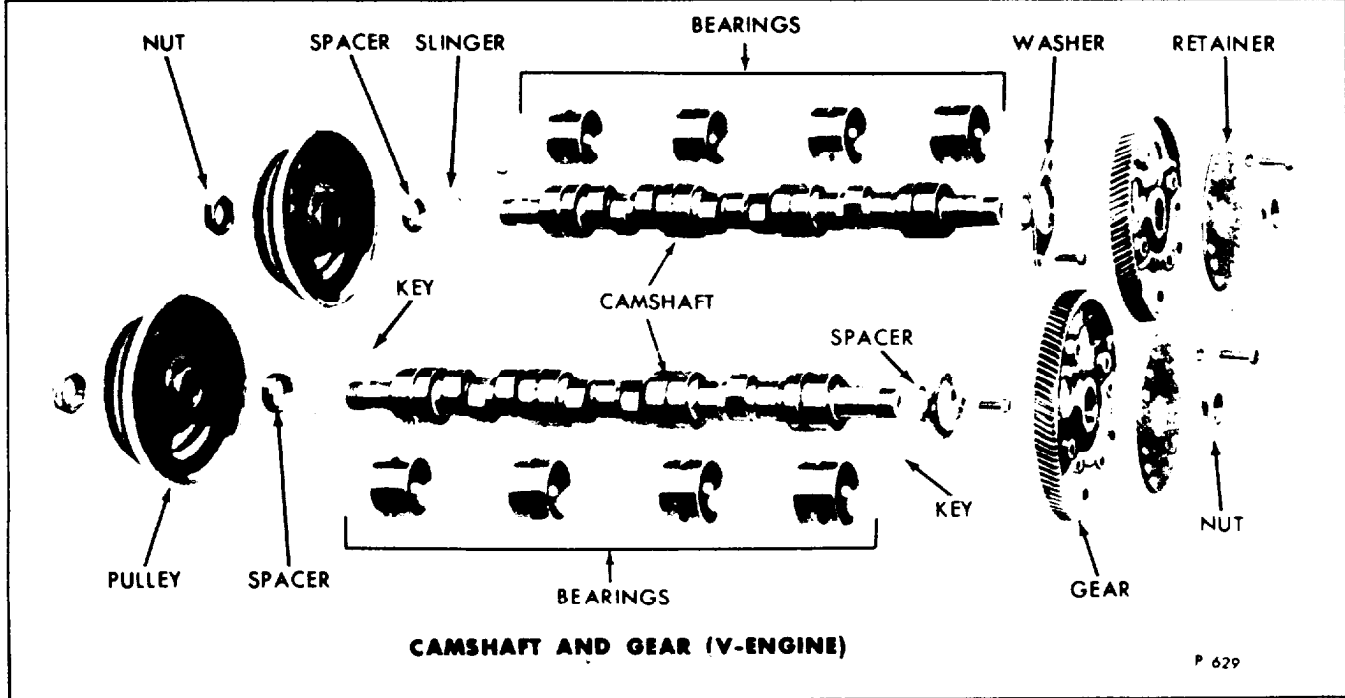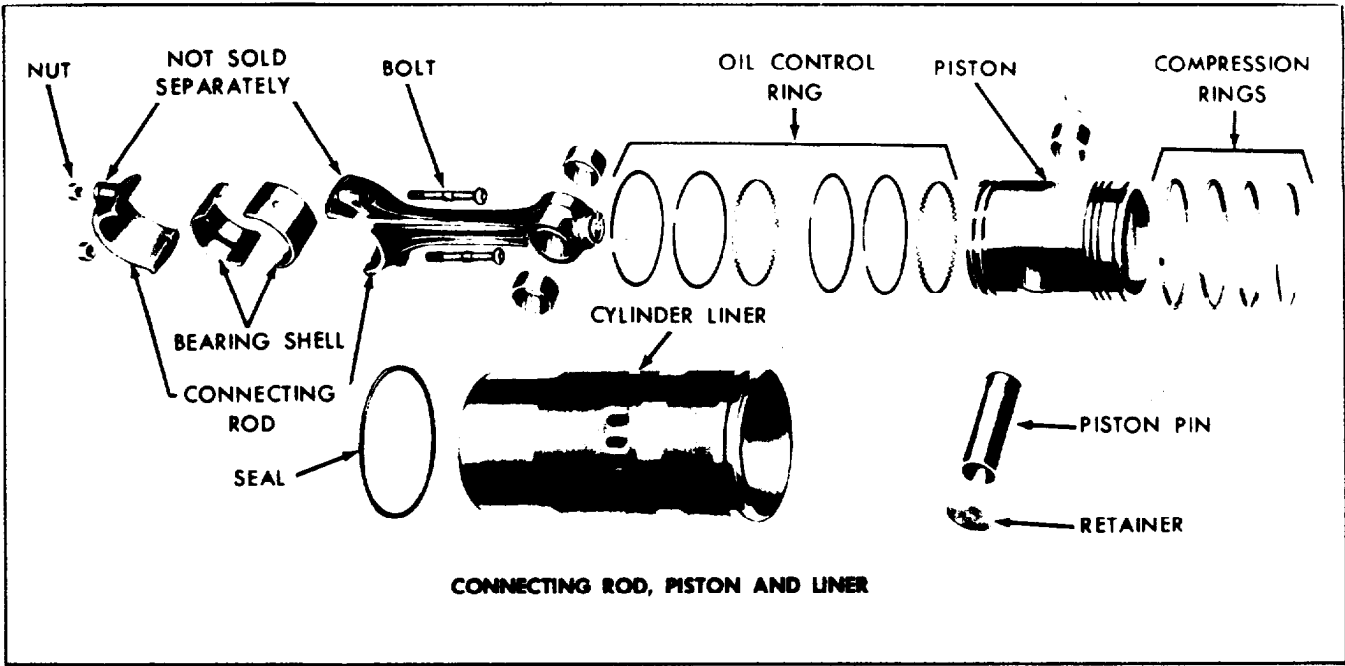


P 629

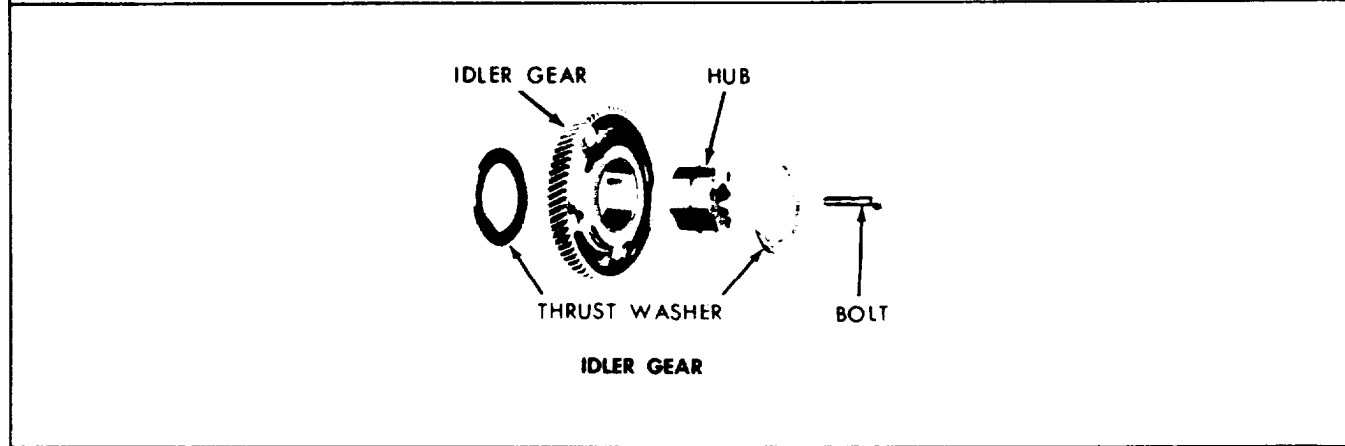


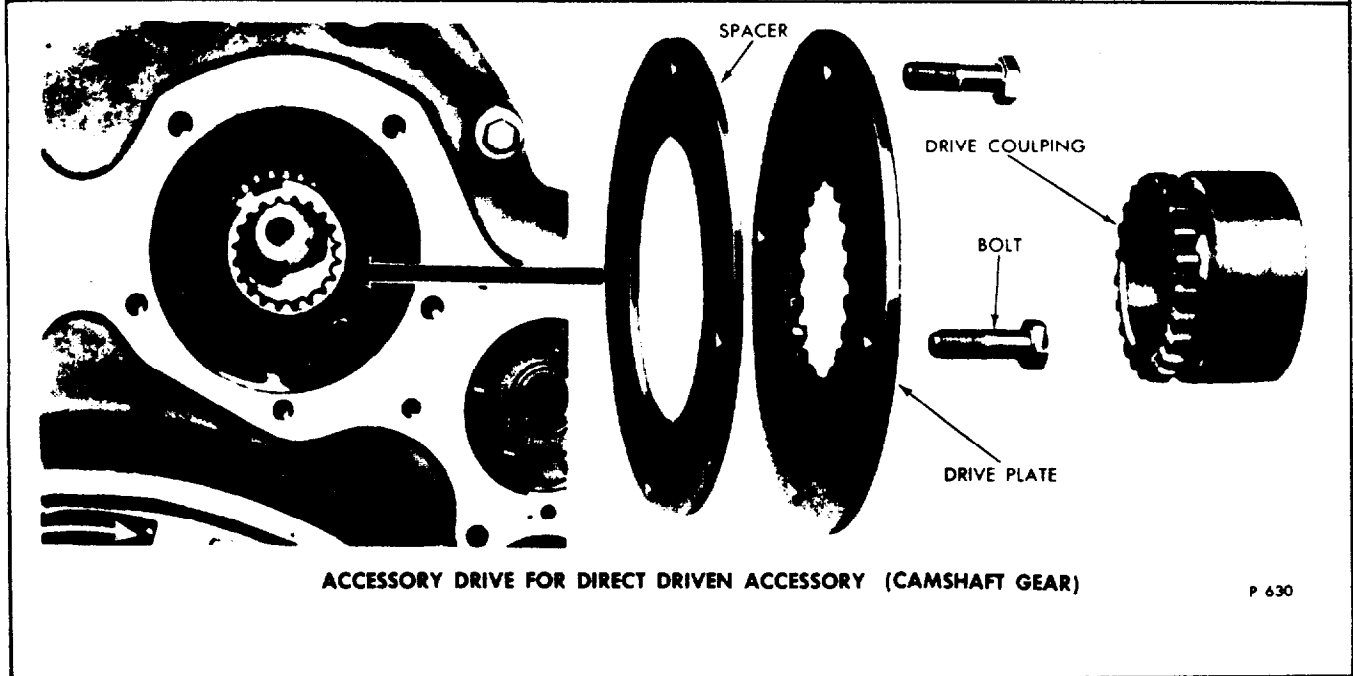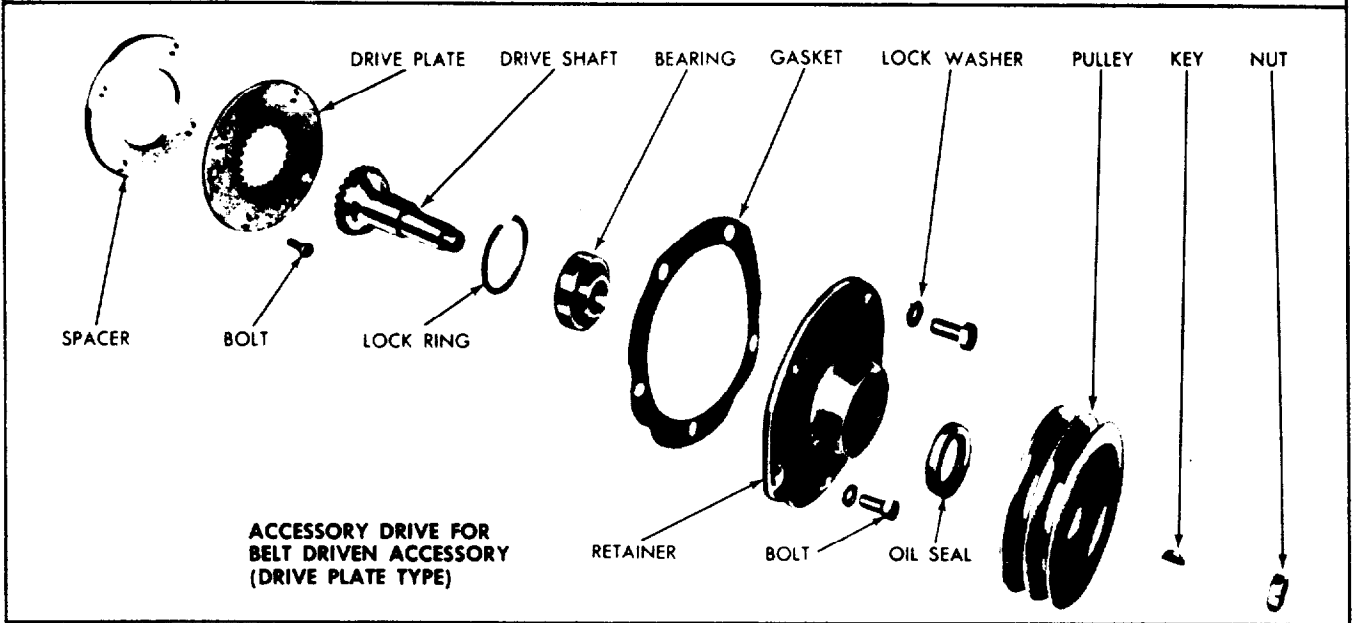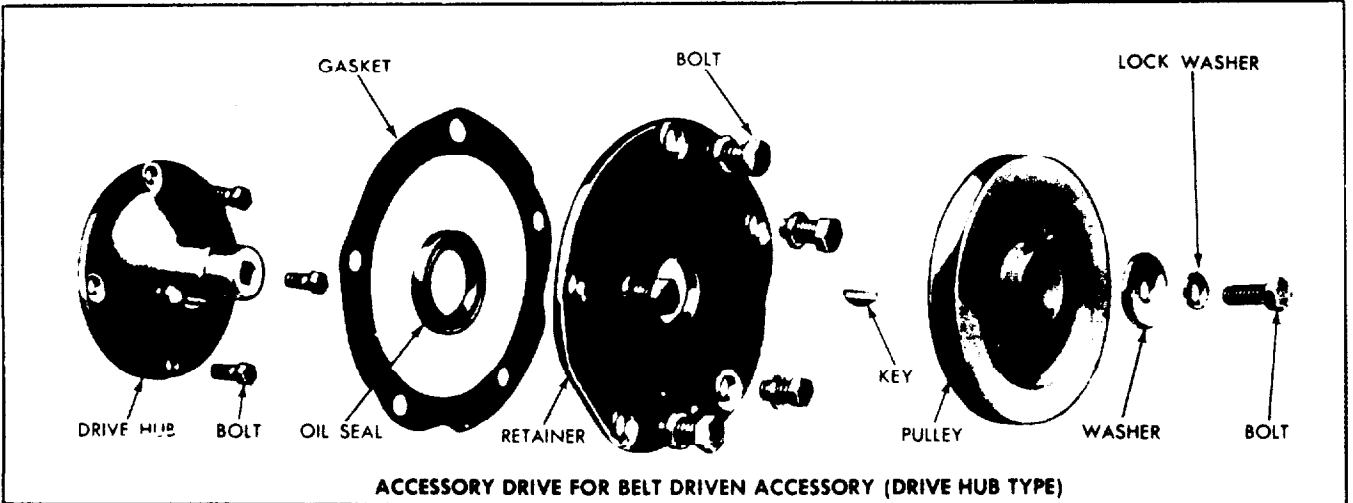


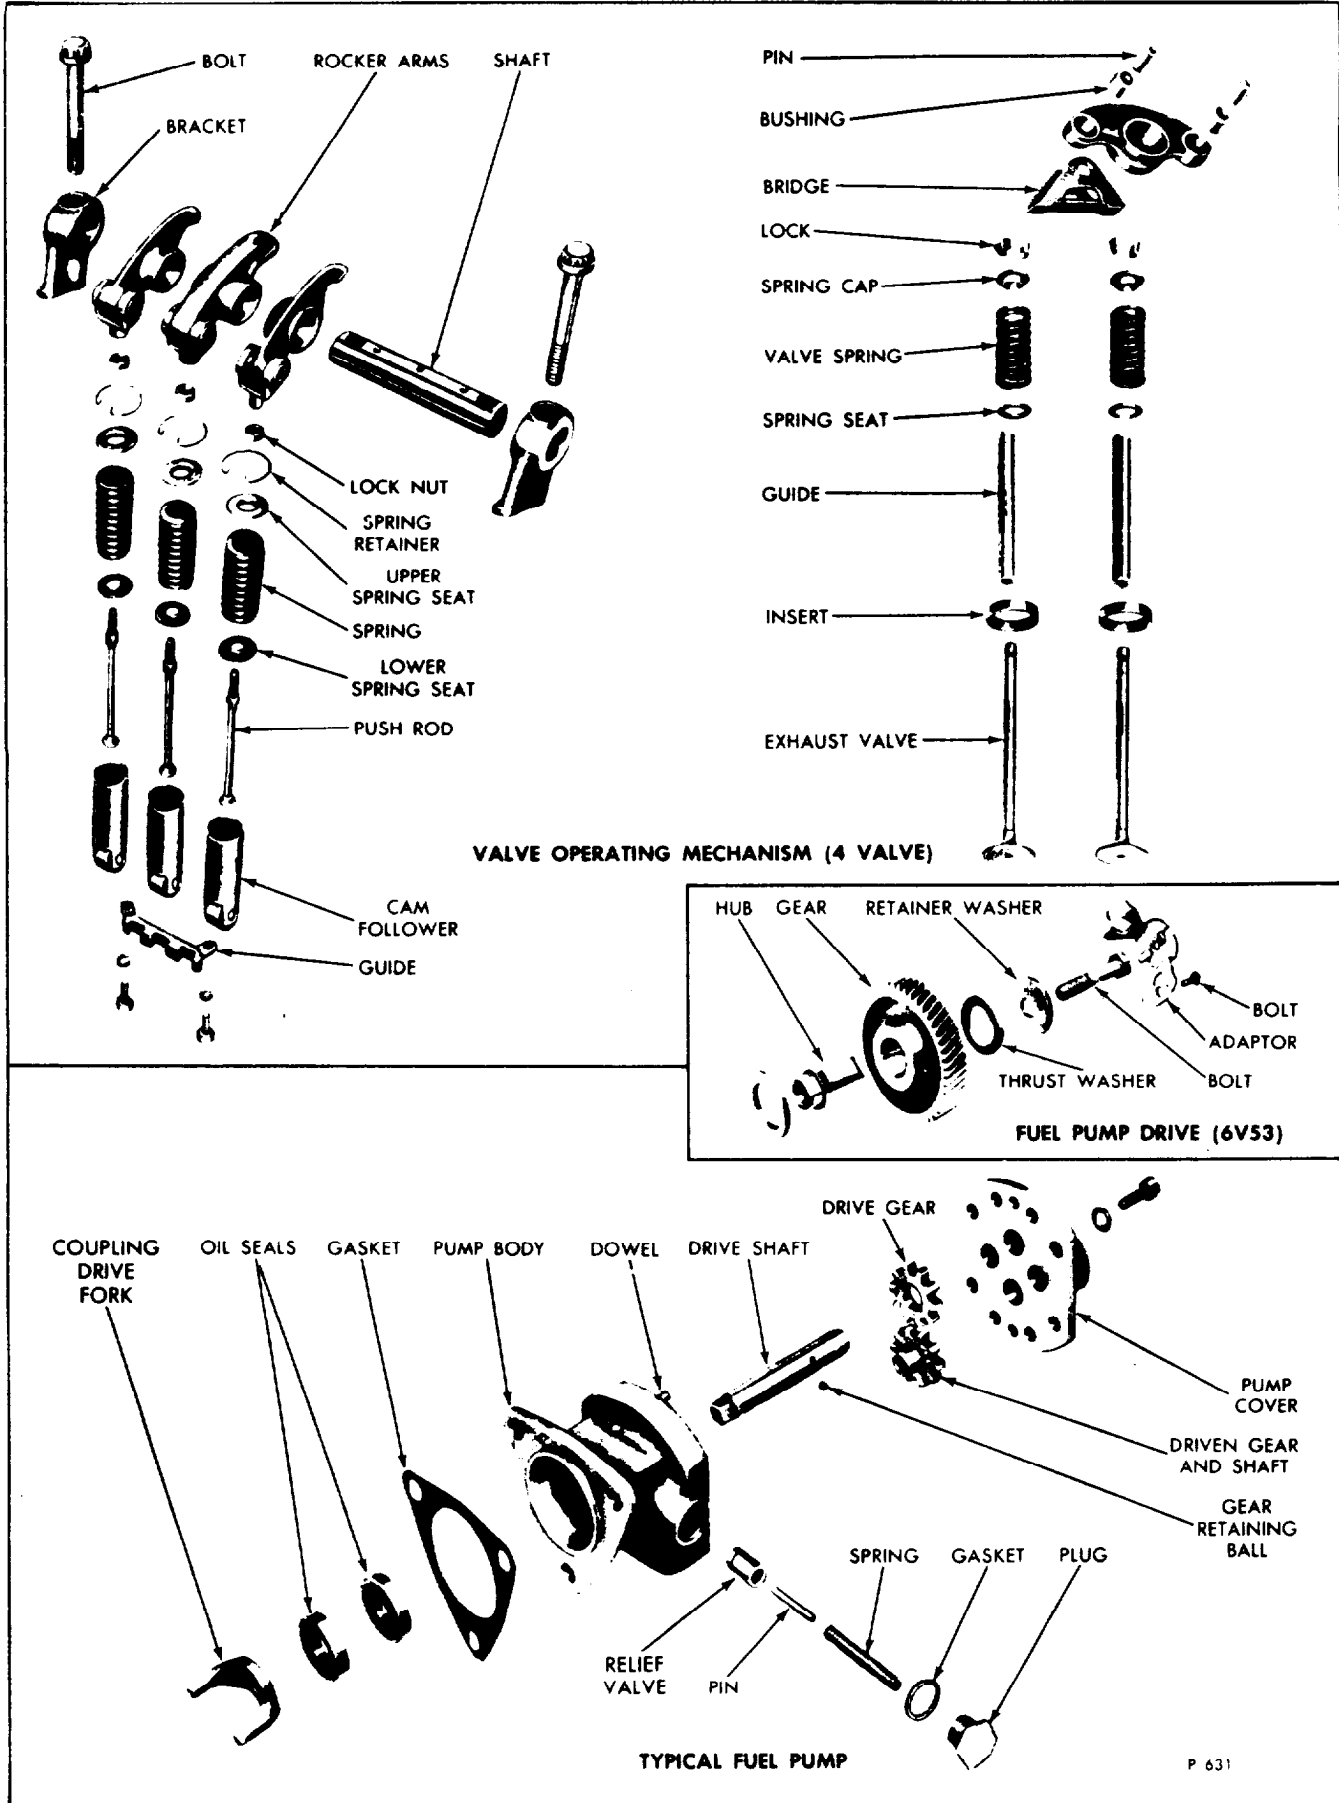


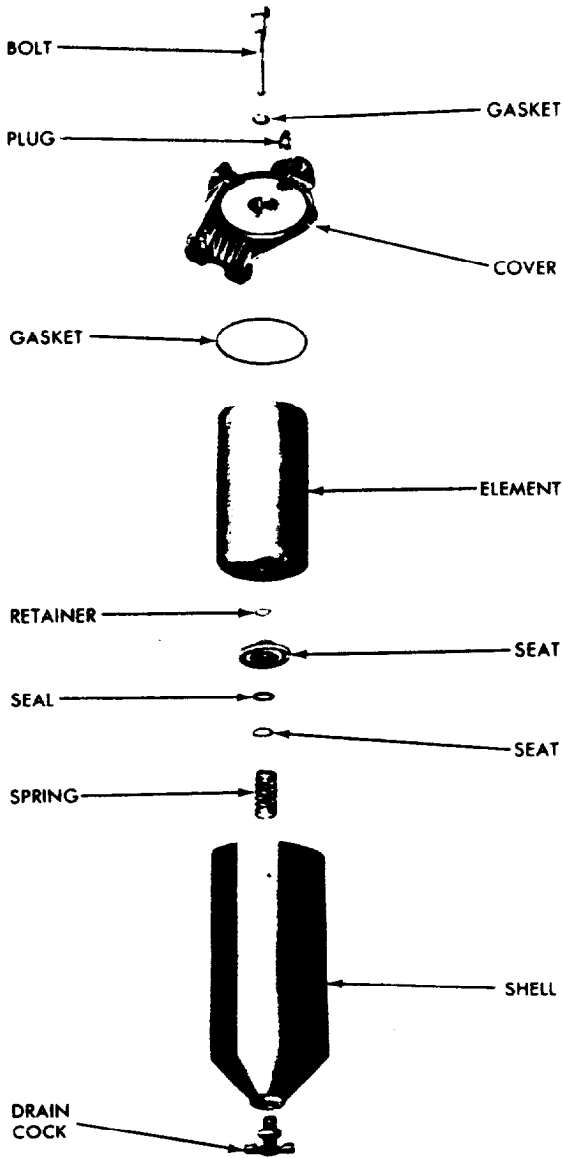

TYPICAL FUEL OIL STRAINER

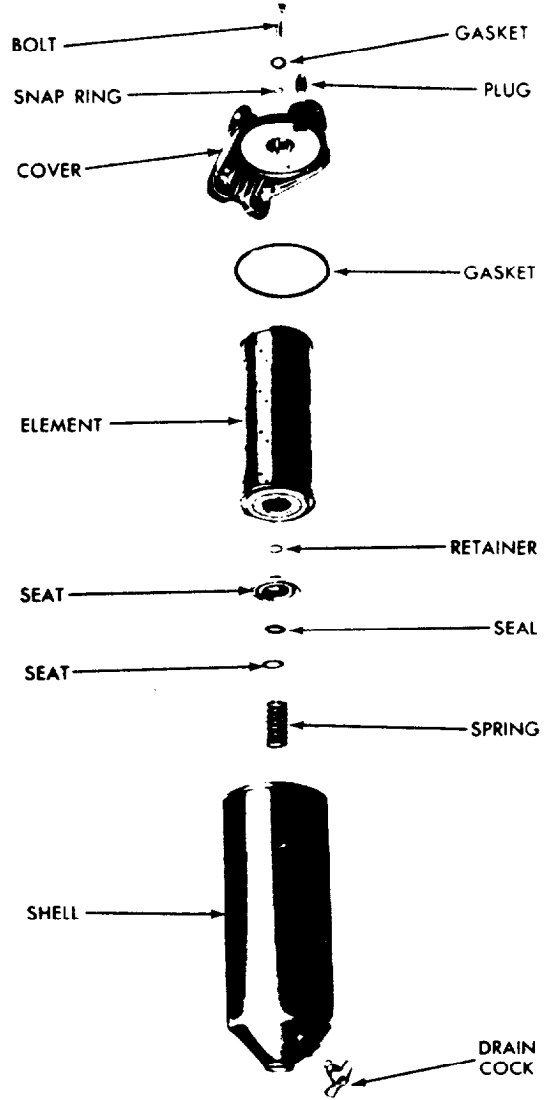



TYPICAL FUEL OIL FILTER

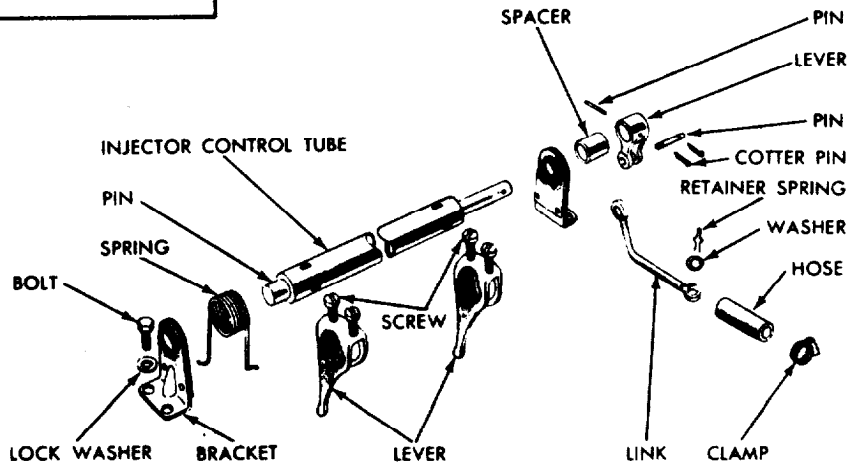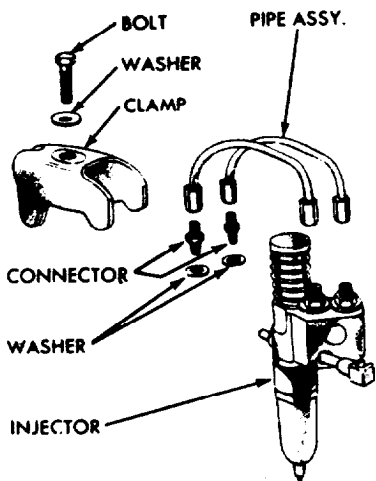

INJECTOR AND CONTROLS

P 632

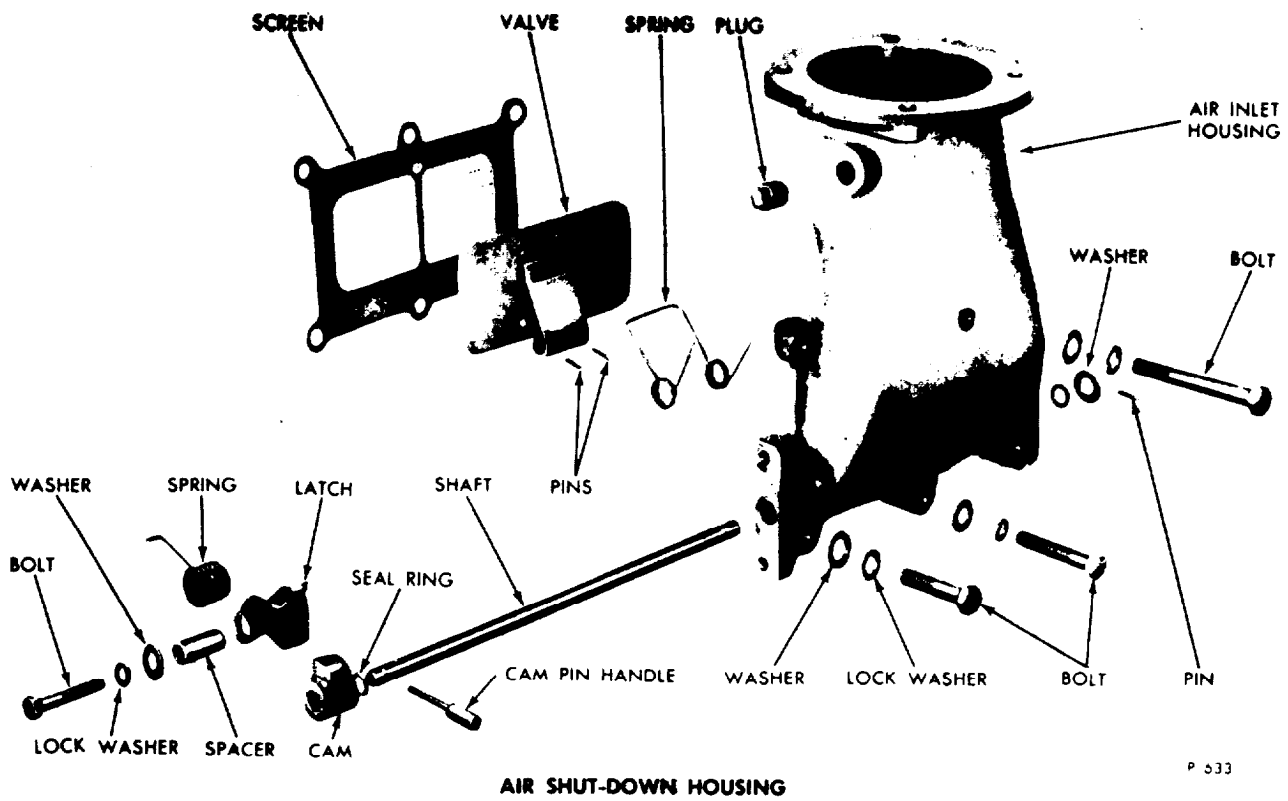


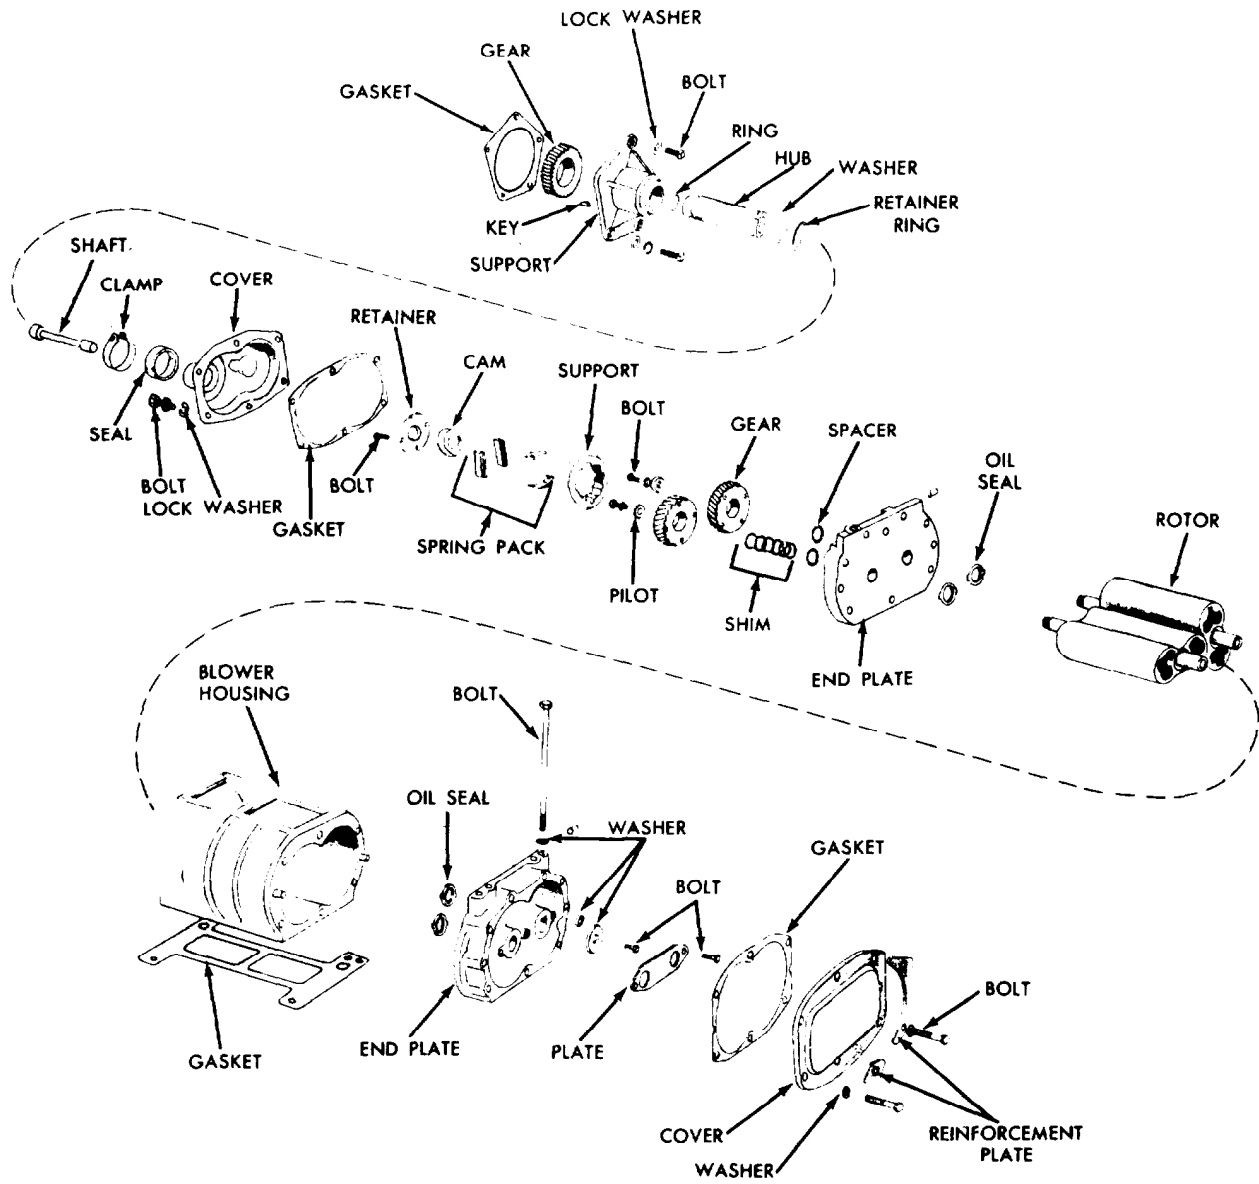

**BLOWER ASSEMBLY AND DRIVE  
(4 CYL.)**


P 634



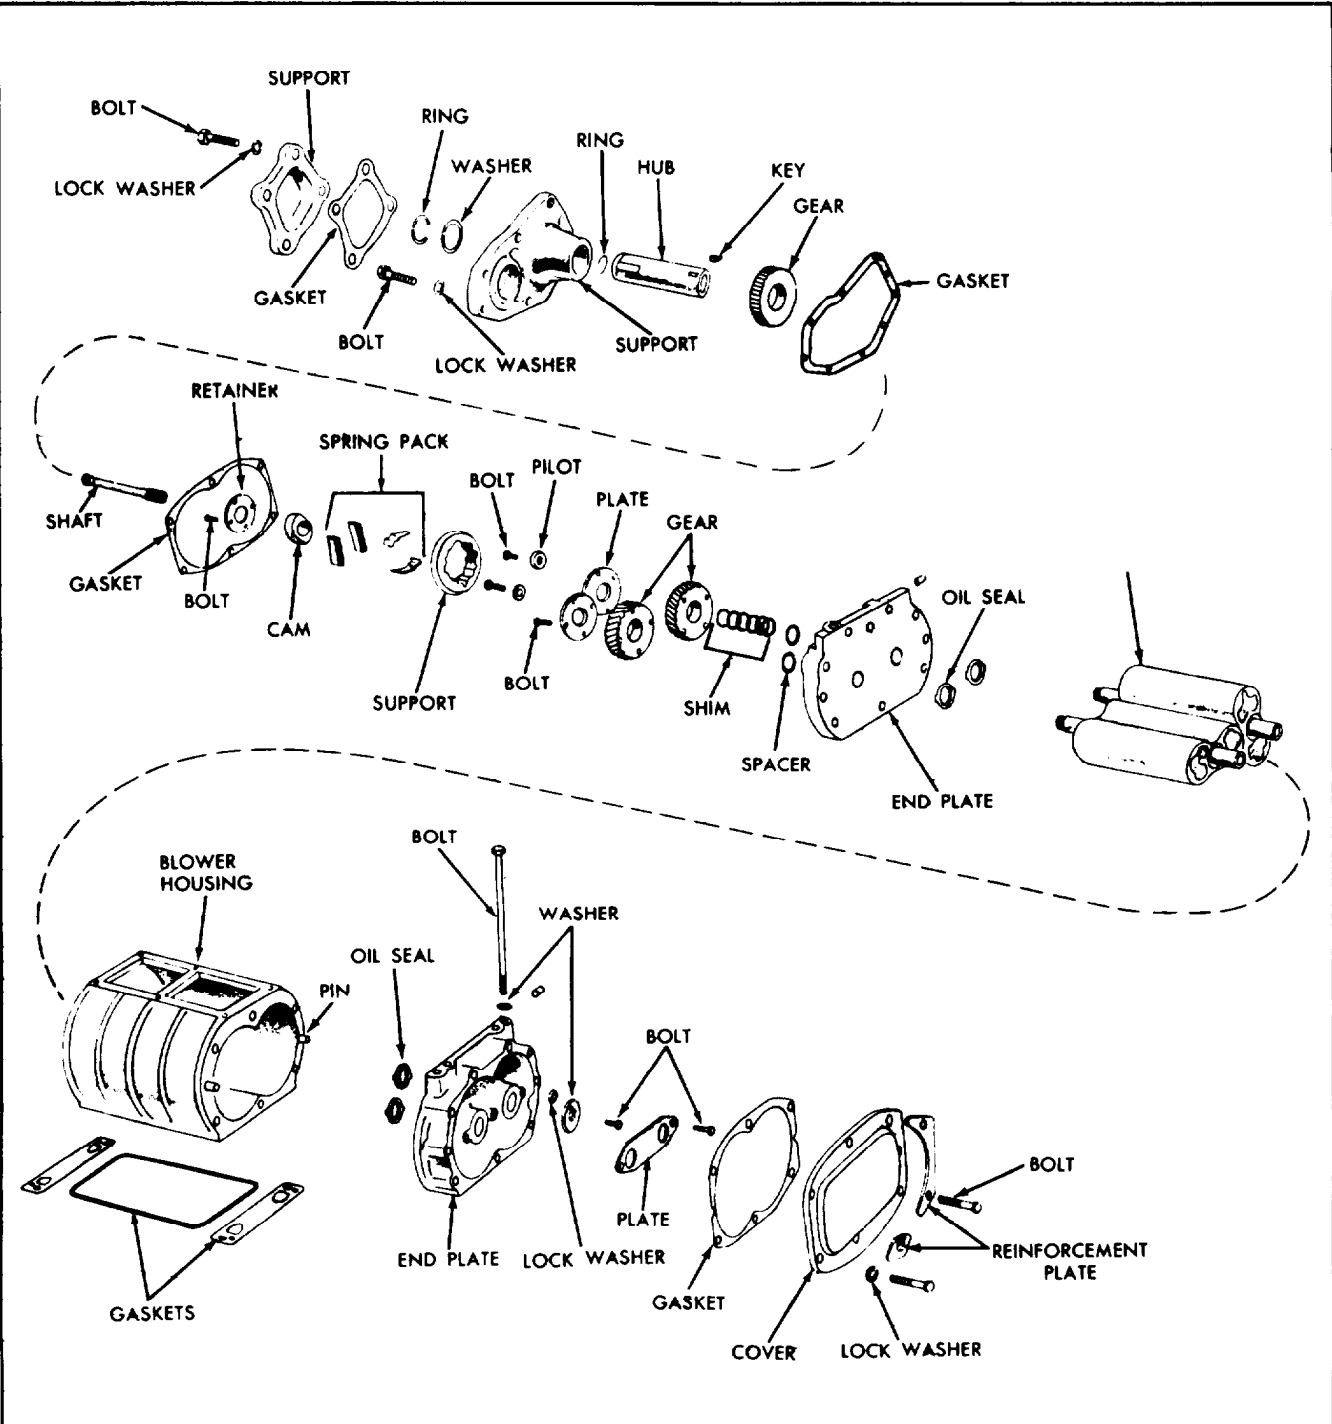



**BLOWER ASSEMBLY AND DRIVE (6 CYL.)**

P 635

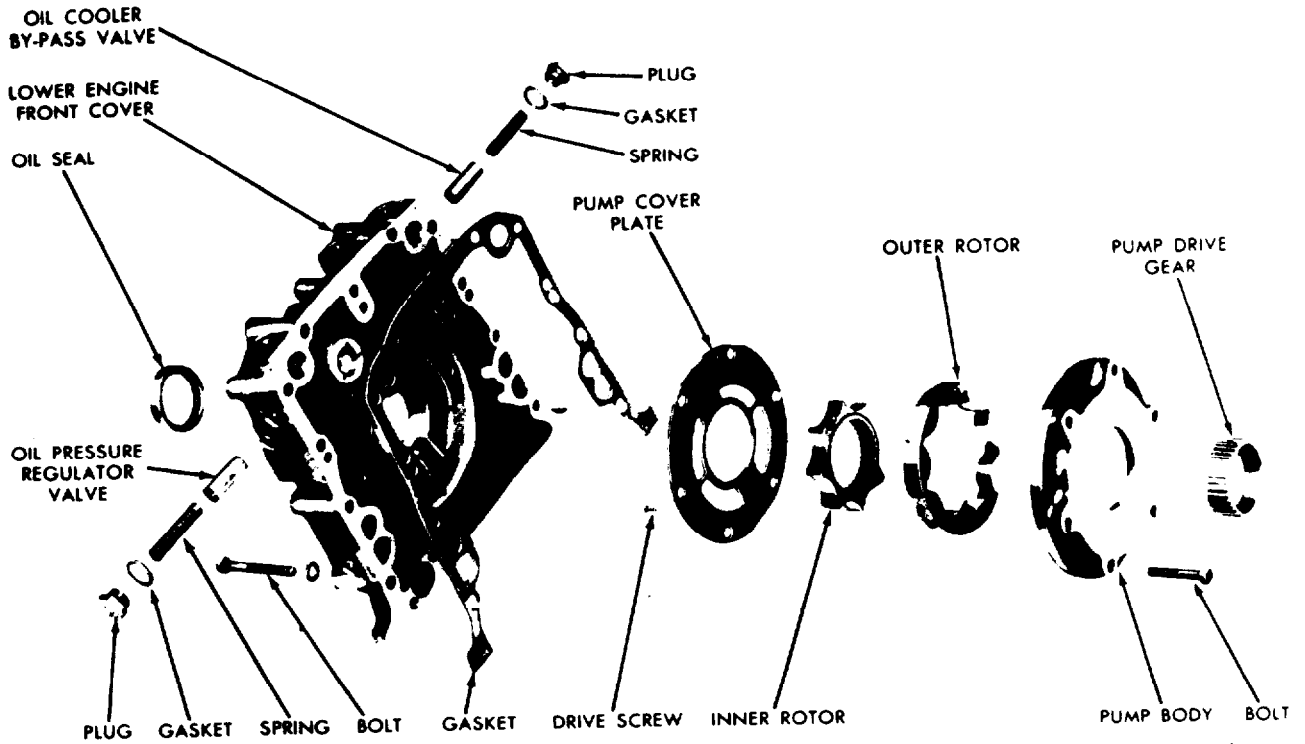


OIL PUMP AND REGULATOR



P 636

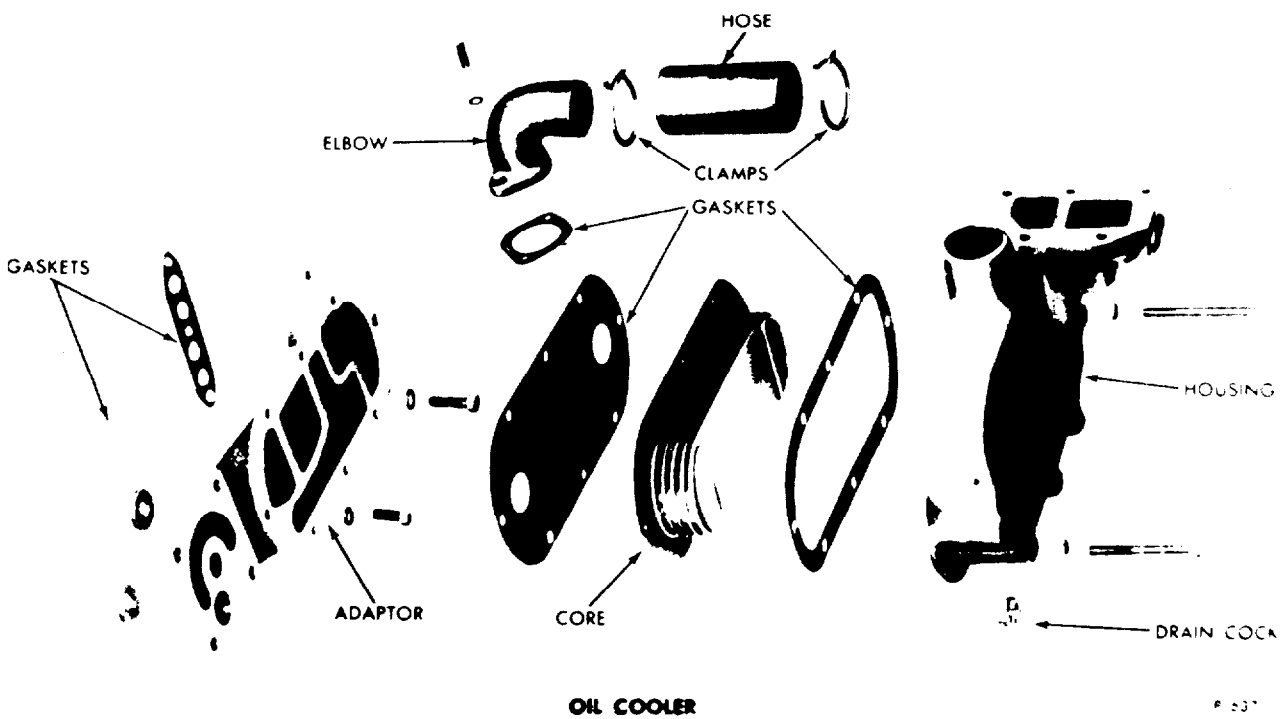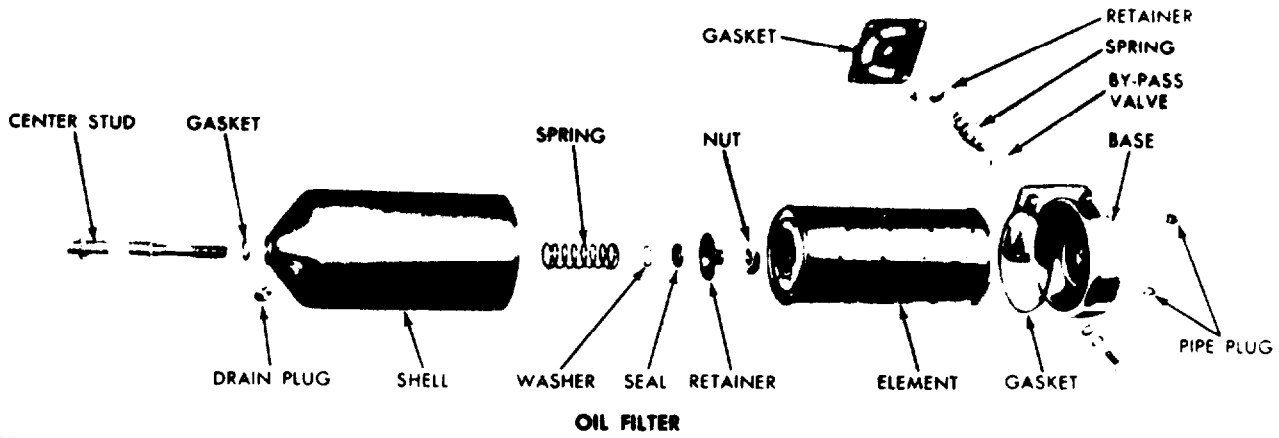


P 537

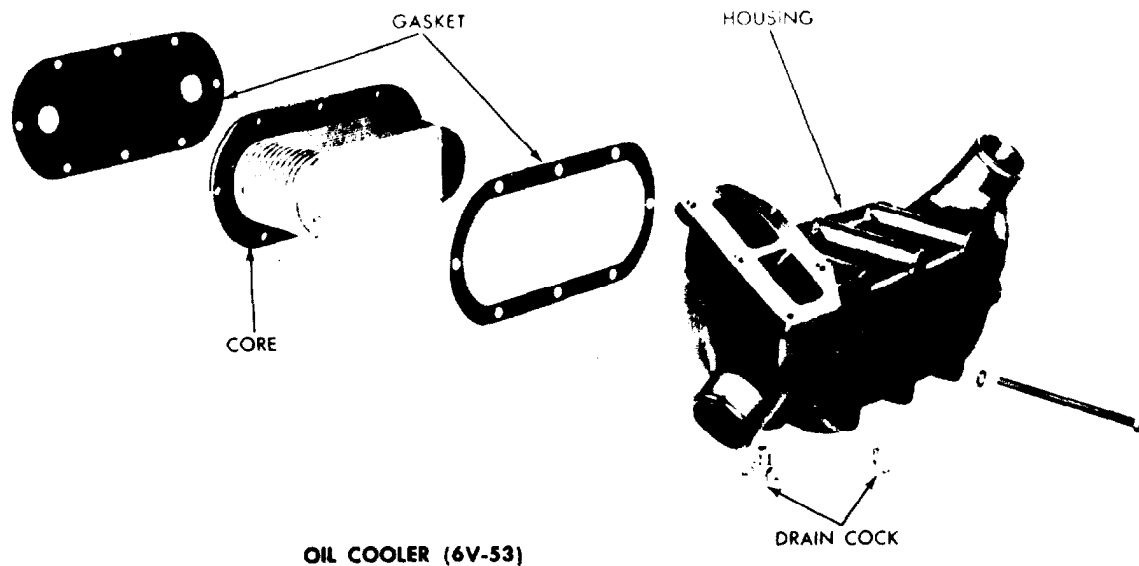


OIL COOLER (6V-53)

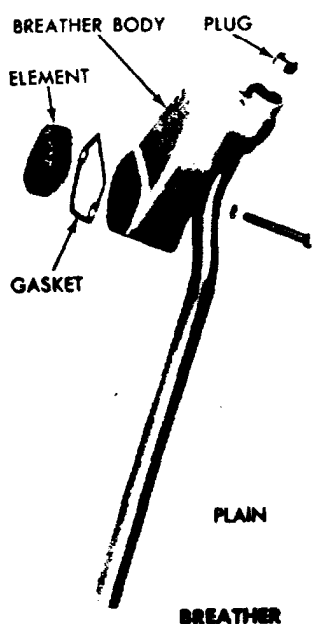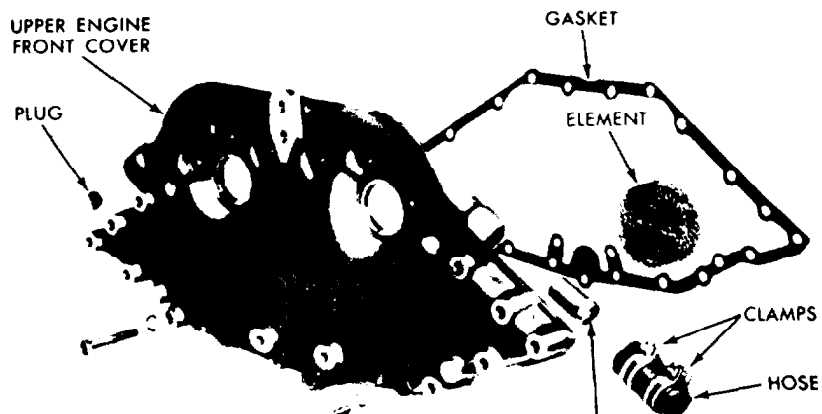



BREATHER

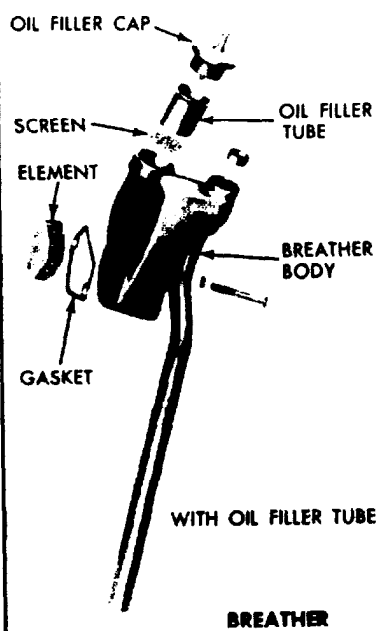


BREATHER

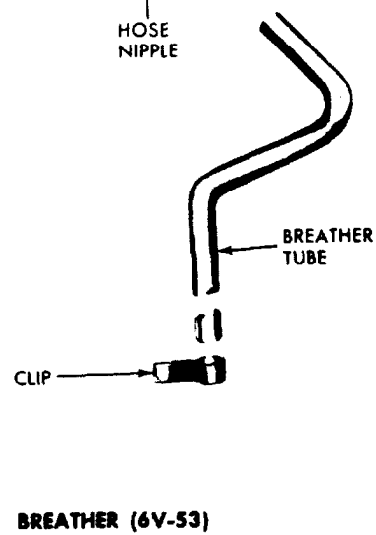


BREATHER (6V-53)

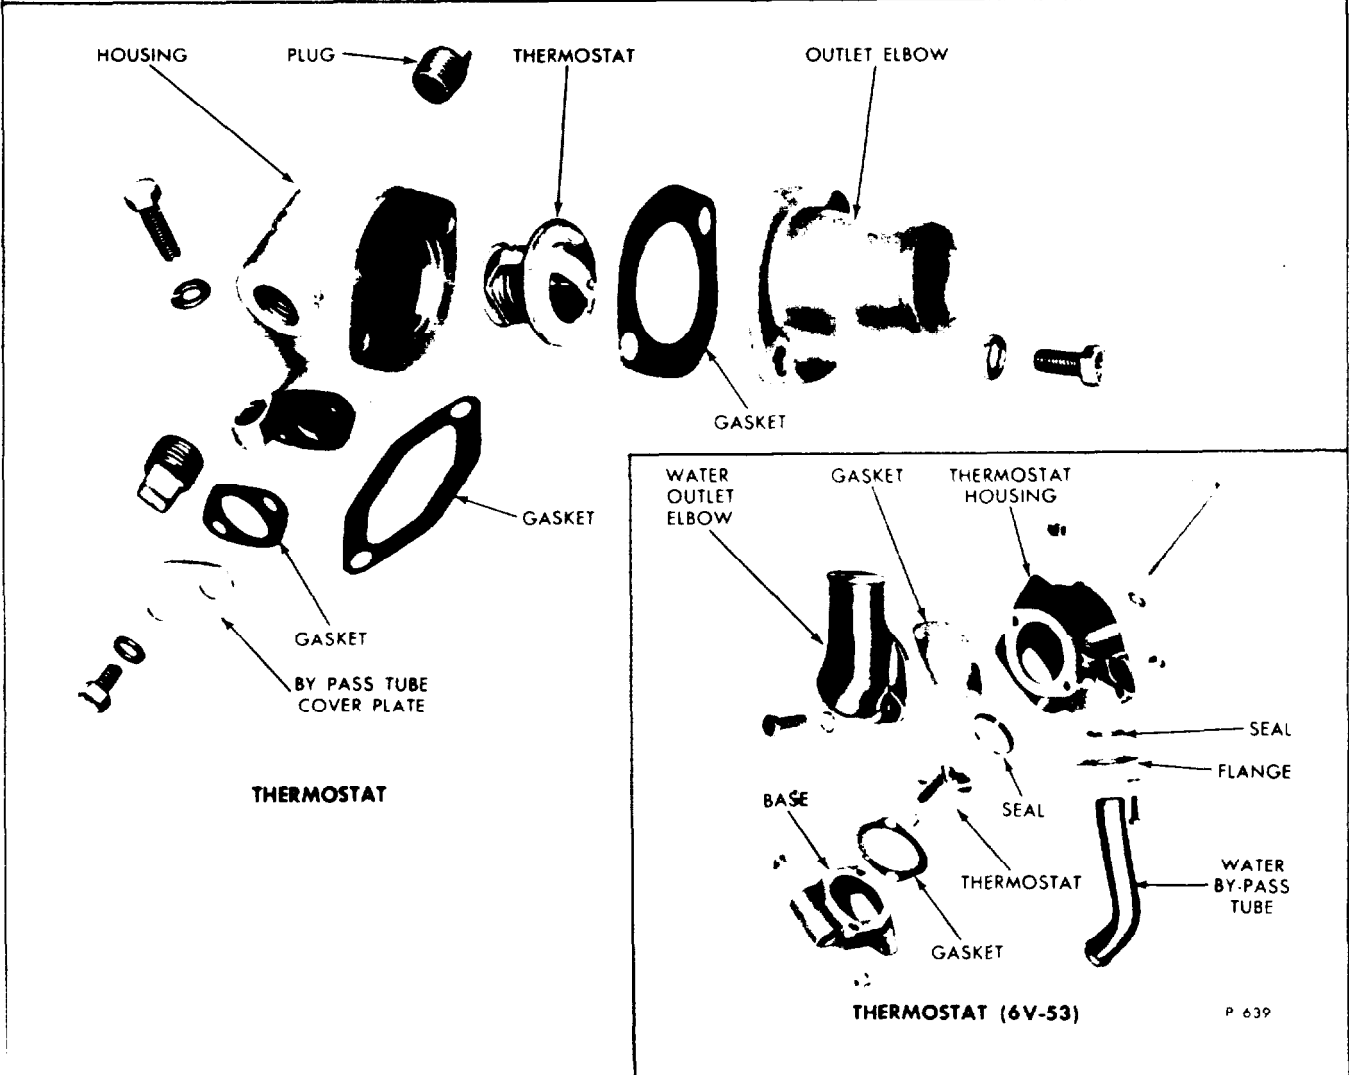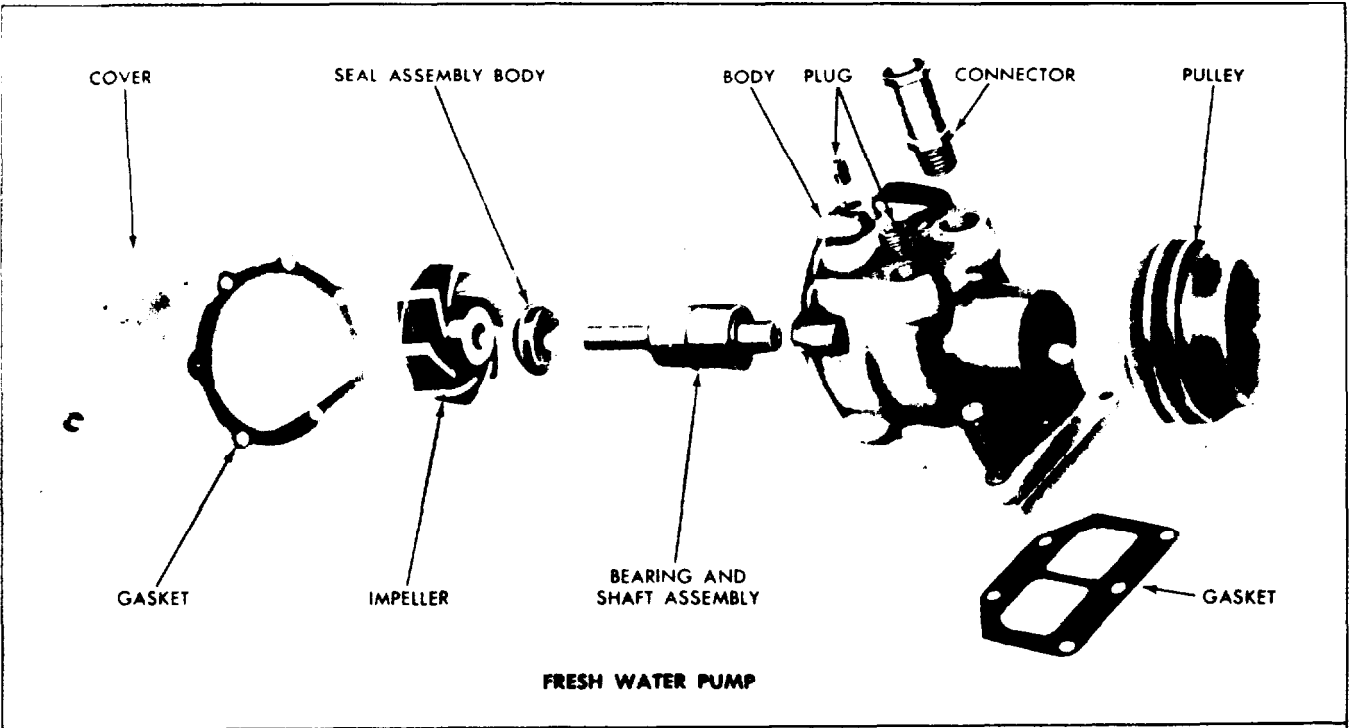

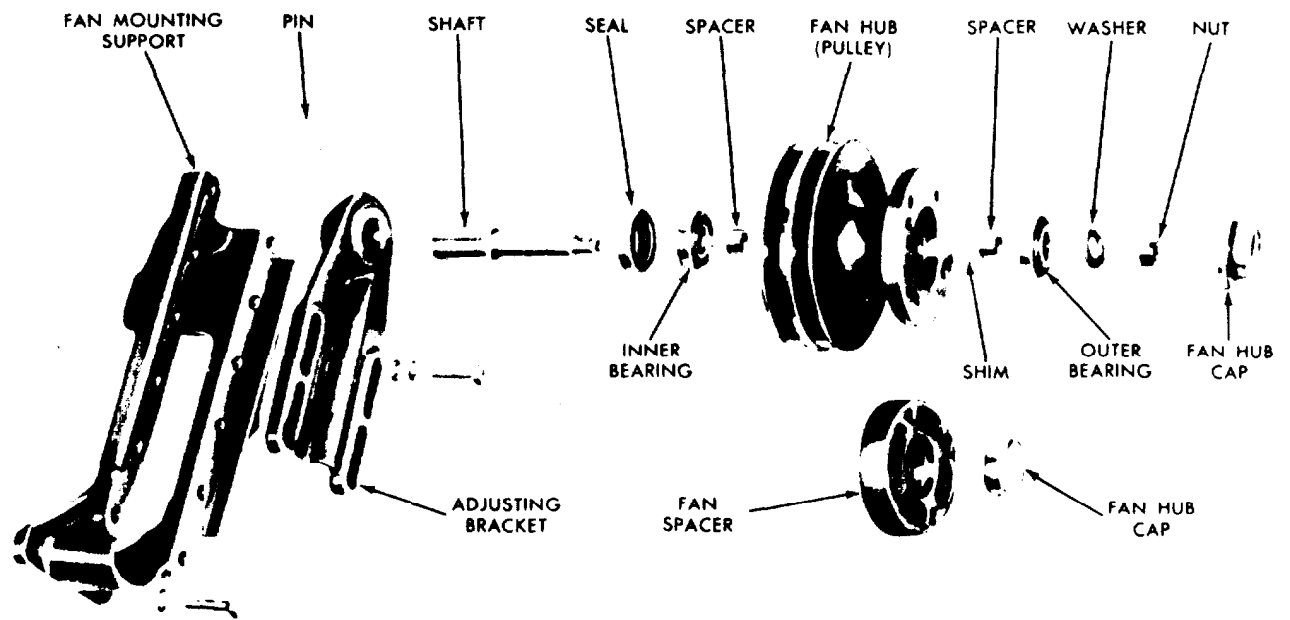


FAN MOUNT (6V-53)

P 640

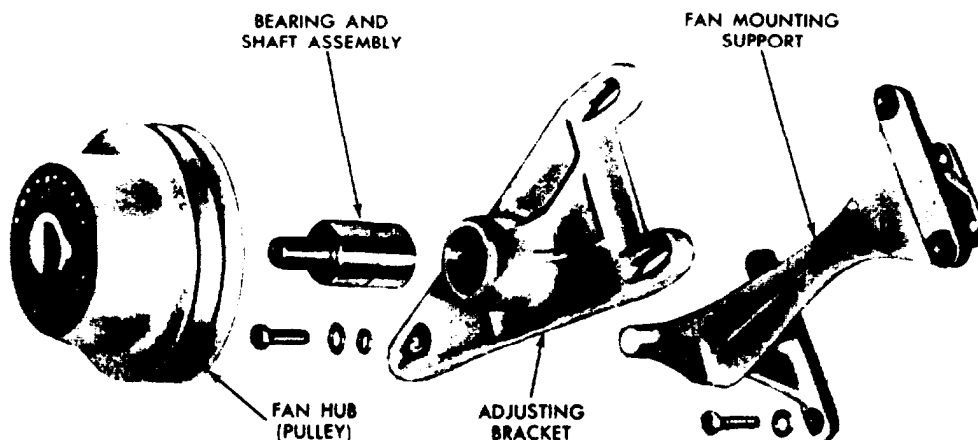


FAN MOUNT

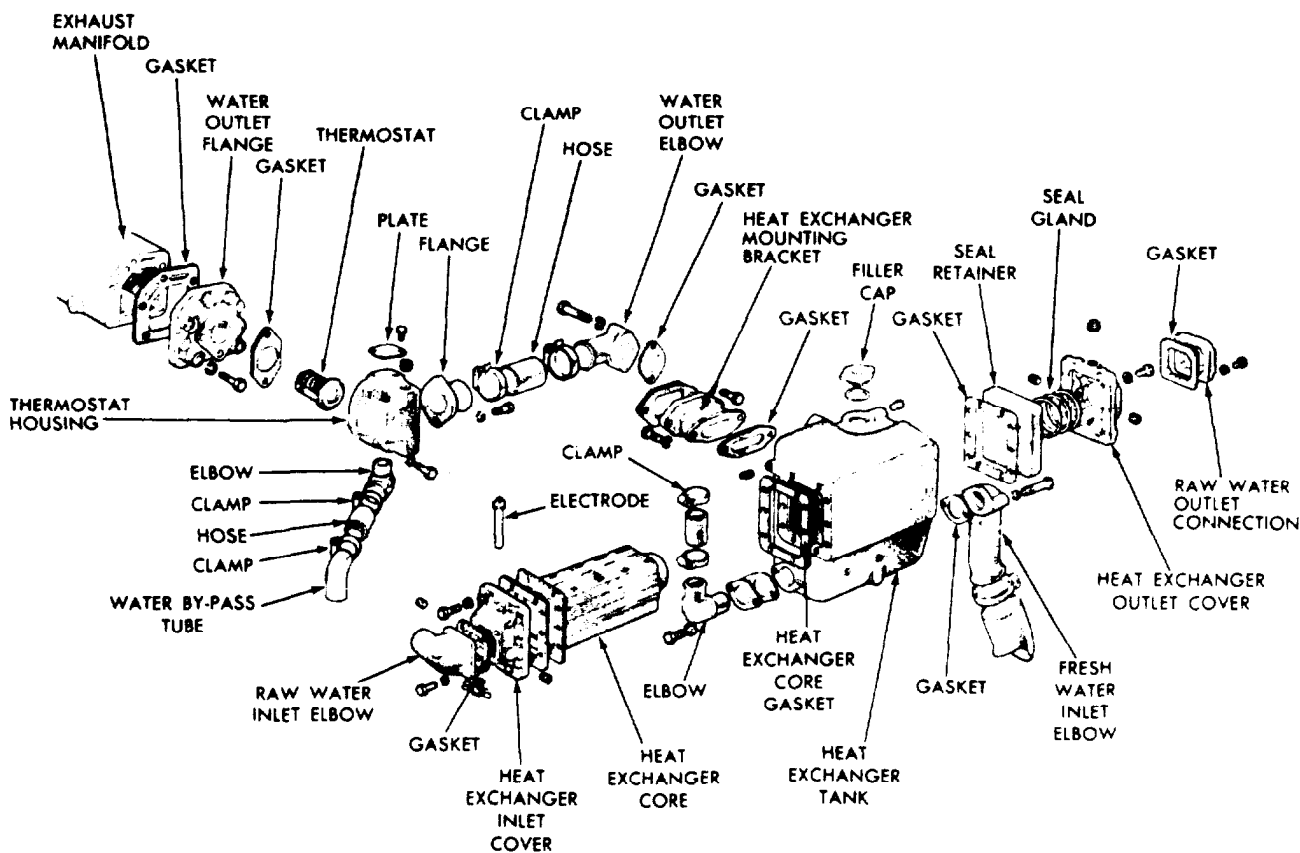


HEAT EXCHANGER

P. 64

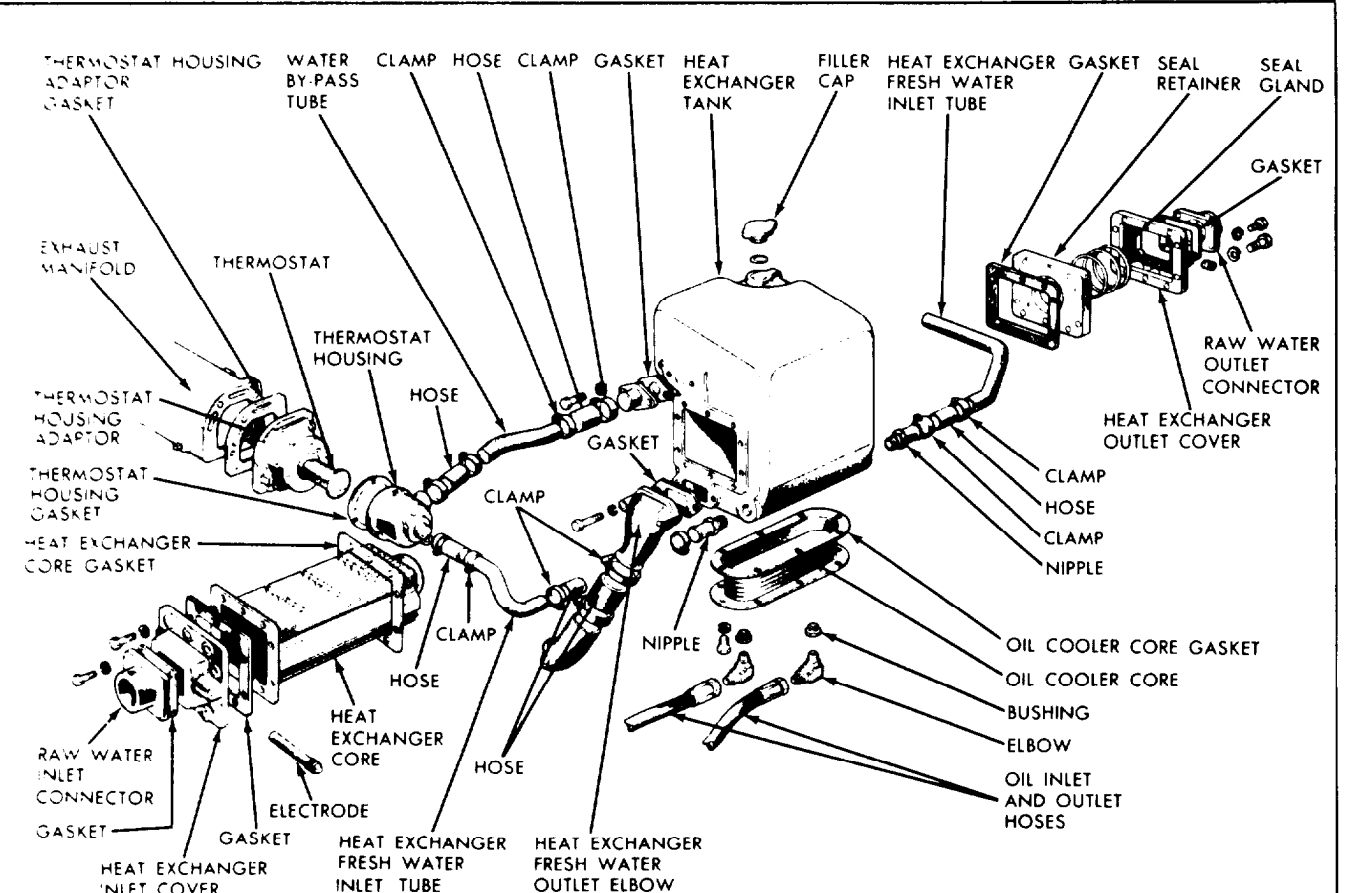


HEAT EXCHANGER (6V-53)

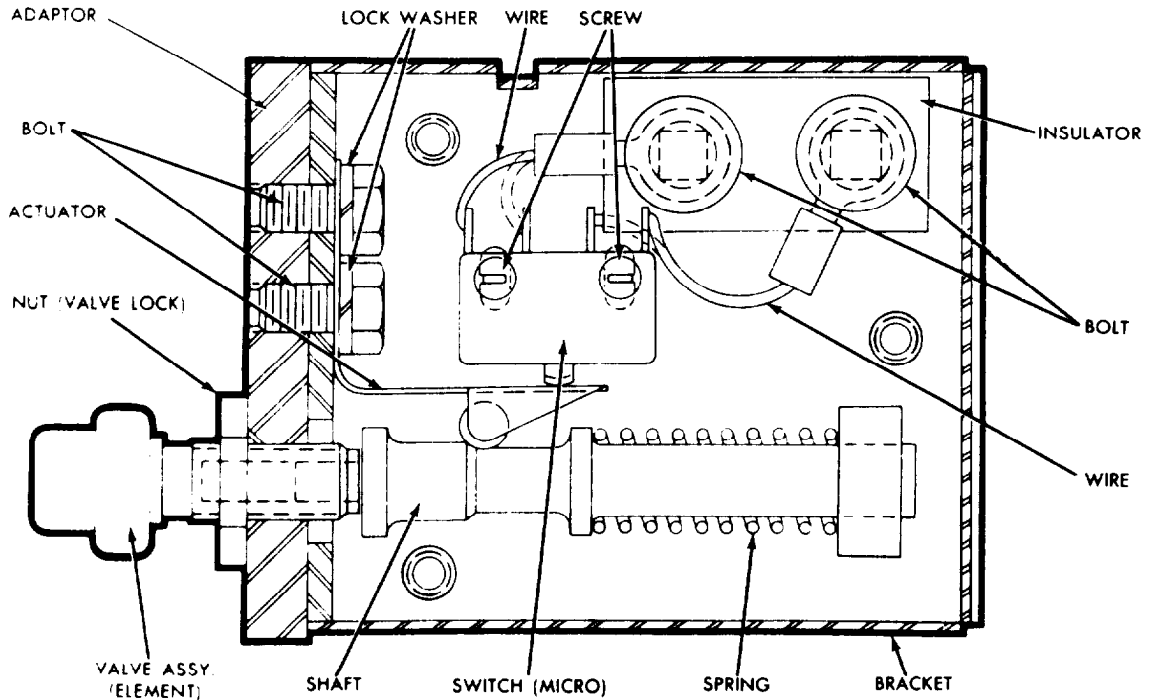


WATER TEMPERATURE SHUTDOWN SWITCH



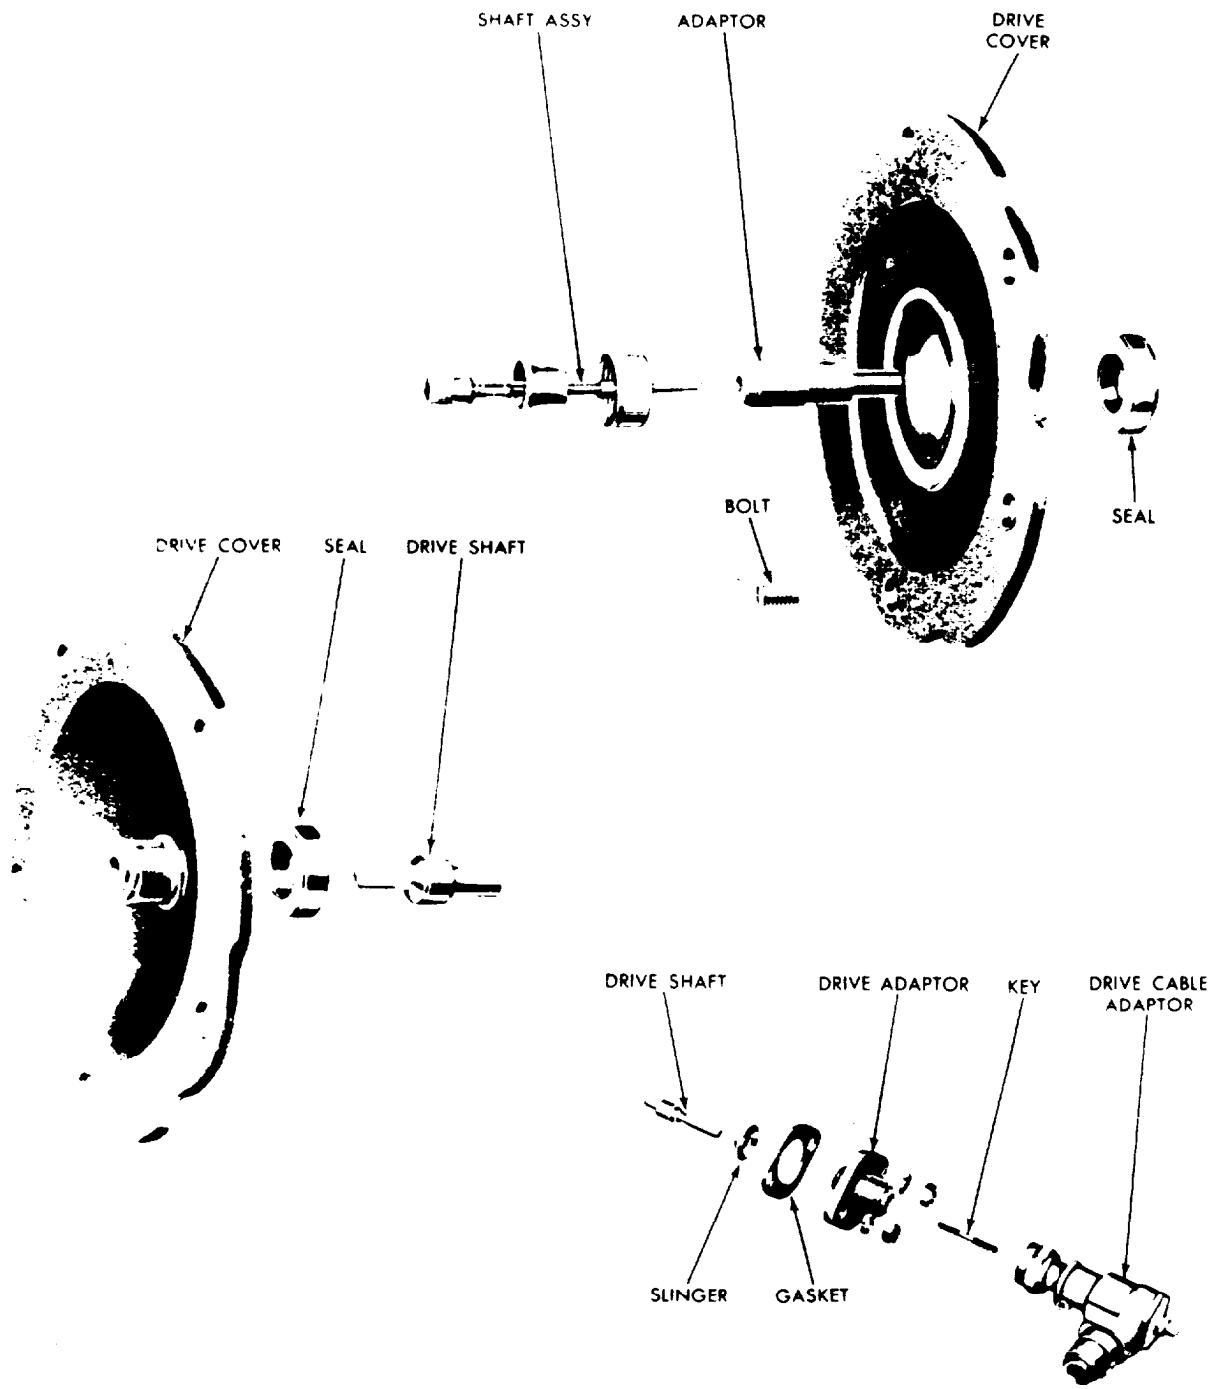


TACHOMETER DRIVE COVERS AND ADAPTORS

P 643

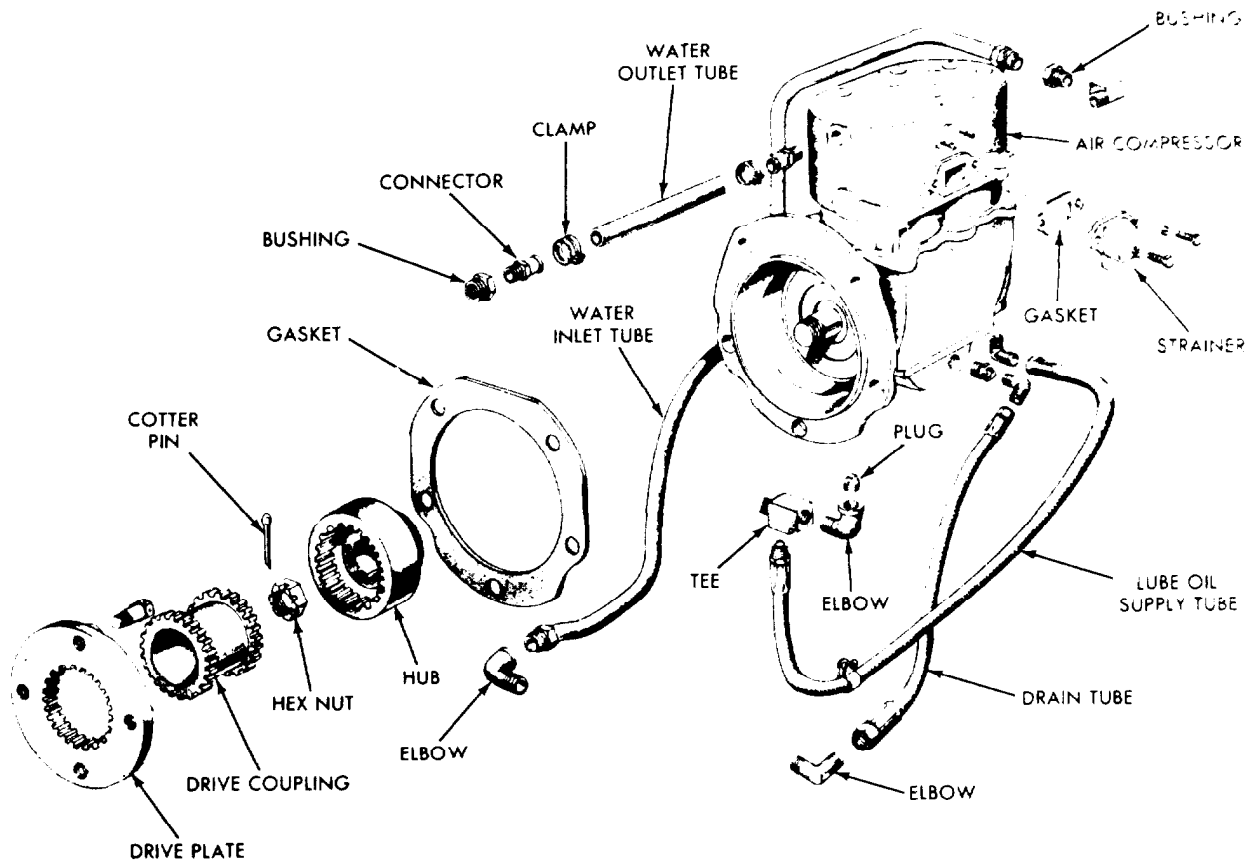


AIR COMPRESSOR AND DRIVE

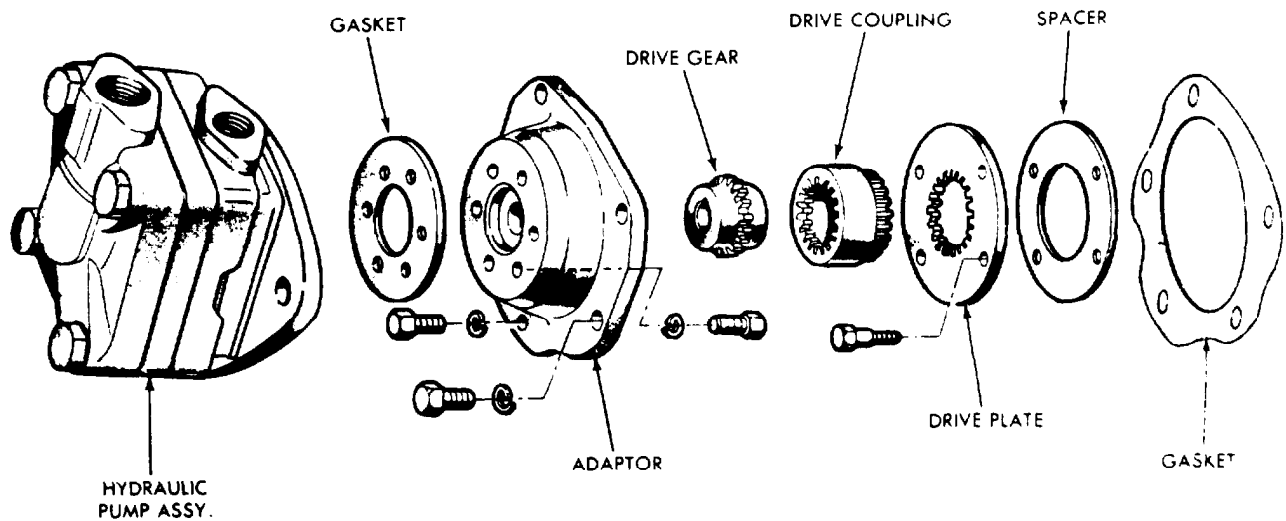

HYDRAULIC PUMP AND DRIVE

P 034



**ALPHABETICAL INDEX**

Subject	Page	Subject	Page
<b>A</b>		<b>E</b>	
Accessory Drive	131	Engine Coolant	71
Adjustments:		Engine Cross-Section Views	10
Injector Timing	78	Engine Model Description Chart	6
Mechanical Governor Shutdown Solenoid	106	Engine Protective Systems	33, 134
Power Take-Off	44	Electrical Starting System	37
Valve Clearance	76		
Air Compressor	145	<b>F</b>	
Air System:		Fan Mounting	141
Air Box Drains	21	Filters:	
Air Cleaners	17	Fuel Oil	15
Air Silencer	21	Lubricating Oil	22
Crankcase Ventilation	21	Fuel Oil Specifications	67
Alarm System	36	Fuel System:	
Assistance--Owner	147	Injector	13
		Pump	15, 132
<b>B</b>		Strainer and Filter	15, 133
Blower Assembly and Drive	135	Tank	16
Breathers	139		
Built-In Parts Book	9, 123	<b>G</b>	
		General Description	5
<b>C</b>		General Specifications	8
Camshaft and Gears	130	Governors	44
Cold Weather Starting Aids	41		
Compression Pressure	113	<b>H</b>	
Connecting Rod	130	Heat Exchanger	142
Cooling System:.		Hydraulic Pump	145
Antifreeze Solutions	74	Hydraulic Starting System	38
Coolant Filter	73		
Cooling System Capacity	27	<b>I</b>	
Corrosion Inhibitor	71	Idler Gear	130
Flushing	28	Injector and Controls	133
Heat Exchanger Cooling	25, 142	Instruments and Controls	31
Radiator Cooling	25		
Raw Water Pump	29	<b>L</b>	
Crankshaft	129	Liner	130
Cylinder Head	129	Lubricating Oil Specifications	68
		Lubrication and Preventive Maintenance	55
<b>d</b>		Lubrication Chart	56
Description, General	5	Lubricating System	22
Description, Model	6		

## ALPHABETICAL INDEX

Subject	Page	Subject	Page
<b>M</b>		<b>T</b>	
Maintenance, Preventive	55	Tachometer Drive	144
Marine Gear	46	Thermostat	140
Misfiring Cylinder	113	Torqmatic Converter	45
Model and Serial Number	9	Transmissions	44
<b>O</b>		Trouble Shooting:	
Oil Cooler	138	Air Box Pressure	116
Oil Filter	138	Air Inlet Restriction	116
Oil Pump and Regulator	137	Checking Compression. Pressures	113
Operating Instructions:		Crankcase Pressure	115
Cold Weather Starting	41	Electrical Generating System	117
Engine	47	Engine out of Fuel	114
Power Generator Set	51	Exhaust Back Pressure	115
Preparation for First Start	47	Fuel Flow Test	114
Owner Assistance	147	Misfiring Cylinder	113
<b>P</b>		Use of Manometer	117
Piston	130	Tune-Up Procedures:	
Power Take-Off	44	Engine	75
Preventive Maintenance	55	Exhaust Valve Clearance Adjustment	76
Principles of Operation	4	Hydraulic Governor:	
<b>S</b>		In-Line Engine	108
Shut-Down Systems	33, 143	6V Engine	111
Specifications:		Mechanical Governor:	
Fuel Oil	67	Limiting Speed (In-Line Engine)	79
General	8	Limiting Speed (6V Engine)	84
Lubrication Oil	68	Variable Speed (Open Linkage)	89
Starting Systems:		Variable Speed (Enclosed Linkage)	93
Electrical	37	Variable Speed (6V Engine)	98
Hydraulic	38	Supplementary Governing Device	103
Storage:		Engine Load Limit	103
Preparation	119	Governor Shutdown Solenoid	106
Restoration	121	Throttle Delay Mechanism	104
		Timing Fuel Injector	78
		<b>V</b>	
		Valve Operating Mechanism	132
		<b>W</b>	
		Water Pump	29,140

# **PART V**

## **DIESEL ENGINE SERVICE MANUAL**



# TABLE OF CONTENTS

SUBJECT	SECTION
GENERAL INFORMATION	
ENGINE (less major assemblies)	1
FUEL SYSTEM AND GOVERNORS	2
AIR INTAKE SYSTEM	3
LUBRICATION SYSTEM	4
COOLING SYSTEM	5
EXHAUST SYSTEM	6
ELECTRICAL EQUIPMENT	7
OPERATION	13
TUNE-UP	14
PREVENTIVE MAINTENANCE, TROUBLE SHOOTING AND STORAGE	15



## **IMPORTANT SAFETY NOTICE**

Proper service and repair is important to the safe, reliable operation of all motor vehicles. The service procedures recommended by Detroit Diesel Allison and described in this service manual are effective methods for performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tool\ should be used when and as recommended.

It is important to note that some warnings against the use of specific service methods that can damage the vehicle or render it unsafe are stated in this service manual. It is also important to understand these warnings are not exhaustive. Detroit Diesel Allison could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Detroit Diesel Allison has not undertaken any such broad evaluation. Accordingly, anytime who uses a service procedure or tool which is not recommended by Detroit Diesel Allison must first satisfy himself thoroughly that neither his safety nor vehicle safety will be jeopardized by the service method he selects.

**ALPHABETICAL INDEX**

Subject	Section	Subject	Section
<b>A</b>		<b>D</b>	
Accessory drives	1.7.7	Damper--vibration	1,3.6
		Description--general	*
		Diesel principle	*
Air box drains	1.1.2	Dipstick--oil level	4.6
Air cleaner	3.1	Drains--air box	1.1.2
		Dynamometer test	13.2.1
Air intake system	3		
Air shutdown housing	3.3	<b>E</b>	
Air silencer	3.2	Electrical starting system--checking	7.0
		Electrical system	7
<b>B</b>		End plate--cylinder block	1.1.1
Balance shaft	1.7.2	End plate--blower	3.0
Balance weights--front	1.7	Engine:	
		Balance	1.7
Battery-charging generator	7.1	<b>F</b>	
Battery-charging generator regulator	7.1.1	Fan--engine cooling	5.4
Bearings:		Fan belt adjustment	15.1
Camshaft and balance shaft	1.7.2	Fast idle cylinder	2.7.1.4
Connecting rod	1.6.2	Fast idle cylinder	14.3.4
Connecting rod (clearance)	1.0	Filter--fuel	2.3
Crankshaft main	1.3.4	Filter--lubricating oil	4.2
Crankshaft main (clearance)	1.0	Filter--coolant	*5.7
Crankshaft outboard	1.3.5.1	Firing order	
Idler gear--engine	1.7.4	Flywheel	1.4
Belt adjustment--fan	15.1	Flywheel housing	1.5
		Front balance weights	1.7
Block--cylinder	1.1	Fuel cooler	2.5.1
Blower (in-line)	3.4	Fuel flow--checking	15.2
		Fuel injector (needle valve)	2.1.1
Blower drive gear	1.7.6	Fuel injector tube	2.1.4
Blower drive shaft	1.7.6	Fuel oil specifications	13.3
Blower end plates	3.0	Fuel pump	2.2
Bluing injector components	2.0	Fuel pump drive	2.2.1
Breather--crankcase	4.8	Fuel system	2
		Fuel system priming pump	12.6.1
<b>C</b>		<b>G</b>	
Cam followers	1.2.1	Gear--blower drive	1.7.6
Camshaft	1.7.2	Gear--camshaft and balance shaft	1.7.3
Camshaft and balance shaft gears	1.7.3	Gear--crankshaft timing	1.7.5
		Gear--engine idler	1.7.4
		Gear--flywheel ring	1.4

\*General Information Section

Subject	Section	Subject	Section
<b>H</b>		Model number--engine	*
Head--cylinder	1.2	Motor--starting (electrical)	7.3
Heat exchanger	5.5		
Housing--air shutdown	3.3		
Housing--flywheel	1.5		
<b>I</b>		<b>O</b>	
Idler gear--engine	1.7.4	Oil cooler--engine	4.4
Idler pulley--water pump	5.1.1	Oil level dipstick	4.6
Injector--fuel (needle valve)	2.1.1	Oil pan	4.7
Bluing	2.0	Oil pan	4.0
Calibrator and Comparator	2.0	Oil pressure regulator	4.1.1
Operating mechanism	1.2.1	Oil pump driving gear	4.1
Spray tip	2.0	Oil pump supports	4.0
Test fixture (checking)	2.0	Oil seals--crankshaft	13.2
Timing	14.2	Oil specifications--fuel	13.3
Timing (checking)	2.0	Oil specifications--lubricating	13.3
Trouble shooting	2.0	Operating conditions	13.2
Tube	2.1.4	Operating instructions--engine	13.1
Inspection--magnetic particle method	1.3	Operation--principles of	*
		Option plate	*
<b>L</b>		<b>P</b>	
Lapping blocks--refinishing	2.0	Pan--oil	4.7
Liner--cylinder	1.6.3	Pan--oil	4.0
Lubricating oil cooler	4.4		
Lubricating oil filters	4.2		
Lubricating oil pressure regulator	4.1.1		
<b>M</b>		<b>R</b>	
Magnetic particle inspection method	1.3	Regulator--battery-charging generator	7.1.1
Main bearings	1.3.4	Regulator--oil pressure	4.1.1
Maintenance--preventive	15.1	Restoring engine to service	15.3
Manifold--air cooled exhaust	6.1	Rings--piston	1.6
Manometer (use of)	15.2	Rocker arms	1.2.1
Marine gear	9.1.3	Rocker cover	1.2.4
Mechanical governor	2	Rod--connecting	1.6.1
Misfiring cylinder	15.2	Rod--push	1.2.1
Model description chart	*	Rotation--engine	*
		Run-in instructions	13.2.1

\*General Information Section

Subject	Section	Subject	Section
<b>S</b>		<b>V</b>	
Seals--crankshaft oil	1.3.2	Valve--exhaust:	1.2.2
Serial number location:	*	Clearance adjustment	14.1
Engine		Guide and insert	1.2.2
Shut-down housing	3.3	Operating mechanism	1.2.1
Shut-down system	7.4.1	Trouble shooting	1.0
Silencer--air	3.2	Ventilating system	4.8
<b>T</b>		<b>W</b>	
Test--dynamometer	13.2.1		
Test--report	13.2.1		
Thermostat	5.2.1		
Thrust washers--crankshaft	1.3.4	Washers--crankshaft thrust	1.3.4
Timing--blower rotor	3.4	Water pump--engine	5.1
Timing--engine	1.7.1		
Timing--injector	14.2		
Timing--injector (checking)	2.0		
Timing gear--crankshaft	1.7.5	Weights--front balance	1.7

\*General Information Section

## SCOPE AND USE OF THE MANUAL

This manual covers the basic Series 53 Diesel Engines built by the Detroit Diesel Allison Division of General Motors Corporation. Complete instructions on operation, adjustment (tune-up), preventive maintenance and lubrication, and repair (including complete overhaul) are covered. The manual was written primarily for persons servicing and overhauling the engine and, in addition, contains all of the instructions essential to the operators and users. Basic maintenance and overhaul procedures are common to all Series 53 engines and therefore apply to all engine models.

The manual is divided into numbered sections. The first section covers the engine (less major assemblies). The following sections cover a complete system such as the fuel system, lubrication system or air system. Each section is divided into sub-sections which contain complete maintenance and operating instructions for a specific sub-assembly on the engine. For example, Section 1, which covers the basic engine, contains sub-section 1.1 pertaining to the cylinder block, sub-section 1.2 covering the cylinder head, etc. The subjects and sections are listed in the Table of Contents on the preceding page. Pages are numbered consecutively, starting with a new Page 1 at the beginning of each sub-section. The illustrations are also numbered consecutively, beginning with a new Figure 1 at the start of each sub-section.

Information regarding a general subject, such as the lubrication system, can best be located by using the Table of Contents. Opposite each subject in the Table of Contents is a section number which registers with a tab printed on the first page of each section throughout the manual. Information on a specific sub-assembly or accessory can then be found by consulting the list of contents on the first page of the section. For example, the cylinder liner is part of the basic engine, therefore, it will be found in Section 1. Looking down the list of contents on the first page of Section 1, the cylinder liner is found to be in sub-section 1.6.3. An Alphabetical Index at the back of the manual has been provided as an additional aid for locating information.

## SERVICE PARTS AVAILABILITY

Genuine Detroit Diesel "Factory Engineered" replacement parts are available from authorized Detroit Diesel Service Outlets conveniently located within the United States, in Canada from the distribution organization of Diesel Division General Motors of Canada Limited, and abroad through the sales and service outlets of General Motors Overseas Operations Divisions.

## CLEARANCES AND TORQUE SPECIFICATIONS

Clearances of new parts and wear limits on used parts are listed in tabular form at the end of each section throughout the manual. It should be specifically noted that the "New Parts" clearances apply only when all new parts are used at the point where the various specifications apply. This also applies to references within the text of the manual. The column entitled "Limits" lists the amount of wear or increase in clearance which can be tolerated in used engine parts and still assure satisfactory performance. It should be emphasized that the figures given as "Limits" must be qualified by the judgement of personnel responsible for installing new parts. These wear limits are, in general, listed only for the parts more frequently replaced in engine overhaul work. For additional information, refer to the paragraph entitled *Inspection* under *General Procedures* in this section.

Bolt, nut and stud torque specifications are also listed in tabular form at the end of each section

## PRINCIPLES OF OPERATION

The diesel engine is an internal combustion power unit, in which the heat of fuel is converted into work in the cylinder of the engine.

In the diesel engine, air alone is compressed in the cylinder; then, after the air has been compressed, a charge of fuel is sprayed into the cylinder and ignition is accomplished by the heat of compression.

### The Two-Cycle Principle

In the two-cycle engine, intake and exhaust take place during part of the compression and power strokes respectively as shown in Fig. 1. In contrast, a four-cycle engine requires four piston strokes to complete an operating cycle; thus, during one half of its operation, the four-cycle engine functions merely as an air pump.

A blower is provided to force air into the cylinders for expelling the exhaust gases and to supply the cylinders with fresh air for combustion. The cylinder wall contains a row of ports which are above the piston when it is at the bottom of its stroke. These ports admit the air from the blower into the cylinder as soon as the rim of the piston uncovers the ports as shown in Fig. 1 (scavenging).

The unidirectional flow of air toward the exhaust valves produces a scavenging effect, leaving the cylinders full of clean air when the piston again covers the inlet ports.

As the piston continues on the upward stroke, the exhaust valves close and the charge of fresh air is subjected to compression as shown in Fig. 1 (compression).

Shortly before the piston reaches its highest position, the required amount of fuel is sprayed into the combustion chamber by the unit fuel injector as shown in Fig. 1 (power). The intense heat generated during the high compression of the air ignites the fine fuel spray immediately. The combustion continues until the injected fuel has been burned.

The resulting pressure forces the piston downward on its power stroke. The exhaust valves are again opened when the piston is about half way down, allowing the burned gases to escape into the exhaust manifold as shown in Fig. 1 (exhaust). Shortly thereafter, the downward moving piston uncovers the inlet ports and the cylinder is again swept with clean scavenging air. This entire combustion cycle is completed in each cylinder for each revolution of the crankshaft, or, in other words, in two strokes; hence, it is a "two-stroke cycle".

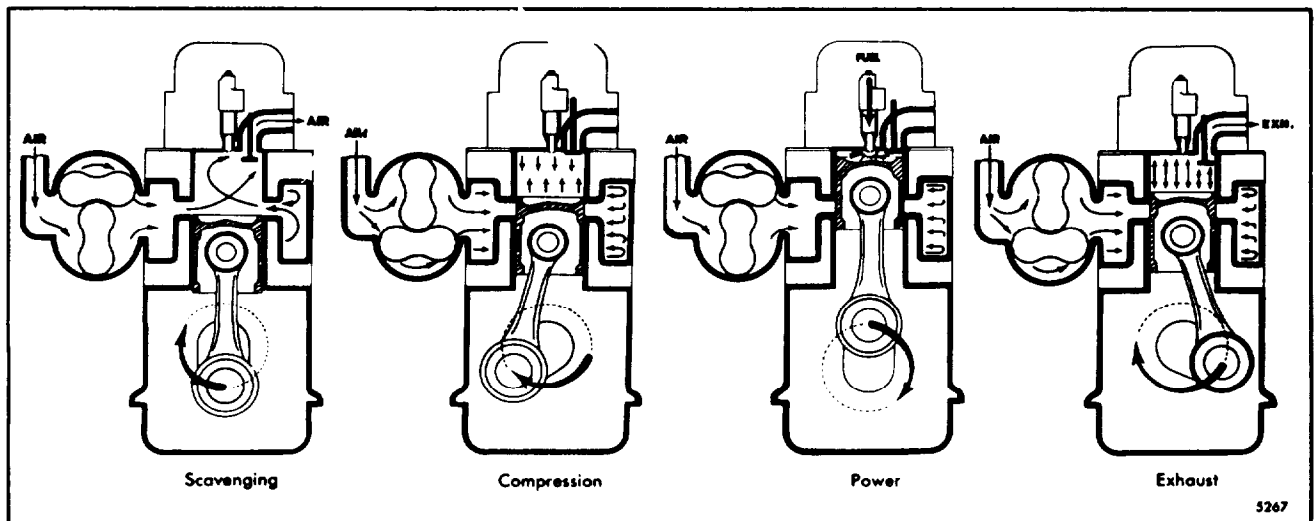


Fig. 1 - The Two Stroke Cycle

## GENERAL DESCRIPTION

The two-cycle diesel engines covered in this manual have the same bore and stroke and many of the major working parts such as injectors, pistons, connecting rods, cylinder liners and other parts are interchangeable.

The In-line engines, including the inclined marine models, include standard accessories such as the blower, water pump, governor and fuel pump, which, on some models, may be located on either side of the engine regardless of the direction the crankshaft rotates. Further flexibility in meeting installation requirements is achieved with the cylinder head which can be installed to accommodate the exhaust manifold on either side of the engine.

The V-type engines use many In-line engine parts, including the 3-53 and 4-53 cylinder heads. The blower is mounted on top of the engine between the two banks of cylinders and is driven by the gear train. The governor is mounted on the rear end of the 6V-53 blower and on the front end of the 8V-53 blower.

The meaning of each digit in the model numbering system is shown in Figs. 2 and 3. The letter L or R indicates left or right-hand engine rotation as viewed from the front of the engine. The letter A, B, C or D designates the blower and exhaust manifold location on the In-line engines as viewed from the rear of the engine while the letter A or C designates the location of the oil cooler and starter on the V-type engines.

Each engine is equipped with an oil cooler (not required on certain two-cylinder models), full-flow oil filter, fuel oil strainer and fuel oil filter, an air cleaner or silencer, governor, heat exchanger and raw water pump or fan and radiator, and a starting motor.

Full pressure lubrication is supplied to all main, connecting rod and camshaft bearings and to other moving parts. A rotor-type pump on In-line or 6V engines or a gear-type pump on 8V engines draws oil

from the oil pan through a screen and delivers it to the oil filter. From the filter, the oil flows to the oil cooler and then enters a longitudinal oil gallery in the cylinder block where the supply divides. Part of the oil goes to the camshaft bearings and up through the rocker arm assemblies; the remainder of the oil goes to the main bearings and connecting rod bearings via the drilled oil passages in the crankshaft.

Coolant is circulated through the engine by a centrifugal-type water pump. Heat is removed from the coolant, which circulates in a closed system, by the heat exchanger or radiator. Control of the engine temperature is accomplished by thermostat(s) which regulate the flow of the coolant within the cooling system.

Fuel is drawn from the supply tank through the fuel strainer by a gear-type fuel pump. It is then forced through a filter and into the fuel inlet manifold in the cylinder head(s) and to the injectors. Excess fuel is returned to the supply tank through the fuel outlet manifold and connecting lines. Since the fuel is constantly circulating through the injectors, it serves to cool the injectors and to carry off any air in the fuel system.

Air for scavenging and combustion is supplied by a blower which pumps air into the engine cylinders via the air box and cylinder liner ports. All air entering the blower first passes through an air cleaner or silencer.

Engine starting is provided by either a hydraulic or electric starting system. The electric starting motor is energized by a storage battery. A battery-charging generator, with a suitable voltage regulator, serves to keep the battery charged.

Engine speed is regulated by a mechanical or hydraulic type engine governor, depending upon the engine application.


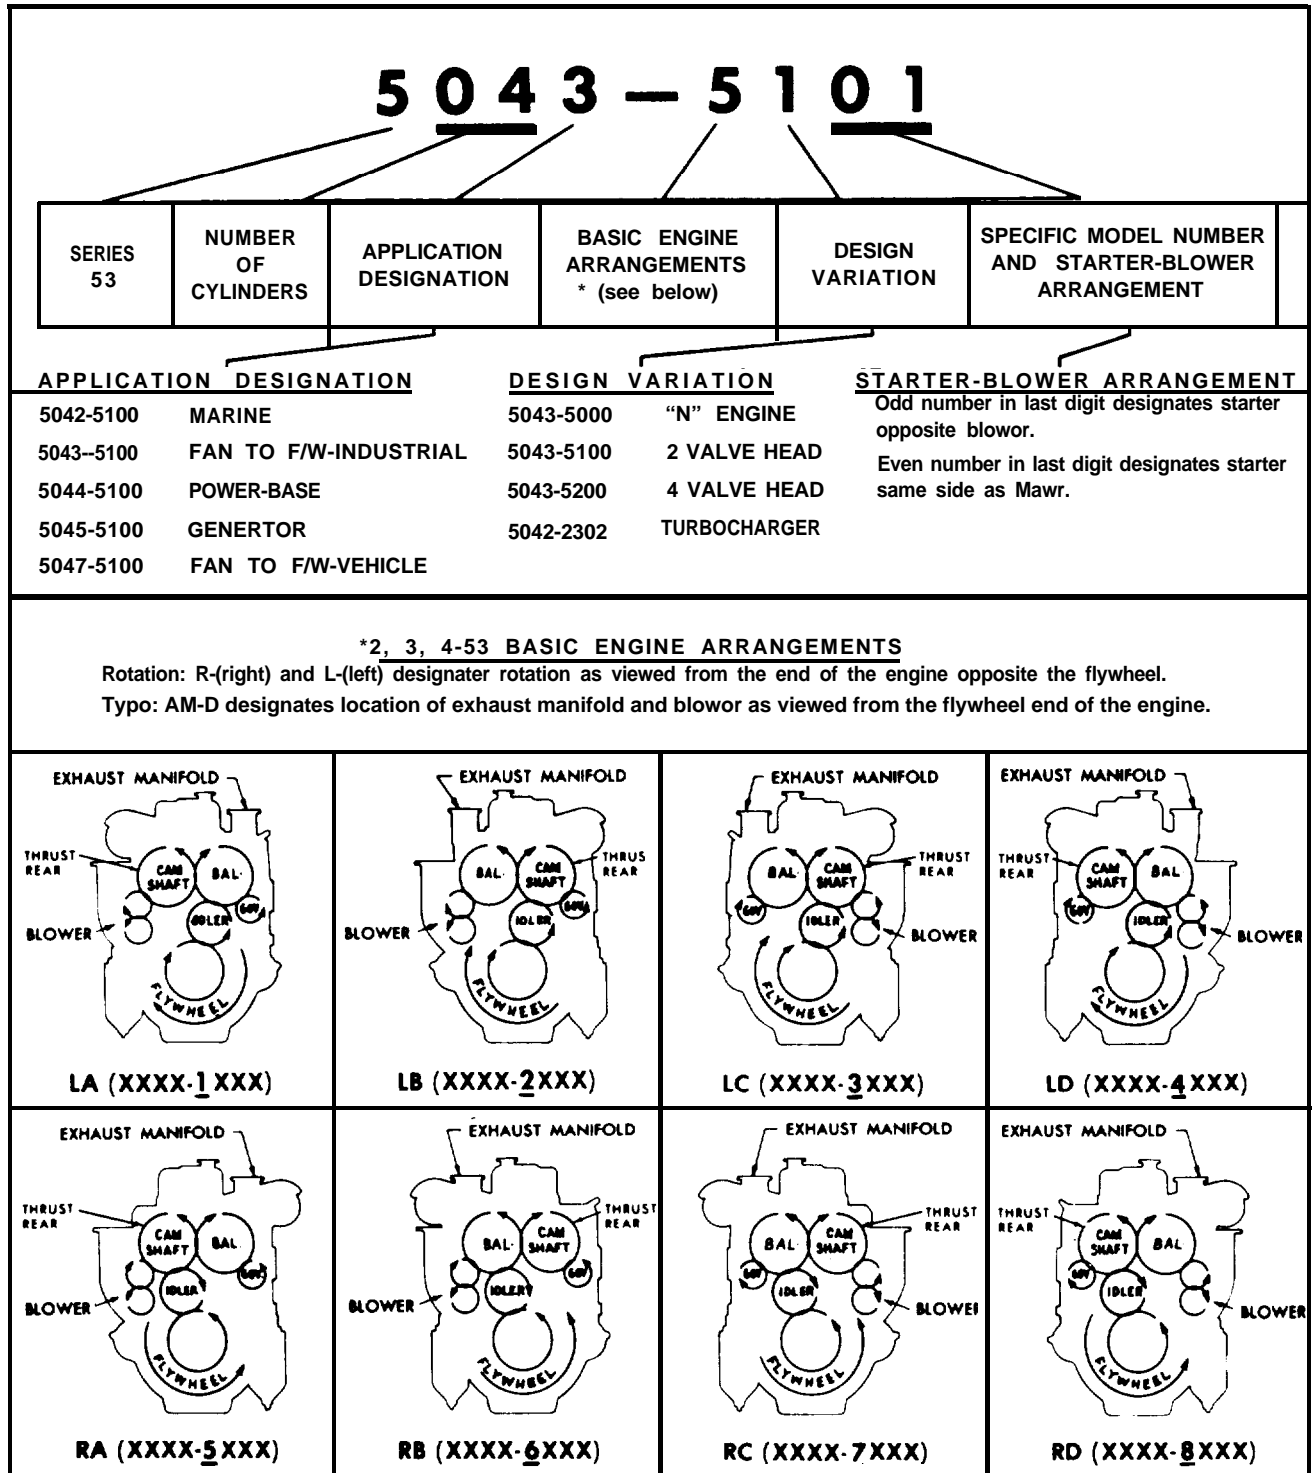


Fig. 2 In-line Engine Model Description, Rotation, and Accessory Arrangements



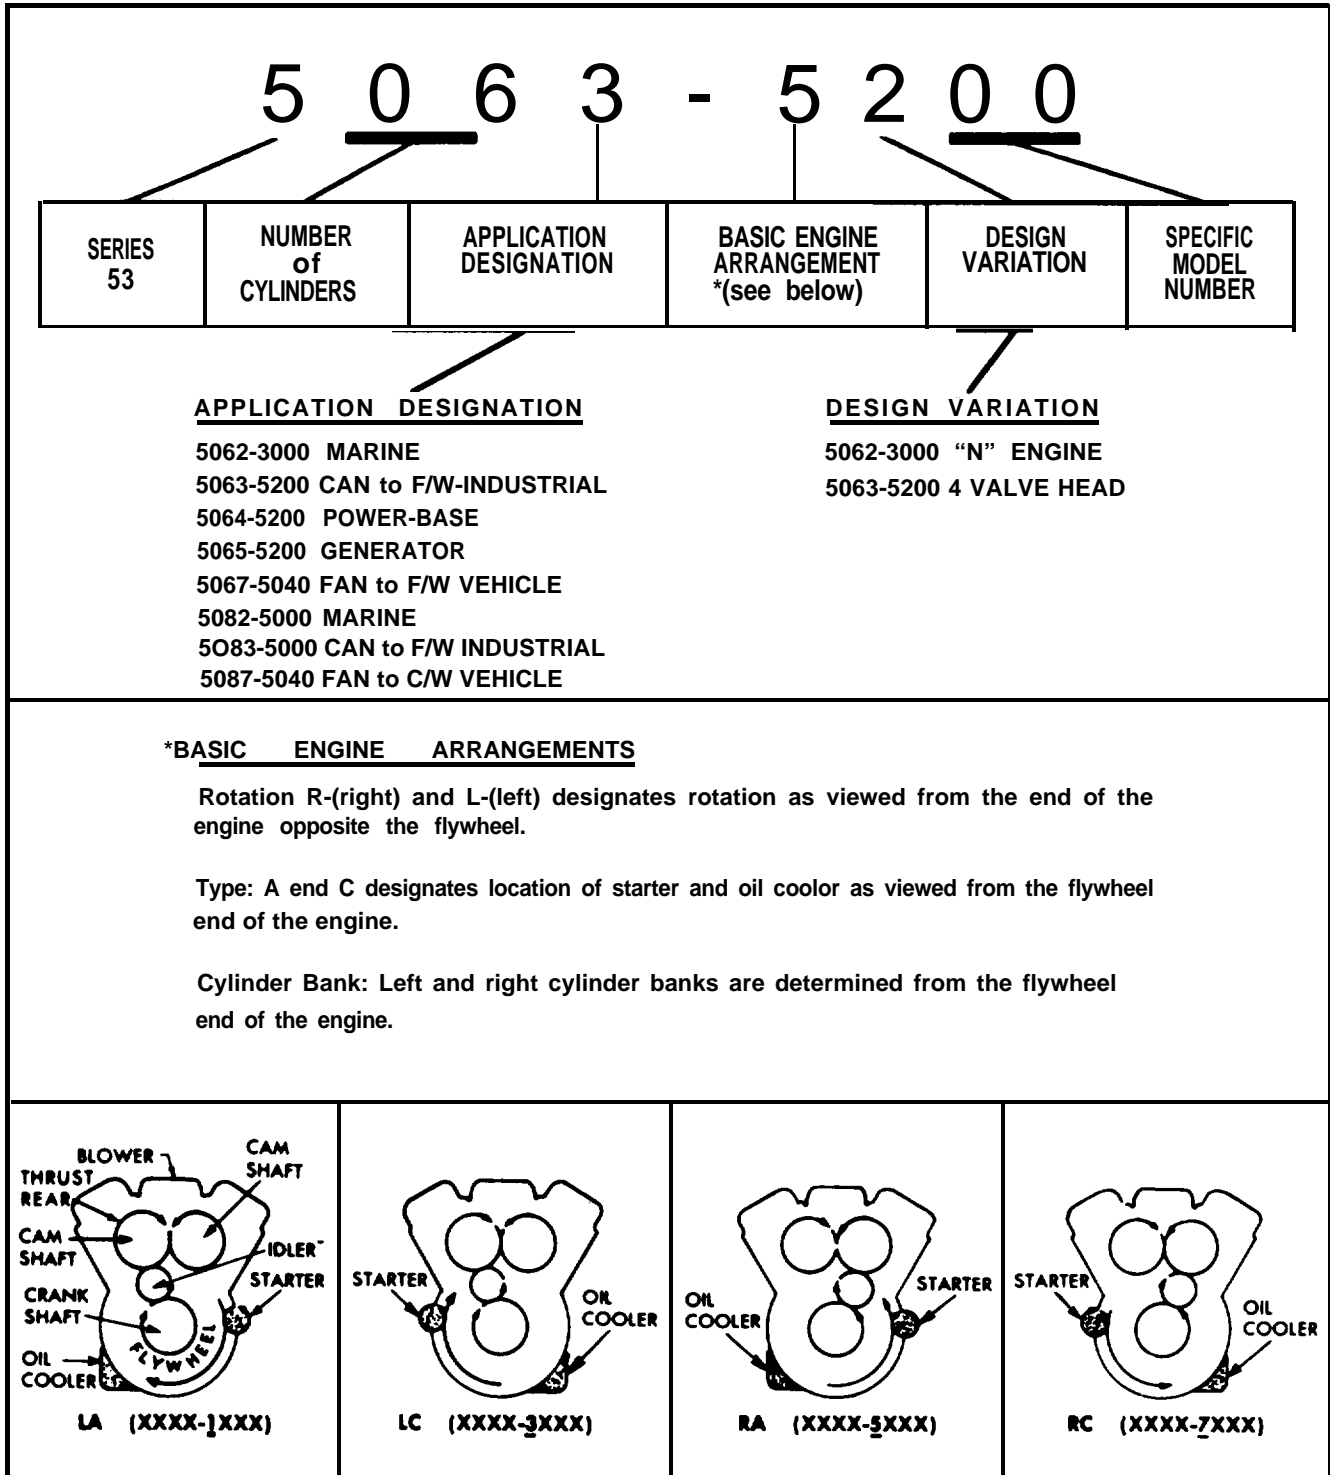

ALL ABOVE VIEWS FROM REAR FLYWHEEL END OF ENGINE

4017

Fig. 3-6 and 8V Engine Model Description, Rotation and Accessory Arrangement

**GENERAL SPECIFICATIONS**

		3-53
Type		2 Cycle
Number of Cylinders . . . . .		3
Bore . . . . .		3.875 in.
Stroke . . . . .		4.5 in.
Compression Ratio (Nominal) (Standard Engines).		17 to 1
Compression Ratio (Nominal) ("N" Engines) . . .		21 to 1
Total Displacement - Cubic Inches . . . . .		159
Number of Main Bearings . . . . .		4

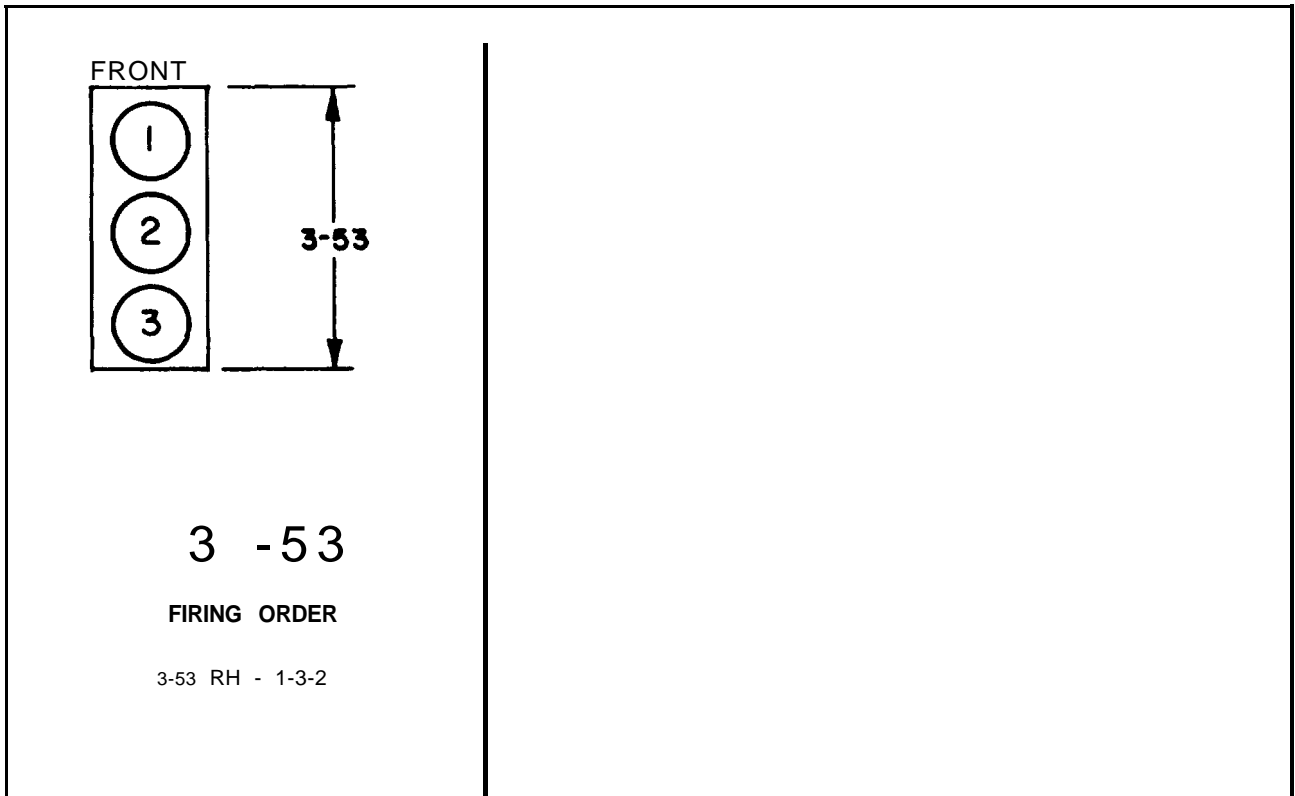


Fig. 4 - Cylinder Designation and Firing Order

ENGINE MODEL, SERIAL NUMBER AND OPTION PLATE

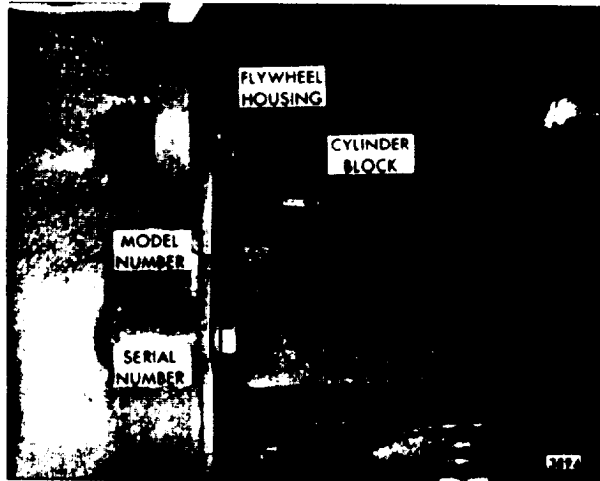


Fig. 5 Typical Model and Serial Numbers as Stamped on Cylinder Block (In-Line Engine)

On the In-line engines, the model number and serial number are stamped on the right-hand side of the cylinder block in the upper rear corner (Fig. 5).

An option plate, attached to the valve rocker cover, is also stamped with the engine serial number and model number and, in addition, lists any optional equipment used on the engine (Fig. 7). Where required, a smoke emission certification plate is installed next to the option plate.

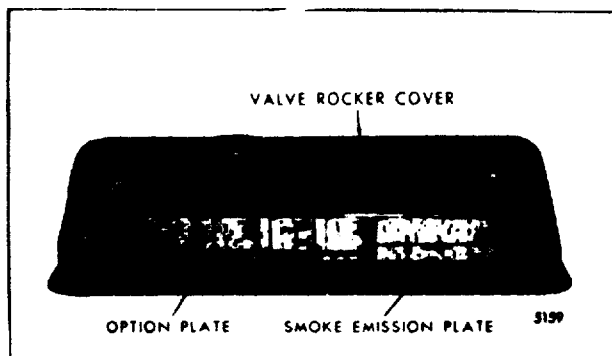


Fig. 7 Option Plate

With any order for parts, the engine model number and serial number must be given. In addition, if a type number is shown on the option plate covering the equipment required, this number should also be included on the parts order.

All groups of parts used on a unit are standard for the engine model unless otherwise listed on the option plate.

Power take-off assemblies, torque converters, marine gears, etc. may also carry name plates. The information on these name plates is also useful when ordering replacement parts for these assemblies.

not fall freely. Loosen the injector nut. Turn the tip. Then retighten the nut. Loosen and retighten the nut a couple of times if necessary. Generally this will free the rack. Then, if the rack isn't free, change the injector nut. In some cases it may be necessary to disassemble the injector to eliminate the cause of the misaligned parts.

### INJECTOR HIGH PRESSURE TEST

This test is performed to discover any leaks at the injector filter cap gaskets, body plugs and nut seal ring.

The high pressure test also indicates whether or not the plunger and bushing clearance is satisfactory.

1. Install the Injector in tester J 9787.

**CAUTION:** When testing an injector just removed from an engine, the flow of fuel through the injector on the tester should be the same as in the engine. Connections on the test head of the tester may be changed to obtain the correct direction of flow.

2. Thoroughly dry the injector with compressed air.
3. Check the fuel connections for leaks. If leaks have occurred, tighten the connections, dry the injector and recheck.
4. With the injector rack in the full-fuel position and the injector tester handle locked in position by means of the handle lock (Fig. 9), operate the pump handle to build up and maintain the pressure.

At this time, the condition of the plunger and bushing may be established. If there is excessive clearance between the plunger and bushing, pressure beyond the normal valve opening pressure cannot be obtained. Replacement of the plunger and bushing assembly is then required.

Pump up the injector tester and maintain a pressure of 1600 to 2000 psi by actuating the pump handle. Then inspect for leaks at the injector filter cap gaskets, body plugs and injector nut seal ring. If any of these conditions exist, refer to *Trouble Shooting Chart 5* in Section 2.0.

**NOTE:** It is normal for fuel to seep out around the rack due to high pressure fuel being applied to a normally low pressure area in the injector assembly. However, fuel droplets at the rack indicate excessive leakage.

**CAUTION:** Do not permit the pressure in the

injector tester to equal or exceed the capacity of the pressure gage.

### INJECTOR VALVE HOLDING PRESSURE TEST

The injector valve holding pressure test will determine whether the various lapped surfaces in the injector are sealing properly.

Operate the pump handle to bring the pressure up to approximately 450 psi.

Close the fuel shut-off valve and note the pressure drop. The time for a pressure drop from 450 psi to 250 psi must not be less than 40 seconds. If the pressure drop is less than 40 seconds, check the injector as follows.

1. Thoroughly dry the Injector with compressed air.
2. Open the tester fuel valve and operate the pump handle to maintain the test pressure.
3. A leak around the spray tip or seal ring usually is caused by a loose injector nut, a damaged seal ring or a brinelled surface on the injector nut or spray tip.
4. A leak at the filter cap indicates a loose filter cap or a damaged filter cap gasket.
5. A "dribble" at the spray tip orifices indicates a leaking valve assembly due to a damaged surface or dirt. Leakage at the tip will cause pre-ignition in the engine.

**NOTE:** A drop or two of fuel at the spray tip is only an indication of the fuel trapped in the spray tip at the beginning of the test and is not detrimental as long as the pressure drop specified is not less than 40 seconds.

### SPRAY PATTERN TEST

After completing the valve holding pressure test, open the fuel shut-off valve, place the injector rack in the full-fuel position and operate the injector several times in succession by operating the tester handle at approximately 40 strokes per minute as shown in Fig. 10. Observe the spray pattern to see that all spray orifices are open and injecting evenly. The beginning and ending of injection should be sharp and the fuel injected should be finely atomized.

If all of the spray tip orifices are not open and injecting evenly, clean them during injector overhaul. Also refer to *Trouble Shooting Chart 6* in Section 2.0.

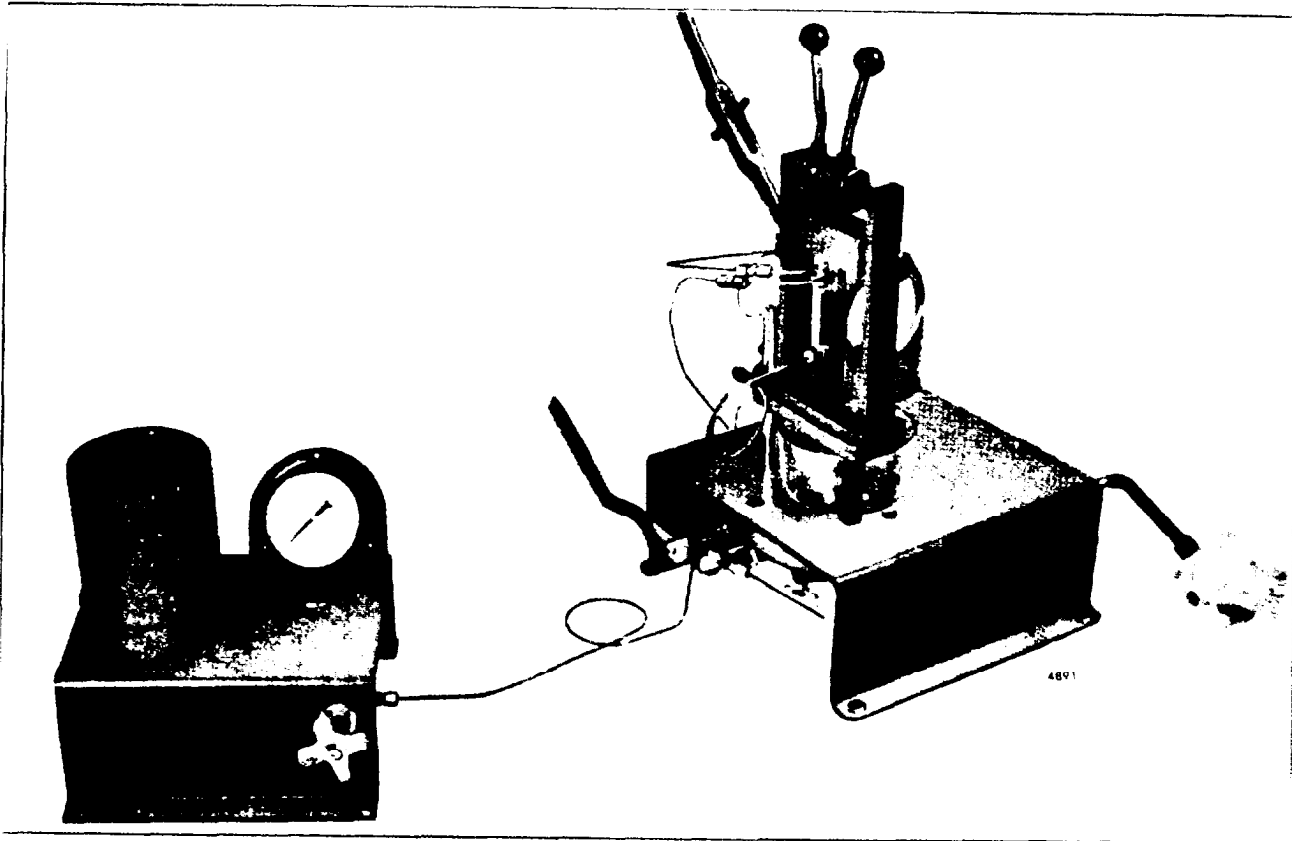


Fig. 14 - Injector Needle Valve Test with Auxiliary Tester J 22640

**CAUTION:** To prevent damage to the pressure gage, do not exceed 100 psi during this test.

**VISUAL INSPECTION OF PLUNGER**

An Injector which passes all of the previous tests should have the plunger checked visually, under a magnifying glass, for excessive wear or a possible chip on the bottom helix. There is a small area on the bottom helix and lower portion of the upper helix, if chipped, that will not be indicated in any of the tests.

Remove the plunger from the injector as follows:

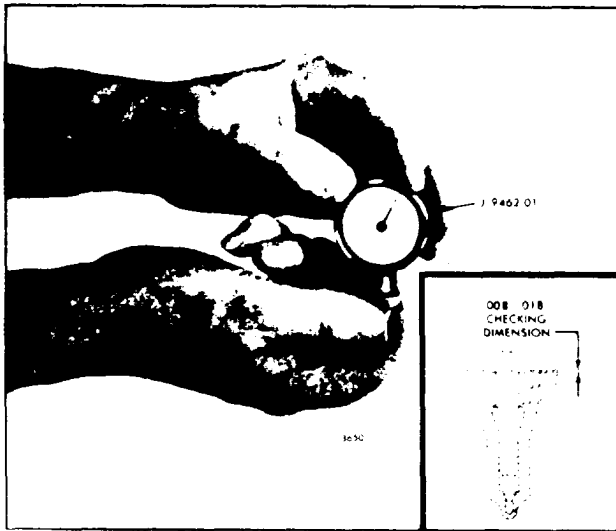


Fig. 15 - Checking Needle Valve Lift

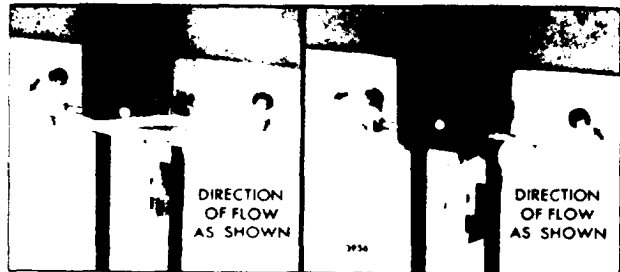


Fig 16 - Position of Fuel Flow Pipes in Comparator

1. Support the injector, right side up, in holding fixture J 223%.
2. Compress the follower spring. Then raise the spring above the stop pin with a screw driver and withdraw the pin (Fig. 11). Allow the spring to rise gradually.
3. Remove the injector from the holding fixture. Turn the injector upside down, to prevent the entry of dirt, and catch the spring and plunger as they drop out.
4. Inspect the plunger. If the plunger is chipped (Fig. 12), replace the plunger and bushing assembly
5. Reinstall the plunger, follower and spring.

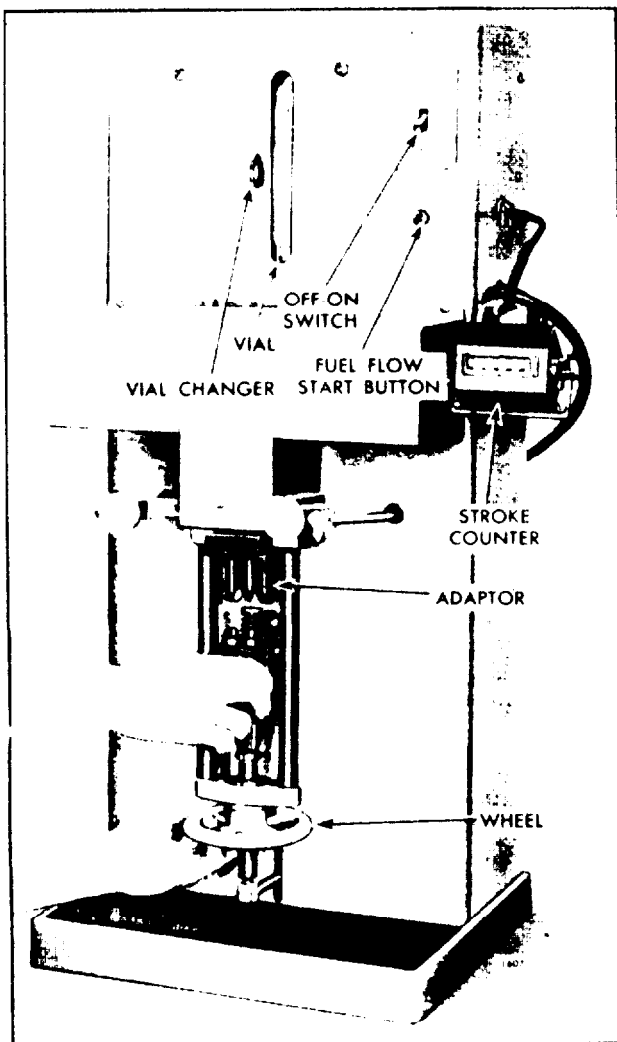


Fig. 17 - Placing Injector in Comparator  
J 7041

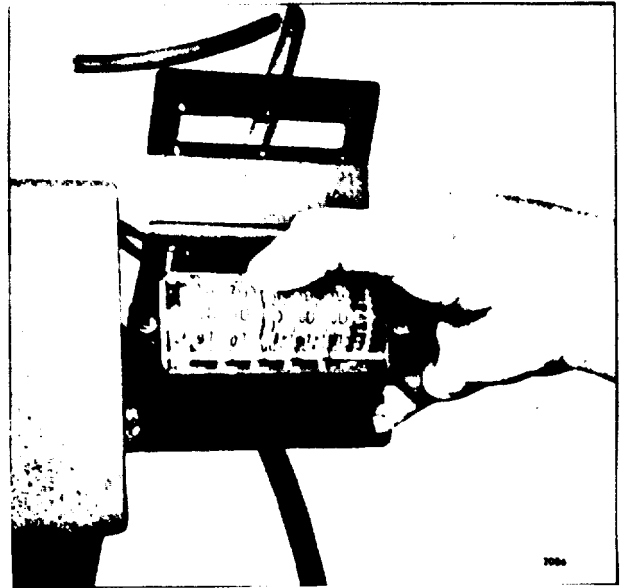


Fig. 18 - Setting Comparator Stroke Counter

### NEEDLE VALVE TEST

Remove the Injector nut and remove all of the parts below the Injector bushing as outlined under *Disassemble Injector..*

Clean all of the carbon off of the spray tip seat in the Injector nut as outlined under *Clean Injector Parts.*

If the spray pattern test indicated that tip cleaning is necessary, clean the carbon from the tip cavity below the needle valve and orifices as outlined under *Clean Injector Parts.*

With the injector nut and spray tip cleaned, assemble the check valve, check valve cage, spring, spring seat, spring cage, needle valve and tip assembly on auxiliary tester J 22640 (Fig. 13). Carefully pilot the Injector nut over the spray tip and valve parts and thread it on the body as shown in Fig. 13. Tighten the injector nut to 75-85 lb-ft torque.

Install the shield in the auxiliary tester as shown in Fig 14 and operate the pump handle until the spray tip valve has opened several times to purge the air from the system.

Operate the pump handle with smooth even strokes (40 strokes per minute) and note the pressure at which the needle valve opens. The valve should open between 2300 and 3300 psi. The opening and closing action should be sharp and produce a finely atomized spray.

If the valve opening pressure is below 2300 psi and/or

atomization is poor. the cause usually is a worn or fatigued valve spring. Replace the spring.

If the valve opening pressure is within 2300-3300 psi. proceed to check for spray tip seat leakage. Actuate the pump handle several times, then hold the pressure at 1500 psi for 15 seconds. Inspect the spray tip seat for leakage. There should be no fuel droplets although a slight wetting of the end of the valve tip is permissible.

If the spray tip seat is satisfactory, proceed to check the hold time for a pressure drop of from 1500 to 1000 psi. The time should not be less than 5 seconds. If the valve pressure drops from 1500 to 1000 psi in less than 5 seconds. replace the needle valve and tip assembly.

If the needle valve assembly passes the above test, the needle valve lift check can be omitted. To check the needle valve lift , use tool J 9462-011 (Fig. 15) as follows:

1. Zero the indicator by placing the bottom surface of the plunger assembly on a flat surface and zero the indicator dial.
2. Place the spray tip and needle valve assembly tight against the bottom of the gage with the quill of the needle valve in the hole in the plunger.
3. While holding the spray tip and needle valve assembly tight against the gage. read the needle valve lift on the Indicator The lift should be .008" to .018"; if it exceeds .018". the tip assembly must be replaced. If it is less than .008", inspect for foreign material between the needle valve and the tip seat.
4. If the needle valve lift is within the limits, install a new needle valve spring and recheck the valve opening pressure and valve action. Low valve opening pressure or poor atomization with a new spring and seat indicates the spray tip and needle valve assembly must be replaced.

Injector	Calibrator J 22410		Comparator J 7041	
	Min.	Max.	Min.	Mar.
N45	47	51	14	20

Fig. - 19 Fuel Output Check Chart

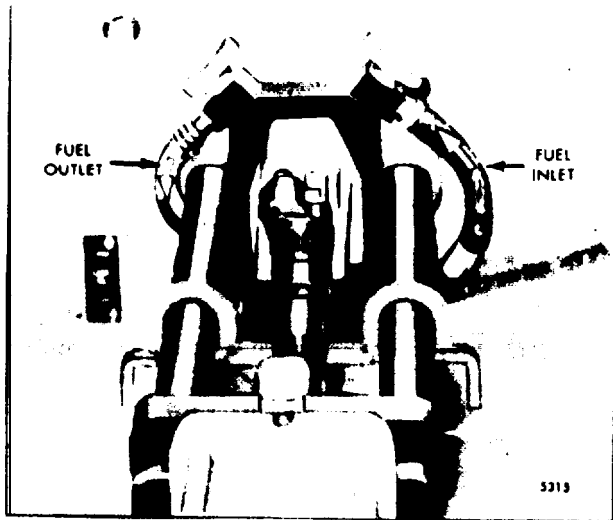


Fig. 20 - Position of Calibrator Fuel flow Pipes

Reassemble the Injector as outlined under *assemble Injector* and check it in the comparator or the calibrator.

**FUEL OUTPUT TEST**

The injector fuel output test can he performed in either the comparator J 7041 or the calibrator J 22410.

When injectors are removed form an engine for fuel output testing and, if satisfactory, reinstalled without disassembly, extreme care should be taken to avoid reversing the fuel flow. When the fuel flow is reversed. dirt trapped by the filter is back-flushed into the injector components.

Before removing an injector from the engine, note the direction of the flow. To avoid reversing the fuel flow when checking injector fuel output, use the appropriate adaptor. The position of the fuel pipes on the comparator (Fig. 16) depends on the adapter being used and the direction of fuel flow through the injector. The position of the braided fuel inlet tube and the plastic fuel outlet tube on the calibrator (Fig.20) depends on the adapter being used and the direction of fuel flow through the injector.

**NOTE:** The fuel passages in adaptors J 7041-61. J-7041-72 and J 7041-88 are drilled straight through the adapters. The fuel passages in adaptor J-7041-130 are cross drilled.

## GENERAL PROCEDURES

In many cases, a serviceman is justified in replacing parts with new material rather than attempting repair. However, there are times when a slight amount of reworking or reconditioning may save a customer considerable added expense. Crankshafts, cylinder liners and other parts are in this category. For example, if a cylinder liner is only slightly worn and within usable limits, a honing operation to remove the glaze may make it suitable for reuse, thereby saving the expense of a new part. Exchange assemblies such as injectors, fuel pumps, water pumps and blowers are also desirable service items.

Various factors such as the type of operation of the engine, hours in service and next overhaul period must be considered when determining whether new parts are installed or used parts are reconditioned to provide trouble-free operation.

For convenience and logical order in disassembly and assembly, the various sub-assemblies and other related parts mounted on the cylinder block will be treated as separate items in the various sections of the manual.

## DISASSEMBLY

Before any major disassembly, the engine must be drained of lubricating oil, coolant and fuel. On engines cooled by a heat exchanger, the fresh water system and raw water system must both be drained. Lubricating oil should also be drained from any transmission attached to the engine.

To perform a major overhaul or other extensive repairs, the complete engine assembly, after removal from the engine base and drive mechanism, should be mounted on an engine overhaul stand; then the

various sub-assemblies should be removed from the engine. When only a few items need replacement, it is not always necessary to mount the engine on an overhaul stand.

Parts removed from an individual engine should be kept together so they will be available for inspection and assembly. Those items having machined faces, which might be easily damaged by steel or concrete, should be stored on suitable wooden racks or blocks, or a parts dolly.

## CLEANING

Before removing any of the sub-assemblies from the engine (but after removal of the electrical equipment), the exterior of the engine should be thoroughly cleaned. Then, after each sub-assembly is removed and disassembled, the individual parts should be cleaned. Thorough cleaning of each part is absolutely necessary before it can be satisfactorily inspected. Various items of equipment needed for general cleaning are listed below.

The cleaning procedure used for all ordinary cast iron parts is outlined under *Clean Cylinder Block* in Section 1.1; any special cleaning procedures will be mentioned in the text wherever required.

### Steam Cleaning

A steam cleaner is a necessary item in a large shop and is most useful for removing heavy accumulations of grease and dirt from the exterior of the engine and its sub-assemblies.

### Solvent Tank Cleaning

A tank of sufficient size to accommodate the largest part that will require cleaning (usually the cylinder block) should be provided and provisions made for heating the cleaning solution to 180°F.-200°F.

Fill the tank with a commercial heavy-duty solvent which is heated to the above temperature. Lower large parts directly into the tank with a hoist. Place small parts in a wire mesh basket and lower them into the tank. Immerse the parts long enough to loosen all of the grease and dirt.

### Rinsing Bath

Provide another tank of similar size containing hot water for rinsing the parts.

### Drying

Parts may be dried with compressed air. The heat from the hot tanks will quite frequently complete drying of the parts without the use of compressed air.



### Rust Preventive

If parts are not to be used immediately after cleaning, dip them in a suitable rust preventive compound. The

rust preventive compound should be removed before installing the parts in an engine.

## INSPECTION

The purpose of parts inspection is to determine which parts can be used and which must be replaced. Although the engine overhaul specifications given throughout the text will aid in determining which parts should be replaced, considerable judgment must be exercised by the inspector.

The guiding factors in determining the usability of worn parts, which are otherwise in good condition, is the clearance between the mating parts and the rate of wear on each of the parts. If it is determined that the rate of wear will maintain the clearances within the specified maximum allowable until the next overhaul period, the reinstallation of used parts may be justified. Rate of wear of a part is determined by dividing the amount the part has worn by the hours it has operated.

Many service replacement parts are available in various undersize and/or oversize as well as standard sizes. Also, service kits for reconditioning certain parts and service sets which include all of the parts necessary to complete a particular repair job are available.

A complete discussion of the proper methods of precision measuring and inspection are outside the scope of this manual. However, every shop should be equipped with standard gages, such as dial bore gages, dial indicators, and inside and outside micrometers.

In addition to measuring the used parts after cleaning, the parts should be carefully inspected for cracks, scoring, chipping and other defects.

## ASSEMBLY

Following cleaning and inspection, the engine should be assembled using new parts as determined by the inspection.

Use of the proper equipment and tools makes the job progress faster and produces better results. Likewise, a suitable working space with proper lighting must be provided. The time and money invested in providing the proper tools, equipment and space will be repaid many times.

Keep the working space, the equipment, tools and engine assemblies and parts clean at all times. The area where assembly operations take place should, if

possible, be located away from the disassembly and cleaning operation. Also, any machining operations should be removed as far as possible from the assembly area.

Particular attention should be paid to storing of parts and sub-assemblies, after removal and cleaning and prior to assembly, in such a place or manner as to keep them clean. If there is any doubt as to the cleanliness of such parts, they should be recleaned.

When assembling an engine or any part thereof, refer to the table of torque specifications at the end of each section for proper bolt, nut and stud torques.

## WORK SAFELY

A serviceman can be severely injured if caught in the pulleys, belts or fan of an engine that is accidentally started. To avoid such a misfortune, take these precautions before starting to work on an engine:

Disconnect the battery from the starting system by removing one or both of the battery cables. With the electrical circuit disrupted, accidental contact with the starter button will not produce an engine start.

Make sure the mechanism provided at the governor for stopping the engine is in the stop

position. This will mean the governor is in the no-fuel position. The possibility of the engine firing by accidentally turning the fan or, in the case of vehicle application, by being bumped by another vehicle is minimized.

### Some Safety Precautions To Observe When Working On The Engine

1. Consider the hazards of the job and wear protective gear such as safety glasses, safety shoes, hard hat, etc. to provide adequate protection.

2. When lifting an engine, make sure the lifting device is fastened securely. Be sure the item to be lifted does not exceed the capacity of the lifting device.

3. Always use caution when using power tools.

4. When using compressed air to clean a component, such as flushing a radiator or cleaning an air cleaner element, use a safe amount of air. Recommendations regarding the use of air are indicated throughout the manual. Too much air can rupture or in some other way damage a component and create a hazardous situation that can lead to personal injury.

5. Avoid the use of carbon tetrachloride as a cleaning agent because of the harmful vapors that it releases. Use perchlorethylene or trichlorethylene. However, while less toxic than other chlorinated solvents, use these cleaning agents with caution. Be sure the work


area is adequately ventilated and use protective gloves, goggles or face shield, and apron.

Exercise caution against burns when using oxalic acid to clean the cooling passages of the engine.

6. Use caution when welding on or near the fuel tank. Possible explosion could result if heat build-up inside the tank is sufficient.

7. Avoid excessive injection of ether into the engine during start attempts. Follow the instructions on the container or by the manufacturer of the starting aid.

8. When working on an engine that is running, accidental contact with the hot exhaust manifold can cause severe burns. Remain alert to the location of the rotating fan, pulleys and belts. Avoid making contact across the two terminals of a battery which can result in severe arcing.

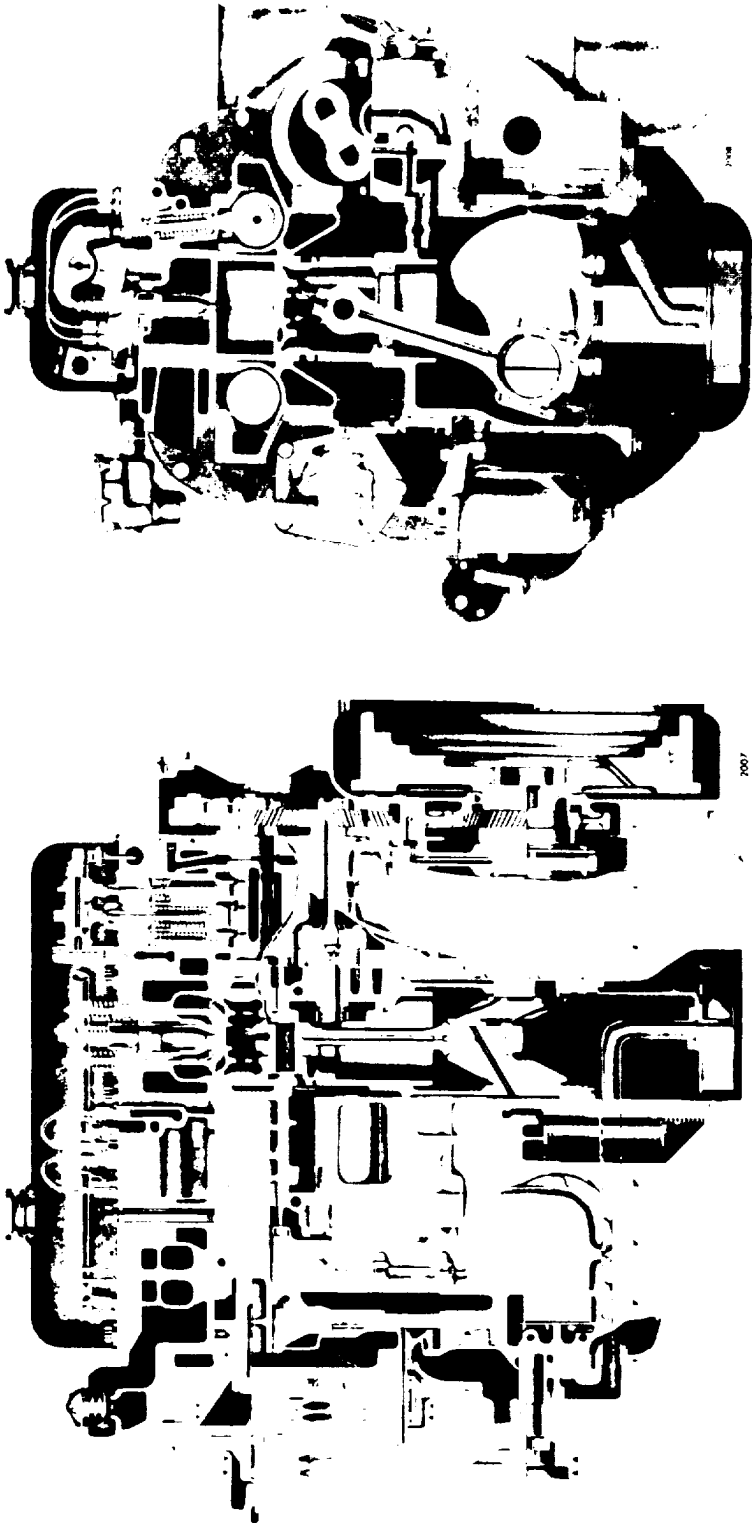

Cross Sections of a Typical In-Line Engine

# SECTION 1

## ENGINE (less major assemblies)

### CONTENTS

Cylinder Block .....	1.1
Cylinder Block End Plates .....	1.1.1
Air Box Drains.....	1.1.2
Cylinder Head .....	1.2
Valve and Injector Operating Mechanism .....	1.2.1
Exhaust Valves .....	1.2.2
Valve Rocker Cover .....	1.2.4
Crankshaft .....	1.3
Crankshaft Oil Seals .....	1.3.2
Crankshaft Main Bearings .....	1.3.4
Engine Front Cover (Lower) .....	1.3.5
Crankshaft Outboard Bearing Support .....	1.3.5.1
Crankshaft Pulley .....	1.3.7
Flywheel .....	1.4
Flywheel Housing .....	1.5
Piston and Piston Rings .....	1.6
Connecting Rod .....	1.6.1
Connecting Rod Bearings.....	1.6.2
Cylinder Liner .....	1.6.3
Engine Balance and Balance Weights .....	1.7
Gear Train and Engine Timing .....	1.7.1
Camshaft, Balance Shaft and Bearings .....	1.7.2
Camshaft and Balance Shaft Gears .....	1.7.3
Idler Gear and Bearing Assembly.....	1.7.4
Crankshaft Timing Gear .....	1.7.5
Accessory Drives .....	1.7.7
Engine Front Cover (Upper) .....	1.7.8
Shop Notes-Trouble Shooting-Specifications-Service Tools.....	1.0



**CYLINDER BLOCK**

The cylinder block (Fig 1) serves as the main structural part of the engine. Transverse webs provide rigidity and strength and ensure alignment of the block bores and bearings under load. Cylinder blocks for the two, three and four cylinder In-Line engines are identical in design and dimensions except for length.

The block is bored to receive replaceable wet-type cylinder liners. On the In-Line and 6V cast iron cylinder blocks, a water jacket surrounds the upper half of each cylinder liner.

The water jacket and air box are sealed off by a seal ring compressed between the liner and a groove in the block (Fig. 3).

An air box surrounding the lower half of the cylinder liners conducts the air from the blower to the air inlet ports in the cylinder liners. An opening in the side of the block opposite the blower on the In-Line engines and air box openings in both sides of the block on the V-type engines provide access to the air box and

permit inspection of the pistons and compression rings through the air inlet ports in the cylinder liners.

The camshaft and balance shaft bores are located on opposite sides near the top of the In-Line engine block.

The upper halves of the main bearing supports are cast integral with the block. The main bearing bores are line-bored with the bearing caps in place to ensure longitudinal alignment. Drilled passages in the block carry the lubricating oil to all moving parts of the engine, eliminating the need for external piping.

The top surface of the In-Line block is grooved to accommodate a block-to-head oil seal ring. Also, each water or oil hole is counterbored to provide for individual seal rings (Fig. 6).

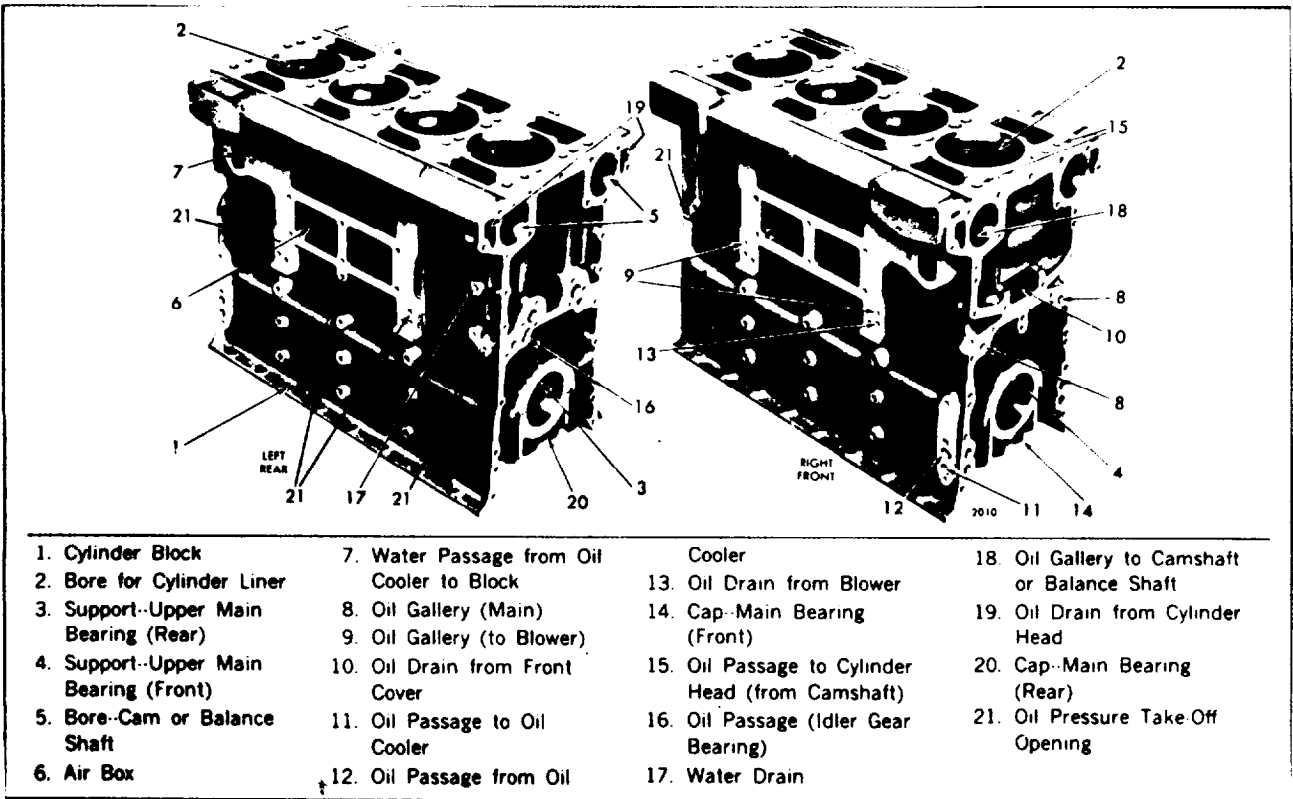


Fig. 1 - Cylinder Block (Four Cylinder Block Shown)

Each cylinder liner is retained in the block by a flange at its upper end, which seats in the counterbore in the

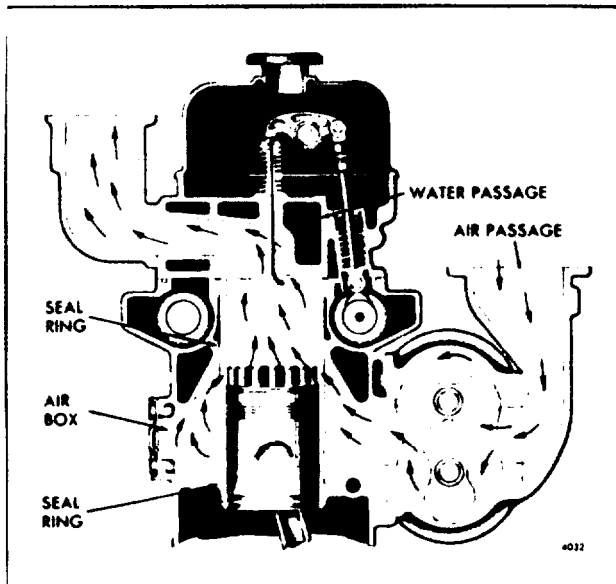


Fig. 3 - Air and Water Passages in In-Line Cylinder Block

block bore. An individual compression gasket is used at each cylinder.

When the cylinder head is installed, the gaskets and seal rings compress sufficiently to form a tight metal-to-metal contact between the head and the block.

The In-Line cylinder blocks were revised at the idler gear hub mounting pads, to increase the rigidity of the flywheel housing, by increasing two of the three 5/16" - 18 bolt holes of each mounting pad to 3/8" - 16 bolt holes (Fig. 7). The 3/8" - 16 bolt holes were incorporated in engines beginning with serial numbers 2D-903, 3D-011 and 4D-103. Revised end plates, end plate-to-block gaskets and flywheel housing are required with the change in bolt sizes. Only the revised cylinder blocks are available for service.

The In-Line cylinder blocks have also been revised to improve the breathing characteristics and increase the flow of the lubricating oil returning from the cylinder head to the engine oil sump by the addition of two vertical oil passages directly under the camshaft and balance shaft at the front end of the cylinder block (Fig. 8). Cylinder blocks with the vertical oil passages

were used in engines beginning with serial numbers 2D-4010, 3D-117 and 4D-348.

New service replacement cylinder block assemblies include the main bearing caps, bolts and washers and the camshaft bearings (bushings). The dowels and the necessary plugs are also included.

Since the cylinder block is the main structural part of the engine, the various sub-assemblies must be removed from the cylinder block when an engine is overhauled.

The hydraulically operated overhaul stand (Fig. 9) provides a convenient support when stripping a cylinder block. The engine is mounted in an upright position. It may then be tipped on its side, rotated in either direction 90° or 180° where it is locked in place and then, if desired, tipped back with either end or the oil pan side up.

### **Remove and Disassemble Engine**

Before mounting an engine on an overhaul stand, it

must be removed from its base and disconnected from the transmission or other driven mechanism. Details of this procedure will vary from one application to another. However, the following steps will be necessary:

1. Drain the cooling system.
2. Drain the lubricating oil.
3. Disconnect the fuel lines.
4. Remove the air silencer or air cleaner and mounting bracket.
5. Remove the turbocharger, if used.
6. Remove the blower on In-Line engines.
7. Disconnect the exhaust piping and remove the exhaust manifold(s).
8. Disconnect the throttle controls.
9. Disconnect and remove the starting motor, battery-charging generator and other electrical equipment.
10. Remove the air compressor, if used.
11. Remove the radiator and fan guard or the heat exchanger and other related cooling system parts.
12. Remove the air box drain tubes and fittings.



13. Remove the air box covers

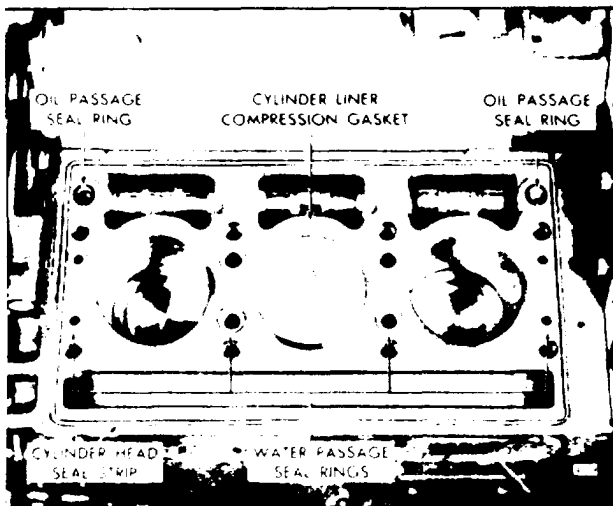


Fig. 6 - Cylinder Head Gaskets and Seals in Place on Cylinder Block

14. Disconnect any other lubricating oil lines, fuel lines or electrical connections.

15. Separate the engine from the transmission or other driven mechanism.

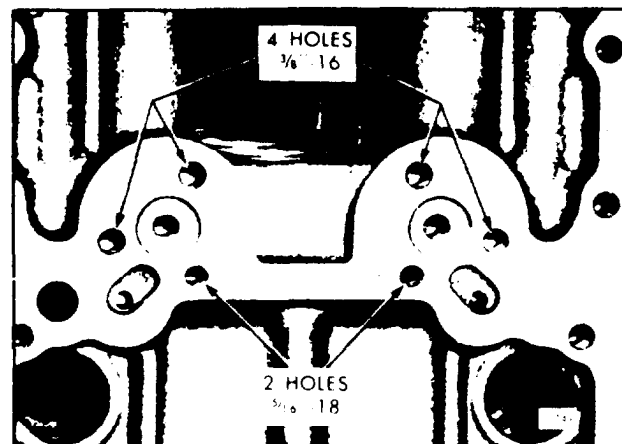


Fig. 7 - Location of the Four 3/8-16 Bolt Holes in Rear of Cylinder Block

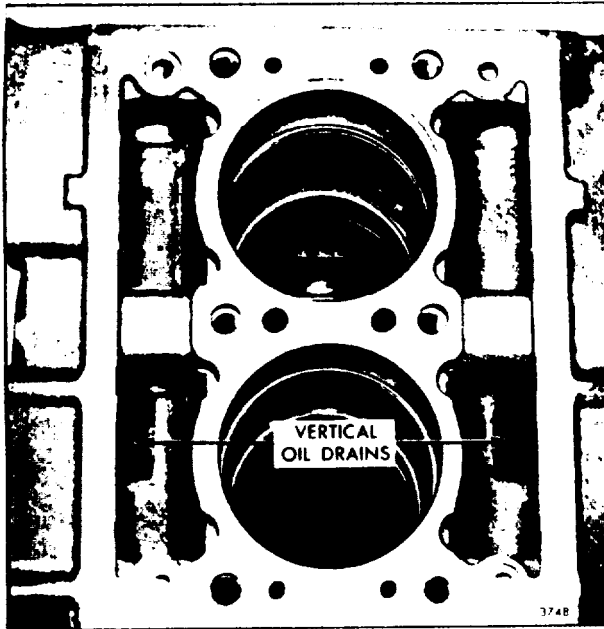


Fig. 8 - Vertical Oil Passages in Top of Cylinder Block

16. Remove the engine mounting bolts.
17. Use a chain hoist and suitable sling attached to the engine lifting brackets to lift the engine.

18. Place the side of the cylinder block against the adaptor plate on the overhaul stand (Fig. 9). Use adaptor plate J 7622 (In-Line engine), with overhaul stand J 6837-01.

19. Align the bolt holes in the adaptor plate with the holes in the cylinder block. Then install the 3/8 "-16 and 5/16 "-18 bolts, with a flat washer under the head of each bolt, and tighten them securely.

**CAUTION:** Be sure the engine is securely mounted to the overhaul stand before releasing the lifting sling. Severe injury to personnel and destruction of engine parts will result if the engine breaks away from the overhaul stand.

20. With the engine mounted on the overhaul stand, remove all of the remaining sub-assemblies and parts from the cylinder block.

The procedure for removing each sub-assembly from

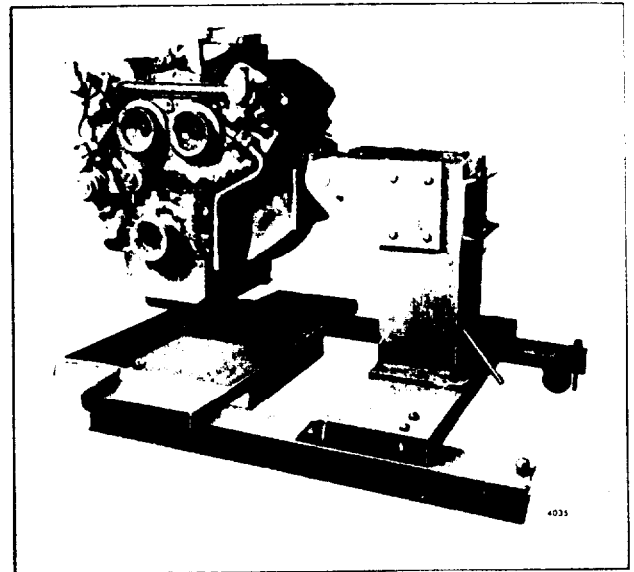


Fig. 9 - Engine Mounted on Overhaul Stand

the cylinder block, together with disassembly, inspection, repair and reassembly of each, will be found in the various sections of this manual.

After stripping, the cylinder block must be thoroughly cleaned and inspected.

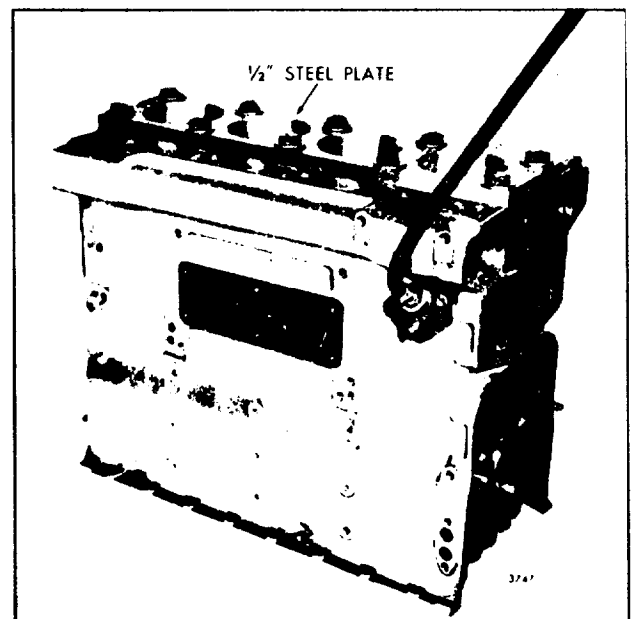


Fig. 10 - Cylinder Block Prepared for Pressure Test

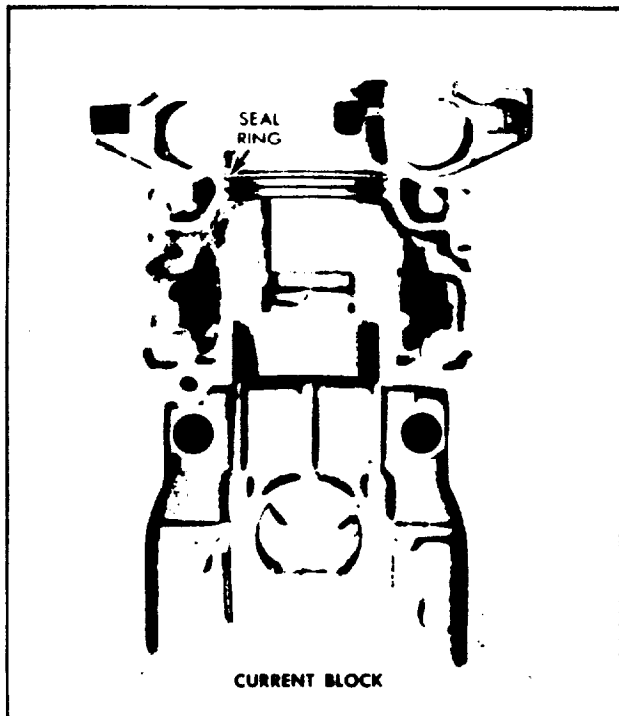


Fig. 11 - Location of Block Bore Seal Ring Groove

### Clean Cylinder Block

1. Remove all of the plugs (except cup plugs) and scrape all old gasket material from the block.
2. Clean the block with live steam. Make sure the oil galleries, air box floor and air box drain openings are thoroughly cleaned.

Jets are not machined in the camshaft and balance shaft bushing bores in the current In-Line cylinder blocks. Oil is directed to the cam followers through small slots incorporated in the camshaft and balance shaft bearings.

3. Dry the block with compressed air.

### Pressure Test Cylinder Block

After the cylinder block has been cleaned, it must be pressure tested for cracks or leaks by either one of two methods. In either method, it will be necessary to make a steel plate of 1/2" stock to cover each cylinder bank of the block (Fig. 10). The plate(s) will adequately seal the top surface of the block when used with cylinder liner compression gaskets and water hole

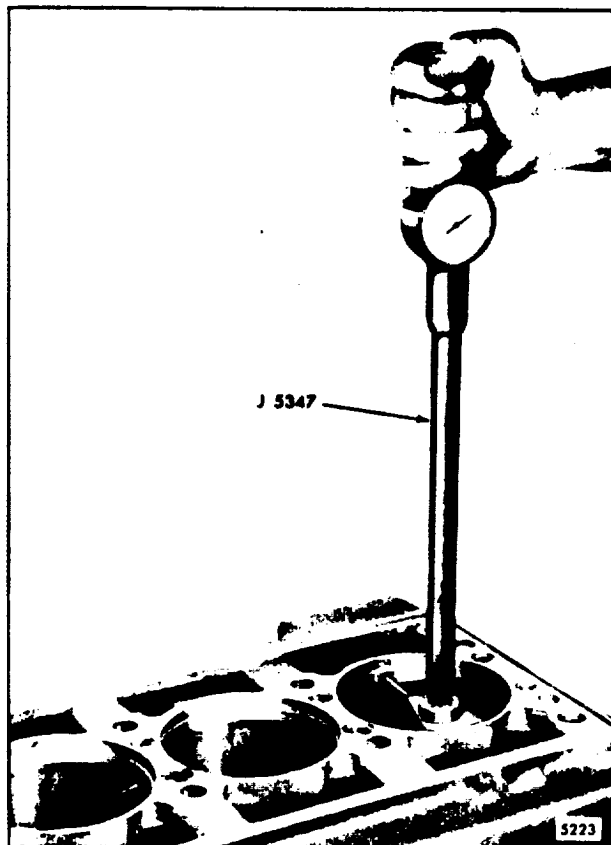


Fig. 12 - Checking Cylinder Block Bore with Tool J 5347

seal rings. It will also be necessary to use water hole cover plates and gaskets to seal the water inlet openings in the sides of the block. One cover plate should be drilled and tapped to provide a connection for an air line so the water jacket can be pressurized.

### METHOD "A"

This method may be used when a large enough water tank is available and the cylinder block is completely stripped of all parts.

1. Make sure the seal ring grooves in the cylinder bores of the block are clean. Then install new seal rings in the grooves (above the air inlet ports).

**NOTE:** The current blocks have two seal ring grooves above the air inlet ports of each cylinder bore. Only one seal ring is required, however. Install the seal ring in the upper groove, if it is in good condition; if the upper groove is pitted or eroded, install the seal ring in the lower groove.

2. Apply a light coating of hydrogenated vegetable

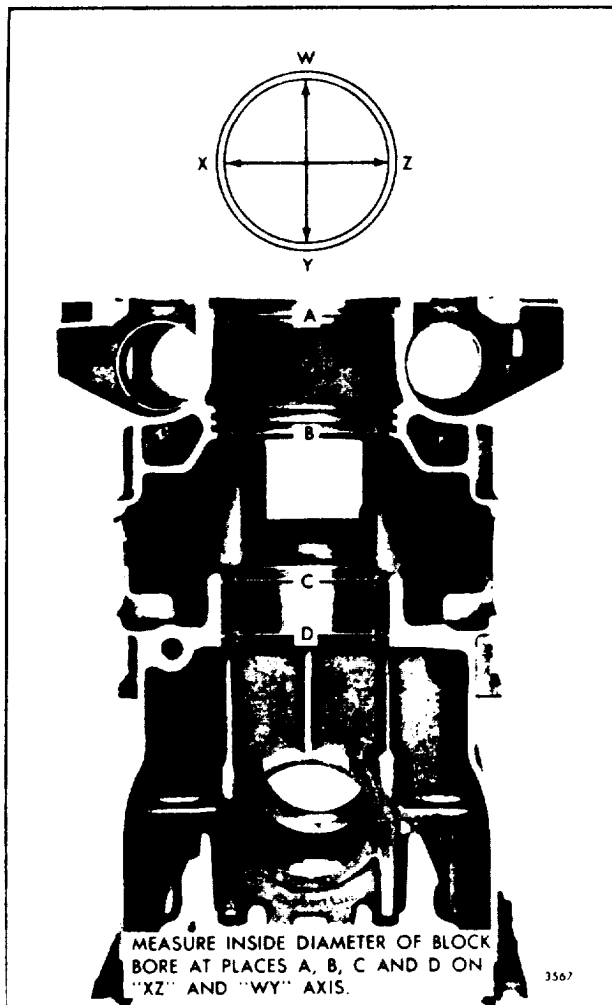


Fig. 13 - Block Bore Measurement Diagram

type shortening or permanent type antifreeze solution to the seal rings.

3. Slide the cylinder liners into the block, being careful not to roll or damage the seal rings. Install new compression gaskets and water hole seal rings in the counterbores in the top surface of the block.

4. Secure the plate(s) on the top of the block with 5/8 "-11 bolts and flat washers.

5. Install the water hole cover plates and gaskets on the sides of the block.

6. Immerse the cylinder block for twenty minutes in a tank of water heated to 180° - 200° F.

7. Attach an air line to the water hole cover plate and apply 60 psi air pressure to the water jackets and observe the water in the tank for bubbles which will

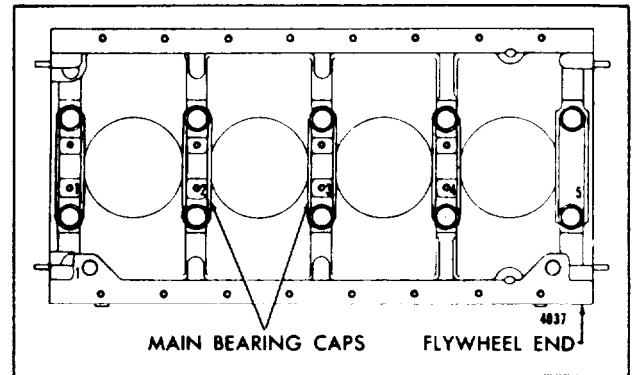


Fig. 14 - Typical Cylinder Block Markings

indicate cracks or leaks. A cracked cylinder block must be replaced by a new block.

8. Remove the block from the water tank. Then remove the plates, seals, gaskets and liners and blow out all of the passages in the block with compressed air.

9. Dry the cylinder liners with compressed air and coat them with oil to prevent rust.

#### METHOD "B"

This method may be used when a large water tank is unavailable, or when it is desired to check the block for cracks without removing the engine from the equipment which it powers. However, it is necessary to remove the cylinder head(s), blower, oil cooler, air box covers and oil pan.

1. Prepare the block as outlined in Method "A". However, before installing the large sealing plate, fill the water jacket with a mixture of water and one gallon of permanent type antifreeze. The antifreeze will penetrate small cracks and its color will aid in detecting their presence.

2. Install the plate(s) and water hole covers as outlined in Method "A".

3. Apply 60 psi air pressure to the water jacket and maintain this pressure for at least two hours to give the water and antifreeze mixture ample time to work its way through any cracks which may exist.

4. At the end of this test period, examine the cylinder bores, air box, oil passages, crankcase and exterior of the block for presence of the water and antifreeze mixture which will indicate the presence of cracks. A cracked cylinder block must be replaced by a new block.

5. After the pressure test is completed, remove the

plates and drain the water jacket. Then remove the liners and seal rings and blow out all of the passages in the block with compressed air.

6. Dry the cylinder liners with compressed air and coat them with oil to prevent rust.

### Inspect Cylinder Block

After cleaning and pressure testing, inspect the cylinder block.

1. Check the block bores as follows:

- a. Make sure the seal ring grooves (Fig. 11) are thoroughly clean. Then inspect the grooves and lands for evidence of pitting and erosion. Two grooves are provided above the air inlet ports of each cylinder bore in the current block. The single groove formerly below the air inlet ports has been eliminated. However, a cylinder liner seal ring is required in the upper groove only. The lower groove (on the current block) is provided for the seal ring if inspection reveals extensive pitting or erosion along the upper land or inner surface of the upper groove. If both grooves are eroded to the extent that sealing is affected, then the block must be replaced.
- b. Measure the entire bore of each cylinder with cylinder bore gage J 5347 (Fig. 12) which has a dial indicator calibrated in .0001 " increments. Use dial bore gage setting tool J 23059 to preset the cylinder bore gage to zero. Measure each block bore at the positions indicated in Fig. 13, on axis 90° apart. If the diameter does not exceed 4.5235 " at position "A", 4.4900 " at position "B" (and a sealing problem hasn't occurred), or 4.3595 " at position "C" and "D", then the block may be reused. Also, the taper and out of round must not exceed .0015 "

2. Check the top of the block for flatness with an accurate straight edge and a feeler gage. The top surface must not vary more than 003 " transversely and not over .006 " (3-53 engine) longitudinally.

3. Make sure the cylinder liner counterbores in the block are clean and free of dirt. Then check the depth. The depth must be .300 " to .302 " and must not vary more than .0015 " throughout the entire circumference. The counterbored surfaces must be smooth and square with the cylinder bore within .001 " total indicator reading. There must not be over .001 " difference between any two adjacent cylinder counterbores, when measured along the cylinder longitudinal centerline of the cylinder block.

4. Check the main bearing bores as follows:

- a. Check the bore diameters with the main bearing caps in their original positions. Lubricate the bolt threads and bolt head contact areas with a small quantity of International Compound No. 2, or equivalent. Then install and tighten the bolts to the specified torque. When making this check, do not install the main bearing cap stabilizers. The specified bore diameter is 3.251 " to 3.252 " (In-Line engine).

If the bores do not fall within these limits, the cylinder block must be rejected.

**CAUTION:** Main bearing cap bolts are especially designed for this purpose and must not be replaced by ordinary bolts. Effective with engine serial numbers 6D-27030 and 8D-1155, a new hexagon head bolt and hardened steel washer are being used in place of the former 12-point flange type main bearing cap bolt.

**NOTE:** Bearing caps are numbered to correspond with their respective positions in the cylinder block. It is imperative that the bearing caps are reinstalled in their original positions to maintain the main bearing bore alignment. The number of the front main bearing cap is also stamped on the face of the oil pan mounting flange of the cylinder block, adjacent to its permanent location in the engine as established at the time of manufacture. The No. 1 main bearing cap is always located at the end opposite the flywheel end of the cylinder block (Fig. 14).

- b. Finished and unfinished main bearing caps are available for replacing broken or damaged caps. When fitting a finished replacement bearing cap, it may be necessary to try several caps before one will be found to provide the correct bore diameter and bore alignment. If a replacement bearing cap is installed, be sure to stamp the correct bearing position number on the cap.

**NOTE:** Use the unfinished bearing caps for the front and intermediate bearing positions. The finished bearing caps, machined for the crankshaft thrust washers, are to be used in the rear bearing position.

- c. Main bearing bores are line-bored with the bearing caps in place and thus are in longitudinal alignment. Bearing bores may be considered properly aligned with one another if the crankshaft can be rotated freely by hand after new bearing shells have been installed and lubricated and the bearing caps have been secured in place and the bolts tightened to the specified torque. If a main bearing bore is more

than .001 " out of alignment, the block must be line-bored or scrapped. Misalignment may be caused by a broken crankshaft, excessive heat or other damage.

- d. If the main bearing bores are not in alignment or a replacement bearing cap is used, the block must be line-bored. Install the bearing caps in their original positions (without the bearing cap stabilizers) and tighten the bolts to the specified torque (Section 1.0). Line-bore the block, but do not remove more than .001 " stock. After boring, all bores must be within the specified limits of 3.251 " to 3.252 " (In-Line block).

5. Replace loose or damaged dowel pins. The dowels at the ends of the cylinder block must extend .680 " from the cylinder block face.

The dowels used to retain the crankshaft thrust washers on the rear main bearing cap must extend .107 " to .117 " from the surface of the bearing cap.

6. Check all of the machined surfaces and threaded holes in the block. Remove nicks and burrs from the machined surfaces with a file. Clean-up damaged threads in tapped holes with a tap or install helical thread inserts.

7. After inspection, if the cylinder block is not to be used immediately, spray the machined surfaces with engine oil. If the block is to be stored for an extended period of time, spray or dip it in a polar type rust preventive such as Valvoline Oil Company's "Tectyl 502-C", or equivalent. Castings free of grease or oil will rust when exposed to the atmosphere.

### Assemble and Install Engine

After the cylinder block has been cleaned and inspected, assemble the engine as follows:

**NOTE:** Before a reconditioned or new service replacement cylinder block is used, steam clean

it to remove the rust preventive and blow out the oil galleries with compressed air.

1. Mount the block on the overhaul stand.
2. If a new service replacement block is used, stamp, the engine serial number and model number on the upper rear corner of the In-Line block.

Also stamp the position numbers on the main bearing caps (Fig 14) and the position of the No. 1 bearing on the oil pan mounting flange of the block.

3. Install all of the required plugs and drain cocks. Use a good grade of sealing compound on the threads of the plugs and drain cocks. If a new service replacement block is used, make sure the top surface is plugged correctly to prevent low oil pressure or the accumulation of abnormal quantities of oil in the cylinder head.

4. Clean and inspect all of the engine parts and sub-assemblies and, using new parts as required, install them on the cylinder block by reversing the sequence of disassembly. The procedures for inspecting and installing the various parts and sub-assemblies are outlined in the following sections of this manual.

5. Use a chain hoist and suitable sling to transfer the engine to a dynamometer test stand.

6. Install the air box covers and tighten the bolts. On In-Line engines, tighten the bolts to 12-16 lb-ft torque.

7. Complete the engine build-up by installing all remaining accessories, fuel lines, electrical connections, controls etc.

8. Operate the engine on a dynamometer, following the RUN-IN procedure outlined in Section 13.2.1.

9. Reinstall the engine in the equipment which it powers.



## CYLINDER BLOCK END PLATE

A flat steel plate, bolted to the rear end of the cylinder block, provides a support for the flywheel housing. A gasket is used between the block and the end plate.

### Inspection

When the end plate is removed, it is essential that all of the old gasket material be removed from both surfaces of the end plate and the cylinder block. Clean the end plate as outlined under Clean Cylinder Block in Section 1.1.

Inspect both surfaces of the end plate for nicks, dents, scratches or score marks and check it for warpage. Check the plug nuts in the end plate for cracks or damaged threads. If nicks or scratches on the sealing surfaces of the end plate are too deep to be cleaned up, or the plug nuts are damaged, replace the end plate or plug nuts.

When installing a plug nut, support the end plate on a solid flat surface to avoid distorting the plate. Then press the nut in the end plate until the head on the nut seats on the end plate.

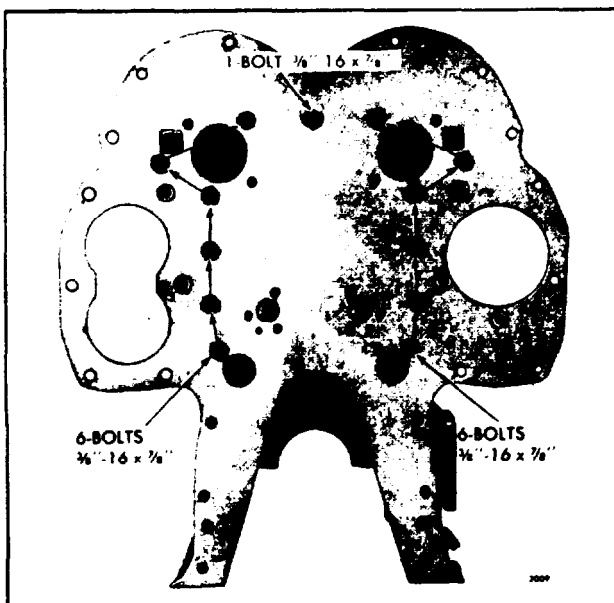


Fig. 1 - Cylinder Block Rear End Plate Mounting (In-Line Engine)

### Install End Plate

1. Affix a new gasket to the end of the cylinder block (flywheel end), using a non-hardening gasket cement. Also apply an even coating of gasket cement to the outer surface of the gasket (the surface next to the end plate).

2. Align the dowel pin holes in the end plate with the dowel pins in the cylinder block. Then start the end plate over the dowel pins and push it up against the cylinder block.

**NOTE:** When installing the end plate, the heads of the plug nuts at the top of the end plate on the In-line engine

should always face the forward end of the cylinder block.



3. On In-line engines, refer to Fig. 1 and install the 3/8 "-16 x 7/8 " bolts with lock washers. Tighten the bolts to 30-35 lb-ft torque.

**NOTE:** On In-line engines built prior to engine serial numbers 2D-903, 3D-011 and 4D-103, the top center end plate attaching bolt was 3/8 "-16 x 3/4 ". Do not use a longer bolt at this location on engines built prior to the above engine serial numbers.

4. On a V-type engine, refer to Fig. 2 for the location and install the 3/8 "-16 x 1 " bolts with lock washers. Also install the two special washers and two 1/2 "-13 x 1-1/2 " bolts as shown when the fuel pump is driven off the camshaft, or one special washer and bolt when the fuel pump is driven by the accessory gear. Tighten the 3/8 "-16 bolts to 30-35 lb-ft torque and the 1/2 "-13 bolts to 71-75 lb-ft torque.

### AIR BOX DRAINS

During normal engine operation, water vapor from the air charge, as well as a slight amount of fuel and lubricating oil fumes, condenses and settles on the bottom of the air box. This condensation is removed by the air box pressure through air box drain tubes mounted on the sides of the cylinder block.

The air box drains must be kept open at all times, otherwise water and oil that may accumulate will be drawn into the cylinders.

One drain tube is used on an In-line engine (Fig. 1).

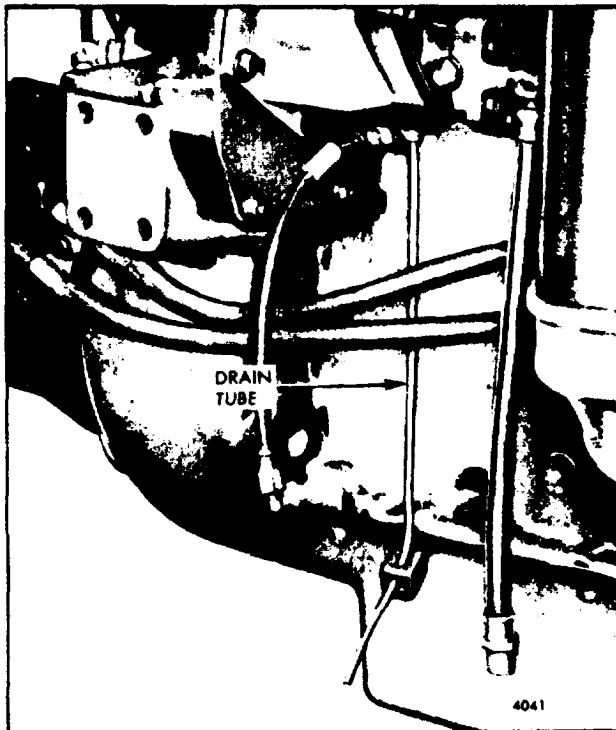


Fig. 1 - Air Box Drain Tube Mounting (In-Line Engines)

**Inspection**

A periodic check for air flow from the air box drain tubes should be made (refer to Section 15.1).

## CYLINDER HEAD

The cylinder head (Fig. 1) is a one-piece casting. It may be removed from the engine as an assembly containing the cam followers, cam follower guides, rocker arms, exhaust valves and injectors. The head is securely held to the top of the cylinder block with bolts.

Located in the cylinder head are the exhaust valves, a fuel injector and three rocker arms for each cylinder. One rocker arm operates the injector plunger; the

other two operate the exhaust valves. The rocker arms are operated by a camshaft through cam followers and push rods.

Exhaust valve inserts (valve seats), pressed into the cylinder head, permit accurate seating of the valves under varying conditions of temperature and materially prolong the life of the cylinder head. The inserts are ground to very close limits and their freedom from

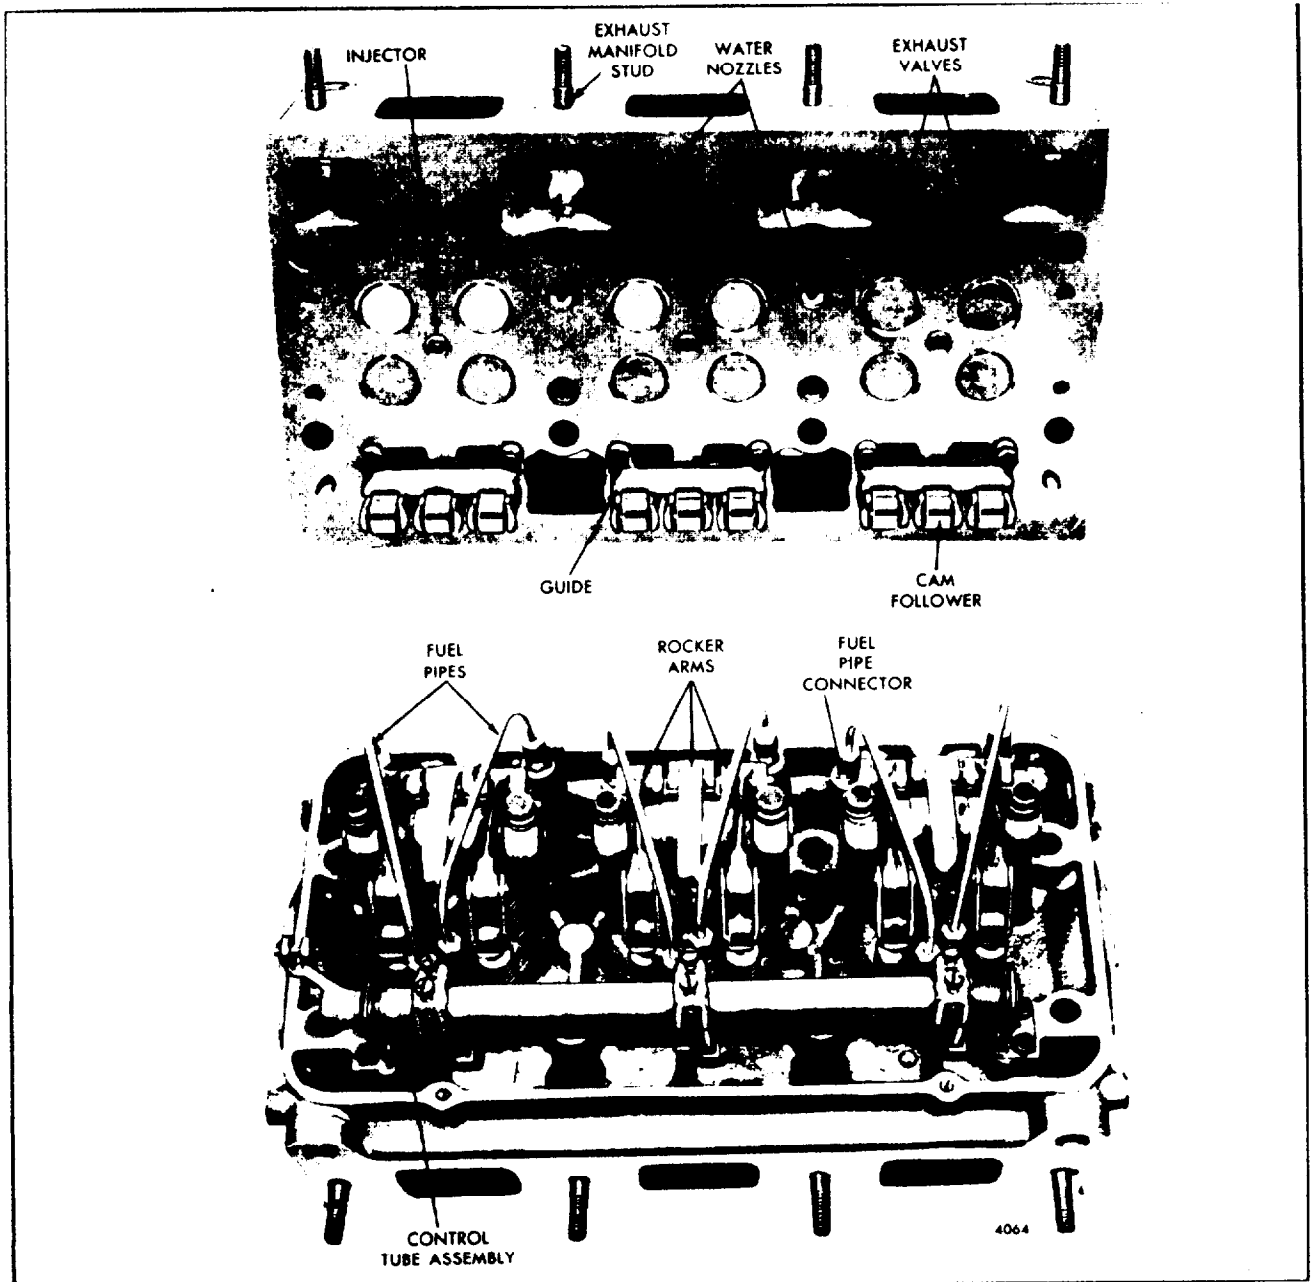


Fig. 1 - Typical Four-Valve Cylinder Head Assembly

warping, under ordinary conditions, reduces valve reconditioning to a minimum.

To ensure efficient cooling, each fuel injector is inserted into a thin-walled tube which passes through the water space in the cylinder head. The lower end of the injector tube is pressed into the cylinder head and flared over; the upper end is flanged and sealed with a neoprene seal. The flared lower end and sealed upper end prevent water leaks around the copper tube.

The exhaust passages from the exhaust valves of each cylinder lead through a single port to the exhaust manifold. The exhaust passages, exhaust valve inserts and injector tubes are completely surrounded by cooling system water.

In addition to being surrounded by water, cooling of these areas is further assured by the use of double jet spray nozzles installed between each pair of cylinders in the water inlet ports of four valve cylinder heads. Nozzle holes are so positioned in the cylinder head that the comparatively cool water which enters the head is directed at high velocity against the sections of the head which are subjected to the greatest heat.

To seal compression between the cylinder head and the cylinder liner, separate laminated metal gaskets are provided at each cylinder. Water and oil passages between the block and head are sealed with synthetic rubber seal rings which fit into counterbored holes in the block. A synthetic rubber seal fits into a milled groove in the block near the outer edge of the area covered by the cylinder head. When the cylinder head is pulled down, a positive leakproof metal-to-metal contact is assured between the head and block.

Certain service operations on the engine require the removal of the cylinder head. These operations are:

1. Removing and installing the pistons.
2. Removing and installing the cylinder liners.
3. Removing and installing the exhaust valves.
4. Removing and installing the valve guides.
5. Reconditioning the exhaust valves and valve seats.
6. Replacing the injector tubes.
7. Installing new cylinder head gaskets.
8. Removing and installing a camshaft.

### **Cylinder Head Maintenance**

Engine temperatures should be maintained between 160° and 185°F. and the cooling system should be inspected daily and kept full at all times.

Unsuitable water in the cooling system may result in lime and scale formation which prevent proper cooling. The cylinder head should be inspected around the exhaust valve water jackets. This can be done by removing an injector tube. Where inspection discloses such deposits, a reliable non-corrosive scale remover should be used to remove the deposits from the cooling system of the engine, since a similar condition will exist in the cylinder block and other components of the engine. Refer to Section 13.3 for engine coolant recommendations.

Adding cold water to a hot engine may result in head cracks. Water must be added slowly to a hot engine to avoid rapid cooling which will result in distortion and cracking of the cylinder head (and cylinder block).

Loose or improperly seated injector (tubes may result in compression leaks into the cooling system and cause a loss of engine coolant. The tubes should be tight and properly seated. Refer to Section 2.1.4.

The development of cracks in the cylinder head may be caused by abnormal operating conditions or through neglect of certain maintenance items. If this type of failure should occur, a careful inspection should be made to determine the cause so that a recurrence of the failure will be prevented.

Overtightening the injector clamp bolts may also result in head cracks. Always use a torque wrench to tighten the bolts to the specified torque.

Other conditions which may eventually result in head cracks are:

1. Excess fuel in the cylinders due to leaking injectors.
2. Oil pull-over due to an overfilled air cleaner sump, or improper viscosity oil in the air cleaner.
3. Neglected cylinder block air box drains which allow accumulated oil to be drawn into the cylinders.

### **Remove Cylinder Head**

Due to various optional and accessory equipment used on the different engine models, only the general steps for removal of the cylinder head are covered. If the engine is quipped with special accessories that affect cylinder head removal, note the position of each before disconnecting or removing them to assure the correct reinstallation.

1. Disconnect the exhaust piping at the exhaust manifold.
2. Drain the cooling system.
3. Remove the air cleaner(s) or air silencer.
4. Disconnect the fuel lines at the cylinder head.
5. Remove the thermostat housing and the thermostat as an assembly.
6. Clean and remove the valve rocker cover.
7. Disconnect and remove the fuel rod between the governor and the injector control tube lever. Remove the fuel rod cover, if used.
8. Remove the exhaust manifold.
9. Remove the injector control tube and brackets as an assembly.
10. If the cylinder head is to be stripped for reconditioning of valves and valve seats or for a complete cylinder head overhaul, remove the fuel pipes and injectors at this time. Refer to Sections 2.1 or 2.1.1 for removal of the injectors.
11. Remove the cylinder head bolts. Then, lift the cylinder head off of the cylinder block, with lifter tool J 22062-01 (Fig. 2).

**CAUTION:** When resting the cylinder head assembly on a bench, protect the cam follower rollers and the injector spray tips by resting the valve side of the head on 2" thick wood blocks.

12. Remove the cylinder head compression gaskets, oil seals and water seals.

### Disassemble Cylinder Head

If a cylinder head is removed for inspection and possible repair or replacement, remove the following parts:

1. Fuel injectors, if not previously removed.
2. Fuel connectors.
3. Cam follower guides and cam followers.
4. Rocker arms, rocker arm shafts, brackets, push rods, push rod springs, spring seats and spring seat retainers.
5. Exhaust valves and valve springs.

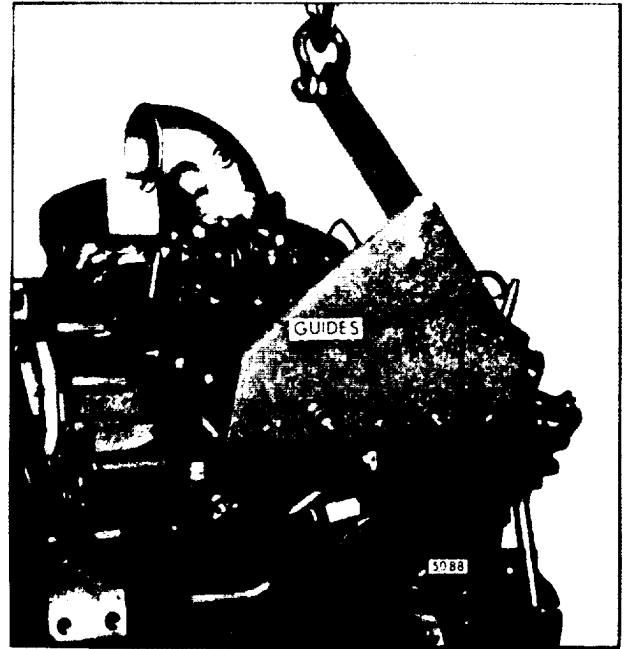


Fig. 2 - Lifting Cylinder Head Assembly Off Cylinder Block with Tool J 22062-01

The removal procedures to be followed, when removing the parts mentioned above, are covered in their respective sections of this manual.

### Clean Cylinder Hood

After the cylinder head has been stripped of all the component parts and all of the plugs (except cup plugs) have been removed, steam clean the head thoroughly.

Thoroughly clean a new service cylinder head to remove all of the rust preventive compound, particularly from the integral fuel manifolds, before the plugs are installed in the fuel manifolds and the head is mounted on the engine. A simple method of removing the rust preventive compound is to immerse the head in solvent, oleum or fuel oil; then, go over the head and through all of the openings with a soft bristle brush. A suitable brush for cleaning the fuel manifolds can be made by attaching a 1/8" brass rod to brush J 8152. After cleaning, dry the cylinder head with compressed air.

### Inspect Cylinder Head

1. Check the cylinder head for leaks as follows:
  - a. Seal off the water holes in the head with steel plates and suitable rubber gaskets held in place by bolts.

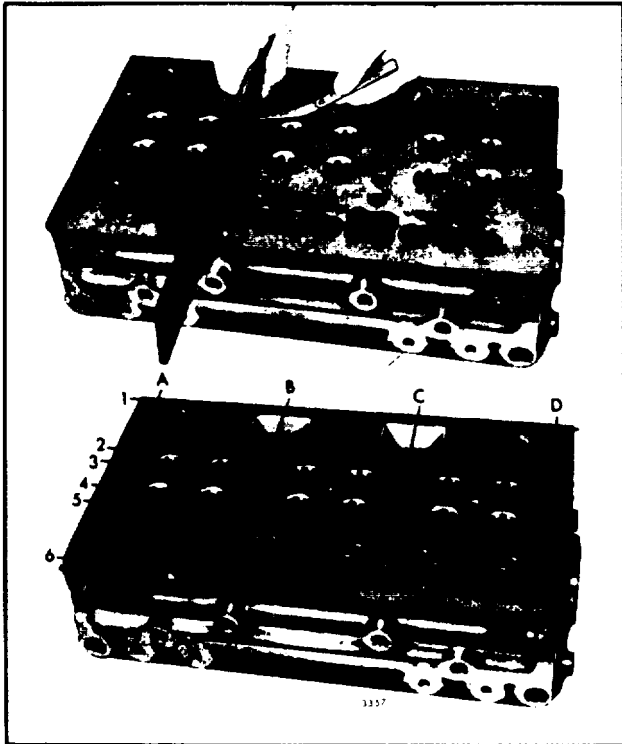


Fig. 3 - Checking Bottom Face of Cylinder Head for Warpage

- b. Install dummy or scrap injectors to ensure seating of the injector tubes. Dummy injectors may be made from old injector nuts and bodies - the injector spray tips are not necessary. Tighten the injector clamp bolts to 20-25 lb-ft torque.
- c. Drill and tap into one of the water hole cover plates for an air hose connection and apply 80-100 psi air pressure to the water jacket. Then, immerse the head in a tank of water previously heated to 180-200°F. for twenty minutes to thoroughly heat the cylinder head. Observe the water in the tank for bubbles indicating cracks or leaks.
- d. Remove the cylinder head from the tank and dry it with compressed air.
- e. If inspection revealed cracks, replace the cylinder head.
- f. Replace any leaking injector tubes as outlined in Section 2.1.4.

Over a prolonged period of operation, the cylinder head may assume a contour to match that of the cylinder block, which is normal. However, if the cylinder head is allowed to become overheated because of coolant loss, the resultant high temperatures cause

stresses to occur in the casting which will affect the flatness of the head.

2. Check the bottom (fire deck) of the cylinder head for flatness as follows:

- a. Use an accurate straightedge and feeler gage J 3172 to check for transverse warpage at each end and between all of the cylinders. Also, check for longitudinal warpage in six places as shown in Fig. 3. Maximum allowable warpage is given in the following chart:

Engine	Maximum Longitudinal Warpage	Maximum Transverse Warpage
3-53	.005"	.004"

- b. The maximum allowable warpage limits should be used as a guide in determining the advisability of reinstalling the head on the engine or of refacing it. The number of times a cylinder head may be refaced will, of course, depend upon the amount of stock removed from the head during previous reworking operations.
- c. If the cylinder head is to be refaced, remove the injector tubes prior to machining. Not over .020" of metal should be removed from the fire deck of the cylinder head. The distance from the top to the bottom (fire deck) of the cylinder head must not be less than 4.376" , as shown in (Fig. 4). Stamp the amount of stock removed on the face of the fire deck near the outer edge of the head, in an area not used as a sealing surface.
- d. After a cylinder head has been refaced and new injector tubes have been installed as outlined in Section 2.1.4, pressure check the cylinder head as outlined in Step 1.

3. Inspect the cam follower bores in the cylinder head for scoring or wear. Light score marks may be cleaned

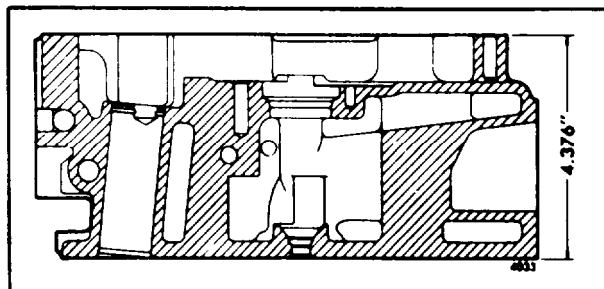


Fig. 4 - Minimum Distance Between Top and Bottom Faces of Cylinder Head

up with crocus cloth wet with fuel oil. If the bores are excessively scored or worn so that the cam follower-to-head clearance exceeds .006", replace the cylinder head.

4. Inspect the valve seat inserts for cracks or burning. Also, check the valve guides for scoring.

5. Check the water nozzles in a four-valve cylinder head to be sure they are not loose. Water nozzles are used only in the passages between the cylinders. If necessary, install or replace the water nozzles as follows:

- a. Be sure the water inlet ports in the bottom of the head are clean and free of scale. The water holes may be cleaned up with a 5/8" diameter drill. Break the edges of the holes slightly.
- b. If the water holes in the head have been enlarged by corrosion, use a wooden plug or other suitable tool to expand the nozzles so that they will remain tight after installation.
- c. Press the nozzles in place with the outlet holes positioned as shown in Fig. 5. The angle between the outlet holes in the nozzle is 90°. Press the nozzles from flush to 1/32" below the bottom surface of the cylinder head.

6. Inspect the parts removed from the cylinder head before they are reinstalled in the old head or transferred to a new cylinder head.

### Assemble Cylinder Head

New service cylinder heads include valve guides, valve seat inserts, water nozzles, injector tubes and the necessary plugs.

**CAUTION:** When installing the plugs in the fuel manifolds, apply a small amount of sealant merchandized as a "dual purpose sealer" to the threads of the plugs only. Work the sealant into the threads and wipe off the excess with a clean, lint-free cloth so that the sealant will not be washed into the fuel system and result in damage to the injectors.

When a new cylinder head is to be used, remove the parts listed below from the old head and install them in the new head. If the old cylinder head is to be reused, install the parts in the old head prior to assembling the head on the cylinder block.

1. Exhaust manifold studs.

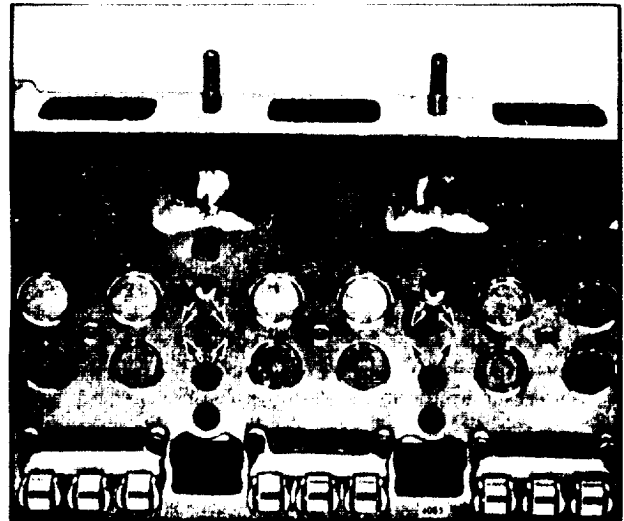


Fig. 5 - Correct Installation of Water Nozzles in Four-Valve Cylinder Head

2. Exhaust valves and springs (Section 1.2.2).

3. Install the fuel injectors at this time or after installing the cylinder head (Sections 2.1 or 2.1.1).

4. Cam followers, cam follower guides, push rod assemblies, rocker arm shafts and rocker arms; do not tighten the rocker arm bracket bolts at this time (Section 1.2.1).

5. Place new washers on the fuel connectors, then install the fuel connectors and tighten them to 20-28 lb-ft torque.

### Pre-Installation Inspection

Perform the following inspections just prior to installing the cylinder head on the engine.

1. Check the cylinder liner flange height as outlined in Section 1.6.3.
2. Check to be sure the tops of the pistons are clean and free of foreign material.
3. Check to see that each push rod is threaded into the clevis until the end of the push rod projects through the clevis. This is important since serious engine damage will be prevented when the crankshaft is rotated during tune-up.
4. Check to be sure that the groove and the counterbores in the top of the cylinder block are clean and smooth.



**Install Cylinder Head**

1. Install new cylinder head compression gaskets and seals as outlined below:

- a. Place a new compression gasket on each cylinder liner.
- b. Place new seal rings in the counterbores of the water and oil holes in the cylinder block.
- c. Install a new oil seal in the milled groove in the cylinder block near the outer edge of the area covered by the cylinder head.

**NOTE:** Used water seals, oil seals and compression gaskets should never be used.

2. To install the cylinder head on the engine without disturbing the gaskets and seals, use guide stud set J 9665. Install the guide studs in the end cylinder block bolt holes (Fig. 2).

3. Make a final visual check of all of the cylinder head gaskets and seals to ensure that they are in place just before the cylinder head is lowered onto the cylinder block. This is a very important check. Compression gaskets and seals which are jarred out of their proper position will lead to leaks and "blow-by" with resultant poor engine performance and damage to the engine.

4. Wipe the bottom of the cylinder head clean; then, lower the head on the block.

5. Lubricate the threads and the underside of each cylinder head bolt with a small quantity of International Compound No. 2, or equivalent. Then, install the bolts. On the In-line engines equipped with both six and twelve point cylinder head bolts, the twelve point bolts must be installed on the camshaft side of the head to eliminate possible interference between the governor control link and the cylinder head bolt.

**NOTE:** Cylinder head bolts are especially designed for this purpose and must not be replaced by ordinary bolts.

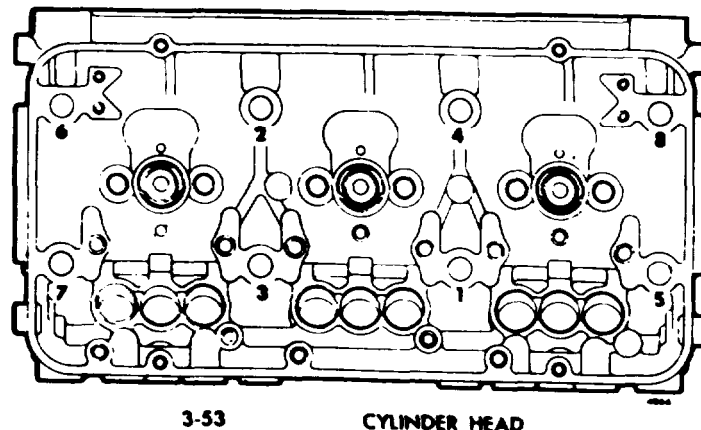


Fig. 6 - Sequence for Tightening Cylinder Head Bolts

6. The cylinder head must be gradually and uniformly drawn down against the gaskets and seals to ensure a good seal between the cylinder head and the block. Therefore, it is vitally important that the cylinder head be installed with the utmost care.

7. Then, begin on the camshaft side of the head to take up the tension in the cam follower springs by tightening the bolts lightly. Finally tighten the bolts to 170-180 lb-ft torque with a torque wrench, about one-half turn at a time, in the sequence shown in Fig. 6. Under no circumstances should the torque exceed the specified limits, otherwise the bolts may become stretched beyond their elastic limits.

8. Cover the oil drain holes in the cylinder head to prevent foreign objects from falling into the holes.

9. If the injectors were not previously installed, refer to Section 2.1 or 2.1.1 and install them at this time.

10. Tighten the rocker arm bracket bolts to 50-55 lb-ft torque.

**CAUTION:** There is a possibility of damaging the exhaust valves if the exhaust valve bridge is not resting on the ends of the exhaust valves when tightening the rocker arm bracket bolts. Therefore, note the position of the exhaust valve bridge before, during and after tightening the bolts.

11. Align the fuel pipes and connect them to the injectors and the fuel connectors. Use socket J 8932-01 to tighten the connections to 12-15 lb-ft torque.

**CAUTION:** Do not bend the fuel pipes and do not exceed the specified torque. Excessive tightening will twist or fracture the flared ends of the fuel pipes and result in leaks. Lubricating oil diluted by fuel oil can cause serious damage to the engine bearings.

12. Set the injector control tube assembly in place on the cylinder head and tighten the bolts, finger tight only. When positioning the injector control tube, be sure that the ball end of each injector rack control lever engages the slot in the corresponding injector control rack. With one end of the control tube return spring hooked around an injector rack control lever

and the other end hooked around, a control tube bracket, tighten the bracket bolts to 10-12 lb-ft torque.

13. After tightening the bolts, revolve the tube and see if the return spring pulls the injector racks out (no-fuel position) after they have been moved all the way in (full-fuel position). Since the injector control tube is mounted in self-aligning bearings, tapping the tube lightly with a soft hammer will remove any bind that exists. The injector racks must return to the no-fuel position freely by aid of the return spring only. Do not bend the return spring to bring about this condition.

14. Install the fuel rod and the fuel rod cover (if used).

15. Remove the covers from the drain holes in the head.

16. Install the exhaust manifold and connect the exhaust piping.

17. Install the thermostat housing and the thermostat.

18. Install the air cleaners.

19. Connect the fuel lines.

20. Fill the cooling system and check for leaks.

21. With the throttle in the OFF position, crank the engine over to be sure that all of the parts function freely.

22. Before starting the engine, perform an engine tune-up as outlined in Section 14.

23. Refer to Section 13.1 and start the engine. After starting the engine, check all fuel line connections to ensure that no fuel oil leaks into the cylinder head compartment to dilute the lubricating oil.

24. After the engine has been warmed up (to at least 160°F.), recheck the torque on the cylinder head bolts.

25. Recheck the exhaust valve clearance and the injector timing after the engine reaches normal operating temperature.

26. Examine all fuel oil, lubricating oil and water connections for possible leaks. Tighten the connections, if necessary.

27. Install the valve rocker cover, using a new gasket.



### VALVE AND INJECTOR OPERATING MECHANISM

Three rocker arms are provided for each cylinder; the two outer arms operate the exhaust valves and the center arm operates the fuel injector.

Each set of rocker arm assemblies pivots on a shaft supported by two brackets. A single bolt secures each bracket to the top of the cylinder head. Consequently, the removal of two bracket bolts permits the rocker arm assembly for one cylinder to be raised, providing easy access to the fuel injector and valve springs.

The rocker arms are operated by the camshaft through cam followers and short push rods extending through the cylinder head (Fig. 1).

Each cam follower operates in a bore in the cylinder head. A guide for each set of three cam followers is attached to the bottom of the cylinder head to keep the follower rollers in line with the cams and serves as a retainer during assembly and disassembly.

A coil spring, located inside of each cam follower, is held in place in the cylinder head by a spring seat and spring seat retainer.

Several operations may be performed on the valve mechanism without removing the cylinder head from the cylinder block, while the head must be removed for certain other operations. The operations NOT requiring removal of the cylinder head are:

1. Adjusting valve clearance.
2. Removing and installing a valve spring.
3. Removing and installing a rocker arm.
4. Removing and installing a rocker arm shaft or shaft bracket.
5. Removing and installing an injector.

It is also possible, if occasion requires, to remove or replace a push rod, push rod spring, spring seats or cam follower without removing the cylinder head. These parts, however, are more easily changed from the lower side of the cylinder head when the head is off the engine. Both methods are covered in this Section.

To remove and install valves, valve guides, valve seat inserts and to recondition valves and valve seats, the cylinder head must be removed. Exhaust valves, guides and inserts are covered in Section 1.2.2.

#### Lubrication

The valve and injector operating mechanism is lubricated by oil from a longitudinal oil passage, on the camshaft side of the cylinder head, which connects with oil passages in the cylinder block. Oil from this

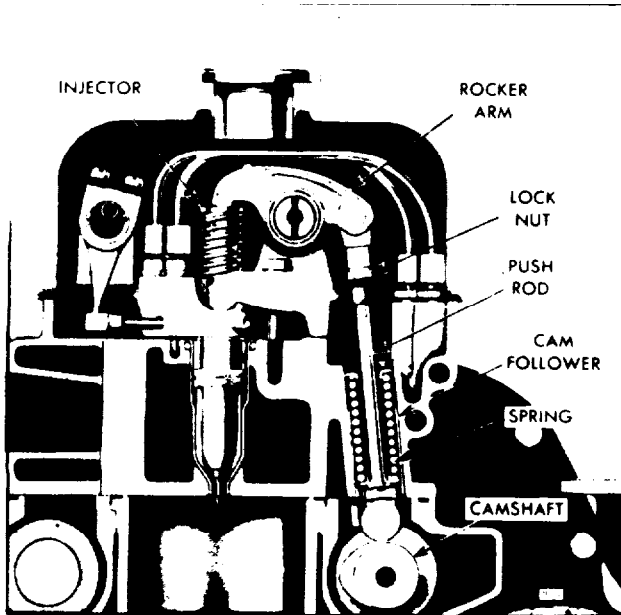


Fig. 1 - Injector Operating Mechanism (In-Line Engine Shown)

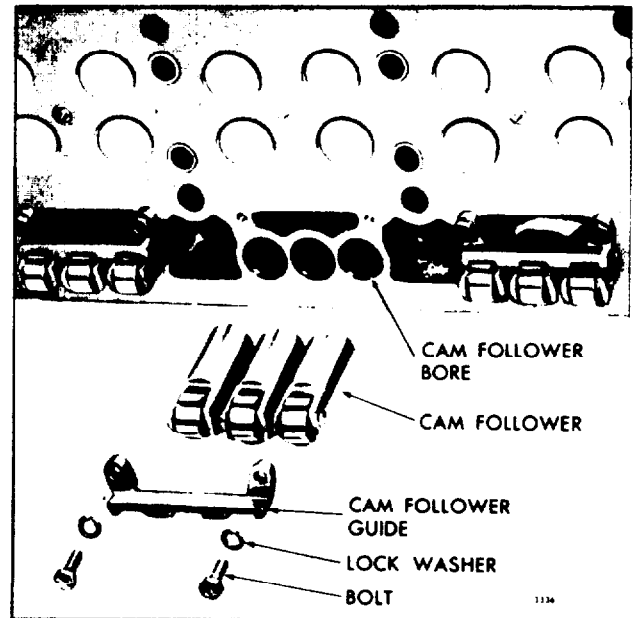


Fig. 2 - Cam Follower and Guide Location



Fig. 3 - Removing Push Rod from Upper Side of Cylinder Head with Tool J 3092-01

longitudinal passage enters the drilled rocker arm shafts through the lower end of the drilled rocker shaft bracket bolts and lubricates the rocker arms.

Excess oil from the rocker arms lubricates the exhaust valves and cam followers. Additional cam follower lubrication is provided by oil from grooves in the camshaft bushing bores which is directed against the cam follower rollers.

**Remove Rocker Arms and Rocker Arm Shaft**

1. Clean and remove the valve rocker cover.
2. Remove the fuel pipes from the injector and the fuel connectors.

**CAUTION:** Immediately after removing the fuel pipes, cover each injector opening with a shipping cap to prevent dirt or other foreign matter from entering the injector.

3. Bar the engine over in the direction of engine rotation or crank the engine with the starting motor to bring the push rod ends -- the outer ends -- of the injector and valve rocker arms in line horizontally.

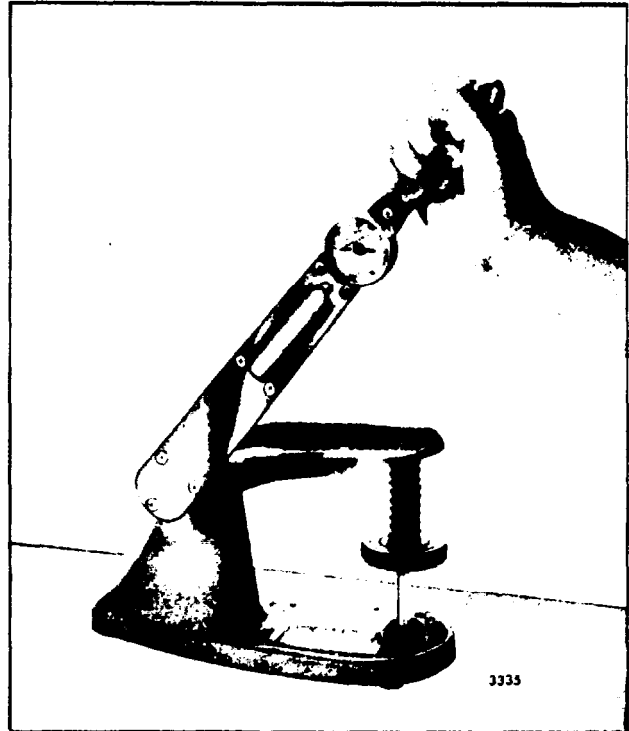


Fig. 4 - Testing Push Rod Spring

4. Remove the two bolts which hold the rocker arm shaft brackets to the cylinder head. Remove the brackets and the shaft.

5. Loosen the lock nut at the upper end of the push rod, next to the clevis, and unscrew the rocker arm from the push rod.

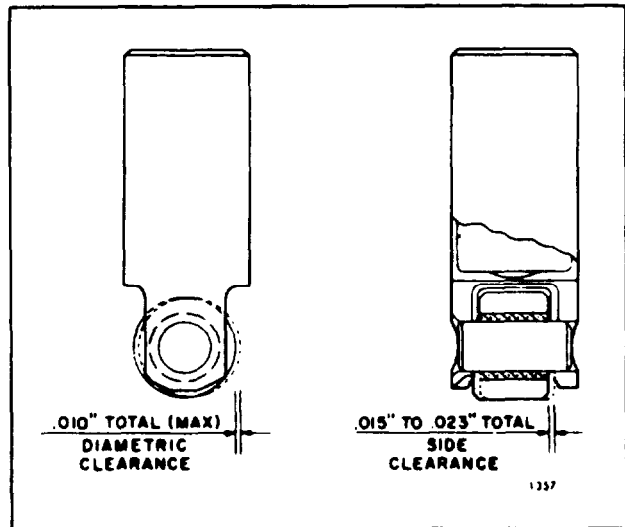


Fig. 5 - Cam Roller Wear and Clearance Diagram

### Inspection

Wash the rocker arms, rocker arm shaft and brackets thoroughly in clean fuel oil and dry them with compressed air. Make certain that the oil passages in the rocker arms, rocker arm shaft and bracket bolts are open and clean.

Inspect all of the parts for excessive wear.

The maximum clearance between the rocker arm shaft and the injector rocker arm bushing or an exhaust valve rocker arm (which has no bushing) is .004 " with used parts.

Examine each rocker arm pallet (contact face) for wear or galling. Also check the contact surfaces of the exhaust valve bridge (four valve cylinder heads).

### Remove Cam Follower and Push Rod Assembly (Cylinder Head Removed from Engine)

With the cylinder head removed from the engine, remove the cam followers as follows:

1. Rest the cylinder head on its side and remove the two bolts and lock washers securing the cam follower guide to the bottom of the cylinder head (Fig. 2). Remove the guide.
2. Pull the cam followers from the bottom of the cylinder head.
3. Remove the fuel pipes from the injector and the fuel connectors.
4. Loosen the lock nuts at the upper end of the push rods and unscrew the push rods from the rocker arm clevises.
5. Pull the push rod and spring assemblies from the bottom of the cylinder head.
6. Remove the push rod lock nut, upper spring seat, spring and lower spring seat from each push rod for cleaning and inspection.

The push rod spring seat retainers remain in the cylinder head. If the head is to be changed, these retainers must be removed and installed in the new head.

### Remove Cam Follower and Push Rod Assembly (Cylinder Hood Not Removed from Engine)

A push rod, push rod spring, spring seats and cam follower may be removed from the top of the cylinder head by using tool J 3092-01 as shown in Fig. 3.

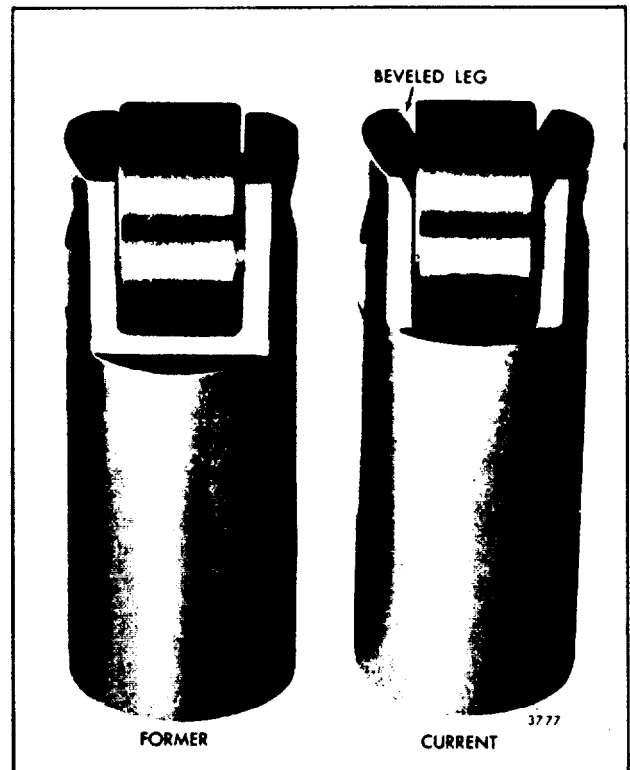


Fig. 6 - Former and Current Cam Followers

1. Clean and remove the valve rocker cover.
2. Remove the fuel pipes from the injector and the fuel connectors.
3. Remove the rocker arm brackets and rocker arm shaft as outlined in Steps 3 and 4 under Remove Rocker Arms and Rocker Arm Shaft.
4. Loosen the lock nut at the upper end of the push rod, next to the clevis, and unscrew the rocker arm from the push rod to be removed. Remove the lock nut from the push rod.
5. Install the remover J 3092-01, a flat washer and nut on the push rod (Fig. 3). Screw the nut down on the end of the push rod to compress the push rod spring.
6. Remove the retainer from the cylinder head with a screw driver or similar tool as shown in Fig. 3.
7. Unscrew the nut at the outer end of the push rod, thus releasing the spring.
8. Pull the push rod, spring, spring seats and cam follower out through the top of the cylinder head.

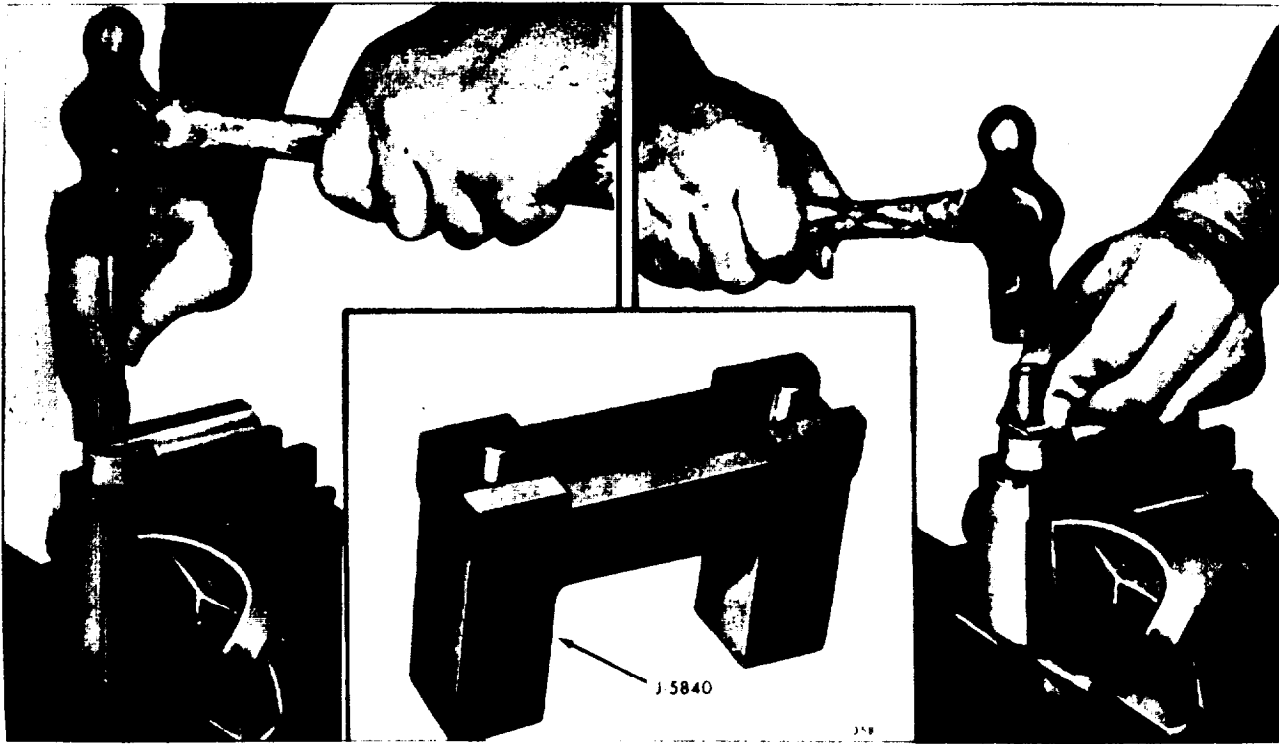


Fig. 7 - Removing or Installing Cam Follower Roller and Pin with Tool J 5840

### Inspection

Proper cam follower inspection and service are necessary in obtaining continued efficient engine performance. When any appreciable change in injector timing or exhaust valve clearance occurs during engine operation, the cam followers, and their related parts, should be removed and inspected for excessive wear. This change in injector timing or exhaust valve clearance during engine operation can usually be detected by excessive noise at idle speed.

After the cam followers are removed, wash them with lubricating oil or Cindol 1705 and wipe dry. Do not use fuel oil. Fuel oil working its way in between the roller and bushing may cause scoring on the initial engine start-up since fuel oil does not provide adequate lubrication. Wash only the cam follower associated parts with fuel oil and dry them with compressed air.

Inspect the rounded end of the push rods for wear. Replace any push rod which is worn or bent.

The purpose of a push rod spring is to maintain a predetermined load on the cam follower to insure contact of the cam roller on the camshaft lobe at all times. Check the push rod spring load whenever the

cam followers and related parts are removed for inspection.

The current push rod spring is made from .192 " diameter wire and was first used only in the injector cam follower position. effective with engine 3D-3792.

Effective with engine 3D-6128

the new spring is also used in the exhaust valve cam follower position. The former push rod spring was made from .177 " diameter wire.

Use spring tester J 9666 and an accurate torque wrench to check the push rod spring load (Fig. 4). Replace the current type spring when, a load of less than 250 pounds will compress it to a length of 2-9/64 ". Replace the former type spring when a load of less than 172 pounds will compress it to a length of 2-1/8 ".

It is recommended that if one former type push rod spring requires replacement, all of the former type springs in either the injector or valve cam follower positions be replaced by the current type spring. A new design upper spring seat is required with the use of the current push rod spring.

Examine the cam follower bores in the cylinder head

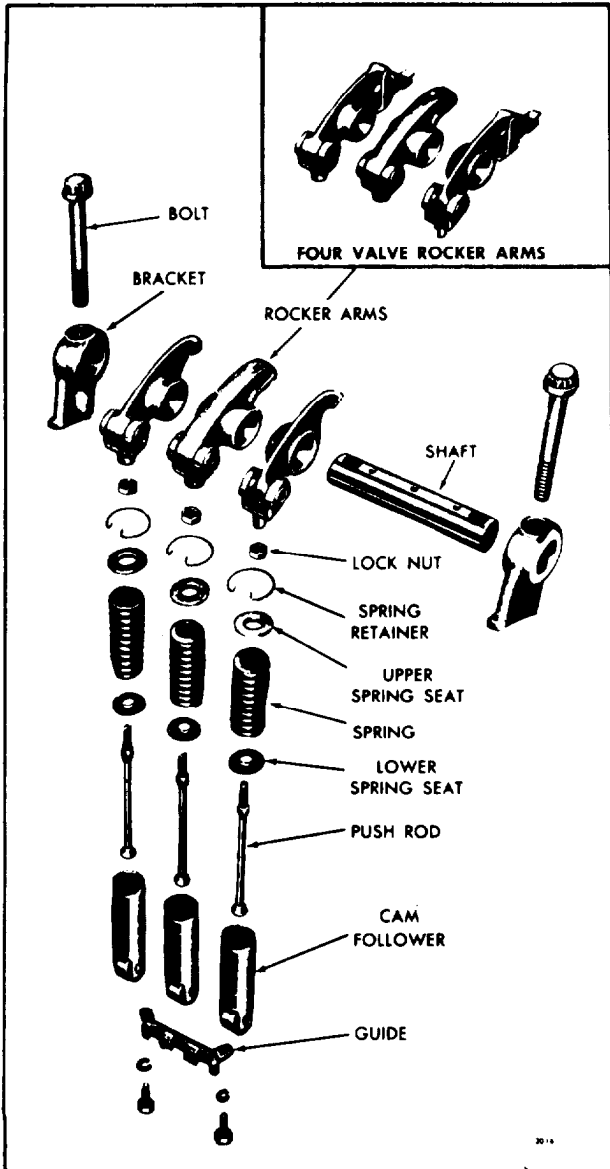


Fig. 8 - Valve and Injector Operating Mechanism Details and Relative Location of Parts

to make sure they are clean, smooth and free of score marks to permit proper functioning of the cam followers. Any existing score marks must be cleaned up.

Check the cam follower-to-cylinder head clearance. The clearance must not exceed .006 " with used parts. If replacement of a cam follower is necessary, use the correct type service cam follower to be assured that the cam roller will receive the proper lubrication.

The cam follower roller must turn smoothly and freely

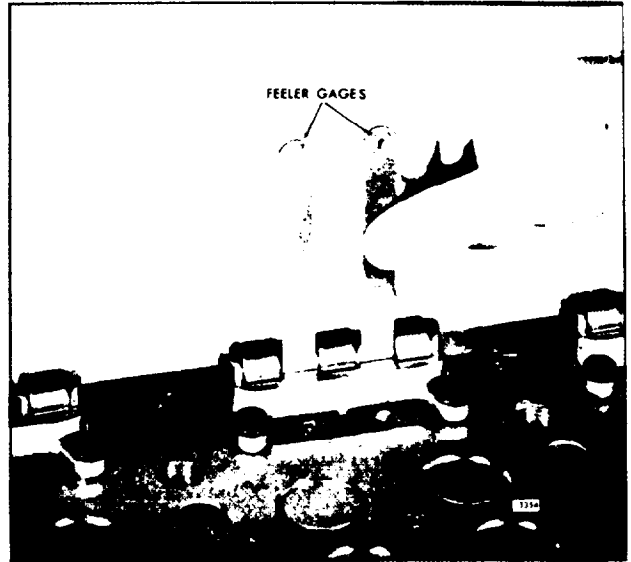


Fig. 9 - Checking the Clearance Between the Cam Follower Guide and Cam Follower Legs

on its pin and the roller must be free from flat spots or scuff marks. If the roller does not turn freely or has been scored or worn flat, then examine the cam on which it operates. If the cam is excessively worn or damaged, replace the camshaft.

Measure the total clearance between the roller bushing and pin, crosswise of the pin, as shown in Fig. 5 and, if the bushing is worn to the extent that more than

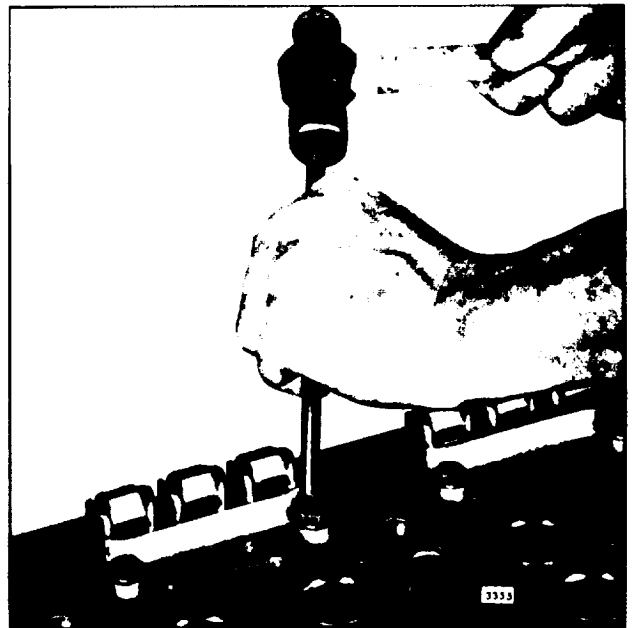


Fig. 10 - Adjusting Cam Follower Guide



.010 " diametric clearance exists, replace the cam follower assembly or install a new cam roller and pin, which are serviced as a set. Be sure the follower legs are beveled (Fig. 6) and check the total side clearance between the roller and follower; this clearance must not be less than .015 " nor more than .023 ".

Oversize roller and pin sets are available for service when required. However, DO NOT attempt to bore out the legs of a standard cam follower for an oversize roller and pin set. This cannot be over emphasized because of the extremely close manufacturing tolerances.

**NOTE:** Cam follower assemblies with the letter "S" stamped on the end of the roller, pin and on one leg of the cam follower body are equipped with oversize roller and pin sets.

#### Remove and Install Cam Follower Roller and Pin

1. Clamp fixture J 5840 securely in a vise as shown in Fig. 7 and place the cam follower in the groove in the top of the fixture with the follower pin resting on top of the corresponding plunger in the fixture.
2. Drive the pin from the roller with a suitable drift. Exercise caution in removing the cam follower body and roller from the fixture as the follower pin is seated on top of a spring-loaded plunger in the fixture body.
3. Before installing the new roller and pin kit, remove the preservative by washing the parts with clean lubricating oil or Cindol 1705. Do not use fuel oil.

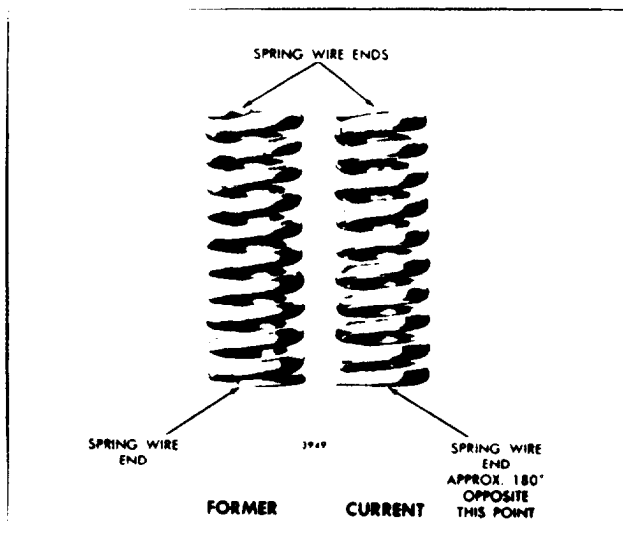


Fig. 11 - Push Rod Spring Identification

4. Prior to installing a new roller and pin, remove any burrs on the surfaces of the cam follower at the pin holes.
5. Position the follower body in the groove of the fixture with the proper size fixture plunger extending through the roller pin hole in one of the legs of the follower body.
6. Position the roller in the cam follower body (Fig. 7). The small plunger in the tool will align the roller with the pin holes in the follower body.
7. Align the pin with the hole in the follower body and carefully drive the pin into the body until the ends of the pin are centered in the legs of the body.
8. Check the side clearance between the roller and the follower body. This clearance must be .015 " to .023 ".

#### Install Cam Follower and Push Rod Assembly (Cylinder Head Removed from Engine)

1. Install a serrated lower spring seat on each push rod. If the engine being assembled was equipped with plain lower spring seats, replace them with serrated spring seats (Fig. 8).
2. Place the push rod springs (Fig. 11) on the push rods.
3. Install the proper upper spring seat on each push rod. The cup shaped spring seat used with the current type push rod spring may also be used with the former spring.
4. Install the spring seat retainer in the cylinder head. Then slide the push rod, lower spring seat, spring and upper spring seat as an assembly into the cam follower bore from the bottom of the cylinder head.
5. Screw the push rod lock nut down on the upper end of the push rod as far as possible. Then screw the push rod into the clevis until the end of the rod is flush with or above the inner side of the clevis.
6. Immerse the cam follower assemblies in clean Cindol 1705 (heated to 100°-125°F.) for at least one hour before placing them in the cylinder head, to ensure initial lubrication between the cam follower roller pins and the roller bushings. Rotate the cam follower roller during the soaking period to aid in purging any air from the bushing-roller area. The heated Cindol 1705 results in better penetration as it is less viscous than engine oil and flows more easily between the pin and roller bushing surfaces. After the cam follower is removed from the Cindol 1705, the cooling action of any trapped air in the pin and bushing area tends to pull the oil into the cavity.

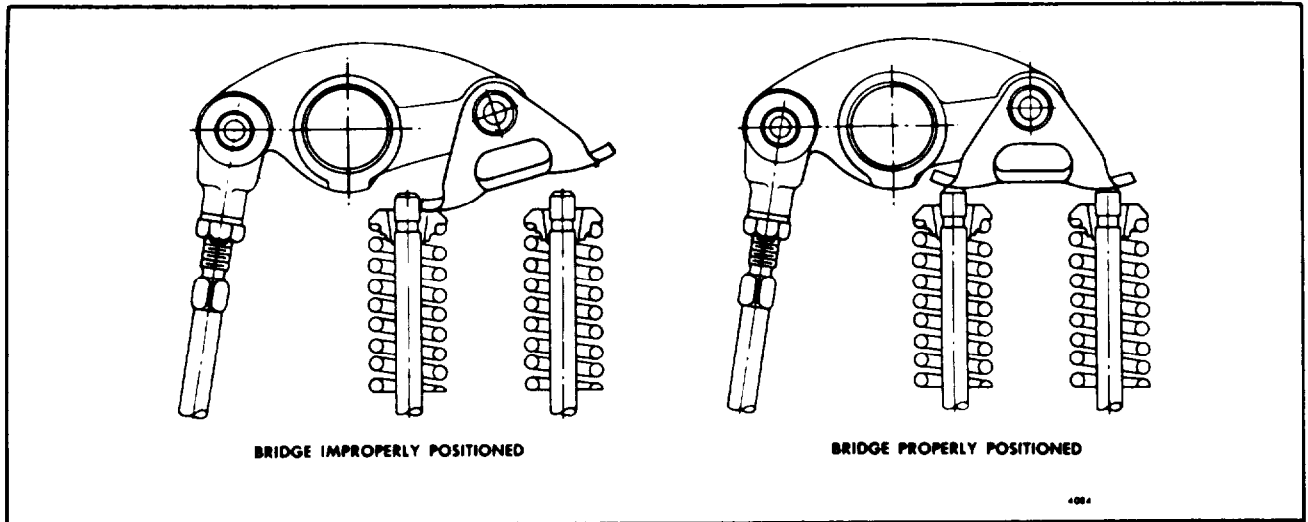


Fig. 12 - Relationship Between Exhaust Valve Bridge and Valve Stems

**NOTE:** Heat the Cindol 1705 in a small pail, with a screen insert. The screen insert will prevent the follower assemblies from touching the bottom of the pail during soaking, thus avoiding the possibility of contamination.

**IMPORTANT:** When installing a new cam follower assembly, wash it with clean lubricating oil or Cindol 1705 to remove the preservative.

7. Note the oil hole in the bottom of the cam follower. With this oil hole pointing away from the exhaust valves, slide the cam follower into position from the bottom of the head.

8. Attach the cam follower guide (Fig. 8) to the bottom of the cylinder head to hold the group of cam followers in place. Tighten the cam follower guide bolts to 12-15 lb-ft torque. Check to be sure there is at least .005" clearance between the cam follower legs and the cam follower guide (Fig. 9). If there is insufficient clearance, loosen the guide bolts slightly and tap each corner of the guide with a brass rod (Fig. 10). Then retighten the bolts to 12-15 lb-ft torque and recheck the clearance.

#### Install Cam Follower and Push Rod Assembly (Cylinder Head Not Removed from Engine)

1. Lubricate the cam follower as stated in Step 6 under Install Cam Follower and Push Rod Assembly (Cylinder Head Removed from Engine).

2. Note the oil hole in the bottom of the cam follower.

With this hole pointing away from the exhaust valves, slide the cam follower into position.

3. Install a serrated lower spring seat on each push rod. If the engine being assembled was equipped with plain lower spring seats, replace them with serrated spring seats.

4. Place the push rod springs (Fig. 11) on the push rods.

5. Install the proper upper spring seat on each push rod. The cup shaped spring seat used with the current type push rod spring may also be used with the former spring.

6. Set the push rod, lower spring seat, spring and upper spring seat down in the cam follower.

7. Install a flat washer and nut on the push rod. Then place tool J 3092-01 on the push rod, between the flat washer and upper spring seat. Screw the nut down on the push rod until the spring is compressed sufficiently to permit the retainer to be installed. Partially collapse the retainer and install it in the cylinder head groove.

8. Remove the nut, flat washer and tool from the push rod.

9. Reinstall the nut on the push rod. Screw the nut down as far as possible on the push rod. Then screw the rocker arm clevis down on the push rod until the end of the push rod is flush with or above the inner side of the clevis.

**NOTE:** The injector rocker arm (the center arm of the group) is slightly different from the exhaust valve rocker arms; the boss for the

shaft on the valve rocker arms is longer on one side of the arm than on the other. The extended boss of the valve rocker arms must face the injector rocker arm.

#### Install Rocker Arms and Rocker Arm Shaft

1. Install the cylinder head, if removed, as outlined in Section 1.2.

2. Apply clean engine oil to the surface of the rocker arm shaft.

3. Install the rocker arms and rocker arm shaft by reversing the sequence of operations for removal. Tighten the rocker arm shaft bracket bolts to 50-55 lb-ft torque. After tightening the bolts, check for some side clearance to prevent bind between the rocker arms.

**CAUTION:** On four valve cylinder heads, there is a possibility of damaging the exhaust valves if the valve bridges are not resting on the ends of the valves when tightening the rocker arm

shaft bracket bolts (Fig. 12). Therefore, note the position of the exhaust valve bridges before, during and after tightening the rocker arm shaft bracket bolts.

4. Align the fuel pipes and connect them to the injectors and the fuel connectors. Tighten the fuel pipe nuts to 12-15 lb-ft torque with socket J 8932-01.

**CAUTION:** Do not bend the fuel pipes and do not exceed the specified torque. Excessive tightening will twist or fracture the flared ends of the fuel pipes and result in leaks. Lubricating oil diluted by fuel oil can cause serious damage to the engine bearings.

5. Fill the cooling system.

6. Adjust the exhaust valve clearance and time the fuel injector as outlined in Section 14.1 and 14.2 before starting the engine.

7. Start the engine and check for leaks in the fuel, cooling and lubrication systems.

8. Tune-up the engine, as outlined in Section 14, after the engine reaches normal operating temperature.

## EXHAUST VALVES

Four exhaust valves are provided for each cylinder (Fig. 1). The valve heads are heat treated and ground to the proper seat angle and diameter. The valve stems are ground to size and hardened at the end which contacts the rocker arm or the exhaust valve bridge.

The exhaust valve stems are contained within exhaust valve guides which are pressed into the cylinder head. Exhaust valve seat inserts, pressed into the cylinder head, permit accurate seating of the exhaust valves under varying conditions of temperature and materially prolong the life of the cylinder head. The exhaust valves and exhaust valve seat inserts are ground to a 30° seating angle.

The exhaust valve springs are held in place by the valve spring caps and tapered two-piece valve locks.

Excess oil from the rocker arms lubricates the exhaust valve stems. The valves are cooled by the flow of air from the blower past the valves each time the air inlet ports are uncovered.

### Exhaust Valve Maintenance

Efficient combustion in the engine requires that the exhaust valves be maintained in good operating condition. Valve seats must be true and unpitted to assure leak-proof seating, valve stems must work freely and smoothly within the valve guides and the correct valve clearance (Section 14.1) must be maintained.

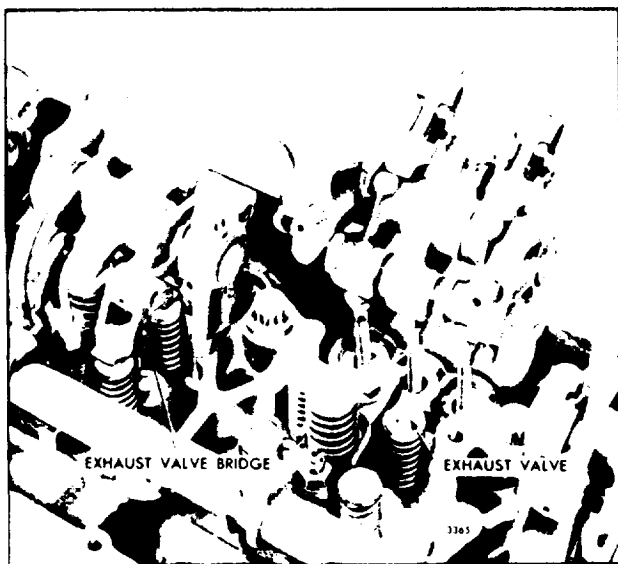


Fig. 1 - Location of Exhaust Valves

Proper maintenance and operation of the engine is important to long valve life. Engine operating temperatures should be maintained between 160 F. and 185°F. Low operating temperatures (usually due to extended periods of idling or light engine loads) result in incomplete combustion, formation of excessive carbon deposits and fuel lacquers on valves and related parts, and a greater tendency for lubricating oil to sludge.

Unsuitable fuels may also cause formation of deposits on the valves, especially when operating at low temperatures.

When carbon deposits, due to partially burned fuel, build up around the valve stems and extend to that portion of the stem which operates in the valve guide, sticking valves will result. Thus, the valves cannot seat properly and pitted and burned valves and valve seats and loss of compression will result.

Lubricating oil and oil filters should be changed periodically to avoid accumulation of sludge.

Valve sticking may also result from valve stems which have been scored due to foreign matter in the lubricating oil, leakage of antifreeze (glycol) into the lubricating oil which forms a soft sticky carbon and gums the valve stems, and bent or worn valve guides. Sticking valves may eventually result in valves being held in the open position, being struck by the piston and becoming bent or broken.

It is highly important, that injector timing and valve clearance be accurately adjusted and checked periodically. Improperly timed injectors will have adverse effects upon combustion. Tightly adjusted valves will cause rapid pitting of the valve seats and a hotter running condition on the valve stems.

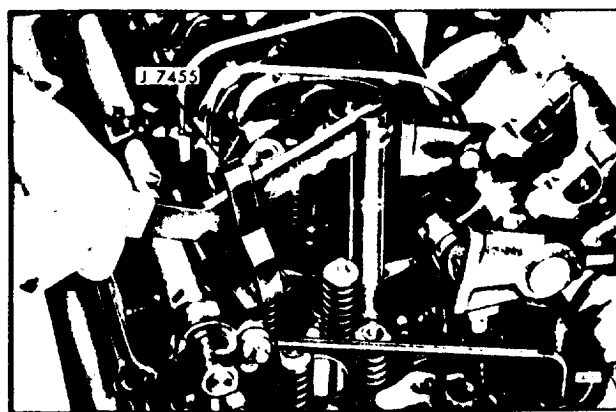


Fig. 2 - Removing Valve Spring

The cylinder head must first be removed before the exhaust valves, valve seat inserts or valve guides can be removed for replacement or reconditioning. However, the valve springs may be replaced without removing the cylinder head.

#### Remove Exhaust Valve Spring (Cylinder Hood Installed)

An exhaust valve spring may be removed, without removing the cylinder head from the engine, as follows:

1. Clean and remove the valve rocker cover.
2. Crank the engine over to bring the valve and injector rocker arms in line horizontally.
3. Disconnect and remove the fuel pipes from the injector and the fuel connectors.

**CAUTION:** Immediately after removing the fuel pipes, cover each injector opening with a shipping cap to prevent dirt or other foreign matter from entering the injector.

4. Remove the two bolts holding the rocker arm shaft brackets to the cylinder head and remove the brackets and shaft.
5. Remove the cylinder block air box cover so that the

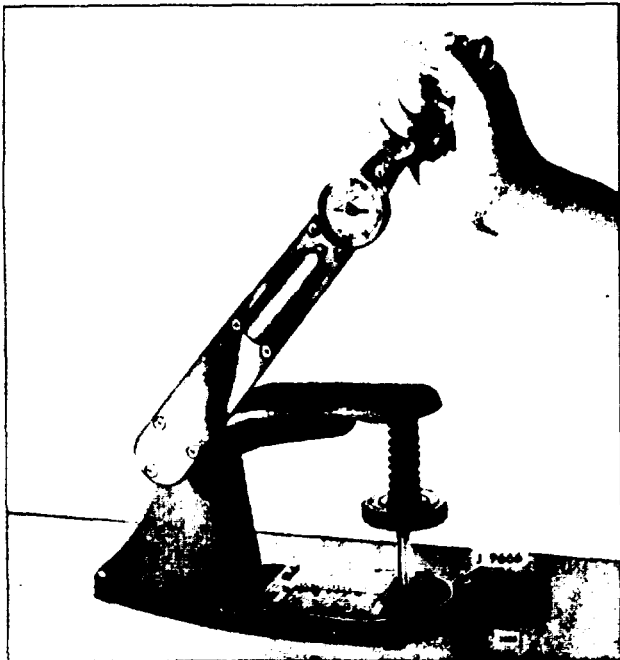


Fig. 3 - Testing Valve Spring

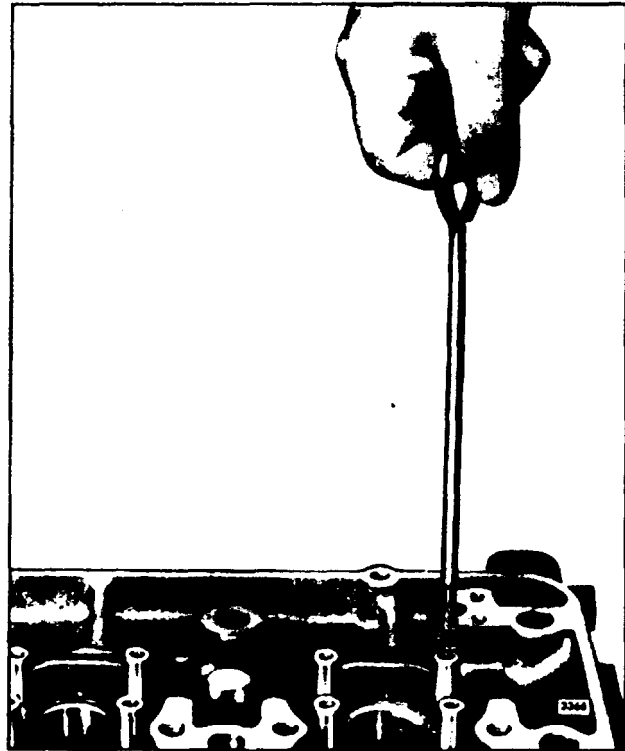


Fig. 4 - Cleaning Valve Guide

piston travel may be observed, then turn the crankshaft until the piston is at the top of its stroke.

6. Thread the spring compressor tool into one of the rocker arm support bolt holes (Fig. 2). Then compress the spring and remove the two-piece valve lock.
7. Release the tool and remove the valve spring cap, valve spring and spring seat.

#### Remove Exhaust Valves and Valve Springs (Cylinder Head Removed)

With the cylinder head removed from the engine, remove the exhaust valves and springs as follows:

1. Support the cylinder head on 2" thick wood blocks to keep the cam followers clear of the bench.
2. Disconnect and remove the fuel pipes from the injectors and the fuel connectors.

**CAUTION:** Immediately after removing the fuel pipes, cover each injector opening with a shipping cap to prevent dirt or other foreign matter from entering the injector.

3. Remove the two bolts holding the rocker arm shaft

brackets to the cylinder head and remove the brackets and the shaft.

4. Remove the fuel injector.

5. Place a block of wood under the cylinder head to support the exhaust valves. Remove the exhaust valve springs as outlined in Steps 6 and 7 above.

6. Turn the cylinder head over, using care to keep the valves from falling out of the head. If the valves are to be reused, number each valve to facilitate re-installation in the same position. Then withdraw the valves from the cylinder head.

7. Remove the cam followers and push rod assemblies as outlined in Section 1.2.1 under Remove Cam Follower and Push Rod Assembly (Cylinder Head Removed from Engine).

### Inspection

Clean the springs with fuel oil, dry them with compressed air and inspect them. Replace a pitted or fractured spring.

Check the springs with spring tester J 9666 and an accurate torque wrench. Replace a spring if a load of less than 33 pounds will compress a two valve cylinder head spring to 2.31 inches, or a load of less than 25 pounds will compress a four valve cylinder head spring to 1.93 inches. The difference in the load between a pair of four valve cylinder head springs must not exceed 6 pounds or the valve bridge will be unbalanced.

Inspect the valve spring seats and caps for wear. If worn, replace with new parts.

Carbon on the face of a valve indicates blow-by due to a faulty seat. Black carbon deposits extending from the valve seats to the valve guides may result from cold operation due to light loads or the use of too light a grade of fuel. Rusty brown valve heads with carbon deposits forming narrow collars near the valve guides is evidence of high operating temperatures. High operating temperatures are normally due to overloads, inadequate cooling, or improper timing which results in carbonization of the lubricating oil.

Clean the carbon from the valve stems and wash the valves with fuel oil. The valve stems must be free from scratches or scuff marks and the valve faces must be free from ridges, cracks or pitting. If necessary, reface the valves or install new valves. If the valve heads are warped, replace the valves.

If there is evidence of engine oil running down the exhaust valve stem into the exhaust chamber, creating a high oil consumption condition because of excessive idling and resultant low engine exhaust back pressure, replace the valve guide oil seals or, if not previously used, install valve guide oil seals.

Clean the inside diameter of the valve guides with brush J 7793 (four valve head) as shown in Fig. 4. This brush will remove all gum and carbon deposits from the valve guides.

Inspect the valve guides for fractures, scoring or excessive wear. Check the valve-to-guide clearance, since worn valve guides may eventually result in improper valve seat contact. If the clearance exceeds .005 " (four valve head), replace the valve guides.

The current valve guides, which are not machined for use with oil seals, have a 45 ° chamfer at the upper end. They replace the former 15 ° chamfer valve guides for service.

**Remove Exhaust Valve Guide**

1. Support the cylinder head, bottom side up, on 3 " thick wood blocks.
2. Drive the valve guide out of the cylinder head with valve guide remover J 7775 (four valve head) as shown in Fig. 5.

**Install Exhaust Valve Guide**

Turn the cylinder head right side up and install the valve guide as follows:

1. Insert the internally threaded end of the valve guide in the proper valve guide installing tool (refer to the Valve Guide Installing Tool chart). Be sure to use the correct tool to avoid damage to the valve guide and to locate the valve guide to the proper dimension.
2. Position the valve guide squarely in the bore in the cylinder head and press the installing tool gently to start the guide in place (Fig. 6). Then press the guide in until the tool contacts the cylinder head (the bottom of the counterbore in the four valve cylinder head).

**CAUTION:** Do not use the valve guides as a means of turning the cylinder head over or in handling the cylinder head.

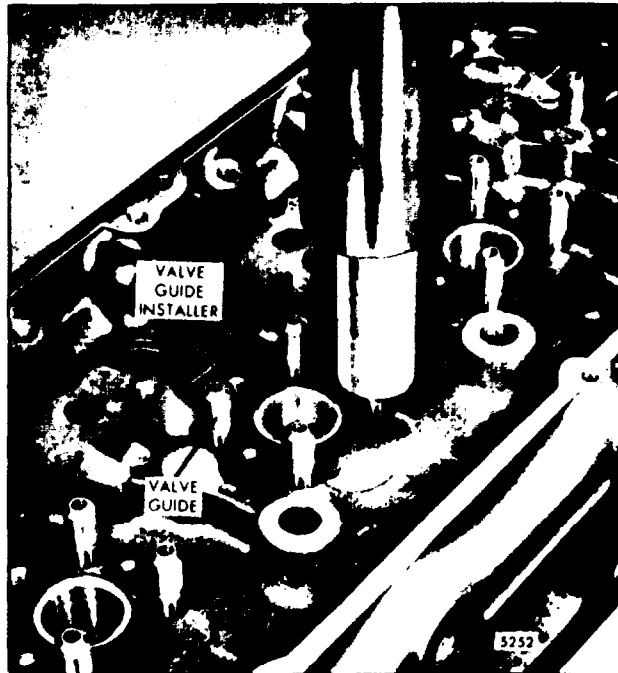


Fig. 6 - Installing Valve Guide

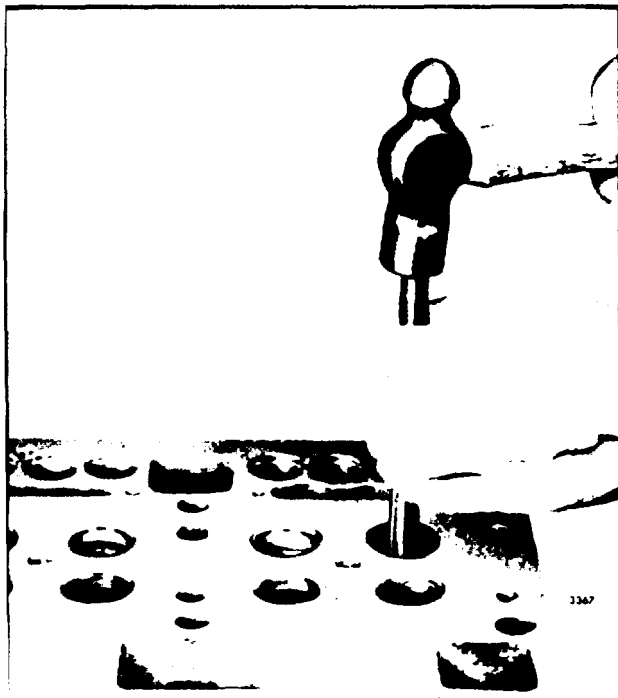


Fig. 5 - Removing Valve Guide

Tool No.	Cyl. Head	Valve Guide	Distance of Guide Below Top of Head
J 7832	4 Valve	15° Chamfer	.010"-.040"
J 9729 J 9730	4 Valve 4 Valve	45° Chamfer*	.010"-.040" .190"-.220"

\*Machined for use with valve guide oil seal.

Valve Guide Installing Tools

**Inspect Exhaust Valve Seat Insert**

Inspect the exhaust valve seat inserts for excessive wear, pitting or cracking.

**Remove Exhaust Valve Seat Insert**

The valve seat inserts are pressed into the cylinder head and must be removed as outlined in the following procedure to avoid damage to the cylinder head:

1. Place the cylinder head on its side on a bench as shown in Fig. 7.
2. Place the collet of tool

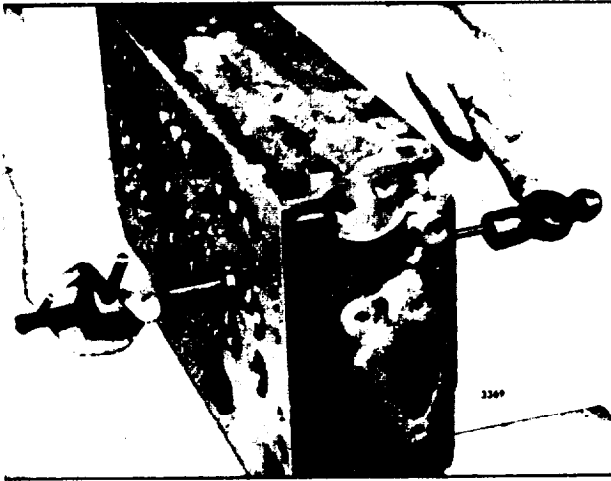


Fig. 7 - Removing Valve Seat Insert

J 7774 (four valve head) inside the valve insert so that the bottom of the collet is flush with the bottom of the insert.

3. Hold the collet handle and turn the T handle to expand the collet cone until the insert is held securely by the tool.

4. Insert the drive bar of the tool through the valve guide.

5. Tap the drive bar once or twice to move the insert about 1/16 " away from its seat in the cylinder head.

6. Turn the T handle to loosen the collet cone and move the tool into the insert slightly so the narrow flange at the bottom of the collet is below the valve seat insert.

7. Tighten the collet cone and continue to drive the insert out of the cylinder head.

#### Install Exhaust Valve Seat Insert

1. Clean the valve seat insert counterbores in the head with trichloroethylene or other suitable solvent. Also wash the valve seat inserts with the same solvent. Dry the counterbores and the inserts with compressed air.

2. Inspect the counterbores for cleanliness, concentricity, flatness and cracks.

The counterbores in a four valve head have a diameter of 1.159 " to 1.160 " and a depth of .294 " to .306 " on former engines and a depth of .300 " to .312 " on current engines.

**NOTE:** Valve seat inserts which are .010 "



Fig. 8 - Installing Valve Seat Insert

oversize on the outside diameter are available, if required.

3. Immerse the cylinder head for at least 30 minutes in water heated to 180 °F to 200 °F.

4. Rest the cylinder head, bottom side up, on a bench and place an insert in the counterbore--valve seat side up. This must be done quickly while the cylinder head is still hot and the insert is cold (room temperature). If the temperature of the two parts is allowed to become nearly the same, installation may become difficult and damage to the parts may result.

5. Drive the insert in place with installer J 7790 (four valve head) as shown in Fig. 8 until it seats solidly in the cylinder head.

6. Grind the valve seat insert and check it for concentricity in relation to the valve guide as outlined below.

#### Recondition Exhaust Valve and Valve Seat Insert

An exhaust valve which is to be reused may be refaced, if necessary (Fig. 9). To provide sufficient valve strength and spring tension, the edge of the



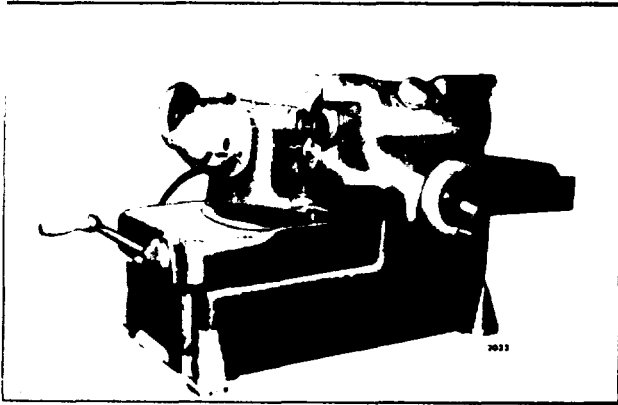


Fig. 9 - Refacing Exhaust Valve

valve at the valve head must not be less than 1/32 " in thickness and must still be within the specifications shown in Figs. 11 and 12 after refacing.

Before either a new or used valve is installed, examine the valve seat in the cylinder head for proper valve seating. The angle of the valve seat insert must be exactly the same as the angle of the valve face to provide proper seating of the valve. The proper angle for the seating face of both the valve and valve seat insert is 30°.

When a new valve seat insert is installed or an old insert refaced, the work must be done with a grinding wheel (Fig. 10).

The eccentric grinding method for reconditioning valve seat inserts is recommended. This method

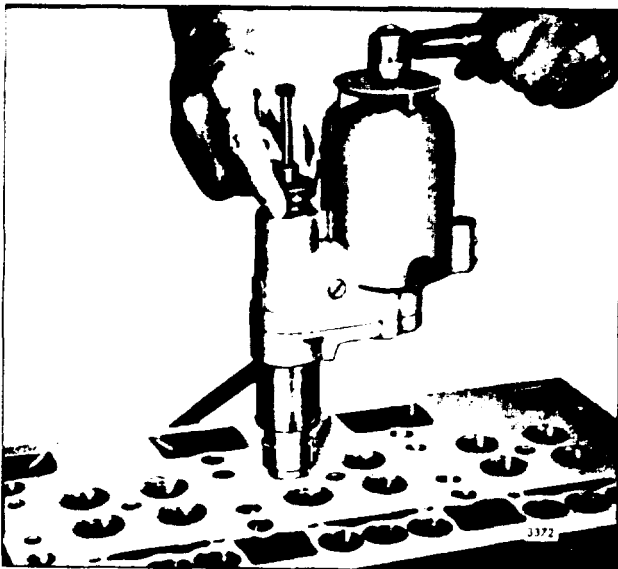


Fig. 10 - Grinding Valve Seat Insert

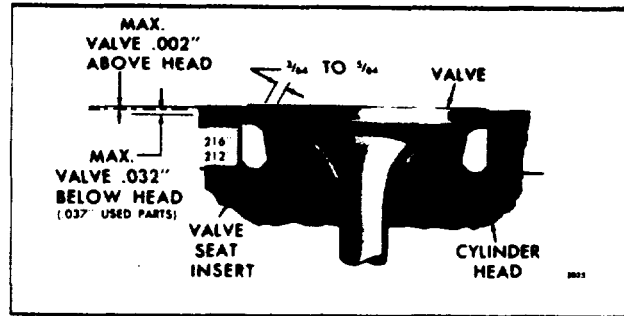


Fig. 11 - Relationship Between Exhaust Valve, Insert and Cylinder Head (Two Valve Head)

produces a finer, more accurate finish since only one point of the grinding wheel is in contact with the valve seat at any time. A micrometer feed permits feeding the grinding wheel into the work .001 " at a time.

To grind the valve seat inserts for a four valve cylinder head, use the following tools:

1. Grinder J 8165-1
2. Dial Gage J 8165-2
3. Pilot J 7792-1
4. Grinding Wheel (15 °) J 7792-2
5. Grinding Wheel (30 °) J 7792-3
6. Grinding Wheel (60 °) J 7792-4

Grind the valve seat inserts as follows:

1. First apply the 30 ° grinding wheel on the valve seat insert.
2. Use the 60 ° grinding wheel to open the throat of the insert.
3. Then grind the top surface with a 15 ° wheel to narrow the width of the seat from 3/64 " to 5/64 "

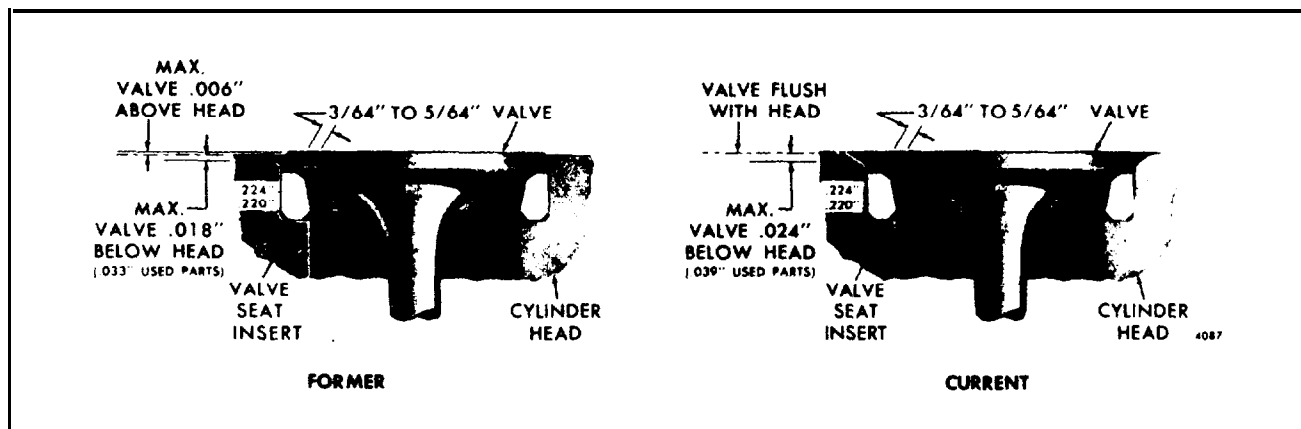


Fig. 12 - Relationship Between Exhaust Valve, Insert and Cylinder Head (Four Valve Head)

(Figs. 11 and 12). The 30° face of the insert may be adjusted relative to the center of the valve face with the 15° and 60° grinding wheels.

**CAUTION:** Do not permit the grinding wheel to contact the cylinder head when grinding the insert. If necessary, replace the insert.

The maximum amount that the exhaust valve should protrude beyond the cylinder head (when the valve is in the closed position), and still maintain the proper piston-to-valve clearance, is shown in Figs. 11 and 12. Grinding will reduce the thickness of the valve seat insert and cause the valve to recede into the cylinder head. If, after several grinding operations, the valve

recedes beyond the specified limits, replace the valve seat insert.

When occasion requires, the grinding wheel may be dressed to maintain the desired seat angle with the dressing tool provided with the grinder set (Fig. 13).

After grinding has been completed, clean the valve seat insert thoroughly with fuel oil and dry it with compressed air. Set the dial indicator J 8165-2 in position as shown in Fig. 14 and rotate it to determine the concentricity of each valve seat insert relative to the valve guide. If the runout exceeds .002", check for a bent valve guide before regrinding the insert.

4. After the valve seat insert has been ground, determine the position of the contact area between the valve and the valve seat insert as follows:

- a. Apply a light coat of Prussian Blue or similar paste to the valve seat insert.
- b. Lower the stem of the valve in the valve guide and "bounce" the valve on the seat. Do not rotate the valve. This procedure will show the area of contact (on the valve face). The most desirable area of contact is at the center of the valve face.

After the valve seat inserts have been ground and checked, thoroughly clean the cylinder head before installing the valves.

#### Install Exhaust Valves and Springs

When installing exhaust valves, check to see that the valves are within the specifications shown in Figs. 11 and 12. Also, do not use "N" pistons with former four valve cylinder head assemblies unless the valves are flush with the cylinder head. If the valves are not flush, it may be necessary to regrind the valve seats so that

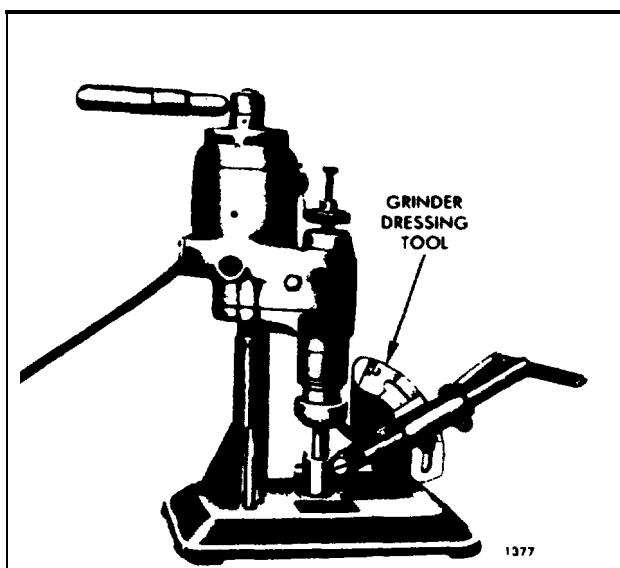


Fig. 13 - Grinding Wheel Dressing Tool of Set J 8165

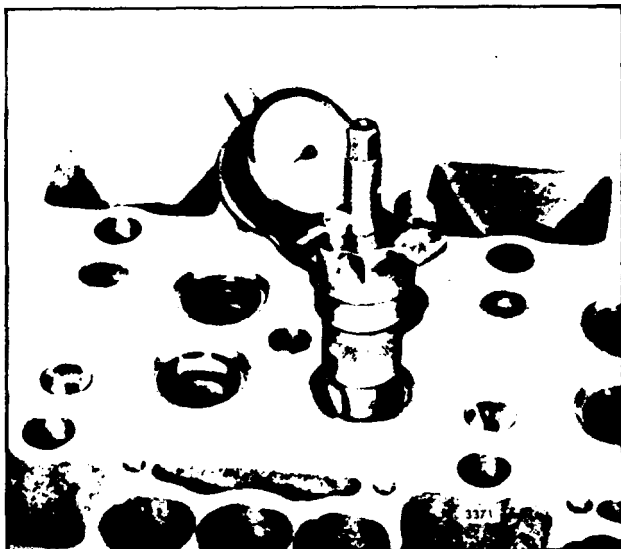


Fig. 14 - Checking Relative Concentricity of Valve Seat Insert with Relation to Valve Guide

the valves will be flush with the bottom surface of the cylinder head.

**NOTE:** The distance from the top of the four valve cylinder head to the bottom of the valve spring seat counterbore is 1-11/64 " in current design cylinder heads or 1-5/64 " in former design heads.

Be sure and install the correct parts in the four valve cylinder head. Current design cylinder heads are equipped with the thin valve spring seats (.060 ") and current design exhaust valves (Fig. 15). To facilitate replacement of a four valve head on an engine using the former exhaust valves, the proper quantity of the thick spring seats (.150 ") must be used.

Service cylinder heads are of the current design. The current thin valve spring seats (.060 ") are included with each cylinder head as a shipped loose item.

1. Lubricate the valve stems with sulphurized oil (E.P. type) and slide the valves all the way into the guides.

**IMPORTANT:** If reconditioned valves are used, install them in the same relative location from which they were removed.

2. Hold the valves in place temporarily with a strip of masking tape. Then, turn the cylinder head right side up on the work bench. Place a board under the head to support the valves and to provide clearance between the cam followers and the bench.

3. Install the valve spring seats

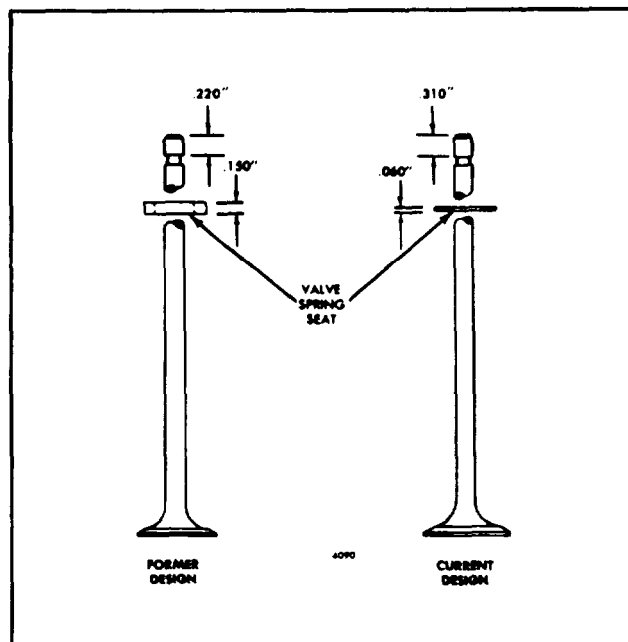


Fig. 15 - Former and Current Design Exhaust Valves (Four Valve Head)

4. Install the valve guide oil seals, if used, on the valve guides as follows:

- a. Place the plastic seal installation cap on the end of the valve stem. If the cap extends more than 1/16 " below the groove on the valve stem, remove the cap and cut off the excess length.
- b. Lubricate the installation cap and start the seal carefully over the valve stem. Push the seal down slowly until it rests on top of the valve guide.
- c. Remove the installation cap.

5. Install the valve springs and valve spring caps.

6. Thread the valve spring compressor J 7455 into one of the rocker shaft bolt holes in the cylinder head (Fig. 2).

7. Apply pressure to the free end of the tool to compress the valve spring and install the two-piece tapered valve lock. Exercise care to avoid scoring the valve stem with the valve cap when compressing the spring. Tap the end of the valve stem lightly with a plastic hammer to seat the valve locks.

**NOTE:** If valve guide oil seals are used, compress the valve spring only enough to permit installation of the valve locks. Compressing the spring too far may result in damage to the oil seal.

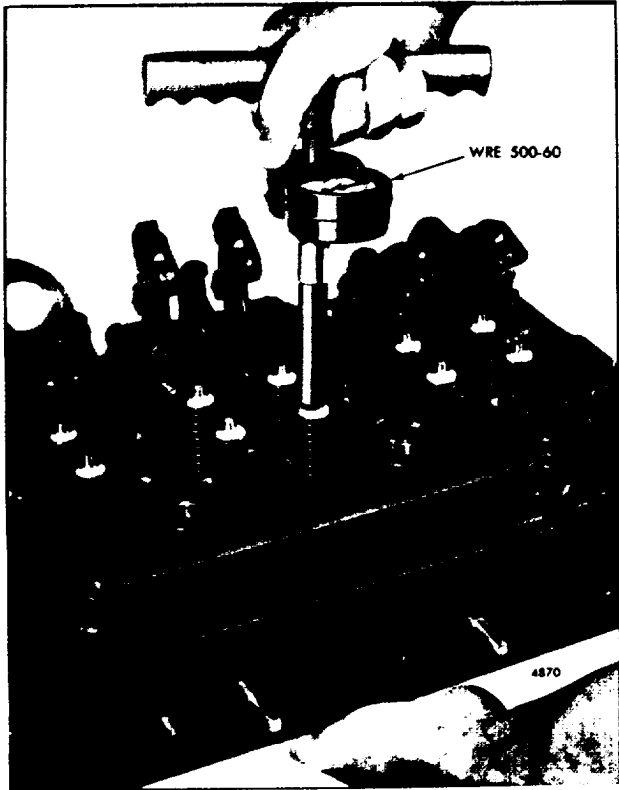


Fig. 16 - Checking Valve Opening Pressure  
with Gage WRE-500-60

8. Release the tool and install the valve locks on the remaining exhaust valves in the same manner.

9. Check the position of the exhaust valve (Fig. 11).

10. With the exhaust valves installed in the cylinder head, use spring checking gage WRE -500-60 and note the gage reading the moment the exhaust valve starts to open (Fig. 16). The minimum pressure required to start to open the exhaust valve must not be less than 25 pounds for a four valve cylinder head.

11. Install the injectors, rocker arms, shafts, brackets and any other parts that were previously removed from the cylinder head.

12. Install the cylinder head. Refer to Pre-Installation Inspection and Install Cylinder Head in Section 1.2.

13. Perform a complete engine tune-up.



## VALVE ROCKER COVER

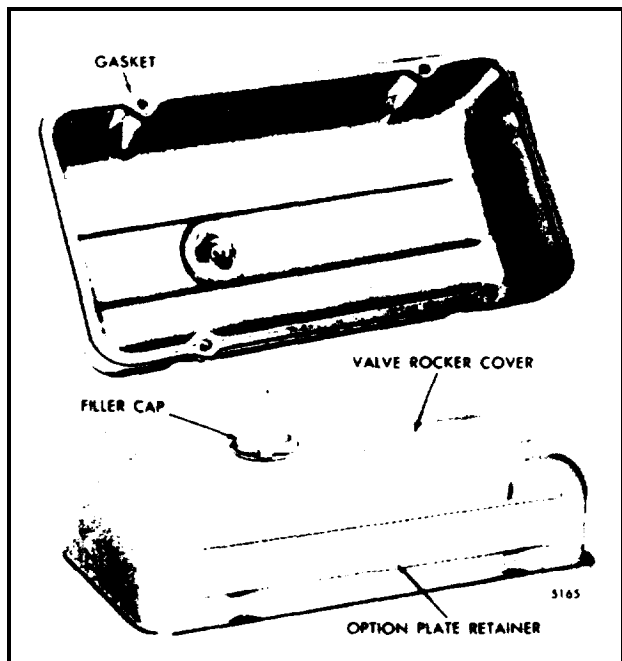


Fig. 1 - Typical Valve Rocker Cover Assembly

The valve rocker cover assembly (Fig. 1) completely encloses the valve and injector rocker arm compartment at the top of the cylinder head. The top of the cylinder head is sealed against oil leakage by a gasket located in the flanged edge of the cover.

An option plate is inserted in a retainer (Fig. 1) attached to the cover on each In-Line engine.

The valve rocker cover assembly on certain engines may include a breather assembly or an oil filler, depending upon the engine application.

### Remove and Install Valve Rocker Cover

Clean the valve rocker cover before removing it from the engine to avoid dust or dirt from entering the valve mechanism. Then remove the valve cover screws and lift the cover straight up from the cylinder head. Use a new gasket when re-installing the cover.



## CRANKSHAFT

The crankshaft (Fig 1) is a one-piece steel forging, heat-treated to ensure strength and durability. All main and connecting rod bearing journal and oil seal surfaces are induction hardened.

Complete static and dynamic balance of the crankshaft has been achieved by counterweights incorporated in the crankshaft.

The crankshaft end play is controlled by thrust washers located at the rear main bearing cap of the engine. Full pressure lubrication to all connecting rod and main bearings is provided by drilled passages within the crankshaft and cylinder block.

On In-Line engines, six tapped holes are provided in the rear end of the crankshaft for attaching the flywheel.

In-line engine main bearing journals are 3" in

diameter and the connecting rod journals are 2-1/2" in diameter.

### Remove Crankshaft

When removal of the crankshaft becomes necessary, first remove the transmission, then proceed as follows:

1. Clean the exterior of the engine.
2. Drain the cooling system.
3. Drain the engine crankcase.
4. Remove all engine to base attaching bolts. Then, with a chain hoist and sling attached to the lifter brackets at each end of the engine, remove the engine from its base.

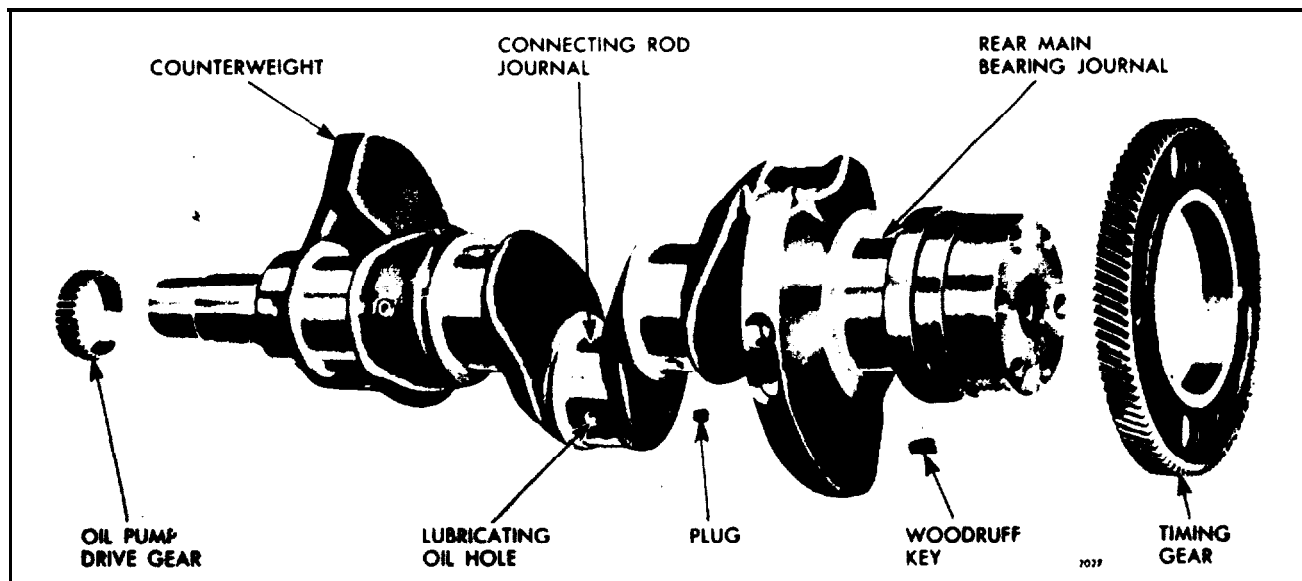


Fig. 1 - Crankshaft Details and Relative Location of Parts (Three Cylinder In-Line Engine Crankshaft Shown)



5. Remove all of the accessories and assemblies with their attaching parts as necessary to permit the engine to be mounted on an overhaul stand.

6. Mount the engine on an overhaul stand and fasten it securely to the mounting plate.

**CAUTION:** Be absolutely sure the engine is securely attached to the stand before releasing the lifting sling. Severe injury to personnel and destruction of engine parts will result if the engine breaks away from the stand.

7. Remove the oil pan.

8. Remove the oil pump inlet pipe and screen.

9. Remove the flywheel and flywheel housing.

10. Remove the crankshaft pulley.

11. Remove the front engine support.

12. Remove the engine lower front cover and oil pump assembly.

13. Remove the cylinder head(s).

15. Remove the connecting rod bearing caps.

16. Remove the main bearing caps.

17. Remove the thrust washers from each side of the rear main bearing.

18. Remove the pistons, connecting rods and liners.

19. Remove the crankshaft, including the timing gear (Fig. 3).

20. Refer to Section 1.7.5 for removal of the crankshaft timing gear and Section 4.1 for the procedure covering removal of the oil pump drive gear.

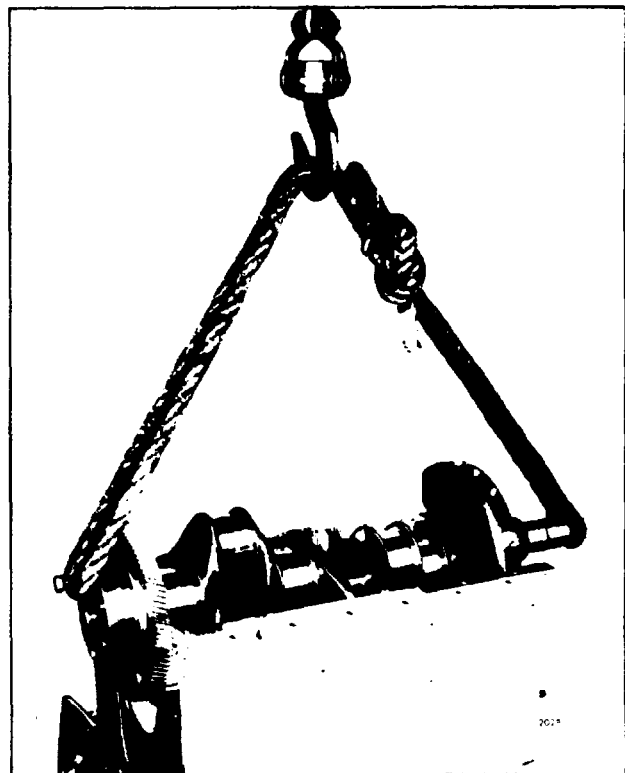


Fig. 3 Removing or Installing Crankshaft

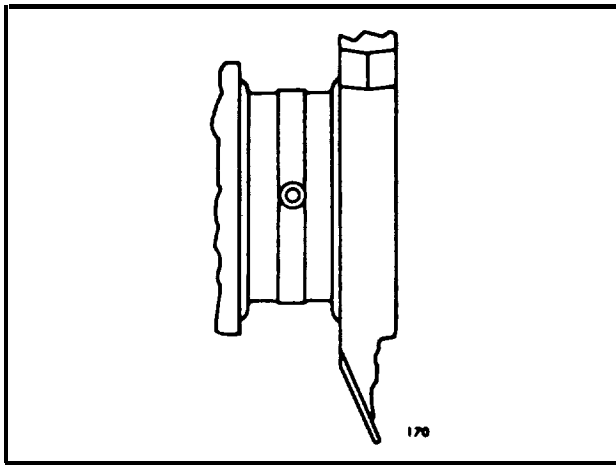


Fig. 4 - Typical Ridging of Crankshaft

### Inspection

After the crankshaft has been removed, clean and inspect it thoroughly before reinstalling it in the engine.

Remove the plugs and clean out the oil passages thoroughly with a stiff wire brush. Clean the crankshaft with fuel oil and dry it with compressed air. Then reinstall the plugs.

Inspect the keyways for evidence of cracks or wear. Replace the crankshaft, if necessary.

If the crankshaft shows evidence of excessive overheating, replace the crankshaft since the heat treatment has probably been destroyed.

Used crankshafts will sometimes show a certain amount of ridging caused by the groove in the upper main bearing shell or lower connecting rod bearing shell (Fig. 4). Ridges exceeding .0002" must be removed. If the ridges are not removed, localized high unit pressures on new bearing shells will result during engine operation.

The ridges may be removed by working crocus cloth, wet with fuel oil, around the circumference of the crankshaft journal. If the ridges are greater than .0005", first use 120 grit emery cloth to clean up the ridge, 240 grit emery cloth for finishing and wet crocus cloth for polishing. Use of a piece of rawhide or other suitable rope wrapped around the emery cloth or crocus cloth and drawn back and forth will minimize the possibility of an out-of-round condition developing (keep the strands of rawhide apart to avoid bind). If rawhide or rope is not used, the crankshaft should be rotated at intervals. If the ridges are greater than .001", the crankshaft may have to be reground.

Carefully inspect the front and rear end of the crankshaft in the area of the oil seal contact surface for evidence of a rough or grooved condition. Any imperfections of the oil seal contact surface will result in oil leakage at this point.

Slight ridges on the crankshaft oil seal contact surfaces may be cleaned up with emery cloth and crocus cloth in the same manner as detailed for the crankshaft journals. If the crankshaft cannot be cleaned up satisfactorily, the oil seals may be repositioned in the flywheel housing and front cover as outlined in Section 1.3.2.

Check the crankshaft thrust surfaces for excessive wear or grooving. If only slightly worn, the surfaces may be dressed with a stone. Otherwise it will be necessary to regrind the thrust surfaces.

Check the oil pump drive gear and the crankshaft timing gear for worn or chipped teeth. Replace the gears, if necessary.

Inspect the crankshaft for cracks as outlined under Inspection for Cracks.

### Crankshaft Measurements

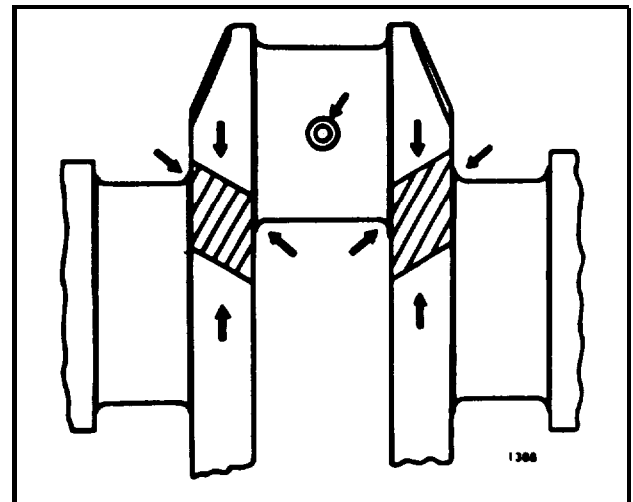


Fig. 5 - Critical Crankshaft Loading Zones

On 3 cylinder in-line crankshafts, the maximum runout on the intermediate journals must not exceed .002 " total indicator reading.

Measure all of the main and connecting rod bearing journals (Fig. 7). Measure the journals at several places on the circumference so that taper, out-of-round and bearing clearances can be determined. If the crankshaft is worn so that the maximum connecting rod journal-to-bearing shell clearance (with new shells) exceeds .0045 " (In-line engine)

or the main bearing journal-to-bearing shell clearance (with new shells) exceeds .0040 " (In-line type engines), the crankshaft must be reground. Measurements of the crankshaft should be accurate to the nearest .0002 ". Also, if the journal taper or out-of-round is greater than .003 ", the crankshaft must be reground.

Also measure the crankshaft thrust surfaces (Fig. 10).

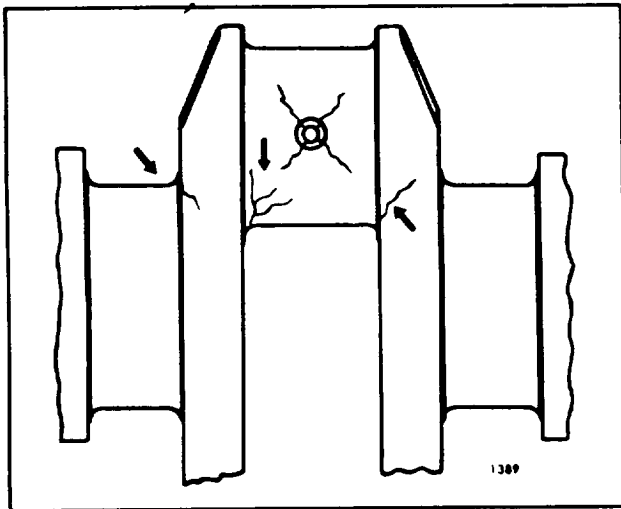


Fig. 6 Crankshaft Fatigue Cracks

### Inspection for Cracks

Carefully check the crankshaft for cracks which start at an oil hole and follow the journal surface at an angle of 45° to the axis. Any crankshaft with such cracks must be rejected. Several methods of determining the presence of minute cracks not visible to the eye are outlined below.

**Magnetic Particle Method:** The part is magnetized and then covered with a fine magnetic powder or solution. Flaws, such as cracks, form a small local magnet which causes the magnetic particles in the powder or solution to gather there, effectively marking the crack. The crankshaft must be de-magnetized after the test.

**Fluorescent Magnetic Particle Method:** This method is similar to the magnetic particle method, but is more sensitive since it employs magnetic particles which are fluorescent and glow under "black light". Very fine cracks that may be missed under the first method, especially on discolored or dark surfaces, will be disclosed under the "black light".

**Fluorescent Penetrant Method:** This is a method which may be used on non-magnetic materials such as stainless steel, aluminum and plastics. A highly fluorescent liquid penetrant is applied to the part. Then the excess penetrant is wiped off and the part is dried. A developing powder is then applied which helps to draw the penetrant out of the flaws by capillary action. Inspection is carried out under "black light".

A majority of indications revealed by the above inspection methods are normal and harmless and only in a small percentage of cases is reliability of the part impaired when indications are found. Since inspection reveals the harmless indications with the same intensity as the harmful ones, detection of the indications is but a first step in the procedure. Interpretation of the indications is the most important step.

All Detroit Diesel crankshafts are magnetic particle inspected after manufacture to ensure against any shafts with harmful indications getting into the original equipment or factory parts stock.

Crankshaft failures are rare and when one cracks or breaks completely, it is very important to make a thorough inspection for contributory factors. Unless abnormal conditions are discovered and corrected, there will be a repetition of the failure.

There are two types of loads imposed on a crankshaft in service -- a bending force and a twisting force. The design of the shaft is such that these forces produce practically no stress over most of the surface. Certain

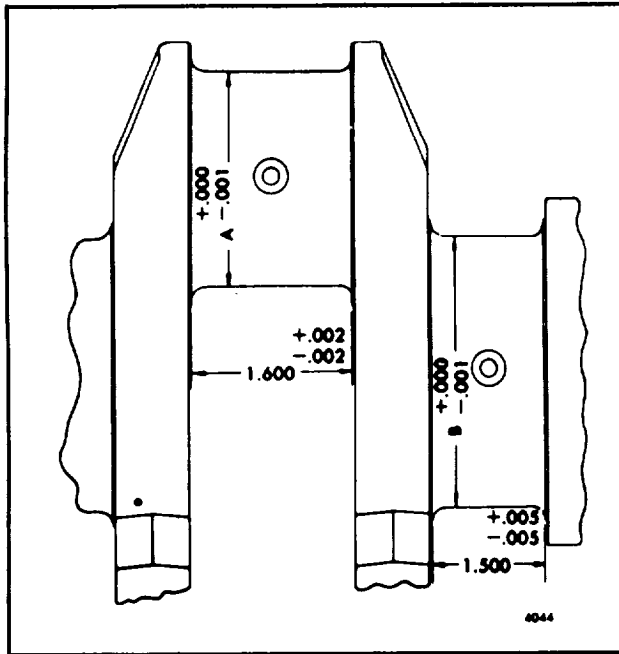


Fig. 7 Dimensions of Crankshaft Journals .  
In-Line Engine

small areas, designated as critical areas, sustain most of the load (Fig. 5).

**Bending fatigue** failures result from bending of the crankshaft which takes place once per revolution.

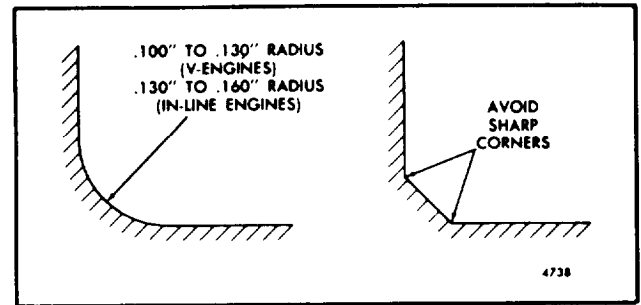


Fig. 9 . Crankshaft Journal Fillets

The crankshaft is supported between each of the cylinders by a main bearing and the load imposed by the gas pressure on top of the piston is divided between the adjacent bearings. An abnormal bending stress in the crankshaft, particularly in the crank fillet, may be a result of misalignment of the main bearing bores, improperly fitted bearings; bearing failures, a loose or broken bearing cap, or unbalanced pulleys. Also, drive belts which are too tight may impose a bending load upon the crankshaft.

Failures resulting from bending start at the pin fillet and progress throughout the crank cheek, sometimes extending into the journal fillet. If main bearings are replaced due to one or more badly damaged bearings, a careful inspection must be made to determine if any cracks have started in the crankshaft. These cracks are most likely to occur on either side of the damaged bearing.

**Torsional fatigue** failures result from torsional vibration which takes place at high frequency.

A combination of abnormal speed and load conditions may cause the twisting forces to set up a vibration, referred to as torsional vibration, which imposes high stresses at the locations shown in Fig. 5.

Torsional stresses may produce a fracture in either the connecting rod journal or the crank cheek. Connecting rod journal failures are usually at the fillet at  $45^\circ$  to the axis of the shaft.

A loose, damaged or defective vibration damper, a loose flywheel or the introduction of improper or additional pulleys or couplings are usual causes of this type of failure. Also, overspeeding of the engine or resetting the governor at a different speed than intended for the engine application may be contributory factors.

As previously mentioned, most of the indications found during inspection of the crankshaft are harmless. The two types of indications to look for are circumferential fillet cracks at the critical areas and  $45^\circ$

cracks (45° with the axis of the shaft) starting from either the critical fillet locations or the connecting rod journal holes as shown in Fig. 6. Replace the crankshaft when cracks of this nature are found.

**Crankshaft Grinding**

In addition to the standard size main and connecting rod bearings, .002", .010", .020" and .030" undersize bearings are available.

**NOTE:** The .002" undersize bearings are used only to compensate for slight wear on crankshafts on which regrinding is unnecessary.

If the crankshaft is to be reground, proceed as follows:

1. Compare the crankshaft journal measurements taken during inspection with the dimensions in Table 1 and Fig. 7 and determine the size to which the journals are to be reground.
2. If one or more main or connecting rod journals require grinding, then grind all of the main journals or all of the connecting rod journals to the same required size.
3. All journal fillets on the In-line crankshafts must have a .130" to .160" radius

The fillet must blend smoothly into the journal and the crank cheek and must be free of scratches. The radius may be checked with a fillet gage.

4. Care must be taken to avoid localized heating which

Bearing Size	Conn. Rod Journal Dia.	Main Bearing Journal Dia.
<b>In-Line Engines</b>		
Standard	2.499"/2.500"	2.999"/3.000"
.002" Undersize	2.497"/2.498"	2.997"/2.998"
.010" Undersize	*2.489"/2.490"	*2.989"/2.990"
.020" Undersize	*2.479"/2.480"	*2.979"/2.980"
.030" Undersize	*2.469"/2.470"	*2.969"/2.970"

\*Dimension of reground crankshaft

TABLE 1

often produces grinding cracks. Cool the crankshaft while grinding, using coolant generously. Do not crowd the grinding wheel into the work.

5. Polish the ground surfaces to an 8-12 R.M.S. finish. The reground journals will be subject to excessive wear unless polished smooth.
6. If the thrust surfaces of the crankshaft (Fig. 10) are worn or grooved excessively, they must be reground and polished. Care must be taken to leave a .130" to .160" radius on the In-line crankshaft between each thrust surface and the bearing journal.
7. Stone the edge of all oil holes in the journal surfaces smooth to provide a radius of approximately 3/32".
8. After grinding has been completed, inspect the crankshaft by the magnetic particle method to determine whether cracks have originated due to the grinding operation.
9. De-magnetize the crankshaft.
10. Remove the plugs and clean the crankshaft and oil passages thoroughly with fuel oil. Dry the shaft with compressed air and reinstall the plugs.

**Install Crankshaft**

If a new crankshaft is to be installed, steam clean it to remove the rust preventive, blow out the oil passages with compressed air and install the plugs. Then install the crankshaft as follows:

1. Assemble the crankshaft timing gear (Section 1.7.5) and the oil pump drive gear (Section 4.1) on the crankshaft.
2. Refer to Section 1.3.4 for main bearing details and install the upper grooved bearing shells in the block. If the old bearing shells are to be used again, install

Nominal Size	Thrust Washer Thickness	
	Min.	Max.
Standard	.1190"	.1220"
.005" Oversize	.1255"	.1270"
.010" Oversize	.1300"	.1320"

TABLE 2

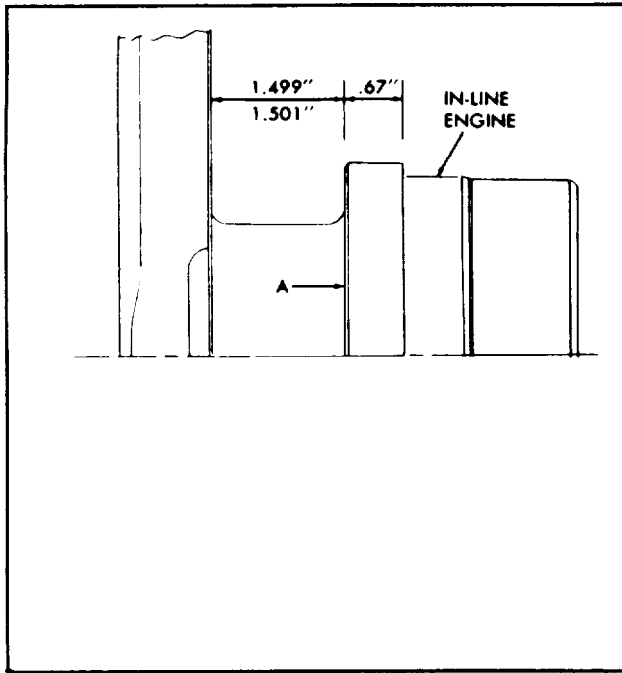


Fig. 10 . Standard Dimensions at Crankshaft Thrust Surfaces-In-Line Engines

them in the same locations from which they were removed.

**NOTE:** When a new or reground crankshaft is installed, *ALL* new main and connecting rod (upper and lower) bearing shells and new thrust washers must also be installed.

3. Apply clean engine oil to all crankshaft journals and install the crankshaft in place so that the timing marks on the crankshaft timing gear and the idler gear match. Refer to Section 1.7.1 for the correct method of timing the gear train.

4. Install the upper halves of the crankshaft thrust washers on each side of the rear main bearing support and the doweled lower halves on each side of the rear main bearing cap. *The grooved side of the thrust washers must face toward the crankshaft thrust surfaces.*

**NOTE:** If the crankshaft thrust surfaces were reground, it may be necessary to install oversize thrust washers on one or both sides of the rear main journal. Refer to Fig. 10 and Table 2.

5. Install the lower bearing shells (no oil grooves: in the bearing caps. If the old bearing shells are to be used again, install them in the same bearing caps from which they were removed.

6. Install the main bearing caps and lower bearing

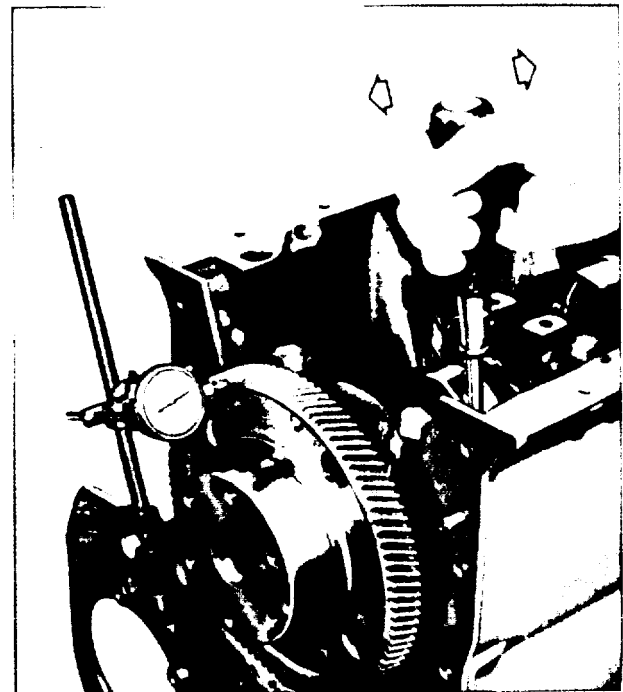


Fig. 11 . Checking Crankshaft End Play

shells as outlined under *Install Main Bearing Shells* in Section 1.3.4.

**NOTE:** If the bearings have been installed properly, the crankshaft will turn freely with all of the main bearing cap bolts drawn to the specified torque.

7. Check the crankshaft end play by moving the crankshaft toward the gage (Fig. 11 ) with a pry bar. Keep a constant pressure on the pry bar and set the dial indicator to zero. Then remove and insert the pry bar on the other side of the bearing cap. Force the crankshaft in the opposite direction and note the amount of end play on the dial. The end play should be .004" to .011" with new parts or a maximum of .018" with used parts. Insufficient end play can be the result of a misaligned rear main bearing or a burr or dirt on the inner face of one or more of the thrust washers.

8. Install the cylinder liner, piston and connecting rod assemblies (Section 16.3).

9. Install the cylinder head(s) (refer to Section 1.2).

10. Install the flywheel housing (Section 1.5). then install the flywheel (Section 1.4).

11. Install the crankshaft lower engine front cover and the lubricating oil pump assembly on In-line

engine.

12. Install the engine front support, if used.
13. Install the crankshaft pulley (Section 1.3.7).
14. Install the oil pump inlet pipe and screen on In-line engine  
(Section 4.1).
15. Affix a new gasket to the oil pan flange and install the oil pan.
16. Use a chain hoist and sling attached to the lifting

bracket at each end of the engine and remove the engine from the overhaul stand.

17. Install all of the accessories that were removed.
18. After the engine has been completely reassembled, refer to the *Lubricating Oil Specifications* in Section 13.3 and refill the crankcase to the proper level on the dipstick.
19. Close all of the drains and fill the cooling system.
20. After replacing the main or connecting rod bearings or installing a new or reground crankshaft, operate the engine as outlined in the run-in schedule (Section 13.2.1).

## CRANKSHAFT OIL SEALS

An oil seal is used at each end of the crankshaft to retain the lubricating oil in the crankcase. The sealing lips of the oil seals are held firmly, but not tight, against the crankshaft sealing surfaces by a coil spring.

The front oil seal is pressed into the lower front cover on In-line engines (Fig. 1).

A single-lip oil seal is used at the rear end of the crankshaft of most industrial engines. A double-lip oil seal is used in engines where there is oil on both sides of the oil seal; the lips of the seal face in opposite directions. The rear oil seal is pressed into the flywheel housing (Fig. 2).

Oil leaks indicate worn or damaged oil seals. Oil seals may become worn or damaged due to improper installation, excessive main bearing clearances, excessive flywheel housing bore runout or grooved sealing surfaces on the crankshaft. To prevent a repetition of any oil seal leaks, these conditions must be checked and corrected.

### Remove Crankshaft Oil Seals

Remove the engine front cover (Section 1.3.5), outboard bearing support or the flywheel housing (Section 1.5) and remove the oil seals as follows:

1. Support the forward face of the front cover, or the outboard bearing support, on two wood blocks next to

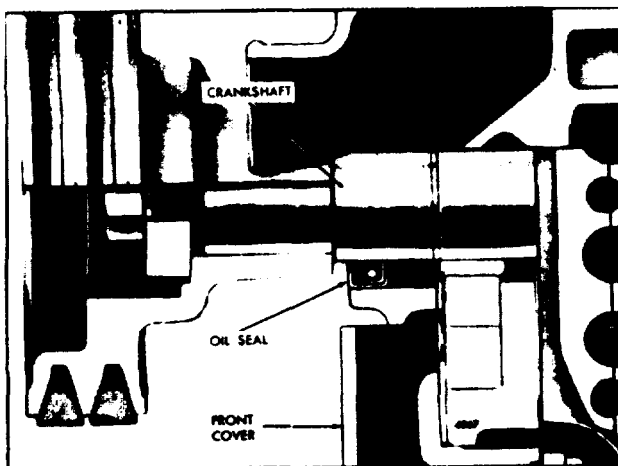


Fig. 1 - Crankshaft Front Oil Seal

the oil seal bore. Then press or drive the oil seal out of the front cover or the outboard bearing support. Discard the oil seal.

2. Support the forward face of the flywheel housing on In-line engines on two wood blocks next to the oil seal bore. Then press or drive the oil seal out of the housing. Discard the oil seal.

3. Clean the oil seal bore in the front cover, outboard bearing support or flywheel housing thoroughly before installing a new oil seal.

When necessary, an oil seal may be removed without removing the front cover, outboard bearing support or flywheel housing. This may be done by drilling diametrically opposite holes in the seal casing and threading metal screws, backed by flat washers, into the casing. Remove the seal by prying against the washers with pry bars.

### Inspection

Inspect the front and rear end of the crankshaft

for wear due to the rubbing action of the oil seal, dirt build-up or fretting caused by action of the flywheel.

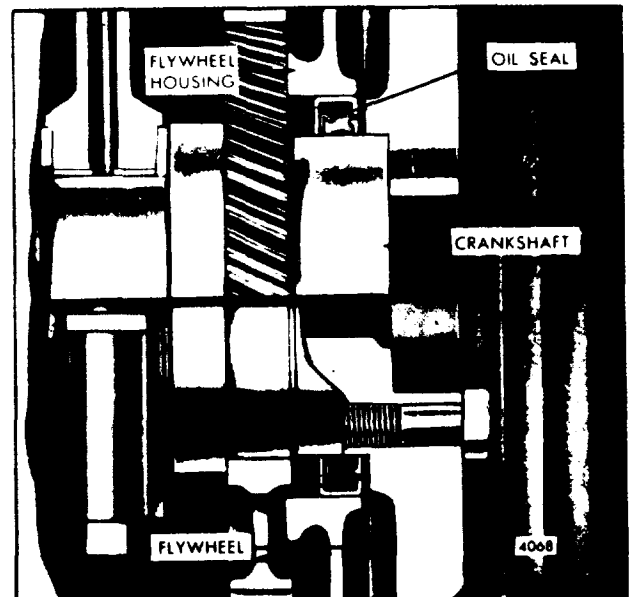


Fig. 2 . Crankshaft Rear Oil Seal (In-Line Engines)



The crankshaft surface must be clean and smooth to prevent damaging the seal lip when a new oil seal is installed. Slight ridges may be removed from the crankshaft as outlined under Inspection in Section 1.3.

On In-line engines, if the crankshaft cannot be cleaned up satisfactorily, the oil seal may be pressed into the flywheel housing or the front cover 1/8" from its original position.

If excessive wear or grooving is present: install an oil seal sleeve (Figs. 3, and 5) which provides a replaceable wear surface for the lip-type oil seal. The oil seal sleeve may be used with either the single-lip or double-lip type oil seal, and can also be used in conjunction with the seal spacer. However, an oversize oil seal must be used with the sleeve.

Install the rear oil seal sleeve (Fig. 3) as follows:

1. Stone the high spots from the oil seal contact surface of the crankshaft.
2. Coat the area of the shaft where the sleeve will be positioned with shellac or an equivalent sealant.
3. Drive the sleeve squarely on the shaft with

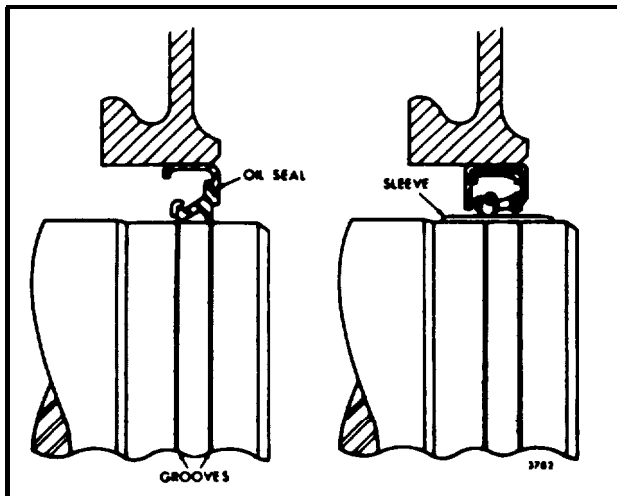


Fig. 3 . Use of Rear Oil Seal Sleeve on Grooved Crankshaft (In-line Engines)

crankshaft rear oil seal sleeve installer J 21277 (in-line engines).

4. Wipe off any excess sealant.
5. Coat the outside diameter of the sleeve with engine oil.

Install the front oil seal sleeve (Fig. 5) as follows:

1. Stone the high spots from the oil seal contact surface of the crankshaft.

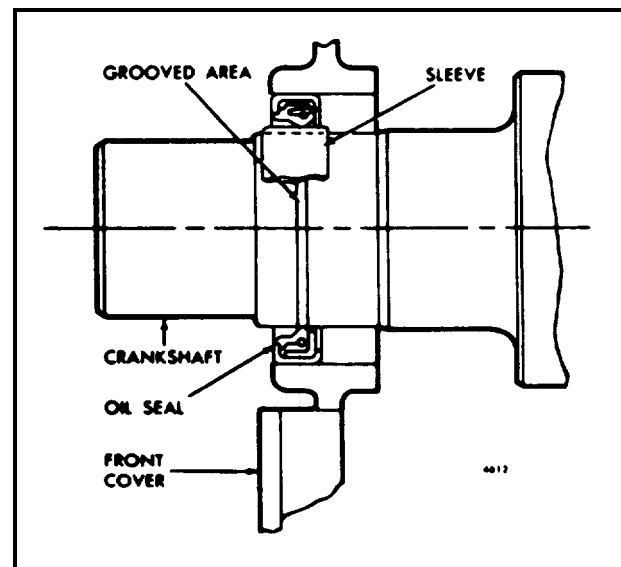


Fig. 5 . Use of Front Oil Seal Sleeve on Grooved Crankshaft (In-line Engines)

2. Coat the area of the shaft where the sleeve will be positioned with shellac or an equivalent sealant.
3. Position the sleeve on the crankshaft with the radius on the sleeve facing away from the engine.
4. Drive the sleeve squarely on the shaft with front oil seal sleeve installer J 22524 and the crankshaft pulley retaining bolt.
5. Wipe off any excess sealant.
6. Coat the outside diameter of the sleeve with engine oil.

To remove a worn sleeve,peen the outside diameter of the sleeve until it stretches sufficiently so it can be slipped off of the end of the crankshaft.

### Oil Seals

Current oil seals are made of an oil resistant synthetic rubber which is pre-lubricated with a special lubricant. *Do not remove this lubricant.* Keep the sealing lip clean and free from scratches. In addition, a plastic coating which acts as a sealant has been applied to the outer surface of the casing. Do not remove this coating.

### Install Crankshaft Front Oil Seal

1. If the oil seal is not pre-coated, apply a non-hardening sealant to the periphery of the metal casing.
2. Coat the lip of the new oil seal lightly with grease or vegetable shortening. Then position the seal in the cover or outboard bearing support with the lip of the

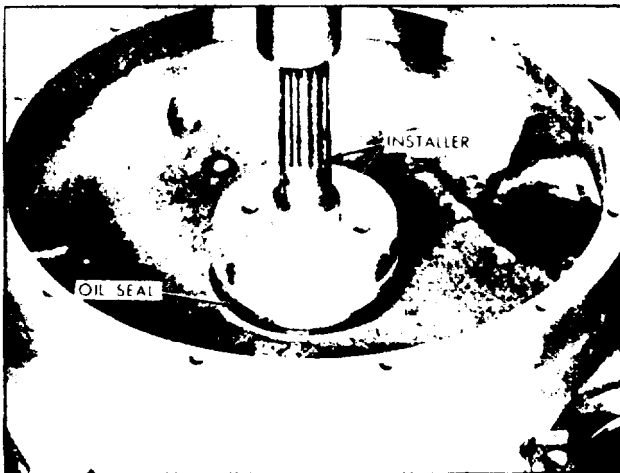


Fig. 6 . Installing Oil Seal in Flywheel Housing

- seal pointed toward the inner face of the cover or bearing support.
3. Place the cover or outboard bearing support in an arbor press (inner face down).
4. On In-line engines, use installer J 9783 to press the oil seal into the cover until the seal is flush with the outside face of the cover.
5. Remove any excess sealant.
6. Install the engine front cover (Section 1.3.5) or the outboard bearing support.

### Install Crankshaft Rear Oil Seal

1. Support the inner face of the flywheel housing in an arbor press or on a flat surface.
2. If the new seal is not pre-coated, apply a non-hardening sealant to the periphery of the metal casing. Then position the seal with the lip pointed toward the inner face of the housing.
3. Coat the lip of the oil seal lightly with engine oil (single-lip seal) or vegetable shortening (double-lip seal). Do not scratch or nick the sealing edge of the oil seal.
4. On In-Line engines, use installer J 9479 to press the oil seal into the flywheel housing until the seal is flush with the outside face of the housing (Fig. 6). If the flywheel housing was not removed from the engine, place oil seal expander J 9769 (standard size seal) or J 21278 (oversize seal) against the end of the crankshaft. Then, with the lip of the seal pointed toward the engine, slide the seal over the expander and on the crankshaft. Next, thread the guide studs J 9479-2 into the crankshaft. Now drive the seal into the flywheel housing with installer J 9479-1 until it is flush with the face of the housing.

6. Remove any excess sealant from the flywheel housing and the seal.

**CAUTION:** If the oil seal is of the type which incorporates a brass retainer in the inner diameter of the seal, be sure the retainer is in place in the seal before installing the flywheel

housing on the engine. If the retainer is left out, oil leakage will result.

7. Install the flywheel housing as outlined in Section 1.5.

## CRANKSHAFT MAIN BEARINGS

The crankshaft main bearing shells (Figs. 1 and 2) are precision made and are replaceable without machining. They consist of an upper bearing shell seated in each cylinder block main bearing support and a lower bearing shell seated in each main bearing cap. The bearing shells are prevented from endwise or radial movement by a tang at the parting line at one end of each bearing shell. The tangs on the lower bearing shells are off-center and the tangs on the upper bearing shells are centered to aid correct installation.

On In-line engines, a 7/16" oil hole in the groove of each upper bearing shell, midway between the parting lines, registers with a vertical oil passage in the cylinder block. Lubricating oil, under pressure, passes from the cylinder block oil gallery by way of the bearing shells to the drilled passages in the crankshaft, then to the connecting rods and connecting rod bearings.

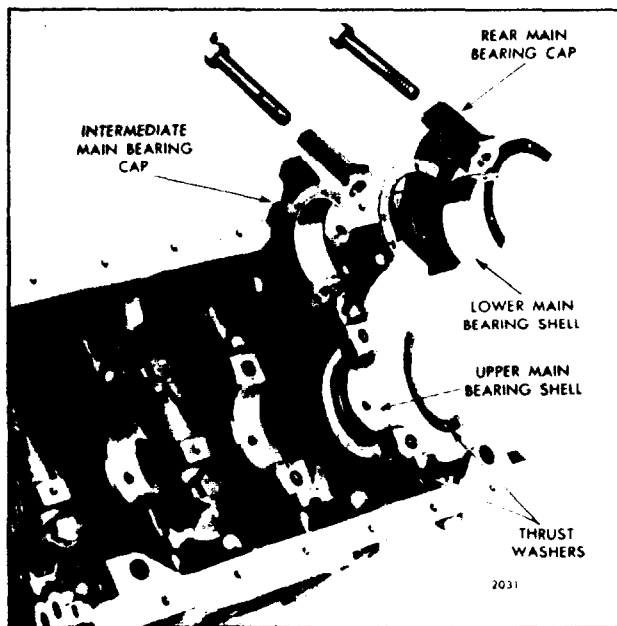


Fig. 1 - Main Bearing Shells, Bearing Caps and Crankshaft Thrust Washers -- In-Line Engines

The lower main bearing shells have no oil grooves; therefore, the upper and lower bearing shells must not be interchanged.

Thrust washers (Fig. 1) on each side of the rear main bearing, absorb the crankshaft thrust. The lower halves of the two-piece washers are doweled to the bearing cap; the upper halves are not doweled.

Main bearing trouble is ordinarily indicated by low or no oil pressure. All of the main bearing load is carried on the lower bearings; therefore, wear will occur on the lower bearing shells first. The condition of the lower main bearing shells may be observed by removing the main bearing caps.

If main bearing trouble is suspected, remove the oil pan, then remove the main bearing caps, one at a time, as outlined below and examine the bearing shells.

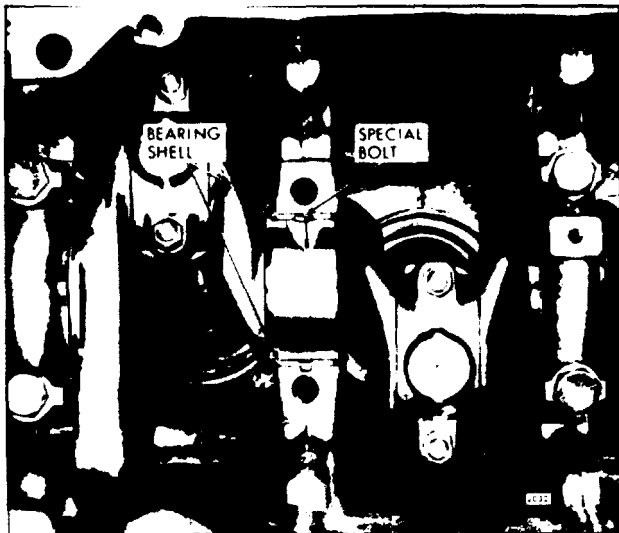


Fig. 4 - Removing Upper Main Bearing Shell  
(Except Rear Main)

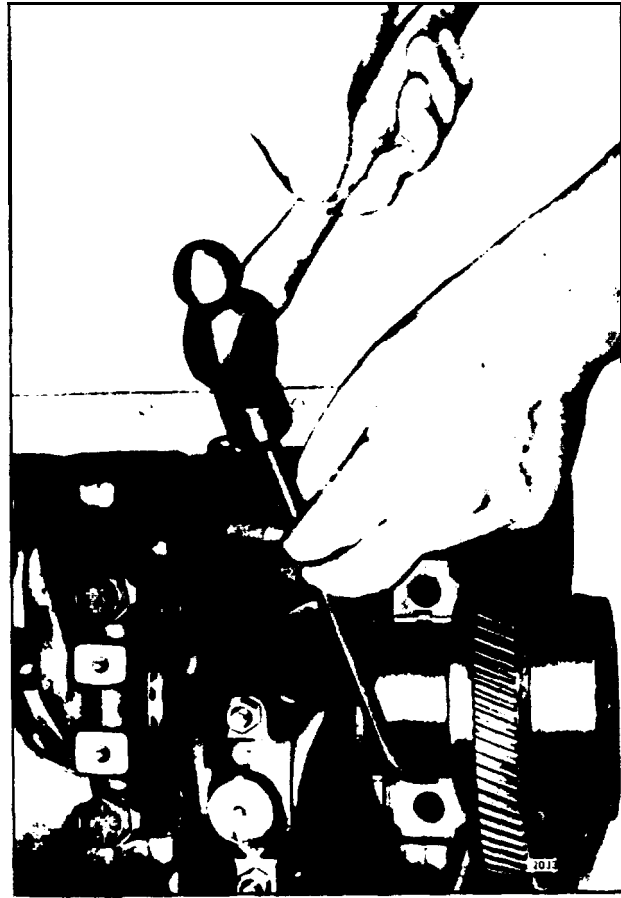


Fig. 5 Removing Upper Rear Main Bearing Shell

Remove Main Bearing Shells (Crankshaft in Place )

The bearing caps are numbered 1, 2, 3, etc., indicating their respective positions and, when removed, must always be reinstalled in their original position.

All crankshaft main bearing journals, except the rear journal, are drilled for an oil passage. Therefore, the procedure for removing the upper bearing shells with the crankshaft in place is somewhat different on the drilled journals than on the rear journal.

Remove the main bearing shells as follows:

1. Drain ,and remove the oil pan to expose the main bearing caps.
2. Remove the oil pump and the oil inlet pipe and screen assembly.

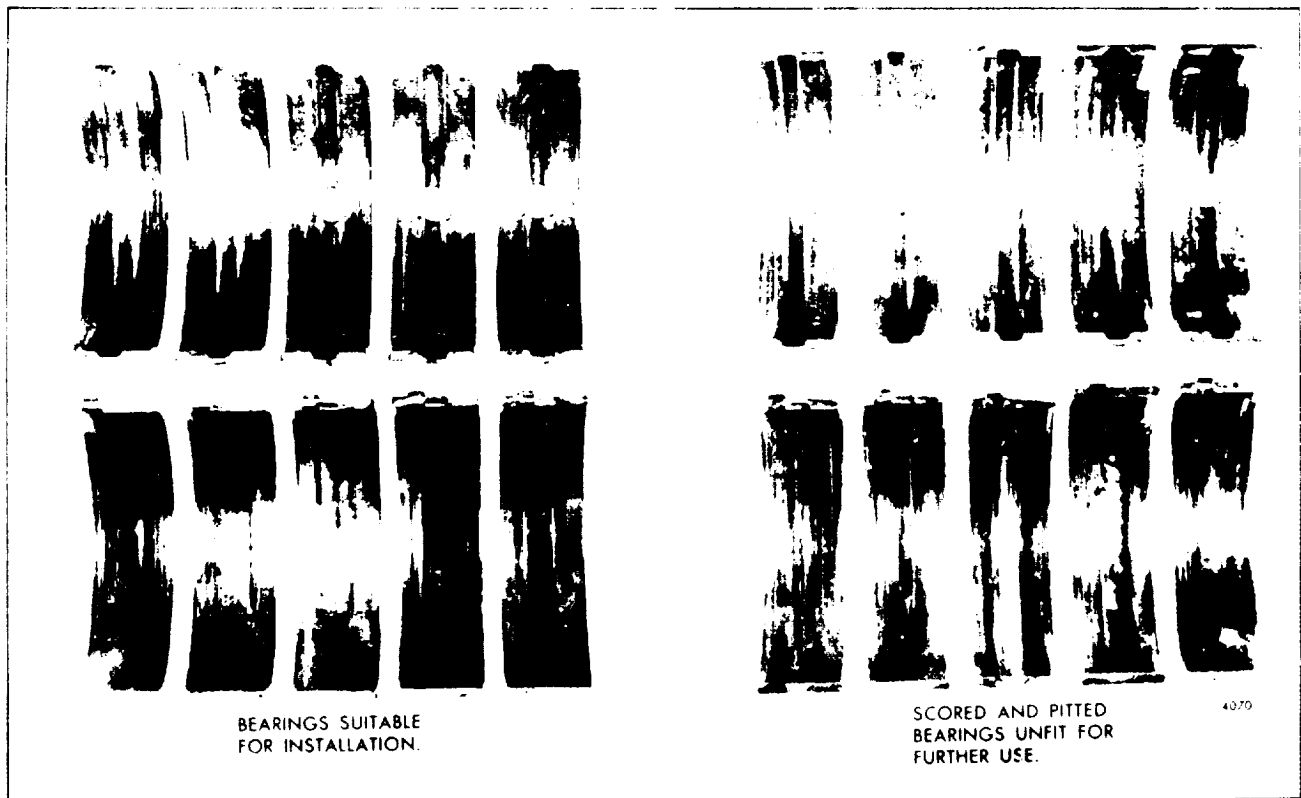


Fig. 6 Comparison of Main Bearing Shells

3. Remove one main bearing cap at a time and inspect the bearing shells as outlined under *Inspection*. Reinstall each bearing shell and bearing cap before removing another bearing cap.

- a. To remove all except the rear main bearing shell, insert a 1/4" x 3/4" bolt with a 1/2" diameter and 1/16" thick head (made from a standard bolt) into the crankshaft journal oil hole. Then revolve the shaft to the right (clockwise) and roll the bearing shell out of position as shown in Fig. 4. The head of the bolt must not extend beyond the outside diameter of the bearing shell.
- b. Remove the rear main bearing upper shell by tapping on the edge of the bearing with a small curved rod, revolving the crankshaft at the same time to roll the bearing shell out as shown in Fig. 5.
- c. The lower halves of the crankshaft thrust washers will be removed along with the rear main bearing cap. The upper halves of the washers can be removed for inspection by pushing on the ends of the washers with a small rod, forcing them around and out of the main bearing support.

#### Inspection

Bearing failures may result from deterioration (acid formation) or contamination of oil or loss of oil. An analysis of the lubricating oil may be required to determine if corrosive acid and sulphur are present which cause acid etching, flaking and pitting. Bearing seizure may be due to low oil or no oil.

Check the oil filter elements and replace them if necessary. Also check the oil by-pass valve to make sure it is operating freely.

After removal, clean the bearings and inspect them for scoring, pitting, flaking, etching, loss of babbitt or signs of overheating (Fig. 6). The lower bearing shells, which carry the load, will normally show signs of distress before the upper bearing shells.

Inspect the backs of the bearing shells for bright spots which indicate they have been moving in the bearing caps or bearing supports. If such spots are present, discard the bearing shells.

Measure the thickness of the bearing shells at point "C", 90° from the parting line, as shown in Figs. 7 and 8. Tool J 4757, placed between the bearing shell and a micrometer, will give an accurate measurement.

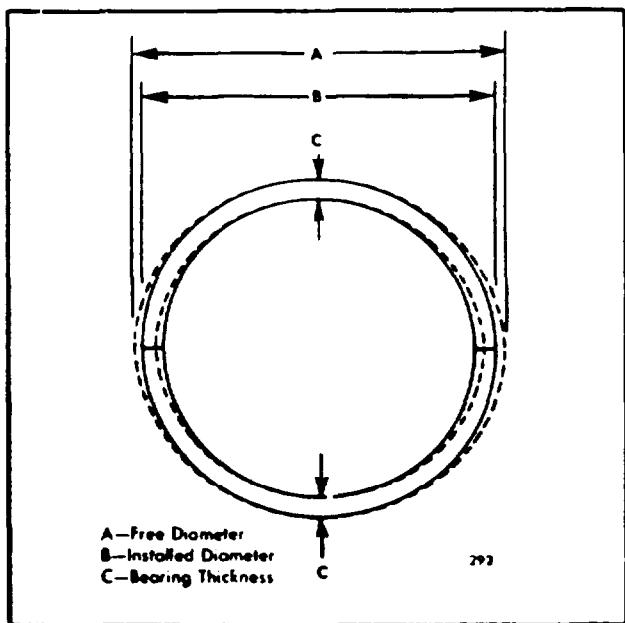


Fig. 7 Main Bearing Measurements

The bearing shell thickness will be the total thickness of the steel ball and the bearing shell. less the diameter of the ball. This is the only practical method for measuring the bearing thickness. unless a special micrometer is available for this purpose. The minimum thickness of a worn standard main bearing shell is .1230" and, if any of the bearing shells are thinner than this dimension, replace all of the bearing shells. A new standard bearing shell has a thickness of .1245" to .1250"(in-line engine),  
 Refer to Table 1.

In addition to the thickness measurement, check the

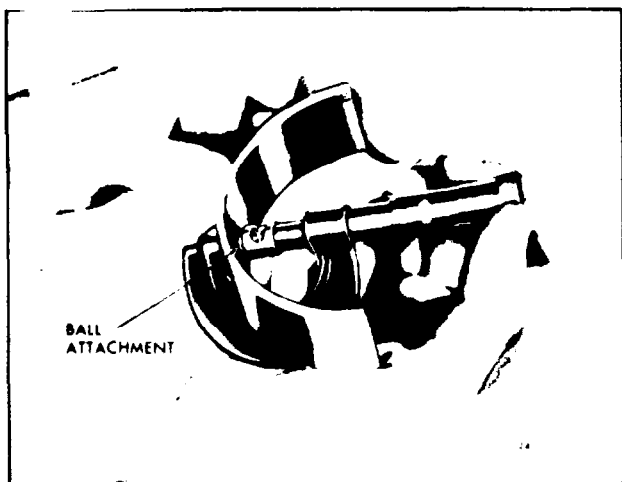


Fig. 8 - Measuring Thickness of Bearing Shell

Bearing Size	Bearing Thickness	Minimum Thickness
In-Line Engines		
Standard	.1245"/.1250"	.1230"
.002" Undersize	.1255"/.1260"	.1240"
.010" Undersize	.1295"/.1300"	.1280"
.020" Undersize	.1345"/.1350"	.1330"
.030" Undersize	.1395"/.1400"	.1380"

TABLE 1

clearance between the main bearings and the crankshaft journals. This clearance may be determined with the crankshaft in place by means of a soft plastic measuring strip which is squeezed between the journal and the bearing (refer to Shop Notes in Section 1.0). With the crankshaft removed, measure the outside diameter of the crankshaft main bearing journals and the inside diameter of the main bearing shells when installed in place with the proper torque on the bearing cap bolts. When installed, the bearing shells are .001" larger in diameter at the parting line than 90° from the parting line.

The bearing shells do not form a true circle when not installed. When installed, the bearing shells have a squeeze fit in the main bearing bore and must be tight when the bearing cap is drawn down. This *crush* assures a tight, uniform contact between the bearing shell and bearing seat. Bearing shells that do not have sufficient crush will not have uniform seat contact, as shown by shiny spots on the back, and must be replaced. If the clearance between any crankshaft journal and its bearing shells exceeds .0060", all of the bearing shells must be discarded and replaced. This clearance is .0100" to .0040" with new parts.

Before installing new replacement bearings, it is very important to thoroughly inspect the crankshaft journals. Very often, after prolonged engine operation, a ridge is formed on the crankshaft journals in line with the journal oil holes. If this ridge is not removed before the new bearings are installed, then, during engine operation, localized high unit pressures in the center area of the bearing shell will cause pitting of the bearing surface. Also, damaged bearings may cause bending fatigue and resultant cracks in the

crankshaft. See Section 1.3 under *Crankshaft Inspection* for removal of ridges and inspect of the crankshaft.

Do not replace one main bearing shell alone. If one bearing shell requires replacement, install both new upper and lower bearing shells. Also, if a new or reground crankshaft is to be used, install all new bearing shells.

Bearing shells are available in .010", .020" and .030" undersize for service with reground crankshafts. To determine the size bearings required, refer to *Crankshaft Grinding* in Section 1.3.

Bearings which are .002" undersize are available to compensate for slight journal wear where it is unnecessary to regrind the crankshaft.

**NOTE:** Bearing shells are NOT reworkable from one undersize to another under any circumstances.

Inspect the crankshaft thrust washers. If the washers are scored or worn excessively or the crankshaft end play is excessive, they must be replaced. Improper clutch adjustment can contribute to excessive wear on the thrust washers. Inspect the crankshaft thrust surfaces. Refer to *Install Crankshaft* in Section 1.3. If, after dressing or regrinding the thrust surfaces, new standard size thrust washers do not hold the crankshaft end play within the specified limits, it may be necessary to install oversize thrust washers on one or both sides of the rear main bearing. A new standard size thrust washer is .1190" to .1220" thick. Thrust washers are available in .005" and .010" oversize.

#### Install Main Gearing Shells (Crankshaft in Place)

Make sure all of the parts are clean. Then apply clean engine oil to each crankshaft journal and install the upper main bearing shells by reversing the sequence of operations given for removal.

The upper and lower main bearing shells are not alike; the upper shell is grooved and drilled for lubrication -- the lower shell is not. Be sure to install the grooved and drilled bearing shells in the cylinder block and the plain bearing shells in the bearing caps, otherwise the oil flow to the bearings and to the upper

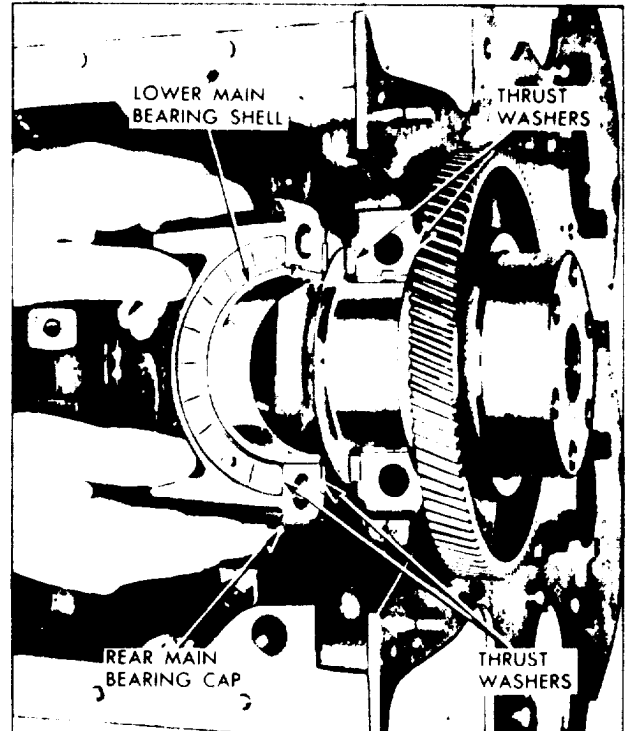


Fig. 9- Crankshaft Thrust Washers in Place

end of the connecting rods will be blocked off. Used bearing shells must be reinstalled on the same journal from which they were removed.

1. When installing an upper main bearing shell with the crankshaft in place, start the plain end of the bearing shell around the crankshaft journal so that, when the bearing is in place, the tang will fit into the groove in the bearing support.
2. Install the lower main bearing shell so that the tang on the bearing fits into the groove in the bearing cap.
3. Assemble the crankshaft thrust washers (Fig. 9) before installing the rear main bearing cap. Clean both halves of each thrust washer carefully and remove any burrs from the washer seats -- the slightest burr or particle of dirt may decrease the clearance between the washers and the crankshaft beyond the specified limit. Slide the upper halves of the thrust washers into place. Then assemble the lower halves over the dowel pins in the bearing cap.

**NOTE:** The main bearing caps are bored in position and marked 1 2. 3. etc. They must be installed in their original positions with the marked side of each cup facing the same side of the cylinder block that carries the engine serial number.



4. With the lower main bearing shells installed in the bearing caps, apply a small quantity of International Compound No. 2, or equivalent, to the bolt threads and the bolt head contact area. Install the bearing caps and draw the bolts up snug. Then rap the caps sharply with a soft hammer to seat them properly and tighten the bolts uniformly, starting with the center bearing cap and working alternately towards both ends of the block, to 120-130 lb-ft torque.

**NOTE:** If the bearings have been installed properly, the crankshaft will turn freely with all of the main bearing cap bolts drawn to the specified torque.

5. Check the crankshaft end play as outlined under *Install Crankshaft* in Section 1.3.

6. Install the lubricating oil pump and oil intake pipe assembly.

**NOTE:** If shims were used between the pump (8V engine) and the bearing caps, install them in their original positions.

7. Install the oil pan, using a new gasket.

8. Fill the crankcase to the proper level on the dipstick with *heavy-duty* lubricating oil of the recommended grade and viscosity (refer to *Lubricating Oil Specifications* in Section 13.3).

9. After installing new bearing shells, operate the engine on a run-in schedule as outlined in Section 13.2.1.

## ENGINE FRONT COVER (Lower)

### In-Line

### Engines

The engine lower front cover is mounted against the cylinder block at the lower front end of the engine (Fig.1). It serves as a housing for the crankshaft front oil seal, the lubricating oil pump, the oil pressure regulator valve and the oil cooler by-pass valve. The clean-out openings in the periphery of the current cover incorporate tapped holes and 1/2 "-14 threaded plugs.

On all In-line engines effective with engine serial number

3D-4295 (except 3D-4373),

the oil pressure regulator valve is located on the right-hand side of the engine front cover, as viewed from the front of the engine. Prior to the above engine serial numbers, the oil pressure regulator valve was located on the left-hand side of the front cover just below the oil cooler by-pass valve.

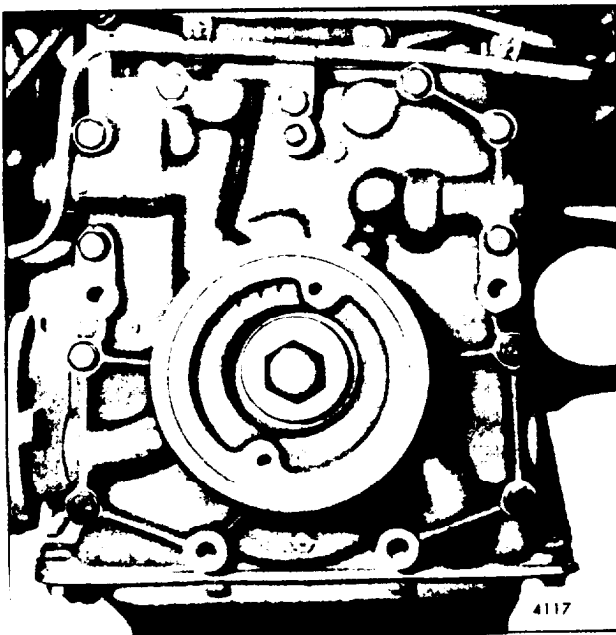


Fig. 1 - Engine Front Cover Mounting (Lower)  
In-Line Engine

### Remove Engine Front Cover

1. Drain the oil and remove the oil pan.
2. Remove the crankshaft pulley as outlined in Section 1.3.7.
3. Remove the two bolts and lock washers that secure the lubricating oil pump inlet tube flange or elbow to the engine front cover.
4. Remove the bolts and lock washers that secure the engine front cover to the cylinder block.
5. Strike the cover with a soft hammer to free it from the dowels. Pull the cover straight off the end of the crankshaft.
6. Remove the cover gasket.
7. Inspect the oil seal and lubricating oil pump as outlined in Sections 1.3.2 and 4.1. Also check the oil pressure regulator valve and oil cooler by-pass valve as outlined in Sections 4.1.1 and 4.4.

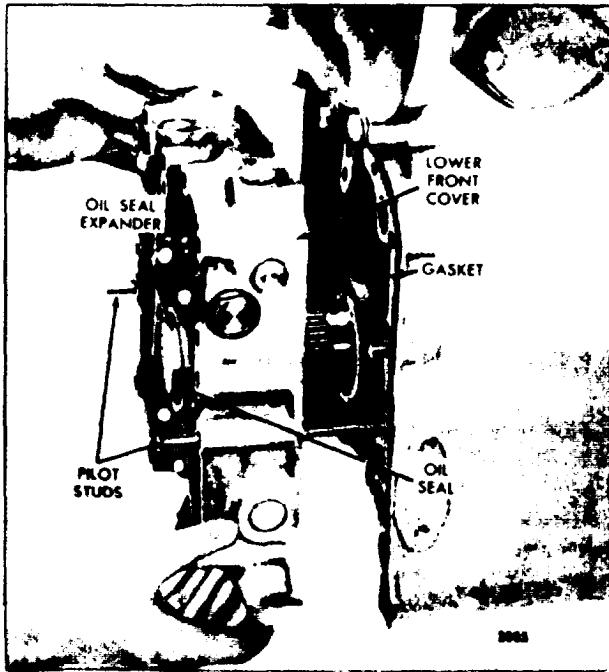


Fig. 3 -Installing Lower Engine Front Cover  
In.Line Engine

#### Install Engine Front Cover

1. Affix a new cover gasket to the cylinder block.
2. Install oil seal expander J 7454 over the front end of the crankshaft

3. Thread two 3/8"-16 pilot studs approximately 8" long into two diametrically opposite bolt holes in the cylinder block to guide the cover in place (Fig. 3).

4. Apply a light coat of cup grease to the lip of the oil seal. Slide the engine front cover over the oil seal expander and pilot studs as shown in Fig. 3. Push the cover forward until the inner rotor of the oil pump contacts the pump drive gear on the crankshaft. Rotate the crankshaft slightly to align the teeth, then push the cover up against the gasket and block. Do not force the cover.

5. Remove the oil seal expander and pilot studs.

6. Refer to Fig 1 and install the 3/8"-16 bolts and lock washers. Tighten the bolts to 30-35 lb-ft torque.

7. Affix a new seal ring on the end of the lubricating oil pump inlet tube next to the flange on an In-line engine. Attach the flange or elbow to the front cover with bolts and lock washers. Tighten the bolts to 13-17 lb-ft torque.

8. Affix a new oil pan gasket to the bottom of the cylinder block. then install and secure the oil pan to the block with bolts and lock washers. Tighten the bolts to 13- 17 lb-ft torque.

9. Install the crankshaft pulley as outlined in Section 1 .3.7.

10. Refer to *Lubricating Oil Specifications* in Section 13.3 and refill the crankcase to the proper level on the dipstick.

## CRANKSHAFT PULLEY

The crankshaft pulley is secured to the front end of the crankshaft by a special washer and a bolt.

### Remove Crankshaft Pulley

1. Remove the belts from the crankshaft pulley
2. Remove the crankshaft pulley retaining bolt and special washer.
3. If a rigid type pulley is being removed from an In-line engine, install the pulley retaining bolt and puller J 4794-01 as shown in Fig. 1. Then force the pulley off the crankshaft by turning the puller center screw in.

On pulleys that do not incorporate two tapped holes in the front face of the pulley, use a two arm universal type puller.



Fig. 1 - Removing Crankshaft Pulley Using Puller J 4794-01

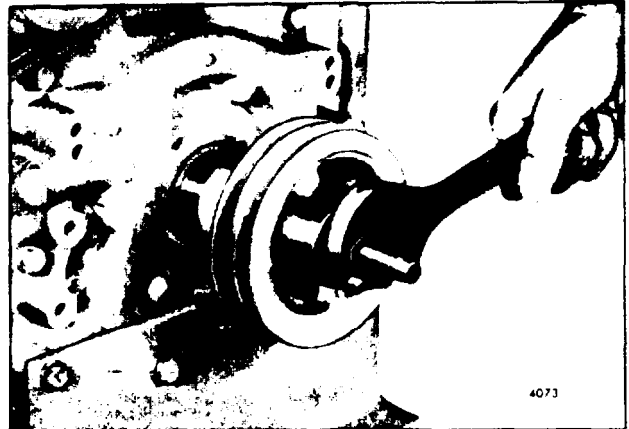


Fig. 2 Installing Crankshaft Pulley Using Installer J 7773

4. Remove the outer and inner cones, if used.

### Inspection

The appearance of the rubber bushing does not determine the condition of a rubber mounted crankshaft pulley. Check for failure of the rubber bushing by locking the crankshaft and applying pressure to the crankshaft pulley. If the pulley cannot be rotated, the bushing is in satisfactory condition. If necessary, replace the rubber bushing.

### Install Crankshaft Pulley

1. Lubricate the end of the crankshaft to facilitate pulley installation.
2. Slide the inner cone (Fig. 3), if used, on the crankshaft.
4. Start the pulley straight on the end of the crankshaft.

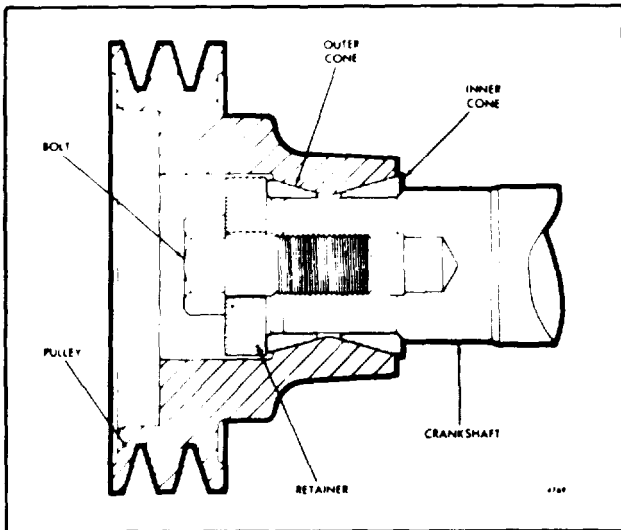


Fig. 3 Cone Mounted Pulley

5. Install a rigid type pulley on an In-line engine with installer J 7773 as shown in Fig. 2. Then remove the installer.

7. Slide the outer cone (Fig. 3), if used, on the crankshaft.

8. Place the washer on the crankshaft bolt and thread the bolt into the front end of the crankshaft.

10. On in-line engines with cone mounted pulleys NOT stamped with the letter "A". tighten the 3/4"-16 bolt to 290-300 lb-ft torque.

11. On all in-line engines with the rigid type pulleys and cone mounted pulleys stamped with the letter "A". tighten the 3/4"-16 bolt to 200-220 lb-ft torque.

12. When pulleys stamped with the letter "U" (in a square box) are used, tighten the 3/4"-16 bolt to 290-310 lb-ft torque.

14. Install and adjust the belts

## FLYWHEEL

The flywheel is attached to the rear end of the crankshaft with six self-locking bolts.

A scuff plate is used between the flywheel and the bolt heads to prevent the bolt heads from scoring the flywheel surface.

A steel ring gear, which meshes with the starting motor pinion, is shrunk onto the rim of the flywheel.

The flywheel is machined to provide true alignment with the clutch or a power take-off driving ring, and the center bore provides for installation of a clutch pilot bearing. The clutch or power take-off driving ring is bolted to the flywheel.

An oil seal ring, which provides an oil tight connection

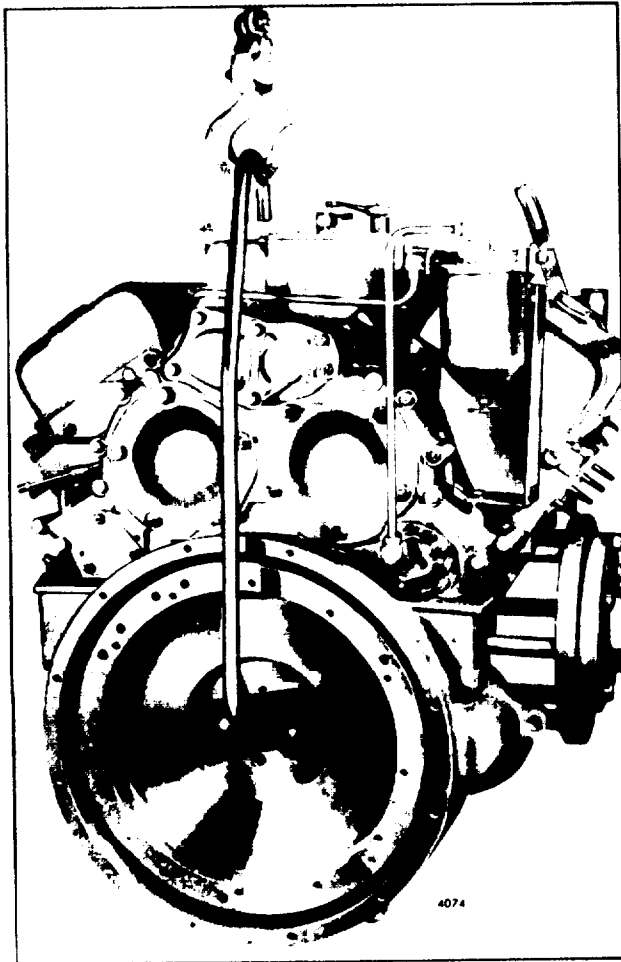


Fig. 1 - Removing Flywheel

between the crankshaft and the flywheel, is fitted into a groove on flywheels used with hydraulic couplings, clutches or Torqmatic converters.

The flywheel must be removed for service operations such as replacing the starter ring gear, crankshaft or flywheel housing. On torque converter units, the flywheel is part of the torque converter assembly and is covered in the applicable converter service manual.

### Remove Flywheel (Transmission Removed )

1. If a clutch housing is attached to the flywheel housing, remove the flywheel as follows:

- a. Remove the flywheel attaching bolts and the scuff plate.
- b. Lift the flywheel off the end of the crankshaft and out of the clutch housing.

2. If a clutch housing isn't used, remove the flywheel as follows:

- a. Remove the flywheel attaching bolts and the scuff plate while holding the flywheel in position by hand, then reinstall one bolt.

**CAUTION:** When removing or installing the attaching bolts, hold the flywheel firmly against the crankshaft by hand to prevent it from slipping off the end of the crankshaft. The flywheel is NOT doweled to the crankshaft.

- b. Attach flywheel lifting tool J 6361-01 to the flywheel with two 3/8"-16 bolts of suitable length as shown in Fig. 1.

c. Attach a chain hoist to the lifting tool.

d. Remove the remaining flywheel attaching bolt.

e. Move the upper end of the lifting tool in and out to loosen the flywheel, then withdraw the flywheel from the crankshaft and the flywheel housing.

f. Remove the clutch pilot bearing, if used, as outlined in Section 1.4.1.

g. Remove the oil seal ring, if used.

### Inspection

Check the clutch contact face of the flywheel for scoring, overheating or cracks. If scored, the flywheel may be refaced. However, do not remove more than .020" of metal from the flywheel. Maintain all of the radii when refacing the flywheel.

Although the flywheel seldom requires replacement, the flywheel ring gear may become worn due to normal usage or damaged by improper use of the starting motor to the extent that it must be replaced. If replacement of the ring gear is necessary, remove it as outlined below.

### Remove Ring Gear

Note whether the ring gear teeth are chamfered. The replacement gear must be installed so that the chamfer on the teeth faces the same direction with relationship to the flywheel as on the gear that is to be removed. Then remove the ring gear as follows:

1. Support the flywheel, crankshaft side down, on a solid flat surface or a hardwood block which is slightly smaller than the inside diameter of the ring gear.
2. Drive the ring gear off the flywheel with a suitable drift and hammer. Work around the circumference of the gear to avoid binding the gear on the flywheel.

### Install Ring Gear

1. Support the flywheel, ring gear side up, on a solid flat surface.
2. Rest the ring gear on a flat metal surface and heat the gear uniformly with an acetylene torch, keeping the torch moving around the gear to avoid hot spots.

**CAUTION:** Do not, under any circumstances, heat the gear over 400°F.; excessive heating may destroy the original heat treatment.

**NOTE:** Heat indicating "crayons", which are placed on the ring gear and melt at a pre-determined temperature, may be obtained from most tool vendors. Use of these "crayons" will ensure against overheating the gear.

3. Use a pair of tongs to place the gear on the flywheel with the chamfer, if any, facing the same direction as on the gear just removed.

4. Tap the gear in place against the shoulder on the flywheel. If the gear cannot be tapped into place readily, remove it and apply additional heat, noting the above caution.

### Install Flywheel

2. If a clutch pilot bearing is used, install the bearing as outlined in Section 1.4.1.
3. Install a new oil seal ring, if used.
4. Attach flywheel lifting tool J 6361-01 to the flywheel with two 3/8"-16 bolts. Then, with the use of a chain hoist, position the flywheel in the flywheel housing or clutch housing.
5. Apply a small quantity of International Compound No. 2, or equivalent, to the threads and contact areas of the six attaching bolts.
6. While holding the flywheel in place by hand, remove the flywheel lifting tool and install the flywheel attaching bolts and scuff plate. Tighten the 1/2 "-20 bolts on all engines to 110-120 lb-ft torque.

**NOTE:** Tighten the flywheel bolts accurately, but do not exceed the specified torque. International Compound No. 2 must never be used between two surfaces where maximum friction is desired, such as between the crankshaft and the flywheel.

7. Mount a dial indicator on the flywheel housing or clutch housing and check the runout of the flywheel at the clutch contact face. Maximum allowable runout is .001" total indicator reading per inch of radius (the radius is measured from the center of the flywheel to the outer edge of the clutch contact face of the flywheel).

## FLYWHEEL HOUSING

The flywheel housing is a one-piece casting, mounted against the rear cylinder block end plate, which provides a cover for the gear train and the flywheel. It also serves as a support for the starting motor and the transmission.

The crankshaft rear oil seal, which is pressed into the housing, may be removed or installed without removing the housing (Section 1.3.2).

### Remove Flywheel Housing

1. Mount the engine on an overhaul stand as outlined in Section 1.1.
2. Remove the starting motor from the flywheel housing or the clutch housing.
3. Remove the flywheel.
4. Remove the oil pan.

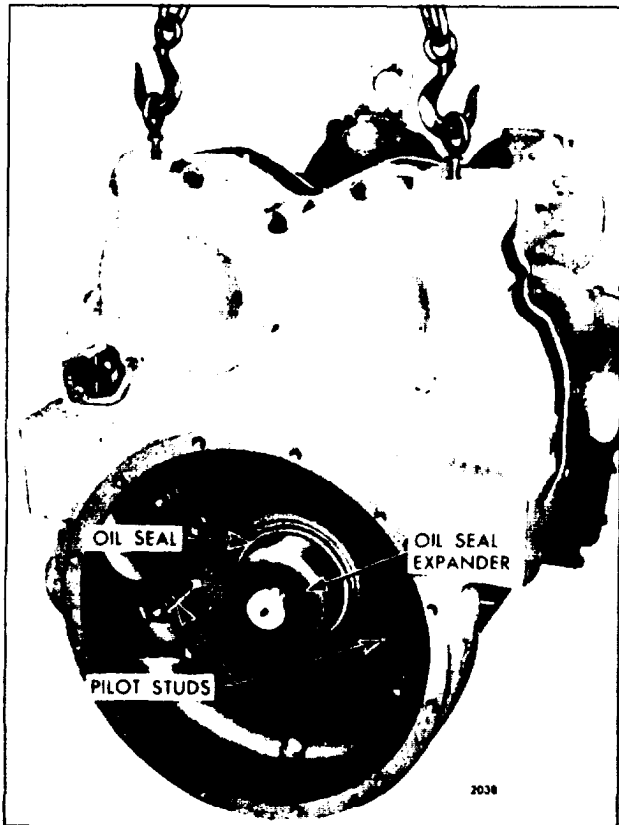


Fig. 1 - Removing or Installing Flywheel Housing

5. Remove the clutch housing, if used.
6. Remove the fuel pump, if it is mounted on the flywheel housing.

9. Remove all of the bolts from the flywheel housing. Don't forget the blower-to-flywheel housing bolts on the 3-53 engines.

**NOTE:** When removing the flywheel housing bolts, note the location of the various size bolts, lock washers, flat washers and copper washers so they may be reinstalled in their proper location.

10. To guide the flywheel housing until it clears the end of the crankshaft, thread two pilot studs J 7540 into the cylinder block (Fig. 1).

11. Thread eyebolts into the tapped holes in the pads (if provided) on the top or sides of the flywheel housing and attach a chain hoist with a suitable sling to the eyebolts. Then strike the front face of the housing alternately on each side with a soft hammer to loosen and work it off the dowel pins.

### Inspection

Clean the flywheel housing and inspect it for cracks or any other damage.

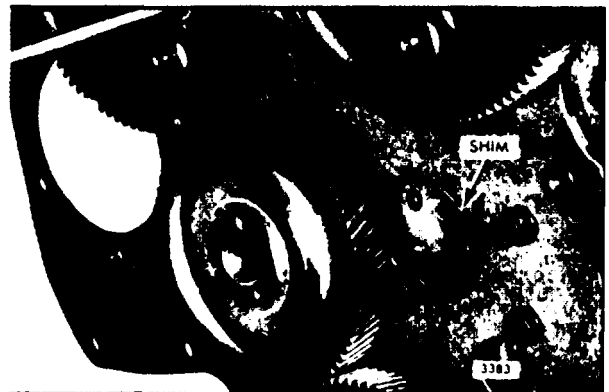


Fig. 2 - Location of Shim



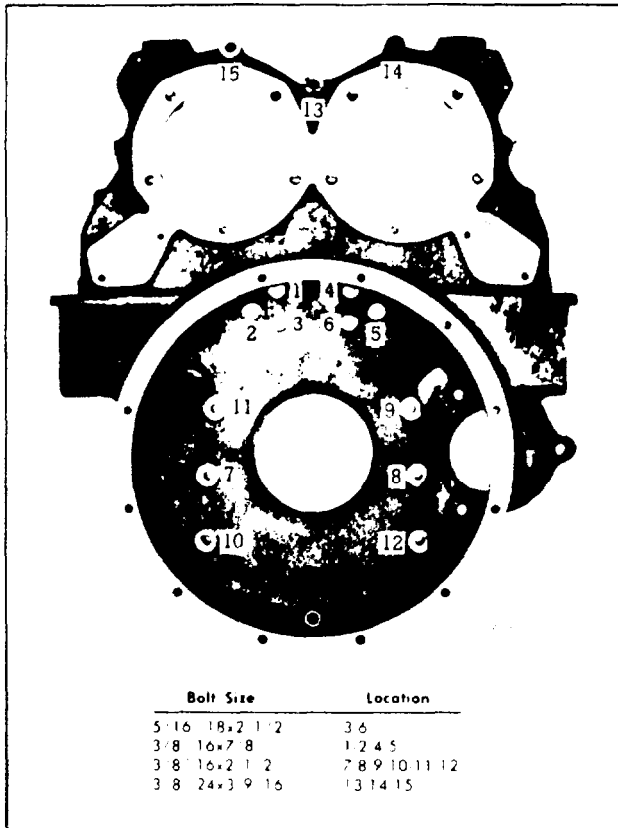


Fig. 3 - Flywheel Housing Bolt Sizes and Tightening Sequence (Operation 1)-In-Line Engine

*It is very important that all old gasket material be thoroughly removed from the flywheel housing and the end plate, otherwise run-out of the pilot and face of the housing may be affected when the housing is installed on the engine.*

Remove and discard the crankshaft rear oil seal. Install a new oil seal as outlined in Section 1.3.2.

### Install Flywheel Housing

1. Lubricate the gear train teeth with clean engine oil.
2. Affix a new flywheel housing gasket to the rear face of the cylinder block rear end plate.
3. If the flywheel housing has an integral cast hub, install a flywheel housing-to-end plate shim (.015" thick). Use grease to hold the shim to the cylinder block rear end plate (Fig. 2).

4. Coat the lip of the crankshaft oil seal lightly with engine oil (single-lip seal) or vegetable shortening (double-lip seal). Do not scratch or nick the sealing edge of the oil seal.

5. Thread two pilot studs J 7540 into the cylinder block to guide the housing in place (Fig. 1). On In-line engines, to pilot the oil seal on the crankshaft successfully, use oil seal expander J 9769 (standard size seal) or J 21278 (oversize seal) on the end of the crankshaft.

6. With the housing suitably supported, position it over the crankshaft and up against the cylinder block rear end plate and gasket(s). Remove the oil seal expander.

7. Install all of the flywheel housing bolts, lock washers, flat washers and copper washers in their proper location, finger tight. Remove the pilot studs.

**NOTE:** If the engine is equipped with a clutch

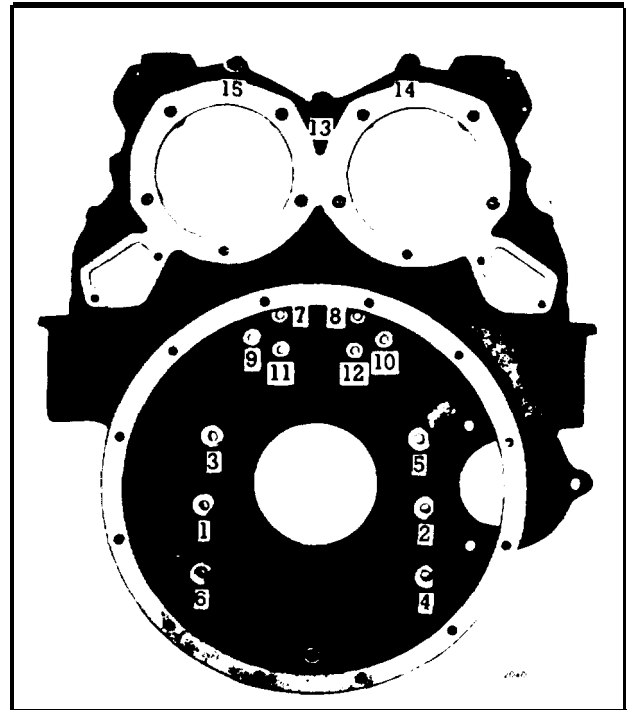


Fig. 6 - Flywheel Housing Bolt Tightening Sequence (Operation 2). InLine Engine

- a. Tighten the 5/16"-18 bolts (numbers 11 and 12) to 19-23 lb-ft torque and the 3/8"-16 bolts (numbers 7 through 10) to 40-45 lb-ft torque. Tighten the remaining 3/8"-16 and 3/8"-24 bolts to 25-30 lb-ft torque.

**NOTE:** Prior to Engine Serial Number 3D-011 the bolts numbered 7 through 12 in Fig. 3 were all 5/16"-18 bolts and must be tightened to 19-23 lb-ft torque.

housing, do not install the six bolts numbered 7 through 12 (Fig. 3) until the clutch housing is installed.

8. On an In-line right hand rotation engine, start at No. 1 and draw the bolts up snug in the sequence shown in Fig. 3.

- b. On the three cylinder engines, tighten the two 5/16"- 18 bolts that secure the top of the governor to the flywheel housing to 10-12 lb-ft torque.

9. Refer to Fig. 6 for the final bolt tightening sequence on an In-line engine. Then start at No. 1 and tighten the bolts to the specified torque.

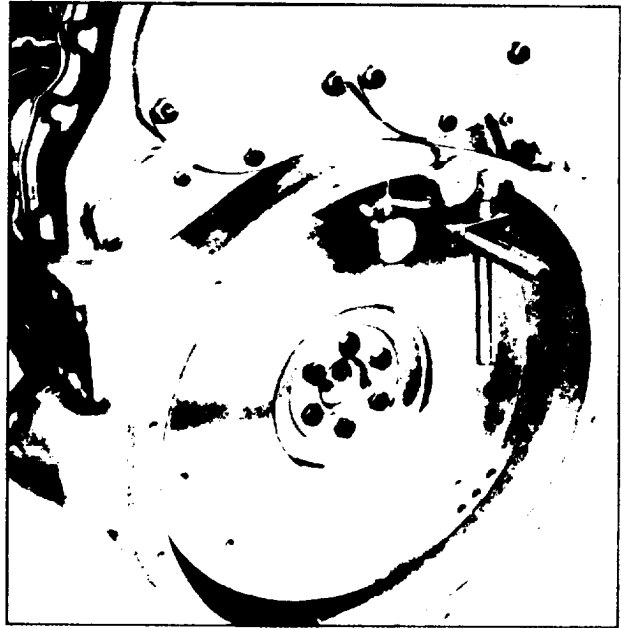


fig. 9- Checking Flywheel Housing  
Concentricity

12. install the flywheel (Section 1 .4).
13. Check the flywheel housing concentricity and bolting flange face with tool J 9737-01 as follows:
  - a. Refer to Fig. 9 and thread the base post J 9737-3 tightly into one of the tapped holes in the flywheel. Then assemble the dial indicators on the base post.
  - b. Position the dial indicators straight and square with the flywheel housing bell face and inside bore of the bell. Make sure each indicator has adequate travel in each direction.

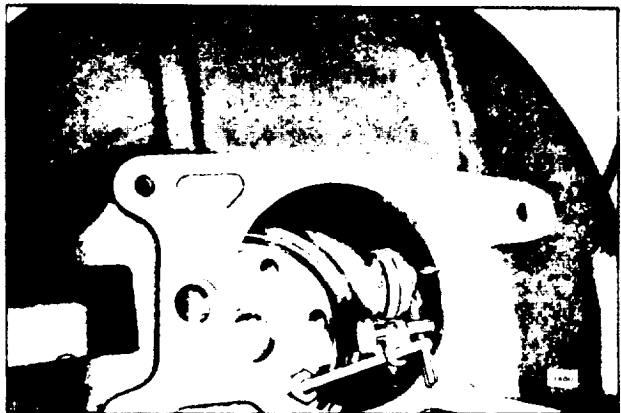


Fig. 10 Checking Bore Runout

**NOTE:** If the flywheel extends beyond the housing bell, the bore and face must be checked separately. Use the special adaptor in the tool set to check the housing bore.

- c. Tap the front end of the crankshaft with a soft hammer or pry it toward one end of the block to ensure end play is in one direction only.
  - d. Adjust each dial indicator to read zero at the twelve o'clock position. Then rotate the crankshaft one full revolution, taking readings at 45° intervals (8 readings each for the bore and the bolting flange face). Stop and remove the wrench or cranking bar before recording each reading to ensure accuracy. The maximum total indicator reading must not exceed .013" for either the bore or the face.
  - e. If the run-out exceeds the maximum limits, remove the flywheel housing and check for dirt or foreign material (such as old gasket material) between the flywheel housing and the end plate and between the end plate and the cylinder block.
  - f. Reinstall the flywheel housing and the flywheel and tighten the attaching bolts in the proper sequence and to the specified torque. Then recheck the run-out. If necessary, replace the flywheel housing.
14. Install the clutch housing, if used. Tighten the 3/8"-16 attaching bolts to 30-35 lb-ft torque and the 3/8"-24 nuts to 35-39 lb-ft torque.
- a. Install tool J 9748 in one of the crankshaft bolt holes.
  - b. Install the dial indicator J 8001-3 and position it to read the bore run-out of the housing (Fig. 10). Now check the run-out by rotating the crankshaft. The run-out should not exceed .008".
  - c. Reposition the dial indicator to read the face run-out and rotate the crankshaft. The maximum allowable run-out is .008".
  - d. If the bore or face run-out is excessive, loosen the housing attaching bolts and nuts slightly and tap the housing with a soft hammer in the required direction until the run-out is within limits. Tighten the attaching bolts and nuts evenly to 30-35 and 35-39 lb-ft torque respectively. Then recheck the run-out.
16. Use a new gasket and install the oil pan
- Install and
- tighten the 1/2"-13 reinforcement bolts.
17. Remove the engine from the overhaul stand and complete assembly of the engine.



## PISTON AND PISTON RINGS

The trunk type malleable iron piston (Fig. 1) is plated with a protective coating of the which permits close fitting. reduces scuffing and prolongs piston life. The top of the piston forms the combustion chamber bowl and is designed to compress the air into close proximity to the fuel spray.

Each piston is internally braced with fin-shaped ribs and circular struts. scientifically designed to draw heat rapidly from the piston crown and transfer it to the lubricating oil spray to ensure better control of piston ring temperature.

The piston is cooled by a spray of lubricating oil directed at the underside of the piston head from a nozzle in the top of the connecting rod, by fresh air from the blower to the top of the piston and indirectly by the water Jacket around the cylinder.

Each piston is balanced to close limits by machining a balancing rib. provided on the inside at the bottom of the piston skirt.

Two bushings, with helical grooved oil passages, are pressed into the piston to provide a bearing for the

hardened, floating piston pin. After the piston pin has been installed, the hole in the piston at each end of the pin is sealed with a steel retainer. Thus lubricating oil returning from the sprayed underside of the piston head and working through the grooves in the piston pin bushings is prevented from reaching the cylinder walls.

Each piston is fitted with compression rings and oil control rings (Fig. 1 ).

Equally spaced holes arc drilled just below each oil control ring land to permit the excess oil that is scraped off the cylinder walls to return to the crankcase.

### Inspect Piston Rings

When an engine is hard to start, runs rough or lacks power, worn or sticking compression rings may be the cause. Replacing the rings will aid in restoring engine operation to normal.

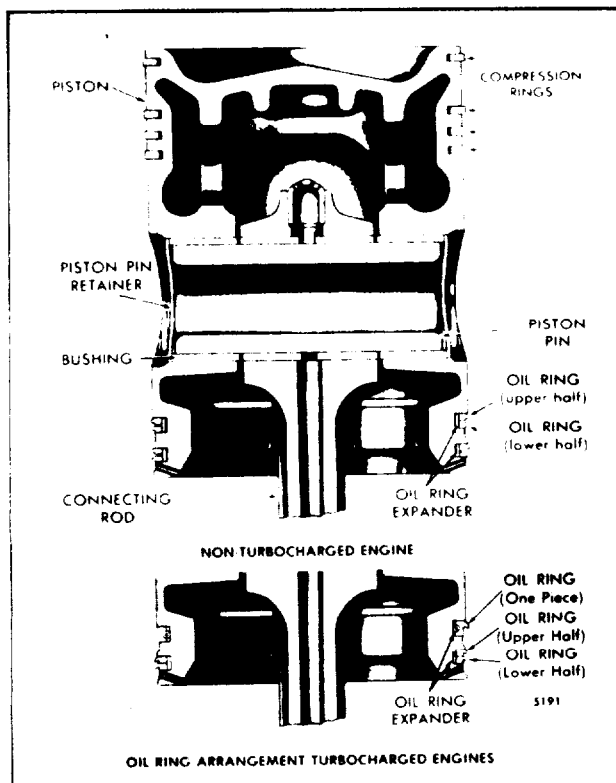


Fig. 1 - Typical Piston Assembly

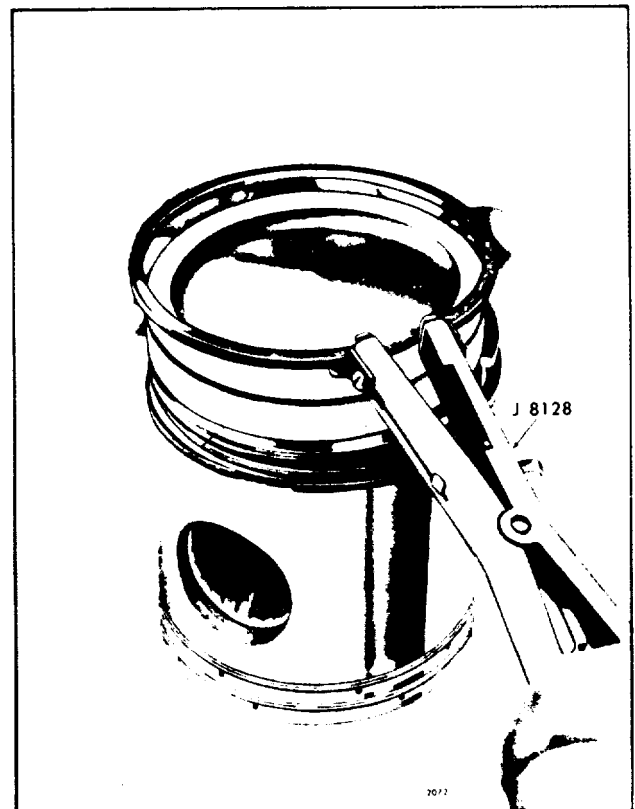


Fig. 2 - Removing or Installing Piston Ring

The compression rings may be inspected through the ports in the cylinder liners after the air box covers have been removed. If the rings are free and are not worn to the extent that the plating or grooves are gone, compression should be within operating specifications. Refer to Section 15.2 for the procedure for checking compression pressure.

### Remove Piston and Connecting Rod

1. Drain the cooling system.
2. Drain the oil and remove the oil pan.
3. Remove the oil pump and inlet and outlet pipes, if necessary (Section 4.1).
4. Remove the cylinder head (Section 1.2).
5. Remove the carbon deposits from the upper inner surface of the cylinder liner.
6. Use a ridge cutter to remove any ridge in the cylinder liner at the top of the piston ring travel.

**NOTE:** Move the piston to the bottom of its travel and place a cloth over the top of the piston to collect the cuttings. After the ridge has been removed, turn the crankshaft to bring the piston to the top of its stroke and carefully remove the cloth with the cuttings.

7. Remove the bearing cap and the lower bearing shell from the connecting rod. Then push the piston and rod assembly out through the top of the cylinder block. The piston cannot be removed from the bottom of the cylinder block.

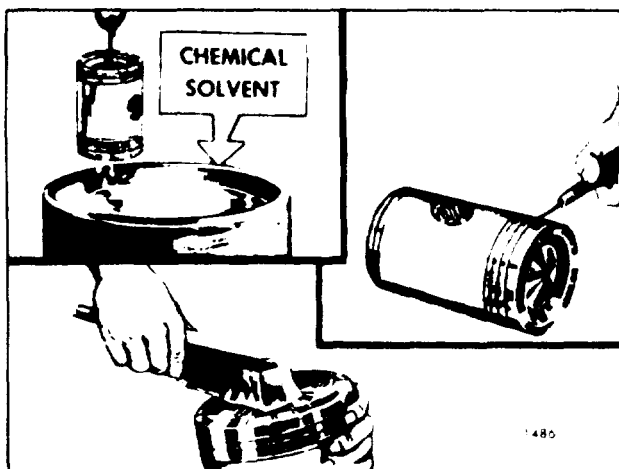


Fig. 3 - Cleaning Piston

8. Reassemble the bearing cap and lower bearing shell to the connecting rod.

### Disassemble Piston and Connecting Rod

Note the condition of the piston and rings. Then remove the rings and connecting rod from the piston as follows:

1. Secure the connecting rod in a vise equipped with soft jaws and remove the piston rings with tool J 8128 as shown in Fig. 2.
2. Punch a hole through the center of one of the piston pin retainers with a narrow chisel or punch and pry the retainer from the piston, being careful not to damage the piston or bushings.
3. Withdraw the piston pin from the piston, then remove the connecting rod.
4. Drive the remaining piston pin retainer out from the inside with a brass rod or other suitable tool.

### Clean Piston

Clean the piston components with fuel oil and dry them with compressed air. If fuel oil does not remove the carbon deposits, use a chemical solvent (Fig. 3) that will not harm the piston pin bushings or the tin-plate on the piston.

The upper part of the piston, including the compression ring lands and grooves, is not tin-plated and may be wire-brushed to remove any hard carbon. However, use care to avoid damage to the tin-plating on the piston skirt. Clean the ring grooves with a suitable tool or a piece of an old compression ring that has been ground to a bevel edge.

Clean the inside surfaces of the piston and the oil drain holes in the piston skirt. Exercise care to avoid enlarging the holes while cleaning them.

### Inspection

If the tin-plate on the piston and the original grooves in the piston rings are intact, it is an indication of very little wear.

Excessively worn or scored pistons, rings or cylinder liners may be an indication of abnormal maintenance or operating conditions which should be corrected to avoid recurrence of the failure. The use of the correct types and proper maintenance of the lubricating oil filters and air cleaners will reduce to a minimum the amount of abrasive dust and foreign material

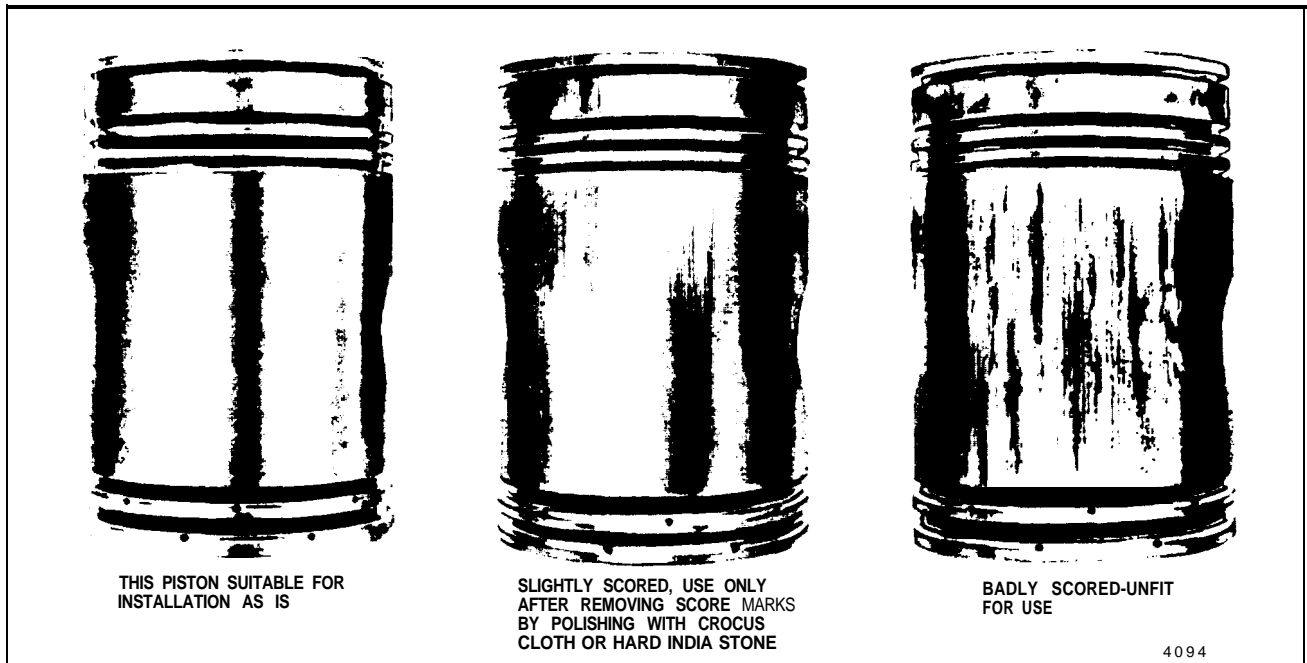


Fig. 4 Comparison of Pistons

introduced into the cylinders and will reduce the rate of wear.

Long periods of operation at idle speed and the use of improper lubricating oil or fuel must be avoided, otherwise a heavy formation of carbon may result and cause the rings to stick.

Keep the lubricating oil and engine coolant at the proper levels to prevent overheating of the engine.

Examine the piston for score marks, cracks, damaged ring groove lands or indications of overheating. A piston with light score marks which may be cleaned up may be re-used (Fig. 4). Any piston that has been severely scored or overheated must be replaced. Indications of overheating or burned spots on the piston may be the result of an obstruction in the connecting rod oil passage.

Replace the piston if cracks are found across the internal struts. Use the magnetic particle inspection methods outlined in Section 1.3 under *Crankshaft Inspection* for locating cracks in the piston.

Check the cylinder liner and block bore for excessive out-of-round, taper or high spots which could cause failure of the piston (refer to Section 1.0 for specifications).

Inspection of the connecting rod and piston pin are covered in Section 1.6.1.

Other factors that may contribute to piston failure include oil leakage into the air box, oil pull-over from the air cleaner, dribbling injectors, combustion blow-by and low oil pressure (dilution of the lubricating oil).

Inspect and measure the piston pin bushings. The piston pin-to-bushing clearance with new parts is .0025" to .0034". A maximum clearance of .010" is allowable with worn parts. The piston pin bushings in the connecting rod are covered in Section 1.6.1.

#### Remove Bushings from Piston

1. Place the piston in the holding fixture J 1513-1 so that the bushing bores are in alignment with the hole in the fixture base.
2. Drive each bushing from the piston with the bushing remover J 4972-4 and handle J 1513-2 (Fig. 5).

#### Install Bushings in Piston

1. Place the spacer J 7587-1 in the counterbore in the fixture J 1513-1 (small end up).



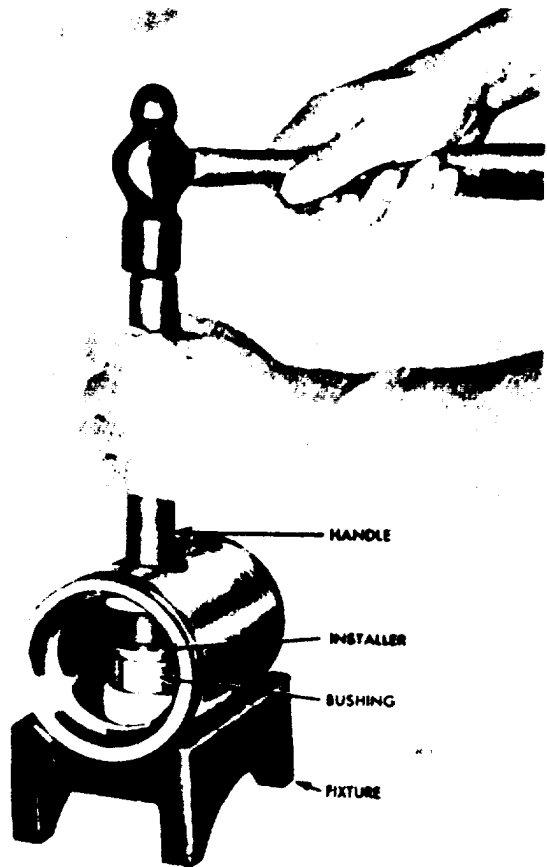


Fig. 5 Removing or Installing Piston Pin Bushings

2. Place the piston on the fixture so that the spacer protrudes into the bushing bore.
3. Insert the installer J 4972-2 in a bushing, then position the bushing and installer over the lower bushing bore.

**NOTE:** Locate the joint in the bushing toward the bottom of the piston (Fig. 6).

4. Insert the handle J 1513-2 in the bushing installer and drive the bushing in until it bottoms on the spacer.
5. Install the second bushing in the same manner.
6. The bushings must withstand an end load of 1800 pounds without moving after installation.
7. Ream the bushing, to size as follows:

- a. Clamp the reaming fixture J 5273 in a vise

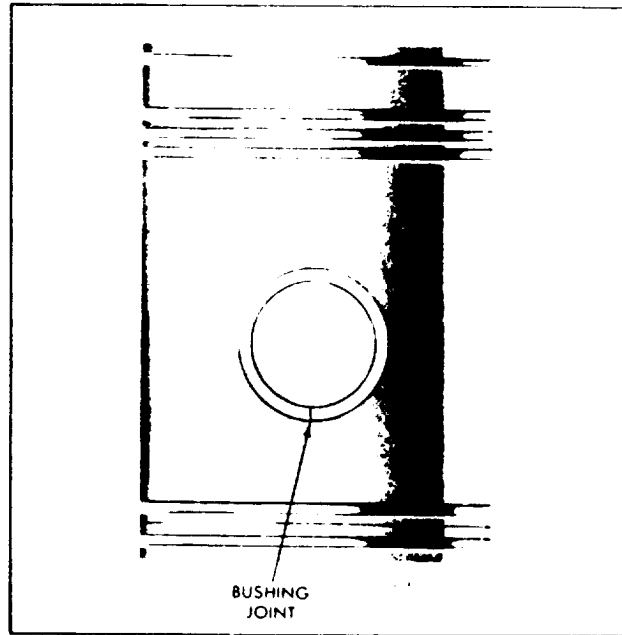


Fig. 6 Location of Joint in Piston Pin Bushings

(Fig. 7). Then insert the guide bushing J 4970-5 in the fixture and secure it with the set screw.

- b. Place the piston in the fixture and insert the pilot end of the reamer J 4970-4 through the clamping bar, bushing and into the guide bushing.

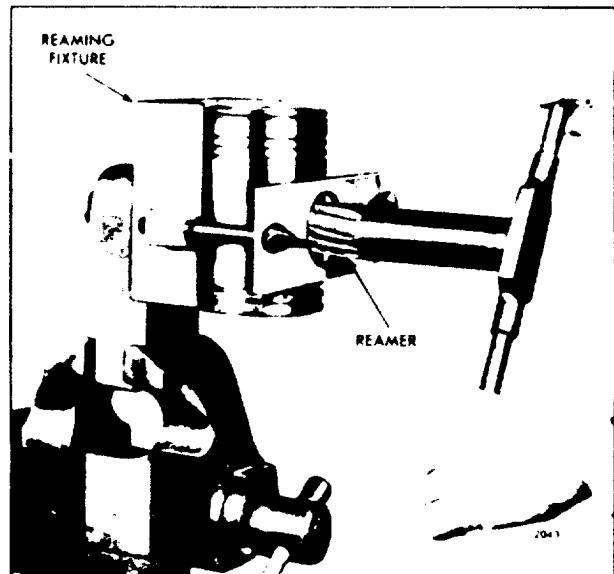


Fig 7 -Reaming Piston Pin Bushings

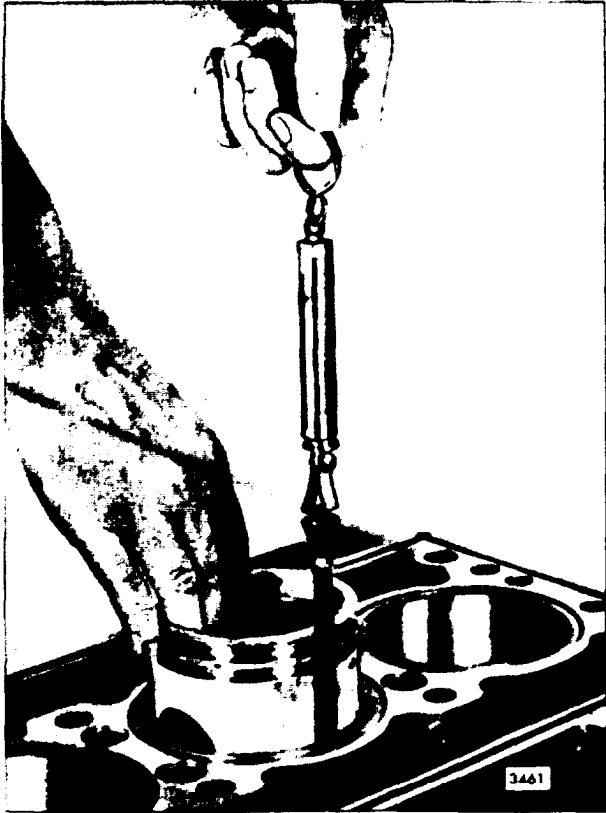


Fig. 8 - Measuring Piston-to-liner Clearance

- c. With the piston, fixture and reamer in alignment, tighten the wing nuts securely.



Fig. 9 - Measuring Piston Ring Gap

- d. Ream the bushings (Fig. 7). Turn the reamer in a clockwise direction only, when reaming or withdrawing the reamer. For best results, use only moderate pressure on the reamer.
- e. Withdraw the reamer and remove the piston from the fixture. Blow out the chips and measure the inside diameter of the bushings. The diameter must be 1.3775" to 1.3780".

#### Fitting Piston

Measure the piston skirt diameter lengthwise and crosswise of the piston pin bore. Measurements should be taken at room temperature (70° F.). The taper and out-of-round must not exceed .0005". Refer to Section 1.0 for piston diameter specifications.

A new cylinder liner has an inside diameter of 3.8752" to 3.8767". The piston-to-liner clearance, with new parts, is .0031" to .0068" (non-turbocharged engines),  
A maximum clearance of .010" (non-turbocharged engines) is allowable with used parts.

With the cylinder liner installed in the cylinder block, hold the piston upside down in the liner and check the clearance in four places 90° apart (Fig. 8).

Use feeler gage set J 5438 to check the clearance. The spring scale, attached to the proper feeler gage, is used to measure the force in pounds required to withdraw the feeler gage.

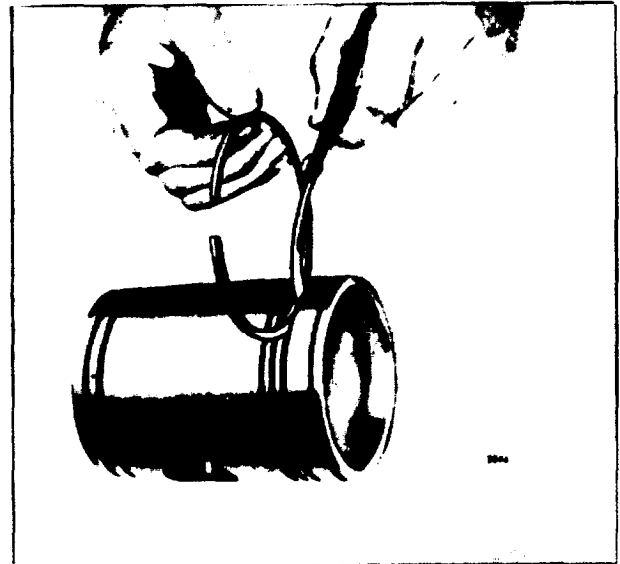


Fig. 10 Measuring Piston Ring Side Clearance

Select a feeler gage with a thickness that will require a pull of six pounds to remove. The clearance will be .001" greater than the thickness of the feeler gage used. i.e., a .004" feeler gage will indicate a clearance of .005" when it is withdrawn with a pull of six pounds. The feeler gage must be perfectly flat and free of nicks and bends.

If any bind occurs between the piston and the liner, examine the piston and liner for burrs. Remove burrs with a fine hone (a flat one is preferable) and recheck the clearance.

### Fitting Piston Rings

Each piston is fitted with a fire ring, three compression rings and two oil control rings (Fig. 1).

The current top compression (fire) ring can be identified by the bright chrome on the bottom side and oxide (rust color) on the top. The former ring had a plain metal color on both sides.

A two-piece oil control ring is used in both oil ring grooves in the pistons for non-turbocharged (naturally aspirated) engines.

All new piston rings must be installed whenever a piston is removed, regardless of whether a new or used piston or cylinder liner is installed.

Insert one ring at a time inside of the cylinder liner and far enough down to be within the normal area of ring travel. Use a piston to push the ring down to be sure it is parallel with the top of the liner. Then measure the ring gap with a feeler gage as shown in Fig. 9. Refer to Section 1.0 for ring gap specifications.

If the gap on a compression ring is insufficient, it may be increased by filing or stoning the ends of the ring. File or stone both ends of the ring so the cutting action is from the outer surface to the inner surface. This will prevent any chipping or peeling of the chrome plate on the ring. The ends of the ring must remain square and the chamfer on the outer edge must be approximately .015"

Check the ring side clearance as shown in Fig. 10. Ring side clearances are specified in Section 1.0.

### Install Piston Rings

Before installing the piston rings, assemble the piston and rod as outlined under *Assemble Connecting Rod to*

*Piston* in Section 1.6.1. Then refer to Fig. 1 and install the piston rings.

**NOTE:** Lubricate the piston rings and piston with engine oil before installing the rings.

### COMPRESSION RINGS

1. Starting with the bottom ring, install the compression rings with tool J 8128 as shown in Fig. 2. To avoid breaking or overstressing the rings, do not spread them any more than necessary to slip them over the piston.

**CAUTION:** When installing the top compression (fire) ring with the tapered face, be sure the side marked "TOP" is toward the top of the piston.

2. Stagger the ring gaps around the piston.

### OIL CONTROL RINGS

The upper and lower oil control rings used on pistons for *non-turbocharged* engines consist of two halves (upper and lower).

Install the oil control rings as follows:

1. Install the ring expanders in the oil control ring grooves in the piston.

**CAUTION:** When installing the oil control rings, use care to prevent overlapping the ends of the ring expanders. An overlapped expander will cause the oil ring to protrude beyond allowable limits and will result in breakage when the piston is inserted in the ring compressor during installation in the cylinder liner. Do not cut or grind the ends of the expanders to prevent overlapping. Cutting or grinding the ends will decrease the expanding force on the oil control rings and result in high lubricating oil consumption.

Install the upper and lower halves of the lower oil control ring by hand. Install the upper half with the gap 180° from the gap in the expander. Then install the lower half with the gap 45° from the gap in the

upper half of the ring. Make sure the scraper edges are facing down (toward the bottom of the piston).

**NOTE:** The scraping edges of all oil control rings must face downward (toward the bottom of the piston) for proper oil control.

3. Install the upper and lower halves of both oil control rings (non-turbocharged engines) as outlined above.

If there is a noticeable resistance during installation of the piston, check for an overlapped ring expander.



## CONNECTING ROD

Each connecting rod (figs. 1 and 2) is forged to an "I" section with a closed hub at the upper end and a bearing cup at the lower end. The connecting rod is drilled to provide lubrication to the piston pin at the upper end and is equipped with a nozzle to spray cooling oil to the underside of the piston head on engines equipped with an oil cooler. Engines that are not equipped with an oil cooler do not use nozzle type connecting rods. An orifice is pressed into a counterbore at the lower end of the oil passage (in rods equipped with a spray nozzle) to meter the flow of oil.

**NOTE:** Never intermix nozzle type connecting rods in an engine with non-nozzle type connecting rods.

A helically-grooved hushing is pressed into each side of the connecting rod at the upper end. The cavity between the inner ends of these bushings registers with the drilled oil passage in the connecting rod and forms a duct around the piston pin. Oil entering this cavity lubricates the piston pin bushings and is then forced out the spray nozzle to cool the piston. The piston pin floats in the bushings of both the piston and the connecting rod.

A service connecting rod includes the bearing cap.

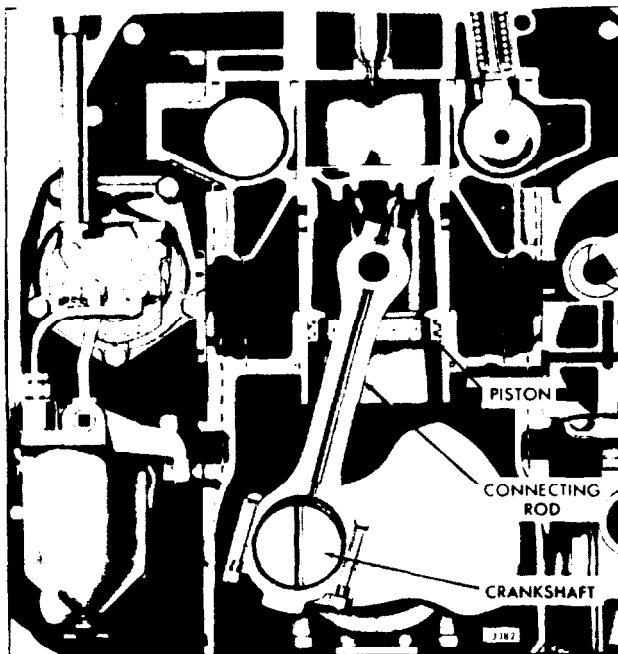


Fig. 1 Connecting Rod Mounting

bolts, nuts, spray nozzle (if used orifice and the piston pin hushing pressed in place and bored to size

The replaceable connecting rod bearing are covered in Section 1.6.2.

### Disassemble Connecting Rod from Piston

With the rod and piston assembly removed from the engine, disassemble the piston and connecting rod as outlined in Section 1.6.

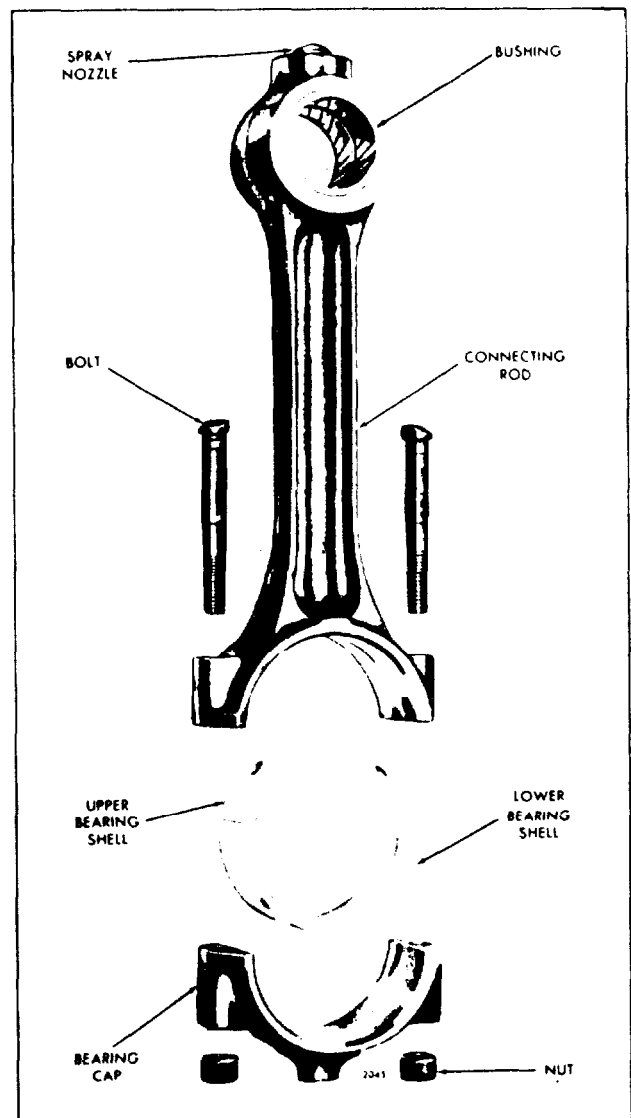


Fig. 2 Connecting Rod Details and Relative Location of Parts

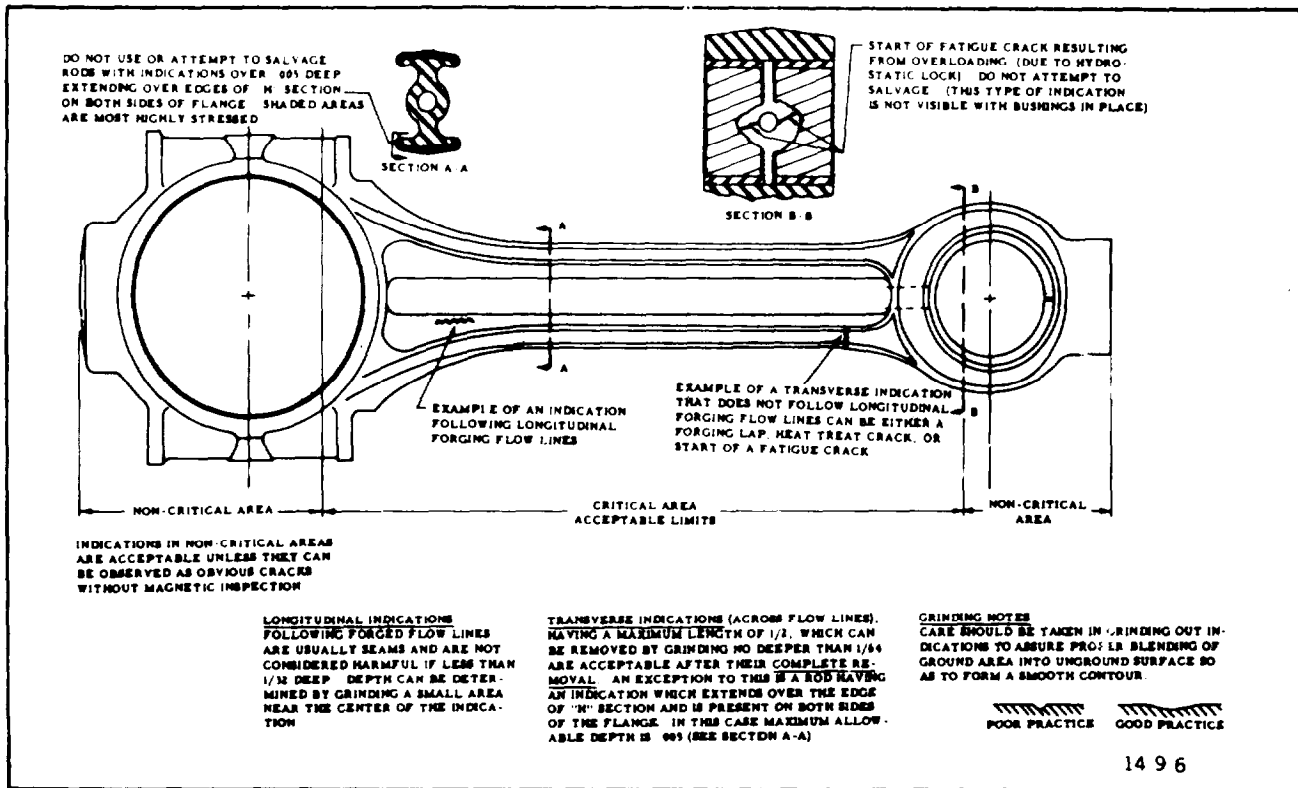


Fig. 3 Magnetic Particle Inspection Limits for Connecting Rod

**Inspection**

Clean the connecting rod and piston pin with fuel oil and dry them with compressed air. Blow compressed air through the drilled oil passage in the connecting rod to be sure the orifice, oil passage and spray holes are not clogged.

Check the connecting rod for cracks (Fig. 3) by the magnetic particle method outlined in Section 1.3 under *Crankshaft Inspection*.

If a new service connecting rod is required, stamp the cylinder number on the connecting rod and cap (refer to Section 1.6.3).

**NOTE:** Clean the rust preventive from a service replacement connecting rod and blow compressed air through the drilled oil passage to be sure the orifice, oil passage and spray holes are not clogged. Also make sure the split line (cap to rod) is thoroughly cleaned to avoid trapped contaminants from adversely affecting bearing shell "crush".

Check the connecting rod bushings for indications of scoring, overheating or other damage. Bushings that have overheated may become loose and creep

together, thus blocking off the lubricating oil to the piston pin, bushings and spray nozzle.

Inspect the piston pin for signs of fretting. When re-using a piston pin, the highly polished and lapped surface of the pin must not in any way be refinished. Polishing or refinishing the piston pin is not recommended as it could result in very rapid bushing wear.

Since it is subjected to downward loading only, free movement of the piston pin is desired to secure perfect alignment and uniform wear. Therefore, the piston pin is assembled with a full floating fit in the connecting rod and piston bushings, with relatively large clearances. Worn piston pin clearances up to .010" are satisfactory.

**Remove Bushings**

If it is necessary to replace the connecting rod bushings, remove them as follows:

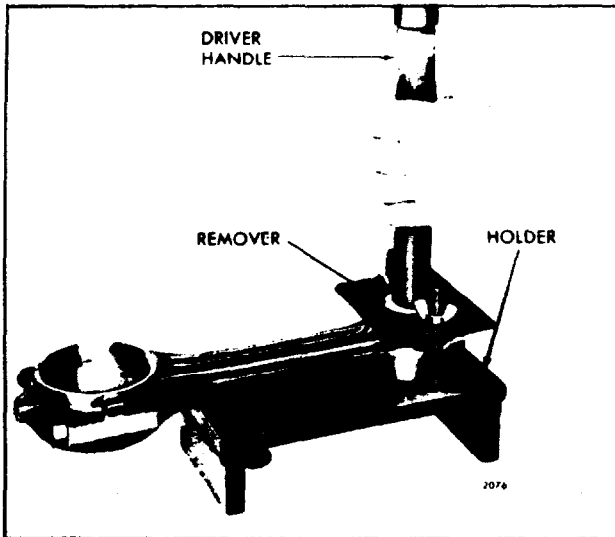


Fig. 4 - Removing or Installing Bushings

1. Clamp the upper end of the connecting rod in holder J 7632 (Fig. 4) so that the bore in the bushings is aligned with the hole in the base of the holder.
2. Place the bushing remover J 4972-4 in the connecting rod bushing, insert handle J 1513-2 in the remover and drive the bushings from the rod.

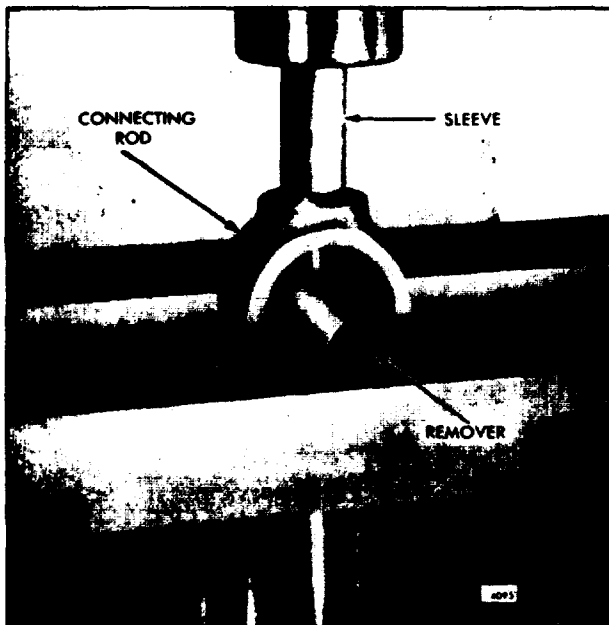


Fig. 5 - Removing Spray Nozzle

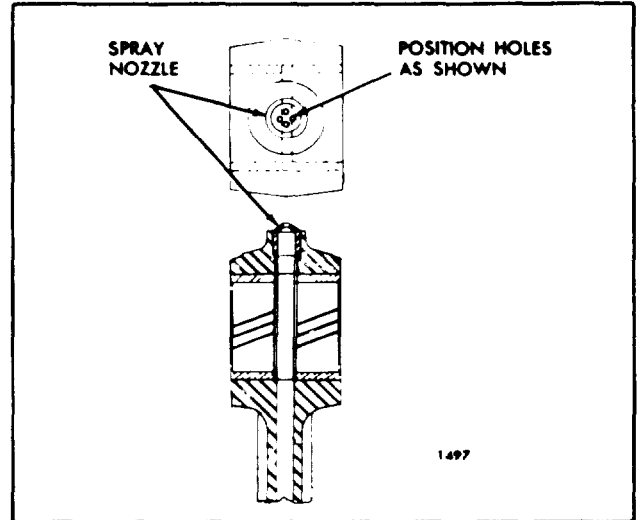


Fig. 6 Position of Spray Nozzle Holes

**Replace Spray Nozzle**

The connecting rod bushings must be removed before the spray nozzle can be replaced. The orifice in the lower end of the drilled passage in the connecting rod is not serviced and it is not necessary to remove it when replacing the spray nozzle.

Replace the spray nozzle as follows:

1. Remove the connecting rod bushings (note *Caution*).
2. Insert spray nozzle remover J 8995 through the upper end of the connecting rod and insert the pin, in the curved side of the tool, in the opening in the bottom of the spray nozzle.
3. Support the connecting rod and tool in an arbor press as shown in Fig. 5.

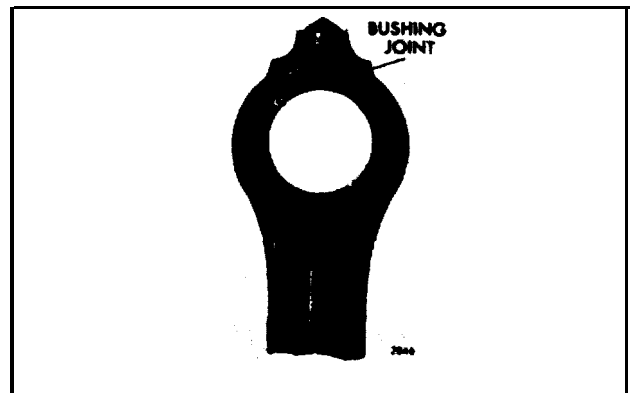


Fig. 7 - Location of Bushing Joint



4. Place a short sleeve directly over the spray nozzle. Then press the nozzle out of the connecting rod.
5. Remove the tool.
6. Start the new spray nozzle, with the holes positioned as shown in Fig. 6, straight into the counterbore in the connecting rod.
7. Support the connecting rod in the arbor press, place a short 3/8" I.D. sleeve on top of the nozzle and press the nozzle into the connecting rod until it bottoms in the counterbore.
8. Install new bushings in the connecting rod.

### Install Bushings

1. Clamp the upper end of the connecting rod assembly in holder J 7632 so that the bore for the bushings aligns with the hole in the base of the tool (Fig. 4).
2. Start a new bushing straight into the bore of the connecting rod, with the bushing Joint at the top of the rod (Fig. 7).
3. Insert installer J 4972-2 in the bushing, then insert handle J 1513-2 in the installer and drive the bushing in until the flange of the installer bottoms on the connecting rod.
4. Turn the connecting rod over in the holder and install the second bushing in the same manner.
5. The bushings must withstand an end load of 2000 pounds without moving after installation
6. Ream the bushings to size as follows:

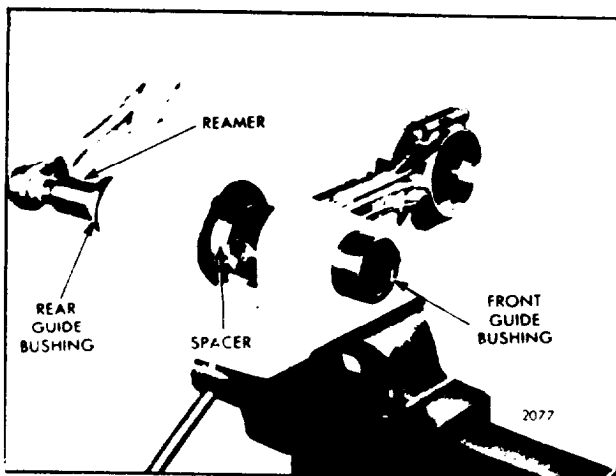


Fig. 8 - Reaming Bushings

- a. Clamp reaming fixture J 7608-4 in a bench vise.
- c. Place the crankshaft end of the connecting rod on the arbor of the fixture (Fig. 8). Tighten the nuts on the 3/8"-24 bolts (In-line engines) to 40-45 lb-ft torque.
- d. Slide the front guide bushing J 4971-6 (with the pin end facing out) in the fixture.
- e. Install spacer J 7608-3 in the fixture.
- f. Align the upper end of the connecting rod with the hole in the reaming fixture.
- g. Install the rear guide bushing J 1686-5 on the reamer J 7608-21, then slide the reamer and bushing into the fixture.
- h. Turn the reamer in a clockwise direction only, when reaming or withdrawing the reamer. For best results, use only moderate pressure on the reamer.
- i. Remove the reamer and the connecting rod from the fixture, blow out the chips and measure the inside diameter of the bushings. The inside diameter of the bushings must be 1.3760" to 1.3765". This will provide a piston pin-to-bushing clearance of .0010"

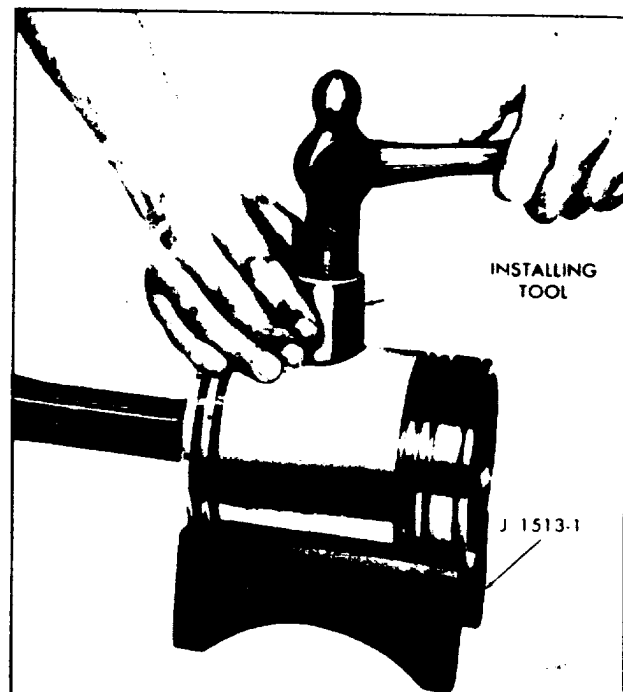


Fig. 9 - Installing Piston Pin Retainer

to .0019" with a new piston pin. A new piston pin has a diameter of 1.3746" to 1.3750".

### Assemble Connecting Rod to Piston

Apply clean engine oil to the piston pin and bushings. Refer to Fig. 2 and assemble the connecting rod to the piston as follows:

1. Place the piston in the holding fixture (Fig. 9).
2. Place a new piston pin retainer in position. Then place the crowned end of installer J 23762 against the retainer and strike the tool just hard enough to deflect the retainer and seat it evenly in the piston.

**CAUTION:** Do not drive the retainer in too far or the piston bushing may be moved inward and result in reduced piston pin end clearance.

3. Place the upper end of the connecting rod between the piston pin bosses and in line with the piston pin holes. Then slide the piston pin in place. If the piston pin-to-bushing clearances are within the specified limits, the pin will slip into place without use of force.
4. Install the second piston pin retainer as outlined in Steps 1 and 2.
5. After the piston pin retainers have been installed,

check for piston pin end clearance by *cocking* the connecting rod and shifting the pin in its bushings.

6. One important function of the piston pin retainer is to prevent the oil, which cools the underside of the piston and lubricates the piston pin bushings, from reaching the cylinder walls. Check the retainers for proper sealing as follows:

- a. Place the piston and connecting rod assembly upside down on a bench.
- b. Pour clean fuel oil in the piston to a level above the piston pin bosses.
- c. Dry the external surfaces of the piston in the area around the retainers and allow the fuel oil to set for about fifteen minutes.
- d. Check for seepage of fuel oil around the retainers. If the fuel oil leaks around the retainers, install new retainers. In extreme cases, it may be necessary to replace the piston.
- e. After the leakage test is completed, empty the fuel oil from the piston, dry the parts with compressed air and lubricate the piston pin with clean engine oil.

7. Install the piston rings on the piston as outlined in Section 1.6.

8. Install the piston and connecting rod assembly in the engine as outlined in Section 1.6.3.



## CONNECTING ROD BEARINGS

The connecting rod bearing shells (Fig. 1) are precision made and are replaceable without shim adjustments. They consist of an upper bearing shell seated in the connecting rod and a lower bearing shell seated in the connecting rod cap. The bearing shells are prevented from endwise or radial movement by a tang at the parting line at one end of each bearing shell.

The upper and lower connecting rod bearing shells are different and are not interchangeable. The upper bearing shell has two short oil grooves and two oil holes; each groove begins at the end of the bearing shell and terminates at an oil hole. The lower bearing shell has a continuous oil groove from one end of the shell to the other. These grooves maintain a continuous registry with the oil hole in the crankshaft connecting rod journal, thereby providing a constant supply of lubricating oil to the connecting rod bearings, piston pin bushings and spray nozzle through the oil passage in the connecting rod.

### Remove bearing Shells

The connecting rod bearing caps are numbered 1, 2, 3, etc. on an In-line engine

with matching numbers stamped on the connecting rods. When removed, each bearing cap and the bearing shells must always be reinstalled on the original connecting rod.

Remove the connecting rod bearings as follows:

1. Drain the oil and remove the oil pan.
2. Remove the oil inlet pipe and screen assembly.
3. Remove one connecting rod bearing cap. Push the connecting rod and piston assembly up into the cylinder liner far enough to permit removal of the upper bearing shell. Do not pound on the edge of the bearing shell with a sharp tool.
4. Inspect the upper and lower bearing shells as outlined under *Inspection*.
5. Install the bearing shells and bearing cap before another connecting rod bearing cap is removed.

### Inspection

Bearing failures may result from deterioration (acid formation) or contamination of the oil or loss of oil. An analysis of the lubricating oil may be required to determine if corrosive acid and sulphur are present which cause acid etching, flaking and pitting. Bearing seizure may be due to low oil or no oil.

After removal, clean the bearings and inspect them for scoring, pitting, flaking, etching or signs of overheating. If any of these defects are present, the bearings must be discarded. The upper bearing shells, which

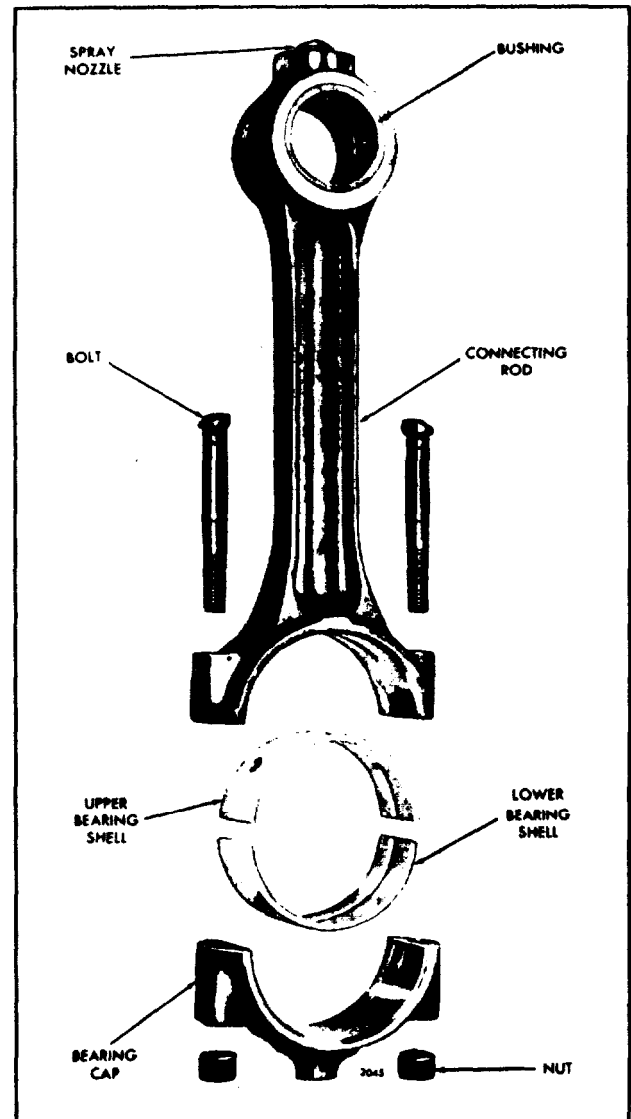


Fig. 1 - Connecting Rod and Bearing Shells

Bearing Size	Bearing Thickness	Minimum Thickness
In-Line Engines		
Standard	.1245" / .1250"	.1230"
.002" Undersize	.1255" / .1260"	.1240"
.010" Undersize	.1295" / .1300"	.1280"
.020" Undersize	.1345" / .1350"	.1330"
.030" Undersize	.1395" / .1400"	.1380"
V-Type Engine		
Standard	.1247" / .1252"	.1230"
.002" Undersize	.1257" / .1262"	.1240"
.010" Undersize	.1297" / .1302"	.1280"
.020" Undersize	.1347" / .1352"	.1330"
.030" Undersize	.1397" / .1402"	.1380"

TABLE 1

carry the load, will normally show signs of distress before the lower bearing shells do.

Inspect the backs of the bearing shells for bright spots which indicate they have been shifting in their supports. If such spots are present, discard the bearing shells. Also inspect the connecting rod bearing bore for burrs, foreign particles, etc.

Measure the thickness of the bearing shells, using a micrometer and ball attachment J 4757, as described under Inspection in Section 1.3.4. The minimum thickness of a worn standard connecting rod bearing shell should not be less than .1230" and, if either bearing shell is thinner than this dimension, replace both bearing shells. A new standard bearing shell has a thickness of .1245" to .1250" (in-line engine).

Refer to Table 1.

In addition to the thickness measurement, check the clearance between the connecting rod bearing shells and the crankshaft journal. This clearance may be checked by means of a soft plastic measuring strip which is squeezed between the journal and the bearing (refer to *Shop Notes* in Section 1.0). The maximum connecting rod bearing-to-journal clearance with used parts in .006"

Before installing the bearings, inspect the crankshaft journals (refer to *Inspection* in Section 1.3).

Do not replace one connecting rod bearing shell alone. If one bearing shell requires replacement, install both new upper and lower bearing shells. Also, if a new or reground crankshaft is to be used, install all new bearing shells.

Bearing shells are available in .010" , .020" and .030" undersize for service with reground crankshafts. To determine the size bearings required, refer to *Crankshaft Grinding* in Section 1.3.

Bearings which are .002" undersize are available to compensate for slight journal wear where it is unnecessary to regrind the crankshaft.

**NOTE:** Bearing shells are NOT reworkable from one undersize to another under any circumstances.

**Install Connecting Rod Bearing Shells**

With the crankshaft and the piston and connecting rod in place, install the connecting rod bearings as follows:

1. Rotate the crankshaft until the connecting rod journal is at the bottom of its travel, then wipe the journal clean and lubricate it with clean engine oil.
2. Install the upper bearing shell -- the one with the short groove and oil hole at each parting line -- in the connecting rod. Be sure the tang on the bearing shell fits in the groove in the connecting rod.
3. Pull the piston and rod assembly down until the upper rod bearing seats firmly on the crankshaft journal.
4. Note the numbers stamped on the connecting rod and the bearing cap and install the lower bearing shell -- the one with the continuous oil groove -- in the bearing cap, with the tang on the bearing shell in the groove in the bearing cap.
5. Install the bearing and cap and tighten the nuts on the 3/8" -24 bolts (In-line engines) to 40-45 lb-ft torque.
6. Install the lubricating oil pump inlet tube assembly. Replace the inlet tube seal ring or elbow gasket if hardened or broken.
7. Install the oil pan, using a new gasket.
8. Refer to the *Lubricating Oil Specifications* in Section 13.3 and fill the crankcase to the proper level on the dipstick.
9. If new bearings were installed, operate the engine on the run-in schedule as outlined in Section 13.2.1.

**CYLINDER LINER**

The cylinder liner (Fig. 1) is of the replaceable wet type, made of hardened alloy cast iron, and is a slip fit in the cylinder block. The current liner is centrifugally cast, while the former liner was sand cast.


The liner is inserted in the cylinder bore from the top of the cylinder block. The flange of each liner rests on a counterbore in the top of the block.

A synthetic rubber seal ring, recessed in the cylinder block bore, is used between the liner and the block to prevent water leakage into the air box.

The upper portion of the liner is directly cooled by water surrounding the liner. The center portion of the liner is air cooled by the scavenging air which enters the cylinder through eighteen equally spaced ports.


The air inlet ports in the liner are machined at an angle to create a uniform swirling motion to the air as it enters the cylinder. This motion persists throughout the compression stroke and facilitates scavenging and combustion.

The wear on a liner and piston is directly related to the amount of abrasive dust and dirt introduced into the engine combustion chamber through the air

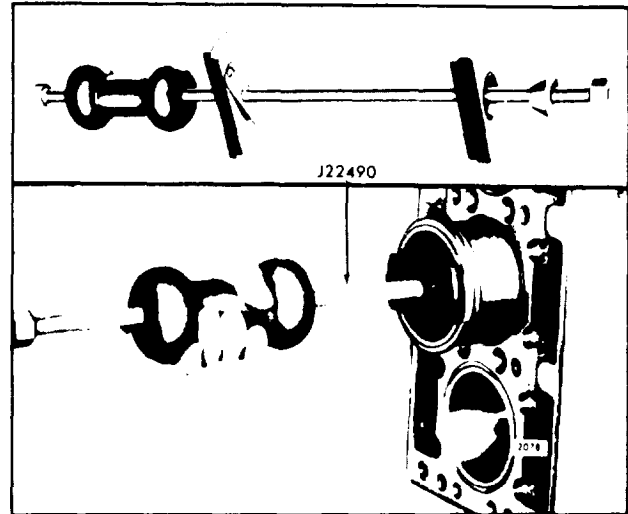


**Fig. 2 Removing Cylinder Liner**

intake. This dust, combined with lubricating oil on the cylinder wall, forms a lapping compound and will result in rapid wear. Therefore, to avoid pulling contaminated air into the cylinder, the air cleaners must be serviced regularly according to the surroundings in which the engine is operating

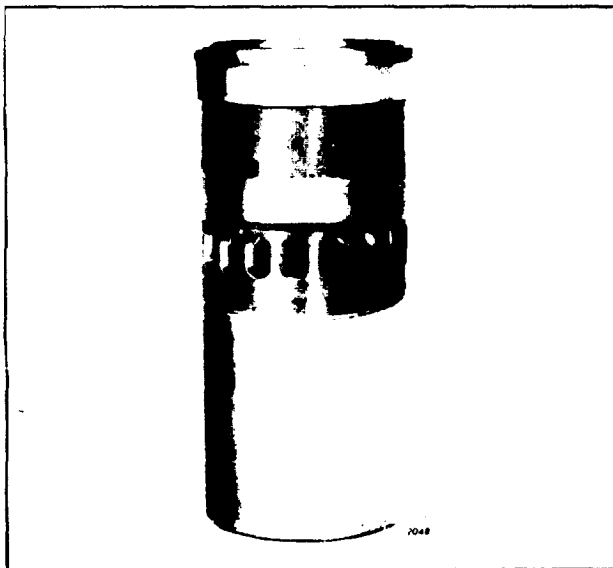

**Fig. 1 Cylinder Liner**

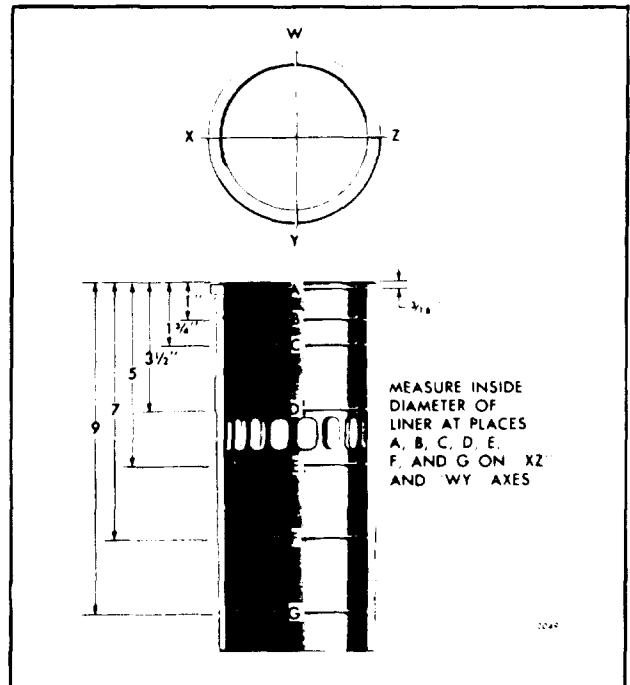

**Fig. 3 - Cylinder Liner Measurement Diagram**

### Remove Cylinder Liner

It is very important that the proper method is followed when removing a cylinder liner. *Do not* attempt to push the liner out by inserting a bar in the liner ports and rotating the crankshaft, otherwise the piston may be damaged or the upper ring groove may collapse.

To remove a cylinder liner, refer to Fig. 2 and proceed as follows:

1. Remove the piston and connecting rod assembly as outlined in Section 1.6.
2. Remove the cylinder liner with tool set J 22490 as follows:
  - a. Slip the lower puller clamp up on the puller rod and off the tapered seat. Cock the clamp so it will slide down through the liner. The clamp will drop back on the tapered seat after it clears the bottom of the liner. Then slide the upper puller clamp down against the top edge of the liner.

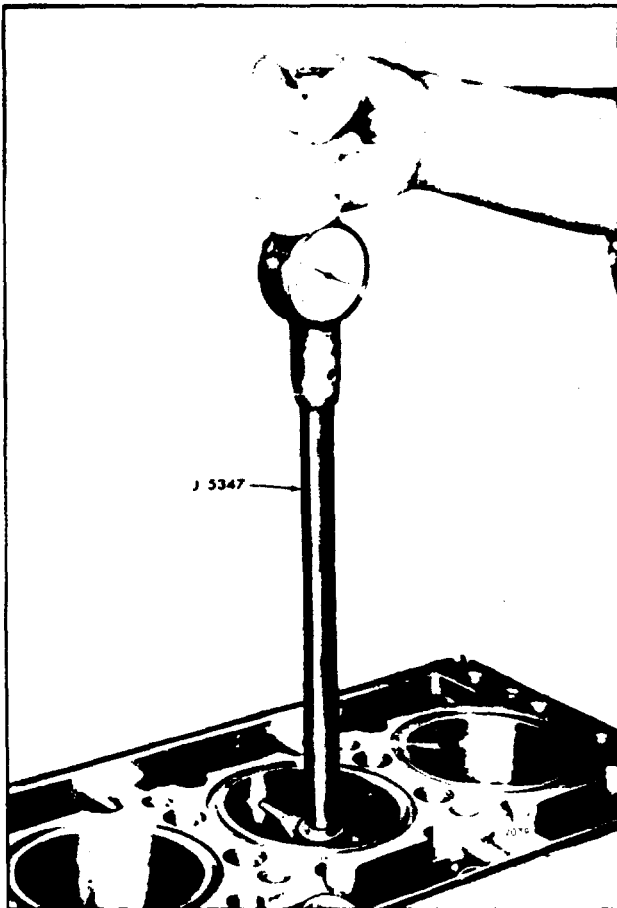


Fig. 4 - Checking Bore of Cylinder Liner

- b. With the tool in place, strike the upset head on the upper end of the puller rod a sharp blow with the puller weight, **thus** releasing the liner.
- c. Remove the tool from the liner. Then remove the liner from the cylinder block.
- d. Remove and discard the cylinder liner seal ring from the groove in the cylinder block bore.

If tool J 22490 is unavailable, tap the liner out with a hardwood block and hammer.

### Inspect Used Cylinder Liner

When the cylinder liner is removed from the cylinder block, it must be thoroughly cleaned and then checked for:

- Cracks
- Scoring
- Poor contact on outer surface
- Flange irregularities
- Inside diameter
- Out-of-round
- Taper

A cracked or excessively scored liner must be discarded. A slightly scored liner may be cleaned-up and re-used.

Excessive liner-to-block clearance or block bore distortion will reduce heat transfer from the liner to the block and to the engine coolant. Poor contact between the liner and the block bore may be indicated by stains or low pressure areas on the outer surface of the liner.

Examine the outside diameter of the liner for fretting.

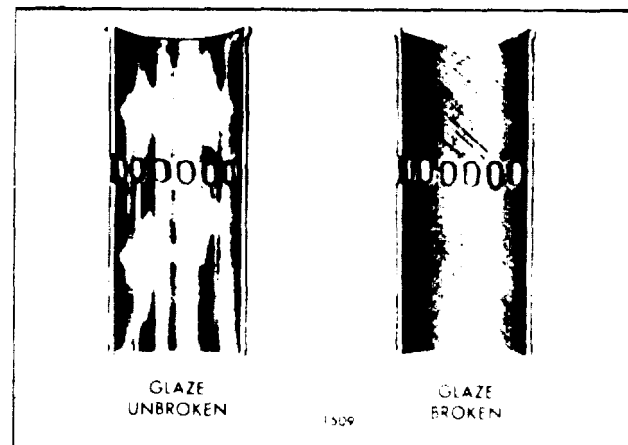


Fig. 5 - Glazed Surface of Cylinder Liner

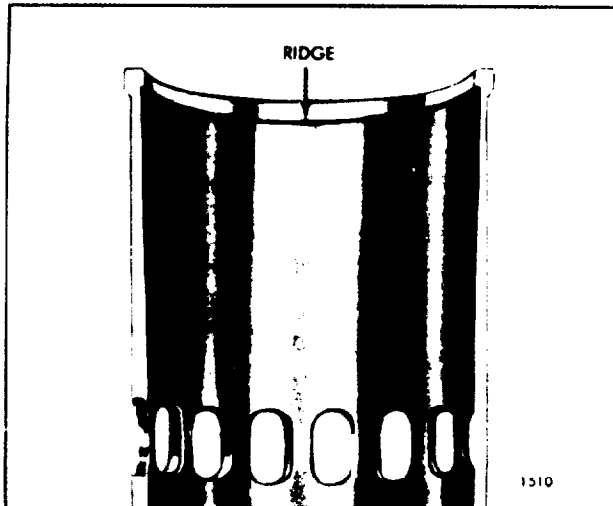


Fig. 6 - Cylinder Liner Ridge Due to Wear

Fretting is the result of a slight movement of the liner in the block bore during engine operation, which causes material from the block to adhere to the liner. These metal particles may be removed from the surface of the liner with a coarse, flat stone.

Install the liner in the proper bore of the cylinder block and measure the inside diameter at the various points shown in Fig. 3. Use cylinder bore gage J 5347 (Fig. 4), which has a dial indicator calibrated in .0001" increments, as it is rather difficult to obtain accurate measurements with a micrometer. Set the cylinder bore gage on zero in master ring gage J 8385. Also check the liner for taper and out-of-round.

**NOTE:** Dial bore gage master setting fixture J 23059 may be used in place of the master ring gage.

To reuse the liner, the taper must not exceed .002" and the out-of-round must not exceed .003". In addition, the ridge formed at the top of the ring travel must be removed. If the out-of-round exceeds .003", rotate the liner 90° in the block bore and recheck.

### Home Used Cylinder Liner

A used cylinder liner must be honed for the following reasons:

1. To break the glaze (Fig. 5) which results after long periods of operation.
2. To remove the ridge (Fig. 6) formed at the top by the piston ring travel.

When a liner has been in service for a long period, the

bore becomes very smooth or glazed due to the rubbing action of the piston rings. Unless this glaze is removed, the time required to seat new piston rings will be lengthened.

The ridge formed at the top of the liner by the travel of the piston rings must also be removed. Otherwise, interference with the travel of the new compression rings may result in ring breakage.

Therefore, even though the taper and out-of-round are within the specified limits, the glaze and ridge must be removed by working a hone up and down the full length of the liner a few times.

Whenever a liner is honed, it should be placed in a fixture (a scrap cylinder block makes an excellent honing fixture). However, if it is necessary to hone a liner in the cylinder block that is to be used in building up the engine, the engine must be dismantled and then, after honing, the cylinder block and other parts must be thoroughly cleaned to ensure that all abrasive material is removed.

The hone J 5902-01, equipped with 120 grit stones J 5902-14, should be worked up and down, at a speed of 300-400 rpm, the full length of the liner a few times in a criss-cross pattern that produces hone marks on a 45° axis. This operation may be performed with emery cloth if a hone is not available.

After the liner has been honed, remove it from the fixture and clean it thoroughly. Then dry it with compressed air and check the entire surface for burrs.

After honing, the liner must conform to the same limits on taper and out-of-round as a new liner and the piston-to-liner clearance must be within the specified limits (Section 1.0).

### Inspect New Cylinder Liner

Both the former and current liners can be intermixed in In-line engines.

Install the cylinder liner in the block and measure the inside diameter at the various points shown in Fig. 3. Use dial bore gage J 5347 and set the gage on zero with master ring J 8385.

**NOTE:** Dial bore gage master setting fixture J 23059 may be used in place of the master ring gage.

A new cylinder liner is 3.8752" to 3.8767" on the inside diameter and should be straight from top to bottom within .001" and round within .002" total indicator reading when the liner is in place in the



black Refer to Section 1.0 for the specified piston-to-liner clearance.

**NOTE:** Do not modify the surface finish in a new service cylinder liner. Since the liner is properly finished at the factory, any change will adversely affect the seating of the piston rings.

#### Fitting Cylinder Liner in Block Bore

1. Wipe the inside and outside of the liner clean and make sure the block bore and counterbore are clean so the liner flange will seat properly. Then slide the liner into the block until the Range rests on the bottom of the counterbore in the block.

**CAUTION:** Do not drop or slam the liner flange against the bottom of the counterbore in the block.

2. Tap the liner lightly with a soft hammer to make certain the liner flange seats on the bottom of the counterbore.

3. Clamp the liner in place with hold-down clamp J 2 1793 and measure the distance from the top of the liner flange to the top of the block with dial indicator set J 22273 (Fig. 7). The top of the liner flange should be .0465" to .0500" below the top of the block, and there must not be over .0015" difference in depth between any two adjacent liners when measured along the cylinder longitudinal center line. If the above limits are not met, install the liner in another bore and recheck, or use a new liner.

4. Matchmark the liner and the cylinder block with chalk or paint so the liner may be reinstalled in the

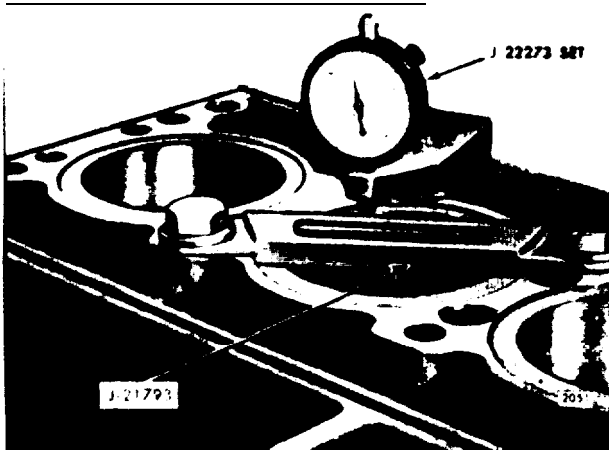


Fig. 7 Checking Distance of Liner Flange Below Top Face of Block

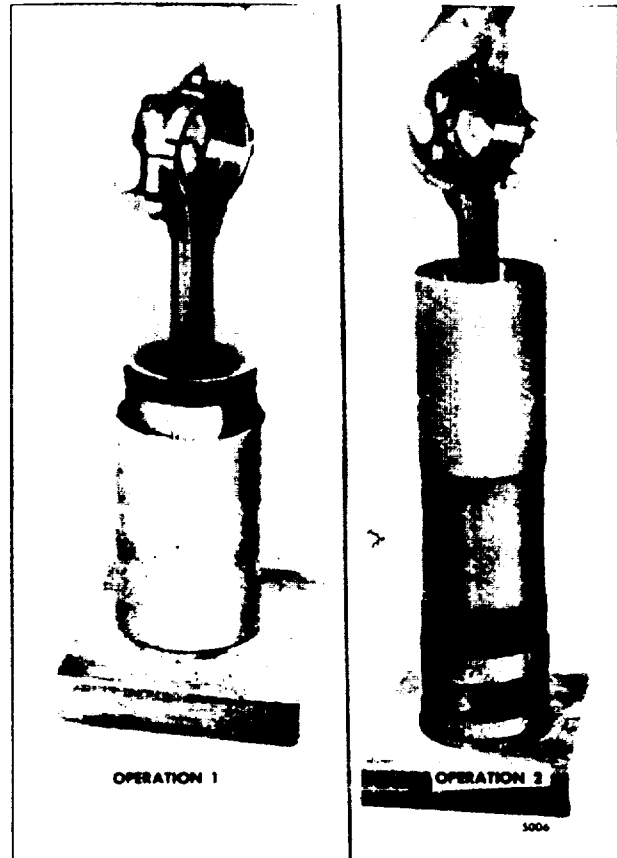


Fig. 8 - Installing Piston and Connecting Rod Assembly in Ring Compressor and Cylinder Liner

same position in the same block bore. Place the matchmark on the engine serial number side of the block (In-line engine),

5. Remove the hold-down clamp and the cylinder liner.

#### Install Piston and Connecting Rod Assembly

1. With the piston assembled to the connecting rod and the piston rings in place as outlined in Sections 1.6 and 1.6.1, apply Cindol 1705 oil to the piston, rings and the inside surface of the piston ring compressor J 6883.

**NOTE:** Inspect the ring compressor for nicks or burrs, especially at the non-tapered inside diameter end. Nicks or burrs on the inside diameter of the compressor will result in damage to the piston rings.

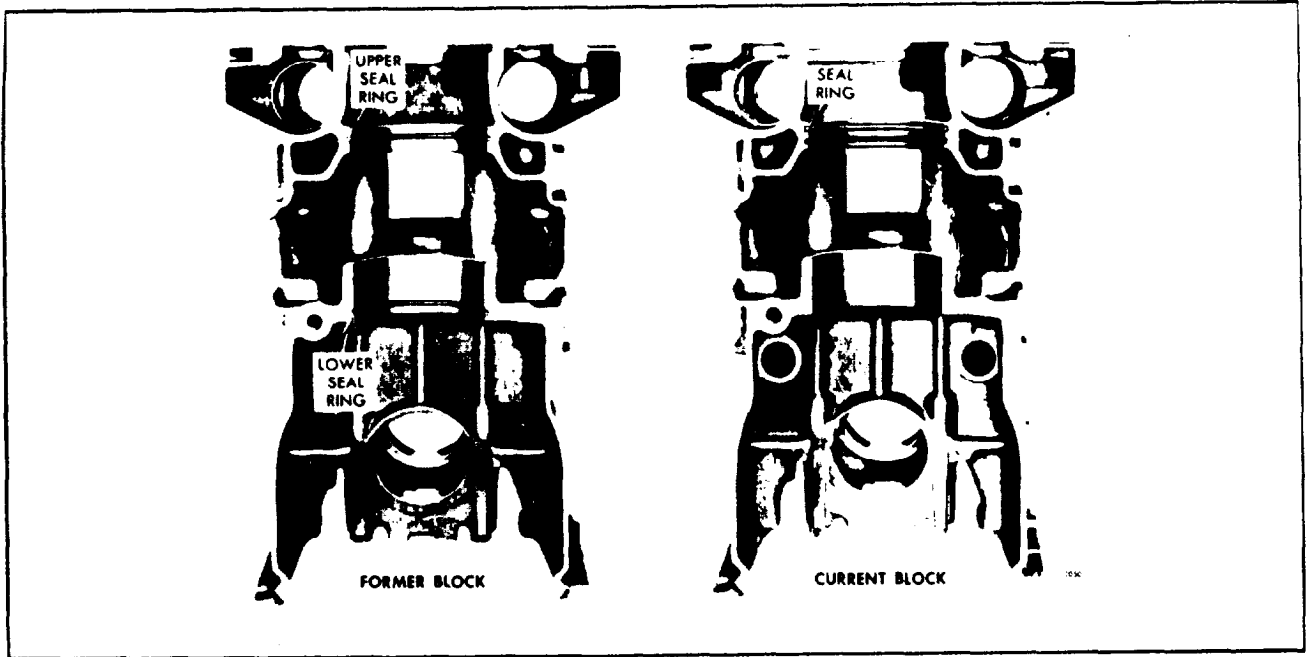


Fig. 9 - Cylinder Liner Seal Ring Location in Cylinder Block Bore

2. Place the piston ring compressor on a wood block, with the chamfered end of the ring compressor facing up.

3. Position (stagger) the piston ring gaps properly on the piston. Make sure the ends of the oil control ring expanders are not overlapped.

4. Start the top of the piston straight into the ring compressor. Then push the piston down until it contacts the wood block (Operation 1 of Fig. 8).

5. Note the position of the matchmark and place the liner, with the flange end down, on the wood block.

6. Place the ring compressor and the piston and connecting rod assembly on the liner so the numbers on the rod and cap are aligned with the matchmark on the liner (Operation 2 of Fig. 8).

**NOTE:** The numbers, or number and letter, on the side of the connecting rod and cap identify the rod with the cap and indicate the particular cylinder in which they are used. If a new service connecting rod is to be installed, the same identification numbers, or number and letter, must be stamped in the same location as on the connecting rod that was replaced.

7. Push the piston and connecting rod assembly down

into the liner until the piston is free of the ring compressor.

**CAUTION:** Do not force the piston into the liner. The peripheral abutment type expanders apply considerably more force on the oil ring than the standard expander. Therefore, extra care must be taken during the loading operation to prevent ring breakage.

8. Remove the connecting rod cap and the ring compressor. Then push the piston down until the compression rings pass the cylinder liner ports.

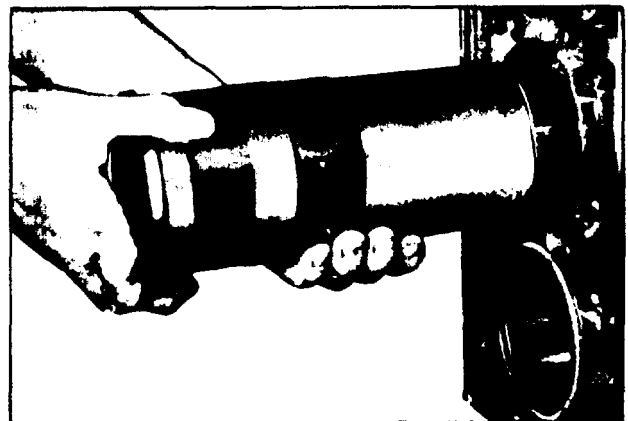


Fig. 10 - installing Piston, Rod and Liner Assembly in Cylinder Block

### Install Cylinder liner, Piston and Connecting Rod Assembly

After the piston and connecting rod assembly have been installed in the cylinder liner, install the entire assembly in the engine as follows:

1. Make sure the seal ring groove in the cylinder block is clean. Then install a new seal ring.

**NOTE:** The current cylinder block has an additional seal ring groove approximately 1/8" below the original top groove (Fig. 9). This groove will permit further use of the cylinder block where corrosion or erosion of the upper seal ring groove has occurred. The lower seal ring groove in the current cylinder block has been eliminated. Reinstallation of the lower seal ring is not necessary in the former cylinder block.

2. Apply hydrogenated vegetable type shortening or permanent type antifreeze to the inner surface of the seal ring.

3. If any of the pistons and liners are already in the engine, use hold-down clamps (Fig. 7) to retain the liners in place when the crankshaft is rotated.

4. Rotate the crankshaft until the connecting rod journal of the particular cylinder being worked on is at the bottom of its travel. Wipe the journal clean and lubricate it with clean engine oil.

5. Install the upper bearing shell -- the one with a short oil groove at each parting line -- in the connecting rod. Lubricate the bearing shell with clean engine oil.

6. Position the piston, rod and liner assembly in line with the block bore (Fig. 10) so the identification number on the rod is facing  
the engine serial number side  
(In-line engine). Also align the matchmarks on the liner and the block. Then slide the entire assembly into the block bore and seal ring, being careful not to damage the seal ring.

7. Push or pull the piston and connecting rod into the liner until the upper bearing shell is firmly seated on the crankshaft journal.

8. Place the lower bearing shell -- the one with the continuous oil groove from one parting line to the other -- in the connecting rod cap, with the tang on the bearing shell in the notch in the connecting rod bearing cap. Lubricate the bearing shell with clean engine oil.

9. Install the bearing cap and the bearing shell on the connecting rod with the identification numbers on the cap and the rod adjacent to each other. On the 3/8"-24 bolts (In-line engines), tighten the nuts to 40-45 lb-ft torque.

10. Check the connecting rod side clearance. The clearance between the side of the rod and the crankshaft should be .006" to .012" with new parts on an In-line engine,

11. Install the remaining liner, piston and rod assemblies in the same manner. Use hold-down clamps to hold each liner in place.

12. After all of the liners and pistons have been installed, remove the hold-down clamps.

13. Install new compression gaskets and water and oil seals as outlined in Section 1.2. Then install the cylinder head and any other parts which were removed from the engine.

14. After the engine has been completely reassembled, refer to the *Lubricating Oil Specifications* in Section 13.3 and refill the crankcase to the proper level on the dipstick.

15. Close all of the drains and fill the cooling system.

16. If new parts such as pistons, rings, cylinder liners or bearings were installed, operate the engine on the *run-in* schedule given in Section 132.1.

## ENGINE BALANCE AND BALANCE WEIGHTS

In the balance of two-cycle engines, it is important to consider disturbances due to the reciprocating action of the piston masses. These disturbances are of two kinds: unbalanced forces and unbalanced couples. These forces and couples are considered as primary or secondary according to whether their frequency is equal to engine speed or twice engine speed. Although it is possible to have unbalanced forces or couples at frequencies higher than the second order, they are of small consequence in comparison to the primary forces and couples. Even the secondary forces and couples are usually of little practical significance.

The reciprocating masses (the piston and upper end of the rod) produce an unbalanced couple due to their arrangement on the crankshaft.

On an In-line engine, it tends to rock the engine from end to end in a vertical plane. This couple is cancelled by incorporating an integral crankshaft balance component and by placing balance weights

at the outer ends of the balance shaft and camshaft (In-line engine). This balance arrangement produces a couple that is equal and opposite in magnitude and direction to the primary couple.

On the balance shaft and camshaft (In-line engine), each set of weights (weights on the outer ends of each shaft comprise a set) rotates in an opposite direction with respect to the other. When the weights on either end of the engine are in a vertical plane, their centrifugal forces are in the same direction and oppose the primary couple. When they are in a horizontal plane, the centrifugal forces of these balance weights oppose each other and are, therefore, cancelled. The front balance weights act in a direction opposite to the rear balance weights; therefore, rotation will result in a couple effective only in a vertical plane. This couple, along with that built into the crankshaft, forms an elliptical couple which completely balances the primary couple.

The balance weights are integral with the gears and the circular balance weights (pulleys) on the shafts. Additional weights are attached to the camshaft and balance shaft gears on three cylinder engines.

Both the rotating and primary reciprocating forces and couples are completely balanced in the engines. Consequently, the engines will operate smoothly and in balance throughout their entire speed range.

### Remove Front Balance Weights

1. Remove the nut at each end of both shafts as outlined in Section 1.7.2.
2. Force the balance weight off the end of each shaft, using two screw drivers or pry bars between the balance weight and the upper front cover as shown in Fig. 1.

### Install Front Balance Weights

1. Reinstall the Woodruff keys in the shafts, if they were removed.
2. Align the keyway in the balance weight with the key in the shaft, then slide the weight on the shaft. If the weight does not slide easily onto the shaft, loosen the thrust washer retaining bolts at the opposite end of the shaft. Then, to prevent possible damage to the thrust washer, support the rear end of the shaft while tapping the weight into place with a hammer and a

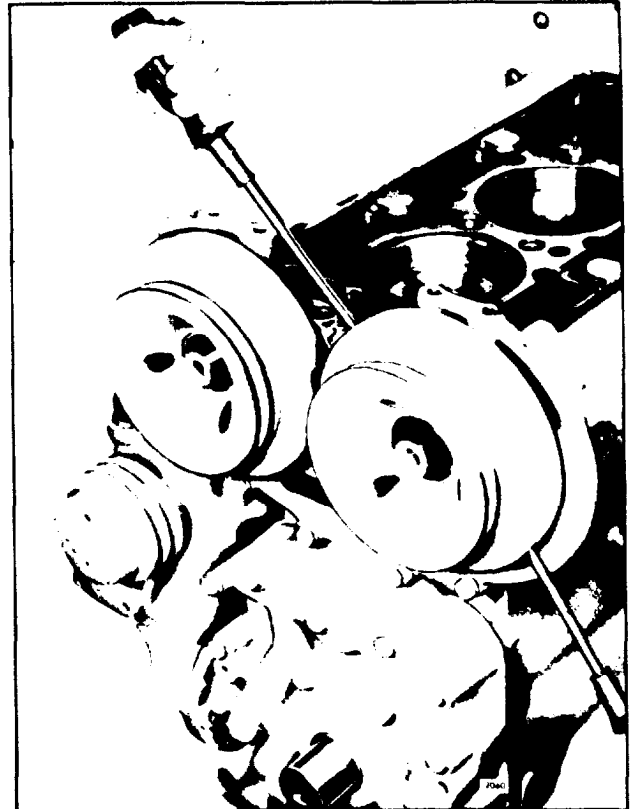


Fig. 1 - Removing Front Balance Weight (Pulley Type)

Sleeve Retighten the thrust washer retaining bolts to 30-35 lb-ft torque. Install the other weight in the same manner.

3. Wedge a clean rag between the gears. Refer to

Fig. 1 of Section 1.7.2 and tighten the gear retaining nuts to 300-325 lb-ft torque. Then tighten the front balance weight retaining nuts to 300-325 lb-ft torque. Remove the rag from the gears.

### GEAR TRAIN AND ENGINE TIMING

A train of helical gears, completely enclosed between the engine end plate and the flywheel housing, is located at the rear of the Series 53 engines.

The gear train on an In-line engine (Fig. 1) consists of a crankshaft gear, an idler gear, a camshaft gear, and a balance shaft gear. The governor drive gear, the upper blower rotor gear for the three cylinder engines, are driven by the camshaft gear or balance shaft gear, depending-upon the engine model.

The idler gear rotates on a stationary hub

The camshaft and balance shaft gears on In-line engines are pressed on and keyed to their respective shafts and each gear is secured by a retaining nut and lock plate

The crankshaft, idler, camshaft and balance shaft gears on In-line engines are completely interchangeable with each other

On In-line engines, the camshaft and balance shaft gears have additional weights attached to the rear face of each gear.

These weights are important in maintaining perfect engine balance.

On In-line engines, the crankshaft gear is pressed on and keyed to the end of the crankshaft.

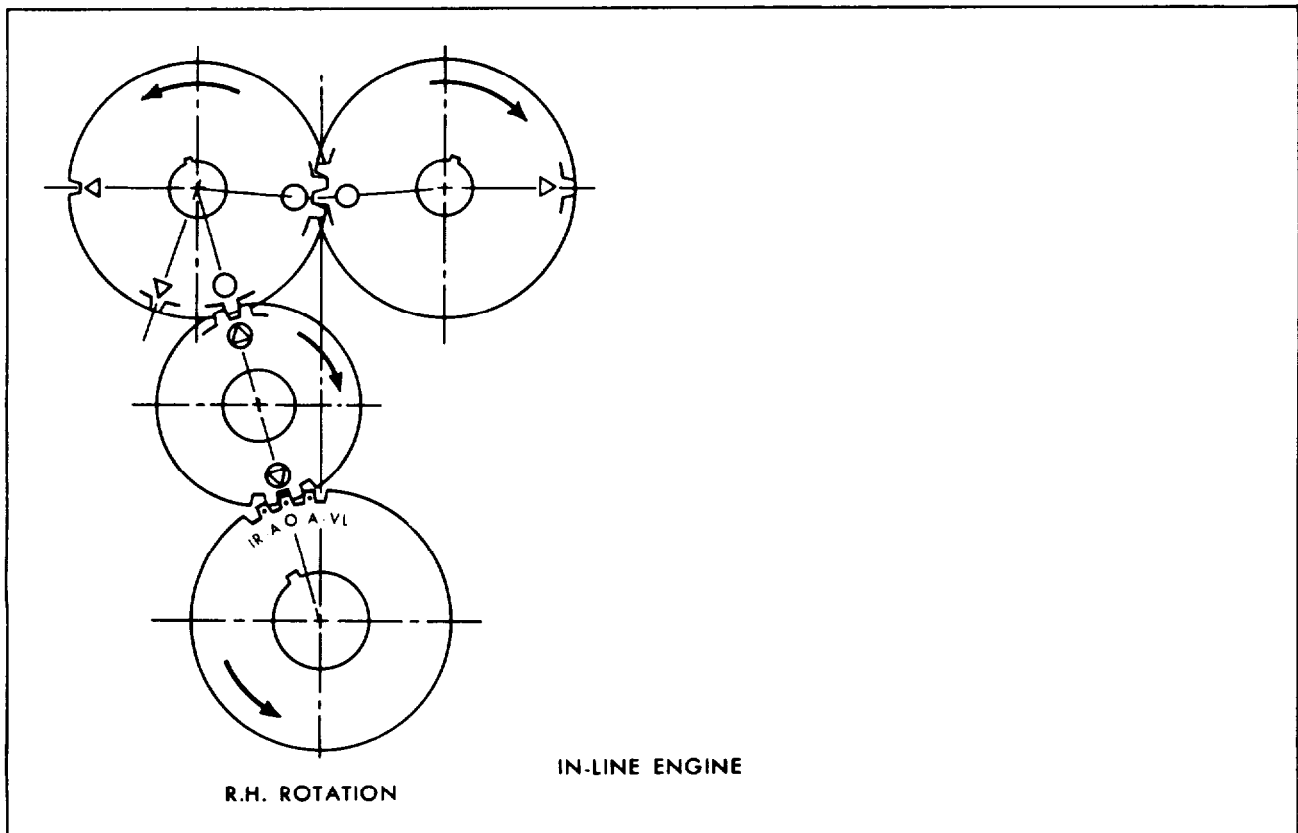


Fig. 1. In-Line Engine Gear Train Timing Marks (Standard Timing Shown)

The camshaft and balance shaft gears on an In-line engine

mesh with each other and run at the same speed as the crankshaft gear. Since the camshaft gears must be in time with each other, and the two as a unit in time with the crankshaft gear, timing marks have been stamped on the face of the gears to facilitate correct gear train timing.

The symbol system of marking the gears makes gear train timing a comparatively easy operation. When assembling the engine, it is important to remember the engine rotation. Then, working from the crankshaft gear to the idler gear and to the camshaft and/or balance shaft gear in that order, line up the appropriate circle symbols on the gears or the appropriate triangles as each gear assembly is installed on the engine. Refer to Fig 1 for a typical gear train timing arrangement.

**NOTE:** It IS advisable to make a sketch indicating the position of the timing marks BEFORE removing or replacing any of the gears in the gear train.

The circle and the triangle are the basic timing

symbols stamped on the gears. The letters stamped on the crankshaft gears identify the proper timing marks for the particular engine: "I" represents "In-line" engine.

"R" represents right-hand rotation engine, and "A" represents advanced timing.

Effective with engine serial numbers 3D-64404.

all Series 53 vehicle engines are built with advanced timing. The timing is advanced by aligning the proper "A" timing mark on the crankshaft gear with the circle-triangle timing mark on the idler gear.

#### IN-LINE ENGINE:

The camshaft and balance shaft gears are positioned so that the circle timing marks are adjacent to each other (Fig. 1) One circle-triangle timing mark on the idler gear is aligned with the second "circle" on the mating camshaft (or balance shaft) gear. The other timing mark on the idler gear is aligned with the proper timing mark on the crankshaft gear.

The crankshaft gear is stamped "IR-A" on the left

side of the circle timing mark (Fig. 1) for a right-hand rotation engine. For *standard timing*, the circle on the crankshaft gear is aligned with the circle-triangle on the idler gear. For *advanced timing*, the "A" adjacent to the "IR" on the crankshaft gear is aligned with the circle-triangle on the idler gear.



**lubrication**

The gear train is lubricated by the overflow of oil from the camshaft and balance shaft pockets spilling into the gear train compartment. A certain amount of the oil also spills into the gear train compartment from the camshaft and balance shaft end bearings and

the idler gear bearing.

**ENGINE TIMING**

The correct relationship between the crankshaft and camshaft(s) must be maintained to properly control fuel injection and the opening and closing of the exhaust valves.

The crankshaft timing gear can be mounted in only one position since it is keyed to the crankshaft. The camshaft gear(s) can also be mounted in only one position due to the location of the keyway relative to the cams. Therefore, when the engine is properly timed, the markings on the various gears will match as shown in Fig 1.

Pre-ignition, uneven running and a loss of power may result if an engine is "out of time".

When an engine is suspected of being out of time, due to an improperly assembled gear train, a quick check can be made without removing the flywheel and flywheel housing by following the procedure outlined below.

**Chock Engine timing**

Access to the crankshaft pulley, to mark the top dead center position of the selected piston, and to the front end of the crankshaft or the flywheel for turning the crankshaft is necessary when performing the timing check. Then, proceed as follows:

1. Clean and remove the valve rocker cover.
2. Select any cylinder for the timing check.
3. Remove the injector as outlined in Section 2.1 or 2.1.1.
4. Carefully slide a rod, approximately 12" long, through the injector tube until the end of the rod rests on top of the piston. Place the throttle in the no-fuel position. Then, turn the crankshaft slowly in the direction of engine rotation. Stop when the rod reaches the end of its upward travel. Remove the rod and turn the crankshaft, opposite the direction of rotation, between 1/16 and 1/8 of a turn.
5. Select a dial indicator with .001" graduations and a

spindle movement of at least 1". Provide an extension for the indicator spindle. The extension must be long enough to contact the piston just before it reaches the end of its upward stroke. Also, select suitable mounting attachments for the indicator so it can be mounted over the injector tube in the cylinder head.

6. Mount the indicator over the injector tube. Check to be sure the indicator spindle extension is free in the injector tube and is free to travel at least one inch.

7. Attach a suitable pointer to the engine lower front cover. The outer end of the pointer should extend out over the top of the crankshaft pulley.

8. Turn the crankshaft slowly, in the direction of engine rotation, until the indicator hand just stops moving.

9. Continue to turn the crankshaft, in the direction of rotation, until the indicator starts to move again. Now set the indicator on zero and continue to turn the crankshaft until the indicator reading is .010"

Engine	*INDICATOR READING		
	Standard	Retarded 1-Tooth	Advanced 1-Tooth
STANDARD TIMING			
(1) 3	.228"	.204"	.245"
(2) 3	.206"	.179"	.232"
ADVANCED TIMING			
(2) 3	.232"	.206"	.258"

\* Indicator readings shown are nominal values. The allowable tolerance is ± .005 in.  
 (1) High velocity type injector cam.  
 (2) Low velocity type injector cam.

TABLE 1

10. Scribe a line on the crankshaft pulley in line with the end of the pointer.

11. Slowly turn the crankshaft, opposite the direction of rotation, until the indicator hand stops moving.

12. Continue to turn the crankshaft, opposite the direction of rotation, until the indicator starts to move again. Now set the indicator on zero and continue to turn the crankshaft until the indicator reading is .010"

13. Scribe the second line on the crankshaft pulley in line with the end of the pointer.

14. Scribe a third line on the pulley half way between the first two lines. This is top dead center.

NOTE: If the crankshaft pulley retaining bolt loosened up, tighten it to the torque specified in Section 1.0..

15. Remove the dial indicator and rod from the engine.

16. Install the injector as outlined in Section 2.1 or 2.1.1. Then, refer to Section 14 and adjust the exhaust valve clearance and time the fuel injector.

17. Turn the crankshaft, in the direction of rotation, until the exhaust valves in the cylinder selected are completely open. Reinstall the dial indicator so the indicator spindle rests on the top of the injector follower. Then, set the indicator on zero. Next turn the crankshaft slowly, in the direction of rotation, until the center mark on the pulley is in line with the pointer.

18. Check the front end of the camshaft for an identification mark. For identification purposes, a letter "V" is stamped on each end of a low velocity camshaft; but a letter "V" is not stamped on a high velocity camshaft. Note the indicator reading and compare it with the dimensions listed in Table 1 for the particular camshaft in the engine.

19. Remove the dial indicator; also remove the pointer attached to the front of the engine.

20. Install the valve rocker cover.



## CAMSHAFT, BALANCE SHAFT AND BEARINGS

The camshaft end balance shaft used in the in-line engines,

are located just below the top of the cylinder block. The camshaft and balance shaft in the in-line engines may be positioned on either side of the engine as required by the engine rotation and accessory arrangement,

The shafts are supported by bearings (bushing type) that are pressed into bores in the cylinder block. The balance shaft is supported by front and rear bearings only, whereas the camshaft is supported by end, intermediate and center bearings.

The camshafts in the three cylinder engine are supported by two end bearings and intermediate bearings

To facilitate assembly, letters signifying the engine models in which a shaft may be used are stamped on the ends of the shaft. The letters on the timing gear end or the camshaft must be stamped with the engine model. For example, the letters RC are stamped on the camshaft used in an RC model engine. For additional identification, a camshaft with no designation on the ends or a "7" stamped on the ends is a high-velocity high-lift camshaft. A camshaft stamped with "V" or "V7" is a low velocity high-lift camshaft

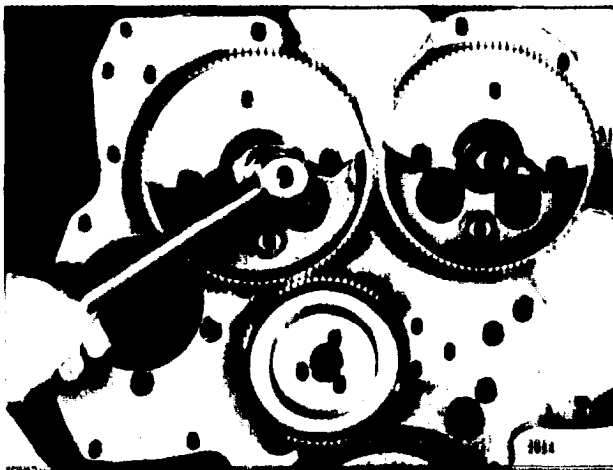


Fig.1 Removing or Installing Nut on Camshaft or Balance Shaft

**NOTE:** The low lift camshaft which provides a maximum valve cam lobe lift "276" is stamped "V7L" on both ends.

Lubrication is supplied under pressure to the camshaft and balance shaft and bearings via oil passages branching off from the main oil gallery direct to the camshaft end bearings.

In addition, oil is forced through an oil passage in each camshaft which lubricates the camshaft intermediate bearing. On the current camshafts: the intermediate journal oil grooves were eliminated and a chamfer added to the intermediate journal oil holes: When replacing a former camshaft with a current camshaft, always use new bearings.

All of the camshaft and balance shaft bearings incorporate small slots through which lubricating oil is directed to the cam follower rollers.

### Remove Camshaft or Balance Shaft

Whenever an engine is being completely reconditioned of the bearings, thrust washers, of the gears need

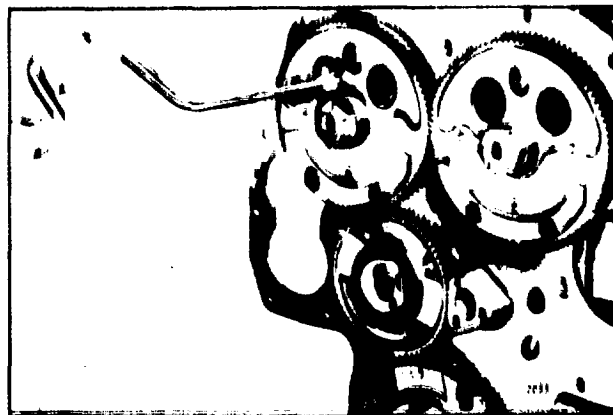


Fig. 2 : Removing or Installing( Thrust Washer Retaining Belts

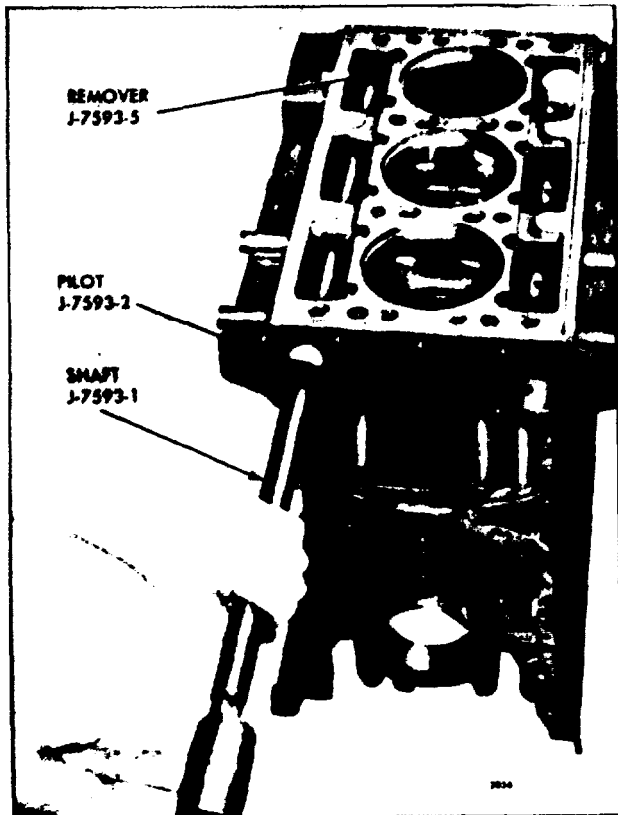


Fig. 3 Removing End Bearing

replacing, remove the shafts from the engine in the following manner:

NOTE: Refer to *Shop Notes* in Section 1.0 to install a cup plug in the front end of the camshaft.

1. Drain the engine cooling system.
2. Remove all accessories and assemblies with their attaching parts as necessary to permit the engine to be mounted on an overhaul stand.  
  
Procedures for removing accessories and assemblies from the engine will be found in their respective sections of this manual.
3. Mount the engine on an overhaul stand. Be sure the engine is securely mounted on the stand before releasing the lifting sling.
4. Remove the cylinder head(s). Refer to Section 1.2.
5. Remove the flywheel and the flywheel housing as outlined in Sections 1.4 and 1.5.
6. Remove the bolts which secure the gear nut retainer

plates (if used) to the gears, then remove the retainer plates.

7. Wedge a clean rag between the gears as shown in Fig. 1; then, remove the nuts from each end of both shafts with a socket wrench.
8. Remove the balance weights from the front end of the shafts as outlined in Section 1.7.
9. Remove the upper engine front cover (Section 1.7.8).
10. Remove the oil slinger from the front end of both shafts.
11. Remove the two retaining bolts that secure the camshaft or balance shaft thrust washer to the cylinder block by inserting a socket wrench through a hole in the web of the gear as shown in Fig. 2.
12. Withdraw the shaft, thrust washer and gear as an assembly from the rear end of the cylinder block.

#### Disassemble Camshaft or Balance Shaft

1. Remove the gear from the shaft. Refer to Section 1.7.3.
2. Remove the end plugs from the camshaft, to facilitate the removal of any foreign material lodged behind the plugs, as follows:
  - a. Clamp the camshaft in a vise equipped with soft jaws, being careful not to damage the cam lobes or machined surfaces of the shaft.
  - b. Make an indentation in the center of the camshaft end plug with a 3/16" drill (carbide tip).
  - c. Punch a hole as deeply as possible with a center punch to aid in breaking through the hardened surface of the plug.
  - d. Then, drill a hole straight through the center of the plug with a 1/4" drill (carbide tip).
  - e. Use the 1/4" drilled hole as a guide and redrill the plug with a 5/16" drill (carbide tip).
  - f. Tap the drilled hole with a 3/8"-16 tap.
  - g. Thread a 3/8"-16 adaptor J 8183 into the plug. Then, attach a slide hammer J 6471-1 to the adaptor and remove the plug by striking the weight against the handle.
  - h. Insert a length of 3/8" steel rod in the camshaft oil gallery and drive the remaining plug out.

NOTE: If a steel rod is not available, remove the remaining plug as outlined in Steps "a" through "g".

**Inspection**

Soak the camshaft in clean fuel oil. Then, run a wire brush through the oil gallery to remove any foreign material or sludge. Clean the exterior of the camshaft and blow out the oil gallery and the oil holes with compressed air. Clean the camshaft bearings and related parts with fuel oil and dry them with compressed air.

Inspect the cams and journals for wear or scoring. If the cams are scored, inspect the cam rollers as outlined in Section 1.2.1.

Check the runout at the center bearing with the

CAMSHAFT AND BALANCE SHAFT CYLINDER BLOCK BORE MACHINING CHART

Engine	Bearing Location	Dimension	
		Minimum	Maximum
3	End	2.385"	2.386"
3	Intermediate*	2.375"	2.376"

TABLE 1

camshaft mounted on the end bearing surfaces, Run out should not exceed .002".

Examine both faces of the thrust washers. If either face is scored or if the thrust washers are worn excessively, replace the washers. New thrust washers are 208 " to 210" thick.

Also, examine the surfaces which the thrust washers contact: if these surfaces are scratched but not severely scored, smooth them down with an oil stone. If the score marks are too deep to be removed, or if parts are badly worn, use new parts.

The clearance between new shafts and new bearings is .0045" to .006" or a maximum of .008" with worn parts. Excessive clearance between the shafts and the bearings will cause low oil pressure and excessive backlash between the gears.

Bearings are available in .010I and .020 " undersize for use with worn or reground shafts.

Oversize camshaft and balance shaft bearings are available in sets, .010 " oversize on the outside diameter, to permit reuse of a cylinder block having one or more scored block bearing bores. To use the oversize bearings, the camshaft and balance shaft block bores must be carefully line-bored (machined) to the dimensions shown in Table 1.

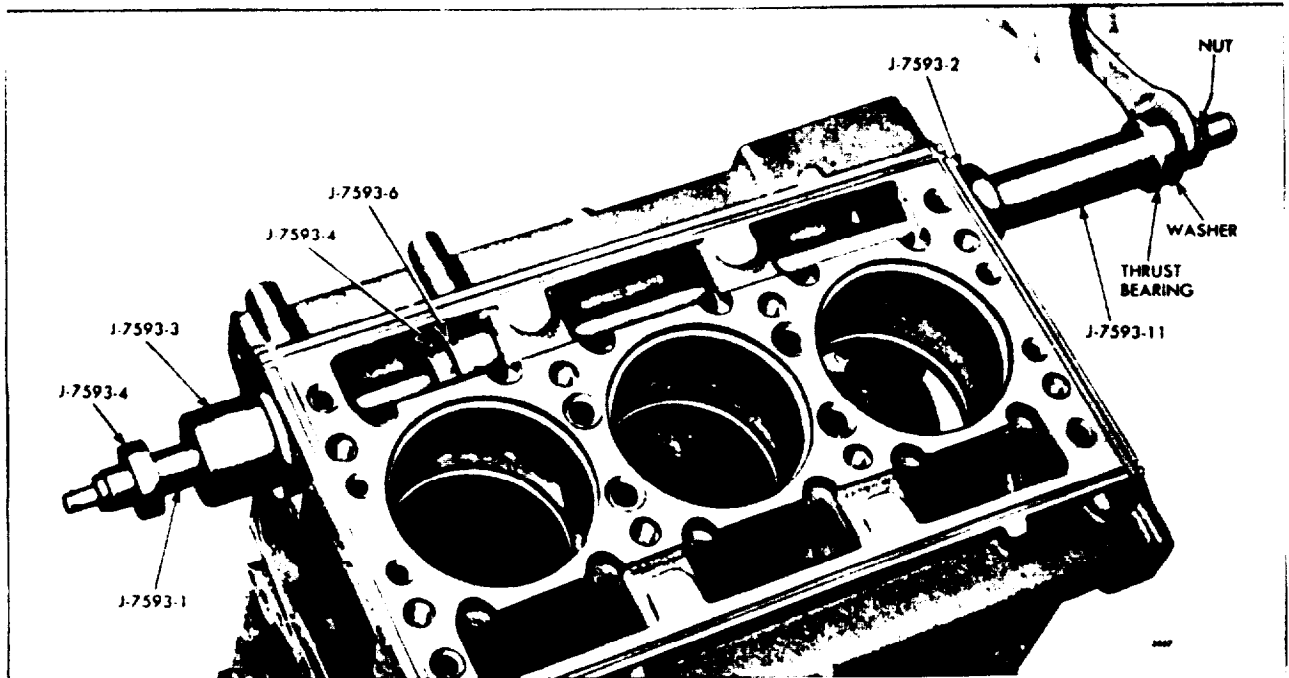


Fig. 4 Installing Intermediate Camshaft Bearing

Remove Bearings

The end bearings must be removed prior to removing the intermediate bearings.

**CAUTION:** When removing the bearings be sure to note the position of the bearings in the bore with respect to the notch in the bearings. Replacement bearings must be installed in the same position.

1. Remove all accessories and assemblies with their attaching parts as is necessary so that tool set J 7593-02 may be used as shown in Fig. 3 and in A of Fig. 7.

Tool set J 7593-03, designed for use with standard size bearings, may be used to remove and install .010 " undersize and .020 " undersize bearings by reducing the pilot diameter of the pilot J 7593-2, installer J 7593-3, remover J 7593-5, installer J 7593-6, and installer J 7593-15. The pilot diameter of these tools should be reduced by .020". This reduction in tool diameter does not materially effect usage on standard size bearings. If the tools are used frequently, however, it may be advisable to purchase additional standard pieces. Reduced diameter tools have not been released.

2. Insert the small diameter end of the pilot J 7593-2 into the end bearing.

3. Then, with the unthreaded end of the shaft J 7593-1 started through the pilot, push the shaft through the block bore until the end of the shaft snaps into the remover J 7593-5.

4. Now drive the end bearing out of the cylinder block. The nearest intermediate and/or center bearings can be removed now in the same manner. The large diameter end of pilot J 7593-2 will fit into

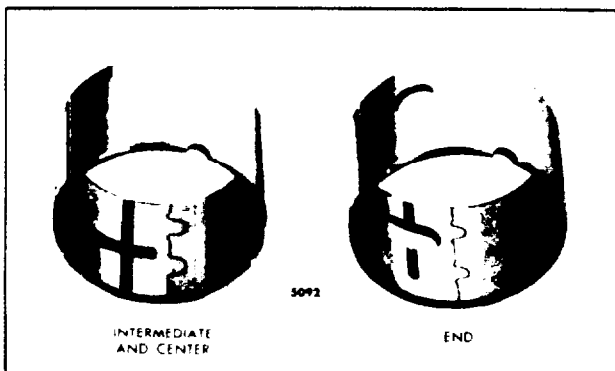


Fig. 5 Camshaft and Balance Shaft Bearing Identification

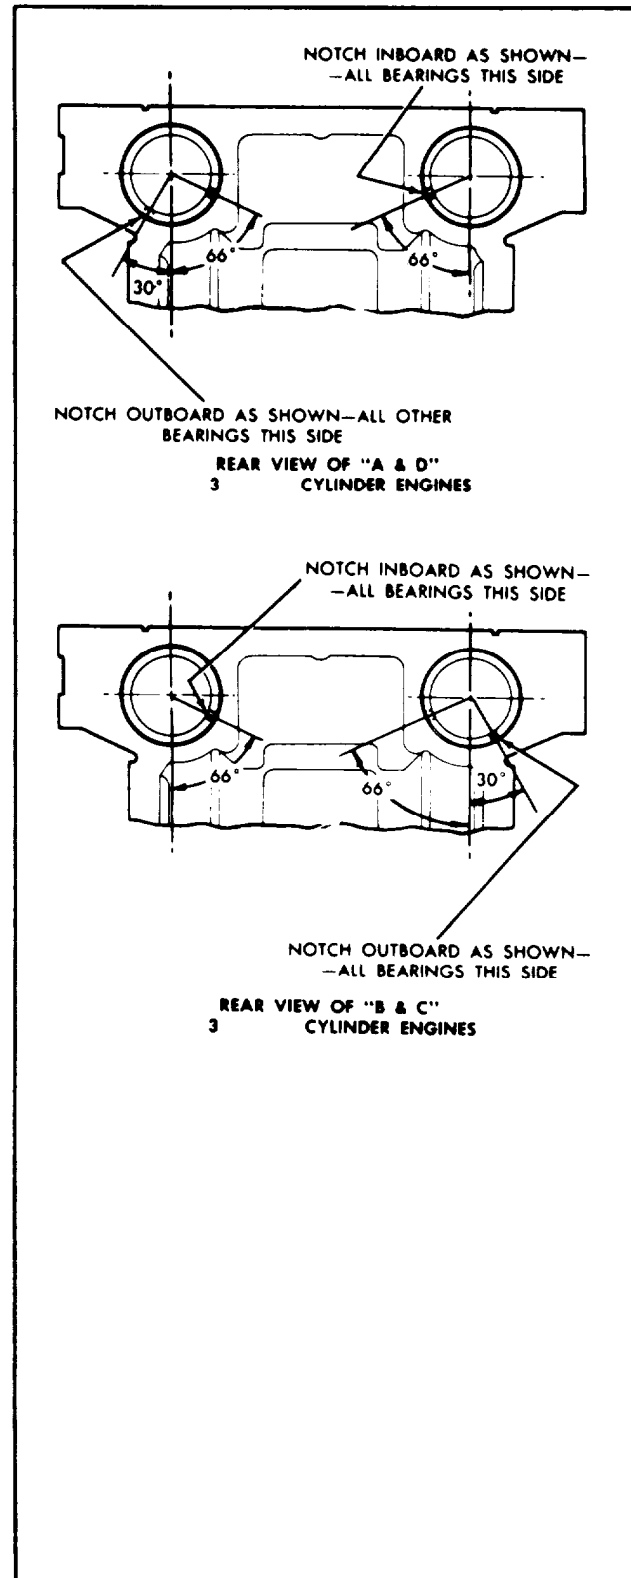


Fig. 6. Location of Notch in Relation to Shaft Bore Centerline

the camshaft bore and is used when removing the other end bearing and any remaining bearings.

**Install Intermediate and/or Center Camshaft Bearings**

Camshaft center and intermediate bearings must be installed prior to installing the camshaft end bearings. On the four cylinder In-Line and 8V engine, the center, rear intermediate and rear bearings are installed in that order by pressing the bearings from the rear to the front of the block. The front intermediate and front bearings are installed by pressing the bearings from the front to the rear of the block. Bearings are similarly installed in the three cylinder and 6V engine except that there is no center bearing. The center bearing for the IWO cylinder block is installed by pressing the bearing from the rear to the front of the block.

**NOTE:** Current bearings incorporate lubrication grooves on the inner bearing surface (Fig. 5).

To properly install the camshaft and balance shaft bearings, refer to Fig. 6 for location of the notch in the bearing in relation to the camshaft or balance shaft bore centerline in the cylinder block.

Also, to facilitate assembly, the camshaft and balance shaft bearings are color coded on the side and/or end as shown in Table 2.

1. Insert pilot J 7593-2 in the bore of the block as shown in Fig. 4. Use the small end of the pilot if an

**CAMSHAFT AND BALANCE SHAFT BEARING COLOR CODE CHART**

Bearing Position	Color Code		Outside Diameter	Inside Diameter
	Current	Former		
End	Brown	Black	Standard .010" Oversize	Standard, .010" & .020" U.S. Standard (only)
	Brown	Yellow		
Inter-mediate	Orange	Red	Standard .010" Oversize	Standard, .010" & .020" U.S. Standard (only)
	Orange	Blue		

Table 2

end bearing has been installed Refer to B and C of Fig. 7.

2. Insert the new intermediate or center bearing into the camshaft bore and position it correctly Install the center bearing first.

3. Then, with the unthreaded end of shaft J 7593-1 started through the pilot, push the shaft through the entire length of the block bore

4. Slide installer J 7593-6 on the shaft until the locating pin registers with the notch in the bearing. Then, slide installer J 7593-3 or J 7593-15 on the shaft with the large diameter inserted into the end of the block bore. Refer to C and note of Fig. 7.

5. Next, place a spacer (if required), thrust washer, plain washer and hex nut over the threaded end of the puller. The short spacer J 7593-11, shown in Fig. 4, is used on the three cylinder (In-Line) and 6V blocks. The long spacer J 7593-10 is used on the two cylinder block.

6. Align the shaft in such a way that a "C" washer, J 7593-4, can be inserted in a groove in the shaft adjacent to installer J 7593-6.

7. Place a "C" washer in the groove near the end of the shaft and, using a suitable wrench on the hex nut, draw the bearing into place until the "C" washer butts up against installer J 7593-3 and prevents the shaft from further movement.

**Install End Bearings**

Refer to the camshaft and balance shaft color code chart and the cylinder block bore machining dimension chart when installing the end bearings.

1. Insert pilot J 7593-2 in the bore of the block as shown in "D" of Fig. 7. Use the small diameter of the pilot if a bearing has been installed.

2. Insert support J 7593-12 in the bore in the opposite end of the block; then, with the unthreaded end of the shaft started through pilot J 7593-2, push the shaft through the block and support J 7593-12.

3. Place a new end bearing on installer J 7593-3 and align the notch in the bearings with the pin on the installer. Then, slide the installer and the bearing on the shaft. Position the bearing correctly with the groove in the camshaft bore.

4. Place "C" washer J 7593-4 in the end notch in the shaft; pull the shaft back until the washer butts against the installer.



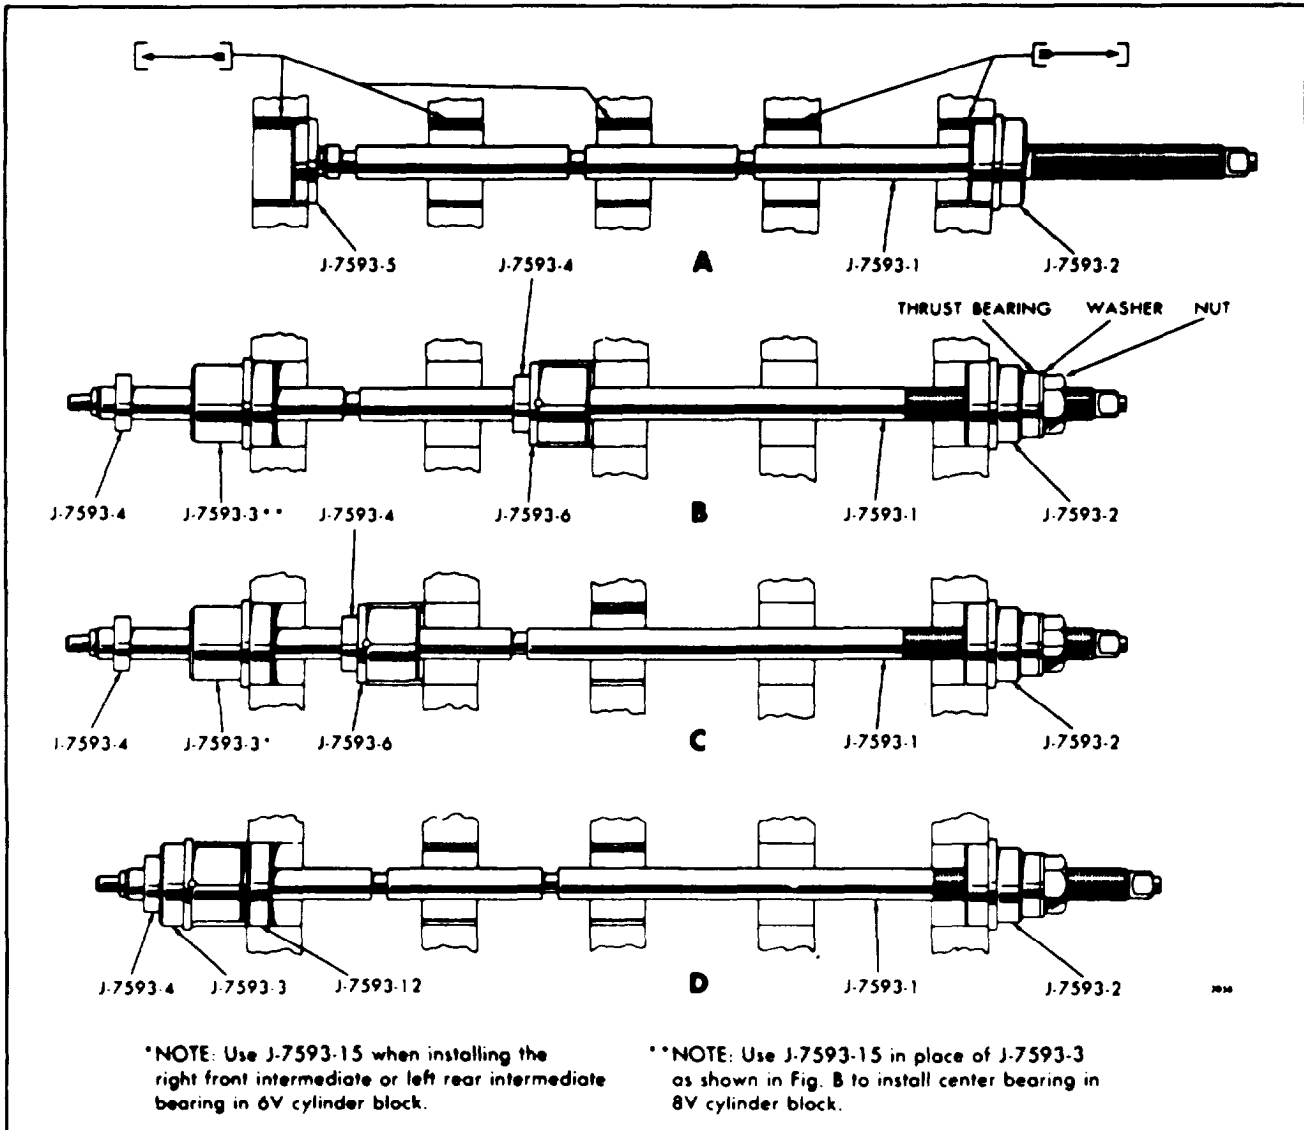


Fig. 7 Removing and Replacing Camshaft or Balance Shaft Bearings

5. Next, place a spacer (if required), thrust washer, plain washer and hex nut over the threaded end of the shaft as shown in "D" of Fig. 7 and, using a suitable wrench on the hex nut, draw the bearing into place until the shoulder on the installer prevents the shaft from further movement. The bearing is now installed in its correct position.

Install the remaining end bearings in the same manner.

Use of tool J 7503-03 assures that the bearings are properly spaced in relation to the end of the block. The center bearing (notch end) for a four and 8V cylinder block is 10.94" from the rear face of the

block. The center bearing for the two cylinder block is 5.54" from the rear face of the block. The intermediate hearings for the four cylinder and three cylinder block are 5.54" from the rear and front face of the block. The right rear and left front intermediate bearings for the 6V and 8V cylinder block are 5.54" from the rear and front face of the block; and the right front and left rear intermediate hearings are 6.66" from the front and rear face of the block.

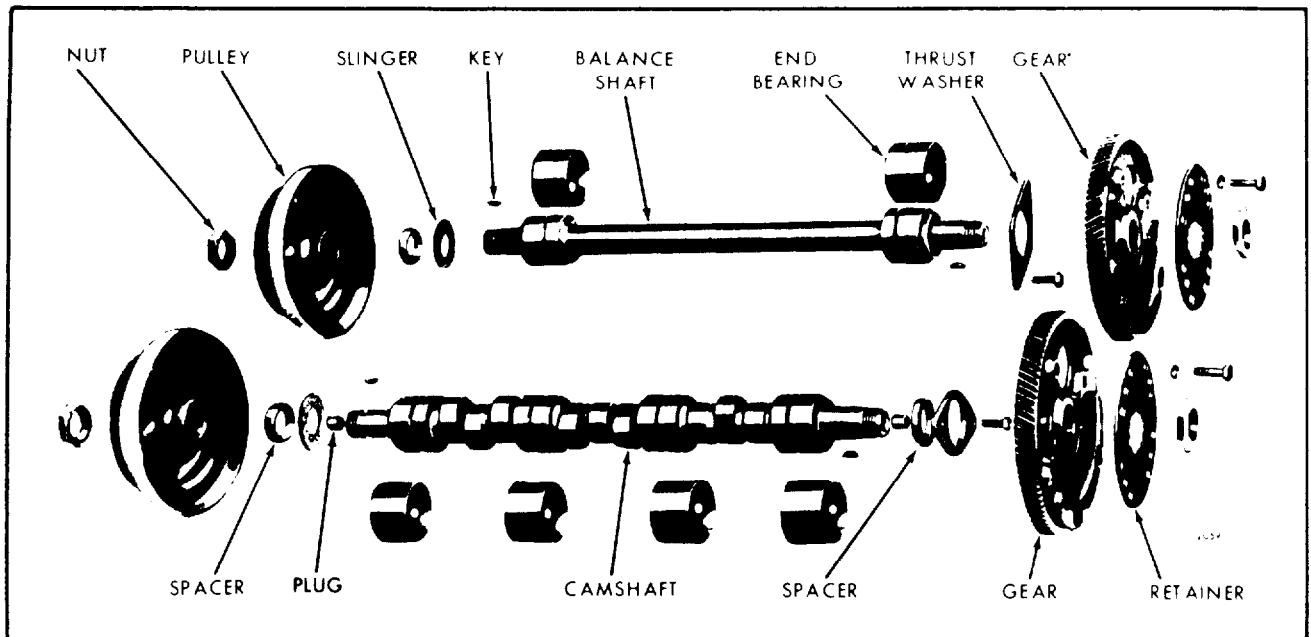


Fig. 8 Camshaft and Balance Shaft Details and Relative Location of Parts

#### Assemble and Install Camshaft and Balance Shaft

Refer to Fig. 8 and assemble the camshaft and balance shaft.

1. Install new end plugs in the camshaft. Press the plugs in to a depth of 1.940" to 2.060".

2. Install the gears and thrust washers on their respective shafts as outlined in Section 1.7.3.

3. Lubricate the bearings and shafts with engine oil and slide the shaft assemblies into the cylinder block being careful not to damage the bearings or the cams and journals. Make sure that the appropriate timing marks on the gears are aligned. Refer to Gear Train and Engine Timing in Section 1.7.1.

4. Slide an oil slinger on the front end of both shafts.

5. Install the upper engine front cover, if used, (Section 1.7.8).

6. Secure the thrust washers in place as shown in Fig. 2 and tighten the bolts to 30-35 lb-ft torque.

7. Install the front balance weights (Section 1.7).

8. Attach the gear nut retainer plates (if used) to the gears with bolts and lock washers and tighten the bolts to 35-39 lb-ft torque.

9. Check the clearance between the thrust washer and the gear on both shafts. The clearance should be .005" to .015" or a maximum of .019" with used parts.

10. Check the backlash between the mating gears. The backlash should be .003" to .005" and should not exceed .007" between used gears.

11. Install the flywheel housing and other parts or assemblies that were removed from the engine as outlined in their respective sections of this manual.



## CAMSHAFT AND BALANCE SHAFT GEARS

The camshaft and balance shaft gears on an In-line engine

are located at the flywheel end of the engine and mesh with each other and run at the same speed as the crankshaft

Since the camshaft and balance shaft gears on In-line engines

must be in time with each other, timing marks are stamped on the rim of each gear. Also, since these two gears as a unit must be in time with the crankshaft, timing marks are located on the idler and crankshaft gears (refer to Section 1.7.1).

Each gear is keyed to its respective shaft and held securely against the shoulder on the shaft by a nut. A gear nut retainer, with a double hexagon hole in the center, fits over the nut on some engines. The retainer is attached to the gear by bolts threaded into tapped holes in the gear.

On the three cylinder In-line engines, external weights are attached to the rear face of each gear.

The weights are important in maintaining perfect engine balance.

When new service gears are used on an In-line engine, the external weights on the old gears must be transferred to the new gears. If the weights are transferred to new gears, tighten the bolts to 45-50 lb-ft torque.

### Remove Camshaft and Balance Shaft Gears

1. Remove the camshaft and the balance shaft from the engine as outlined in Section 1.7.2.
2. Place the camshaft and gear assembly in an arbor press with the gear suitably supported as shown in Fig. 1.
3. Place a wood block under the lower end of the camshaft so the threads will not be damaged when the shaft is pressed from the gear.
4. Place a short piece of 3/4" O.D. brass rod between the end of the camshaft and the ram of the press; then force the camshaft out of the camshaft gear.
5. Remove the thrust washer, Woodruff key and spacer from the camshaft.
6. Remove the gear from the balance shaft in a similar manner.

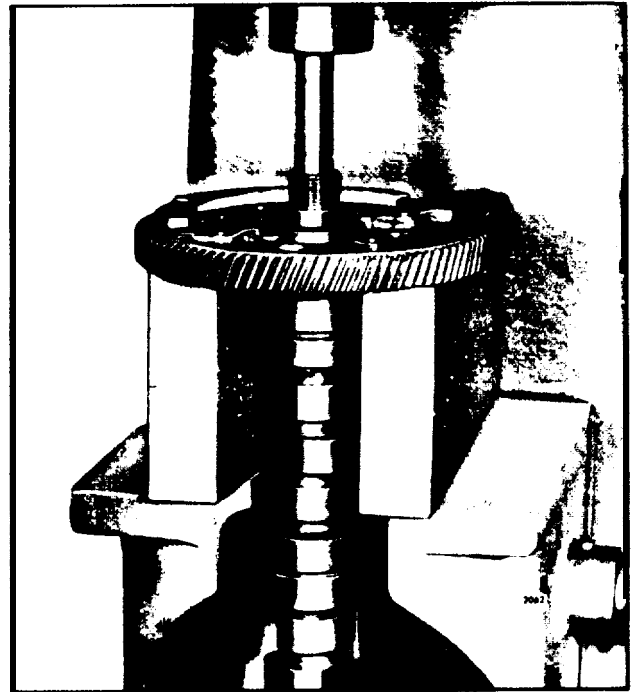


Fig. 1 Removing Camshaft Gear

### Inspection

Clean the gears with fuel oil and dry them with compressed air. Then examine the gear teeth for evidence of scoring, pitting and wear. Replace the gears if necessary.

Examine both faces of the camshaft and balance shaft thrust washer and, if either face is worn or scored, replace the washer. Also examine the surface on the camshaft and balance shaft which the thrust washer contacts. If this surface is scratched, but not severely scored, smooth it up with a fine oil stone.

### Install Camshaft and Balance Shaft Gears

1. Note the letters stamped on the end of the camshaft which signify the engine models in which a camshaft may be used. The letters on the timing gear end of the camshaft must correspond with the engine model of the particular engine being assembled. Refer to the front of this manual for engine model identification.
2. Place the rear camshaft spacer over the timing gear end of the camshaft and install the Woodruff key.
3. Lubricate the thrust washer with clean engine oil and place the thrust washer over the gear end of the camshaft and the spacer

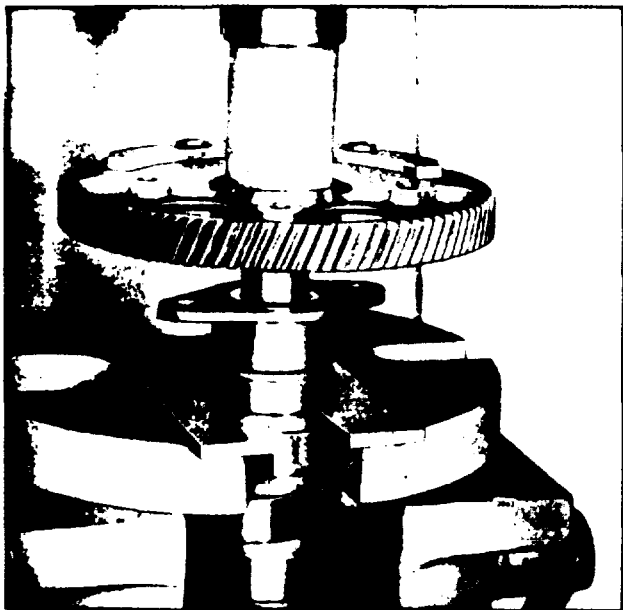


Fig. 2 Installing Camshaft Gear

4. Start the camshaft gear over the end of the camshaft with the key in the shaft registering with the

keyway in the gear.

5. Then, with the camshaft supported in an arbor press, place a sleeve on top of the gear and under the ram of the press. Bring the ram of the press down on the sleeve and press the gear tight against the spacer on the shaft (Fig. 2).

6. Measure the clearance between the camshaft thrust washer and the camshaft. This clearance should be .008" to .015" when new parts are used. With used parts, a maximum clearance of .021" is allowable.

7. Install the gear retaining nut on the camshaft by hand. Tighten the nut after the shaft is installed in the cylinder block.

8. Install the gear on the balance shaft in a similar manner. No rear spacer is used with the balance shaft gear, since the gear seats against a shoulder on the shaft.

9. Install the camshaft and balance shaft in the engine as outlined in Section 1.7.

## IDLER GEAR AND BEARING ASSEMBLY

### IN-LINE

The engine idler gear and bearing assembly, located at the flywheel end of the engine, meshes with the camshaft and crankshaft gears and rotates on a stationary hub. The hub is secured directly to the cylinder block by a bolt which passes through the hub and three bolts which pass through the flywheel housing, hub and end plate (Fig. 1).

Two timing marks (a triangle within a circle) are stamped on the idler gear diametrically opposite (180 °) to one another.

The inside diameter of the idler gear bearing is 2.186 "-2.187 " and the outside diameter of the idler gear hub is 2.1825 "-2.1835 ". Therefore, the clearance between the idler gear hub and the idler gear bearing is .0025" to .0045", with a maximum allowable wear limit of .007".

A thrust washer is provided on both sides of the idler gear and bearing assembly. The standard thickness of the idler gear and bearing assembly is 1.233" to 1.234" and the standard thickness of the two thrust washers is .236" to .240", thus, the clearance between the thrust washers and the idler gear is .006" to .013", with a maximum allowable wear limit of .017".

On an In-line engine, the idler gear is positioned on the left-hand side for a right-hand rotating engine

as viewed from the rear. Refer to Fig. 5 under General Description.

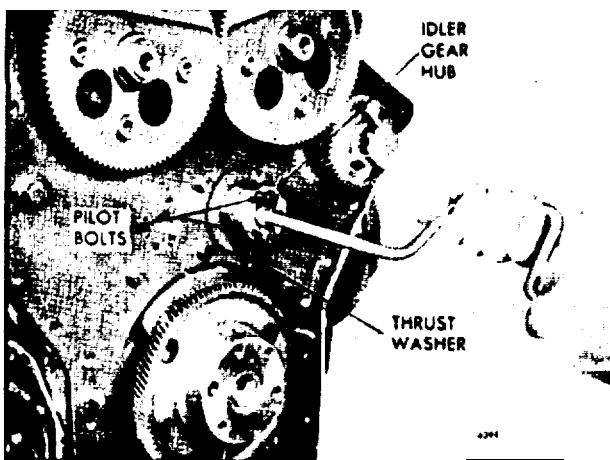


Fig. 1 Installing Idler Gear Hub

### ENGINES

On early engines, an idler gear spacer (dummy hub) was used on the side opposite the idler gear. Currently the flywheel housing has an integral cast hub and a .015" thick shim is used between the flywheel housing and the end plate.

Remove Idler Gear and Bearing Assembly  
(Flywheel Housing Removed )

1. Remove the idler gear outer thrust washer from the idler gear hub (Fig. 3).
2. Slide the idler gear straight back off of the idler gear hub.
3. Remove the bolt which secures the idler gear hub to

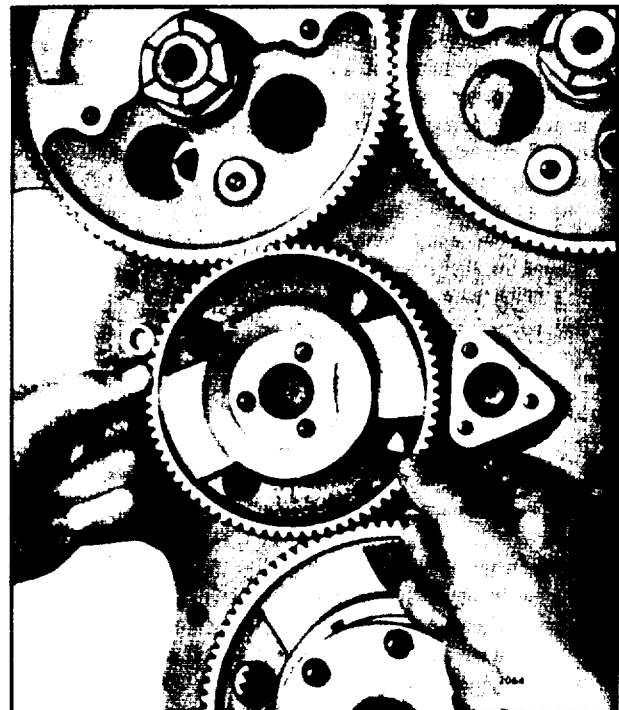


Fig. 2 Installing Idler Gear

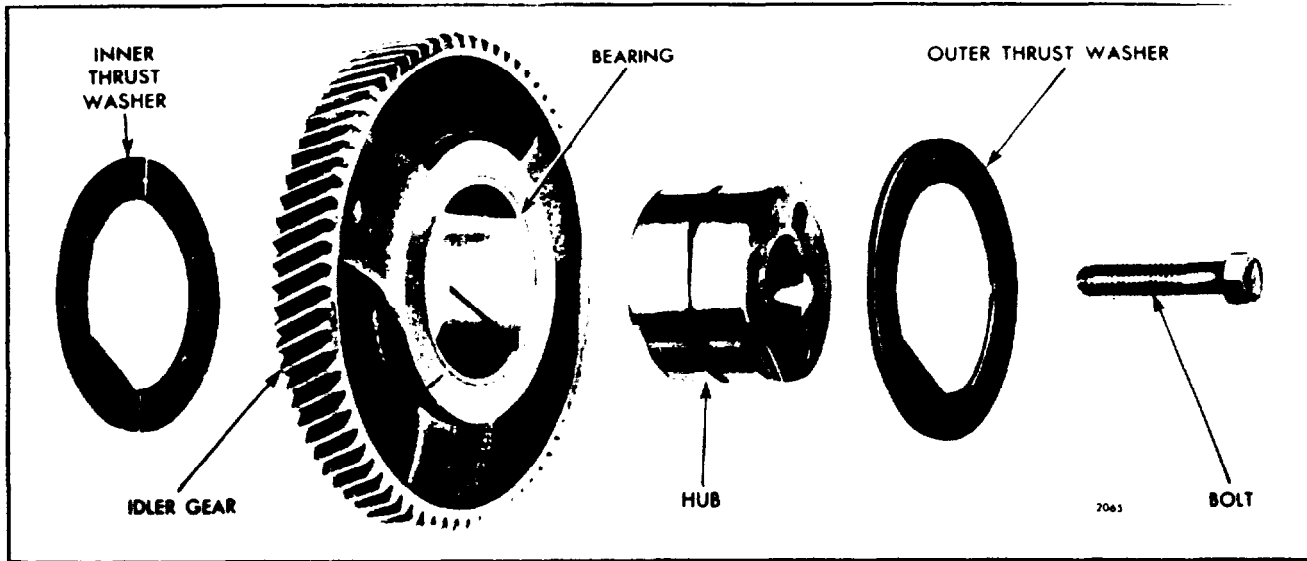


Fig. 3 Idler Gear Details and Relative Location of Parts

the cylinder block. Then remove the idler gear hub and the idler gear inner thrust washer as an assembly.

### Inspection

Wash the idler gear and bearing assembly, hub and thrust washers thoroughly in clean fuel oil and dry them with compressed air. Examine the gear teeth and bearing for scoring, pitting and wear. If the gear teeth are worn or the bearing is scored, pitted or worn excessively, replace the gear and bearing assembly or install a new bearing in the gear. Examine the outside diameter of the idler gear hub and thrust washers; if scored or worn excessively, replace them.

An idler gear bearing with two oil grooves has been incorporated in the idler gear and bearing assemblies beginning with engine serial number 3D-6773.

When a new bearing is installed in the idler gear, it must not protrude beyond the gear face on-either side.

### Install Idler Gear and Bearing Assembly

1. Place the inner thrust washer on the forward end of the idler gear hub with the flat in the inner diameter of the thrust washer over the flat on the end of the gear hub and with the oil grooves in the thrust washer facing the idler gear.
2. Place the small protruding end of the idler gear hub

through the end plate and into the counterbore in the cylinder block.

3. Insert two 3/8 "-16 bolts through the idler gear hub and thread them into the cylinder block, as shown in Fig. 1, to be sure the bolt holes will be in alignment when the flywheel housing is installed.

4. Insert the 3/8"-16x1-3/4" special bolt through the center of the idler gear hub and thread it into the cylinder block. Tighten the bolt to 40-45 lb-ft torque. Then remove the two 3/8 "-16 bolts previously installed for alignment of the gear hub.

5. Lubricate the idler gear hub and idler gear bearings liberally with clean engine oil.

6. Position the crankshaft gear and the camshaft gear or balance shaft gear so that their timing marks will align with those on the idler gear. Refer to Figs. 1 and 2 in Section 1.7.1.

7. With these timing marks in alignment, install the idler gear as shown in Fig. 2.

8. Apply a thin film of cup grease to the inner face (face with the oil grooves) of the outer idler gear thrust washer. Then place the thrust washer over the end of the idler gear hub with the oil grooves in the side of the thrust washer facing the idler gear and the flat in the inner diameter of the thrust washer over the flat on the end of the idler gear hub.

9. Check the backlash between the mating gears. The backlash should be .003" to .005" between new gears and should not exceed .007" between used gears.

## CRANKSHAFT TIMING GEAR

### In-line

The crankshaft timing gear is keyed and pressed on the crankshaft and drives the camshaft gear (In-line engines) or balance shaft gear (In-line engines) through an idler gear.

Since the camshaft must be in time with the crankshaft, timing marks are located on the rim of the idler gear with corresponding timing marks stamped on the crankshaft gear and camshaft and balance shaft gears (refer to Section 1.7.1).

#### Remove Crankshaft timing Gear (Flywheel Housing Removed)

The crankshaft timing gear is a .001" to .003" press fit on the crankshaft. Remove the gear as follows:

1. Remove the crankshaft rear oil seal sleeve, if used. To remove the sleeve, peen the outside diameter of the sleeve until it stretches sufficiently so it can be slipped off of the crankshaft.
2. Before removing the crankshaft gear, align the timing marks of the gear train and note their location so the gear can be reinstalled in its original position.
3. Attach bar type puller J 4871 to the crankshaft gear with three long bolts or hooks, flat washers and nuts through the holes in the gear as shown in Fig. 1.
4. Turn the center screw of the puller to pull the crankshaft gear off of the crankshaft.

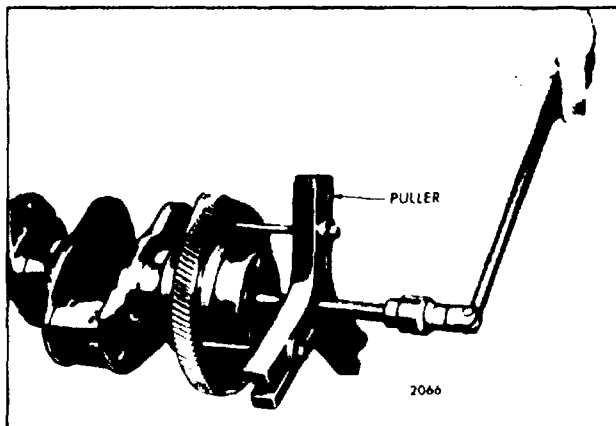


Fig. 1. Removing Crankshaft Timing Gear

### Engine

#### Inspection

Clean the gear with fuel oil and dry it with compressed air. Examine the gear teeth for evidence of scoring, pitting or wear. If severely damaged or worn, install a new gear. Also check the other gears in the gear train.

#### Install Crankshaft timing Gear

1. If removed, install the Woodruff key in the keyway in the crankshaft.
2. Start the timing gear over the end of the crankshaft with the timing marks on the outer rim of the gear facing out and the keyway in the gear in alignment with the Woodruff key in the crankshaft.
3. Align the proper timing mark on the crankshaft gear with the corresponding mark on the idler gear (refer to Section 1.7.1).

NOTE: When advanced timing is required, align the timing mark "A" with the timing mark on the idler gear.

4. Place a heavy hammer against the head of the bolt in the front end of the crankshaft. Place installer J 7557 against the rear face of the timing gear and

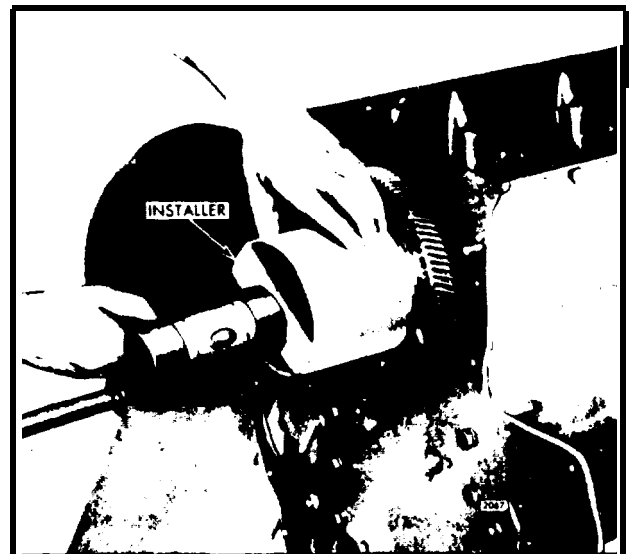


Fig. 2. Installing Crankshaft Timing Gear



drive the gear up against the shoulder on the crankshaft as shown in Fig. 2.

5. Check the gear backlash with the mating gear. The

backlash should be .003" - .005" with new gears or .008" maximum with used gears.

6. Install a new crankshaft rear oil seal sleeve, if required, as outlined in Section 1.3.2.

## ACCESSORY DRIVE

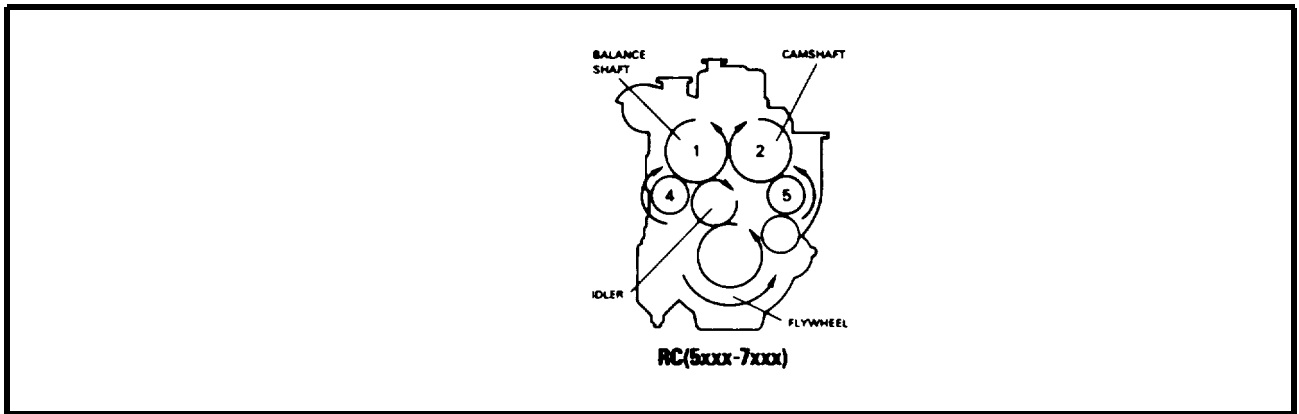


Fig. 1 - Accessory Drive Locations (In-Line Engines)

Accessory drives have been provided at the rear of the engines to accommodate both gear driven and belt driven accessories.

For the accessory drive locations and rotation

of the drive at a particular position, refer to Fig 1.

The drive for direct gear driven accessories, such as air compressors or hydraulic pumps, consists of a drive

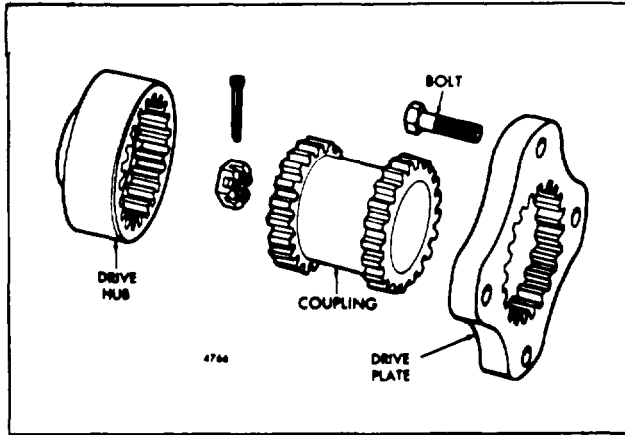


Fig. 3 Air Compressor Drive

hub, coupling and drive plate (Fig. 3) or a spacer, drive plate, drive coupling and hub (Fig. 4).

The drive plate and spacer, when used, are bolted to the camshaft or balance shaft gear. The accessory is bolted to the flywheel housing and driven by a drive hub keyed to the accessory shaft and splined to the coupling which is splined to the drive plate attached to the camshaft or balance shaft gear. The current drive coupling, shown in Fig. 4, has 21 external teeth; the former coupling had 23 external teeth.

Belt driven accessories, such as battery-charging generators or air compressors, are driven off the camshaft or balance shaft gears by a drive hub and pulley (Fig. 5), or a spacer, accessory drive plate, accessory drive shaft, accessory drive retainer assembly and pulley (Fig. 6).

In the first arrangement, illustrated in Fig. 5, the drive hub is bolted to the camshaft or balance shaft gear. The oil seal retainer is bolted to the flywheel housing and the pulley is keyed to the drive hub shaft which extends through the oil seal retainer.

In the second arrangement, shown in Fig. 6, the spacer and accessory drive plate are bolted to the camshaft or balance shaft gear. The accessory drive shaft is splined to the drive plate at one end and supported by a bearing in the accessory drive retainer at the other end. The accessory drive retainer, which also incorporates an oil seal, is bolted to the flywheel housing. The pulley is keyed to the drive shaft which extends through the drive retainer assembly.

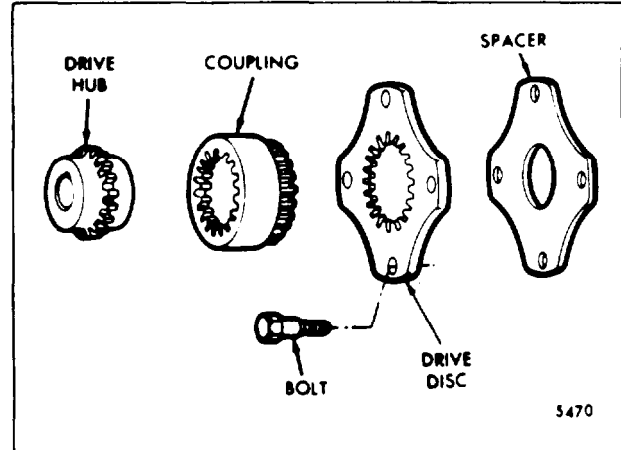


Fig. 4 Hydraulic Pump Drive

#### Remove Accessory Drive

Remove the direct gear driven type accessory drive as follows:

1. Remove any external piping or connections to the accessory.
2. Remove the five bolts and lock washers attaching the accessory to the flywheel housing. Pull the accessory straight out from the flywheel housing.
3. Remove the drive coupling.
4. Remove the drive hub from the accessory shaft, if necessary.
5. Place a clean cloth in the flywheel housing opening, underneath the accessory drive plate, to prevent bolts from accidentally falling into the gear train. Remove the lock wires, if used and remove the four bolts (and lock if used) and remove the accessory, the drive plate and the spacer, if used.

Remove the drive assembly for a type accessory as follows:

1. Remove any external piping or connections to the accessory.
2. Loosen the accessory and slide it toward the drive pulley. Then remove the drive belt and accessory.
3. Remove the bolt and washer (Fig. 5) or nut (Fig. 6) retaining the pulley on the drive shaft.
4. Use a suitable gear puller to remove the pulley from the drive shaft. Remove the Woodruff key.
5. Remove the five bolts and lock washers which attach.

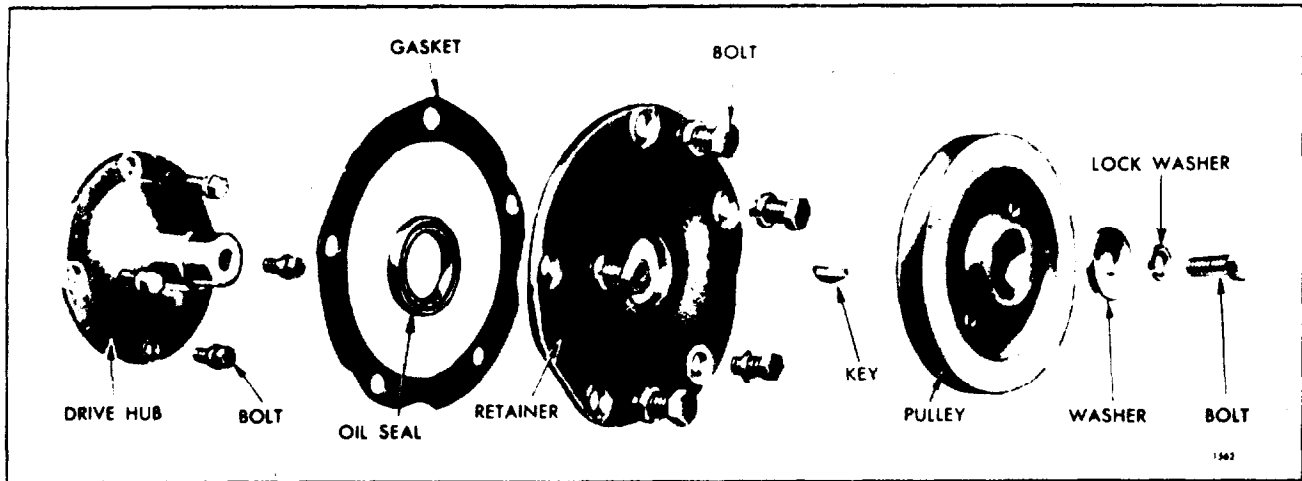


Fig. 5 Components of Accessory Drive for Belt Driven Accessory (Drive Hub Type)

the drive retainer assembly to the flywheel housing. Remove the retainer assembly.

6. Remove the accessory drive shaft, drive plate and spacer (Fig. 6), or drive hub (Fig. 5) in a manner similar to that outlined in Step 5 under removal of the direct gear driven type accessory drive.

7. Remove the snap ring and ball bearing from the accessory drive shaft retainer assembly shown in Fig. 6.

**Inspection**

Clean the accessory drive parts with clean fuel oil and dry them with compressed air. Examine the gear teeth of the drive shaft, drive coupling, drive hub or drive plate for wear. If worn excessively, replace them with new parts.

Inspect the ball bearing used to support the accessory drive shaft shown in Fig. 6. Wash the bearing in clean fuel oil and dry it with compressed air. *Shielded bearings must not be washed*; dirt may be washed in and the cleaning fluid could not be entirely removed

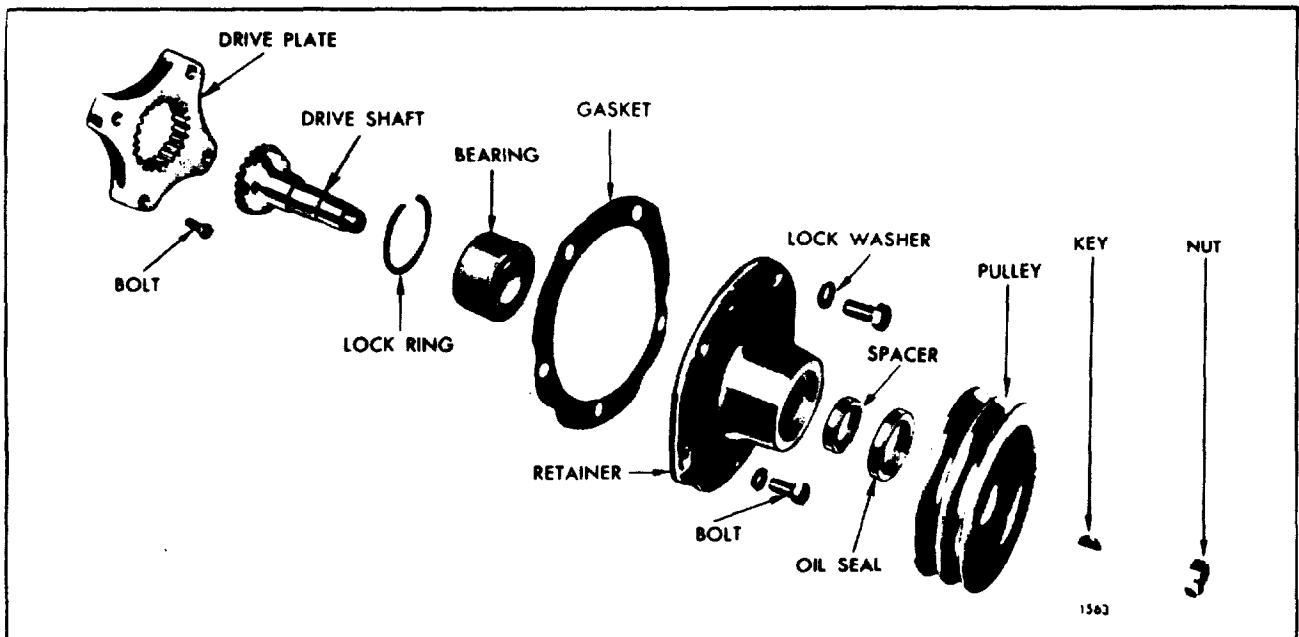


Fig. 6 . Components of Accessory Drive for Belt Driven Accessory (Drive Plate Type)

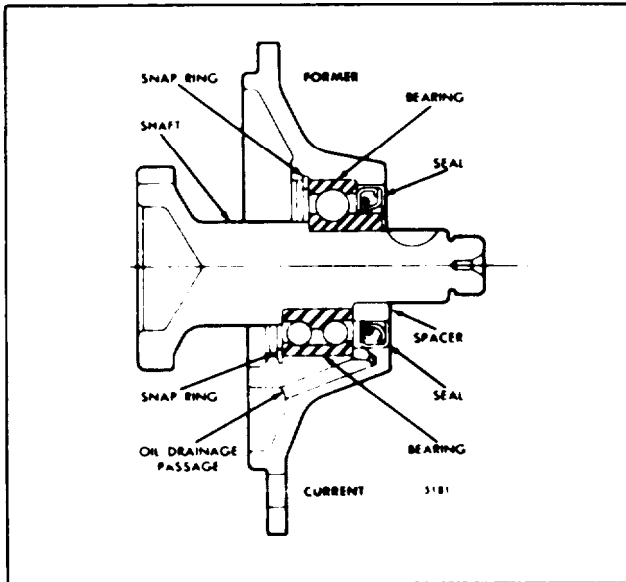


Fig. 7 Former and Current Drive Plate Type Accessory Drive

from the bearing. Wipe the outside of the bearing clean, then hold the inner race and revolve the outer race slowly by hand. If the bearing is worn or does not roll freely, replace the bearing.

Inspect the accessory drive hub, shown in Fig. 5, for grooving at the area of contact with the lip of the oil seal. If the hub is grooved to a point where the effectiveness of the oil seal is lost, a ring type oil seal spacer is available which serves to reposition the seal, thus providing a new sealing surface for the lip of the seal (Fig. 8).

### Install Accessory Drive

1. Remove old gasket material from the flywheel housing. Use care so that no gasket material falls into the gear train compartment.

2. Insert a clean, lintless cloth in the flywheel housing opening to prevent bolts from accidentally falling in the gear train. Align the bolt holes in the accessory drive plate and spacer (if used), or the accessory drive hub, with the tapped holes in the camshaft or balance shaft gear. Then secure the plate and spacer, or drive hub, with four bolts (and lock washers or lock wire, if used). Remove the cloth from the flywheel housing opening.

3. If a gear driven accessory is used as shown in Figs. 3 and 4, install the accessory drive coupling, then:

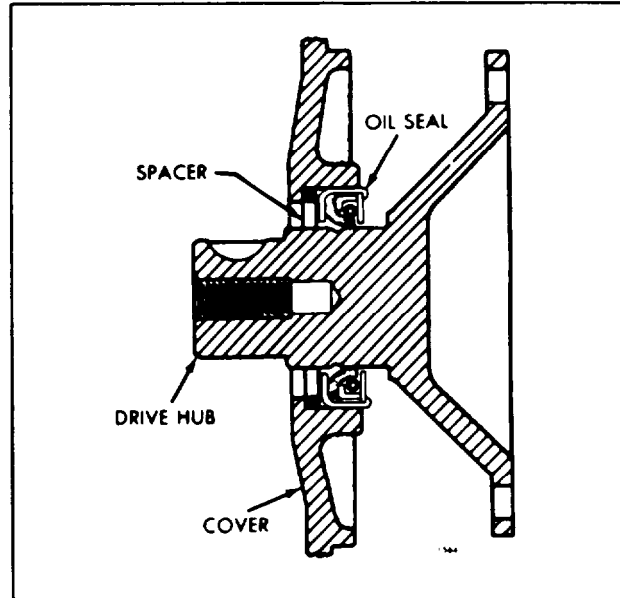


Fig. 8 Location of Oil Seal Spacer

**CAUTION:** When replacing the drive hub on the accessory shaft, drive the hub squarely on the shaft (refer to Section 12.4).

- a. Place a new gasket on the flange and align the holes in the gasket with the bolt holes in the flange. Use a light coat of grease to retain the gasket in position.
- b. Place the accessory in position against the flywheel housing, rotating it, if necessary, to align the teeth of the accessory hub with those in the drive coupling. Secure the accessory to the flywheel housing with five bolts and lock washers.

4. If the accessory drive shown in Figs. 6 or 7 is used, assemble as follows:

- a. Install the accessory drive plate and spacer as outlined in Steps 1 and 2 above.
- b. Place the drive shaft retainer on the bed of an arbor press, with the mounting flange side up. Press the double row ball bearing straight in until the bearing contacts the shoulder in the bore of the retainer. Install the snap ring.

**NOTE:** On former accessory drives (Fig. 7), install the bearing with the protruding face of the inner race towards the retainer.

- c. Turn the retainer over and press the oil seal into the bore of the retainer with the lip of the seal toward the bearing.

- d. Turn the retainer over again, bearing side up, and press the accessory drive shaft in the bearing until the shoulder on the shaft contacts the bearing.
- e. Apply a light coat of grease to the mounting flange of the retainer and place a new gasket in position against the flange. Align the holes in the gasket with the bolt holes in the flange.
- f. Place the retainer and drive shaft assembly against the flywheel housing, rotating the shaft slightly, if necessary, to permit the teeth of the drive shaft to mesh with the teeth in the drive plate. Secure the retainer assembly to the flywheel housing with five bolts and lock washers.
- g. On current accessory drives, install the spacer over the shaft and against the bearing.
- h. Install the Woodruff key in the drive shaft. Start the pulley straight on the shaft, aligning the keyway in the pulley with the key on the shaft. Use a soft hammer to tap the pulley on the shaft.
- i. Thread the pulley retaining nut on the end of the drive shaft and draw it up tight.
- j. Install the accessory on the engine and slip the drive belt over the pulleys. Position the accessory to provide the proper tension on the belt and secure it in place.

NOTE: When installing or adjusting an accessory drive belt(s), be sure the bolt at the accessory adjusting pivot point is properly

tightened, as well as the bolt in the adjusting slot.

5. Assemble the accessory drive shown in Fig. 5 as follows:
  - a. Press a new oil seal in the oil seal retainer. if the seal was removed.
  - b. Coat the mounting flange of the retainer lightly with grease and place a new gasket against the flange. Align the holes in the gasket with the bolt holes in the flange.
  - c. With the accessory drive hub in place (see Step 2 above), slip the retainer and oil seal assembly over the end of the shaft. Use care not to damage the oil seal. Secure the retainer to the flywheel housing with five bolts and lock washers.
  - d. Install the Woodruff key. Start the pulley straight on the shaft, aligning the keyway in the pulley with the key on the shaft. Use a soft hammer to tap the pulley on the shaft.
  - e. Install the washers and the pulley retaining bolt and draw the bolt up tight.
  - f. Install the accessory on the engine and slip the drive belt over the pulleys. Position the accessory to provide the proper tension on the belt and secure it in place.

NOTE: When installing or adjusting an accessory drive belt, be sure the bolt at the accessory adjusting pivot point is properly tightened, as well as the bolt in the adjusting slot.



## ENGINE FRONT COVER (Upper)

### In-line

The upper engine front cover is mounted against the cylinder block at the upper front end of the engine.

The camshaft and balance shaft oil seals (In-line engine) are pressed into the cover.

### Remove Cover

When necessary, the oil seals may be removed without removing the upper front cover. This may be done by drilling diametrically opposite holes in the seal casing and threading metal screws, backed by flat washers, into the casing. Remove the seal by prying against the washers with pry bars. Install the new seals with installer J 9790.

If necessary, remove the engine cover as follows:

1. Remove the various parts and sub-assemblies from the engine as outlined in their respective sections of this manual.
2. Remove the pulleys from the front end of the camshaft and balance shaft (In-line engine). Refer to Section 1.7.2.
3. Remove the upper front cover-to-cylinder block attaching bolts.

### Engines

4. Tap the cover and dowel pin assembly away from the cylinder block.
5. Remove the Woodruff keys and oil seal spacers from the shafts.
6. Remove all traces of the old gasket material from the cylinder block and cover.

### Inspection

Check the oil seals and the spacers for wear or damage. Replace them if necessary.

### Remove Oil Seals

1. Support the inner face of the cover on wood blocks at least one inch thick to protect the dowel pins in the cover.
2. Drive the oil seals out of the cover.

### Install Oil Seals

1. Support the inner face of the cover on wood blocks.
2. If the outside diameter of the oil seal is not pre-coated with sealant, coat the bore in the cover with non-hardening sealant.

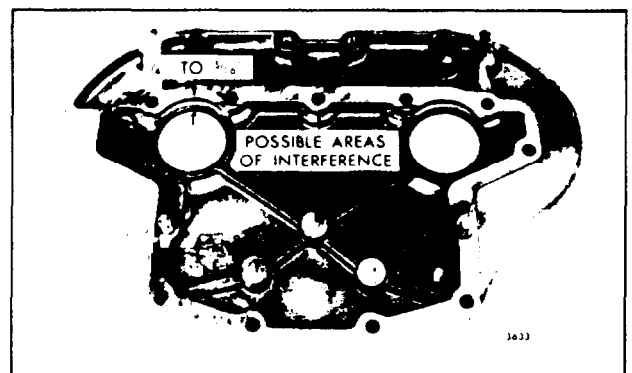


Fig. 2 In-Line Engine Upper Front Cover



3. Position a new oil seal in the cover with the lip of the seal pointing toward the inner face of the cover.

**CAUTION** Keep the lip of the oil seal clean and free from scratches.

4. Press the seal into the cover with installer J 9790 until the seal is flush with the bottom of the counterbore.

5. Install the second oil seal in the same manner.

6. Remove excess sealant from the cover and the seals.

#### Install Cover

1. Affix a new gasket the cover

2. Install the cover on the engine and secure it with bolt\ and lock washers. Tighten the bolts to 35 lb-ft torque.

3. Apply cup grease to the outside diameter of the oil seal spacers, then slide them on the shafts.

**NOTE:** Current engines use an oil slinger between the oil seal spacer and the shoulder on the camshaft and between the spacer and the end hearing on the balance shaft (In-line engine). . Addition of the oil slinger improves sealing by reducing the amount of oil in the area of the oil seals.

If oil slingers are installed on in-line engines built prior to Serial Number 3D-573 check the distance from the holes to the gasket flange (Fig. 2). If necessary, machine or grind the cover to provide sufficient clearance for the slingers.

4. Install a Woodruff key in each shaft.

5. Install the pulleys on the shafts.

6. Install and tighten the pulley retaining nuts to 300-325 lb-ft torque.

## SHOP NOTES - TROUBLE SHOOTING - SPECIFICATIONS -

### SERVICE TOOLS

#### SHOP NOTES

#### TEFLON WRAPPED PIPE PLUGS

Pipe plugs with a baked teflon coating are available for service. However, pipe plugs can be hand wrapped satisfactorily with teflon tape to provide a better seal and facilitate plug removal. When a teflon wrapped plug is installed, it is extremely important that the specified torque not be exceeded.

Hand wrap a pipe plug with teflon tape as follows:

1. Be sure the pipe plug is thoroughly clean and dry prior to applying the teflon tape. All dirt, grease, oil and scale must be removed.

2. Start the tape one or two threads from the small or leading edge of the plug, joining the tape together with an overlap of approximately 1/8"

3. Wrap the tape tightly in the same direction as you would turn a nut. The tape must conform to the configuration of the threads (be pressed into the minor diameter of the threads) without cutting or ripping the tape.

4. Hand tighten and hand torque the pipe plug and *do not exceed the specified torque. Do not use power tools.*

#### CHECKING BEARING CLEARANCES

A strip of soft plastic squeezed between the crankshaft journal and the connecting rod bearing or main bearing may be used to measure the bearing clearances.

The strip is a specially molded plastic "wire" manufactured commercially and is available in three sizes and colors. Type PC-1 (green) has a clearance range of .001" to .003", type PR-1 (red) has a range of .002" to .006" and type PB-1 (blue) has a range of .004" to .009"

The plastic strip may be used for checking the bearing clearances as follows:

1. Remove the bearing cap and wipe the oil from the bearing shell and the crankshaft journal.

**NOTE:** When checking the main bearing clearances with the engine in a position where the main bearing caps are supporting the weight of the crankshaft and the flywheel, an erroneous reading, due to the weight of the crankshaft and flywheel, can be eliminated by supporting the weight of the crankshaft with a jack under the counterweight adjoining the bearing being checked.

2. Place a piece of the plastic strip the full width of the bearing shell, about 1/4" off center (Fig. 1).

3. Rotate the crankshaft about 30° from bottom dead center and reinstall the bearing cap. Tighten the bolts to the specified torque.

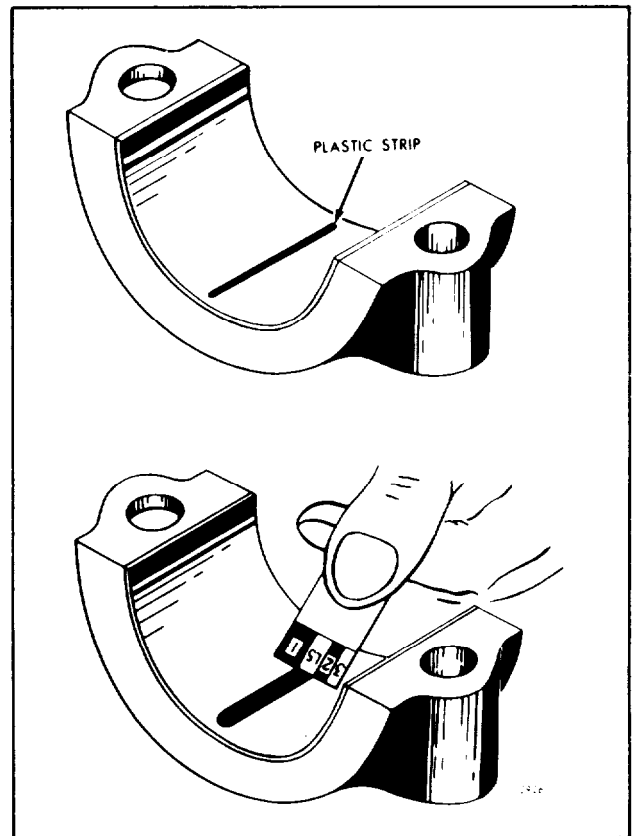


Fig. 1 Using Plastic Strip to Measure Bearing-to-Crankshaft Clearance

4. Remove the bearing cap. The flattened plastic strip will be found adhering to either the bearing shell or the crankshaft.

5. Compare the width of the flattened plastic strip at its widest point with the graduations on the envelope

(Fig. 1). The number within the graduation on the envelope indicates the bearing clearance in thousandths of an inch. Taper may be indicated when one end of the flattened plastic strip is wider than the other. Measure each end of the plastic; the difference between the readings is the approximate amount of taper.

#### CAMSHAFT CUP PLUG INSTALLATION


When an oil leak occurs at the drive plug area in the front end of the camshaft, install a cup plug in the end of the camshaft rather than removing and replacing the drive plug.

**NOTE:** It is not necessary to remove the camshaft from the engine when installing the cup plug.

Install the cup plug as follows:

1. Clean the hole in the front end of the camshaft and apply Permatex No. 1 sealant, or equivalent, to the outer diameter of the cup plug.
2. Install the plug to a depth of .180"-.210" with tool J 24094.

## TROUBLE SHOOTING

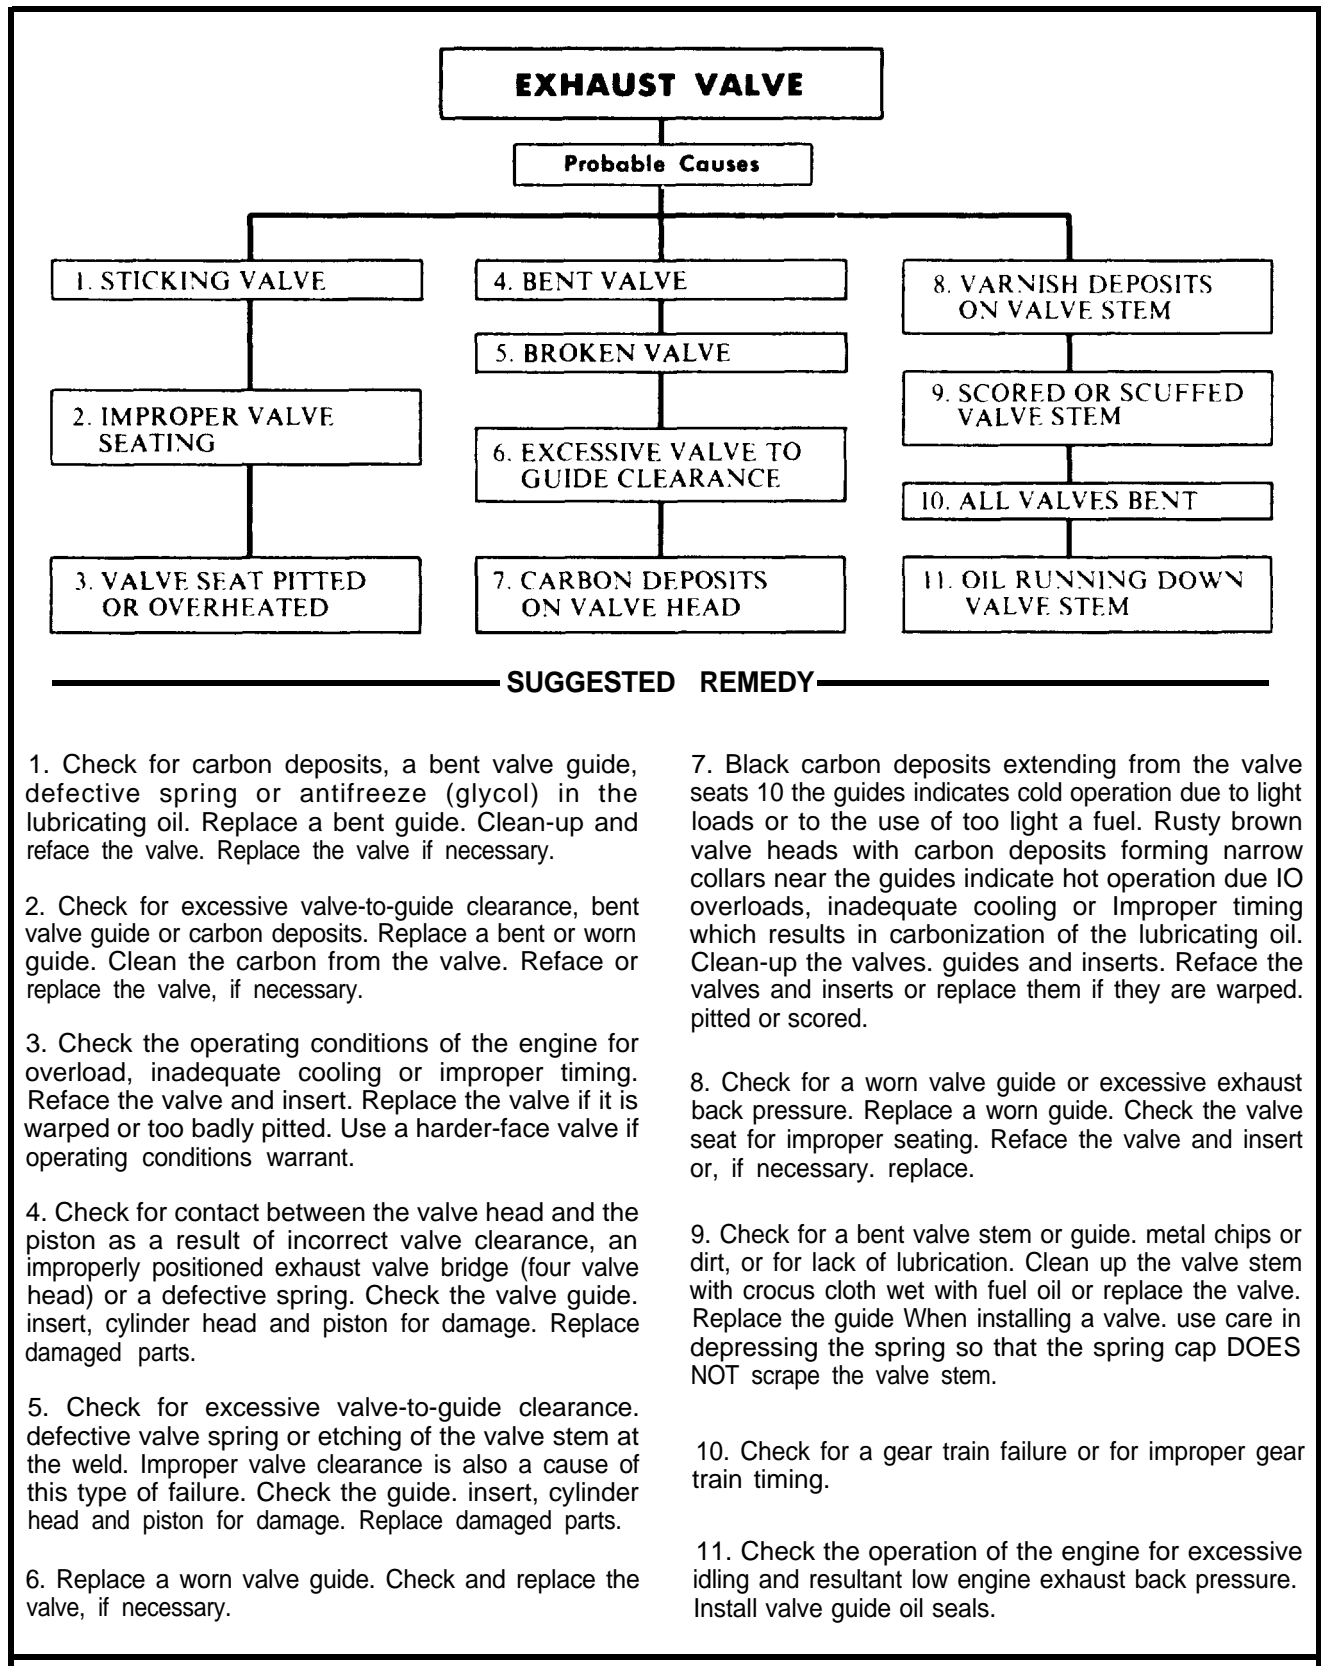

**SPECIFICATIONS**

Specifications clearances and wear limits are listed below. It should be specifically noted that the clearances apply only when all new parts are used at the point where the various specifications apply. This also applies to references within the text of the manual. The column entitled "Limits" in this chart lists the amount of wear or increase in clearance which

can be tolerated in used engine parts and still ensure satisfactory performance. It should be emphasized that the figures given as "Limits" must be qualified by the judgement of personnel responsible for installing new parts. These wear limits are, in general, listed only for the parts more frequently replaced in engine overhaul work. For additional information, refer to the text.

**TABLE OF SPECIFICATIONS, NEW CLEARANCES AND WEAR LIMITS**

These limits also apply to oversize and undersize parts

ENGINE PARTS (Standard Size, New)	MINIMUM	MAXIMUM	LIMITS
Cylinder Block			
Block bore:			
Diameter (top) .....	4.5195"	4.5215"	4.5235"
Diameter (center) .....	4.4865"	4.4880"	4.4900"
Diameter (bottom) .....	4.3565"	4.3575"	4.3595"
Out-of-round .....		.0015"	.0020"
Taper .....		.0015"	.0020"
Cylinder liner counterbore:			
Diameter .....	4.8200"	4.8350"	
Depth .....	.3000"	.3020"	
Main bearing bore: .....			
Inside diameter (vertical axis, in-line engine) .....	3.2510"	3.2520"	
Top surface of block:			
Flatness--transverse (all) .....			.0030"
Flatness--longitudinal(3 cyl.) .....			.0060"
Depth of counterbores (top surface):			
Cylinder head seal strip groove .....	.0970"	.1070"	
Water holes .....	.1090"	.1150"	
Oil holes .....	.0920"	.0980"	
Cylinder Liner			
Outside diameter (upper seal ring surface) .....	4.4850"	4.4860"	
Outside diameter (lower seal ring surface) .....	4.3550"	4.3560"	
Inside diameter .....	3.8752"	3.8767"	
Out-of-round (inside diameter) .....		.0020"	.0030"
Taper (inside diameter) .....		.0010"	.0020"
Depth of flange BELOW block .....	.0465"	.0500"	.0500"
Variation in depth between adjacent liners .....		.0015"	.0015"

ENGINE PARTS (Standard Size, New)	MINIMUM	MAXIMUM	LIMITS
<b>Pistons and Rings</b>			
Piston:			
Diameter (at skirt):			
Non-turbocharged engines	3.8699 "	3.8721"	
Clearance--piston skirt-to-liner:			
Non-turbocharged engines	.0031"	.0068"	.0100"
Out-of-round		.0005"	
Taper		.0005"	
Inside diameter--piston pin bushing	1.3775"	1.3780"	
Compression rings:			
Gap (chrome ring)	.0200"	.0460"	.0600"
Gap (cast iron ring)	.0200"	.0360"	.0600"
Clearance--ring-to-groove:			
Top (No. 1)	.0030"	.0060"	.0120"
No. 2	.0070"	.0100"	.0140"
No. 3 and 4	.0050"	.0080"	.0130"
No. 3 and 4 (21:1 ratio piston)	.0045"	.0070"	.0120"
Oil control rings:			
Gap	.0100"	.0250"	.0440"
Clearance--ring-to-groove	.0015"	.0055"	.0080"
<b>Piston Pins</b>			
Diameter	1.3746"	1.3750"	
Clearance--pin-to-piston bushing	.0025"	.0034"	.0100"
Clearance--pin-to-corm: rod bushing	.0010"	.0019"	.0100"
<b>Connecting Rod</b>			
Length-center-to-center	8.7990"	8.8010"	
Inside diameter (upper bushing)	1.3760"	1.3765"	
Normal side clearance (in-line engine)	.0060"	.0120"	
<b>Crankshaft</b>			
Journal diameter--main bearinn (in-line engine)	2.9990"	3.0000"	
Journal diameter..conn. rod bearing (in-line engine)	2.4990"	2.5000"	
Journal out-of-round		.00025"	
Journal taper		.0005"	.0030"
§Runout on journals-total indicator reading:			
3 cyl. In-line engine		.0020"	

§Runout tolerance given for guidance when regrinding crankshaft.

Crankshaft for 3-53 supported on No. 1 and No. 4 journals; runout measured at No. 2 and No. 3 journals.

When the runout on adjacent journals is in opposite direction, the sum must not exceed .003" total indicator reading. When in the same direction, the difference must not exceed .003" total indicator reading. When high spots of runout on adjacent journals are at right angles to each other, the sum must not exceed .004" total indicator reading. or .002" on each journal.

ENGINE PARTS (Standard Size, New)	MINIMUM	MAXIMUM	LIMITS
Thrust washer thickness	.1190"	.1220"	
End play (end thrust clearance)	.0040"	.0110"	.0180"
<b>Connecting Rod Bearing</b>			
Inside diameter (vertical axis, in-line engine)	2.5015"	2.5035"	
Bearing-to-journal clearance (in-line engine)	.0015"	.0045"	.0060"
Bearing thickness 90° from parting line (in-line)	.1245"	.1250"	.1230"
<b>Main Bearings</b>			
Inside diameter (vertical axis, in-line engine)	3.0020"	3.0030"	
Bearing-to-journal clearance (in-line engine)	.0010"	.0040"	.0060"
Bearing thickness 90° from parting line (in-line)	.1245"	.1250"	.1230"
<b>Camshaft</b>			
Diameter (at bearing journals)	2.1820"	2.1825"	
Runout at center bearing (when mounted on end bearings)		.0020"	
End thrust	.0050"	.0150"	.0190"
Thrust washer thickness	.2080"	.2100"	
<b>Balance Shaft</b>			
Diameter (at bearing journals)	2.1820"	2.1825"	
End thrust	.0050"	.0150"	.0190"
Thrust washer thickness	.2080"	.2100"	
<b>Camshaft and Balance Shaft Bearings</b>			
Inside diameter	2.1870"	2.1880"	
Clearance--bearing-to-shaft	.0045"	.0060"	.0080"
<b>Camshaft and Balance Shaft Gears</b>			
Backlash	.0030"	.0050"	.0070"
<b>Idler Gear (In-line Engines)</b>			
Backlash	.0030"	.0050"	.0070"
Idler gear bearing inside diameter	2.1860"	2.1870"	
Idler gear hub outside diameter	2.1825"	2.1835"	
Clearance--bearing.to-hub	.0025"	.0045"	.0070"
End play	.0060"	.0130"	.0170"
Thrust washer thickness	.1180"	.1200"	
<b>Crankshaft Timing Gear</b>			
Backlash	.0030"	.0050"	.0070"
Inside diameter (gear)	4.0580"	4.0590"	
Outside diameter (crankshaft)	4.0600"	4.0610"	

ENGINE PARTS (Standard Size, New)	MINIMUM	MAXIMUM	LIMITS
<b>Blower Drive Gear</b>			
Backlash .....	.0030"	.0050"	.0070"
End play (blower drive gear shaft) .....	.0040"	.0060"	
<b>Governor Drive Gear</b>			
Backlash .....	.0030"	.0050"	.0070"
<b>Cylinder Head</b>			
Cam follower bore (current) .....	1.0626"	1.0636"	
Cam follower bore (former) ..	1.0620"	1.0630"	
Exhaust valve insert counterbore:			
Diameter (4.valve head) .....	1.1590"	1.1600"	
<b>Exhaust Valve Seat Inserts</b>			
Outside diameter (4.valve) .....	1.1605"	1.1615"	
Seat width,.....	.0468"	.0781"	.0781"
Valve seat runout .....		.0020"	.0020"
<b>Exhaust Valves</b>			
Stem diameter (current 4valve) .....	.2480"	.2488"	
Stem diameter (former 4-valve) .....	.2475"	.2485"	
Valve head-to-cylinder head:			
Current 4-valve head .....	flush	.024" recess.	.039" recess.
Former 4-valve head .....	.006" protr.	.018" recess.	.033" recess.
<b>Valve Guides</b>			
Distance below top of head (plain guide) .....	.0100"	.0400"	
Distance below top of head (machined for seal) .....	.1900"	.2200"	
Diameter--inside (4-valve) .....	.2505"	.2515"	
Clearance--Valve-to-guide (current 4.valve) .....	.0017"	.0035"	.0050"
Clearance--Valve-to-guide (former 4valve) .....	.0020"	.0040"	.0050"
<b>Rocker Arms and Shafts</b>			
Diameter--rocker shaft .....	.8735"	.8740"	
Diameter--inside (rocker arm bushing) .....	.8750"	.8760"	
Diameter--inside (valve rocker arm bore) .....	.8753"	.8763"	
Clearance--shaft-to-injector rocker bushing. ....	.0010"	.0025"	.0040"
Clearance--shaft-to-valve raker bore .....	.0013"	.0028"	.0040"
<b>Cam Followers</b>			
Diameter .....	1.0600"	1.0610"	
Clearance--follower-to-current head .....	.0016"	.0036"	.0060"
Clearance--follower-to-former head .....	.0010"	.0030"	.0060"
Rollers and pins:			
Clearance--pin-to-bushing .....	.0013"	.0021"	.010" Horiz.
Side clearance--roller-to.follower .....	.0150"	.0230"	.0230"



## STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

THREAD SIZE	TORQUE (lb.ft)	THREAD SIZE	TORQUE (lb-ft)
1/4 -20	7-9	9/16-12	90-100
1/4 -28	8-10	9/16-18	107-117
5/16-18	13-17	5/8 -11	137-147
5/16-24	15-19	5/8 -18	168-178
3/8 -16	30-35	3/4 -10	240-250
3/8 -24	35-39	3/4 -16	290-300
7/16.14	46.50	7/8 -9	410-420
7/16.20	57-61	7/8 -14	475-485
1/2 -13	71-75	1 -8	580-590
1/2 -20	83-93	1 -14	685-695

## EXCEPTIONS TO STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

APPLICATION	THREAD SIZE	TORQUE (lb-ft)
Injector control shaft bracket bolts	1/4 -20	10-12
Cam follower guide bolts	1/4 -20	12-15
Governor to flywheel housing bolts	5/16-18	10-12
Idler gear hub and spacer bolts	5/16-18	19-23
Oil pan bolts	5/16-18	10-12
Idler gear hub and spacer bolts	3/8 -16	40-45
Injector clamp bolts	3/8 -16	20-25
Air box cover bolts (in-line engine)	3/8 -16	12-16
Flywheel housing bolts	3/8 -16	25-30
Flywheel housing bolts	3/8 -24	25-30
Connecting rod nuts (in-line engine)	3/8 -24	40-45
Fuel line nuts	3/8 -24	12-15
Fuel connector	3/8 -24	20-28
Rocker arm bracket bolts	7/16.14	50-55
*Flywheel bolts	1/2 -20	110-120
*Main bearing cap bolts	9/16-12	120-130
*Cylinder head bolts	5/8 -11	170-180
Flange mounted air compressor drive shaft nut	3/4 -10	§
Crankshaft end bolt (in-line engine)	3/4 -16	.290-300
Air compressor drive pulley nut	3/4 -16	80-100
Crankshaft end bolt (engines with cone mounted pulley stamped with letter "A")	-14	200-220
Camshaft and balance shaft nut	1.1/8 -18	.300-325

\*Lubricate at assembly with international Compound No. 2. or equivalent (refer to Parts Catalog or Microfiche. Section 12.8000A) §100 lb.ft plus increase torque to line-up cotter pin.

## STANDARD PIPE PLUG TORQUE SPECIFICATIONS

Use sealing compound on plugs without gaskets or Teflon. These specifications apply to plugs installed below the surface of the part of which they are a component.

THREAD SIZE	TORQUE (lb-ft)	THREAD SIZE	TORQUE (lb-ft)
1/8	10-12	3/4	33-37
1/4	14-16	1	75-85
3/8	18-22	1-1/4	95-105
1/2	23-27	1-1/2	110-130

## SERVICE TOOLS

TOOL NAME	TOOL NO.
<b>Cylinder Block</b>	
Bore gage	J 5347
Dial bore gage master setting fixture	J 23059
Dial indicator set	J 22273
Engine overhaul stand	J 6837-01
Adaptor plate (In-line)	J 7622
<b>Cylinder Head</b>	
Brush	J 8152
Cam follower holding fixture	J 5840
Cylinder head guides (set of 2)	J 9665
Cylinder head lifter	J 22062-01
Dial gage (4-valve head)	J 8165-2
Grinder (4 - valve head)	J 8165-1
Grinding wheel (15° 4 - valve head)	J 7792-2
Grinding wheel (30° 4 - valve head)	J 7792-3
Grinding wheel (60° 4 - valve head)	J 7792-4
Pilot (4 - valve head)	J 7792-1
Push rod remover (set of three)	J 3092-01
Socket	J 8932-01
Spring tester	J 9666
Valve guide cleaner (4 - valve head)	J 7793
Valve guide installer (15° 4 -valve head)	J 7832
Valve guide installer (45° 4 - valve head)	J 9729
Valve guide installer (guide used with oil seal - 4 valve head)	J 9730

TOOL NAME	TOOL NO.
Valve guide remover (4 valve head)	J 7775
Valve spring checking gage	WRE 500-60
Valve spring compressor (4 - valve head)	J 7455
Valve seat insert installer (4 valve head)	J 7790
Valve seat insert remover (4 valve head)	J 7774
Crankshaft	
Camshaft oil seal installer	J 21899
Crankshaft front oil seal Installer	J 22153
Crankshaft front oil seal sleeve installer (in-line)	J 22524
Crankshaft pulley installer	J 7773
Crankshaft pulley remover	J 5356
Crankshaft rear oil seal (O.S.) expander	J 21278
Crankshaft rear oil seal sleeve installer	J 21277
Handle	J 3154-1
Micrometer ball attachment	J 4757'
Oil seal expander	J 9769
Oil seal expander (in-line)	J 7454
Oil seal installer	J 9479
Installer (part of J 9479)	J 9479-1
Stud (2) (part of J 9479)	J 9479-2
Oil seal installer	J 9727
Oil seal installer	J 9783
Puller	J 4794-01
Flywheel	
Flywheel lifting tool	J 6361-01
Flywheel Housing	
Crankshaft rear oil seal expander (O.S. seal)	J 21278
Crankshaft rear oil seal expander (Std. size seal)	J 9769
Dial indicator	J 8001-3
Dial indicator post	J 9748
Flywheel housing aligning studs (set of 2)	J 7540
Flywheel housing concentricity gage	J 9737

TOOL NAME	TOOL NO.
Piston, Connecting Rod and Cylinder Liner	
Adaptor sleeve .....	J 7608-5
Bore gage .....	J 5347
Connecting rod bushing reamer .....	J 4971-4
Connecting rod bushing reamer set .....	J 7608.01
Connecting rod holder .....	J 7632
Cylinder hone set (2 1/2" to 5 3/4" range) .....	J 5902-01
Cylinder liner remover set .....	J 22490
Dial bore gage master setting fixture .....	J 23059
Dial indicator set .....	J 22273
Driver handle .....	J 1513.2
Feeler gage pack (part of J 5438) .....	J 3174-01
Fixture and arbor assembly .....	J 7608-4
Guide .....	J 1686-5
Guide .....	J 4970-5
Guide .....	J 4971-6
Hold down clamp .....	J 21793
Master ring - cylinder liner .....	J 8385
Micrometer ball attachment .....	J 4757
Piston and connecting rod bushing installer and remover set .....	J 1513.02
Piston bushing reamer .....	J 4970-4
Piston bushing reaming fixture .....	J 5273
Piston bushing spacer .....	J 7587-1
Piston holding fixture .....	J 1513-1
Piston pin bushing installer .....	J 4972.2
Piston pin bushing remover .....	J 4972-4
Piston pin retainer installer .....	J 23762
Piston ring compressor .....	J 6883
Piston ring remover and installer .....	J 8128
Piston-to-liner feeler gage set .....	J 5438
Spacer .....	J 7608-3
Spray nozzle remover .....	J 8995
Spring scale (part of J 5438) .....	J 8129
Stone (120 grit) .....	J 5902-14
Camshaft	
Adaptor .....	J 8183
Bar type puller .....	J 4871
Camshaft and balance shaft bearing remover and installer set .....	J 7593-03
Camshaft cup plug installer .....	J 24094
Camshaft oil seal installer .....	J 21899
Crankshaft timing gear installer .....	J 7557
Installer .....	J 9790
Slide hammer .....	J 6471-1
Spring scale .....	J 8129



**SECTION 2**  
**FUEL SYSTEM AND GOVERNORS**  
**CONTENTS**

Fuel System .....	2
Fuel Injector (Needle Valve) .....	2.1.1
Fuel Injector tube .....	2.1.4
Fuel Pump .....	2.2
Fuel Pump Drive .....	2.2.1
Fuel Strainer and Fuel Filter .....	2.3
Mechanical Governors .....	2.7
Limiting Speed Mechanical Governor (In-Line. Engine) .....	2.7.1
Shop Notes - Trouble Shooting - Specifications - Service Tools .....	2.0

**FUEL SYSTEM**

The fuel system (Fig. 1) includes the fuel injectors, fuel pipes (inlet and outlet), fuel manifolds (integral with the cylinder head), fuel pump, fuel strainer, fuel filter and fuel lines.

Fuel is drawn from the supply tank through the fuel strainer and enters the fuel pump at the inlet side. Leaving the pump under pressure, the fuel is forced through the fuel filter and into the inlet fuel manifold, then through fuel pipes into the inlet side of each injector.

The fuel manifolds are identified by the words IN (top

passage) and OUT (bottom passage) which are cast in several places in the side of the cylinder head. This aids installation of the fuel lines.

Surplus fuel returns from the outlet side of the injectors to the fuel return manifold and then back to the supply tank.

All engines are equipped with a restrictive fitting in the fuel outlet manifold to maintain the fuel system pressure.

Refer to Section 13.2 for the size fitting required.

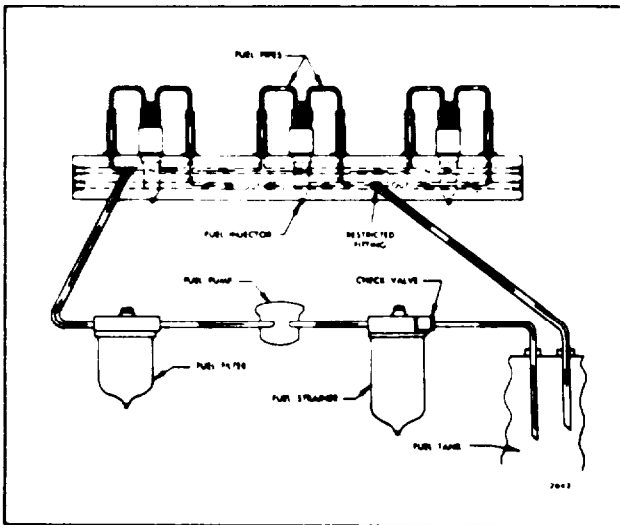


Fig. 1 Typical Fuel System for In-Line Engines

A check valve may be installed in the supply line between the fuel tank and the fuel strainer to prevent fuel from draining back when the engine is shut down.

## FUEL INJECTOR (NEEDLE VALVE)

The fuel injector (Figs. 1 and 2) is a lightweight compact unit which enables quick, easy starting directly on diesel fuel and permits the use of a simple open type combustion chamber. The simplicity of design and operation provides for simplified controls and easy adjustment. No high pressure fuel lines or complicated air-fuel mixing or vaporizing devices are required.

The fuel injector performs four functions:

1. Creates the high fuel pressure required for efficient injection.
2. Meters and injects the exact amount of fuel required to handle the load.
3. Atomizes the fuel for mixing with the air in the combustion chamber.
4. Permits continuous fuel flow.

Combustion required for satisfactory engine operation is obtained by injecting, under pressure, a small quantity of accurately metered and finely atomized fuel oil into the cylinder.

Metering of the fuel is accomplished by an upper and lower helix machined in the lower end of the injector plunger. Figure 3 illustrates the fuel metering from no-load to full-load by rotation of the plunger in the bushing

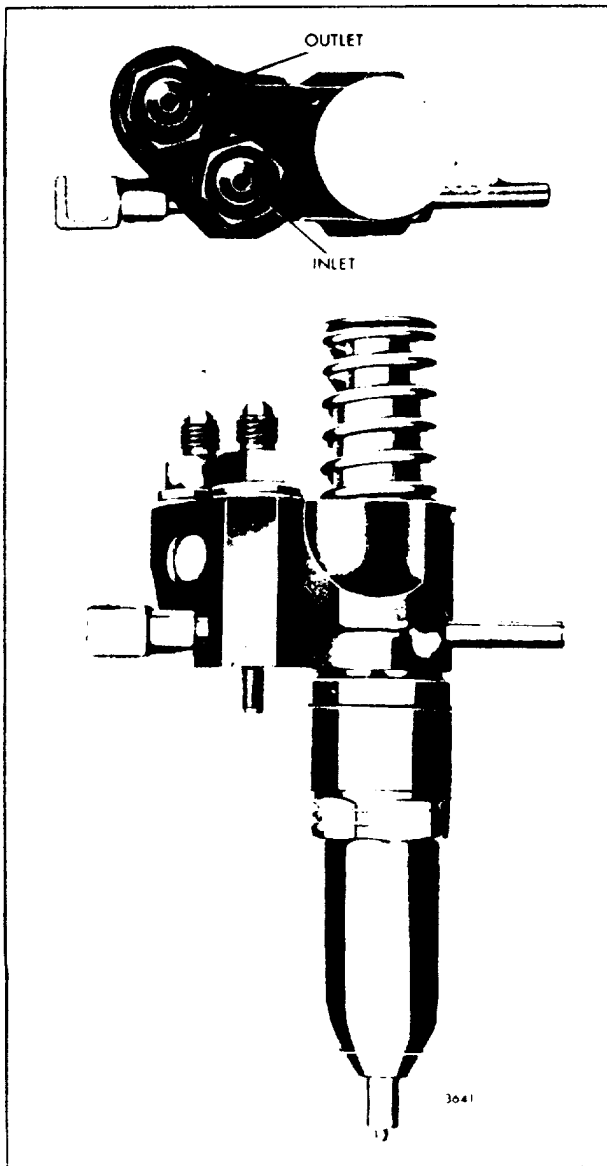


Fig. 1 Fuel Injector Assembly

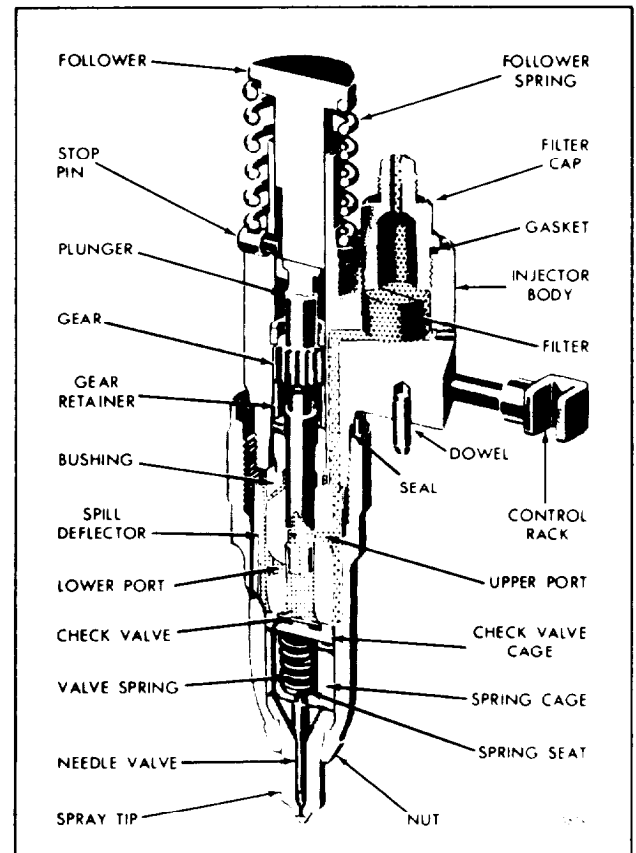


Fig. 2- Cutaway View of Fuel Injector



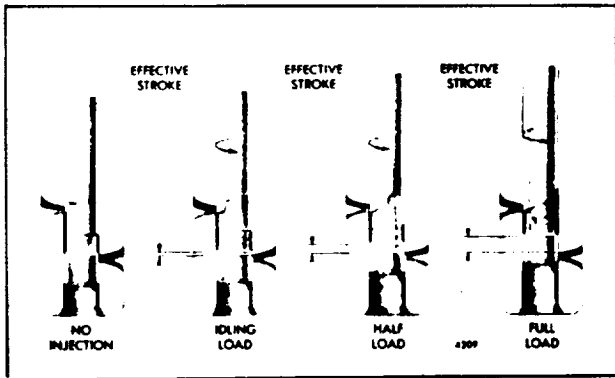


Fig. 3. Fuel Metering from No-Load to Full Load

Figure 4 illustrates the phases of injector operation by the vertical travel of the injector plunger.

The continuous fuel flow through the injector serves, in addition to preventing air pockets in the fuel system, as a coolant for those injector parts subjected to high combustion temperatures.

To vary the power output of the engine, injectors having different fuel output capacities are used. The fuel output of the various injectors is governed by the helix angle of the plunger and the type of spray tip used. Refer to Fig. 5 for the identification of the injectors and their respective plungers and spray tips.

Since the helix angle on the plunger determines the output and operating characteristics of a particular type of injector, it is imperative that the correct injectors are used for each engine application. If injectors of different types are mixed, erratic operation will result and may cause serious damage to the engine or to the equipment which it powers.

CAUTION: Do not intermix the needle valve

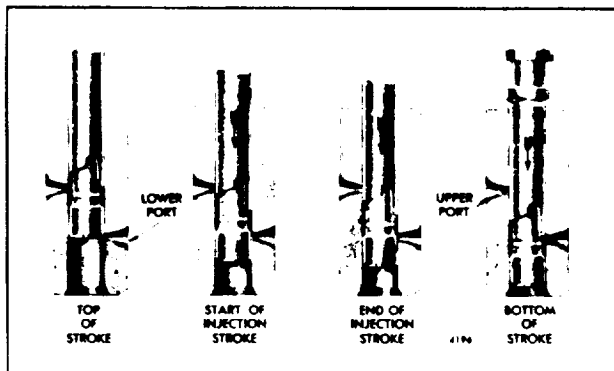



Fig. 4. Phases of Injector Operation Through Vertical Travel of Plunger

injectors with the other types of injectors in an engine.

Each fuel injector has a circular disc pressed into a recess at the front side of the injector body for identification purposes (Fig. 5). The identification tag indicates the nominal output of the injector in cubic millimeters.

Each injector control rack (Fig. 2) is actuated by a lever on the injector control tube which, in turn, is connected to the governor by means of a fuel rod. These levers can be adjusted independently on the control tube, thus permitting a uniform setting of all injector racks.

The fuel injector combines in a single unit all of the parts necessary to provide complete and independent fuel injection at each cylinder.

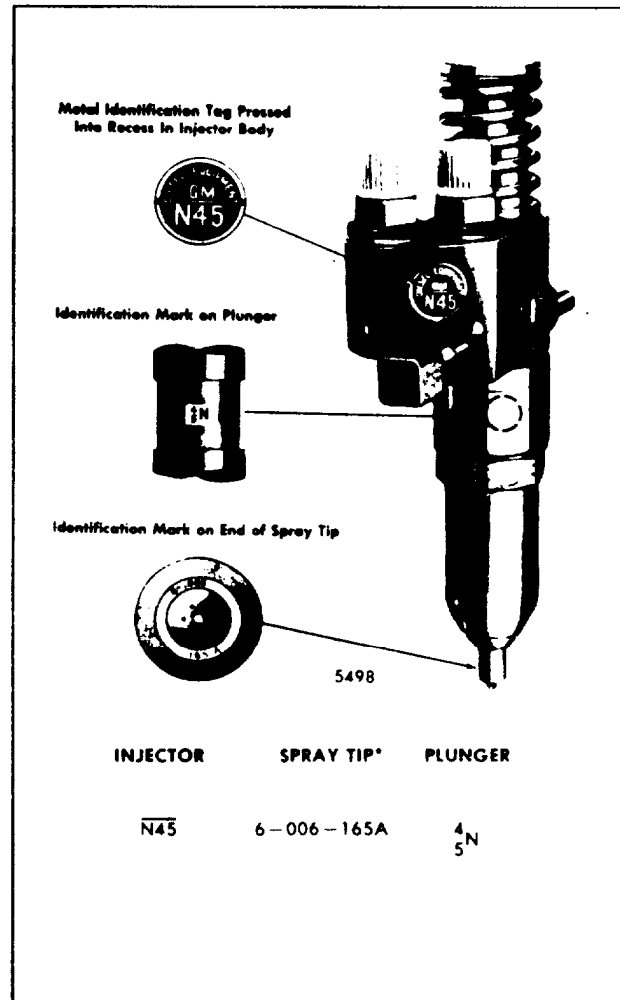

### Operation

Fuel, under pressure, enters the injector at the inlet side through a filter cap and filter (Fig. 2). From the tiller, the fuel passes through a drilled passage into the supply chamber, that area between the plunger bushing and the spill deflector, in addition to that area under the injector plunger within the bushing. The plunger operates up and down in the bushing, the bore of which is open to the fuel supply in the annular chamber by two funnel-shaped ports in the plunger bushing.

The motion of the injector rocker arm is transmitted to the plunger by the follower which bears against the follower spring (Fig. 6). In addition to the reciprocating motion, the plunger can be rotated, during operation, around its axis by the gear which meshes with the control rack. For metering the fuel, an upper helix and a lower helix are machined in the lower part of the plunger. The relation of the helices to the two ports changes with the rotation of the plunger.

As the plunger moves downward, under pressure of the injector rocker arm, a portion of that fuel trapped under the plunger is displaced into the supply chamber

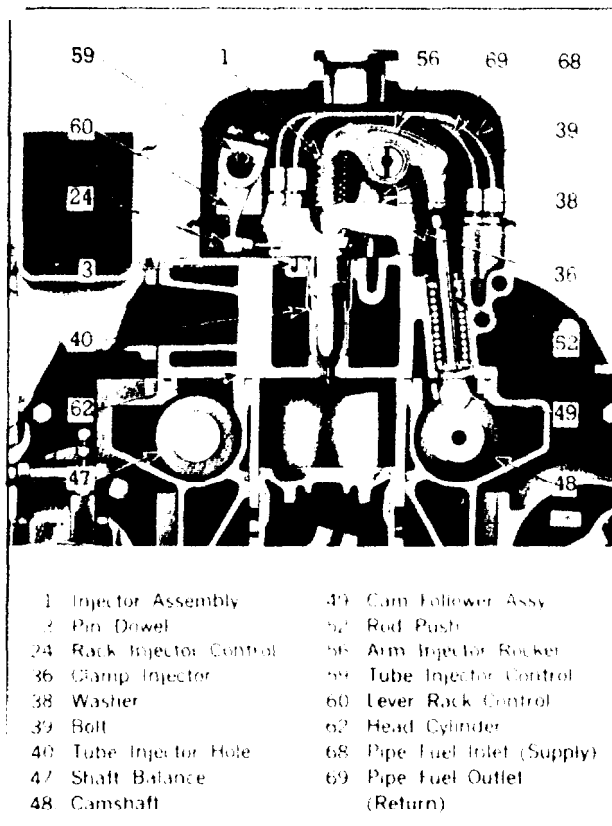


Fig. 6 - Fuel Injector Mounting

through the lower port until the port is closed off by the lower end of the plunger. A portion of the fuel trapped below the plunger is then forced up through a central passage in the plunger into the fuel metering recess and into the supply chamber through the upper port until that port is closed off by the upper helix of the plunger. With the upper and lower ports' both closed off, the remaining fuel under the plunger is subjected to increased pressure by the continued downward movement of the plunger.

When sufficient pressure is built up, it opens the flat, non-return check valve. The fuel in the check valve cage, spring cage, tip passages and tip fuel cavity is compressed until the pressure force acting upward on the needle valve is sufficient to open the valve against the downward force of the valve spring. As soon as the needle valve lifts off of its seat, the fuel is forced through the small orifices in the spray tip and atomized into the combustion chamber.

When the lower land of the plunger uncovers the lower port in the bushing, the fuel pressure below the plunger is relieved and the valve spring closes the needle valve, ending injection.

A pressure relief passage has been provided+ in the spring cage to permit bleed-off of fuel leaking past the needle pilot in the tip assembly.

A check valve, directly below the bushing, prevents leakage from the combustion chamber into the fuel

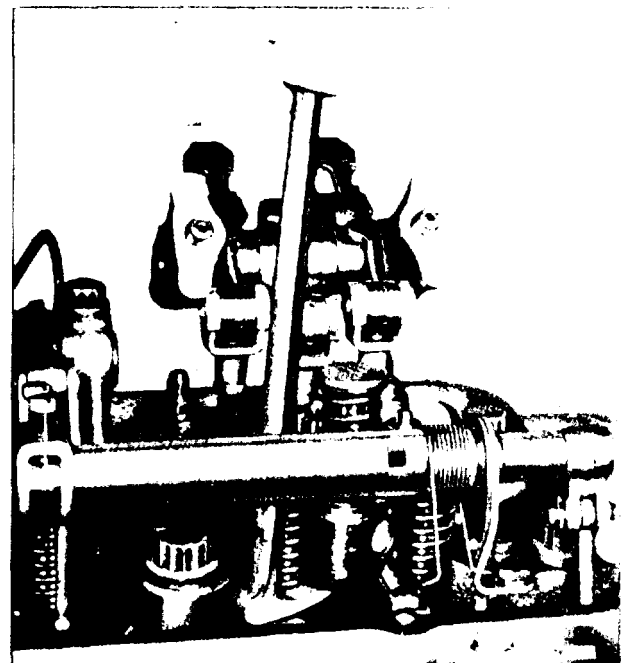


Fig. 7- Removing Injector from Cylinder Head

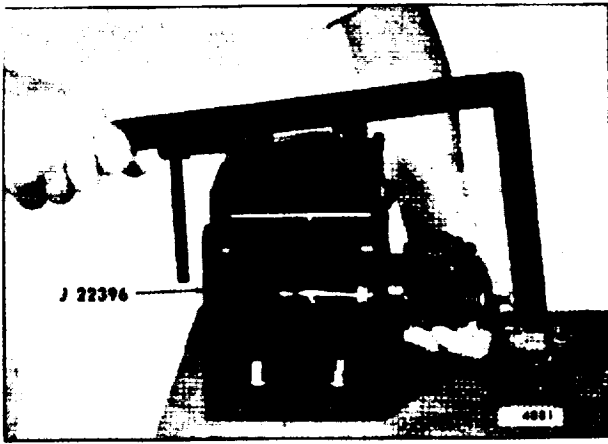


Fig. 8 Checking Rack and Plunger for Free Movement

injector in case the valve is accidentally held open by a small particle of dirt. The injector plunger is then returned to its original position by the injector follower spring. Figure 4 shows the various phases of injector operation by the vertical travel of the injector plunger.

On the return upward movement of the plunger, the high pressure cylinder within the bushing is again filled with fuel oil through the ports. The constant circulation of fresh cool fuel through the injector renews the fuel supply in the chamber, helps cool the injector and also effectively removes all traces of air which might otherwise accumulate in the system and interfere with accurate metering of the fuel.

The fuel injector outlet opening, through which the excess fuel oil returns to the fuel return manifold and then back to the fuel tank is directly adjacent to the inlet opening.

Changing the position of the helices by rotating the plunger, retards or advances the closing of the ports and the beginning and ending of the injection period. At the same time, it increases or decreases the amount of fuel injected into the cylinder. Figure 3 shows the various plunger positions - from no-load to full-load. With the control rack pulled out all the way (no injection), the upper port is not closed by the helix until after the lower port is uncovered. Consequently, with the rack in this position, all of the fuel is forced back into the supply chamber and no injection of fuel takes place. With the control rack pushed all the way in (full injection), the upper port is closed shortly after the lower port has been covered, thus producing a maximum effective stroke and maximum injection. From this no injection position to full injection position (full rack movement), the contour of the

upper helix advances the closing of the ports and the beginning of injection.

#### General Instructions for Injector Care and Overhaul

The fuel injector is one of the most important and precisely built parts of the engine. The injection of the correct amount of fuel into the combustion chamber at exactly the right time depends upon this unit. Because the injector operates against high compression pressure in the combustion chamber, efficient operation demands that the injector assembly is maintained in first-class condition at all times. Proper maintenance of the fuel system and the use of the recommended type fuel filters and clean water-free fuel are the keys to trouble-free operation of the injectors.

Due to the close tolerances of various injector parts, extreme cleanliness and strict adherence to service instructions is required.

Perform all injector repairs in a clean, well lighted room with a dust free atmosphere. An ideal injector room is slightly pressurized by means of an electric fan which draws air into the room through a filter. This pressure prevents particles of dirt and dust from entering the room through the door and windows. A suitable air outlet will remove solvent fumes along with the outgoing air. Also provide a source for 110 volt alternating current electric power.

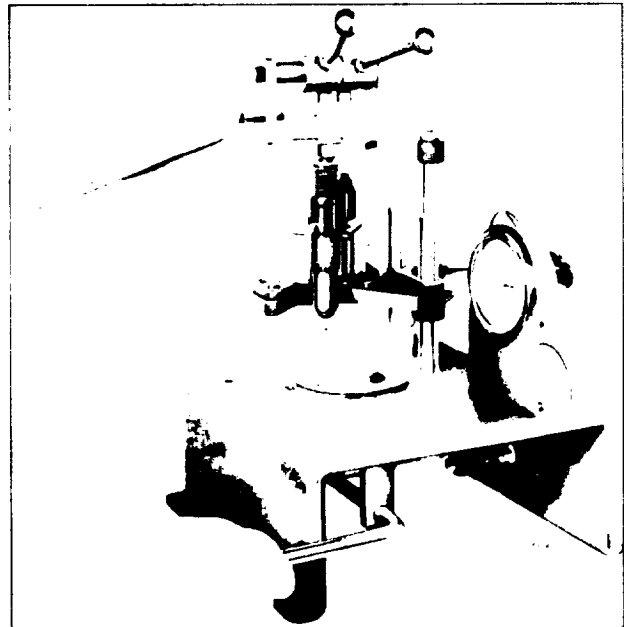


Fig. 9 Injector High Pressure Test

Provide the injector repair room with a supply of filtered, moisture-proof compressed air for drying the injector parts after they have been cleaned. Use wash pans of rust-proof material and deep enough to permit all of the injector parts to be completely covered by the cleaning agent, usually clean fuel oil, when submerged in wire baskets of 16 mesh wire screen. Use baskets which will support the parts so as to avoid contact with the dirt which settles at the bottom of the pans.

Rags should never be used for cleaning injector parts since lint or other particles will clog parts of the injector when it is assembled. A lint-free cleaning tissue is a good, inexpensive material for wiping injector parts.

When servicing an injector, follow the general instructions outlined below:

1. Whenever the fuel pipes are removed from an injector, cover the filter caps with shipping caps to keep dirt out of the injectors. Also protect the fuel pipes and fuel connectors from the entry of dirt or other foreign material.

2. After an injector has been operated in an engine, do not remove the filter caps or filters while the injector is in the engine. Replace the filters only at the time of complete disassembly and assembly of an injector.

**NOTE:** In the offset injector, a filter is used in

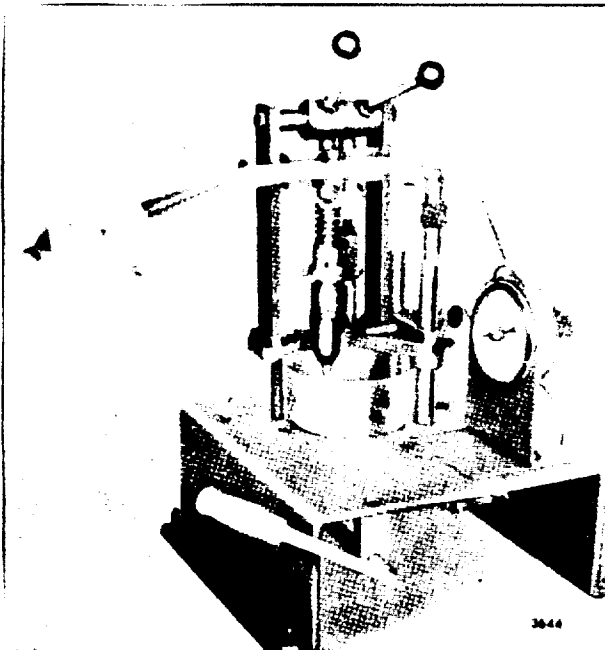


Fig. 10. Spray Pattern Test

the inlet side only. No filter is required on the outlet side (Fig. 34).

3. Whenever an injector has been removed and reinstalled or replaced in an engine, make the following adjustments as outlined in Section 14:

- a. Time the injector.
- b. Position the injector control rack.

4. Whenever an engine is to be out of service for an extended period, purge the fuel system, then fill it with a good grade of rust preventive (refer IO Section 15.3).

5. When a reconditioned injector is to be placed in stock, fill it with injector test oil J 8130. *Do not use fuel oil.* Install shipping caps on both filter caps immediately after filling. Store the injector in an upright position to prevent test oil leakage.

**NOTE:** Make sure that new filters have been installed in a reconditioned injector which is to be placed in stock. This precaution will prevent dirt particles from entering the injector due to a possible reversal of fuel flow when installing the injector in an engine other than the original unit.

### Remove Injector

1. Clean and remove the valve rocker cover.
2. Remove the fuel pipes from both the injector and the fuel connectors (Fig. 6).

**NOTE:** Immediately after removal of the fuel pipes' from an injector, cover the filter caps with shipping caps to prevent dirt from entering the injector. Also protect the fuel pipes and fuel

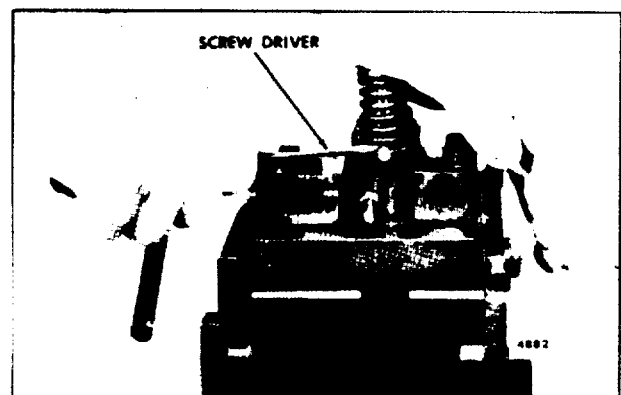


Fig. 11. Removing Injector Follower Stop Pin

connectors from entry of dirt or foreign material.

3. Crank the engine to bring the outer ends of the push rods of the injector and valve rocker arms in line horizontally.
4. Remove the two rocker shaft bracket bolts and swing the rocker arms away from the injector and valves (Fig. 7).
5. Remove the injector clamp bolt, special washer and clamp.
6. Loosen the inner and outer adjusting screws on the injector rack control lever and slide the lever away from the injector.
7. Lift the injector from its seat in the cylinder head (Fig. 7).
8. Cover the injector hole in the cylinder head to keep foreign material out.
9. Clean the exterior of the injector with clean fuel oil and dry it with compressed air.

### Test Injector

If inspection does not reveal any external damage, then perform a series of tests to determine the condition of the injector to avoid unnecessary overhauling.

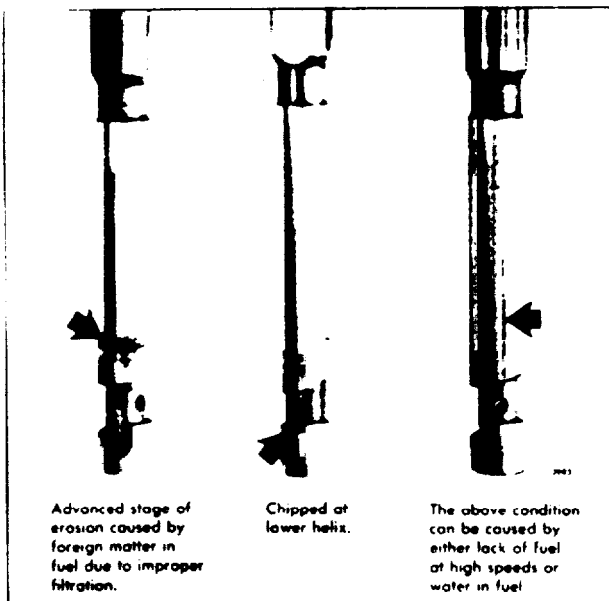


Fig. 12. Unusable Injector Plungers

An injector that passes all of the tests outlined below may be considered to be satisfactory for service without disassembly, except for the visual check of the plunger.

However, an injector that fails to pass one or more of the tests is unsatisfactory. Perform all of the tests before disassembling an injector to correct any one condition.

Identify each injector and record the pressure drop and fuel output as indicated by the following tests:

### INJECTOR CONTROL RACK AND PLUNGER MOVEMENT TEST

Place the injector in the injector fixture and rack freeness tester J 22396. Refer to Fig. 8 and place the handle on top of the injector follower.

If necessary, adjust the contact screw in the handle to ensure the contact screw is at the center of the follower when the follower spring is compressed.

With the injector control rack held in the no-fuel position, push the handle down and depress the follower to the bottom of its stroke. Then very slowly release the pressure on the handle while moving the control rack up and down as shown in Fig. 8 until the follower reaches the top of its travel. If the rack does

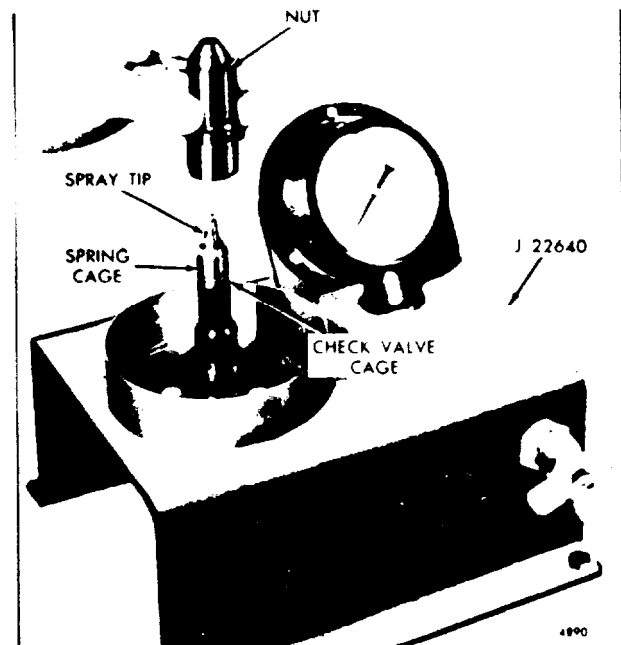


Fig. 13. Installing Injector Valve Parts on Auxiliary Tester J 22640

not fall freely, loosen the injector nut, turn the tip, then retighten the nut. Loosen and retighten the nut a couple of times if necessary. Generally this will free the rack. Then, if the rack isn't free, change the injector nut. In some cases it may be necessary to disassemble the injector to eliminate the cause of the misaligned parts.

### INJECTOR HIGH PRESSURE TEST

This test is performed to discover any fuel leaks at the injector filter cap gaskets, body plugs and nut seal ring.

The high pressure test also indicates whether or not the plunger and bushing clearance is satisfactory.

1. Install the injector in tester J 9787.

**CAUTION:** When testing an injector just removed from an engine, the flow of fuel through the injector on the tester should be the same as in the engine. Connections on the test head of the tester may be changed to obtain the correct direction of flow.

2. Thoroughly dry the injector with compressed air.
3. Check the fuel connections for leaks. If leaks have occurred, tighten the connections, dry the injector and recheck.
4. With the injector rack in the full-fuel position and the injector tester handle locked in position by means of the handle lock (Fig. 9), operate the pump handle to build up and maintain the pressure.

At this time, the condition of the plunger and bushing may be established. If there is excessive clearance between the plunger and bushing, pressure beyond the normal valve opening pressure cannot be obtained. Replacement of the plunger and bushing assembly is then required.

Pump up the injector, tester and maintain a pressure of 1600 to 2000 psi by actuating the pump handle. Then inspect for leaks at the injector filter cap gaskets, body plugs and injector nut seal ring. If any of these conditions exist, refer to Trouble Shooting Chart 5 in Section 2.0.

**NOTE:** It is normal for fuel to seep out around the rack due to high pressure fuel being applied to a normally low pressure area in the injector assembly. However, fuel droplets at the rack indicate excessive leakage.

**CAUTION:** Do not permit the pressure in the

injector tester to equal or exceed the capacity of the pressure gage.

### INJECTOR VALVE HOLDING PRESSURE TEST.

The injector valve holding pressure test will determine whether the various lapped surfaces in the injector are sealing properly.

Operate the pump handle to bring the pressure up to approximately 450 psi.

Close the fuel shut-off valve and note the pressure drop. The time for a pressure drop from 450 psi to 250 psi must not be less than 40 seconds. If the pressure drop is less than 40 seconds, check the injector as follows:

1. Thoroughly dry the injector with compressed air.
2. Open the tester fuel valve and operate the pump handle to maintain the test pressure.
3. A leak around the spray tip or seal ring usually is caused by a loose injector nut, a damaged seal ring or a brinelled surface on the injector nut or spray tip.
4. A leak at the filter cap indicates a loose filter cap or a damaged filter cap gasket.
5. A "dribble" at the spray tip orifices indicates a leaking valve assembly due to a damaged surface or dirt. Leakage at the tip will cause pre-ignition in the engine.

**NOTE:** A drop or two of fuel at the spray tip is only an indication of the fuel trapped in the spray tip at the beginning of the test and is not detrimental as long as the pressure drop specified is not less than 40 seconds.

### SPRAY PATTERN TEST

After completing the valve holding pressure test, open the fuel shut-off valve, place the injector rack in the full-fuel position and operate the injector several times in succession by operating the tester handle at approximately 40 strokes per minute as shown in Fig. 10. Observe the spray pattern to see that all spray orifices are open and injecting evenly. The beginning and ending of injection should be sharp and the fuel injected should be finely atomized.

If all of the spray tip orifices are not open and injecting evenly, clean them during injector overhaul. Also refer to *Trouble Shooting Chart 6* in Section 2.0.

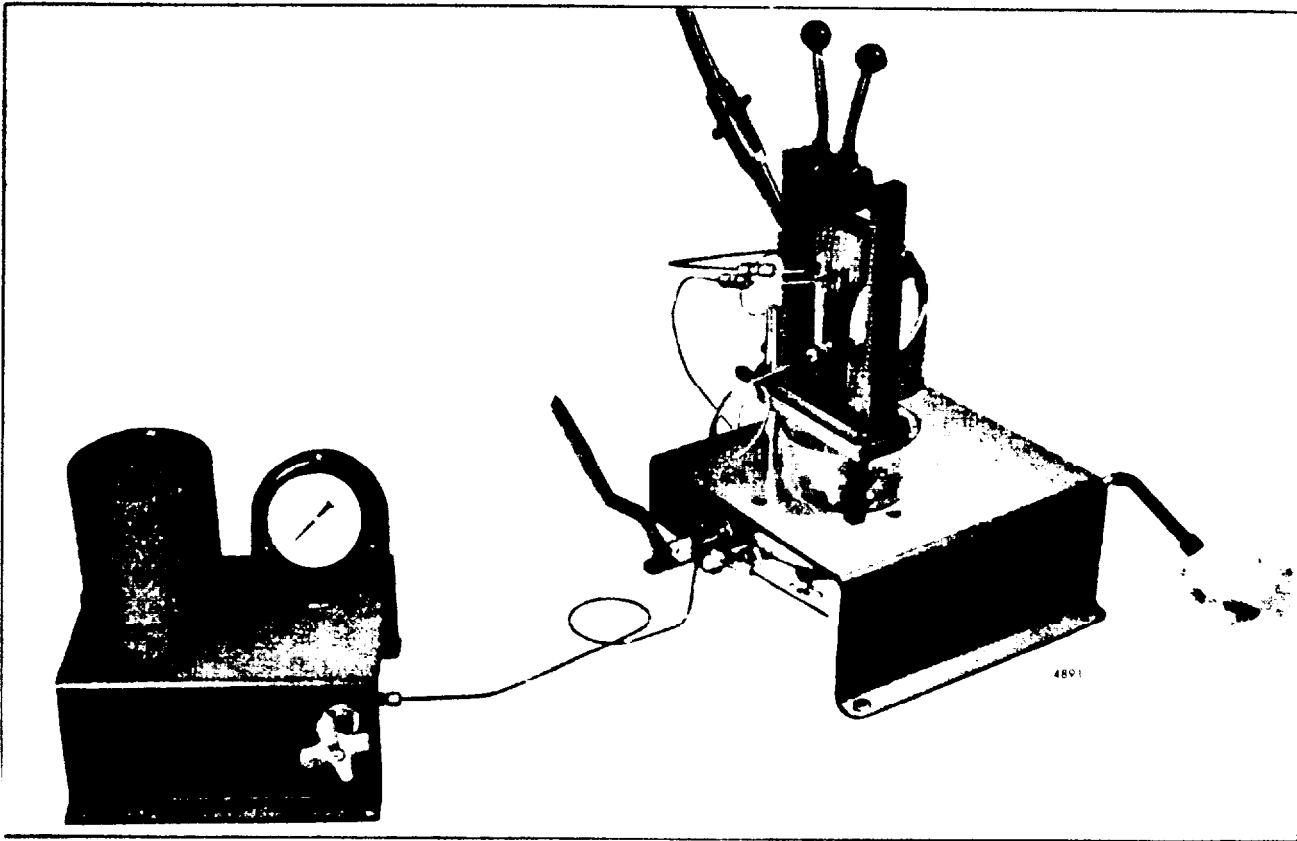


Fig. 14 Injector Needle Valve Test with Auxiliary Tester J 22640

**CAUTION:** To prevent damage to the pressure gage, do not exceed 100 psi during this test.

**VISUAL. INSPECTION OF PLUNGER**

An injector which passes all of the previous tests should have the plunger checked visually, under a magnifying glass, for excessive wear or a possible chip on the bottom helix. There is a small area on the bottom helix and lower portion of the upper helix, if chipped, that will not be indicated in any of the tests.

Remove the plunger from the injector as follows:

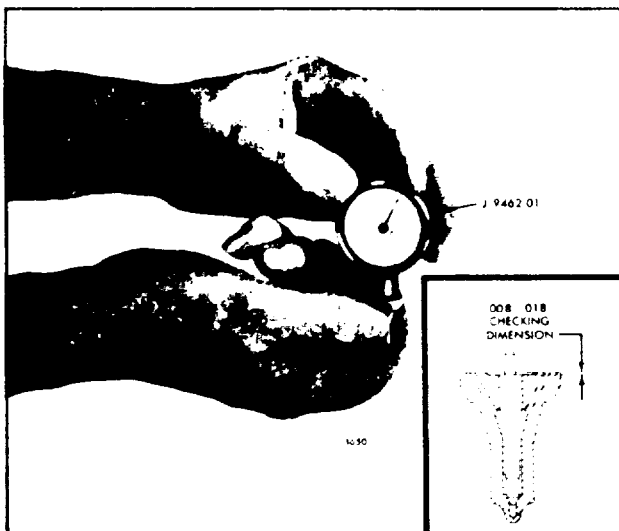


Fig. 15 Checking Needle Valve Lift

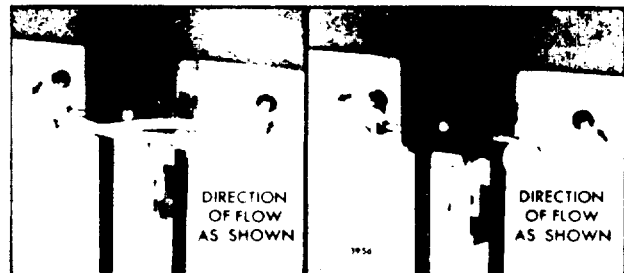


Fig. 16 Position of Fuel Flow Pipes in Comparator

1. Support the injector, right side up, in holding fixture J 22396.
2. Compress the follower spring. Then raise the spring above the stop pin with a screw driver and withdraw the pin (Fig. 11). Allow the spring to rise gradually.
3. Remove the injector from the holding fixture. Turn the injector upside down, to prevent the entry of dirt, and catch the spring and plunger as they drop out.
4. Inspect the plunger. If the plunger is chipped (Fig. 12), replace the plunger and bushing assembly
5. Reinstall the plunger, follower and spring.

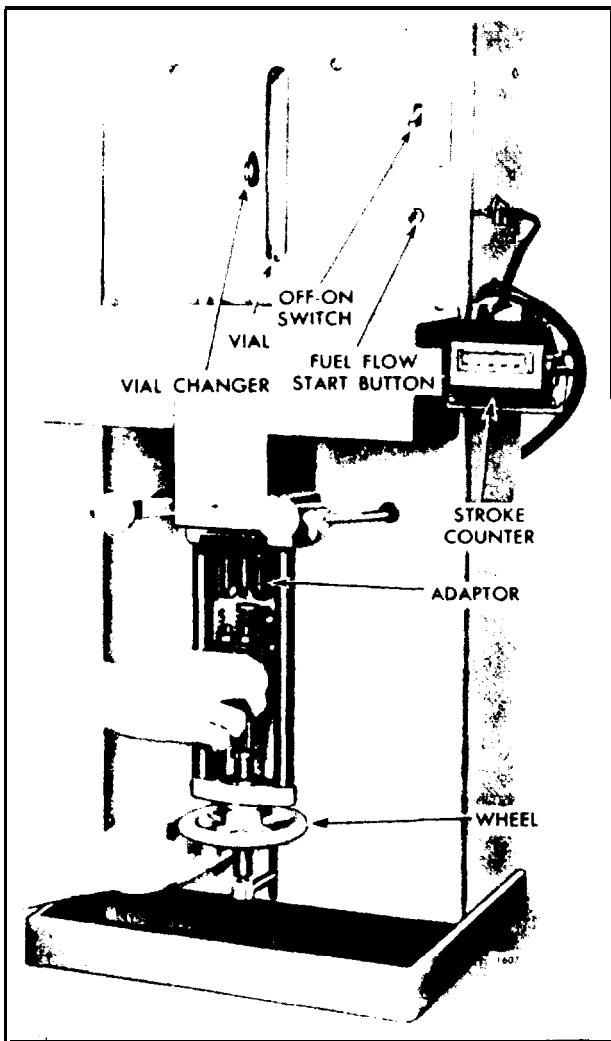


Fig. 17 - Placing Injector in Comparator  
J 7041

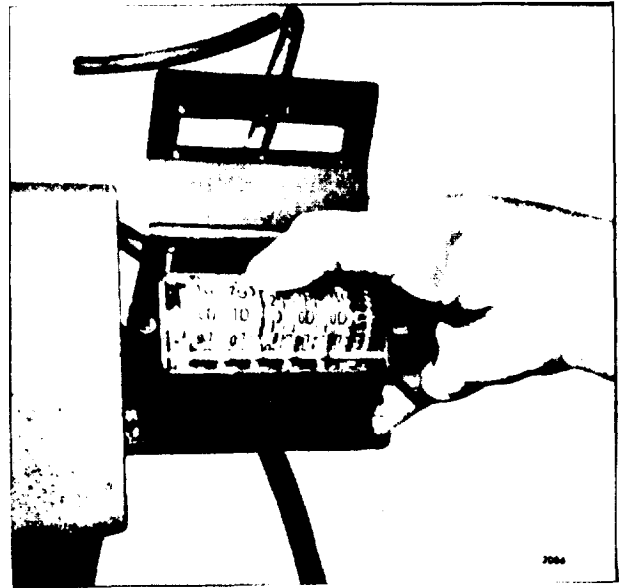


Fig. 18 - Setting Comparator Stroke Counter

#### NEEDLE VALVE TESTS

Remove the injector nut and remove all of the parts below the injector bushing as outlined under *Disassemble Injector*.

Clean all of the carbon off of the spray tip seat in the injector nut as outlined under *Clean Injector Parts*.

If the spray pattern test indicated that tip cleaning is necessary, clean the carbon from the tip cavity below the needle valve and orifices as outlined under *Clean Injector Parts*.

With the injector nut and spray tip cleaned, assemble the check valve, check valve cage, spring, spring seat, spring cage, needle valve and tip assembly on auxiliary tester J 22640 (Fig. 13). Carefully pilot the injector nut over the spray tip and valve parts and thread it on the body as shown in Fig. 13. Tighten the injector nut to 75-85 lb-ft torque.

Install the shield in the auxiliary tester as shown in Fig. 14 and operate the pump handle until the spray tip valve has opened several times to purge the air from the system.

Operate the pump handle with smooth even strokes (40 strokes per minute) and note the pressure at which the needle valve opens. The valve should open between 2300 and 3300 psi. The opening and closing action should be sharp and produce a finely atomized spray.

If the valve opening pressure is below 2300 psi and/or



atomization is poor, the cause usually is a worn or fatigued valve spring. Replace the spring.

If the valve opening pressure is within 2300-3300 psi. proceed to check for spray tip seat leakage. Actuate the pump handle several times, then hold the pressure at 1500 psi for 15 seconds. Inspect the spray tip seat for leakage. There should be no fuel droplets although a slight wetting of the end of the valve tip is permissible.

If the spray tip seat is satisfactory, proceed to check the hold time for a pressure drop of from 1500 to 1000 psi. The time should not be less than 5 seconds. If the valve pressure drops from 1500 to 1000 psi in less than 5 seconds, replace the needle valve and tip assembly.

If the needle valve assembly passes the above test, the needle valve lift check can be omitted. To check the needle valve lift, use tool J 9462-01 (Fig. 15) as follows:

1. Zero the indicator by placing the bottom surface of the plunger assembly on a flat surface and zero the indicator dial.
2. Place the spray tip and needle valve assembly tight against the bottom of the gage with the quill of the needle valve in the hole in the plunger.
3. While holding the spray tip and needle valve assembly tight against the gage, read the needle valve lift on the indicator. The lift should be .008 " to .018" if it exceeds .018". the tip assembly must be replaced. If it is less than .008", inspect for foreign material between the needle valve and the tip seat.
4. If the needle valve lift is within the limits, install a new needle valve spring and recheck the valve opening pressure and valve action. Low valve opening pressure or poor atomization with a new spring and seat indicates the spray tip and needle valve assembly must be replaced.

Injector	Calibrator J 22410		Comparator J 7041	
	Min.	Max.	Min.	Max.
N45	47	51	14	20

Fig. 19 - Fuel Output Check Chart

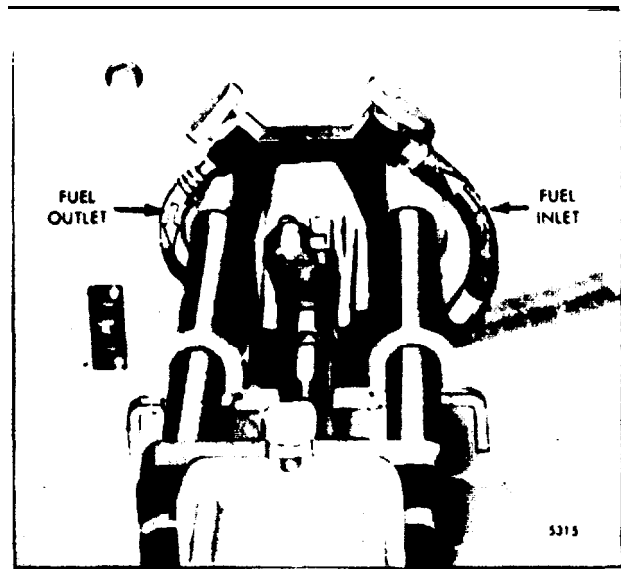


Fig. 20 Position of Calibrator Fuel Flow Pipes

Reassemble the injector is outlined under *Assemble Injector* and check it in the comparator or the calibrator.

**FUEL OUTPUT TEST**

The injector fuel output test can be performed in either the comparator J 7041 or the calibrator J 22410.

When injectors are removed from an engine for fuel output testing and if satisfactory, reinstalled without disassembly, extreme care should be taken to avoid reversing the fuel flow. When the fuel flow is reversed, dirt trapped by the filter is back-flushed into the injector components.

Before removing an injector from the engine, note the direction of the fuel flow. To avoid reversing the fuel flow when checking injector fuel output, use the appropriate adaptor. The position of the fuel pipes on the comparator (Fig. 16) depends on the adaptor being used and the direction of fuel flow through the injector. The position of the braided fuel inlet tube and the plastic fuel outlet tube on the calibrator (Fig. 20) depends on the adaptor being used and the direction of fuel flow through the injector.

**NOTE:** The fuel passages in adaptors J 7041-61, J-7041-72 and J 7041-88 are drilled straight through the adaptors. The fuel passages in adaptor J-7041 - 130 are cross drilled.

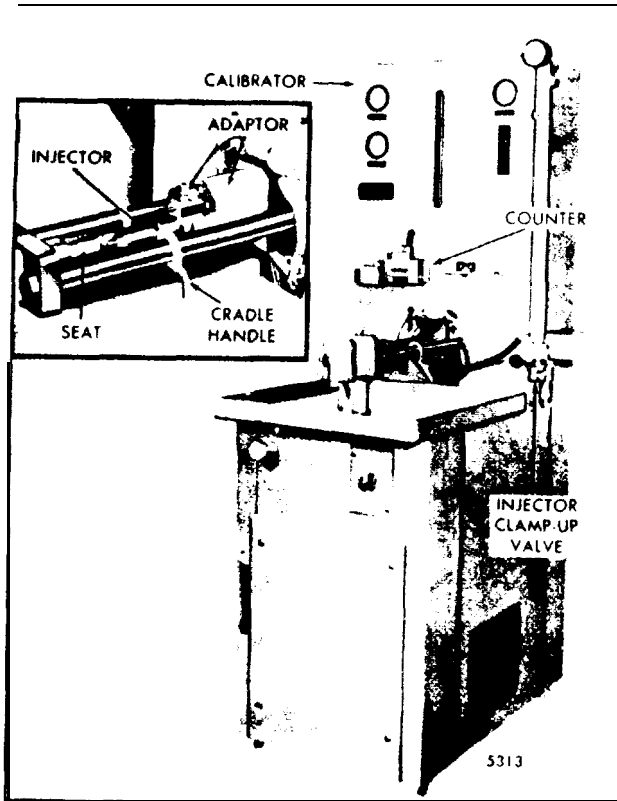


Fig. 21 - Injector in Calibrator J 22410

**COMPARATOR J 7041**

To check the fuel output, operate the injector in the comparator (Fig. 17) as follows:

1. Place the injector in the comparator and tighten the hand wheel to clamp the injector and adaptor in position.

**IMPORTANT:** Make sure the counter on the comparator is preset to 1000 strokes. If, for any reason, this setting has been altered, raise the cover and reset the counter to 100 strokes by pulling the selector wheel to be changed to the right and rotating it to its proper setting (Fig. 18). Then release the wheel and close the cover. Refer to the comparator instruction booklet for further information.

**NOTE:** When installing a low clamp body injector in the comparator, position the injector in the adaptor at approximately a 45 angle, rather than straight into the adaptor, then bring it into a vertical position and secure it in place.

2. Pull the injector rack out to the no-fuel position

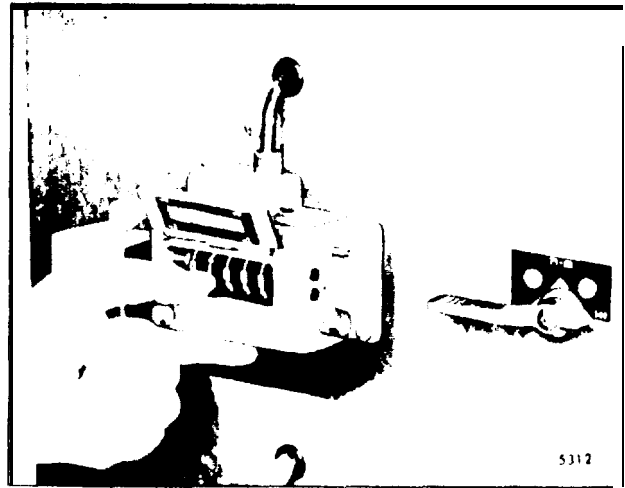


Fig. 22 - Setting Calibrator Stroke Counter

3. Start the comparator by turning on the switch
4. After the comparator has started, push the injector rack in to the full-fuel position.
5. Let the injector run for approximately 30 seconds to purge the air that may be in the system.
6. After 30 seconds, press the fuel flow start button. This will start the flow of fuel into the vial. The

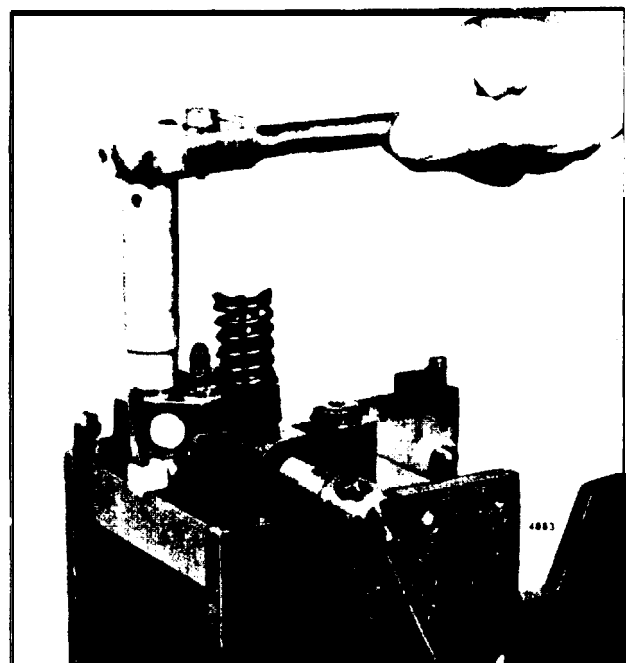


Fig. 23 - Removing or Installing Filter Cap

comparator will automatically stop the flow of fuel after 1000 strokes.

7. After the fuel stops flowing into the vial, pull the rack out to the no-fuel position.
8. Turn the comparator off and reset the counter.
9. Observe the reading on the vial and refer to Fig. 19 to determine if the injector fuel output fails within its specified limits. If the quantity of fuel in the vial does not fall within the specified limits, refer to *Trouble Shooting Chart 6* and *Shop Notes* in Section 2.0 for the cause and remedy.

### CALIBRATOR J 22410

To check the fuel output, operate the injector in the calibrator (Fig. 21) as follows.

**NOTE:** Place the cam shift index wheel and fuel flow lever in their respective positions. Turn on the test fuel oil heater switch and preheat the test oil to 95° to 105 °F.

1. Place the proper injector adaptor between the tie rods and engage it with the fuel block locating pin. Then slide the adaptor forward and up against the fuel block face.
2. Place the injector seat J 22410-226 into the permanent seat (cradle handle in vertical position).

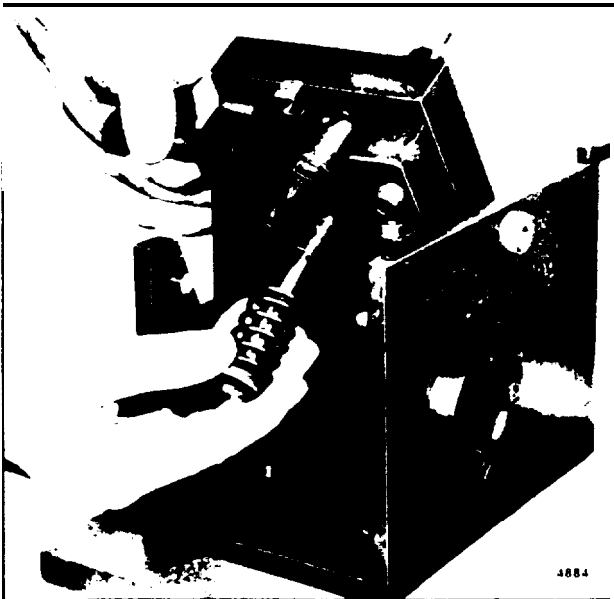


Fig. 24 - Removing or Installing Plunger Follower, Plunger and Spring

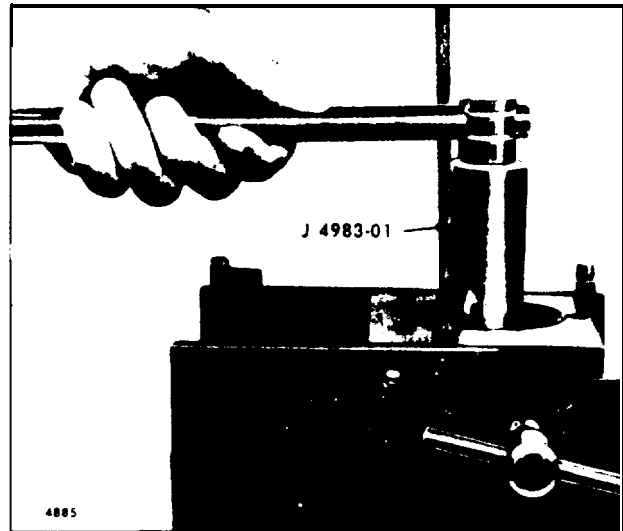


Fig. 25 - Removing Injector Nut

Clamp the injector into position by operating the air valve.

**NOTE:** Make sure the counter (Fig. 22) on the calibrator is preset at 1000 strokes. If for any reason this setting has been altered, reset the counter to 1000 strokes by twisting the cover release button to the left and hold the reset lever in the full up position while setting the numbered wheels. Close the cover. Refer to the calibrator instruction booklet for further information.

3. Pull the injector racks out to the no-fuel position.
4. Turn on the main power control circuit switch. Then start the calibrator by turning on the motor starter switch.

**NOTE:** The low oil pressure warning buzzer will sound briefly until the lubricating oil reaches the proper pressure.

5. After the calibrator has started, set the injector rack into the full-fuel position. Allow the injector to operate for approximately 70 seconds to purge the air that may be in the system.
6. After the air is purged, press the fuel flow start button (red). This will start the flow of fuel into the vial. The fuel flow to the vial will automatically stop after 1000 strokes.
7. Shut the calibrator off (the calibrator will stop in less time at full-fuel).

8. Observe the vial reading and refer to Fig. 19 to determine whether the injector fuel output falls within

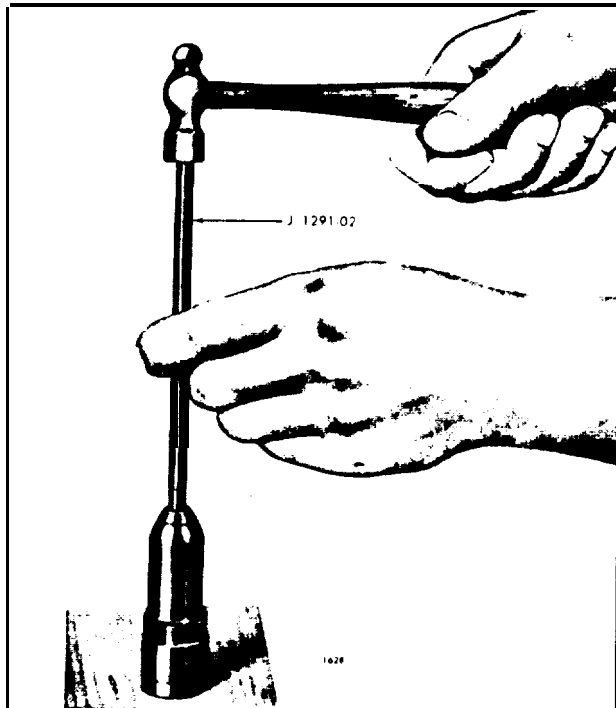


Fig 26 - Removing Spray Tip from Injector Nut

the specified limits. If the quantity of fuel in the vial does not fall within the specified limits, refer to *Trouble Shooting Chart 6* and *Shop Notes* in section 2.0 for the cause and remedy.

**NOTE:** Refer to Section 2.0 for different factors that may affect the injector calibrator output reading.

The comparator or the calibrator may be used to check and select a set of injectors which will inject the same amount of fuel in each cylinder at a given throttle setting, thus resulting in a smooth running, well balanced engine.

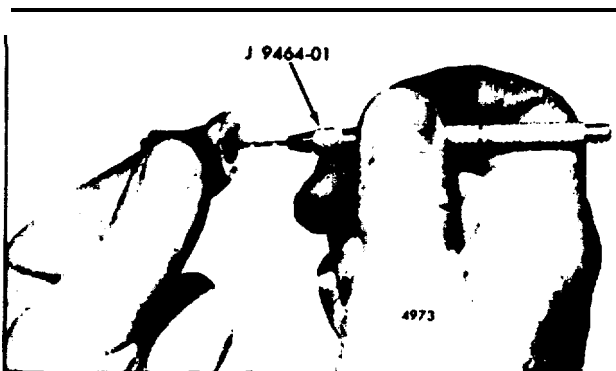


Fig. 27 - Cleaning Injector Spray Tip

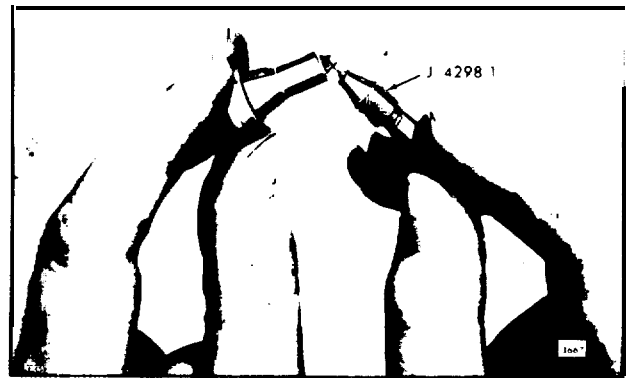


Fig 28 - Cleaning Spray Tip Orifices

An injector which passes all of the above tests may be put back into service. However, an injector which fails to pass one or more of the tests must be rebuilt and checked on the comparator or the calibrator.

Any injector which is disassembled and rebuilt must be tested again before being placed in service.

**Disassemble Injector**

If required, disassemble an injector as follows:

1. Support the injector upright in injector holding fixture J 22396 (Fig. 23) and remove the filter caps, gaskets and filters.

**NOTE:** Whenever a fuel injector is disassembled, discard the filters and gaskets and replace with new filters and gaskets. *In the offset injector, a filter is used in the inlet side only. No filter is required in the outlet side (Fig. 34).*

2. Compress the follower spring as shown in Fig. 11.

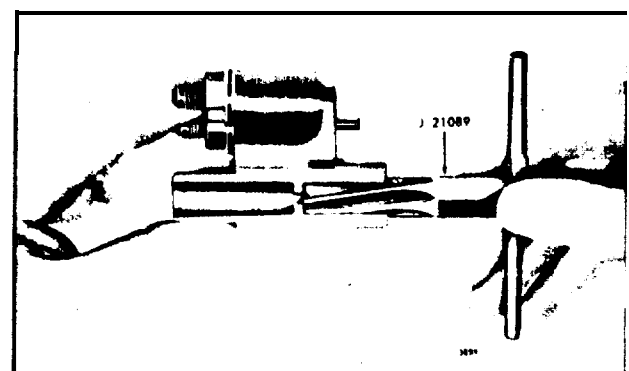


Fig. 29 Cleaning Injector Body Ring

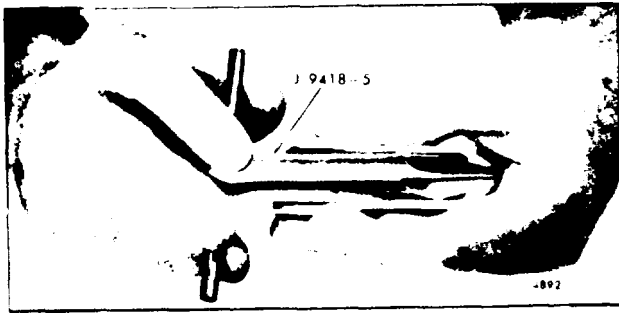


Fig. 30 - Cleaning Injector Nut Spray Tip Seat

Then raise the spring above the stop pin with a screw driver and withdraw the pin. Allow the spring to rise gradually.

3. Refer to Fig. 24 and remove the plunger follower, plunger and spring as an assembly.

4. Invert the fixture and, using socket J 4983-01, loosen the nut on the injector body (Fig. 25).

5. Lift the injector nut straight up, being careful not to dislodge the spray tip and valve parts. Remove the spray tip and valve parts from the bushing and place them in a clean receptacle until ready for assembly.

When an injector has been in use for some time, the spray tip, even though clean on the outside, may not be pushed readily from the nut with the fingers. In this event, support the nut on a wood block and drive the tip down through the nut, using tool J-1291-02 as shown in Fig. 26.

6. Refer to Fig. 36 and remove the spill deflector. Then lift the bushing straight out of the injector body.

7. Remove the injector body from the holding fixture. Turn the body upside down and catch the gear retainer and gear in your hand as they fall out of the body.

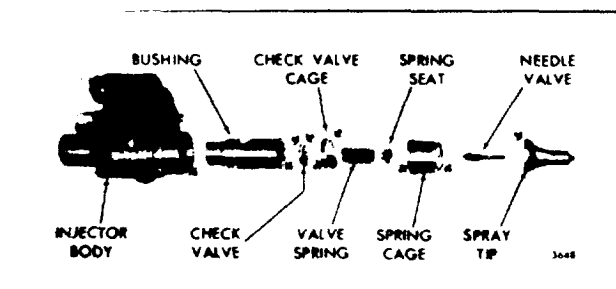


Fig. 31 - Sealing Surfaces which may Require Lapping

8. Withdraw the injector control rack from the injector body. Also remove the seal ring from the body.

### Clean Injector Parts

Since most injector difficulties are the result of dirt particles, it is essential that a clean area be provided on which to place the injector parts after cleaning, and inspection.

Wash all of the parts with clean fuel oil or a suitable cleaning solvent and dry them with clean, filtered compressed air. *Do not use waste or rags for cleaning purposes.* Clean out all of the passages, drilled holes and slots in all of the injector parts.

Carbon on the inside of the spray tip may be loosened for easy removal by soaking for approximately 15 minutes in a suitable solution prior to the external cleaning and buffing operation. Methyl Ethyl Ketone J 8257 solution is recommended for this purpose.

Clean the spray tip with tool J 9464-01 (Fig. 27).

**CAUTION:** Care must be exercised when inserting the carbon remover J 9464-01 in the spray tip to avoid contacting the needle valve seat in the tip.

Wash the tip in fuel oil and dry it with compressed air. Clean the spray tip orifices with pin vise J 4298-1 and the proper size spray tip cleaning wire. Use wire J 21460 to clean .0055 " diameter holes and wire J 21461 to clean, .006 " diameter holes (Fig. 28).

Before using the wire, hone the end until it is smooth and free of burrs and taper the end a distance of 1/16 " with stone J 8170. Allow the wire to extend 1/8 " from tool J 4298-11.



Fig. 32 - Examining Sealing Surface with a Magnifying Glass

The exterior surface of an injector spray tip may be cleaned by using a brass wire buffing wheel, tool J 7944. To obtain a good polishing effect and longer brush life, the buffing wheel should be installed on a motor that turns the wheel at approximately 3000 rpm. A convenient method of holding the spray tip while cleaning and polishing is to place the tip over the drill end of the spray tip cleaner tool J 1243 and hold the body of the tip against the buffing wheel. In this way, the spray tip is rotated while being buffed.

**CAUTION:** Do not buff excessively. Do not use a steel wire buffing wheel or the spray tip holes may be distorted.

When the body of the spray tip is clean, lightly buff the tip end in the same manner. This cleans the spray tip orifice area and will not plug the orifices.

Wash the spray tip in clean fuel oil and dry it with compressed air.

Clean and brush all of the passages in the injector body, using fuel hole cleaning brush J 8152 and rack hole cleaning brush J 8150. Blow out the passages and dry them with compressed air.

Carefully insert reamer J 21089 in the injector body (Fig. 29). Turn it in a clockwise direction a few turns, then remove the reamer and check the face of the ring for reamer contact over the entire face of the ring. If necessary, repeat the reaming procedure until the reamer does make contact with the entire face of the ring. Clean up the opposite side of the ring in the same manner.

Carefully insert a .375 " diameter straight fluted reamer inside the ring bore in the injector body. Turn the reamer in a clockwise direction and remove any burrs inside the ring bore. Then wash the injector body in clean fuel oil and dry it with compressed air.

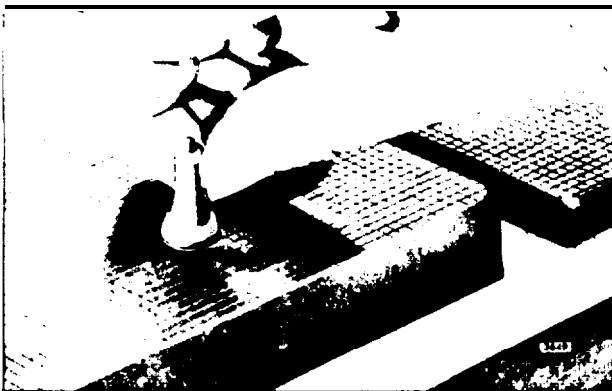


Fig. 33 - Lapping Spray Tip on Lapping Blocks  
J 22090

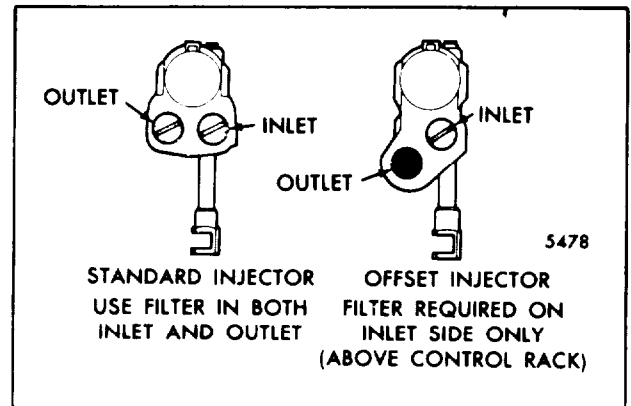


Fig. 34 - Location of Filter In Injector Body

Carefully insert carbon remover tool J 9418-1 in the injector nut. Turn it in a clockwise direction to remove the carbon deposits on the flat spray tip seat as shown in Fig. 30. Remove the carbon deposits from the lower end of the injector nut with carbon remover J 9418-5 (Fig. 30) in the same manner. Use care to prevent removing any metal or setting up burrs on the spray tip seat.

Wash the injector nut in clean fuel oil and dry it with compressed air. Carbon deposits on the spray tip seating surfaces of the injector nut will result in poor sealing and consequent fuel leakage around the spray tip.

When handling the injector plunger, do not touch the finished plunger surfaces with your fingers. Wash the plunger and bushing with clean fuel oil and dry them with compressed air. Be sure the high pressure bleed hole in the side of the bushing is not plugged. If this hole is plugged, fuel leakage will occur at the upper end of the bushing where it will drain out of the injector body vent and rack holes, during engine operation, causing a serious oil dilution problem. *Keep the plunger and bushing together as they are mated parts.*

After washing, submerge the parts in a clean receptacle containing clean fuel oil. *Keep the parts of each injector assembly together.*

#### Inspect Injector Parts

Inspect the teeth on the control rack and the control rack gear for excessive wear or damage. Also check for excessive wear in the bore of the gear and inspect the gear retainer. Replace damaged or worn parts.

Inspect the injector follower and pin for wear. Refer to Section 2.0.

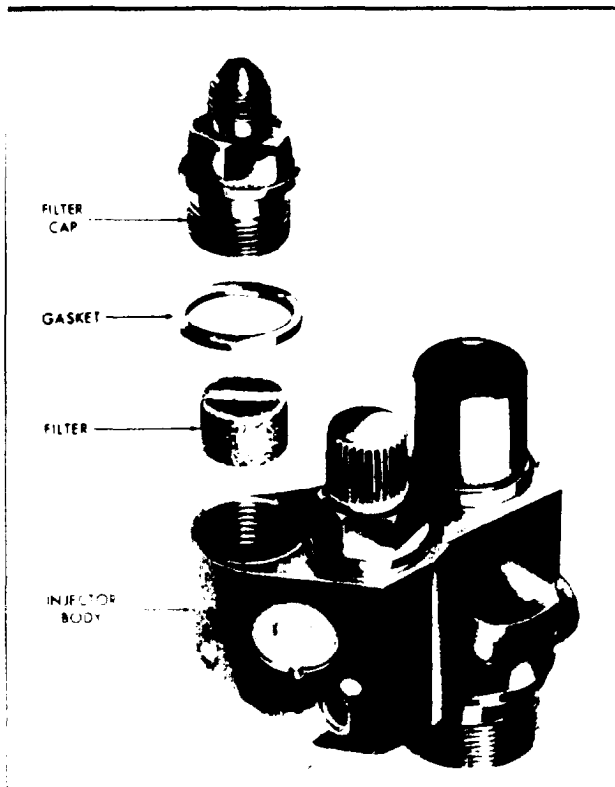


Fig. 35 - Details of Injector Filters and Caps and Their Relative Location

Inspect both ends of the spill deflector for sharp edges or burrs which could create burrs on the injector body or injector nut and cause particles of metal to be introduced into the spray tip and valve parts. Remove burrs with a 500 grit stone.

Inspect the follower spring for visual defects. Then check the spring with spring tester J 9666 and an accurate torque wrench.

The current injector follower spring (.142 " diameter wire) has a free length of approximately 1.504 " and should be replaced when a load of less than 70 lbs. will compress it to 1.028 "

It is recommended that at the time of overhaul, all injectors in an engine be converted to the current spring (.142 " diameter wire) which will provide improved cam roller to shaft follow. However, in the event that one or two injectors are changed, the remaining injectors need not be reworked to incorporate the current spring.

Check the seal ring area on the injector body for burrs or scratches. Also check the surface which contacts the injector bushing for scratches, scuff marks, or other damage. If necessary, lap this surface. A faulty sealing

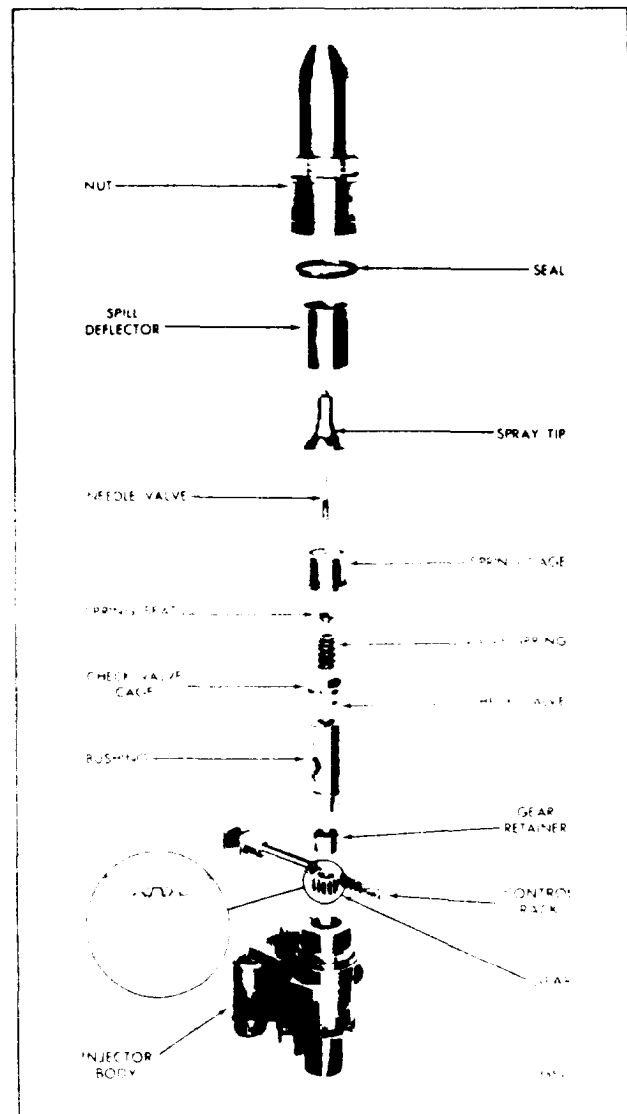


Fig. 36 - Injector Rack, Gear, Spray Tip and Valve Assembly Details and Relative Location of Parts

surface at this point will result in high fuel consumption and contamination of the lubricating oil. Replace any loose injector body plugs or a loose dowel pin. Install the proper number tag on a service replacement injector body.

Inspect the injector plunger and hushing for scoring, erosion, chipping or wear. Check for sharp edges on that portion of the plunger which rides in the gear. Remove any sharp edges with a 500 grit stone. Wash the plunger after stoning it. Injector Bushing Inspectalite J 21471 can be used to check the port holes in the inner diameter of the bushing for cracks or chipping. Slip the plunger into the bushing and

check for free movement *Replace the plunger and bushing as an assembly if any of the above damage is noted, since they are mated parts.* USC new mated factory parts to assure the best performance from the injector.

injector plungers cannot be reworked to change the output. Grinding will destroy the hardened case at the helix and result in chipping and seizure or scoring of the plunger.

Examine the spray tip seating surface of the injector nut and spray tip for nicks, burrs, erosion or brinelling. Reseat the surface or replace the nut or tip if it is severely damaged.

The injector valve spring plays an important part in

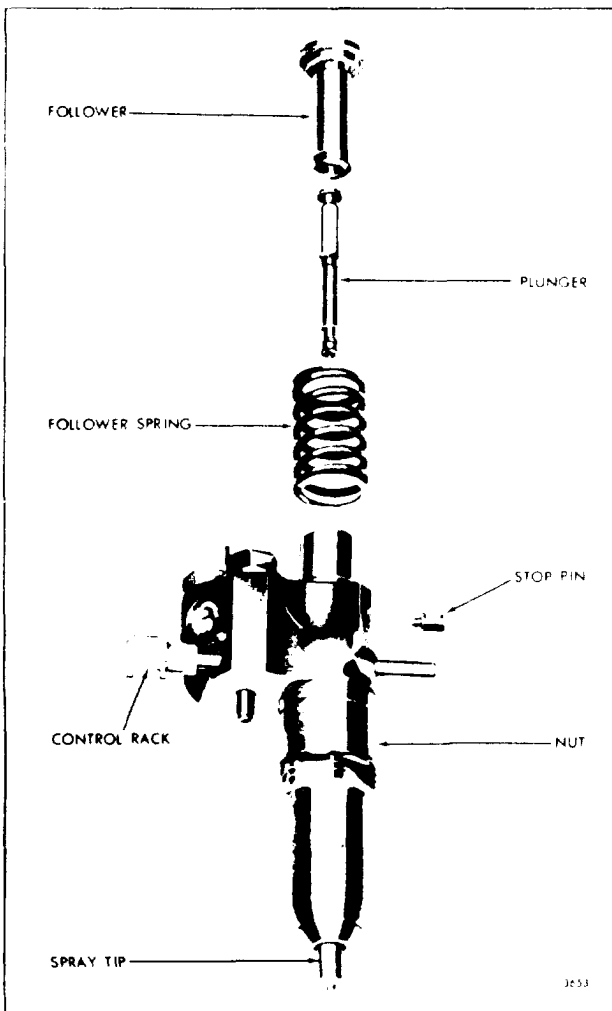


Fig. 37 Injector Plunger, Follower and Relative Location of Parts

Port Name	Minimum Thickness
Tip, Spray (Shoulder)	.199
Cage, Check Valve	.165-.163
Valve, Check	.022
Cage, Valve Spring	.602

MINIMUM THICKNESS (Used Parts)

establishing the valve opening pressure of the injector assembly. Replace a worn or broken spring.

Inspect the sealing surfaces of the injector parts indicated by arrows in Fig. 31. Examine the sealing surfaces with a magnifying glass as shown in Fig. 32 for even the slightest imperfections will prevent the injector from operating properly. Check for burrs, nicks, erosion, cracks, chipping and excessive wear. Also check for enlarged orifices in the spray tip. Replace damaged or excessively worn parts. Check the minimum thickness of the lapped parts as noted in the chart.

Examine the seating area of the needle valve for wear or damage. Also examine the needle quill and its contact point with the valve spring seat. Replace damaged or excessively worn parts.

Examine the needle valve seat area in the spray tip for foreign material. The smallest particle of such material can prevent the needle valve from seating properly. Polish the seat area with polishing stick J 22964. Coat only the tapered end of the stick with polishing compound J 23038 and insert it directly into the center of the spray tip until it bottoms. Rotate the stick 6 to 12 times, applying a light pressure with the thumb and forefinger

**CAUTION:** Be sure that no compound is

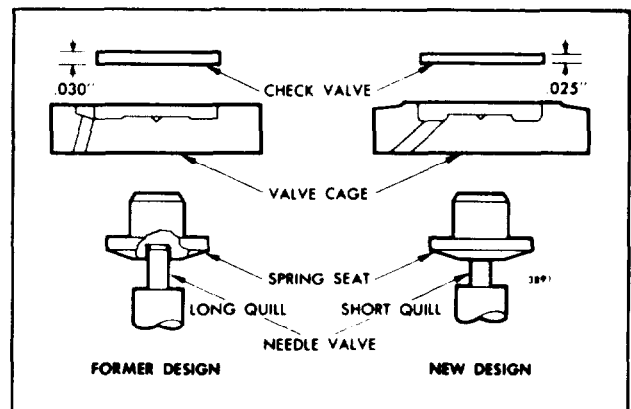


Fig. 38 - Comparison of Former and New Design Injector Parts



accidentally placed on the lapped surfaces located higher up in the spray tip. The slightest lapping action on these surfaces can alter the near-perfect fit between the needle valve and tip.

Before reinstalling used injector parts, lap all of the scaling surfaces indicated by the arrows in Fig. 31. It is also good practice to lightly lap the sealing surfaces of new injector parts which may become burred or nicked during handling.

### Lapping Injector Parts

Lap the sealing surfaces indicated in Fig. 31 and the chart as follows:

1. Clean the lapping blocks (J 22090) with compressed air. Do not use a cloth or any other material for this purpose.
2. Spread a good quality 600 grit dry lapping powder on one of the lapping blocks.
3. Place the part to be lapped flat on the block as shown in Fig. 33 and, using a figure eight motion, move it back and forth across the block. Do not press on the part, but use just enough pressure to keep the part flat on the block. It is important that the part be kept flat on the block at all times.
4. After each four or five passes, clean the lapping



Fig. 39 - Tightening Injector Nut by Hand

powder from the part by drawing it across a clean piece of tissue placed on a flat surface and inspect the part. *Do not lap excessively* (refer to the chart on minimum thickness).

5. When the part is flat, wash it in cleaning solvent and dry it with compressed air.
6. Place the dry part on the second block. After applying lapping powder, move the part lightly across the block in a figure eight motion several times to give it a smooth finish. *Do not lap excessively*. Again wash the part in cleaning solvent and dry it with compressed air.
7. Place the dry part on the third block. Do not use lapping powder on this block. Keep the part flat and move it across the block several times, using the figure eight motion. Lapping the dry part in this manner gives it the "mirror" finish required for perfect sealing.
8. Wash all of the lapped parts in clean fuel oil and dry them with compressed air.

### Assemble Injector

Use an extremely clean bench to work on and to place the parts when assembling an injector. Also be sure all of the injector parts, both new and used, are clean.

Study Figs. 34 through 37 for the proper relative position of the injector parts. then proceed as follows:

### ASSEMBLE INJECTOR FILTERS

Always use new filters and gaskets when reassembling an injector.

1. Insert a new filter, dimple end down, slotted end up,

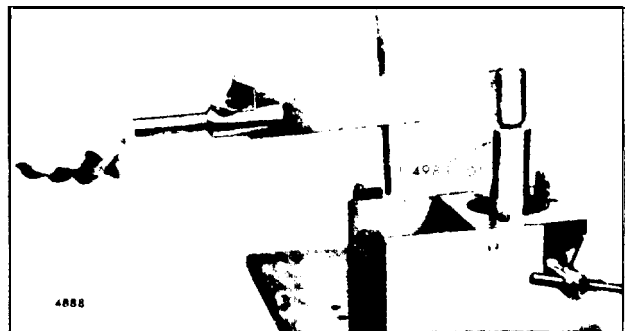


Fig. 40 - Tightening Injector Nut With Torque Wrench

in each of the fuel cavities in the top of the injector body (Fig. 35).

**NOTE:** Install a new filter in the inlet side (located over the injector rack) in a fuel injector with an offset body. No filter is required in the outlet side of the offset body injector (Fig. 34).

2. Place a new gasket on each filter cap. Lubricate the threads and install the filter caps. Tighten the filter caps to 65-75 lb-ft torque with a 9/16 " deep socket (Fig. 23).
3. Purge the filters after installation by directing compressed air or fuel through the filter caps.
4. Install clean shipping caps on the filter caps to prevent dirt from entering the injector.

### ASSEMBLE RACK AND GEAR

Refer to Fig. 36 and note the drill spot marks on the control rack and gear. Then proceed as follows:

1. Hold the injector body, bottom end up, and slide the rack through the hole in the body. Look into the body bore and move the rack until you can see the drill marks. Hold the rack in this position.
2. Place the gear in the injector body so that the marked tooth is engaged between the two marked teeth on the rack (Fig. 36).
3. Place the gear retainer on top of the gear.
4. Align the locating pin in the bushing with the slot in the injector body, then slide the end of the bushing into place.

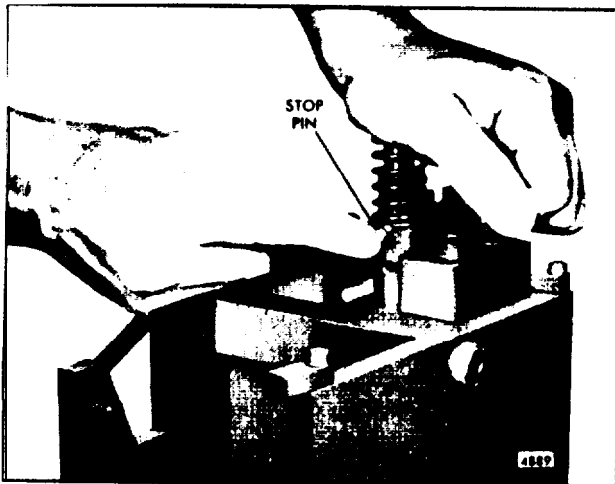


Fig. 41 - Installing Injector Follower Stop Pin

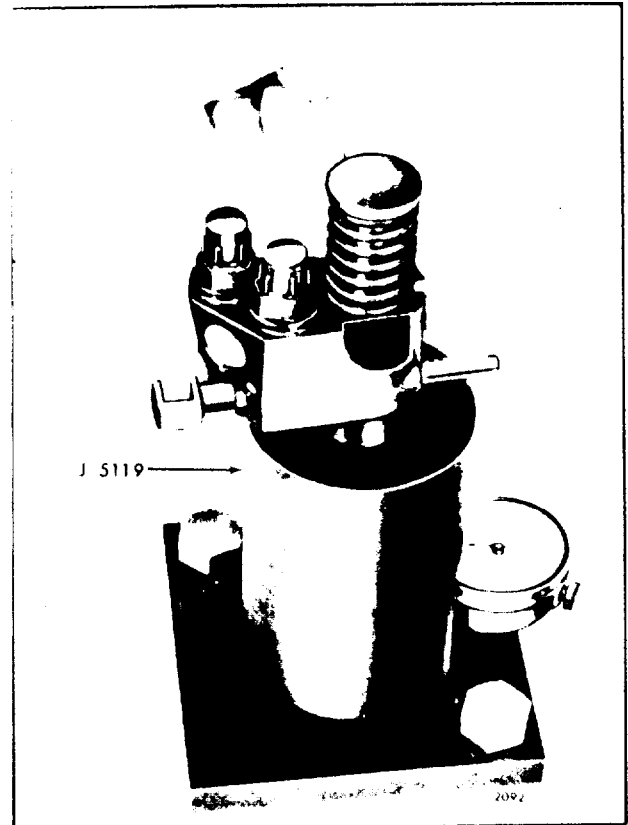


Fig. 42 - Checking Injector Spray Tip Concentricity

### ASSEMBLE SPRAY TIP, SPRING CAGE AND CHECK VALVE ASSEMBLIES

Refer to Fig. 36 and assemble the parts as follows:

1. Support the injector body, bottom end up, in injector holding fixture J 22396.
  2. Place a new seal ring on the shoulder of the body. Then place the spill deflector over the barrel of the bushing.
  3. Place the check valve (without the .010 " hole) centrally on the top of the bushing. Then place the check valve cage over the check valve and against the bushing.
- CAUTION:** The former and new check valve and check valve cage are not separately interchangeable in a former injector (Fig. 38).
4. Insert the spring seat in the valve spring, then insert the assembly into the spring cage, spring seat first.

**CAUTION:** Install a new spring seat (Fig. 38) in

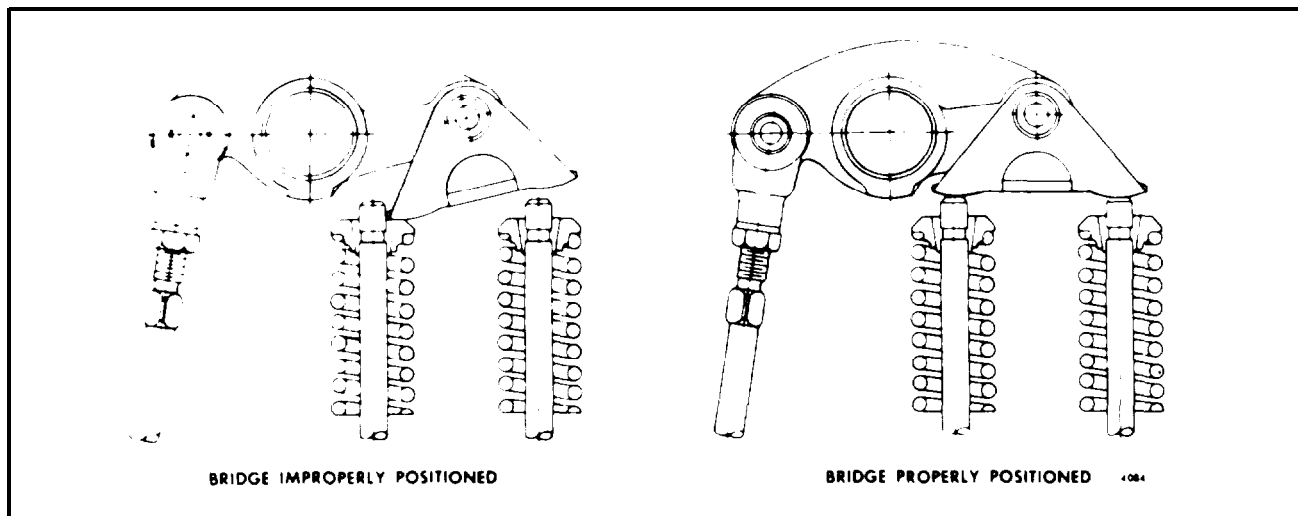


Fig. 43 - Relationship Between Exhaust Valve Bridge and Valve Stems

a former injector if a new design spray tip assembly is used.

5. Place the spring cage, spring seat and valve spring assembly (valve spring down) on top of the check valve cage.

**CAUTION:** When installing a new spray tip assembly in a former injector, a new valve spring seat must also be installed. The current needle valve has a shorter quill.

6. Insert the needle valve, tapered end down, inside of the spray tip (Fig. 2). Then place the spray tip and needle valve on top of the spring cage with the quill end of the needle valve in the hole in the spring cage.

7. Lubricate the threads in the injector nut and carefully thread the nut on the injector body by hand. Rotate the spray tip between your thumb and first finger while threading the nut on the injector body (Fig. 39) Tighten the nut as tight as possible by hand. At this point there should be sufficient force on the spray up to make it impossible to turn with your fingers.

8. Use socket J 4983-01 and a torque wrench to tighten the injector nut to 75-85 lb-ft torque (Fig. 40).

**NOTE:** Do not exceed the specified torque. Otherwise, the nut may be stretched and result in improper sealing of the lapped surfaces in a subsequent injector overhaul.

### ASSEMBLE PLUNGER AND FOLLOWER

1. Refer to Fig. 37 and slide the head of the plunger into the follower.

2. Invert the injector in the assembly fixture (filter cap end up) and push the rack all the way in. Then place the follower spring on the Injector body.

3. Refer to Fig. 41 and place the stop pin on the injector body so that the follower spring rests on the narrow flange of the stop pin. Then align the slot in the follower with the stop pin hole in the injector body. Next align the flat side of the plunger with the slot in the follower. Then insert the free end of the plunger in the injector body. Press down on the follower and at the same time press the stop pin into position. When in place, the spring will hold the stop pin in position.

### Check Spray Tip Concentricity

To assure correct alignment, check the concentricity of the spray tip as follows:

1. Place the injector in the concentricity gage J 5119 as shown in Fig. 42 and adjust the dial indicator to zero.

2. Rotate the injector 360° and note the total run-out as indicated on the dial.

3. If the total run-out exceeds .008 " , remove the injector from the gage. Loosen the injector nut, center the spray tip and tighten the nut to 75-85 lb-ft. torque. Recheck the spray tip concentricity. If, after several

attempts, the spray tip cannot be positioned satisfactorily, replace the injector nut.

### Test Reconditioned Injector

Before placing a reconditioned injector in service, perform all of the tests (except the visual inspection of the plunger) previously outlined under *Test Injector*.

The injector is satisfactory if it passes these tests. Failure to pass any one of the tests indicates that defective or dirty parts have been assembled. In this case, disassemble, clean, inspect, reassemble and test the injector again.

### Install Injector

Before installing an injector in an engine, remove the carbon deposits from the beveled seat of the injector tube in the cylinder head. This will assure correct alignment of the injector and prevent any undue stresses from being exerted against the spray tip.

Use injector tube bevel reamer J 5286-9, Section 2.1.4, to clean the carbon from the injector tube. Exercise care to remove **ONLY** the carbon so that the proper clearance between the injector body and the cylinder head is maintained. Pack the flutes of the reamer with grease to retain the carbon removed from the tube.

Be sure the fuel injector is filled with fuel oil. If necessary, add clean fuel oil at the inlet filter cap until it runs out of the outlet filter cap.

Install the injector in the engine as follows:

1. Refer to Fig. 6 and insert the injector into the injector tube with the dowel pin in the injector body registering with the locating hole in the cylinder head.
2. Slide the injector rack control lever over so that it registers with the injector rack.

3. Install the injector clamp, special washer (with curved side toward injector clamp) and bolt. Tighten the bolt to 20-25 lb-ft torque. Make sure that the clamp does not interfere with the injector follower spring or the exhaust valve springs.

**NOTE:** Check the injector control rack for free movement. Excess torque can cause the control rack to stick or bind.

4. Move the rocker arm assembly into position and secure the rocker arm brackets to the cylinder head by tightening the bolts to the torque specified in Section 2.0.

**CAUTION:** On four valve cylinder heads, there is a possibility of damaging the exhaust valves if the exhaust valve bridge is not resting on the ends of the exhaust valves when tightening the rocker shaft bracket bolts. Therefore, note the position of the exhaust valve bridge (Fig. 43) before, during and after tightening the rocker shaft bolts.

5. Remove the shipping caps. Then install the fuel pipes and connect them to the injector and the fuel connectors. Use socket J 8932-01 to tighten the connections to 12-15 lb-ft torque.

**CAUTION:** Do not bend the fuel pipes and do not exceed the specified torque. Excessive tightening will twist or fracture the flared end of the fuel line and result in leaks. Lubricating oil diluted by fuel oil can cause serious damage to the engine bearings.

6. Perform a complete engine tune-up as outlined in Section 14. However, if only one injector has been removed and replaced and the other injectors and the governor adjustment have not been disturbed, it will only be necessary to adjust the valve clearance and time the injector for the one cylinder, and to position the injector rack control lever.



## FUEL INJECTOR TUBE

The bore in the cylinder head for the fuel injector is directly through the cylinder head water jacket as shown in Fig. 1. To prevent coolant from contacting the injector and still maintain maximum cooling of the injector, a tube is pressed into the injector bore. This tube is sealed at the top with a neoprene ring and upset into a flare on the lower side of the cylinder head to create water-tight and gas-tight joints at the top and bottom.

### Remove Injector Tube

When removal of an injector tube is required, use injector tube service tool set J 22525 as follows:

1. Remove, disassemble and clean the cylinder head as outlined in Section 1.2.
2. Place the injector tube installer J 5286-4 in the injector tube. Insert the pilot J 5286-5 through the small opening of the injector tube and thread the pilot into the tapped hole in the end of the installer (Fig. 1).
3. Tap on the end of the pilot to loosen the injector tube. Then lift the injector tube, installer and pilot from the cylinder head.

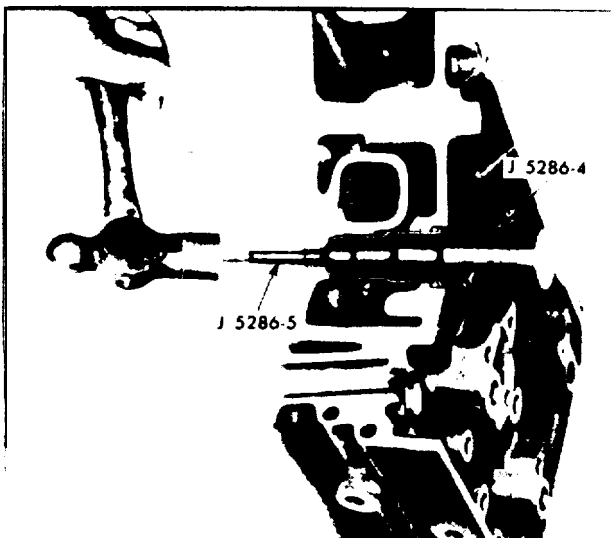


Fig. 1 - Removing Injector Tube

### Install Injector Tube

Thoroughly clean the injector tube hole in the cylinder head to remove dirt, burrs or foreign material that may prevent the tube from seating at the lower end or sealing at the upper end. Then install the tube as follows:

1. Place a new injector tube seal ring in the counterbore in the cylinder head.
2. Place the installer J 5286-4 in the injector tube. Then insert the pilot J 5286-5 through the small opening of the injector tube and thread it into the tapped end of the installer (Fig. 2).
3. Slip the injector tube into the injector bore and drive it in place as shown in Fig. 2. Sealing is accomplished between the head counterbore (inside diameter) and outside diameter of the injector tube. The tube flange is merely used to retain the seal ring.
4. With the injector tube properly positioned in the cylinder head, upset (flare) the lower end of the injector tube as follows:
  - a. Turn the cylinder head bottom side up, remove the pilot J 5286-5 and thread the upsetting die

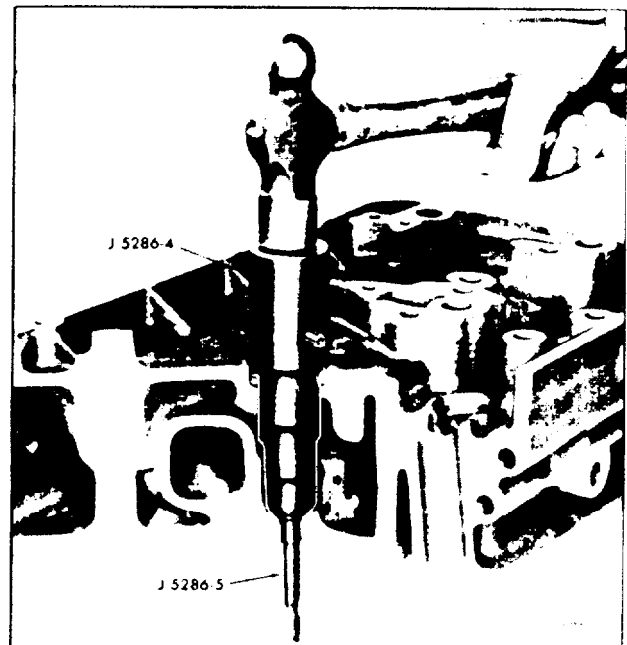


Fig. 2 - Installing Injector Tube

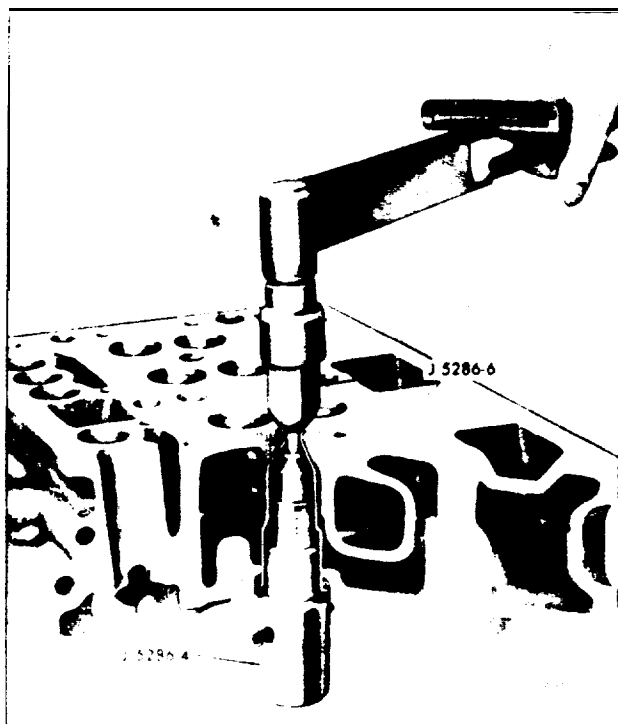


Fig. 3 Upsetting Infector Tube

J 5286-6 into the tapped end of the installer J 5286-4 (Fig. 3).

- b. Then, using a socket and torque wrench, apply approximately 30 lb-ft torque on the upsetting die.
- c. Remove the installing tools and ream the injector tube as outlined below.

#### Roam Injector Tube

After an injector tube has been installed in a cylinder head, it must be finished in three operations: First, hand reamed, as shown in Fig. 4, to receive the injector body nut and spray tip; second, *spot-faced* to remove excess stock at the lower end of the injector tube; and third, *hand reamed*, as shown in Fig. 5, to provide a good seating surface for the bevel or the lower end of the injector nut. Reaming must be done carefully and without undue force or speed so as to avoid cutting through the thin wall of the injector tube.

**NOTE:** The reamer should be turned in a *clockwise direction* only, both when inserting and when withdrawing the reamer, because movement in the opposite direction will dull the cutting edges of the flutes.



Fig. 4 Reaming Injector Tube for Injector Body Nut and Spray Tip

1. Ream the injector tube for the injector nut and spray tip. With the cylinder head right side up and the injector tube free from dirt, proceed with the first reaming operation as follows:
  - a. Place a few drops of light cutting oil on the reamer flutes, then carefully position the reamer J 22525-1 in the injector tube.
  - b. Turn the reamer in a clockwise direction (withdrawing the reamer frequently for removal of chips) until the lower shoulder of the reamer contacts the injector tube (Fig. 4). Clean out all of the chips.
2. Remove excess stock:
  - a. With the cylinder head bottom side up, insert the pilot of cutting tool J 5286-8 into the small hole of the injector tube.
  - b. Place a few drops of cutting oil on the tool. Then, using a socket and a speed handle, remove the excess stock so that the lower end of the injector tube is from flush to .005 " below the finished surface of the cylinder head.

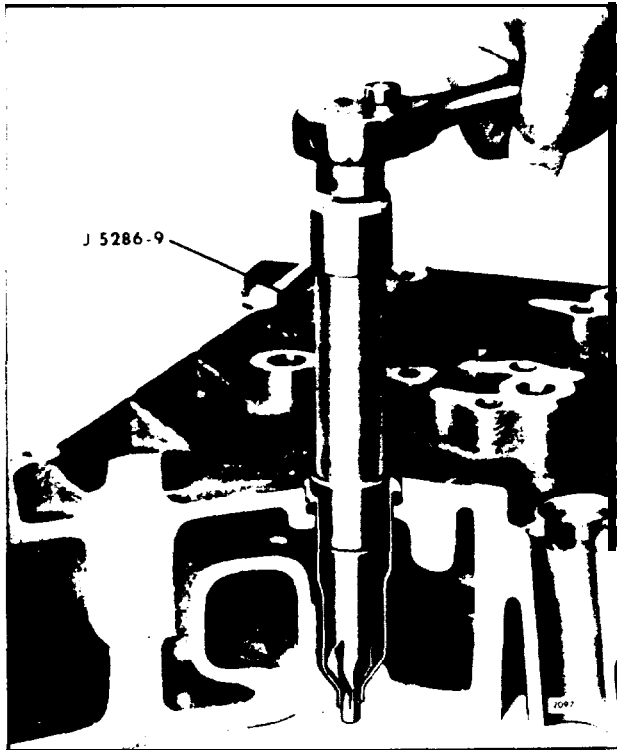


Fig. 5 - Reaming Injector Tube for Injector Nut

### 3. Ream the bevel seat in the injector tube:

The tapered lower end of the injector tube must provide a smooth and true seat for the lower end of the injector nut to effectively seal the cylinder pressures and properly position the injector tip in the combustion chamber. Therefore, to determine the amount of stock that must be reamed from the bevel seat of the tube, the injector assembly should be installed in the tube and the relationship between the numbered surface of the spray tip to the fire deck of the cylinder head noted (Fig. 6).

With the first reaming operation completed and the injector tube spot-faced, wash the interior of the

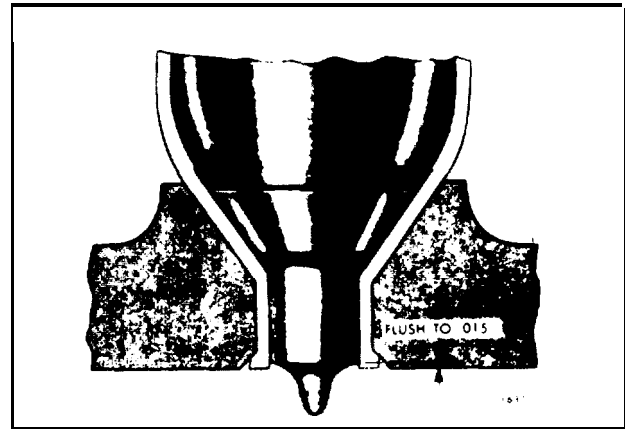


Fig. 6 - Checking Location of Injector Spray Tip Relative to Lower Surface of Cylinder Head

injector tube with trichloromethylene or clean fuel oil and dry it with compressed air. Then perform the second reaming operation as follows:

- a. Place a few drops of cutting oil on the bevel seat of the tube. Carefully lower the reamer J 5286-9 into the injector tube until it contacts the bevel seat.
- b. Make a trial cut by turning the reamer steadily without applying any downward force on the reamer. Remove the reamer, blow out the chips and look at the bevel seat to see what portion of the seat has been cut.
- c. Proceed carefully with the reaming operation, withdrawing the reamer occasionally to observe the reaming progress.
- d. Remove the chips from the injector tube and, using an injector as a gage, continue the reaming operation until the shoulder of the spray tip is within the limits specified in Fig. 6. Then wash the interior of the injector tube with trichloroethylene or clean fuel oil and dry it with compressed air.





## FUEL PUMP

The positive displacement gear type fuel pump (Fig. 1) transfers the fuel from the supply tank to the fuel injectors. The pump circulates an excess supply of fuel through the injectors which purges the air from the system and cools the injectors. The unused portion of fuel returns to the fuel tank by means of a fuel return manifold and fuel return line.

On the In-line engine, the fuel pump is mounted on the governor weight housing and is driven through a drive coupling by the governor weight shaft.

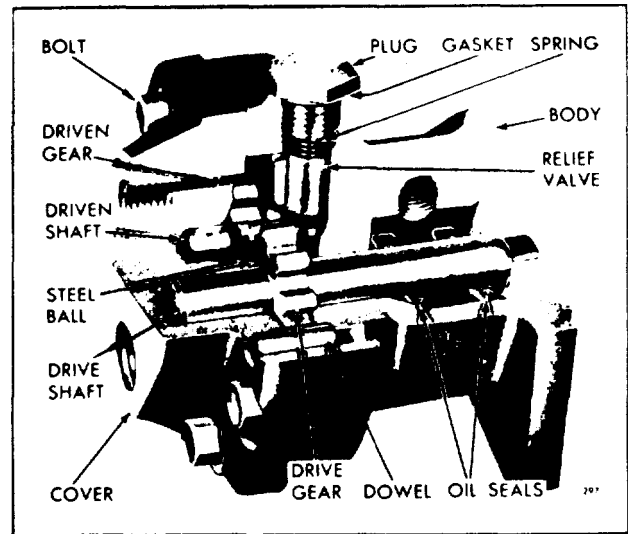


Fig. 1 Typical Fuel Pump Assembly

The fuel pump cover and body are positioned by means of two dowels. The dowels aid in maintaining gear shaft alignment. The mating surfaces of the pump body and cover are perfectly flat ground surfaces. No gasket is used between the cover and body since the pump clearances are set up on the basis of metal-to-metal contact. A very thin coating of sealant provides a seal against any minute irregularities in the mating surfaces. Cavities in the pump cover accommodate the ends of the drive and driven shafts.

The fuel pump body is recessed to provide running space for the pump gears (Fig. 2). Recesses are also provided at the inlet and outlet positions of the gears. The small hole "A" permits the fuel oil in the inlet side of the pump to lubricate the relief valve at its outer end and to eliminate the possibility of a hydrostatic lock which would render the relief valve inoperative. Pressurized fuel contacts the relief valve through hole "B" and provides for relief of excess discharge pressures. Fuel re-enters the inlet side of the pump through hole "C" when the discharge pressure is great enough to move the relief valve back from its seat. Part of the relief valve may be seen through hole "C". The cavity "D" provides escape for the fuel oil which is squeezed out of the gear teeth as they mesh together on the discharge side of the pump. Otherwise, fuel trapped at the root of the teeth would tend to force the gears apart, resulting in undue wear on the gears, shafts, body and cover.

Two oil seals are pressed into the bore in the flanged side of the pump body to retain the fuel oil in the pump and the lubricating oil in the blower timing gear

compartment (Fig. 1). The oil seals are installed with the lips of the seals facing toward the flanged end of the pump body. A small hole "E" (Fig. 2) serves as a vent passageway in the body, between the inner oil seal and the suction side of the pump, which prevents building up any fuel oil pressure around the shaft ahead of the inner seal. Two tapped holes in the under side of the pump body, between the oil seals, furnish a means of attaching tubing for draining off any leakage.

The drive and driven gears are a line-to-line to a .001 " press fit on their shafts. The drive gear is provided with a gear retaining ball to locate the gear on the shaft.

A spring-loaded relief valve incorporated in the pump body normally remains in the closed position, operating only when pressure on the outlet side (to the fuel filter) reaches approximately 65 psi.

### Operation

In operation, fuel enters the pump on the suction side and fills the space between the gear teeth which are exposed at that instant. The gear teeth then carry the fuel oil to the discharge side of the pump and, as the gear teeth mesh in the center of the pump, the fuel oil is forced out into the outlet cavity. Since this is a continuous cycle and fuel is continually being forced into the outlet cavity, the fuel flows from the outlet cavity into the fuel lines and through the engine fuel system under pressure.

The pressure relief valve relieves the discharge pressure by by-passing the fuel from the outlet side of

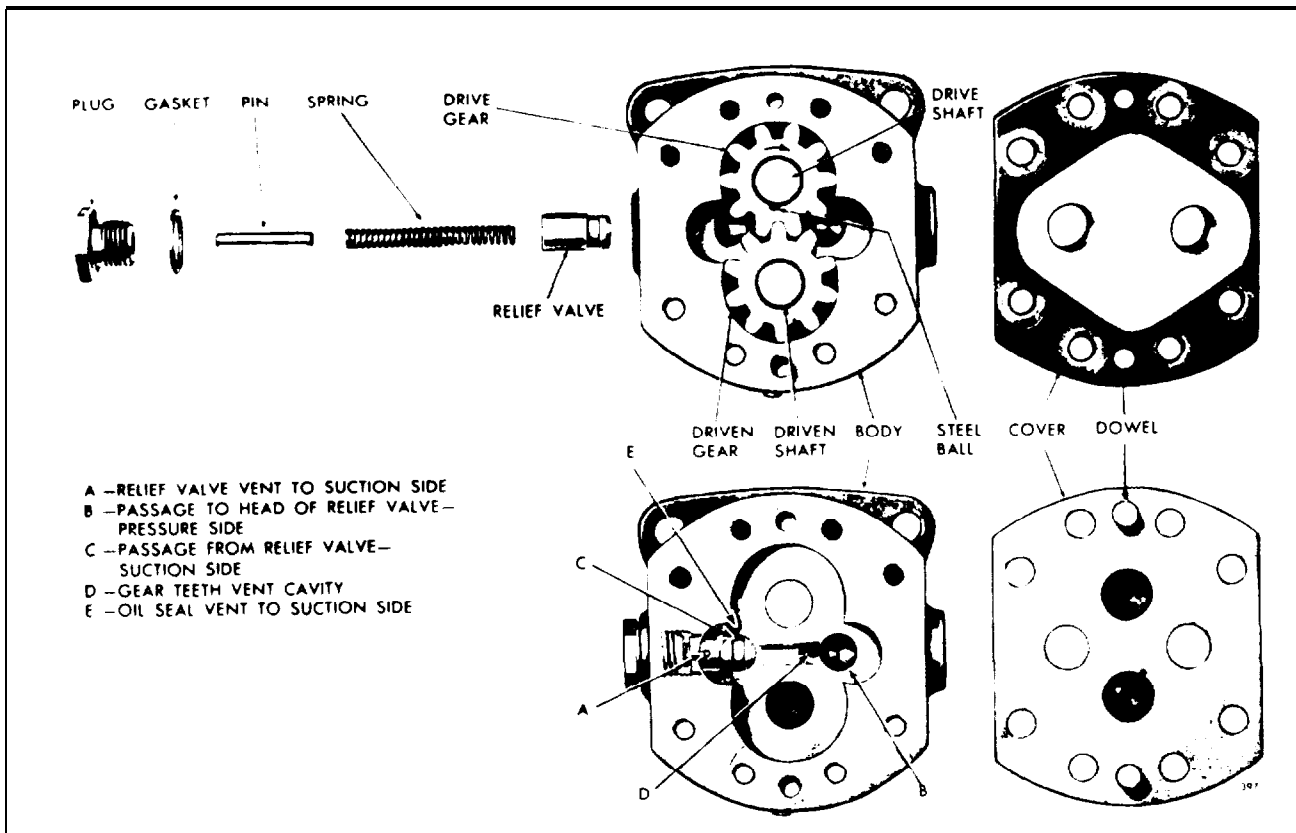


Fig. 2 Fuel Pump Valving and Rotation (Right Hand Pump Shown)

the pump to the inlet side when the discharge pressure reaches approximately 65 to 75 psi.

The fuel pump should maintain the fuel pressure at the fuel inlet manifold as shown in Section 13.2.

If leakage exceeds one drop per minute, the oil seals should be replaced.

**Remove Fuel Pump**

1. Disconnect the fuel lines from the inlet and outlet openings of the fuel pump.
2. Disconnect the drain tube, if used from the fuel pump.
3. Remove the three pump attaching bolt and seal assemblies and withdraw the pump.
4. Check the drive coupling fork and, if broken or worn, replace it with a new coupling.

**Disassemble Fuel Pump**

With the fuel pump removed from the engine and mounted in holding fixture J 1508-10 as shown in

Fig 3, refer to Figs. 1 and 2 and disassemble the pump as follows:

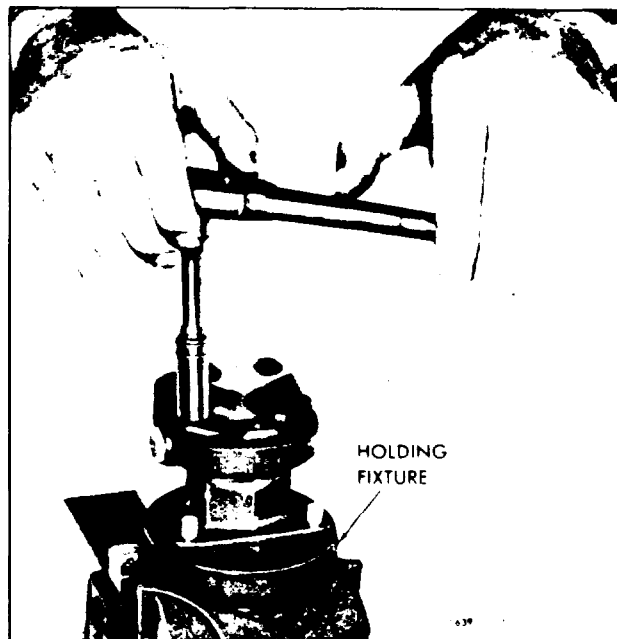


Fig. 3 - Removing Fuel Pump Cover Using Holding Fixture J 1508-10

1. Remove the eight cover bolts and withdraw the pump cover from the pump body. Use care not to damage the finished faces of the pump body and cover.

2. Withdraw the drive shaft, drive gear and gear retaining ball as an assembly from the pump body.

3. Press the drive shaft just far enough to remove the steel locking ball. Then, invert the shaft and gear assembly and press the shaft from the gear. Do not *misplace the steel ball*. Do not press the squared end of the shaft through the gear as slight score marks will damage the oil seal contact surface.

4. Remove the driven shaft and gear as an assembly from the pump body. Do not remove the gear from the shaft. The driven gear and shaft are serviced only as an assembly.

5. Remove the relief valve plug.

6. Remove the valve spring, pin and relief valve from the valve cavity in the pump body.

7. If the oil seals need replacing, remove them with tool J 1508-7, as shown in Fig. 4, by clamping the pump body in a bench vise and screwing the threaded end of the tool shaft into the outer oil seal (seal nearest to the bolting flange). Then tap the pilot end of the shaft with a hammer to remove the seal. Repeat this operation to remove the inner oil seal.

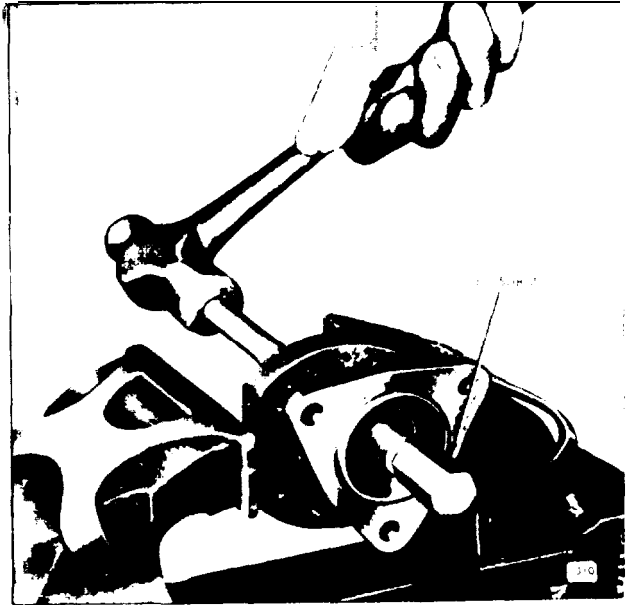


Fig. 4 - Removing Oil Seals

valve is scored and cannot be cleaned up with fine emery cloth or crocus cloth, it must be replaced

### Inspection

Clean all of the parts in clean fuel oil and dry them with compressed air.

Oil seals, once removed from the pump body, must be discarded and replaced with new seals. The lips of the oil seals must fit snug around the pump shaft and must be free of nicks or cracks.

Check the pump gear teeth for scoring, chipping or wear. Check the ball slot in the drive gear for wear. If necessary, replace with a new gear.

Inspect the drive and driven shafts for scoring or wear. Replace with new shafts if necessary. The driven shaft is serviced as a gear and shaft assembly only.

The mating faces of the pump body and cover must be flat and smooth and fit tightly together. Any scratches or slight damage may result in pressure leaks. Also check for wear at areas contacted by gears and shafts. Replace the cover or body if necessary.

The relief valve must be free from score marks and burrs and fit its seat in the pump body. If the relief

### Assemble Fuel Pump

1. Lubricate the lips of the oil seals with a light coat of vegetable shortening, then install the oil seals in the pump body as follows.

- a. Place the inner oil seal on the pilot of the installer handle J 1508-8 so that the lip of the seal will face toward the shoulder on the tool.
- b. With the pump body supported on wood blocks, insert the oil seal and tool in the pump body and drive the seal in until it bottoms in the counterbore (Fig. 6)
- c. Place the shorter end of the adaptor J 1508-9 over the pilot and against the shoulder of the installer handle. Place the outer oil seal on the pilot of the installer handle with the top of the seal facing the adaptor. Then, insert the pilot of the installer handle into the pump body and drive the seal in (Fig. 7) until the shoulder of the adaptor contacts the pump body). Thus the oil seals will be positioned so that the space between them will correspond with the drain holes located in the bottom of the pump body.

2. Clamp the pump body in a bench vise (equipped with soft jaws) with the valve cavity up. Lubricate the outside diameter of the valve and place it in the cavity

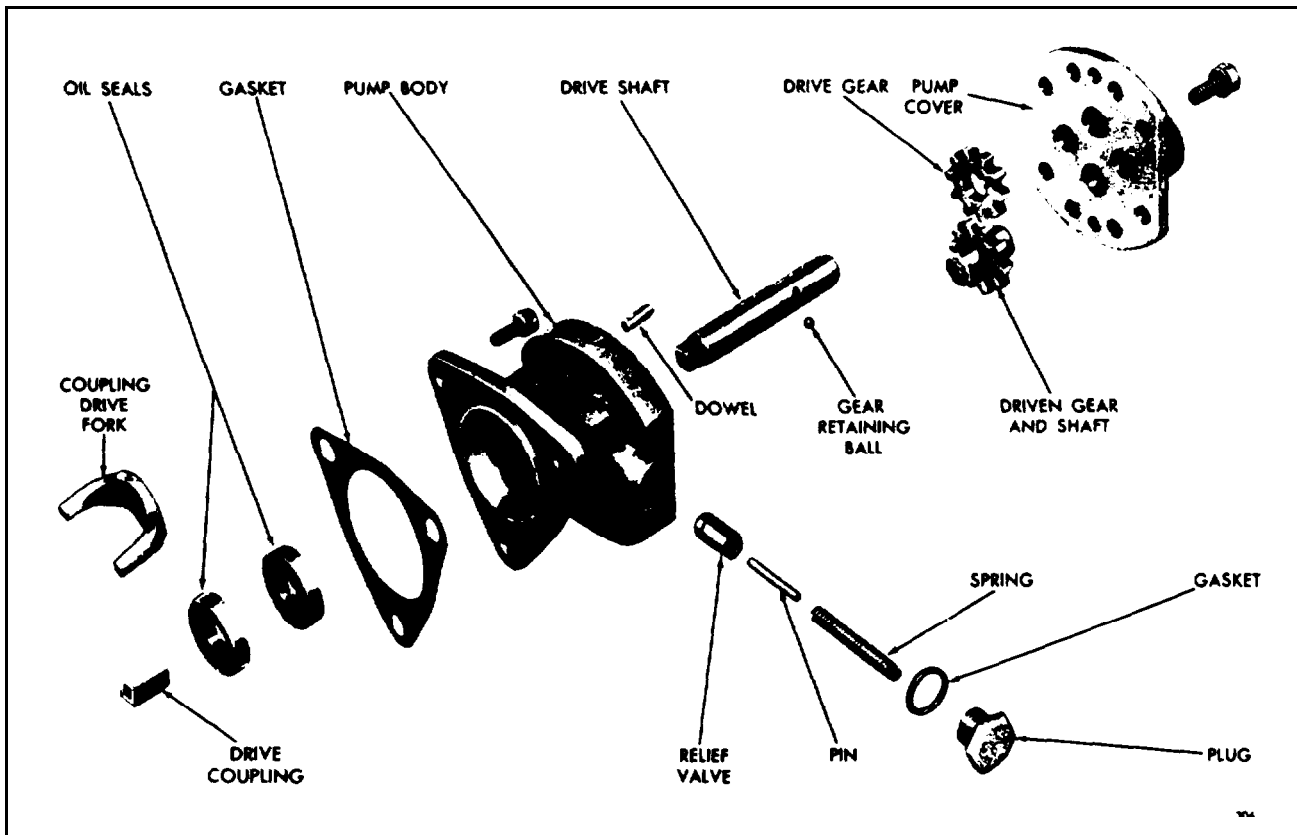


Fig. 5 - Fuel Pump Details and Relative Location of Parts (Right Hand Pump Shown)

with the hollow end up. Insert the spring inside of the valve and the pin inside of the spring. With a new gasket in place next to the head of the valve plug, place the plug over the spring and thread it into the pump body. Tighten the plug.

3. Install the pump drive gear over the end of the drive shaft which is not squared (so the slot in the gear will face the plain end of the shaft). This operation is very important, otherwise fine score marks caused by pressing the gear into position from the square end of the shaft may cause rapid wear of the oil seals. Press the gear beyond the gear retaining ball detent. Then, place the ball in the detent and press the gear back until the end of the slot contacts the ball.

4. Lubricate the pump shaft and insert the square end of the shaft into the opening at the gear side of the pump body and through the oil seals as shown in Fig. 8.

5. Place the driven shaft and gear assembly in the pump body.

**CAUTION:** The driven gear must be centered on the shaft to give proper end clearance. Also, the chamfered end of the gear teeth of the

production gear must face the pump body. If a service replacement gear with a slot is used, the slot must face toward the pump cover.

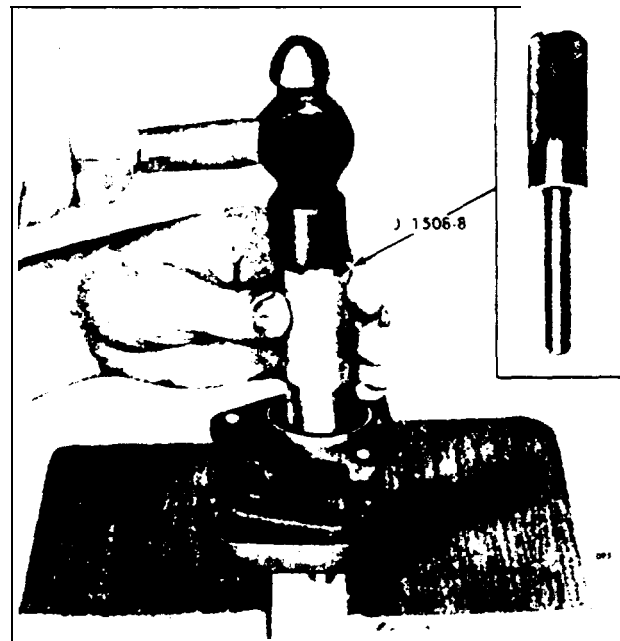


Fig. 6 - Installing Inner Oil Seal

6. Lubricate the gears and shafts with clean engine oil.

7. Apply a thin coating of quality sealant on the face of the pump cover outside of the gear pocket area. Then, place the cover against the pump body with the two dowel pins in the cover entering the holes in the pump body. The cover can be installed in only one position over the two shafts.

**CAUTION:** The coating of sealant must be extremely thin since the pump clearances have been set up on the basis of metal-to-metal contact. Too much sealant could increase the clearances and affect the efficiency of the pump. Use care that sealant is not squeezed into the gear compartment, otherwise damage to the gears and shafts may result.

8. Secure the cover in place with eight bolts and lock washers, tightening the bolts alternately and evenly.

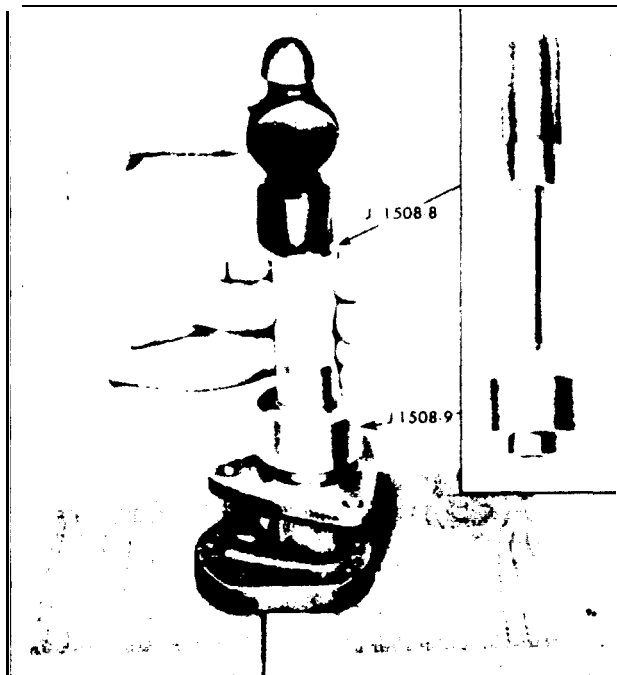


Fig. 7 - Installing Outer Oil Seal

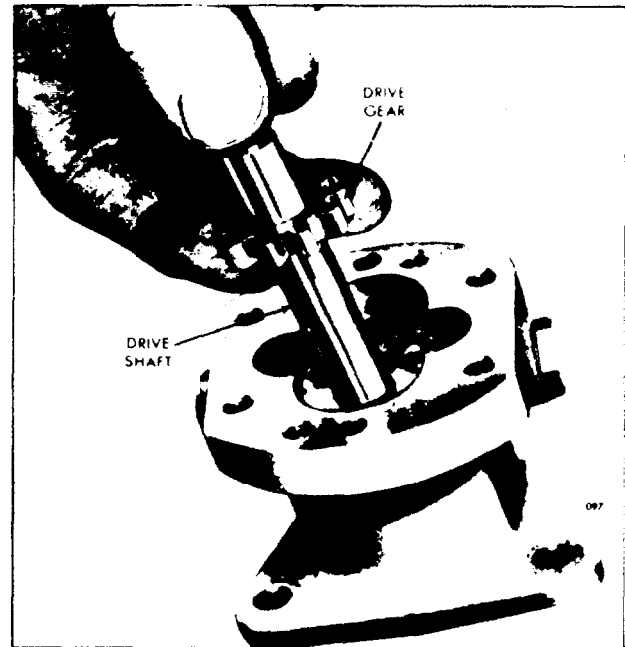


Fig. 8 - Inserting Fuel Pump Drive Shaft and Gear Assembly through Oil Seals

9. After assembly, rotate the pump shaft by hand to make certain that the parts rotate freely. When the shaft does not rotate freely, attempt to free it by tapping a corner of the pump.

10. If the pump is not to be used immediately, place plastic shipping plugs in the inlet and outlet openings to prevent dirt or other foreign material from entering the pump.

### Install Fuel Pump

1. Affix a new gasket to the pump body and locate the pump drive coupling over the square end of the fuel pump drive shaft.

2. Install the fuel pump on the engine and secure it with three bolt and washer assemblies.

3. Connect the inlet and outlet fuel lines to the fuel pump.



## FUEL PUMP DRIVE

The fuel pump on In-line engines is driven by the governor weight shaft by means of a drive coupling.

A drive adaptor attached to the balance shaft gear registers with a drive fork on the fuel pump shaft to provide a drive for the pump. Servicing of the fuel pump and drive on an In-Line engine is covered in Section 2.2





## MECHANICAL GOVERNORS

Horsepower requirements on an engine may vary due to fluctuating loads; therefore, some method must be provided to control the amount of fuel required to hold the engine speed reasonably constant during load fluctuations. To accomplish this control, a governor is introduced in the linkage between the throttle control and the fuel injectors. The following type of mechanical governor used:

### 1. Limiting Speed Mechanical Governor.

Engines requiring a minimum and maximum speed control, together with manually controlled intermediate speeds, are equipped with a limiting speed mechanical governor.

The governor has an identification plate located on the control housing, containing the governor assembly number, type, idle speed range and drive ratio. The maximum engine speed, not shown on the identification plate, is stamped on the option plate attached to the valve rocker cover.

### Check Governor Operation

Governor difficulties are usually indicated by speed variations of the engine; however, it does not necessarily mean that all such speed fluctuations are caused by the governor. Therefore, when improper speed variations are present, check the engine as follows:

1. Make sure the speed changes are not the result of excessive load fluctuations.
2. Check the engine to be sure that all of the cylinders are firing properly (refer to Section 15.2). If any cylinder is not firing properly, remove the injector, test

it and, if necessary, recondition it as outlined in Section 2.1 or 2.1.1.

3. Check for bind that may exist in the governor operating mechanism or in the linkage between the governor and the injector control tube.

With the fuel rod connected to the injector control tube lever, the mechanism should be free from bind throughout the entire travel of the injector racks. If friction exists in the mechanism, it may be located and corrected as follows:

1. If an injector rack sticks or moves too hard, it may be due to the injector hold-down clamp being too tight or improperly positioned. To correct this condition, loosen the injector clamp, reposition it and tighten the clamp bolt to 20-25 lb-ft torque.

2. An injector which is not functioning properly may have a defective plunger and bushing or a bent injector rack. Recondition a faulty injector as outlined in Section 2.1 or 2.1. 1.

3. An injector rack may bind as the result of an improperly positioned rack control lever. Loosen the rack control lever adjusting screws. If this relieves the bind, relocate the lever on the control tube and position the rack as outlined in Section 14.

4. The injector control tube may bind in its support brackets, thus preventing free movement of the injector racks to their no-fuel position due to tension of the return spring. This condition may be corrected by loosening and realigning the control tube supporting brackets. If the control tube support brackets were loosened, realigned and tightened, the injector racks must be repositioned as outlined in Section 14.

5. A bent injector control tube return spring may cause friction in the operation of the injector control tube. If the spring has been bent or otherwise distorted, install a new spring.

6. Check for bind at the pin which connects the fuel rod to the injector control tube lever; replace the pin, if necessary.

If, after making these checks, the governor fails to control the engine properly, remove and recondition the governor.



## LIMITING SPEED MECHANICAL GOVERNOR

### IN-LINE ENGINE

The limiting speed mechanical governor (Fig. 1) performs the following functions:

1. Controls the engine idle speed.
2. Limits the maximum operating speed of the engine.

The mechanical engine governors are identified by a name plate attached to the governor housing. The letters D.W.-L.S. stamped on the name plate denote a double-weight limiting speed governor.

The governor is mounted on the rear end plate of the engine and is driven by a gear that extends through the end plate and meshes with either the camshaft gear or the balance shaft gear, depending upon the engine model.

### Operation

The governor holds the injector racks in the advanced fuel position for starting when the throttle control lever is in the idle position. Immediately after starting, the governor moves the injector racks to the position required for idling.

The centrifugal force of the revolving governor low and high speed weights is converted into linear motion which is transmitted through the riser and operating shaft to the operating shaft lever. One end of this lever operates against the high and low speed springs through the spring cap, while the other end provides a moving fulcrum on which the differential lever pivots.

When the centrifugal force of the revolving governor weights balances out the tension on the high or low speed spring (depending on the speed range), the governor stabilizes the engine speed for a given setting of the speed control lever.

In the low speed range, the centrifugal force of the low and high speed weights together operate against the low speed spring. As the engine speed increases, the centrifugal force of the low and high speed weights together compresses the low speed spring until the low speed weights are against their stops, thus limiting their travel, at which time the low speed spring is fully compressed and the low speed spring cap is within .0015 " of the high speed spring plunger.

Throughout the intermediate speed range the operator has complete control of the engine because the low speed gap is closed and the low speed weights are

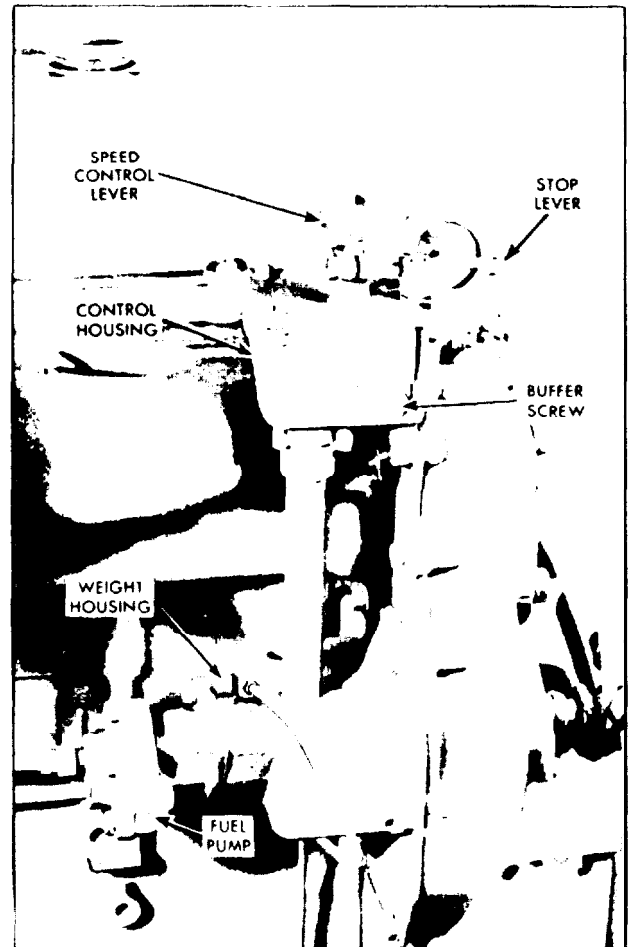


Fig. 1 - Governor Mounting

against their stops, and the high speed weights are not exerting enough force to overcome the high speed spring. As the speed continues to increase, the centrifugal force of the high speed weights increases until this force can overcome the high speed spring and the governor again takes control of the engine, limiting the maximum engine speed.

A fuel rod, connected to the differential lever and the injector control tube lever, provides a means for the governor to change the fuel settings of the injector rack control levers.

The engine idle speed is determined by the force exerted by the governor low speed spring. When the governor speed control lever is placed in the idle position, the engine will operate at the speed where the force exerted by the governor low speed weights will equal the force exerted by the governor low speed spring.

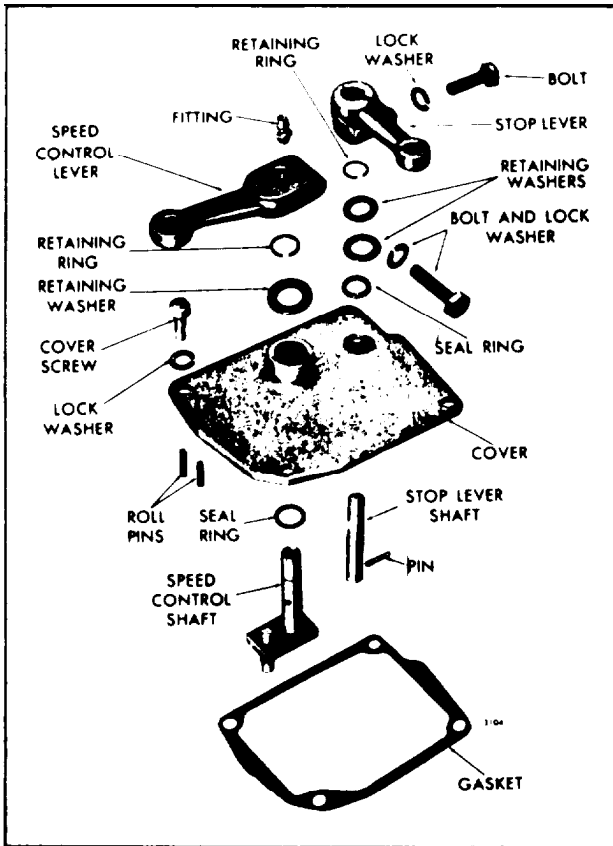


Fig. 2 Governor Cover Details and Relative Location of Parts

Adjustment of the engine idle speed is accomplished by changing the force on the low speed spring by means of the idle speed adjusting screw. Refer to the tune-up section for idle speed adjustment.

The engine maximum no-load speed is determined by the force exerted by the high speed spring. When the throttle control lever is placed in the maximum speed position the engine will operate at a speed where the force exerted by the governor high speed weights will equal the force exerted by the governor high speed spring.

Adjustment of the maximum no-load speed is accomplished by changing the tension on the high speed spring. Refer to the tune-up section for the maximum no-load speed adjustment.

### Lubrication

The governor is lubricated by oil splash from the engine gear train and by a pressure line on current engine models. The oil passes through the governor weight housing on to the shaft and weight assemblies. The oil is distributed to the various moving parts

within the governor by the revolving weights. Surplus oil drains from the governor through holes in the governor bearing retainer back to the engine gear train.

### Remove Governor from Engine

Before removing the governor from the engine, the operation should be checked as outlined in Section 2.7. If the governor fails to control the engine properly after performing these checks, remove and recondition it.

1. Disconnect the linkage to the governor control levers.
2. Remove the governor cover and gasket.
3. Detach the spring housing from the governor housing by removing the two bolts and lock washers.
4. Loosen the high speed spring retainer lock nut with spanner wrench J 5345-5 and remove the spring assembly.
5. Loosen the fuel rod cover hose clamps.
6. Clean and remove the rocker cover from the cylinder head.
7. Disconnect the fuel rod from the injector control tube lever. Remove the clip that holds the fuel rod to the differential lever and lift the fuel rod from the lever.
8. Detach the fuel pump by disconnecting the fuel lines and removing the three bolts. Also, disconnect the lubricating oil line, if used.
9. Remove the five bolts from the governor weight housing and the two bolts from the governor control housing.
10. Detach the governor and gasket from the engine.

### Disassemble Governor Cover

1. Remove the return spring and clip from a single lever cover only, then loosen the governor speed control lever retaining bolt and lift the control lever from the speed control shaft (Fig. 2).

2. Remove the retaining ring and washer. Withdraw the speed control shaft from the cover.
3. Remove the seal ring from the cover.

**NOTE:**

The double lever cover has the seal ring at the bottom of the cover.

4. Loosen the governor stop lever retaining bolt and lift the lever from the stop lever shaft.
5. Remove the retaining ring and washers and withdraw the stop lever shaft from the cover.
6. Remove the seal ring from the top of the cover.

**Disassemble Governor Weight Housing**

1. Remove the gear retaining nut from the shaft, then remove the gear, key and spacer from the shaft.
2. Remove the small screw holding the bearing retainer in place.
3. Turn the bearing support until the large opening is centered over the fork on the operating shaft.
4. Lift up on the weight shaft until there is enough clearance for a 5/16 " socket wrench to be placed on

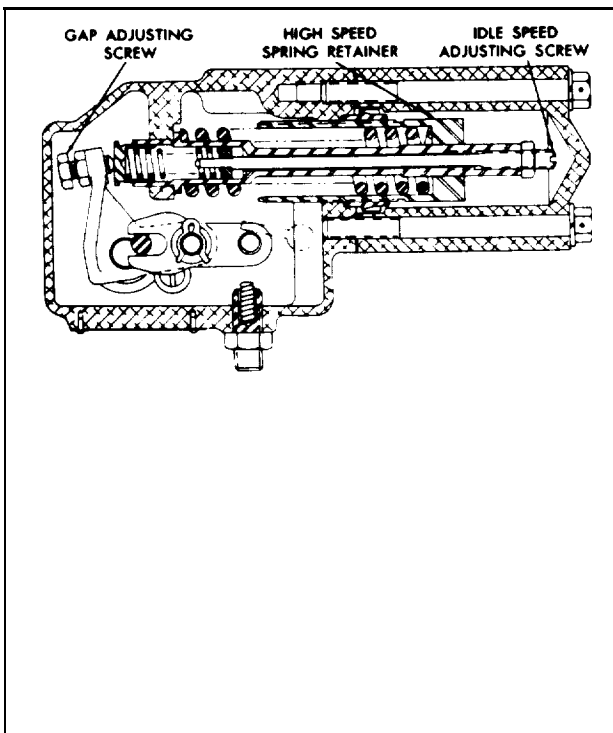


Fig. 3 Industrial  
Type Governor Assembly

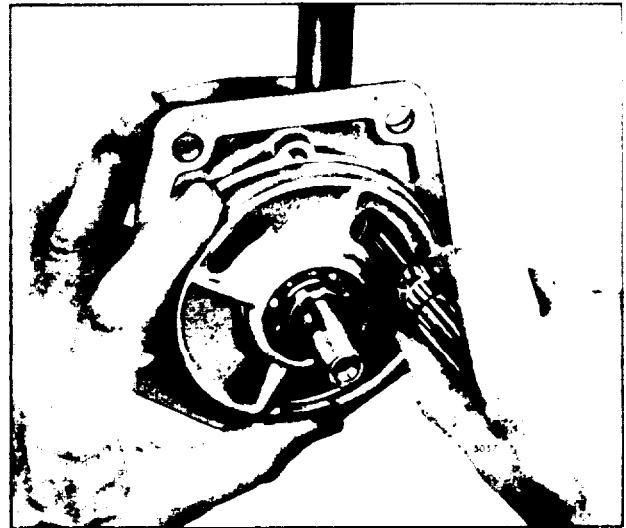


Fig. 4 Removing Fork from Operating Shaft

- the screws that hold the fork to the operating shaft (Fig. 4). Then remove the two screws and washers.
5. Lift the shaft and weight assembly out of the governor weight housing.
6. Remove the screw and washers holding the bearing in the control housing and lift the shaft assembly out of the housing.
7. Place a rod approximately 18 " long through the control housing and knock the plug out of the bottom of the weight housing.
8. Remove the snap ring and press the bearing from the weight housing.
9. Remove the spring clip and washer from the governor operating shaft lever and remove the governor differential lever.
10. Press the bearing and operating shaft lever from the operating shaft, if necessary.
11. If necessary, disassemble the control housing from the weight housing.

**Disassemble Weight Shaft Assembly**

1. Press the bearing retainer from the weight shaft.
2. If necessary, remove the snap ring and press the bearing from the bearing retainer.
3. Remove the weight pin retainers from the governor weight pins, then drove the pins out of the carrier and weights. Remove the governor weights.

**IMPORTANT:** Punch mark the carrier at the retainer end of the weight pins so the pins may be placed in the proper position when reinstalling the weights in the carrier.

**NOTE:** Drive the pins out of the carrier from the weight pin retainer end.

4. Slide the riser and bearing assembly from the shaft. Do not disassemble the bearing since the riser and bearing are serviced only as an assembly.

### Inspection

Immerse all of the governor parts in a suitable cleaning fluid to loosen and remove all foreign material. Use a bristle brush and compressed air as necessary to ensure cleanliness of all parts.

Examine the bearings for any indications of corrosion or pitting. Lubricate each bearing with light engine oil; then, while holding the bearing inner race from turning, revolve the outer race slowly by hand and check for rough spots. Replace the bearings if rough or tight spots are detected.

The lower governor drive components have been revised to reduce the clearance between the riser and the weight shaft. With this change, additional lubrication is provided to the governor by an oil line connected between the oil gallery in the cylinder block and the governor weight housing. When replacing the riser assembly, shaft and carrier assembly, or the complete governor assembly, the new oil line must be installed to provide adequate lubrication.

Examine the riser thrust bearing for excessive wear, flat spots or corrosion. If any of these conditions exist, install a new riser and bearing assembly. Examine the weight carrier pins for wear and replace them if necessary.

Inspect the spring seats, plungers, adjusting screws, lock nuts and other parts of the control housing for defects that might affect governor operation.

Inspect the weight carrier, weights and retaining pins for wear. The current single-weight carrier replaces the former double-weight carrier.

Inspect the fuel pump drive end of the weight shaft. Replace the shaft if the end is worn or rounded.

Inspect the bushing in the weight housing. Replace the bushing if it is worn excessively.

Inspect the spring seats, plungers, adjusting screws,

lock nuts, and other parts of the control housing for defects that might affect the governor operation.

### Assemble Governor Cover

1. Place a new seal ring to the counterbore of the cover (Fig. 2).

**NOTE:** The single lever cover has the seal ring at the top of the cover. The double lever cover has the seal ring at the bottom of the cover.

2. Lubricate the speed control shaft with engine oil, then slide the shaft through the cover. Install the washer and retaining ring on the shaft.

3. Place the speed control lever over the shaft and secure it with the bolt and lock washer.

4. On double lever covers, lubricate the stop lever shaft with engine oil, then slide the shaft through the cover.

5. Place the seal ring in the counterbore of the shaft opening, then install the washers over the shaft. Lock the shaft in place with the retaining ring.

6. Place the stop lever on the shaft and secure it with the bolt and lock washer.

### Assemble Control Housing

1. Install a 1/8 " pipe plug in the tapped hole in the side of the control housing.

2. If necessary, assemble the control housing to the weight housing, using a good quality sealant between the tube and the housings.

3. Install the governor operating shaft lower bearing, numbered side out, in the weight housing. Install the snap ring to secure the bearing (Fig. 5).

4. Apply a quality sealant around the edge of a new plug and tap it in place.

5. Start the governor operating shaft upper bearing over the upper end of the operating shaft. Support the lower end of the shaft on the bed of an arbor press. Use a sleeve and press down on the inner race of the bearing until it contacts the shoulder of the operating shaft.

6. Place the operating lever on the shaft with the flat surface on the shaft registering with the flat surface on the lever. Press the lever tight against the bearing on the shaft.

7. Lubricate both bearings with engine lubricating oil. Insert the lever and operating shaft assembly in the control housing. Guide the lower end into the bearing.

8. Secure the upper operating shaft bearing with the round head retaining screw and washers.

9. Place the fork on the operating shaft with the two cam faces facing the fuel pump.

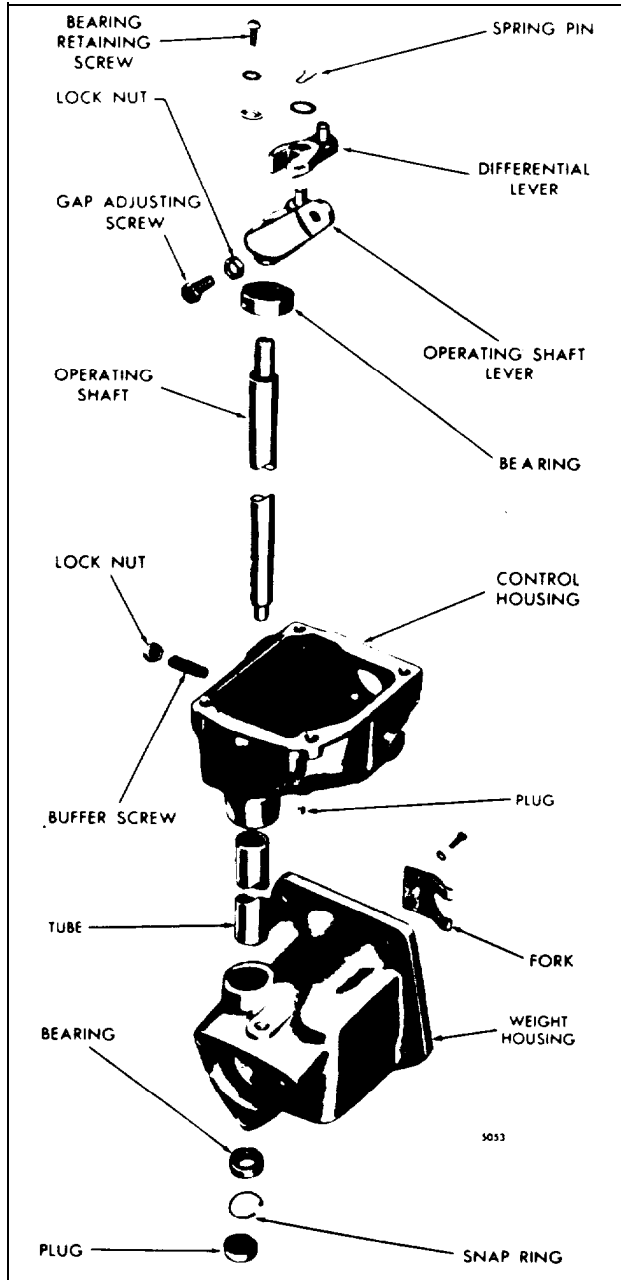


Fig. 5 - Governor Housings and Relative Location of Parts

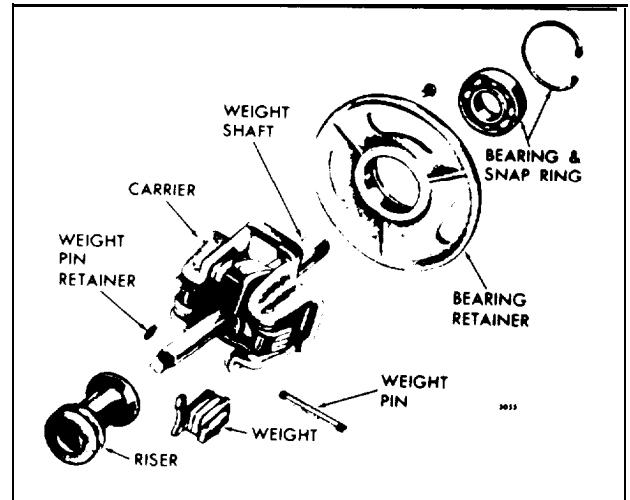


Fig. 6 - Governor Weight Details and Relative Location of Parts

10. Secure the fork to the operating shaft with two screws and lock washers.

11. Place the differential lever over the operating shaft lever pin and secure it in place with a washer and spring pin.

#### Assemble Governor Weight and Shaft Assembly

1. If the carrier was removed from the weight shaft, press the carrier on the shaft so as to allow a clearance of .001 " to .006 " between the shaft shoulder and the rear face of the carrier.

2. Press the governor weight shaft bearing into the bearing retainer by pressing on the outer race of the bearing (Fig. 6).

3. Install the snap ring in the retainer with the flat side of the ring facing the bearing.

4. Press the bearing retainer on the weight shaft until the bearing is against the shoulder on the shaft.

**NOTE:** To prevent any damage, press only on the inner race of the bearing.

5. Place the riser on the weight shaft.

6. Position the low speed weights, identified by the short cam arm and three center laminations, each approximately 9/64 " thick, on the weight carrier. Drive the weight pins in place and install the weight pin retainers



7. Install the high speed weights in the same way. The high speed weights are identified by the long cam arm and three center laminations; the middle lamination is 3/16 " thick and the outer ones are 1/8 " thick.

**NOTE:** The weight pins must be reinstalled in the same positions from which they were removed.

8. Slide the shaft and weight assembly into the weight housing with the riser bearing placed behind the fork.

9. Turn the bearing retainer until the large opening is over the fork on the operating shaft. Tighten the two screws holding the fork to the operating shaft with a 5/16 " socket wrench.

10. Turn the bearing retainer until the counterbored hole in the retainer and housing line up. Install the screw to secure the bearing retainer to the weight housing.

11. Place the drive gear spacer on the shaft. Install the key in the keyway and place the gear on the shaft.

12. Tap the gear until the spacer is against the bearing. Install the drive gear retaining nut and tighten it to 125-135 lb-ft torque.

### Install Governor

Refer to Fig. 1 and install the governor on the engine as follows:

1. Attach the fuel rod to the differential lever and secure it in place with a washer and spring pin.

2. Attach a new gasket to the governor weight housing.

3. Insert the end of the fuel rod through the hose and clamps and into the opening in the cylinder head and position the governor weight housing against the engine rear end plate; the teeth on the governor drive gear must mesh with the teeth on the camshaft gear or balance shaft gear.

4. Install the three 12-point head bolts with copper washers in the governor weight housing next to the cylinder block. Install the two remaining bolts with steel washers and lock washers. Tighten the bolts to 35 lb-ft torque.

5. Install the two governor control housing attaching bolts and lock washers. Tighten the bolts to 10-12 lb-ft torque.

6. On current engines, install the lubricating oil line

and fittings to the weight housing and the cylinder block.

7. Align and tighten the hose clamps on the fuel rod covers.

8. Attach the fuel rod to the injector control tube lever with a pin and cotter pin.

9. Assemble the industrial governor spring mechanism as follows:

a. Thread the spring retainer lock nut on the retainer.

b. Thread the idle speed adjusting screw on the governor spring plunger.

c. Place the high speed spring over the governor spring plunger.

d. Lubricate and install the spring plunger assembly in the spring retainer and secure it with a lock nut so that approximately 1/4 " of the idle speed adjusting screw extends beyond the nut

e. Lubricate and insert the spring seat, low speed spring and the spring cap in the open end of the spring plunger.

10. Thread the spring retainer and spring assembly into the governor housing and tighten the lock nut finger tight until an engine tune-up is performed.

11. Assemble the vehicle governor spring mechanism as follows:

a. Back off the lock nut at the outer end of the adjusting screw to within 1/16 " of the slotted end of the screw.

b. Slip the shims, if used, and the high speed spring over the plunger. Position the retainer over the high speed spring and insert the adjusting screw into the plunger.

c. Position the seat and cap on the ends of the low speed spring and insert the assembly into the hollow end of the plunger.

d. Insert the spring and plunger assembly into the control housing and tighten the retainer nut with spanner wrench J 5895.

12. Thread the spring retainer and spring assembly into the governor; the lock nut should be finger tight until an engine tune-up is performed.

13. Use a new gasket when installing the governor cover and lever assembly. Be sure the speed control shaft pin engages the slot in the differential lever and the stop lever is in the correct position. Secure the cover with four screws and lock washers.

14. Install the return spring and spring clip (single lever cover only).

15. Add lubricant to the speed control shaft through the grease fitting on top of the shaft.

16. Connect the linkage to the governor control levers.

17. Install the fuel pump and fuel lines.

18. Perform an engine tune-up as outlined in Section 14.



## SHOP NOTES-TROUBLE SHOOTING-SPECIFICATIONS-SERVICE TOOLS

### SHOP NOTES

#### CHECKING INJECTOR TESTER J 9787

The injector tester J 9787 should be checked monthly to be sure that it is operating properly. The following check can be made very quickly using test block J 9787-49.

Fill the supply tank in the injector tester with clean injector test oil J 8130. Open the valve in the fuel supply line. Place the test block on the injector locating plate and secure the block in place with the fuel inlet connector clamp. Operate the pump handle until all of the air is out of the test block; then clamp the fuel outlet connector onto the test block. Break the connection at the gage and operate the pump handle until all of the air bubbles in the fuel system disappear. Tighten the connection at the gage. Operate the pump handle to pressurize the tester fuel system to 2400-2500 psi. Close the valve on the fuel supply line. After a slight initial drop in pressure, the pressure should remain steady. This indicates that the injector tester is operating properly. Open the fuel valve and remove the test block.

If there is a leak in the tester fuel system, it will be indicated by a drop in pressure. The leak must be located, corrected and the tester rechecked before checking an injector.

Occasionally dirt will get into the pump check valve in the tester, resulting in internal pump valve leakage and the inability to build up pressure in the tester fuel system. Pump valve leakage must be corrected before an injector can be properly tested.

When the above occurs, loosen the fuel inlet connector clamp and operate the tester pump handle in an attempt to purge the dirt from the pump check valve. A few quick strokes of the pump handle will usually correct a dirt condition. Otherwise, the pump check valve must be removed, lapped and cleaned, or replaced.

If an injector tester supply or gage line is damaged or broken, install a new replacement line (available from the tester manufacturer). Do not shorten the old lines or the volume of test oil will be altered sufficiently to give an inaccurate valve holding pressure test.

If it is suspected that the lines have been altered, i.e. by shortening or replacing with a longer line, check the accuracy of the tester with a master injector on which the pressure holding time is known. If the pressure holding time does not agree with that recorded for the master injector, replace the lines.

#### REFINISH LAPPING BLOCKS

As the continued use of the lapping blocks will cause



Fig. 1 - Refinishing Lapping Blocks

worn or low spots to develop in their lapping surfaces, they should be refinished from time to time.

It is a good practice, where considerable lapping work is done, to devote some time each day to refinishing the blocks. The quality of the finished work depends to a great degree on the condition of the lapping surfaces of the blocks.

To refinish the blocks, spread some 600 grit lapping powder of good quality on one of the blocks. Place another block on top of this one and work the blocks together as shown in Fig. 1. Alternate the blocks from time to time. For example, assuming the blocks are numbered 1, 2 and 3, work 1 and 2 together, then 1 and 3, and finish by working 2 and 3 together. Continue this procedure until all of the blocks are perfectly flat and free of imperfections.

Imperfections are evident when the blocks are clean and held under a strong light. The blocks are

satisfactory when the entire surface is a solid dark grey. Bright or exceptionally dark spots indicate defects and additional lapping is required.

After the surfaces have been refinished, remove the

powder by rinsing the lapping blocks in trichloroethylene and scrubbing with a bristle brush.

When not in use, protect the lapping blocks against damage and dust by storing them in a close fitting wooden container.

### INJECTOR TIMING

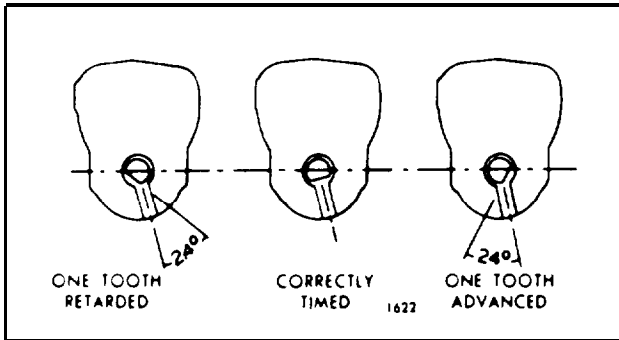


Fig. 2 Injector Rack-to-Gear Timing

If it is suspected that a fuel injector is "out of time", the injector rack-to-gear timing may be checked without disassembling the injector.

A hole located in the injector body, on the side opposite the identification tag, may be used to visually determine whether or not the injector rack and gear are correctly timed. When the rack is all the way in (full-fuel position), the flat side of the plunger will be visible in the hole, indicating that the injector is "in time". If the flat side of the plunger does not come into full view (Fig. 2) and appears in the "advanced" or "retarded" position, the injector should be disassembled and the rack-to-gear timing corrected.

### FUEL INJECTOR SPRAY TIPS

Due to a slight variation in the size of the small orifices in the end of each spray tip, the fuel output of an injector may be varied by replacing the spray tip.

Flow gage J 21085 may be used to select a spray tip that will increase or decrease the fuel injector output for a particular injector after it has been rebuilt and tested on the comparator.

### EFFECT OF PRE-IGNITION ON FUEL INJECTOR

Pre-ignition is due to ignition of fuel or lubricating oil in the combustion chamber before the normal injection period. The piston compresses the burning mixture to excessive temperatures and pressures and may eventually cause burning of the injector spray tip and lead to failure of the injectors in other cylinders.

When pre-ignition occurs, all of the injector

assemblies should be removed and checked for burned spray tips or enlarged spray tip orifices.

Before replacing the injectors, check the engine for the cause of pre-ignition to avoid a recurrence of the problem. Check for oil pull-over from the oil bath air cleaner, damaged blower housing gasket, defective blower oil seals, high crankcase pressure, plugged air box drains, ineffective oil control rings or dilution of the lubricating oil.

### BLUING INJECTOR BODIES AND NUTS

The appearance of the injector body and nut of a rebuilt injector can be enhanced with an oxide finish obtained through a dipping process known as "bluing". Pre-mixed compounds are available commercially for preparing the necessary solutions. Detailed instructions are usually provided with the commercial compounds. An effective bluing solution can be prepared in the service shop by mixing the following materials:

6 lbs. of sodium hydroxide per gallon of water

3-1/2 lbs. of sodium nitrite per gallon of water

1 ounce of phosphoric acid per gallon of water

The procedure usually follows five (5) steps in sequence:

1. An alkaline solution bath (180 °-212 °F.) to preclean.
2. A hot or cold water rinse.

3. The bluing solution bath.
4. A cold water rinse.
5. An engine lubricating oil bath (180 ° -212 °F.) to rust proof. The bluing tank should be a double walled, 1-1/2 " installed type of No. 10 gage steel.

The temperature of the sodium hydroxide, sodium nitrite and phosphoric acid solution for bluing steel parts should be 295 ° to 305 °F. The boiling point of the solution is directly related to its concentration. Therefore, when the boiling point is too high, the solution is 100 concentrated and the volume of water is probably low. When this occurs, the boiling point can be reduced to 300 °F. by adding water. The parts should be placed in the solution for 15 to 30 minutes.

It is extremely important that the parts be free of oil before placing them in the bluing bath. Oil will produce a varied color part.

There are several important safety precautions to be followed for preparing and using the solutions. Protective clothing such as rubber gloves, rubber aprons and protective glasses contribute to the safety of personnel carrying out the procedures. When preparing the solutions, *the compounds should be added to the water* and not water added to the compounds. The dipping tanks should be properly vented and all fumes exhausted to the outside, atmosphere. Since temperatures of the caustic solutions exceed the boiling point of water, any splashing encountered while adding make-up water can cause serious burns. *Always add water slowly and with extreme care.* When the parts to be dipped are cold, caution should be taken to avoid splashing that might occur when the cold parts come in contact with the hot solutions. A heavy wire-screen type basket, suitable for holding a quantity of injector bodies, is recommended for dipping the parts in the solutions.

### INJECTOR COMPARATOR AND CALIBRATOR READINGS

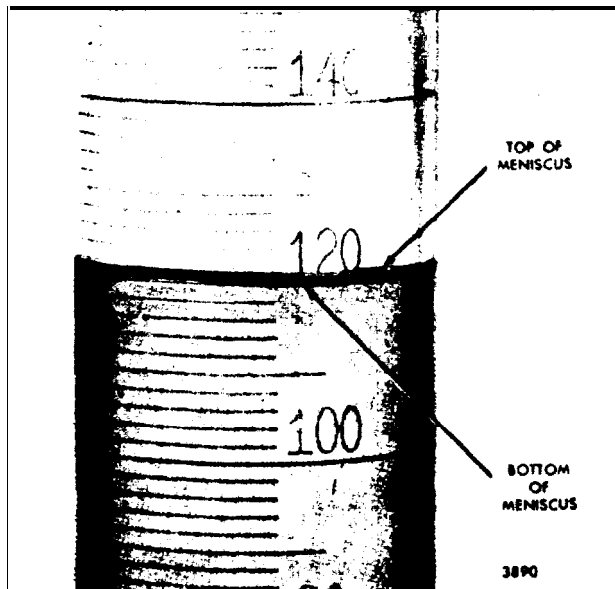


Fig. 3 - Checking Fuel Output

Several factors affect the injector comparator and calibrator output readings. The four major items are:

1. **Operator Errors:** If the column of liquid in the vial is read at the top of the meniscus instead of at the bottom, a variation of 1 or 2 points will result. Refer to Fig. 3.
2. **Air In Lines:** This can be caused by starting a test

before the air is purged from the injector and lines, or from an air leak on the vacuum side of the pump.

3. **Counter Improperly Set:** The counter is set at the factory to divert the injector output at 1,000 strokes,

This should not be confused with counter overrun that will vary from 2 to 6 digits, depending upon internal friction. The fuel diversion is accomplished electrically and will occur at 1,000 strokes (if properly set) although the counter may overrun several digits.

4. **Test Oil:** A special test oil is supplied with the calibrator and the comparator and should always be used. If regular diesel fuel oil (or any other liquid) is used, variations are usually noted because of the affect of the oil on the solenoid valve and other parts.

The fuel oil introduced into the test oil when the fuel injector is placed in the comparator or calibrator for a calibration check contaminates the test oil. Therefore, it is important that the comparator or calibrator have the test oil and test oil filter changed every six months, or sooner if necessary.

In addition, other malfunctions such as a slipping drive belt, low level of fuel oil, a clogged filter, a defective fuel pump or leaking line connections should cause bad readings. A frequent check should be made for any of these tell-tale conditions.

## FUEL INJECTOR PLUNGERS

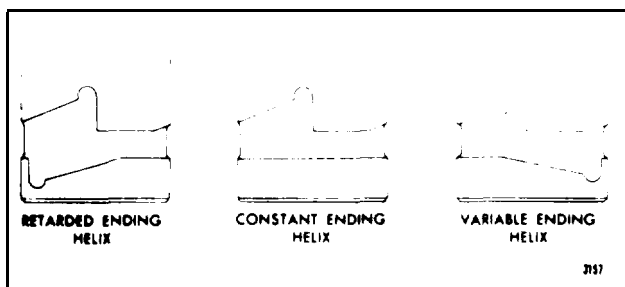


Fig. 4 Types of Injector Plungers

The fuel output and the operating characteristics of an

injector are, to a great extent, determined by the type of plunger used. Three types of plungers are illustrated in Fig. 4. The beginning of the injection period is controlled by the upper helix angle. The lower helix angle retards or advances the end of the injection period. Therefore, it is imperative that the correct plunger is installed whenever an injector is overhauled. If injectors with different type plungers (and spray tips) are mixed in an engine, erratic operation will result and may cause serious damage to the engine or to the equipment which it powers.

Injector plungers cannot be reworked to change the output or operating characteristics. Grinding will destroy the hardened case and result in chipping at the helices and seizure or scoring of the plunger.

## REPLACING INJECTOR FOLLOWER SPRING

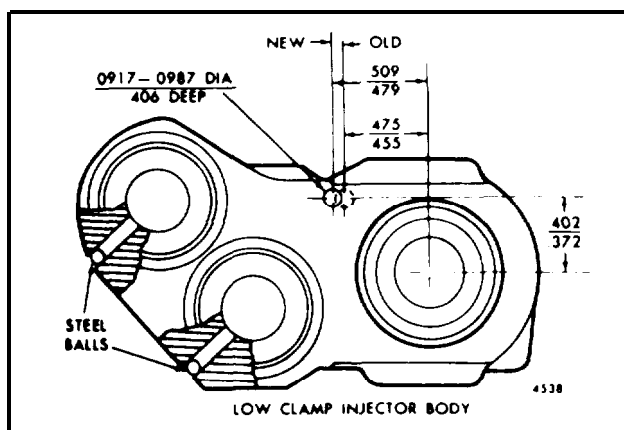


Fig. 5 - Relocating Timing Pin Hole in Injector Body

When replacing the injector follower spring (.120" diameter wire) in a low clamp body injector built prior to June, 1965 with a new injector follower spring (.142" diameter wire), it will be necessary to relocate the timing pin holes as illustrated in Fig. 5, or grind .022" from the side of the injector timing gage shank, to permit continued use of the injector timing gage.

## REFINISHING FACE OF INJECTOR FOLLOWER

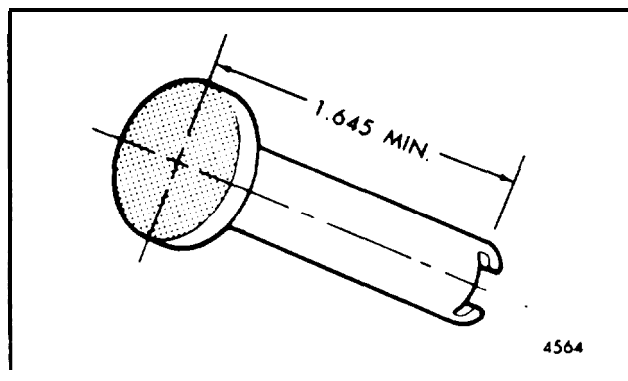


Fig. 6 - Injector Follower

When refinishing the face of an injector follower, it is extremely important that the distance between the injector face and the plunger slot is not less than the 1.645" minimum shown in Fig. 6.

If the distance between the injector face and the plunger slot is less than 1.645", the height of the follower in relation to the injector body will be altered and proper injector timing cannot be realized.

**NOTE:** To ensure a sufficiently hardened surface for rocker arm contact, do not remove more than .010" of metal from the injector follower head.

### LOCATING AIR LEAKS IN FUEL LINES

Air drawn into the fuel system may result in uneven running of the engine, stalling when idling, or a loss of power. Poor engine operation is particularly noticeable at the lower engine speeds. An opening in the fuel suction lines may be too small for fuel to pass through but may allow appreciable quantities of air to enter.

Check for loose or faulty connections. Also check for

improper fuel line connections such as a fuel pump suction line connected to the short fuel return tube in the fuel tank which would cause the pump to draw air.

Presence of an air leak may be detected by observation of the fuel filter contents after the filter is bled and the engine is operated for 15 to 20 minutes at a fairly high speed. No leak is indicated if the filter shell is full when loosened from its cover. If the filter shell is only partly full, an air leak is indicated.

### FUEL LINES

Flexible fuel lines are used in certain applications to facilitate connection of lines leading to and from the fuel tank, and to minimize the effects of any vibration in the installation.

Be sure a restricted fitting of the proper size is used to connect the fuel return line to the fuel return manifold. Do not use restricted fittings anywhere else in the fuel system.

When installing fuel lines, it is recommended that connections be tightened only sufficiently to prevent leakage of fuel; thus flared ends of the fuel lines will not become twisted or fractured because of excessive tightening. After all fuel lines are installed, the engine should be run long enough to determine whether or not all connections are sufficiently tight. If any leaks occur, connections should be tightened only enough to stop the leak. Also check filter cover bolts for tightness.





## TROUBLE SHOOTING CHARTS (Needle Valve Injectors)

Chart 4


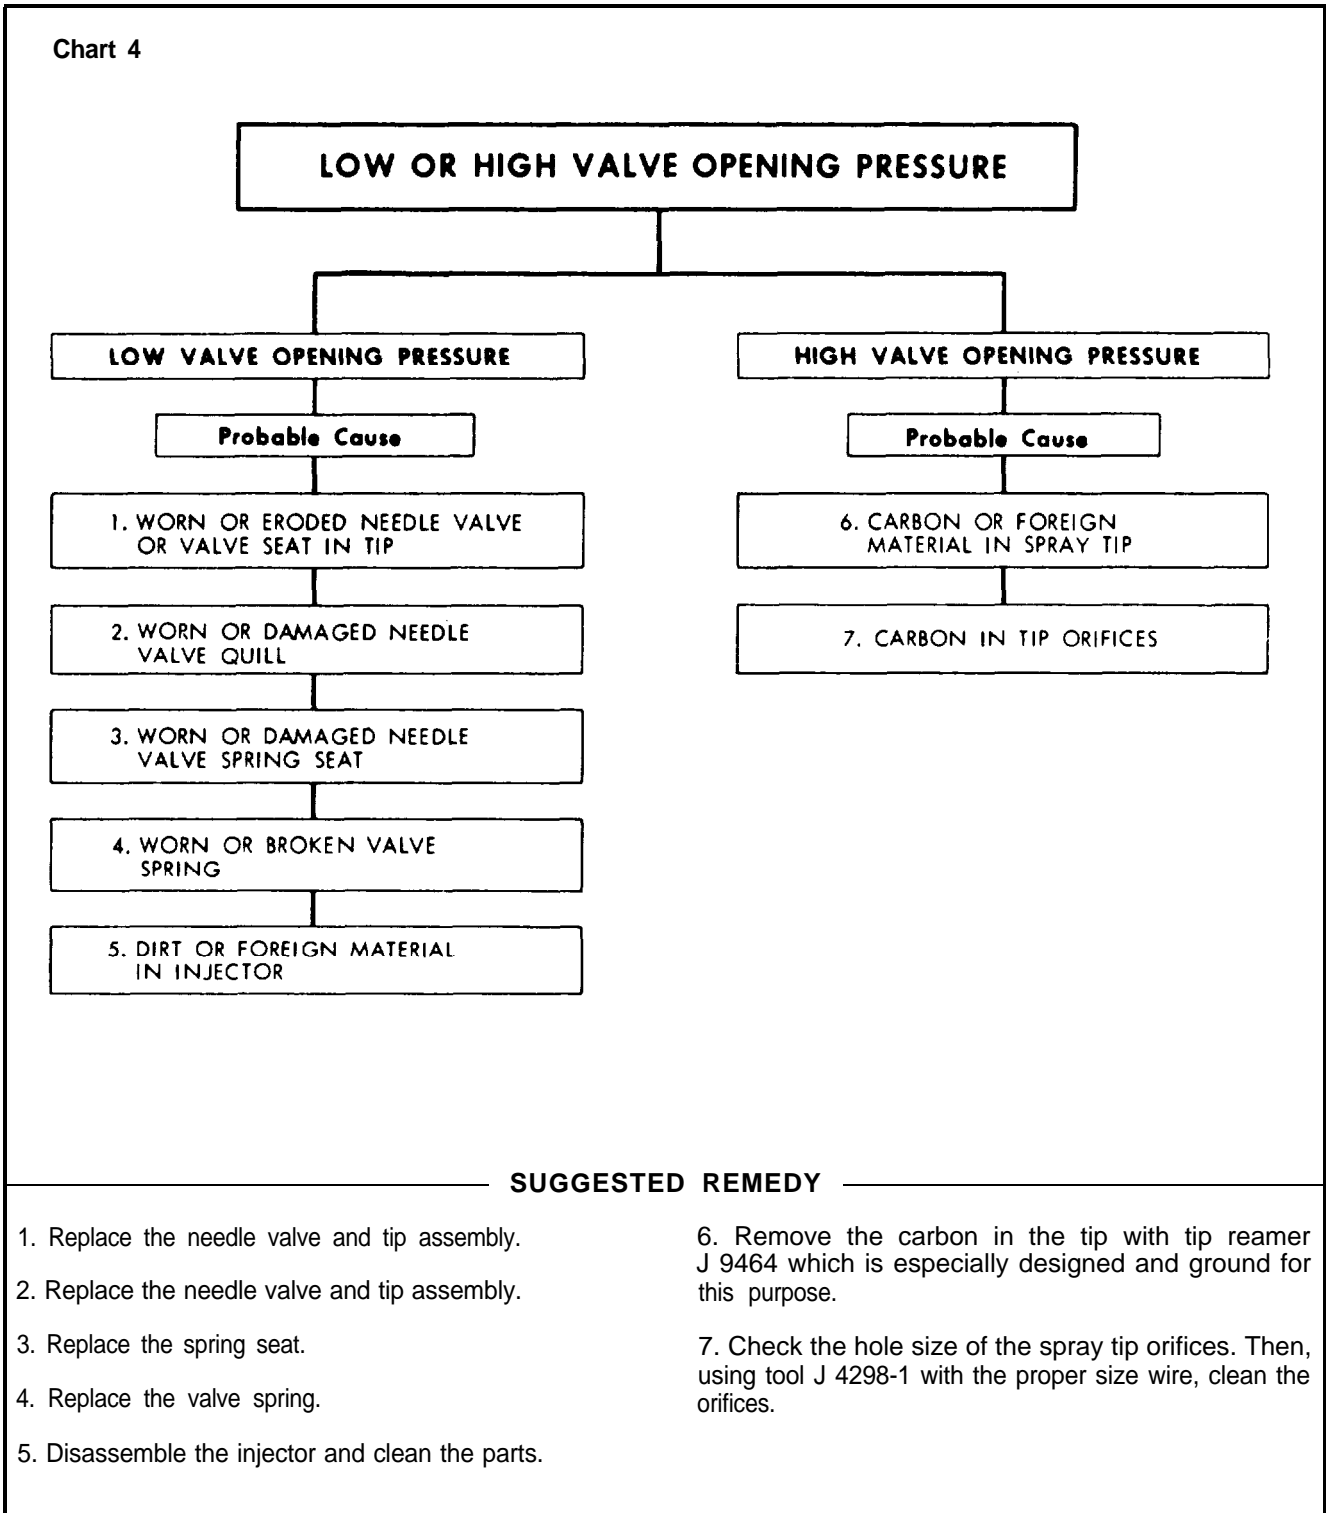



Chart 5

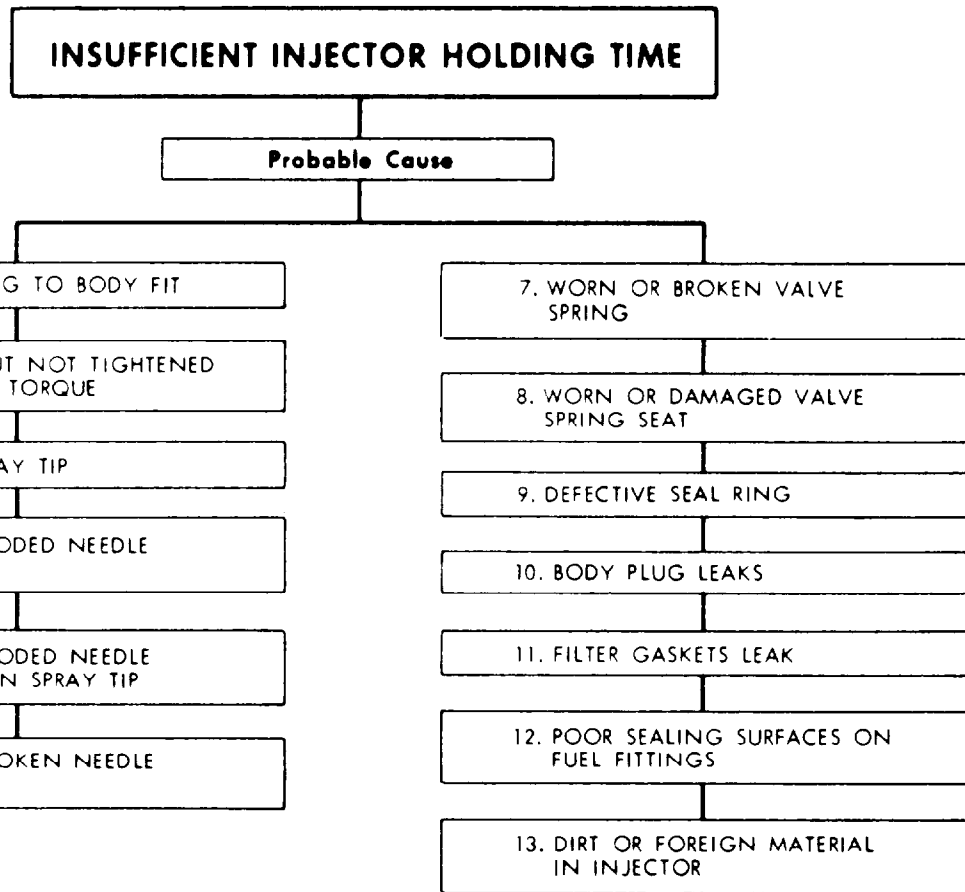

**SUGGESTED REMEDY**

- |   |   |
|---|---|
| <p>1. Lap the injector body.</p> <p>2. Tighten the nut to 75-85 lb-ft torque. Do not exceed the specified torque.</p> <p>3,4,5 and 6. Replace the needle valve and spray tip assembly.</p> <p>7. Replace the valve spring.</p> <p>8. Replace the valve spring seat.</p> | <p>9. Replace the seal ring.</p> <p>10. Install new body plugs.</p> <p>11. Replace the filter cap gaskets and tighten the filter caps to 65-75 lb-ft torque.</p> <p>12. Clean up the sealing surfaces or replace the filter caps, if necessary. Replace the filter if a cap is replaced.</p> <p>13. Disassemble the injector and clean the parts.</p> |
|---|---|

Chart 6

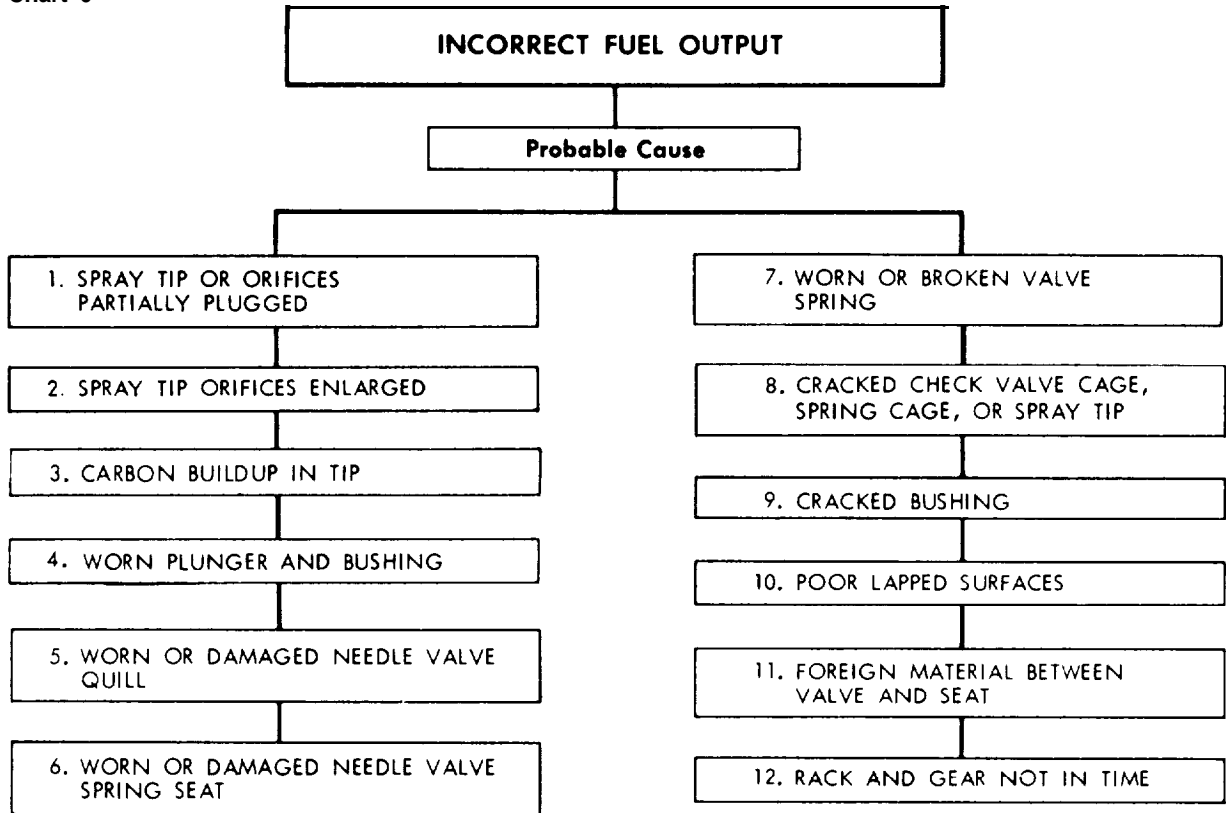

**SUGGESTED REMEDY**

- 1. Clean the spray tip as outlined under *Clean Injector Parts*
- 2. Replace the spray tip assembly.

**NOTE:** The fuel output of an injector varies with the use of different spray tips of the same size due to manufacturing tolerances in drilling the tips. If the fuel output does not fall within the specified limits of the *Fuel Output Check Chart*, try changing the spray tip. However, use only a tip specified for the injector being tested.

- 3. Clean the injector tip with tool J 1243.
- 4. After the possibility of an incorrect or faulty tip has been eliminated and the injector output still does not fall within its specific limits, replace the plunger and bushing with a new assembly.

- 5. Replace the needle valve.
- 6. Replace the spring seat.
- 7. Replace the valve spring.
- 8. Replace the cracked parts.
- 9. Replace the plunger and bushing assembly.
- 10. Re-lap the sealing surfaces.
- 11. Disassemble the injector and clean the parts.
- 12. Assemble the gear with the drill spot mark on the tooth engaged between the two marked teeth of the rack.

### FUEL PUMP MAINTENANCE

The fuel pump is so constructed as to be inherently trouble free. By using clean water-free fuel and maintaining the fuel filters in good condition, the fuel pump will provide long satisfactory service and require very little maintenance.

However, if the fuel pump fails to function satisfactorily, first check the fuel level in the fuel tank, then make sure the fuel supply valve is open. Also check for external fuel leaks at the fuel line connections, filter gaskets and air heater lines. Make certain that all fuel lines are connected in their proper order.

Next, check for a broken pump drive shaft or drive coupling. Insert the end of a wire through one of the pump flange drain holes, then crank the engine momentarily and note whether the wire vibrates. Vibration will be felt if the pump shaft rotates.

All fuel pump failures result in no fuel or insufficient fuel being delivered to the fuel injectors and may be indicated by uneven running of the engine, excessive vibration, stalling at idling speeds or a loss of power.

The most common reason for failure of a fuel pump to function properly is a sticking relief valve. The relief valve, due to its close fit in the valve bore, may become stuck in a fully open or partially open position due to a small amount of grit or foreign material lodged between the relief valve and its bore or seat. This permits the fuel oil to circulate within the pump rather than being forced through the fuel system.

Therefore, if the fuel pump is not functioning properly, remove the relief valve plug, spring and pin and check the movement of the valve within the valve bore. If the valve sticks, recondition it by using fine emery cloth to remove any scuff marks. Otherwise, replace the valve. Clean the valve bore and the valve components. Then lubricate the valve and check it for free movement throughout the entire length of its travel. Reassemble the valve in the pump.

After the relief valve has been checked, start the engine and check the fuel flow at some point between the restricted fitting in the fuel return manifold at the cylinder head and the fuel tank.

### CHECKING FUEL FLOW

1. Disconnect the fuel return tube from the fitting at the fuel tank or source of supply and hold the open end of the tube in a convenient receptacle.

2. Start and run the engine at 1200 rpm and measure the fuel flow return from the manifold. Refer to Section 13.2 for the specified quantity per minute.

3. Immerse the end of the fuel tube in the fuel in the container. Air bubbles rising to the surface of the fuel will indicate air being drawn into the fuel system on the suction side of the pump. If air is present, tighten all fuel line connections between the fuel tank and the fuel pump.

4. If the fuel flow is insufficient for satisfactory engine performance, then:

- a. Replace the element in the fuel strainer. Then start the engine and run it at 1200 rpm to check the fuel flow. If the flow is still unsatisfactory, perform Step "b" below.
- b. Replace the element in the fuel filter. If the flow is still unsatisfactory, do as instructed in Step "c".
- c. Substitute another fuel pump that is known to be in good condition and again check the fuel flow.

When changing a fuel pump, clean all of the fuel lines with compressed air and be sure all fuel line connections are tight. Check the fuel lines for restrictions due to bends or other damage.

If the engine still does not perform satisfactorily, one or more fuel injectors may be at fault and may be checked as follows:

1. Run the engine at idle speed and cut out each injector in turn by holding the injector follower down with a screw driver. If a cylinder has been misfiring, there will be no noticeable difference in the sound and operation of the engine when that particular injector has been cut out. If the cylinder has been firing properly there will be a noticeable difference in the sound and operation of the engine when the injector is cut out.

2. Stop the engine and remove the fuel pipe between the fuel return manifold and the injector.

3. Hold a finger over the injector fuel outlet and crank the engine with the starter. A gush of fuel while turning the engine indicates an ample fuel supply; otherwise, the injector filters are clogged and the injector must be removed for service.

## SPECIFICATIONS

## STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

THREAD SIZE	TORQUE (lb-ft)	THREAD SIZE	TORQUE (lb-ft)
1/4-20	7-9	9/16 -12	90-100
1/4-28	8-10	9/16 -18	107-117
5/16-18	13-17	5/8 -11	137-147
5/16-24	15-19	5/8 -18	168-178
3/8-16	30-35	3/4 -10	240-250
3/8-24	35-39	3/4 -16	290-300
7/16-14	46-50	7/8 - 9	410-420
7/16-20	57-61	7/8 - 14	475-485
1/2-13	71-75	1 - 8	580-590
1/2-20	83-93	1 - 14	685-695

## EXCEPTIONS TO STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

APPLICATION	THREAD SIZE	TORQUE (lb-ft)
Governor control housing to flywheel housing	5/16-18	10-12
Blower drive assembly to flywheel housing	3/8 -16	20-25
Injector clamp bolt	3/8 -16	20-25
Fuel line connector	3/8 -24	20-28
Rocker arm bracket bolt	7/16-14	50-55
Governor drive gear retaining nut (in-line engine)	5/8 -18	125-135
Injector filter caps	5/8 -24	65-75
Injector nut (needle valve)	15/16-24	75-85

## SERVICE TOOLS

TOOL NAME	TOOL NO.
<b>INJECTOR TOOLS</b>	
Injector body reamer	J 21089
Pin vise	J 22800-3
Injector bushing Inspectalite	J 21471
Injector calibrator	J 22410
Adaptor (standard body)	J 7041-61
Seat	J 22410-226
Injector comparator	J 7041
Adaptor	J 7041-61
Adaptor	J 7041-72
Adaptor	J 7041-88

## SERVICE TOOLS

TOOL NAME	TOOL NO.
Adaptor	J 7041-130
Injector holding fixture	J 22396
Injector nut tip seat reamer (needle valve)	J 9418-1
Injector nut tip seat reamer (needle valve)	J 9418-5
Injector service tool set	J 1241-05
Spray tip cleaner	J 1243
Spray tip remover and bushing cleaner	J 1291-02
Injector spray tip hole cleaner	J 4298-1
Injector nut socket wrench	J 4983-01
Injector nut tip seat reamer	J 4986-01
Injector valve seat deburring tool	J 7174
Injector rack hole brush	J 8150
Injector body brush	J 8152
Injector wire honing stone	J 8170
Injector test oil (one gallon)	J 8130
Injector tester	J 9787
Test block	J 9787-49
Adaptor	J 8538-10
Injector tip carbon remover (needle valve)	J 9464-01
Special drill	J 9464-1
Injector tip concentricity gage	J 5119
Lapping block set	J 22090
Lapping compound	J 23038
Metyl Ethyl Keystone solvent (one gallon)	J 8257
Needle valve injector auxiliary tester	J 22640
Needle valve lift gage	J 9462-01
Polishing stick set	J 22964
Socket	J 8932-01
Spring tester	J 9666
<b>INJECTOR TUBE TOOLS</b>	
Cylinder head holding plate set	J 3087-01
Injector tube service tool set	J 22525
<b>GOVERNOR TOOLS</b>	
Control link lever bearing Installer	J 8985
Governor cover bearing installer	J 21068
Governor cover bearing remover	J 21967
Governor weight carrier installer	J 8984
Knurled nut	J 21995-1
Nut wrench	J 5895
Rod	J 21995-2
Spanner wrench	J 5345-5

# SECTION 3

## AIR INTAKE SYSTEM

### CONTENTS

Air Intake System .....	3
Air Silencer .....	3.2
Air Shutdown Housing .....	3.3
Blower (In-Line) .....	3.4
Shop Notes - Trouble Shooting - Specifications - Service Tools .....	3.0

## AIR INTAKE SYSTEM

In the scavenging process employed in the Series 53 engines, a charge of air is forced into the cylinders by the blower and thoroughly sweeps out all of the burned gases through the exhaust valve ports. This air also helps to cool the internal engine parts, particularly the exhaust valves. At the beginning of the compression stroke, therefore, each cylinder is filled with fresh, clean air which provides for efficient combustion.

The air, entering the blower from the air cleaner, is picked up by the blower rotor lobes and carried to the discharge side of the blower as indicated by the arrows in Fig . 1 The continuous discharge of fresh air from the blower enters the air chamber of the cylinder block and sweeps through the intake ports of the cylinder liners.

The angle of the ports in the cylinder liners creates a uniform swirling motion to the intake air as it enters the cylinders. This motion persists throughout the compression stroke and facilitates scavenging and combustion.

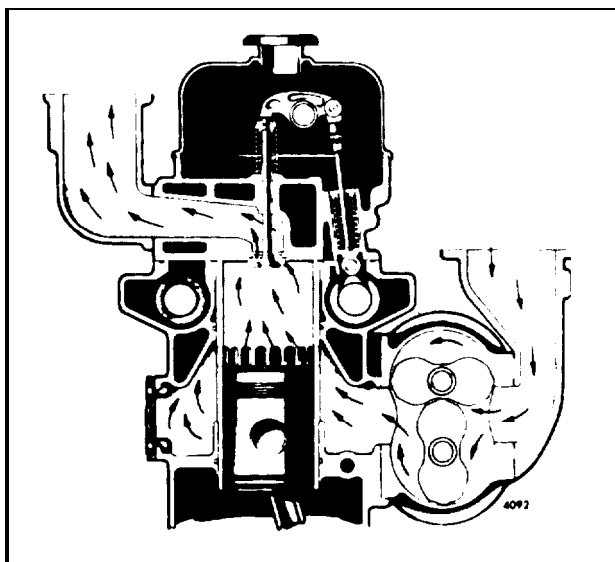


Fig. 1 Air Flow Through Blower and Engine  
(In-Line Engine)





## AIR SILENCER

### In-Line

The air silencer (Fig. 1) is attached to the intake side of the blower housing to reduce the sound level of the air entering the blower.

A perforated sheet metal partition divides the silencer into two sections. The engine side of the partition and the outer shell forms an air duct the entire length of the silencer. Air enters this duct from both ends and flows to the blower intake opening at the center. The area between the partition and the outer side of the silencer is filled with sound absorbent, flame-proof, felted cotton waste.

An air intake (blower) screen is used between the air silencer and the blower housing to prevent foreign objects from entering the blower.

### Remove and Install Air Silencer

While no servicing is required on the air silencer, it may be necessary at times to remove it to clean or replace the blower screen or to perform other service operations.

1. Support the silencer and remove the attaching bolts and lock washers. Then remove the silencer and the blower screen.

### Engines

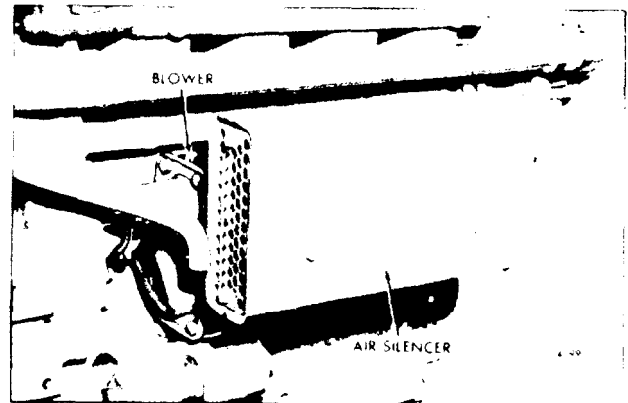


Fig. 1 - Air Silencer Mounted on In-Line Engine

2. Clean the blower screen with fuel oil and dry it with compressed air.

4. Place the lock washers over the bolts and slide the bolts through the bolt holes in the silencer.

5. Place the blower screen (In-line engine) over the projecting bolts and position the silencer against the blower housing. Then tighten the bolts.



## AIR SHUT-DOWN HOUSING

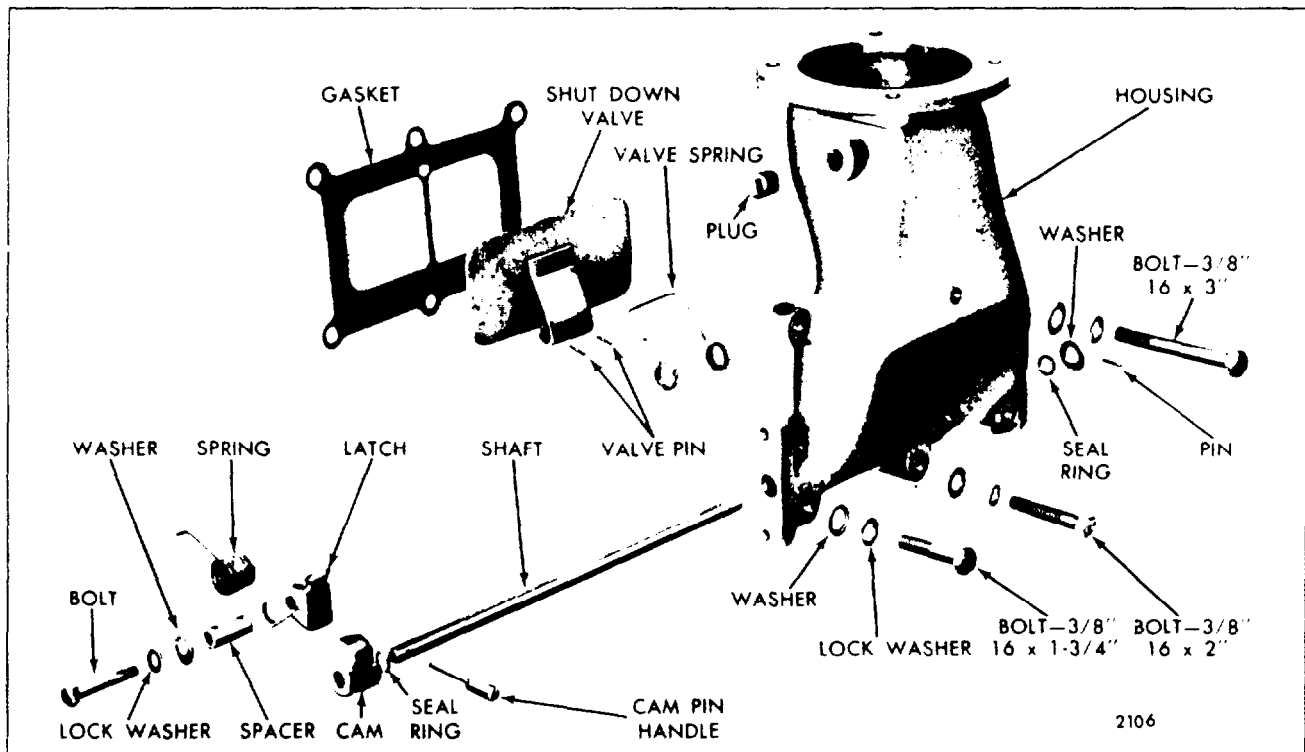


Fig. 1 - Typical In-Line Air Shut-Down Housing Details and Relative Location of Parts

The air shut-down housing on the in-line engine is mounted on the side of the blower.

The air shut-down housing contains an air shut-off valve that shuts off the air supply and stops the engine whenever abnormal operating conditions require an emergency shut-down.

#### Remove Air Shut-Down Housing

1. Disconnect and remove the air ducts between the air cleaner and the air shut-down housing.
2. Disconnect the control wire from the air shut-off cam pin handle.
3. Remove the bolts and washers that retain the housing to the blower and remove the housing from the blower. Remove the air shut-down housing gasket from the blower.

**NOTE:** Cover the blower opening to prevent dirt or foreign material from entering the blower.

#### Disassemble Air Shut-Down Housing

Refer to Fig. 1 and disassemble the air shut-down housing as follows:

1. Remove the pin from the end of the shut-down shaft. Then remove the washer from the shaft and the seal ring from the housing.

2. Remove the two pins that secure the shut-off valve to the shaft.

3. Remove the bolt, lock washer and plain washer which attach the latch to the housing. Then remove the latch, latch spring and spacer.

4. Note the position of the air shut-off valve spring and the valve (Fig. 2); then withdraw the shaft from the housing to release the valve and the spring. Remove the valve and spring and the seal ring from the housing.

5. Remove the cam pin handle and withdraw the cam from the shaft.

#### Inspection

Clean all of the parts thoroughly, including the blower screen, with fuel oil and dry them with compressed air. Inspect the parts for wear or damage. The face of the shut-down valve must be perfectly flat to assure a tight seal when it is in the shut-down position.

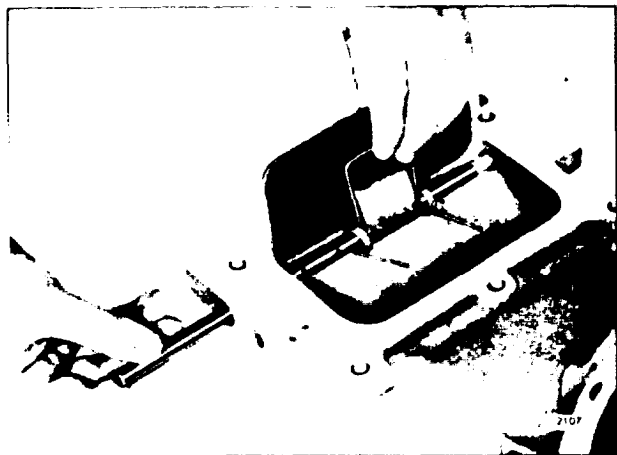


Fig. 2 - Installing Air Shut-Off Valve Spring and Valve

#### Assemble Air Shut-Down Assembly

The holes for the cam pin handle and the retaining pins must be drilled, using a 1/8" diameter drill, at the time a new service shaft or air shut-off valve(s) is assembled. The valve(s) must be in the same plane within .03" when in the stop position (flush with the housing face). Refer to Figs. 1 and 2 and proceed as follows:

1. Place the valve(s) and spring in position in the housing (Fig. 2) and slip the shaft in place. The shaft must extend .70" from the side of the housing where the shut-down latch is assembled.

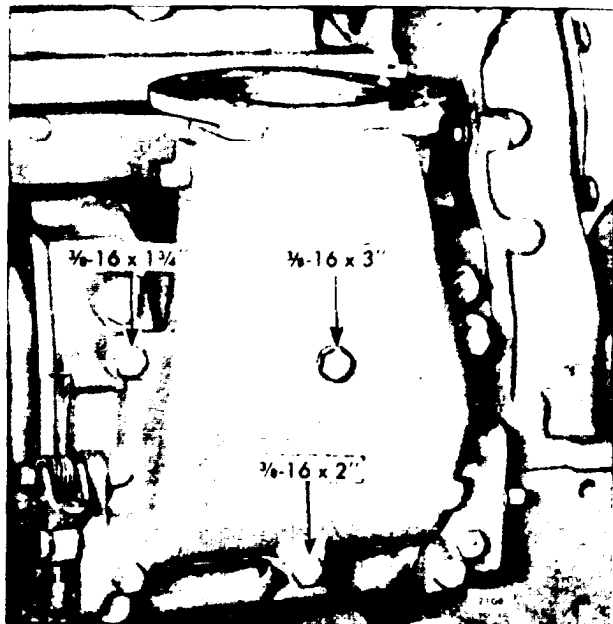


Fig. 3 Location of Air Shut-Down Housing Mounting Bolts (In-Line Engines)

2. Install a new seal ring at each end of the shaft. Be sure the seals are seated in the counterbores of the housing.

3. Install the cam and cam pin handle on the shaft.

4. Install a washer and retaining pin at the other end of the shaft.

5. Assemble the spacer (bushing), spring and latch to the shut-down housing with the 1/4" -20 bolt, lock washer and plain washer.

a. Align the notch on the bushing with the notch on the latch and lock the bushing in this position.

b. Install the pins in the valve(s) to retain it to the shaft with the cam release latch set and the valve(s) in the run position.

c. Level the valve(s) in the shut-down position.

d. Adjust the bushing so the valve(s) contacts the housing when the cam release latch is set.

#### Install Air Shut-Down Housing (In-Line Engines)

1. Place the blower screen and gasket assembly in position with the screen side of the assembly toward the blower.

2. Refer to Figs. 1 and 3 and secure the air shut-down housing to the blower with bolts, washers and lock washers as follows:

- a. Install and finger tighten the six attaching bolts shown in Fig. 3.
- b. Tighten the two center bolts to 16-20 lb-ft torque
- c. Then tighten the four corner bolts to 16-20 lb-ft torque.

**CAUTION:** A power wrench should not be used to tighten the above bolts.

3. Reset the air shut-down to the run position.
4. Start and run the engine at idle speed and no load. Trip the air shut-down. If the engine does not stop, check it for air leakage between the valve and the gasket. If necessary, reposition the valve.



## BLOWER

### IN-LINE ENGINES

The blower supplies the fresh air required for combustion and scavenging. Its operation is similar to that of a gear-type oil pump. Two hollow double-lobe rotors revolve in a housing bolted to the side of the in-line engines (Fig. 1)

The revolving motion of the rotors provides a continuous and uniform displacement of air.

The blower rotors are pinned to the rotor shafts. The rotor shafts are steel and the blower end plates are aluminum, providing for a compatible bearing arrangement.

Gears located on the splined end of the rotor shafts space the rotor lobes with a close tolerance. Since the lobes of the two rotors do not touch at any time, no lubrication is required.

Lip type oil seals are used in both the front and rear end plates on current engines. The seals prevent air leakage past the blower rotor shaft bearing surfaces and also keep the oil, used for lubricating the blower rotor gears, from entering the rotor compartment. Former blowers used a ring type oil seal consisting of a fiber washer, "O" ring, retainer and seal spring in each end of the blower rotors.

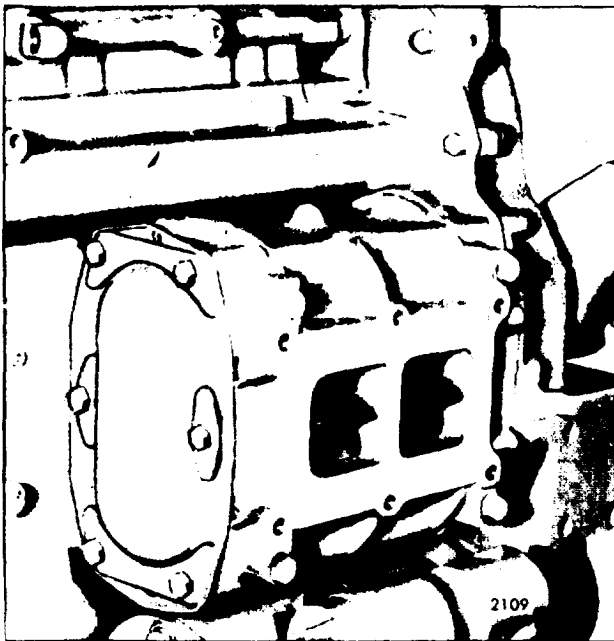


Fig. 1 - Blower Mounting (3.53 Engine)

#### Inspect blower (Attached to Engine)

The blower may be inspected without removing it from the engine. However, the air cleaner and the air inlet housing must be removed.

**CAUTION:** When inspecting the blower with the engine running, keep your fingers and clothing away from the moving parts of the blower and run the engine at low speeds only.



Dirt or chips drawn through the blower will make deep scratches in the rotors and housing. Burrs around such abrasions may cause interference between the rotors or between the rotors and the blower housing

Leaky oil seals are usually indicated by the presence of oil on the blower rotors or inside surfaces of the blower housing. Run the engine at low speed and direct a light into the rotor compartment and toward the end plates and the oil seals. A thin film of oil radiating away from a seal indicates an oil leak.

A worn blower drive resulting in a loose, rattling sound within the blower may be detected by running the engine at approximately 500 rpm.

Loose rotor shafts or worn rotor shaft bearing surfaces will result in contact between the rotor lobes, the rotors and the end plates, or the rotors and the housing.

Excessive backlash between the blower rotor gears usually results in the rotor lobes rubbing throughout their entire length.

### Remove Blower

Before removing the blower from the engine, remove the air shut-down housing as outlined in Section 3.3.

#### 3-53 ENGINE BLOWER

1. Remove the six bolts, special washers and reinforcement plates which secure the blower to the engine end plate and the flywheel housing. Note the location of the two shorter bolts. Then remove the front end plate, cover and gasket from the blower.

2. Remove the four blower-to-block bolts and special washers and lift the blower away from the engine.

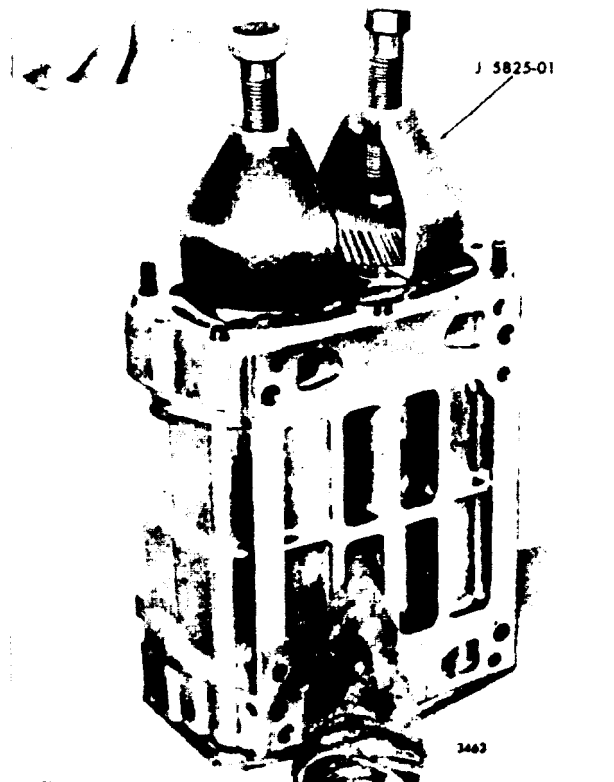


Fig. 5 - Removing Blower Rotor Gears

**Disassemble Blower****3-53 ENGINE BLOWER**

1. Wedge a clean cloth between the rotor to prevent their turning. Then remove the blower gear retaining bolts and washers.

2. For identification, mark the R.H helix gear. Then remove the gears with pullers J 5825-01 as follows.

- a. With the pullers in place under the gears (Fig. 5), place a brass bar, approximately 1" long and 5/8" diameter, between the point of each puller bolt and blower rotor shaft.

**CAUTION:** If the brass bar is larger than 5/8" diameter, the serrations in the blower drive gear may be damaged.

- b. Alternately turn the bolt in each puller until the gears are off the shafts.

3. Remove the rotor shims and the gear spacer and place them with their respective gears to ensure correct re-assembly.

4. At the other end of the blower, remove the three thrust plate bolts, the thrust plate and three spacers from the front end plate. Remove the bolts and thrust washers (refer to Fig. 7).

5. Remove the two screws that retain the end plate to the blower housing. Tap the end plate off of the dowel pins and housing with a soft (plastic) hammer, being careful not to damage the mating surfaces of the end plate and the housing.

6. Remove the rotors from the blower housing.

7. Remove the retaining screws and remove the rear end plate as in Step 5.

8. Remove and discard the lip type oil seals from the end plates on current blowers. Remove the seal washer, "O" ring, retainer and retainer spring from each rotor shaft on former blowers.

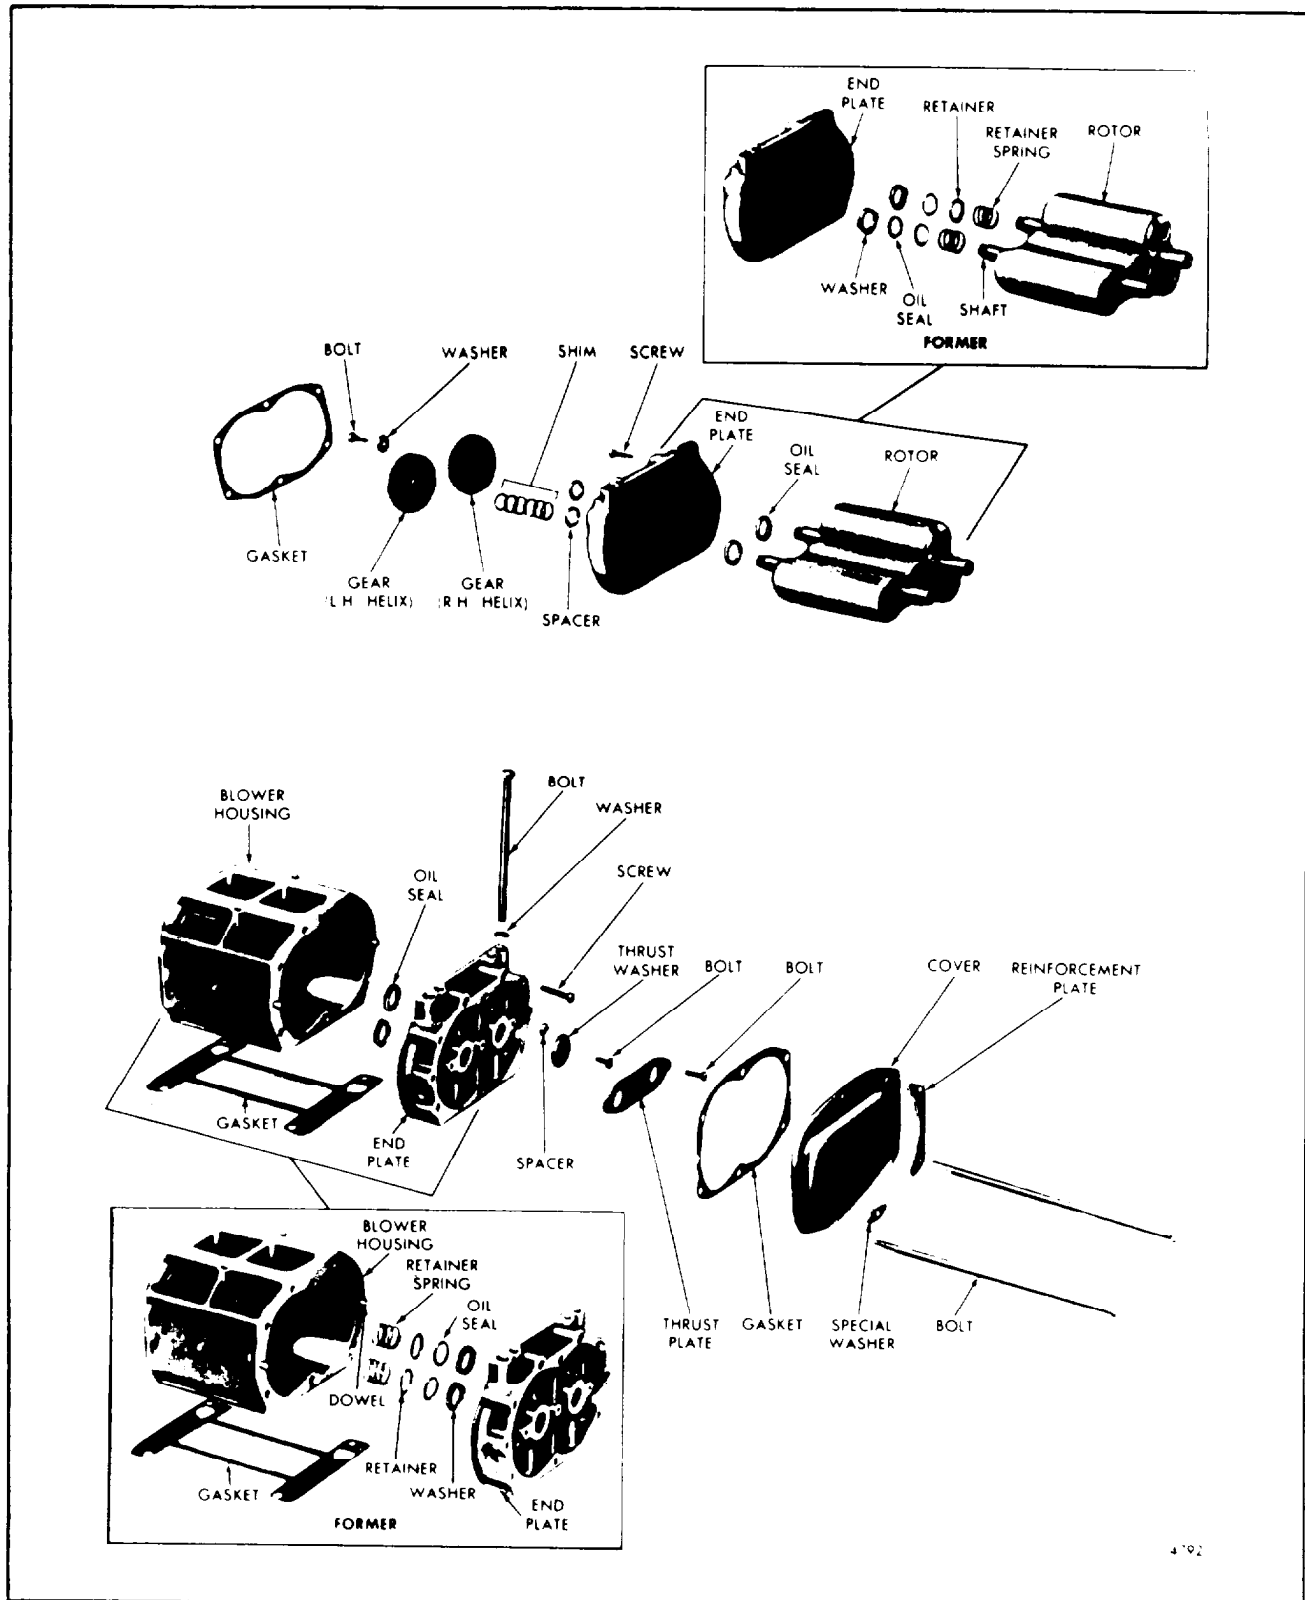


Fig. 7 - Typical Blower Details and Relative Location of Parts (3.53 Engine Blower)



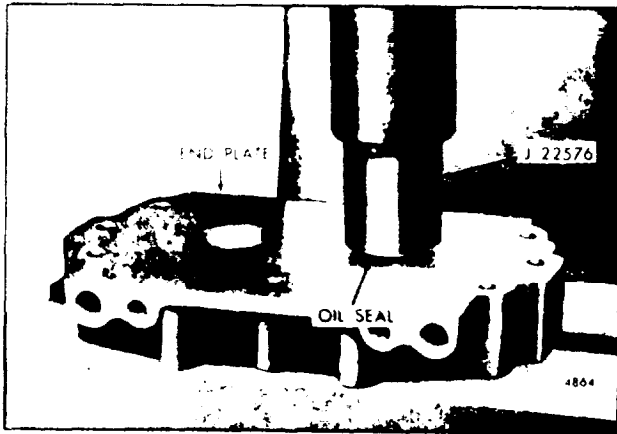


Fig. 9 - Installing Lip Type Oil Seal in End Plate

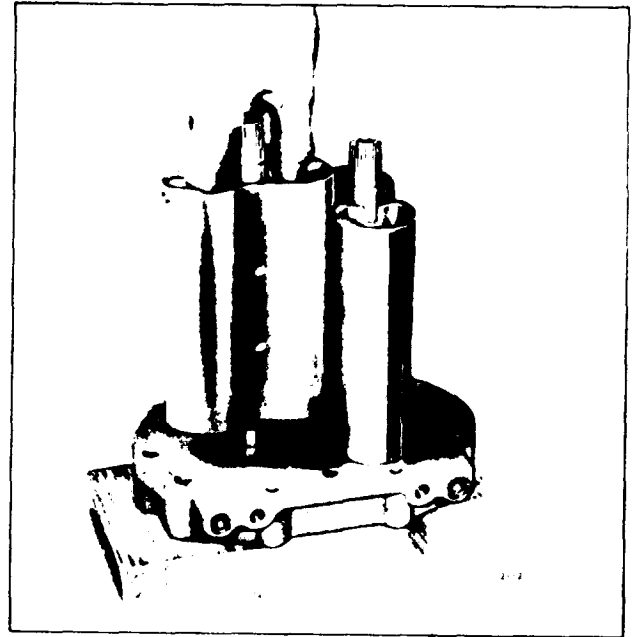


Fig. 10 - Installing Blower Rotors in Front End Plate

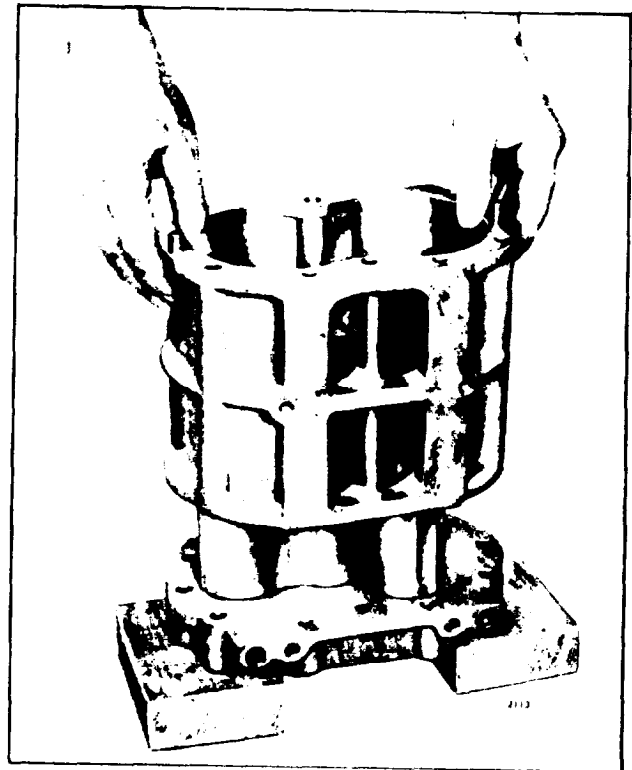


Fig. 11 - Installing Blower Housing Over Rotors

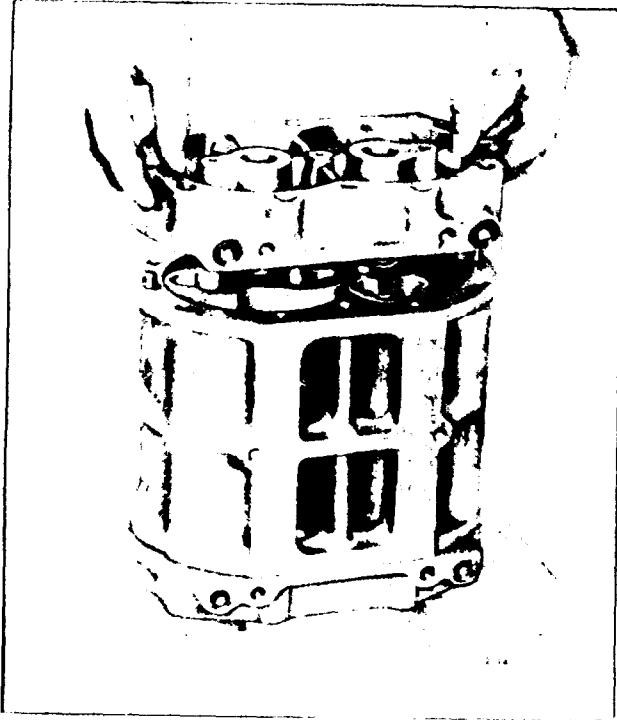


Fig. 12 - Installing Rear End Plate

### Inspection

Clean and dry all of the parts thoroughly.

The finished inside face of each end plate must be smooth and flat. Slight scoring may be cleaned up with a fine grit emery cloth. If the surface is badly scored, replace the end plate.

inspect the surfaces of the rotors and the blower housing. Remove burrs or scratches with an oil stone

Examine the rotor shaft, gear or drive coupling for burred or worn serrations.

Inspect the blower gears for excessive wear or damage

Check the bearing and oil seal contact surfaces of the rotor shafts and end plates for scoring, wear or nicks.

If an oil seal sleeve is used on the rotor shaft, it can be replaced as follows:

- a. Place sleeve remover J 23679-2 over the rotor shaft and behind the oil seal sleeve.
- b. Back out the center screw of one gear puller J 21672-7 and attach the pulier to the sleeve remover with three 1/4"-20 x 3" bolts and flat washers.

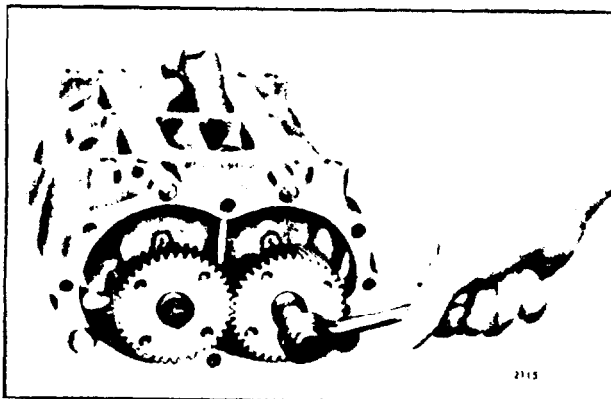


Fig. 13 - Installing Blower Rotor Gears

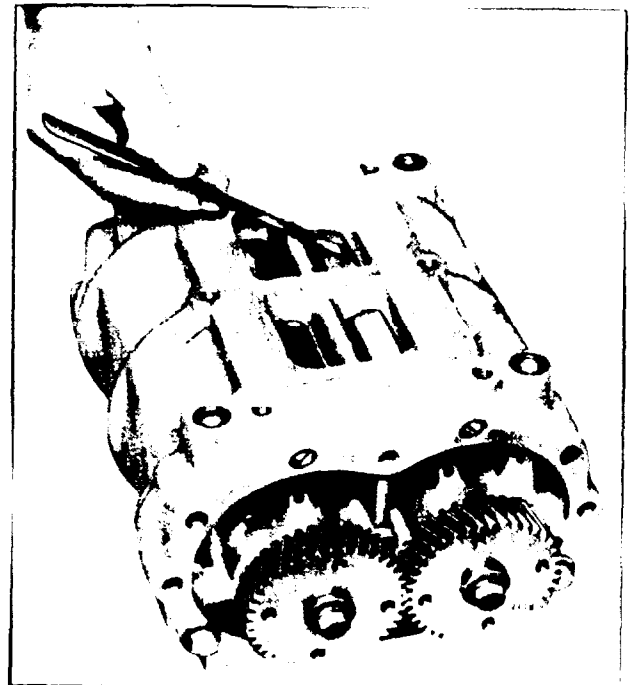


Fig. 14 - Measuring Rotor Lobe to Housing Clearance

- c. Turn the puller screw clockwise and pull the sleeve off of the shaft.
- d. Support the rotor, gear end up, on the bed of an arbor press.
- e. Start a new sleeve straight on the shaft.
- f. Place sleeve installer J 23679-1 on top of the sleeve and press the sleeve on the shaft until the step in the installer contacts the shoulder on the shaft.

**NOTE:** The step in the sleeve installer properly positions the sleeve on the shaft.

To replace the former "O" ring oil seals by the current lip type oil seals, rework the end plates by following the instructions given in Shop Notes in Section 3.0.

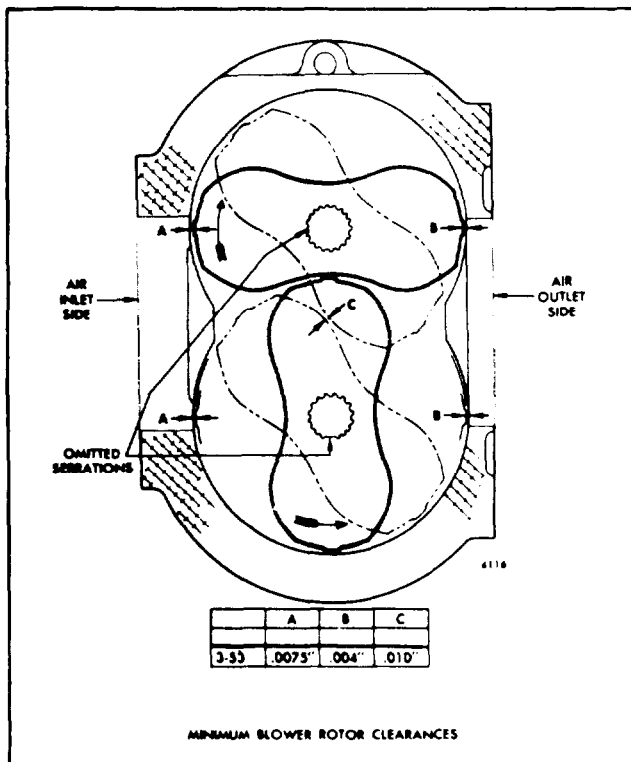


Fig. 15 - Minimum Blower Rotor Clearance

### Assembly Blower

Refer to Fig 7 and assemble the blower as follows:

1. Install new lip type oil seals in each end plate in current blowers as follows:

- a. Place the end plate on the bed of an arbor press.
- b. Lubricate the outer diameter of the seal and, using installer J 22576, press the seal (lip facing down) into the counterbored hole until the shoulder on the installer contacts the end plate (Fig. 9).

**NOTE:** A step on the seal installer will position the oil seal below the finished face of the end plate within the .002" to .008" specified.

2. Install the ring type oil seals on the rotor shafts of former blowers as follows:

- a. Install a retainer spring on each shaft of each rotor. Then place an "O" ring retainer (dished side up) on each spring.
- b. Lubricate the "O" rings with clean engine oil, then slide one ring on each shaft.
- c. Lubricate and place a seal on each shaft. Note that the tangs on each seal are flush with one side of the seal; this side of the seal must face toward the rotor.

3. Place the front end plate on two wood blocks. Then install the rotors, gear end up, on the end plate (Fig. 10). On the former blowers, be sure that the ring type oil seal are properly positioned on the rotors.

4. Install the blower housing over the rotors (Fig. 11).

**NOTE:** To prevent inadequate lubrication or low oil pressure, care must be exercised in the assembly of the front and rear blower end plates to the blower housing. The rear end plate for the 3-53 blower does not have tapped holes for the thrust washer plate bolts and no thrust washer lubricating oil holes.

5. Place the rear end plate over the rotor shafts (Fig. 12). On the former blowers, be sure that the ring type oil seals are properly positioned on the rotors. Then secure each end plate to the 3-53 blower housing with two end plate retaining screws and two cover

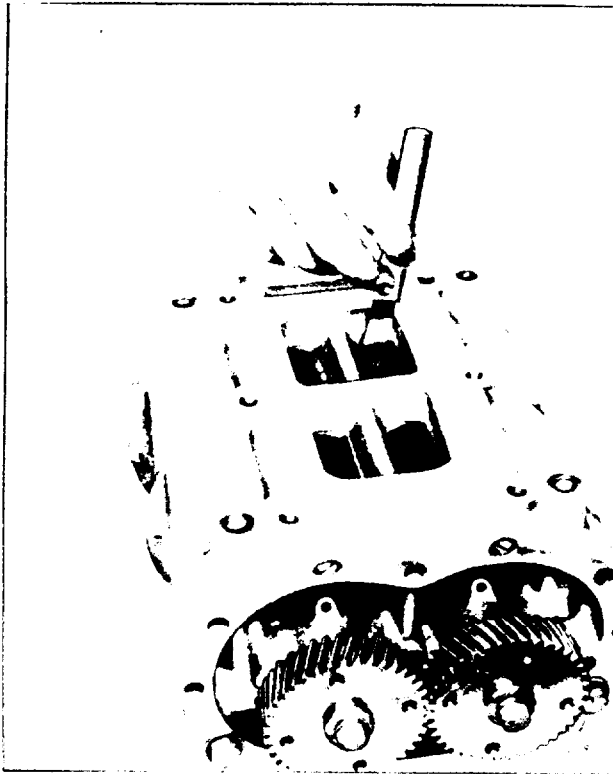


Fig. 16 - Measuring Rotor Lobe to End Plate Clearance

bolts and plain washers

6. Attach the two thrust washers to the front end of the blower with the washer retaining bolts. If 5/16" -24 bolts are used, tighten them to 25-30 lb-ft torque; if 3/8" - 24 bolts are used, tighten them to 54-59 lb-ft torque.

7. Attach the three spacers and the thrust plate to the front end of the blower. Tighten the three bolts to 7-9 lb-ft torque. Then check the clearance between the thrust plate and the thrust washers. The specified clearance is .001" to .003"

**NOTE:** The current thrust plate is .260" thick. The former plate was .180" thick.

8. Position the rotors so that the missing serrations on the gear end of the rotor shafts are 90° apart. This is accomplished by placing the rotors in a "T" shape, with the missing serration in the upper rotor facing to the left and the missing serration in the lower rotor facing toward the bottom (Fig. 14). Install the shims and spacers in the counterbore in the rear face of the rotor gears. Then place the gears on the ends of the

shafts with the missing serrations in alignment with the missing serrations on the shafts.

9. Tap the gears lightly with a soft hammer to seat them on the shafts. Then rotate the gears until the punch marks on the face of the gears match. If the marks do not match, re-position the gears.

10. Wedge a clean cloth between the blower rotors. Use the gear retaining bolts and plain washers to press the gears on the rotor shafts (Fig. 13). Turn the bolts uniformly until the gears are tight against the shoulders on the shafts.

11. Remove the gear retaining bolts and washers. Then proceed as follows:

**3-53 Blower--** Place the gear washers on the gears and start the gear retaining bolts in the rotor shafts. Tighten the bolts to 25-30 lb-ft torque.

12. Check the backlash between the blower gears, using a suitable dial indicator. The specified backlash is .0005" to .0025" with new gears or a maximum of .0035" with used gears.

13. Time Blower Rotors

After the blower rotors and gears have been installed, the blower rotors must be timed. When properly positioned, the blower rotors run with a slight clearance between the rotor lobes and with a slight clearance between the lobes and the walls of the housing.

The clearances between the rotors may be established by moving one of the helical gears out or in on the shaft relative to the other gear by adding or removing shims between the gear hub and the rotor spacers.

It is preferable to measure the clearances with a feeler gage comprised of two or more feelers, since a combination is more flexible than a single feeler gage. Take measurements from both the inlet and outlet sides of the blower.

a. Measure the clearance between the rotor lobes and



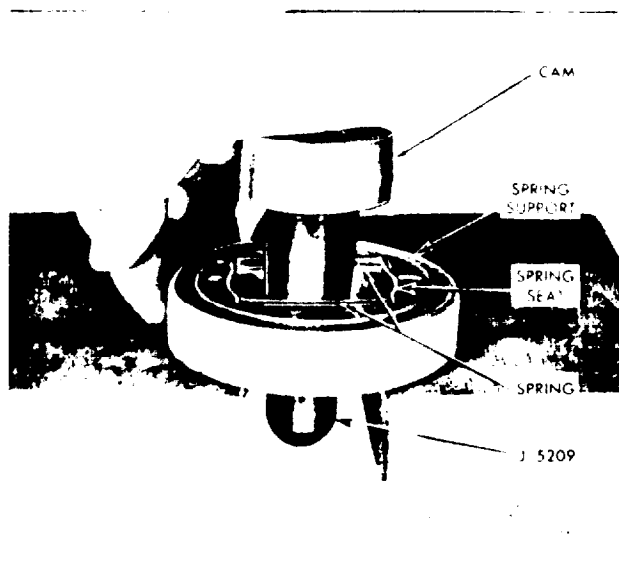


Fig. 17 Inserting Cam in Blower Drive Support

the housing as shown in Fig. 14. Take measurements across the entire length of each rotor lobe to be certain that a minimum clearance of .004" exist at the air outlet side of all blowers and a minimum clearance of .0075" (in-line engine blower) exists at the air inlet side of the blower (Fig. 15).

- b. Measure the clearance between the rotor lobes, across the length of the lobes, in a similar manner. By rotating the gears, position the lobes so that they are at their closest relative position (Fig. 15). The clearance between the lobes should be a minimum of .010"
- c. Measure the clearance between the end of the rotor and the blower end plate as shown in Fig. 16. Refer to the chart for the required minimum clearances.

**NOTE:** Push and hold the rotor toward the end plate at which the clearance is being measured.

After timing the rotors, complete assembly of the blower.

14. Remove the bolts and washers used to temporarily secure the front end plate to the housing. Then install the front end plate to the blower with six bolts and special washers and two reinforcement plates and tighten the bolts to 20-25 lb-ft torque.

BLOWER ROTOR END CLEARANCES (Minimum)		
Engine	Front End Plate	Rear End Plate
3-53	.006"	.008"

15. Assemble the blower drive spring support as follows:

- a. Place the drive spring support on two blocks of wood (Fig. 17).
- b. Position the drive spring seats in the support.
- c. Apply grease to the springs to hold the leaves together, then slide the two spring packs (15 leaves per pack) in place.
- d. Place the blower drive cam over the end of tool J 5209, insert the tool between the spring packs and press the cam in place.

16. Install the drive spring support coupling on the rotor gear at the rear end of the blower.

17. Secure the cam retainer to the coupling with four 1/4" -28 bolts and tighten them to 14-18 lb-ft torque.

19.

Install the rear end plate cover and gasket and secure the cover and end plate to the blower with six bolts and special washers and two reinforcement plates and tighten the bolts to 20-25 lb-ft torque.

### Install Blower

Examine the inside of the blower for any foreign material. Also revolve the rotors by hand to be sure that they turn freely. Then install the blower on the engine as follows:

#### 3-53 ENGINE BLOWER

1. Affix a new blower-to-block gasket on the side of the cylinder block. Use Scotch Grip Rubber Adhesive No. 4300, or equivalent, only on the block side of the gasket.

2. Position the blower front end plate and gasket on the end of the blower and install six bolts with two special washers on the center bolts and the reinforcement plates on the two top and two bottom

bolts. Install a new engine end plate to blower gasket over the threaded ends of the bolts. Apply Scotch Grip Rubber Adhesive No. 4300, or equivalent, to the engine end plate side of the gasket.


**NOTE:** The current front and rear end plate gaskets are identical and may be used in either position. Formerly these gaskets were not interchangeable due to a difference in thickness.

3. Place the blower on the cylinder block locating flanges and, while holding the blower in place, thread the six bolts finger tight in the rear engine end plate and flywheel housing. Then install the blower-to-block mounting bolts and washers and tighten them to 10-15 lb-ft torque.

4. Tighten the center blower-to-end plate bolts first and then the top and bottom bolts to 20-25 lb-ft torque. Then tighten the blower-to-block bolts to 55-60 lb-ft torque.

5. Check the backlash between the upper rotor gear and the camshaft or balance shaft gear. The backlash should be .003" to .007".

6. Install the air shut-down housing (Section 3.3)



SHOP NOTES - TROUBLE SHOOTING -

SPECIFICATIONS - SERVICE TOOLS

SHOP NOTES

ENGINES

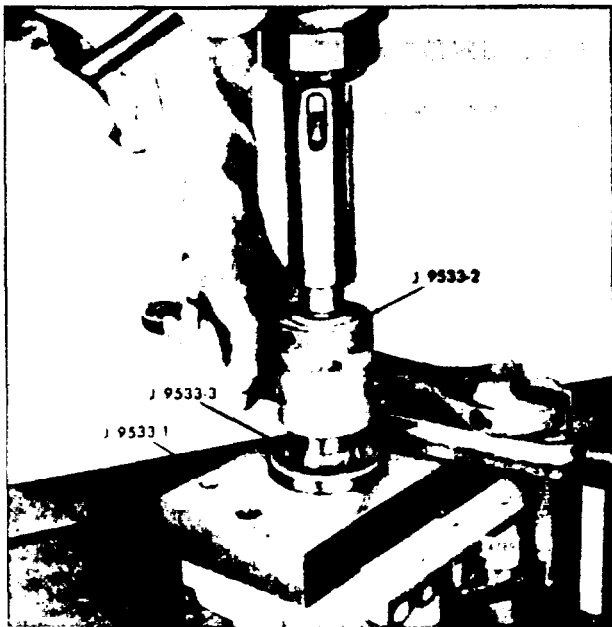


Fig. 3 - Positioning Cutting Tool in Fixture Guide

4. Install tool holder J 9533-2 in the drill press and insert the rough cutting tool J 9533-3 in the holder (Fig. 2).

5. Position the cutting tool in the fixture guide as shown in Fig. 3. Operate the drill press at 75-100 rpm so as to center the cutting tool in the rotor shaft hole. Tighten the clamp.

6. Lubricate the cutting tool and the area of the end plate that is being reworked with a lubricant (oleum or fuel oil).

7. Operate the drill press at 300-350 rpm and slowly counterbore the hole until the collar of the tool holder is approximately 1/16" from the fixture guide. Then reduce the speed of the drill press to 75-100 rpm and continue counterboring until the collar contacts the top of the guide.

**NOTE:** Raise the cutting tool periodically during the drilling operation and apply additional lubricant.

8. Stop the drill press and remove the rough cutting tool.

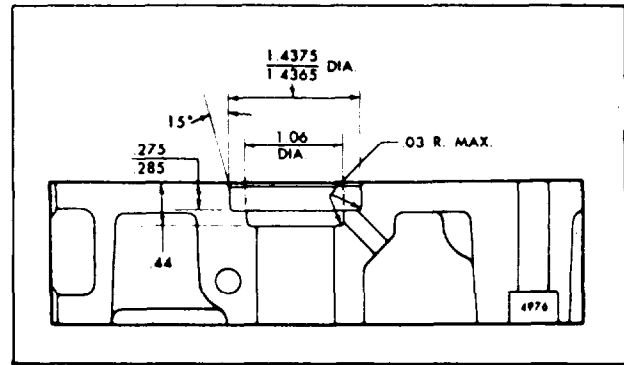


Fig. 4 - End Plate Oil Drain Back Counterbore

9. Insert the finish cutting tool J 9533-4 in the holder. Lubricate the cutting tool and the end plate. Operate the drill press at 75-100 rpm and finish-cut the counterbore. Feed the cutting tool into the work slowly.

10. Remove the finish cutting tool and install an end mill to machine the additional 1.06" diameter counterbore. The total depth of the combined counter bores is .44" (Fig. 4). The additional counterbore provides proper oil drain back from the oil sea' area.

11. Remove the fixture from the end plate. Wipe the cuttings from the end plate and fixture and dry the plate and fixture with compressed air. Remove any burrs from the edge of the oil hole.

12. Thoroughly clean the cutting tool and the end mill flutes and repeat the procedures for the adjacent rotor shaft hole.

13. Place the blower end plate on the bed of an arbor press. Use installer J 22576 to press the seal (lip facing down) into the counter bored hole until the shoulder on the installer contacts the end plate.

**NOTE:** A step under the shoulder of the installer will position the oil seal below the finished face of the end plate within the .002" to .008" specified.

#### Steel Inserts

To install steel inserts in the blower end plates, follow Steps 1 through 9 and 11 and 12. Press the inserts flush to .003" above the blower end plate surface.

## SPECIFICATIONS

## TABLE OF SPECIFICATIONS, NEW CLEARANCES AND WEAR LIMITS

These limits also apply to oversize and undersize parts.

ENGINE PART (Standard Size, New)	MINIMUM	MAXIMUM	LIMITS
<b>Blower</b>			
Backlash-rotor gears (all) .....	.0005"	.0025"	.0035"
Backlash between upper rotor and camshaft or balance shaft gear (3-53) .....	.0030"	.0070"	
Backlash between blower drive gear and camshaft gear .....	.0030"	.0070"	
Clearances:			
Thrust plate and thrust washer (in-line) .....	.0010"	.0030"	
Rotor to air outlet side of housing:			
In-line .....	.0040"		
Rotor to air inlet side of housing:			
In-line .....	.0075"		
Rotor to front end plate:			
In-line .....	.0060"		

STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

THREAD SIZE	TORQUE (lb-ft)	THREAD SIZE	TORQUE (lb-ft)
1/4 -20	7-9	9/16-12	90-100
1/4 -28	8-10	9/16-18	107-117
5/16-18	13-17	5/8 -11	137-147
5/16-24	15-19	5/8 -18	168-178
3/8 -16	30-35	3/4 -10	240-250
3/8 -24	35-39	3/4 -16	290-300
7/16-14	46-50	7/8 - 9	410-420
7/16.20	57-61	7/8 -14	475-485
1/2 -13	71-75	1 - 8	580-590
1/2 -20	83-93	1 -14	685-695

EXCEPTIONS TO STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

APPLICATION	THREAD SIZE	TORQUE (lb-ft)
Blower drive coupling to rotor gear bolt (in-line)	1/4 "-28	14-18
Blower drive gear pilot bolt (in-line)	5/16 "-24	25-30
Blower timing gear-to-rotor shaft bolts (in-line and 6V)	5/16 "-24	25-30
Blower thrust washer retaining bolt. (in-line)	5/16 "-24	25-30
Air inlet adaptor-to-blower bolts	3/8" -16	16-20
Air inlet housing-to-adaptor or blower housing bolts	3/8" -16	16-20
Governor-to-blower front end plate bolts	3/8" -16	20-24
Blower drive support-to-blower rear end plate bolts	3/8 " -16	20-24
Flywheel housing to-blower drive support bolts	3/8 " -16	20-24
Blower drive gear cover bolt	3/8 " -16	20-24
Blower-to-engine rear end plate and flywheel housing bolts (3.53)	3/8" -16 3/8" -24	20-25 20-25
Blower thrust washer retaining bolt (in-line)	3/8" -24	54-59
Blower end plate-to-block bolts	7/16"-14	55-60

---

**SERVICE TOOLS**


---

TOOL NAME	TOOL NO.
<b>BLOWER</b>	
Blower clearance feeler gage set .....	J 1698-02
Blower drive cam installer .....	J 5209
Gear puller (3.53) .....	J 5825-01
Handle .....	J 7079-2
Blower end plate counterbore set: .....	J 9533
Fixture <sup>3</sup> .....	J 9533-1
Cutting tool - holder .....	J 9533-2
Cutting tool - roughing .....	J 9533-3
Cutting tool - finishing .....	J 9533-4
Blower service tool set: .....	J 21672
Gear pullers .....	J 21672-7
Rotor shaft ball bearing installer .....	J 21672-10
Oil seal and bearing remover .....	J 21672-11
Oil seal and roller bearing installer .....	J 21672-12
Oil seal sleeve and roller bearing inner race installer .....	J 21672-16
Spanner wrench .....	J 21672-17
Oil seal sleeve and roller bearing inner race remover .....	J 21672-20
Oil seal installer .....	J 22576
Oil seal sleeve installer (in-line) .....	J 23679-1
Oil seal sleeve remover (in-line) .....	J 23679-2

---





**SECTION 4**  
**LUBRICATION SYSTEM**  
**CONTENTS**

Lubrication System.....	4
Lubricating Oil Pump.....	4.1
Lubricating Oil Pressure Regulator .....	4.1.1
Lubricating Oil Cooler .....	4.4
Oil Level Dipstick .....	4.6
Oil Pan.....	4.7
Ventilating System .....	4.8
Shop Notes - Specifications - Service Tools .....	4.0

**LUBRICATION SYSTEM**

**IN-LINE**

**ENGINES**

The engine lubrication systems, illustrated in Figs. 1 and 2, include an oil intake screen and tube assembly, an oil pump, an oil pressure regulator valve, a full flow oil filter with a by-pass valve, an oil cooler and oil cooler by-pass valve.

The rotor type oil pump is bolted to the back of the engine lower front cover and is driven directly by the crankshaft.

Lubricating oil from the pump passes from the lower front engine cover through short gallery passages in the cylinder block. From the block, the oil flows to the full flow filter, then through the oil cooler and back into the front engine cover and cylinder block oil galleries for distribution to the various engine bearings. The drain from the cylinder head and other engine parts leads back to the oil pan.

Clean engine oil is assured at all times by the use of a

replaceable element type full flow filter. With this type filter, which is installed between the oil pump and the oil cooler, all of the oil is filtered before entering the engine. Should the filter become plugged, the oil will flow through a by-pass valve, which opens at approximately 18-21 psi, directly to the oil cooler.

On current engines, the oil cooler by-pass valve is located on the right-hand side of the engine front cover and the oil pressure regulator valve is located on the left-hand side as viewed from the rear of the engine (Figs. 1 and 2). On former engines, both valves were located on the right-hand side of the cover (Figs. 1 and 2).

If the cooler becomes plugged, the oil flow will be to a by-pass valve in the lower engine front cover and then to the cylinder block oil galleries. The by-pass valve opens at approximately 52 psi in the current In-line engines.

In the former In-line engines, the by-pass valve opens at approximately 30 psi.

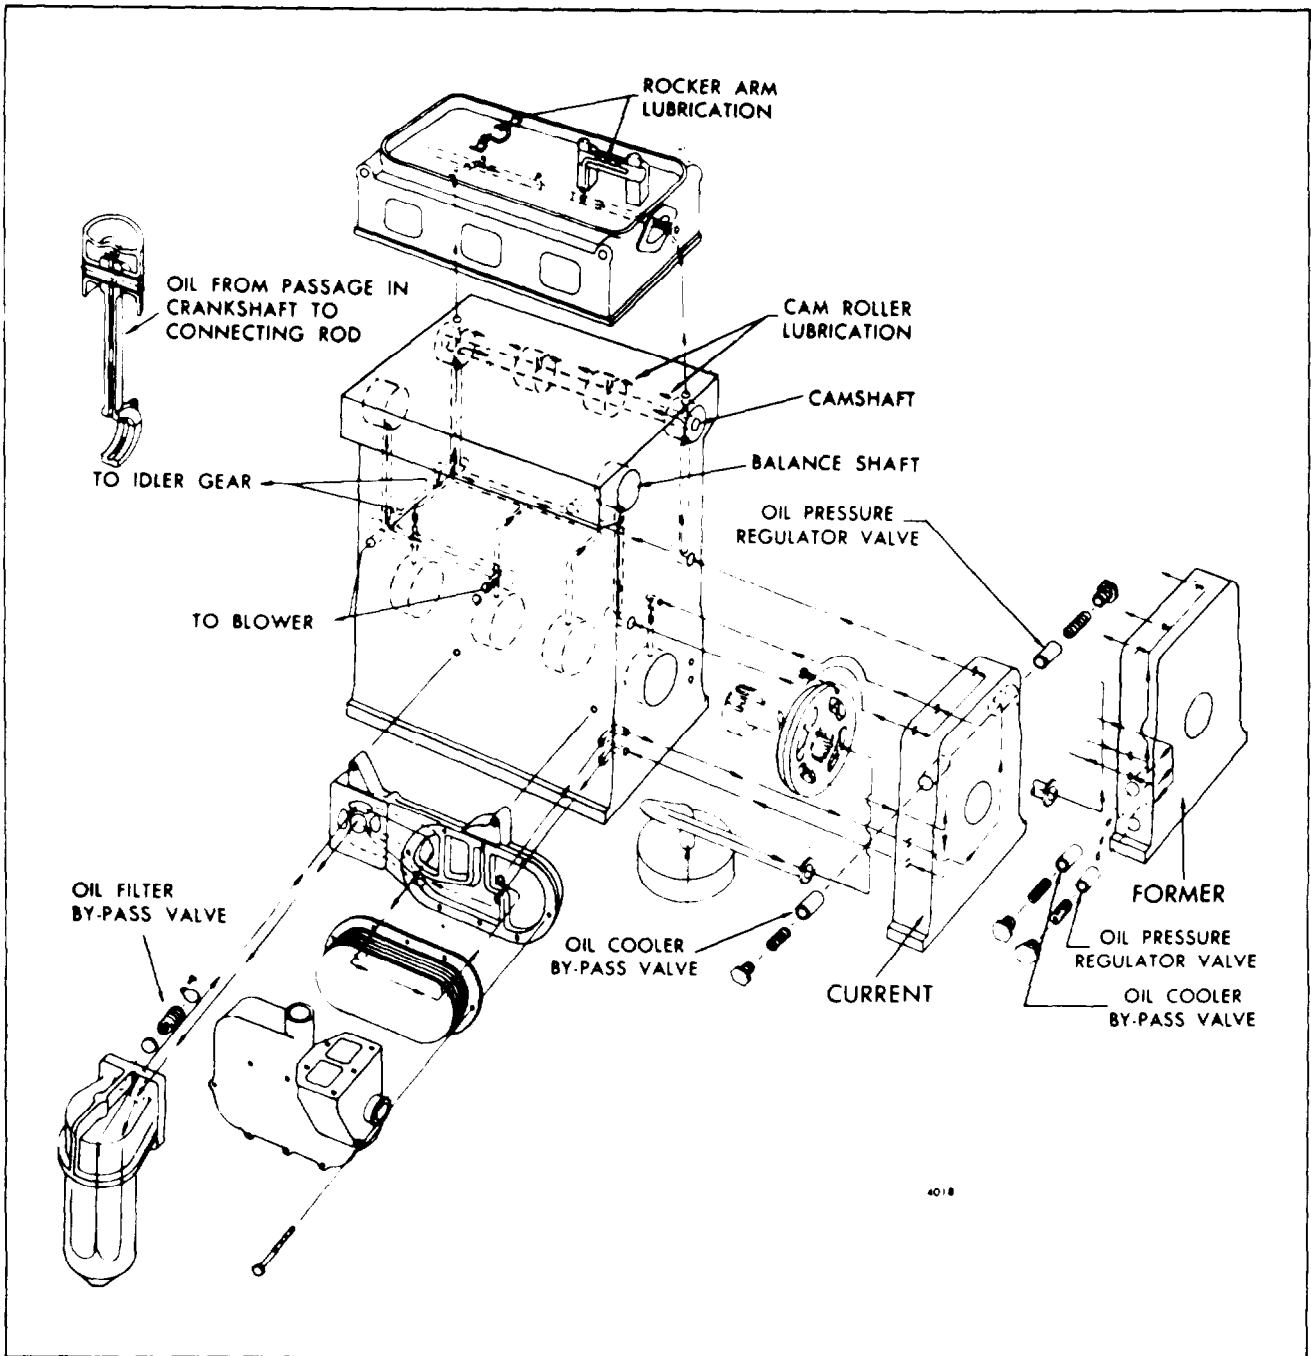


Fig. 1 - Schematic Diagram of Typical In-Line Engine Lubrication System

temperature. by means of a regulator valve located in the lower front engine cover. The regulator valve. located in the pump outlet passage. opens at 51 psi on In-line engines and returns excess oil directly to the crankcase.

Stabilized lubricating oil pressure is maintained within the engine at all speeds, regardless of the oil

#### Lubricating Oil Distribution

Oil from the oil cooler on the In-line engine is directed to the lower engine front cover and then to a longitudinal main oil gallery in the cylinder block. As shown in Fig. 1, this gallery distributes the oil, under pressure, to the main bearings and to a horizontal transverse passage at one end of the block and to vertical passages at each corner of the block which provide lubrication for the balance shaft and camshaft bearings. The camshaft bearings incorporate small slots through which lubricating oil is directed to the cam follower rollers.

In addition, oil is forced through an oil passage in each camshaft which lubricates the camshaft intermediate bearings. All of the camshaft bearings incorporate small slots through which lubricating oil is directed at the cam follower rollers.

Oil lubricating the connecting rod bearings, piston pins, and for cooling the piston head is provided through the drilled crankshaft from the adjacent forward main bearings. The gear train is lubricated by the overflow of oil from the camshaft pocket through a communicating passage into the flywheel housing. Some oil spills into the flywheel housing from the bearings of the camshafts, balance shaft (In-line engine),

Drilled oil passages on the camshaft side of the cylinder head (Fig 1) are supplied with oil from the bores located at each end of the cylinder block. Oil from these drilled passages enters the drilled rocker shaft brackets at the lower ends of the drilled bolts and lubricates the rocker arm bearings and push rod clevis bearings.

Excess oil from the rocker arms lubricates the lower ends of the push rods and cam followers, then drains to cam pockets in the top of the cylinder block, from which the cams are lubricated. When these pockets are filled, the oil overflows through holes at each end of the cylinder block and then through the flywheel housing and front cover to the crankcase.

The blower bearings are pressure lubricated by oil from drilled passages in the cylinder block which connect matching passages in the blower end plates which, in turn, lead to the bearings. On current engines, lubricating oil is supplied directly to the front and rear right bank camshaft end bearings and supplies oil to the blower bearings. On former engines,

the blower bearings received lubrication indirectly via the right rear camshaft end bearing only. Excess oil returns to the crankcase via drain holes in the blower end plates which lead to corresponding drain holes in the cylinder block (In-line engines),

One tapped oil pressure take-off hole is provided in the lower engine front cover on some In-line engines.

In addition, tapped oil holes in the cylinder block, on the side opposite the blower, are also provided as follows:

three holes when the blower is on the right side of the engine.

#### Cleaning Lubrication System

Thorough flushing of the lubrication system is required at times. Should the engine lubrication system become contaminated by ethylene glycol antifreeze solution or other soluble material, refer to Section 5 for the recommended cleaning procedure

## LUBRICATING OIL PUMP

### IN-LINE

The lubricating oil pump, assembled to the inside of the lower engine front cover as illustrated in Fig. 1, is of the rotor type in which the inner rotor is driven by a gear pressed on the front end of the crankshaft. The outer rotor is driven by the inner rotor. The bore in the pump body, in which the outer rotor revolves, is eccentric to the crankshaft and inner rotor. Since the outer rotor has nine cavities and the inner rotor has eight lobes, the outer rotor revolves at eight-ninths crankshaft speed. Only one lobe of the inner rotor is in full engagement with the cavity of the outer rotor at any given time, so the former can revolve inside the latter without interference.

By rotating the pump 180°, it can be used for either a right-hand or left-hand rotation engine.

### Operation

As the rotors revolve, a vacuum is formed on the inlet side of the pump and oil is drawn from the crankcase, through the oil pump inlet pipe and a passage in the front cover, into the inlet port and then into the rotor compartment of the pump. Oil drawn into the cavities

between the inner and outer rotors on the inlet side of the pump is then forced out under pressure through the discharge port into a passage in the front cover, which leads to the lubricating oil filter and cooler, and is then distributed throughout the engine.

If a check of the lubrication system indicates improper operation of the oil pump, remove and disassemble it as outlined below.

### Remove Oil Pump

1. Drain the oil from the engine.
2. Remove the crankshaft pulley, fan pulley, support bracket and any other accessories attached to the front cover.
3. Remove the oil pan.
4. Refer to Fig. 2 and remove the four bolts which attach the oil pump inlet pipe and screen assembly to the main bearing cap and engine front cover or oil pump inlet elbow. Slide the flange and the seal ring on the inlet pipe and remove the pipe and screen as an assembly. Remove the oil pump inlet elbow (if used) and gasket from the engine front cover.
5. Remove the lower engine front cover.

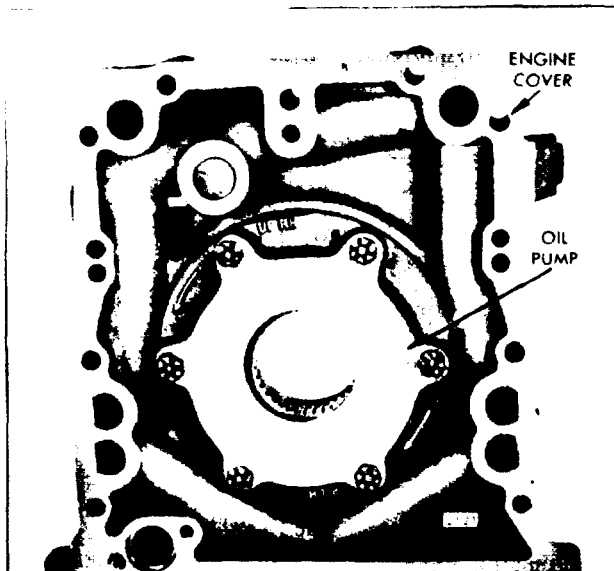


Fig. 1 - Typical Right-Hand Rotation  
Lubricating Oil Pump Mounting

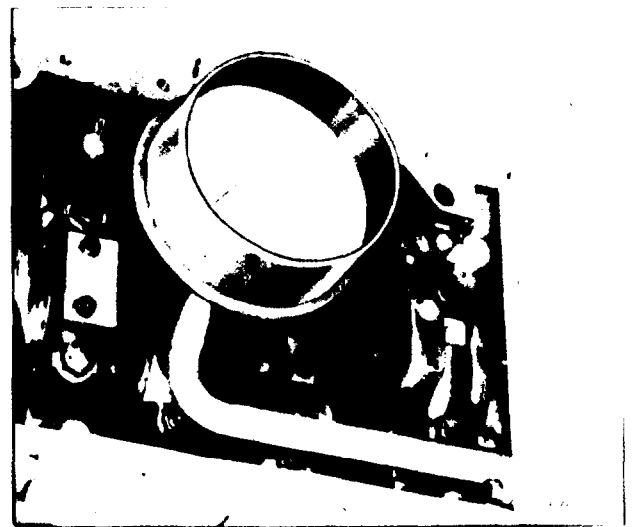


Fig. 2 - Typical Oil Pump Inlet Pipe and  
Screen Mounting

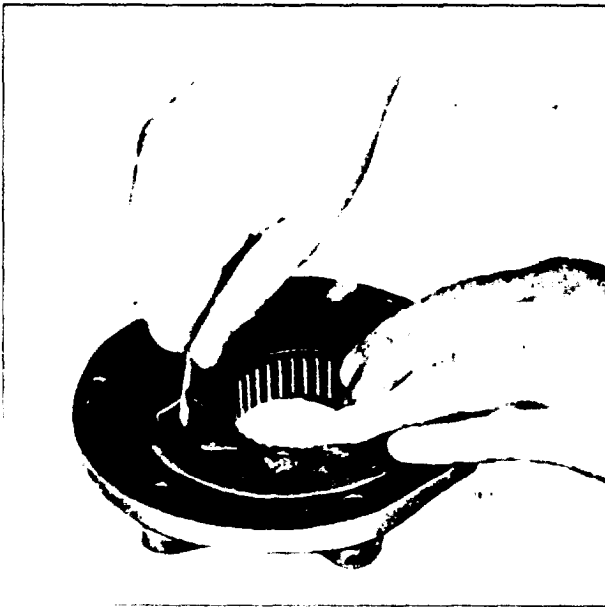


Fig. 3 - Measuring Rotor Clearance

6. Remove the six bolts and lock washers (if used) which attach the pump assembly to the engine front cover (Fig. 1) and withdraw the pump assembly from the cover

#### Disassemble Oil Pump

If the oil pump is to be disassembled for inspection or reconditioning, proceed as follows:

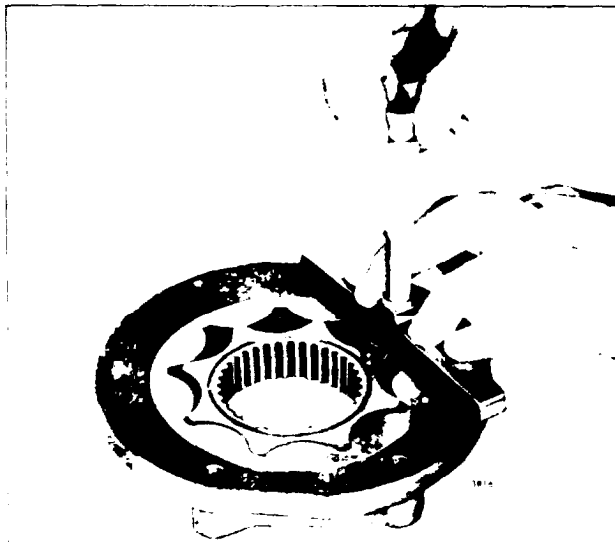


Fig. 4 - Measuring Clearance from Face of Pump Body to Side of Rotor

1. Refer to Fig. 5 and remove the two drive screws holding the pump cover plate to the pump body. Withdraw the cover plate from the pump body.

2. Remove the inner and outer rotors from the pump housing.

#### Inspection

Wash all of the parts in clean fuel oil and dry them with compressed air.

The greatest amount of wear in the oil pump is imposed on the lobes of the inner and outer rotors.

This wear may be kept to a minimum by using clean oil. If dirt and sludge are allowed to accumulate in the lubricating system, excessive rotor wear may occur in a comparatively short period of time.

Inspect the lobes and faces of the pump rotors for scratches or burrs and the surfaces of the pump body and cover plate for scoring. Scratches or score marks may be removed with an emery stone.

Measure the clearance between the inner and outer rotors at each lobe (Fig. 3). The clearance should not be less than .004" or more than .011". Measure the clearance from the face of the pump body to the side of the inner and outer rotor with a micrometer depth gage (Fig. 4). The clearance should be not less than .001" or more than .0035"

Inspect the splines of the inner rotor and the oil pump drive gear. If the splines are excessively worn, replace the parts. The rotors are serviced as matched sets, therefore, if one rotor needs replacing, replace both rotors.

Remove the oil inlet screen from the oil inlet pipe and clean both the screen and the pipe with fuel oil and dry them with compressed air. Replace the inlet pipe flange seal ring with a new seal ring if necessary.

#### Assemble Oil Pump

After the oil pump parts have been cleaned and inspected, refer to Fig. 5 or 6 and assemble the pump as follows:

1. Lubricate the oil pump outer rotor with engine oil and place it in the pump body.

2. Lubricate the oil pump inner rotor with engine oil and place it inside of the outer rotor.

3. Place the cover plate on the pump body and align the drive screw and bolt holes with the holes in the

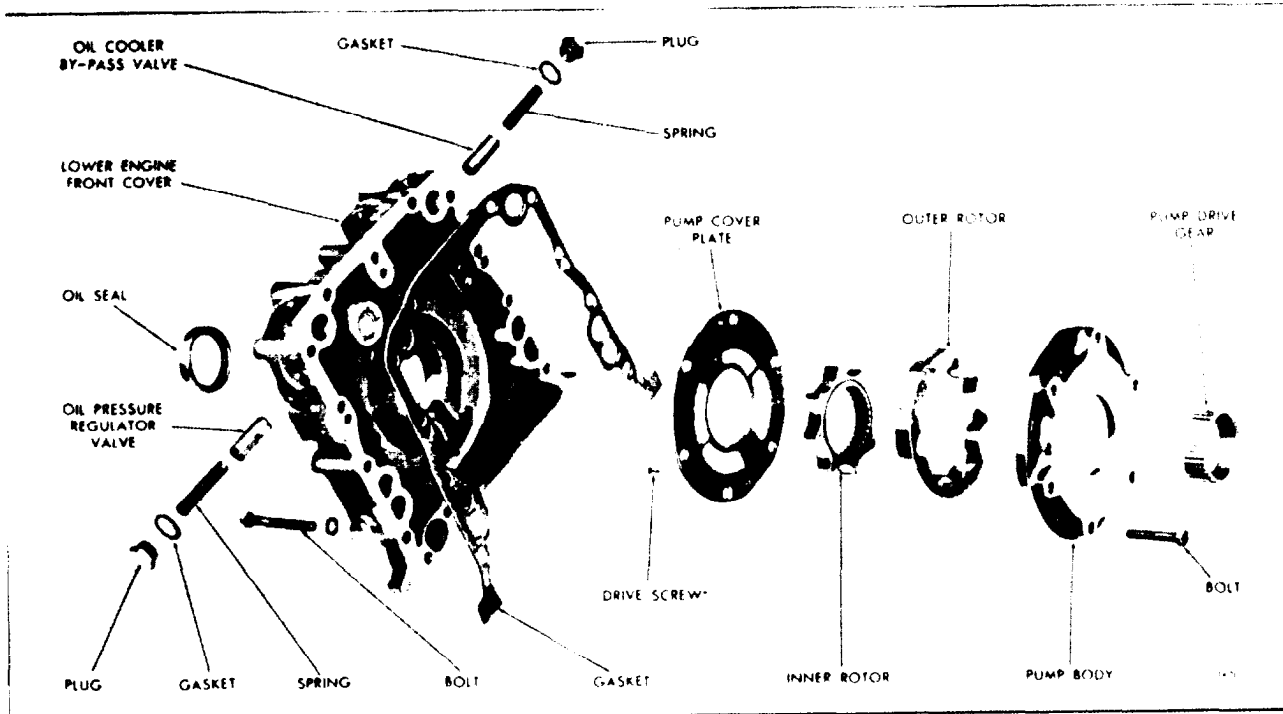


Fig. 5 - Lubricating Oil Pump Details and Relative Location of Parts (Current)



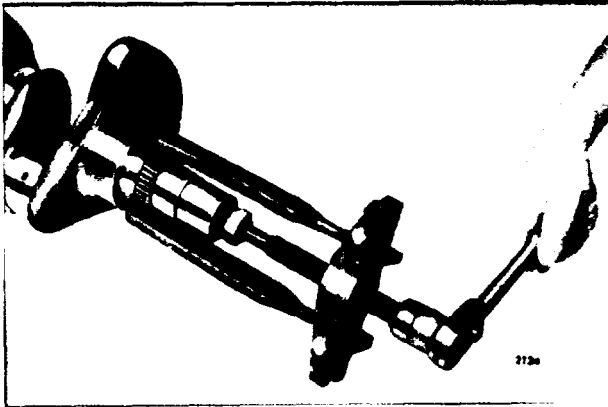


Fig. 7 - Removing Oil Pump Drive Gear

pump body. Since the holes are offset, the cover plate can be installed in only one position.

4. Install two new drive screws to hold the assembly together.

Remove pump Drive Gear From Crankshaft

With the lower engine front cover and the lubricating oil pump removed from the engine, the oil pump drive gear may, if necessary, be removed from the end of the crankshaft as follows:

1. Thread the crankshaft pulley retaining bolt in the end of the crankshaft (Fig. 7).
2. Attach the jaws of a suitable gear puller behind the gear and locate the end of the puller screw in the center of the pulley retaining bolt.
3. Turn the puller screw clockwise to remove the gear from the crankshaft.

Install Pump Drive Gear on Crankshaft

1. Lubricate the inside diameter of a new oil pump drive gear with engine oil. Then start the gear straight on the crankshaft. Re-installation of a used gear is not recommended.
2. Position the drive gear installer J 8968-01 over the end of the crankshaft and against the drive gear and force the gear in place as shown in Fig. 8. When the end of the bore in the tool contacts the end of the crankshaft, the drive gear is correctly positioned.

3. It is important that the press fit of the drive gear to the crankshaft be checked to be sure that the gear does not slip on the crankshaft. It is recommended the press

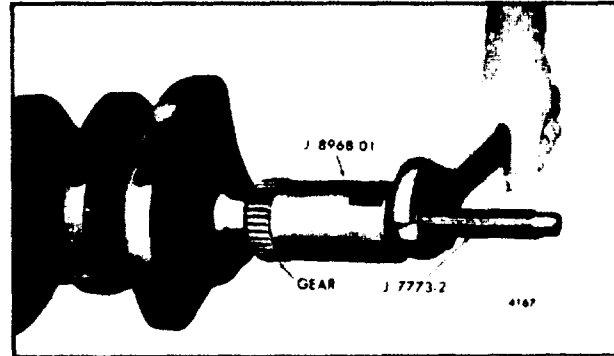


Fig. 8 - Installing Oil Pump Drive Gear

fit (slip torque) be checked with tool J 23126. On In-line engines, the drive gear should not slip on the crankshaft at 100 lb-ft torque.

**CAUTION:** Do not exceed these torques. If the gear slips on the shaft, it is suggested that another oil pump drive gear be installed.

Install Oil Pump

1. The markings on the pump body indicate the installation as pertaining to left or right-hand crankshaft rotation. Be sure that the letters "UP R.H." (right-hand rotation engine) on the pump body are at the top (Fig. 1).
2. Insert the six bolts with lock washers (if used) through the pump body and thread them into the engine front cover. Tighten the bolts to 13-17 lb-ft torque.

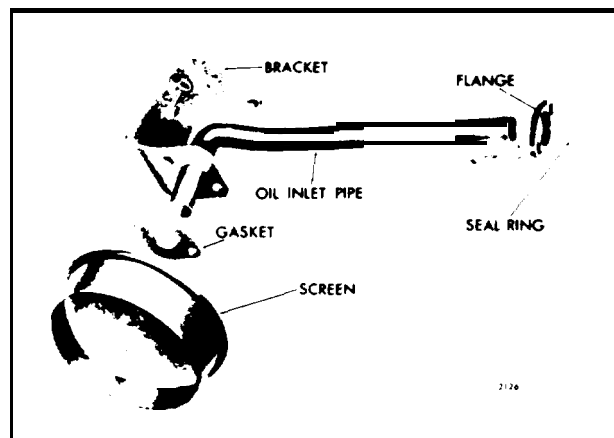


Fig. 9 - Oil Pump Inlet Pipe and Screen Details and Relative Location of Parts (In-Line Engine)

3. Install the lower engine front cover and pump assembly on the engine as outlined in Section 1.3.5.

4. Attach the oil inlet screen to the oil inlet pipe support with two bolts and lock washers (Fig. 9).

6. Place the oil pump inlet pipe and screen assembly in position and fasten the support to the main bearing cap with the two bolts and lock washers.


7. Slide the inlet pipe flange and seal ring against the

engine front cover and secure them with the two bolts and lock washers.

**CAUTION:** On In-line engines, the oil pump inlet tube and water by-pass tube seals are the same size but of different material. *Be sure that the correct seal is used.* A new oil pump inlet tube seal may be identified by its white stripe.

8. Install the oil pan and refill the crankcase to the proper level.

9. Install the crankshaft pulley, fan pulley, support bracket and any other accessories that were attached to the front cover.



## LUBRICATING OIL PRESSURE REGULATOR

### IN-LINE

### ENGINES

Stabilized lubricating oil pressure is maintained within the engine at all speeds, regardless of oil temperature, by a pressure regulator valve installed in the engine lower front cover as shown in Fig 1.

The regulator assembly consists of a hollow piston type valve, a spring, gasket and plug. The valve is located in an oil gallery within the lower front cover and is held tight against a counterbored valve seat by the valve spring and plug. When the oil pressure exceeds a given value as shown in the following chart, the valve is forced from its seat and the lubricating oil is by-passed into the engine oil pan.

Engine	Front Cover	Valve Opening Pressure (psi)
In-line		
	Current	51

Under normal conditions, the pressure regulator valve should require very little attention. If sludge accumulates in the lubrication system, the valve may not work freely, thereby remaining open or failing to open at the normal operating pressure.

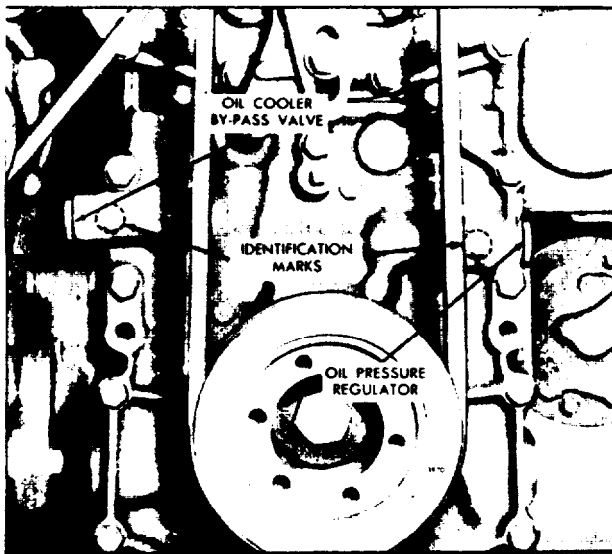


Fig. 1 - Location of Current Oil Pressure Regulator Valve -- In-line Engine Shown

Whenever the lubricating oil pump is removed for inspection, the regulator valve and spring should also be removed, thoroughly cleaned in fuel oil and inspected.

#### Remove Oil Pressure Regulator

1. Remove the plug and washer from the engine lower front cover.
2. Withdraw the spring and the valve from the cover.

#### Inspection

Clean all of the regulator parts in fuel oil and dry them with compressed air. Then inspect the parts for wear or damage.

The regulator valve must move freely in the valve bore. If the valve is scored and cannot be cleaned up with crocus cloth, it must be replaced.

Replace a fractured or pitted spring.

#### Install Oil Pressure Regulator

1. Apply clean engine oil to the outer surface of the valve and slide it-into the opening in the engine lower front cover (closed end first).
2. Install a new copper gasket on the plug.
3. While compressing the spring, start the plug in the side of the cover; then tighten the plug.



## LUBRICATING OIL COOLER

Engine oil coolers are provided for all engine.

The oil cooler is mounted on the side of the cylinder block at the lower front corner.

To Assure engine lubrication should the oil cooler become plugged, a by-pass valve located near the top of the lower engine front cover by-passes oil from the oil pump discharge port directly to the oil galleries in the cylinder block. The by-pass valve opens at approximately 52 psi (current In-line engines).

The valve components are the same as and serviced in the same manner as the oil pressure regulator valve in Section 4.1.1.

Cooling water circulated through the oil cooler completely surrounds the oil cooler core. Therefore, whenever an oil cooler is assembled, special care must be taken to have the proper gaskets in place and the retaining bolts tight to assure good sealing.

The oil cooler housing on an In-line engine is attached to an oil cooler adaptor which, in turn, is attached to the cylinder block. The flow of oil is from the oil

pump through a passage in the oil cooler adaptor to the full flow oil filter, which is also mounted on the oil cooler adaptor, and then through the oil cooler core and the cylinder block oil galleries.

### Remove Oil Cooler Core

1. Drain the cooling system by opening the drain cock at the bottom of the oil cooler housing.
2. Remove any accessories or other equipment necessary to provide access to the cooler.
3. On In-Line engines, loosen and slide the clamps and hose back on the water inlet elbow on the cylinder block.
4. Loosen and slide the clamps and hose back on the tube leading from the thermostat to the water pump.
5. Remove the bolts and lock washers which attach the water pump to the oil cooler housing.
6. Matchmark the end of the oil cooler housing, cooler core and adaptor with a punch or file so they can be reinstalled in the same position.
7. Remove the bolts and lock washers which attach the oil cooler housing to the adaptor or cylinder block and remove the housing and core as an assembly. Be careful when withdrawing the assembly not to drop or damage the cooler core.

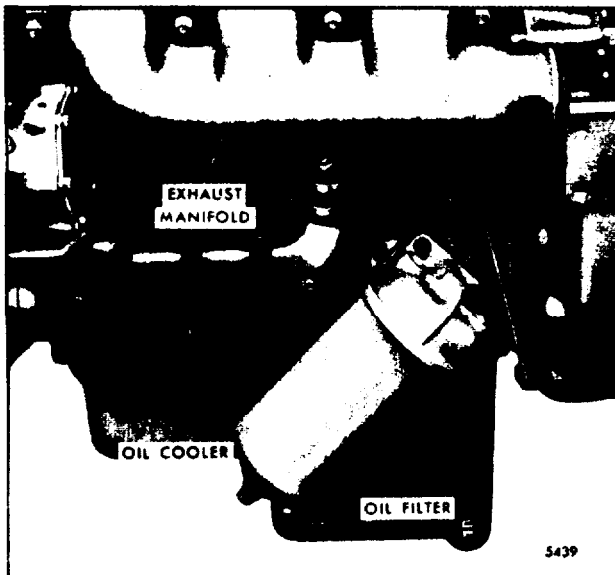


Fig. 1 - Typical oil Cooler Mounting (6V-53 Engine Shown)

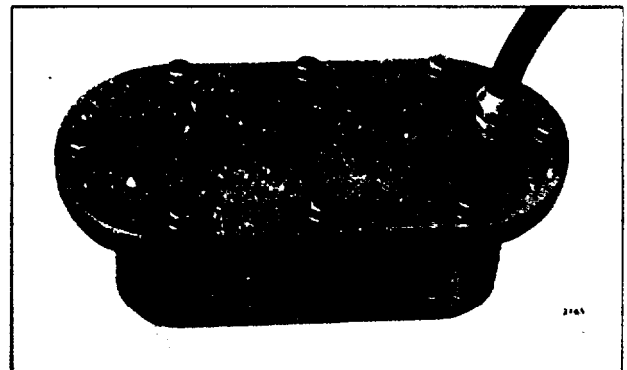


Fig. 2 - Preparing Oil Cooler Core for Pressure Test

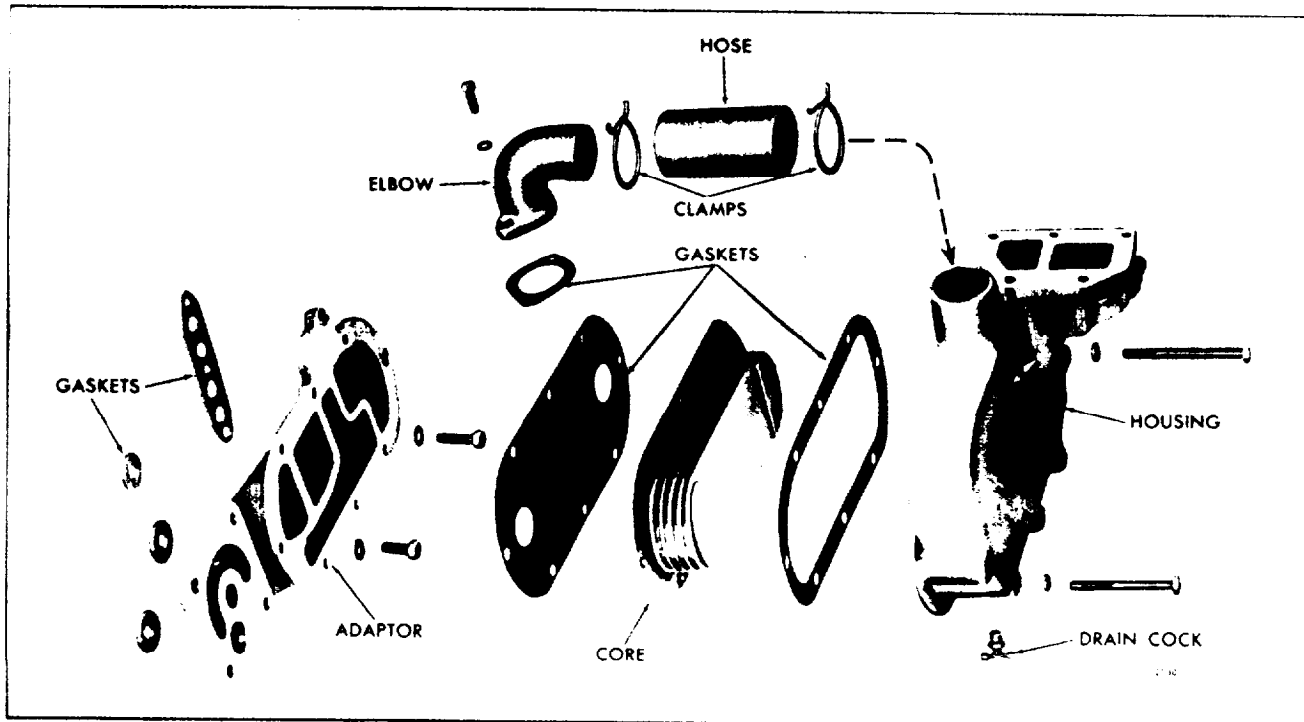


Fig. 3 - oil Cooler Details and Relative Location of Parts (In-Line Engine)

8. If the adaptor (in-line engine) is to be removed, the oil filter must first be removed. Then remove the bolts and lock washers which attach the adaptor to the

cylinder block. Withdraw the adaptor and gaskets.

9. Remove all traces of gasket material from the cylinder block and the oil cooler components.

### Clean Oil Cooler Core

1. *Clean oil side of Core* - Remove the core from the oil cooler. Circulate a solution of trichloroethylene through the core passages with a force pump to remove the carbon and sludge

**CAUTION:** This operation should be done in the open or in a well ventilated room when trichloroethylene or other toxic chemicals are used for cleaning.

Clean the core before the sludge hardens. If the oil passages are badly clogged, circulate an Oakite or alkaline solution through the core and flush thoroughly with clean, hot water.

2. *Clean water side of Cooler* - After cleaning the oil side of the core, immerse it in the following solution: Add one-half pound of oxalic acid to each two and one-half gallons of solution composed of one third muriatic acid and two-thirds water. The cleaning action is evidenced by bubbling and foaming.

Watch the process carefully and, when bubbling stops (this usually takes from 30 to 60 seconds), remove the core from the cleaning solution and thoroughly flush it with clean, hot water. After cleaning, dip the core in light oil.

**NOTE:** Do not attempt to clean an oil cooler core when an engine failure occurs in which metal particles from worn or broken parts are released into the lubricating oil. Replace the oil cooler core.

### Pressure Check Oil Cooler Core

After the oil cooler core has been cleaned, check for leaks as follows:

1. Make a suitable plate and attach it to the flanged side of the cooler core. Use a gasket made from rubber to assure a tight seal. Drill and tap the plate to permit an air hose fitting to be attached at the inlet side of the core (Fig. 2).

2. Attach an air hose, apply approximately 75-150 psi air pressure and submerge the oil cooler core and plate assembly in a container of water heated to 180°F. Any leaks will be indicated by air bubbles in the water. If leaks are indicated, replace the core.

**CAUTION:** When making this pressure test be sure that personnel are adequately protected against any stream of pressurized water from a leak or rupture of a fitting, hose or the oil cooler core.

3. After the pressure check is completed, remove the plate and air hose from the cooler core, then dry the core with compressed air.

**NOTE:** In cases where a leaking oil cooler core has caused contamination of the engine, the engine must be immediately flushed to prevent serious damage (refer to Section 5)

### Install Oil Cooler Core

1. If the oil cooler adaptor (In-Line engines) was removed from the cylinder block, remove the old gasket material from the bosses where the adaptor sets against the block. Affix new adaptor gaskets (Fig. 3), then secure the adaptor to the cylinder block with five bolts and lock washers.

2. Clean the old gasket material from both faces of the core flange and affix new gaskets to the inner and outer faces (Fig. 3). Insert the core into the cooler housing.

**NOTE:** The inlet and outlet openings in the oil cooler core are stamped "IN" and "OUT". It is very important that the core be installed in the correct position to prevent any possibility of foreign particles and sludge, which may not have been removed in cleaning the fins of the core, entering and circulating through the engine.

3. Align the matchmarks previously placed on the core and housing and install the oil cooler core in the oil cooler housing.

4. With the matchmarks in alignment, place the oil cooler housing and core against the oil cooler adaptor (In-Line engines).

Tighten the bolts to  
13-17 lb-ft torque.

5. Slide the hose and clamps in position between the cylinder block water inlet elbow and the oil cooler. Secure the clamps in place.

6. Place a new gasket between the fresh water pump and the cooler housing and secure the pump to the cooler housing.

7. Position the hose and clamps in place between the water pump and the tube to the thermostat housing. Secure the clamps.

8. Install all of the accessories or equipment it was necessary to remove.



9. Reinstall the oil filter (In-Line engine).

cooler housing is closed Then fill the cooling system to the proper level.

10. Make sure the draincock in the bottom of the

### OIL LEVEL DIPSTICK

A steel ribbon type oil level dipstick IS mounted in an adaptor on the side of the engine (Fig. 1) to check the amount of oil in the engine oil pan. The dipstick has markings to indicate the Low and full oil level.


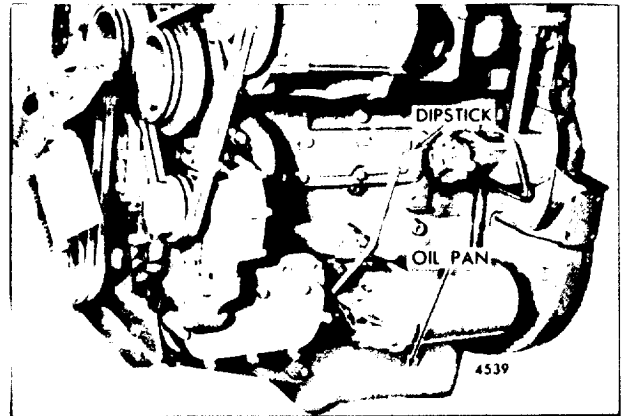


Fig. 1 - Typical oil Dipstick Mounting

The engine should not be operated if the oil level is below the Low mark and no advantage is gained by having the oil quantity above the Full mark. Start and operate the engine for ten minutes to fill the oil filter, oil passages, etc., then stop the engine. After the engine has been stopped for a minimum of ten

minutes, add oil as required to bring the oil level up to the full mark on the dipstick.



## OIL PAN

The oil pan may be made of steel, cast iron or cast aluminum. A shallow or deep sump type oil pan is used, depending upon the particular engine application. A one-piece oil pan gasket is used with stamped steel pans.

### Removing and Installing Oil Pan

On some engine applications, it may be possible to remove the oil pan without removing the engine. It is recommended that if the engine is to be taken out of the unit, the oil pan be left in place until the engine is removed.

The procedure for removing the oil pan without taking the engine out and after taking the engine out of the unit will vary. However, the following will generally apply.

1. Remove the drain plug and drain the engine lubricating oil.
2. Detach the oil pan; take precautions to avoid damaging the oil pump inlet pipe and screen.

**NOTE:** Stamped oil pans used on some marine engines have a layer of lead or cadmium beneath the paint to protect the pans against the salt water atmosphere encountered in some marine applications. If this coating is scuffed or broken unknowingly, corrosion or electrolysis may result. Electrolysis in the form of small holes will eat through the pan at the scuffed area. Therefore, do not rest, slide or rock the engine on its oil pan when removing it. Every precaution should be taken before installation to prevent nicks and scratches on stamped marine oil pans. Also exercise care when performing engine repairs to avoid scratching the outer surface of the oil pan.

3. Remove the oil pan gasket completely

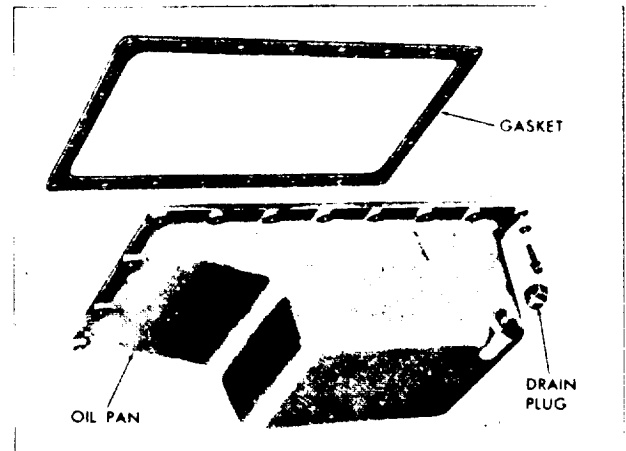


Fig. 1 - Typical oil Pan

4. Clean the oil pan with a suitable solvent and dry it with compressed air.
5. Inspect a cast oil pan for porosity or cracks. Check a stamped oil pan for large dents or breaks in the metal which may necessitate its repair or replacement. Check for misaligned flanges or raised surfaces surrounding the bolt holes by placing the pan on a surface plate or other large flat surface.
6. When replacing the pan, use a new gasket and tighten the bolts evenly to avoid damaging the gasket or springing the pan.
8. Install and tighten the oil drain plug. Tighten the plug (with nylon washer) to 25-35 lb-ft torque. Replenish the lubricating oil supply and, after the engine is started, check for leaks.



**VENTILATING SYSTEM**

Harmful vapors which may be formed within the engine are removed from the crankcase, gear train and valve compartment by a continuous, pressurized ventilating system.

A slight pressure is maintained in the engine crankcase by the seepage of a small amount of air from the airbox past the piston rings. This air sweeps up through the engine and is drawn off through a crankcase breather.

In-line engines are equipped with a breather assembly attached to the valve rocker cover (Fig. 1) or a breather assembly mounted on the flywheel housing (Fig. 2).



Fig. 1 - Typical Crankcase Breather Mounting (In-line Engine)

**Service**

It is recommended that the breather tube be inspected and cleaned, if necessary, to eliminate the possibility

of clogging. This can best be done by removing the tube from the engine, washing it with a suitable solvent and drying it with compressed air.

The wire mesh pad (element) in the breather

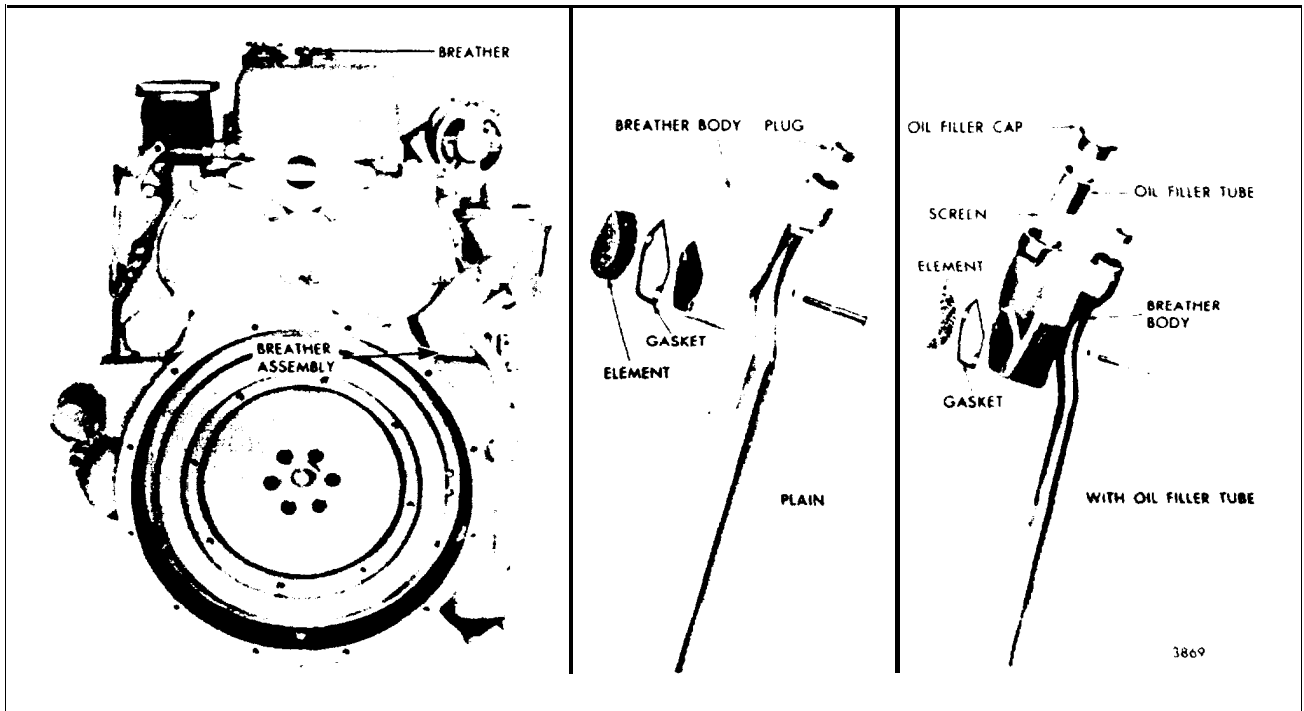


Fig. 2 - Crankcase Breather Mounting and Details (In-Line Engine)

assemblies should be cleaned if excessive crankcase pressure is observed.

If it is necessary to clean the element, remove the breather housing from the flywheel housing (In-line engines).

Wash the element in fuel oil and dry it with compressed air.

Reinstall the element in the breather housing, the upper front cover or the governor housing and/or the valve rocker cover and install them by reversing the procedure for removal.

**SPECIFICATIONS - SERVICE TOOLS**



**SPECIFICATIONS**

STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

THREAD SIZE	TORQUE (lb-ft)	THREAD SIZE	TORQUE (lb-ft)
1/4 -20	7-9	9/16-12	90-100
1/4 -28	8-10	9/16-18	107-117
5/16-18	13-17	5/8 -11	137-147
5/16-24	15-19	5/8 -18	168-178
3/8 -16	30-35	3/4 -10	240-250
3/8 -24	35-39	3/4 -16	290-300
7/16-14	46-50	7/8 -9	410-420
7/16-20	57-61	7/8 -14	475-485
1/2 -13	71-75	1 -8	580-590
1/2 -20	83-93	1 -14	685-695

EXCEPTIONS TO STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

APPLICATION	TORQUE (lb-ft)
Oil filter center stud	40-50
Oil pan drain plug (Nylon washer) 18mm	25-35

**SERVICE TOOLS**

TOOL NAME	TOOL NO
Crankshaft and oil pump gear puller	J 3051
Oil pump drive gear installer	J 8968-01
Oil pump drive gear adaptor	J 23126
Two-arm steel grip puller	J 8174

**SECTION 5**  
**COOLING SYSTEM**  
**CONTENTS**

<b>Water Pump</b>	<b>5.1</b>
<b>Thermostat</b>	<b>5.2.1</b>
<b>Engine Cooling Fan</b>	<b>5.4</b>
<b>Coolant Filter and Conditioner</b>	<b>5.7</b>
<b>Specifications - Service Tools</b>	<b>5.0</b>





## WATER PUMP

A centrifugal-type water pump (Fig. 1) is mounted on top of the engine oil cooler housing as shown in Fig. 2. It circulates the coolant through the oil cooler, cylinder block, cylinder head(s) and radiator.

The pump is belt driven by either the camshaft or balance shaft (In-line engines).

An impeller is pressed onto one end of the water pump shaft, and a water pump drive pulley is pressed onto the opposite end. The pump shaft is supported on a sealed double-row combination radial and thrust ball bearing. Coolant is prevented from creeping along the shaft toward the bearing by a seal. The shaft and bearing constitute an assembly, and are serviced as such, since the shaft serves as the inner race of the ball bearing.

The sealed water pump shaft ball bearing is filled with lubricant when assembled. No further lubrication is required.

### Remove Water Pump

1. Remove the radiator cap, open the block and radiator drain cocks, and drain the cooling system.
2. Loosen and remove the water pump belts.

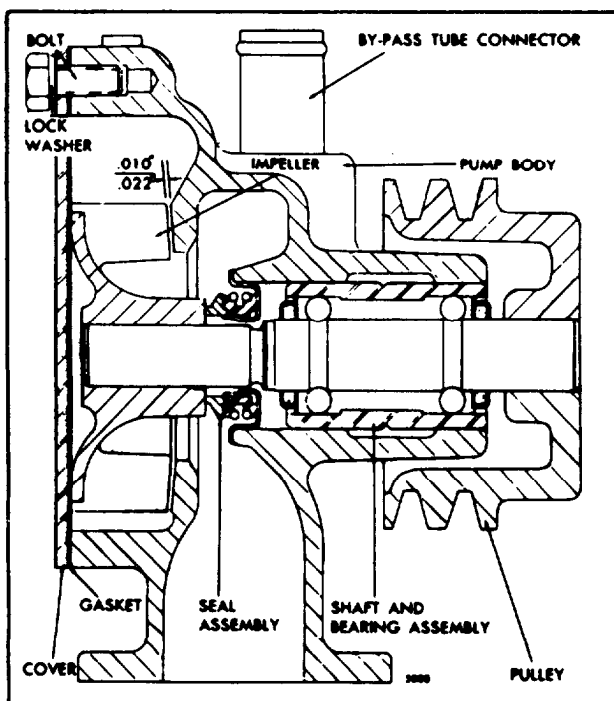


Fig. 1 - Water Pump Assembly

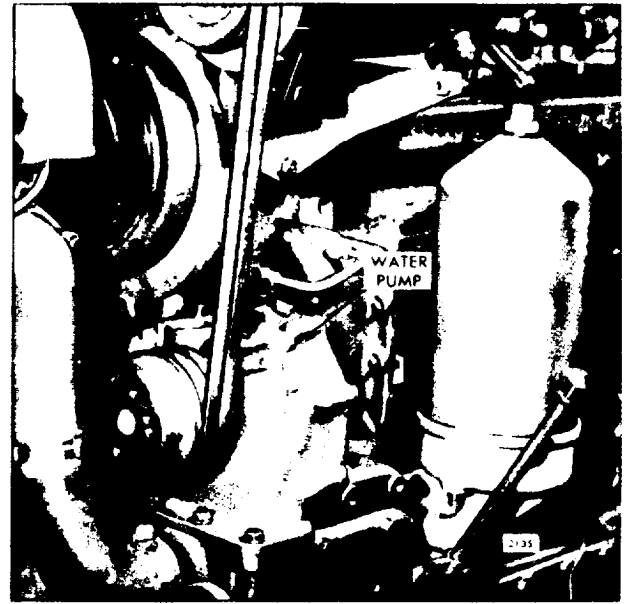


Fig. 2 - Typical Water Pump Mounting

**NOTE:** An idler pulley is used on some engines to adjust the water pump drive belt tension.

3. Loosen the hose clamps and slide the hose up on the water by-pass tube.
4. Remove the five bolts securing the water pump to the oil cooler housing and take off the pump.

### Disassemble Pump

1. Note the position of the pulley on the shaft so that the pulley can be reinstalled in the same position when the pump is reassembled. Remove the water pump pulley as shown in Fig. 3.
2. Remove the pump cover and discard the gasket.
3. Press the shaft and bearing assembly, seal, and impeller out of the pump body as an assembly. by applying pressure on the bearing outer race with remover J 1930.
 

**CAUTION:** The bearing will be damaged if the pump is disassembled by pressing on the end of the pump shaft.
4. Press the end of the shaft out of the impeller as shown in Fig. 4, using plates J 8329 and holder J 358 1.
5. Remove the seal assembly from the pump shaft and discard it.

### Inspection

Wash all of the pump parts, except the bearing and shaft assembly, in clean fuel oil and dry them with compressed air.

**NOTE:** A permanently sealed and lubricated bearing is used in the bearing and shaft assembly and should not be washed. Wipe the bearing and shaft assembly with a clean lintless cloth.

Examine the impeller for damage and excessive wear on the impeller face which contacts the seal. Replace the impeller if it is worn or damaged.

Discard the bearing if it has a general feeling of roughness, is tight or has indications of damage.

### Assemble Pump

1. Use installer J 1930 to apply pressure to the outer race of the bearing as shown in Fig. 5 and press the shaft and bearing assembly into the pump body until the outer race of the bearing is flush with the outer face of the body.

**CAUTION:** The bearing will be damaged if the bearing and shaft assembly is installed by applying pressure on the end of the shaft,

2. Lightly coat the outside diameter of the new seal with sealing compound. Then, with the face of the

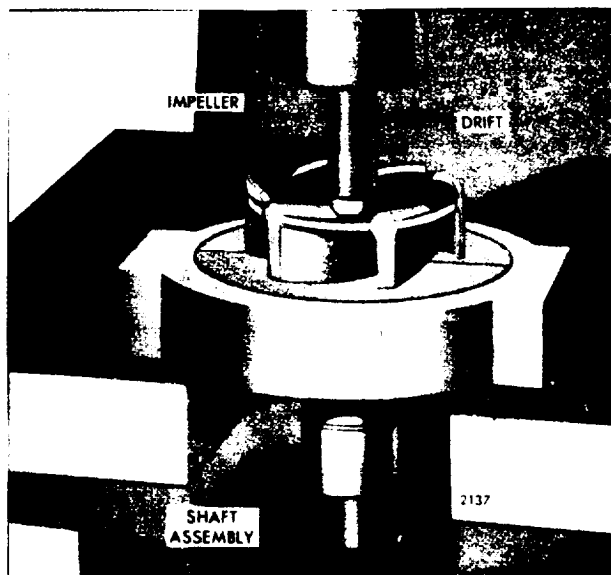


Fig. 4 - Removing Shaft from Impeller with Tools J 8329 and J 358-1

body and the bearing outer race supported, install the seal by applying pressure on the seal outer flange only, until the flange contacts the body (Fig. 1). Wipe the face of the seal with a chamois to remove all dirt and metal particles.

3. Support the pulley end of the shaft on the bed of an arbor press and press the impeller on the shaft until the impeller is flush with the large end of the body.

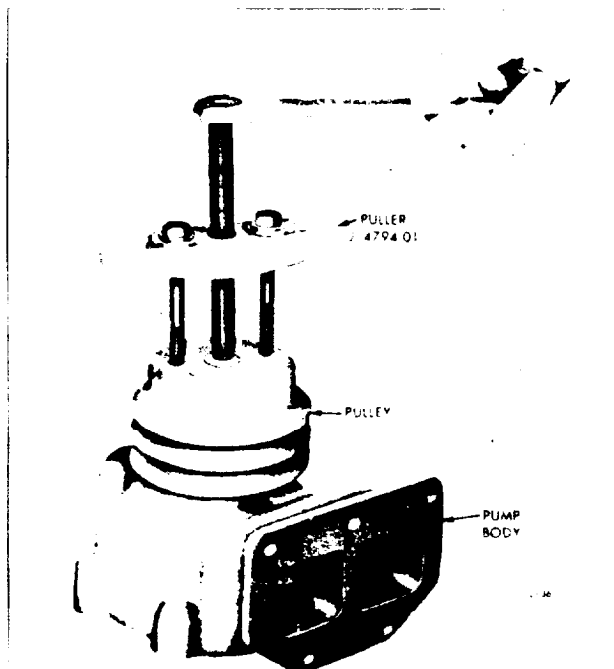


Fig. 3 - Removing Pulley

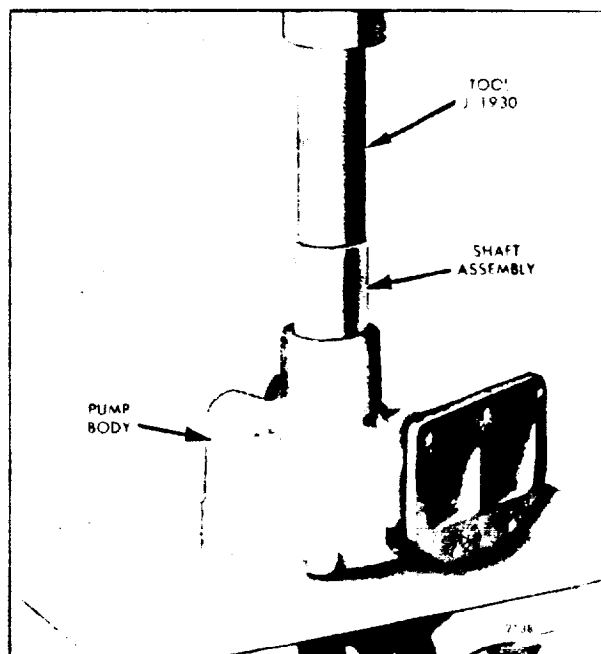


Fig. 5 Pressing Shaft Assembly into Water Pump

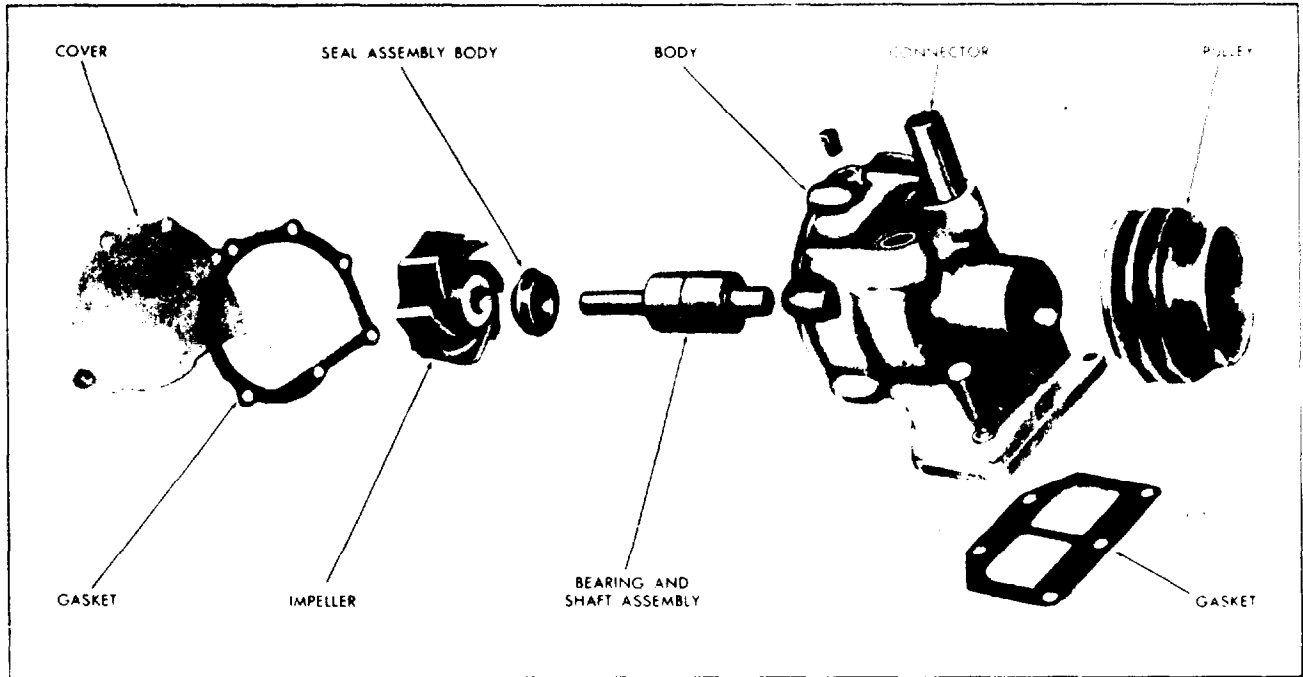


Fig. 6 Fresh Water Pump Details and Relative Location of Parts

4. Place the pulley on the bed of an arbor press. Place a suitable rod between the ram of the press and the impeller end of the shaft, then press the shaft into the pulley until the pulley is in its original position on the shaft.
5. Install the cover and a new gasket on the pump body. Tighten the cover bolts to 6-7 lb-ft torque.
6. Run the pump dry at 1200 rpm for a minimum of 30 seconds, or as required, to assure satisfactory seating of the seal.

**Install Water Pump**

1. Affix a new gasket to the flange of the water pump body.

2. Secure the water pump to the oil cooler housing with the five bolts and lock washers.
3. Install the hose between the water pump and water by-pass tube and tighten the hose clamps.

4. Install and tighten the belts.

**NOTE:** An idler pulley is used on some engines to adjust the water pump drive belt tension.

5. Close all of the drain cocks and refill the cooling system.
6. Start the engine and check for leaks

**FRESH WATER PUMP WITH CERAMIC INSERT IN IMPELLER**

Elective with engine serial number 3D-64888, current water pump assemblies used on Series 53 engines include an impeller and ceramic insert combination (Figs. 7 and 8). Disassembly and assembly of the current water pump is the same as the former water pump except as follows:

When removing the impeller protect the ceramic insert from damage at all times during pump overhaul. Always lay the impeller on the bench with the ceramic insert up to prevent damage to the insert.

Inspect the ceramic insert for cracks, scratches and bond to the Impeller. If the insert is damaged, it may be replaced in the following manner:

1. Bake the used ceramic insert and impeller assemble at 500°F. for one hour to remove the ceramic insert. The ceramic insert can be removed easily from the counterbore while the adhesive is hot. Wire brush the impeller bond area to remove the old adhesive, oxide, scale, etc.

2. Wipe the impeller bond area and the grooved side of the new ceramic insert with a cloth soaked in a

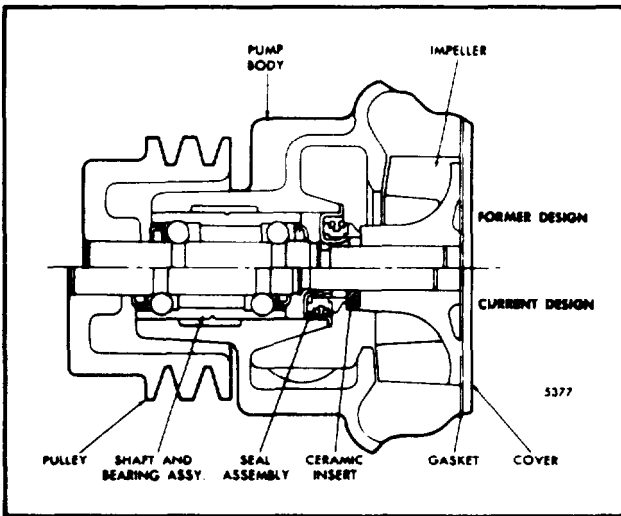


Fig. 7- Comparison of Water Pumps  
common solvent such as alcohol. Wipe clean with a dry cloth.

the ceramic insert should be visible to the assembler. Clamp the ceramic insert and impeller together with a 3/8" bolt and nut and two smooth 1/8" thick washers. Tighten the bolt to 10 lb-ft torque.

**CAUTION:** Do not mar the polished surface of the ceramic insert.

4. Place the impeller assembly in a level position, with the ceramic insert up, in an oven preheated to 350°F. and bake it for one hour.

**NOTE:** The face of the ceramic insert must be square with the axis of the tapered bore within .004". The pump shaft may be used as a mandrel for inspection.

3. Place the adhesive washer in the impeller bond area with the ceramic insert on top. The polished face of

5. Remove the impeller from the oven and, after it has cooled to room temperature, install it in the pump. Do not loosen the clamping bolt until the assembly cools. Make sure the mating surfaces of the water seal and the ceramic insert are free of dirt, metal particles and oil film.

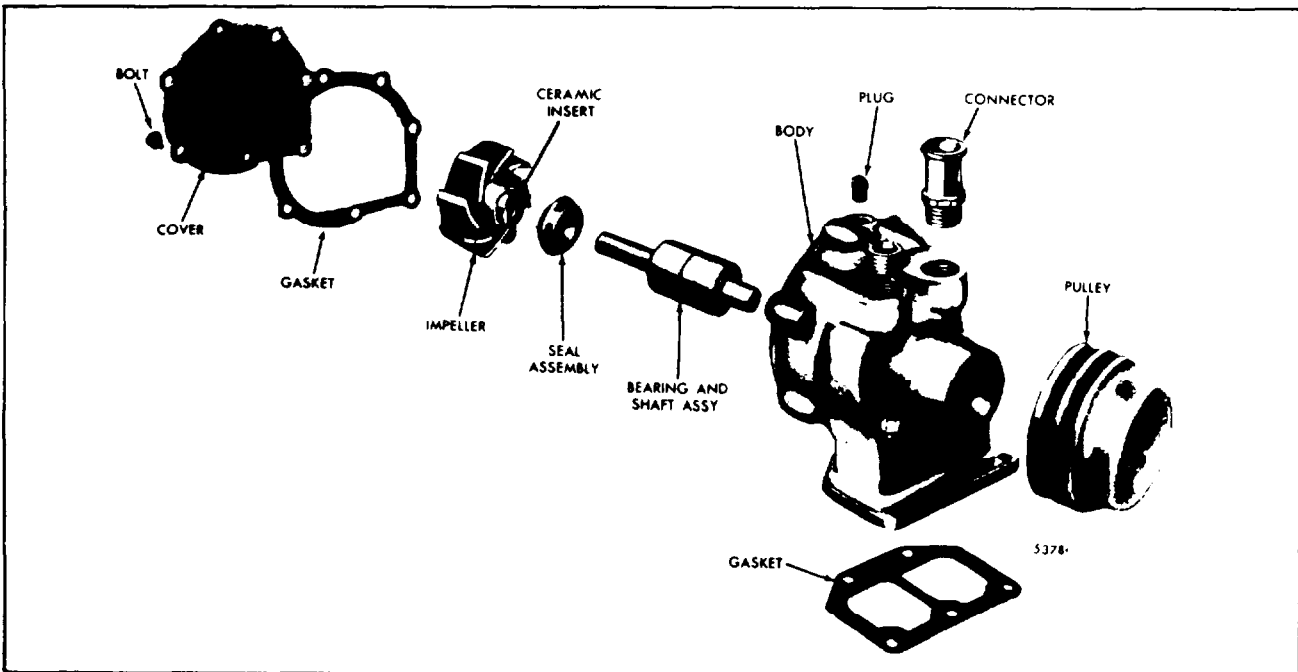


Fig. 8 - Details of Water Pump with Ceramic Seal

## THERMOSTAT

The temperature of the In-line engine coolant is controlled by a single choke type thermostat located in a housing attached to the water outlet end of the cylinder head.

On the In-line engines, a by-pass tube is attached between the thermostat housing and the water pump.

At coolant temperatures below approximately 170°F., the thermostat valve remains closed and blocks the flow of coolant through the radiator or heat exchanger. During this period, the coolant circulates through the cylinder block and head and then back to the suction side of the pump via the by-pass tube. As the coolant temperature rises, the thermostat valve begins to open, restricting the by-pass system and permits the coolant to circulate through the radiator or heat exchanger.

With the valve fully opened in the in-line engine, a very small portion of the coolant will continue to circulate through the by-pass tube, while the major portion will pass through the radiator.

A properly operating thermostat is essential for efficient operation of the engine. If the engine operating temperature deviates from the normal range of 160°F - 185°F., remove and check the thermostat(s).

### Remove Thermostat

1. Drain the cooling system to the necessary level by opening the drain valves.

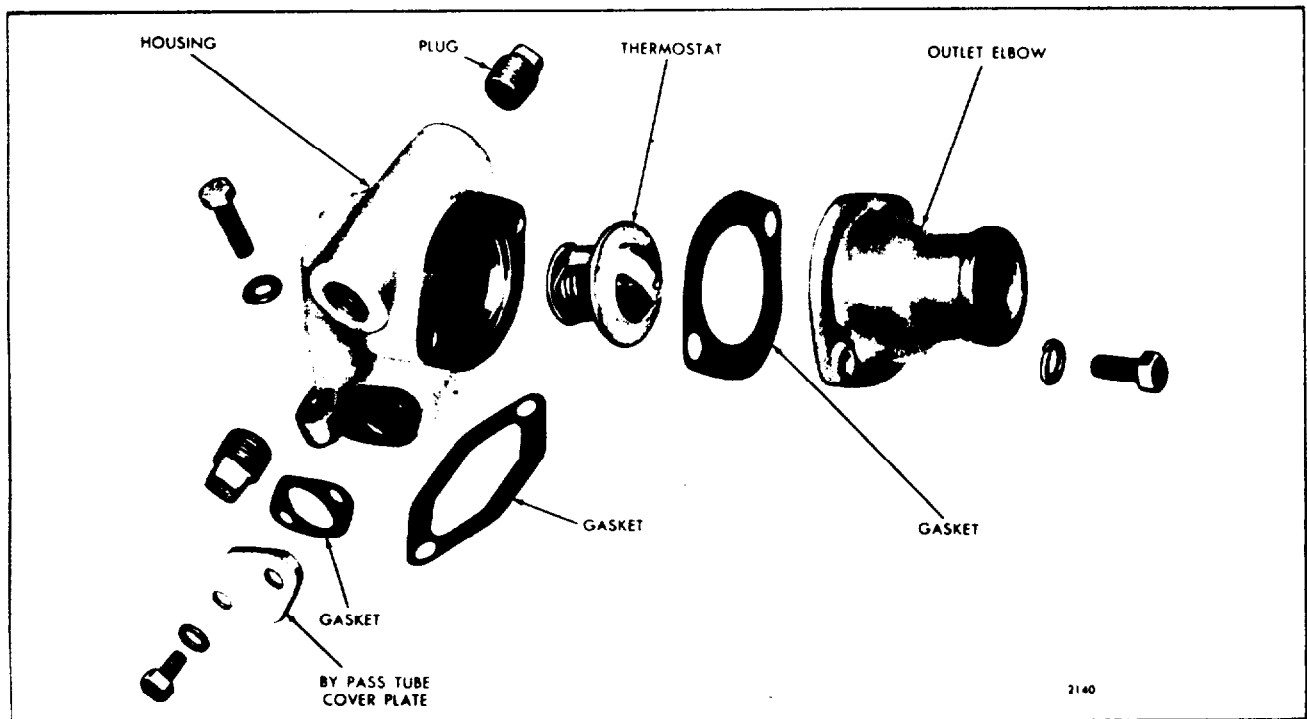


Fig. 2 Thermostat Housing Details and Relative Location of Parts (In-Line Engine)



open when the temperature reaches 167 - 172-F. (In-line engine) or 174 - 176 F. (V-engine). The opening temperature is usually stamped on the thermostat. The thermostat should be fully open at approximately 190 - 192°F.

Clean the thermostat seating surface in the thermostat housing and base or the water outlet elbow.

Check the bleed hole in the thermostat housing to be sure it is open (Fig. 5).

2. Remove the hose connections between the thermostat housing water outlet elbow and the radiator or heat exchanger.

3. Loosen the bolts and remove the water outlet elbow from the thermostat housing on the in-line engine (Fig. 2). Take out the thermostat.

Drill a 3/32" diameter hole in the thermostat housing used on in-line industrial engines built prior to serial number 3D-011 (refer to Fig. 6). This will provide a coolant drain hole for the by-pass cavity in the housing.

#### Install Thermostat

Refer to Fig 2 and install the thermostat(s) as follows:

#### IN-LINE ENGINE:

1. Place a new gasket on the thermostat housing

#### Inspection

If the action of the thermostat has become impaired due to accumulated rust and corrosion from the engine coolant so that it remains closed, or only partially open, thereby restricting the flow of water, overheating of the engine will result. A thermostat which is stuck in a wide open position may not permit the engine to reach its normal operating temperature. The incomplete combustion of fuel due to cold operation will result in a build-up of carbon deposits on the pistons, rings and valves.

The operation of the thermostat may be checked by immersing it in a container of hot water (Fig. 4). Place a thermometer in the container, but do not allow it to touch the bottom. Agitate the water to maintain an even temperature throughout the container. As the water is heated, the thermostat valve should begin to

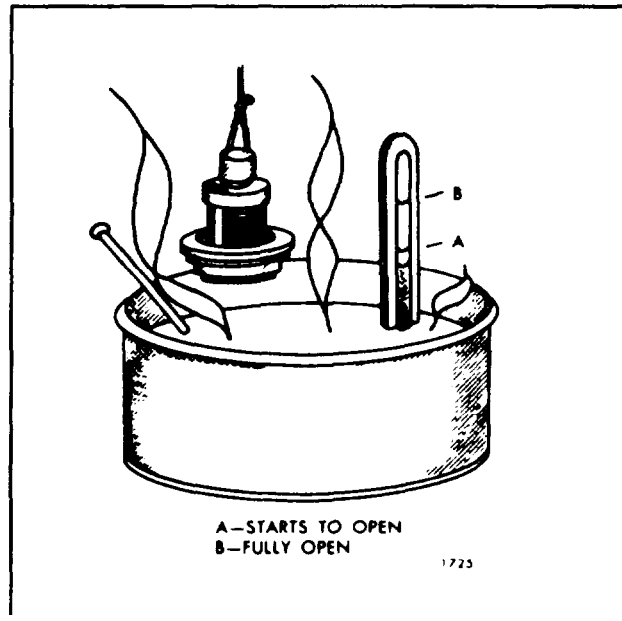


Fig. 4 Method of Checking Thermostat Operation

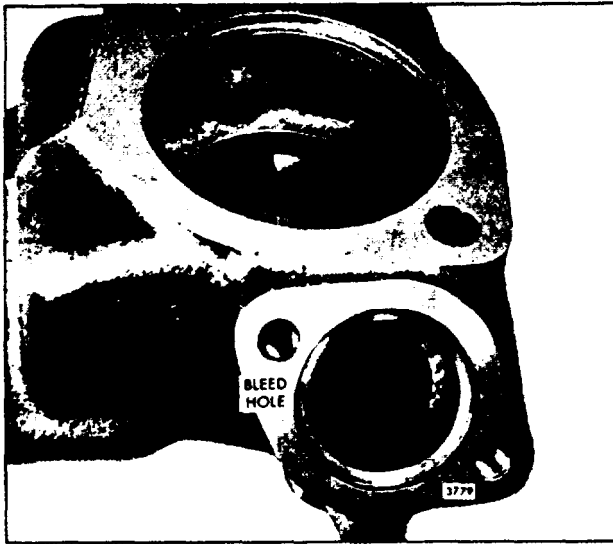


Fig. 5 Bleed Hole in Thermostat Housing

2. Insert the thermostat into the housing.
3. Install the water outlet elbow and secure it to the housing with two bolts and lock washers.
4. Connect the hose from the radiator or heat exchanger to the water outlet elbow, align and tighten the hose clamps.

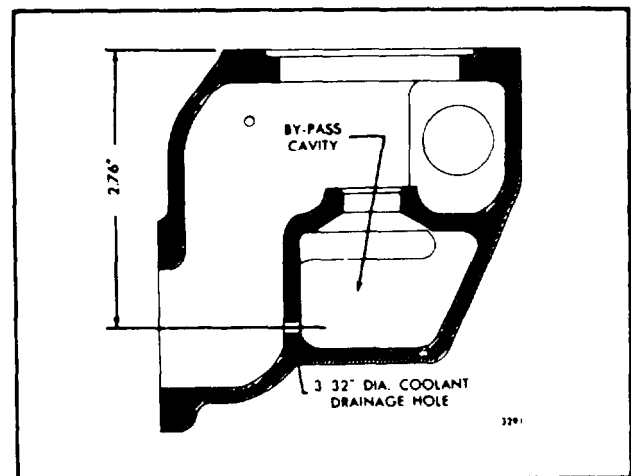


Fig. 6 - Cross-Section of Thermostat Housing  
(Early Industrial In-Line Engine)



## ENGINE COOLING FAN

The engine cooling fan is driven by a pair of V-drive belts from the crankshaft pulley (Fig. 1).

Effective with engine serial number 3D-  
new fan hub assemblies are being used on the In-line engines. The new assemblies are similar to the integral cast shaft and bracket design, with tapered roller bearings, currently used on the V-type engines (Fig. 5).

The belt-driven fan is bolted to a combination fan hub and pulley which turns on a sealed ball bearing assembly (former In-line engine) or two tapered roller bearings (current In-line engines). The crankshaft driven fan is bolted to the crankshaft pulley.

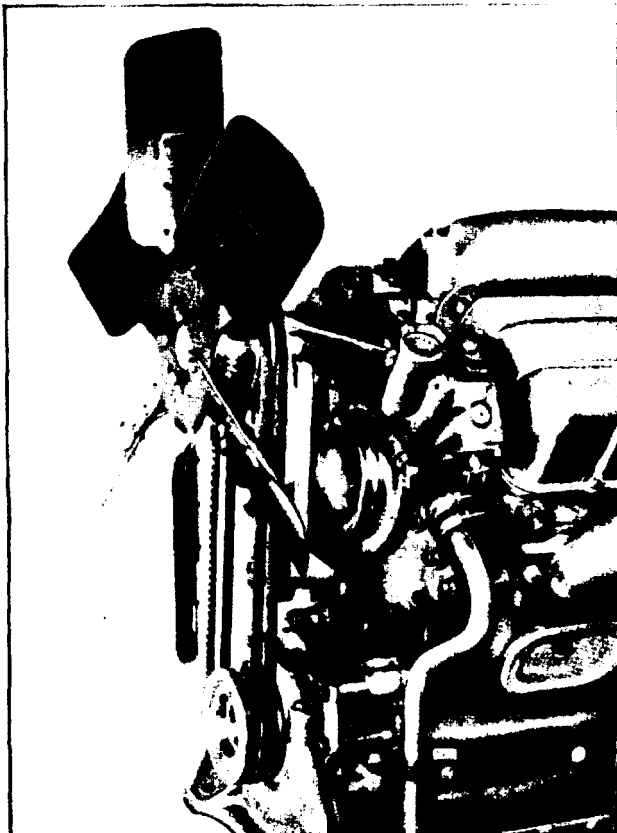


Fig. 1- Belt-Driven Fan Mounting

### Lubrication

The sealed ball bearings, used in the fan hub assembly on the former In-line engines, is pre-lubricated and requires no further lubrication.

The tapered roller bearings, used in the fan hub on current In-line engines, are pressure lubricated prior to assembly. The cavity between the bearings is packed with Chevron BRB No. 2 grease or an equivalent performance grease at the time the hub is assembled. Also the fan hub cap is packed approximately 75% full of grease. Repack the fan hub assembly as outlined in the assembly procedure. The hub cap at the front and a seal at the rear of the hub prevents leakage of the lubricant.

### Remove Fan, Hub and Adjusting Bracket

The fan blades must rotate in a vertical plane parallel with and a sufficient distance from the radiator core.

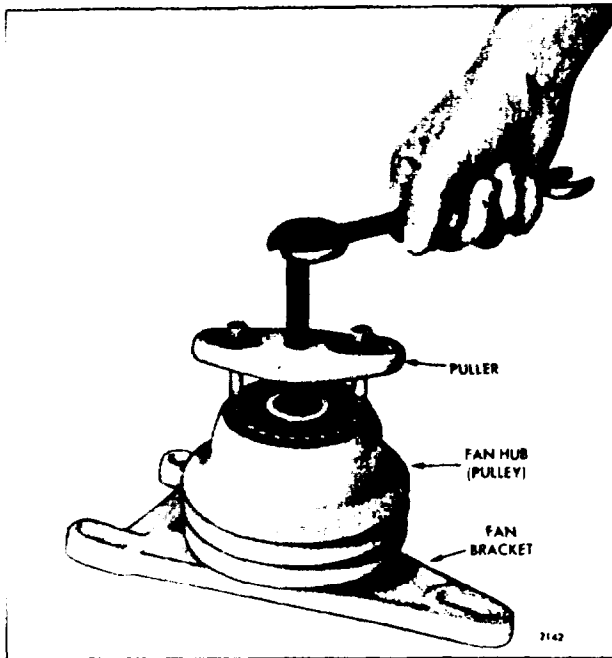


Fig. 3 - Removing Fan Hub (Pulley)

Bent fan blades reduce the efficiency of the cooling system, may throw the fan out of balance, and are apt to damage the radiator core. Before removing the fan blades, check the blades for alignment. Do not rotate the fan by pulling on the fan blades.

1. Remove the attaching bolts and lock washers and remove the fan and spacer (if used).
2. Loosen the fan hub adjusting bracket bolts and remove the drive belts. Then withdraw the bolts and washer and remove the the huh and bracket assembly from the engine.

#### Disassemble Hub and Adjusting Bracket

##### IN-LINE ENGINES (FORMER):

1. Measure the distance between the rear face of the rim on the pulley and rear face (machined) of the fan adjusting bracket. Record this measurement for reassembles purpose.
2. Remove the fan huh from the shaft with a puller as shown in Fig. 3.
3. Place the bracket assembly in an arbor press. Then place a suitable sleeve over the shaft and against the outer race of the bearing and press the hearing and shaft assembly from the bracket.

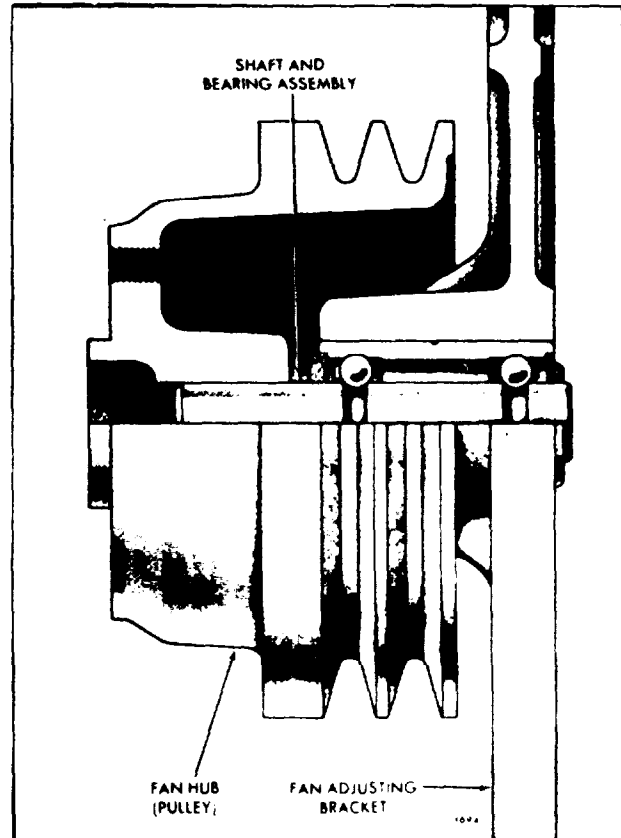


Fig. 4 - Former Fan Hub Assembly (In-Line Engine)

**CAUTION:** Damage to the bearing will result if force is applied to the shaft.

##### IN-LINE ENGINES (CURRENT):

1. Remove the fan hub cap.
2. Remove the hub bolt and washer.
3. Withdraw the hub and bearing assembly from the shaft. It may be necessary to tap the end of the shaft with a soft hammer to loosen the hub assembly.
4. Remove the oil seal and bearing from the fan hub
5. Remove the bearing spacer, shims and grease retainer.

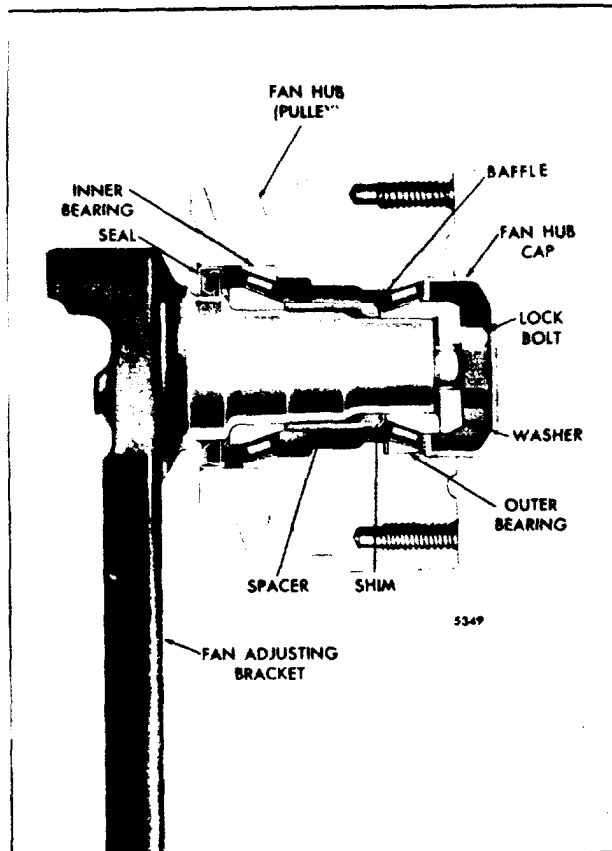


Fig. 5 Current Fan Hub Assembly (In-Line Engine)

assembly) and revolve the outer race of each bearing

### Inspection

Wash the fan and fan hub parts thoroughly with fuel oil, dry them with compressed air and inspect them for wear or damage.

**NOTE:** Do not wash the permanently sealed bearing which is used in the In-line engine hub assembly. Wipe the bearing and shaft assembly with a clean lintless cloth.

Hold the inner race (shaft of sealed ball bearing

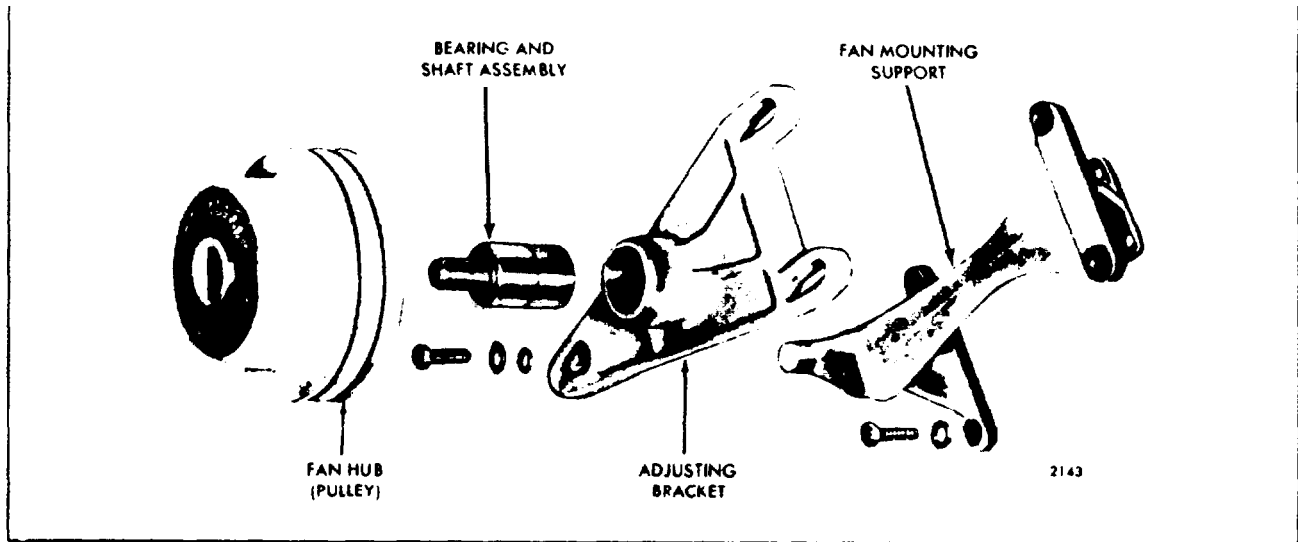


Fig. 8 - Typical Fan Hub and Adjusting Bracket Details and Relative Location of Parts (In-Line Engine)

slowly by hand. If rough or tight spots are detected, replace the bearing.

Examine the fan blades for cracks. Replace the fan if the blades are badly bent, since straightening may weaken the blades, particularly in the hub area

Remove any rust or rough spots in the grooves of the fan pulley and crankshaft pulley. If the grooves are damaged or severely worn, replace the pulleys.

#### Assemble Hub and Adjusting Bracket

##### IN-LINE ENGINES (FORMER):

Refer to Fig. 4 and 8 and assemble the fan hub and adjusting bracket as follows:

1. Press the shaft and bearing assembly into the adjusting bracket by applying pressure on the outer race of the bearing, using a suitable sleeve, until the bearing is flush with the pulley end of the bracket.

2. Measure the shaft diameter and the pulley bore. It is important that a .001" - .002" press fit be maintained. Then support the bearing end of the shaft and press the fan hub (pulley) on the shaft to the original dimension taken during disassembly. This will assure proper alignment and clearance of the parts.





The shaft and bearing assembly are permanently sealed and required no lubrication.

**IN-LINE ENGINES (CURRENT):**

Assemble the fan hub and spindle shown in Fig. 5 as follows:

1. Apply Chevron BRB No. 2 grease or an equivalent performance grease to the rollers of both bearings before installing them in the fan hub (pulley).
2. Install the inner bearing with the protruding face of the inner race facing outward from the hub.
3. Install a new seal with the felt-side flush with the outer edge of the hub.
4. Place the hub over the spindle and install the bearing spacer.
5. Pack the cavity approximately 1/4 full with grease and install the grease baffle.
6. Place the shims against the bearing spacer. Then install the outer bearing with the protruding face of the inner race facing outward from the hub.
7. Place the retaining washer with the breakout side toward the bearing. Install and tighten the bolt to 83-93 lb-ft torque while rotating the pulley.
8. Check the end play in the assembly with the spindle (shaft) in a horizontal position. The end play must be within .001" to .006". If necessary, remove the bolt, washer and outer bearing and adjust the number and thickness of shims to obtain the required end play. Shims are available in .015", .020" and .025" thickness. Then reassemble the fan hub and check the end play.
9. Fill a new fan hub cap 3/4 full of grease and install it in the end of the fan hub (pulley).

#### Install Fan, Hub and Adjusting Bracket

New .500" thick and .800" thick fan hub spacers and a new fan hub cap replaces the former spacer and cap assemblies to provide spacers compatible with the six bolt hole mounting fan hub assemblies. The spacers (individually or in combination) also provide a means for setting the different clearances between the back of the fan blades and front groove of the crankshaft pulley.

The new spacers have a flange on one side that serves as a pilot for the fan as well as a spacer pilot for the

second spacer when two or more spacers are used together.

**EXAMPLE:** A former 1.800" thick spacer and cap assembly have been replaced by two .500" thick spacers, one .800" thick spacer and the new fan hub cap.

When replacing the former fan hub spacer be sure and include the new cap.

1. Attach the fan hub and adjusting bracket assembly to the bracket support on the engine with bolts, lock washers and plain washers. Do not tighten the bolts.
2. Install the drive belts and adjust the belt tension as outlined in Section 15.1. If used, install the adjusting bracket, bolt and plain washer shown in Fig. 10.
3. Install the fan (and fan spacer and cap, if used) on the hub and secure it with the 5/16-18 bolts and lock washers.



## WATER FILTER AND CONDITIONER

The engine cooling system water filter and conditioner (Fig. 1) is a compact by-pass type unit with a replaceable element.

A correctly installed and properly maintained water filter and conditioner provides a cleaner engine cooling system, greater heat dissipation, increased engine efficiency through improved heat conductivity, and contributes to longer life of engine parts.

The filter provides mechanical filtration by means of a closely packed element through which the water passes. Any impurities such as sand and rust particles suspended in the cooling system will be removed by the straining action of the element. The removal of these impurities will contribute to longer water pump life and proper operation of the thermostat.

The filter also serves to condition the coolant by softening the water to minimize scale deposits, maintain an acid-free condition and act as a rust preventive.

Corrosion inhibitors are placed in the element and dissolve into the water, forming a protective rust-proof film on all of the metal surfaces of the cooling system (refer to Section 13.3). The other components of the element perform the function of cleaning and preparing the cooling passages while the corrosion inhibitors protect them.

### Filter Installation

If a water filter and conditioner is to be installed on an engine which has been in service, drain and flush the cooling system prior to installation of the filter.

### Filter Maintenance

Replace the chemically activated element periodically and buff the lower corrosion resistor plate on the former filter each time (discard the plate if excessive metal loss or pitting is evident) to ensure effective protection of the cooling system.

If the water filter is installed on an engine which has previously been in service, it may be necessary to change the filter element two or three times at intervals of 6,000 miles or less to clean up accumulations of scale and rust in the cooling system. It is advisable to drain and flush the system during these initial change intervals.

Change the filter element periodically as outlined in Section 15.1

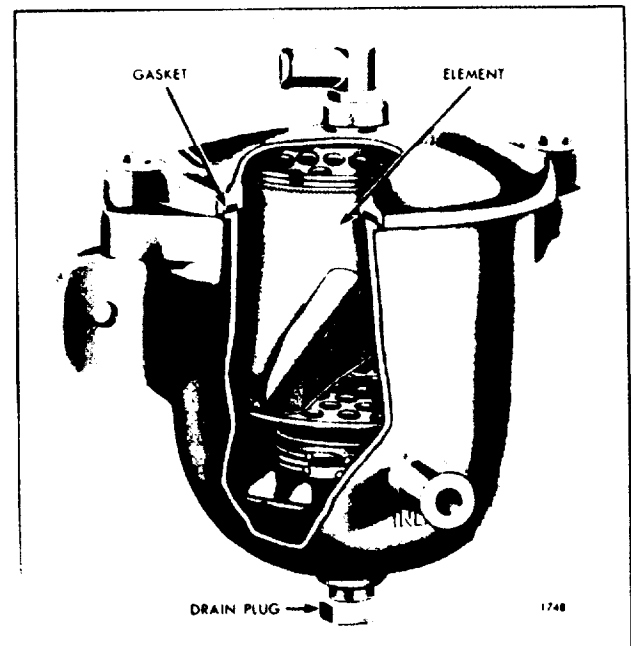


Fig. 1 Water Filter and Conditioner

Make-up water up to approximately 40% of the total capacity of the cooling system may safely be added before a filter element change is required.

If it is necessary for any reason to drain the cooling system before an element change, the treated water should be saved and re-used. If the treated water is discarded, a new filter element must be installed since the protective agents in the used filter will have been partially consumed in treating the discarded water.

### Service

Whenever the water filter is removed and reinstalled, the filter must have metal-to-metal contact (grounded), either directly with the mounting surface or through the mounting bolts

The current water filter includes a non-chromate type element. This element can be used in place of either of the former water filter elements (permanent type anti-freeze or plain water type) and thus provides year around cooling system protection. The current and the former water filter elements are completely interchangeable in the former filter can (refer to Section 13.3).

Replace the element and service the water filter and conditioner as follows:

1. Close the water filter inlet and outlet shut-off valves. If shut-off valves are not provided, vise grip pliers can be used to clamp each hose closed during the filter change.
2. Remove the filter cover-to-filter body bolts.
3. Remove and discard the element.
4. Remove and discard the corrosion resistor plates, if the former type filter is used.
5. Remove the sludge and sediment and wash the sump and filter body. Dry it thoroughly with compressed air.
6. Replace the drain plug, if removed, in the bottom of the filter.
7. Insert the new element.
8. Use a new filter cover gasket, install the filter cover, and tighten the bolts evenly.
9. Open the inlet and outlet lines by opening the shut-off valves or removing the vise grip plier clamps.
10. Operate the engine and check for leaks. The top of the filter and the outlet line should feel warm to the touch with the rise in coolant temperature. If not, disconnect the filter outlet line at the end opposite the filter connection to bleed the air from the system and reconnect the line. Use caution to minimize coolant loss.

## SPECIFICATIONS - SERVICE TOOLS

### SPECIFICATIONS

#### STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

THREAD SIZE	TORQUE (lb-ft)	THREAD SIZE	TORQUE (lb-ft)
1/4 -20	7-9	9/16-12	90-100
1/4 -28	8-10	9/16-18	107-117
5/16-18	13-17	5/8 -11	137-147
5/16-24	15-19	5/8 -18	168-178
3/8 -16	30-35	3/4 -10	240-250
3/8 -24	35-39	3/4 -16	290-300
7/16-14	46-50	7/8 -9	410-420
7/16-20	57-61	7/8 -14	475-485
1/2 -13	71-7.5	1 -8	580-590
1/2 -20	83-93	1 -14	685-685

#### EXCEPTIONS TO STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

APPLICATION	THREAD SIZE	TORQUE (lb-ft)
Water pump cover bolt	5/16-18	6-7
Raw water pump drive gear retaining nut	5/8 -18	30-35

### SERVICE TOOLS

TOOL NAME	TOOL NO.
Holder	J 358.1
Remover and installer	J 1930
Installer	J 22091
Puller	J 4794-01
Handle	J 7092-2
Plates	J 8329



**SECTION 6**  
**EXHAUST SYSTEM**  
**CONTENTS**

<b>Exhaust System .....</b>	<b>6</b>
<b>Exhaust Manifold (Air-Cooled) .....</b>	<b>6.1</b>

**EXHAUST SYSTEM**

Fan and radiator cooled engines are equipped with an air-cooled exhaust manifold.

The exhaust manifold is attached to studs located between the exhaust ports and the outer side of the two end ports in the cylinder head. Special washers and nuts secure the manifold to the cylinder head.







## EXHAUST MANIFOLD (AIR COOLED)

The exhaust manifolds has an outlet to accommodate a square exhaust outlet flange (Fig. 1)

Current manifolds, flanges (square) and flange gaskets have SAE standard dimensions.

### Remove Exhaust Manifold

1. Disconnect the exhaust pipe or muffler from the exhaust manifold flange.
3. Loosen, but do not remove, one of the center exhaust manifold nuts. Remove the other nuts and washers.
4. Support the manifold and remove the center nut and washer.

5. Remove the manifold and gasket from the cylinder head.

### Inspection

Remove any loose scale and carbon that may have accumulated on the internal walls of the exhaust manifold. Clean the manifold and check for cracks, especially in the holding lug areas.

Clean all traces of gasket material from the cylinder head.

Examine the exhaust manifold studs. Replace damaged studs. Apply sealant to the threads and drive new studs to 25-40 lb-ft torque (1.40" to 1.50" height).

### Install Exhaust Manifold

1. Place a new gasket over the studs and against the cylinder head.
2. Position the exhaust manifold over the studs and hold it against the cylinder head.
3. Install the washers and nuts on the studs. If beveled (dished) washers are used, position them so that the crown side faces the nut.

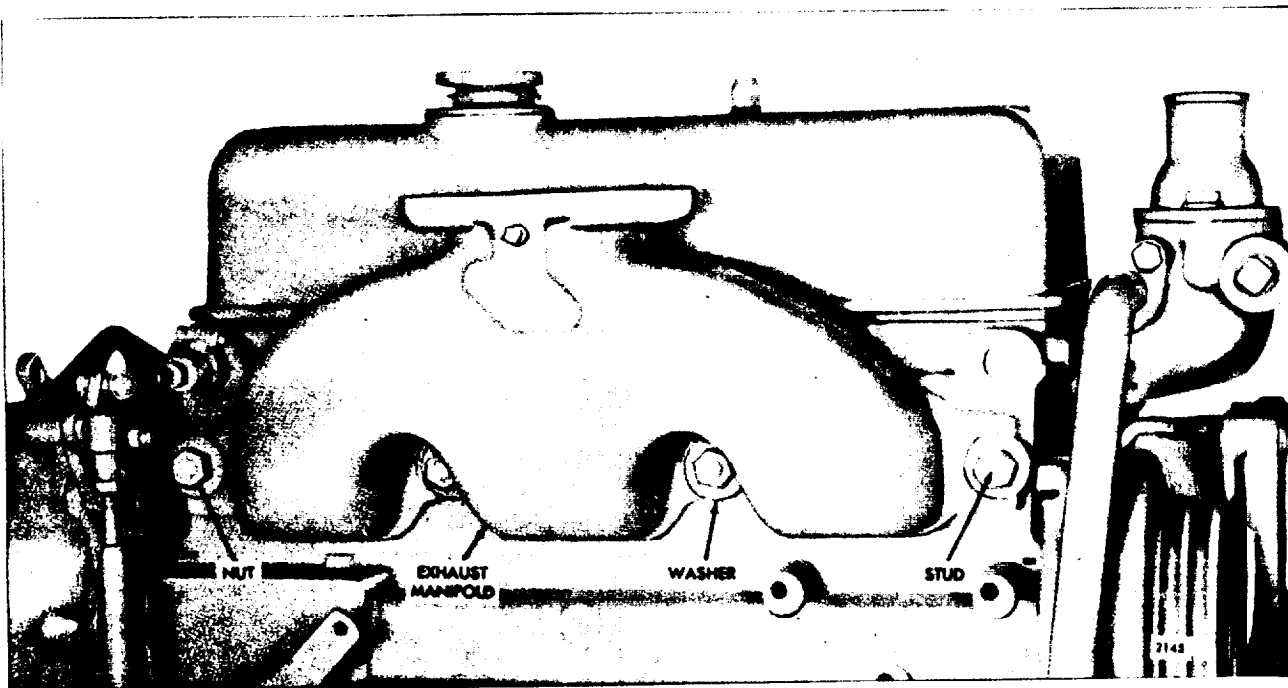


Fig. 1 - Typical Air-Cooled Exhaust Manifold (Square Flange) Mounting

Beginning with one of the center stud nuts and working alternately toward each end of the manifold, tighten the nuts to 30-35 lb-ft torque.

5. Connect the exhaust pipe or muffler to the exhaust manifold flange.

# SECTION 7

## ELECTRICAL EQUIPMENT, INSTRUMENTS AND PROTECTIVE SYSTEMS

### CONTENTS

Electrical System.....	7
Battery-Charging Generator.....	7.1
Battery-Charging Generator Regulator.....	7.1.1
Starting Motor .....	7.3
Shop Notes - Trouble Shooting - Specifications - Service Tools .....	7.0

## ELECTRICAL SYSTEM

A typical engine electrical system generally consists of a starting motor, a battery-charging generator (alternator), a transistor combination voltage regulator, current regulator and cutout relay to protect the electrical system, a storage battery and the necessary wiring.

Additional equipment such as an engine protective system may also be included.

Detailed information on maintenance and repair of the specific types of electrical equipment can be found in the service manuals and bulletins issued by the equipment manufacturer. Information regarding equipment manufactured by the Delco-Remy Division of General Motors Corporation may be obtained from

their electrical equipment operation and maintenance manuals. The manuals may be obtained from United Delco Division, or from the Technical Literature Section, Delco-Remy Division of General Motors Corporation, Anderson, Indiana.

In most instances, repairs and overhaul work on electrical equipment should be referred to an authorized repair station of the manufacturer of the equipment. Replacement parts for electrical equipment should be ordered through the equipment manufacturer's outlets, since these parts are not normally stocked by Detroit Diesel Allison. For electrical equipment manufactured by Delco-Remy Division, repair service and parts are available through United Delco Division branches and repair stations.



## BATTERY-CHARGING GENERATOR (D.C. and A.C.)

The battery-charging circuit consists of a generator (alternator), regulator, battery and the wiring. The battery-charging generator is introduced into the electrical system to provide a source of electrical current for maintaining the storage battery in a charged condition and to supply sufficient current to carry any other electrical load requirements up to the rated capacity of the generator.

The alternating current self-rectifying generator (alternator), Figs. 2 and 3, is especially beneficial on an engine with extra electrical accessories and one that has to operate for extended periods at idle speeds. Diodes, built into the slip ring end frame, rectify the three phase A.C. voltage to provide D.C. voltage at the battery terminal of the generator, thereby eliminating the need for an external rectifier. The alternator is also available in a variety of sizes and types.

The proper selection of a generator which will meet the needs of the battery-charging circuit on the particular engine is mandatory. This, together with adherence to the recommended maintenance procedures, will reduce generator troubles to a minimum. Since most generators adhere to the same basic design, the maintenance, removal and installation procedures for all are similar.

### Generator Maintenance

1. Maintain the proper drive belt tension. Replace worn or frayed belts. Belts should be replaced as a set when there is more than one belt on the generator drive.
2. Lubricate the generator bearings as outlined in the *Lubrication and Preventive Maintenance Chart* in Section 15.1.

### Remove Generator

1. Disconnect all of the leads from the generator and tag each one to ensure correct re-installation.
2. Loosen the generator mounting bolts and nuts and the adjusting strap bolt. Then, remove the generator drive belts.

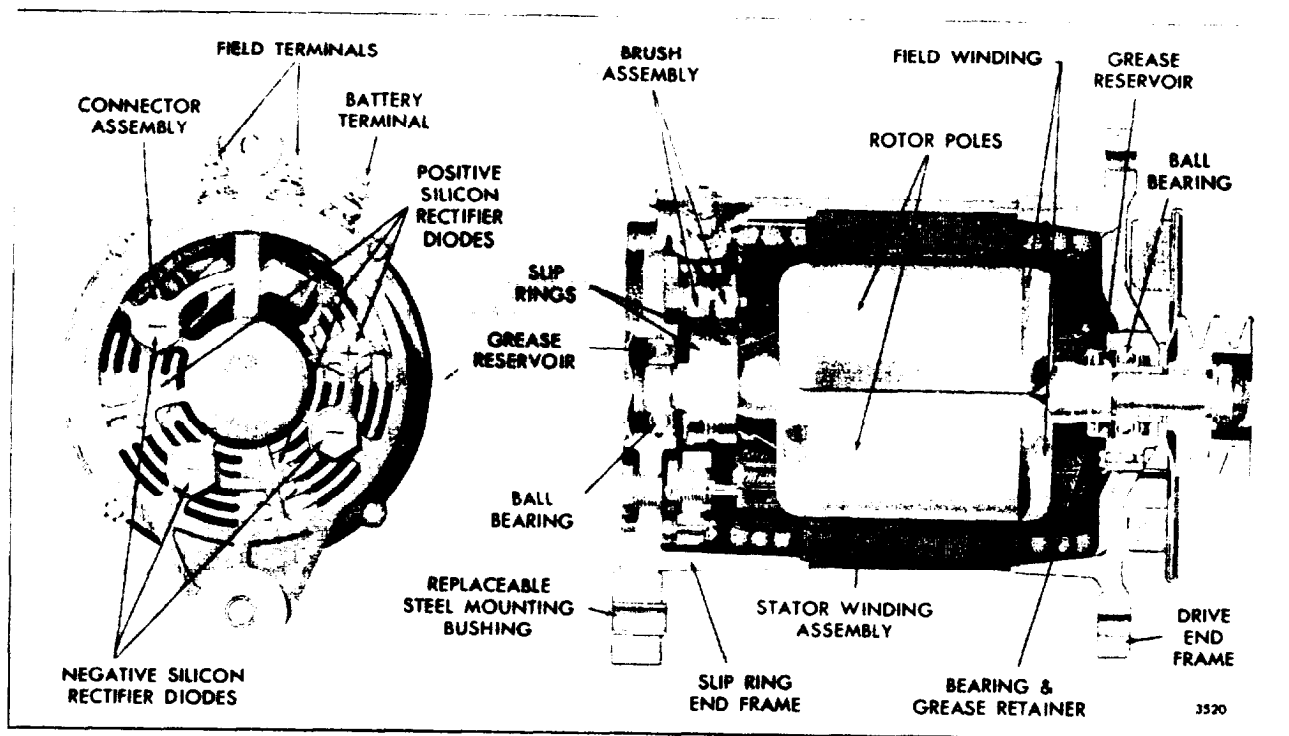


Fig. 2 - 30 DN Type 100 A.C. Self-Rectifying Generator (Alternator)

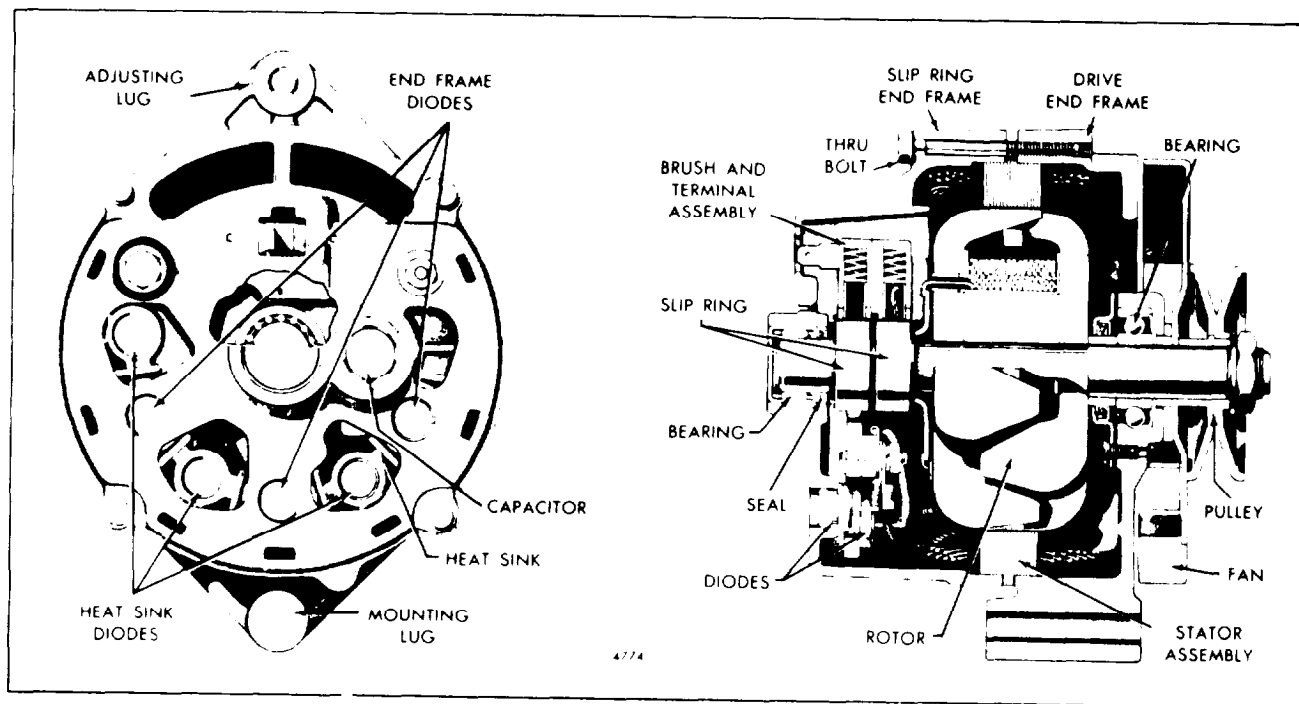


Fig. 3 - 10 DN Type 112 A.C. Self Rectifying Generator (Alternator)

3. While supporting the generator, remove the adjusting strap bolt and washers and the mounting bolts, washers and nuts. Then remove the generator.
4. Remove the pulley assembly if the generator is to be replaced

#### Install Generator

1. Install the generator drive pulley, if it was removed. Tighten the pulley retaining nut to 60 lb-ft torque.

**NOTE:** If the pulley was not removed, check the retaining nut for proper torque.

2. Position the generator on the mounting brackets and start the bolts, with lock washers, through the bolt holes in the generator end frames. If nuts are used, insert the bolts through the bolt holes and then install the lock washers and nuts.
3. Align the threaded hole in the extension ear of the drive end frame with the slot in the adjusting strap. Start the bolt, with the lock washer and plain washer, through the slot of the adjusting strap and into the threaded hole in the generator end frame.
4. Place the drive belts in the grooves of the pulleys
5. Adjust the generator belt tension as outlined in Section 15.1.
6. Attach the wires and cables. Be sure that each one is correctly installed in accordance with its previous location on the generator. Keep all connections clean and tight.

#### Alternator Precautions

Precautions must be taken when working on or around alternators. The diodes and transistors in the alternator circuit are very sensitive and can be easily destroyed.

Avoid grounding or shorting the output wires or the field wires between the generator and the regulator

Grounding an A.C. generator's output wire or terminals, which are always "hot" regardless of whether or not the engine is running, or accidental reversing of the battery polarity will destroy the diodes. Grounding the field circuit will also result in the destruction of the diodes. Some voltage regulators provide protection against some of these circumstances. However, it is recommended that extreme caution be used.



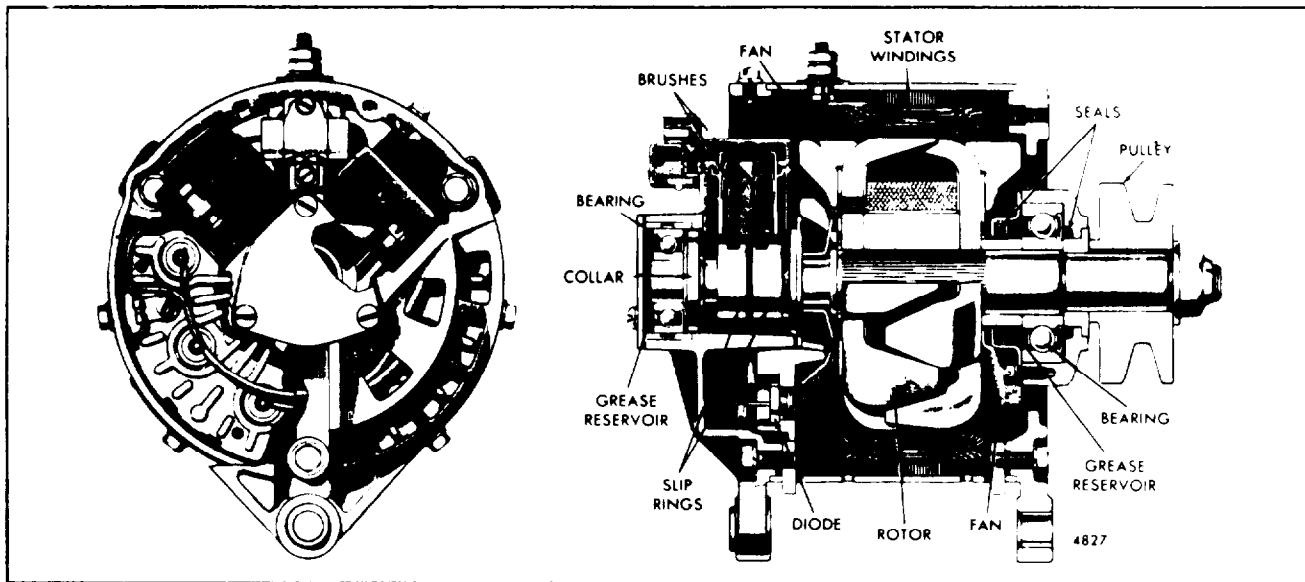


Fig. 4-20. DN Type 250 AC Self-Rectifying Generator (Alternator)

Accidentally reversing the battery connections must be avoided.

Never disconnect the battery while an alternator is in operation. Disconnecting the battery may result in damage to the generator diodes due to the momentary high voltage and current generated by the rapid collapse of the magnetic field surrounding field windings.

If a booster battery is to be used, the batteries must be

connected correctly (negative to negative and positive to positive).

Never use a fast charger with the battery connected or as a booster for battery output.

Never attempt to polarize the alternator

The alternator diodes are also sensitive to heat and care must be exercised to prevent damage to them from soldering irons, etc.

If faulty operation of an alternator occurs on an engine equipped with an insulated starting motor. Check to be sure that a ground strap is presented and is correctly insulated.

## BATTERY-CHARGING GENERATOR REGULATOR

### A.C. CHARGING CIRCUIT

The current generator regulator is similar in outward appearance to the regulator used with the D.C. generator. The D.C. and A.C. regulators are NOT interchangeable.

The internal wiring circuit of all standard A.C. generator regulators are similar but the internal connection vary somewhat according to the method used to control the circuit breaker relay.

There are two and three unit standard A.C. generator regulators: the two unit regulator have a circuit breaker relay controlled by a relay rectifier or by an oil pressure switch and the three-unit regulators have a circuit breaker relay controlled by a built-in control relay.

The generator field circuit is insulated in the generator and grounded in the regulator. This type of connection is designated as Circuit "A".

**NOTE:** Each type of regulator is used with a certain circuit Do not attempt to interchange regulators.

The two unit A.C. generator regulator has a circuit breaker relay and a voltage regulator unit while the three unit regulator is equipped with a control relay in addition to the other two units.

### CIRCUIT BREAKER RELAY

The circuit breaker relay has a core with the winding made up of many turn of fine wire. This core and winding are assembled into a frame. A flat steel armature is attached to the frame by a hinge and is centered above the core. Two contact points, supported by two flat springs on the armature, are located above two stationary contact points. The upper and lower contact points are held apart by the tension of a flat spring riveted to the top side of the armature.

#### Operation

When the D.C. voltage reaches the value for which the circuit breaker relay is adjusted, the magnetism induced in the core by current flow in the winding is sufficient to overcome the armature spring tension and the relay points close. Closing of the contact points connects the D.C. side of the power rectifier to the battery so that current will flow to the battery whenever the generator is driven at sufficient speed.

The relay contact points remain closed as long as the D.C. voltage is enough to hold the relay armature against the core. They open when the voltage decreases to a value at which the magnetic pull of the core can no longer overcome the armature spring tension.

### VOLTAGE REGULATOR

The voltage regulator unit has a core with a single shunt winding. This winding also consists of fine wire and is connected across the D.C. side of the power rectifier. The assembly and parts are similar to the circuit breaker relay. The matching upper contact point is supported by a detachable contact support insulated from the frame.

#### Operation

If the voltage regulator unit is not operating, the generator field circuit is completed to ground through the contact points which are held closed by the tension of a spiral spring acting on the armature.

When the D.C. voltage of the A.C. - D.C. system reaches the value for which the voltage regulator is adjusted, the magnetic field produced by the shunt winding overcomes the armature spring tension and pulls the armature down, causing the contact points to separate. When the contact points separate, resistance is introduced into the field circuit. The resistance decreases the field current causing a corresponding decrease in generator voltage and magnetic pull on the regulator armature. This allows the armature spring tension to re-close the contact points. When the voltage again reaches the value for which the voltage regulator is adjusted, this cycle repeats and continues to repeat many times a second, thus limiting the voltage to the value for which the regulator is set.

With the voltage limited in this manner, the generator supplies varying amounts of current to meet the various states of battery charge and electrical load.

Voltage regulators are compensated for variations in temperature by means of a hi-metal thermostatic hinge on the armature. The effect of this hinge causes the regulator to adjust at a higher voltage when cold, which partly compensates for the facts that a high voltage is required to charge a cold battery.

**CONTROL RELAY**

In addition to a circuit breaker and a voltage regulator, the three-unit regulator has control relay unit. This unit has a core with a single shunt winding connected from the "SW" terminal of the regulator to ground. The winding and core are assembled into a frame. A flat steel armature supporting the upper one of two relay contacts is attached to the frame by a hinge and is centered above the core. The lower contact point is supported by a detachable contact support insulated from the frame. An armature stop is assembled above the upper contact.

**Operation**

When the ignition switch is "OFF", the contact points are held apart by the tension of a spiral spring acting on the armature. When the ignition switch is turned "ON", battery current flows through the control relay winding to ground. The magnetic field produced by the winding overcomes the armature spring tension and pulls the armature down causing the contact points to close. This completes the circuit to ground for the circuit breaker relay winding so that it can operate when the D.C. voltage from the power rectifier reaches the value for which the circuit breaker relay is adjusted. The control relay contact points remain closed until the ignition switch is turned "OFF".

**TRANSISTORIZED AND TRANSISTOR REGULATORS**

In addition to the standard regulator, there are two other types of regulators being used with the self-rectifying A.C. generators in the battery-charging circuit. One is transistorized regulator which contains

a vibrating voltage regulator unit and a field relay unit. The other is a transistor regulator which contains no moving parts and is used with a separately mounted field relay.

**TRANSISTORIZED REGULATOR**

The transistorized regulator (Fig. 3), for use on a negative ground circuit, contains a vibrating voltage regulator unit and field relay unit. The regulator uses a single transistor and two diodes. The transistor works in conjunction with the conventional voltage unit having a vibrating contact point to limit the generator voltage to a pre-set value. A held discharge diode reduces arcing at the voltage regulator contacts by dissipating the energy created in the generator field

windings when the contacts separate. A suppression diode prevents damage from transient voltages which may appear in the system.

Certain transistorized regulators are equipped with a choke coil to permit the installation of a capacitor between the regulator and the "BAT" terminal on installations experiencing radio interference. The capacitor suppresses the radio noise and the choke coil

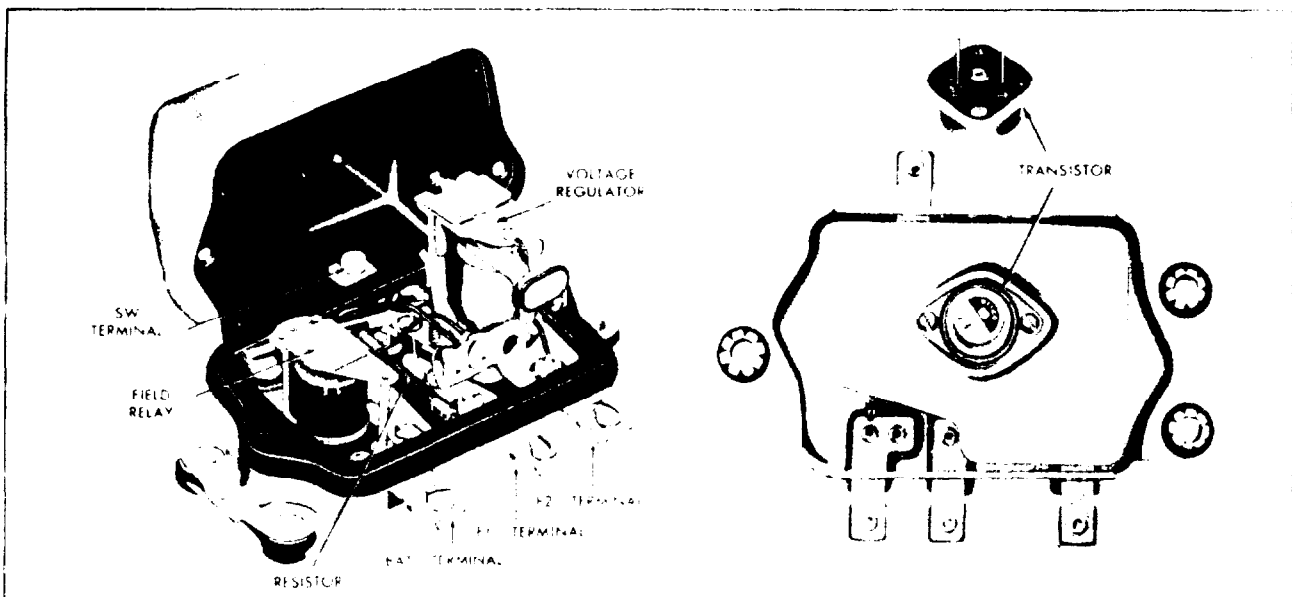


Fig. 3 Transistorized Regulator

acts to prevent oxidation of the voltage regulator contacts. Regulators incorporating the choke choke are identified by a spot of green paint on the regulator base, next to the single mounting bolt hole.

**CAUTION:** A capacitor must not be installed unless the transistorized regulator incorporates the choke coil.

### Operation

When the engine starting switch is closed, the field relay winding is energized and causes the contacts to close. Current then flows from the battery through the relay contacts to the regulator "F2" terminal. From this point, the current flows through the generator field winding and then through the transistor and voltage contact points to ground.

As the generator speed increases, the increased voltage from the generator "BAT" terminal is impressed

through the held relay contacts across the regulator shunt winding. The magnetism created in the winding cause the voltage contacts to open, thus causing the transistor to shut off the field current. The generator voltage then decreases and the, voltage contacts re-close. This cycle repeats many times per second, thereby limiting the generator voltage to the value for which the regulator is set.

The magnetism produced in an accelerator winding, when the voltage contacts are closed, aids the shunt winding in opening the contacts. When the contacts are open, the absence of the magnetism in the accelerator winding allows the spring to immediately re-close the contacts. This action speeds up the vibration of the contacts.

**CAUTION:** Do not short across or ground any of the terminal\ on the regulator or the generator and *do not* attempt to polarize the generator.

## TRANSISTOR REGULATOR

The transistor regulator is composed principally of transistors, diodes, capacitors and resistors to form a completely static electrical unit containing no moving parts.

The transistor is an electrical device which limits the generator voltage to a pre-set value by controlling the generator field current. The diodes, capacitors and resistors act together to aid the transistor in performing this function, which is the only function that the regulator performs in the charging circuit.

The voltage at which the generator operates is determined by the regulator adjustment. Once adjusted, the generator voltage remains almost constant, since the regulator is unaffected by length of service, changes in temperature or changes in generator output and speed.

A separately mounted field relay connects the regulator "POS" terminal and the generator field winding to the battery when the engine starting witch is closed.

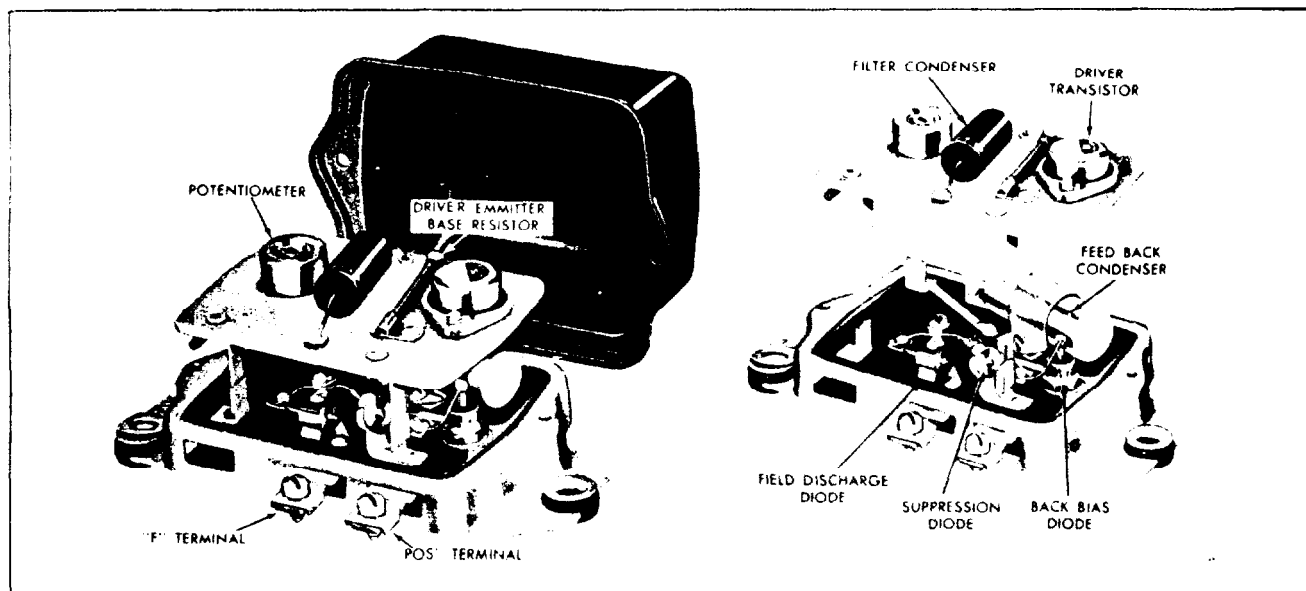


Fig. 4 Transistor Regulator (Negative Ground Circuits Only)

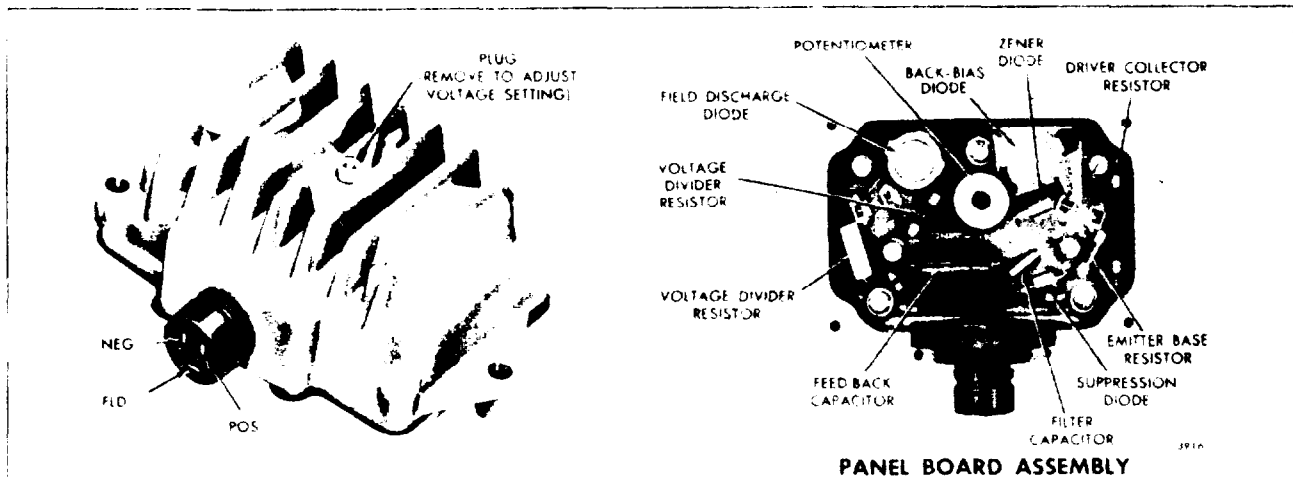


Fig. 5 - Transistor Regulator with Plug-In Connections

The voltage regulator illustrated in Fig. 4 is designed for negative ground battery-charging circuits only. It has two exposed terminals. The voltage setting may be adjusted by relocating a screw in the base of the regulator.

The voltage regulator shown in Fig. 5 has shielded plug-in connections and requires a cable and plug assembly to connect the regulator into the battery-charging circuit. This type of regulator may be used in negative ground, positive ground and insulated charging circuits. The voltage setting may be adjusted by removing a plug in the cover and turning a slotted adjusting button inside the regulator.

### Operation

When the engine starting switch is closed, the field relay winding is energized, which causes the relay contacts to close.

In the **negative ground circuit** with the field relay contacts closed and the engine not running, generator field current can be traced from the battery through the relay contacts to the regulator "POS" terminal. Current then continues through the back-bias diode (D-1) and power transistor (TR-1) to the regulator "FLD" terminal, and then through the generator field winding to ground, completing the circuit back to the battery.

When the generator begins to operate, A.C. voltages are induced in the stator windings. These voltages are

changed, or rectified, to a D.C. voltage which appears at the output, or "BAT", terminal on the generator. The generator then supplies current to charge the battery and operate vehicle accessories.

As generator speed increases, the voltage reaches the pre-set value and the components in the regulator cause transistor TR-1 to alternately "turn off" and "turn on" the generator held voltage. The regulator thus operates to limit the generator output voltage to the pre-set value.

In the **positive ground circuit**, when the switch is closed and the engine is not running, the field current can be traced from the battery positive ground to generator ground, and then to the regulator "POS" terminal. The current continues through diode D-1 and transistor TR-1 to the regulator "FLD" terminal, and then through the field winding and held relay contacts back to the battery, thus completing the circuit. Except for this primary difference, this circuit operates in the same manner as that described for the negative ground circuit.

### REGULATOR PRECAUTIONS

Never short or ground the regulator terminals; *do not attempt to polarize the circuit.*

Make sure all connections in the charging circuit are tight to minimize resistance.

Refer to "A.C. Generator Precautions" in Section 7.1.

## STARTING MOTOR

The starting motor is mounted on the flywheel housing as illustrated in Fig 1. When the starting circuit is closed, a small drive pinion on the armature shaft engages with the teeth on the engine flywheel ring gear to crank the engine. When the engine starts, it is necessary to disengage the drive pinion to prevent the armature from overspeeding and damaging the starting motor. To accomplish this, the starting motor is equipped with a Sprag-type overrunning clutch.

A solenoid switch, mounted on the starting motor housing, operates the Sprag-type overrunning clutch drive by linkage and a shift lever (Figs. 2 and 3). When the starting switch is engaged, the solenoid is energized and shifts the starting motor pinion into mesh with the flywheel ring gear and closes the main contacts within the solenoid. Once engaged, the clutch will not disengage during intermittent engine firing. To protect the armature from excessive speed when the engine starts, the clutch "overruns", or turns faster than the armature, which permits the pinion to disengage itself from the flywheel ring gear.

The solenoid plunger and shift lever is totally enclosed to protect them from dirt, water and other foreign material.

In the heavy-duty clutch type (Fig. 3), an oil seal, between the shaft and the lever housing, and a linkage seal prevents the entry of transmission oil into the main frame of the starting motor and solenoid case, allowing the motor to be used on wet clutch applications.

The nose housing on the Sprag clutch type starting motor can be rotated to obtain a number of different solenoid positions with respect to the mounting flange.

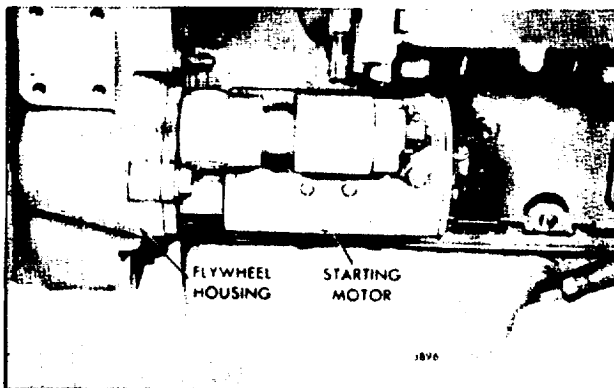


Fig. 1 - Starting Motor Mounting

When repositioning of the solenoid is required on a service replacement starting motor, proceed as follows:

### Starter with Intermediate-Duty Clutch (In-Line Engines)

The lever housing and the commutator end frame are held to the field frame by bolts extending from the end frame to threaded holes in the lever housing. The nose housing is held to the lever housing by internal attaching bolts extending from the lever housing to threaded holes in the nose housing (Fig. 2). With this arrangement, it is necessary to partially disassemble the motor to provide access to the nose housing attaching bolts. Relocate the nose housing as follows:

1. Remove the electrical connector and the screws attaching the solenoid assembly to the field frame. Then remove the bolts from the commutator end frame.
2. Separate the field frame from the remaining assembly and pull the armature away from the lever housing until the pinion stop rests against the clutch pinion. This will provide access to the nose housing attaching bolts.
3. Remove the nose housing attaching bolts with a box wrench or open end wrench.
4. Turn the nose housing to the required position.

**NOTE:** The solenoid must never be located below the centerline of the starter or dust, oil, moisture and foreign material can collect and cause solenoid failures.

5. Reinstall the nose housing attaching bolts and tighten them to 11-15 lb-ft torque.
6. Reassemble the motor.

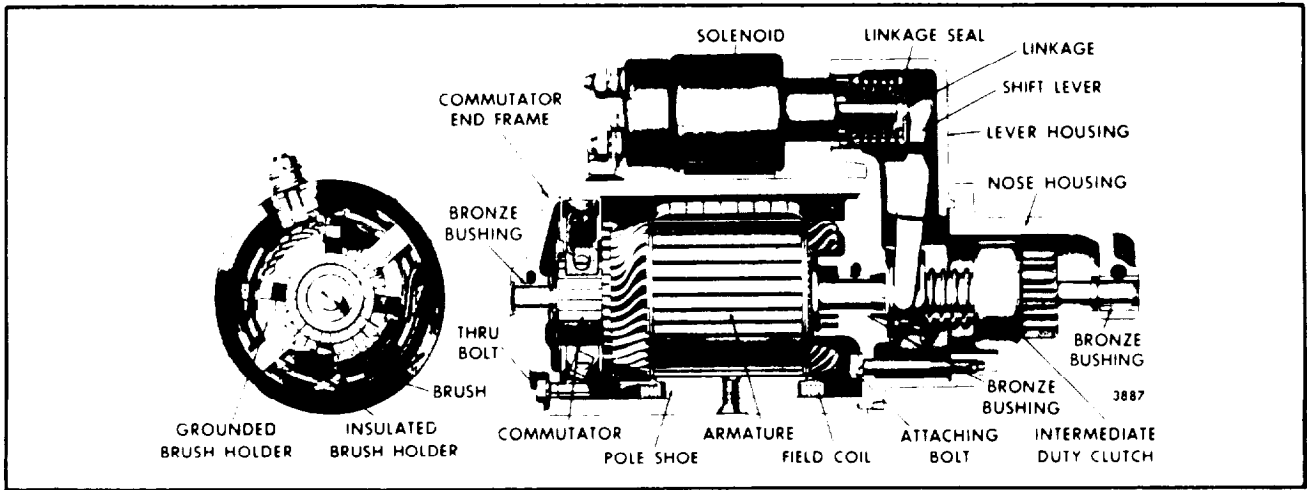


Fig. 2 Cross-Section of Motor with Intermediate-Duty Clutch

### Lubrication

The starting motor bearings (bushings) are lubricated by oil saturated wicks which project through each bronze bushing (one at each end and one at the center) and contact the armature shaft. Oil can be added to each wick by removing a pipe plug which is accessible on the outside of the motor (refer to Section 15.1).

### Flywheel Ring Gears

The starting motor drive pinion and the engine flywheel ring gear must be matched to provide positive engagement and to avoid clashing of the gear teeth. Flywheel ring gear teeth have either no chamfer or a Bendix chamfer. The Sprag clutch cannot be used with a ring gear with a Dyer chamfer.

### Remove Starting Motor

Failure of the starting motor to crank the engine at normal cranking speed may be due to a defective battery, worn battery cables, poor connections in the cranking circuit, defective engine starting switch, low temperature, condition of the engine or a defective starting motor.

If the engine, battery and cranking circuit are in good condition, remove the starting motor as follows:

1. Remove the ground strap or cable from the battery or the cable from the starting motor solenoid. Tape the end of the cable to prevent discharging the battery from a direct short.

2. Disconnect the starting motor cables and solenoid wiring.

**NOTE:** Tag each lead to ensure correct connections when the starting motor is reinstalled.

3. Support the motor and remove the three bolts and lock washers which secure it to the flywheel housing. Then pull the motor forward to remove it from the flywheel housing.

Check the starting motor, if required, in accordance with the Delco-Remy "Cranking Circuit" maintenance handbook.

### Install Starting Motor

To install the starting motor, reverse the procedure outlined for removal. Tighten the 5/8"-11 starter attaching bolts to 137-147 lb-ft torque.

Keep all of the electrical connections clean and tight. When installing wiring terminal leads to the starting motor and the solenoid switch, tighten the No. 10-32 connections to 16-30 **lb-in** torque and the 1/2" x 13 connections to 20-25 lb-ft torque.





**TROUBLE SHOOTING -  
SPECIFICATIONS - SERVICE TOOLS**

## TROUBLE SHOOTING

## CHECKING ENGINE ELECTRICAL GENERATING SYSTEM

In analyzing generator-regulator operation, check for one of the five following conditions.

1. *A fully charged battery and low, charging rate* -- this indicates normal generator-regulator operation.

2. *Low battery and high charging rate*--indicates normal generator-regulator operation.

3. *A fully charged battery and a high charging rate*--this indicate; the voltage regulator is not reducing the generator output is it should and will damage the battery--and may be caused by Improper voltage regulator setting, defective regulator unit, short circuit or poor connections in the generator or regulator wiring or high battery temperature.

4. *Low battery and low or no charging rate*--indicates improper or no regulator operation--and may be due to loose connections, damaged wires, low voltage or current regulator setting, oxidized contact points or a defective generator.

5. *Excessive arcing at contact points*--may be due to oxidized or misaligned contact points, defective regulator winding, poor cable connections or other causes.

If one of the latter three conditions exists, refer to the "Delco-Remy" electrical equipment operation and maintenance handbooks DR 324, DR 324A and DR 324Sr for correction of the problems. These manuals may be obtained from United Motors Service.

## SPECIFICATIONS

## STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

THREAD SIZE	TORQUE (lb-ft)	THREAD SIZE	TORQUE (lb-ft)
1/4 -20	7.9	9/16-12	90-100
1/4 -28	8-10	9/16-18	107-117
5/16-18	13-17	5/8 -11	137-147
5/16-24	15.19	5/8 -18	168-178
3/8 -16	30-35	3/4 .10	240-250
3/8 -24	35-39	3/4 -16	290-300
7/16-14	46-50	7/8 -9	410-420
7/16-20	57-61	7/8 -14	475-485
1/2 -13	71-75	1 -8	580-590
1/2 -20	83-93	1 -14	685-695

## EXCEPTIONS TO STANDARD BOLT AND NUT TORQUE SPECIFICATIONS

APPLICATION	THREAD SIZE	TORQUE (lb-ft)
Tachometer drive cover bolt	7/16 -14	30-35
Tachometer drive cover bolt	1/2 -13	30.35
Tachometer drive shaft (blower)	1/2 -20	55.65

---

**SERVICE TOOLS**

---

TOOL NAME	TOOL NO.
Puller set .....	J 5901
Slide hammer .....	J 5901-1
Tachometer drive shaft remover .....	J 5901-3
Tachometer drive alignment tool set .....	J 23068
Tool No. 1 (.310") .....	J 23068.1
	J 23068-2
Tool No. 3 (.375") .....	J 23068-3


---



---

**SECTION 13**  
**OPERATING INSTRUCTIONS**  
**CONTENTS**

Engine Operating Instructions.....	13.1
Engine Operating Conditions .....	13.2
Engine Run-In Instructions.....	13.2.1
Fuels, Lubricants and Coolants.....	13.3





## ENGINE OPERATING INSTRUCTIONS

### PREPARATION FOR STARTING ENGINE FIRST TIME

Before starting an engine for the first time, carefully read and follow the instructions in Sections 13 and 14 of this manual. Attempting to run the engine before studying these instructions may result in serious damage to the engine.

**NOTE:** When preparing to start a new or overhauled engine or an engine which has been in storage, perform all of the operations listed below. Before a routine start (at each shift), see Daily Operations in the *Lubrication and Preventive Maintenance Chart*, Section 15.1.

#### Cooling System

Install all of the drain cocks or plugs in the cooling system (drain cocks are removed for shipping).

Remove the filler cap and fill the cooling system with clean, soft water or a protective solution consisting of high boiling point type antifreeze, if the engine will be exposed to freezing temperatures (refer to *Engine Coolant* in Section 13.3). Keep the liquid level about two inches below the filler neck to allow for fluid expansion.

Use a quality rust inhibitor if only water is used in the cooling system.

#### Lubrication System

The lubricating oil film on the rotating parts and bearings of a new or overhauled engine, or one which has been in storage, may be insufficient for proper lubrication when the engine is started for the first time.

It is recommended that the engine lubricating system be charged with a pressure prelubricator, set to supply a minimum of 25 psi oil pressure, to ensure an immediate flow of oil to all bearings at the initial engine start-up. The oil supply line should be attached to the engine so that oil under pressure is supplied to the main oil gallery.

With the oil pan dry, use the prelubricator to prime the engine with sufficient oil to reach all bearing surfaces. Use *heavy-duty* lubricating oil as specified under *Lubricating Oil Specifications* in Section 13.3. Then remove the dipstick, wipe it with a clean cloth, insert and remove it again to check the oil level in the oil pan. Add sufficient oil, if necessary, to bring it to the full mark on the dipstick. Do not overfill.

If a pressure prelubricator is not available, fill the crankcase to the proper level with *heavy-duty* lubricating oil as specified under *Lubricating Oil Specifications* in Section 13.3. Then pre-lubricate the upper engine parts by removing the valve rocker cover(s) and pouring lubricating oil, of the same grade and viscosity as used in the crankcase, over the rocker arms.

#### Air Cleaner

If the engine is equipped with oil bath air cleaners, fill the air cleaner oil cups to the proper level with clean engine oil. *Do not overfill.*

#### Transmission

Fill the transmission case torque converter supply tank to the proper level with the lubricant specified under *Lubrication and Preventive Maintenance* in Section 15.1.



### Fuel System

Fill the fuel tank with the fuel specified under Diesel *Fuel Oil Specifications* in Section 13.3.

If the unit is equipped with a fuel valve, it must be opened.

To ensure prompt starting, fill the fuel system between the pump and the fuel return manifold with fuel. If the engine has been out of service for a considerable length of time, prime the filter between the fuel pump and the injectors. The filter may be primed by removing the plug in the top of the filter cover and slowly filling the filter with fuel.

### Lubrication Fittings

Fill all grease cups and lubricate at all fittings with an all purpose grease. Apply lubricating oil to the throttle linkage and other moving parts and fill the hinged cap oilers with a hand oiler.

### Drive Belts

Adjust all drive belts as recommended under *Lubrication and Preventive Maintenance* in Section 15.1.

### Storage Battery

Check the battery. The top should be clean and dry, the terminals tight and protected with a coat of petroleum jelly and the electrolyte must be at the proper level.

**NOTE:** When necessary, check the battery with a hydrometer: the reading should be 1.265 or higher. However, hydrometer readings should always be corrected for the temperature of the electrolyte.

### Generator Set

Where applicable, fill the generator end bearing housing with the same lubricating oil as used in the engine.

A generator set should be connected and grounded in accordance with the applicable local electrical codes.

**CAUTION:** The base of a generator set must be grounded.

### Clutch

Disengage the clutch, if the unit is so equipped.

## STARTING

Before starting the engine for the first time, perform the operations listed under *Preparation For Starting Engine First Time*.

Before a routine start, see *Daily Operations in the Lubrication and Preventive Maintenance Chart*, Section 15.1.

A manual shut-down system is incorporated in the unit, the control must be set in the open position before starting the engine. The blower will be seriously damaged if operated with the air shut-off valve in the closed position.

Starting at air temperatures below 40°F. requires the use of a cold weather starting aid. See *Cold Weather Starting*, Section 12.6.

The instructions for the use of a cold weather fluid starting aid will vary dependent on the type being used. Reference should be made to these instructions before attempting a cold weather start.

**CAUTION:** Starting fluid used in capsules is highly inflammable, toxic and possesses anesthetic properties.

### Initial Engine Start (Electric)

Start an engine equipped with an electric starting motor as follows: Set the speed control lever at part throttle, then bring it back to the desired no-load speed. In addition, on mechanical governors, make sure the stop lever on the governor cover is in the *run* position.

Then press the starting

motor switch firmly. If the engine fails to start within 30 seconds, release the starting switch and allow the starting motor to cool a few minutes before trying again. If the engine fails to start after four attempts, an inspection should be made to determine the cause.

**CAUTION:** To prevent serious damage to the starter, if the engine does not start, do not press the starting switch again while the starting motor is running.

## RUNNING

### Oil Pressure

Observe the oil pressure gage immediately after starting the engine. If there is no pressure indicated within 10 to 15 seconds, stop the engine and check the lubricating oil system. Refer to the *Trouble Shooting Charts* in Section 15.2.

### Warm-Up

Run the engine at part throttle and no-load for approximately five minutes, allowing it to warm-up before applying a load.

If the unit is operating in a closed room, start the room ventilating fan or open the windows, as weather conditions permit, so ample air is available for the engine.

### Inspection

While the engine is running at operating temperature, check for coolant, fuel or lubricating oil leaks. Tighten the line connections where necessary to stop leaks.

### Engine Temperature

Normal engine coolant temperature is 160°F. to 185°F.

### Crankcase

If the engine crankcase was refilled, stop the engine after normal operating temperature has been reached, allow the oil to drain (approximately 10 minutes) back into the crankcase and check the oil level. Add oil, if necessary, to bring it to the proper level on the dipstick.

Use only the *heavy duty* lubricating oil specified under *Lubricating Oil Specifications* in Section 13.3.

### Cooling System

Remove the radiator or heat exchanger tank cap *slowly* after the engine has reached normal operating temperature and check the engine coolant level. The coolant level should be near the top of the opening. If necessary, add clean soft water or a high boiling point type antifreeze.

### Transmission

Check and, if necessary, replenish the oil supply in the transmission.

### Avoid Unecessary Engine Idling

During long engine idling periods, the engine coolant temperature will fall below the normal operating range. The incomplete combustion of fuel in a cold engine will cause crankcase dilution, formation of lacquer or gummy deposits on the valves, pistons and rings and rapid accumulation of sludge in the engine.

**NOTE:** When prolonged engine idling is necessary, maintain at least 800 rpm.

## STOPPING

### Normal Stopping

1. Release the load and decrease the engine speed. Put all shift levers in the *neutral* position.
2. Allow the engine to run at half speed or slower with no load for a short time, then move the stop lever to the *stop* position to shut down the engine.

### Emergency Stopping

If the engine does not stop after using the normal stopping procedure, pull the "Emergency Stop" knob all the way out. This control cuts off the air to the engine. Do not try to restart again until the cause for the malfunction has been found and corrected.

**CAUTION:** The emergency shut-down system should never be used except in an emergency. Use of the emergency shut-down can cause oil to be sucked past the oil seals and into the blower housing.

The air shut-off valve, located on the blower air inlet housing, must be reset by hand and the "Emergency Stop" knob pushed in before the engine is ready to start again.

### Fuel System

if the unit is equipped with a fuel valve. close it. Fill the fuel tank; a full tank minimizes condensation.

### Exhaust System

Drain the condensation from the exhaust line or silencer.

### Cooling System

Drain the cooling system if it is not protected with antifreeze and freezing temperatures are expected. Leave the drains open. Open the raw water drains of a heat exchanger cooling system.

### Crankcase

Check the oil level in the crankcase. Add oil, if necessary, to bring it to the proper level on the dipstick.

### Transmission

Check and, if necessary, replenish the oil supply in the transmission.

### Clean Engine

Clean and check the engine thoroughly to make certain it will be ready for the next run.

Refer to *Lubrication and Preventive Maintenance* and perform all of the daily maintenance operations. Also perform the operations required for the number of hours or miles the engine has been in operation.

Make the necessary adjustments and minor repairs to correct difficulties which became apparent to the operator during the last run.

### ENGINE OPERATING CONDITIONS

The engine operating charts are included as an aid for engine operation and trouble shooting. Any variations from the conditions as listed may indicate an

abnormal situation in need of correction. Make sure that the readings represent true values, and that instruments are accurate, before attempting to make corrections to the engine.

3 -53 IN-LINE

ENGINE

(4-Valve Cylinder Head)

	2200 rpm	2500 rpm	.2800 rpm
<b>Lubrication System</b>			
Lubricating oil pressure (psi):			
Normal .....	40-60	40-60	40-60
Minimum for safe operation .....	30.0	32.0	32.0
*Lubricating oil temperature (degr. F.) - max .....	200-235	200-235	200-235
<b>Air System</b>			
Air box pressure (inches mercury) - min. at full load:			
At zero exhaust back pressure .....	3.7	4.8	6.1
At maximum exhaust back pressure .....	5.4	8.0	9.3
Air inlet restriction (inches water) - full load max.:			
.....	18.8	23.0	25.0
Clean air cleaner - oil bath or dry type			
with precleaner .....	12.0	14.0	16.0
Clean air cleaner - dry type without precleaner .....	7.4	8.7	10.0
Crankcase pressure (inches water) - max. ....	0.8	0.9	1.0
Exhaust back pressure (inches mercury) - max.:			
Full load .....	3.0	4.0†	4.0+
No load .....	2.1	2.7†	2.7 + +
<b>Fuel System</b>			
Fuel pressure at inlet manifold (psi):			
Normal with .070" restriction .....	45-70	45-70	45-70
Minimum .....	35	35	35
Fuel spill (gpm) - minimum at no-load:			
.070" restriction .....	0.6	0.6	0.6
Fuel pump suction at pump inlet			
(inches mercury) - max.:			
Clean system .....	6.0	6.0	6.0
Dirty system .....	12.0	12.0	12.0

	2200 rpm	2500 rpm	2800 rpm
<b>Cooling System</b>			
Coolant temperature (degr. F.) - normal .....	160-185	160-185	160-185
<b>Raw water pump:</b>			
Inlet restriction (inches mercury) - max.....	5.0†	5.0†	5.0
Outlet pressure (psi) - max. ....	10.0†	10.0†	10.0
<b>Keel cooler pressure drop (psi)</b>			
Maximum through system .....	6.0†	6.0†	6.0
<b>Compression</b>			
Compression pressure (psi at sea level):			
Average - new engine - at 600 rpm .....	480		
Minimum - at 600 rpm .....	430		

\*The lubricating oil temperature range is based on the temperature measurement in the oil pan at the oil pump inlet. When measuring the oil temperature at the cylinder block oil gallery, it will be 10° lower than the oil pan temperature.

†Maximum when this is the full-load engine speed.



**ENGINE RUN-IN INSTRUCTIONS**

Following a complete overhaul or any major repair job involving the installation of piston rings, pistons, cylinder liners or bearings, the engine should be "run-in" on a dynamometer prior to release for service.

The dynamometer is a device for applying specific loads to an engine. It permits the serviceman to physically and visually inspect and check the engine while it is operating. It is an excellent method of detecting improper tune-up, misfiring injectors, low compression and other malfunctions, and may save an engine from damage at a later date.

The operating temperature within the engine affects the operating clearances between the various moving parts of the engine and determines to a degree how the parts will wear. Normal coolant temperature (160° - 185°F.) should be maintained throughout the run-in.

The rate of water circulation through the engine on a dynamometer should be sufficient to avoid having the engine outlet water temperature more than 10°F. higher than the water inlet temperature. Though a 10° rise across an engine is recommended, it has been found that a 15° temperature rise maximum can be permitted.

Thermostats are used in the engine to control the coolant flow; therefore, be sure they are in place and fully operative or the engine will overheat during the run-in. However, if the dynamometer has a water stand-pipe with a temperature control regulator, such as a Taylor valve or equivalent, the engine should be tested without thermostats.

The Basic Run-In Horsepower Schedule is shown in the Table. The horsepower shown in the table is at SAE conditions: dry air density .0705 lb/cu. ft., air temperature of 85°F., and 500 ft. elevation.

**DYNAMOMETER TEST AND RUN-IN PROCEDURES**

**The Basic Engine**

The great number of engine applications make any attempt to establish comparisons for each individual model impractical. For this reason, each model has a basic engine rating for comparison purposes.

A basic engine includes only those items actually required to run the engine. The addition of any engine driven accessories will result in a brake horsepower figure less than the values shown in the Basic Engine Run-In Schedule. The following items are included on the basic engine: blower, fuel pump, fresh water pump and governor. The fan and battery-charging generator typify accessories not considered on the basic engine.

In situations where other than basic engine equipment is used during the test, proper record of this fact should be made on the Engine Test Report. The effects of this additional equipment on engine performance should then be considered when evaluating test results.

**Dynamometer**

The function of the dynamometer is to absorb and measure the engine output. Its basic components are a frame, engine mounts, the absorption unit, a heat exchanger, and a torque loading and measuring device.

The engine is connected through a universal coupling to the absorption unit. The load on the engine may be varied from zero to maximum by decreasing or increasing the resistance in the unit. The amount of

BASIC RUN-IN HORSEPOWER SCHEDULE*									
RPM	Time	4-Valve Head							
					3-53				
1800	10 Min.				15				
2200	1/2 Hr.				64				

Final run-in (within 5% of Rated BHP) should be for 1 1/2 hours at head engines.

2800 rpm for all other 4-Valve) cylinder

N45 Injectors Only



power absorbed in a water brake type dynamometer, as an example, is governed by the volume of fluid within the working system. The fluid offers resistance to a rotating motion. By controlling the volume of water in the absorption unit, the load may be increased or decreased as required.

The power absorbed is generally measured in torque (lb-ft) on a suitable scale. This value for a given engine speed will show the brake horsepower developed in the engine by the following formula:

$$\text{BHP} = (\text{T} \times \text{RPM})/5250$$

Where:

BHP = brake horsepower  
 T = torque in lb-ft  
 RPM = revolutions per minute

Some dynamometers indicate direct brake horsepower readings. Therefore, the use of the formula is not required when using these units.

During the actual operation, all data taken should be recorded immediately on an Engine Test Report (see sample on page 4).

### Instrumentation

Certain instrumentation is necessary so that data required to complete the *Engine Test Report* may be obtained. The following list contains both the minimum amount of instructions and the proper location of the fittings on the engine so that the readings represent a true evaluation of engine conditions.

- a. Oil pressure gage installed in one of the engine main oil galleries.
- b. Oil temperature gage installed in the oil pan, or thermometer installed in the dipstick hole in the oil pan.
- c. Adaptor for connecting a pressure gage or mercury manometer to the engine air box.
- d. Water temperature gage installed in the thermostat housing.
- e. Adaptor for connecting a pressure gage or water manometer to the crankcase.
- f. Adaptor for connecting a pressure gage or mercury manometer to the exhaust manifold at the flange.
- g. Adaptor for connecting a vacuum gage or water manometer to the blower inlet.
- h. Adaptor for connecting a fuel pressure gage to the fuel manifold inlet passage.
- i. Adaptor for connecting a pressure gage or mercury manometer to the turbocharger.

In some cases, gages reading in pounds per square inch are used for determining pressures while standard characteristics are given in inches of mercury or inches of water. It is extremely important that the scale of such a gage be of low range and finely divided if accuracy is desired. This is especially true of a gage reading in psi, the reading of which is to be converted to inches of water. The following conversion factors may be helpful.

Inches of water = psi x 2.77"  
 Inches of mercury = psi x 2.04"

**NOTE:** Before starting the Run-In or starting the engine for any reason following an overhaul, it is of extreme importance to observe the instructions on Preparation for Starting Engine First Time in Section 13.1.

### Run-In Procedure

The procedure outlined below will follow the order of the sample Engine Test Report.

#### A. PRE-STARTING

1. Fill the lubrication system as outlined under Lubricating System -- Preparation for Starting Engine First Time in Section 13.1.
2. Prime the fuel system as outlined under Fuel System -- Preparation for Starting Engine First Time in Section 13.1.
3. A preliminary valve clearance adjustment must be made before the engine is started. See Valve Clearance Adjustment in Section 14.1.
4. A preliminary injector timing check must be made before starting the engine. See Timing Injector in Section 14.2.
5. Preliminary governor adjustments must be made as outlined in Section 14.
6. Preliminary injector rack adjustment must be made -- see Section 14.

## B. BASIC ENGINE RUN-IN

The operator should be observant at all times, so that any malfunction which may develop will be detected. Since the engine has just been reconditioned, this run-in will be a test of the workmanship of the serviceman who performed the overhaul. Minor difficulties should be detected and corrected so that a major problem will not develop.

After performing the preliminary steps, be sure all water valves, fuel valves, etc are open. Also inspect the exhaust system, being sure that it is properly connected to the engine. Always start the engine with minimum dynamometer resistance.

After the engine starts, if using a water brake type dynamometer, allow sufficient water, by means of the control loading valves, into the dynamometer absorption unit to show a reading of approximately 5 lb-ft on the torque gage (or 10-15 HP on a horsepower gage). This is necessary, on some units, to lubricate the absorption unit seals and to protect them from damage.

Set the engine throttle at idle speed, check the lubricating oil pressure and check all connections to be sure there are no leaks.

Refer to the Engine Test Report sample which establishes the sequence of events for the test and run-in, and to the Basic Run-In Horsepower Schedule which indicates the speed (rpm), length of time and the brake horsepower required for each phase of the test. Also, refer to the Operating Conditions in Section 13.2 which presents the engine operating characteristics. These characteristics will be a guide for tracing faulty operation or lack of power.

Engine governors in most cases must be reset at the maximum full-load speed designated for the run-in. If a governor is encountered which cannot be adjusted to this speed, a stock governor should be installed for the run-in.

After checking the engine performance at idle speed and being certain the engine and dynamometer are operating properly, increase the engine speed to half speed and apply the load indicated on the Basic Run-In Horsepower Schedule.

The engine should be run at this speed and load for 10 minutes to allow sufficient time for the coolant temperature to reach the normal operating range. Record length of time, speed, brake horsepower, coolant temperature and lubricating oil pressure on the Engine Test Report.

Run the engine at each speed and rating for the length of time indicated in the Basic Run-In Horsepower

Schedule. This is the Basic Run-In. During this time engine performance will improve as new parts begin to "seat in". Record all of the required data.

## C. BASIC RUN-IN INSPECTION

While the engine is undergoing the Basic Run-In, check each item indicated in Section "C" of the Engine Test Report. Check for fuel oil or water leaks in the rocker arm compartment.

During the final portion of the Basic Run-In, the engine should be inspected for fuel oil, lubricating oil and water leaks.

Upon completion of the Basic Run-In and Inspection, remove the load from the dynamometer and reduce the engine speed gradually to idle and then stop the engine.

## D. INSPECTION AFTER BASIC RUN-IN

The primary purpose of this inspection is to provide a fine engine tune-up. First, tighten the cylinder head and rocker arm shaft bolts to the proper torque. Next, complete the applicable tune-up procedure. Refer to Section 14.

## E. FINAL, RUN-IN

After all of the tests have been made and the Engine Test Report is completed through Section "D", the engine is ready for final test. This portion of the test and run-in procedure will assure the engine owner that his engine has been rebuilt to deliver factory rated performance at the same maximum speed and load which will be experienced in the installation.

If the engine has been shut-down for one hour or longer, it will be necessary to have a warm-up period of 10 minutes at the same speed and load used for warm-up in the Basic Run-In. If piston rings, cylinder liners or bearings have been replaced as a result of findings in the Basic Run-In, the entire Basic Run-In must be repeated as though the run-in and test procedure were started anew.

All readings observed during the Final Run-In should fall within the range specified in the Operating Conditions in Section 13.2, and should be taken at full load unless otherwise specified. Following is a brief discussion of each condition to be observed.

The engine water temperature should be taken during the last portion of the Basic Run-In at full load. It should be recorded and should be within the specified range.

**ENGINE TEST REPORT**

Date \_\_\_\_\_ Unit Number \_\_\_\_\_  
 Repair Order Number \_\_\_\_\_ Model Number \_\_\_\_\_

<b>A PRE-STARTING</b>							
1. PRIME LUB. OIL SYSTEM	2. PRIME FUEL SYSTEM	3. ADJUST EXHAUST VALVES	4. TIME INJECTORS	5. ADJ. GOV.	6. ADJUST INJ. RACKS		
<b>B BASIC ENGINE RUN-IN</b>				<b>C BASIC RUN-IN INSPECTION</b>			
TIME AT SPEED	TIME		RPM	BHP	WATER TEMP.	LUB. OIL PRESS.	1. Check oil at rocker mechanism
	START	STOP					2. Inspect for lubricating oil leaks
							3. Inspect for fuel oil leaks
							4. Inspect for water leaks
							5. Check and tighten all external bolts
							6.
<b>D INSPECTION AFTER BASIC RUN-IN</b>							
1. Tighten Cylinder Head & Rocker Shaft Bolts				4. Adjust Governor Gap			
2. Adjust Valves (Hot)				5. Adjust Injector Racks			
3. Time Injectors				6.			
<b>E FINAL RUN-IN</b>							
TIME		TOP RPM		BHP	AIR BOX PRESSURE FULL LOAD	EXHAUST BACK PRESSURE F/L	CRANKCASE PRESSURE F/L
START	STOP	NO-LOAD	FULL LOAD				
BLOWER INTAKE RES. - F/L		FUEL OIL PRESSURE RET. MAN. F/L		WATER TEMP. FULL LOAD	LUB. OIL TEMP. F/L	LUB. OIL PRESSURE	
						FULL LOAD	IDLE
							IDLE SPEED
<b>F INSPECTION AFTER FINAL RUN</b>							
1. Inspect Air Box, Pistons, Liners, Rings				6. Replace Lubricating Oil Filter Elements			
2. Inspect Blower				7. Tighten Flywheel Bolts			
3. Check Generator Charging Rate				8. Rust Proof Cooling System			
4. Wash Oil Pan, Check Gasket				9.			
5. Clean Oil Pump Screen, Remove Cloth				10.			
<b>REMARKS:</b>							
Final Run OK'd _____		Dynamometer _____		Date _____			

NOTE: Operator must initial each check and sign this report.

The lubricating oil temperature reading must be taken while the engine is operating at full load and after it has been operating long enough for the temperature to stabilize. This temperature should be recorded and should be within the specified range.

The lubricating oil pressure should be recorded in psi after being taken at engine speeds indicated in the Operating Conditions, Section 13.2.

The fuel oil pressure at the fuel manifold inlet passage should be recorded and should fall within the specified range. Fuel pressure should be recorded at maximum engine rpm during the Final Run-In.

Check the air box pressure while the engine is operating at maximum speed and load. This check may be made by attaching a suitable gage (0-15 psi) or manometer (15-0-15) to an air box drain or to a hand hole plate prepared for this purpose. If an air box drain is used as a source for this check, it must be clean. The air box pressure should be recorded in inches of mercury.

Check the crankcase pressure while the engine is operating at maximum run-in speed. Attach a manometer, calibrated to read in inches of water, to the oil level dipstick opening. Normally, crankcase pressure should decrease during the run-in indicating that new rings are beginning to "seat-in".

Check the air inlet restriction with a water manometer connected to a fitting in the air inlet ducting located 2" above the air inlet housing. When practicability prevents the insertion of a fitting at this point, the manometer may be connected to a fitting installed in the 1/4" pipe tapped hole in the engine air inlet housing. If a hole is not provided, a stock housing should be drilled, tapped and kept on hand for future use.

The restriction at this point should be checked at a specific engine speed. Then, the air cleaner and ducting should be removed from the air inlet housing and the engine again operated at the same speed while noting the manometer reading. The difference between the two readings, with and without the air cleaner and ducting, is the actual restriction caused by the air cleaner and ducting.

Check the normal air intake vacuum at various speeds (at no-load) and compare the results with the Engine Operating Conditions in section 13.2. Record these readings on the Engine Test Report.

Check the exhaust back pressure at the exhaust manifold companion flange or within one inch of this location. This check should be made with a mercury

manometer through a tube adaptor installed at the tapped hole. If the exhaust manifold does not provide a 1/8" pipe tapped hole, such a hole can be incorporated by reworking the exhaust manifold.

Install a fitting for a pressure gage or manometer in this hole. Care should be exercised so that the fitting does not protrude into the stack. The manometer check should produce a reading in inches that is below the Maximum Exhaust Back Pressure for the engine (refer to Section 13.2).

Refer to the Basic Run-in Horsepower Schedule and determine the maximum rated brake horsepower and the full-load speed to be used during the Final Run-In. Apply the load thus determined to the dynamometer.

When the above conditions have been met, adjust the maximum no-load speed to conform with that specified for the particular engine. This speed may be either higher or lower than the maximum speed used during the Basic Run-In. This will ordinarily require a governor adjustment.

All information required in Section "E", Final Run-In, of the Engine Test Report should be determined and filled in. After the prescribed time for the Final Run-In has elapsed, remove the load from the dynamometer and reduce the engine speed gradually to idle speed and then stop the engine. The Final Run-In is complete.

#### **F. INSPECTION AFTER FINAL RUN-IN**

After the Final Run-In and before the Engine Test Report is completed, a final inspection must be made. This inspection will provide final assurance that the engine is in proper working order. During this inspection the engine is also made ready for any brief delay in delivery or installation which may occur. This is accomplished by rust-proofing the fuel system as outlined in Section 15.3. Also, a rust inhibitor should be introduced into the cooling system (refer to Section 13.3).



DETROIT DIESEL FUEL OIL SPECIFICATIONS

Detroit Diesel designs, develops, and manufacturers commercial diesel engines to operate on diesel fuels classified by the A.S.T.M. as Designation D-975 (grades 1-D and 2-D). These grades are very similar to grades DF-1 and DF-2 of Federal Specification VV-F-800. Residual fuels and furnace oils generally, are not considered satisfactory for Detroit Diesel engines. In some regions, however, fuel suppliers may distribute one fuel that is marketed as either diesel fuel (A.S.T.M. D-975) or domestic heating fuel (A.S.T.M. D-396) sometimes identified as furnace oil. In this case, the fuel should be investigated to determine whether the properties conform with those shown in the FUEL OIL SELECTION CHART, presented in this specification.

The FUEL OIL SELECTION CHART also will serve as a guide in the selection of the proper fuel for various applications. The fuels used must be clean, completely distilled, stable, and non-corrosive. DISTILLATION RANGE, CETANE NUMBER, and SULFUR CONTENT are three of the most important properties of diesel fuels that must be controlled to insure optimum combustion and minimum wear. Engine speed, load, and ambient temperature influence the selection of fuels with respect to distillation range and cetane number. The sulfur content of the fuel must be as low as possible to avoid excessive deposit formation, premature wear, and to minimize the sulfur dioxide exhausted into the atmosphere.

To assure that the fuel you use meets the required properties, enlist the aid of a reputable fuel oil supplier. The responsibility for clean fuel lies with the fuel supplier as well as the operator.

During cold weather engine operation, the cloud point (the temperature at which wax crystals begin to form in diesel fuel) should be 10° F below the lowest expected fuel temperature to prevent clogging of the fuel filters by wax crystals.

At temperatures below - 20° F, consult an authorized Detroit Diesel service outlet, since particular attention must be given to the cooling system, lubricating system, fuel system, electrical system, and cold weather starting aids for efficient engine starting and operation.

**STATEMENT OF POLICY ON FUELS AND LUBRICANTS**

In answer to requests concerning the use of fuel and lubricating oil additives, the following excerpts have been taken from a policy statement of General Motors Corporation:

*"It has been and continues to be General Motors policy to build motor vehicles that will operate satisfactorily on the commercial fuels and lubricants of good quality regularly provided by the petroleum industry through retail outlets. It is accordingly, contrary to the policy of General Motors to recommend the regular and continued*

*use of supplementary additives in such fuels and lubricants.*

*"This policy should not be confused with the fact that certain supplementary additives may effectively and economically solve specific operating problems which occasionally arise in some vehicles. In such instances, supplementary additives may be developed on the basis of suitable tests to remedy such problems without otherwise causing harm to vehicles. These selected products are then given official GM part numbers and made available for use in appropriate service applications.*

*"While General Motors Corporation assumes responsibility for the additives selected by it to remedy specific operation problems, it cannot, of course, accept responsibility for the many other additives which are constantly being marketed."*

Although the stated Corporation policy is self-explanatory, the following is emphasized: Detroit Diesel does not recommend or support the use of any supplementary fuel or lubricant additives. These include all products marketed as fuel conditioners, smoke suppressants, masking agents, reodorants, tune-up compounds, top oils, break-in oils, graphitizers and friction reducing compounds.

**NOTE:** The manufacturer's warranty applicable to Detroit Diesel engines provides in part that the provisions of such warranty shall not apply to any engine unit which has been subject to misuse, negligence or accident. Accordingly, malfunctions attributable to neglect or failure to follow the manufacturer's fuel or lubricating recommendations indicated above may not be within the coverage of the warranty.

**FUEL OIL SELECTION CHART**

Typical Application	General Fuel Classification	Final Boiling Point	Cetane No.	Sulfur Content
		(Max)	(Min)	(Max)
All Other Applications	Winter No. 2-D Summer No. 2-D	675°F 675°F	45 40	0.50° 0.50°

**NOTE:** When prolonged idling periods or cold weather conditions below 32° F are encountered, the use of lighter distillate fuels may be more practical. The same consideration must be made when operating at altitudes above 5,000 ft.

DETROIT DIESEL LUBRICATING OIL SPECIFICATIONS

OIL QUALITY

OIL QUALITY is the responsibility of the oil supplier. The term oil supplier is applicable to refiners, blenders, and rebranders of petroleum products, and does not include distributors of such products.

There are hundreds of commercial crankcase oils marketed today. Obviously, engine manufacturers or users cannot completely evaluate the numerous commercial oils. The selection of a suitable lubricant in consultation with a reliable oil supplier, observance of his oil drain recommendations based on used oil sample analysis and experience and proper filter maintenance, will provide the best assurance of satisfactory oil performance.

Detroit Diesel lubricant recommendations are based on general experience with current lubricants of various types and give consideration to the commercial lubricants presently available.

RECOMMENDATION

Detroit Diesel engines have given optimum performance and experienced the longest service life with the following oil performance levels having the ash and zinc limits shown:

Former Military and Commercial Lube Identification	New API Letter Code Service Classification	SAE Grade †
MIL-L-2104B 1964 MS Supplemental	CC SC CB	30 or 40 30 or 40

† SAR 30 and 40 grades have both performed satisfactorily in Detroit Diesel engines. Obviously, the expected ambient temperatures and engines cranking capability must be considered by the engine owner/operator when selecting the proper grade of oil.

ASH LIMIT

The sulfated ash limit (A.S.T.M. D-874) of the above lubricants shall not exceed 1.000% by weight, except lubricants that contain barium detergent-dispersant salts where 1.500% by weight is allowed. The majority of lubricants marked under the performance levels shown above have a sulfated ash content between 0.55 to 0.85% by weight.

ZINC CONTENT

The zinc content, as zinc diorganodithiophosphate, shall be a minimum of 0.07% by weight.

RECOMMENDATIONS REGARDING THE USE OF CURRENT OIL PERFORMANCE LEVEL PRODUCTS MEETING PRESENT MILITARY LUBRICANT SPECIFICATIONS

The petroleum industry is currently marketing engine crankcase oils that may be identified as follows:

Military or Commercial Identification	API Letter Code Service Classification	Comment on Application and Performance
MIL-L-2104C	CD/SC	Supersedes MIL-L-45199B (Series 3) intended for diesel service.
MIL-L-46152	CC/SE	Supersedes MIL-L-2104B intended for gasoline engine passenger cars.
Universal	Numerous	Meets the performance criteria of all industry accepted tests and all current military specifications including MIL-L-2104C and MIL-L-46152.

Detroit Diesel does not have sufficient experience with any of the above described lubricants to recommend their use. Some oil suppliers have reported satisfactory performance of the above identified products marketed by them. If an owner operator intends to use any of the above described products, it is recommended he obtain evidence from the oil supplier that the lubricant has performed satisfactorily in Detroit Diesel engines. The above products may be satisfactory for use in Detroit Diesel engines under the following conditions:

1. The sulfated ash (A.S.T.M. D-874) limit of the above lubricants shall not exceed 1.000% by weight, except lubricants that contain only barium detergent-dispersant salts where 1.500% by weight is allowed.
2. The zinc content, as zinc diorganodithiophosphate, shall be a minimum of 0.07% by weight.
3. Sufficient evidence of satisfactory performance in Detroit Diesel engines has been provided to Detroit Diesel and/or the customer.

LUBRICANTS NOT RECOMMENDED

The following lubricants are NOT recommended because of a history of poor performance in Detroit Diesel engines:

Military or Commercial Identification	API Letter Code Service Classification	Comment on Performance
MIL-L-2104B/1968 MS	CC/SD	Excessive ash deposits formed
MIL-L-45199B (Series 3)	CD	Excessive ash deposits formed
Multigrade oils	Numerous	History of poor performance most heavy duty diesel engines

COLD WEATHER OPERATION

Cold weather starting will be facilitated when immersion type electrical coolant heaters can be used. Other practical considerations, such as the use of batteries, cables and connectors of adequate size, generators or alternators of ample capacity, proper setting of voltage regulators, ether starting aids, oil and coolant heater systems, and proper fuel selection will accomplish starting with the use of SAE 30 or SAE 40 oils. For complete cold weather starting information, consult an authorized Detroit Diesel service outlet. Ask for Engineering bulletin No. 38 entitled: "Cold Weather Operation"

NORTH SLOPE & OTHER EXTREME SUB-ZERO OPERATIONS

Some new special arctic lubricants have recently been developed for Military use in extremely cold climates. The oils that have shown best cold temperature performance may be described as multigrades having a synthetic base stock and low volatility characteristics. At this time a new Military arctic oil specification is being developed. The good oil performers have passed the oil performance criteria defined in (tentative) Federal Test Method 354 of Federal Test Standard 791. The lubricants may be used where continuous sub-zero temperatures prevail and where engines are shut down for periods longer than eight (8) hours. These are not comparable to the performance of SAE 30 or 40 oils at operating conditions and should be considered only as a last resort when engine cranking is a severe problem and auxiliary heating aids are not available.

OIL CHANGES

The oil change period is dependent on the operating conditions (e.g. load factor, etc.) of an engine that will vary with the numerous service applications. It is recommended that new engines be started with 150 hour oil change periods. For highway vehicles this corresponds to approximately 4,500 miles, and for "city" service vehicles, approximately 2,500 miles. The drain interval may then be gradually increased, or decreased with experience on a specific lubricant while also considering the recommendations of the oil supplier (analysis of the drained oil can be helpful here) until the most practical oil drain period for the particular service has been established.

Solvents should not be used as flushing oils in running engines. Dilution of the fresh refill oil supply can occur, which may be detrimental.

Full flow oil filtration systems have been used in Detroit Diesel engines since they have been manufactured. For the best results, the oil filter element should be replaced each time the oil is changed.

NEW ENGINE OIL CLASSIFICATION SYSTEM

A relatively new engine oil classification system has been introduced to industry that describes that criteria required to meet each performance level. A simplified cross-reference of oil and current commercial and military specification is shown below.

CROSS-REFERENCE OF LUBE OIL CLASSIFICATION SYSTEMS

API Code Letters	Comparable Military or Commercial Industry Spec.
CA	MIL-L-2104A
CB	Supplement 1
CC	MIL-L-2104B (see Note 1 below)
CD	MIL-L-45199B (Series 3)
:	MIL-L-46152 (supersedes MIL-L-2104B for Military only)
■	MIL-L-2104C (supersedes MIL-L-45199B for Military only)
SA	none
SB	none
SC	1964 MS oils - Auto passenger car
SD	1968 MS oils - Auto passenger car
SE	1972 MS oils - Auto passenger car

NOTE 1: MIL-L-2104B Lubricants are currently marketed and readily available for Commercial use. MIL-L-2104B oils are obsolete for Military service applications only.

- † Oil performance meets or exceeds that of CC and SE oils.
- Oil performance meets or exceeds that of CD and SC oils.

For complete descriptions, consult the following publications:

1. Society of Automotive Engineers (SAE) Technical Report J-183a.
2. Federal Test Method Standard 791a.

PUBLICATION AVAILABLE SHOWING COMMERCIAL "BRAND" NAME LUBRICANTS

A list of "brand" name lubricants distributed by the majority of worldwide oil suppliers be purchased from the Engine Manufacturers Association (EMA). The publication is titled, "EMA Lubricating Oils Data BOOK for Heavy Duty Automotive and Industrial Engines." The publication shows the brand names, oil performance levels, viscosity grades, and sulfated ash contents of most "brands" marketed.

ENGINE MANUFACTURERS ASSOCIATION  
111 EAST WACKER DRIVE  
CHICAGO, ILLINOIS 60601

## ENGINE COOLANT

Engine coolant is considered as any solution which is circulated through the engine to provide the means for heat transfer from the various engine components. In general, water containing various materials in solution is used for this purpose.

The function of the coolant is basic in the design and the successful operation of the engine and must be carefully selected and properly maintained.

### COOLANT REQUIREMENTS

A suitable coolant solution must meet the following five basic requirements:

1. Provide for adequate heat transfer.
2. Provide a corrosion resistant environment within the cooling system.
3. Prevent formation of scale or sludge deposits in the cooling system.
4. Be compatible with the cooling system hose and seal materials.
5. Provide adequate freeze protection during cold weather operation.

Normally requirements 1 through 4 are satisfied by combining a suitable water with reliable inhibitors. When operating conditions dictate the need for freeze protection, a solution of suitable water and an ethylene glycol type antifreeze containing adequate inhibitors will provide a satisfactory coolant.

### WATER

Any water, whether of drinking quality or not, will produce a corrosive environment in the cooling system. Also, scale deposits may form on the internal surfaces of the cooling system due to the mineral content of the water. Therefore, water selected as a coolant must be properly treated with inhibitors to control corrosion and scale deposition.

To determine if a particular water is suitable for use as a coolant when properly inhibited, the following characteristics must be considered. The concentration of (1) chlorides, (2) sulfates, (3) total hardness and (4) dissolved solids. These materials are objectionable for a number of reasons: chlorides and/or sulfates will accelerate corrosion, while hardness (percentage of magnesium and calcium present) will cause deposits of scale. Total dissolved solids may cause scale deposits,

sludge deposits, corrosion or a combination of these. Chlorides, sulfates, magnesium and calcium are among but not necessarily all the materials which make up dissolved solids. Water, within the limits specified in Tables 1 and 2, Figure A, is satisfactory as an engine coolant when proper inhibitors are added.

### CORROSION INHIBITORS

A corrosion inhibitor is a water soluble chemical compound which protects the metallic surfaces of the cooling system against corrosive attack. Some of the more commonly used corrosion inhibitors are chromates, borates, nitrates, nitrites and soluble oil. Depletion of all types of inhibitors occur through normal operation and therefore strength levels must be maintained by the addition of inhibitors at prescribed intervals.

**CHROMATES:** Sodium chromate and potassium dichromate are two of the more commonly used water system corrosion inhibitors. However, the restrictive use of these materials, due to ecology considerations, has de-emphasized their use in favor of non-chromates. Care should be exercised in handling these materials due to their toxic nature.

Chromate inhibitors must not be used in ethylene glycol antifreeze solutions. Chromium hydroxide, commonly called "green slime", can result from the use of chromate inhibitors with permanent type antifreeze. This material deposits on the cooling system passages, reducing the heat transfer rate, and will result in engine overheating. Engines which have operated with a chromate inhibited water must be chemically cleaned before the addition of ethylene glycol type antifreeze. A commercial heavy duty descaler should be used in accordance with the manufacturer's recommendation for this purpose.

**SOLUBLE OIL:** Soluble oil has been used as a corrosion inhibitor for many years. It has, however, required very close attention relative to the concentration level due to adverse effects on heat transfer if the concentration exceeds 1% by volume. For example: 1-1/4% of soluble oil in the cooling system increases fire deck temperatures 6% and a 2-1/2% concentration raises fire deck temperature up to 15%. Soluble oil must not be used as a corrosion inhibitor.

**NON-CHROMATES:** Non-chromate inhibitors (borates, nitrates, nitrites, etc.) provide corrosion



TABLE 1

	PARTS PER MILLION	GRAINS PER GALLON
Chlorides (Maximum)	40	2.5
Sulfates (Maximum)	100	5.8
Total Dissolved Solids (Maximum)	340	20
Total Hardness (Maximum)	170	10

Refer to Table 2 for evaluation of water intended for use in a coolant solution.

TABLE 2

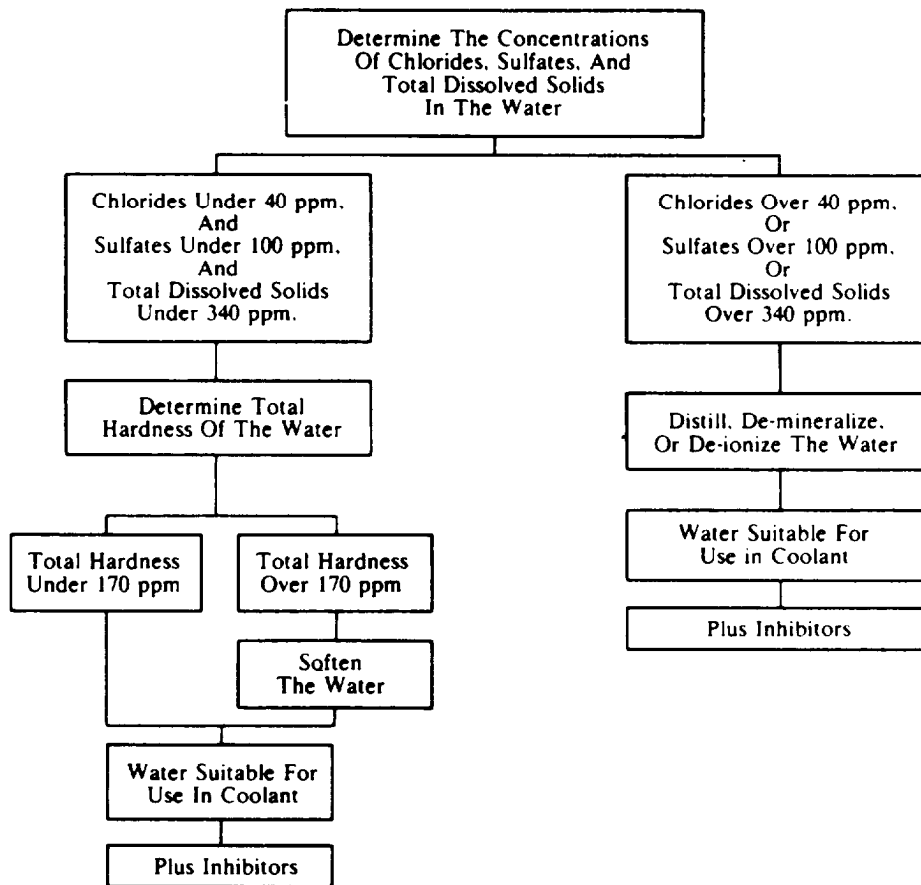


Figure A

protection in the cooling system with the basic advantage that they can be used with either water or a water and ethylene glycol solution.

**INHIBITOR SYSTEMS**

An inhibitor system is considered as a combination of

chemical compounds which provide corrosion protection, pH control and water softening ability. Corrosion protection has been discussed earlier under the section on Corrosion Inhibitors. The pH control is used to maintain an acid free solution. The water softening ability deters formation of mineral deposits. Inhibitor systems are available in various forms such as coolant

## COOLANT INHIBITOR CHART

Inhibitor or Inhibitor System	Corrosion Inhibitor Type	Complete Inhibitor System	Inhibitor Water	Compatability Ethylene Glycol Base Antifreeze
Sodium chromate	*Chromate	No	Yes	No
Potassium dichromate	*Chromate	No	Yes	No
Perry filter elements				
5020 (Type OS)	*Chromate	Yes	Yes	No
S-453 (Spin on)	*Chromate	Yes	Yes	No
5030 (Type OS)	@ Non-chromate	Yes	Yes	Yes
S-331 (Spin on)	@ Non-chromate	Yes	Yes	Yes
5070 (Type OS)	# Non-chromate	Yes	Yes	Yes
S-473 (Spin on)	# Non-chromate	Yes	Yes	Yes
Lenroc filter element	Non-chromate	Yes	Yes	Yes
Fleetguard filter elements				
DCA (Canister)	Non-chromate	Yes	Yes	Yes
DCA (Spin on)	Non-chromate	Yes	Yes	Yes
AC Filter elements				
DCA (Canister)	Non-chromate	Yes	Yes	Yes
DCA (Spin on)	Non-chromate	Yes	Yes	Yes
Luber-Finer filter elements				
LW-4739 (Canister)	Non-chromate	Yes	Yes	Yes
LFW-4744 (Spin on)	Non-chromate	Yes	Yes	Yes
Nalcool 2000 (Liquid)	Non-chromate	Yes	Yes	Yes
Liquid Perry (LP-20)	Non-chromate	Yes	Yes	Yes
Lubercool (Liquid)	Non-chromate	Yes	Yes	Yes

@ Note 1 - Perry "Year Around" formula.

# Note 2 - Perry "Universal" formula.

Figure B

filter elements, liquid and dry bulk inhibitor additives and as an integral part of permanent antifreeze.

COOLANT FILTER ELEMENTS: Replaceable elements are available with various chemical inhibitor systems. Care should be used in the selection of elements relative to inhibitor compatibility with coolant solutions shown in Figure B.

Problems have developed from the use of the

magnesium lower support plate used by some manufacturers in their coolant filters. The magnesium plate will be attacked by solutions which will not be detrimental to other metals in the cooling system. The dissolved magnesium will be deposited in the hottest zones of the engine where heat transfer is most critical (Figure C). The use of aluminum or zinc in preference to magnesium is recommended to eliminate this type of deposit.

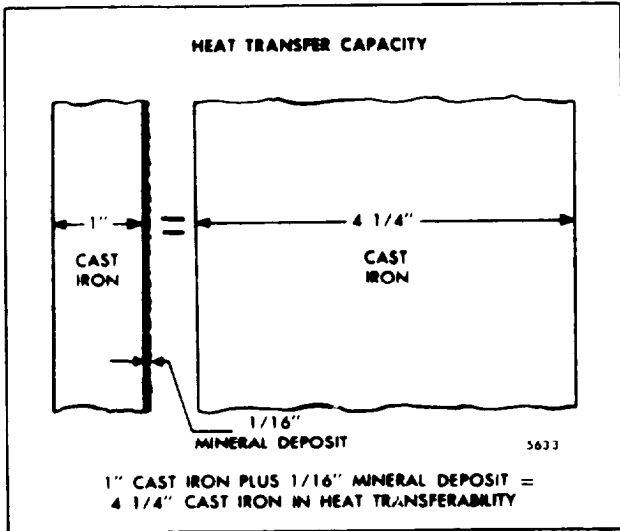


Figure C

A high chloride coolant will have a detrimental effect on the water softening capabilities of systems using ion-exchange resins. Accumulations of calcium and magnesium ions removed from the coolant and held captive by the zeolite resin can be released into the coolant by a regenerative process caused by high chloride content solutions.

**BULK INHIBITOR ADDITIVES:** Commercially packaged inhibitor systems are available which can be added directly to the engine coolant or to bulk storage tanks containing coolant solution. Both chromate and non-chromate systems are available and care should be taken regarding inhibitor compatibility with other coolant constituents (Figure B).

A non-chromate inhibitor system is recommended for use in Detroit Diesel engines. The non-chromate systems can be used with either water or ethylene glycol antifreeze solutions and provide corrosion protection, pH control and water softening. Some of the approved non-chromate inhibitor systems offer the additional advantage of a simple on site test to determine protection level.

**ANTIFREEZE**

When freeze protection is required, an ethylene glycol base permanent antifreeze should be used. An inhibitor system is included in this type of antifreeze and no additional inhibitors are required on initial fill if a minimum antifreeze concentration of 30% by volume is used. Solutions of less than 30% concentration do not provide sufficient corrosion protection.

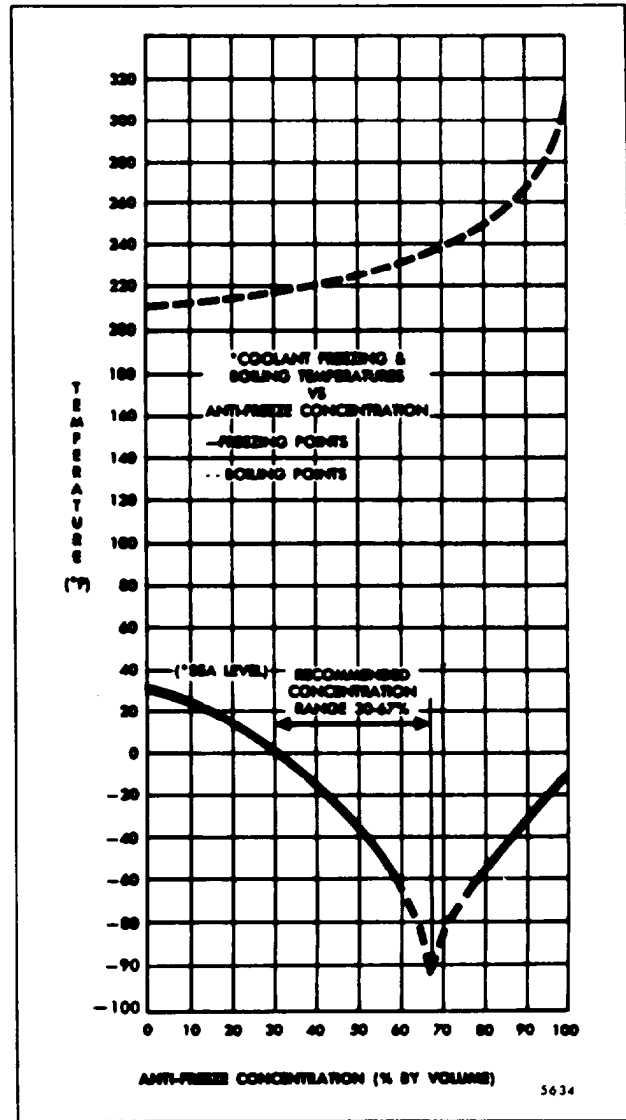


Figure D

Concentrations over 67% adversely affect freeze protection and heat transfer rates (Figure D).

Inhibitor depletion will occur in ethylene glycol base antifreeze through normal service. The inhibitors must be replenished at approximately 500 hour or 20,000 mile intervals with a non-chromate inhibitor system. Commercially available inhibitor systems (Fig. B) may be used to re-inhibit antifreeze solutions.

Several brands of permanent antifreeze are available with sealer additives. The specific type of sealers vary with the manufacturer. Antifreeze with sealer additives is not recommended for use in Detroit Diesel engines due to plugging problems throughout various areas of the cooling system.

**COOLANT RECOMMENDATIONS**

1. Always use a properly inhibited coolant.
2. If freeze protection is required, always use ethylene glycol antifreeze.
3. Re-inhibit antifreeze with a non-chromate inhibitor system.
4. Always follow the manufacturer's recommendations on inhibitor usage and handling.
5. Do not use soluble oil.
6. Chromate inhibitors should never be used with permanent antifreeze.
7. Sealer type antifreeze should not be used.
8. Maintain prescribed inhibitor strength.



**SECTION 14**  
**ENGINE TUNE-UP**  
**CONTENTS**

Engine Tune-Up Procedures.....	14
Exhaust Valve Clearance Adjustment.....	14.1
Timing Fuel Injector.....	14.2
Limiting Speed Mechanical Governor and Injector Rack Control Adjustment: (In- line Engine) .....	14.3.1

**ENGINE TUNE-UP PROCEDURES**

There is no scheduled interval for performing an engine tune-up. As long as the engine performance is satisfactory, no tune-up should be needed. Minor adjustments in the valve and injector operating mechanisms, governor, etc. should only be required periodically to compensate for normal wear on parts.



Normally, when performing a tune-up on an engine in service, it is only necessary to check the various adjustments for a possible change in the settings. However, if the cylinder head, governor, or injectors have been replaced or overhauled, then certain preliminary adjustments are required before the engine is started.

The preliminary adjustments consist of the first four items in the tune-up sequence. The procedures are the same except that the valve clearance is greater for a cold engine.

To tune-up an engine completely, all of the adjustments are made by following the applicable tune-up sequence given below after the engine has reached the normal operating temperature. Since the adjustments are normally made while the engine is stopped, it may be necessary to run the engine between adjustments to maintain normal operating temperature.

#### **Tune-Up Sequence for Mechanical Governor**

1. Adjust the exhaust valve clearance.
2. Time the fuel injectors.

3. Adjust the governor gap.
4. Position the injector rack control levers.
5. Adjust the maximum no-load speed.
6. Adjust the idle speed.
7. Adjust the buffer screw.

**NOTE:** Use new valve rocker cover gasket(s) after each tune-up.

### EXHAUST VALVE CLEARANCE ADJUSTMENT

The correct exhaust valve clearance at normal engine operating temperature is important for smooth, efficient operation of the engine.

Insufficient valve clearance can result in loss of compression, misfiring cylinders and, eventually, burned valve seats and valve seat inserts. Excessive valve clearance will result in noisy operation, especially in the low speed range.

Whenever the cylinder head is overhauled, the exhaust valves are reconditioned or replaced, or the valve operating mechanism is replaced or disturbed in any way, the valve clearance must first be adjusted to the cold setting to allow for normal expansion of the engine parts during the engine warm-up period. This will ensure a valve setting that is close enough to the specified clearance to prevent damage to the valves when the engine is started.



## ENGINES WITH FOUR VALVE CYLINDER HEADS

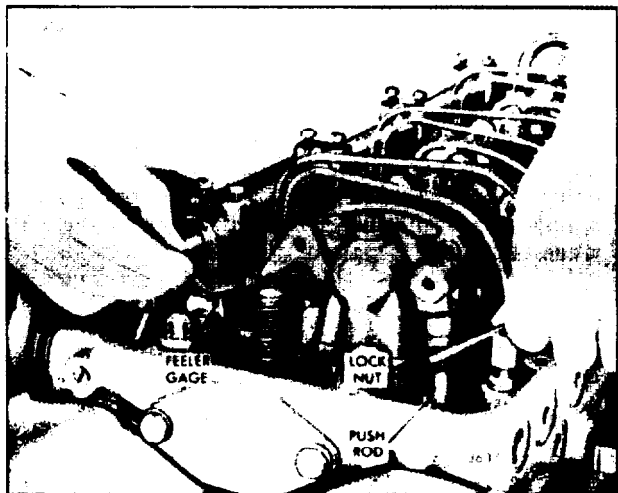


Fig. 2 - Adjusting Valve Clearance (Four Valve Head)

All of the exhaust valves may be adjusted in firing order sequence during one full revolution of the crankshaft. Refer to the General Specifications at the front of the manual for the engine firing order.

### Exhaust Valve Clearance Adjustment (Cold Engine)

1. Remove the loose dirt from the valve rocker cover and remove the cover.
2. Place the governor speed control lever in the idle speed position. If a stop lever is provided, secure it in the stop position.
3. Rotate the crankshaft, manually or with the starting motor, until the injector follower is fully depressed on the particular cylinder to be adjusted.

**CAUTION:** If a wrench is used on the crankshaft

bolt at the front of the engine, do not turn the crankshaft in a left-hand direction of rotation or the bolt may be loosened.

4. Loosen the exhaust valve rocker arm push rod lock nut.
5. Place a .027 " feeler gage, J 9708, between the end of one exhaust valve stem and the rocker arm bridge (Fig. 2). Adjust the push rod to obtain a smooth pull on the feeler gage.
6. Remove the feeler gage. Hold the push rod with a 5/16 " wrench and tighten the lock nut with a 1/2 " wrench.
7. Recheck the clearance. At this time, if the adjustment is correct, the .025 " gage will pass freely between the end of one valve stem and the rocker arm bridge and the .027 " gage will not pass through. Readjust the push rod, if necessary.
8. Adjust and check the remaining exhaust valves in the same manner as above.

### Exhaust Valve Clearance Adjustment (Hot Engine)

Maintaining normal engine operating temperature is particularly important when making the final exhaust valve clearance adjustment. If the engine is allowed to cool before setting any of the valves, the clearance, when running at full load, may become insufficient.

1. With the engine at normal operating temperature (160 ° -185 ° F.), recheck the exhaust valve clearance with feeler gage J 9708. At this time, if the valve clearance is correct, the .023 " gage will pass freely between the end of one valve stem and the rocker arm bridge and the .025 " feeler gage will not pass through. Readjust the push rod, if necessary.
2. After the exhaust valve clearance has been adjusted, check the fuel injector timing (Section 14.2).

FUEL INJECTOR TIMING

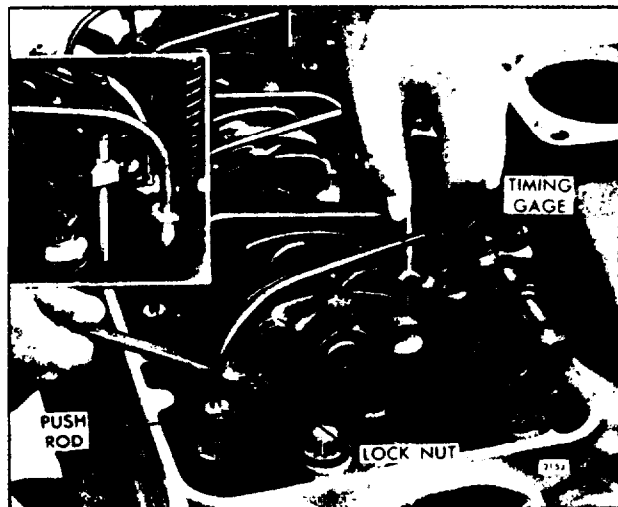


Fig. 1 - Timing Fuel Injector

Injector	Timing Dimension	Timing Gage
N45	1.460	J 1853

To time an injector properly, the injector follower must be adjusted to a definite height in relation to the injector body.

All of the injectors can be timed in firing order sequence during one full revolution of the crankshaft. Refer to the General Specifications at the front of the manual for the engine firing order.

**Time Fuel Injector**

After the exhaust valve clearance has been adjusted (Section 14.1), time the fuel injectors as follows:

1. Place the governor speed control lever in the idle speed position. If a stop lever is provided, secure it in the stop position.
2. Rotate the crankshaft, manually or with the starting motor, until the exhaust valves are fully depressed on the particular cylinder to be timed.

**CAUTION:** If a wrench is used on the crankshaft

**INJECTOR TIMING GAGE CHART**

bolt at the front of the engine, do not turn the crankshaft in a left-hand direction of rotation or the bolt may be loosened.

3. Place the small end of the injector timing gage (refer to the chart for the correct timing gage) in the hole provided in the top of the injector body, with the flat of the gage toward the injector follower (Fig. 1).
4. Loosen the injector rocker arm push rod lock nut.
5. Turn the push rod and adjust the injector rocker arm until the extended part of the gage will just pass over the top of the injector follower.
6. Hold the push rod and tighten the lock nut. Check the adjustment and, if necessary, readjust the push rod.
7. Time the remaining injectors in the same manner as outlined above.
8. If no further engine tune-up is required, install the valve rocker cover, using a new gasket.



## LIMITING SPEED MECHANICAL GOVERNOR AND INJECTOR RACK CONTROL ADJUSTMENT

### IN-LINE ENGINE

After adjusting the exhaust valves and timing the fuel injectors, adjust the governor and position the injector rack control levers.

**NOTE:** Loosen the load limit lever for the load limiting device, if the engine is so equipped, before proceeding with the governor adjustment.

#### Adjust Governor Gap

With the engine stopped and at operating temperature, adjust the governor gap as follows:

1. Remove the high speed spring retainer cover.
2. Back out the buffer screw until it extends 5/8" beyond the governor housing.
3. Clean and remove the valve rocker cover.
4. Start the engine and adjust the idle speed screw (Fig. 5) to obtain an idle speed of 500-600 rpm.

**NOTE:** The recommended idle speed is 500-600 rpm, but may vary with special engine applications.

5. Stop the engine and remove the governor cover.
6. Start the engine and control the speed manually by operating the injector control tube lever. The engine speed should be between 800 and 1000 rpm.

**CAUTION:** Do not overspeed the engine.

7. Check the gap between the low speed spring cap and the high speed spring plunger with a .0015" feeler gage. If the gap setting is incorrect, reset the gap adjusting screw (Fig. 1). If the setting is correct, the .0015" movement can be seen by placing a few drops of oil into the governor gap and pressing a screw driver against the gap adjusting screw. Movement of the cap toward the plunger will force the oil from the gap in the form of a small bead.

8. Hold the gap adjusting screw and tighten the lock nut.

9. Recheck the gap and readjust if necessary.

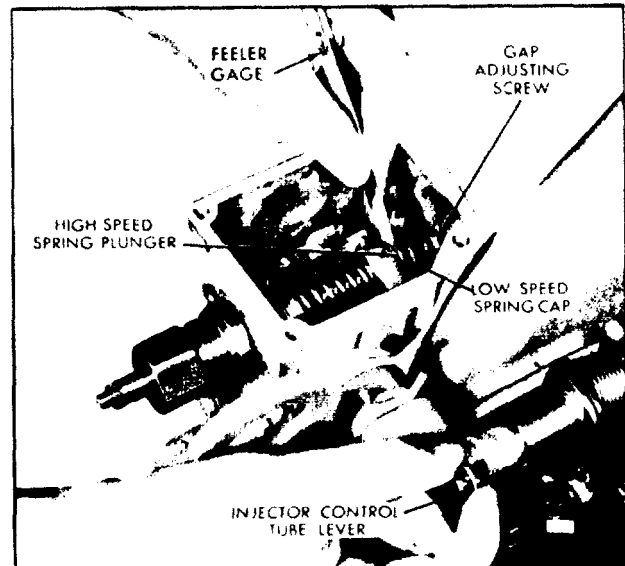


Fig. 1 - Adjusting Governor Gap

10. Install the governor cover. The governor cover should be placed on the housing with the pin of the speed control lever projecting into the slot of the differential lever.

11. Install the screws and lock washers finger tight. Pull the cover away from the engine and tighten the screws. This step will properly locate the cover on the governor housing.

#### Position Injector Rack Control levers

The position of the injector racks must be correctly set in relation to the governor. Their position determines the amount of fuel injected into each cylinder and ensures equal distribution of the load.

Adjust the rear injector rack control lever first to establish a guide for adjusting the remaining injector rack control levers.

1. Disconnect any linkage attached to the speed control lever.
2. Loosen all of the inner and outer injector rack control lever adjusting screws (Fig. 2) Be sure all of the levers are free on the injector control tube.
3. Move the speed control lever to the full-fuel



Fig. 2 - Positioning the Rear Injector Rack Control Lever

position. Turn the inner adjusting screw down on the rear injector rack control lever until a step-up in effort is noted. This will place the rear injector rack in the full-fuel position. Turn down the outer adjusting screw until it bottoms lightly on the injector control tube. Then alternately tighten both the inner and outer adjusting screws. This should result in placing the governor linkage and control tube assembly in the same positions that they will attain while the engine is running at full-load.

4. To be sure of proper rack adjustment, hold the speed control lever in the full-fuel position. Press down on the injector rack coupling causing the coupling to rotate.

**NOTE:** This coupling is on the end of the injector rack and fits around the ball end of the rack control lever.

The setting is sufficiently tight if the coupling returns to its original position. If the coupling does not return to its original position, it is too loose. To correct, back off the outer adjusting screw slightly and tighten the inner adjusting screw.

The coupling is too tight if, when moving the speed control lever from the idle to the maximum speed position, the injector rack coupling becomes tight before the speed control lever reaches the end of its travel (stop under the governor cover). This will result

in a step-up in effort to move the speed control lever to its maximum speed position and a deflection in the fuel rod (fuel rod deflection can be seen at the bend). If the coupling is found to be too tight, back off the inner adjusting screw slightly and tighten the outer adjusting screw.

5. Manually hold the rear injector rack control lever in the full-fuel position. Turn down the inner adjusting screw on the injector rack control lever of the adjacent injector until the injector rack has moved into the full-fuel position and the inner adjusting screw is bottomed on the injector control tube. Turn the outer adjusting screw down until it bottoms lightly on the injector control tube. Then alternately tighten both the inner and outer adjusting screws.

**NOTE:** Overtightening of the injector rack control lever adjusting screws during installation or adjustment can result in damage to the injector control tube. The recommended torque of the adjusting screws is 24-36 in-lbs.

6. Recheck the rear injector rack to be sure that it has remained snug on the ball end of the injector rack control lever while adjusting the adjacent injector. If the rack of the rear injector has become loose, back off the inner adjusting screw slightly on the adjacent injector rack control lever. Tighten the outer adjusting screw. When the settings are correct, the racks of both injectors must be snug on the ball end of their respective rack control levers.

7. Position the remaining rack control levers as outlined in Steps 5 and 6.

### Adjust Maximum No-load Engine Speed

All governors are properly adjusted before leaving the factory. However, if the governor has been reconditioned or replaced, and to ensure the engine speed will not exceed the recommended no-load speed as given on the engine name plate, the maximum no-load speed may be set as follows:

#### TYPE A GOVERNOR SPRINGS (Fig. 4):

1. Loosen the lock nut (Fig. 3) and back off the high speed spring retainer approximately five turns.

2. With the engine at operating temperature and no-load on the engine, place the speed control lever in the full-fuel position. Turn the high speed spring retainer IN until the engine is operating at the recommended no-load speed.

The best method of determining the engine speed is with an accurate tachometer.

3. Hold the high speed spring retainer and tighten the lock nut.

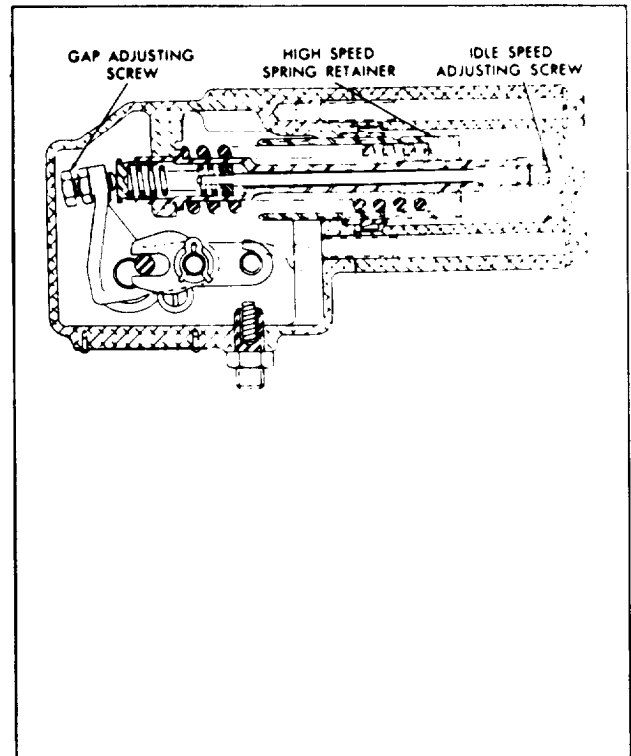


Fig. 4 - Governor Spring Assemblies

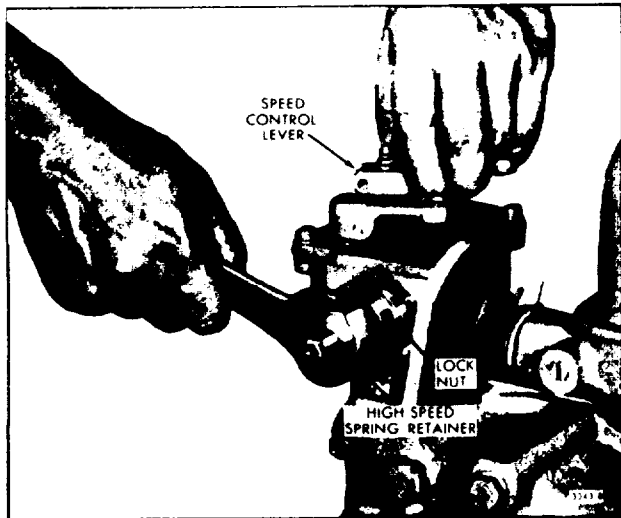


Fig. 3 - Adjusting Maximum No-Load Engine Speed

### Adjust Idle Speed

With the maximum no-load speed properly adjusted, the idle speed may be adjusted as follows:

1. With the engine running at normal operating temperature and with the buffer screw backed out to avoid contact with the differential lever, turn the idle speed adjusting screw (Fig. 5) until the engine idles at the recommended idle speed.

The recommended idle speed is 500-600 rpm, but may vary with the particular engine application.

2. Hold the idle speed adjusting screw and tighten the lock nut.

3. Install the high speed spring cover and tighten the two bolts.

### Adjust Buffer Screw

With the idle speed properly set, adjust the buffer screw as follows:

1. With the engine running at normal operating

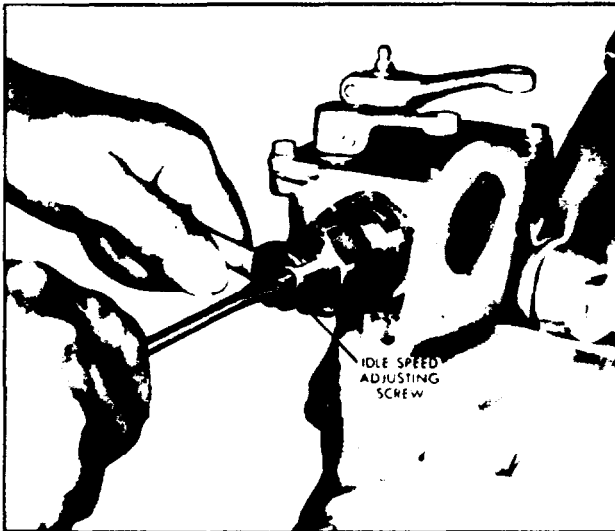


Fig. 5 - Adjusting Engine Idle Speed

temperature, loosen the lock nut and turn the buffer screw in (Fig. 6) so that it contacts the differential lever as lightly as possible and still eliminates engine roll.

**NOTE:** Do not increase the engine idle speed more than 15 rpm with the buffer screw.

2. Recheck the maximum no-load speed. If it has

increased more than 25 rpm from the maximum speed attained in Step 1, back off the buffer screw until the increase is less than 25 rpm.

3. Hold the buffer screw and tighten the lock nut.

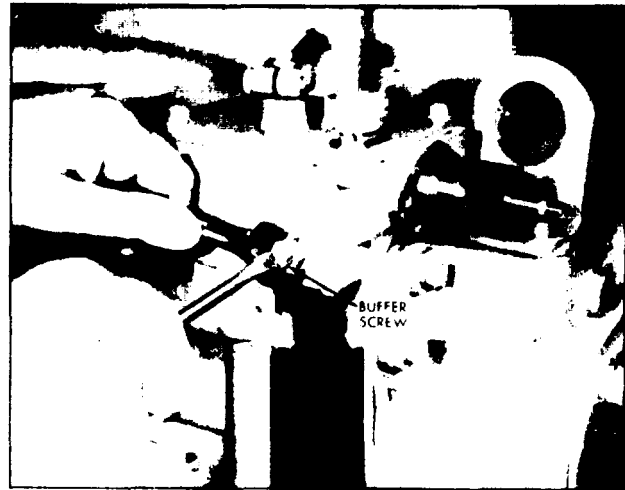


Fig. 6 Adjusting the Buffer Screw

---

**SECTION 15**  
**PREVENTIVE MAINTENANCE - TROUBLE SHOOTING -**  
**STORAGE**  
**CONTENTS**

Lubrication and Preventive Maintenance.....	15.1
Trouble Shooting .....	15.2
Storage .....	15.3







## LUBRICATION AND PREVENTIVE MAINTENANCE

To obtain the best performance and long life from a Detroit Diesel engine, the Operator must adhere to the following schedule and instructions on lubrication and preventive maintenance.

The daily instructions pertain to routine or daily starting of an engine and not to a new engine or one that has not been operated for a considerable period of time. For new or stored engines, carry out the instructions given under Preparation for Starting Engine First Time under Operating Instructions in Section 13.

The time intervals given in the chart on the following page are actual operating hours or miles of an engine. If the lubricating oil is drained immediately after an engine has been run for some time, most of the sediment will be in suspension and, therefore, will drain readily.

LUBRICATION AND PREVENTIVE MAINTENANCE CHART		Time Interval								
		Hours	8	50	100	200	300	500	1,000	2,000
Item	Operation	Daily								
1	Engine Oil	X								
2	Oil Filter*									
3	Coolant and Filter	X						X	X	
4	Hoses							X		
5	Radiator								X	
7	Raw Water Pump	X								
8	Fuel Tank	X						X		
9	Fuel Strainer and Filter						X			
10	Air Cleaner		X					X		
11	Air Box Drains							X	X	
12	Ventilating System								X	
13	Blower Screen								X	
14	Starting Motor*									
15	Battery-Charging Generator				X	X		X		X
16	Battery				X					
19	Engine Tune-Up*									
20	Drive Belts					X				
22	Fan Hub Bearings*									
23	Shut-Down System						X			

\* See items on following pages

**Item 1**


Check the oil level daily before starting the engine. Add oil, if necessary, to bring it to the proper level on the dipstick.

Select the proper grade of oil in accordance with the instructions in the Lubricating Oil Specifications in Section 13.3.


It is recommended that new engines be started with 100 hour oil change periods. For highway vehicles, this corresponds to approximately 3,000 miles, and for city-service vehicles approximately 1,000-2,000 miles. The drain interval may then be gradually increased, or decreased, following the recommendations of an independent oil analysis laboratory or the oil supplier (based upon the oil sample analysis) until the most practical oil change period has been established.

**Item 2**

Change the engine oil filter elements and gaskets each time the engine oil is changed. Any deviation, such as changing filters every other oil change, should be based on a laboratory analysis of the drained oil and used filter elements to determine if such practice is practical for proper protection of the engine. Make a

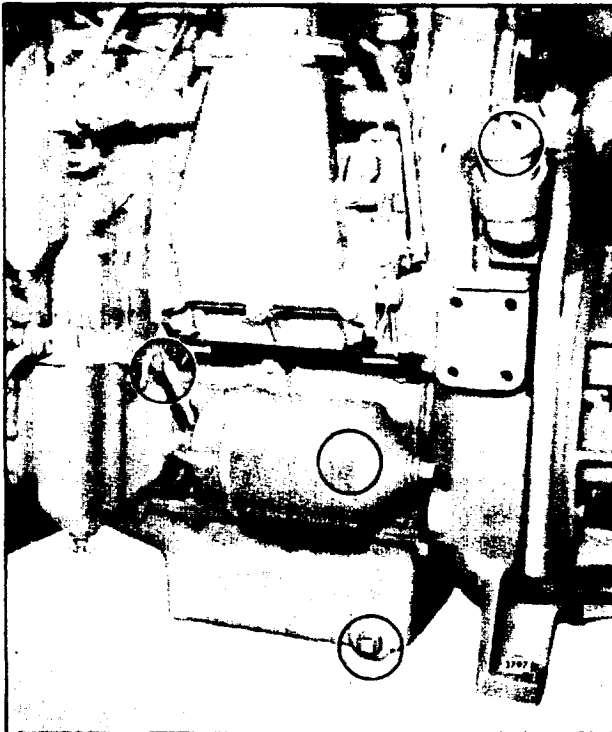

Items 1 and 2

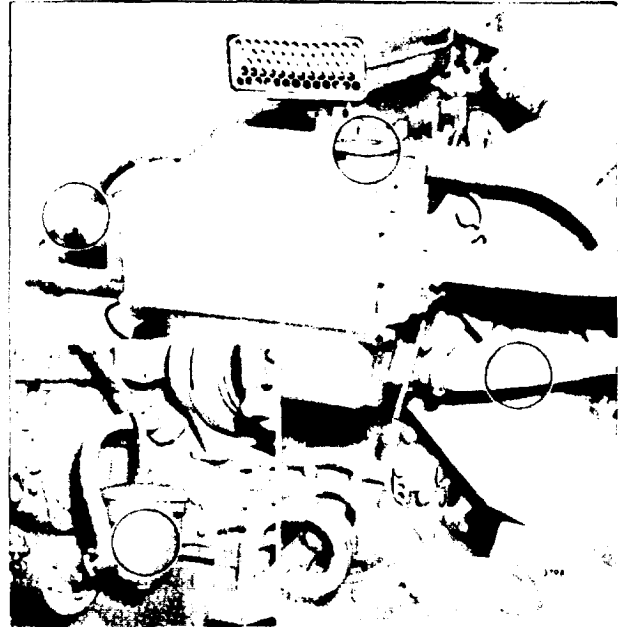**Items 3 and 4**

visual check of all lubricating oil lines for wear and chafing. If any indication of wear is evident, replace the oil lines and correct the cause.

When the engine is equipped with a turbocharger, pre-lubricate it as outlined under Install Turbocharger in Section 3.5.

If the engine is equipped with a governor oil filter, change the element every 1,000 hours.

**Item 3**

Check the coolant level daily and maintain it near the top of the heat exchanger tank or the radiator upper tank.


Clean the cooling system every 1,000 hours or 30,000 miles using a good radiator cleaning compound in accordance with the instructions on the container. After the cleaning operation, rinse the cooling system thoroughly with fresh water. Then fill the system with soft water, adding a good grade of rust inhibitor or a high boiling point type antifreeze (refer to Engine Coolant in Section 13.3). With the use of a proper antifreeze or rust inhibitor, this interval may be lengthened until, normally, this cleaning is done only in the spring or fall. The length of this interval will, however, depend upon an inspection for rust or other

deposits on the internal walls of the cooling system. When a thorough cleaning of the cooling system is required, it should be reverse-flushed.

If the cooling system is protected by a coolant filter and conditioner, the filter element should be changed every 500 hours or 15,000 miles.

#### Item 4

Inspect all of the cooling system hoses at least once every 500 hours or 15,000 miles for signs of deterioration. Replace the hoses if necessary.

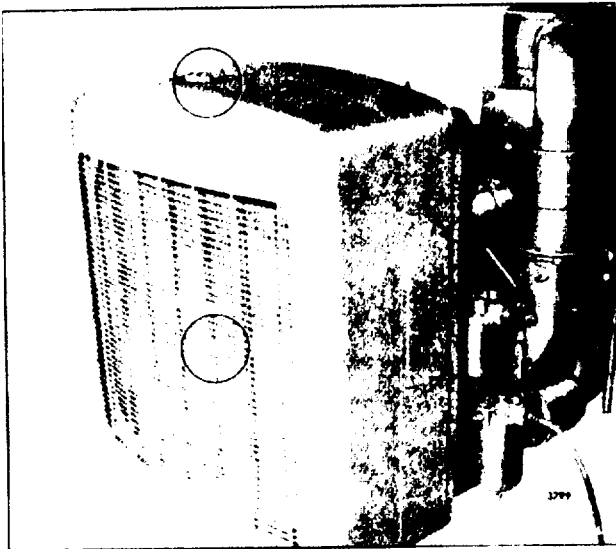


Item 5

#### Item 5

Inspect the exterior of the radiator core every 1,000 hours or 30,000 miles and, if necessary, clean it with a quality grease solvent such as Oleum and dry it with compressed air. Do not use fuel oil, kerosene or gasoline. It may be necessary to clean the radiator more frequently if the engine is being operated in extremely dusty or dirty areas.

#### Item 7

Check the prime on the raw water pump; the engine should not be operated with a dry pump. Prime the pump, if necessary, by removing the pipe plug provided in the pump inlet elbow and adding water. Reinstall the plug.

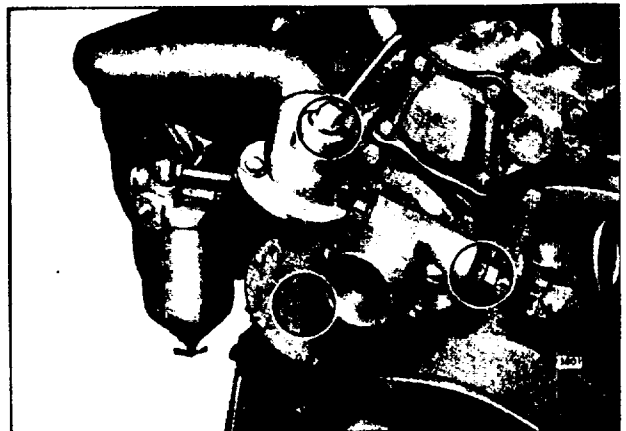

Item 7


**Item 8**

Keep the fuel tank filled to reduce condensation to a minimum. Select the proper grade of fuel in accordance with the Diesel Fuel Oil Specifications in Section 13.3. Open the drain at the bottom of the fuel tank every 500 hours or 15,000 miles to drain off any water or sediment.


**Item 9**

Install new elements every 300 hours or 9,000 miles or when plugging is indicated.

A method of determining when elements are plugged

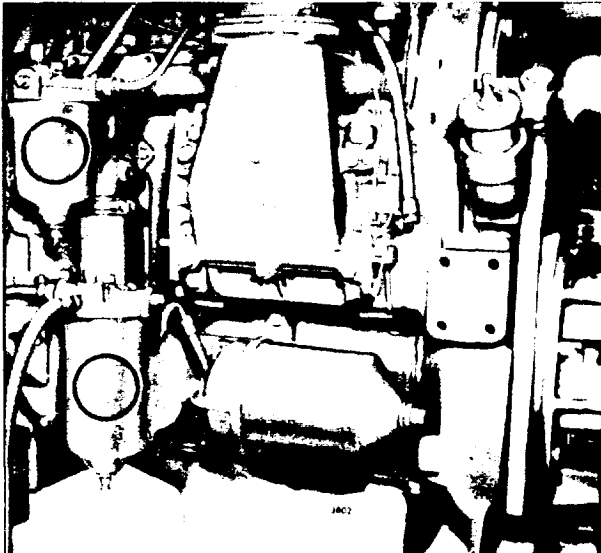

**Item 9**

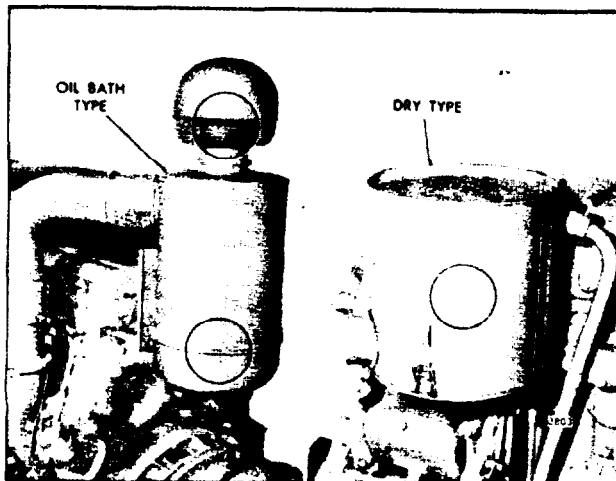

**Item 10**

to the extent that they should be changed is based on the fuel pressure at the cylinder head fuel inlet manifold and the inlet restriction at the fuel pump. In a clean system, the maximum pump inlet restriction must not exceed 6 inches of mercury. At normal operating speeds (1800-2800 rpm), the fuel pressure is 45 to 70 psi. Change the fuel filter elements whenever the inlet restriction (suction) at the fuel pump reaches 12 inches of mercury at normal operating speeds and whenever the fuel pressure at the inlet manifold falls to 45 psi.

**Item 10**


Remove the dirty oil and sludge from the oil bath type air cleaner cups and center tubes every 8 hours (every 6,000 miles for highway vehicle engines), or less if operating conditions warrant. Wash the cups and elements in clean fuel oil and refill the cups to the level mark with the same grade and viscosity heavy-duty oil as used in the engine. The frequency of servicing may be varied to suit local dust conditions.

It is recommended that the body and fixed element in the heavy-duty oil bath type air cleaner be serviced every 500 hours, 15,000 miles or as conditions warrant.


Clean or replace the element in the dry-type air cleaner when the restriction indicator instrument indicates high restriction or when a water manometer reading at the air inlet housing indicates the maximum allowable air inlet restriction (Section 13.2).

**Item 11**

With the engine running, check for flow of air from the air box drain tubes every 1,000 hours or 30,000 miles. If the tubes are clogged, remove, clean and reinstall the tubes. The air box drain tubes should be

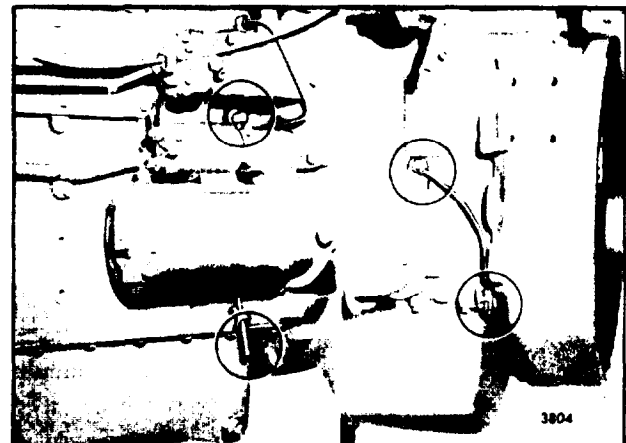

**Item 11**

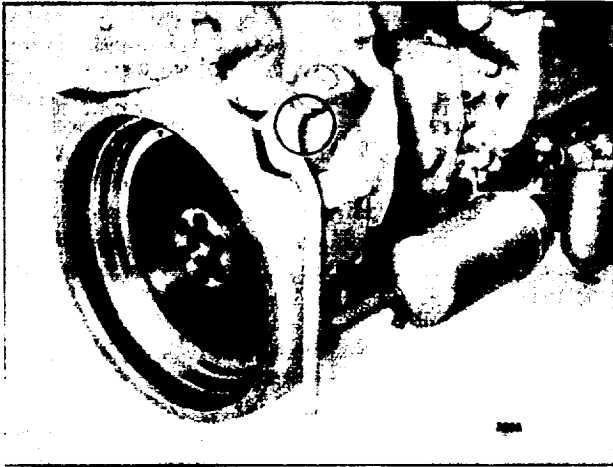

Item 12

Clean the breather cap, mounted on the valve rocker cover, in clean fuel oil every time the engine oil is changed (refer to Section 4.8).

**Item 13**

Inspect the blower screen and gasket assembly every 1,000 hours or 30,000 miles and, if necessary, clean the screen in fuel oil and dry it with compressed air. Reinstall the screen and gasket assembly with the screen side of the assembly toward the blower.

**Item 14**


The electrical starting motor is lubricated at the time of original assembly. Oil can be added to the oil wicks, which project through each bushing and contact the armature shaft, by removing the pipe plugs on the outside of the motor. The wicks should be lubricated whenever the starting motor is taken off the engine or disassembled.

The Sprag overrunning clutch drive mechanism should be lubricated with a few drops of light engine oil whenever the starting motor is overhauled.

**Item 15**

Lubricate the battery-charging generator (alternator) bearings or bushings with 5 or 6 drops of engine oil at the hinge cap oiler every 200 hours or 6,000 miles.

On early generators equipped with grease cups, turn the cups down one full turn every 100 hours or 3,000 miles of operation. Keep the grease cups filled with

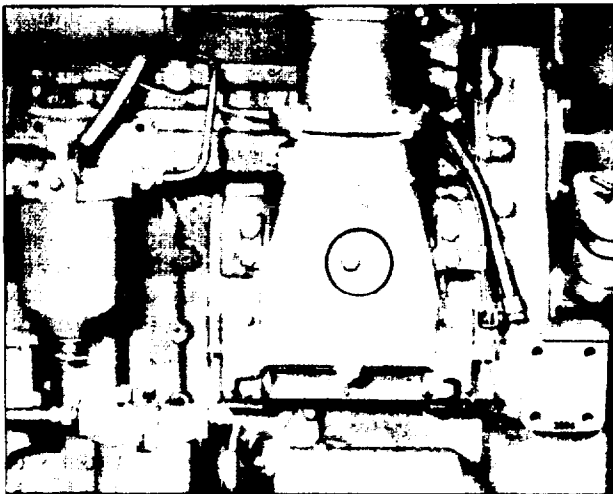


Item 13

cleaned periodically even though a clogged condition is not apparent. If the engine is equipped with an air box drain tank, drain the sediment periodically. If the engine is equipped with an air box drain check valve, replace the valve every 500 hours or 15,000 miles.

**Item 12**

Remove the externally mounted crankcase breather assembly every 1,000 hours or 30,000 miles and wash the steel mesh pad in clean fuel oil. This cleaning period may be reduced or lengthened according to severity of service (refer to Section 4.8).

Clean the internally mounted breather pads at time of engine overhaul, or sooner if excessive crankcase pressure is observed.

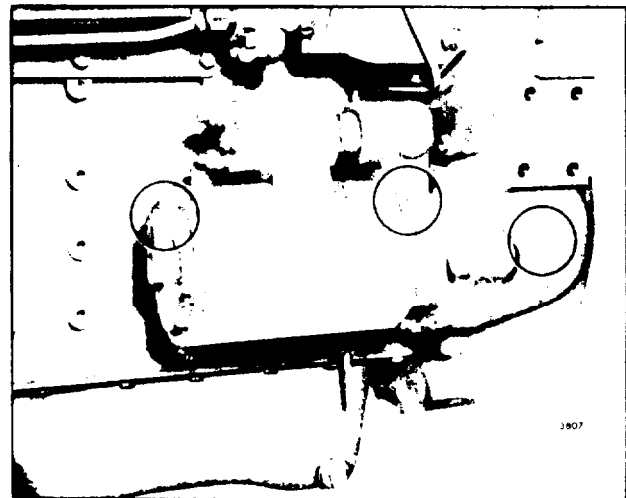

Item 14

**Item 15**

Delco-Remy Cam and Ball Bearing Lubricating, or equivalent. Avoid excessive lubrication since this may cause lubricant to be forced onto the commutator.

Some generators have a built-in supply of grease, while others use sealed bearings. In these latter two cases, additional lubrication is not necessary.

On D.C. generators, inspect the commutator and brushes every 500 hours or 15,000 miles. Clean the commutator every 2,000 hours or 60,000 miles, if necessary, with No. 00 sandpaper or a brush seating stone. After cleaning, reseal the brushes and blow out the dust.

On A.C. generators (alternators) the slip rings and brushes can be inspected through the end frame assembly. If the slip rings are dirty, they should be cleaned with 400 grain or finer polishing cloth. Never use emery cloth to clean slip rings. Hold the polishing cloth against the slip rings with the generator in operation and blow away all dust after the cleaning operation. If the slip rings are rough or out of round, replace them.

Inspect the terminals for corrosion and loose connections and the wiring for frayed insulation.

**Item 16**

Check the specific gravity of the electrolyte in each cell

of the battery every 100 hours or 3,000 miles. In warm weather, however, it should be checked more frequently due to a more rapid loss of water from the electrolyte. The electrolyte level should be maintained in accordance with the battery manufacturer's recommendations.



**Item 19**

There is no scheduled interval for performing an engine tune-up. As long as the engine performance is satisfactory, no tune-up should be needed. Minor adjustments in the valve and injector operating mechanisms, governor, etc. should only be required periodically to compensate for normal wear on parts.

**Item 20**

New standard V-belts will stretch after the first few hours of operation. Run the engine for 15 seconds to seat the belts, then retension them. Retighten new fan drive, pump drive, battery-charging generator and other accessory drive belts after 1/2 hour or 15 miles and again after 8 hours or 240 miles of operation. Thereafter, check the tension of the drive belts every 200 hours or 6,000 miles and adjust, if necessary. Too tight a belt is destructive to the bearings of the driven part; a loose belt will slip.

Replace all belts in a set when one is worn. Single belts of similar size should not be used as a substitute for a matched belt set; premature belt wear can result because of belt length variation. All belts in a matched belt set are within .032" of their specified center distances.


Adjust the belt tension so that a firm push with the thumb, at a point midway between the two pulleys, will depress the belt 1/2" to 3/4". If belt tension gage BT-33-73FA or equivalent is available, adjust the belt tension as outlined in the Chart.

Engine	Fan Drive		Generator Drive		
	2 or 3	Single	Two 3/8" or 1/2" Belts	One 1/2" Belt	One Wide Belt*
2, 3, 4-53 6, 8V-53	40-50 60-80	80 - 100	40-50 40-50	50-70 50-70	40-50 40-50
All	For 3-point or triangular drive use a tension of 90-120.				

\*Belt tension is 50-70 for a single premium high capacity belt (.785" wide) used to drive a 12 cfm air compressor

**BELT TENSION CHART (lbs/belt)**

**NOTE:** When installing or adjusting an accessory drive belt, be sure the bolt at the accessory adjusting pivot point is properly tightened, as well as the bolt in the adjusting slot.

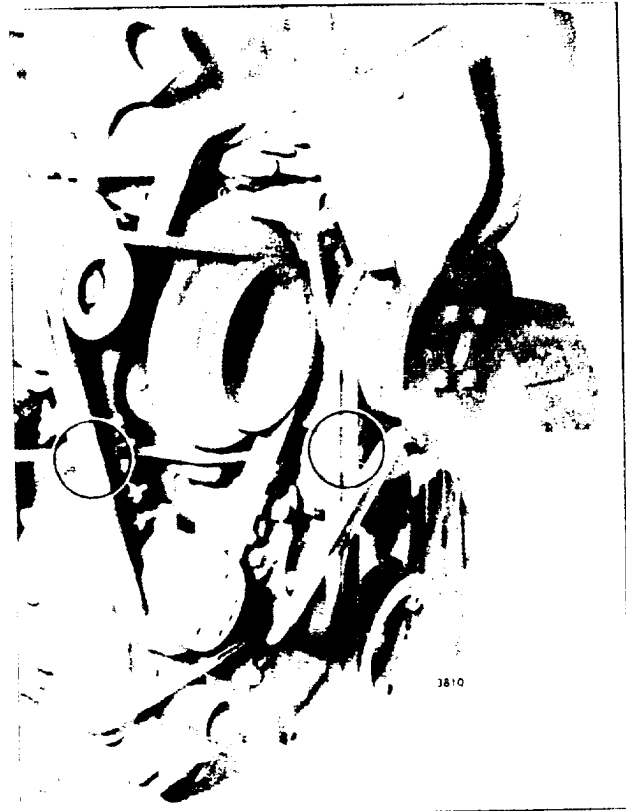

**Item 20**

**Item 22**

At a major engine overhaul, discard the bearings in the fan hub assembly used in radiator cooled engines. Pack the hub assembly, using new bearings, with Texaco Premium RB or an equivalent performance grease.

**Item 23**

Check the shut-down... every... ours  
or each month to be sure it will function properly.

**TROUBLE SHOOTING**

Certain abnormal conditions which sometimes interfere with satisfactory engine operation, together with methods of determining the cause of such conditions, are covered on the following pages.

Satisfactory engine operation depends primarily on.

1. An adequate supply of air compressed to a sufficiently high compression pressure.
2. The injection of the proper amount of fuel at the right time.

Lack of power, uneven running, excessive vibration, stalling at idle speed and hard starting may be caused by either low compression, faulty injection in one or more cylinders, or lack of sufficient air.

Since proper compression, fuel injection and the proper amount of air are important to good engine performance, detailed procedures for their investigation are given as follows:

**Locating a Misfiring Cylinder**

1. Start the engine and run it at part load until it reaches normal operating temperature.
2. Stop the engine and remove the valve rocker cover(s).
3. Check the valve clearance.
4. Start the engine. Then hold an injector follower down with a screw driver to prevent operation of the

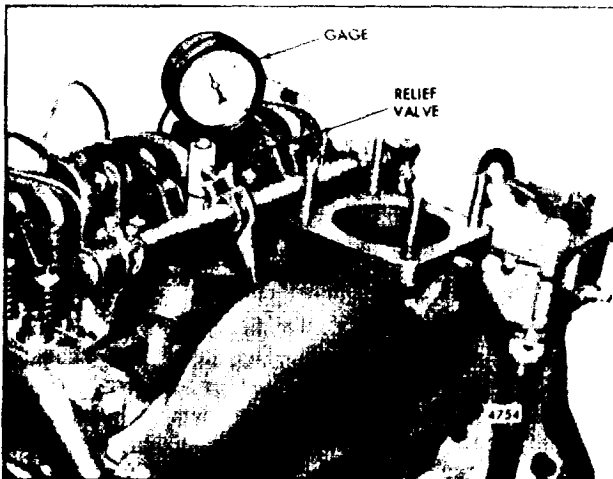


Fig. 1 - Checking Compression Pressure

injector. If the cylinder has been misfiring, there will be no noticeable difference in the sound and operation of the engine. If the cylinder has been firing properly, there will be a noticeable difference in the sound and operation when the injector follower is held down. This is similar to short-circuiting a spark plug in a gasoline engine.

5. If the cylinder is firing properly, repeat the procedure on the other cylinders until the faulty one has been located.
6. Provided the injector operating mechanism of the faulty cylinder is functioning satisfactorily, remove the fuel injector and install a new one.
7. If installation of a new injector does not eliminate the misfiring, check the compression pressure of the cylinder in question.

**Checking Compression Pressure**

Compression pressure is affected by altitude as shown in Table 1.

Check the compression pressure as follows:

1. Start the engine and run it at approximately one-half rated load until normal operating temperature is reached.

Minimum Compression Pressure (psi) at 600 rpm		Altitude, Feet Above Sea level
Std. Engine		
430		0
400		2,500
370		5,000
340		7,500
315		10,000

TABLE 1

2. Stop the engine and remove the fuel pipes from the injector and fuel connectors of the No. 1 cylinder.
3. Remove the injector and install adaptor J 7915-02 and pressure gage and hose assembly J 6992 (Fig. 1).
4. Use a spare fuel pipe to fabricate a jumper connection between the fuel inlet and return manifold connectors. This will permit fuel from the inlet manifold to flow directly to the return manifold.
5. Start the engine and run it at a 600 rpm. Observe

and record the compression pressure indicated on the page. Do not crank the engine with the starting motor to obtain the compression pressure.

6. Perform Steps 2 through 5 on each cylinder. The compression pressure in any one cylinder at a given altitude above sea level should not be less than the minimum shown in Table 1. In addition, the variation in compression pressures between cylinders must not exceed 25 psi at 600 rpm.

Low compression pressure may result from any one of several causes:

- A. Piston rings may be stuck or broken. To determine the condition of the rings, remove the air box cover and inspect them by pressing on the rings with a blunt tool. A broken or stuck ring will not have a "spring-like" action.
- B. Compression pressure may be leaking past the cylinder head gasket, the valve seats, the injector tube or a hole in the piston.

### Engine Out of Fuel

The problem in restarting an engine after it has run out of fuel stems from the fact that after the fuel is exhausted from the fuel tank, fuel is then pumped from the primary fuel strainer and sometimes partially removed from the secondary fuel filter before the fuel supply becomes insufficient to sustain engine firing. Consequently, these components must be refilled with

fuel and the fuel pipes rid of air in order for the system to provide adequate fuel for the injectors.

When an engine has run out of fuel, there is a definite procedure to follow for restarting it:

1. Fill the fuel tank with the recommended grade of fuel oil. If only partial filling of the tank is possible, add a minimum of ten gallons of fuel.
2. Remove the fuel strainer shell and element from the strainer cover and fill the shell with fuel oil. Install the shell and element.
3. Remove and fill the fuel filter shell and element with fuel oil as in Step 2.
4. Start the engine. Check the filter and strainer for leaks.

**NOTE:** In some instances, it may be necessary to remove a valve rocker cover and loosen a fuel pipe nut to bleed trapped air from the fuel system. Be sure the fuel pipe is retightened securely before replacing the rocker cover.

Primer J 5956 may be used to prime the entire fuel system. Remove the filler plug in the fuel filter cover and install the primer. Prime the system. Remove the primer and install the filler plug.

### Fuel Flow Test

The proper flow of fuel is required for satisfactory engine operation. Check the condition of the fuel pump, fuel strainer and fuel filter as outlined in Section 2.0 under Trouble Shooting.

### Crankcase Pressure

The crankcase pressure indicates the amount of air passing between the oil control rings and the cylinder liners into the crankcase, most of which is clean air from the air box. A slight pressure in the crankcase is desirable to prevent the entrance of dust. A loss of engine lubricating oil through the breather tube, crankcase ventilator or dipstick hole in the cylinder block is indicative of excessive crankcase pressure.

The causes of high crankcase pressure may be traced to excessive blow-by due to worn piston rings, a hole or crack in a piston crown, loose piston pin retainers, worn blower oil seals, defective blower, cylinder head or end plate gaskets, or excessive exhaust back pressure. Also, the breather tube or crankcase ventilator should be checked for obstructions.

Check the crankcase pressure with a manometer

connected to the oil level dipstick opening in the cylinder block. Check the readings obtained at various engine speeds with the Engine Operating Conditions in Section 13.2.

### Exhaust Back Pressure

A slight pressure in the exhaust system is normal. However, excessive exhaust back pressure seriously affects engine operation. It may cause an increase in the air box pressure with a resultant loss of efficiency of the blower. This means less air for scavenging which results in poor combustion and higher temperatures.

Causes of high exhaust back pressure are usually a result of an inadequate or improper type of muffler, an exhaust pipe which is too long or too small in diameter, an excessive number of sharp bends in the exhaust system, or obstructions such as excessive carbon formation or foreign matter in the exhaust system.

Check the exhaust back pressure, measured in inches of mercury, with a manometer. Connect the manometer to the exhaust manifold (except on turbocharged engines) by removing the 1/8 " pipe plug which is provided for that purpose. If no opening is provided, drill an 11/32 " hole in the exhaust manifold companion flange and tap the hole to accommodate a 1/8 " pipe plug.

Check the readings obtained at various speeds (at no-load) with the Engine Operating Conditions in Section 13.2.

## PROPER USE OF MANOMETER

The U-tube manometer is a primary measuring device indicating pressure or vacuum by the difference in the height of two columns of fluid.

Connect the manometer to the source of pressure, vacuum or differential pressure. When the pressure is imposed, add the number of inches one column of

### Air Box Pressure

Proper air box pressure is required to maintain sufficient air for combustion and scavenging of the burned gases. Low air box pressure is caused by a high air inlet restriction, damaged blower rotors, an air leak from the air box (such as leaking end plate gaskets) or a clogged blower air inlet screen. Lack of power or black or grey exhaust smoke are indications of low air box pressure.

High air box pressure can be caused by partially plugged cylinder liner ports.

Check the air box pressure with a manometer connected to an air box drain tube.

Check the readings obtained at various speeds with the Engine Operating Conditions in Section 13.2.

### Air Inlet Restriction

Excessive restriction of the air inlet will affect the flow of air to the cylinders and result in poor combustion and lack of power. Consequently the restriction must be kept as low as possible considering the size and capacity of the air cleaner. An obstruction in the air inlet system or dirty or damaged air cleaners will result in a high blower inlet restriction.

Check the air inlet restriction with a water manometer connected to a fitting in the air inlet ducting located 2 " above the air inlet housing. When practicability prevents the insertion of a fitting at this point, the manometer may be connected to the engine air inlet housing. The restriction at this point should be checked at a specific engine speed. Then the air cleaner and ducting should be removed from the air inlet housing and the engine again operated at the same speed while noting the manometer reading.

The difference between the two readings, with and without the air cleaner and ducting, is the actual restriction caused by the air cleaner and ducting.

Check the normal air inlet vacuum at various speeds (at no-load) and compare the results with the Engine Operating Conditions in Section 13.2.

fluid travels up to the amount the other column travels down to obtain the pressure (or vacuum) reading.

The height of a column of mercury is read differently than that of a column of water. Mercury does not wet the inside surface; therefore, the top of the column has a convex meniscus (shape). Water wets the surface

PRESSURE CONVERSION CHART		
1" water	=	.0735" mercury
1" water	=	.0361 psi
1" mercury	=	.4919 psi
1" mercury	=	13.6000" water
1 psi	=	27.7000" water
1 psi	=	2.0360" mercury

TABLE 3

and therefore has a concave meniscus. A mercury column is read by sighting horizontally between the top of the convex mercury surface (Fig. 2) and the scale. A water manometer is read by sighting horizontally between the bottom of the concave water surface and the scale.

Should one column of fluid travel further than the other column, due to minor variations in the inside diameter of the tube or to the pressure imposed, the accuracy of the reading obtained is not impaired.



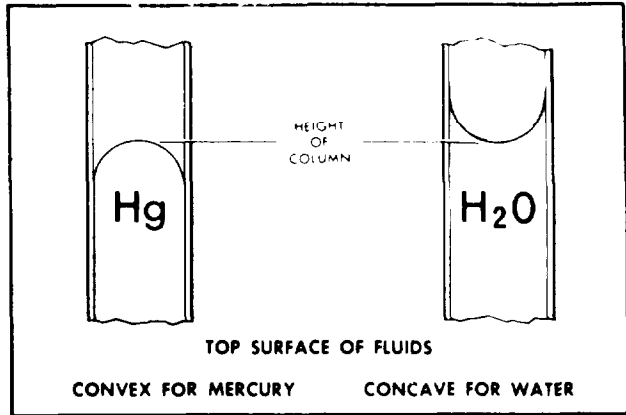


Fig. 2 - Comparison of Column Height for Mercury and Water Manometers

Refer to Table 3 to convert the manometer reading into other units of measurement.

Chart 1

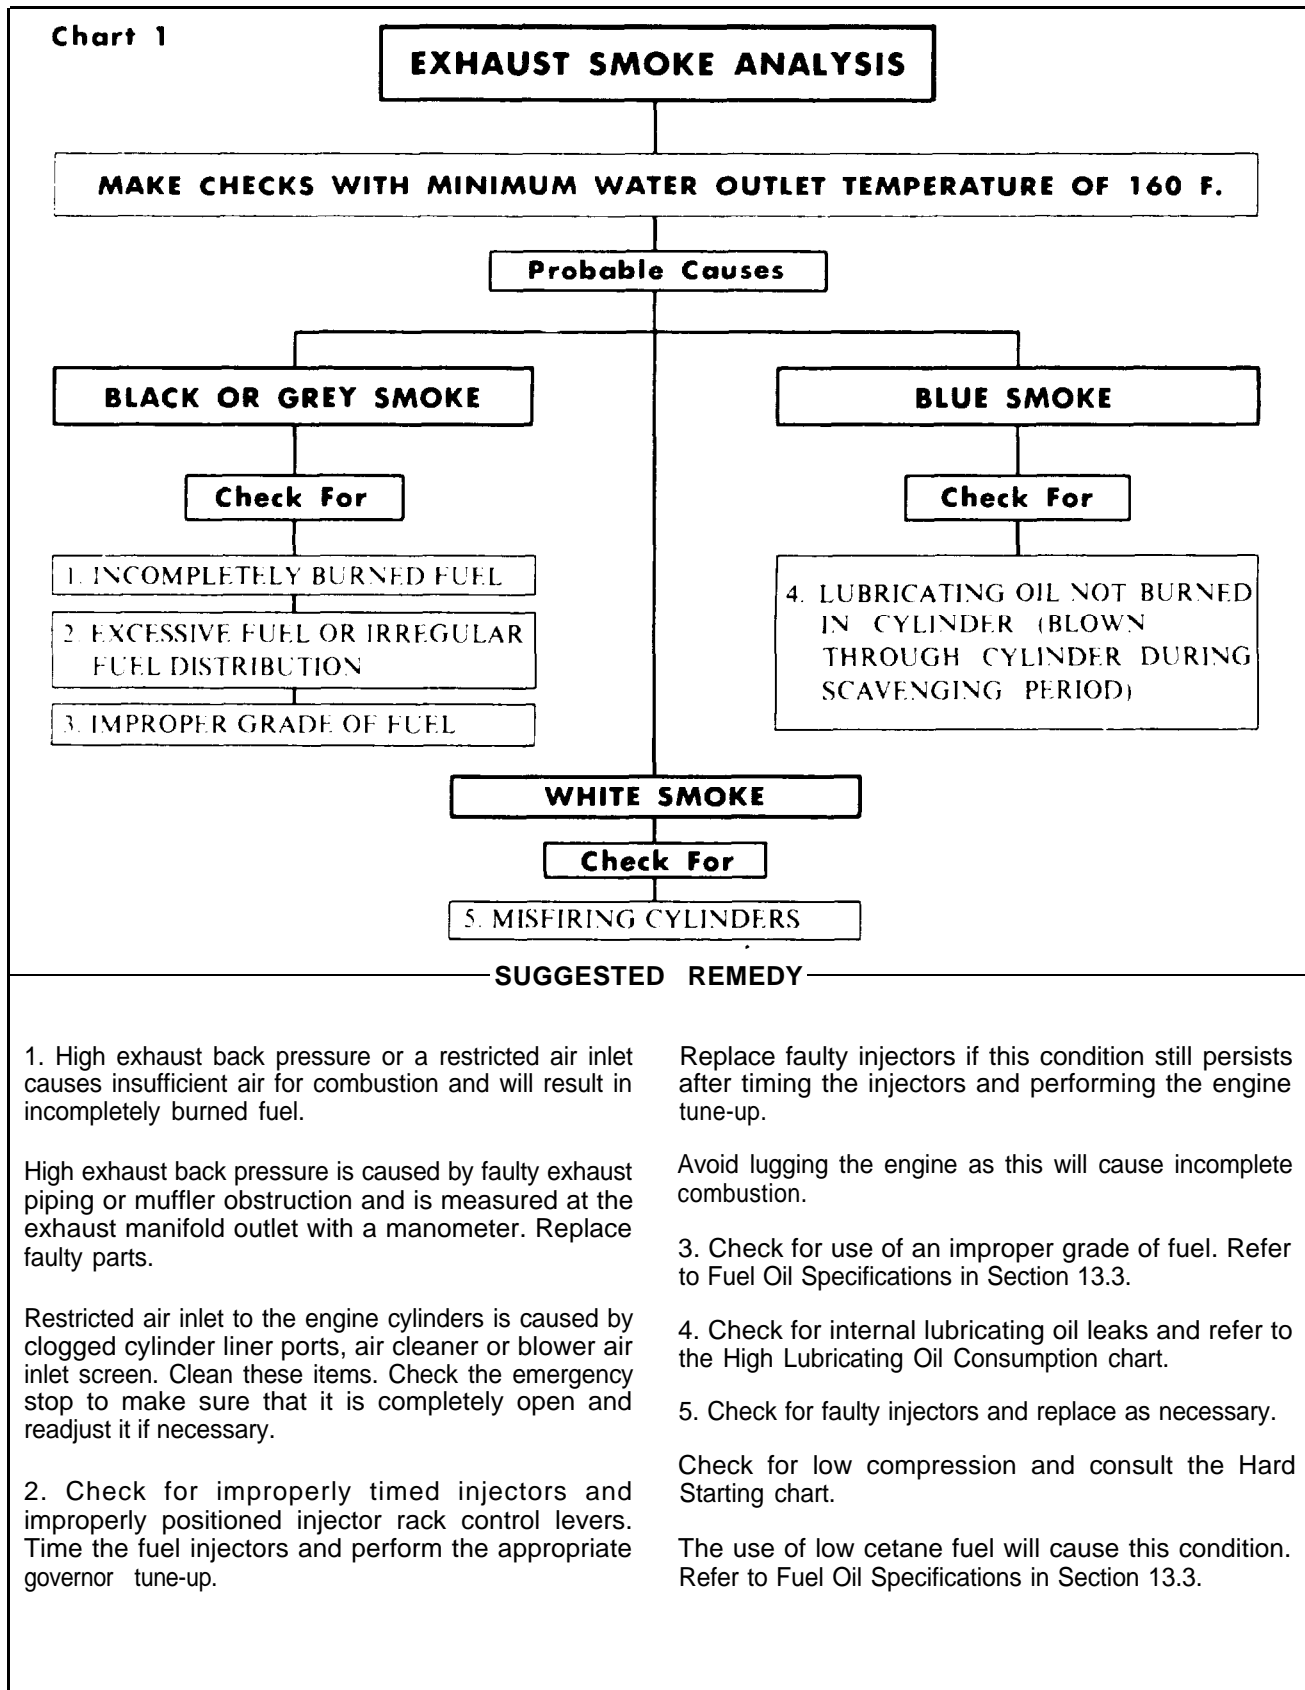

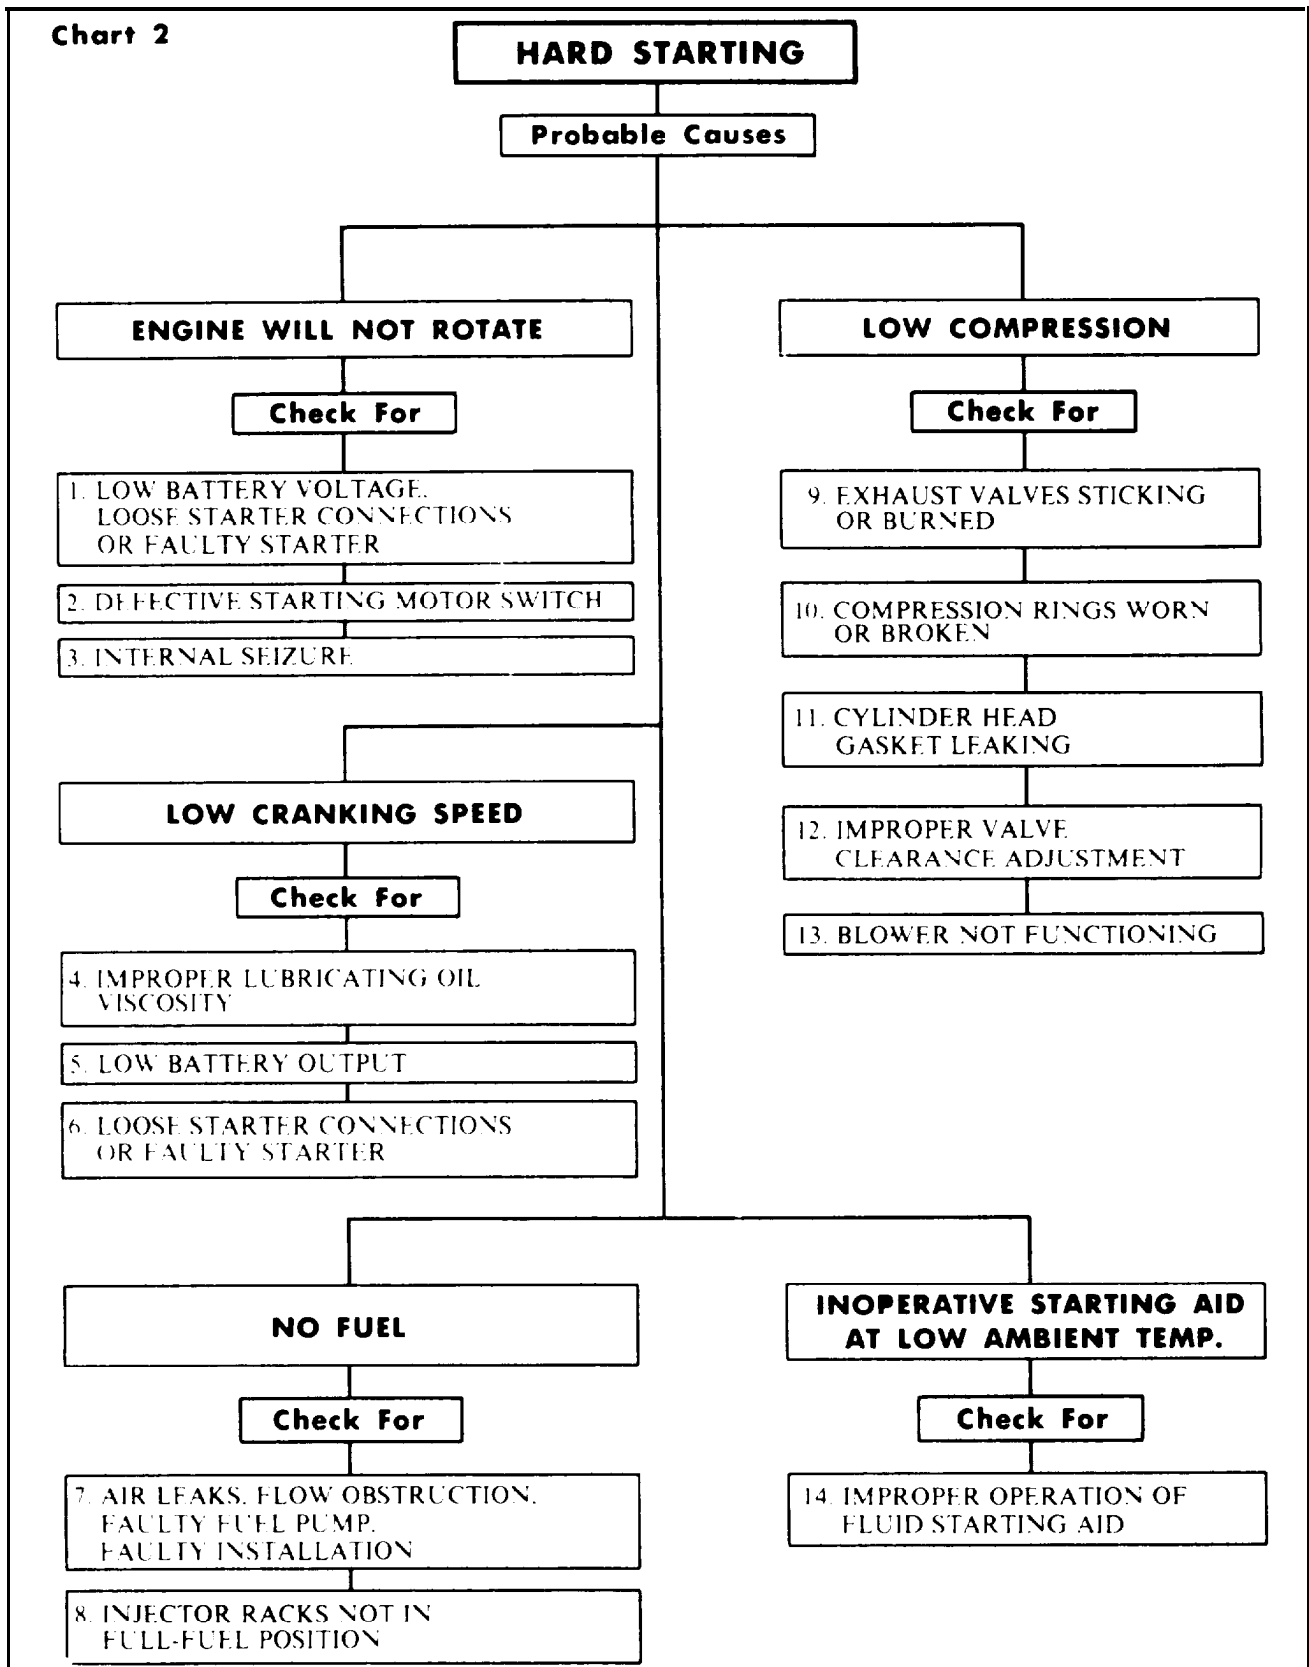

**Chart 2****HARD STARTING****SUGGESTED REMEDY**

1. Refer to Items 2, 3 and 5 and perform the operations listed.

2. Replace the starting motor switch.

3. Hand crank the engine at least one complete revolution. If the engine cannot be rotated a complete revolution, internal damage is indicated and the engine must be disassembled to ascertain the extent of damage and the cause.

4. Refer to Lubricating Oil Specifications in Section 13.3 for the recommended grade of oil.

5. Recharge the battery if a light load test indicates low or no voltage. Replace the battery if it is damaged or will not hold a charge.

Replace terminals that are damaged or corroded.

At low ambient temperatures, use of a starting aid will keep the battery fully charged by reducing the cranking time.

6. Tighten the starter connections. Inspect the starter commutator and brushes for wear. Replace the brushes if badly worn and overhaul the starting motor if the commutator is damaged.

7. To check for air leaks, flow obstruction, faulty fuel

pump or faulty installation, consult the No Fuel or Insufficient Fuel chart.

8. Check for bind in the governor-to-injector linkage. Readjust the governor and injector controls if necessary.

9. Remove the cylinder head and recondition the exhaust valves.

10. Remove the air box covers and inspect the compression rings through the ports in the cylinder liners. Overhaul the cylinder assemblies if the rings are badly worn or broken.

11. To check for compression gasket leakage, remove the coolant filler cap and operate the engine. A steady flow of gases from the coolant filler indicates either a cylinder head gasket is damaged or the cylinder head is cracked. Remove the cylinder head and replace the gaskets or cylinder head.

12. Adjust the exhaust valve clearance.

13. Inspect the blower drive shaft and drive coupling. Replace damaged parts.

14. Operate the starting aid according to the instructions under Cold Weather Starting Aids.



Chart 3

**ABNORMAL ENGINE OPERATION**

**Probable Causes**

**UNEVEN RUNNING OR FREQUENT STALLING**

**Check For**

- 1. LOW COOLANT TEMPERATURE
- 2. INSUFFICIENT FUEL
- 3. FAULTY INJECTORS
- 4. LOW COMPRESSION PRESSURES
- 5. GOVERNOR INSTABILITY (HUNTING)

**LACK OF POWER**

**Check For**

- 6. IMPROPER ENGINE ADJUSTMENTS (TUNE-UP) AND GEAR TRAIN TIMING
- 7. INSUFFICIENT FUEL
- 8. INSUFFICIENT AIR
- 9. ENGINE APPLICATION
- 10. HIGH RETURN FUEL TEMPERATURE
- 11. HIGH AMBIENT AIR TEMPERATURE
- 12. HIGH ALTITUDE OPERATION

**DETONATION**

**Check For**

- 13. OIL PICKED UP BY AIR STREAM
- 14. LOW COOLANT TEMPERATURE
- 15. FAULTY INJECTORS

**Chart 3****ABNORMAL ENGINE OPERATION****SUGGESTED REMEDY**

1. Check the engine coolant temperature gage and, if the temperature does not reach 160 ° to 185 °F. while the engine is operating, consult the Abnormal Engine Coolant Temperature chart.

2. Check engine fuel spill back and if the return is less than specified. consult the No Fuel or Insufficient Fuel chart.

3. Check the injector timing and the position of the injector racks. If the engine was not tuned correctly, perform an engine tune-up. Erratic engine operation may also be caused by leaking injector spray tips. Replace the faulty injectors.

4. Check the compression pressures within the cylinders and consult the Hard Starting chart if compression pressures are low.

5. Erratic engine operation may be caused by governor-to-injector operating linkage bind or by faulty engine tune-up. Perform the appropriate engine tune-up procedure as outlined for the particular governor used.

6. Perform an engine tune-up if performance is not satisfactory.

Check the engine gear train timing. An improperly timed gear train will result in a loss of power due to the valves and injectors being actuated at the wrong time in the engine's operating cycle.

7. Perform a Fuel Flow Test and, if less than the specified fuel is returning to the fuel tank, consult the No Fuel or Insufficient Fuel chart.

8. Check for damaged or dirty air cleaners and clean, repair or replace damaged parts.

Remove the air box covers and inspect the cylinder liner ports. Clean the ports if they are over 50% plugged.

Check for blower air intake obstruction or high

exhaust back pressure. Clean, repair or replace faulty parts.

Check the compression pressures (consult the Hard Starting chart).

9. Incorrect operation of the engine may result in excessive loads on the engine. Operate the engine according to the approved procedures.

10. Refer to Item 13 on Chart 4.

11. Check the ambient air temperature. A power decrease of .15 to 50 horsepower per cylinder, depending upon injector size, for each 10 °F. temperature rise above 90 °F. will occur. Relocate the engine air intake to provide a cooler source of air.

12. Engines lose horsepower with increase in altitude. The percentage of power loss is governed by the altitude at which the engine is operating.

13. Fill oil bath air cleaners to the proper level with the same grade and viscosity lubricating oil that is used in the engine.


Clean the air box and drain tubes to prevent accumulations that may be picked up by the air stream and enter the engine's cylinders.

Inspect the blower oil seals by removing the air inlet housing and watching through the blower inlet for oil radiating away from the blower rotor shaft oil seals while the engine is running. If oil is passing through the seals, overhaul the blower.

Check for a defective blower-to-block gasket. Replace the gasket, if necessary.

14. Refer to Item 1 of this chart.

15. Check injector timing and the position of each injector rack. Perform an engine tune-up, if necessary. If the engine is correctly tuned, the erratic operation may be caused by an injector check valve leaking, spray tip holes enlarged or a broken spray tip. Replace faulty injectors.

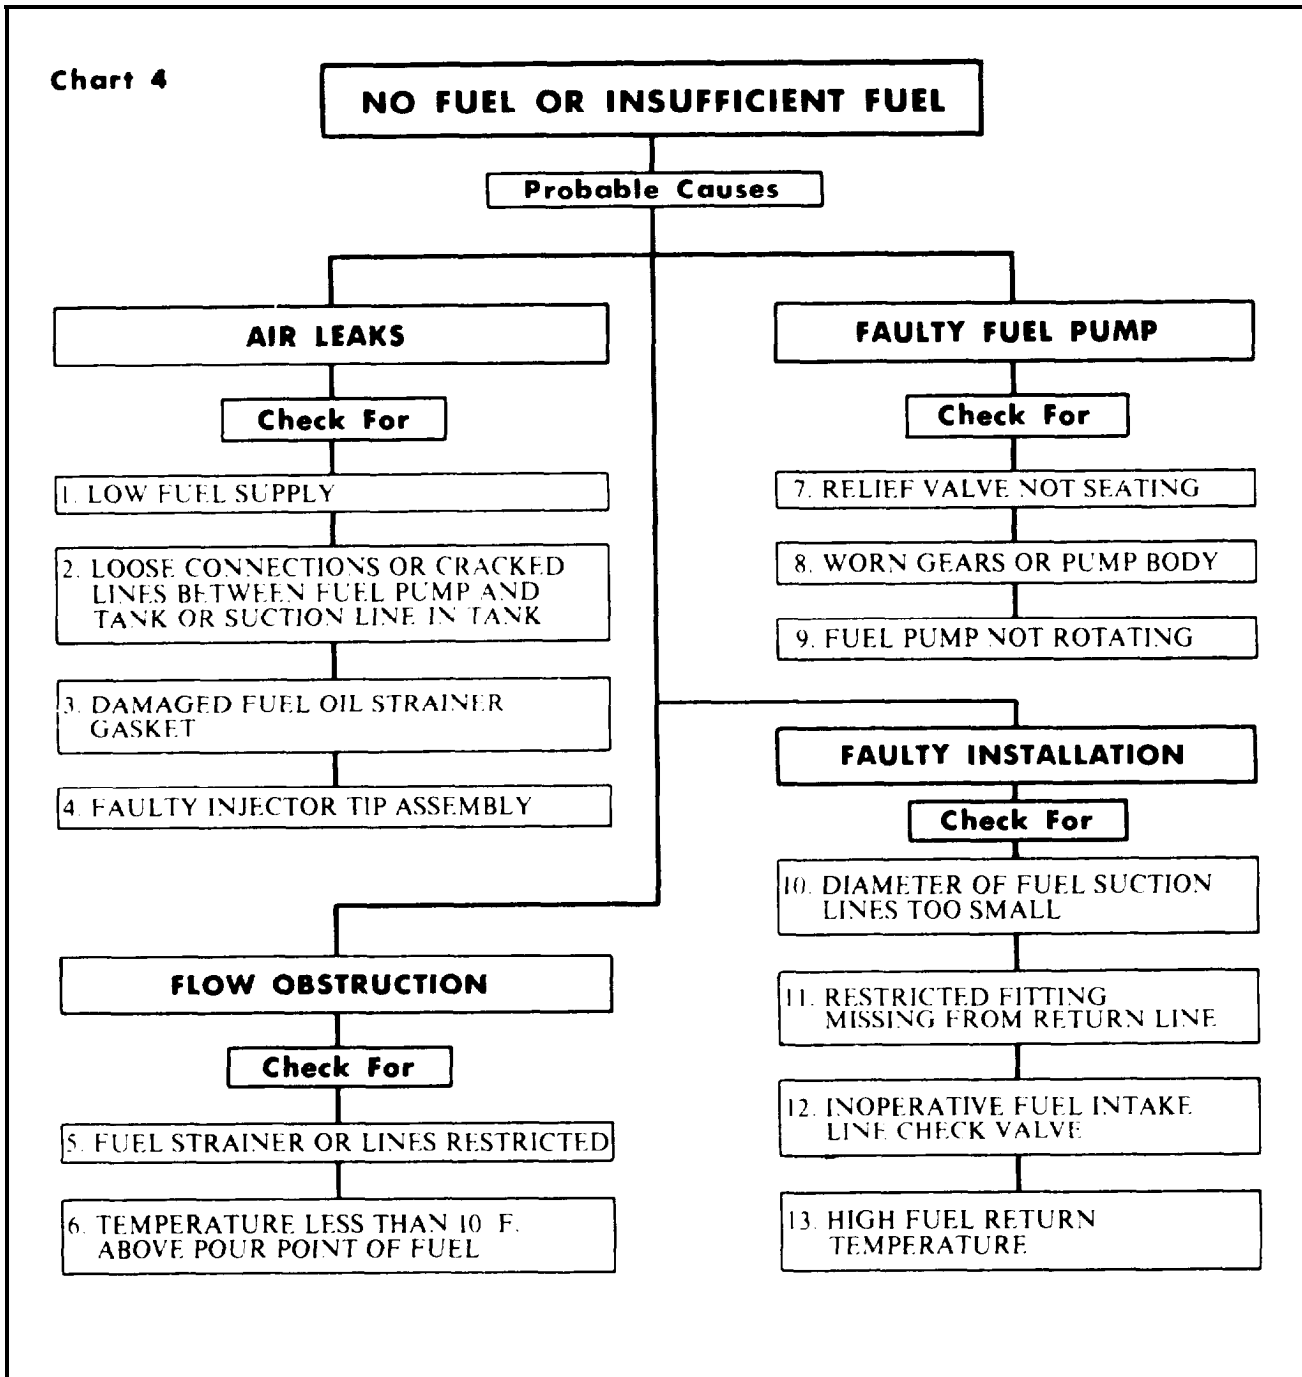

**Chart 4****NO FUEL OR INSUFFICIENT FUEL****SUGGESTED REMEDY**


- 
1. The fuel tank should be filled above the level of the fuel suction tube.
  2. Perform a Fuel Flow Test and, if air is present, tighten loose connections and replace cracked lines.
  3. Perform a Fuel Flow Test and, if air is present, replace the fuel strainer gasket when changing the strainer element.
  4. Perform a Fuel Flow Test and, if air is present with all fuel lines and connections assembled correctly, check for and replace faulty injectors.
  5. Perform a Fuel Flow Test and replace the fuel strainer and filter elements and the fuel lines, if necessary.
  6. Consult the Fuel Oil Specifications for the recommended grade of fuel.
  7. Perform a Fuel Flow Test and, if inadequate, clean and inspect the valve seat assembly.
  8. Replace the gear and shaft assembly or the pump body.
  9. Check the condition of the fuel pump drive and blower drive and replace defective parts.
  10. Replace with larger tank-to-engine fuel lines.
  11. Install a restricted fitting in the return line.
  12. Make sure that the check valve is installed in the line correctly; the arrow should be on top of the valve assembly or pointing upward. Reposition the valve if necessary. If the valve is inoperative, replace it with a new valve assembly.
  13. Check the engine fuel spill-back temperature. The return fuel temperature must be less than 150 °F. or a loss in horsepower will occur. This condition may be corrected by installing larger fuel lines or relocating the fuel tank to a cooler position.

Chart 5

**HIGH LUBRICATING OIL CONSUMPTION**

**Probable Causes**

**EXTERNAL LEAKS**

**Check For**

- 1. OIL LINES OR CONNECTIONS LEAKING
- 2. GASKET OR OIL SEAL LEAKS
- 3. HIGH CRANKCASE PRESSURE
- 4. EXCESSIVE OIL IN AIR BOX

**INTERNAL LEAKS**

**Check For**

- 5. BLOWER OIL SEAL LEAKING
- 6. OIL COOLER CORE LEAKING

**OIL CONTROL AT CYLINDER**

**Check For**


- 7. OIL CONTROL RINGS WORN, BROKEN OR IMPROPERLY INSTALLED
- 8. PISTON PIN RETAINER LOOSE
- 9. SCORED LINERS, PISTONS OR OIL RINGS
- 10. PISTON AND ROD ALIGNMENT
- 11. EXCESSIVE INSTALLATION ANGLE
- 12. EXCESSIVE OIL IN CRANKCASE

**SUGGESTED REMEDY**

- 1. Tighten connections or replace defective parts.
- 2. Replace defective gaskets or oil seats.
- 3. Refer to the Excessive Crankcase Pressure chart.
- 4. Refer to the Abnormal Engine Operation chart.
- 5. Remove the air inlet housing and inspect the blower end plates while the engine is operating. If oil is seen on the end plate radiating away from the oil seal, overhaul the blower.
- 6. Inspect the engine coolant for lubricating oil

- contamination; if contaminated, replace the oil cooler core. Then use a good grade of cooling system cleaner to remove the oil from the cooling system.
- 7. Replace the oil control rings.
- 8. Replace the piston pin retainer and defective parts.
- 9. Remove and replace the defective parts.
- 10. Check the crankshaft thrust washers for wear. Replace worn and defective parts.
- 11. Decrease the installation angle.
- 12. Fill the crankcase to the proper level only.

Chart 6

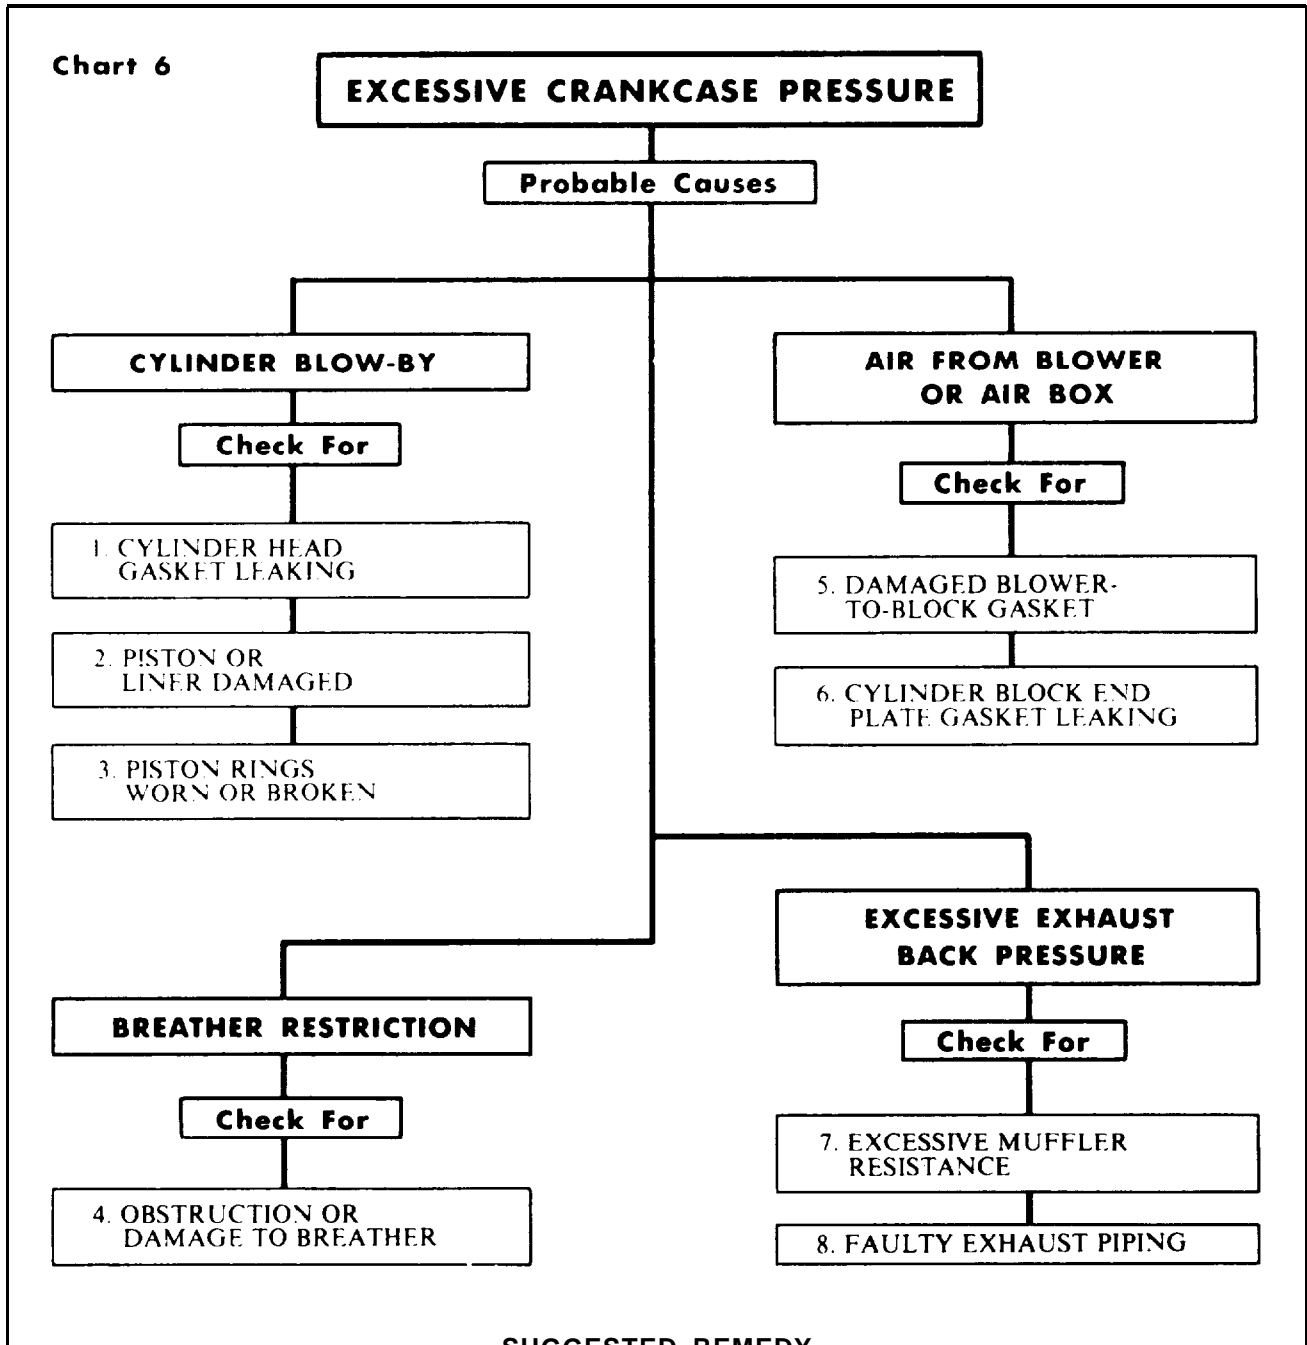

**SUGGESTED REMEDY**

- 1. Check the compression pressure and, if only one cylinder has low compression, remove the cylinder head and replace the head gaskets.
- 2. Inspect the piston and liner and replace damaged parts.
- 3. Install new piston rings.
- 4. Clean and repair or replace the breather assembly.

- 5. Replace the blower-to-block gasket.
- 6. Replace the end plate gasket.
- 7. Check the exhaust back pressure and repair or replace the muffler if an obstruction is found.
- 8. Check the exhaust back pressure and install larger piping if it is determined that the piping is too small too long or has too many bends.

Chart 7

**LOW OIL PRESSURE**

**MAKE CHECKS WITH MINIMUM WATER OUTLET TEMPERATURE OF 160 F.**

**Probable Causes**

**LUBRICATING OIL**

**Check For**

1. SUCTION LOSS

2. LUBRICATING OIL VISCOSITY

**PRESSURE GAGE**

**Check For**

8. FAULTY GAGE

9. GAGE LINE OBSTRUCTED

10. GAGE ORIFICE PLUGGED

11. ELECTRICAL INSTRUMENT  
PANEL SENDING UNITS FAULTY

**POOR CIRCULATION**

**Check For**

3. COOLER CLOGGED

4. COOLER BY-PASS VALVE NOT  
FUNCTIONING PROPERLY

5. PRESSURE REGULATOR  
VALVE NOT  
FUNCTIONING PROPERLY

6. EXCESSIVE WEAR ON  
CRANKSHAFT BEARINGS

7. GALLERY, CRANKSHAFT OR  
CAMSHAFT PLUGS MISSING

**OIL PUMP**

**Check For**

12. INTAKE SCREEN PARTIALLY  
CLOGGED

13. RELIEF VALVE FAULTY

14. AIR LEAK IN PUMP SUCTION

15. PUMP WORN OR DAMAGED

16. FLANGE LEAK (PRESSURE SIDE)

## Chart 7

## LOW OIL PRESSURE

## SUGGESTED REMEDY

1. Check the oil and bring it to the proper level on the dipstick or correct the installation angle.

2. Consult the *Lubricating Oil Specifications* in Section 13.3 for the recommended grade and viscosity of oil.

Check for fuel leaks at the injector nut seal ring and fuel pipe connections. Leaks at these points will cause lubricating oil dilution.

3. A plugged oil cooler is indicated by excessively high lubricating oil temperature. Remove and clean the oil cooler core.

4. Remove the by-pass valve and clean the valve and valve seat and inspect the valve spring. Replace defective parts.

5. Remove the pressure regulator valve and clean the valve and valve seat and inspect the valve spring. Replace defective parts.

6. Change the bearings. Consult the *Lubricating Oil Specifications* in Section 13.3 for the proper grade and viscosity of oil. Change the oil filters.

7. Replace missing plugs.

8. Check the oil pressure with a reliable gage and replace the gage if found faulty.

9. Remove and clean the gage line; replace it, if necessary.

10. Remove and clean the gage orifice.

11. Repair or replace defective electrical equipment.

12. Remove and clean the oil pan and oil intake screen. Consult the *Lubricating Oil Specifications* in Section 13.3 for the proper grade and viscosity of oil. Change the oil filters.

13. Remove and inspect the valve, valve bore and spring. Replace faulty parts.


14. Disassemble the piping and install new gaskets.

15. Remove the pump. Clean and replace defective parts.

16. Remove the flange and replace the gasket.



Chart 8

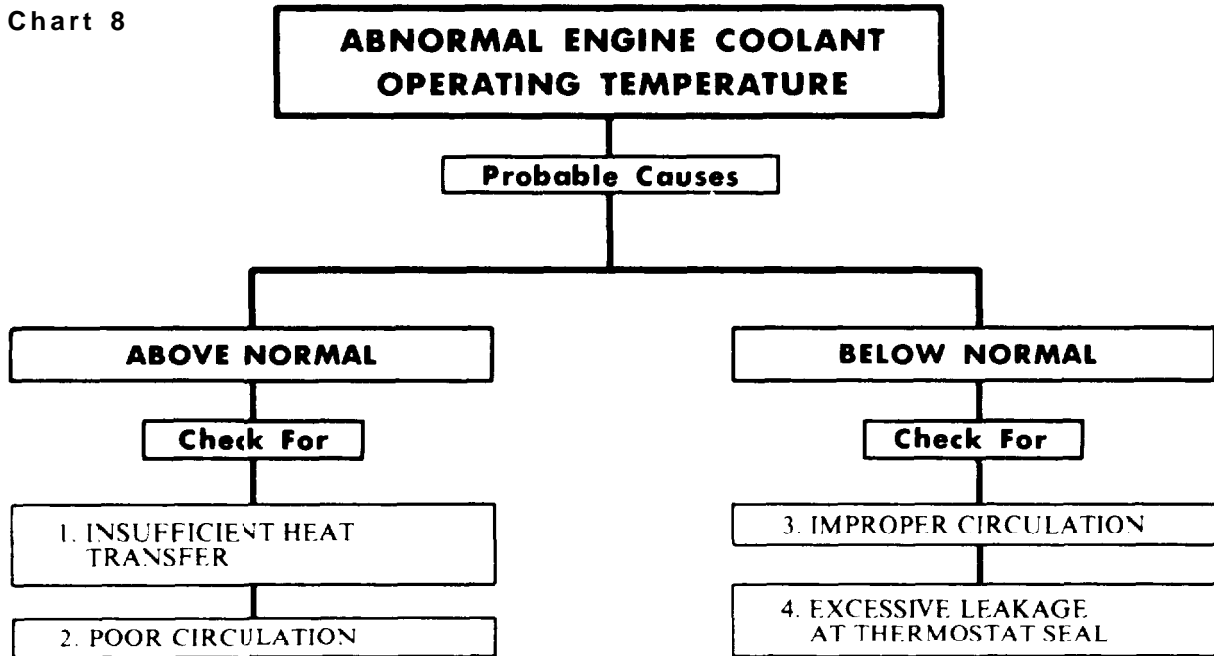

**SUGGESTED REMEDY**

1. Clean the cooling system with a good cooling system cleaner and thoroughly flush to remove scale deposits.

Clean the exterior of the radiator core to open plugged passages and permit normal air flow.

Adjust fan belts to the proper tension to prevent slippage.

Check for an improper size radiator or inadequate shrouding.

Repair or replace inoperative temperature-controlled fan or inoperative shutters.

2. Check the coolant level and fill to the filler neck if the coolant level is low.

Inspect for collapsed or disintegrated hoses. Replace faulty hoses.

Thermostat may be inoperative. Remove, inspect and test the thermostat; replace if found faulty.

Check the water pump for a loose or damaged impeller.

Check the flow of coolant through the radiator. A clogged radiator will cause an inadequate supply of coolant on the suction side of the pump. Clean the radiator core.

Remove the coolant filler cap and operate the engine, checking for combustion gases in the cooling system. The cylinder head must be removed and inspected for cracks and the head gaskets replaced if combustion gases are entering the cooling system.

Check for an air leak on the suction side of the water pump. Replace defective parts.

3. The thermostat may not be closing. Remove, inspect and test the thermostat. Install a new thermostat, if necessary.

Check for an improperly installed heater.

4. Excessive leakage of coolant past the thermostat seal(s) is a cause of continued low coolant operating temperature. When this occurs, replace the thermostat seal(s).

## STORAGE

### PREPARING ENGINE FOR STORAGE

When an engine is to be stored or removed from operation for a period of time, special precautions should be taken to protect the interior and exterior of the engine, transmission and other parts from rust accumulation and corrosion. The parts requiring attention and the recommended preparations are given below.

It will be necessary to remove all rust or corrosion

completely from any exposed part before applying a rust preventive compound. Therefore, it is recommended that the engine be processed for storage as soon as possible after removal from operation.

The engine should be stored in a building which is dry and can be heated during the winter months. Moisture absorbing chemicals are available commercially for use when excessive dampness prevails in the storage area.

### TEMPORARY STORAGE (30 days or less)

To protect an engine for a temporary period of time, proceed as follows:

1. Drain the engine crankcase.
2. Fill the crankcase to the proper level with the recommended viscosity and grade of oil.
3. Fill the fuel tank with the recommended grade of fuel oil. Operate the engine for two minutes at 1200 rpm and no load.

**NOTE:** Do not drain the fuel system or the crankcase after this run.

4. Check the air cleaner and service it, if necessary, as outlined in Section 3.1.
5. If freezing weather is expected during the storage

period, add a high boiling point type antifreeze solution in accordance with the manufacturer's recommendations. Drain the raw water system and leave the drain cocks open.

6. Clean the entire exterior of the engine (except the electrical system) with fuel oil and dry it with compressed air.

7. Seal all of the engine openings. The material used for this purpose must be waterproof, vaporproof and possess sufficient physical strength to resist puncture and damage from the expansion of entrapped air.

An engine prepared in this manner can be returned to service in a short time by removing the seals at the engine openings, checking the engine coolant, fuel oil, lubricating oil, transmission, and priming the raw water pump, if used.

### EXTENDED STORAGE (30 days or more)

When an engine is to be removed from operation for an extended period of time, prepare it as follows:

1. Drain and thoroughly flush the cooling system with clean, soft water.
2. Refill the cooling system with clean, soft water.
3. Add a rust inhibitor to the cooling system (refer to *Corrosion Inhibitors* in Section 13.3).
4. Remove, check and recondition the injectors, if necessary, to make sure they will be ready to operate when the engine is restored to service.
5. Reinstall the injectors in the engine, time them, and adjust the exhaust valve clearance.

6. Circulate the coolant through the entire system by operating the engine until normal operating temperature is reached ( 160 °F. to 185 °F.).

7. Stop the engine.

8. Remove the drain plug and completely drain the engine crankcase. Reinstall and tighten the drain plug. Install new lubricating oil filter elements and gaskets.

9. Fill the crankcase to the proper level with a 30-weight preservative lubricating oil MIL-L-21260, Grade 2(P10), or equivalent.

10. Drain the engine fuel tank.

11. Refill the fuel tank with enough rust preventive

fuel oil such as American Oil Diesel Run-In Fuel (LF-4089), Mobil 4Y17, or equivalent, to enable the engine to operate 10 minutes.

12. Drain the fuel filter and strainer. Remove the retaining bolts, shells and elements. Discard the used elements and gaskets. Wash the shells in clean fuel oil and insert new elements. Fill the cavity between the element and shell about two-thirds full of the same rust preventive compound as used in the fuel tank and reinstall the shell.

13. Operate the engine for 5 minutes to circulate the rust preventive throughout the engine.

14. Refer to Section 3.1 and service the air cleaner

**PROCEDURE FOR RESTORING AN ENGINE TO SERVICE WHICH HAS BEEN  
IN EXTENDED STORAGE**

1. Remove the valve rocker cover(s) and pour at least one-half gallon of oil, of the same grade as used in the crankcase, over the rocker arms and push rods.
2. Reinstall the valve rocker cover(s).
3. Remove the covers and tape from all of the openings of the engine, fuel tank and electrical equipment. *Do not overlook the exhaust outlet.*
4. Wash the exterior of the engine with fuel oil to remove the rust preventive.
5. Remove the rust preventive from the flywheel
6. Remove the paper strips from between the pulleys and the belts.
7. Check the crankcase oil level. Fill the crankcase to the proper level with the heavy-duty lubricating oil recommended under *Lubricating Oil Specifications* (Section 13.3).
8. Fill the fuel tank with the fuel specified under *Diesel Fuel Oil Specifications*(Section 13.3).
9. Close all of the drain cocks and fill the engine cooling system with clean soft water and a rust inhibitor. If the engine is to be exposed to freezing temperatures, fill the cooling system with a high boiling point type antifreeze solution (refer to Section 13.3).
10. Install and connect the battery.
11. Service the air cleaner as outlined in Section 3.1.

# **PART VI**

## **DIESEL ENGINE PARTS MANUAL**

## GENERAL INFORMATION

All engine components in this catalog are divided into sever, major groups of functionally related parts.

To locate a part, first, establish the group where the part is used (see the Alphabetical Index or Group Nomenclature page), with this information, turn to the proper group.

For purposes of illustration, a Model 5033-7101, serial number 3D-1417 RC engine, will be used. To determine the proper part number of the fan pulley

As indicated in the  
Group Nomenclature page, the Fan is

group 5.4235

The part is illustrated in Figure 4A, identified as being in group 5.4235.

Each Engine Model is provided with a Model Index, which shows the Standard and Standard Option type numbers currently available on the model. All optional material type numbers are listed on the engine Option Plate,

The names and type numbers of optional equipment built into the unit at the factory are listed on this plate, along with the unit model, serial number and customer specification number (if any). Material not listed on the Option Plate is standard equipment and the type number is obtained from the model index.

To determine the proper furl filter element part number, refer to the Option Plate to determine that the filter is standard equipment.

Turn to group 2.3000A and in the column note that the part number of the filter assembly, in sub-group 2.3310, is 5573949. However a note in the group heading refers to 'Assembly Breakdown, Page B8 for components of the filter assembly. On page B8, the filter assembly 5573949 appears in column.

All components of the filter assembly will be listed.

The Alphabetical Index is particularly helpful when only a part name is known and the group cannot readily be determined. Parts are listed alphabetically by noun name, followed by a description of the application of the part and the final group location. Component parts of assemblies are not listed since they will appear in the body of the book immediately following the assembly to which they belong.

### MISCELLANEOUS:

At the beginning of each of the 7 sections of this catalog there are several pages of illustrations. In each section of the parts list figure numbers refer to illustrations within that section only, unless otherwise noted. In the majority of cases illustrations are typical, that is; they may represent more than one part number. For example, in the case of the flywheel housing, figure 5A of section 1.0000, a single housing is shown to represent all housings. Key numbers on illustrations are final group numbers.

In many instances a part has more than one application. Wherever a part appears in its second or third application the basic group is shown in parenthesis following the description.

Unless otherwise specified, standard bolts in the parts list are hexagon head. Other standard parts are described in detail.

The ASSEMBLY BREAKDOWN section is designed to eliminate repeating components of assemblies and sub-assemblies. When the Assembly Breakdown is used it is always follows the group it pertains to.

Assemblies which make use of the Assembly Breakdown will have a note to that effect under the sub-group heading. The note will refer to the page on which the assembly is shown. The part number will appear in the first group of the Assembly Breakdown showing the quantity used.

All other items appearing in that column are components of the assembly.

INDEX

<u>Group No.</u>	<u>Description</u>	<u>Page No.</u>
1.0000	ENGINE (less major assemblies) .....	A1
1.1000	Cylinder Block .....	A1
1.1000A	Air Box Drains .....	A1
1.2000	Cylinder Head .....	A3
1.2000A	Engine Lifter Bracket .....	A5
1.3000	Crankshaft, Oil Seals and Stabilizers . . . . .	A6
1.3000A	Crankshaft Front Cover .....	A7
1.3000C	Crankshaft Pulley .....	A8
1.3000D	Crankshaft Pulley Belt .....	A8
1.4000A	Flywheel .....	A9
1.5000A	Flywheel Housing .....	A10
1.6000	Connecting Rod and Piston .....	A11
1.7000	Camshaft and Gear Train .....	A14
1.7000A	Balance Weight Cover .....	A14
1.7000B	Accessory Drive .....	A15
1.8000	Valve and Injector Operating Mechanism . . . . .	A17
1.8000A	Rocker Cover .....	A19
2.0000	FUEL SYSTEM .....	B1
2.1000A	Fuel Injector .....	B1
2.2000	Fuel Pump .....	B4
2.2000A	Fuel Pump Drain .....	B4
2.3000A	Fuel Filter .....	B8
2.4000	Fuel Manifold and/or Connections . . . . .	B11
2.5000A	Fuel Lines and Fuel Cooler . . . . .	B12
2.7000A	Mechanical Governor .....	B13
2.9000	Injector Controls .....	B21
2.9000A	Throttle Controls .....	B21
3.0000	AIR SYSTEM .....	C1
3.3000A	Air Inlet Housing .....	C1
3.4000	Blower .....	C3
3.4000A	Blower Drive Shaft .....	C3
3.4000B	Blower End Plate Cover .....	C5
4.0000	LUBRICATING SYSTEM .....	D1
4.1000A	Oil Pump .....	D1
4.1000B	Oil Distribution System . . . . .	D1
4.1000C	Oil Pressure Regulator .....	D2
4.2000A	Oil Filter .....	D3
4.3000A	Oil Filter Lines .....	D5
4.4000A	Oil Cooler .....	D6
4.5000A	Oil Filler .....	D7
4.6000A	Dipstick .....	D8
4.7000A	Oil Pan .....	D9
4.8000A	Ventilating System .....	D10

<u>Group No.</u>	<u>Description</u>	<u>Page No.</u>
5.0000	COOLING SYSTEM.....	E1
5.1000	Fresh Water Pump.....	E1
5.1000A	Fresh Water Pump Cover.....	E1
5.2000A	Water Outlet Manifold and/or Elbow.....	E3
5.2000B	Thermostat.....	E3
5.2000C	Water By-pass Tube.....	E3
5.3000B	Water Connections.....	E5
5.4000A	Fan.....	E6
6.0000	EXHAUST SYSTEM.....	F1
6.1000A	Exhaust Manifold.....	F1
6.2000A	Exhaust Muffler and/or Connections.....	F2
7.000	ELECTRICAL-INSTUMENTS .....	G1
7.1000A	Battery Charging Generator.....	G1
7.3000A	Starting Motor.....	G3



## ALPHABETICAL INDEX

Part Name	Group No.
A	
Adaptor, Accessory Drive .....	1.7622
Adaptor, Dipstick .....	4.6030
Adaptor, Oil Cooler .....	4.4110
Adaptor, Oil Filter Tube (To Oil Cooler Adaptor) .....	4.3025
Arm Assy. Exhaust Valve .....	1.8060
Arm Assy. Injector Rocker .....	1.8080
B	
Bearing, Cam And Balancer Shaft .....	1.7010
Bearing, Fan Shaft .....	5.4110
Bearing, Gov. Operating Shaft (Lower) .....	2.7270
Bearing, Gov. Operating Shaft (Upper) .....	2.7260
Bearing, Gov. Throttle Shaft .....	2.7100
Bearing, Governor Operating shaft (Lower) .....	2.7270
Bearing, Governor Operating Shaft (Upper) .....	2.7260
Bearing, Governor Throttle Shaft .....	2.7100
Bearing, Governor Weight Carrier Shaft .....	2.7470
Bearing, Governor Weight Carrier Shaft .....	2.7470
Bearing, Idler Gear .....	1.7225
Belt, Crankshaft Pulley .....	1.3320
Belt, Generator Drive .....	7.1575
Blade, Fan .....	5.4010
Block Assy., Cylinder .....	1.1001
Block, Cylinder .....	1.1001
Blower Assy. ....	3.4001
Blower Kit, Installation .....	3.4003
Blower Kit, Repair .....	3.4005
Body Assy., Injector, .....	2.1020
Body, Fresh Water Pump .....	5.1030
Body, Fuel Pump .....	2.2010
Bolt, Crankshaft Main Bearing Cap .....	1.3140
Bolt, Cylinder Head .....	1.2030
Bolt, Rocker Cover .....	1.8460
Boot, GUJ To Injector Link .....	2.7834
Boot, Governor To Injector Link .....	2.7834
Bracket, Engine Lifter Front .....	1.2070
Bracket, Engine Lifter Rear .....	1.2080
Bracket, Engine Lifter-Front .....	1.2070
Bracket, Engine Lifter-Rear .....	1.2080
Bracket, Fan Shaft .....	5.4090
Bracket, Generator Mounting .....	7.1595
Bracket, Generator Mtg. ....	7.1595
Bracket, Injector Control Tube .....	2.9003
Bracket, Oil Cooler Housing Support .....	4.4100
Bracket, Rocker Shaft .....	1.8170

ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
Bridge, Exhaust Valve.....	1.8343
Bushing, Connecting Rod Piston Pin.....	1.6040
Bushing, Injector And Exhaust Valve Rocker Arm Clevis....	1.8140
Bushing, Injector Rocker Arm-Large.....	1.8110
Bushing, Injector Rocker Arm-Small.....	1.8120
Bushing, Piston Pin.....	1.6145

C

Cage, Injector Check Valve.....	2.1205
Cage, Injector Valve Spring.....	2.1257
Camshaft Assy.....	1.7001
Cap & Spacer, Fan Hub.....	5.4180
Cap And Spacer, Fan Hub.....	5.4180
Cap, Crankshaft Main Bearing.....	1.3110
Cap, Exhaust Valve Spring.....	1.8350
Cap, Gov. Low Speed Spring.....	2.7580
Cap, Governor Low Speed Spring.....	2.7580
Cap, Injector Filter.....	2.1130
Cap, Injector Shipping.....	2.1150
Cap, Oil Filler Tube.....	4.5010
Clamp, Injector.....	2.1270
Clevis, Injector And Exhaust Valve Rocker Arm.....	1.8130
Clip, Fuel Pump To Filter Tube.....	2.5120
Clip, Gov. Control Wire Tube.....	2.9428
Clip, Governor Control Wire Tube.....	2.9428
Connecting Rod Assy.....	1.6001
Connector, Fuel Pipe.....	2.4030
Core Assy., Oil Cooler.....	4.4001
Coupling, Accessory Drive.....	1.7635
Cover Assy., Governor.....	2.7045
Cover Assy., Governor (Complete).....	2.7045
Cover Assy., Governor Complete.....	2.7045
Cover, Air Box.....	1.1040
Cover, Blower Housing End Plate.....	3.4180
Cover, Cylinder Block Water Hole.....	1.1060
Cover, Cylinder Head Water Hole.....	1.2043
Cover, Engine Front-Lower.....	1.3162
Cover, Engine Front-Upper.....	1.3161
Cover, Flywheel Housing Large Hole.....	1.5030
Cover, Flywheel Housing Small Hole.....	1.5050
Cover, Fresh Water Pump.....	5.1031
Cover, Fuel Filter (Secondary).....	2.3390
Cover, Fuel Pump.....	2.2030
Cover, Fuel Strainer (Primary).....	2.3080
Cover, Oil Filter.....	4.2290
Cover, Oil Filter (Adaptor).....	4.2290
Cover, Oil Pump.....	4.1220
Cover, Rocker.....	1.8450

ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
Cover, Thermostat Housing.....	5.2120
Cylinder Kit.....	1.6182
D	
Deflector, Injector Spill.....	2.1050
Dipstick.....	4.6001
Draincock, Fuel Filter.....	2.3500
E	
Elbow, Oil Cooler Water outlet.....	5.3420
Elbow, Water Outlet.....	5.2035
Element, Fuel Filter (Secondary).....	2.3320
Element, Fuel Strainer (Primary).....	2.3010
Element, Injector Filter.....	2.1110
Element, Oil Filter.....	4.2250
F	
Fan, Generator.....	7.1440
Filter Assy., Fuel.....	2.3310
Filter Assy., Oil.....	4.2240
Filter Unit, Breather Oil Separator.....	4.8060
Flange, Exhaust.....	6.2085
Flywheel.....	1.4001
Follower Assy., Cam.....	1.8260
Follower, Injector.....	2.1060
Fork, Gov. Operating Shaft.....	2.7290
Fork, Governor Operating Lever.....	2.7290
Fork, Governor Operating Shaft.....	2.7290
G	
Gasket Kit, Cylinder Head Overhaul.....	1.2002
Gasket Kit, Engine Overhaul.....	1.1002
Gasket Set, Cylinder Head Oil.....	1.2020
Gasket, Accessory Drive.....	1.7604
Gasket, Accessory Drive Adaptor.....	1.7623
Gasket, Air Box Cover.....	1.1050
Gasket, Air Inlet Housing Flange.....	3.3007
Gasket, Blower.....	3.4010
Gasket, Blower Housing End Plate Cover.....	3.4190
Gasket, Breather Tube.....	4.8020
Gasket, Cylinder Block End Plate.....	1.1030
Gasket, Cylinder Block Water Hole Cover.....	1.1070
Gasket, Cylinder Head Compression.....	1.2010
Gasket, Cylinder Head Water Hole Cover.....	1.2044
Gasket, Engine Front Cover.....	1.3170

ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
Gasket, Exhaust Manifold.....	6.1010
Gasket, Exhaust Manifold.....	6.1010
Gasket, Exhaust Outlet.....	6.2105
Gasket, Flywheel Housing.....	1.5010
Gasket, Flywheel Housing Bell.....	1.5020
Gasket, Flywheel Housing Large Hole Cover.....	1.5040
Gasket, Flywheel Housing Large Hole Cover.....	1.5040
Gasket, Flywheel Housing Small Hole Cover.....	1.5060
Gasket, Flywheel Housing Small Hole Cover.....	1.5060
Gasket, Fresh Water Pump.....	5.1010
Gasket, Fresh Water Pump Body Cover.....	5.1032
Gasket, Fuel Filter Cover Screw.....	2.3420
Gasket, Fuel Filter Cover To Shell.....	2.3400
Gasket, Fuel Pump To Engine.....	2.2007
Gasket, Fuel Pump Valve Plug.....	2.2180
Gasket, Fuel Strainer Cover.....	2.3090
Gasket, Fuel Strainer Cover Screw.....	2.3130
Gasket, Governor High Speed Spring.....	2.7650
Gasket, Governor High Speed Spring Cover.....	2.7650
Gasket, Injector Filter Cap.....	2.1140
Gasket, Oil Cooler Water Outlet Elbow.....	5.3421
Gasket, Oil Filter Cover.....	4.2300
Gasket, Oil Filter Cover Nut.....	4.2330
Gasket, Oil Filter Tube Adaptor.....	4.3027
Gasket, Oil Pan To Block.....	4.7030
Gasket, Oil Pressure Regulator Plug.....	4.1720
Gasket, Thermostat Housing.....	5.2110
Gasket, Thermostat Housing Cover.....	5.2130
Gasket, Water Outlet Elbow.....	5.2037
Gear Assy., Idler.....	1.7220
Gear Accessory Drive.....	1.7670
Gear, Blower Rotor.....	3.4080
Gear, Camshaft And Balance Shaft.....	1.7200
Gear, Camshaft And Balancer Shaft.....	1.7200
Gear, Crankshaft Timing.....	1.3145
Gear, Flywheel Ring.....	1.4010
Gear, Fuel Pump (Drive).....	2.2087
Gear, Governor Drive.....	2.7960
Gear, Injector.....	2.1180
Gear, Oil Pump Drive (On Crankshaft).....	4.1310
Generator Assy.....	7.1001
Governor Assy.....	2.7001
Guide, Cam Follower.....	1.8300
Guide, Dipstick.....	4.6020
Guide, Exhaust Valve.....	1.8320

ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
H	
Head Assembly, Cylinder.....	1.2001
Head Assy., Cylinder.....	1.2001
Hose, Fuel Tank Flexible.....	2.6005
Hose, Oil Cooler Water Outlet Elbow.....	5.3422
Hose, Water By-Pass Tube.....	5.2165
Housing Assy., Air Inlet.....	3.3001
Housing, Air Inlet.....	3.3003
Housing, Blower.....	3.4020
Housing, Flywheel.....	1.5001
Housing, Gov. Control.....	2.7230
Housing, Governor Control.....	2.7230
Housing, Governor High Speed Spring Adjusting Screw.....	2.7635
Housing, Governor Limiting Speed Spring.....	2.7635
Housing, Governor Weight.....	2.7340
Housing, Oil Cooler.....	4.4050
Housing, Thermostat.....	5.2090
Hub, Idler Gear.....	1.7250
I	
Idler Pulley, Fan Belt.....	5.4235
Idler Pulley, Fan Belt (With Adjusting Arm).....	5.4325
Impeller, Fresh Water Pump.....	5.1110
Injector Assy.....	2.1001
Inert, Exhaust Valve.....	1.8330
L	
Lever Assy., Governor Control Operation Link.....	2.7317
Lever, Air Inlet Housing Shutdown Reset.....	3.3110
Lever, Air Inlet Housing Shutdown Valve.....	3.3090
Lever, Air Inlet Housing Shutdown Reset.....	3.3110
Lever, Air Inlet Housing Shutdown Valve.....	3.3090
Lever, Gov. Differential.....	2.7310
Lever, Gov. Operating Shaft.....	2.7280
Lever, Governor Cover Shutdown Shaft.....	2.7165
Lever, Governor Cover Shutdown shaft.....	2.7165
Lever, Governor Cover Throttle Shaft.....	2.7170
Lever, Governor Cover Throttle shaft.....	2.7170
Lever, Governor Differential.....	2.7310
Lever, Governor Operating.....	2.7280
Lever, Governor Operating Shaft.....	2.7280
Lever, Injector Control Tube.....	2.9009
Lever, Injector Control Tube Pack.....	2.9014
Liner, Cylinder.....	1.6180
Link, Governor Operating Lever Connecting.....	2.7312
Lock, Exhaust Valve Spring.....	1.8370

ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
Locknut, Gov. High Speed Spring Retainer.....	2.7615
Locknut, Governor High Speed Spring.....	2.7615
Locknut, Governor High Speed Spring Retainer.....	2.7615
M	
Manifold, Exhaust.....	6.1001
Manifold, Exhaust.....	6.1001
Motor Assy., Starting.....	7.3001
N	
Name Plate, GovernOr.....	2.7002
Nozzle, Connecting Rod Spray.....	1.6010
Nozzle, Cylinder Head Water.....	1.2005
Nut, Injector Valve.....	2.1030
O	
Overhaul Kit, Injector.....	2.1002
P	
Pan, Oil.....	4.7001
Pin, Bushing Guide.....	2.1165
Pin, Gov. Differential Lever.....	2.7315
Pin, Governor Differential Lever.....	2.7315
Pin, Governor Operating Shaft.....	2.7300
Pin, Governor Operating Shaft Lever.....	2.7300
Pin, Injector And Exhaust Valve Rocker Arm Clevis.....	1.8150
Pin, Injector Stop.....	2.1100
Pin, Piston.....	1.6140
Pipe, Breather.....	4.8001
Pipe, Fuel.....	2.4020
Pipe, Oil Pump Inlet.....	4.1510
Piston Assy.....	1.6110
Plate, Air Inlet Housing Shutdown Control.....	3.3260
Plate, Air Inlet Housing Shutdown Control.....	3.3260
Plate, Blower Housing End.....	3.4140
Plate, Blower Rotor Thrust.....	3.4033
Plate, Cylinder Block End.....	1.1020
Plug, Fuel Filter.....	2.3480
Plug, Fuel Pump Valve.....	2.2170
Plug, Fuel Strainer Cover.....	2.3100
Plug, Oil Pan Drain.....	4.7080
Plug, Oil Pressure Regulator.....	4.1710
Plunger And Bushing Assy., Injector.....	2.1160
Plunger, Governor Low Speed Spring.....	2.7560
Pulley & Hub Assy., Fan.....	5.4015

ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
Pulley And Hub Assy. (Fan).....	5.4015
Pulley And Hub Assy., Far.....	5.4015
Pulley, Crankshaft.....	1.3280
Pulley, Fan.....	5.4235
Pulley, Fresh Water Pump.....	5.1214
Pulley, Front Balance.....	1.7130
Pulley, Front Balancer.....	1.7130
Pulley, Generator.....	7.1500
Pump Assy. ....	5.1001
Pump Assy., Fresh Water.....	5.1001
Pump Assy., Fuel.....	2.2001
Pump Assy., Oil.....	4.1001

R

Rack, Injector.....	2.1170
Reconditioning Kit, Fresh Water Pump.....	5.1002
Reconditioning Kit, Fresh Water Pump.....	5.1002
Retainer, Cam And Balance Shaft Gear Nut.....	1.7207
Retainer, Cam And Balancer Shaft Gear Nut.....	1.7207
Retainer, Crankshaft Pulley.....	1.3290
Retainer, Fan Shaft Bearing.....	5.4140
Retainer, Gov. High Speed Spring.....	2.7610
Retainer, Governor High Speed Spring.....	2.7610
Retainer, Governor High Speed Spring.....	2.7610
Retainer, Injector Gear.....	2.1190
Retainer, Oil Filter Spring.....	4.2315
Retainer, Oil Filter Tube Adaptor By-Pass Spring.....	4.3060
Retainer, Oil Filter Tube Adaptor By-Pass Spring.....	4.3060
Retainer, Piston Pin.....	1.6150
Retainer, Push Rod.....	1.8250
Ring Set, Piston.....	1.6115
Ring, Injector Hole Tube Seal.....	1.2046
Ring, Injector Seal.....	2.1040
Ring, Piston Compression.....	1.6120
Ring, Piston Oil Control.....	1.6130
Rod Assy., Gov. To Injector Link.....	2.7819
Rod Assy., Governor To Injector.....	2.7819
Rod, Push.....	1.8180
Roller Set, Cam Follower.....	1.8265
Rotor Assy., Oil Pump.....	4.1085
Rotor, Blower.....	3.4030

S

Screen, Blower.....	3.4025
Screen, Oil Pump Inlet.....	4.1530
Screw Assy., Gov. Buffer.....	2.7810
Screw Assy., Governor Buffer.....	2.7810
Screw, Assy., Governor Buffer.....	2.7810

ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
Screw, Fuel Filter Cover.....	2.3410
Screw, Fuel Strainer Cover.....	2.3120
Screw, Gov. Low Speed Spring Adjusting.....	2.7590
Screw, Governor Low Speed Spring Adjusting.....	2.7590
Seal, Air Inlet Housing Shutdown Valve Shaft.....	3.3055
Seal, Air Inlet Housing Shutdown Valve Shaft.....	3.3055
Seal, Blower Housing End Plate.....	3.4160
Seal, Cam And Balance Oil.....	1.7060
Seal, Cam And Balancer Oil.....	1.7060
Seal, Crankshaft Oil-Front.....	1.3040
Seal, Crankshaft Oil-Rear.....	1.3060
Seal, Cylinder Liner.....	1.6190
Seal, Fan Shaft.....	5.4150
Seal, Fresh Water Pump.....	5.1130
Seal, Fuel Pump Oil.....	2.2070
Seal, Governor.....	2.7945
Seat, Exhaust Valve spring.....	1.8360
Seat, Fuel Filter Element.....	2.3322
Seat, Gov. Low Speed Spring.....	2.7570
Seat, Governor Low Speed Spring.....	2.7570
Seat, Injector Valve Spring.....	2.1255
Seat, Push Rod Spring-Upper.....	1.8200
Seat, Push Rod Spring-Lower.....	1.8210
Seat, Push Rod Spring-Upper.....	1.8200
Shaft & Carrier Assy., Governor Weight.....	2.7350
Shaft And Carrier Assy., Governor Weight.....	2.7350
Shaft Assy., Gov. Operating.....	2.7250
Shaft Assy., Governor Operating.....	2.7250
Shaft, Air Inlet Housing Shutdown Valve.....	3.3050
Shaft, Air Inlet Housing Shutdown Valve.....	3.3050
shaft, Balancer.....	1.7080
Shaft, Fresh Water Pump.....	5.1050
Shaft, Fuel Pump.....	2.2093
Shaft, Fuel Pump Driven.....	2.2089
Shaft, Gov. Operating.....	2.7255
Shaft, Governor Operating.....	2.7255
Shaft, Injector Control Tube End.....	2.9007
Shaft, Rocker.....	1.8160
Shell, Connecting Rod Bearing.....	1.6100
Shell, Crankshaft Main Bearing.....	1.3090
Shell, Fuel Filter (Secondary).....	2.3380
Shell, Fuel Strainer (Primary).....	2.3050
Shell, Oil Filter.....	4.2280
Shield, Generator.....	7.1005
Shield, Generator Heat.....	7.1005
Shim, Blower Rotor Gear.....	3.4090
Shim, Flywheel.....	1.5002
Shim, Flywheel Housing To End Plate.....	1.5002
Sleeve, Crankshaft Rear Oil Seal.....	1.3066



ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
Slinger, Cam And Balance Shaft Oil.....	1.7061
Slinger, Cam And Balancer Shaft Oil.....	1.7061
Spacer, Blower Rotor Gear.....	3.4100
Spacer, Blower Rotor Shaft Oil Seal.....	3.4163
Spacer, Cam And Balance Shaft Pulley.....	1.7062
Spacer, Cam And Balancer Shaft Pulley.....	1.7062
Spacer, Camshaft Gear.....	1.7202
Spacer, Crankshaft Front Oil Seal.....	1.3055
Spacer, Governor Weight Carrier Shaft.....	2.7475
Spacer, Injector Control Tube Lever.....	2.9010
Spring, Air Inlet Housing Shutdown Valve Tension.....	3.3070
Spring, Air Inlet Housing Shutdown Valve Tension.....	3.3070
Spring, Exhaust Valve.....	1.8340
Spring, Fuel Filter Element.....	2.3370
Spring, Fuel Pump Valve Retaining.....	2.2160
Spring, Governor High Speed.....	2.7550
Spring, Governor Low Speed.....	2.7540
Spring, Injector Control Tube.....	2.9012
Spring, Injector Plunger.....	2.1080
Spring, Injector Valve.....	2.1250
Spring, Oil Filter.....	4.2310
Spring, Oil Filter Tube Adaptor By-Pass Valve.....	4.3057
Spring, Oil Pressure Regulator.....	4.1690
Spring, Push Rod.....	1.8190
Strainer, Assy., Fuel.....	2.3001
Strap, Generator Adjusting.....	7.1580
Stud, Exhaust Manifold To Head.....	6.1020
Stud, Oil Filter Center.....	4.2410
support, Fan Mounting.....	5.4025

T

Thermostat Assy.....	5.2050
Tip Assy., Injector Spray.....	2.1235
Tube And Lever Assy., Injector Control.....	2.9001
Tube Assy., Gov. Lubrication.....	2.7890
Tube Assy., Governor Lubrication.....	2.7890
Tube, Air Box Drain.....	1.1100
Tube, Filter Outlet.....	2.5151
Tube, Fuel Drain.....	2.5210
Tube, Fuel Pump Inlet.....	2.5060
Tube, Fuel Pump To Filter.....	2.5100
Tube, Gov. Operating Shaft.....	2.7257
Tube, Governor Operating Shaft.....	2.7257
Tube, Injector Hole.....	1.2045
Tube, Water By-Pass.....	5.2160

ALPHABETICAL INDEX

<u>Part Name</u>	<u>Group No.</u>
V	
Valve Kit, Injector.....	2.1238
Valve, Air Inlet Housing Shutdown.....	3.3040
Valve, Exhaust.....	1.8310
Valve, Fuel Pump.....	2.2130
Valve, fuel supply Check.....	2.5006
Valve, Injector Check.....	2.1200
Valve, Oil Filter Tube Adaptor By-Pass.....	4.3055
Valve, Oil Pressure Regulator.....	4.1700
W	
Washer, Blower Rotor Shaft Thrust.....	3.4036
Washer, Cam And Balance Shaft End Bearing Thrust.....	1.7030
Washer, Cam And Balancer shaft End Bearing Thrust.....	1.7030
Washer, Crankshaft Main Bearing Thrust.....	1.3100
Washer, Fuel Pipe Connector.....	2.4050
Weight, Rear Balancer.....	1.7190
Wire Assy., Gen. To Regulator.....	7.1630
Wire Assy., Generator Regulator.....	7.1630
Wire Assy., Generator To Regulator.....	7.1630
Wire, Air Inlet Housing Shutdown.....	3.3250
Wire, Air Inlet Housing Shutdown Control.....	3.3250
Wire, Governor Control.....	2.9422

## GROUP NOMENCLATURE

1.0000	<b>ENGINE</b> (loss major assemblies)
1.1000	Cylinder Block
1.1000A	Air Box Drains
1.2000	Cylinder Head
1.2000A	Engine Lifter Bracket
1.3000	Crankshaft, Oil Seals and stabilizers
1.3000A	Crankshaft Front Cover
1.3000C	Crankshaft Pulley
1.3000D	Crankshaft Pulley Belt
1.4000A	Flywheel
1.5000A	Flywheel Housing
1.6000	Connecting Rod and Piston
1.7000	Camshaft and Gear Train
1.7000A	Balance Weight Cover
1.7000B	Accessory Drive
1.8000	Valve and Injector Operating Mechanism
1.8000A	Rocker Cover

# MODEL DESCRIPTION CHART IN-LINE ENGINES

5 0 4 3 - 5 1 0 0

SERIES 53	NUMBER OF CYLINDERS	APPLICATION DESIGNATION (see below)	BASIC ENGINE ARRANGEMENTS *(see below)	DESIGN VARIATION (see below)	SPECIFIC MODEL NUMBER AND STARTER-BLOWER ARRANGEMENT
--------------	---------------------------	---	--	------------------------------------	--

### APPLICATION DESIGNATION

5042-5100 MARINE  
 5043-5100 FAN TO F/W-INDUSTRIAL  
 5044-5100 POWER-BASE  
 5045-5100 GENERATOR  
 504Z-5100 FAN TO F/W-AUTOMOTIVE

### DESIGN VARIATIONS

5043-5000 "N" ENGINE  
 5043-5100 2 VALVE HEAD  
 5043-5200 4 VALVE HEAD  
 5042-2202 TURBOCHARGER


### STARTER-BLOWER ARRANGEMENT

Odd number in last digit  
designates starter opposite blower.  
 Even number in last digit  
designates starter same side as blower.

### \*2, 3, 4-53 BASIC ENGINE ARRANGEMENTS

Rotation: L (left) and R (right) designates  
rotation viewed from the front of the  
engine.

Type: A-B-C-D designates location of  
exhaust manifold and blower  
as viewed from the rear (flywheel) end.

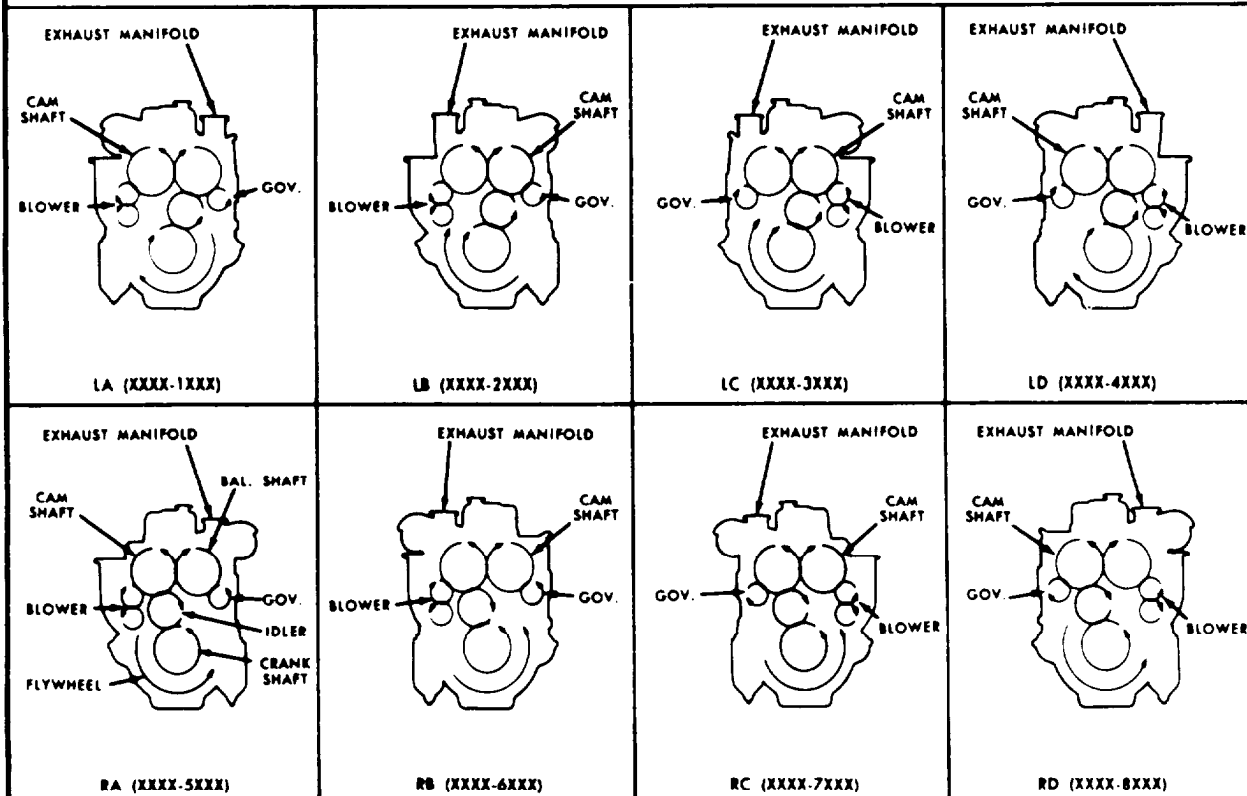

ALL VIEWS FROM FLYWHEEL (REAR) END OF ENGINE  
 ENGINE ROTATION DETERMINED BY VIEWING ENGINE FROM BALANCE WEIGHT COVER (FRONT) END

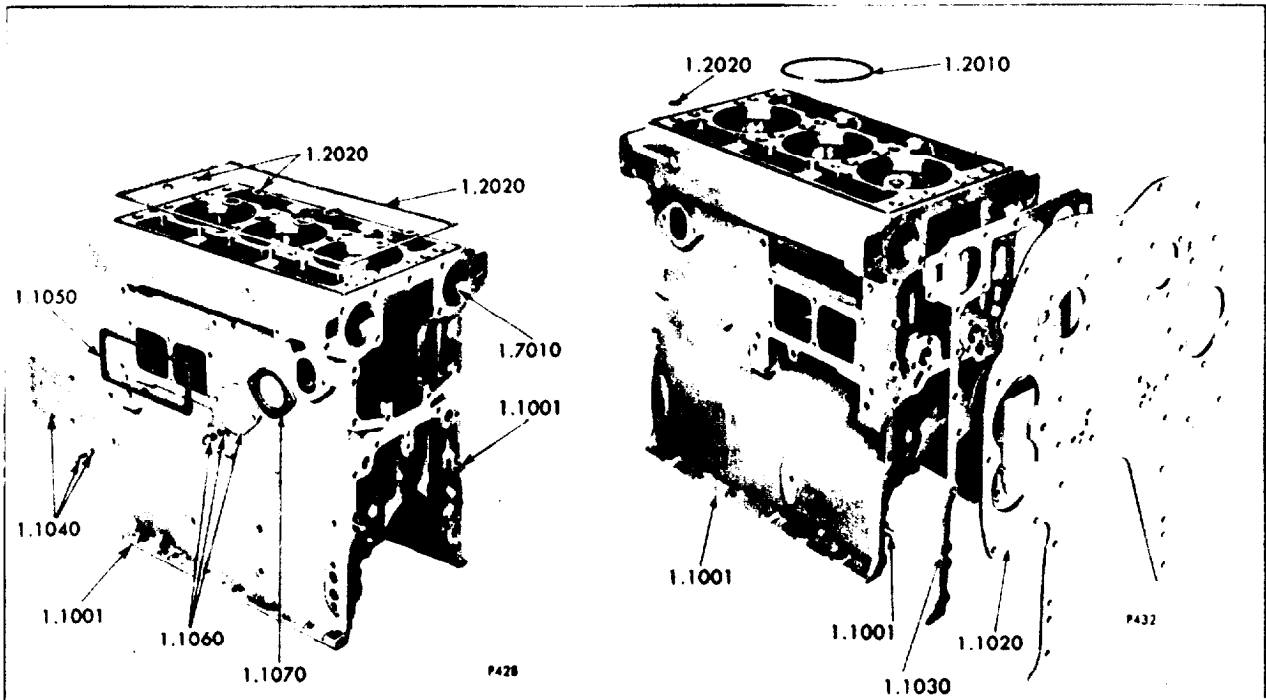


FIG. 1A INLINE 53  
CYLINDER BLOCK  
(with head gaskets)

FIG. 1B INLINE 53  
CYLINDER BLOCK  
(with end plate)

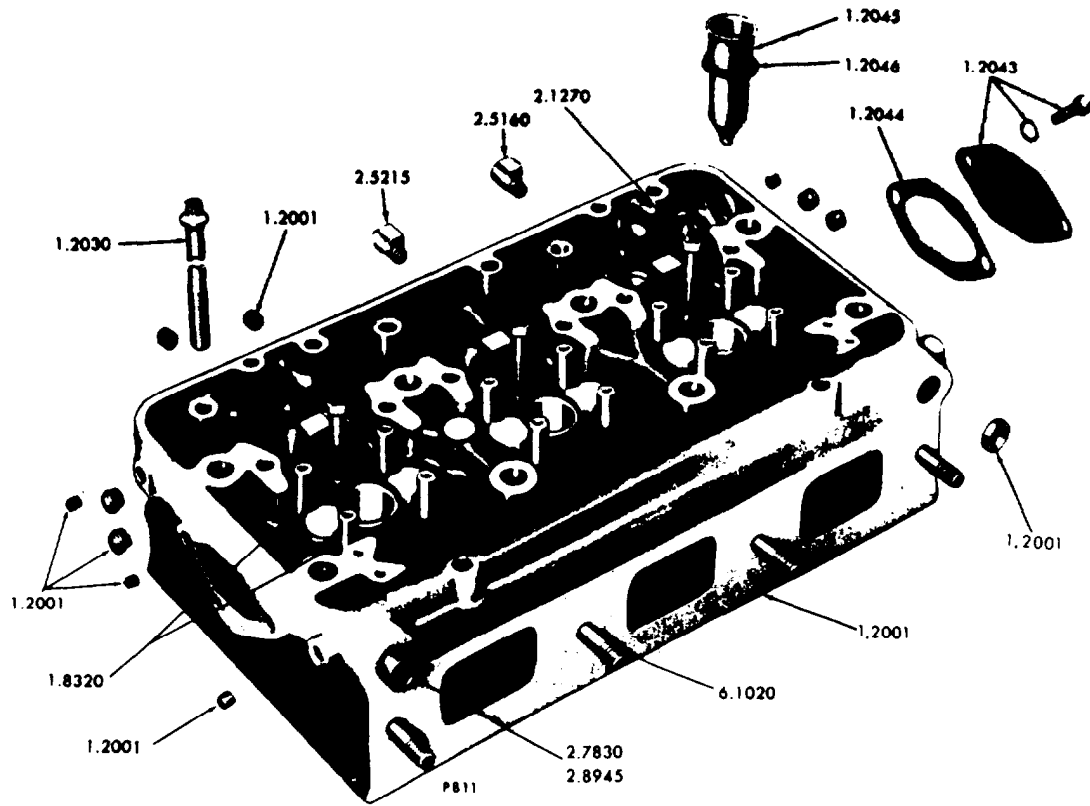


FIG. 2A CYLINDER HEAD

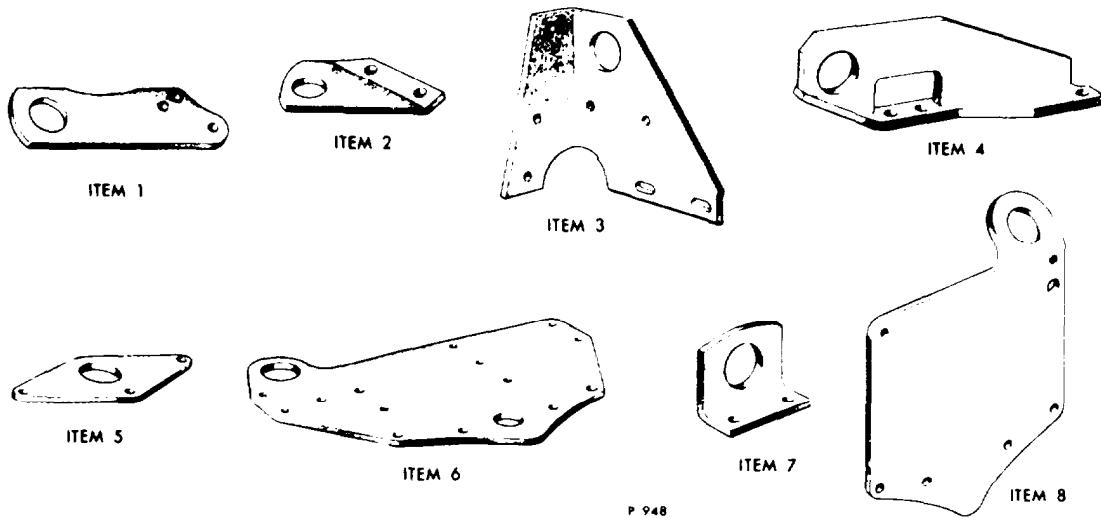


FIG. 2B ENGINE LIFTER BRACKET

March, 1974

Figs. 2A & 2B of 1.0000

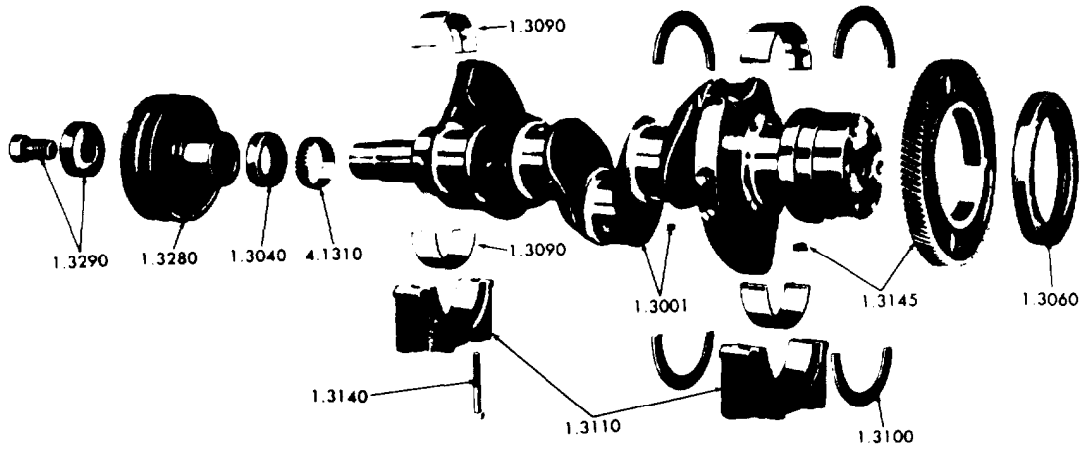


FIG. 3A CRANKSHAFT (3-53)


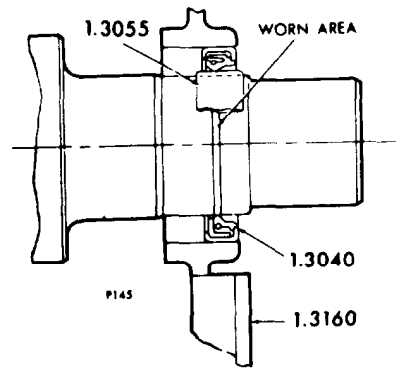


FIG. 3C CRANKSHAFT (3-53)

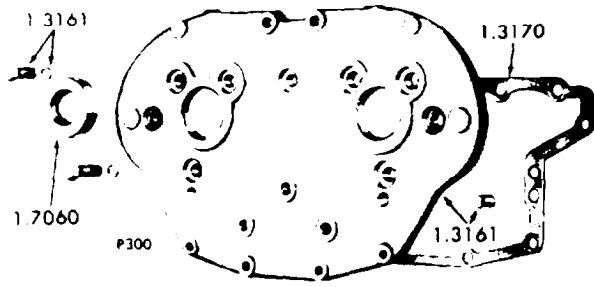

In-Line Models

UPPER FRONT COVER

FIG. 4A

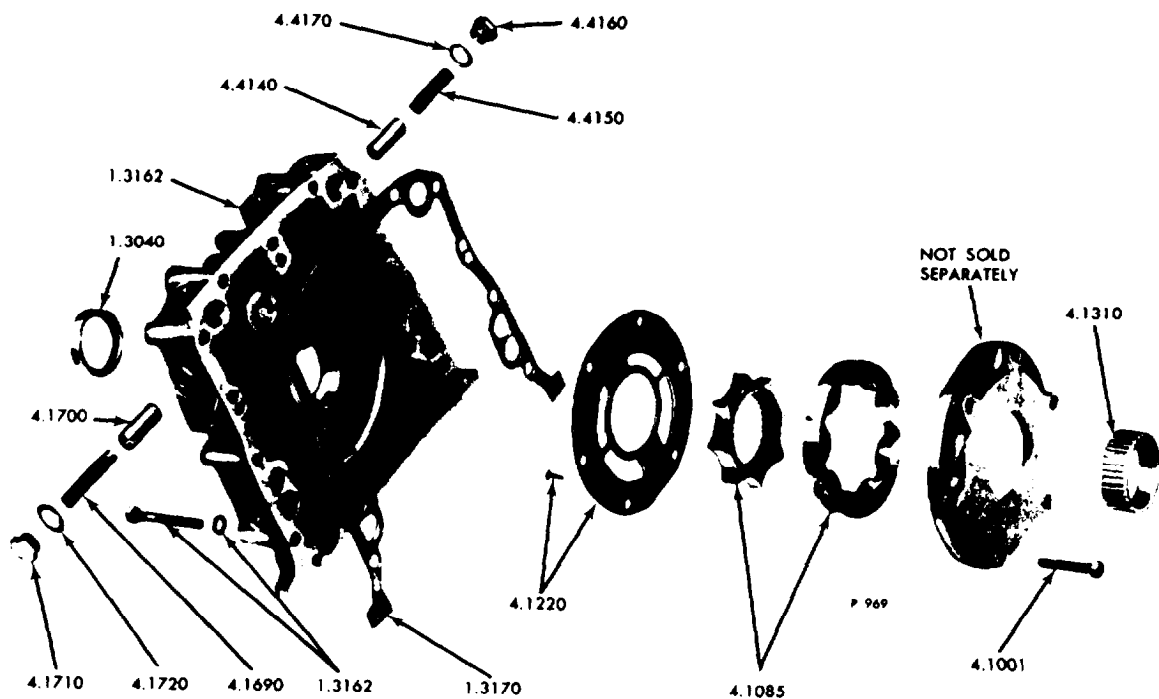


FIG. 4D LOWER FRONT COVER AND OIL PUMP



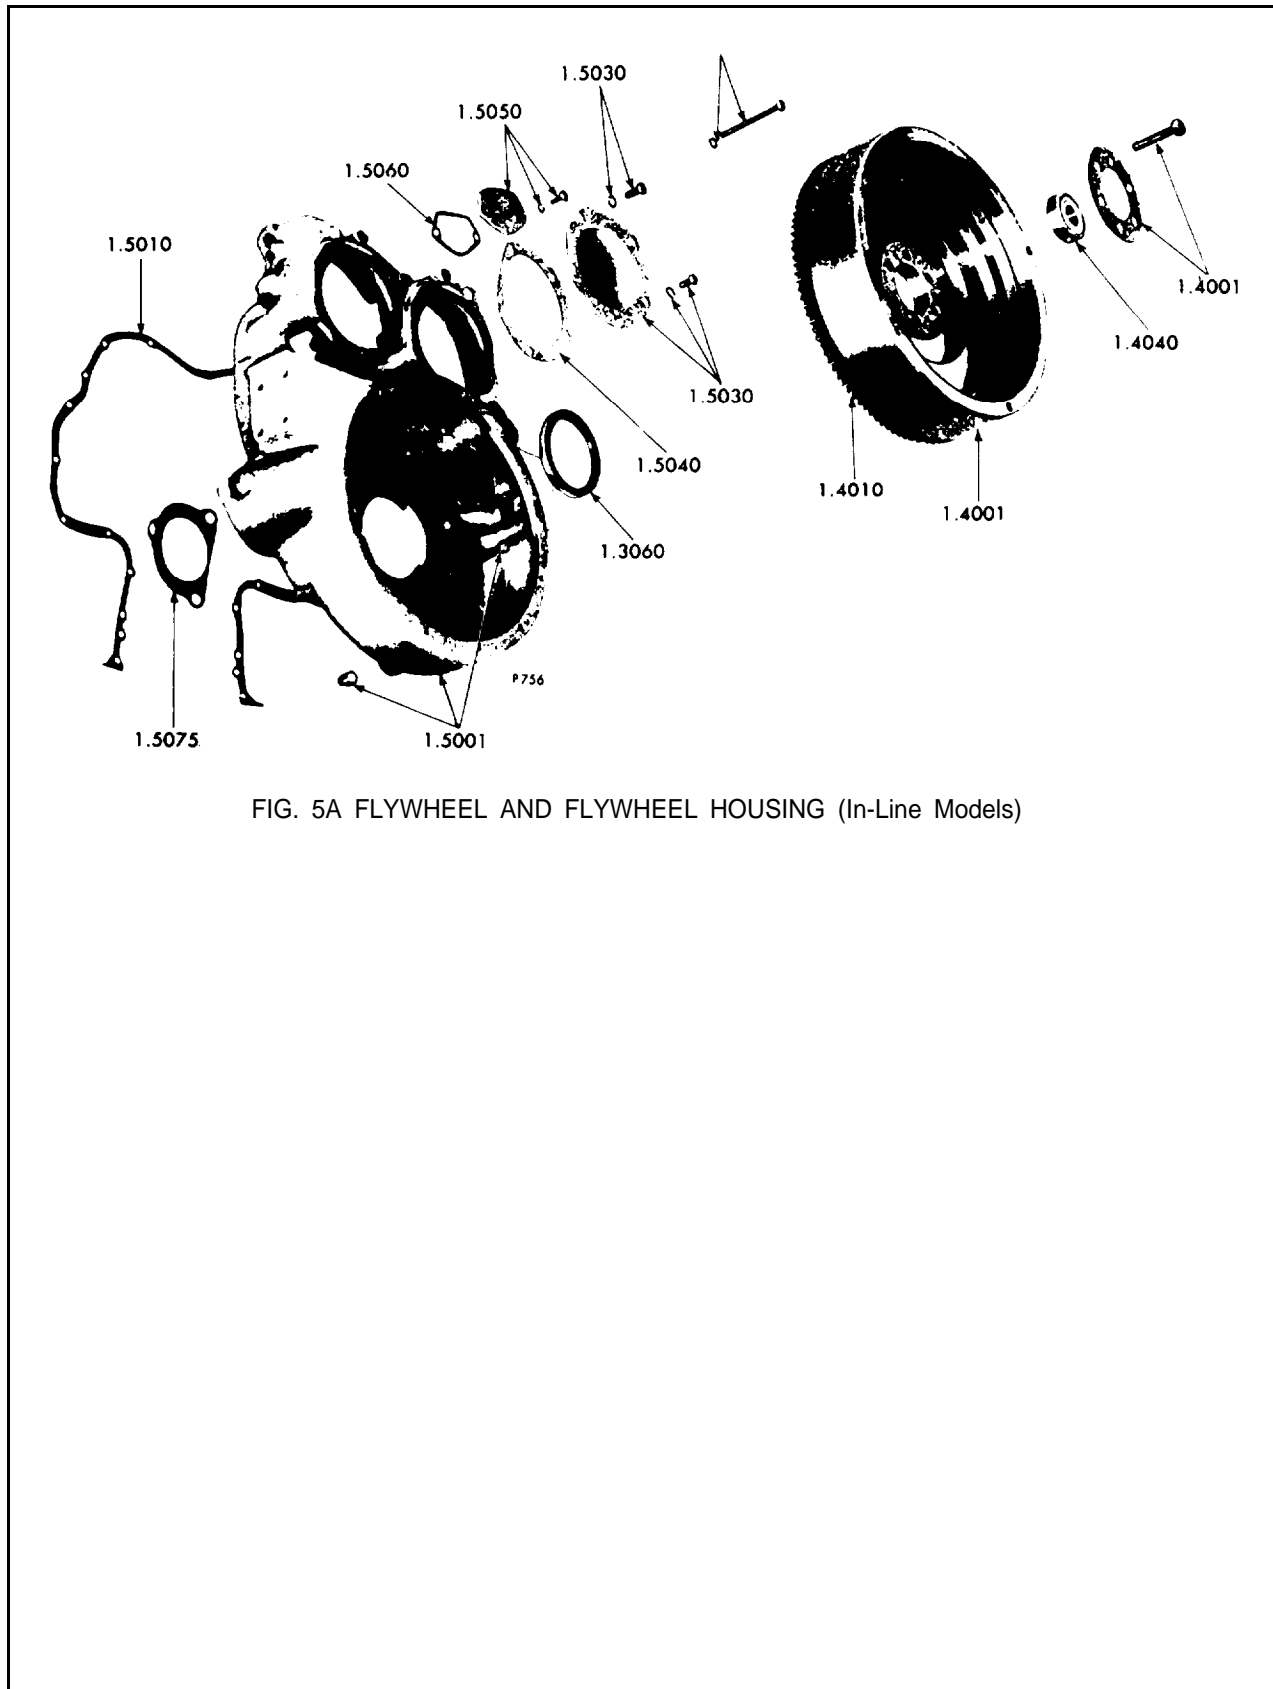


FIG. 5A FLYWHEEL AND FLYWHEEL HOUSING (In-Line Models)

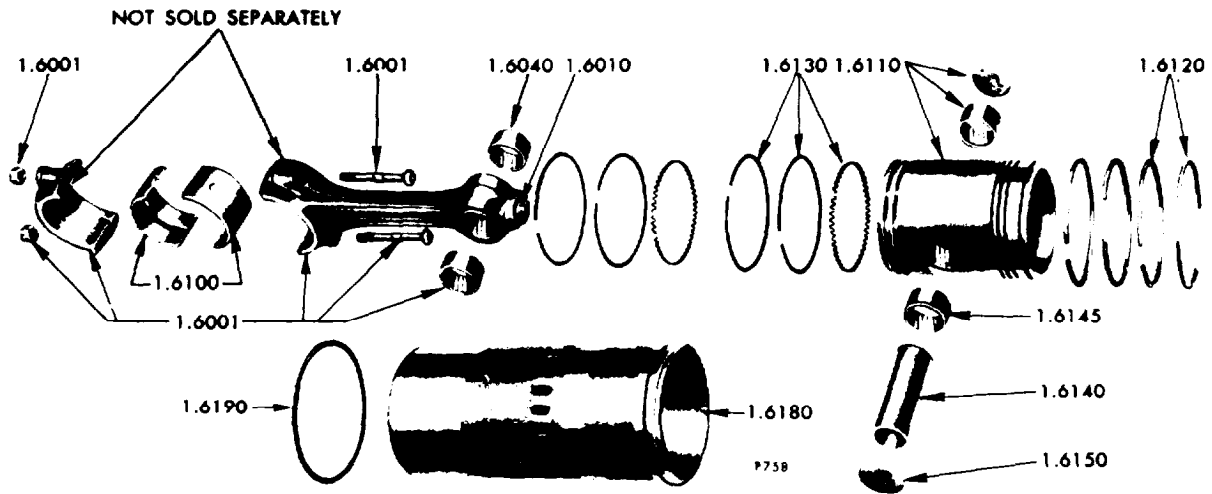


FIG. 6A CONNECTING ROD, PISTON AND LINER

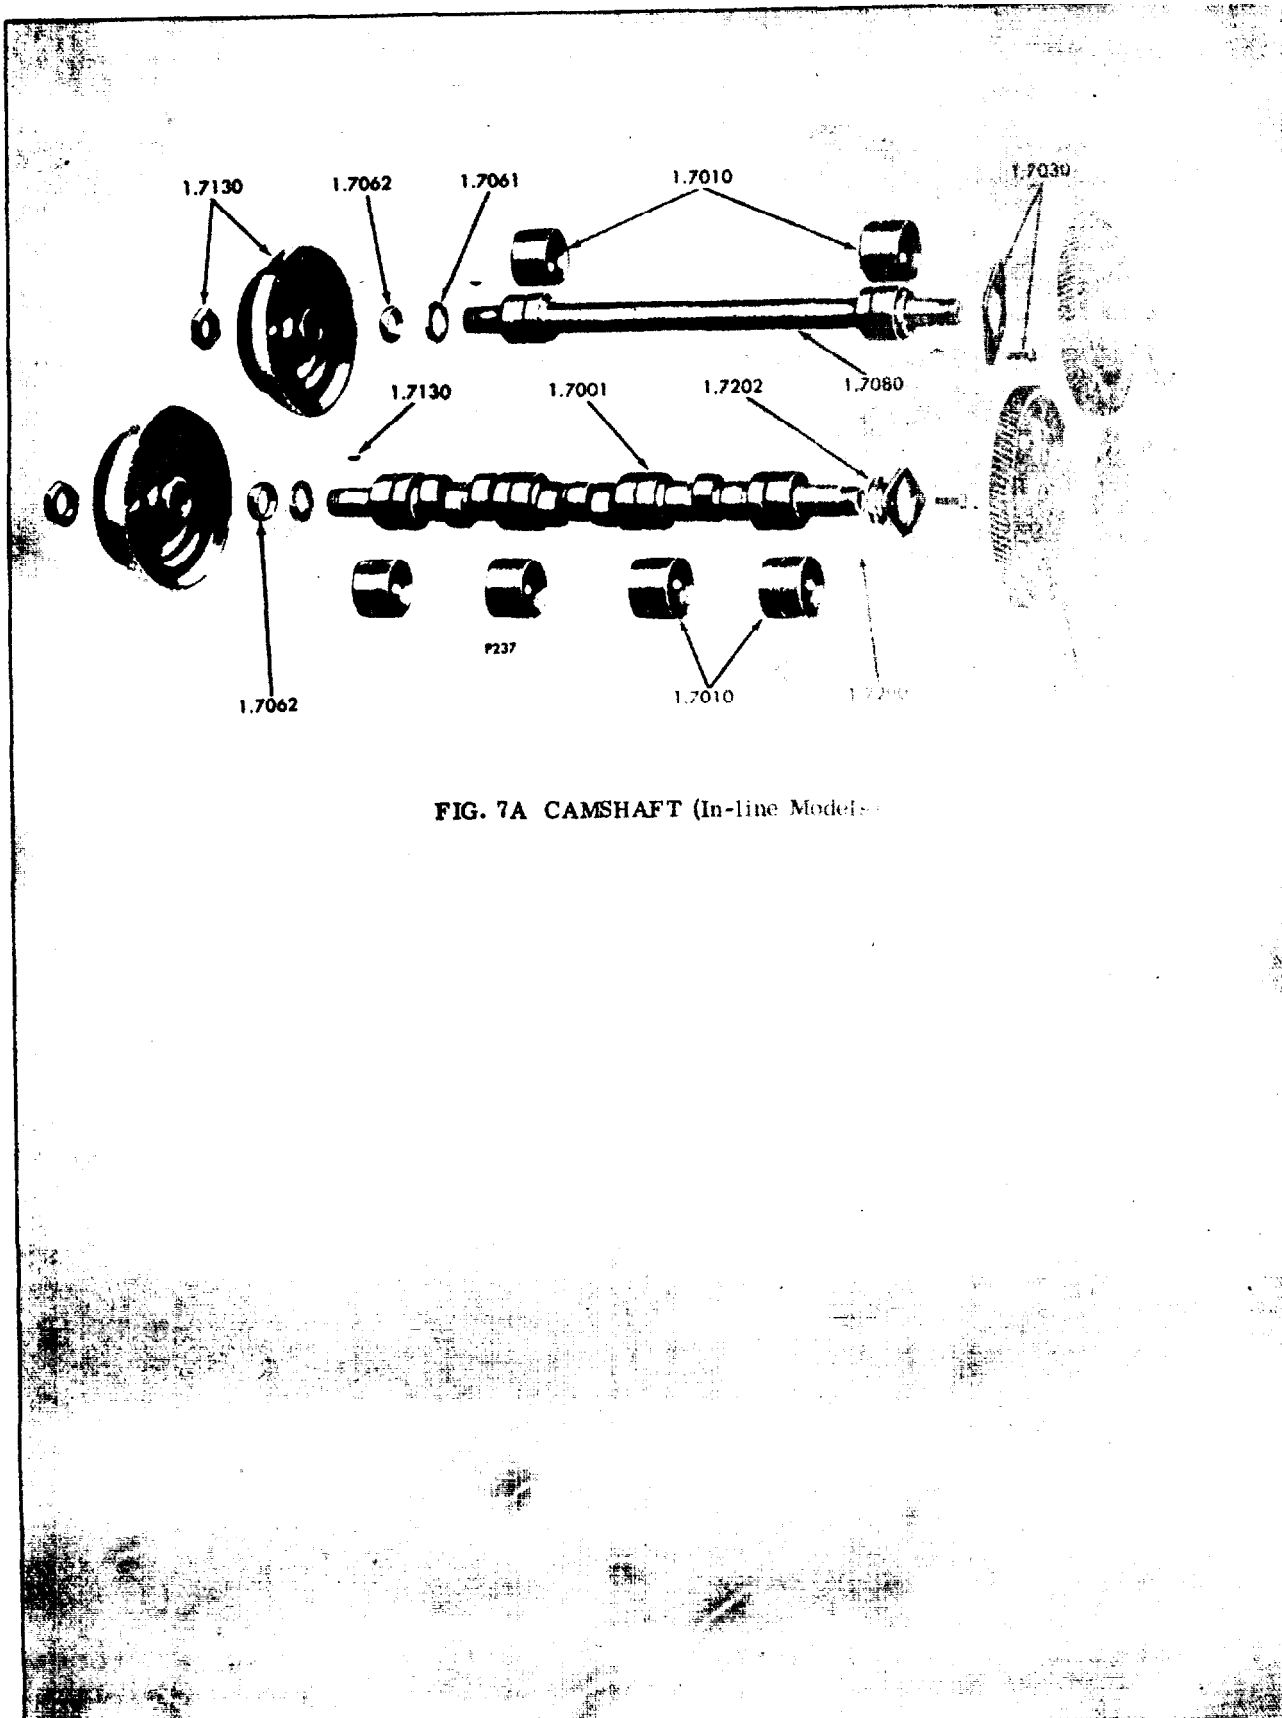


FIG. 7A CAMSHAFT (In-line Models)

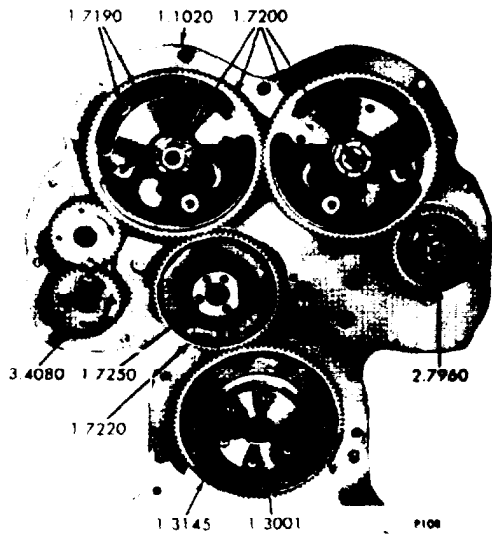


FIG. 7C GEAR TRAIN (Typical In-line)

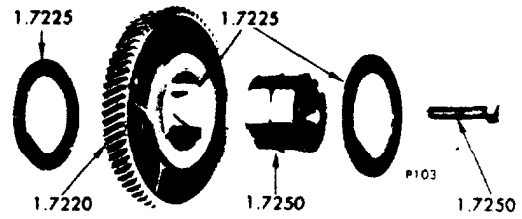


FIG. 7F IDLER GEAR

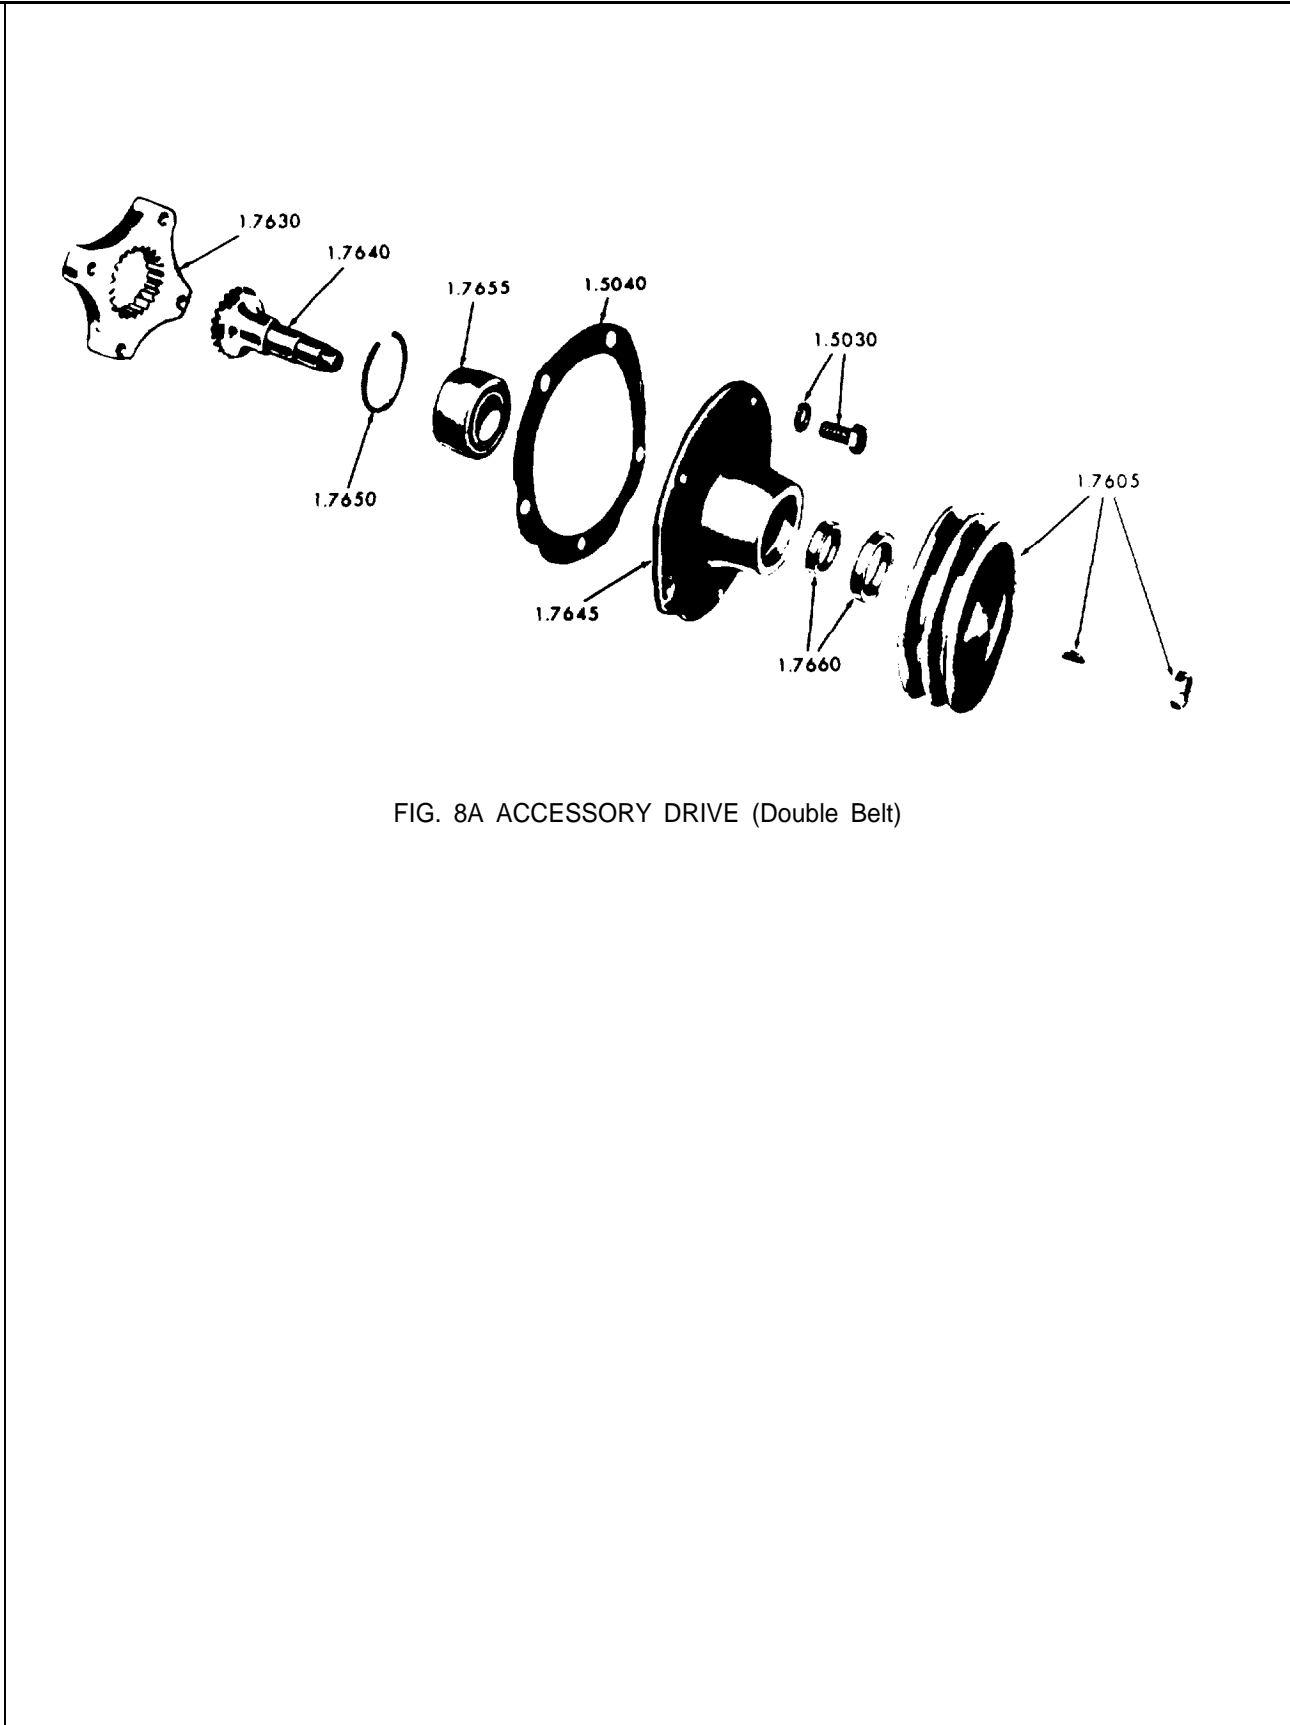


FIG. 8A ACCESSORY DRIVE (Double Belt)

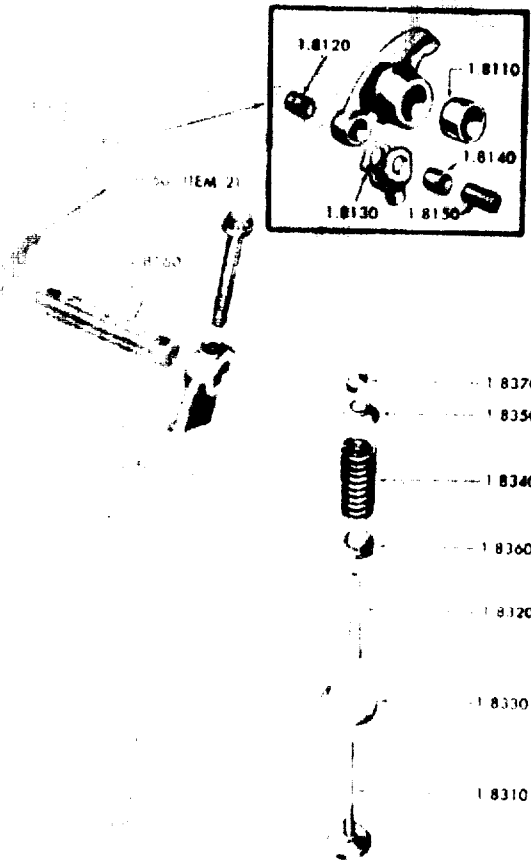


FIG. 9B  
VALVE SPRING & SEAT



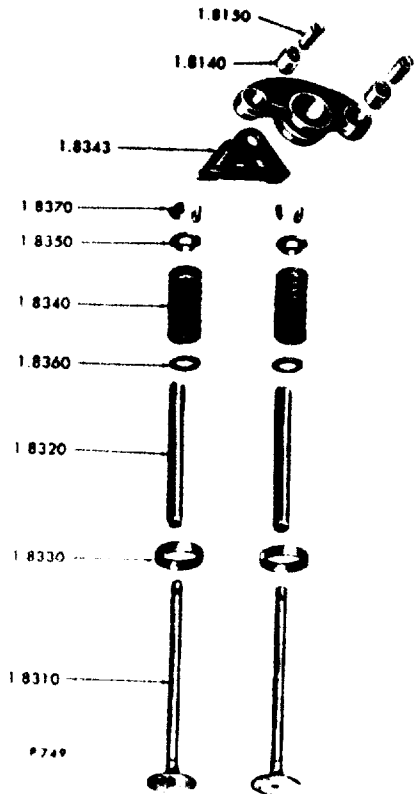


FIG. 9C  
VALVE & ROCKER BRIDGE

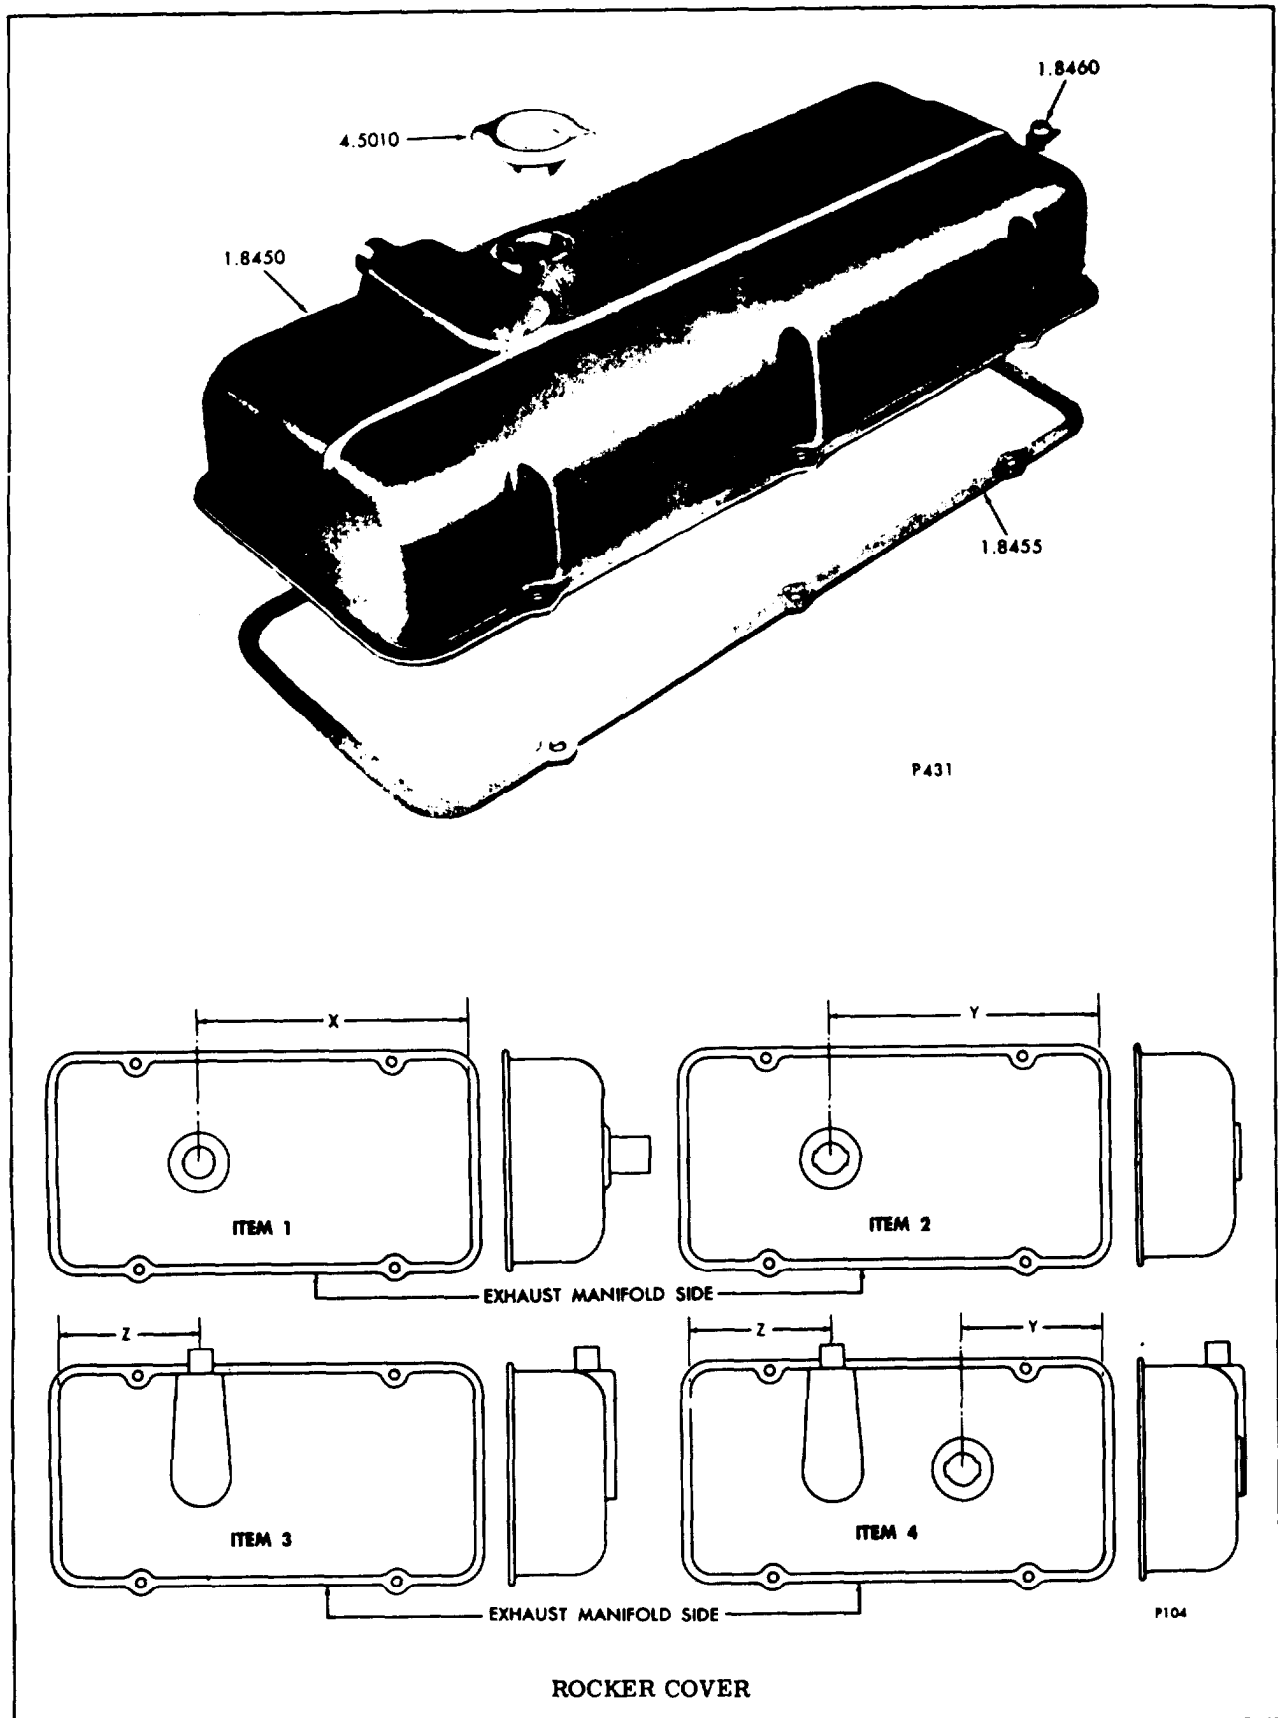

July, 1971

Fig. 9D of 1.0000

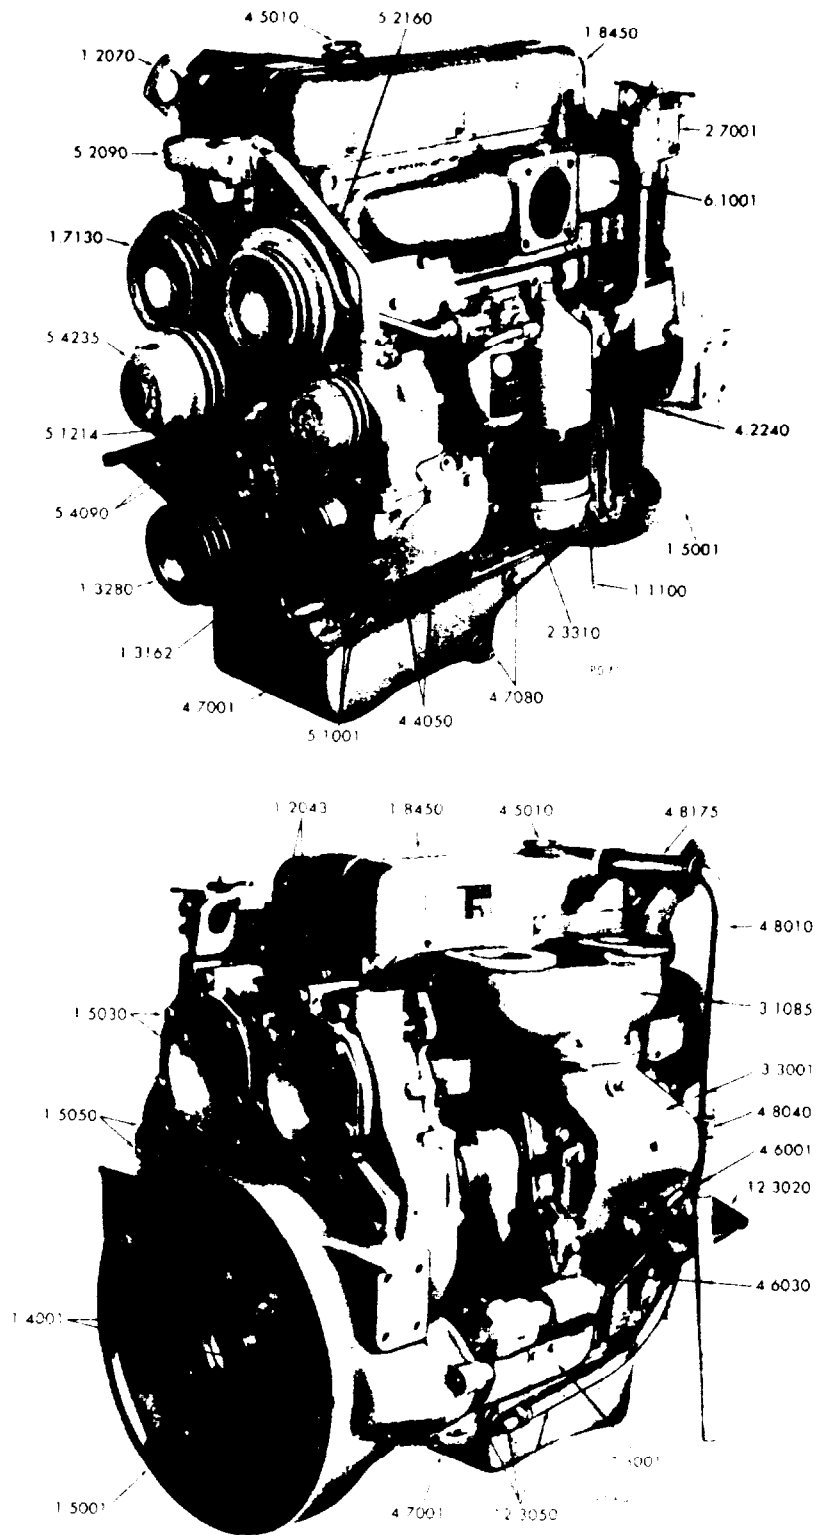

TYPICAL 4 CYLINDER FAN TO FLYWHEEL INDUSTRIAL UNIT



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY		
1A,B	5196490	<u>1.1001</u> BLOCK ASSY., CYLINDER  FOR COMPONENTS OF SERVICE CYLINDER BLOCK ASSEMBLIES REFER TO ASSEMBLY BREAKDOWN PAGES AS INDICATED BELOW.  BLOCK ASSY. (PAGE A2)	1		
		<u>1.1002</u> GASKET KIT, ENGINE OVERHAUL  CONSISTS OF NECESSARY GASKETS FOR ONE ENGINE OVERHAUL  GASKET KIT	AR		
1B,7C	5121366 5121459 454813 103321	<u>1.1020</u> PLATE, CYLINDER BLOCK END  A PLATE ASSY. INCLUDES PLUG NUTS.  PLATE ASSY. (RC-RD-LC-LD ENG.) NUT, PLUG (3/8"-24) BOLT, 3/8"-16x7/8" (12.9001) LOCKWASHER, 3/8" (12.9200)	1 8 13 AR		
		1.1030 GASKET, CYLINDER BLOCK END PLATE  GASKET	1		
		1A	5116373	COVER	1
		1A	180120	BOLT, 3/8"-16X3/4" (12.9001)	6
1A	103321	LOCKWASHER, 3/8" (12.9200)	6		
1A	5116380	<u>1.1050</u> GASKET, AIR BOX COVER  GASKET	1		
		<u>1.1060</u> COVER, CYLINDER BLOCK WATER HOLE  COVER (3/8" TAPPED HOLE) BOLT, 5/16"-18X7/8" (12.9001) LOCKWASHER, 5/16" (12.9200)	1 2 2		

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1A	516357	<u>1.1070</u> GASKET, CYLINDER BRICK WATER HOLE COVER GASKET	1
	5196490	<u>A1.1001</u> BLOCK CYLINDER BLOCK ASSY. (3-53)	1
		THE FOLLOWING ITEMS ARE ASSEMBLED TO THE CYLINDER BLOCK:	
3A	5116142	CAP, MAIN BEARING (UNFINISHED) (1.3110)	4
	5198209	BEARING SET, CAMSHAFT (1.7010)	1
	141346	PIN, 3/16"X1/2" DOWEL (12.9290)	4
	5116199	BOLT, MAIN BEARING CAP (1.3140)	8
		THE FOLLOWING ITEMS ARE "SHIPPED LOOSE" WITH THE CYLINDER BLOCK.	
	5146437	ELBOW, AIR BOX DRAIN TEE	1
	3231135	TEE, 1/4" INV. FL. (7.4586)	1
	141346	PIN, 3/16"x1/2" DOWEL (12.9290)	4
1A,B	5146900	PIN, 3/8"X1 1/8" DOWEL (12.9290)	4
	114981	DRAINCOCK, 1/8" (12.9510)	1
	5145009	PLUG, 1/8" PIPE (12.9550)	7
	5145010	PLUG, 1/4" PIPE (12.9550)	1
	5150131	PLUG, 7/16" CUT (OIL HOLES)	2
	5121316	PLUG, 5/8"X13/32"	2
		1.1100 TUBE, AIR BOX DRAIN	
10G	5132286	TUBE (DEV. L. 12.00")	1
	137421	ELBOW, 1/4" WV. FL. TUBE 90 DEG. (12.9480)	1
	137397	NUT, 1/4" INV. FL. TUBE (12.9500)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>1.2001</u> HEAD ASSY. CYLINDER	
		FOR COMPONENTS OF SERVICE CYLINDER HEAD ASSEMBLIES REFER TO ASSEMBLY BREAKDOWN PAGE A5	
2A	5198203	HEAD ASSY. (4 VALVE) (3-53)	1
	5144425	ADAPTOR, FUSE PLUG	1
	5198655	PLUG, FUSE PLUG	1
2A	5145009	PLUG, 1/8" PIPE (12.9550)	2
2A	5121182	PLUG, 1/4" HEX. SKT.. PIPE (2.4015)	7
2A	5154453	PLUG, 3/8"-16 SL. HDLS.	3
2A	5151449	PLUG, 13/16" CUP (1.1001)	3
	5139997	PLUG, 7/8" DIA. CUP (STAINLESS)	3
		<u>1.2002</u> GASKET KIT, CYLINDER HEAD OVERHAUL	
		CONSISTS OF ALL GASKETS NECESSARY To REPLACE ONE CYLINDER HEAD.	
	5199811	GASKET KIT, CYLINDER HEAD	AR
		<u>1.2005</u> NOZZLE, CYLINDER HEAD WATER	
	5119293	NOZZLE	4
		<u>1.2010</u> GASKET, CYLINDER HEAD COMPRESSION	
1B	5121254	GASKET	3
		<u>1.2020</u> GASKET SET, CYLINDER HEAD OIL	
1A	5116290	RING, SEAL (END WATER HOLE)	4
1A	5121207	RING, SEAL (CENTER WATER HOLE)	4
1B	5116122	RING, SEAL (OIL HOLE)	2
1A	5116292	RING, SEAL	1
		<u>1.2030</u> BOLT, CYLINDER HEAD	
2A	5121263	BOLT, 5/8"-11X6 1/4" (12 FT. HD.)	8
		<u>1.2043</u> COVER, CYLINDER HEAD WATER HOLE	
10G	5123352	COVER (3/8" PIPE TAP)	1
10G	5145010	PLUG, 1/4" PIPE HEX. SOC. HD. (12.9550)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>1.2043</u> COVER, CYLINDER HEAD WATER HOLE (CONT.)	
10G	5145011	PLUG, 3/8" PIPE SQ. HD. (12.9550)	2
10G	5145012	PLUG, 1/2" PIPE SQ. HD. (12.9550)	1
	179839	BOLT, 3/8"-16x1" (12.9001)	2
2A	103321	LOCKWASHER, 3/8" (12.9200)	2
		<u>1.2044</u> GASKET, CYLINDER HEAD WATER HOLE COVER	
	5116242	GASKET	1
		<u>1.2045</u> TUBE, INJECTOR HOLE	
2A	5.199527	TUBE KIT (INCLUDES SEAL RING IN 1.2046) (2.1290)	3
		<u>1.2046</u> RING, INJECTOR HOLE TUBE SEAL	
2A	5160037	RING (PART OF KIT IN 1.2045) (2.1300)	3

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		B <u>1.2001</u> HEAD ASSEMBLY, CYLINDER	
	5198203	HEAD ASSY. (4 VALVE)	1
		THE FOLLOWING ITEMS ARE ASSEMBLED 'ID THE CYLINDER HEAD.	
	5198655	PLUG, FUSE	1
	5154453	PLUG, 3/8"-16 SPECIAL	4
	5145009	PLUG, 1/8" PIPE (12.9550)	2
	5199527	TUBE KIT (INCLUDES RING 5160037) (1.2045)	3
	5160037	RING (2.2046)	3
	5116361	INSERT, EXHAUST VALVE (1.8330)	12
	5131961	GUIDE, EXHAUST VALVE (1.8320)	12
	5119293	NOZZLE, WATER (DOUBLE OUTLET) (1.2005)	4
		THE FOLLOWING ITEMS ARE "SHIPPED LOOSE" WITH THE CYLINDER HEAD.	
	5121182	PLUG, 1/4" PIPE (2.4015)	6
	5151449	PLUG, 13/16" CUP SPECIAL	3
	5116262	ADAPTOR, CYLINDER HEAD GOVERNOR CONTROL LINK (2.7830)	1
	5121252	ADAPTOR, CYLINDER HEAD GOVERNOR CONTROL LINK (2.7830)	1
	5111467	SEAT, EXHAUST VALVE SPRING (1.8360)	12
		<u>1.2070</u> BRACKET, ENGINE LIFTER FRONT	
	5129750	BRACKET	1
	5164294	SPACER, 1/8" THICK (7.1581)	2
	9409028	BOLT, 3/8"-16x1" AA LOCK (12.9001)	2
		<u>1.2080</u> BRACKET, ENGINE LIFTER REAR	
2B	5119379	BRACKET (ITEM 7)	1
	9409028	BOLT, 3/8"-16X1" (12.9001)	2

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>1.3001</u> CRANKSHAFT ASSY.  A CRANKSHAFT ASSY. INCLUDES PLUG AND DOWELL IN 1.3001. WREN REPLACING A CRANKSHAFT ASSY. INCLUDE AN OIL PUMP DRIVE GEAR IN 4.1310	
3A	5116447	CRANKSHAFT ASSY.	1
	5198502	SLEEVE, CRANKSHAFT FRONT OIL SEAL (1.3056) (Use with 5198503 SEAL)	1
3A	444687	PLUG, 1/8" PIPE (12.9550)	3
		<u>1.3040</u> SEAL, CRANKSHAFT OIL - FRONT	
	5198503	SEAL (SINGLE LIP O.S., USE WITH 5198502 SLEEVE)	1
3A	5116224	SEAL	1
	5148314	SEAL (W/EXCLUDER LIP)	1
		<u>1.3055</u> SPACER, CRANKSHAFT FRONT OIL SEAL	
	5198502	SLEEVE (USE WITH 5198503 SEAL) (1.3056)	1
		<u>1.3060</u> SEAL, CRANKSHAFT OIL - REAR	
3A,5A	5116229	SEAL (SINGLE LIP, STANDARD)	1
3A,5A	5196852	SEAL (SINGIE LIP, O.S., USE WITH 5196851 SLEEVE)	AR
3A,5A	5199477	SEAL (DOUBIE LIP, O.S., USE WITH 5196851 SLEEVE)	AR
		<u>1.3066</u> SLEEVE, CRANKSHAFT REAR OIL SEAL	
	5196851	SLEEVE (WITH O.S. OIL SEAL)	AR
		<u>1.3090</u> SHELL, CRANKSHAFT MAIN BEARING  A SHELL SET CONSISTS OF ONE UPPER AND ONE LOWER SHELL.	
3A	5116259	SHELL, UPPER (STANDARD)	4
3A	5116260	SHELL, LOWER (STANDARD)	4
3A	5196644	SHELL, UPPER (.002" U.S.)	AR
3A	5196645	SHELL, LOWER (.002" U.S.)	AR
3A	5196646	SHELL, UPPER (.010" U.S.)	AR

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>1.3090</u> SHELL, CRANKSHAFT MAIN BEARING (CONT'D)	
3A	5196647	SHELL, LOWER (.010" U.S.)	AR
3A	5196648	SHELL, UPPER (.020" U.S.)	AR
3A	5196649	SHELL, LOWER (.020" U.S.)	AR
3A	5196650	SHELL, UPPER (.030" U.S.)	AR
3A	5196651	SHELL, LOWER (.030" U.S.)	AR
	5195928	SHELL SET (STANDARD) (1 HOLE)	AR
	5196660	SHELL SET (.002" U.S.)	AR
	5196661	SHELL SET (.010" U.S.)	AR
	5196662	SHELL SET (.020" U.S.)	AR
	5196663	SHELL SET (.030" U.S.)	AR
		<u>1.3100</u> WASHER, CRANKSHAFT MAIN BEARING THRUST	
3A	5116197	WASHER (STANDARD)	4
3A	5196755	WASHER (.005" O.S.)	AR
3A	5196756	WASHER (.010" O.S.)	AR
3A	141346	PIN, 3/16"X1/2" DOWEL (12.9290)	4
3A	5149149	PIN, 7/32"X1/2" DOWEL (1/32" O.S.)	AR
		<u>1.3110</u> CAP, CRANKSHAFT MAIN BEARING	
3A	5195935	CAP	4
	5116142	CAP (UNFINISHED)	AR
		<u>1.3140</u> BOLT, CRANKSHAFT MAIN BEARING CAP	
3A	5116199	BOLT	8
		<u>1.3145</u> GEAR, CRANKSHAFT TIMING	
3A,7C	5116195	GEAR	1
	127559	KEY, 1/4"X3/4" WOODRUFF (12.9350)	1
		<u>1.3161</u> COVER, ENGINE FRONT-UPPER	
		AN UPPER COVER ASSY. INCLUDES PINS AND PLUGS IN 1.3161.	
	5101347	COVER ASSY.	1
	5146900	PIN, 3/8"X1 1/8" DOWEL (12.9290)	2
	186622	BOLT, 3/8"-16x1 1/4" (12.9001)	9
	186628	BOLT, 3/8"-16X1 1/2" (12.9001)	4
	103321	LOCKWASHER, 3/8" (12.9200)	13
	9414322	WASHER, 3/8" I.D:X .744 O.D. X .63 THICK (12.9190)	13

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
4D		<u>1.3162</u> COVER, ENGINE FRONT-LOWER	
		A LOWER COVER ASSY. INCLUDES ITEMS IN 4.1690 THRU 4.7120	
	5197415	COVER ASSY.	1
	5145009	PLUG, 1/8" PIPE HEX SOC. HD. (12.9550)	1
	186282	BOLT, 3/8"-16X3 1/4" (12.9001)	7
	103321	LOCKWASHER, 3/8" (12.9200)	7
	5146648	PLUG, 1/2" - 14 HEX SOCKET	7
		<u>1.3170</u> GASKET, ENGINE FRONT COVER	
	5121082	GASKET (UPPER)	1
	5116386	GASKET (LOWER)	1
3A		<u>1.3280</u> PULLEY, CRANKSHAFT	
	5116484	PULLEY (5.38" DIA., 2 GROOVES)	1
		<u>1.3290</u> RETAINER, CRANKSHAFT PULLEY	
3A	5180291	RETAINER (WASHER)	1
3A	5180629	% BOLT, 3/8"-16X1 3/4" L.	1
3A	271632	BOLT, 3/4"-16X1 3/4" (12.9001) % OPTIONAL HAS COUNTERBORE FOR HANDTACHOMETER	1
		<u>1.3320</u> BELT, CRANKSHAFT PULLEY	
		SIZES GIVEN ARE EFFECTIVE LENGTH AT WIDTH SHOWN. ALL BELTS ARE "PREMIUM" POLYESTER BELTS, UNLESS INDICATED (M.S.) "MILITARY STANDARD.	
	5126447	BETL SET (2 BELTS) (35.00" L., .500" W.)	



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
5A	5126671	<u>1.4001</u> FLYWHEEL  INCLUDES GEAR IN 1.4010. "C" INDICATES A CHAMFERED ASSY. "NC" IS NON-CHAMFERED.  PLATE, SCUFF (BOLT RETAINER)	1
5A	9412018	BOLT, LOCK (2 1/4" L.)	6
5A	5129058	FLYWHEEL ASSY. (SAE #3) (NC)	1
5A	5116301	<u>1.4010</u> GEAR, FLYWHEEL RING  GEAR (SAE #3 - 126 TEETH)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
5A		<u>1.5001</u> HOUSING, FLYWHEEL	
	5132965	HOUSING (SAE #3)	1
	5145011	PLUG, 3/8" PIPE (12.9550)	1
	427588	BOLT, 3/8"-16X2 1/2" (12.9001)	6
	5101779	BOLT, 3/8"-16X7/8" HEX. LOCK(12.9001)	1
	9409126	BOLT, 5/16"-18X2 1/2" (12.9001)	2
	9414215	BOLT, 3/8"-16X 2 1/2" (12.9001),	4
	5170489	BOLT, 3/8"-24X3 9/16"LOCK (12.9001)	3
	179838	BOLT, 3/8"-16X7/8" (12.9001)	7
	103321	LOCKWASHER, 3/8" (12.9200)	AR
		<u>1.5002</u> SHIM, FLYWHEEL HOUSING TO END PLATE	
	5123802	SHIM	1
		<u>1.5010</u> GASKET, FLYWHEEL HOUSING	
	5121334	GASKET	1
		<u>1.5030</u> COVER, FLYWHEEL HOUSING LARGE HOLE	
	5122281	COVER	2
	179857	BOLT, 7/16"-14X7/8" (12.9001)	2
	122408	BOLT, 1/2"- 13X1" (12.9001)	8
	5150568	WASHER, 7/16" COPPER (2.4050)	2
	103323	LOCKWASHER, 1/2" (12.9200)	8
		<u>1.5040</u> GASKET, FLYWHEEL HOUSING LARGE HOLE COVER	
	5117061	GASKET	2
		<u>1.5050</u> COVER, FLYWHEEL HOUSING SMALL HOLE	
	5116411	COVER	1
	186625	BOLT, 5/16"-18X7/8" (12.9001)	2
	103320	LOCKWASHER, 5/16" (12.9200)	4
	<u>1.5060</u> GASKET, FLYWHEEL HOUSING SMALL HOLE COVER		
5116391	GASKET	2	

FIG	PART NUMBER		QUANTITY
		<u>1.6001</u> CONNECTING ROD ASSY.  QUANTITIES SHOWN ARE PER CNLINDER. A ROD ASSY. INCIUDES CAP AND ORIFICE WHICH ARE NOT SOLD SEPARATELY, PLUS ITEMS IN 1.6001, 1.6010 AND 1.6040.	
6A	5121262	ROD ASSY.	1
6A	5197852	BOLT (3/8"-24X2.76" L.)	2
6A	839103	NUT (3/8"-24 HEX.)	2
		<u>1.6010</u> NOZZLE, CONNECTING ROD SPRAY	
6A	5150140	NOZZLE	2
		<u>1.6040</u> BUSHING, CONNECTING ROD PISTON PIN	
6A	5116181	BUSHING	2
		<u>1.6100</u> SHELL, CONNECTING ROD BEARING  A SHELL SET CONSISTS OF ONE UPPER AND ONE LOWER SHELL.	
6A	5121247	SHELL, UPPER (STD.)	1
6A	5116187	SHELL, LOWER (STD.)	1
6A	5196652	SHELL, UPPER (.002" U.S.)	AR
6A	5196653	SHELL, LOWER (.002" U.S.)	AR
6A	5196654	SHELL, UPPER (.010" U.S.)	AR
6A	5196655	SHELL, LOWER (.010" U.S.)	AR
6A	5196656	SHELL, UPPER (.020" U.S.)	AR
6A	5196657	SHELL, UPPER (.020" U.S.)	AR
6A	5196658	SHELL, UPPER (.030" U.S.)	AR
6A	5196659	SHELL, LOWER (.030" U.S.)	AR
	5195929	SHELL SET (STANDARD)	AR
	5196664	SHELL SET (.002" U.S.)	AR
	5196665	SHELL SET (.010" U.S.)	AR
	5196666	SHELL SET (.020" U.S.)	AR
	5196667	SHELL SET (.030" U.S.)	AR

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
6A	5198877	<p><u>1.6110</u> PISTON ASSY.</p> <p>A PISTON ASSY. INCLUDES BUSHING IN 1.6145 AND RETAINER IN 1.6150. VAPOR BLASTED BUSHINGS (TYPES 58, 59,94) NOT SERVICED SEPARATELY.</p> <p>PISTON ASSY. ("N" ENGINE")</p>	1
	5198822	<p><u>1.6115</u> RING SET, PISTON</p> <p>A PISTON RING SET CONSISTS OF SUFFICIENT RINGS FOR ONE (1) CYLINDER.</p> <p>RING SET</p>	AR
6A	5140340	<p><u>1.6120</u> RING, PISTON COMPRESSION</p> <p>RING (FIRE RING)</p>	1
6A	5116184	<p>RING (CHROMED) (2ND, 3RD, AND 4TH)</p> <p>TWO COMPRESSION GROOVES ONLY.</p>	3
6A	5195933	<p><u>1.6130</u> RING, PISTON OIL CONTROL</p> <p>AN OIL CONTROL RING SET CONSISTS OF RINGS FOR ONE (1) CYLINDER.</p> <p>AN OIL CONTROL RING CONSISTS OF TWO (2) SCRAPERS AND ONE (1) EXPANDER.</p> <p>RING</p>	2
6A	5116189	<p><u>1.6140</u> PIN, PISTON</p> <p>PIN</p>	1
6A	5116181	<p><u>1.6145</u> BUSHING, PISTON PIN</p> <p>BUSHING (1.6040)</p>	2
6A	5180250	<p><u>1.6150</u> RETAINER, PISTON PIN</p> <p>RETAINER</p>	2
6A	5132803	<p><u>1.6180</u> LINER, CYLINDER</p> <p>LINER (STANDARD)</p>	1
6A	5101016	<p>LINER (.010" O.S., O.D.)</p>	AR

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
	5198899	<p><u>1.6182</u> CYLINDER KIT</p> <p>A CYLINDER KIT CONSISTS OF ITEMS IN 1.6110, 1.6115, 1.6120, 1.6140, 1.6180 AND 1.6190 FOR ONE CYLINDER.</p> <p>CYLINDER KIT ("N" ENGINES)</p> <p><u>1.6190</u> SEAL, CYLINDER LINER</p>	AR
6A	5121256	SEAL	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>1.7001</u> CAMSHAFT ASSY. A CAMSHAFT ASSY. INCLUDES PLUG IN 1.7001	
7A	5126929	CAMSHAFT ASSY. (RB-RC-LA-LD ENG.)	1
	5151277	PLUG (1/2" DRIVE)	2
		<u>1.7010</u> BEARING, CAM AND BALANCER SHAFT A SET INCLUDES ALL END AND INTERMEDIATE BEARINGS WHICH ARE NOT SOLD SEPARATELY.	
7A	5198209	BEARING SET (STD. I.D., STD. O.D.)	1
7A	5198980	BEARING SET (STD. I.D., .010" O.S., O.D.)	AR
7A	5198470	BEARING SET (.010" U.S., I.D., STD. O.D.)	AR
7A	5198471	BEARING SET (.020" U.S., I.D., STD. O.D.)	AR
		<u>1.7030</u> WASHER, CAM AND BALANCER SHAFT END BEARING THRUST	
7A	5116198	WASHER	2
7A	9409028	BOLT, 3/8"-16x1" (12.9001)	4
		<u>1.7060</u> SEAL, CAM AND BALANCER OIL	
4A	5116476	SEAL, OIL (FRONT)	2
		<u>1.7061</u> SLINGER, CAM AND BALANCER SHAFT OIL	
7A	5134388	SLINGER	2
		<u>1.7062</u> SPACER, CAM AND BALANCER SHAFT PULLEY	
7A	5121071	SPACER	2
		<u>1.7080</u> SHAFT, BALANCER	
7A	5121073	SHAFT	1
		<u>1.7130</u> PULLEY, FRONT BALANCER	
7A	5121108	PULLEY	2
7A	218217	KEY, 3/16"X5/8" WOODRUFF (12.9350)	2
7A	5150087	NUT (1.7140)	2

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>1.7190</u> WEIGHT, REAR BALANCER	
7C	5119277	WEIGHT (CRESCENT SHAPE, .2391" THICK, 2 HOLES)	2
7C	9409028	BOLT, 3/8"-16X1" LOCK (12.9001)	4
		<u>1.7200</u> GEAR, CAMSHAFT AND BALANCER SHAFT	
7A,C	5133387	GEAR (R.H. HELIX) (CAMSHAFT LB-LC-RA-RD, BALANCER LA-LD-RB-RC ENG.)	1
7A,C	5133388	GEAR (L.H. HELIX) (CAMSHAFT LA-LD-RB-RC, BALANCER LB-LC-RA-RD ENG.)	1
7A	218217	KEY, 3/16"X5/8" WOODRUFF (12.9350)	2
7A	5150087	NUT (1.7140)	2
		<u>1.7202</u> SPACER, CAMSHAFT GEAR	
7A	5121077	SPACER	1
		<u>1.7207</u> RETAINER, CAM AND BALANCER SHAFT GEAR NUT	
7A	5172734	RETAINER	2
7A	181360	BOLT, 3/8"-24X3/4" (12.9001)	4
7A	103321	LOCKWASHER, 3/8" (12.9200)	4
		<u>1.7220</u> GEAR ASSY., IDLER	
		INCLUDES BEARING IN 1.7225.	
7C	5135227	GEAR ASSY. (L.H. HELIX)	1
		<u>1.7225</u> BEARING, IDLER GEAR	
7F	5196793	BEARING	1
7F	5132504	WASHER (THRUST)	2
		<u>1.7250</u> HUB, IDLER GEAR	
7F	5124458	HUB	1
7F	5157244	BOLT (4.4190)	1
		<u>1.7604</u> GASKET, ACCESSORY DRIVE	
	5117061	GASKET (1.5040)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>1.7622</u> ADAPTOR, ACCESSORY DRIVE	
	5122386	ADAPTOR (HYDRAULIC PUMP) (12.5020)	1
	103196	STUD, 3/8"X.1 9/16" (12.9117)	2
	103321	LOCKWASHER, 3/8" (12.9200)	2
	117049	NUT, 3/8"-24 HEX. (12.9120)	2
		<u>1.7623</u> GASKET, ACCESSORY DRIVE ADAPTOR	
	5188755	GASKET, HYDRAULIC PUMP TO ADAPTOR (12.5005)	1
		<u>1.7630</u> PLATE, ACCESSORY DRIVE	
8A	5170450	PLATE	1
	5140814	SPACER	1
8A	5145091	BOLT, 3/8"-24X1.38" (12.5015)	4
		<u>1.7635</u> COUPLING, ACCESSORY DRIVE	
	5144866	COUPLING HUB (12.4001)	1
	5141733	COUPLING	1
	103375	PIN, 3/32"X1 1/4" (12.4001)	1
	180176	BOLT, 1/2"-13x1 3/8" (12.9001)	4
		<u>1.7670</u> GEAR, ACCESSORY DRIVE	
	5140971	GEAR, HYDRAULIC PUMP DRIVE (12.5030)	1
	455921	PIN, 1/8"X1 1/2" (3.3063)	1



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>1.8060</u> ARM ASSY. EXHAUST VALVE  INCLUDES ITEMS IN 1.8130, 1.8140, 1.8150 AND 1.8343.	
	5135268	ARM ASSY. (RIGHT)(4 VALVE)	3
	5135267	ARM ASS. (LEFT)(4 VALVE)	3
		<u>1.8080</u> ARM ASSY., INJECTOR ROCKER  INCLUDES ITEMS IN 1.8110 THRU 1.8150.	
9A	5179954	ARM ASSY.	3
		<u>1.8110</u> BUSHING, INJECTOR ROCKER ARM-LARGE	
9A	5150318	BUSHING	3
		<u>1.8120</u> BUSHING, INJECTOR ROCKER ARM-SMALL	
9A	5150311	BUSHING	3
		<u>1.8130</u> CLEVIS, INJECTOR AND EXHAUST VALVE ROCKER ARM	
9A	5150312	CLEVIS	9
		<u>1.8140</u> BUSHING, INJECTOR AND EXHAUST VALVE ROCKER ARM CLEVIS	
9A,C	5123700	BUSHING	15
		<u>1.8150</u> PIN, INJECTOR AND EXHAUST VALVE ROCKER ARM CLEVIS	
9A	5150314	PIN (CLEVIS END)	9
9A,C	5123711	PIN (BRIDGE END)	6
		<u>1.8160</u> SHAFT, ROCKER  A SHAFT ASSY. INCLUDES PLUG IN 1.8160.	
9A	5116072	SHAFT ASSY.	3
	5151272	PLUG	3


FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUALITY
		<u>1.8170</u> BRACKET, ROCKER SHAFT	
9 A	5116128	BRACKET	6
9 A	5119198	BOLT	6
		<u>1.8180</u> ROD, PUSH	
9 A	5128640	ROD	9
9 A	5151601	LOCKNUT	9
		<u>1.8190</u> SPRING, PUSH ROD	
9 A	5108918	SPRING (2 ORANGE STRIPES) (VALVE AND INJECTOR)	9
		<u>1.8200</u> SEAT, PUSH ROD SPRING - UPPER	
9 A	5108919	SEAT (VALVE AND INJECTOR)	9
		<u>1.8210</u> SEAT, PUSH ROD SPRING-LOWER	
9 A	5123250	SEAT	9
		<u>1.8250</u> RETAINER, PUSH ROD	
9 A	5150303	RETAINER (SNAP RING)	9
		<u>1.8260</u> FOLLOWER ASSY., CAM	
9 A	5115087	FOLLOWER ASSY. (INCLUDES ROLLER SET)	9
		<u>1.8265</u> ROLLER SET, CAM FOLLOWER	
		INCLUDES ROLLER WITH BUSHING AND PIN.	
	5195220	ROLLER SET (STANDARD)	9
		<u>1.8300</u> GUIDE CAM FOLLOWER	
9 A	5116125	GUIDE	3
9 A	443603	BOLT, 1/4"-20x3/4" (12.9001)	6
9 A	103319	LOCKWASHER, 1/4" (12.9200)	6

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
9C	5199323	<u>1.8310</u> VALVE, EXHAUST VALVE (INCLUDES LOCKS)	12
9C	5131961 5198529 5131973 5199912	<u>1.8320</u> GULDE, EXHAUST VALVE A VALVE GUIDE KIT INCLUDES 1-5131961 GUIDE AND 1-5131973 SEAL. INSTALLER (PKG.) CONSISTS OF 100 PIECES. GUIDE KIT, VALVE GUIDE AND SEAL SEAL, VALVE GUIDE (USE WITH 5131961) INSTALLER, EXHAUST VALVE SEAL (4 VALVE)	12 12 12 AR
9C	5116361	<u>1.8330</u> INSERT, EXHAUST VALVE INSERT (STANDARD)	12
9C	5196752	INSERT (.010" OVERSIZE ON O.D.)	AR
9C	5144019	<u>1.8340</u> SPRING, EXHAUST VALVE SPRING (RED AND GREEN STRIPE)	12
9C	5135262	<u>1.8343</u> BRIDGE, EXHAUST VALVE BRIDGE	6
9C	5123330	<u>1.8350</u> CAP, EXHAUST VALVE SPRING CAP	12
	5111467	<u>1.8360</u> SEAT, EXHAUST VALVE SPRING SEAT (0.60" THICK)	12
9C	5116341	<u>1.8370</u> LOCK, EXHAUST VALVE SPRING LOCK (HALVES)	24
9D	5125355	<u>1.8450</u> COVER, ROCKER COVER, (ITEM 2) (Y-6")	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
9D	5147994	<u>1.8455</u> GASKET, ROCKER COVER GASKET	1
9D	5100104	<u>1.8460</u> BOLT, ROCKER COVER SCREW ASSY.	4

## GROUP NOMENCLATURE

<b>2.0000</b>	<b>FUEL SYSTEM</b>
<b>2.1000A</b>	<b>Fuel Injector</b>
<b>2.2000</b>	<b>Fuel Pump</b>
<b>2.2000A</b>	<b>Fuel Pump Drain</b>
<b>2.3000A</b>	<b>Fuel Filter</b>
<b>2.4000</b>	<b>Fuel Manifold and/or Connections</b>
<b>2.5000A</b>	<b>Fuel lines and Fuel Cooler</b>
<b>2.7000A</b>	<b>Mechanical Governor</b>
<b>2.9000</b>	<b>Injector Controls</b>
<b>2.9000A</b>	<b>Throttle Controls</b>

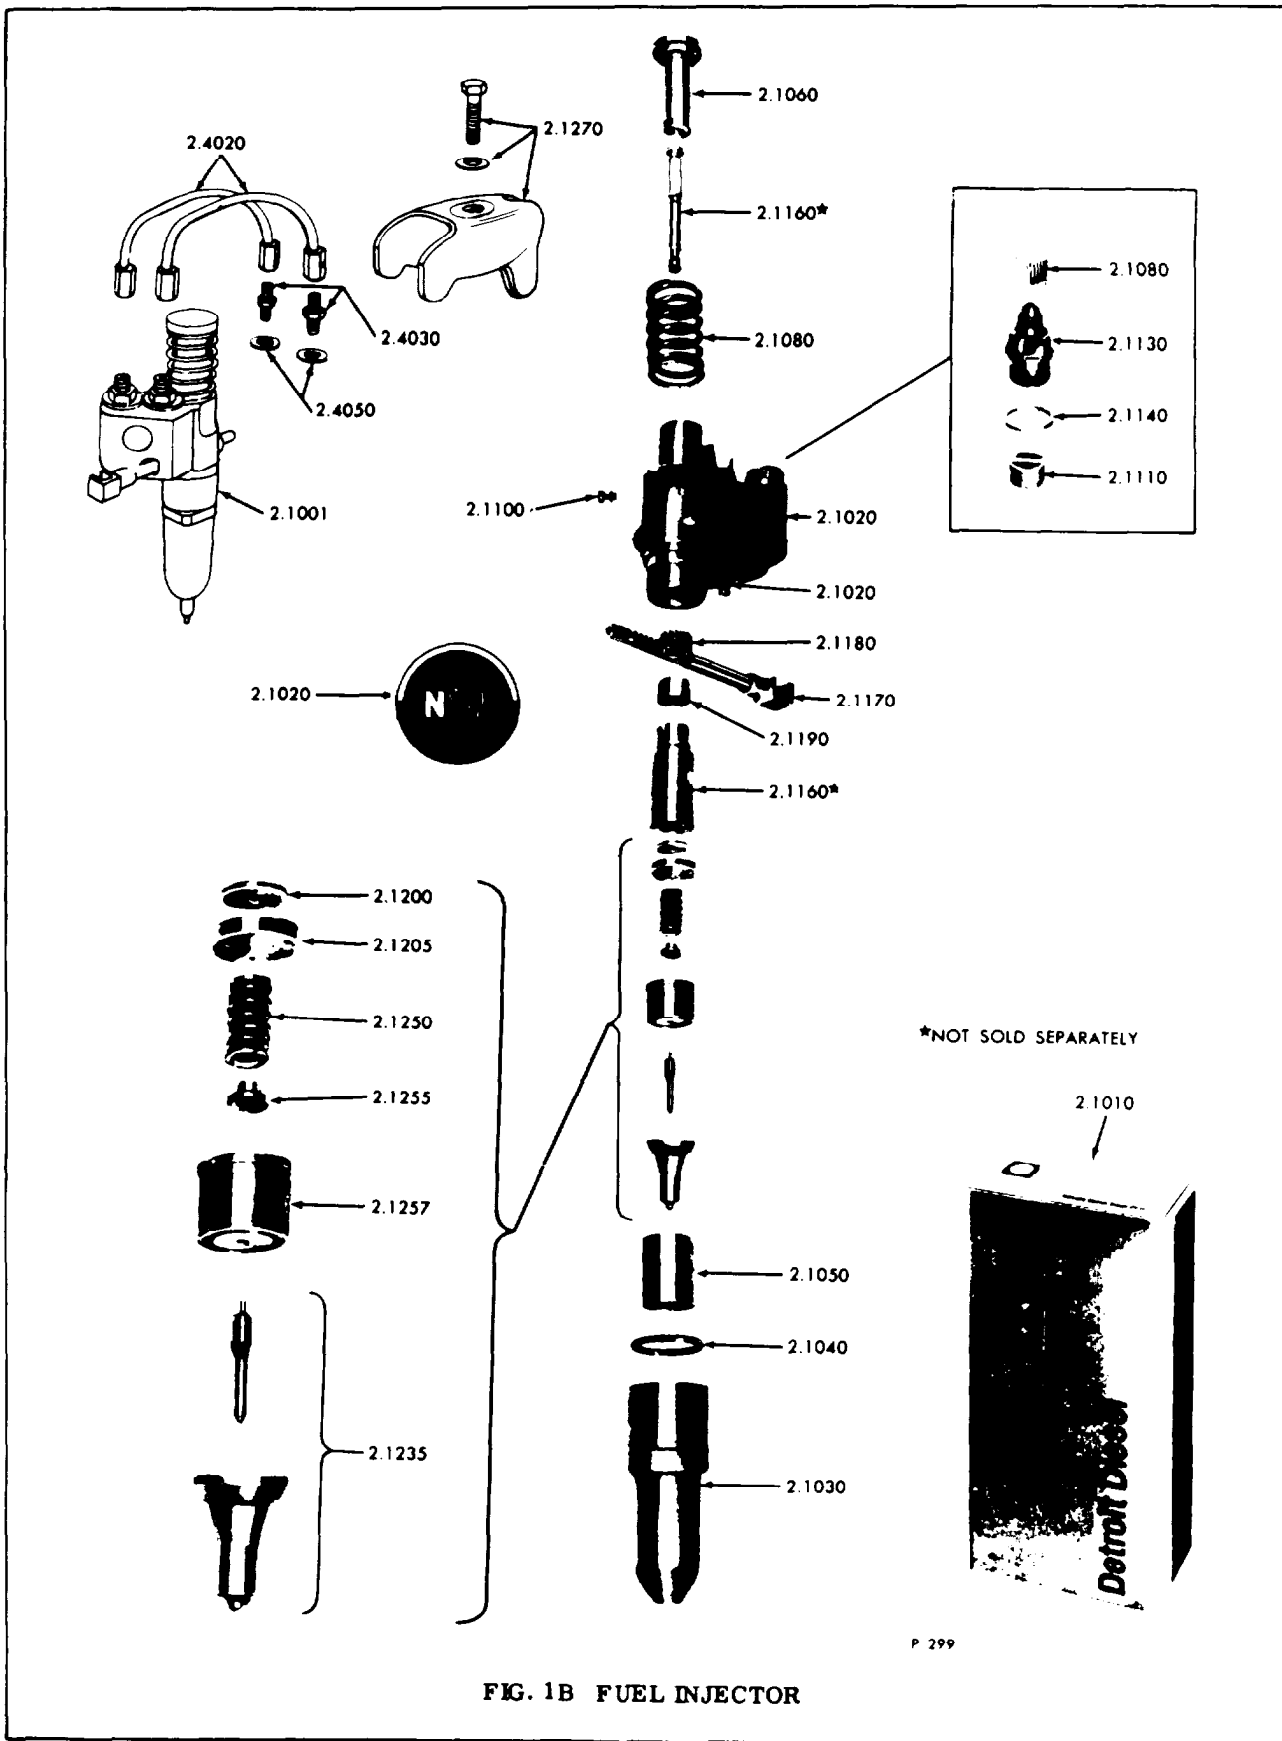

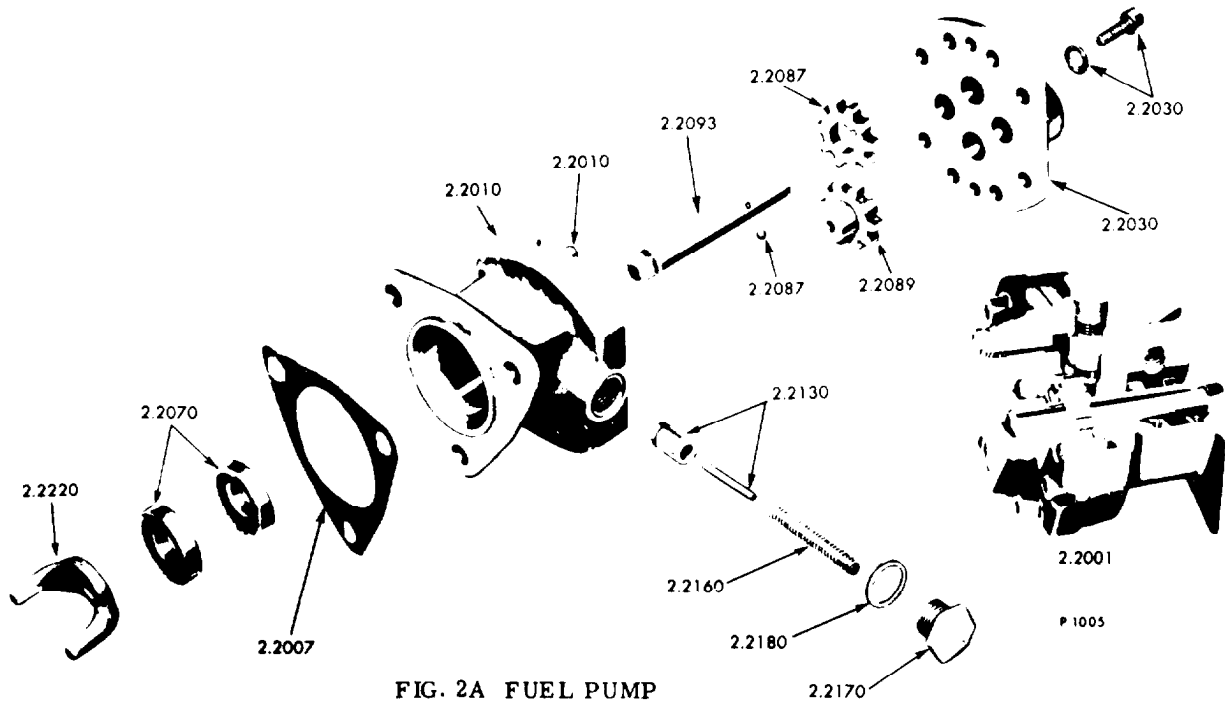


FIG. 2A FUEL PUMP

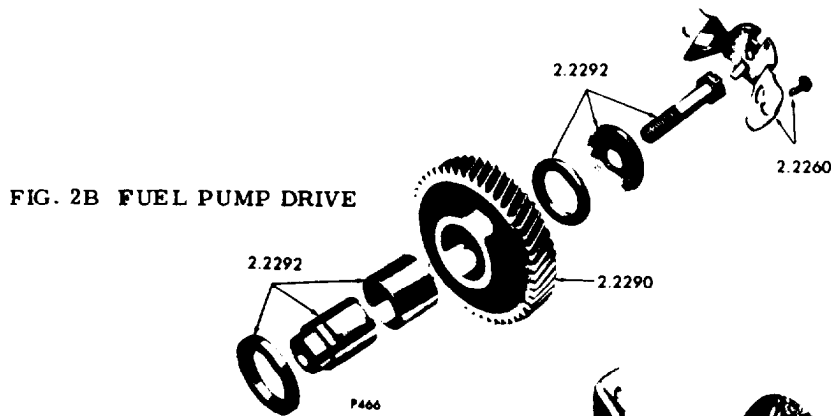


FIG. 2B FUEL PUMP DRIVE



FIG. 2C FUEL PUMP DRIVE

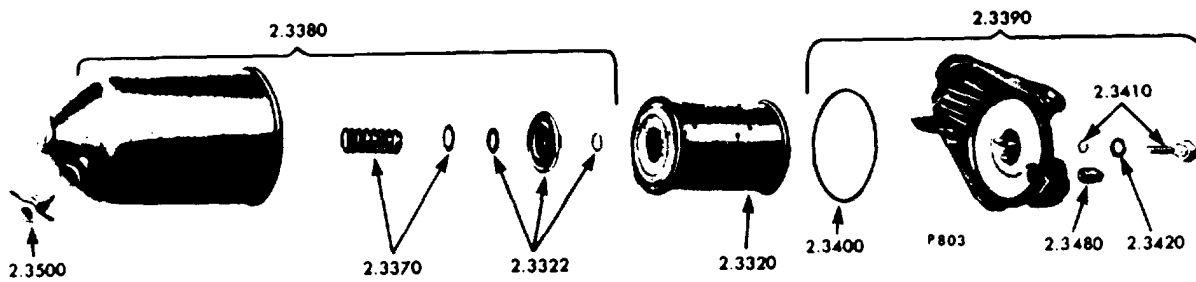


FIG. 3B FUEL FILTER (Canister Type Element)

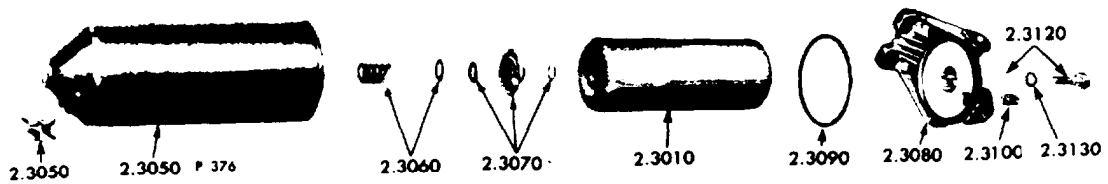


FIG. 3C FUEL STRAINER (Stock Type Element)



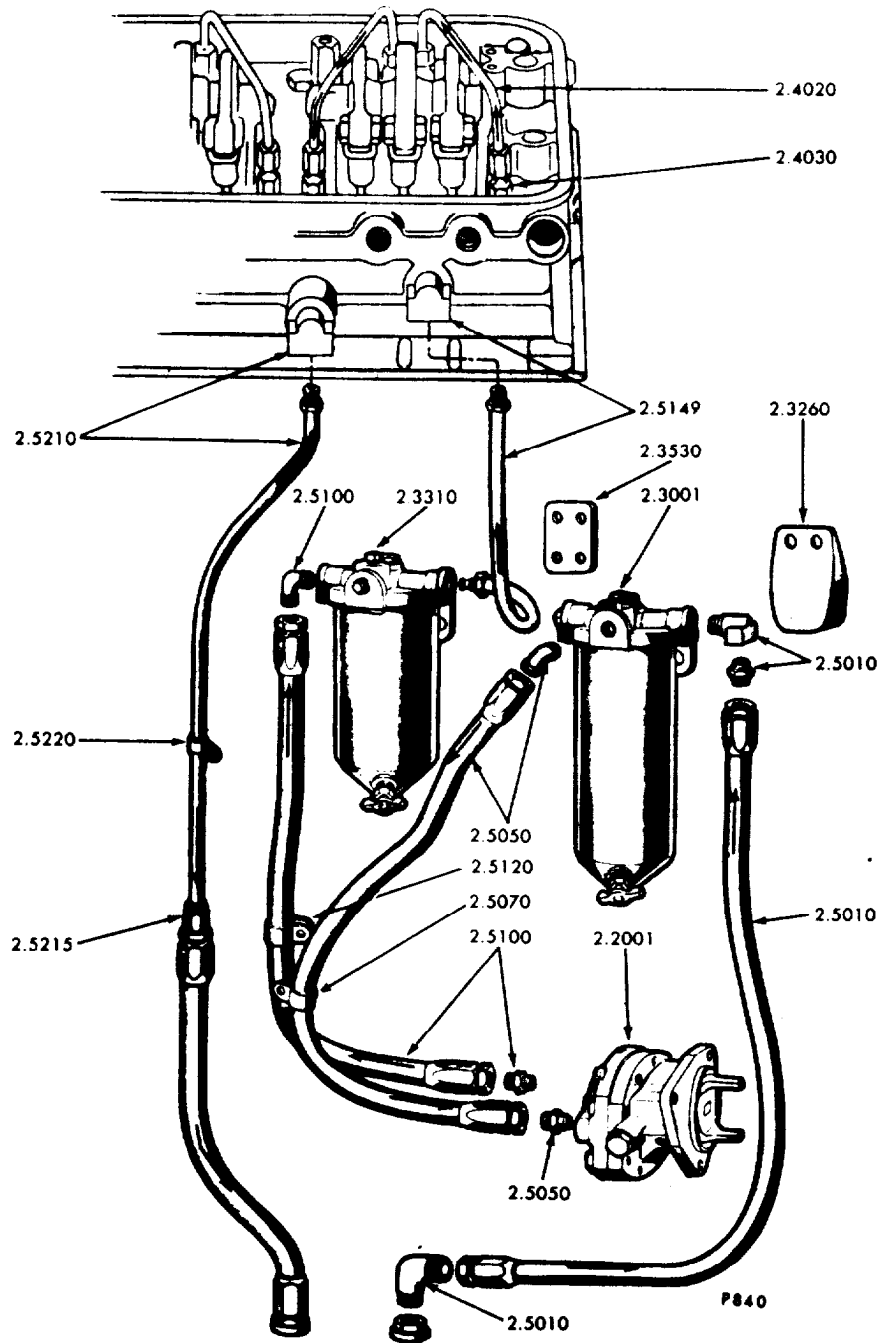


FIG. 4A TYPICAL FUEL SYSTEM (In-line Engine)


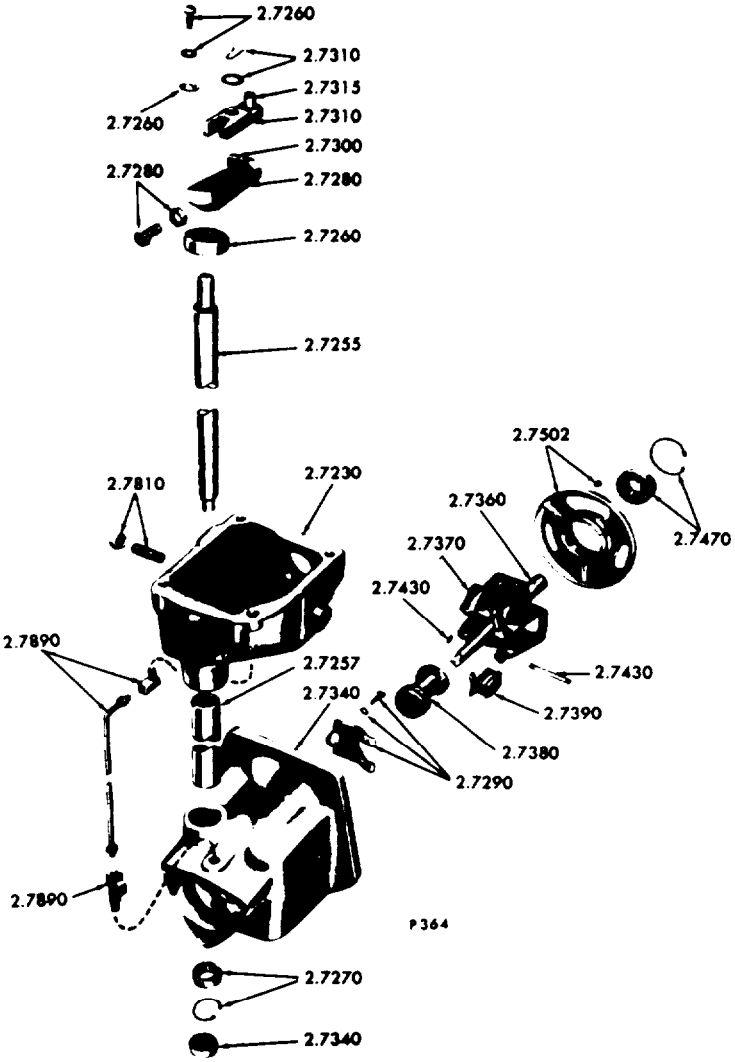


FIG. 5D MECHANICAL GOVERNOR HOUSING  
WEIGHTS AND LEVER (Closed Linkage)

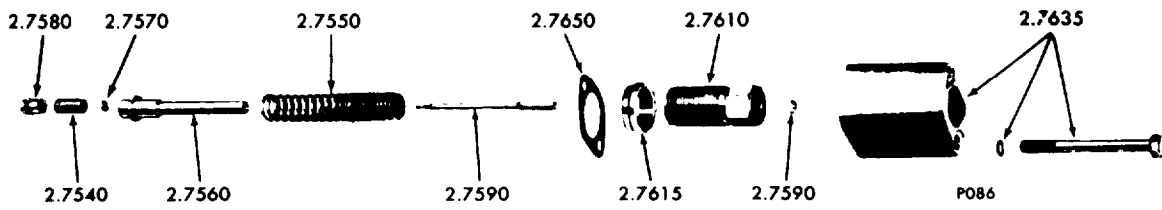

INDUSTRIAL TYPE

FIG. 5G LIMITING SPEED GOVERNOR SPRING AND HOUSING

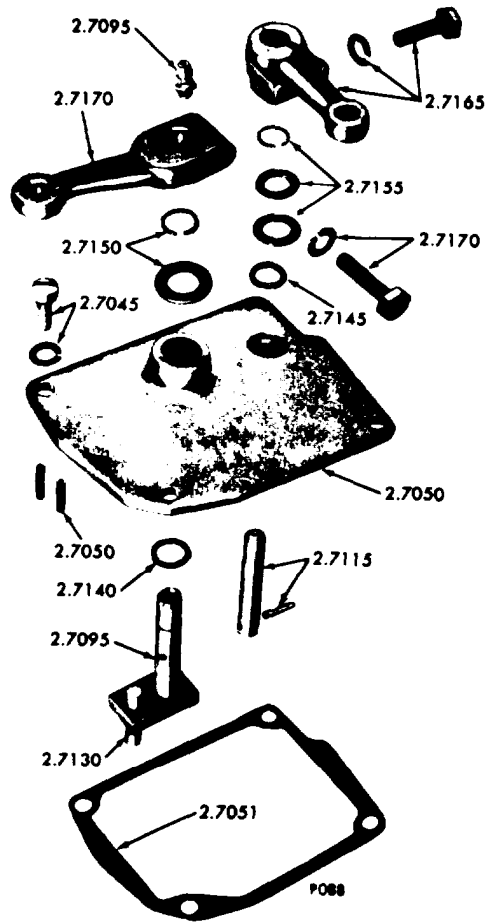


FIG. 5H MECHANICAL GOVERNOR COVER (Double Lever)

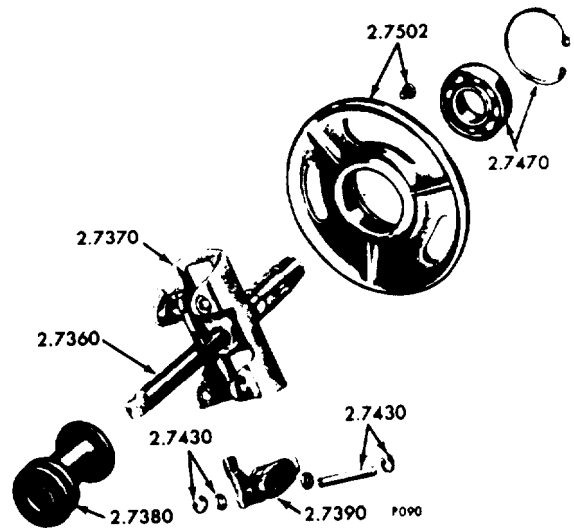


FIG. 5L GOVERNOR WEIGHT  
SHAFT AND CARRIER

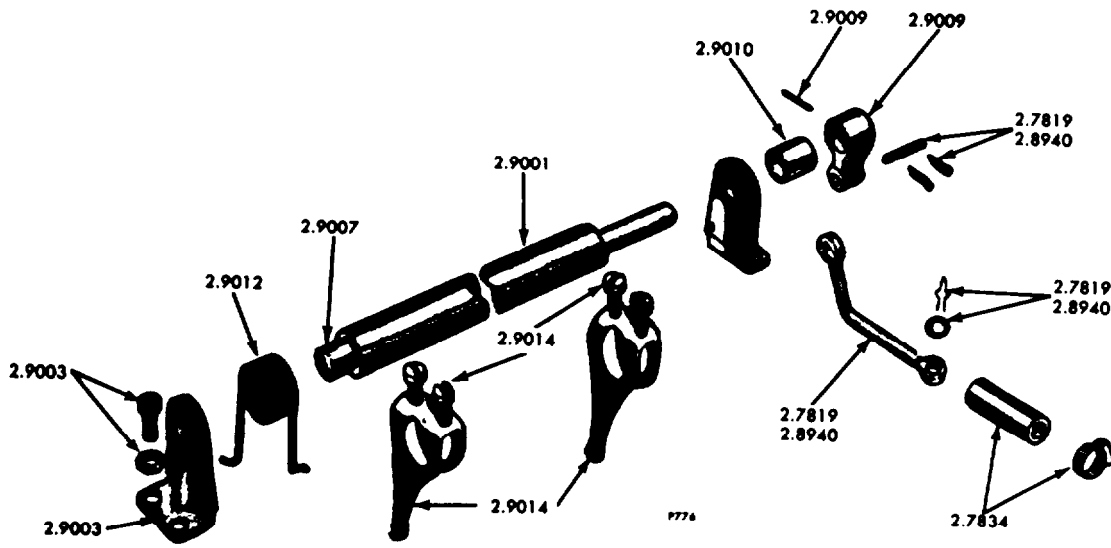


FIG. 7A INJECTOR CONTROL TUBE (Inline Engine)

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1B	5228773	<p><u>2.1001</u> INJECTOR ASSY.</p> <p>FOR TYPE 104 USE TYPE 93.            QUANTITIES SHOWN ARE PER CYLINDER.            INCLUDES ITEMS IN 2.1020 THRU            2.1265.</p> <p>* INJECTOR ASSY (N45)            * THESE INJECTORS HAVE FILTER            ELEMENT AT FUEL INLET SIDE ONLY.</p>	1
	5228701	<p><u>2.1002</u> OVERHAUL KIT, INJECTOR</p> <p>OVERHAUL KIT CONSISTS OF ONE (1)            SEAL RING, TWO (2) FILTER CAP GASKETS,            TWO (2) FILTER ELEMENTS AND TWO (2)            SHIPPING CAPS.</p> <p>OVERHAUL KIT</p>	AR
1B	5228583	<u>2.1020</u> BODY ASSY., INJECTOR	1
1B	5226416	A BODY ASSY. INCLUDES DOWEL AND PLUG IN 2.1020.	1
	5226912	BODY ASSY.	2
1B	5228764	DOWEL	1
		PLUG, BODY	2
		TAG, NUMBER (N45)	1
1B	5228601	<p><u>2.1030</u> NUT, INJECTOR VALVE</p> <p>NUT</p>	1
1B	5229167	<p><u>2.1040</u> RING, INJECTOR SEAL</p> <p>RING</p>	1
1B	5228109	<p><u>2.1050</u> DEFLECTOR, INJECTOR SPILL</p> <p>DEFLECTOR</p>	1
1B	5228104	<p><u>2.1060</u> FOLLOWER, INJECTOR</p> <p>FOLLOWER</p>	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1B	5228739	<u>2.1080</u> SPRING, INJECTOR PLUNGER SPRING	1
1B	5228608	<u>2.1100</u> PIN, INJECTOR STOP PIN	1
1B	5228587	<u>2.1110</u> ELEMENT, INJECTOR FILTER ELEMENT	1
1B	5228588	<u>2.1130</u> CAP, INJECTOR FILTER CAP	2
1B	5223786	<u>2.1140</u> GASKET, INJECTOR FILTER CAP GASKET	2
1B	5226414	<u>2.1150</u> CAP, INJECTOR SHIPPING CAP	AR
1B	5228684	<u>2.1160</u> PLUNGER AND BUSHING ASSY., INJECTOR PLUNGERS AND BUSHINGS ARE NOT SOLD SEPARATELY. AN ASSY. INCLUDES PIN IN 2.1165.	1
	5226393	<u>2.1165</u> PIN, BUSHING GUIDE PIN	1
1B	5226719	<u>2.1170</u> RACK, INJECTOR RACK	1
1B	5226400	<u>2.1180</u> GEAR, INJECTOR GEAR	1



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1B	5228586	<u>2.1190</u> RETAINER, INJECTOR GEAR RETAINER	1
1B	5228694	<u>2.1200</u> VALVE, INJECTOR CHECK VALVE	1
1B	5228696	<u>2.1205</u> CAGE, INJECTOR, CHECK VALVE CAGE	1
1B	5229034	<u>2.1235</u> TIP ASSY., INJECTOR SPRAY COMPONENTS OF TIP ASSY. ARE NOT SOLD SEPARATELY. TIP ASSY. (M65, N40, N45, N50,)	1
	5228769	<u>2.1238</u> VALVE KIT, INJECTOR INCLUDES ITEMS IN 2.1250 AND 2.1255. VALVE KIT (SHORT QUILL NEEDLE)	AR
1B	5228596	<u>2.1250</u> SPRING, INJECTOR VALVE SPRING	1
1B	5228766	<u>2.1255</u> SEAT, INJECTOR VALVE SPRING SEAT	1
LB	5228594	<u>2.1257</u> CAGE, INJECTOR VALVE SPRING CAGE	1
1B	5121259	<u>2.1270</u> CLAMP, INJECTOR CLAMP	1
1B	5150250	WASHER	1
1B	180130	BOLT, 3/8"-16X2" (12.9001)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.2001</u> PUMP ASSY., FUEL	
		SEE ASSEMBLY BREAKDOWN AS INDICATED BELOW. A FUEL PUMP KIT INCLUDES A 3/8" INLET PUMP, GASKET IN 2.2007 AND REDUCING BUSHING IN 2.2030.	
2A	5146341	# PUMP ASSY. (L.H.) (3/8" INLET)	1
2A	5199560	PUMP KIT, FUEL (L.H.) (PAGE B5)	1
	5118219	BOLT, 5/16"-18X7/8" (W/LW)	3
		#NOT SERVICED: COMPONENTS ARE AVAILABLE. FOR COMPLETE REPLACEMENT USE PUMP KIT SHOWN IN SAME TYPE.	
		<u>2.2004</u> OVERHAUL KIT, FUEL PUMP	
	5195078	& OVERHAUL KIT & INCLUDES ITEMS IN 2.2007, 2.2070, 2.2089, 2.2093, 2.2130, 2.2160 AND 2.2180.	AR
		<u>2.2007</u> GASKET, FUEL PUMP TO ENGINE	
2A	5150193	GASKET (5.1010)	1
		<u>2.2230</u> COUPLING, FUEL PUMP DRIVE	
	5154216	COUPLING	1
		A2 <u>2.2001</u> PUMP ASSY., FUEL	
2A	5146341	= PUMP ASSY. (L.H.) (3/8" INLET) (5199560) = NOT SERVICED: USE PART NUMBER IN PARENTHESES.	1
		<u>2.2010</u> BODY, FUEL PUMP	
2A	5146337	BODY	1
2A	141195	PIN, 1/4"X5/8" DOWEL (12.9290)	2
		<u>2.2030</u> COVER, FUEL PUMP	
2A	5134560	COVER	1
2A	3719219	BOLT, 1/4"-20X3/4" (WITH LOCK WASHER)	8

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
2A	5230007	<u>2.2070</u> SEAL, FUEL PUMP OIL SEAL	2
	5174975 147481	<u>2.2087</u> GEAR, FUEL PUMP (DRIVE) GEAR BALL, 1/8" DIA STEEL (12.9670)	1 1
2A	5181747	<u>2.2089</u> SHAFT, FUEL PUMP DRIVEN A SHAFT ASSY. INCLUDES GEAR WHICH IS NOT SOLD SEPARATELY. SHAFT ASSY.	1
2A	5181746	<u>2.2093</u> SHAFT, FUEL PUMP A SHAFT ASSY. INCLUDES SHAFT IN 2.2093 AND ITEMS IN 2.2087. SHAFT ASSY. (DRIVE)	1
2A	5174973	<u>2.2130</u> VALVE, FUEL PUMP VALVE	1
2A	103709	PIN, 5/32"X1" STRAIGHT (12.9300)	1
2A	5184530	<u>2.2160</u> SPRING, FUEL, PUMP VALVE RETAINING SPRING	1
2A	5174971	<u>2.2170</u> PLUG, FUEL PUMP VALVE PLUG	1
2A	5161003	<u>2.2180</u> GASKET, FUEL PUMP VALVE PLUG GASKET	1
	5199560	B <u>2.2001</u> PUMP ASSY., FUEL PUMP KIT, FUEL	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.2007</u> GASKET, FUEL PUMP TO ENGINE	
2A	5150193	GASKET	1
		<u>2.2010</u> BODY, FUEL PUMP	
2A	5146337	BODY	1
2A	5145009	PLUG, 1/8" PIPE (12.9550)	2
2A	141195	PIN, 1/4" X 5/8" DOWEL (12.9290)	2
		<u>2.2030</u> COVER, FUEL PUMP	
2A	5134560	COVER	1
2A	5198558	BUSHING, 3/8" X 3/4"	1
2A	3719219	BOLT, 1/4"-20X3/4" (WITH LOCKWASHER)	8
		<u>2.2070</u> SEAL, FUEL PUMP OIL	
2A	5230007	SEAL	2
		<u>2.2087</u> GEAR, FUEL PUMP (DRIVE)	
2A	5174975	GEAR	1
2A	147481	BALL, 1/8" DIA STEEL (12.9670)	1
		<u>2.2089</u> SHAFT, FUEL PUMP DRIVEN	
		A SHAFT ASSY. INCLUDES GEAR WHICH IS NOT SOLD SEPARATELY.	
2A	5181747	SHAFT ASSY.	1
		<u>2.2093</u> SHAFT, FUEL PUMP	
		A SHAFT ASSY. INCLUDES SHAFT IN 2.2093 AND ITEMS IN 2.2087.	
2A	5181746	SHAFT ASSY. (DRIVE)	1
2A	5178700	SHAFT (DRIVE)	1
		<u>2.2130</u> VALVE, FUEL PUMP	
2A	5174973	VALVE	1
2A	103709	PIN, 5/32"X1" STRAIGHT (12.9300)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
2 A	5184530	<u>2.2160</u> SPRING, FUEL PUMP VALVE RETAINING SPRING	1
2 A	5174971	<u>2.2170</u> PLUG, FUEL PUMP VALVE PLUG	1
2 A	5161003	<u>2.2180</u> GASKET, FUEL PUMP VALVE PLUG GASKET	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.3001</u> STRAINER ASSY., FUEL	
		SEE ASSEMBLY BREAKDOWN BELOW.	
3C	5575568	STRAINER ASSY. (6") (T-60)	1
	5575197	DECAL (WITH 5575568 STRAINER)	1
	5145010	PLUG, 1/4" PIPE (12.9550)	2
	186619	BOLT, 3/8"-16X1 1/8" (12.9001)	2
	103321	LOCK WASHER, 3/8" (12.9200)	2
		<u>2.3310</u> FILTER ASSY., FUEL	
		SEE ASSEMBLY BREAKDOWN PAGE BELOW	
3B	5573949	FILTER ASS. (4")(T-58)	1
	5574083	DECAL	1
	5145010	PLUG, 1/4" PIPE (12.9550)	2
	181374	BOLT, 3/8"-24x1 1/2" (12.9001)	2
	103321	LOCK WASHER, 3/8" (12.9200)	2
	117049	NUT, 3/8"-24 HEX (12.9120)	2
		C <u>2.3001</u> STRAINER ASSY., FUEL	
3C	5575568	STRAINER ASSY. (6" SOCK TYPE) (T-60)	1
		<u>2.3010</u> ELEMENT, FUEL STRAINER (PRIMARY)	
3C	5574961	ELEMENT (6") FELT SOCK TYPE, T-553) (INCLUDES GASKET IN 2.3090 AND 2.3130)	1
		<u>2.3050</u> SHELL, FUEL STRAINER (PRIMARY)	
3C	5577586	SHELL (2.3380)	1
3C	103647	DRAIN COCK, 1/4" (12.9510)	1
		<u>2.3080</u> COVER, FUEL STRAINER (PRIMARY)	
3C	6436253	COVER ASSY. (IDENTIFIED WITH CAST "P") (INCLUDES ITEMS IN 2.3090, 2.3120 AND 2.3130)	1
		<u>2.3090</u> GASKET, FUEL STRAINER COVER	
3C	5574161	GASKET (2.3400)	1

FIG	PART NUMBER	GROUP N-UMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.3100</u> PLUG, FUEL STRAINER COVER	
3C	5145010	PLUG, 1/4" PIPE (TEFLON WRAPPED) (12.9550)	2
3C	5145011	PLUG, 3/8" PIPE (12.9550)	2
		<u>2.3120</u> SCREW, FUEL STRAINER COVER	
	6435793	BOLT (USE WITH COVER MARRED "P")	1
		<u>2.3130</u> GASKET, FUEL STRAINER COVER SCREW	
	6435794	GASKET (USE WITH OVER MARKED "P")	1
		<u>2.3310</u> FILTER ASSY., FUEL	
3B	5573949	FILTER ASSY. (4") (T-58)	1
		<u>2.3320</u> ELEMENT, FUEL FILTER (SECONDARY)	
3B	5573261	ELEMENT (4", TP-509) (INCLUDES GASKETS IN 2.3400, 2.3420)	1
		<u>2.3322</u> SEAT, FUEL FILTER ELEMENT	
3B	5574123	SEAT	1
3B	5574126	SEAL	1
3B	5574120	RETAINER (RING)	1
		<u>2.3370</u> SPRING, FUEL FILTER ELEMENT	
3B	5574124	SPRING	1
3B	5574122	SEAT, SPRING (WASHER)	1
		<u>2.3380</u> SHELL, FUEL FILTER (SECONDARY)	
3B	5574125	SHELL, ASSY. (INCLUDES ITEMS IN 2.3322 AND 2.3370)	1
		<u>2.3390</u> COVER, FUEL FILTER (SECONDARY)	
3B	6436254	COVER ASSY. (IDENTIFIED WITH CAST 'S") (INCLUDES ITEMS IN 2.3400, 2.3410, 2.3420 AND 2.3480)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
3B	5574161	<u>2.3400</u> GASKET, FUEL FILTER COVER TO SHELL GASKET	1
3B	5574118	<u>2.3410</u> SCREW, FUEL FILTER COVER SCREW	1
3B	1503536	<u>2.3420</u> GASKET, FUEL FILTER COVER SCREW GASKET (2.3110)	1
	5145010	<u>2.3480</u> PLUG, FUEL FILTER PLUG, 1/4" PIPE (IN COVER) (12.9550)	2
3B	103647	<u>2.3500</u> DRAIN COCK, FUEL FILTER DRAIN COCK, 1/4" (12.9510)	1



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
	5116204	<u>2.4020</u> PIPE, FUEL PIPE ASSY. (INLET AND OUTLET)	6
	5152138	<u>2.4030</u> CONNECTOR, FUEL PIPE CONNECTOR	6
	5152148	<u>2.4050</u> WASHER, FUEL PIPE CONNECTOR WASHER	6

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
4A		<u>2.5050</u> TUBE, STRAINER TO FUEL PUMP	
	5121149	TUBE ASSY. (DEV. L. 39.76")	1
	137407	CONNECTOR, 3/8" INV. FL. TUBE (12.9460)	1
	143338	ELBOW, 3/8" INV. FL. TUBE 45 DEG (12.9480)	1
		<u>2.5070</u> CLIP, STRAINER TO FUEL PUMP TUBE	
	5160388	CLIP (13/8" L., 3/8" BOLT)	1
	5177623	CLIP (3/8" TUBE) (2.5120)	1
	3224539	CLIP (3/8" TUBE) (12.4095)	1
		<u>2.5100</u> TUBE, FUEL PUMP TO FILTER	
	5134897	TUBE ASSY. (DEV. L. 36.22")	1
	137407	CONNECTOR, 3/8" INV. FL. TUBE (12.9460)	1
	137423	ELBOW, 3/8" INV. FL. TUBE 90 DEG (12.9480)	1
		<u>2.5120</u> CLIP, FUEL PUMP TO FILTER TUBE	
	5112241	CLAMP (2.5070)	6
	110502	BOLT, #10-24X3/4" (12.9025)	3
120217	LOCK WASHER #10 (12.9200)	3	
110633	NUT, #10-24 (12.9120)	3	
	<u>2.5151</u> TUBE, FILTER OUTLET		
5129623	TUBE ASSY. (DEV. L. 12.68")	1	
137423	ELBOW, 3/8" INV. FL. TUBE 90 DEG. (12.9480)	2	
137407	CONNECTOR, 3/8" INV. FL. TUBE (12.9460)	1	
	<u>2.5210</u> TUBE, FUEL DRAIN		
4A	5127911	ELBOW 1/4"X1/4" P.T. .070" RESTRICTED	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.7001</u> GOVERNOR ASSY.  A GOVERNOR ASSY. INCLUDES ITEMS IN 2.7002, 2.7045, THRU 2.7810 EXCEPT 2.7165, 2.7520, 2.7530, AND 2.7740.	
	5129802	GOVERNOR ASSY. (LIMITING)	1
	180083	BOLT, 5/16"- 18x1 1/2" (12.9001)	2
	9414285	BOLT, 3/8"- 24X7/8" (12. FT. HD.) (12.9001)	3
	5145225	WASHER, 3/8" COPPER (12.9190)	3
	9414322	WASHER, 3/8" FLAT (12.9190)	2
	103320	LOCKWASHER, 5/16" (12.9200)	2
		<u>2.7002</u> NAME PLATE, GOVERNOR	
	5122166	NAME PLATE	1
	109371	SCREW, #9X3/16" RED. HD. DR.	2
		<u>2.7010</u> GASKET, GOVERNOR TO ENGINE	
	5116336	GASKET	1
		<u>2.7045</u> COVER ASSY., GOVERNOR (COMPLETE)  SEE ASSEMBLY BREAKDOWN AS INDICATED.	
	5126428	COVER ASSY. (LIMITING) (C & D ENG.) (PAGE B18)	1
	5126792	SCREW, 1/4"- 20X3/4" FIL. HD. (GROOVED FOR TORSION SPRING)	1
5H	271468	SCREW, 1/4"- 20x3/4." FIL. HD. (WITH LOCK WASHER) (12.9010)	4
	120380	LOCK WASHER, 1/4" (12.9200)	5
		<u>2.7051</u> GASKET, GOVERNOR COVER	
5H	5122742	GASKET	1
		<u>2.7165</u> LEVER, GOVERNOR COVER SHUTDOWN SHAFT	
5H	5183042	LEVER (2.9410)	1
5H	443603	BOLT, 1/4"- 20X3/4" (12.9001)	1
5H	120380	LOCKWASHER, 1/4" (12.9200)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.7170</u> LEVER, GOVERNOR COVER THROTTLE SHAFT	
	512006	LEVER (2.9340)	1
5H	21354	BOLT, 1/4"- 20x1" (12.9001)	1
5H	120380	LOCK WASHER, 1/4" (12.9200)	1
		<u>2.7230</u> HOUSING, GOVERNOR CONTROL	
50	514409	HOUSING (C & D ENGINES)	1
	511626	ADAPTOR, INJECTOR CONTROL LINK BOOT (2.7830)	1
	5145009	PLUG, 1/8" PIPE	1
		<u>2.7250</u> SHAFT ASSY., GOV. OPERATING	
		INCLUDES ITEMS IN 2.7255, 2.7280, 2.7300, AND BEARING IN 2.7260.	
	5122752	SHAFT ASSY. (C AND D ENGINE)	1
		<u>2.7255</u> SHAFT, GOV. OPERATING	
5D	5122751	SHAFT	1
		<u>2.7257</u> TUBE, GOV. OPEATING SHAFT	
5D	5122754	TUBE	1
		<u>2.7260</u> BEARING, GOV. OPERATING SHAFT (UPPER)	
50	9431894	BEARING	1
50	9421917	SCREW AND LOCKWASHER ASSY. #10-24X7/16" (12.9025)	1
		<u>2.7270</u> BEARING, GOV. OPERATING SHAFT (LOWER)	
5D	9431887	BEARING	1
5D	9413284	RING, SNAP (TO HOUSING)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.7280</u> LEVER, GOV. OPERATING SHAFT	
		A LEVER ASSY. INCLUDES PIN IN 2.7300.	
5D	5122749	LEVER ASSY. (C & D ENG.)	1
5D	5150898	SCREW (GAP ADJUSTING)	1
5D	122161	NUT, 1/4"- 28 HEX. (12.9120)	1
		<u>2.7290</u> FORK, GOV. OPERATING SHAFT	
5D	5122741	FORK	1
5D	9425382	SCREW, #10-32X5/8" (W/LW) (12.9001)	2
		<u>2.7300</u> PIN, GOVERNOR OPERATING SHAFT LEVER	
5D	5122746	PIN	1
		<u>2.7310</u> LEVER, GOV. DIFFERENTIAL	
		A LEVER ASSY. INCLUDES PIN IN 2.7315	
5D	5126311	LEVER ASSY. (LIMITING SPEED)	1
5D	5150941	WASHER	1
	9421917	SCREW AND LOCK WASHER ASSY	1
	120391	WASHER, 7/32"-1/2" FLAT	1
5D	142583	RETAINER, 13/64" SPRING (12.9640)	1
		<u>2.7315</u> PIN, GOV. DIFFERENTIAL LEVER	
5D	5126310	PIN (LIMITING SPEED)	1
		<u>2.7340</u> HOUSING, GOVERNOR WEIGHT	
5D	5129730	HOUSING (C AND D ENGINE)	1
	5119127	BUSHING (WEIGHT SHAFT END)	1
5D	9428477	PLUG, COP (15/16" DIA.) (3.4030)	1
		<u>2.7350</u> SHAFT AND CARRIER ASSY., GOVERNOR WEIGHT	
		SEE ASSEMBLY BREAKDOWN PAGE B19.	
	5100061	SHAFT AND CARRIER ASSY.	1
	110529	SCREW, #10-24X1/4" FLAT HD.	1
		SL. (12.9300)	

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.7475</u> SPACER, GOVERNOR WEIGHT CARRIER SHAFT	
	5122738	SPACER (BETWEEN GEAR AND BEARING)	1
		<u>2.7540</u> SPRING, GOVERNOR LOW SPEED	
5G	5183704	SPRING (2 YELLOW STRIPES)	1
		<u>2.7550</u> SPRING, GOVERNOR HIGH SPEED	
	5182560	SPRING (WIDE RED STRIPE)	1
		<u>2.7560</u> PLUNGER, GOVERNOR LOW SPEED SPRING	
5G	5182555	PLUNGER	1
		<u>2.7570</u> SEAT, GOV. LOW SPEED SPRING	
5G	5150892	SEAT	1
		<u>2.7580</u> CAP, GOV. LOW SPEED SPRING	
5G	5150899	CAP	1
		<u>2.7590</u> SCREW, GOVERNOR LOW SPEED SPRING ADJUSTING	
5G	5101432	PIN	1
5G	122161	NUT, 1/4"-28 HEX (12.9190)	1
	5102270	SCREW	1
		<u>2.7610</u> RETAINER, GOVERNOR HIGH SPEED SPRING	
5G	5182557	RETAINER	1
		<u>2.7615</u> LOCKNUT, GOVERNOR HIGH SPEED SPRING RETAINER	
5G	5186115	LOCKNUT	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.7635</u> HOUSING, GOVERNOR LIMITING SPEED SPRING	
5G	5182559	HOUSING	1
	445520	BOLT, 5/16"- 18X3 1/2" (12.9001)	2
	103320	LOCK WASHER 5/16" (12.9200)	2
		<u>2.7650</u> GASKET, GOVERNOR HIGH SPEED SPRING COVER	
5G	5152944	GASKET	1
		<u>2.7810</u> SCREW ASSY., GOV. BUFFER	
5D	5177083	SCREW ASSY. (INCLUDES SPRING)	1
	124925	NUT (3/8"- 24 REX.) (12.9120)	1
		<u>2.7819</u> ROD ASSY. GOV. TO INJECTOR LINK	
7A	5122797	LINK (A & C ENG.)	1
7A	5122798	LINK (B & D ENG.)	1
	142583	RETAINER, SPRING 13/64" (12.9640)	1
7A	114783	PIN (1/4"X51/64" CLEVIS) (12.9260)	1
7A	103361	PIN, 1/61"X1/2" COTTER (12.9250)	1
	5150941	WASHER (2.7310)	1
		<u>2.7830</u> ADAPTOR, CYLINDER READ GOVERNOR CONTROL LINK	
4A	5116262	ADAPTOR (IN HEAD) (PLAIN END)	1
		<u>2.7834</u> BOOT, GOV. TO INJECTOR LINK	
	5199773	# HOSE (7/8" I.D. X1.26"L) (A & C ENG. )	1
	272855	CLAMP, HOSE (SPRING, 1 1/4") (A & C ENG.) (12.9660)	2
		# STD. LENGTH HOSE. CUT TO LENGTH SHOWN.	
		<u>2.7890</u> TUBE ASSY., GOVERNOR LUBRICATION	
	5129726	TUBE ASSY. (DEV. L. 11.36") (WEIGHT HOUSING)	1
5D	5166265	ELBOW, 1/4" TUBE X 1/8" PIPE 90 DEG. (7.4074)	1
	137405	CONNECTOR, 1/4" TUBE X 1/8" PIPE (12.9460)	1
	443762	EXTENSION, 1/8" PIPE (12.9540)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.7945</u> SEAL, GOVERNOR	
	5101140	SEAL	AR
		<u>2.7960</u> GEAR, GOVERNOR DRIVE	
	5116026	GEAR (L.H. HELIX) (RC, RD, LA, LB)	1
	124546	KEY, 5/32"X 5/8" WOODRUFF (12.9350)	1
	9434177	NUT, 5/8"- 18 LOCK (12.9140)	1
		<u>2.7045</u> COVER ASSY., GOVERNOR (COMPLETE)	
	5126428	COVER ASSY. (C AND D ENGINE, LIMITING SPEED)	1
		<u>2.7050</u> COVER ASSY., GOV. (LESS SHAFT AND LEVER)	
		INCLUDES ITEMS IN 2.7050, 2.7093 AND 2.7100.	
	5126397	COVER ASSY. (C AND D ENGINE, LIMITING SPEED)	1
5H	456540	PIN, 3/16" X 5/8" ROLL (12.9275)	2
		<u>2.7095</u> SHAFT ASSY., GOVERNOR THROTTLE	
		A SHAFT ASSY. INCLUDE ITEMS IN 2.7095. PIN NOT SOLD SEPARATELY.	
5H	5126402	SHAFT ASSY.	1
	455734	PIN, 1/8"X3/4" SPRING (12.9300)	1
5H	271287	FITTING, 1/8" LUBE (12.9540)	1
		<u>2.7115</u> SHAFT ASSY., GOVERNOR SHUTDOWN	
5H	5126404	SHAFT ASSY. (INCLUDES PIN) (2.7053)	1
5H	453676	PIN, 1/8", " ROLL (12.9275)	1
		<u>2.7140</u> WASHER, GOVERNOR THROTTLE SHAFT (PACKING)	
5H	5179232	SEAL RING (2.4225)	1
	5144196	WASHER, SEAL RING BACK-UP (2.7045)	1



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
5H	5182977	<u>2.7145</u> WASHER, GOVERNOR SHUTDOWN SHAFT (PACKING)  SEAL RING (3.3055)	1
5H	5150238	<u>2.7150</u> RETAINER, GOVERNOR THROTTLE SHAFT PACKING  WASHER (3.4001)	1
5H	5122732	RING, SNAP	1
5H	5151487	<u>2.7155</u> RETAINER, GOVERNOR SHUTDOWN SHAFT PACKING  WASHER (2.7430)	1
5H	5178581	RING, SNAP (2.7430)	1
5H	5144178	WASHER (DISHED)	1
	5100061	<u>2.7350</u> SHAFT AND CARRIER ASSY., GOVERNOR WEIGHT  SHAFT AND CARRIER ASSY.	1
5L	5196855	<u>2.7360</u> SHAFT, GOVERNOR WEIGHT CARRIER  SHAFT ASSY. (INCLUDES SHAFT AND CARRIER) (LIMITING SPEED)	1
5L	5109544	<u>2.7380</u> RISER, GOVERNOR  RISER (INCLUDES THRUST BEARING) (SMALL FLANGE)	1
5L	5122776	<u>2.7390</u> WEIGHT, GOVERNOR  WEIGHT (LOW SPEED)	2
5L	5129721	WEIGHT (HIGH SPEED)	2
5D	5122785	<u>2.7430</u> PIN, GOVERNOR WEIGHT  PIN	4
5D	9411504	RING, SNAP	4
5D,L	9434171	<u>2.7470</u> BEARING, GOVERNOR WEIGHT CARRIER SHAFT  BEARING (N.D. 3202L1A)	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
5D,L	9411502	<u>2.7470</u> BEARING, GOVERNOR WEIGHT CARRIER SHAFT (CONT.)  RING, SNAP  <u>2.7502</u> SUPPORT, GOVERNOR WEIGHT SHAFT BEARING	1
5D	5122783	SUPPORT	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.9001 TUBE AND LEVER ASSY., INJECTOR CONTROL</u>	
		A TUBE ASSY. INCLUDES ONE (1) BRACKET IN 2.9003 AND ITEMS IN 2.9007 THRU 2.9010.	
7A	5195968	TUBE ASSY. (C ENGINE)	1
		<u>2.9003 BRACKET, INJECTOR CONTROL TUBE</u>	
7A	5116264	BRACKET	2
7A	9422203	BOLT, 1/4"- 20X5/8" (12 FT. HD.)	4
		<u>2.9007 SHAFT, INJECTOR CONTROL TUBE END</u>	
7A	5150259	SHAFT (1 1/16" L.)	1
		<u>2.9009 LEVER, INJECTOR CONTROL TUBE</u>	
7A	5116267	LEVER	1
7A	142486	PIN, 1/8" X 3/4" GROOVE (12.9270)	1
		<u>2.9010 SPACER, INJECTOR CONTROL TUBE LEVER</u>	
7A	5116266	SPACER	1
		<u>2.9012 SPRING, INJECTOR CONTROL TUBE</u>	
7A	5116265	SPRING	1
		<u>2.9014 LEVER, INJECTOR CONTROL TUBE RACK</u>	
7A	5115322	LEVER	3
7A	5176228	SCREW	6
		<u>2.9422 WIRE, GOVERNOR CONTROL</u>	
	5146238	* WIRE ASSY. (50" L.) (3.3250)	1
	5184255	PLATE, NAME	1
	110730	LOCK WASHER, 3/8" (12.9200)	1
	122236	NUT, 3/8"- 24 HEX. (12.9120)	1
		* WIRE ASSY. LENGTH DETERMINED BY INSTALLATION.	

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>2.9426</u> PIN, GOVERNOR CONTROL WIRE SWIVEL	
	5161464	PIN, SWIVEL	1
	120392	WASHER, 1/4" FLAT (12.9190)	1
	142583	RETAINER, 13/64" SPRING (12.9643)	1
	132105	SCREW #10-32X3/8" FIL HD. (12.9010)	1
		<u>2.9428</u> CLIP, GOVERNOR CONTROL WIRE TUBE	
	5155782	CLIP (7.8320)	1
	3290569	CLIP (7.8320)	1
	123298	BOLT, 1/4"- 28X3/8" (12.9001)	1
	120380	LOCK WASHER, 1/4" (12.9200)	1
	121902	NUT, 1/4"- 28 HEX (12.9120)	1

**GROUP NOMENCLATURE**

**3.0000      AIR SYSTEM**

**3.3000A      Air Inlet Housing**  
**3.4000      Blower**  
**3.4000A      Blower Drive Shaft**  
**3.4000B      Blower End Plato Cover**

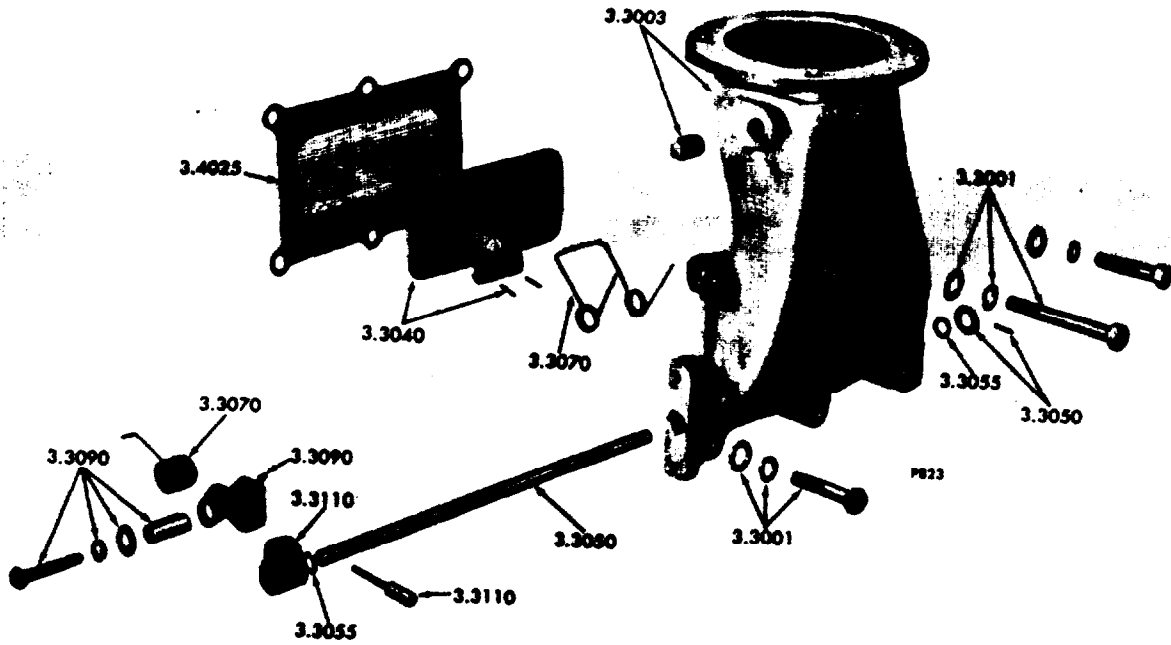


FIG. 3A AIR INLET HOUSING

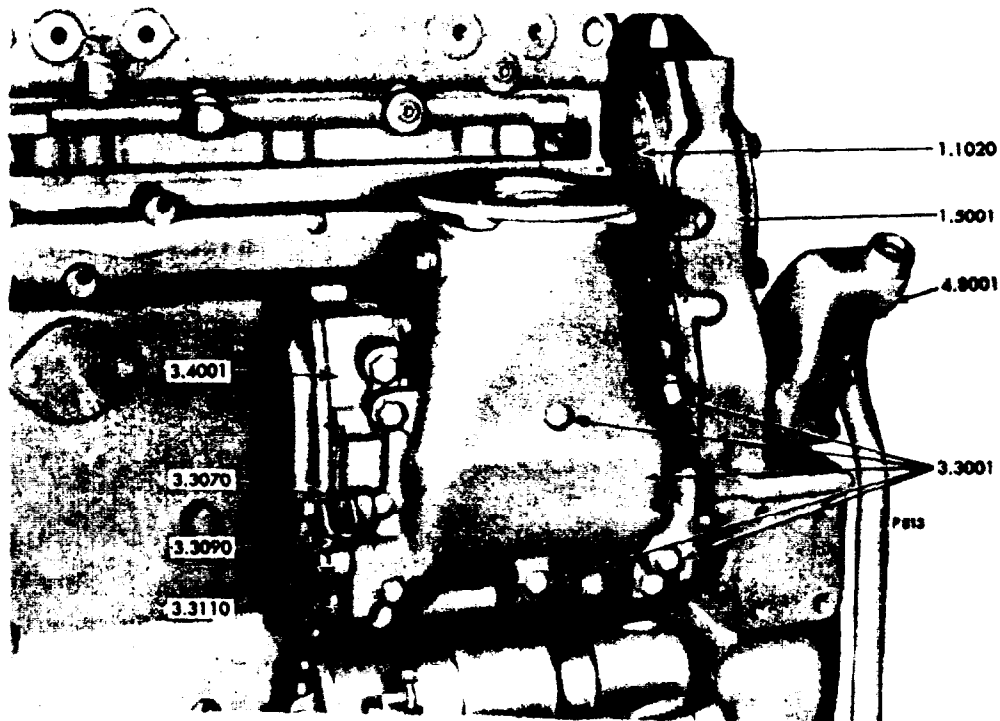


FIG. 3B BLOWER AND AIR INLET HOUSING

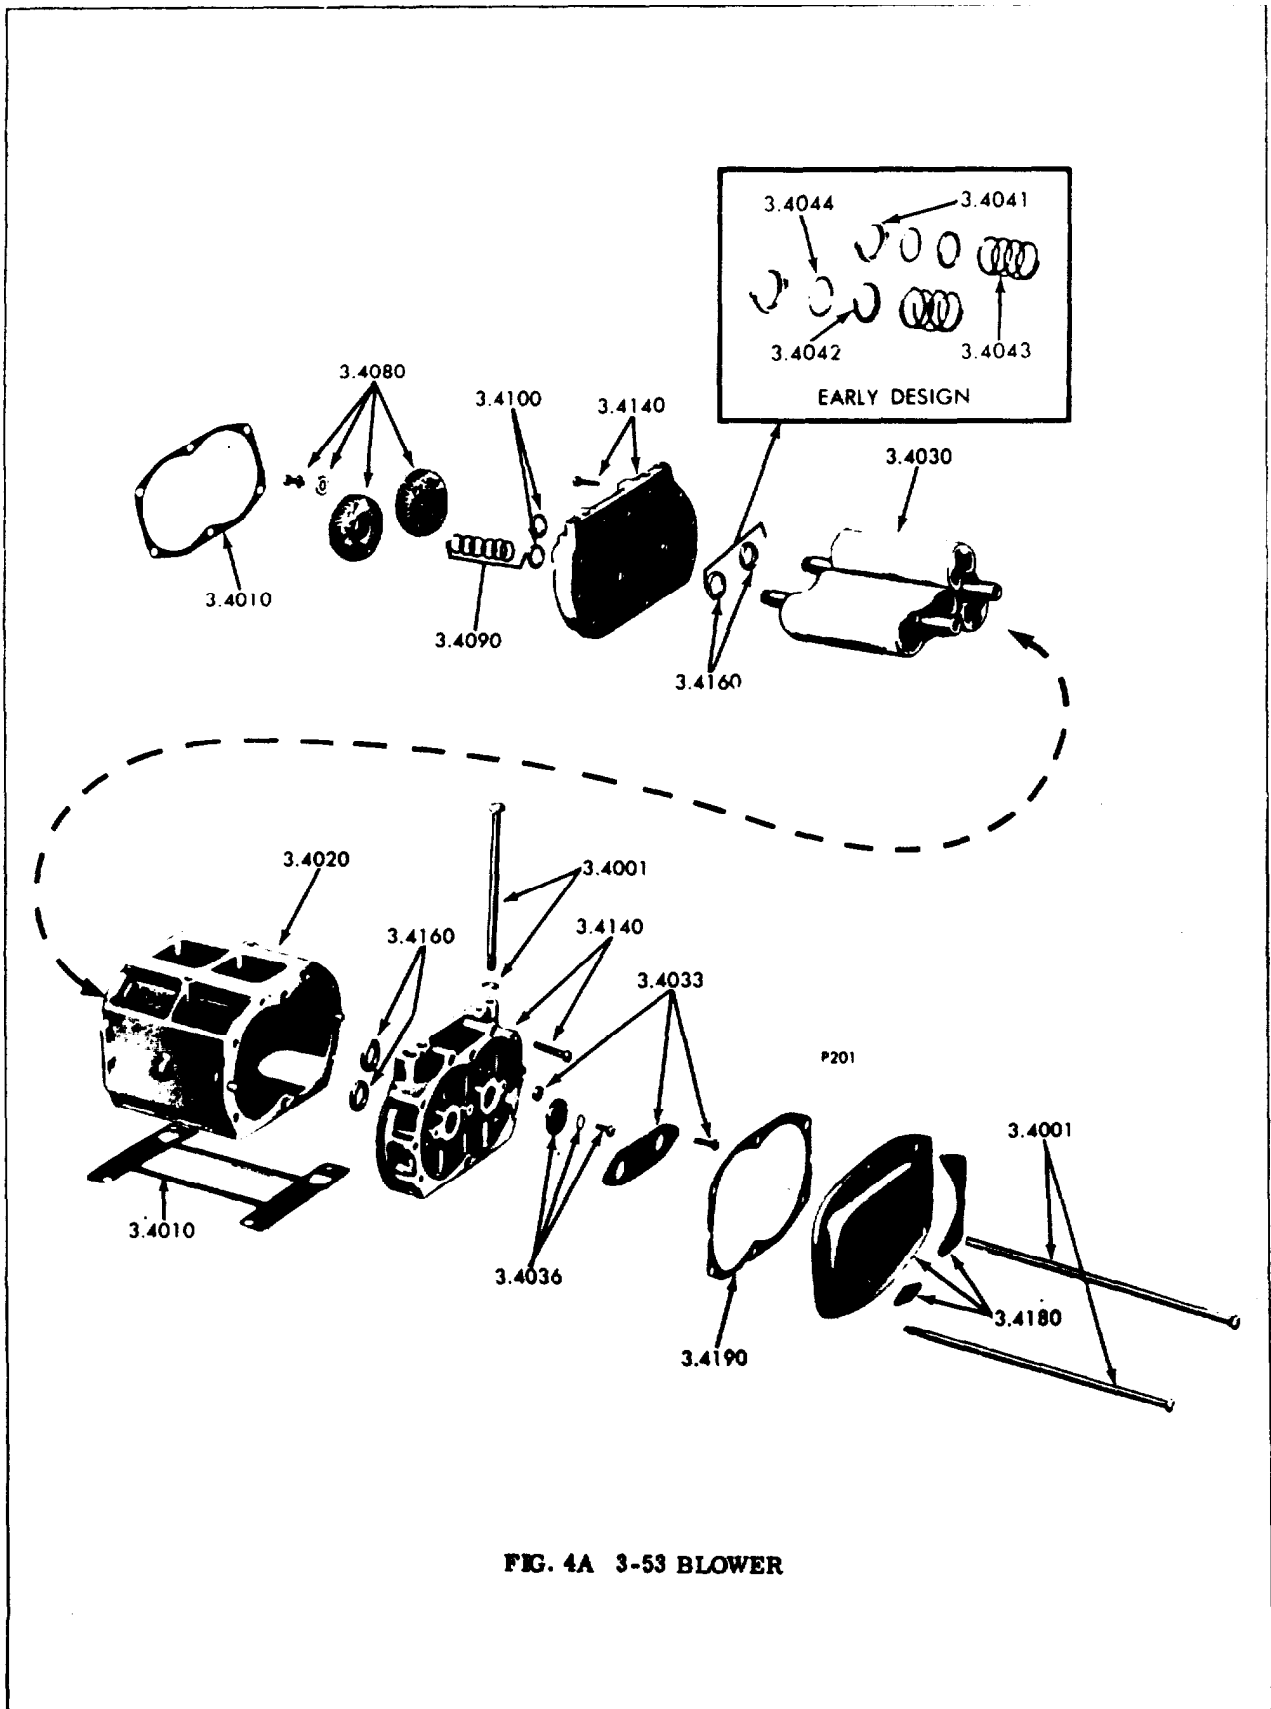


FIG. 4A 3-53 BLOWER

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>3.3001</u> HOUSING ASST., AIR INLET  FOR TYPE 478 USE TYPE 407. FOR TYPE 527 USE TYPE 481. A HOUSING ASSY. INCLUDES ITEMS IN 3.003 AND 3.3040 THRU 3.3110	
3B	5140572	HOUSING ASSY.	1
3B	5157244	BOLT, 3/8"- 16X1 3/4" (4.4190)	4
3B	180130	BOLT, 3/8"- 16x2" (12.9001)	1
3B	179851	BOLT, 3/8"- 16X.3" (12.9001)	1
3B	103341	WASHER, 3/8" FLAT (12.9190)	6
3B	103321	LOCKWASHER, 3/8" (12.9200)	6
		<u>3.3003</u> HOUSING, AIR INLET	
3A	5137406	HOUSING	1
3A	5145010	PLUG, 1/4" PIPE (12.9550)	1
		<u>3.3007</u> GASKET, AIR INLET HOUSING FLANGE	
	5124405	GASKET	1
	5196053	GASKET (3.4025) (W/SCREEN)	1
		<u>3.3040</u> VALVE, AIR INLET HOUSING SHUTDOWN	
3A	5116456	VALVE	1
3A	273436	PIN, 1/8"X11/16" ROLL (12.9300)	2
		<u>3.3050</u> SHAFT, AIR INLET HOUSING SHUTDOWN VALVE	
		A SHAFT AND CAM ASSY. CONSISTS OF SHAFT, SPACER AND PIN IN 3.3050, PLUS CAM AND LEVER IN 3.3110.	
3C	5143440	SHAFT	1
3B	103341	WASHER, 3/8" FLAT (12.9190)	1
3B	273436	PIN, 1/8"X11/16" ROLL (12.9300)	1
		<u>3.3055</u> SEAL, AIR INLET HOUSING SHUTDOWN VALVE SHAFT	
3A	5182977	SEAL RING	2
		<u>3.3070</u> SPRING, AIR INLET HOUSING SHUTDOWN VALVE TENSION	



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
3A	5111904	SPRING (VALVE) (INTERNAL)	1
3A,B	5112787	SPRING (LATCH) (R.H. HELIX)	1
		<u>3.3090</u> LEVER, AIR INLET HOUSING SHUT DOWN VALVE	
3A,B	5114727	LATCH	1
3A	179803	BOLT, 1/4"- 20X1 3/4" (12.9001)	1
	120392	WASHER, 1/4" FLAT (12.9190)	1
	120380	LOCK WASHER, 1/4" (12.9200)	1
	5143836	BUSHING, ECCENTRIC	1
		<u>3.3110</u> LEVER, AIR INLET HOUSING SHUTDOWN RESET	
3A	5122623	CAM	1
3A	5114974	HANDLE ASSY.	1
		<u>3.3250</u> WIRE, AIR INLET HOUSING SHUTDOWN	
	103319	LOCKWASHER, 1/4"	1
	5146238	* WIRE ASSY. (57"L.) (2.9422)	1
	110730	LOCK WASHER, 3/8" (12.9200)	1
	3796374	GUIDE, WIRE	1
	3290569	CLIP, 3/16" DIA. W/OFFSET	1
	140855	SCREW. #8-32X5/16" L. SET	1
	123298	BOLT, 1/4"-28X3/8"	1
	120393	WASHER, 11/32" FLAT	1
	121902	LOCK WASHER, 1/4"	1
	124925	NUT, 3/8"-24 JAM	1
		* WIRE ASSY. LENGTH DETERMINED BY INSTALLATION. CUT TO SUIT.	
		<u>3.3260</u> PLATE, AIR INLET HOUSING SHUTDOWN CONTROL	
	5186687	PLATE, INSTRUCTION	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>3.4001</u> BLOWER ASSY.	
4A	5139305	BLOWER ASSY. (R.H.)	1
4A	5121464	BOLT (10 3/16" L.)	1
4A	5116150	BOLT (10 11/16" L.)	4
4A	5131913	WASHER (7/16") (FLAT)	4
	9433110	BOLT, 7/16"-14X6 11/16" (12.9001)	4
		BLOWER ASSY. INCLUDES ITEMS IN 3.4020 AND 3.4030 THRU 3.4040.	
		<u>3.4003</u> BLOWER KIT, INSTALLATION	
		A KIT INCLUDES ITEMS IN 3.4010, 3.4025, 3.4190, 3.4220, 3.4227 AND COPPER WASHER IN 3.4350.	
		<u>3.4003</u> BLOWER KIT, INSTALLATION (CONT.)	
	5198041	BLOWER INSTALLATION KIT	AR
		<u>3.4005</u> BLOWER KIT, REPAIR	
		NON-TURBO KIT CONSISTS OF WASHER IN 3.4080, PILOT IN 3.4082, PLUS ITEMS IN 3.4090, 3.4100, 3.4160, 3.4320, AND SPACER IN 3.4370.	
	5198684	BLOWER REPAIR KIT (NON-TURBO)	AR
		<u>3.4010</u> GASKET, BLOWER	
4A	5119433	GASKET (TO END PLATE) (3.4190)	1
4A	5116295	GASKET (TO BLOCK)	1
		<u>3.4020</u> HOUSING, BLOWER	
4A	5119391	HOUSING, ASSY. (INCLUDES PINS)	1
	141242	PIN, 3/8"X7/8" DOWEL (12.9290)	4

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
3A	5196053	<u>3.4025</u> SCREEN, BLOWER SCREEN	1
	5139297	<u>3.4030</u> ROTOR, BLOWER  INCLUDES SHAFT AND PIN WHICH ARE NOT SOLD SEPARATELY FOR TYPE 114. ROTOR ASSY.	2
4A	5116173	<u>3.4033</u> PLATE, BLOWER ROTOR THRUST PLATE	1
4A	5116170	SPACER	3
4A	9409062	BOLT, 1/4"-20x1" (12.9001)	3
4A	5127077	<u>3.4036</u> WASHER, BLOWER ROTOR SHAFT THRUST WASHER (25/64" I.D.)	4
4A	9409034	BOLT, 3/8"- 24x7/8" (12.9001)	2
4 A	5119194	<u>3.4080</u> GEAR, BLOWER ROTOR GEAR (R.H. HELIX)	1
4A	5119195	GEAR (L.H. HELIX)	1
4A	9409018	BOLT, 5/16"-24X7/8" (12.9001)	2
	5121403	WASHER	2
4A	5116164	<u>3.4090</u> SHIM, BLOWER ROTOR GEAR SHIM (.002")	AR
4A	5116165	SHIM (.003")	AR
4A	5116166	SHIM (.004")	AR
4A	5116167	SHIM (.005")	AR
4A	5116168	<u>3.4100</u> SPACER, BLOWER ROTOR GEAR SPACER	2
		<u>3.4140</u> PLATE, BLOWER HOUSING END  A PLATE ASSY. INCLUDES PINS, PLUGS AND STRAINER IN 3.4140 AND SEAL IN 3.4160.	

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
4A	5134914	PLATE, FRONT	1
	5139299	PLATE, REAR	1
4A	5145009	PLUG, 1/8" PIPE (12.9550)	2
4A	117297	SCREW, 5/16"- 18X1 3/4" FIL. HD. (12.9010)	4
		<u>3.4160</u> SEAL, BLOWER HOUSING END PLATE	
4A	5134924	SEAL (LIP TYPE) (NON-TURBO) (STD. I.D.>	4
4A	5199367	# SEAL (USED WITH SLEEVE 5199368) (O.S., I.D.>	AR
		<u>3.4163</u> SPACER, BLOWER ROTOR SHAFT OIL SEAL	
	5199368	# SLEEVE (USED WITH 5199367 SEAL)  #USED TOGETHER TO RENEW SEALING SURFACE.	AR
		<u>3.4180</u> COVER, BLOWER HOUSING END PLATE	
4A	5119429	COVER (FRONT)	1
4A	5119394	PLATE, REINFORCEMENT (LARGE)	2
4A	5119395	PLATE, REINFORCEMENT (SMALL)	2
		<u>3.4190</u> GASKET, BLOWER HOUSING END PLATE COVER	
4A	5119433	GASKET	1

# GROUP NOMENCLATURE

<b>1.0000</b>	<b>ENGINE (less major assemblies)</b>	<b>5.0000</b>	<b>COOLING SYSTEM</b>
1.1000	Cylinder Block	5.1000	Fresh Water Pump
1.1000A	Air Box Drains	5.1000A	Fresh Water Pump Cover
1.2000	Cylinder Head	5.2000A	Water Outlet Manifold and/or Elbow
1.2000A	Engine lifter Bracket	5.2000B	Thermostat
1.3000	Crankshaft, Oil Seals and stabilizers	5.2000C	Water By-pass Tube
1.3000A	Crankshaft Front Cover		
		5.3000B	Water Connections
1.3000C	Crankshaft Pulley	5.4000A	Fan
1.3000D	Crankshaft Pulley Belt		
1.4000A	Flywheel		
1.5000A	Flywheel Housing		
1.6000	Connecting Rod and Piston	<b>6.0000</b>	<b>EXHAUST SYSTEM</b>
1.7000	Camshaft and Gear Train	6.1000A	Exhaust Manifold
1.7000A	Balance Weight Cover	6.2000A	Exhaust Muffler and/or Connections
1.7000B	Accessory Drive		
1.8000	Valve and Injector Operating Mechanism	<b>7.0000</b>	<b>ELECTRICAL-INSTRUMENTS</b>
1.8000A	Rocker Cover	7.1000A	Battery Charging Generator
		7.3000A	Starting Motor
<b>2.0000</b>	<b>FUEL SYSTEM</b>		
2.1000A	Fuel Injector		
2.2000	Fuel Pump		
2.2000A	Fuel Pump Drain		
2.3000A	Fuel Filter		
2.4000	Fuel Manifold and/or Connections		
2.5000A	Fuel lines and Fuel Cooler		
2.7000A	Mechanical Governor		
2.9000	Injector Controls		
2.9000A	Throttle Controls		
<b>3.0000</b>	<b>AIR SYSTEM</b>		
3.3000A	Air Inlet Housing		
3.4000	Blower		
3.4000A	Blower Drive Shaft		
3.4000B	Blower End Plate Cover		
<b>4.0000</b>	<b>LUBRICATING SYSTEM</b>		
4.1000A	Oil Pump		
4.1000B	Oil Distribution System		
4.1000C	Oil Pressure Regulator		
4.2000A	Oil Filter		
4.3000A	Oil Filter Lines		
4.4000A	Oil Cooler		
4.5000A	Oil Filter		
4.6000A	Dipstick		
4.7000A	Oil Pan		
4.8000A	Ventilating System		

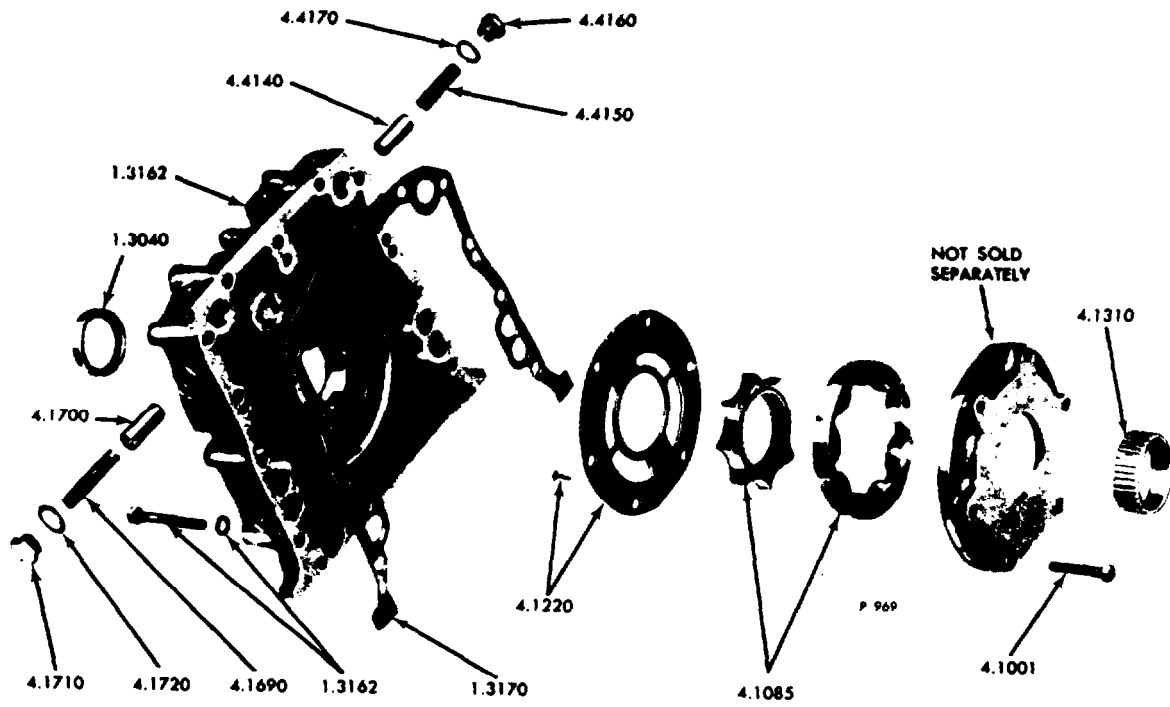


FIG. 1A OIL PUMP AND PRESSURE REGULATOR (Inline Engine)

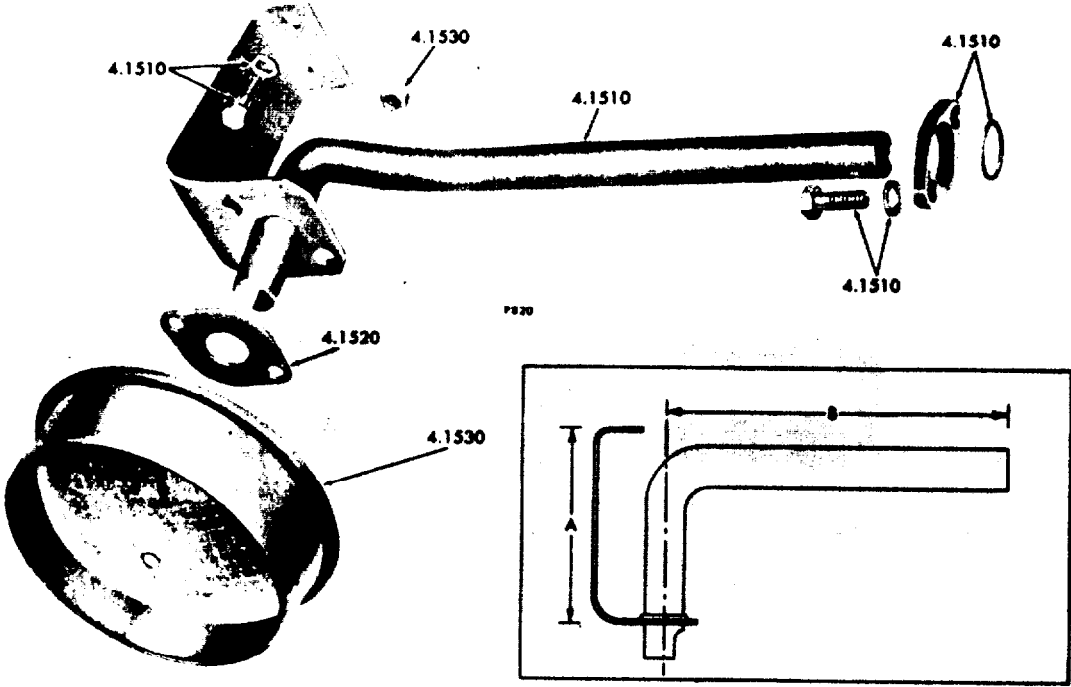


FIG. 2A OIL DISTRIBUTION SYSTEM

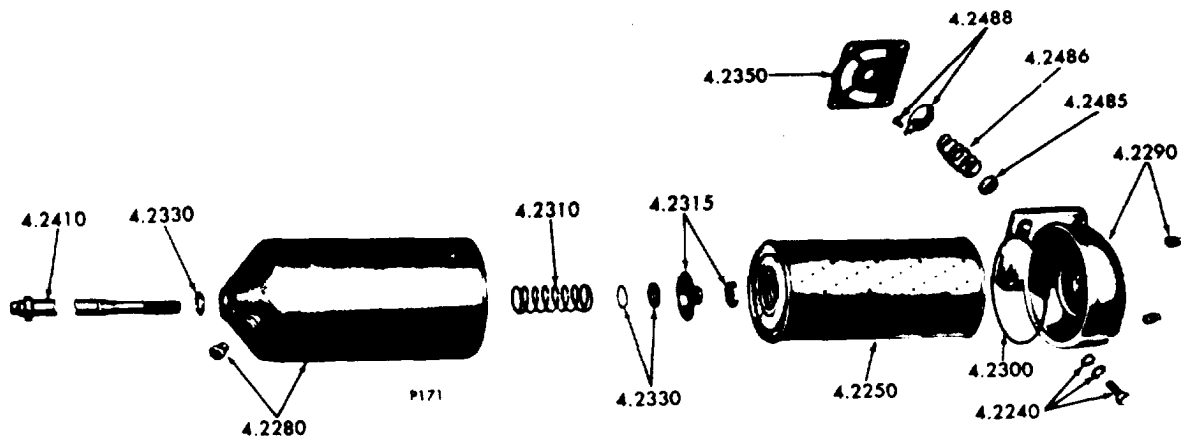


FIG. 3A OIL FILTER

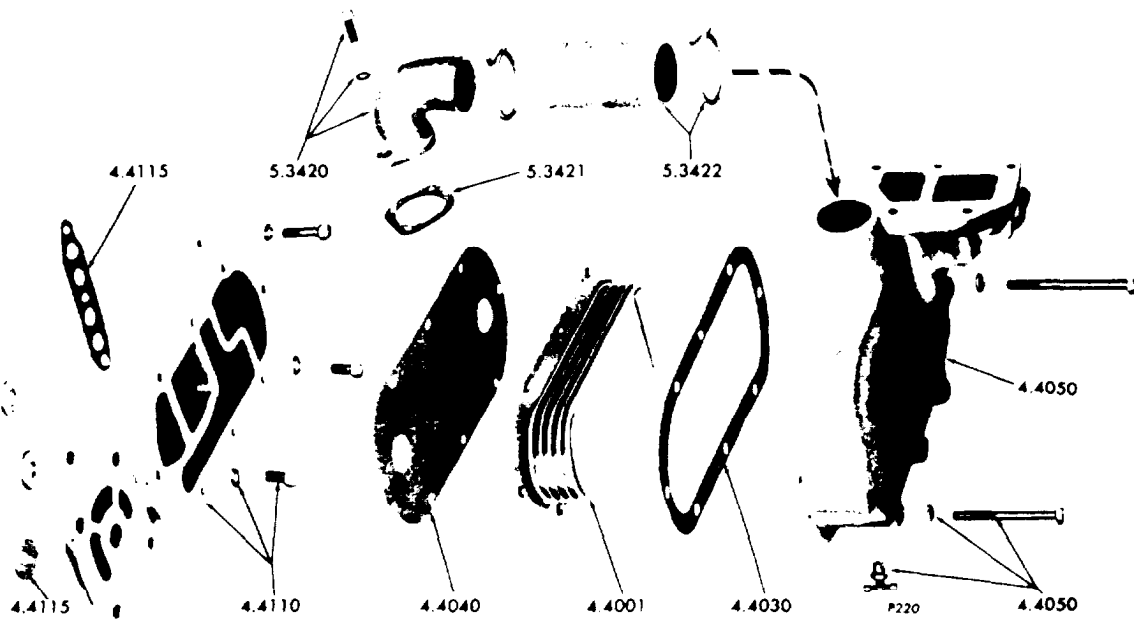


FIG. 4A OIL COOLER



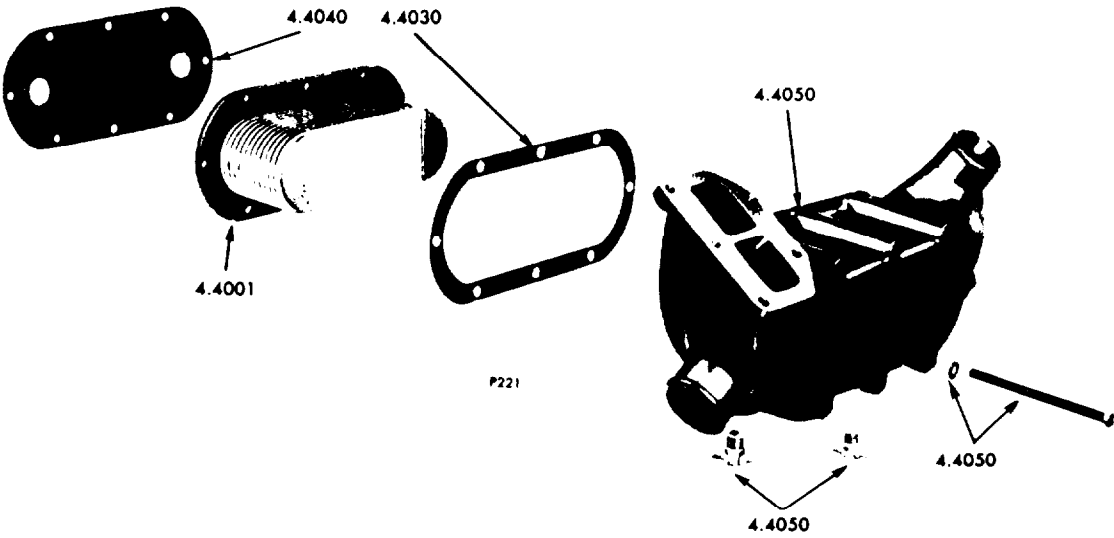


FIG. 4C OIL COOLER

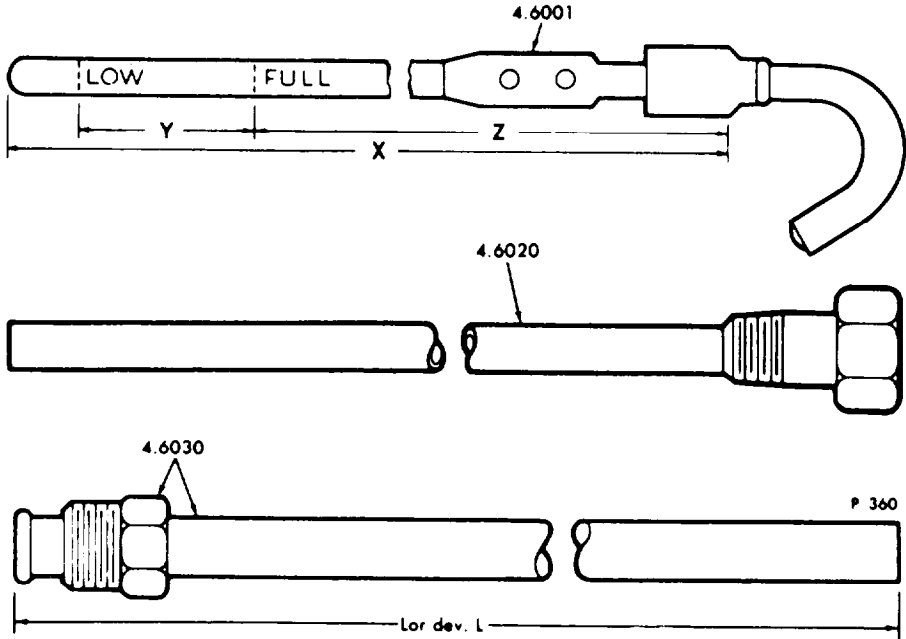


FIG. 6A DIPSTICK

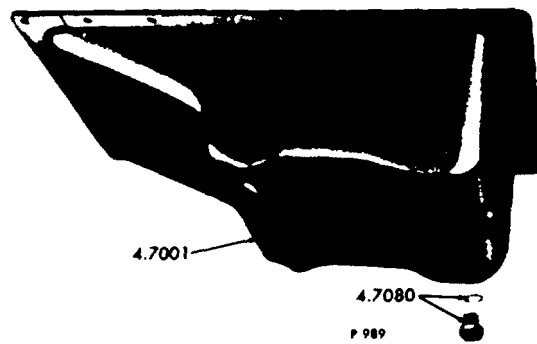


FIG. 7B OIL PAN (STAMPED)

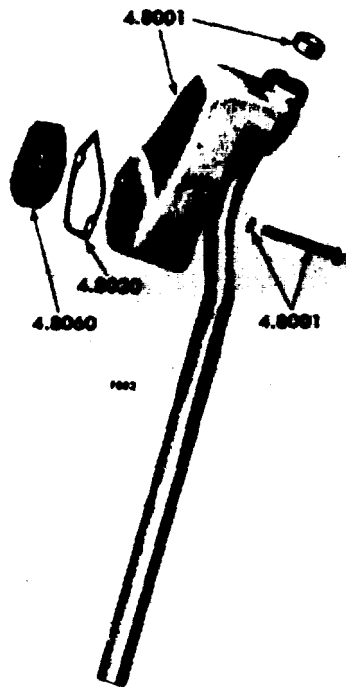


FIG. 8A BREATHER AND OIL FILLER

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>4.1001</u> PUMP ASSY., OIL  INCLUDES ITEMS IN 4.1040 THRU 4.1220 AND 4.1380.	
1A	5116110 193942	PUMP ASSY. BOLT, 5/16"-18x1 5/8" (AA LOCK) (12.9001)	1 6
		<u>4.1085</u> ROTOR ASSY., OIL PUMP  INCLUDES INNER AND OUTER ROTORS WHICH ARE NOT SOLD SEPARATELY.	
1A	5195714	ROTOR SET	1
		<u>4.1220</u> COVER, OIL PUMP	
1A 1A	5195685 145067	COVER SCREW, #6X3/8" DRIVE (12.9067)	1 2
		<u>4.1310</u> GEAR, OIL PUMP DRIVE (ON CRANKSHAFT)	
1A	5144375	GEAR	1
		<u>4.1510</u> PIPE, OIL PUMP INLET	
2A	5126211	* PIPE (A-5.12", B14")	1
2A	5119425	FLANGE	1
2A	5127175	SEAL RING	1
2A	179816	BOLT, 5/16"-18X3/4" (12.9001)	4
	103340	WASHER, 5/16" FLAT (12.9190)	2
2A	103320	LOCKWASHER, 5/16" (12.9200) *INCLUDES SUPPORT 5125947 NOT SERVICED SEPERATELY.	AR
		<u>4.1530</u> SCREEN, OIL PUMP INLET	
2A	5126456	SCREEN ASSY.	1
	5152385	SCREEN	1
2A	274558	NUT, 5/16"-24 HEX.LOCK (12.9140)	2
		<u>4.1690</u> SPRING, OIL PRESSURE REGULATOR	
1A	5126436	SPRING (ORANGE STRIPE) (4.1260)	2

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1A	5177777	<u>4.1700</u> VALVE, OIL PRESSURE REGULATOR VALVE (4.4140)	2
1A	5113657	<u>4.1710</u> PLUG, OIL PRESSURE REGULATOR PLUG	2
1A	5177773	<u>4.1720</u> GASKET, OIL PRESSURE REGULATOR PLUG GASKET (4.4170)	2

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>4.2240</u> FILTER ASSY., OIL  SEE ASSEMBLY BREAKDOWN AS INDICATED BELOW. FOR TYPES 130 & 134 ALSO SEE OIL FILTER LINES, 4.3000A, TYPE 98. FOR TYPE 139 USE TYPE 147.	
	5125025 5575213 128003 5111798	FILTER ASSY. DECAL (4.2280) BUSHING, 1"X3/4" RED. (12.9570) PLUG, 1" PIPE (12.9550)	AR AR
		A <u>4.2240</u> FILTER ASSY., OIL  5125025 FILTER ASSY.	
3A	5574978	<u>4.2250</u> ELEMENT, OIL FILTER  ELEMENT (6") (AC TYPE PF-147)	
3A 3A	5574906 5570480	<u>4.2280</u> SHELL, OIL FILTER  SHELL (INCLUDES PLUG) PLUG (2.3050)	
		<u>4.2290.</u> COVER, OIL FILTER (ADAPTOR)  5147684 ADAPTOR	
3A	5571024	<u>4.2300</u> CASKET, OIL FILTER COVER  GASKET	
3A	5187308	<u>4.2310</u> SPRING, OIL FILTER  SPRING	
3A	5187309 122366	<u>4.2315</u> RETAINER, OIL FILTER SPRING  RETAINER NUT. 5/8"-18 HEX. (12.9120)	

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
3A 3A	5187310 6437298 5154538	<u>4.2330</u> GASKET, OIL FILTER COVER NUT GASKET, RETAINER GASKET WASHER (1.8182)	1 1 1
3A	5116427	<u>4.2410</u> STUD, OIL FILTER CENTER STUD	1



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
10A		4.3025 ADAPTOR, OIL FILTER TUBE (TO OIL COOLER ADAPTOR)	
	5134303	ADAPTOR (AT BLOCK)	1
	186622	BOLT, 3/8"-16X1 1/4" (12.9001)	4
	103321	LOCKWASHER, 3/8" (12.9200)	4
		<u>4.3027</u> GASKET, OIL FILTER TUBE ADAPTOR	
	5121205	GASKET (4.2350)	
		<u>4.3055</u> VALVE, OIL FILTER TUBE ADAPTOR BY-PASS	
	5133431	# VALVE # PART OF VALVE KIT 5198303 (4.2485)	1
		<u>4.3057</u> SPRING, OIL FILTER TUBE ADAPTOR BY-PASS VALVE	
	5134477	# SPRING (4.2486) # PART OF 5198303 VALVE KIT (4.2485)	1
	<u>4.3060</u> RETAINER, OIL FILTER TUBE ADAPTOR BY-PASS SPRING		
5134456	# RETAINER (4.2488)	1	
160221	# SCREW #12-24x1/2" (12.9065) # PART OF 5198303 VALVE KIT (4.2485)	1	

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
4A	8501328	<u>4.4001</u> CORE ASSY., OIL COOLER CORE ASSY. (6 PLATE)	1
4A,C	5150155	<u>4.4030</u> GASKET, OIL COOLER CORE INNER GASKET	
4A,C	5154215	<u>4.4040</u> GASKET, OIL COOLER CORE OUTER GASKET	1
4A	5119451	<u>4.4050</u> HOUSING, OIL COOLER HOUSING	1
4A	103647	DRAINCOCK, 1/4" (12.9510)	1
4A	179830	BOLT, 5/16"-18X3" (12.9001)	7
4A	186270	BOLT, 5/16"-18X3 1/2" (12.9001)	1
4A	103320	LOCKWASHER, 5/16" (12.9200)	8
4A	5123413	<u>4.4110</u> ADAPTOR, OIL COOLER ADAPTOR	1
4A	186622	BOLT, 3/8"-16X1 1/4" (12.9001)	4
4A	179847	BOLT, 3/8"-16X2" (12.9001)	2
4A	103321	LOCKWASHER, 3/8" (12.9200)	AR
4A	5152904	<u>4.4115</u> GASKET, OIL COOLER ADAPTOR TO BLOCK GASKET	3
4A	5119286	GASKET	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
	5108474	<u>4.5010</u> CAP, OIL FILLER TUBE CAP ASSY. (TWIST) * FIG. 9D OF 1.0000.	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
6A	5109253	4.6001 DIPSTICK + DIPSTICK (X-12", Y-94", Z-10.54"). + NOT SERVICED: USE 5146680.	1
	5121062	<u>4.6020</u> GUIDE, DIPSTICK GUIDE (1 1/8" L.)	1
	5121061 137401	<u>4.6030</u> ADAPTOR, DISTICK * ADAPTOR (8.50" L.) NUT, 1/2" INV. FL. TUBE (12.9500) *NOT SERVICED: USE 5109621	1 1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
7B	5146360 5148437	<u>4.7001</u> PAN, OIL PAN (STAMPED) BOLT, 5/16"-18X1" (W/LW) (12.9001)	1 20
7B	5116256	<u>4.7030</u> GASKET, OIL PAN TO BLOCK GASKET	1
	144014 5145013	<u>4.7080</u> PLUG, OIL PAN DRAIN  PLUGS ARE OPTIONAL WHEN MULTIPLE QUANTITIES ARE SHOWN IN SAME TYPE.  PLUG, 1/2" SQ.HD. (12.9550) PLUG, 3/4" PIPE HEX. SKT. (12.9550)	3 1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<u>4.8001</u> PIPE, BREATHER	
		A PIPE ASSY. (PLAIN) INCLUDES PLUG IN 4.8001 AND FILTER IN 4.8060.	
		A PIPE ASSY. (WITH OIL FILLER) INCLUDES FILLER CAP CHAIN IN 4.5030.	
8A	5116395	PIPE ASSY. (PLAIN)	1
8A	5150829	PLUG, 7/8" CUP	1
8A	179828	BOLT, 5/16"-18X2 1/2" (12.9001)	2
8A	103320	LOCKWASHER, 5/16" (12.9200)	2
		<u>4.8020</u> GASKET, BREATHER TUBE	
8A	5116391	GASKET (1.5060)	1
		<u>4.8060</u> FILTER UNIT, BREATHER OIL SEPARATOR	
8A	5163918	FILTER	1

## GROUP NOMENCLATURE

5.0000	COOLING SYSTEM
5.1000	Fresh Water Pump
5.1000A	Fresh Water Pump Cover
5.2000A	Water Outlet Manifold and/or Elbow
5.2000B	Thermostat
5.2000C	Water By-pass Tube
5.3000B	Water Connections
5.4000A	Fan

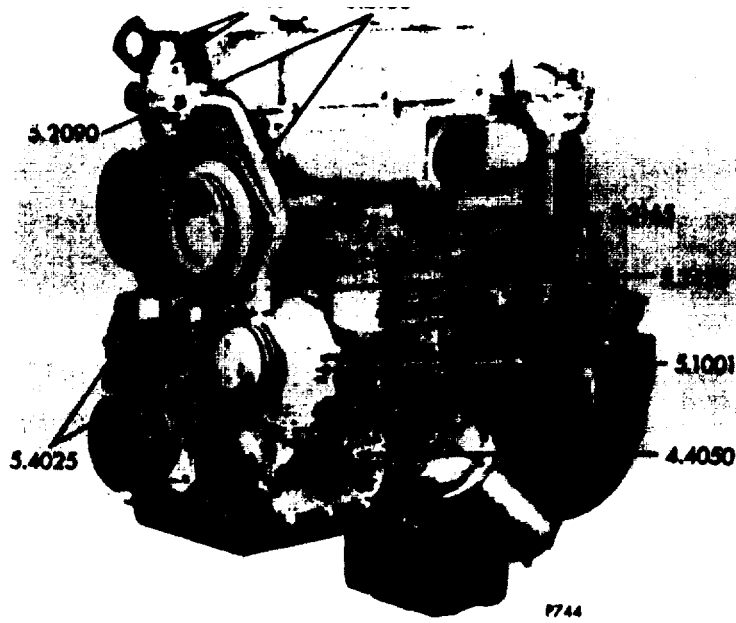


FIG. 1A TYPICAL COOLING SYSTEM (Inline Engines)



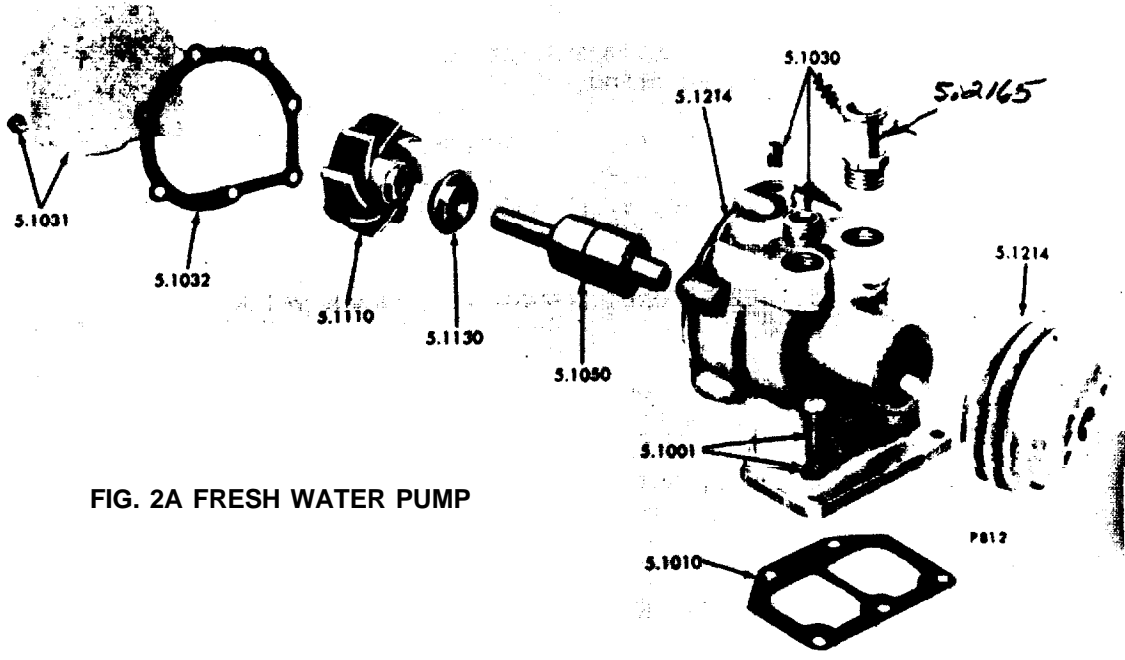


FIG. 2A FRESH WATER PUMP

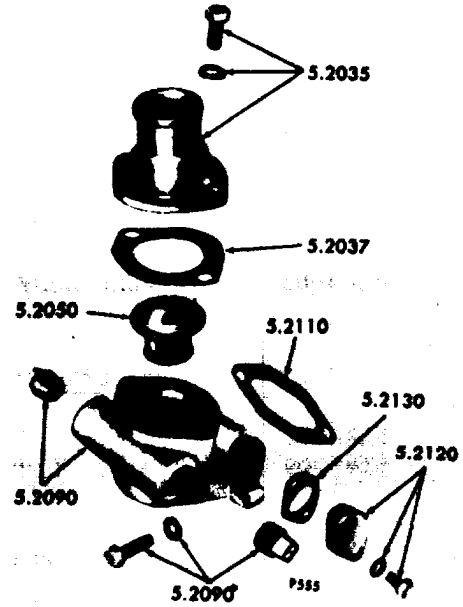


FIG. 3B THERMOSTAT  
(Mine Engines)

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1A	5144685 186625 103320	<u>5.1001</u> PUMP ASSY., FRESH WATER  SEE ASSEMBLY BREAKDOWN AS INDICATED BELOW.  PUMP ASSY. (L.H. ROTATION) BOLT, 5/16"-18X7/8" (12.9001) LOCKWASHER, 5/16" (12.9200)	1 5 5
		<u>5.1002</u> RECONDITIONING KIT, FRESH WATER PUMP  INCLUDES ITEMS IN 5.1010, 5.1032, 5.1050, 5.1110, AND 5.1130.  RECONDITIONING KIT (L.H. ROTATION PUMP 1	1
		<u>5.1010</u> GASKET, FRESH WATER PUMP  GASKET	1
2A	5133107	<u>5.1115</u> REPLACEMENT KIT, FRESH WATER PUMP SEAL SEAT  A REPLACEMENT KIT INCLUDES CERAMIC INSERT AND ADHESIVE.	
		5197279  REPLACEMENT KIT, IMPELLER INSERT	A R
2A	5144685  5144688 5145009	<u>5.1001</u> PUMP ASSY., FRESH WATER  PUMP ASSY. (L.H. ROTATION)	1
		<u>5.1030</u> BODY, FRESH WATER PUMP  BODY PLUG, 1/8" PIPE (12.9550)	1 1
		<u>5.1031</u> COVER, FRESH WATER PUMP  COVER BOLT, 5/16"-18X3/4" (W/LW) (12.9001)	1 7

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
2A	5119282	<u>5.1032</u> GASKET, FRESH WATER PUMP BODY COVER GASKET	1
2A	904827	<u>5.1050</u> SHAFT, FRESH WATER PUMP SHAFT ASSY. (INCLUDES BEARING)	1
2A	5113800	<u>5.1110</u> IMPELLER, FRESH WATER PUMP IMPELLER (WITH CERAMIC INSERT)	1
2A	5130959	<u>5.1130</u> SEAL, FRESH WATER PUMP SEAL	1
2A	5144503	<u>5.1214</u> PULLEY, FRESH PUMP PULLEY	1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1A	5134777	<u>5.2035</u> ELBOW, WATER OUTLET	
	156619	ELBOW, 90 DEG.	1
	179850	BOLT, 3/8"-16x1 1/8" (12.9001)	1
	103321	BOLT, 3/8"-16x2 3/4" (12.9001) LOCKWASHER (12.9200)	1 2
	5116092	<u>5.2037</u> GASKET, WATER OUTLET ELBOW GASKET	1
6A, B	3146695	<u>5.2050</u> THERMOSTAT ASSY. THERMOSTAT ASSY. (170 DEG. OPENING TEMP.)	1
1A	5123247	<u>5.2090</u> HOUSING, THERMOSTAT HOUSING	1
	5145014	PLUG, 3/8" PIPE (12.9550)	2
	5115214	PLUG, 1/2" PIPE (12.9550)	2
	108608	BOLT, 3/8"-16x2 1/8" (12.9001)	2
	103321	LOCKWASHER, 3/8" (12.9200)	2
3B	5116242	<u>5.2110</u> GASKET, THERMOSTAT HOUSING GASKET (TO CYLINDER HEAD) (1.2044)	1
	5119426	<u>5.2120</u> COVER, THERMOSTAT HOUSING FLANGE	1
	186618 103320	BOLT, 5/16"-18X5/8" (129001) LOCKWASHER, 5/16" (12.9200)	2 2
3B	5128139	<u>5.2130</u> GASKET, THERMOSTAT HOUSING COVER GASKET	1
	5108944	<u>5.2160</u> TUBE, WATER BY-PASS TUBE	1
1A	5119425	FLANGE (4.1510)	1
	5184301	SEAL RING (4.4060)	
	5142549	PLUG, 3/4" PIPE (12.9550)	
	186625	BOLT, 5/16"-18X7/8" (12.9001)	
	103320	LOCKWASHER, 5/16" (12.9200)	

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1A 1A 2A	5119251 5186840 5144702	<u>5.2165</u> HOSE, WATER BY-PASS TUBE # HOSE (7/8" I.D. X1.74" L.) (5169721) CLAMP, 1" DIA. HOSE (12.9660) CONNECTOR, 3/4" PIPE .88 HOSE # NOT SERVICED: USE PART NUMBER IN PARENTHESES AND CUT LENGTH TO 1.74"	1 2 1

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1A @ @	5121184 179819 103320	<p><u>5.3420</u> ELBOW, OIL COOLER WATER OUTLET</p> <p>* ELBOW BOLT, 5/16"-18x1 1/8" (12.9001) LOCKWASHER, 5/16" (12.9200) @FIG. 4A of 4.0000. * NOT SERVICED: USE 5138275 PLUS (2) 5145014 PLUGS.</p>	1 2 2
@	5116357	<p><u>5.3421</u> GASKET, OIL COOLER WATER OUTLET ELBOW</p> <p>GASKET (1.1070) @FIG. 4A of 4.0000.</p>	1
@	5116093 5186841	<p><u>5.3422</u> HOSE, OIL COOLER WATER OUTLET ELBOW</p> <p># HOSE (1 7/8" I.D. X4 3/4") (5199777) CLAMP, 1 9/16"-2 1/2" DIA. HOSE (12.9660) @FIG 4A of 4.0000.</p> <p>#NOT SERVICED: USE PART NUMBER IN PARENTHESES AND CUT LENGTH TO 4 3/4"</p>	1 2

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1A		<u>5.4010</u> BLADE, FAN	
	5147710	BLADE (18"-6 BLADE, BLOWER)	1
	186629	BOLT, 5/16"-18X1" (12.9001)	6
	103320	LOCKWASHER, 5/16" (12.9200)	6
		<u>5.4015</u> PULLEY & HUB ASSY., FAN	
		SEE ASSEMBLY BREAKDOWN AS INDICATED BELOW.	
	5145535	PULLEY ASSY.	1
		<u>5.4025</u> SUPPORT, FAN MOUNTING	
	5108945	SUPPORT	2
	5164294	SPACER (13/32"X7/8"X1/8") (7.1581)	4
	186612	BOLT, 3/8"-16X1 3/8" (12.9001)	4
	272429	BOLT, 3/8"-16X4 1/8" (12.9001)	4
	103321	LOCKWASHER, 3/8" (12.9200)	8
		<u>5.4015</u> PULLEY AND HUB ASSY. (FAN)	
	5145535	PULLEY ASSY.	1
		<u>5.4090</u> BRACKET, FAN SHAFT	
	5145389	BRACKET (INCLUDES INTEGRAL SHAFT)	1
		<u>5.4110</u> BEARING, FAN SHAFT	
	7450630	BEARING	1
	7451080	BEARING	1
	5131095	RETAINER, GREASE	1
5131124	SHIM (.15)	AR	
5131205	SHIM (.20)	AR	
5131206	SHIM (.25)	AR	
	<u>5.4140</u> RETAINER, FAN SHAFT BEARING		
5131122	SPACER, BEARING (5.4170)	1	
5134025	WASHER, 33/64"X1 1/2"X.32" CHAMF.	1	
9409060	BOLT, 1/2"-20X1 1/2" LOCK (12.9001)	1	

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
	5100408	<u>5.4150</u> SEAL, FAN SHAFT SEAL	1
	5144798	5.4180 CAP AND SPACER, FAN HUB CAP (PULLEY)	1
	5145376	<u>5.4235</u> PULLEY, FAN PULLEY (4.30" DIA., 2 GROOVE)	1



## **GROUP NOMENCLATURE**

<b>6.0000</b>	<b>EXHAUST SYSTEM</b>
6.1000A	Exhaust Manifold
6.2000A	Exhaust Muffler and/or Connections

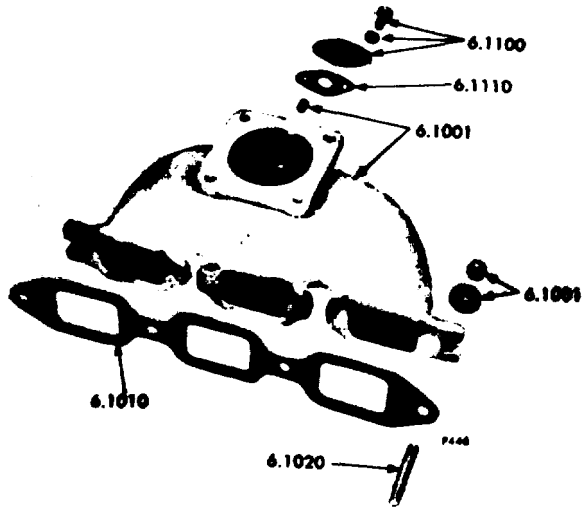


FIG. 1A EXHAUST MANIFOLD (Center Outlet)

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		6.1001 MANIFOLD, EXHAUST	
1A	5146215	MANIFOLD (RIGHT BANK)	1
1A	113175	PLUG, 1/8" PIPE (12.9550)	2
14	5188273	WASHER (DISHED, 1 1/4" O.D.)	4
1A	217855	NUT, 7/16"-20 (12.9120)	4
		<u>6.1010</u> GASKET, EXHAUST MANIFOLD	
1A	5116205	GASKET	1
		<u>6,1020</u> STUD, EXHAUST MANIFOLD TO HEAD	
1A	5112899	STUD, 7/16"X2 3/32" L.	4
		<u>6.1100</u> PLATE, EXHAUST MANIFOLD COVER	
	5121098	PLATE	2
	186618	BOLT, 5/16"-18X5/8" (12.9001)	4
	103320	LOCKWASHER, 5/16" (12.9200)	4
		<u>6.1110</u> GASKET, EXHAUST MANIFOLD COVER PLATE	
	5113412	GASKET (7.4510)	2

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
	NPN	6.2085 FLANGE, EXHAUST FLANGE (CUSTOMER FURNISHED)	1
	5108377	<u>6.2105</u> GASKET, EXHAUST OUTLET GASKET	1

## **GROUP NOMENCLATURE**

<b>7.000</b>	<b>ELECTRICAL-INSTRUMENTS</b>
<b>7.1000A</b>	<b>Battery Charging Generator</b>
<b>7.3000A</b>	<b>Starting Motor</b>

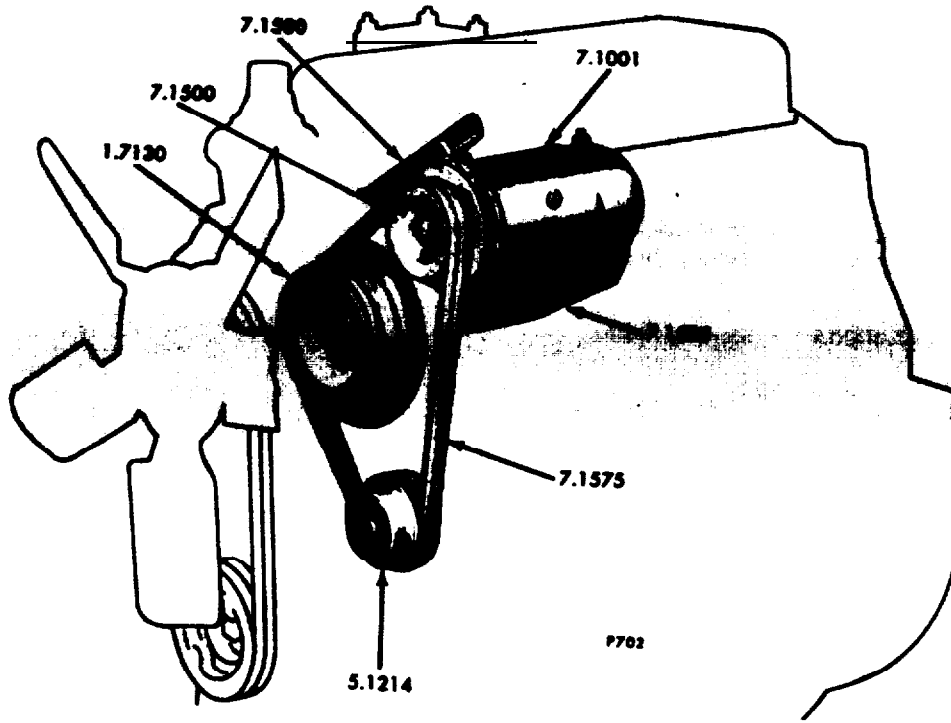


FIG. 1A BATTERY CHARGING GENERATOR

FIG	PART NUMBER	GROUP NUMBER NAME AND DESCRIPTION	QUANTITY
		<u>7.1001</u> GENERATOR ASSY.	
		NOTE: SERVICE ON ELECTRICAL EQUIPMENT IN THIS SECTION SO INDICATED ( * ) IS HANDLED THRU UNITED DELCO.	
1A	1100583	* ALTERNATOR (12V., 42 AMP., C.W./ C.C.W.) NEGATIVE GROUND)	1
	186285	BOLT, 3/8"-16X4" (12.9301)	1
	5131433	WASHER SPECIAL (1.5001)	2
	103321	LOCKWASHER, 3/8" (12.9200)	AR
	117062	NUT, 3/8"-16 (12.9120)	1
		<u>7.1440</u> FAN, GENERATOR	
	1959703	* FAN (INCLUDES BAFFLE)	1
		<u>7.1500</u> PULLEY, GENERATOR	
1A	5132527	PULLEY	1
		<u>7.1575</u> BELT, GENERATOR DRIVE	
1A	5133173	BELT SET (2 BELTS, 42"L. X 380"W)	1
		<u>7.1580</u> _STRAP, GENERATOR ADJUSTING	
1A	5148773	STRAP	1
	5121403	SPACER, 3/16" THICK (3.4080)	1
	179819	BOLT, 5/16"-18X1 1/8" (12.9001)	1
	186622	BOLT, 3/8"-16X1 1/4" (12.9001)	1
	103320	LOCKWASHER, 5/16" (12.9200)	AR
	103321	LOCKWASHER, 3/8" (12.9200)	AR

FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
1A	5148789 5139747 186628 103321	<u>7.1595</u> B-PACKET, GENERATOR MOUNTING  BRACKET BUSHING BOLT, 3/8"-16X2 1 1/2" (12.9001) LOCKWASHER, 3/8" (12.9203)	1 1 3 AR
	5100420 106498 103089	<u>7.1630</u> WIRE ASSY., GENERATOR TO REGULATOR  WIRE ASSY. (INCLUDES RECTIFIER) LOCKWASHER, #12 NUT, 12-24 HEX.	1 1 1



FIG	PART NUMBER	GROUP NUMBER, NAME AND DESCRIPTION	QUANTITY
		<p><u>7.3001</u> MOTOR ASSY. STARTING</p> <p>FOR TYPE 141 USE TYPE 210.  NOTE: SERVICE ON ELECTRICAL EQUIPMENT IN THIS SECTION SO INDICATED (*) IS HANDLED THROUGH UNITED DELCO.</p>	
	1113216	* MOTOR ASSY. (12V., C.W., GRD. SPRAG)	1
	9418228	BOLT, 5/8"-11x1 3/4". 12 PT. (12.9005)	1
	223435	BOLT, 5/8"-11X1 3/4" (12.9301)	2
	103325	LOCKWASHER, 5/8" (12.9200)	3

**By Order of the Secretary of the Army:**

**Official :**

**E. C. MEYER**  
***General, United States Army***  
***Chief of Staff***

**ROBERT M. JOYCE**  
***Major General, United States Army***  
***The Adjutant General***

**Distribution :**

To be distributed in accordance with DA Form 12-52B, Organizational maintenance requirements for Compactor, High Speed, Self-Propelled.

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)

Your mailing address

DATE SENT

Date you filled out form.

PUBLICATION NUMBER

TM 5-XXXX-XXX-XX

PUBLICATION DATE

Date of TM

PUBLICATION TITLE

Title of TM

BE EXACT PIN-POINT WHERE IT IS

PAGE NO	PARA. GRAPH	FIGURE NO	TABLE NO
400		183	
512		191	

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

Change illustration Reason: Tube end shown assembled on wrong side of lever cam.

Figure 191, item 3 has the wrong NSN. Supply rejects orders for this item. The NSN shown here is not listed in the AMDF or the MCRL.

Please give us the correct NSN and P/N.

SAMPLE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

John Smith, S. SGT. 793/XXXX

SIGN HERE

*John Smith*

DA FORM 2028-2 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.

U.S. - IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

**SOMETHING WRONG WITH THIS PUBLICATION?**

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 5-3895-347-14&P

PUBLICATION DATE

7 Jan 83

PUBLICATION TITLE Hyster Model C530A

Roller, Pneumatic Tired

BE EXACT PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE

FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

Commander  
US Army Tank-Automotive Command  
ATTN: DRSTA-MB  
Warren, MI 48090

TEAR ALONG PERFORATED LINE

# THE METRIC SYSTEM AND EQUIVALENTS

## WEIGHT MEASURE

1 Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches  
 1 Meter = 100 Centimeters = 1000 Millimeters = 39.37 Inches  
 1 Kilometer = 1000 Meters = 0.621 Miles

## WEIGHTS

1 Gram = 0.001 Kilograms = 1000 Milligrams = 0.035 Ounces  
 1 Kilogram = 1000 Grams = 2.2 lb.  
 1 Metric Ton = 1000 Kilograms = 1 Megagram = 1.1 Short Tons

## LIQUID MEASURE

1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces  
 1 Liter = 1000 Milliliters = 33.82 Fluid Ounces

## SQUARE MEASURE

1 Sq. Centimeter = 100 Sq. Millimeters = 0.155 Sq. Inches  
 1 Sq. Meter = 10,000 Sq. Centimeters = 10.76 Sq. Feet  
 1 Sq. Kilometer = 1,000,000 Sq. Meters = 0.386 Sq. Miles

## CUBIC MEASURE

1 Cu. Centimeter = 1000 Cu. Millimeters = 0.06 Cu. Inches  
 1 Cu. Meter = 1,000,000 Cu. Centimeters = 35.31 Cu. Feet

## TEMPERATURE

$5/9(^{\circ}\text{F} - 32) = ^{\circ}\text{C}$   
 212° Fahrenheit is equivalent to 100° Celsius  
 90° Fahrenheit is equivalent to 32.2° Celsius  
 32° Fahrenheit is equivalent to 0° Celsius  
 $9/5^{\circ}\text{C} + 32 = ^{\circ}\text{F}$

## APPROXIMATE CONVERSION FACTORS

TO CHANGE	TO	MULTIPLY BY
Inches	Centimeters	2.540
Feet	Meters	0.305
Yards	Meters	0.914
Miles	Kilometers	1.609
Square Inches	Square Centimeters	6.451
Square Feet	Square Meters	0.093
Square Yards	Square Meters	0.836
Square Miles	Square Kilometers	2.590
Acres	Square Hectometers	0.405
Cubic Feet	Cubic Meters	0.028
Cubic Yards	Cubic Meters	0.765
Fluid Ounces	Milliliters	29.573
its	Liters	0.473
arts	Liters	0.946
allons	Liters	3.785
Ounces	Grams	28.349
Pounds	Kilograms	0.454
Short Tons	Metric Tons	0.907
Pound-Feet	Newton-Meters	1.356
Pounds per Square Inch	Kilopascals	6.895
Miles per Gallon	Kilometers per Liter	0.425
Miles per Hour	Kilometers per Hour	1.609

TO CHANGE	TO	MULTIPLY BY
Centimeters	Inches	0.394
Meters	Feet	3.280
Meters	Yards	1.094
Kilometers	Miles	0.621
Square Centimeters	Square Inches	0.155
Square Meters	Square Feet	10.764
Square Meters	Square Yards	1.196
Square Kilometers	Square Miles	0.386
Square Hectometers	Acres	2.471
Cubic Meters	Cubic Feet	35.315
Cubic Meters	Cubic Yards	1.308
Milliliters	Fluid Ounces	0.034
Liters	Pints	2.113
Liters	Quarts	1.057
ers	Gallons	0.264
ms	Ounces	0.035
ograms	Pounds	2.205
Metric Tons	Short Tons	1.102
Newton-Meters	Pounds-Feet	0.738
Kilopascals	Pounds per Square Inch	0.145
ometers per Liter	Miles per Gallon	2.354
ometers per Hour	Miles per Hour	0.621



**PIN: 052323-000**