


TECHNICAL MANUAL

**OPERATOR'S, ORGANIZATIONAL,
DIRECT SUPPORT AND GENERAL SUPPORT
INSTRUCTIONS
MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS INFORMATION AND
SUPPLEMENTAL MAINTENANCE AND REPAIR PARTS
INSTRUCTIONS)**

**OPERATING
INSTRUCTIONS**

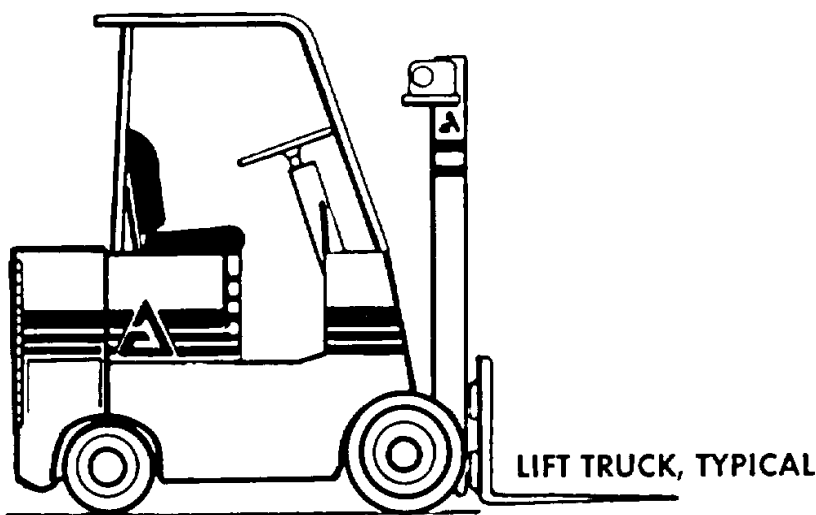

**MAINTENANCE
INSTRUCTIONS**

**REPAIR
INSTRUCTIONS**

**TRUCK, FORK LIFT
GASOLINE ENGINE DRIVEN, 4,000 LB.CAPACITY,**

**SUPPLEMENTAL OPERATING
MAINTENANCE AND REPAIR
PARTS INSTRUCTIONS**

**ALLIS-CHALMERS
MODEL ACP-40-PS MHE 234
NSN 3930-01-040-4594**

(144" LIFT HEIGHT & PNEUMATIC TIRES)

**MODEL ACC-40-PS MHE 232
NSN 3930-01-039-8291**

(144" LIFT HEIGHT & SOLID RUBBER TIRES)

NSN 3930-01-039-8292

(180" LIFT HEIGHT & SOLID RUBBER TIRES)

PARTS LIST

FOREWORD

Allis-Chalmers Lift Trucks are designed, operator-engineered, and manufactured to rigid specifications so that your company can achieve the most production for its investment. Correct operation and regular preventive maintenance, coupled with authorized Allis-Chalmers service and parts will ensure long operational life and continued top performance of your lift truck. This Operator's Manual is your guide to proper operation and service intervals. By using this manual, veteran operators can gain additional information on techniques, while operators with little or no experience can learn proper operation in less time and with less chance of an accident

INTENDED USE

A lift truck is a mobile, self propelled machine intended to lift, stock and carry material within its rated capacity in and around plants, warehouses, yards, loading platforms, docks, railroad cars and highway trailers over paved and well graded, semiprepared surfaces for short distances. It is usually associated with manufacturing or warehousing and is not intended for such uses as earth moving, snow removal or over the road hauling. Any unintended use may seriously affect its operational safety, reliability and longevity.

WARNING

Dry cleaning solvent, used to clean parts, is potentially dangerous to personnel and property. Do not use near open flame or excessive heat. Flash point of this solvent is 138° F.

WARNING

When removing radiator cap, use a rag to protect your hand. Loosen cap only 1/4 turn and let pressure release. Steam produced can scald.

WARNING

No smoking or open sparks, arcs, or flame allowed in area while fueling or working on any part of fuel system.

WARNING

Brake assembly parts may be coated with asbestos dust. Breathing asbestos dust may be hazardous to your health. Never use compressed air or dry brush to clean these assemblies. Dust shall be removed using an industrial type vacuum cleaner equipped with a high efficiency filter system. Clean dirt or mud from brake-assemblies with water and a bristle brush or a cloth.

WARNING

Carbon monoxide poisoning can be deadly. Do not operate in an enclosed area unless adequate ventilation is provided.

WARNING

When backing forklift look where you are going and what your load is doing. Crushing may result. When you turn around to see, care must be taken to keep all of your body within the overhead protection frame.

WARNING

It is normal for the battery to generate hydrogen gas which is explosive when mixed with air. Never expose the battery to an open flame or to an electric spark. Do not remove or install battery cables while vent plugs are removed. Battery fluid is a sulfuric acid solution. Avoid getting it on skin, clothing, painted surfaces, etc. Should any of the solution come in contact with your Clothing or skin, flush the area immediately with cold water. If the solution gets on your face or in your eyes, flush the area with cold water and get medical help immediately.

WARNING

This (testing of ignition switch circuits) could be dangerous work. Electrically it is always wisest to disconnect the battery when any troubleshooting or maintenance is performed on the electrical system.

WARNING

Be sure to properly support the carrier assembly as the cap screws are removed.

WARNING

Be certain that hoist chain and lift are adequately rated for estimated counterweight mass density. Do not attempt to lift counterweight with a hoist rated below estimated counterweight mass.

WARNING

Always provide adequate ventilation of the working area during this operation (cleaning radiator cooling fans) to avoid possible toxic effects of the cleaning spray.

WARNING

Before proceeding further (with exhaust system removal), be absolutely sure that engine has not been running for at least an hour or two. This will insure that exhaust system has cooled adequately.

**OPERATOR, ORGANIZATIONAL,
DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE MANUAL**

**(Including Repair Parts Information and
Supplemental Maintenance and Repair Parts
Instructions)**

TRUCK, FORK LIFT, 4,000 LB.CAPACITY
GASOLINE ENGINE DRIVEN (Allis Chalmers)
MODEL ACP-40-PS MHE 234
NSN 3930-01-040-4594
(144" LIFT HEIGHT & PNEUMATIC TIRES)
MODEL ACC-40-PS MHE 232
NSN 3930-01-039-8291
(144" LIFT HEIGHT & SOLID RUBBER TIRES)
NSN 3930-01-039-8292
(180" LIFT HEIGHT & SOLID RUBBER TIRES)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Tank-Automotive Command, Warren, MI 48090, ATTN: DRSTA-MBS. A reply will be furnished to you.

TABLE OF CONTENTS

	<u>PAGE</u>
CHAPTER I OPERATING INSTRUCTIONS	1-1
CHAPTER I INDEX.....	1-1C
GENERAL DESCRIPTION.....	1-1E
PREPARING A NEW TRUCK FOR SERVICE	1-3
OPERATING CONTROLS	1-4
OPERATION OF LIFT TRUCK	1-7
BATTERY	1-14
LUBRICANT SPECIFICATIONS	1-15
LUBRICANT AND SERVICE	1-17
CHAPTER II MAINTENANCE INSTRUCTIONS	2-1
MAINTENANCE INDEX.....	2-1A
ENGINE	
DESCRIPTION AND SPECIFICATIONS	2-1B

VALVE ADJUSTMENT2-4
 OIL FILTER.....2-5
 OIL PRESSURE RELIEF VALVE2-5
 ENGINE TUNE- UP.....2-6
 TROUBLESHOOTING CHART.....2-11

FUEL SYSTEM

FUEL SYSTEM (PRT)2-16
 AIR CLEANER (PRT)2-18
 AIR CLEANER (SRT)2-18A
 FUEL TANK2-19
 FUEL PUMP AND FILTER.....2-19
 CARBURETOR.....2-20
 ACCELERATOR LINKAGE.....2-21
 GOVERNOR.....2-22

ELECTRIC SYSTEM

ELECTRICAL SYSTEM.....2-23
 BATTERY2-24
 ALTERNATOR AND REGULATOR2-25
 STARTER MOTOR2-27
 ELECTRICAL WIRING2-28
 HORN AND HORN RELAY.....2-29
 IGNITION COIL.....2-30
 DISTRIBUTOR.....2-32
 INSTRUMENT PANEL.....2-35

COOLING SYSTEM

COOLING SYSTEM2-39
 RADIATOR.....2-41
 WATER PUMP.....2-43
 THERMOSTAT.....2-45
 FAN AND FAN BELT.....2-47

TRANSMISSION

TRANSMISSION2-49
 POWER SHIFT TRANSMISSION CHECKOUT PROCEDURES...2-53
 SHIFTING MECHANISM.....2-56
 OIL COOLER2-58
 OIL FILTER.....2-59
 UNIVERSAL JOINT.....2-61

DRIVE AXLE

DRIVE AXLE.....2-63
 HYDRAULIC BRAKES2-69
 DIFFERENTIAL2-69
 DRIVE WHEEL PNEUMATIC TIRES (PRT ONLY)2-73

BRAKE SYSTEM

BRAKES.....2-75
 MASTER CYLINDER.....2-76
 DRIVE WHEEL BRAKES.....2-77
 PARKING BRAKE.....2-78

POWER STEERING SYSTEM

STEERING2-79
 STEER AXLE.....2-80
 STEERING WHEEL AND COLUMN.....2-82
 DRAG LINK2-82
 TIE ROD.....2-83
 POWER STEER CYLINDER.....2-83
 WHEELS AND TIRES.....2-83A

HYDRAULIC SYSTEM

HYDRAULIC SYSTEM SERVICE.....2-85

COUNTERWEIGHT AND FRAME2-91

COUNTERWEIGHT AND FRAME.....2-91
 COUNTERWEIGHT.....2-91
 BODY COMPONENTS2-94
 OVERHEAD GUARD.....2-96

HIGH FREE LIFT MAST

GENERAL.....2-97
 MAST ASSEMBLY2-98
 LIFT CYLINDERS2-99

CARRIAGES, SIDESHIFTER AND FORKS

CARRIAGE.....2-101
 SIDESHIFTER (PRT ONLY)2-103
 FORKS.....2-104

TROUBLESHOOTING CHARTS

FUEL SYSTEM.....2-105
 COOLING SYSTEM2-107
 HYDRAULIC SYSTEM2-108
 DRIVE UNIT.....2-109
 HYDRAULIC BRAKE SYSTEM.....2-110
 POWER STEERING SYSTEM.....2-111
 MAST HYDRAULIC SYSTEM2-112
 POWER SHIFT TRANSMISSION.....2-113
 ELECTRICAL SYSTEM.....2-114

LUBRICANT AND FUEL SPECIFICATIONS

LUBRICANT SPECIFICATIONS.....2-116
 FUEL SPECIFICATIONS2-117

	LUBRICATION CHART.....	2-119
CHAPTER III	REPAIR INSTRUCTIONS	3-1
	REPAIR INDEX.....	3-1A
ENGINE ASSEMBLY		
	FITS AND TOLERANCES.....	3-1B
	ENGINE SERVICE AND MAINTENANCE	3-4
	MANIFOLD.....	3-5
	VALVES, INTAKE AND EXHAUST.....	3-7
	CYLINDER HEAD.....	3-13
	CRANKSHAFT AND CRANKSHAFT COMPONENTS	3-15
	FLYWHEEL AND HOUSING.....	3-23
	PISTON AND CONNECTING RODS	3-27
	CAMSHAFT, CAMSHAFT BEARINGS, AND VALVE TAPPETS	3-33
	GEAR TRAIN.....	3-35
	CYLINDER BLOCK	3-39
	OIL PUMP	3-43
	OIL PRESSURE RELIEF VALVE	3-45
	FILLER BLOCKS AND OIL GUARD.....	3-46
	OIL PAN.....	3-48
	ENGINE RUN-IN SCHEDULE	3-49
	ENGINE REMOVAL/INSTALLATION.....	3-50
FUEL SYSTEM		
	FUEL SYSTEM.....	3-53
	FUEL TANK	3-55
	FUEL PUMP AND FUEL FILTER	3-57
	CARBURETOR (TYPE II) (PRT)	3-59
	CARBURETOR (SRT).....	3-66
	ACCELERATOR LINKAGE.....	3-67
	GOVERNOR.....	3-69
	AIR CLEANER (PRT)	3-70
ELECTRICAL SYSTEM		
	BATTERY.....	3-71
	ALTERNATOR.....	3-81
	STARTER MOTOR.....	3-91
	DISTRIBUTOR (TYPE II).....	3-98
COOLING SYSTEM		
	COOLING SYSTEM DESCRIPTION.....	3-103
	WATER PUMP.....	3-105
	RADIATOR.....	3-109
	EXHAUST SYSTEM	3-113
TRANSMISSION		
	TRANSMISSION.....	3-115

TORQUE CONVERTER AND PUMP	3-125
DRUM ASSEMBLY	3-127
CONTROL VALVE	3-129
UNIVERSAL JOINT	3-131
DRIVE AXLE	
DRIVE AXLE	3-135
DIFFERENTIAL	3-142
DRIVE WHEEL PNEUMATIC TIRES (PRT)	3-146
BRAKE SYSTEM	
DRIVE WHEEL BRAKES	3-147
MASTER CYLINDER	3-151
WHEEL CYLINDERS	3-153
PARKING BRAKE	3-153
BLEEDING THE BRAKE SYSTEM	3-155
POWER STEERING SYSTEM	
GENERAL DESCRIPTION	3-157
STEER AXLE	3-157
STEERING VALVE UNIT	3-163
STEERING CYLINDER AND DRAG LINK	3-171
TIE RODS	3-175
STEER WHEELS (PRT)	3-176
STEER WHEELS (SRT)	3-178a
HYDRAULIC SYSTEM	
HYDRAULIC PUMP	3-179
CONTROL VALVE	3-182
TILT CYLINDER	3-185
MASTS, CARRIAGES AND FORKS	
MASTS	3-189
LIFT CYLINDERS	3-192
CARRIAGES	3-195
FORK	3-197
WELDING REPAIR PROCEDURE	3-199
SIDE SHIFTERS	3-201
HOSE REEL	3-204
SUPPLEMENTAL OPERATING, MAINTENANCE AND REPAIR PARTS INSTRUCTIONS	i
GENERAL	1
MAINTENANCE	3
REPAIR PARTS SUPPLY	5

APPENDIX A-L.....8

 WARRANTY8

 ASL/PLL9

 MAC.....10

 MEL CHART.....25

 MAOSL.....26

 MAINTENANCE OF NEW VEHICLE.....28

 PREVENTIVE MAINTENANCE CHECKS AND SERVICES
 (PMCS).....30

 BASIC ISSUE ITEMS LIST42

 DISTRIBUTION CODES44

 FLOW OF REQUISITIONS AND MATERIEL PARTS, NSN.....47

 FLOW OF REQUISITIONS AND MATERIEL PARTS, NON-
 NSN48

 SAMPLE REQUISITIONING FORMATS49

PARTS LISTi

 BASE UNIT INDEX.....ii

 FSCN INDEX.....iii

 PART NUMBER LIST.....A

ILLUSTRATIONS.....1A

"This technical manual is an authentication of the manufacturer's commercial literature and does not conform with the format and content specified in AR 310-3, Military Publications. The technical manual does, however, contain available information that is essential to the operation and maintenance of the equipment."

ILLUSTRATIONS

	<u>PAGE</u>
Accelerator	45
Accelerator Pedal and Cable	45b
Air Cleaner (PRT)	43
Air Cleaner (PRT Model No. 113217).....	43a
Air Cleaner (SRT)	43c
Alternator	47
Alternator Assembly.....	49, 49a
Battery	67
Battery Tray.....	69
Brake Master Cylinder.....	97
Brake Pedal.....	95
Carburetor.....	39
Carriage Backrest	185
Clutch Assemble Forward and Reverse.....	79
Control Valve.....	135
Counterweight	143
Cowl	143b
Crankcase Ventilation	11
Crankshaft.....	5
Cross Tie.....	161
Cylinder Assembly	190
Cylinder Block	1-B
Cylinder Head.....	9
Deck.....	155, 155b
Differential Assembly	90b
Differential Carrier.....	89
Distributor.....	55
Distributor Assembly	57
Drive Axle.....	87
Drive Wheel.....	93, 93b
Drive Wheel Brakes	99, 99b
Engine Mounting.....	35
Exhaust Group (PRT)	33
Exhaust Group (SRT)	33b
Floor Plate Power Shift.....	145
Flywheel and Housing Power Shift	21
Fork Components	186
Front Screen.....	163, 163b
Fuel Strainer.....	37f
Fuel System (PRT).....	37
Fuel System (SRT).....	37b
Gear Cover.....	23
Headlight and Connections.....	64
Horn Group	63
Hose Group.....	194
Hose Reel Assembly.....	192

	<u>PAGE</u>
Hydraulic Adaption.....	195
Hydraulic Filter.....	131
Hydraulic Pump	125, 127
Inching Control (PRT).....	83
Inching Control (SRT).....	83b
Instrument Panel Assembly	61
Instrument Panel and Connections.....	59
Intake and Exhaust Manifold.....	25
Junction Block.....	193
Lift Assembly - 180" (Tri-Max).....	165
Lift Assembly - 144" (Tri-Max).....	169
Lift Cylinder	180
Lift Cylinder Cluster - 144", 180"	173
Lift Cylinder Cluster.....	183
Main Hydraulics.....	123
Mast Assembly	177
Mast Mounting	159
Oil Filter	19
Oil Pan.....	17, 17A
Oil Pump.....	15
Overhead Guard.....	149
Parking Brake Assembly	91
Parking Brake Lever.....	103
Piston and Connecting Rod	7
Plunger Section Assembly - Lift	137
Plunger Section Assembly - Side Shift.....	141
Plunger Section Assembly - Tilt,/ACC.....	139
Power Steer Cylinder	117
Power Steering Linkage.....	115
Radiator - Power Shift	31
Reel Group - R.H.....	191
Reservoir.....	129, 129a
Seat.....	151
Seat Assembly	153
Shifting Assembly - Power Shift	109
Side Panel.....	157
Side Shift Carriage.....	189
Starter.....	51
Starter Assembly	52a, 53a
Steer Axle	105
Steer Unit	113
Steer Wheel	117e, 119
Steering Hydraulics	121
Stop and Tail Light	65
Thermostat and Housing	29
Tilt Cylinder and Connections	133
Toe Plate - Power Shift	147, 147b
Transmission Assembly	73
Transmission Filter	81
Transmission - Power Shift	71
Transmission Valve Assembly	77
Universal Joint - P/S	85
Valve Mechanism	13

PAGE

Water Pump and	27
Wheel Cylinder	101
Yoke Assembly.....	117c

COMPONENT SPECIFICATIONS

ENGINE 4878341-1

Manufacturer.....Continental Motors
 Manufacturer Part No.....F163-08283
 Manufacturer FSCM Code.....02978
 Cylinders4
 Type.....Valve in head

ALTERNATOR 3057631 8

Manufacturer.....Delco Remy
 Manufacturer Part No.....1107578
 Manufacturer FSCM Code.....16764
 System Voltage.....12
 System Ground.....Neg.
 Amp18

STARTER 4876696-9

ManufacturerDelco Remy
 Manufacturer Part No.....1109053
 Manufacturer FSCM Code.....16764
 Voltage12

DRIVE AXLE GROUP

ManufacturerAllis-Chalmers
 Manufacturer Part No4878423-5
 Manufacturer FSCM Code30612

SPECIFICATIONS:

Type Double Reduction: Full Floating
 Ratio 3.7:1
 Capacity5 pints

WHEEL CYLINDER 4717072.5

ManufacturerWagner Electric
 Manufacturer Part NoFD20945A
 Manufacturer FSCM Code63477

SPECIFICATION:

TypeStandard Straight Bore
 Double end

POWER STEERING CYLINDER

ManufacturerAllis Chalmers
 Manufacturer Part No48805154
 Manufacturer FSCM Code30612

SPECIFICATIONS:

Type Single Plunger
 Stroke8"

BRAKE MASTER CYLINDER 4713374-9

ManufacturerWagner Electric
 Manufacturer Part NoFE3085D
 Manufacturer FSCM Code63477

SPECIFICATION:

TypeCombination Reservoir
 and Cylinder

POWER STEERING UNIT

Manufacturer.....Allis Chalmers
 Manufacturer Part No.....4880395-1
 Manufacturer FSCM Code.....30612

SPECIFICATIONS:

Displacement4.5 cubic in.
 Steering Rev. (turns).....5

BATTERY

ManufacturerAllis-Chalmers
 Manufacturer Spec. No.....0243472-8
 Manufacturer FSCM Code.....30612

DRIVE TIRES (front)

Manufacturer.....Goodyear
 Manufacturer Part No.....
 Allis-Chalmers Part No.....4795711-3

SPECIFICATIONS:

ModelPneumatic
 Size.....7.00 x 15-12 ply

STEER TIRES (rear)

Manufacturer.....Goodyear
 Manufacturer Part No.....
 Allis-Chalmers Part No.....4795712-1

SPECIFICATIONS:

ModelPneumatic
 Size.....6.50 x 10-10 ply

HYDRAULIC PUMP

4880396-9

Manufacturer.....Allis-Chalmers
 Manufacturer Part No.....PVP2-115A
 Manufacturer FSCM Code.....11671

SPECIFICATIONS

G.P.M. at 2500
 R.P.M.....2.3 (2500 psi)

Rotation (viewed from
 drive gearshaft end):Clockwise

LIFT CYLINDER

Manufacturer.....Allis-Chalmers
 Manufacturer Part No.....4839271-6
 Manufacturer FSCM Code.....30612

Type.....Tri. Max.
 Stroke.....83.88 in.
 Collapsed Height.....95.5 in.

TILT CYLINDER

Manufacturer Allis-Chalmers
Manufacturer Part No..... 4827196-9
Manufacturer FSCM Code.....30812

SPECIFICATIONS:

TypeSingle Stage
 Forward 8°
Tilt
 Back 11°
Stroke3.75 in.
Retracted Length 13.94 in.

OPERATING INSTRUCTIONS

STANDARD VALUES						
CAPSCREW SIZE	POUNDS FOOT					
	GRADE 2		GRADE 5		GRADE 8	
	NC	NF	NC	NF	NC	NF
1/4"	5-7	6-8	9-11	11-13	12-14	14-16
5/16"	11-13	13-15	18-20	21-23	25-27	28-30
3/8"	18-21	19-22	28-33	30-35	41-46	43-48
7/16"	30-33	32-35	44-49	50-55	69-74	72-77
1/2"	45-50	45-50	68-73	68-73	95-105	95-105
9/16"	60-65	60-65	95-105	95-105	130-140	130-140
5/8"	75-85	75-85	125-135	125-135	170-190	170-190
3/4"	125-135	125-135	210-230	210-230	290-310	290-310
7/8"	105-115	105-115	290-310	290-310	450-500	450-500
1"	140-150	450-475	380-410		600-630	
SPECIAL VALUES						
DESCRIPTION			THREAD SIZE	TORQUE LBS. FT.		
Cylinder Head Mounting			1/2 - 13	110-120		
Cylinder Head Mounting			1/2 - 13	110-120		
Cylinder Head Lifting			1/2 - 20	110-120		
Thermostat Housing and Cylinder Head			1/2 - 13	110-120		
Water Outlet			3/8 - 16	18-21		
Manifold. Intake and Exhaust			7/16 - 20	32-35		
Main Bearing Mounting			9/16 - 12	120-130		
Connecting Rod			3/8 - 24	45-50		
Crankshaft Pulley Retaining			1 - 16	240-260		
Oil Pressure Regulating Screw			3/4 - 16	125-135		
Lube Oil Filter Mounting			1/2 - 13	45-50		
Spark Plugs			14 MM	25-30		

OPERATOR'S INDEX

TOPIC	TOPIC TITLE	PAGE	TOPIC	TOPIC TITLE	PAGE
1	GENERAL DESCRIPTION.....	1-1			
2	PREPARING A NEW TRUCK FOR SERVICE.	1-3		B. SHIFTING OPERATION - POWER SHIFT	
	A. INSPECTION UPON DELIVERY			C. LIFTING AND LOWERING OPERATIONS	
	B. ENGINE OIL			D. TILTING OPERATIONS	
	C. COOLING SYSTEM			E. SIDE SHIFTER OPERATION	
	D. FUEL TANK			F. FORK ADJUSTMENT	
	E. LUBRICATION			G. LOAD HANDLING PROCEDURES	
	F. BATTERY			1. Lifting a Palletized Load	
	G. POWER SHIFT TRANSMISSION			2. Traveling	
	H. DIFFERENTIAL			3. Positioning, Stacking, and Unloading	
	I. HYDRAULIC SYSTEM			4. Unpalletized Loads	
	J. BRAKE MASTER CYLINDER				
	K. AIR CLEANER				
3	OPERATING CONTROLS.....	1-4	5	BATTERY.....	1-14
	A. STEERING WHEEL				
	B. FORWARD/REVERSE LEVER - POWER SHIFT		6	LUBRICANT SPECIFICATIONS.....	1-15
	C. LIFT AND TILT CONTROLS			A. ENGINE LUBRICATION OIL	
	D. PARKING BRAKE LEVER			B. HYDRAULIC SYSTEM OIL	
	E. INCHING CONTROL - POWER SHIFT			C. POWER SHIFT TRANSMISSION OIL	
	F. BRAKE PEDAL			D. DIFFERENTIAL LUBRICANT	
	G. ACCELERATOR PEDAL			E. BULL GEAR AND JACKSHAFT PINION	
	H. INSTRUMENT PANEL			G. PRESSURE GUN FITTINGS	
	1. Oil pressure Gauge			H. OIL CAN POINTS	
	2. Ammeter			I. BRAKE MASTER CYLINDER	
	3. Engine Coolant Temperature Gauge			J. MASTS	
	4. Fuel Gauge		7	LUBRICANT AND SERVICE.....	1-17
	5. Hourmeter			A. 8-HOUR SERVICE	
	6. Ignition Switch			B. 50-HOUR SERVICE	
	7. Choke Control			C. 100-HOUR SERVICE	
	8. Transmission Temperature Gauge			D. 200-HOUR SERVICE	
	I. OPERATOR'S SEAT ADJUSTMENT			E. 500-HOUR SERVICE	
				F. 1000-HOUR SERVICE	
4	OPERATION OF LIFT TRUCK.....	1-7			
	A. STARTING THE ENGINE				

HYDRAULIC FILTER ELEMENT INDICATOR

The indicator is located atop the hydraulic filter in the left side of the engine compartment. The indicator assures longer element life, better filtration, and guards against element collapse. The indicator provides day-in, day-out condition of the element assuring 100% filtration at all times.

The following are the warning signals and their meanings:

A. GREEN BAND "ALL CLEAR"

When the white indicating line is in line with any portion of the GREEN band no changing of the element is required.

B. YELLOW BAND "CAUTION"

When the white indicating line is in line with any portion of the YELLOW band the element is becoming contaminated but still provides Full Flow Filtration. Change element at earliest convenience.

C. RED BAND "STOP"

When the white indicating line reaches any portion of the RED band change element at once.

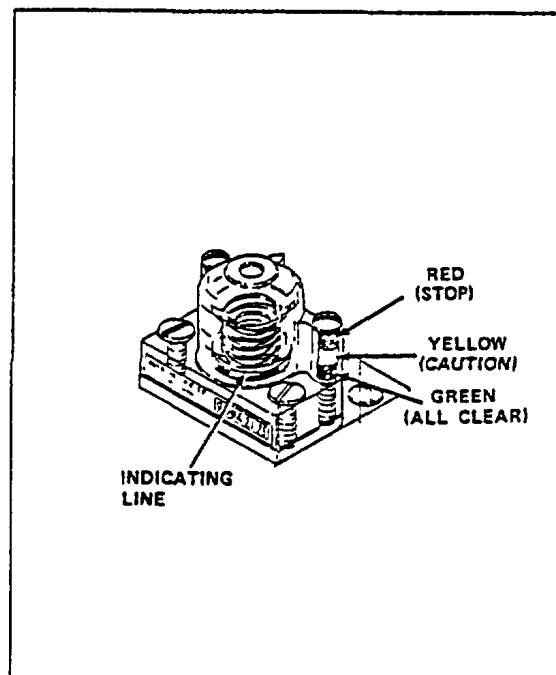


Figure 1. Element Indicator

TOPIC 1. GENERAL DESCRIPTION

Allis-Chalmers Lift Trucks are designed to function in a variety of heavy-duty industrial applications. Power requirements are met by a gasoline, 4- or 6- cylinder, 4-stroke cycle, naturally aspirated engine. Engine cooling is accomplished by a belt-driven centrifugal pump that forces coolant through the head, block and fin-type radiator. The engines are pressure lubricated to the rocker arms, main bearings, and connecting rods by a gear type oil pump driven by the camshaft. The oil is cleaned by a replaceable oil filter. An oil filler cap is located on a filler tube assembly on the side of the cylinder block or on the valve cover. Oil level is easily checked by a conveniently located dipstick.

The power shift transmission consists of three major components a constant-mesh transmission, a hydraulically actuated clutch pack, and a torque converter. A single-lever shift control on the right side of the steering column controls the direction of travel through a control valve mounted on the transmission housing.

The drive unit incorporates a double-reduction gear train using the latest advancements in gear design. All parts of the unit are bearing mounted for the greatest possible efficiency and quietness. The first reduction is through a heavy-duty spiral bevel ring gear and pinion drive gear. Final reduction is obtained through a pinion (Jackshaft) and Internal tooth gear (bull gear). This method greatly reduces torque stress on the axle shaft.

The truck is equipped with hydraulic brakes designed for long life and minimum maintenance. They have a large braking area and give smooth braking and positive control under all operating conditions. Brakes are

located in each drive wheel. The parking brake is mounted on the differential case, and the brake drum is mounted on the differential drive pinion flange. The parking brake handle is located within easy reach of the operator's left hand.

A power steering control unit located at the lower end of the steering column diverts hydraulic oil, under pressure, to the appropriate power steering part. Hydraulic oil lines connect the steering unit to the power steering cylinder to give the lift truck a full power steering system. The power steering system provides maximum control of the lift truck with minimum steering effort.

The lift assembly utilizes special rolled steel channel sections, and/or "I" beams, and cross braces, all welded to form a rigid permanent structure. Due to construction features of the inner mast and carriage rollers, sliding friction is virtually eliminated. Two independent lift chains are used for safety; each has sufficient strength to safely handle a full load. A special seat at the bottom of the mast permits self-alignment of the lift cylinder within the mast channels, thus reducing off center stresses.

The heavy-duty welded steel fork carriage provides the ultimate in strength and visibility. The forks are identical and interchangeable. Notches spaced along the upper edge of the carriage act in conjunction with latches on the forks to position and secure them to the carriage.

Hydraulic Pressure, used to actuate the cylinders or accessory equipment, is supplied by a positive-displacement gear pump coupled

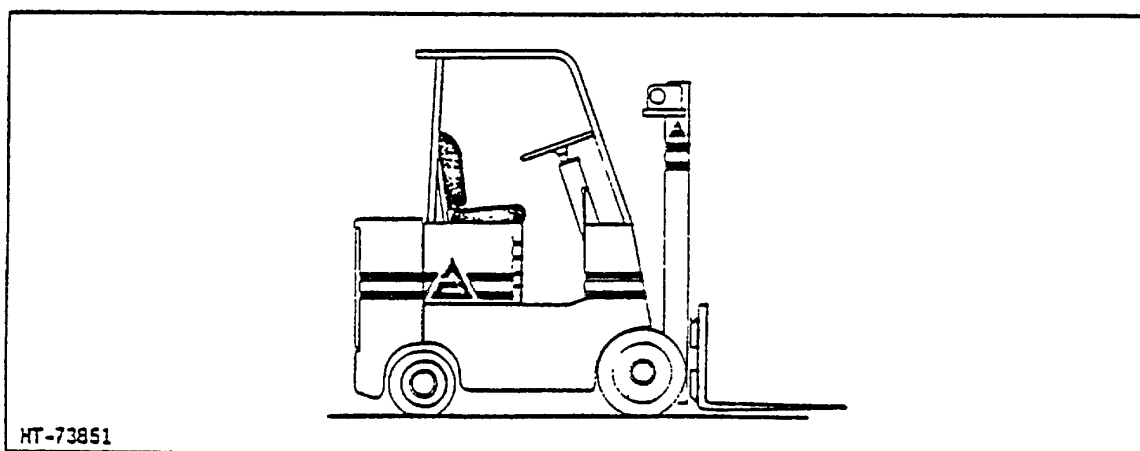


Figure 1-1. Lift Truck - Typical

directly to the engine crankshaft. A control valve with handles conveniently located to the right of the operator actuates the lift and tilt cylinders or attachments. The hydraulic oil reservoir has more than ample capacity for normal displacement needs.

Current advancements in stress analysis and design have made possible a lift truck frame that is lighter and less bulky, yet stronger than the conventional box-type frame. Counterweights, cowls, and fenders are easily removed, thereby reducing downtime for parts removal, service, and overhaul.

The instrument panel, located directly in front of the driver, has a complete set of electrical gauges including

a gas gauge, oil pressure gauge, engine coolant temperature gauge, ammeter, and a direct-reading engine hourmeter. The ignition starting switch and choke control are also located on the panel.

All models have a 12 volt electrical system consisting of one 12 volt battery. A heavy-duty alternator, voltage regulator, starting motor, solenoid switch, and horn are the other major components of the electrical system. The electrical gauges and horn are protected by fuses located on the right underside of the instrument panel.

The light switch is located on the right side of the instrument panel. Pull out on the light switch to turn on Lights. Push in on light switch to turn off lights.

TOPIC 2. PREPARING NEW TRUCK FOR SERVICE

Your Allis-Chalmers lift truck is generally shipped with the fuel system drained, the cooling system filled with antifreeze, the crankcase filled to correct oil level, and the truck completely lubricated. Because shipping procedures may vary, it is imperative that the following checks be performed before placing the truck in service.

A. INSPECT UPON DELIVERY

For your protection, make a thorough inspection of the vehicle immediately upon delivery. In case of damage or any shortage, notify transit agent at once and have delivering carrier make a notation on the freight bill of lading.

B. ENGINE OIL

Check oil level in crankcase. Withdraw dipstick and wipe clean; reinsert all the way and then remove it for a true reading.

CAUTION

Do not check oil level while engine is running.

NOTE

All units are shipped with a preservative-type oil in the engine crankcase. This oil should be drained immediately and replaced with the proper oil. Refer to LUBRICATION SPECIFICATIONS for correct oil to use.

C. COOLING SYSTEM

Make certain the cooling system is filled with clean fresh water, or permanent type antifreeze.

All units are shipped from the factory with the cooling system protected to -30°F, or lower, with permanent antifreeze.

D. FUEL TANK

Check fuel gauge on instrument panel and make sure the tank is full. If it is not, fill the tank with the proper fuel. Use regular grade gasoline that has a minimum

octane rating of 89. The fuel tank filler is equipped with a protecto-seal cap to guard against fire hazards, theft, and tampering.

E. LUBRICATION

Be sure truck has been thoroughly lubricated. Check all lubrication points as shown in the LUBRICATION AND SERVICE GUIDE.

F. BATTERY

A 12-volt battery is located in a swing-out tray below the operator's seat inside the right side panel. Keep cells filled to the bottom of the filler holes with clean distilled water.

G. POWER SHIFT TRANSMISSION

Remove floor plate and with the parking brake set and transmission in NEUTRAL, start and run engine for a few minutes until transmission fluid operating temperature is obtained. Stop engine and immediately check transmission fluid level with the dipstick.

H. DIFFERENTIAL

With vehicle on a level surface, remove plug from front of axle housing. Oil should be level with lower edge of plug hole.

I. HYDRAULIC SYSTEM

With the truck on a level surface, lift cylinder vertical, and with lift plunger retracted, turn off the engine and check oil level in the hydraulic reservoir. Oil should be to the level shown on the dipstick. The dipstick is located at the top of the reservoir, inside the right hand panel.

J. BRAKE MASTER CYLINDER

The brake master cylinder is located under the floor plate on the right side of the truck. It should be filled to 3/8" from bottom of filler neck.

K. AIR CLEANER

The air cleaner, which is mounted inside the engine compartment, is a dry element type cleaner with replaceable cartridge. Check tightness of all connections.

TOPIC 3. OPERATING CONTROLS

All operators should learn the locations and functions of the various instruments and controls before attempting to operate the vehicle. See figure 3-1 for location of the controls described in this Topic.

A. STEERING WHEEL

The steering wheel is operated in the conventional manner, that is, when the wheel is turned right the truck will turn to the right; when the wheel is turned left, the truck will turn to the left. The steer wheels are located at the rear of the truck. These cause the rear of the truck to swing out when a turn is made. With a little practice, this type steering is easily mastered.

B. FORWARD/REVERSE LEVER POWER SHIFT

The power shift lever is located on the steering column and beneath the steering wheel. There are three positions - forward, neutral, and reverse (Fig 4-1). The lever actuates a hydraulic valve mounted on top of the transmission; this directs the flow of oil to actuate forward or reverse clutches.

NOTE

On Power Shift models a safety switch Incorporated in the shifting mechanism prevents engine startup with transmission in gear.

C. LIFT AND TILT CONTROLS

The lift, tilt, and accessory controls are located to the right of the operator (Fig 3-1).

D. PARKING BRAKE LEVER

The parking brake lever (Fig 3-1) is cam-action, over-center type, located on the instrument panel at the left side of the operator's compartment. It actuates an enclosed, dual-shoe mechanical unit attached to the brake drum flange. The hand grip on the handle permits adjustment to compensate for brake lining wear.

E. INCHING CONTROL - "POWER SHIFT"

The inching pedal is located at the lower left of the steering gear mounting support. A change in pedal stroke varies oil pressure in the clutch so truck can be "inched" along slowly while the engine is operated at high speed for fast lifts. The farther the pedal is depressed, the slower the truck travels. In fully depressed position, the clutch is completely disengaged and the service brakes are applied.

F. BRAKE PEDAL

The brake pedal, located to the right of the steering column, operates the brake master

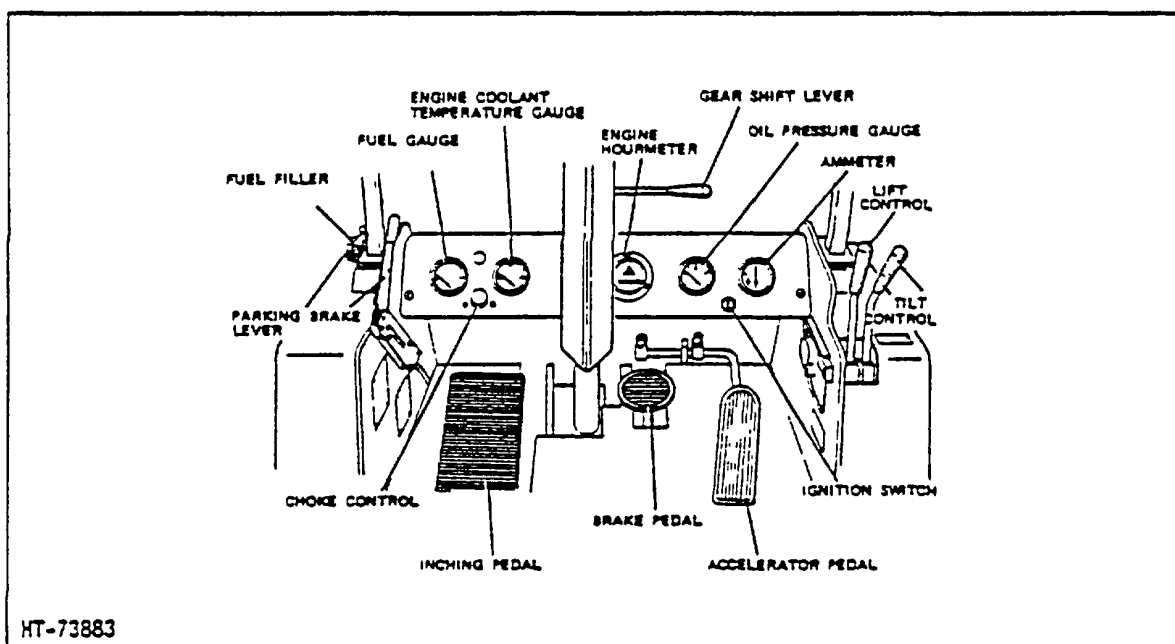


Figure 3-1. Controls and Instruments

cylinder which, in turn, actuates the wheel cylinder and brake shoes.

CAUTION

Always place the shift lever in neutral and set the parking brake before leaving the operator's seat.

G. ACCELERATOR PEDAL

The accelerator pedal, located to the right of the brake pedal, controls engine speed through linkage to the throttle lever on the carburetor.

H. INSTRUMENT PANEL

The instrument panel holds various gauges at a glareless, easy-to-read angle (Figure 3-1). The panel contains:

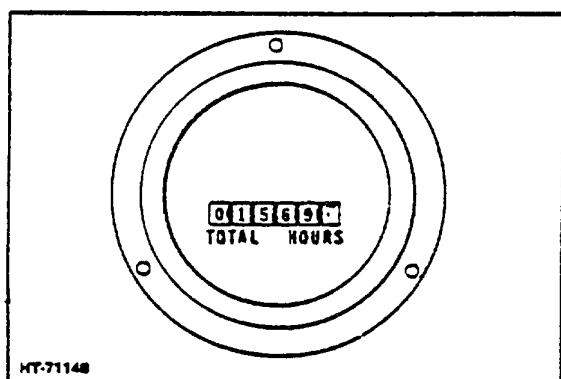


Figure 3-2. Hourmeter

1. Oil Pressure Gauge

The oil pressure gauge indicates the pressure of oil circulating through the engine. A cold engine will normally have a higher oil pressure than an engine that is warm.

CAUTION

Always check the oil pressure gauge immediately after the engine starts.

If the gauge does not register, or if it registers slightly (less than 5 psi at idle speed), stop the engine immediately and check the lubrication system to determine cause of lack of pressure.

2. Ammeter

The ammeter is connected into the main battery circuit and indicates whether current is flowing into or out of the battery. A needle deflection to the CHARGE side indicates that the battery is being charged by the alternator, and a deflection to the DISCHARGE side indicates that the battery is discharging. Normally, the rate will be high for a short time after starting the engine, then the indicator will return to a point slightly above zero after a few minutes operation. However, if battery is in a rundown condition, charge rate may be high for some time. If ammeter indicates DISCHARGE when engine is operated above idle speed, alternator is not producing current, or there may be a short in the wiring system. Investigate and repair at once.

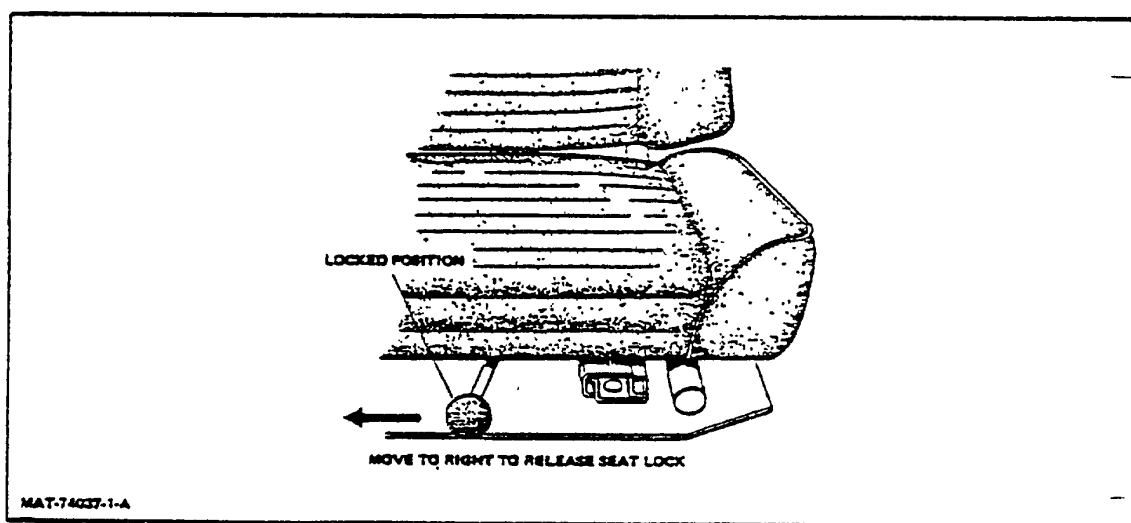


Figure 3-3. Operator's Seat Adjustment

3. Engine Coolant Temperature Gauge

Depending upon engine coolant temperature, the pointer of the gauge indicates one of three colored areas on the dial: a white, or engine warm-up area; a green, or safe operating area; or a red danger area. Optimum operating temperature is indicated when the pointer is over a mark in the center of the green area.

The engine is not designed for continuous operation at high temperatures. If normal work loads on a level surface tend to produce near-boiling temperatures, check the cooling system thermostat, radiator pressure cap, temperature sender, coolant, radiator air passages, core, etc. - to determine the cause and correct as necessary.

4. Fuel Gauge

The panel mounted electric fuel gauge indicates the level of fuel in the fuel tank.

5. Hourmeter

The hourmeter (Fig 3-2) registers accumulated engine running time to 9,999.9 hours and then repeats itself. The figure on the right registers tenths of an hour.

6. Ignition Switch

The standard ignition switch, located on the left side of the Instrument panel, is a three-position

switch. It is used to turn current on or off, control flow of current to instrument panel gauges, and allow current to flow to the starter motor solenoid. Turn the key all the way to the right to crank the engine and release it as soon as the engine starts.

7. Choke Control

The choke control, located on the left side of the instrument panel, controls the gasoline carburetor choke plate.

Pull choke knob all the way out when starting a cold engine. Gradually push choke knob in as engine warms.

8. Transmission Temperature Gauge

The transmission temperature gauge, located on right side of instrument panel, indicates temperature of transmission oil. The dial indicates from 100° to 250°F. If gauge reaches 210°F, stop truck and correct overheating condition.

I. OPERATOR'S SEAT ADJUSTMENT

The operator's seat is adjustable forward and backward for maximum comfort. The adjusting lever is located below the front edge of the seat (Fig 3-3). Move lever to the right to release seat lock, then move seat forward or backward to desired position by shifting weight. Release the lever to lock the seat in position.

TOPIC 4. OPERATION OF LIFT TRUCK

The following instructions are based on past experience and should be helpful in becoming fully acquainted with your "Allis Chalmers" lift truck. See Figure 3-1 for location of instruments and controls.

A. STARTING THE ENGINE

1. Put shifting lever in neutral position. On power-shift models, the forward-reverse lever must be in neutral position.
2. Insert ignition switch key and turn clockwise to ON position.
3. Do not depress accelerator pedal until engine starts.
4. Pull the choke knob all the way out when starting a cold engine.
5. Turn the ignition key all the way clockwise to the START position to actuate the starter motor. Release key as soon as engine starts. Key will automatically return to ON position.

CAUTION

Do not operate starter motor for more than 30-seconds at a time. If engine does not start, allow starter motor to cool for approximately two minutes before again attempting to start engine.

6. After starting, gradually push in choke control knob as engine warms up. It is not necessary to use choke during normal operation or when starting a warm engine.

NOTE

Excessive use of the choke dilutes crankcase oil causing wear of piston rings and cylinder walls. It is recommended that engine oil be changed more frequently in cold weather because of this condition.

B. SHIFTING OPERATION "POWER SHIFT"

With engine idling, release parking brake. Place directional lever in either Forward or Reverse position (see Figure 4-1) and accelerate truck as required. To change direction, always come to a complete stop and simply move the directional control lever to either Forward or Reverse.

NOTE

Trucks equipped with power shift transmission have a return to neutral feature that will automatically shift the truck into neutral when the operator leaves the seat. To re-engage the transmission, the operator must return to operator's seat and manually return the shift lever to the desired position.

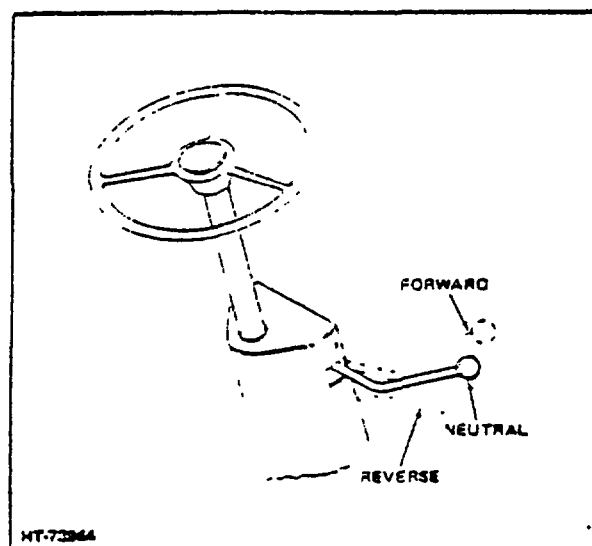


Figure 4-1. Power Shift Positions

C. LIFTING AND LOWERING OPERATIONS

Lifting and lowering action is controlled by the lever closest to the operator. (See Figure 3-1). Pull the lever back to lift and push it forward to lower. When the lever is released it will automatically return to the intermediate (NEUTRAL) position.

Rate of lift is controlled by speed of the engine and position of the lever. Slight acceleration of the engine and gradual movement of the lift lever from neutral to lift position will produce a slow lifting action. Accelerating the engine and pulling the lever back as far as possible increases the speed of lift. When the forks are raised to desired height, release lever smoothly to neutral position - forks and/or load will hold at this point.

Lowering speed is controlled by weight of the load and position of the control lever. Push lever forward slowly for smooth operation. To increase speed of lowering,

push the lever forward as far as possible. Release lever slowly to neutral position as load reaches desired level. Maximum lowering speed is held within safe limits by a flow regulator in the oil port at the base of the lift cylinder.

CAUTION

Do not release lift control lever suddenly when lowering load because this causes severe mechanical shock.

O. TILTING OPERATIONS

The tilt control lever is mounted to the right of the lift lever (Fig 3-1). Rate of tilt is controlled by speed of the engine and position of the lever. Slight acceleration of the engine and gradual movement of the tilt lever from neutral to tilt position will produce a slow tilting action. Accelerating the engine and pulling the lever back or pushing it forward as far as possible increases the speed of tilt. When the mast is tilted to desired position, release lever smoothly to neutral position and mast will hold at this point.

CAUTION

Use care when tilting mast forward to prevent the load from toppling.

E. SIDE SHIFTER OPERATION (Not Applicable)

The side shifter control lever is mounted to the right of the tilt lever (Fig 4-2). Push the lever forward to move the carriage to the left. Pull lever back to shift carriage to the right.

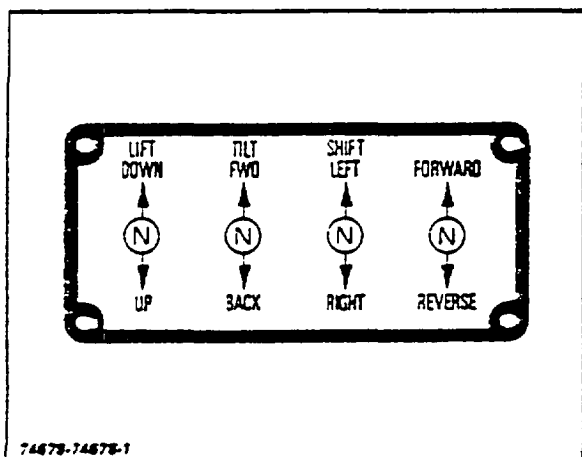


Figure 4-2. Raise, Lower, tilt and Side Shift Positions

F. FORK ADJUSTMENT

For maximum balance, always position the forks in proportion to the width of the load. A fork lock in the top of each fork holds it in position in notches along the top bar of the carriage. To change fork location, pull up on lock and move fork right or left; allow lock to seat in notch nearest the location chosen (Fig 4-3).

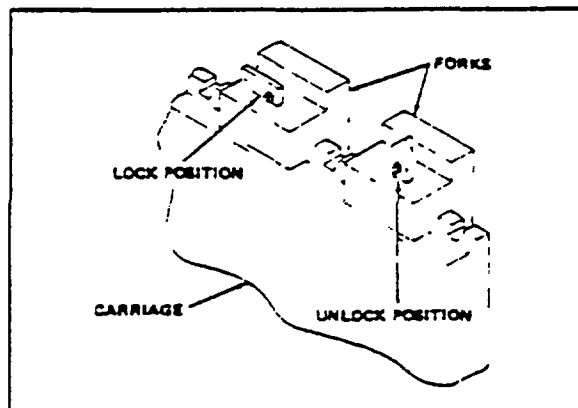


Figure 4-3. Fork Adjustment

Forks can be easily removed from the carriage by releasing the locks and aligning each fork (one at a time) with the wide slot on the bottom of the carriage. Remove fork by lifting it up and off the carriage.

G. LOAD HANDLING PROCEDURES

Lift truck stability is based on principles of the counterbalance and fulcrum (Fig 4-4). The drive axle of the lift truck is the balancing point (fulcrum). The load is carried at the front of the lift truck and is counterbalanced by the counterweight on the rear of the truck.

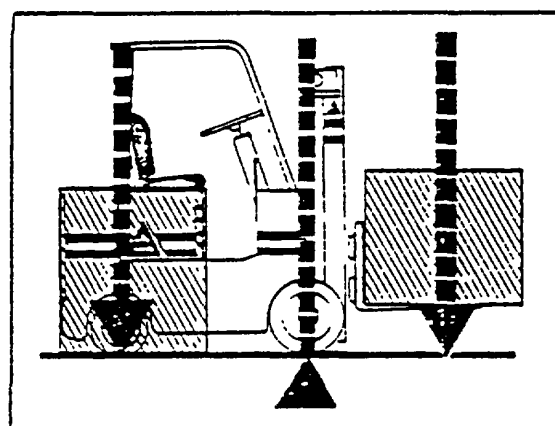


Figure 4-4. Counterbalance Principle

Stability of the truck is achieved by placing the load close to the fulcrum (near the face of the forks). Each lift truck is rated for specific load capacity at a given lead center, usually at 24-inches. When various attachments or special masts are added, the load capacity and load center either increases or decreases, depending on the size and weight of the special mast or attachment. The load capacity of the lift truck should never be exceeded. Overloading the lift truck will: (1) be a hazard to the safety of others; (2) endanger other material; (3) damage the truck.

The following procedures are suggested to aid in operating your Allis-Chalmers lift truck. These are basic procedures that can be adapted to most load handling operations.

1. Lifting a Palletized Load

- a. Position the lift truck squarely in front of the load (Fig 4-5).
- b. Raise forks to the proper level, half way between the upper and lower members of the pallet. Watch for low-hanging pipes or electrical lines.
- c. With the mast in a vertical position and the forks parallel to the floor, slowly insert the forks into the pallet until the load rests against the fork faces. Unless the mast is vertical, the forks may hang up when they are inserted.
- d. Lift the load just enough to clear the stack (or floor) beneath the load being removed. Then tilt the mast back enough to safely travel with the load.

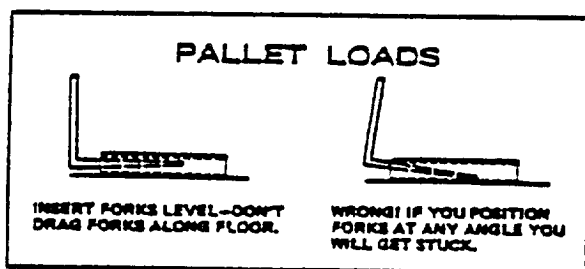


Figure 4-5. Palletized Load Handling

- e. Back the truck slowly away from the stock pile and when clear of all obstacles, lower the load. The load should always be carried as low as possible for maximum stability and vision. Maximum back tilt tends to cradle the load and prevent it from sliding off the forks when stopping.

CAUTION

If the load is so bulky that vision is obstructed, drive in reverse. Extra care must be taken when driving in reverse because the operator does not have a constant view of the load.

2. Traveling

- a. With heavy loads on the forks, steering is easier because the weight on the steer wheels is shifted forward.
- b. Obey all speed limit signs. If no speed limits are posted, travel at the safest speed that conditions allow.
- c. Always watch in the direction of intended travel.
- d. When ascending an incline, travel with load leading (Fig 4-6).
- e. Travel with the load trailing when descending an incline (Fig 4-7).

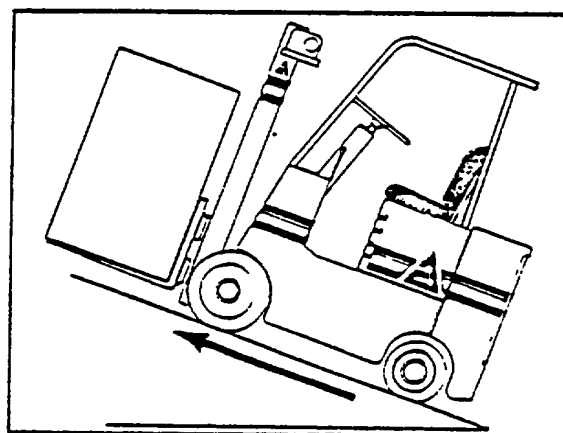


Figure 4-6. Ascending an Incline

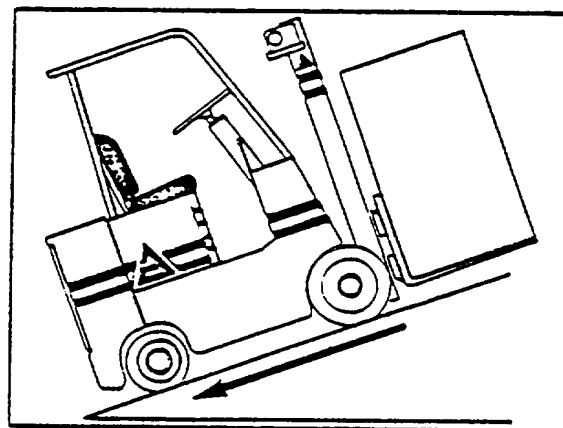


Figure 4-7. Descending an Incline

- f. With an unloaded lift truck, ascend ramps with the counterweight leading. Descend the ramp with the counterweight trailing (Fig 4-8).

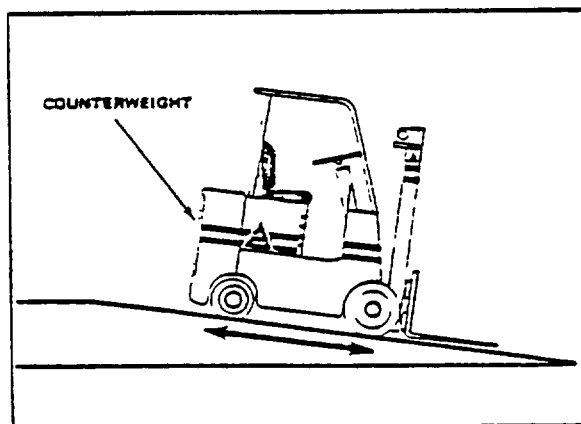


Figure 4-3. Unloaded Traveling Procedure

- g. When ascending or descending a grade raise forks high enough to avoid hitting the ramp.
- h. Cross all railroad tracks slowly and at a slight angle.
- i. To prevent load spillage, apply brakes gradually and firmly.
- j. When turning a corner, begin turn when front wheels are at a right angle to the intended path of travel and allow for rear end swing.
- k. Check the condition and capacities of all floors, dockboards, semitrailer beds, etc.
- l. To maneuver in narrow aisles, raise forks to clear the stock pile and gain additional maneuvering area. Extra care must be taken with the forks raised. Watch for low-hanging object such as water pipes, electrical lines, etc. (Fig 4-9).
- m. When operating with elevated loads, keep mast in full back tilt position except when actually lifting or depositing loads. Back tilt also shortens effective truck length.
- n. Take full advantage of operating space in narrow aisles. Stay as far away from the stock piles as possible but allow for rear-end swing (Fig 4-10).
- o. Enter box cars at a slight angle and begin turning as soon as possible (Fig 4-11).

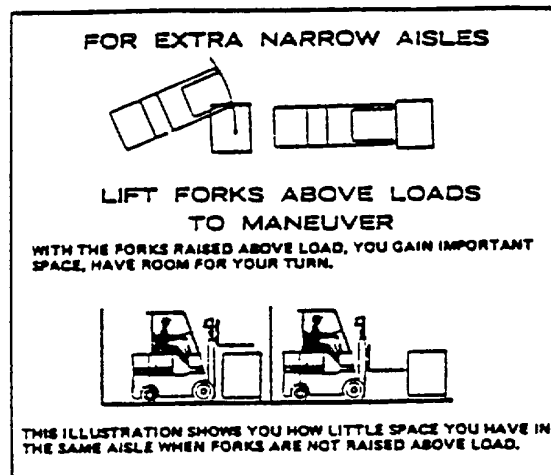


Figure 4-9. Narrow Aisle Maneuver

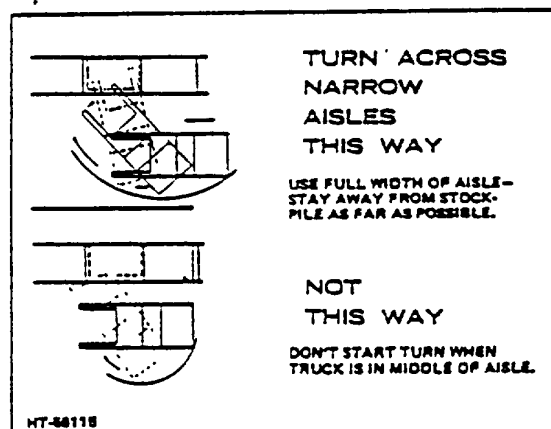


Figure 4-10. Aisle Turning Procedure

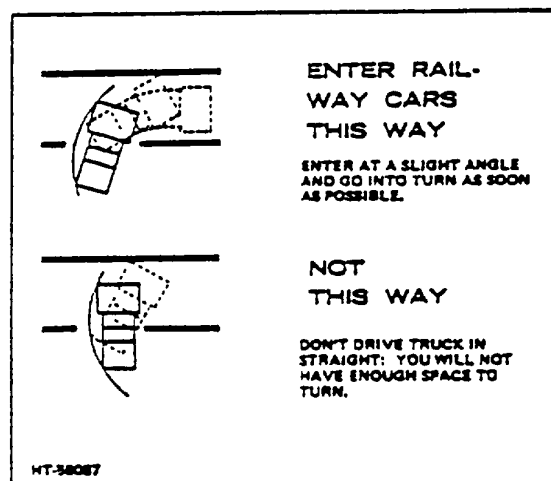


Figure 4-11. Entering Railway Cars

3. Positioning, Stacking, and Unloading
 - a. Drive the loaded lift truck to the stacking area.
 - b. if possible, position the truck squarely in front of the stock pile.
 - c. Check all low-hanging obstructions. Raise the load with the mast tilted slightly each (Fig 4-12).

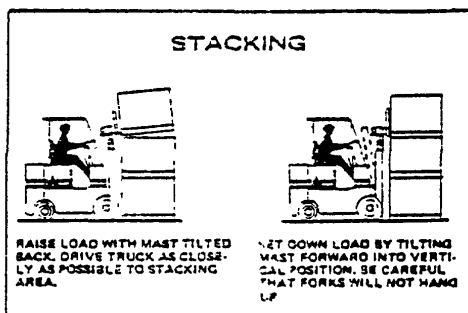


Figure 4-12. Stacking and Positioning

- d. With the load elevated, move the truck slowly forward and position the load squarely over the stock pile.
- e. Stack loads squarely and evenly to make use of all available space.

Stock piles should always be stable to avoid injury to personnel and damage to equipment or stock.

- f. Tilt the mast forward to vertical position and lower the load slowly into position.
- g. Back lift truck slowly away from load to withdraw the forks.
- h. With the forks clear of the stock pile, lower them to within 2-inches of ground level before proceeding.

4. Unpalletized Loads

Special attachments are often used to handle Unpalletized loads. If these attachments are not available and the load must be stacked or moved, proceed as follows:

- a. Tilt the forks forward so their tips contact the floor (Fig 4-13).
- b. As carefully as possible, insert forks under the load until the load is contacted by the vertical fork faces

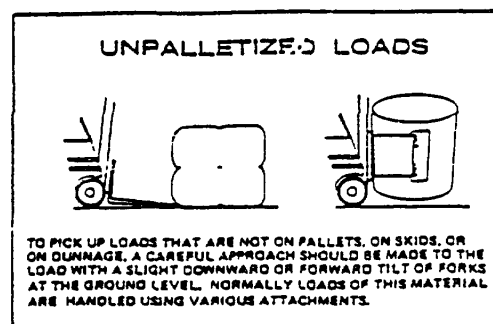


Figure 4-13. Unpalletized Load Handling

- c. Tilt the load slightly back.
- d. To stack Unpalletized loads, position the truck squarely in front of the stock pile. Raise forks to proper level with the mast tilted back.
- e. Position load squarely over the stock pile, then lower the forks slowly until they rest on the stock.
- f. Tilt the load slightly forward and begin to back the truck. Proceed carefully to prevent damage to the load.
- g. Withdraw the forks from the stack and lower them to within 2-inches of the floor.

H. STOPPING THE TRUCK

To bring the truck to a safe, smooth stop, apply gradual pressure on foot brake pedal. When parking, pull back hand brake lever, place shift lever in neutral, and lower forks to floor.

Allow the engine to idle for a few minutes before turning off ignition switch; this allows it to cool gradually. Too rapid cooling of an extremely hot engine may warp valves or even crack the manifold. After idling for a short while, turn ignition key to OFF position. Key should always be removed from the ignition switch to prevent unauthorized use of the truck.

I. DAILY CHECK LIST

Refer to the following Paragraph J for detailed explanation of each inspection.

NO.	INSPECTIONS	DAILY
1.	Steer Axle Stops	X
2.	Overhead Guard	X

NO.	INSPECTIONS	DAILY
3.	Battery	X
4.	Engine Oil Level	X
5.	Fuel rank	X
6.	Radiator Coolant Level	X
7.	Tires	X
8.	Hourmeter	X
9.	Accelerator Pedal (Operational Check)	X
10.	Brakes (Operational Check)	X
11.	Steering (Operational Check)	X
12.	Lifting and Lowering Speed (Operational Check)	X
13.	Forward and Backward Tilt (Operational Check)	X
14.	Unusual Noise (Operational Check)	X
15.	Fire Extinguisher	X

Turn the steer wheels to full right and to full left positions. Visually check positions of both axle stops; make certain they are not missing, bent, or otherwise damaged.

J. DAILY CHECK LIST EXPLANATION

The following explanations correspond to the inspections in the Daily Check List. It is necessary to perform these inspections daily. Should any discrepancy be found, it should be reported to the supervisor or the responsible maintenance personnel.

1. Steer Axle Stops Check the steer axle stops at the beginning of each work shift. These stops are welded to the truck frame in such position that one is directly above each of the steer axle yokes (Fig 4-14).

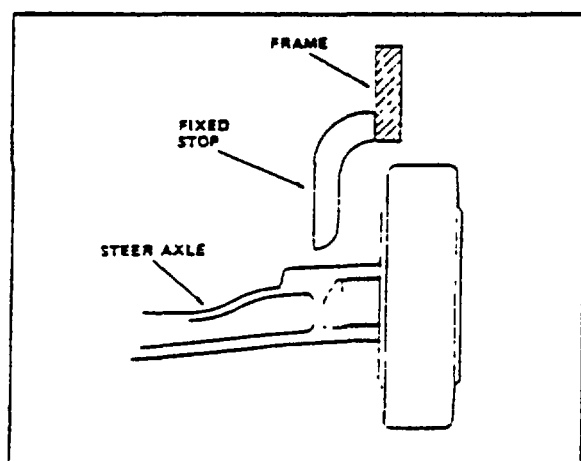


Figure 4-14. Steer Axle Stop

2. Overhead Guard - Inspect welds and hardware attaching overhead guard to the truck proper. Make sure all attaching hardware is in place and all welds and structural members are secure.
3. Battery - Check condition of battery as described in Topic 5 BATTERY. Also, make sure that the battery cables are not damaged or loose and that the connector lugs are clean and : securely attached.
4. Engine Oil Level - Check level with dipstick. If necessary, add oil to raise level to FULL mark. Refer to Topic 6 in this manual titled LUBRICANT SPECIFICATIONS for proper oil recommendation.
5. Fuel Tank - Fill fuel tank it end of each workday; this practice will prevent the condensation of moisture.
6. Coolant Level - Maintain coolant level approximately 1-inch below bottom of radiator filler tube. Add clean fresh water or antifreeze as required.
7. Tires - Check pressure of pneumatic tires. If necessary, fill to pressure recommended in the Maintenance Manual. Check tires for excessive wear and damage. Unevenly worn or badly damaged tires will vibrate excessively and cause hard steering. Remove steel chips and other foreign materials from tire treads to prevent further damage.
8. Hourmeter - Turn key switch ON and make sure hourmeter is energized.
9. Accelerator Pedal - The truck should accelerate smoothly from slow to fast speed.
10. Brakes - The brake pedal should have 1/2-inch free play when it is depressed. The truck should stop with normal brake pressure. When pedal is fully depressed, some reserve distance should remain. Check during operation.
11. Steering - The truck should steer smoothly and freely. Check during operation.

12. Lifting and Lowering - The mast and forks, or attachment combination, should raise and lower, accelerate and decelerate smoothly. Check during operation.
13. Forward and Backward Tilt - Operation of forward and backward tilt should be immediate and smooth. Check during operation.
14. Unusual Noise - During operation, note unusual mechanical noise and report it to the supervisor or to another responsible person.
15. Fire Extinguisher - If lift truck is equipped with a fire extinguisher, examine cylinder for bad dents. Make sure it has not been used and left empty by checking gauge, if so equipped, or seal wire to determine whether or not it has been broken during usage.

TOPIC 5. BATTERY

When liquid level of battery is low, add distilled water to raise level of each cell to bottom of filler holes. Be sure filler plugs are tight and vents are open (Fig 5-1).

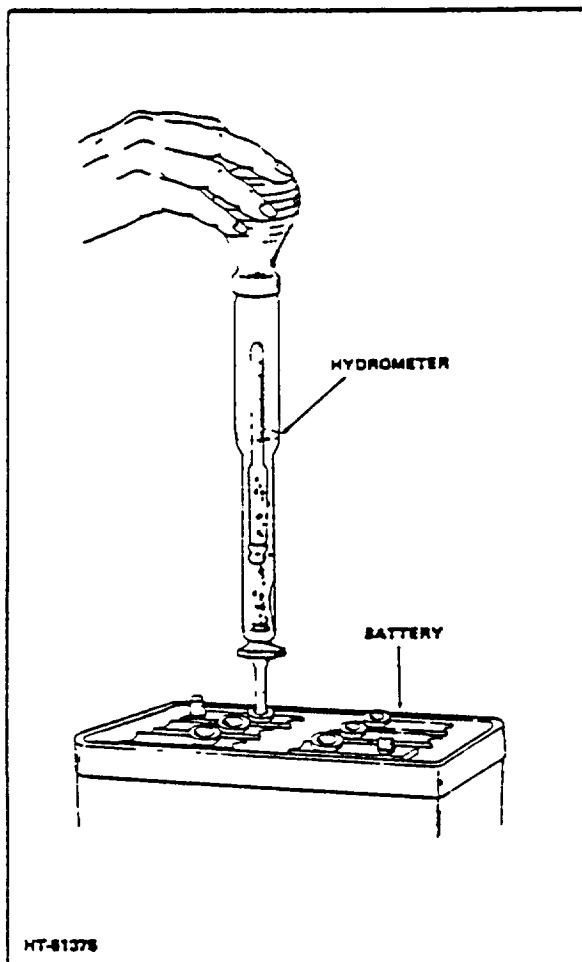


Figure 5-1. Checking Specific Gravity

CAUTION

Never fill battery immediately after operation in below freezing weather because water will not mix acid and may freeze. Always fill batteries before putting engine into service.

Periodically, check external condition of battery and connecting cables. Keep batteries clean and well secured. If the battery is dirty, clean it with soda solution and a brush. Filler plugs should be tight to prevent the soda solution from entering cells. After the foaming stops, flush surface with clean water and apply a thin coat of petroleum jelly to the posts and cable terminals.

WARNING

It is normal for the battery to generate hydrogen gas which is explosive when mixed with air. Never expose the battery to an open flame or to an electric spark. Do not remove or install battery cables while vent plugs are removed. Battery fluid is a sulfuric acid solution avoid getting it on skin, Clothing, painted surfaces, etc. Should any of the solution come in contact with your Clothing or skin, flush the area immediately with cold water: If the solution gets on your face or in your eyes, flush the area with cold water and get medical help immediately.

Maintain battery in a fully charged condition (specific gravity above 1.250 with electrolyte at 80°F). Determine charge condition by checking specific gravity; use a hydrometer with electrolyte temperature corrected to 80°F.

Except in cases of accidental loss or change of electrolyte, the battery will not require a complete change of solution during its entire lifetime.

TOPIC 6. LUBRICANT SPECIFICATIONS

A. ENGINE LUBRICATING OIL

Lubricating oils used in Allis-Chalmers engines must:

1. Maintain pistons, rings, and other moving parts in a carbon-free, varnish-free, clean condition.
2. Maintain enough body to satisfactorily lubricate the moving parts at maximum oil temperatures.
3. Prevent bearing corrosion. Counteract corrosive products of combustion or contaminants in the fuel.
4. Promote general cleanliness within the engine.

The American Petroleum Institute has several service classifications for oils used in gasoline and LP gas engines; they are SA, SB, SD, and SE.

SERVICE SA: Service typical of engine used under light and favorable operating conditions, the engines having no special lubrication requirements and having no design characteristics sensitive to deposit formation.

SERVICE SB: Service typical of engines used under moderate to severe operating conditions, but presenting problems of deposit corrosion control when lubricating oil-temperatures are high.

SERVICE SD: Service typical of engines used under unfavorable or severe types of operating conditions and where there are special lubrication requirements for deposit, wear, or bearing corrosion control, due to operating conditions, or engine design, or fuel characteristics.

SERVICE SE: Oils designed for this service provide more protection against oil oxidation, high temperature engine deposits, rust, and corrosion in gasoline engines than oils which are satisfactory for classification SD.

Generally, SERVICE SB will apply to the gasoline engine.

Use oils of the following viscosities:

Ambient Temperature	Viscosity
Below 32°F	SAE 20 W
32 F to 90°F	SAE 30
Above 90°F	SAE 40

Our recommendation of 100 hours for filter and oil change periods is based on the use of high quality oils and 85% average engine loads with the engine in good adjustment and operating with the coolant and lubricating oil at normal operating temperature. Variations from the considered normal operating conditions must be compensated for by more frequent oil change and filter change periods.

Our recommended oil change periods are based on what experience has shown to be conservative and safe hours of operation between oil changes. Actual testing of the lubricating oil in a particular engine application at each 5 to 10 hours operation after 100 hours operation to determine the condition of the oil may allow extending the oil change periods. This testing service is provided by most major oil companies. It is recommended to take advantage of this service.

B. HYDRAULIC SYSTEM OIL

Use a hydraulic oil that conforms to Allis-Chalmers specification MA 170. 103 or SAE 10 SE engine oil (or MIL-L-21048) in the hydraulic system.

The hydraulic oil must be fortified with special rust and oxidation inhibitors, plus antiwear ingredients, and treated to minimize foaming. The hydraulic oil must conform to the following in Allis-Chalmers specification MA 170.103:

Viscosity at 100 F SUS.....	150 - 170 secs
Viscosity Index.....	90 min
Flash Point	370°F min
Neutralization No. (mgs KOH/g oil).....	0.60
Aniline Point	180°-220°F
Oxidation Stability (hrs. to neut. No. 1.0 max).....	1500
Rust Test	Pass
Cooper Strip Corrosion (3 Hours at 212°F).....	Pass 2B
Pour Point	-20°F max

The SAE grade 10 SE engine oil is available at all major oil companies and most local service stations. The oil meets the requirements of the American petroleum Institute and contains rust and oxidation inhibitors, anti-wear ingredients, and an anti-foaming agent.

Hydraulic system oil storage containers must be kept free of contaminants, such as dirt, water, and metal chips. Contaminated hydraulic oil is the major cause of hydraulic system failures. It is therefore advised that any oil that is added or replaced be final filtered through a ten micron filter (or finer) before entering the hydraulic system. It is recommended that each storage container be clearly marked - FOR USE IN HYDRAULIC SYSTEM ONLY.

C. POWER SHIFT TRANSMISSION

OIL Use ATF (Automatic Transmission Fluid) Type "A", Suffix "A", which can be obtained from major oil companies.

D DIFFERENTIAL LUBRICANT

Lubricate with SAE 90 EP (extreme pressure) gear oil which is non-corrosive and resists oxidation and foaming. It should have a low pour point to ensure quick lubrication at either high or low temperatures.

E. BULL GEAR AND JACKSHAFT

PINION Lubricate with high quality. Grade 2 lithium base grease (characterized by the word "Moly") that contains a maximum of 5% micronized molybdenum disulfide. Lubricant should be waterproof and heat resistant.

F. WHEEL BEARINGS AND JACKSHAFT BEARINGS

Use grease of the type specified in preceding paragraph E. Apply grease with an applicator that is designed to force it into the bearing

rollers. Do not paint, dip, or swab it on by hand.

G. PRESSURE GUN FITTINGS

Lubricate with a high quality chassis lubricant. N. L. G. I. Grade 2 heavy duty sodium base grease available from any reputable oil company.

H. OIL CAN POINTS

Lubricate all points with SAE #10 or #20 engine oil.

I. BRAKE MASTER CYLINDER

Use only premium quality, heavy duty brake fluid with an extreme heat-cold range that conforms to SAE specification J1703d.

J. MASTS

Lubricate all sliding and roller contact surfaces of mast uprights with a high quality grease specified in preceding Paragraph E or G.

TOPIC 7. LUBRICATION AND SERVICE

The following paragraphs provide the operator/maintenance man with a comprehensive list of service operations that should be performed periodically. Close adherence to the list by qualified personnel will go far toward preventing major trouble and subsequent downtime of equipment. The operator is normally responsible for performing the 8-hour Daily Checks only; it is the responsibility of the maintenance man to perform the 50 to 1000 hour Service Checks. For detailed service information on these checks, the maintenance man may refer to applicable topics in the maintenance manual.

NOTE

The time intervals given in this guide are based on normal operating conditions. When operating under abnormal or severe conditions, these services should be performed as often as required to maintain the vehicle in good operating condition.

A. 8-HOUR SERVICE

Refer to Daily Check List and Explanations in Topic 4.

B. 50-HOUR SERVICE

Perform 8 hour service in addition to the following:

- Pressure Gun Fittings - Lubricate.
- Mast and Carriage - Lubricate sliding and roller contact surfaces.
- Oil Can Points - Lubricate.
- Lift and Tilt Cylinders - Inspect for leaks.
- Air Cleaner - Check and service element.
- Battery - Check electrolyte level and charge condition.
- Wiring and Connections - Check insulation and make certain connections are tight.
- Clean Truck- Use industrial type vacuum cleaner or light air pressure (40 psi max.).
- Adjust valve clearance after first 50 hours of operation.

C. 100-HOUR SERVICE

Perform 8 and 50 hour service in addition to the following:

- Lift Chains Clean and inspect for bent or cracked links. Inspect for adjustment and lubricate.
- Differential level Check Oil.
- Drive Axle Housing Breather Check and clean.

- Hydraulic Oil Reservoir Check hydraulic oil level.
- Engine Breather Cap Remove and clean.
- Engine Oil Filter Replace.
- Engine Oil Drain and refill.
- Fan Belt Check condition and tension.
- Fuel Strainer Clean.
- Power Shift Transmission Check fluid level.
- Radiator Make certain radiator air passages are free of obstructions.

D. 200-HOUR SERVICE

Perform 8, 50, and 100 hour service in addition to the following:

- Hydraulic Oil Filter - Replace.
- Transmission Oil Filter - Replace.
- Hydraulic Oil Reservoir Breather - Replace.

E. 500-HOUR SERVICE

Perform 8, 50, 100, and 200 hour service in addition to the following:

- Electrical System Check tightness of terminals, wires, cables and electrical components.
- Distributor Replace points.
- Spark Plugs Replace.
- Control Valve Check linkage.
- Fork Carriage Check for side play and check chain adjustment if carriage is not level.
- Lift Chains Remove, clean and inspect for wear and broken or cracked links. Install, adjust, and lubricate.
- Brake Master Cylinder Check fluid level.
- Wheel Cylinders and Brake Shoes Inspect.
- Hoses, Tubes, and Fittings Inspect and replace if necessary. Correct any leaks that are evident.
- Steer Wheel Bearings Clean and lubricate.
- Crankcase Vent Valve (if so equipped) Remove and clean.
- Universal Joint Check and adjust if necessary.
- Parking Brake Check and adjust if necessary.

F. 1000-HOUR SERVICE

Perform 8, 50, 100, 200, and 500 hour service in addition to the following:

- Cooling System - Drain, flush, and refill.
- Differential - Drain oil and refill.
- Power Shift Transmission - Drain fluid and refill.
- Hydraulic Oil Reservoir - Drain hydraulic oil, flush, and refill.

MAINTENANCE INSTRUCTIONS

MAINTENANCE INDEX

TOPIC	TITLE	PAGE	TOPIC	TITLE	PAGE
	ENGINE			POWER STEERING	
1	DESCRIPTION & SPECIFICATIONS	2-1	1	STEERING	2-79
2	VALVE	2-4	2	STEER AXLE	2-80
3	OIL FILTER	2-5	3	STEERING WHEEL & COLUMN	2-82
4	OIL PRESSURE	2-5	4	DRAG LINK	2-83
5	ENGINE TUNE-UP	2-6	5	TIE ROD	2-83
6	TROUBLESHOOTING CHART	2-11	6	CYLINDER	2-83
			7	WHEELS & TIRES	2-84
	FUEL SYSTEM			HYDRAULIC SYSTEM	
1	FUEL SYSTEM	2-16	1	HYDRAULIC SYSTEM	2-85
2	AIR CLEANER	2-18		A. GENERAL	2-85
3	FUEL TANK	2-19		B. MAINTENANCE	2-85
4	FUEL DUMP & FILTER	2-19		C. DAILY INSPECTION	2-85
5	CARBURETOR:	2-20		D. 50 HOUR INSPECTION	2-85
6	ACCELERATOR S GOVERNOR	2-21		E. 200 HOUR INSPECTION	2-86
				F. 500 HOUR INSPECTION	2-87
				G. 100 HOUR INSPECTION	2-87
				H. HYDRAULIC PUMP	2-87
				I. CONTROL VALVE	2-88
				J. CHECKING CONTROL VALVE	
				INLET PRESSURES	2-88
				K. LIFT CYLINDER	2-89
				L. TILT CYLINDER	2-89
				M. STEERING	2-90
	ELECTRIC SYSTEM			FRAME & COUNTER WEIGHT	
1	ELECTRIC SYSTEM	2-23	1	FRAME	2-91
2	BATTERY	2-24	2	COUNTER WEIGHT	2-91
3	ALTERNATOR & REGULATOR	2-25	3	BODY COMPONENTS	2-94
4	STARTER	2-27	4	OVERHEAD GUARD	2-96
5	ELECTRICAL WIRING	2-28			
6	HORN & RELAY	2-29		HIGH FREE LIFT MAST	
7	IGNITION COIL	2-30	1	GENERAL	2-97
8	DISTRIBUTOR	2-32	2	MAST ASSEMBLY	2-98
9	INSTRUMENT PANEL	2-35	3	LIFT CYLINDER	2-99
	COOLING SYSTEM			CARRIAGES, SIDESHIFTER FORKS	
1	COOLING SYSTEM	2-39	1	CARRIAGE	2-101
2	RADIATOR	2-41	2	SIDESHIFTER	2-102
3	WATER PUMP	2-43	3	FORKS	2-104
4	THERMOSTAT	2-45			
5	FAN & SET	2-47		TROUBLESHOOTING CHARTS	
				A. FUEL SYSTEM	2-105
				B. COOLING SYSTEM	2-107
				C. HYDRAULIC SYSTEM	2-108
				D. DRIVE UNIT	2-109
				E. HYDRAULIC BRAKE SYSTEM	2-110
				F. POWER STEERING SYSTEM	2-111
				G. MAST HYDRAULIC SYSTEM	2-112
				F. TRANSMISSION	2-113
				I. ELECTRICAL SYSTEM:	2-114
				LUBRICANT & FUEL SPECIFICATIONS	
			1	LUBRICANT SPECIFICATIONS	2-116
			2	FUEL SPECIFICATIONS	2-117
			3	LUBRICATION; CHART.	2-119
	TRANSMISSION				
1	TRANSMISSION	2-49			
2	CHECK-OUT PROCEDURES	2-53			
3	SHIFTING MECHANISM	2-56			
4	OIL COOLER	2-58			
5	OIL FILTER	2-59			
6	UNIVERSAL JOINT	2-61			
	DRIVE AXLE				
1	DRIVE AXLE	2-63			
2	HYDRAULIC BRAKES	2-69			
3	DIFFERENTIAL	2-69			
4	PNEUMATIC TIRES	2-73			
	BRAKE SYSTEM				
1	BRAKES	2-75			
2	ASTER CYLINDER	2-76			
3	DRIVE WHEEL BRAKES	2-77			
4	PARKING BRAKE	2-78			

TOPIC 1. DESCRIPTION AND SPECIFICATIONS

A. DESCRIPTION

The engine (Figure 1-1) is a four-stroke-cycle and L-type head design, with the valves arranged in the engine block. The main body consists of a single unit cylinder block and crankcase with integrally cast cylinders.

The aluminum pistons have four rings: The top two for compression, the third for scraping and the three-piece bottom ring for oil control. The full floating piston pins are retained by snaprings.

The front drive gear is keyed and pressed in place, and is sealed to the crankcase by a die cast filler block. The rear shaft extension is sealed to the crankcase by a die cast oil guard and a filler block.

The camshaft rotates in bearings located in the three main crankcase bulkheads. Camshaft

drive is provided by the crankshaft timing gear. A gear located on the camshaft drives the oil pump shaft and its coupled distributor drive shaft. The fuel pump is actuated by an eccentric cam located towards the rear of the shaft.

The main and connecting rod bearings are of precision construction.

The entire length of the heat treated, steel forged connecting rods is rifle drilled for pressure lubrication of the piston pins.

The cylinder head is constructed of special alloy iron with carefully engineered water passages to ensure optimum cooling.

The intake manifold has individual porting (Figure 1-2) whereby each cylinder is fed with the fuel-air mixture individually and not influenced by other cylinders of the engine.

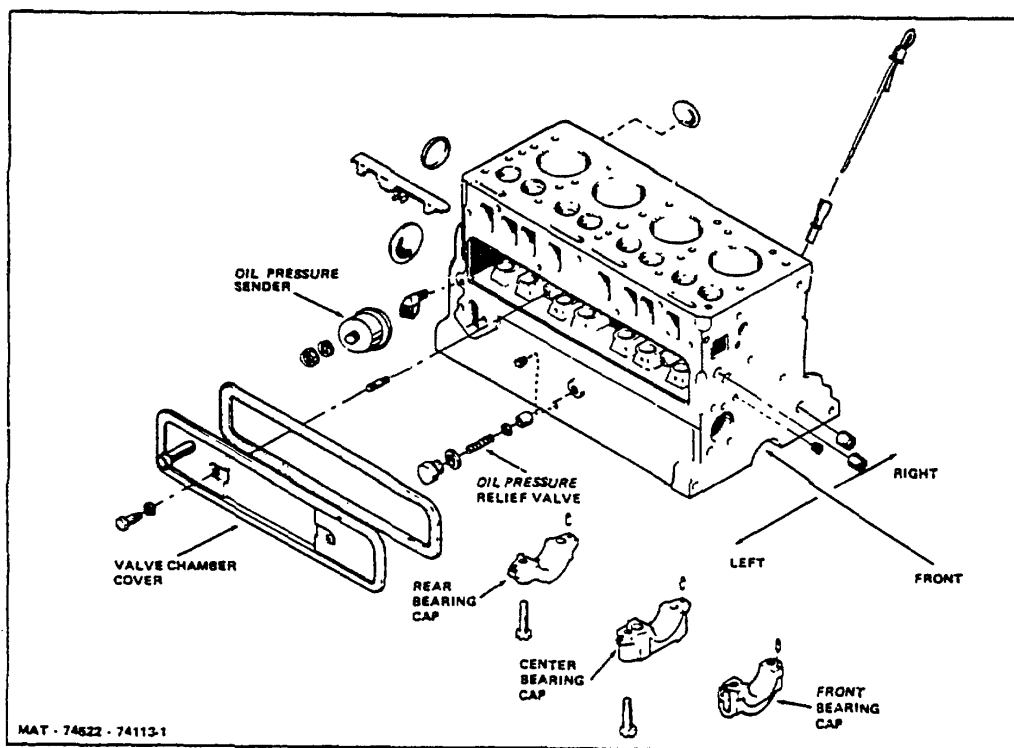


Figure 1-1. Cylinder Block Disassembled

This is accomplished by casting the cylinder block with individual intake valve passages for each cylinder and connecting these passages to an Intake manifold which also has individualized passages for each cylinder.

This equal distribution results in maximum power, smooth operation, easy starting and longer engine life.

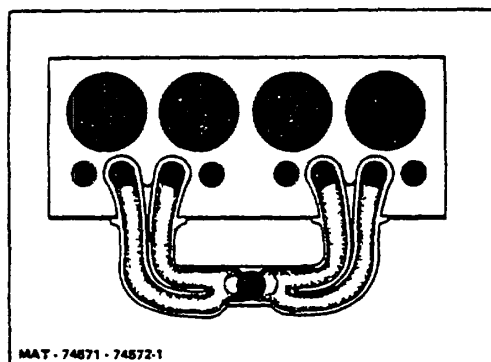


Figure 1-2. Intake Manifold Individual Porting

B. GENERAL SPECIFICATIONS

1. Size and Piston Displacement

	F163
Number of cylinders	4
Bore	3.4375
Stroke	4.375
Displacement (cu. in.) ..	162
Compression Ratio	7.4:1

2. Type

Four stroke cycle - naturally aspirated.

3. Crankshaft Rotation

Clockwise facing fan end of engine.

4. Suspension

Three point on rubber bushings.

5. Ignition

Battery and distributor.

6. Firing Order

1-3-4-2. Number 1 cylinder at fan end of engine.

7. Spark Plugs

Standard metric 18 MM thread.

8. Lubrication

Forced feed by oil pump driven directly off camshaft, to all main, connecting rod and camshaft bearings as well as tappets and timing gears.

9. Cooling

Coolant circulated by centrifugal pump driven by "V" belt from fan drive pulley. Full pressure flow through engine at all times. Engine capacity - 9 qts. Engine and Radiator capacity - 9 qts.

10. Oil Pressure

Maximum - 30-40 p.s.i.
Minimum (Idling) - 7 p.s.i.

11. Oil Sump Capacity

Four quarts - add one-half quart extra when oil filter is replaced. Throw-away cartridge type filter.

12. Connecting Rods

Drilled for piston pin lubrication.
Bronze bushing at piston pin end.

13. Camshaft

Supported by 3 replaceable bearings.
Driven by helical gear from the crank-shaft.

14. Pistons

Aluminum with four piston rings - 2 compression rings, 1 scraper ring and 1 oil control ring.

15. Valves

Located in cylinder block. Operated by valve tappets directly from camshaft.
Intake Valve Clearance - .012
Exhaust Valve Clearance - .020

16. Crankshaft

Supported by 3 main replaceable bearings.

17. Fan Drive Belt and "V" pulley on fan drive adapter

18. Gear Train Helical gears (3) crank gear, cam gear and fan drive gear.
19. Governor (Type I) Centrifugal actuated, surge compensated, weight type driven by drive plate and pin from the gear train. The range of governor action is indicated by the differential between RPM under no load and RPM under-load.
20. Governor (Type II) Cam gear type governor. Balls in driver assembly are forced outward by centrifugal force against race assembly. Tension of governor spring is counteracted by this force against race assembly bearing on governor lever. Governor is surge compensated.

C. ENGINE TUNE-UP SPECIFICATIONS

Timing	O-Deg. T.D.C. (STATIC) or up to 500 RPM
Valve Lash	
Intake Operating Temperature.....	.012"
Exhaust Operating Temperature.....	.020"
Distributor Settings	F163
Point Gap020"
Dwell	66-72
Firing Order	1-3-4-2
Plug Gap025"
Low Idle	400-600 RPM
High Idle	2400 +50 RPM
Compression	10 p.s.i. max. variance @ 150 RPM (Engine Cranking Speed)
Oil Pressure, 180	7 p.s.i @ 450- 500 RPM - Min. 30-40 p.s.i. 2400 RPM - Max.
Oil Capacity	Oil Change, w/o filter - 4 qts. Oil Change, w/filter- 4 1/2 qts.

TOPIC 2. VALVE ADJUSTMENT

A. DESCRIPTION

The valve tappets (Figure 2-1) are removable. These large, barrel shaped, pressure lubricated tappets are so designed that by removing the adjusting screw, the main body can be lifted out and replaced from above through the valve chamber. This eliminates the costly service operation of dropping the oil pan and pulling the camshaft. Locking of the adjustment is both simple and effective.

Accurate valve tappet settings materially prolong engine life and aid performance. In addition to impairing performance, excessive clearances are detrimental to cams and tappets as well as to the rest of the valve mechanism. When clearances are too low, the possibility of burned valves increases.

B. ADJUSTMENT

Check and adjust intake and exhaust tappets to following clearances at running temperature:

Intake - .012"
Exhaust - .020"

To adjust valve tappets proceed as follows:

1. Disconnect and ground the high tension coil wire to prevent accidentally starting the engine.
2. Remove the valve tappet cover from the left side of the crankcase.
3. Remove the spark plug from number one cylinder.

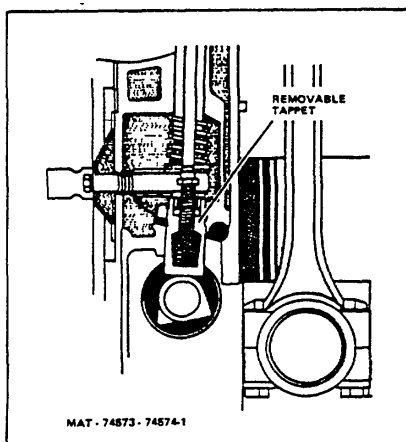


Figure 2-1. Removable Valve Tappet

4. Place thumb over the spark plug opening and slowly crank the engine until an outward pressure can be felt. Pressure indicates number one piston is moving toward Top Dead Center of the compression stroke. Continue cranking until the timing mark on the flywheel is in center of the flywheel housing timing hole. Both valves are then closed on the compression stroke of number one cylinder.
5. Use two thin wrenches when adjusting valve clearance. Use the lower wrench to hold the tappet and the upper wrench to raise or lower the tappet adjusting screw. When the valve lash is properly adjusted, the appropriate feeler gauge should pass between the tappet and its corresponding valve stem with a slight drag (Figures 2-2 and 2-3).
6. Crank the engine one-half revolution at a time and check the clearance of each valve; adjust if necessary. Do this on each set of cylinder valves in succession according to the firing order of the engine, which is 1-3-4-2.
7. Install new gasket and install valve tappet cover. Check to see that the valve cover makes an oil-tight seal with the crankcase.
8. Replace the spark plug, spark plug wire and coil wire.

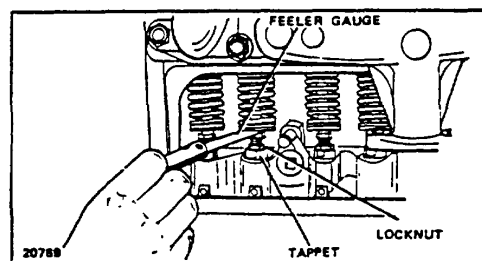


Figure 2-2. Checking Valve Tappet Clearance

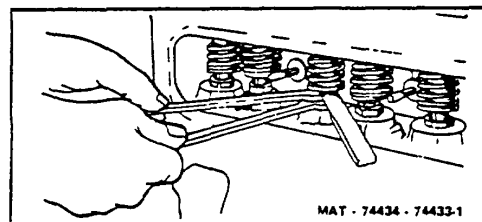


Figure 2-3. Adjusting Valve Tappet Clearance

TOPIC 3. OIL FILTER

A. DESCRIPTION

The engine oil is filtered through a "Spin On" by-pass type, throw-away, oil filter cartridge. This filtering is necessary to minimize the possibility of oil contamination, such as metal chips, carbon, dirt, etc., that may have inadvertently entered the oil supply, causing excessive wear to the engine parts. The oil filter cartridge should be replaced at every oil change.

B. REMOVAL

1. Remove and discard filter cartridge and clean out all oil residue in filter base mount (Figure 3-1).

C. INSTALLATION

1. Install replacement filter cartridge. Spread light coat of oil between the cartridge and the mounting, and hand tighten ONLY.

2. Start engine and check for leaks around base mounting.
3. Stop engine and check oil level.

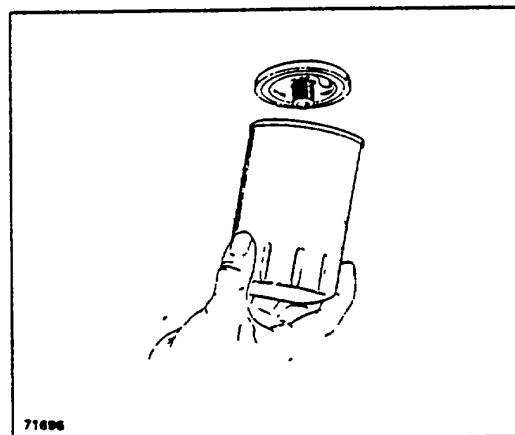


Figure 3-1. Oil Filter Removal

TOPIC 4. OIL PRESSURE RELIEF VALVE

A. DESCRIPTION

Pressure relief is located externally on the right-hand side, near the oil pan flange at the center. Pressure is controlled by a plunger and spring (Figure 4-1) the latter specifically for a certain range. The only adjustment variation is either to change springs or assemble or remove washers from behind the present spring. Up to four washers are permissible. Decrease the oil pressure by removing washers from behind the compression spring.

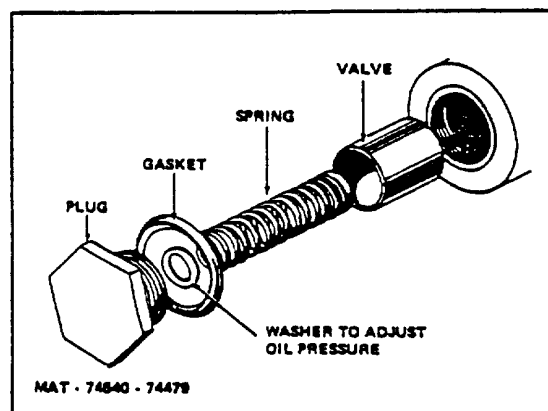


Figure 4-1. Oil Pressure Relief Valve Components

TOPIC 5. ENGINE TUNE-UP

Engine tune-up is an orderly process of restoring the engine to satisfactory performance. In addition, preventive maintenance and corrective operations should be accomplished so that engine serviceability will be unimpaired. The following outlines simple adjustments, inspections and tests, and should be performed in the order given.

A. BATTERY SERVICEABILITY

Be sure that battery tray is clean and level and that battery hold-down clamps are snug. Ensure battery posts and cables are clean and free of corrosion. Apply a light coat of grease to terminals.

Make certain that battery cables are not reversed. Connect negative to ground, positive to starter solenoid.

Check electrolyte level regularly, and add clean water if necessary, but do not overfill. Keep battery clean and wash with baking soda solution if corrosion is evident. Do not allow soda solution to enter cells. Inspect cables, clamps and hold-down bracket regularly. Replace if necessary.

B. INSPECT AND ADJUST SPARK PLUGS

Blow dirt from spark wells, then remove plugs. Clean spark plugs. Inspect for cracked or broken insulators, broken electrodes or excessive carbon deposits. Replace any faulty plugs. Adjust gap to specifications.

Test cylinder compression before reinstalling plugs.

C. COMPRESSION

Warm up engine to operating temperature. Blow dirt out of pockets around spark plugs. Remove all plugs and insert compression gauge in first spark plug hole and hold it firmly. Crank engine until the highest gauge reading is obtained. (Approximately four compression strokes.)

Check all cylinders in this manner. If readings are low in two adjacent cylinders, a blown head gasket is indicated. If readings are low and vary widely (more than 10 PSI), pressure is being lost either at the pistons, rings or valves. To determine where pressure loss is occurring, insert about one tablespoon of SAE 30 engine oil through the spark plug hole. Take a new reading. If this reading is higher than the initial reading, the piston rings are faulty. If reading is the same as the initial reading, the valves may be leaking or the cylinder head gasket is damaged.

D. CYLINDER LEAK TEST

Perform cylinder leak test by removing one spark plug at a time, (ensure high tension coil wire is disconnected) and insert leak tester in spark plug well; build up pressure as recommended. Record reading and record any appreciable pressure fall-off. If pressure loss is indicated, check cylinder head for hissing noise, (head gasket), carburetor, (intake valve), exhaust pipe and manifold, (exhaust valve), and oil fill tube, (piston rings). Check all cylinders in like manner and repair as required.

E. IGNITION TIMING

The ignition system consists of the battery, ignition coil, distributor, condenser, spark plugs, alternator and high and low tension wiring.

The system produces and delivers high voltage surges of up to 20,000 volts to the correct plug, at the correct intervals in exact time with the engines' sequential mechanism.

To maintain efficient, economical engine operation, the electrical and mechanical sequencing must be exactly matched or timed.

The distributor warrants particular attention in relation to this sequencing and the following procedure is recommended as a comprehensive alignment:

1. At 500 hour intervals, remove the distributor cap and dust seal and inspect contact points, rotor and cap for evidence of wear, arcing, cracks or corrosion. Repair or replace as required. Label spark plug wires for correct installation.
2. Pitted or burned points must be re-placed.

NOTE

If points are burned or pitted, replace the condenser, too.

3. The distributor may be removed for servicing or replacement at this time.

NOTE

When the distributor is removed and replaced, the original position of the distributor must be observed. Refer to ELECTRICAL SYSTEM MANUAL for proper removal and replacement procedures.

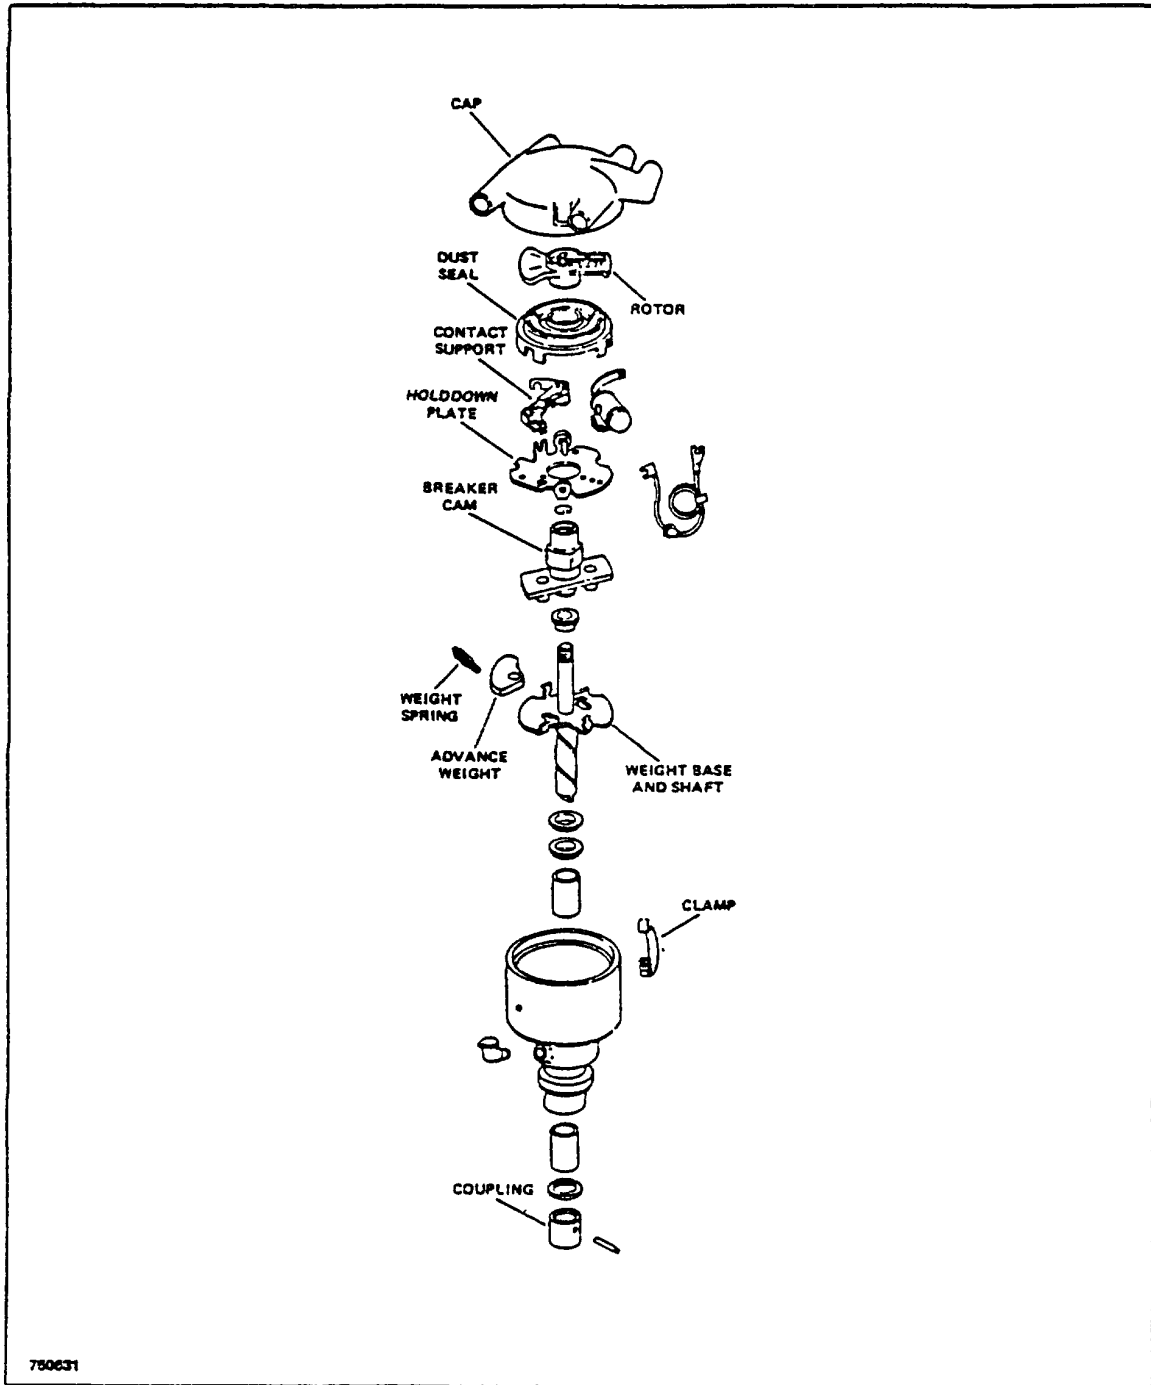


Figure 5-2. Distributor Assembly (Type II) Exploded View

4. Refer to paragraph I for static ignition timing and paragraph J for dynamic ignition timing.
5. If distributor is not going to be removed, install contact set, if removed. Be certain that points are in perfect alignment (Figure 5-3 and 5-4).

NOTE

Following data is required for proper distributor to engine timing.

F. DISTRIBUTOR CHARACTERISTICS

Type II Distributor

Rotation	C.C.W. (Viewing Rotor)
Point Opening020"
Cam Angle Range	66° - 72°
Start Advance (T.D.C.)	500 RPM

G. STATIC BREAKER POINT ADJUSTMENT

NOTE

Refer to paragraph F for correct point gaps and cam angles for the distributor being serviced.

1. Nudge the starter switch until the breaker arm is resting on the high point of the cam. Attach a remote starter switch between the battery positive (+) terminal and the starter solenoid switch terminals. The truck starter switch can be used but a remote switch is more convenient.

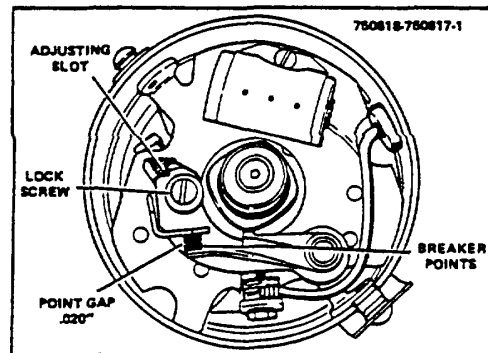


Figure 5-4. Adjusting Contact Gap (Type II Distributor)

2. Slightly loosen the contact assembly locking screw Figure 5-3 and 5-4).
3. Insert a feeler gauge between the contact points, insert a screwdriver in the adjusting slot and turn clockwise or counterclockwise to specified point gap. When properly adjusted a slight drag will be felt when feeler gauge is slid between the points.
4. Tighten locking screw and recheck gap for accuracy.
5. Replace dust seal, rotor and distributor cap.

H. DYNAMIC BREAKER POINT ADJUSTMENT

1. Disconnect high tension coil lead from distributor and ground to engine-or frame.
2. Attach positive lead of dwell meter to the negative terminal (-) of coil. Connect negative dwell meter lead to ground.
3. Attach a remote starter switch between the battery positive terminal (+) and the starter solenoid terminal. The truck starter switch can be used but the remote switch is more convenient.
4. Remove distributor cap, rotor and dust seal. Slightly loosen the contact assembly locking screw and insert a screw driver in the adjusting slot (Figure 5-3 or 5-4).
5. Use starter to crank the engine. Observe the dwell meter. The meter will rise to a value and then drop off each time the points open. Turn the screwdriver in the adjusting slot until the maximum value of the needle rise equals the required dwell specification. See paragraph F.

6. Tighten the contact assembly locking screw.
7. Install dust seal, rotor and cap.
8. Start engine and recheck dwell reading on meter. Needle should now hold steady at specified dwell angle. If so, remove dwell meter and remove remote switch. If not, repeat procedure starting with item 4 above.

I. STATIC IGNITION TIMING

The exact timing of the spark depends on the actual breakage, or opening, of the electrical contact across the points. Should there be any question as to the accuracy of point setting relative to the engine timing mark, the use of one of the following methods is recommended.

1. Make up a simple light circuit consisting of an automotive light bulb with soldered on lead: or a socket with lead wires attached.
2. Remove distributor cap, rotor and dust seal. Ensure that distributor point gap is properly set. See specifications for distributor.
3. Loosen distributor clamp (Figure 5-6).
4. Remove timing window cover on flywheel housing and remove the spark plug from number one cylinder.
5. Place thumb over spark plug opening and rotate engine crankshaft by hand until outward pressure against thumb is felt. Continue turning crankshaft until D.C. mark (Figure 5-5) is aligned with timing pointer at center of timing window.
6. Clip one lead to positive, or ungrounded, side of the battery. Attach the other lead to the primary wire connection on the side of the distributor (Type I) or the distributor coil negative terminal (Type II).
7. hold rotor against rotation. Rotate distributor slowly in the direction of rotation until test lamp just lights. Now start the adjustment.
8. Very slowly turn the distributor housing against the direction of shaft rotation until the test lamp goes out. Stop immediately. Do not pass this point or turn the Distributor housing back and forth to locate it.
9. Should you turn the housing too fast or too far beyond the point where the light

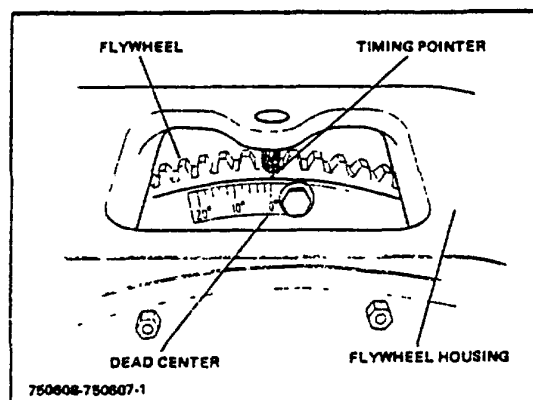


Figure 5-5. Flywheel Timing Marks

10. goes out, turn back to the original position and repeat the procedure.
11. When you have located the distributor in the proper position (with test lamp out) tighten distributor hold down clamp.
12. With the test lamp still connected, check for proper setting by releasing tension on rotor.
 - a. With rotor held against rotation, light should go out.
 - b. With rotor released, test lamp should be on.
13. Remove test lamp. Replace dust seal, rotor and distributor cap.
14. Install spark plug.

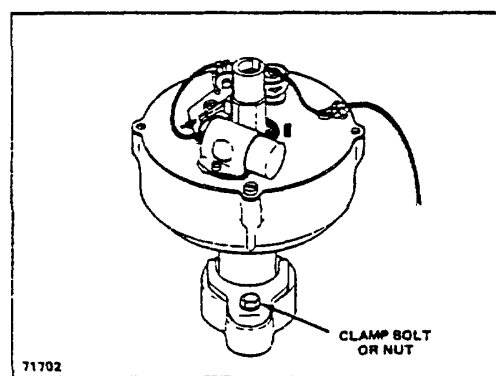


Figure 5-6. Distributor Timing adjustment (Typical)

J. DYNAMIC IGNITION TIMING

Ensure distributor point gap is properly set. (Refer to Ignition Timing above.)

1. Loosen clamp at the distributor only if required. (Figure 5-6).
2. Remove flywheel inspection cover.
3. Connect timing light per manufacturer's instructions.
4. Install a tachometer and connect positive lead to negative ignition coil terminal and connect the negative lead to ground.
5. Start engine and using carburetor idle adjusting screw, lower idle speed to 400 to 450 rpm so that the automatic advance of the distributor is fully retarded. THIS is VERY IMPORTANT TO OBTAIN CORRECT TIMING.
6. Direct timing light at flywheel timing hole. If timing light strobe does not show perfect alignment of D.C. mark with timing pointer, loosen distributor clamp and turn distributor until it does. To advance timing, turn distributor clockwise. To retard timing, turn distributor counterclockwise.
7. Lock distributor in this position.
8. Accelerate the engine a few times and observe movement of D.C. mark after engine returns to 400 to 450 rpm.

9. If spark advance is functioning properly the D.C. mark will move counterclockwise during acceleration and move back to D.C. alignment at engine idle speed. Reset engine idle speed.
10. Shut engine off. Remove tachometer and timing light. Install flywheel inspection cover.

NOTE

If lift truck is equipped with an oil clutch transmission use static ignition timing only to tune engine.

K. GENERAL INSPECTION

1. Clean fuel filter. Remove and clean fuel filter bowl. Clean screen in filter head. Refer to Fuel System.
2. Clean air cleaner. Clean air cleaner element and cleaner. Refer to Fuel System.
3. Adjust valve clearances. Inspect and adjust valve clearances. Refer to Valve Clearance Adjustment.
4. Adjust carburetor. With all the above operations completed, start engine and operate until hot. Adjust carburetor. Refer to Fuel System.

TOPIC 6. TROUBLESHOOTING CHART

It has been proven that over 90% of the troubles that occur in engine operation are avoided when those persons responsible for maintenance adhere to an adequate program of lubrication, inspection and maintenance on a regularly scheduled basis. The time and expense involved in such programs is only a fraction of that incurred when poor maintenance practice results in a major malfunction or breakdown.

In most cases, when trouble is detected and remedied immediately, a more expensive, time consuming repair will be avoided. Following are some of the normal complaints encountered in routine operation and the probable causes.

For detailed inspection, maintenance and repair procedures, refer to the specific topical section, repair manual, relating to the malfunctioning component.

TROUBLESHOOTING CHART

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Engine will not start.	Weak or dead battery.	Charge or replace battery.
	Poor ground connection.	Clean and tighten ground connection.
	Faulty starting switch or solenoid on starting motor.	Repair or replace switch and/or solenoid.
	Internal engine seizure.	Turn engine manually to determine cause. Repair engine.
Engine cranks but will not start.	Defective wiring or spark plugs.	Replace plugs or wiring.
	Points not gapped properly or defective.	Adjust points or replace points.
	Defective wiring.	Replace wiring.
	Defective ignition switch.	Replace switch.
	Defective coil.	Replace coil.
	Defective distributor cap or rotor.	Repair distributor.
	No gas in fuel tank.	Fill tank.
	Clogged filter or lines.	Clean filter and lines.
	Defective fuel pump.	Replace fuel pump.
	Tank vent plugged.	Clean vent.
	Carburetor flooded	Too much choking.
	Carburetor float level improperly set.	Repair carburetor.
	Defective choke.	Repair choke.

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Engine misfires.	Uneven compression.	Check compression and adjust or grind valves.
	Wet or deteriorated high tension wires.	Dry wires. Replace defective wires.
	Defective spark plugs. Cracked distributor cap.	Replace spark plugs. Replace cap.
	Points not gapped properly or defective.	Repair distributor.
	Engine not properly timed.	Time engine.
Engine runs unevenly at idle speed.	Spark plugs not gapped properly.	Cap or replace spark plugs.
	Idle adjustment on carburetor not properly set.	Adjust carburetor idle.
	Wrong float level.	Repair carburetor.
	Carburetor or intake manifold leaking.	Repair carburetor or replace manifold gasket.
	Cylinder head gasket leaking.	Replace gasket.
	Valves out of adjustment or damaged.	Adjust or replace valves.
Engine misfires at high speed.	Points not properly adjusted.	Adjust points.
	Distributor breaker arm spring defective.	Replace spring.
	Valve springs weak or broken.	Replace valve springs.
	Spark plugs not gapped properly or incorrect plugs.	Adjust spark plug gap or replace plugs.
Engine backfires.	Improper timing.	Time engine.
	Air cleaner dirty or clogged.	Service air cleaner.
	Fuel line bent or plugged.	Clean or replace fuel line.
	Carburetor dirty.	Clean carburetor.
	Valves sticking.	Repair valves.
	Weak or broken valve springs.	Replace springs.
Engine pings excessively.	Too low of gas octane rating.	Fill with proper grade of gas.
	Incorrect engine timing.	Time engine.

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Engine idles too fast.	Carburetor not properly adjusted.	Adjust carburetor idle.
	Governor not properly adjusted.	Adjust governor.
	Throttle not adjusted properly or return spring is weak.	Adjust throttle or replace spring.
Engine dies when at idle speed.	Improper idle adjustment.	Adjust carburetor idle.
	Carburetor dirty.	Clean carburetor.
	Choke not properly adjusted.	Adjust choke.
	Air leaks in manifold.	Check and correct.
Engine stumbles on acceleration.	Carburetor out of adjustment.	Adjust carburetor.
	Governor not adjusted properly.	Adjust governor.
	Dirty carburetor.	Clean carburetor.
	Air in fuel lines.	Check and clean fuel lines.
Engine lacks power.	Poor compression.	Adjust or grind valves.
	Improper timing.	Time engine.
	Throttle not adjusted properly.	Adjust throttle.
	Air leak in fuel system.	Check and correct.
	Air cleaner restricted.	Service air cleaner.
	Exhaust system restricted.	Repair exhaust system.
	Incorrect grade of gasoline.	Fill with proper grade of gasoline.
	Valves not adjusted properly.	Adjust valves.
	Piston rings sticking or worn.	Repair engine.
Engine overheats.	Coolant level low.	Replenish coolant.
	Radiator clogged or leaking.	Clean, repair or replace radiator.
	Fan belts slipping.	Adjust belt tension.
	Thermostat sticking or defective.	Replace thermostat.
	Improper engine timing.	Time engine.
	Exhaust system clogged or defective.	Repair exhaust system.

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Engine overheats. (cont'd)	Water pump defective.	Repair or replace water pump.
	Engine overloaded.	Check loading and reduce as necessary.
Low oil pressure.	Low oil level.	Refill crankcase.
	Defective oil pressure gauge or pressure sender.	Repair or replace gauge and/or sender.
	incorrect grades of oil.	Drain and refill with correct grade.
	Oil pump suction screen clogged.	Clean screen.
	Dirty or defective relief valve.	Clean or repair relief valve.
	Defective oil pump.	Repair or replace oil pump.
	Worn bearings.	Replace bearings.
	Worn camshaft bushings.	Replace bushings.
Oil pressure to high.	Incorrect grade of oil.	Drain and refill crankcase with correct grade of oil.
	Defective or damaged relief valve.	Repair or replace relief valve.
	Oil lines or galleries plugged.	Overhaul engine.
	Oil pressure gauge defective.	Replace gauge.
Engine burns oil excessively.	Leak in oil system.	Check and correct.
	Oil level too high.	Fill to proper level.
	Incorrect grade of oil.	Drain and refill with correct grade.
	Crankcase breather clogged.	Clean breather.
	Defective or damaged relief valve.	Repair or replace relief valve.
	Piston rings worn, broken or stuck.	Replace rings.
	Worn pistons and sleeves.	Replace pistons and sleeves.
	Worn bearings.	Replace bearings.
Worn valve guides.	Replace valve guides.	
Engine knocks or is noisy.	Incorrect timing.	Time engine.
	Excessive carbon buildup.	Clean cylinder head and pistons.

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Engine knocks or is noisy. (cont'd)	Poor gas.	Refill with proper fuel.
	Overloads at low operating speeds.	Check loading and correct.
	Worn main bearings or crankshaft.	Overhaul engine.
	Excessive crankshaft end play.	Correct end play to specifications.
	Worn or burned out connecting red bearings.	Replace bearings.
	Loose or worn piston pins.	Replace pistons and pins.
	Piston loose in cylinder.	Replace piston and/or sleeve.
	Broken piston ring.	Replace piston rings.
	Burned valves or seats.	Replace valves and or seats.
	Weak or broken valve springs.	Replace springs.
	Valves sticking.	Repair or replace valves.
	Tappets worn or out of adjustment.	Replace or adjust tappets.
	Loose or worn camshaft bearings.	Replace camshaft bearings.
	Excessive camshaft end play.	Adjust end play or replace camshaft.
	Gears in gear train worn or loose.	Repair or replace gear train.
	Engine not aligned with transmission or pump.	Align engine.
	Loose, bent, or off center coupling.	Repair or replace coupling.
	Engine not securely mounted.	Tighten engine mountings.
Flywheel out of balance.	Repair or replace flywheel.	

TOPIC 1. FUEL SYSTEM (PRT)

A. DESCRIPTION

The following components make up the fuel system: The fuel tank, fuel pump, strainer and filter, the carburetor, accelerator linkage and the governor assembly.

The fuel tank is the fuel reservoir and, via the fuel lines, fuel pump, strainer and filter, supplies the carburetor with

raw fuel to be vaporized and mixed with fresh air for controlled combustion.

The fuel system is designed to function virtually trouble free, but does require adequate preventive maintenance to ensure its continued operation.

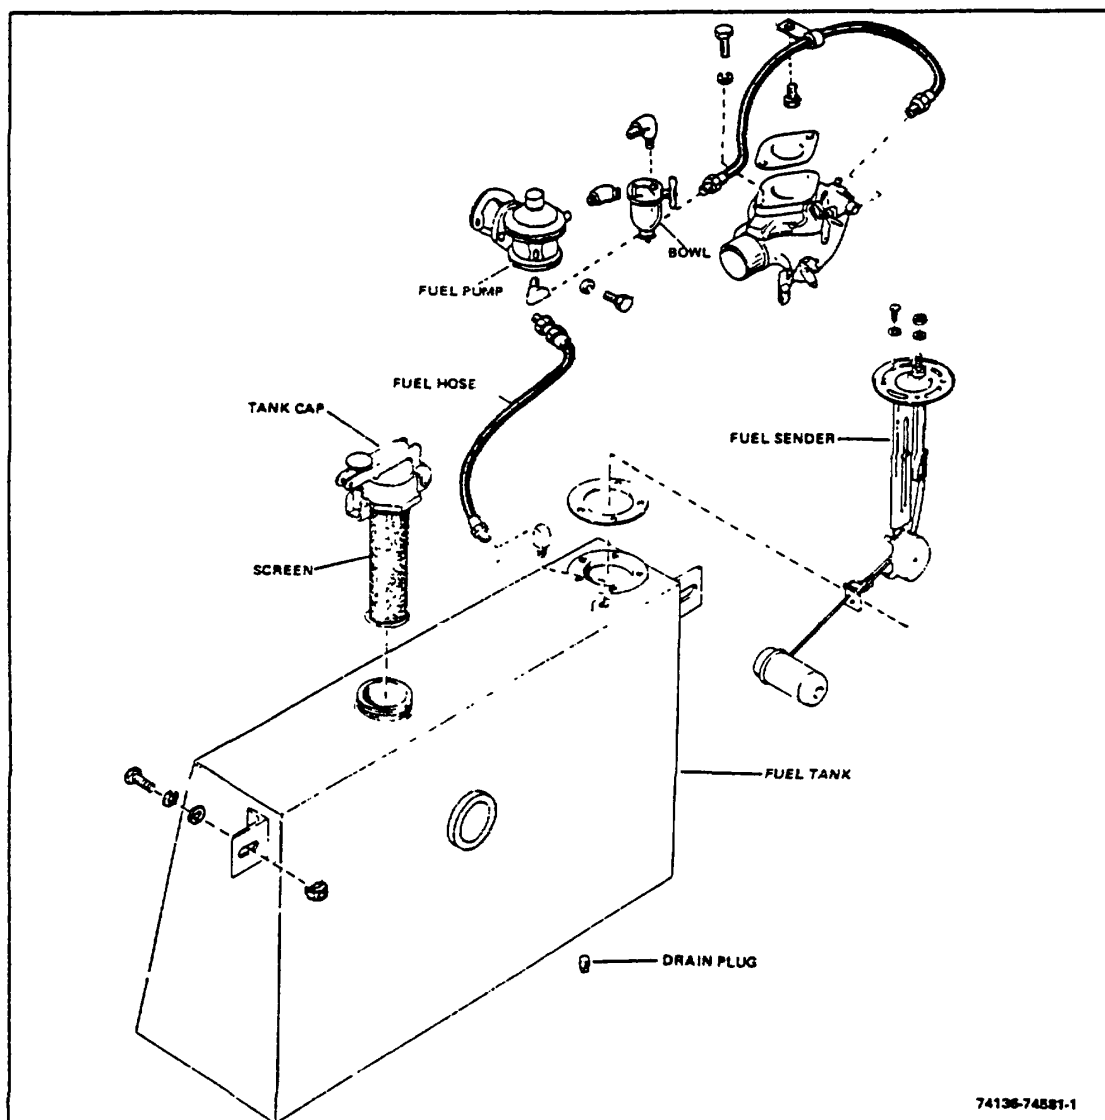


Figure 1-1. Fuel System (Type I)

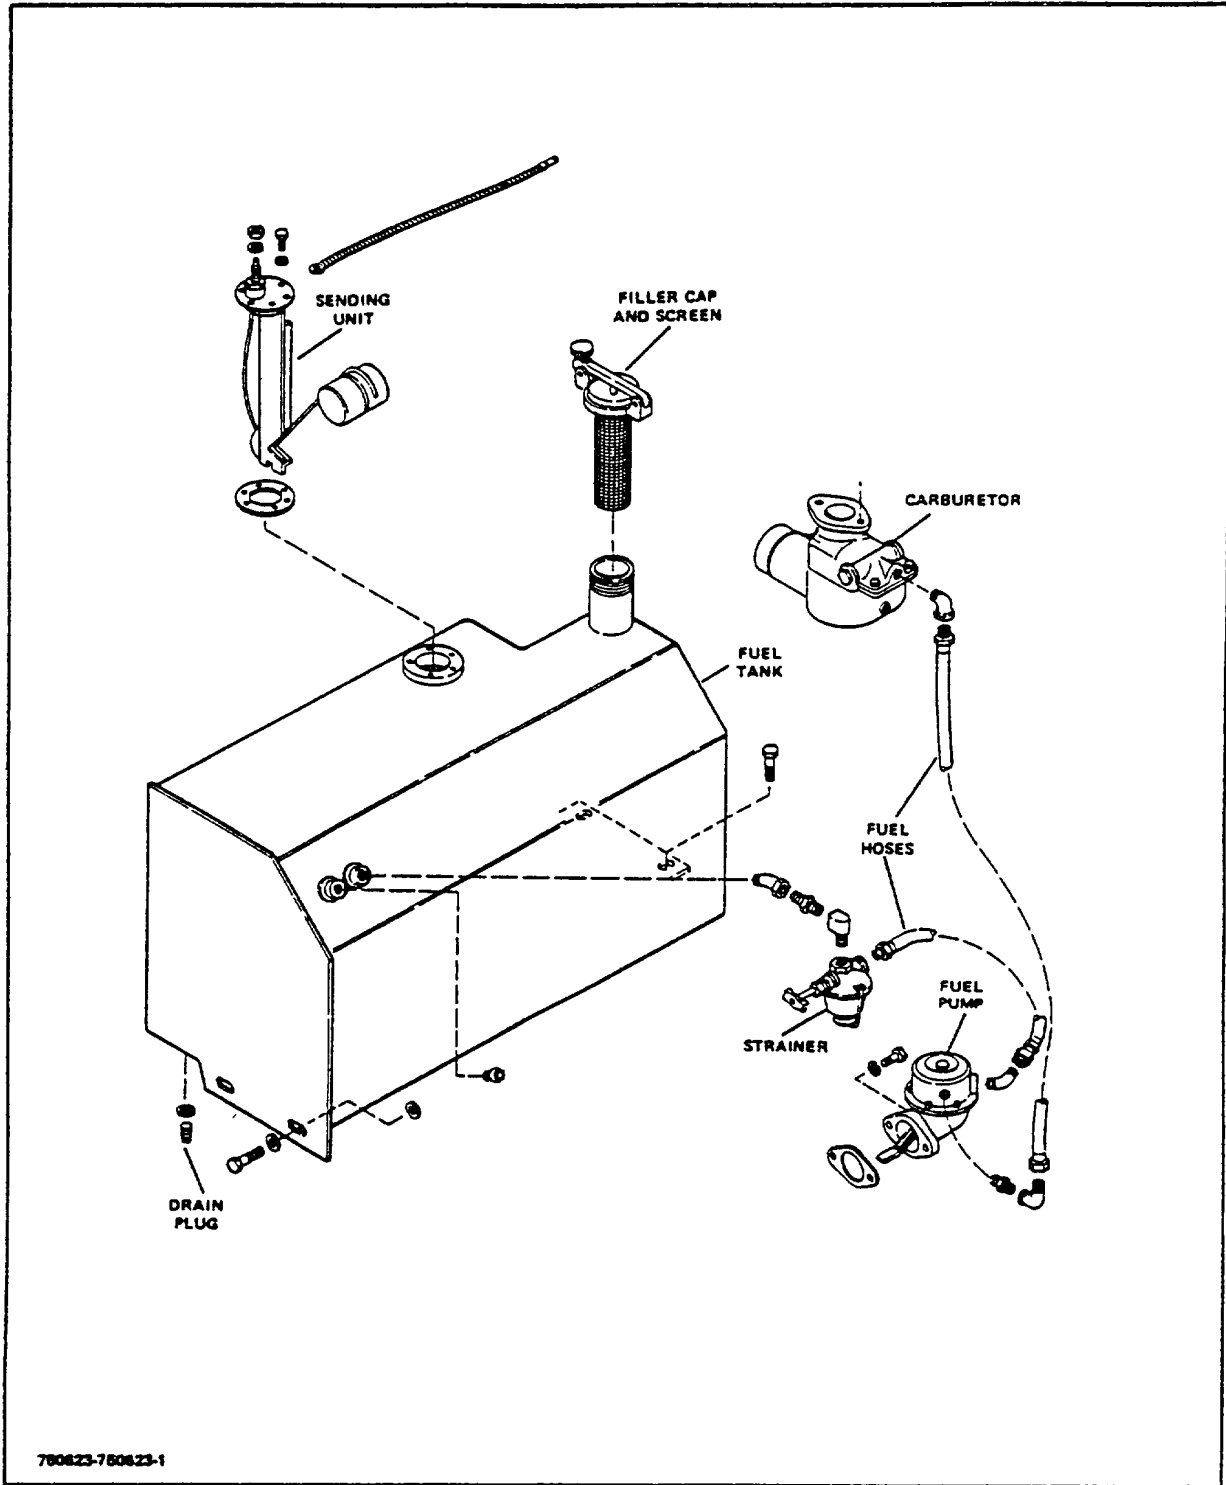


Figure 1-3. Fuel System (Type III)

TOPIC 2. AIR CLEANER (TYPE I) PRT

A. DESCRIPTION

The air cleaner is a dry element, replaceable type and by means of rubber tubing, is connected to the carburetor air intake. This prevents dust, chaff, or other foreign matter (the chief causes of engine wear) from entering the manifold and engine.

B. REMOVAL

To change the air filter element, loosen tubing clamps, remove wing nut, rubber washer, and slide cleaner base assembly free of cover.

C. SERVICE

1. Lift dirty or defective filter element from base of air cleaner assembly and discard.

2. Position replacement filter element in base, ensuring base and cover are free of dust and lint.

D. INSTALLATION

1. Slide cleaner assembly back into cover, insert rubber washer and tighten wing nut.
2. Attach previously loosened hoses and hose clamps.

CAUTION

Never remove the air cleaner while engine is running, and do not run engine unless air cleaner is in place.

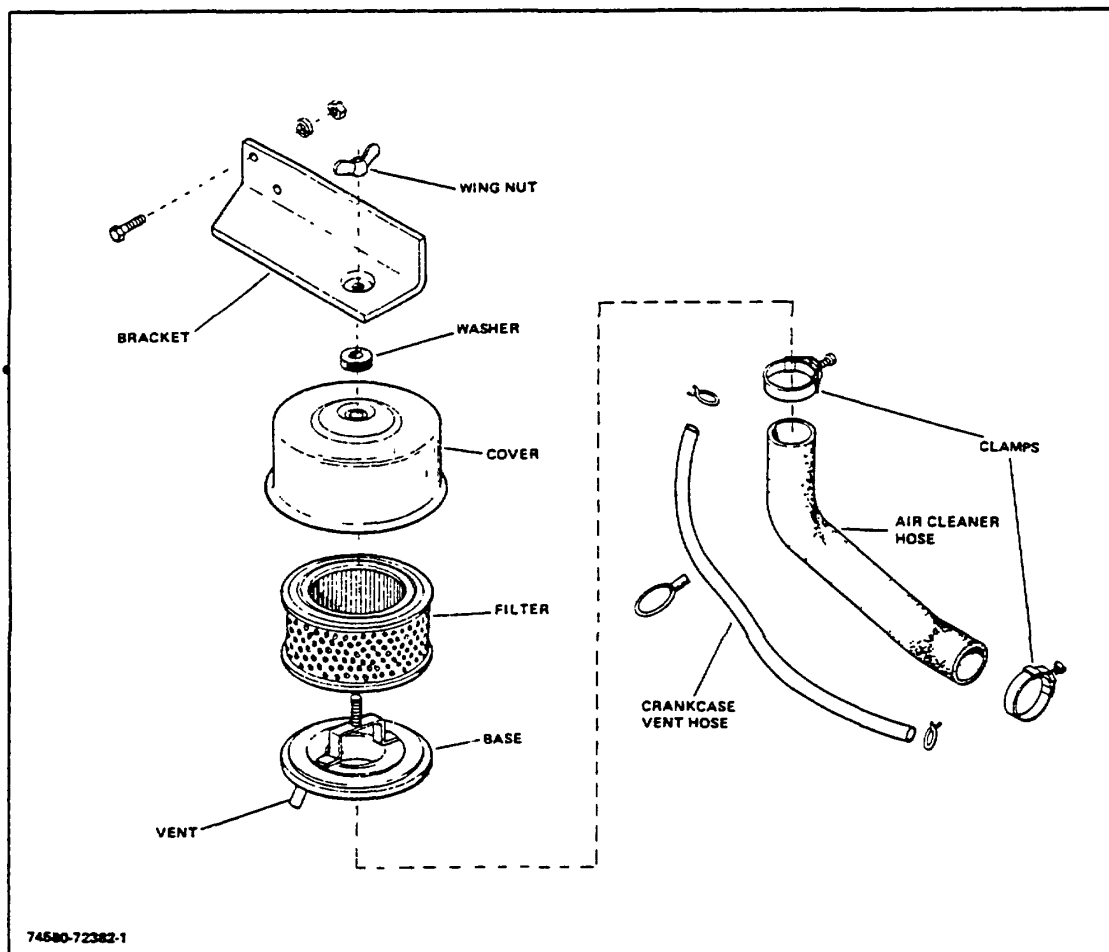


Figure 2-1. Air Cleaner (Type I)

TOPIC 2. AIR CLEANER(SRT)

A. DESCRIPTION

The air cleaner is mounted on the side of the engine and is connected to the carburetor air intake by tubing and hose. It prevents dust, chaff, or other foreign matter, the chief causes of engine wear, from entering the manifold and engine.

The air enters the cleaner and passes through a replaceable type, dry filter element. The element is constructed of pleated paper and bound at the edges with plastic. This construction filters and removes the fine dust particles from the air stream intake. This clean and purified air is then drawn through the center tube of the element and into the carburetor and intake manifold. For continued efficient engine operation, the air cleaner must be properly serviced.

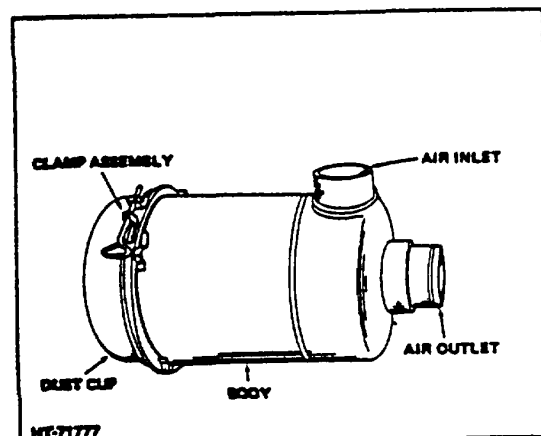


Figure 3-1. Air Cleaner

B. INSPECTION

Inspect the filter element at intervals frequent enough to ensure having a clean element. It may become necessary to inspect the element more often in an atmosphere heavily laden with dust, chaff and lint.

C. SERVICE

When servicing the cleaner, reduce engine down time to a minimum by replacing a dirty filter element with a new element or one that has been cleaned. Service the dirty element later, using procedures detailed in Subparagraph 2. (Optional Service Methods).

CAUTION

Never remove the air cleaner while engine is running, and do not run engine unless air cleaner is in place.

1. Air Cleaner Service

Clean baffle and dust cup as follows:

- a. Loosen clamp assembly (Fig 3-2) and remove dust cup.
- b. Loosen wing nut and remove baffle from dust cup.
- c. Empty dirt from cup. Clean cup and baffle.
- d. Remove foreign material from around filter element.
- e. Assembly baffle to dust cup. Tighten wing nut.

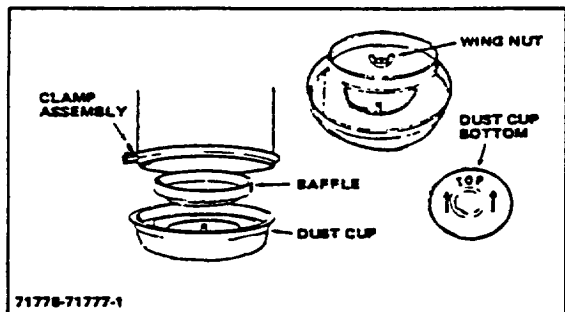


Figure 3-2. Baffle and Dust Cup Details

CAUTION

Bottom of dust cup is marked with arrows and the word TOP. Air cleaner is mounted in horizontal position. Be sure dust cup arrows point up (Fig 3-2). **DO NOT USE OIL in DUST CUP.**

- f. Position dust cup on air cleaner body. Tighten clamp securely.

Replace filter element as follows:

- a. Remove wing screw and gasket washer. Remove filter element.

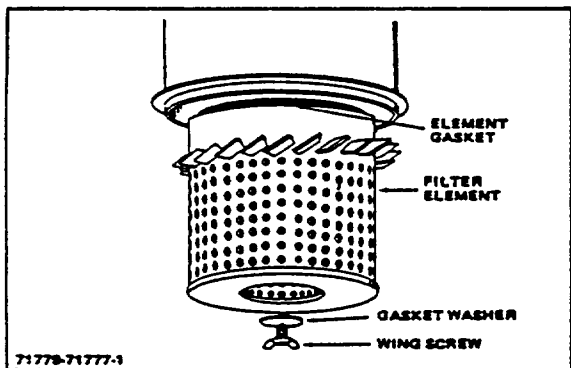


Figure 3-3. Removing Filter Element

- b. Inspect element gasket for damage.
- c. Install a new or clean element. Inspect cup gasket (if applicable) and replace if it is damaged.

CAUTION

Air cleaner is mounted in horizontal position. Be sure dust cup arrows point up. (See Fig 3-2) **DO NOT USE OIL in DUST CUP.** Always refer to manufacturer's instructions on air cleaner.

- d. Install dust cup on air cleaner body. Make certain it seals 360 degrees around the body. Tighten clamp securely.

2. Optional Service Methods

CAUTION

Pre-cleaning fins on filter element are not removable.

CAUTION

Air pressure at nozzle must not exceed 100 psi. Maintain reasonable distance between nozzle and filter element.

The filter element can be either dry cleaned or washed as detailed below.

- a. To dry clean filter element, direct a jet of dry clean air up and down pleats on clean air side of element.
- b. If filter element is oily and soot laden, wash it in a solution of warm

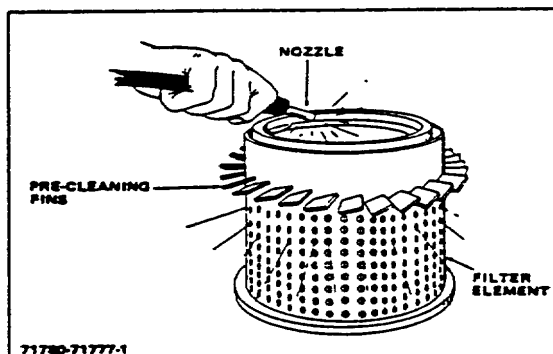


Figure 3-4. Dry Cleaning Filter Element

water and household detergent. The warmer (100°F) the solution, the better it will clean. Soak element for 15

minutes, then remove it and rinse thoroughly with clean, running water (maximum pressure 10 psi). Air dry thoroughly before reusing. (A fan or air draft may be used for drying, but do not heat element to hasten drying.)

- c. Inspect for damage by placing a bright light inside element (Fig 3-5). Thin spots, pin holes or the slightest rupture will render the element unfit for further use.

NOTE

Replace filter element after 6 cleanings.

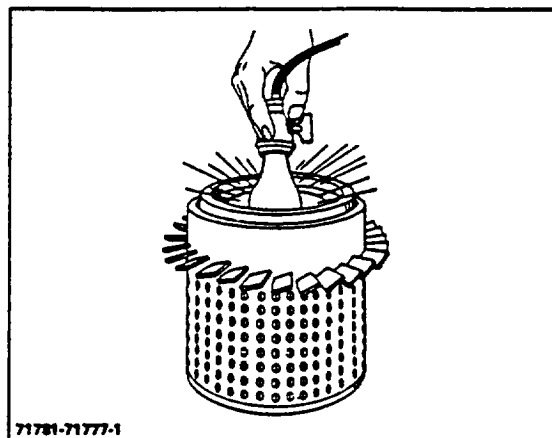


Figure 3-5. Inspecting Filter Element

TOPIC 4. FUEL TANK**A. DESCRIPTION**

The fuel tank is of steel construction with welded seams. It includes a fuel level sender unit and a filler cap with filter screen. The fuel tank requires little, if any service other than periodic cleansing of the fuel filter screen.

B. CLEANING AND INSPECTION

1. Remove filler cap assembly and check filter screen for fouling. Clean if required, and dry with compressed air.

2. Replace filler cap assembly.
3. Loosen drain plug.
4. Inspect for water contamination.
5. If contaminated, drain until water is emptied, then close valve.
6. Connect outlet fuel line and fill tank to recommended capacity with proper octane fuel.
7. Check tank and fuel lines for leaks. Repair if necessary.

TOPIC 5. FUEL PUMP AND FUEL FILTER**A. DESCRIPTION**

The fuel pump is a mechanical diaphragm type pump with a strainer and sediment bowl. The pump is mounted on the left side of the engine and is operated by an eccentric cam on the engine camshaft.

Fuel from the tank enters the strainer-sediment bowl on the suction stroke of the pump and is forced to the carburetor on the pressure stroke. Action is controlled by two valves in the cover assembly.

B. REMOVAL AND INSPECTION

1. Disconnect fuel pump inlet and outlet lines.
2. Remove capscrews and lockwashers from fuel pump mounting flange and remove pump.
3. Clean pump with solvent and dry with compressed air.
4. Remove bowl and bowl gasket.
5. Remove strainer screen from top cover and discard.
6. Install new strainer screen after ensuring that it shows no damage or obstruction. New screen must fit snugly around inner and outer edges.
7. Install new bowl gasket, swing bail assembly into position over bowl, and tighten nut securely.
8. Test operation of pump valve by attaching pressure gauge to outlet and

operating rocker arm. Pressure should be between 2-3/4 p.s.i. to 3 p.s.i. Pressure should not fall off rapidly.

9. Install fuel pump as removed, ensuring new mounting gasket is used.
10. Install and secure capscrews and lockwashers.
11. Connect inlet and outlet fuel lines. Do not over tighten connections.

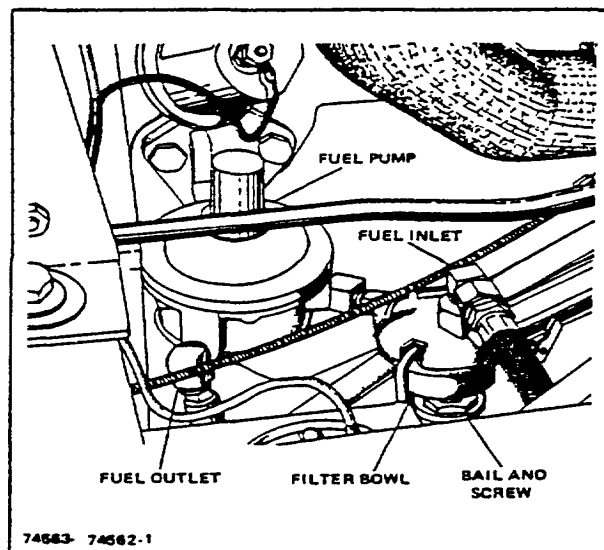


Figure 5-1. Pump Mounting

TOPIC 6. CARBURETOR

A. DESCRIPTION

The carburetor used in this fuel system is a single venturi, updraft type with fixed jets covering all speeds except idle. It has an airbleed well method of compensation, an idle fuel adjusting screw and an idle throttle stop screw. The air intake of the carburetor is provided with a choke valve control. The flow of fuel through the main jet system is controlled by the size of the jet. The idle adjusting screw controls the fuel mixture for the idle system.

B. CHOKE VALVE ADJUSTMENT

To aid in starting a cold engine, a choke valve is provided in the air inlet of the carburetor. By closing this valve, a rich mixture of fuel is drawn into the carburetor for quick starting.

It is only necessary to make certain the choke control fully opens the valve by the time the engine has reached normal operating temperature and choke control button is pushed all the way in. Adjustment is made at the swivel connection on the choke shaft lever.

C. CARBURETOR ADJUSTMENTS

NOTE

Before any work is performed on carburetor, make sure the trouble is not due to poor compression, or in the ignition system due to incorrect timing, fouled spark plugs, burned ignition points, etc.

Refer to REPAIR MANUAL for CARBURETOR REPAIR.

The correct mixture of fuel and air is controlled by a fixed main jet and an adjustable idle fuel jet. The idle throttle stop screw controls the throttle position to ensure correct engine idle speed.

Adjustments are properly set when the unit is shipped from the factory and if they have to be disturbed the carburetor must be readjusted.

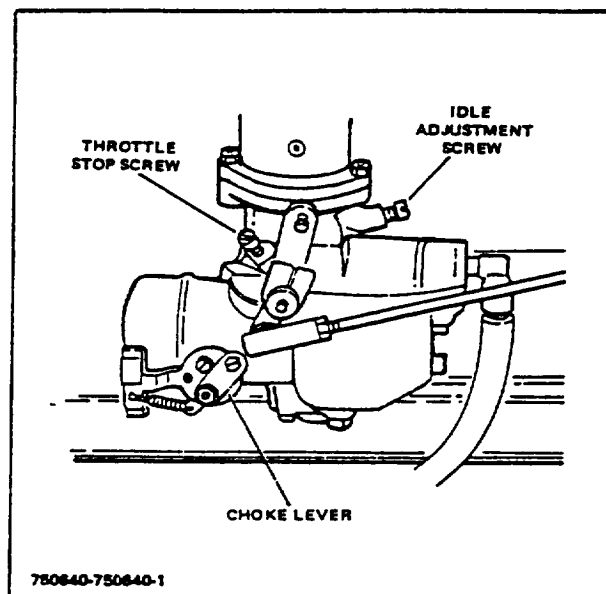


Figure 6-1. Carburetor

NOTE

Before making any carburetor adjustments, allow the engine to warm up to normal operating temperature.

Make carburetor adjustments as follows:

1. Throttle stop-screw adjustment: The throttle Idling stop-screw should be turned in against the stop to hold the throttle open slightly. Then, after the idle fuel adjustment is made, adjust the stop-screw to obtain an idle speed of between 500 and 550 r.p.m.
2. Idle fuel adjustment: Turn idle adjustment screw in to obtain a lean mixture or turn out to obtain a rich mixture. During adjustment, engine speed may increase or decrease. Adjust idle screw until the engine runs smoothly and steadily. It may be necessary to reset throttle stop-screw to obtain correct idle speed.

TOPIC 7. ACCELERATOR LINKAGE

A. DESCRIPTION

The accelerator linkage provides manual, foot pedal control of the engine speed by either increasing or decreasing the fuel flow to the carburetor. Maximum engine speed, RPM, is controlled by the governor assembly, which is pre-adjusted at the factory.

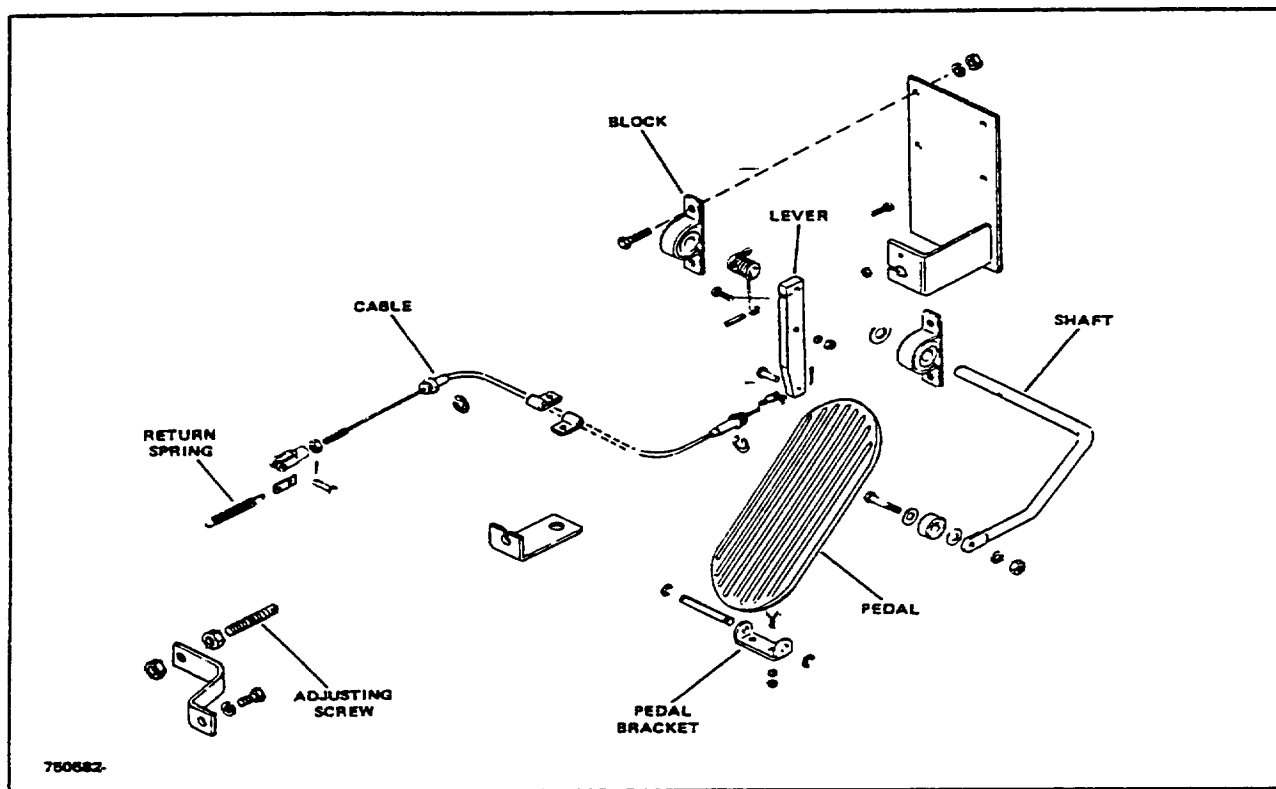


Figure 7-1. Accelerator Linkage

TOPIC 8. GOVERNOR

A. GOVERNOR DESCRIPTION

The governor prevents engine speed from exceeding a predetermined maximum. The governor is mounted between the carburetor and manifold flanges. It consists of a main body, which contains a throttle shaft, a throttle valve and a main governor spring. The main governor spring is attached by linkage to the governor shaft and the spring force holds the throttle valve open.

When the engine starts, air flows through the carburetor throat and the governor throat. The velocity of the air creates a pressure above the throttle valve. When this force exceeds the force exerted by the spring, the throttle will move to a closed position. The adjusting screw varies the spring tension (Figure 10).

When the closing action of the valve exactly balance the spring, governing action takes place and maximum speed is fixed at this point.

When load is applied the velocity of the gas through the manifold and the pressure against the governing valve is reduced and the spring opens the valve to feed more gasoline to the engine to handle the increased load demand. This maintains an almost constant speed whether the engine is running with or without load.

B. GOVERNOR REMOVAL

1. Remove the nut, lockwasher and stud securing the governor to the carburetor.
2. Disconnect the governor from the manifold fitting and remove lock wire and seals.
3. Remove governor, seals and spacer from the carburetor.

C. INSPECTION

1. Wash governor in a clean solvent and dry with compressed air.
2. Check governor for wear, cracks or damaged surfaces.

D. INSTALLATION

1. Install new gaskets and spacer on carburetor.
2. Position governor on carburetor and connect manifold fitting. Secure with studs, lockwashers and nuts.
3. Install lock wire and seals.

E. GOVERNOR ADJUSTMENT

NOTE

The desired engine speed is obtained by increasing or decreasing the governor spring tension.

Turn adjusting screw (Figure 10) in or out, to increase or decrease pull on the spring.

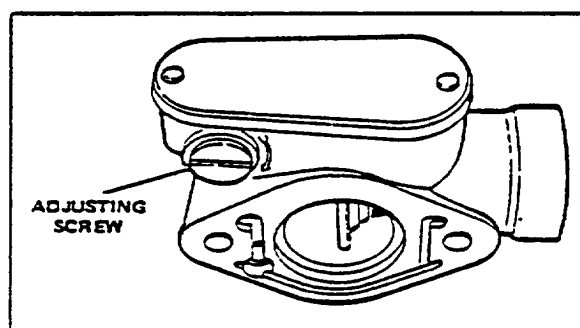


Figure 10. Velocity Governor

TOPIC 1. ELECTRICAL SYSTEM

A. DESCRIPTION

The electrical system includes the battery, alternator with integral voltage regulator, spark plugs, and starter motor, associated wiring and accessories. The electrical gauges and the horn are protected by fuses conveniently located underneath the instrument panel.

The instrument panel and engine, chassis and accessory wiring groups are all neatly bundled in a common wiring harness to protect wiring from moisture, grease and possible damage due to inadvertent contact with frame or linkage.

Typical electrical wiring diagrams are illustrated in Figures 1-1 and 1-2.

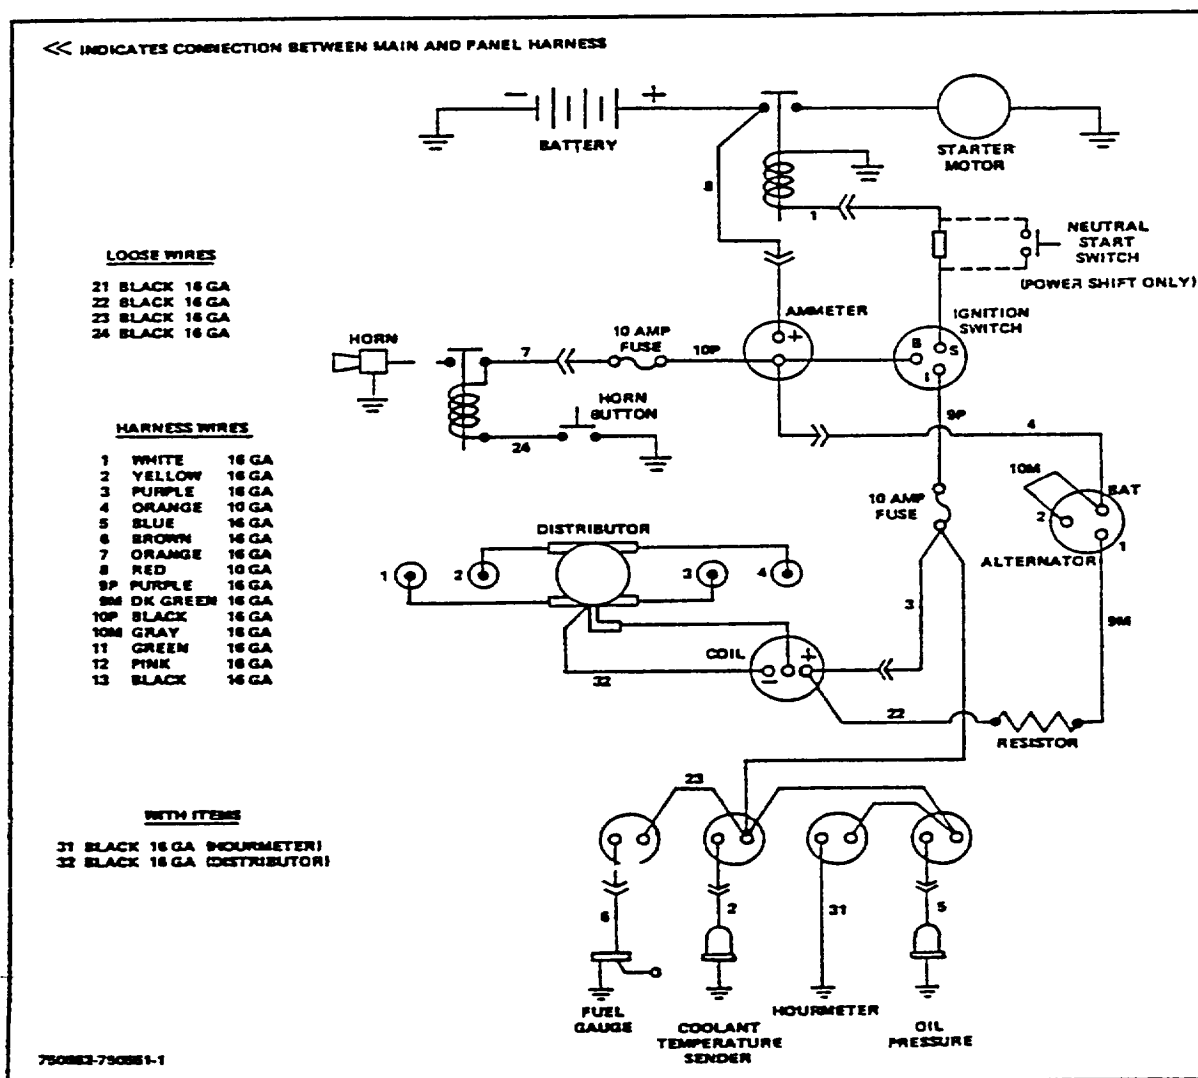


Figure 1-2. Wiring Diagram

TOPIC 2. BATTERY

A. DESCRIPTION

The storage battery mounted on a swing-out steel tray located beneath the operator's seat, is used to store current for the electrical system. The steel tray is held securely in place by a neoprene covered hold-down clamp. Electrical energy drained from the battery, through the operation of various units in the system, is restored by the regulated alternator. Refer to Figures 1-1 and 1-2, wiring diagrams, for proper battery installation.

B. SERVICE

Use of water with a high mineral content reduces battery efficiency due to the mineral build-up on the cells as the water evaporates. Be sure the filler plugs are replaced tightly and that plug vent holes are not clogged.

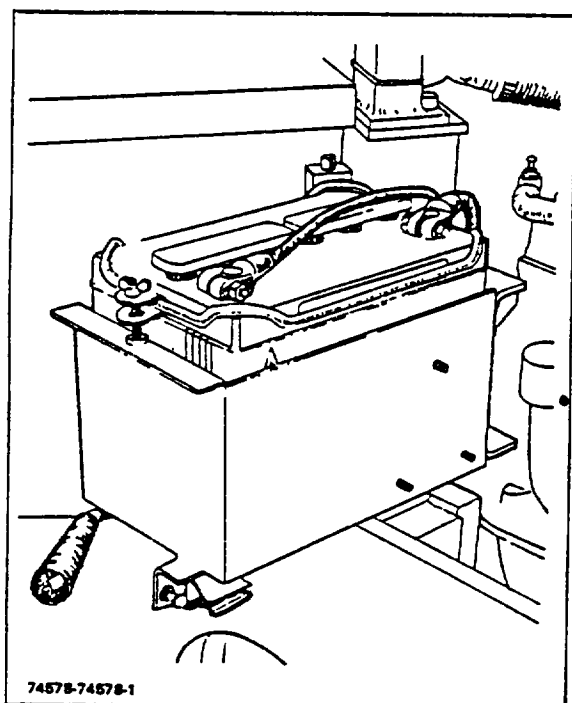


Figure 2-1. Location of Battery

When connecting a booster battery, be sure to connect the negative battery terminals together and the positive battery terminals together.

When connecting a charger to the battery, be sure to connect the charger positive lead to the battery positive lead, and the charger negative lead to the battery negative lead.

C. REMOVAL

1. Lift operator's seat.
2. Gain access to the battery by swinging out the side panel.
3. Disconnect the positive and negative battery cables from their respective posts.
4. Remove the wing nuts from the holddown clamp.
5. Tilt battery towards rear of truck and lift out of battery tray. Take care not to spill any of the electrolyte during handling.

D. INSTALLATION

1. Maintain replacement battery in an upright position, tilting only as required for fit, during installation.
2. Be certain battery replacement position is the same as when removed.
3. Make certain battery posts and cable terminals are clean and that the terminals are connected to proper posts securely.
4. Expand cable terminals for ease of installation, and do not hammer onto posts, as this practice could loosen posts and ruin battery.
5. Be sure the ground polarity of the battery and ground polarity of alternator are the same.
6. Ensure that electrolyte in each cell is at proper level.
7. Replace hold-down clamp.
8. Swing side panel back to normal operation position.

NOTE
Refer to **REPAIR MANUAL** for
detailed battery information.

TOPIC 3 ALTERNATOR AND REGULATOR

A. DESCRIPTION

Although the alternator and its built-in regulator are designed and constructed to give trouble-free service for long periods of time, following a regular inspection procedure will allow maximum life to be obtained from the units.

The inspection frequency will be determined by the type of operating conditions. High speed operation, high temperatures, and heavy duty conditions all increase wear on the alternator slip rings and bearings. The terminals should be inspected at regular intervals for corrosion or loose connections.

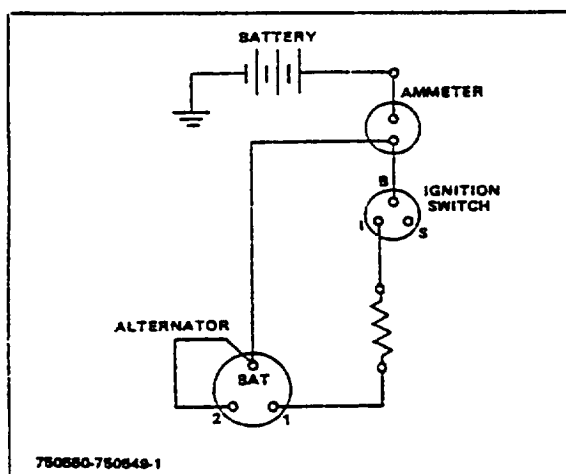


Figure 3-1. Typical Wiring Diagram

B. ADJUSTMENT

Be sure to check the mounting bolts for tightness and the belt for alignment, corrosion, tension and wear. Belt tension should be adjusted to allow approximately 3/8" inward deflection of the belt between the alternator pulley and the fan pulley with a force of about 10 pounds. (See Figure 3-2).

When tightening belt tension, always apply pressure against the stator laminations, never against the end frames.

A noisy alternator can be caused by worn or dirty bearings, loose mounting bolts, a loose drive pulley, a defective diode or a defective stator

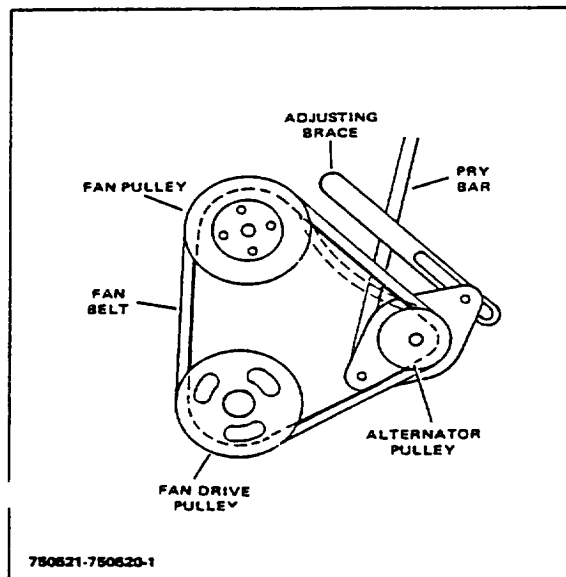


Figure 3-2. Fan Belt Tension

NOTE

For proper disassembly, inspection, repair and reassembly procedures, refer to REPAIR MANUAL.

C. REMOVAL

1. Disconnect the battery from the electrical circuit prior to alternator removal/installation.
2. Disconnect the "BAT" (battery) terminal and "#1" and "#2" post connectors at the alternator.
3. Loosen adjusting brace and mounting bolt, then push alternator towards engine until fan belt is disengaged from alternator pulley.
4. Carefully remove the alternator from the engine as the pivot mounting bolt and adjusting brace capscrew are removed.

NOTE

Refer to REPAIR MANUAL for DISASSEMBLY, INSPECTION, REPAIR AND REASSEMBLY.

D. PRECAUTIONARY PROCEDURE

The alternator is designed for use on only one polarity system; therefore, the following precautions must be observed when working on the charging circuit. Failure to heed these precautions will result in serious damage to the electrical equipment.

1. When installing alternator be absolutely sure the "BAT" terminal is connected to the ammeter. Battery positive (+) terminal must be connected to the ammeter and the negative (-) terminal to ground.
2. When connecting a booster battery, be sure to connect the negative battery terminals together and the positive battery terminals together.
3. When connecting a charger to the battery, be sure to connect the charger positive lead to the battery positive lead, the charger negative lead to the battery negative lead.
4. Be absolutely sure all connections in the circuit are secure, as the alternator must never be operated with an open circuit.
5. Never ground or short across any of the alternator terminals.

CAUTION

Refer to wiring diagrams for correct connections to alternator. Battery negative (-) terminal must be connected to ground.

E. INSTALLATION

1. Carefully position the alternator mounting flange on mounting bracket and install pivot bolt and adjusting brace capscrew.
2. Hold alternator close enough to engine to engage fan belt on alternator pulley, then, using pry-bar as shown in Figure 3-2, tighten pivot bolt and adjusting brace capscrew for 3/8" belt deflection with about 10 pounds of applied force.
3. Connect previously removed wiring as labeled.

CAUTION

Be certain that connections are properly made and secured.

F. DISASSEMBLY, REPAIR, REASSEMBLY

Refer to REPAIR MANUAL for proper procedures.

TOPIC 4. STARTER MOTOR

A. DESCRIPTION

The starter motor is designed to operate under overload conditions and to produce high torque. Because of its limited physical size it can only do this for short periods of time, since in order to produce such power a high electrical current must be used. High current creates considerable heat and if the starting operation is continued for any length of time, the accumulated heat will cause serious damage.

CAUTION

Starter must never be used for more than 30 seconds at any one time. Allow starter motor to cool for 2 minutes before using again. Never use starter to move truck.

The drive mechanism incorporates a locking feature which prevents demeshing of the drive pinion from the flywheel ring gear, until a predetermined flywheel speed is reached. The automatic meshing of the drive pinion with the flywheel ring gear is accomplished in the usual manner. If the engine fails to continue running, due to weak or irregular firing, premature demeshing of the pinion from the ring gear is prevented by the locking feature.

A magnetic solenoid switch is used in the starter motor circuit since it uses less electrical current, and allows use of a starter switch and lighter gauge wiring. The starter solenoid is mounted on the starter housing.

The starter motor is a completely enclosed unit and requires very little maintenance. However, to ensure satisfactory operation, periodic inspections should be made to make sure mounting and wiring connections are tight and in good condition.

B. INSPECTION

1. Verify that starter motor electrical connections to battery are clean and tight.

NOTE

Loose or dirty connections anywhere in the electrical circuit will cause high resistance and reduced cranking efficiency.

2. When all mounting and wiring connections are kept in good condition, and the starter motor

responds instantly and cranks engine when the ignition switch is closed, the starter motor may be considered to be in satisfactory working condition.

NOTE

The starter motor is equipped with graphite and oil impregnated bushings which should be lubricated only when motor is disassembled.

C. REMOVAL

1. Lift operator's seat and swing open side panel.
2. Disconnect battery cable leads at battery to guard against possible electric shock during removal.
3. Disconnect and label all electrical connections at starter motor.
4. Remove mounting bolts which secure starter motor to flywheel housing.
5. Carefully pull starter motor assembly out of flywheel housing until drive end clears flywheel housing, then tilt commutator end up to remove unit from truck.

NOTE

For DISASSEMBLY, INSPECTION, RE-PAIR and REASSEMBLY, refer to REPAIR MANUAL.

D. INSTALLATION

1. Insert drive end of starter motor in flywheel housing. If drive mechanism is fully extended, then mesh pinion gear with flywheel ring gear.
2. Install mounting bolts and tighten securely.
3. Connect all electrical leads to starter motor as labeled.
4. Connect battery positive lead to positive post and negative lead to negative post.
5. Close side panel and lower operator's seat.

TOPIC 5. ELECTRICAL WIRING

A. DESCRIPTION

For the most part, the electrical wiring that interconnects all the electrically operated components of the truck is grouped in a harness assembly which is properly taped and securely clamped to the truck frame. Wherever necessary, wires are protected by loom and rubber grommets to prevent chafing where direct contact is made with the frame or the engine.

Individual wires in the wiring harness are color-coded for ease of identification, since; in the covered harness, only the extreme ends of the individual wires are visible. This color coding facilitates ease of identification during installation, trouble-shooting and repair.

The wiring diagrams (Figs. 1-1 and 1-2) show connections, wire colors and wire gauges.

B. SERVICE (REMOVAL/INSTALLATION)

It is recognized that replacement of one or more individual wires may be necessary and that complete harness replacement may be impractical. Emergency repair can be made by installing a new wire between two points, and disconnecting the old or defective wire at each end.

CAUTION

Because of the potential danger of electrical shock, it is wise to disconnect the battery cables during electrical repair work.

Select the desired length, color and gauge wire for replacement. Run the new wire along the wire harness and attach it in several

places with electrical tape. Attach new terminal tips to the replacement wire and after covering terminal wire connection with tape or neoprene tubing, attach both ends of wire to respective component tie point.

NOTE

Always keep connections clean and tight to ensure low resistance conductivity.

Check for defective circuits is easily accomplished. Disconnect wires at both ends of suspected circuit. With a test lamp, touch test probes to each end of circuit and if test lamp fails to light, circuit will have to be repaired or replaced.

TOPIC 6. HORN AND HORN RELAY

A. DESCRIPTION

The horn is a magnetically sensitive, vibrating unit, and is actuated by a horn relay which, in turn, is energized by the horn button located in the center of the steering wheel. The horn and horn relay are located on the right hand cowl support.

The horn is relay operated to provide shorter, more direct electrical connections between the battery and the horn. This supplies a higher working voltage at the horn with a resultant improved performance and avoids the necessity of pulling the full current load through the horn button.

When the horn button is depressed, current flows through the relay coil, with a resulting magnetic field induced in the relay coil and core, which attracts the relay armature. The armature is pulled downward against a spring tension and closes the battery to horn circuit contact points.

B. SERVICE

Before checking horn and horn relay, make certain battery is connected and that it is producing the rated voltage output. If the battery circuit is operating properly, proceed as follows:

1. If horn produces a weak signal, connect a voltmeter from ground (truck chassis) to horn terminal, press horn button and note voltage reading on voltmeter. If voltage is between 0 and 10.7 volts, check for an open circuit, defective horn relay, poor wiring or a shorted horn coil.

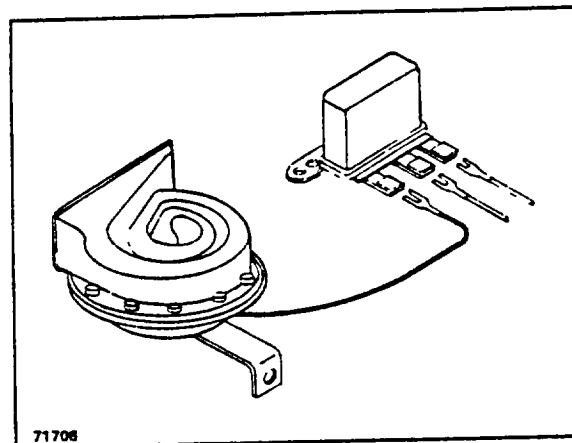


Figure 6-1. Horn and Horn Relay

2. If horn signal is weak and voltage at horn terminal is normal, check volume adjusting screw in horn cover. Screw turns in or OUT to increase or decrease volume.
3. If horn relay requires adjustment, cover can be removed and relay points correctly gapped. (Refer to HORN RELAY ADJUSTMENT in REPAIR MANUAL for proper procedure.) Air gap setting at coil is 0.020" with points closed, and 0.018" with points opened. The correct closing voltage is 8.3 to 10.2 volts.

TOPIC 7. IGNITION COIL

A. DESCRIPTION

The purpose of the high voltage ignition coil is to deliver high voltage surges to the spark plugs, via the distributor. The ignition coil accomplishes this by stepping up the primary input voltage of 12 V.D.C. to a surge of about 20,000 V.D.C. through normal transformer action.

The coil consists of a primary and a secondary winding. (See Figure 7-1) The primary winding contains about 200 turns of heavy wire, and the secondary winding contains about 20,000 turns of very fine wire. To concentrate the magnetic field, these windings surround a soft iron core composition and are enclosed by a soft iron shell. The entire assembly is built into a one piece steel coil case which is oil filled and hermetically sealed by the cap and gaskets. This construction prevents moisture from entering the coil and also permits faster dissipation of the generated heat.

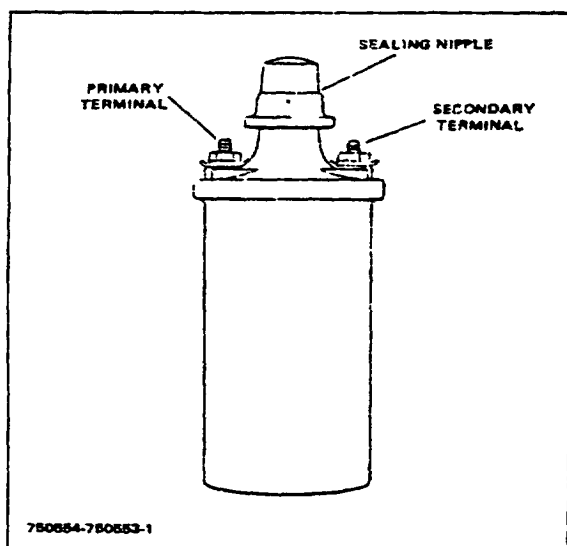


Figure 7-1. Ignition Coil

The coil has two primary terminals marked "+" and "-" on the exterior cap. (The proper polarity is noted on the ignition wiring diagram.) The coil is generally mounted as near as possible to the distributor in order to keep the interconnecting high tension lead as short as possible. (This reduces the possibility of a high voltage arc between the wire and any chassis (ground) points it might otherwise contact.)

All the ignition cabling in the high tension circuit (coil to distributor to spark plugs) is neoprene covered and is resistant to oil, grease, battery acid. This type of insulation also helps to prevent current losses.

8. SERVICE

The ignition coil requires no particular service other than an occasional operational performance check. Also check electrical contact points for cleanliness and tightness of connection. The coil can only be tested on a reliable coil testing machine; however, if the engine is quick starting and smooth running it can be assumed that the ignition coil is performing satisfactorily.

C. REMOVAL

1. Disconnect and label primary lead, resistor lead and condenser lead attached to cap of ignition coil.
2. Pull high tension (secondary) wire out of center of cap.
3. Loosen securing clamp and remove ignition coil.
4. Clean exterior of coil assembly with an acceptable cleaning solvent. Check that primary connectors are free of dirt and grime and provide a good electrical connection.
5. Remove sealing nipple and check for cracks. Replace, if damaged.
6. Inspect high tension terminal for foreign deposits and clean, if necessary.
7. Inspect entire case for cracks or oil seepage. Replace, if damaged.
8. Place ignition coil on ignition coil tester and check for proper voltage output and voltage breakdown. Take action as indicated by test results.

D. INSTALLATION

1. Insert ignition coil in retaining clamp and secure clamp.
2. Insert high tension lead in center of ignition coil cap. Press down firmly and feel definite snap as it seats properly. Ensure that sealing nipple is pressed firmly against coil cap shoulder.

3. Reconnect condenser lead to post from which removed and reconnect primary and resistor lead to primary post from which removed.

NOTE

Ensure that proper "+" or "-" polarity is strictly observed.

4. Ensure that all electrical connections have been properly made, i.e., coil to distributor to spark plugs, etc.

NOTE

The ignition coil center tower-rubber "Boot" should always be re-placed when a new coil is installed. Carbonized tracks in the rubber "Boot" form when a coil failure is due to a "burned tower", and if the rubber boot is not replaced, early failure of the new coil can be expected.

TOPIC 8. DISTRIBUTOR

A. DESCRIPTION

The distributor delivers the high voltage surge, induced in the ignition coil secondary, to the spark plugs at the proper time for sequential cylinder firing. The distributor is mounted on the cylinder head, and is driven off the oil pump shaft at one-half of the engine crankshaft speed.

The distributor consists of a cast housing into which a shaft and weight base are fitted in a bronze bushing. Centrifugal advance weights are pivoted on studs in the weight base and are free to move against the calibrated weight springs which connect them to the breaker cam assembly.

During the time the contact points remain closed, current flows from the battery, through the ignition coil primary windings, the contact points and back to the battery through a ground return. Energy in the form of magnetism is stored in the ignition coil. As the distributor breaker cam continues to rotate, the next cam lobe is brought around to where it strikes the breaker lever rubbing block and opens the contact points.

The open contact points break the electrical circuit and although current tends to continue to flow through the coil because of self-induction, it is shunted through a capacitor to prevent arcing across the open points. The stored magnetic energy in the coil collapses producing a very high voltage in both windings. The energy in the coil begins to drain through the secondary high tension lead, into the center of the distributor cap, through the rotor and then jumps to the electrode opposite which the rotor has been positioned, out through another high tension lead and finally fires the proper spark plug.

The spark is sustained through several degrees of crankshaft rotation. At the same time, the shunted energy in the condenser discharges back through the primary circuit, but not until the spark is completed at the plug, and the whole firing cycle starts again.

B. REMOVAL

1. Remove the high tension wiring from the spark plugs and the high tension wire from coil to distributor at the coil. Remove the primary lead that runs from side of distributor to coil primary connection. Tag spark plug wires.
2. Remove capscrew, lockwasher, and distributor clamp arm and lift distributor assembly from cylinder head opening.
3. Unlock distributor cap retaining screws

C. INSPECTION

The distributor cap should be removed at regular intervals to examine the contact points, rotor and the cap.

NOTE

Dust cover under distributor cap must be removed before points can be checked.

1. Check all high tension wiring for defective insulation and poor connections at distributor cap and spark plug connectors.
2. Wipe distributor cap and check cap and rotor for cracks or carbon tracks indicating leakage of high voltage current across surface.
3. Check centrifugal advance mechanism by turning breaker cam in direction of rotation and then releasing it. Advance springs should return cam to its original position without sticking.
4. Remove dust cover and inspect contact points. If points are badly burned or pitted, they must be replaced and adjusted. Replace every 500 hours.

NOTE

Refer to ENGINE MAINTENANCE MANUAL, TIMING Section for proper procedures

5. Replace contact points, dust cover and distributor cap.

3. INSTALLATION

1. Remove distributor cap and insert distributor assembly into opening in cylinder head.
2. Using rotor, turn distributor shaft until offset tongue of distributor coupling enters groove in top of oil pump drive gear.
3. Install distributor clamp arm, washer and capscrew and tighten securely. Replace distributor cap and secure.
4. Install high tension wiring to spark plugs, and connect high tension wire from distributor cap to ignition coil. Replace primary lead from distributor to coil, at coil primary connection.

NOTE

Refer to REPAIR MANUAL for DISASSEMBLY, REPAIR AND REASSEMBLY and refer to ENGINE MAINTENANCE MANUAL for proper TIMING procedure

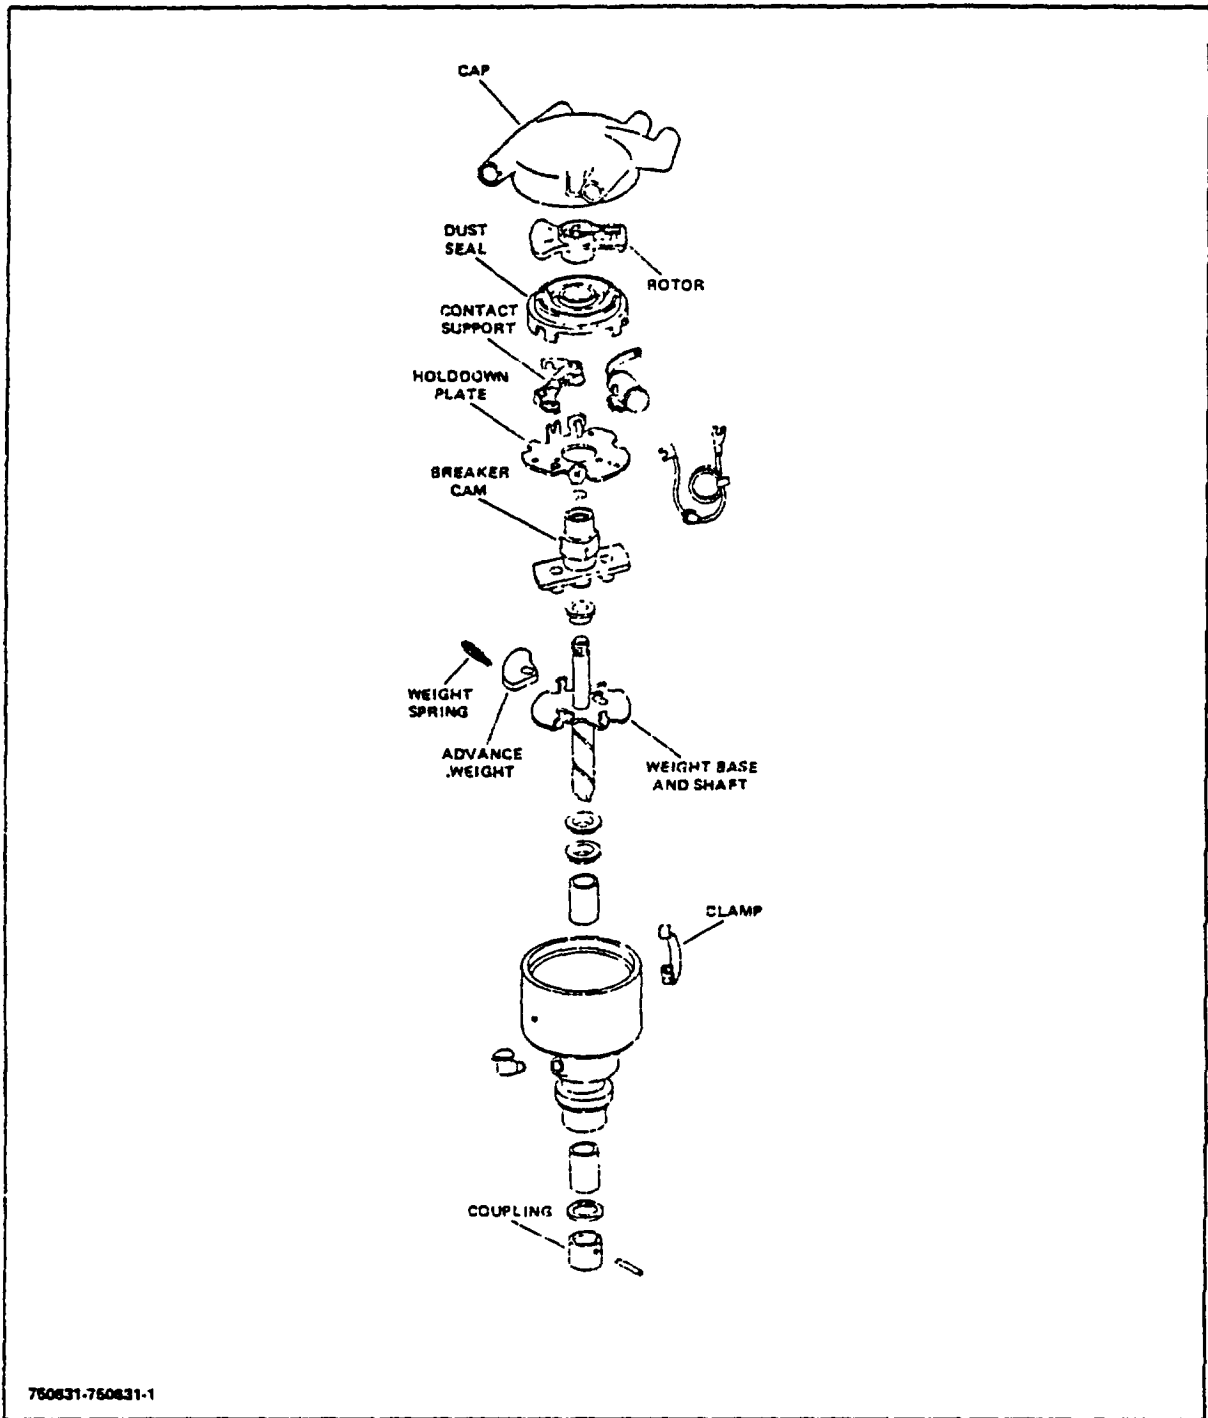


Figure 8-2. Distributor Assembly (Type II), Exploded View

MEMO

TOPIC 9. INSTRUMENT PANEL

A. DESCRIPTION

The truck instrumentation consists of the following components: an oil pressure gauge, a coolant temperature gauge, fuel gauge, ammeter and engine hourmeter. All the instruments are mounted on the instrument panel and are display oriented for ease of use. Also mounted on the instrument panel are the ignition switch, the electrical fuses and the manual choke control.

1. Ammeter:

Connected directly into the battery circuit, this gauge indicates the status of the battery and the direction of current flow. Pointer deflection to the "charge" side of dial face indicates that the battery is being charged by the alternator and pointer deflection to the "discharge" side of dial face indicates that the battery is discharging. Normally, the "charge" rate will be high for a short time after starting engine, with pointer returning to slightly above zero after a few moments of operation. However, if battery is run down, the "charge" rate

may remain high for some time. If the ammeter indicates a "discharge" condition when engine is operated above idle speed, then the alternator is not producing current, or there is a short in the circuit.

2. Oil Pressure, Coolant Temperature and Fuel Gauges:

The oil pressure, coolant temperature and fuel level gauge all operate similarly in that one side of each gauge is tied to the ignition switch, while the other side is connected to the respective sensing sender unit.

The oil pressure sending unit mounts on the engine oil gallery, the coolant temperature sending unit is located in the cylinder head coolant outlet passage, and the fuel level sending unit is installed in the fuel tank assembly. The rheostat sensor in the sending unit allows more electrical current to flow through the respective gauge deflection coil as the oil pressure increases, the engine coolant becomes warm, or as the fuel tank is being filled.

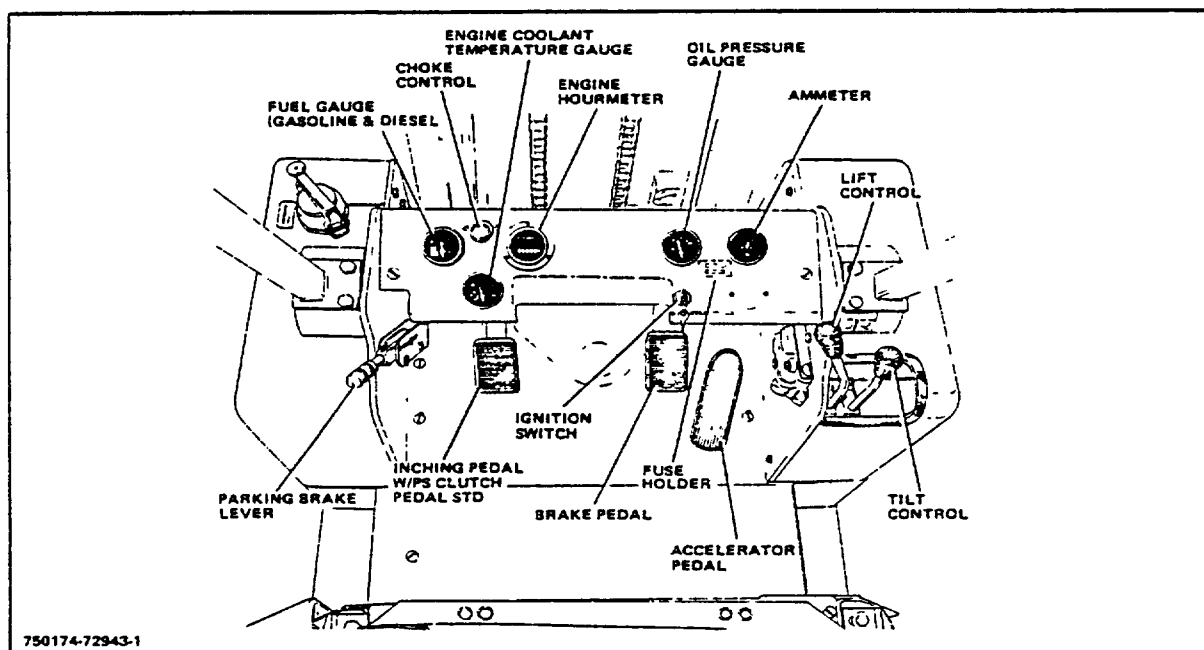


Figure 9-1. Instrument Panel (Power Shift) (Typical)

These gauges provide quick response, direct read-out dial indications of engine system conditions during engine operation. If any of the units become inoperative, check the wiring circuit, or determine whether the gauge or the sending unit is defective by replacing with one which is known to be good.

CAUTION

Do not attempt to repair gauges or sending units, but always replace defective item whenever necessary.

3. Engine Hour Meter:

The engine hour meter is a direct reading type. The unit records up to 9999.9 hours and then automatically returns to 0000.0. The four figures are read directly to record hours, while the figure on the right records 10ths. of an hour.

The engine hour meter starts recording when the ignition switch is turned on. Meter will stop recording when the ignition switch is turned off.

If the hour meter does not operate or runs erratically, check wiring for poor terminal connections, a loose joining connection, bare or frayed wires. Repair or replace as is required.

Since the hour meter is a completely sealed unit, it will have to be replaced if tests indicate the meter is defective.

4. Ignition Switch:

The ignition switch closes the electrical circuit between the ignition coil primary winding and the battery. Accordingly, it has one battery terminal lead, and one terminal lead to the ignition coil primary post and the instrument gauges.

Since the ignition switch operates the starter solenoid when turned to the extreme right, a third terminal is used to run a lead to the starter solenoid.

When the ignition switch is in the "OFF" position, current is turned off between the ignition switch, the ignition coil and the instrument gauges. With the switch turned to the "ON" position, current can flow between the battery, the ignition coil and the gauges.

Turning the switch to the "START" position, (which has a spring-loaded return causes current to flow to the starter solenoid switch to actuate the starter motor. As soon as the engine starts and the ignition key is released it will automatically return to the "ON" position. The engine will continue to run in this position until the ignition switch is turned to the "OFF" position.

The current type ignition switch has a built in interlock. Whenever the switch is in "ON" position, it must be returned to "OFF" position before it can be turned to "START" position.

The various ignition switch circuits can be checked by removing wires from their respective terminals and holding test lamp probes to each terminal. If lamp fails to light, wire is defective and should be repaired or replaced.

WARNING

This could be dangerous work. Electrically it is always wisest to disconnect the battery when any troubleshooting or maintenance is performed on the electrical system.

5. Fuses:

Fuse protection is wired into the horn and instrument gauge circuits to prevent burning up of this unit in case an electrical short circuit develops. The gauges are protected by a 10 ampere fuse and the horn and horn relay circuit is protected by a 10 ampere fuse. Both fuses are located in clip retainers on a fuse block on the right underside of the instrument panel. If either the gauges or the horn fail to operate, then the fusing should be checked first. If a fuse is blown, it should be replaced with a fuse of identical rating.

6. Instrument Panel:

The instrument panel can be removed from truck and reinstalled by following the typical procedure as outlined below.

NOTE

For safety purposes, the battery should be disconnected to prevent the possibility of electrical shock.

a. Removal

- (1) Remove hardware, choke cable, and harness clamps, then lift up: panel cannot be completely removed from truck.
- (2) The removal of any damaged or effective component is apparent. Most components are retained by locknuts and washers. Removal of any damaged or defective components can be accomplished by removing the retained hardware. When installing, always make certain unit is securely mounted and that all connections are tight.

NOTE

Due to styling and model changes, subtle differences may exist in the Instrument panel mounting hardware. Removal and installation procedures will generally follow these instructions and any variations will be obvious.

b. Installation

- (1) Ensure that all attaching components are properly mounted, secure and that associated wiring is properly connected.
- (2) Ensure that side panel anchor supports and lock pins are all properly aligned and that instrument panel is securely retained.
- (3) On ACC model trucks connect fuel gauge sender lead at connector behind left side of instrument panel.
- (4) Reconnect battery cables and make sure posts and cable terminals are secure and corrosion free. Make certain that positive battery cable is attached to positive post and that negative cable goes to the negative post.

MEMO

TOPIC 1. COOLING SYSTEM

A. DESCRIPTION

The cooling system consists of the following component parts: the radiator, water pump and thermostat, the cooling fan and fan belt, the water passages in the cylinder block and head, and the necessary hoses and lines to complete the system.

The purpose of the cooling system is to carry off the excess heat from the engine, and to hold the engine at an efficient operating temperature. This is performed in the following manner:

The centrifugal water pump, which is driven by a "V" belt from the fan drive pulley, pulls the coolant from the bottom of the radiator and circulates it through the water passages in the engine block and cylinder head. The coolant then passes from the cylinder head of the engine through the thermostat and the upper radiator hose to the upper part of the radiator. The coolant then passes from the top to the bottom of the radiator and is cooled by the air flow pushed through the radiator core by the cooling fan.

If the temperature of the coolant is less than 180°F, the thermostat remains closed and the coolant is bypassed back to the pump and is recirculated through the engine without passing through the radiator. When the coolant

temperature exceeds 180°F, then the thermostat begins to open and permits the coolant to flow into the radiator where it is cooled by the belt-driven cooling fan. At approximately 200°F, the thermostat will be completely open and the coolant will flow at the maximum rate through the radiator until the average temperature has been reduced and the thermostat closes.

B. GENERAL MAINTENANCE

Proper cooling system maintenance requires the observance of the following procedures:

1. Coolant: Keep sufficient cooling liquid in the system, but do not overfill. A basic coolant is fresh, clean, soft water to which is added a 2% solution of rust preventive soluble oil. At temperatures below 320°F, the cooling system should be protected from freezing by adding a sufficient quantity of a permanent type (glycol base) anti-freeze solution.
2. Cleaning: Drain, flush and refill the system whenever an inspection reveals an accumulation of rust or scale deposits. Always clean the cooling system seasonally, as well as before and after using anti-freeze solutions.

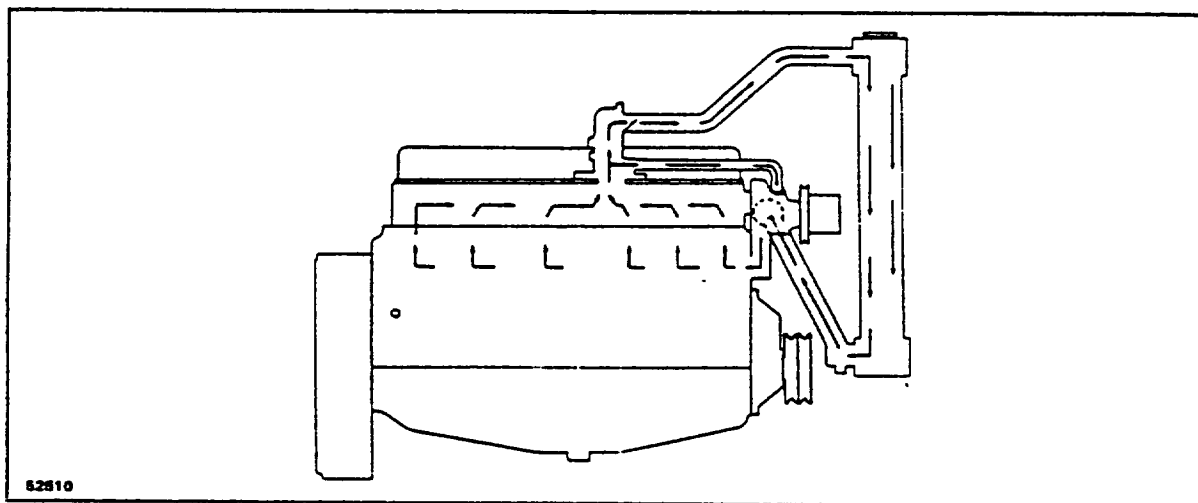


Figure 1-1. Coolant Flow Diagram (Typical)

3. Overheating: If the engine overheats from lack of coolant, do not add fresh coolant immediately. Wait until the boiling has ceased and the engine has cooled down. Then add coolant slowly, with the engine running. If a cold coolant is poured into the system when the engine is hot, the sudden temperature change may damage the radiator, cylinder block or cylinder head.
4. Protection: Keep cylinder head capscrews, water pump capscrews, hose clamps and all fitting connections tight. All leaks must be corrected as soon as they are evident. Inspect hoses carefully and replace if they are deteriorated.
5. Fan Belt: It is very important to occasionally inspect the fan belt, making certain that no oil or grease is accumulating on it and that the fan belt tension is kept in correct adjustment. Replace a badly worn, burned, oil or grease soaked belt. Be sure correct type of belt is used.
6. Thermostat: Maintaining the correct engine temperature depends mainly on the proper function of the thermostat. If the engine temperature remains consistently below normal, the thermostat should be removed and inspected. If corroded or stuck, a new thermostat must be installed.

CAUTION

Do not operate engine without thermostat installed! On Teledyne Continental engines the thermostat forms an important function in achieving proper coolant flow through the radiator. The engine should never be operated without a thermostat installed, as severe overheating and serious engine damage can result.

C. SERVICE

1. Summer: in warm weather keep the cooling system filled with clean, soft water or rain water. If permanent antifreeze is not available and hard water is used, the hard water should first be treated with a water softener. Eight ounces of a reliable commercial rust Inhibitor (soluble oil) should be added to the coolant during warm weather operation.
2. Winter: in winter weather use a nonevaporating ethylene glycol base antifreeze solution in the cooling system to protect against damage from freezing.

After the cooling system has been thoroughly cleaned and inspected, determine the quantity of anti-freeze required for the lowest anticipated temperature by referring to the protection chart furnished by the manufacturer. Add this quantity to the radiator. Then fill complete cooling system; but do not overfill. Run the engine to thoroughly mix the water and the anti-freeze, and to allow the coolant to reach operating temperature. Finally, test the coolant with an ethylene glycol hydrometer to make sure it will withstand the prevailing or anticipated temperature. See chart below for correct solution.

CAUTION

Never mix anti-freeze compounds or inhibitors with any cleaning neutralizing, or flushing compounds.

<u>Temperature Range</u>	<u>Parts Glycol</u>	<u>to</u>	<u>Parts Water</u>
32° to 10°F	1		4
+10° to -10°F	2		5
-10° to -30°F	1		1

TOPIC 2. RADIATOR

A. DESCRIPTION

The radiator (Figure 2-1) is of the fin and tube type and is vertically supported by angle bracing to the truck frame. The front of the radiator is protected from structural damage by a heavy grille mounted in the counterweight. An overflow tube is connected to the filler neck and leads to the bottom of the radiator.

B. REMOVAL

When it becomes necessary to remove the radiator for service, the following procedure is recommended:

1. Remove the side panels and raise the operator's seat.
2. Remove the radiator cap, open the drain cocks located underneath the alternator (Figure 2-2) and in radiator outlet elbow to drain the cooling system.

CAUTION

When removing the filler cap, rotate the cap counterclockwise very slowly; if hissing of vapor is encountered, tighten cap immediately and wait for system to cool sufficiently to allow removal of cap.

CAUTION

Never pour cold-water or cold anti-freeze into the radiator of an OVERHEATED ENGINE. Allow the engine to cool and avoid the danger of cracking the cylinder head or block. Keep engine running while adding water.

3. Loosen the retaining hose clamps and remove the inlet and outlet hoses from the top and bottom of the radiator.

NOTE

An oil cooler is an integral part of the bottom of the radiator to prevent overheating of the transmission. The oil cooler lines must be removed prior to removing the radiator.

4. Remove securing capscrews and the radiator grille from the back of the frame. Also remove rear section of exhaust pipe and muffler (ACP only).

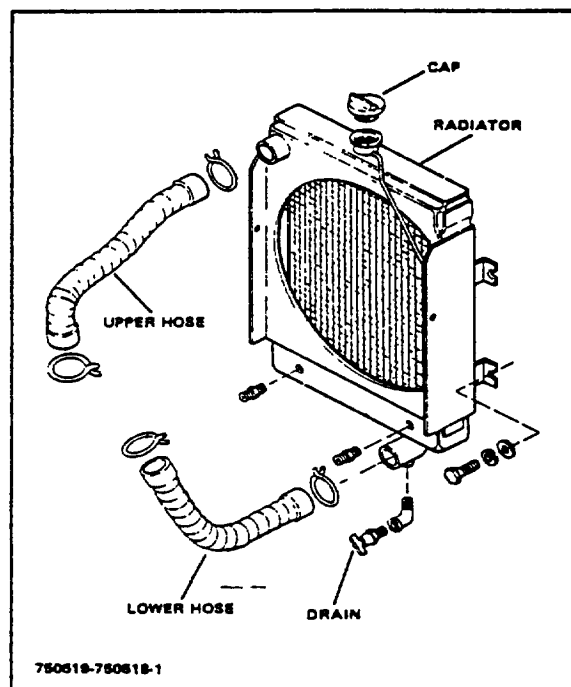


Figure 2-1. Radiator Assembly

5. Remove the capscrews which hold the radiator in position on the mounting bars located on the frame inside the counterweight.

NOTE: A quantity of spacers may have been used between the radiator and the mounting bars. These spacers must be replaced exactly as removed.

6. Slide the bottom of the radiator out of position. After the filler neck of the radiator has cleared the inside top of the counterweight, the radiator can easily be removed.

NOTE

Refer to REPAIR MANUAL for proper RADIATOR INSPECTION, TESTING and REPAIR.

C. INSTALLATION

1. Slide radiator up into mounting position within the counterweight, ensuring against any damage to filler neck or cooling fins.

2. If spacers were present between radiator mounting flange and frame, be sure to replace in their original locations. Use spacers as necessary to prevent fan from hitting radiator.
3. With radiator properly aligned, install two capscrews through radiator mount to frame support bars.
4. Install grille and secure grille and radiator with two capscrews. Secure grille with two remaining capscrews. Install muffler and tail pipe section r (ACP only).

NOTE

The oil cooler lines will have to be reinstalled.

5. Install upper and lower radiator hoses and secure retaining clamps. If hoses are cracked or cut, they must be replaced.
6. After radiator is installed, measure distance between the leading edge of the fan blades and the radiator core.

This dimension should be at least 7/8". Also ensure that the cooling fan is properly centered within the radiator shroud.

7. Close the cooling system drain cock located below the alternator and at bottom of radiator (Figures 2-1 and 2-2). Fill system to recommended capacity with coolant; replace pressure cap and check for any leaks.

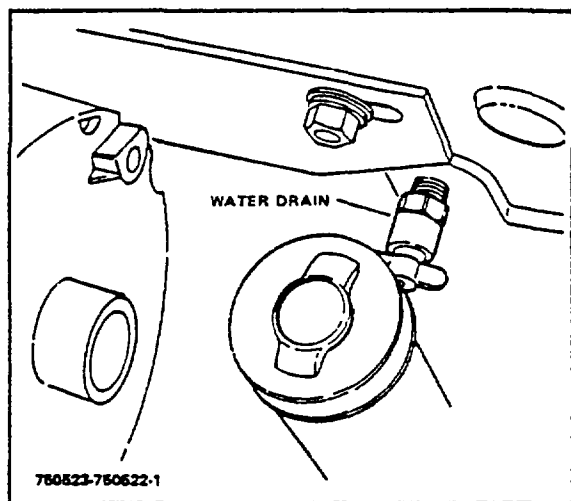


Figure 2-2. Water Drain NOTE

NOTE: Allow engine to reach normal operating temperature. The thermostat will then open and the coolant will flow into the engine. Coolant level must then be "topped-up."

8. Replace the side panels, and lower operator's seat.

D. RADIATOR PRESSURE CAP

A seven-pound pressure cap (Figure 2-3) is installed on the radiator filler neck. As long as there is pressure in the cooling system, the temperature can be considerably higher (over 220°F) than the boiling point of the solution in the radiator at atmospheric pressure without causing the solution to boil. Removal of the radiator cap while the engine is hot and the pressure is high will cause the solution to boil instantaneously and possibly with explosive force, spewing the coolant over the engine and the person removing the cap. There is also the possibility of causing serious burns.

Pressure caps should be checked at least once a year and care should always be taken in filling radiators that no damage is done to the pressure cap seat in the radiator filler neck.

CAUTION

When removing the filler cap, rotate cap counterclockwise very slowly; if hissing of vapor is encountered, tighten cap immediately and wait for system to cool sufficiently to allow removal of cap.

After pressure in the system has been relieved, turn cap counterclockwise and remove.

Turn cap clockwise when installing. Cap must form a tight seal to prevent any leakage.

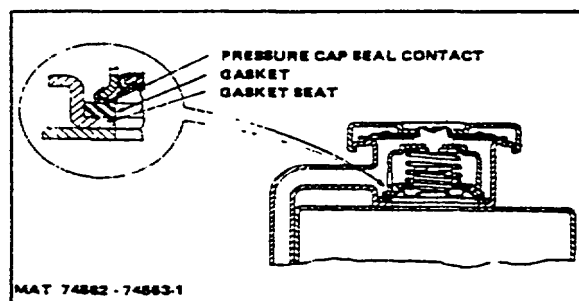


Figure 2-3. Pressure Cap, Section View

TOPIC 3. WATER PUMP

A. DESCRIPTION

Liquid coolant is circulated through the engine and the radiator by a centrifugal water pump. The pump is enclosed in a sealed, cast metal housing and is flange mounted to the front of the cylinder block. The pump impeller is pressed on one end of the pump steel shaft and the fan mounting hub is pressed on the other end. The shaft is supported at the drive end by a sealed, double row ball bearing, and is prevented from moving endwise by a shoulder in the pump housing and a snap ring on the outside.

The construction of the water pump is conducive to long life with minimum attention if clean coolant is used in the system. Water containing scale forming elements is especially harmful to the pump parts due to corrosion.

The water pump requires no attention other than bearing replacement when bearings show excessive looseness, or if a water leak develops, which shows a damaged or badly worn seal that needs replacement.

B. REMOVAL

When it becomes necessary to remove the water pump for service or replacement, the following removal procedure is recommended (Figure 3-1)

1. Open water drain (Figure 2-2).
2. Disconnect by-pass hose and pump inlet hose.
3. Remove fan by taking out four capscrews.
4. Loosen generator so that fan belt can be slacked off enough to slide over pulley.
5. Remove nuts and lockwashers holding the pump body to the front of the block and remove the pump assembly.

NOTE

Refer to REPAIR MANUAL for WATER PUMP DISASSEMBLY INSPECTION, REPAIR and REASSEMBLY.

C. INSTALLATION

1. Clean the gasket mounting surfaces on water pump flange and on cylinder block and install new gasket. Use approved sealing compound as required.

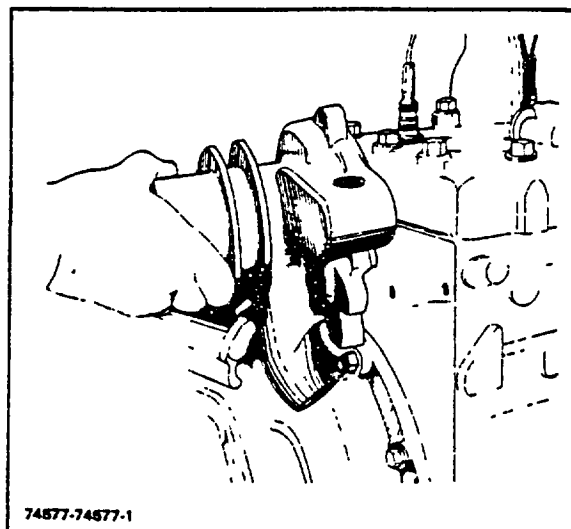


Figure 3-1. Removing Water Pump

2. Mount and secure the water pump with mounting capscrews.
3. Replace the coolant bypass hose and tighten the clamps.

CAUTION

Do not overtighten clamps as this could cause bypass hose to fracture or split.

4. Replace the coolant inlet line at the water pump, and secure with clamp.
5. Install the fan pulley, the fan blade and the mounting capscrews. Tighten capscrews securely.
6. Properly align fan belt at fan drive pulley, fan pulley and alternator pulley.
7. Force the alternator away from the engine with a long-handled screwdriver or pry bar, until the fan belt has approximately 1/2" to 3/4" deflection at a point halfway between the fan pulley and the alternator pulley, with about 10 lbs. applied force. (Refer to Fan Belt Adjustment.) After proper adjustment, secure alternator capscrews.
8. Close water drains.
9. Fill the cooling system to the recommended capacity with proper coolant and replace radiator pressure cap.

10. Operate the engine until the normal operating temperature has been reached, then check the cooling system for any evidence of leaks. Correct if necessary, and top-up coolant level.
11. Replace the engine side panels and lower the operator's seat.

TOPIC 4. THERMOSTAT

A. DESCRIPTION The thermostat is installed in the cooling system to regulate the temperature of the coolant, and is located in the water outlet elbow. Normally, when the coolant temperature is 180°F or less, the thermostat is closed, preventing the coolant from flowing through the radiator. When the coolant temperature rises above 180°F, the thermostat begins to open, allowing the coolant to flow through the radiator where the temperature is reduced through the cooling effect of the fan.

The thermostat should be fully open at 202°F; in this manner, it acts as a temperature controlled valve that regulates the coolant temperature within its characteristic limits.

The thermostat seldom needs replacement in service, however, it should be checked when the cooling system is cleaned. While removing the thermostat, check the hose; if it shows signs of deterioration when flexed, replace the hose. Also check the hose connected to the bottom of the radiator, and if it shows signs of deterioration, replace it.

CAUTION
DO NOT RUN ENGINE WITHOUT A
THERMOSTAT!

B. REMOVAL

1. Replace the thermostat if it sticks in an open or closed position. If the engine overheats or does not reach and maintain normal operating temperature, the thermostat should be removed, tested for proper operation, and replaced if found defective.
2. Remove the engine side panels and raise the operator's seat.
3. Partially drain the cooling system, then remove the clamps from the top radiator hose and the coolant by-pass hose or L.P.G. converter tube. Pull these hoses off the water outlet elbow.
4. Remove two nuts and lockwashers, and lift the outlet elbow off the cylinder head. Remove adapter ring and thermostat from elbow.
5. Before testing thermostat, clean the bellows and examine for rupture or distortion. If the valve can be pulled or pushed off its seat with only a slight effort when cold, or if valve does not seat properly, the unit is defective and must be replaced

6. Suspend and completely immerse the thermostat in a container of clean water (Figure 4-1). Heat the water and stir with an accurate thermometer to check the water temperature.
7. As the water temperature reaches 180°F, observe the thermostat. If the valve does not start to open at temperatures of 180°-200°F. or if it opens well before the 180° point is reached the thermostat should be replaced.

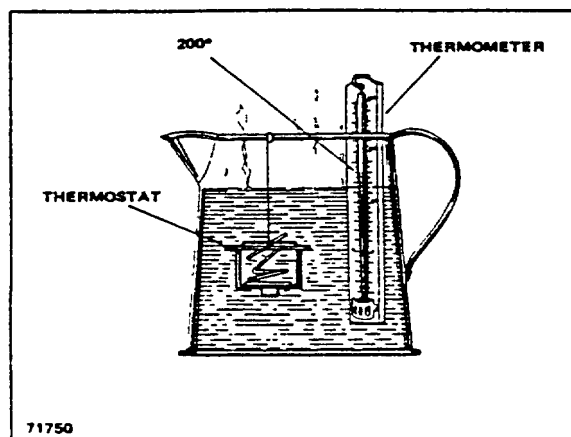


Figure 4-1. Testing Thermostat

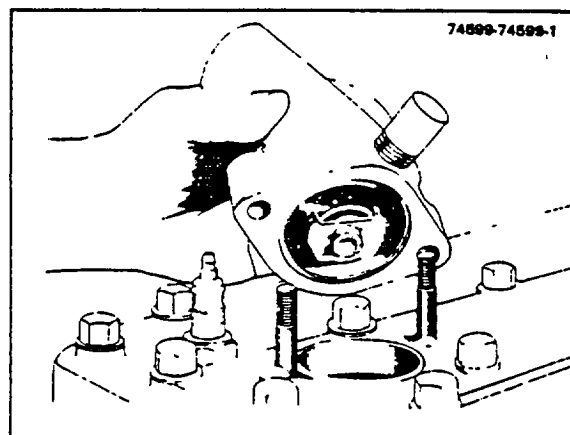


Figure 4-2. Replacing Thermostat

C. INSTALLATION

1. Clean all surfaces of the bypass line, and the thermostat.
2. Inspect upper and lower radiator hoses for any signs of deterioration. Replace if damaged.
3. Use non-hardening gasket sealer and thoroughly cover all rubber hose connections.
4. Properly position thermostat in water outlet elbow and install adapter ring.
5. Assemble new gasket to cylinder head, position water outlet elbow on studs, and secure with two nuts and lockwashers (Figure 4-2).
6. Install outlet hose and by-pass hose or L.P.G. converter hose on outlet elbow and secure clamps.

CAUTION

Thermostat must be installed exactly as it was removed so that the direction and heat of the coolant will open it.

NOTE

When filling the cooling system, care should be taken to keep the coolant clean to prevent any clogging of the cooling system or damage of the water pump. Use only permanent antifreeze in connection with the 180°F. thermostats.

TOPIC 5. FAN AND FAN BELT

A. DESCRIPTION

The cooling fan (Figure 5-1) pushes air through the engine radiator and helps to cool the engine water as it circulates from the top to the bottom of the radiator core.

B. SERVICE

1. Fan blades seldom require service; however, bent blades will affect the balance of the fan and this is detrimental to the water pump bearing. A fan which is bent will not cool as efficiently as it was originally designed to perform. In the event of damage, the fan should be removed and the blades restored to their original contour or replaced by a new fan assembly.
2. Periodic replacement of the fan belt is a good safeguard against a damaged radiator and unnecessary shutdowns.

NOTE

Attempting to force the fan belt over the pulley while it is under tension is almost certain to cause damage to the pulley or bearings.

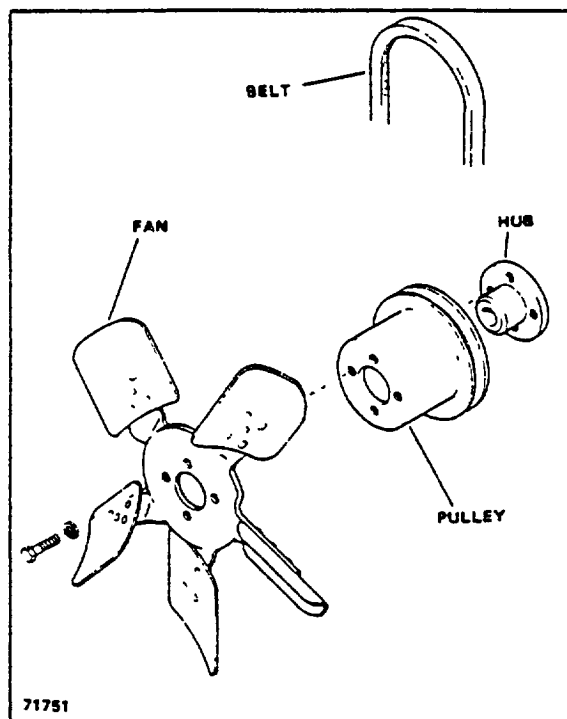


Figure 5-1. Fan Blade, Belt and Pulley (Typical)

C. REMOVAL

Fan Blade:

1. Remove the radiator.
2. Loosen the alternator adjusting bracket cap screw and the alternator mounting cap screws and relieve the fan belt tension.
3. Remove the cap screws and lock washers which mount the fan on the fan pulley.
4. Repair or replace the cooling fan as required.

Fan Belt:

1. Loosen the alternator adjusting bracket cap screw and alternator mounting cap screws and relieve the fan belt tension.
2. Slide the fan belt from alternator pulley and fan drive pulley. Remove fan belt from the fan pulley by sliding it off over fan assembly. Be careful not to damage radiator when sliding the belt past the fan blades.

D. INSTALLATION

Fan Blade:

1. Replace the fan blade and lock washers and tighten with mounting cap screws.
2. Install fan belt and ensure that it is properly installed across all pulleys, including fan pulley prior to final tightening of fan blade cap screws.
3. Force the alternator away from the engine with a long-handled screwdriver or pry bar, until the fan belt has approximately 1/2" to 3/4" deflection at a point half way between the fan pulley and the alternator pulley with about 10 lbs. applied force (Figure 5-2).
4. Tighten the alternator mounting cap screws and the alternator adjusting bracket cap screw.
5. Replace radiator. (Refer to RADIATOR INSTALLATION Section.)

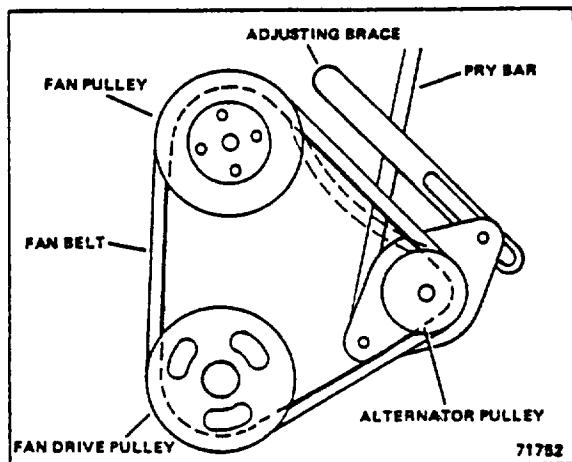


Figure 5-2. Fan Belt Adjustment

Fan Belt:

1. Place replacement fan belt over fan blade and onto fan pulley; then pull belt around fan drive pulley and over alternator pulley.
2. Force the alternator away from the engine with a long-handled screwdriver or pry bar, until the fan belt has approximately 1/2" to 3/4" deflection at a point half way between the fan pulley and the alternator pulley with about 10 lbs. applied force (Figure 5-2).
3. Tighten the alternator mounting capscrews and the alternator adjusting bracket capscrew.

TOPIC 1. TRANSMISSION

A. DESCRIPTION

The "Power-Shift" transmission consists of three major components: The torque converter, a hydraulically actuated clutch pack and a single speed, constant mesh transmission. A single lever type shift control is mounted on the steering column to control the direction of travel through a control valve mounted on the transmission housing.

Power from the engine is delivered to the torque converter which, in turn, drives a pump and clutch pack. Housed in the clutch drum are two double faced clutch plates which, when activated, move the truck forward or reverse through splined hubs, transmitting power to the gear train.

If the reverse clutch is activated, power is delivered to the transmission through a hollow shaft which connects the reverse gear and reverse clutch. If the forward clutch is actuated, power is delivered to the transmission through a solid shaft, which rotates inside the hollow reverse shaft, connecting the forward gear and forward clutch.

TORQUE CONVERTER

The torque converter is composed of three members: The impeller or driving member, the turbine or driven member, and the stator or reaction member. The impeller forms the outer shell of the converter, and the turbine and stator operate within the impeller but turn free of the impeller. The impeller is mounted on the engine flywheel and always turns at engine speed.

The torque converter is filled with oil and when the impeller is rotated by the engine, the oil in the impeller vanes also rotates; and, being subjected to centrifugal force, causes the oil to flow outward. At the beginning, the turbine is stationary, and there is no centrifugal force on the oil in it. Therefore, the oil in the impeller, due to its centrifugal force, enters the turbine near its outer circumference and forces oil from the turbine back into the impeller near its inner circumference. A circulation of oil is set up, which continues as long as there is a difference between the speeds of the impeller and the turbine.

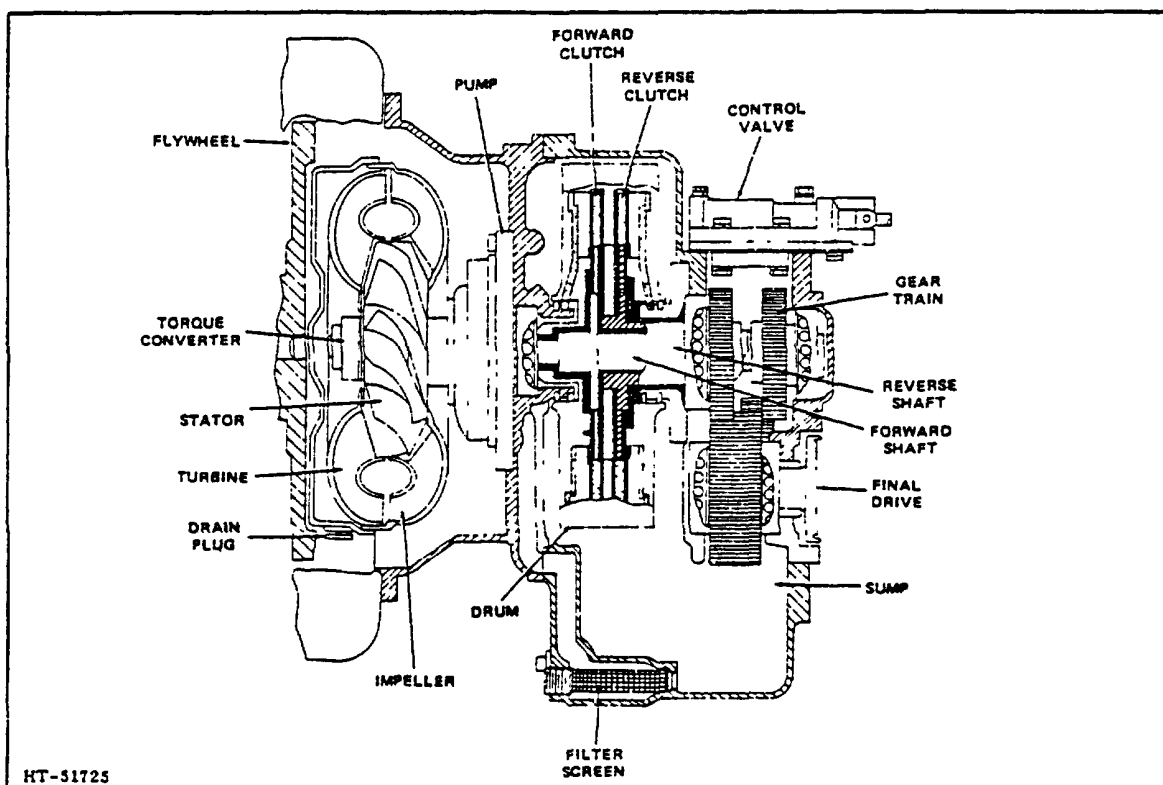


Figure 1-1. Power Shift Torque Converter Drive

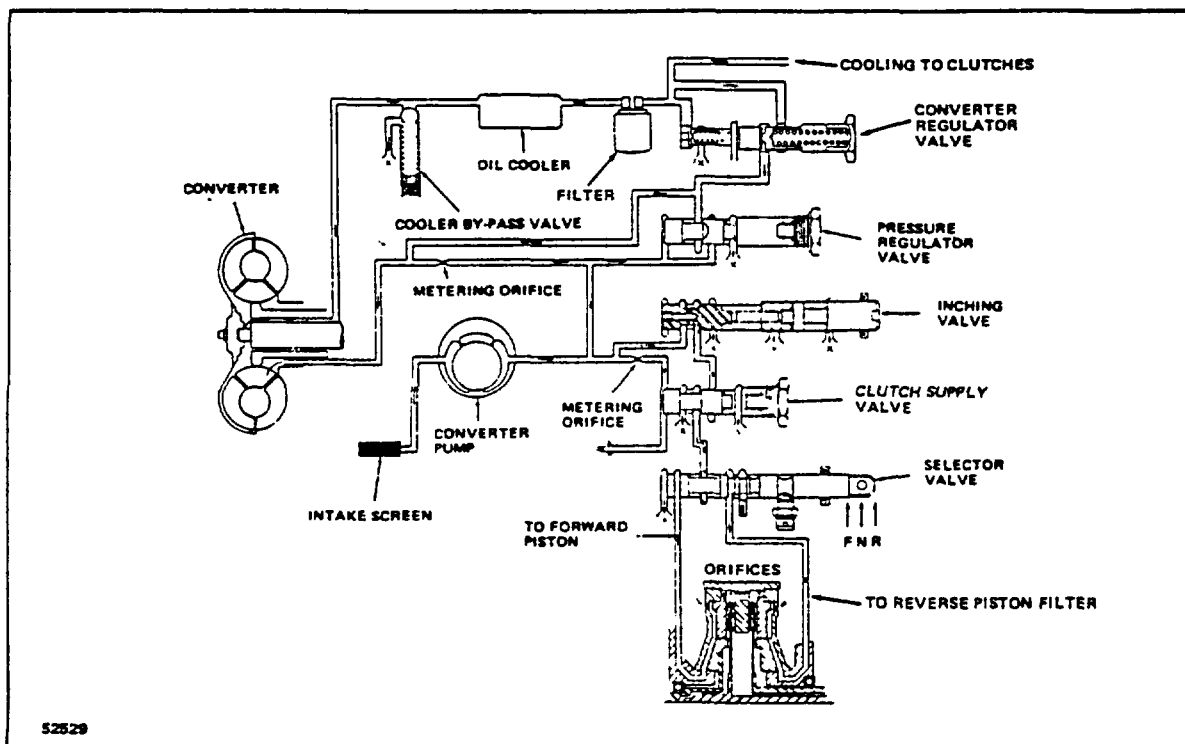


Figure 1-2. Power Shift - Hydraulic Schematic

In normal Lift Truck operation the turbine turns at a slower speed than the Impeller an since both are the same dimension, the centrifugal force on the oil in the impeller is always greater than that of the oil in the turbine. It is this difference plus the pressurized oil from the pump which causes the oil to circulate in and through the converter.

From the above it can be seen that the oil in the converter has a dual motion. It travels with the impeller and the turbine around the outer circumference of the converter and it also flows around the inner circumference or central core of the converter. As a result of these motions the oil carries a certain amount of kinetic energy. The velocity of the oil in the converter increases as the oil passes through the impeller to the turbine and decreases as it passes through the turbine back to the impeller.

Since the velocity increases in the impeller, its kinetic energy increases and this gain in kinetic energy can come only from the impeller. That is to say, when increasing the velocity of oil in its vanes, the impeller encounters a resistance, and it takes power (from the

engine) to keep the impeller running against this resistance. In the turbine the oil is slowed down and presses forward against the vanes, and when the turbine is moving under this force, power to drive the truck is produced. Thus, all the oil passing through the impeller picks up energy and gives it to the turbine. Up to this point operation is the same as a fluid coupling and there is no torque multiplication.

To transmit velocity to the oil at the inner circumference of the converter, a third member, the stator, is added to the fluid coupling, between the impeller and the turbine. It is here that the fluid coupling becomes a torque converter. With the impeller rotating and the turbine stalled, the oil is driven through the curved blades of the turbine. The curved blades redirect the oil in the opposite direction from which it was received. As the oil leaves the turbine blades, it strikes the stator blades causing a reaction which produces torque multiplication.

The stator directs the oil back to the impeller where any remaining kinetic energy combines with the kinetic energy of the impeller oil,

producing additional torque multiplication. When the output torque becomes high enough, the turbine starts to turn and the truck will move. As the turbine speeds up and its speed approaches the impeller speed, there is no longer any reaction on the stator and it starts to turn with the turbine. At this point the unit becomes a fluid coupling since there is no longer any torque multiplication.

POWER SHIFT HYDRAULIC SYSTEM:

The transmission hydraulic system consists of the torque converter, a hydraulic pump, the control valve and the clutch pack.

Control Valve

The control valve is mounted on the transmission housing and forms the top closure of the gear case. Machined porting plates are attached to the bottom of the valve to eliminate external piping. Passages in the plates align with passages drilled or cast into the transmission housing.

Clutch Pack

The clutch pack consists of a drum, a forward and a reverse clutch, and pistons and cylinders. The clutches are engaged by oil pressure applied behind the clutch pistons, which causes engagement within the drum.

Oil Pump

The gear type oil Pump provides hydraulic pressure for the converter and the clutch pack. It is directly driven from the input side of the converter. Since the converter mounted on the flywheel, the pump is in operation whenever the engine is running. This means that there is hydraulic pressure even with the engine idling.

Hydraulic oil enters the pump through the intake screen and case passages. Oil leaving the pump is directed through case and adapter passages to all open valve body passages and through an orifice to converter. The orifice acts to drop pressure of the oil entering the converter. Oil leaving the converter is fed through cooler and cooler bypass valve. The bypass valve remains closed unless the pressure exceeds the valve opening limits. Oil returning from the cooler is directed to clutch cooling and lube circuit.

Pressure Regulator Valve

Oil from the pump, after filling all open circuits, begins increasing in pressure and continues to increase until the force from the oil on the end of the pressure regulator valve overcomes the spring force and moves

the regulator valve to a position where main line oil is fed to converter circuits. Feeding mainline oil into the converter circuit lowers line pressure and permits the spring force to balance the force from the oil on the end of the regulator valve, thus regulating line pressure. Oil from the regulator valve is fed through an external tube to bypass converter feed orifice to provide greater oil flow through converter and cooler circuit.

Inching Valve

The inching valve, when the inching valve plunger is in, will regulate the clutch maximum pressure, determined by the spring or springs used in this location. Depressing the inching pedal permits the plunger to move away from the spring, decreasing spring's effect on the inching valve to lower clutch pressure. Clutch pressure can be varied from 0 to maximum pressure obtainable from the spring combination in the valve body assembly. Clutch pressure regulated by the inching valve is less than the pressure regulated by the regulator valve. Pressure recommendations for your particular model should be obtained from the equipment manufacturer.

Clutch Supply Valve

Line pressure on the end of clutch supply valve moves valve against spring force and permits oil to feed from the inching valve to manual valve. The high and low gear cam operated valve can exhaust oil from the end of the clutch supply valve faster than it can be replaced through the feed orifice. Therefore, the spring force returns the valve to the blocking position. In the blocking position, neither clutch can be fed and both clutches are exhausted at the clutch supply valve, thus causing a neutral condition to exist in the transmission.

NOTE

Latest Allis-Chalmers models have eliminated the seat dump valve in favor of a mechanical system which returns the selector valve to neutral. As a result of this the external control passage of the clutch supply valve is plugged and there is no way to bleed pressure from the pilot section of the valve. The valve will shift into operating position when the engine starts, and will stay in that position as long as the engine is running. The valve no longer provides a useful function and is retained as part of the control valve for purposes of standardization with the two speed transmission.

Selector Valve

Forward (F) position permits oil to flow to the forward clutch and exhaust reverse clutch. Neutral (N) position permits the selector valve to block oil at the valve and exhaust both clutches. Reverse (R) position permits oil to flow to reverse clutch and exhaust forward clutch.

Converter Regulator Valve

Oil fed to converter from pressure regulator valve is directed to end of converter regulator valve. Any time force from oil on the end of the valve exceeds spring force, the valve opens to feed oil to lube and clutch cooling circuit.

Clutch Orifice and Flyball

Clutch cylinders or pistons are provided with either bleed holes or bleed holes and ball dump valve. These are provided to exhaust oil from the clutch cylinder and assure clutch release. Centrifugal force could cause pressure buildup within the clutch cylinder if bleeds were not provided. The flyball bleed provides fast release and permits higher apply pressure.

B. SERVICE

At the truck lubrication period, open the trap door in the floor plate and check the oil level of the transmission sump by use of the dipstick. Engine must be running for

this check. Add automatic transmission fluid, if necessary, to bring the oil level up to the FULL mark on the dipstick. When so noted (every 1000 hours of operation), the transmission sump should be drained and refilled with new oil.

CAUTION

DO NOT OVERFILL TRANSMISSION.

No specific time intervals are given, but the shift control adjustment should be checked on occasion.

The transmission operating pressures should be checked whenever the unit is not operating efficiently or after any internal parts have been replaced. Make certain the oil cooler lines are tight. Refer to CHECK-OUT PROCEDURES (TOPIC 2).

Check and adjust the shifting mechanism if necessary. Refer to TOPIC 3.

Refer to TOPIC 4 for transmission oil cooler checks and procedures.

To service the oil filter refer to TOPIC 5. Change oil filter every 200 hours.

At periodic inspections, make sure all mounting capscrews are tight. Make certain no oil is leaking past the output shaft and that the universal joints are tight.

TOPIC 2. POWER SHIFT TRANSMISSION CHECK-OUT PROCEDURES

NOTE

The transmission oil level must be at the dipstick "FULL" level before performing the following checks. All the checks are made with the transmission oil temperature at 120 130°F. Temperatures below 120 130°F will give a reading higher than specified for the individual check.

A. PUMP, TORQUE CONVERTER AND CLUTCH PRESSURES

1. Operate transmission until the transmission oil temperature rises to 120 130°F. The required transmission oil temperature can be reached in a short period of time by operating the transmission with the torque converter stalled. A metal thermometer placed in the oil level dipstick hole can be used to measure the oil temperature.
2. Raise the front of the lift truck until both drive wheels clear the floor, then block into position.

3. Mount a pressure gauge (0 300 p.s.i.) in the appropriate pressure tap port for each check. (See Figure 2-1).
4. Attach a tachometer to record the engine speed (RPM). All checks are to be run at the specified engine speed.
5. With the parking brake released, position the transmission in forward and accelerate engine to the specified engine speed. Drive wheel brakes must not drag.

NOTE

Check pressures at both engine speeds.

6. Check pressure gauge reading. All readings must be a steady value within the pressure range indicated for each pressure check.

Pressure Specifications for Power Shift (single speed) Lift Trucks.

Engine Speed (RPM)	Pump Pressure (p.s.i.) (see Figure 2-1)	Converter Pressure (p.s.i.) (see Figure 2-1)	Clutch Pressure (p.s.i.)* (see Figure 2-1)
600 RPM	40 min. - 110 max.	20 min. - 95 max.	35 min. - 105 max.
2000 RPM	115 min. - 140 max.	75 min. - 115 max.	95 min. - 130 max.

*Check clutch pressure with transmission in forward and reverse.

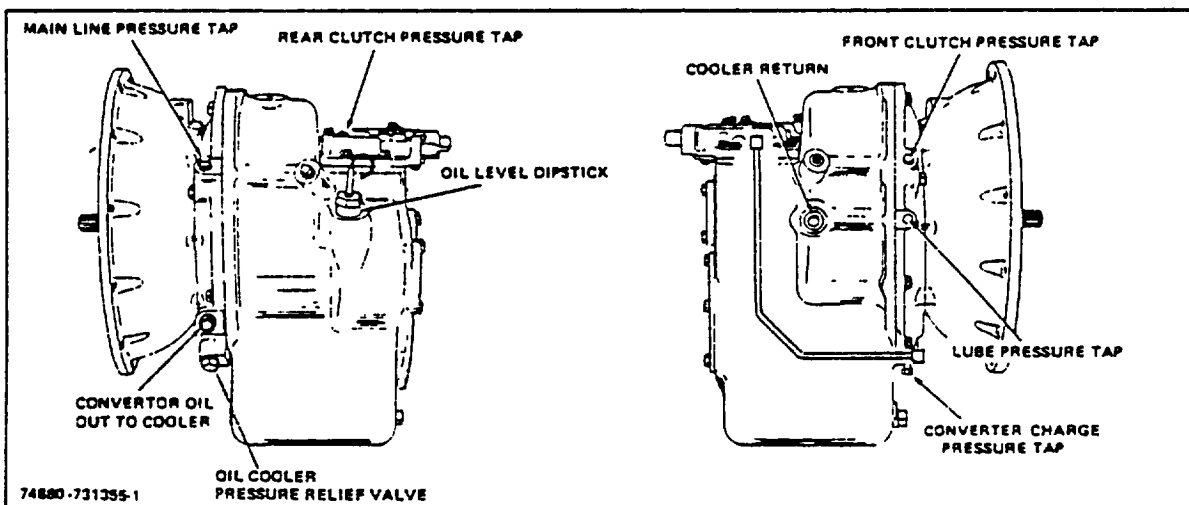


Figure 2-1. Pressure Tap Locations

B. INCHING PEDAL

The inching pedal, operated by the left foot, allows slow, creeping maneuvers with full engine speed available for lifting purposes. The more the inching pedal is depressed, the slower will be the truck movement. Full depression of the inching pedal will result in a full stop condition.

If the truck does not come to a full stop when the inching pedal is down, or if the truck does not move smoothly forward with the pedal released, the inching pedal assembly must be adjusted.

NOTE

Check inching pedal adjustment after every 500 hours of operation.

ADJUSTMENT

1. Remove floor and toe plates.
2. Check brake pedal adjustment and assure it is fully retracted against stop.
3. Adjust inching pedal return spring (Figure 2-2)
4. Adjust the inching pedal stop until the inching valve spool bottoms and the bumper spring is compressed .062" to .0125".
5. Install 0 - 300 psi pressure gauge in reverse clutch pressure port.
6. Raise the front end of the truck and block into position with the front wheels off the floor.
7. Engage parking (hand) brake.
8. Depress the brake pedal until brake shoes contact drum. This will occur when resistance is felt. Use a wedge between the brake stop and pedal to hold it at this position.
9. Start engine. With engine at low idle (500 600 rpm) place transmission control lever in R (reverse). Depress inching pedal until pressure gauge reads 6 10 psi. Adjust setscrew to make contact with brake pedal lug at this point.
10. Disengage parking brake.

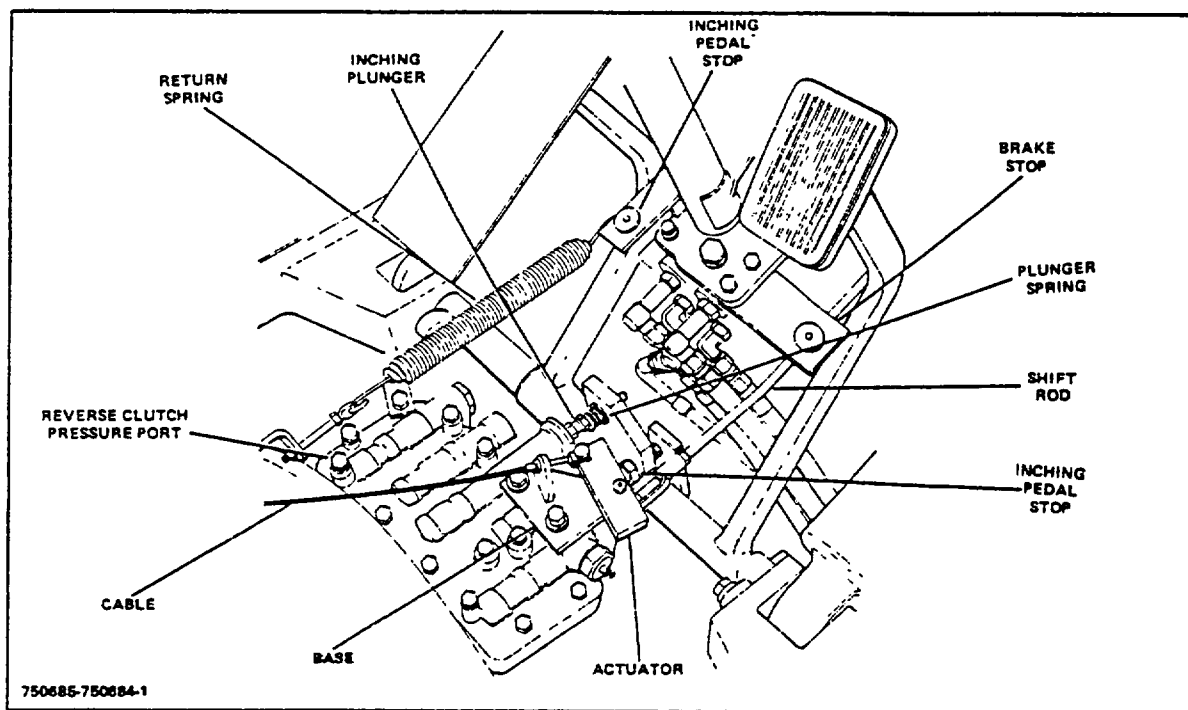


Figure 2-2. Inching Pedal Assembly

11. Pressure gauge should indicate at least 95 psi at 2000 RPM with transmission in R (reverse) position.
12. Shutoff engine.
13. Remove gauge and install plug in transmission control valve.
14. Install floor and toe plates.

TOPIC 3. SHIFTING MECHANISM

The shifting mechanism, located on the steering column shaft, is made up of many parts (Figure 3-1), the primary purpose of which, is to provide a simple means of selecting the desired direction of travel.

There are three positive, detented positions associated with the shifting lever; forward, neutral and reverse. The shifting lever is connected to the control valve assembly on the transmission through a shifting rod and associated linkage. Depending on the position of the

shifting lever, (other than neutral) the control valve will respond by pressuring the forward or reverse pistons in the clutch pack assembly.

NOTE

The engine cannot be started unless the FORWARD-REVERSE lever is in its NEUTRAL position due to a safety switch integral to the shifting mechanism.

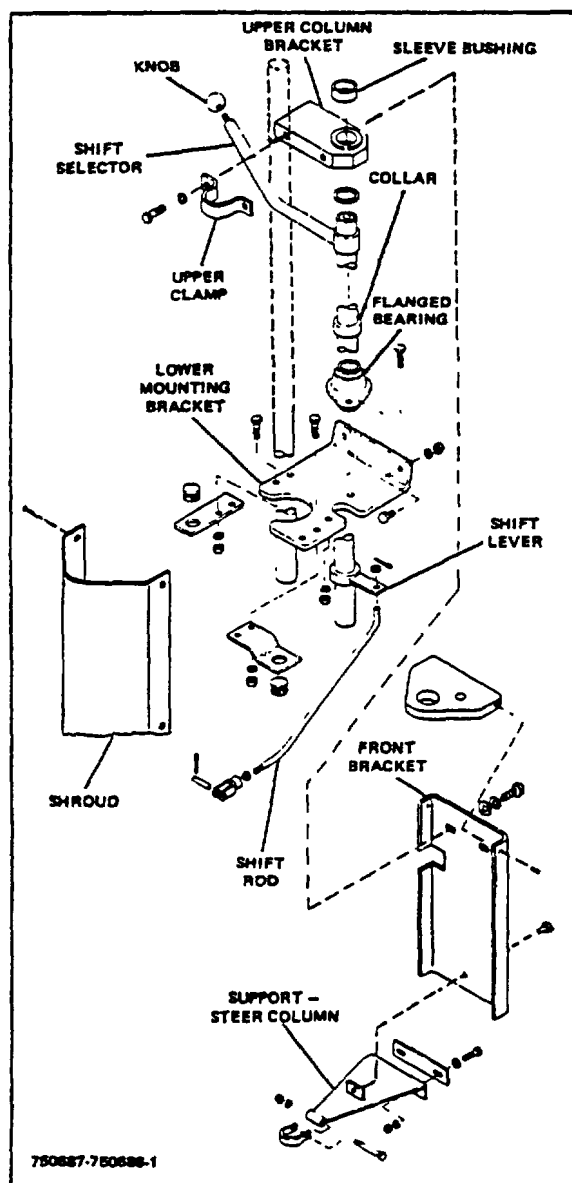


Figure 3-1. Forward-Reverse Lever Assembly

A. REMOVAL

1. Remove floor and toe plates.
2. Remove shroud.
3. Remove cotter pin and washer from shift rod and remove rod from shift lever. Unless service of the shift rod is necessary, do not disconnect shift rod from transmission. If necessary to remove rod, refer to RETURN TO NEUTRAL MECHANISM below.
4. Remove hardware from flanged bearing. Loosen setscrew on collar. Lower selector lever out of upper column bracket and remove from truck.
5. Remove capscrews holding upper clamp to bracket. Remove clamp.
6. Remove capscrews securing upper column bracket to front bracket and remove upper column bracket.
7. If it becomes necessary to remove the shift lever proceed as follows:
 - a. Mark the position of the shift lever.
 - b. Loosen clamp screw at shift lever.
 - c. Slide shift lever, flanged bearing and collar off bottom of shaft.

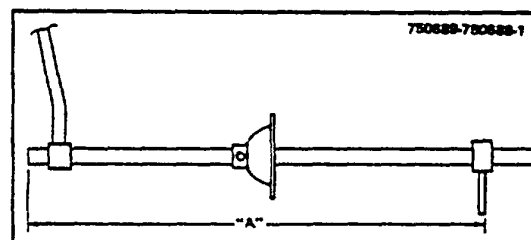


Figure 3-2. Shift Lever Dimension

8. Inspect all mechanical parts for wear or damage and repair or replace as necessary.

B. INSTALLATION

1. If shift lever was removed, slide collar on shaft. Install flanged bearing on shaft with flanged end down. Install shift lever on shaft and position it at location previously marked.
2. If the location was not marked, position lever so that it points in direction opposite to the shift selector handle and adjust to the dimension indicated in Figure 3-2.
3. For ACC 35-55 trucks the "A" dimension (Figure 3-2) is 29.06". For ACP 40-50 trucks the "A" dimension is 30.12".
4. Install upper column bracket on front bracket and secure with capscrews. Install clamp on bracket.
5. Install selector lever and shaft through lower and upper mounting brackets. Position flanged bearing on lower bracket and secure with capscrews. Slide collar down to flanged bearing and tighten setscrew.
6. Connect shift rod to shift lever and secure with washer and cotter pin.
7. Ensure that all mechanical connections have been made and that all connections are properly secured.
8. Start the lift truck engine.
9. Operate the shift control lever and check alignment of the installation. If shifting is difficult stop the engine.
10. If binding is noticed, recheck alignment of upper bracket to shift selector shaft.
11. Check shift rod adjustment (Paragraph C below).
12. When smooth shifting is assured, install shroud and floor and toe plates.

C. ADJUSTMENT - SHIFT SELECTOR

If the truck does not shift into reverse, neutral and forward smoothly and completely, the shift selector assembly should be adjusted according to the following procedure.

1. With-the engine off, remove floor and toe plates.
2. Using shift selector on shaft, shift into neutral.
3. In neutral position the shift lever should be perpendicular to a line drawn between the ends of the shift rod.
4. If it is not perpendicular, adjust the length of the shift rod (using threaded end and yoke) until the proper relationship is established.

CAUTION

Be sure threaded end of shift rod does not protrude through yoke and out the other side of yoke. If it does, selector valve movement will be restricted.

TOPIC 4. OIL COOLER

An oil cooler is installed in the Power-Shift transmission system to control the temperature of the oil. The cooler unit is located in the bottom tank of the radiator. If oil appears in the engine coolant, it indicates a leak has developed in the oil cooler. Cooler must be repaired or replaced immediately. See Figure 4-1.

NOTE

Refer to **COOLING SYSTEM** for **RADIATOR REMOVAL, REPAIR and REPLACEMENT.**

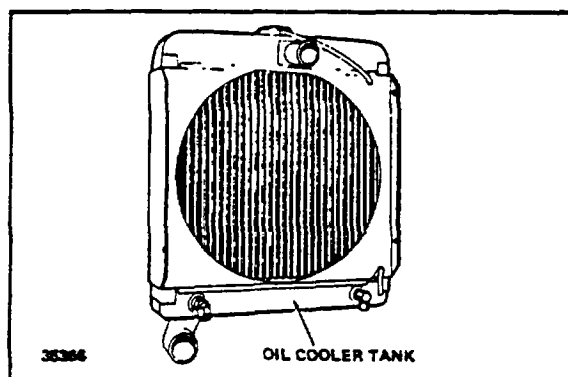


Figure 4-1. Oil Cooler Location

TOPIC 5. OIL FILTER

A. DESCRIPTION

An oil filter is installed as standard equipment in all Power-Shift transmissions. The purpose of the filter is to eliminate harmful contaminants from the oil and to increase the service life of the transmission. The filter is installed in the return line between the oil cooler and the transmission. It is the throw-away, replaceable type and it is recommended that it be changed every 200 hours. Changing the filter at the prescribed interval will help keep the transmission free of contaminants.

B. SERVICE

1. Operate the transmission until the oil temperature reaches the normal operating point. (About 10-15 minutes.)
2. Gain access to the oil filter by raising the seat deck and removing the side panel.
3. Using an oil filter removing tool, unscrew the filter (refer to Figure 5-1) and discard.
4. Clean all oil and sediment from the filter base. Be sure all traces of lint are removed if a rag is used to clean parts.
5. Apply a light coat of oil to the rubber gasket on the filter. Screw replacement filter onto filter base and hand tighten only.

CAUTION

Do not use the removing tool to replace the oil filter.

6. If oil has been drained, replace with automatic transmission fluid (Type "A", Suffix "A") to the FULL mark on the dipstick.
7. Start the engine, set the parking brake, and run for about 5 minutes. With engine running and transmission in neutral (N), check the transmission oil level with the dipstick.

CAUTION

Be sure the parking brake is set.

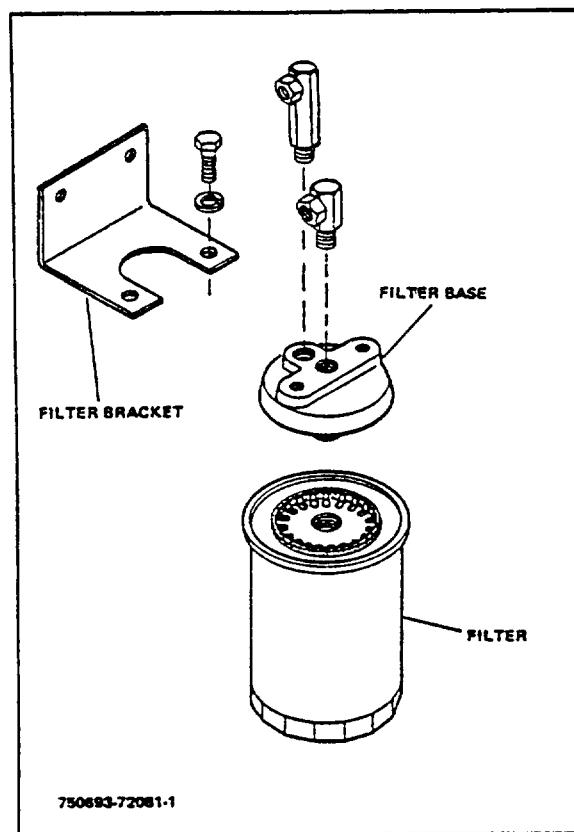


Figure 5-1. Throw-Away Filter (Typical)

8. If oil level is below the FULL mark, add automatic transmission fluid (Type "A", Suffix "A") until oil reaches FULL mark on oil dipstick, (about one quart for oil filter).

CAUTION

Do not overfill the transmission. Overfilling can cause damage to the transmission seals.

9. After filling transmission with oil, check for oil leakage around the gasket area and hoses. Correct any leaks found.
10. Install side panel and lower seat deck.

MEMO

TOPIC 1. UNIVERSAL JOINT

A. GENERAL

The purpose of the universal joint assembly is to transfer the transmission output power to the drive wheels of the truck. The universal joint assembly is the heavy duty industrial type which consists of a drive shaft or center plate, two cross assemblies, a transmission output flange, and the necessary hardware.

B. 100 HOUR INSPECTION

As a preventive maintenance check, it is recommended that the torque of the universal joint capscrews be checked periodically. The mounting capscrews (Fig 1-1 or 1-2) that secure the cross assemblies together, and the joint attaching capscrews, must be tightened to specified torque of 25-30 lb-ft DRY THREADS, or 20-24 lb-ft LUBRICATED THREADS.

C. 500 HOUR SERVICE

Lubricate universal joint bearings with specified grease by means of grease fittings in the cross assemblies.

NOTE

The universal joint, on some units, is not equipped with grease fittings; it must be disassembled before the bearings in the cross assembly can be packed properly with specified grease.

D. REMOVAL

1. Raise and securely block the lift truck to gain access to the universal joint assembly.

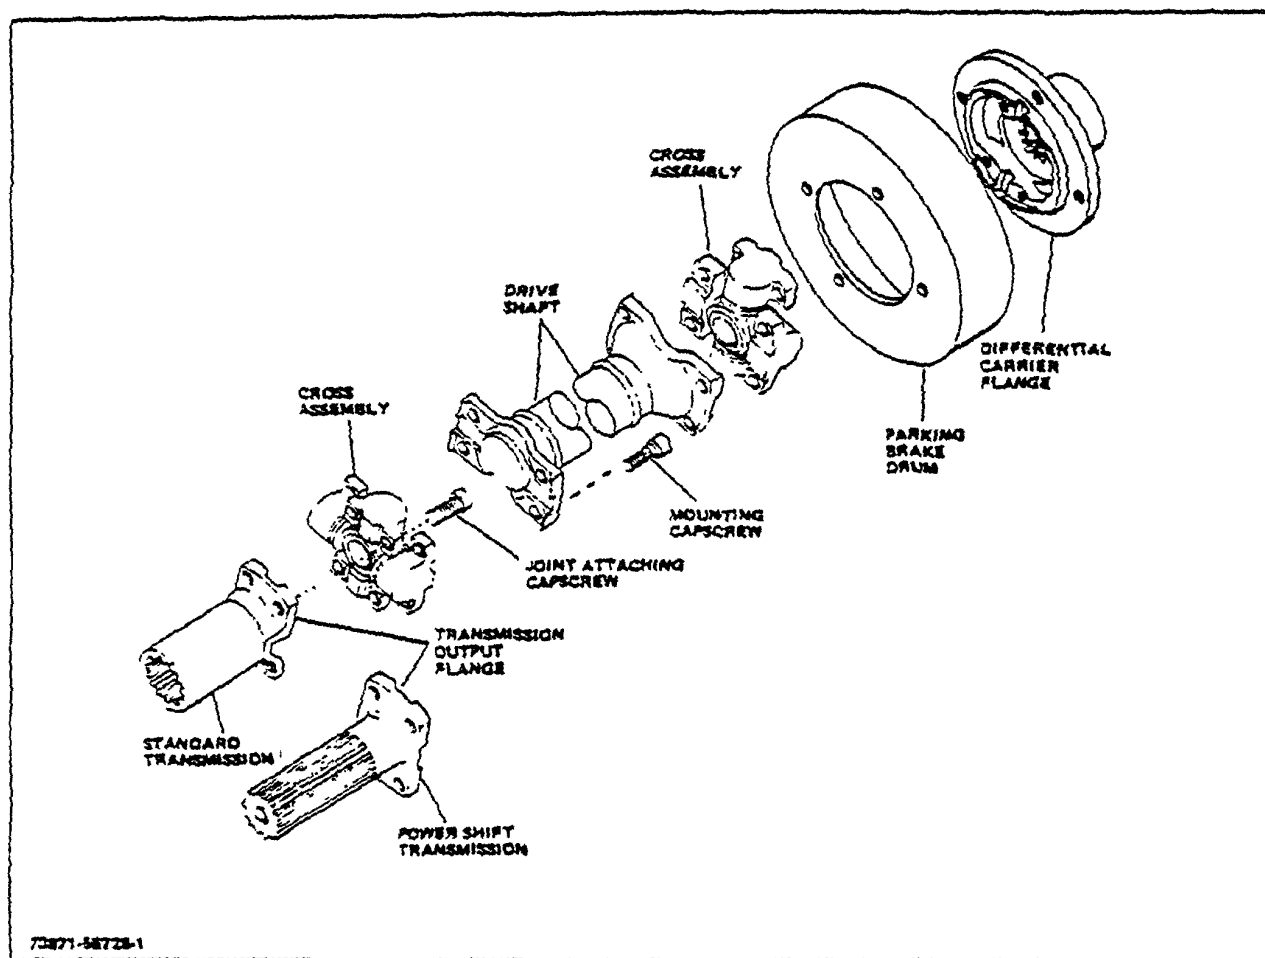


Figure 1-1. Universal Joint Assembly (Typical)

2. At the transmission end of the assembly, remove the capscrews that attach the cross assembly to the output flange.
3. At the differential end of the assembly, remove the capscrews that attach the cross assembly to the differential carrier flange.
4. Remove the entire universal joint assembly from the lift truck.

E. INSTALLATION

1. Position the differential end of the universal joint so the holes in the cross assembly align with the holes in the differential carrier flange. Insert capscrews and tighten them to specified torque

of 25-30 lb-ft DRY THREADS, or 20-24 lb-ft LUBRICATED THREADS.

2. Position transmission end of universal joint so holes in cross assembly align with holes in output flange. Insert capscrews and tighten them to specified torque of 25-30 lb-ft DRY THREADS, or 20-24 lb-ft LUBRICATED THREADS.

NOTE

Make certain ALL CAPSCREWS are tightened to SPECIFIED TORQUE.

3. Remove blocks supporting the lift truck and lower the truck to the floor.

DRIVE AXLE


TOPIC 1. DRIVE AXLE

A. DESCRIPTION

The drive unit is a double reduction, internal gear drive within wheel, and a spiral bevel in axle housing. The drive wheels are mounted on an axle housing spindle by two opposed tapered roller bearings, locked in correct adjustment by a washer, a castellated nut and cotter pin. The weight of the truck is carried by the axle housing, and through the wheels (See Figure 1); therefore, the

the axle shafts serve only to drive the wheels.

The differential is of the bevel gear and pinion type with the final drive reduction through the axle shafts (jackshaft) and bull gears (Figure 2), setting each drive wheel into motion. In order to hold the differential assembly rigidly in place in the housing, it is mounted on two studs and then held firmly in position by self-locking cap screws.

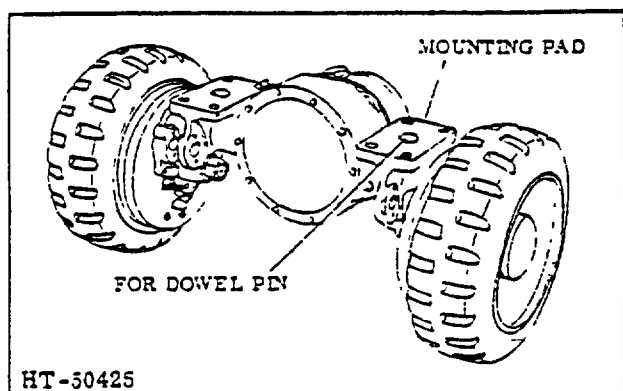

The axle shafts (jackshaft) are splined to the differential side gears at one end and mesh with the bull gear in the drive wheel at the opposite end. The axle shaft teeth are crown-shaved to ensure proper meshing with the bull gear. The axle shafts rotate at the drive wheel end in two opposed tapered roller bearings, which are locked in place on the shafts by a sleeve type nut and spider lock ring. The assembly is locked in position in the axle housing by a bearing cap and capscrews.

The bull gear is correctly located in the drive wheel by roll pins and is bolted into the wheel from the outside so that tightness can be checked periodically without the necessity of removing the wheel.

Figure 1. Drive Axle Assembly (Typical)

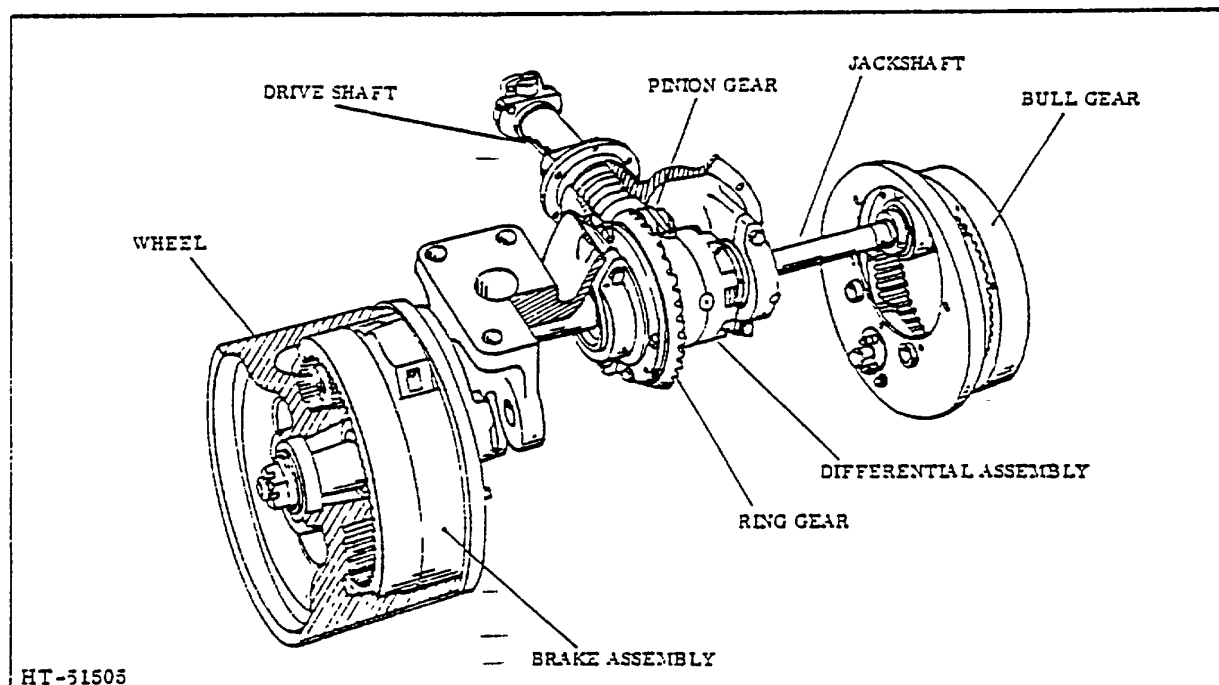


Figure 2. Drive Unit Components (Typical)

B. DRIVE UNIT SERVICE

Jackshafts and bearings, bull gears and wheel bearings should be inspected and serviced at periodic intervals. All parts should be checked for any possible damage or excessive wear. The level of the oil in the differential housing should be checked, and also changed when specified.

The housing breathers should be kept clean and open to prevent any pressure from building up in the unit.

NOTE

Refer to the **LUBRICATION AND SERVICE GUIDE** for specific instructions regarding lubrication of the drive unit.

The drive unit can be removed as an assembly, if desired. It will be necessary to remove the mast assembly in order to remove the drive unit. The following procedure is recommended for drive unit removal:

1. Removal

- a. After the mast has been removed (see LAST REMOVAL), disconnect the main hydraulic brake line at the junction block located on the differential housing. Disconnect the hydraulic lines, the leakage return line, or any other lines which are attached to the drive unit housing.
- b. Disconnect the emergency brake cable by removing the clevis pin from the parking brake actuating lever.
- c. Disconnect the universal joint (see U-JOINTS), leaving slip joint in the transmission.
- d. See Figure 3 and attach hoist chain hooks in the tilt cylinder holes in the front plate. Pull chain snug to take the weight of the truck off drive axle.
- e. Remove all mounting bolts and capscrews from mounting pads.
- f. Raise the truck away from the drive unit and remove drive unit from under the truck frame. It may be necessary to apply pressure at the mounting pads in order to free the drive unit from the truck, because of the tight fit of the dowel pins in the mounting pads.

NOTE

For service instructions on the drive unit assembly, refer to **DRIVE UNIT DISASSEMBLY**.

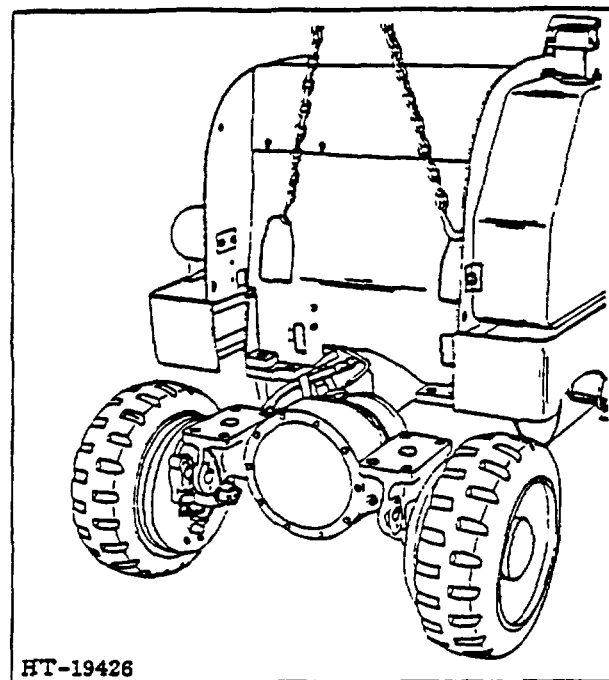


Figure 3. Drive Unit Removal

2. Installation

- a. To replace the drive unit assembly, carefully raise the truck body high enough with hoisting chain to position drive unit under front end at dowel pin location.
- b. Lower truck frame until it is securely supported at the mounting pads and insert all mounting bolts and capscrews previously removed.
- c. Connect universal joint and ensure that drive shaft coupling is properly aligned. (Refer to TRANSMISSION for proper alignment procedure.)
- d. Connect the emergency brake cable by replacing the clevis pin at actuating level.
- e. Securely tighten all mounting hardware and hose connections and bleed the hydraulic brake system. (Refer to HYDRAULIC BRAKE Section for proper procedure.)
- f. Replace the mast assembly. (Refer to MAST ASSEMBLY Section.)

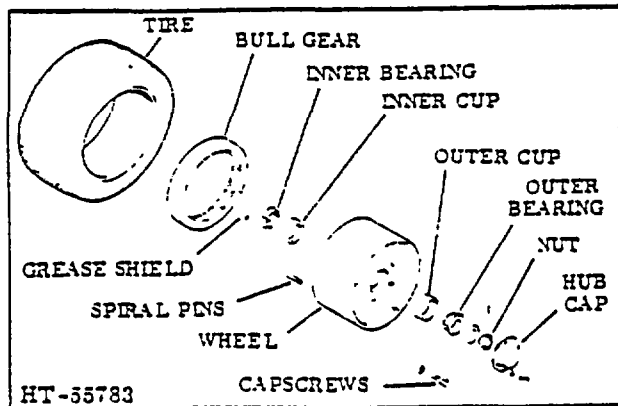


Figure 4. Drive Wheel Assembly

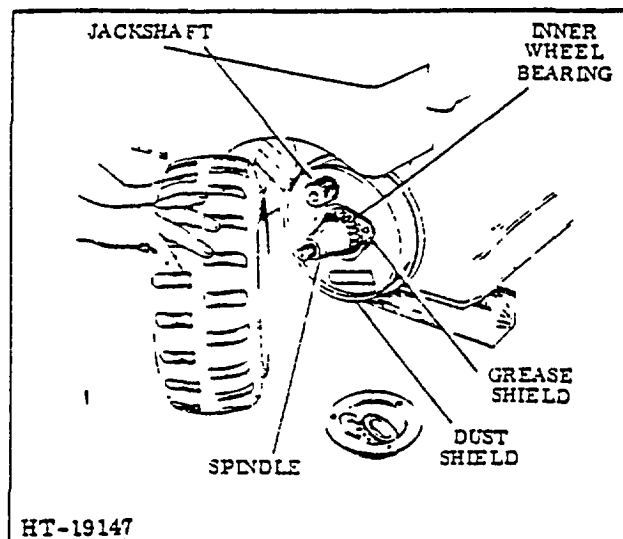


Figure 6. Removing Drive Wheel

C. DRIVE UNIT DISASSEMBLY

The following operations may be performed without removing the drive unit from the truck.

1. Drive Wheel Removal

The wheel assembly consists of the wheel, tire, brake drum, wheel bearings and the bull gear. (Figure 4.)

To remove the wheel:

- a. Raise the truck sufficiently so that the drive wheel clears the floor. This may be done by tilting the mast to its full backward position and inserting a block under the mast assembly, then tilting mast to its vertical position. (See Figure 5.)
- b. Remove capscrews, lockwashers and hub cap. Remove cotter pin, washer

and retaining nut. The outer wheel bearing can now be removed.

- c. After the outer wheel bearing has been removed, the wheel can be removed. (See Figure 6.)

CAUTION

When removing wheel, exercise care so that no damage to the drum or brake shoes occurs.

- d. After the drive wheel has been removed, the inner wheel bearing and the grease shield can be removed.

2. Inspection - Service

Using a solvent, wash all grease from the bearings and bearing surfaces. Inspect for worn or damaged parts and replace where necessary.

- a. Replacing Bearing Cups
 - (1) Recesses are provided on the inner hub of the drum; insert a brass drift at these points, tap lightly with a hammer and remove cup.
 - (2) When replacing bearing cups, set in hub with caper to the outside of the wheel. Using a brass drift, tap evenly around edge of the cup, exercising care so that the cup will not bind (bearing press can also be used for installation).

NOTE

Bearing cup should be a press fit.

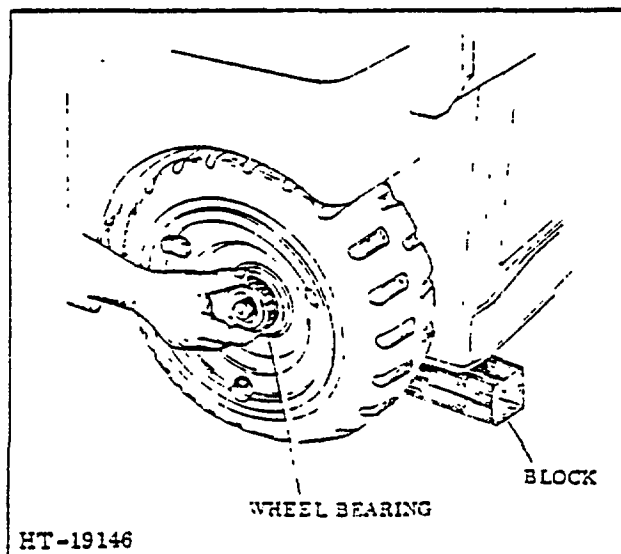


Figure 5. Removing Wheel Bearing

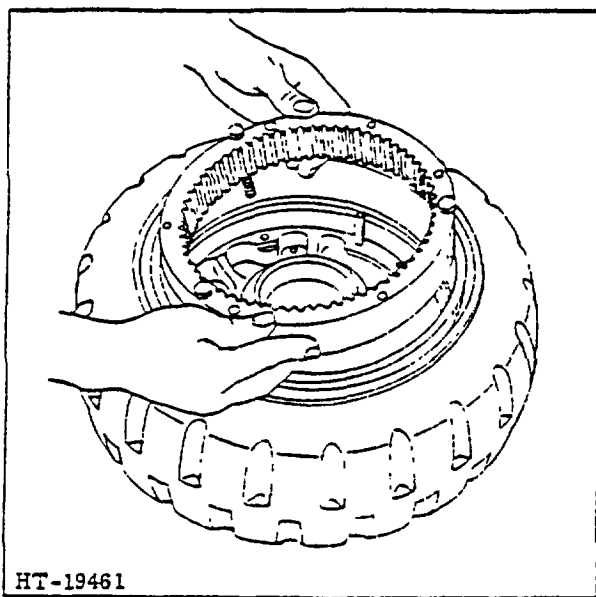


Figure 7. Bull Gear Removed

b. Replacing Bull Gears.

- (1) Remove the three capscrews which bolt the bull gear to the inner side of the wheel.
- (2) Turn the wheel over and using standard, hardened capscrews with three inches of thread, insert in the holes provided in the bull gear. (Figure 7.)
- (3) Tighten the capscrews evenly until the bull gear is removed from the wheel bore.
- (4) Inspect the bull gear for any broken or worn teeth or cracks in the ring. Replace if damaged.
- (5) To prevent any damage to the bull gear when installing the spiral pins, the edge of the outer coil should lie on the bolt circle diameter as shown in Figure 8.

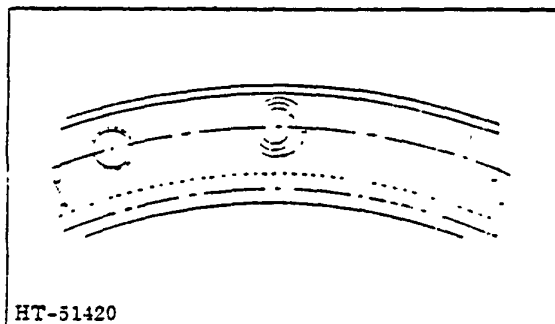


Figure 8. Spiral Pin Installation

- (6) To reinstall the bull gear, align the spiral pin holes and the pins, and tap until the gear is started into the wheel. Install capscrews originally removed and continue gear installation by tightening capscrews and tapping the bull gear at the same time.
- (7) To ensure that the bull gear is seated correctly in the wheel bore, try to insert a .003" feeler gauge between the gear and the shoulder. When the gear is properly seated, the feeler gauge will not enter at any point.

c. Replacing Solid or Cushion Tire

The wheels used on all cushion tire lift trucks are machined from a casting. Any misalignment of the wheel and tire, while pressing the wheel into the tire, can cause possible damage to the wheel. Because of this, a chamfer has been provided on the outside edge of the wheel and on either end of the metal insert located on the inside diameter of the tire. The chamfers help center the wheel and tire for pressing and reduce the possibility of any misalignment. The chamfered edge of the wheel must always be the leading edge of the wheel when the wheel is being pressed into the are.

When replacing worn or damaged tires the wheel chamfer is not noticeable. To assure that the chamfered edge enters the new tire first always position the new tire on top of the wheel and tire assembly with the outside of the wheel and tire assembly up.

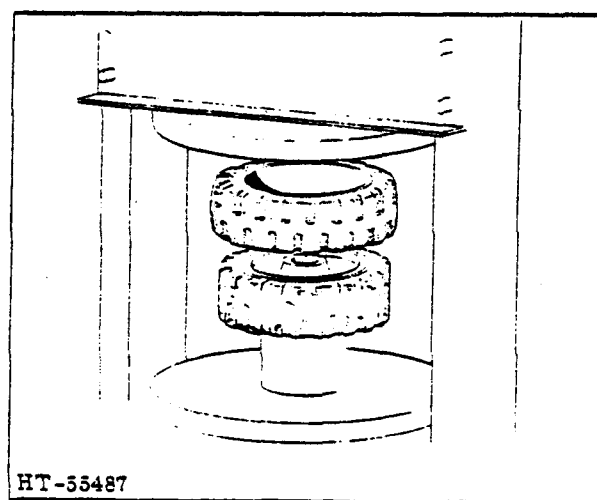


Figure 9. Tire Replacement

The following procedure is recommended to replace cushion tires.

- (1) Remove wheel and tire assembly from lift truck.
- (2) Check inside diameter of new tire. Remove any signs of scale or rust with sandpaper. Lubricate inside of new tire with bearing grease.
- (3) Place a circular ram on the press table. The length of the rim must be greater than the width of the tire to allow complete removal of the old tire. The outside diameter of the ram must be large enough to rest squarely on the bull gear's flat surface.
- (4) If the outside edge of the wheel is not flush with the edge of the metal insert in the old tire, measure how far wheel is recessed inside the tire. New tires must be replaced to the same position as the worn tire was installed on the wheel. A spacer, slightly smaller in diameter than the inside diameter of the tire and the same thickness as the depth of the recess, can be used to obtain the proper amount of recess.
- (5) Center worn tire and wheel assembly over ram, be sure ram and wheel "mate-up" squarely.
- (6) Position new tire on top of wheel and tire assembly. Align new tire and wheel and tire assembly to be concentric with each other. Make certain the outside of the wheel is positioned upwards, because the outside edge of the wheel has a slight chamfer to help guide the wheel into the new tire.

NOTE

The tire can only be installed in one direction without risking damage to the wheel.

- (7) Start pressing new tire onto wheel and worn tire off the wheel. Run press slowly for the first inches of travel because this is the critical stage of pressing wheel into tire. If tire begins to cock, stop press and realign wheel and tires, a sharp jar with a mallet will normally realign wheel and tire. If the wheel is to be recessed in the tire, stop hydraulic press after the wheel has been started into the new tire and position the spacer on the inside diameter of the new tire. The spacer must rest squarely on the outer edge of the wheel. Continue pressing new tire onto wheel until tire is correctly positioned on wheel.

- (8) Release press and remove tires. Inspect new tire and wheel assembly.
- (9) Install wheel and tire assembly on lift truck.

3. Jackshaft Service

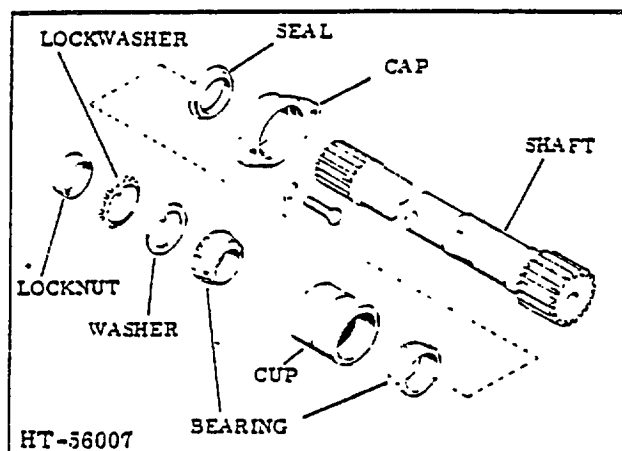


Figure 10. Jackshaft Assembly

The jackshaft is the connection between the differential assembly (first reduction) and the bull gear in the drive wheel (second reduction). The jackshaft is supported by two opposed, tapered roller bearings; its splined end fits into the differential and the opposite pinion end drives the wheel through the bull gear. To remove the jackshaft, proceed as follows:

- a. Remove wheel. (See WHEEL REMOVAL.)
- b. Remove capscrews which secure the jackshaft dust shield.

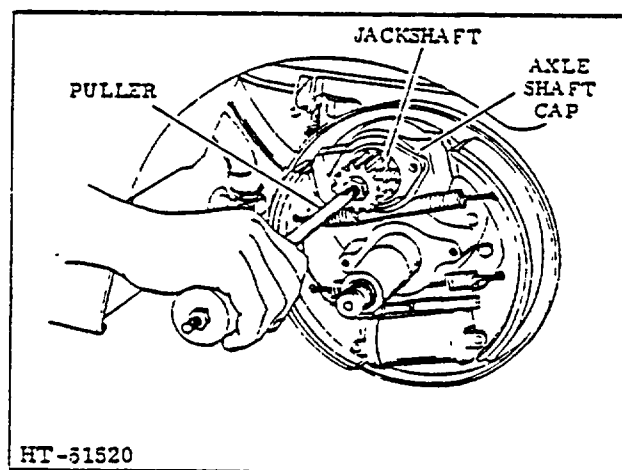


Figure 11. Pulling Jackshaft

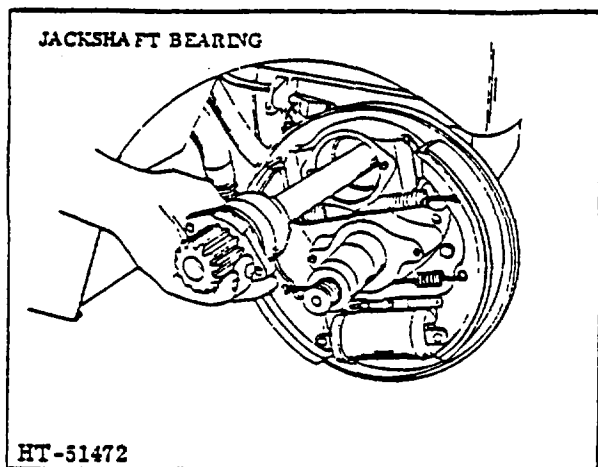


Figure 12. Jackshaft Removed

- c. Install a weight puller in the threaded end of the jackshaft and exercising care, remove the shaft.

NOTE

The bearing assembly will be removed with the jackshaft. Figure 12.

- d. Straighten the locking prongs of the lockwasher (Figure 10) and remove locknut lockwasher.
- e. Place the shaft in a suitable press and force the bearings from the shaft.

CAUTION

Exercise care to prevent damaging the axle shaft cap.

- f. After bearings and bearing cup are removed, slide the retainer cap from the shaft.

NOTE

Whenever the jackshaft is removed, it is recommended that the oil seals be replaced.

- g. Clean and inspect all parts and replace where necessary.
- h. To reassemble the jackshaft components, slide the retainer ring and new seal on shaft. Next, replace the bearings and bearing cup, washer, lockwasher and locknut.

- i. Ensure that bearings have been properly packed with grease, then tighten locknut so there is a slight drag on the bearings. Lock the nut in position by bending prongs of lockwasher over.
- j. To reinstall the jackshaft, place in position in the drive housing. Then, using a soft mallet, drive the shaft in place, and at the same time align the holes in the retaining cap with the holes in housing. Install and tighten capscrews.
- k. Replace wheel.

4. Spindle Service

To remove the drive wheel spindle, proceed as follows:

- a. Remove wheel. (See WHEEL REMOVAL).
- b. Remove dust cover.
- c. Remove the cotter pin, locknut and washer from the spindle at the back side of the drive housing.
- d. Install a spindle puller as shown in Figure 13 and remove the spindle.
- e. Carefully inspect the spindle for any evidence of uneven wear or damage. Replace if worn, chipped or bent.

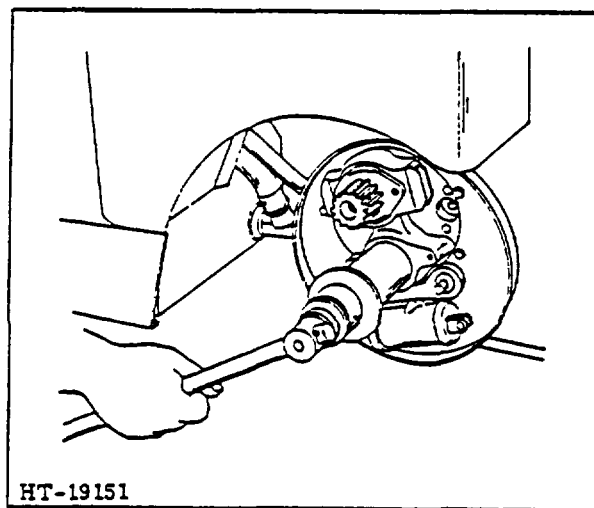


Figure 13. Removing Spindle

- f. To replace spindle, align the spindle in the drive housing and replace the washer and locknut. Tighten the nut until the spindle fully seats, then install the cotter pin.
- g. Install the dust shield and the wheel assembly.
- h. Tighten wheel bearing nuts as follows: Using a torque wrench, tighten nuts in accordance with chart below; just before reaching maximum torque, turn each

wheel six times in both directions, then back nut off 30° minimum to 60° maximum so cotter pin can be installed.

TORQUE VALUES:

ACC40 PS	120 lb ft
ACP40 PS	120 lb ft

TOPIC 2. HYDRAULIC BRAKES

The brake system consists of a mechanically activated hydraulic master cylinder with heavy duty brake lines transmitting hydraulic pressure to the brake wheel cylinders located behind a dust shield in each of the drive wheels. For a complete description of the hydraulic braking system and service procedures, refer to HYDRAULIC BRAKE Section.

TOPIC 3. DIFFERENTIAL

A. DESCRIPTION

The differential case and carrier consists of two parts, the carrier assembly and the differential assembly. (See Figure 14.) The carrier assembly is mounted at the center of the drive unit housing (See Figure 2) and encloses the pinion gear from the drive shaft. The bevel ring gear is bolted to the differential case and the case in turn houses the spider gears.

It is the purpose of the differential and carrier assembly to accept and translate the driving torque from the drive shaft coupling to the drive wheels of the lift truck, thus moving the truck in a forward or reverse direction. The following procedure is recommended to remove the differential assembly from the carrier.

B. REMOVAL

1. Remove the drive wheels; refer to DRIVE WHEEL REMOVAL.
2. Remove the jackshafts; refer to JACKSHAFT REMOVAL.
3. Remove U-Joint and drive shaft coupling; refer to U-JOINTS. REMOVAL.

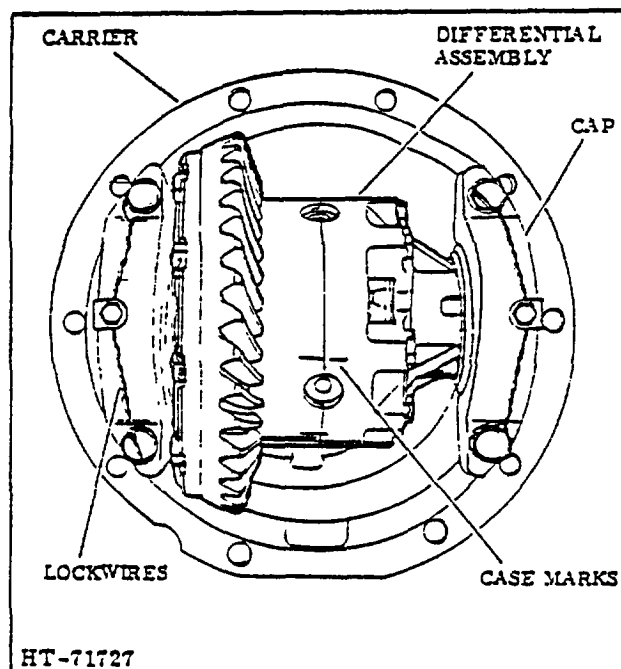


Figure 14. Differential and Carrier Assembly

4. Remove drain plug at bottom of differential housing assembly and drain oil.
5. Remove the parking brake cable at the brake actuating lever and disconnect the hydraulic lines or leakage return line if they might hinder differential and carrier assembly removal.
6. Remove the securing capscrews which mount the carrier and differential assembly to the axle housing.

WARNING

Be sure to properly support the carrier assembly as the capscrews are removed.

7. Carefully withdraw the carrier and differential assembly from the axle housing and place on a suitable workbench.

NOTE

It may be necessary to lightly tap the carrier housing in order to free it from seal.

8. Remove and discard gasket between carrier housing and axle housing.

9. Mark the bearing caps and differential housing (Figure 14) to aid in proper alignment during reassembly; then remove the lockwire securing capscrews, cotter pins and the retaining bearing caps.
10. Refer to Figure 15 and remove the differential case assembly along with the adjusting nuts, bearings and bearing cups.

NOTE

Refer to DIFFERENTIAL and CARRIER DISASSEMBLY Section, REPAIR MANUAL for proper INSPECTION and REPAIR-REPLACEMENT Procedures.

C. INSTALLATION

1. Refer to Figure 15 and install the differential case assembly along with adjusting nuts, bearings and bearing cups in the same relative positions as these components were prior to removal.
2. After ensuring that the ring gear has meshed with the pinion gear, replace the bearing caps, but do not tighten.

CAUTION

Make sure the bearing caps are reinstalled as marked at time of disassembly.

3. Coat the ring gear with Prussian Blue or white lead to obtain the tooth pattern.

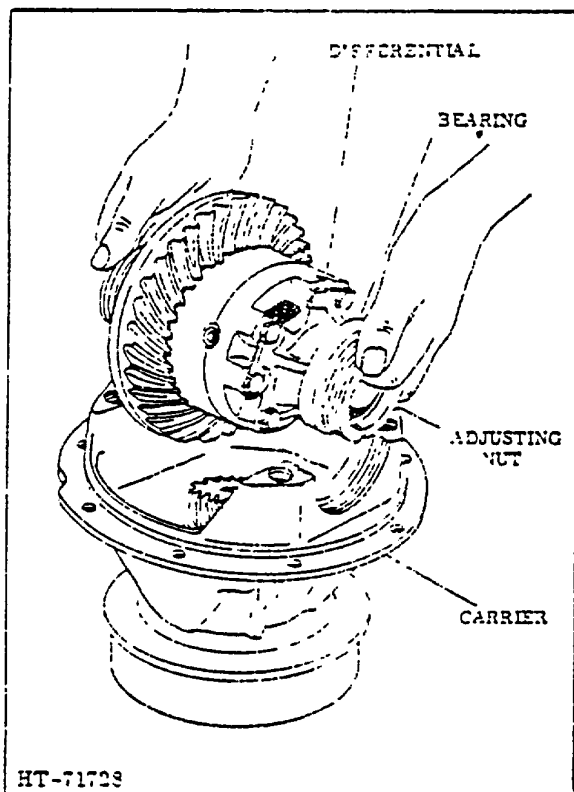


Figure 15. Removing Differential from Carrier

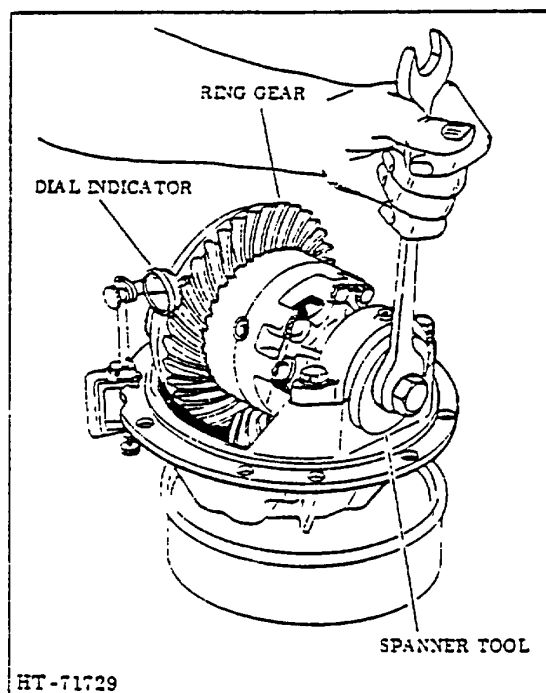


Figure 16. Adjusting Backlash

4. Adjust the ring gear laterally for a backlash adjustment of .005" to .010" (backlash etched on gear) by means of the differential side bearing adjusting nuts. To increase the backlash, loosen the adjusting nut nearest to the ring gear, and tighten the opposite nut. To decrease the backlash, reverse above operation by loosening far sided nut and tightening adjusting nut nearest to ring.

The differential side bearings must not be set any tighter than that which will produce a maximum pull of 3 to 5 lbs. on a string wrapped around the compensating case.

5. With the drive pinion properly installed and adjusted, rotate the pinion and hold back on the ring gear to create the effect of a load. After several rotations of the drive pinion, inspect the teeth of the pinion where the paint has been removed by gear contact. Compare the tooth bearing (area where paint was removed) with Figure 17. The tooth bearing should start at a point about 1/32" to 1/16" from the top of the tooth and continue downward to a point about 1/32" to 1/16" from the bottom of the tooth.

NOTE

Do not be concerned with the amount of paint removed from the front toward the rear of the tooth. The amount of paint removed is determined by the amount of load applied while rotating the drive pinion arc ring gear. The tooth bearing should always be more toward the toe end, or a toe bearing.

Explanation of Figure 17:

- a. Correct adjustment.
- b. Heavy contact on toe of tooth. To correct this misalignment, move the ring gear way from the pinion within backlash limits. Move pinion towards ring gear to again obtain the correct backlash.
- c. Bearing too low; heavy contact on flank of tooth. To correct this misalignment, move the pinion gear away from the ring gear until contact comes to the full working

depth of gear tooth without breaking contact at flank. Move the ring gear towards the pinion to obtain the proper backlash.

- d. Heavy contact at heel of tooth. To correct misalignment, move the ring gear towards the pinion. Move pinion away from pinion to obtain correct backlash.
 - e. Shows heavy contact on tooth face. Move pinion towards gear until contact covers flank of tooth without breaking contact at face. Move gear away from pinion to secure correct backlash.
6. After proper backlash and tooth pattern are obtained, fully tighten capscrews holding bearing caps in place and wire in position.

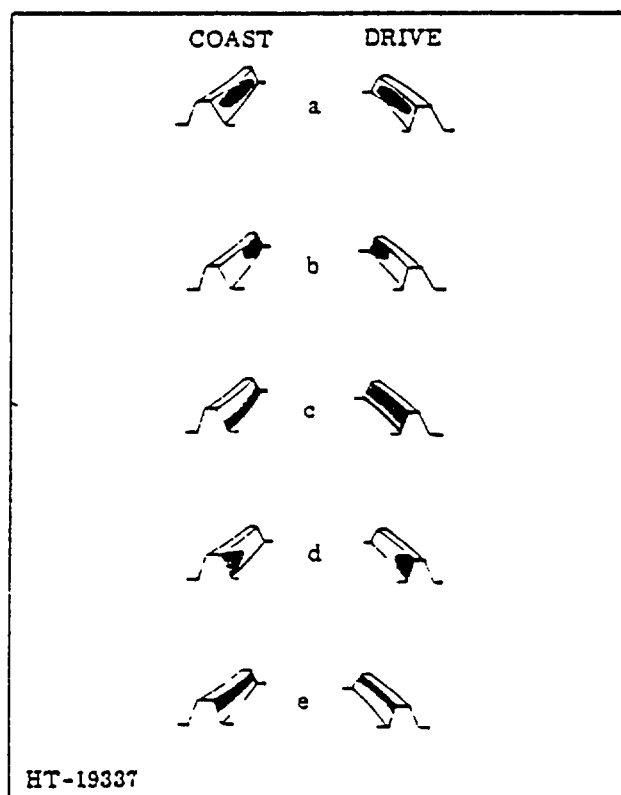


Figure 17. Differential Tooth Pattern

7. Install adjusting nut lock and align with hole in adjusting nut. Secure to cap with capscrew and lockwasher.
8. Position new gasket on mounting flange of differential and coat with a suitable leak-proof adhesive.
9. Install differential assembly in drive unit and install capscrews.

NOTE

Use copper washers on capscrews located beneath oil level of differential.

10. Connect the parking brake cable at brake drum lever and connect the hydraulic lines and leakage return line if disconnected during disassembly.
11. Replace the drain plug in bottom of differential housing assembly and fill differential with proper S.A.E. oil to recommended capacity.
12. Replace U-Joint and drive shaft coupling; refer to U-JOINTS, INSTALLATION.
13. Install jackshafts; refer to JACKSHAFT INSTALLATION.
14. Install drive wheels; refer to DRIVE WHEEL INSTALLATION.

TOPIC 4. DRIVE WHEEL PNEUMATIC TIRES (PRT Only)

A. GENERAL

The drive wheel pneumatic tire assembly consists of a rim, tire, tube, flap, disc, and a retaining ring. For good performance and long tire life, the correct tire pressure must be maintained. Air pressure should be checked every day with an accurate tire gauge.

Recommended tire pressure for Models ACP 100-120-140 with 8.25 x 15 12 ply tires is 100 psi.

Recommended tire pressure for Models ACP 100-120-140 trucks with specified heavy duty rims and 7.50 x 15 14 ply tires is 130 psi.

Recommended tire pressure for Models ACP 60-70-80 trucks with specified standard rims is 100 psi.

B. REMOVAL

1. Attach a suitable hoist of adequate capacity to the front of the unit and raise it sufficiently so the drive wheels clear the floor. Carefully place sturdy service jacks under both sides of the drive axle housing. Lower the unit just enough to take stress off the hoist.
2. Remove nuts, washers, and clamps (Fig 6-1) that secure tire rim to drive wheel hub; remove the tire and rim assembly. Remove the spacer and second tire and rim assembly.

C. INSTALLATION

1. Position tire and rim assembly on drive wheel hub. Install spacer and position second tire and rim assembly on drive wheel hub. Install rim clamps and washers; start nuts on wheel hub studs. Tighten opposite nuts alternately (180° from each other) until rim is properly seated on wheel hub. Then tighten nuts to a torque of 100 lb-ft.
2. Raise front of unit slightly with hoist and remove service jacks from under drive axle housing. Then lower the unit so tires rest on the floor. Remove hoist from rear of unit.

D. SERVICE - TIRE AND TUBE REPAIR

If a tire is excessively worn or badly damaged, it must be replaced.

CAUTION

Make certain the tube is completely deflated before the retaining ring is removed from the rim.

1. Completely deflate the tube.
2. Use proper tire irons and remove the retaining ring from the rim.

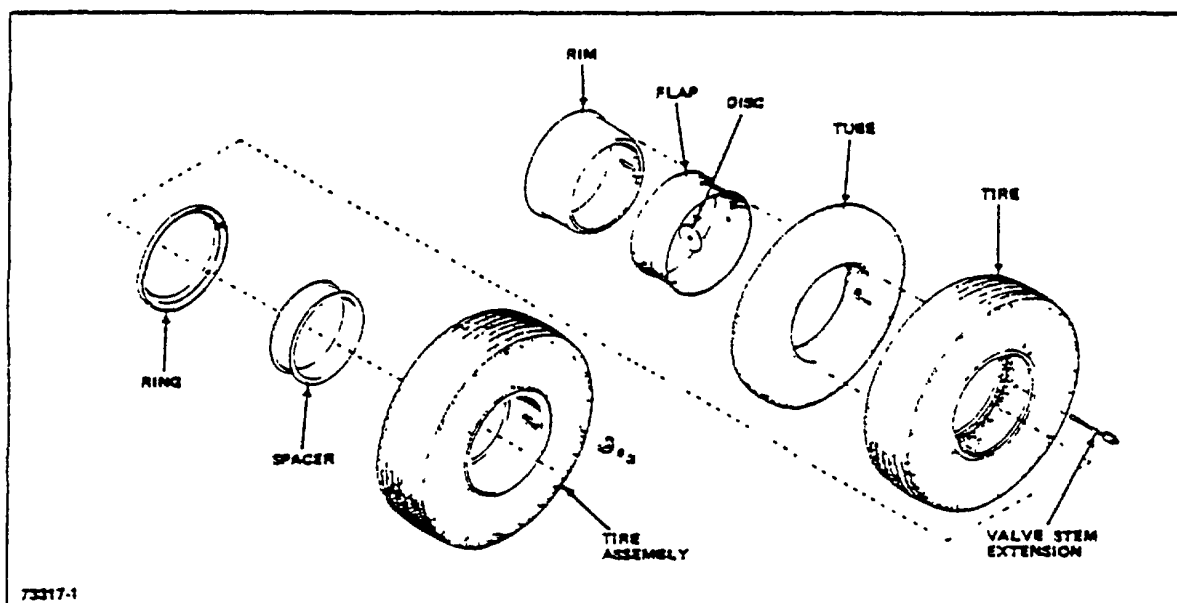


Figure 6-1. Dual Tire Assemblies

CAUTION

A safety tire rack, cage, or equivalent protection should be provided and used when inflating, mounting, or dismounting tires installed on rims equipped with locking rings or similar devices.

3. Remove rim from tire. Remove disc, flap, and tube from tire.
4. Repair or replace defective tire, tube, flap, or disc.
5. Install tube, flap, and disc in the tire. Install rim in tire. Install retaining ring to end of rim. Make certain retaining ring is properly seated.
6. Inflate tube to recommended pressure specified in preceding Paragraph A, GENERAL.

BRAKE SYSTEM

TOPIC 1. BRAKES

A. DESCRIPTION

The hydraulic brakes are the type referred to as "semi-floating, self-centering," and are specially designed for lift truck applications. The hydraulic brake system consists of a mechanically activated hydraulic master cylinder with heavy duty brake lines transmitting hydraulic pressure to brake wheel cylinders located between the brake shoes of each drive wheel. The double ended wheel cylinders have links extending from each side of the cylinder which transmit the movement from the wheel cylinders to the brake shoes.

The tops of the brake shoes move freely in a brake wear plate while the bottoms of the shoes transfer movement from the hydraulic wheel cylinders. (See Figure 1.)

No manual adjustment of the brake shoes is required as the system incorporates self adjusting brakes through use of a friction operated link assembly in each wheel. (See Figure 2.) The friction in the link assembly is great enough to prevent the shoe return springs from collapsing the link, but not great enough to prevent the brake pedal pressure from expanding it. The Link assemblies are

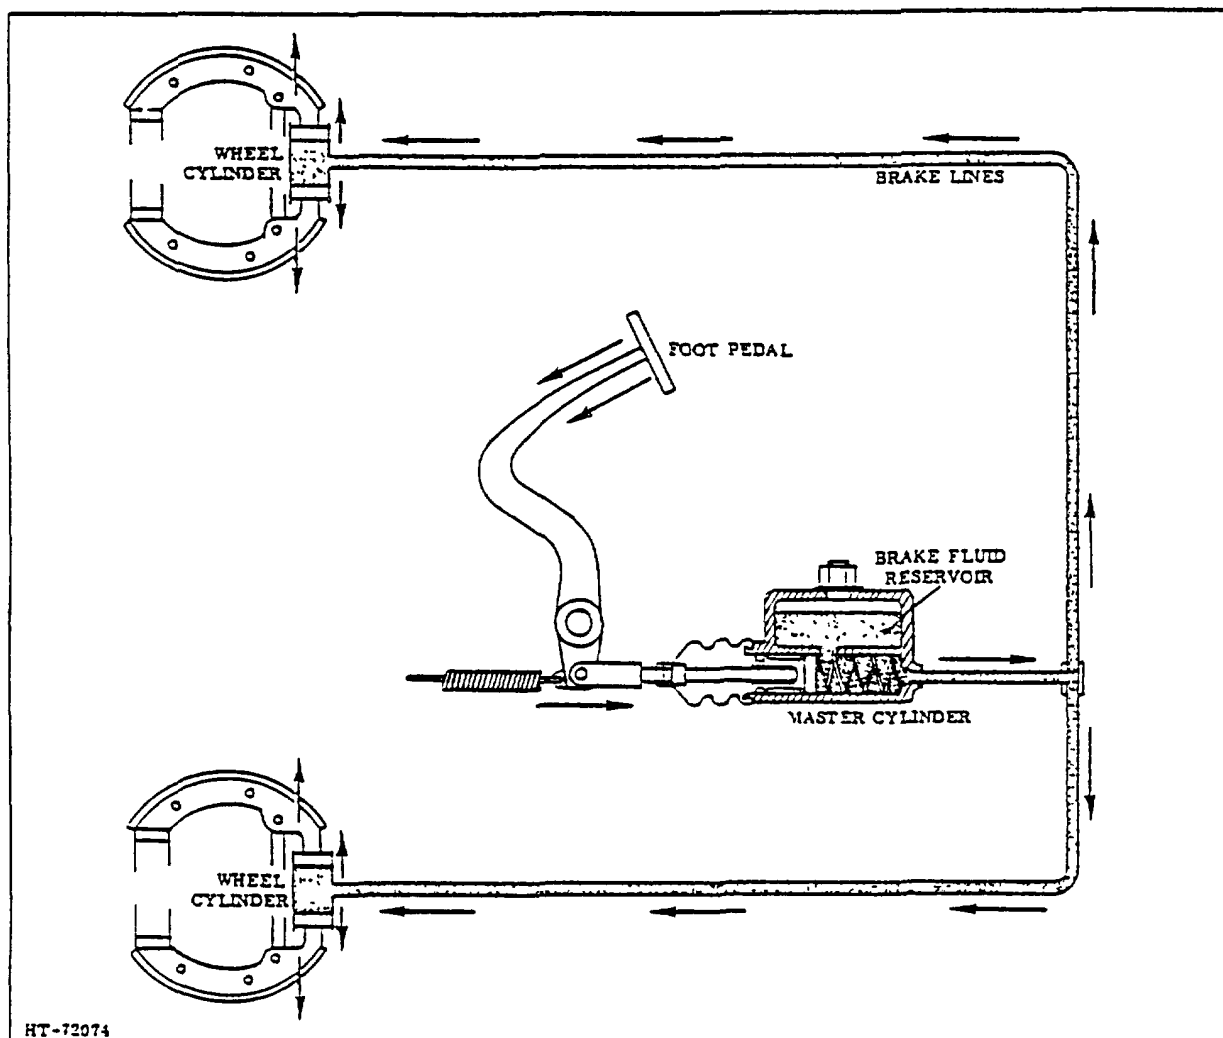


Figure 1. Hydraulic Brake System

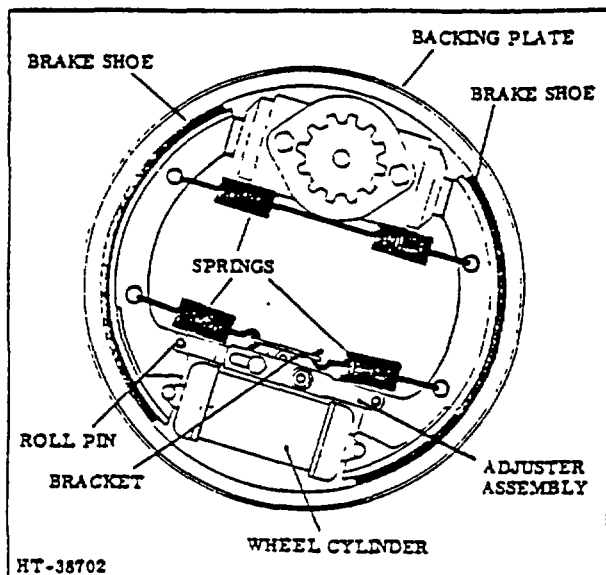


Figure 2. Self-Adjusting Brakes (Typical)

attached to the brake shoes with roll pins, and the pin mounting holes in the brake shoes are 1/32" oversize to provide proper working clearance between the shoe lining and brake drum.

CAUTION

If link is not operating properly, install new link assembly. Links are factory-set and must not be adjusted in the field.

1. Operation of Wheel Cylinders and Brake Shoes: The first requisite for safe, sure hydraulic braking is the use of high quality brake fluid. The hydraulic brake system requires a "solid column of fluid" and the fluid should possess essential protective properties which safeguard the system.

CAUTION

Use only a premium quality, heavy-duty brake fluid with an extreme "heat-cold" range. SAE specification R-71 is recommended.

Hydraulic fluid entering the wheel cylinders -from the master cylinder forces pistons to move individually and in opposed directions. This piston travel expands the brake shoes. As the pressure increases, the piston cup lips are forced more tightly against the cylinder wall, effecting a positive fluid seal, neglecting minor friction losses; the controlled actuating force is equal to and varies with the hydraulic pressure exerted against each square inch of the piston face.

The pistons are returned to an "off" position by the force of the brake shoe retracting springs. The piston cup lips are pressed against the cylinder walls by natural resiliency and system residual pressure to seal against fluid or air leaks. The hydraulic pistons of the wheel cylinders follow the brake shoes as they expand into the drums.

TOPIC 2. MASTER CYLINDER

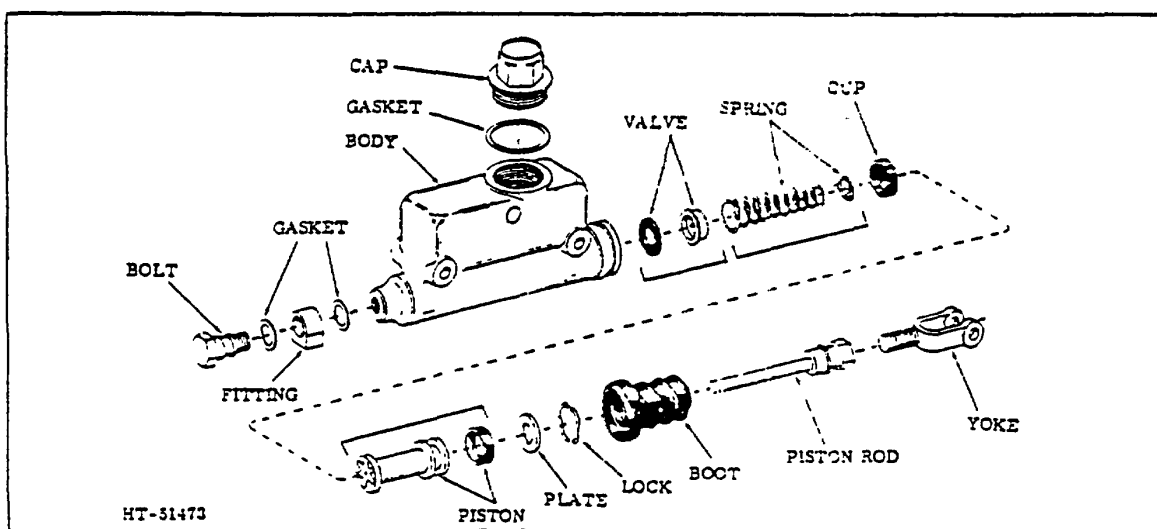


Figure 3. Master Cylinder Assembly

A. DESCRIPTION

The master cylinder and hydraulic fluid reservoir are combined in one casting and are joined by intake and by-pass ports located in the cylinder wall. (See Figure 3.) Internal parts are removed or installed at the push rod end of the cylinder. The stop plate holding the internal parts is retained by a lockwire clipped into the cylinder bore. The cylinder piston is operated through a push rod connected to the brake pedal. The push rod and cylinder opening is enclosed with a rubber boot.

It is impractical to thoroughly clean the cylinder and fluid reservoir on the truck. For this reason the following instructions should be observed:

B. REMOVAL

1. Remove floor and toe plate.
2. Disconnect brake hydraulic line attached to master cylinder.
3. Remove clevis pin holding the pushrod to the brake pedal assembly.
4. Remove capscrews that mount the master cylinder to the inside of the truck frame and remove.

TOPIC 3. DRIVE WHEEL BRAKES

A. DESCRIPTION

The brake shoes are self-adjusting through the use of a friction operated self-adjuster in each drive wheel. The friction between the two slide assemblies of the self-adjuster is great enough to prevent the brake shoe springs from fully retracting the self-adjuster, but not great enough to prevent the hydraulic pressure from expanding it. The self-adjuster assembly is mounted to the brake shoes with roll pins. The roll pin holes in the brake shoes are 1/32" oversize to provide proper working clearance between the brake shoe lining and drum.

CAUTION

Exercise care when self-adjuster is handled or installed. Do not bend the tags of the slide assemblies in any way because the holes for the roll pins must be parallel with each other. If the holes are not parallel, the roll pins will lie at a slight angle through the mounting holes in the brake shoes. Improper alignment of the roll pins could lead to improper brake shoe retraction due to lack of proper roll pin clearance in the brake shoe holes. This in turn could create brake shoe drag on the drum.

NOTE

Refer to REPAIR MANUAL for MASTER CYLINDER, INSPECTION, DISASSEMBLY, REPAIR and REASSEMBLY.

C. INSTALLATION

1. Ensure that master cylinder is completely reassembled prior to installing.
2. Replace master cylinder assembly in its relative mounting location and install securing capscrews.
3. Attach brake pedal pushrod to cylinder and secure with clevis pin previously removed.
4. Connect brake hydraulic line to cylinder.
5. Refer to LUBRICATION CHART and fill cylinder with proper high grade hydraulic brake fluid. SAE specification R-71 is recommended.
6. Bleed brake system as outlined under appropriate heading, REPAIR MANUAL.
7. Replace floor and toe plate.

In order for the self-adjusting brakes to operate properly, the self-adjuster assembly must be properly torqued. If it becomes necessary to remove and disassemble the self-adjuster in the field, use the following recommended procedure to assemble the self-adjuster.

B. ADJUSTMENT

1. Assemble components as illustrated in Figure 4.

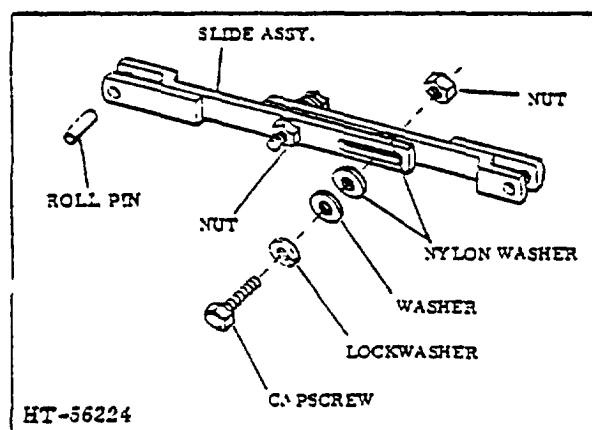


Figure 4. Brake Self-Adjuster Assembly

2. Tighten capscrews (5) to a torque of 14 to 16 in. lbs.
3. Hold capscrews (5) in position and tighten nuts (6) to a torque of 29 in. Lbs.
4. Check slip resistance of the slide assemblies, resistance must be 250 to 300 lbs.
5. After the assembly is completed, the self-adjuster should measure 5-1/4" between hole centers when it is fully retracted.
6. drive wheel brake drum assembly and drive wheel; refer to BRAKE DRUM UNIT

REASSEMBLY and DRIVE WHEEL REASSEMBLY.

7. To test the operation of the self-adjuster, after initial installation of adjuster unit, place shifting lever in either forward or reverse and step on brake pedal. Self-adjuster should automatically adjust and there should be very little play in brake pedal.

NOTE

If there is excessive play in brake pedal, check pedal adjustment before removing brake drum unit. Refer to DRIVE WHEEL BRAKE ADJUSTMENT, REPAIR MANUAL.

TOPIC 4. PARKING BRAKE

A. DESCRIPTION

A dual shoe mechanical brake, mounted at the drive shaft, can be used as either a parking brake or as an emergency brake. The brake shoes are actuated through a cable by an adjustable, over-center type lever, mounted on the left hand cowl panel. (See Figure 3.)

The brake mechanism requires no lubrication except at time of assembly. The brake actuating mechanism, such as the hand lever and linkage, should be lubricated periodically.

B. ADJUSTMENT

To compensate for brake lining wear, the tension on the hand brake can be increased by adjusting the knob on top of the hand brake lever. (See Figure 5.) The following procedure is recommended for proper adjustment of hand brake lever:

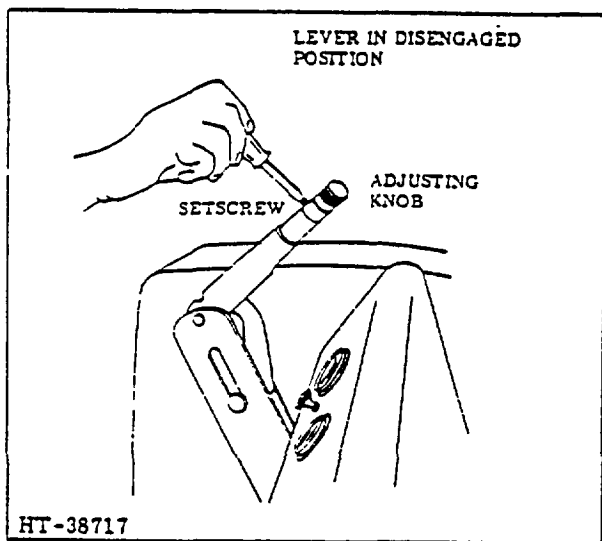


Figure 5. Hand Brake Adjustment

1. Set the hand brake lever in the fully released position.
2. Remove the setscrew that locks the adjusting knob in position.
3. Turn the adjusting knob-In a clockwise direction one or two turns, then verify adjustment by engaging the brake. Lever should pull harder to engage brake if properly adjusted.
4. Repeat Step 3 If additional tension is required. When satisfactorily adjusted, .turn setscrew in to lock the adjusting knob.

NOTE

Refer to REPAIR MANUAL if brake shoe adjustment is required.

POWER STEERING SYSTEM

TOPIC 1. STEERING

A. DESCRIPTION

Vehicles with power steering have 3 steering wheel and column. a hydraulically operated steer gear at the base of the column, a hydraulic pump, filter, reservoir, and a power steer cylinder that actuates the drag link. The drag link moves the tie rods which, in turn, transfer movement to the steer wheels at the back of the truck.

The steer wheels turn the truck in the same direction as the steering wheel is turned, but they do this by swinging the back of the truck away from the turn.

The steering wheel and column are similar to standard steer systems, but the gear has ports for the movement of hydraulic fluid. When the steering wheel is turned

to the right, fluid flows out of one port in the gear to the forward power steer cylinder port. The fluid forces the piston in the cylinder out, thereby pushing backward on the drag link. The drag link pushes on the pivot arm. The pivot arm turns, moving the tie rods with it. The other ends of the tie rods connect to the spindles on which the steer wheels are mounted. Therefore, the wheels turn.

When the steering wheel is turned to the left, the hydraulic fluid flows out of the other port in the steer gear. This fluid is forced into the back of the power steer cylinder. This forces the piston forward. The piston takes the drag link forward with it. The drag link pulls forward on the pivot arm, and the pivot arm pulls the tie rods and thus, steers the wheels into position for a left turn.

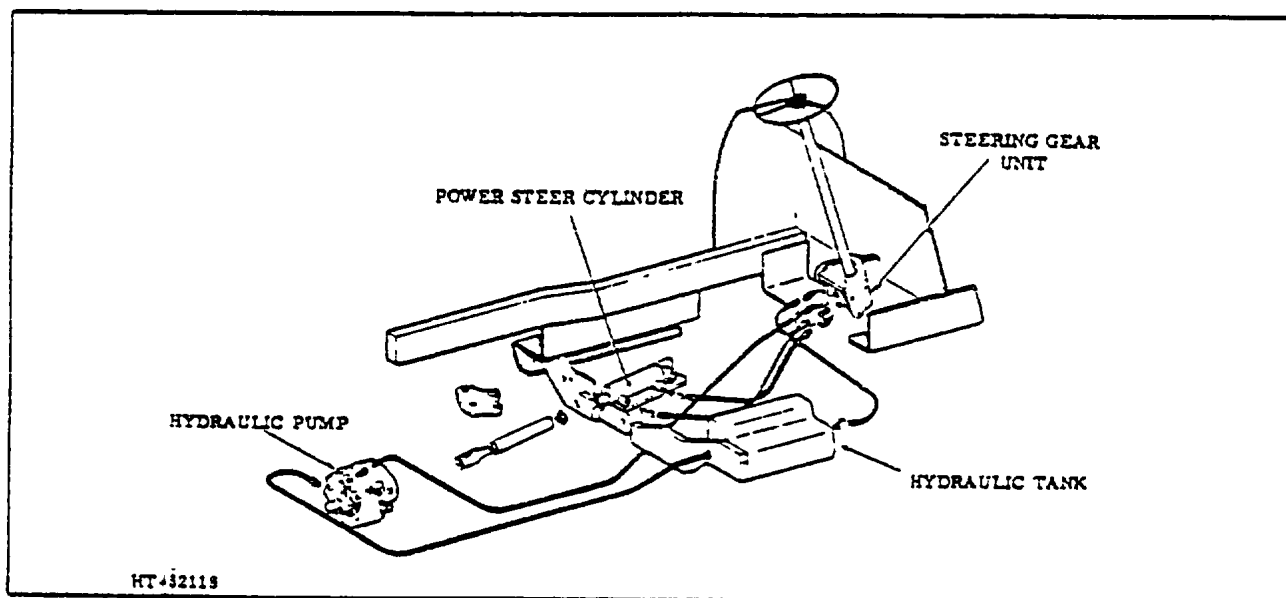


Figure 1. Power Steering Components

TOPIC 2. STEER AXLE

A. DESCRIPTION

The steer axle assembly (Figure 2), is attached to the truck frame by two axle mounting housings. (See Figure 3.)

It will be necessary to raise the rear of the truck to remove the steer axle assembly, and the following procedure is recommended:

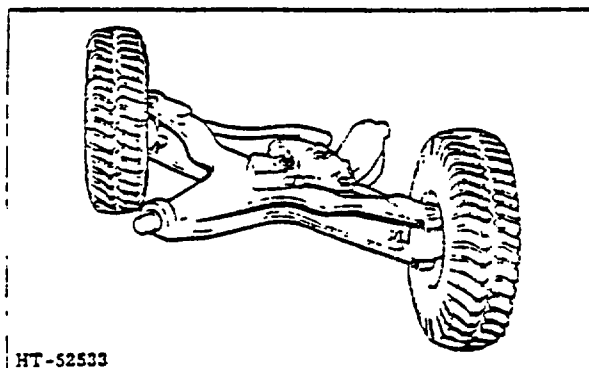


Figure 2. Steer Axle Assembly

B. REMOVAL

1. Raise rear end of truck with chain hoist to height which makes all parts accessible, and block truck in this position.
2. Remove steer wheels.
3. Place a suitable jack under steer axle and raise slightly to remove stress from axle mounting housings and to support axle during removal.
4. Remove drag link from pivot arm. Refer to DRAG LINK Section.
5. Remove capscrews and locknuts securing axle mounting housings to truck frame.
5. Lower jack and pull steer axle assembly from under the truck.

NOTE

Refer to REPAIR MANUAL for DISASSEMBLY, INSPECTION, REPAIR and REASSEMBLY procedures.

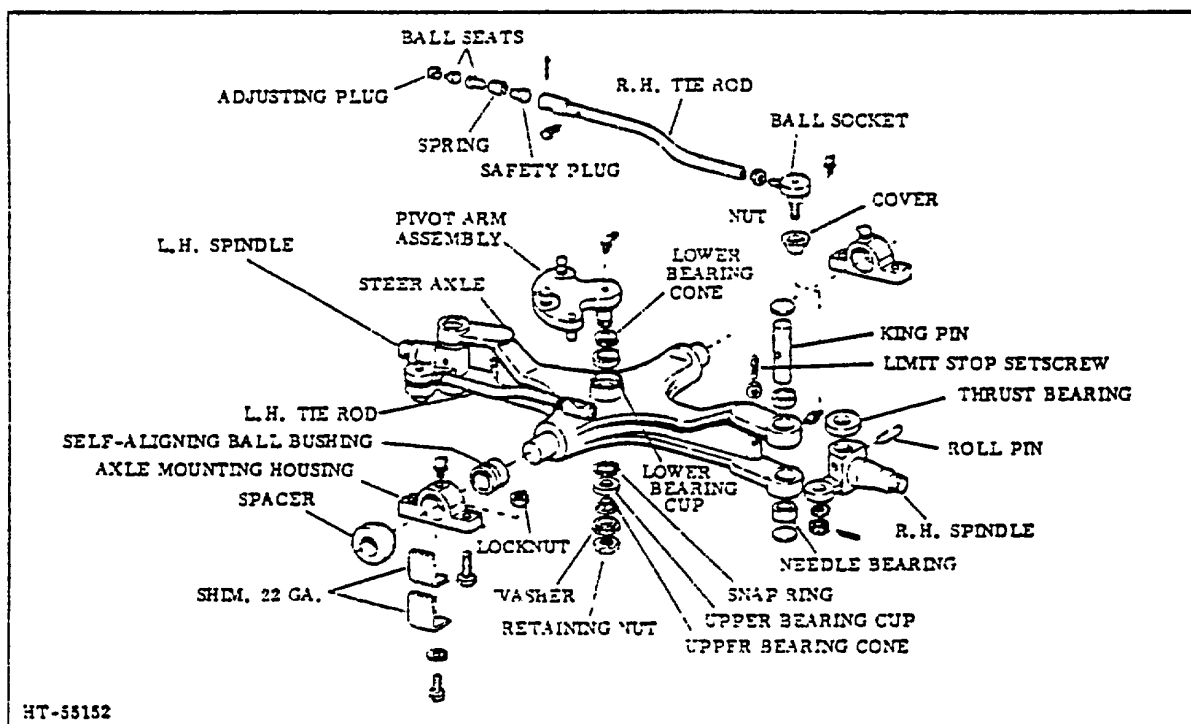


Figure 3. Steer Axle and Connections

C. INSTALLATION

1. Install self-aligning ball bushings into axle mounting housings. Screw lubrication fittings into axle mounting housings.
2. Slide axle mounting housings and spacers on each end of steer axle.
3. Install tie rods and tighten adjusting plugs. Pull adjusting plugs up tight, then loosen so there is so end play and secure in position with cotter pins.
4. Attach ball sockets in tie rods and lock in place with check nuts. Install ball sockets in spindles and secure with nuts making sure to lock nuts with cotter pins.
5. With steer axle assembly on jack, raise axle assembly into position and secure axle mounting housings to truck frame with capscrews and locknuts.
6. Install equal amount of shims between frame and spacers on each end of steer axle to eliminate all end play. Secure shims to axle mounting housings with capscrews. Torque housing mounting capscrews to 125 135 ft. lbs.
7. Install drag link to pivot arm. (Refer to DRAG Link Section.)
8. Install steer wheels. (Refer to WHEEL and TIRE ASSEMBLY Section.)

D. STEERING SYSTEM ADJUSTMENT

If the steering system should require adjustment, follow the procedure outlined below:

1. Raise the rear end of the truck so that the steer wheels clear the floor. Block in position.
2. Disconnect the drag Link from the pivot an.
3. Turn the steer wheels full right and full left. Measure the distance between the wheel and the axle at both wheels. Clearance should be at least 1/2". While holding this distance, adjust the spindle stops to allow approximately .030" clearance between the stop and the spindle.

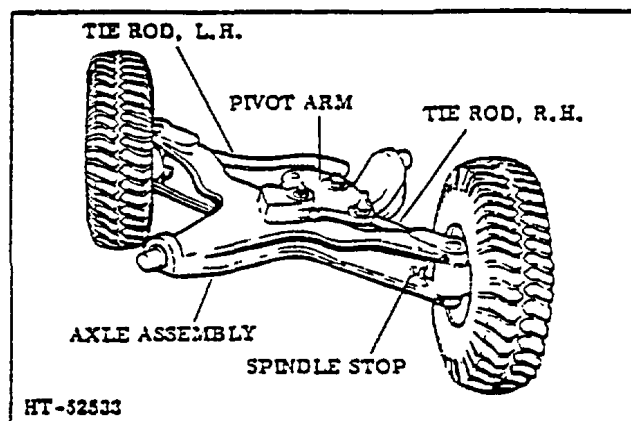


Figure 4. Stop Adjustment

4. Set the steer wheels straight ahead, parallel with the side of the truck frame. It may be necessary to adjust the tie rods to obtain this position, as zero degrees toe-in must be maintained at all times.
5. Position the plunger rod half way out of the power steering cylinder. Loosen the locknut that secures the drag link socket to the plunger rod. Turn the drag link IN or OUT while holding the power steering plunger rod with a wrench on the flats near the end of the rod. The drag link socket must be centered over the steer axle pivot arm ball stud while the steer wheels are in a straight ahead position, parallel with the frame.
6. Connect drag link to pivot arm ball stud. Tighten adjusting plug in end of drag link and install cotter pin. Then tighten lookout to secure drag Link socket to plunger rod.
7. Remove the blocks and lower the rear of the lift truck so the steer wheels rest on the floor.
8. Start the engine and check the steering system. With all adjustments correctly made, the wheel spindles should contact the stop screws on the axle to prevent the piston from bottoming in the steering cylinder.

TOPIC 3. STEERING WHEEL AND COLUMN

A. DESCRIPTION

Although the steering wheel and column are similar to standard steering systems, the power steering system incorporates a hydraulically operated steer control unit instead of the usual steer gear box. (Figure 5.)

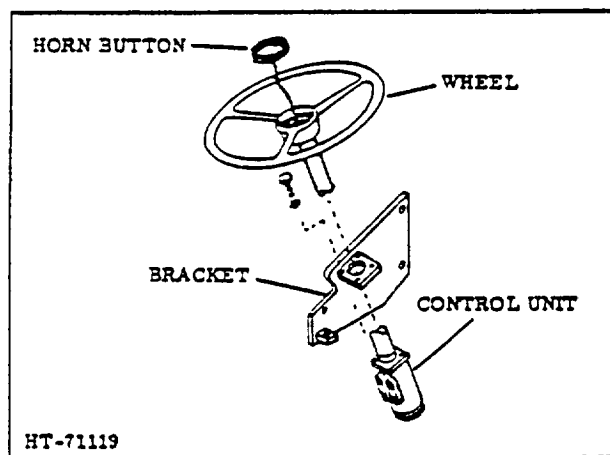


Figure 5. Power Steer Assembly

When the steering wheel is turned in either direction, hydraulic fluid is channelled through the appropriate control unit ports, thus pushing or pulling the drag link, which controls direction of wheels.

B. STEERING COLUMN ADJUSTMENT

Proper alignment the steering column is very important. The column must not be sprung in any direction from its free position. To determine whether or not misalignment exists, release the upper column support and note whether column moves to a different position-its free position. If it does move, then it has been out of line and should be clamped in proper position. or position corrected at mounting bracket on truck. If column has been bent permanently because of severe misalignment, then replacement of the tube, shaft, or entire unit may be necessary.

C. REMOVAL

The following procedure is recommended for proper steer control unit removal:

1. Disconnect battery terminals.
2. Remove the floor and toe plates.
3. Disconnect the hydraulic lines from the steer control unit. Tag hydraulic lines for identification.

NOTE

All hydraulic lines should be plugged immediately after they are disconnected to prevent dirt from entering the system.

4. Disconnect the horn wires from column.
5. Remove the capscrews that hold the steer unit to the stationary bracket.
6. Lift the steer gear up and out of the vehicle and place in a clean working area.

NOTE

Refer to REPAIR MANUAL for DISASSEMBLY, INSPECTION, REPAIR and REASSEMBLY.

D. INSTALLATION

1. Place the-steer gear control unit in its relative mounting location at end of steering column and insert and tighten securing capscrews.
2. Reconnect the horn wires.
3. Unplug and connect the hydraulic lines to steer unit as they were removed.
4. Ensure that reassembly is complete, then replace the floor and toe plates.
5. Reconnect the battery terminals.

If the steering system requires adjustment, refer to Paragraph D in preceding Topic 2.

TOPIC 4. DRAG LINK

Refer to POWER STEER CYLINDER TOPIC for REMOVAL and INSTALLATION.

TOPIC 5. TIE ROD

Refer to STEER AXLE REMOVAL to gain access to the TIE RODS, and refer to STEER AXLE DISASSEMBLY, REPAIR MANUAL, for TIE ROD REMOVAL, DISASSEMBLY, REPAIR and REASSEMBLY.

TOPIC 6. POWER STEER CYLINDER

A. DESCRIPTION

The power steer cylinder is controlled by the hydraulic steer gear unit and subsequently controls the direction of turn of the steer wheels through the drag link coupled to its output shaft.

The following procedure is recommended to remove the power steer cylinder:

B. REMOVAL

1. Raise back of vehicle with a chain hoist; until cylinder connections are easily accessible. Block front wheels and place blocks under frame.

2. Place a drain pan under cylinder ports and remove hoses leading to power steer cylinder. Plug cylinder ports and cap hoses to prevent dirt from entering hydraulic system.
3. Remove drag link from pivot arm.
4. Remove cylinder from its connection at truck frame. (Figure 6.)
5. Unscrew drag link (Fig. 7/ 9) from cylinder.

NOTE
Refer to REPAIR MANUAL for REPAIR procedures.

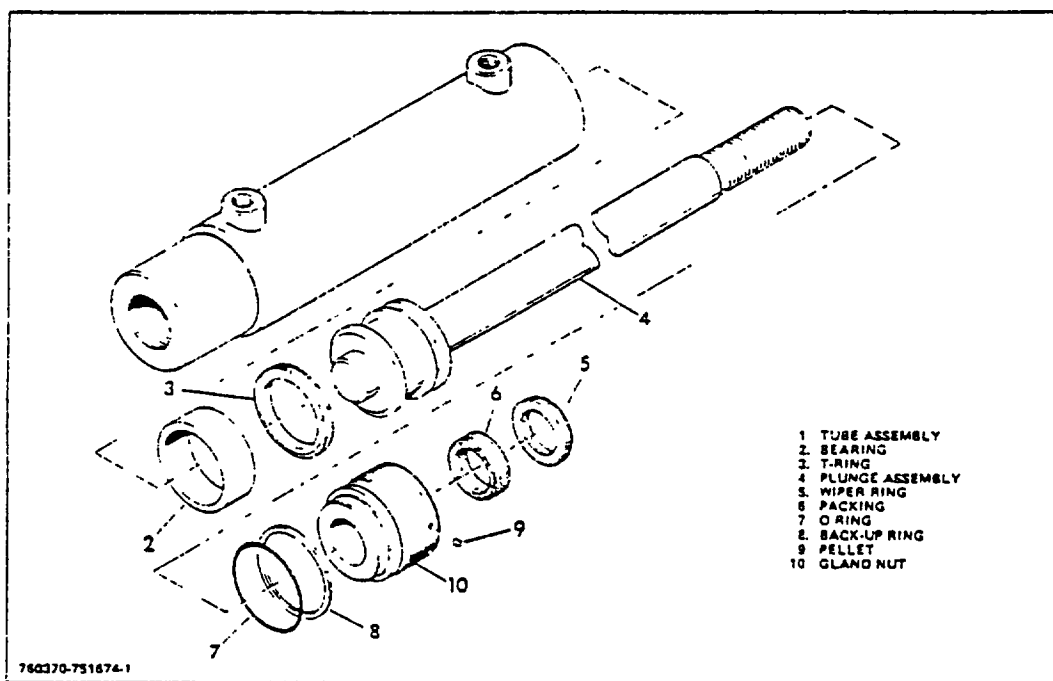


Figure 6. Power Steering Components (PRT)

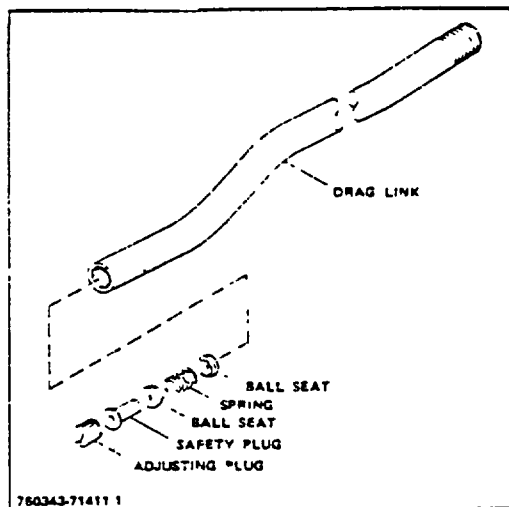


Figure 7. Drag Link Components (PRT)

C. INSTALLATION

1. Attach drag link to pivot arm and to cylinder. Attach cylinder to frame.
2. Connect hydraulic lines to cylinder.
3. Loosen suction hose at hydraulic pump to make certain hose is not air-bound. With suction hose loosened, air will leak out.

CAUTION

Make certain hydraulic oil is up to the "Full" mark on dipstick.

4. Tighten hose and lower truck to floor.

TOPIC 7. WHEELS AND TIRES

The steer wheels are located at the rear of the lift truck, at the counterweight end. To remove either or both steer wheels, it is recommended that the drive wheels be properly blocked and that a properly attached hoist chain and jacks or blocks be used to raise rear of truck for steer wheel tire removal.

NOTE

Refer to REPAIR MANUAL for DISASSEMBLY and REASSEMBLY.

A. REMOVAL (PNEUMATIC TYPE)

1. Ensure drive wheels are securely blocked and set parking brake to prevent truck from rolling.
2. Remove the nuts and lockwashers attaching the rims to the bolts on the wheel hub. (See Fig 8/11)
3. Pull the tire and rim assembly from the hub.

B. INSTALLATION (PNEUMATIC TYPE)

1. Install tire and rim assembly on hub.
2. Secure tire and rim assembly with nuts and lockwashers.
3. Remove blocks lower truck and release handbrake.

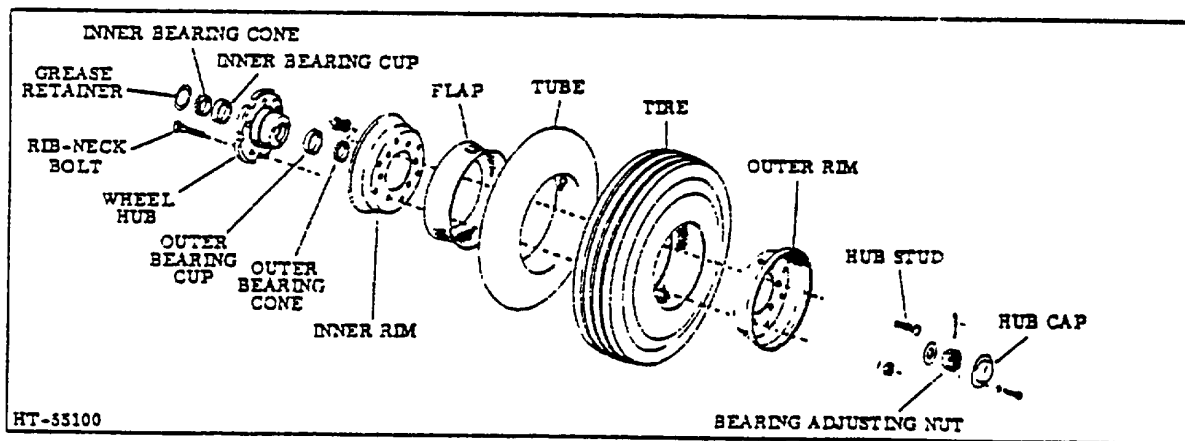


Figure 8. Steer Wheel Assembly (Pneumatic Tire Type)

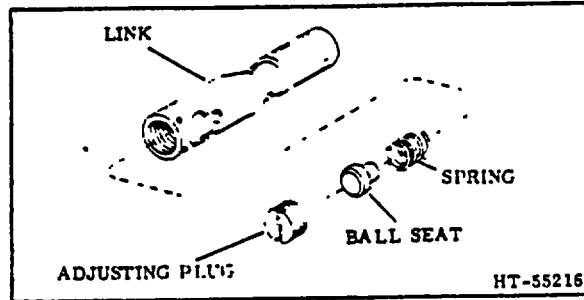


Figure 9. Drag Link Components

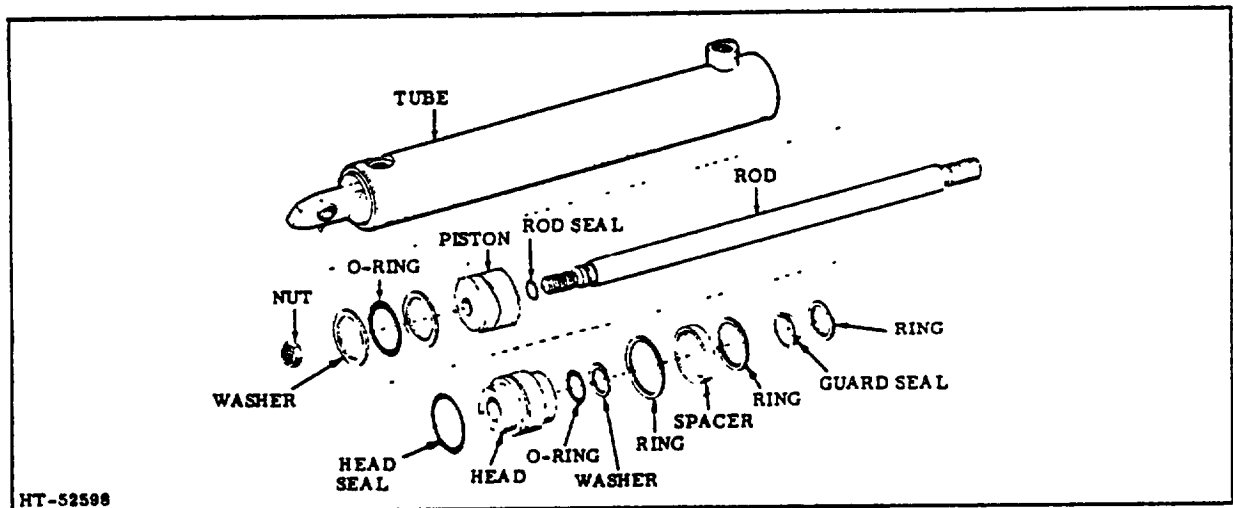


Figure 10. Power Steering Components (SRT)

C. REMOVAL (CUSHION TIRE TYPE)

1. Attach a suitable hoist to the rear of the truck and lift the truck until the steer wheels clear the floor.
2. Remove the capscrews and lockwashers that secure the hub cap to the wheel and remove the hub cap.
3. Remove the cotter pin, retaining nut, washer, and outer bearing cone from the spindle.

D. INSTALLATION (CUSHION TIRE TYPE)

1. Lubricate the bearing cups in the wheel and carefully install the wheel on the spindle.
2. Lubricate the outer bearing cone with the specified lubricant, using an applicator. Install the bearing cone on the spindle.
3. Install washer and retaining nut. While rotating wheel, tighten the retaining nut to 50 ft. lbs. Back off nut until it is loose (0 ft. lb). Rotate the wheel in both directions and tighten the nut to 25 ft. lbs. Back the nut off 30° minimum to 60° maximum, and install cotter pin.
4. Install hub cap and secure with capscrews and lockwashers; tighten capscrews securely. Lower the truck to the floor.

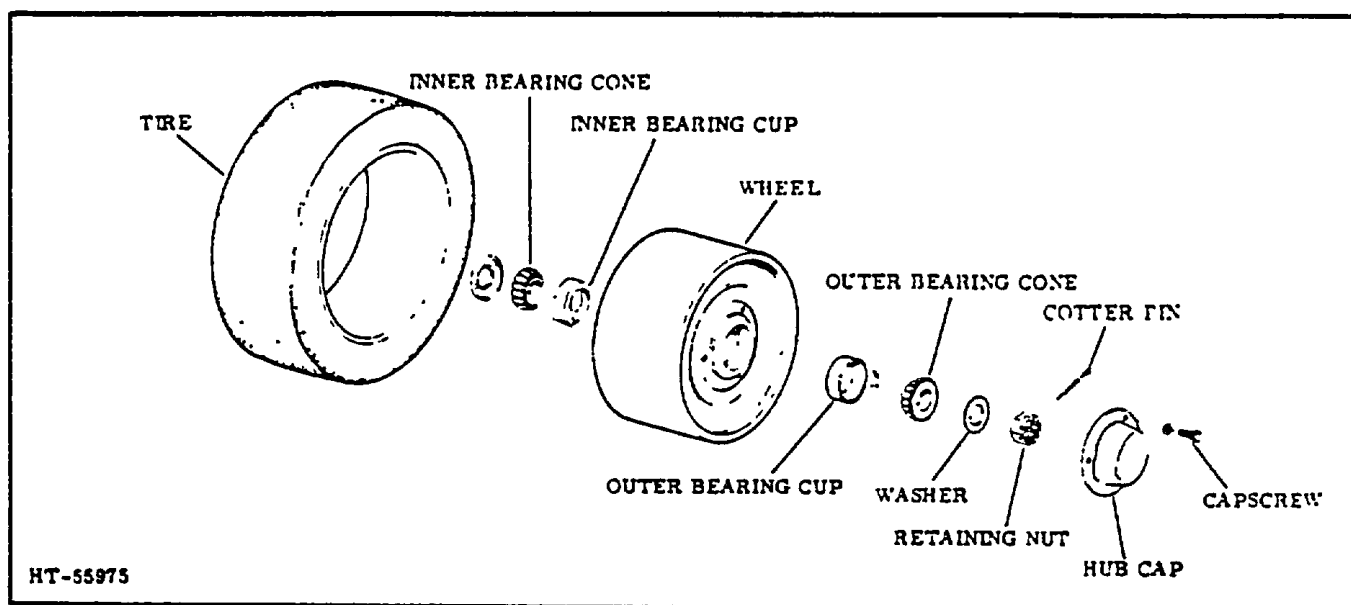


Figure 11. Steer Wheel Assembly - (Typical)
(Cushion Tire Type)

TOPIC 1. HYDRAULIC SYSTEM SERVICE

A. GENERAL

The hydraulic system provides the means by which the lift, tilt, and accessory operations are controlled. Included in the system is an engine driven, gear type pump that supplies hydraulic oil to the control valve. From the control valve, the flow of hydraulic oil under pressure is directed to the appropriate cylinders. The hydraulic oil is cleaned by a filter located between the control valve and reservoir. The reservoir provides an adequate supply of hydraulic oil to the pump plus an ample reserve. A suction port is provided at the bottom of the reservoir to gravity feed oil to the hydraulic pump.

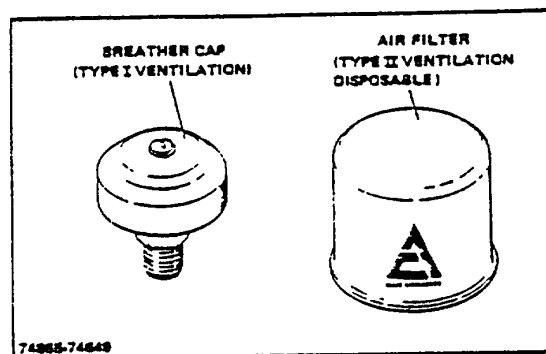


Figure 1-1. Reservoir Ventilation

B. GENERAL MAINTENANCE

It is essential that personnel responsible for the care of the unit adhere to the following general maintenance recommendations:

1. Store and handle hydraulic oil with utmost care to prevent moisture and foreign matter from entering the hydraulic system. All hydraulic oil handling equipment, such as a container, funnel, and hand pump, should be kept clean at all times and covered when not in use.
2. Keep all fittings and connections tight to eliminate oil leaks. However, do not tighten any fittings excessively because damage or distortion will result.
3. Before a component is removed from the hydraulic system, be sure to wash the component and its surrounding area with cleaning solvent to prevent entrance of foreign matter into the system. Cover all openings immediately.
4. Whenever a fitting with a pipe thread is removed, use a sealing compound on the outside of the threads before the fitting is installed. Make certain all parts are thoroughly cleaned before installation. Do not put sealant on first thread of fittings, it may contaminate system.
5. When a hose assembly is installed, make certain it is not twisted when the fittings are tightened. Always use two wrenches on swivel type fittings, one to hold the hose and the other to tighten the fitting.
6. Keep nose clamps tight to prevent hose from chafing and to avert leakage.
7. Oil leaks at the lift and tilt cylinders should be corrected as soon as leakage becomes evident.

8. Periodically check the pump and control valve mounting hardware for tightness.
9. Replace filter element and clean the (Fig 1-1) reservoir breather cap, and hydraulic oil reservoir at the recommended service intervals.

CAUTION

Keep the hydraulic system clean. A contaminated hydraulic system is the major cause of hydraulic pump, control valve, and packing wear or failure. It is therefore advised that any oil that is added or replaced be filtered through a 10 micron filter, or finer, before entering the hydraulic system.

C. DAILY INSPECTION

Daily during operation, occasionally inspect the floor area where the lift truck was operating to check for oil leaks from the hydraulic system. Correct leaks as soon as they become evident.

Daily, check reservoir oil level. Oil should be up to the full mark on dip-stick when mast is lowered and all cylinders are retracted. Add specified oil if necessary.

D. 50 HOUR INSPECTION

1. Lift Cylinders

After each 50 hours of operation, inspect the mast lift cylinder(s) for leaks; correct any that are evident. Check lift cylinder hoses and fittings for leaks; correct if necessary.

No adjustment can be made on the mast lift cylinders. When leakage occurs, the seals must be replaced.

2. Tilt Cylinders.

After each 50 hours of operation, check cylinder hoses and fittings for leaks; correct if necessary. Check cylinder mountings and make certain yoke is tight on plunger so plunger does not rotate in cylinder. Also lubricate yoke pins.

3. Filter Element Replacement

After the initial 50 hours of operation the filter element (Fig 1-2) must be replaced and the filter housing flushed.

E. 200 HOUR SERVICE

1. Filter Element Replacement

A filter is installed in the hydraulic system between control valve and oil reservoir to provide complete filtering of the hydraulic oil. This filter is a bypass type and therefore contains a bypass valve which permits oil to bypass a clogged element and flow directly to the reservoir. The element is the paper type and cannot be cleaned; it must be replaced.

After each operating interval of 200 hours, replace element (Fig 1-2) as follows:

- a. Filter housing has a large hexagon head cast at the base of the housing. Use an appropriate wrench to loosen and remove filter housing and element. Type It filters require removal of four attaching capscrews.

NOTE

O Ring will come out with housing as it is seated in a groove in the upper end of the housing.

- b. Remove O Ring from housing and discard it.
- c. Discard old filter element. Thoroughly clean inside of filter head and housing; inspect for any defects. Replace damaged parts if necessary.
- d. Place a light coat of clean hydraulic oil on new O Ring and carefully install O Ring in groove in upper end of housing. Be careful not to over-stretch or tear O Ring.
- e. Insert new element into housing and install housing into filter head. Hand tighten and make certain element center hole aligns properly within filter head.
- f. Use a wrench and tighten housing to

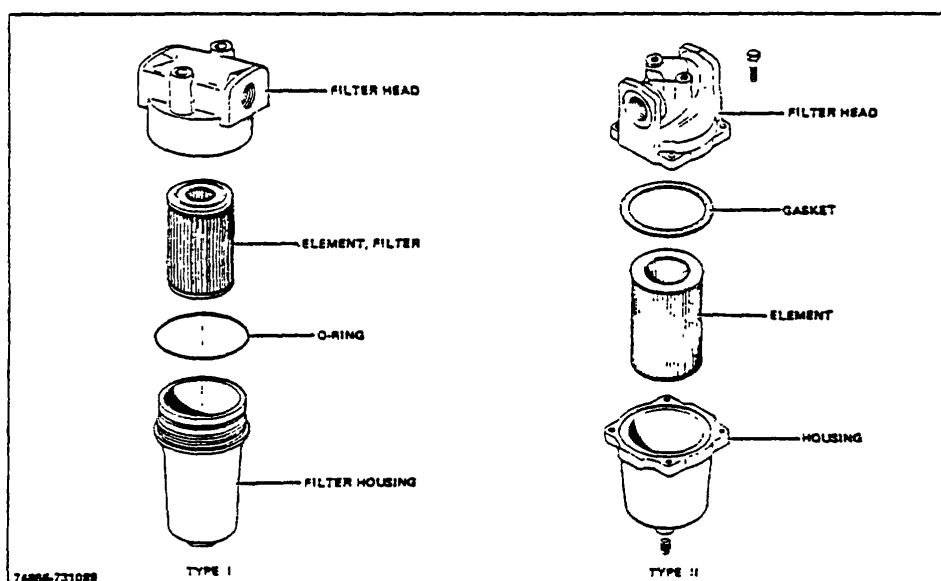


Figure 1-2. Hydraulic Oil Filters

20-30 lb-ft max. for Type I filters. Capscrews on Type II should be tightened to 30-35 lb-ft.

- g. Operate hydraulic system and check for leaks. Correct if necessary.
- h. Check hydraulic oil reservoir level with all cylinders retracted. Fill reservoir with specified oil to full level if necessary.

2. Hydraulic Oil Reservoir

After initial 200 hours of operation of new truck drain and flush reservoir.

3. Breather Cap (Type I Ventilation)

After each operating interval of 200 hours, breather elements must be cleaned. Remove and clean elements as follows:

- a. Remove breather cap (Fig 1-1) from the hydraulic oil reservoir.
- b. Remove locknut, washer, and element.
- c. Clean element in a suitable cleaning solvent and dry it with compressed air.
- d. Dip element in SAE 10 or 20 engine oil; allow oil to drain before element is installed.
- e. Install element, washer, and locknut. Tighten locknut securely.
- f. Install breather cap securely in the hydraulic oil reservoir.

4. Air Filter (Type II Ventilation)

After each 200 hours operation unscrew filter and replace with a new one.

F. 500 HOUR INSPECTION

After each operating interval of 500 hours, inspect all hoses and fittings used in the hydraulic system. Replace hoses that are damaged or deteriorated. Check for leaks and correct any that are evident.

The control valve requires very little attention with the exception of keeping the lines, fittings, hose connections and mounting hardware tight. Also after every 500 hours of operation, check the control valve linkage.

G. 1000 HOUR SERVICE

Hydraulic Oil Reservoir

The hydraulic oil reservoir is located within the right side

of the truck frame. Installed in the top of the reservoir is an easily accessible breather and an oil level dipstick to allow for a quick check of the reservoir oil level. To avoid aeration of the hydraulic fluid the oil level must be maintained at the proper level. Air enters or exits through the breathers to compensate for changes of the oil level in the reservoir during operation of the hydraulic system.

After each operating interval of 1000 hours, oil in reservoir should be drained. This is important primarily because of condensation and contamination. Heating of oil during operation and cooling of it when lift truck is not in use contributes to condensation which is detrimental to the hydraulic system. Contaminants such as dirt, rust, scale, and products of oil deterioration are also detrimental. Drain and clean oil reservoir as follows:

1. Lower mast so lift cylinder is at its fully lowered position and all cylinders are retracted.
2. Remove drain plug from bottom of oil reservoir and allow oil to drain into a container.

CAUTION

Co not operate hydraulic pump to drain hydraulic system.

3. After oil has drained flush inside of reservoir with a suitable cleaning solvent. Reservoir cover plate must be removed for flushing process. Reservoir may be removed from truck if so desired.
4. Dry inside of reservoir with clean, dry compressed air.
5. Install drain plug in reservoir. Fill reservoir with clean specified hydraulic oil. During filling operation, make certain a clean container or funnel is used and mast is lowered and all cylinders are retracted.
6. Install breather. Operate hydraulic system and check for leaks; correct any if necessary.

H. HYDRAULIC PUMP

The hydraulic puma is a tandem type dual gear unit driven by the engine. The pump has a common suction port and one or two discharge ports. The internal Darts of the pump are machined to a high degree of accuracy and the tolerances are very close. If a pump is in need of repair which requires complete disassembly, it is recommended the pump be sent to your local Allis-Chalmers lift truck dealer for repair.

Include your purchase order and full information regarding the nature of the breakdown.

In some cases where a pump is inoperative, it may be possible to repair it in the field. Satisfactory repair can be accomplished, provided a clean, well equipped repair shop manned by a competent mechanic is available.

I. CONTROL VALVE

The function of the control valve is to direct the flow of the hydraulic oil, under pressure, to the appropriate cylinders. The control valve requires very little attention with the exception of keeping the hydraulic lines and hose connections tight.

There are normally, two operating plungers in the valve. One is a single acting plunger which operates the lift cylinder. The other is a double acting plunger : o operate the tilt cylinders.

When the control lever is in "neutral" position, the oil is being circulated through the open center of the valve and back to the reservoir; but is not entering any of the cylinder ports. As the control lever is moved to its operating position, the cylinder ports begin to open and the open center passage begins closing. At the extreme limit of control lever travel, the cylinder ports are open and the open center passage is closed. The applied oil pressure then opens the check valve and allows the oil to flow to and/or from the lift or tilt cylinders.

An adjustable relief valve is Incorporated in the control valve. It is used to relieve extreme pressures when maximum tilt or lift position, or overloads are reached, to prevent damage to the hydraulic system.

1. Linkage

Improperly adjusted or out of adjustment linkage can result in binding or bending of the control valve linkage.

Ensure that tilt and lift control levers and associated linkage travels freely and smoothly through forward and backward movement of each lever and that the control valve plungers respond accordingly. Adjust, repair or replace as is necessary.

Be certain that pivot points or other mating surfaces are free of accumulated sludge and remain lightly lubricated to function smoothly.

J. CHECKING CONTROL VALVE INLET PRESSURES

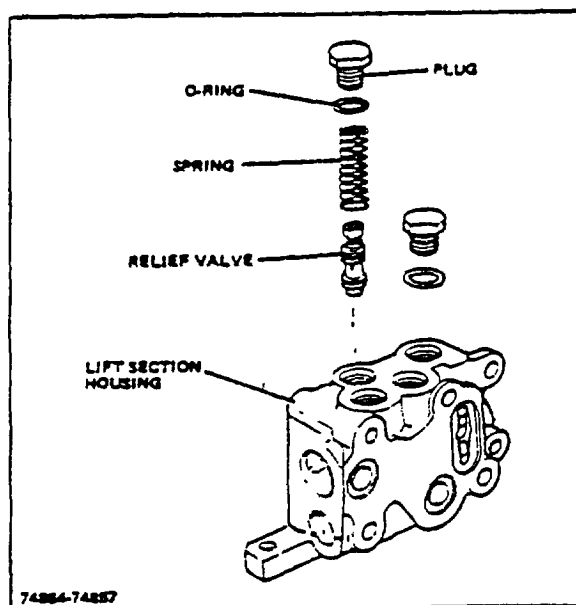


Figure 1-4. Relief Valve

1. Relief Valve Adjustment

Whenever the control valve or hydraulic pump has been repaired or replaced, check the relief valve and adjust to open at specified pressure. Check and adjust the relief valve (Fig i-4) located in the lift section of the control valve as follows:

- a. Gain access to the control valve; actual location varies between truck models.
- b. Some adapters have a plug in them where a pressure gauge can be installed. If unit is not equipped with this type adapter. Disconnect the hydraulic line at the inlet port of the control valve.
- c. Install a tee fitting on the end of the hydraulic line and connect the tee fittings to the adapter in the inlet port.
- d. Install a pressure gauge with a 0 to 3000 psi range in the tee.
- e. Place shift lever in neutral position, turn key switch ON and start engine.
- f. the tilt lever back to retract the tilt cylinders and hold lever in this position.

- g. While holding lever, observe the needle on the pressure gauge. When pressure reading of 1950 psi is attained, the needle will stop, indicating relief valve opening.
- h. If the relief valve opens below or above 1950 ± 50 psi, it must be adjusted as follows:
 - (1) Turn key switch OFF.
 - (2) When pressure gauge reads zero remove relief valve plug.
 - (3) Check relief valve assembly and valve spring for damage. Replace defective parts.
 - (4) Install valve assembly with spring, O-ring, and plug.
 - (5) Repeat steps e through g.
 - i. Turn key switch OFF.
 - j. Remove pressure gauge and tee; then install hydraulic line to control valve fittings.

K. LIFT CYLINDER

1. General

As previously stated, the lift cylinder receives hydraulic oil under pressure from the control valve to raise the lift cylinder plunger or plungers, depending upon the type of mast assembly. The hydraulic oil is applied at the base of the lift cylinder or near the center of the cylinder and compels the plunger(s) to extend.

A flow regulator, which is located at the base of the lift cylinder, controls the flow of hydraulic oil so the load lowers at a controlled rate of speed from the raised position.

L. TILT CYLINDERS

1. General

The tilt cylinders (Fig 1-8) are used to tilt the mast assembly forward or backward. The cylinders, when activated by the control valve, receive oil under pressure in either forward or rear ports. As an example, the hydraulic oil enters the forward ports and forces the plungers backward. At this same moment, hydraulic oil is forced out of the rear ports of the cylinders by the plunger pistons and is returned to the reservoir through the control valve. When the hydraulic oil is directed to the rear ports of the cylinders, the opposite will occur.

2. Inspection

a. Oil Leakage Gland Nut

Check for oil leakage at the gland nut. Oil leakage at the gland nut indicates seals are worn; to stop leakage, remove gland nut with a spanner wrench and replace seals.

CAUTION

In the following checks **DO NOT** operate the control lever in the direction opposite to that specified in the procedure.

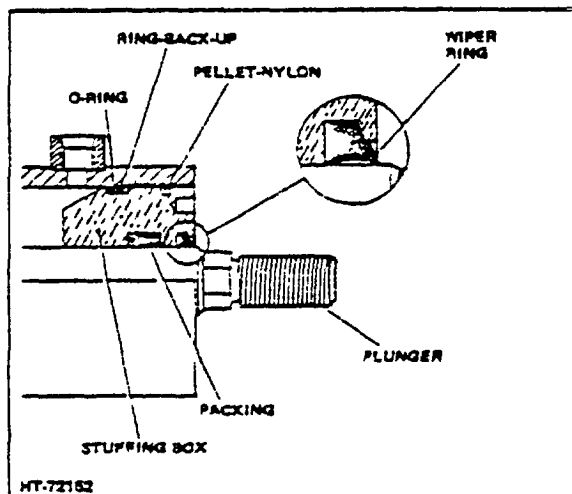


Figure 1-8. Tilt Cylinder

b. Oil Leakage Piston

Seal If mast assembly tilts too slowly or creeps under load, it is an indication that oil is leaking past piston seal in tilt cylinders. This can be checked as follows:

- (1) Tilt mast assembly forward to its extreme limit.
- (2) Loosen hose fittings at front port end of tilt cylinder.
- (3) With battery connected and engine running place and hold tilt control lever in forward position; check for oil flow through the front fittings of cylinders. If oil flows out of the opening of cylinder, remove cylinder and replace piston seal.
- (4) To check piston seal when mast assembly is at its extreme backward position, reverse the procedure in preceding Steps (1) thru (3).

M. STEERING

For POWER STEERING or POWER ASSISTED STEERING components maintenance refer to appropriate MAINTENANCE MANUAL MODULE.

N. SIDE SHIFT AND GUARD CYLINDERS (when applicable)

1. Service

Check the cylinder mountings when the truck is lubricated. Check stroke of two overhead guard cylinder plungers to make sure they are even. Uneven stroke can cause serious damage to cylinders, guard structure, and frame. Check for any oil leakage at the cylinder head and hose connections.

2. Oil Seepage Cylinder head

Oil seepage indicates the packing is worn and must be replaced. Check the plunger for scratches or score marks before installing new packing. Refer to Chapter II OVERHAUL.

3. Oil Seepage Piston Packing

If operation of side shift or guard is slow or sluggish, the oil could be leaking past the piston seal ring or packing cup. Check as follows:

- a. Extend cylinder to maximum limit.
- b. Disconnect hoses at front end of both cylinders.
- c. Hold control handle in fully extended position. Accelerate engine and check for oil flow through front port. If oil flows from port, remove cylinder and replace packing.
- d. Reverse operation to check cup packing.

COUNTERWEIGHT AND FRAME

TOPIC 1. COUNTERWEIGHT AND FRAME

A. DESCRIPTION

The lift truck frame design reflects the latest advancement in stress analysis engineering. This produces a lighter, stronger and less bulky unit. The major components of the frame consist of the base welded frame assembly, the counterweight, rear grille,

engine hood and side panels, seat support assembly and seat, the floor and toe plate, and the overhead guard assembly.' All of the above component parts are easily removed to facilitate quick repairs and easy accessibility during the maintenance routine.

TOPIC 2. COUNTERWEIGHT

A. GENERAL

Excepting the variable weight difference and subtle exterior design contours, there are two basic types of counterweight; one, the prevalent style which incorporates three or more mounting bolts, and the counterweight which incorporates only one attaching bolt (Fig. 2).

Certain care must be exercised during the removal and installation of the counterweights to prevent equipment damage or bodily injury.

B. 200 HOUR INSPECTION

After each 200 hour interval of operation, check counterweight mounting bolts for tightness. Make certain that tow stud or counterweight mounting bolts are tightened securely.

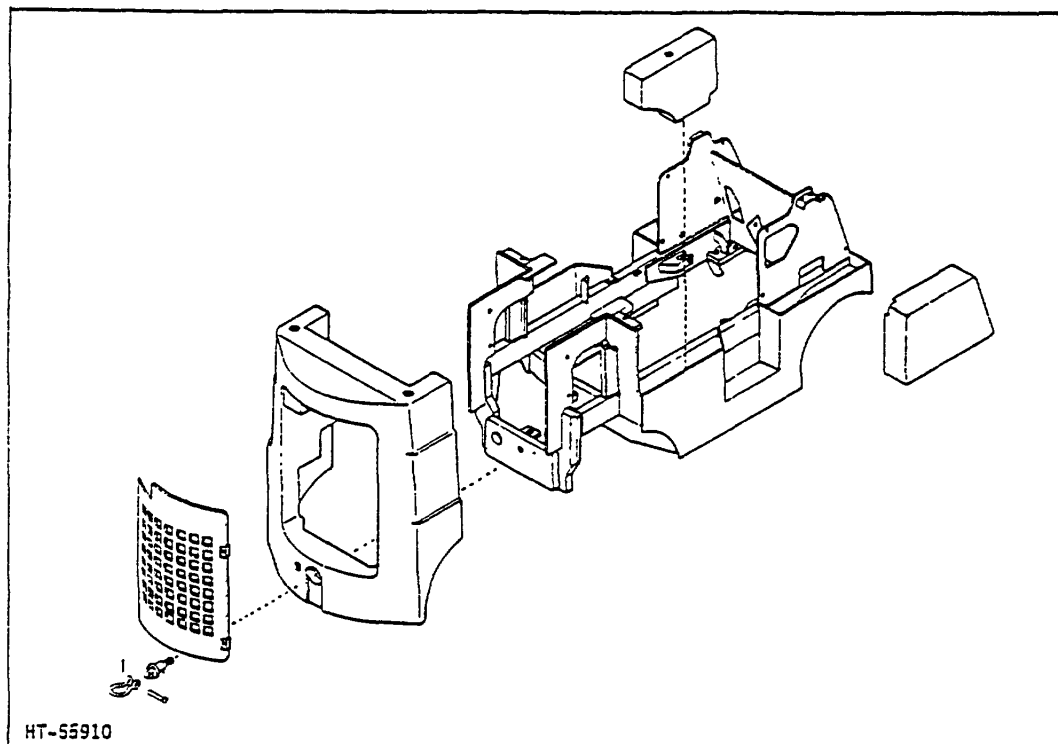


Figure 2. Counterweight and Frame (Typical) (Cushion Lift Truck)

NOTE

On Models ACP 100-120-140, the counterweight is utilized as a part or extension of the frame. Because of this the torque of the counterweight mounting bolts is important. Specified torque for the ACP 100-120-140 counterweight mounting bolts is 600 lb-ft.

C. REMOVAL

1. Ensure that lift truck is properly located under hoist chain for removal, and that truck is adequately blocked to prevent rolling.
2. Attach hoist chains to counterweight (eyelets, where applicable) and take up slack in chain.

WARNING

Be certain that hoist chain and lift are adequately rated for estimated counterweight mass density. Co not attempt to lift counterweight with a hoist rated below estimated counterweight mass.

3. applicable, remove the grille assembly mounting capscrews and lockwashers while supporting grille.

4. Remove grille and rear panel, if Installed.
5. Using the hoisting chain to relieve the pressure, remove mounting bolts (bolt), nuts (if so equipped), and washers.
6. Ensure that counterweight is free of attachment to truck frame, then very carefully lift counterweight up slightly and then out away from frame.

CAUTION

Be certain that counterweight clears hydraulic pump during removal. Failure to use care will result in unnecessary destruction of equipment.

7. Ensure that counterweight is properly balanced and blocked, if necessary, prior to disengaging hoist chains.

D. INSPECTION

Carefully inspect counterweight for fractures, particularly at mounting points, such as the bolt hole, and at right angle stress points.

It is common practice to replace, rather than attempt to repair a badly fractured counterweight. But when the truck is operated within reasonable stress limits and not abused, such damage is highly unlikely.

E. INSTALLATION

1. Ensure that rear of lift truck (counterweight mounting area) is clear of any obstructions prior to installation.

WARNING

Be certain that hoist chain and lift are adequately rated for estimated counterweight mass density. Do not attempt to remove or Install a counterweight with a hoist rated below estimated counterweight mass.

2. Securely attach hoisting chains to counterweight (eyelets, where applicable), then lift and maneuver counter weight into its relative mounting position on the lift truck frame.

CAUTION

Be certain that counterweight clears hydraulic pump during installation. Failure to use care will result in unnecessary destruction of equipment.

3. Carefully lower counterweight into mounting surfaces and keep enough tension in hoist to allow insertion and tightening of securing bolts. (bolt), lockwashers and nuts (nut). Refer to **NOTE** in preceding Paragraph B, 200 HOUR INSPECTION.)
4. Replace grille and rear panel, if applicable, and insert and tighten capscrews and lockwashers.
5. Ensure counterweight is properly secured and that hydraulic pump is intact.
6. Slowly play out hoist chain until there is enough slack to disengage chain hooks. Remove hoist chains.

TOPIC 3. BODY COMPONENTS

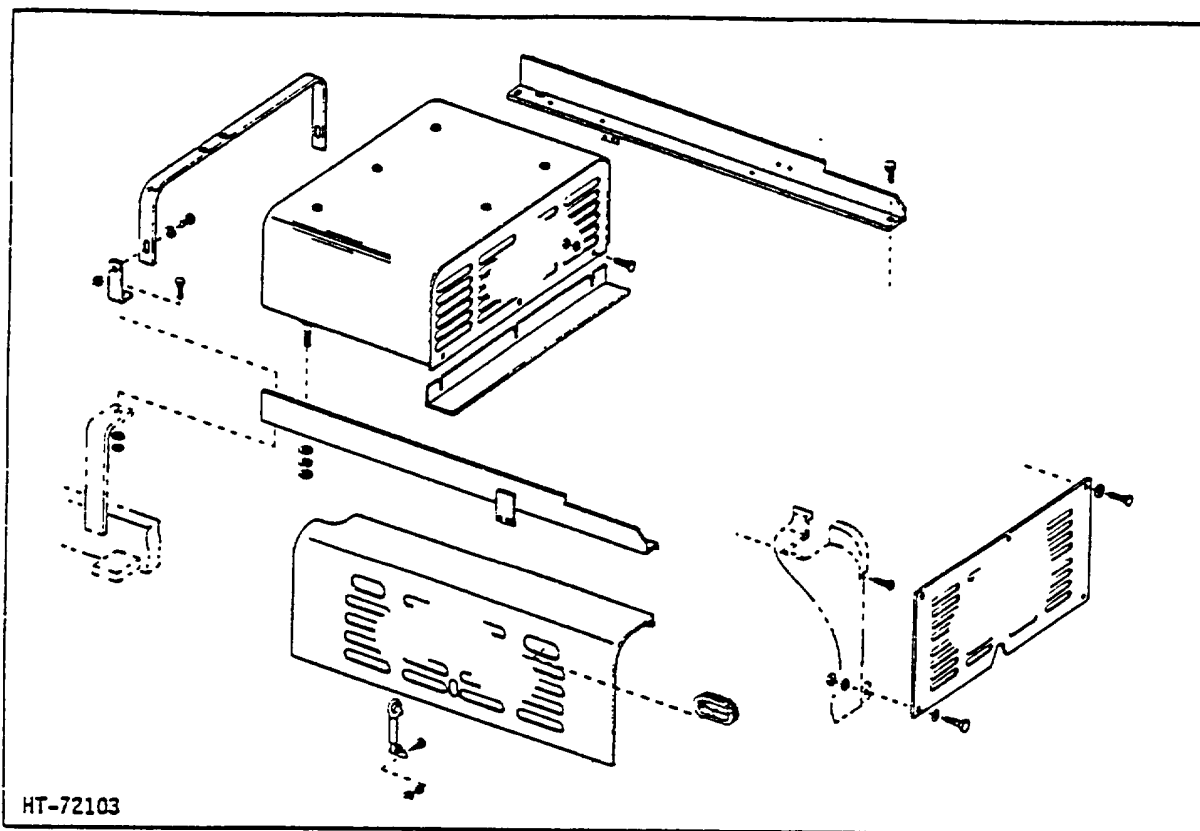


Figure 4. Engine Hood, Side Panels and Grille (Typical)
(Pneumatic Lift Truck)

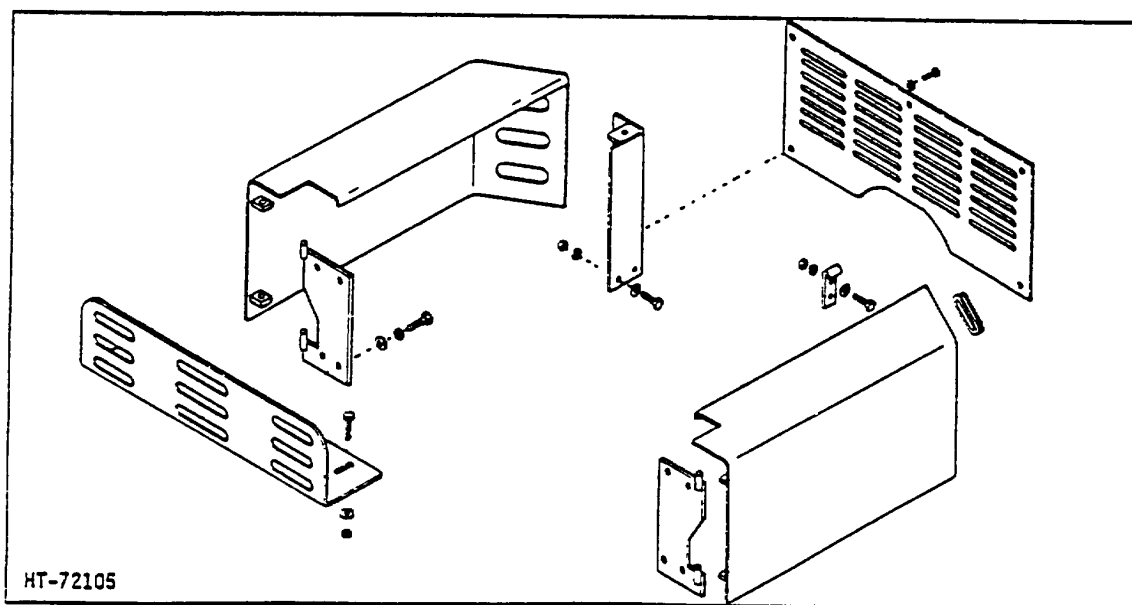


Figure 5. Side Panels and Grille (Typical)
(Cushion Lift Truck)

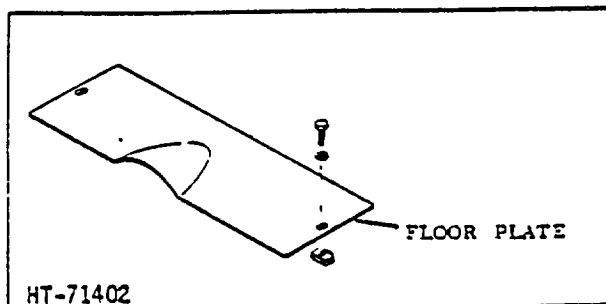


Figure 6. Floor Plate

A. HOOD AND SIDE PANELS

Figures 4 and 5 represent a non-specific, general representation of the engine hood, side panels and front engine grille typical to all lift truck models.

1. The side panels are normally secured with a spring type latch, the disengagement of which allows side panel -removal for service to engine.
2. The hood, cross assemblies, seat support assembly, and front grille are all attached with capscrews, lockwashers and nuts. To disassemble, simply study the inter-relationship of the parts of interest and remove the capscrews, lockwashers, nuts and parts required for access to component requiring service.
3. Reverse disassembly procedure, as required, to reassemble.

B. FLOOR AND TOE PLATE

Refer to Figures 6 and 7 to locate the floor and toe plates. As a rule the floor and toe plates will require no maintenance whatever, but are removed during normal maintenance routine to service items such as transmission, steering column, brake master cylinder, etc.

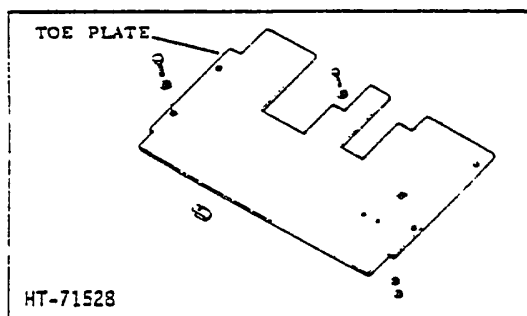


Figure 7. Toe Plate

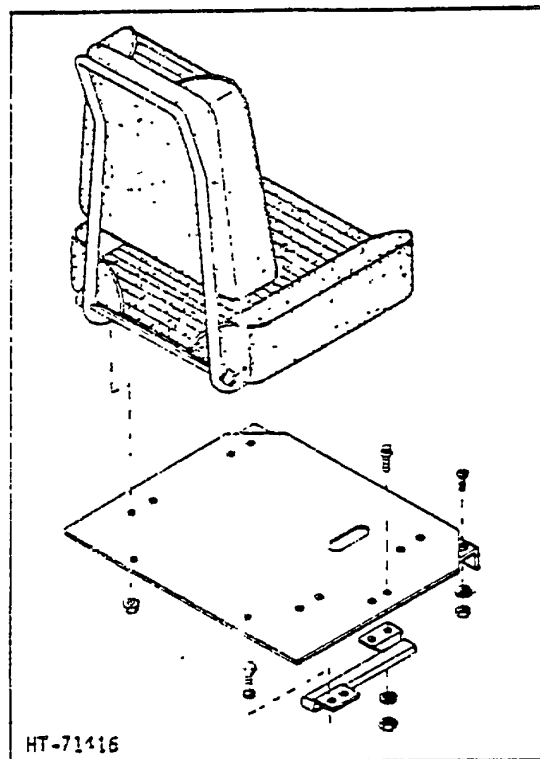


Figure 8. Seat Assembly

1. To remove floor and/or toe plate, simply remove capscrews and lockwashers and lift plate away from truck.
2. To install either or both plates, place in correct position, align holes and replace capscrews and lockwashers.

C. SEAT ASSEMBLY

The operator's seat has two vinyl covered, foam rubber cushions; one serves as a backrest and the other as the seat cushion. These cushions are contour for maximum comfort and reduced sliding.

The seat assembly (Fig. 8) has a forward/backward adjustment to allow for optimum pedal reach as desired by operator.

1. Should it become necessary to remove the operator's seat, simply remove the seat base assembly mounting capscrews and lift from truck.
2. To replace the operator's seat, place assembly in relative mounting position, align all holes and insert and secure capscrews and lockwashers.

TOPIC 4. OVERHEAD GUARD

A. GENERAL

The overhead guard is a safety feature which is supplied as standard equipment by Allis-Chalmers. Its tubular, all welded construction is designed for maximum operator visibility coupled with operator safety. The overhead guard complies with all safety specifications and standards set forth in ANSI 356. 1-1969 and by the Industrial Truck Association.

B. DAILY INSPECTION

Daily, inspect the overhead guard mounting plates (Fig. 9) ; make certain plates are securely mounted with the necessary capscrews, lockwashers, and nuts. Visually inspect the welded joints and structure for possible cracks.

C. REMOVAL AND INSTALLATION

The overhead guard assembly is simply taken off the truck, with the assist of a hoist chain, after the removal of the securing capscrews, lockwashers and nuts. (See Figure 9.)

To Install the overhead guard assembly, use hoist chain to position guard over relative mounting location, then

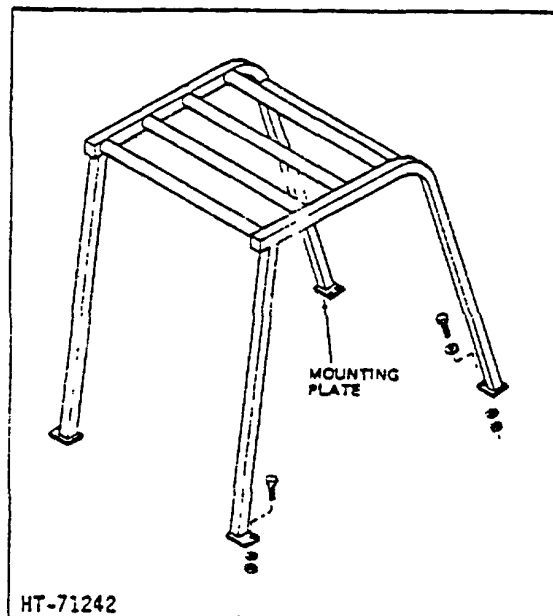


Figure 9. Overhead Guard Assembly (Typical)

insert capscrews with lockwashers and nuts, and tighten evenly and securely.

HIGH FREE LIFT MAST

TOPIC 1. GENERAL DESCRIPTION

The High Free Lift mast assembly includes of the following: parallel welded, telescoping uprights (channels or beams) actuated by hydraulically controlled lift cylinder(s), a carriage assembly, and adjustable lift forks.

Several mast assembly configurations are available, depending on the ultimate application of the lift truck. These masts are of the welded type construction and offer the operator a wide visibility range. The masts use shimmed canted roller bearings or wear plates and shims.

The canted roller type construction (Fig 1-1) utilizes ball bearings to provide friction free operation within the telescoping upright sections.

The wear plate type mast (Fig 1-2) utilizes wear plates which are installed at the top and bottom of the mast assembly. These keep the inner channel section centered within the outer section.

The fork and carriage assembly and the telescoping mast upright section is controlled by independent rollerless type lift chains.

The chains travel over anti-friction bearing guides for safety as well as functional assistance. Each chain has sufficient strength to safely handle the recommended load capacity.

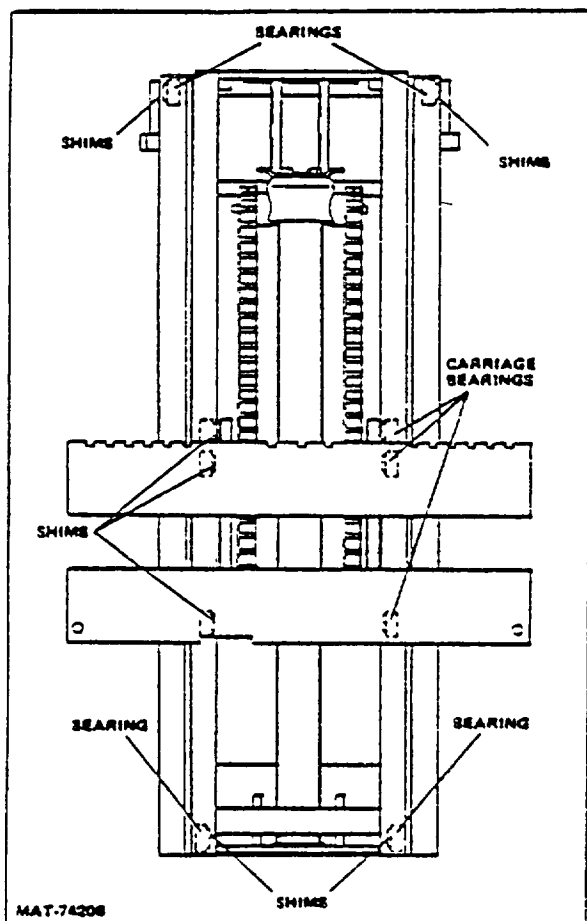


Figure 1-1. Canted Roller Type Carriage and Mast (Typical)

TOPIC 2. MAST ASSEMBLY

A. GENERAL

The conversion of the hydraulic system fluid energy into mechanical energy necessary in lift truck operation is accomplished by the mast assembly. The high free lift mast is constructed of two structural uprights. All high free lift masts utilize two (2) lift chains for safety and to minimize the effect of off center loading. The chain anchors are individually adjustable to ensure equal tension and a level fork carriage. The chains are centrally located so as to offset any bending action on the lift cylinder plunger(s).

Should it become necessary to re-center the mast uprights for smooth and even operation, the following alignment Procedures are provided (adjustment method varies with the model and load capacity of mast employed) : canted bearing type; wear plates and aligning shims; and roller bearings and aligning shims. Each of these methods of adjustment is detailed in the following Paragraph F, ADJUSTMENTS.

B. MAINTENANCE LUBRICATION

1. 50 Hour Service

After every 50 hours of operation, all inner and outer web surfaces of the mast uprights should be lubricated. To perform this requirement, Fully extend the mast; coat all inner and outer web surfaces of the mast uprights with a moderate amount of high quality Grade 2 wheel bearing grease or Grade 2 lithium base grease (characterized by the word "Moly"). Also lubricate all grease fittings.

2. 100 Hour Service

Lubricate interlock spacer and screw, located on inner section of cluster type or primary and secondary type cylinder mast. Use SAE 10 or 20 engine oil.

NOTE

The bearings used on the canted bearing type mast are the prelubricated type and do not require periodic lubrication. However, with this type of mast construction, the camber or roller site of the bearing is designed to thrust against the face of the mast uprights.

C. REMOVAL

CAUTION

Fully retract or lower lift cylinders.

1. Remove the carriage. (Refer to CARRIAGE MAINTENANCE MANUAL.)
2. With the mast fully lowered, attach a sling From an overhead hoist to the mast lift eyes to secure entire mast assembly during removal.

CAUTION

Be certain overhead hoist is rated to safely support mast assembly weight.

3. Disconnect tilt cylinders from outer mast.
4. Disconnect hydraulic hoses from lift cylinder: .

NOTE

Cap or plug hydraulic hoses and Inlet and outlet parts on lift and tilt cylinders to prevent contamination by foreign particles.

5. (PIVOT PIN TYPE) Remove lockwires, capscrews, and lockwashers which retain pivot pins to mast assembly. Raise overhead hoist high enough to relieve pressure on the pins and remove them. Use hoist to lay mast on suitable supports.

NOTE

Adjustment of anted bearing type mast must be made before reassembly of mast. (Refer to following Paragraph F, ADJUSTMENTS.)

D. DISASSEMBLY-INSPECTION

Refer to REPAIR MANUAL for proper DISASSEMBLY, INSPECTION, REPAIR and REASSEMBLY procedures.

E. INSTALLATION

1. Use a properly rated hoist and maneuver the mast assembly into its relative mounting position on front of lift truck.
2. Connect and properly secure the tilt cylinders.
3. Reinstall hydraulic hoses.
4. reinstall the carriage.
5. Lubricate mast uprights (Refer to preceding Paragraph B, MAINTENANCE LUBRICATION.)

TOPIC 3. LIFT CYLINDERS**A. GENERAL**

The hydraulic oil enters the lift cylinder at or near the base of the cylinder causing the plunger to extend.

A flow regulator, located at the oil inlet port of the lift cylinder, controls the outflow of hydraulic oil so that the load lowers at a controlled rate of speed from the raised position.

B. MAINTENANCE

1. 50 Hour Inspection

After each 50 hours of operation, inspect the mast lift cylinder, cylinder hoses, and fittings for evidence of leaks and repair as necessary.

2. 100 Hour Inspection

After each 100 hours of operation, wipe oil and foreign matter from lift chains and inspect them for bent or cracked links. Use a 1" paint brush and lubricate both sides of chains with SAE 20 engine oil. Wipe off excess oil with a clean rag. If chains are loose or carriage is not level, the chains must be adjusted. (Refer to following Paragraph E. LIFT CHAIN ADJUSTMENT.)

3. 500 Hour Inspection

Approximately every 500 hours of operation, remove the lift chains from mast assembly and clean them in an oil solvent solution (50% SAE-30 nondetergent engine oil and 50% suitable cleaning solvent). Soak chains in oil-solvent solution for about four (4) hours and agitate then several times during the soaking period. Remove chains from oil solvent and wipe off all of the cleaning solution. Inspect lift chains for wear and broken or cracked links. Replace entire chain if any links are broken or cracked. Install the chains; then use a 1" paint brush and lubricate both sides of chains with SAE-20 engine oil. Wipe off excess oil with a clean cloth. Adjust chains so fork carriage is level and all slack is removed from the lift chains.

C. LIFT CYLINDER-CLUSTER REMOVAL (20-55 SERIES)

1. With lift cylinders fully retracted and carriage resting on ground, disconnect lift chains from cylinder cluster.
2. Disconnect hydraulic hoses, and fittings (including flow-regulator), and plug or cap all hydraulic openings to prevent entry of any contaminants.

3. Remove the crosshead assembly, ram protecting rod, chain and guard from cluster cylinder assembly.
4. Remove cylinder cluster retaining nut (or retaining plate as applicable) at bottom of outer mast.
5. Remove the capscrews, lockwashers, and spacers at the top of the Inner mast upright.
6. Carefully remove the cylinder cluster from the outer and inner masts.

NOTE

Refer to **REPAIR MANUAL** for **DISASSEMBLY, INSPECT: ON, REPAIR and REASSEMBLY.**

D. LIFT CYLINDER-CLUSTER INSTALLATION (20-55 SERIES)**CAUTION**

Prior to lift cylinder installation, be certain that all hoses and fittings are clean and that there is no foreign matter in the cylinder inlet port.

1. install all fittings and clamps previously removed from cylinder, and install the low regulator.
2. To install the cylinder cluster assembly, first ensure that the crosshead assemblies and ram protectors have been correctly installed at the outer cylinder rims, and that the chair adjusting screws and locknuts have been installed.
3. Attach a properly rated hoist chain to the cylinder cluster assembly and maneuver cluster assembly into its relative mounting position within the inner and outer masts.
4. Install attaching capscrews and lockwashers which secure the cylinder cluster to inner mast. Tighten mounting capscrews.
5. install and reconnect the cylinder cluster adjusting screws.

NOTE

Refer to **LIFT CHAIN ADJUSTMENT Paragraph E of this Topic, prior to operational use of lift truck.**

NOTE

Refer to following paragraph F for
LIFT CYLINDER BLEED SERVICE.

E. LIFT CHAIN ADJUSTMENT

When it becomes apparent that the fork carriage is not level, that the lift chains are loose, or that the forks (or attachments) are higher than .25" to .50" above the floor when the lift cylinder is fully lowered, then the lift chains require adjustment.

NOTE

ALL CLUSTER CYLINDERS are
adjusted with the **PRIMARY**
Cylinders **FULLY** extended.

To adjust the chain length, refer to Figure 3-1 for a general view of chain anchor and use the following outline:

1. Position the mast assembly so it is vertical. Ensure that the inner mast section and lift cylinder are in the fully lowered position.
2. Loosen the chain anchor locknuts (Fig 3-1).
3. Chain tension is adjusted by increasing or decreasing the chain lengths with the adjusting nuts. Alternately tighten or loosen the chain on one side and then on the opposite side, until the chains are snug, with no slack and carriage forks clear the floor within .25" to .50".
4. Make certain that the lift chain tension is equal on each chain and that the fork carriage is level.
5. After the adjustment is completed, tighten the locknuts securely and make certain anchors were not turned.

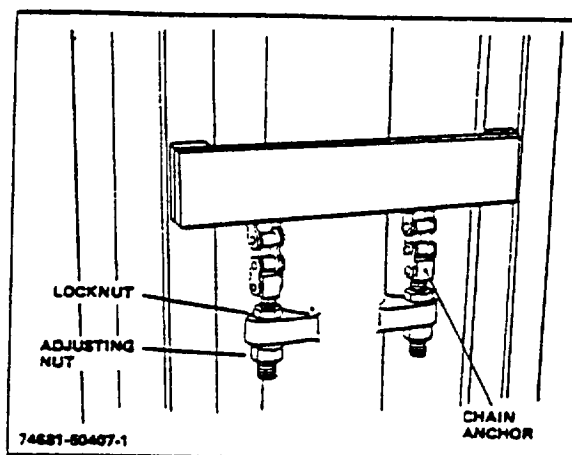


Figure 3-1. Chain Adjustment (On Cylinder)

F. LIFT CYLINDER BLEED SERVICE

1. Raise mast until forks are approximately 3 feet off of the ground.
2. Open cylinder bleed screw(s).

Leave open until a stream of PURE HYDRAULIC OIL comes out.

NOTE

Be sure the oil being emitted is free of any air bubbles that may be seen only under close inspection. Leave bleed screws open until pure oil comes out.

3. Close bleed screw(s) tight.
4. Check hydraulic oil level; fill if required with pre-filtered specified oil.
5. Raise and lower mast to check for leaks, if any, and repair as necessary.

TOPIC 1. CARRIAGES

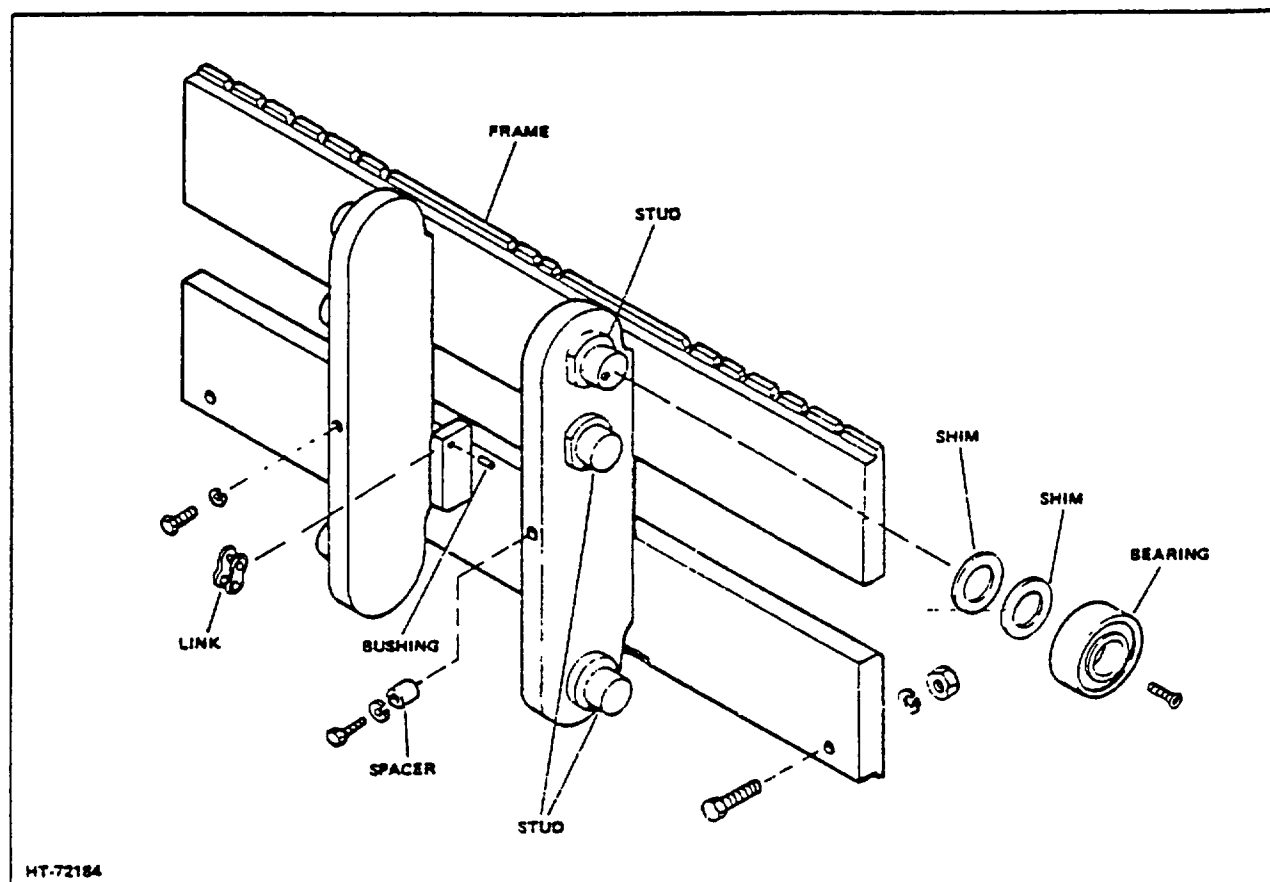


Figure 1. Hook Type Carriage Assembly (Typical)

A. DESCRIPTION

The carriage assembly is a heavy duty structure of welded steel, built to provide ultimate strength and visibility, with a minimum of overhang from the center of the drive wheels to the face of the forks. The carriage assemblies are of different types and include: adjustable canted roller bearings (Fig 1),

An optional item used in conjunction with the carriage assembly is the backrest. This assembly is a welded metal frame which is attached to the carriage (in front of the uprights vertically), and serves to prevent loads from resting against the mast when the mast is tilted back. It also keeps loads from falling back onto the operator.

B. REMOVAL (EXTRA-LIFT AND HIGH FREE LIFT 3,500 14,000 lb and ALL TRI-MAX)

NOTE

If backrest is used, simply attach a properly rated hoist to top of backrest, remove capscrews which attach backrest to carriage, and lift backrest free of carriage.


CAUTION

Be certain overhead hoist is rated to safely support carriage assembly weight.

1. Place two pieces of wood, approximately 2" thick, underneath forks (or attachments), (one towards front of the forks and one underneath carriage frame).
2. Remove carriage stop capscrews (or stop, if applicable).
3. Remove lift chain anchor pins (or connecting link, if applicable), and disconnect chains from carriage.
4. Ensure that no attachments secure the carriage to the mast. Start engine and raise inner mast high enough to clear inner mast uprights.
5. Back lift truck out of the way and move carriage to desired location.

NOTE

If carriage is of the canted bearing design, it must be adjusted before installation. Refer to following PARAGRAPH C, ADJUSTMENT.

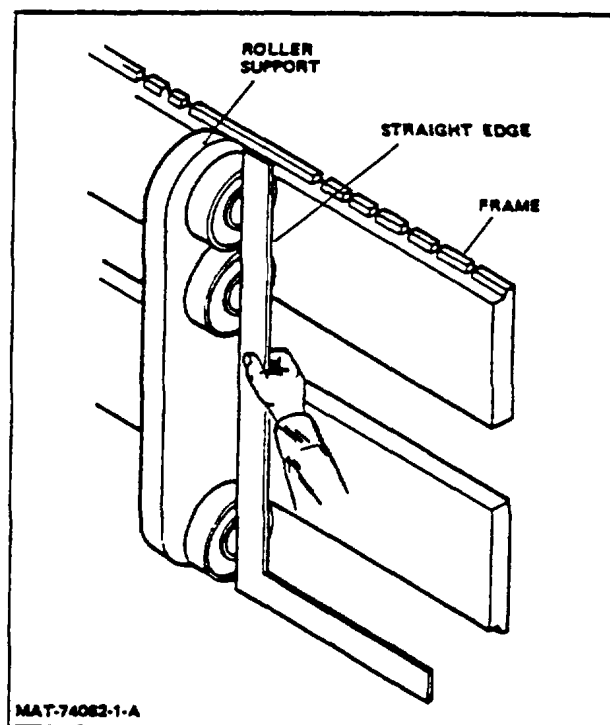

MAT-74082-1-A

Figure 3. Checking Bearing Alignment

C. ADJUSTMENT-CANTED BEARING TYPE (Figure 1)

1. Use an inside spanning tool and check inside of web of inner mast assembly and determine narrowest point where bearings contact inner mast uprights.
2. Set outside spanning tool to match inside spanning tool. Lock tool in position.
3. Install bearings on roller studs on carriage. Span bearings on carriage assembly at the maximum camber point with outside spanning tool. Span all sets of bearings. Shim bearings to produce maximum .015 inch clearance with spanning tool.
4. To check bearing alignment, place a straightedge against stud centerline to all bearings on both sides of carriage assembly. No visible gap should be seen between bearings and the straightedge (Fig 3).

D. INSTALLATION (EXTRA-LIFT AND HIGH FREE LIFT 3,5000 14,000 lb AND ALL TRI-MAX)

1. Raise inner mast high enough to clear carriage assembly bearings.
2. Position lift truck so that inner mast uprights are directly centered over carriage bearings. Slowly lower inner mast making sure carriage bearings slide into inner mast uprights.
3. Reinstall carriage stop capscrews (or stop, if applicable).
4. Reinstall lift chain anchor pins (or connecting link, if applicable), and reinstall lift chains.

TOPIC 2. SIDE SHIFTER (PRT only)

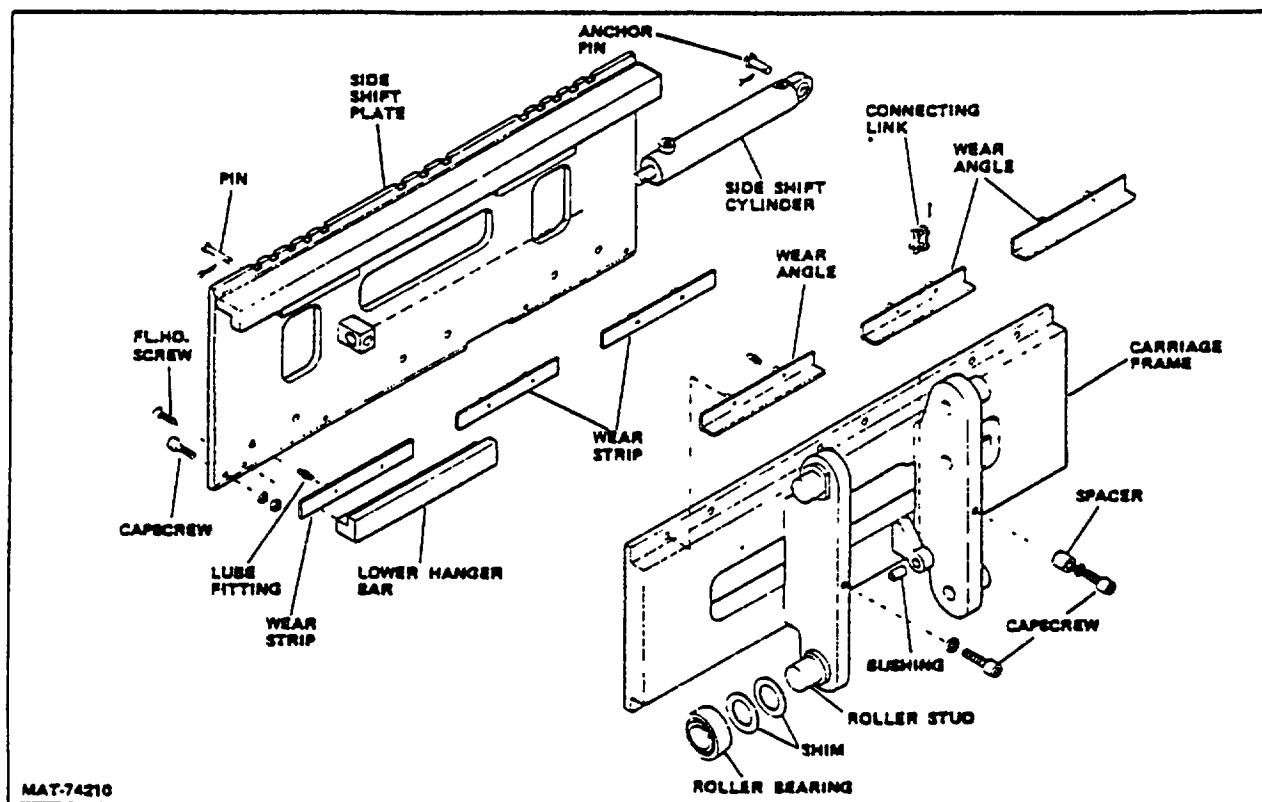


Figure 7. Side Shift Components

A. DESCRIPTION

The integral side shift carriage enables the operator to rapidly and accurately position loads and to make more efficient use of available storage areas with a minimum of lift truck jockeying.

The cylinder is enclosed within the steel structure of the carriage frame, minimizing the possibility of damage.

Wear strips and angles are provided which virtually eliminate sliding friction. Several grease fittings are installed at the wear points to ensure proper lubrication. Lubricate these fittings every 50 hours of operation.

B. REMOVAL/INSTALLATION

First disconnect hydraulic hoses at junction block on carriage frame, then refer to TOPIC 1, and perform applicable removal (or installation) procedures.

NOTE

See TOPIC 1 for bearing adjustment.

C. SIDE SHIFTER CYLINDER REMOVAL

1. Remove cotter pin and rod pin from cylinder rod.
2. Retract cylinder rod far enough to clear rod retainer on side shift plate.
3. Disconnect hydraulic hoses from cylinder. Plug cylinder ports and hydraulic hose ends to prevent entry of foreign material.
4. Remove cotter pin and cylinder retaining pin and lift out cylinder.

D. SIDE SHIFTER CYLINDER INSTALLATION

1. Install anchor pin and cotter pin to cylinder and carriage frame.
2. Connect hydraulic hoses.
3. Extend cylinder rod and install retaining pin and cotter pin.

TOPIC 3. FORKS

A. DESCRIPTION

Basically, there are two types of lift forks; the shaft style (Fig 8) which pivots on a horizontal support shaft, and the more commonly used hook style fork (Fig 9) which hooks into notches along the top edge of the fork carriage. The standard or hook type fork will be discussed here. Any differences will be noted in shaft type removal and installation.

The forks should always be adjusted on the carriage to obtain the optimum balance in proportion to the width of the anticipated loads.

A fork lock (Fig 10), is installed in the top of each of the hook type forks to hold it in position in one of the notches along the top bar of the carriage. To change the fork location, pull up on the lock and move fork to the left or right. Allow fork lock to seat in the notch nearest to location chosen.

The forks can be easily removed from the carriage by releasing the locks and aligning each fork with the wide removal slot (see Fig 10), at the bottom of the fork carriage. (Refer to following REMOVAL procedures for detailed instructions.)

CAUTION

Naturally, the weight of each fork depends upon its size. Therefore, exercise caution while fork is being removed from the carriage to avoid injury to personnel and to prevent damage to the equipment.

B. REMOVAL

1. Lower fork carriage until base of fork just clears the floor.
2. Release the fork lock pin and slide fork to a position over the cut-out in the lower carriage bar. (Fig 10.)
3. Tilt the lower portion of the fork forward and up, releasing the lower hanger (Fig 9), from the lower carriage bar.
4. Refer to cautionary note in Paragraph A above, and lift fork off upper carriage bar.

C. SERVICE

1. Inspect hook fork and locking mechanism for any evidence of wear or damage.
2. If locking mechanism is worn or damaged, remove and replace it as a unit.

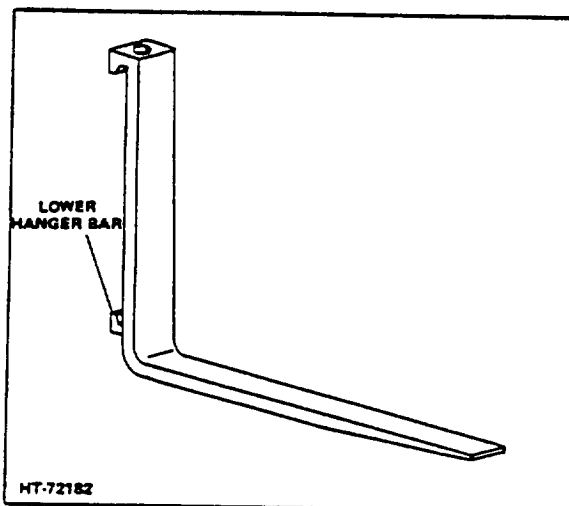


Figure 9. Hook Style Fork

3. If fork is defective, then replace with same type and capacity rated fork.

D. INSTALLATION

1. Carefully lift fork up onto upper carriage mounting slot, then slowly lower until back of fork rests against carriage face and bottom fork hook passes through lower carriage cutout.
2. Release the fork lock pin and slide fork left or right until properly positioned for anticipated load clearance/balance requirements.

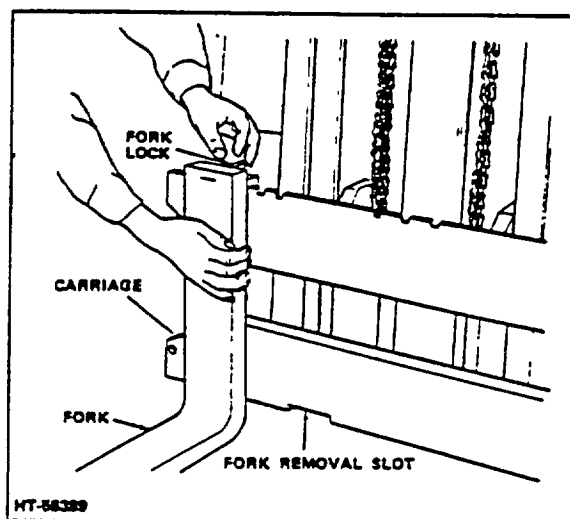


Figure 10. Fork Adjustment and Removal

TROUBLESHOOTING

TOPIC 1. TROUBLESHOOTING CHARTS

A. GASOLINE FUEL SYSTEM

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Engine hard to start or will not start.	Air in line.	Locate cause of air entry and repair or replace defective part.
	Water in the fuel.	Let stand. When the water has settled to the bottom, drain it from the carburetor, fuel pump sediment bowl, and fuel tank.
	Gasoline flow obstructed.	Check fuel lines, carburetor screen, fuel valves, fuel pump, and fuel pump sediment bowl. Locate and remove obstructions.
	Carburetor choke not set properly.	Adjust.
Engine stops suddenly.	No fuel.	Refill tank.
	Dirt in fuel.	Drain out. Refill with fresh fuel only after sediment bowl, carburetor, and gasoline tank have been cleaned.
	Dirt in filter.	Clean carburetor and air filters.
	Water in fuel.	See Engine Hard to Start
	Plugged fuel line.	Disconnect fuel lines: blow out or remove obstruction.
	Air leak in fuel line or at fuel pump.	If in line, tighten connections or replace faulty tubing. If at fuel pump, repair fuel pump.
	Faulty fuel pump.	Repair fuel pump.
Engine knocks.	Improper fuel.	Drain complete fuel system. Refill with proper fuel.
	Lubricating oil thin or dirty.	Drain oil pan, clean out filter housing, replace with new filter, and add new oil of correct viscosity for the prevailing temperature.
	Carburetor choke not set properly.	Adjust.
Loss of power	Low oil pressure, due to (a) external oil leaks, (b) thin oil, or (c) sticking of oil pressure relief valve.	(a) Repair leaks by tightening the connections or replacing the line. (b) drain and fill with fresh oil. (c) remove oil pressure relief valve and clean. Do not stretch spring.
	Air leak at fuel line or fuel pump.	Tighten connection, or if leak is in the fuel pump, tighten or repair pump
	Air cleaner obstructions.	Clean air cleaner and tubing; tighten connections.

A. GASOLINE FUEL SYSTEM (CONT)

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Loss of power. (Continued)	Choke valve out of adjustment.	Adjust.
	Improper fuel.	Use only a good grade of gasoline.
	Improper governor adjustment.	Adjust link rod.
Engine runs irregularly (sputters).	Air leaks in carburetor gaskets.	Tighten or replace gaskets in carburetor.
	Partially closed tank shut-off.	Open.
	Water and sediment in carburetor.	Let water settle to bottom and drain. Drain out sediment. and clean screens. Check source of supply.
	Fuel lines partially blocked.	Check line; remove obstruction and any kinks in tubing.
	Fuel pump failure.	Repair or replace pump.
	Clogged air cleaner.	Clean.
	Loose jets in the carburetor.	Remove carburetor and tighten.
Smoky exhaust.	Carburetor float sticking. (Black smoke.)	Tap carburetor lightly with hammer handle. If this does not correct the situation. carburetor must be cleaned.
No gasoline at the carburetor.	Fuel pump faulty. clogged suction line.	Check the fuel lines between the tank and the fuel pump and the carburetor.
	Float stuck (dirty needle valve).	Tap the carburetor bowl gently. Or remove the carburetor. and clean the needle valve and float chamber.
	Fuel tank empty.	Refill.
	Air leak.	Check all connections and fuel lines between the carburetor. fuel pump. and tank.
Engine surges.	Surge screw out of adjustment (governor).	Adjust.
	Lean gasoline mixture. Water in the gas.	Adjust carburetor. Drain gas tank. Check source of supply.
Carburetor leaks gasoline with idling.	Float stuck (dirty needle valve).	Tap carburetor gently to dislodge the dirt in the fuel valve. If this does not correct the condition, remove the carburetor and clean the valve.
	Float level incorrect.	Adjust.
	Drain plug not tight.	Tighten.

B. COOLING SYSTEM

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Loss of coolant.	Leaks at hose or hose connections.	Replace hose.
	Cracked engine block or head.	Replace damaged part.
	Defective head gasket.	Replace.
	Leaking radiator.	Repair or replace.
	Drain cocks loose or open.	Repair.
	Leaking water pump.	Repair or replace.
Overheating.	Inoperative Instrument panel gauge or sending unit.	Replace inoperative unit.
	Thermostat does not open.	Replace thermostat.
	Loose fan belt.	Adjust or replace belt.
	Surface of radiator core clogged.	Clean the core.
	Obstruction in cooling system.	Clean out cooling system.
	Damaged or worn out water pump.	Repair or replace.
	Leak In cooling system.	Repair.
Rapid wear or breakage of fan belt.	Incorrect adjustment.	Readjust.
	Incorrect belt.	Replace with correct type.
	Fan blades striking belt.	Repair or replace fan.
	Excessive alternator drag.	Check alternator bearings.
	Broken or rough pulleys.	Replace pulleys.
Fan or water pump noisy.	Worn or damaged bearing or seal.	Replace worn or damaged parts.
	Loose fan blades.	Repair or replace fan.
	Broken pump impeller.	Repair.
	Excessive pump shaft end play.	Repair.
	Loose fan hub.	Tighten.

C. HYDRAULIC SYSTEM

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Unable to lift or tilt load.	Load too heavy.	Check capacity on Serial No. Plate.
	Insufficient or no oil.	Check tank for proper oil level and plugged suction line.
	Air leak at suction line.	Tighten connections.
	Damaged or worn pump.	Remove and repair.
	Relief valve binding open.	Remove and repair.
	Broken lift chains.	Repair.
	Obstruction in hydraulic lines.	Check flow of oil from pump through hydraulic system.
	Damaged lift cylinder.	Check for binding or any reason for inoperative plunger.
Lift and tilt too slow.	Control valve inoperative.	Inspect for internal leakage or damaged parts and repair.
	Engine speed governed too low.	inspect governor controls and adjustment.
	Internal leakage at pump.	Inspect for worn or damaged parts.
	Excessive leakage at cylinder packing.	Repair or replace packing.
	Air leaks in system.	Tighten all connections.
	Misalignment.	Check masts, carnage or tilt linkage for cause of binding.
Load creeps-tilting or lowering.	Faulty relief valve.	Check for worn or damaged parts. Repair or replace. Check relief valve setting.
	Internal leakage in cylinders.	Repair or replace packing.
	Oil leak at packing glands.	Repair or replace packing.

C. HYDRAULIC SYSTEM (CONT)

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Load creeps-tilting or lowering. (Continued)	Leak in control valve.	Check for worn or damaged plungers.
	Leaks in oil lines.	Tighten all connections or replace damaged lines.
Noisy hydraulic pump.	Insufficient or no oil.	Check tank for proper oil level or restricted suction line.
	Air leaks.	Tighten intake connections.
	Air bubbles in intake oil.	Use hydraulic oil with antifoaming characteristics.
	Oil reservoir breather restricted.	Replace breather.
	Coupling misalignment.	Realign.
	Pump head loose.	Tighten.
	Worn or broken parts.	Replace.
Hydraulic-oil overheating.	Pump too tight after overhaul.	Remove and repair.
	Restricted lines.	Check and repair.
	Relief valve set too high.	Valve should be set as recommended.
	Incorrect oil.	Drain. replace filter and use only recommended oil.
	Internal oil leakage.	Repair or replace pump.

D. DRIVE UNIT

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Failure to operate.	Broken jackshaft/axleshaft.	Replace jackshaft/axleshaft.
	Teeth broken out of jackshaft. bull gear. axleshaft. or planetary cluster.	Replace jackshaft, bull gear. axleshaft, or planetary.
	Broken teeth on ring gear or pinion.	Replace ring gear and pinion.
Axle noise on drive or coast.	Excessive wear at ring gear and pinion.	Adjust. if possible. or replace.
	Worn pinion gears or side gears in differential case.	Replace worn gears.
Continuous axle noise.	Excessive wear in gears.	Replace worn parts.
	Lack of lubrication.	Lubricate with specified lubricant.
	Uneven tire wear.	Replace tires.
	Worn or damaged bearing.	Replace bearings.

D. DRIVE UNIT (CONT)

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Excessive back-lash on unit.	Worn splines on jackshaft/axle-shaft.	Replace jackshaft/axleshaft.
	Worn ring gear or pinion.	Replace gear and pinion.
	Loose or worn universal joints.	Tighten or replace.

E. HYDRAULIC BRAKE SYSTEM

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Pedal goes to toe board.	Normal lining wear.	Check, repair, or replace self-adjuster.
	Low fluid level in master cylinder.	Fill reservoir and bleed lines.
	External leak in brake system or leak past master cylinder piston cup.	Check system for leak and repair.
	Air trapped in hydraulic system.	Bleed system.
Both brakes drag.	Pedal lash not correctly adjusted.	Readjust to correct lash.
	Mineral oil in brake system.	Clean out system, replace cups in wheel cylinders and master cylinder. Refill master cylinder with specified brake fluid and bleed brake system.
	Breather port in master cylinder clogged.	Clean out breather port.
One wheel drags.	Weak or broken brake shoe return springs.	Replace broken or weak springs.
	Brake shoe or drum clearance too small.	Check, repair, or replace self-adjuster.
	Tight wheel bearing.	Readjust.
	Obstruction in brake line.	Remove obstruction or replace line.
	Swollen wheel cylinder piston cups or piston binding.	Replace defective or damaged parts.
Truck pulls to one side.	Grease or brake fluid on brake lining.	Replace with new lining.
	Loose wheel bearings.	Readjust.
	Different makes of brake lining.	Make sure same type of lining is used at each wheel.
	Brakes incorrectly set.	Readjust.
	Uneven tread wear.	Replace tires.

E. HYDRAULIC BRAKE SYSTEM (CONT)

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Truck pulls to one side. (Continued) Brakes spongy.	Lining charred or drum scored.	Replace lining or repair or replace drum.
	Adjusting cams loose.	Repair.
	Air trapped in brake system.	Bleed brake system.
	Brake adjustment not correct.	Check and/or replace self-adjuster.
	Shoe surface not square with drum.	Repair.
Excessive pedal pressure.	Brake adjustment not correct.	Check and/or replace self-adjuster.
	Incorrect brake lining.	Install specified lining.
	Oil or fluid soaked lining.	Replace lining.
	Lining making only partial contact.	Realign brake shoes.
Light pedal pressure- brakes too - severe.	Brake adjustment not correct.	Check and/or replace self-adjuster.
	Small amount of grease or brake fluid on lining.	Correct cause and replace lining.
	Incorrect lining.	Install specified lining.
Brakes squeak.	Brake shoes twisted.	Repair.
	Particles of metal or dust imbedded in lining.	Remove foreign material; sand lining to drum.
	Chamfer at end of lining too short.	Elongate chamfer.

F. POWER STEERING SYSTEM

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Hard steering.	Failure of pump.	Replace or recondition.
	Badly worn pump.	Recondition pump.
	Broken or weak relief valve spring.	Replace spring.
	Binding relief valve.	Free valve.
	Low pump pressure.	Replace worn or faulty parts.
	Line leakage.	Tighten connections.
	Low oil level.	Fill reservoir to correct level.
	Bent linkage.	Replace damaged parts.
	Improper wheel alignment.	Align wheels.

F. POWER STEERING SYSTEM (CONT)

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Hard steering. (Continued)	Lack of lubrication.	Lubricate.
	Leakage in steer cylinder.	Repair.
	Air in system.	Bleed the system.
	Faulty regulator valve.	Recondition valve.
	Faulty control valve.	Repair or replace.
Steering too sensitive.	Faulty flow control valve.	Recondition - free any binding parts.
Loose steering.	Wheels out of alignment.	Align wheels.
	Loose linkage.	Tighten linkage or replace.
	Worn king pins.	Replace.
	Wheel bearings loose or worn.	Adjust bearings or replace.
	Air in system.	Bleed the system.
	Steering gear out of adjustment.	Adjust cam and worn shaft.
Low oil pressure.	Low oil level.	Fill reservoir to correct level.
	Worn pump.	Recondition or replace.
	Weak relief valve spring.	Replace spring.
	Relief-valve stuck open.	Remove and free valve.
	Flow control valve stuck open.	Free flow control valve.
	External leakage.	Tighten or replace fittings, hoses. or seals.
Internal leakage.	Replace seals in valves or cylinders.	

G. MAST HYDRAULIC SYSTEM

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Unable to lift or tilt load.	Relief valve binding open.	Remove and repair.
	Broken lift chains.	Repair or replace.
	Obstruction in hydraulic lines.	Check flow of oil from pump through hydraulic system.
	Damaged lift cylinder.	Check for binding or any reason for inoperative plunger.
	Load too heavy.	Check capacity on Serial No. Plate.

G. MAST HYDRAULIC SYSTEM (CONT)

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Lift and tilt too slow.	Engine speed governed too low.	Inspect governor controls and adjustments
	Excessive leakage at cylinder packing.	Repair or replace packing.
	Air leaks min system.	Tighten all connections.
	Misalignment.	Check masts carriage or tilt linkage for cause of binding.
	Faulty relief valve. replace. Check relief valve setting.	Check for worn or damaged parts. Repair or
Load creeps-tilting or lowering.	Internal leakage In cylinders.	Repair or replace packing.
	Oil leak at packing glands.	Repair or replace packing.
	Leaks in oil lines.	Tighten all connections or replace damaged lines.
Oil over-heating.	Relief valve set too high.	Valve should be set as recommended.

H. POWER SHIFT TRANSMISSION

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Transmission won't shift into gear/out of gear.	Improperly adjusted or disconnected linkage.	Adjust or reconnect shifting linkage.
	Transmission overheated.	Check fluid level; refill to proper level if low. Check for leaks. Check specified operating pressures.
	Defective pump.	Repair or replace as necessary.
	Defective control valve.	Repair or replace as necessary.
Transmission is sluggish/jerky.	Parking brake not released.	Release parking brake: check parking brake drum for any possible damage.
	Fluid level low.	Check fluid level; refill to recommended capacity if necessary.
	Faulty or worn components.	Check torque converter operation. pump. clutch-pack, control valve. Check the specified operating pressures. Repair or replace any defective parts.
Transmission does not shift smoothly.	Linkage improperly adjusted.	Adjust shifting linkage.
	Fluid level low.	Check fluid level; refill to recommended level if necessary.
	Malfunctioning control valve.	Verify proper operation of control valve; repair, adjust or replace if necessary.

H. POWER SHIFT TRANSMISSION (CONT)

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Inching pedal does not slow or stop truck.	Improperly adjusted.	Adjust inching pedal stop bolt.
Transmission won't shift into LOW or HIGH gear speed. (If so equipped.	Improperly adjusted or disconnected linkage.	Adjust or reconnect shifting linkage.
	Fluid level low.	Check fluid level; refill to recommended capacity If necessary.
Transmission "Jumps" out of "ear.	Improperly adjusted linkage.	Adjust linkage.
	Mechanical obstruction.	Inspect linkage for any improper routing or possible obstruction that forces linkage out of desired position; remove obstruction.

I. ELECTRICAL SYSTEM

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Ammeter reading "Zero" with ignition switch "On" and engine being rotated.	Defective ignition switch.	Replace switch.
	Defective ammeter.	Replace.
	Broken or loose wiring at ignition switch.	Repair or replace wiring.
Ammeter does not show charge.	Defective regulator.	Adjust or replace regulator.
	Defective stator.	Repair or replace windings.
	Worn-alternator brushes.	Replace brushes.
	Shorted alternator armature.	Repair or replace armature.
	Defective rectifying diodes in alternator.	Replace.
	Shorted alternator fields.	Repair or replace alternator.
	Slip rings dirty or worn.	Clean slip rings or repair or replace alternator .
Defective wiring.	Check for loose, broken, or disconnected wires.	
Ammeter shows excessive charge	Defective current control in regulator.	Repair or replace regulator.
	Battery run down.	Recharge or replace battery.
	Defective alternator.	Repair or replace.
	Defective ammeter.	Replace.

I. ELECTRICAL SYSTEM (CONT)

TROUBLE	PROBABLE CAUSE	POSSIBLE SOLUTION
Ammeter shows discharge during engine operation.	Inoperative alternator.	Repair or replace.
	Faulty regulator controls.	Replace regulator.
	Shorted circuit.	Check for faulty circuit and repair.
	Fan belt loose or broken.	Adjust or replace belt.
Excessive battery water usage.	Shorted batter, cell.	Replace.
	High regulator setting.	Adjust.
Starting motor failure.	Broken connections.	Reconnect or replace wires.
	Faulty switches.	Check ignition switch or starter button.
	Battery dead or low charge.	Replace or recharge battery. Check for low regulator setting.
	Commutator dirty.	Clean.
	Worn brushes.	Replace.
	Broken drive.	Replace.
Ammeter shows heavy discharge with- engine stopped.	Shorted circuits.	Trace wiring for shorts.
	Defective voltage regulator.	Inspect for closed contacts. Adjust or replace regulator.
	Defective ammeter.	Replace.
Ammeter shows rapid fluctuation.	Loose alternator drive belt.	Readjust.
	Shorted or loose connections.	Trace wiring. for breaks or looseness.
	Dirty, loose, or worn alternator brushes.	Clean and lighten brushes. Replace If worn.
	Defective alternator.	Repair or replace.
	Voltage regulator out of adjustment.	Readjust.
Horn does not blow.	No current to horn.	Check for broken wire or dead battery.
	Faulty horn button.	Check for faulty ground or replace horn button.
	Defective horn.	Replace.
	Defective horn relay.	Replace.
Hon blows continuously.	Grounded horn wire.	Eliminate ground. Check for frayed wire.
	Shorted horn.	Replace horn.
	Defective horn button.	Replace.
	Faulty relay.	Replace.

LUBRICANT AND FUEL SPECIFICATIONS

TOPIC 1. LUBRICANT SPECIFICATIONS

A. ENGINE LUBRICATING OIL

The basic requirements for lubricating oils used in Allis-Chalmers engines are:

1. Maintain pistons, rings, and other moving parts in a carbon free, varnish free, and clean condition.
2. Maintain enough body to satisfactorily lubricate the moving parts at maximum oil temperatures.
3. Prevent bearing corrosion. Counteract corrosive products of combustion or contaminants in the fuel.
4. Promote general cleanliness within the engine.

The American Petroleum Institute has several service classifications for oils used in gasoline and L. P. gas engines; they are SA, SB, SD, and SE. For diesel engines, the classifications are CA, CB, and CD.

SERVICE SA and CA: Service typical of engines used under light and favorable operating conditions, the engines having no special lubrication requirements and having no design characteristics sensitive to deposit formation.

SERVICE SB and CB: Service typical of engines used under moderate to severe operating conditions.

but presenting problems of deposit corrosion control when lubricating oil temperatures are high.

SERVICE SD and CD: Service typical of engines used under unfavorable or severe types of operating conditions and where there are special lubrication requirements for deposit, wear, or bearing corrosion control, due to operating conditions, or engine design, or fuel characteristics.

SERVICE SE: Oils designed for this service provide more protection against oil oxidation, high temperature engine deposits, rust, and corrosion in gasoline engines than oils which are satisfactory for classification SD.

Generally, SERVICE SB will apply to the gasoline or L. P. gas engines, and SERVICE CB will apply to the diesel engines.

Use oils of the following viscosities:

Atmospheric Temperature	Viscosity
Below 32°F	SAE 20
32°F to 90°F	SAE 30
Above 90°F	SAE 40

Our recommendation of 100 hours for filter and oil change periods is based on the use of high quality oils and 85% average engine loads with the engine in good adjustment and operating with the coolant and lubricating oil at normal operating temperature. Variations from the considered normal operating conditions must be compensated for by the use of premium grade oils or more frequent oil change and filter change periods, or both.

Our recommended oil change periods are based on what experience has shown to be conservative and safe hours of operation between oil changes. Actual testing of the lubricating oil in any particular engine application at each 5 to 10 hours operation after 100 hours operation to determine the condition of the oil may allow extending the oil change periods. This testing service is provided by most major oil companies. It is recommended to take advantage of this service.

B. HYDRAULIC SYSTEM OIL

Use a hydraulic oil that conforms to Allis-Chalmers specification H-100 or SAE 10 SE engine oil (or MIL-L-2104B) in the hydraulic system.

The hydraulic oil must be fortified with special rust and oxidation inhibitors, plus anti-wear ingredients, and treated to minimize foaming. The hydraulic oil must conform to the following in Allis-Chalmers specification H-100:

Viscosity at 100°F SUS	150 - 170 secs
Viscosity Index.....	90 min
Flash Point	370°F min
Neutralization No. (mgs KOH/g oil).....	0.60
Aniline Point	180 - 220°F
Oxidation Stability (hrs. to neut. No. 1.0 max).....	1500
Rust Test	Pass
Copper Strip Corrosion (3 Hours at 212°F)	Pass 2B
Pour Point	-20°F max

The SAE grade 10 SE engine oil is available at all major oil companies and most local service stations. The oil meets the requirements of the American Petroleum Institute and contains rust and oxidation inhibitors, anti-wear ingredients, and an anti-foaming agent.

If the hydraulic system oil is stored in large containers, the storage containers must be kept free of contaminants, such as dirt, water, and metal chips. Contaminated hydraulic oil is the major cause of hydraulic system failures. It is recommended that each storage container be clearly marked FOR USE in HYDRAULIC SYSTEM ONLY.

C. POWER SHIFT TRANSMISSION OIL

Use a good quality type "A" or suffix "A" automatic transmission fluid available from any major oil company.

D. DIFFERENTIAL, STANDARD SHIFT TRANSMISSION, PLANETARY GEAR, AND STEERING GEAR OIL

Lubricate these assemblies with SAE 90 EP (extreme pressure) gear oil which is non-corrosive and resists oxidation and foaming. It should have a low pour point to ensure quick lubrication at either high or low temperatures.

E. BULL GEAR AND JACKSHAFT PINION

Lubricate with high quality, Grade 2 lithium base grease (characterized by the word "Moly") that contains a maximum of 5% micronized molybdenum disulfide. Lubricant must be waterproof and heat resistant.

TOPIC 2. FUEL RECOMMENDATIONS (GASOLINE AND L.P. GAS)

A. GENERAL

Depending upon the owner's selection, the carburetors offered for the engine are designed for either gasoline or liquid petroleum gas carburetion.

1. Gasoline

For economy and performance on gasoline units, it is recommended that a good regular grade of gasoline with an octane rating of 89 or higher be used. The gasoline should meet the requirements of ASTM-D357-61 (motor method) and/or ASTM-D-908-61 research method).

F. WHEEL BEARINGS AND JACKSHAFT BEARINGS

Lubricate with high quality. Grade 2 lithium base grease (characterized by the word "Moly") that contains a maximum of 5% micronized molybdenum disulfide. Lubricant must be waterproof and heat resistant.

G. PRESSURE GUN FITTINGS AND UNIVERSAL JOINT

Lubricate with a high quality chassis lubricant, N.L.G.I. Grade 2 heavy duty sodium base grease available from any reputable oil company.

H. OIL CAN POINTS

Lubricate all points with SAE 10 or 20 engine oil.

L. BRAKE MASTER CYLINDER

Use only premium quality, heavy duty brake fluid with an extreme heat-cold range that conforms to SAE specification J1703C.

J. MASTS

Lubricate all sliding surfaces of mast uprights with a high quality. Grade 2 lithium base grease (characterized by the word "Moly") that contains a maximum of 5% micronized molybdenum disulfide. Lubricant must be waterproof and heat resistant.

Low-lead and no-lead gasoline, from a reputable oil manufacturer, are acceptable for a lift truck equipped with a low emission engine. However, the low emission engine will still be low in emissions, regardless of whether a leaded or unleaded gasoline is used.

2. Liquid Petroleum Gas

Liquid petroleum fuel is a gas and is only in the liquid state when under pressure or extreme low temperature. When released from the tank it vaporizes rapidly forming a gas that is heavier than air.

CAUTION

When storing unit in a closed building, be sure the fuel system contains no leaks. Leaks may be located by using liquid soap on valves, connections, etc. Keep all fire, sparks, static electricity, cigarette smoking, etc. out of building because serious explosions can occur.

A leak in L. P. Gas equipment is difficult to detect because the fuel vaporizes so readily that it does not leave a wet area around leak. However, rapid expansion and vaporization of the fuel causes refrigeration. Therefore, If frost is detected on fuel system components when unit is not in use, a leak is most likely present and should be repaired immediately.

CAUTION

Some states require a license to install, repair, and adjust liquid petroleum gas equipment. Check local regulations.

The fuel tank must not be filled above the 80% full level. The remainder of tank contains vapor given off by the fuel.

CAUTION

Never fill tank while engine is running. Never smoke while filling tank. Do not allow fuel or vapor to contact skin because the very low temperature may -cause frostbite or freezing of affected areas.

B. FUEL STORAGE

The importance of proper fuel storage cannot be too strongly stressed. Storage tanks, drums, or service tanks must be free of rust., scale, sediment, or any other foreign material that will contaminate the fuel.

C. HANDLING OF FUEL (GASOLINE)

The following rules cover handling of fuel before it reaches the carburetor.

1. Do not handle fuel in an open container.
2. Do not use waste or linty rags around fuel containers.
3. Clean all storage tanks at regular intervals.
4. If hand pumps are used to bring fuel from storage tanks, keep them covered with dustproof covers when not in use.
5. When drawing fuel from a drum, agitate drum as little as possible and leave from 2 to 3 inches of fuel in bottom of drum.
6. Keep fuel handling equipment, such as measures, funnels, containers, etc., clean at all times and covered when not in use.
7. Use funnel equipped with a 200-mesh wire screen.

TOPIC 3. LUBRICATION AND SERVICE GUIDE

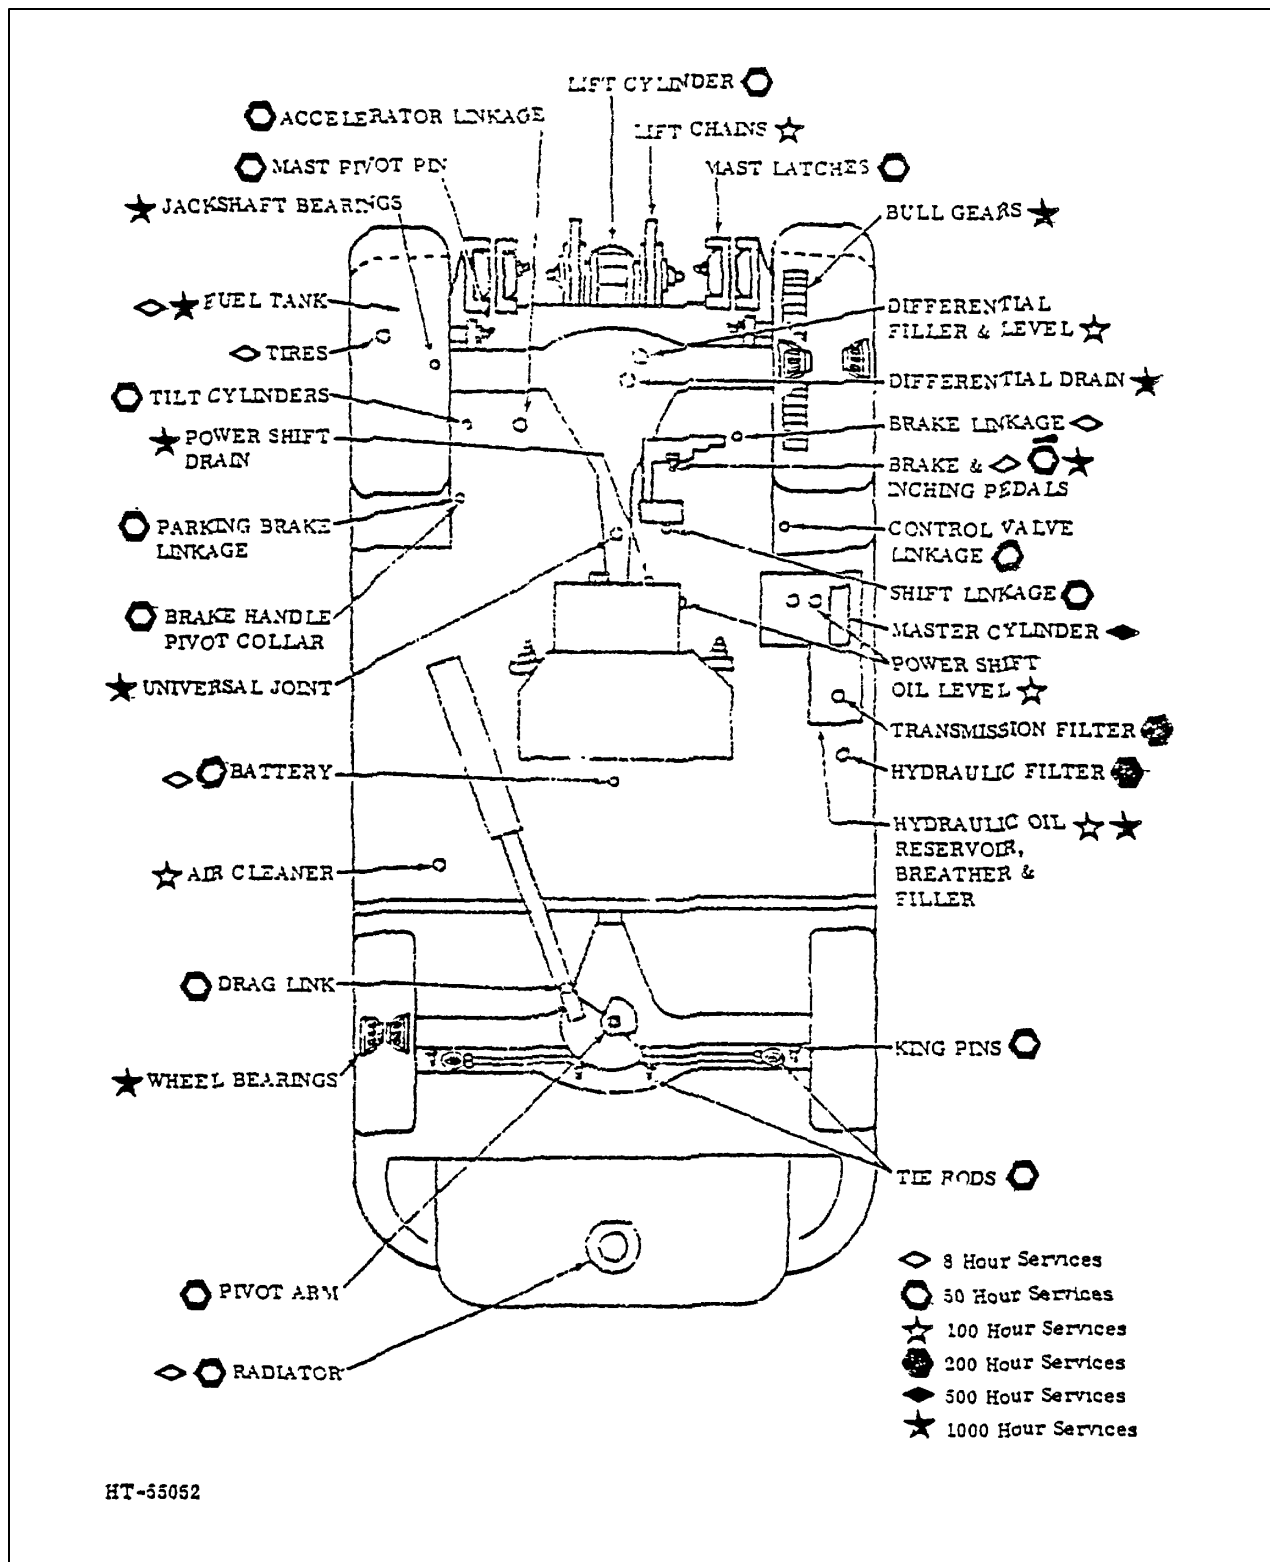


Figure 1. Lubrication and Service Guide

MEMO

REPAIR INSTRUCTIONS

REPAIR INDEX

TOPIC	TITLE	PAGE	TOPIC	TITLE	PAGE
ENGINE ASSEMBLY			BRAKE SYSTEM		
1	FITS & TOLERANCES	3-1	1	DRIVE WHEEL BRAKES	3-147
2	SERVICE	3-4	2	MASTER CYLINDER	3-151
3	MANIFOLD	3-5	3	WHEEL CYLINDERS	3-153
4	VALVES - INT & EXH	3-7	4	PARKING BRAKE	3-153
5	CYLINDER HEAD	3-13	5	BLEEDING THE BRAKE SYSTEM	3-155
6	CRANKSHAFT & BEARINGS	3-15	STEERING SYSTEM		
7	FLYWHEEL & HOUSING	3-23	1	DESCRIPTION	3-157
8	PISTON & CONN ROD	3-27	2	STEER AXLE	3-157
9	CAMSHAFT & TAPPETS	3-33	3	STEEPING VALVE UNIT	3-163
10	GEAR TRAIN	3-35	4	CYLINDER & DRAG LINK	3-171
11	CYLINDER BLOCK	3-39	5	TIE RODS	3-175
12	OIL PUMP	3-43	6	STEER WHEELS	3-176
13	OIL PRESSURE RELIEF VALVE	3-45	HYDRAULIC SYSTEM		
14	FILLER BLOCKS & GUARD	3-46	1	HYDRAULIC PUMP	3-179
15	OIL PAN	3-48	2	CONTROL VALVE	3-182
16	RUN-IN SCHEDULE	3-49	3	TILT CYLINDER	3-185
17	REMOVAL/INSTALLATION	3-50	1	MAST	3-189
FUEL SYSTEM			2	CYLINDER REMOVAL/INSTALLATION	3-192
1	FUEL SYSTEM	3-53	CARRIAGE		
2	FUEL TANK	3-55	FORKS		
3	FUEL PUMP & FILTER	3-57	WELDING PROCEDURE		
4	CARBURETOR	3-59	SIDESHIFTER		
5	ACCELERATOR LINKAGE	3-67	SIDESHIFTER CYLINDER		
6	GOVERNOR	3-69	HOSE REEL		
7	AIR CLEANER	3-70	COLLECTOR		
ELECTRICAL SYSTEM			CARRIAGE		
1	BATTERY	3-71	FORKS		
2	ALTERNATOR	3-81	WELDING PROCEDURE		
3	STARTER	3-91	SIDESHIFTER		
4	DISTRIBUTOR	3-98	SIDESHIFTER CYLINDER		
5	CONDENSOR	3-102	HOSE REEL		
COOLING SYSTEM			COLLECTOR		
1	DESCRIPTION	3-103	CARRIAGE		
2	WATER PUMP	3-105	FORKS		
3	RADIATOR	3-109	WELDING PROCEDURE		
1	EXHAUST SYSTEM	3-113	SIDESHIFTER		
TRANSMISSION			SIDESHIFTER CYLINDER		
1	TRANSMISSION	3-115	HOSE REEL		
2	TORQUE CONVERTER & PUMP	3-125	COLLECTOR		
3	DRUM & DISCS	3-127	CARRIAGE		
4	CONTROL VALVE	3-129	FORKS		
1	UNIVERSAL JOINT	3-131	WELDING PROCEDURE		
DRIVE AXLE			SIDESHIFTER		
1	DRIVE AXLE	3-135	SIDESHIFTER CYLINDER		
2	DIFFERENTIAL	3-142	HOSE REEL		
3	PNEUMATIC WHEELS	3-146	COLLECTOR		

CONTINENTAL ENGINE

TOPIC 1. FITS AND TOLERANCES

DESCRIPTION

	F135	F163
A. PISTONS		
Piston Diameter		3.4372-3.4392
Cylinder Diameter		3.4395-3.4375
Wear Limits-Cylinder Bore008	
Piston Pin Hole Diameter8597-.8595	
Top Ring Groove Width081-.080	
Maximum Wear Limit Width083	
Second And Third Rings Groove Width0965-.0955	
Maximum Wear Limit Width0985	
Fourth Ring Groove Width2515-.2505
Maximum Wear Limit Width2535
Piston Fit-Feeler Gauge003	
Lbs. Pull	5-10	
B. PISTON RINGS		
Top Ring Width078-.077	
Wear Limits-Minimum Width075	
Second and Third Rings Width0930-.0925
Wear Limits-Minimum Width0905
Fourth Ring Width248-.244
Wear Limits-Minimum Width0242
Top Ring Gap Clearance008-.018	
Second and Third Rings Gap Clearance008-.018	
Fourth Ring Gap Clearance015-.055	
Top Ring Side Clearance002-.004	
Second and Third Rings Side Clearance0025-.0040
Fourth Ring Side Clearance0025-.0075
C. CONNECTING RODS		
Bushing Hole Diameter914-.913	
Bearing Hole Diameter	2.1870-2.1865	
Bearing Thickness0616-.0613	
Wear Limits-Minimum Thickness0608	
Crank Pin Diameter	2.0627-2.0619	
Wear Limits-Minimum Diameter	2.0609	
Clearance Limits0006-.0022	
Desired Clearance0015	
Wear Limits-Maximum Clearance0032	
Side Play010-.006	
Desired Side Play006	
D. PISTON PIN		
Length		2.878-2.868
Diameter8593-.8591	
Wear Limits-Minimum Diameter8588	
Desire Fit	Light Push	
Bushing Hole Diameter - Pin8597-.8595	
Wear Limits-Maximum Diameter8607	
Pin Clearance in Bushing0006-.0002	
Desired Pin Fit0004	

NOTE

Where no specification is listed for the F163 engine it is identical to the specification for the F135 engine.

E. MAIN BEARINGS	F135	F163
Bearing Bore in Block, Diameter	2.5622-2.5615	
Bearing Thickness0925-.0928	
Wear Limits-Minimum Thickness0920	
Main Bearing Journal Diameter	2.3752-2.3744	
Wear Limits-Minimum Diameter	2.3734	
Clearance Limits	0007-.0028	
Desired Clearance0015	
Crankshaft End Play	002-.006	
Center Flange Bearing		
Thickness0926-.0929	
Wear Limits-Minimum Thickness0921	
Clearance Limits0005-.0026	
Desired Clearance0015	
 F. CAMSHAFT		
Bearing Journal Diameter, Front	1.8725-1.8715	
Center	1.7465-1.7455	
Rear	1.2475-1.2465	
Wear Limits-Minimum Diameter (under minimum new shaft diameter)001	
Bushing Inside Diameter, Front	1.8755-1.8745	
Center	1.7502-1.7495	
Rear	1.2505-1.2495	
Bushing Clearance Limits004-.002	
End Play009-.005	
Camshaft Bore in Cylinder Block - Finish Reamed Front	2.0000-1.9995	
Center	1.8750-1.8740	
Rear	1.3750-1.3745	
 G. INTAKE VALVES		
Stem Diameter	3414-.3406	
Wear Limits - Minimum Diameter3386	
Seat Angle	30°	
Stem Clearance Limits0026-.0008	
Wear Limits-Maximum Clearance0046	
Desired Stem Clearance0015	
 H. EXHAUST VALVES		
Stem Diameter3385-.3377	
Wear Limits-Minimum Diameter3357	
Seat Angle	45°	
Stem Clearance Limits0055-.0037	
Wear Limits-Maximum Clearance	0075	
Desired Stem Clearance0045	
 I. VALVE GUIDES		
Outside Diameter6575-.6565	
Stem Hole Diameter3432-.3422	
Wear Limits - Maximum Diameter3447	
Contact Face to Guide	1.4688"	
Length	2.3125"	

NOTE

Where no specification is listed for the F163 engine it is identical to the specification for the F135 engine.

	F135	F163
J. VALVE SPRINGS		
Outside Diameter9688"	
Length - Valve Closed	1.7031"	
Load - Valve Closed	47-53 lbs.	
Wear Limits - Minimum Weight	42 lbs.	
Length - Valve Open.....	1.4219"	
Load - Valve Open.....	96-104 lbs.	
Wear Limits - Minimum Weight	86 lbs.	
K. TIMING GEAR BACKLASH		
Backlash between all gears002" - .004"	
L. FLYWHEEL AND HOUSING		
Face run-out on wheel008" T.I.R.	
Housing bore run-out.....	.010" T.I.R.	
Housing face run-out006" T.I.R.	
M. TORQUE SPECIFICATIONS (lb. ft.)		
Cylinder Head	70-75	
Main Bearing Caps	85-95	
Connecting Rods	40-45	
Flywheel	35-40	
Manifolds	25-30	
Gear Cover.....	50-55	
Oil Pan	12-16	
Flywheel Housing	50-55	
Camshaft Nut	175-180	

NOTE

Where no specification is listed for the F163 engine it is identical to the specification for the F135 engine.

TOPIC 2. ENGINE SERVICE AND MAINTENANCE, GENERAL INFORMATION

The disassembly, inspection and reassembly of the engine requires no unusual or special shop equipment. However, the following factors are very important and should not be overlooked.

DO NOT INTER-MIX ENGINE PARTS.

Mark for position on disassembly; tag assemblies from different engines; identify parts reground to special sizes.

DO NOT MIX BOLTS, CAPSCREWS AND WASHERS.

Capscrews and like parts are of a length, material and heat treatment suited to the place they are used.

INSPECT AS ENGINE is DISASSEMBLED.

Once engine parts have been disassembled and cleaned, many valuable indications of engine condition are lost. Check generally for water leaks, oil leaks and signs of unusual or excessive wear.

PROTECT DELICATE PARTS AND SURFACES.

Do not pile engine parts, ignition equipment, carburetors or other miscellaneous items indiscriminately. Oil any surfaces likely to rust. Tape finished surfaces subject to scratching or nicking during repair operations.

CLEAN THOROUGHLY.

No engine is completely overhauled if it is not cleaned internally and externally to like-new condition. Thorough cleaning greatly aids disassembly and helps prevent the introduction of dirt onto bearings and running surfaces via the mechanic's hands, tools and the work bench.

WORK ACCURATELY.

Use precision gauges where needed. Follow specifications in TOPIC 1. FITS AND TOLERANCES.

LOCATION ON ENGINE.

Throughout this manual the terms right, left, front and rear are determined from the view point of the mechanic standing at and facing the flywheel end of the engine.

TOPIC 3. MANIFOLD

A. DESCRIPTION

The intake and exhaust manifold (Figure 3-1) is a one-piece casting which serves as a collector for the incoming fuel-air mixture and the outgoing exhaust gases. The carburetor is bolted to the intake section of the manifold and the exhaust pipe is attached to the exhaust manifold outlet flange. Gaskets are used between the manifold assembly and the cylinder block. Unless cracked or broken, the manifold requires very little attention.

B. REMOVAL

CAUTION

Be certain engine has cooled prior to handling manifold, as severe burns could result from careless exposure.

Manifold can be removed with engine in or out of truck frame. The following procedure is recommended for efficient manifold removal.

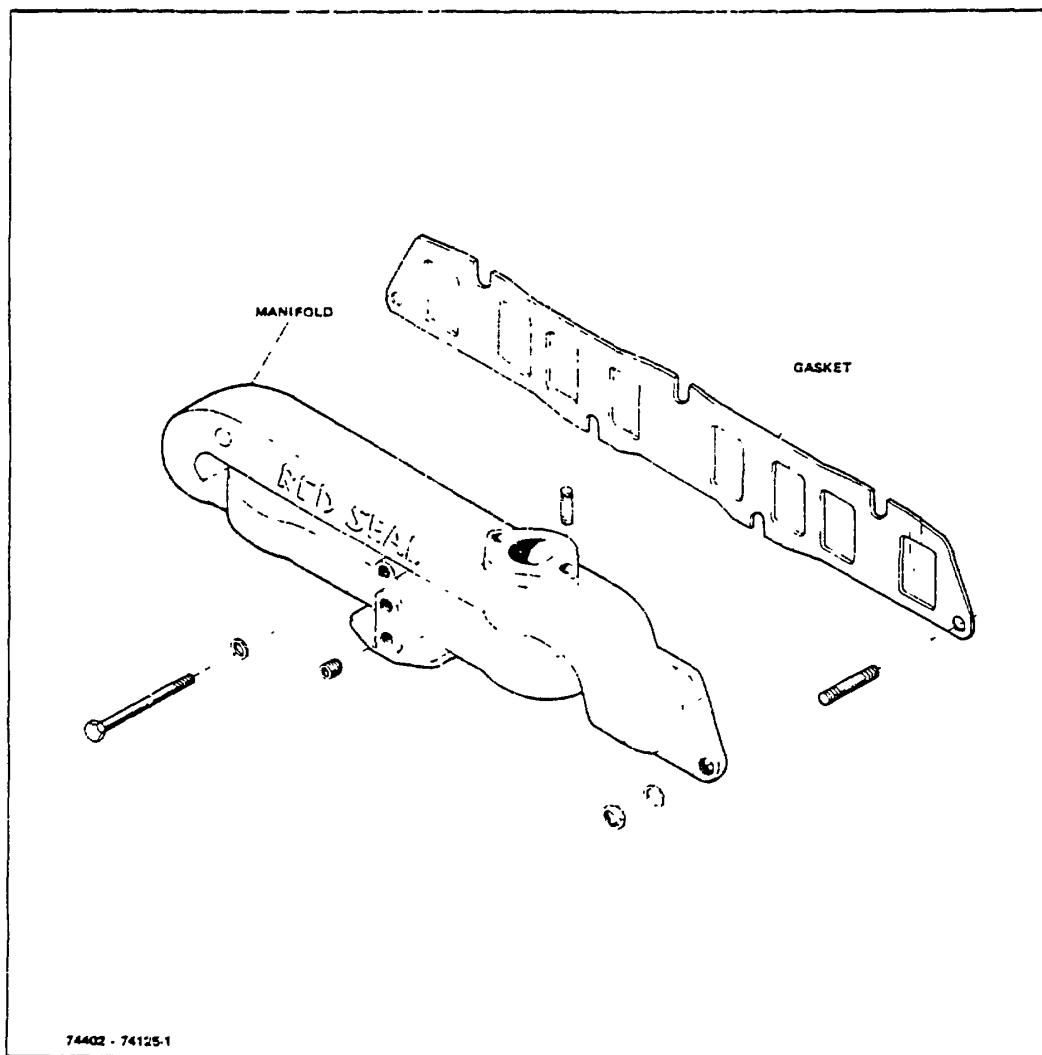


Figure 3-1. Intake/Exhaust Manifold

R-104-1

1. Remove side panels, air cleaner, seat and seat deck.
2. Remove carburetor air hose, and exhaust pipe.
3. Disconnect choke control, accelerator rod and governor control rod from carburetor.
4. Shut off fuel supply at base of fuel tank and disconnect fuel line at elbow.
5. Remove carburetor from manifold.
6. Disconnect hose from PCV valve and remove valve, hose and elbow from manifold.
7. Remove self-locking nuts and washers which attach manifold assembly to cylinder head and slide assembly off mounting studs.
8. Remove retainers and gaskets from manifold ports.

C. INSPECTION

1. The manifold should be checked for cracks and warpage. If cracked, assembly must be replaced. To check for warpage, lay a straight edge, across manifold ports. If warped, then machine flat or replace.
2. Remove excessive carbon deposits with a scraper and wire brush.
3. Manifold gaskets must be in good condition to prevent entry of dirt, and to maintain correct fuel-air ratio of intake mixture.

D. INSTALLATION

1. Install new gaskets and retainers on manifold ports.
2. Position manifold assembly on the mounting studs, and install washers and lock nuts. Torque to 25-30 lb. ft.
3. Replace carburetor gasket, and install carburetor; connect fuel line, governor control rod, choke control cable, and accelerator linkage. (Guard against altering any linkage adjustments during removal/installation.)
4. Install elbow in manifold and connect hoses and PCV valve to elbow.
5. Connect exhaust pipe to exhaust manifold flange, using new gasket, and replace carburetor air cleaner hose.
6. Install air cleaner, seat assembly and hood.
7. Open fuel shut-off valve and start engine.
8. Check for noisy or hissing leaks at all manifold flanges.
9. Establish cause of leak, if any, and repair.

TOPIC 4. VALVES-INTAKE AND EXHAUST

A. GENERAL

Valves require grinding at various intervals during the engine service life. These intervals cannot be exactly specified because many variable factors are involved, often without the operator's knowledge. Of these factors the following have been found, to a greater or lesser degree, to cause reduced valve life:

1. Fuels that break down to form deposits that impair seat contact and prevent heat induction.
2. Deposits from either fuels or oils that accumulate on the valve stems, and cause burning and sticking.
3. Oil not reaching valve guides due to dirt or sludge.
4. Shutting down a hot engine without idling for a few minutes. Exhaust valves that happen to be off the seat when the engine stops may warp; so that, burning occurs on restarting.
5. Tappet clearances not correctly maintained.
6. Lean mixtures due to incorrect carburetor or incorrect carburetor adjustments.
7. Pre-ignition due to incorrect timing, wrong plugs, carbon deposits, or excessive operating temperatures.

B. CHECKING COMPRESSION

A compression check is the best method of determining whether or not valves need grinding. Since different pistons will develop different cranking compression pressures due to compression ratio variations, no specific figures can be given for this test. Most significantly, the pressures in all the cylinders must be within a 10 p.s.i. variance. If it is felt that compression is leaking past the piston rings, inject some heavy engine oil through the spark plug hole before making the test. This will temporarily seal the rings. In addition, a quick knowledge of valve condition may be gained by listening at the carburetor entrance (remove air cleaner connection) and the exhaust outlet while the engine is cranked over. Piston ring blow-by may be heard at the oil filler opening as the pistons are slowly brought into compression and the air allowed to seep past. If valves are leaking badly, the piston ring leakage may not be noticeable. Another indication of leaking valves is an unsteady vacuum reading, particularly at idling speed.

C. REMOVING VALVES

The cylinder head as well as the valve tappet cover must be removed to gain access to the valves and valve springs. The end of each valve stem is fitted with a shallow steel retainer that surrounds the end of the valve spring, and is held to the stem by a pair of wedge keepers or retainers. These retainers must be removed before the valve can be removed.

With a valve spring lifter (Figure 4-1) compress the springs and remove the locks or pins from the valve stems which are in a closed position. Close the other valves by rotating the crankshaft and remove the locks (or pins) from these valves in the same manner. Remove all valves and place them in order, in a rack with holes, numbered for both intake and exhaust valves, so they will be reinstalled in their original positions.

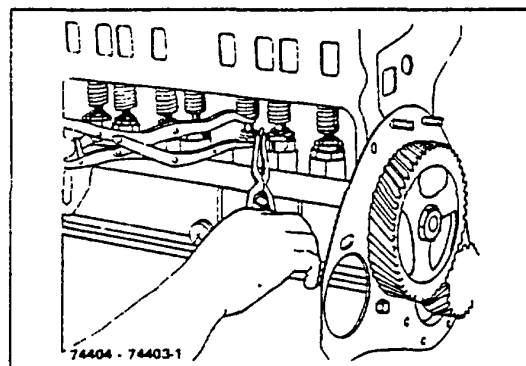


Figure 4-1. Valve Removal

D. SERVICING OF VALVES AND COMPONENTS

Upon removing each valve, examine it carefully. Remove all carbon and burned oil, and check the valve stem and its fit in the guide. Excessive wear in either the stem or guide will make it impossible to secure a tight seat by grinding, unless the valve or guide, and possibly both, are replaced. Check valves and seats for excessive burning, cracks or pitting. Check the valve guides by inserting a valve and noting the amount of side play. Worn valve guides should be replaced. Refer to following subparagraph 1, Valve Guides.

Whenever the valve chamber cover is removed, the valve and spring mechanism should be examined for evidence of inadequate lubrication due to sludging. Excessive sludge in the valve spring area is an indication of too low oil operating temperature, poor filtering action, or an oil that breaks down and is unsuited for the operation involved.

Carefully inspect the crankcase for cracks around the exhaust valve areas.

Inspect spring coils for bright spots that may be an indication of spring weakness when found beyond the closely spaced dampening coils at the spring ends. Over-speeding the engine can cause this condition. Replace any rusted, weak, cracked or broken springs.

Check the tension of each valve spring with a spring scale designed for the purpose. Refer to following subparagraph 5. Valve Springs.

1. Valve Guides

Clean the valve stem guides, removing lacquer or other deposits by running a valve guide cleaner or wire brush through the guides.

Check guides for wear by using a "Go and No-Go" plug gage, or a telescope gage and a 1" micrometer. Replace all guides that are worn bell-mouthed and have increased .0015" in diameter. Refer to TOPIC 1. FITS AND TOLERANCES for maximum diameter permissible, to determine actual amount the diameter has increased. When necessary, remove all valve guides; use an arbor press and press them out from the combustion chamber side with a driver slightly smaller than the O.D. of the valve guide.

Valve guides are a press fit, and service guides are especially machined to press in place and give correct stem clearance without further machining. However, the valve seat **MUST** be re-cut concentric with the new guide whenever new guides are installed.

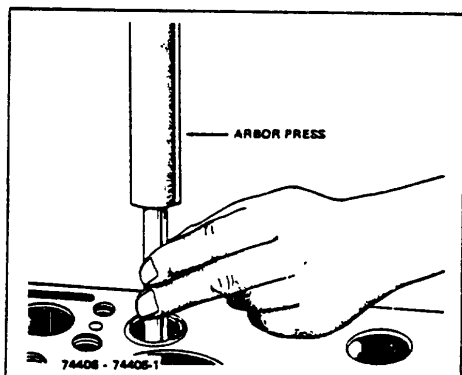


Figure 4-2. Removing Valve Guides

Replace worn guides as required by using a suitable driver and an arbor press from the combustion side to the correct depth below the valve seat. Refer to Figure 4-3 and TOPIC 1. FITS AND TOLERANCES.

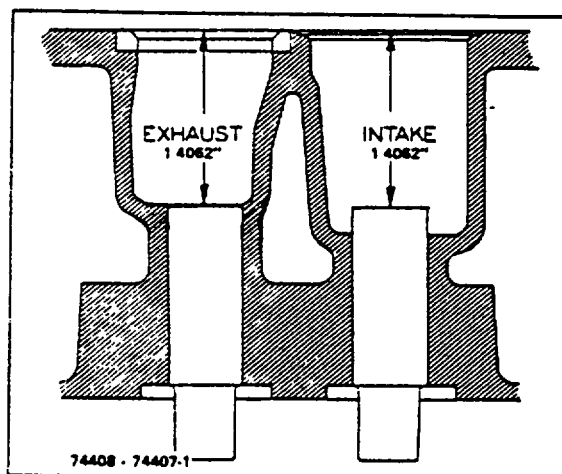


Figure 4-3. Distance from Block Face to Top of Valve Guide

CAUTION

When replacing guides that are ferrous coated, do not ream, since these are all pre-reamed before being ferrous coated any further reaming will remove the coating.

2. Valve Seat Inserts

The exhaust valve seat insert is held in place by a shrink fit.

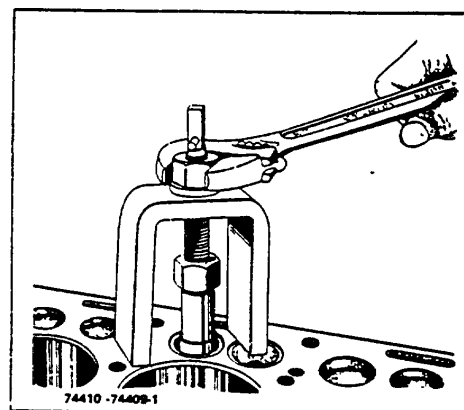


Figure 4-4. Removing Exhaust Valve Seat Insert

Inspect all exhaust valve inserts in the block and replace any that are loose, cracked or otherwise damaged. Use puller for removing faulty insert as shown in Figure 4-4.

When required to replace with new insert, clean and counterbore for .010" larger insert using counterbore tool with correct fitting pilot.

When machining the counterbore, be sure to go deep enough with the tool to clean up the bottom; so that, the insert will have full contact to carry away the heat.

It is not recommended to install new inserts having the same outside diameter as the one removed. Refer to Dimensions of Standard Inserts and Counterbores shown in Figure 4-5.

A - O.D. of Insert.....	1.3485"-1.3475"
B - I.D. of Counterbore.....	1.3445"-1.3435"
Press Fit.....	.003"-.005"

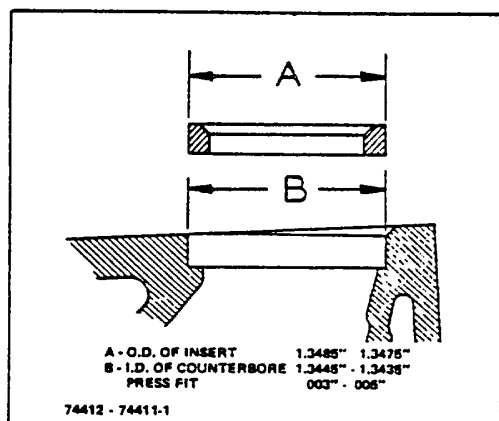


Figure 4-5. Insert and Counterbore Dimensions

When OVERSIZE inserts are used, dimensions of the insert and counterbore increase proportionately .010" to .020" depending on the oversize.

New insert installation should have a press fit. Chill Insert in container with dry ice for 20 minutes before assembling.

Insert may then be installed in the counterbore using a piloted driver, tapping in place with very light hammer blows, without the possibility of shearing the side walls (Figure 4-6). This

assures that the insert is seated firmly on the bottom of the counterbore.

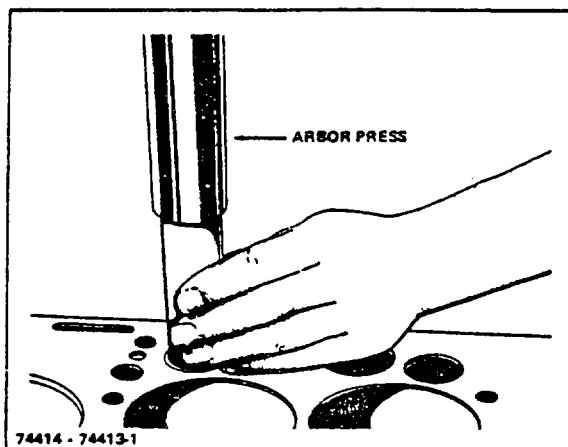


Figure 4-6. Installing Valve Seat Insert with an Arbor Press

3. Valve Seat Grinding

Grind the Intake and exhaust valve seats in the block (Figure 4-7) in accordance with specified dimensions in TOPIC 1. FITS AND TOLERANCES. Before removing the arbor, indicate the seat. Total Indicator reading of the run-out must not be more than .002". Use a pilot having a solid stem with a long taper, as all valve seats must be ground concentric and square with either new or worn valve stem guide holes (Figure 4-8).

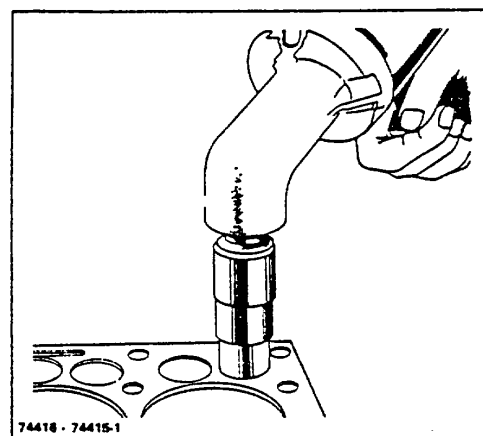


Figure 4-7. Grinding Valve Seat

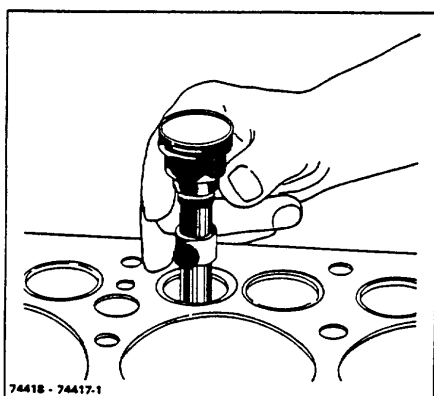


Figure 4-8. Indicating Valve Seat

4. Valves

Inspect valves for condition and replace any that are "necked", cracked or burned, also any on which valve stems are bent or worn more than .002" over the maximum allowable limits. Reface or replace all valves.

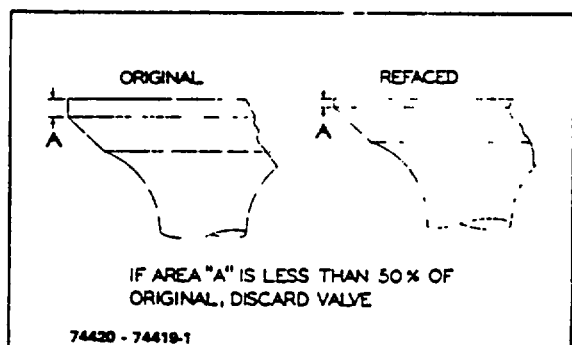


Figure 4-9. Allowable Head Thickness of Refaced Valves

Replace all valves having less than 50% margin thickness (outer edge of valve head) after refacing has been completed. To check this dimension, compare the refaced valve with a new valve (Figure 4-9).

Check all refaced or new valves in Y-blocks with indicator (Figure 4-10) to determine if the contact face is true with the stem within .002". If not, repeat the refacing operation.

After the valves and seats have been refaced and reground. coat the seat

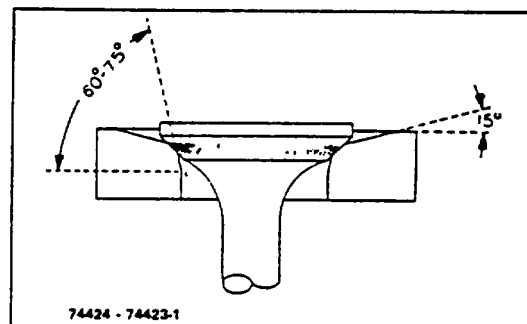


Figure 4-10. Checking Valve Face in "V" Blocks

lightly with Prussian blue and drop the valve into position, oscillating it slightly to transfer the blue pattern to the valve face. This should show a contact width of .0625" to .0938", and should fall well within the width of the valve face, leaving at least .0625" on either side where the blue does not show. If the contact is over .0938" wide, the seat in the head may be narrowed by using a 150 stone to reduce the outside diameter, or using a 600 or 750 stone to increase the inside diameter (Figure 4-11 and 4-12).

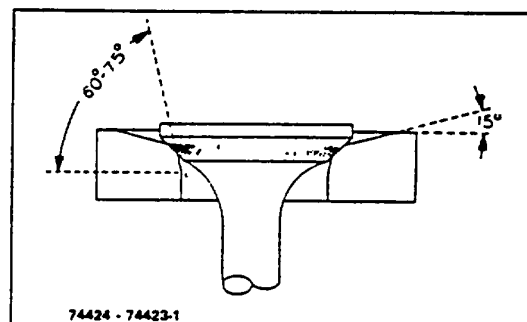


Figure 4-11. Method of Narrowing Valve Seats

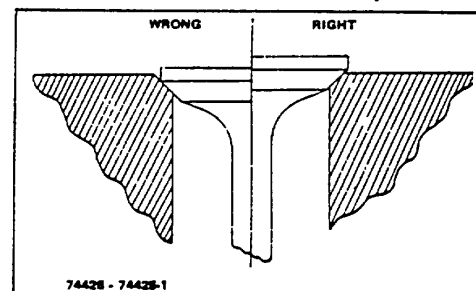


Figure 4-12. Valve Position in Cylinder Block

CAUTION

Never allow valves to set down inside the seat.

After the narrowed-down seat is brought within specifications, the seat should be retouched lightly with the original stone to remove burrs or feathered edge.

"A poor valve grinding job cannot be corrected by valve lapping." Coat the valve stem with a light film of engine oil.

5. Valve Springs

Check all valve springs on a spring tester (Figure 4-13) to make sure they meet specifications regarding weight and length. When compressed to the "valve open" or "valve closed" length, new springs must fall within specifications. Refer to TOPIC 1. FITS AND TOLERANCES. Used springs showing more than 10% loss must be replaced.

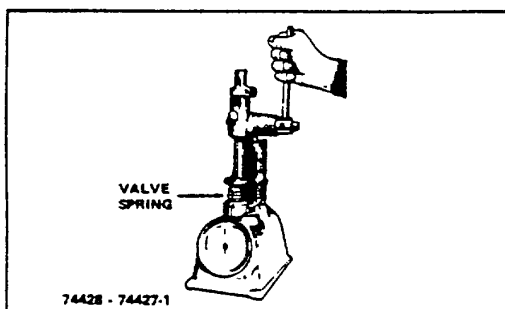


Figure 4-13. Valve Spring Tester

Reassemble the valves and springs in the block with the retainer and retainer lock.

6. Valve Tappets

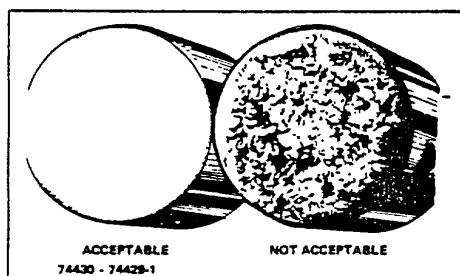


Figure 4-14. Valve Tappet Wear Comparison

Inspect each tappet carefully. A slightly pitted contact face is acceptable; more than that calls for replacement of the tappet. See Figure 4-14.

Check the tappet outside diameter with micrometers to determine if replacement is necessary because of wear.

The tappets ride in a tappet bore in the cylinder block. The tappet bore may be reamed oversize, and oversize tappets installed. Oversize tappets are available as required.

The following specifications apply:

Tappet Outside Diameter.....	.9990"
Bore in Block Diameter.....	1.0000"
Total Maximum	
Wear Limit.....	.0050"

E. VALVE/VALVE TAPPET CLEARANCE ADJUSTMENT

Accurate valve clearance settings materially prolong engine life and aid performance. Excessive clearances are detrimental to cams and tappets as well as to the rest of the mechanism. On the other hand, when clearances are too low, timing is again disturbed, and the possibility of burned valves becomes much greater.

Valve tappet clearances should be as follows (See Figure 4-15) :

Intake.....	012"
Exhaust.....	020"

To adjust tappet clearances proceed as follows (See Figure 4-16) :

1. Disconnect the high tension coil wire to prevent accidental starting of the engine.

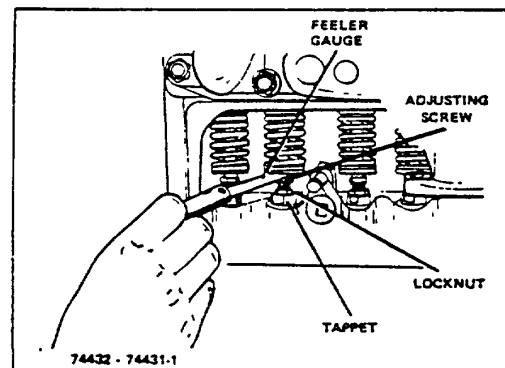


Figure 4-15. Checking Tappet Clearance - Engine at Room Temperature.

2. Remove valve tappet cover from left side of engine. This includes disconnecting and removing fuel pump with front cover.
3. Remove the spark plug from No. 1 cylinder.
4. Place thumb over the spark plug opening and slowly crank the engine until an outward pressure can be felt. Pressure indicates No. 1 piston is moving toward top dead center of the compression stroke. Continue cranking until the timing mark on the flywheel is in center of opening in flywheel housing. Both valves are then closed on the compression stroke of No. 1 cylinder.
5. Use two thin open end wrenches when making adjustment. The lower wrench is used to raise or lower the tappet adjusting screw after the locknut has been loosened. Never attempt to adjust without first loosening the adjusting screw locknut. The feeler gauge should pass between the valve stem and tappet adjusting screw with a slight drag when the valve lash is properly adjusted.
6. Crank the engine one-half revolution at a time, and check the clearance of each valve; adjust if necessary. Do this on each set of cylinder

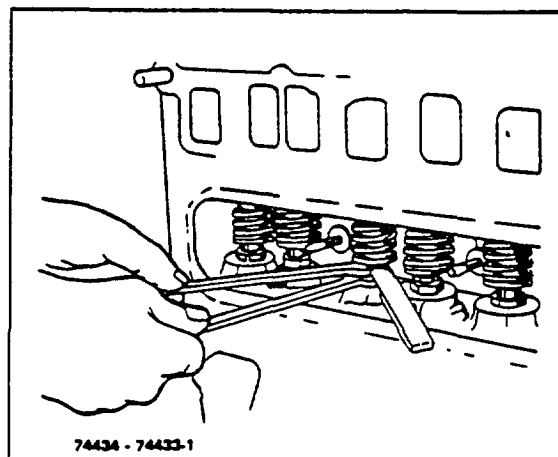


Figure 4-16. Adjusting Valve Tappet Clearance

valves in succession, according to the firing order of the engine: 1-3-4-2.

7. Replace the valve tappet cover and other removed parts. Make sure cover makes an oil-tight seal with the crankcase. Replace gasket.
8. Replace the spark plug and coil wire.

TOPIC 5. CYLINDER HEAD

A. DESCRIPTION

The cylinder head is an alloy cast iron unit, secured to the engine block with special hardened studs and capscrews. The head seals the top end of the cylinders to form the combustion chambers and passages for the intake of the air-fuel mixture, and the expulsion of exhaust gases, as well as cored passages through which the coolant flows to prevent overheating.

B. REMOVAL

1. Drain water from block by opening water drain cock.
2. Drain radiator.
3. Loosen clamps on upper radiator hose and remove hose, taking care not to damage thermostat located at cylinder head end of hose.
4. Disconnect water bypass tube from water pump.
5. Disconnect wire from water temperature sender.
6. Disconnect spark plug ignition cables from spark plugs, and identify each cable.
7. Remove spark plugs, and cap or tape exposed ports.
8. Remove capscrew or nut holding distributor clamp to cylinder head. Remove distributor 9. Refer to TOPIC 3 and remove the manifold.
10. Remove cylinder head mounting capscrews and stud nuts.
11. Lift the cylinder head and gasket off the engine and place it on a work bench.
12. With a clean, dry cloth wipe all exposed engine internal areas free of water and place a protective cover, such as a plastic sheet, over exposed cylinders.

C. SERVICING

1. Using a scraper and wire brush, remove all carbon from combustion areas. See Figure 5-1.
2. Clean the cylinder head thoroughly Figure 5-1. Cleaning Carbon from Combustion Chamber with an acceptable cleaning solvent and dry thoroughly with compressed air.

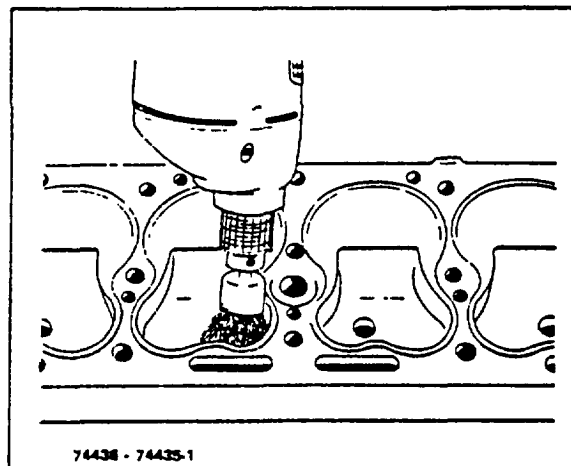


Figure 5-1. Cleaning Carbon from Combustion Chamber

3. Make sure that gasket contact surfaces on the head are clean, smooth and flat.
4. Inspect cylinder head for cracks, holes and warpage. Replace damaged heads.

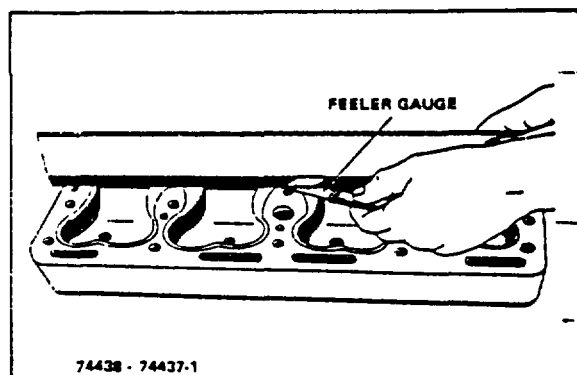


Figure 5-2. Checking Cylinder Head Flatness Lengthwise

5. Check out-of-flatness with straight edge and feeler gauge: maximum permissible is .00075" per inch of width or length (Figures 5-2 and 5-3). Thus, for a cylinder head 16" long, maximum permissible lengthwise out-of-flatness is .012". Out-of-flatness should vary gradually and uniformly from end to end and side to side. Localized depressions or high spots should not exceed .003".

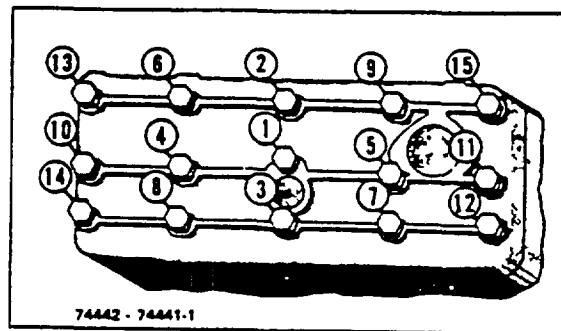
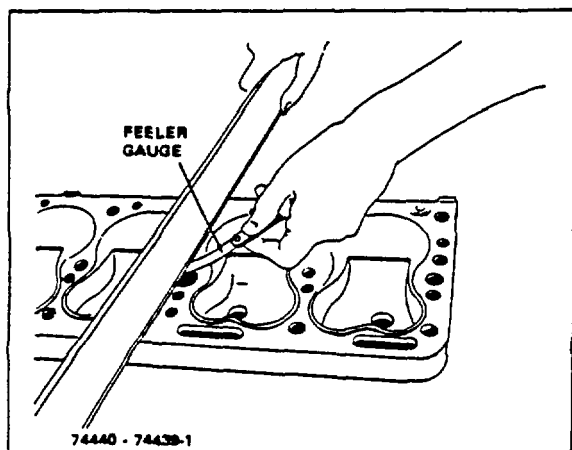


Figure 5-3. Checking Cylinder Head Flatness Crosswise

D. INSTALLATION

1. Install new head gasket and replace cylinder head on cylinder block.

NOTE

Capscrews should be tightened in successive stages and in such order as will ensure even pressure over the entire surface of the cylinder head and gasket. If all the outside capscrews are pulled up first, instead of the center ones, the head will be cocked and the gasket will not fit tight enough to prevent burning or blowing out between cylinders. A good torque wrench is recommended for this purpose. It is good practice to hold tension on each capscrew for a few seconds before releasing the wrench.

It is recommended that several passes be made in tightening down the head so as to avoid any warpage. At the first pass apply approximately one-half of the recommended torque, and then increase the torque one-half each succeeding pass until the recommended torque is attained. Torque all capscrews to 70-75 lb. ft.

Figure 5-4. Cylinder Head Torquing Sequence

2. Refer to Figure 5-4 for correct cylinder head capscrew torquing sequence. Install two 4908605-1 capscrews at locations 6 and 12. All other capscrews are identical.
3. Install distributor and secure it with clamp and capscrew.
4. Remove covering from spark plug ports and, after checking the insulation for cracks and verifying correct gap, reinstall spark plugs.
5. Attach respective spark plug ignition wiring to plug caps.
6. Connect temperature sender wire.
7. Secure water by-pass tube to water pump. Do not over-tighten connector.
8. Re-install upper radiator hose, thermostat and attaching clamps.
9. Refer to TOPIC 3 and install the manifold.
10. Add engine oil, allowing for extra halfquart if oil filter was changed.
11. Close radiator and cylinder block water drain cocks.
12. Refill radiator.
13. Refer to TOPIC 16. ENGINE RUN-IN SCHEDULE for compression check.

TOPIC 6. CRANKSHAFT AND CRANKSHAFT COMPONENTS**A. DESCRIPTION**

The crankshaft translates the reciprocating motion of the connecting rods and pistons into a rotary motion. The crankshaft is forged of a special heat treated steel and rifle drilled for pressure lubrication of the connecting rods and main bearings. End thrust is controlled by flanges on the center main bearing. The crankshaft timing gear is meshed with the camshaft gear, and the camshaft gear, in turn, is meshed with the fan drive gear. The crankshaft is sealed on each end by filler blocks with oil seals. The filler blocks are secured to front and rear of the cylinder block. The main bearings are thin wall shells held in place by precision machined bearing seats and caps.

B. REMOVAL

The following teardown procedure is recommended for proper crankshaft removal.

1. Drain radiator, cylinder block, and oil pan.
2. Remove upper and lower radiator hoses and clamps. Remove transmission cooling lines if applicable.
3. Disconnect water by-pass tube.
4. Remove fan blade and water pump.
5. Disconnect and label attaching wires to alternator, and remove mounting capscrews; remove alternator.
6. Remove distributor, cable support bracket, and spark plug wiring.
7. Remove spark plugs, and cap or tape exposed spark plug ports.
8. Disconnect and label attaching wires to starter motor. Remove capscrews and carefully pull starter free of housing.
9. Remove starter motor.
10. Disconnect from carburetor the governor rod assembly, linkage, fuel line, and air intake hose.
11. Remove capscrews securing intake/ exhaust manifold, and remove manifold with attached carburetor as a complete assembly.
12. Remove linkage to governor assembly.
13. Remove oil filter lines at engine.
14. Disconnect tube and hose from hydraulic pump and reservoir. Remove capscrews and remove hydraulic pump. Remove pump drive gear and sleeve.
15. Disconnect wires from water temperature sender, oil pressure sender and neutral start switch.
16. Ensure that all external connections to engine have been disconnected.
17. Attach hoisting chain to engine, remove three motor mount capscrews, disengage transmission linkage, oil lines, and drive shaft at universal joint.
18. Remove engine and transmission assembly.
19. Remove securing bolts and transmission assembly.
20. Remove flywheel by first removing the six bolts that attach the flywheel to the crankshaft. These bolts are special and should not be mixed with any others.
21. Carefully rotate the entire engine, so that the oil pan faces up. (If cylinder head has been removed, take care not to damage any extended valves.)
22. Remove oil pan capscrews and oil pan (Figure 6-1).
23. Remove front and rear filler blocks. Refer to TOPIC 14. FILLER BLOCKS AND OIL GUARD.
24. Remove fan drive pulley, drive adapter and shaft and gear from gear cover.
25. Remove governor and timing gear cover. Refer to TOPIC 18 or TOPIC 19.
26. Remove capscrew and remove pump coupling (Figure 6-3). Pull crank gear from crankshaft (Figure 6-3). The crankshaft gear, which is a press fit on the shaft, requires a puller. Remove key.
27. Drop the Mil pump, by removing nut holding pump to center main bearing cap.
28. Remove connecting rod cap nuts and bearing caps.
29. Remove main bearing cap bolts and bearing caps.
30. Carefully lift the crankshaft (Figure 6-2) from the bearing mountings. Avoid nicking or bumping the bearing surfaces while handling

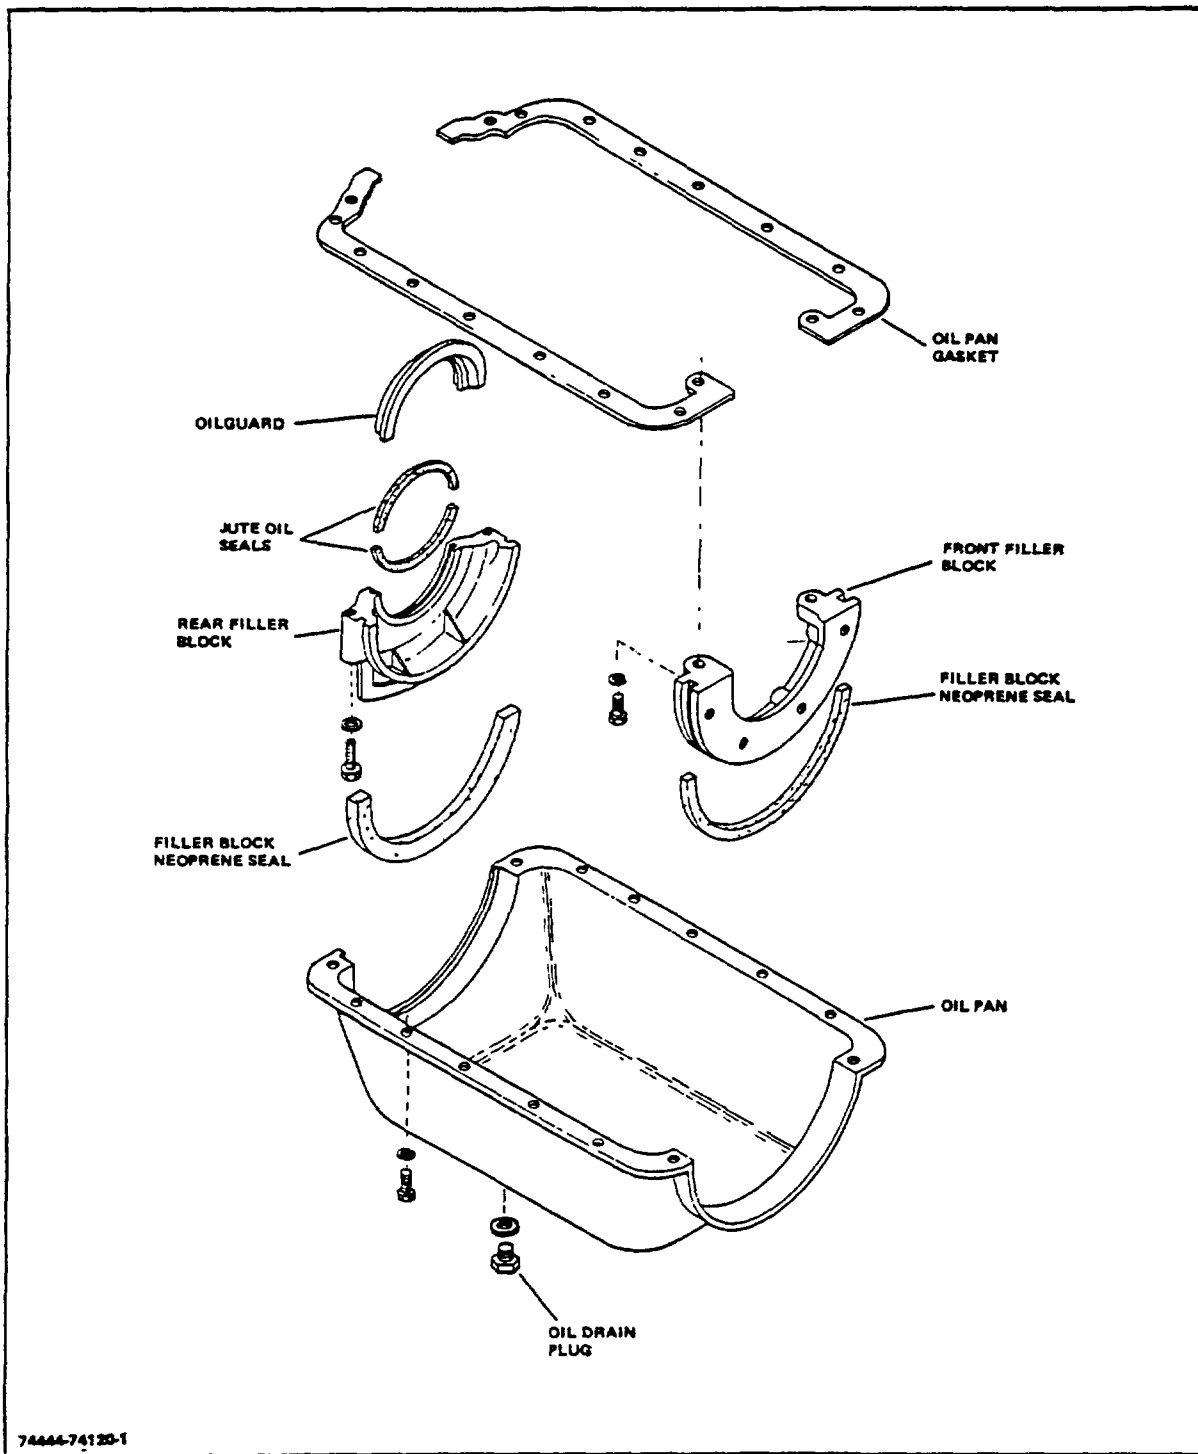


Figure 6-1. Oil Pan Assembly

R104-1

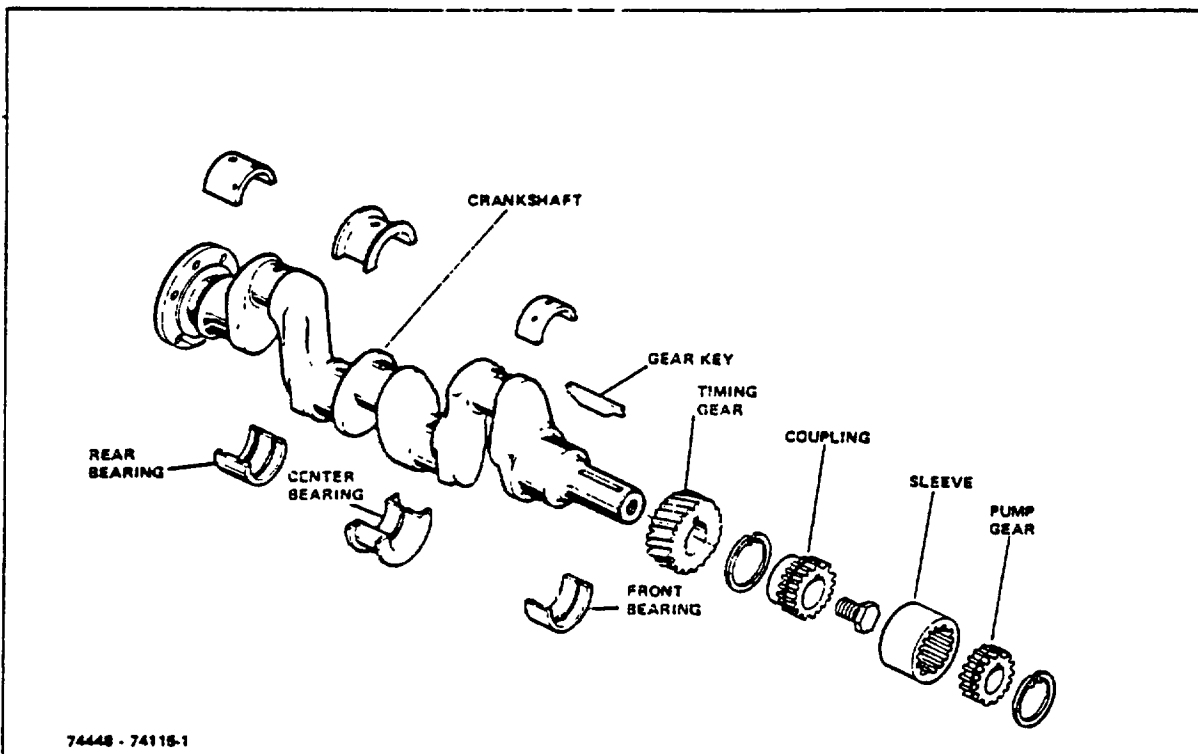


Figure 6-2. Crankshaft Assembly

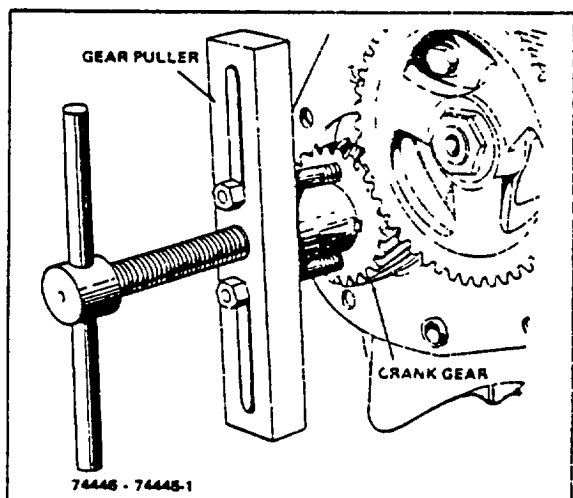


Figure 6-3. Removing Crank Gear (Typical)

C. CRANKSHAFT INSPECTION AND SERVICING

Check for run-out by mounting the crankshaft in 'V' blocks at the front and rear main bearing Journals.

Insert oil-soaked paper strips in the 'Y' blocks to avoid marring the shaft. The dial indicator reading should be taken at the center main bearing journal.

The run-out, or total variation in the indicator reading during one complete revolution of the crankshaft, is limited to .002". Straighten crankshaft, if necessary, to be within .002" reading.

Check the connecting rod and main bearing

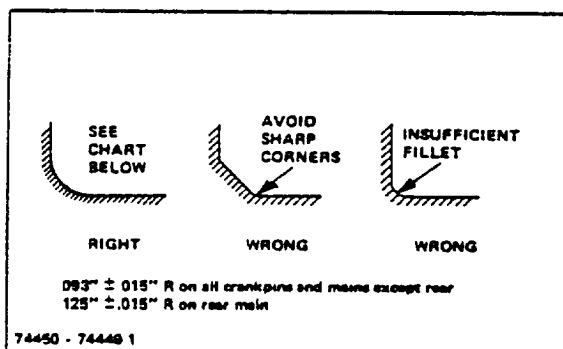


Figure 6-4. Crankshaft Fillet Radii

journals for out-of-round and tapered condition. The limit is .0005".

If the crankshaft is scored, or worn enough so that new bearings will not fit with the required clearance, the crankshaft should be reground.

Standard crankshafts may be reground to decrease the diameter a maximum of .040". When reground, the fillet radii must be within dimensional limits and must be perfectly blended into thrust and bearing surfaces (Figure 6-4).

D. BEARING INSPECTION AND INSTALLATION

1. General

Both the connecting rod and main bearings are o" the steel-backed, precision type. Due to the close machining of this type of bearing, no fitting, filing, scraping, boring or other adjustment is required or permissible. Replacement must be in complete bearing units. Never replace only one-half of a bearing. Service bearings are available in .010", .020", and .040" undersize for use on reground crankshafts. Never attempt to adjust a bearing by filing, grinding, or lapping the bearing cap. The bearing seats are precision ground with the caps in place. Any metal removed from either side prevents the proper fit of a connecting rod bearing in the rod, and in the case of a crankcase, makes the entire crankcase unsuited for further use.

2. Bearing Inspection

NOTE

Inspect the bearing shells and crankshaft journals. If there is any indication of distortion, scoring or actual wear, the bearing shells must be replaced.

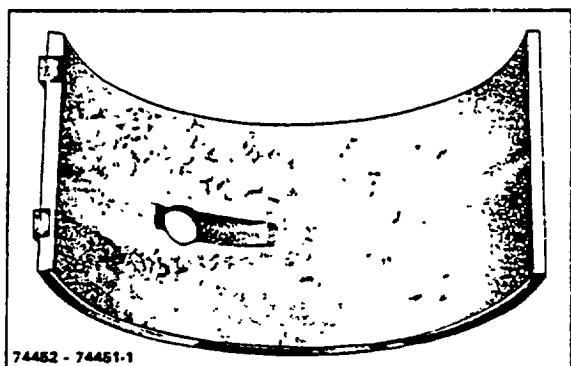


Figure 6-5. Appearance of a Good Bearing.

Some models use tri-metal bearings which, when new, are smooth and highly polished. However, a very few hours of operation will change their appearance completely. The bearing surface becomes a leaden gray 'n color and develops minute craters, almost cellular in appearance (Figure 6-5) which follow the pattern of the matrix. This appearance is a natural characteristic of this type bearing and in no way indicates failure.

Refer to Figures 6-6 and 6-7 for the appearance of corrosion and scoring damage to bearings.

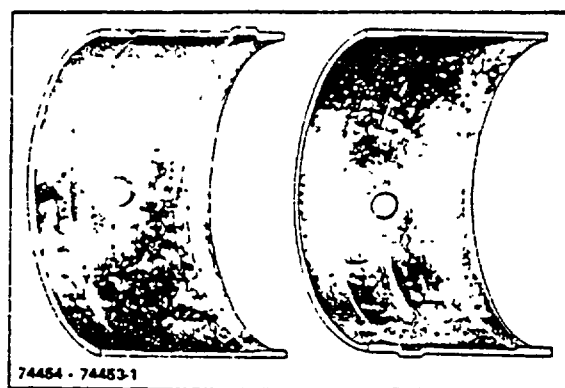


Figure 6-6. Bearing Damage Due to Corrosion

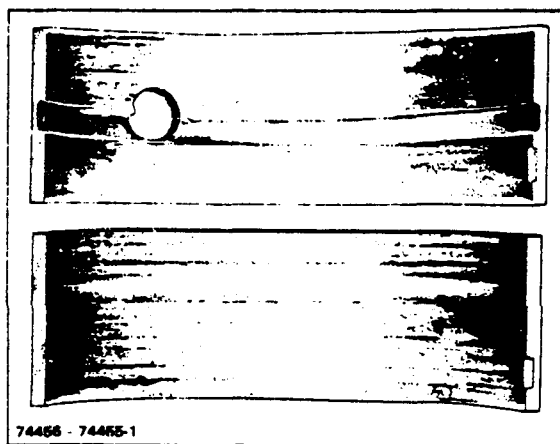


Figure 6-7. Scored Bearing Due to Dirt or Lack of Lubrication

If the visual inspection appears satisfactory, bearings should be removed and checked for thickness using a ball micrometer.

To remove the upper half of the bearing shell use a special tool obtainable at

most parts houses, which is a pin with an angular head (Figure 6-8). This tool may be inserted in the oil hole of the crankshaft and, as the crankshaft is turned in a clockwise direction, the head of the pin picks up the bearing shell and forces it out of the bore in the block.

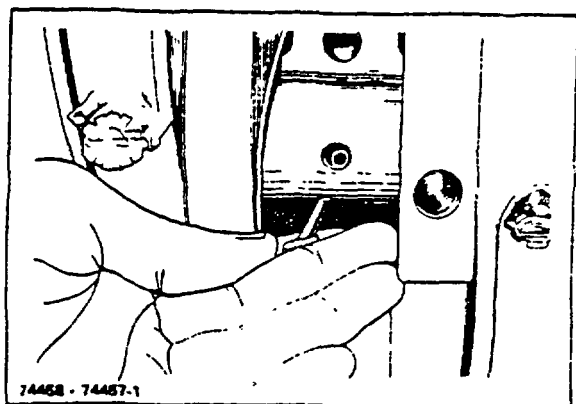


Figure 6-8. Removing Upper Half of Main Bearing Shell

The thickness of the bearing shells is given in TOPIC 1. FITS AND TOLERANCES. If this thickness has been reduced more than .0005" beyond the maximum allowable tolerance the bearing shell must be replaced (Figure 6-8).

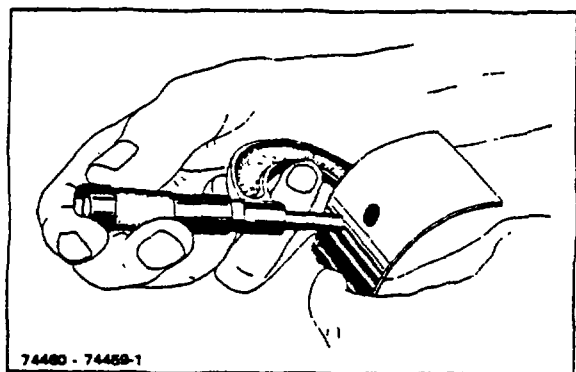


Figure 6-9. Measuring Bearing Thickness

If visual inspection of the crankshaft has shown no indication of excessive wear or scoring, the clearance of the bearings should be checked with feeler stock.

Check each bearing, one at a time, by using a piece of Plastigauge of a diameter specified to check certain clearances.

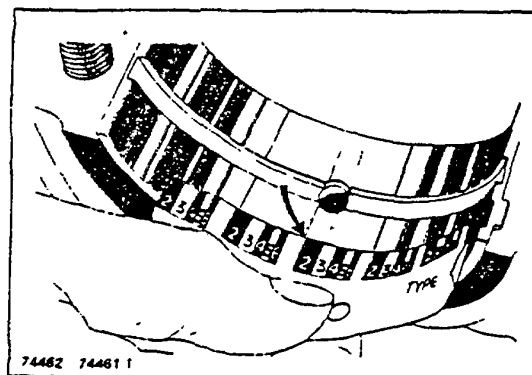


Figure 5-10. Checking Bearing Clearance with Plastigauge

CAUTION

When using this method DO NOT TURN the crankshaft, as that would destroy the Plastigauge.

By placing the Plastigauge in the bearing and tightening it in place, the width of the Plastigauge after crushing determines the bearing clearance, as shown in Figure 6-10.

The term "crush" is generally understood as the projection of the bearing edges above flush with the mating surfaces of the bearing seat and cap. This crushing action forces the bearing halves into close contact with their seats for greater rigidity and good heat conduction.

The correct amount of crush has been allowed during the manufacture of the bearings, and so attention to that detail is necessary at the time of replacement. The use of a torque wrench for tightening bearings is necessary to insure sufficient "crush" on the bearings, to force the shells against the crankcase metal without distortion.

An alternative method (Figure 6-11) is to use a piece of 1/2" feeler stock lengthwise in the bearing shell, on a film of oil. The thickness of the feeler stock should be equivalent to the maximum clearance permissible in the bearing.

Assemble the bearing cap and tighten the screws, torquing them to specification, then try to turn the crankshaft by hand to determine whether or not a drag is felt.

If a definite drag is felt and the piece of feeler stock is equivalent to, but

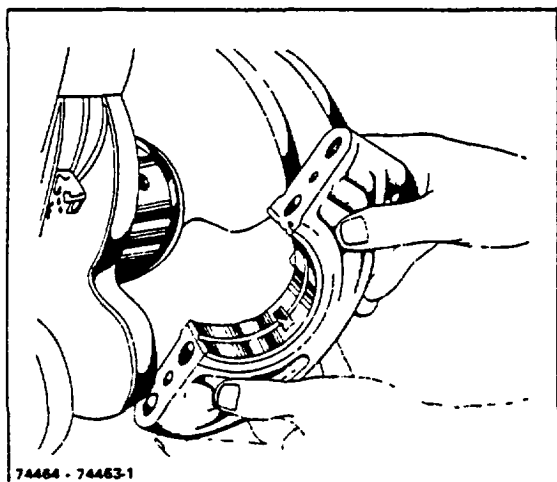


Figure 6-11. Checking Bearing Clearance with Feeler Stock

no more in thickness than, the maximum clearance specified, neither the crankshaft nor the bearing is worn excessively as far as clearance is concerned.

When using new bearings with a crankshaft that is not worn, checking may be done with a piece of feeler stock as outlined above. This should lock up the crankshaft, making it possible to turn only by use of a bar or wrench.

Generally, the test on main bearings consists of tightening each bearing cap in turn, and turning the crankshaft to detect binding.

It is emphasized that any unusual bending or run-nut in a crankshaft makes it impossible to fit bearings accurately. For this reason, the time spent in making a run-out check is well worth while. Magnetic inspection of the crankshaft and other stressed parts is also recommended if the proper equipment is available.

Connecting rod bearings and crank pins may be checked in the same manner as main bearings with one exception: do not try to turn the crankshaft when the connecting rod bearing is tightened on it with a piece of feeler gauge assembled; rather, try to move the connecting rod from side to side (Figures 6-12 and 6-13).

The familiar test of connecting rod bearing clearance consists of manually gripping the rod cap after the

bearing bolts are tightened and attempting to move the rod from side to side in the direction of end clearance. If the crank pin is not worn, a well-fit bearing is usually just loose enough to be "snapped" from side to side, without actually feeling so loose as to push easily. Sometimes a slightly snug bearing will not move under pressure but will move readily under light blows from a soft-faced hammer. This condition is usually considered satisfactory, providing the engine is given adequate break-in time.

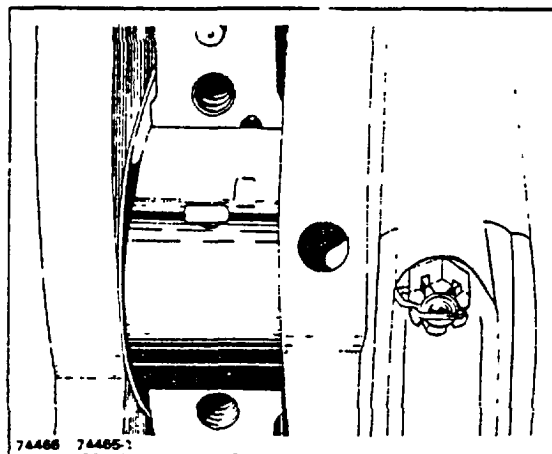


Figure 6-12. Replacing Bearing

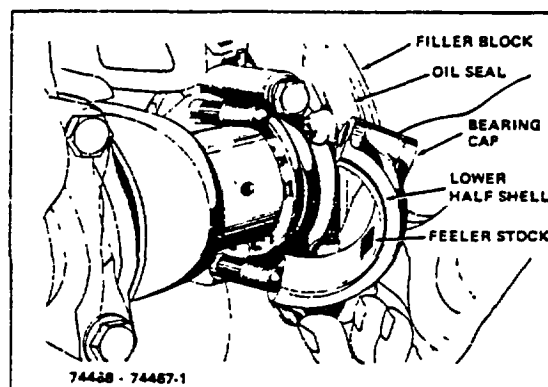


Figure 6-13. Checking Connecting Rod Bearing with Feeler Stock

3. Bearing Installation

NOTE

Coat all running surfaces with clean, fresh engine oil when installing bearings.

Be sure that the bearings seat on absolutely clean surfaces and that the back of each bearing is wiped perfectly clean. The slightest bit of dirt or carbon squeezed between the back of a bearing and its seat can cause rapid bearing failure by developing a localized high spot.

Equally important in obtaining maximum bearing life is the correct tension on the bearing cap nuts. Pull down on all nuts evenly, going from one side of the bearing to the other. Apply final tension with a torque wrench using a slow steady pull and holding the wrench "on torque" for a few seconds when the proper value is reached.

Main bearings should be torqued to 85-95 lb. ft, and connecting rod bearings should be torqued to 40-45 lb. ft.

It is preferable to go to a slightly higher tension if necessary. If it is apparent that the cotter pin cannot be installed without bringing the tension dangerously near the limit of the bolt, remove the nut and try again with another nut at the same location. Previous over-torquing, or some other damage to the bolt or nut is sometimes encountered and will be felt by the torque "softening up" so that the nut can be turned without any appreciable increase in wrench tension. Never allow a bolt or a nut in this condition to remain in the engine.

E. CRANKSHAFT INSTALLATION

1. Carefully install oil guard in crankcase, and install crankshaft in bearing mountings; secure main bearing caps and cap bolts. Torque to 85-95 lb. ft. Refer to preceding paragraph D. BEARING INSPECTION AND INSTALLATION in this section.
2. Install connecting rod bearing caps and cap nuts. Torque to 40-45 lb. ft.
3. Install oil pump. Refer to TOPIC 12. OIL PUMP.
4. Install key and crankshaft gear. Install pump coupling (Figure 6-2) on crankshaft. Tighten capscrew to 140-150 lb. ft. Refer to TOPIC 10,

- GEAR TRAIN for timing mark alignment. Use a driving sleeve to tap gear snugly into place. Hard driving is not necessary and indicates the gear is cocked on the shaft.
5. Install timing gear cover; inspect seal and replace if necessary. Gasket between R-104-1 cover and engine block should always be replaced.
 6. Loosely bolt timing gear cover to engine block.
 7. Install pump sleeve and pump gear (Figure 6-2).
 8. Refer to TOPIC 18 or 19 and install governor. Install fan drive shaft and gear, drive adapter and pulley on gear cover. Tighten cover bolts.
 9. Replace front and rear filler blocks. Refer to TOPIC 14. FILLER BLOCKS AND OIL GUARD.
 10. Replace oil pan and change gaskets. Secure oil pan capscrews.
 11. Replace flywheel housing and secure bolts.
 12. Replace flywheel, ensuring the same bolts removed are re-installed. Torque bolts to 35-40 lb. ft.
 13. Rotate engine to upright position and re-install transmission.
 14. Install engine/transmission and secure engine to motor mounts 15. Reconnect transmission linkage oil line and drive shaft.
 16. Connect engine oil filter lines.
 17. Install intake/exhaust manifold, use new gasket.
 18. Reconnect governor rod assembly, carburetor linkage, fuel line and air hose 19. Install starter motor.
 20. Connect wires to temperature and oil pressure senders and neutral start switch.
 21. Remove covering from spark plug ports, and after verifying proper spark gap reinstall spark plugs.
 22. Replace distributor, and spark plug ignition wiring. Hook up spark plug wiring to respective plugs.
 23. Replace alternator.
 24. Install water pump.

25. Install hydraulic pump and connect tube and hose to pump and reservoir.
26. Install and secure fan blade.
27. Adjust alternator strap for approved fan belt tension and lock (1/2" depression @ 10 lbs. of force).
28. Reconnect and tighten water bypass tube.
29. Reconnect upper and lower radiator hoses. Secure both with respective hose clamps. Connect transmission oil cooler lines.
30. Ensure following conditions exist:
 - a. Oil pan drain installed/secure.
 - b. Engine block pipe-plug installed/tightened.
31. Fill radiator, including anti-freeze, if required.
32. Fill crankcase with recommended engine oil, allowing extra half-quart if oil filter was changed.
33. Start engine, check for proper idle/ operation and check for any water, oil or fuel leaks.
34. Turn engine off.

TOPIC 7. FLYWHEEL AND HOUSING

A. DESCRIPTION

The flywheel is a kinetic energy device which is set in motion by the starter motor to initially turn the crankshaft. When the engine starts, the crankshaft drives the flywheel which then employs its kinetic energy to develop torque conversion and smooth rotation required by the transmission.

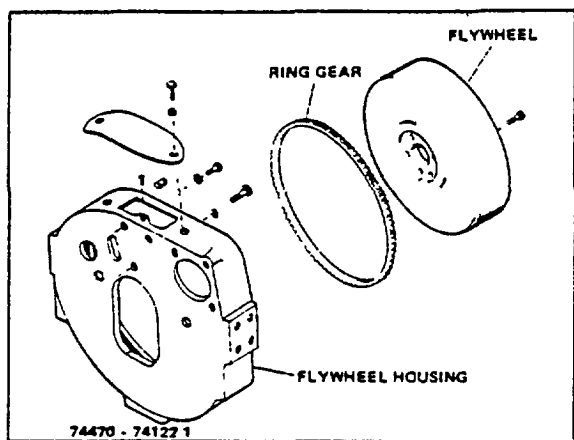


Figure 7-1. Flywheel, Ring Gear, and Flywheel Housing

The flywheel is bolted securely to a flange on the rear end of the crankshaft. One of the capscrew holes is offset and the flywheel can be attached to the crankshaft flange in only one position. The ring gear, which meshes with the starter motor gear, is mounted around the flywheel.

The flywheel housing is bolted to a machined surface of the crankcase, and in its upper outer edge it contains an opening through which the timing (T.D.C.) mark on the flywheel can be observed.

The flywheel is machined and balanced so that the clutch face and locating counterbore run true to its axis. The flywheel and housing seldom need replacement. However, whenever either component part is removed both should be checked for run-out. When run-out is not within limits specified in TOPIC 1 FIT AND TOLERANCES, the assembly should be checked to determine the cause and corrected.

B. REMOVAL

1. Flywheel

To service flywheel or flywheel housing, it is necessary to first remove transmission. Refer to REPAIR MANUAL TRANSMISSIONS. Remove two capscrews which are opposite each other and install guide studs. Remove remaining capscrews and slide flywheel off over guide studs.

2. Flywheel Housing

If more than one engine is being rebuilt at a time, the housing should be identified with its original cylinder block and should be reassembled so that it is mounted on the same cylinder block in the rebuilding process. Loosen capscrews on oil pan to relieve pressure at pan section of oil seal in flywheel housing. Remove two capscrews opposite each other and install guide studs.

3. Ring Gear

If replacement of ring gear is necessary, remove ring gear from flywheel by grinding a notch through gear at root of one of the teeth, then expand ring and drive it from its position. Do not attempt to remove the ring gear without first expanding it. To expand gear, heat to 475°.

C. INSPECTION

It is very important that all burrs and nicks be removed from surface of flywheel that fits against flange of crankshaft. If surface is not smooth and true, flywheel may wobble, which will result in improper torque converter operation and engine vibration.

To be sure that the crankshaft flange has not been sprung or otherwise damaged or that the counterbore in the flywheel, which locates it on the crankshaft, is not damaged, mount an indicator on the flywheel housing and check the flywheel for run-out (Figure 7-2). Maximum indicated reading must not be more than .008".

CAUTION

When checking run-out remove spark plugs to allow engine to be turned over freely.

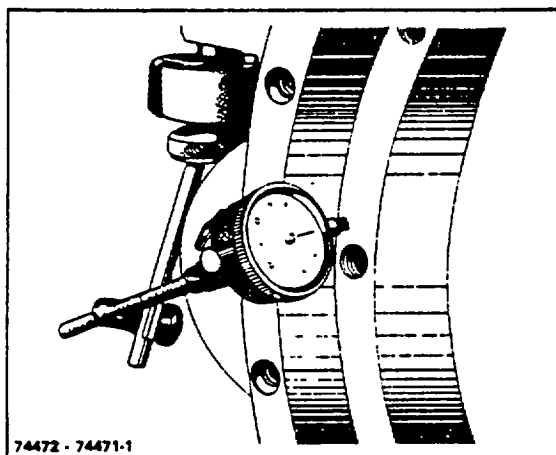


Figure 7-2. Checking Flywheel Run-Out

The indicator should be set up so that it contacts the clutch face or the vertical surface of the clutch counterbore. then turn the flywheel at least one full revolution at the same time holding against the crankshaft to offset -the possibility of end play.

Excessive run-out of the flywheel, in either position, is probably caused by dirt in or damage to counterbore locating the flywheel on the crankshaft flange.

Relocate the indicator to check the inside diameter of the counterbore (Figure 7-3). Maximum indicator reading must not be more than .008".

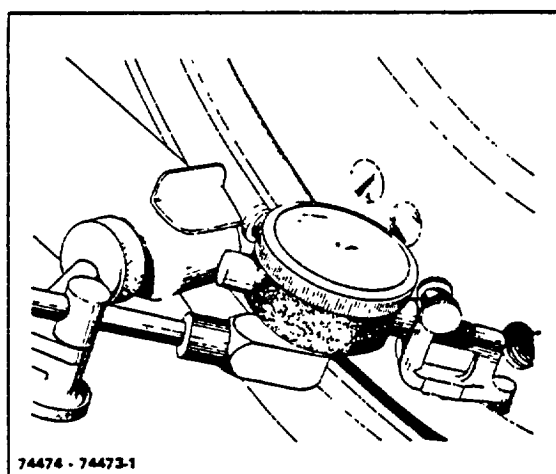


Figure 7-3. Checking Flywheel Counterbore

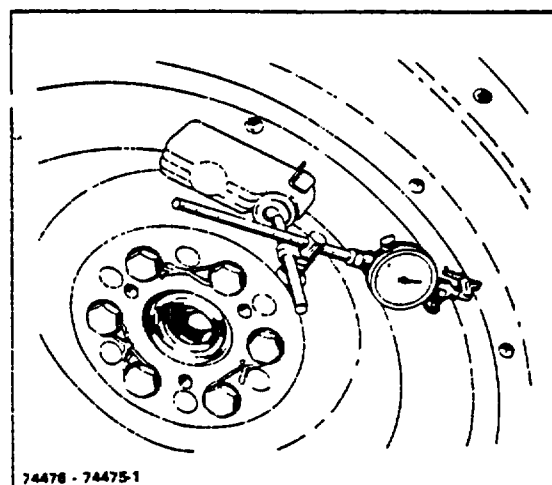


Figure 7-4. Checking Flywheel Housing Face

When assembled, mount the indicator on the flywheel so that it contacts the housing face and turn the crankshaft, at the same time holding against it to counteract end play (Figure 7-4). Maximum indicator reading must not exceed .008".

Relocate the indicator to contact the housing bore and check this in the same manner (Figure 7-5). The same run-out limits prevail.

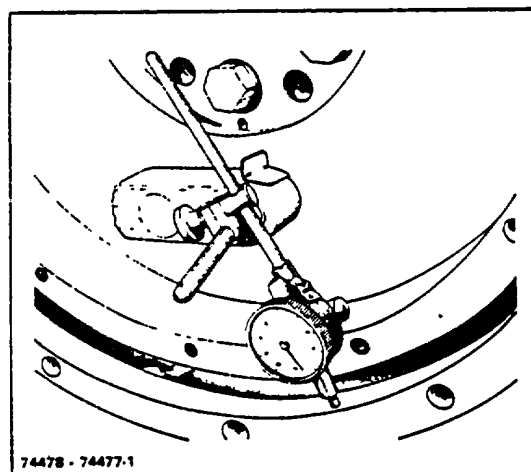


Figure 7-5. Checking Flywheel Housing Bore

D. INSTALLATION

1. Flywheel Housing

Install flywheel housing by sliding housing on studs, making certain mating surfaces of flywheel housing and cylinder block are clean and smooth. Remove studs and secure mounting capscrews.

Before installing starter motor and transmission, it is good practice to dial indicate housing and check for housing run-out. Total run-out should never exceed .008".

2. Ring Gear

The ring gear is uniformly heated to approximately 475°F. (Dark yellow heat visible in the dark) so that it can be shrunk fit on the flywheel which should be at room temperature. Do not heat ring gear to a bright red, since at that excessive temperature the heat treatment given the ring gear at the factory would be destroyed.

After proper heating, start the ring gear on the flywheel so, when installed the chamfered ends of the teeth engage with the drive pinion of the starter motor. Drive the ring gear down tight against the shoulder of the flywheel. Allow the ring gear to cool slowly. DO NOT cool with water.

3. Flywheel

Prior to installing a new flywheel, check the timing marks on both the old and the new flywheels. Install correct timing mark or plate on flywheel. The flywheel can be installed in only one position because of the offset capscrew hole.

When assembled, mount the indicator on the flywheel so that it contacts the housing face, and turn the crankshaft, at the same time holding against it to counteract end play. The maximum indicator reading must not exceed .008".

Torque as specified in Topic 1, FITS AND TOLERANCES, Paragraph D.

MEMO

TOPIC 8. PISTON AND CONNECTING RODS

A. DESCRIPTION

The pistons used are aluminum and use four rings two compression rings, one scraper ring and one three-piece oil control ring.

The rifle drilled forged connecting rods are precision ground at the large end to receive precision type thin-wall bearing shells (Figure 8-1). No shims are used, since oversize bearing shells are available to provide a tight fit.

A bronze bushing is burnished and diamond bored in place in the upper end of the connecting rod.

Pistons are available in .010", .020", .030" and .040" oversizes to provide correct tolerances when cylinders are bored and honed due to wear. Piston rings are available in the same oversizes to match specific pistons.

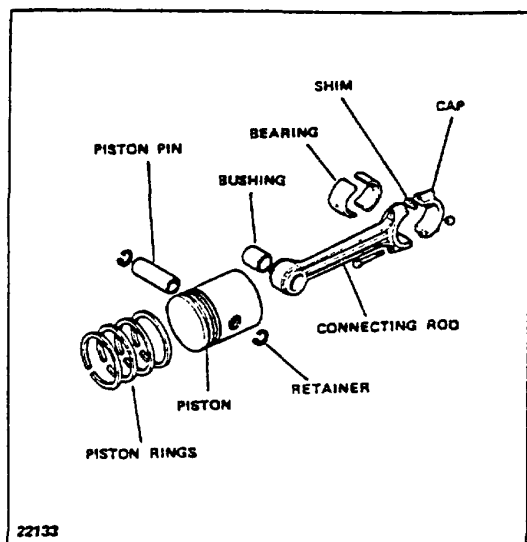


Figure 8-1. Piston and Connecting Rod Assembly

B. REMOVAL

Piston and connecting rod replacement is accomplished with the engine out of the truck. (Refer to TOPIC 6. CRANKSHAFT AND CRANKSHAFT COMPONENTS).

All piston and rod assemblies are removed from the top of the bore. Before removing, however, it is important that the ridge at the top edge of the bore be removed by using a Ridge Cutting tool. If the same bearings are to be reused, be sure the bearing shells are kept in order with respect to which rod they go in, which is top and which is bottom. However, it is usually good practice to

replace bearing shells with new ones. Inspect pistons for score marks or for worn, stuck or broken rings. Inspect for excessive carbon deposits on piston walls and in ring grooves. Check ring grooves for excessive wear and worn edges. Check pistons for cracks.

When fitting replacement pistons and rings, four different precision checks should always be made: check ring gap, check ring to land clearances, check pin clearance in piston boss, and check piston skirt clearance.

C. INSPECTION

1. Checking Piston Ring Gap

Check the piston rings in the cylinders for gap. To do this, insert a piston in the cylinder bore in an inverted position and then insert each ring, one at a time, about 2" down in the bore and bring the bottom edge of the piston up against the ring to square it up in the cylinder bore (Figure 8-2).

Check the gap between the ends of the ring with a feeler gauge in accordance with specifications shown in TOPIC 1. FITS AND TOLERANCES.

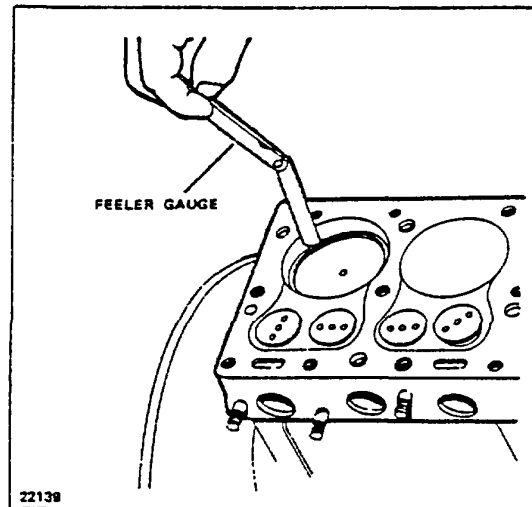


Figure 8-2. Checking Ring Gap (Typical)

Those rings with gaps less than specified should be carefully dressed off with a flat cut file until the correct clearance is obtained. Fairly wide ring gaps, near the top limit, are far less detrimental to engine performance than gaps which are too tight. The two top rings require greater end gap than the lower rings because they are subjected

to the most heat and the least lubrication.

2. Checking Ring-to-Land Clearance

Piston ring side clearance must always be checked when fitting rings to pistons which have been in service (Figure 8-3). The object of the check is to soot any pistons in which the ring grooves may have worn excessively wide. A piston in this condition must be replaced.

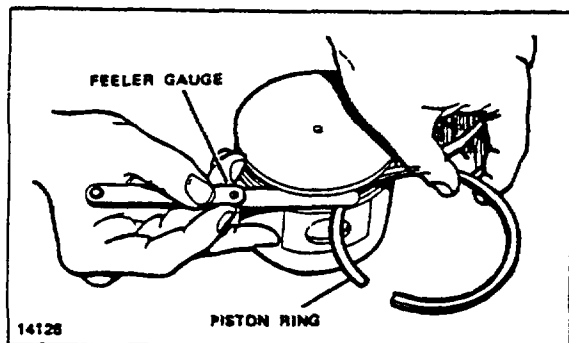


Figure 8-3. Checking Land-to-Ring Clearance

To check the side clearance, select a feeler gauge of the maximum clearance specified. With the ring in place, insert the feeler if possible between the ring land and the ring held well back in the groove. If the feeler slides in at any point, it indicates the clearance is at or over allowable maximum. A snug fit of the feeler suggests further consideration as to whether the piston warrants reinstallation since the groove wear may be at the top limit.

On all pistons passing the above check, make an inspection for minimum clearance with a feeler gauge of the specified minimum thickness. This feeler should slide freely all around the groove as the piston and ring are rotated.

D. CONNECTING RODS AND PISTON RINGS - REMOVAL FROM PISTON

To avoid breaking piston rings, the use of a ring remover and installer is recommended (Figure 8-4). Care must be taken not to overstress piston rings by spreading ends more than is necessary to remove them from piston. Before removing rings, inspect for wear and side clearance in grooves. However, removal will be necessary in order to clean carbon from grooves.

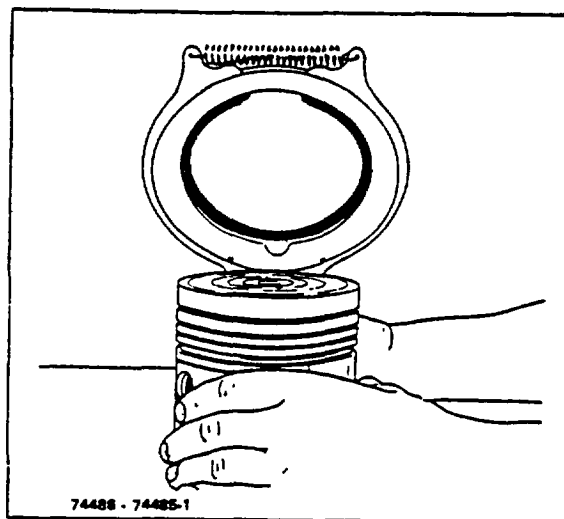


Figure 8-4. Removing or Installing Piston Rings

Using suitable tool remove piston pin retainer ring at each end of piston pin.

Using a driving tool, drive piston pin from piston. Use a wood block or brass drift as a driver (Figure 8-5). In some instances it may not be necessary to drive piston pin from piston. Specified clearance between piston and pin at room temperature is .0002" to .0004" loose.

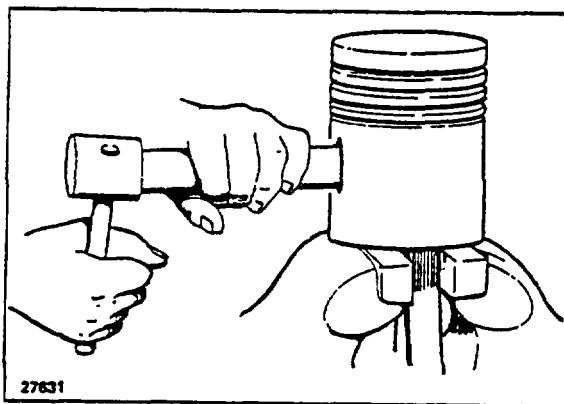


Figure 8-5. Removing Piston Pin from Piston

A pin that is loose enough to drop through the piston by its own weight is considered too loose. From a service standpoint, a fit of this kind, if not due to severely worn parts, will cause an engine to be somewhat noisy but will not necessarily impair performance or reduce engine life. If oversize pins are installed, do not forget to check the fit of the pin in the connecting rod bushing since the new pin will be too snug in a standard rod.

Fitting a piston pin is a precision job. Oversize pins of .005" and .010" are available, if desired. The specified pin clearance in the piston bosses will permit a "hand push" at ordinary room temperatures.

E. PISTON AND PISTON RING INSPECTION

As gummy deposits are not always easily removed with fuel from piston walls and ring grooves, these parts may be cleaned with a solvent and then blown off with dry compressed air. After cleaning, piston skirt, piston rings, and ring grooves should be thoroughly inspected.

CAUTION

Do not use solvents containing chemicals injurious to aluminum alloy.

Piston skirt should be carefully inspected for score marks or other indications of improper piston clearance. Any scored pistons should be replaced. Inspect inside of piston for cracks, any of which make it unfit for further use. Make certain that drilled holes in piston walls are open and clean.

Check piston for wear by inserting it into cylinder bore and measuring clearance between piston and cylinder wall. The cylinder walls and pistons must be perfectly clean and dry when fitting pistons in the cylinder bores. Pistons should be fitted with the block and piston at room temperature (68° - 70°F).

Check the piston fit in the bore using a half-inch wide strip of feeler stock, .003" thick, attached to a small scale of approximately 15 lbs. capacity (Figure 8-6).

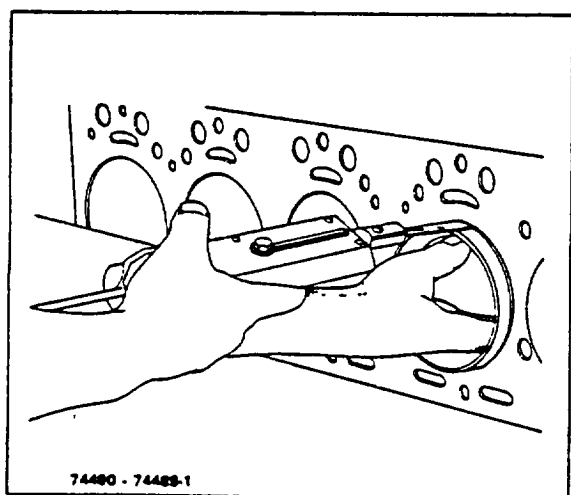


Figure 8-6. Checking Piston Fit in Bore

When the correct fit is obtained, the feeler may be withdrawn with a pull of 5-10 pounds on the scale, with the feeler inserted between the piston and the cylinder, midway between the piston pin bosses where the diameter of the piston is the greatest. Check the fit of the piston when it is approximately 2" down in the cylinder bore in an inverted position.

Piston skirt diameter of a new piston is 3.4120" to 3.4170", measured at right angles to the piston pin.

New piston rings must always be used with new pistons. If engine has been in service for some time, even though same pistons are used again, it is advisable to use new rings when the engine is re-assembled.

F. CONNECTING ROD INSPECTION

Wash connecting rod assembly in clean solvent. Measure outside diameter of piston pin to determine wear. Specified diameter of a new piston pin is .8591" to .8593". Check the bushing in the upper end of the connecting rod for wear. Specified Inside diameter of connecting rod bushing is .8595" to .8597". These dimensions of pin and bushing provide a clearance of .0002" to .0006". If clearance is close to or beyond this limit, replace connecting rod bushing.

If bushing is worn, and the original pistons are to be used with a service set of rings, an oversize piston pin may be obtained in .003" or .005" oversize.

The piston pin hole in the piston and the bushing in the connecting rod may be honed to increase their diameter, and to obtain the desired fit as shown in TOPIC 1. FITS AND TOLERANCES.

NOTE

While the chart specifies a light push fit of the pin in the piston, there is a definite clearance of the piston pin in the connecting rod.

Replace the bushing in the connecting rod if new pistons and sleeves are used. Using an arbor press (Figure 8-7) press out the old bushing and press in the new one after which the bushing must be honed to obtain the correct fit of the pin in the bushing as shown in TOPIC 1. FITS AND TOLERANCES.

If there is an excess of stock in the piston pin bushing, it may be reamed first, then honed. In any event, the final operation should be done with a hone to obtain the desired fit with better than 75% bearing area on the pin.

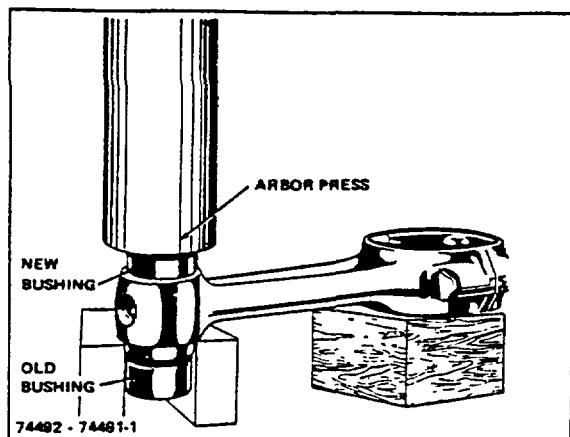


Figure 8-7. Pressing in Piston Pin Bushing

Inspect connecting rod bearing shells for scoring, chipping, corrosion, cracking, or signs of over-heating; discard bearing shells if any of these conditions are apparent. Back of bearing shells should be inspected for bright spots and discarded if any are found, as this condition indicates they have been moving in their supports.

Inspect bearing shells for wear. Specified inside diameter of bearing shells when installed with bearing cap retaining bolts tightened to specified torque is 2.1870" to 2.1865". This provides a running clearance of .0006" to .0022", new bearing shells must be installed when this clearance exceeds .0032". Refer to TOPIC 6, paragraph D. BEARING INSPECTION AND INSTALLATION. and measure the connecting rod bearings for wear and clearance with the crankshaft in a similar manner. If crankshaft is worn or damaged and must be reground, bearing shells of .002", .010", .020" and .040" undersize, are available.

G. PISTON AND ROD ALIGNMENT

The piston pin hole in the connecting rod must be parallel to, and in plane with, the large bore in the bearing end of the connecting rod.

Alignment may be checked on a fixture with the Piston pin assembled in the rod before assembling the piston (Figure 8-8). The connecting rod may be found twisted or bent out of alignment due to wear on the rod bushings or bearings. In this case, the rod may be carefully straightened with a bending bar.

Assemble the pistons on the connecting rod by first heating them in some form of oven or in hot water to a minimum temperature of 160°F. When heated, the piston pin enters the piston.

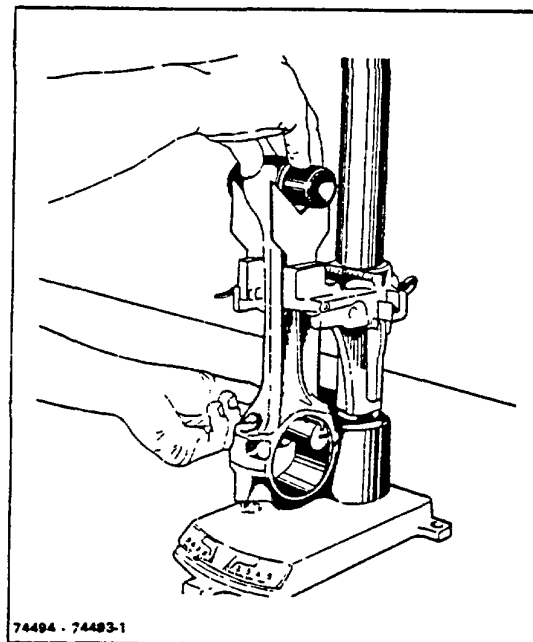


Figure 8-8. Checking Connecting Rod for Twist and Alignment

very easily, and can be tapped through the connecting rod and into place without distorting the piston.

For each piston, first install one of the piston pin retainer rings, next heat the piston, and then Insert the piston pin and install the other retainer ring.

Pistons are cam and taper ground, and this must be taken into consideration when checking alignment of the assembly, since the diameter in line with the piston pin would be less at the top of the skirt than at the bottom.

NOTE

Ring lands at top of piston are smaller than skirt; therefore, check alignment of rod along full length of skirt only.

Regardless of the preliminary check made on the connecting rod, the completed piston and rod assembly (Figure 8-9) must be rechecked and there must not be more than .002" twist or out of squareness checked over a spread of approximately 4 inches. The connecting rod can be bent or twisted with a bending bar to meet this specification.

The snap rings must be assembled in the grooves, making sure they are fully seated in place.

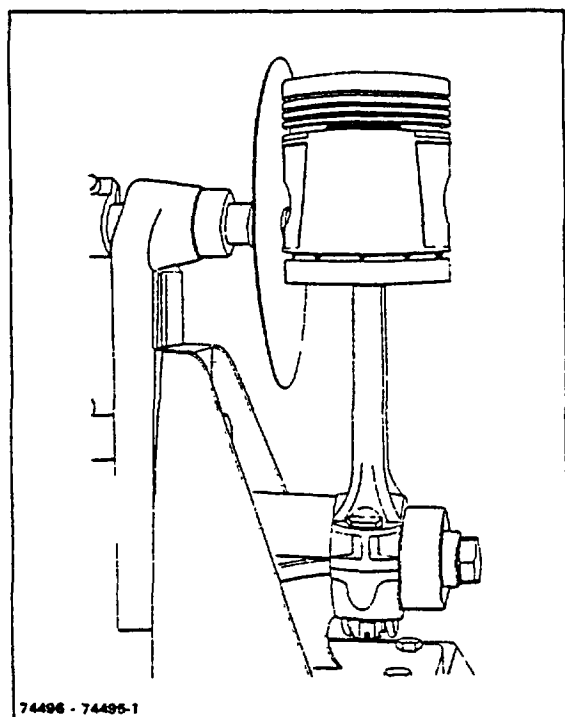


Figure 8-9. Checking Connecting Rod Assembly for Alignment.

After rings have been properly fitted, install them on piston, using a piston ring remover and installer. Take care not to spread rings more than necessary. Stagger ring gaps evenly around piston so that no two are in line.

Grip the connecting rod in a vise with lead lined jaws to hold the piston firmly and roll each of the straight side rings in its groove to be sure there are no burrs or other interference with the free action of the ring in the groove.

The 3-piece oil ring (Figure 8-10) should be installed first on the piston, from the top side so that the piston skirt will not be scratched.

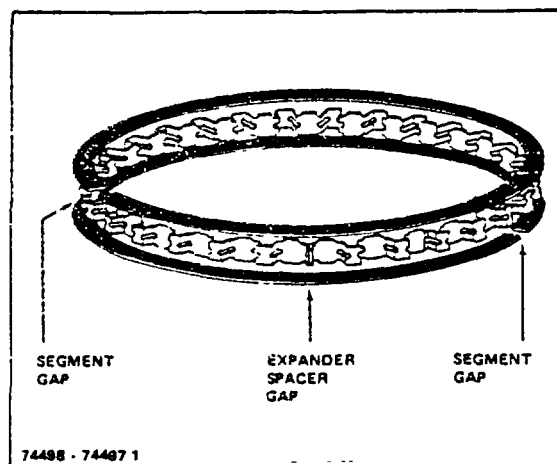


Figure 8-10. Three-Piece Oil Ring

H. FITTING PISTON RINGS

Check gap between ends of piston rings before rings are installed on piston. Select rings to be installed on each piston and insert them one at a time into cylinder bore in which they are to operate. Use a piston to push ring squarely into cylinder bore so that it is parallel with top of cylinder block (Figure 8-2).

Check the ring side clearance with a feeler gauge (Figure 8-3) at various positions, in accordance with the tolerances shown in TOPIC 1, FITS AND TOLERANCES.

Measure ring to groove clearance (top of ring to top of groove in piston). The clearances for the two engines are specified in the following table. Use a feeler gauge of the proper dimension to check the clearance.

Piston Ring	Clearance	
	F135	F163
Top	.002" - .004"	.002" - .0040"
Compression	.0015" - .0035"	.0025" - .0040"
Oil Control	.000" - .005"	.0025" - .0075"

Install oil control ring as follows:

1. Place stainless steel expander spacer of three piece ring in oil groove with ends butted.
2. Install steel segment on top of expander spacer with gap of segment approximately 90° beyond gap of stainless steel expander, making certain expander remains butted.
3. Install second segment on bottom side of expander spacer with segment gap approximately 90° from expander spacer gap in opposite direction from which top segment has been positioned.
4. Recheck installation oil control ring should be free to move in the groove: however, a slight drag will be noticed due to side sealing action of steel segments. Make sure expander spacer remains butted.

5. Pin milled application install gap of expander spacer 90 from pin, with hump of expander over pin and ends butted. Install top segment, then bottom segment with gaps of segments over pin.

To install the balance of the rings, use a ring tool with recess side up and place the ring in with the bottom side up. Start with the lowest ring first.

Some piston rings are taper faced. These are clearly marked "TOP" on the side to be up when assembled on piston (Figure 8-11).

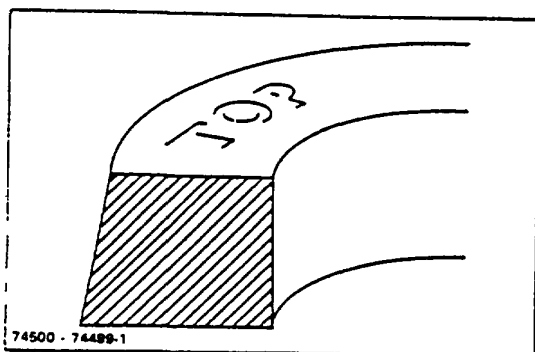


Figure 8-11. Install Tapered Rings with "Too" Side Up

Position ring in the tool so the expanding fingers will fully engage both ends.

Apply pressure on handles so ring is completely expanded. Pass the expanded ring and tool recessed side down over the piston to the proper groove.

CAUTION

If piston is equipped with a steel groove insert, this insert must be installed on top of the number one ring. (The steel groove insert is not part of the re-ring kit, and can be re-used when replacing rings.)

I. INSTALLATION

Oil all rings and pistons before installing them in the cylinder bore.

Replace pistons in the same manner as they are removed, through the top of the cylinder bore. Care should be taken to keep the piston rings properly seated and staggered during insertion.

NOTE

Ensure that pistons, connecting rods and rod caps are all replaced in their respective cylinder locations as removed.

Secure connecting rod to crankshaft, replace rod bearing cap and capscrews and torque to 40-45 lb. ft.

When pistons are ready for installation in the cylinders, compress rings carefully using a good ring compressor. A light tap on the head of the piston will allow the assembly to go into the cylinder very easily. If any difficulty in tapping piston and ring assembly into the cylinder is encountered, the compressor should be removed and rings checked for correct installation in the groove.

Measure the running clearance between piston and cylinder bore as described in preceding paragraph E. Piston and Piston Ring Inspection. The clearance is critical and should be accurate. Pistons are available for redimensioned cylinder bores in .020", .030", .040" and .060" oversizes.

Hold the feeler stock along the side of the cylinder bore at bottom of crankcase. With rod connected insert the piston into the cylinder bore in running position. With the correct clearance between the piston and cylinder bore, the .003" feeler gauge can be withdrawn with a slight pull. The pull should not exceed 5 to 10 pounds. Test the clearance at the end of the piston pin and at points 90° from the ends of the pin.

When fitting a piston to a new or accurately resized bore, the bore inner diameter should be the same at top and bottom. Therefore, the clearance may be taken at either end. In bores that have been worn, but not resized, some taper giving extra clearance at the top of the bore is likely. In such cases, the clearance must be checked at the bottom of the bore where the wear is least and the fit is closest.

NOTE

Although the connecting rod bearing side clearance is less critical than the bearing running clearances, no bearing should be assembled without checking the side clearance.

Check the side play of the rods by forcing the connecting rod fully to one side or the other. Insert a feeler gauge between the crankshaft and bearing edge. The desired side play is from .0100" to .0060". If the clearance is excessive, the rod must be replaced. If there is no side play, the piston and connecting rod must be removed and checked to determine cause of binding.

Reinstall oil pan gasket and oil pan. (Refer to TOPIC 15. OIL PAN,)

Reinstall engine. (Refer to TOPIC 17. ENGINE REMOVAL/INSTALLATION.)

TOPIC 9. CAMSHAFT, CAMSHAFT BEARINGS, AND VALVE TAPPETS

A. REMOVAL

1. Refer to TOPIC 17 for engine removal. Refer to TOPIC 18 or 19 for governor removal and camshaft access. Remove camshaft gear nut.
2. Using a Duller, remove the cam and crank gears (Figure 9-1).

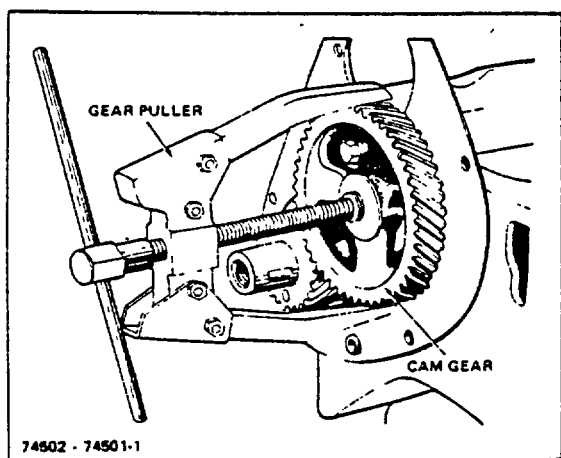


Figure 9-1. Removing Cam Gear with Puller (Typical)

3. Remove the screws holding the camshaft thrust plate to the front of the cylinder block, which makes it possible to pull the camshaft forward out of the bearings.
4. Unless engine is lying on its side, tappets must be removed or lifted before camshaft can be pulled.
5. Remove tappet chamber cover.
6. Tappets can then be lifted out and lined up in sequence, for installation in the same location unless inspection shows that they require replacement. Refer to TOPIC 4. VALVES INTAKE AND EXHAUST.
7. Before pulling the camshaft completely, check the clearance of the bearing journals in the bushing (or block in some models). To do this use strips of feeler stock .25" wide with edges dressed with a stone to eliminate any burrs or feathered edges.
8. If clearance is equal to or greater than the wear limits specified in TOPIC 1. FITS AND TOLERANCES, check the diameter of the camshaft-journals to determine the next step. Excess wear at these positions require replacement of the shaft.

9. If wear is found to be in the bushings instead, these must be replaced using precision service bushings, available for that purpose, which require no reaming, only care in assembly, to line up oil holes, and not damage the bushings as they are being pressed in.

CAUTION

When installing camshaft use special care to prevent camshaft bumping, and loosening expansion plug which cause an oil leak.

B. INSPECTION

1. Checking Camshaft End Play Camshaft end play is controlled by the thrust plate. The actual distance which the shaft may move forward or rearward depends upon the distance between the rear face of the gear and the front face of the cam journal, minus the thickness of the thrust plate. Thus, when a condition of excessive camshaft end clearance is found, it may be corrected by reducing the distance between the journal and the gear, or by installing a new thrust plate to replace the one which has been worn too thin. If both the thrust plate and the thrust surfaces of the gear and journal are worn, it will be necessary to machine a small amount from the shoulder against which the rear face of the gear hub seats.

Remove enough so that a .005" to .009" feeler gauge may be fitted between the front of the journal and the rear of the thrust plate when the gear is assembled (Figure 9-2). If a condition of insufficient end play is found, use one or two thin shims between the shoulder and the gear.

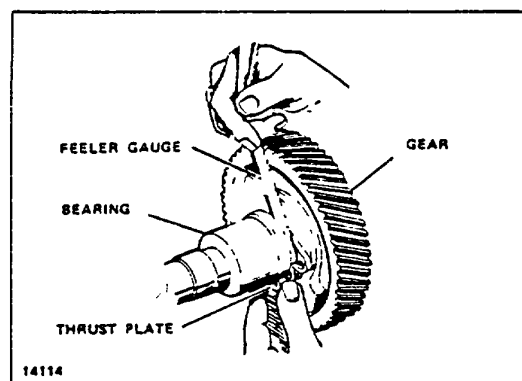


Figure 9-2. Checking Camshaft Thrust Clearance

2. Camshaft Bushings

Camshaft bushings are a thin wall, steel back, babbitt lined type with a split line which must close together when the bushing is pressed in the crankcase. For proper installation it is necessary to have suitable driving tools with an arbor and shoulder of the correct diameter to drive the bushing into place true and straight without battering or buckling. The press fit is approximately .005". It should be noted that a chamfer is provided on one edge of the bushing to aid in starting the installation. It is very important to locate the bushing in the case so the oil passage holes align with the holes in the crankcase.

The bushings must be finish reamed after Installation to provide finished inside diameters as follows:

Front:	1.8745" to 1.8755"
Center:	1.7495" to 1.7502"
Rear:	1.2495" to 1.2505"

To ensure satisfactory alignment, the reaming should be done with a piloted tool which maintains the same center through the crankcase.

C. INSTALLATION

Carefully slide camshaft into block, making sure that cam gear is in correct timing with crank gear. Replace valve tappets in their respective locations. Ensure camshaft is properly supported by cam bearings and secure with thrust plate and capscrews. Tighten to recommended torque.

Refer to TOPIC 18 or TOPIC 19 and install the governor and timing gear cover.

Replace side cover plate and secure. Install oil pump, distributor drive, oil pan and oil pan capscrews. (Refer to respective installation sections if necessary.)

Replace manifold and carburetor, if removed. (Refer to TOPIC 3. MANIFOLD.)

See ENGINE REMOVAL AND INSTALLATION for installation instruction.)

TOPIC 10. GEAR TRAIN

A. DESCRIPTION

F135 Engine

The gear train (Figure 10-1) consists of the crankshaft gear, camshaft gear, and the governor gear. The crankshaft gear drives the camshaft gear, which, in turn, drives the governor gear.

Correct timing sequence of the gear train is critical to proper engine operation; it is accomplished by meshing the camshaft drive gear and governor drive gear timing marks, with their respective timing marks on the crankshaft timing gear.

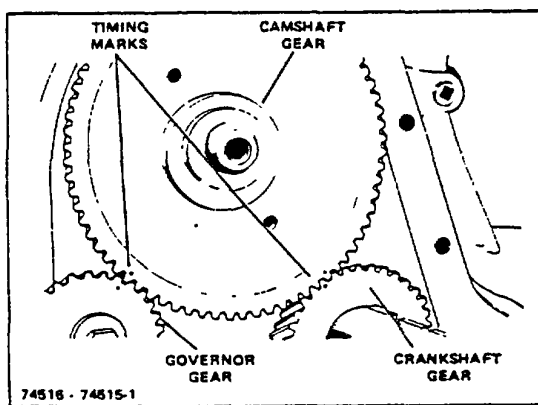


Figure 10-1. Gear Train (F135)

F163 Engine

The gear train (Figure 10-2) consists of the crankshaft gear, camshaft gear and fan drive gear. The crankshaft gear drives the camshaft gear, which in turn drives the fan drive gear.

The governor drive assembly is attached to the camshaft by the camshaft gear nut. A governor race assembly is attached to the camshaft. Correct timing sequence of the gear train is critical to proper engine operation. It is accomplished by meshing the camshaft drive gear and crankshaft gear timing marks. The fan drive gear has no timing marks and has only to be meshed with the camshaft gear when installed.

B. REMOVAL

Refer to respective sections for crankshaft, camshaft and governor removal and installation. Also see TOPIC 17. ENGINE REMOVAL/ INSTALLATION.

The crankshaft, camshaft and governor and/or fan drive gears should be thoroughly cleaned and inspected for cracked or chipped teeth before reassembly. It is generally desirable

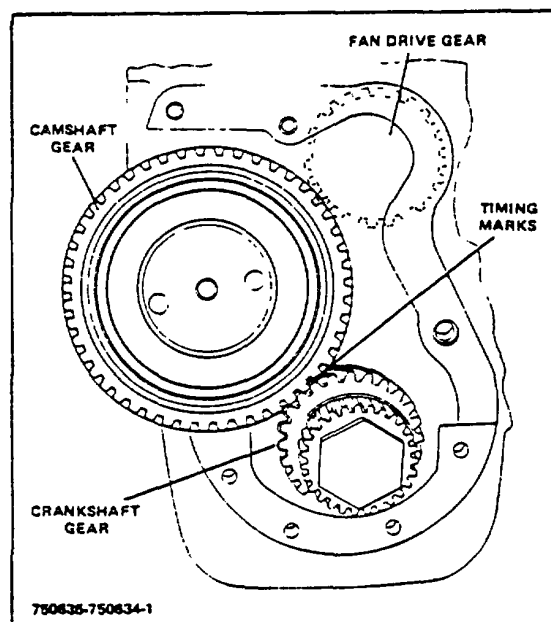


Figure 10-2. Gear Train (F163)

to replace all the gears when one or more are worn badly enough to require replacement; however, such drive train replacement is not recommended as a field procedure because of the need for selecting gears with the proper running clearance.

Replacement crankshaft and camshaft gears are furnished in standard size, under size, and over size. Gears marked "S" are standard; if they are marked "U" with the number 1, 2, or 3, it signifies .001", .002", or .003" under size. Similarly, oversize gears are marked "O" with the number 1, 2, or 3.

NOTE

A standard crankshaft gear with a .002" oversize cam gear on the engine, could be replaced with a .001" crank gear and a .001" oversize cam gear, or any other combination that gives a .002" oversize dimension.

C. INSPECTION

Timing gears and timing gear fits must be checked carefully. To check the fit, use a screw driver to force the mating teeth as far apart as possible and check this clearance with feeler gauge (Figure 10-3). If this clearance is .002" or greater, or if the gear teeth are badly scuffed and worn, the gear must be replaced. Timing gears must be replaced in pairs.

Gears fitted with excessive backlash usually chatter at idling speeds while gears too tightly fitted will howl or whine. It is better for gears to be slightly loose than to ride hard.

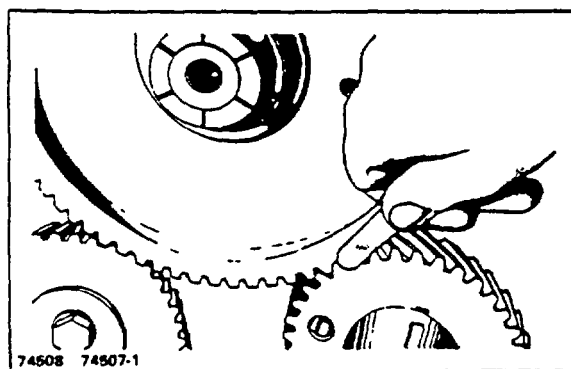


Figure 10-3. Checking Timing Gear Backlash (Typical)

Gears marked same as the original as far as sizes are concerned should be used as replacements.

Carefully examine the camshaft thrust plate (Figure 10-4) for scoring and wear and if any indication of either shows, a new thrust plate should be assembled without question. Refer to TOPIC 9 to check end play.

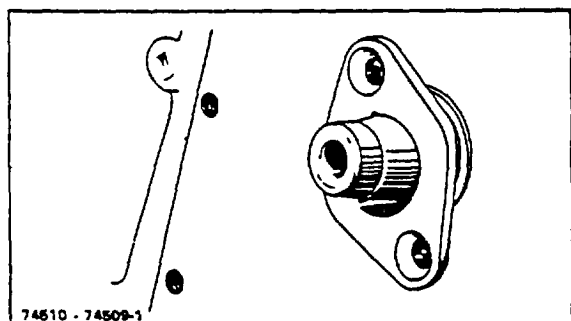


Figure 10-4. Camshaft Thrust Plate

D. INSTALLATION

1. Refer to sections covering crankshaft, camshaft, governor and engine removal and installation.
2. Assemble the cam gear to the camshaft by driving or pressing it on, at the same time holding the camshaft forward with a suitable bar through the fuel pump opening in the block so there is no possibility of the camshaft bumping the expansion plug at the rear end and forcing it out of position, thus causing an oil leak.

3. On F163 engines, install the driver assembly (Figure 10-5) and camshaft nut. On F135 engines install the camshaft gear nut only. Tighten camshaft gear nut to a torque of 175-180 lb. ft. (Figure 10-6).

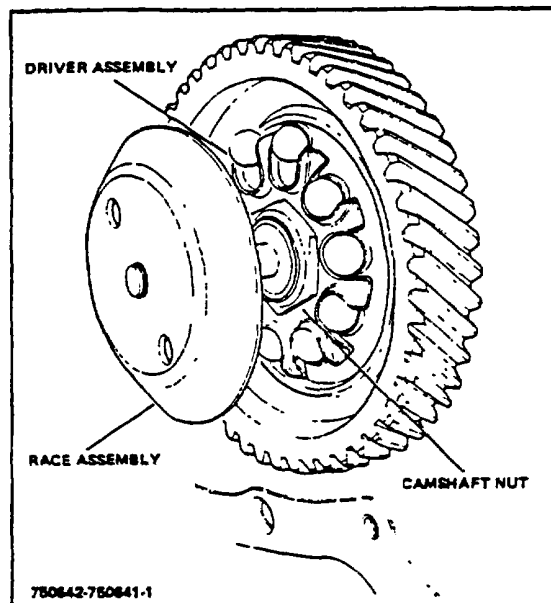


Figure 10-5. Camshaft Gear Nut Installation (F163 Engine)

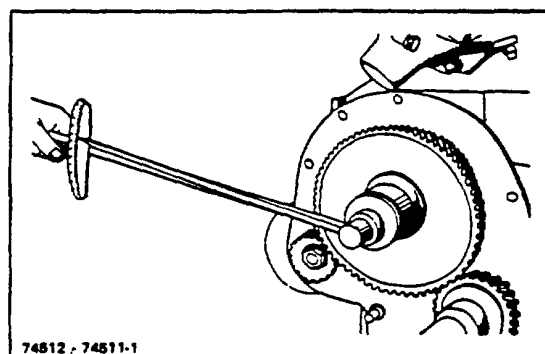


Figure 10-6. Torquing Cam Gear Nut (Typical)

4. Check camshaft end play as shown in Figure 10-7. Refer to TOPIC 1. FITS AND TOLERANCES section for the correct dimension.

CAUTION
NEVER USE THE CAMSHAFT NUT TO PULL THE GEAR ONTO THE CAMSHAFT. This will damage threads of the steel camshaft.

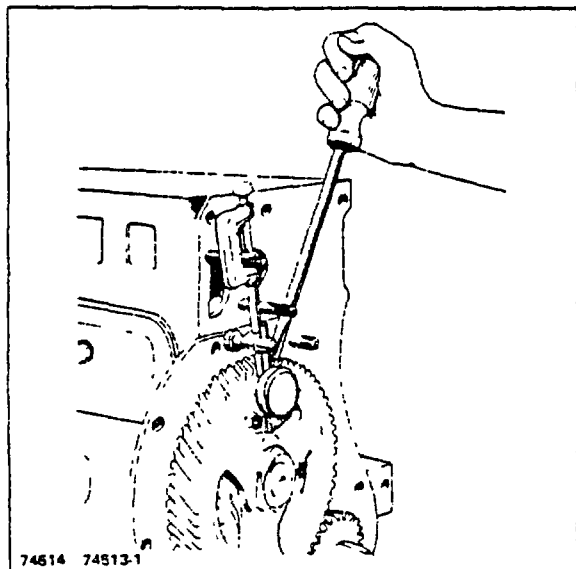


Figure 10-7. Checking Camshaft End Play

5. If the crankshaft gear requires replacement then a suitable puller will be necessary as this gear is shrink fitted on the shaft.
6. Use a driving sleeve to tap the gear snugly into place. Hard driving is not necessary and indicates that the gear is cocked on the shaft.
7. Drive the crank gear on the shaft making sure that the marked teeth on the cam gear straddle the marked tooth on the crank gear (Figure 10-8) which assures that the crankshaft and camshaft are in time.
8. To be certain that there is enough clearance, hold finger at the Junction of the two gears and, with a light hammer, tap the rim of the cam gear and note if there is vibration felt at this point (Figure 10-9).
9. If there is vibration and a .0015" feeler gauge will not enter the gap between the two gear teeth, the gear fit is within specifications.
10. Check the crankshaft end play before replacing the gear cover.
11. Crankshaft thrust is controlled by flanged center bearings (Figure 10-10) which require no shims. If end play exceeds .006" (using a feeler gauge) replace the flanged bearings. End play.

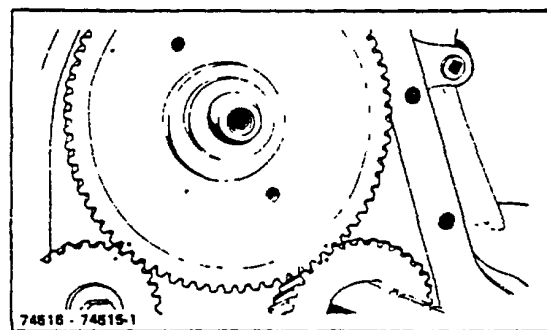


Figure 10-8. Timing Gears Assembled According to Timing Marks

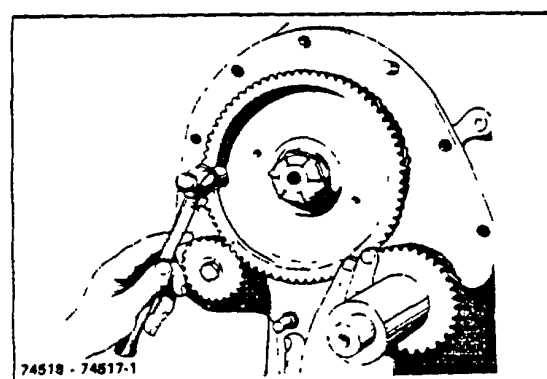


Figure 10-9. Checking Gear Fit

should be between the .002" and .006" limits.

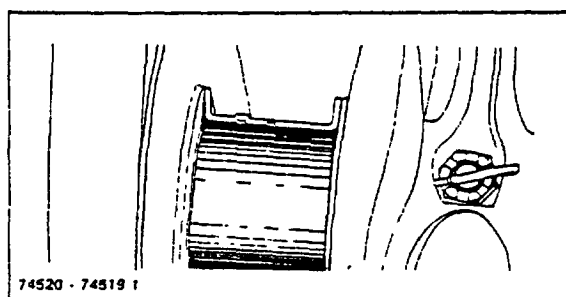


Figure 10-10. Flanged Bearing Controls Crankshaft End Play.

12. When installing the timing gear cover, the seal should be replaced. Always replace the gasket between the cover and the engine.
13. Refer to TOPIC 18 or 19 and install the governor and gear cover

MEMO

TOPIC 11. CYLINDER BLOCK

A. DESCRIPTION

The cylinder block and crankcase (Figure 11-1) are cast as a single unit. Bearing crosswalls and water baffles are generously filleted, and the honed cylinder bores are exposed to the coolant for their entire length. Intake and exhaust ports are arranged along the upper left side of the cylinder block. Directly below is the valve and tappet

chamber covered with a cover plate. The lower left side of the crankcase is ribbed lengthwise to incorporate a rifle drilled oil passage. A spring loaded oil pressure relief valve is mounted just below the center of this oil passage to provide a means of adjusting the oil pressure. Towards the front is an oil outlet providing lubrication for the governor.

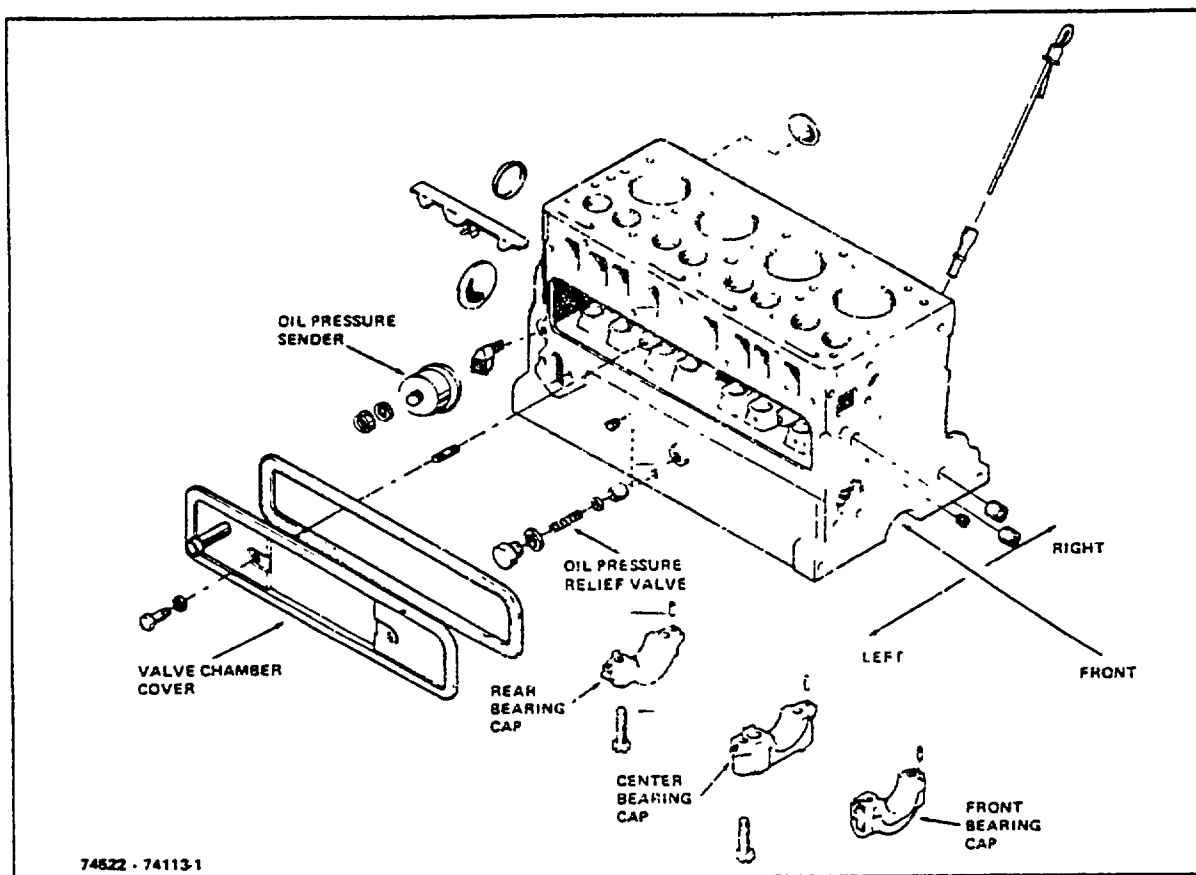


Figure 11-1. Cylinder Block Components

The rear face of the crankcase provides an accurately machined surface for mounting the flywheel housing. A semi-circular groove in the rear face of the crankcase around the rear main bearing receives a semi-circular oil guard, and a filler block which is held in place by two machine screws. Oil guard and filler block contain a pressed-in oil seal to prevent the entrance of foreign material around the main bearing.

The camshaft extends the length of the left side of the crankcase and runs in three pressed-in bushings which are drilled for pressure lubrication from drilled passages in the crankcase.

The three main bearing locations are machined to receive thin-wall precision type bearings. No shims are used between the case and the bearing cap. The center main bearing is flanged on both sides to absorb crankshaft end thrust and to locate the crankshaft lengthwise. The three main bearing caps are doweled on both sides to provide for an accurate and rigid alignment. The upper and lower halves of the precision type bearing shells are alike and are located by small tabs with fit recesses in the case. The front and center bearings have a single groove in each shell which extends out a short distance from the oil hole and blends into the bearing contour. The rear bearing has two holes connected by an oil channel.

If the same connecting rod bearings are to be re-used, be sure the bearing shells are kept in order with respect to which connecting rod they go in, which is top and which is bottom. However, re-use of bearing shells is not recommended.

B. REMOVAL

Refer to ENGINE REMOVAL AND INSTALLATION.

Refer to relevant sections for removal/ installation instructions.

C. INSPECTION

Important points on cleaning and inspection to be observed are as follows:

1. Clean oil pan thoroughly. Remove oil gallery plug and clean all passages with solvent and compressed air. Clean valve compartment thoroughly. Clean crankshaft oil passages.
2. Carefully inspect the condition of the crankshaft journals and crank pins. These surfaces must not be scored or burred and should be checked with a micrometer against specifications as tabulated in TOPIC 1. FITS AND TOLERANCES

3. Clean pistons of all carbon, being particularly careful to see that the ring grooves are clean and oil drain holes in oil ring groove are clean of all carbon. Inspect pistons for any cracks in head or in piston pin bosses.
4. Clean oil passage in each connecting rod and check each piston and rod assembly for correct alignment.
5. Clean valve guides and valves to remove head and stem deposits. Check fit of valves in guides and tension of valve springs.
6. Check that valve tappets are free fit in block without perceptible side play or shake. Inspect for rough or grooved faces, and be sure heads of adjusting screws are smooth.
7. Check general condition of camshaft. Journals should not be scored or burred. Cams should be smooth and free from burrs or grooving.
8. Inspect crankcase for cracks, especially in the exhaust valve area.
9. Clean the ring of carbon from around the top of the cylinder bore formed above the travel of the top ring.
10. Determine the original diameter of the cylinder barrel by checking this unworn area with an inside micrometer at intervals of approximately 45°.

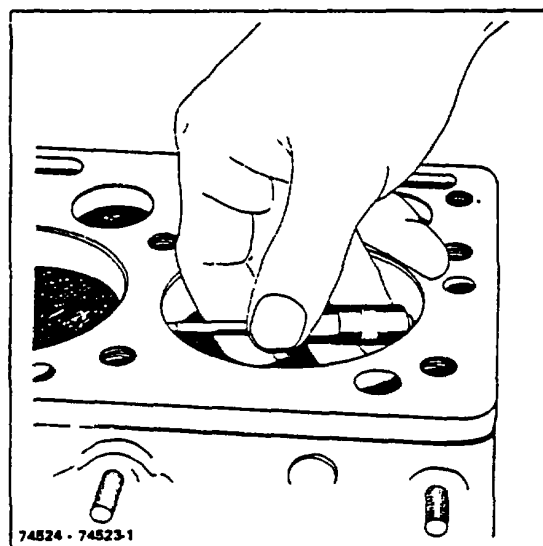


Figure 11-2. Measuring Original Bore Diameter Above Ring Travel.

11. Check in same manner the top of the ring travel area, approximately 1/4" below the shoulder.
12. The maximum difference in checks 10 and 11 indicates the amount of cylinder bore wear. If this difference is less than .008", re-ringing will be suitable, and if over .008" re-boring is recommended.

D. PREPARING CYLINDER WALLS FOR RE-RINGING OR RE-BORING.

1. Ridge ream the cylinders to remove the unworn area at the top so that new rings, when assembled, will not bump and distort both themselves and the piston lands (Figure 11-3).

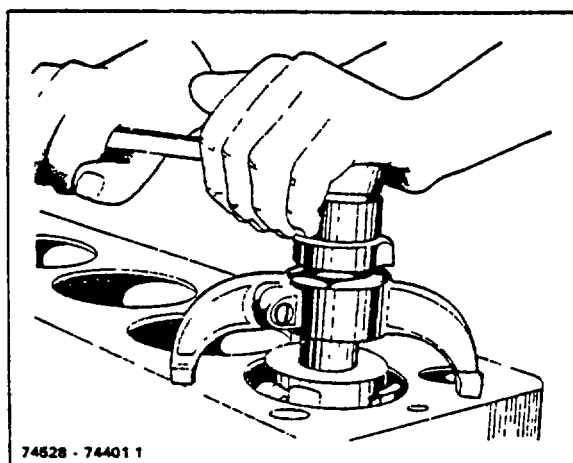


Figure 11-3. Ridge Reaming Top of Cylinder Bore

Several good makes of ridge reamers are available which will ream the top of the bore in direct relation to the worn area so that should the worn area be off center slightly there will be no partial ridge remaining.

2. When re-boring the cylinders allow .002" for finishing by honing.
3. To get the correct cross hatch pattern (Figure 11-4) with a cylinder hone, use a top quality electric drill with a speed of 500 RPM or less.

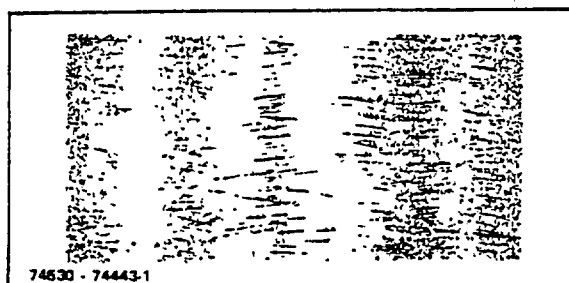


Figure 11-4. Desirable Cross Hatch Pattern After Cylinder Hone.

E. GLAZE BREAKING OPERATION

It is important to remove the glaze on the cylinder bores by using a cylinder hone which has an adjustable stone tension (Figure 11-5). Glaze breaking assures quick seating of new piston rings. If the cylinder glaze is not removed, there will be no assurance as to when the rings will begin to function properly and control the oil; this is especially true when chrome rings are used.

The following step by step procedure is recommended:

1. When the crankshaft has not been removed, cover the entire crankshaft with a clean, slightly oily cloth to prevent abrasives and dirt from getting on the crankshaft.

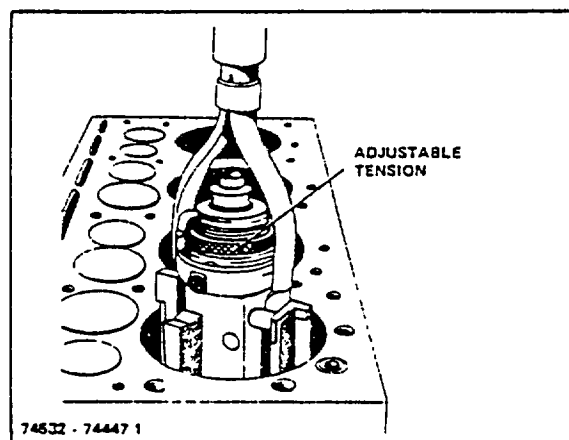


Figure 11-5. Honing Cylinders

2. Remove the excess carbon deposits from the top of the cylinder wall before beginning the glaze breaking operation. This prevents loading the stones.
3. Insert none in cylinder and expand to cylinder wall with slight tension. Using a clean brush, wet cylinder wall and stones with kerosene. Use a hand drill and surface hone cylinder with a rapid up and down motion to produce a good cross hatch pattern (Figure 11-4). Apply kerosene occasionally as needed and increase tension on hone adjustment until a good pattern and finish are obtained. A smooth finish of 10 to 15 micro Inches is desired.
4. Clean the loose abrasives from the stones by using kerosene and a wire brush.

NOTE

Stones must be used wet. Keep applying kerosene during honing to prevent stones from drying out and causing an incorrect honing pattern.

5. The most desirable cylinder finish is 10-15 micro inches; with this finish the depressions in the surface tend to keep the supply of lubrication between the mating parts. This finish can be obtained by using 280 grit stones on the hone.
6. Clean all bores thoroughly with a clean oiled rag to pick up all the small particles of dust that may be embedded in the walls. Follow this with a clean cloth to make certain the walls are CLEAN.

F. PREVENTIVE MEASURES

When cylinders and pistons are scored or worn excessively, the following most common causes should be considered, in order to eliminate those conditions during future operation of the engine.

1. Gum or Varnish Deposits:

Use heavy duty lubricating oil, change the oil more often or reduce the oil temperature.

2. Piston Skirt Clearance Inadequate:

When fitting new pistons, follow the recommendations listed in TOPIC 1. FITS AND TOLERANCES.

3. Insufficient Cooling:

Thoroughly clean the cooling system, check the thermostat and water pump. Make sure hoses have not collapsed.

4. Dirt Entering Intake Manifold:

Adopt improved air cleaner servicing procedures. Make sure the air cleaner connections are tight.

G. INSTALLATION

(Refer to TOPIC 17, ENGINE REMOVAL/INSTALLATION.)

TOPIC 12. OIL PUMP

A. DESCRIPTION

The lubricating oil pump (Figure 12-1) is a positive, gear type assembly. It consists of a single cast pump housing and mounting extension with a precision cavity to receive the driver and idler gears. The driver gear is mounted at the end of the pump shaft, and the idler gear is mounted on a stud which is pressed in place in the pump body.

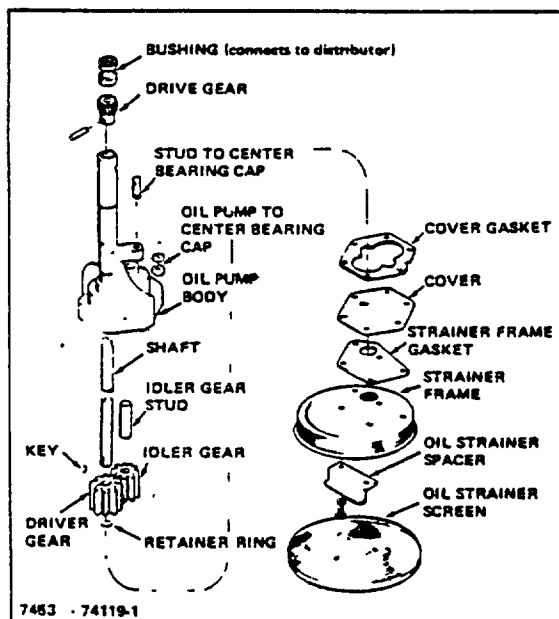


Figure 12-1. 011 Pump, Exploded View

The oil pump is assembled to the center main bearing cap held in position vertically against a machined pad by studs.

The extended portion of the pump body acts as a pilot, fitting closely in a reamed hole in the main bearing web, maintaining definite relationship between the camshaft and the oil pump drive shaft.

A gear assembled to the upper end of the drive shaft is driven by a mating gear cut on the camshaft. The mating gear drives the oil pump gear which is assembled to the lower end of the pump shaft.

The pump shaft is carried in two bronze bushings assembled in the cast iron housing, which is also a part of the oil distributing system, transmitting oil to the drilled passages.

R-104-1

B. REMOVAL

1. Refer to TOPIC 17. ENGINE REMOVAL/INSTALLATION.
2. Drain oil pan, and remove the capscrews securing the oil pan. Remove the oil pan and its gasket.
3. With the engine resting on its side, remove nut and washer holding the oil pump assembly to the center main bearing cap. Remove the oil pump assembly (Figure 12-2).

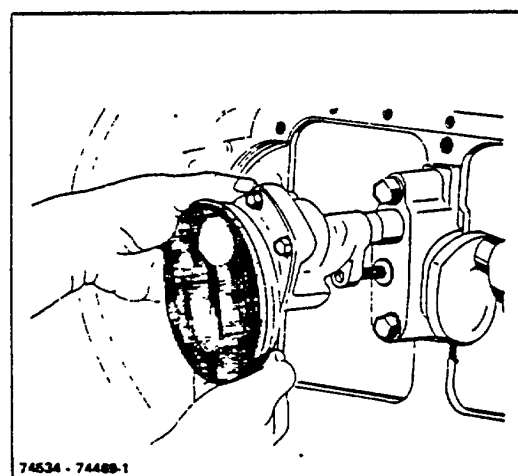


Figure 12-2. Oil Pump Removal

C. DISASSEMBLY

1. Remove screen and remove screws securing frame and cover to pump body. Remove spacer and frame.
2. Remove oil pump cover and gasket.
3. Support spiral gear at the upper end of pump on a wood block and drive out retaining pin with a drift. Press shaft out of spiral gear and remove shaft and drive gear from pump body.
4. Remove retainer ring from drive gear end of shaft and place shaft on suitable support in an arbor press. Remove gear from shaft.
5. Remove idler gear from stud.
6. Clean all parts in an acceptable solvent and dry with compressed air.

D. INSPECTION

1. When the pump is removed, examine the drive gear carefully for wear, inspecting the gear on the camshaft at the same time. If scored or worn badly, both the camshaft and the gear on the pump must be replaced.
2. Examine the pick-up screen for clogging or damage.
3. Remove the cover, being careful not to damage the lead gasket which acts as a spacer as well as a gasket to seal the joint.
4. Examine the gears and pump body for any sign of wear indicating lack of clearance. The gears should have from .001" to .003" clearance in the chamber and should make no contact with the walls (Figure 12-3).

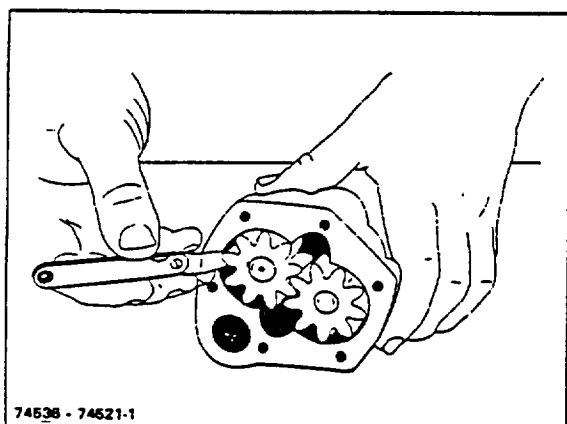


Figure 12-3. Checking Oil Pump Gear Clearance in Pump Body

5. Inspect the cover and face of the gears for excessive wear or scoring. With the gasket assembled to the body there should be .0015" to .006" clearance between the gears and the cover (Figure 12-4).
6. Worn or scored gears can be replaced, as can a worn cover. If the body shows wear in the chamber, it can be replaced; but, in a case like this, a new pump would be the most economical.
7. Engine oil pressure must be maintained to specification for satisfactory engine life.

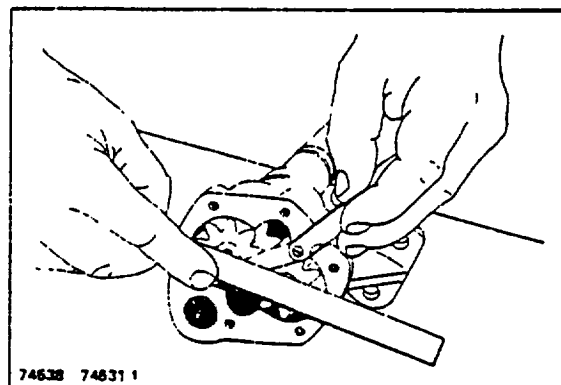


Figure 12-4. Checking Oil Pump End Clearance

E. ASSEMBLY

Press drive gear on its shaft and install shaft in pump body. Secure with snap ring. Press spiral gear back on end of drive shaft and replace retainer pin. Replace idler gear, if it was removed, and install oil pump cover and gasket. Install spacer, frame and screen.

F. INSTALLATION

1. Re-install oil pump assembly on center main bearing cap. Carefully manipulate the pump assembly to allow the spiral gear to mesh with the camshaft mating gear, and with the bushing connecting to the distributor drive. Make sure the oil pump assembly is properly seated on the center, main bearing cap, and secure with lockwasher and nut.
2. Install oil pan with new oil pan gaskets. Secure oil pan with attaching capscrews and make sure drain plug is installed.
3. Install engine in truck (refer to TOPIC 17. ENGINE REMOVAL/INSTALLATION).
4. Upon complete re-assembly, ensure that proper weight and quantity of oil have been soured into crankcase, refer to Maintenance Module LUBRICANT AND FUEL SPECIFICATIONS
5. Start engine, check for oil leaks.
6. Refer to TOPIC 13. OIL PRESSURE RELIEF VALVE ADJUSTMENT to verify proper oil pressure setting.
7. Turn engine off.

TOPIC 13. OIL PRESSURE RELIEF VALVE

A. DESCRIPTION

Stabilized lubricating oil pressure is maintained within the engine at all speeds, regardless of oil temperature, by means of the oil pressure relief valve. This valve is located on the left side of the engine, directly below the carburetor (Figure 11-1). The valve assembly consists of a plunger, compression spring, adjusting washer or washers, copper gasket, and a plug screwed on the crankcase valve opening (Figure 13-1). When oil pressure at the valve exceeds the 30-40 P.S.I. limit, the plunger is lifted off its seat, and oil from the main gallery is by-passed to the engine oil pan.

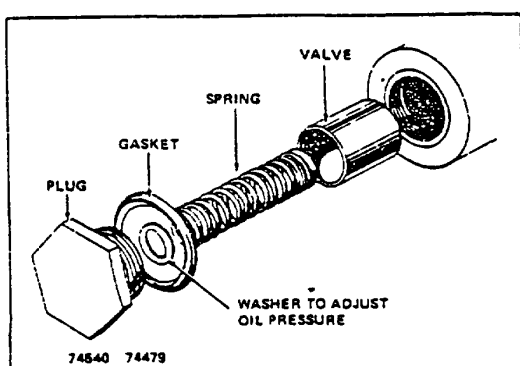


Figure 13-1. Oil Pressure Relief Valve Assembly

B. REMOVAL

Under normal conditions, the valve requires very little attention. However, if the lubricating system has been allowed to sludge up, the regulator valve may not work freely, thereby remaining open or closed. Whenever the lubricating oil pump is removed for repairs or inspection, the regulator valve should also be disassembled, thoroughly cleaned, and parts inspected.

C. DISASSEMBLY

If, with the proper grade of oil, and the engine warmed up and running at normal governed speed, and after adjusting the relief valve the oil pressure is unusually high or low, the following corrective measures should be tried:

1. Remove and clean relief valve parts of dirt, sludge, or carbon.
2. Check oil temperature and condition of oil.
3. If both the relief valve and oil are in good condition, be sure to check the oil pressure

gauge and its connections before going any farther.

4. A common source of low oil pressure is clogging of the oil pump intake screen with sludge and carbon. Remove such deposits with a solvent.
5. Unusual looseness, grooving, or damage to the camshaft bearings or oil pump will also cause low oil pressure. Such conditions call for replacement of worn parts.

D. INSPECTION

Clean oil pressure relief valve parts with a solvent and dry with compressed air. Replace the spring if it is worn, bent out of shape, cracked, or weak. Replace copper gasket to form an oil tight seal.

E. ADJUSTMENT

The only adjustment variation is, either to install a new compression spring, or to assemble or remove washers from behind the existing spring. Up to four washers can be assembled.

Whenever a relief valve adjustment is necessary, it should be done AFTER the engine and oil have reached normal operating temperatures. It is equally important that all other factors such as grade and condition of oil, bearing clearances, and security of line connections be satisfactory before any adjustment is attempted. Proceed as follows:

1. Allow engine to run until oil reaches normal operating temperature.
2. Check oil pressure at oil pressure gauge on instrument panel; verify adjustment using calibrated oil pressure gauge.
 - a. Recommended pressure with engine hot at an idle is 5 to 10 P.S.I.
 - b. Recommended pressure with engine hot at full throttle is 30 to 40 P.S.I.
3. To increase pressure, assemble washers one by one. If after assembling four washers pressure is still low, replace compression spring.
4. To decrease pressure remove the existing washers, one by one. If pressure is still high, replace compression spring.
5. After adjustment is completed, install a new copper gasket, install and tighten plug.

TOPIC 14. FILLER BLOCKS AND OIL GUARD

A. DESCRIPTION

The rear and front main bearings are sealed to the cylinder block and the oil pan by a rear oil guard, rear filler block, and a front filler block; these three components are semicircular die castings equipped with jute seals and neoprene seals (Figure 6-1). The oil guard fits in the cylinder block, just to the rear of the rear main bearing. The rear filler block is assembled to the cylinder block with capscrews, directly under the oil guard.

Jute seals are mounted on the inner semicircular grooves of the rear oil guard and filler block, where contact is made with the crankshaft. The outer semicircular groove of the rear filler block also has mounted a neoprene seal where contact is made between the filler block and the oil pan.

The front filler block is assembled to the front of the cylinder block with capscrews. A neoprene seal is mounted on the outer semicircular groove of the front filler block to seal the connection with the oil pan.

B. REMOVAL

1. Refer to TOPIC 6. CRANKSHAFT COMPONENTS for access to Filler Blocks and oil Guard.
2. With the engine resting on its side, remove the rear and front filler blocks.
3. Remove the crankshaft.
4. Remove the oil guard.

C. SERVICING

1. Remove the jute seals and neoprene seals from the oil guard and the filler blocks; thoroughly clean inner and outer seal grooves to remove all dried cement and grease.
2. Install jute seals on the oil guard and the rear filler block. Refer to Figures 14-1 and 14-2.
3. Jute packing for crankshaft seal as it is received is approximately one-third larger in diameter than the width of the groove. To fit the grooves in the filler block, the packing must be crushed in a vise or flattened with a hammer on a flat surface so the Jute packing is narrow enough to fit into the grooves.

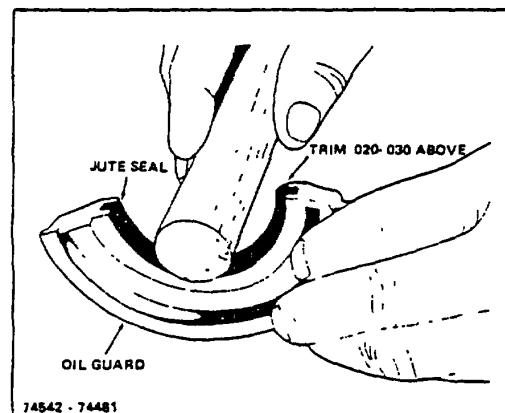


Figure 14-1. Installing Jute Seal in Oil Guard

4. Press packing seal into the grooves of both the filler block and the oil guard. Then, using a piston pin, a smooth hammer handle, or some other instrument with a rounded surface, iron this packing into the groove so that it is seated firmly and expanded so that it seizes the sides.

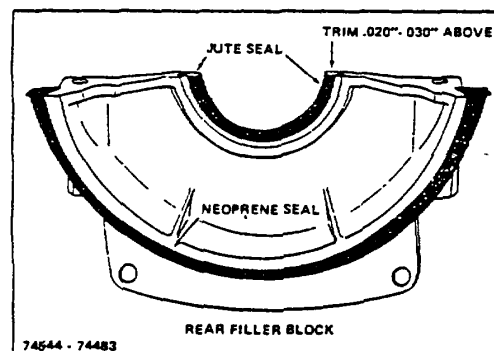


Figure 14-2. Installing Jute Seal in Rear Filler Block

NOTE

After installation, the jute packing will protrude from the grooves at either end in varying amounts. With a sharp knife, or razor blade, cut this off to project .020"-.030" above, making the cut parallel to the surface of the casting. Then slip it into place, either around the crankshaft, if the engine is still assembled, or directly into the groove if the crankshaft is out.

Replace the neoprene seal by holding it in place for assembly (Figure 14-2 and 14-3). Use only a small spot of non-hardening cement in center of the contacting surface, before inserting seal in groove. No other cement is required.

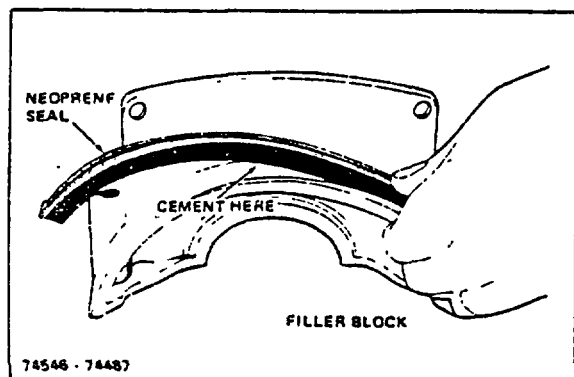


Figure 14-3. Installing Neoprene Seal in Rear Filler Block

Install the neoprene seal in the front filler block in the same manner as in the rear filler block (Figure 14-4).

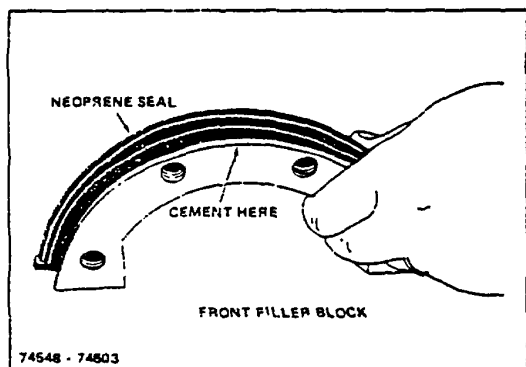


Figure 14-4. installing Neoprene Seal in Front Filler Block

D. INSTALLATION

NOTE

When replacing the front filler block capscrews, make certain capscrews include a nylock patch to lock screws firmly in place.

Torque nylock patch screw to 15-20 pounds foot. Lubricate outside or rear and front neoprene seals before installing oil pan to prevent possible distortion of seals. When replacing gear cover, cement cover with a quick drying gasket cement and reassemble to engine block (Figure 14-5).

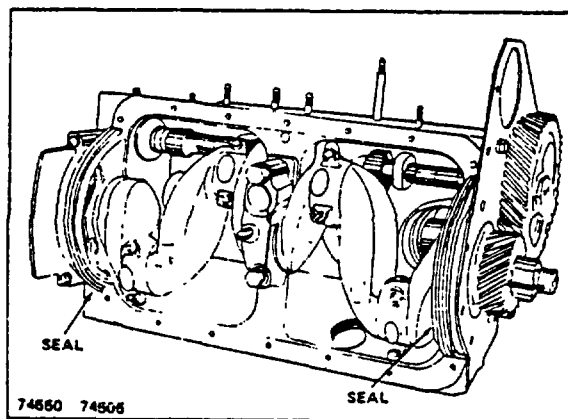


Figure 14-5. Neoprene Seals in Place

In order to prevent possible oil leaks, it is imperative to use only genuine Allis Chalmers replacement gaskets and seals-since these have been engineered and designed to do a superlative job. however, it has been determined that 90% of all rear main oil seal leak complaints checked are leaks in the pan gasket, rocker covers, side covers, etc., and are not leaking rear main oil seals.

The following is a suggested procedure to determine the exact location of an oil leak:

1. Wipe the under side of the engine to clean all dirt and oil from the oil pan, etc.
2. Plug breather pipe and oil filler opening with rags.
3. With the engine idling, blow compressed air (35 p.s.i. or less) into the dip stick pipe or opening.
4. Watch for oil leak and trace to the source.
5. Determine whether the oil is coming from the pan gasket, pan gasket end seal, leaky fitting, rocker cover gaskets, push rod cover gasket, or from any source other than the rear main oil seal.
6. A small mirror and flashlight are handy tools to use in checking hard to see places.

TOPIC 15. OIL PAN

A. DESCRIPTION

The oil pan (Figure 6-1) which is the reservoir for engine lubricating oil, contains a drain plug which is removed for periodic draining of oil. The oil pan is sealed and secured to the crankcase assembly with a gasket and capscrews. Front and rear of the oil pan have semi circular cuts which receive the filler blocks assembled to the cylinder block. The filler blocks contain oil seals and guards to prevent foreign material from entering the front and rear main bearings. Refer to TOPIC 14. FILLER BLOCKS AND OIL GUARD.

B. REMOVAL

Engine must be removed In order to detach oil pan.

1. Run engine until normal operating temperature is reached.
2. Remove oil pan drain plug, and drain oil.
3. Remove engine (see ENGINE REMOVAL.)
4. With the engine resting on its side, remove capscrews from edge of oil pan, and remove oil pan.

C. INSPECTION

1. Wash oil pan with cleaning solvent and dry with compressed air.
2. Inspect oil pan for evidence of cracks or other damage. Inspect drain plug boss for evidence of

leakage. Make necessary repairs or replacement.

3. If engine has not been overhauled, inspect filler block neoprene seals to make certain they are in good condition. If seals need replacement follow the procedure in TOPIC 14. FILLER BLOCKS AND OIL PAN.

D. INSTALLATION

1. Cement new gasket to oil pan side rails and to oil pan ends.
2. Position oil pan on cylinder block rails and secure with capscrews and lockwashers. Torque capscrews 18 to 21 ft. lbs.
3. Install drain plug in oil pan.
4. Install engine. (See ENGINE INSTALLATION.)
5. Install oil filter. Fill oil pan with correct oil. Refer to LUBRICANT AND FUEL SPECIFICATIONS MANUAL for correct grade and type of oil.

NOTE

When changing oil, the oil filter must also be changed, and 4-1/2 qts. of oil replaced.

6. Run engine and check for oil leaks around oil pan and at filter.

TOPIC 16. ENGINE RUN-IN SCHEDULE

A. PURPOSE

After installation of new engine, or one in which new pistons and piston rings have been installed engine must be run-in to allow piston rings to seat and avoid possibility of cylinder bore scoring and excessive oil consumption. When engine is first started after installation of new pistons and piston rings, excessive smoke, raw fuel and lubricating oil may appear in the exhaust. This condition should correct itself as engine is run-in.

Test run engine after overhaul and make adjustments as are found necessary for smooth and efficient engine operation.

B. TEST RUN CHECKS

The following procedure is recommended with engine installed in truck.

CAUTION

Ensure engine has been cleared of all rags, tools, parts, oil, water, etc., prior to engine run-in.

1. Fill crankcase to correct oil level with oil specified in Maintenance Module, LUBRICANT AND FUEL SPECIFICATIONS.
2. Fill cooling system with proper coolant for summer or winter operation. Refer to COOLING SYSTEM Section.
3. Inspect air cleaner to determine if properly serviced. Lubricate all points where lubrication is required.
4. Start engine and allow to run at approximately 600-700 R.P.M. Check for oil, fuel or coolant leaks. Check coolant and oil levels. If engine is run indoors, pipe exhaust gases outside.
5. Check oil pressure gauge. If gauge does not register during first 30 seconds after starting, stop engine at once and refer to TROUBLE SHOOTING Section.
6. Check ammeter. If not functioning correctly, check electrical system for grounds, shorts or loose connections.
7. Check engine timing. Refer to FUEL SYSTEM Section.
8. After engine has reached normal operating temperature, remove valve chamber cover and check valve clearances.
9. A run-in period of six to eight hours is recommended. Start with no load and gradually increase engine load until operating at full load for the last two hours.
10. At end of run-in gradually slow down engine and allow it to idle for a few minutes, allowing engine to cool gradually.
11. Torque cylinder head capscrews.
12. Recheck crankcase oil level and any points of adjustment, making necessary corrections.
13. Warm up engine to operating temperature. Blow dirt out of pockets around spark plugs, remove plugs, and insert compression gauge in first spark plug hole, holding it firmly. Crank engine until the highest gauge reading is obtained. (Approximately four compression strokes). Check all cylinders in this manner. If readings are low in two adjacent cylinders, a blown head gasket is indicated. If readings are low and vary widely (more than 10 PSI), pressure is being lost either at the pistons, rings or valves. To determine where pressure loss is occurring, insert about one tablespoon of SAE 30 engine oil through the spark plug hole. Take a new reading. If this reading is higher than the initial reading, the piston rings are faulty. If reading is the same as the initial reading, the valves may be leaking or the cylinder head gasket is damaged.

TOPIC 17. ENGINE REMOVAL/INSTALLATION

Engine removal and installation is easily and safely accomplished when reasonable care and attention to detail is exercised. The following procedure is recommended for efficient engine removal and installation.

A. REMOVAL

CAUTION

Disconnect battery leads before attempting removal. Remove battery and battery tray. Disconnect and label any attaching wiring.

1. Attach an acceptable hoist chain to counterweight eyelets and take up slack in chain.
2. Remove securing counterweight capscrews and remove counterweight, taking care not to damage radiator or hydraulic pump.
3. Remove radiator cap slowly, to ensure against scalding, and open petcock at base of radiator and on engine block, to drain water from block and radiator.
4. Remove upper and lower radiator hose clamps and hoses. (Guard against damage to thermostat mounted at base of upper hose.) Disconnect transmission cooling oil lines.
5. Remove radiator.
6. Remove fan blade attaching capscrews and fan blade.
7. Loosen alternator adjusting brace, remove and inspect fan belt for possible cuts or cracks. Replace if necessary upon engine installation.
8. Disconnect and immediately cap hydraulic lines at hydraulic pump. Remove hydraulic pump, pump gear and sleeve.
9. Disconnect and label attaching alternator wiring.
10. Remove securing alternator capscrews and alternator.
11. Disconnect spark plug ignition wires at plugs and mark.
12. Remove spark plugs and cap or tape exposed ports to prevent contamination.
13. Remove distributor cap with attaching ignition coil and spark plug wiring.

14. Cover exposed distributor base to prevent entrance of foreign particles.
15. Disconnect and label oil pressure and temperature sender wires. Disconnect neutral start switch wires.
16. Remove attaching clamps, capscrews and nuts, and disconnect exhaust pipe. Tape exposed exhaust manifold port.
17. Remove oil pan drain plug and drain crankcase.
18. Remove transmission drain plug and drain transmission oil.
19. Disconnect and label engine oil filter lines. Remove oil filter and attaching bracket.

CAUTION

Cover or plug all open lines to prevent contamination of engine systems.

20. Loosen air cleaner hose clamps and wing nut. Remove air cleaner and attaching parts.
21. Disconnect transmission oil filter lines, where applicable, and label.
22. Disconnect accelerator linkage and choke control at carburetor.
23. Close fuel tank shut-off valve and disconnect fuel line to fuel strainer.
24. Disconnect transmission linkage, and cooling lines.
25. Disconnect universal joint at transmission.
26. Install lifting eyes in engine and transmission.
27. Firmly attach hoisting chain to lifting studs and take up slack in chains.

CAUTION

Make certain that all electrical wiring, mechanical linkage and attachments, and hoses are free and clear of engine/transmission attachment or obstruction prior to removal or installation.

28. Remove engine motor mount bolts.
29. Slowly hoist engine assembly free of frame ensuring that engine and attached transmission do not bind or bump against the frame resulting in possible injury or unnecessary damage.

30. Once free of the frame, lower engine onto engine support and after proper seating and weight support is ascertained, remove hoisting chain.
31. With transmission properly supported by attaching hoist chain, remove securing capscrews and carefully disengage transmission assembly from engine.

11. Remove transmission oil level stick and fill with specified transmission oil to full mark, as indicated on oil level stick.

CAUTION

Do not over-fill transmission.

12. Replace oil pan drain plug, and close coolant drain cock at radiator and cylinder block.
13. Replace oil filter cartridge and connect oil filter lines to engine as labeled and connect oil filter lines to engine as labeled.
14. Connect accelerator linkage and choke control at carburetor.
15. Connect fuel line to fuel strainer.
16. Install exhaust pipe and attaching clamps and hardware.
17. Verify proper electrode gap, .025", and install spark plugs. Torque plugs 25-30 lbs. ft.
18. Replace distributor cap with attaching ignition wires. Remove labeling tape as ignition coil and spark plug wires are properly affixed.
19. Connect temperature sender and oil pressure sender wires. Connect neutral start switch wires.
20. Install alternator and mounting hardware but do not lock adjusting brace at this time. Connect associated alternator wiring.
21. Inspect belt for wear, replace if necessary, and mount on fan drive pulley, water pump and alternator pulleys.
22. Secure alternator adjusting brace for fan belt depression of $\frac{1}{4}$ " - $\frac{1}{2}$ " with 10 lbs. of pressure applied.
23. Install air cleaner and attaching hardware, hoses and clamps. Inspect filter element for contamination and replace if necessary.
24. Replace fan blade and secure capscrews.
25. Install hydraulic pump sleeve and gear and install pump. Connect hydraulic lines

B. INSPECTION

Look engine over closely for any signs of damage, wear or evidence of leaks. Necessary action should be taken to correct any abnormal conditions.

C. INSTALLATION

1. Ensure that engine is free of rags, tools, extra parts, excess water, oil, fuel cleaning agents.
2. Make certain that any maintenance performed was properly done and that nuts and capscrews are all torqued to specification.
3. Refer to REPAIR MANUAL TRANSMISSION and install transmission on engine.
4. Properly attach hoisting chain to engine and transmission lifting eyes and take up slack in chain.

CAUTION

Be certain that frame, engine and transmission mounting areas are clear of any obstructions such as wiring, hoses, mechanical linkage, etc., prior to installation.

5. Carefully maneuver engine assembly into mounting position and slowly, guarding against any binding, lower assembly onto engine mounts.
6. Install and secure mounting bolts. Torque to 20 lbs. ft.
7. Disengage hoisting chain and clear from work area.
8. Refer to REPAIR MANUAL UNIVERSAL JOINTS AND COUPLINGS and connect universal joint to transmission.
9. Refer to REPAIR MANUAL TRANSMISSION and connect transmission linkage and cooling lines. Install transmission drain plug.
10. Connect transmission oil filter lines and inspect filter for contamination or scheduled replacement. Change if required.

to pump. If contamination of hydraulic oil is suspected, drain reservoir, change filter and replace oil, after filtering oil through a 10 micron, or finer, filter.

26. Install radiator, taking care not to damage cooling fins, and replace upper and lower radiator hoses, thermostat and hose clamps.
27. Connect transmission oil cooling lines to radiator.
28. Replace counterweight and secure capscrews.

CAUTION

Use extreme care when replacing counterweight to prevent personal injury or damage to equipment.

29. Replace grille and secure.
30. Replace angle braces, seat plate, engine cover and side panels, and seat. Replace floor and toe plate.
31. Install battery tray and battery. Connect any wiring removed from tray attachment and connect battery terminal leads.

32. Fill radiator to capacity with water. Add anti-freeze if required.
33. Fill crankcase with 4.5 quarts of recommended engine oil. Check oil level stick for full reading.

NOTE

Ensure that all hoses, electrical lines and mechanical linkages have been completed. Be sure all capscrews, braces and mounts are secure.

34. Check fuel tank for water condensation: drain if necessary.
35. Fill tank to recommended limit with proper octane gas and open fuel cutoff valve.
36. Start engine, run at Idle for approximately 5 minutes, then shut off and check radiator water level, crankcase dipstick and transmission oil level stick for full capacities.
37. Check for evidence of oil, fuel or water leaks.
38. Continue with engine run-in schedule as specified.

TOPIC 1. FUEL SYSTEM

The following components make up the fuel system: The fuel tank, fuel pump, strainer and filter, the carburetor, accelerator linkage and the governor assembly.

The fuel tank is the fuel reservoir and, via the fuel lines, fuel pump, strainer and filter, supplies the carburetor with raw fuel to be vaporized and mixed with fresh air for controlled combustion.

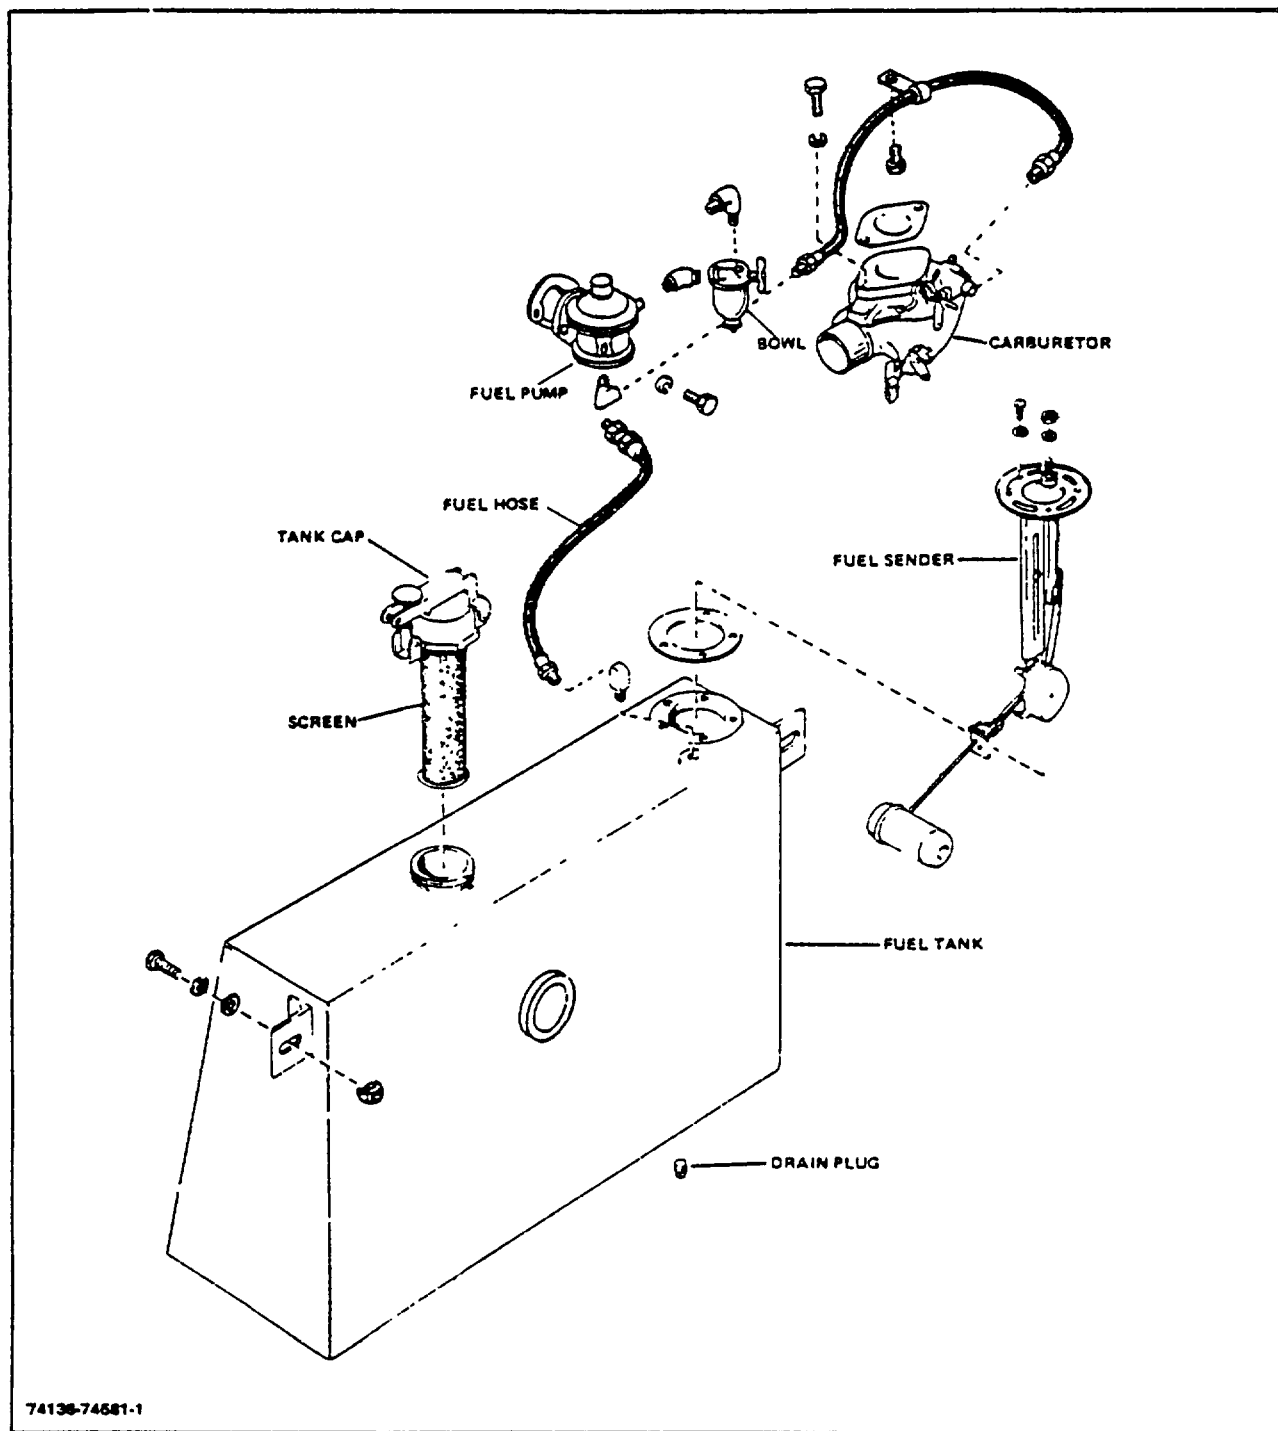


Figure 1-1. Fuel System (Type I)

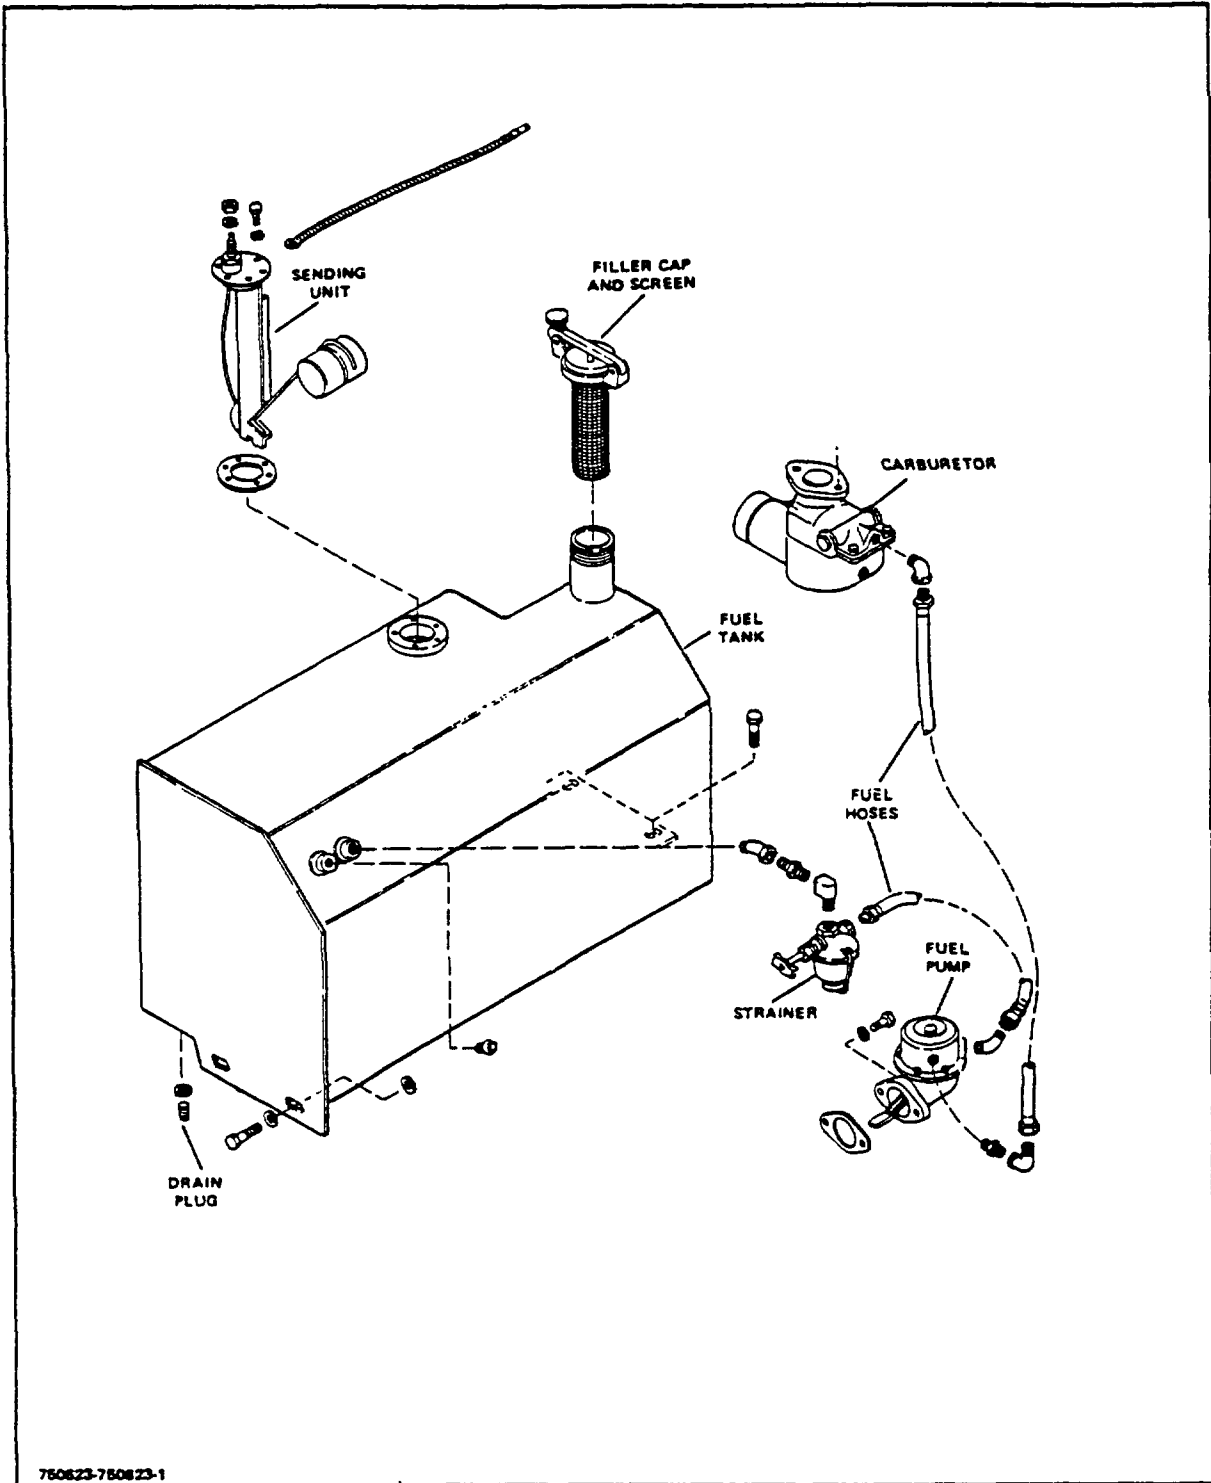


Figure 1-3. Fuel System (Type III)

TOPIC 2. FUEL TANK

A. DESCRIPTION

The fuel tank is of steel construction and welded seams. It includes a fuel level sender unit, a filler cap with filter screen and the fuel outlet line and fittings.

The fuel tank requires little, if any, service other than periodic cleansing of the fuel filter.

B. REMOVAL

1. Remove the fuel tank drain plug from bottom of tank or open shutoff cock and allow fuel to drain.
2. Remove the floor and toe plates.
3. Raise the left side of the truck sufficiently to allow removal of the fuel tank.
4. Remove hose from top of tank and the fuel gauge sender wire (Fig. 1-1).
5. Disconnect fuel gauge sender wire. Close cock at bottom of tank and disconnect tube from shutoff cock (Fig. 1-2).
6. Disconnect fuel gauge sender wire. Disconnect hose from fuel strainer and remove strainer from tank (Fig. 1-3).
7. Remove the filter cap assembly.
8. Remove the capscrews, lockwashers, and washers which secure the fuel tank to the truck.
9. Carefully remove the fuel tank from the under side of the truck.

C. DISASSEMBLY AND INSPECTION

1. Remove necessary fittings from tank and allow remainder of fuel to drain.
2. Clean filler cap and filter screen assembly with acceptable solvent and dry thoroughly with compressed air.

3. If removal of fuel sending unit is necessary, remove capscrews and lockwashers (Figure 1-1) that secure sending unit to tank. Carefully lift unit out of tank being certain not to bend float arm.

D. ASSEMBLY AND INSTALLATION

1. If removed, carefully install fuel sending unit, ensuring against any damage to float arm.
2. Install capscrews and lockwashers and secure tank to frame.
3. Replace the fuel tank drain plug.
4. Replace fuel filler assembly.
5. Before installing tank, disconnect fuel line at fuel pump and blow out line with compressed air.
6. Inspect cooper fuel line and fuel hose for damaged connectors, crimped line, cracks or oil soaked hose. Replace damaged lines.
7. install fuel tank as-removed and replace capscrews, washers and nut which secure the top and rear of the tank to the truck. Lower truck to ground level.
8. Attach fuel sender wire.
9. Replace previously removed fittings and hose (Fig. 1-1).
10. Connect tube-to shutoff cock at bottom of tank (Fig. 1-2).
11. Connect fuel strainer to elbow in top of tank and connect hose to strainer (Fig. 1-3).
12. Fill fuel tank to recommended capacity with proper octane fuel.
13. Check all fittings and lines for any leaks. Repair, if required.

MEMO

TOPIC 3. FUEL PUMP AND FUEL FILTER

A. DESCRIPTION

The fuel pump is a mechanical diaphragm type with an attached strainer and sediment bowl. The pump is mounted on the side of the engine and is operated by an eccentric on the engine camshaft.

Fuel from the tank enters the strainer sediment bowl on the suction stroke of the pump and is forced to the carburetor on the pressure stroke. Action is controlled by two valves in the cover assembly.

On ACP model trucks the fuel strainer is connected directly to the tank and fuel is delivered to the fuel pump through a connecting hose (Fig. 1-3).

B. SERVICE AND INSPECTION

Quite often engine malfunctioning can be traced to a clogged fuel pump; therefore, periodically clean sediment bowl and strainer screen.

Loosen capnut, swing clamp wire to one side, and remove bowl. Thoroughly clean bowl and screen. If there is excessive dirt on the screen or in the bowl, check fuel tank and source of supply.

If pump is supplying insufficient fuel, engine will stall or falter. Check the following:

1. Make sure there is fuel in the tank and the shut-off valve at sediment bowl is fully open.
2. Disconnect fuel outlet line from pump. Remove high tension wire from ignition coil and turn the engine over several revolutions. If fuel spurts from pump outlet, it indicates pump, gas lines and fuel tank are not at fault.
3. If little or no fuel flows, perform the following:
 - a. Check for leaking gasket at sediment bowl or top cover of the pump.
 - b. Remove and clean fuel screen in sediment bowl.
 - c. Inspect copper fuel line for restrictions. Blow out with compressed air or replace if damaged.
 - d. Inspect flexible fuel line for breaks or a porous condition. Replace if necessary.

- e. Make certain all pump cover screws are tight.

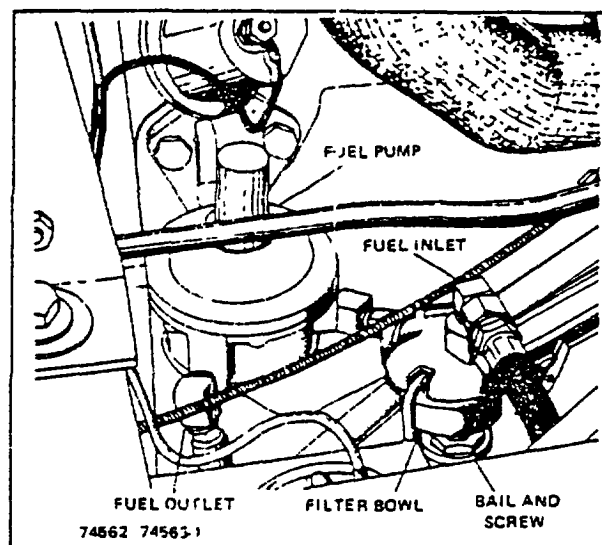


Figure 3-1. Fuel Pump and Filter Mounting (ACC Model Trucks)

- f. Test pump for proper operating pressure by disconnecting outlet line and attaching test gauge to fuel outlet port. Run engine at 1800 r.p.m. on fuel remaining in carburetor and note pressure on gauge. Pressure should be between 1-1/2 P.S.I. minimum and 2-1/4 P.S.I. maximum. Pressure below minimum indicates excessive wear. It may also indicate a ruptured diaphragm, worn, dirty or gummy valves and seats. Any of the above require removal of the pump for replacement.

If pump is supplying too much fuel, it will drip from the carburetor, or the engine will not idle smoothly, and will be hard to start. Check the following:

1. Perform Step f above for testing the pump for proper operating pressure.
2. A pressure above maximum indicates too tight a diaphragm or too strong a diaphragm spring. Poor riveting on a diaphragm assembly may also result in too high a pressure due to fuel seeping between diaphragm layers, bulging the diaphragm and causing it to act as if it were stretched too tightly. The above requires removal of the fuel pump for replacement.

3. Loose fuel line at carburetor.
4. Excessive use of hand choke.
5. Punctured carburetor float.
6. Defective carburetor needle valve.
7. Incorrect carburetor adjustment.

pump cover. Tighten securely to prevent fuel leakage.

2. Install filter screen and gasket in filter cover, place bowl in position and tighten clamp.
3. Install elbow and flexible fuel line in top of filter cover.

C. PUMP REMOVAL

1. Lift operator's seat, and swing open right hand side panel.
2. Close shut-off valve at sediment bowl.
3. Disconnect fuel outlet line to carburetor and disconnect fuel inlet hose from supply line from fuel tank.
4. Remove the pump mounting capscrews and lockwashers and lift pump from engine.
5. Wash pump and sediment bowl with a solvent and dry with compressed air.

G. PUMP AND FILTER INSTALLATION (ACC TRUCKS)

1. Secure pump and filter assembly to engine with capscrews and lockwashers.
2. Attach fuel lines from tank and carburetor. Make certain all connections are tight.
3. Open shut-off valve at filter and start engine. Check all connections for leaks.
4. Swing shut the right hand side panel and lower the operator's seat.

D. FILTER DISASSEMBLY

1. Remove flexible fuel line and elbow from fuel filter cover. Leave shut-off valve open.
2. Loosen clamp nut, move clamp to one side and remove sediment bowl, gasket and screen.

H. FILTER ASSEMBLY (ACP TRUCKS)

1. Install elbow in filter cover and install cover on fitting in full tank (Fig. 1-3).
2. Install filter screen and gasket in filter cover. Install bowl and tighten clamp.
3. Connect fuel hose to filter.

E. INSPECTION

Clean and rinse all parts in an approved solvent and dry with compressed air.

Make a visual check for cracks and breakage. Examine all threaded holes and filter screen. Replace broken or damaged parts.

F. FILTER ASSEMBLY (ACC TRUCKS)

1. Install filter cover nipple and filter cover on fuel

I. PUMP INSTALLATION (ACP TRUCKS)

1. Install pump and gasket on engine and secure with capscrews and lockwashers.
2. Attach fuel line from filter and fuel line to carburetor.
3. Open shutoff valve at filter and start engine. Check all connections for leak! 4. Close the right hand side panel and lower operator's seat.

TOPIC 4. CARBURETOR(TYPE II) (PRT)

A. DESCRIPTION

The carburetor is of the single barrel updraft design, with a single venturi, two floats, and a semi-concentric fuel bowl to permit operation at quite extreme angles without flooding or starving the engine. It is of the "balanced" and "sealed" type since all air for fuel bowl ventilation and idle operation must enter through the air cleaner. The fuel supply system is made up of the threaded fuel inlet, and the float chamber. The idle system consists of two idle discharge holes, idle air passage, idle adjusting needle, idle jet, and fuel pickup passage. The high speed (main metering) system consists of the venturi, main jet, main discharge and well vent. The choke system is of the semi-automatic type and is made up of a choke plate, with a spring loaded poppet valve, mounted on a shaft located within the air intake and operated externally by a lever attached to the choke shaft.

B. OPERATION

1. Fuel Supply System.

Fuel under pressure is supplied through the fuel inlet fitting, fuel valve (needle and seat) to the float chamber, see Figure 4-1. The float in the float chamber automatically regulates the opening through the fuel valve (needle and seat) to maintain the proper level of fuel in the fuel bowl and to meet the demands of the engine according to engine load and speed.

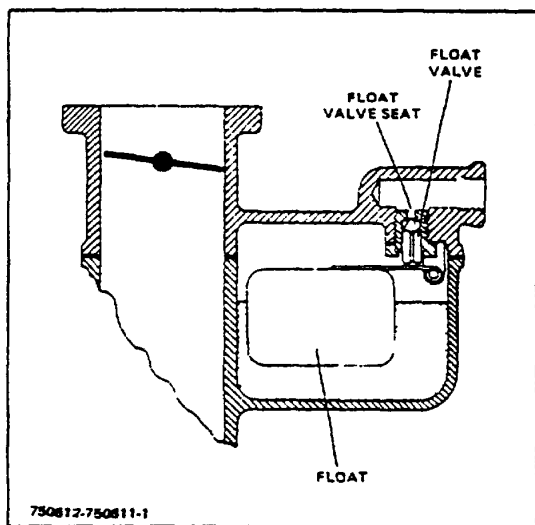


Figure 4-1. Fuel Supply System

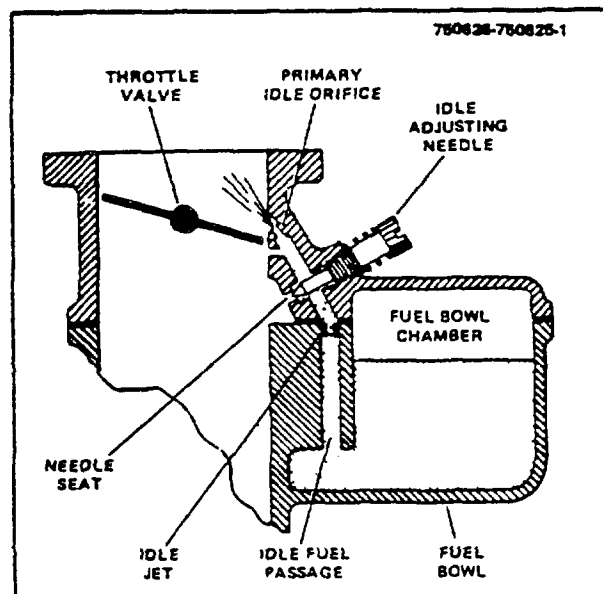


Figure 4-2. Idle System

2. Idle System.

The idle system controls the flow of fuel at idle speed and at slow speeds until the throttle is opened wide enough to allow the power fuel feed system to function.

When the throttle valve (Fig. 4-2) is in the idle position the edge of the valve is between the primary idle orifice and the secondary idle orifice. With the valve in this position the air pressure (manifold vacuum) at the primary idle orifice is lower than the air pressure in the fuel bowl chamber and fuel is forced from the fuel bowl into the Idle fuel passage. As the fuel travels through the idle fuel passage it passes through the metering orifice of the idle jet to the point where it is combined with air entering through the idle adjusting needle seat. The mixing of air with gasoline helps to atomize the fuel and the process is repeated at the secondary idle orifice as the fuel travels through the idle fuel passage. As this rich mixture of fuel and air emerges from the primary idle orifice it is reduced to correct proportions by the air which passes around the throttle valve since this valve must be slightly open to permit the engine to idle. The resultant mixture is correct for operating engine at idle speed, provided the idle adjusting needle is properly adjusted.

As the throttle valve is slowly opened from the slow idle position it gradually subjects the secondary idle orifice to intake manifold vacuum, and the secondary idle orifice no longer bleeds air to the idle fuel passage but feeds an additional quantity of fuel into the engine. This is proper since the throttle valve is now open wider and will admit a greater amount of air to blend with this additional fuel to maintain the correct proportions of fuel and air for the engine.

As the throttle valve is opened still wider, the idle fuel delivery begins to fade out, however, the throttle valve at this point is far enough open for the power fuel feed system to begin functioning.

3. High Speed System.

With the throttle valve (Fig. 4-3) in slow or just off slow idle position, fuel rises up through the nozzle and out the nozzle air bleeds to fill the accelerating well to approximately the height of the fuel level in the fuel bowl.

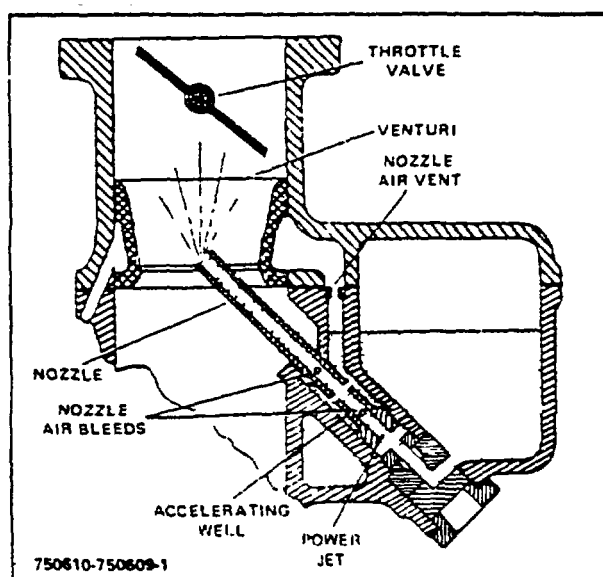


Figure 4-3. High Speed System

As the engine speed is increased from the slow idle position the air flow through the venturi is gradually increased, the velocity through the venturi is high enough to create a pressure at the tip of the nozzle slightly less than the pressure in the fuel bowl chamber and the accelerating well. Fuel, therefore, feeds from the fuel bowl through the power jet and out the nozzle to be discharged into the air stream at

the venturi. At the same time, the fuel that is stored in the accelerating well is also forced through the nozzle air bleeds into the nozzle. Because of the size of the power jet, the fuel in the accelerating well will soon be exhausted and air will then enter through the nozzle air bleeds to mix with the fuel passing through the nozzle. The amount of air that can enter into the nozzle is limited by the size of the nozzle air vent.

The result of air bleeding into the nozzle is, to help atomize or break up the fuel into finer particles, to regulate the quantity and the rate of discharge of the fuel fed from the accelerating well, during acceleration, and to provide the correct mixture proportions for full throttle operation.

As the throttle valve is opened toward the wide open position the velocity through the venturi continues to increase, lowering the air pressure at the nozzle and resulting in additional fuel being supplied to the engine as the speed is increased.

When the throttle valve is opened suddenly from slow or just off slow idle position, the fuel stored in the accelerating well is forced out through the nozzle air bleeds very rapidly and serves to provide the extra richness required by the engine to meet the sudden load. When the throttle valve is closed fuel again fills the accelerating well ready for the next acceleration.

4. Back Suction System.

The amount of fuel supplied to an engine is controlled by the size of the power jet, and the difference in air pressure between the fuel bowl chamber and the venturi. However, in many engines the mixture must be leaned out additionally during part throttle operation to obtain maximum economy. To provide this leaner mixture a Back Suction Economizer System is used. With this method of metering fuel, the air pressure in the fuel bowl chamber is regulated and controlled according to load conditions by a combination of bowl vent and economizer passages communicating with the throttle bore of the carburetor. Through regulations of the air pressure in the fuel bowl chamber

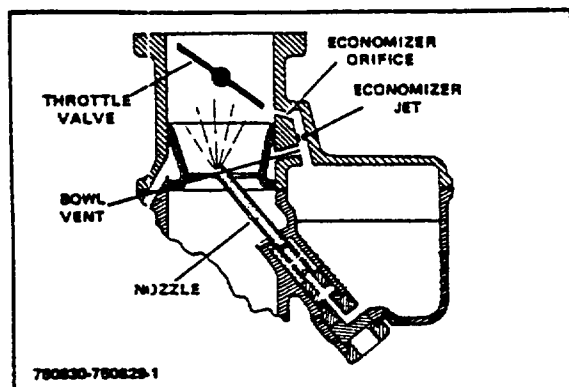


Figure 4-4. Back Suction System

the fuel flow through the carburetor can be controlled to provide the proper mixture proportions for the engine.

All the air that enters the fuel bowl chamber (Fig. 4-4) must first pass through the air cleaner and the bowl vent. The size of the bowl vent controls or limits the amount of air that can enter the fuel bowl chamber. The amount of air that is drawn out of the fuel bowl chamber is controlled by the size of the economizer jet, the economizer orifice and the position of the throttle valve as its position determines the manifold vacuum or suction on the economizer orifice. As the throttle valve is opened from the fast idle position the economizer orifice is gradually exposed to manifold suction, and air flows from the fuel bowl chamber, through the economizer jet and out the economizer orifice. This air must be replaced by air entering through the bowl vent but as the size of the bowl vent restricts the amount of air that can enter, the resultant pressure in the fuel bowl chamber will be lowered, reducing the difference in air pressure between the nozzle and the fuel bowl chamber. The flow of fuel will therefore be retarded so that the exact economy mixture ratio will be delivered to the engine at this particular throttle opening. Opening the throttle valve further exposes the entire economizer orifice to manifold suction, resulting in additional air being removed from the fuel bowl chamber, again leaning out the mixture ratio to the correct proportions for this new throttle position. After the economizer orifice is fully exposed to manifold vacuum, the amount of air that is drawn out of the fuel bowl chamber is controlled by the manifold vacuum or (or suction) at any given throttle valve position.

As this vacuum decreases as the throttle approaches wide open position, less air is drawn out of the fuel bowl chamber and additional fuel flows to the engine to provide the extra richness required for operation at heavy loads where maximum horsepower is necessary.

5. Choke System.

The choke system is used during cold starting and the warm-up period. Under these cold conditions it is necessary to supply an extra rich mixture of fuel and air, as only the "light ends" or more volatile portions of the fuel will vaporize with the manifold and air temperatures at the cold temperatures. Consequently it is necessary that a large quantity of fuel be available so that there will be enough "light ends," to combine with the air to form a combustible mixture for starting the engine.

The function of the choke valve (Fig. 4-5) is to restrict the amount of air that can enter the carburetor and to increase the vacuum on the nozzle so that additional fuel will be drawn into the manifold. As soon as the engine fires and runs the rich mixture must be rapidly reduced to prevent stalling. This change in mixture should be accomplished by the operator repositioning the choke valve. To help reduce the sensitivity of the choke valve position, use is made of a spring loaded relief valve. This valve opens automatically with engine speed and load and eliminates a great deal of manipulation of the choke on the part of the operator.

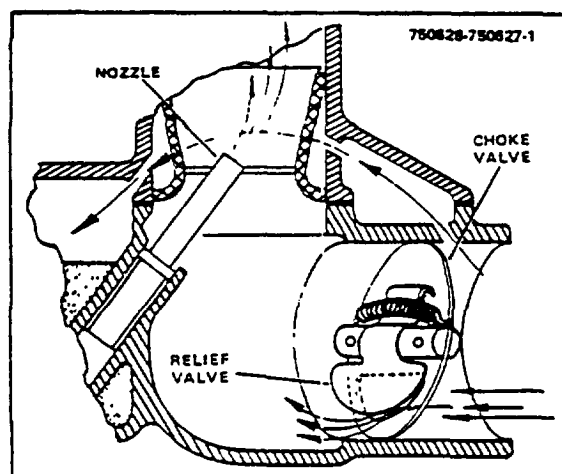


Figure 4-5. Choke System

When the engine has obtained normal operating temperature the choke valve must be fully opened to assure maximum power and economy. In addition, extended use of the choke results in more gasoline being supplied to the engine than can be burned. A large percentage of the unburned gasoline is lost through the exhaust system. The remainder of the raw gasoline is forced between the pistons and cylinder walls, washing away the protective oil film and increasing engine wear. It then enters the crankcase where it dilutes the engine oil.

Any adjustments that are necessary on the carburetor should never be attempted until the engine has obtained its normal operating temperature and the choke valve has been placed in the wide open position.

C. REMOVAL

1. Disconnect choke wire and throttle cable from carburetor. Disconnect governor rod from carburetor. Loosen clamps and disconnect air cleaner hose from carburetor.
2. Close fuel shutoff cock at fuel tank. Disconnect Fuel Inlet line from carburetor.
3. Remove two nuts and lockwashers securing carburetor to manifold. Remove carburetor and gasket. Remove studs from carburetor only if necessary.

D. DISASSEMBLY

1. Remove drain plug and drain fuel bowl. Remove four screws attaching throttle body (Fig. 4-6) to fuel bowl.
2. Raise throttle body and separate gasket from fuel bowl flange. Carefully lift throttle body from fuel bowl, being careful not to damage float assembly.
3. Remove float axle shaft and remove float from throttle body.
4. Remove float valve from throttle body. Remove bowl gasket and venturi.
5. Remove float valve seat and seat gasket.
6. Remove economizer jet and idle jet.
7. Remove idle adjusting needle and spring.
8. Remove throttle valve screws, throttle valve and throttle shaft and lever assembly.

9. Use a small screwdriver and force throttle shaft packing retainer from throttle body. Remove packing and retainer cup.
10. Remove nozzle plug, power jet, nozzle gasket and O-ring and remove nozzle from bottom of bowl.
11. Remove choke valve screws and remove choke valve from choke shaft. Remove choke shaft.
12. Remove screws attaching choke bracket to fuel bowl neck and remove bracket. Remove packing from bracket.

E. INSPECTION AND REPAIR

1. Inspect float valve for grooved condition and damage. If valve is damaged, replace float valve and float valve seat.
2. Replace idle adjusting needle if grooved or damaged.
3. Replace throttle shaft and lever assembly if looseness is noted between shaft and throttle body.
4. Replace all packings and gaskets.
5. A repair kit is available for the carburetor. It is recommended that kit parts be installed in place of old parts whenever the carburetor is overhauled.

F. REASSEMBLY

1. Install new packing and retainer on throttle shaft and lever assembly. Insert shaft in carburetor and tap lightly until retainer is flush with casting face.
2. Install throttle valve on shaft with identification mark on valve facing flange face of carburetor. Tap valve lightly to center in throttle bore. Tighten screws securely.
3. Install economizer jet and idle jet.
4. Install idle adjusting needle and spring. Turn needle all the way in to seat then back off approximately one turn for preliminary setting.
5. Place a new gasket on float valve seat and install float valve seat and float valve.
6. Place new throttle body to fuel bowl gasket on throttle body and install venturi.

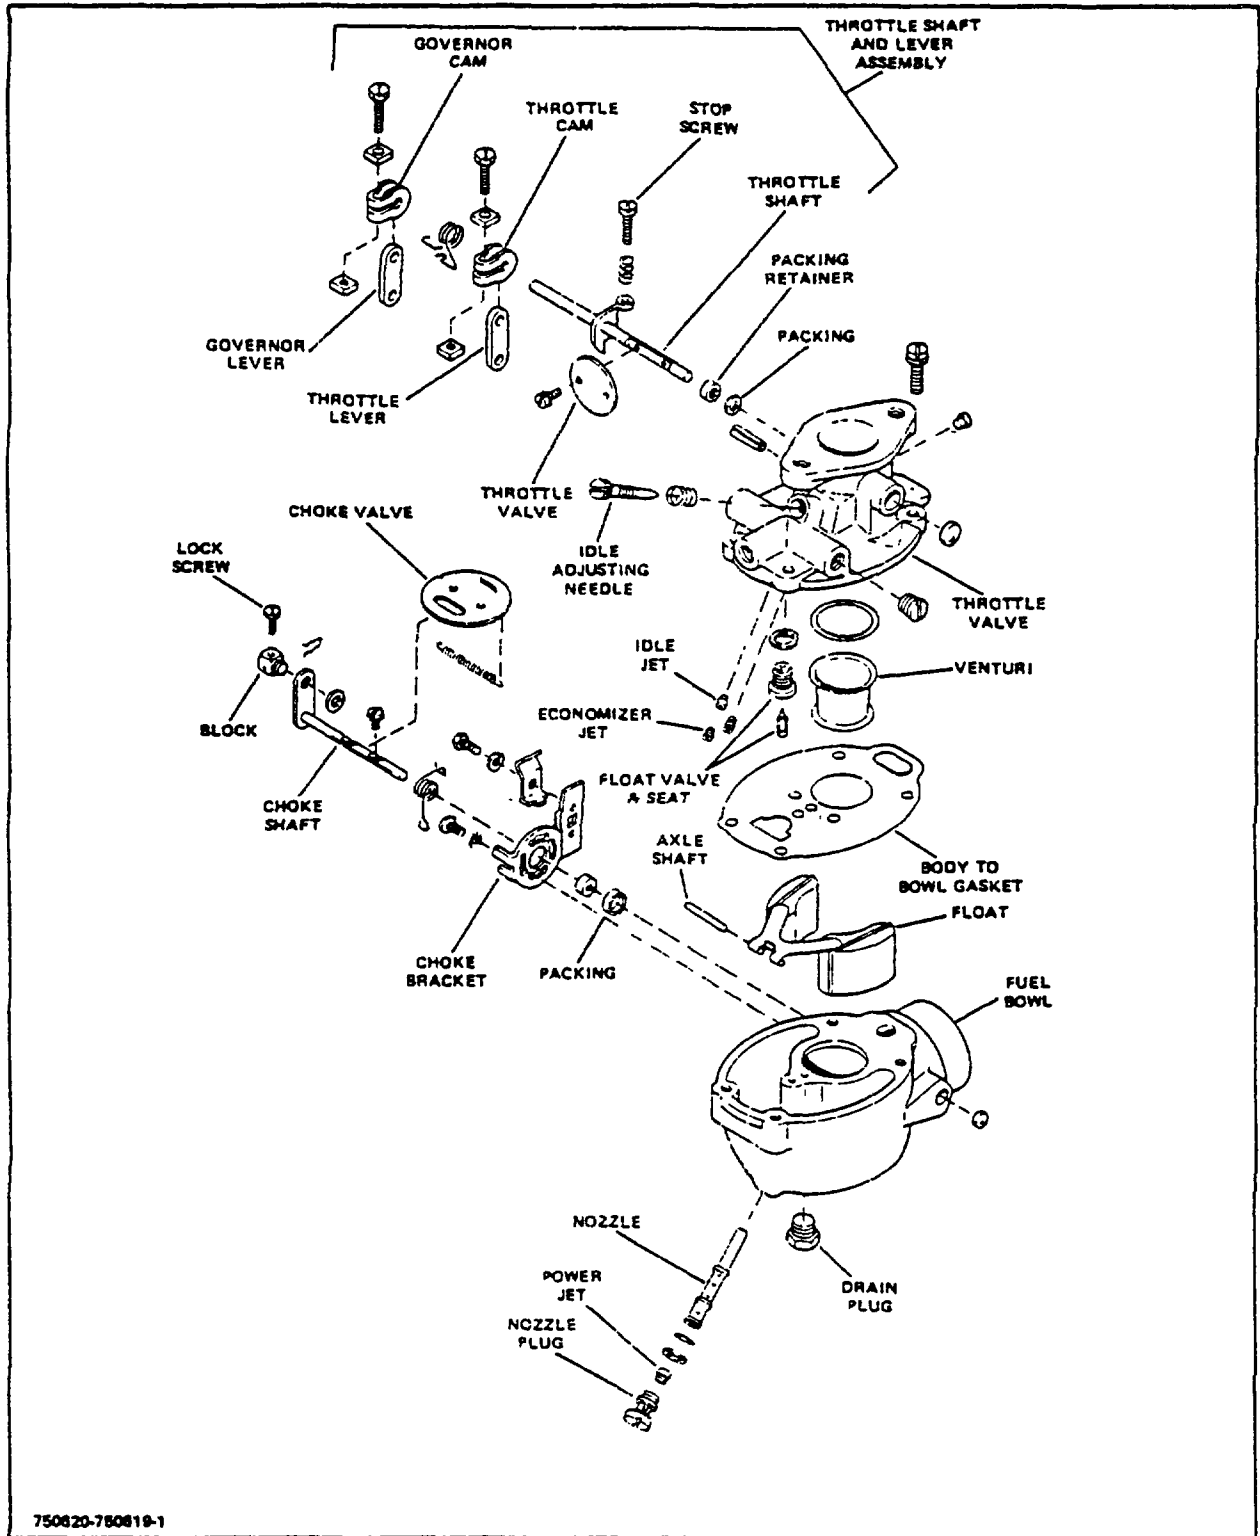


Figure 4-6. Carburetor (Type II) - Exploded View

7. Install float and lever assembly on throttle body and insert axle shaft through float lever.
8. Measure distance from gasket on throttle body. Distance (Fig. 4-7) should be .250" from gasket face to nearest edge of float. Use a long nosed pliers to bend lever as necessary to attain this measurement.

NOTE

Do not. bend, twist or apply pressure to float bodies. The float bodies when viewed from the free end of the bodies, must be centered and at right angles to the machined gasket surface and must move freely on the float axle shaft.

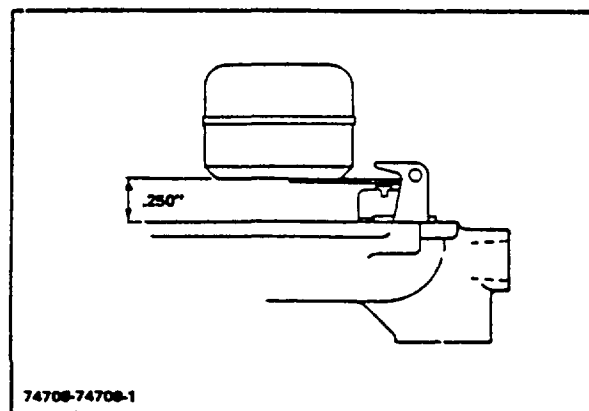


Figure 4-7. Float Setting

9. Install choke shaft packing in recess in choke bracket and tap bracket in place on fuel bowl throat to seat packing. Secure bracket with screws.
10. Install choke shaft and lever assembly and return spring.
11. Insert choke valve on lever and center valve in casting before tightening screws.
12. Install main nozzle through bottom of casting. Place new O-ring and gasket in recess and install power jet in fuel bowl behind nozzle. Install nozzle plug.
13. Invert throttle body and lower fuel bowl over floats. Be sure venturi guides float bodies into position.
14. Install bowl screws and lockwashers. Tighten screws gradually until all are tight.
15. Install drain plug in bottom of bowl.

G. INSTALLATION

1. If studs were removed, install studs in threaded holes in carburetor flange. Use a new gasket and install carburetor on manifold. Secure carburetor with nuts and lockwashers.
2. Connect inlet fuel line to carburetor. Install air cleaner hose on carburetor and tighten hose clamps.
3. Connect governor rod to carburetor lever. Insert threaded end of ball joint (Fig. 4-8) through lever and secure with ball joint nuts.

4. Install yoke on end of accelerator cable (Fig. 4-8) over carburetor lever and install yoke pin through yoke and lever. secure yoke to lever with cotter pin.
5. Install choke cable (Fig. 4-8) through clamp-on choke bracket and into block. Tighten screw to secure cable in block. Tighten clamp screw.
6. Refer to TOPIC 6 to adjust carburetor and choke linkage.
7. If the carburetor levers (Fig. 4-8) were removed during disassembly, adjust governor lever on shaft to angle illustrated.

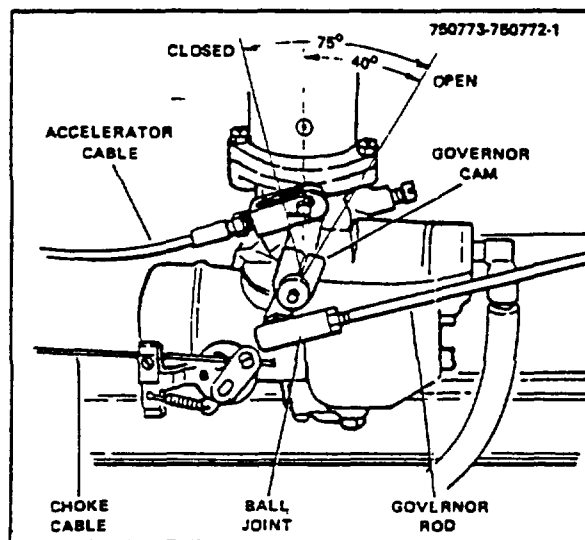


Figure 4-8. Carburetor Linkage Adjustments

H. ADJUSTMENT

1. Choke Adjustment.

- a. Loosen clamp and disconnect air cleaner hose from carburetor.
- b. Push choke control knob all the way in and check position of choke valve.
- c. If choke butterfly valve is not completely open, adjust as follows:
- d. Loosen clamp screw on choke bracket. Loosen lock screw at choke shaft block.
- e. Move choke lever to place butterfly valve in full open position. Tighten lock screw on control wire and clamp screw on bracket.
- f. Move control knob in and out several times to check for smooth operation.
- g. If control appears to be overly stiff, check for tight bends, over clamping or corrosion.
- h. After choke is adjusted, install air cleaner hose on carburetor and tighten clamps

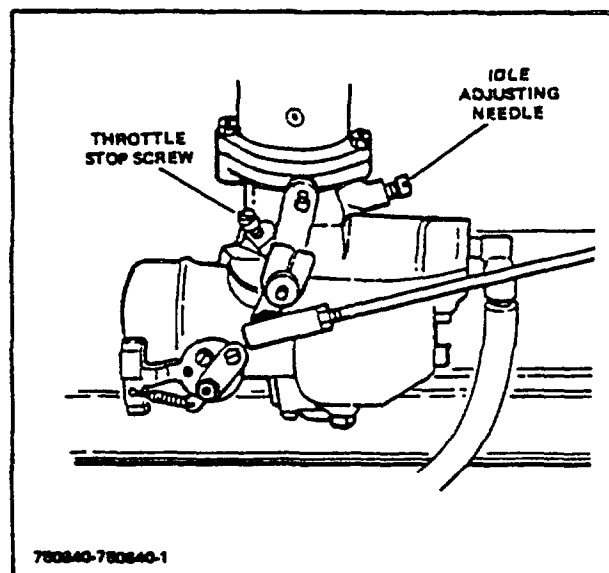


Figure 4-9. Carburetor Adjustments

2. Idle Adjustment.

- a. With engine at operating temperature, release accelerator to allow engine to run at idle speed. Turn, idle adjusting needle (Figure 4-9) counterclockwise until engine begins to falter. Turn needle clockwise until engine runs smoothly.

3. Governor Adjustment. Refer to TOPIC 8 GOVERNOR for governor adjustment.

TOPIC 4a. CARBURETOR (SRT)

A. DESCRIPTION

The carburetor is of the single barrel updraft design, with a single venturi, twin floats, and a semi-concentric fuel bowl to permit operation at quite extreme angles without flooding or starving the engine. It is of the "balanced" and "sealed" type since all air for fuel bowl ventilation and idle operation must enter through the air cleaner. The fuel supply system is made up of the threaded fuel inlet, fuel valve (needle and seat), float assembly and the float chamber. The idle system consists of two Idle discharge holes, idle air passage, idle adjusting needle, idle jet, and fuel pick up passage. The high speed (main metering) system consists of the venturi, main jet, main discharge and well vent. Some models also include a main jet adjustment. The choke system is of the semi-automatic type and is made up of a choke plate, with a spring loaded poppet valve, mounted on a shaft located within the air intake and operated externally by a lever attached to the choke shaft.

B. OPERATION

1. Fuel Supply System. Fuel under pressure is supplied through the fuel inlet fitting, fuel valve (needle and seat) to the float chamber, see Figure 3. The float in the float chamber automatically regulates the opening through the fuel valve (needle and seat) to maintain the proper level of fuel in the fuel bowl and to meet the demands of the engine according to engine load and speed.

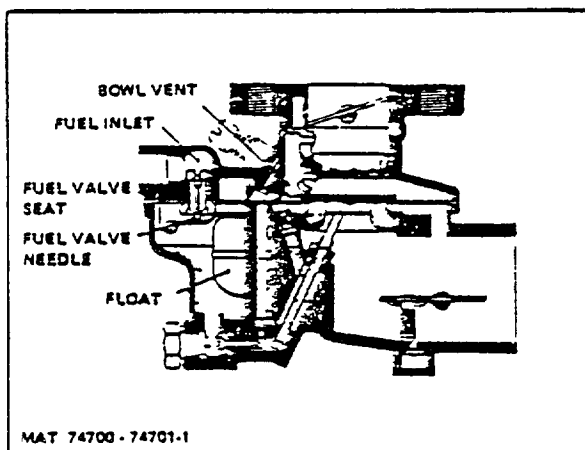


Figure 3. Fuel Supply System

2. Idle System. At idle speed the throttle plate is advanced slightly to expose the upper idle discharge hole to engine manifold vacuum (suction), see Figure 4. This suction is transmitted to the idle jet through a passage connecting the idle discharge holes with the idle jet. Fuel for idle is supplied through the main jet to a well at the bottom of the discharge jet. The fuel for idle flows out of this well through a restricted drilling at the bottom of the idle fuel pick-up passage. From here the fuel is metered through the idle jet calibration before entering the vacuum passage leading to the idle discharge holes. As the fuel leaves the idle Jet it is mixed with air that originates back of (or from behind) the venturi. The position of the idle adjusting needle in this passage controls the suction on the idle jet and thereby the idle fuel air mixture. Turning the idle adjusting needle IN, (clockwise) results in a greater suction on the idle jet with a smaller amount of air admitted to give a richer mixture. Turning the needle OUT (counterclockwise) increases the amount of idle air admitted and reduces the suction on the idle jet resulting in a leaner mixture. This idle fuel-air mixture is then discharged through the idle discharge holes into the air stream.

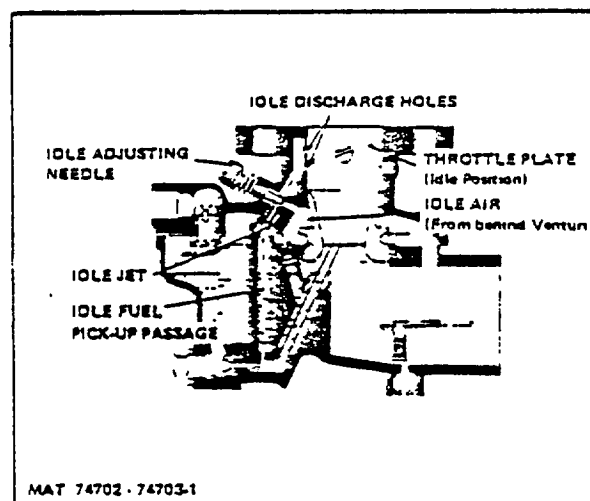


Figure 4. Idle System

3. High Speed (Main Metering) System. As the throttle is advanced to approximately one-quarter opening, the amount of air passing through the venturi creates a suction on the tip of the main discharge jet. This suction causes the fuel to flow from the fuel chamber through the main jet and into the main discharge jet where it is mixed with air admitted by the well vent jet. This mixture is then discharged into the air stream through the discharge jet, see Figure 5. The main jet controls the fuel delivery from about one-quarter to full throttle opening. To maintain a proper mixture ratio a small amount of air is admitted through the well vent into the discharge jet through air bleed holes located in the discharge jet at a point below the level of fuel in the metering well.

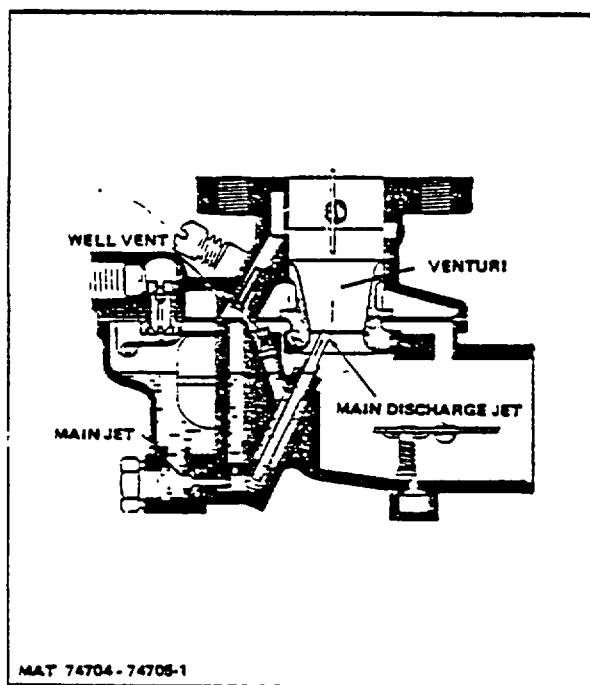


Figure 5. High Speed System

4. Choke System. Closing the choke plate when starting a cold engine restricts the air entering the carburetor through the air cleaner and creates an increase in suction on the jets. This increase in suction causes more fuel to be drawn into the engine and provides a richer mixture necessary for starting a cold engine. As soon as the engine starts to operate, the spring-loaded poppet valve located within the

choke plate opens to prevent over-choking. As the engine warms, the choke must be opened manually to the wide open position.

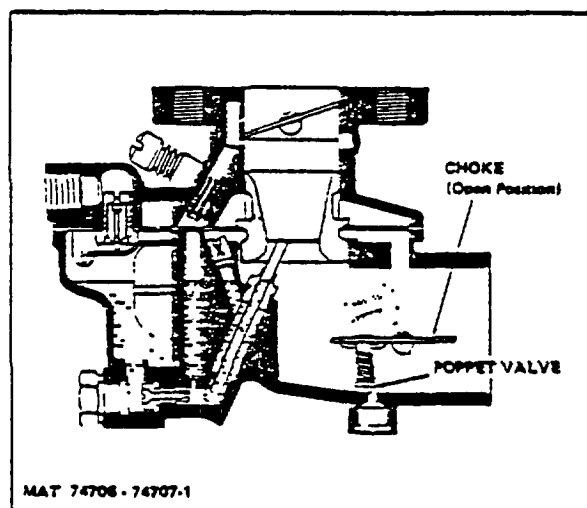


Figure 6. Choke System

C. DISASSEMBLY

1. Separation of Throttle and Fuel Bowl Bodies.
 - a. Remove hex head plug and filter screen (if used) from side of throttle body.
 - b. Remove four bowl to body screw and lockwasher assemblies.
 - c. Raise throttle body slightly and separate gasket from fuel bowl flange, then lift off throttle body assembly being careful not to damage float assembly.
2. Disassembly of Throttle Body.
 - a. Press screwdriver against float axle at slotted side of float hinge bracket and force axle through slotted side of bracket, then remove axle with fingers from opposite side of bracket and remove float assembly.
 - b. Remove fuel valve needle, bowl to body casket and venturi.

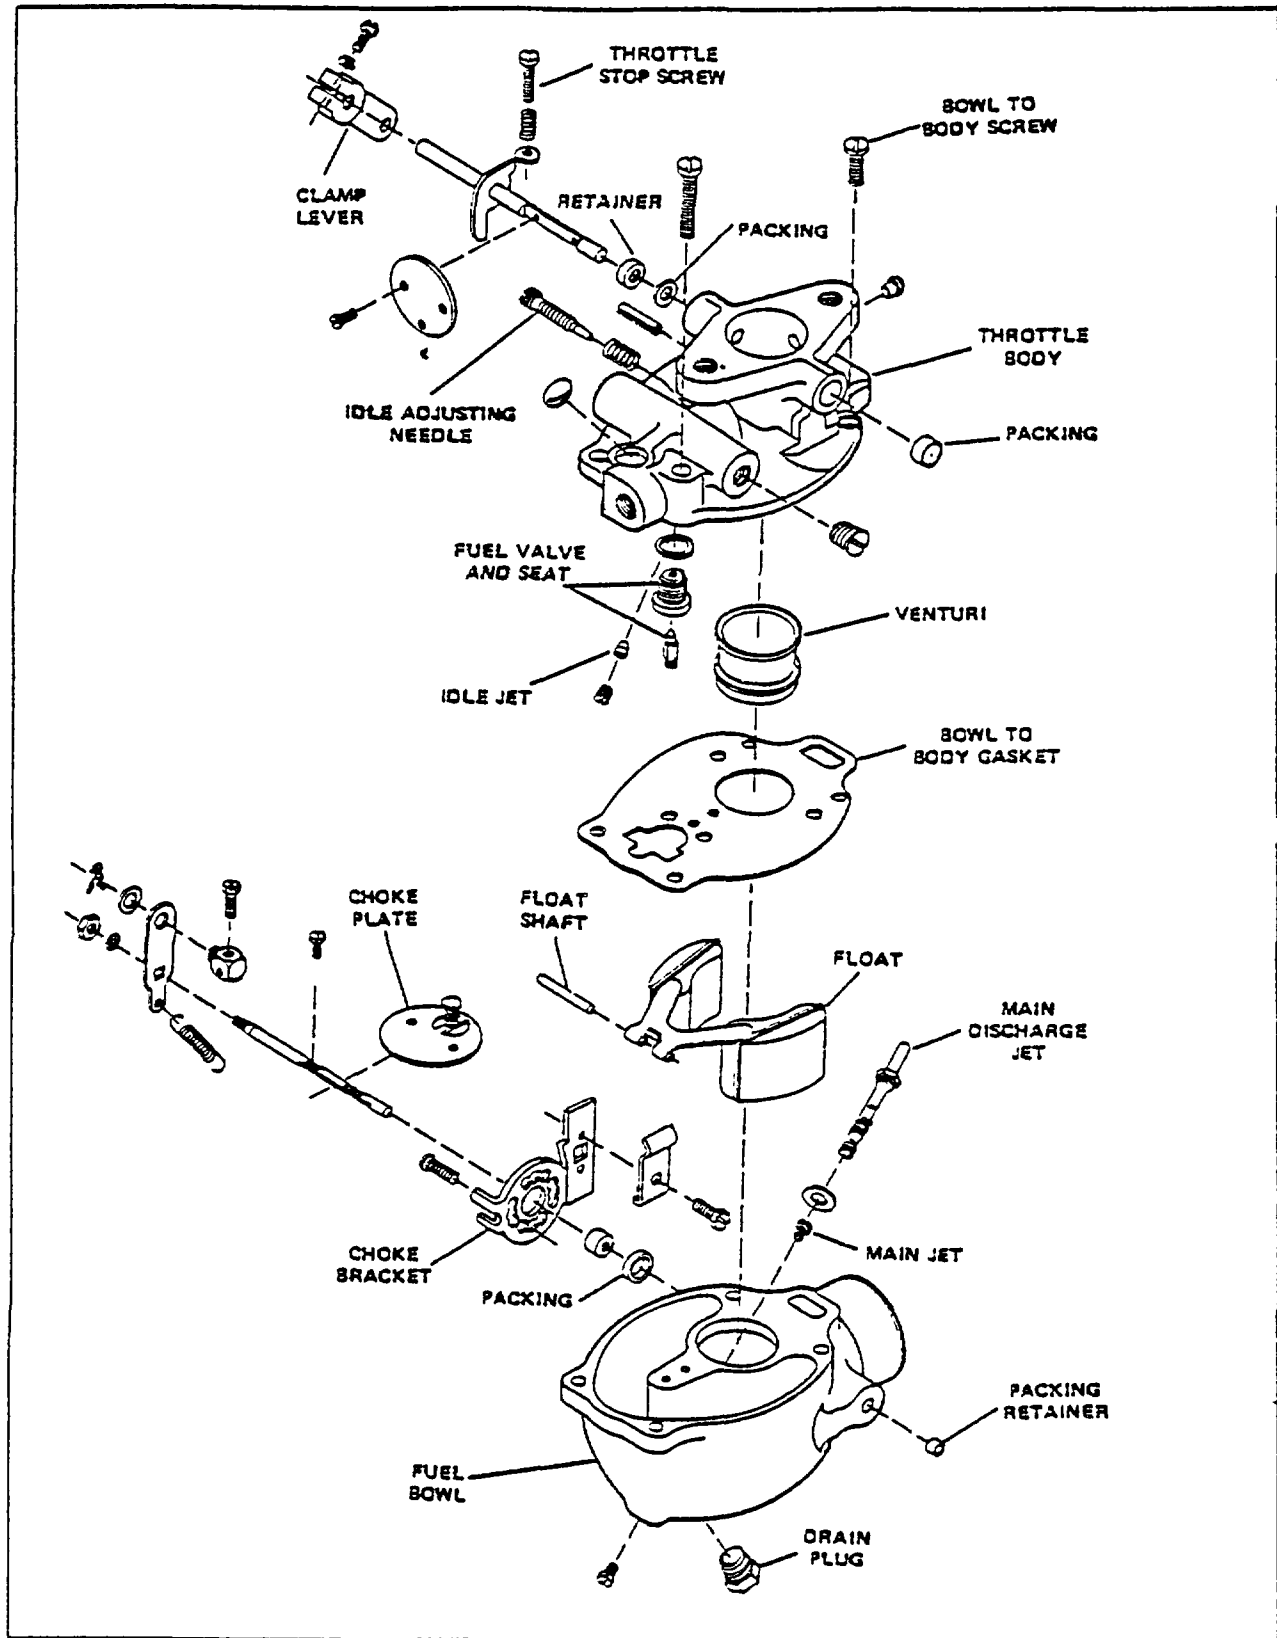


Figure 7. Carburetor, Exploded View

- c. Remove fuel valve seat and its fiber washer.
- d. Remove idle Jet from machined surface of throttle body.
- e. Remove idle adjusting needle and its friction spring from side of throttle body.
- f. Unscrew throttle stop screw until threaded end of screw is flush with throttle lever.
- g. Close throttle and scribe across throttle body and throttle levers as a guide to correct reassembly of parts.
- h. File off riveted or peened end of throttle plate screws, being careful not to damage throttle plate or throttle body bore.
- i. Remove throttle plate screws and throttle plate; then remove throttle shaft and lever assembly.
- j. To remove throttle shaft packing and packing retainer from throttle shaft hole, screw a 5/16" fine thread taper tap into packing retainer until firmly seated. Insert long punch or rod in opposite shaft hole and drive punch against end of tap until retainer is free of throttle body. Remove tap and repeat operation for removal of packing and retainer from opposite shaft hole.
- d. Remove main discharge jet and its fiber washer from center of large opening in machined surface of fuel bowl.
- e. Remove well vent jet from center of large opening in machined surface of fuel bowl.
- f. Scribe across air intake section, choke bracket and choke lever as a guide to correct reassembly of parts, then remove choke lever spring from choke lever and choke bracket.
- g. Remove choke shaft nut and its lock washer then remove choke lever.
- h. Remove choke bracket screws and lockwashers and remove choke bracket.
- i. Remove choke shaft hole plug from opposite side of air intake.
- j. Remove choke plate screws, choke plate and choke shaft from air intake section.
- k. To remove choke shaft packing and packing retainer from choke shaft holes, screw a 5/16" fine thread taper into packing retainer until firmly seated. Then insert long punch against end of tap until retainer is free of air intake body. Remove tap from retainer.
- l. Remove choke lever, taper pin and then remove lever.

NOTE

Do not disassemble throttle plate, throttle shaft and stop lever assembly, throttle packings and packing retainers from throttle body unless throttle shaft is bent or otherwise damaged or unless there is damage or visible wear to other components of throttle assembly. Do not remove throttle shaft bushings unless inspection indicates replacement is necessary. For removal and replacement of throttle shaft bushings refer to Replacement of Bushings and Reassembly.

3. Disassembly of Fuel Bowl Body

- a. Remove main jet adjustment assembly and fiber washer, using a 1/2" wrench.
- b. Remove hex drain plug from bottom of fuel bowl.
- c. Remove main jet and its fiber washer.

NOTE

Do not disassemble choke assembly bracket, choke levers, shaft and choke plate unless there is damage to any of above parts or damage to any of the other component parts of the assembly.

- m. Thoroughly clean all metal parts in Bendix Metalclene or Speedclene (or equivalent) and rinse in solvent. Blow out all passages and channels in the castings with compressed air. Reverse the air flow through each passage to insure the removal of all dirt particles.

CAUTION

NEVER USE A WIRE OR DRILL TO CLEAN OUT THE JETS.

- n. Inspect all parts and replace any that are damaged or worn. Replace throttle shaft if shaft is bent or if shaft shows evidence of wear on the bearing surfaces. Replace throttle shaft bushings if a new shaft has more than .005" side play. Always use the correct Allis-Chalmers Repair Kit. For correct Repair Kit, refer to Parts Manual. Follow procedure outlined below for Removal and Replacement of Throttle Shaft Bushings.

D. REASSEMBLY

1. Removal and Replacement of Throttle Shaft Bushings.

NOTE

Do not remove throttle shaft bushings unless new shaft bushings are available along with Bushing Driver and Line Reamer.

- a. To remove throttle shaft bushing, screw a 3/8" taper tap into bushing at one end of throttle shaft bore until firmly seated in bushing. Then insert long punch or rod in opposite shaft hole and drive punch against end of tap until bushing is free of throttle body. Remove bushing from tap.
- b. Repeat above operation to remove bushing from opposite shaft hole.
- c. To install throttle shaft bushing, place new throttle shaft bushing on bushing driver with taper end of bushing away from shoulder of driver. Start bushing into shaft hole and drive bushing in until bottomed, using a light hammer.
- d. Repeat this operation to install bushing in opposite shaft hole.
- e. Line ream the two shaft bushings, using line reamer.

2. Assembly of Fuel Bowl Body

- a. Insert packing in open side of packing retainer and place assembly on bushing driver with packing facing small end of driver.
- b. Insert small end of driver into choke shaft hole; start retainer into counterbore in body and lightly drive retainer into body until flush with machined surface.

- c. Insert choke shaft or choke shaft and lever, as the case may be, into the air intake and install choke plate in same position in air intake with poppet valve facing the same way as it was before disassembly.
- d. Align holes in plate with holes in shaft and install choke plate screws, leaving screws loose. Close choke for best closing and then tighten screws, using a small screwdriver.
- e. Install choke shaft hole plug or install choke lever with taper pin if carburetor includes lever.
- f. Place choke bracket in position on air intake with bracket aligned to scribe marks and attach bracket with screws and lockwashers.
- g. Place choke lever on choke shaft, close choke and position lever to align with scribe marks. Then assemble choke shaft nut and lockwasher and securely tighten nut.
- h. Attach choke lever spring to choke bracket and to choke lever.
- i. Install main discharge jet and fiber washer in fuel bowl and tighten jet firmly.
- j. Install well vent jet in fuel bowl and tighten, using a small screwdriver.
- k. Place Fiber washer on main jet and install Jet in threaded opening at side of fuel bowl.
- l. Install main jet adjustment and fiber washer or main passage plug, as the case may be, in threaded passage at side of fuel bowl.

3. Assembly of Throttle Body

- a. Insert packing in open side of packing retainer and place assembly on bushing driver with packing facing small end of driver.
- b. After inserting small end of driver into throttle shaft hole, start retainer into counterbore in throttle body until flush with machined surface or slightly below surface to avoid striking throttle lever.

- c. Insert throttle shaft and lever assembly in throttle body. Rotate shaft to wide open; then insert throttle plate in shaft and rotate to close position, holding plate in position with fingers. Make certain beveled sides of plate fit against throttle bore when plate is closed.
- d. Start throttle plate screws, leaving screws loose. Close throttle plate several times, making sure plate is centered in throttle bore. Then tighten screws, using small screwdriver.
- e. Install idle adjusting needle and friction spring in threaded passage at side of throttle body. Turn needle in lightly against its seat, then back out needle 1-1/4 turns as a preliminary adjustment.
- f. Install idle jet in machined surface of throttle body.
- g. Install fuel valve seat and fiber washer.
- h. Install venturi in throttle bore, large opening end first. Then place new bowl to body gasket on machined surface of throttle body, making sure venturi flange is set in throttle body recess below gasket.
- i. Install fuel valve needle in seat and position float assembly in hinge bracket.
- J. Insert float axle through hinge bracket and float lever bushing from side opposite slot in hinge bracket with fingers only. Then press float axle through slotted side of bracket, using handle of screwdriver.
- k. To insure correct fuel level in the float chamber, check distance "A" from top of floats to machined surface of throttle body (no gasket) with throttle body inverted, see Figure 8. This dimension should be 1-5/32" plus or minus 1/32". To increase or decrease distance from top of float bodies to machined surface, use long nose pliers and bend lever close to float body.

NOTE

Do not bend, twist or apply pressure on the float bodies. The float bodies must be centered and at right angles to the machined surface and must move freely on the float axle.

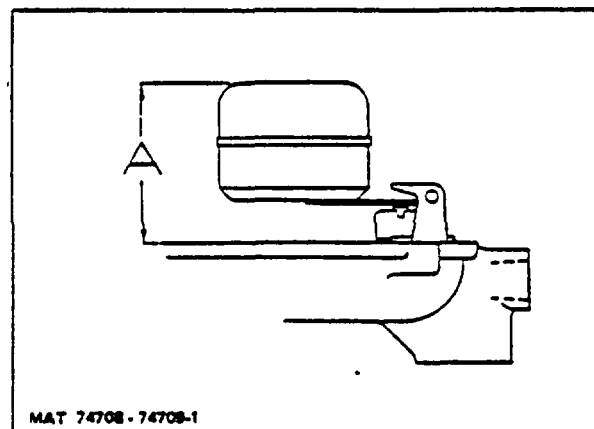


Figure 8. Float Setting

4. Assembly of Throttle and Fuel Bowl Bodies
 - a. Place fuel bowl assembly in position on throttle body, being careful not to damage floats. Then align holes in fuel bowl with holes in gasket and throttle body.
 - b. Install four bowl to body screw and lockwasher assemblies and tighten throttle body.
 - c. Install hex head plug and filter screen (if used) in threaded passage in throttle body.
 - d. With throttle held in closed position, turn throttle stop screw in until stop screw just contacts throttle stop and then turn stop screw in 1-1/2 additional turns as a preliminary idle speed setting.

TOPIC 5. ACCELERATOR LINKAGE

A. DESCRIPTION

The accelerator linkage provides manual, foot pedal control of the engine speed by either increasing or decreasing the fuel flow to the carburetor. Maximum speed (RPM) is controlled by the governor assembly, which is preadjusted at the factory.

B. MAINTENANCE AND ADJUSTMENT

Inspect linkage for security of mounting presence of pins, spring tension and proper action.

Periodically lubricate moving parts of linkage, except shaft mounting blocks.

Adjust of linkage may become necessary because of improper spring action, bent parts or replacement parts.

1. Ensure that all mechanical connections are securely made, as indicated in accelerator and linkage exploded view, Figures 5-1 and 5-2.
2. Inspect carburetor throttle lever position; throttle should be in fully CLOSED position with accelerator pedal released.
3. Have assistant push fully downward on the accelerator pedal; accelerator rod or cable will pull adjustable yoke, attached to throttle lever, (overcoming pressure of CLOSED throttle return spring), and carburetor throttle will OPEN fully.
4. Release pedal. Throttle should now be fully CLOSED. Adjust accelerator rod or cable throttle yoke in or OUT to ensure a fully CLOSED condition (with accelerator pedal released).

5. Turn accelerator pedal stop screw in or OUT and tighten locknut to adjust pedal to desired pedal release height.

C. PEDAL AND LINKAGE REMOVAL

1. Pedal. Remove "E" clip from pedal hinge pin, slide pin out of pedal and bracket and remove pedal (Figure 5-1 and 5-2).
2. Shaft Roller, Remove nut and lockwasher from bearing capscrew, and remove capscrew, bearing and two plain washers.
3. Accelerator Shaft. Remove capscrews and lockwashers which attach shaft mounting blocks to front panel or bracket and remove assembly from truck. To remove mounting blocks, remove roll pin from accelerator lever and shaft. Slide lever and mounting blocks off shaft. Remove spring.

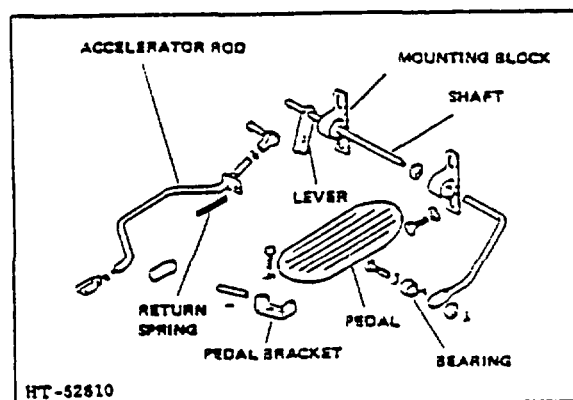


Figure 5-1. Accelerator and Linkage (Type I)

4. Accelerator Rod (PRT only). Remove accelerator rod return spring from spring clip. Remove nuts and lockwashers from all joints at accelerator lever and throttle lever and remove accelerator rod. Ball joints can be removed from accelerator rod by loosening Jam nuts and turning ball joints off. The spring clip can be removed by removing one of the jam nuts.
5. Accelerator Cable (PRT). Remove Cable return spring from spring clip. Remove "E" rings to disconnect cable (Fig 5-2) from lever and bracket. remove cotter pins and yoke pins and disconnect cable from accelerator lever and carburetor. Remove accelerator cable return spring from spring clip. Remove nuts and lockwashers from all joints at accelerator lever and throttle lever and remove cable. Ball Joints can be removed from cable by loosening jam nuts and turning ball joints off. The spring clip can be removed by removing one of the jam nuts.

D. PEDAL AND LINKAGE INSTALLATION

1. Accelerator Shaft. Place mounting blocks on accelerator shaft, separated by a washer. Move one mounting block and washer towards pedal end of shaft and install roll pin near center of shaft. Place accelerator lever on shaft and secure with roll pin. Install shaft assembly on front panel by securing mounting blocks with capscrews and lockwashers. After installation, make sure shaft moves freely.
2. Shaft Roller. When installing accelera-

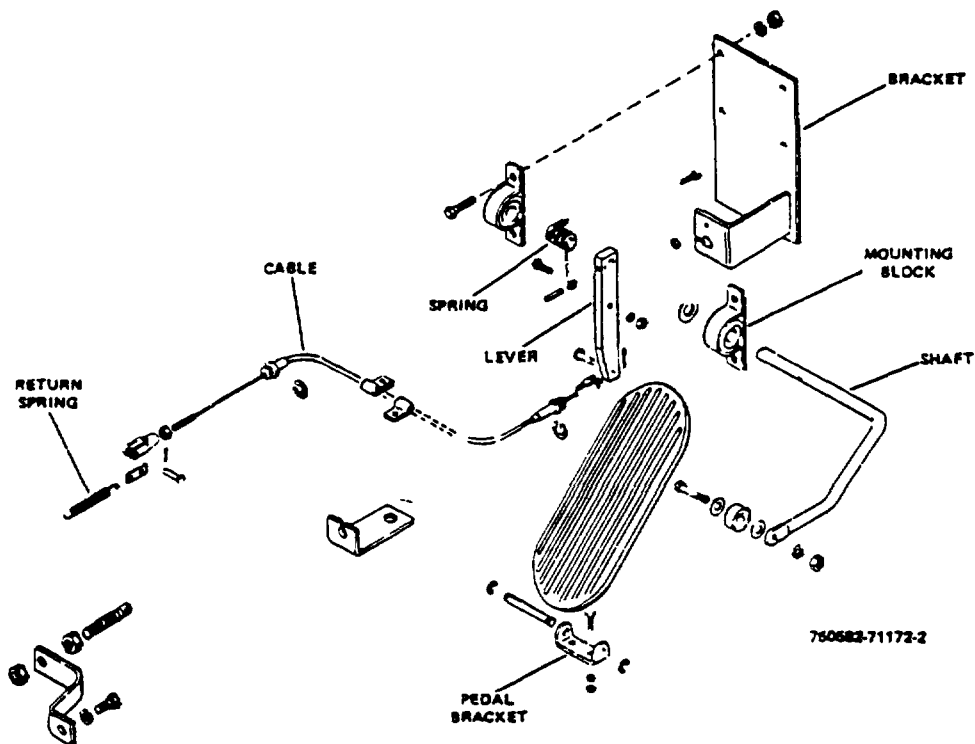


Figure 5-2. Accelerator and Linkage (Type II)

TOPIC 6 GOVERNOR

A. GOVERNOR DESCRIPTION

The governor prevents engine speed from exceeding a predetermined maximum. The governor is mounted between the carburetor and manifold flanges. It consists of a main body, which contains a throttle shaft, a throttle valve and a main governor spring. The main governor spring is attached by linkage to the governor shaft and the spring force holds the throttle valve open.

When the engine starts, air flows through the carburetor throat and the governor throat. The velocity of the air creates a pressure above the throttle valve. When this force exceeds the force exerted by the spring, the throttle will move to a closed position. The adjusting screw varies the Spring tension (Figure 10).

When the closing action of the valve exactly balance the spring, governing action takes place and maximum speed is fixed at this point.

When load is applied the velocity of the gas through the manifold and the pressure against the governing valve is reduced and the spring opens the valve to feed more gasoline to the engine to handle the increased load demand. This maintains an almost constant speed. whether the engine is running with or without load.

B. GOVERNOR REMOVAL

1. Remove the nut, lockwasher and stud securing the governor to the carburetor.
2. Disconnect the governor from the manifold fitting and remove lock wire and seals.
3. Remove governor, seals and spacer from the carburetor.

C. INSPECTION

1. Wash governor in a clean solvent and dry with compressed air.
2. Check governor for wear, cracks or damaged surfaces.

D. INSTALLATION

1. Install new gaskets and spacer on carburetor.
2. Position governor on carburetor and connect manifold fitting. Secure with studs, lockwashers and nuts.
3. Install lock wire and seals.

E. GOVERNOR ADJUSTMENT

NOTE

The desired engine speed is obtained by increasing or decreasing the governor spring tension.

Turn adjusting screw (Figure 10) in or out, to increase or decrease pull on the spring.

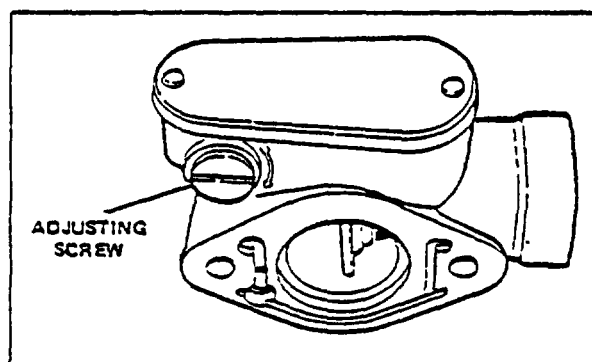


Figure 10. Velocity Governor

TOPIC 7. AIR CLEANER (PRT)

A. DESCRIPTION

The air cleaner is mounted on the left side of the engine and is connected by hoses to the carburetor air intake and the crankcase. It prevents dust, chaff or other foreign matter, the chief causes of engine wear, from entering the manifold and engine (Figure 13).

The air enters the cleaner and passes through a replaceable type, dry filter element. The element is constructed of folded paper and a fine wire mesh screen bound at the edges with plastic. This construction filters and removes the fine dust particles from the intake air stream. The clean and purified air is then drawn through the center tube of the element and into the carburetor and intake manifold. For continued efficient engine operation, the air cleaner must be properly serviced.

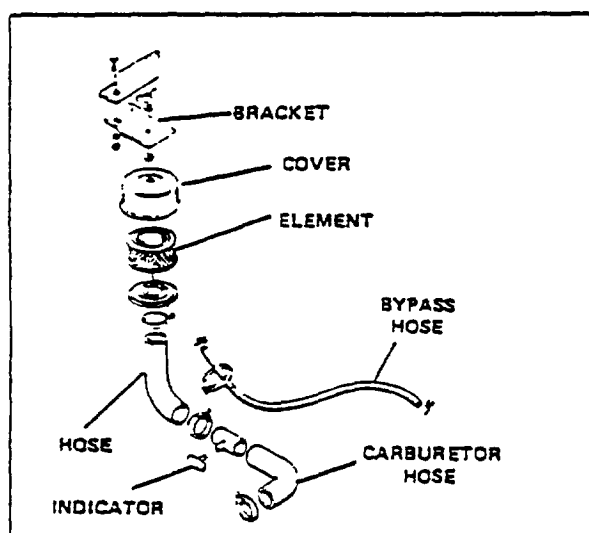


Figure 13. Air Cleaner Assembly

B. INSPECTION

Inspect the filter element at intervals frequent enough to ensure having a clean element.

It may be necessary to inspect the element more often in an atmosphere heavily laden with dust, chaff and lint.

CAUTION

Never remove the air cleaner while engine is running, and do not run the engine unless air cleaner is in place.

C. REMOVAL

1. Loosen hose clamps and remove wing nut and rubber washer.
2. Slide cleaner assembly down far enough to remove cover.

D. DISASSEMBLY AND INSPECTION

1. With filter assembly free of securing cover, remove filter element from base of cleaner.
2. Clean inside and outside of cover and base assembly with a suitable solvent.
3. Shake the dust and lint from the filter element.
4. If element is badly clogged with dirt and lint, replace with a new element.
5. Check tie cover exterior for cracks and hose for deterioration which would allow unfiltered air to enter the system.
6. Repair or replace any unacceptable component.

E. INSTALLATION

1. Install filter element in base assembly.
2. Replace cover and secure wing nut, rubber washer and hose clamps.
3. All connections must be air tight.

NOTE

For SRT model air cleaner service, see page 2-18a.

TOPIC 1. BATTERY

A. GENERAL DESCRIPTION

The lead-acid storage battery is an electrochemical device for converting stored chemical energy into electrical energy.

Active materials within the battery react chemically to produce a flow of direct current whenever cranking motor or other current consuming devices are connected into the battery circuit. This current is produced by chemical reaction between the active materials of the plate and the sulphuric acid of the electrolyte.

The internal construction of a lead-acid battery consists of the combination of positive and negative plates forming a cell. The plates consist of special active materials contained in cast grids of lead-antimony alloy. Charged negative plates contain sponge lead, and charged positive plates contain lead peroxide. If the positive and negative plates contact one another, a short circuit is produced and the cell fails immediately. To prevent a short circuit between the plates, separators are used. The cell is assembled by alternating the

plates of the positive group between the plates of the negative group, Neg. Pos. Neg., etc. The negative plate group always has one or more plates than the positive group. Separators have one ribbed side and are assembled with the ribs vertical and facing the positive plate. In this position, the space between the ribs allows better circulation of the electrolyte to the positive plates and forms a channel by which normally loosened particles of positive active material may reach the sediment spaces in the bottom of the cell.

A vent cap screws into a threaded hole located in each cell cover. The cap serves two purposes. First, it closes the opening in the cell cover through which electrolyte can be checked and water added, if necessary, and second, it provides a means for the escape of gases formed during charging. The visual level fill is an aid to proper servicing. Electrolyte level should be maintained by adding distilled water to the bottom of the filler hole. This gives a margin of safety against the dangers of low-level operation. Overfilling should be avoided at all times, since it causes loss of electrolyte which will result in premature battery failure and poor performances. Electrolyte lost by overfilling causes excessive corrosion of cables, connections and other equipment.

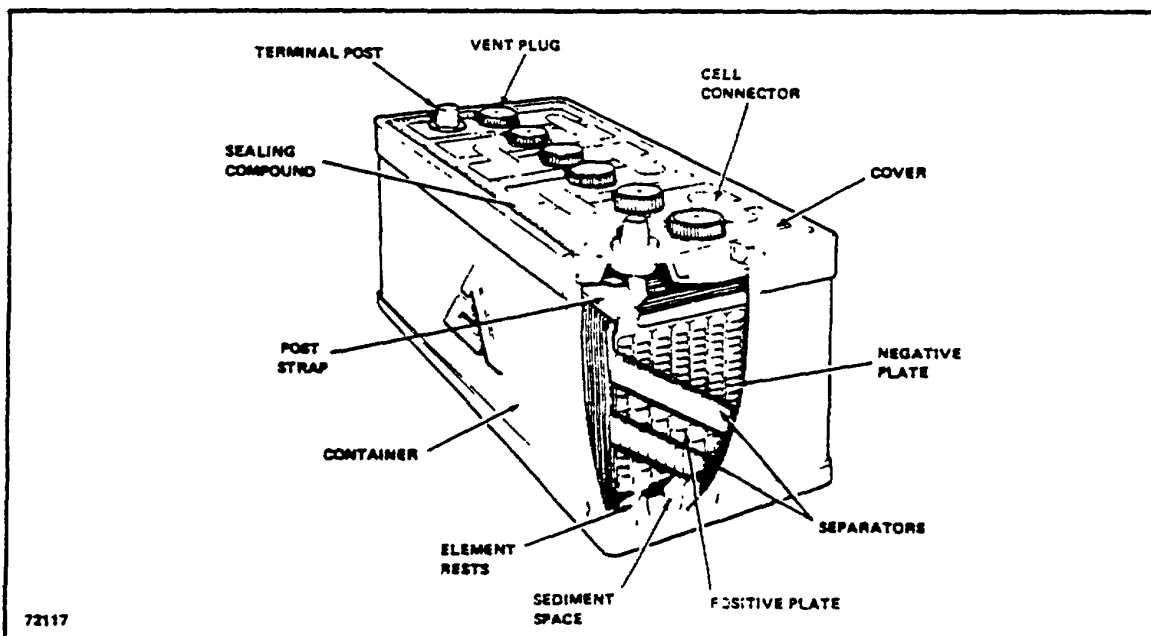


Figure 1-1. Battery (Typical)

1. Chemical Action of Discharge

When a cell is discharged by completing an external circuit, the sulphuric acid acts on both positive and negative plate active material to form the chemical compound lead sulphate. The sulphate is supplied by the acid solution (electrolyte) which becomes weaker in concentration as the discharge proceeds. The amount of acid consumed is in direct proportion to the amount of electricity used from the cell. When the acid in the electrolyte is partially used up by combining with the plates, the battery is said to be discharged. This gradual weakening of the electrolyte in proportion to the electricity delivered is a very useful action because with the use of a hydrometer it can be determined how much unused acid remains with the water in the electrolyte, thus it can be judged how much electrical energy is left in the cell.

2. Chemical Action of Charge

By passing electric current through the battery in a direction opposite to that of the discharge, the lead sulphate is decomposed. The sulphate is expelled from the plates and returns to the electrolyte, thereby gradually restoring it to its original strength. This action frees the plate active materials of sulphate and they are restored to their original chemical condition, ready to deliver electricity again. Hydrogen and oxygen gases are given off at the negative and positive plates respectively as the plates reach the fully charged condition. This is the result of the decomposition of the water by an excess of charging current not utilized by the plates.

3. Inspection

The battery contains no electrolyte until it is activated for service in the field. Consequently, it is referred to as a "dry-charge" battery.

Unless the batteries are kept dry until ready for use, they may lose a portion of their activating capacity due to moisture oxidizing the pre-dried plates.

Dry charged batteries must be handled with care to protect them against breakage. This may not be evident until the battery is activated by adding electrolyte. Battery cartons should be checked for evidence of either damp-

ness or damage when the battery is received. If visual inspection of the carton indicates possible damage to the battery during transit or storage, it should be opened and the battery carefully checked.

4. Care of Stock Batteries in Original Equipment

Batteries normally leave the manufacturing plant in good condition, but excessive temperature and unusual vibration or jolts over long hauls by trucks or railroads might affect the condition of the battery. Always inspect for damage when a shipment arrives. Check batteries for possible cracks or damage and check cell readings with a hydrometer. If not fully charged, recharge and if breakage has occurred, file your claim with the carrier.

Although many makes of batteries can discharge quite rapidly while standing idle, especially in warm weather, Allis-Chalmers batteries are built with an exclusive manufacturing process which reduces self-discharge of wet batteries to a minimum. Normally, no care will be required unless the battery remains in stock for unusually long periods of time. However, it is recommended that the battery be inspected every 30 days and when the specific gravity falls below 1.220, corrected to 80°F., the battery should be recharged. The battery will be fully charged when all the cells are gassing or bubbling freely and the specific gravity reading is 1.255 or higher.

If the batteries are allowed to remain in a partially discharged state for a period of time, the lead sulphate which forms on the plates during the normal chemical process of discharging hardens and reduces the capacity of the battery. When the plates in a battery are in this condition, the battery is referred to as "sulphated."

Fast charging a sulphate battery will only supply a surface charge and will not reconvert all of the hard lead sulphate to its original chemical state. The hardened lead sulphate remaining on the plates will then continue its growth during normal operation, eventually resulting in a completely discharged battery. Additional fast charging of a sulphated battery will damage the plates and lead to premature battery failure.

It is the dealers responsibility to properly maintain batteries in inventory equipment.

5. Care and Handling of Dry Charge Batteries
Inspect each shipment as received and if damage is present, file claim with carrier.

Store batteries and electrolyte on racks in a dry location at a temperature between 60°F. and 90°F. With batteries stored at the ideal temperature of 70°F., they will require a minimum amount of charging to properly activate the battery before delivery to a customer.

The following precautions should be considered when handling and storing electrolyte.

- a. When storing electrolyte, avoid placing of other material on containers.
- b. Electrolyte should be used in an area where water is readily available for flushing in case the electrolyte comes into contact with the skin.
- c. Refer to the instructions on the side of the electrolyte container for antidotes to use if electrolyte comes into contact with the skin.

6. Activating Batteries

To prepare batteries for service, use battery-grade acid electrolyte (1.265 sp. gr. at 80°F.). Electrolyte is commonly packaged in cartons sufficient for the filling of one battery. Activate the new battery before removing the old battery from the vehicle. For best performance, the temperature of the battery and the electrolyte should be between 60°F., and 90°F., during activation. The following procedure is recommended for filling the battery.

- a. Remove battery from its original carton.
- b. Remove vent plugs.
- c. With the electrolyte carton right side up, open the carton and cut a small hole in the corner of the liner.

CAUTION:

Do not attempt to remove the liner from the container. The liner is sealed to the container and any attempt to remove it may cause a rupture in the liner.

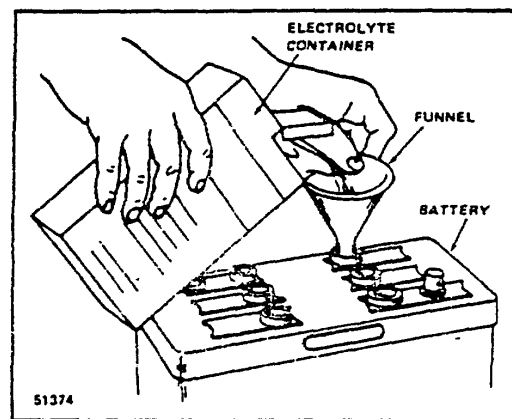


Figure 1-2. Activating Battery

Do not make the opening longer than required since a larger opening will increase the tendency of the electrolyte to spatter as it is emptied from the container.

- d. Using a glass or acid-proof funnel, fill each battery cell with electrolyte.

NOTE

Do not use a metal funnel for filling the battery.

- e. Fill each cell to indicator level with electrolyte solution of 1.250 - 1.265 specific gravity. Temperature of battery and solution must be between 60°F. and 90°F.
- f. Allow battery to stand at least 20 minutes. Check each cell and add electrolyte as necessary, to restore level to indicator.
- g. Before discarding an electrolyte container, empty and rinse, thoroughly with water to remove any electrolyte remaining in the container. Discarded packages containing electrolyte may prove to be dangerous or harmful to persons who are unfamiliar with the poisonous and corrosive characteristics of sulphuric acid electrolyte.

- h. Give battery a minimum charge. Charge 12 volt batteries at 35 amps. for ten minutes or until the temperature of the electrolyte reaches 80°F.
- i. Be sure to date code the battery before installing it in the vehicle. Use a date code ring and gently stamp the code indicating the month and year when it is installed on top of the negative post.
- J. If the outdoor temperature is below 40°F., or if the battery is not to be put into service within 24 hours after activation, it should be fully charged (1.255 or higher specified gravity).
- k. After electrolyte has been added to a dry charged battery, it becomes a "wet" battery and should be maintained in the same way as any other "wet" battery.

Storage For Thirty Days or More

If any battery equipped vehicles are to remain in inventory storage for longer than thirty days, the batteries should be handled as follows:

- a. If necessary, add distilled water to bring the electrolyte to the proper level. Charge the battery if the specific gravity is 1.240 or below, corrected to 80°F. Then, remove the battery from the unit and store in a cool, dry location shielded from direct sunlight and away from heat duct outlets. Do not stack batteries on top of one another as damage to the plates may result.

Indicate the date the battery is placed in storage with chalk on the battery case.

- b. Check the electrolyte level and specific gravity every 30 days.
- c. Whenever the specific gravity falls to 1.220 or below, corrected to 80°F., recharge the battery. This will be necessary approximately every thirty days in warm weather and a longer period in cooler weather. Before recharging be sure the electrolyte level is correct.

The date batteries in storage are recharged can also be indicated on the battery case with chalk.

- d. As new units are sold, install proper batteries that were in storage for the longest period.

Should a sulphated battery be encountered, the battery must be slow charged at five to six amps by a constant current type of charge in order to reconvert the plates to pure lead and lead peroxide. The battery is fully charged when all cells are gassing or bubbling freely and the specific gravity reading remains constant at 1.255 or higher, corrected to 80°F., for two successive readings taken at hourly intervals.

- e. If a battery is installed in equipment used as a demonstrator, it should be checked and recharged, if necessary, at least every other thirty days. Although the battery may continue to start the equipment for several months, it will be damaged if it is allowed to become sulphated.

B. SERVICE (TESTING)

1. Use of a Hydrometer

- a. Squeeze the rubber bulb and insert the nozzle in the cell, release the bulb slowly, drawing electrolyte up into the barrel.
- b. Adjust the electrolyte level in the barrel so the float rides free of the bottom, but is not striking the top.
- c. Hold the hydrometer in vertical position, making certain the float moves freely, then read the scale at the level of the electrolyte in the barrel.

NOTE

For accurate results in extreme temperatures, make corrections as described in Paragraph 5, this Section.

- d. Return electrolyte to the cell from which it was removed.

CAUTION

Handle hydrometer carefully when making tests, after completing tests, flush hydrometer with clean water.

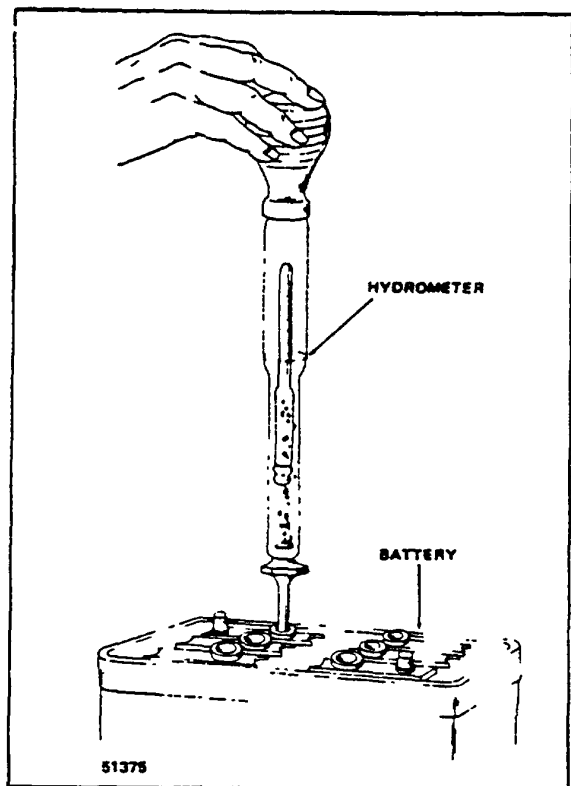


Figure 1-3. Testing Battery with Hydrometer

2. Use of a Voltmeter

Voltmeters designed for testing storage batteries have scale ranges suitable for testing individual cells. Some are equipped with prod contacts which are properly spaced to bridge a battery cell. Readings are obtained by pressing the prod points firmly into the post or cell connectors of each cell and observing the position of the voltmeter pointer with respect to the scale. The proper polarity must be observed, the red prod makes contact with positive post, the black prod a negative post.

NOTE

A cell connector must be regarded as positive when testing one cell, and negative when testing the adjoining cell. (The cell connector connects the positive post of one cell with the negative post of an adjoining cell.)

Some batteries are made with buried cell connectors, which are covered with sealing compound. Voltage readings

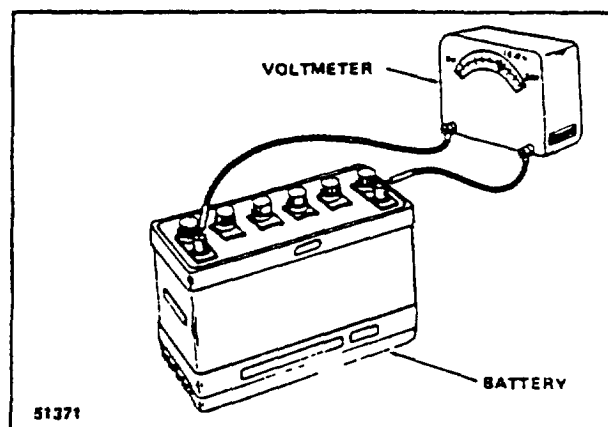


Figure 1-4. Testing Battery with Voltmeter

CAUTION

It is not recommended that a voltmeter be used to test batteries with buried connectors, unless the user is certain of the proper cell connectors. If through error, the voltmeter contacts two or more cells, there is a possibility it will be damaged.

3. Test After Activation

The dry charge battery may be put into service immediately after activating.

To assure good battery performance, the following activation tests are recommended.

- a. Five minutes after adding electrolyte check the open circuit voltage. More than 6 volts or more than 12 volts, depending upon the rated voltage, indicates the battery is ready for service. From 5 to 6 volts or from 10 to 12 volts indicates oxidized negative charge, and the battery should be recharged before use. Less than 5 or less than 10 volts depending on the rated voltage, indicates a reverse cell or an open circuit and the battery should be replaced. Refer to Paragraph 2, this Section, pertaining to the use of voltmeter.

- b. Check the specific gravity of all cells. If the specific gravity corrected to 80°F. shows more than a thirty point (.030) drop from the initial filling with electrolyte, or if one or more cells gas violently after addition of electrolyte, the battery should be fully charged before use. Refer to Paragraph 1, this Section pertaining to the use of a hydrometer.
- c. For best performance in cold weather (32°F. or less), or if the battery and the electrolyte are not at 60°F. or above at time of activation, warm the battery by boost charging. Refer to Paragraph 8, this Section.

4. Safety Precautions

When batteries are being charged, an explosive gas mixture forms beneath the cover of each cell. Part of this gas escapes through the holes in the vent plugs and may form an explosive atmosphere around the battery itself if ventilation is poor. This explosive gas may remain in or around the battery for several hours after it has been charged. Sparks or flames can ignite this gas causing an internal explosion which may shatter the battery.

The following precautions should be observed to prevent an explosion.

- a. Do not smoke near batteries being charged or which have been very recently charged.
- b. Do not break live circuits at the terminals of batteries because a spark usually occurs at the point where a live circuit is broken.

Care must be taken when connecting or disconnecting booster leads or cable clamps on *fast chargers.

5. Battery Test

The battery condition can be determined by the following:

- a. Visual Inspection.

The time spent in visually inspecting a battery may save much time and expense in determining battery condition.

Check for bad odors which indicate that the battery has been filled with something other than battery

electrolyte. Note the level of the electrolyte.

If the electrolyte is allowed to get below the top of the plates and water is not added, the active materials become permanently damaged and can never be restored.

Check outside of battery for damage or signs of serious abuse such as broken or cracked case and cell covers. If it shows signs of serious damage or abuse, it should be replaced.

- b. Light Load Test This test should be applied to batteries before they are charged.

Otherwise, defective cells that have been charged may pass the test and give a false diagnosis. To check the electrical condition of battery cells the following procedure is recommended.

- (1) If the electrolyte level is low, adjust it to the proper level by adding water.
- (2) Place a 150 ampere load on the battery for 3 seconds, using a high rate load tester, to remove surface charge.
- (3) Place a 10 ampere load on the battery The load must be placed on the battery for one minute before starting the test and then left on during the test to allow the discharge current to reduce the cell voltage readings in proportion to the capacity of the cells.
- (4) After one minute, read the individual cell voltages of the battery with an expanded scale voltmeter that has .01 volt divisions.

The difference in voltage readings between the individual cells can be interpreted as follows:

Uniform Readings Sufficiently Charged

If all cells read 1.95 volts or more and the difference between the highest and lowest is less than .05 volts, the battery is good and is sufficiently charged (see Figure 1-5).

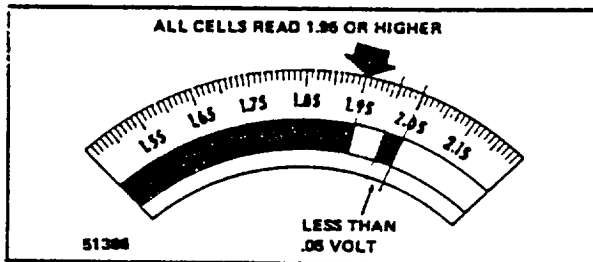


Figure 1-5. Uniform Readings

Low Readings

If cells read both above and below 1.95 volts and the difference between the highest and lowest cell is less than .05 volt, the battery is good, but requires charging (see Figure 1-6).

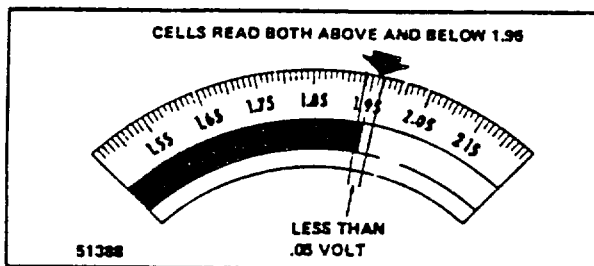


Figure 1-6. Low Readings

Non-Uniform Readings

If any cell reads 1.95 volts or more and there is a difference of .05 volts or more between the highest and lowest cell, one battery should be replaced (see Figure 1-7).

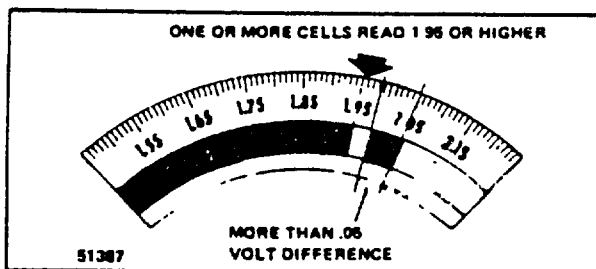


Figure 1-7. Non-Uniform Readings

Readings Too Low to Test

If all cells read less than 1.95 volts, the battery is too low to test properly. Failure of the meter to register on all cells does not indicate a defective battery. Boost-charge battery and repeat the test. If the battery is found to be good after boosting, it should be fully recharged for good performance.

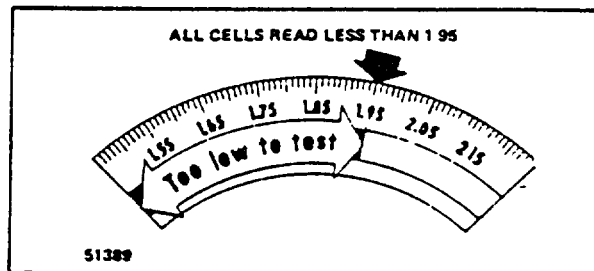


Figure 1-8. Reading Too Low to Test

If none of the cells comes up to 1.95 volts after the first boost charge, the battery should be given a second boost.

Batteries which do not come up after a second boost charge should be replaced.

The procedure outlined below should be used on any battery originally found to be good by the Light Load Test, but has since failed to perform satisfactorily in service and which still tests good by the Light Load Test.

c. Full Charge Hydrometer Test

- (1) Use hydrometer Read accurately to nearest scale division and correct readings for temperature.

NOTE

Hydrometer readings taken on, partially charged batteries are unreliable for this test.

- (2) Record individual cell readings unless all cells are fully charged (1.255 specific gravity or higher).

- (a) If cell readings range between 1.230 and 1.310 specific gravity, the battery is ready for use. All it needed was a full charge. Any variation in the specific gravity between cells within this range does not indicate a defective battery.
- (b) If any cell reads less than 1.230 specific gravity and the battery has been in service 3 months or less, the battery is good but it has been improperly filled (activated) with electrolyte or water and will give poor performance. To correct this condition, empty the electrolyte from any cell reading less than 1.230 and refill with 1.265 gravity battery grade electrolyte. The battery is then ready for service.
- (c) If any cell reads less than 1.230 and battery has been in service more than 3 months, it is assumed to be worn out and at best will give very little useful service. The battery should be replaced.

The hydrometer readings should always be corrected for the temperature of the battery electrolyte. Add 4 gravity points (.004) to the reading for every 10°F. electrolyte temperature above 80°F. For every 10°F. of electrolyte temperature below 80°F., subtract 4 points from the gravity reading.

d. Test for Serviceability

- (1) Cell Differences Read each cell with a hydrometer. Record individual cell readings.
- (2) Serviceable If the difference between the highest and lowest cell is LESS than 50 points (.050) specific gravity by the hydrometer.

- (3) Unserviceable If the difference between the highest and lowest cell is MORE than 50 points (.050) specific gravity by the hydrometer.
- (4) If battery tests "serviceable" by the above tests, but fails to perform satisfactorily in customer's equipment, allow it to stand off charge 72 hours and test again for cell differences as described above.

NOTE

Under the Allis-Chalmers Battery Service Adjustment Policy, only the batteries that are unserviceable as a result of defects in material or workmanship are to be replaced at no charge or on an adjusted basis. The test procedure outlined above must be adhered to as credit to the dealer will be made on the basis of results of tests made on all returned batteries at Allis-Chalmers branches. Batteries returned to the branch that are checked and found serviceable will be returned to dealer at his expense for transportation and battery replacement costs.

6. Charging Battery

There are two separate methods of recharging batteries which differ basically in the amount of charging current supplied, the slow charge method and the fast charge method. The slow charge supplies the battery with a relatively low amount of current for a relatively long period of time. whereas, in the fast charge, the battery is supplied with a high current for a short period of time.

The following procedure is recommended when charging the battery.

- a. Check the electrolyte level in the cells, add water as necessary to obtain proper level.

CAUTION

Do not overfill. If level is too high, adjust to proper level by removing electrolyte. (Store removed electrolyte in a clean jar.)

- b. Leave cell vent plugs in place, check to see that the vent holes are free to permit the escape of gas.

c. With the charger switch in the "OFF" position (or not connected to the power line, if it is not equipped with an "ON" and "OFF" switch):

- (1) Connect the positive lead of the charger to the positive post of the battery. Positive on the charger is indicated by (+) or a red cable or connector. The positive battery post is indicated by a (+) or "P".
- (2) Connect the negative lead of the charger to the negative battery post. Negative on the charger is indicated by (-) or a black cable or connector, the negative post of the battery is indicated by a (-), or "N" or no mark at all.

d. Turn on charger and continue the charge to the desired point. Normally, a hydrometer is used to determine the state of charge of the battery. For practical purposes, the full charge point of the battery is reached when the hydrometer reads 1.260. If the maximum charge is desired, the charge should be continued until three successive readings at hourly intervals show no increase in specific gravity.

The hydrometer does not give an accurate reading of batteries on fast charge. Some fast charges are equipped with a device that terminates the charge, automatically, when the battery temperature reaches 125° the point at which it is essentially fully charged. In the absence of such a device, a thermometer should be inserted in the cell vent and the charge should be terminated when it reaches 125°F.

e. Turn the charger "OFF" and disconnect the leads from the battery.

NOTE

If leads are not disconnected from battery, there will be a slight current drain from the battery through the charger.

f. Check the electrolyte level, add water as necessary, or return electrolyte removed prior to charging.

g. Clean and dry the battery top.

NOTE

Before using any type of charger, be sure to read the manufacturer's Instructions.

7. Quick-In Vehicle Charging

Fast-chargers are devices which supply current to the battery at a high charging rate. The battery is brought up to a high rate of-charge before excessive battery temperatures are reached. Although a battery cannot be brought up to a fully charged condition during a quick-charge, it can be substantially recharged or "boosted." in order to bring the battery to a fully charged condition, the charging cycle must be finished by charging at a low or normal rate.

8. Boost Charging for Light Load Test

The boost charge for the Light Load Test is necessary to condition the battery so that it will be at least 10% to 20' charged when checked. Batteries which are in an extreme discharged condition may require more than one boost charge in order to condition them for the Light Load Test. Batteries should be boosted at 60-amperes for 30 minutes (60 X 30 = 1800 ampere minutes). If the charger being used will not give these rates, charge for an equal number of ampere minutes at best rate available. For purposes of the Light Load Test, do not boost battery more than the amount indicated.

9. Charging After Light Load Test

Batteries to be charged after the Light Load Test are of the following types.

- a. Batteries previously requiring a boost charge because they were too low to test.
- b. Good batteries with one or more but not all cell voltages reading less than 1.95 volts.

If batteries are to be recharged by means of a fast charger, the charge rate must be tapered (reduced to a safe limit) when the electrolyte temperature reaches 125°F., or when gassing becomes excessive. Failure to do so may harm the battery.

10. Slow Out-Of-Vehicle Charging

A slow charger is a device which will supply current to the battery at a low charging rate which is necessary in order to fully charge it. Due to the low rate during slow charging, plenty of time must be allowed. Charge periods of 24 hours or more are often required.

11. Full Charging for Hydrometer Test

To fully charge a battery, the current input to the battery should be adjusted to a charging rate equivalent to 7% of the 20 hour rate of the battery.

Example: A 100 ampere hour battery should be slow charged at 7 amperes. (7% of 100 AH = 7 amperes charge rate.) If several batteries of different sizes are charged in series, the charging rate is determined by the battery with the lowest ampere hour rating. If the ampere-hour capacity of a battery cannot be determined, charge it at S amperes.

Charging should be continued until the battery is fully charged. This is indicated when all cell gravities do not increase when checked with a hydrometer at three intervals of one hour and all cells are gassing freely. When fully charged, all of the plate material in the battery has been reconverted into active material.

12. Slow Charging with Fast Charger

Some chargers are equipped to charge at either a high or low rate, a

charger which has provision for finishing the charging cycle at a low rate will permit the battery to become fully charged if sufficient time is allowed.

C. INSTALLATION

The following points are important to properly install a battery.

1. Be sure that the battery tray is clean and that the battery rests level when installed.
2. Tighten the hold-down evenly until snug. Do not draw down tight enough to distort or crack battery case.
3. Be sure the cables are in good condition and the terminal clamps are clean. Grease battery terminals lightly before attaching cable clamps. Make sure the ground cable is clean and tight.
4. Check polarity to be sure battery is not reversed with respect to the generating system.

CAUTION**DO NOT POLARIZE ALTERNATOR!**

5. Connect "grounded" terminal of the battery last to avoid short circuits which will damage the battery.

TOPIC 2. ALTERNATOR

A. DESCRIPTION

The alternator, Figures 2-1 and 2-2, contains a solid state regulator that is mounted inside the alternator slip ring end frame. All regulator components are enclosed into a solid mold, and this unit along with the brush holder assembly, is attached to the slip ring end frame. The regulator voltage setting never needs adjusting; and no provision for adjustment is provided.

The alternator rotor bearings contain a supply of lubricant sufficiently adequate to eliminate the need for periodic lubrication. Two brushes carry current through the two slip rings to the field coil mounted on the rotor, and under normal conditions will provide long periods of attention-free service.

The stator windings are assembled on the inside of a laminated core that forms part of the alternator frame. A rectifier bridge connected to the stator windings contains six diodes, and electrically changes the stator a.c. voltages to a d.c. voltage which appears at the alternator output (BAT) terminal. Alternator field current is supplied through a diode trio which also is connected to the stator windings. A capacitor, or condenser, mounted in the end frame protects the rectifier bridge and diode trio from high voltages, and suppresses radio noises.

No periodic adjustments or maintenance of any kind are required on the entire alternator assembly.

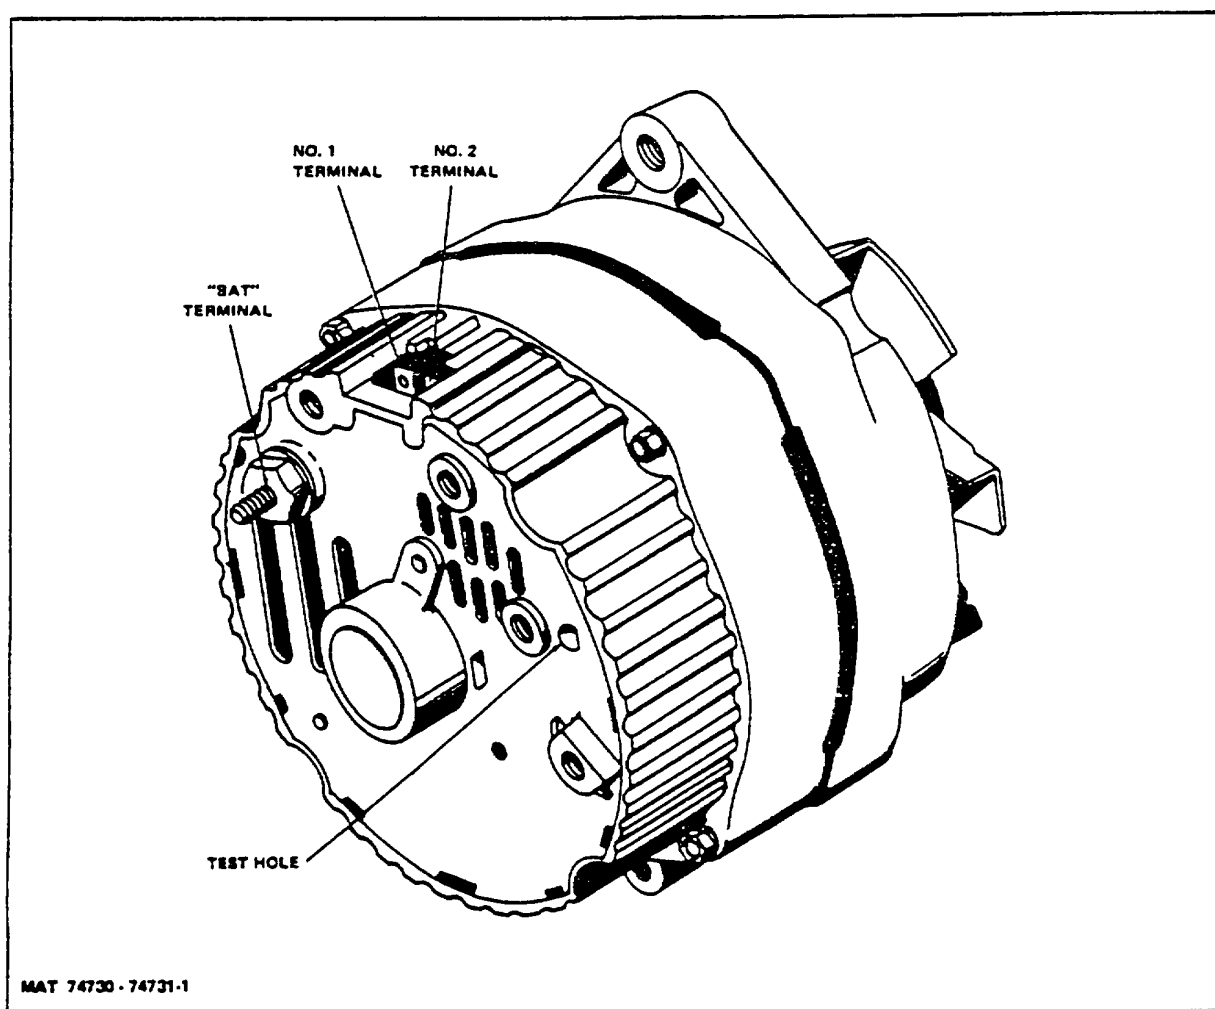


Figure 2.1. Alternator Assembly

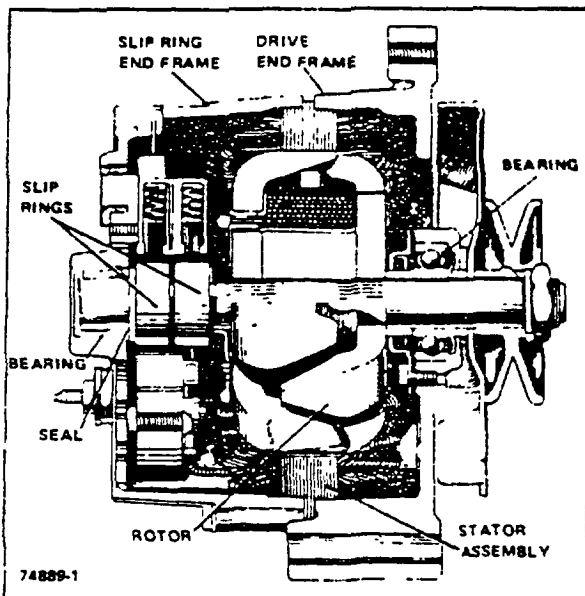


Figure 2-2. Cross-Sectional View of Alternator

B. PRINCIPLES OF OPERATION

The principles of operation of the alternator are as follows. See Figure 2-3.

When the Ignition switch is closed, current from the battery flows through the 10-ampere fuse and resistor to the alternator No. 1 terminal, through resistor R1, diode D1, and the base-emitter to transistor TR1 to ground. and then back to the battery. This turns on transistor TR1, and current flows through the alternator field coil and TR1 back to the battery. The ammeter shows discharge. The resistor in parallel with the ammeter reduces total circuit resistance to provide higher field current for initial voltage build-up when the engine starts.

With the alternator operating. a.c. voltages are generated in the stator windings, and the stator supplies d.c. field current through the diode trio, the field, TR1, and then through the grounded diodes in the rectifier bridge back to the stator. Also, the six diodes in the rectifier bridge change the stator a.c. voltages to a d.c. voltage which appears between ground and the alternator "SAT" terminal. As alternator speed increases, current is provided for charging the battery and operating electrical accessories. Also, with the alternator operating, the same voltage appears at the "BAT" and No. 1 terminals, and the ammeter shows charge to indicate the alternator is producing voltage.

The No. 2 terminal on the alternator is always connected to the battery, but the discharge

current is limited to a negligible value by the high resistance of R2 and R3. As the alternator speed and voltage increase, the voltage between R2 and R3 increases to the point where zener diode D2 conducts. Transistor TR2 then turns on and TR1 turns off. With TR1 off, the field current and system voltage decrease, and D2 then blocks current flow, causing TR1 to turn back on. The field current and system voltage increases, and this cycle then repeats many times per second to limit the alternator voltage to a preset value.

Capacitor C1 smoothes out the voltage across R3, resistor R4 prevents excessive current through TR1 at high temperatures, and diode D3 prevents high-induced-voltages in the field windings when TR1 turns off, Resistor R2 is a thermistor which causes the regulated voltage to vary with temperature, thus providing the optimum voltage-for charging the battery.

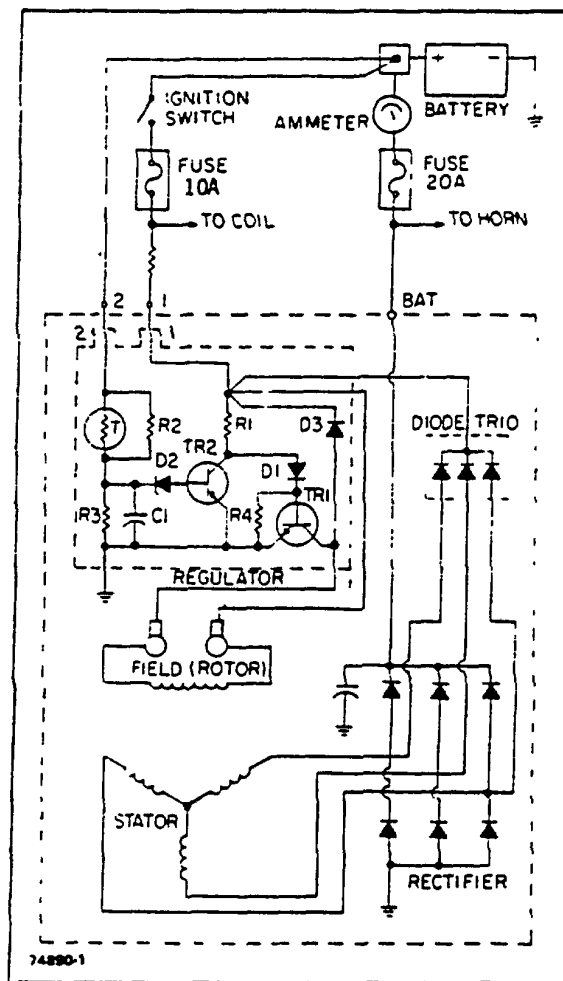


Figure 2-3. Alternator Internal Circuits, Schematic Diagram

C. TROUBLESHOOTING PROCEDURES

Close adherence to the following procedures in the order presented will lead to the locations of charging system defects in the shortest possible time. Only a portion of those procedures need be performed. It will never be necessary to perform all the procedures in order to locate the trouble.

A basic wiring diagram showing lead connections is shown in Figure 2-4. To avoid damage to the electrical equipment, always observe the following precautions:

1. Do not polarize the alternator.
2. Do not short across or ground any of the terminals in the charging circuit except as specifically instructed herein.
3. NEVER operate the alternator with the output terminal open-circuited.
4. Make sure the alternator and battery have the same ground polarity.
5. When connecting a charger or a booster battery to the vehicle battery, connect negative to negative and positive to positive.

Trouble in the charging system will show up as one or more of the following conditions:

1. Faulty ammeter operation.
2. An undercharged battery as evidenced by slow cranking and low specific gravity readings.
3. An overcharged battery as evidenced by excessive water usage.

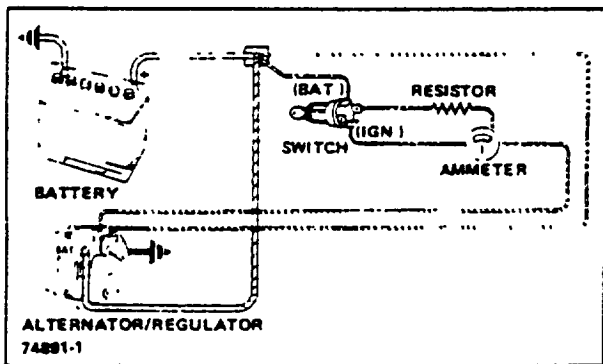


Figure 2-4. Alternator Typical Wiring Diagram

1. Undercharged Battery

This condition, as evidenced by slow cranking and low specific gravity readings, can be caused by one or more of the following conditions, even though the ammeter may be operating normally.

- a. Insure that the undercharged condition has' not been caused by accessories having been left on for extended periods.
- b. Check the drive belt for proper tension.
- c. If a battery defect is suspected, check the battery as described in the Battery Service section.
- d. Inspect the wiring for defects. Check all connections for tightness and cleanliness, including the slip connectors at the alternator and firewall, and the cable clamps and battery posts.
- e. With ignition on and all wiring harness leads connected, connect a voltmeter from:

alternator "BAT" terminal to ground,

alternator No. 1 terminal to ground, and

alternator No. 2 terminal to ground.

A zero reading indicates an open between voltmeter connection and battery. The alternator has , built-in feature which avoids overcharge and accessory damage by preventing the alternator from turning on if there is an open in the wiring harness connected to the No. 2 terminal. Opens in the wiring harness connected between-the No. 2 terminal and battery may be between the terminals, at the crimp between the harness wire and terminal, or in the wire.

- f. If previous Steps a. through e. check satisfactorily, check the alternator as follows:

(1) Disconnect battery ground cable.

(2) Connect an ammeter in the circuit at the "BAT" terminal of

- (3) Reconnect battery ground cable.
- (4) Connect a carbon pile across the battery.
- (5) Operate engine at moderate speed as required, and adjust carbon pile as required, to obtain maximum current output.
- (6) If ampere output is within 10 amperes of rated output as stamped on alternator frame, alternator is not defective; recheck Steps a. through e.
- (7) If ampere output is not within 10 amperes of rated output, ground the field winding by inserting a screwdriver into the test hole.

CAUTION

Tab in the alternator test hole is within .750" of casting surface. Do not force screwdriver deeper than one inch into end frame.

- (8) Operate engine at moderate speed, as required, and adjust carbon pile as required to obtain maximum current output.
- (9) If output is within 10 amperes of rated output, replace regulator as covered in Alternator Repair section, and check field winding.
- (10) If output is not within 10 amperes of rated output, check the field winding, diode trio, rectifier bridge, and stator as covered in Alternator Repair section.
- (11) Remove ammeter from alternator

2. Overcharged Battery

- a. To determine battery condition, check battery as indicated in Battery Service section.
- b. Connect a voltmeter from alternator No. 2 terminal to ground. If reading is zero, No. 2 lead circuit is open.
- c. If battery and No. 2 lead circuit

check good, but an obvious overcharge condition exists as evidenced by excessive battery water usage, proceed as follows:

- (1) Separate end frames as indicated in Alternator Repair Disassembly section.
- (2) Check field winding for shorts. See Figure 2-5. If shorted replace rotor and regulator.

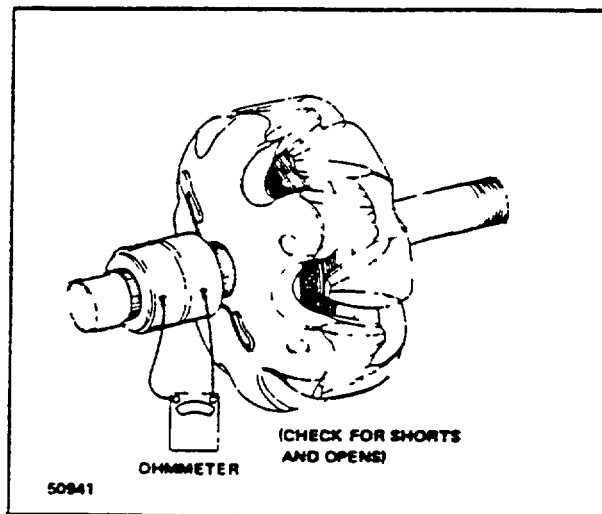


Figure 2-5. Checking Rotor Field Winding

- (3) Check field winding for grounds. If grounded replace only the rotor.
- (4) Connect ohmmeter, using lowest range scale, from brush lead clip to end frame as shown in Step 1, Figure 2-6, then reverse lead connections.
- (5) If both readings are zero, either the brush lead clip is grounded or regulator is defective.
- (6) A grounded brush lead clip can result from omission of insulating washer (Figure 2-6), omission of insulating sleeve over screw, or damaged insulating sleeve over screw, or damaged insulating sleeve. Remove screw to inspect sleeve. If satisfactory, replace regulator as indicated in Alternator Repair section.

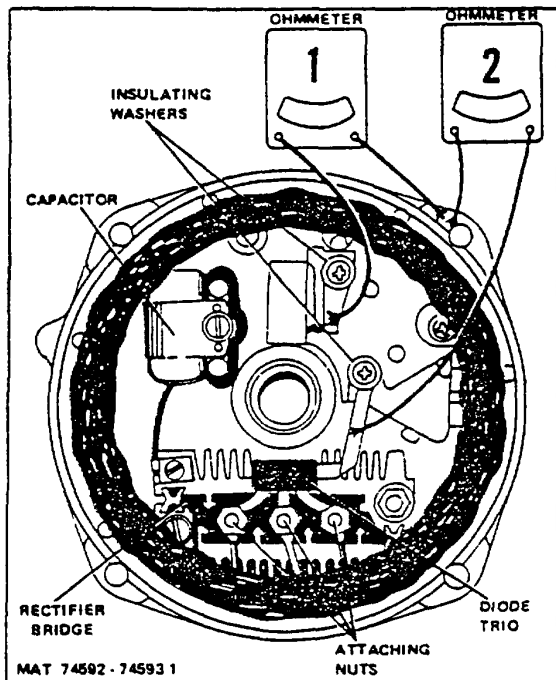


Figure 2-6. End Frame Assembly, Inside View

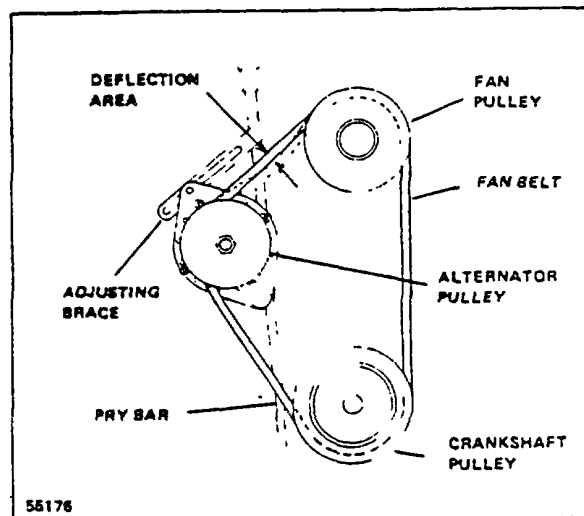


Figure 2-7. Fan Belt Tension

D. ADJUSTMENT

Be sure to check the mounting bolts for tightness and the belt for alignment, correct tension and wear. Belt tension should be adjusted to allow approximately .375" inward deflection of the belt between the alternator pulley and the fan pulley with a force of about 10 pounds. (See Figure 2-7)

When tightening belt tension always apply pressure against the stator laminations, never against the end frames. Inspect the brush springs and brushes for evidence of any damage, wear or corrosion. Replace any brush springs or brushes in doubtful condition.

A noisy alternator can be caused by worn or dirty bearings, loose mounting bolts, a loose drive pulley, a defective diode or a defective stator.

E. REMOVAL

Alternator: After extensive periods of operation or during major engine overhaul, the alternator should be removed from the truck for a thorough inspection and cleaning of all parts. The alternator consists of four main components which includes the two end frames, the stator and the rotor. The following procedures should be used for proper removal:

1. Disconnect the battery from the electrical circuit prior to alternator removal/installation.
2. Disconnect and properly label the "BAT" (Battery), No. 1 and No. 2 terminal leads at the alternator.
3. Loosen the adjusting brace and the pivot mounting bolt, then push alternator towards engine until fan belt is disengaged from the alternator pulley.
4. Carefully remove the alternator from the engine as the pivot mounting bolt and adjusting brace capscrew are removed.

F. SERVICE

Proceed according to the following sequence.

1. Disassembly

To disassemble the alternator, take out the four thru-bolts, and separate the drive end frame and rotor assembly from the stator assembly by prying apart with a screwdriver at the stator slot. A scribe mark will help locate the parts in the same position during assembly.

After disassembly, place a piece of tape over the slip ring end frame bearing to prevent entry of dirt and other foreign material, and also place a piece of tape over the shaft on the slip ring end. If brushes are to be reused, clean with a soft dry cloth.

ALTERNATOR SPECIFICATIONS

Rotation Viewing D.E.	Field Current (80°F.)			Cold Output at Specified Voltage					Rated Hot Output (Amps.)
	Grd.	Amps.	Volts	Spec. Volts	Amps.	Approx. RPM	Amps.	Approx. RPM	
CW	Neg.	4.0 - 4.5	12	*	22	2000	33	5000	37

*Voltmeter not needed for cold output check. Load battery with carbon pile to obtain maximum output.

CAUTION

Use pressure sensitive tape, and not friction tape which would leave a gunny deposit on the shaft.

To remove the drive end frame from the rotor, Place the rotor in a vise and tighten only enough to permit removal of the shaft nut.

CAUTION:

Avoid excessive vise tightening as this may cause distortion of the rotor.

1. Remove the shaft nut, washer, Pulley, fan, and the collar, and then separate the drive end frame from the rotor shaft.
2. Rotor Field Winding Checks

To check for opens, connect the test lamp or ohmmeter to each slip ring.

If the lamp fails to light, or if the ohmmeter reading is high (infinite), the winding is open (Fig. 2-5).

Connect test lamp or ohmmeter from one slip ring to shaft. If lamp lights, or if reading is low, the rotor winding is grounded (not illustrated).

The winding is checked for short-circuits or excessive resistance by connecting a battery and ammeter in series with the edges of the two slip rings. Note the ammeter reading and refer to alternator specifications. As ammeter reading above the specified value indicates shorted windings; a reading below the specified value indicates excessive resistance.

An alternate method is to check the resistance of the field by connecting an ohmmeter to the two slip rings (Fig. 2-5). If the resistance reading is below the specified value, the winding is shorted; if above the specified value the winding has excessive resistance. The specified resistance value can be determined by dividing

the voltage by the current given in alternator specifications. Remember that the winding resistance and ammeter readings will vary slightly with winding temperature changes. If the rotor is not defective, but the generator fails to supply rated output, the defect is in the diode trio, rectifier bridge, or stator.

3. Diode Trio Check The diode trio is identified in Figure 2-6. First, connect an ohmmeter, using lowest range scale, from diode trio long connector to end frame as shown in Step 2, Figure 2-6; then, reverse lead connections. If both readings are the same, check for grounded brush lead clip caused by omission of insulating washer (Fig. 2-6), omission of insulating sleeve over screw, or damaged insulating sleeve. Remove screw to inspect sleeve. If screw assembly is correct, and both ohmmeter readings are the same, replace regulator.

To check the diode trio, remove it from the end frame assembly by detaching the three nuts, the attaching screw, and removing the stator assembly. Note that the insulating washer on the screw is assembled over the top of the diode trio connector. Use the lowest range of an ohmmeter having a 1-1/2 volt cell. Connect the ohmmeter to the single connector and to one of the three connectors (Figure 2-8). Observe the reading. Then, reverse the ohmmeter leads to the same two connectors. If both readings are the same, replace the diode trio. A good diode trio will give one high and one low reading. Repeat this Same test between the single connector and each of the other two connectors. Also, connect the ohmmeter to each pair of the three connectors (not illustrated). If any reading is zero, replace the diode trio.

NOTE

Figures 2-6 and 2-8 illustrate two diode trios differing in appearance. Either one of these diode trios may be used in the alternator, since the two are completely interchangeable.

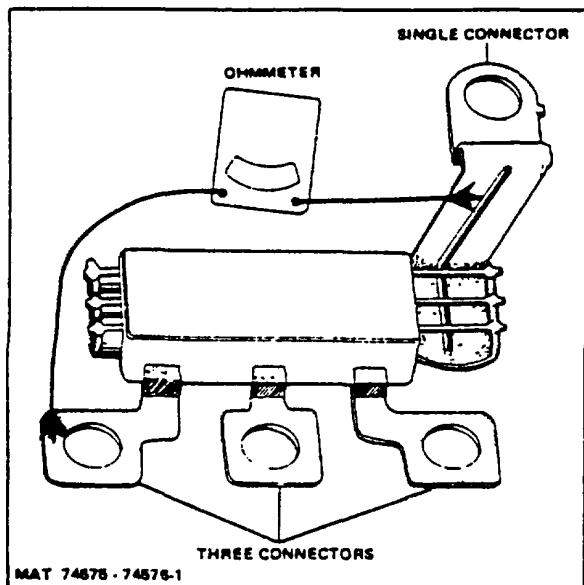


Figure 2-8. Diode Trio Check

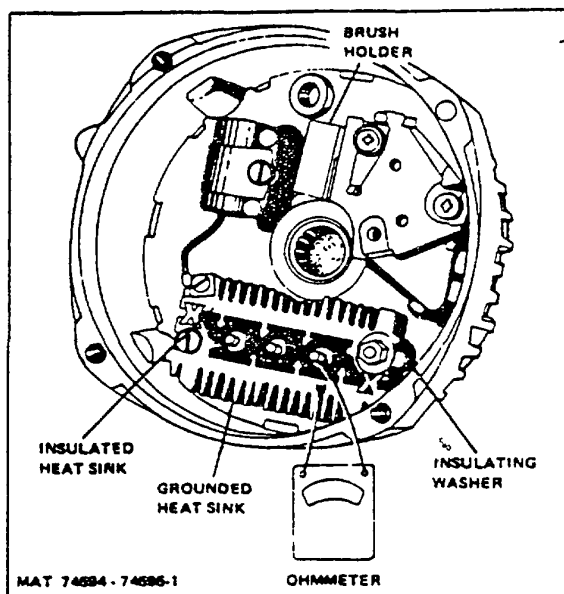


Figure 2-9. Rectifier Bridge Check

4. Rectifier Bridge Check

Note that the rectifier bridge has a grounded heat sink and an insulated heat sink connected to the output terminal. Also, note the insulating washer located between the insulated heat sink and end frame.

To check the rectifier bridge, connect the ohmmeter to the grounded heat sink and one of the three terminals (Fig. 2-9). **IMPORTANT:** If rectifier bridge is constructed as shown in Figure 2-10, connect ohmmeter pressing down very firmly onto flat metal connector, and, not onto threaded stud as in Figure 2-9. Then reverse the lead connections to the grounded heat sink and same terminal. If both readings are the same, replace the rectifier bridge. A good rectifier bridge will give one high and one low reading. Repeat this same test between the grounded heat sink and the other two terminals, and between the insulated heat sink and each of the three terminals. This makes a total of six checks, with two readings taken for each check. The ohmmeter check of the rectifier bridge, and of the diode trio as previously covered, is a valid and accurate check. **DO NOT** replace either unit unless at least one pair of readings is the same.

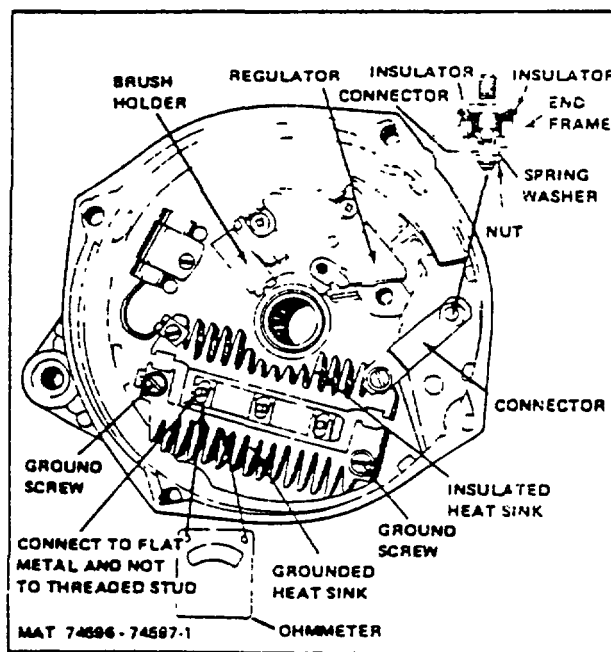


Figure 2-10. Rectifier Bridge Check

CAUTION

Do not use high voltage to check these units, such as a 110 volt test lamp.

To replace the rectifier bridge, remove the attaching screws, and disconnect the capacitor lead. Note the insulator between the insulated heat sink and end frame (Fig. 2-9). Rectifier bridges may vary in appearance but are completely interchangeable in these generators.

5. Stator Checks

The stator windings may be checked with a 110 volt test lamp, or with an ohmmeter. If the lamp lights, or if the meter reading is low when connected from any stator lead to the frame, the windings are grounded. If the lamp fails to light, or if the meter reading is high when successively connected between each pair of stator leads, the windings are open (Fig. 2-11).

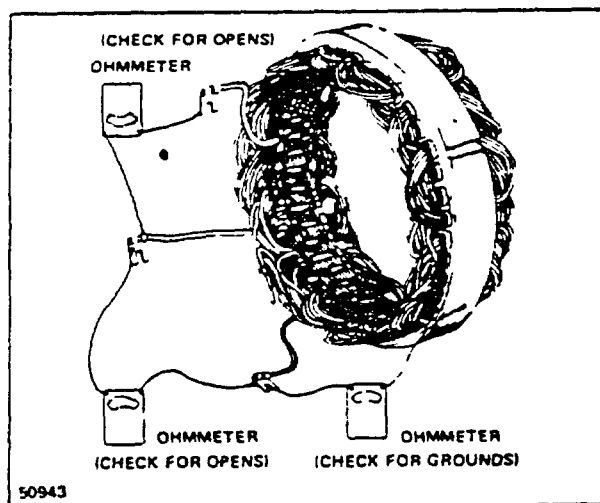


Figure 2-11. Checking Stator Windings

A short circuit in the stator windings is difficult to locate without laboratory test equipment due to the low resistance of the windings. However, if all other electrical checks are normal and the alternator fails to supply rated output, shorted stator windings are indicated.

6. Brush Holder and Regulator Replacement.

After removing the three attaching nuts, the stator, and diode trio screw (Figs. 2-9 and 2-10), the brush holder and regulator may be replaced by removing the two remaining screws. Note the two insulators located over the top of brush clips in Figure 2-6; these two screws have special insulating sleeves over the screw body above the threads. The third mounting screw may or may not have an insulating sleeve. If not, this screw must not be interchanged with either one of the other two screws, as a ground may result, causing no output or uncontrolled generator output. Regulators may vary in appearance but are completely interchangeable.

7. Slip Ring Servicing

If the slip rings are dirty, they may be cleaned and finished with 400 grain or finer polishing cloth. Spin the rotor, and hold the polishing cloth against the slip rings until they are clean.

CAUTION

The rotor must be rotated in order to clean the slip rings evenly.

Cleaning the slip rings by hand without spinning the rotor may result in flat spots on the slip rings, causing brush noise.

Slip rings which are rough or out of round should be trued in a lathe to .002" maximum indicator reading. Remove only enough material to make the rings smooth and round. Finish with 400 grain or finer polishing cloth and blow away all dust.

8. Bearing Replacement and Lubrication

The bearing in the drive end frame can be removed by detaching the retainer plate screws, and then pressing the bearing from the end frame. If the bearing is in satisfactory condition, it may be reused, and it should be filled one-quarter full with Delco-Remy lubricant No. 1948791 before reassembly.

CAUTION

Do not overfill bearing as this may cause it to overheat. Use only 1948791 lubricant.

To install a new bearing, press in with a tube or collar that just fits over the outer race, with the bearing and slinger assembled into the end frame as shown in Figure 2-12. It is recommended that a new retainer plate be installed if the felt seal in the retainer plate is hardened or excessively worn. Fill the cavity between the retainer plate and bearing with 1948791 lubricant.

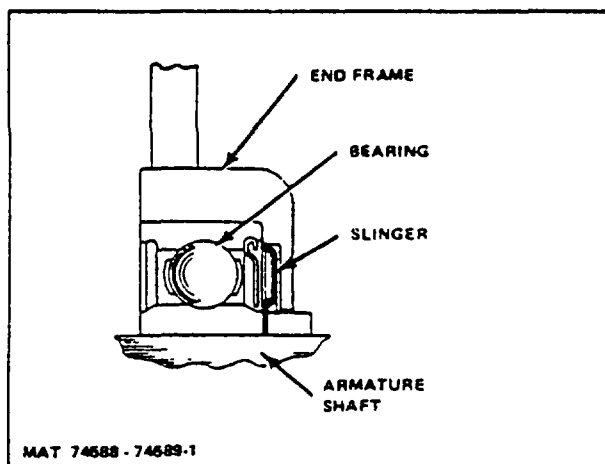


Figure 2-12. Drive End Bearing Assembly
(Some models use flat washer
instead of slinger)

The bearing in the slip ring end frame should be replaced if its grease supply is exhausted. No attempt should be made to re-lubricate and reuse the bearing. To remove the bearing from the slip ring end frame, press out with a tube or collar that just fits inside the end frame housing. Press from the outside of the housing towards the inside.

To install a new bearing, place a flat plate over the bearing and press in from the outside towards the inside of the frame until the bearing is flush with the outside of the end frame. Support the inside of the frame with a

hollow cylinder to prevent breakage of the end frame. Use extreme care to avoid misalignment or otherwise placing undue stress on the bearing.

If the seal is separate from the bearing, it is recommended that a new seal be installed whenever the bearing is replaced. Press the seal in with the lip of the seal toward the rotor when assembled, that is, away from the bearing. Lightly coat the seal lip with oil to facilitate assembly of the shaft into the bearing.

9. Reassembly

Assembling the pulley assembly, remembering to secure the rotor in a vise only tight enough to permit tightening the shaft nut to 40-60 lb. ft. If excessive pressure is applied against the rotor, the assembly may become distorted. To install the slip ring end frame assembly to the rotor and drive end frame assembly, remove the tape over the bearing and shaft, and make sure the shaft is perfectly clean after removing the tape. Insert a pin through the holes to hold up the brushes. Carefully install the shaft into the slip ring end frame assembly to avoid damage to the seal. After tightening the thru-bolts remove the brush retaining pin to allow the brushes to fall down into the slip rings.

10. Alternator Bench Check

To check the alternator in a test stand, proceed as follows:

- a. Make connections as shown in Figure 2-14, except leave the carbon pile disconnected. **IMPORTANT:** Ground polarity of battery and alternator must be the same. Use a fully charged battery, and 10 ohm resistor rated at 6 watts or more between the alternator No. 1 terminal and the battery.
- b. Slowly increase the alternator speed and observe the voltage.

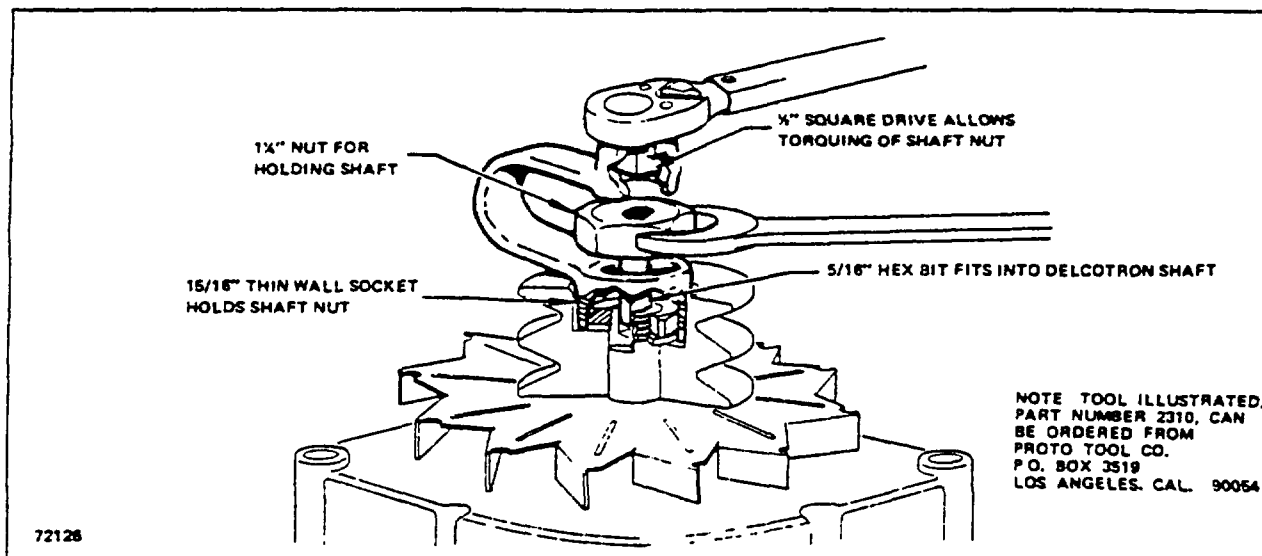


Figure 2-13. Torquing Alternator Shaft Nut

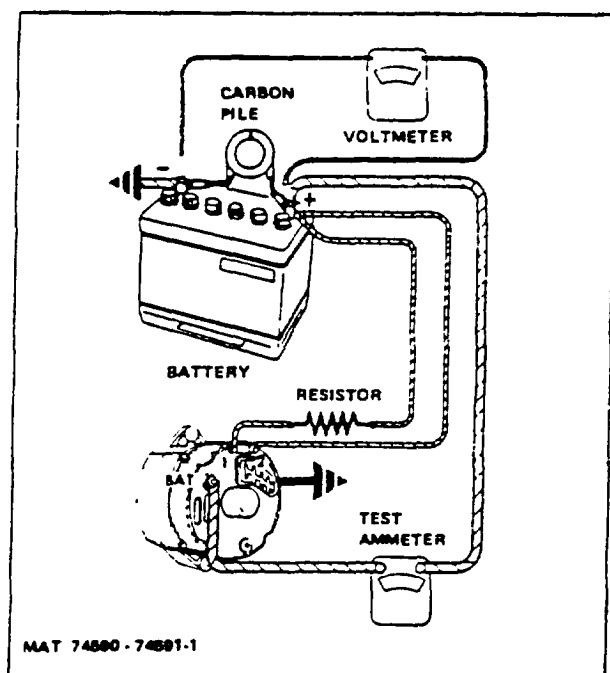


Figure 2-14. Connections for Bench Check of Alternator (Negative ground alternator shown)

c. If the voltage is uncontrolled with speed and increases above 15.5 volts on the 12 volt system, check for a grounded brush lead clip as indicated in Overcharged Battery section, Step 3. If not

grounded, replace the regulator, and check field winding.

NOTE

The battery must be fully charged when making this check.

- d. If voltage is below 15.5 volts, connect the carbon pile as shown.
- e. Operate the alternator at moderate speed, as required, and adjust the carbon pile, as required, to obtain maximum current output.
- f. If output is within 10 amperes of rated output as stamped on alternator frame, alternator is good.
- g. If output is not within 10 amperes of rated output, keep battery loaded with carbon pile, and ground alternator field (Fig. 2-4).
- h. Operate generator at moderate speed and adjust carbon pile as required to obtain maximum output.
- i. If output is within 10 ampere of rated output, replace regulator as indicated in Regulator Replacement section, and check field winding.
- j. if output is not within 10 amperes of rated output, check the field winding, diode trio, rectifier bridge, and stator as previously described.

TOPIC 3. STARTER MOTOR

A. DESCRIPTION

Starter motor is a series type field coil connection, four brush construction, with armature supported by bushings at drive and commutator ends. The two brushes connected to field coil leads are insulated in commutator end frame and the two armature brushes are grounded.

CAUTION

Starter must never be used for more than 30 seconds at any one time. Allow starter motor to cool for 2 minutes before using again. Never use starter to move vehicle.

A solenoid switch mounted to the flange on the Starter motor drive housing operates the overrunning clutch drive by means of linkage and a shift lever. When the starter switch closes the cranking circuit, the solenoid is energized, shifting the starter motor pinion into mesh with the engine flywheel ring gear and closing the main contacts located inside the solenoid. Battery current is then directed to the motor causing the armature to rotate. Cranking torque is transmitted by the clutch from the starter motor armature to tip flywheel ring gear. To protect the armature from excessive speed as the engine starts, the clutch is designed to "overrun" or turn faster than the armature which permits the pinion to disengage itself.

B. MAINTENANCE

The starter motor is a completely enclosed unit and requires very little maintenance. However, to ensure satisfactory operation, periodic inspections should be made to make sure mounting and wiring connections are tight and in good condition. Solenoid switch should be firmly mounted and all wiring connections should be clean and tight. These inspections should also include connections to battery and return circuit, loose or dirty connections anywhere in the circuit will cause high resistance and reduced cranking efficiency. When mounting and wiring connections are kept in good condition, and motor responds instantly and cranks engine when switch is closed, motor may be considered to be in satisfactory condition and disassembly is unnecessary.

Starter motor under normal operating conditions will not require lubrication except during overhaul.

When the motor is disassembled for any reason, lubricate as follows:

1. Oil wicks should be resaturated.

2. The armature shaft and bushings should be coated with Delco-Remy Lubricant No. 1960954.
3. The roll type overrunning clutch requires no lubrication. However, the drive assembly should be wiped clean.

CAUTION

Do not clean in any degreasing tank or with grease dissolving solvents; this will dissolve the lubricant in the clutch mechanism.

4. Avoid excessive lubrication.

C. IN VEHICLE TEST

Several checks, both visual and electrical, should be made in a defective cranking circuit to isolate trouble before removing any unit. Before removing a unit in a defective cranking system, the following checks should be made.

1. Determine the condition of the battery, follow the testing procedure outlined in BATTERY Section.
2. Inspect the wiring for frayed insulation or other damage. Replace any wiring, that is damaged. Inspect all connections to the starter motor solenoid, ignition switch and battery, including all ground connections. Clean and tighten all connections and wiring as required.
3. Inspect solenoid and ignition switch to determine their condition. Connect a Jumper lead around any switch suspected of being defective. If the system functions properly using this method, repair or replace the bypassed switch.
4. Check engine for tight bearings, pistons, heavy oil, etc., which imposes extra heavy loads on starter motor.

D. STARTER MOTOR REMOVAL

Due to starter motor being completely enclosed, it must be removed from the engine any time it requires service.

1. Lift operator's seat and swing open right hand side panel.
2. Disconnect all electrical leads from starter motor or starter motor solenoid.
3. Remove mounting bolts which attach starter motor to flywheel housing.

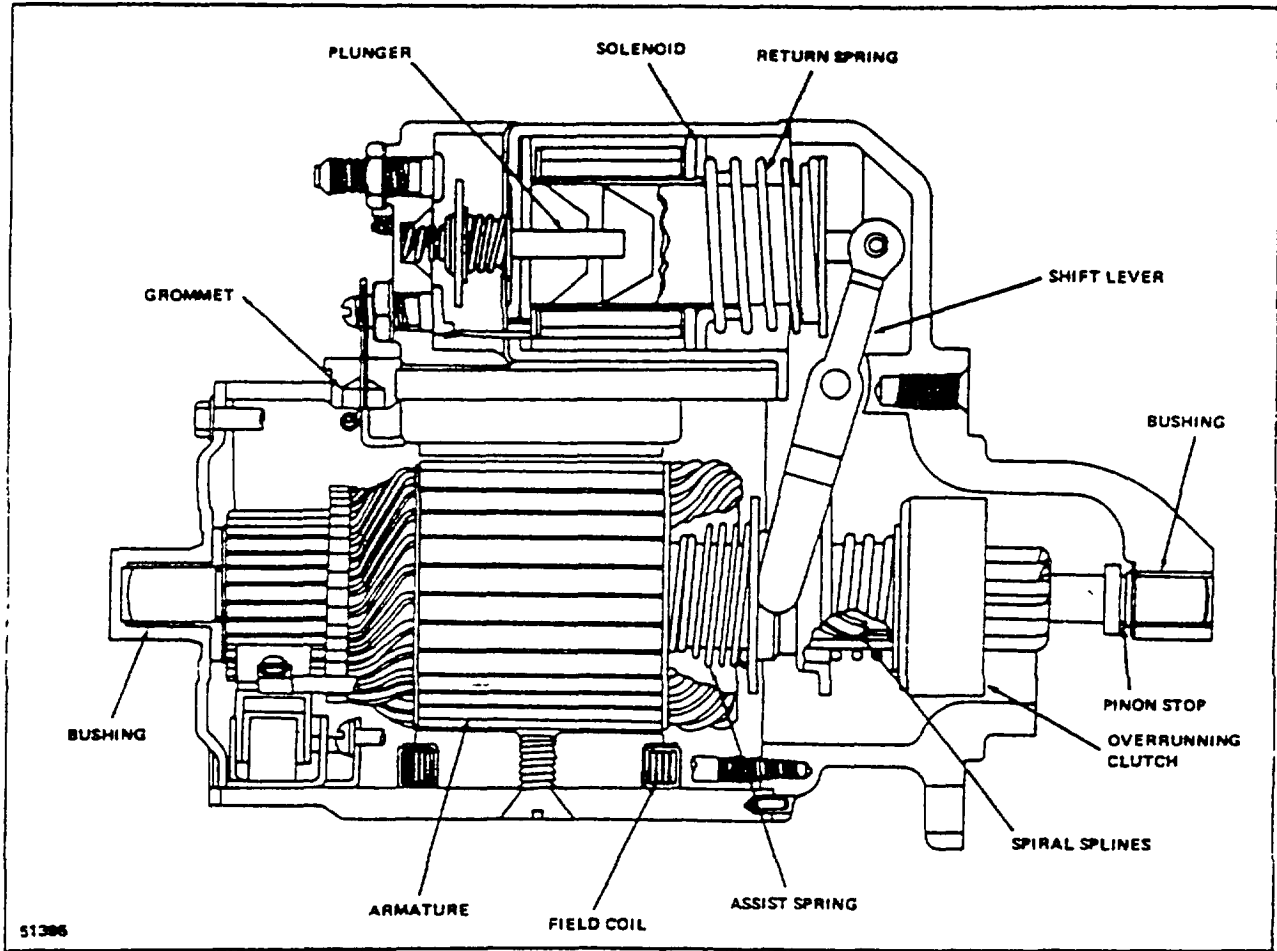


Figure 3-1. Starter Motor (Sectional View)

STARTER MOTOR TEST SPECIFICATIONS

Rotation D.E.	Min. Brush Spring Viewing (oz.)	No Load Test					Resistance Test		
		Tension Volts	Min. Amps.	Max. Amps.	Min. RPM	Max. RPM	Volts	Min. Amps.	Max. Amps.
C	35	9	50*	80*	5500	10500	4.3	270*	310*

*Includes Solenoid

4. Pull starter out of flywheel housing until drive end clears flywheel housing and tilt commutator end up to remove unit from truck.

E. STARTER MOTOR CHECKS

With the starter motor removed from the vehicle, the pinion should be checked for freedom of operation by turning it on the screw shaft. The armature should be checked for freedom of operation by turning the pinion. Tight, dirty, or worn bearings, bent armature shaft, or loose pole shoe screw will cause the armature to drag and it will not turn freely. If the armature does not turn freely, the motor should be disassembled for repair. If the armature does operate freely, the starter motor should be given a no-load test before disassembly.

1. No-Load Test

Connect the starter motor in series with a fully charged battery of specified voltage, an ammeter capable of reading several hundred amperes and a variable resistance. Also connect a voltmeter, as illustrated in Figure 3-2. An r.p.m. indicator is necessary to measure armature speed. Obtain the specified voltage by varying the resistance unit. Then read the current draw and the armature speed and compare these readings with the values listed in the starter motor specifications.

Results of Test

- a. Rated current draw and no-load speed indicates normal condition of the cranking motor.
- b. Low free speed and high current draw indicates:
 - (1) Too much friction tight, dirty, or worn bearings, bent armature shaft or loose pole shoes allowing armature to drag.

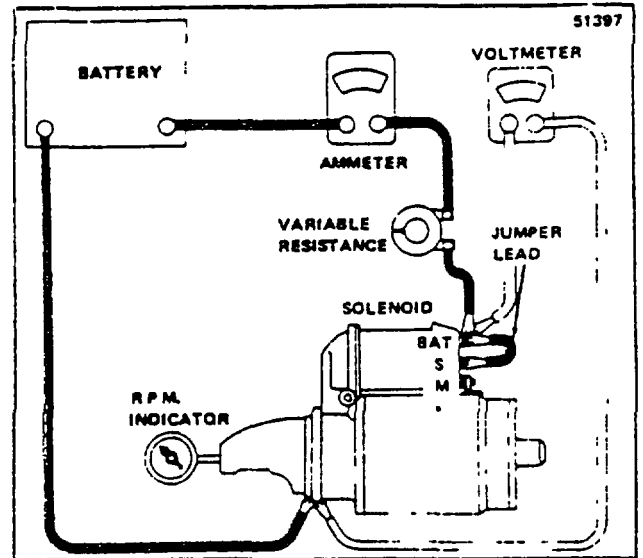


Figure 3-2. No-Load Test Hookup It

- (2) Shorted armature. This can be further checked on a growler after disassembly.
 - (3) Grounded armature or fields. Check further after disassembly.
- c. Failure to operate with high current draw indicates:
- (1) A direct ground in the terminal or fields.
 - (2) "Frozen" bearings (this should have been determined by turning the armature by hand).

d. Failure to operate with no current draw indicates:

- (1) Open field circuit. This can be checked after disassembly by inspecting internal connections and tracing circuit with a test lamp.
- (2) Open armature coils. Inspect the commutator for badly burned bars after disassembly.
- (3) Broken brush springs, worn brushes, high insulation between the commutator bars or other causes which would prevent good contact between the brushes and commutator.

e. Low no-load speed and low current draw indicates:

- (1) High internal resistance due to poor connections, defective leads, dirty commutator and causes listed in Step "d".

f. High free speed and high current draw indicate shorted fields. If shorted fields are suspected, replace the field coil assembly and check for improved performance.

2. Resistance Test

This test requires equipment as illustrated in Figure 3-3. Lock the pinion securely so it cannot rotate. When the specified voltage is applied, the current should fall in a range as Indicated in Starter Motor Test Specification Chart. A high current indicates shorted or grounded conductors, and a low current indicates excessive resistance.

F. DISASSEMBLY

If the starter does not perform in accordance with the specifications, it may need to be disassembled for further testing of the components. Normally the starter motor should be disassembled only so far as is necessary to make repair or replacement of the defective parts. Following are recommended instructions for disassembly procedure.

1. Disconnect the field coil connections from the solenoid motor terminal.
2. Remove the thru-bolts.

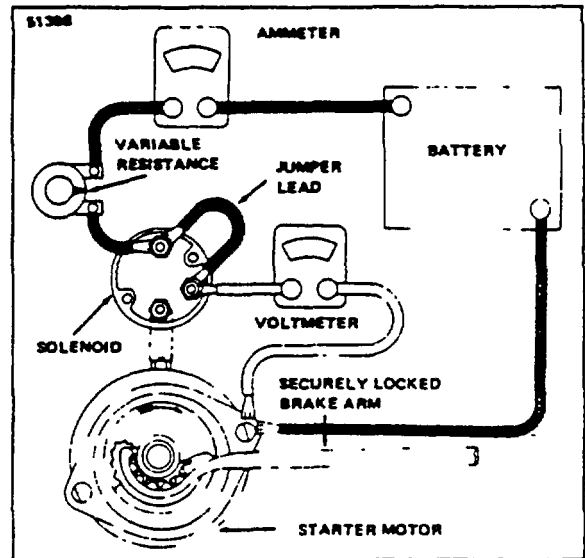


Figure 3-3. Resistance Test Hookup

3. Remove the commutator end frame and field frame assembly.
4. Remove the solenoid and shift lever assembly from the drive housing.
5. Remove the armature assembly from the drive housing.
6. Remove the thrust collar from the armature shaft.
7. Remove the pinion from the armature by sliding a metal cylinder onto the shaft. Using a hammer, strike the metal cylinder against the retainer, driving the retainer toward the armature core and off the snap ring. Refer to Figure 3-4.
8. Remove the snap ring from the groove in the armature shaft.

G. INSPECT AND REPAIR

1. Brushes and Brush Holders Inspect the brushes for wear. If they are worn down to one-half their original length, when compared with a new brush, they should be replaced. Make certain the brush holders are clean and the brushes are not binding in the holders. The full brush surface should ride on the commutator with a spring tension of 35 oz., to give good, firm contact. Brush leads and screws should be tight and clean.

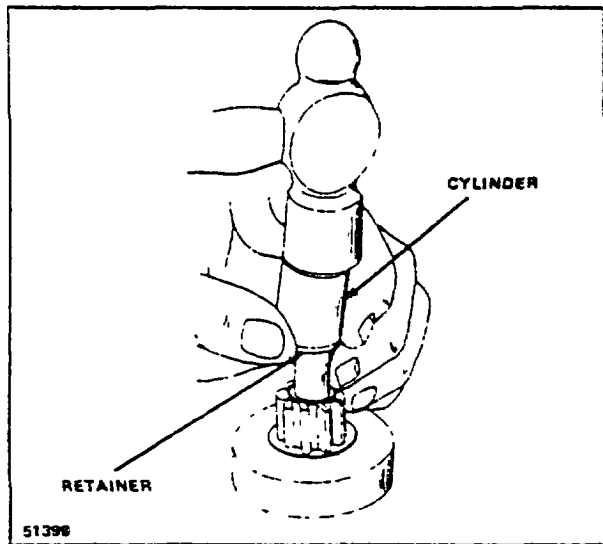


Figure 3-4. Removing Retainer from Snap Ring

2. Armature

The armature should be checked for short circuits, opens and grounds.

- a. check armature for shorts by placing it on a "growler", and with a steel strip or a hack saw blade held on armature core, rotate armature. If blade vibrates, armature is shorted in area of the core below the vibrating blade. Copper or brush dust in slots between commutator bars sometimes causes shorts which can be eliminated by cleaning out slots. Shorts or crossovers of coils at core end can often be eliminated by bending wire slightly and reinsulating exposed bare wire. If short cannot be eliminated armature must be replaced.
- b. Opens may be located by inspecting the points wire the conductors are joined to the commutator for loose connections. Poor connections cause arcing and burning of the commutator. If the bars are not badly burned, resolder the leads in the riser bars and turn the commutator down in a lathe. Then undercut the insulation between the commutator bars .031".
- c. Grounds in the armature can be detected by the use of a test lamp. If the lamp lights when one test prod is placed on the commutator and the other test prod on the armature, the armature is grounded.

If the commutator is worn, dirty, out of round, or has high insulation, the commutator should be turned down and undercut as previously described.

3. Field Coils

The field coils should be checked for grounds and opens using a test lamp.

- a. To check for grounds, disconnect the field coil ground connections. Connect one test prod to the field frame and the other to the field connector. If the lamp lights, the field coils are grounded and must be repaired or replaced.
- b. To check for opens, connect test lamp prods to ends of field coils. If lamp does not light the field coils are open.

If the field coils need to be removed for repair or replacement, a pole shoe spreader and Pole shoe screwdriver should be used. Care should be exercised in replacing the field coils to prevent grounding or shorting them as they are tightened into place. Where the pole shoe has a long lip on the side, it should be assembled in the direction of armature rotation.

H. REASSEMBLY

1. Place the clutch assembly on the armature shaft. To facilitate replacing the -nap ring and retainer onto the armature.
 - a. Place the retainer on the armature shaft with the -upped surface facing the snap ring groove.
 - b. Place the snap ring on the end of the shaft. With a piece of wood on top of it, force the ring over the shaft with a light hammer blow (See Figure 3-5), then slide the ring down into the groove.
 - c. To force the retainer over the snap ring, place a suitable washer over the shaft and squeeze retainer and washer together with pliers (See Figure 3-6).
 - d. Remove the washer.
2. Refer to the disassembly procedure and follow in reverse to complete the reassembly.

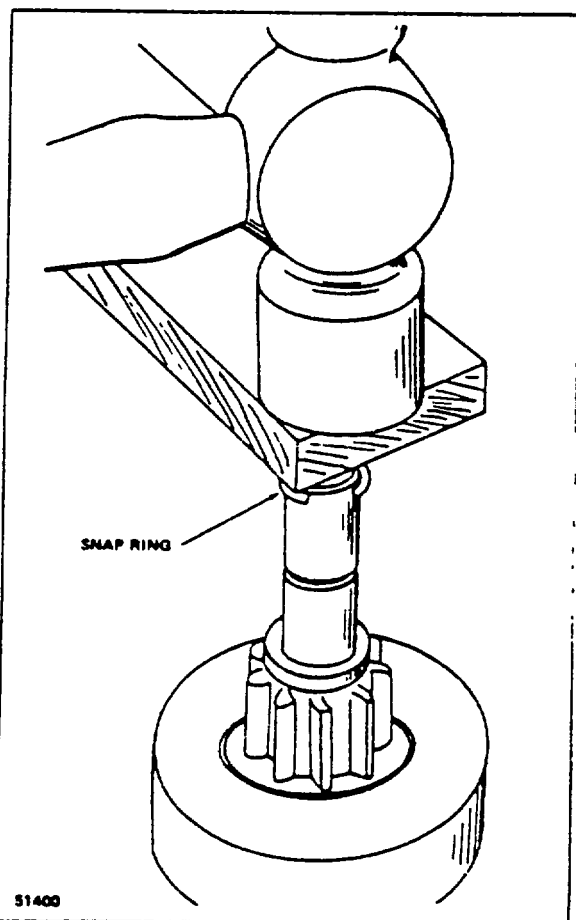


Figure 3-5. Forcing Snap Ring Over Shaft

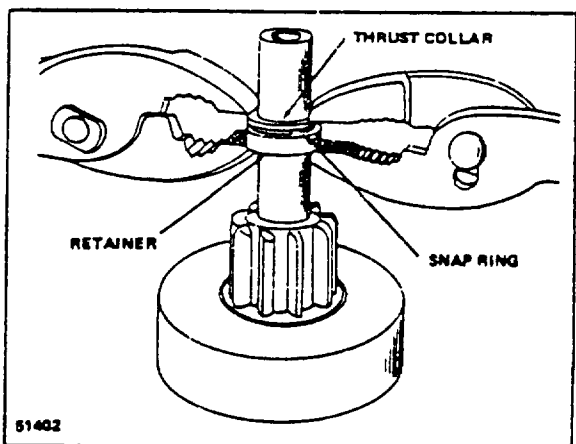


Figure 3-6. Forcing Retainer Over Snap Ring

3. When solenoid is reinstalled, apply sealing compound between field frame, flange, and solenoid junction.

I. PINION CLEARANCE

The pinion clearance cannot be adjusted but should be checked after reassembly of the motor to ensure proper clearance. Improper clearance is an indication of worn parts.

To check pinion clearance, the following procedure is recommended.

1. Disconnect the starter motor field coil connector from the solenoid motor terminal and insulate it carefully.
2. Connect a battery, of the same voltage as solenoid, from the solenoid switch terminal to the solenoid frame (See Figure 3-7).

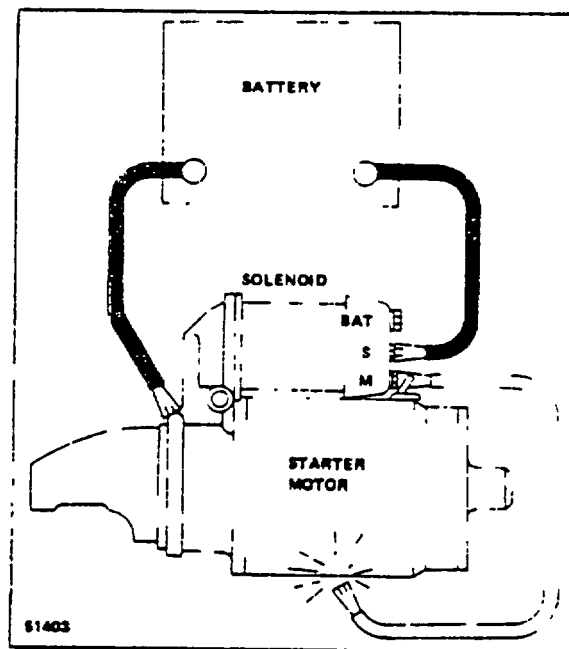


Figure 3-7. Circuit for Checking Pinion Clearance

3. Momentarily flash a jumper lead from the solenoid motor terminal to the solenoid frame. This will shift the pinion into cranking position and it will remain so until the battery is disconnected.
4. Push the pinion back toward the commutator end to eliminate slack movement.
5. Measure the distance between pinion and pinion stop (See Figure 3-8). Pinion clearance should be .010" to .140".

J. STARTER MOTOR INSTALLATION

1. Insert drive end of starter motor in flywheel housing. If drive mechanism is fully extended, mesh pinion gear with flywheel ring gear. Install mounting bolts and tighten securely.
2. Connect all electrical leads to either starter motor or starter solenoid.
3. Close right hand side panel and lower operator's seat.

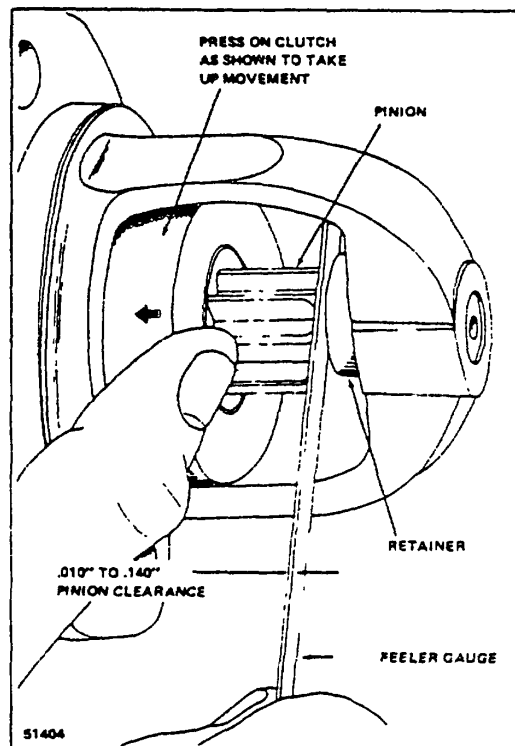


Figure 3-8. Checking Pinion Clearance

TOPIC 5. DISTRIBUTOR (TYPE II)

GASOLINE AND L.P.G. ENGINES ONLY

A. DESCRIPTION

The distributor is mounted on the cylinder head and is driven off the engine lubricating oil pump extension at one-half the engine crankshaft speed.

The distributor consists of a cast housing into which a shaft and weight base are fitted in a bronze bushing. Centrifugal advance weights are pivoted on studs in the weight base and are free to move against the calibrated weight springs which connect them to the advance cam and breaker cam assembly. The advance cam and breaker cam assembly is slit-fitted to the top of the shaft and rotates with the shaft, being actuated by the advance weights. Lateral movement of the weights advances the cam assembly in relation to the shaft as the speed is increased. The greater the engine speed, the farther out the distributor weights move, which increases the shift in the breaker cam position and in turn, advances the spark.

When the cam breaker is rotated by the centrifugal advance mechanism, each cam lobe passes under the breaker lever rubbing block, separating the contact points and producing a high voltage surge in the ignition circuit. With every breaker cam revolution, one spark will be produced for each engine cylinder. Since each cylinder fires every other revolution in a four stroke cycle engine, the distributor is required to rotate at only one half the engine crankshaft speed to furnish ignition.

Built-in distributor lubrication is made possible with the use of a porous bushing, which extends from the upper to the lower part of the housing. A well is provided which is kept filled with oil. Seepage through the porous bushing provides shaft lubrication.

A dust cover located under the distributor cap completely seals off the breaker compartment from dust or dirt.

The high tension terminals on the ignition coil and the distributor cap are covered with tight fitting neoprene nipples to prevent moisture and dust accumulation, thereby preventing a conductive path to ground which would cause the engine to misfire.

NOTE

Refer to ENGINE MAINTENANCE MANUAL, ENGINE TUNE-UP, for specific distributor characteristics and distributor-to-engine timing procedure.

B. DISTRIBUTOR SERVICE

The distributor cap should be removed at regular intervals to examine the contact points, the rotor and cap. (Dust cover, located under cap, must be removed before contact points can be inspected.)

Check the high tension wiring for defective insulation and poor connections at the distributor cap and spark plugs. Wipe the distributor cap and check the cap and rotor for cracks or carbon tracks indicating leakage of high voltage current across the surface.

Check the centrifugal advance mechanism by turning the breaker cam in the direction of rotation and then releasing it. The advance springs should return the cam to its original position without sticking.

Inspect the contact points. If points are badly pitted or burned, they must be replaced as follows:

1. After distributor cap, rotor and dust cover have been removed from distributor housing, remove the nut and washer from the inner end of the primary terminal.
2. Remove the slotted head locking screw attaching the contact support to the distributor breaker plate, and remove the contact points. If condenser is to be replaced, remove screw attaching condenser to breaker plate and remove and discard condenser.
3. Install the replacement condenser. Apply a light coat of high quality silicone grease to breaker cam. Install the new contact support with breaker lever over the pivot post. Install the slotted head locking screw which attaches contact support to breaker plate but do not fully tighten screw as yet. Connect the primary lead to breaker plate.

NOTE

Make certain proper installation is made and all connections are tight.

4. Rotate crankshaft until the breaker lever rubbing block is on a high spot on the cam, thus opening the contact points to their maximum open position. Insert a screwdriver into the adjusting slot (Fig. 5-1) and turn clockwise or counterclockwise until the specified point gap of .020" is obtained. Lock points in this position by tightening

contact point lock screw. After tightening lock screw, recheck point gap with .020" feeler gauge.

NOTE

Contact gap should be .017" to .022" with a maximum adjusted gap at .020".

5. Install dust cover, rotor and distributor cap.

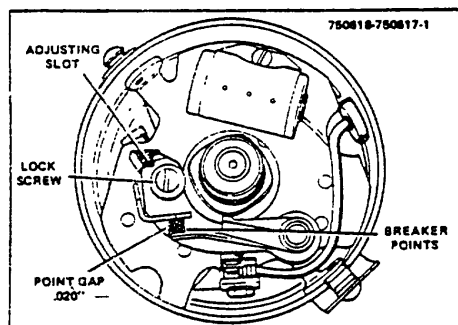


Figure 5-1. Adjusting Contact Gap.

C. REMOVAL

1. Remove the spark plug cables from the spark plugs, and label each one as it is disconnected. Remove the ignition coil cable from the ignition coil cap.
2. Disconnect the primary lead at the coil terminal.

NOTE

Distributor can be removed overhauled and replaced without retiming engine if distributor is returned to it's original position. Mark side of distributor, noting position of rotor before removing distributor from engine.

3. Remove nut and lockwasher from clamp stud and carefully lift distributor out of cylinder head.

D. DISASSEMBLY

See Figure 5-2.

1. Unlock distributor cap retaining clips and remove distributor cap, rotor and dust seal.
2. Remove the contact points and condenser.
3. Remove screws and carefully remove breaker plate assembly from housing, taking care not to tear primary lead

or protective rubber grommet. Remove retaining ring and remove breaker cam from shaft.

4. Using a sharp or pointed Instrument, scribe a light mark on shaft coupling and shaft prior to removing coupling. This will assist in proper alignment during reassembly.
5. Grind head off coupling retainer ;in and remove pin, coupling, and seal from shaft. Shaft and weight support can now be removed from the distributor housing.
6. Remove screws, washers, and weight base and shaft from body.
7. Remove weight springs, weights and advance cam from shaft.

E. INSPECTION

Clean all carts thoroughly and replace any damaged or worn parts.

NOTE

Do not attempt to clean distributor cap, dust cover, rotor, condenser or housing in any degreasing compound, since this may damage parts.

1. Check centrifugal advance parts, weights, springs and plate for evidence of wear or damage.
2. Replace dust cover seal if hard, worn, or dirty.
3. Replace point contact set if worn, burned or badly pitted.
4. Check breaker lever rubbing block for excessive wear.
5. If distributor housing bushing requires replacement, exercise care ,when replacing so as not to scratch or scuff the inside or outside of the bushing. Do not ream, scrape or file the bushing.
6. Check condenser for leakage. If it cannot be properly tested, then replace it with condenser of same value.
7. Check the distributor cap and rotor for cracks, burning of contacts or carbon streaks.

F. REASSEMBLY

During assembly of the distributor, make

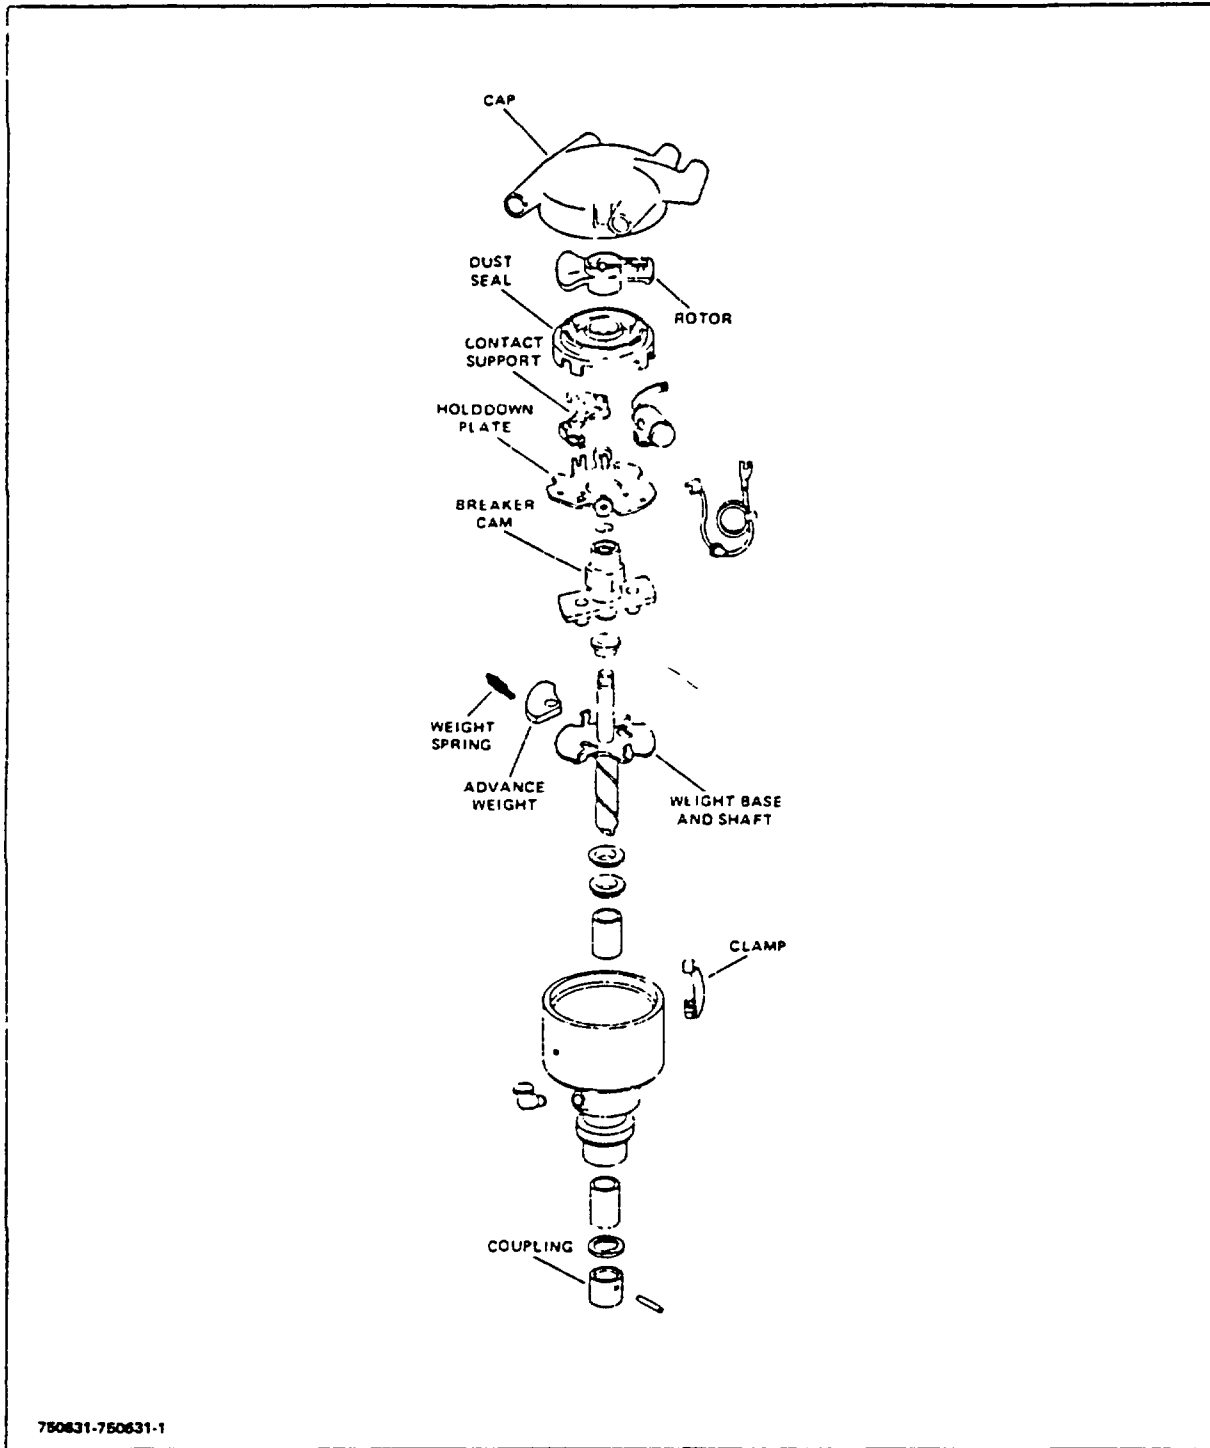


Figure 5-2. Distributor Assembly (Type II), Exploded View

certain that all parts operate freely, as any binding may adversely affect the centrifugal advance.

1. Install advance weights on weight base. Place the cam assembly on the shaft and attach with retaining ring. Place a drop of oil on the weight pivot pin.
2. Coat drive shaft with light film of silicone grease. Place seal on shaft and install weight base, shaft and seal in distributor housing.
3. Install coupling on bottom of shaft, making sure scribe marks on coupling and shaft are properly aligned. When holes for retainer pin are aligned, check end play of shaft.

NOTE

End play should be .003" to .010".

If end play is within these limits, install a new retainer pin and peen over ends. If end play is above or below specified limits, then shims may be added or removed until correct clearance is obtained.

4. Install breaker plate along with securing screws.
5. Install condenser and contact points. Using feeler gauge, set and lock contact points at .020" (see Section B, Service, Paragraph 4).
6. Install rotor.

G. INSTALLATION

1. Be sure rotor is positioned as it was before removal and install distributor. Using rotor, turn distributor shaft until tongue of coupling enters groove in top of distributor drive shaft.
2. Install holddown clamp, lockwasher and nut. Remove rotor and install dust cover, rotor and distributor cap.
3. Install spark plug wires as labeled and Install high tension cable in distributor cap. Connect distributor primary lead to ignition coil.
4. Check engine timing. Refer to ENGINE MAINTENANCE MANUAL, TUNE-UP SECTION.

TOPIC 6. CONDENSER**GASOLINE AND L.P.G. ENGINES ONLY****A. DESCRIPTION**

An important, and often overlooked, part of the ignition system is the condenser, which is installed in the distributor. The condenser provides an electrical reservoir where current can flow until the contact points are safely separated. The unit is constructed of several, layers of foil and insulator material. Alternating layers of foil are connected to either the terminal or ground.

High resistance in a condenser is usually caused by loosening, or corrosion of connections, which in turn causes the condenser to be slow in taking a charge and also causes high voltage at the contact points. Arcing and rapid wear of contacts, along with missing during

starting and low speed operation, may be indications of this condition.

B. SERVICE

Original equipment condensers are designed for use over a broad speed range of the engine. Contact pitting will result if a condenser of incorrect capacity is used. Examine contact points for excessive pitting: If pitted and the crater is on the positive contact, then the condenser is over capacity. If crater is on the negative contact, then condenser is under capacity. Under these conditions a new condenser should be installed which has a slightly higher or a slightly lower capacity than conditions call for. The correct condenser capacity is .18 to .23 microfarads.

TOPIC 1. COOLING SYSTEM DESCRIPTION

The function of the cooling system is to prevent the temperatures in the combustion chamber, which may reach as high as 4000F., from damaging the engine and, at the same time, keep the operating temperatures within safe limits.

Maintaining the cooling system efficiency is important, as engine temperatures must be brought up to and maintained within satisfactory range for optimum operation; however the system must be kept from overheating, in order to prevent damage to valves, pistons and bearings.

See Figure 1-1. The system coolant is water which is force-circulated by a water pump. A thermostat and a by-pass hose, which form part of the system, serve to direct coolant flow through the engine only, or through the engine and the radiator.

Coolant from the water pump is first directed in the block against the exhaust valve seats and into passages connecting the cylinder head. This method provides the coldest water reaching the parts subjected to the highest temperatures.

The cylinder walls, in turn, are cooled their full length by convection currents only, which keep the cylinder barrels at a more uniform temperature and, thereby, reduce crankcase oil dilution and sludge formation. Upon leaving the cylinder head, the coolant enters the thermostat housing in which is mounted the bypass type thermostat. Coolant passage to the radiator is controlled by the thermostat. Upon being discharged from the thermostat housing, the coolant enters the radiator, where it is cooled before re-entering the engine through the water pump.

Teledyne Continental L-Head gasoline engines operate most efficiently with water temperatures of 180° to 200°F; the thermostat and bypass hose are used to control these temperatures.

Before a cold engine reaches operating temperature, the thermostat valve is closed, passage to the by-pass hose is open, and the coolant recirculates through the engine block only.

This provides for both rapid and even temperature increase of all engine parts during the warm-up period. When proper temperature is reached, the thermostat valve opens and allows the coolant to circulate through both the engine and the radiator.

Water has always been the most commonly used coolant for internal combustion engines because it has excellent heat transfer ability and is readily obtained everywhere. Like all liquids it expands when heated, the rate of expansion being 1/4 pint per gallon when the temperature is raised from 40° to 180°F.

For example: If a 4 gallon cooling system is filled completely full of water at 40°F, 1 pint will be lost through the radiator overflow pipe by the time the water temperature reaches 180°F.

Water boils at 212°F under atmospheric pressure at sea level. This pressure becomes less at higher altitudes and the reduced pressure causes water and other liquids to boil at a lower temperature. The chart shown in Figure 1-2 shows the effect on boiling point of water and anti-freeze solution.

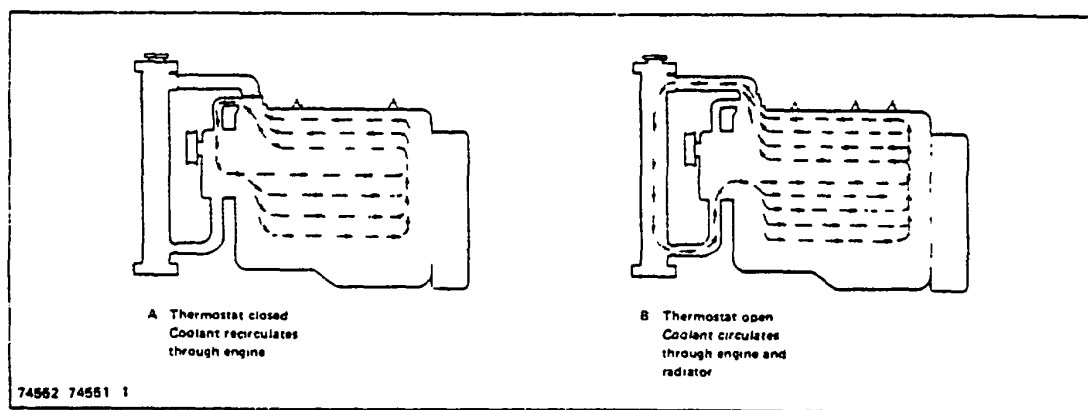


Figure 1-1. Cooling System, Cross Sectional View

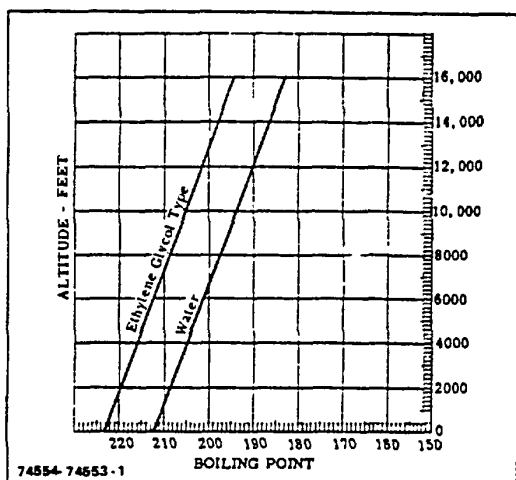


Figure 1-2. Effect of Altitude on Boiling Point of Coolant

CAUTION
Do not run engine without thermostat installed!

On Teledyne Continental engines, the thermostat performs an important function in achiev-

ing proper coolant flow through the radiator. The engine should never be operated without a thermostat installed as serious damage can result.

Water freezes at 32°F., forms solid ice and expands about 9% in volume--which causes tremendous pressure and serious damage when allowed to freeze inside the cooling system.

When operating temperatures are below 32°F. an anti-freeze liquid must be added which will lower the freezing point a safe margin below the anticipated temperature of outside air.

The only approved anti-freeze is Ethylene Glycol, or permanent type, because of the temperature ranges it maintains for efficient operation of the engine. When no leaks are present, add water only to make up for evaporation, as follows:

Temperature Range	Parts Glycol	to	Parts Water
32° to 10°F	1		4
+10° to -100F	2		5
-10° to -300F	1		1

TOPIC 2. WATER PUMP

A. DESCRIPTION

Liquid coolant is circulated through the engine and the radiator by a centrifugal water pump. The pump is enclosed in a sealed, cast metal housing and is flange mounted to the engine block. The pump impeller is pressed on one end of a steel shaft and the fan drive pulley is pressed on the other end. The shaft is supported at the drive end by a sealed, double row ball bearing, and is prevented from moving endwise by a retainer ring and a 'shoulder' in the pump housing.

Coolant is prevented from seeping along the shaft at the impeller end by a spring-loaded neoprene seal, which is retained in the pump housing by a bearing against the face of the impeller. Any coolant which does seep past the impeller is thrown from the shaft by a slinger before the coolant can enter the

shaft bearing. The pump shaft and the bearing constitute one assembly and are serviced as such. The shaft bearing is the shielded type and is filled with lubricant when assembled, therefore no further lubrication is necessary. The construction of the water pump is conducive to long life with minimum attention if clean coolant is used in the system. Water containing scale forming elements is especially harmful to the pump parts due to corrosion.

B. SYSTEM REVERSE FLOW FLUSHING

When it becomes necessary to remove the water pump for service or replacement, the cooling system should be thoroughly cleaned first, by flushing the radiator and the water cooling jacket in the forward and reverse directions.

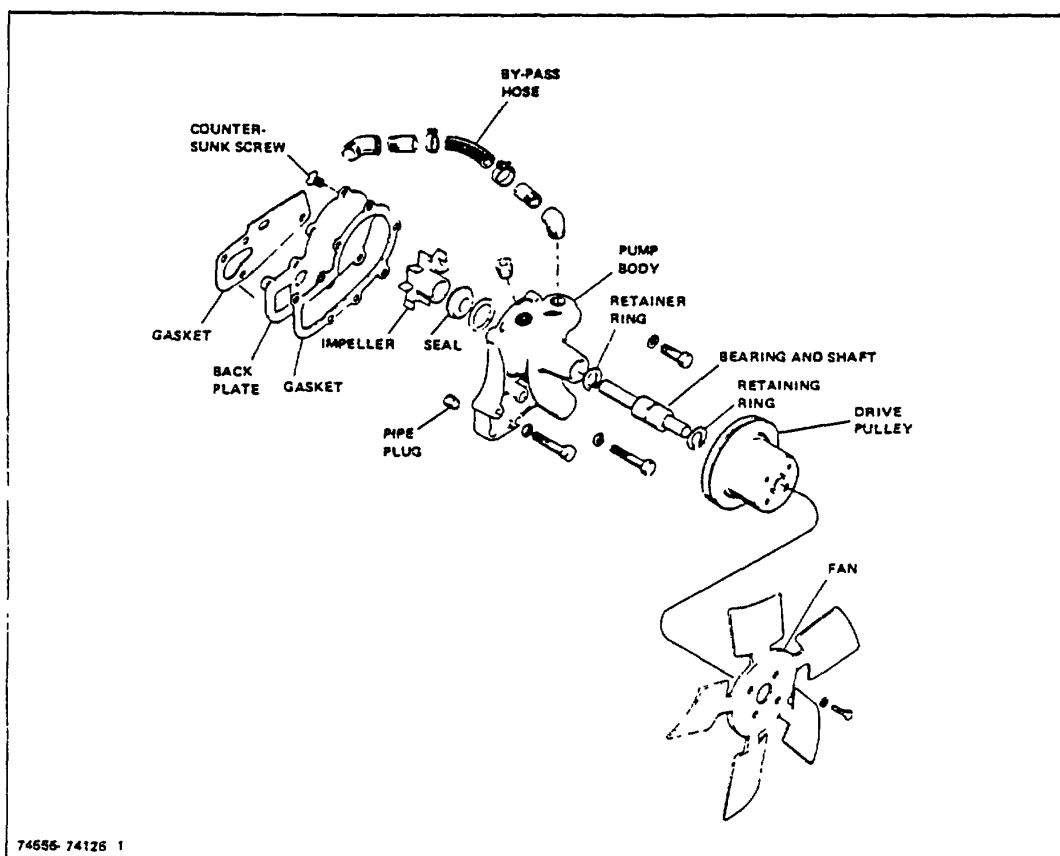


Figure 2-1. Water Pump, Exploded View

Purge the cooling system from all rust and scale by running the engine with a cleaning or flushing solution added to the coolant. The flushing solution is then drained through the radiator drain cock and the block drain cock located underneath the alternator. After draining, it is advisable to reverse flush the radiator first.

CAUTION

Allow engine to cool before reverse flushing the radiator. Refer to Topic 3 Radiator.

C. WATER PUMP REMOVAL

Proceed as follows:

1. Remove the engine side panels and raise the operator's seat.
2. Loosen the alternator adjusting bracket capscrew and the alternator pivot mounting capscrew and push the alternator towards the engine until the fan belt tension is relieved. Remove the fan belt.
3. Remove the fan blade mounting capscrews and lockwashers then remove the fan.
4. Remove the radiator pressure cap, open the drain rocks located beneath radiator and the alternator, and drain the cooling system.
5. Loosen the hose clamp and remove the bottom hose leading from radiator.
6. Loosen the clamp at each end of the coolant bypass hose. and remove the hose.
7. Remove the capscrews which secure the water pump to the cylinder block, then remove the water pump and the flange gasket.

D. DISASSEMBLY

When disassembling the water pump, an arbor press and suitable pressing blocks are required. Disassembly must be performed in the following sequence to prevent damage to the pump. See Figure 2-1.

1. Remove the back plate from the pump and measure the distance from rear of pump body to rear of pulley flange, see Figure 2-2. This measurement, "A" shown in Figure 2-2, insert, is used during pump installation.

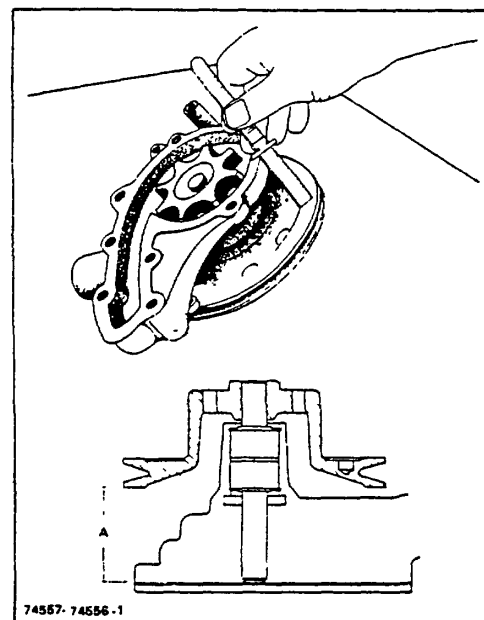


Figure 2-2. Measuring Distance Between Pump Body and Rear of Pulley Flange.

2. Use a puller to remove pulley from shaft, see Figure 2-3.
3. Remove the impeller using a puller. Take precautions to prevent damage to the pump body.
4. Remove the impeller seal and gasket.
5. Using long-nose pliers, remove the retainer ring that holds the bearing and shaft assembly in the pump body.
6. Using an arbor press or a lead hammer, force the bearing and shaft assembly out through the front.

CAUTION

DO NOT attempt to drive the water pump shaft out through the rear. To do so, will damage the pump body beyond repair.

E. INSPECTION/REPAIR Repair to the water pump will consist of replacement of any parts that are worn or damaged.

1. Clean rust or other deposits from pump parts and inspect for corrosion,

cracking, external damage or damage from pressing, or other defects which might impair efficient operation.

2. Check the bearing and shaft assembly by rotating the bearing. If movement is rough or the bearing is binding or running dry from lack of lubricant, the shaft and bearing assembly must be replaced.

CAUTION

Do not wash the bearing assembly as it is permanently lubricated at the factory.

3. Inspect the face of the impeller hub, where it contacts the seal, for any scoring or pitting. The face must be smooth so as not to damage the seal.
4. Check the impeller seal for a smooth, flat surface. A light film of lubricant applied to the face of the seal facilitates seating and sealing.
5. Always use a new pump gasket when reassembling.

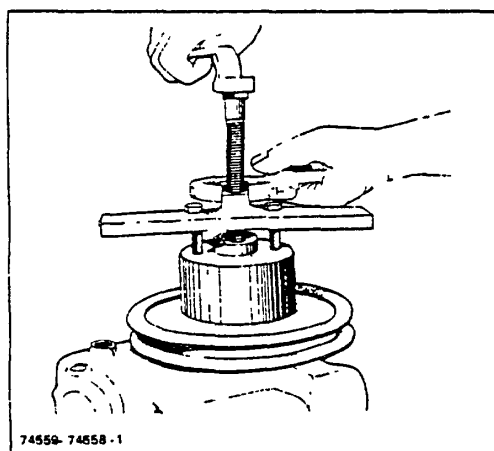


Figure 2-3. Removing Water Pump Pulley

F. ASSEMBLY

Reassemble the water pump by referring to Figure 2-1 for the relative location of the parts, and reversing the sequence of the disassembly procedure as follows.

1. When the bearing and shaft assembly is installed, use thick soap suds on the assembly and the impeller seal to prevent damage to the seal.

R-155-1

2. Install a new seal in the pump body. When installing the seal make certain it is square with the seal bore and is firmly seated.

3. Place the pump housing in an arbor press on a suitable support and press the shaft and bearing assembly into the bearing bore until the bearing is firmly seated against the inside housing shoulder.

NOTE

Care must be taken during this operation to prevent damage to the seal.

4. Install the retainer rings in the front and rear of the bearing.
5. Using an arbor press, install the impeller on the pump shaft until the impeller is flush with the end of the shaft. Revolve the impeller to make certain that it is free to turn and firmly seated on the seal.

NOTE

If the impeller is properly seated on the seal, a slight drag caused by the mating faces of the seal assembly and the impeller will be felt.

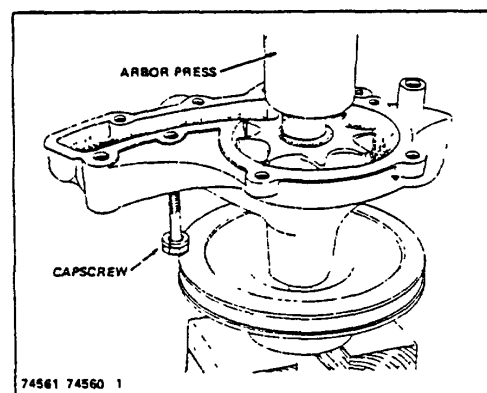


Figure 2-4. Water Pump Assembly Showing Inserted Capscrew, Prior to Pulley Press Fit.

G. INSTALLATION

1. Measure pulley and shaft. Recommended minimum press fit is .001". (Pulley must fit snugly on shaft).
2. Insert capscrew in pump body BEFORE crossing pulley on to shaft (Figure 2-4). Coat

inside of pulley bore with Loctite retainer compound.

3. Place the pulley on a flat surface, see Figure 2-5, pressing on END of shaft with arbor to dimension determined in the Disassembly section (Figure 2-2). Pulley should rotate freely.

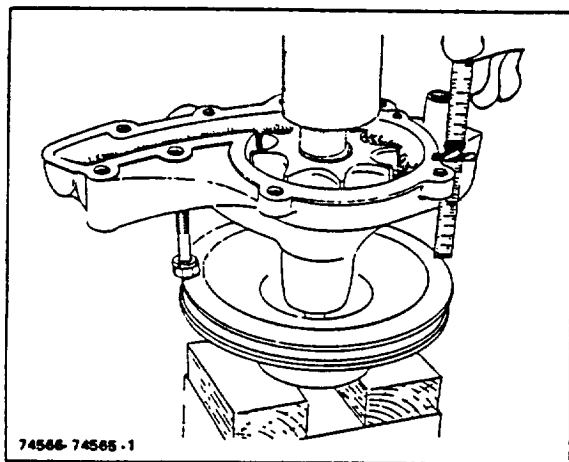


Figure 2-5. Pressing Water Pump Pulley to Correct Depth

4. Clean the gasket mounting surfaces on the water pump flange and on the cylinder block, and install new gasket. Use approved sealing compound as required.
5. Install and secure the water pump with mounting capscrews.
6. Replace the coolant by-pass hose and tighten the clamps.

CAUTION

Do not overtighten end nuts this could cause by-pass tube to puncture or split.

7. Replace the lower hose connecting the radiator to the pump. Secure clamps.
8. Replace the by-pass hose connecting the pump to the thermostat housing on the cylinder head.
9. Close the drain cock at the bottom of the radiator and beneath the alternator.

NOTE

Ensure that the fan belt has been placed on the fan pulley prior to installing and securing the fan blade.

10. Install the fan blade with the mounting capscrews and lockwashers. Tighten capscrews securely.
11. Properly align fan belt at fan drive pulley, fan pulley and alternator pulley and adjust fan belt tension. After proper adjustment, secure alternator capscrews.
12. Fill the cooling system with clean water, including anti-freeze, if climate dictates. Replace radiator pressure cap.

CAUTION

DO NOT run the engine without water in the system. Running a pump dry will damage the seal and shorten pump life.

13. Operate the engine until the normal operating temperature has been reached, then check the cooling system for any evidence of leaks. Correct if necessary. After thermostat opens, coolant level should be topped-up.
14. Replace the engine side panels and lower the operator's seat.

TOPIC 3. RADIATOR

A. DESCRIPTION

The radiator is the fin and tube type and is vertically supported by angle bracing to the truck frame. The front of the radiator is protected from structural damage by a heavy grille mounted in the counterweight. An overflow tube is connected to the filler neck and leads to the bottom of the radiator.

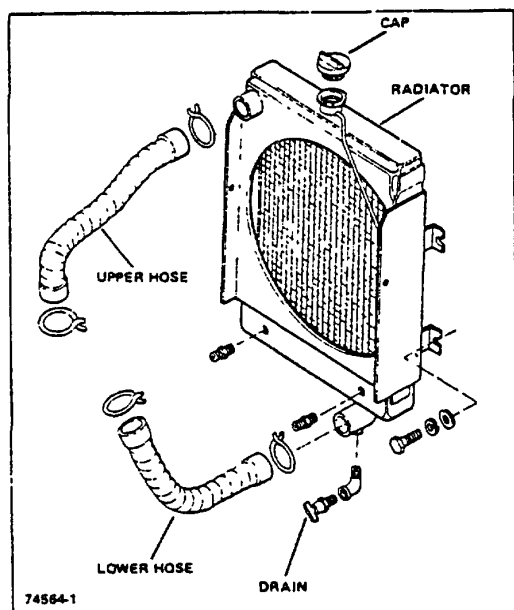


Figure 3-1. Radiator Assembly

B. REMOVAL

When it becomes necessary to remove the radiator for service, the following procedure is recommended:

1. Remove the engine side panels and raise the operator's seat.
2. Remove the radiator cap, open the drain cocks beneath radiator and alternator, and drain the cooling system.

CAUTION

Cooling system is pressurized. Coolant can boil if pressure is released at atmospheric pressure. When removing radiator cap protect hand with glove or rag. Rotate cap slowly until a hissing sound is heard. Leave cap in position until hissing stops, then turn cap until hissing starts again or cap comes free.

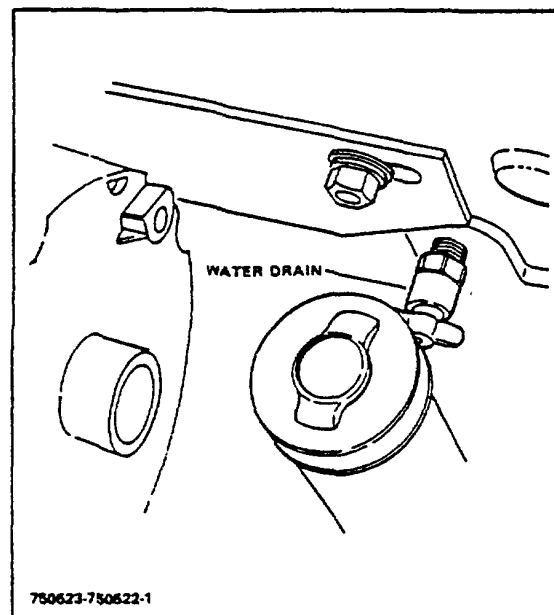


Figure 3-2. Water Drain Cock Location

3. Loosen the retaining hose clamps and remove the inlet and outlet hoses from the top and bottom of the radiator.

NOTE

An oil cooler is an integral part of the bottom of the radiator to prevent overheating of the transmission. The oil cooler lines must be removed prior to removing the radiator.

4. Remove the securing capscrews and the radiator grille from the back of the counterweight.
5. Remove the capscrews which hold the radiator in position on the mounting bars located on the frame inside the counterweight.
6. Slide the bottom of the radiator out of position. After the filler neck of the radiator has cleared the inside top of the counterweight, the radiator can easily be removed.

C. INSPECTION-SERVICE

If the tubes in the radiator become clogged, the obstructions may sometimes be removed by reverse flushing the radiator.

NOTE

It is not necessary to remove the radiator to perform reverse flushing. Simply disconnect the upper and lower radiator hoses and proceed as follows.

When the clogging is caused by debris or other similar foreign material it usually is deposited at the top of the tubes.

1. Radiator Reverse Flush Proceed as follows (see Figure 3-3) :

- a. Disconnect the hoses at the engine.
- b. Put radiator cap on tight.
- c. Clamp the flushing gun in the lower hose with a hose clamp.
- d. Turn on the water and let it fill the radiator.

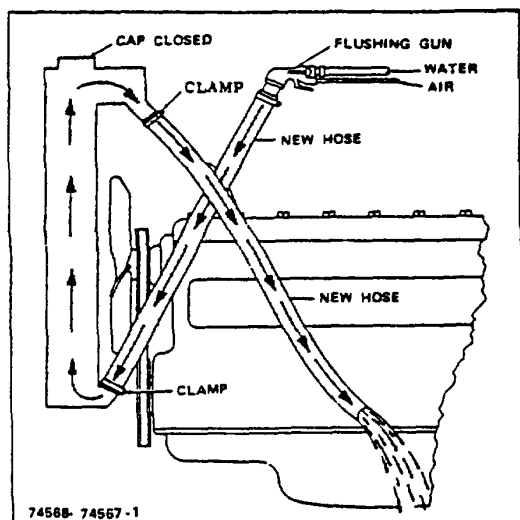


Figure 3-3. Reverse Flushing Radiator

- e. Apply air pressure (6 lbs. max) gradually, to avoid radiator damage.
 - f. Shut off the air, again fill the radiator with water and apply air pressure--repeat until the flushing stream runs out clear.
 - g. Clean and inspect radiator cap.
2. Engine Water Jacket Reverse Flush Proceed as follows (see Figure 3-4) :

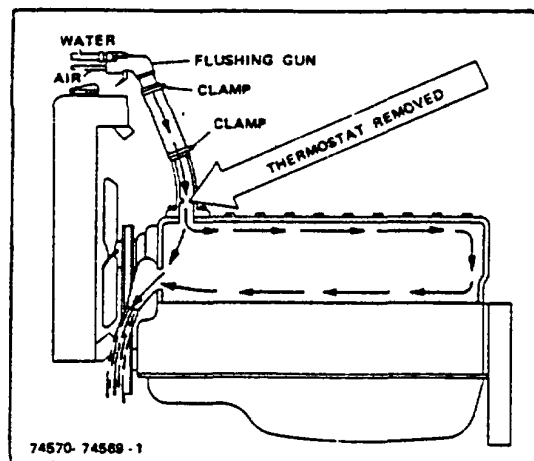


Figure 3-4. Reverse Flushing Engine a. Remove the thermostat.

- b. Clamp the flushing gun in the upper hose.
- c. Partly close the water pump opening to fill the engine jacket with water before applying air pressure.

- d. Follow the same procedure outlined above for the radiator by alternately filling the water jacket with water and blowing it out with air pressure (6 lbs. max.) until the flushing stream is clear.

To clean the cooling fins, it is best to direct an air blast carrying a grease solvent, such as oleum spirits or carbon tetrachloride, directed at the back side of the core and passing through to the front or engine side.

CAUTION

Never use gasoline, fuel oil or kerosene to clean the radiator.

WARNING

Always provide adequate ventilation of the working area during this operation to avoid possible toxic effects of the cleaning spray.

3. For regular periodic service of radiator cooling fins, simply direct a dry air blast against the rear of the radiator core to dislodge dust or lint which may have accumulated due to dusty operating conditions.
4. The "oil clutch" and "Power Shift" transmission oil cooler is an integral part of the lower tank of the radiator. To properly clean the oil cooler, flush tank with an acceptable highly volatile cleaning solvent and blow out with compressed air.

5. Oil cooler should be periodically checked for leaks or clogging.
6. If any fractures or breaks are discovered during radiator inspection, then the radiator should be brazed for proper sealing.

D. INSTALLATION

1. Slide the radiator up into mounting position within the counterweight, ensuring against any damage to filler neck or cooling fins.
2. With radiator properly aligned tighten two capscrews through radiator mount to frame support bars.
3. Install grille and secure grille and radiator with two capscrews. Secure grille with two remaining capscrews.

NOTE

The oil cooler lines will have to be replaced and tightened.

4. Replace the upper and lower radiator hoses and secure the retaining clamps. If hoses are cracked or cut, they must be replaced.
5. After radiator is installed, measure the distance between the leading edge of the fan blades and the radiator core. This dimension should be approximately 7/8". Also ensure that the cooling fan is properly centered within the radiator shroud.
6. Close the cooling system drain cocks beneath radiator and in engine block and fill system to recommended capacity with coolant, replace the radiator pressure cap and check for leaks.

NOTE

Allow engine to reach normal(160°F) operating temperature. The thermostat will then open and the coolant will flow into the engine. Coolant level must then be 'topped-up'.

7. Replace the engine side panels and lower the operator's seat.

E. CLEANING AND FLUSHING

It is recommended that the cooling system be cleaned at least twice a year, usually at the beginning of the cold weather season and before the anti-freeze solution is put into the system.

R-155-1

Cleaning at these intervals will reduce the possibility of clogging or overheating, and will minimize the necessity of removing the radiator for special cleaning. If hard water has been used, the necessity for cleaning is even greater, since lime deposits or scale will form in the radiator, cylinder head and block. This lime deposit is detrimental to the engine and the radiator core.

Flushing the radiator will remove obstructions in the radiator tubes and other water passages, which, if not removed, would eventually clog these passages. It is also important that the air passages between the radiator tubes be kept free of obstructions and that the exterior of the engine be kept free from thick deposits of dust and oil. The following procedure is recommended to properly clean and flush the cooling system:

1. Sal Soda is a very effective and safe solvent for removal of lime, scale and other foreign deposits in the cooling system. It should be used in the proportions indicated and according to the directions printed on the container in which it is purchased. Many good cleaning solvents for this purpose are on the market; they should always be used according to directions.

CAUTION

Never mix anti-freeze compounds or inhibitors with any cleaning, neutralizing or flushing compounds

2. After the solvent has been in the cooling system the prescribed length of time, the system should be completely drained, and after the engine has cooled sufficiently, thoroughly flush with clean water.
3. The use of certain cleaning compounds resources the use of a neutralizer solution which is usually packed and sold with the cleaning compound, and should be used as directed.
4. If radiator is badly clogged, then reverse flushing is required. (Refer to Paragraph C, INSPECTION/SERVICE, this Topic).
5. After the cooling system has been cleaned or flushed, and before new coolant is added to the system, a complete inspection should be made to detect and correct any leaks that may have been uncovered.
 - a. Inspect all hoses and fittings for signs of deterioration. Replace as is necessary.
 - b. Check the cylinder head capscrews, hose clamps, and fitting connections. Tighten or replace where necessary.

TOPIC 1. EXHAUST SYSTEM**A. DESCRIPTION**

The purpose of the exhaust system is to safely and quietly channel the exhaust gases from the engine to the rear of the truck where the gases are vented into the air. The following components make up the typical exhaust system, the exhaust pipe, muffler, tail pipe and the attaching capscrew and clamp hardware items (Figures 1-1, 1-2, and 1-3).

After combustion has occurred within the engine, the exhaust gases are released from the combustion chamber via the exhaust valves. From here, the gases are channeled through the exhaust manifold to the attaching exhaust pipe.

The exhaust pipe carries the gases to the muffler which is so constructed as to greatly reduce the engine combustion noises and to entrap any glowing particles that might be suspended in exhaust gas.

The exhaust gases leave the muffler and are vented at the rear end of the truck via the tail pipe.

It is very important that the exhaust system remains tight and in good repair not only to keep

operating noise at a low level, but because of the danger of randomly escaping gas.

B. INSPECTION

1. Inspect muffler and exhaust and tail pipes carefully for any holes, fractures or corrosion. Replace defective component immediately.
2. Inspect each component juncture for security and tightness of connection.
3. Ensure that all components of exhaust system are properly clamped to the truck frame.

C. REMOVAL

When it becomes necessary to replace any or all of the exhaust system components, the following procedure is recommended:

1. Remove left hand side engine panel and raise left side of truck to gain access to muffler location. ACP Series require removal of rear grille.

2. To remove exhaust pipe, loosen clamp securing it to muffler and remove capscrews mounting exhaust pipe to exhaust manifold.
3. To remove tail pipe, loosen clamp securing it to muffler, and remove clamp securing it to truck frame.
4. To remove muffler, disconnect exhaust and tail pipes and remove the capscrews and washers securing it to the truck frame.
5. After muffler has been removed from truck, remove the rubber grommets from the mounting bracket.

D. INSTALLATION

1. Install rubber grommets in muffler mounting bracket and install muffler.
2. Secure exhaust pipe to muffler with clamp, and using new gasket, secure to manifold with capscrews.
3. Secure tail pipe to muffler and truck frame with clamp.
4. Inspect all connections for exhaust leaks. Repair as is necessary.
5. Lower left side of truck and replace the left hand side engine panel.

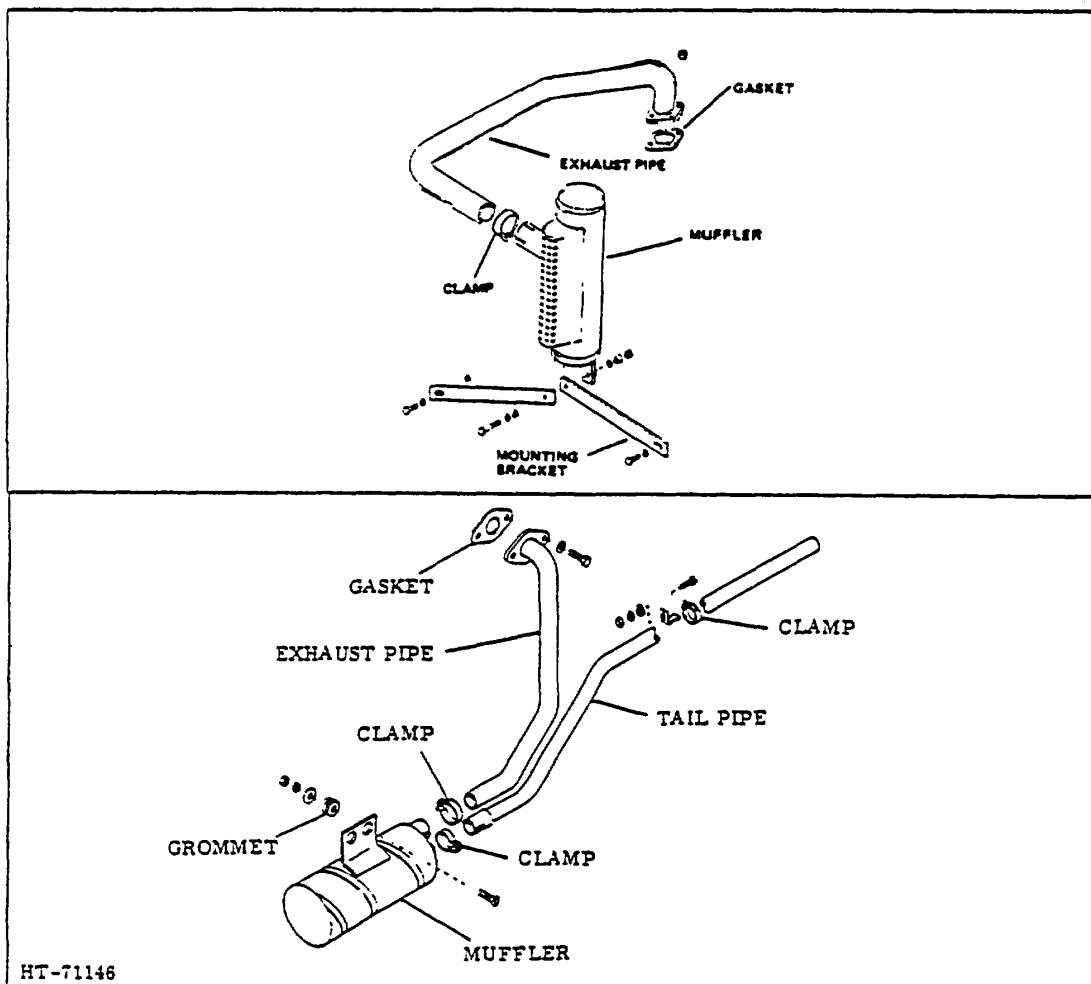


Figure 1. Exhaust System: Muffler, Exhaust and Tail Pipe (Typical)

TOPIC 1. TRANSMISSION

A. DESCRIPTION

The "Power-Shift" transmission consists of three major components: The torque converter, a hydraulically actuated clutch pack and a single speed, constant mesh transmission. A single lever type shift control is mounted on the steering column to control the direction of travel through a control valve mounted on the transmission housing.

Power from the engine is delivered to the torque converter which, in turn, drives a pump and clutch pack. Housed in the clutch drum are two double faced clutch plates which, when activated, move the truck forward or reverse through splined hubs, transmitting power to the gear train.

If the reverse clutch is activated, power is delivered to the transmission through a hollow shaft which connects the reverse gear and reverse clutch. If the forward clutch is actuated, power is delivered to the transmission through a solid shaft, which rotates inside the hollow reverse shaft, connecting the forward gear and forward clutch.

TORQUE CONVERTER

The torque converter is composed of three members: The impeller or driving member, the turbine or driven member, and the stator or reaction member. The impeller forms the outer shell of the converter, and the turbine and stator operate within the impeller but turn free of the impeller. The impeller is mounted on the engine flywheel and always turns at engine speed.

The torque converter is filled with oil and when the impeller is rotated by the engine, the oil in the impeller vanes also rotates; and, being subjected to centrifugal force, causes the oil to flow outward. At the beginning, the turbine is stationary, and there is no centrifugal force on the oil in it. Therefore, the oil in the impeller, due to its centrifugal force, enters the turbine near its outer circumference and forces oil from the turbine back into the impeller near its inner circumference. A circulation of oil is set up, which continues as long as there is a difference between the speeds of the impeller and the turbine.

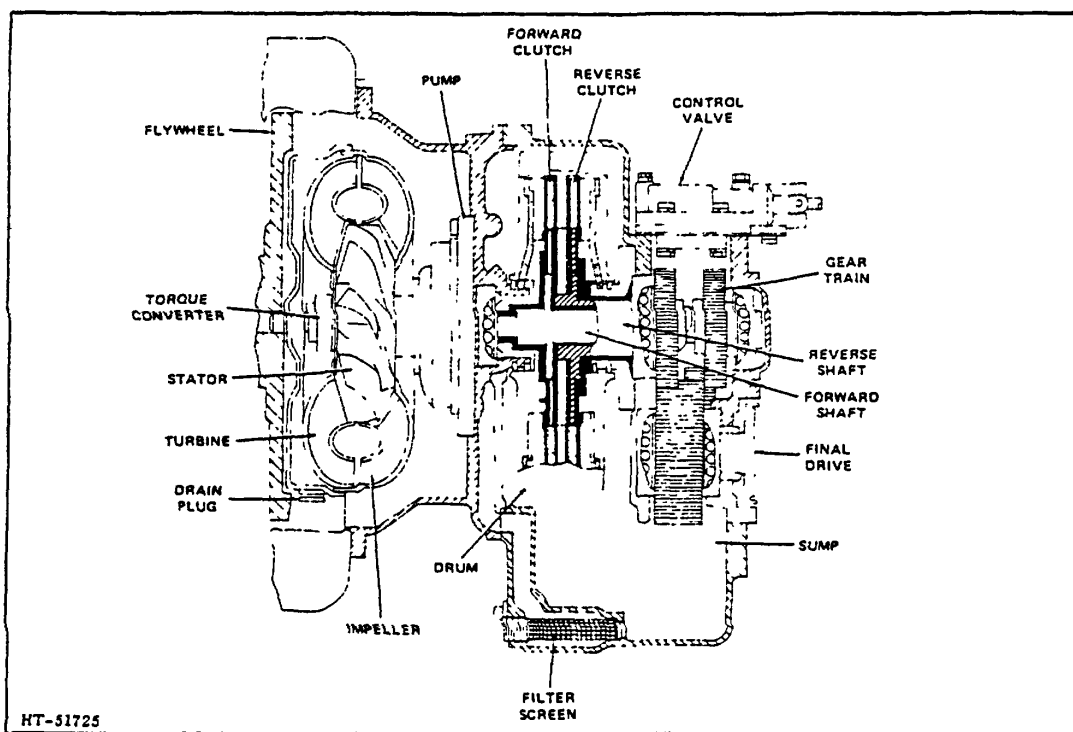


Figure 1-1. Power Shift Torque Converter Drive

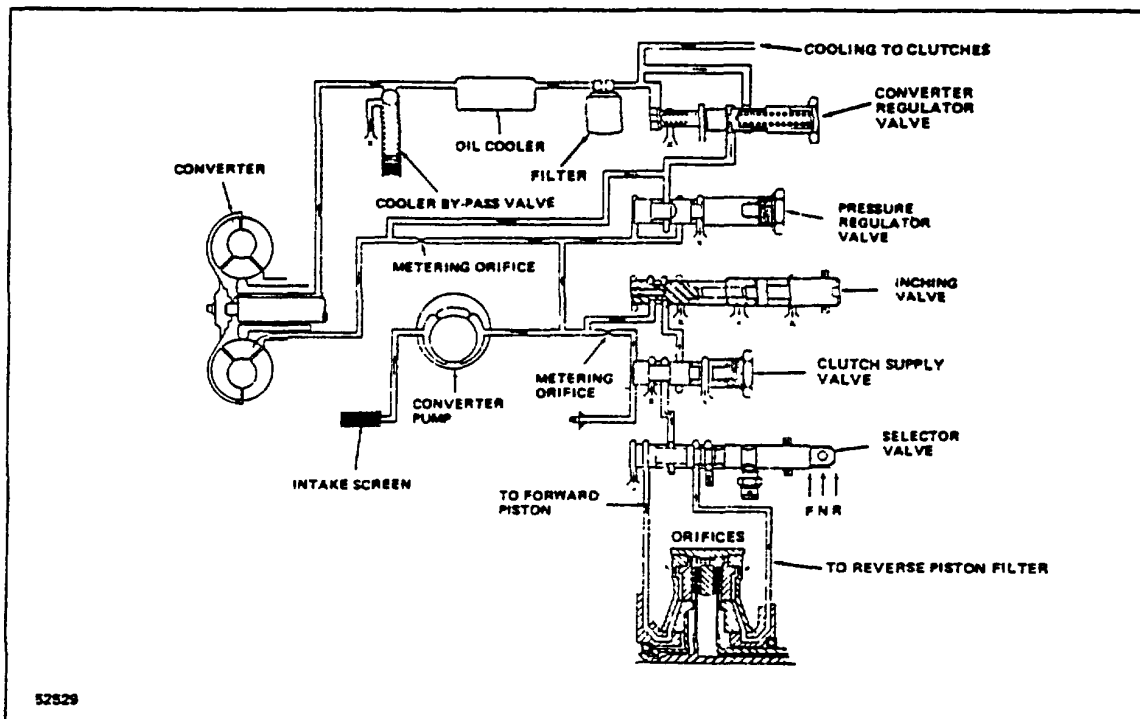


Figure 1-2. Power Shift - Hydraulic Schematic

In normal Lift Truck operation the turbine turns at a slower speed than the impeller as since both are the same dimension, the centrifugal force on the oil in the impeller is always greater than that of the oil in the turbine. It is this difference plus the pressurized oil from the pump which causes the oil to circulate in and through the converter.

From the above it can be seen that the oil in the converter has a dual motion. It travels with the impeller and the turbine around the outer circumference of the converter and it also flows around the inner circumference or central core of the converter. As a result of these motions the oil carries a certain amount of kinetic energy. The velocity of the oil in the converter increases as the oil passes through the impeller to the turbine and decreases as it passes through the turbine back to the impeller.

Since the velocity increases in the impeller, its kinetic energy increases and this gain in kinetic energy can come only from the impeller. That is to say, when increasing the velocity of oil in its vanes, the impeller

encounters a resistance, and it takes power (from the engine) to keep the Impeller running against this resistance. In the turbine the oil is slowed down and presses forward against the vanes, and when the turbine is moving under this force, power to drive the truck is produced. Thus, all the oil passing through the impeller picks up energy and gives it to the turbine. Up to this point operation is the same as a fluid coupling and there is no torque multiplication.

To transmit velocity to the oil at the inner circumference of the converter, a third member, the stator, is added to the fluid coupling, between the impeller and the turbine. It is here that the fluid coupling becomes a torque converter. With the impeller rotating and the turbine stalled, the oil is driven through the curved blades of the turbine. The curved blades redirect the oil in the opposite direction from which it was received. As the oil leaves the turbine blades, it strikes the stator blades causing a reaction which produces torque multiplication.

The stator directs the oil back to the Impeller where any remaining kinetic energy combines with the kinetic energy of the impeller oil,

producing additional torque multiplication. When the output torque becomes high enough, the turbine starts to turn and the truck will move. As the turbine speeds up and its speed approaches the impeller speed, there is no longer any reaction on the stator and it starts to turn with the turbine. At this point the unit becomes a fluid coupling since there is no longer any torque multiplication.

POWER SHIFT HYDRAULIC SYSTEM:

The transmission hydraulic system consists of the torque converter, a hydraulic pump, the control valve and the clutch pack.

Control Valve

The control valve is mounted on the transmission housing and forms the top closure of the gear case. Machined porting plates are attached to the bottom of the valve to eliminate external piping. Passages in the plates align with passages drilled or cast into the transmission housing.

Clutch Pack

The clutch pack consists of a drum, a forward and a reverse clutch, and pistons and cylinders. The clutches are engaged by oil pressure applied behind the clutch pistons, which causes engagement within the drum.

Oil Pump

The gear type oil pump provides hydraulic pressure for the converter and clutch pack. It is directly driven from the input side of the converter. Since the converter is mounted on the flywheel, the pump is in operation whenever the engine is running. This means that there is hydraulic pressure even with the engine idling.

Hydraulic oil enters the pump through the intake screen and case passages. Oil leaving the pump is directed through case and adapter passages to all open valve body passages and through an orifice to converter. The orifice acts to drop pressure of the oil entering the converter. Oil leaving the converter is fed through cooler and cooler bypass valve. The bypass valve remains closed unless the pressure exceeds the valve opening limits. Oil returning from the cooler is directed to clutch cooling and lube circuit.

Pressure Regulator Valve

Oil from the pump, after filling all open circuits, begins increasing in pressure and continues to increase until the force from

the oil on the end of the pressure regulator valve overcomes the spring force and moves the regulator valve to a position where main line oil is fed to converter circuits. Feeding mainline oil into the converter circuit lowers line pressure and permits the spring force to balance the force from the oil on the end of the regulator valve, thus regulating line pressure. Oil from the regulator valve is fed through an external tube to bypass converter feed orifice to provide greater oil flow through converter and cooler circuit.

Inching Valve

The inching valve, when the inching valve plunger is in, will regulate the clutch maximum pressure, determined by the spring or springs used in this location. Depressing the inching pedal permits the plunger to move away from the spring, decreasing spring's effect on the inching valve to lower clutch pressure. Clutch pressure can be varied from 0 to maximum pressure obtainable from the spring combination in the valve body assembly. Clutch pressure regulated by the inching valve is less than the pressure regulated by the regulator valve. Pressure recommendations for your particular model should be obtained from the equipment manufacturer.

Clutch Supply Valve

Line pressure on the end of clutch supply valve moves valve against spring force and permits oil to feed from the inching valve to manual valve. The high and low gear cam operated valve can exhaust oil from the end of the clutch supply valve faster than it can be replaced through the feed orifice. Therefore, the spring force returns the valve to the blocking position. In the blocking position, neither clutch can be fed and both clutches are exhausted at the clutch supply valve, thus causing a neutral condition to exist in the transmission.

NOTE

Latest Allis-Chalmers models have eliminated the seat dump valve in favor of a mechanical system which returns the selector valve to neutral. As a result of this the external control passage of the clutch supply valve is plugged and there is no way to bleed pressure from the pilot section of the valve. The valve will shift into operating position when the engine starts, and will stay in that position as long as the engine is running. The valve no longer provides a useful function and is retained as part of the control valve for purposes of standardization with the two speed transmission.

Selector Valve

Forward (F) position permits oil to flow to the forward clutch and exhaust reverse clutch. Neutral (N) position permits the selector valve to block oil at the valve and exhaust both clutches. Reverse (R) position permits oil to flow to reverse clutch and exhaust forward clutch.

Converter Regulator Valve

Oil fed to converter from pressure regulator valve is directed to end of converter regulator valve. Any time force from oil on the end of the valve exceeds spring force, the valve opens to feed oil to lube and clutch cooling circuit.

Clutch Orifice and Flyball

Clutch cylinders or pistons are provided with either bleed holes or bleed holes and ball dump valve. These are provided to exhaust oil from the clutch cylinder and assure clutch release. Centrifugal force could cause pressure buildup within the clutch cylinder if bleeds were not provided. The flyball bleed provides fast release and permits higher apply pressure.

B. SERVICE

At the truck lubrication period, open trap door in floor plate and check the oil level of the transmission sump by use of the dipstick. Engine must be running for this check. Add automatic transmission fluid, if necessary, to bring the oil level up to the FULL mark on the dipstick. When so noted (every 1000 hours of operation), the transmission sump should be drained and refilled with new oil.

**CAUTION
DO NOT OVERFILL TRANSMISSION.**

No specific time intervals are given, but the shift control adjustment should be checked on occasion.

The transmission operating pressures should be checked whenever the unit is not operating efficiently or after any internal parts have been replaced. Make certain the oil cooler lines are tight. Refer to CHECK OUT PROCEDURES (TOPIC 2, TRANSMISSION MAINTENANCE MANUAL). Check and adjust the shifting mechanism if necessary. Refer to TOPIC 3, TRANSMISSION MAINTENANCE MANUAL.

To check and service transmission oil cooler, refer to TOPIC 4, TRANSMISSION MAINTENANCE MANUAL.

To service the oil filter, refer to TOPIC 5, TRANSMISSION MAINTENANCE MANUAL.

At periodic inspections, make sure all mounting capscrews are tight. Make certain no oil is leaking past the output shaft and that the universal joints are tightly connected.

C. REMOVAL

When it becomes necessary to remove the transmission and/or converter for repair, the following procedure is recommended.

1. Remove the floor and toe plates, seat deck assembly, front screen and air filter.
2. Drain oil from transmission by removing drain plug at rear of sump.
3. Disconnect the cooler lines at the bottom and at the right side of the sump. Cap lines and plug holes to avoid contaminating system.
4. Remove all control linkage. Disconnect wires from neutral start switch.
5. Disconnect the universal joints at the transmission.
6. Remove the capscrews and lockwashers which mount the converter to the flywheel through the flywheel inspection hole. Use a suitable tool to rotate the flywheel

NOTE

The converter flex plate mounts the engine timing mark decal. The relationship between the flex plate and flywheel should be marked prior to converter removal.

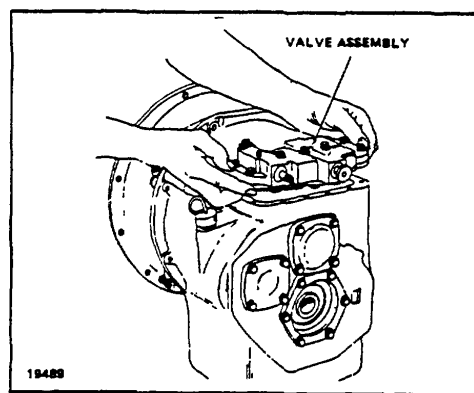


Figure 1-3. Removing Valve Block

- Attach a lifting chain and hoist to transmission. Remove transmission mount hardware and lift transmission from truck.

CAUTION

Ensure that all attachments to transmission assembly that could hinder removal, have been disconnected and secured out of the way.

D. DISASSEMBLY

After transmission is removed from truck, place on a suitable work area, and proceed as follows for complete disassembly:

- Carefully clean exterior of transmission to prevent contamination of system.
- Disconnect tube from control valve and convertor housing.
- Remove capscrews from valve block, and remove from transmission. Cover opening to avoid contamination. See Figure 1-3.
- Slide converter off turbine shaft. Then mark the pump and the housing to ensure the proper reinstallation, and remove capscrews holding the pump and collector ring to converter housing. It may be necessary to tap the pump assembly with a rawhide hammer to free it from the gasket. (See Figure 1-4.)

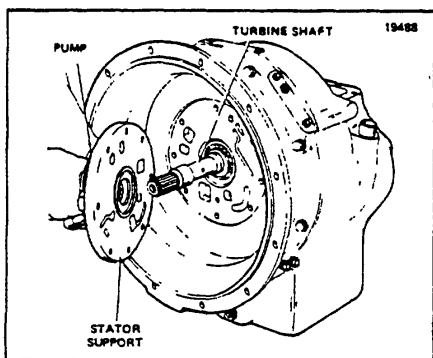


Figure 1-4. Pump Removal

- Lay the transmission on the gear case side as shown in Figure 1-5. Remove capscrews which mount the converter housing to the gear case. Then, attach

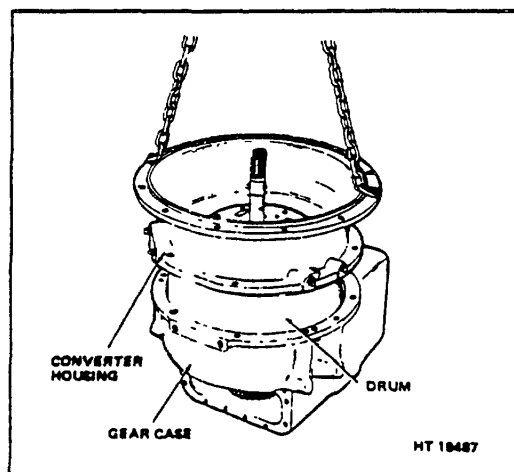


Figure 1-5. Removing Housing and Drum

a chain to the housing and remove housing and drum assembly as a unit, taking care not to damage the seal rings in collector ring on gear case.

- To remove the converter housing from the drum, remove the snap ring on the turbine shaft and slide housing from drum assembly. Bearing will remain in housing. (Figure 1-6.)
- Remove forward gear and shaft:
 - Remove capscrews and lockwashers holding cap to housing and remove cap.
 - Remove inner snap ring from the splined section of the forward

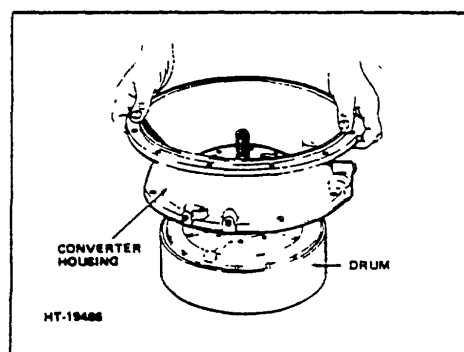


Figure 1-6. Removing Clutch Drum from Converter Housing.

shaft. Using a rawhide hammer, tap shaft at the clutch end and while holding forward gear, pull shaft from the gear box.

8. Remove reverse gear and shaft:
 - a. Remove inner snap ring from the splined section of the reverse shaft.
 - b. Mark relationship of bearing retainer and housing to ensure correct installation.
 - c. Remove capscrews that secure the bearing retainer to the housing and remove the retainer. If seal rings have to be replaced, unhook at ring opening and remove.
 - d. Remove the shaft while holding the reverse gear in the gear box.
 - e. The bearings on both the forward and reverse drive shafts can be removed by removing the snap rings and pressing the bearings from the shafts.

NOTE

Mark gears and shafts so that they can be installed in their original relationships.

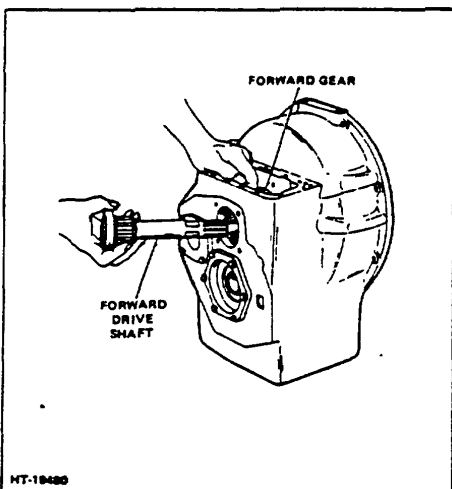


Figure 1-7. Removing Forward Gear and Shaft

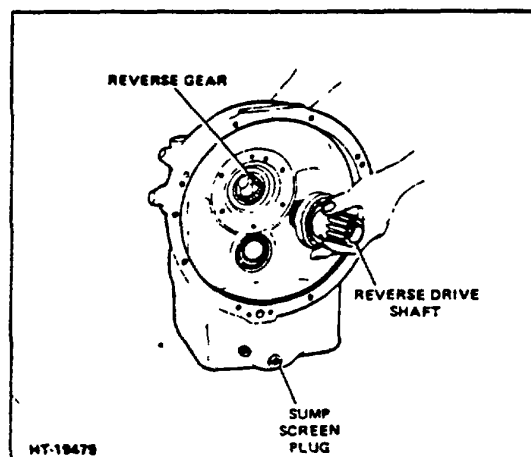


Figure 1-8. Removing Reverse Gear and Shaft

9. Remove idler gear and shaft:
 - a. Remove capscrews holding idler gear shaft and cap to housing and remove cap and shaft. Note position of retaining pin holding shaft in cap to ensure proper reinstallation.
 - b. Remove idler gear.
10. Remove output gear and shaft:

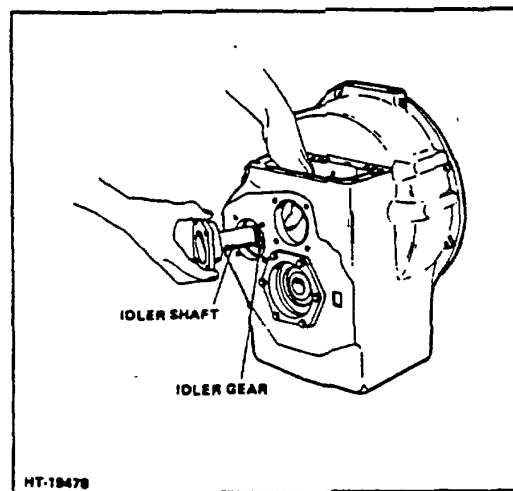


Figure 1-9. Removing Idler Gear and Shaft

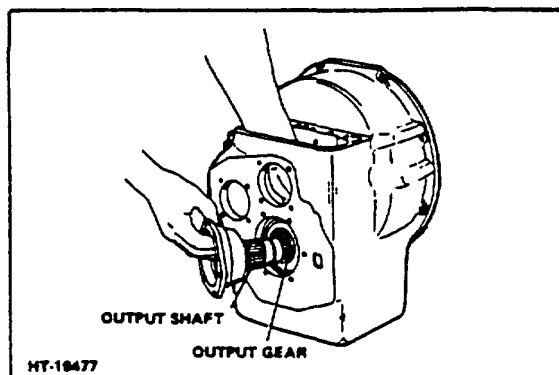


Figure 1-10. Removing Output Shaft and Gear

- a. Remove capscrews holding output shaft cap to housing.
 - b. Remove output shaft and cap, while holding output gear inside gear box. It may be necessary to tap the output shaft from inside the clutch housing to facilitate removal.
 - c. Remove output gear.
11. Remove sump screen by removing sump screen plug (Fig. 1-8). Remove screen and spring through plug hole.

E. INSPECTION

Wash all parts, except oil seals, with suitable solvent. Blow out passages in housings with compressed air. Inspect bearings, seal rings, splined shafts, and gears for wear or damage. Inspect sump screen for clogged or damaged screen. Install new replacement gaskets.

NOTE

Thoroughly clean the intake screen. In addition to soaking and washing, air streams should be directed from the inside toward the outside to remove material clogged in the screen.

F. REASSEMBLY

To reassemble the transmission, reverse the disassembly procedure and take note of the following precautionary measures:

1. Make certain spring is in place when

installing the oil filter screen in housing.

2. Make sure output shaft is installed with the internal splines facing towards the outside of the gear case.
3. Make sure that the machined reliefs in the idler shaft cap are positioned down so that the oil in the cap will drain into housing.
4. As the gears and bearings are being installed, coat all surfaces with an acceptable lubricant and make sure they rotate freely in their respective locations.
5. When installing the bearing retainer, be certain to align the match marks made during disassembly. Make sure seal rings rotate on the bearing retainer and that rings are properly hooked together at ends.
6. When installing the forward and reverse drive shafts and gears, check to make sure that the snap rings holding the gears on the shafts are properly installed and seated.
7. Care should be exercised when installing the converter housing on the turbine shaft of the drum, so that misalignment does not occur during reassembly. Make sure that the snap ring holding the converter housing to the turbine shaft is properly seated.
8. When installing the converter housing and drum (as a unit) into transmission housing, care should be exercised so: as not to damage the collector rings fitting into the drum. Damage to these rings will cause the reverse piston and drum to be inoperative.
9. Use new gasket when replacing control valve. Use new gaskets whenever old gaskets have been removed.
10. Connect tube assembly to valve and converter housing.

G. INSTALLATION

1. Attach lift chain and chain hoist to transmission assembly and maneuver transmission into position for installation.

CAUTION

Ensure that transmission mounting area is free and clear of any obstacles, such as linkage or hoses to prevent damage.

2. Position the converter in the pump at the back of the transmission, making sure that the converter hub tangs properly engage the pump.
3. Check timing decal on flex plate. Decal should be aligned with one of the outer bolt holes.
4. Be sure surface of flex plate is clean and dry and that decal is aligned with outside edge of flex plate.
5. With decal facing converter, install flex plate and reinforcing ring on converter and secure with place head bolts Torque bolts to 43 to 49 lb. ft.
6. Install converter, with flex plate attached, on transmission input shaft. Check to be sure that both splines and tangs driving charging pump are fully engaged.
7. Turn converter to position timing decal on top.
8. Turn engine over until timing pointer on flywheel housing is visible through inspection hole in top of housing.
9. Lift transmission assembly into position on engine. Align timing decal with timing pointer in flywheel housing. Check marks made on flywheel and flex plate during removal to be sure they are aligned.
10. Pilot on converter must be inserted in mating hole in flywheel. Bolt heads on flex plate will match with clearance holes in flywheel.
11. Secure transmission housing to flywheel housing with two bolts.
12. With inspection hole cover on flywheel removed, install one place head bolt and special washer at the decal and torque to 20-23 lb. ft. Install and torque the remaining five bolts by turning flywheel to proper position for each one. Install inspection hole cover.
13. Install remaining transmission housing bolts. Connect universal point to transmission.

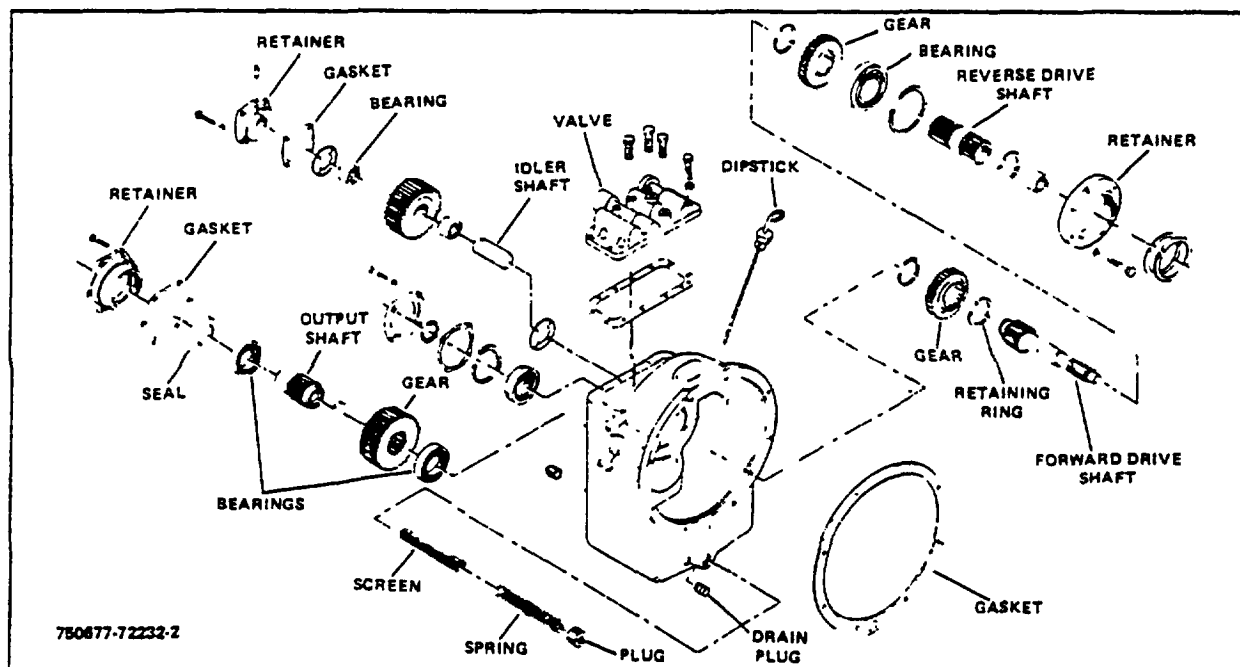


Figure 1-11. Transmission

R-171-1

14. After installation is completed and drain plug installed, cooling lines connected and linkage installed, add

NOTE

Oil should be changed every 1000 operating hours. Use transmission fluid as recommended. (Use quality 'A', suffix 'A'.)

11 quarts of proper type transmission fluid to transmission.

15. Install seat deck assembly, floor and toe plates, front screen and air cleaner.
16. If adjustments to inching pedal or linkage are required, refer to TRANSMISSION MAINTENANCE MANUAL.

MEMO

TOPIC 2. TORQUE CONVERTER AND PUMP

As noted previously, the function of the torque converter within the "Power-Shift" transmission is to provide a fluid coupling, with torque multiplication, between the engine and transmission.

The torque converter is a sealed unit and cannot be disassembled or serviced.

A. REMOVAL INSPECTION

1. After the transmission has been removed from the truck, carefully remove the torque converter from transmission.
2. Inspect converter housing for evidence of cuts or fractures and leaks.
3. Remove the converter oil plug, and drain from transmission any remaining oil.
4. Thoroughly clean and flush the converter with an acceptable, noncorrosive solvent. Ensure that all solvent is drained from converter prior to re-installation.

Pump:

1. Remove capscrews which mount the pump assembly to the housing and remove pump. (See Figure 1-4.)

NOTE

It may be necessary to lightly tap the pump with a rawhide hammer during removal in order to free it from gasket.

2. Remove all capscrews holding pump to stator support and separate.
3. Remove the seal rings and oil seal. (See Figure 2-1.)
4. Remove the stator support and bushing. Install new bushing.
5. Carefully inspect pump, and if gears, bushing or housing show wear or damage, then the entire pump assembly will have to be replaced.

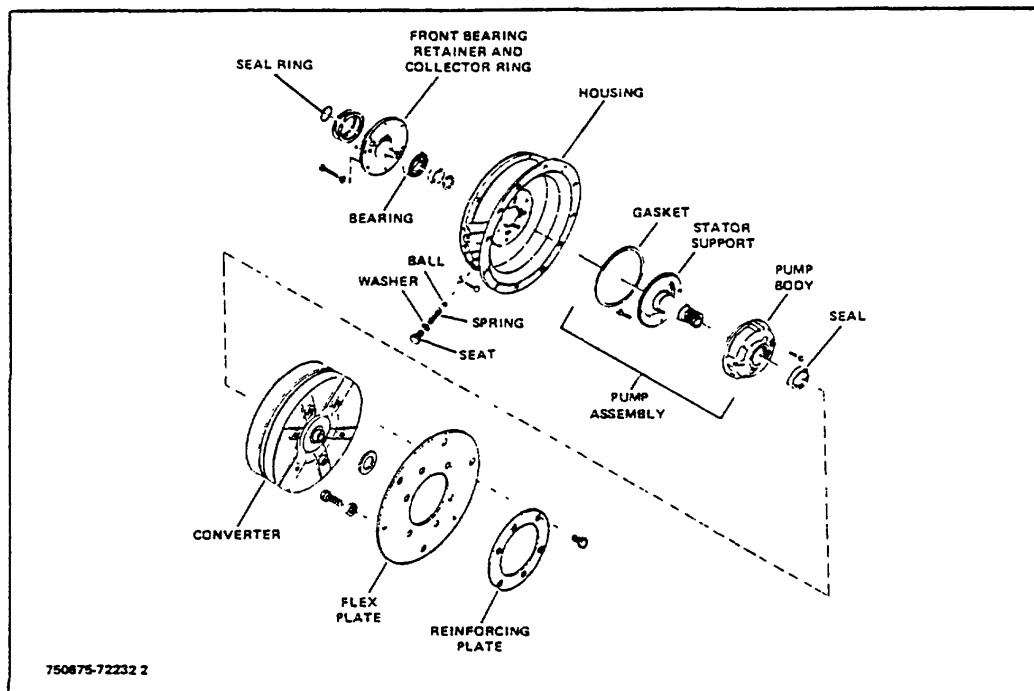


Figure 2-1. Torque Converter and Pump Assembly

B. REASSEMBLY

NOTE

The converter flex plate was marked before transmission removal to show relationship with engine flywheel. Marks must be aligned when flex plate is installed.

Pump:

1. Install new seal rings and new oil seal.
2. Lubricate all parts with light engine oil.
3. Install the pump on the stator support making sure holes are properly aligned. See Figure 2-1.
4. The pump can now be installed on the con-

verter housing. Use a new gasket and ensure that holes are properly aligned.

Converter:

CAUTION

Ensure that the transmission mounting area is free and clear of any obstacles, such as linkage and hoses to prevent damage.

1. Position the converter in the pump at the back of the transmission, making sure that the converter hub tangs properly engage pump driven gear.
2. Refer to TOPIC 1 TRANSMISSION, Paragraph G, INSTALLATION and install transmission and torque converter on engine following the instructions in that paragraph.

TOPIC 3. DRUM ASSEMBLY

The drum assembly is comprised of a drum, the forward and reverse clutches, pistons and cylinders. The clutches are engaged by oil pressure applied behind the pistons which causes engagement with the drum. The unit operates in oil at all times, both for cooling and lubrication.

It is necessary to remove the transmission in order to gain access to the drum assembly for service or repair. (Refer to TRANSMISSION REMOVAL and DISASSEMBLY

A. REMOVAL

1. Thoroughly clean outside of transmission to prevent possibility of contamination.
2. With transmission out of truck, remove the capscrews from valve assembly and remove valve assembly. Remove valve to prevent damage to valve during disassembly procedures.
3. Slide converter off the turbine shaft. Then mark the pump and the housing to ensure the proper reinstallation, and remove capscrews holding the pump and

stator support to converter housing. It may be necessary to tap the pump assembly with a rawhide hammer to free it from the gasket. (See Figure 1-4.)

4. Lay the transmission on the gear case side as shown in Figure 1-5. Remove the capscrews which mount the converter housing to the gear case. Then attach a chain to the housing and remove the housing and drum assembly as a unit, taking care not to damage the seal rings in collector ring on gear case (Figure 1-5).

To remove the converter housing from the drum, remove the snap ring on the turbine shaft and slide the housing from the drum assembly. The bearing will remain in housing. (See Figure 1-6.)

B. DISASSEMBLY

The front and rear clutch assemblies are balanced. Two lines are etched on rear clutch cylinder to indicate correct alignment of the cylinder with the piston. One etched line is

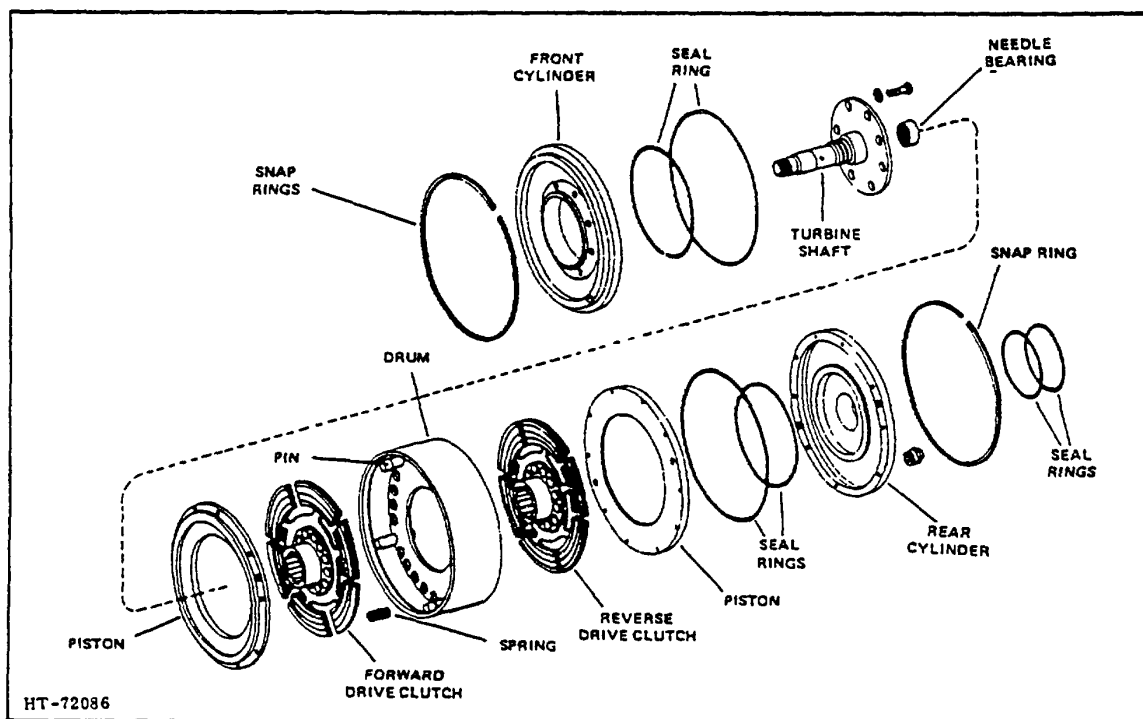


Figure 3-1. Drum Assembly

used to indicate correct alignment of forward clutch cylinder with the piston. These etched marks are not always visible. If etched marks can not be located and identified, either punch or scribe marks on the cylinders and pistons to ensure proper alignment during assembly.

1. Place the drum assembly in an arbor press. Then apply pressure on the turbine shaft until the cylinder is depressed enough to remove the large snap ring from the drum (Figure 3-1).
2. Slowly release the pressure on arbor press and remove the cylinder, making sure it is kept in alignment to prevent binding in the drum. If cylinder binds in drum, tap lightly with a rawhide hammer until it is released.
3. Remove piston, drive clutch, and springs. Ensure that piston ring is not damaged or binding.
4. Turn drum over and remove snap ring, cylinder, piston and drive clutch.
5. Examine all parts for wear or damage. Should excessive wear or score marks be evident on drive clutches, pistons or drum, they should be replaced. Check piston rings, making sure they are free in piston groove.

C. REASSEMBLY

1. Check etched or scribed marks on pistons and cylinders. Align marks before assembling clutches.
2. Install the reverse drive clutch, piston, seal rings, and rear cylinder. Make sure that the rear cylinder and the piston do not bind in the drum or on dowel pins. Install large snap

ring holding cylinder and assembled parts in place. (See Figure 3-1.)

3. Turn the drum assembly over and install the springs, drive clutch, piston, seal rings and the front cylinder.
4. Place the entire assembly in an arbor press. Apply pressure on the turbine shaft, making sure cylinder does not bind in the drum or on the dowel pins. Install the large snap ring holding the front cylinder in place and when properly seated, release pressure in the arbor press.

D. INSTALLATION

1. Slide the converter housing on the turbine shaft and replace the retaining snap ring.
2. Attach a hoisting chain to the converter housing and then maneuver housing so that turbine shaft will be properly engaged as the drum and housing are reattached to transmission gear case. (See Figure 1-5).

CAUTION:

Take care not to damage the seal rings in the stator support on gear case during reassembly.

Install securing capscrews and tighten.

3. Install new gasket, then align previously made marks and replace the stator support and pump on the turbine shaft. Secure with mounting capscrews.
4. Refer to TRANSMISSION INSTALLATION for CONVERTER and TRANSMISSION INSTALLATION procedure.

TOPIC 4. CONTROL VALVE

The direction of travel of the truck is obtained by operating a control valve which is mounted on the transmission housing. The valve controls the pump pressure, direction of travel and inching.

When control valve repair or replacement is necessary, the following procedure should be used:

A. REMOVAL

NOTE

It is not necessary to remove the transmission from the truck in order to service or replace the control valve.

1. Remove floor plate.
2. Disconnect the control linkage at the control valve. Remove return to neutral mechanism.
3. Clean valve and surrounding area to keep contaminants out of transmission.

4. Disconnect wires from neutral start switch.
5. Disconnect tube assembly from valve. Plug or cap tube to prevent contamination.
6. Loosen the control valve mounting capscrews and remove control valve assembly. Remove and discard gasket, then place a clean covering over exposed area of transmission to prevent contamination.
4. Place control valve assembly in a clean work area for disassembly.

B. DISASSEMBLY

1. After control valve has been removed from transmission housing, make sure all dirt and foreign material is removed from the valve body.

NOTE

Take care not to damage valve body during disassembly. Use tools properly.

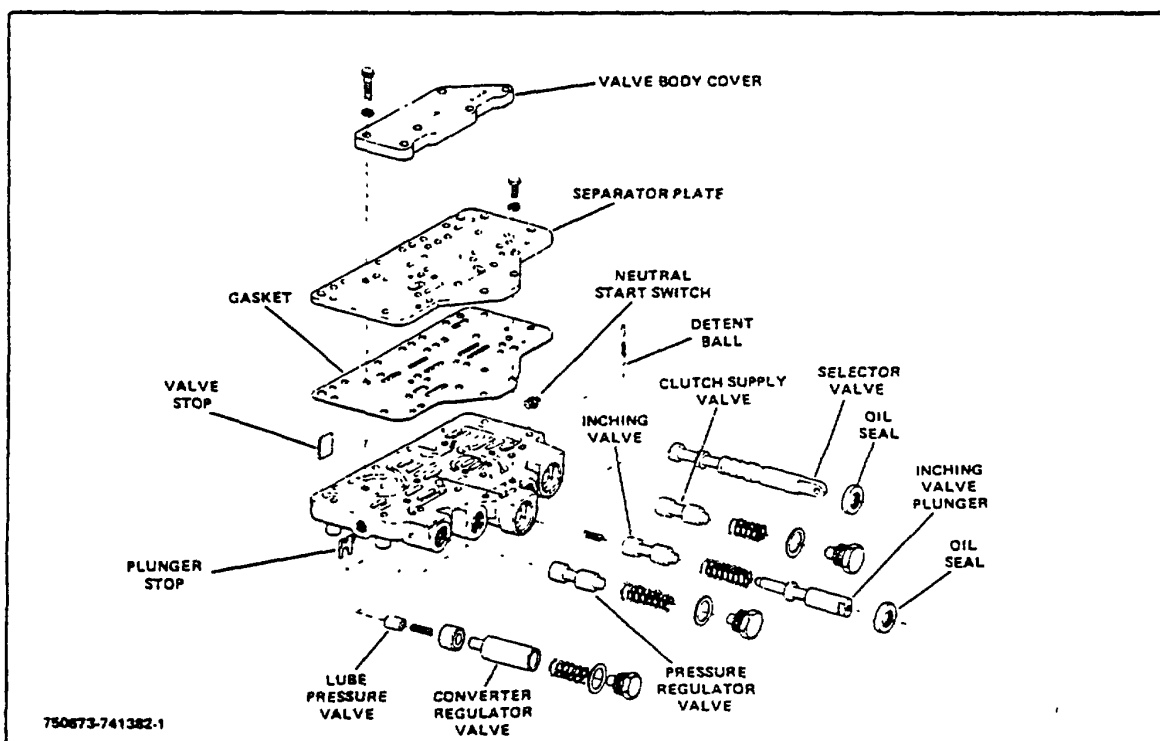


Figure 4-1. Control Valve

2. Remove neutral start switch.
3. Remove screws and remove valve body cover. (See Figure 4-1).
4. Remove capscrews at the front of separator plate and remove plate and gasket.
5. Remove the spring, detent ball and retainer from the valve body at the selector valve spool.
6. Remove the selector valve spool.
7. Remove the inching control plunger by first removing the lock-clip and seal, then the springs and the spool from the inching control valve. Note small spring in spool.
8. Remove the cap at the pressure regulator valve and remove the spring and spools from valve body.
9. Remove the cap at the clutch valve, and remove the spring and spool from valve body.
10. Remove the cap from the converter regulator valve and remove spring, valve and plug.
11. Remove valve stop plate through the bottom of the valve. Remove spring and lube pressure valve through converter regulator valve bore.
12. Clean all parts with an acceptable solvent and dry with compressed air. Blow out all passages in valve body.
13. Check plungers and spools for score marks; if possible, clean up with crocus cloth. If badly scored, replace.
14. Check springs for damage. Replace, if necessary.
15. Replace all oil seals, seal rings and gaskets.

C. REASSEMBLY

1. Install dump clutch supply spool and spring, gasket and end cap.

2. Replace pressure regulator valve spool, spring, gasket and end cap.
3. Install small spring in inching control spool, then replace spool and large spring. Replace the inching control plunger by pushing in against plunger, then releasing after anchoring plunger with plunger stop.
4. Install the selector valve spool.
5. Replace the selector valve detent ball, spring and retainer.
6. Install lube pressure valve and spring in converter regulator valve bore. Install valve stop plate through bottom of valve.
7. Install plug, pressure regulator valve, spring and end cap.

NOTE

Ensure that all plungers and spools operate freely and that the inching control plunger retainer is installed with the angled edges facing towards the rear of the valve body.

8. Install new gasket and replace the separator plate and capscrews.
9. Install the cover and secure with capscrews.
10. Install neutral start switch in valve.
11. Remove protective covering over exposed area of transmission, then install new gasket.
12. Replace valve control assembly on transmission housing, install capscrews and torque to 5 - 10 ft. lbs.

CAUTION

Do not torque capscrews more than 10 ft. lbs.

13. Connect tube assembly to valve. Connect wires to neutral start switch.
14. Install floor plate.

TOPIC 1. UNIVERSAL JOINT

A. GENERAL

The purpose of the universal joint assembly is to transfer the transmission output power to the drive wheels of the truck. The universal joint assembly is the heavy duty industrial type which consists of a drive shaft or center plate, two cross assemblies, a transmission output flange, and the necessary hardware.

Very little service is required for the universal joint assembly, other than periodic lubrication of the cross assembly bearings. Also, it is recommended that the torque of capscrews be checked every 100 hours of operation. The mounting capscrews that secure the cross assemblies to the drive shaft or center plate, and the joint attaching capscrews must be tightened to specified torque of 25-30 lb-ft CRY THREADS, or 20-24 lb-ft LUBRICATED THREADS.

B. REMOVAL

1. Raise and securely block the lift truck

to gain access to the universal Joint assembly.

2. At the transmission end of the assembly, remove the capscrews that attach the cross assembly to the output flange.
3. At the differential end of the assembly, remove the capscrews that attach the cross assembly to the differential carrier flange.
4. Remove the entire universal Joint assembly from the lift truck.
5. Remove the output flange from the transmission.

C. DISASSEMBLY - INSPECTION

1. Remove the mounting capscrews and remove the cross assemblies from the drive shaft or the center plate (depending upon the length of the universal joint assembly).

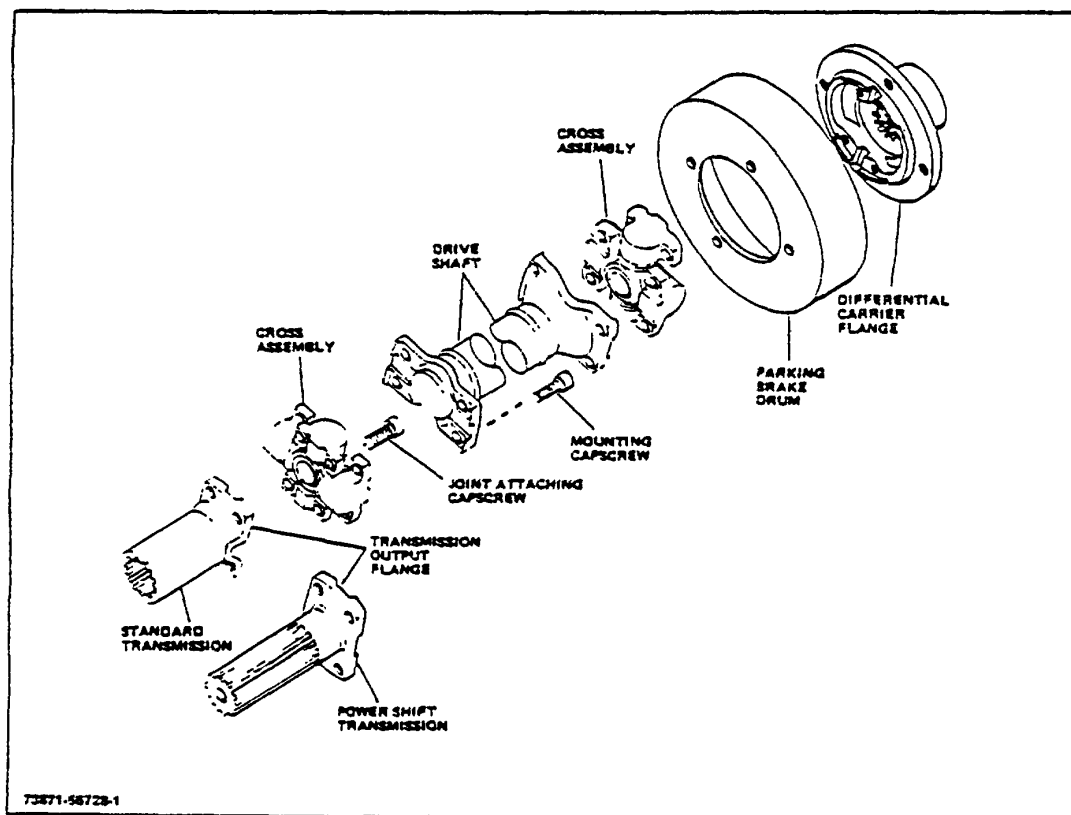


Figure 1-1. Universal Joint Assembly (Typical)

2. To disassemble the cross assembly, break the connecting strap which holds the bearings on the cross assembly. These straps need not be replaced.
3. Inspect the bearings and bearing surfaces for evidence of extreme wear or damage. Replace the cross assembly if any parts are worn or damaged.
4. Pack the bearings thoroughly with a high melting point wheel bearing or universal joint grease. Make certain the grease fully covers all bearing surfaces.
5. Inspect the output flange splines for wear or damage; replace if necessary.

D. REASSEMBLY

Reassemble the cross assemblies to the drive shaft (Fig 1-1) or the center plate (Fig 1-2). Install the mounting capscrews and tighten them to a torque of 25-30 lb-ft CRY THREADS, or 20-24 lb-ft LUBRICATED THREADS.

E. INSTALLATION

1. Position output flange on transmission shaft or in the transmission internally splined output drive.
2. Position the differential end of the universal joint so the holes in the cross assembly align with the holes in

the differential carrier flange. Insert capscrews and tighten them to specified torque of 25-30 lb-ft DRY THREADS, or 20-24 lb-ft LUBRICATED THREADS.

3. Position transmission end of universal joint so holes in cross assembly align with holes in output flange. Insert capscrews and tighten them to specified torque of 25-30 lb-ft DRY THREADS, or

20-24 lb-ft LUBRICATED THREADS.

NOTE

Make certain ALL CAPSCREWS are tightened to SPECIFIED TORQUE.

4. Remove blocks supporting the lift truck and lower the truck to the floor.

MEMO

DRIVE AXLE

TOPIC 1. DRIVE AXLE

A. DESCRIPTION

The drive unit is a double reduction, internal gear drive within wheel, and a spiral bevel in axle housing. The drive wheels are mounted on an axle housing spindle by two opposed tapered roller bearings, locked in correct adjustment by a washer, a castellated nut and cotter pin. The weight of the truck is carried by the axle housing, and through the wheels (See

Figure 1) ; therefore, the axle shafts serve only to drive the wheels.

The differential is of the bevel gear and pinion type with the final drive reduction through the axle shafts (Jackshaft) and bull gears (Figure 2), setting each drive wheel into motion. In order to hold the differential assembly rigidly in place in the housing, it is mounted on two studs and then held firmly in position by self-locking capscrews.

The axle shafts (jackshaft) are splined to the differential side gears at one end and mesh with the bull gear in the drive wheel at the opposite end. The axle shaft teeth are crown-shaved to ensure proper meshing with the bull gear. The axle shafts rotate at the drive wheel end in two opposed tapered roller bearings, which are locked in place on the shafts by a sleeve type nut and spider lock ring. The assembly is locked in position in the axle housing by a bearing cap and capscrews.

The bull gear is correctly located in the drive wheel by roll pins and is bolted into the wheel from the outside so that tightness can be checked periodically without the necessity of removing the wheel.

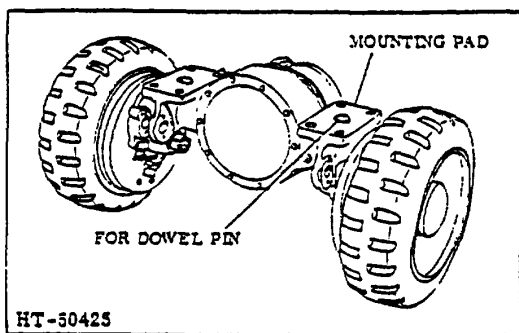


Figure 1. Drive Axle Assembly (Typical)

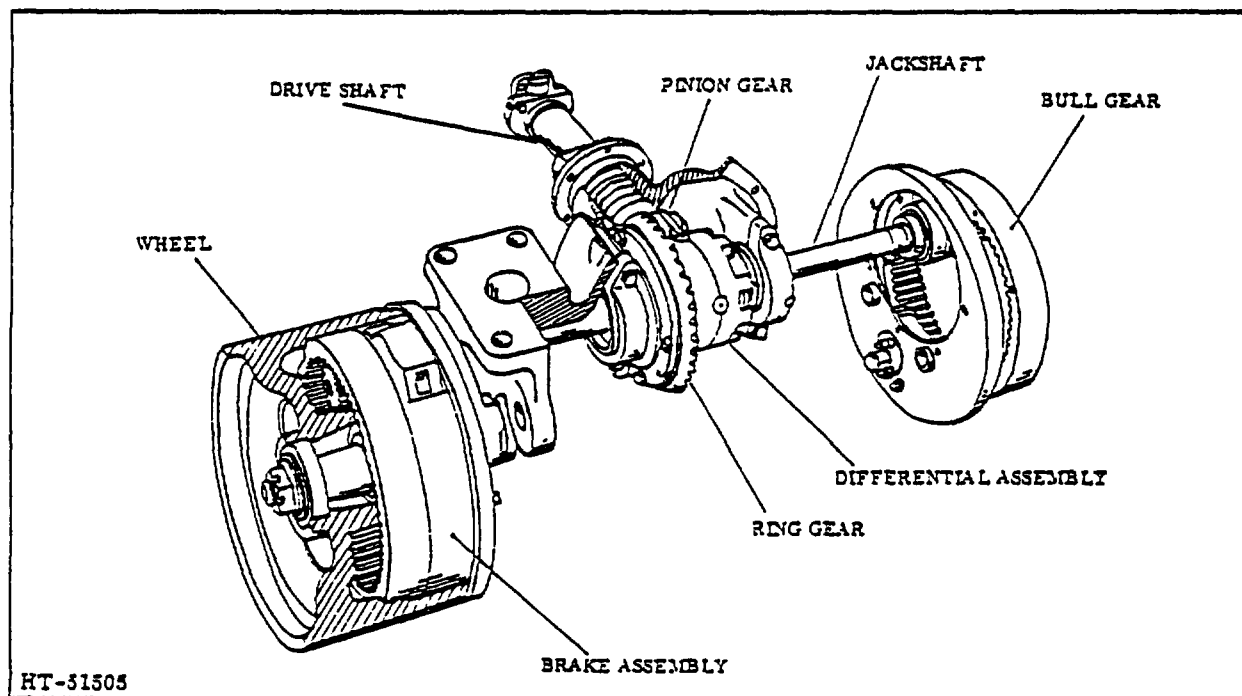


Figure 2. Drive Unit Components (Typical)

B. DRIVE UNIT SERVICE

Jackshafts and bearings, bull gears and wheel bearings should be inspected and serviced at periodic intervals. All parts should be checked for any possible damage or excessive wear. The Level of the oil in the differential housing should be checked. and also changed when specified.

The housing breathers should be kept clean and open to prevent any pressure from building up in the unit.

NOTE
Refer to the **LUBRICATION AND SERVICE GUIDE** for specific instructions regarding lubrication of the drive unit.

The drive unit can be removed as an assembly. if desired. It will be necessary to remove the mast assembly in order to remove the drive unit. The following procedure is recommended for drive unit removal:

1. Removal

- a. After the mast has been removed (see MAST REMOVAL), disconnect the main hydraulic brake line at the junction block located on the differential housing. Disconnect the hydraulic Lines, the leakage return line, or any other lines which are attached to the drive unit housing.
- b. Disconnect the emergency brake cable by removing the clevis pin from the parking brake actuating lever.
- c. Disconnect the universal joint (see U-JOINTS). leaving slip joint in the transmission.
- d. See Figure 3 and attach hoist chain hooks in the tit cylinder holes in the front plate. Pull chain snug to take the weight of the truck off drive axle.
- e. Remove all mounting bolts and capscrews from mounting pads.
- f. Raise the truck away from the drive unit and remove drive unit from under the truck frame. It may be necessary to apply pressure at the mounting pads in order to free the drive unit from the truck, because of the tight fit of the dowel pins in the mounting pads.

NOTE
For service instructions on the drive unit assembly. refer to **DRIVE UNIT DISASSEMBLY**.

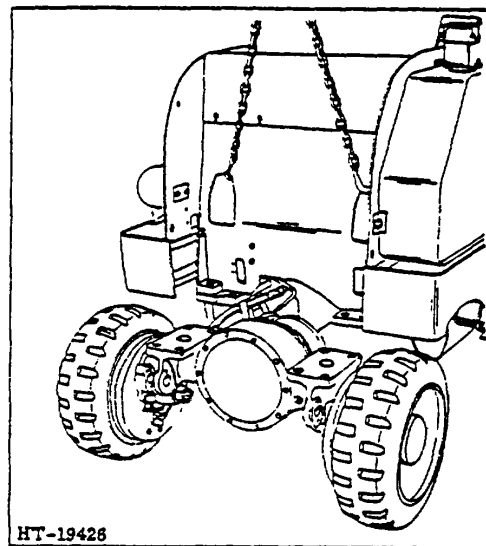


Figure 3. Drive Unit Removal

2. Installation

- a. To replace the drive unit assembly, carefully raise the truck body high enough with hoisting chain to position drive unit under front end at dowel pin location.
- b. Lower truck frame until it is securely supported at the mounting pads and insert all mounting bolts and capscrews previously removed.
- c. Connect universal joint and ensure that drive shaft coupling is properly aligned. (Refer to TRANSMISSION for proper alignment procedure.)
- d. Connect the emergency brake cable by replacing the clevis pin at actuating level.
- e. Securely tighten all mounting hardware and hose connections and bleed the hydraulic brake system. (Refer to HYDRAULIC BRAKE Section for proper procedure.)
- f. Replace the mast assembly. (Refer to MAST ASSEMBLY Section.)

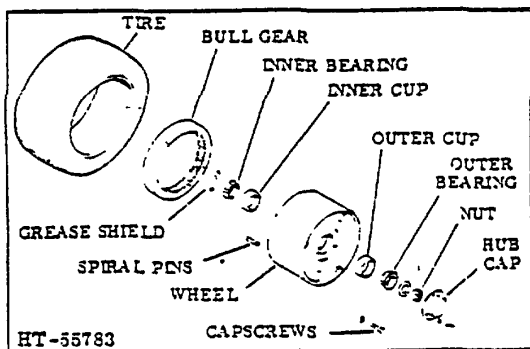


Figure 4. Drive Wheel Assembly

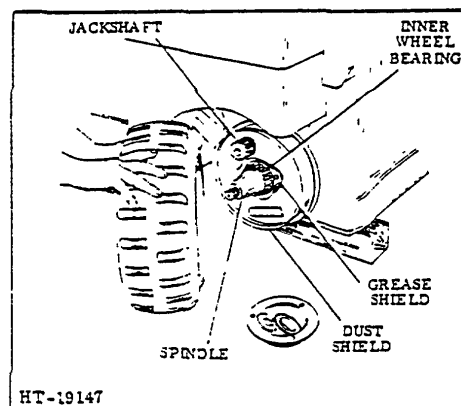


Figure 6. Removing Drive Wheel

C. DRIVE UNIT DISASSEMBLY/REASSEMBLY

The following operations may be performed without removing the drive unit from the truck.

1. Drive Wheel Removal

The wheel assembly consists of the wheel, tire, brake drum, wheel bearings and the bull gear. (Figure 4.)

To remove the wheel:

- a. Raise the truck sufficiently so that the drive wheel clears the floor. This may be done by tilting the mast to its full backward position and inserting a block under the mast assembly, then tilting mast to its vertical position. (See Figure 5.)
- b. Remove capscrews, lockwashers and hub cap. Remove cotter pin, washer

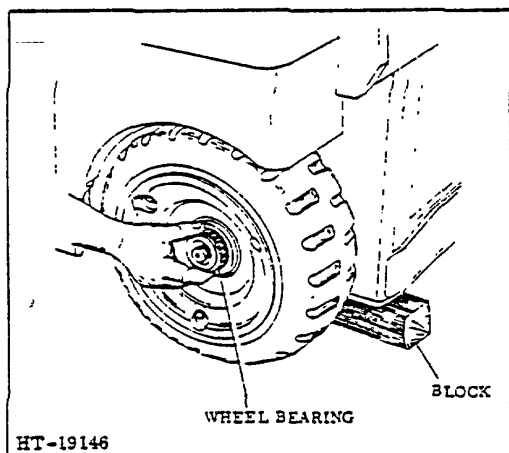


Figure 5. Removing Wheel Bearing

and retaining nut. The outer wheel bearing can now be removed.

- c. After the outer wheel bearing has been removed, the wheel can be removed. (See Figure 6.)

CAUTION

When removing wheel, exercise care so that no damage to the drum or brake shoes occurs.

- d. After the drive wheel has been removed, the inner wheel bearing and the grease shield can be removed.

2. Inspection - Service

Using a solvent, wash all grease from the bearings and bearing surfaces. Inspect for worn or damaged parts and replace where necessary.

a. Replacing Bearing Cups

- (1) Recesses are provided on the inner hub of the drum; insert a brass drift at these points, tap lightly with a hammer and remove cup.
- (2) When replacing bearing cups, set in hub with taper to the outside of the wheel. Using a brass drift, tap evenly around the edge of the cup, exercising care so that the cup will not bind (bearing press can also be used for installation).

NOTE

Bearing cup should be a press fit.

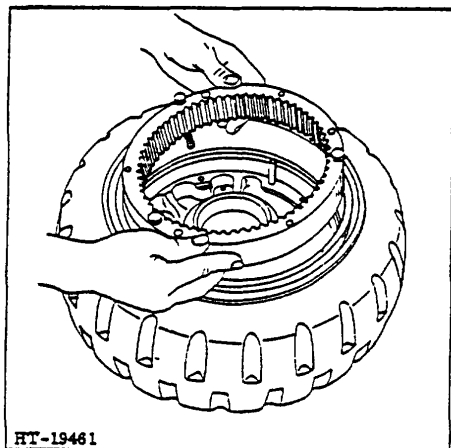


Figure 7. Bull Gear Removed

b. Replacing Bull Gears

- (1) Remove the three capscrews which bolt the bull gear to the inner side of the wheel.
- (2) Turn the wheel over and using standard, hardened capscrews with three inches of thread. Insert in the holes provided in the bull gear. (Figure 7.)
- (3) Tighten the capscrews evenly until the bull gear is removed from the wheel bore.
- (4) Inspect the bull gear for any broken or worn teeth or cracks in the ring. Replace if damaged.
- (5) To prevent any damage to the bull gear when installing the spiral pins, the edge of the outer coil should lie on the bolt circle diameter as shown in Figure 8.

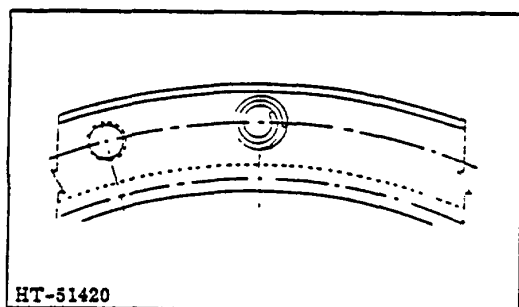


Figure 8. Spiral Pin Installation

- (6) To reinstall the bull gear, align the spiral pin holes and the pins, and tap until the gear is started into the wheel. Install capscrews originally removed and continue gear installation by tightening capscrews and tapping the bull gear at the same time.
- (7) To ensure that the bull gear is seated correctly in the wheel bore, try to insert a .003" feeler gauge between the gear and the shoulder. When the gear is properly seated, the feeler gauge will not enter at any point.

c. Replacing Solid or Cushion Tire

The wheels used on all cushion tire lift trucks are machined from a casting. Any misalignment of the wheel and tire, while pressing the wheel into the tire, can cause possible damage to the wheel. Because of this, a chamfer has been provided on the outside edge of the wheel and on the inner end of the metal insert located on the inside diameter of the tire. The chamfers help center the wheel and tire for pressing and reduce the possibility of any misalignment. The chamfered edge of the wheel must always be the leading edge of the wheel when the wheel is being pressed into the tire.

When replacing worn or damaged tires the wheel chamfer is not noticeable. To assure that the chamfered edge enters the new tire first always position the new tire on top of the wheel and tire assembly with the outside of the wheel and tire assembly up.

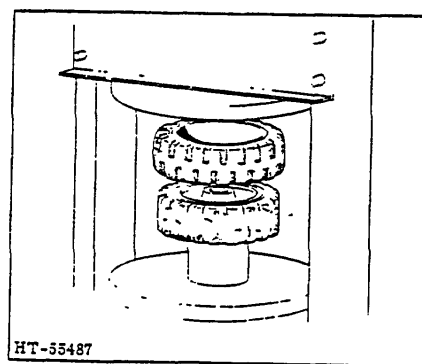


Figure 9. Tire Replacement

The following procedure is recommended to replace cushion tires.

- (1) Remove wheel and tire assembly from lift truck.
- (2) Check Inside diameter of new tire. Remove any signs of scale or rust with sandpaper. Lubricate inside of new tire with bearing grease.
- (3) Place a circular ram on the press table. The length of the ram must be greater than the width of the tire to allow complete removal of the old tire. The outside diameter of the ram must be large enough to rest squarely on the bull gear's flat surface .
- (4) If the outside edge of the wheel is not flush with the edge of the metal insert in the old tire, measure how far wheel is recessed inside the tire. New tires must be replaced to the same position as the worn tire was installed on the wheel. A spacer, slightly smaller in diameter than the inside diameter of the tire and the same thickness as the depth of the recess, can be used to obtain the proper amount of recess.
- (5) Center worn tire and wheel assembly over ram. be sure ram and wheel "mate-up" squarely.
- (6) Position new tire on top of wheel and tire assembly. Align new tire and wheel and tire assembly to be concentric with each other. Make certain the outside of the wheel is positioned upwards, because the outside edge of the wheel has a slight chamfer to help guide the wheel into the new tire.

NOTE

The tire can only be installed in one direction without risking damage to the wheel.

- (7) Start pressing new tire onto wheel and worn tire off the wheel. Run press slowly for the first Inches of travel because this is the critical stage of pressing wheel into tire. If tire begins to cock, stop press and realign wheel and tires, a sharp jar with a mallet will normally realign wheel and tire. If the wheel is to be recessed in the tire, stop hydraulic press after the wheel has been started into the new tire and position the spacer on the inside diameter of the new tire. The spacer must rest squarely on the outer edge of the wheel. Continue pressing new tire onto wheel until tire is correctly positioned on wheel.

- (8) Release press and remove tires. Inspect new tire and wheel assembly.

- (9) Install wheel and tire assembly on lift truck.

3. Jackshaft Service

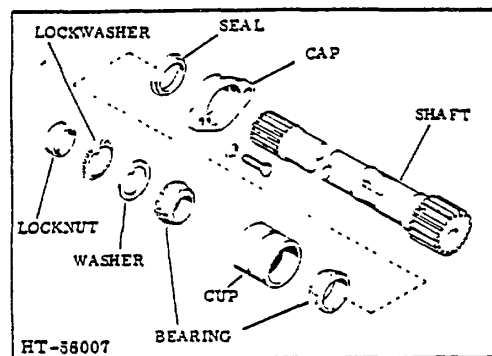


Figure 10. Jackshaft Assembly

The jackshaft is the connection between the differential assembly (first reduction) and the bull gear in the drive wheel (second reduction). The jackshaft is supported by two opposed, tapered roller bearings; its splined end fits into the differential and the opposite pinion end drives the wheel through the bull gear. To remove the Jackshaft, proceed as follows:

- a. Remove wheel. (See WHEEL REMOVAL.)
- b. Remove capscrews which secure the jackshaft dust shield.

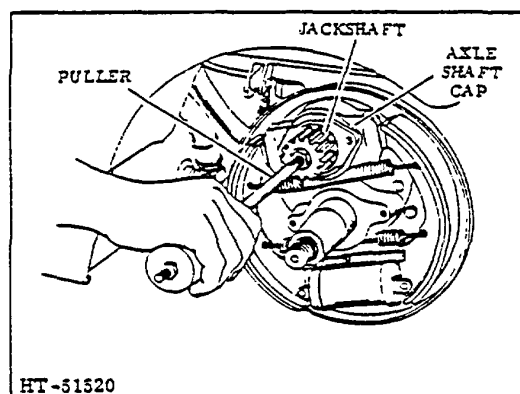


Figure 11. Pulling Jackshaft

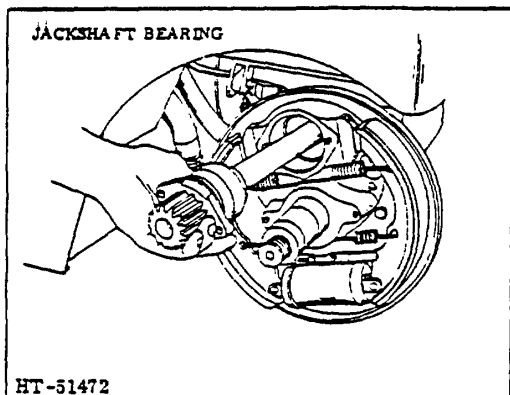


Figure 12. Jackshaft Removed

- c. Install a weight puller in the threaded end of the jackshaft and exercising care, remove the shaft.

NOTE

The bearing assembly will be removed with the jackshaft. Figure 12.

- d. Straighten the locking prongs of the lockwasher (Figure 10) and remove locknut lockwasher.
- e. Place the shaft in a suitable press and force the bearings from the shaft.

CAUTION

Exercise care to prevent damaging the axle shaft cap.

- f. After bearings and bearing cup are removed, slide the retainer cap from the shaft.

NOTE

Whenever the jackshaft is removed, it is recommended that the oil seals be replaced.

- g. Clean and inspect all parts and replace where necessary.
- h. To reassemble the jackshaft components, slide the retainer ring and new seal on shaft. Next, replace the bearings and bearing cup, washer, lockwasher and locknut.

- i. Ensure that bearings have been properly packed with grease, then tighten locknut so there is a slight drag on the bearings. Lock the nut in position by bending prongs of lockwasher over.
- j. To reinstall the jackshaft, place in position in the drive housing. Then, using a soft mallet, drive the shaft in place, and at the same time align the holes in the retaining cap with the holes in housing. Install and tighten capscrews.
- k. Replace wheel.

4. Spindle Service

To remove the drive wheel spindle, proceed as follows:

- a. Remove wheel. (See WHEEL REMOVAL).
- b. Remove dust cover.
- c. Remove the cotter pin. Locknut and washer from the spindle at the back side of the drive housing.
- d. Install a spindle puller as shown in Figure 13 and remove the spindle.
- e. Carefully inspect the spindle for any evidence of uneven wear or damage. Replace if worn, chipped or bent.

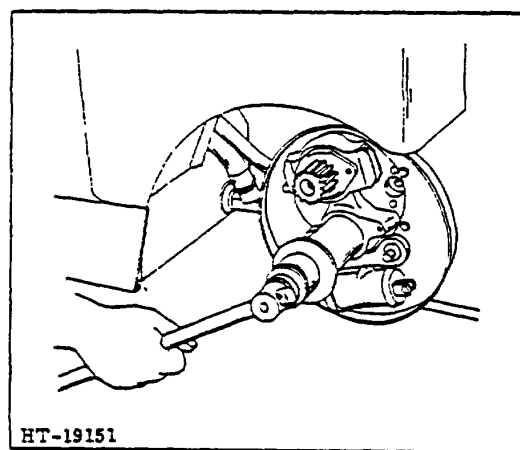


Figure 13. Removing Spindle

- f. To replace spindle, align the spindle in the drive housing and replace the washer and locknut. Tighten the nut until the spindle fully seats, then Install the cotter pin.
- g. install the dust shield and the wheel assembly.
- h. Tighten wheel bearing nuts as follows: Using a torque wrench, tighten nuts in accordance with chart below; just before reaching maximum torque, turn each wheel six times La both

directions, then back nut off 30° minimum to 60° maximum so cotter pin can be installed.

TORQUE VALUES:

ALL MODELS 120 lb/ft

DIFFERENTIAL

TOPIC 2. DIFFERENTIAL

A. DESCRIPTION

The differential case and carrier consists of two parts, the carrier assembly and the differential assembly. (See Figure 14). The carrier assembly is mounted at the center of the drive unit housing, and encloses the pinion gear from the drive shaft. The bevel ring gear is bolted to the differential case and the case in turn houses the spider gears.

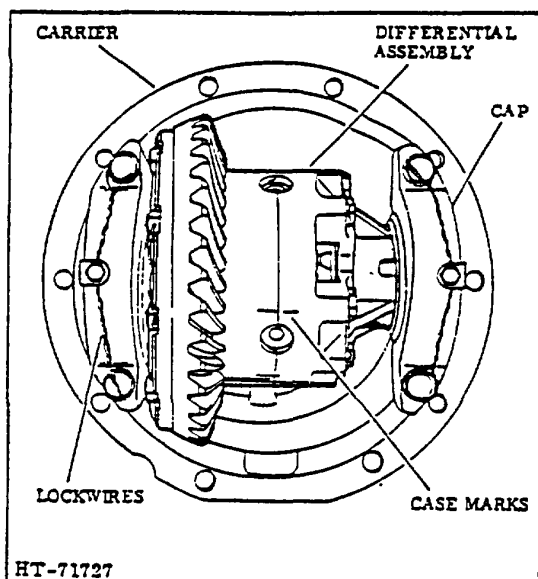


Figure 14). Differential and Carrier Assembly

It is the purpose of the differential and carrier assembly to accept and translate the driving torque from the drive shaft coupling to the drive wheels of the lift truck, thus moving the truck in a forward or reverse direction. The following procedure is recommended to remove the differential assembly from the corner.

B. REMOVAL

1. Remove the drive wheels; refer to DRIVE WHEEL REMOVAL.
2. Remove the Jackshafts; refer to JACKSHAFT REMOVAL.
3. Remove U-Joint and drive shaft coupling; refer to U-JOINTS, REMOVAL.

4. Remove drain plug at bottom of differential housing assembly and drain oil.
5. Remove the parking brake cable at the brake actuating lever and disconnect the hydraulic lines or leakage return line if they might hinder differential and carrier assembly removal.
6. Remove the securing capscrews which mount the carrier and differential assembly to the axle housing.

WARNING

Be sure to properly support the carrier assembly as the capscrews are removed.

7. Carefully withdraw the carrier and differential assembly from the axle housing and place on a suitable workbench.

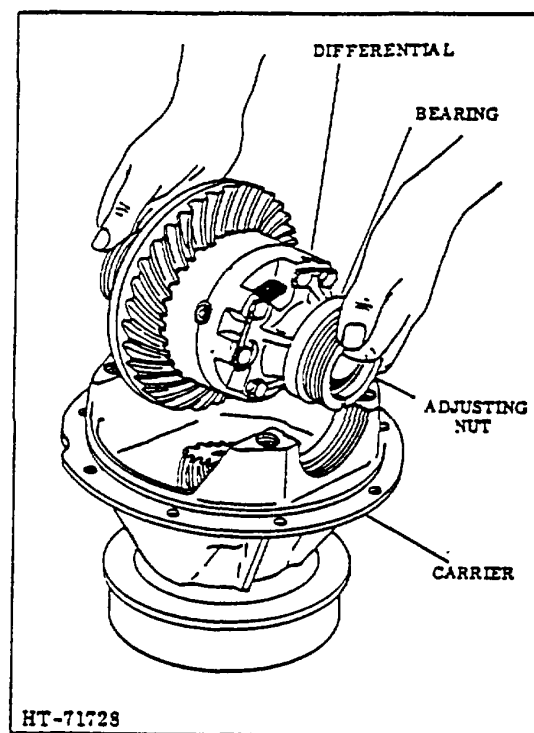


Figure 15). Removing Differential from Carrier

NOTE

It may be necessary to lightly tap the carrier housing in order to free it from seal.

8. Remove and discard gasket between carrier housing and axle housing.
9. Mark the bearing caps and differential housing (Figure 14) to aid in proper alignment during reassembly; then remove the lock-plazas, securing capscrews, cotter pins and the retaining bearing caps.
10. Refer to Figure S and remove the differential case assembly along with the adjusting nuts, bearings and bearing cups.

C. DISASSEMBLY- PINION DIFFERENTIAL. See Figure 16.

Pinion Removal

1. Remove cotter pin and pinion flange out.
2. Remove pinion flange and parking brake drum.
3. Place carrier in press and remove pinion from carrier. Spacer and shims will be removed along with pinion.

NOTE

Do not lose or damage shims as these may be used upon reinstallation, providing carrier housing is not replaced.

4. If pinion shaft front bearing must be replaced, remove with suitable puller.
5. To remove rear pinion shaft bearing from carrier, use brass drift and tap out with hammer. Oil seal will also be removed at

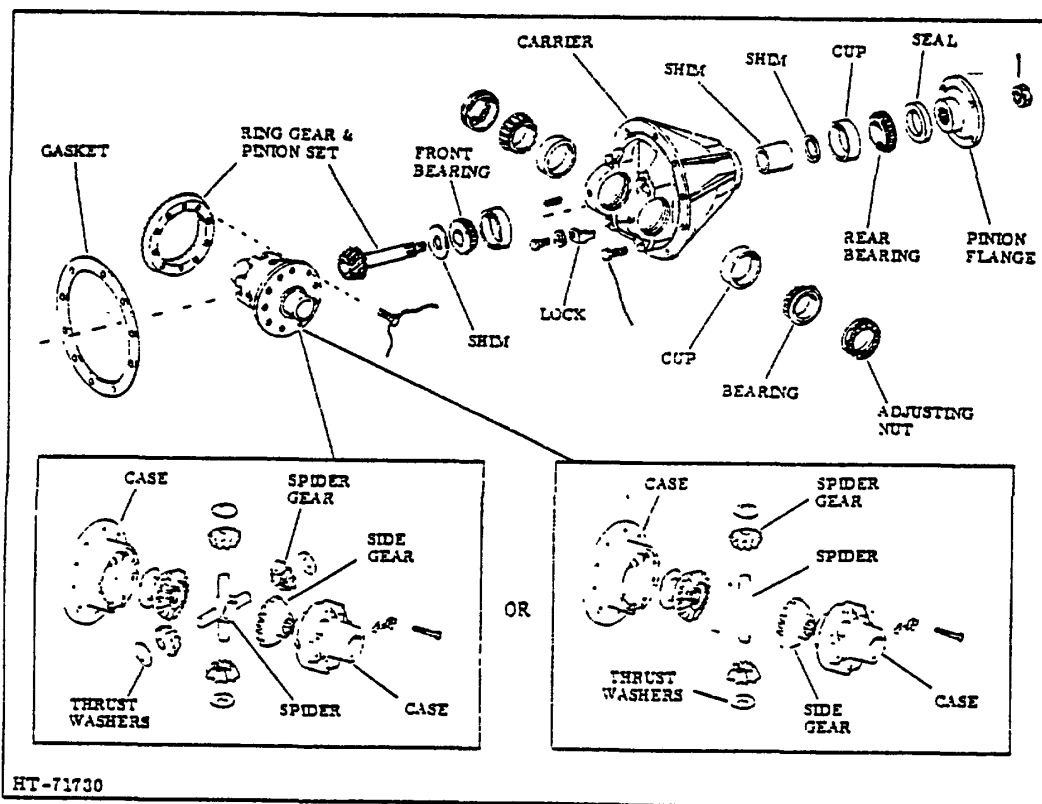


Figure 15. Differential Carrier and Assembly

same time. Whenever oil seal is removed, it should be replaced with a new seal.

6. To remove front bearing cup from carrier, tap out with brass drift.
7. inspect all bearings and pinion shaft for damage and excessive wear. Replace where necessary.

NOTE

Pinion and ring gear may only be replaced as a set.

Differential

1. Remove bearings with suitable bearing puller where necessary.
2. Remove lockplates and capscrews holding case halves together. Note aligning marks on case halves.
3. Remove plain case. Spider gears and thrust washers may then be removed.

Ring Gear

1. Remove lockwire and special cap screws holding ring gear to flanged case.
2. Ring gear is doweled in place. Using a brass drift, drive out dowels causing ring gear to separate from flange case.
3. Inspect all parts for wear or damage and replace where necessary.

CAUTION

Pinion and ring gear may only be replaced as a set.

D. REASSEMBLY

Differential

1. Place thrust washer in bottom of flanged case. Install side gear spider, spider gears, spider thrust washers and opposite side gear with thrust washer.
2. Install plain case.

NOTE

Make sure case match marks are aligned. See Figure 14.

3. Install lockplates and capscrews, and tighten. Bend lockplate tabs over capscrews to secure.
4. Install bearings, if removal was necessary

Ring Gear

1. When reinstalling ring gear, position two dowels in ring gear and align ring gear with dowel holes in flange case.
2. Install special capscrews and draw ring gear in place, tighten capscrews and lock with lockwires.

Pinion Gear

1. Press front and rear bearing cups into differential carrier. Be sure they are firmly seated.
2. Press front bearing cone on pinion shaft and place in housing. Install rear bearing cone, pinion flange and nut. Torque nut to 15 to 25 inch pounds. Spin gear to seat bearings.
3. Place differential assembly in position in carrier housing. Do not install caps.
4. Check dimension between face of pinion gear and O. D. surface of differential case. The proper dimension is $.171" \pm .002"$ for a pinion etched $.000$. If pinion face is etched $.004$ proper dimension would be $.175"$, and the difference between the feeler gauge reading and $.175"$ would determine the amount of shims needed to sec the pinion properly. Shim pack should be compressed while measuring with micrometer.
5. Remove pinion shaft, remove front bearing cone from shaft and install shim pack between cone and pinion gear.
6. Reassemble pinion shaft, this time installing spacer, rear shims, oil seal and nut. Torque nut to 15 to 25 inch lbs.
7. Use feeler gauge to recheck dimension. Should be $.171" \pm .002"$.
8. Install cotter pin in flange nut.

E. INSTALLATION

To install the differential assembly In carrier, proceed as follows:

1. Place differential in carrier, engaging ring with pinion.
2. Install differential bearing cups and adjusting nuts, and caps, but do no: tighten.

CAUTION

Make sure caps are reinstalled as marked at time of disassembly.

3. Coat ring gear with Prussian Blue or white lead to obtain tooth pastern.

- Adjust the ring gear laterally for a backlash adjustment of .005" to .010" (backlash etched on gear), by means of the differential side bearing adjusting nuts. To increase backlash, loosen adjusting nut nearest to ring gear and tighten opposite nut. To decrease backlash, reverse the operation. Differential side bearings must not be set any tighter than that which will produce a maximum pull of 3 to 5 lbs. on a string wrapped around the differential case.

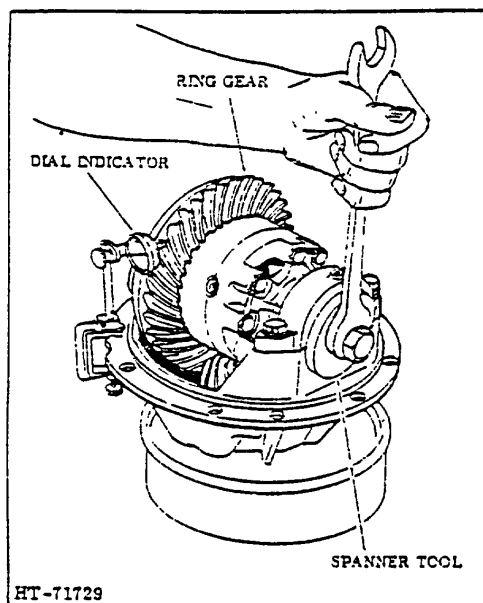


Figure 17. Adjusting Backlash

- With the drive pinion properly installed and adjusted, rotate the pinion and hold back on the ring gear to create the effect of a load. After several rotations of the drive pinion, inspect the teeth of the pinion where the paint has been removed by gear contact. Compare the tooth bearing (area where paint was removed), with Figure 18. The tooth bearing should start at a point about 1/32 to 1/16 inch from the top of the tooth and continue downward to a point about 1/32 to 1/16 inch from the bottom of the tooth.

NOTE

Do not be concerned with the amount of paint removed from the front toward the rear of the tooth. The amount of paint removed is determined by the amount of load applied while rotating the drive pinion and ring gear. The tooth bearing should always be more toward the toe end. or a toe bearing.

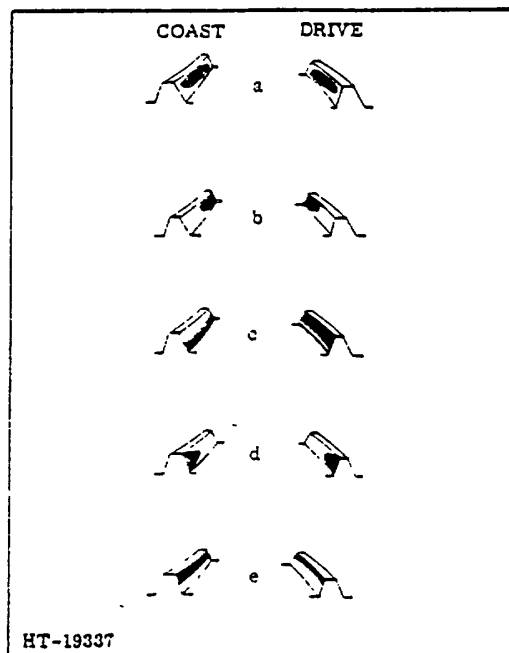


Figure 18. Differential Tooth Pattern

Explanation of Figure 18

- Correct adjustment.
 - Heavy contact on toe of tooth. To correct, move ring gear away from pinion. Move pinion towards ring gear to again secure correct backlash.
 - Bearing too low. Heavy contact on flank of tooth. To correct, move pinion away from ring gear until contact comes to full working depth of gear tooth without bearing contact at flank. Move ring gear towards pinion to secure proper backlash.
 - Heavy contact at heel of tooth. To correct, move ring gear towards pinion. Move pinion away from gear to obtain correct backlash.
 - Shows heavy contact on tooth face. Move pinion towards gear. If contact covers flank of tooth without breaking contact at face. Move gear away from pinion to secure correct backlash.
- After proper backlash and tooth pattern are obtained, fully tighten capscrews holding bearing caps in place and wire in position.
 - Install adjusting nut lock and align with hole in adjusting nut. Secure to cap with capscrew and lockwasher.

8. Position new gasket on mounting flange of differential and coat with a suitable leak proof adhesive.
9. Install differential assembly in drive unit and install capscrews.

NOTE

Use copper washers on capscrews located below oil level of differential.

10. Connect the parking brake cable at brake drum lever and connect the hydraulic lines and leakage return line if disconnected during disassembly.

11. Replace the drain plug in bottom of differential housing assembly and fill differential with proper S.A.E. oil to recommended capacity.
12. Replace U-Joint and drive shaft coupling: Refer to U-JOINTS, INSTALLATION.
13. Install jackshafts; refer to JACKSHAFT INSTALLATION.
14. Install drive wheels; refer to DRIVE WHEEL INSTALLATION.

TOPIC 3. DRIVE WHEEL PNEUMATIC TIRES (PRT only)

A. GENERAL

The drive wheel pneumatic tire assembly consists of a rim, tire, tube, flap, disc, and a retaining ring. For good performance and long tire life, the correct tire pressure must be maintained. Air pressure should be checked every day with an accurate tire gauge.

B. REMOVAL

1. Attach a suitable hoist of adequate capacity to the front of the unit and raise it sufficiently so the drive wheels-clear the floor. Carefully place sturdy service jacks under both sides of the drive axle housing. Lower the unit just enough to take stress off the hoist.
2. Remove nuts, washers, and clamps (Fig 6-1) that secure tire rim to drive wheel hub; remove the tire and rim assembly. Remove the spacer and second tire and rim assembly.

C. INSTALLATION

1. Position tire and rim assembly on drive wheel hub. Install spacer and position second tire and rim assembly on drive wheel hub. Install rim clamps and washers; start nuts on wheel hub studs. Tighten opposite nuts alternately (180° from each other) until rim is properly seated on wheel hub. Then tighten nuts to a torque of 100 lb-ft.
2. Raise front of unit slightly with hoist and remove service jacks from under drive axle housing. Then lower the unit so tires rest on the floor. Remove hoist from rear of unit.

D. SERVICE - TIRE AND TUBE REPAIR

If a tire is excessively worn or badly damaged, it must be replaced.

CAUTION

Make certain the tube is completely deflated before the retaining ring is removed from the rim.

1. Completely deflate the tube.
2. Use proper tire irons and remove the retaining ring from the rim.

CAUTION

A safety tire rack, cage, or equivalent protection should be provided and used when inflating, mounting, or dismounting tires installed on rims equipped with locking rings or similar devices.

3. Remove rim from tire. Remove disc, flap, and tube from tire.
4. Repair or replace defective tire, tube, flap, or disc.
5. Install tube, flap, and disc in the tire. Install rim in tire. install retaining ring to end of rim. Make certain retaining ring is properly seated.
6. Inflate tube to recommended pressure specified in preceding Paragraph A, GENERAL.

BRAKE SYSTEM

TOPIC 1. DRIVE WHEEL BRAKES


A. DESCRIPTION

The hydraulic brake system consists of 'semi-floating,' self-centering brake shoes especially designed for Lift truck application. The system uses a mechanically activated hydraulic master cylinder which transmits a controlled braking pressure to the wheel cylinders located between the brake shoes of each drive wheel. The double ended wheel cylinders have links extending from each side of the cylinder which transmit the movement from the wheel cylinders to the brake shoes.

The tops of the brake shoes move freely in a brake wear plate while the bottoms of the shoes transfer movement from the hydraulic wheel cylinders. (See Figure 1.)

No manual adjustment of the brake shoes is required as the system incorporates self adjusting brakes through use of a friction operated link assembly in each wheel.

The first requisite for safe, sure hydraulic braking is the use of a high quality brake fluid.

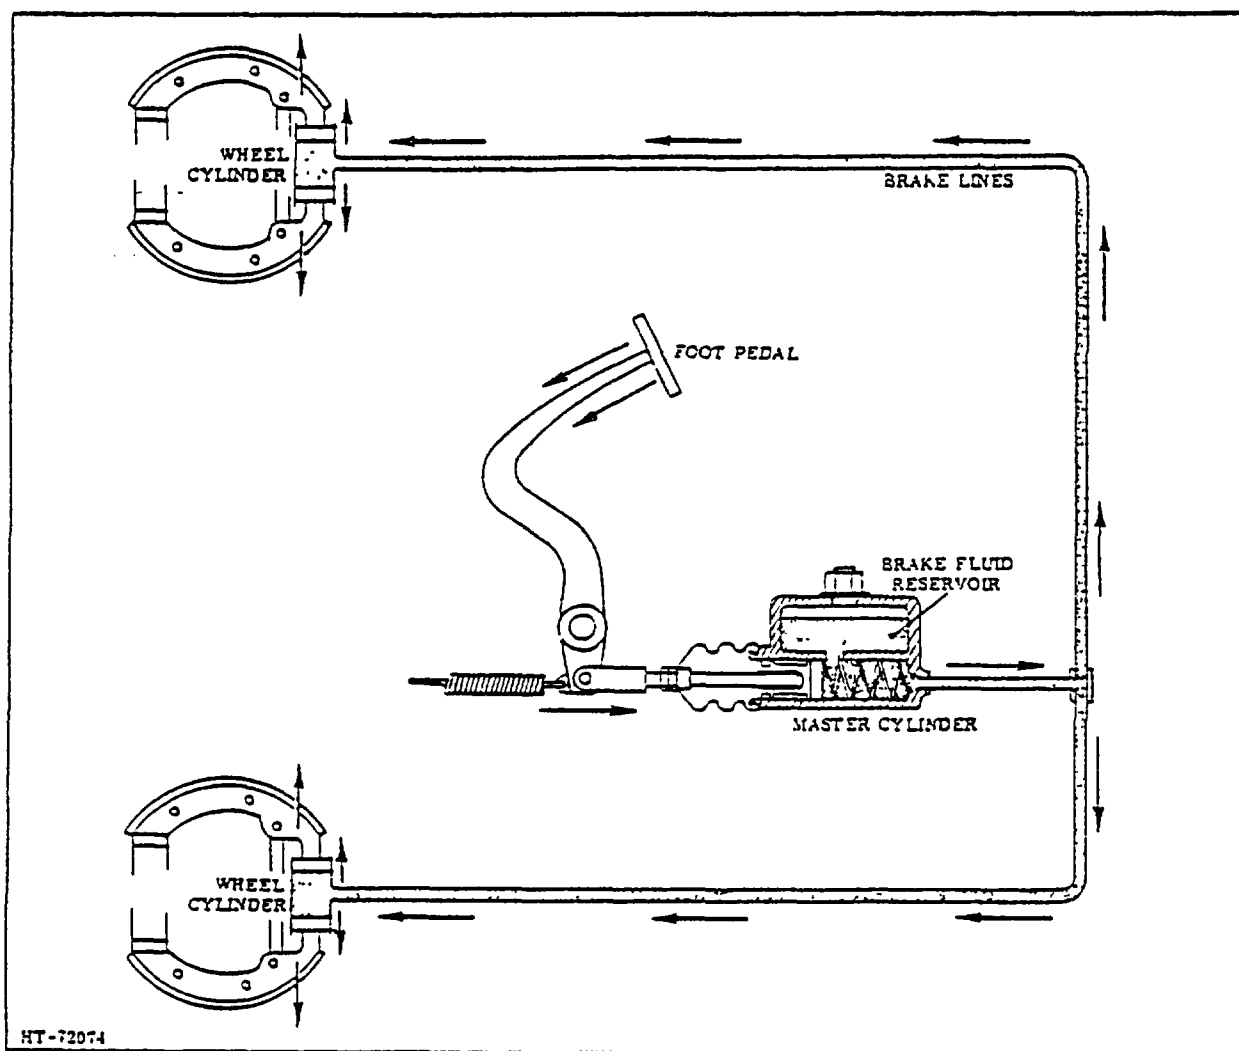

The Figure 1. Hydraulic Brake System

hydraulic brake system requires a "solid column of fluid" and the fluid should possess essential protective properties which safeguard the system.

CAUTION

Because of the importance of the fluid used in the brake hydraulic system, use only premium quality, heavy duty brake fluid with an extreme heat-cold range that conforms to SAE specification 70-R1.

1. Operation of Wheel Cylinders and Brake Shoes

Hydraulic fluid entering the wheel cylinders from the master cylinder forces pistons to move individually and in opposed directions. This piston travel expands the brake shoes. As the pressure increases, the piston cup lips are forced more tightly against the cylinder wall, effecting a positive fluid seal, neglecting minor friction losses. The controlled actuating force is equal to and varies with the hydraulic pressure exerted against each square inch of the piston face.

The pistons are returned to an "off" position by the force of the brake shoe retracting springs. The piston cup lips are pressed against the cylinder walls by natural resiliency and system residual pressure to seal against fluid or air leaks. The hydraulic pistons of the wheel cylinders follow the brake shoes as they expand into the drums.

2. Brake Shoes - Self-Adjusting

The brake shoes are self-adjusting through the use of a friction operated self-adjuster in each drive wheel. The friction between

the two slide assemblies of the self adjuster is great enough to prevent the brake shoe springs from fully retracting the self adjuster, but not great enough to prevent the hydraulic pressure from expanding it. The self-adjuster assembly is mounted to the brake shoes with roll pins. The roll pin holes in the brake shoes are 1/32" oversize to provide proper working clearance between the brake shoe lining and drum.

CAUTION

Exercise care when self-adjuster is handled or installed. Do not bend the tangs of the slide assemblies in any way because the holes for the roll pins must be parallel with each other. If the holes are not parallel, the roll pins will tie at a slight angle through the mounting holes in the brake shoes. Improper alignment of the roll pins could lead to improper brake shoe retraction due to lack of proper roll pin clearance in the brake shoe holes. This in turn could create brake shoe drag on the drum.

In order for the self-adjusting brakes to operate properly, the self adjuster assembly must be properly torqued. If it becomes necessary to remove and disassemble the self adjuster in the field, then it must be carefully reassembled and installed as outlined in the installation section.

B. REMOVAL

Before removing drive wheels, drive truck (loaded preferred) and make an eat, rolling stop. Any pulsation or vibration on the foot pedal indicates out-of-round drums. In order to perform any service on components of the drive wheel brakes, disassemble according to the following instructions.

1. Remove drive wheel assembly and components to expose the wheel cylinders and brake shoes (Figure 3). (Refer to DRIVE WHEEL REMOVAL, MAINTENANCE MANUAL.)

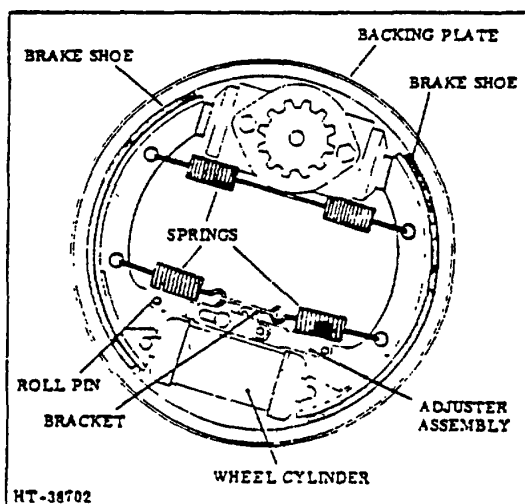


Figure 2. Self-Adjusting Brakes (Typical)

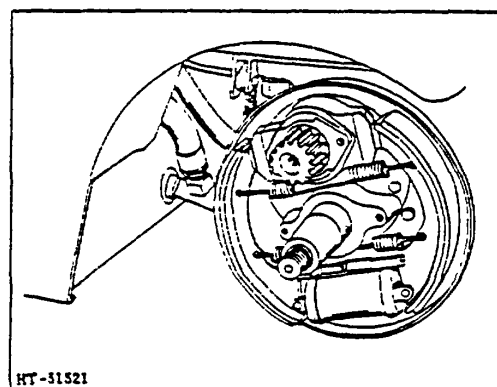


Figure 3. Dust Shield Removed

C. BRAKE DRUM INSPECTION

1. On out-of-round drums. gauge diameter or radius at points 45 apart around inside circumference of drum. Drum should be resurfaced if measurement differences are greater than 010" on diameter, or . 005" on the radius.
2. If worn lining face is tapered toward one side, or worn more ca the sides than at the centers, drum may be bell mouthed or barrel shaped.

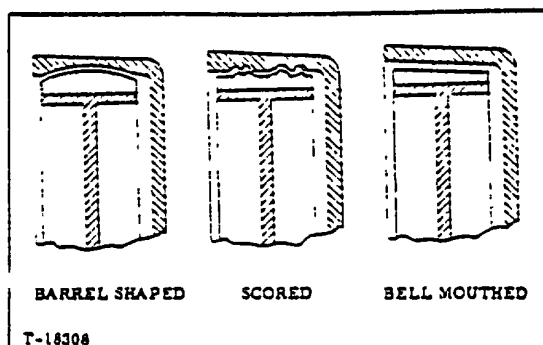


Figure 4. Improper Lining Wear

3. Check drum surfaces as indicated by wear pattern. Examine for scoring and heat checking. If not scored over 010", tiling will wear in and seat after some use. Heat checked or scored drum should be replaced or resurfaced, depending upon extent of damage.
4. If drum does not require resurfacing, polish with fine emery cloth to remove discolorations and old lining residue adhering to surface.
5. If drum requires resurfacing, always resurface both drums to equal diameter. Finish grind or hone drums to remove cutting tool marks, otherwise linings will wear rapidly and brake shoes will "runout" when brakes are applied and will release with a clicking noise.

CAUTION

Never use a drum machined to a diameter greater than . 050" original size. Thin drums are subject to excessive heat expansion and flexing. causing fade and spongy pedal. They also could break under strain of severe use. (Refer to following chart.)

Original I.D. of Brake Drum	Maximum Machined I.D.
11.000" to 11. 010"	11. 060"
13.125" to 13. 133"	13. 185"
13.135" to 13. 143"	13. 195"
14.250" to 14. 260"	14. 310"

D. BRAKE SHOES AND LINING

The brake shoes employ bonded lining. When lining replacement becomes necessary, it is recommended that the brake shoes be replaced. Replace brake shoes when any of the following have occurred:

1. Drums are resurfaced.
2. Lining is worn to shoe table.
3. Grease or hydraulic fluid soaked linings, causing brakes to-grab or pull to one side.
4. If difficulty in stopping is traced to linings.
5. Fade is traced to severely charred or burned linings.

NOTE:

Minor charring is sometimes remedied by buffing with sandpaper or grinding.

6. Lining is scored too deeply to be reworked by grinding
7. Brake shoe table is worn, twisted or out-of-round.
8. Shoe is cracked. For brake shoe removal, refer to following Paragraph E, DISASSEMBLY.

CAUTION

Whenever handling brake shoes, be careful act to get grease or dirt on brake linings as serious damage may result.

Dirt or grease on brake linings (not grease soaked) may be remedied by buffing with sandpaper or grinding. Clean shoes with compressed air and dry cloth to prevent damaging shoes or linings.

E. DISASSEMBLY

To disassemble brake assembly proceed as follows:

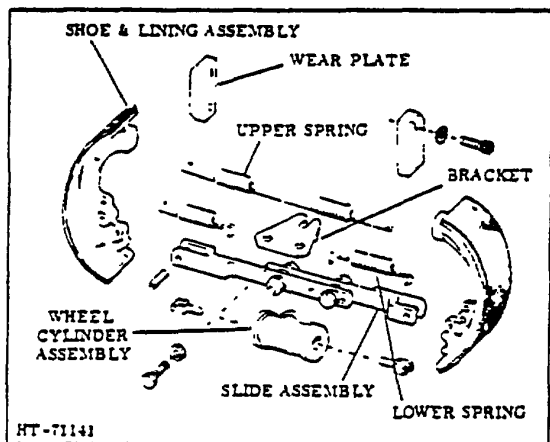


Figure 5. Self-Adjusting Brakes (Exploded View)

1. Remove upper and lower shoe return springs.
2. Remove brake shoes and adjuster Link as an assembly.
3. Drive out roll pins which attach adjuster link to brake shoes. Compress adjuster link by placing one end on a solid surface and tapping other end with a wooden mallet or a block of wood until fully compressed.

F. INSTALLATION

To install shoes with new ling, proceed as follows:

1. If self-adjusted link is inadvertently disassembled, it must be reassembled exactly as originally constructed (Figure 6). Torque capscrews to 14 16 inch lbs., and lock outs to 29 inch lbs. Slip resistance must be from 250 to 300 lbs. and link should be fully retracted when assembly is completed.
2. Attach adjuster link to brake shoes with roll pins.
3. Make certain backing plate is secured tightly to axle, also that it is nor sprung or damaged.

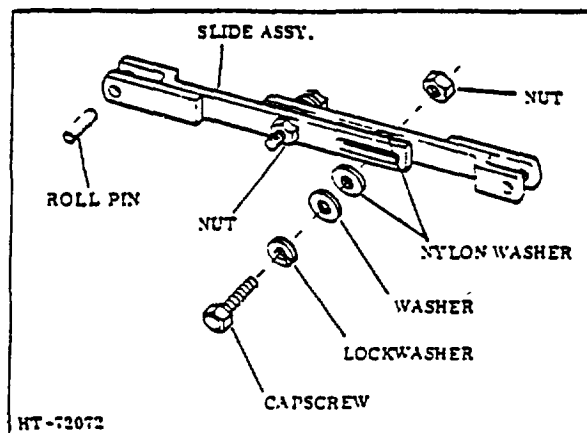


Figure 6. Brake Self-Adjuster

4. Clean inside of backing plate, brake drum and other parts to be assembled.
5. Check wheel cylinders for leakage, even if cylinder appears to be in good condition. The best practice is to overhaul wheel cylinders when new brake shoes are installed.
6. Place shoe and link assembly in a place and install springs. Install wheel assembly in direct reversal of removal procedure. While turning wheel SLX times in each direction, torque retaining out to a maximum of 50 ft. lbs., then back nut off 30' minimum -60° maximum to allow cotter pin installation.
7. The first time brake pedal is depressed after installing new shoes automatically sets the adjustment.

Drive wheels should be removed periodically until approximate wear period for brake lining can be determined. No further adjustment is required after shoes are replaced.

CAUTION

NEVER apply pressure to brake pedal until drive wheel brakes and wheels are completely assembled.

TOPIC 2. MASTER CYLINDER

A. DESCRIPTION

Brake cylinder and fluid reservoir are combined in one casting and are joined by intake and by-pass ports located in the cylinder wall. Internal parts are removed or installed at push rod end. Stop plate holding internal parts is retained by a lockwire clipped into cylinder bore. Cylinder piston is operated through a push rod connected to the brake pedal. The push rod and cylinder opening is enclosed with a rubber boot.

It is considered impractical to thoroughly clean the cylinder and fluid reservoir mounted on the truck. For this reason follow instructions below.

B. REMOVAL

1. Remove floor plate.
2. Disconnect brake hydraulic line attached to master cylinder.
3. Remove clevis pin securing push rod to brake pedal assembly.
4. Remove capscrews holding master cylinder to inside of frame and remove cylinder.
5. Secure cylinder in vise exercising care so as not to distort cylinder or crack the casting.
6. Remove boot and push rod.
7. Pry out lock ring holding piston assembly in position.

CAUTION

When lock ring is removed, entire piston assembly will spring out if not held in place.

8. Carefully remove copper washer, piston, rubber, spring and seat.
9. Working from other end of cylinder, remove outlet fitting bolt, copper washers, and brake line fitting.
10. Remove filler cap and all other washers and fittings.
11. Clean hydraulic parts and keep clean so that there is no trace of dirt, metal filings, sludge, or other deposits when unit is ready for assembly. Do not use cotton waste. Use lint-free cloth in cleaning. Internal parts must be cleaned in clean denatured alcohol or hydraulic brake fluid.

CAUTION

Mineral base cleaning solvents (gasoline, kerosene, distillates, carbon tetrachloride, acetone, paint thinners, etc.) deteriorate rubber parts, causing them to become soft, tacky and swollen.

Cylinder castings may be cleaned with usual cleaning methods but must be finished with denatured alcohol or brake fluid to remove all traces of solvent.

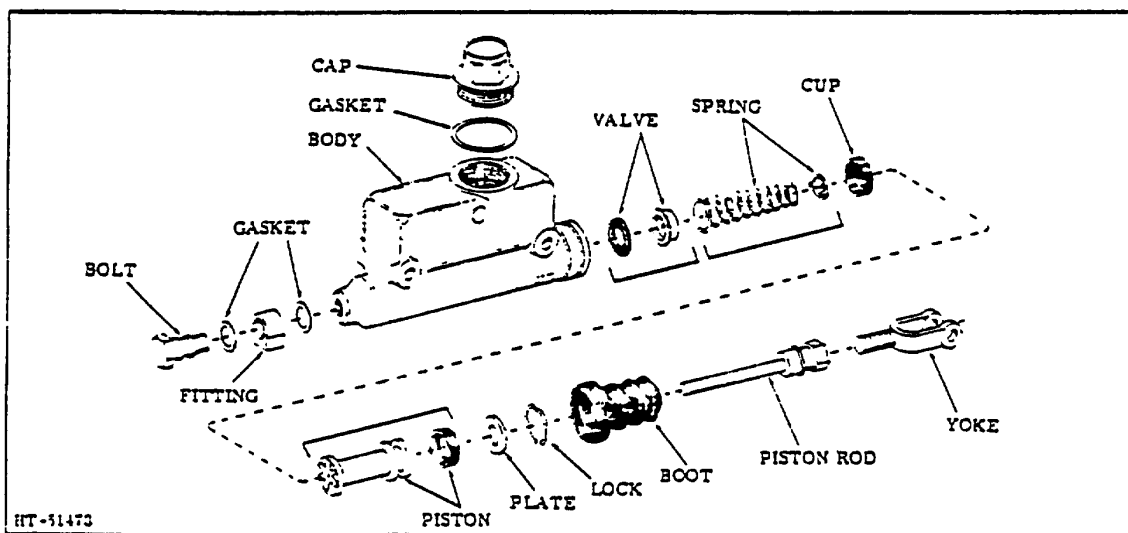


Figure 7. Master Cylinder Assembly

12. Inspect cylinder bore. Deep blemishes require reboring to resurface the cylinder wall. Pressure marks and discoloration may be polished out with crocus cloth. (Do not use emery cloth or sandpaper.) Make certain Intake and bypass ports are open. Bypass port may be probed with soft iron wire. Follow the honing equipment manufacturers recommendations for honing. Care must be exercised not to go beyond tolerances for cylinder size. A cylinder honed oversize must be discarded.
13. Before assembly, inspect parts for corrosion, scratched or pitted piston bearing surfaces, rubber deterioration (swelling, softening, tackiness, etc.) and spring action. If cylinder has been honed, replace all parts contained in repair kit. Replace all other parts which appear worn or damaged.
14. Lubricate parts and cylinder bore with clean brake fluid and assemble in direct opposite sequence of disassembly procedure.

CAUTION

Make certain lock ring is firmly seated a groove provided in end of cylinder.

Largest end of piston spring and pressure valve must be toward outlet end of cylinder.

C. INSTALLATION

1. Secure the cylinder body in a vise, exercising care so as not to distort the cylinder unit or crack casting.
2. Replace filler cap, washers and fittings previously removed.
3. Refer to Figure 6, and replace brake line fitting, copper washers, and outlet fitting bolt.
4. Carefully replace spring and seat, rubber, piston and copper washer.

CAUTION

This assembly must be held in position until lockring is properly inserted to retain parts.

5. Insert lockring and ensure its proper seating.
6. Replace rubber boot and push rod.

7. Ensure that cylinder is completely reassembled prior to installing
8. Replace master cylinder in its relative mounting location and install securing capscrews.
9. Attach brake pedal push rod to cylinder and secure with clevis pin previously removed.
10. Connect brake hydraulic line to cylinder.
11. Refer to LUBRICATION CHART and fill cylinder with proper high grade hydraulic brake fluid.
12. Bleed brake system as outlined under appropriate heading, this Section.
13. Replace floor and toe plate.

D. PEDAL LINKAGE

If pedal linkage does not provide proper clearance or lash between master cylinder piston and linkage with brakes released. piston cannot return to full off position. Brakes will drag after several applications if bypass port is blocked. Refer to Figure 8 and proceed as follows:

1. Loosen locknut at master cylinder.
2. Adjust linkage to provide 1/2" of free play measured at brake pedal. More free play will reduce usable stroke of master cylinder piston.
3. Tighten locknut.

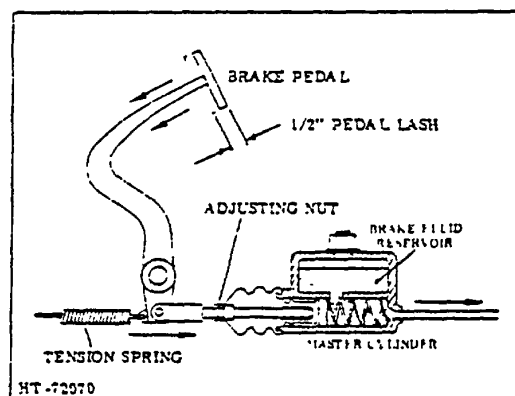


Figure 8. Adjusting Pedal Lash

TOPIC 3. WHEEL CYLINDERS

A. DESCRIPTION

The hydraulic wheel cylinder houses two opposed pistons which actuate the opposed brake shoes. (See Figure 9.) The pistons, rubber cups, and springs are held in place, in the cylinders, by the brake shoe mechanical pressure. The opened ends of the cylinders are protected with rubber boots. Since the wheel cylinders of a hydraulic brake system are a very important part of the whole system, it is necessary that the following reconditioning instructions are carefully followed:

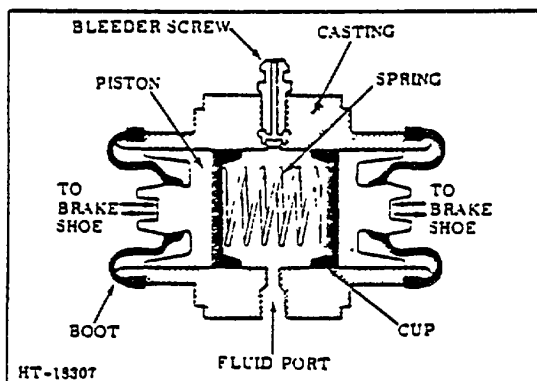


Figure 9. Wheel Cylinder

B. SERVICE

1. Remove wheel assembly, bearings and brake shoes. (Refer to DRIVE UNIT REMOVAL, .MAINTENANCE MANUAL.)

2. Remove hydraulic line attached to wheel cylinder. Remove wheel cylinder mounting capscrews and remove cylinder.
3. Pull boots from cylinder and push out internal parts. Low pressure air at fluid inlet can be used to remove cylinder components.
4. Clean all parts thoroughly and keep them clean until unit is ready for assembly. Use lint-free cloth for cleaning.

CAUTION

Wash parts thoroughly in denatured alcohol or clean brake fluid. Never use gasoline, kerosene, pant thinner or other mineral base solvents as they will damage rubber components.

5. Thoroughly inspect all parts for wear, corrosion or other conditions which might impair cylinder action.
6. If wheel cylinder is to be honed, follow specific instructions furnished with honing equipment, as these instructions may vary.

NOTE

Cylinder honed oversize will leak and must be discarded.

7. Lubricate all parts and cylinder walls with clean brake fluid. Lase each piston in its respective end. Never try to push piston through length of cylinder. After cylinder is assembled, install cylinder boots. Be sure they are properly located in grooves provided.
8. Reassemble cylinder to backing plate. Install brake unit and wheel assembly.

TOPIC 4. PARKING BRAKE

A. DESCRIPTION

A dual shoe mechanical brake, mounted at the drive shaft, is used as a parking brake. The brake shoes are actuated through a cable by an adjustable over-center type lever mounted on the left hand cowl panel.

The brake mechanism requires no lubrication except at time of reassembly. Brake actuating mechanism, such as hand lever and linkage, should be lubricated periodically.

B. HAND BRAKE ADJUSTMENT

To compensate for brake lining wear the hand brake lever must be adjusted. Refer to HAND BRAKE LEVER ADJUSTMENT La BRAKE SYSTEM MAINTENANCE MANUAL.

C. BRAKE SHOE ADJUSTMENT

If the adjusting knob on the parking brake handle will no longer provide correct brake adjustment and sufficient brake lining is still available, further adjustment is made at the lower brake-cable yoke.

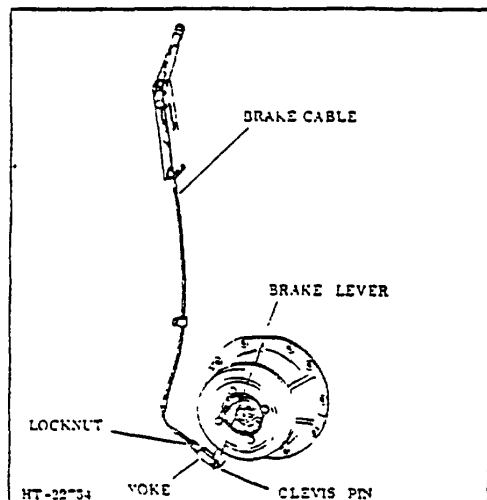


Figure 10. Adjustment at Brake Shoes

1. Remove adjusting knob lock screw from parking brake handle and back off knob four or five turns. Brake must be in OFF position during adjustment.
2. Remove floor plate.
3. Remove clevis pin from yoke and loosen yoke locknut.
4. Turn yoke in clockwise direction to shorten length of cable. Generally three or four turns will be sufficient.
5. Install yoke on brake lever and check adjustment by engaging hand brake handle. If necessary, make further adjustment to yoke to make certain brake shoes do not drag when disengaged.
6. After satisfactory adjustments made, tighten yoke locknut; install cotter pin in yoke clevis pin. Install locking screw in adjusting knob of parking brake handle.

D. BRAKE SHOE REPLACEMENT

When excessive adjustment is needed on parking brake linkage, or when parking brake becomes ineffective in holding truck securely, the brake shoes should be checked and, if necessary, replaced. To check or replace parking brake shoes the following procedure is recommended:

1. Removal and Disassembly
 - a. Place blocks in front and behind one of the left truck wheels

- b. Remove toe and floor plates.
- c. Remove cotter pin and clevis pin securing brake cable to brake lever d. Remove universal joint e. Remove lockwire, capscrews, and lockwashers and remove brake drum from differential pinion flange.
- f. Remove cotter pin and nut, then remove hub from pinion shaft.
- g. Remove brake lever and rollers from backing plate h. Remove brake shoe return springs and slide shoe and lining assembly off backing plate.
- i. Remove capscrews, lockwasher, and backing plate from differential carrier housing assembly

2. Inspection

- a. Check backing plate for distortion, loose or sheared rivets, and worn pawls.
- b. Check brake lining for wear or grease saturation.
- c. Check brake shoes for worn pawl holes, lever contact areas, or wear pads.
- d. Check brake drum for cracks, scoring, or other damage. Replace damaged parts e. Always replace shoe return springs during reassembly

3. Reassembly and Installation

Reassembly and installation is the reverse of removal and disassembly with the exception of lightly coating the wear pans and pawls on the backing plate, the lever, and the brake shoe wear points with lubricant. Avoid excessive lubricant as grease soaked linings are dangerous.

- a. Replace backing plate, lockwashers and capscrews on differential carrier housing.
- b. Slide shoe and lining assembly on backing plate and replace brake shoe return springs.
- c. Install brake rollers and brake lever on backing plate.
- d. Replace hub on pinion shaft and install nut and cotter pin.

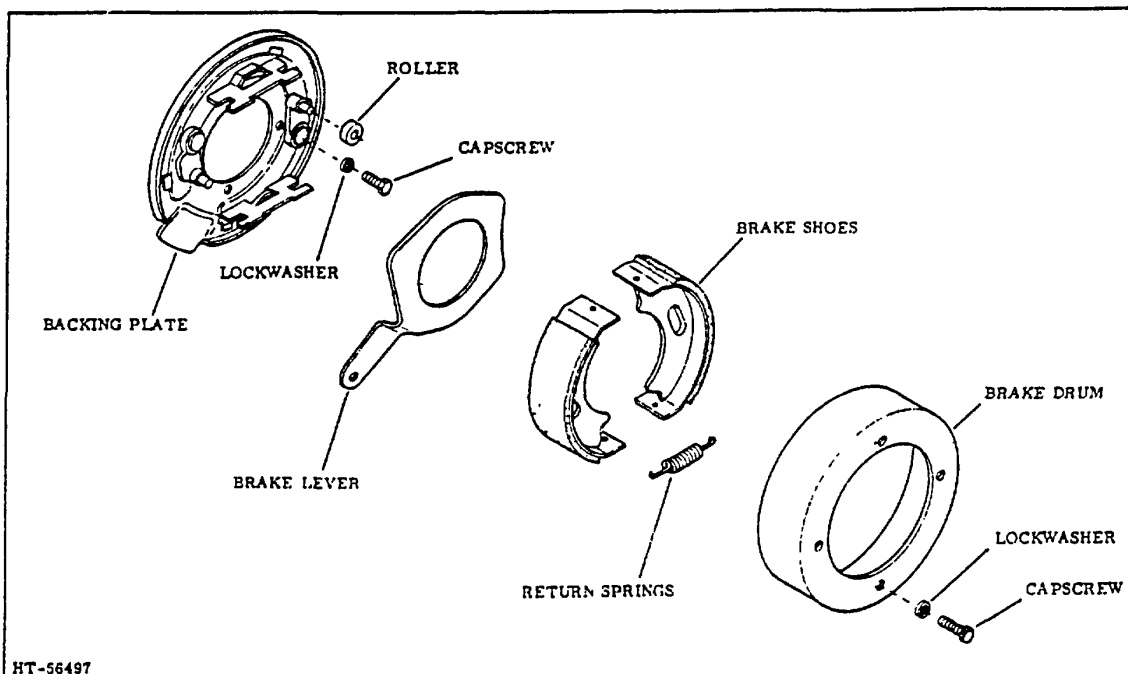


Figure 11. Brake Shoe Components

- e. Replace brake drum on differential pinion shaft, then install lockwashers, cap screws and lockwire
- f. Install universal joint.
- h. Replace clevis pin and cotter pin which secure parking brake cable to brake lever.
- h. Ensure that parking brake unit has been completely reassembled, then replace floor and toe plates.

TOPIC 5. BLEEDING THE BRAKE SYSTEM

A. REASON FOR BLEEDING BRAKES

Brakes must be bled after any of the following occurrences:

1. Brake system is drained and refilled with new fluid.
2. Some part of the system has been disconnected.
3. Neglect in maintaining proper fluid level in master cylinder has allowed air to enter system.
4. Air leakage past master cylinder secondary cup or wheel cylinder cups due to wear, or to a vacuum maintained within the cylinder by a plugged filler cap vent.

5. Overheating of brakes caused under severe operating conditions could cause gassing or boiling of fluid, thereby creating a vapor lock and giving a spongy pedal.

B. BLEEDING SEQUENCE

1. Fill master cylinder to proper level (3/8" to 1/2" from reservoir top).

CAUTION

Due to importance of fluid used in brake system, use only premium quality, heavy duty brake fluid with an extreme heat-cold range that conforms to SAE specification J1703C.

2. If refiller or pressure bleeder is used, be sure to install proper adaptor in master cylinder filler cap opening.
3. Install one end of bleeder hose on bleeder screw and submerge other end in glass jar of brake fluid. Then open screw one turn.
 - a. If using pressure bleeder, watch hose until bubbles stop emitting, then close screw securely.
 - b. If bleeding system manually, it may be necessary to use 10-15 strokes of the brake pedal. Have assistant depress

pedal slowly until no bubbles escape from hose, then close bleeder screw.

CAUTION

Be sure to keep fluid level in master cylinder high enough to prevent reentry of air into the system.

4. Repeat bleeding operation at each bleed screw. After bleeding operation is completed, make certain master cylinder reservoir is filled to within 3/8" to 1/2" of top.

Fluid salvaged during bleeding operation is aerated and not suitable for reuse.

POWER STEERING SYSTEM

TOPIC 1. GENERAL DESCRIPTION

The power steering system converts hydraulic oil movement into mechanical movement to turn the steer wheels with ease. The steer axle assembly with the steer wheels is mounted to the frame and is located at the rear of the lift truck. The main components in the power steering system are the steering valve unit, and steering cylinder. The hydraulic oil that is supplied to the steering valve unit is directed to one of the steering cylinder ports. As the oil enters the steering cylinder, the plunger rod begins to extend or retract, depending upon which port in the cylinder the hydraulic oil is directed. A short drag link or yoke is installed on the end of the steering cylinder plunger rod and is connected to the steer axle pivot arm. Also connected to the pivot arm are right and left tie rods which in turn are attached to the respective steer wheel spindles.

When the steering wheel is turned to the right, oil is directed by the steering unit to the forward port in the steering cylinder. As the hydraulic oil pressure is applied to the piston, the piston and plunger rod move outward. The plunger rod by means of the drag link then pushes on the pivot arm which rotates on the pivot pin. As the pivot arm rotates, the steer wheels move into position for a right turn due to the movement of the tie rods.

The movement of the steering system is just the opposite when the steering wheel is turned to the left. The hydraulic oil is then directed to the rear port in the steering cylinder which causes the plunger rod to retract. As the plunger rod retracts the drag link pulls on the pivot arm and the steer wheels move into position for a left turn due to the opposite movement of the tie rods.

TOPIC 2. STEER AXLE

A. REMOVAL

1. Remove the floor plate and toe plate.
2. Attach a suitable hoist to the rear of the truck and raise the track until the drag link and steer axle are accessible. Block the front wheels, and place blocks under both sides of the frame to support the rear of the vehicle. Blocks and chain must not interfere with removal of steer axle.
3. Remove steer wheels and wheel bearings.
4. Disconnect drag link from pivot arm by loosening the adjusting plug at the end of the drag link until the link can be lifted from the ball stud on the pivot arm.
5. Place a jack under the steer axle assembly and raise jack enough to take the stress from the axle mounting capscrews and nuts.
6. Type III Steer Axle Only:
Loosen jam nut and back away adjusting screw in frame just ahead of the steer axle's front pivot pin. (Adjusting screw is used to take up end play between steer axle's front pivot pin and the frame).
7. Remove nuts and/or lockwashers, and capscrews that secure the axle to the frame.

8. Lower the jack with the axle on it, and withdraw the axle from under the vehicle.

B. DISASSEMBLY

1. Remove the axle mounting housing from steer axle pivot pin.
2. Remove cotter pins, adjusting plugs, ball seats, and springs from the tie rods, and separate the tie rods from the pivot arm.
3. Remove cotter pin and nut from ball socket, and remove the tie rods from the spindles. Loosen the nut on the ball socket, and remove the ball socket and nut from the tie rod tubes.
4. Remove expansion plugs from king pin bores in the axle assembly. Drive roll pins from king pins and spindles, and remove the king pins, needle bearings and spindles from the axle.
5. Type I Steer Axle:

Remove wedge bolt (Fig 3), and washer. Remove pivot pin, and spacers, and lift pivot arm from axle assembly. Remove bushings from axle.

Type II and III Steer Axles:

Use a punch to straighten out stake indentation in end of nut. Remove nut, washer, seal and lower cone; lift pivot

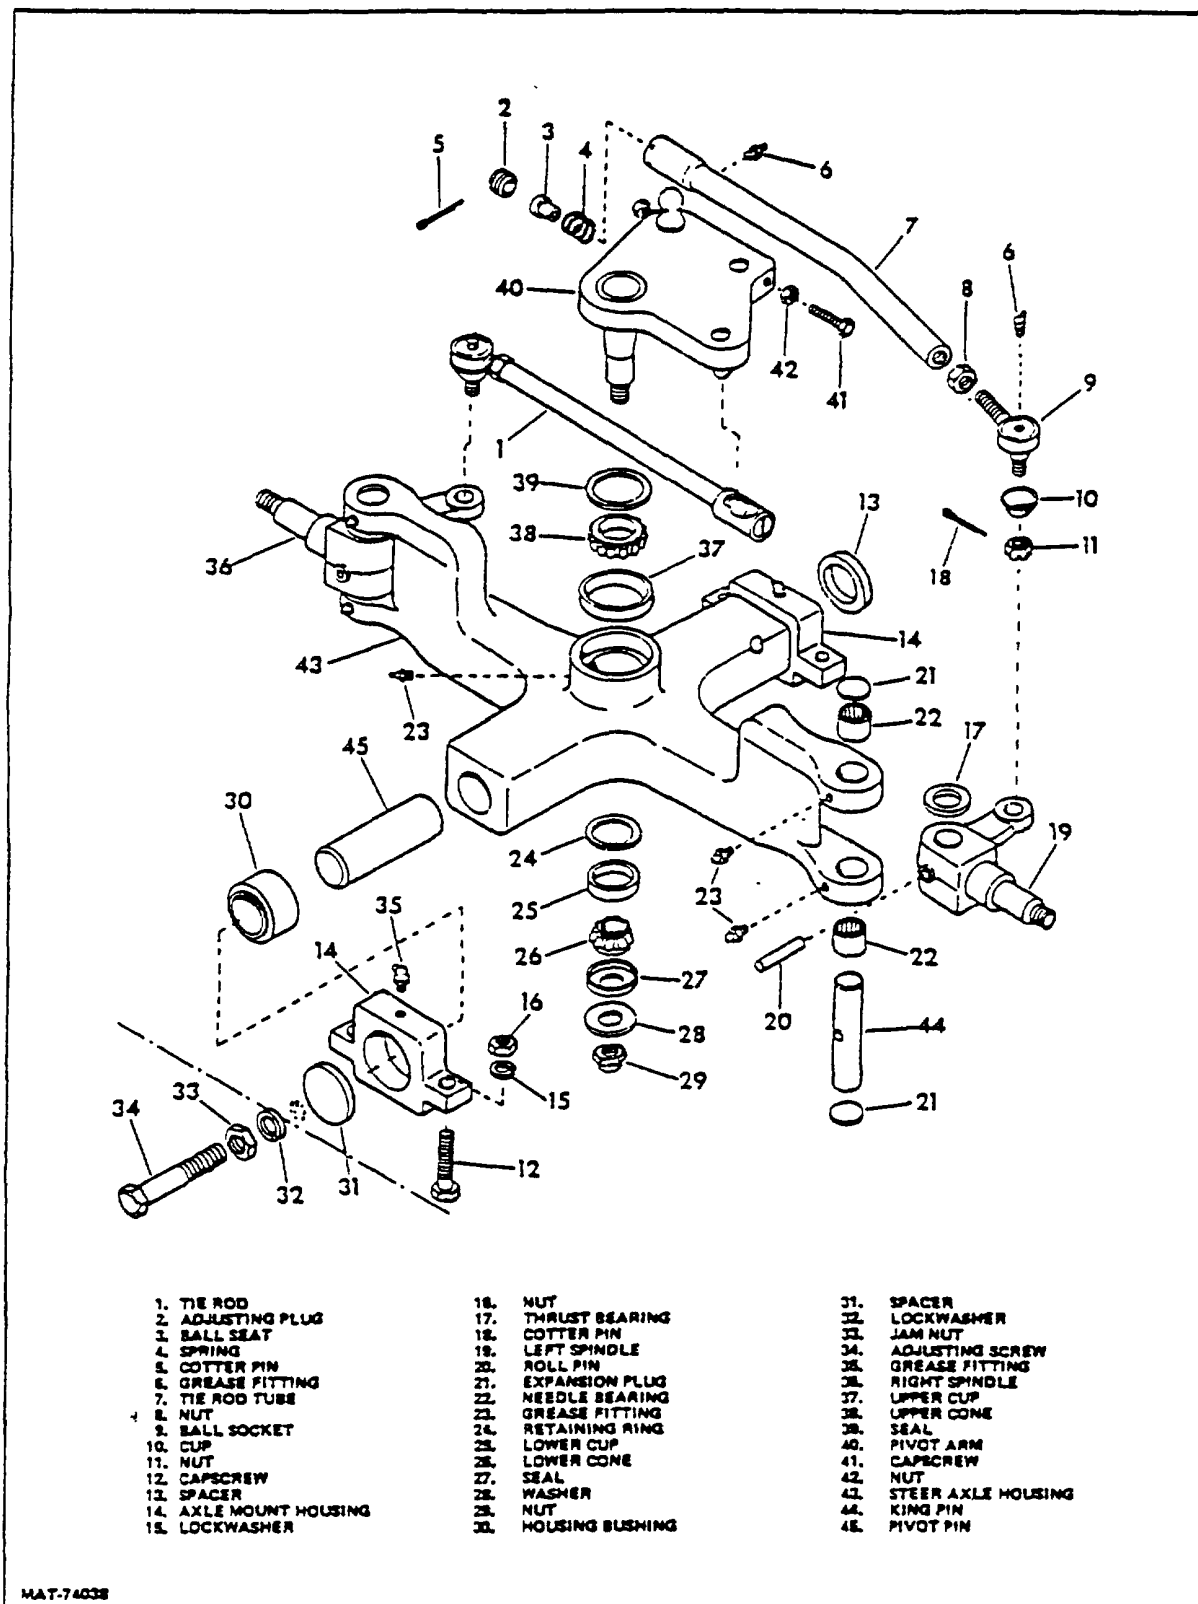


Figure 1. Steer Axle Assembly (Type III) (with Adjusting Screw)

arm from steer axle housing and remove seal and upper cone. Use a brass drift and remove upper and lower bearing cups from steer axle housing; remove retaining ring.

C. CLEANING AND INSPECTION

1. Clean all parts with mineral spirits or other suitable solvent, and dry with compressed air.

2. Inspect all parts for cracks, breaks, bends, other damage, and wear. Repair or replace parts as indicated by their condition.
3. Lubricate all parts except the ball sockets with an SAE 10 or 20 oil. Pack the tie rod ball sockets with high quality chassis lube.

D. REASSEMBLY

1. Type I Steer Axle:

Install bushings in axle. Position spacers and pivot arm on axle assembly and insert the pivot pin. Align the groove in pin with wedge bolt slot, insert wedge bolt (Fig. 3), and secure with washer and nut.

Type II and III Steer Axles:

Install retaining ring and lower bearing cup in steer axle housing; install upper bearing cup. Make certain cups are firmly seated. Install seal and cone on pivot arm pin; install pivot arm, lower cone, seal, washer, and new nut. (For proper installation procedure, refer to following Paragraph F, PIVOT ARM INSTALLATION PROCEDURE.)

2. Install king pin needle bearings in the axle assembly. Position the spindle on the axle and insert the king pin. Align the roll pin in the king pin and spindle, and insert the roll pin. Install and stake new expansion plugs.
3. Assemble the nut, ball socket, cup,

seats, springs, plug to tie rods. Position the tie rods on the pivot arm and tighten plug until seats firmly grasp ball stud on the pivot arm. Install ball socket on spindle and secure with nut and cotter pin.

E. INSTALLATION

1. Depending upon the model of the lift truck, install axle mounting housing or housings on steer axle pivot pins. Type III steer axle requires that solid spacer is positioned between end of pivot pin and frame.
2. Position steer axle on a jack or other suitable device and raise it into position under the truck frame.
3. Install mounting capscrews, lockwashers, and nuts if applicable; tighten until snug to permit movement for adjustment.
4. Type III Steer Axle:

Push entire steer axle against rear spacer and turn adjusting screw in or OUT (as applicable) to take up end play between pivot pin and solid spacer. Tighten adjusting screw to a torque of 10-15 lb-ft. Tighten jam nut to a torque of 90-010 lb-ft after adjustment is completed.

5. Tighten steer axle mounting nuts or capscrews securely.
6. Thoroughly lubricate all lube points of the steering system.
7. Connect drag link to the pivot arm. Install floor plate and toe plate and fasten securely.
8. Lubricate the inner wheel bearing cone with specified grease. Use an applicator designed to force lubricant into the bearing rollers.
9. Position inner bearing cone on the spindle. Lubricate the bearing cups in the wheel and carefully install the wheel on the spindle.
10. Lubricate the outer bearing cone with the specified lubricant, using an applicator. Install the bearing cone on the spindle.
11. Install washer and retaining nut on spindle. While rotating steer wheel, tighten retaining nut to a torque of 50 lb-ft; then back off nut until loose (0 lb-ft). Rotate wheel alternately in each direction while tightening retaining nut until a torque of 25 lb-ft is obtained. Then back off nut 30° min to

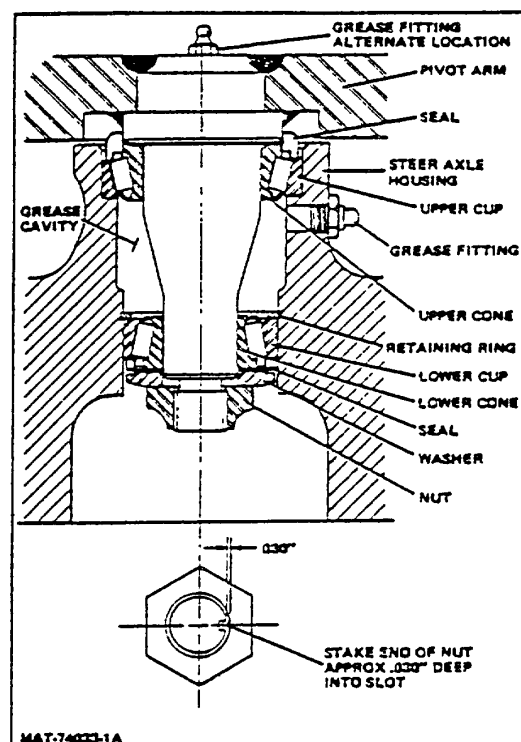


Figure 4. Pivot Arm Installation (Type II and III Steer Axles)

60° max and install cotter pin.

12. Install hub cap and secure with capscrews and lockwashers, tightening capscrews securely. Lower the truck to the floor.

F. PIVOT ARM INSTALLATION PROCEDURE

1. Make certain pivot arm pin, bearing seats, and steer axle housing bore are clean.
2. Install retaining ring and lower bearing cup in steer axle housing; install upper bearing cup. Make certain cups are firmly seated.
3. Seat upper seal (Fig. 4) on pivot arm firmly. Fill seal with specified grease.
4. Pack upper cone with specified grease and press it onto pivot arm pin until it is seated against the shoulder.
5. Install pivot arm with bearing in steer axle housing.
6. Pack lower bearing cone with grease and install it on pivot arm pin.

7. Fill seal with grease and install it on pivot arm pin.
8. Install washer and start new nut on pivot arm pin.
9. Use a torque wrench and continue to tighten nut. Note torque reading while advancing lower cone to its seated position. You will notice an increase in the torque when the lower cone starts to seat. Continue to tighten nut until torque is 15-25 lb-ft greater than previously noted before lower cone started to seat.
10. Check rotational bearing torque. Rotate pivot arm back and forth several times and take rolling torque reading. It should require 15-25 lb-ft torque to rotate pivot arm in either direction.

NOTE

Tie rods must not be connected to pivot arm whenever rolling torque is checked.

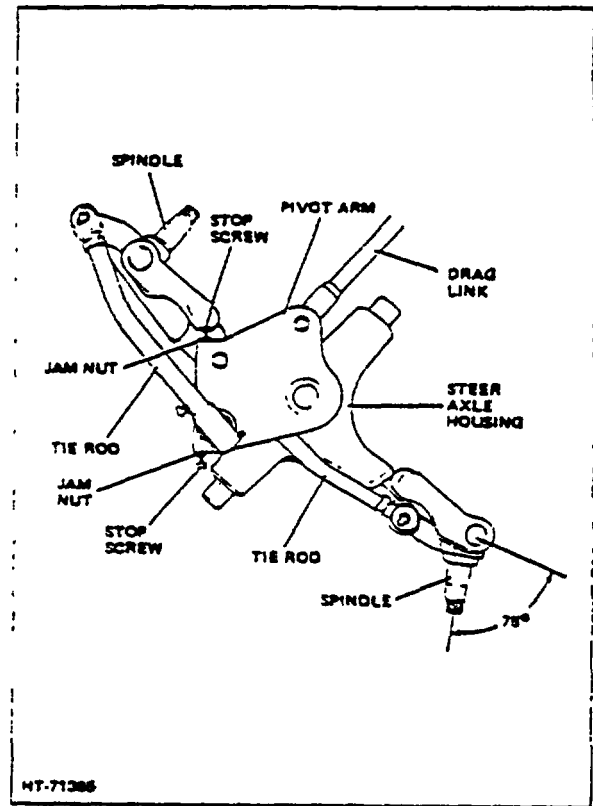


Figure 5. Pivot Arm Stop Adjustment

11. If rolling torque is less than 15 lb-in, tighten nut an additional 5 lb-ft torque and repeat Step 10.
12. If rolling torque exceeds 25 lb-in, back nut off one full turn. Strike end of pivot arm pin with a softheaded mallet to unseat bearings and repeat Steps 9 and 10.
13. After proper rolling torque is obtained, stake end of nut approximately .030" deep into slot (Fig. 4).
14. Fill cavity with specified grease until it seeps out between pivot arm and steer axle housing.

G. PIVOT ARM STOP ADJUSTMENT

1. Turn steer wheels first to full right

turn and then to full left turn and adjust pivot arm stop screw each time.

2. Loosen Jam nuts and adjust the pivot arm stops (Fig. 5) to allow 1/2" clearance between the steer wheel and steer axle housing with the wheels turned full right or full left. Stops should limit travel of wheel spindle to 75° from centerline of spindle. Tighten stop screw jam nut to a torque of 2 to 3 lb-ft.

TOPIC 3. STEERING VALVE UNIT

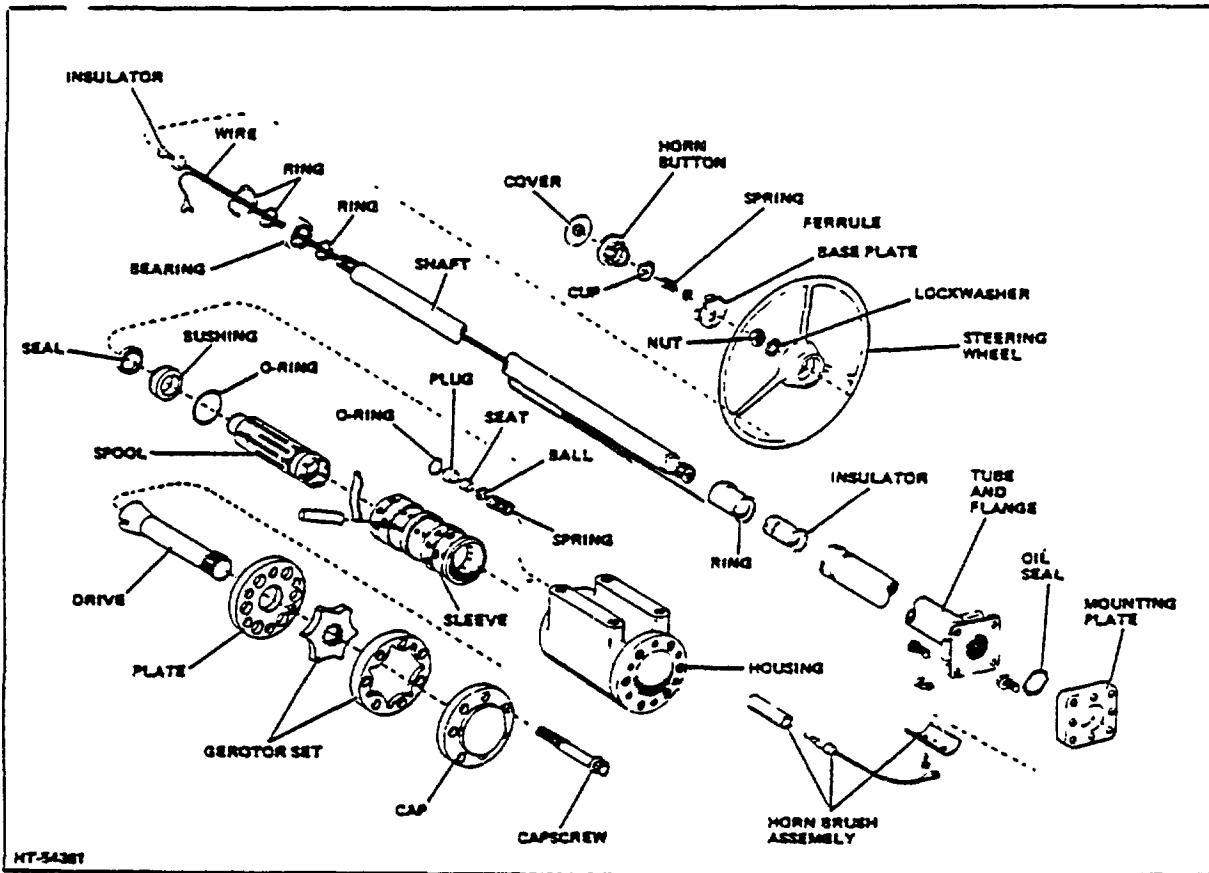


Figure 6. Steering Valve Unit Components

A. REMOVAL

1. Remove the floor plate and toe plate.
2. Disconnect hydraulic hoses from steering valve unit. Cover all openings immediately to prevent entry of dirt in the hydraulic system.
3. Disconnect horn button wire at the horn.
4. Remove capscrews that secure steering valve unit to the stationary bracket.
5. Lift steering valve unit up and out of the vehicle and place in a clean work area for disassembly.

disconnect it from the attaching wedges located on the base plate.

B. DISASSEMBLY (Fig. 6)

1. Place the power steering unit in a vise, (Fig. 7). Remove the horn button and rubber cover by pushing down and turning to the right to
2. Remove the horn button contact cup, spring and contact washer. Remove the terminal from the horn cable and pull the cable and Insulating ferrule from the steering column.
3. Remove the three round head screws from the horn button base plate, and remove the base plate and contact insulator.
4. Remove the nut and lockwasher securing the steering wheel to the column. Using a suitable puller, pull the wheel from the column.
5. Remove the retaining ring and first snap ring. Push shaft free of bearing with thumb pressure. When shaft is removed, bearing and second snap ring can be removed.

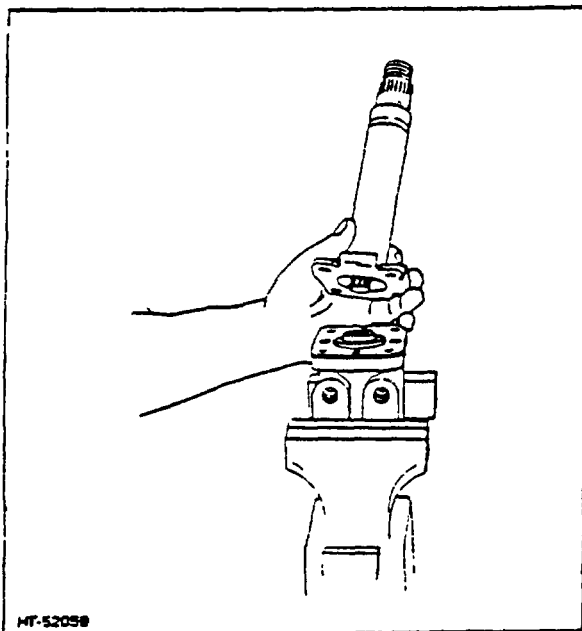


Figure 7. Removing Column From Housing

CAUTION

Do not use a hammer to free the shaft. Upper shaft bearing may be damaged.

6. Remove the two capscrews that secure the column to the lower unit. Match mark the capscrew holes so the ports will be in the proper direction when reassembled. Remove the column from the lower unit (Fig. 7).
7. Clamp the unit in the vise with the meter end up and remove the seven capscrews (Fig. 7). Remove the three-section cap, gear, and plate as a unit, and set to one side on the bench (Fig. 8).
8. Remove control assembly from vise, and check for free rotation of the control spool and sleeve parts with the column shaft (Fig. 10).
9. Place a clean wooden block across the vise throat to support spool parts. Clamp unit across port face with control end up and remove the four capscrews.
10. Hold the spool assembly down against the wooden block, and remove the end cap (Fig 11).
11. Inspect mating surfaces for obvious leakage, path wear, and seal condition.
12. Remove cam locator bushing (Fig 12.).
13. Place port face of housing securely on a solid surface and remove the spool

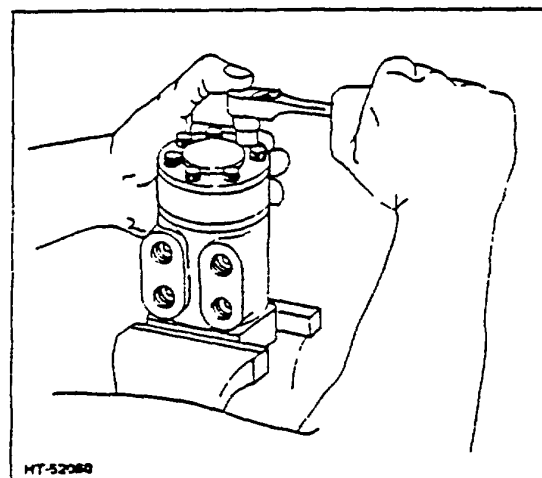


Figure 8. Removing End Plate Capscrews

sleeve assembly from the 14-hole end of the housing.

CAUTION

Use extreme care when removing these parts, because they are very closely fitted and must be rotated slightly as they are withdrawn.

14. With a small bent tool or wire, remove check valve zeal plug from housing (Fig. 13). Do not pry against edge of hole in housing bore.
15. With housing installed in vise, control end up, remove check valve seat with 3/16 hex wrench (Fig. 14).
16. Turn the housing over and tap lightly with palm of hand. With check valve

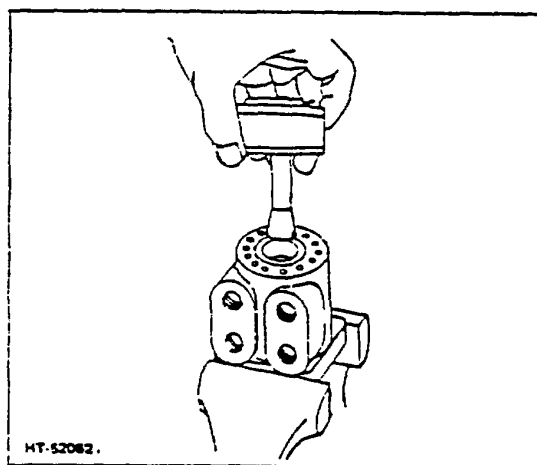


Figure 9. Removing End Plate Assembly

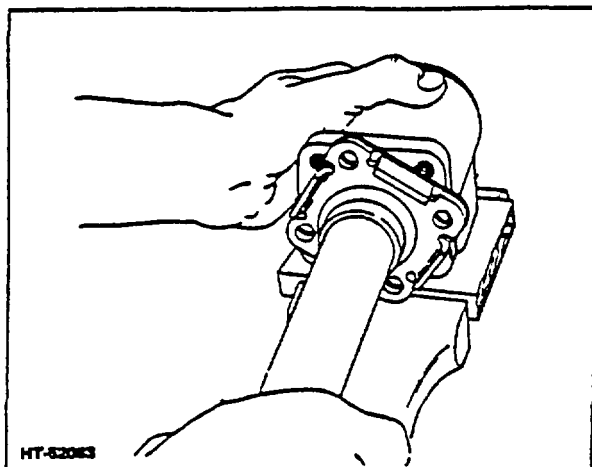


Figure 10. Checking Control Spool Rotation

hole toward lowest corner, remove check valve seat, ball, and spring.

17. Holding the spool assembly, push the cross pin to loosen it from the spool-sleeve assembly (Fig. 15). Remove the cross pin and set it aside.
18. Push inside lower edge of spool so the spool moves toward the splined end, and remove spool carefully from the sleeve (Fig. 16).
19. Push the centering spring set out of the spool (Fig. 17).

C. CLEANING AND INSPECTION

1. Carefully rinse each part with suitable solvent and allow parts to air dry. Parts should be set to dry on clean paper towels.
2. Inspect the surfaces of all moving parts

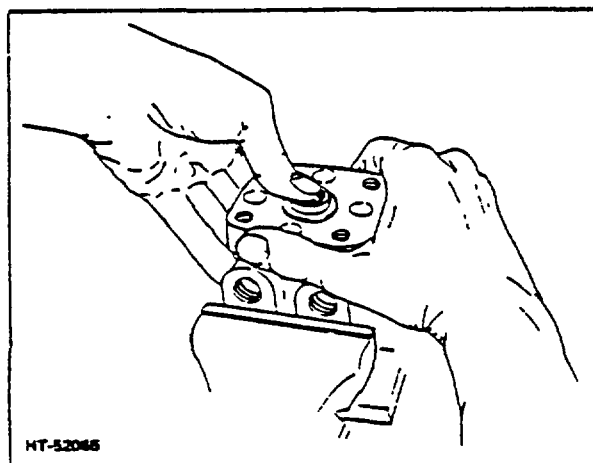


Figure 11. Removing End Cap

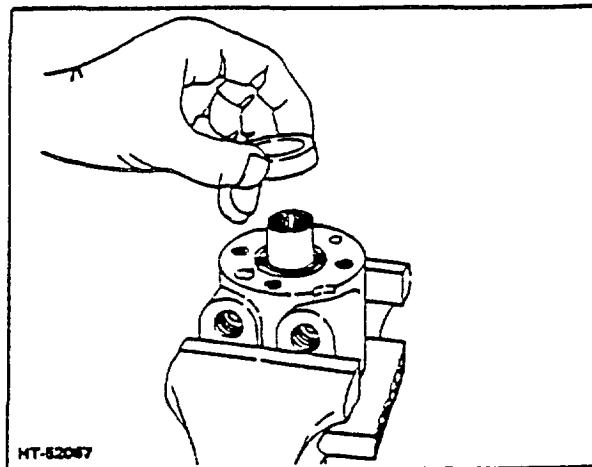


Figure 12. Removing Cap Locator Bushing

for scoring and other damage. Slightly scored parts can be cleaned up by hand rubbing with 600-grit abrasive paper. Smooth burnished areas are normal in many areas. DO NOT attempt to clean up these areas, nor mistake them for excessive wear.

3. Replace any parts found to be defective or badly worn. All seals must be replaced with new parts when unit is reassembled.
4. Place a piece of 500-grit abrasive paper face up on a piece of plate glass or similar smooth, flat surface.
5. Clean the ends of the meter section star gear by stroking it across the abrasive. This will also remove any sharp grit which could scratch other meter section components.
6. Lightly clean up both sides of the ring gear, both sides of the plate, the 14-

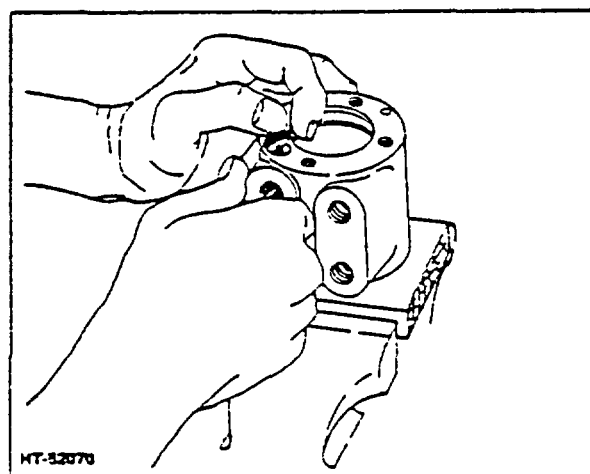


Figure 13. Removing Check Valve Seal Plug

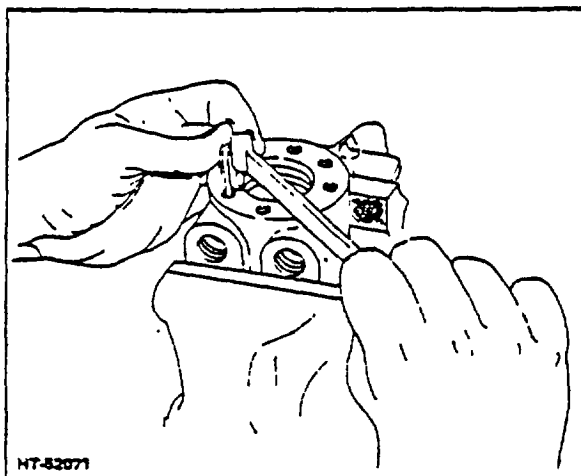


Figure 14. Removing Check Valve Seat

hole end of the housing, and the flat side of the end cap. Stroke each surface across the abrasive several times and check the results (Fig. 18). Any small bright areas indicates a burr which must be removed. When polishing the parts, hold them as flat as possible against the abrasive. After 6 to 10 strokes across the abrasive, check the part to see if it is polished. After each part is polished, rinse clean in solvent, blow dry with air, and place it where it can remain absolutely clean until reassembly.

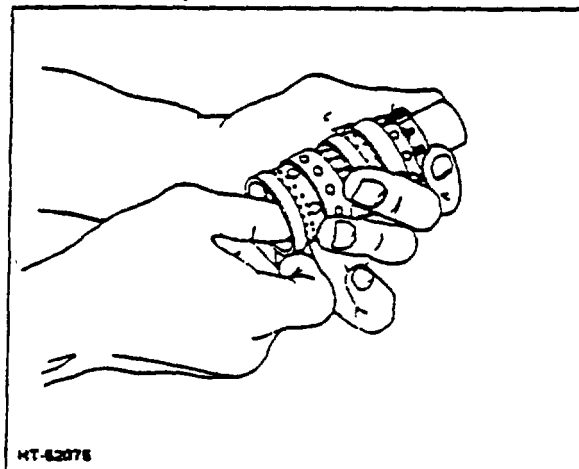


Figure 16. Removing Spool From Sleeve

3. Install check ball into check hole and make sure it rests on top of small end of spring.
4. Place the check-valve seat on hex wrench and install it in the : Check valve hole so the machined counterbore seats on the ball. Tighten the seat to 150 lb-in (Fig. 20). Check ball action by pushing ball against the spring force with a small pin.

D. REASSEMBLY

1. Lubricate all parts lightly with clean hydraulic oil at time of reassembly.
2. Install housing in vise with control end up and 14-hole end resting on a clean wooden block. Clamp lightly across the port surface and install check valve spring into check bore with large end

NOTE

Ball does not have to be snug against seat to function properly.

5. Carefully install the spool within the sleeve (Fig. 21). Be sure that spring slots of both parts are at the same end.

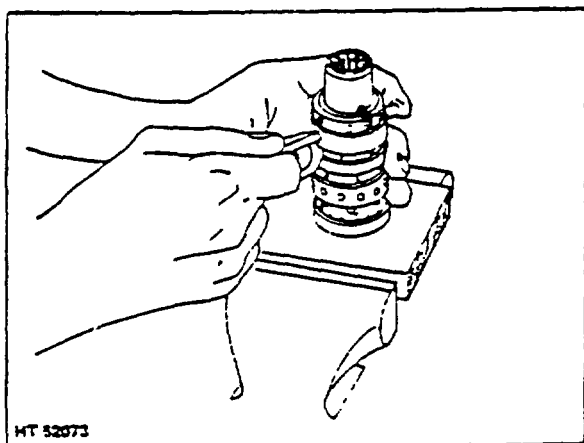


Figure 15. Loosening Spool Assembly

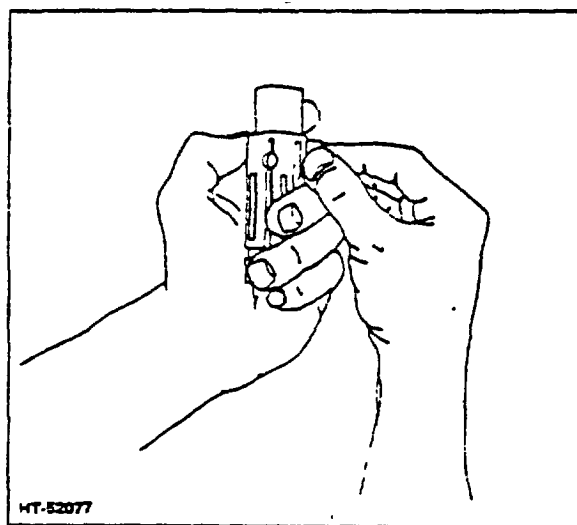


Figure 17. Removing Spring From Spool

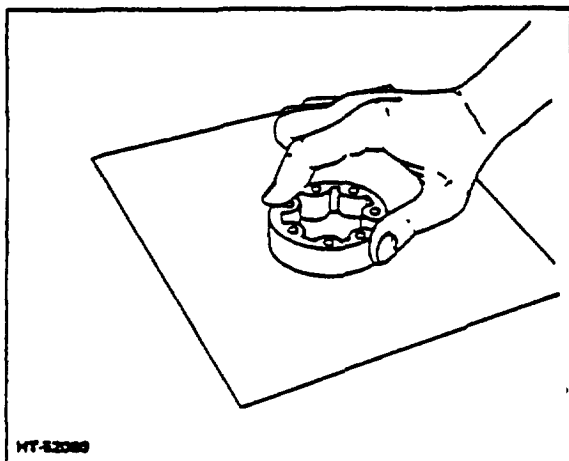


Figure 18. Polishing the Ring Gear

Rotate spool carefully while sliding parts together. Test for free rotation.

CAUTION

Spool must rotate smoothly in sleeve with finger tip force applied at the splined end.

6. With spring slots of the spool and sleeve in line, stand parts on end and insert spring installation tool through slots in both parts (Fig. 22). Position 3 pairs of centering springs (or 2 sets of three each) on bench so that extended edge is down and arched center section is together. In this position, enter one end of entire spring set into spring Installation tool.

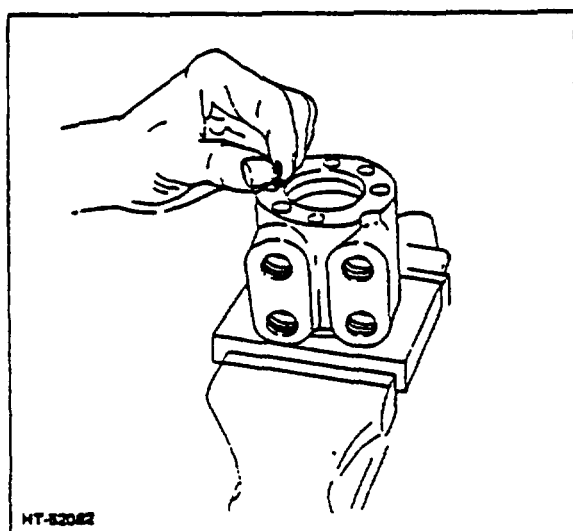


Figure 19. Installing Check Valve Spring

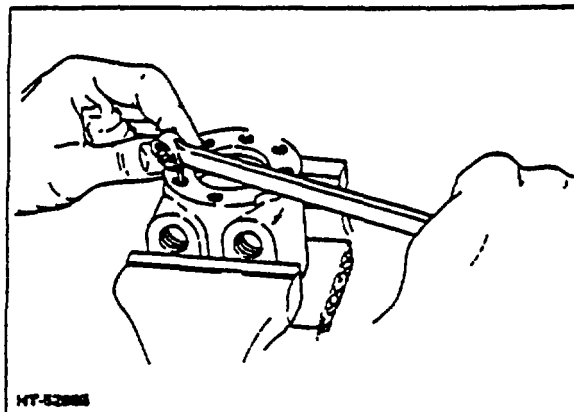


Figure 20. Tightening Check Valve Seat

NOTE

Tool is available as part number 600057 from Char-Lynn Company, 15151 Highway S, Eden Prairie, Minnesota, 55343.

7. Compress extended end of centering spring set and push it into spool-sleeve assembly, withdrawing installation tool at the same time. Be sure the spring set is centered in the parts so they can be pushed down evenly and flush with the upper surface of the spool and sleeve.
8. Install the cross pin through the spool assembly and push into place until cross pin is flush or slightly below the sleeve

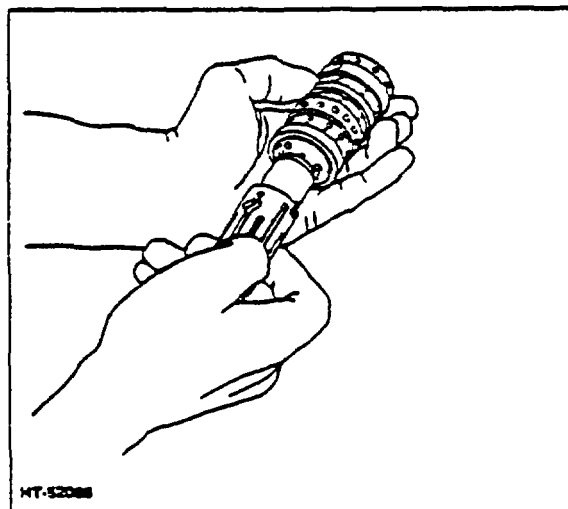


Figure 21. Installing Spool in Sleeve

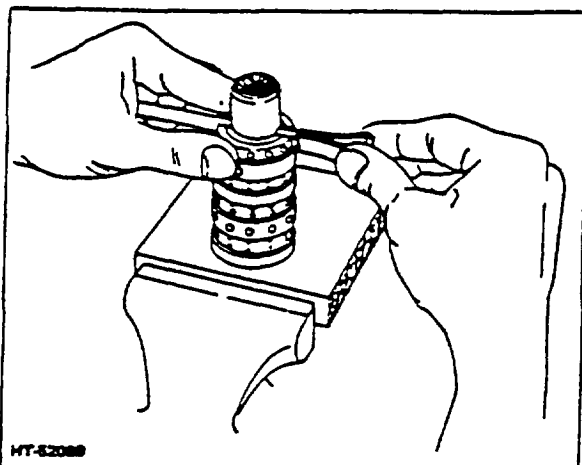


Figure 22. Installing Centering Spring Set

diameter at both ends.

- Place the housing on a solid surface with the port face down. Install the spool assembly with the splined end of the spool entering the 14-hole end of the housing first (Fig. 23). Push parts gently into place with a slight rotating motion.

CAUTION

Exercise extreme care so the parts do not cock out of position while entering.

- The spool assembly should be installed within the housing bore until it is flush with the 14-hole end of the housing. Do not install the spool assembly beyond

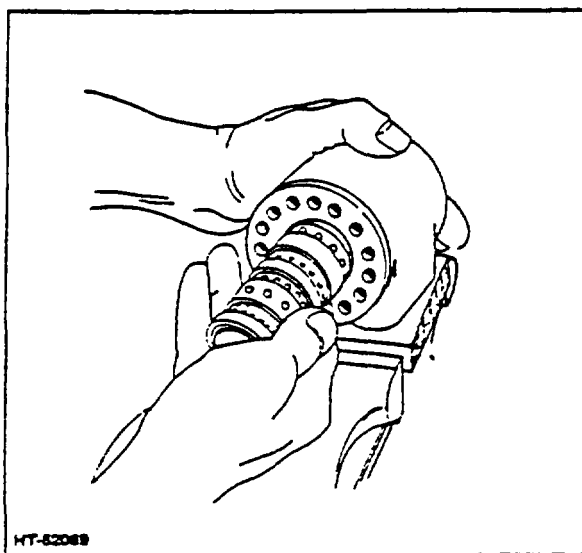


Figure 23. Installing Spool Assembly

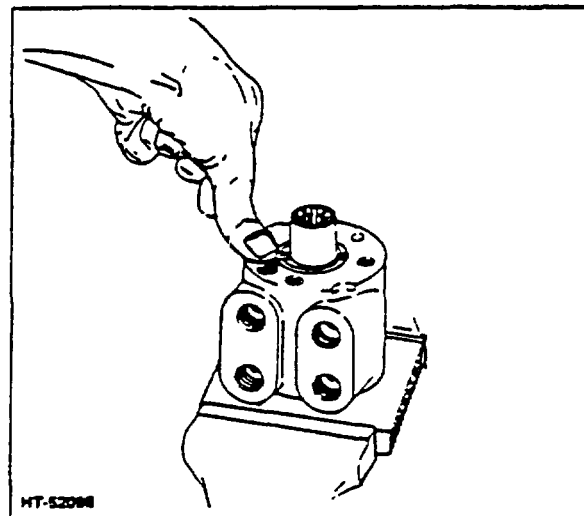


Figure 24. Rocking Check Plug During Installation

this point, because the cross pin may drop into the discharge groove of the housing. With spool assembly in this flush position, check for free rotation within the housing by turning with light finger force at the splined end. Hold the parts in this position and place the 14-hole end of the assembly on the wooden block in the vise throat and clamp lightly across the port face with the vise.

- Install a new O-ring on the check plug, and install the plug in the housing, (Fig. 24). Exert a steady pressure on the plug, rocking it slightly so the O-ring feeds in smoothly without cutting.
- Insert the cap locator bushing, large O.D. chamfer up, partially into the housing. Rotate the bushing with the fingers to seat it flatly and smoothly against the spool assembly.
- Install new mounting plate and shaft seals. Push each seal carefully into the seal groove with the fingers. The seal groove is slightly smaller than the seal to provide adequate sealing.

NOTE

The thin oil seal at exterior of mounting plate is used only to seal out dirt and generally does not need replacement. However, if it is replaced, it must be pressed into the counterbore so that the lip is directed away from the unit.

- Place the mounting plate subassembly over the spool shaft and slice it down smoothly in place over the cap locator bushing so that seals will not be disrupted in assembly (Fig. 25).

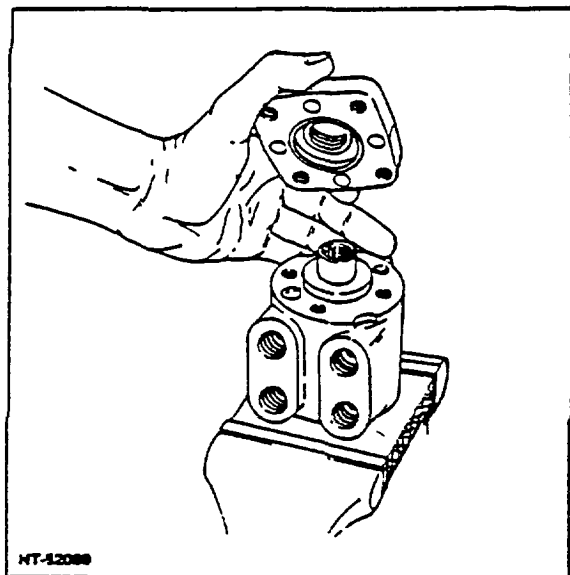


Figure 25. Installing Mounting Plate

15. Align the bolt holes in the cover with the tapped holes in the housing. Be sure the mounting plate rests fairly flush against end of housing assembly so that the cap locator bushing is not cocked. Install the 4 mounting plate capscrews and torque gradually and evenly to a setting of 250 lb-in. (Fig. 26).
16. Reposition housing in vise and clamp across the edges of the mounting plate. Be sure the spool and sleeve are flush or slightly below the 14-hole surface of the housing.
17. Wipe the upper surface of the housing clean with the palm of your hand or with your thumb. Clean each part of the flat surfaces in a similar way as it is ready for assembly.
18. Install the plate over this assembly so the bolt holes in the plate are aligned with the tapped holes in the housing.
19. Place the meter gear ring on the assembly so the bolt holes are aligned.
20. Install the splined end of the drive into the meter gear star so the slot at the control end of the drive is aligned with the valleys between the meter gear teeth (Fig. 27).
21. Push splined end of drive through the gear until spline extends about one half its length beyond meter gear star. Hold it in this position while installing it in the unit. Note position or direction of cross pin within the unit.

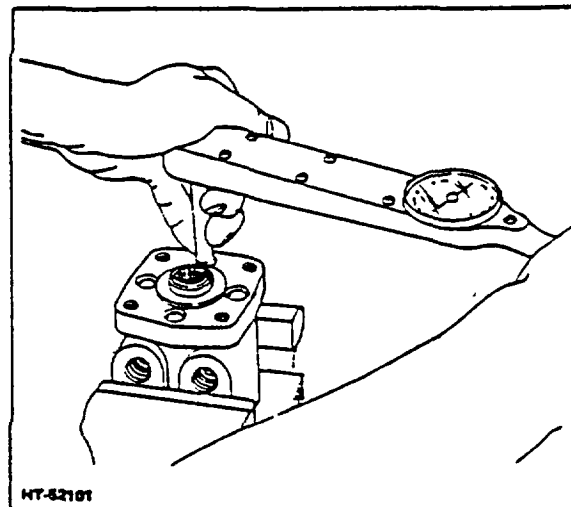


Figure 26. Tightening Mounting Plate Capscrews

Install the meter gear star into the meter gear ring and slowly position the parts so the drive does not become disengaged from the meter gear star. Hold the plate and meter gear ring in position on the assembly while the star is being installed. Rotate the meter gear slightly to engage the cross slot of the drive with the cross pin and the splined end of the drive will drop down against the plate.

CAUTION

Alignment of the cross slot in the drive with the valleys between the teeth of the meter gear star determines the proper valve timing of the unit. There are 12 teeth on the spline and 6 on the star. Alignment will be right in 6 positions and wrong in 6 positions. Should the parts slip out of position during this part of the reassembly, make certain that proper alignment is obtained.

22. Place the spacer in position at the end of the meter gear star. If spacer does not fit flush with the gear surface, the drive has not properly engaged the cross pin. After drive is correctly installed, place the meter end cap over the assembly. Install 2 capscrews, finger tight, to maintain alignment of the parts.
23. Install all 7 capscrews and torque them gradually and evenly to 150 lb-in (Fig. 28).
24. To install the steering column, rotate the shaft to engage the splines while bringing the surfaces into contact.
25. Install the capscrews and torque to 280 lb-in.

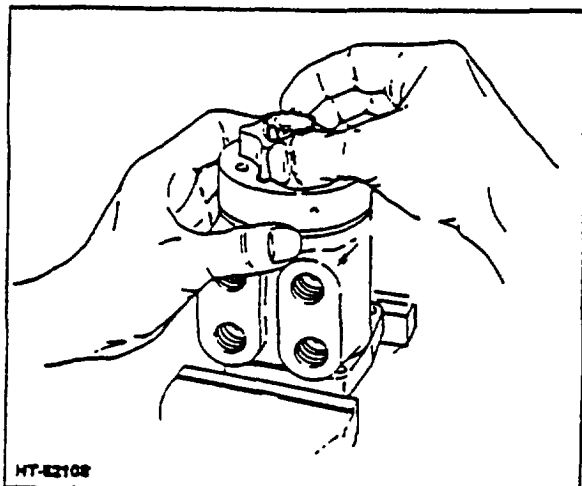


Figure 27. Installing Meter Gear Star

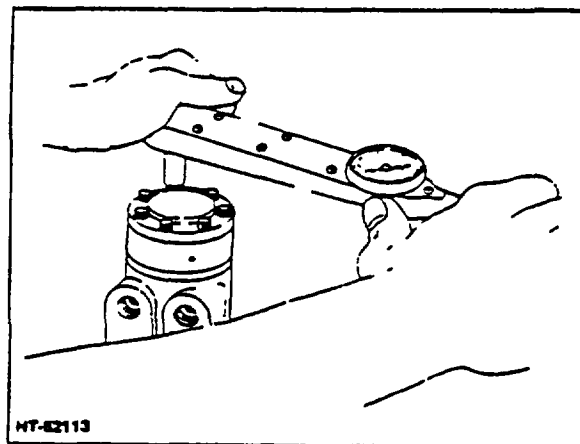


Figure 28. Tightening Capscrews

E. INSTALLATION

1. Position steering valve unit in truck and install attaching clamps and hardware.
2. Tighten bottom mounting hardware, then check column alignment and tighten upper mounting hardware.
3. Connect horn button wire to the horn.

4. Remove plugs and connect hydraulic hoses to the steering valve.
5. Install floor and toe plates and secure with attaching hardware.

F. PUMP PRESSURE ADJUSTMENT

Refer to appropriate hydraulic pump in the HYDRAULIC SYSTEM, REPAIR MANUAL MODULE.

TOPIC 4. STEERING CYLINDER AND DRAG LINK

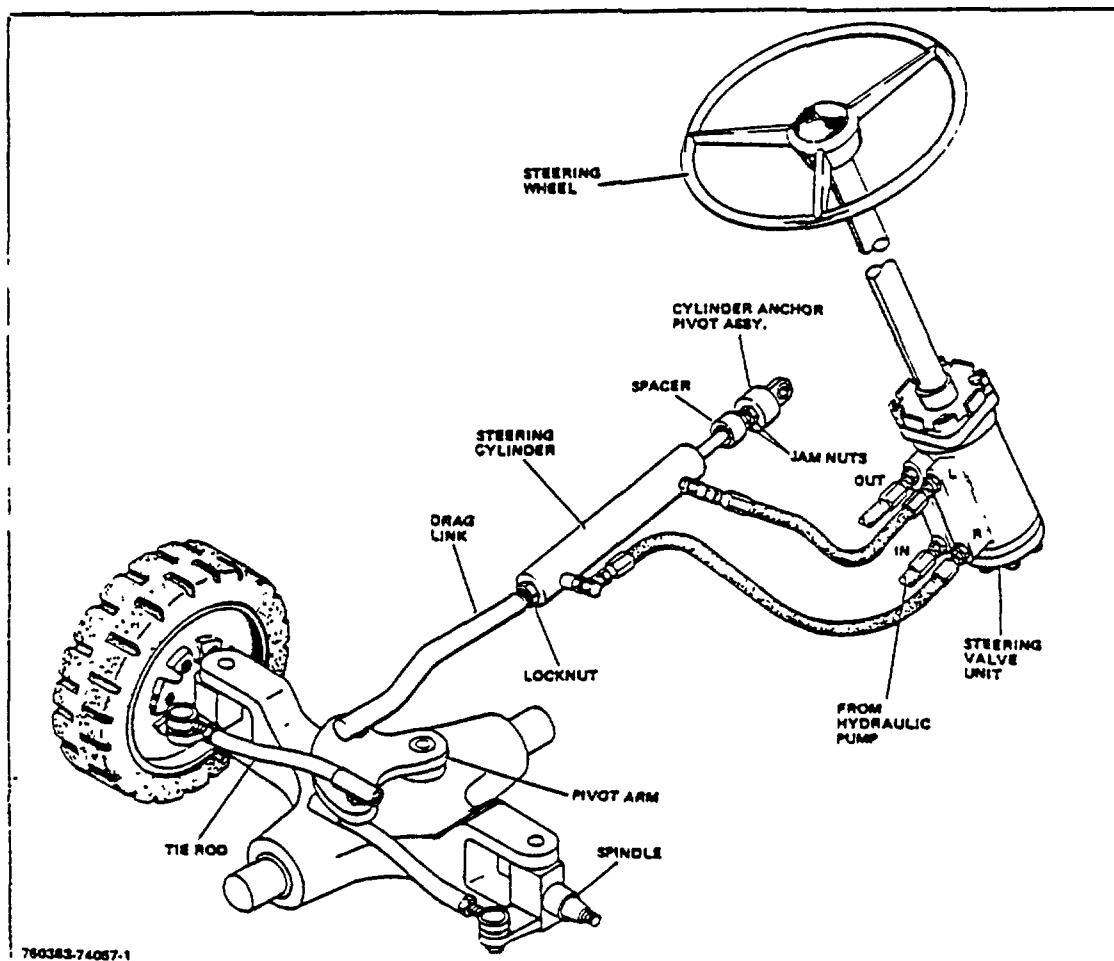


Figure 29. Power Steering System

A. REMOVAL

1. Attach a suitable hoist to the rear of the truck. Raise the rear of the truck until drag link and steering cylinder are accessible. Block front wheels for safety and place blocks under both sides of frame to support rear of truck.
2. Place a drain pan under cylinder ports and remove hoses from steering cylinder (Fig 29). Plug cylinder ports and hoses to prevent dirt from entering hydraulic system. Tag hoses for identification.
3. Loosen adjusting plug in end of drag link and remove drag link from pivot arm.
4. Disconnect drag link from steering cylinder by loosening locknut and unscrewing drag link from cylinder tube.

5. Remove cotter pin, washer, and anchor pin that secures anchor pivot assembly to cylinder anchor.

B. CYLINDER DISASSEMBLY

1. With cylinder firmly secured in bench vise hold plunger rod with proper wrench on flat spots and remove, anchor pivot assembly, jam nuts, and adjusting spacer from plunger rod.
2. Remove packing gland nut and pry out packing and wiper. Also remove O-ring, back-up ring, and nylon pellets.
3. When replacing O-ring, and back-up ring,

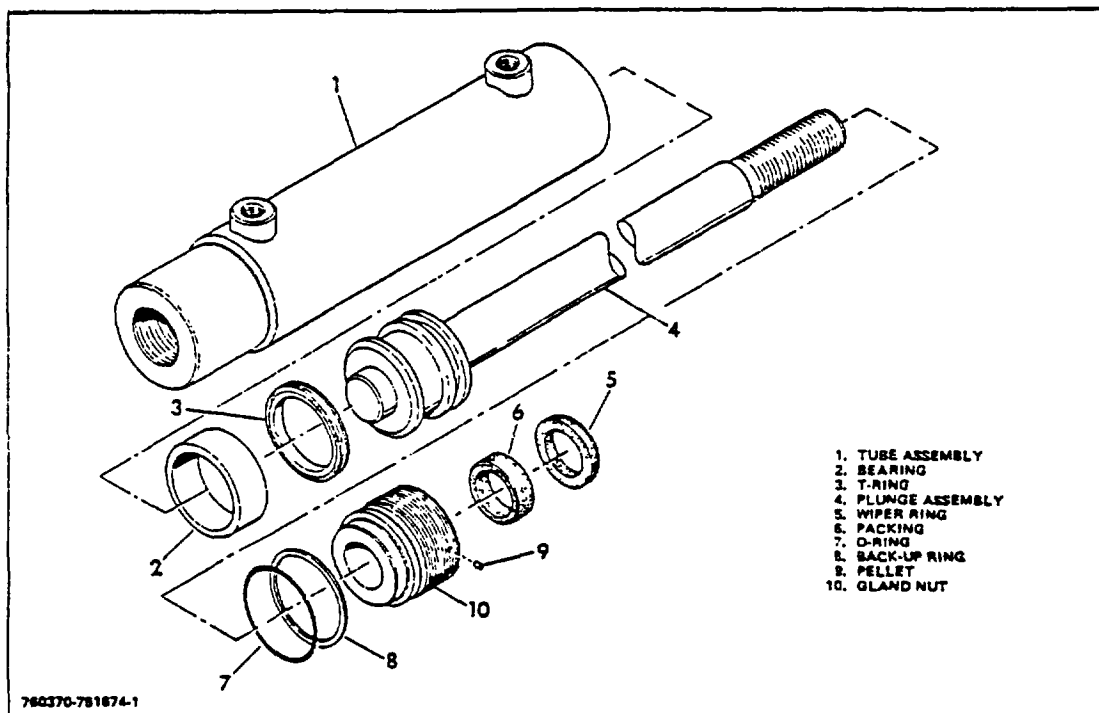


Figure 30. Power Steering Cylinder Components

lubricate with hydraulic oil and do not overstretch when sliding over edge of packing gland.

4. When replacing plunger packing seal, remove items in Steps 1 and 2 in this paragraph, and then withdraw complete piston and plunger assembly from cylinder tube.

CAUTION

Do not attempt to remove piston from plunger rod. They do not separate.

5. Remove bearing and packing from piston.
6. Thoroughly check cylinder bore for score marks or nicks. These cause damage to piston packing cups.

C. CYLINDER REPAIR

1. When packing starts to wear, renew it, otherwise parts of the packing will contaminate the oil and work into the pump or valve, thus causing damage, or malfunction.
2. Do not disassemble the unit any more than is required to replace the faulty packing.

3. Use only approved packing. Never make substitutions.
4. Before installing, inspect for nicks, cuts or flaws. Do not install if any of these faults are present.
5. All metal surfaces on which packing slides should be very smooth. If surfaces are scored or nicked, replace the parts or resurface them.
6. Soak packing in hydraulic oil before installing.
7. Sharp tools or Instruments should not be used when installing packing.
8. When installing seal rings do not stretch them more than absolutely necessary.
9. Fit packing evenly and snugly without using undue force.
10. When packing must be installed over threads or sharp edges, use shim stock to protect packing.

- a. O-rings should be pushed over sharp edges with care. They can be easily cut.

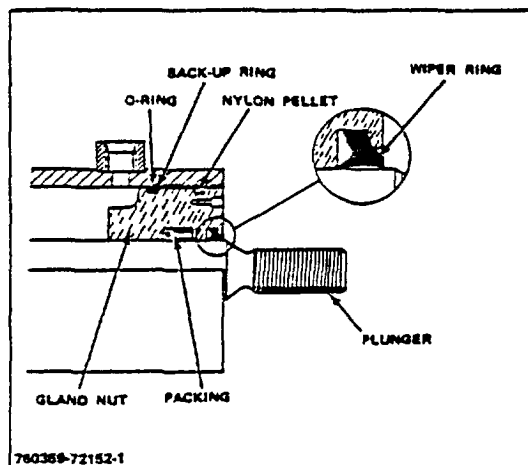


Figure 31. Cylinder Assembly

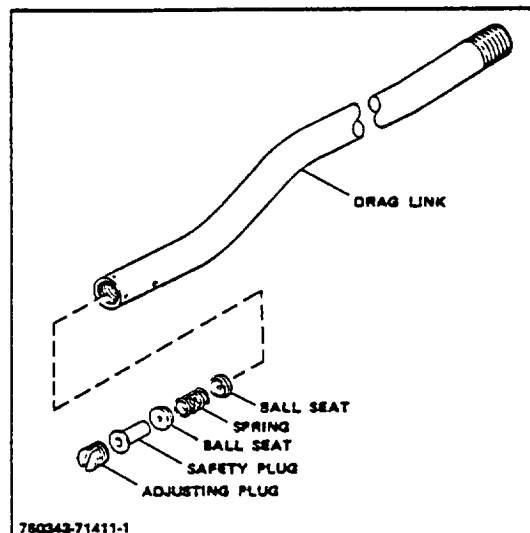


Figure 32. Drag Link Components

- b. Usually no adjustment is required upon installation; make certain that O-rings are not twisted.
- c. Check to see that the ring is of correct size to give a "squeeze" in the installed position.

- 11. Do everything possible to keep all hydraulic parts as clean as possible. Keep dirt and fine metal particles from packing and plungers. Such material can quickly damage packing and score plungers.
- 12. Inspect bushing and lube fitting in anchor pivot assembly. Replace any damaged or worn parts.

D. CYLINDER REASSEMBLY

Reverse disassembly procedure when installing new parts.

- 1. Install new packing and bearing on piston.
- 2. Install spacers on plunger rod. Be sure that outer spacer has an O-ring in groove.
- 3. Install piston and plunger assembly in cylinder tube.
- 4. Install new nylon pellets, O-ring, back-up ring, packing and wiper on packing gland nut.
- 5. Install packing gland nut on plunger assembly and cylinder tube. Gland nut must be flush with outer edge of cylinder tube.
- 6. Install adjusting spacer, jam nuts, and anchor pivot assembly on plunger rod.

E. DRAG LINK DISASSEMBLY

- 1. Remove adjusting plug, safety plug, ball seats and spring from drag link tube (Fig 32).
- 2. Clean all parts in a suitable solvent. Be certain all dirt and contaminants are removed.
- 3. Inspect all parts for cracks, nicks or other damage. Replace any parts that are worn or damaged.

F. DRAG LINK REASSEMBLY

Install one ball seat then the spring and the second ball seat followed by the safety plum and adjusting plug in the end of the drag link tube.

G. INSTALLATION

- 1. Place steering cylinder into position on truck and secure to mounting anchor with anchor pin, washer, and cotter pin. Cylinder should pivot freely in anchor.
- 2. First make certain locknut is on drag link and connect drag link to steering cylinder by screwing drag link into cylinder tube.
- 3. Connect drag link to pivot arm, screw in adjusting plug, and secure with cotter pin.
- 4. Remove plugs and connect hoses to power steering cylinder.
- 5. Make sure hoist is securely attached to

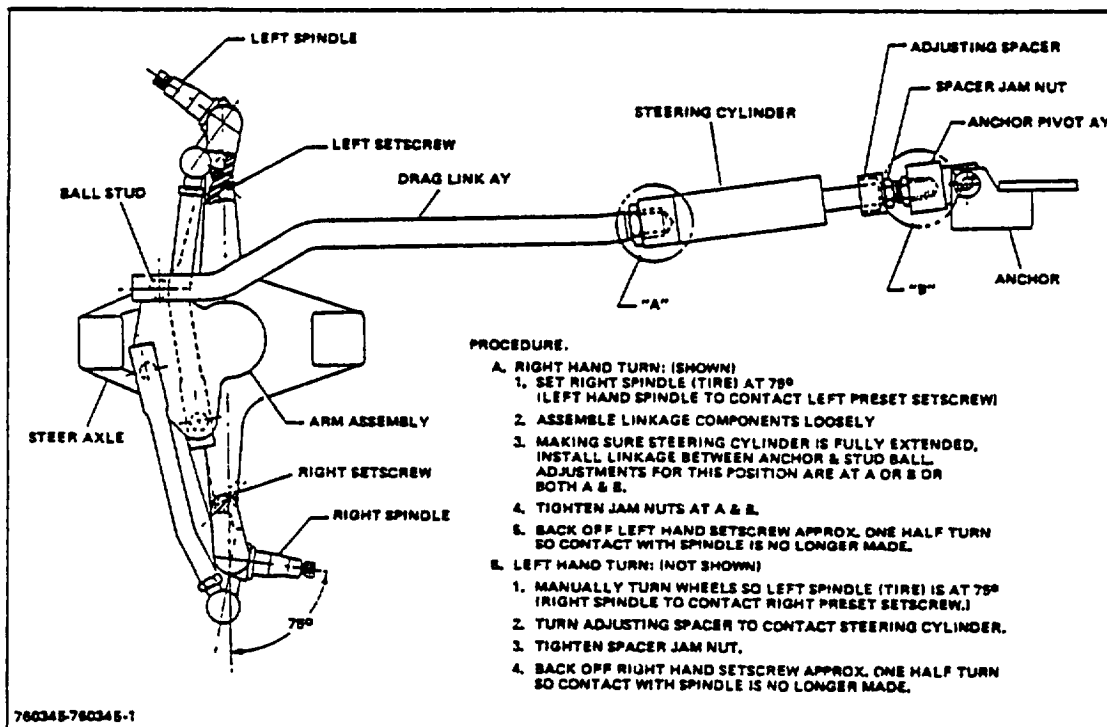


Figure 33. Drag Link Adjustment

truck, raise truck, remove blocks, and lower truck to floor.

H. DRAG LINK ADJUSTMENT

1. Make certain pivot arm stop screws have been properly adjusted (Refer to TOPIC 2. paragraph G, PIVOT ARM STOP ADJUSTMENT).
2. Turn steering wheels to full right hand turn. Power steering cylinder rod should be fully extended and pivot arm screw should hit stop simultaneously.
3. If cylinder rod is out of adjustment loosen jam nuts (Fig 33) and turn rod in or out of anchor pivot until properly adjusted. Tighten jam nuts to 150-170 lb-ft.
4. Turn steering wheels to full left hand turn. Spacer (Fig 33) should strike cylinder tube and pivot arm screw hit stop simultaneously.
5. To adjust, loosen jam nuts and turn spacer in or out until properly adjusted. Tighten jam nuts to 150-170 lb-ft.

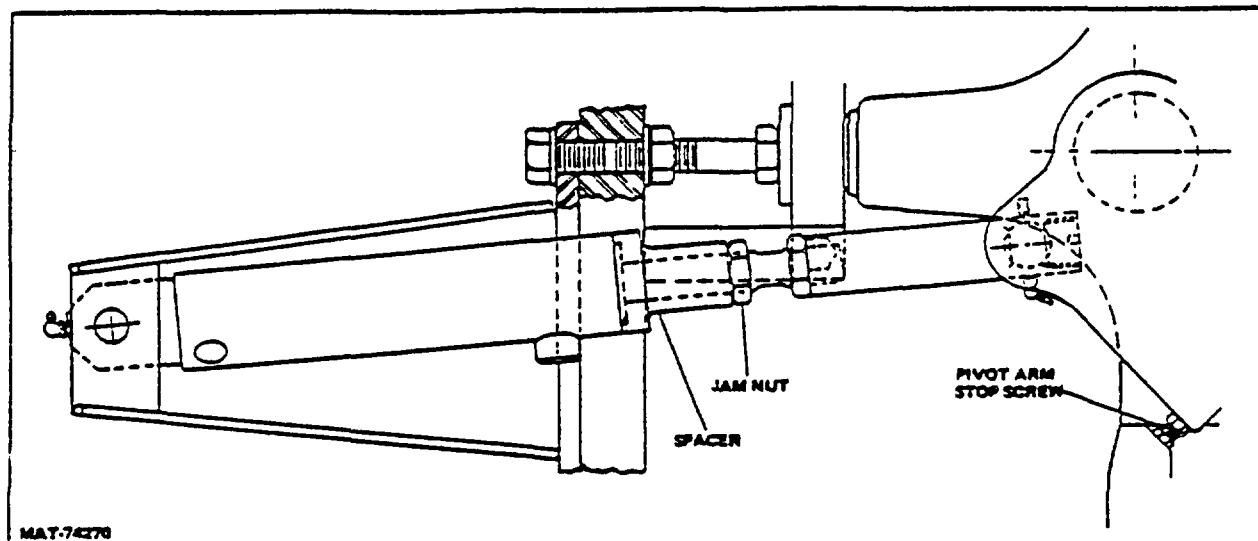


Figure 34. Cylinder Rod Adjustment for Left-Hand Turn

TOPIC 5. TIE RODS

A. REMOVAL

1. Remove cotter pins, adjusting plugs (Fig. 3, 4, and 5), ball seats, and springs from the tie rods, and separate the tie rods from the pivot arm.
2. Remove cotter pin and nut from ball socket, and remove the tie rods from the spindles. Loosen the nut on the ball socket, and remove the ball socket and nut from the tie rod tubes.

B. CLEANING AND INSPECTION

1. Clean all parts with mineral spirits or other suitable solvent, and dry with compressed air.
2. Inspect all parts for cracks, breaks, bends, other damage, and wear. Repair or replace parts as indicated by their condition.
3. Lubricate all parts except the ball sockets with an SAE 10 or 20 oil. Pack the tie rod ball sockets with high quality chassis lube.

C. INSTALLATION

Assemble the nut, ball socket, cup, seats, spring, and plug to tie rods. Position the tie rods on the pivot arm and tighten plug until seats firmly grasp ball stud on the pivot arm. Install ball socket on spindle and secure with nut and cotter pin.

D. TIE ROD ADJUSTMENT

Set the steer wheels straight ahead, parallel with the frame. If wheels are not parallel, adjust the tie rods to obtain this position. Zero degrees (0°) toe-in must be maintained at all times. To adjust tie rod, remove cotter pin and retaining nut that secures tie rod ball socket to steer wheel spindle. Remove ball socket from spindle and loosen nut that secures ball socket to tie rod. With the steer wheel parallel to the frame, turn ball socket IN or OUT until proper adjustment is obtained. Position ball socket in steer wheel spindle, install retaining nut securely, and install cotter pin; then tighten ball socket nut securely.

TOPIC 6. STEER WHEELS (PRT)

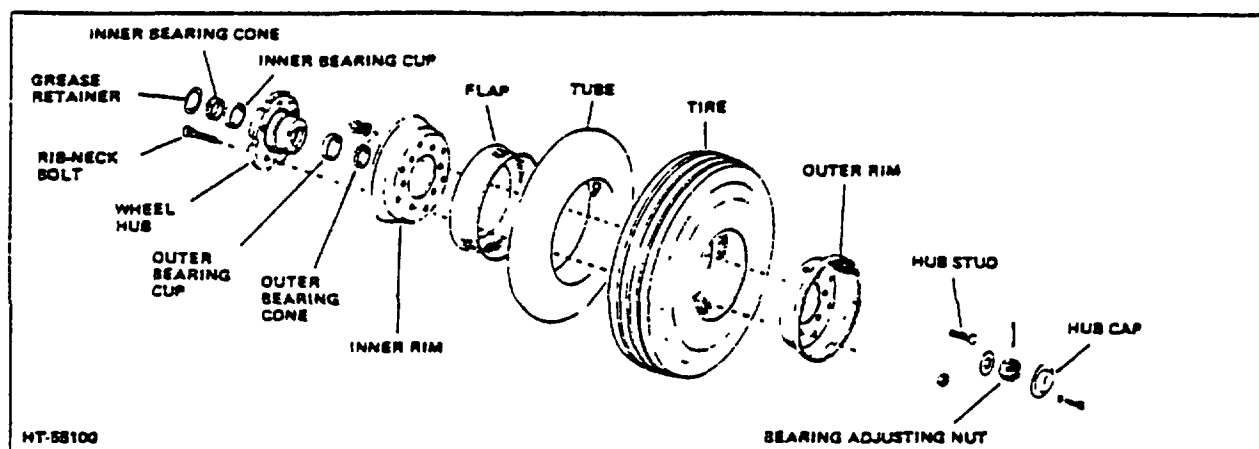


Figure 37. Steer Wheel Assembly (Pneumatic Tire)

A. REMOVAL AND DISASSEMBLY

1. Attach a suitable hoist of adequate capacity to the rear of the vehicle and raise it sufficiently so the steer wheels clear the floor. Carefully place sturdy wooden blocks under both sides of the frame. Lower vehicle enough to take stress off the hoist and so the steer wheels clear the floor and the wooden blocks.
2. Remove the capscrews and lockwashers that secure the hub cap to the wheel and remove the hub cap (Fig. 35).
3. Remove the cotter pin, retaining nut, washer, and outer bearing cone from the spindle.
4. Carefully remove steer wheel and Inner bearing cone from spindle.
5. If needed, remove bearings cups from wheel by driving them out with a soft punch.

CAUTION

Use care when removing bearing cups to prevent damage to the bearing surface.

B. CLEANING AND INSPECTION

1. Wash bearing cones and cups thoroughly with solvent to remove grease. Tap the bearing cones against a block of wood to remove deposits, and rewash with solvent. Repeat cleaning process until all old grease and deposits are removed.
2. Wipe the spindle and wheel hub with a soft cloth soaked in solvent and dry with compressed air.
3. Inspect the bearing cones, bearing cups and spindles, for nicks, scratches, scoring and wear. Replace damaged or worn parts.

C. REASSEMBLY AND INSTALLATION

1. If removed, position the bearing cups

in the wheel, and press or drive the cups into their bores. Cups must be square with the bores, and fully seated at installation.

2. Lubricate the inner wheel bearing cone with specified grease. Use an applicator designed to force lubricant into the bearing rollers.
3. Position inner bearing cone on the spindle. Lubricate the bearing cups in the wheel and carefully install the wheel on the spindle.
4. Lubricate the outer bearing cone with the specified lubricant, using an applicator. Install the bearing cone on the spindle.
5. install washer and retaining nut on spindle. While rotating steer wheel, tighten retaining nut to a torque of 50 lb-ft; then back off nut until loose (0 lb-ft). Rotate wheel alternately in each direction while tightening retaining nut until a torque of 25 lb-ft is obtained. Then back off nut 300 min to 60° max and install cotter pin.
6. Install hub cap and secure with capscrews and lockwashers, tightening capscrews securely.
7. Raise vehicle slightly with the hoist and remove the wooden blocks from under the frame. Then lower vehicle so steer wheels rest on the floor. Remove hoist from rear of vehicle.

E. REMOVAL (PNEUMATIC TIRE)

1. Ensure drive wheels are securely blocked and set parking brake to prevent truck from rolling.
2. Remove the nuts and lockwashers attaching the rims to the bolts in the wheel hub. (See Figure 37.)
3. Pull the tire and rim assembly from the hub.

F. SERVICE - TIRE AND TUBE REPAIR

If a tire is excessively worn or badly damaged replace it as follows:

CAUTION

Ensure tube has been completely deflated prior to separating rims.

1. Completely deflate the tube assembly. Remove valve core from tube.
2. To remove the steer wheel tire, tube and flap, remove the (6) six bolts, nuts and lockwashers (inside the inner rim) and separate the inner and outer rims. (See Figure 37.)

CAUTION

A safety tire rack, cage, or equivalent protection should be provided and used when inflating, mounting, or dismounting tires installed on split rims, or rims equipped with locking rings or similar devices.

3. Replace or repair the defective tire, tube or flap and reassemble in reverse order of removal by placing tube in tire, then inserting flap; place inner and outer rims in tire and secure nuts, bolts and lockwashers.
4. Insert valve core and inflate tube to specified pressure.

For good performance and long life, the correct tire pressure must always be maintained in pneumatic tires. Under-inflation will cause damage to tire cords and may allow the tires to slip on the rims, tearing out the inner tube valve stem. Over-inflation will result in excessive slippage, causing rapid tread wear. (See Figure 38.)

Air pressure should be checked ever day with an accurate tire gauge having one pound graduations. Do not allow tire pressures to drop below the recommended rating. Always be sure that the valve stem caps are in place and turned tight by hand.

Never use pliers to tighten valve stem caps. The caps prevent loss of air by keeping out any water or dirt which could otherwise enter the valve core and cause damage.

G. TIRE PRESSURE

Maximum recommended pressures for pneumatic tires are as follows:

5.00 x 8" x 6 ply.....	80 p.s.i.
6.00 x 9" x 10 ply	100 p.s.i.
6.50 x 10" x 10 ply.....	100 p.s.i.
7.00 x 10" x 10 ply	85 p.s.i.
7.50 x 10" x 12 ply	100 p.s.i.
7.00 x 12" x 6 ply	95 p.s.i.
7.00 x 12" x 12 ply	100 p.s.i.
7.00 x 15" x 6 ply	70 p.s.i.
7.00 x 15" x 12 ply	100 p.s.i.
7.50 x 15" x 10 ply	95 p.s.i.
8.25 x 15" x 12 ply	100 p.s.i.

H. INSTALLATION (PNEUMATIC TIRE)

1. Install tire and rim assembly on hub.
2. Secure tire and rim assembly with nuts and lockwashers.
3. Remove blocks, lower track and release handbrake.

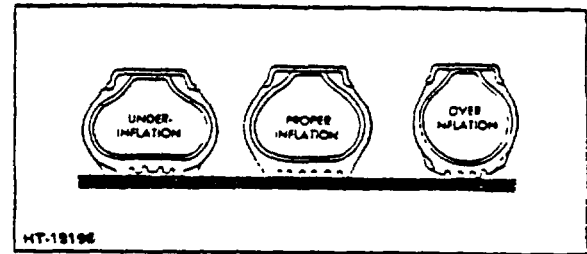


Figure 38. Tire Inflation

TOPIC 6. STEER WHEELS (SRT)

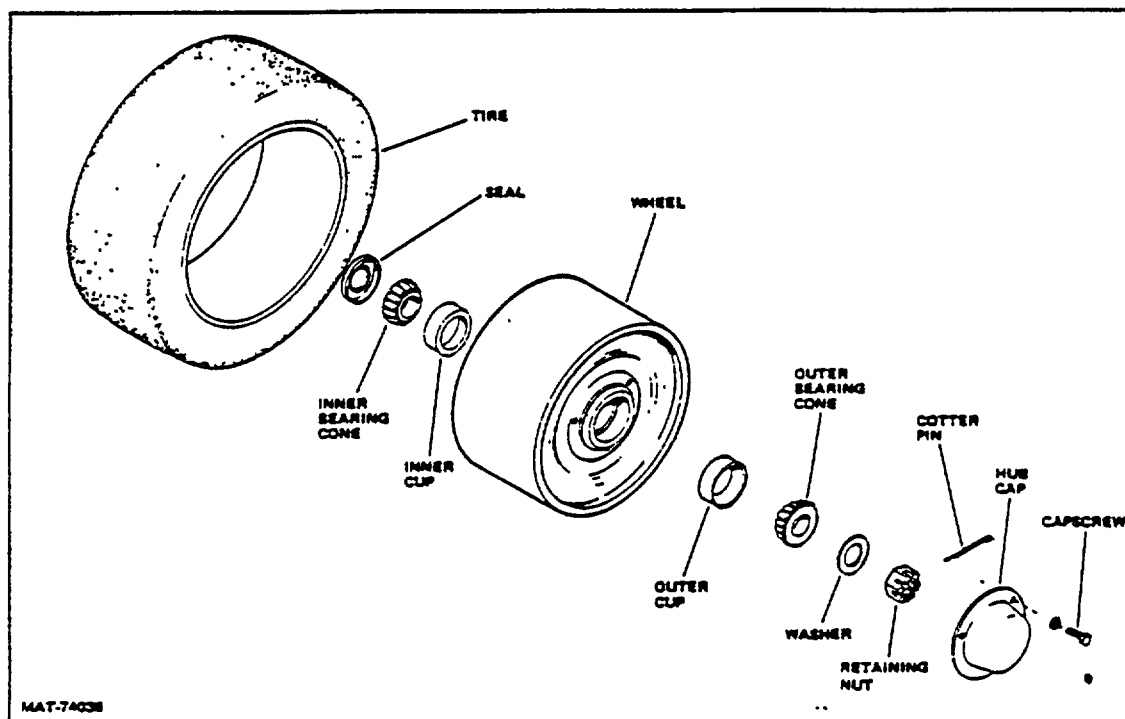


Figure 35. Steer Wheel Assembly

A. REMOVAL AND DISASSEMBLY

1. Attach a suitable hoist of adequate capacity to the rear of the vehicle and raise it sufficiently so the steer wheels clear the floor. Carefully place sturdy wooden blocks under both sides of the frame. Lower vehicle enough to take stress off the hoist and so the steer wheels clear the floor and the wooden blocks.
2. Remove the capscrews and lockwashers that secure the hub cap to the wheel and remove the hub cap (Fig. 35).
3. Remove the cotter pin, retaining nut, washer, and outer bearing cone from the spindle.
4. Carefully remove steer wheel and inner bearing cone from spindle.
5. If needed, remove bearings cups from wheel by driving them out with a soft punch.

CAUTION

Use care when removing bearing cups to prevent damage to the bearing surface.

B. CLEANING AND INSPECTION

1. Wash bearing cones and cups thoroughly with solvent to remove grease. Tap the bearing cones against a block of wood to remove deposits, and rewash with solvent. Repeat cleaning process until all old grease and deposits are removed.
2. Wipe the spindle and wheel hub with a soft cloth soaked in solvent and dry with compressed air.
3. Inspect the bearing cones, bearing cups and spindles, for nicks, scratches, scoring and wear. Replace damaged or worn parts.

C. REASSEMBLY AND INSTALLATION

1. If removed, position the bearing cups

in the wheel, and press or drive the cups into their bores. Cups must be square with the bores, and fully seated at installation.

2. Lubricate the inner wheel bearing cone with specified grease. Use an applicator designed to force lubricant into the bearing rollers.
3. Position inner bearing cone on the spindle. Lubricate the bearing cups in the wheel and carefully install the wheel on the spindle.
4. Lubricate the outer bearing cone with the specified lubricant, using an applicator. Install the bearing cone on the spindle.
5. Install washer and retaining nut on spindle. While rotating steer wheel, tighten retaining nut to a torque of 50 lb-ft; then back off nut until loose (0 lb-ft). Rotate wheel alternately in each direction while tightening retaining nut until a torque of 25 lb-ft is obtained. Then back off nut 30° min to 60° max and install cotter pin.
6. Install hub cap and secure with capscrews and lockwashers, tightening capscrews securely.
7. Raise vehicle slightly with the hoist and remove the wooden blocks from under the frame. Then lower vehicle so steer wheels rest on the floor. Remove hoist from rear of vehicle.

D. CUSHION TIRE REPLACEMENT

The wheels used on all cushion tire lift trucks are machined from castings. Any misalignment of the tire and wheel, while the tire is being pressed onto the wheel, can cause possible damage to the wheel. Because of this, a chamfer has been provided on the outside edge of the wheel and on the end of the inside diameter of the tire's metal insert. The chamfers help center the wheel and tire during the pressing operation and reduce the possibility of misalignment.

CAUTION

To prevent damage to the wheel, the tire must be installed with the chamfered side of the wheel up.

To replace cushion tire, perform the following:

1. Remove Wheel and tire assembly from lift truck.
2. Check inside diameter of metal insert

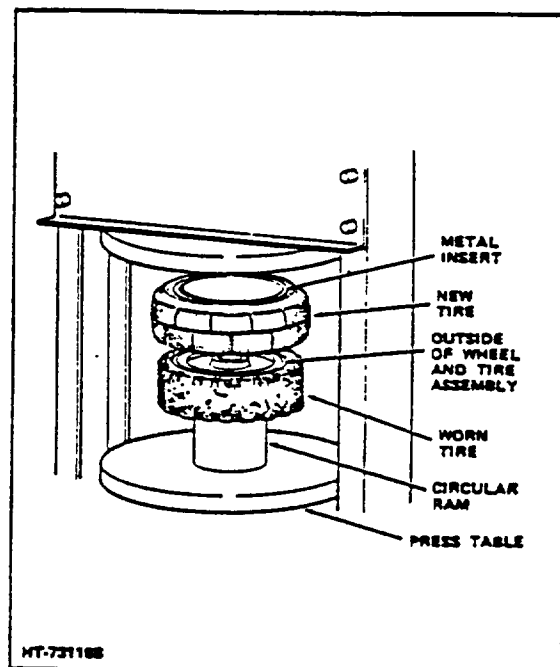


Figure 36. Cushion Tire Replacement

- of new tire. Remove any scale or rust with sandpaper. Clean inside of metal insert and lubricate it with bearing grease.
3. Place a circular ram (Fig. 37) on the press table. The length of the ram must be longer than the width of the old tire that is to be removed to allow complete removal of old tire. The outside diameter of the ram must be small enough to fit loosely in the insert of the tire, but must be large enough to rest squarely on the flat surface at the outer edge of the wheel.
4. If the outside edge of the wheel is not flush with the edge of the metal insert in the old tire, measure how far wheel is recessed inside the tire. New tire must be replaced at the same position that worn tire is installed on the wheel. A spacer, slightly smaller in diameter than the inside diameter of the tire insert and the same thickness as the depth of recess, can be used to obtain the proper amount of recess.
5. Position wheel assembly with worn tire on top of circular ram so outside of wheel is positioned upward. The outside edge of the wheel has a chamfer to help guide the new tire onto the wheel. The chamfered edge must always be the leading edge of the wheel whenever a tire is pressed onto a wheel.

6. Center the wheel assembly on top of the ram and make certain they mate-up squarely.
7. Position new tire on top of wheel and tire assembly. Align new tire and wheel so the two are concentric with each other.
8. Start pressing new tire onto wheel and worn tire off the wheel. Run press slowly for the first couple of inches of travel because this is the critical stage of the pressing operation. If tire begins to cock, stop press immediately and realign tire. A sharp jar with a soft headed mallet will usually realign tire on wheel. If wheel is to be recessed in tire, stop press after tire has been started on wheel. Position spacer (mentioned previously) inside the new tire so it rests squarely on the outer edge of wheel. Continue pressing operation until tire is correctly positioned on the wheel.
9. Release press; remove wheel and tire assembly and worn tire from press table. Wipe off grease and inspect wheel and tire assembly.
10. Install wheel and tire assembly on lift truck.

HYDRAULIC SYSTEM

TOPIC 1. HYDRAULIC PUMP

A. DESCRIPTION

The hydraulic pump (Fig 1-1) is a gear type unit driven directly from the engine. With this type of installation, the pump is always driven at engine speed.

The hydraulic pump consists of a housing, a combination end plate and mounting flange, gears, seals, bushings and capscrews. The housing also contains bores for the priority flow control valve, and the priority flow relief valve.

The relief valve pressure setting can be adjusted by turning the setscrew, located in the end of relief assembly, in or out. Turning the setscrew IN increases the spring pressure on the cone to increase the relief pressure setting, while turning the setscrew OUT will decrease the relief pressure.

When the hydraulic pump must be removed for replacement or repair, the following procedure is recommended:

B. REMOVAL

1. Remove radiator grille and components necessary to gain access to hydraulic pump.

NOTE

On truck applications where the hydraulic oil reservoir is below the supply line connection at the pump, it will not be necessary to drain the reservoir. Check reservoir to see if oil level is above or below the pump. If it is above the pump, oil will flow out of the supply (suction) line, when it is removed from the pump.

2. Disconnect hoses from fittings on hydraulic pump, and cap hoses to prevent contamination.
3. Remove capscrews and lockwashers attaching pump bracket to the engine and remove pump assembly.
4. Place the hydraulic puma assembly in a suitable work area for service.

C. DISASSEMBLY

1. Thoroughly clean outside of pump.
2. Remove capscrews which attach mounting flange to pump body. Remove flange.
3. Remove all accessible O Rings and backup rings.
4. Turn pump over, holding one hand over the front bushings and let them slide out. If bushings

stick, tap body on a piece of wood to prevent marring mating surfaces. Place bushings on clean rag to prevent damaging surfaces.

NOTE

If the front bushings are excessively tight and difficult to remove, it indicates operation with dirty oil.

5. Set pump body face-up and remove drive shaft and idler shaft.
6. Invert pump body and allow rear set of bushings to slide out. See Step 4.
7. Remove the relief port plug and remove the relief valve components, laying them out in their order of removal.
8. Remove plug from rear of body and take out steering spool and spring.
9. Wash parts in solvent, blow dry with compressed air and inspect for damage.

D. INSPECTION

1. Check bushing bores near the front of the housing, using a 2" inside micrometer. If bores measure over 1.770, discard the pump body. This indicates pump has been subjected to excessive pressures, and the system should be checked to determine the cause.
2. Measure depth of grooves cut by the gears. If deeper than .005", it results in reduced flow of hydraulic oil. The gear track should have a smooth texture radially and should be darker color than the rest of the body. If it has a sandpaper like texture, and a light gray or silvery color (when dry), it indicates pump has been running on dirty or foamy oil. Flush hydraulic system before installing clean oil, and if puma body is to be reused, hone the face flat with a fine stone and clean thoroughly; use a fine sandpaper to remove any burrs left inside the bores.
3. Inspect the shaft seals in the end plate, and if they are not damaged or have not been leaking, they can be reused. Place a straightedge across the machined surface that faces the pump body. If the flange is bowed, do not reuse.

NOTE

Bowing of flange is caused by excessive pressures, and the cause should be determined before reinstalling the pump.

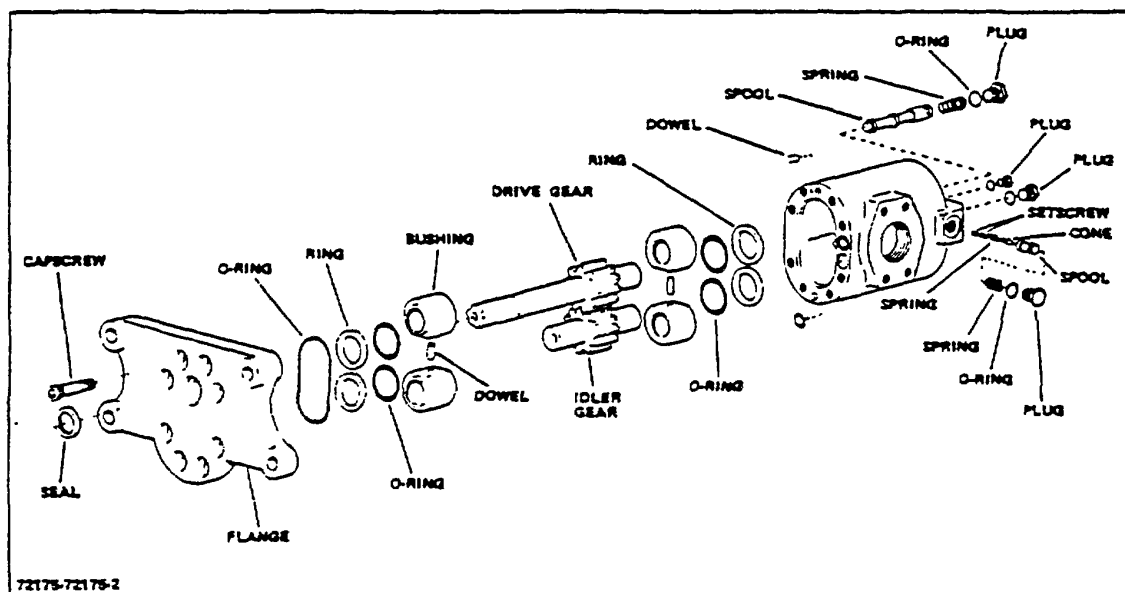


Figure 1-1. Hydraulic Pump

Looking at the plate from the pump side, measure the top left and lower right mounting holes. If the holes are larger than .441 diameter, replace the flange. This indicates pump has been running with mounting bolts loose. If flange is to be reused, hone same as body face.

4. Handle pump gears carefully when inspecting to prevent burring the teeth with resultant damage to the bushings. If the length of the gear is less than 1.320, or if gear O.D. is less than 1.754, the gear must be replaced. Check gear teeth ends and remove any burrs with a small, fine hone. If journal surfaces are blackened, and can be scratched with a pen knife, they have lost their case hardening and must be replaced.
5. When inspecting the bushings, they must be handled very carefully to prevent damage, as this makes them difficult to assemble and reduces their sealing effectiveness. The bore of the bushing, will be worn slightly oval, must not measure over 0.381 at the largest reading. The length of the bushing must not measure under 1.055. Minor cuts or scratches can be removed by honing in a circular motion with an extra fine stone. Be sure sharp edge between face of bushing and the O.D. is not broken. Erosion on the face of the bushing near the rectangular land and in the lube oil slot indicates dirt in the system.
6. Wash valve spool and dry with compressed air. It should slide freely in and out of its bore in the

body. Check diameter of all lands and replace spool if any are less than .748. Check the balance and flow orifices and clear with a fine wire, if plugged.

7. Check valve spool spring to see that it is not bent or deformed. Replace if length is less than 3-1/2".
8. Inspect the relief valve plunger for wear and erosion and replace, if damaged.
9. If relief valve spring is bent or deformed, replace it. Replace if length is less than 0.30.

E. REASSEMBLY

Before reassembling pump, lay out all parts in a sequence in which they were removed and make sure all parts are perfectly clean.

1. Place pump face up and install the two body dowels, tapping them in place with a plastic hammer. Coat body bores with light oil.
2. Place the bushing O rings and the backup rings on the shoulder at the rear of the rear bushings. Hold in place with grease, if necessary. Place the bushing dowel in the holes in the flat side of the bushings and holding the bushings together, carefully align them and slide them, O Ring side down, into the bores. Coat faces and bores of the bushings

with light oil.

CAUTION

Do not tap or force bushings into bores. They should slide to the bottom by hand force.

Be sure bushings bottom in housing and that back-up rings do not fall off.

3. Turn pump body so priority valve bore is to the left, then place drive gear (long shaft) in top bore and idler gear (short shaft) in lower bore. Coat Journals and gear faces lightly with oil.
4. Place bushing dowel between the two front bushings. Hold bushings together, and insert face down into the pump bores.

CAUTION

Do not force bushings in. They will slide in smoothly if properly aligned.

Place the bushing O Ring and then the back-up rings on the bushing shoulders.

5. Place the two drain O Rings in the two small recesses in the face of the body on the inlet side of the pump and place the body O Ring in its recess around the bushings.
6. Place the priority valve spring in the valve spool, coat the spool with oil, and install it (spring end last) into the valve bore.
7. Install plug in spool bore.
8. To replace seals in the end plate, first press in the oil seal with the lip pointed in, then press in the air seal with the lip pointed out. Install the end plate on the pump, taking care not to damage the seals on the shaft. Before sliding end plate all the way down, check to see that all O Rings and back-up rings are still in place.
9. Tighten capscrews firmly. Turn shaft of pump to see if it has some drag, but can still be turned by hand.
10. Install the relief valve components in the same position from which they were removed in the relief valve bore. Tighten plug until it bottoms.

F. INSTALLATION

NOTE

If the splines of the original coupling are worn, replace coupling.

1. Install the pump and the mounting bracket onto the front of the engine. Reconnect the hydraulic lines to the hydraulic pump.
2. Check the hydraulic oil reservoir to be sure the oil level is correct. Run pump for one minute at no load, idle speed, to allow the system to fill. Check for any pressure or air leaks in the system at this time. After one minute of running, shut engine off and recheck oil level in reservoir. If low, fill to proper level as Indicated by Full ,mark on oil level dipstick.

NOTE

If severe foaming is observed, it indicates a suction leak or improper oil, and must be corrected.

3. Set the main hydraulic relief pressure (adjustable. valve located in control valve assembly) to the following:

1900-2000 psi
4. Install a pressure gauge (2000 psi) in the pressure side of the steering circuit. With the hydraulic pump operating at full speed, turn the steer wheels to their limit. The opening pressure should be set at 1100 psi by adjusting the pump relief valve setscrew IN or OUT.
5. Always start the hydraulic pump under no load conditions to prolong pump life. Refer to SPECIFICATIONS of LUBRICANTS for proper oil to use.
6. Install the radiator grille and components which were removed to gain access to the pump.

TOPIC 2. CONTROL VALVE

A. DESCRIPTION

The hydraulic control valve (Fig 2-1) contains two basic plunger sections (lift and tilt controls; additional plunger sections can be added for accessory unit control). Each of the sections may be replaced separately. All parts of the sections may be replaced individually, except the plunger section housings and their selectively fit plungers, which must be replaced as units.

The function of the control valve is to direct the flow of the hydraulic fluid, under pressure, to the appropriate cylinders.

The control valve contains an adjustable relief valve which protects the system against damage resulting from excessive pressure that builds up when the lift or tilt cylinders reach full stroke. Excessive pressure can also result from overloads. The relief valve should be adjusted to unseat at $i.950 \pm 50$ psi.

The control valve requires very little attention with the exception of keeping the hydraulic lines and hose connections tight.

B. REMOVAL

The following procedure is recommended for proper control valve removal:

1. Make sure lift is collapsed and that mast is tilted all the way forward.
2. Disconnect control lever linkage if necessary to gain access for control valve removal. (On some new model trucks, the handles, linkage, and mounting bracket can all be removed along with the control valve.)
3. Disconnect and cap all hydraulic lines.

NOTE

Properly tag all lines so that they will be reconnected to their proper ports.

4. Remove the mounting capscrews and control valve.
5. Clean outside of valve with a solvent and dry with compressed air.
6. Remove all fittings and place control valve in a suitable work area.

C. DISASSEMBLY

During disassembly, particular attention should be given to identification of parts for reassembly. Spools are selectively fitted to valve bodies and must be returned to

the same bodies from which they were removed. Valve sections must be reassembled in the same order.

1. Remove the four tie studs and nuts and separate the valve sections. Be careful not to destroy or lose spacers.
2. Remove the two screws which secure the spool end cap and remove the cap (and switch bracket, if used). If the cap has a detent assembly, screw out the detent plug and remove the spring and piston. Remove the O Ring from the cap.
3. Slide the spool out of its bore and remove the O Rings from the groove in the spool and from the valve body around the spool bore. Do not remove the centering spring, retainers or the spool extension unless it is necessary to replace them.
4. Grip the stem of the check valve plug with pliers and pull it out of the valve body. Remove the O Ring and back-up ring. Remove the spring and ball from the valve body.
5. Screw out the plug which retains the relief valve and remove the O Ring from the plug. Remove the spring and the relief valve sub-assembly. Remove the solid plug.
6. Remove the fitting. O Rings and back-up ring.

D. CLEANING, INSPECTION AND REPAIR

1. Discard all old seals. Wash all parts in a clean mineral oil solvent and place them on a clean surface for inspection.
2. Carefully remove by light lapping. Be certain there is no paint or burring on mating surfaces of valve bodies.
3. Inspect the valve spools and bores for burrs and scoring. If scoring is not deep enough to cause objectionable leakage, the surfaces can be polished with crocus cloth. If scoring is excessive, the valve body and spool must be replaced. Check the valve spool for freedom of movement in the bore.
4. Check the relief valve for smooth movement in its bore. The valve should move from its own weight.

E. REASSEMBLY

NOTE

Coat all parts with clean hydraulic oil to facilitate assembly and provide initial lubrication. Petroleum jelly can be used to hold seal rings in place on assembly.

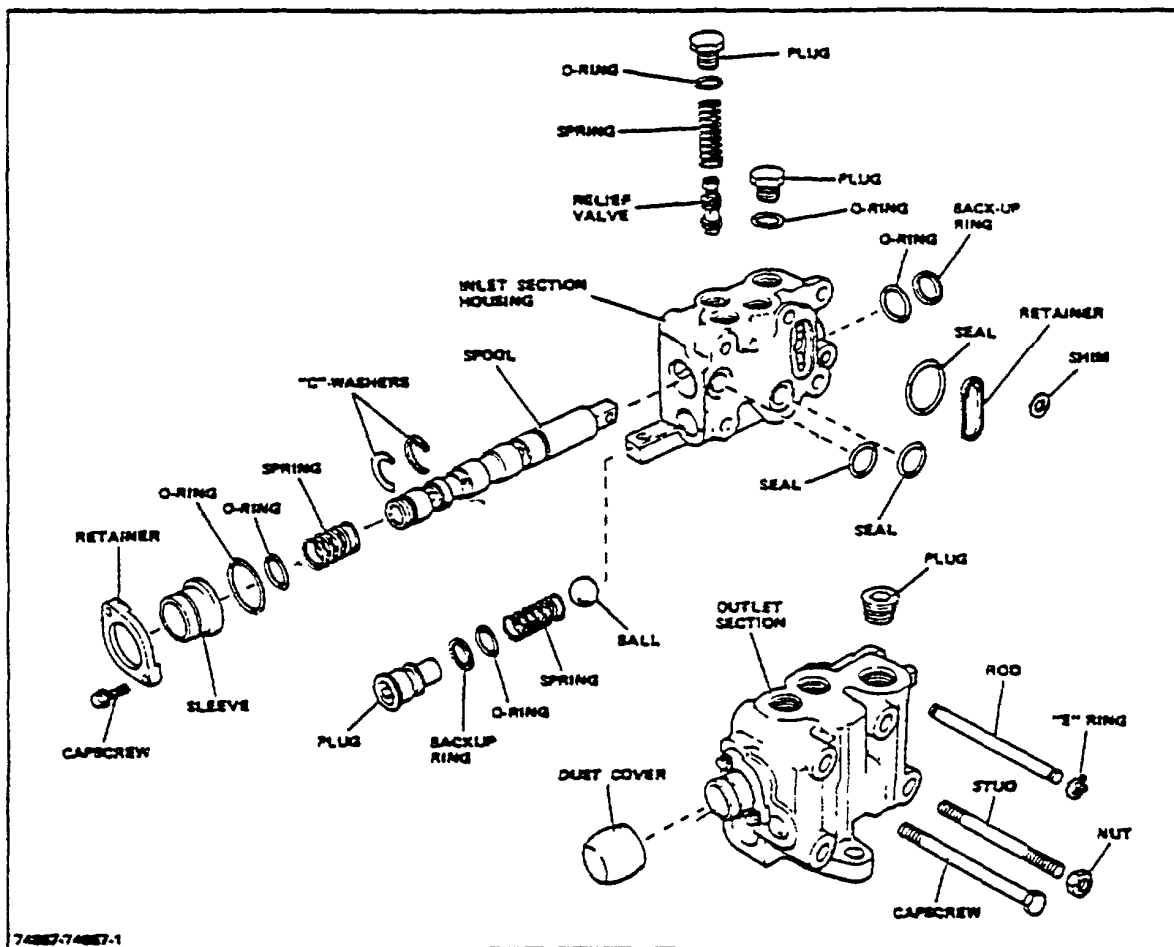


Figure 2-1. Control Valve

1. Install the back-up ring and then the O Rings on the fitting. Tighten the fitting securely, but DO NOT over tighten.
2. Install the O Ring on the relief valve plug. Place the relief valve assembly in its bore, hex nut end up. Install the spring and plug and tighten the plug securely but DO NOT over tighten.
3. Install a new back-up ring and O Ring on the check valve plug with the O Ring toward the spring and ball. Place the ball and spring in the body and install the plug. Be sure the hole in the plug lines up with the stud hole in the body. Check valves are not used in "8" spool sections.
4. If the centering spring was removed, install the spring and retainers on the spool. Place the O Ring in the groove around the spool bore and install the O Ring on the spool. Install the spool in the bore.
5. Install the O Ring in the end cap groove and install the cap, switch bracket (if used) and attaching screws. Torque the screws securely. On models with detents, grease all the detent parts. Install the end cap and check for proper spool extension alignment. Install the piston, spring and plug. Be sure to screw the plug in all the way.

CAUTION

Make sure all mating surfaces of valve bodies are free of burrs and paint.

6. Install seal rings and the seal ring retainer in the grooves in the body of each inlet and center section. Use petroleum jelly to hold the seals in place. Carefully place the sections together in the same order in which they were removed. Coat the stud threads with "Loctite" or similar sealant and install the studs. Tighten the nuts to 15 lb ft torque. If levers are used, install pins in

each spool and assemble the levers, fulcrum rod and "E" washers.

F. INSTALLATION

1. Ensure that all fittings have been replaced and properly tightened.
2. Place control valve assembly in its relative mounting location and insert the attaching capscrews.
3. Uncap and connect the hydraulic lines as marked.
4. Reconnect the lever linkages if disconnected.
5. After complete reassembly has been assured, run the hydraulic system (i.e., operate the control, lift control, tilt control and any auxiliary functions associated with the hydraulics) for about 5 minutes to eliminate any air present in system. The internal construction of the hydraulic reservoir will "bleed-off" any trapped air in the hydraulic oil as it flows through the reservoir. Recheck the hydraulic oil level (reservoirs) after operating the hydraulic system and refill, if necessary.

G. ADJUSTMENT

1. Linkage

Improperly adjusted or out of adjustment linkage can result in binding or bending of the control valve linkage.

Ensure that tilt and lift control levers and associated linkage travel freely and smoothly, through forward and backward movement, of each lever and that the control valve plungers respond accordingly. Adjust, bend, repair, or replace as necessary.

Be certain that pivot points or other mating surfaces are free of accumulated sludge and remain lightly lubricated to function smoothly.

2. Relief Valve Adjustment

Whenever the control valve or hydraulic pump has been repaired or replaced, check the relief valve and adjust to open at specified pressure. Check and adjust the relief valve (Fig 2-1) located in the lift section of the control valve as follows:

- a. Gain access to the control valve; actual location varies between truck models.
- b. Some adapters have a plug in them where a pressure gauge can be installed. If unit is not equipped with this type adapter, disconnect the hydraulic tube at the inlet part of the control valve.
- c. Install a tee fitting on the end of the hydraulic tube and connect the tee fitting to the adapter in the inlet port.
- d. Install a pressure gauge with a 0 to 3000 psi range in the tee.
- e. Place shift lever in neutral position, turn key switch ON and start engine.
- f. Pull the tilt lever back to retract the lift cylinders and hold lever in this position.
- g. While holding lever, observe the needle on the pressure gauge. When pressure reading of 1950 psi is attained, the needle will stop, indicating relief valve opening.
- h. If the relief valve opens below or above 1950 t So psi, it must be adjusted as follows:
 - (1) Turn key switch OFF.
 - (2) When pressure gauge reads zero, remove relief valve plug.
 - (3) Check relief valve assembly and valve spring for damage. Replace defective parts.
 - (4) Install valve assembly with spring, O Ring, and plug.
 - (5) Repeat Steps e through g.
 - i. Turn key switch OFF.
 - j. Remove pressure gauge and tee; then install hydraulic tube to control valve fitting.

TOPIC 3. TILT CYLINDER

A. DESCRIPTION

The action of the tilt cylinder is a straight line motion. Any misalignment between the cylinder and the piston will cause binding, rapid wear of packing and the packing gland, rapid wear of piston rod and packing, and will tend to break the weld on the cylinder case.

The welded section is designed to hold hydraulic pressure and should not be called upon to sustain any bending action due to misalignment.

To remove the tilt cylinder for replacement or repair, the following procedure is recommended:

B. REMOVAL

The tilt cylinders are mounted under the toe plate and floor plate. To remove tilt cylinders the following procedure is recommended:

1. Set hand brake. Operate tilt cylinder lever and put mast in forward position. Turn ignition switch to OFF position. Secure mast in position with a chain hoist.
 2. Remove cotter pin and yoke pin.
- CAUTION**
Protect tilt cylinder rod from truck frame and handling mishaps.
3. Remove toe plate and floor plate.
 4. Disconnect hydraulic lines at tilt cylinder.

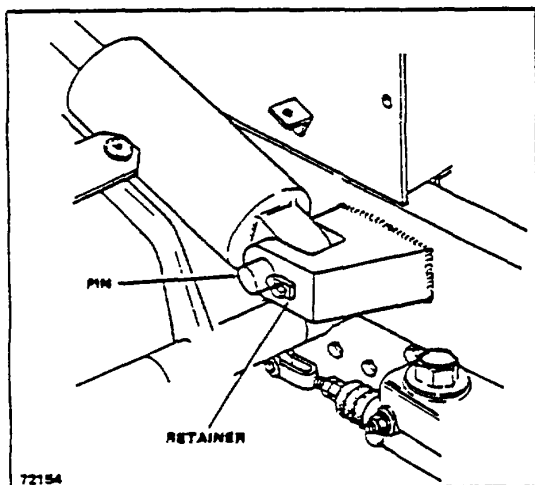


Figure 3-1. Tilt Cylinder Anchor Pin

5. Remove capscrew and pin retainer (Fig 3.1).
6. Insert drift pin (Fig 3-2) in hole provided for it in tilt cylinder mounting pin, and remove pin. The tilt cylinder may then be lifted from location.

C. TILT CYLINDER DISASSEMBLY

1. With tilt cylinder firmly secured in bench vise, loosen capscrew on yoke and remove yoke from plunger rod. Record number of turns required to remove yoke.
2. Remove packing gland and pry out packing and wiper. Also remove O Ring, back-up ring, and nylon pellets.
3. When replacing O Ring, and back-up ring, lubricate with hydraulic oil and do not overstretch when sliding over edge of packing gland.
4. When replacing plunger packing seal, remove items in Steps 1 and 2 in this paragraph, and then withdraw complete piston and plunger assembly from cylinder tube.
5. Remove spacers from plunger rod. An O Ring is installed in the end spacer only.

CAUTION
Do not attempt to remove piston from plunger rod. They do not separate.

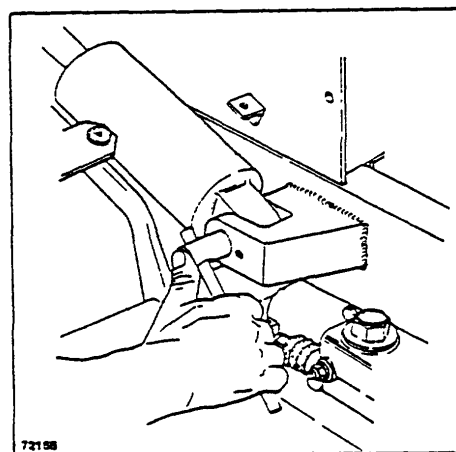


Figure 3-2. Tilt Cylinder Pin Removal

6. Remove bearing and packing from piston.
7. Thoroughly check cylinder bore for score marks or nicks. These cause damage to piston packing cups.

D. TILT CYLINDER REPAIR

1. When packing starts to wear, renew it otherwise parts of the packing will contaminate the oil and work into the pump or valve. thus causing damage, or malfunction.
2. Do not disassemble the unit any more than is required to replace the faulty packing.
3. Use only approved packing. Never make substitutions.
4. Before installing, inspect for nicks, cuts or flaws. Do not install if any of these faults are present.
5. All metal surfaces on which packing slides should be very smooth. If surfaces are scored or nicked, replace the parts or resurface them.
6. Soak packing in hydraulic oil before installing.
7. Sharp tools or instruments should not be used when installing packing.
8. When installing seal rings do not stretch them more than absolutely necessary.
9. Fit packing evenly and snugly without using undue force.
10. When packing must be installed over threads or sharp edges, use shim stock to protect packing.

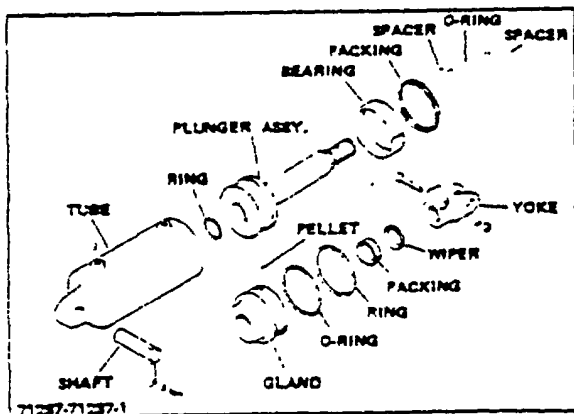


Figure 3 -3. Tilt; Cylinder Components

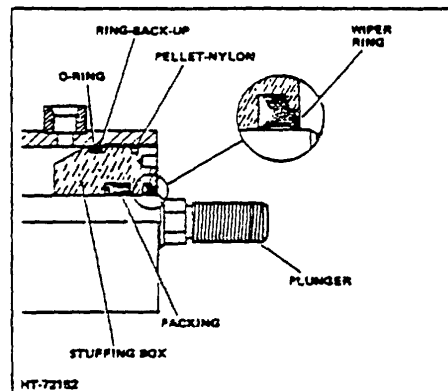


Figure 3.4. Tilt Cylinder Assembly

- a. O Rings should be pushed over sharp edges with care. They can be easily cut.
 - b. Usually no adjustment is required upon installation; make certain that O Rings are not twisted.
 - c. Check to see that the ring is of correct size to give a "squeeze" in the installed position.
11. Do everything possible to keep all hydraulic parts as clean as possible. Keep dirt and fine metal particles from packing and plungers. Such material can quickly damage packing and score plungers.

E. TILT CYLINDER REASSEMBLY

Reverse disassembly procedure when installing new parts.

1. Install new packing and bearing on piston.
2. Install spacers on plunger rod. Be sure that outer spacer has an O Ring in groove.
3. Install piston and plunger assembly in cylinder tube.
4. Install new nylon pellets, O Ring, backup ring, packing and wiper on packing gland.
5. Install packing gland on plunger assembly and cylinder tube. Gland must be flush with outer edge of cylinder tube.
6. Install yoke on plunger rod same number of turns as when removed. Tighten capscrew on yoke.

F. INSTALLATION

1. Place the tilt cylinder in the mounting bracket lining up holes and insert mounting pin.
2. Install pin retainer and capscrew.
3. Install hydraulic lines, making sure connections are tight. Check for leakage before installing toe and floor plate.
4. Install yoke pin at back of mast. Install cotter pin.
5. Check tilt cylinders to make sure they bottom simultaneously.

MEMO

MASTS, CARRIAGES AND FORKS**TOPIC 1. MASTS****A. DESCRIPTION**

The conversion of the hydraulic system fluid energy into mechanical energy necessary in lift truck operation is accomplished by the mast assembly.

An EXTRA LIFT mast is available for all models of lift trucks, while the HIGH FREE-LIFT, TRI-LIFT, TRI FREE-LIFT and TRI-MAX masts are available for certain model trucks only.

The extra-lift and the high free-lift masts are basically the same in construction with two structural uprights. The difference between the two is the type of lift cylinder used and its mounting arrangement within the mast structure. The TRI-LIFT, TRI FREE-LIFT and TRI-MAX masts consist of a nested assembly of three (3) structural uprights (channels) or beams.

All masts but the TRI-LIFT, and some of the larger capacity TRI-MAX models, utilize two (2) lift chains for safety and to minimize off-center loading. Due to the operational mechanization, all TRI-LIFT and some of the larger capacity TRI-MAX masts, make use of four (4) lift chains. The chain anchors are individually adjustable to ensure equal tension and a level fork carriage. The chains are centrally located so as to offset any bending action on the lift cylinder plunger(s).

Should it become necessary to re-center the mast channel uprights for smooth and even sliding, the following alignment mechanics are provided (adjustment method varies with the model and load capacity of mast employed) : a Wear plates and aligning shims. b Roller bearings and aligning shims: c Adjusting plugs. Each of these methods of adjustment will be discussed in detail in the applicable mast service topics.

The removal procedure for all masts is essentially the same and is recommended as outlined as follows.

B. REMOVAL

1. Remove the carriage forks.
2. Block the inner mast to give 20" to 24" clearance between bottom of mast and floor.

NOTE

Remove the capscrews and spacer form the carriage roller supports, if applicable.

3. Attach a suitable chain hoist to carriage assembly. remove chain anchor pins and disconnect chains from carriage.
4. Lower carriage out of bottom of inner mast, and move to the side, away from work area. Remove chain hoist.
5. With mast fully lowered, attach a sling from an overhead crane to the mast lift-eyes to secure entire mast assembly during removal.

CAUTION

Be certain overhead hoist is rated to safely support mast assembly weight.

CAUTION

Fully retract or lower lift cylinders.

6. Disconnect tilt cylinders from outer mast.
 7. Disconnect hydraulic line(s) from lift cylinder(s).
 8. Raise overhead crane high enough to relieve pressure on the mast pivot pins. Remove pivot pins from mast and lift truck frame; use crane to lay mast flat on suitable supports with cylinder(s) (cluster) facing up.
- C. TRI-MAX MAST (CLUSTER TYPE) DISASSEMBLY AND INSPECTION**
1. Remove the lift cylinder cluster assembly and intermediate lift cylinder assembly (refer to TRI-MAX CYLINDER CLUSTER REMOVAL Topic).
 2. Remove the cylinder bracket from the top support on the intermediate mast section, and disassemble and remove the channel restraint interlock assembly. (Refer to Figure 1.)
 3. Carefully slide the inner and the intermediate mast sections out of the top of the outer mast section, then remove the inner mast-section from the intermediate mast section.

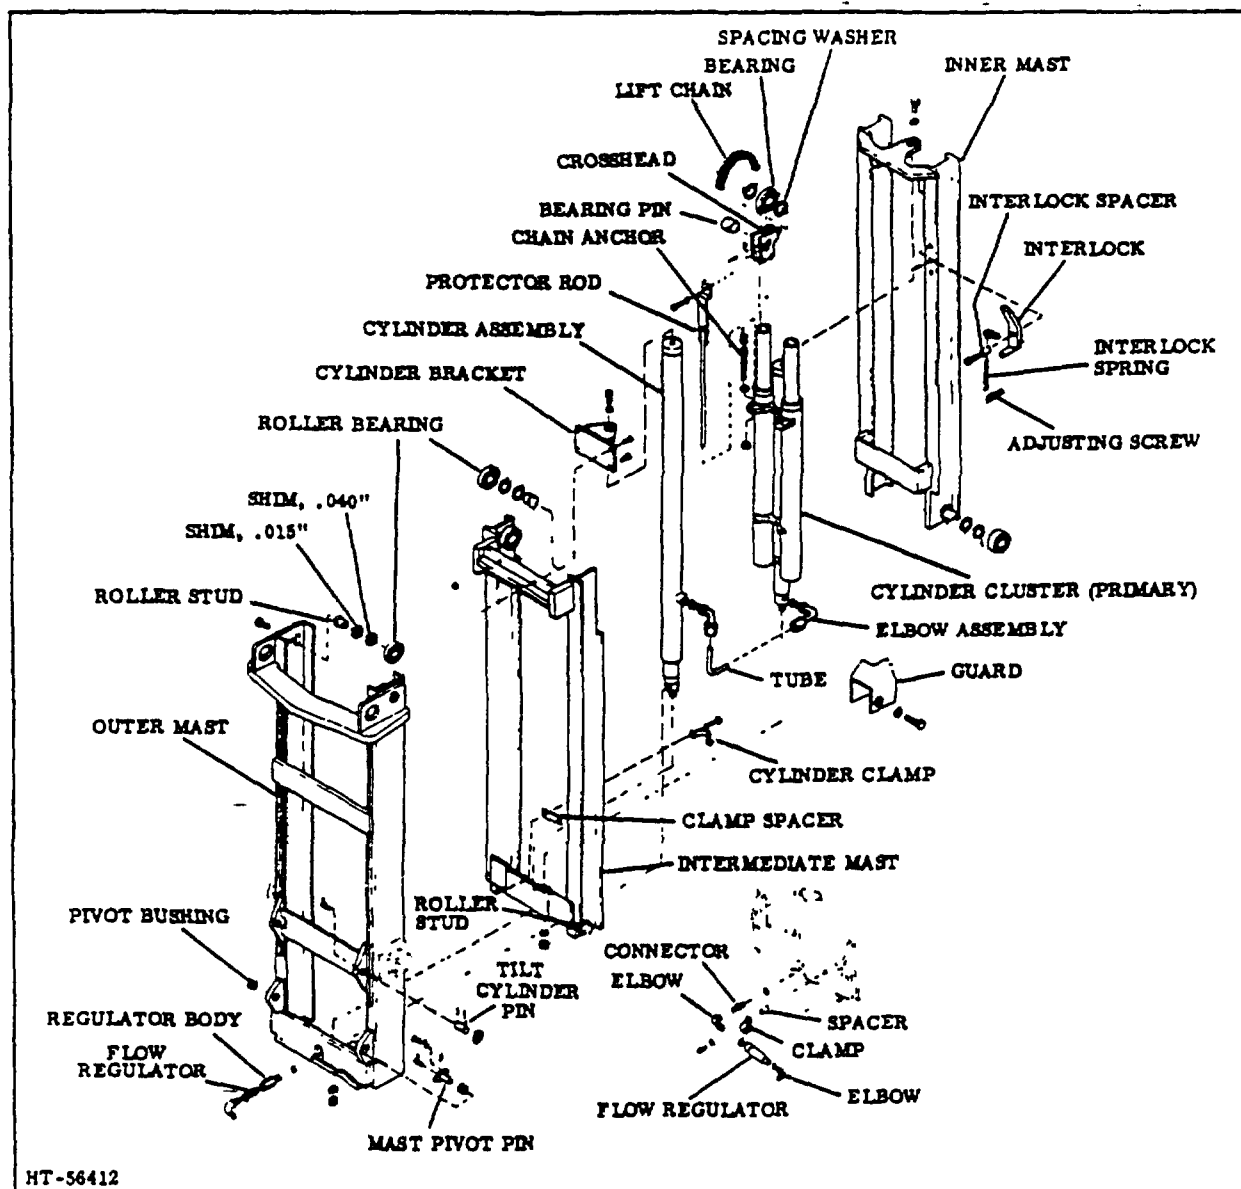


Figure 1. Tri-Max Mast (Cluster Cylinders)

4. Remove the bearings and studs from the top of the outer mast.
5. Remove the bearings and shims from the studs remaining on the mast sections.
6. Clean all parts with an acceptable solvent.
7. Carefully inspect all parts for evidence of wear or damage, and replace any worn or badly damaged parts.
8. in the event of any bearing failure where the inner race has been fractured, carefully examine the respective bearing stud for nicks. Replace any studs with nicks or other evidence of damage.
9. It is recommended that whenever a stud or bearing that is mounted with a screw or capscrew has been replaced, that the screw or capscrew be replaced too.
10. Repair cracks and minor breaks by welding, if practicable.

D. TRI-MAX MAST (CLUSTER CYLINDER) REASSEMBLY

1. Carefully insert too inner mast section within the intermediate mast section.

NOTE

Ensure that all roller bearings have been replaced, and are shimmed if necessary.

2. Carefully insert the inner/intermediate mast sections within the outer mast section; this is accomplished by reversing the removal procedure, that is, by inserting mast sections at the top of the outer mast.
3. Replace the channel restraint interlock assembly. Replace the cylinder bracket at the intermediate mast top support.
4. Install the cluster cylinder assembly and the intermediate cylinder assembly (refer to TRI-MAX CYLINDER CLUSTER INSTALLATION for specific instructions).
5. Replace the bearings and studs previously removed from the top of the outer mast.

E. INSTALLATION

1. Using a properly rated hoist, maneuver the mast assembly into its relative mounting position on front of the lift truck.
2. Carefully Insert the mast pivot pins by reversing the REMOVAL procedure.
3. Connect and properly secure the tilt cylinders.
4. Replace hydraulic line(s).
5. Refer to CARRIAGE ASSEMBLY, Topic 3, and install carriage.
6. If applicable, replace capscrews and spacer at carriage roller supports.
7. Replace carriage forks. (Refer to FORK INSTALLATION, Topic 4.)

F. LIFT CHAIN ADJUSTMENT

When it becomes apparent that the fork carriage is not level, that the lift chains are loose, or that the forks are higher than 1/4" to 1/2" above the floor when the lift cylinder is fully lowered, then the lift chains require adjustment.

Although the chain anchors are of different sizes and in different locations on the various types of masts, the lift chain adjustment remains the same, with the following exception:

NOTE

ALL CLUSTER CYLINDERS are adjusted with the PRIMARY Cylinder FULLY extended.

1. Position the mast assembly so it is vertical. Ensure that the inner mast section and lift cylinder are in the fully lowered position.
2. Loosen the chain anchor locknuts.
3. Chain tension is adjusted by increasing or decreasing the chain lengths with the adjusting nuts. Alternately tighten or loosen the chain on one side and then on the opposite side, until the chains are snug, with no slack, and carriage forks clear the floor within 1/4" to 1/2".

NOTE

Two (2) sets of chains are used in TRI-LIFT (and some TRI-MAX) masts, and chain tension is adjusted with adjusting nuts and turnbuckles. Adjust primary chain anchors first until forks barely clear the floor. Then adjust the secondary chain anchors until chains are snug.

4. Make certain that the lift chain tension is equal on each chain and that the fork carriage is level.

- After the adjustment is completed, tighten the locknuts securely and make certain adjustments were not turned.

G. BEARING ADJUSTMENT (TRI-MAX MAST)

- Cuter Mast Assembly. Use an adjustable inside spanning tool and check the rear inside of the outer mast upright to find narrowest distance between uprights. Lock tool in this position. Set an adjustable outside spanning tool to match inside spanning tool. Lock tool in this position.
- Intermediate Mast Assembly. Install bearings on studs located at bottom of intermediate mast assembly. Use an outside spanning tool as set in Step 1 above and span bearings at maximum camber point. Shim bearings, if required, to obtain maximum .015 inch clearance between bearings and outside spanning tool. Divide shims as equally as possible between bearings. Shims available in 0.015 and 0.040 inch thicknesses.

NOTE

If odd shim is required, place odd shims on same side of all mast sections and carriage so mast will be in balance.

- Cuter Mast Assembly Top Bearing. Use outside spanning tool and find widest point in outside width of web on intermediate mast assembly. Install bearings on studs at top inside of outer mast. Use inside spanning tool to span bearings at maximum camber point. Check clearance between outer and inner spanning tools. Measure clearance accurately and install shims to provide proper clearance. Install shims as

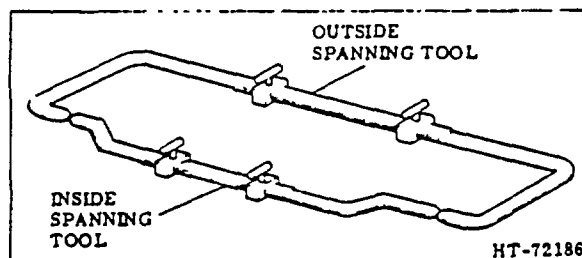


Figure 2. Setting Outside Spanning Tool

equally as possible under both bearings to provide maximum .015 inch clearance.

- Inner and Intermediate Mast Bearings. Perform Steps 2 and 3 to adjust upper bearings on inside of intermediate mast and lower bearings on inner mast.
- Carriage Assembly Bearings. Use inside spanning tool and check inside of web of inner mast assembly and determine narrowest point. Set outside spanning tool to match Inside spanning tool. Lock tool in position. Install bearings on roller studs on carriage. Span bearings on carriage assembly at the maximum camber point with outside spanning tool. Span all three sets of bearings. Shim bearings to produce maximum .015 inch clearance with spanning tool. To check bearing alignment, place a straightedge against stud centerline to all three bearings on both sides of carriage assembly. No visible gap should be seen between bearings and the straightedge.
- After assembly raise and lower the mast and carriage several times to check for free movement throughout the entire range of travel

TOPIC 2. LIFT CYLINDERS

A. DESCRIPTION

Various renderings of the lift cylinder mechanism are available depending on the type of mast assembly used on the lift truck. All lift cylinders operate by the same hydraulic principles regardless of their multiplicity or arrangement.

The hydraulic oil enters the lift cylinder(s) at, or near, the base of the cylinder(s) causing the plunger(s) to extend.

A flow regulator, which is located at the oil inlet port of the lift cylinder(s), controls the flow of hydraulic oil so that the load lowers at a controlled rate of speed from the raised position.

B. SERVICE

After each 50 hours of operation, inspect the mast lift cylinder(s), cylinder hoses and fittings for evidence of leaks and repair as necessary.

The following procedures are recommended for the proper removal of the respective lift cylinders noted:

C. TRI-MAX LIFT CYLINDERS (CLUSTER TYPE) REMOVAL

1. Disconnect the lift chains from adjusting screws on the cylinder cluster.
2. With cylinders completely collapsed, disconnect the hydraulic line between the cluster cylinder and the single cylinder.
3. Remove the screw and nut which secure the cylinder cluster to the inner and intermediate masts.
4. Carefully lift cylinder cluster from the mast assembly. Remove the crosshead assemblies and ram guards from the outer cylinder rams.
5. To remove the single lift cylinder. remove the fittings, clamps and the flow regulator from the cylinder.
6. Remove the clamp securing the lift cylinder to the intermediate mast. Remove the screw and washer securing cylinder to bracket at top of intermediate mast. Remove nut and washer securing cylinder to bottom of outer mast.
7. Remove the single cylinder from the mast and place it on appropriate supports to prevent its rolling during inspection and repair work.

D. TRI-MAX AND HIGH-FREE LIFT (CLUSTER TYPE) DISASSEMBLY AND INSPECTION

1. Remove the gland nut from the tube of cylinder with a spanner wrench, then remove the wiper ring, back-up ring, "O" ring, packing and nylon pallets from the gland nut.
2. Remove the STOP RING from the tube, if applicable. (Note: Stop ring not used on all clusters and single cylinders.)
3. Carefully slide the ram from the tube and remove the wear ring from the ram.

CAUTION

Always use care when handling the ram assembly so that it will not be nicked or damaged.

4. Clean all metal parts with an acceptable solvent. Inspect parts for wear or damage.
5. Remove any nicks and scratches with fine emery paper or honing stone; replace all unserviceable parts.

NOTE

Always replace all packing sets, "O" rings, back-up rings, and wiper rings, regardless of their condition. Be certain shell is clean and free of foreign matter.

NOTE

Disassemble and repair remaining cylinders in same manner.

6. The single cylinder of the Tri-Max cluster arrangement is serviced in the identical manner as the cluster cylinder.

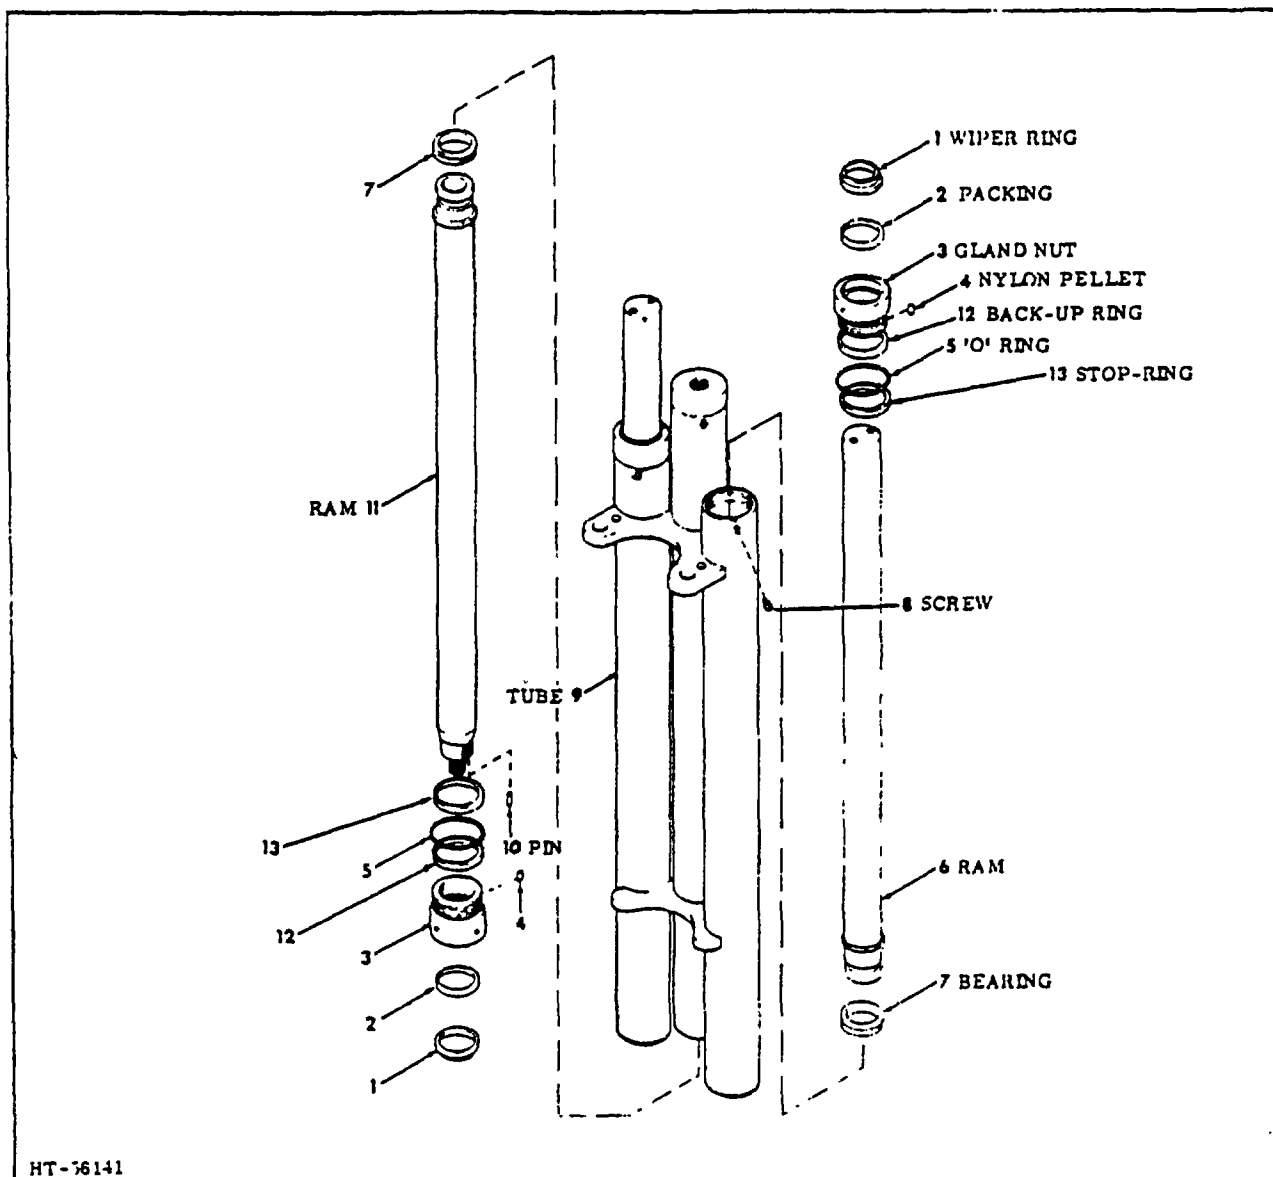


Figure 3. Cylinder Cluster Assembly (Tri-Max, High Free Lift)

E. TRI-MAX AND HIGH FREE LIFT CYLINDERS (CLUSTER TYPE) REASSEMBLY

1. Refer to Figure 3 and place bearing (7) on ram (6) end as shown.
2. Ensure that all parts and ram are free of any foreign matter and Insert ram in tube (9) as shown. Install and tighten the stop ring (13), if applicable.
3. Preassemble packing (2) and wiper ring (1) within gland nut (3) ; then place "O" ring (5) and back-up ring (12) on gland nut (3). Insert replacement nylon pellets (4) in nut.
4. Slide preassembled gland nut (3) over ram (6), and using a spanner wrench, tighten gland nut into tube (9).

NOTE

Use same reassembly procedure on remaining rams and on the single cylinder, (Tri-Max only). Ensure that all parts are clean and free of foreign matter and that rams move smoothly Without binding.

F. TRI-MAX AND HIGH FREE LIFT CYLINDERS (CLUSTER TYPE) INSTALLATION

CAUTION

Prior to lift cylinder installation, be certain that all parts are clean and that there is no foreign matter in the shell assembly.

1. Attach a properly rated hoist chain to the intermediate mast (TRI-MAX only), single lift cylinder, and carefully maneuver the cylinder into its relative mounting location.
2. Install and secure the washer and nut which attach the single cylinder to the bottom of the outer mast assembly (TRI-MAX only). Install and secure the washer and screw which attach cylinder to bracket at top of intermediate mast assembly. Remove hoist chain from cylinder after the intermediate mast retaining clamp has been replaced.
3. Replace all fittings and clamps previously removed from cylinder, and install the flow regulator.
4. To Install the cylinder cluster assembly, first ensure that the crosshead assemblies have

been correctly Installed at the outer cylinder rams, and that the chain adjusting screws and locknuts have been installed.

5. Attach a properly rated hoist chain to the cylinder cluster assembly and maneuver cluster assembly into its relative mounting position within the Inner and outer masts.
6. Install the attaching capscrews which secure the cylinder cluster to the inner and intermediate masts (outer mast, HIGH-FREE LIFT). Tighten mounting bolts.
7. Replace the chain guard and connect the hydraulic line between the cylinder cluster and the single cylinder (TRI-MAX only).
8. Install and reconnect the cylinder cluster lift chains at the cluster adjusting screws.

NOTE

Refer to CHAIN ADJUSTMENT in Topic 1, prior to operational use of lift truck.

9. Install carriage assembly. (Refer to CARRIAGE INSTALLATION Topic.)

TOPIC 3. CARRIAGES

A. DESCRIPTION

The mast fork carriage is a heavy duty structure of welded steel, built to provide ultimate strength and visibility, with a minimum of overhang from the center of the drive wheels to the face of the forks.

The fork carriages are of different types and include adjustable side thrust rollers, side thrust plugs, or wear plates with shims to ensure that the carriage is centered with the Inner mast upright. Load rollers are included in all of the fork carriages to provide smooth carriage movement with a minimum of friction.

The fork carriage used with the Tri-Max mast utilizes ball bearings with shims to center the carriage with the mast section.

An optional item used in conjunction with the fork carriage is the backrest. This assembly is a welded metal frame which is attached to the carriage (against the uprights vertically) and serves to prevent loads from resting against the mast when the mast assembly is tilted back.

The following procedures are recommended for the proper removal of the respective fork carriages noted:

B. TRI-MAX AND HIGH FREE LIFT CARRIAGE REMOVAL

1. Remove carriage forks.
2. Block inner mast to allow approximately 24" clearance between the bottom of the mast and the floor.
3. Remove the capscrews and spacer from the carriage roller support.
4. Attach a suitable hoist to the fork carriage, then remove the lift chain anchor pins and disconnect the chains from the carriage.
5. Ensure that no attachments secure the fork carriage to the mast assembly, then carefully lower the fork carriage out of the bottom of the inner mast. (See Figure 15.)

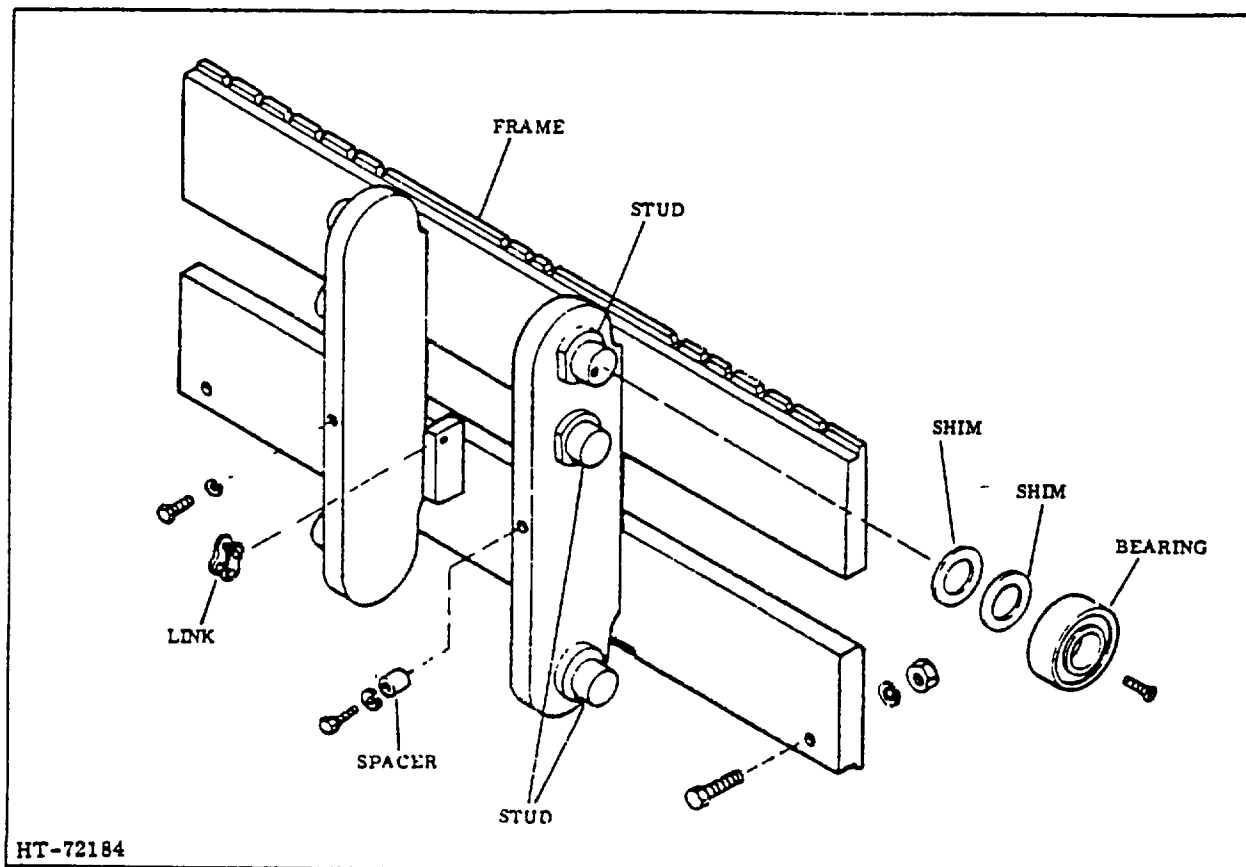


Figure 4. Tri-Max and High Free Lift Carriage Assembly

C. TRI-FREE LIFT CARRIAGE SERVICE

1. Disassemble all the roller assemblies.
2. Do not intermix parts from the roller assemblies.
3. Clean and inspect all parts for excessive damage or wear. Replace as required.
4. Reassemble the roller assemblies; Install any other parts removed.
5. To adjust for any carriage side play after installation, run the carriage up and down to determine the narrowest point on the mast.
6. After determining the narrowest point, loosen the four (4) locking screws, then tighten same screws until the side play is eliminated at the narrowest point on the mast.

D. TRI -MAX AND HIGH FREE LIFT CARRIAGE INSTALLATION

1. Block the inner mast assembly to allow approximately 24" clearance between the mast and floor.
2. Using a suitable hoist, lift carriage assembly into its relative mounting position, then carefully guide it into the bottom of the Inner mast channel.
3. Keeping tension off of carriage, install lift chains at carriage anchors and secure with anchor pins.
4. Install the spacer and capscrews at carriage roller supports.
5. Install carriage forks.
6. Remove mast support blocks.

TOPIC 4. FORKS

A. DESCRIPTION

Basically, there are two types of lift forks; the shaft style which pivots on a horizontal support shaft, and the more commonly used hook style fork (Figure 5) which hooks into notches along the top edge of the fork carriage. The standard or hook type fork will be discussed here. Any differences will be noted in shaft type removal and installation.

The forks should always be adjusted on the carriage to obtain the optimum balance in proportion to the width of the anticipated loads.

A fork lock (Figure 6) is installed in the top of each of the hook type forks to hold it in position in one of the

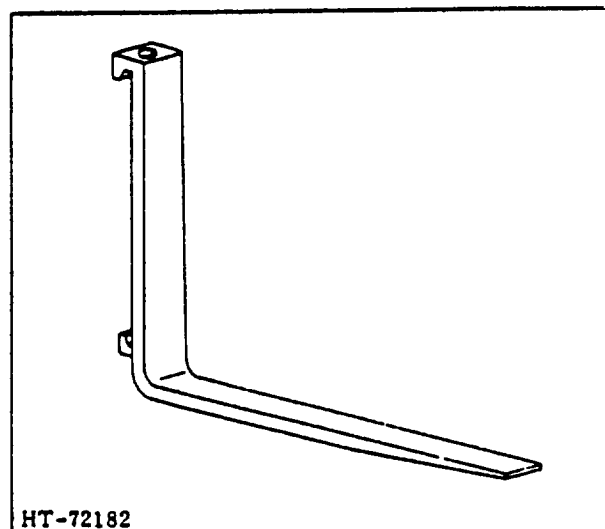


Figure 5. Hook Type Fork

notches along the top bar of the carriage. To change the fork location, pull up on the lock and move fork to the left or right. Allow fork lock to seat in the notch nearest to location chosen.

The forks can be easily removed from the carriage by releasing the locks and aligning each fork with the wide removal slot (Figure 6) at the bottom of the fork carriage. (Refer to following REMOVAL procedures for detailed instructions.)

CAUTION

Naturally, the weight of each fork depends upon its size. Therefore, exercise caution while fork is being removed from the carriage to avoid injury to personnel and to prevent damage to the equipment.

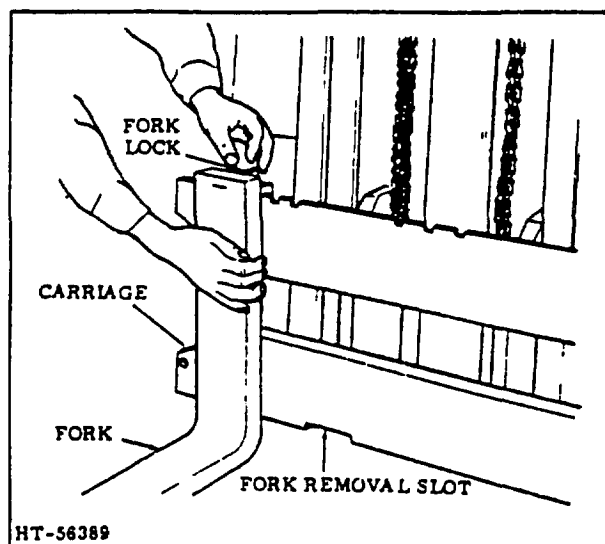


Figure 6. Fork Adjustment and Removal

B. REMOVAL

(Hook Type)

1. Lower fork carriage until base of fork just clears the floor.
2. Release the fork lock pin and slide fork to a position over the cut-out in the lower carriage bar (Figure 6).

3. Tilt the lower portion of the fork forward and up, releasing the lower hanger from the lower carriage bar.

4. Refer to cautionary note in Paragraph A above, and lift fork off upper carriage bar.

C. SERVICE

1. Inspect hook fork and locking mechanism for any evidence of wear or damage.
2. If locking mechanism is worn or damaged, remove and replace it as a unit.
3. If fork is defective, then replace with same type and capacity rated fork.

D. INSTALLATION

(Hook Type)

1. Carefully lift fork up onto upper carriage mounting slot, then slowly lower until back of fork rests against carriage face and bottom fork hook passes through lower carriage cut-out.
2. Release the fork lock pin and slide fork left or right until properly positioned for anticipated load clearance/balance requirements.

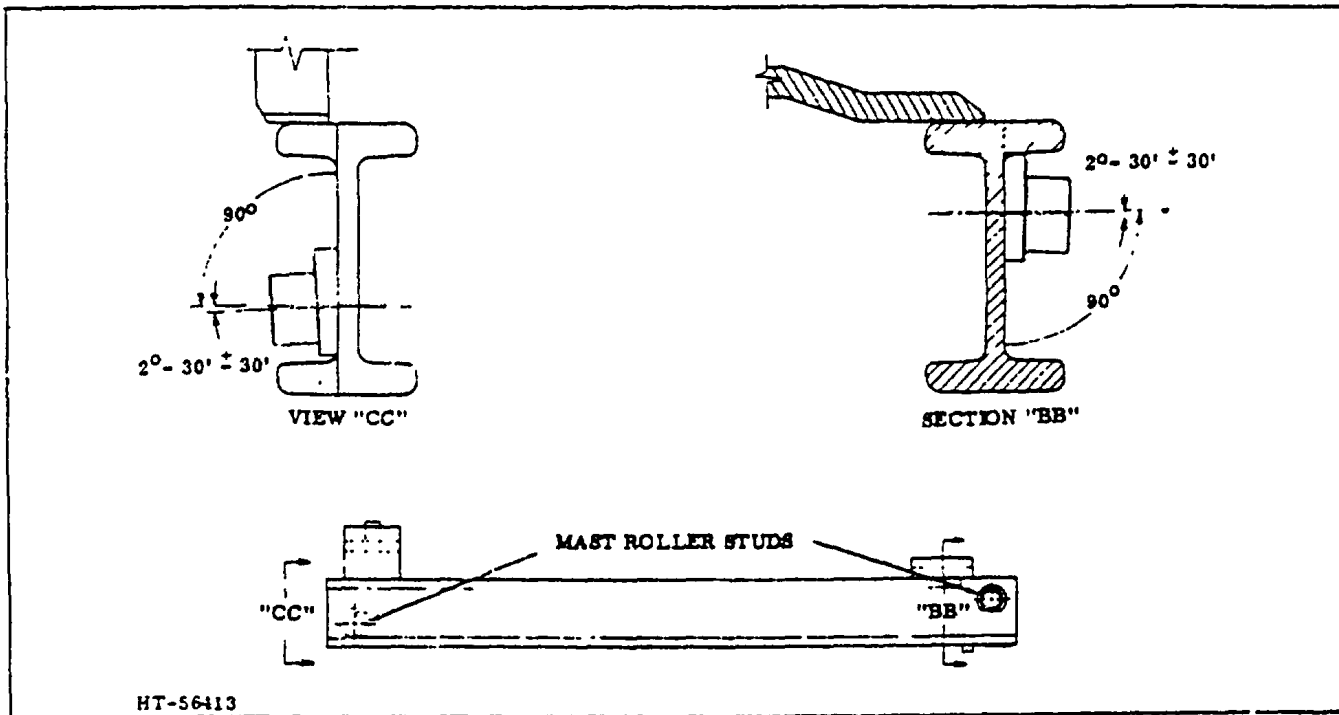


Figure 24. Mast Roller Stud Location (Canted Roller Type)

TOPIC 5 SIDE SHIFTERS

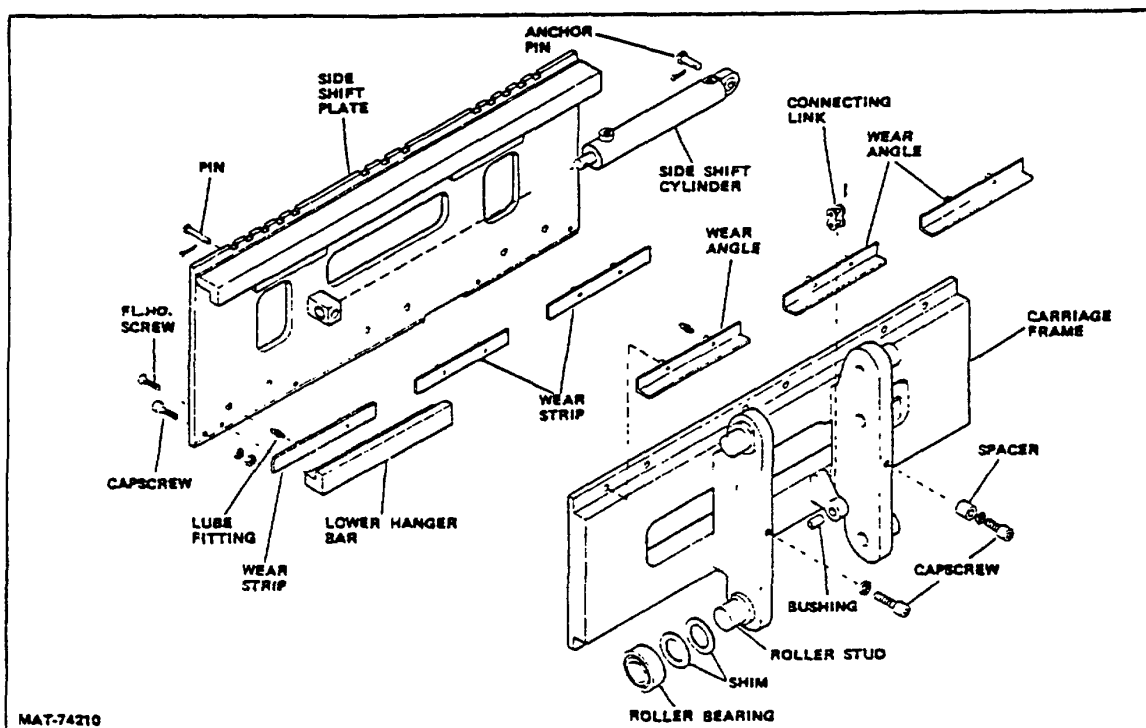


Figure 7. Side Shifter Components (Typical)

A. REMOVAL/INSTALLATION

First disconnect hydraulic hoses at junction block on carriage frame, then refer to TOPIC 1 and perform the appropriate removal (or installation) procedures.

B. DISASSEMBLY

NOTE

For disassembly of the carriage frame refer to the appropriate topic depending on the type carriage used.

1. To disassemble side shifter, first disconnect and plug the hydraulic hoses from the side shift cylinder, to prevent entry of foreign particles.
2. Disconnect side shift cylinder from side shift plate by removing retaining pin and cotter pin.
3. Attach a suitable hoist to side shift plate and take up slack in chain.
4. Slide side shift plate off right side of carriage frame (when facing the carriage), and move/to desired location.
5. remove lower hanger bars.

6. Pry off wear strips at bottom of side shift and top of carriage plates. Wear strips and wear angles should be replaced when worn to a thickness of .063".
7. Check all wear strip and wear angle mating surfaces for nicks, foreign material or any high spots. Repair or replace as necessary.

C. REASSEMBLY

1. Reinstall wear strips and wear angles by snapping into holes provided. Lubricate all wear strips and angles with a light coat of a Grade 2 lithium base grease, (characterized by the word "Moly").
2. Using a suitable hoist, lift side shift plate to relative mounting position at right side of carriage frame (when facing carriage).
3. Carefully slide side shift plate onto carriage frame.
4. Reconnect side shift cylinder plunger to side shift plate by reinstalling retaining pin and cotter pin.

5. Reconnect hydraulic hoses to cylinder.
 6. Reinstall lower hanger bars. Torque capscrews to required value; see tabulation below.
 7. Lubricate all pressure lube fittings on side shifter unit.
- D. ADJUSTMENT

CAPSCREW SIZE	TORQUE VALUE
.33"-16 x 1.25"	28-33 lb. ft.
.38"-16 x 1.50"	28-33 lb. ft.
.50"-13 x 1.50"	G8-73 lb. ft.
.63"-11 x 1.75"	125-135 lb. ft.

Refer to appropriate Topic for the adjustment of the type carriage used.

NOTE
 If carriage frame is of the canted bearing type it must be adjusted before installation.

TOPIC 6. SIDE SHIFTER CYLINDER

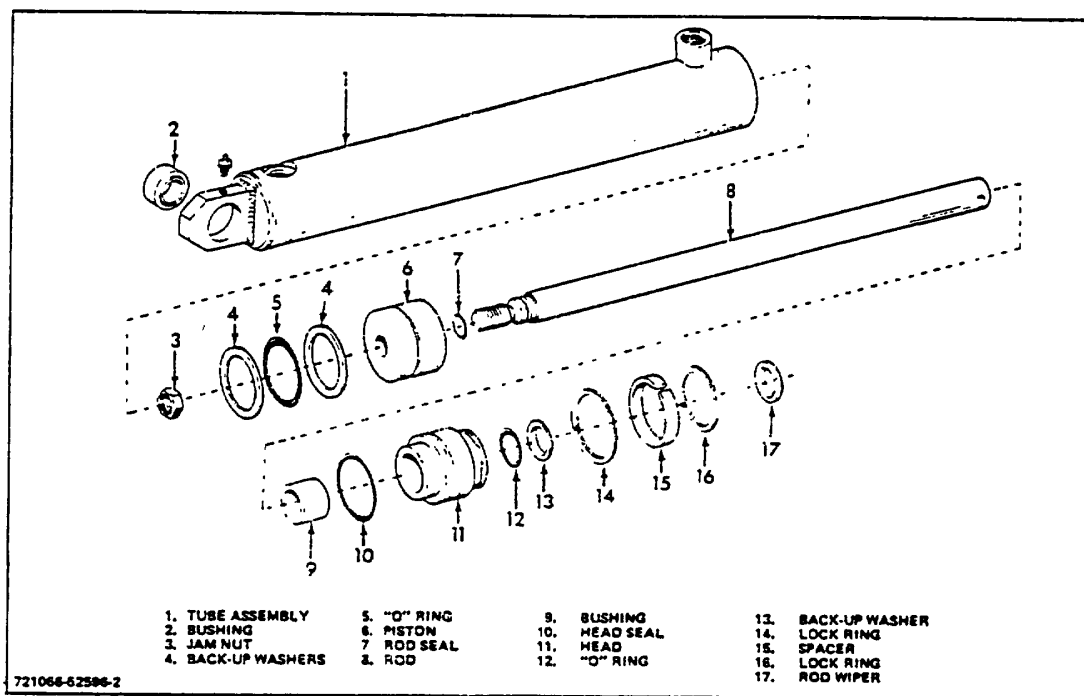


Figure 8.

A. REMOVAL

1. Remove cotter pin and rod pin from cylinder rod.
2. Retract cylinder rod far enough to clear rod retainer on side shift plate.
3. Disconnect hydraulic hoses from cylinder. Plug cylinder ports and hydraulic hose ends to prevent entry of foreign material.
4. Remove cotter pin and cylinder retainer pin and lift out cylinder.

B. DISASSEMBLY

1. Remove lock ring securing spacer in position then remove spacer.
2. Compress lock ring holding head to tube and remove from cylinder.
3. Remove remaining internal components by carefully pulling on rod.
4. Carefully slide head off end of rod.

NOTE

Ensure that rod is free of any burrs which may damage bushing in head while removing head from rod.

5. Remove nut securing piston to rod. Slide piston off end of rod.
6. Remove back-up washer and O-Ring from piston. Remove rod seal from rod.
7. Remove head seal, lock ring, O-Ring and back-up washer from head.
8. Old head bushing may be pressed out with a new bushing after head is cleaned. Refer to PARAGRAPH 0, ASSEMBLY.
9. Check bushing and lube fitting at end of tube assembly, if damaged replace.

C. INSPECTION

Inspect tube bore, rod head, and piston for cracks, scratches, scaring and other possible damage. Repair or replace any components that are worn or damaged.

D. REASSEMBLY

Clean all components in an approved solvent making certain all dirt and contaminants are removed. Prior to assembling, coat each component with clean hydraulic oil to facilitate installation and to provide initial lubrication.

1. Install rod seal on rod.

NOTE

When installing seals and O-Rings, be careful not to damage them on threads or sharp edges. Always use new O-Rings whenever cylinder is serviced

2. Position back-up washer and O-Ring within piston. Install piston on rod and secure with nut.
3. Install O-Ring and back-up washer in head. Position head seal, large lock ring, spacer and small lock ring on head.
4. Carefully slide piston and rod assembly into tube.
5. Position head assembly over rod and compress large lock ring. Slide head assembly (with lock ring compressed) into tube until lock ring snaps into groove in tube.

E. INSTALLATION

1. Insert cylinder end with self-aligning bearing into anchor on carriage plate. Secure with retainer pin and new cotter pin.
2. Connect hydraulic hoses to cylinder.
3. Connect cylinder plunger to side shift plate after plate has been installed. (Refer to TOPIC 6, PARAGRAPH C).
4. Lubricate pressure lube fitting on cylinder.

HOSE REEL

A. INSTALLATION

1. The hose reel must be installed in such a manner as to eliminate any interference when mast is tilted all the way back. Reel should be mounted so that inner flange is as close as possible to mast channel (maximum 1/4" clearance) so as to keep reel within the overall width of the truck.
2. The junction block must be installed on the center line of the middle divider of the hose reel. This permits hoses to wind properly.
3. Install the hoses to the hose reel and wrap hoses around reel. Raise the lift truck carriage until the junction block is even with the hose reel. Turn hose reel three complete turns by pulling on hose. This provides proper tension on hose. Hold hose securely and wrap hose back around reel and connect to junction block.
4. Raise and lower lift truck carriage and check reel for proper winding of hose. It may be necessary to twist hose slightly to get hose to wind properly.

B. SERVICE

Hose reel can be serviced either on or off the lift truck.

1. Raise carriage until junction block is even with hose reel. Disconnect hose.

CAUTION

Hold onto reel and allow it to turn slowly until spring tension is relieved.

2. Remove four nuts and lockwashers holding spring can in place. With one hand, pull spring can slowly away from flange, slide other hand between spring can and the flange to prevent spring from jumping out of can. Slide can from shaft and place it over a pan to allow any excess oil to drain.
3. Remove snap ring and slide flange assembly from shaft. O-rings and back-up rings are now exposed for replacement. O-rings and back-up rings must be replaced in a set.
4. Thoroughly lubricate o-rings and back-up rings with hydraulic oil before installing hub and flange assembly. When installing the flange assembly back onto the shaft, use a rotary motion while pushing flange assembly onto shaft. This will reduce chance of nicking o-ring.
5. Replace snap ring on shaft.
6. If spring assembly is dry, or needs additional lubrication, apply small amount of Molygrease to spring.
7. Slide spring can onto shaft. Be sure spring enters slot on radiused side. Secure spring can in place with four nuts and lockwashers.

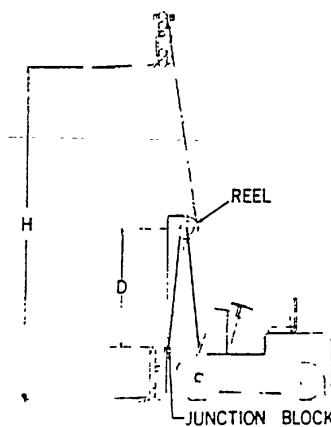


Figure 1. Hose Length Calculation

8. Rewind hose and repeat steps 3 and 4 in INSTALLATION instructions.

NOTE

It is necessary that 32" of hose be pro-wrapped on reel and that reel spring be pre-loaded to proper tension.

1. When "H" is equal to, or greater than, 2 "D" then length = "H" "D" 32.
2. When "H" is less than 2 "D", the hose length = "D" + 32.

Example: H = 100", D 68" $100"-68" 32" = 6-1"$ hose length.

C. HOSE LENGTHS

The following formula will assist in calculating hose lengths.

H = Total lift height.

D = Distance from center line of reel to Junction block in collapsed upright position.

This formula automatically will include 32" of pre-wrap in the hose length. This amount of pre-wrap is necessary to take stress off the hose fittings and also to assist in proper lay of hose during the winding operation.

MEMO

**SUPPLEMENTAL OPERATING, MAINTENANCE
AND REPAIR PARTS INSTRUCTIONS**

FOR

**TRUCK, FORK LIFT, 4,000 LB. CAPACITY
GASOLINE ENGINE DRIVEN (Allis Chalmers)**

MODEL ACP-40-PS MHE 234
NSN 3930-01-040-4594
(144" LIFT HEIGHT & PNEUMATIC TIRES)
MODEL ACC-40-PS MHE 232
NSN 3930-01-039-8291
(144" LIFT HEIGHT & SOLID RUBBER TIRES)
NSN 3930-01-039-8292
(180" LIFT HEIGHT & SOLID RUBBER TIRES)

<u>SECTION I - GENERAL</u>	<u>Page</u>
1.1 Purpose	1
1.2 Scope	1
1.3 Description	1
1.4 Operational Concept	1
1.5 Procurement Status	1
1.6 Equipment Publications	1
1.7 Personnel and Training	2
1.8 Logistics Assistance	2
1.9 Warranty	2
1.10 Reporting (Recommending Publication Changes)	2
 <u>SECTION II - MAINTENANCE</u>	
2.1 Maintenance Concept	3
Maintenance Allocation Chart (MAC)	3
Maintenance Expenditure Limit (MEL)	3
2.2 Reliability and Maintainability (RAM)	3
2.3 Modifications	3
2.4 Equipment Improvement Recommendations (EIR)	4
2.5 Equipment Serviceability Criteria (ESC)	4
2.6 Shipment and Storage	4

SECTION II

	<u>Page</u>
2.7 Destruction to Deny Enemy Use	4
2.8 Basic Issue Items List (BILL)	4
2.9 Special Tools and Equipment	4
2.10 Maintenance and Operating Supplies	4
2.11 Maintenance Forms and Records	4
2.12 Maintenance of New Vehicle	4
2.13 Maintenance Check List (Daily & Periodic)	4

SECTION III - REPAIR PARTS SUPPLY

3.1 General	5
3.2 Prescribed Load List (PLL)	5
3.3 Authorized Stockage List (ASL)	6
3.4 Requisitioning Repair Parts	6
3.5 Submitting Requisitions	7

APPENDIX

A - Warranty	8
B - ASL/PLL	9
C - MAC	10
D - MEL Chart	25
E - MAOSL	26
F - Maintenance of New Vehicle	28
G - Preventive Maintenance Checks and Services (PMCS)	30
H - Basic Issue Items List	42
I - Distribution Codes	44
J - Flow of Requisitions & Materiel Parts, NSN	47
K - Flow of Requisitions & Material Parts, Non NSN	48
L - Sample Requisitioning Formats	49

SECTION I - GENERAL

- 1.1 PURPOSE: To provide the user and support personnel supplemental maintenance and repair parts instructions applicable to the 4,000 lb. Allis Chalmers Model ACP40PS and ACC40OPS Forklift Trucks.
- 1.2 SCOPE: This SOMARPI applies to Department of the Army Units, Organizations and Activities that use and/or support these Forklift Trucks.
- 1.3 DESCRIPTION: These Forklift Trucks are manufactured by Allis Chalmers Corporation, Matteson, Illinois. The trucks are front drive, rear steer vehicles. They have a constant mesh power shift transmission and are equipped with hydraulic brakes on both drive wheels and parking brakes are mounted on the differentials. A control valve to operate the hydraulic lift and tilt cylinders is located to the right of the operator. A side shift capability is also present on the vehicles. The instrument panel includes: a gas gauge, oil pressure gauge, ammeter and a direct reading engine hourmeter. The vehicles have a 12 volt electrical system consisting of a heavy duty alternator, voltage regulator and starting motor. The trucks are equipped with power steering. They have a four cylinder Continental Engine.
- 1.4 OPERATIONAL CONCEPT: These Forklift Trucks are intended to be used for stacking, unstacking and moving cargo in and around warehouses, loading platforms and docks within the military supply system; also for moving cargo in and out of highway trailers and railroad cars. Trucks are intended for operation over paved, semi prepared and other hard surfaces for short distances.
- 1.5 PROCUREMENT STATUS: The procurement contract numbers are DSA 700-76-C-8534 and DSA 700-76-C-8540.
- 1.6 EQUIPMENT PUBLICATIONS:
 - a. Equipment publications initially will be the end item manufacturer's commercial manual. This manual includes operator and repair parts information in addition to part numbers and associated FSCM (Federal Supply Code Manufacturers) identification. One Allis Chalmers' commercial manual will be overpacked at the factory with each vehicle.

b. Request for additional commercial publications should be made as part number requisitions thru the Defense Construction Supply Center (DCSC). Columbus, Ohio (see paragraph 3.5).

c. Authenticated manuals are available from TAGO by ordering TM 10-3930-644-14 & P.

1.7 PERSONNEL AND TRAINING:

a. MOS Requirements: Qualitative and Quantitative Personnel Requirements information (QQPRI) will be disseminated IAW AR 611-1. The following MOSs can operate and maintain the end item:

(1) Operator: . 62F, 76V

(2) Organizational Maintenance: 63S

(3) Direct & General Support Maintenance: 63G, 63S, 63W.

b. Training:

(1) New Equipment Training Team (NETT) : New Equipment Training Teams are available to major field commands. Request for NETTs should be forwarded to: Commander, US Army Tank-Automotive Command, ATTN: DRSTA-MLT, Warren, MI 48090. Training teams should be requested only when trained personnel are not available in the Command to operate and/or maintain the truck.

(2) New Materiel Introductory Team (NMIT) : Major field commands requiring briefings to command staff and users should forward their requests to: Commander, US Army Tank-Automotive Command, ATTN: DRSTA-MLT, Warren, MI 48090. Receiving commands are responsible for the itinerary of NMITs.

1.8 LOGISTICS ASSISTANCE (AR 700-4) : US Army Tank-Automotive Command's Field Maintenance Technicians stationed at CONUS and OCONUS installations are available to furnish on-site training and/or technical assistance. Assistance can be obtained by contacting the appropriate Logistics Assistance Office (LAO) listed in Appendix B, AR 700-4.

1.9 WARRANTY: See Appendix A.

1.10 RECOMMENDING PUBLICATION IMPROVEMENTS: You can improve this publication by recommending improvements, using DA Form 2028 (Recommended Changes to Publications and Blank Forms) and mail direct to the Commander, US Army Tank-Automotive Command, ATTN: DRSTA-MBP, Warren, MI 48090.

SECTION II - MAINTENANCE

2.1 MAINTENANCE CONCEPT:

a. These Forklift Trucks will not require special or new maintenance considerations. Maintenance operations can be accomplished within the current maintenance support concept for Materiel Handling Equipment.

b. Nature and Extent of Maintenance:

(1) Maintenance Allocation Chart (MAC) : Maintenance will be performed as necessary by the category indicated in the MAC (Appendix C) to retain and/or restore serviceability. Units may exceed their authorized scope and function in the MAC when approved by the appropriate commander.

(2) Operator Maintenance: Operator maintenance is limited to daily preventive maintenance checks and routine servicing (see Appendix C).

(3) Organizational Maintenance: Organizational maintenance consists of scheduled preventive maintenance services, limited removal, minor repair and adjustments (see Appendix G).

(4) Direct Support Maintenance: Direct Support Maintenance consists of repairs on-site and for return to the user of the end item/ assemblies which can be maintained efficiently with a minimum of tools and test equipment.

(5) General Support Maintenance: General Support will overhaul and repair for return to stock items designated by the area support commander.

(6) Depot Maintenance: There is no scheduled depot maintenance on these Forklift Trucks.

c. Maintenance Expenditure Limit: The Maintenance Expenditure Limit is based on a life expectancy of 11 years. Limits on repair are based upon 50% replacement cost through the life expectancy of the end item (see Appendix D).

2.2 RELIABILITY & MAINTAINABILITY: Reliability & Maintainability will be assessed through the field evaluation of current users. Specific numerical RAM requirements or objectives are not established.

2.3 MODIFICATIONS: Modifications will be accomplished by the end item manufacturer after MERADCOM acceptance and TACOM approval.

- 2.4 EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR) : Equipment Improvement Recommendations will be submitted IAW TM 38-750.
- 2.5 EQUIPMENT SERVICEABILITY CRITERIA (ESC) : For Equipment Serviceability Criteria see Appendix C.
- 2.6 SHIPMENT AND STORAGE:
- a. Shipment & Storage: Refer to TB 740-97-2 for procedures covering preservation of equipment for shipment. General procedures for shipment are found in FM 55-15, with more specific information in TM 55-2200-001-12 for rail and TM 55-450 series for air transport.
 - b. Administrative Storage: Refer to TM 740-90-1 for instructions covering administrative storage of equipment.
 - c. Weight Classification: The weight classification of the end item is 7,600 lbs.
- 2.7 DESTRUCTION TO DENY ENEMY USE: Refer to TM 750-244-3 for instructions governing destruction of equipment to prevent enemy use.
- 2.8 BASIC ISSUE ITEMS LIST (BIL) : See Appendix H.
- 2.9 SPECIAL TOOLS AND EQUIPMENT: Special tools and equipment are not required for the 4,000 lb. Allis Chalmers Model ACP4OPS and ACC4OPS.
- 2.10 MAINTENANCE AND OPERATING SUPPLY LIST: See Appendix E for a list of maintenance and operating supplies required for initial operation.
- 2.11 MAINTENANCE FORMS AND RECORDS: Operational, maintenance and historical forms/records will be IAW the current TM 38-750.
- 2.12 MAINTENANCE OF NEW VEHICLE: Your Allis Chalmers Model ACP40PS and Model ACC4OPS are generally shipped with the fuel tank drained, the cooling system filled with antifreeze, the crankcase filled with a preservative oil and the truck completely lubricated. Shipping instructions may vary so it is imperative that certain checks be performed before placing the forklift trucks in service (see Appendix F). NOTE: INSPECTION UPON DELIVERY. For your protection, make a thorough inspection of the vehicle immediately upon delivery. Notify the transit agent and have delivering carrier make a notation on the freight Bill of Lading AT ONCE.
- 2.13 MAINTENANCE CHECK LIST (DAILY & PERIODIC) : See Appendix G.

SECTION III - REPAIR PARTS SUPPLY

3.1 GENERAL:

- a. The basic policies and procedures in AR 710-2 and AR 725-50 are generally applicable to repair parts management for Material Handling Equipment (MHE) items.
- b. Manufacturer's parts manuals are furnished with MHE items instead of Department of the Army Repair Parts and Special Tool List (RPSTL).
- c. National Stock Numbers (NSNs) are initially assigned only to PLL/ASL parts and major assemblies; i.e., engines, transmissions, etc. Additional NSNs are assigned by the supply support activities as demands warrant.
- d. Automated Processing (AUTODIN) of Federal Supply Code Manufacturer (FSCM) part number requisitions, without edit for matching NSNs, is authorized. The FSCM for the Allis-Chalmers Company is 30612.
- e. Weapon System Designator Codes on part requisitions are not required.
- f. Repair parts are available from commercial sources and may be purchased locally IAW AR 710-2 and AR 735-110.
- g. Initial Prescribed Load List (PLL) and Authorized Stockage List (ASL) will be distributed by Tank-Automotive Command (TACOM), DRSTA-FHM.

- 3.2 PRESCRIBED LOAD LIST (PLL): The PLL distributed by TACOM is an estimated 15 days supply recommended for initial stockage at organizational maintenance. Management of PLL items will be governed by the provisioning of AR 710-2 and local command procedures. A prepared list of PLL parts will be provided to OCONUS units before shipment of the end item. Selection of PLL parts for shipment to OCONUS units is based upon the receiving command's recommendations

after their review of the TACOM prepared list. Organizations and activities in CONUS will establish PLL stocks through normal requisitioning process (Appendix B).

NOTE

Local purchase of repair parts is authorized IAW AR 710-2 and AR 735-110.

- 3.3 AUTHORIZED STOCKAGE LIST (ASL): The ASL distributed by TACOM is an estimated 45 days supply of repair parts for support units and activities. An initial list of ASL parts will be provided to designated support units (OCONUS) before shipment of the end items. The parts shipped will be selected according to the recommendations of the receiving commands. Receiving commands will make their recommendations after review of the initial list distributed by TACOM. Support units and activities in CONUS will establish ASL stocks through the normal requisitioning process (see Appendix B)

NOTE

Local purchase of repair parts is authorized IAW AR 710-2 and AR 735-110.

3.4 REQUISITIONING REPAIR PARTS (MILSTRIP)

a. All MILSTRIP requisitions (DD Form 1348 series) prepared for repair parts support of MHE items will include the use of certain distribution and project codes.

b. Distribution Codes: The distribution code consists of a two part field. The first part (card column 54) designates the control activity that should receive supply and shipping status of all requisitions. The second part (card columns 55-56) identifies the end item by the use of a Weapons System Designator Code.

(1) CONUS customers will use code "F" in card column 54. OCONUS customers will use the appropriate code from Appendix P, paragraph P-3, AR 725-50 (see Appendix I).

(2) The Weapons System Designator Codes for these Forklift Trucks are not applicable. Card Columns 55 & 56 will be left blank on all requisitions for parts to support the designated end item.

c. Project Codes: Direct Support System (DSS) Project Codes (FM 38-725) are no longer mandatory and are being phased out. However, CONUS and OCONUS customers submitting non-NSN part number requisitions to the Defense Construction Supply Center (DCSC Routing Identifier Code "S9C") will use MHE Project Codes JZM (OCONUS) and BGX (CONUS) in card columns 57-59.

3.5 SUBMITTING REQUISITIONS: Requisitions for NSN parts will be forwarded through the Defense Automated Addressing System (DAAS) to the Managing Supply Support Activity (see Appendix J). Requisitions for non-NSN parts will be forwarded through DAAS to the Defense Construction Supply Center (DCSC) (see Appendix K). Sample formats for requisitioning are found in Appendix L.

NOTE

When the manufacturer's part number and federal supply code for manufacturer (FSCM) exceed the space in card columns 8 through 22 of A02/A0B requisitions, prepare an A05/A0E requisition (DD Form 1348-6) and mail it to: Commander, Defense Construction Supply Center, ATTN: DCSC-OSR, Columbus, Ohio 43215.

APPENDIX A

Warranty Guidelines

1. The warranty period is one year after delivery to the Government and applies to all supplies furnished under the contract **(NOTE: See data plate on truck for date of delivery)**.
2. If it's necessary to file a warranty claim, the following procedure should be used: "Contact the manufacturer, Allis Chalmers Service Administration (312/747-5151, extension 377), informing model, serial number, contract number relating to the particular unit and a summary as to the nature of the problem".
3. If Allis Chalmers Service Agency is not available, CONUS units notify the National Maintenance Point (NMP) by telephone, AUTOVON 786-7395/8300. Units, OCONUS, follow warranty reporting procedures in TM 38-750.
4. All Warranty Claims, whether they are settled locally with a manufacturer's representative or processed through normal Army Maintenance Support Channels, must be reported to US Army Tank-Automotive Command, ATTN: DRSTA-MVM, Warren, MI 48090.

APPENDIX B

SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	PART DESCRIPTION	U/M	QTY OF PARTS REQ FOR NO. OF E/I			
						PLL	ASL		
						1-5	1-5	6-20	21-50
PAOZZ	2940-00-986-0276	4878421-9	30612	Filter Element, Fluid	Ea	1	1	3	5
PAOZZ	2940-00-892-6214	4512207-4	09367	Filter, Fluid, Pressure	Ea	4	10	24	80
PAOZZ	2940:00-421-9655	4907477-6	30612	Filter, Element Fluid	Ea	1	2	4	10
PAOZZ	3030-00-567-9211	MS51066-36	96906	Belt, V	Ea	1	2	4	8
PAOZZ	2920-00-293-5219	4910105-8	30612	Spark Plug	Ea	4	16	40	60
PAOZZ	2940-01-017-6772	4908523-6	30612	Valve, PCV	Ea	1	1	2	4
PAOZZ	2920-00-888-9761	4909100-2	30612	Contact Set, Distrib	Ea	1	3	6	10
PZOZZ	5910-00-521-5159	4909101-0	30612	Capacitor, Fixed, Pap	Ea	1	3	6	10
PAOZZ	2920-01-018-1931	4909102-8	30612	Cap Distributor	Ea	0	1	1	2
PAOZZ	2920-00-041-2543	4909103-6	30612	Rotor, Ignition Dist	Ea	1	3	6	10
For End Item NSN 3930-01-040-45) 4 only									
PAOZZ	2940-00-937-1926	4997568-3	30612	Filter Element, Inta	Ea	1	6	12	24
For End Items NSN 3930-01-039-8791 and 3030-01-) 39-8292 only									
PAOZZ	2940-01-019-4119	4907794-3	30612	Element, Air Cleaner	Ea	1	6	12	24

APPENDIX C**Maintenance Allocation Chart
TRUCK, FORK LIFT, 4,000 LB. CAPACITY
GASOLINE ENGINE DRIVEN (Allis Chalmers)**

**MODEL ACP-40-PS MHE 234
NSN 3930-01-040-4594
(144" LIFT HEIGHT & PNEUMATIC TIRES)
MODEL ACC-40-PS MHE 232
NSN 3930-01-039-8291
(144" LIFT HEIGHT & SOLID RUBBER TIRES)
NSN 3930-01-039-8292
(180" LIFT HEIGHT & SOLID RUBBER TIRES)**

SECTION I**INTRODUCTION****C-1 General**

a. This section provides a general explanation of all maintenance and repair functions authorized at various maintenance categories.

b. The Maintenance Allocation Chart (MAC) in section II designates overall authority and responsibility for the performance of maintenance functions on the identified end item or component. The application of the maintenance functions to the end item or component will be consistent with the capacities and capabilities of the designated maintenance categories.

c. Section III lists the tools and test equipment (both special tools and common tool sets) required for each maintenance function as referenced from section II.

d. Section IV contains supplemental instructions and explanatory notes for a particular maintenance function.

C-2 Maintenance functions. Maintenance functions will be limited to and defined as follows:

a. Inspect. To determine the serviceability of an item by comparing its physical, mechanical, and/or electrical characteristics with established standards through examination (e.g., by sight, sound, or feel).

b. Test. To verify serviceability by measuring the mechanical, pneumatic, hydraulic, or electrical characteristics of an item and comparing those characteristics with prescribed standards.

c. Service. Operations required periodically to keep an item in proper operating condition, i.e., to clean (includes decontaminate, when required), to preserve, to drain, to paint, or to replenish fuel, lubricants, chemical fluids, or gases.

d. Adjust. To maintain or regulate, within prescribed limits, by bringing into proper or exact position, or by setting the operating characteristics to specified parameters.

e. Aline. To adjust specified variable elements of an item to bring about optimum or desired performance.

f. Calibrate. To determine and cause corrections to be made or to be adjusted on instruments or test, measuring, and diagnostic equipments used in precision measurement. Consists of comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.

g. Remove/Install. To remove and install the same item when required to perform service or other maintenance functions. Install may be the act of emplacing, seating, or fixing into position a spare, repair part, or module (component or assembly) in a manner to allow the proper functioning of an equipment or system.

h. Replace. To remove unserviceable item and install a serviceable counterpart in its place. "Replace" is authorized by the MAC and is shown as the 3d position code of the SMR code.

i. Repair. The application of maintenance services², including fault location/troubleshooting³, removal/installation, and disassembly/assembly⁴ procedures, and maintenance actions⁵ to identify troubles and restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.

j. Overhaul. That maintenance effort (service/action) prescribed to restore an item to a completely serviceable/operational condition as required by maintenance standards in appropriate technical publications (i.e., DMWR). Overhaul is normally the highest degree of maintenance performed by the Army. Overhaul does not normally return an item to like new condition.

k. Rebuild. Consists of those services/actions necessary for the restoration of unserviceable equipment to like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance

²Services inspect, test, service, adjust, align, calibrate, and/or replace.

³Fault locate/troubleshoot. The process of investigating and detecting the cause of equipment malfunctioning; the act of isolating a fault within a system or unit under test (UUT).

⁴Disassemble/assemble encompasses the step-by-step taking apart (or breakdown) of a spare/functional group coded item to the level of its least componentry identified as maintenance significant (i.e., assigned an SMR code) for the category of maintenance under consideration.

⁵Actions welding, grinding, riveting, straightening, facing, remachinery, and/or resurfacing.

applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (hours/miles, etc.) considered in classifying Army equipment/components.

C-3 Explanation of Columns in the MAC, Section II

a. Column 1, Group Number. Column 1 lists functional group code numbers, the purpose of which is to identify maintenance significant components, assemblies, subassemblies, and modules with the next higher assembly. End item group number shall be "00."

b. Column 2, Component/Assembly. Column 2 contains the names of components, assemblies, subassemblies, and modules for which maintenance is authorized.

c. Column 3, Maintenance Function. Column 3 lists the functions to be performed on the item listed in Column 2. (For detailed explanation of these functions, see paragraph B-2.)

d. Column 4, Maintenance Category. Column 4 specifies, by the listing of a work time figure in the appropriate subcolumn(s), the category of maintenance authorized to perform the function listed in Column 3. This figure represents the active time required to perform that maintenance function at the indicated category of maintenance. If the number or complexity of the tasks within the listed maintenance function vary at different maintenance categories, appropriate work time figures will be shown for each category. The work time figure represents the average time required to restore an item (assembly, subassembly, component, module, end item, or system) to a serviceable condition under typical field

operating conditions. This time includes preparation time (including any necessary disassembly/assembly time), troubleshooting/fault location time, and quality assurance/quality control time in addition to the time required to perform the specific tasks identified for the maintenance functions authorized in the maintenance allocation chart. The symbol designations for the various maintenance categories are as follows:

- COperator or crew
- OOrganizational maintenance
- FDirect Support Maintenance
- HGeneral Support Maintenance
- DDepot maintenance

e. Column 5, Tools and Equipment. Column 5 specifies, by code, those common tool sets (not individual tools) and special tools, TMDE, and support equipment required to perform the designated function.

f. Column 6, Remarks. This column shall, when applicable, contain a letter code, in alphabetic order, which shall be keyed to the remarks contained in Section IV.

C-4 Explanation of Columns in Tool and Test Equipment Requirements, Section III.

a. Column 1, Reference Code. The tool and test equipment reference code correlates with a code used in the MAC, Section II, Column 5.

b. Column 2, Maintenance Category. The lowest category of maintenance authorized to use the tool or test equipment.

- c. Column 3, Nomenclature. Name or identification of the tool or test equipment.
- d. Column 4, National Stock Number. The National stock number of the tool or test equipment.
- e. Column 5, Tool Number. The manufacturer's part number.

C-5 Explanation of Columns in Remarks, Section IV

- a. Column 1, Reference Code. The code recorded in Column 6, Section II.
- b. Column 2, Remarks. This column lists information pertinent to the maintenance function being performed as indicated in the MAC, Section II.

MAINTENANCE ALLOCATION CHART

SECTION II - ASSIGNMENT OF MAINTENANCE FUNCTIONS									
(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIP.	(6) REMARKS
			C	O	F	H	D		
01	Engine								
0100	Engine Assembly	Service Replace Repair Overhaul	0.4		4.0	8.0 20.0		1 - 12 1 - 12 1 - 12	
0101	Block, Short Assembly	Replace Repair				8.0 16.0		1 - 12 1 - 12	
	Cylinder Head	Replace Repair			2.0	3.0		1 - 12 1 - 12	
0102	Crankshaft	Replace Repair				6.0 8.0		1 - 12 1 - 12	
	Gear, Crankshaft	Replace			4.5			1 - 12	
	Gear, Hydraulic	Replace			4.0			1 - 12	
0103	Flywheel Assembly	Replace Repair			4.0 8.0			1 - 12 1 - 12	
	Gear, Ring	Replace			4.0			1 - 12	
0104	Piston, Connecting Rods	Replace				4.2		1 - 12	
0105	Valves (Exhaust & Intake)	Adjust Replace		1.5	3.5			1 - 4 1 - 12	
	Camshaft	Replace			6.0			1 - 12	
	Gears & Cover	Replace			4.0			1 - 12	
0106	Oil Pump	Replace Repair			3.0	2.0		1 - 12 1 - 12	
	Oil Filter	Replace		0.5				1 - 4	
	Pan	Replace			1.5			1 - 12	
0108	Manifold	Replace		0.7				1 - 4	

MAINTENANCE ALLOCATION CHART

SECTION II - ASSIGNMENT OF MAINTENANCE FUNCTIONS

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIP.	(6) REMARKS
			C	O	F	H	D		
03	Fuel System								
0301	Carburetor	Adjust Replace Repair		0.3 0.5	2.0			1 - 4 1 - 4 1 - 12	
0302	Fuel Pump	Test Replace		0.3 0.5				1 - 4 1 - 4	
	Lines, fittings & Hoses	Replace		0.7				1 - 4	
0304	Air Cleaner & Indicator	Service Replace		0.2 0.3				1 - 4 1 - 4	
0306	Fuel Tank	Service Replace	0.2		1.0			1 - 12	
	Fuel Lines & Fittings	Replace		0.5				1 - 4	
0308	Governor	Replace Repair		0.4	1.0			1 - 4 1 - 12	
0309	Filter Fuel	Replace		0.2				1 - 4	
0312	Accelerator, Throttle Controls	Replace		1.5				1 - 4	
04	Exhaust System								
0401	Muffler Exhaust Pipe	Replace Replace		0.6 0.8				1 - 4 1 - 4	
05	Cooling System								
0501	Radiator	Service Replace Repair	0.2	0.3 1.2	2.5			1 - 4 1 - 4 1 - 12	
0503	Thermostat	Test Replace		0.5 0.5				1 - 4 1 - 4	
	Hoses, Upper & Lower	Replace		0.6				1 - 4	
0504	Water Pump Assembly	Replace Overhaul		0.5	1.5			1 - 4 1 - 12	

MAINTENANCE ALLOCATION CHART

SECTION II - ASSIGNMENT OF MAINTENANCE FUNCTIONS

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIP.	(6) REMARKS
			C	O	F	H	D		
0505	Fan, Assembly	Replace		0.4				1 - 4	
	Fan Belt	Replace		0.3				1 - 4	
06	Electrical System								
0601	Alternator	Test		0.2				1 - 4	
		Replace		0.5				1 - 4	
		Repair			1.5			1 - 12	
	Regulator	Replace			1.0			1 - 12	
0603	Starter Motor	Test		0.3				1 - 4	
		Replace		0.5				1 - 4	
		Repair			2.5			1 - 12	
	Switch, Starter Ignition	Replace		0.4				1 - 4	
0605	Distributor Assembly	Adjust		0.3				1 - 4	
		Replace		0.5				1 - 4	
	Ignition Coil	Replace		0.3				1 - 4	
	Wiring	Replace		0.2				1 - 4	
	Spark Plugs	Adjust		0.2				1 - 4	
		Replace		0.3				1 - 4	
0607	Instruments, Panel	Replace		1.0				1 - 4	
		Repair			1.4			1 - 12	
	Hourmeter	Replace		0.3				1 - 4	
	Ammeter	Replace		0.3				1 - 4	
	Gauge, Oil Pressure	Replace		0.4				1 - 4	
	Gauge, Engine Temp.	Replace		0.3				1 - 4	
	Gauge, Fuel	Replace		0.3				1 - 4	
0608	Switch, Light	Replace		0.2				1 - 4	
	Box, Fuse	Replace		0.3				1 - 4	

MAINTENANCE ALLOCATION CHART

SECTION II - ASSIGNMENT OF MAINTENANCE FUNCTIONS

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIP.	(6) REMARKS
			C	O	F	H	D		
0609	Lights, Headlights & Taillights	Replace		0.3				1 - 4	
0610	Sending Unit (Fuel, Oil & Temp)	Replace		0.4				1 - 4	
0611	Horn, Relay & Wiring	Test		0.1				1 - 4	
		Replace		0.3				1 - 4	
0612	Battery	Service	0.2						
		Test		0.2				1 - 4	
		Replace		0.5				1 - 4	
		DX			1.0			1 - 12	
07	Transmission								
0710	Transmission Assembly	Service	0.5	0.7				1 - 4	
		Test			1.0			1 - 12	
		Replace			6.0			1 - 12	
		Repair				8.0		1 - 12	
		Overhaul				16.0		1 - 12	
	Transmission Shafts & Gears	Replace				4.0		1 - 12	
0708	Torque Converter & Drive Plate	Replace			1.0			1 - 12	
0713	Transmission Clutch Forward & Reverse	Replace				4.0		1 - 12	
		Overhaul				6.0		1 - 12	
0714	Transmission Control Valve	Replace				1.5		1 - 12	
		Repair				3.5		1 - 12	
0714	Transmission Shift Levers & Linkage	Adjust		0.3				1 - 4	
		Replace		0.5				1 - 4	
0721	Oil Filter, Transmission	Replace		0.4				1 - 4	
09	Propeller Shaft								
0900	Propeller Shaft	Service	.2						
		Replace			0.8			1 - 12	
		Repair			1.5			1 - 12	

MAINTENANCE ALLOCATION CHART

SECTION II - ASSIGNMENT OF MAINTENANCE FUNCTIONS

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIP.	(6) REMARKS
			C	O	F	H	D		
10	Front Axle (Drive)								
1000	Front Axle Assembly	Service Replace Repair		0.5		4.0 8.0		1 - 4 1 - 12 1 - 12	
	Spindle, Axle	Replace			0.7			1 - 12	
	Axle Shaft	Replace			1.0			1 - 12	
	Bearings & Seals Axle Shaft	Replace				0.5		1 - 12	
1002	Differential Carrier	Replace Repair			2.0 6.0			1 - 12 1 - 12	
	Differential Assembly	Replace Repair			1.5 4.0			1 - 12 1 - 12	
1002	Ring Gear & Pinion Pinion Seal & Bearings	Replace Replace			1.0 0.5			1 - 12 1 - 12	
11	Rear Axle (Steering)								
1100	Rear Axle Assembly	Service Replace Repair Adjust		0.5	4.0 6.0			1 - 4 1 - 12 1 - 12 1 - 4	
	Spindle, Right or Left	Service Replace		0.3	1.5			1 - 4 1 - 12	
	Axle King Pin & Needle Bearings	Service Replace		0.3	1.5			1 - 4 1 - 12	
	Pivot Arm & Bearings	Service Replace		0.3	1.5			1 - 4 1 - 12	
	Axle Mounting, Trunnion Bearings & Housing	Service Replace		0.5	2.0			1 - 4 1 - 12	
	Tie Rods, Right & Left	Adjust Replace Service		0.4 0.3	1.5			1 - 4 1 - 12 1 - 4	

SECTION II. MAINTENANCE ALLOCATION CHART

SECTION II - ASSIGNMENT OF MAINTENANCE FUNCTIONS

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIP.	(6) REMARKS
			C	O	F	H	D		
12	Brakes								
1201	Hand Brakes, Lever & Linkage	Adjust Service Replace		0.4 0.3	1.5			1 - 4 1 - 4 1 - 12	
	Parking Brake	Replace Repair			1.0 1.5			1 - 12 1 - 12	
1202	Service Brake	Service Replace Repair		0.4	4.0 6.0			1 - 4 1 - 12 1 - 12	
1204	Hydraulic Brake System	Service		0.3				1 - 4	
	Master Cylinder	Replace Repair		1.0	1.6			1 - 4 1 - 12	
	Wheel Cylinder	Replace Repair			2.0 2.5			1 - 12 1 - 12	
1206	Brake Pedal & Linkage	Replace Repair		0.6 0.8				1 - 4 1 - 4	
13	Wheels								
1311	Wheel Assembly	Replace		1.5				1 - 4	
	Bull Gear	Replace		1.0				1 - 4	
	Bearings & Seals	Replace		1.0				1 - 4	
1313	Tires, Pneumatic W/Tube	Inspect Service Replace DX	0.1 0.1	0.5	1.0			1 - 12	
	Tires, Solid Rubber	Inspect Replace	0.2		1.7			1 - 4 1 - 12	
14	Steering								
1407	Steering Wheel	Replace		0.5				1 - 4	
	Steering Column & Shaft	Replace			1.5			1 - 12	
	Steering Cylinder	Service Replace Repair		0.3	1.5 2.5			1 - 4 1 - 12 1 - 12	

MAINTENANCE ALLOCATION CHART

SECTION II - ASSIGNMENT OF MAINTENANCE FUNCTIONS

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIP.	(6) REMARKS
			C	O	F	H	D		
1411	Hoses, Lines & Fittings	Replace			0.5			1 - 12	
		Repair			0.3			1 - 12	
	Hydraulic Filter Assembly	Replace		0.3				1 - 4	
	Hydraulic Filter Element	Replace		0.3				1 - 4	
1412	Hydraulic Cylinder	Replace		1.2				1 - 4	
		Repair			2.0			1 - 12	
1414	Steering Control Valve	Replace			1.0			1 - 12	
		Repair			1.5			1 - 12	
18	Body, Cab, Hood & Hull								
1801	Overhead Guard	Replace		0.5				1 - 4	
		Repair			1.0			1 - 12	
	Body Panel & Hoods	Replace		0.3				1 - 4	
		Repair			0.5			1 - 12	
1806	Seat Cushions, Adjuster & Slide	Adjust	0.2						
		Replace		0.5				1 - 4	
		Repair			0.7			1 - 12	
24	Hydraulic Lift Compartment								
2401	Hydraulic Pump	Test			0.2			1 - 12	
		Replace			.7			1 - 12	
		Repair				2.0		1 - 12	
2402	Hydraulic Control Valve	Replace			1.0			1 - 12	
		Repair			2.0			1 - 12	
2403	Hydraulic Control Levers & Linkage	Replace		0.5				1 - 4	
		Repair			1.0			1 - 12	
2404	Hydraulic Tilt Cylinder	Replace			0.5			1 - 12	
		Repair			1.5			1 - 12	
2405	Cluster Cylinder	Replace			1.5			1 - 12	
		Repair				2.5		1 - 12	

MAINTENANCE ALLOCATION CHART

SECTION II - ASSIGNMENT OF MAINTENANCE FUNCTIONS

(1) GROUP NUMBER	(2) COMPONENT/ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIP.	(6) REMARKS
			C	O	F	H	D		
2405	Mast & Carriage Assembly	Service		0.3				1 - 4	
		Adjust		0.3				1 - 4	
		Repair			2.0			1 - 12	
		Replace			1.0			1 - 12	
2406	Hydraulic Lanes & Fittings	Replace			1.0			1 - 12	
2407	Side Shift Cylinder	Replace			0.5			1 - 12	
		Repair			1.5			1 - 12	
2408	Oil Reservoir	Service		0.3				1 - 4	
		Replace			2.0			1 - 12	

MAINTENANCE ALLOCATION CHART

(MD SOP 700-5)

SECTION III - TOOL AND TEST EQUIPMENT REQUIREMENTS

TOOL OR TEST EQUIPMENT REFERENCE CODE	MAINTENANCE CATEGORY	NOMENCLATURE	NATIONAL/NATO STOCK NUMBER	TOOL NUMBER
UNLESS OTHERWISE NOTED, ALL MAINTENANCE FUNCTIONS CAN BE ACCOMPLISHED WITH THE TOOLS CONTAINED IN THE FOLLOWING COMMON TOOL SETS.				
1.	O,F,H	Tool Kit, General Mechanic Auto; SC45180-90-CL-N26	5180-00-177-7033	W33004
2.	O,F,H	Shop Equipment, Auto Maint & Repair: Org Maint Common No. 1 - Less Power; SC-4910-95-CL-A74	4910-00-754-0654	W32593
3.	O,F,H	Shop Equipment, Auto Maint & Repair: Org Maint Supplemental No. 1 - Less Power; SC 4910-95-CL-A73	4910-00-754-0653	W32867
4.	O,F,H	Shop, Equipment, Auto Maint & Repair: Org Common No. 2 - Less Power; SC 4910-95-CL-A72	4910-00-754-0650	W32730
5.	F, H	Shop Set, Fuel & Electrical Systems, FM Basic - Less Power; SC 4910-95-CL-A01	4910-00-754-0714	T30614
6.	F,H	Shop Set, Auto Maint & Repair, FM Basic - Less Power; SC 4910-95-CL-A31	4910-00-754-0705	T24660
7.	F,H	Shop Set, Fuel & Electrical System, FM Supplemental No. 1 - Less Power; SC 4910-95-CL-A64	4910-00-390-7774	T30551
8.	F,H	Shop Equipment, Auto Maint S Repair: FM Supplemental No. 1 - Less Power; SC 4910-95-CL-A62	4910-00-754-0706	T24519

MAINTENANCE ALLOCATION CHART

(MD SOP 700-5)

SECTION III - TOOL AND TEST EQUIPMENT REQUIREMENTS

TOOL OR TEST EQUIPMENT REFERENCE CODE	MAINTENANCE CATEGORY	NOMENCLATURE	NATIONAL/NATO STOCK NUMBER	TOOL NUMBER
9.	F,H	Shop Set, Fuel & Electrical Systems: FM Supplemental No. 2 - Less Power: SC 4910-95-CL-A65	4910-00-390-7775	T30688
10.	F,H	Shop Equipment, Welding: FM; SC 3470-90-CL-A08	3470-00-357-7268	T16714
11.	F,H	Tool Kit, Master Mechanics; SC 5180-90-CL-N04	5180-00-699-5273	W45060
12.	F,H	Shop, Equipment, Auto Maint & SC 5180-90-CL-N39	5180-00-754-0661	W58075

STA FORM 4801A
FEB 76

PREVIOUS EDITIONS OF THIS FORM MAY BE USED

SECTION IV. REMARKS

REFERENCE CODES	REMARKS
None	None

APPENDIX D

MAINTENANCE EXPENDITURE LIMITS

NSN	Item Identification	Production Year	Years of Life Expectancy	Repair Limitations	
				50%	30%
3930-01-039-8291	Truck, Lift, Fork, Gasoline Engine Powered, 4,000 Lb. Capacity, 144" Lift, MHE 232	1977	11	1984	1988
		1979	11	1986	1990
3930-01-039-8292	Truck, Lift, Fork, Gasoline Engine Powered, 4,000 Lb. Capacity, 180" Lift, MHE 232	1977	11	1984	1988
		1979	11	1986	1990
3930-01-040-4594	Truck, Lift, Fork, Gasoline Engine Powered, 4,000 Lb. Capacity, 144" Lift, MHE 234	1977	11	1984	1988
		1979	11	1986	1990

APPENDIX E					
MAINTENANCE AND OPERATING SUPPLY LIST					
NOMENCLATURE: Truck, Lift, Fork, 4K, GED		SRT, 144" Lift SRT, 180" Lift PT, 144" Lift	MAKE Allis Chalmer's	MODEL ACC40PS ACP400PS	
MFR PART NO:		NSN: 3930-01-039-8291 3930-01-039-8292 3930-01-040-4594	SERIAL NO. RANGE:		DATE Jan 81
COMPONENT APPLICATION	MFR PART NO. OR NAT'L STOCK NO.	DESCRIPTION	QTY REQ F/INITIAL OPN	QTY REQ F/8 HRS OPN	NOTES
Engine	9150-00-186-6668 9150-00-189-6728 9150-00-188-9858 9150-00-188-9859	OE/HDO-10 (5 gal) OE/HDO-10 (55 gal) OE/HDO-30 (5 gal) OE/HDO-30 (55 gal)	5 qts		See NEXT PAGE
Fuel Tank	9130-00-264-6218	Gasoline Auto Regular	5 gal	8 gal	
Radiator	6850-00-181-7929	Water Antifreeze (1 gal)	None		
*Hydraulic Brake	9150-00-252-6375	Hydraulic Fluid NABB	None		
Differential	9150-01-035-5393 9150-01-035-5395 9150-01-035-5391	MIL-L-2105C80W/90 (5 gal) MIL-L-2105C85W/140 (5 gal) MIL-L-2105C 75W (5 gal)	None None None		
Transmission	*See Engine	OE-HDO-10	None		
Hydraulic System	*See Engine	OE-HDO-10	None		
Lubrication Fittings	9150-00-190-0907	GAA (35 lb. can)	None	As Req	

APPENDIX E					
MAINTENANCE AND OPERATING SUPPLY LIST					
NOMENCLATURE: Truck, Lift, Fork, 4K, GED		SRT, 144" Lift SRT, 180" Lift PT, 144" Lift	MAKE Allis Chalmer's	MODEL ACC40PS ACP400PS	
MFR PART NO:		NSN: 3930-01-039-8291 3930-01-039-8292 3930-01-040-4594	SERIAL NO. RANGE:		DATE Jan 81
COMPONENT APPLICATION	MFR PART NO. OR NAT'L STOCK NO.	DESCRIPTION	QTY REQ F/INITIAL OPN	QTY REQ F/8 HRS OPN	NOTES
Electrolyte	6810-00-249-9354	Sulfuric Acid, Electrolyte	None		See NEXT PAGE
*After conversion to silicone Brake Fluid Use: MIL-B-46176 (81349)	9150-01-059-2586	Silicone Brake Fluid (1 gal)	None		

LUBRICANTS	CAPACITY	EXPECTED TEMPERATURES			INTERVALS
		Above 32 F Above 0 C	+40 F to -10 F +5 C to -23 C	0 F to -65 F -18 C to -50C	
OE/HDO , Engine, Heavy Duty		OE/HDO 10	OE/HDO 10	OE/HDO 10	Intervals given in hours of normal operation
Oil Can Points					
Hydraulic Reservoir	5.9 gals(22.3L)				
Engine Crankcase (see note 4)	4 qts(3.8L)	OE/HDO 30	OE/HDO 20	OE/HDO 10	
Transmission(see note 5)	11 qts(10.4L)	OE/HDO 10	OE/HDO 10	OE/HDO 10	
GO-LUBRICATING OIL, Gear		GO 85W/140	GO 80W/90	GO 75W	
Drive Axle	5 pts(2.3L)				
GOS-LUBRICATING OIL, Gear, Sub-zero		ALL TEMPERATURES			
GAA-GREASE, Automotive and Artillery					
BFS-Silicone Brake Fluid					
Brake Master Cylinder	3 pts(1.4L)				

NOTES:

1. FOR OPERATION OF EQUIPMENT IN PROTRACTED COLD TEMPERATURES BELOW -10F. Remove lubricants prescribed in the key for temperatures above -10F. Relubricate with lubricants specified in the key for temperatures below -10 F(-18 C).

2. OIL CAN POINTS. Every 50 hours lubricate the accelerator and parking brake linkage, mast interlock, control valve linkage, pins and clevises and all exposed adjusting threads with OE/HDO.

3. WHEEL BEARINGS AND BULL GEARS. Every 500 hours remove wheels, clean and inspect all parts, replace damaged or worn parts, repack bearings, and then reassemble. Fill bull gear spaces to three-fourths height of teeth with grease GAA.

4. ENGINE CRANKCASE. Add one pint(0.478L) when oil filter is replaced.

5. TRANSMISSION. Add one quart(0.946L) when filter is replaced.

6. LUBRICANTS. The following is a list of lubricants with the Military Symbols and applicable Specification numbers: OE/HDOMIL-L-2104C, GO MIL-L-2105C, HBA MIL-11-5606, GAA MIL-G-10924.

APPENDIX F

Maintenance of New Vehicle

1. Inspection Upon Delivery: For your protection, make a thorough inspection of the vehicle immediately upon delivery. Notify the transit agent and have the delivering carrier make a notation on the freight Bill of Lading at once.
2. Engine Oil: Check oil level in crankcase. Withdraw dipstick and wipe clean, reinsert the dipstick all the way and then remove it for a true reading. **DO NOT CHECK OIL LEVEL WITH ENGINE RUNNING.**

NOTE

All units are shipped with a preservative oil in the crankcase. This oil should be drained immediately and replaced with the proper oil (See Appendix E).

3. Cooling System: Check coolant level. All vehicles are shipped with coolant to protect to -30°F or lower.
4. Fuel Tank: Ensure vehicle has fuel. Vehicle is protected with protecto-seal cap to guard against fire hazards, theft and tampering.
5. Lubrication: Ensure that vehicle was lubricated prior to shipment. Check all lubrication points as given in TM-00-1271 on page 2-119.
6. Battery: A 12 volt battery is located in a swing out tray below the operator's seat inside the right side panel. Keep cells filled to the bottom of the filler holes with clean distilled water.
7. Power Shift Transmission: Remove floor plate and with the parking brake set and transmission in NEUTRAL, start and run engine for a few minutes until transmission fluid operating temperature is obtained. Stop engine and immediately check transmission fluid level with the dipstick.
8. Differential: With vehicle on a level surface, remove plug from front of axle housing. Oil should be level with lower edge of plug hole.

9. Hydraulic System: With vehicle on level surface, lift cylinder vertical and with lift plunger retracted, turn off the engine and check oil level in the hydraulic reservoir. Oil should be to the level shown on the dipstick. The dipstick is located at the top of the reservoir, inside the right hand panel.
10. Brake Master Cylinders: The brake master cylinder is located under the floor plate on the right side of the truck. It should be filled to 3/8" from bottom or filler neck.
11. Air Cleaner: The air cleaner is mounted inside the engine compartment. It is a dry element type cleaner with replaceable cartridge. Check tightness of all connections.
12. Instruments: Start engine, check to see all gauges are operating properly.

APPENDIX G**PREVENTIVE MAINTENANCE CHECKS AND SERVICES**

1. Do your before (B) PREVENTIVE MAINTENANCE just before you operate the vehicle. Pay attention to the CAUTIONS and WARNINGS.
2. DURING checks and services (D) of PREVENTIVE MAINTENANCE will be performed while the equipment and/or its component systems are in operation.
3. Do-your after (A) PREVENTIVE MAINTENANCE right after operating the vehicle. Pay attention to the CAUTIONS and WARNINGS.
4. Do your weekly (W) PREVENTIVE MAINTENANCE weekly.
5. Do your monthly (M) PREVENTIVE MAINTENANCE once a month.
6. If something doesn't work, troubleshoot it with the instructions in your manual or notify your supervisor.
7. Always do your PREVENTIVE MAINTENANCE in the same order so it gets to be a habit. Once you've had some practice, you'll spot anything wrong in a hurry.
8. If anything looks wrong and you can't fix it, write it on your DA Form 2404. If you find something seriously wrong, report it to organizational maintenance RIGHT NOW.
9. When you do your PREVENTIVE MAINTENANCE, take along the tools you will need to make all the checks. Take along a rag, you'll always need at least one.

A - Keep it clean: Dirt, grease, oil, and debris only get in the way and may cover up a serious problem. Clean as you work and as needed. Use dry cleaning solvent (SD-2) on all metal surfaces. Use soap and water when you clean rubber or plastic material.

WARNING

DRY CLEANING SOLVENT, USED TO CLEAN PARTS IS POTENTIALLY DANGEROUS TO PERSONNEL AND PROPERTY. DO NOT USE NEAR OPEN FLAME OR EXCESSIVE HEAT. FLASH POINT OF THIS SOLVENT IS 138°F.

B - Bolts, nuts, and screws: Check them all for obvious looseness, missing, bent or broken condition. You can't try them all with a tool, of course, but look for chipped paint, bare metal, or rust around bolt heads. If you find one you think is loose, tighten it, or report it to organizational maintenance if you can not tighten it.

C - Welds: Look for loose or chipped paint, rust or gaps where parts are welded together. If you find a bad weld, report it to organizational maintenance.

D - Electric wires and connectors: Look for cracked or broken insulation, bare wires, and loose or broken connectors. Tighten loose connectors and make sure the wires are in good shape.

E - Hoses and fluid lines: Look for wear, damage, and leaks, and make sure clamps and fittings are tight. Wet spots shot leaks, of course. But a stain around a fitting or connector can mean a leak. If a leak comes from a loose fitting or connector, tighten it. If something is broken or worn out, report it to organizational maintenance.

10. It is necessary for you to know how fluid leakage affects the status of your vehicle. The following are definitions of the types/classes of leakage an operator or crew member needs to know to be able to determine the status of his/her vehicle. Learn, then be familiar with them and REMEMBER - WHEN IN DOUBT, NOTIFY YOUR SUPERVISOR!

Leakage Definitions for Crew/Operator PMCS

Class I	Seepage of fluid (as indicated by wetness or discoloration) not great enough to form drops.
Class II	Leakage of fluid great enough to form drops but not enough to cause drops to drip from item being checked/inspected.
Class III	Leakage of fluid great enough to form drops that fall from the item being checked/inspected.

CAUTION

EQUIPMENT OPERATION IS ALLOWABLE WITH MINOR LEAKAGES (CLASS I OR II). OF COURSE, CONSIDERATION MUST BE GIVEN TO THE FLUID CAPACITY IN THE ITEM/SYSTEM BEING CHECKED/INSPECTED. WHEN IN DOUBT, NOTIFY YOUR SUPERVISOR.

WHEN OPERATING WITH CLASS I OR II LEAKS, CONTINUE TO CHECK FLUID LEVELS AS REQUIRED IN YOUR PMCS.

CLASS III LEAKS SHOULD BE REPORTED TO YOUR SUPERVISOR OR ORGANIZATIONAL.

OPERATOR/CREW PREVENTIVE MAINTENANCE CHECKS AND SERVICES							
B-BEFORE D-DURING A-AFTER W-WEEKLY M-MONTHLY							
ITEM NO	INTERVAL					ITEM TO BE INSPECTED PROCEDURE: CHECK FOR AND HAVE REPAIRED, FILLED OR ADJUSTED AS NEEDED	EQUIPMENT IS NOT READY/ AVAILABLE IF:
	B	D	A	W	M		
1						<p><u>IMPORTANT: PERFORM WEEKLY AS WELL AS BEFORE OPERATIONS PMCS IF:</u></p> <p>1. YOU ARE THE ASSIGNED OPERATOR AND HAVE NOT OPERATED THE ITEM SINCE THE LAST WEEKLY.</p> <p>2. YOU ARE OPERATING THE ITEM FOR THE FIRST TIME.</p> <p>NOTE: HAVE ORGANIZATIONAL MAINTENANCE ADJUST ENGINE VALVE CLEARANCE AFTER FIRST 50 HOURS OF OPERATION.</p> <p><u>EXTERIOR OF VEHICLE</u></p> <p>a. Check for leaks or appearance of leaks.</p> <p>b. Visually check overhead guard for obvious cracks in welds.</p>	<p>Class III leaks-or any fuel leak.</p> <p>Obvious cracks in welds.</p>
2						<p><u>HYDRAULIC RESERVOIR</u></p> <p>Check reservoir oil level, add oil if necessary to bring level up to full mark on dipstick, when mast is lowered and all cylinders retracted.</p>	
3						<p>TIRES, PNEUMATIC</p> <p>Check tires for wear.</p> <p>or</p> <p><u>TIRES: SOLID</u></p> <p>Check tires for wear cracks, gouges, and chunking.</p>	<p>Tire is flat.</p> <p>Chunking, gouging, or wear which would cause unsafe operating conditions.</p>

OPERATOR/CREW PREVENTIVE MAINTENANCE CHECKS AND SERVICES							
B-BEFORE D-DURING A-AFTER W-WEEKLY M-MONTHLY							
ITEM NO	INTERVAL					ITEM TO BE INSPECTED PROCEDURE: CHECK FOR AND HAVE REPAIRED, FILLED OR ADJUSTED AS NEEDED	EQUIPMENT IS NOT READY/ AVAILABLE IF:
	B	D	A	W	M		
4	•					<u>RADIATOR</u> Check radiator to insure that coolant is one inch below bottom of filler tube (add 50/50 mixture of water and antifreeze) (reference TB 750-651).	
5	•					<u>ENGINE OIL LEVEL</u> Check oil dipstick, add oil, if needed, to raise level to full mark.	
6	•					<u>AIR CLEANER</u> Check element to insure it's clean, wash if needed in warm soapy water (after six washings, have organizational maintenance replace at).	Element is missing or damaged.
7		•				<u>HORN</u> Check horn by pressing button.	
8		•				<u>BRAKES</u> Check that normal break pressure stops truck.	Service brake-won't stop truck.
9		•				<u>STEERING</u> Check that truck steers free & easy.	Steering sticks or truck-is hard to steer.

OPERATOR/CREW PREVENTIVE MAINTENANCE CHECKS AND SERVICES							
B-BEFORE D-DURING A-AFTER W-WEEKLY M-MONTHLY							
ITEM NO	INTERVAL					ITEM TO BE INSPECTED PROCEDURE: CHECK FOR AND HAVE REPAIRED, FILLED OR ADJUSTED AS NEEDED	EQUIPMENT IS NOT READY/ AVAILABLE IF:
	B	D	A	W	M		
10		•				<u>ACCELERATOR</u> Check that truck goes smoothly from slow to fast speed.	Pedal sticks.
11		•				<u>LIFT LEVER</u> Check that lifting and lowering is smooth in acceleration and deceleration.	Lifting or lowering jerky or uncontrollable.
12		•				<u>TILT LEVER</u> Check that forward and backward tilt is smooth and immediate.	Tilt does not operate.
13		•				<u>SIDE SHIFT LEVER</u> Check that shift works.	
14		•				<u>LIGHTS</u> Check that lights are working and properly aligned	
15		•				<u>INSTRUMENT PANEL</u> Check for abnormal operating readings.	
		•				(1) Oil pressure gauge - Less than five psi at idle speed.	
		•				(2) Ammeter - Registers discharge when engine is operated at above idle speed.	Readings on gauges fall within specified ranges.

OPERATOR/CREW PREVENTIVE MAINTENANCE CHECKS AND SERVICES							
B-BEFORE D-DURING A-AFTER W-WEEKLY M-MONTHLY							
ITEM NO	INTERVAL					ITEM TO BE INSPECTED PROCEDURE: CHECK FOR AND HAVE REPAIRED, FILLED OR ADJUSTED AS NEEDED	EQUIPMENT IS NOT READY/ AVAILABLE IF:
	B	D	A	W	M		
16		•				(3) Water temperature - Registers in red portion of gauge.	Battery cracked or discharged.
		•				(4) Transmission temperature gauge - Registers 210°F or above.	
17				•		<u>STEER AXLE STOPS</u> Check to insure they are present and not damaged.	
				•		<u>BATTERY</u> Inspect for electrolyte level, add distilled water if required (reference TM 9-6140-200-12).	
18				•		<u>RADIATOR ENGINE COMPARTMENT</u> Inspect/clean air passages.	
				•		<u>BREATHER CAP ENGINE</u> Remove and clean.	
20				•		<u>FAN BELT</u> Inspect for looseness or frayed condition.	Belt slips.

**ORGANIZATIONAL
PREVENTIVE MAINTENANCE CHECKS AND SERVICES**

1. Do your (Q) PREVENTIVE MAINTENANCE once each 3 months.
2. Do your (S) PREVENTIVE MAINTENANCE once each 6 months.
3. Do your (A) PREVENTIVE MAINTENANCE once each year.
4. Do your (B) PREVENTIVE MAINTENANCE once each two years.
5. Do your (H) PREVENTIVE MAINTENANCE at the hour interval listed.
6. Do your (MI) PREVENTIVE MAINTENANCE when the mileage of the vehicle reaches the amount listed.
7. If something doesn't work, troubleshoot it with the instructions in your commercial manual or notify your supervisor.
8. Always do your PREVENTIVE MAINTENANCE in the same order so it gets to be a habit. Once you've had some practice, you'll spot anything wrong in a hurry.
9. If anything looks wrong and you can't fix it, write it on your DA Form 2a4.' If you find something seriously wrong, report it to direct support maintenance RIGHT NOW.
10. When you do your PREVENTIVE MAINTENANCE, take along the tools you will need to make all the checks. Take along a rag, you'll always need at least one.

WARNING
**DRY CLEANING SOLVENT, USED TO CLEAN PARTS IS POTENTIALLY
DANGEROUS TO PERSONNEL AND PROPERTY. DO NOT USE NEAR OPEN
FLAME OR EXCESSIVE HEAT. FLASH POINT OF THIS SOLVENT IS 13°F.**

A - Keep it clean: Dirt, grease, oil, and debris only get in the way and may cover up a serious problem. Clean as you work and as needed. Use dry cleaning solvent (50-2) on all metal surfaces. Use soap and water when you clean rubber or plastic material.

B - Bolts, nuts, and screws: Check them all for obvious looseness, missing, bent or broken condition. You can't try them all with a tool, of course, but look for chipped paint, bare metal, or rust around bolt heads. If you find one you think! is loose, tighten it, or report it to direct support maintenance if you can not tighten it.

C - Welds: Look for loose or chipped paint, rust or gaps where parts are welded together. If you find a bad weld, report it to direct support maintenance.

D - Electric wires and connectors: Look for cracked or broken insulation, bare wires, and loose or broken connectors. Tighten loose connectors and make sure the wires are in good shape.

E - Hoses and fluid lines: Look for wears damage, and leaks, and make sure clamps and fittings are tight. let spots show leaks, of course, But a stain around a fitting or connector can mean a leak. If a leak comes from a loose fitting or connector, tighten it. If something is broken or worn out, report it to direct support maintenance.

11. It is necessary for you to know how fluid leakage affects the status of your vehicle. The following- are definitions of the types/classes of leakage an operator or crew member needs to know to be able to determine the status of his/her vehicle. Learn, then be familiar with them and REMEMBER - WHEN IN DOUBT, NOTIFY YOUR SUPERVISOR!

Leakage Definitions for Organizational PMCS

Class I	Seepage of fluid (as indicated by wetness or discoloration) not great enough to form drops.
Class II	Leakage of fluid great enough to form drops but not enough to cause drops to drip from item being checked/inspected.
Class III	Leakage of fluid great enough to form drops that fall from the item being checked/inspected.

CAUTION

EQUIPMENT OPERATION is ALLOWABLE WITH MINOR LEAKAGES (CLASS I OR II). OF COURSE, CONSIDERATION MUST BE GIVEN TO THE FLUID CAPACITY IN THE ITC4/SYSTEM BEING CHECKED/INSPECTED. WHEN in DOUBT, NOTIFY YOUR SUPERVISOR.

WHEN OPERATING WITH CLASS I OR II LEAKS, CONTINUE TO CHECK FLUID LEVELS AS REQUIRED in YOUR PMCS.

CLASS III LEAKS SHOULD BE REPORTED TO YOUR SUPERVISOR OR DIRECT SUPPORT,

ORGANIZATIONAL PREVENTIVE MAINTENANCE CHECKS AND SERVICES

Q-Quarterly S-Semiannually A-Annually B-Biennially H-Hours M-Miles

ITEM NO	INTERVAL						ITEM TO BE INSPECTED PROCEDURE: Check for and have repaired, filled, or adjusted as needed
	Q	S	A	B	H	MI	
							<p>NOTE: Adjust engine valve clearance after <u>first</u> 50 hours of operation.</p> <p style="text-align: center;">NOTE</p> <p style="text-align: center;">Perform Operator/Crew PMCS prior to or in conjunction with organizational PMCS if:-</p> <p style="padding-left: 40px;">a. There is a delay between the daily operation of the equipment and the organizational PMCS.</p> <p style="padding-left: 40px;">b. Regular operator is not assisting/participating.</p>
1					100		<p><u>MAST ASSEMBLY</u></p> <p style="padding-left: 40px;">a. Lubricate sliding and roller contact surfaces.</p> <p style="padding-left: 40px;">b. Clean and inspect lift chains for bent or cracked links. Check adjustment and lubricate.</p> <p style="padding-left: 40px;">c. Tighten top mast bolt to 135 ft. lbs. torque.</p>
2					100		<p><u>BATTERY</u></p> <p style="padding-left: 40px;">Inspect/service electrolyte level and charge as required. Check that cables are secure and clean (reference TM 9-6140-200-12).</p>
3					100		<p><u>ENGINE</u></p> <p style="padding-left: 40px;">a. Drain engine oil, replace oil filter and refill with five quarts (see Appendix E).</p>

ORGANIZATIONAL PREVENTIVE MAINTENANCE CHECKS AND SERVICES

Q-Quarterly S-Semiannually A-Annually B-Biennially H-Hours M-Miles

ITEM NO	INTERVAL						ITEM TO BE INSPECTED PROCEDURE: Check for and have repaired, filled, or adjusted as needed
	Q	S	A	B	H	MI	
4					100		<p>b. Check fan belt tension - 1/2" to 3/4" deflection at point halfway between fan and alternator pulleys with about 10 lbs. applied force.</p> <p><u>TRANSMISSION</u></p> <p>Check fluid level in transmission on dipstick located under the trap door in the floor plate. Engine must be running, transmission in neutral and parking brake set. Add transmission fluid to bring level up to full mark on dipstick.</p>
5					100		<p><u>DRIVE AXLE</u></p> <p>Check and clean breather located on housing.</p>
6					100		<p><u>FUEL TANK</u></p> <p>Clean fuel strainer.</p>
7					100		<p><u>DIFFERENTIAL</u></p> <p>Check oil level with truck on flat surface, add oil to bring level up to inspection plug.</p>
8					200		<p><u>HYDRAULIC OIL FILTER</u></p> <p>Replace. Check for leaks.</p>
9					200		<p><u>TRANSMISSION OIL FILTER</u></p> <p>Replace. Check for leaks.</p>

ORGANIZATIONAL PREVENTIVE MAINTENANCE CHECKS AND SERVICES

Q-Quarterly S-Semiannually A-Annually B-Biennially H-Hours M-Miles

ITEM NO	INTERVAL						ITEM TO BE INSPECTED PROCEDURE: Check for and have repaired, filled, or adjusted as needed
	Q	S	A	B	H	MI	
10					200		<u>HYDRAULIC OIL RESERVOIR</u> Replace breather.
11					500		<u>ELECTRICAL SYSTEM</u> Check tightness of terminals, wires, cables, and electrical components.
12					500		<u>HOSES, TUBES, AND FITTINGS</u> Inspect, replace or have replaced, if necessary, correct any leaks that are evident.
13					500		<u>WHEELS</u> a. Clean and lubricate steer wheel bearings. b. Inspect and replace as necessary the brake shoes (brake lining less than 0.125 in.). Turn cylinder if required (not to exceed .100).
14					500		<u>BRAKE MASTER CYLINDER</u> Check fluid level and add if necessary to bring level within 3/8" to 1/2" from top of reservoir.
15					500		<u>BRAKE PEDAL</u> Adjust, pedal should not reach floorboard when depressed with 1/2" free play.

ORGANIZATIONAL PREVENTIVE MAINTENANCE CHECKS AND SERVICES

Q-Quarterly S-Semiannually A-Annually B-Biennially H-Hours M-Miles

ITEM NO	INTERVAL						ITEM TO BE INSPECTED PROCEDURE: Check for and have repaired, filled, or adjusted as needed
	Q	S	A	B	H	MI	
16					500		<u>MAST ASSEMBLY</u> a. Check for side play of fork carriage and check chain adjustment if it is not level. b. Remove lift chains, clean and inspect for wear and broken or cracked links. Repair, install, adjust, and lubricate.
17					500		<u>ENGINE</u> a. Replace distributor points (0.020 gap). b. Replace spark plugs (0.025 gap). c. Remove and clean/replace PCV valve.
18					500		<u>PARKING BRAKE</u> Check and adjust as necessary
19					500		<u>CONTROL VALVE</u> Check linkage.
20					500		<u>UNIVERSAL JOINT</u> Check and adjust if necessary.

**APPENDIX H
BIIL
FOR
TRUCK, LIFT, FORK, 4,000 LB., GED., SRT
NSN 3930-01-039-8291
NSN 3930-01-039-8292**

SMR CODE	NATIONAL-STOCK NUMBER	DESCRIPTION REF NO. AND MFG CODE	USABLE ON CODE	UNIT OF MEASURE	QTY AUTH
	4210-00-889-2221	EXTINGUISHER, FIRE		EA	1
*	7520-00-559-9618	CASE MAINTENANCE MIL-B-11743(81349)		EA	1
*	7510-00-889-3494	BINDER LSE LF-3 RING GR MIL-B-43064(81349)		EA	1
*	Both of these Items will be replaced in later models by:				
	7530-01-065-0166	Equipment Record Folder		EA	1

**APPENDIX
BII
TRUCK, LIFT, FORK, 4,000 LB, GED. PT
NSN 3930-01-040-4594**

SMR CODE	NATIONAL-STOCK NUMBER	DESCRIPTION REF NO. AND MFG CODE	USABLE ON CODE	UNIT OF MEASURE	QTY AUTH
*	7520-00-559-9618	CASE, COTTON DUCK MIL-B-11743(81349)		EA	1
*	7510-00-889-3494	LOG BOOK BINDER MIL-B-43064(81349)		EA	1
*	NOTE: Both will be replaced in later models by: 7530-01-065-0166 Equipment Record Folder			EA	1

APPENDIX I
Distribution Codes

CC 55 & 56
Leave Blank

The image shows a detailed distribution code table with numerous columns and rows. The table is divided into several sections. A large arrow points from the text 'CC 55 & 56 Leave Blank' to a specific area in the table. Another arrow points from the text 'CC 54' to a specific column in the table.

CC 54

CONUS customers will use "F" in column 54.

CONUS customers will use the appropriate code below.

(extracted from Appendix P, paragraph P-3, AR 725-503, dated 29 Aug 75, with Change 1.)

Codes & Activities below:

A -----US Army Alaska Support Command
Fort Richardson, Alaska
APO Seattle, WA 98749

B -----USA International Logistics Center
New Cumberland Arm. Depot
New, Cumberland, PA 17070 (For
transceiver and mail)

- D-----US Army Security Agency
Supply and Maintenance Center
Vint Hill Farms Station
Warrenton, VA 22186

- E-----US Army Aviation Systems Command
P.O. Box 209
St. Louis, MO 63166

- *F-----US Army Logistics Control Activity
Presidio of San Francisco, CA 94129

- H-----US Army Support Command, Hawaii
(USASCH)
Schofield Barracks, Hawaii
APO San Francisco 96557

- I-----US Army Troop Support Command
4300 Goodfellow, Boulevard
St. Louis, MO 63120

- J-----US Army Supply and Maintenance
Activity, Sagami (USASMAS)
Sagami, Japan
APO San Francisco 96343

- K-----US Army Inventory Management Center
Camp Henry, Tae-a, Korea
APO San Francisco 96212

- L-----US Army Missile Command
Redstone Arsenal, AL 35809

- M-----Reserved (DA)

- O-----Reserved (DA)

- P-----US Army Electronics Command
ATTN: Director of Materiel Management
Fort Monmouth, NJ 07703

- Q-----US Army Materiel Command, Operations
APO New York 09052

- R-----Director for Supply Operations
Us Army Base Command, Okinawa
APO San Francisco 96248

S-----US Army Armament Command
Rock Island, IL 61202

T-----Reserved (DA)

*U-----US Army ;Medical Materiel Agency
Fredrick, MD 21701

V-----Reserved (DA)

W-----Reserved (DA)


X-----Reserved (DA)

Y-----US Army Tank-Automotive Commands
Warren, MI 48390

Z-----Directorate for Inventory Control
US Army Medical Materiel Center, Europe
Einseidlerhof, Germany
APO New York; 09227


APPENDIX J

FLOW OF REQUISITION AND MATERIEL
CHE/MHE PARTS (NSN)

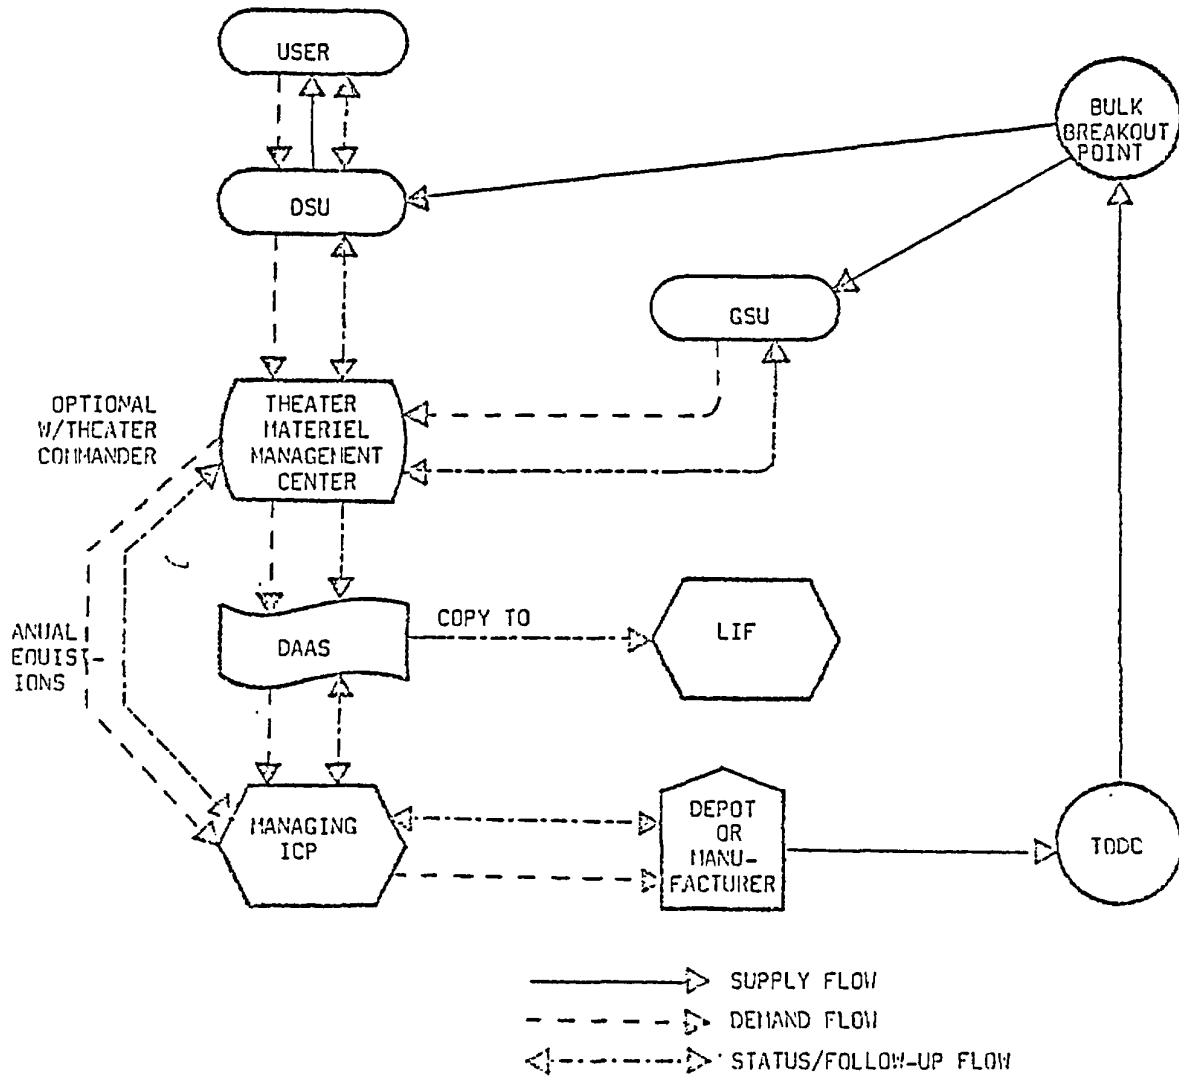

APPENDIX K

FLOW OF REQUISITIONS AND MATERIEL
CHE/MHE PARTS (NON-NSN)

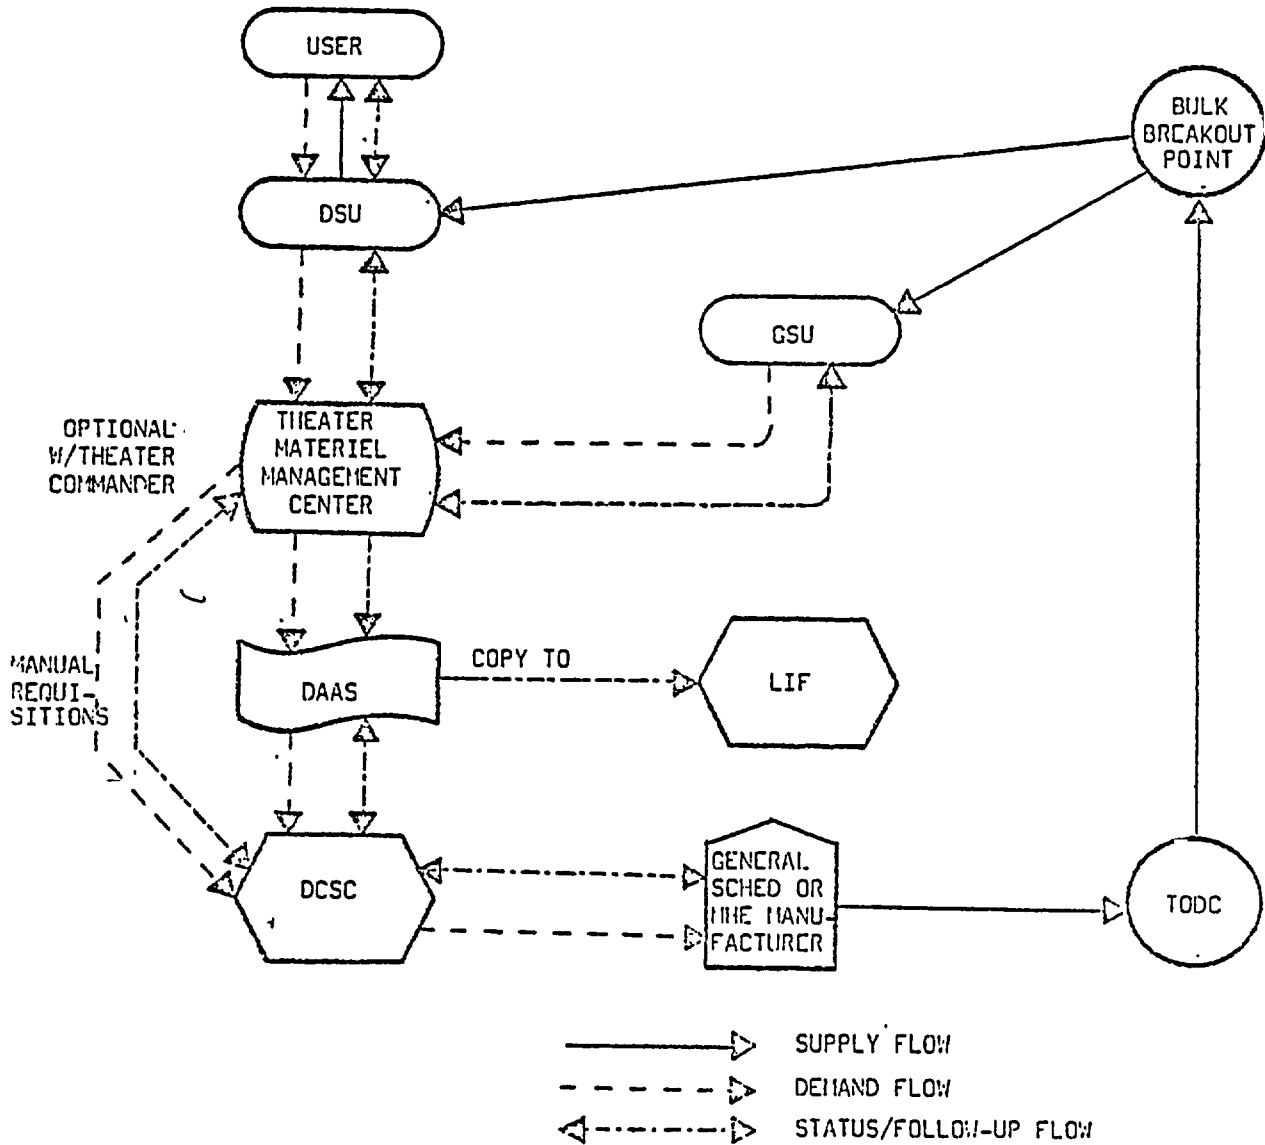

APPENDIX L

SAMPLE FORMAT - MILSTRIP REQUISITION FOR CHE/MHE (NSN)

<u>Card Column</u>	<u>Description of Data</u>	<u>Mandatory Entry For CHE/MHE</u>
1-3	Document Identifier Code	AØA - CONUS AØ1 - OCONUS
4-6	Routing Identifier Code	
7	Media/Status Code	
8-22	NSN	
23-24	Unit of Issue	
25-29	Quantity	
30-43	Document Number	
44	Demand Code	
45-50	Supplementary Address	
51	Signal Code	
52-53	Fund Code	
54-56	Distribution Code CC-54	"F" For CONUS; See AR 725-50 for OCONUS CC-55-56 - <u>Leave Blank</u>
57-59	Project Code	
60-61	Priority Code	
62-64	Required Delivery Date	
65-66	Advice Code	

APPENDIX L

SAMPLE FORMAT - MILSTRIP REQUISITION FOR CHE/MHE (NON-NSN)

The diagram shows a MILSTRIP requisition form with a grid of fields. The columns are numbered 1 through 59, and the rows are numbered 1 through 8. The form includes sections for document identifier, routing, unit of issue, quantity, and project code. The diagram is oriented vertically on the page.

Card Column	Description of Data	Mandatory Entry for CHE/MHE
1-3	Document Identifier Code	AØB - CONUS AØ2 - OCONUS
4-6	Routing Identifier Code	Always S9C
7	Media/Status Code	
8-22	FSCM and Part Number	
23-24	Unit of Issue	
25-29	Quantity	
30-43	Document Number	
44	Demand Code	
45-50	Supplementary Address	
51	Signal Code	
52-53	Fund Code	
54-56	Distribution Code CC-54	"F" for CONUS; See AR 725-50 for OCONUS CC-55-56 - Leave Blank
57-59	Project Code	CONUS - BGX OCONUS - JZM
60-61	Priority Code	
62-64	Required Delivery Data	
65-66	Advice Code	

APPENDIX L (CONTINUED)

INSTRUCTIONS

This form will only be used in those cases where the manufacturer's code and part number exceed the spaces allocated in card columns 8 - 22 of the requisition.

<u>CARD COLUMN</u>	<u>DESCRIPTION OF DATA</u>	<u>MANDATORY ENTRY FOR CHE/MHE</u>
1-3	Document Identifier Code	ABE - CONUS A05 - OVERSEAS
4-6	Routing Identifier Code	Always S9C
7	Media Status Code	
8-22	FSCM and Part Number	Leave Blank Enter in Block 1 Under Identification Data
23-24	Unit of Issue	
25-29	Quantity	
30-43	Document Number	
44	Demand Code	
45-50	Supplementary Address	
51	Signal Code	
52-53	Fund Code	
54-56	Distribution Code CC 54	"F" for CONUS. (See AR 725-50 for OVERSEAS. CC-55-56- <u>Leave Blank</u>
57-59	Project Code	CONUS - BGX OCONUS - JZM
60-61	Priority Code	
62-64	Required Delivery Date	
65-66	Advice Code	
67-80		Blank

IDENTIFICATION DATA - Lower half of DD Form 1348-6, complete blocks 1 thru 9.

PARTS LIST

BASE UNIT INDEX

BRAKE GROUP		FRAME GROUP	
BRAKE MASTER CYL.....	97	COUNTERWEIGHT.....	143
BRAKE PEDAL.....	95	FLOOR PLATE.....	145
DRIVE WHEEL BRAKES.....	99	MAST MOUNTING.....	159
PARKING BRAKE.....	103	OVERHEAD GUARD.....	149
PARKING BRAKE ASSY.....	91	SEAT ASSY.....	153
WHEEL CYLINDER.....	101	SEAT.....	151
DRIVE AXLE GROUP		SIDE PANEL.....	157
DIFFERENTIAL ASSY.....	90	BACKREST.....	185
DIFFERENTIAL CARRIER.....	89	FORKS.....	186
DRIVE AXLE.....	87	FUEL GROUP	
DRIVE WHEEL.....	93	ACCELERATOR.....	45
ELECTRICAL GROUP		AIR CLEANER.....	43
ALTERNATOR.....	47	CARBURETOR ASSY.....	39
ALTERNATOR ASSY.....	48	FUEL SYSTEM.....	37
BATTERY.....	67	HYDRAULIC GROUP	
BATTERY TRAY.....	69	CONTROL VALVE.....	135
DISTRIBUTOR ASSY.....	57	HYDRAULIC FILTER.....	131
DISTRIBUTOR .5.....	56	HYDRAULIC PUMP.....	125
HORN.....	63	HYDRAULIC RESERVOIR.....	129
INSTRUMENT PANEL ASSY.....	61	MAIN HYDRAULICS.....	123
INSTRUMENT PANEL.....	59	PLUNGER ASSY- 4908221-7.....	137
STARTER ASSY.....	53	PLUNGER ASSY - 4908223-3.....	139
STARTER.....	51	TILT CYLINDER.....	133
HEADLIGHT.....	64	MAST ASSY	
STOPLIGHT.....	65	LIFT CYLINDER CLUSTER.....	173
ENGINE GROUP		LIFT CYLINDER ASSY.....	165
CRANKCASE VENTILATION.....	111	STEERING GROUP	
CRANKSHAFT.....	5	SHIFTING ASSY.....	109
CYLINDER BLOCK.....	1	STEER AXLE.....	105
CYLINDER HEAD.....	9	STEER LNK.....	115
ENGINE MOUNTING.....	35	STEER UNIT.....	113
EXHAUST SYSTEM.....	33	STEER WHEEL.....	119
FLYWHEEL & HOUSING.....	21	TRANSMISSION GROUP	
GEAR COVER.....	23	FWD & REV DISC ASSY.....	79
INTAKE & EXH MANIFOLD.....	25	INCHING CONTROL.....	83
OIL FILTER.....	19	TRANSMISSION.....	71
OIL PAN.....	17	TRANSMISSION ASSY.....	73
OIL PUMP.....	15	TRANSMISSION FILTER.....	81
PISTON & CONN ROD.....	7	TRANSMISSION VALVE ASSY.....	77
RADIATOR.....	31	UNIVERSAL JOINT.....	85
THERMOSTAT & HOUSING.....	29	SIDE SHIFT COMPONENTS	
VALVE MECHANISM.....	13	CARRIAGE.....	189
WATER PUMP AND FAN.....	27	HOSE REEL GROUP.....	191
SIDE SHIFT COMPONENTS			
CARRIAGE.....			
HOSE REEL GROUP.....			
HYDRAULIC ADAPTATION.....			
LIFT CYLINDER.....			
MAST ASSEMBLY.....			
OVERHEAD GUARD.....			
SIDE SHIFT CYLINDER.....			

NUMERICAL INDEX

The following numerical index lists all Allis-Chalmers 4 million series part numbers found in the parts list and their page numbers.

Supplier information is listed in the form of the Federal Manufacturer's Code number and that manufacturer's part number.

The following is a list of the Federal Manufacturer's Code numbers that appear in the index along with their name and addresses

CODE	NAME AND ADDRESS	CODE	NAME AND ADDRESS
00624	Aeroquip Corp. Aircraft Division Jackson Plant 300 So. East Ave. Jackson, Mi. 49203	16764	Delco-Remy Division of General Motors Corp. 2401 Columbus Ave. Anderson, In. 46011
00779	Amp. Inc. P. O. Box 3608 Harrisburg, Pa. 17105	18265	Donaldson Co. Inc. 1400 West 94th St. Minneapolis, Mn. 55431
01943	Moeller Mfg. Co. Inc. P.O. Box 1318 Greenville, Ms. 38701	19728	Prestolite Co. the Division of Eltra Corp. P. O. Box 931 511 Hamilton St. Toledo, Ohio 43601
02397	North American Rockwell Corp. Brake Division Ashtabula, Ohio	20984	Arron Safety Device Co. Route 113 Georgetown, De. 19947
02660	Amphenol Corp. Broadview, Ill.	21003	Sparton Mfg. Co. Highway 50 West Flora, Ill. 62839
02978	Continental Motors Corp. Military Division Muskegon. Mi.	22031	Air Way Mfg. Co. 586 No. Main at US 27 Olivet, Mi. 49076
07200	Michigan Precision Molded, Inc. Walled Lake, Mi.	23040	Ford Marketing Corp. Autolite-Ford Parts Division P. O. Box 3000 Livonia, Mi. 48151
07988	Ambac Industries Inc. Fluid Power Systems Division 661 Glenn Ave. Wheeling, Ill. 60090	24455	General Electric Co. Lamp Division of Consumer Products Group Nela Park Cleveland, Ohio
08162	Bower Roller Bearing Division of Federal - Mogul Corp. 3040 Hart Detroit, Mi. 48214	27995	Warner-Motive Division of Borg- Warner Corp. Auburn Plant P. O. Box 351 Warner Road Auburn, In. 46706
11314	National Seal Division of Federal -Mogul Corp. 11634 Patton Road Downey, Ca. 90241	30321	Automation Industries Inc. Materials Evaluation Group Division 51 6106 Rookin St. Houston, Tx. 77036
11671	Tyrone Hydraulics Inc. P. O. Box 511 Corinth, Ms. 38834	30327	Imperial Division Imperial-Eastman Group I-T-E Imperial Corp. 6300 West Howard St. Chicago, Ill. 60648
15605	Cutler-Hammer, Inc. 4201 No. 27th St. Milwaukee, Wis. 53216		

CODE	NAME AND ADDRESS	CODE	NAME AND ADDRESS
30612	Allis-Chalmers Mfg. Co. Material Handling Division 21800 So. Cicero Ave. Matteson, Ill. 60443	70040	A C Spark Plug Division of General Motors Corp. 1300 No. Dort Hgwy Flint, Mi. 48556
32705	Vickers Mobile Division of Vickers Division of Sperry Rand Corp. Troy, Mi. 48084	70434	Anchor Coupling Co. Inc. Church and Fouth St. Libertyville, Ill. 60048
33544	Kickhaefer Mercury 157 Western Ave. Cedarburg, Wis. 53012	70485	Atlantic India Rubber Works, Inc. 571 No. Polk St. Chicago, Ill. 60607
36540	Lisle Corp. 805 E. Main Clarinda, Ia. 51632	71400	Bussman Mfg. Division of McGraw-Edison Co. 2536 West University St. St. Louis, Mo. 63017
49234	Protectoseal Co. 1920 So. Western Chicago, Ill. 60608	72210	Columbus Auto Parts Co. Hudson St. at North Freeway Columbus, Ohio 43211
50022	McCord [feat Transfer Division 2850 West Grand Blvd. Detroit, Mi. 48202	72530	Deluxe Products Corp. 1201 Michigan Blvd. Racine, Wis. 53402
52676	S. K. F. Industries Inc. Front St. and Erie Ave. Philadelphia. Pa. 19132	72625	Amsted Industries Inc. Diamond Chain Co. Division 402 Kentucky Ave. Indianapolis, In. 46225
57733	Stewart-Warner Corp. 1826 Diversey Parkway Chicago, Ill. 60614	72962	Elastic Stop Nut Division of Amerace ESNA Corp. 2330 Vouxhall Road Union, N.J. 07083
59730	Thomas and Betts Co. The 36 Butler St. Elizabeth. N.J. 07207	73134	Helm Universal Division The of North American Rockwell Corp. 60 Round Hill Rd. Fairfield. Ct. 06430
60038	Timken Roller Bearing Co. 1835 Dueber Ave. SW Canton, Ohio 44706	73370	Fram Corp. 105 Pawtucket Ave. Providence. R. I. 02916
60380	Torrington Co. The Subsidiary of Ingersoll-Rand Corp. 59 Field St. Torrington, Ct. 06790	73740	Ross Gear Division TRW Inc. Lebanon Plant P.O. Box 298 Lebanon, Tx. 37087
63477	Wagner Electric Corp. Wagner Division 6400 Plymouth Ave. St. Louis, Mo. 63133	73842	Goodyear Tire and Rubber Co. 1144 E. Market Akron, Ohio 44316
66295	Wittek Mfg. Co. 4309 West 24th Chicago, Ill. 60623	74400	Hobbs Division Stewart- Warner Corp. Yale Blvd. and Ash St. Springfield, Ill. 62705
67049	Young Radiator Co. 709 Marquette St. Racine, Wis. 53403	74465	Hoof Products Co. 6543 So. Laramic Chicago, Ill. 60638
70026	Chicago Fittings Corp. 18th Ave. at 21st St. Broadview, Ill. 60153		

CODE	NAME AND ADDRESS	CODE	NAME AND ADDRESS
75272	Kickhaefer Mfg. Co. 1964 Wisconsin Ave. Grafton, Wis. 53024	78480	Tillotson Mfg. Co. 761-69 Berdan Ave. Toledo, Ohio 43612
75677	Lincoln Mfg. Co. 2621 Flitcher St. Chicago, Ill. 60618	78553	Tinnerman Products Inc. 8700 Brookpark Rd. Cleveland, Ohio 44129
75958	Borg and Beck Division Borg Warner Corp. 12501 Chrysler Freeway Detroit, Mi. 48212	79136	Waldes Kohinoor Inc. 47-16 Austel Place Long Island City, N.Y. 11101
76005	Lord Manufacturing Co. Division of Lord Corp. 1635 West 12th St. Erie, Pa. 16512	79410	Warner Gear Division of Borg Warner Corp. 1106 E. Seymour St. Muncie, In. 47305
76110	Maremont Corp. 168 No. Michigan Ave. Chicago, Ill. 60601	79470	Weatherhead Co. The 300 E. 131 St. Cleveland, Ohio 44108
76680	National Seal Division of Federal-Mogul Corp. Broadway and National Redwood City, Ca. 94062	80201	Chicago Rawhide Mfg. Co. 1301 Elston Ave. Chicago, Ill. 60622
76700	Nelson Muffler Corp. P.O. Box 308 Staughton, Wis. 53589	80756	Ramsey Corp. Manchester, Weidman St. Louis, Mo. 63108
76871	Ohio Nut and Bolt Co. Division of Fastener Industries Inc. 33 First St. Berea, Ohio 44017	80813	Dimco Gray Co. 207 E. Sixth St. Dayton, Ohio 45402
77060	Packard Electric Division of General Motors Corp. 408 Dana St. NE Warren, Ohio 44481	80900	Eaton Corp. Spring Division 9771 French Rd. Detroit, Mi. 48213
77200	Pesco Division Burg-Warner Corp. 24700 No Miles Rd. Bedford, Ohio 44104	81300	Dayco Corp. 333 W. 1st Dayton, Ohio 45402
77260	Pierce Governor Co., Inc. P.O. Box 2000 Upland, In. 4-6089	82465	Mac Lean Fogg Lock Nut Co. 1000 Allanson Rd. Mundelein, Ill. 60060
77640	Ross Gear Division TRW Inc. Lafayette Plant Lafayette, In. 47902	82807	Milwaukee Resistor Co. 700 W. Virginia Milwaukee, Wis. 53204
77890	Service Products Corp. 201 So. Rural St. Indianapolis, In. 46201	86850	Champion Spark Plug Co. 1006 Fisher Bldg. Detroit, Mi. 48202
77915	Sheller-Globe Corp. Steering Wheel Division So. Bridge St. Portland, In. 41371	87946	Triangle Mfg. Co. 720 Division St. Oshkosh, Wis. 54901
		90763	United-Carr Inc. 4258 No. Cicero Chicago, Ill. 60640

CODE	NAME AND ADDRESS	CODE	NAME AND ADDRESS
91561	Bruning Co. P.O. Box 81247 Lincoln, Nb. 68501	95878	American Petroleum Institute 1271 Ave. of Americas New York, N.Y. 10020
92563	Mc Fill Mfg. Co. Inc. Bearings Division 907 Lafayette Valparaiso, In. 46383	95879	Alemite Instrument Division of Stewart-Warner Corp. 1826 Diversey Parkway Chicago, Ill. 60614
92850	Anchor Industries Inc. 1725 London Rd. Cleveland, Ohio 44112	96152	Marvel-Schebler Division of Borg-Warner Corp. 2195 So. Elwin Rd. Decatur, Ill. 62525
92863	Marvel Engineering Co. 7227 No. Hamlin Ave. Chicago, Ill. 60645	96867	Bushings Inc. 4358 Coolidge Hwy. P. O. Box 189 Royal Oak, Mi. 48068
92867	Orschein Brake Lever Mfg. Co. 1177 No. Morley Moberly. Mo. 65270	96906	Military Standards Logistic Services, DSA
93608	Standard Pressed Steel Co. National Machine Products Division Utica Plant 44225 Utica Rd. Utica, Mi. 48087	97286	North American Rockwell Corp. Commercial Products Group North American Rockwell Bldg. Pittsburgh, Pa. 15222
93784	Husco Division of Koehring Co. Pewaukee Rd. P. O. Box 257 Waukesha, Wis. 53187	97577	Mechanics Division of Borg-Warner Corp. Memphis Plant P. O. Box 8366 1248 Warford St. Memphis, Tx. 38108
96151	Char Lynn Co. 15151 Highway 5 Eden Prairie, Mn. 55343		

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
0910007-4	1	02978	X02207	0915538-3	111	70270	3041-B
		96906	MS35648-10			95878	
	77	02978	X02202		111	70270	3041-B
0910014-0	1	79410	117923			96906	
		96906	MS35048-11	0915661-3	69	79470	400X5
	111	02978	X02236	0915771-0	81	79410	147485
0910140-3	19	96906	MS35048-11	0915809-8	27	96906	MS90725-32
0910325-0		79470	49F.12X.312,49X5		81	79410	179816
0910510-7	111	96906	MS51967-14	0915815-5	129	30612	
0910941-4	17	96906	MS35691-33	0915898-1	67	30612	
	17	02978	X00202B			96906	MS45974-77
	29	02978	X00202B	0915990-6	99	30612	
0910965-3	47	96906	MS27040-10	0916004-5	87	30612	
0910978-6	77	30612		0916080-5	57	16764	274738
0910995-0	37	79470	42X5		159	96906	MS35206-263
0911062-8	188	96906	MS24665-130	0916081-3	65	96906	MS35206-279
0911100-6		96906	MS27183-21	0916159-7		78553	C7957-5618
0911317-6				0916169-6	43	96906	MS16562-236
0911421-6	69	96906	MS27183-12		49	96906	MS16562-236
0911982-7	105	96906	MS27183-10	30612			
0911987-6	49	96906	MS27183-13	0916532-5	163	96906	MS35206-281
		30612		0916602-6	109	96906	MS1968-8
0912264-9	105	96906	MS16997-80	0916604-2	105	96906	MS90726-6
0912279-7	185	96906	MS16995-97	0916621-6	57	16764	120361
0912319-1	3	30327	201E		63	96906	MS35649-202
0912494-6			MS15003-2		159	96906	MS35649-202
0912808-3	87	96906	MS15004-1	0916622-4	165	96906	MS35649-202
0913039-4	37	30612			49	96906	MS35690-404
0913107-9	69	96906	MS35338-41		49	96906	MS35690-404
0913160-8			MS51967-24		49	96906	MS35690-404
0913248-1			MS35650-3392		65	96906	MS51967-2
0913599-7	95	96906	MS90725-41		65	96906	MS35690-404
		27995			67	96906	MS51967-2
0913744-9	68	96906	MS35691-37		163	96906	MS35690-404
	87	96906	MS35691-34		165	96906	MS35960-404
	87	96906	MS35691-34	0916711-5	93	96906	MS16995-63
	185	96906	MS35691-34	0916713-1	173	30612	
0914192-0	105	96906	MS51967-2		179	30612	
0914383-5	3	02978	X05705	0916735-4	27	02978	X12191
0914453-6	31	30327	201E	0916803-0	13	02978	X00297A
0914465-0	101	95879	1610B		99	96906	MS35333-42
		96906	MS15003-1		127	96906	MS35333-42
0914687-9	185	96906	MS15001-1	0916950-9	49	96906	MS51967-8
	185	96906	MS15001-1		51	96906	MS51967-8
0915274-5	101	30612			59	96906	MS51967-8
		96906	MS15003-4		68	96906	MS51967-8
0915275-2	111	96906	MS15003-5		101	96906	MS51967-8
0915276-0	167	96906	MS15003-6		115	96906	MS51967-8
	159	95879	1613B		115	96906	MS51967-8
0915399-0	31	79470	3400X2		117	96906	MS51967-8
	37	79470	3400X2		119	96906	MS51967-8
	39	79470	3400X2		129	96906	MS51967-8

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
C-2715	190	02614					
C-3552	190	02614		0237006-2	53	16764	1941978
C-3554	190	02614		0242818-3	53	16764	1964117
C-604032	191	02614		0242826-6	53	16764	19711993
C-645977	190	02614		0242828-2	53	16764	1963139
C-645982	190	02614		0242829-0	53	16764	1959991
C-645986	190	02614		0242831-6	53	16764	1847933
C-646036	191	02614					30612
C-646064	190	02614		0242838-1	53	16765	1956975
C-646068	190	02614		0242840-7	53	16764	1846548
C-646069	190	02614		0243472-8	71	30612	
C-646075	190	02614		0243841-4	57	16764	1966391
C-646079	190	02614		0244912-2	45	96152	233-609
C-646246	190	02614		0246077-2	57	16764	1941113
C-646250	190	02614		0246098-8	57	16764	1926640
C-648569	190	02614		0252042-7	57	16764	1966923
C-649055	190	02614		0632465-1	93	60038	M88048
C-649106	190	02614		0632466-9	93	60038	M88010
C-7194	190	02614		0800465-7	45	96152	80-171
	191	02614		0900537-2	161	96906	MS35239-02
C-7337	190	02614					30612
C-7912	190	02614		0900576-0	161	96906	MS35206-281
C2715	191	02614					30612
C646081	190	02614		0900807-9			MS2465-355
C646340	191	02614		0900809-5			MS24665-359
C648569	191	02614		0900942-4	109	96906	MS24665-319
0042887-1	119	60038	26822	0901043-0	68	96906	MS15795-918
0067766-6	77	79410	8107A				30612
0080325-4	77	79410	4840F	0901226-1	57	16764	132255
0219968-5	43	96152	55-231	0901502-5	69	96906	MS51953-78
0219972-7	43	96152	15A82				30612
0219973-7	43	96152	15A91	0901504-1		30612	MS20913-19
0219976-0	43	96152	16-80	0901651-0			
0219977-5	43	96152	24-262	0901652-8	37	96906	MS20913-6S
0219978-4	43	96152	24-340	0901653-6	136	96906	MS20913-6S
0219985-9	43	96152	30-600		137	96906	MS20913-6S
0219986-7	43	96152	32-27	0901677-5	37	96906	MS51845-7
			30-600	0901826-8	85	96906	MS51887-3
0219997-4	45	96152	78-184	0903625-2	69	96906	MS90725-6
0219998-2	43	96152	16-4	0903626-0	69	96906	MS90725-32
0219999-0	43	96152	16-449	0903641-9			MS90725-116
0220000-4	43	96152	15-42	0904204-5	69	96906	MS35338-44
0222045-7	43	96152	15-285	0904208-6			MS35338-48
0222069-7	45	96152	15-409	0904205-2	69	96906	MS35338-45
0224949-8	43	96152	44-63	0904206-0	99	96906	MS35338-46
0224967-0	43	96152	15-409	0904230-0		30612	
0229611-9	43	96152	27-573	0904709-3	37	30612	
0233770-7	115	70485	1800	0906827-1	47	30612	
	141	70485	1800	0907859-3	39	30612	
			30612	0909055-6	57	16764	456319
0234792-9	53	30612	1965104	0909367-5			MS35332-40
				0910005-8	1	96906	M835648-8

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
	129	96906	MS51967-8		115	96906	MS35338-46
	141	96906	MS51967-8		115	96906	MS35338-46
	141	96906	MS51967-8		117	96906	MS35338-46
	141	96906	MS51967-8		119	96906	MS35338-46
	155	96906	MS51967-8		129	96906	MS35338-46
	159	96906	MS51967-8		129	96906	MS35338-46
	169	96906	MS51967-8		136	96906	MS35338-46
	171	93906	MS51967-8		139	96906	MS35338-40
0916951-7	157	96906	MS51967-14		141	96906	MS35338-46
	157	96906	MS51967-14		141	96906	MS35338-46
0916952-5	43	30612			149	96906	MS35338-46
0916954-1	25	02978	X18067		159	96906	MS35338-46
	33	02978	X18067		167	96906	MS35338-46
	141	02978	X18067		169	96906	MS35338-46
	141	02978	X18067		171	96906	MS35338-46
	141	02978	X18067		173	96906	MS35338-46
	141	02978	X18067		179	96906	MS35338-46
0916956-6		96906	MS27183-14	0916966-5	111	96906	MS35338-48
0916960-5	35	96906	MS35338-48		129	96906	MS35338-48
0916964-0	49	02978	X18067		133	96906	MS35338-48
		96906	MS35338-33		133	96906	MS35338-48
	49	96906	MS35338-44		139	96906	MS35338-48
	49	96906	MS35338-44		157	96906	MS35338-48
	49	96906	MS35338-44		157	96906	MS35338-48
	57	16764	9421423		189	96906	MS35338-48
	65	96906	MS35338-44		189	96906	MS35338-48
	65	96906	MS35338-44	0917023-4	95	96906	MS16556-48
	67	96906	MS35338-44	0917032-5	1	79470	3200X2
	91	96906	MS35338-44		19	79470	3200X2
	105	96906	MS35338-44	0917146-3	77	79410	423595
	115	96906	MS35338-44	0917258-6	33	96906	MS51969-3
	163	96906	MS35338-44	0917356-8	27	96906	MS35338-45
	165	96906	MS35338-44		37	96906	MS35338-45
	165	96906	MS35338-44		37	96906	MS35338-45
0916965-7	15	02978	X00203		37	96906	MS35338-45
	23	02978	X00203		47	96906	MS35338-45
		30612			51	96906	MS35338-45
	23	02978	X00203		57	16764	942124
	31	96906	MS35338-46		59	96906	MS35338-45
	33	96906	MS35338-46		63	96906	MS35338-45
	37	96906	MS35338-46		67	16906	MS35338-45
	49	96906	MS35338-46		67	96906	MS35338-45
	51	96906	MS35338-46		68	96906	MS35338-45
	51	96906	MS35338-46		77	79410	103320
	555	96906	MS35338-46		81	79410	103320
	59	96906	MS35338-46		85	96906	MS35338-45
	68	96906	MS35338-46		85	96906	MS35338-45
	91	96906	MS35338-46		91	96906	MS35338-45
	99	96906	MS35338-46		91	96906	MS35338-45
	101	96906	MS35338-49		93	96906	MS35338-45
	101	96906	MS35338-46		93	96906	MS35338-45
	105	96906	MS35338-46		105	96906	MS35338-45
	115	96906	MS35338-46		109	96906	MS35338-45

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
	109	96906	MS35338-45			30612	
		30612		0917378-2	115	96906	MS15795-415
	109	96906	MS35338-45		155	96906	MS15795-415
	115	96906	MS35338-45		159	96906	MS15795-415
	115	96906	MS35338 45	0917379-0	157	96906	MS27183-18
	131	96906	MS35338-45	0917385-6		96906	MS35649-282
	151	96906	MS35338-45	0917389-9	51	96906	MS35338-82
	159	96806	MS35338-45	0917395-5		96906	MS35338-43
	161	96906	MS35338-45	0917397-2	37	30612	
	161	96906	MS35338-45	0917415-2	1	96906	MS35650-302
	171	96906	MS35338-45		9	96906	MS35650-302
	173	96906	MS35338-45		37	96906	MS35650-302
	175	96906	MS35338-45	0917421-0	87	96906	MS35691-17
	179	96906	MS35338-45	0917441-8		96906	MS35206-245
	179	96906	MS35338-45	0917452-5	37	96906	MS35207-263
	189	96906	MS35338-45	0917459-0	65	96906	MS35338-4
	192	96906	MS35338-45	0917469-9	135	11671	62A6-10H
	192	96906	MS35338-45	0917479-8	65	96906	MS35649-262
	192	96906	MS35338-45	0917496-2		79410	352X6
	192	96906	MS35338-45	0917496-2	77	79470	352X6
0917361-8	111	96906	MS35692-922	0917611-6	93	96906	MS35671-62
0917365-9	1	96906	MS35338-43			30612	
	9	96906	MS35338-43	0917642-1	155	30612	
	37	96906	MS35338-43	0918065-4	81	79410	10-00-183-010
	57	16764	453435	0918066-2	79	79410	10-00-183-028
	63	96906	MS35338-43		81	79410	10-00-183-028
	159	96906	MS35338-43	0918155-3		30612	
	165	96906	MS35338-43	0918187-6	121	96906	MS15002-3
0917366-7	161	96906	MS90726-13			95879	
	161	96906	MS90726-13		167	96906	MS15002-3
0917372-5	29	02978	X01801E	0918199-1	21	96906	MS35338-47
	37	96906	MS51967-5		23	02978	X00270
	47	96906	MS51967-5	0918249-4	171	96906	MS90725-62
	59	96906	MS51967-5			30612	
	63	96906	MS51967-5	0918264-3	161	9&906	MS27183-10
	67	96906	MS51967-5			30612	
	85	96906	MS51967-5	0918265-0	47	96906	MS15795-812
	109	96906	MS51967-5		51	96906	MS15795-812
	109	96906	MS51967-5			30612	
	115	96906	MS51967-5		159	96906	MS15795-812
	115	96906	MS51967-5	0918266-8	59	96906	MS15795-814
	131	96906	MS51967-5		136	96906	MS15795-814
	161	96906	MS51967-5		169	96906	MS15795-814
	161	96906	MS51967-5		171	96906	MS15795-814
	171	96906	MS51967-5	0918267-6	87	96906	MS27183-16
	192	96906	MS51967-5	0918269-2	149	30612	
	192	96906	MS51967-5	0918270-0		96906	S551968-20
	192	96906	MS51967-5	0918431-8	68	96906	MS27183-17
0917373-2	185	96906	MS35338-50	0918447-4	101	96906	MS24665-317
0917373-3	173	96906	MS35338-50		159	96906	MS24665-311
	179	96906	MS35338-50	0918448-2	161	96906	MS24665-491
	187	96906	MS35338-50			30612	
0917376-6	51	96906	MS51967-8		173	96906	MS24665-285

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
	179	96906	MS24665-285	0919552-0	129	79470	C5129X6
0918451-6	87	96906	MS24665-351	0919953-0	23	02978	X06544
	185	96906	MS24665-351	0919958-9	27	02978	X03250
				0920102-1	115	88044	AN545-10-5
0918452-4	185	96906	MS24665-353	0920117-9	121	96906	MS24665-423
0918453-0	185	96906	MS24665-389	0920130-2	79	79410	444576
0918453-2	93	96906	MS24665-355	0920131-0	77	79410	10-00-052-008
	111	96906	MS24665-355		79	79410	10-00-052-008
0918465-6	121	30612		0920158-3		30612	
0918468-0	73	96906	MS35425-41	0920161-7	68	96906	MS51967-5
0918547-1	23	02978	X17089		73	96906	MS35691-9
0918567-9	91	30612			173	96906	MS35691-9
0918625-5	49	96906	MS24665-107		179	96906	MS35691-9
0918713-9	63	30612		0920165-8		96906	MS90725-66
0918748-5	111	30612		0920215-1	37	30612	
	111	30612		0920263-1	37	96906	MS35690-524
	111	30612			87	96906	MS35690-524
0918782-4	99	96906	MS16562-277		161	96906	MS51968-5
0918850-9	79	79410	10-00-052-004		161	96906	MS51968-5
		30612		0920321-7	69	24617	144577
	141	96906	MS49005-4			30612	
0918888-9	77	79410	10-00-052-006	0920328-2		96906	MS90725-113
0918906-9		96906	MS35333-46	0920329-0	161	72962	29N
0918960-6	69	79470	3750X2	0920380-3	69	96906	MS27183-10
0919089-3	157	96906	MS90725-114			30612	
0919134-7	77	79410	10-000-052-009	0920415-7	55	96906	MS90725-62
0919135-4	129	79470	C5404X6		129	96906	MS90725-62
0919172-7		30612			141	96906	MS90725-62
0919224-6	77	79410	179840		169	96906	MS90725-62
0919312-9	77	96906	MS35340-46		171	96906	MS90725-62
0919313-7	117	96906	MS24665-281		192	96906	MS90725-62
	185	96906	MS24665-281	0920426-4		96906	MS35335-34
0919318-6	93	96906	MS90725-31	0920427-2	75	96906	MS35338-46
0919326-9	59	96906	MS15795-812	0920428-0	185	96906	MS35335-37
0919327-7	49	96906	MS15795-818	0920435-5	165	96906	MS35691-1
0919332-7	113	96906	MS35338-51	0920437-1		96906	MS35691-5
	149	96906	MS35338-51	0920438-9	117	96906	MS35691-13
0910333-5	173	96906	MS51968-10	0920439-7	121	96906	MS35691-69
		30612		0920571-7	149	30612	
	179	96906	MS51968-10	0920572-5	63	96906	MS35206-263
0919350-9	87	30612		0920587-3	35	96906	MS90725-164
	111	30612		0920648-3	137	30612	
0919383-0	137	30612		0920655-8	39	79470	3350X2
0919386-3	192	96906	MS15795-816	0920743-2	149	30612	
		30612		0920779-6		96906	MS51887-3
0919390-5	19	30612		0920787-9	9	02978	X03236
	121	30612			173	96906	MS90725-29
0919423-4	111	96906	MS51968-14		179	96906	MS90725-29
		88044	AN315-8	0921013-9	193	30612	
	139	96906	MS51967-14	0921118-6	133	70434	24SK2
0919426-7		96906	MS35338-52	0921138-4	19	72962	4INTE26
0919430-9	167	30612		0921159-0		96906	MS90725-15
0919441-6	136	72962	21NE058	0921160-8		96906	MS90725-41

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
0921176-4	133	96906	MS90725-111	0921355-4	63	78553	C5711-5618-4
	133	96906	MS90725-111		151	78553	C7511-5618A
	157	96906	MS90725-111		153	78553	C7511-5618A
0921203-6	131	79470	C5515X12		155	78553	C7511-5618A
0921205-1	135	96906	M528778-10	0921409-9	189	30612	
	135	96906	MS28778-10	0921464-4	173	96906	MS51977-52
	141	96906	MS28778-10		179	96906	MS51977-52
	143	96906	MS28778-10	0921672-2	185	96906	MS16997-144
0921206-9	131	79470	7629X12	0921705-0	136	78553	C7935-3816-3B
	141	96906	MS28778-12		155	78553	C7935-3816-3B
	173	79470	7629X12	0921728-2	175	79470	C35365-2
	175	79470	7629X12		179	79470	C35365-2
	175	79470	7629X12	0921874-4	119	96151	194
	179	79470	7629X12	0921876-9	21	02978	X03429
	179	79470	7629X12	0921883-5	193	96906	MS28778-4
	179	79470	7629X12	0921885-0	129	79470	7629X6
0921210-0		96906			129	79470	7629X6
0921210-1	37	96906	MS90725-60		129	79470	7629X6
	55	96906	MS90725-60		131	96906	MS28778-6
	68	96906	MS90725-60	0921912-2	131	66295	24
	75	96906	MS90725-60	0921958-5	21	02978	X03938
	91	96906	MS90725-60		65	96906	MS90725-3
	129	96906	MS90725-60		91	96906	MS90725-3
	139	96906	MS90725-60			30612	
0921212-7	21	02978	X03368	0921965-0	31	96906	MS90725-58
0921221-8	109	96906	MS90725-64		51	96906	MS90725-58
	131	96906	MS90725-38		99	96906	MS90725-58
0921227-5	129	79470	C5515X16		101	96906	MS90725-58
0921237-4		30612			127	96906	MS90725-58
0921273-9		30612		0921965-2	49	30612	
0921279-6	189	30612		0921965-7	33	96906	MS90725-58
0921297-8	129	79470	C5706X6	0921966-8	105	96906	MS90725-59
0921332-3	37	96906	MS90725-32		136	96906	MS90725-59
	47	96906	MS90725-32		173	96906	MS90725-59
	63	96906	MS90725-32		179	96906	MS90725-59
	67	16906	MS90725-32	0921967-6	49	96906	MS90725-61
	85	96906	MS90725-32		115	96906	MS90725-61
	91	96906	MS90725-32	0921969-2	115	96906	MS90725-64
	155	96906	MS90725-32			30612	
	192	96906	MS90725-32		115	96906	MS90725-64
0921333-1	51	96906	MS90725-34		119	96906	MS90725-64
	67	96906	MS90725-34		141	96906	MS90725-64
	77	79410	10-00-183-27		155	96906	MS90725-64
	115	96906	MS90725-34	0921969-5		96906	MS90725-64
	129	96906	MS90725-34	0921971-8	77	79410	179845
	189	96906	MS90725-34	0921972-6	27	02978	X03776
	192	96906	MS90725-34	0921973-4	23	02978	26XX03259
0921342-2	175	72962	2INTE108		99	96906	MS90725-69
	179	72962	2INTE108	0921977-5	109	96906	MS90725-36
0921348-9	87	30612			151	96906	MS90725-36
0921349-7	143	30612		0921980-9	85	96906	MS90725-31
	189	96906	MS28778-8		109	96906	MS90725-31
0921351-3	141	96906	MS35239-119	0921982-5	87	96906	MS90726-36

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
0922002-1	127	96906	MS24665-534	0923293-5	139	96906	MS90726-116
0922026-0	137	30612			173	96906	MS90726-116
0922037-7	113	96906	MS35691-57		179	96906	MS90726-116
	149	96906	MS35691-57	0923320-6	189	96906	MS90725-119
0922047-4		30612			189	96906	MS90725-119
0922062-5	105	30612		0923325-5	59	96906	MS90725-33
0922089-8	35	30612			115	96906	MS90725-33
0922121-9		30612		0923325-6		96906	MS90725-33
0922130-0	23	02978	X03939	0923341-2	49	96906	MS90725-6
	117	96906	MS90725-67		49	96906	MS90725-6
	136	96906	MS90725-67		67	96906	MS90725-6
0922153-2	31	96906	MS27183-14		115	96906	MS90725-6
0922186-2		30612			165	96906	MS90725-6
0922198-5	47	96906	MS35842-13	0923351-1	35	72962	21NE101
0922198-7		96906	MS35842-13	0923360-2		96906	MS24665-134
0922212-6	111	96906	MS15003-6	0923362-8		30612	
0922295-1	141	30612		0923376-8	186	96906	MS28775-113
0922431-2		96906	MS51968-41	0923414-7		30612	
0922471-8	101	96906	MS35961-29	0923423-8	73	30612	
0922519-4	91	30612		0923462-6		96906	MS35690-1402
0922522-8		30612		0923500-3		96906	MS24665-359
0922523-6	129	79470	C5515-6	0923464-2	113	30612	
0922571-5	131	79470	C5515X4	0923548-2	143	30612	
	193	79470	C5515X4	0923559-9	119	96906	MS28775-011
0922586-3		96906	MS90725-56	0923572-2	123	30612	
0922660-6	129	66295	16	0923578-9	133	96906	MS28775-225
	131	66295	16	0923582-1	139	96906	MS28775-232
0922664-8		30612		0923649-8	139	96906	MS28775-218
0922751-3	119	96151	21046-1	0923690-2	3	79470	C3409X2
0922800-8	19	30612		0923703-3	57	16764	9427815
0922845-3	119	30612		0923781-9	35	30612	
0922887-5	111	95879	1720B	0923805-6	173	96906	MS21044N7
0922918-8	51	96906	MS90725-71		179	96906	MS21044N7
	101	96906	MS90725-71	0923810-6	186	96906	MS28775-212
0922921-2		30612		0923816-3		30612	
0922946-9	181	30612		0923826-2	186	96906	MS28775-326
0922967-5		30612		0923841-1	135	96906	MS29513-014
0922974-1					135	96906	MS29513-014
0922981-6	131	70434	128BC	0923858-5		30612	
0922996-4	137	96906	MS16887-80	0923861-9	65	96906	MS35206-230
0923045-9	17	02978	X22115	0923870-0	87	30612	
0923087-1	109	96906	MS35810-4	0923894-0	129	79470	C5715X6
		30612		0923903-9	119	30612	
0923092-1	68	96906	MS90725-1-10	0923912-0	68	96906	MS27183-18
0923093-9	117	96906	MS20392-4C31			96906	MS27183-18
0923114-3	129	96906	MS90725-109	0923938-5	159	96906	MS90725-68
0923124-2	77	79410	X807	0923989-8	143	30612	
0923151-5	187	96906	MS90725-160		145	32705	
0923163-0	131	79470	C5315X4		147	30612	
0923272-9		30612		0924009-4		96906	MS90725-7
0923290-1				0924044-1		30612	

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
0924048-2	135	96906	MS29513-012	0926702-2	127	60038	LM48548L
0924060-7	99	30612		0926705-5	185	96906	MS16997-166
0924092-0	135	96906	MS29513-216	0926786-5	193	30612	
		11671	55-216-8309	0926803-8	143	30612	
0924093-8	181	96906	MS29513-230		147	30612	
	183	96906	MS29513-230	0926975-4	131	79470	C5706X4
0924114-2	186	96906	MS29513-224	0927023-2	77	79410	3-62A
0924121-7	109	30612		0927149-5	57	16764	443527
*0924234-8	149	30612		0927150-3	57	16764	1967747
0924293-2	117	96906	MS15795-812	0927270-9	93	60038	LM102949
0924344-5		96906	MS90725-200	0927273-3	93	60038	LM102910
0924346-0	23	02978	X03363	0927326-9	68	30612	
0924353-6	188	96906	MS15795-842	0927434-1	111	60038	L68111
0924356-9	165	30612		0927435-8	111	60038	L68149
0924359-3		30612		0927436-6	111	60038	LM12711
0924360-1		96906	MS515795-818	0927437-4	111	60038	LM12749
0924607-5	93	30612		0927449-9	185	30612	
0924958-2	21	02978	X00203A			91561	6707-067
0925205-7	13	02978	X03203	0927547-0	143	30612	
	175	96906	MS90725-31	0927591-8	135	96906	MS28775-040
	179	96906	MS90725-31			30613	
0925295-8	129	79470	C5435X6	0927814-4	186	80756	RRT-200
0925311-3		30612		0927849-0	186	80756	RS-175
0925344-0		96906	MS90725-195	0927932-4	113	30612	
0925369-1				0927933-2	113	30612	
0925387-3				0928010-8	131	75272	CCV2113
09z5715-5				0928075-1	77	79410	10-00-183-010
0925670-2	151	30612		0928135-3	49	30612	
0925719-7	99	96906	MS24665-360	0928197-3	141	79136	5133-37
0925805-4	193	85757	3901-04544		141	79136	5133-37
	193	85757	3901-04544		141	79136	5133-37
0925898-9				0928208-8	143	30612	
0926053-0	33	30612		0928221-1		96906	MS90725-41
0926142-1	91	30612		0928241-9	135	96906	MS29513-013
0926146-2		30612				82458	942R
0926161-1	173	96906	MS90725-161	0928348-2	69	08108	1157
	179	96906	MS90725-161	0928416-7	89	96906	MS90727-32
0926243-7	111	30612		0928581-8	135	96906	MS28774-014
0926327-8	165	96906	MS15795-910			30612	
0926568-7	93	30612		0928588-3	15	30612	
0926593-5	91	30612		0928656-8	85	75272	COV1113
0926594-3	91	30612			129	75272	COU1113
0926624-8	181	96906	MS28774-230	0928720-2	139	79136	144 =- LIFT
	183	96906	MS28774-230	0928898-6		96906	MS90725-191
0926625-5	139	96906	MS28774-232				
0926671-9	77	79410	4776W				
	79	79410	4776W				
	79	79410	4776W				
0926680-0	185	30612					
0926681-8	173	96906	MS51959-12				
	179	96906	MS51959-12				

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
0928946-3	131	79470	C5705X4				
0928956-2	117	30612					
0929306-9	35	30612					
0929326-7	149	30612					
0929361-4	85	96906	MS27183-11				
	163	96906	MS27183-11				
0929362-2	25	02978	214264				
	27	02978	X05916				
0929365-5		96906	MS27183-21				
0929369-7	127	30612					
0929396-0		60038	JM511910				
0929399-4		60038	1511946				
0929402-6	47	96906	MS35842-10				
0929489-1	59	96906	MS90725-27				
0929499-1		96906	MS90725-209				
0929501-5		96906	MS90725-215				
0929522-1	109	30612					
0929530-4	173	96906	MS90726-114				
	179	96906	MS90726-114				
0929531-2	111	96906	MS90726-114				
0929533-8	173	96906	MS90726-162				
	179	96906	MS90726-162				
0929543-7	165	96906	MS35239-72				
0929544-5	165	96906	MS35239-86				
0929585-8	49	96906	MS24665-136				
0929589-0		96906	MS24665-326				
0929590-8	101	30612					
0929591-6	49	96906	MS20392-1C13				
0929592-4	101	96906	MS20392 6C37				

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
0929597-3	49	30612		1173329-2	53	1851612	1851612
	131	30612			53	16764	
0929606-2	127	30612		1173330-0	53	16764	1970145
0929607-0	99	30612		3046862-3	47	18265	P10-1872
0929615-3		03612		3057631-8	51	16764	1107578
0929652-6	181	30612			53	16764	1107578
	183	30612		3057631-8	51	16764	1107578
0930233-2		30612			53	16764	1107578
0930334-8	91	96906	MS51967-26	3057632-6	51	16764	800612
0930384-3		60300	B18160H	3108141-7		30612	
0930450-2	175	96906	MS51968-11	3108142-5		30612	
	179	96906	MS51968-11	3108143-3		30612	
0930679-6	123	30612		3108144-1		30612	
0930888-3		30612		3108145-1		30612	
0930978-2		22031	4601-12	3108146-6		30612	
0931024-4		60038	JH307710	3108147-4		30612	
0931025-1		60038	JH307749	3108148-9		30612	
0931130-9	93	30612		3108150-8		30612	
0931139-0	79	79410	10-00-183-030	4042650-4	57	16764	809593
0931140-8	79	79410	10-00-183-031	4042697-5	57	16764	818265
0931141-6	79	79410	10-00-183-029	4044397-0	57	1764	1839345
0931193-7	131	30612		4045429-6	43	96152	28-49
0931314-9	111	30612		4045441-5	43	96152	55-230
0931433-7	123	30612		4046790-8	43	96152	15A206
0931460-0	149	30612		4046803-9	45	96152	99-Z7,-
0931515-1	49	96906	MS90725-10	4046824-5	43	96152	15A93
	49	96906	MS90725-10	4047137-7	43	96152	29-81
0931528-4	117	30612		4050905-1	45	96152	99-4
0931575-5		77060	297751	4051269-1	57	16764	1931129
0931576-3		77060	2977510.	4051272-5	57	16764	1927853
0931713-2		22031	4501-5	4051275-8	57	16764	1928966
0931756-1		30612		4051276-6	57	16764	1906945
1002933-8	77	79410	10-01-671-001	4051277-4	57	16764	1926622
1007047-2	79	79410	T86-6.5	4051279-0	57	16764	1926618
1009610-5	53	16764	1971986	4051281-6	57	16764	1928015
1009611-3	53	16764	1852209	4051691-6	43	96152	15A295
1123067-9	43	96152	15A296	4052271-7	45	96152	179-11
1142678-0	53	16764	1970525	4054551-9	43	96152	78-62
1148619-8	53	16764	908019	4054758-0	57	16764	1913960
1172889-6	53	16764	1971990	4054799-4	53	16764	1915172
1172891-2	53	16764	1971528	4054848-9	53	16764	1869573
1172893-8	53	16764	1116387	4055871-0	57	16764	1940477
		30612		405588i-9	57	16764	1939970
1172894-6	53	16764	1852002	4060192-4	57	16764	1960864
1172895-3	53	16764	7451931	4250052-0		60038	14138A
1172896-1	53	16764	801824	4250061-1	99	60038	362A
1172897-9	53	16764	1846900	4251645-0	68	75272	TC79
1172899-5	53	16764	800832		69	75272	TC79
1173326-8	53	16764	453434	4252197-1	31	70434	6M6UFS
1173327-6	53	16764	1971519	4252647-5	85	70434	6MAX-6UFS
1173328-4	53	16764	1846864			30612	

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4708304-3	33	21995	WA31-30	4721573-6.	67	16764	1116781
4708310-0		76110	X175			30612	
4708313-4	101	63477	FC3353	4722511-5	109	92867	6110C42-775
	103	63477	FC673	4724666-5	68	77060	278
4708318-3	101	63477	FC673	4724667-3	68	02660	236
4708319-1	101	63477	FC602		68	02660	236
	103	63477	FC603		69	02660	236
4708362-1	65	71400	4522	4724728-3	63	30612	
4708603-8	85	80434	6MA-UFS	4724733-3	63	27191	7118K2
4708605-3	85	70434	4MA4UFSX	4726629-1	69	63477	FC7715
4709114-5	131	30612		4727352-9	63	30612	0W449
4709816-5	115	77915	601		41	30612	
4710053-2	91	30612		4734450-2	101	30612	
4710092-0	91	70270	13100	4734887-5		30612	
4710442-7	33	92850	218	4735714-0	37	57733	72030
4710809-7	105	78189	114-05	4735718-1	49	30612	
4710934-3	101	63477	FC4289	4735947-6		63477	FC3474
4711590-2	33	30612		4736044-1	37	30612	
4712841-8		30612			69	77060	277
4712905-0		30612					
4713023-2	127	30612					
4713374-9	101	63477	FE3085D				
	103	63477	FE3085D				
4713963-9	99	30612					
4713969-9	72210	S3689					
4713970-4	72210	S2218					
4713971-2	72210	S4664					
4713972-0	72210	S5851					
4714616-2	139	30612					
4714624-6	192	30612					
	192	30612					
0929597-3	49	30612					
	131	30612					
0929606-2	127	30612					
-0929607-0	99	30612					
0929652-6	181	30612					
	183	30612					
0930334-8	91	96906	MS51967-26				
		30612					
4715712-8	173	30612					
	177	30612					
4716088-2	33	30612					
4716827-3	91	30612					
4716873-7	37	79410	131-56730				
4717072-5	105	63477	FD20945A				
	107	63477	FD20945A				
4718022-9		30612					
4718482-5	167	30612					
4719720-7	173	30612					
	179	30612					
4720549-7	115	70485	1303				

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4253050-1	99	60038	368	4255637-3		30612	30612
4253253-1	91	60038	14276D	4255646-4		30612	30612
4253254-9	91	60038	14139	4255744-7	129		
4253263-0	111	60380	B16160H	4255744-9		33544	CDU1113
4253284-6		60038	14276	4255819-7		60038	2729
4253297-8	91	11314	40438	4255820-5		60038	2789
4253299-4	91	60038	W07	4255821-3		60038	1429710
4253435-4	37	30612		4255822-1		60038	LM297001
4253456-0	31	66295	26	4255823-9		60038	6284
4253543-5	79	79410	B207AG	4331040-8	91	60038	
4254037-7	99	60038	25580	4335601-3	167	09367	4335601-3
4254038-5	99	60038	25520	4365450-8		74400	41269
4254318-1	127	60038	LM48510	4375953-9		30612	
4254481-7	68	75272	CC051	4377201-1	93	30612	
		11671	58A5000-150	4408655-1		59730	RB873
4254608-5	135	79136	N5000-150	4408658-5	65	74400	236
4254654-9	83	79410	4840E	4501458-6	91	80201	200W1610
4254658-0	77.	79410	B109A	4507415-0	109	30612	
	77	79410	B109A		109	30612	
4254666-3	81	79410	T11-107	4511898-1	87	77260	4070-3
4254667-1	77	79410	T11-110	4512207-4	19	73370	235114
4254697-8	81	79410	T11-108			30612	
4254703-4	127	60038	LM67048	4512341-1	19	73370	108089
4254704-2	127	60038	LM67010	4514972-1	37	30612	
4254773-7	91	60038	K91507	4515665-0		16764	1115065
4254846-1	68	02660	31184	4516129-6	59	16764	1115065
	68	02660	31184	4516583-4	37	30612	
4254864-4	75	30612		4612316-2	47	30612	
4254912-1	93	76680	450085	4612682-7		30612	
4254976-6	68	93608	400D113	4701704-1	173	72625	C331134
4254984-0		60038	26884		179	72625	C331134
4254986-5		80201	504960		185	72625	C331134
4255039-2		82465	29LFHU51618	40022-47-0	69	-77060	285
4255041-8		82465	29LFH43816	4704828	68	30612	
4255055-8	63	30612		4705279	65	71400	AGC10
4255060-8	165	30612			65	71400	AGC10
4255068-1	159	30612		4706891-1	99	30612	
4255126-7	192	30612			127	30612	
4255183-8	49	79136	X5133-31	4707059-4	99	30612	
4255195-2	68	30612		4707060-2	91	30612	
4255355-2	68	59730	TY24M	4707234-3	91	30612	
	85	59730	TY24M	4707255-8	105	30612	
4255401-4	49	79136	X5133-37	4707307-7	105	63477	FC2305
4255430-3	71	59730	TY3	4707331-7	87	91821	
4255431-1	68	30612			101	30612	
4255470-9	83	79410	4840S	4707401-8	109	30612	
4255521-9		02660	321235	4707440-6	91	30612	
4255557-3		30612		4707650-0	79	79410	A5512X12
4255481-6	109	72962	42ND10-054	4707711-0	95	79187	WA31-31
4255574-8	37	86579	110-3/16	4707712-8	95	79187	A5751

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4737615-7	93	30612					
4737639-7	68	08108					
	68	30612					
4739110-7	19	84971	5C4-10				
4741167-3	192	30612					
4741699-5	103	63477	FC3163				
4742113-6	167	30612					
4744948-3	91	30612					
4745363-4		78643	DS108				
4747109-9	91	30612					
4747196-6	101	63477	FC2672				
4747339-2		30612					
4747622-1		30612					
4747691-6	93	30612					
	97	30612					
4747693-2	97	02397	3719X76				
4749382-0	37	49234	127310				
4749684-9	93	30612					
4749988-4		30612					
4750039-2	159	30612					
4750091-3		76110	X14				
4750169-7		30612					
4750170-5	85	30612					
4750202-6	109	92867	81-000111				
	109	92867	81-000111				
4750203-4	109	30612					
4751032-6	75	30612					
4751627-3	91	30612					
4751644-8	91	30612					
4751804-8	89	30612					
4751985-5	91	30612					
4752002-8	75	30612					

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4753681-8	143	07322	011	4770449-9	69	30612	
	145	07322	011	4771148-6	73	90058	310911
	147	07322	011	4771179-1	73	90058	3238A
4754948-07		76871	ES2112	4772761-5	63	30612	
4755380-5	75	71000	XF12K56	4773420-7		30612	
4755381-3	75	75958	F7X90	4774455-2	129	30612	
4755785-5	35	76005	J8006	4774533-6		30612	
4755930-7	99	30612		4774537-7		30612	
4757678-0	68	77060	5286201	4774640-9	49	30612	
4757912-3	63	71400	AGC20	4774925-4		73942	R5515LW
4758547-6		96867	1325-3M1	4774989-0		73892	CL49
4758727-4	127	30612		4774993-2		30612	
4758875-1	71	30612		4775866-9	68	30612	
4758888-2		73842	241-6023			08108	4411
4760149-7	9	70040	1513462	4775867-7	68	80813	95
4760327-9		70434	6M4UFS	4775868-5	68	30612	
		30612		4775869-3	68	30612	
4760448-3	85	30612		4775899-0	67	30612	
4761006-8	99	30612		4776665-4	141	93784	4499-2
4761032-4	75	75958-	F7W09	4776666-2	141	93784	4499-4
4761270-0	49	73134	R6-14-8	4781446-2	68	72210	S5896
4764130-0	63	30612			113	72210	S5896
4765164-1	91	63477	FC17814		125	72210	S3896
	105	63477	FC17814			30612	
4765192-2		73809	D191-4F	4783056-7	65	30612	
4765514-7	49	92850	3316-S	4783362-9	188	30612	
4765753-1	117	30612		4784266-1	101	87946	FBE4086
4765796-0	173	30612		4784720-7	101	30612	
	179	30612		4785070-6	115	73740	33050
4766588-0	63	30612		4786323-8	115	73740	453077-A1
4767130-0	37	30612		4786324-6	115	77640	029037
	37	30612		4786325-3	115	77640	401081
	63	30612		4786326-1	115	77640	029031
4767411-4		30612		4786327-9	115	77640	450029
4767762-0	111	72210	HX5531	4786329-5	119	96151	32390A1
4767763-8	111	72210	HX5530	4786330-3	119	96151	401082
4768993-0	69	63477	FC35111	4786331-1	119	96151	009039
4769239-7	85	30612		4787230-4		30612	
4769247-0	113	72210	S5340	4787365-8	91	30612	
4769248-8	113	72210	S1223	4787707-1		30612	
	125	72210	31233	4788876-3		30612	
4769566-3	139	30612		4789058-7	47	18265	P2348
4769567-1		30612		4789288-0	91	30612	
4769711-5		30612		4789293-0		30612	
4769720-6		30612		4790062-6	65	30612	
4769721-4		30612		4790065-9	37	30612	
4769885-7	105	30612		4791361-1	65	30612	
4769886-7	105	30612		4793751-1		78940	
4769887-3	105	30612		4794839-3	109	92867	YT19-1685
4769888-1	105	30612		4795693-3	99	30612	
4769892-9	105	30612		4795711-3		30612	

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4795712-1		30612		4810695-9	47	30612	
4795884-8	91	30612		4811115-7	85	70434	4MA4UFS
4795885-5		30612		4811136-3	85	70434	4MAX-4UFS
4796543-9	67	30612		4811824-4	111	80900	NAN181
4797003-3		30612		4811834-3		30612	
4797234-4		30612		4812057-0		30612	
4797273-2	91	30612		4812197-4		02397	DLM7-79
4798027-1	69	30612		4812198-2		02397	3719X232X
4798797-9		30612		4812693-2		76260	2416751-9
4799393-7		30612		4812705-4	121	30612	
4801298-3	71	30612		4812920-0	173	30612	
4801466-6		77640	453090		179	30612	
4801467-4		77640	450189A1	4812920-9	185	30612	
4801469-0		77640	028370	4812929-0	173	30612	
4801471-6		77640	032389		179	30612	
4801473-2		77640	401323		185	30612	
4801474-0		77640	401322	4812930-8	173	30612	
4803166-0		30612			179	30612	
4803175-1		30612			185	30612	
4803599-2	173	92563	BR704	4812935-7	173	30612	
	179	92563	BR704		179	30612	
4804565-2	47	18265	RBX00-2220	4812974-6	173	30612	
4804768-2	188	30612			179	30612	
4804776-5	188	30612		4813026-4	193	30612	
4804779-9	188	30612		4813781-4	173	30612	
4805495-1		30612			179	30612	
4806104-8		30612		4814056-0		30612	
4806357-2	136	30612		4814108-9	139	73680	17149-1117
4806406-7	85	70434	6MA6UFS	4814109-7	139	30612	
4806763-1		80648	17SE28-X3	4814133-7	139	96779	TP032
4806772-2		30612		4814134-5	139	30612	
4806773-0		30612		4814170-9	93	30612	
4806774-8		30612		4814171-7	93	30612	
4806775-5		30612		4814172-5	93	30612	
4806776-3		30612		4814173-3	93	30612	
4806777-1		30612		4814174-1	93	30612	
4806811-8		30612		4814175-8	93	30612	
4807349-8	105	30612		4814364-8	1	70060	5654782
4807680-6	188	30612		4814702-9	87	30612	
4807682-2	113	30612		4815921-4		30612	
4807684-8	113	30612		4816113-7		30612	
4808392-7	111	30612		4816184-8		30612	
4808396-8	111	30612		4816185-5		30612	
4808397-6	111	30612		4816375-2	175	30612	
4808398-44	111	30612			179	30612	
4808402-4	105	30612		4816376-0	175	30612	
4808718-2	139	30612			179	30612	
4809524-4	185	91561	6707-067	4816384-4	69	30612	
	186	91561	6707-067	4816684-7	173	70026	R944-12
4809584-8	185	30612			179	70026	R944-12
4810184-4		30612		4816708-4	181	30612	
4810232-1	65	30612			183	30612	
4810184-3		30612		4816747-2	181	30612	

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
	183	30612		4822811-8	185	30612	
4816748-0	181	30612		4822814-2	185	30612	
	183	73680	17149-1109	4823201-1		30612	
4816749-8	139	30612		4823231-8	93	30612	
	181	30612		4823283-9	101	63477	FC2678
	183	30612		4823285.4	101	30612	
4816820-7	183	30612		4823287-0	37	30612	
4816843-9	183	30612		4823333-2		30612	
4816888-4	173	30612		4823391-0	136	30612	
	183	30612		4824223-4	129	30612	
4816947-8	181	73680	17149-1109	4824226-7		30612	
	183	30612		4824293-7	85	30612	
4816991-6	181	30612		4824315-8	187	30612	
4817011-2	181	3Q612		4824370-3		30612	
4817087-2	175	30612		4824664-9	101	92850	3032
	179	30612		4825041-9	139	30612	
4817171-5		30612		4825413-4		30612	
4817768-7		30612		4826029-3		30612	
4818260-4	65	70040	6462577	4826079-8	119	96151	206-1097-001
4818261-2	65	70040	6431382	4826143-2	37	30612	
4818262-0	65	70040	6489590	4826244-8	131	30612	
4818263-8	65	70040	6473718	4826276-0	167	30612	
4818534-6		30612		4827196-9		30612	
4818809-8		30612		4827515-0		30612	
4818812-2		30612		4827755-2	131	30612	
4818813-0	49	30612		4827968-1	115	30612	
4818848-6	93	30612		4828091-1		76260	25497J
4818849-4	93	30612		4828179-4	173	30612	
4818850-2	93	30612			179	30612	
4818851-0	93	30612		4828474-9	161	30612	
4818852-8	93	30612		4828568-8	173	30612	
4818915-3	99	30612			179	30612	
4819212-4	19	3Q612		4828800-5		30612	
	19	30612		4829288-2	173	30612	
4819491-4	65	57733	356		179	30612	
4819590-3	129	30612-		4829298-1		30612	
4819814-7	173	30612		4829299-9	89	30612	
	179	30612		4829335-1	139	30612	
4819871-7	161	30612		4829336-9		30612	
4820955-5	151	30612		4829439-1	123	30612	
4820972-0	33	91561	7008-169	4829479-7	185	30612	
4820980-3	121	72210	S230041	4829621-4	173	30612	
	125	72210			179	30612	
4820995-1	163	30612		4829752-5	173	30612	
4821003-3	149	30612			179	30612	
4821743-4	175	30612		4829757-6	173	30612	
	179	30612			179	30612	
4821902-6	175	07988	PD278B165	4830173-3	67	21003	C8388
	179	07988	PD278B165	4830537-9	65	30612	
4822178-2	131	30Q12		4830998-3	111	30612	
4822341-6	85	30612		4831749-9	33	76700	T12508
4822613-8	131	30612		4831754-9	37	30612	
4822760-7		30612		4831977-6	111	30612	

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4831978-4	111	30612		4843301-5	139	30612	
4832052-7	131	30612		4843526-7	141	30612	
4832342-2	101	30612		4843535-8	131	30612	
4832538-5		30612		4843874-1	115	30612	
4832715-9	115	87946	FBE4253	4844078-8	111	30612	
4832732-4	117	30612		4844327-9		30612	
4832944-5	91	30612		4844559-7		30612	
4833505-3	59	30612		4844619-9	65	30612	
	65	30612		4844690-0	189	02614	735340
4833571-5	181	30612			191	02614	735340
	183	30612				30612	
4833733-1	131	30612		4844691-8		02614	735339
4834705-8	185	32508	80	4844692-6	189	30612	
4835376-7	185	30612		4844885-6	159	30612	
4835378-3	136	72530	DX1603Z	4845319-5	131	30612	
4836043-2		30612		4845597-6	131	30612	
4836253-7	136	30612		4845598-4	131	30612	
4838336-8	93	30612		4845678-4	91	30612	
4838338-4	91	30612			136	30612	
	93	30612		4846106-5	141	30612	
4838778-1	93	23040	C7AW4143A	4846107-3	141	30612	
4839229-1	129	30612		4846108-1	141	30612	
4839229-4	131	30612		4846111-5		32705	CM11N02R20TDL-21
4839231-0		30612					CM11N020TDDL21-099
4839271-6	179	30612		4846112-3	141	32705	
	183	30612					
4839272-4	183	30612		4846114-9	131	30612	
4839274-0	183	30612		4846665-0	141	306.12	
4839276-5		30612		4846667-6	141	30612	
4839276-6		30612			141	30612	
4839277-3	181	30612			141	30612	
4839402-7		30612		4847435-7		30612	
4839404-3	181	30612		4847462-1	115	30612	
4839647-7	189	02614	646050	4847561-0	117	30612	
	190	02614	646050	4847694-9	91	30612	
4839700-4	93	30612		4847837-4	91	30612	
4839703-8	93	23040	C8AW4067-4	4848483-6	63	30612	
4839704-6	93	79187	14-04-000-003	4848486-9	51	16764	1961291
	95	79187	14-04-000-003	4848758-1	33	30612	
4839705-3		27995	14-04-000-004	4848884-5		30612	
		30612		4848885-2	37	02978	X01698
4839751-7	185	30612		4848948-8	181	30612	
4839752-5		30612		4848955-3	181	30612	
4839752-8	185	30612		4849712-7	47	30612	
4840790-2	115	30612		4850688-5	185	30612	
4841221-7	141	30612		4851222-2	115	30612	
4841556-6		30612		4852461-5		30612	
4841879-2	47	18265	FWG05-2575	4853745-0	173	30612	
4842455-0	65	30612		4853828-4	173	30612	
4842513-6	159	30612		4853849-0	173	30612	
	161	30612		4854976-0	111	60380	EA46743
4843026-8	75	30612		4855026-3	131	30612	
4843300-7	139	30612		4855349-9		30612	

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4855547-8		30612			61	19728	1BT4701C
4855689-8	91	30612		4857898-3	35	30612	
	136	30612		4858053-4		30612	
4855690-6	59	82807	12M40-50	4858103-7		30612	
4855988-4		30612		4858130-0	59	30612	
4856248-9		30612		4858150-5		30612	
4856433-0		30612		4858181-3	87	30612	
4856321-7	91	30612		4858184-7	33	30612	
4856552-7	179	30612		4858197-9	31	24161	4283-10
4856600-4	31	30612		4858198-7	31	24161	4283-13
4856601-2	27	77890	9508DX	4858263-9		30612	
4856611-1	133	30612		4858264-7		30612	
4856612-9	129	30612		4858265-4		30612	
4856615-2	27	81300	5-9308	4858266-2		30612	
4856618-6	51	30612		4858267-0		73842	B6015LWD
4856620-2	37	30612		4858279-5	47	30612	
4856621-0	111	30612		4858427-0	47	30612	
4856623-6	111	30612		4858680-4	59	30612	
4856658-2	149	30612		4858745-5	149	30612	
4856670-7	37	96152	GAX2791	4858746-3	149	30612	
	43	96152	GAX2791	4858935-2		30612	
	45	30612		4858996-4	89	76260	50749
4856671-5	149	30612		4859095-4	139	30612	
4856680-6		30612		4859180-4	39	30612	
4856682-2		30612					
4856684-8		76700	T14355				
4856689-7		30612					
4856695-4		30612					
4856781-2	37	30612					
4857049-3		30612					
4857050-1		30612					
4857059-2		30612					
4857171-5		92863	305162R2500				
4857172-3		30612					
4857173-1	115	30612					
4857180-6		30612					
4857193-9	101	30612					
4857195-4	155	30612					
4857198-8	39	74465	S10M106-911				
4857222-6		30612					
4857225-9		30612					
4857230-9		30612					
4857245-7	35	30612					
4857249-4	87	30612					
4857258-0	149	30612					
4857358-8	101	30612					
4857708-4	123	30612					
4857829-8	139	30612					
4857840-5		30612					
4857878-5	59	19728	1BT4701C				

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4859243-0		30612		4867522-7	123	30612	
4859247-1		30612		4867850-2	185	30612	
4859248-9		30612		4867958-3	179	30612	
4859249-7		30612		4867959-1	177	30612	
4859284-5	75	75958	S11TC	4867999-7	165	30612	
4859423-8	59	30612		4868008-6	49	30612	
4859424-6	59	30612		4868015-1		70040	5650718
4859816-3	63	30612		4868106-8		30612	
4860448-2	65	30612		4868271-0		30612	
4860675-0		96906	MS90725-41	4868125-8	49	30612	
4860679-2		30612		4868395-7	193	30612	
4860695-8	159	30612		4868432-8	87	30612	
4860734-5		30612		4868749-5	49	30612	
4860736-0		30612		4869251-1	87	30612	
4861032-3		30612		4869541-5	171	30612	
4861046-3	115	30612		4869619-9		30612	
4861162-8		30612		4869622-3		30612	
4861170-1	115	30612		4869623-1		30612	
4861172-7	73	30612		4869628-0		30612	
4861307-9	141	30612		4869638-9		30612	
4861540-5	129	30612		4873188-9	165	30612	
4861541-3	129	30612		4873421-4		30612	
	129	30612		4874220-9	149	30612	
4861667-6		30612					
4862067-8		30612					
4861532-1		30612					
4863217-8		30612					
4863263-2		30612					
4863123-8	179	30612					
	181	30612					
4863125-3	173	30612					
	181	30612					
4863192-3	123	30612					
4863193-1	123	30612					
4863194-9	123	30612					
4863737-5	63	30612					
4863981-9		30612					
4864082-5	49	30612					
4864085-8	49	30612					
486A087-4	49	30612					
4864097-3	149	30612					
4864169-0	153	30612					
4864447-0	121	30612					
	123	30612					
4864813-3	139	30612					
4864816-6	133	30612					
4866350-4	51	30612					
4866779-4	165	30612					
4866945-1		30612					
4867466-7	65	16476					
4867521-9	123	30612					

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4874327-2	141	30612		4880716-8	171	30612	
	141	30612		4880718-4	171	30612	
	141	30612		4881483-4	35	30612	
4874333-0	149	30612		4881588-0	63	30612	
4878437-9	75	79410	10-01-000-058	4881589-8	63	30612	
	77	79410	10-01-000-058	4881591-4	129	30612	
4874858-6	121	30612		4881592-2	151	30612	
4875492-3	123	30612		4881593-0	131	30612	
4875561-5	117	30612		4881716-7		30612	
4875688-6		30612		4881730-8		30612	
4875689-4		30612		4881900-7	177	30612	
4876533-3	65	16764	1115836		179	30612	
4876696-3	55	16764	1109053	4881901-5	173	30612	
4876696-9	57	16764	1109053		173	30612	
4876715-6	87	30612		4882022-9	63	30612	
4876719-8	133	30612		4882025-2	165	30612	
	135	30612		4882027-8	165	30612	
4876955-8	115	30612		4882030-2	169	30612	
4877044-0	115	30612		4882031-0	159	30612	
4877822-9	131	30612		4882032-8	63	30612	
4878132-2		30612		4882037-7	129	30612	
4878135-5		30612		4882038-5	129	30612	
4878139-7		30612		4882056-7	65	30612	
4878140-5		30612		4882061-7	157	30612	
4878141-3		30612		4882349-6	65	30612	
4878142-1		30612		4882401-5	136	30612	
4878145-4		30612		4882421-3	47	30612	
4878146-2		30612		4905003-2	135	11671	20901-3
4878149-6		30612		4905098-2		76260	42-16751-9
4878164-5	149	30612		4905637-1	57	16764	1967968
4878165-2		30612		4905659-1		02397	4-3722T202
4878341-1		02987	F163-08283	4905789-6	77	79410	3-61
4878456-5		30612		4905790-4	77	79410	4671H
4878470-6		30612		4905792-0	77	79410	T126-25
4878471-4		30612		4905793-8	77	79410	AT12G106
4878473-0		30612		4905843-1	173	70026	NR375-12
4878474-8	65	30612			179	70026	NR375-12
4878476-3		30612		4905864-7	186	91561	50051-307
4878477-1	129	92863	265162C2500		186	91561	50051-307
4878479-7		30612		4905876-1	119	96151	5512
4878480-5		30612		4905877-9	119	96151	5126
4878494-9	115	77640	450160	4905883-7	83	79410	AT12-16A
4879296-4	115	30612		4905897-7	37	70040	6428516
4879818-5	165	30612		4906025-4	119	96151	5389-1
4880395-1		30612		4906026-2	119	96151	5663-3
4880396-1		11671	PVP2-115A	4906099-1		30612	
		30612		4906099-9	181	30612	
4880510-5		30612			181	30612	
4880513-9		30612		4906100-5	183	30612	
4880515-4		30612		4906113-8	186	30612	
4880525-3	169	30612		4906135-1		14892	25831
4880707-7		30612		4906136-9	105	14892	314606

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4906137-7		14892	49798	4908203-5	143	32705	246632
4906179-9	186	91561	39028-102		145	32705	246632
4906332-4	139	30612			147	32705	246632
	139	30612		4908204-3	143	32705	284156
4906387-8	135	11671	11803		145	32705	28415
4906401-7	95	79187	14-04-033-001		147	32705	284156
4906402-5		27995	WA31-3	4908205-0	143	32705	284155
4906403-3	95	79187	14-04-032-001		145	32705	284154
		27995			147	32705	284155
4906404-1	95	79187	14-04-056-001	4908206-8	143	32705	259871
4906406-6	95	79187	WA31A			30612	
4906408-2	161	79187	WA31A	4908207-6	143	32705	232799
		30612		4908208-4	143	32705	283856
4906409-0	77	79410	10-01-156-001		145	32705	283856
4906418-1	57	16764	1952410		147	32705	283856
4906618-6	161	30612		4908209-2	143	32705	286669
4906800-0	186	91561	39005-222		145	32705	286669
4907244-0		30612			147	32705	286669
4907245-7	95	30612		4908210-0	143	32705	226161
4907320-8	136	30612			147	32705	226161
4907382-8	161	30612		4908211-8	143	32705	237736
4907383-6	161	30612			147	32705	237736
4907398-4	119	96151	15048	4908212-6	143	32705	307198
4907399-2	119	96151	5723-1		147	32705	307198
4907400-8	119	30612		4908213-4	143	32705	223489
4907476-8	161	09704	7-283		147	-32705	223489
		30612		4908214-2	143	32705	222640
4907477-6	137	92863	576366-5110		145	32705	222640
4907479-2	186	91561	50067-406	4908215-9	143	32705	117717
4907549-2	43	96152	13-1528		145	32705	117717
4907552-6	43	96152	15-392	4908216-7	143	32705	223388
4907555-9	43	96152	26-357		145	32705	223388
4907559-1	43	96152	43-159	4908217-5	143	32705	1656
4907581-5	43	96152	44-39		145	32705	1656
4907583-1	43	96152	47-731	4908219-0	141	32705	223153
4907586-4	43	96152	55-243	4908221-7	141	32705	CM11N02R0T-099
4907588-8	77	79410	4806B		143	32705	CM11N02R0T-099
4907589-8	45	96152	81-145			30612	
4907590-5	45	96J52	80-167	4908222-5	141	32705	CM11N02DL-21-066
4907607-8	31	67049	A262742		147	32705	CM11N02D21
4907649-0	161	30612		4908223-3	141	32705	CM11N02D21
4907650-8		30612			141	32705	CM11N02DL-21-066
4907651-6	161	30612					
4907656-5	77	79410	3-4A60C				
4907711-0		27955	WA31-3			30612	
4907794-3	47	18265	P12-2510	4908224-1	143	32705	922906
4908201-9	143	32705	282027		145	32705	922906
	145	32705	282027		147	32705	922906
	147	32705	282027			30612	
4908202-7	143	32705	284155	4908325-6	79	79410	10-011-039-0
	145	32705	284155	4908501-2	13	02978	Y400G00232
	147	32705	284155	4908502-0	13	02978	Y400G00231


PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
	81	79410	10-01-736-001	4909823-9	23	02978	X01800C
4909136-6	81	79410	10-01-156-002	4909824-7	1	02978	D600B00203
4909137-4	81	79410	10-01-237-001		23	02978	D600B00203
4909138-2	81	79410	10-01-040-001	4909825-4	1	02978	X06962
4909139-0	81	79410	10-01-156-003		23	02978	X06962
4909140-8	81	79410	10-01-237-002	4909827-0	23	02978	X00546
4909142-5	81	79410	10-00-043-005	4909828-8	13	02978	F400M00279
4909161-4		30612		4909832-0	21	02978	X02949
4909162-2		30612		4909834-7	185	30612	
4909289-2	135	11671	21980	4909840-3	43	96152	49A31
4909316-4	77	79410	10-01-107-008	4909841-1	43	96152	24-328
4909493-0	135	11671	10665	4909863-5	89	76260	50750
		30162		4909868-4	75	13445	9224-07
4909738-9	45	30612		4909869-2	79	30612	
4909739-7	27	30612			81	30612	
4909760-3	13	02978	F124H001401		83	30612	
4909761-1	5	02978	D600H003000	4909906-2	43	96152	10-5141
4909763-7	5	02978	F162X00210	4909907-0	43	96152	12-903
4909764-5	5	02978	F209C00203	4909908-8	43	96152	14-379
4909765-2	23	02978	F401B00503	4909909-6	43	96152	24A324
4909766-0	23	02978	F4U02013	4909910-4	43	96152	25-322
	27	30612	F4U02013	4909911-2	43	96152	25-684
4909767-8	21	02978	F401C04100	4909912-0	43	96152	29122
4909769-4	23	02978	F244H00202	4909913-8	43	96152	29-536
4909770-2	5	02978	F244H00308	4909914-6	43	96152	46-A133
4909771-0	5	02978	F162H00311	4909915-3	45	96152	227-2047
	23	02978	F209B00329			30162	
4909772-8	23	02978	F209K02260	4909917-9	77	79410	10-01-534-002
4909773-6	23	02978	F209K000330	4909981-5	39	74465	H200-481
4909774-4	23	02978	F209B00208	4901030-8		02978	F400H00357
4909776-9	27	02978	F600K04521	4901032-4		02978	F400H00418
4909777-7	27	02978	F401K00342	4910070-4	1	02978	X04038
4909778-5	27	30612	F6T01011	4910074-6	23	02978	26XX05793
4909779-3	15	02978	F6T02002	4910075-3	21	02978	X06541
4909780-1	15	02978	F600L04132	4910078-7	15	02978	X18387
4909781-9	13	02978	F400100343	4910086-0	83	30612	10-00-016-011
4909782-7	9	02978	F401A03691	4910088-6	123	30612	
4909783-5	7	02978	F226D04002	4910105-8	59	02978	SP201S00016RD
4909785-0	7	02978	F601F03001	4910341-9	79	79410	10-01-410-012
4909786-2	7	02978	F400T00352	4912200-5	17	02978	F400B00282
4909788-4	21	02978	F401B00403	4912201-3	17	02978	X14583
4909793-7	15	02978	D600H00220	4912238-5	77	79410	10-01-689-021
4909794-2	23	02978	F209B00413		83	79410	10-01-689-021
4909795-9	27	02978	F400K00340	4912255-9	77	30612	
4909797-5	27	02978	F401K00317	4912314-4	57	16764	1114458
4909818-9	29	02978	F400K00380	4912342-5	83	79410	10-11-666-004
4909819-7	27	02978	X02443	4912343-3	83	79410	10-01-125-005
4909820-5	23	02978	X03942			30612	
4909821-3	29	02978	X04102	4912344-5	83	79410	10-01-625-003
4909822-1	23	02978	F600K00266	4912345-8	83	79410	10-11-666-005

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4912346-6	83	79410	10-01-124-003	4981981-6		72210	44-034
	83	79410	10-01-124-003	4984141-4	103	63477	FD14422
4912350-8	77	30612		4984142-4	103	63477	FC11476
4912407-5	135	11671	24994	4984152-9	103	63477	FC2108
4912409-2	135	11671	32822	4984153-9	103	63477	FC11143
4912505-7	17	02978	F401B04200	4984155-4	103	63477	FC14297B
4912510-7	135	30612		4984156-2	103	63477	FC2927E
4912557-3	137	92863	265000C2500-2	4984157-0	103	63477	FC10901C
4912558-6	137	92863	25000-3	4984158-8	103	63477	FC11065C
4912559-4	137	92863	909420-20	4984159-6	103	63477	FC12103
4912560-2	137	92863	265162-16DC	4984201-6	103	63477	FC11301
4912561-0	137	92863	265000-15			30612	
4912566-9	137	92863	265000-1	4984504-3	89	97577	114-2116A
4912745-9	1	02978	F400A612619R		89	97577	114-2116A
4912746-7	1	02978	F400A612746S	4987572-7	97	02397	A3736V333
4912747-5	7	02978	F163A04081E	4987574-3	97	02397	372C133
4912748-3	7	02978	X07011	4987575-0	97	02397	177P94
4912868-9	135	11671	64BC6-104	4987578-4	97	97286	19366
4912928-5	135	11671	11817	4987579-2	97	02397	2758W23
4912929-9	135	11671	11944	4987584-4	77	30612	
4912930-7	135	11671	13714	4987585-9	77	79410	T12-7
4912931-5	135	11671	12713	4987586-7	77	79410	T12-146
4912933-1	135	11671	12862	4987588-3	79	79410	T12-35
4912934-9	135	11671	12847	4987589-1	79	79410	4717C
4912935-6	135	11671	11974	4987590-9	79	79410	T11-147
4912936-4	135	11671	11794	4987593-3	77	79410	T12-7
4912937-2		96151	5389-10	4987595-8	79	79410	T11-116
4912938-0		96151	56634-4	4987596-6	79	79410	T12-150
4912939-8		96151	6901-3	4987597-4	79	79410	T12-147
4912940-6		96151	866	4987600-6	77	79410	4806F
4912941-4		96151	15048	4987603-0	83	79410	4622C
4912942-2		96151	5796	4987609-7	83	79410	4823B
4912964-6		30612		4987611-3	83	79410	T11-97
4916169-6	105	30612		4987630-2	81	79410	T11-244
4965162-5	105	63477	FC23880A	4987634-5	81	79410	4868A
4980048-5		76260	BK37863	4987635-2	81	79410	T11-230
		30612		4987644-479		79410	AT11-195
4981084-9	103	63477	FC6019	4987673-3	81	79410	T11-223
4981104-5	41	78480	0W355	4987702-0	77	79410	4824
4981105-2	41	78480	0W352	4987703-8	79	79410	4743B
4981106-0	41	78480	06096	4987758-2		72210	S10003
4981107-8	41	78480	06137	4987791-3	107	63477	FC4637
4981108-6	41	78480	0W462	4987792-1	107	63477	FC5353
4981109-4	41	78480	0W446			30612	
4981110-2	41	78480	0W432	4988062-8	81	79410	T1-215
4981289-4	107	63477	FD470	4991217-3	37	49234	01273-10-36
4981290-2	107	63477	FC724	4991740-7	77	79410	4863A
4981291-0	107	63477	FC725	4991741-2	77	79410	4868B
4981292-8	107	63477	FC723	4991747-9	81	79410	T11-288A
4981769-5	107	63477	FC11596	4992358-4		72210	S14953
4981815-6	125	72210	S3589			30612	
4981978-1		72210	S1679	4992361-8		72210	D16095
4981979-0		72210	S2137	4992396-4	111	72210	S15081
4981980-8		72210	S2139	4992397-2	111	72210	S10534

TM 10-3930-644-14&P

PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.
4993479-7		76260	114-4110	4998682-1	186	91561	50059-012
4993759-2	135	11671	20858-7	4998849-6	57	16764	1928023
4993823-6	135	11671	10566	4998851-7	57	16764	1951567
4993825-1	135	60380	16AS2116	4999280-3	83	79410	AT11-67A
4994900-1	119	96151	15	4999281-1	188	30612	
4994901-9	119	96151	370	4999354-6	77	79410	T11-98
4994903-5	119	96151	843	4999355-3	77	79410	T11-99
4994904-3	119	96151	846	4999539-2	83	79410	T12-48
4994906-8	119	96151	1857	4999620-0	186	91561	6707-067TA
4994907-6	119	96151	1859	4999621-8	186	91561	6707-070-1213
4994908-4	119	96151	20599	4999827-1	135	11671	10835
4994910-0	119	96151	21124	7909762-9	5	02978	F401H00200
4994912-6	119	96151	14092	9931831-3		30612	
4994913-4	119	96151	21146				
4994915-9	119	96151	5029				
4994916-7	119	96151	5244				
4995266-6		72210	D-17119				
4995371-4	119	96151	5244				
4995372-2	119	96151	844				
4995378-9	119	96151	21149				
4995379-7	119	96151	21151				
4995380-5	119	96151	21173				
4995381-3	119	96151	21142				
4995382-1	119	96151	21144				
4995383-9	119	96151	21141				
4995592-5	77	79410	48060				
4995594-1	77	79410	T11-17A				
4995595-8	77	79410	T11-6B				
4995626-1	77	79410	4745F				
4995627-9	77	79410	B210AF6				
4996250-9	47	18265	P10-2144				
4996251-7	47	18265	P10-1093				
4996252-5	47	18265	P10-3008				
4996254-1	47	18265	P10-2523				
4996255-8	47	18265	P10-3007				
4996438-0	83	79410	4737Y				
4996464-6	47	18265	P2904				
4997175-7	57	16764	1932197				
4997176-5	57	16764	1958679				
4997180-7	57	16764	1928021				
4997181-5	57	16764	1928022				
4997568-3		30612					
4997587-3	79	79410	T11-33				
4997977-6		11617	57-087-150-1				
4997977-9	135	11671	57-087-150-102				
4998176-4	186	91561	39003-102				
4998178-0	186	91561	39004-201				
4998179-9	57	16764	455106				
4998258-0	119	96151	5214				
4998320-8	119	96151	5415				
4998612-8	186	91561	50011-326				
4998673-0	83	79410	9409011				


PART NO.	PAGE	VENDOR CODE	VENDOR PART NO.	VENDOR PART NO.	PAGE	VENDOR CODE	PART NO.
4908746-3	15	02978	F600L0413	4909127-5	81	79410	10-01-040-002
4908747-1	15	02978	X17095	4909128-3	81	79410	10-01-239-002
4908748-9	15	02978	C400L00231	4909129-1	81	79410	10-01-045-003
4908749-7	15	02978	F400L02511	4909130-9	81	79410	10-01-036-001
4908750-5	15	02978	17EL00300	4909131-7	81	79410	10-01-236-002
4908751-3	15	02978	17EL00204	4909132-6	81	79410	10-01-239-001
4908753-9	27	02978	F226K00223	4909133-4	81	79410	10-01-236-001
4908754-7	27	02978	0A200K03040	4909134-1	81	79410	10-01-156-004
4908756-2	27	02978	F400K00392	4909135-8	79	79410	10-01-236-001
4908757-0	27	02978	F400K00391				
4908759-6	27	02978	K600K00220				
4908760-4	53	16764	1846523				
		30612					
4908780-2	1	02978	X00334				
4908781-0	9	02978	X00101B				
4908782-8	27	02978	X07096				
4908783-6	27	02978	X03794				
4908786-9	25	02978	F400E00303				
4908789-3	37	70040	6416448				
4908790-0		11671	21776				
4908941-0	95	79187	14-04-410-001				
4908941-9		27995	14-04-410-001				
4908988-1		92863	1529206-5110				
4908991-4	37	74465	H722A				
4908992-3		74465	H732-6				
4908993-1	37	74465	H789				
4908995-6	57	16764	1938178				
4908996-4	57	16764	1938171				
4908997-2	57	16764	1958465				
4909056-6		74465	H732H				
4909057-4		74465	H732D				
4909100-3	61	19728	1BP2040LA				
4909101-0	61	19728	1BB2042SS1				
4909102-8	61	19728	1BT1111				
4909103-6	61	19728	1GP1016D				
4909104-4	61	19728	1BT2004LAS				
4909105-1	61	19728	1BT14A				
4909106-9	61	19728	1BT1078LB				
4909107-8	61	19728	1BT2113A				
4909108-5	61	19728	1GB399GS				
4909109-3	61	19728	1BT10S				
4909110-2	61	19728	P90-423				
4909111-9	61	19728	P90-392				
4909112-7	61	19728	1BT1035				
4909113-5	61	19728	8X1590				
4909114-3	61	19728	1BT1007CS				
4909118-4	77	79410	10-01-045-004				
4909119-2	83	79410	10-00-016-002				
4909121-8	79	79410	10-01-565-013				
4909124-2	81	79410	10-01-237-003				
4909125-9	81	79410	T11-247				
4909126-7	81	79410	T22-213				

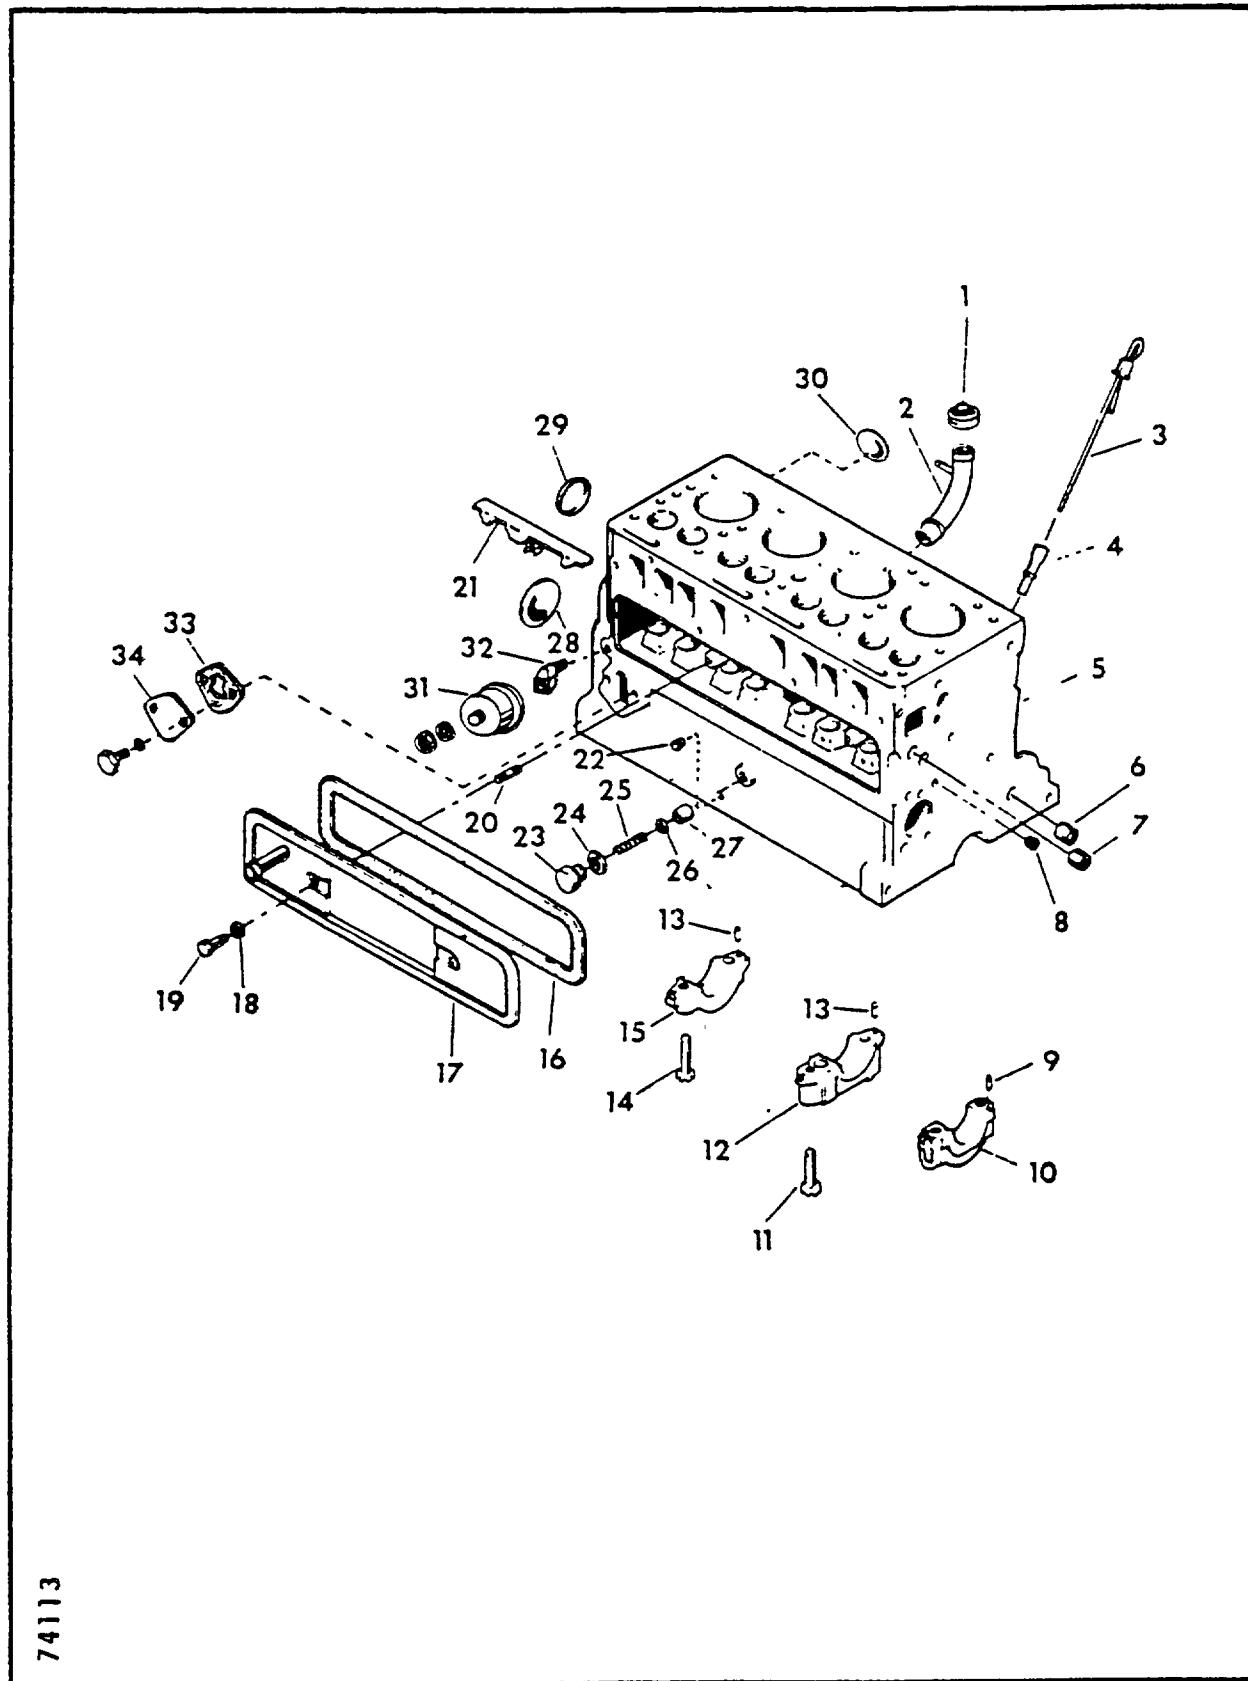

74113

CYLINDER BLOCK

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4908517-8	CAP-OIL FILLER	1	
2	4908700-0	OIL FILLER-CRANKCASE	1	
3	4908613-5	ROD-OIL GAUGE	1	
4	4908701-8	SUPPORT-ROD	1	
	4912745-9	BLOCK ASSY-SHORT	1	SEE NOTE A
5	4912746-7	ENGINE ASSY-SERVICE	1	SEE NOTE B
6	4909824-7	DOWEL-RING	1	
7	4909825-4	DOWEL-RING	1	
8	4908560-8	PLUG	3	
9	4908536-8	DOWEL	2	
10	4908618-4	CAP-FRONT BEARING	1	
11	4908640-8	BOLT-PLACE-.50" -13 X 2.5"	2	
12	4908626-7	CAP-CENTER BEARING	1	
13	4908507-9	DOWEL	4	
14	4908537-6	BOLT-PLACE	4	
15	4908600-2	CAP-REAR BEARING	1	
16	4908538-4	* GASKET-COVER	1	
17	4908610-1	COVER-VALVE CHAMBER	1	
18	4908780-2	* GASKET-COPPER	2	
19	4908580-6	NUT	2	
20	4910070-4	STUD-.25" -20 X 1.50"	2	
	4908612-7	BAFFLE-REAR	1	
	4908611-9	BAFFLE-FRONT	1	
22	4908539-2	PLUG-SOCKET-.13"	1	
23	4908524-4	PLUG-RELIEF VALVE	1	
24	4908525-1	GASKET-COPPER	1	
25	4908526-9	SPRING-RELIEF VALVE	1	
26	4908578-0	WASHER-PLAIN-.25"	*	USE AS REQUIRED
27	4908519-4	PLUNGER-RELIEF VALVE	1	
28	0910014-0	PLUG-EXPANSION-.5" PT	1	
29	0910005-8	PLUG-EXPANSION-1.12"	1	
30	0910007-4	PLUG-EXPANSION-1.38"	2	
31	4814364-8	SENDER-OIL PRESSURE.	1	
	0917365-9	LOCKWASHER-#10	1	
	0917415-2	NUT-#10 -32	1	
32	0917032-5	ADAPTOR- .12"	1	

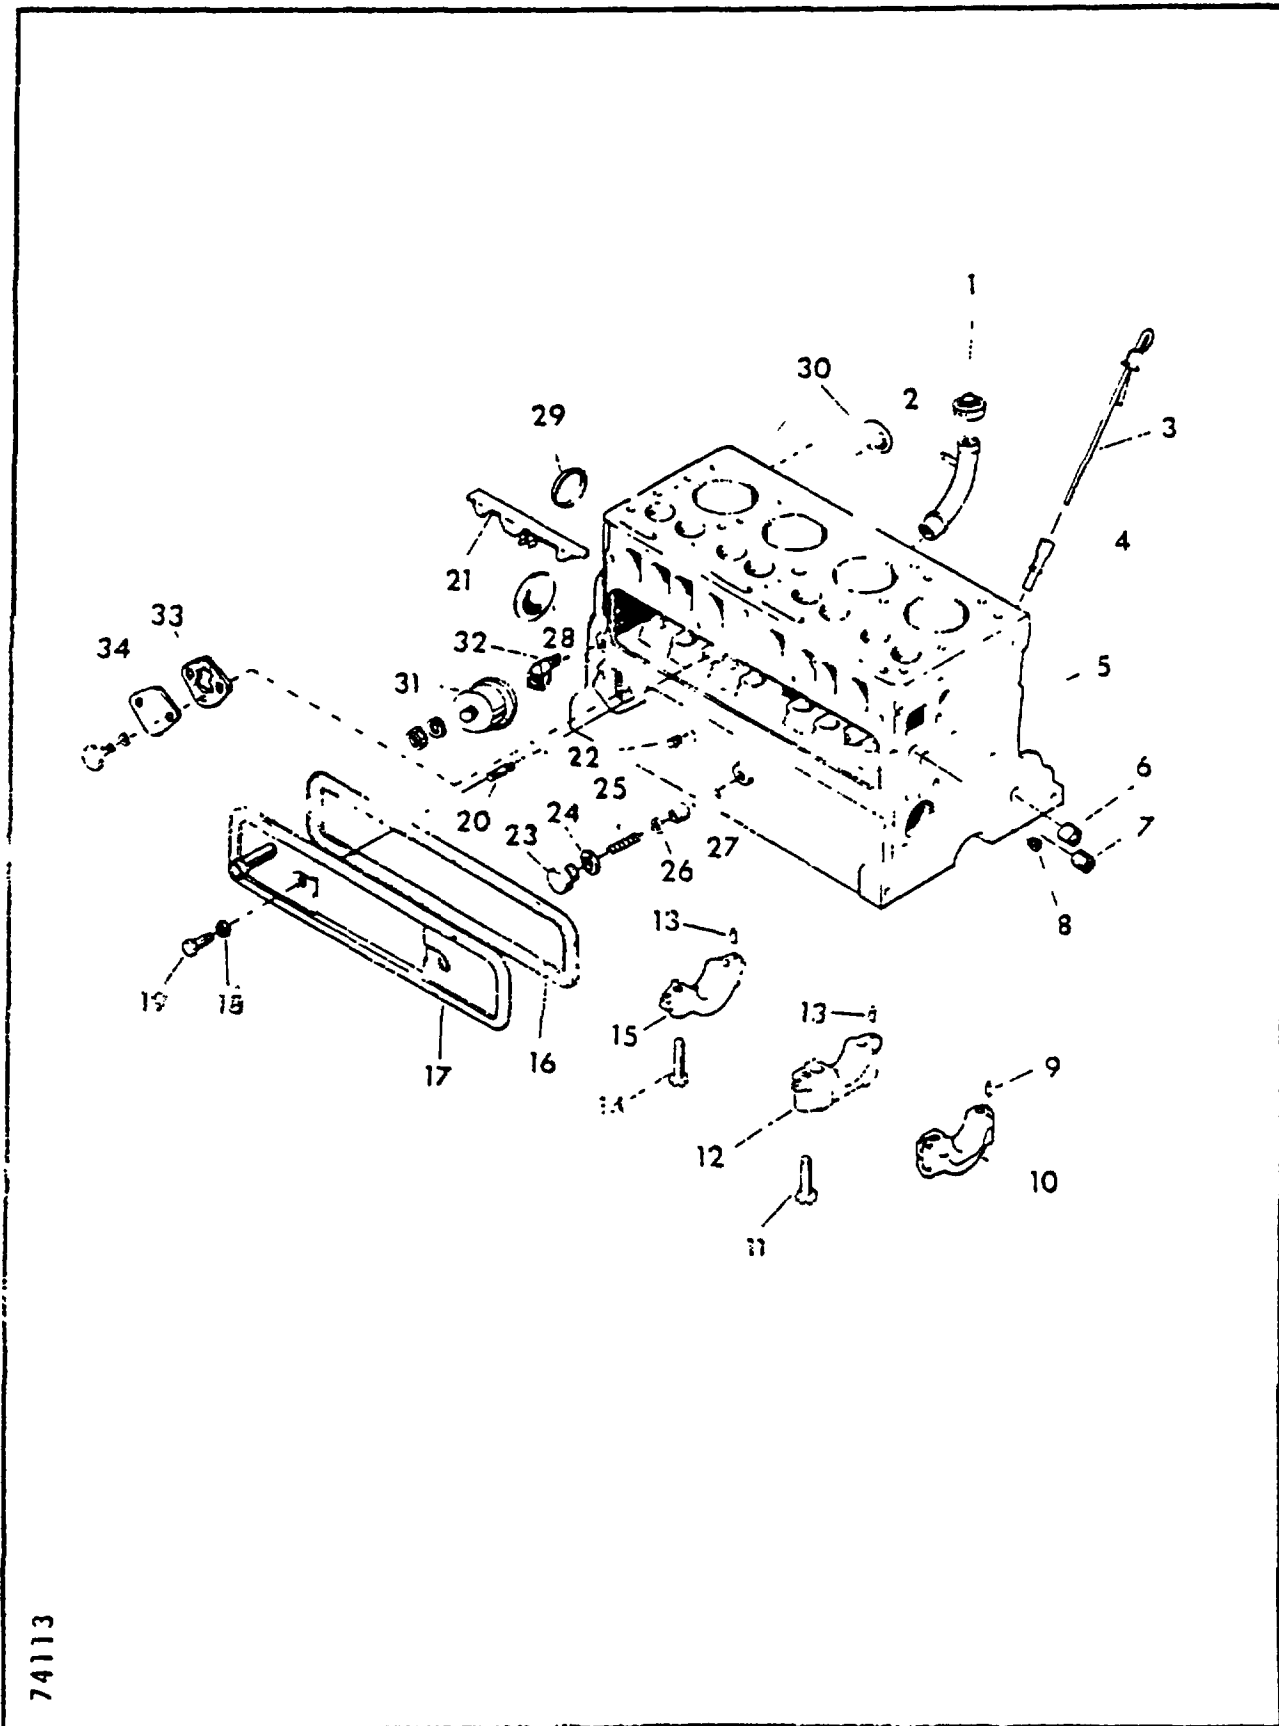

74113


CYLINDER BLOCK (CONTINUED)

ITEM	PART NO.	DESCRIPTION	QTY.	
32	0904230-0	ELBOW-450	1	
	4908595-4	STUD	3	
	0914383-5	SCREW SOCKET HD	2	
35	0914453-6	COCK-DRAIN- .12 PT	1	NOT ILLUSTRATED

*INCLUDED IN KIT 4908685-3


NOTE A **SHORT BLOCK ASSY INCLUDES: CYLINDER BLOCK-CONNECTING RODS-CAMSHAFT-BUSHINGS-BEARING CAPS-VALVE TRAIN-TAPPETS-CAMSHAFT-MAIN AND ROD BEARINGS-CRANKSHAFT-PISTONS-PISTON PINS-PISTON RINGS-FRONT END PLATE-THRUST PLATE-CAM GEAR-CRANKSHAFT GEAR-OIL GAUGE ROD SUPPORT-OIL GAUGE ROD-HOLE COVER, FUEL PUMP-OIL GUARD, REAR BEARING AND SERVICE GASKET SET.**

NOTE B **SERVICE ENGINE ASSY INCLUDES: CYLINDER AND CRANKCASE-BEARINGS-CAPS-GUIDES-INSERTS-COMplete VALVE MECHANISM-SUPPORTS-PISTONS AND RINGS-CONNECTING RODS-CRANKSHAFT-CAMSHAFT-FRONT END PLATE-GEARS-FILLER BLOCKS-CYLINDER HEAD-GASKETS-GEAR COVER-OIL PUMP-OIL PAN-STUDS-NUTS-SCREWS-WASHERS-PINS AND PLUGS.**

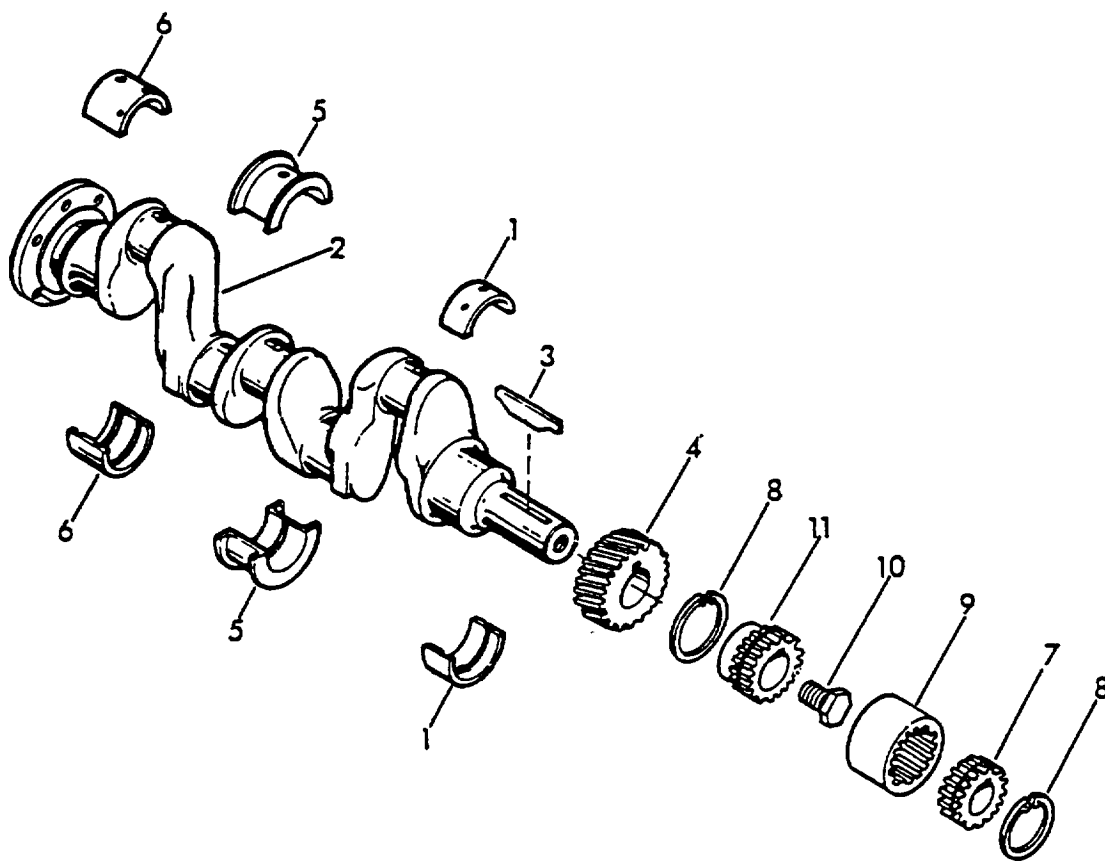


CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY.	
1	{ 4908641-6 4908642-4 4908643-2 4907644-0 4908645-7 4908646-5	*BEARING-FRONT MAIN-UPPER & LOWER	1	STANDARD
		**BEARING-FRONT MAIN-UPPER & LOWER	1	-.002"
		#BEARING-FRONT MAIN-UPPER & LOWER	1	-.010"
		##BEARING-FRONT MAIN-UPPER & LOWER	1	-.020"
		@BEARING-FRONT MAIN-UPPER & LOWER	1	-.030"
		@@BEARING-FRONT MAIN-UPPER & LOWER	1	-.040"
2	4908628-3	CRANKSHAFT	1	
3	4908563-2	KEY-CRANKSHAFT GEAR	1	
4	4910030-8	GEAR-CRANKSHAFT	1	
5	{ 4908647-3 4908648-1 4908649-9 4908650-7 4908651-5 4908652-3	*BEARING-CENTER MAIN-UPPER & LOWER	1	STANDARD
		**BEARING-CENTER MAIN-UPPER & LOWER	1	-.002"
		#BEARING-CENTER MAIN-UPPER & LOWER	1	-.010"
		##BEARING-CENTER MAIN-UPPER & LOWER	1	-.020"
		@BEARING-CENTER MAIN-UPPER & LOWER	1	-.030"
		@@BEARING-CENTER MAIN-UPPER & LOWER	1	-.040"
6	{ 4908653-1 4908654-9 4908655-6 4908656-4 4908657-2 4908658-0	*BEARING-REAR MAIN-UPPER & LOWER	1	STANDARD
		**BEARING-REAR MAIN-UPPER & LOWER	1	-.002"
		#BEARING-REAR MAIN-UPPER & LOWER	1	-.010"
		##BEARING-REAR MAIN-UPPER & LOWER	1	-.020"
		@BEARING-REAR MAIN-UPPER & LOWER	1	-.030"
		@@BEARING-REAR MAIN-UPPER & LOWER	1	-.040"
		*INCLUDED IN KIT 4908666-3		
		**INCLUDED IN KIT 49036674-		
		#INCLUDED IN KIT 4908668-9		
		##INCLUDED IN KIT 4908669-7		
		@INCLUDED IN KIT 4908670-5		
		@@INCLUDED IN KIT 4908671-3		
7	4909770-2	GEAR HYDRAULIC PUMP	1	
8	4909763-7	RETAINING RING	2	
9	4909771-0	SLEEVE	1	
10	4909764-5	SCREW	1	
11	7909762-9	COUPLING	1	

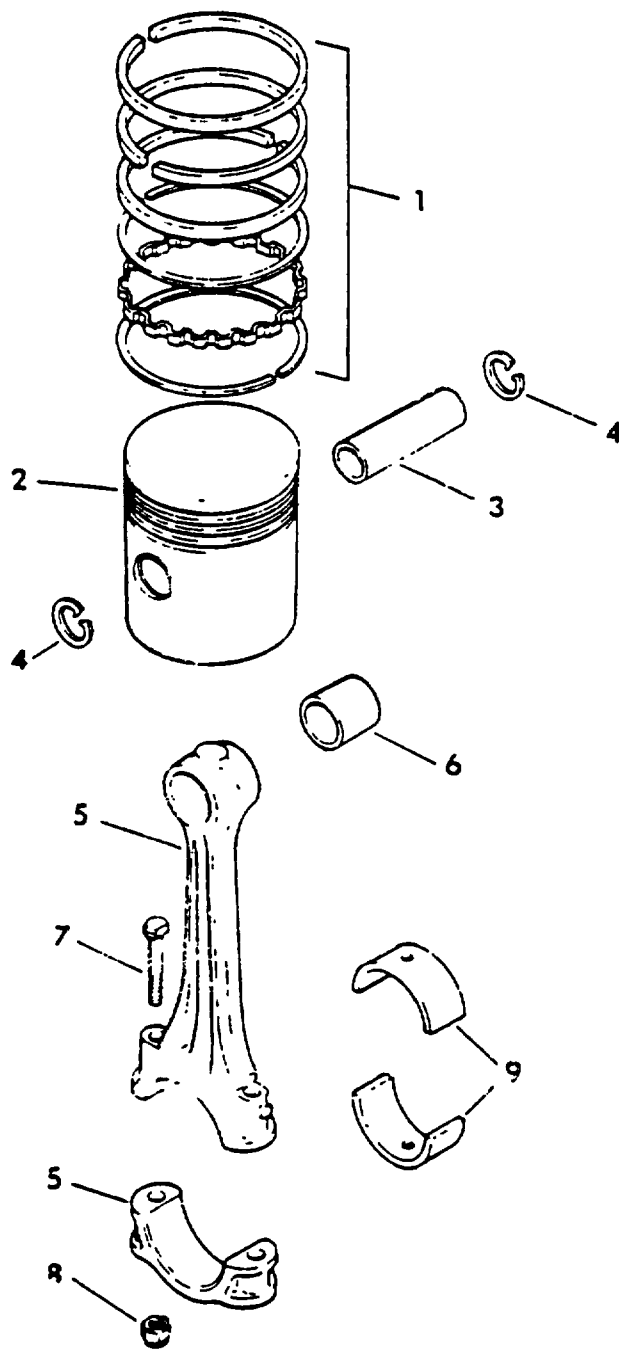

PISTON AND CONNECTING ROD

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4909800-7	RING SET-STANDARD	1	RING SET SERVICES ONE ENGINE
	4909801-5	RING SET-.020" OS		
	4909802-3	RING SET-.030" OS		
	4909803-1	RING SET-.040" OS		
2	4912747-5	PISTON-STANDARD	4	INCL ITEM 3 & 4
	4912774-9	PISTON-.010" OS		
	4912775-6	PISTON-.020" OS		
	4912776-4	PISTON-.030" OS		
	4912777-2	PISTON-.040" OS		
3	4908565-7	PIN-PISTON-STANDARD	4	
	4908677-0	PIN-PISTON-.003" OS		
	4908678-8	PIN-PISTON-.005" OS		
	4908679-6	PIN-PISTON-.010" OS	4	
4	4912748-3	RING-RETAINER	8	
5	4909783-5	ROD ASSY-CONNECTING	4	INCL ITEM 6-7 & 8
6	4908505-3	BUSHING-CONN ROD	4	
7	4908564-0	O8LT-CONN ROD	8	
8	4908504-6	NUT-CONN ROD BOLT	8	
9	4909786-8	BRG KIT-CONN ROD-STANDARD	1	
	4909808-0	BRG KIT-CONN ROD-.010" US		
	4909809-8	BRG KIT-CONN ROD-.020" US		
	4909811-4	BRG KIT-CONN ROD-.040" US		

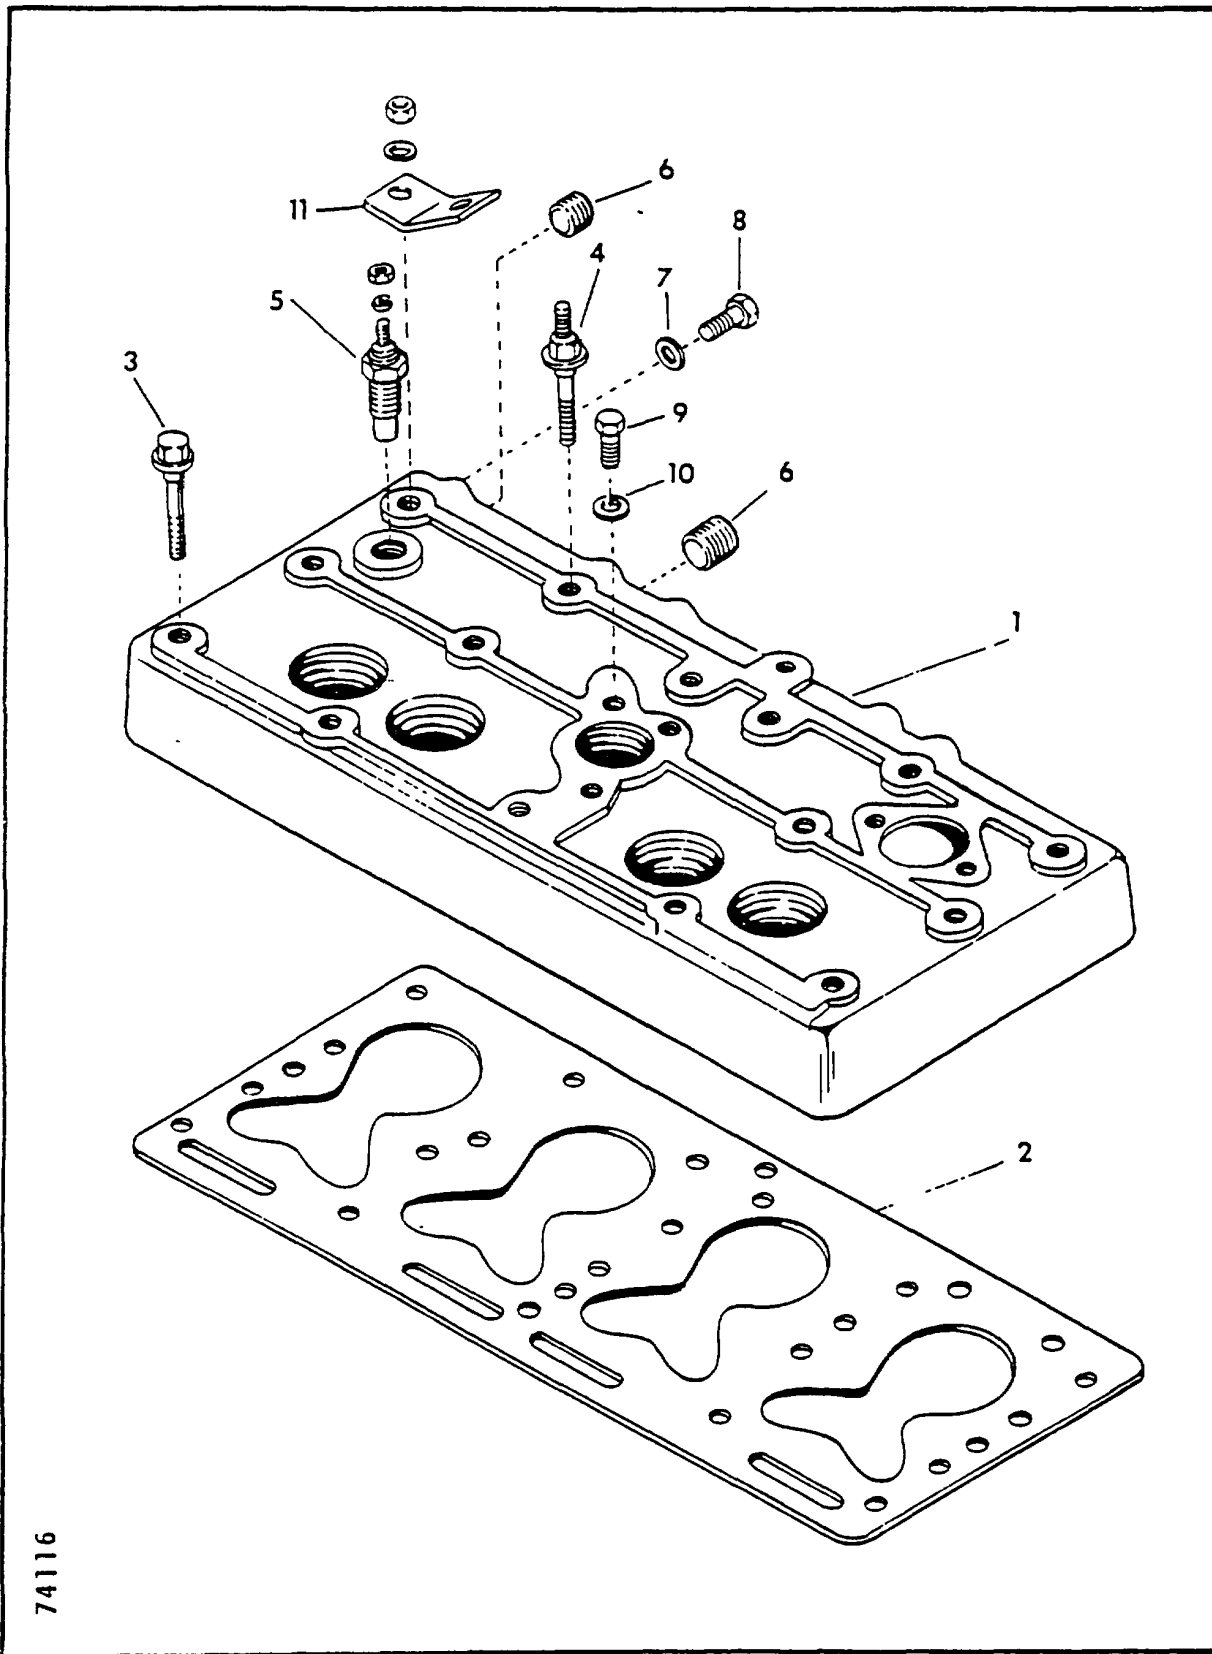


74116

CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY.
1	4909782-7	HEAD-CYLINDER	1
2	4908585-5	*GASKET-CYLINDER HEAD	1
3	4908605-1	SCREW- .44" -14 X 2.75"	4
4	4908604-4	SCREW- .44" -14 X 2.75"	11
5	4760149-7	SENDER-WATER TEMP	1
	0917365-9	LOCKWASHER- #10	1
	0917415-2	NUT- #10 -32	1
6	4908781-0	PLUG-LEFT SIDE- .5" - 14 PT	2
7	4908594-7	WASHER-PLAIN	2
8	0920787-9	SCREW- .31" -18 X .5"	2
9	4908592-1	SCREW- .38" -16	1
10	4908593-9	WASHER-PLAIN- .38"	1
11	4908595-4	STUD	1


*INCLUDED IN KIT 4908685-3

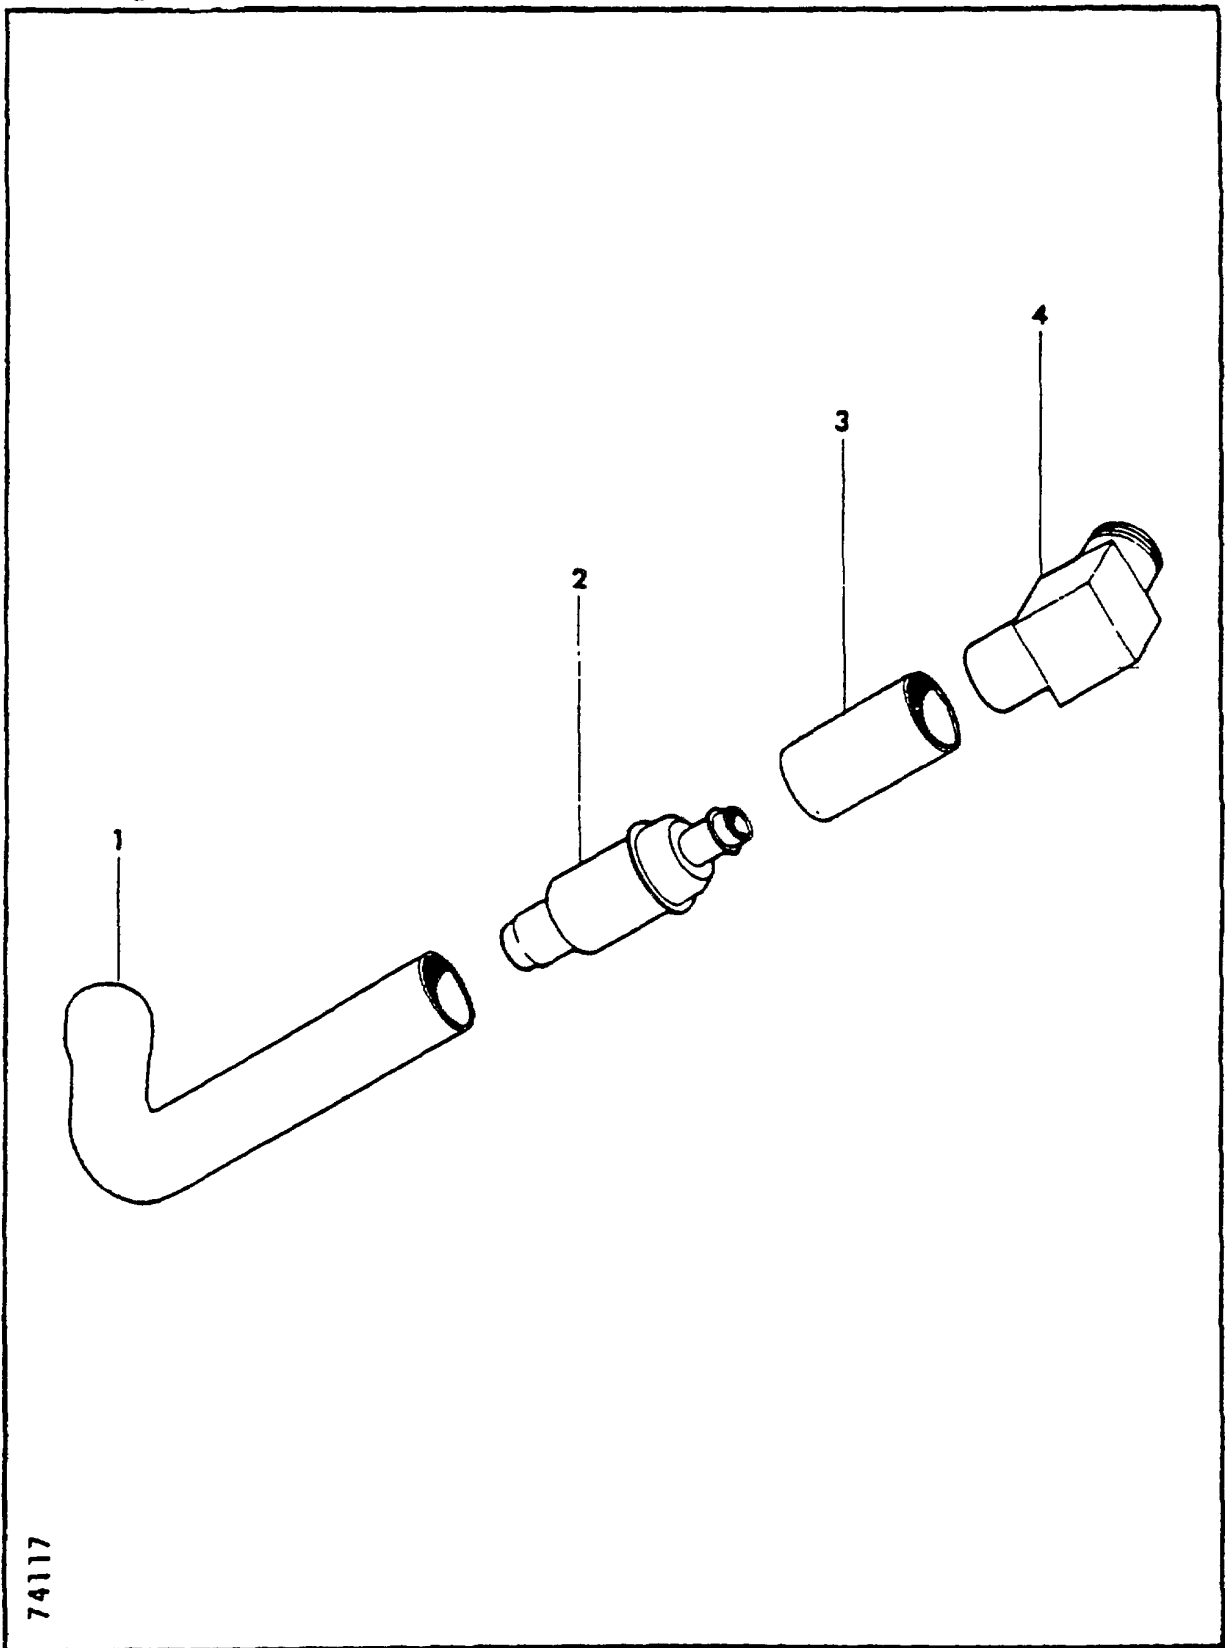

74117

CRANKCASE VENTILATION


ITEM	PART NO.	DESCRIPTION	QTY.
1	4908520-2	HOSE	1
2	4908523-6	VALVE-PCV	1
3	4908521-0	HOSE	1
4	4908522-8	ELBOW- 90°	1

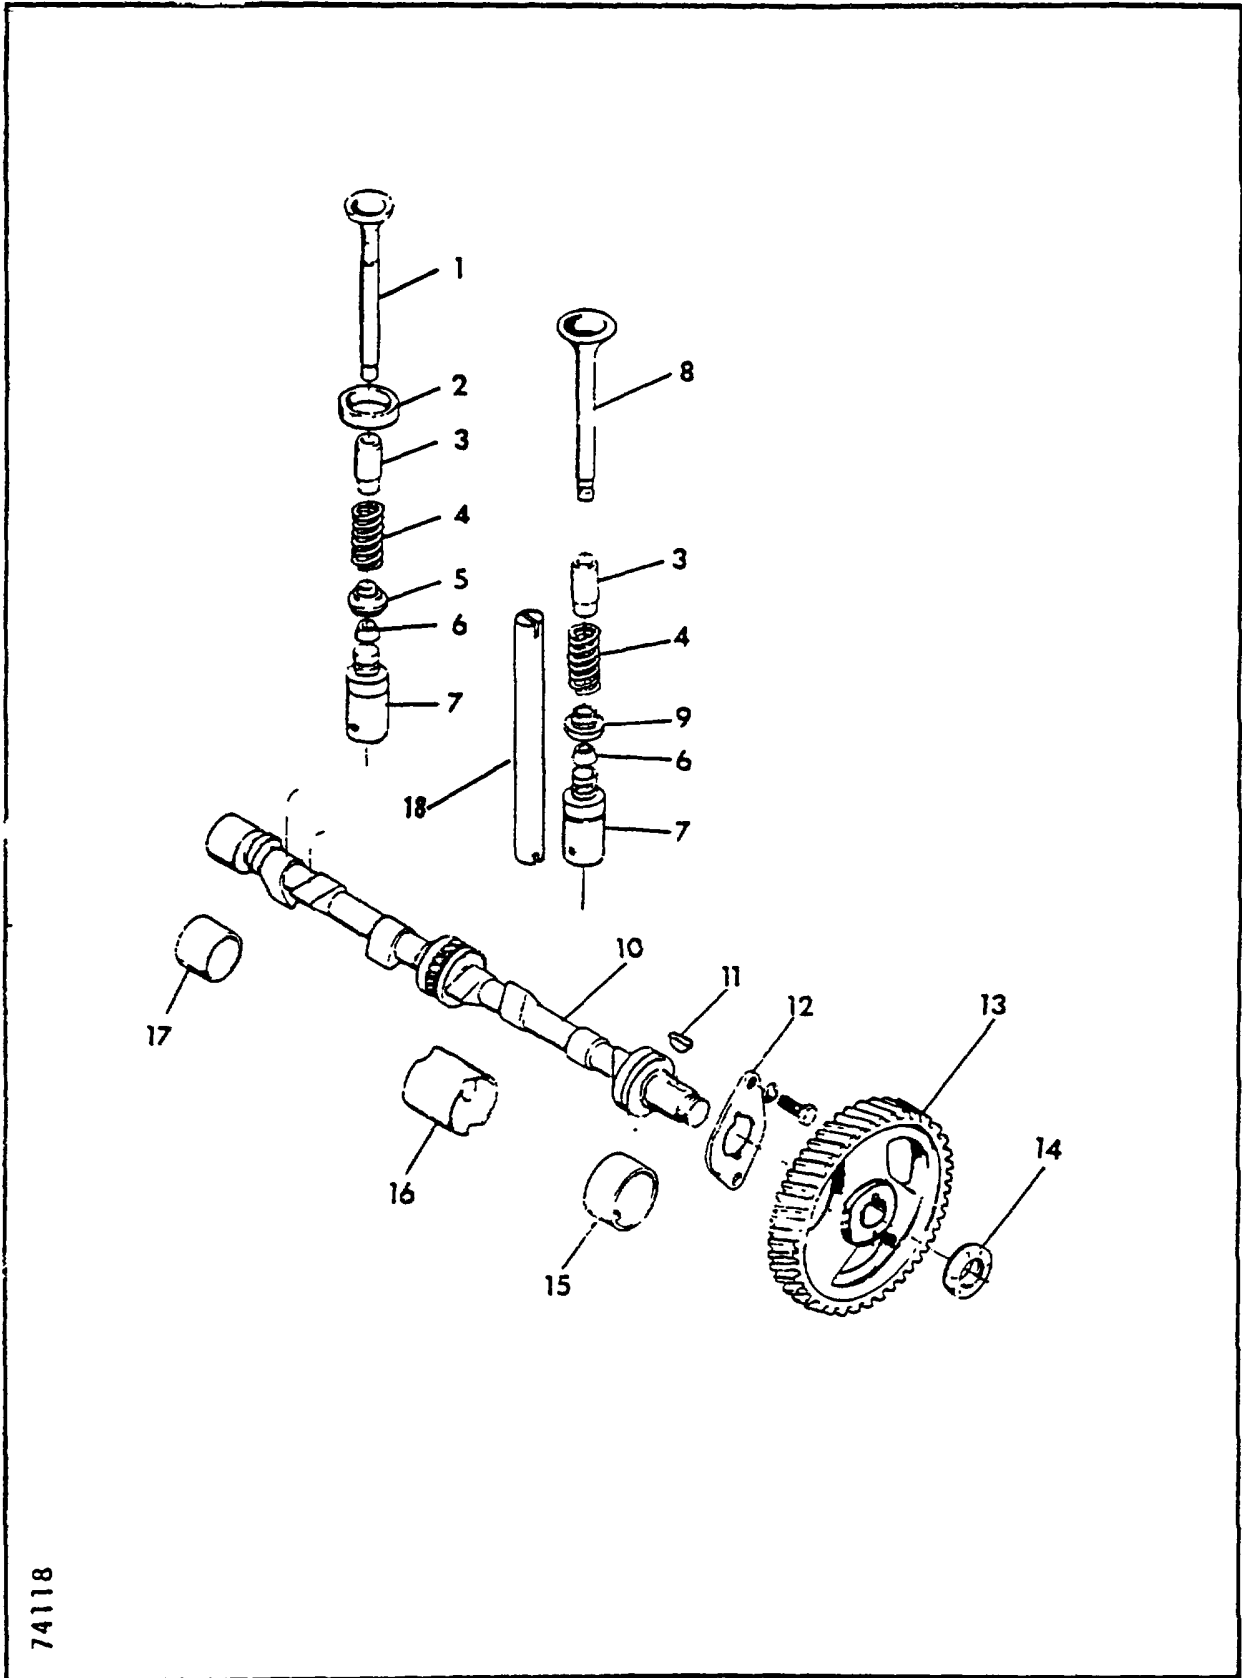

74118

VALVE MECHANISM


ITEM	PART NO.	DESCRIPTION	QTY.
1	4908609-3	VALVE-EXHAUST	4
2	4908514-5	INSERT-VALVE SEAT-EXHAUST	4
3	4908513-7	GUIDE-VALVE STEM	8
4	4908512-9	SPRING-VALVE	8
5	4908562-4	ROTOCOIL-EXHAUST	4
6	4908574-9	LOCK-VALVE SPRING RTNR	16
	4908515-2	TAPPET-VALVE-STANDARD	8
	4908732-3	TAPPET-VALVE- .001" OS	8
	4908733-1	TAPPET-VALVE- .003" OS	8
7	4908734-9	TAPPET-VALVE- .005" OS	8
	4908735-6	TAPPET-VALVE- .010" OS	8
	4908736-4	TAPPET-VALVE- .015" OS	8
	4908737-2	TAPPET-VALVE- .020" OS	8
8	4908607-7	VALVE-INTAKE	4
9	4908575-6	RETAINER-VALVE SPRING-INTAKE	4
10	4909781-9	CAMSHAFT-STEEL	1
11	4908569-9	KEY-CAMGEAR TO CAMSHAFT	1
12	4908566-5	PLATE-CAMSHAFT THRUST	1
	0916803-0	LOCKWASHER- .31"	2
	0925205-7	CAPSCREW- .31" -18 X .63"	2
13	[4909760-3	GEAR-CAMSHAFT-	1
14	4908590-5	NUT-CAMGEAR TO CAMSHAFT	1
15	4908568-1	*BUSHING-CAMSHAFT-FRONT	1
16	4908502-0	*BUSHING-CAMSHAFT-CENTER	1
17	4908501-2	*BUSHING-CAMSHAFT-REAR	1
18	4909828-8	SHAFT DISTRIBUTOR DRIVE	1
		*INCLUDED IN KIT 4908690-3	

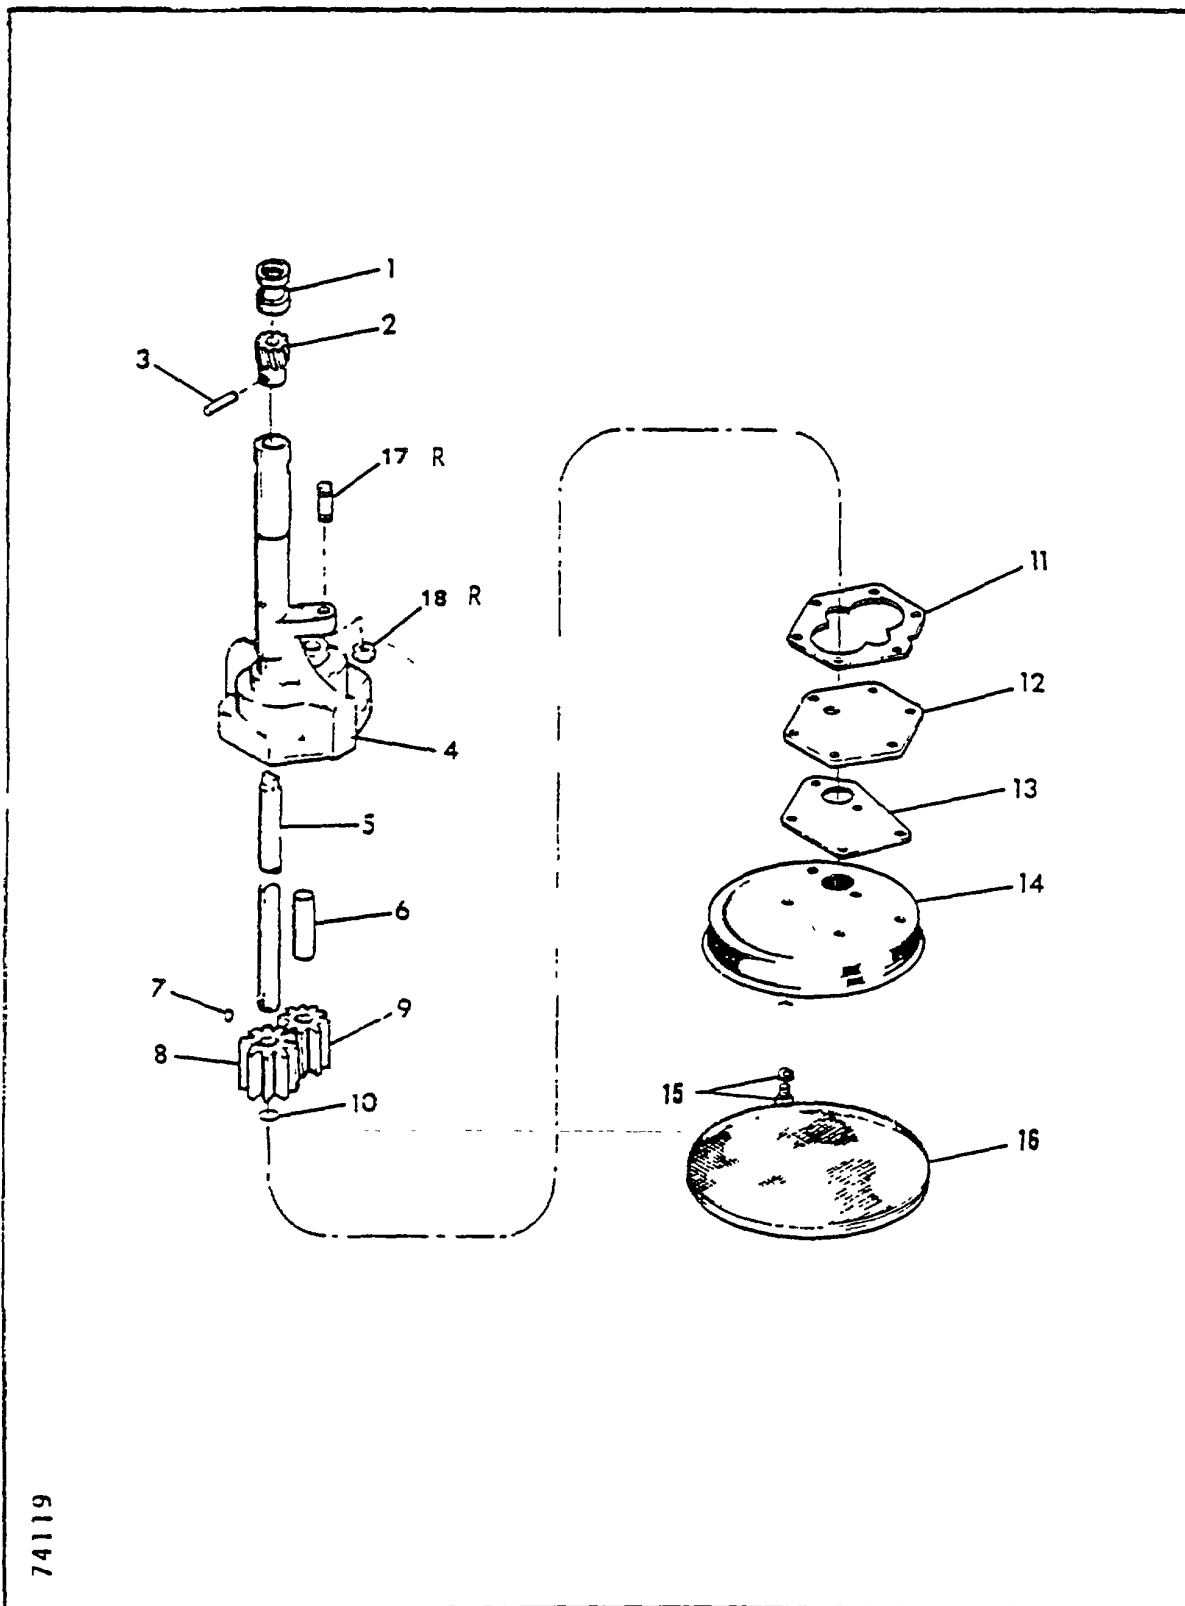

74119

OIL PUMP

ITEM	PART NO.	DESCRIPTION	QTY.	
R -4909780-1	PUMP ASSY-OIL		1	INCL ITEMS 2 THRU 16
1	4908511-1	BUSHING	1	
2	4909793-7	*GEAR-OIL PUMP DRIVE	1	
3	4908747-1	*PIN-DRIVE GEAR	1	
4	4908746-3	BODY-OIL PUMP	1	
5	4908510-2	SHAFT-DRIVE	1	
6	4908699-4	STUD-IDLER GEAR	1	
7	4908745-5	*KEY	1	
8	4908742-2	*GEAR-DRIVER	1	
9	4908741-4	*GEAR-IDLER	1	
10	4908744-8	*RING-RETAINER	1	
11	4908748-9	'GASKET-COVER	1	
12	4908749-7	COVER	1	
13	4908751-3	*GASKET-FRAME	1	
14	4908750-5	FRAME-STRAINER	1	
		NOT USED		
15	0928588-3	SCREW AND LOCKWASHER-.25"-20 X .62"	6	
16	4908712-5	SCREEN-STRAINER	1	
R 17	4908703-4	STUD	1	
R 18	4910078-7	NUT	1	
		*INCLUDED IN KIT 4909779-3		

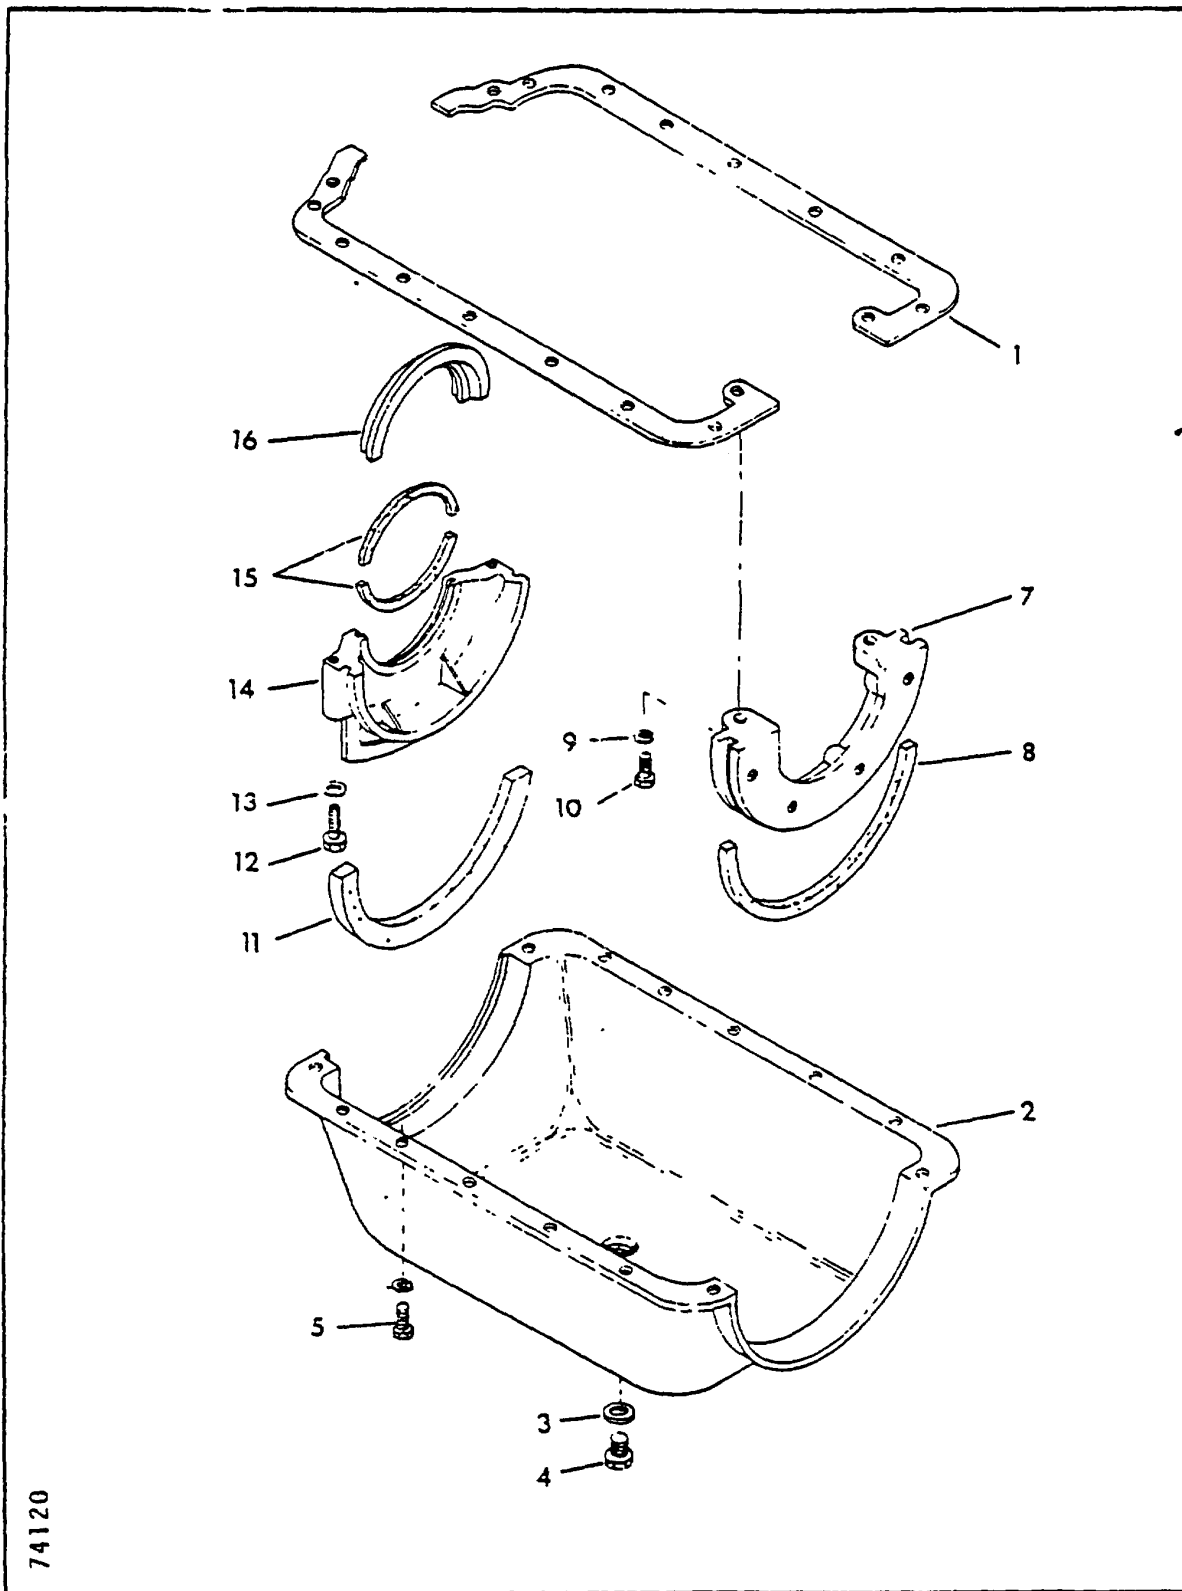


74120

OIL PAN

ITEM	PART NO.	DESCRIPTION	QTY.
1	4908567-3	*GASKET-OIL PAN	2
2	4912505-7	PAN-OIL	1
3	4912201-3	*WASHER-DRAIN PLUG	1
4	4912200-5	PLUG-OIL DRAIN	1
5	0923045-9	CAPSCREW W/LOCKWASHER	14
7	4908601-0	BLOCK-FILLER-FRONT	1
8	4908714-1	*GASKET-FILLER BLOCK	1
9	0910941-4	LOCKWASHER- .31"	2
10	4908581-4	SCREW- .31" -18 X .88"	2
11	4908714-1	*GASKET-FILLER BLOCK	1
12	4908596-2	SCREW- .31" -18 X 2.63"	2
13	0910941-4	LOCKWASHER- .31"	2
14	4908619-2	BLOCK-FILLER-REAR	1
15	4908715-8	SEAL-OIL	2
16	4908602-8	GUARD-OIL SEAL	1
		*INCLUDED IN KIT 4908686-1	

PRIOR TO ENGINE SPEC NOS. F 163-8501 R F 163-8502

780444A-74120-1

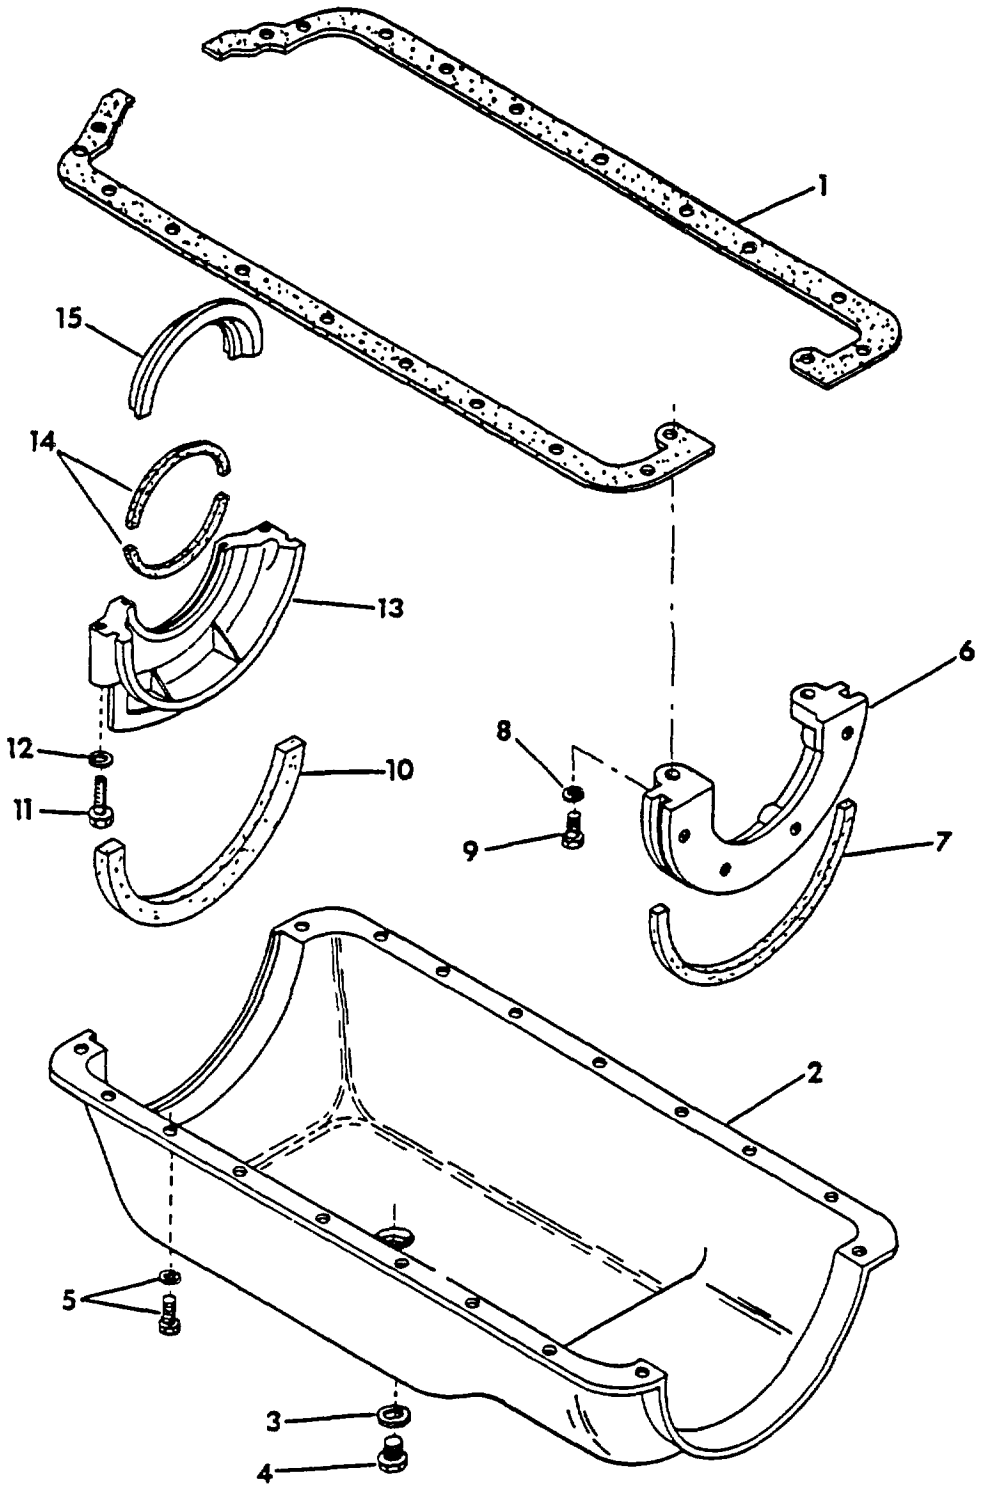


OIL PAN

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4914117-9	*GASKET-OIL PAN	2	
2	4913997-5	PAN-OIL	1	INCL ITEMS 3 AND 4
3	4912201-3	*WASHER-DRAIN PLUG	1	
4	4912200-5	PLUG-OIL DRAIN	1	
5	0918793-1	CAPSCREW W/LOCKWASHER	14	
6	4914115-3	BLOCK-FILLER-FRONT	1	
7	4908714-1	*GASKET-FILLER BLOCK	1	
8	0910941-4	LOCKWASHER- .31"	2	
9	4908581-4	SCREW- .31" -18 X .88"	2	
10	4908714-1	*GASKET-FILLER BLOCK	1	
11	4908596-2	SCREW- .31" -18 X 2.63"	2	
12	0910941-4	LOCKWASHER- .31"	2	
13	4914116-1	BLOCK-FILLER-REAR .	1	
14	4908715-8	SEAL-OIL	2	
15	4908602-8	GUARD-OIL SEAL	1	

*INCLUDED IN KIT 4914282-1


EFFECTIVE WITH ENGINE SPEC NOS. F 163-8501 & F 163-8502

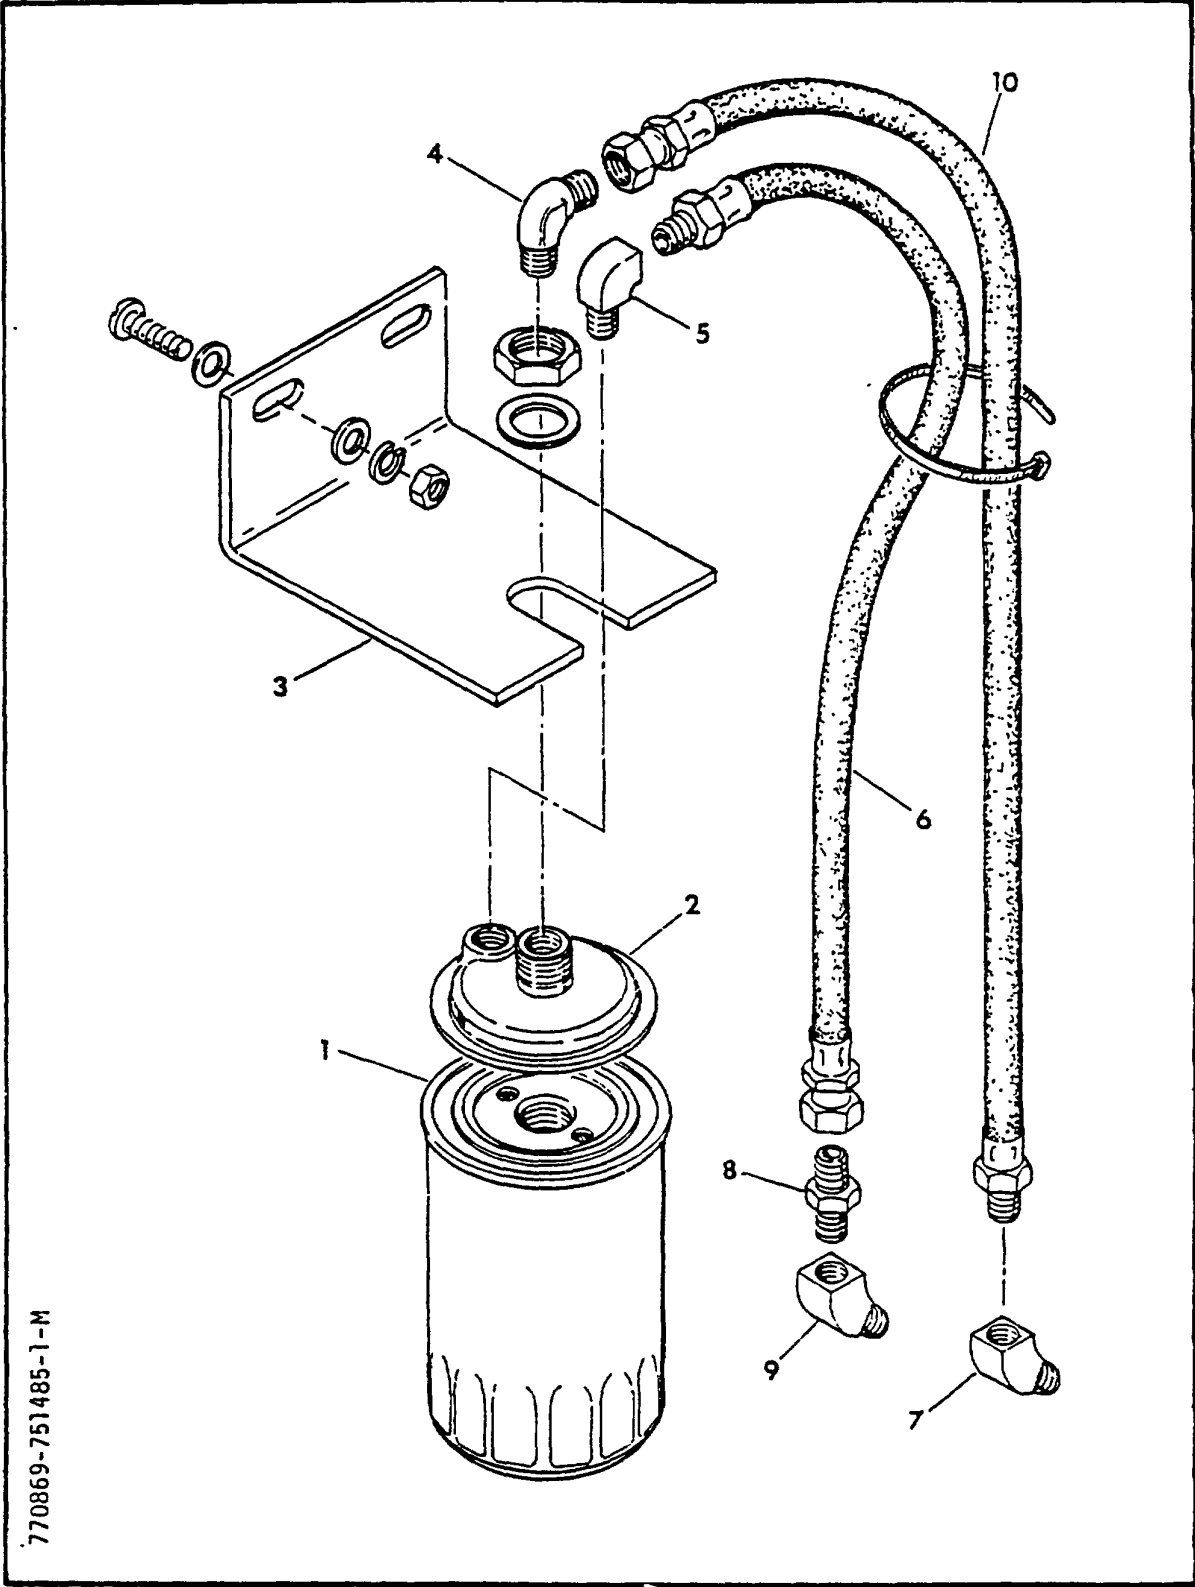

770869-751485-1-M

OIL FILTER


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4512207-4	FILTER	1	
2	4512341-1	BASE1		
	0919390-5	WASHER-.78" X 1.25"	1	
	0921138-4	NUT-.75"-16	1	
3	4822341-6	BRACKET	1	
	0925715-5	SCREW-.31"-18 X 1.00"	2	
	0920158-3	WASHER-.41" X 1.00"	2	
	0919326-9	WASHER-.34" X .75"	2	
	0917356-8	LOCKWASHER-.31"	2	
	0917372-5	NUT-.31"-18	2	
4	0910140-3	ELBOW-90°-.12"TT-.50"-20 STR THD	1	
5	0915399-0	ELBOW-90°-STREET-.12"-27 TT	1	
6	{ 4878729-5	HOSE	1	GROUP A
	{ 4819212-4	HOSE	1	GROUP B
7	0920655-8	ELBOW-45S-STREET-.12"TT	1	
8	0911317-6	CONNECTOR-.25"TT-.50"-20 STR THD	1	
9	0922967-5	ELBOW-45°-STREET-.25"TT	1	
10	{ 4819211-6	HOSE	1	GROUP A
	{ 4819212-4	HOSE	1	GROUP B

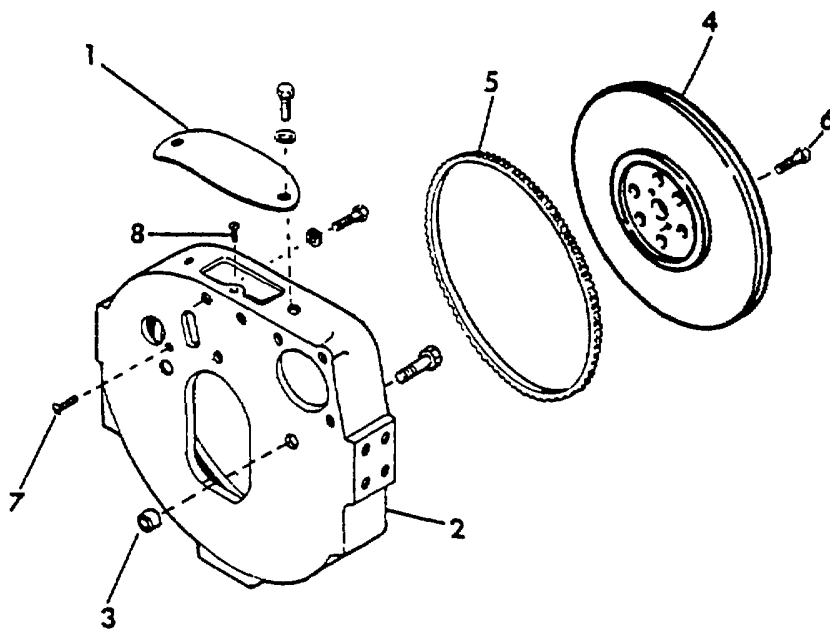

750353-74122-1

**FLYWHEEL AND HOUSING
POWER SHIFT**


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4908615-0	COVER-TIMING HOLE	1	
	0921958-5	CAPSCREW-.25"-20 X .5"	2	
	0924958-2	LOCKWASHER-.25"	2	
2	4909788-4	HOUSING-FLYWHEEL	1	
	0921212-7	CAPSCREW-.44"-14 X 1.5"	2	
	0921876-9	CAPSCREW-.44"-14 X 1.12"	3	
3	4908576-4	DOWEL-RING	2	
4	4909767-8	FLYWHEEL ASSY	1	INCL ITEM 5
5	4908614-3	GEAR-RING	1	
6	4910075-3	BOLT-.38"-24 X 1.19"	6	
7	4908509-5	SCREW-TIMING POINTER	1	
8	4909832-0	SCREW-TOP TIMING HOLE	1	

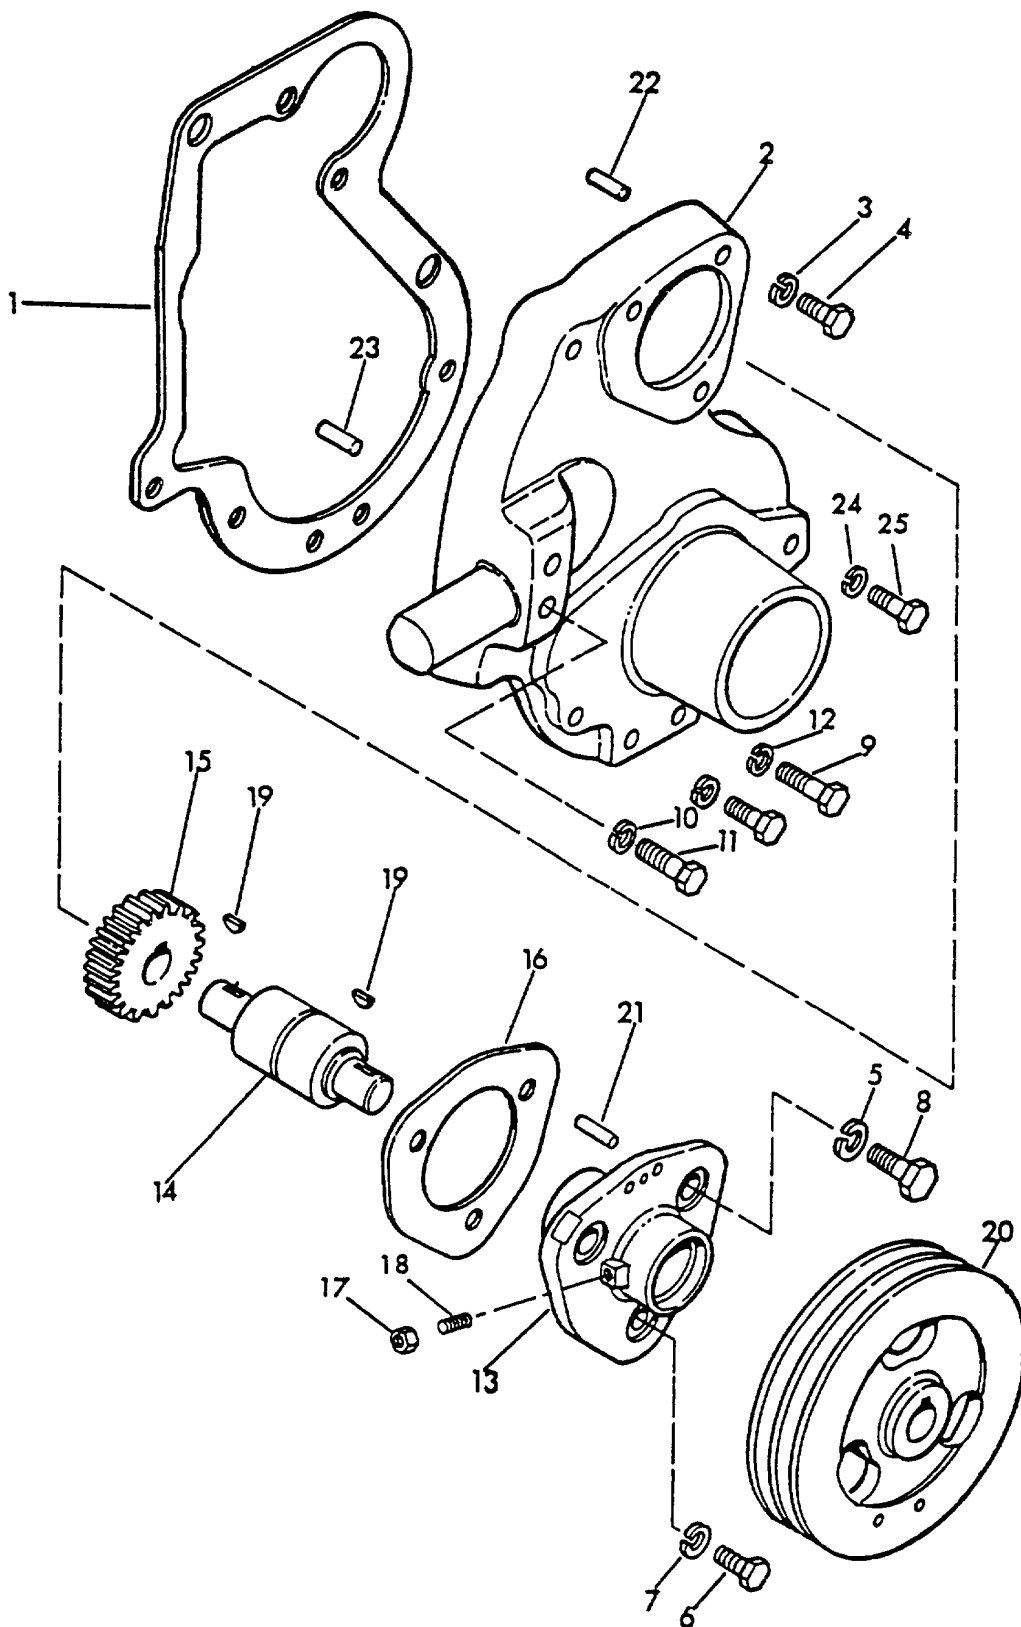

GEAR COVER

ITEM	PART NO.	DESCRIPTION	QTY.
1	4909794-2	*GASKET COVER	1
2	4909765-2	COVER-GEAR	1
3	0918199-1	WASHER-LOCK	1
4	0924346-0	SCREW- .38" -16 X 1.25"	1
5	0917264-4	WASHER-PLAIN- .38"	1
6	4909820-5	SCREW- .38" -16 X 1"	1
7	0917264-4	WASHER-PLAIN- .44"	2
8	0919953-0	SCREW- .38" -16 X 3.12"	2
9	0922130-0	SCREW- .38" -16 X 2"	2
10	0916965-7	LOCKWASHER- .38"	3
11	4910074-6	SCREW	2
12	0916965-7	LOCKWASHER- .38"	2
13	4909771-0	ADAPTER-FAN DRIVE	1
14	4909772-8	SHAFT W/BEARING	1
15	4910031-6	GEAR-FAN DRIVE	1
16	4909774-4	*GASKET-ADAPTER	1
17	4909823-9	NUT-WATER PUMP	1
18	4909822-1	SCREW-WATER PUMP	1
19	4909827-0	KEY-SHAFT	2
20	4909773-6	PULLEY FAN BELT	1
21	0918547-1	PIN SPRING	1
22	4909824-7	PIN DOWEL	1
23	4909825-4	PIN DOWEL	1
24	4908593-9	WASHER-COPPER- .38"	2
25	0921973-4	SCREW- .38" -16 X 1.25"	2

*INCLUDED IN KIT 4909766-0

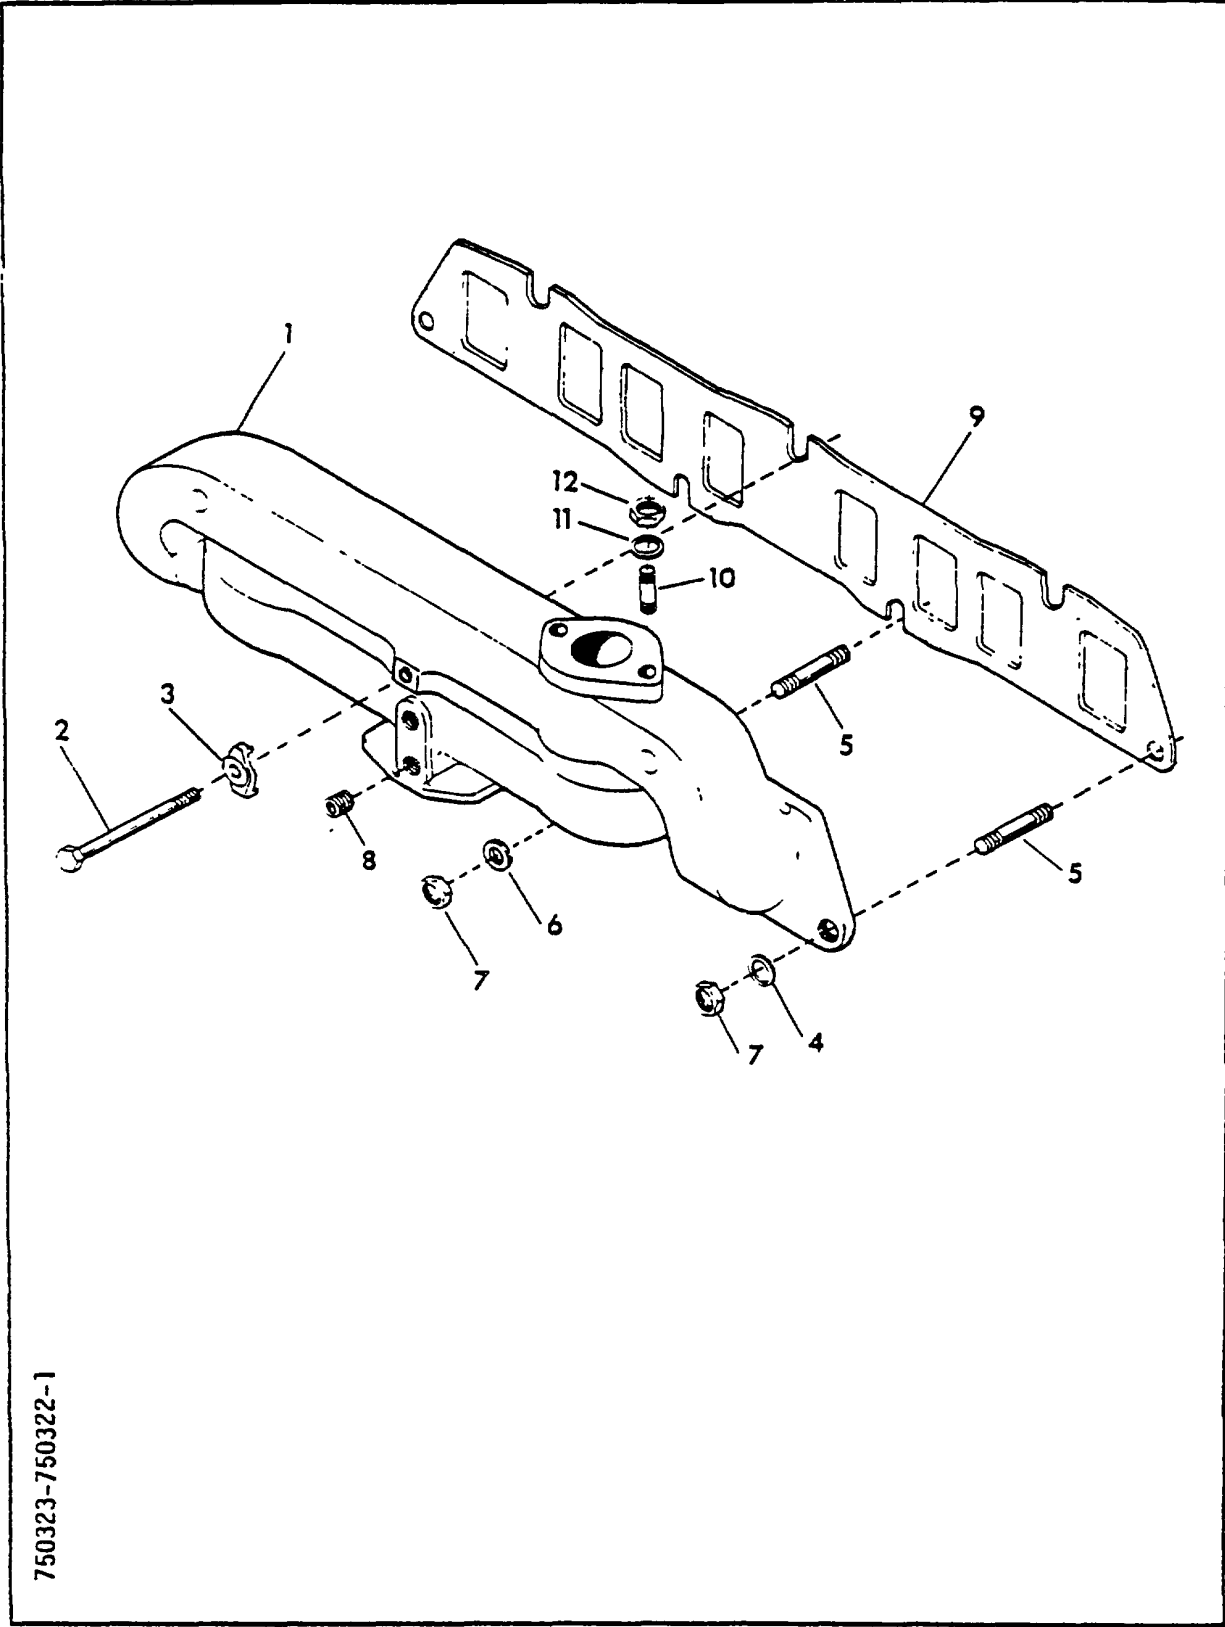


750323-750322-1

INTAKE & EXHAUST MANIFOLD

ITEM	PART NO.	DESCRIPTION	QTY.
1	4908621-8	MANIFOLD-INT & EXH	1
2	4908528-5	SCREW-.38"-16 X 4.50"	1
3	4909817-1	CLAMP-MANIFOLD	1
4	4908586-3	WASHER-.38"	2
5	4908518-6	STUD-.38"-16 X 1.75"	6
6	4908527-7	WASHER-.41"	4
7	0916954-1	NUT-.38"-16	6
8	4908560-8	PLUG-.25" PT	2
9	4908786-9	*GASKET	1
10	4908518-6	STUD- .38" -16 X 1.75"	2
11	4908586-3	WASHER-.38"	2
12	0916954-1	NUT-.38"-16	2

*INCL IN KIT 4908685-3

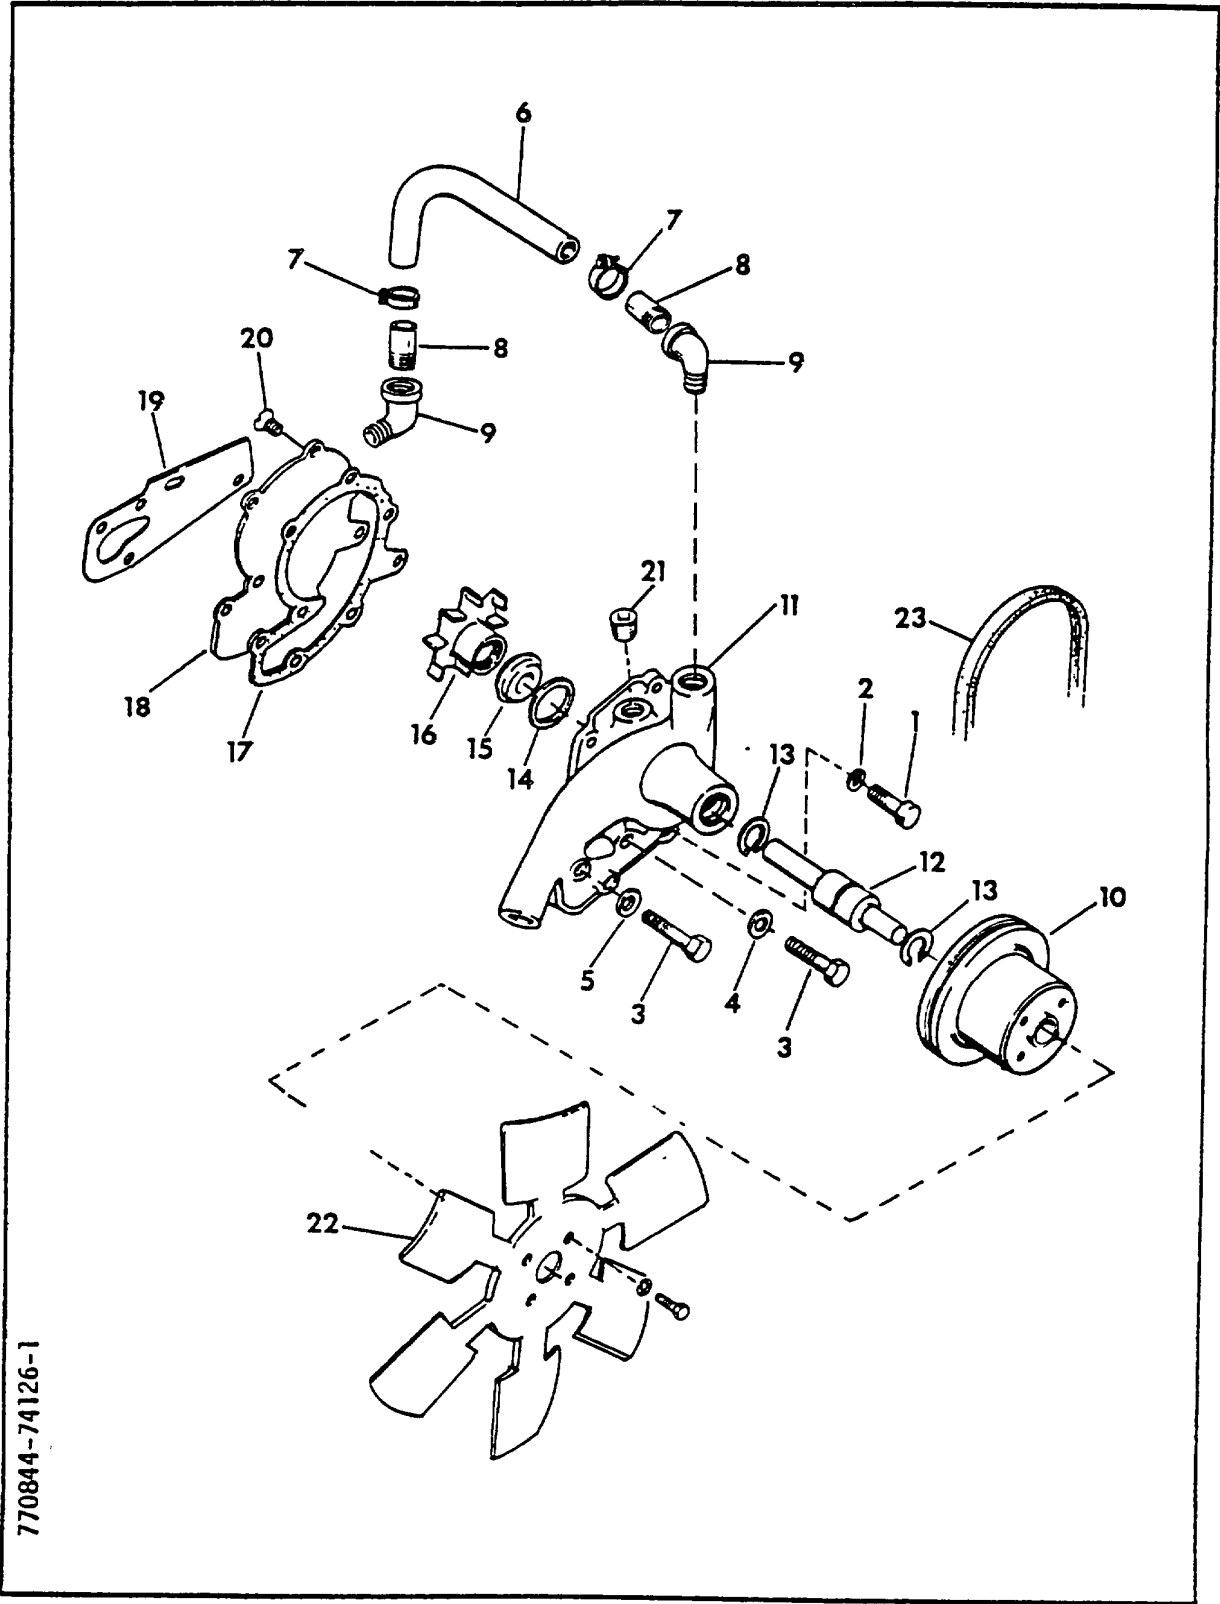


770844-74126-1

WATER PUMP AND FAN

ITEM	PART NO.	DESCRIPTION	QTY.	
-	4909776-9	PUMP ASSY-WATER	1	INCL ITEMS 11 THRU 21
1	0921972-6	CAPSCREW-.38"-16 X 2.50"	2	
2	0916965-7	LOCKWASHER-.38"	2	
3	0919958-9	CAPSCREW-.38"-16 X 1.88"	2	
4	0916965-7	LOCKWASHER- .38"	1	
5	4908593-9	WASHER-.38"	1	
6	4909819-7	HOSE-BY-PASS	1	
7	0928017-3	CLAMP-HOSE	2	
8	4908530-1	NIPPLE	2	
9	0916735-4	ELBOW-900-.38"	2	
10	4909777-7	PULLEY-DRIVE	1	SEE NOTE
11	-----	BODY-PUMP	1	ORDER ASSY
12	4908753-9	*BEARING AND SHAFT	1	
13	4908782-8	*RING-RETAINING	2	
14	4908759-6	*GASKET-SEAL	1	
15	4908754-7	*SEAL	1	
16	4909797-5	*IMPELLER	1	
17	4909833-8	*GASKET-PLATE TO BODY	1	
18	4909834-6	PLATE-BACK	1	
19	4909795-9	#*GASKET-PUMP TO CRANKCASE	1	
20	4908783-6	SCREW	4	
21	4908781-0	PLUG-PIPE-.38"	1	
22	4856601-2	FAN 1		
	0915809-8	CAPSCREW-.31"-18 X .75"	4	
	0917356-8	LOCKWASHER-.31"	4	
23	4856615-2	BELT-FAN	1	

*INCL IN KIT 4909778-5
 #INCL IN KIT 4909766-0

NOTE INSTALLATION INSTRUCTIONS
 PACKAGED WITH SERVICE PUMP
 MUST BE FOLLOWED WHEN AS-
 SEMBLING PULLEY TO PUMP

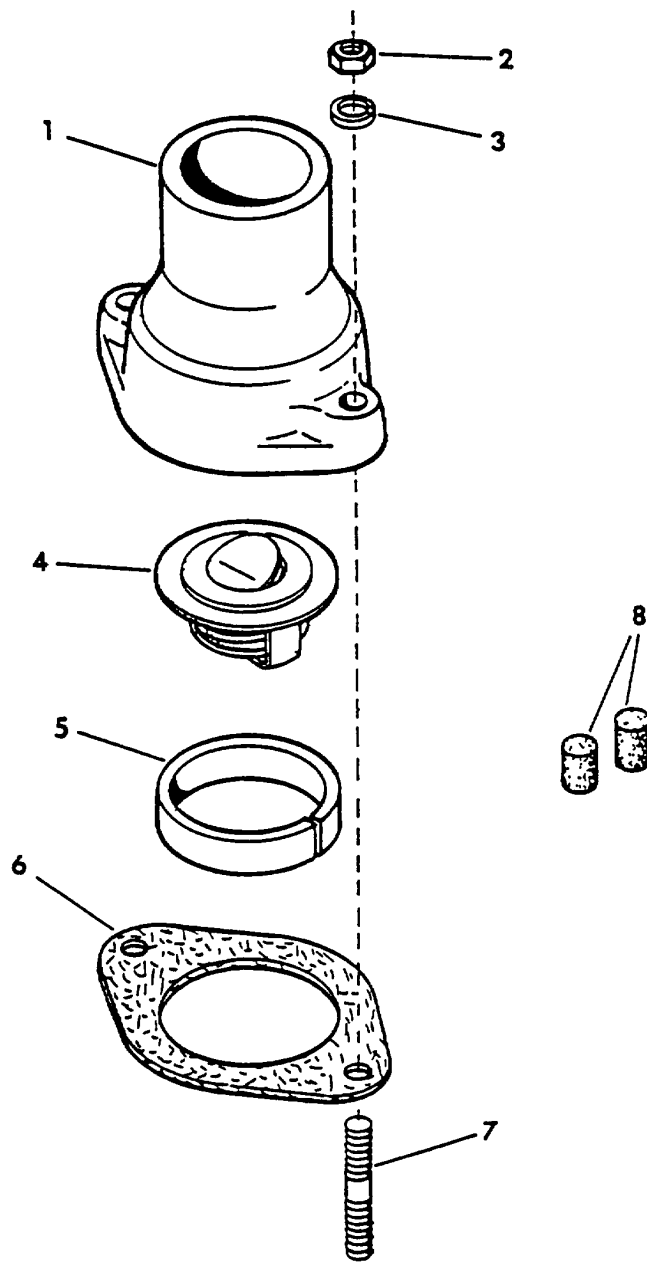


751224-751223-1

THERMOSTAT & HOUSING


ITEM	PART NO.	DESCRIPTION	QTY.
1	4909818-9	ELBOW-WATER OUTLET	1
2	0917372-5	NUT-.31"-18	2
3	0910941-4	LOCKWASHER-.31"	2
4	4908710-9	THERMOSTAT-180°	1
5	4908625-9	RING-THERMOSTAT ADAPTER	1
6	4908588-9	*GASKET	1
7	4909821-3	STUD-.31"-18 x 2.25"	2
8	4908534-3	CAPSULE-COOLANT CONDITIONER	2

*INCL IN KIT 4908685-3

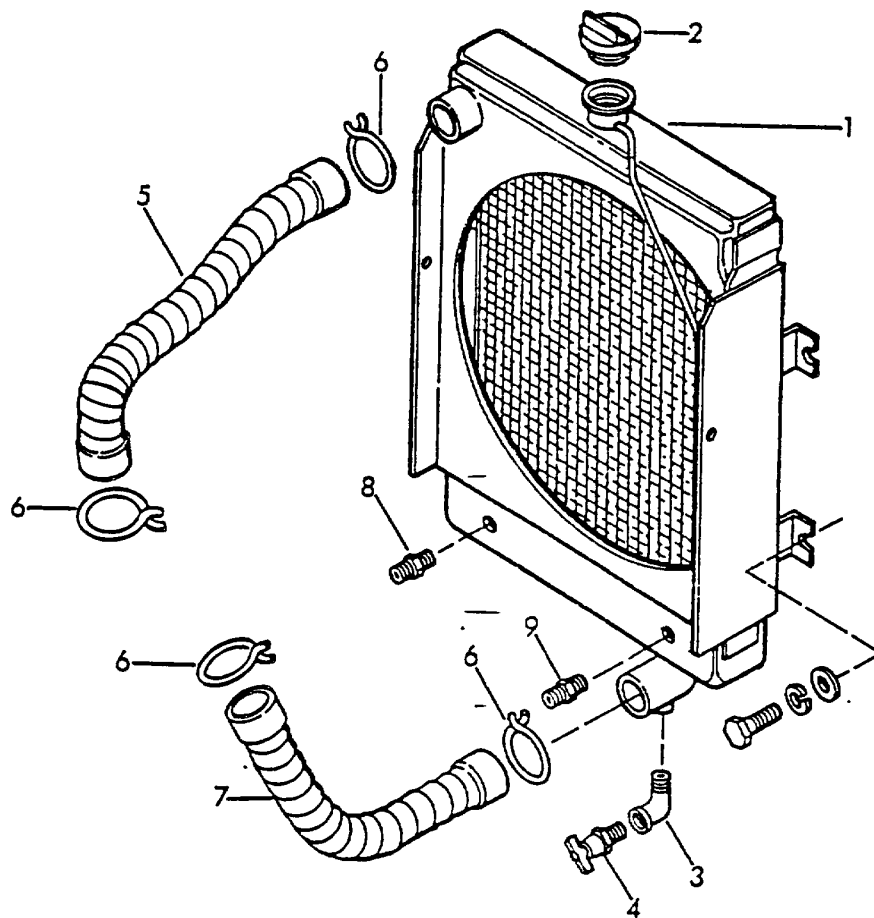


RADIATOR-POWER SHIFT

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4856600-4	RADIATOR	1	INCL ITEM 2
	0921965-0	CAPSCREW- .375-16 x .750	2	
	0916965-7	LOCKWASHER- .38"	2	
	0922153-2	WASHER- .38"	4	
	4907607-8	CAP- RADIATOR	1	7#
3	0915399-0	ELBOW- PIPE- BRASS STREET- .12"	1	
4	0914453-6	COCK- DRAIN-PIPE- BRASS- .12"	1	
5	4858197-9	HOSE- RADIATOR	1	
6	4253456-0	CLAMP- HOSE	4	
7	4858198-7	HOSE- RADIATOR	1	
8	4252197-1	ADAPTOR	1	
9	4760327-9	ADAPTOR	1	

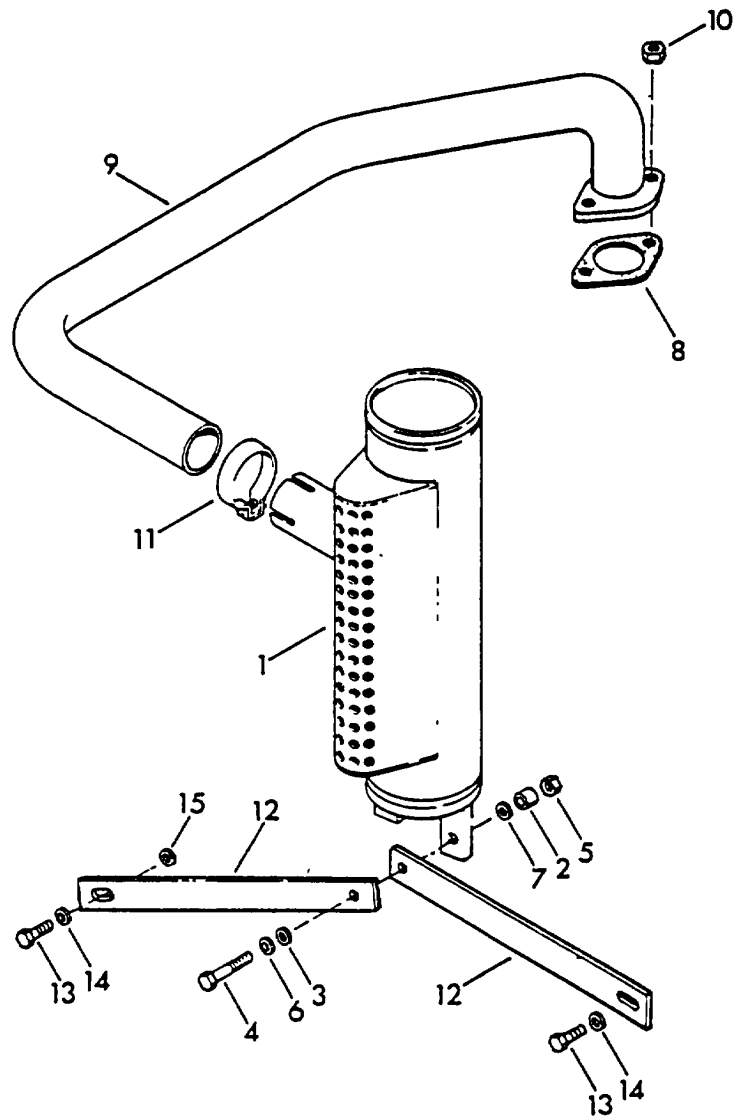

EXHAUST GROUP (PRT)


ITEM	PART NO.	DESCRIPTION	QTY.
1	4856684-8	MUFFLER W/DIFFUSER	1
2	4710442-7	GROMMET	1
3	4711590-2	WASHER	1
4	0921971-8	CAPSCREW .375 -16 X 1.75	1
5	0916950-9	NUT .375-16	1
6	0916965-7	LOCKWASHER	1
7	0916956-6	WASHER	1
8	4848758-1	GASKET	1
9	4856689-7	EXHAUST PIPE	1
10	0917258-6	NUT	2
11	4750091-3	CLAMP	1
12	4856682-2	STRAP	2
13	0921965-0	CAPSCREW	2
14	0916965-7	LOCKWASHER	2
15	0929362-2	WASHER	1

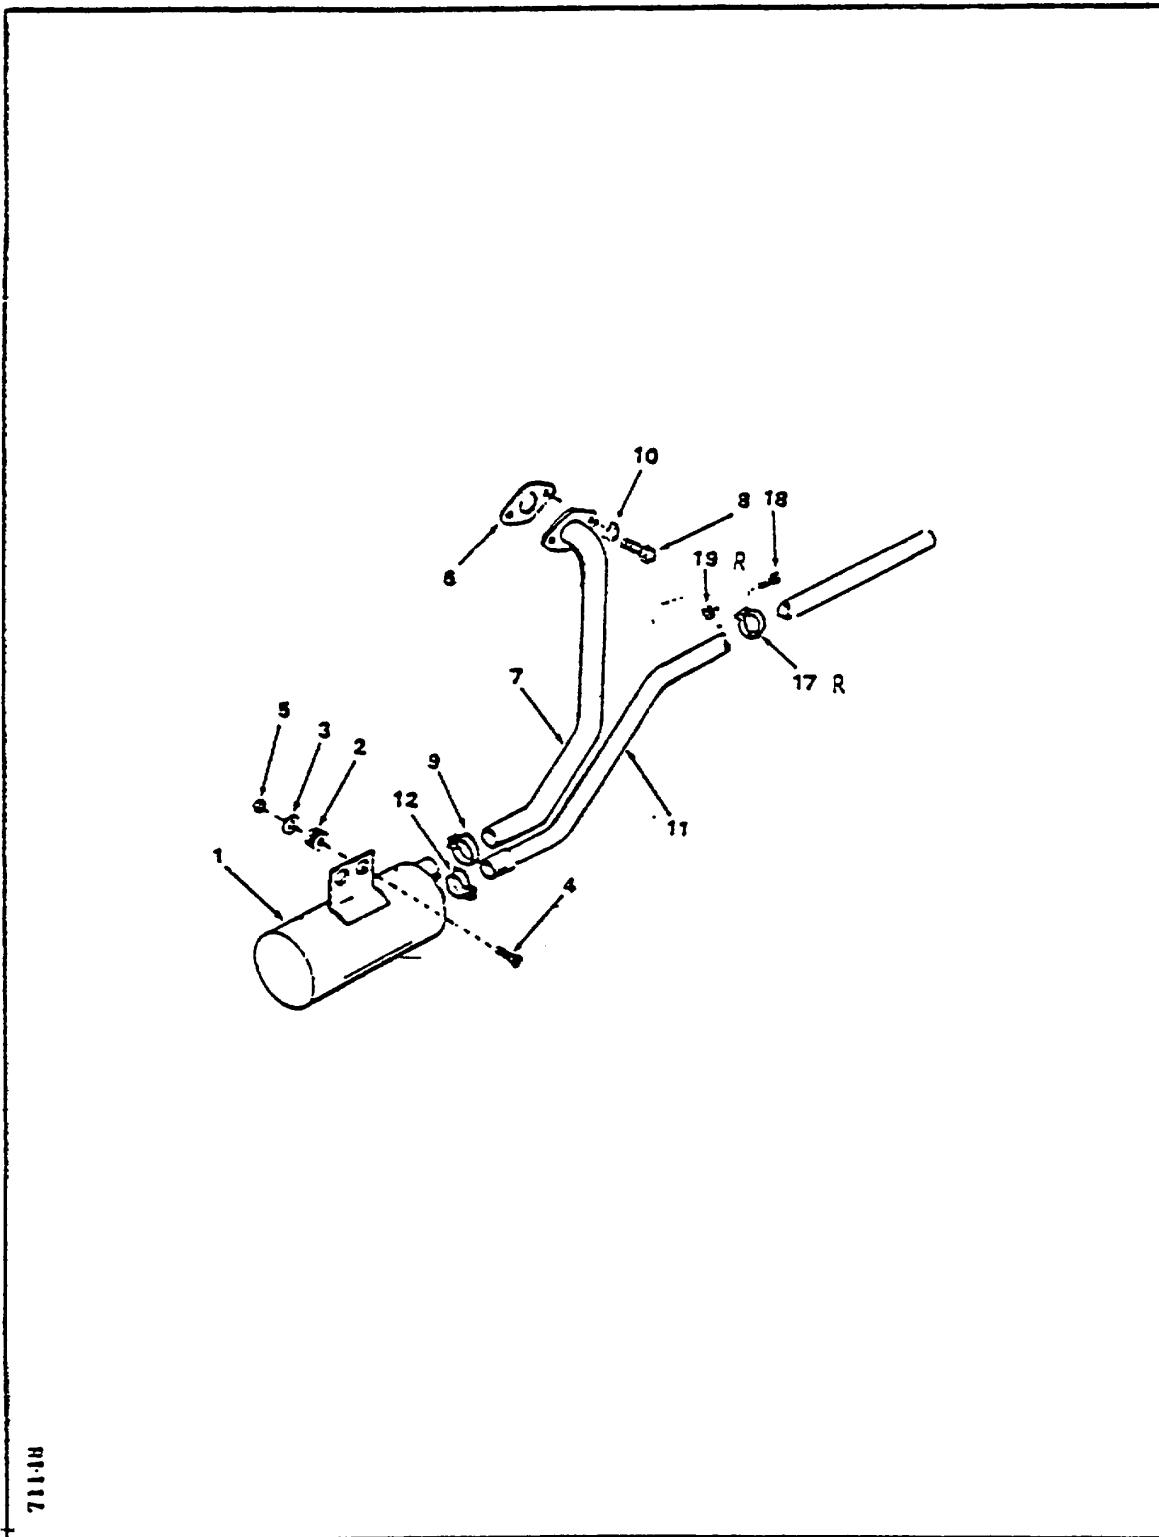

EXHAUST SYSTEM -(SRT)


ITEM	PART NO.	DESCRIPTION	QTY.
1	4831749-9	MUFFLER	1
2	4710442-7	GROMMET	2
3	4711590-2	WASHER	2
4	0926053-0	SCREW- TRUSS HO- PLATED- .38" -16 X 1.75"	2
5	0916954-1	NUT- PLATED- .38" -16	2
6	4848758-1	GASKET	1
7	4858184-7	PIPE- EXHAUST	1
8	0917258-6	NUT 2	1
9	4708304-3	CLAMP	1
11	4820972-0	PIPE- TAIL	1
R 12	0921912-2	CLAMP	1
R 13	4716088-2	CLAMP	1
R 14	0921965-7	CAPSCREW- .38" -16 X 1.75"	1
R 15	0916965-7	LOCKWASHER-38"	1

71140

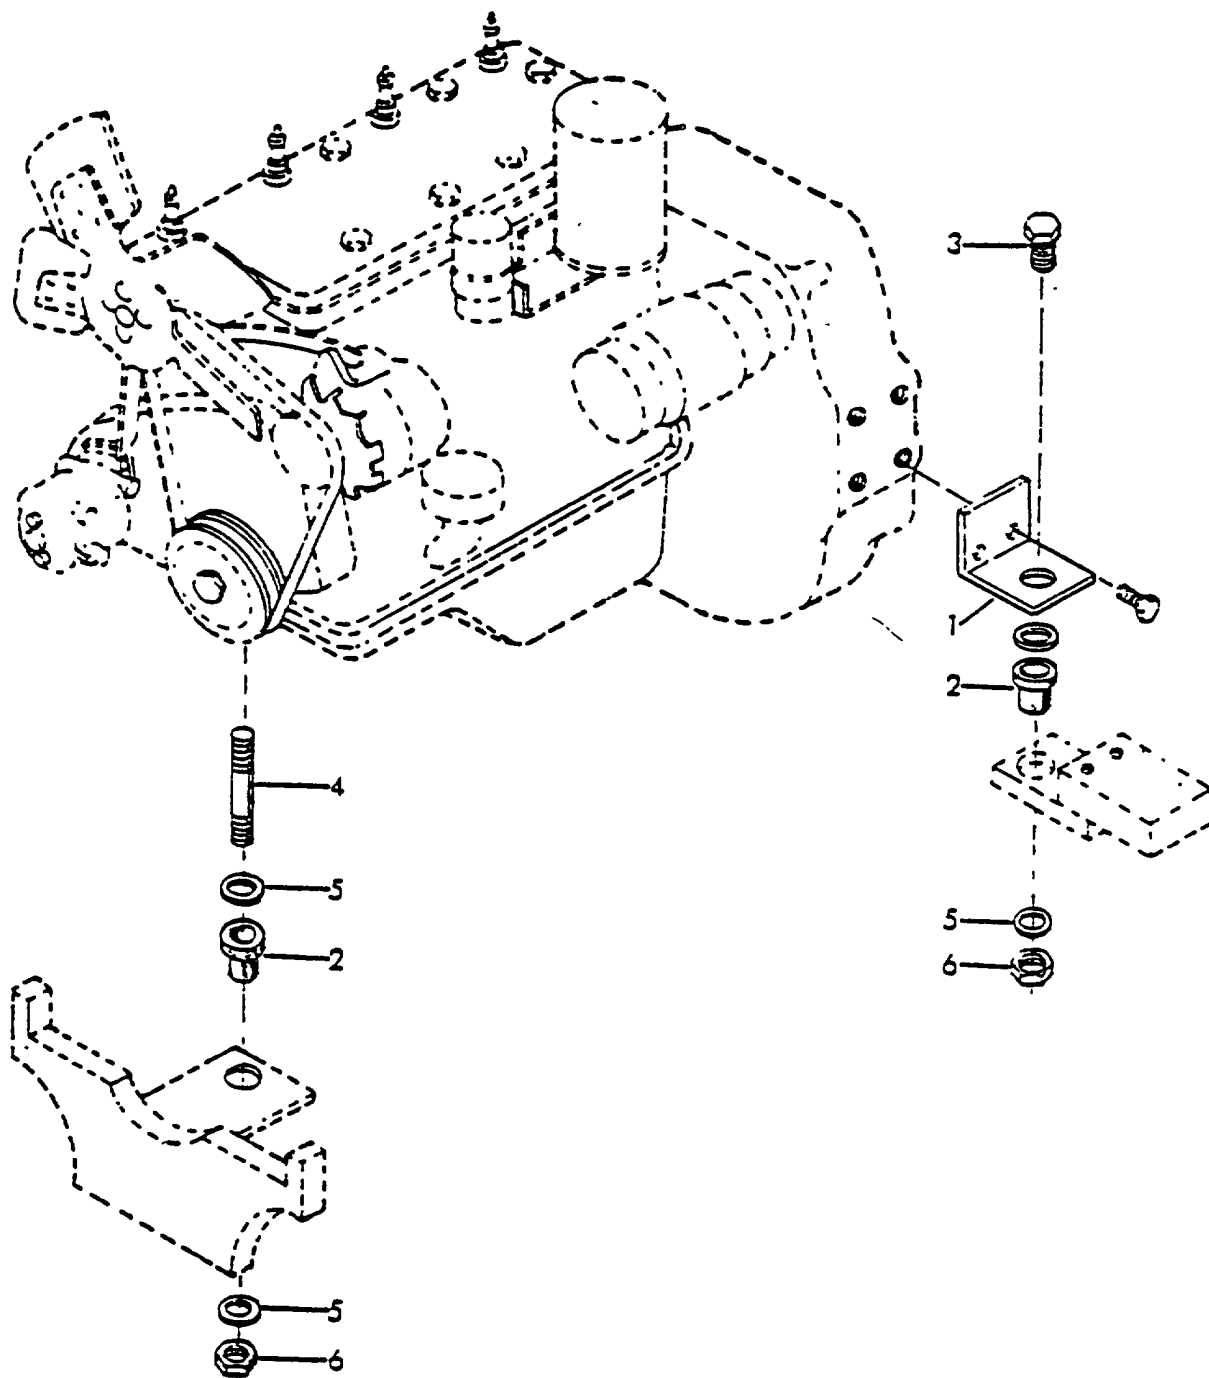


ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY.
1	4857898-3	BRACKET-ENGINE SUPPORT	2
	0919089-3	CAPSCREW- .50" -13 X 1.75	4
	09169866-5	LOCKWASHER	4
2	4755785-5	MOUNT-ENGINE	3
3	0920587-3	CAPSCREW- .625-11 x 3.5	2
4	4857245-7	STUD	1
5	0929306-9	WASHER- .688 X 2.50 X 12	7
6	0923351-1	NUT-LOCK- .625-11	3
7	4878341-1	ENGINE ASSEMBLY	1

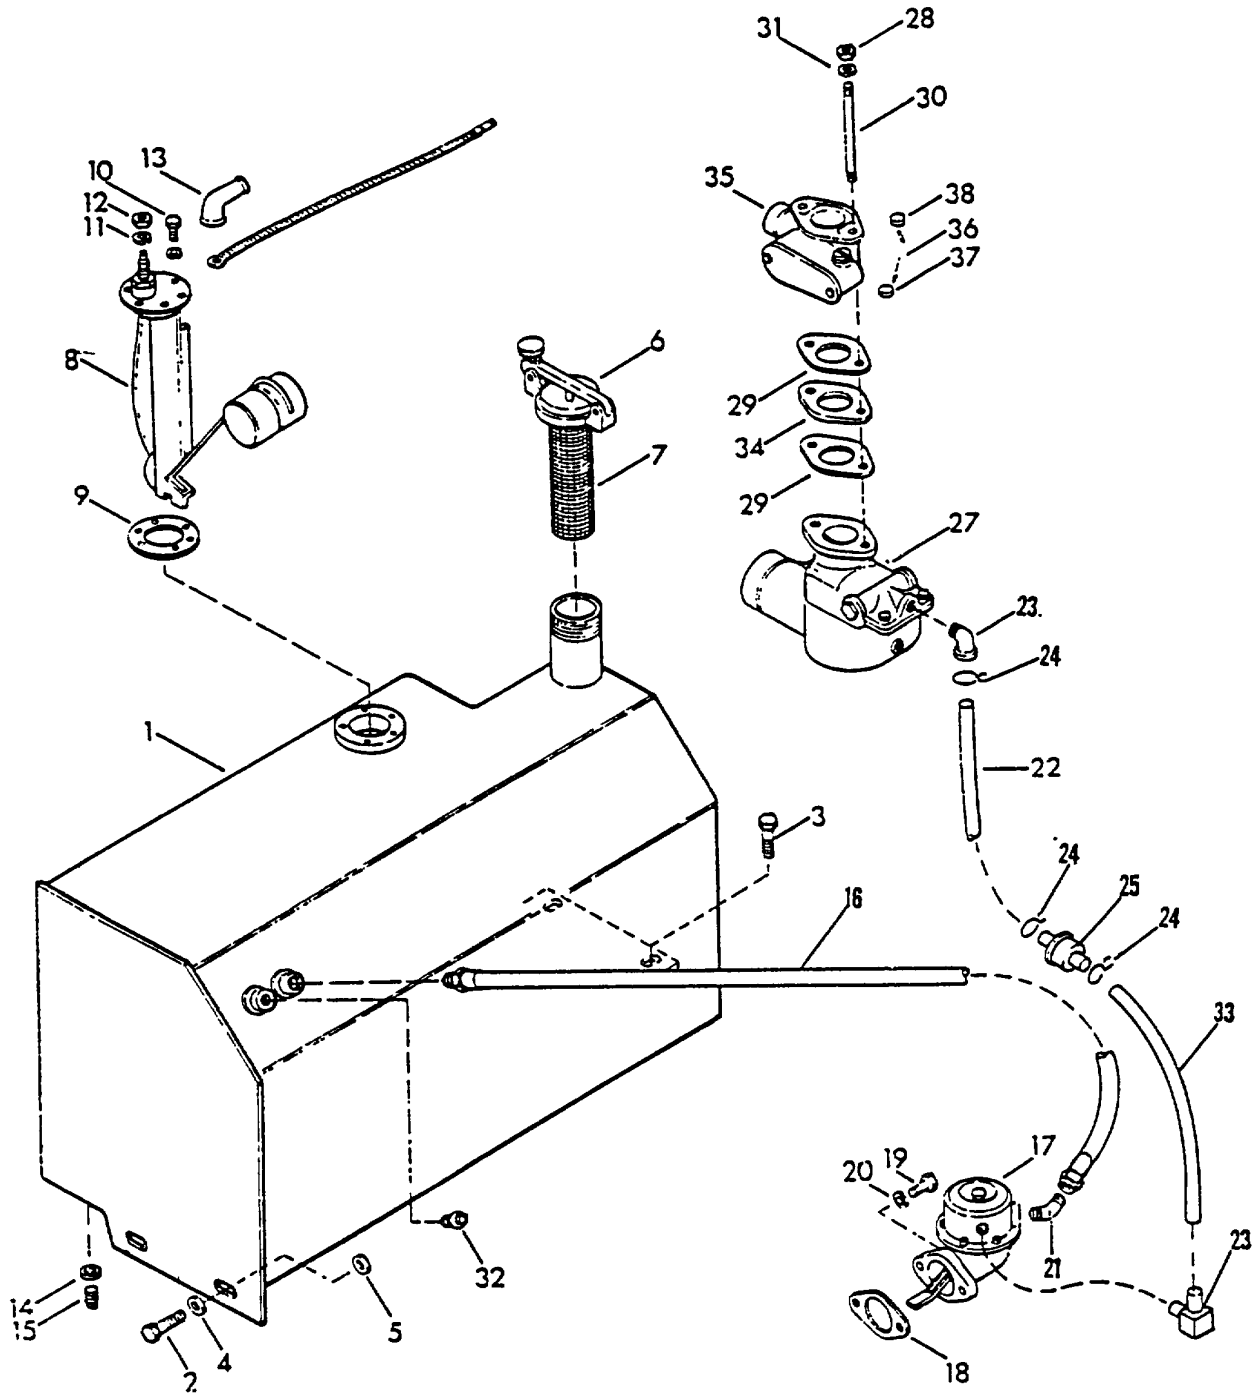

FUEL SYSTEM (PRT)


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4856680-6	TANK FUEL	1	
2	0921210-1	CAPSCREW .375 -16 X .750	2	
3	0922130-0	CAPSCREW .375 -16 X 2.25"	2	
4	0918266-8	WASHER	4	
5	0916965-7	LOCKWASHER	4	
6	4749382-0	CAP TANK	1	
7	4991217-3	SCREEN	1	
8	4905897-7	SENDER FUEL	1	
9	4735714-0	GASKET	1	
10	0922121-9	SCREW #10 -32 X .375	5	
11	0917365-9	LOCKWASHER	6	
12	0917415-2	NUT	1	
13	4757678-0	BOOT	1	
14	4845678-4	WASHER	1	
15	4847837-4	PLUG	1	
16	4749988-4	HOSE - FUEL	1	
17	4848884-5	PUMP FUEL	1	
18	4848885-2	GASKET	1	
19	0921332-3	CAPSCREW	2	
20	0917356-8	LOCKWASHER	2	
21	0910140-3	ELBOW	2	
22	4875689-4	HOSE	1	
23	0931713-2	ELBOW	2	
24	0931835-3	CLAMP	4	
25	4868015-1	FILTER FUEL	1	
26		NOT USED		
27	4856670-7	CARBURETOR ASSY	1	SEE PAGE 39
28	0920263-1	NUT	2	
29	4908991-4	GASKET	2	
30	4908993-1	STUD	2	
31	0917356-8	LOCKWASHER	2	
32	0901651-0	PLUG	1	
33	4875688-6	HOSE	1	
34	4859180-4	SPACER	1	
35	4857198-8	GOVERNOR ASSY	1	
R 36		WIRE LOCK	1	} ORDER ITEM 29
R 38		SEAL	1	
R 39	4909981-5	KIT-SEAL	1	

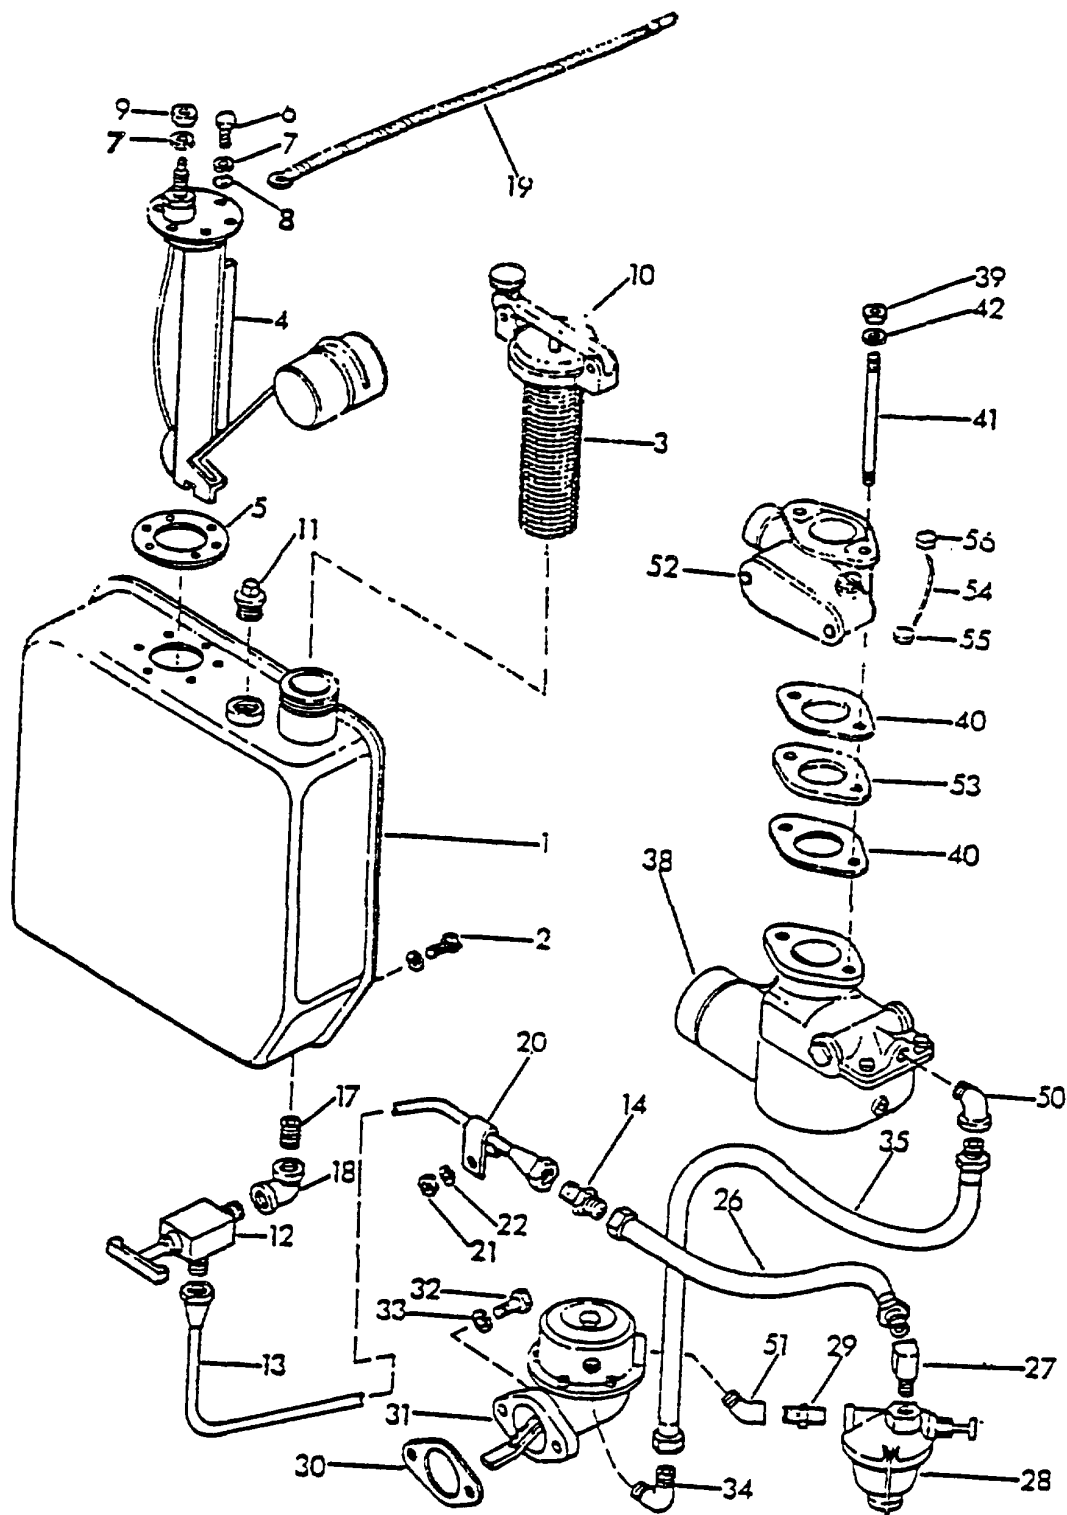

FUEL SYSTEM (SRT)

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4831754-9	TANK-FUEL	1	
2	0921210-1	CAPSCREW- .38" -16 X 1"	4	
	0916965-7	LOCKWASHER- .38"	4	
3	4991217-3	SCREEN	1	
4	4905897-7	SENDER	1	
5	4735714-0	GASKET	1	
6	0917452-5	SCREW- RD HO- -10 -32 X .5"	5	
7	0917365-9	LOCKWASHER- 10	6	
8	4255574-8	WASHER - DYNASEAL	5	
9	0917415-2	NUT- t10- 32	1	
10	4749382-0	CAP- FILLER	1	INCL ITEM 3
11	0901652-8	PLUG- PIPE- SO H0- .25"	1	
12	4716873-7	VALVE- SHUT- OFF	1	
13	4856620-2	TUBE ASSY	1	
14	0910995-0	UNION- .31" TUBE X .5" -20	1	
15	4823287-0	NOT USED	1	
17	0904709-3	NIPPLE- PIPE- .25" X 1.75"	1	R
18	0901677-5	ELBOW- 900 PIPE- .25"	1	
19	4790065-9	WIRE ASSY	1	
20	4767130-0	CLAMP	1	
21	0917372-5	NUT- .31" -18	1	
22	0917356-8	LOCKWASHER- .31"	1	
23	4767130-0	NOT USED	1	
24	0917397-2	NOT USED	2	
	0917356-8	NOT USED	2	
	0917372-5	NOT USED	2	
	0910995-0	NOT USED	1	
25	4826143-2	HOSE- FUEL	1	
27	0915399-0	ELBOW- 900 STREET- .12" -27	1	
28	4730551-1	FILTER- FUEL	1	SEE PAGE 41
29	0920215-1	NIPPLE- BRASS PIPE- .12" -27	1	
30	4848885-2	GASKET- PUMP	1	
31	4908789-3	PUMP- FUEL	1	INCL ITEM 30
32	0921332-3	CAPSCREW- .31" -18 X .75	2	
33	0917356-8	LOCKWASHER	2	
34	0910140-3	ELBOW- 90u BRASS- .44" -24	1	
35	4856781-2	HOSE	1	
36	4253435-4	NOT USED	1	
37	0913039-4	NOT USED	1	
38	4856670-7	CARBURETOR	1	SEE PAGE 43
39	0920263-1	NUT	2	
40	4908991-4	GASKET- CARBURETOR	2	R
41	4908993-1	STUD	2	
42	0917356-8	LOCKWASHER- .38"	2	
43	0916950-9	NOT USED	2	
44	4516583-4	NOT USED	1	
45	4736044-1	NOT USED	1	
46	4514972-1	NOT USED	1	

72367

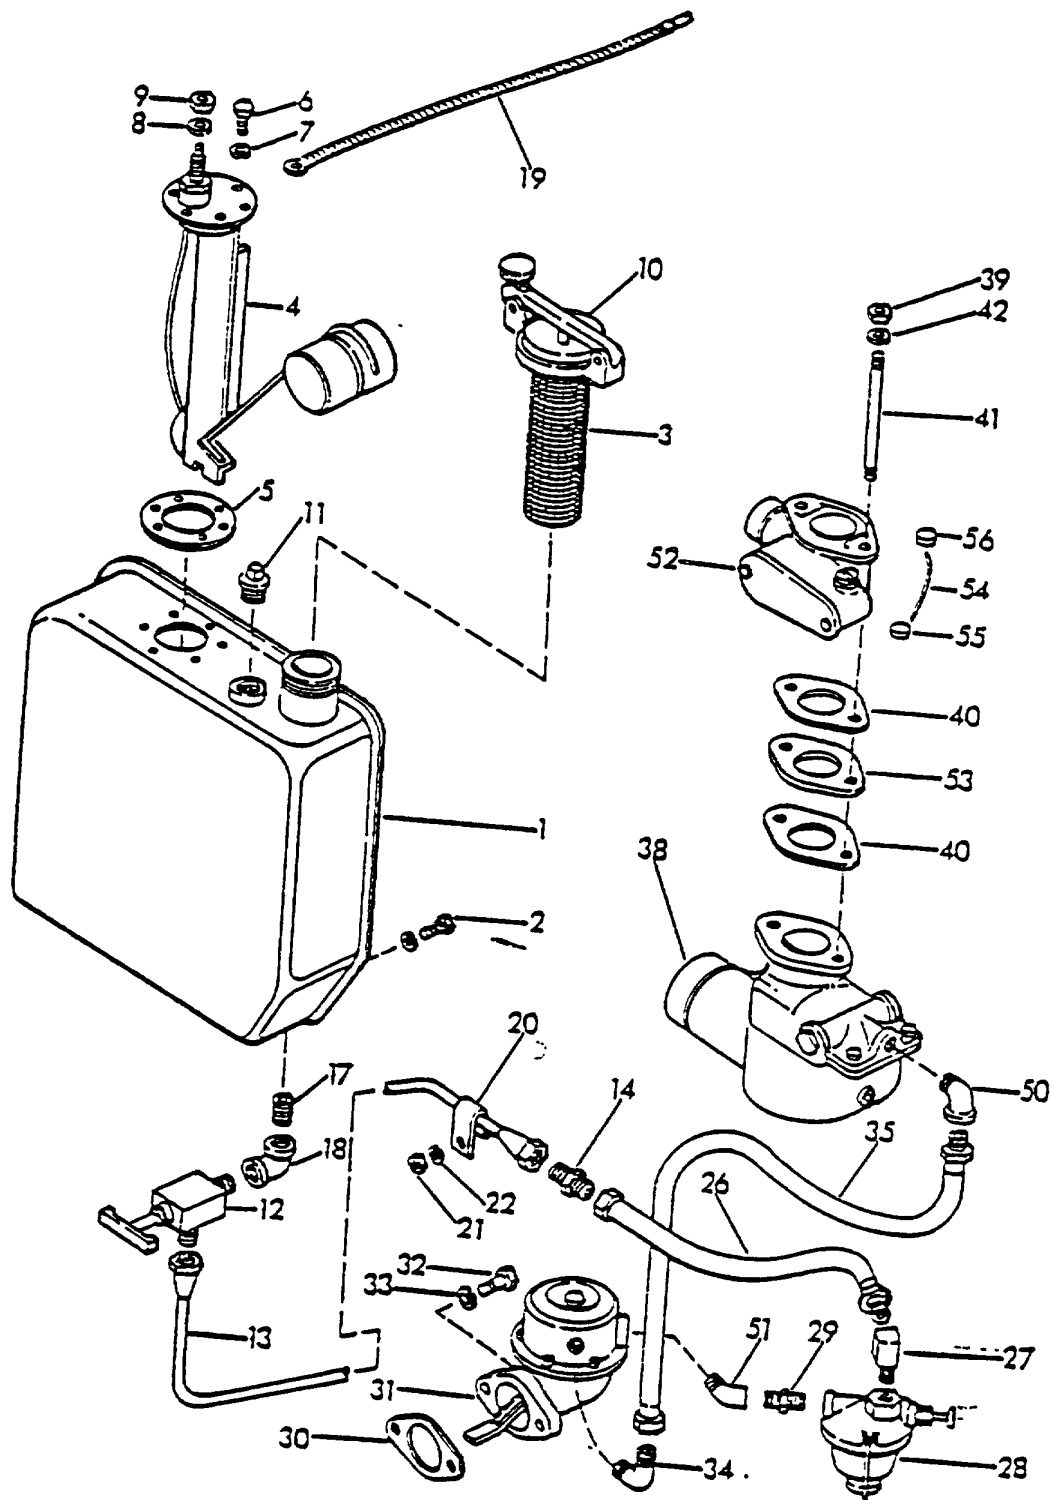


FUEL SYSTEM (SRT)

ITEM	PART NO.	DESCRIPTION	QTY.
47	0901480-4	NOT USED	1
48	0901677-5	NOT USED	1
49	0907859-3	NOT USED	1
50	0915399-0	ELBOW	1
51	0920655-S	ELBOW	1
52	4857198-8	GOVERNOR	1
53	4859180-4	SPACER	1
R 54		WIRE LOCK	1
R 55		SEAL	1
R 56		SEAL	1
R 57	4909981-5	KIT-SEAL	1


ORDER ITEM 57

72367

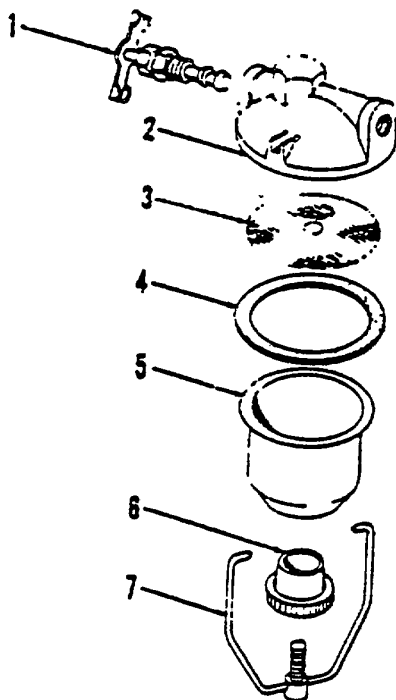

FUEL STRAINER - 4730551-1

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4981110-2	SHUT-OFF	1	
2	4981104-5	COVER	1	
3	4981105-2	SCREEN	1	
4	4981106-0	GASKET	1	
5	4981107-8	BOWL-METAL	1	
6	4981108-6	NUT-CUP	1	
7	4981109-4	WIRE ASSEMBLY-CLAMP	1	INCL STUD

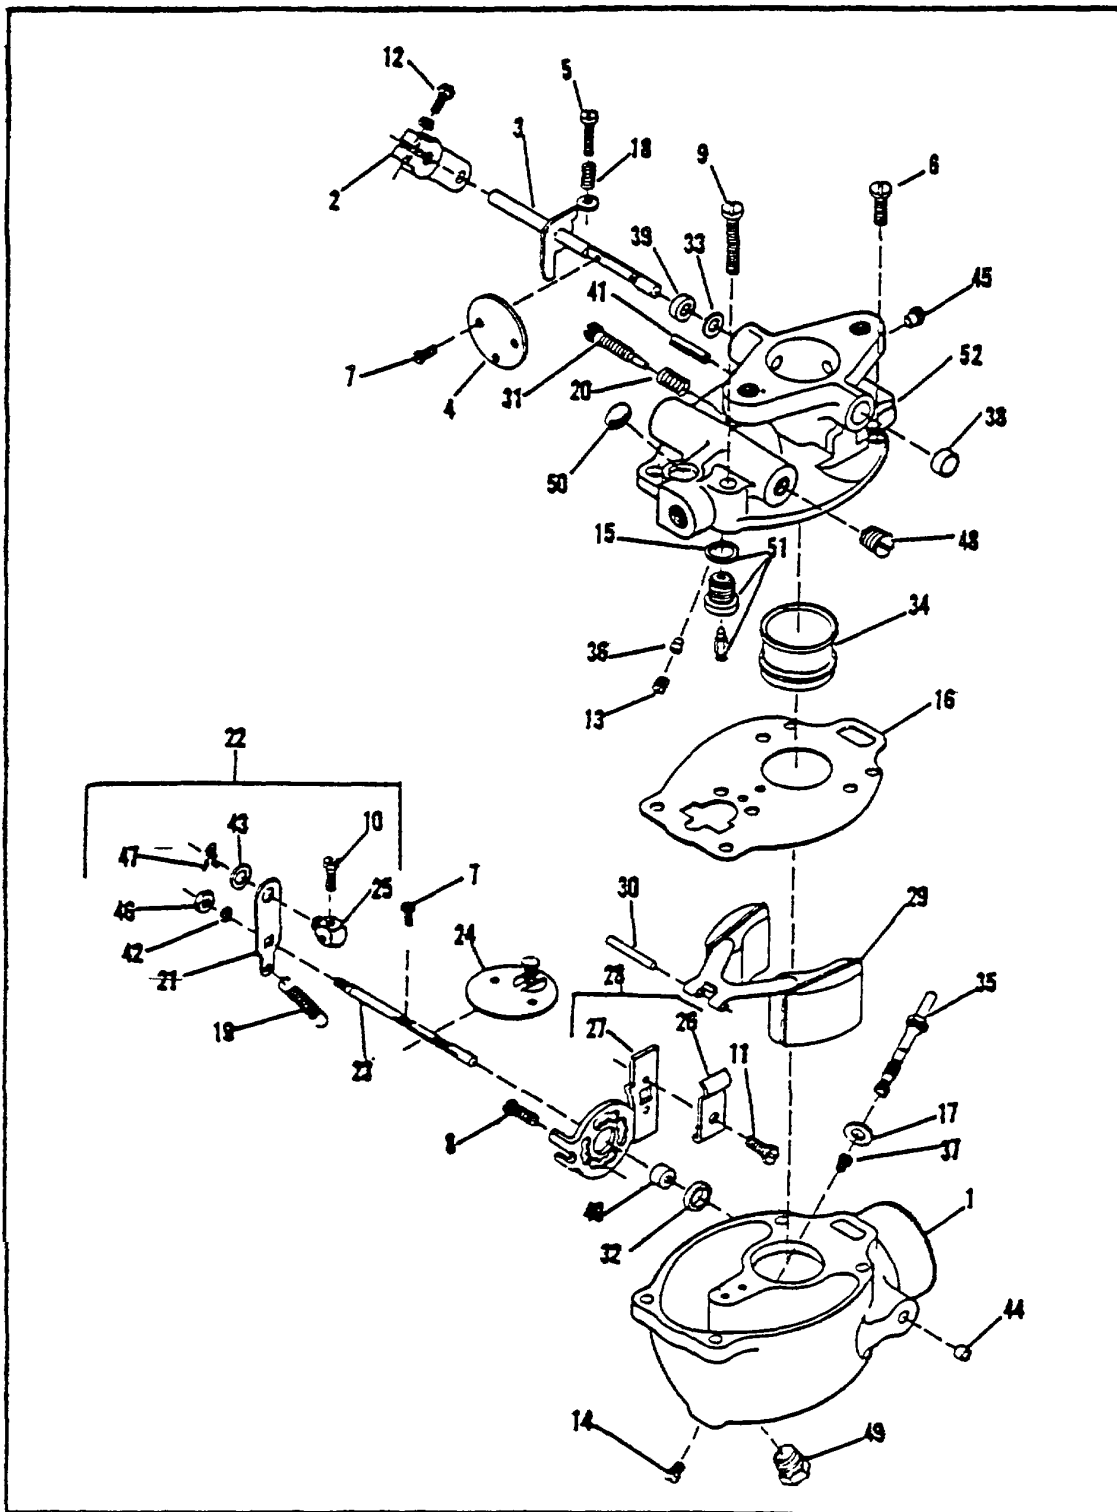


CARBURETOR- 4856670-7

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4909906-2	BODY	1	
2	4909907-0	LEVER ASSY-THROTTLE	1	INCL 12
3	4907549-2	*SHAFT ASSY-THROTTLE	1	INCL 5 AND 18
4	4909908-8	PLATE-THROTTLE	1	
5	0220000-4	SCREW-THROTTLE STOP	1	
6	0219972-7	SCREW-THROTTLE BODY TO BOWL	3	
R 7	0219973-5	*SCREW-CHOKE PLATE	4	
8	4046824-5	SCREW-CHOKE BRACKET	1	
9	4046790-8	SCREW-THROTTLE BODY TO BOWL	1	
10	0222045-7	SCREW-CHOKE SWIVEL	1	
11	4051691-6	SCREW-CHOKE CLIP	1	
12	1123067-9	SCREW-CLAMP	1	
13	4907552-6	SCREW-DRILL PLUG	1	
14	0224967-0	SCREW-NOZZLE HOLE	1	
15	0219998-2	*GASKET-FLOAT VALVE SEAT	1	
R16	0219976-8	*GASKET-BODY TO BOWL	1	
17	0219999-0	*GASKET-NOZZLE	1	
18	0219977-5	SPRING-THROTTLE	1	
19	4909909-6	SPRING-CHOKE RETURN	1	
20	0219978-4	*SPRING-IDLE NEEDLE	1	
21	4909910-4	LEVER-CHOKE	1	
22	4909911-2	LEVER ASSY-CHOKE	1	INCL 10, 19, 21,25-, 42, 43, 46, & 47
23	4907555-9	SHAFT-CHOKE	1	
24	0229611-9	PLATE ASSY-CHOKE	1	
25	4045429-6	SWIVEL-CHOKE	1	
26	4047137-7	CLIP-CHOKE BRACKET	1	
27	4909912-0	BRACKET	1	
28	4909913-8	BRACKET ASSY-CHOKE	1	INCL 26 & 27
29	0219985-9	FLOAT	1	
R 30	0219986-7	*SHAFT-FLOAT	1	
31	4907559-1	*NEEDLE-IDLE ADJUSTING	1	
32	4907581-5	*PACKING-CHOKE SHAFT	1	
33	0224949-8	*PACKING-THROTTLE SHAFT	1	
34	4909914-6	VENTURI	1	
35	4907583-1	NOZZLE	1	
36	4909840-3	*JET-IDLE RESTRICTION	1	
37	4909841-1	*JET-POWER	1	
38	4045441-5	*CUP-THROTTLE SHAFT	1	
39	0219968-5	*RETAINER-PACKING	1	
40	4907586-4	*RETAINER-PACKING	1	
41	0916169-6	PIN-THROTTLE STOP	1	
42	4054551-9	WASHER-CHOKE SHAFT	1	

CARBURETOR - 4856670-7

ITEM	PART NO.	DESCRIPTION	QTY.
43	0219997-4	WASHER-CHOKE LEVER	1
44	4907590-5	PLUG-CHOKE SHAFT	1
45	0800465-7	PLUG-IDLE DRILLING	1
46	4907589-8	NUT-CHOKE SHAFT	1
47	0222069-7	PIN -COTTER-SWIVEL	1
48	4050905-1	PLUG-FUEL INLET	1
49	4046803-9	PLUG-BOWL DRAIN	1
R 50	4052271-6	*PLUG-EXPANSION	1
R 51	0244912-2	*VALVE ASSY-FLOAT	1
52	4909915-3	BODY ASSY-THROTTLE	1


*INCLUDED IN KIT 4909738-9

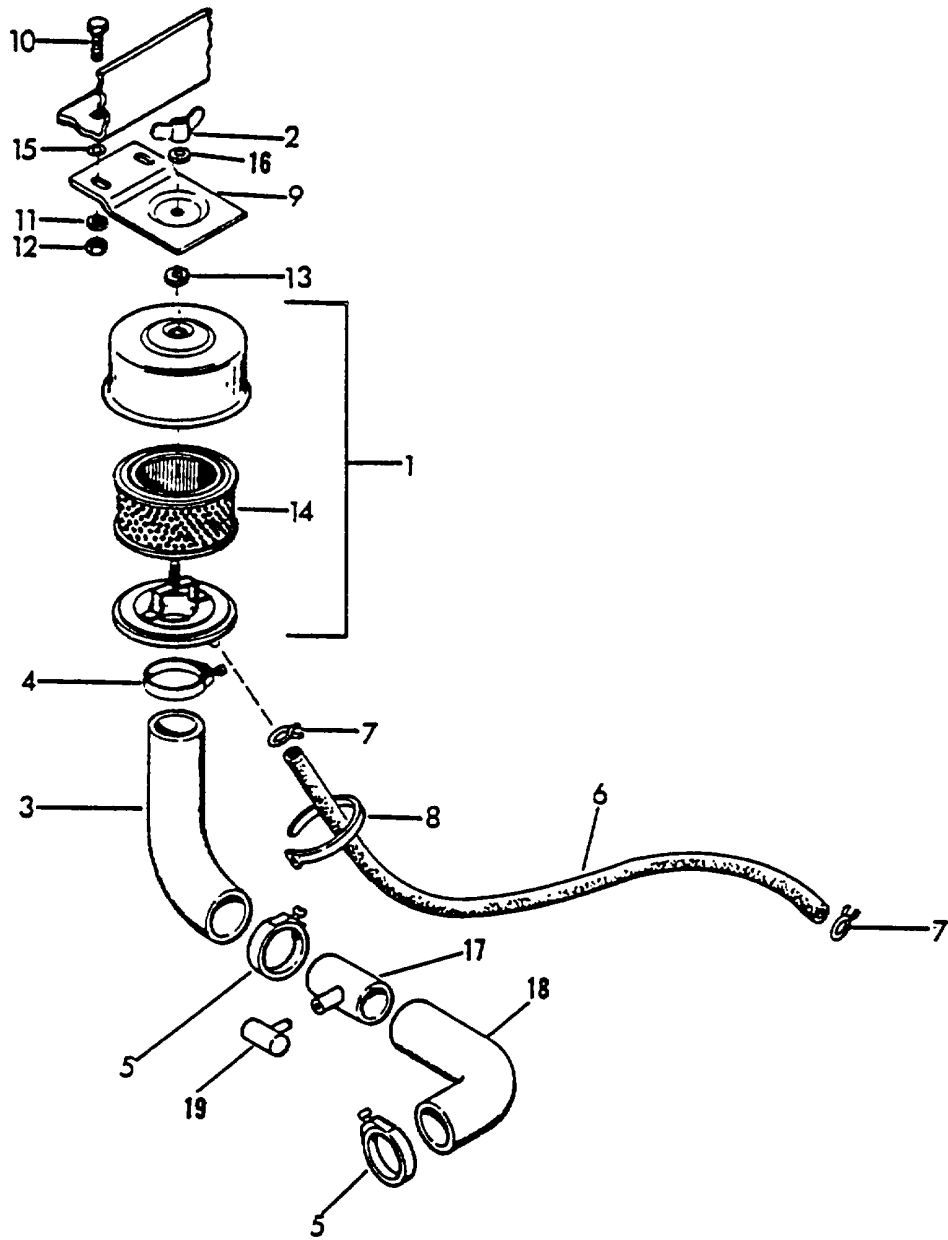

AIR CLEANER (PRT)

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4793751-1	CLEANER ASSY-AIR	1	INCL ITEM 16
2	0916952-5	NUT-WING- .25" - 20	1	
3	4860736-0	HOSE	1	
4	0925758-5	CLAMP-HOSE	1	
5	0922198-7	CLAMP-HOSE	3	
6	4849712-7	HOSE - 32"	1	TO CYLINDER BLOCK
7	4255557-3	CLAMP-HOSE	2	
8	4255355-2	TY-RAP	1	
9	4860732-0	NOT USED	1	
10	0922034-4	NOT USED	2	
11	0917356-8	NOT USED	2	
12	0917373-5	NOT USED	2	
13	4773420-7	WASHER-RUBBER	1	
14	4997568-3	ELEMENT	1	
15	0921880-1	LOCKWASHER EXT .25	1	
16	0921319-0	WASHER	1	
17	4860734-5	TUBE ASSY	1	
18	4863981-9	HOSE	1	
19	4804565-2	INDICATOR	1	

PRIOR TO SERIAL NO 113217

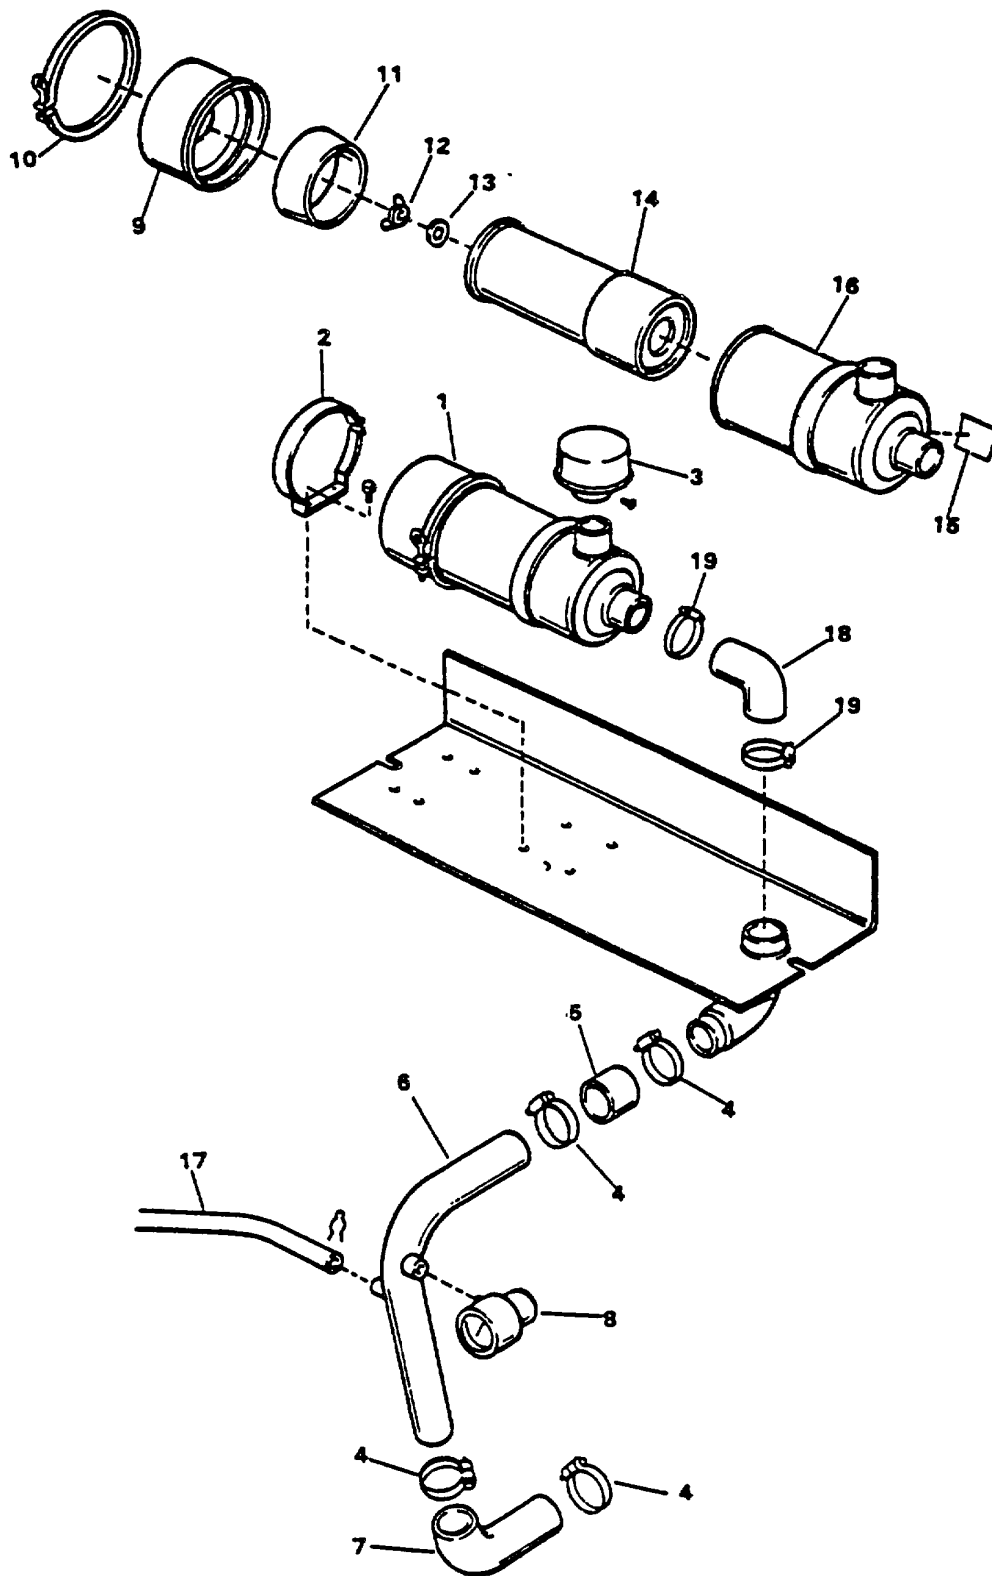


AIR CLEANER*

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4847465-4	CLEANER ASSY-AIR	1	INCL ITEMS 9 THRU 16
2	4789058-7	CLAMP-MOUNTING	2	
	0921332-3	CAPSCREW	4	
	0917372-5	NUT	4	
	0917356-8	LOCKWASHER	4	
3	4884602-6	CAP-CLEANER	1	
	0927150-3	SCREW	1	
4	0922198-7	CLAMP	4	
5	4386635-9	HOSE	1	
6	4884598-6	TUBE	1	
7	4884601-8	HOSE	1	
8	4804565-2	INDICATOR	1	
9	4996255-8	CUP ASSY	1	
10	4996464-6	CLAMP	1	
11	4996254-1	BAFFLE	1	
12	4996250-9	THUMBSCREW	1	
13	3046862-3	GASKET	1	
14	4907794-3	ELEMENT	1	
15	4996251-7	DECAL-INFORMATION	1	
16	4847468-8	BODY ASSY	1	
17	4849712-7	HOSE	1	
	4255557-3	CLAMP	2	
18	4884595-2	HOSE	1	
19	0925758-5	CLAMP	2	

*EFFECTIVE WITH Model PRT SERIAL NO 113217


AIR CLEANER (SRT)

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4841879-2	CLEANER ASSY-AIR	1	INCL ITEMS 9 THRU 16
2	4789058-7	CLAMP-MOUNTING	2	
	0906827-1	SCREW-BRASS	2	
	0910965-3	NUT-SQUARE	2	
	0921332-3	CAPSCREW	4	
	0917356-8	LOCKWASHER	4	
	0918265-0	WASHER	4	
3	4858427-0	SUPPORT	1	
4	4612316-2	HOSE	1	
5	0922198-5	CLAMP-HOSE	2	
6	4849712-7	HOSE	1	
	0929402-6	CLAMP-HOSE	2	
7	4810695-9	HOSE	1	
	0922198-5	CLAMP-HOSE	2	
8	4804565-2	INDICATOR	1	
9	4996255-8	CUP ASSY	1	
10	4996464-6	CLAMP	1	
11	4996254-1	BAFFLE	1	
12	4996250-9	THUMBSCREW	1	
13	3046862-3	GASKET	1	
14	4907794-3	ELEMENT	1	
15	4996251-7	DECAL-INFORMATION	1	
16	4996252-5	BODY ASSY	1	
17	4882421-3	SLEEVE-CARBURETOR	1	
R 18	4882420-5	TUBE ASSY	1	
R	0917372-5	NUT	4	

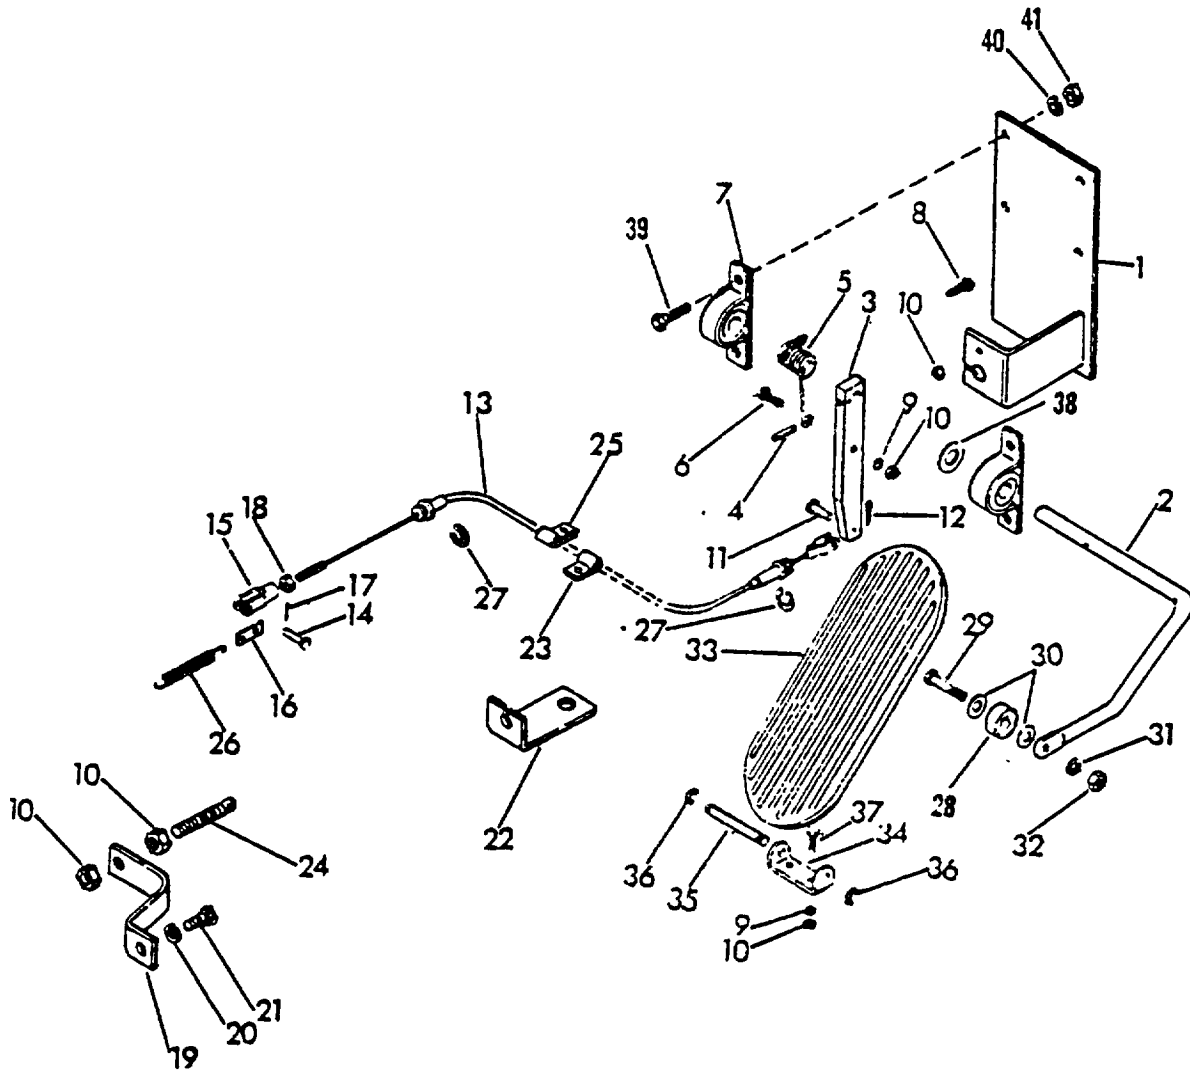


ACCELERATOR

ITEM	PART NO.	DESCRIPTION	QTY.
1	4818809-8	BRACKET-PEDAL	1
2	4859254-7	SHAFT	1
3	4818813-0	LEVER	1
4	0916169-6	PIN-SPRING- .19" X .75"	1
5	4806104-8	SPRING	1
6	0924009-4	CAPSCREW- .25" -20 X .88"	1
7	4758547-6	BEARING-SHAFT MOUNTING	2
8	0925146-3	CAPSCREW- .25" -20 X 1.25"	1
9	0916964-0	LOCKWASHER- .25"	5
10	0916622-4	NUT- .25" -20	8
11	0929591-6	PIN-YOKE-	1
12	0918625-5	PIN-COTTER- .05" X 1"	1
13	4818833-8	CABLE-ACCELERATOR	1
14	0925341-0	PIN	1
15	0923272-9	YOKE- .25"	1
16	4818834-6	CLIP	1
17	0923360-2	PIN-COTTER-	1
18	0920437-1	NUT-JAM- .25" -28	1
19	4858180-5	BRACKET-CABLE	1
20	0916964-0	LOCKWASHER	1
21	0921958-5	CAPSCREW .250-20 X .500	1
22	4861667-6	BRACKET-CABLE	1
23	4375953-9	CLIP	1
24	4754948-0	SCREW	1
25	0929615-3	CLAMP- .38"	1
26	4816185-5	SPRING	1
27	4255401-4	E-RING	2
28	4761270-0	BEARING	1
29	0921967-6	CAPSCREW- .38" -16 X 1.12"	1
30	0911987-6	WASHER-PLAIN- .38" X .56"	2
31	0916965-7	LOCKWASHER- .38"	1
32	0917421-0	NUT-JAM- .38" -16	1
33	4765514-7	PEDAL	1
34	4735718-1	BRACKET	1
35	4774640-9	PIN	1
36	4255183-8	E-RING	2
37	0923341-2	CAPSCREW- .25" -20 X .75"	2
38	0924359-3	WASHER-PLAIN- .531 X 1.00 X 20	2
39	0921273-9	CAPSCREW	4
40	0921880-1	LOCKWASHER	4
41	0920435-5	NUT	4

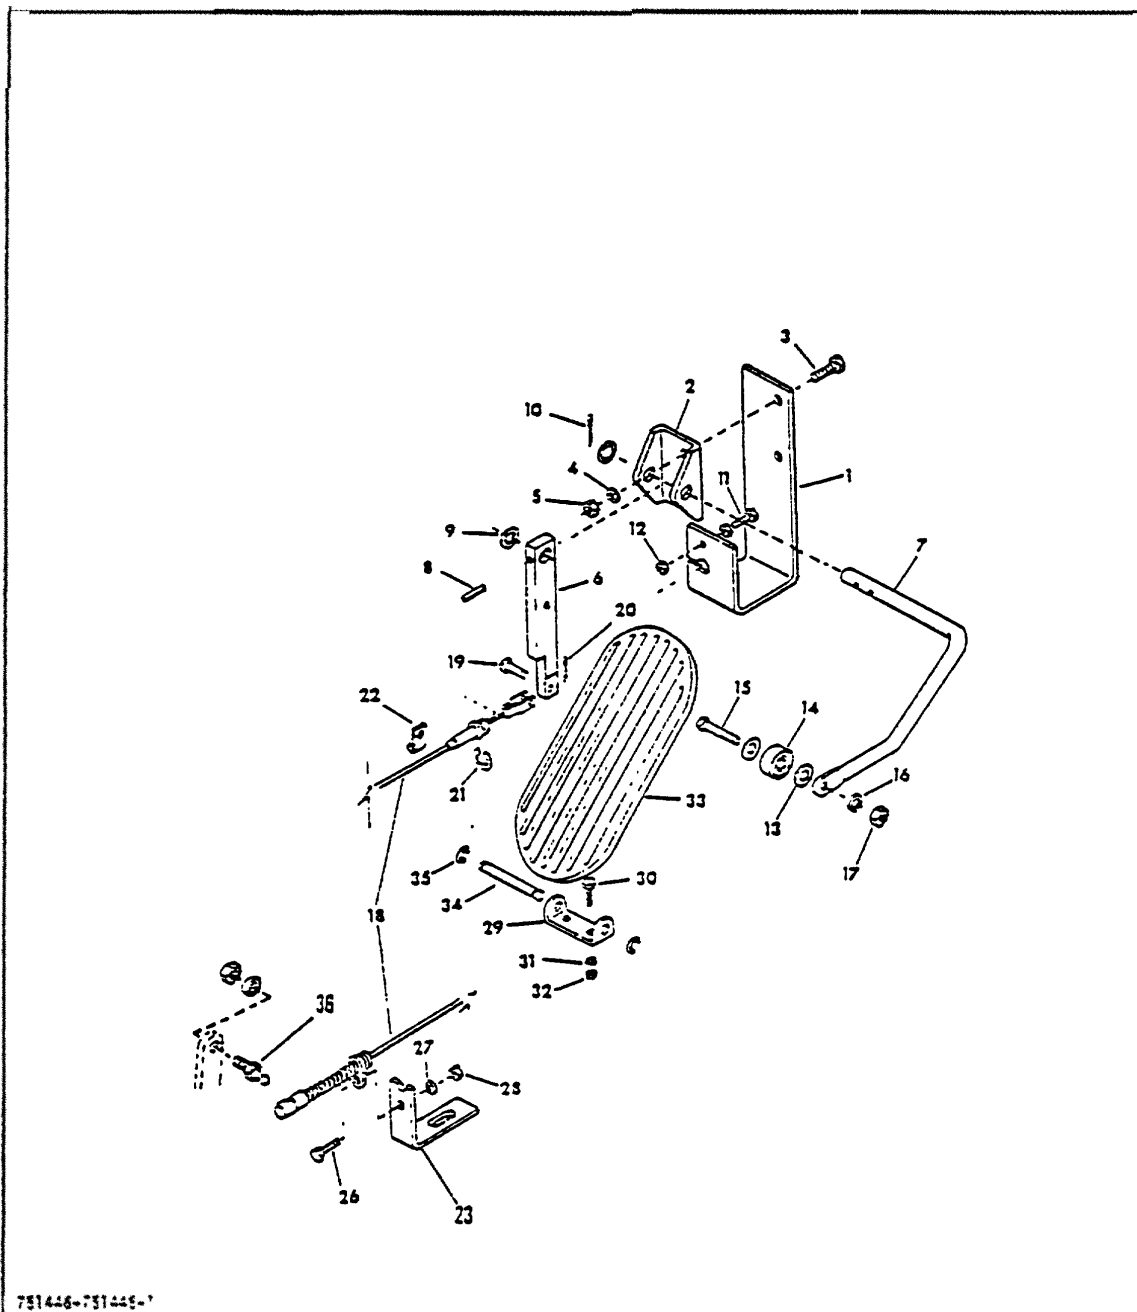

ACCELERATOR PEDAL & CABLE

ITEM	PART NO.	DESCRIPTION	QTY.
1	4864082-5	BRACKET	1
2	4864085-8	SUPPORT	1
3	0931515-1	CAPSCREW-.25-20X 1.25	2
4	0916964-0	LOCKWASHER-.25	2
5	0916622-4	NUT-.25-20	2
6	4818813-0	LEVER	1
7	4868125-8	SHAFT-ACCELERATOR	1
8	0916169-6	PIN-SPRING-.19" X .75"	1
9	0919327-7	WASHER-.53"	2
10	0929585-8	PIN-COTTER-.06" X 1"	1
11	0931515-1	CAPSCREW-.25"-20 X 1.25"	1
12	0916622-4	NUT-.25"-20	2
13	0911987-6	WASHER-.38"	2
14	4761270-0	BEARING	1
15	0921967-6	CAPSCREW-.38"-16 X 1.13"	1
16	0916965-7	LOCKWASHER-.38"	1
17	0916950-9	NUT-.38"-16	1
18	4868749-5	CABLE-ACCELERATOR	1
19	0929591-6	PIN-YOKE-.19" X .58"	1
20	0918625-5	PIN-.05" X 1"	1
21	4255401-4	RING-SNAP	1
22	0928135-3	CLAMP	1
23	4864087-4	SUPPORT-ACCELERATOR CABLE	1
24	NOT USED		
25	NOT USED		
26	0923341-2	CAPSCREW-.25"-20 X .75"	1
27	0916964-0	LOCKWASHER-.25"	1
28	0916622-4	NUT-.25"-20	1
29	4735718-1	BRACKET	1
30	0923341-2	CAPSCREW-.25"-20 X .75"	2
31	0916964-0	LOCKWASHER-.25"	2
32	0916622-4	NUT-.25"-20	2
33	4765514-7	PEDAL	1
34	4774640-9	PIN	1
35	4255183-8	E-RING	2
36	4868008-6	BALL	1
	0916964-0	LOCKWASHER	1
	0914192-0	NUT	1
	0929597-3	CLIP	1

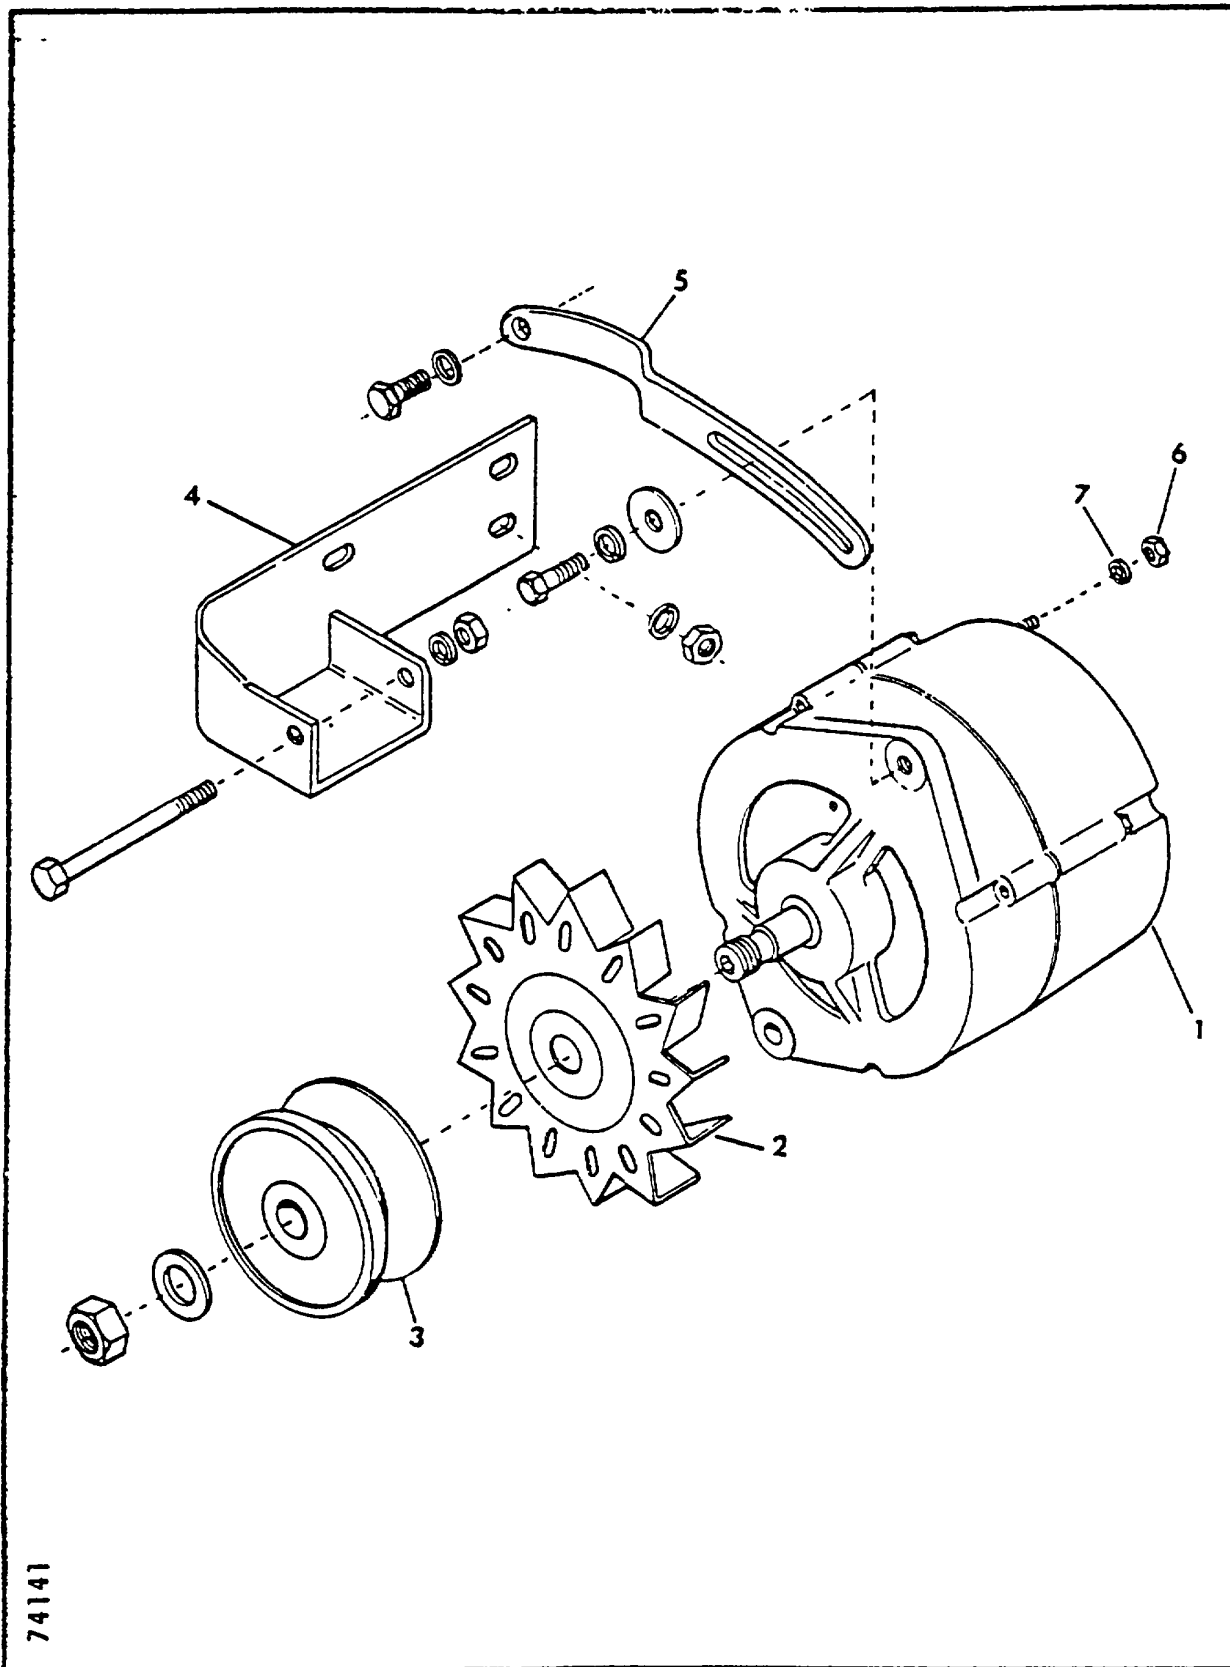


ALTERNATOR

ITEM	PART NO.	DESCRIPTION	QTY.	
1	{ 3057631-8	*ALTERNATOR ASSY	1	SEE PAGE 49
	{ 4883374-3	**ALTERNATOR ASSY	1	SEE PAGE 49
2	3057632-6	FAN	1	
3	4848486-9	PULLEY	1	
4	4866350-4	BRACKET ASSY	1	
	0922918-8	CAPSCREW- .38" -16 X 3.25"	1	
	0916965-7	LOCKWASHER- .38"	3	
	0917378-2	WASHER	2	
	0916950-9	NUT- .38" -16	3	
5	4856618-6	STRAP-ADJUSTING	1	
	0921333-1	CAPSCREW- .31" -18 X 1"	1	
	0917356-8	LOCKWASHER- .31"	1	
	0918265-0	WASHER- .31"	1	
6	0917376-6	NUT- #12-24	1	
7	0917389-9	LOCKWASHER- #12	1	

*GROUP A


**GROUP B

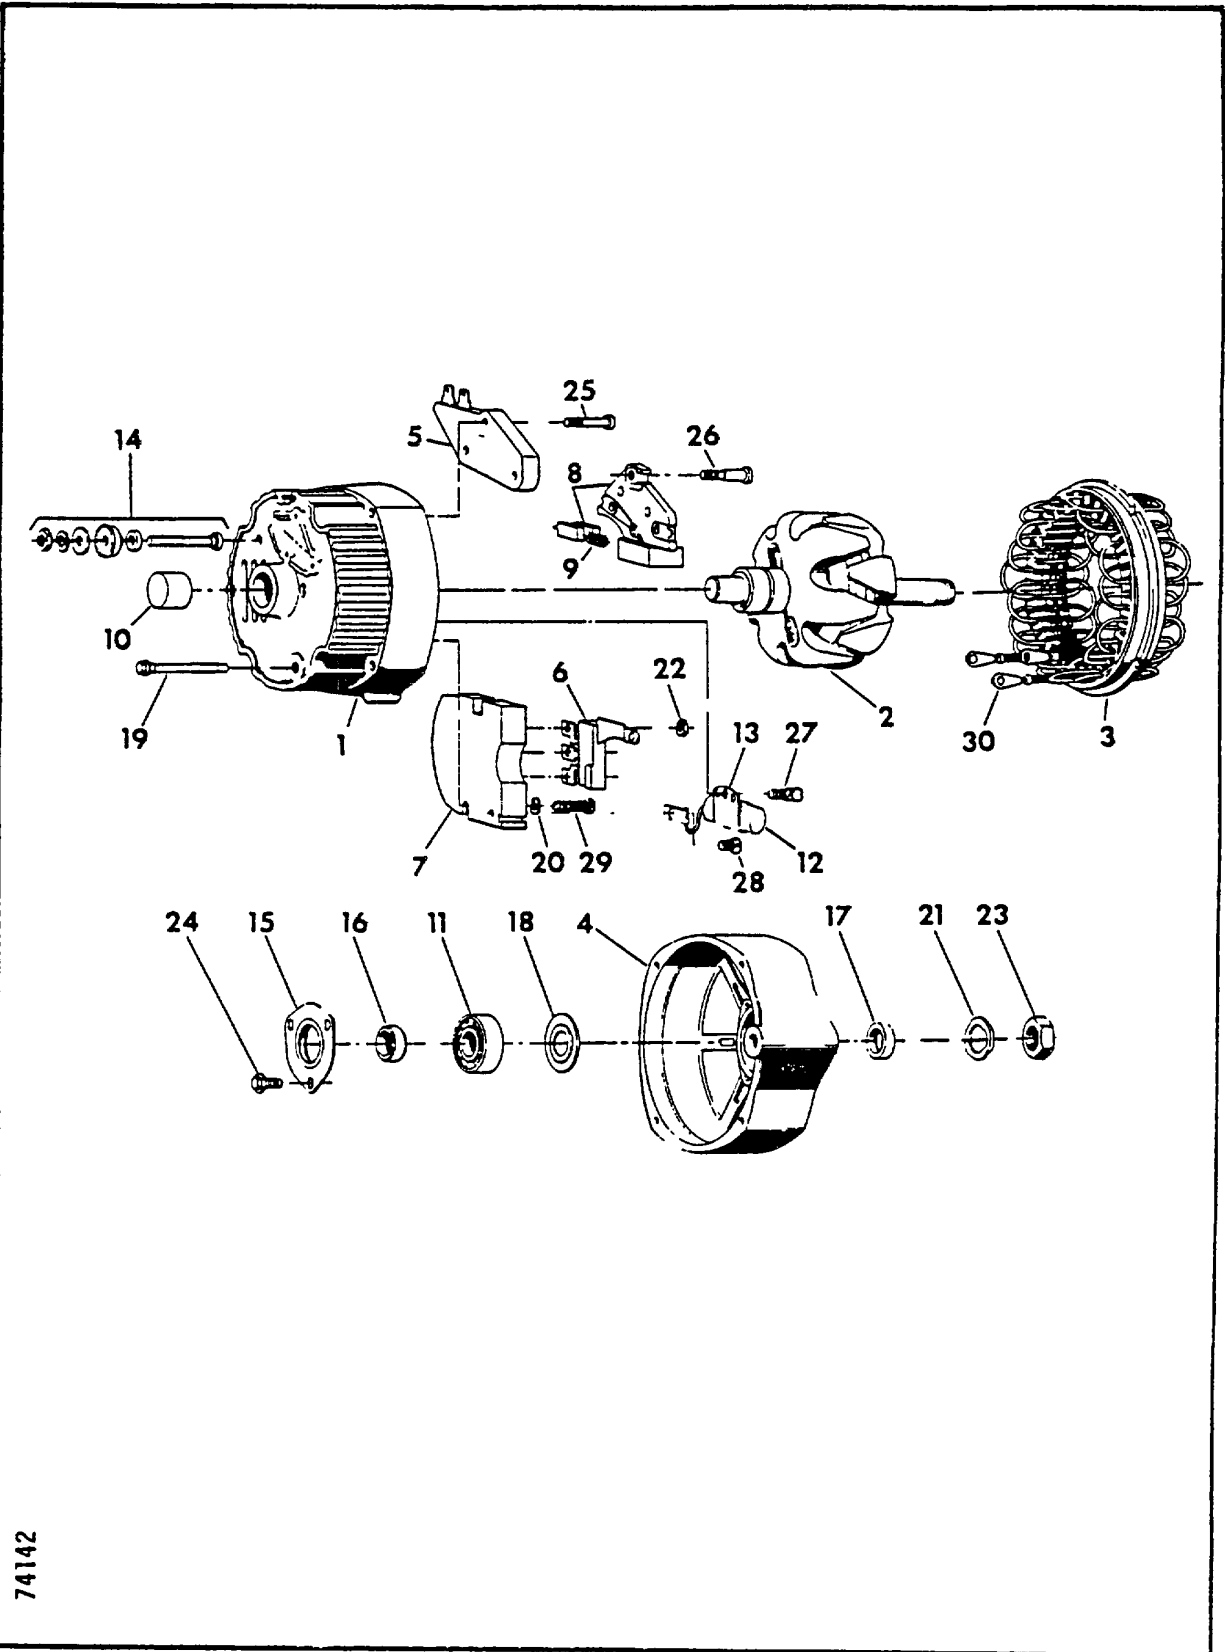

74142

ALTERNATOR ASSY-3057631-8


ITEM	PART NO.	DESCRIPTION	QTY.
1	4908760-4	FRAME	1
2	1172889-6	ROTOR ASSY	1
3	1009610-5	STATOR ASSY	1
4	1142678-0	FRAME-DRIVE END	1
5	1172893-8	REGULATOR	1
6	1172891-2	DIODE TRIO	1
7	1009611-3	RECTIFIER BRIDGE	1
8	1172894-6	BRUSH HOLDER AND BRUSH ASSY	1
9	0242818-3	SPRING-BRUSH	2
10	1172895-3	BEARING-ROLLER	1
11	1148619-8	BEARING-BALL	1
12	1172896-1	CAPACITOR	1
13	4054848-9	BRACKET-CAPACITOR	1
14	1172897-9	TERMINAL PACKAGE-BATTERY	1
15	0242826-6	PLATE-RETAINER	1
16	0242828-2	COLLAR-SHAFT-INSIDE	1
17	0242829-0	COLLAR-SHAFT-OUTSIDE	1
18	1172899-5	WASHER-GREASE SLINGER	1
19	0242838-1	THRU BOLT	4
20	0242831-6	WASHER	1
21	0237006-2	LOCKWASHER	1
22	1173326-8	NUT-RECTIFIER BRIDGE	3
23	4054799-4	NUT-SHAFT	1
24	0234792-9	SCREW-RETAINER PLATE	3
25	1173327-6	SCREW	1
26	1173328-4	SCREW-BRUSH HOLDER	2
27	1173329-2	SCREW-CAPACITOR BRACKET	1
28	1173329-2	SCREW-CAPACITOR LEAD	1
29	1173330-0	SCREW-RECTIFIER BRIDGE	1
30	0242840-7	CLIP-STATOR LEAD TERMINAL	3

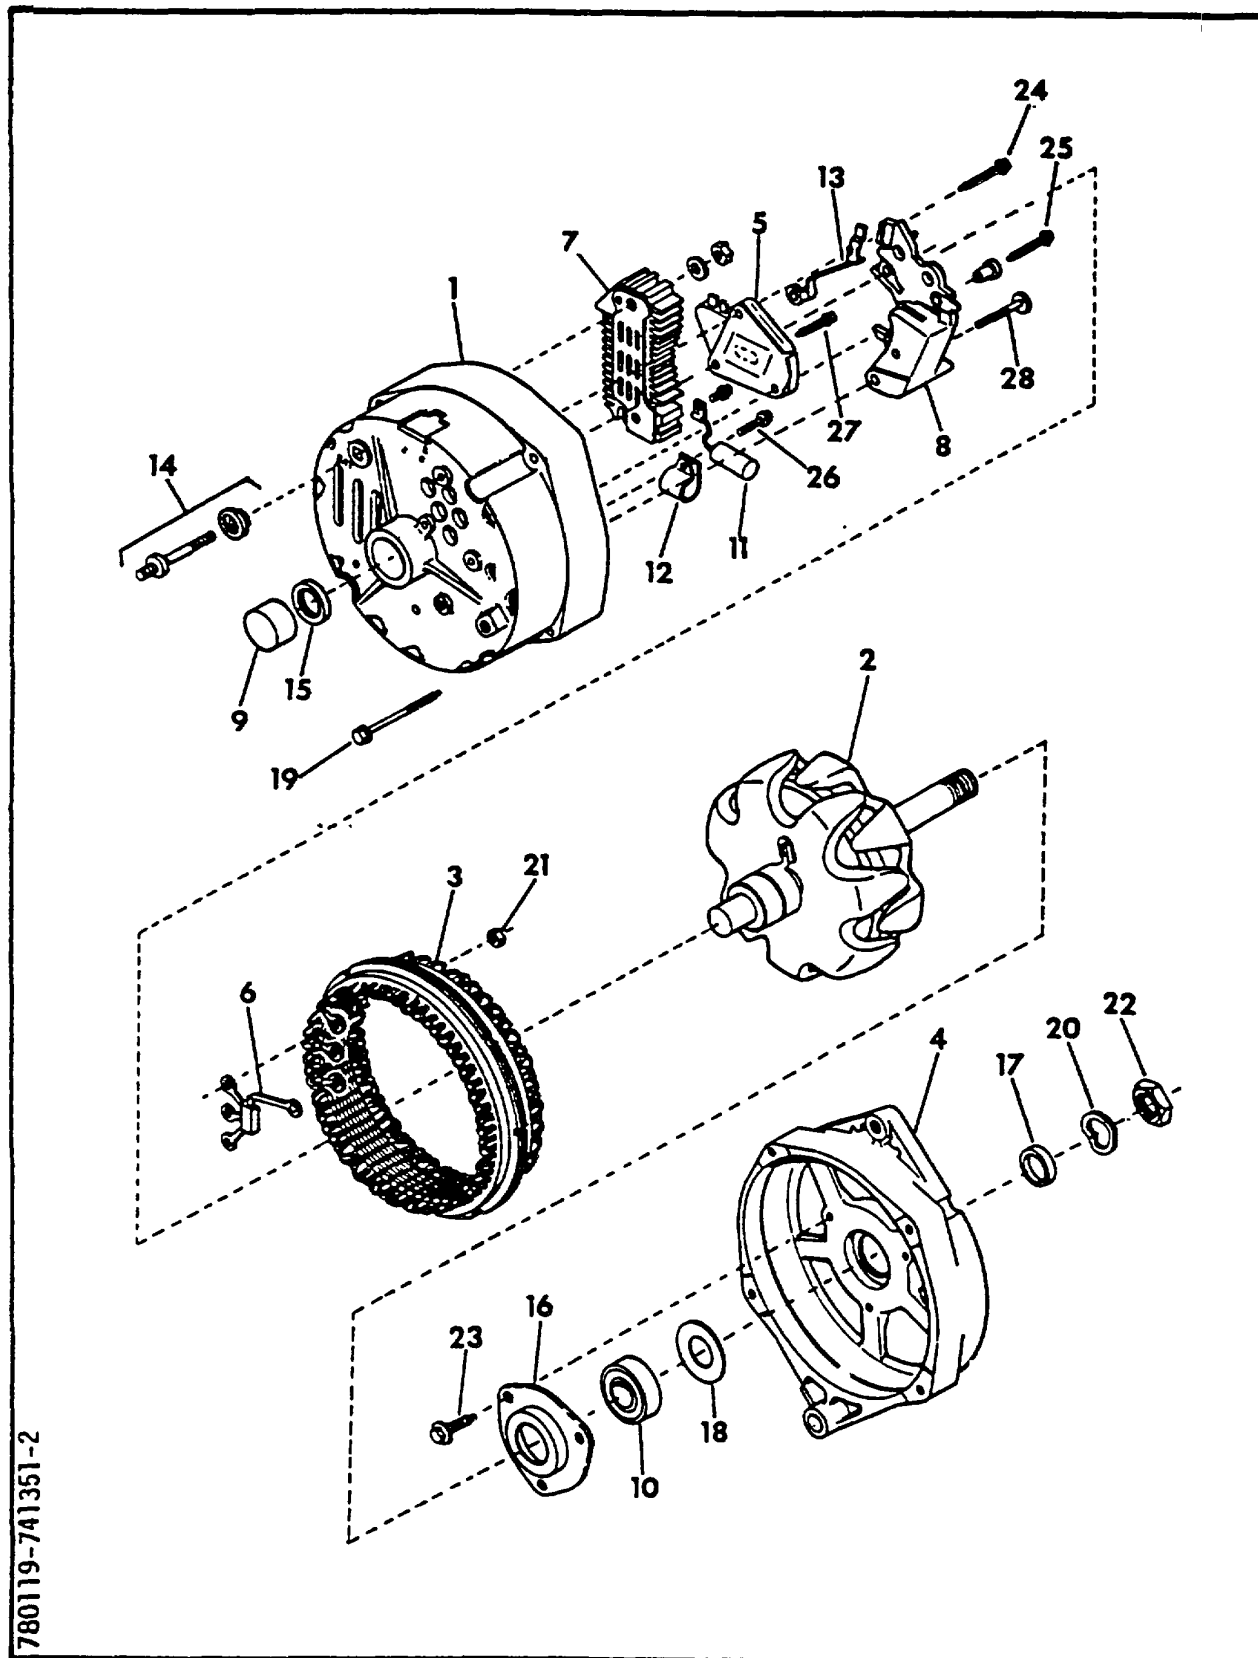

780119-741351-2

**ALTERNATOR ASSY-4883374-3
(GROUP B)**

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4913144-4	FRAME	1	INCL ITEMS 9 & 15
2	1174683-1	ROTOR ASSY	1	
3	4913145-1	STATOR ASSY	1	
4	1142678-0	FRAME-DRIVE END	1	
5	1172893-8	REGULATOR	1	
6	1172891-2	DIODE TRIO	1	
7	4912740-0	BRIDGE-RECTIFIER	1	
8	0262167-0	BRUSH HOLDER & ASSY	1	
9	1142670-7	BEARING-ROLLER	1	
10	1148619-8	BEARING-BALL-DRIVE END	1	
11	1172896-1	CAPACITOR	1	
12	4054848-9	BRACKET-CAPACITOR	1	
13	0262170-4	TERMINAL PKG-RELAY	1	
14	1172897-9	TERMINAL PKG-BATTERY	1	
15	1142677-2	SEAL-OIL	1	
16	0242826-6	PLATE-RETAINER	1	
17	0242829-0	COLLAR-SHAFT-OUTER	1	
18	1172899-5	WASHER-GREASE	1	
19	0242838-1	BOLT-THRU	4	
20	0237006-2	LOCKWASHER-SHAFT	1	
21	0917385-7	NUT-RECTIFIER BRIDGE	3	
22	4054799-4	NUT-SHAFT-DRIVE END	1	
23	0234792-0	SCREW-RETAINER PLATE	3	
24	026268-8	SCREW-BRUSH HOLDER-GND	1	
25	4908768-7	SCREW-BRUSH HOLER-INS	2	
26	1173329-2	SCREW-CAPACITOR BRACKET & LEAD	2	
27	1013727-1	SCREW-RECTIFIER BRIDGE	1	
28	0262169-6	SCREW-BRUSH HOLDER	1	

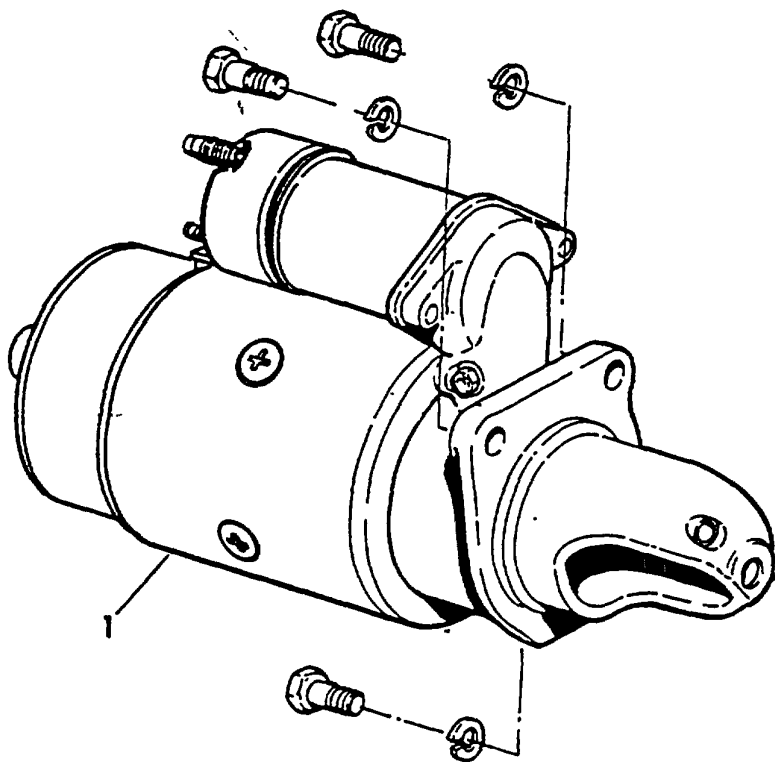


73484

STARTER

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4876696-8	STARTER ASSY	1	SEE PAGE 53
	0920415-7	CAPSCREW-.38" -16 X 1.25"	2	
	0916965-7	LOCKWASHER-.38"	3	
	0921210-1	CAPSCREW-.38 -16 X 1.00"	1	


PRIOR TO SERIAL NO 113217

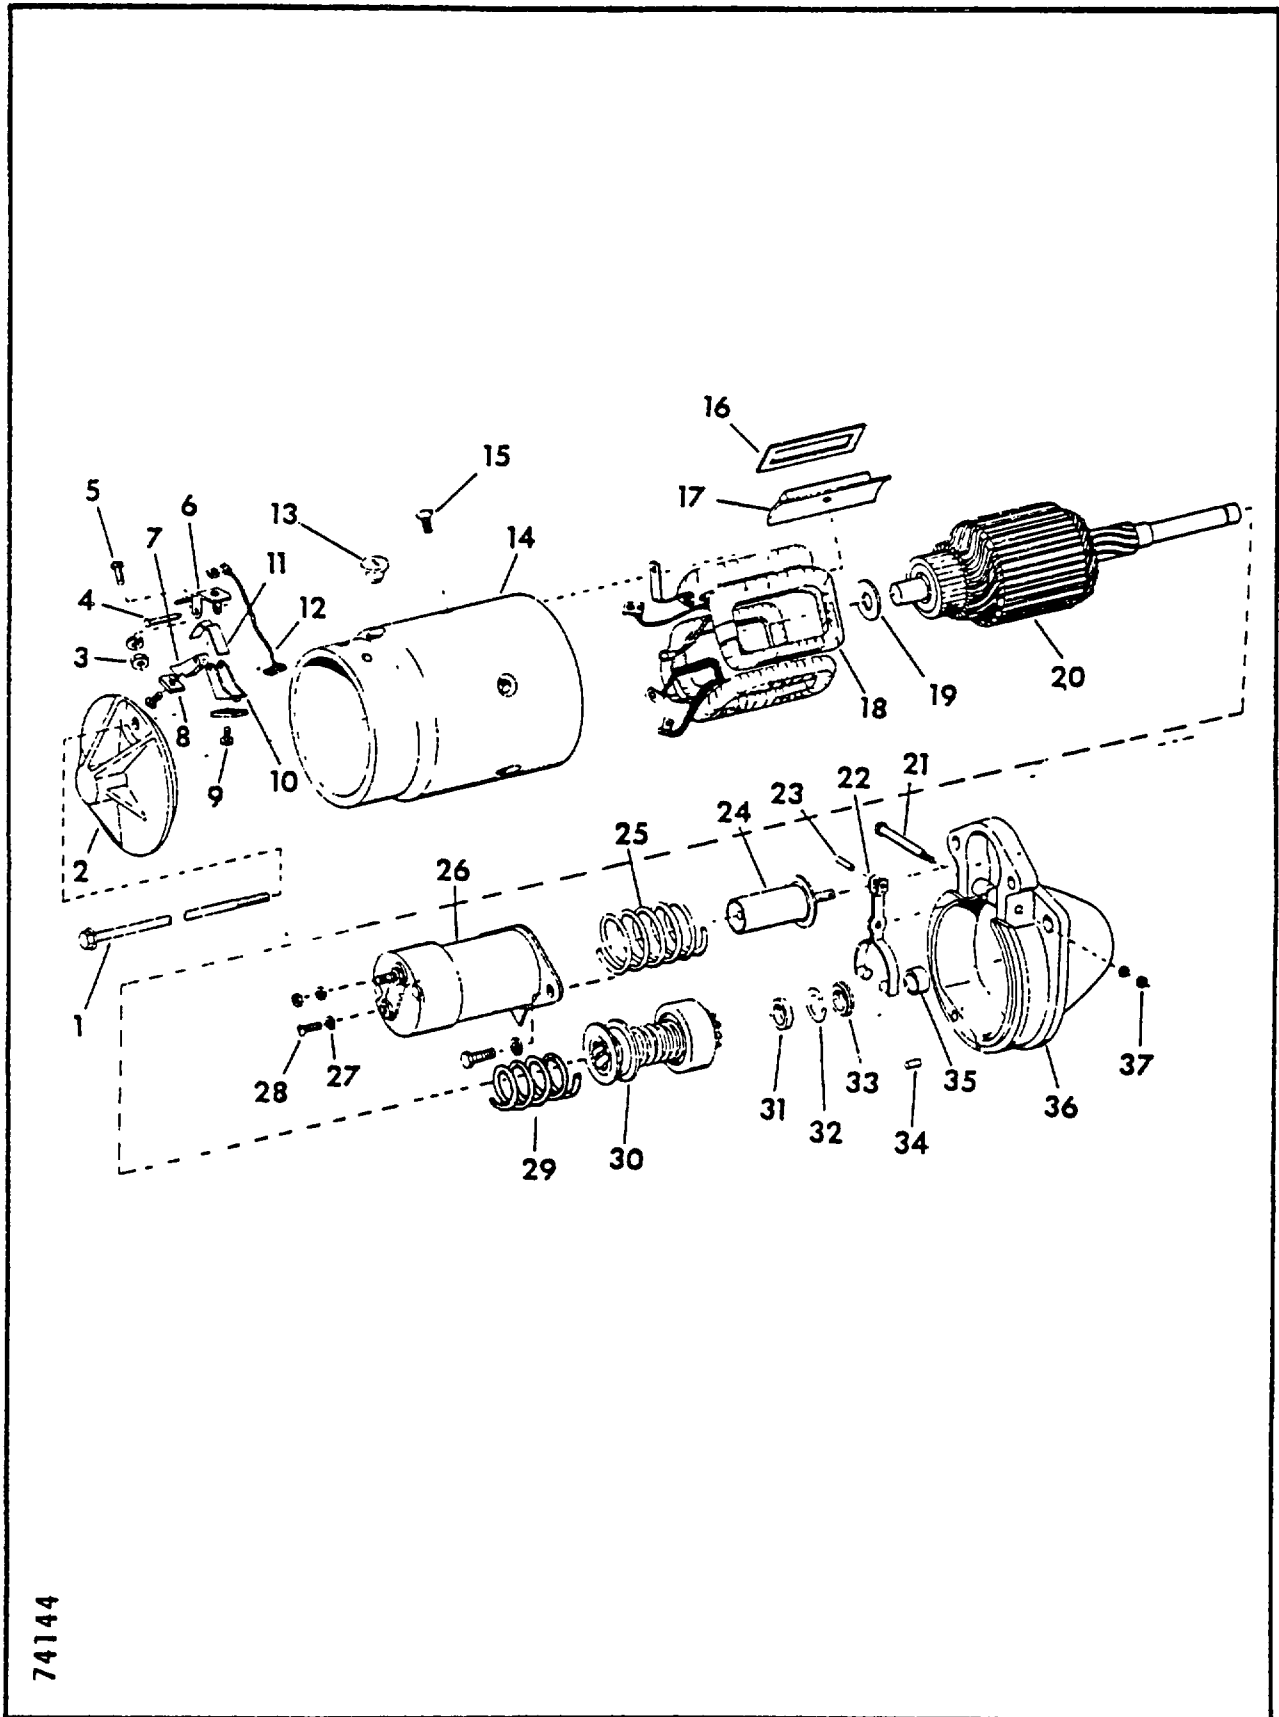

74144


STARTER ASSY-4876696-9

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4055881-0	BOLT - THRU	2	
2	4051275-8	FRAME-COMMUTATOR END	1	
3	0916621-6	NUT-SUPPORT ATTACHING SCREW-#10-24	4	4
	0917365-9	LOCKWASHER- #10	4	
4	0252042-7	PIN-SUPPORT ATTACHING	2	
5	0916080-5	SCREW-SUPPORT ATTACHING- #10 -24 X .5"	4	
6	4051281-6	SUPPORT-BRUSH HOLDER PACKAGE	2	INCL ITEMS 3-4-5-6
7	4051279-0	HOLDER-BRUSH-INSULATED	2	
8	4051276-6	BRUSH	4	
	0927150-3	SCREW-BRUSH ATTACHING- #8 -24 X .62"	2	
9	0927149-5	SCREW-BRUSH ATTACHING-GROUND #8 32 X .62"	2	
10	4055871-0	HOLDER-BRUSH GROUND	2	
11	4051277-4	SPRING-BRUSH	4	
12	4060192-4	LEAD-BRUSH GROUND	2	
13	0243841-4	GROMMET	1	IN FIELD FRAME
14	-----	FRAME- FIELD	1	ORDER 4876696-9
15	4054758-0	SCREW-POLE SHOE	4	
16	4051272-5	INSULATION	4	
17	4051269-1	SHOE-POLE	4	
18	4905637-1	COIL-FIELD	1	FOUR COILS
19	4042697-5	WASHER -BRAKE	1	
20	4908995-6	ARMATURE	1	
21	4997175-7	STUD-SHIFT LEVER	1	
22	4998851-7	LEER-SHIFT	1	
23	4998179-9	PIN-PLUNGER	1	TO SHIFT LEVER
24	0246077-2	PLUNGER	1	
25	4997176-5	SPRING-PLUNGER RETURN	1	
26	4912314-4	SWITCH-SOLENOID	1	
	0901225-1	SCREW- .25" -20 X .5"	2	
	0916964-0	LOCKWASHER- .25"	2	
27	090905b-6	LOCKWASHER- #10	1	
28	0923703-3	SCREW- #10 -32 X .5"	1	
29	4908996-4	SPRING-ASSY	1	
30	4936418-1	DRIVE ASSY	1	
31	4997180-6	COLLAR-PINION STOP	1	
32	4997181-5	RING-PINION STOP RETAINER	1	
33	4998849-6	WASHER-THRUST	1	
34	4042650-4	PIN	1	1
35	4044397-0	BUSHING	1	
36	4908997-2	HOUSING-DRIVE END	1	ORDER 4848888-6
37	0246098-8	NUT-PLATED-SHIFT LEVER STUD-.31"-18	1	
	0917356-8	LOCKWASHER- .31"	1	

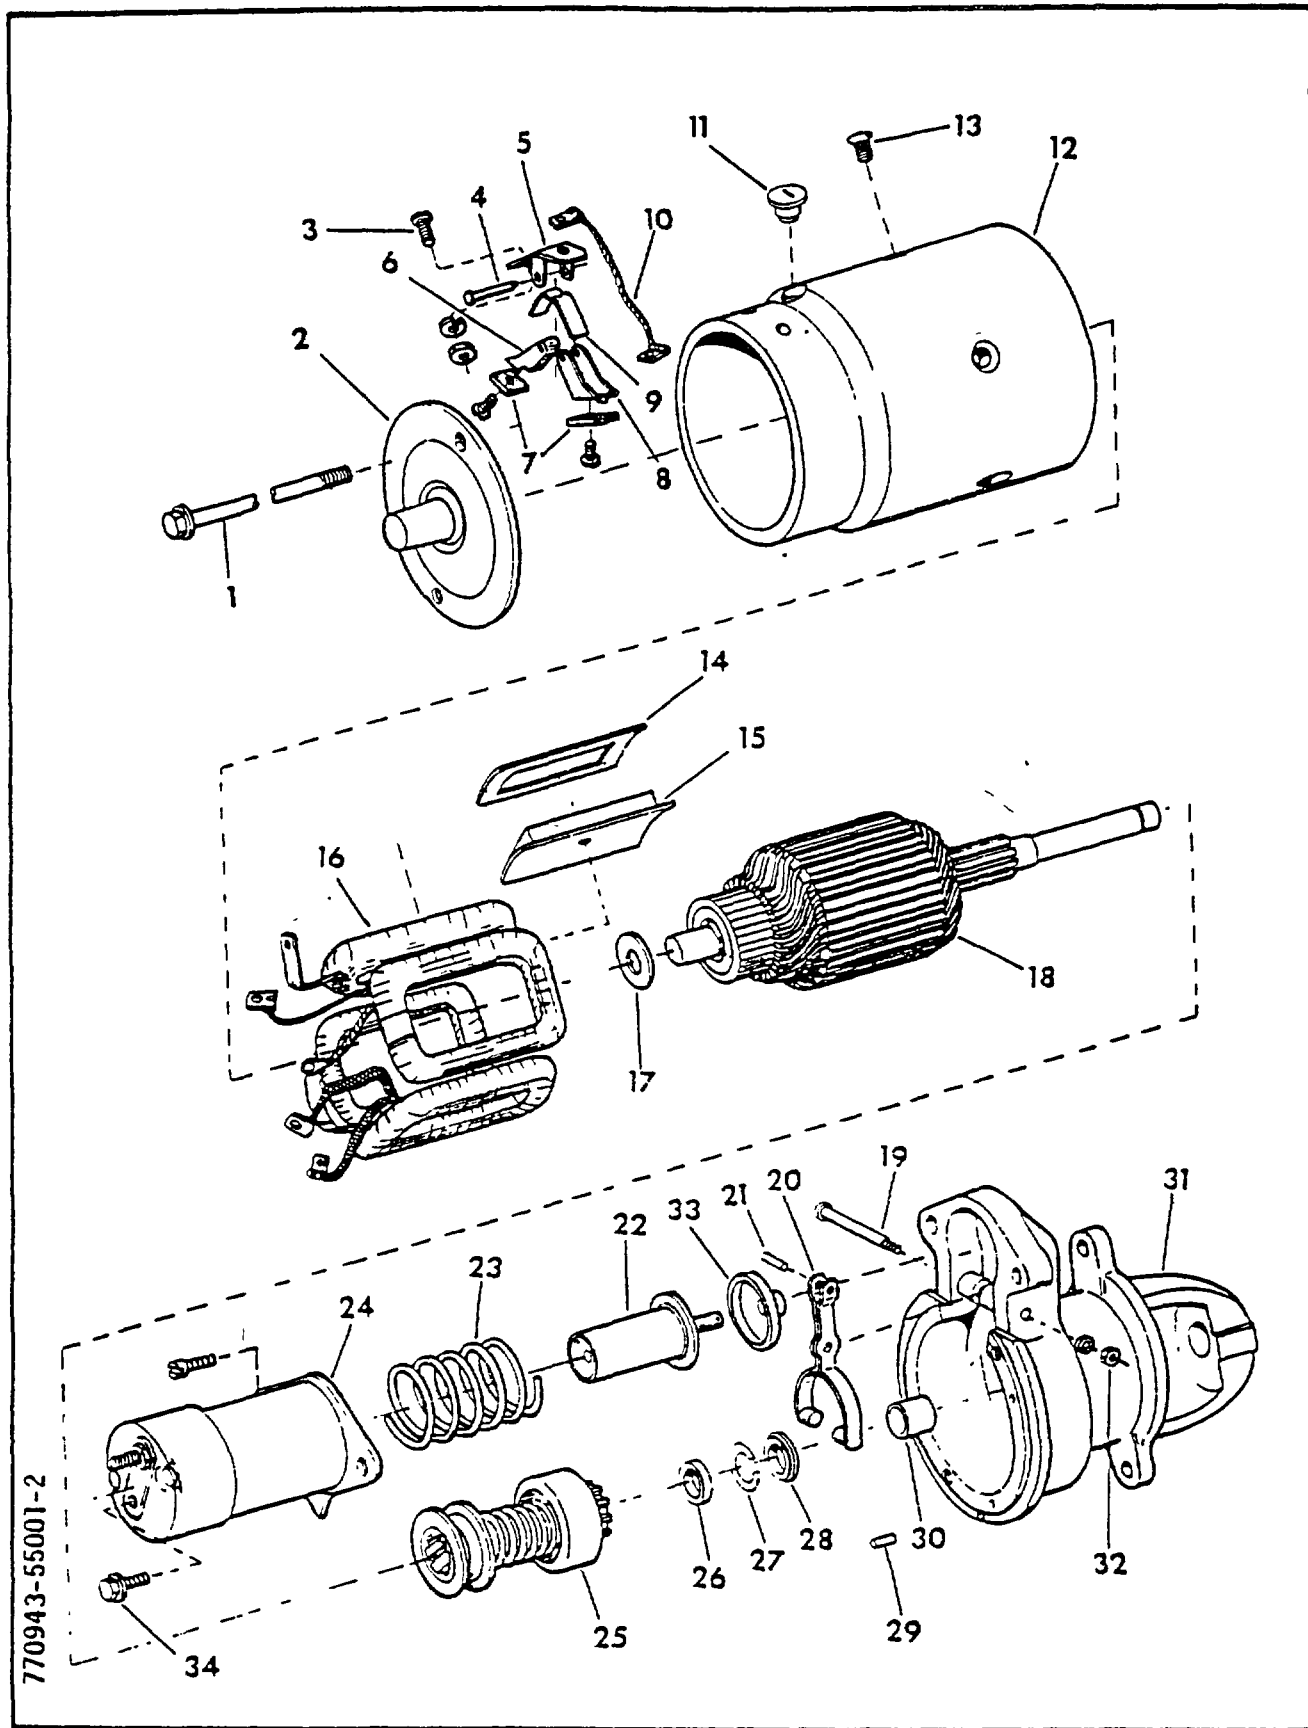

STARTER ASSY-4885883-1

ITEM	PART NO.	DESCRIPTION	QTY.	
1	0231321-1	BOLT-THRU	2	
2	4913371-3	FRAME-COMMUTATOR END	1	
3	0916080-5	SCREW-SUPPORT-#10-24 X .50"	4	
	0917365-9	LOCKWASHER-#10	4	
	0916621-6	NUT-#10-24 X .50"	4	
4	0252042-7	PIN-SUPPORT ATTACHING	2	
5	4051281-6	SUPPORT-BRUSH HOLDER PKG	1	INCL 3-4-10
6	4051279-0	HOLDER-BRUSH-INS	2	
	0927150-3	SCREW-#8-24 X .62"	2	
7	4051276-6	BRUSH	4	
8	4055871-0	HOLDER-BRUSH-GND	2	
	0927149-5	SCREW-#8-32- .62	2	
9	4051277-4	SPRING-BRUSH	4	
10	4060192-4	LEAD-BRUSH-GND	2	
11	4913376-2	GROMMET	1	IN FIELD FRAME
12	-----	FRAME-FIELD	1	ORDER 4885883-1
13	4054758-0	SCREW-POLE SHOE	4	
14	4051272-5	INSULATION-FIELD COIL	4	
15	4051269-1	SHOE-POLE	4	
16	4913372-1	COIL-FIELD	1	FOUR COILS
17	4042697-5	WASHER-BRAKE	1	
18	4908995-5	ARMATURE	1	
19	4997175-7	STUD-SHIFT LEVER	1	
20	4998851-2	LEVER-SHIFT	1	
21	4913304-4	PIN-PLUNGER	1	TO SHIFT, LEVER
22	0246077-2	PLUNGER	1	
23	4997176-5	SPRING-PLUNGER RETURN	1	
24	4912314-4	SWITCH-SOLENOID	1	
	0901228-7	SCREW-.25"-20 X .75"	2	
25	4906418-1	DRIVE ASSY	1	
26	4997180-7	COLLAR-PINION STOP	1	
27	4997181-5	RING-PINION STOP RETAINER	1	
28	0243855-4	WASHER-THRUST	1	
29	4042650-4	PIN-DOWEL	1	
30	4044397-0	BUSHING	1	
31	4908997-2	HOUSING-DRIVE END	1	
32	0246098-8	NUT-SHIFT LEVER STUD	1	
	0917356-8	LOCKWASHER-.31"	1	
33	4913373-9	BOOT-PLUNGER	1	
34	4997184-9	SCREW-FIELD LEAD TO SW	1	

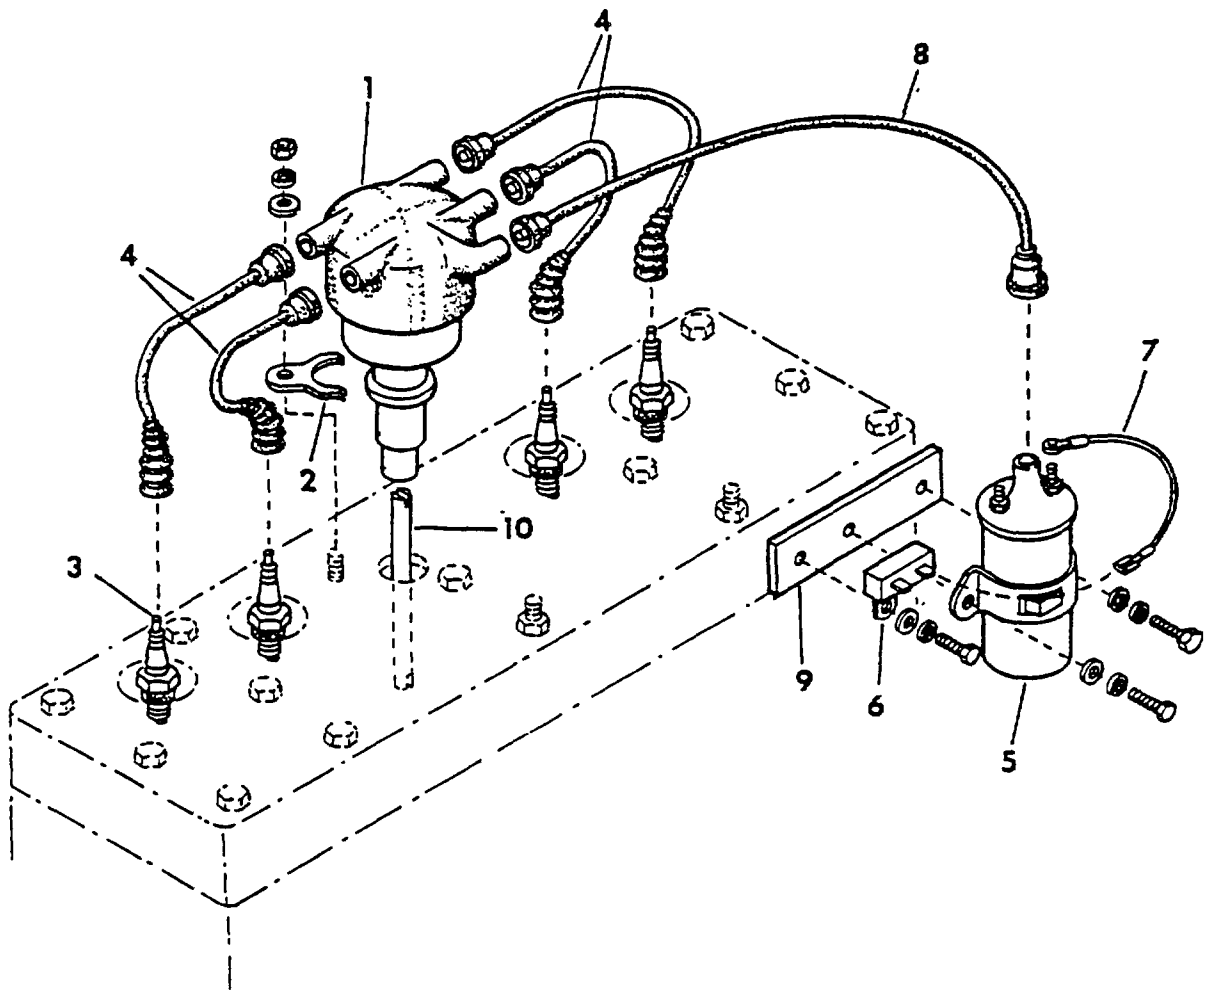



771083-770811-1-K

DISTRIBUTOR

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4857878-5	DISTRIBUTOR	1	SEE PAGE 57
2	4858103-7	CLAMP-ARM	1	
	0918266-8	WASHER- .41"	1	
	0916965-7	WASHER- .38"	1	
	0916950-9	NUT- .38" -16	1	
3	4910105-8	PLUG-SPARK	4	
4	4859424-6	WIRE-IGNITION	4	
5	4515665-0	COIL	1	GROUP B
	4889580-9	COIL	1	GROUP A
	0923325-5	CAPSCREW- .31" -18 X .75"	2	
	0919326-9	WASHER-PLAIN- .34"	2	
	0917356-8	LOCKWASHER- .31"	2	
6	4855690-6	RESISTOR	1	
	4867125-9	SLEEVE-INSULATING	2	
7	4833505-3	WIRE ASSY	1	
8	4859423-8	WIRE-IGNITION	1	
9	4858680-4	BRACKET	1	
	0929489-3	CAPSCREW	1	
	0917356-8	LOCKWASHER	1	
	0917326-1	WASHER-PLAIN- .34"	1	
10	4909828-8	SHAFT-DISTRIBUTOR DRIVE	1	

780226-750244-2

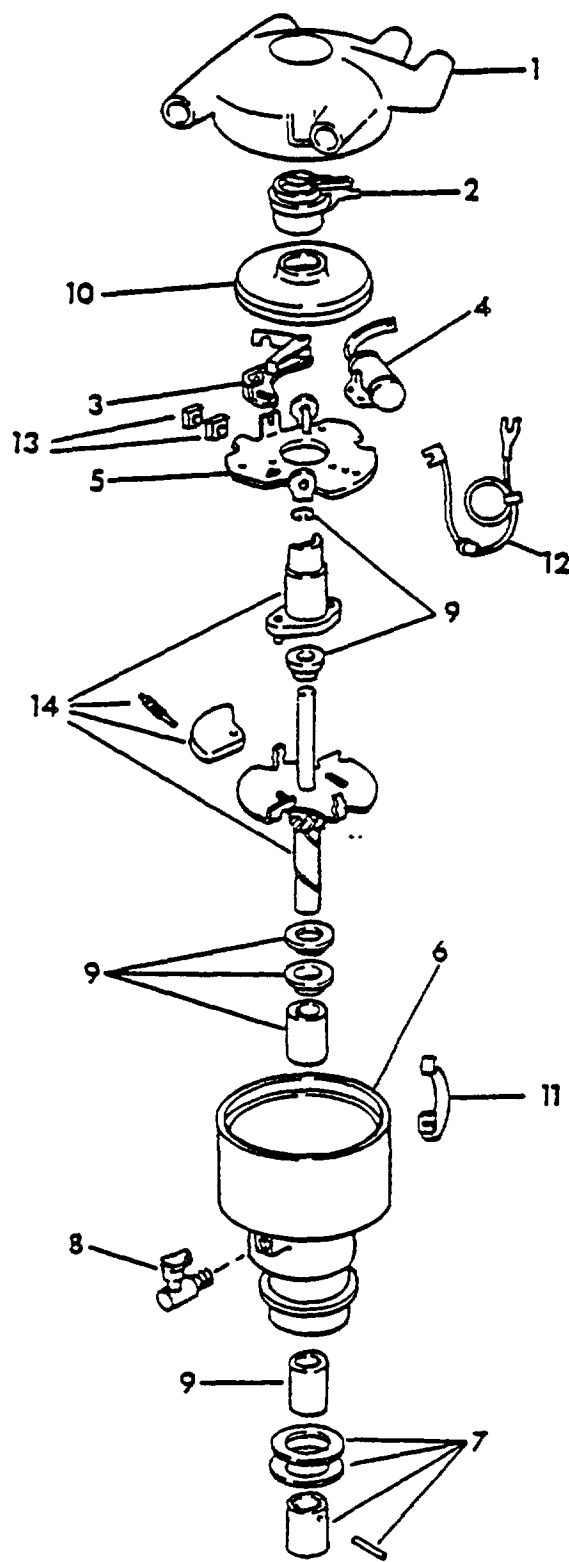

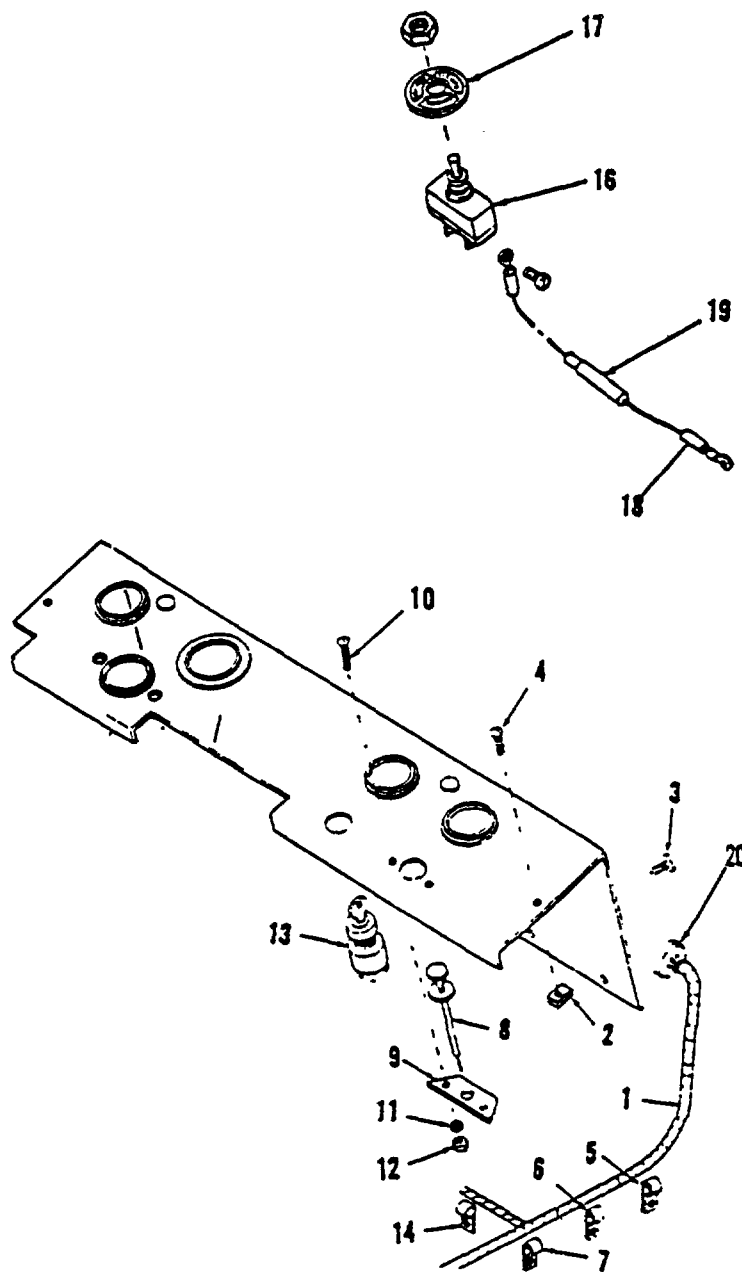

71408

DISTRIBUTOR ASSY-4857878-5


ITEM	PART NO.	DESCRIPTION	QTY.
1	4909102-8	CAP	1
2	4909103-6	* ROTOR	1
3	4909100-2	* CONTACT SET	1
4	4909101-0	* CONDENSER	1
5	4909104-4	PLATE ASSY-BREAKER	1
6	-----	HOUSING	1
7	4909110-1	COUPLING PKG	1
8	4909113-5	FITTING-LUBE-90°	1
9	4913140-2	BEARING PKG	1
10	4909112-7	PLATE ASSY-SEAL	1
11	4909114-3	HINGE PKG-CLAMP	1
12	4909105-1	LEAD-PRIMARY	1
13	4913284-8	CLIP & INSULATOR PKG	1
14	4913252-5	SHAFT-GOV & CAM ASSY	1

INCL ITEMS 3 & 4
ORDER DIST. ASSY

* INCL IN KIT 4910178-5


INSTRUMENT PANEL & CONNECTIONS

ITEM	PART NO.	DESCRIPTION	QTY.	
	-----	PANEL ASSEMBLY-INSTRUMENT	1	
1	4868271-0	HARNESS-FRAME	1	INCL ITEM 20
2	0921355-4	NUT-SPEED- .31"-18	2	
3	0926765-9	SCREW	4	
4	0920787-9	CAPSCREW - .31"-18 X .5"	2	
5	4767130-0	CLAMP-HORN BRACKET & CORNER POST	2	
6	4767130-0	CLAMP-FRAME	2	
7	4767130-0	CLAMP-COIL BRACKET	1	
8	4863737-5	CONTROL-CHOKE	1	
9	4766588-0	ADAPTOR	1	
10	0920572-5	SCREW-#10-24 X .5"	2	
11	0917365-9	LOCKWASHER-#10	2	
12	0916621-6	NUT-#10-24	2	
13	4848483-6	SWITCH-IGNITION	1	
14	4507415-0	CLAMP	2	NOT ILLUSTRATED
15	4819491-4	GAUGE-TRANSMISSION TEMPERATURE	1	
16	4724733-3	SWITCH-LIGHT	1	
17	4727352-9	PLATE-SWITCH	1	
18	4724728-3	CABLE W/FUSE HOLDER	1	
19	4757912-3	FUSE	1	
	0916964-0	LOCKWASHER	4	
	0916622-4	NUT	4	
	0925205-7	CAPSCREW- .31-18 X .62	2	
	0917356-8	LOCKWASHER	2	
	4859816-3	PLATE SWITCH	1	
	0918906-9	LOCKWASHER-IT-.625"	2	
	0925205-7	CAPSCREW-.31" -18 X .62"	2	
	0917356-8	LOCKWASHER-.31"	2	
	0917372-5	NUT-.31" -18	2	
	0915898-1	LOCKWASHER - SPECIAL	6	
20	0931576-3	CONNECTOR	1	

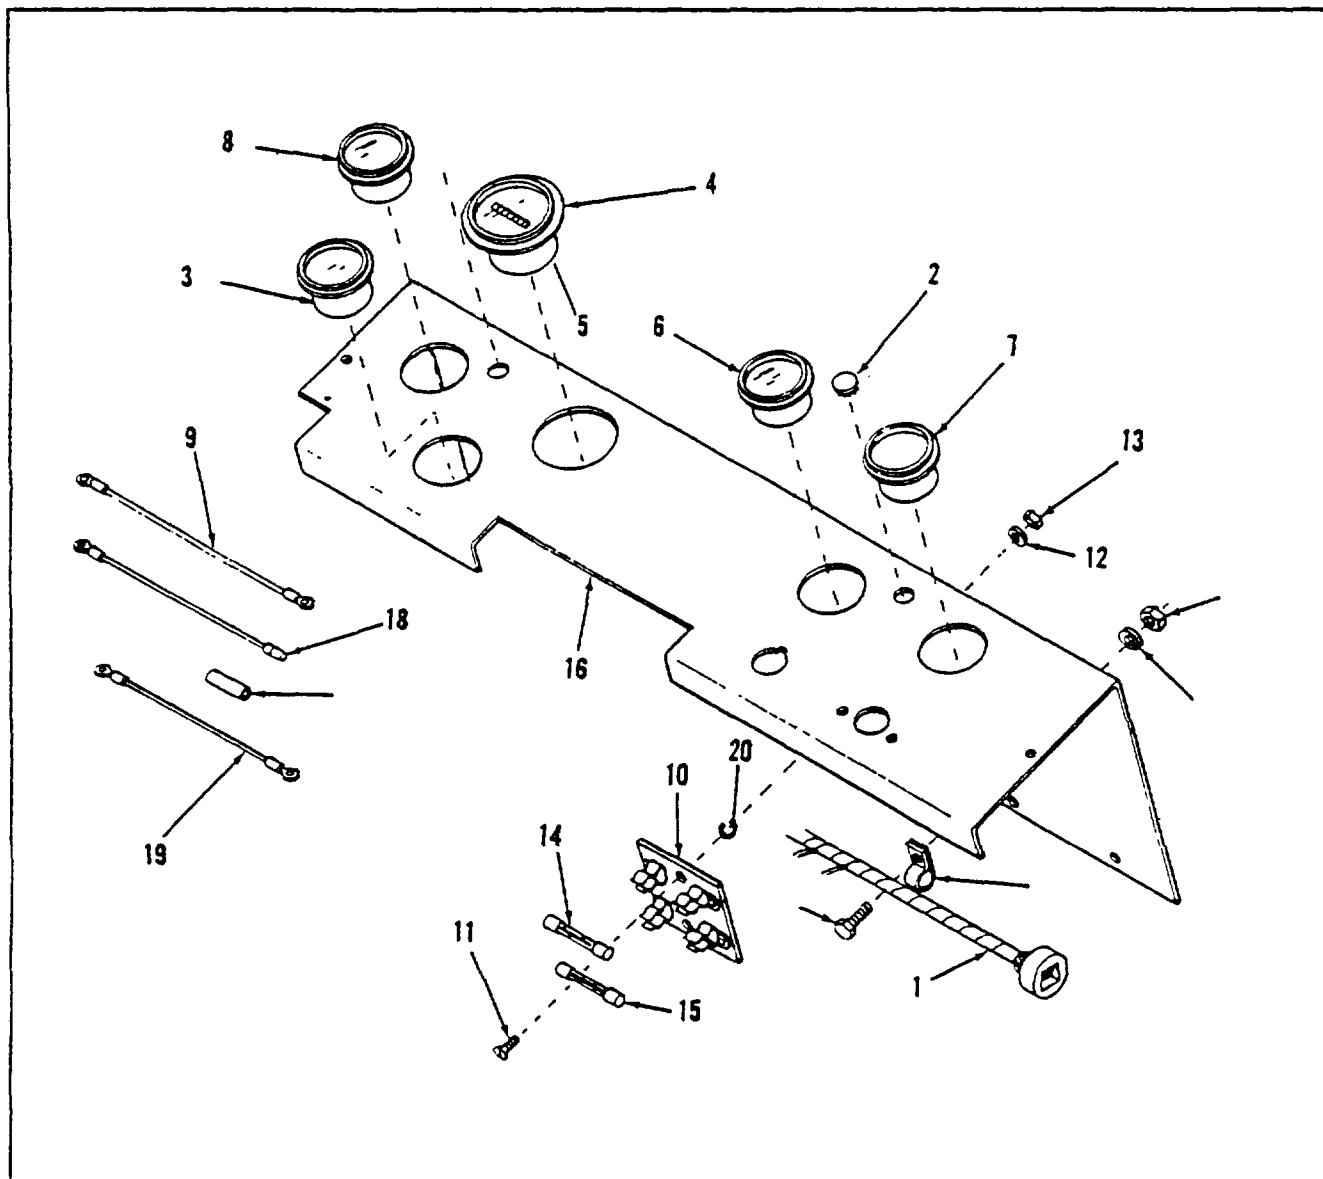


INSTRUMENT PANEL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4878471-4	HARNESS - PANEL	1	INCL CONNECTOR
	0931575-5	CONNECTOR	1	
2		NOT USED		
3	4818262-0	GAUGE - ENGINE TEMP	1	
4	4867466-7	HOURMETER	1	
5	4408658-5	TERMINAL	1	
6	4818260-4	GAUGE - OIL PRESSURE	1	
7	4818263-8	AMMETER	1	
8	4818261-2	GAUGE - FUEL	1	
9	4878473-0	WIRE ASSY	1	
10	4708362-1	HOLDER - FUSE	1	
11	0923861-9	SCREW	2	
12	0917459-0	LOCKWASHER	2	
13	0917479-8	NUT	2	
14	4705279-0	FUSE -10 AMP	1	
15	4705279-0	FUSE -10 AMP	1	
16	4878470-6	PANEL - INSTRUMENT	1	
	4832538-5	BRACKET	1	
18	4798797-9	WIRE ASSY	1	
19	4830537-9	WIRE ASSY	1	
	4878474-8	WIRE ASSY	1	
20	4860448-2	WASHER - INSULATING	2	
	4876533-3	RELAY - STARTER	1	
	0918155-3	CAPSCREW	2	
	0909367-5	LOCKWASHER	2	
	0916622-4	NUT	2	
	4365450-8	SWITCH - HOURMETER	1	
	4787707-1	WIRE ASSY - GROUND	1	
	0918960-6	TEE - PIPE	1	

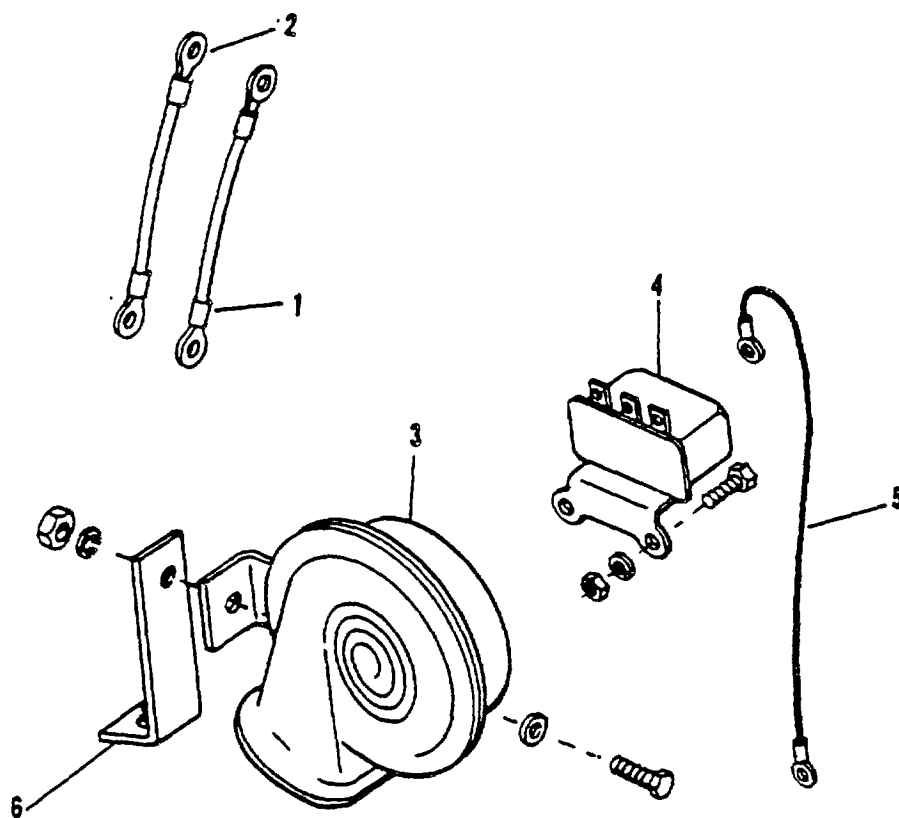


HORN GROUP

ITEM	PART NO.	DESCRIPTION	QTY.
1		NOT USED	
2		NOT USED	
3	4830173-3	HORN	1
	0921333-1	CAPSCREW	1
	0917356-8	LOCKWASHER	1
	0917372-5	NUT	1
4	4721573-6	RELAY	1
	0923341-2	CAPSCREW	1
	0916964-0	LOCKWASHER	1
	0916622-4	NUT	1
5	4775899-0	WIRE ASSY	1

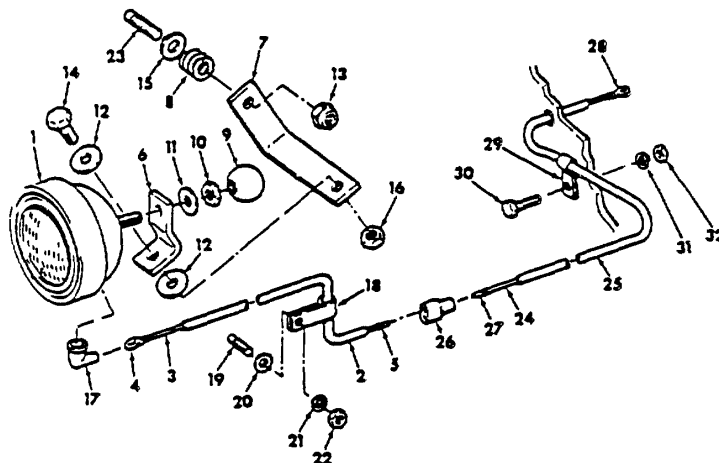


HEADLIGHT & CONNECTIONS
 NOTE: FOR DUAL HEADLIGHTS, DOUBLE QUANTITIES

ITEM	PART NO.	DESCRIPTION	QTY.	
R1	4775866/9	HEADLAMP ASSY	1	INCL ITEM 33
2	4715037-0	LOOM - FLEXIBLE	1	
3	4715032/1	WIRE-16 GA. -96"	1	BLACK
4	4254846/1	TERMINAL	1	
5	4724667/3	TERMINAL - TIP	1	
6	4775868/5	BRACKET	1	
7	4775869/3	BRACKET	1	
8	4781446/2	SPRING	1	
9	4775867/7	KNOB	1	
10	0913744/9	NUT-JAM - .5"-13	1	
11	0918431/8	WASHER-.5"	1	
12	0901043/0	WASHER-BRASS-.53"	2	
13	4254976/6	NUT-LOCK	1	
14	0923092-1	CAPSCREW-.5"-13 X 1.12"	1	
15	0927326/9	WASHER-.78"	1	
16	4254976/6	NUT-LOCK	1	
17	4757678/0	BOOT-RUBBER	1	
18	4254481/7	CLAMP	4	ON MAST
19	4255195/2	STUD	4	WELDED TO MAST
20	0923912-3	WASHER	8	
21	0917356/8	LOCKWASHER-.31"	4	
22	0920161/7	NUT-JAM-.31"-18	4	
23	4255431/1	STUD	1	WELDED TO MAST
24	4715027/1	WIRE-16 GA-30"	1	BLACK
25	-----	LOOM-FLEXIBLE-.25" X 34"	1	
26	4724666/5	CONNECTOR-WIRE	1	
27	4724667/3	TERMINAL-TIP	1	
28	4254846/1	TERMINAL	1	
29	4251645/0	CLIP	1	
30	0921210-0	CAPSCREW-.38"-16 X 1"	1	
31	0916965/7	LOCKWASHER-.38"	1	
32	0916950/9	NUT-.38"-16	1	
	4255355-2	TIE-CABLE	2	
R33	4905822-5	LAMP-SEALED BEAM-#4411	1	NOT ILLUSTRATED

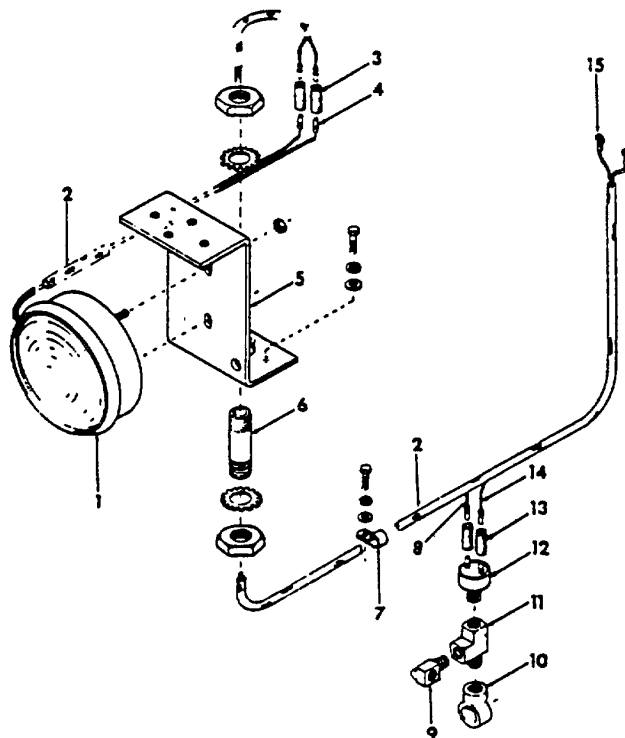

STOP & TAIL LIGHT


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4770449-9	LAMP-STOP & TAIL	1	INCL LAMP
	0928348-2	LAMP (12V)	1	
2	4715037-0	LOOM	2	
3	4736044-1	CONNECTOR-2WIRE	2	
4	4724667-3	TERMINAL TIP	4	
5	4816384-4	BRACKET	1	
	0903625-2	CAPSCREW-1/4"NC X 3/4"	2	
	0920380-3	WASHER-PLATED-1/4" X 7/8"	2	
	0904204-5	LOCKWASHER-1/4"	2	
6	0901502-5	NIPPLE-PIPE	1	
	0913107-9	LOCKWASHER-EXTERNAL 7/8"	2	
	0920321-7	NUT-LOCK 1/2"	2	
7	4251645-0	CLAMP	7	
	0903626-0	CAPSCREW-.31-18 X .75	1	
	0911421-6	WASHER	1	
8	4715026-3	WIRE-144"-14 GAUGE	1	
9		NOT USED		
10	4735947-6	FITTING	1	
11		NOT USED		
12	4726629-1	SWITCH-STOP LIGHT	1	
13	4702247-0	CONNECTOR	2	
14	4798027-1	WIRE-29"-16 GAUGE	1	
15	4715028-9	WIRE-180"-14 GAUGE	1	
16	0901504-1	NIPPLE	1	NOT ILLUSTRATED
	4702247-0	TERMINAL	4	
	4734887-5	SLEEVE	1	

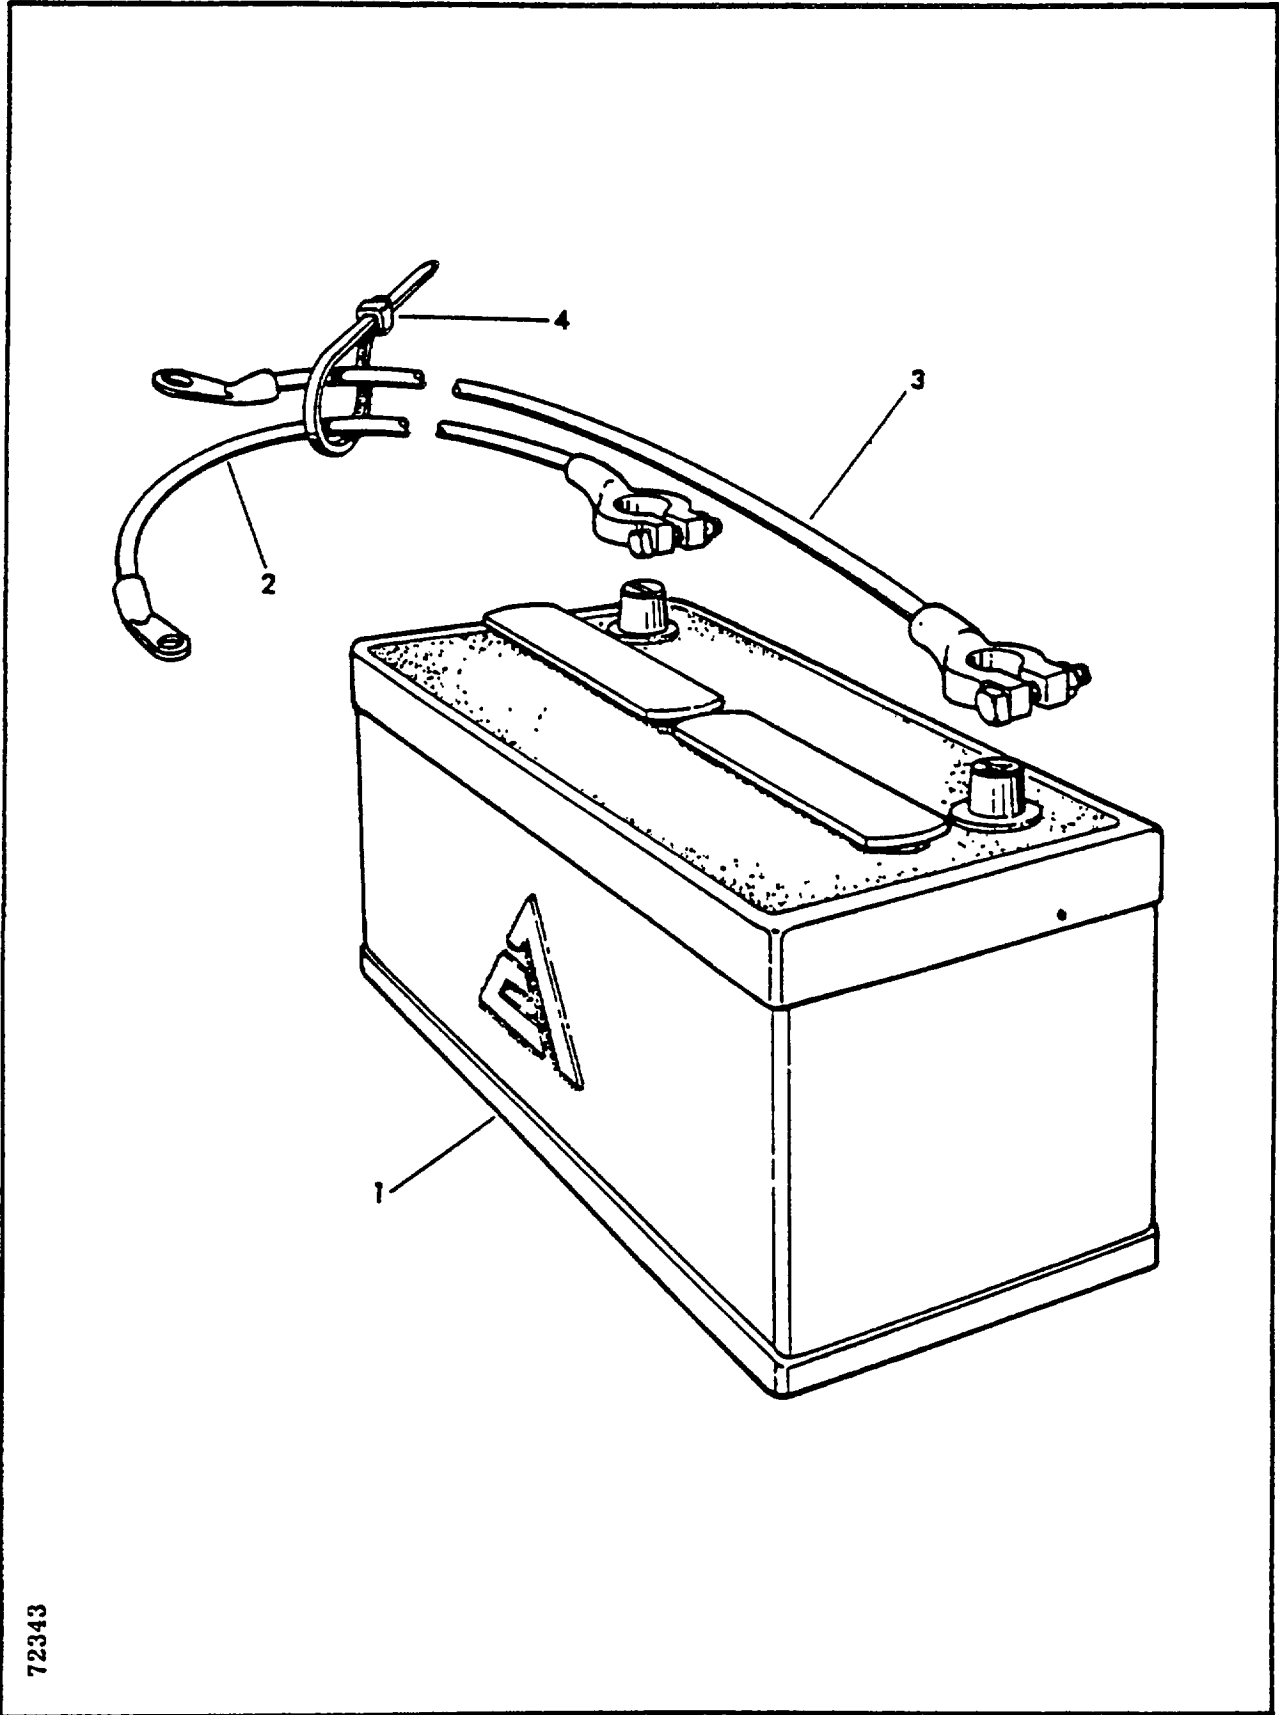

72343

BATTERY


ITEM	PART NO.	DESCRIPTION	QTY.	
1	0243472-8	BATTERY	1	DRY
2	4801298-3	CABLE-BATTERY	1	NEGATIVE
3	4758875-1	CABLE-BATTERY	1	POSITIVE
4	4810232-1	CLAMP	1	
	0920787-9	CAPSCREW	1	
	0917356-8	LOCKWASHER	1	
	0917372-5	NUT	1	

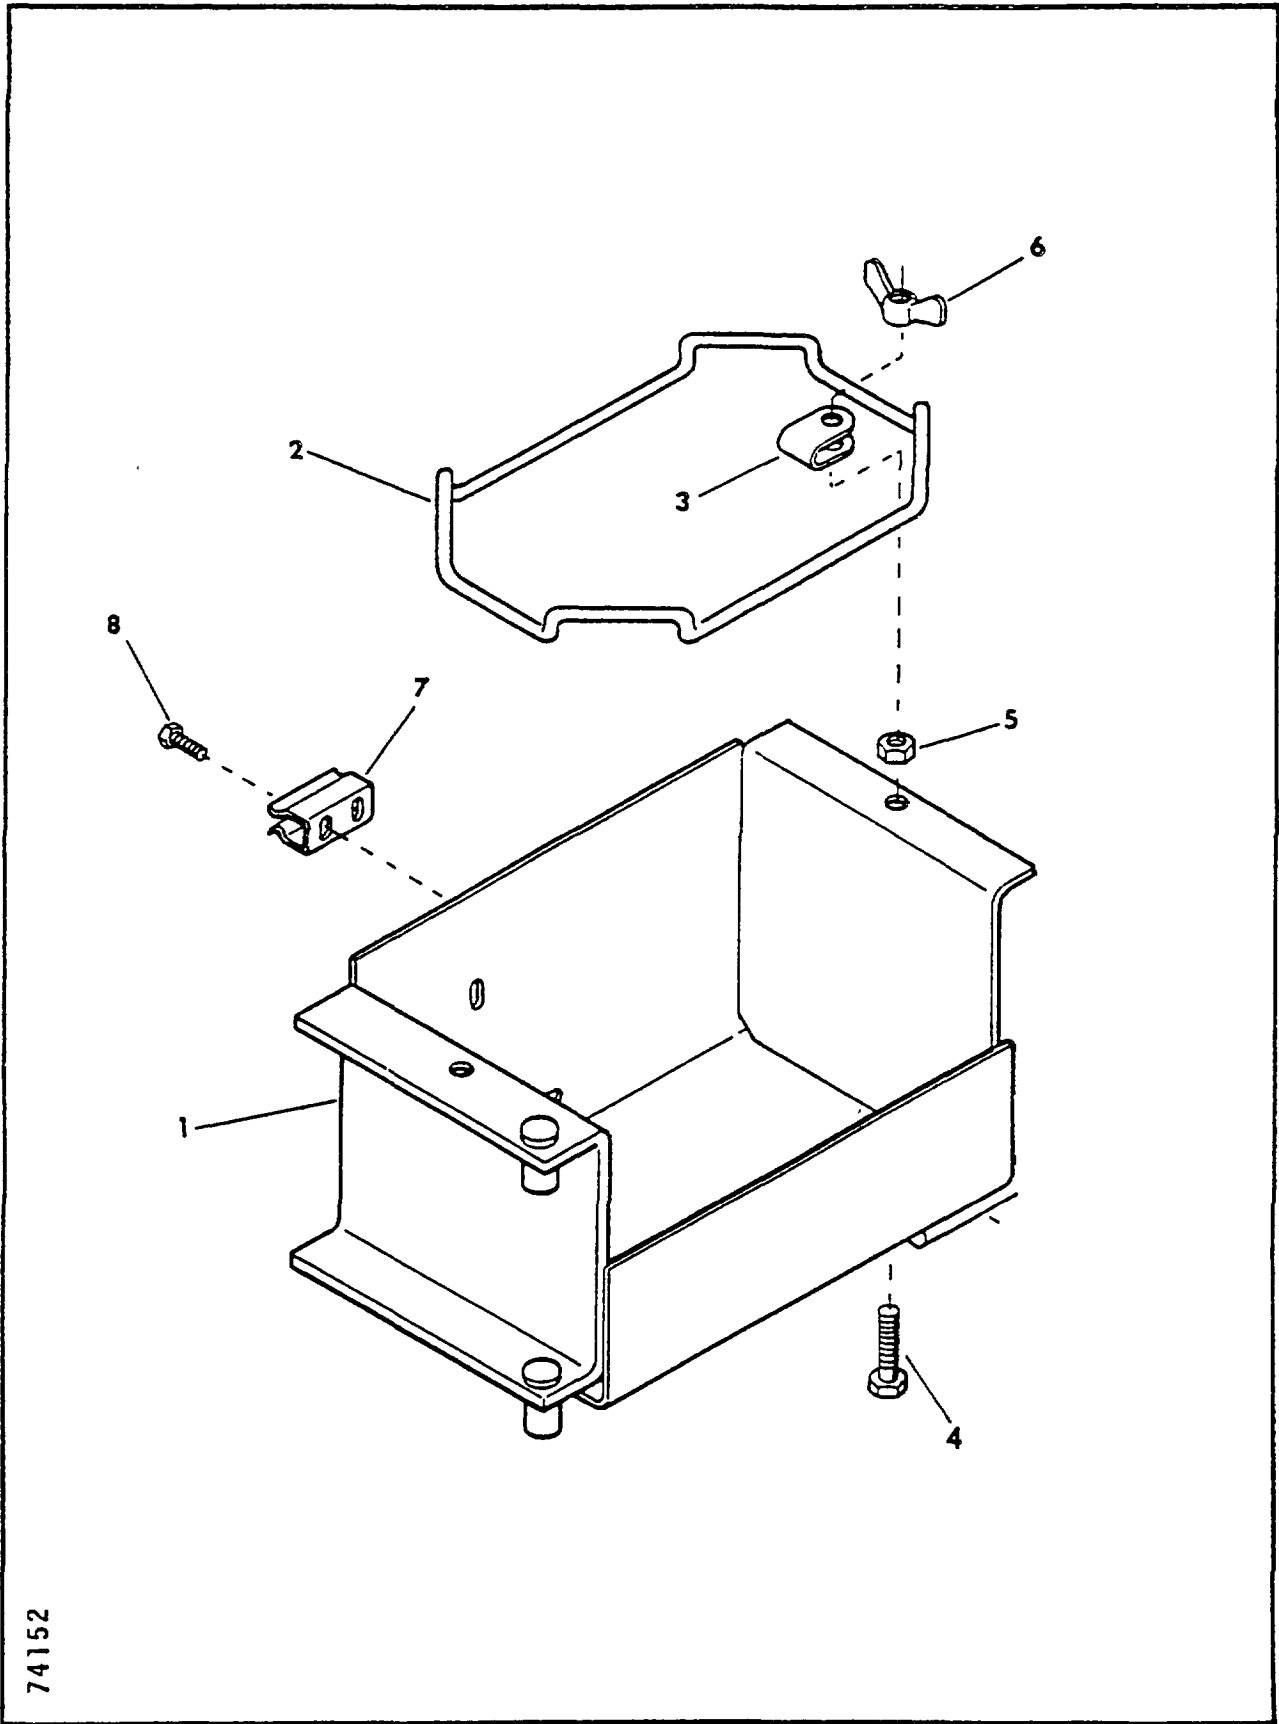

74152

BATTERY TRAY


ITEM	PART NO.	DESCRIPTION	QTY.
1	4860679-2	TRAY ASSY	1
2	4771179-1	HOLDDOWN	1
3	4771148-6	CLIP	2
4	0928221-1	CAPSCREW-.31" -18 X 2.25"	2
5	0920161-7	NUT-JAM-.31" -18	2
6	0918468-0	NUT-WING-.31" -18	2
7		NOT USED	
8		NOT USED	

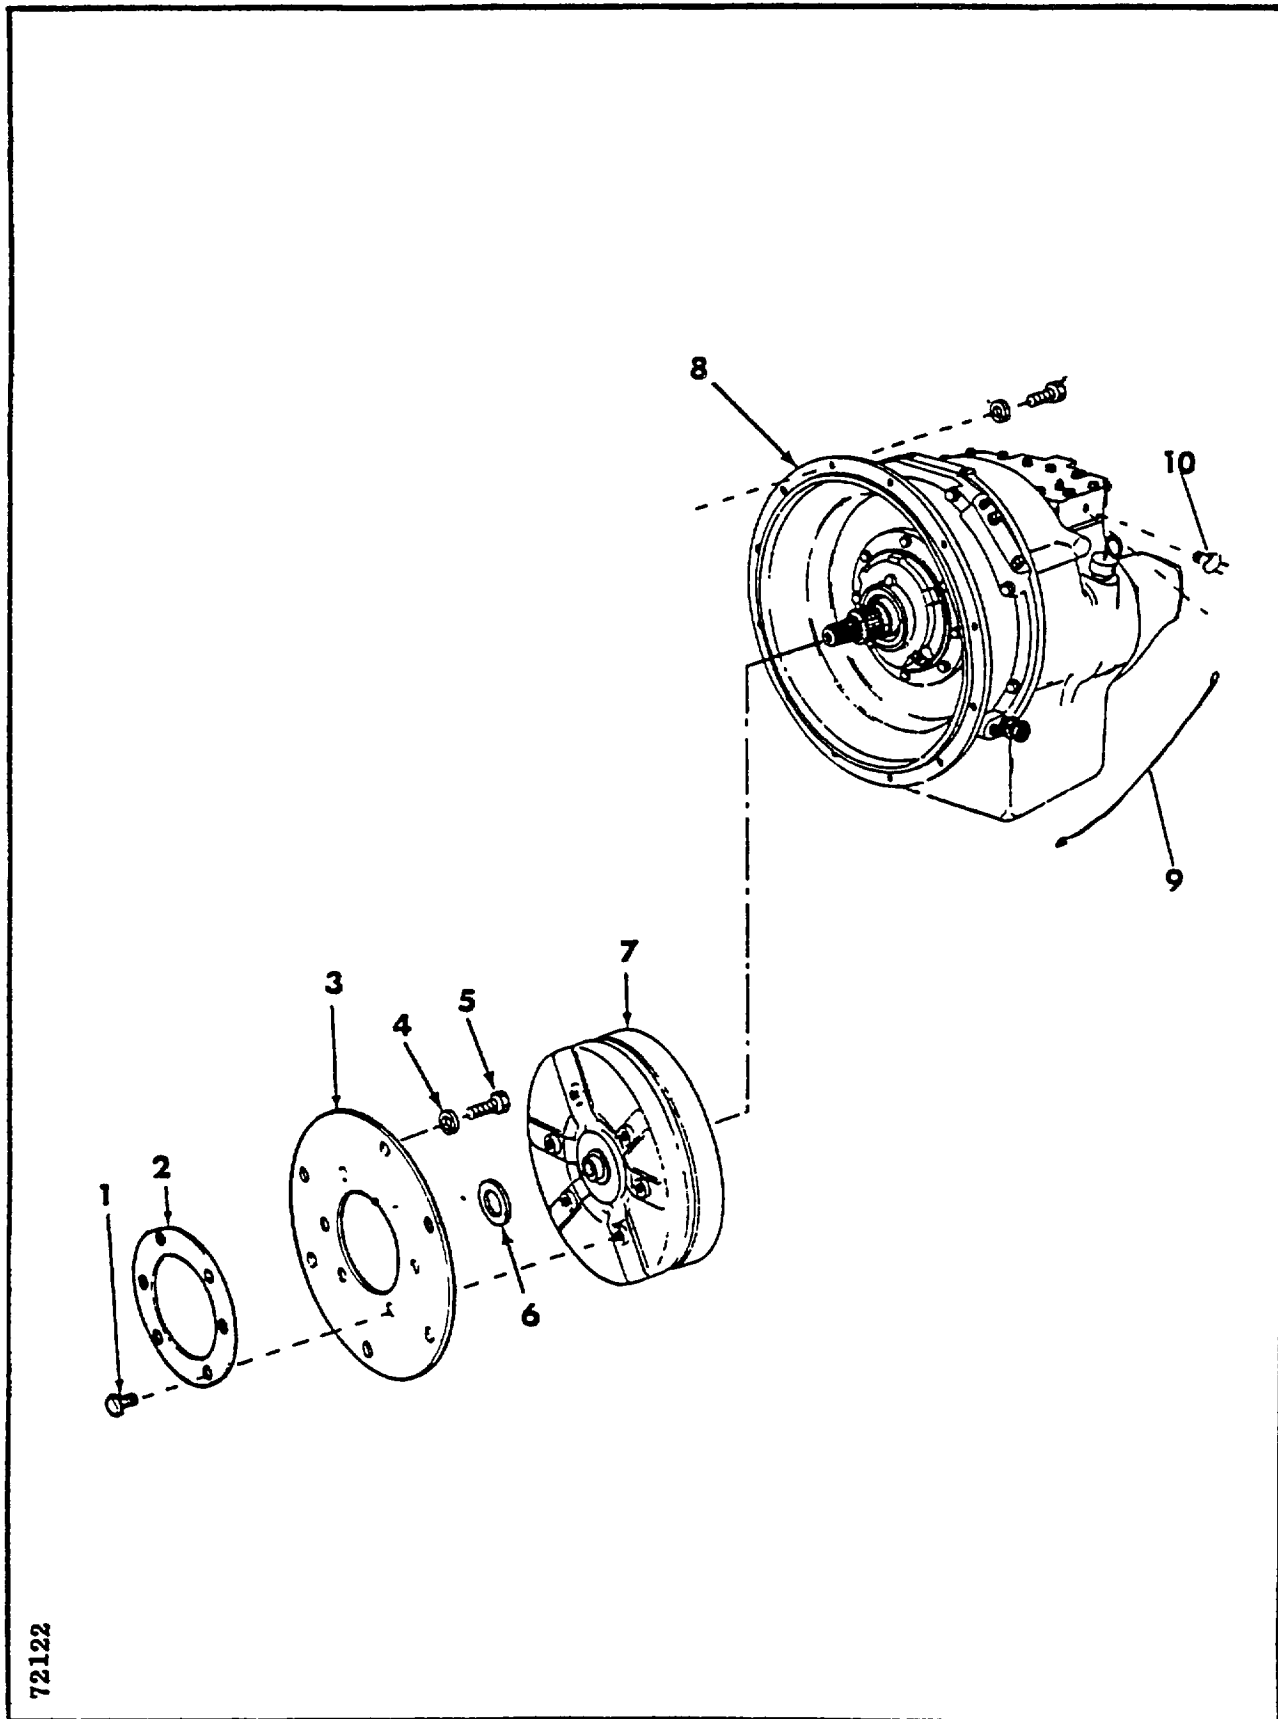

72122

TRANSMISSION - POWER SHIFT


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4752002-8	BOLT-PLATE TO CONVERTER	6	
2	4755381-3	PLATE-REINFORCING	1	
3	4761032-4	PLATE-DRIVE	1	
4	4755380-5	LOCKWASHER	6	
5	4254864-4	BOLT	6	
6	4843026-8	SHIM	*	*USE AS REQUIRED
7	4859284-5	CONVERTER-TORQUE	1	
8	4874437-9	TRANSMISSION	1	SEE PAGE 73
	0921210-1	CAPSCREW-.38" -16 X 1"	12	
	0920427-2	LOCKWASHER- .38"	12	
9	4751032-6	WIRE	2	
10	4909868/4	SWITCH START	1	

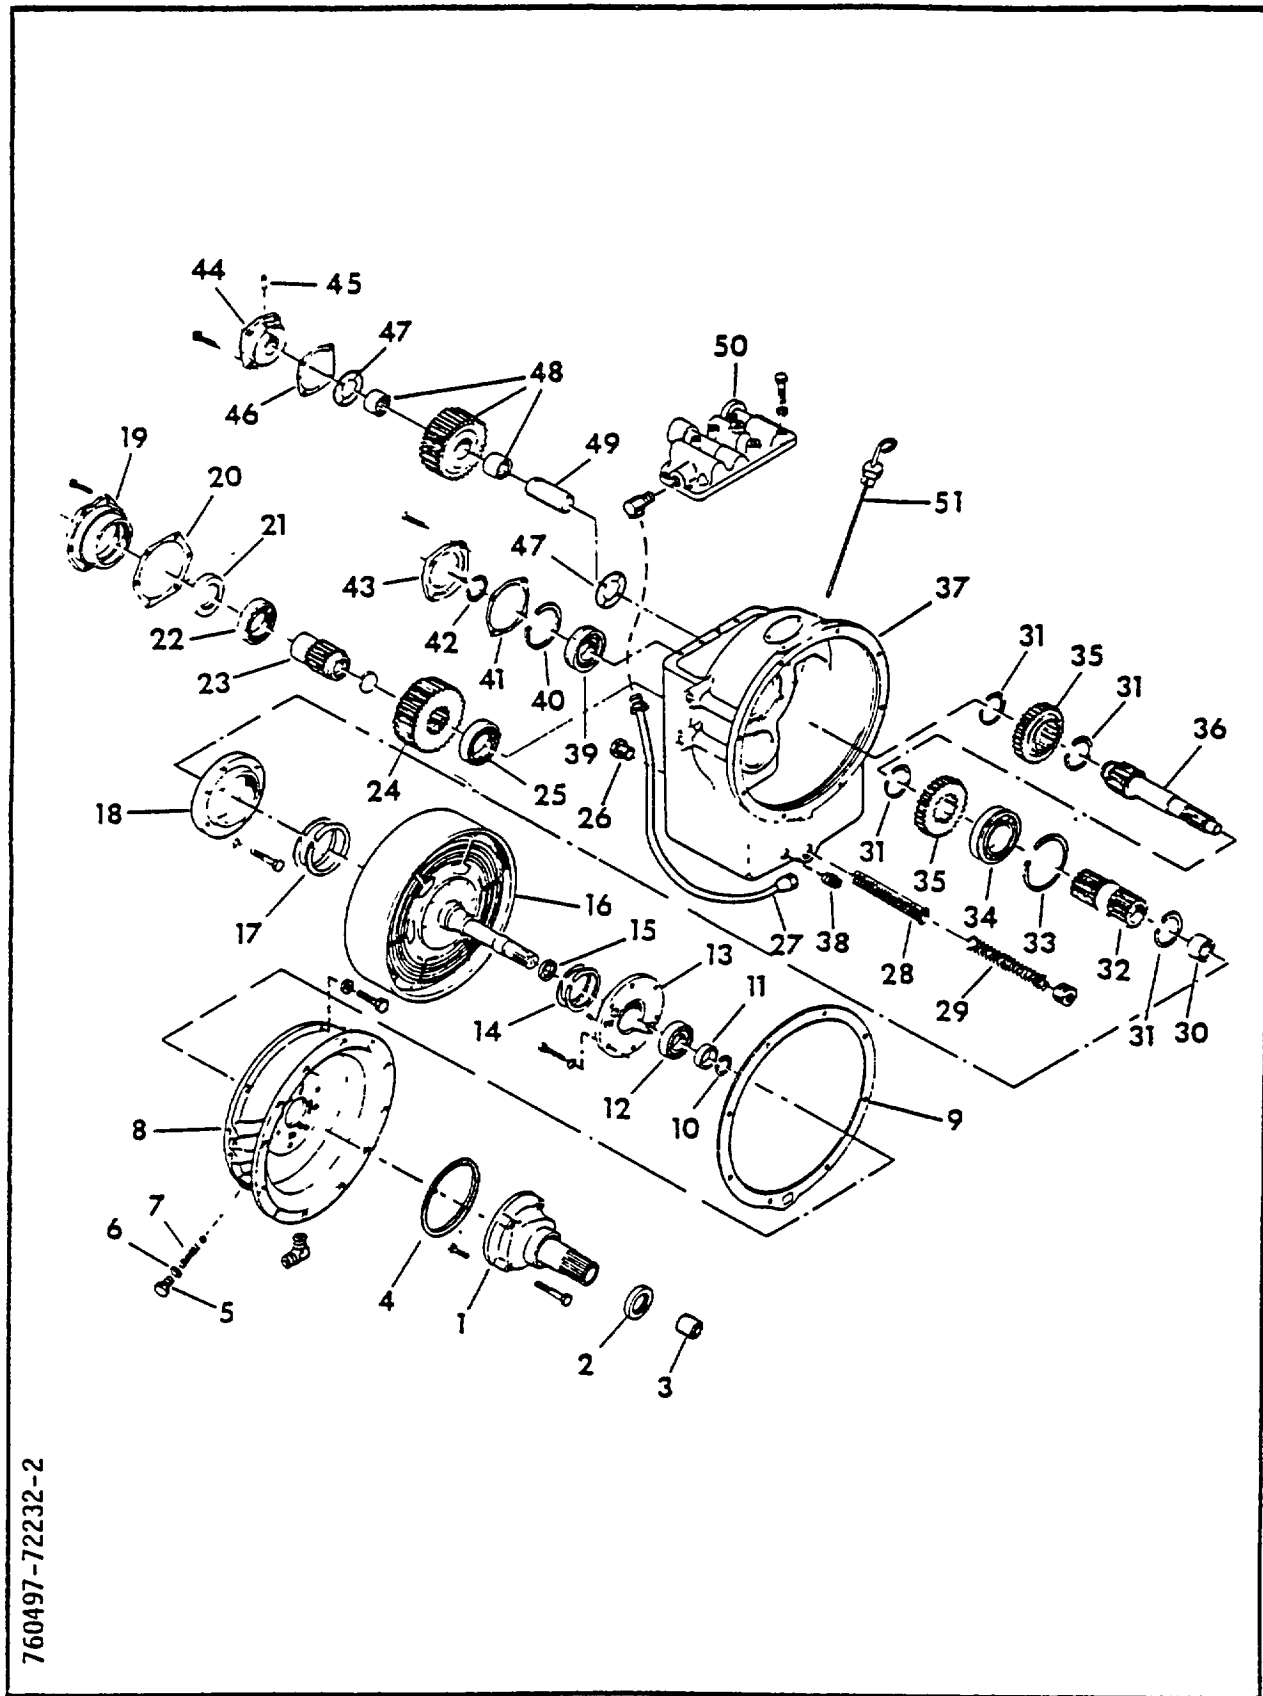

760497-72232-2

TRANSMISSION ASSY-4874437-9

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4907656-5	PUMP ASSY	1	INCL ITEMS 2-3
	0929543-7	SCREW-.25"-20 X 1.00"	1	
	0923124-2	CAPSCREW-.31"-18 X 2.00"	4	GR 8
	0927023-2	* SEAL-OIL	1	
3	4912255-9	BUSHING-SUPPORT	1	
4	4905789-6	GASKET-PUMP	1	
5	4991740-7	SEAT-SPRING	1	
6	4991741-2	WASHER-SPRING SEAT	1	
7	4906409-0	SPRING-POP VALVE	1	
	0917146-3	BALL-CHROME STEEL-.44"	1	
8	4909316-4	HOUSING-CONVERTER	1	
	0919134-7	PLUG-PIPE-.13"	3	
	0920131-0	PLUG-PIPE-.38"	1	
	0919224-6	CAPSCREW-.38"-16 X 1.13"	5	
	0921971-8	CAPSCREW-.38"-16 X 1.75"	3	
	0919312-9	LOCKWASHER-.38"	8	
9	4909118-4	* GASKET-TRANS CASE	1	
10	4905790-4	RING-SNAP	1	
11	4905792-0	SPACER-BEARING	1	
12	0067766-6	BEARING	1	
13	4905793-8	RETAINER & PLUG ASSY	1	
	0921333-1	CAPSCREW-.31"-18 X 1.00"	6	
	0917356-8	LOCKWASHER-.31"	6	
14	4987600-6	* RING-SEALING	2	
15	4907588-8	* RING-SEALING	1	
16	4912238-5	CLUTCH ASSY-FWD & REV	1	SEE PAGE 79
17	4995592-5	* RING-SEALING	2	
18	4995595-8	RETAINER-BEARING	1	
	0928075-1	CAPSCREW-.31"-18 X 1.25"	5	INCL LKW
19	987585-9	RETAINER-BEARING	1	OUTPUT SHAFT
	0926671-9	CAPSCREW-.31"-18 X .88"	6	NYLON COAT
20	4987586-7	* GASKET-BEARING RETAINER	1	
21	4254667-1	* SEAL-OIL	1	
22	4254658-0	BEARING-BALL	1	
23	1002933-3	SHAFT-OUTPUT	1	INCL EXP PLUG
	0910007-4	PLUG-EXPANSION-1.38"	1	
24	4987584-4	GEAR-COUNTERSHAFT	1	
25	4254658-0	BEARING-BALL	1	
26	4912350-8	PLUG-DRAIN	1	INCL GASKET
27	4909917-9	TUBE ASSY	1	VALVE TO CONV
	0917496-2	ELBOW-45°-.38"	1	VALVE END
	0910978-6	ELBOW-90°-.38"	1	CONV END
28	4999354-6	SCREEN-OIL	1	
29	4999365-3	SPRING-OIL SCREEN	1	
	09183888-9	PLUG-RETAINING-1.00"	1	
30	0U80325-4	BEARING-NEEDLE	1	
31	4987702-0	RING- SNAP	4	
32	4995594-1	SHAFT-DRIVE-REVERSE	1	
33	4995626-1	RING-SNAP	1	
34	4995627-9	BEARING-BALL	1	
35	4987593-3	GEAR-LOW & REVERSE	2	

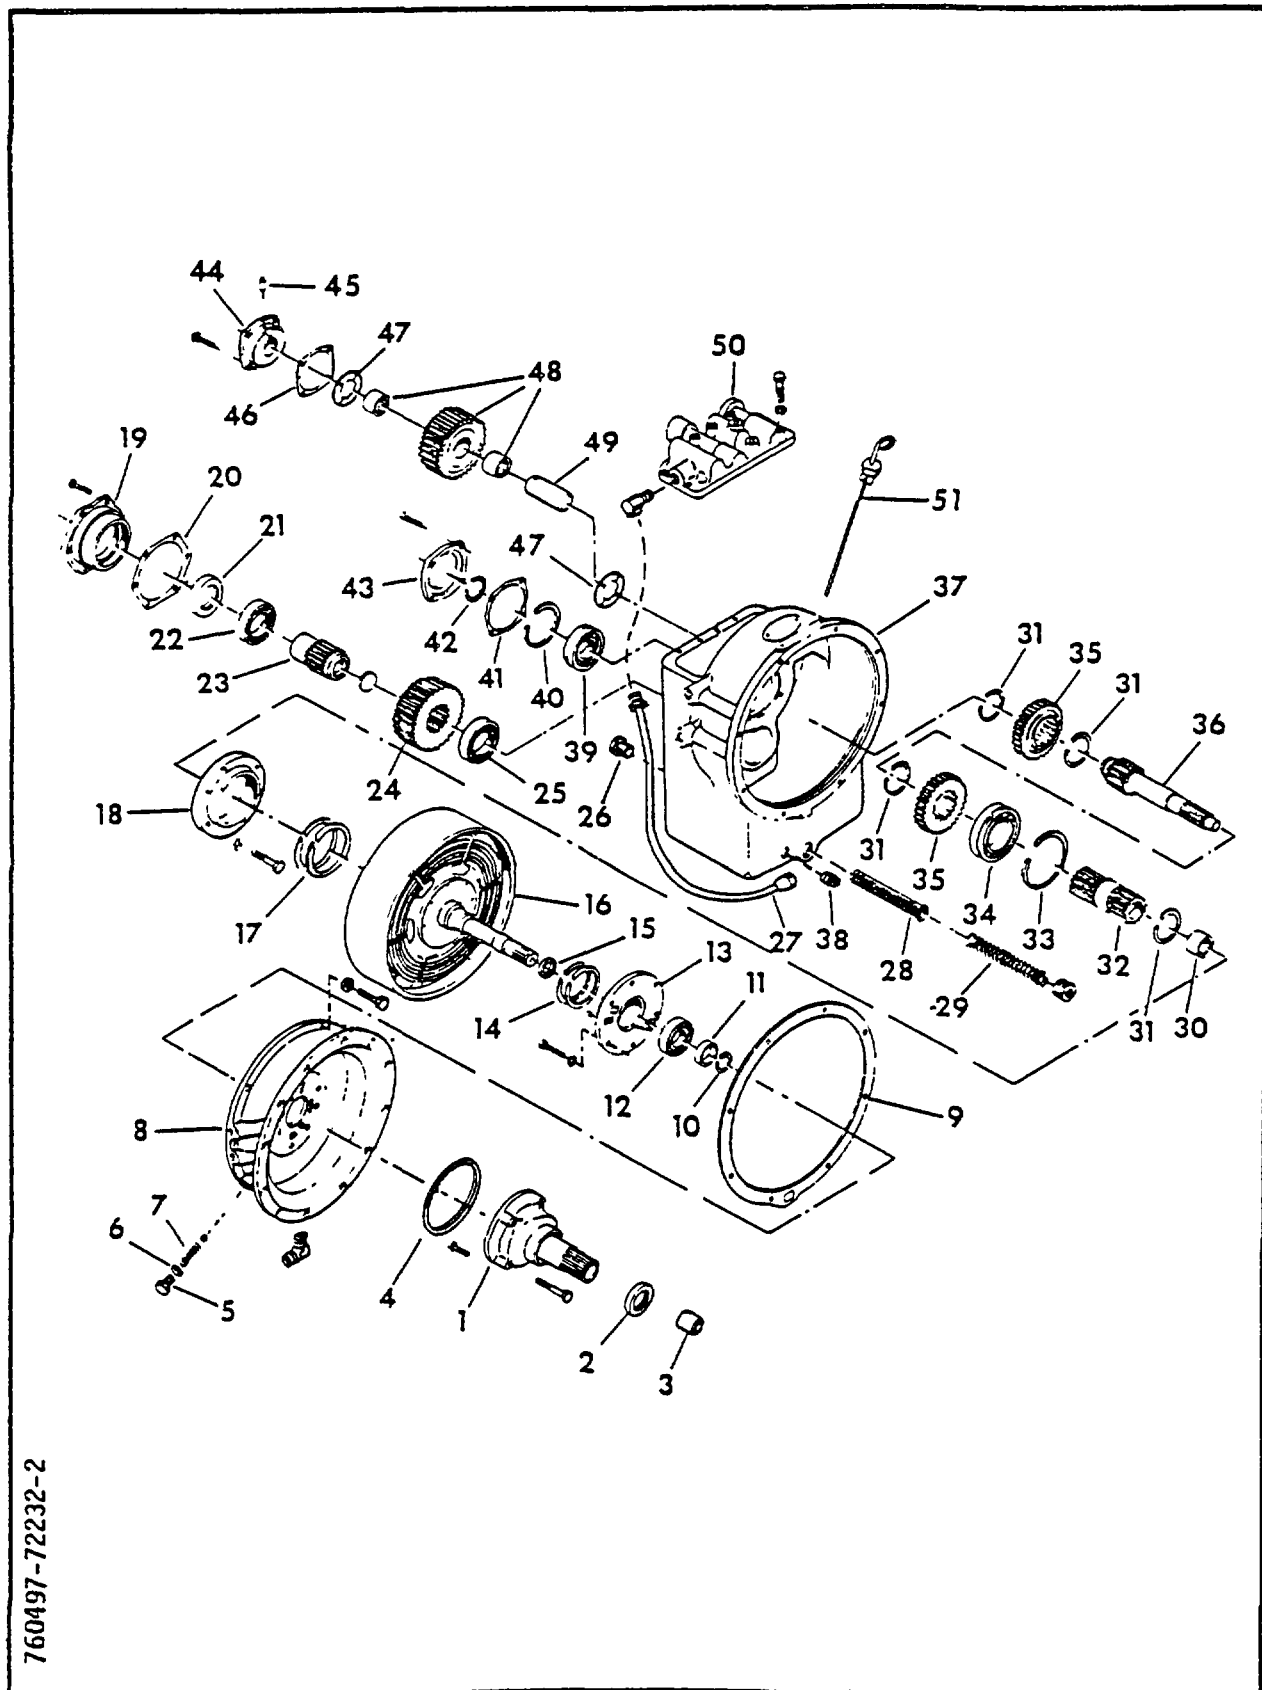


760497-72232-2

TRANSMISSION ASSY-4874437-9 (CONTINUED)

ITEM	PART NO.	DESCRIPTION	QTY.	
36	4987595-8	SHAFT-DRIVE-FORWARD	1	
37	4909121-8	CASE ASSY-TRANSMISSION	1	INCL PLUGS & ITEM 25
	0918850-9	PLUG-HEX SOC-.25"	2	
	0920130-2	PLUG-SQ HD-.25"	1	
	0920131-0	PLUG-SQ HD-.38"	2	
38	4707650-0	PLUG-DRAIN-MAGNETIC	1	
39	4253543-5	BEARING-BALL	1	
40	1007047-2	RING-SNAP-BEARING	1	
41	4987596-6	* GASKET-RETAINER	1	
42	4987703-8	RING-SNAP	1	
43	4987597-4	RETAINER-BEARING	1	
	0926671-9	CAPSCREW-.31"-18 X .88"	4	NYLON COAT
44	4908325-6	RETAINER-IDLER SHAFT	1	
	0926671-9	CAPSCREW-.31"-18 X .88"	4	NYLON COAT
45	4987589-1	PIN-RETAINING	1	
46	4987590-9	* GASKET-RETAINER	1	
47	4997587-3	WASHER-THRUST	2	
48	4910341-9	GEAR KIT-IDLER	1	INCL NEEDLE BEARINGS
49	4987588-3	SHAFT-IDLER GEAR	1	
50	4909135-8	VALVE ASSY-TRANS	1	SEE PAGE 77
	0931139-0	CAPSCREW-.31"-18 X 1.13"	1	} INCL LKW
	0918066-2	CAPSCREW-.31"-18 X 1.50"	3	
	0931140-8	CAPSCREW-.31"-18 X 2.00"	3	
	0931141-6	CAPSCREW-.31"-18 X 2.50"	5	
51	4987644-4	DIPSTICK	1	


*INCL IN KIT 4909869-2

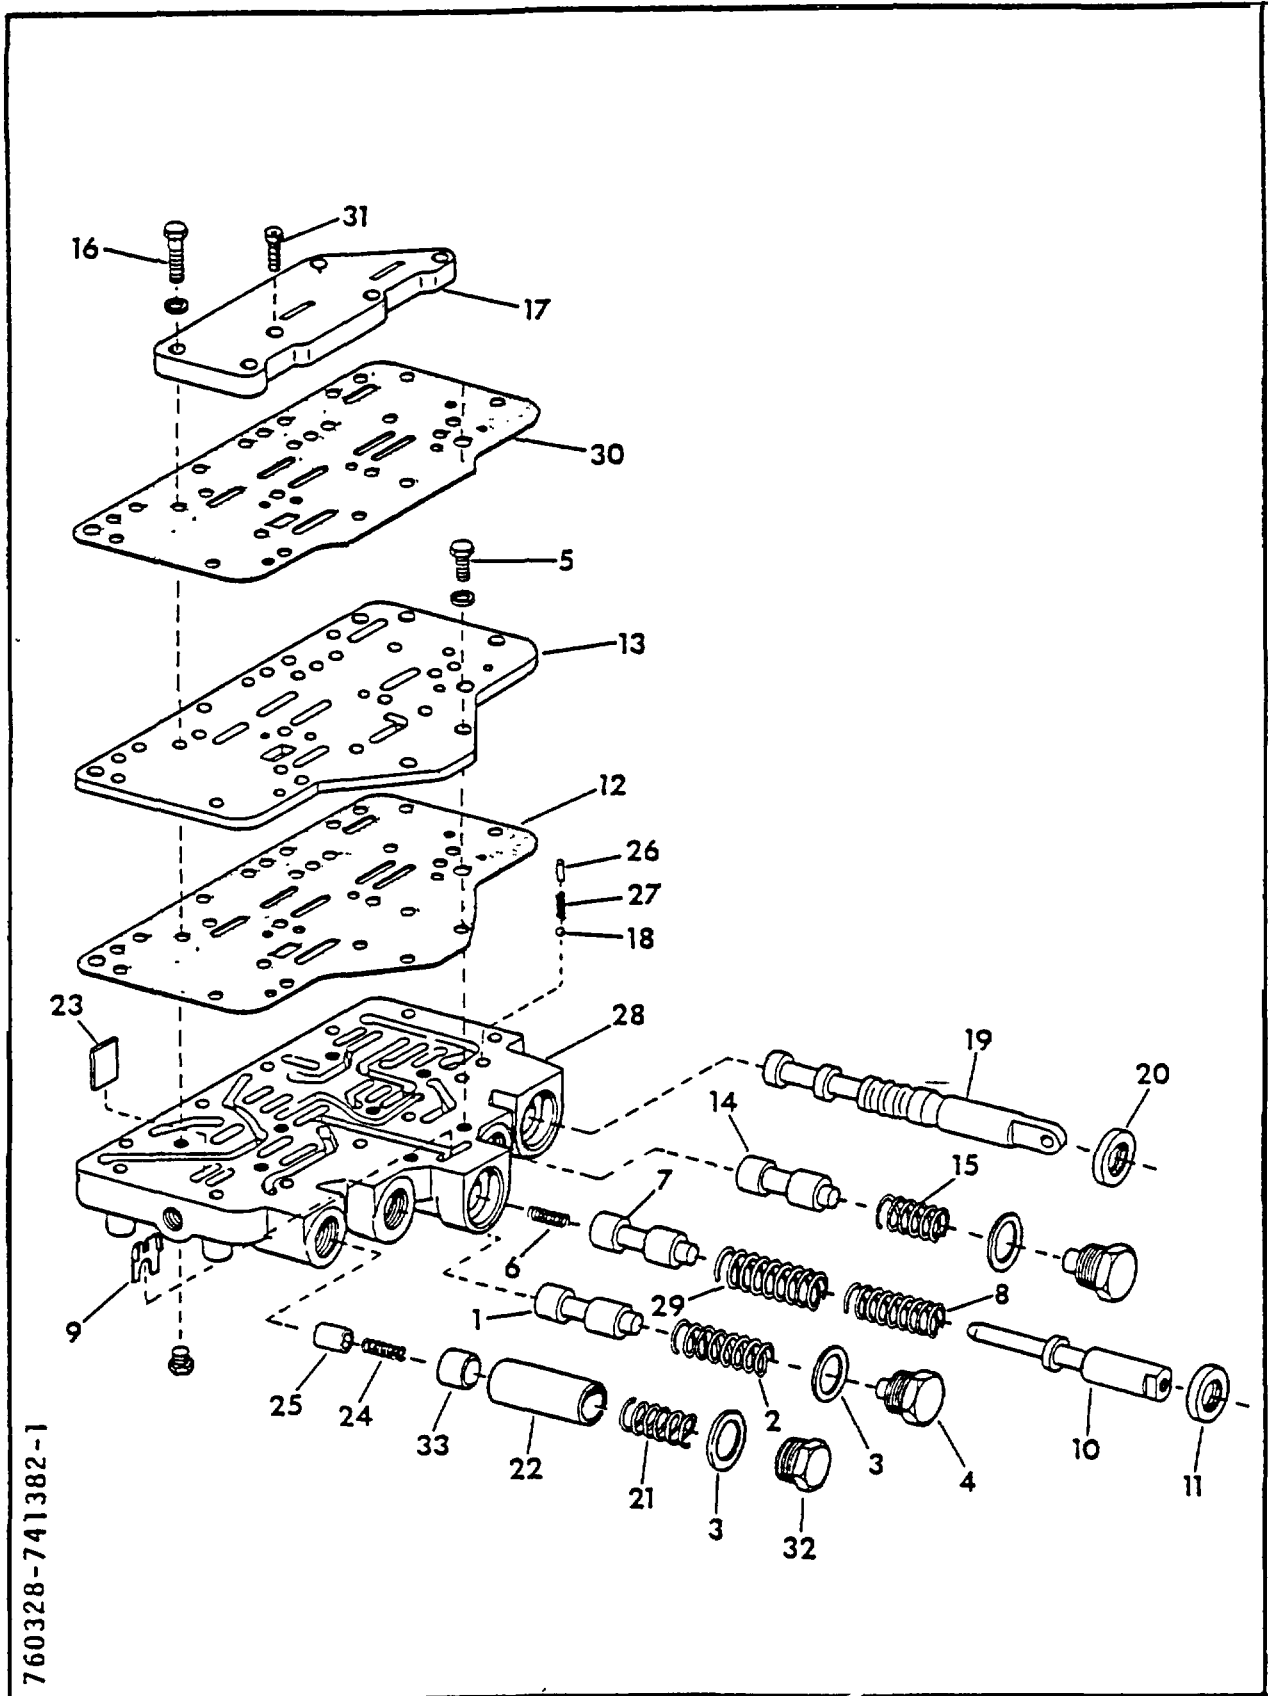

760328-741382-1

TRANSMISSION VALVE ASSY-4909135-8

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4909124-2	VALVE-REGULATOR	1	
2	4987631-1	SPRING-REGULATOR VALVE	1	
3	4987634-5	* GASKET	3	
4	4987635-2	SCREW-VALVE RETAINER	2	
5	0920026-2	CAPSCREW-.31"-18 X .56"	2	
	0917356-8	LOCKWASHER-.31"	2	
6	4988062-8	SPRING	1	
7	4909126-7	VALVE-INCHING	1	
8	4991747-9	SPRING-INCHING VALVE-INNER	1	
9	4909127-5	STOP-INCHING VALVE PLUNGER	1	
10	4909128-3	PLUNGER-INCHING VALVE	1	
11	4254697-8	* SEAL-OIL	1	
12	4909129-1	* GASKET-VALVE BODY	1	
13	4910352-6	PLATE-VALVE BODY	1	
14	4987630-3	VALVE-REGULATOR	1	
15	4987673-3	SPRING	1	
16	0918065-4	CAPSCREW-.31"-18 X 1.25"	6	INCL LKW
17	4909131-7	COVER-VALVE BODY	1	
18	0915771-0	BALL-CHROME STEEL-.25"	1	
19	4909132-5	VALVE-SELECTOR	1	
20	4254666-3	* SEAL-OIL	1	
21	4912280-7	SPRING	1	
22	4912281-5	VALVE-CONV REG	1	
23	4909138-2	PLATE-VALVE STOP	1	
24	4909139-0	SPRING	1	
25	4909140-8	VALVE-LUBE REG	1	
26	4909142-4	PIN-INTERLOCK	1	
27	4909134-1	SPRING	1	
28	4909133-3	BODY-VALVE	1	
	0919134-7	PLUG-.12" PT		
29	1002963-5	SPRING-INCHING VALVE-OUTER	1	
30	4912284-9	* GASKET-SEPERATOR PLATE	1	
31	4912285-6	SCREW	1	
32	4912282-3	PLUG-VALVE RETAINER	1	
33	4912283-1	PLUG-CONV REG	1	
		* INCL IN KIT 4909869-2		

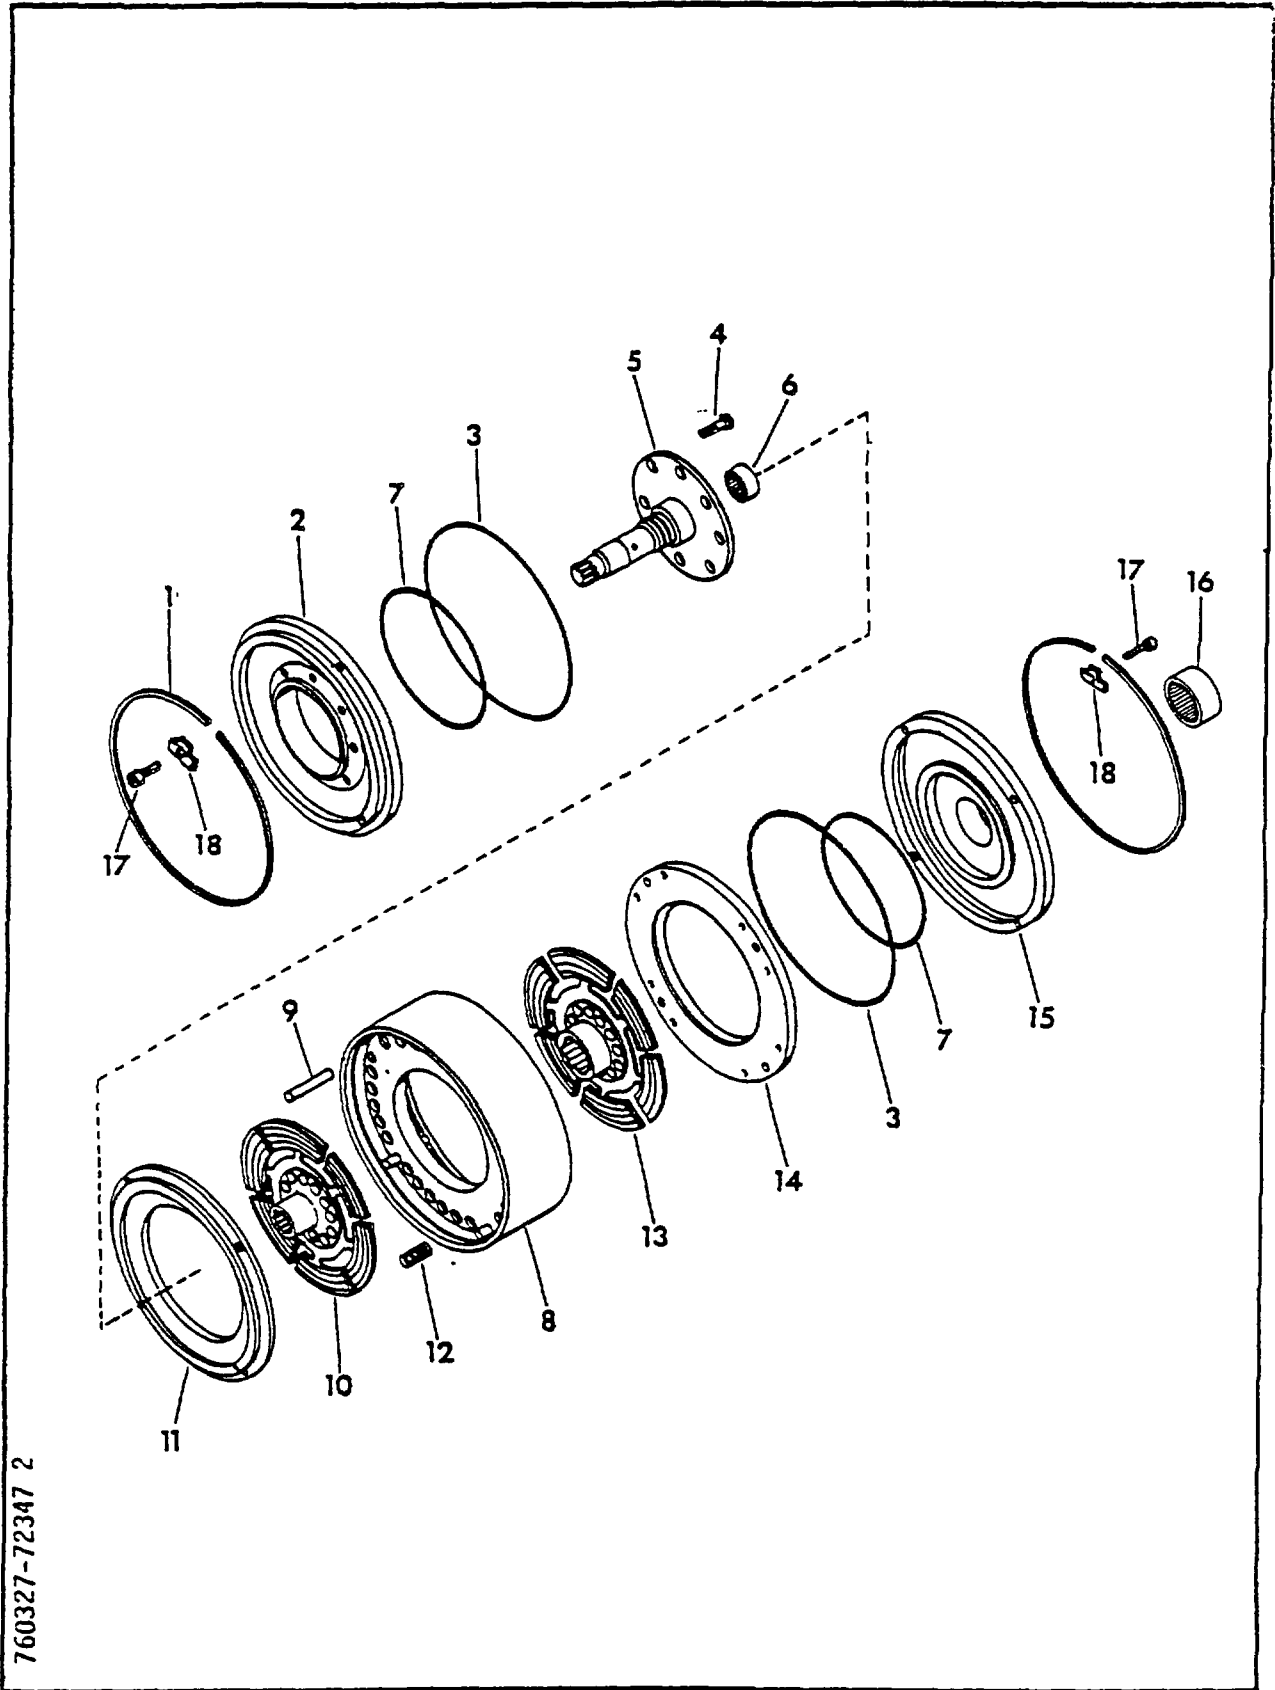


760327-72347 2

CLUTCH ASSY-FWD & REV-4912238-5

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4987609-7	RING-SNAP	2	
2	4912343-3	CYLINDER-FRONT CLUTCH	1	
3	4909119-2	* RING-SEALING	2	
4	4998673-0	BOLT-PLACE	8	
5	4905883-7	SHAFT ASSY-INPUT	1	INCL ITEM 6
6	4254654-9	BEARING-NEEDLE	1	
7	4910086-0	RING-SEALING	2	
8	4999280-3	PLATE ASSY-PRESSURE	1	INCL ITEM 9
9	4987603-0	PIN-DRIVE-PRESSURE PLATE	4	
10	4912342-5	PLATE ASSY-FWD CLUTCH	1	
11	4912346-6	PISTON-CLUTCH	1	
12	4987611-3	SPRING-CLUTCH RETRACTOR	24	
13	4912345-8	PLATE ASSY-REV CLUTCH	1	
14	4912346-6	PISTON-CLUTCH	1	
15	4912344-5	CYLINDER-REAR CLUTCH	1	
16	4255470-9	BEARING-NEEDLE	1	
17	4996438-0	SCREW	2	
18	4999539-2	PLATE-LOCK-SNAP RING	2	

* INCL IN KIT 4909869-2

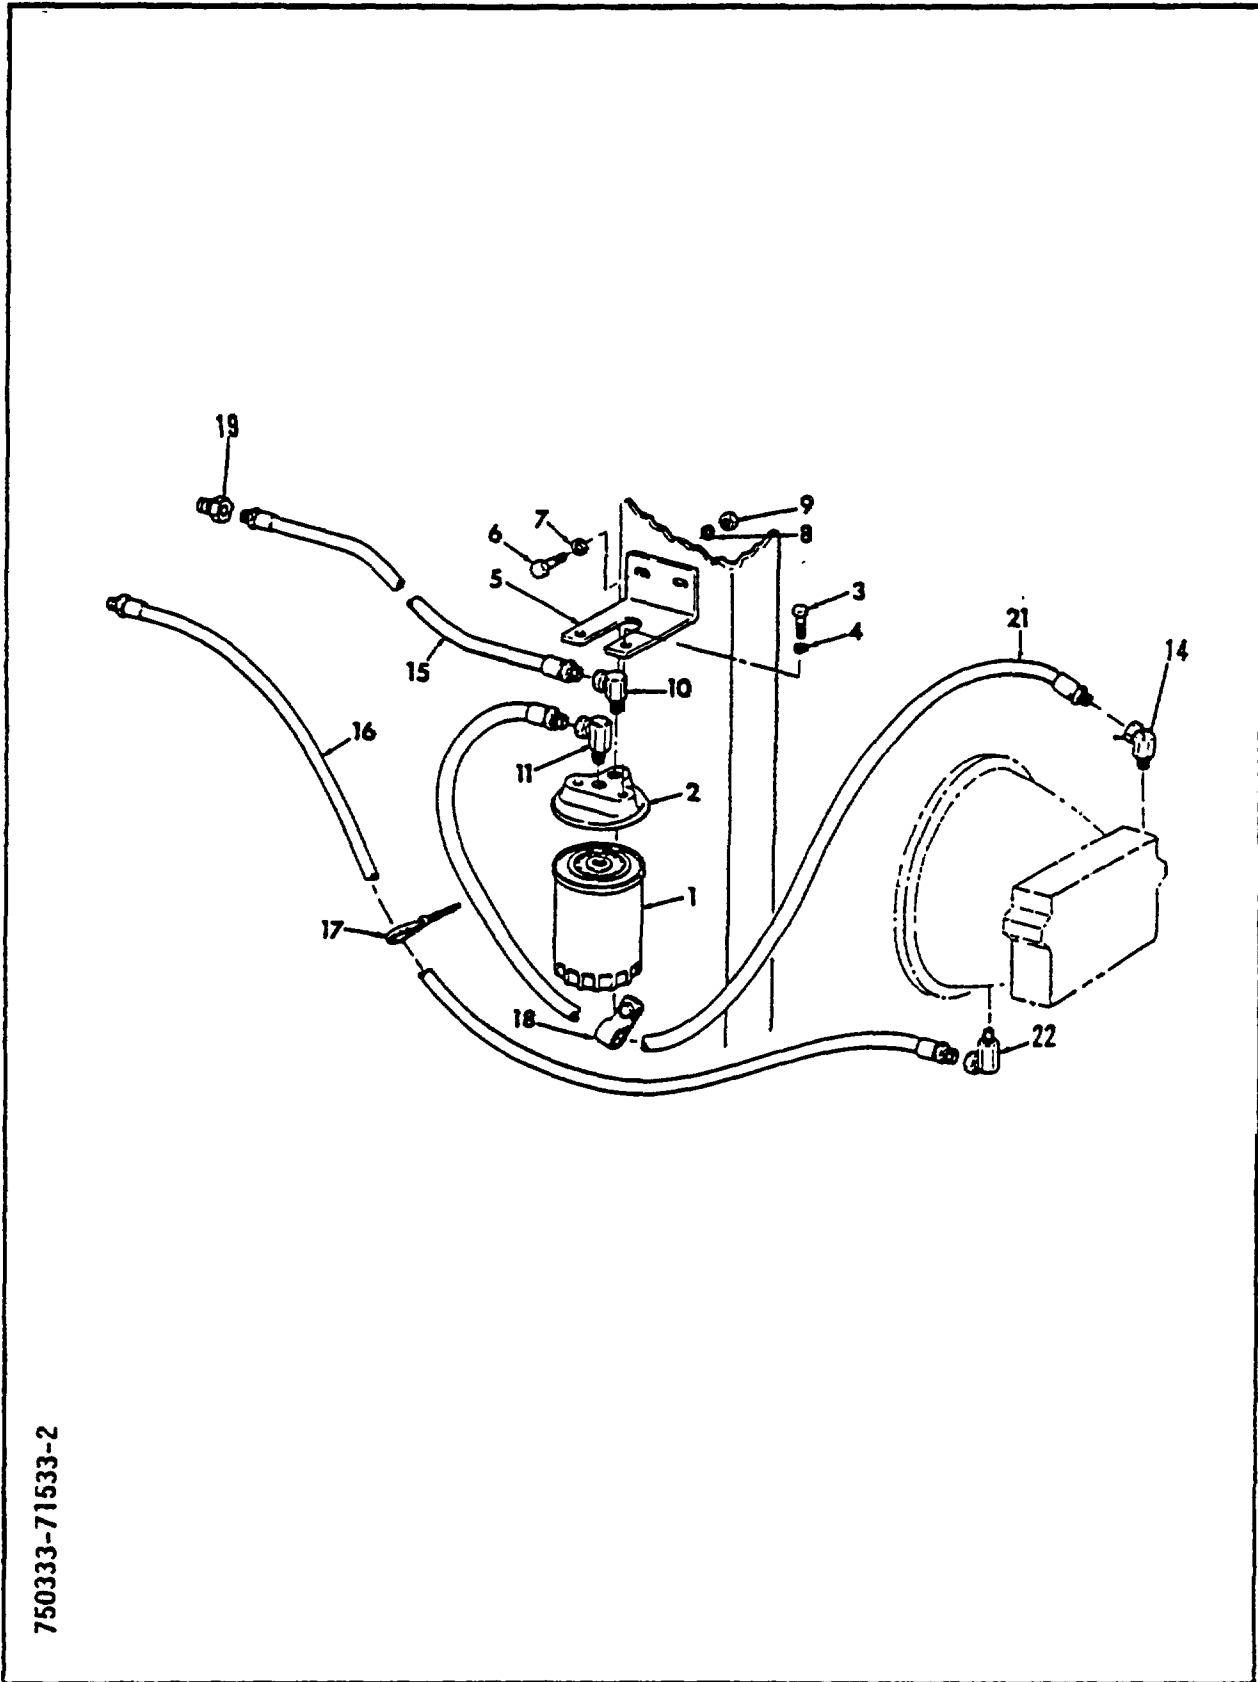


750333-71533-2

TRANSMISSION FILTER


ITEM	PART NO.	DESCRIPTION	QTY.
1	4878421/9	FILTER	1
2	4824293/7	BASE-FILTER	1
3	0921980-9	CAPSCREW- .31"-24 X .62"	2
4	0917356/8	LOCKWASHER- .31"	2
5	4822341/6	BRACKET	1
6	0925715/5	CAPSCREW- .31"-18 X .75"	2
7	0917356-8	LOCKWASHER- .31"	2
8	0920158/3	WASHER- .31" X .62"	2
9	0917372-5	NUT- .31"-18	2
10	4811115/7	FITTING-SHORT	1
11	4708605/3	ELBOW-LONG	1
14	4708603-8	FITTING	1
15	4769239/7	HOSE- .51"	1
16	4750169-7	HOSE- 44 LG	1
17	4255355-2	TYWRAP	2
18		NOT USED	
19	4760327-9	FITTING	1
20	0920779-6	BUSHING-PIPE	1
21	4767411-4	HOSE-25 LG	1
22	4252647-5	FITTING 450	1
	4252197-1	FITTING STR	1
	0919326-9	WASHER	2

) TO RADIATOR
)

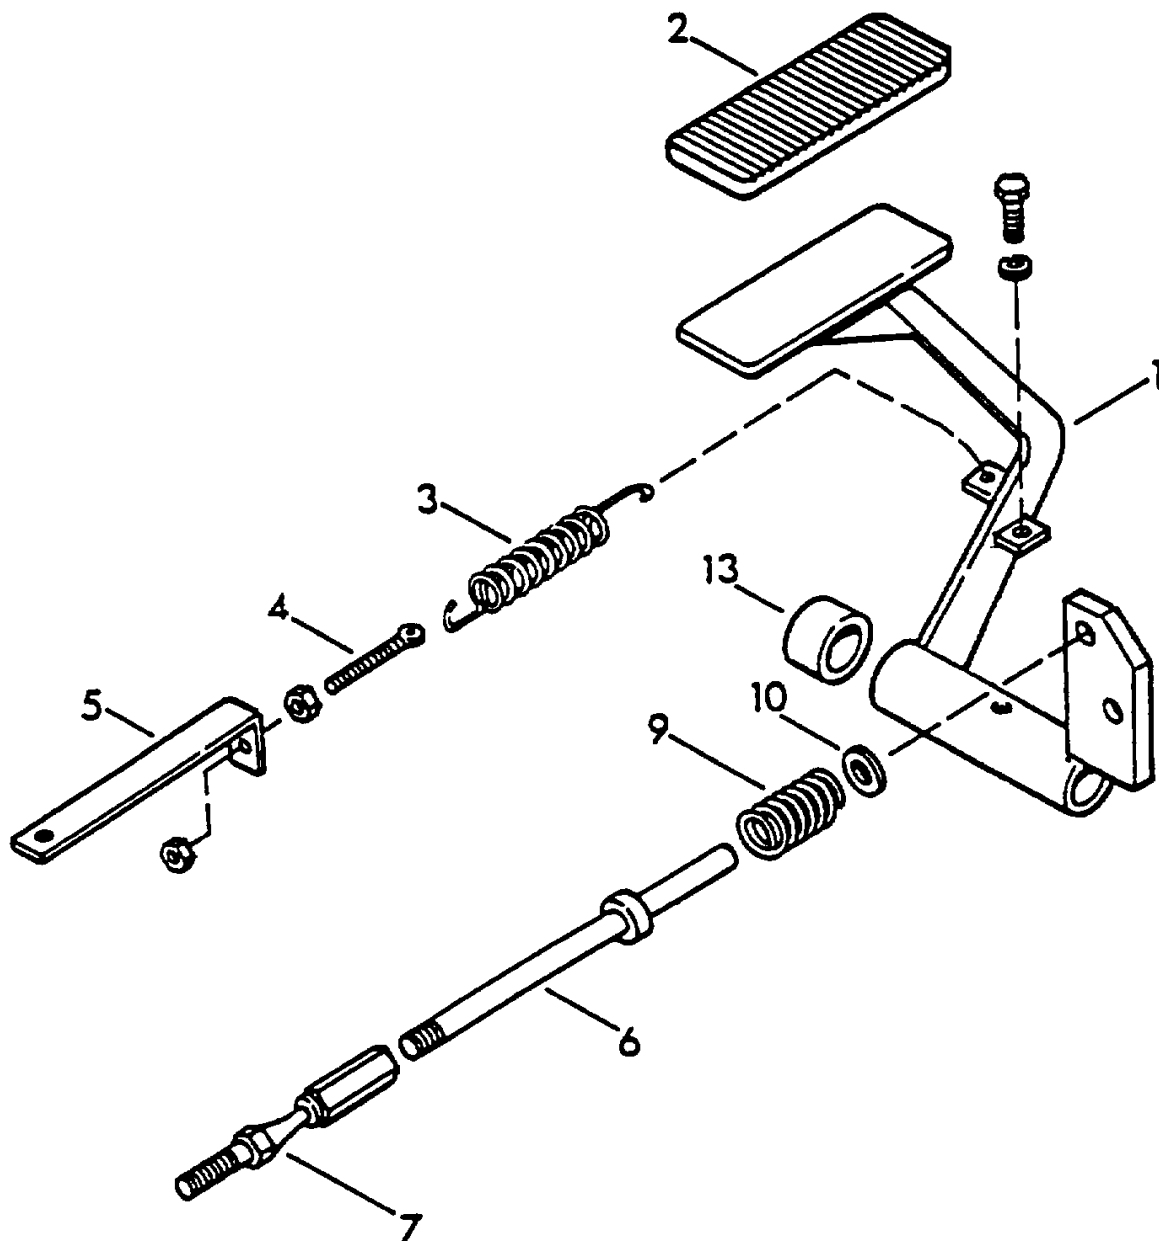


INCHING CONTROL (PRT)

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4857249-4	PEDAL ASSY	1	INCL ITEM 13
	0920165-8	CAPSCREW'	2	
	0917421-0	NUT	2	
	0912808-3	FITTING- LUBE-	1	
2	4869251/1	PAD	1	
3	4803166-0	SPRING	1	
4	4511898-1	SCREW	1	
	0920438-9	NUT- .31" -24	2	
5	4860675-0	ANCHOR	1	
	0928221-1	CAPSCREW	1	
	0917356-8	LOCKWASHER	1	
6	4859243-0	ROD-INCHING	1	
	0917356-8	LOCKWASHER- .31"	1	
7	4745363-4	JOINT-BALL	1	
8		NOT USED		
9	4803175-1	SPRING	1	
10	0919326-9	WASHER- .34"	1	
11		NOT USED		
12		NOT USED		
13	4707331-7	BUSHING	2	
	0920263-1	NUT	1	
	0919350-9	SCREW	1	
	0916004-5	PIN-SPRING	1	
	0920165-8	CAPSCREW	1	
	0913744-9	NUT	1	
	0923870-0	WASHER	1	
	0916004-5	PIN	1	
R				
	0921333-1	CAPSCREW	2	
	0917356-8	LOCKWASHER	2	
R				
	0917372-5	NUT	2	

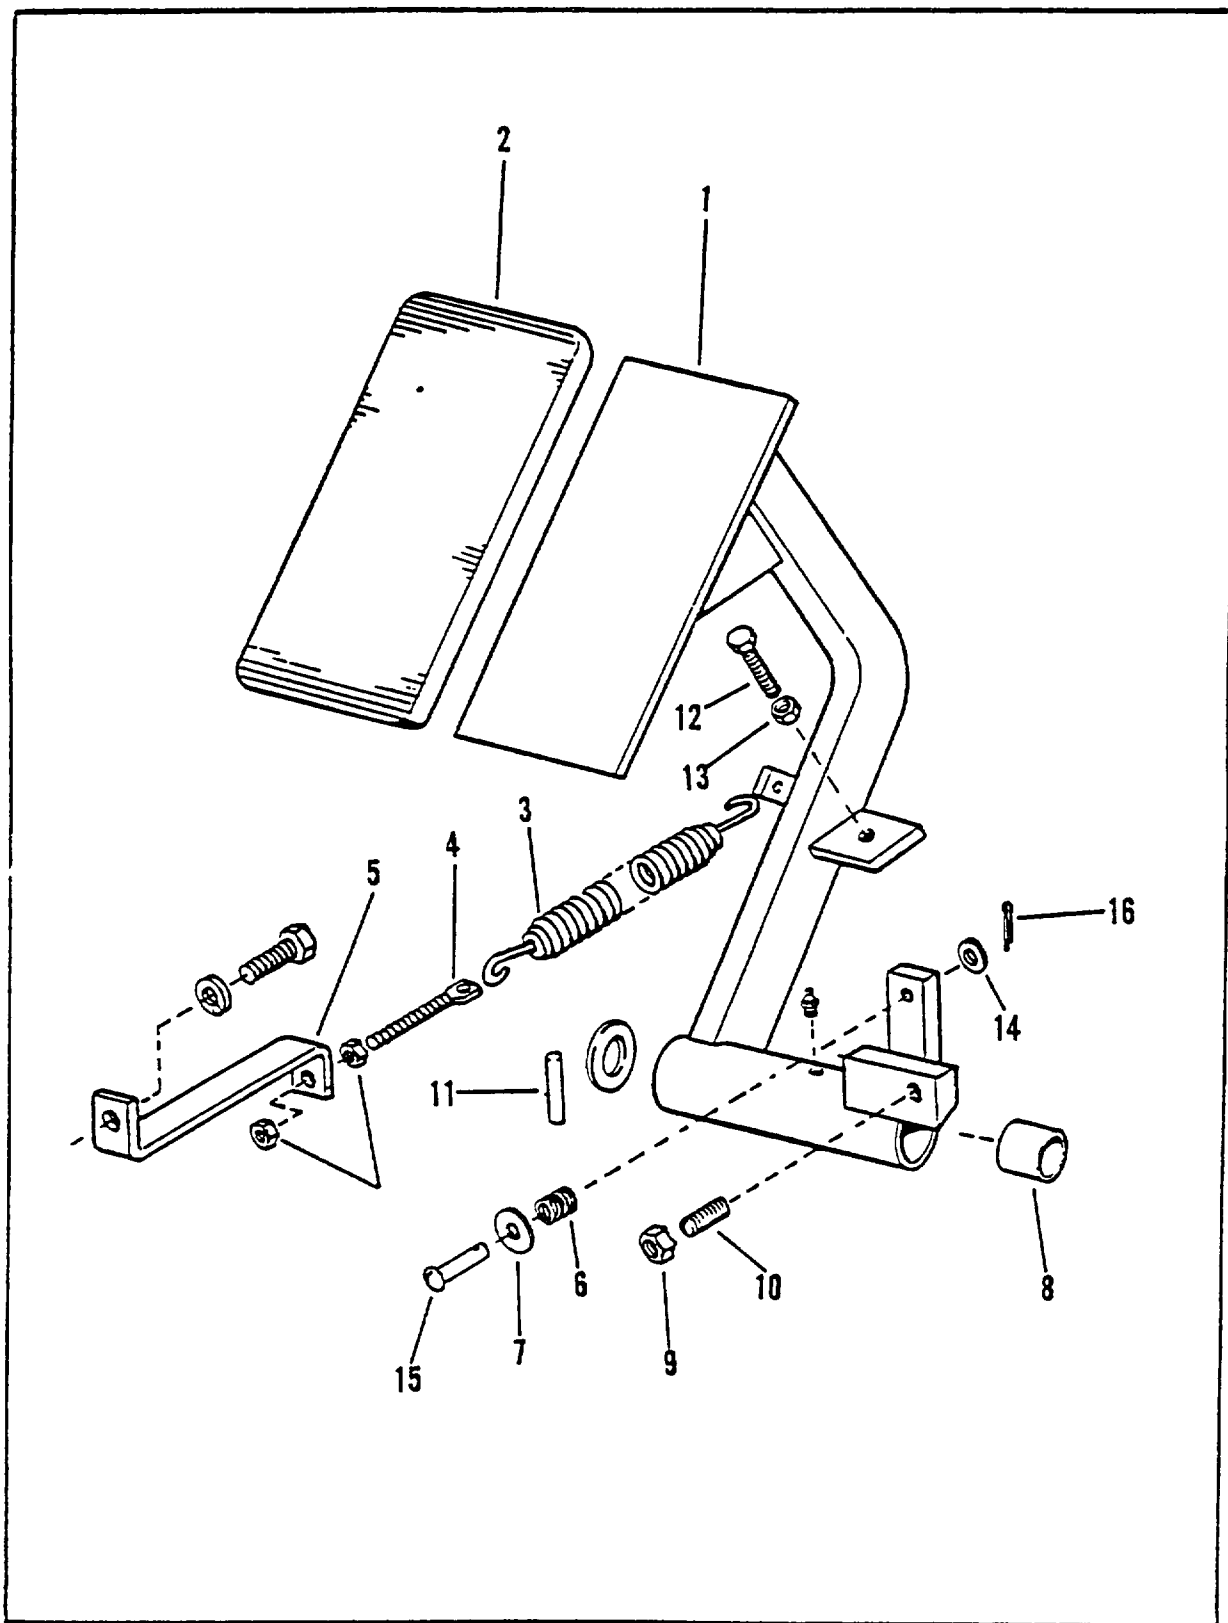

INCHING CONTROL (SRT)


ITEM	PART NO.	DESCRIPTION	QTY.
1	4857249-4	PEDAL ASSY	1
	0921348-9	CAPSCREW	1
	0917421-0	NUT	1
	0912808-3	FITTING- LUBE-	1
2	4869251-1	PAD	1
3	4868432-8	SPRING	1
4	4511898-1	SCREW	1
	0920263-1	NUT- .31"-24	2
5	4858181-3	BRACKET	1
6	4814702-9	SPRING	1
7	0918267-6	WASHER .44	1
8	4707331-7	BUSHING	2
9	0913744-9	NUT	1
10	0919350-9	SCREW	1
11	0916004-5	PIN-SPRING	1
12	0921982-5	CAPSCREW	1
13	0913744-9	NUT	1
14	0923870-0	WASHER	1
15	4876715-6	PIN-DRILLED	1
16	0918451-6	PIN-COTTER	1

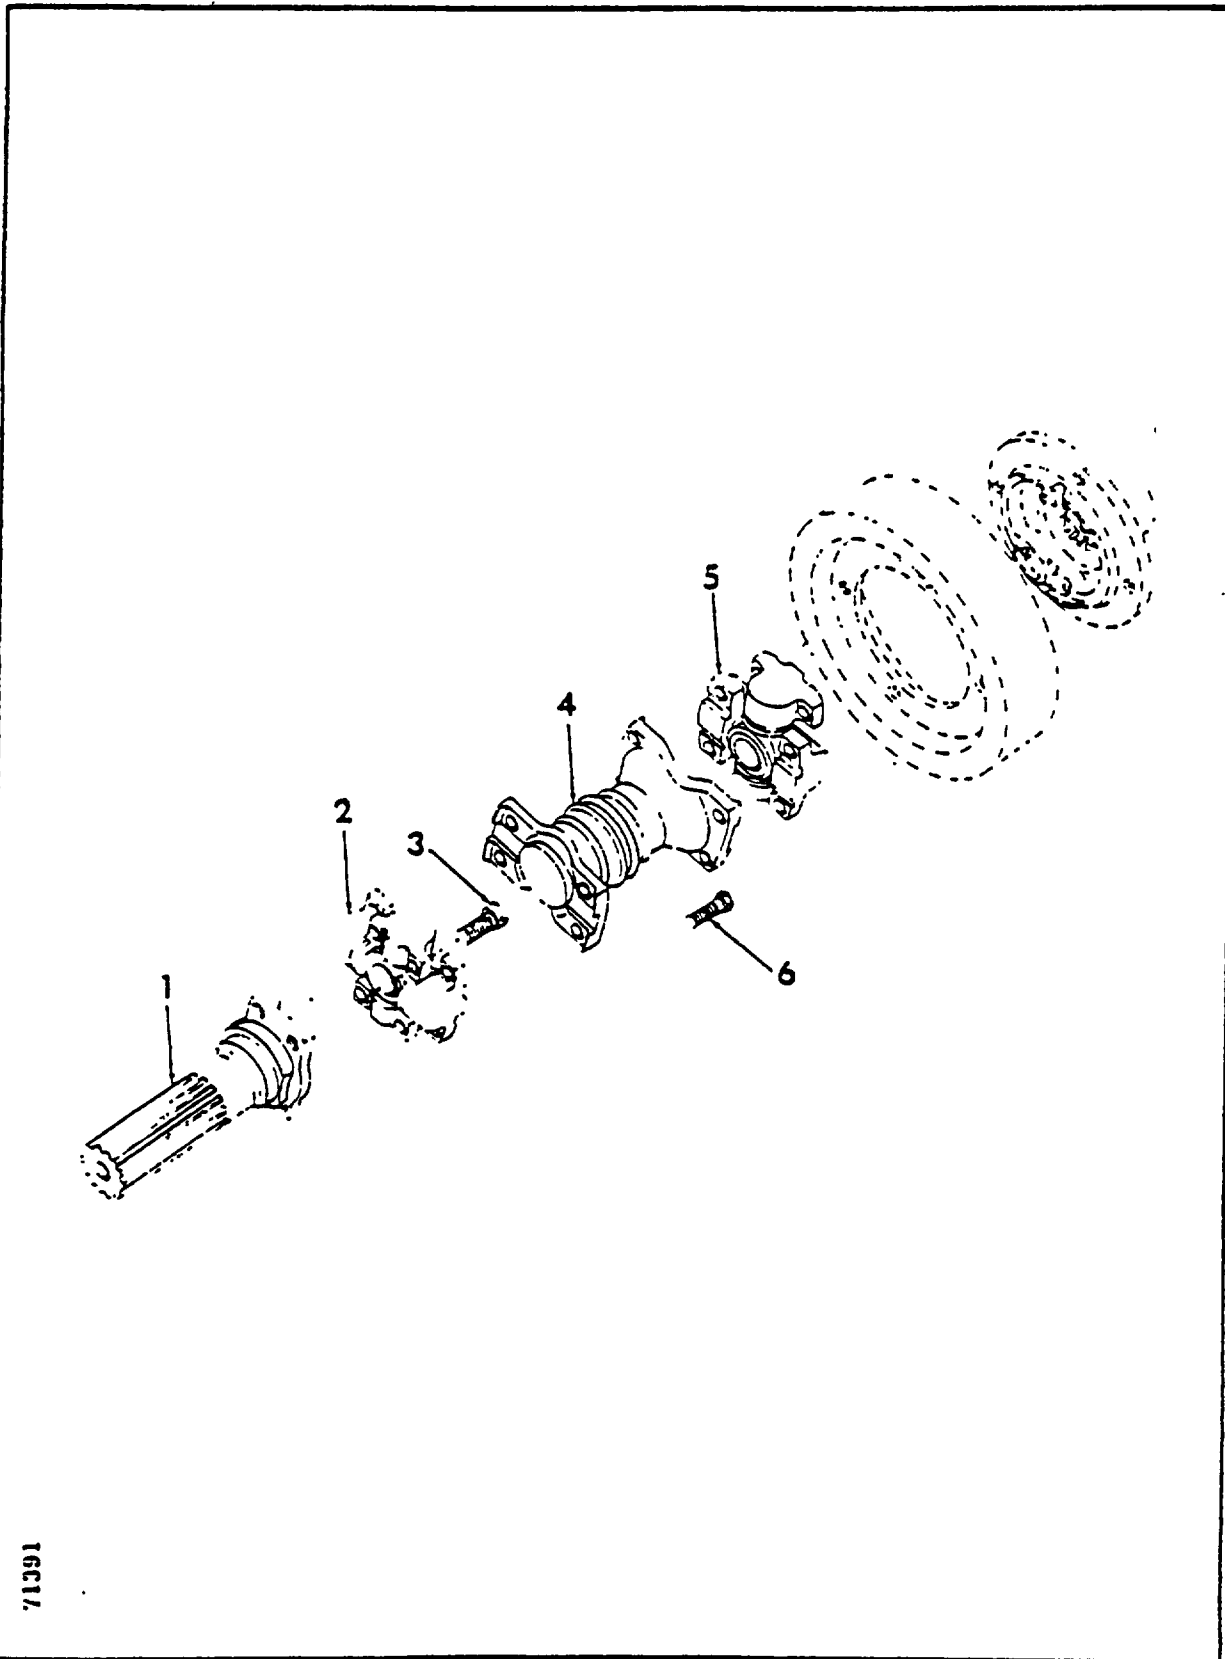

71391


UNIVERSAL JOINT - P/S

ITEM	PART NO.	DESCRIPTION	QTY.	
	4812693-2	JOINT-UNIVERSAL	1	INCL ITEMS 2-4-5 & 6
1	4828091-1	FLANGE	1	
2	4993479-7	CROSS ASSY	1	INCL BEARINGS
3	4829298-1	CAPSCREW-NYLOC	8	
4	4905098-2	TUBE-COUPLING	1	
5	4993479-7	CROSS ASSY	1	INCL BEARINGS
6	4980048-5	CAPSCREW	8	

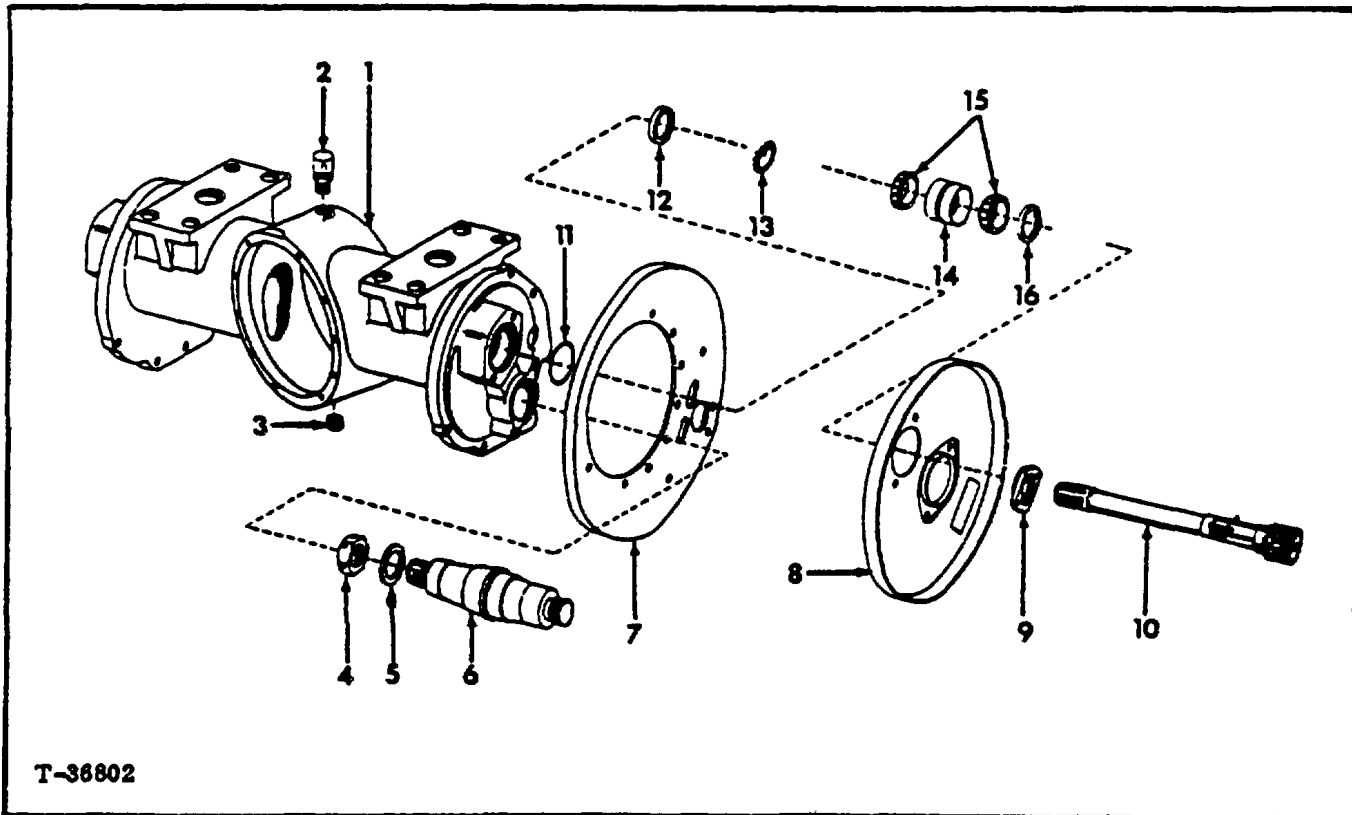

DRIVE AXLE


ITEM	PART NO.	DESCRIPTION	QTY.
1	4769711-5	HOUSING, AXLE	1
	0929501-5	CAPSCREW, 7/8" NC X 3-1/2", Gr.5	1
	0929499-2	CAPSCREW, 7/8" NC X 2", Gr.5	2
	0925150-5	CAPSCREW, 7/8" NC X 3-3/4"	3
	0922519-4	CAPSCREW, 12 PT.	2
	0917378-2	WASHER, 3/8"	1
	4816184-8	WASHER	12
	0923462-6	NUT, 7/8" NC	4
	4847837-4	PLUG, 3/4"	1
2	4710092-0	BREATHER	1
3	4855689-8	PLUG, DRAIN (MAGNETIC)	1
4	4747109-9	LOCKNUT	2
5	4747339-2	WASHER	2
6	4858263-9	SPINDLE (DUAL DRIVE) R.H.	1
	4858264-7	SPINDLE (DUAL DRIVE) L.H.	1
7	4868106-8	PLATE, BRAKE BACKING	2
	0921332-3	CAPSCREW, 5/16" NC X 3/4"	8
	0917356-8	LOCKWASHER, 5/16"	8
	4765164-1	PLUG, RUBBER	4
	4863217-8	SHIELD, DUST (SINGLE DRIVE)	2
8	0921958-5	CAPSCREW, 1/4" NC X 1/2"	4
	0916964-0	LOCKWASHER, 1/4"	4
-	4797003-3	SHAFT ASSY., PINION (INCL. ITEMS 9, 10 & 12 THRU 16)	2
9	4797234-4	CAP, AXLE	
	0921210-0	CAPSCREW, 3/8" NC X 1"	4
	0916965-7	LOCKWASHER, 3/8"	4
10	4795885-5	SHAFT, AXLE	2
11	4501458-6	SEAL, OIL	2
12	4331040-8	LOCKNUT	2
13	4253299-4	LOCKWASHER	2
	4254773-7	WASHER, TONGUED	2
14	4253253-1	CAP, BEARING	2
15	4253254-9	CONE, BEARING	4
16	4253297-8	SEAL, OIL	2
	4845678-4	WASHER NYLON	2
	4832944-5	PIN SHEAR	2
	4751644-8	BOLT, CARRIER	8
	4751985-5	STUD	2
	4751627-3	LOCKNUT	2
	4707440-6	GASKET, CARRIER	1
	4857230-9	ANCHOR	1
	4747109-9	NUT	2
	4747339-2	WASHER	2

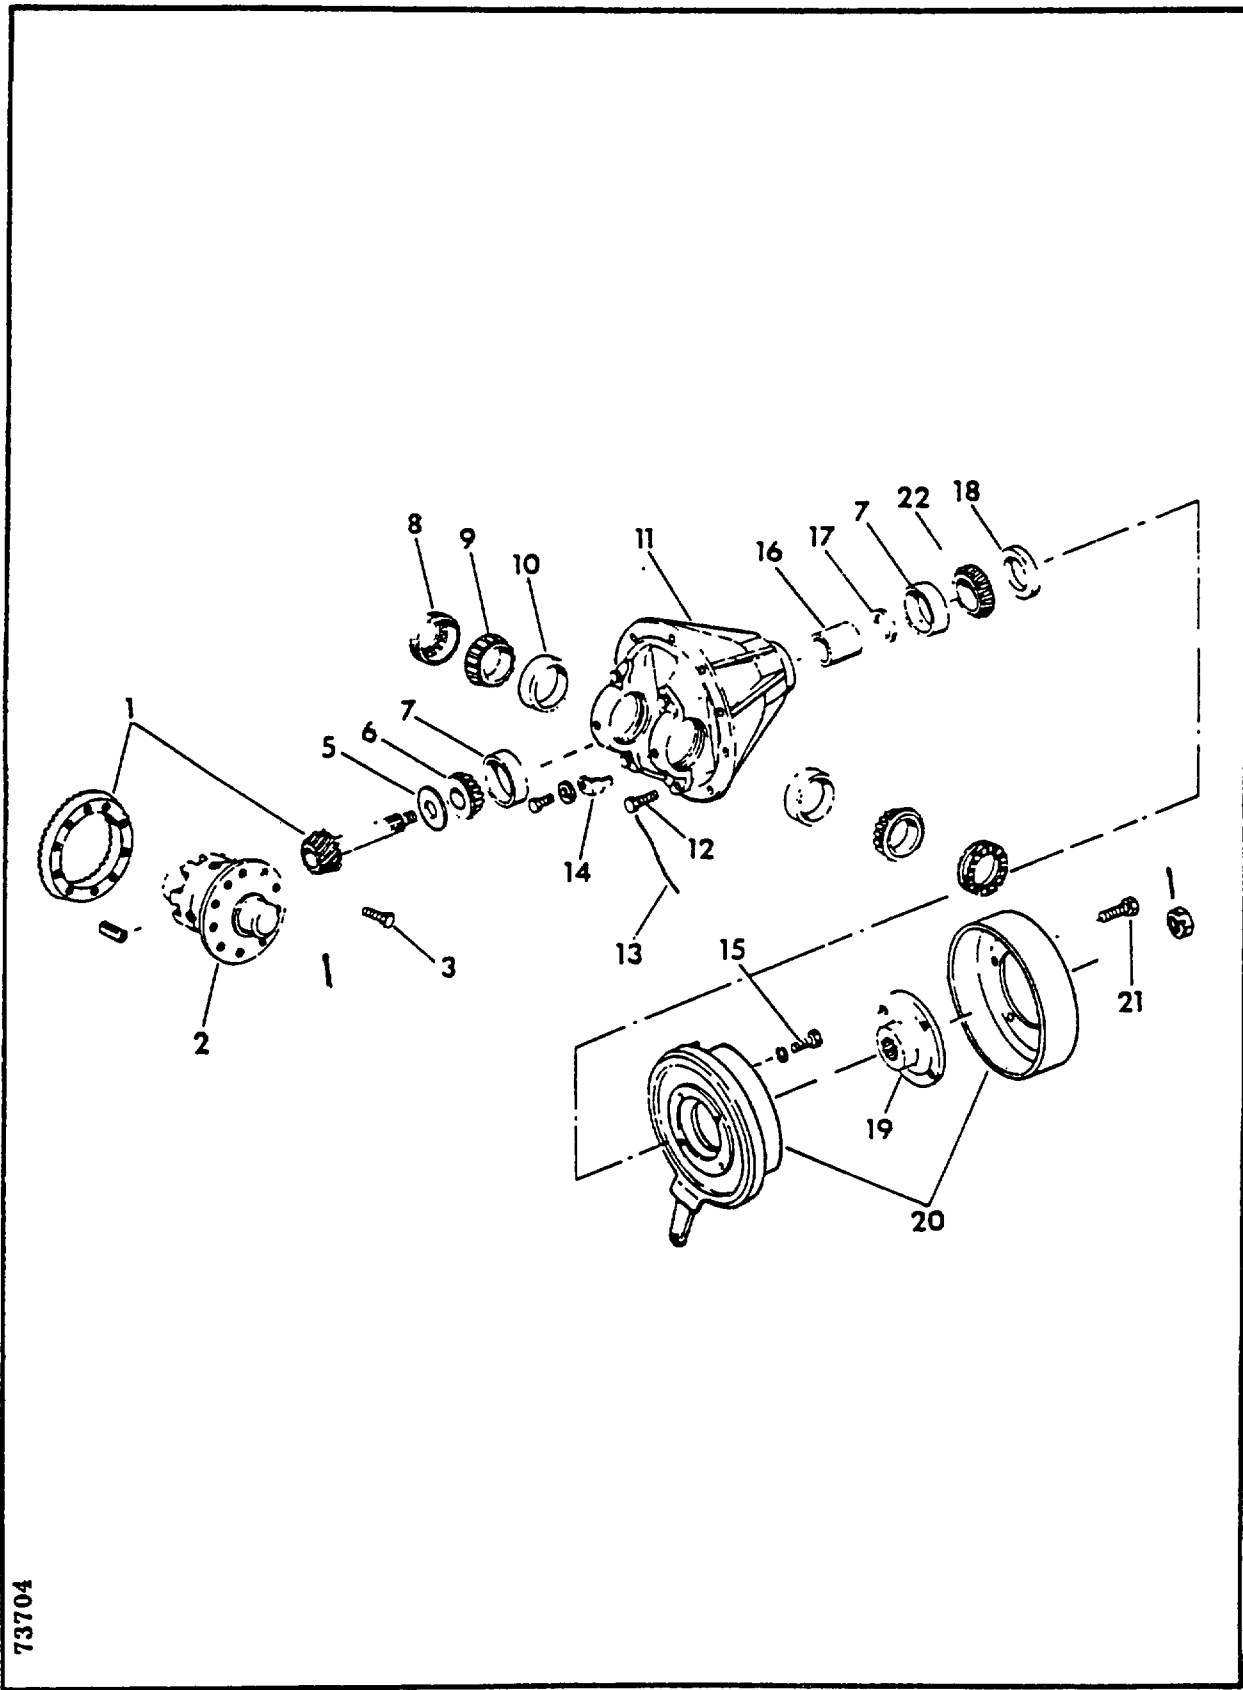

73704

DIFFERENTIAL CARRIER

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4827515-0	CARRIER ASSY	1	INCLUDES ITEMS 1 THRU 22
		GEAR SET	1	
	0917611-6	PIN-GROOVED .38" X .75"	2	
2	4839705-3	DIFFERENTIAL	1	SEE PAGE 90
3	0931130-9	CAPSCREW	10	
4		NOT USED		
5	4818848-6	SHIM-0.002"	*	} USE AS REQUIRED
	4818849-4	SHIM-0.003"	*	
	4818850-2	SHIM-0.005"	*	
	4818851-0	SHIM-0.010"	*	
	4818852-8	SHIM-0.020"	*	
6	0632465-1	CONE-BEARING	1	
7	0632466-9	CUP-BEARING	2	
8	4839703-8	ADJUSTER-BEARING	2	
9	0927270-9	CONE-BEARING	2	
10	0927273-3	CUP-BEARING	2	
11	4839700-4	HOUSING ASSY	1	INCL CAP & ITEM 12
12	0925205-7	CAPSCREW	4	
13	4737615-7	LOCKWIRE	2	
14	4838778-1	LOCK-ADJUSTER	2	
	0919318-6	CAPSCREW-.31" -18 X .62"	2	
	0917356-8	LOCKWASHER-.31"	2	
15	0916711-5	CAPSCREW-GRADE 8-HEX		
		SOC-.31" -18 X .62"	4	
	0917356-8	LOCKWASHER-.31"	4	
16	4814170-9	SPACER	1	
17	4814171-7	SHIM-0.002"	*	} USE AS REQUIRED
	4814172-5	SHIM-0.003"	*	
	4814173-3	SHIM-0.005"	*	
	4814174-1	SHIM-0.010"	*	
	4814175-8	SHIM-0.020"	*	
18	4254912-1	SEAL	1	
19	4812057-0	FLANGE	1	
	0926568-7	NUT-1" -14	1	
	0918453-0	PIN-COTTER-.12" X 1.25"	1	
20	4812197-4	BRAKE-PARKING	1	SEE PAGE 91
21	0916711-5	CAPSCREW-.38"-24 X .63	4	
	0917356-8	WASHER-.38"	4	
22	0632465-1	CONE	1	

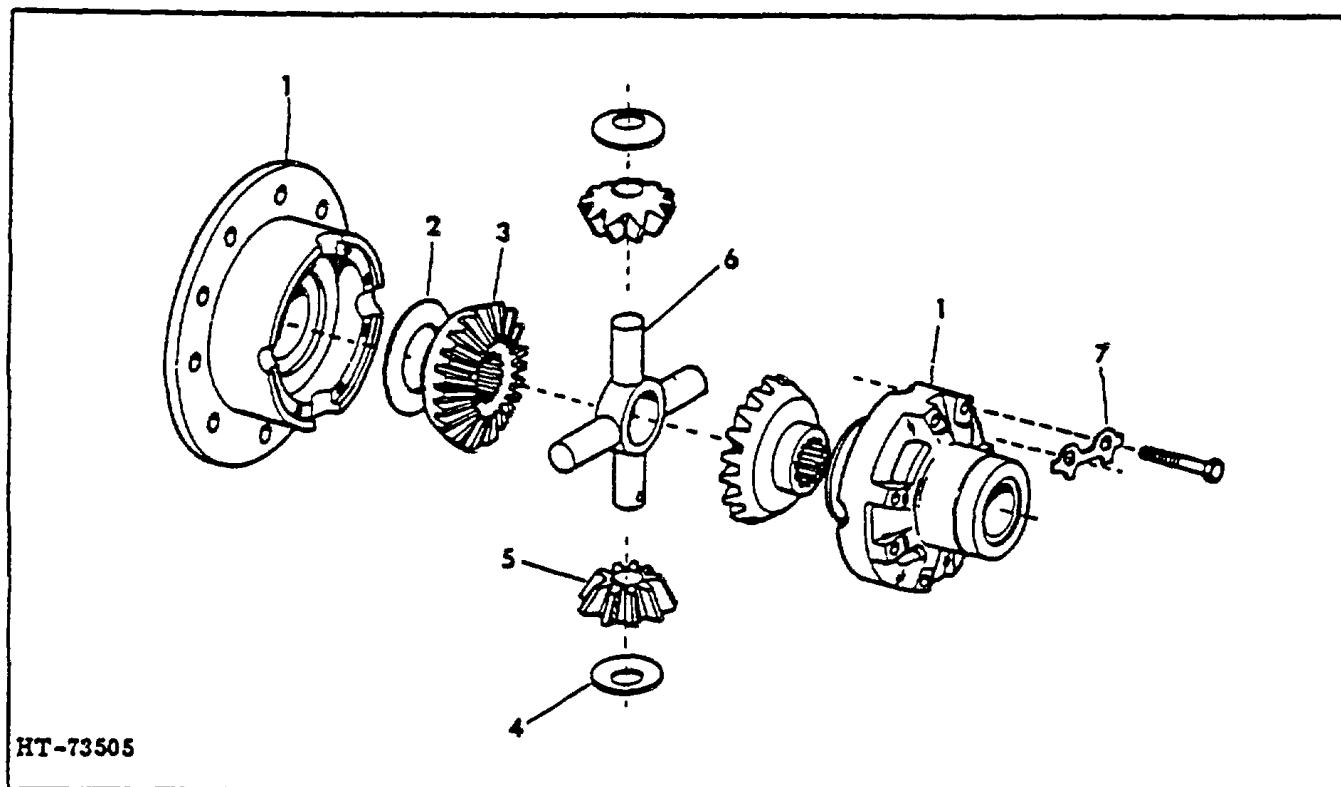


HT-73505

DIFFERENTIAL ASSY-4839705-3

ITEM	PART NO.	DESCRIPTION	QTY.	
R 1	4908941-0	CASE KIT	1	INCL TWO HALVES AND CAPSCREWS
	0913599-7	CAPSCREW	8	
2	4707712-8	* WASHER-SIDE	2	
3	4906401-7	* GEAR-SIDE	2	
4	4907711-0	* SPACER	4	
5	4906403-3	* GEAR-PINION	4	
6	4906402-5	* SPIDER	1	
7	4906404-1	CLIP	1	


* INCLUDED IN KIT-4907244-0

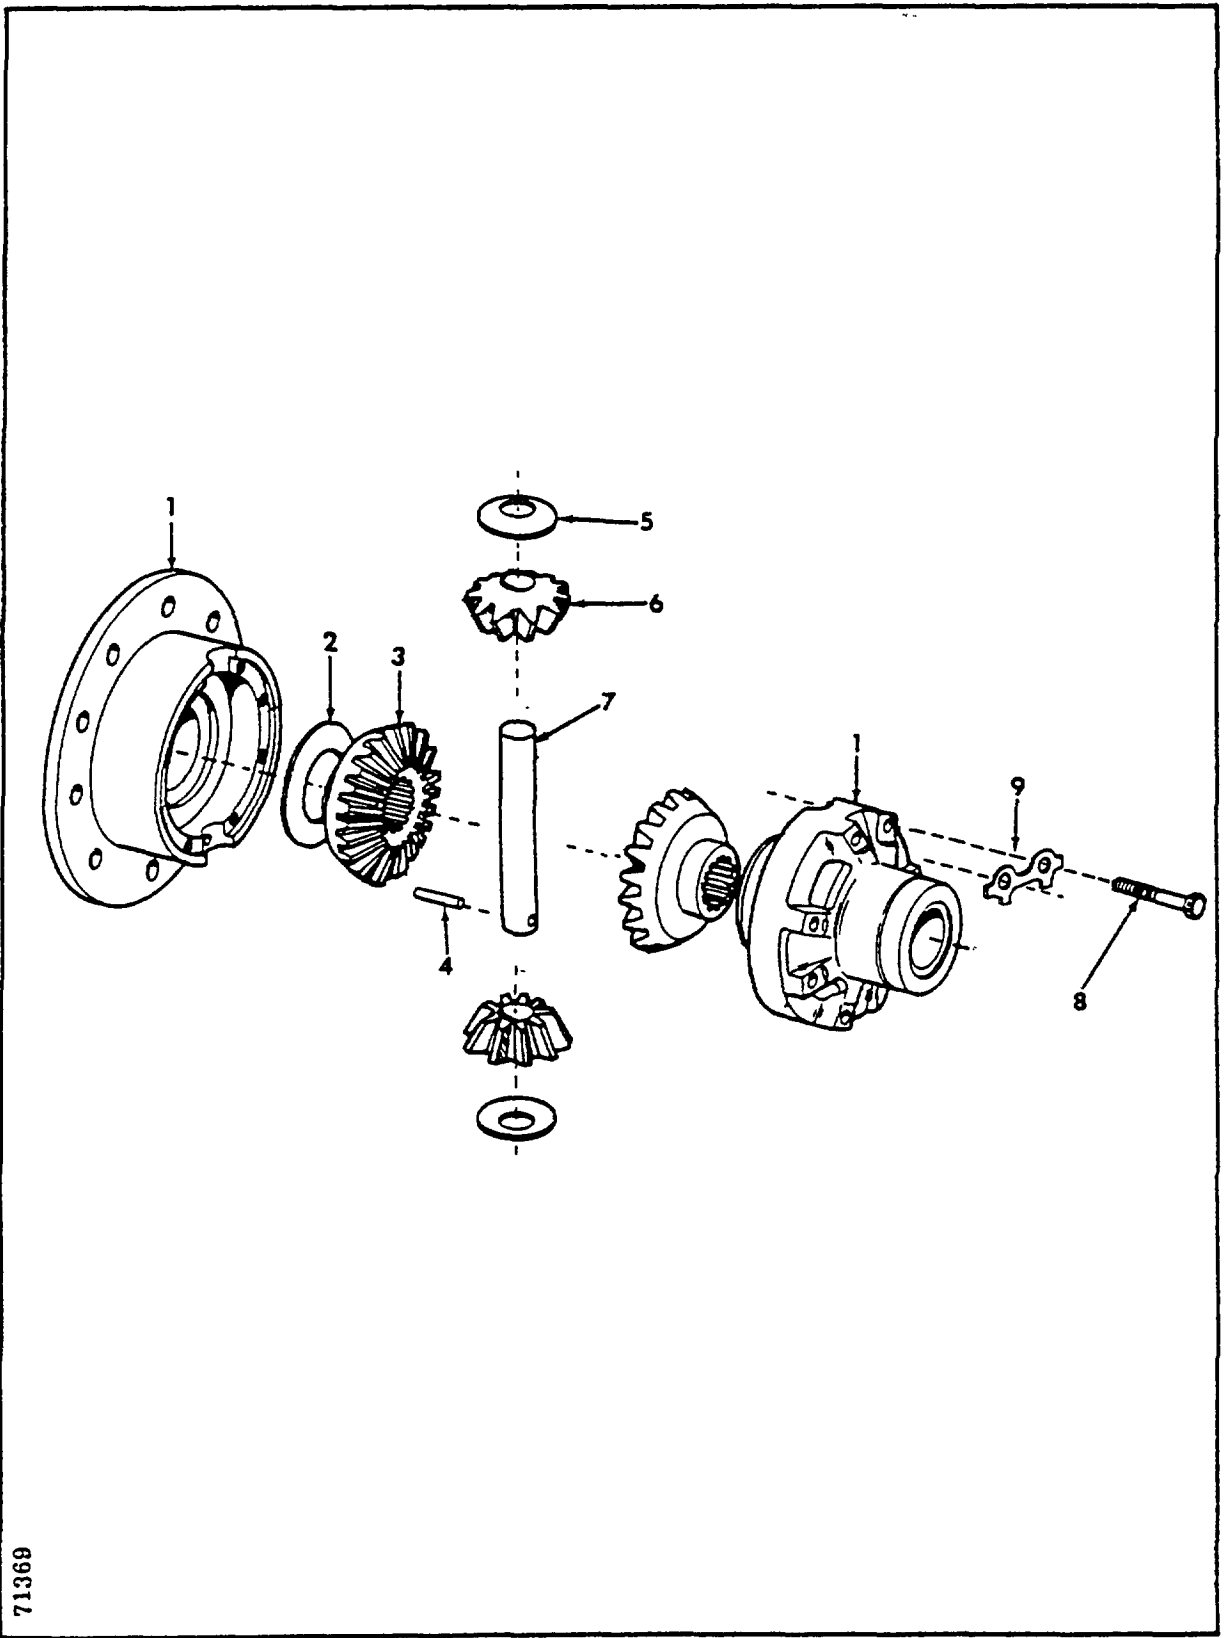

71369


DIFFERENTIAL ASSY- 4839704-6

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4908941-0	CASE-DIFFERENTIAL	1	SERVICED ONLY AS A COMPLETE UNIT
2	4707712-8	* SPACER-SIDE GEAR	2	
3	4906401-7	* GEAR-SIDE	2	
4	0917023-4	* PIN-DOWEL-.25" X 1"	1	
5	4707711-0	* SPACER-PINION GEAR	2	
6	4906403-3	* GEAR-PINION	2	
7	4906406-6	* PIN-CROSS	1	
8	0913599-7	CAPSCREW-.31"-18 X 2.5"	8	
9	4906404-1	CLIP-RETAINING	4	
		* INCLUDED IN KIT 4907245-7		

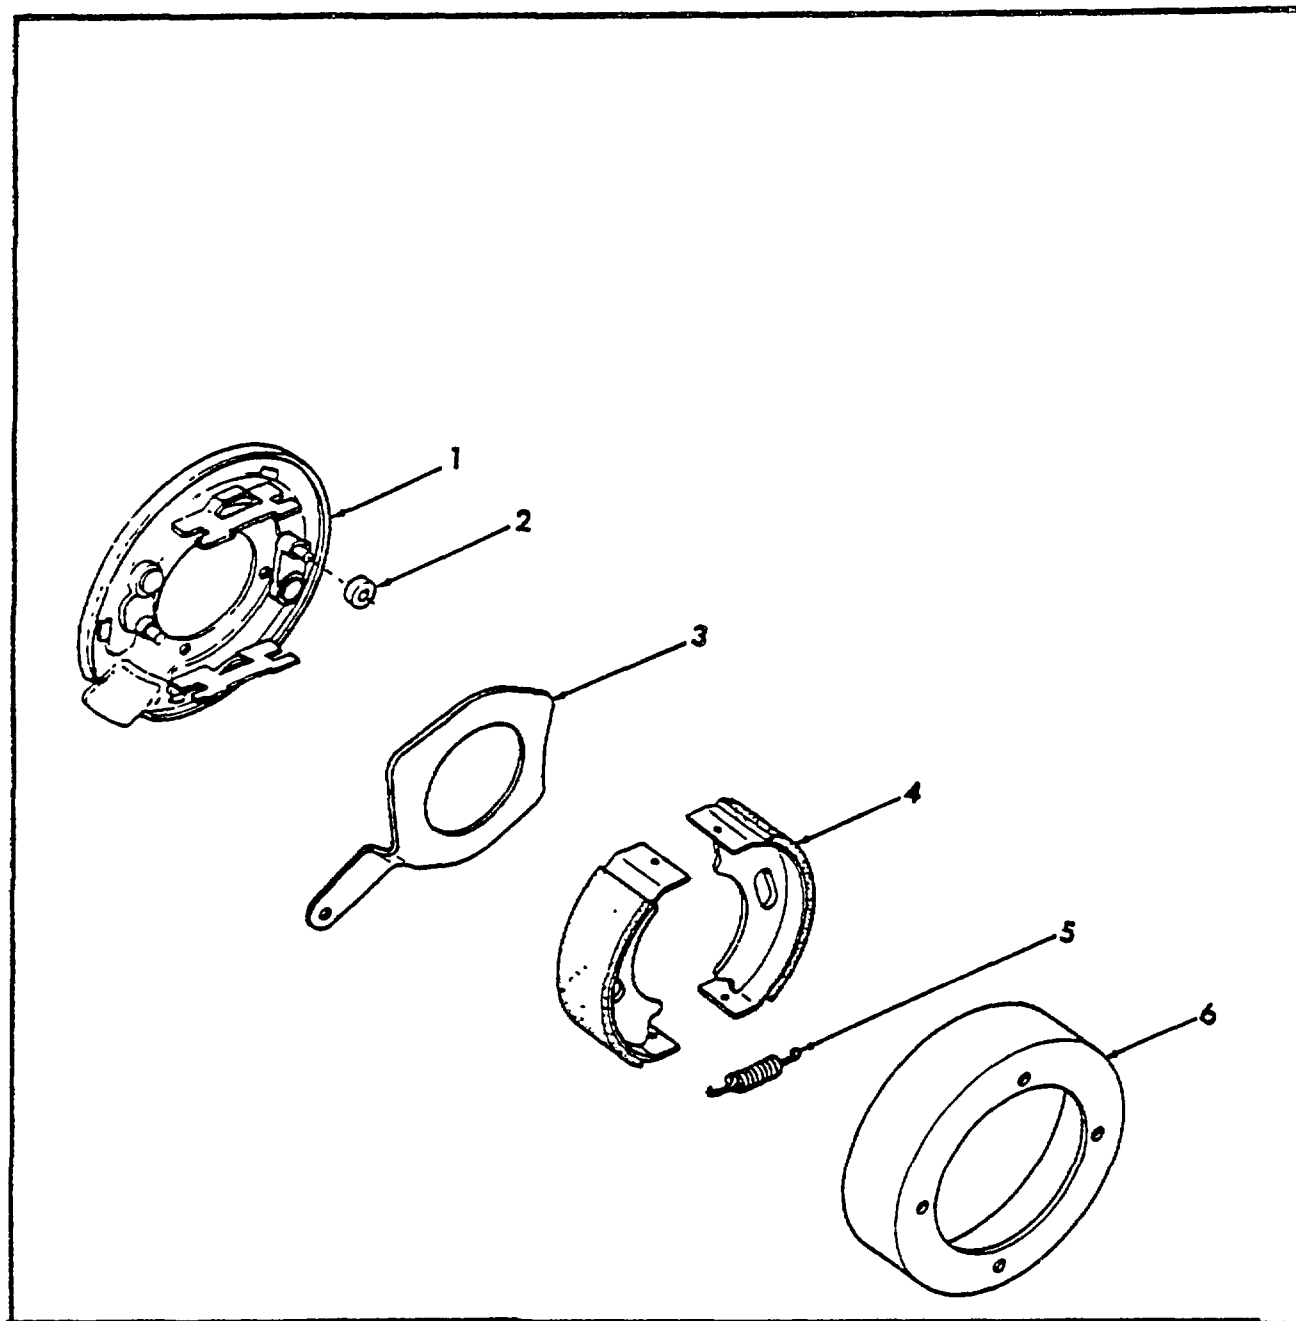


PARKING BRAKE ASSY - 4812197-4

ITEM	PART NO.	DESCRIPTION	QTY.
1	4987572-7	PLATE-BACKING	1
2	4987575-0	ROLLER	2
3	4987574-3	LEVER	1
4	4905659-1	SHOE & LINING ASSY	2
5	4987579-2	SPRING	2
6	4812198-2	DRUM	1

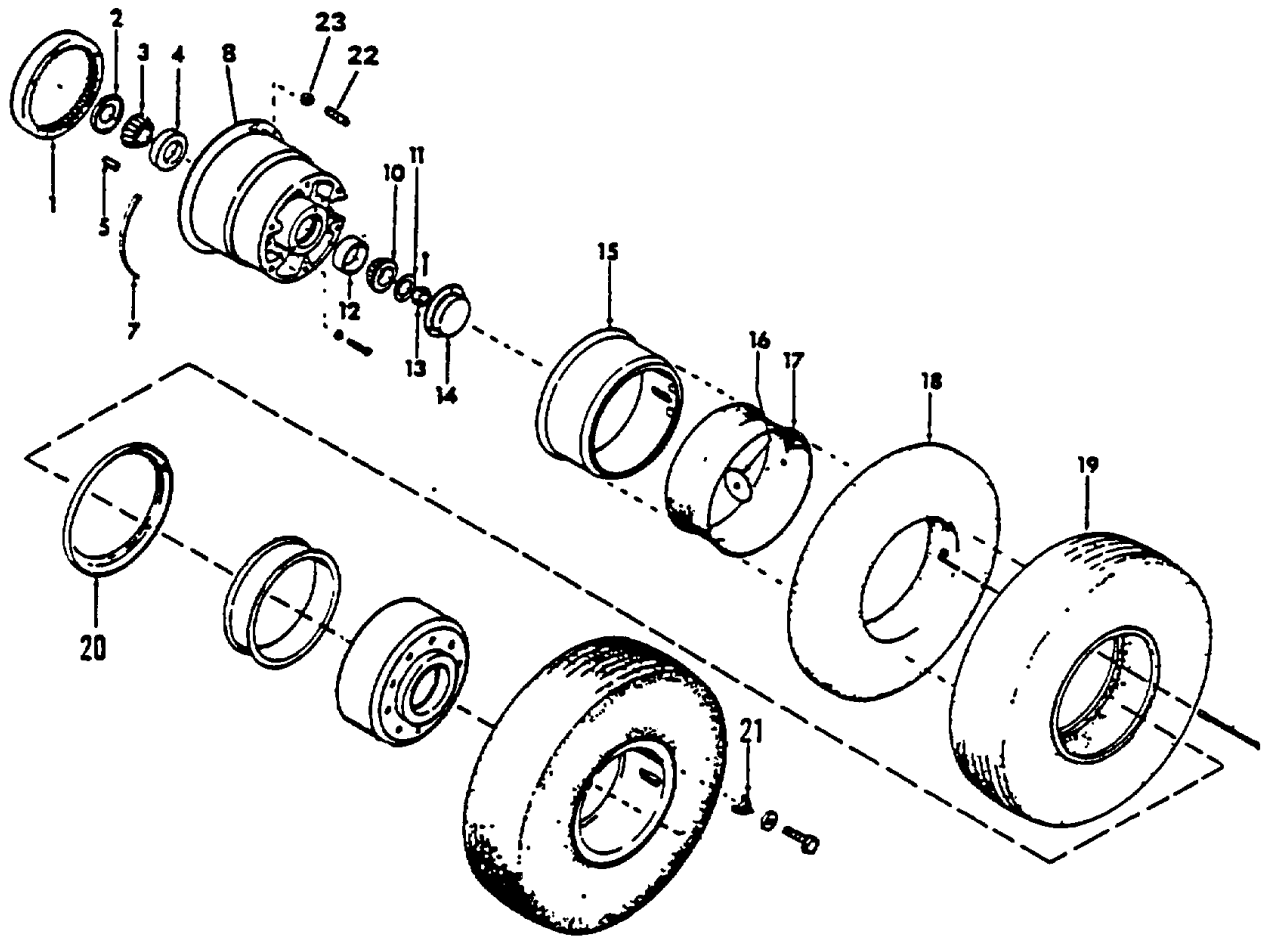

DRIVE WHEEL


ITEM	PART NO.	DESCRIPTION	QTY.	
	4856433-0	WHEEL ASSY	2	
1	4795693-3	GEAR, BULL	2	
2	4858265-4	SHIELD, GREASE	2	
3	0929399-4	CONE, BEARING (INNER)	2	
4	0929396-0	CUP, BEARING (INNER)	2	
5	0926146-2	PIN, ROLL 7/16" X 2-3/4"	6	
6		NOT USED		
	0929019/8	CAPSCREW, GR. 5, 3/8" NC X 2"	6	
	0929156-8	WASHER	6	
7	4787230-4	STRIP, FELT (72" BULK - CUT TO LENGTH)	1	
8	4869638-9	HUB, WHEEL	2	
9		NOT USED		
10	0931025-1	CONE, BEARING (OUTER)	2	
11	4858266-2	WASHER	2	
12	0931024-4	CUP, BEARING (OUTER)	2	
13	0930888-3	NUT, BEARING ADJUSTING, 1-1/4"NF	2	
	0929589-0	PIN, COTTER, 3/16" X 2-1/2"	2	
14	4706891-1	CAP, HUB	2	
	0916803-0	LOCKWASHER	6	
	0921965-0	CAPSCREW, 3/8" NC X 3/4"	6	
15	4858267-0	RIM, BASE	2	
16	4758882-7	DISC, FLAP (VALVE STEM HOLE)	2	
17	4769721-4	FLAP, 7:00 X 15" (OBTAIN LOCALLY)		
18	4769720-6	TUBE, 7:00 X 15" (OBTAIN LOCALLY)		
R 19	4795711-3	TIRE 7:00 X 15 - 12 PLY	2	INCL ITEMS 17 & 18
20	4774925-4	RING, SIDE	2	
21	4774989-0	CLAMP, RIM	12	
	0922664-8	CAPSCREW 625-11 X 2	12	
	0929365-5	656 X 1.38 X 18	12	
R 22	0931756-1	SETSCREW	6	
R 23	0913744-9	NUT-JAM	6	

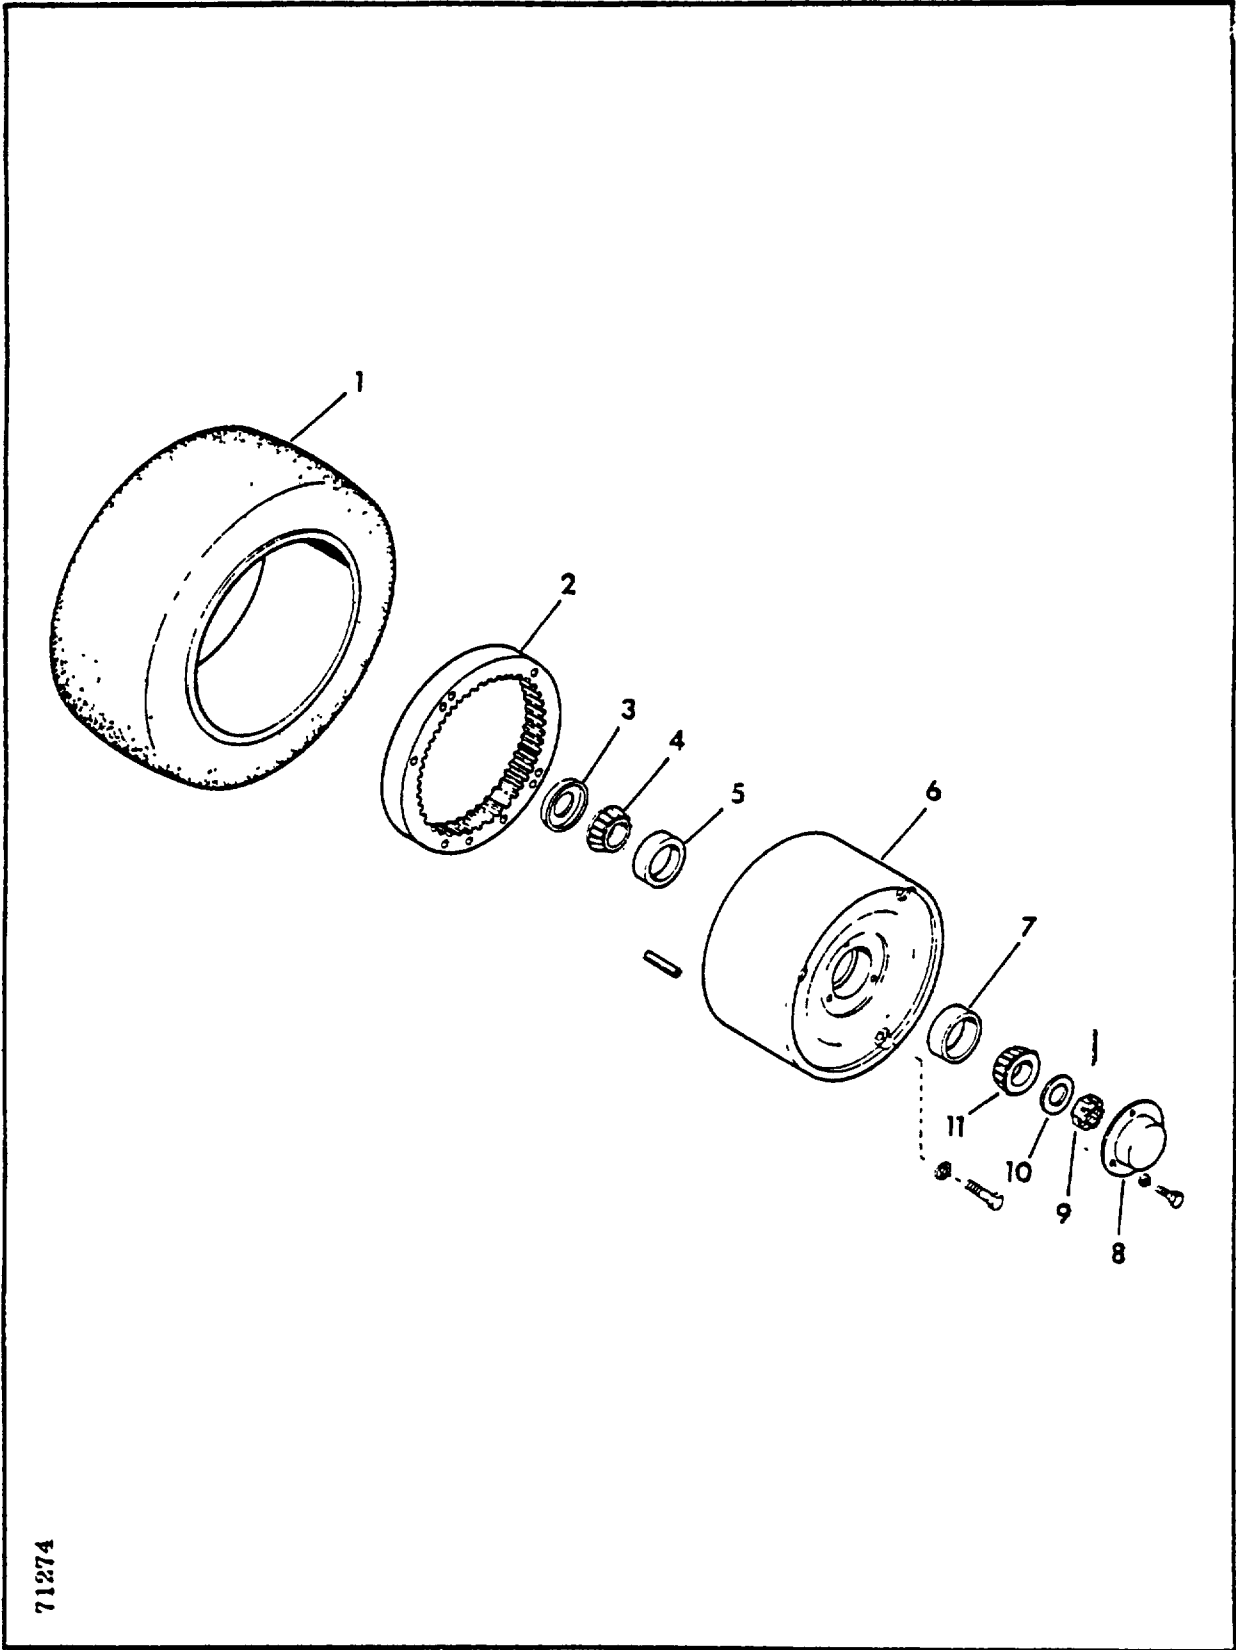

71274

DRIVE WHEEL


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4713963-9	TIRE 18X8X12.13	2	144" LIFT
	4818915-3	TIRE 18X9X12.13	2	180" LIFT
2	4795693-3	GEAR	2	
	0918782-4	PIN-ROLL	6	
	0921973-4	CAPSCREW	6	144" LIFT
	0915990-6	CAPSCREW	6	180" LIFT
	0916965-7	LOCKWASHER	6	144" LIFT
	0904206-0	LOCKWASHER	6	180" LIFT
3	4707059-4	SHIELD	2	
4	4253050-1	CONE-INNER	2	
5	4250061-1	CUP-INNER	2	
6	4761006-8	WHEEL-DRIVE	2	
	0924060-7	PIN-STRAIGHT .44" X .25" LONG	6	
7	4254038-5	CUP-OUTER	2	
8	4706891-1	CAP-HUB	2	
	0921S65-0	CAPSCREW-.38"-15 X .75"	6	
	0916803-0	LOCKWASHER-INT-.381"	6	
9	0929607-0	NUT-SLOTTED-JAM 1.25"-12	2	
	0925719-7	PIN-COTTER-.25" X 2.25"	2	
10	1755930-7	WASHER	2	
11	A254037-7	CONE-OUTER	2	

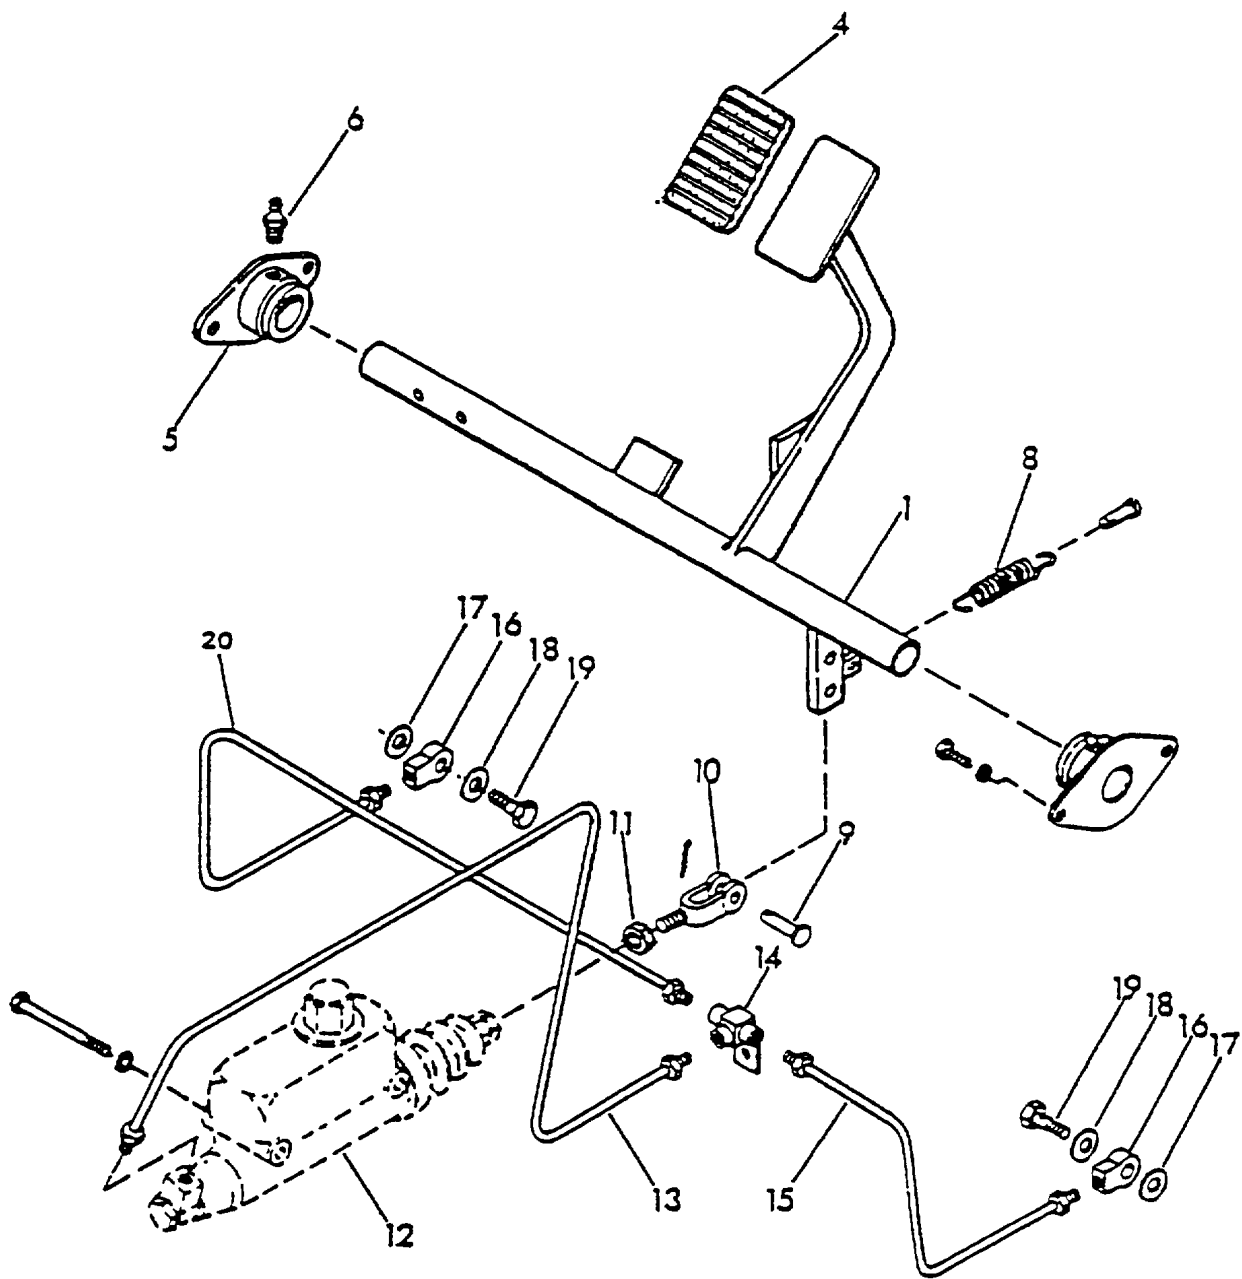

BRAKE PEDAL

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4857358-8	PEDAL ASSY	1	INCL ITEM 2
2	4707331-7	BUSHING NOT USED	2	
3	0915274-5	FITTING- LUBE- NOT USED	1	
4	4824664-9	PAD	1	
	0917356-8	LOCKWASHER - .31" NOT USED	1	
	0920438-9	NUT- .31" -24 NOT USED	1	
5	4832715-9	BEARING- SELF- ALIGNING	2	INCL FITTING
6	0914465-0	FITTING- LUBE- STRAIGHT- .12" PT	2	
	0922586-3	CAPSCREW- .38" -16 X -.75"	4	
	0916965-7	LOCKWASHER- .38"	4	
7	4832342-2	SHAFT NOT USED	1	
	0921969-2	CAPSCREW- .38" -16 X 1.5" NOT USED	1	
	0916965-7	LOCKWASHER- .38" NOT USED	1	
8	4737295-8	SPRING- PEDAL RETURN	1	
			1	
9	0929592-4	PIN- YOKE- .44" X 1.19"	1	
	0918447-4	PIN- COTTER- .09" X .75"	1	
10	4784720-7	YOKE	1	
11	0922471-8	NUT- .44" -20	1	
12	4713374-9	CYLINDER- MASTER	1	SEE PAGE 97
	0922918-8	CAPSCREW- .38" -16 X 4.50"	2	
	0916965-7	LOCKWASHER- .38"	2	
13	4862532-1	LINE-CYLINDER TO TEE	1	
14	4710934-3	TEE	1	
15	4774533-6	LINE- L H	1	
16	4708310-0	FITTING	2	
17	4708319-i	GASKET- FITTING	2	
18	4708313-3	GASKET- BOLT	2	
19	4708313-4	BOLT- FITTING	2	
20	4774537-7	LINE- R H	1	
	0930233-2	CLAMP	1	


R

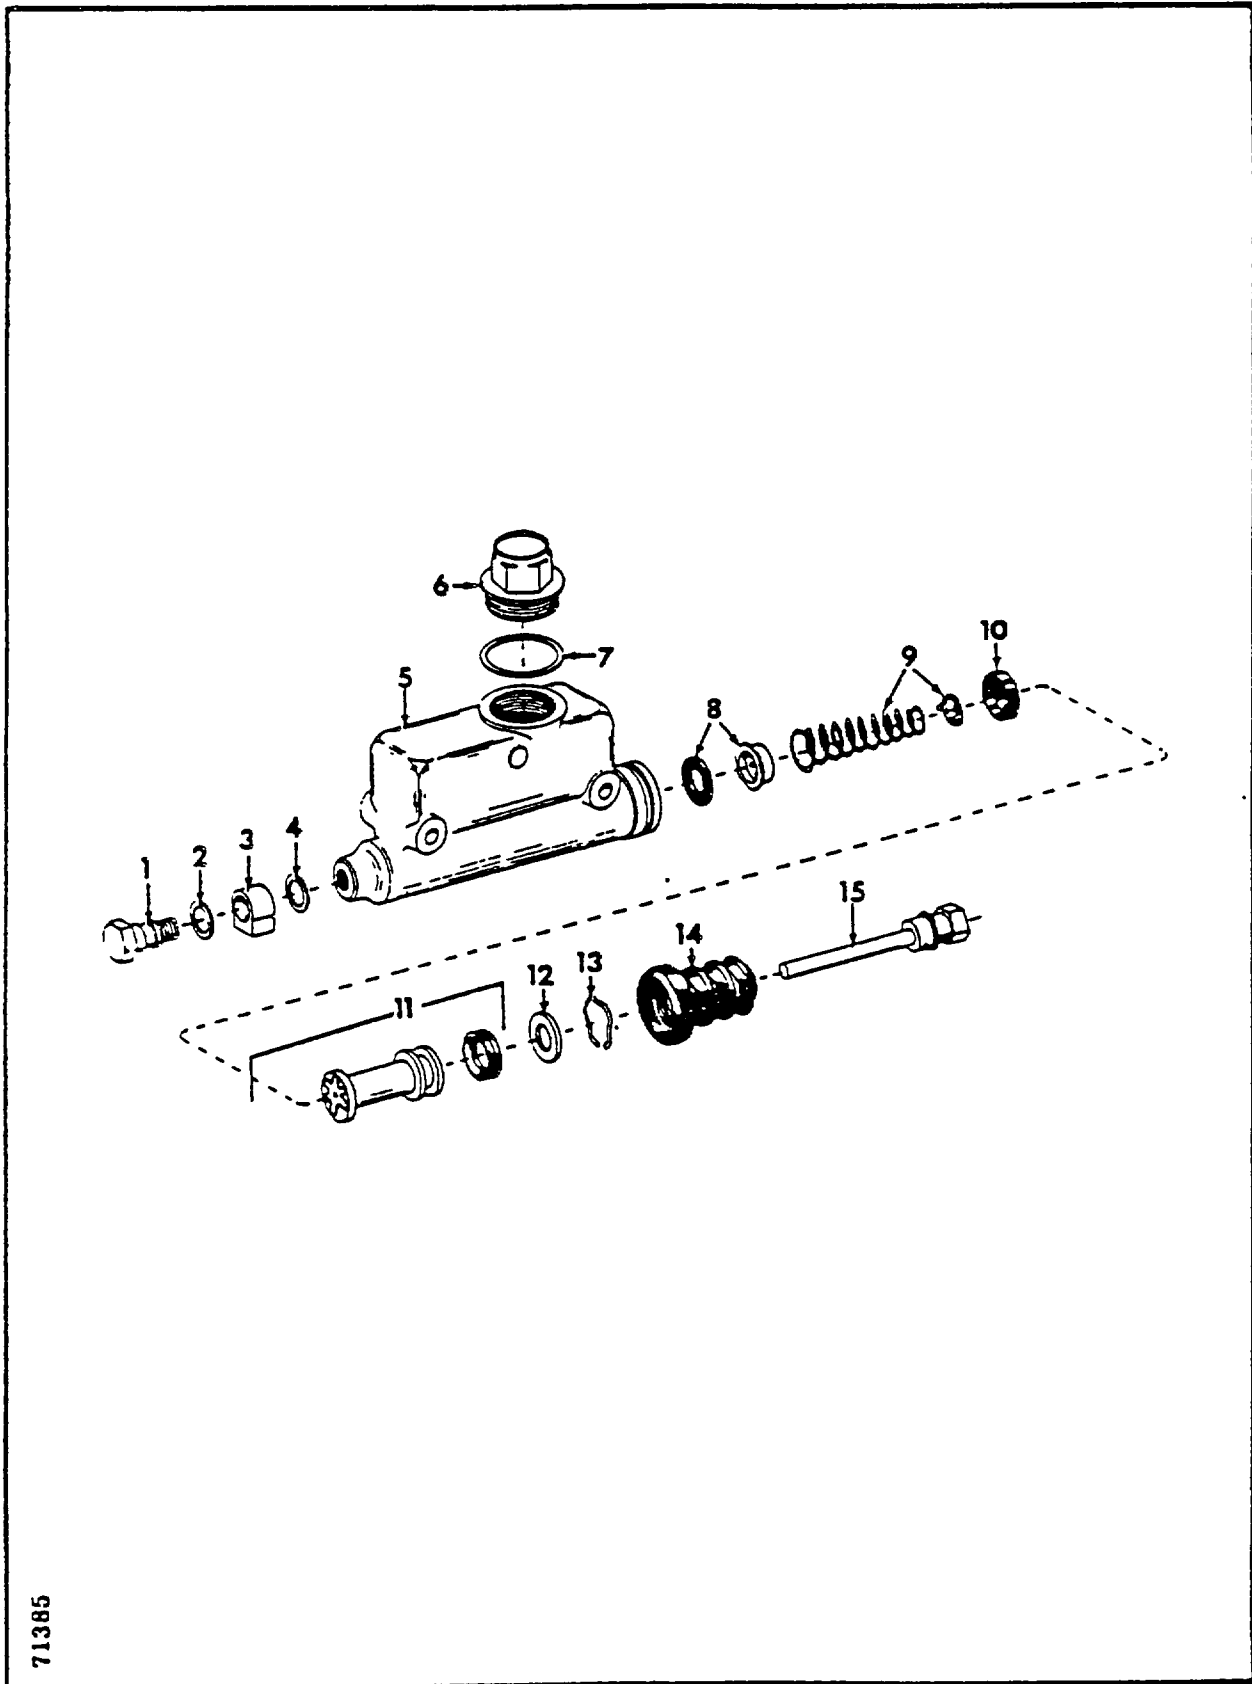

71385

BRAKE MASTER CYLINDER - 4713374-9

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4708313-4	BOLT - FITTING	1	
2	4708319-1	GASKET - BOLT	1	
3	4741699-5	FITTING-OUTLET	1	
4	4708318-3	GASKET - FITTING	1	
5	NSS	BODY - CYLINDER	1	ORDER ASSY 4713374-9
6	4984159-6	CAP - FILLER	1	
7	4981084-9	GASKET - CAP	1	
8	4984141-4	* VALVE ASSY	1	INCL SEAL
9	4984142-2	SPRING ASSY - PISTON	1	INCL RETAINER
10	4984152-9	* CUP - PISTON	1	
11	4984153-9	* PISTON ASSY	1	
12	4984155-4	* PLATE - STOP	1	
13	4984156-2	* LOCK	1	
14	4984157-0	* BOOT	1	
15	4984158-8	ROD - PISTON	1	
16	4984201-6	KIT - REPAIR	1	INCL ITEMS MARKED *
		* SERVICED ONLY WITH ITEM 16		

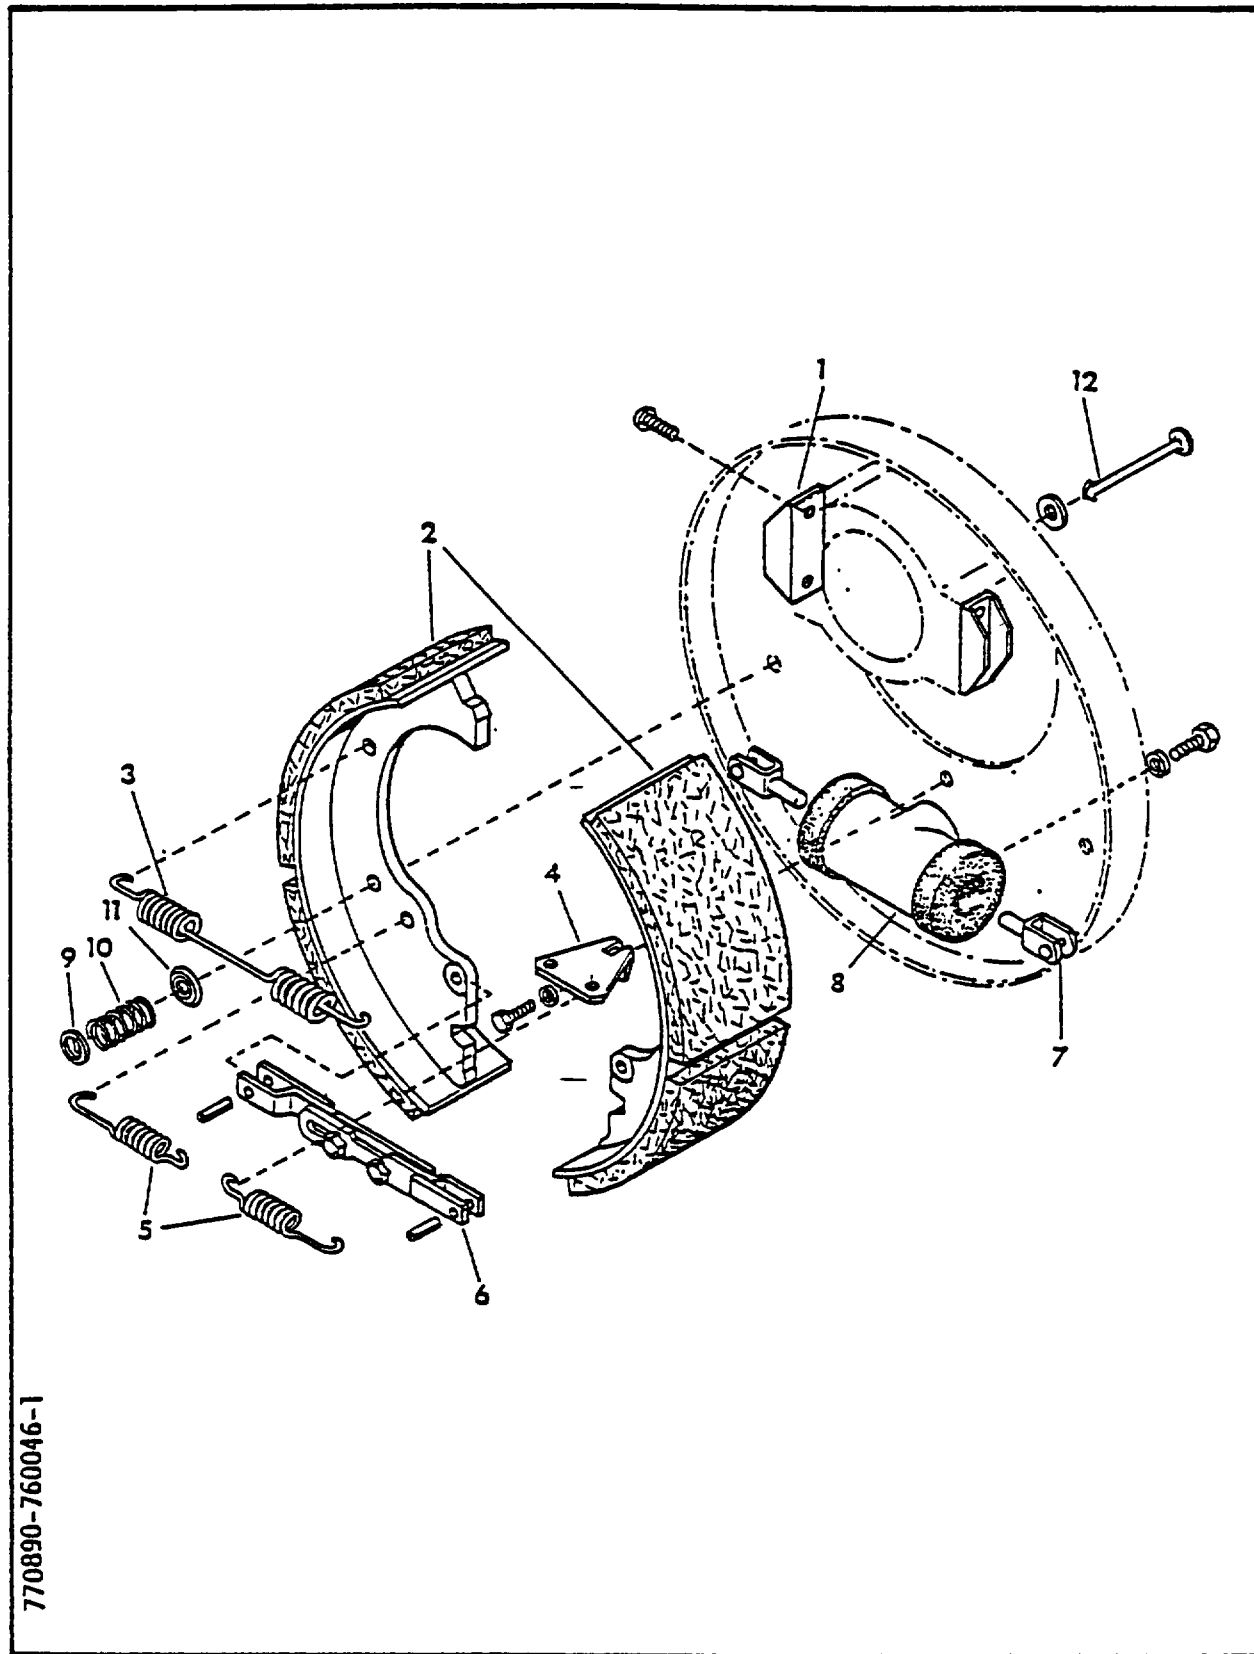


770890-760046-1

DRIVE WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY.
1	4808402-4	PLATE-WEAR	4
	0933281-8	SCREW-BTN HD-.25"-20 X .63"	8
2	4873421-4	SHOE & LINING ASSY	4
3	4719642-3	SPRING	2
4	4769886-5	BRACKET	2
	0912264-9	CAPSCREW-.31"-18 X 1.00"	2
	0917356-8	LOCKWASHER-.31"	2
5	4769885-7	SPRING	4
6	4769887-3	SLIDE ASSY	2
	0916169-6	PIN-SPRING-19" X .75"	4
7	4707307-7	LINK	4
8	4717072-5	CYLINDER ASSY-WHEEL	2
	0921966-8	CAPSCREW-.38"-16 X .88"	4
	0916965-7	LOCKWASHER-.38"	4
R 9	4765162-5	CUP-RETAINER	4
R 10	4906137-7	SPRING-HOLDDOWN	4
R 11	4906136-9	CUP-SPRING	4
R 12	4906135-1	PIN-HOLDDOWN	4
	0920380-3	WASHER-.28" X 1.50"	4

SEE PAGE 101

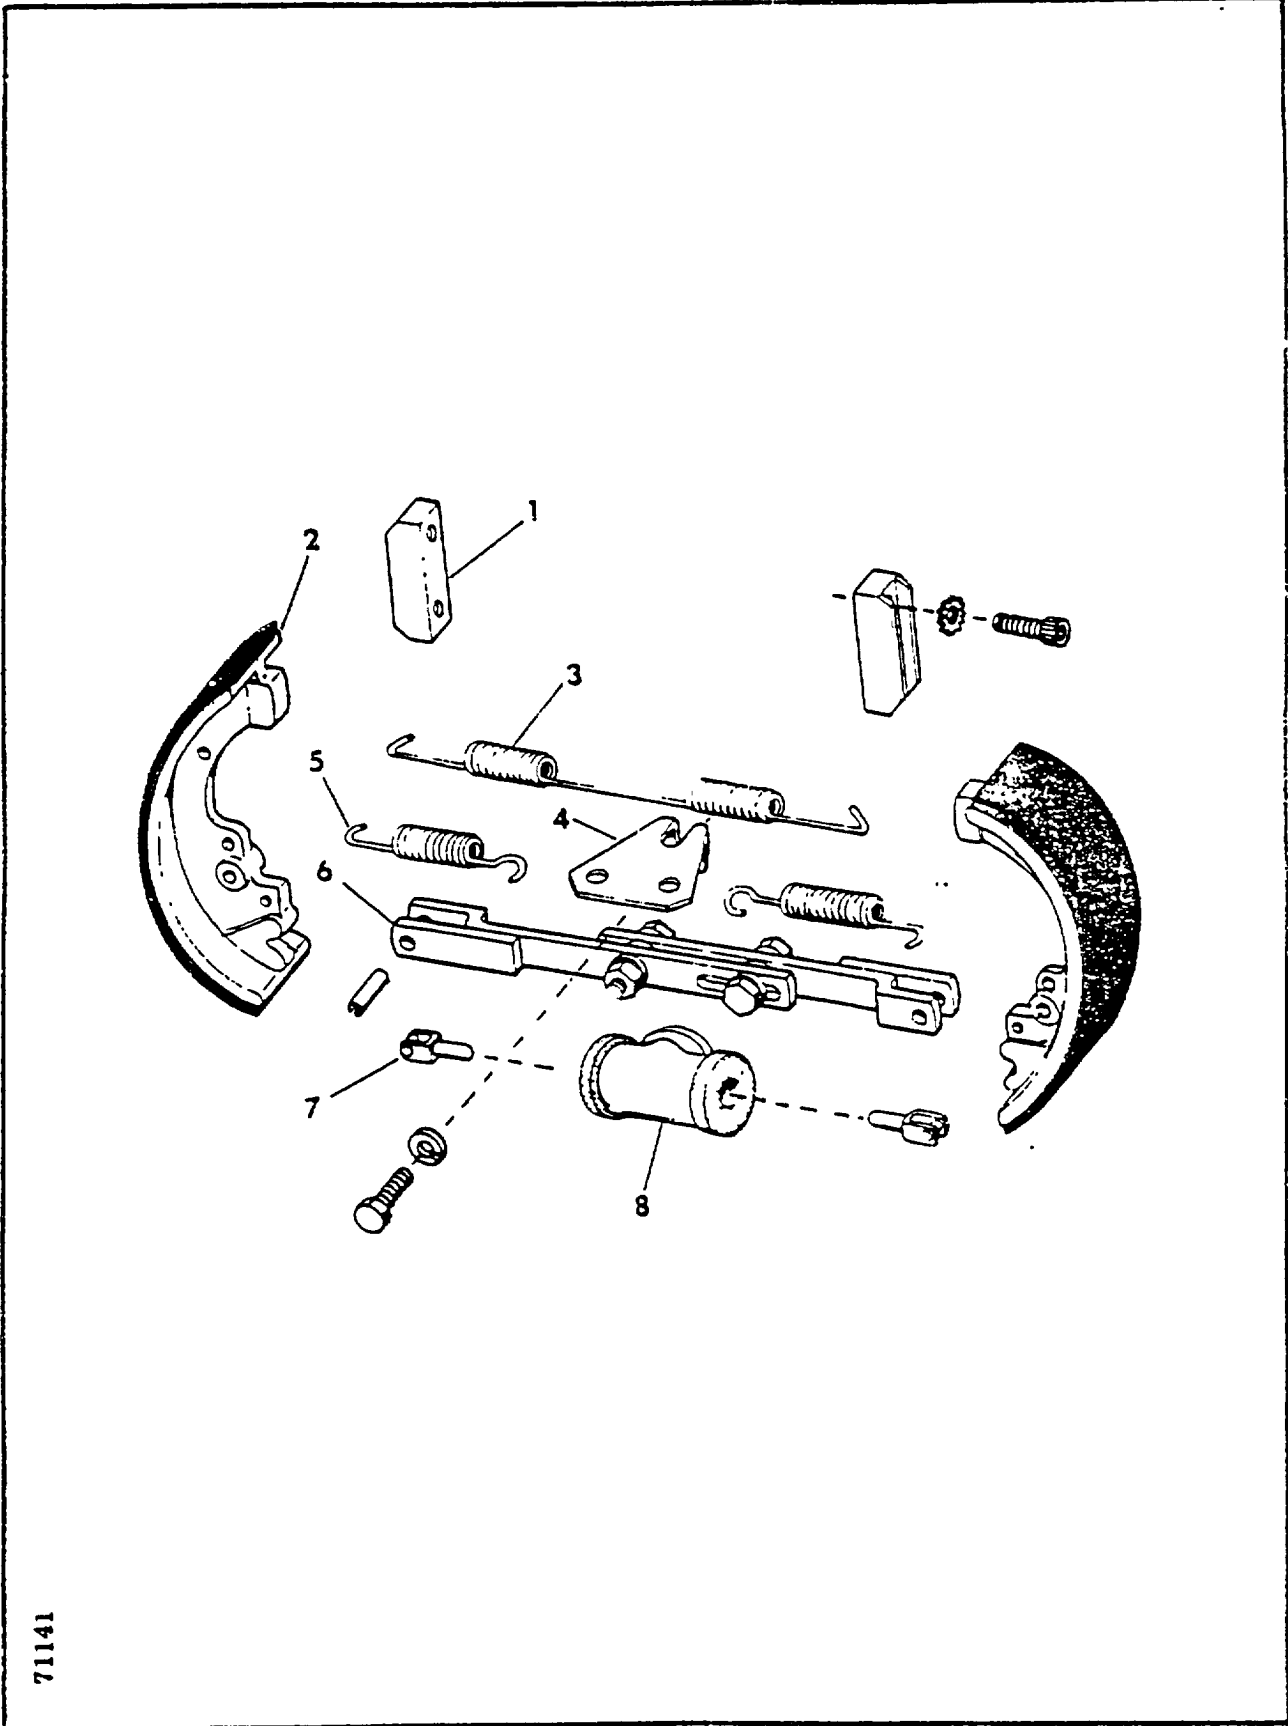


71141

DRIVE WHEEL BRAKES

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4808402-4	WEAR PLATE	4	
	0922062-5	SCREW- TWELVE PT- .25" -20 X .62"	8	
	4710809-7	LOCKWASHER	8	
2	4807349-8	SHOE & LINING ASSY	4	
3	4707255-8	SPRING	2	
4	4769886-7	BRACKET	2	
	0912264-9	CAPSCREW- HEX SOC - .31" 18 X 1"	2	
	0917356-8	LOCKWASHER - .31"	2	
5	4769885-7	SPRING	4	
6	4769887-3	SLIDE ASSY	2	
	4906135-1	PIN- SPRING - .19" X .75"	4	
7	4707307-7	LINK	4	
8	4717307-5	CYLINDER ASSY- WHEEL	2	
	0921966-8	CAPSCREW- .38" -16 X .88"	4	
	09169555-7	LOCKWASHER - .38"	4	
	0916604-2	CAPSCREW	2	
	0914192-0	NUT	2	
	0916964-0	LOCKWASHER	2	
	0911982-7	WASHER	2	
	4765164-6	PLUG	2	

SEE PAGE 101

71141

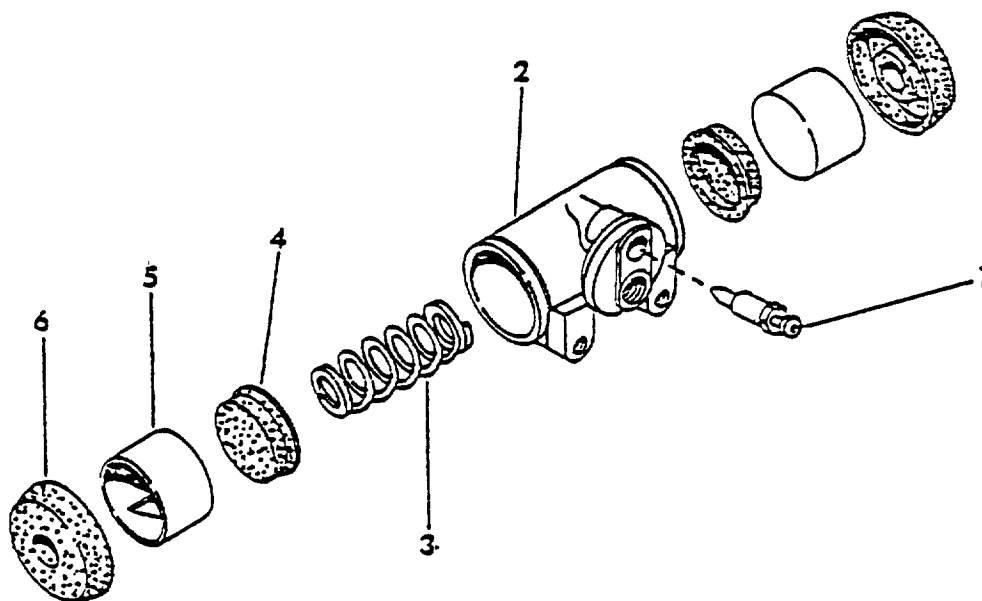


770801-53711-1

WHEEL CYLINDER - 4717072-5

ITEM	PART NO.	DESCRIPTION	QTY.
1	4981769-5	BLEEDER	1
2	4981289-4	BODY	1
3	4981290-2	SPRING	1
4	4981291-0	* CUP-PISTON	2
5	4981292-8	PISTON	2
6	4987791-3	* BOOT	2


* INCLUDED IN KIT 4987792-1

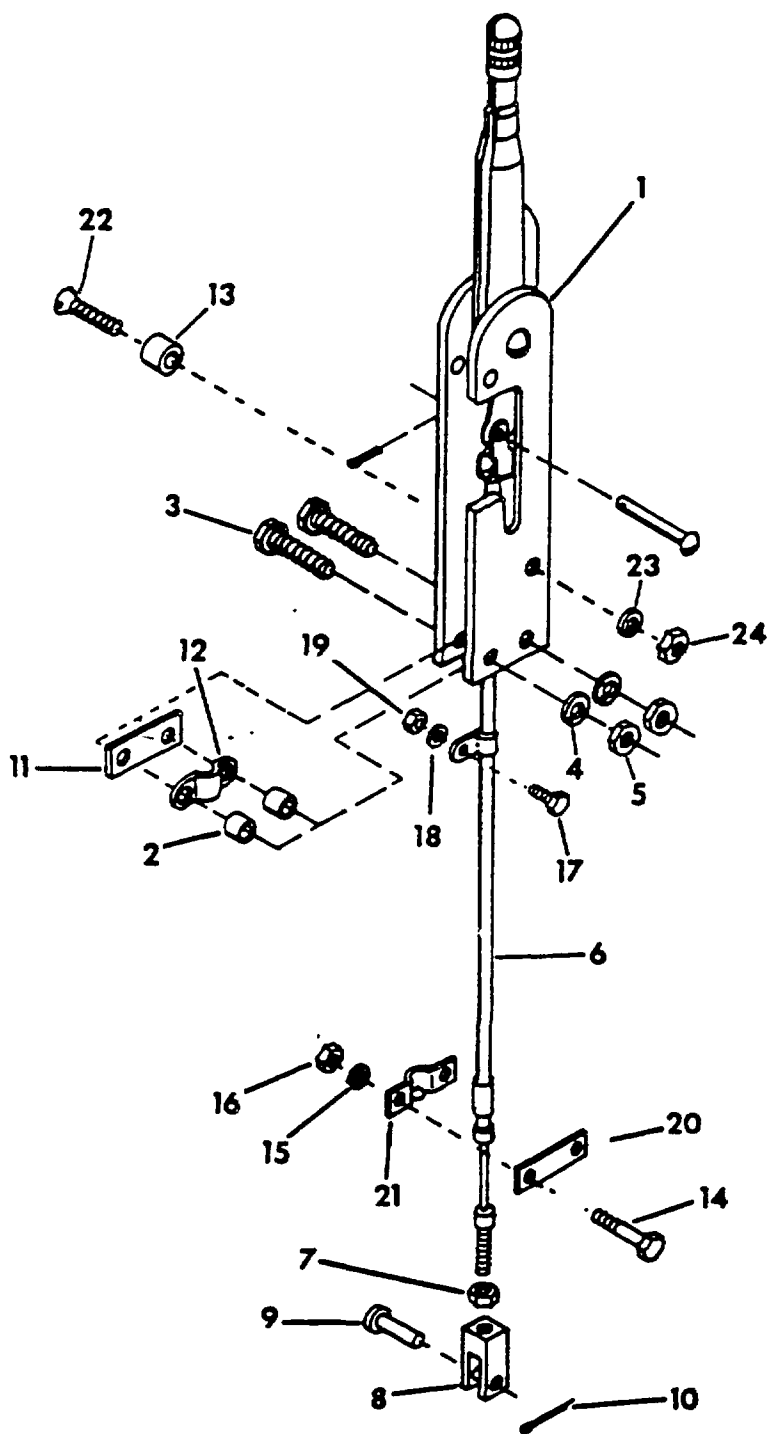

PARKING BRAKE LEVER

ITEM	PART NO.	DESCRIPTION	QTY.
1	4722511-5	LEVER	1
2	4707401-8	SPACER-NOT USED	2
3	0921332-3	CAPSCREW- .312-18 X .75	1
4	0917356-8	LOCKWASHER- .31"	1
5	4255481-6	NUT-SPLINE .31"-18	2
6	4861162-8	CABLE-BRAKE	1
7	0916602-6	NUT- .38"-24	1
8	0924121-7	YOKE- .38"	1
9	0923087-1	PIN-YOKE- .38"	1
10	0900942-4	PIN-COTTER- .06" X 1"	1
11	4507415-0	PLATE	1
12	4750202-6	CLAMP	1
13	4750203-4	SPACER	2
14	0921221-8	CAPSCREW- .31"-18 X 1.5"	2
15	0917356-8	LOCKWASHER- .31"	2
16	0917372-5	NUT- .31"-18	2
17	0921160-8	CAPSCREW	2
18	0920426-4	LOCKWASHER	2
19	0917372-5	NUT	2
20	4709110-3	SPACER	2
21	4750202-6	CLAMP	1
22	0921221-8	CAPSCREW- .31"-18 X 1.25"	2
23	0917356-8	LOCKWASHER- .31"	2
24	0917372-5	NUT- .31"-18	2
	4507415-0	CLAMP	1


NOT ILLUSTRATED

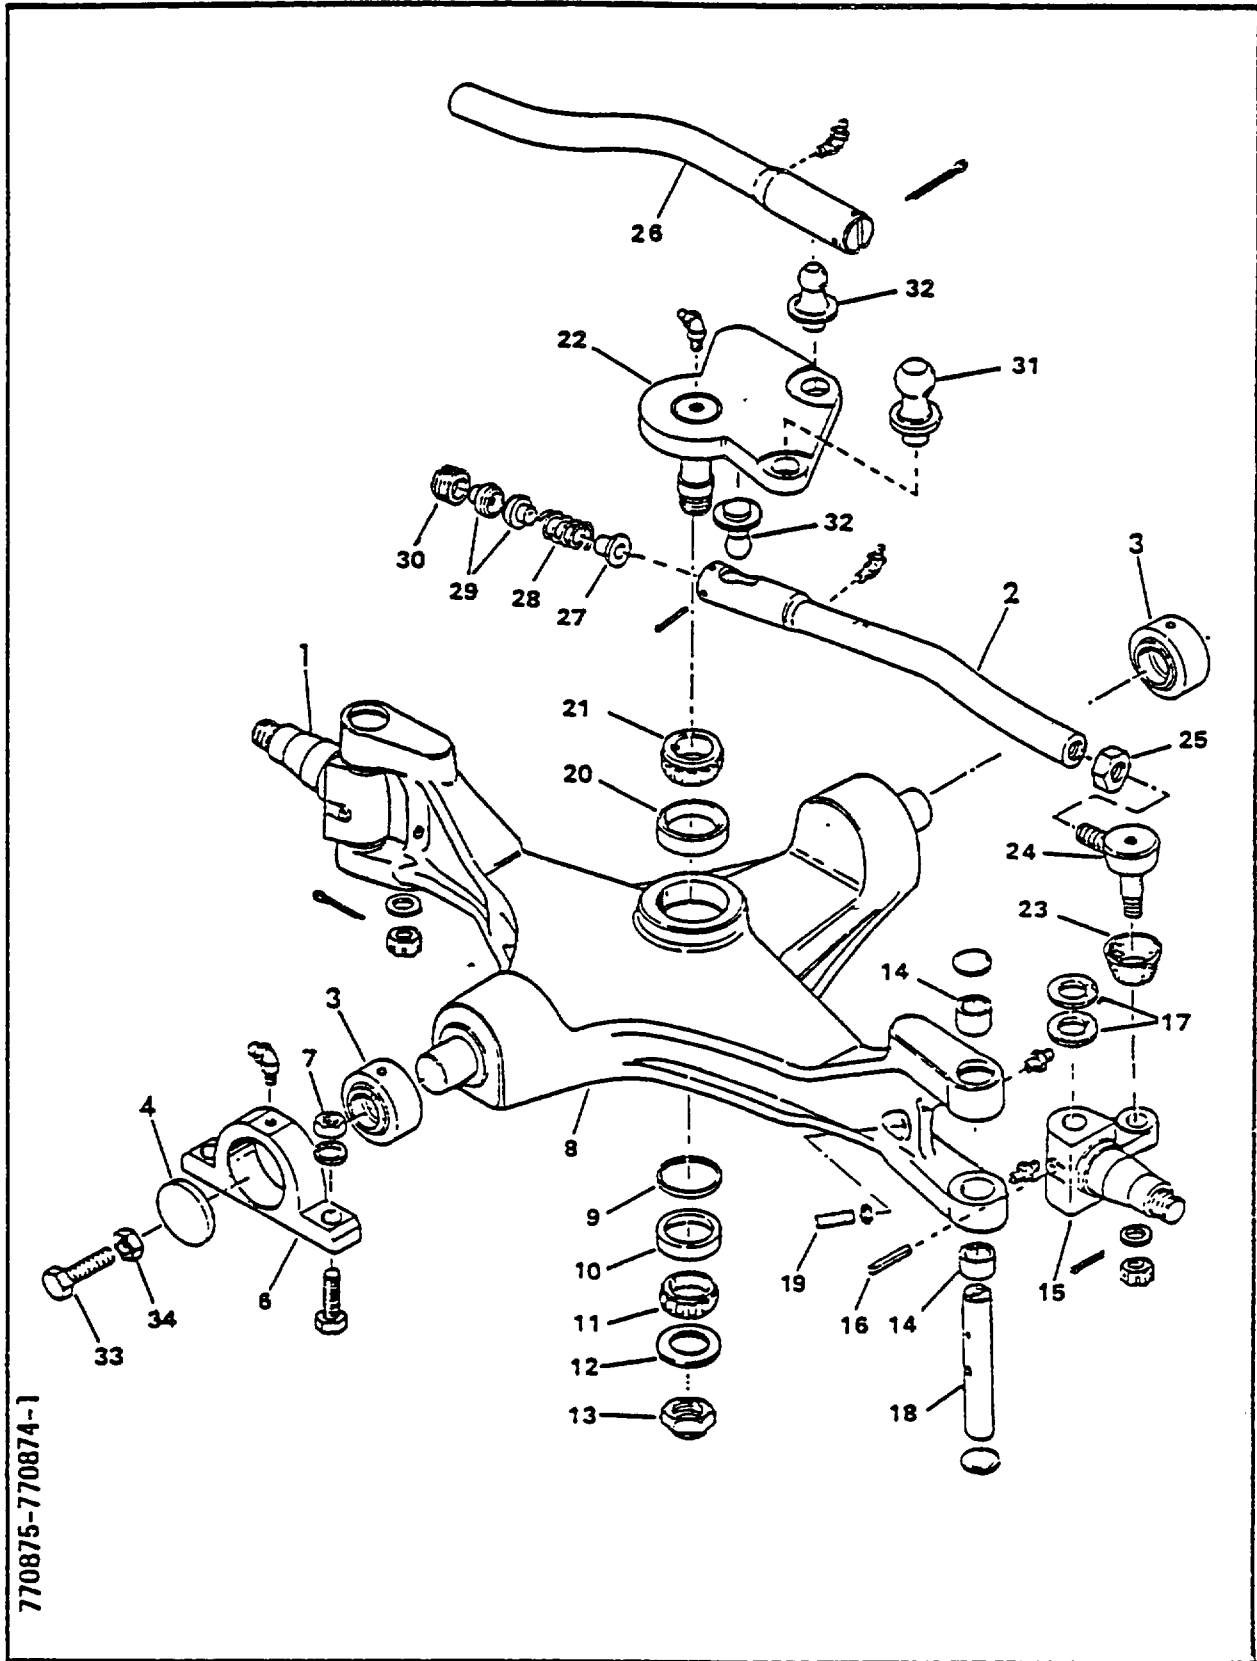

770875-770874-1

STEER AXLE


ITEM	PART NO.	DESCRIPTION	QTY.
-	4805495-1	AXLE ASSY., (INCL ITEMS 1 & 2, 7 THRU 30)	1
1	4806774-8	SPINDLE, L.H.	1
2	4806776-3	ROD, TIE, L.H. (INCL ITEMS 23, 24,25,27,28,29 & 30)	1
	0911100-6	WASHER, 5/8"	1
	0915538-3	FITTING, LUBE, 65°, 1/4"-28NS	1
	0900809-5	PIN, COTTER, 1/8" X 1-3/4"	1
	0900807-9	PIN, COTTER, 1/8" X 1-1/2"	1
	0914465-0	FITTING, LUBE, STRAIGHT, 1/4" PT	1
3	4806763-1	BUSHING, SELF-ALIGNING BALL	2
4	4839231-0	SPACER	1
5	NOT USED		
6	4841556-6	HOUSING, AXLE MOUNTING	1
	0925387-3	CAPSCREW, 3/4" NC X 4"	4
	0919332-7	LOCKWASHER, 3/4"	4
	0922212-6	FITTING, LUBE, 900 -1/8" PT	2
7	0913160-8	NUT, 3/4" NC	4
8	4817768-7	AXLE ASSY., STEER	1
9	4255823-9	RING, SNAP	1
10	4255821-3	CUP, LOWER BEARING	1
11	4255822-1	CONE, LOWER BEARING	1
12	0922047-4	WASHER	1
13	4806772-2	NUT, PIVOT ARM RETAINING	1
14	0930384-3	BEARING, NEEDLE	4
15	4806773-0	SPINDLE, R.H.	1
16	0926243-7	PIN, ROLL	2
17	4844327-9	BEARING, THRUST	4
18	4806775-5	PIN, KING	2
	0922887-5	FITTING, LUBE, STRAIGHT, 1/8" PT	4
	0910014-0	PLUG, EXPANSION, 1-1/2"	
19	0919350-9	SETSCREW, LIMIT STOP, HEX SOC. OVAL POINT, 1/2" NC X 2"	2
	0910510-7	NUT, 1/2" NC	2
20	4255819-7	CUP, UPPER BEARING	1
21	4255820-5	CONE, UPPER BEARING	1
22	4806811-8	ARM ASSY., PIVOT (INCL BALL STUDS)	1
	0915276-0	FITTING, LUBE, 900 -1/8" PT	1
23	4992358-4	COVER	2
	4995266-6	SOCKET, BALL, L.H.	1
24	4992361-8	SOCKET, BALL, R.H.	1
	0918270-0	NUT, 5/8" NF	2
25	4987758-2	NUT	2
26	4806777-1	ROD, TIE, R.H. (INCL ITEMS 23,24 25,27,28,29 & 30)	1
	0911100-6	WASHER, 5/8"	1
	0915538-3	FITTING, LUBE, 650 -1/4"-28NS	1
	0914465-0	FITTING, LUBE, STRAIGHT, 1/4" PT	1
	0900809-5	PIN, COTTER, 1/8" X 1-3/4"	1
	0900807-9	PIN, COTTER 1/8" X 1-1/2"	1

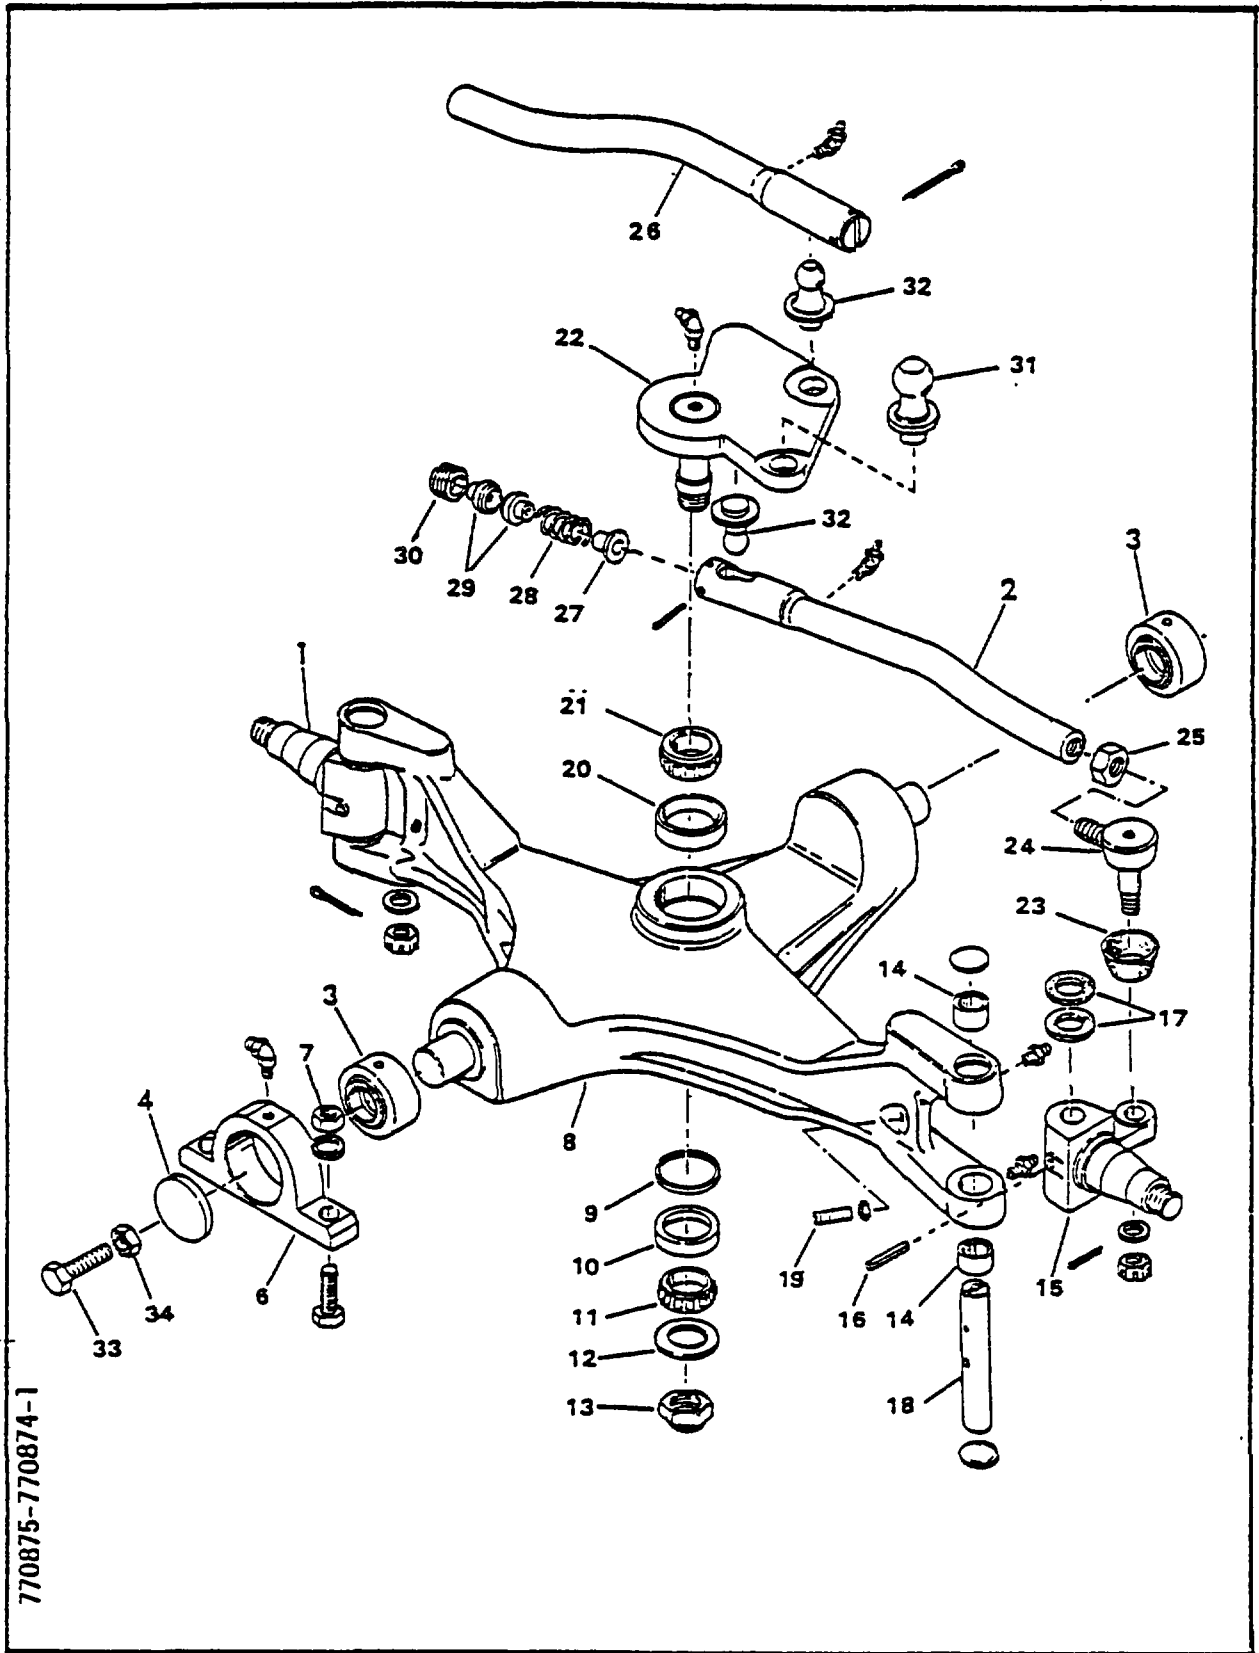

770875-770874-1

STEER AXLE (CONTINUED)


ITEM	PART NO.	DESCRIPTION	QTY.
	0918748-5	WASHER, 5/8"	1
	0915538-3	FITTING, LUBE, 65° -1/4"-28NS	1
	0918748-5	PIN, COTTER,	1
27		NOT USED	
28	4781446-2	SPRING	2
29	4769247-0	SEAT, BALL	2
30	4769248-8	PLUG, ADJUSTING	2
31	4807684-8	STUD, BALL (DRAG LINK)	1
32	4807682-2	STUD, BALL (STEER LINK)	2
	0923464-2	SCREW .75-10 X 3.00	1
	0919332-7	LOCKWASHER .75-10	1
	0922037-7	NUT JAM .75-10	1
	0927933-2	SEAL UPPER	1
	0927932-4	SEAL LOWER	1

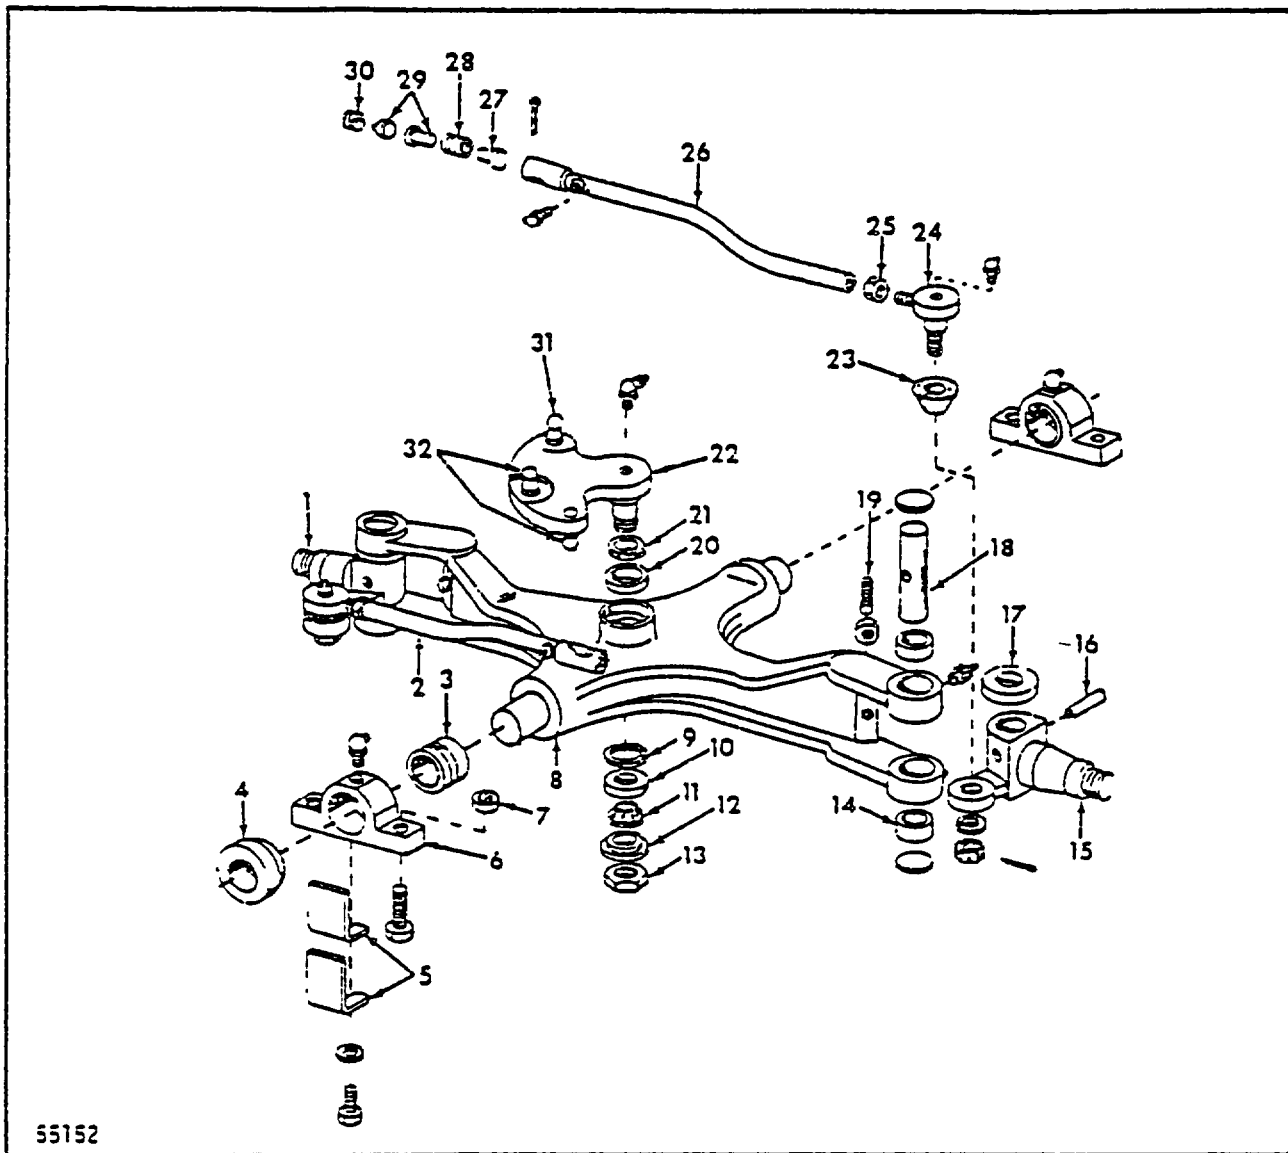

55152

STEER AXLE


ITEM	PART NO.	DESCRIPTION	QTY.
-	4831978-4	AXLE ASSY., (INCL ITEMS 1 & 2, 7 THRU 30)	1
1	4808397-6	SPINDLE, L.H.	1
2	4767762-0	ROD, TIE, L.H. (INCL ITEMS 23, 24,25,27,29,29 & 30)	1
	0918748-5	WASHER, 5/8"	1
	0915538-3	FITTING, LUBE, 65S, 1/4"-28NS	1
	0918453-2	PIN, COTTER,	1
3	4854976-0	BUSHING, SELF-ALIGNING BALL	2
4	4856523-6	SPACER	1
5	NOT USED		
6	4856621-0	HOUSING, AXLE MOUNTING	1
	0929531-2	CAPSCREW, .50-20 X 3.00	2
	0916966-5	LOCKWASHER, .50	2
	0922212-6	FITTING, LUBE, 90° - 1/8" PT	2
7	0919423-4	NUT, .50-20	2
8	4830998-3	AXLE ASSY., STEER	1
9	4811824-	RING, SNAP	1
R10	0927436-6	CUP, LOWER BEARING	1
11	0927437-4	CONE, LOWER BEARING	1
12	0931314-9	WASHER	1
13	4803392-7	NUT, PIVOT ARM RETAINING	
14	4253263-0	BEARING, .NEEDLE	4
15	4808396-8	SPINDLE, R.H.	1
16	0926243-7	PIN, ROLL	2
17	844'078-8	BEARING, THRUST	4
18	4808398-4	PIN, KING	2
	0922887-5	FITTING, LUBE, STRAIGHT, 1/8" PT	5
	0910014-0	PLUG, EXPANSION, 1-1/2"	1
19	0919350-9	SETSCREW, LIMIT STOP, HEX SOC. OVAL POINT, 1/2" NC X 2"	2
	0910510-7	NUT, 1/2" NC	2
20	0927-34-1	CUP, UPPER BEARING	1
21	0927435-8	CONE, UPPER BEARING	1
22	4831977-6	ARM ASSY., PIVOT (INCL BALL STUDS)	1
	0915275-2	FITTING, LUBE, 90° -1/8" PT	2
23	4992397-2	COVER	2
24	4992395-4	SOCKET, BALL,	2
	0917361-8	NUT, 5/8" NF	2
25	NOT USED		
26	4767763-8	ROD, TIE, R.H. (INCL ITEMS 23,24 25,27,28,29 & 30)	1

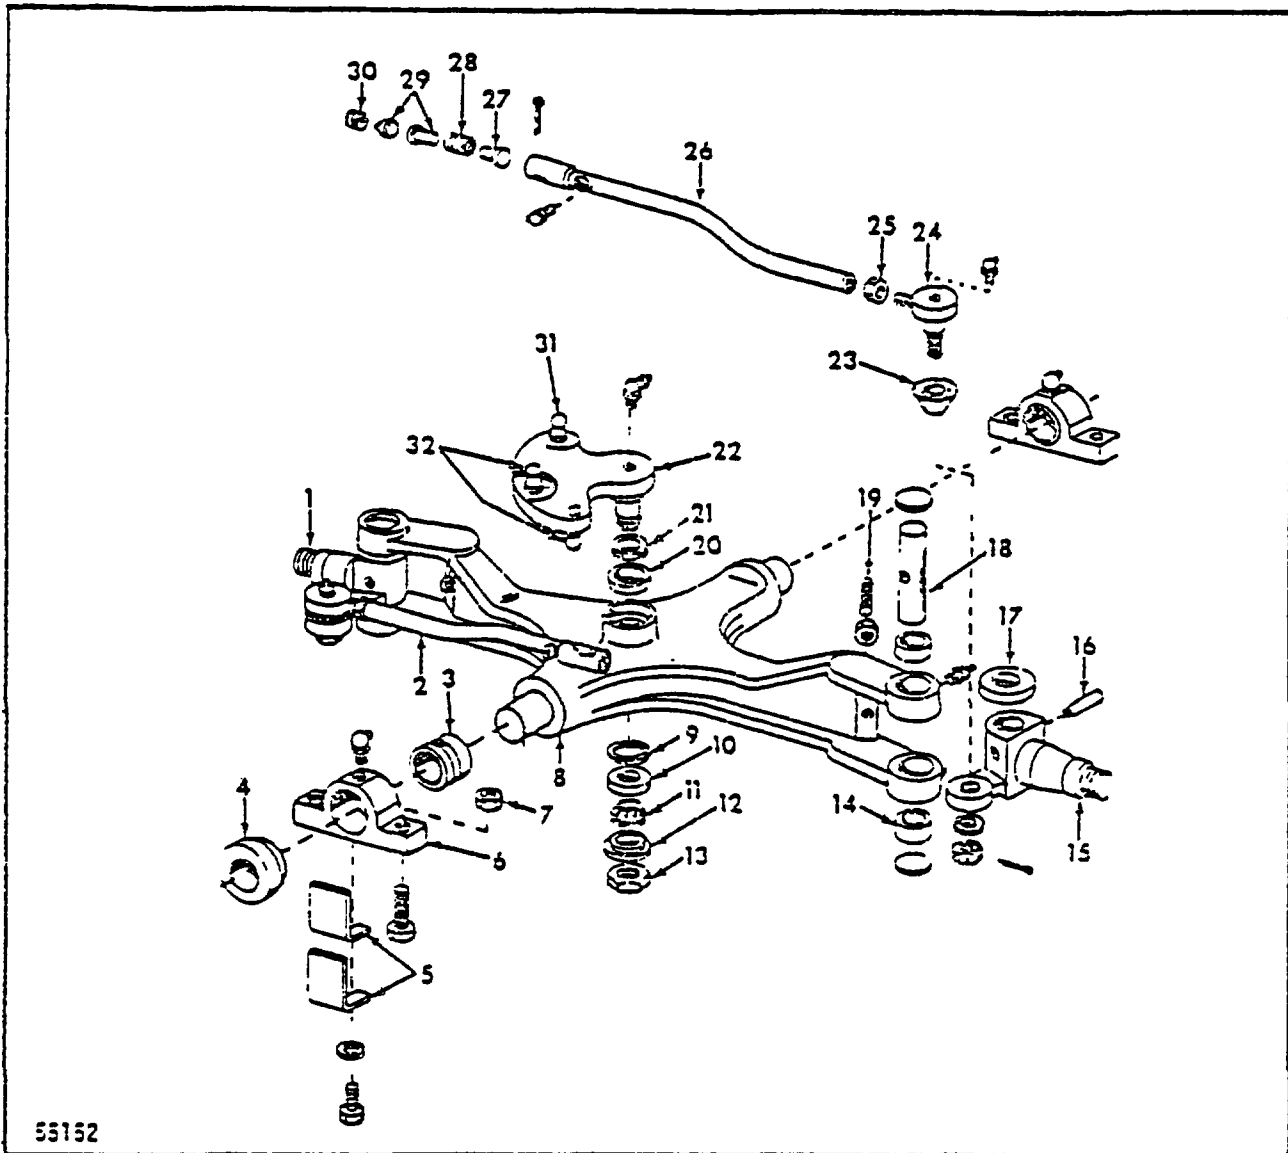

55152

STEER AXLE (CONTINUED)


ITEM	PART NO.	DESCRIPTION	QTY.
27	4981980-8	PLUG, SAFETY	2
28	4981979-0	SPRING	2
29	4981981-6	SEAT, BALL	4
30	4981978-1	PLUG, ADJUSTING	2
31	4807684-8	STUD, BALL (DRAG LINK)	1
32	4807682-2	STUD, BALL (STEER LINK)	2
	4254986-5	SEAL GREASE	2
R 33	0924344-5	CAPSCREW-.75"-10 X 4.5"	1
R 34	0922037-7	NUT-JAM-.75"-10	1

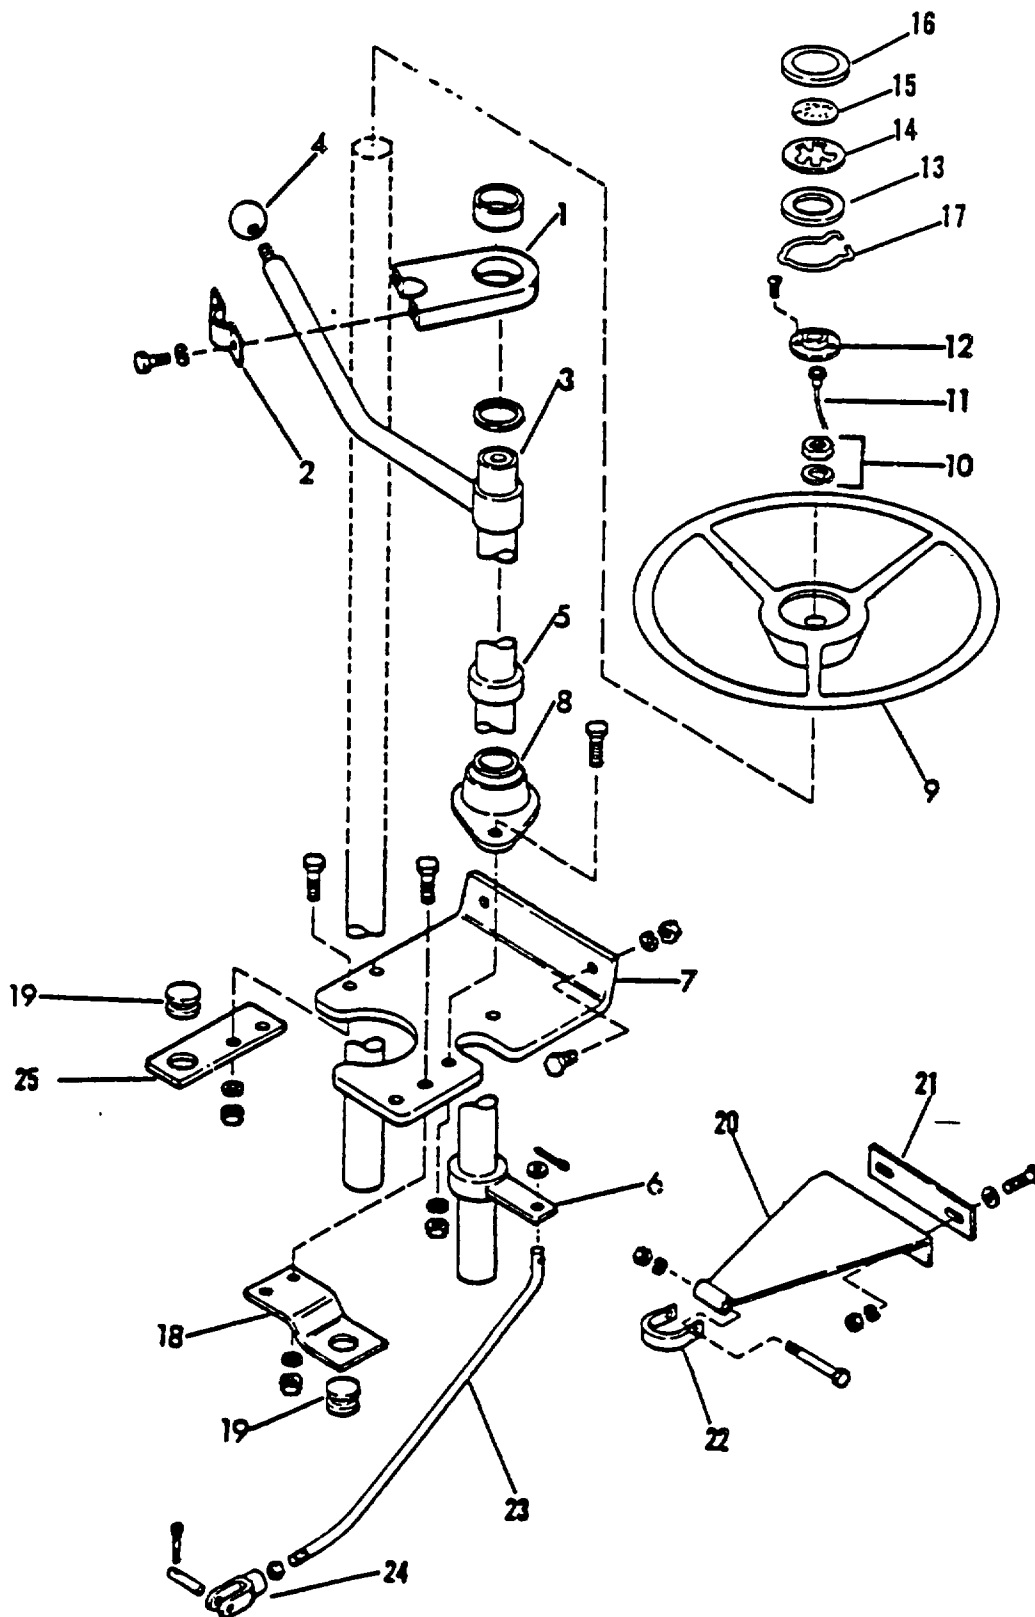

SHIFTING ASSY - POWER SHIFT


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4861046-3	BRACKET ASSY- UPPER	1	INCL BUSHING
	4847462-1	BUSHING- 1.12" ID X 1.38" OD X .75"	1	
2	4827968-1	CLAMP- STEER COLUMN	1	
	0923341-2	CAPSCREW- .25" -20 X .75"	2	
	0916964-0	LOCKWASHER- .25"	2	
3	4861170-1	LEVER- SHIFTING	1	
4	0233770-7	KNOB	1	
5	4840790-2	COLLAR- SHIFTING	1	INCL CLAMPING SCREW
6	4851222-2	LEVER	1	INCL CLAMPING SCREW
7	4857173-1	BRACKET	1	
	0923903-9	CAPSCREW- .375-16 X 1.5	2	
	0916965-7	LOCKWASHER-	2	
8	4832715-9	BEARING- FLANGE	1	
	0923325-5	CAPSCREW- .31" -18 X .88"	2	
	0917356-8	LOCKWASHER- .31"	2	
	0917372-5	NUT- .31" -18	2	
9	4709816-5	WHEEL- STEERING	1	
10	4785070-6	NUT	1	
	0919426-7	LOCKWASHER- .88"	1	
11		NOT USED		
12	4801466-6	PLATE	1	
	0920102-1	SCREW- WOOD- #10 X .62"	3	
13	4801469-0	CUP	1	
14	4801473-2	SPRING	1	
15	4801471-6	DISK	1	
16	4801467-4	BUTTON	1	
17	4786328-7	LOCKWIRE	1	
18	4857059-2	STOP- BRAKE PEDAL	1	
	0921333-1	CAPSCREW- .31" -18 X .75"	4	
	0917356-8	LOCKWASHER- .31"	4	
19	4720549-7	GROMMET	2	
20	4857180-6	SUPPORT ASSY	1	
	0922130-0	CAPSCREW- .38" -16 X 2.25"	2	
	0916965-7	LOCKWASHER- .38"	2	
	0916950-9	NUT- .38" -24	2	
	4861032-3	SPACER	2	

CONTINUED

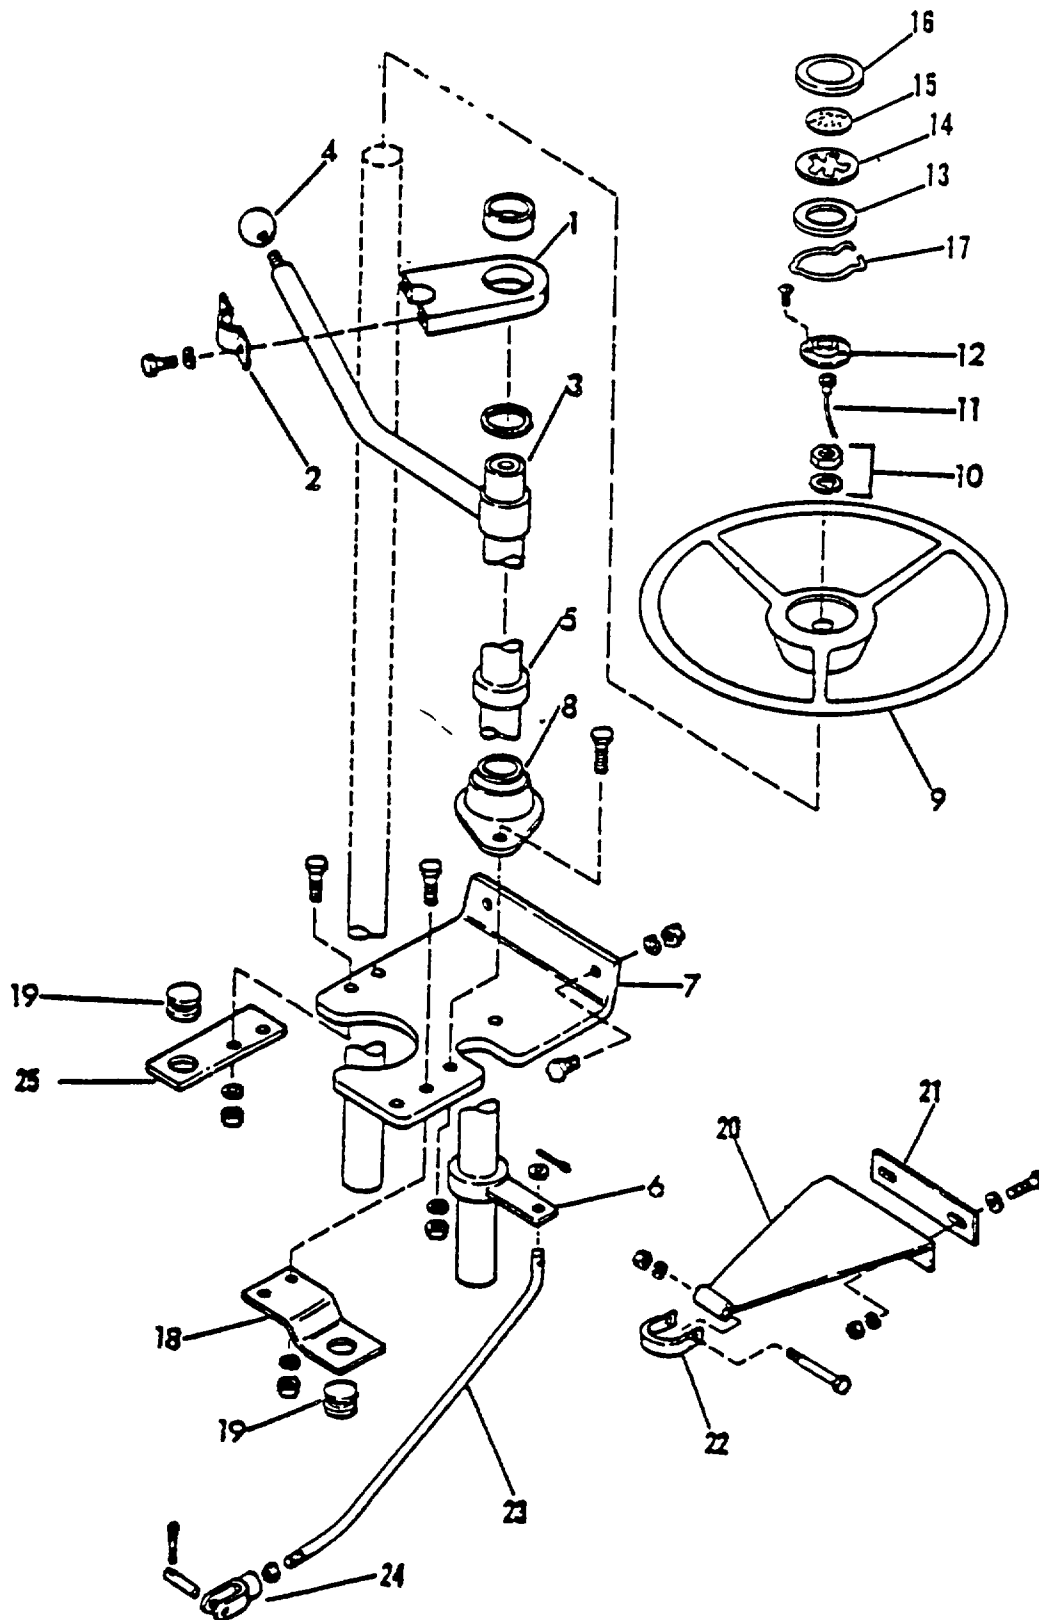

SHIFTING ASSY - POWER SHIFT (CONTINUED)

ITEM	PART NO.	DESCRIPTION	QTY.
21	4878146-2	SHIM	1
	0931528-4	CAPSCREW	2
	4255041-8	NUT - FLANGE	2
22	4765753-1	CLIP	1
	0922130-0	CAPSCREW	1
	0916965-7	LOCKWASHER	3
	0916950-9	NUT	3
	0931528-4	CAPSCREW	2
23	4858053-4	ROD- SHIFT	1
	0924293-2	WASHER- .34" X .75"	1
	0919313-7	PIN- COTTER- .09" X .5"	1
	0920438-9	NUT- .31" -24	1
24	4847561-0	YOKE	1
	0923093-9	PIN, YOKE	1
25	4857840-5	STOP INCH PEDAL	1
	4255521-9	CONNECTOR	1
	4830537-9	WIRE ASSEMBLY	2
	4408655-1	TERMINAL	1

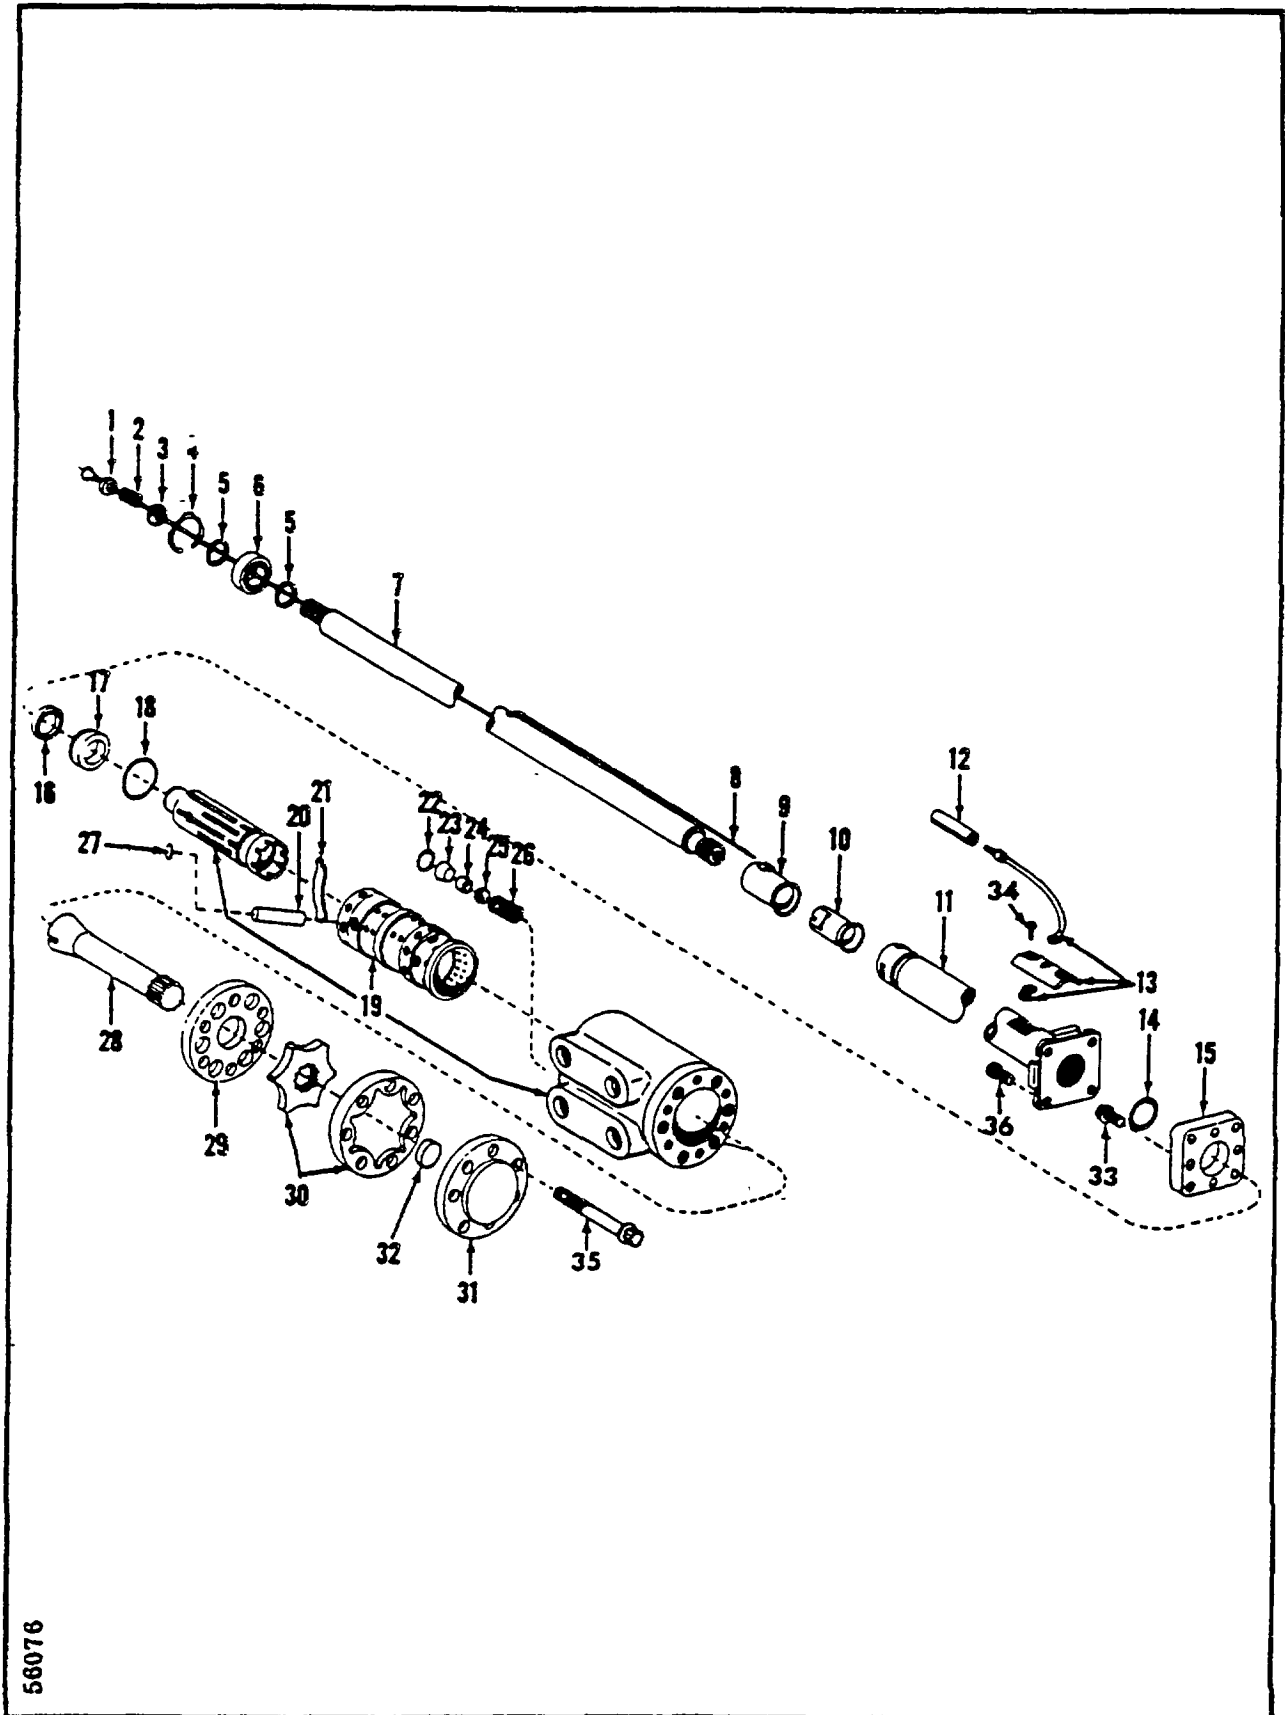


58076

**STEER UNIT - 4880395-1
PRIOR TO SERIAL NO. 113217**

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4786329-5	INSULATOR	1	
2	4786330-3	SPRING	1	
3	4786331-1	WASHER	1	
4	4995371-4	RETAINER	1	
5	4994912-6	RING	2	
6	4994913-4	BEARING	1	
7	4994915-9	SHAFT	1	
R8	4995381-3	WIRE ASSY	1	
9	4995378-9	RING	1	
10	4995379-7	INSULATOR RING	1	
11	4994916-7	TUBE & FLANGE	1	
12	4995380-5	CONNECTOR	1	
13	4995383-9	BRUSH ASSY	1	
14	4995372-2	* SEAL	1	
15	4994903-5	PLATE	1	
16	4994908-4	* SEAL	1	
17	4912940-6	BUSHING	1	
18	4912941-4	* SEAL	1	
19	4912942-2	CONTROL PARTS	1	INCL ITEMS 20 THRU 26
20	4994900-1	PIN- CENTERING	1	
21	4994901-9	SPRING	6	
22	0923559-9	* SEAL	1	
23	4994910-0	PLUG	1	
24	4994907-6	SEAL	1	
25	0921874-4	BALL- GRACE 25 -.25"	1	
26	4994906-8	SPRING	1	
27		NOT USED	2	
28	4905877-9	DRIVE	1	
29	4998258-0	PLATE	1	
30	4912938-0	GEROTER SET	1	
31	4998320-8	CAP	1	
32	4912939-8	SPACER	1	
33	0922751-3	CAPSCREW- TWELVE PT- .31" -18 x .63"	4	
34	4995382-1	SCREW	4	
35	4912937-2	CAPSCREW	7	
36	0922751-3	CAPSCREW- TWELVE PT- .38" -16 x .75"	2	

*INCLUDED IN KIT 4912964-6

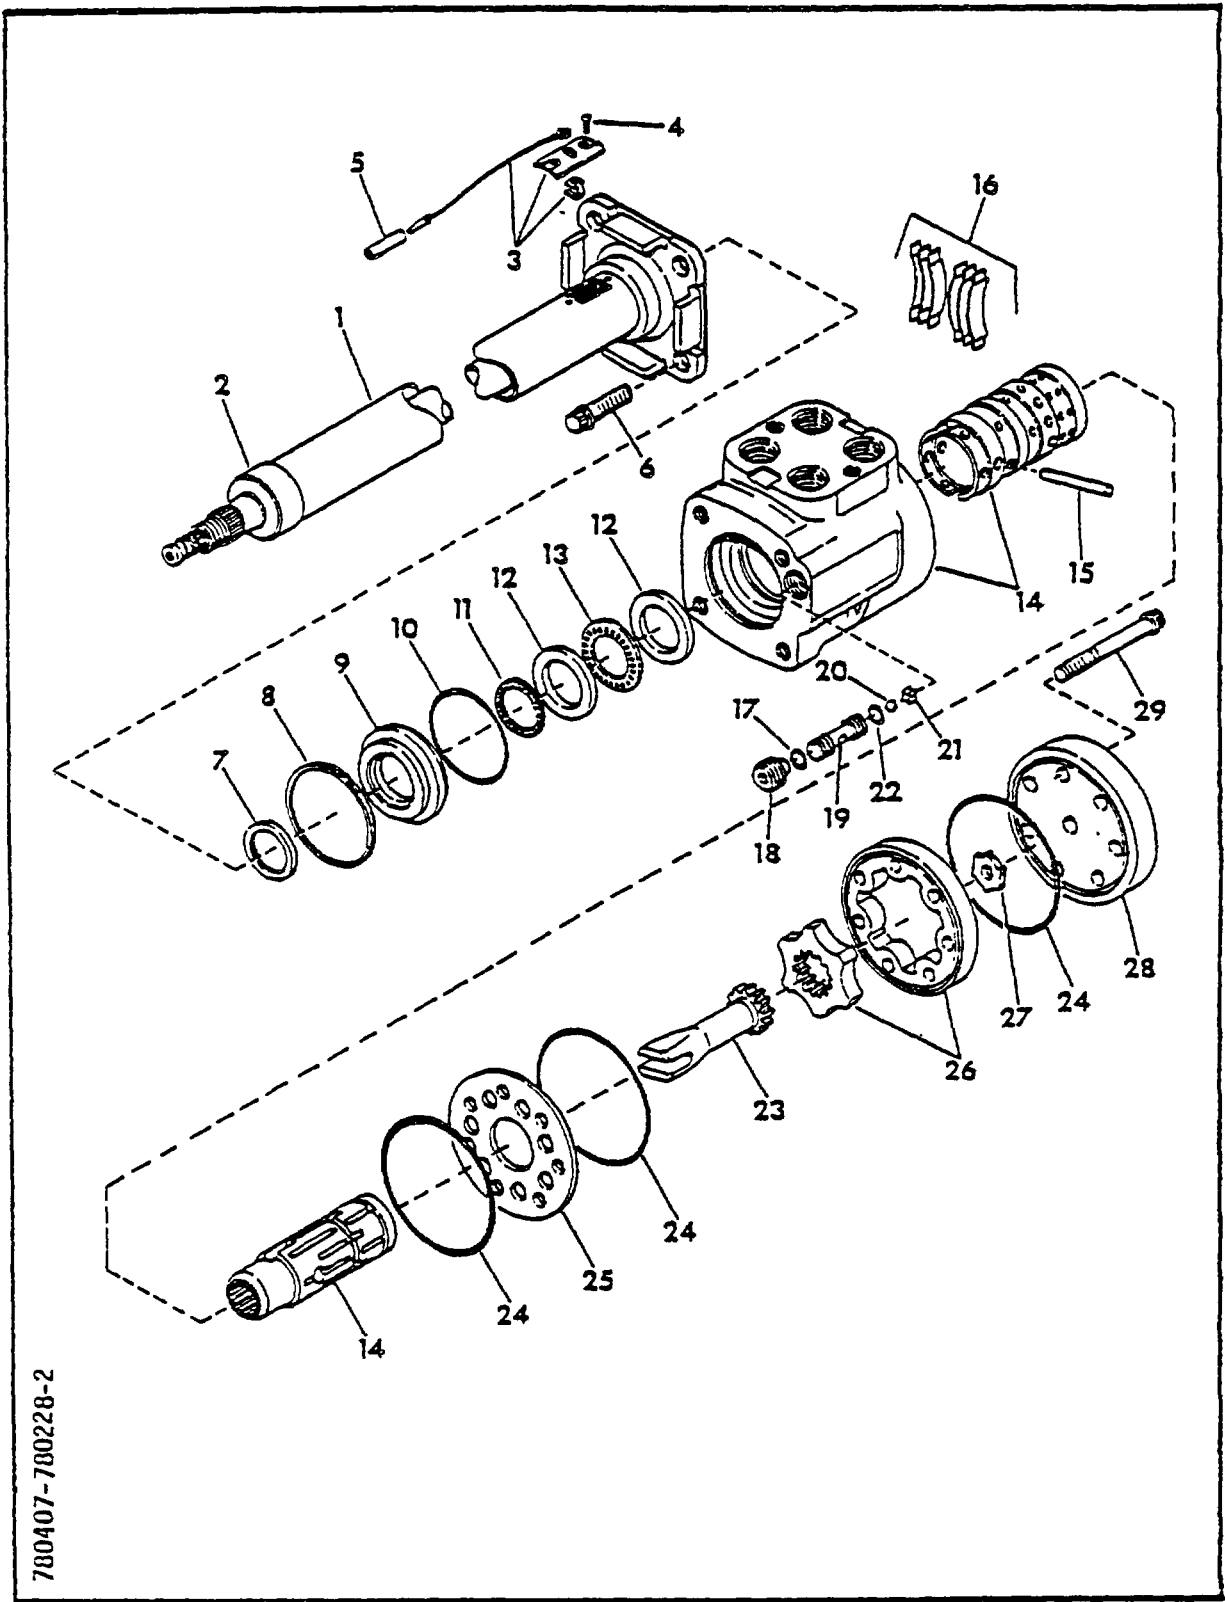

780407-780228-2

STEER UNIT-4886865-7
EFFECTIVE WITH SERIAL NO. 113217


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4914197-1	COLUMN ASSY-STEERING	1	INCL ITEMS 2 THRU 6
2	4914151-8	CAP-OUTER TUBE	1	
3	4995383-9	BRUSH ASSY-HORN	1	
4	4995382-1	SCREW	2	
5	4995380-5	CONNECTOR	1	
6	0923335-4	CAPSCREW-.38"-16 X .75"	2	12 PT
-	4914153-4	CONTROL UNIT-STEERING	1	INCL ITEMS 7 THRU 29
7	4995372-2	* SEAL	1	
8	4912468-8	RING-SNAP	1	
9	4912469-6	BUSHING-SEAL GLAND	1	
10	4912470-4	* SEAL-O-RING	1	
11	0239191-0	* SEAL-QUAD RING	1	
12	4914167-4	# RACE-THRUST	2	
13	4912473-8	# BEARING-NEEDLE	1	
14	4914160-9	CONTROL PARTS	1	INCL ITEMS 15 & 16
15	4994900-1	PIN-CENTERING	1	
16	4994901-9	SPRING-CENTERING	6	
17	4912968-7	* SEAL-O-RING	1	
18	4914166-6	SETSCREW	1	
19	4914163-3	SEAT-CHECK BALL	1	
20	4914162-5	BALL-CHECK	1	
21	4914161-7	RETAINER-CHECK BALL	1	
22	0923559-9	* O-RING-#-011	1	
23	1132770-7	DRIVE	1	
24	4912459-5	* O-RING	3	
25	4914158-3	PLATE-SPACER	1	
26	4914156-7	GEROTOR SET	1	
27	4913435-6	SPACER	1	
28	4914155-9	CAP-END	1	
29	1164202-2	CAPSCREW	7	

* INCL IN KIT 4914283-9

INCL IN KIT 4912471-2


POWER STEERING LINKAGE

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4880515-4	CYLINDER ASSY-POWER STEER	1	SEE PAGE 117
2	4812705-4	PIN-ANCHOR	1	
	0919390-5	WASHER- .78"	2	
	0920117-9	PIN-COTTER- .16" x .150"	2	
3	4869628-0	SPACER	1	
4	4869623-1	LINK ASSY-DRAG	1	INCL ITEMS 5 THRU 9
5	4869622-3	LINK-DRAG	1	
6	4713972-0	PLUG-ADJUSTING	1	
7	4713971-2	SEAT-BALL	2	
8	4713970-4	SPRING	1	
9	4713969-6	PLUG-SAFETY	1	
10	0922186-2	NUT-LOCK- 1.06" -12	2	
11	0923500-3	PIN-COTTER- .12" x 1.75"	1	
12	0922431-2	NUT	1	
13	0912494-6	FITTING-LUBE-STRAIGHT- .12" -27	1	
14	4869619-9	ANCHOR-PIVOT ASSY	1	INCL ITEMS 15 & 16
15	4829439-1	BALL-BUSHING-SELF-ALIGNING	1	
16	0915274-5	FITTING-LUBE-450- .12" PT-SHORT	1	

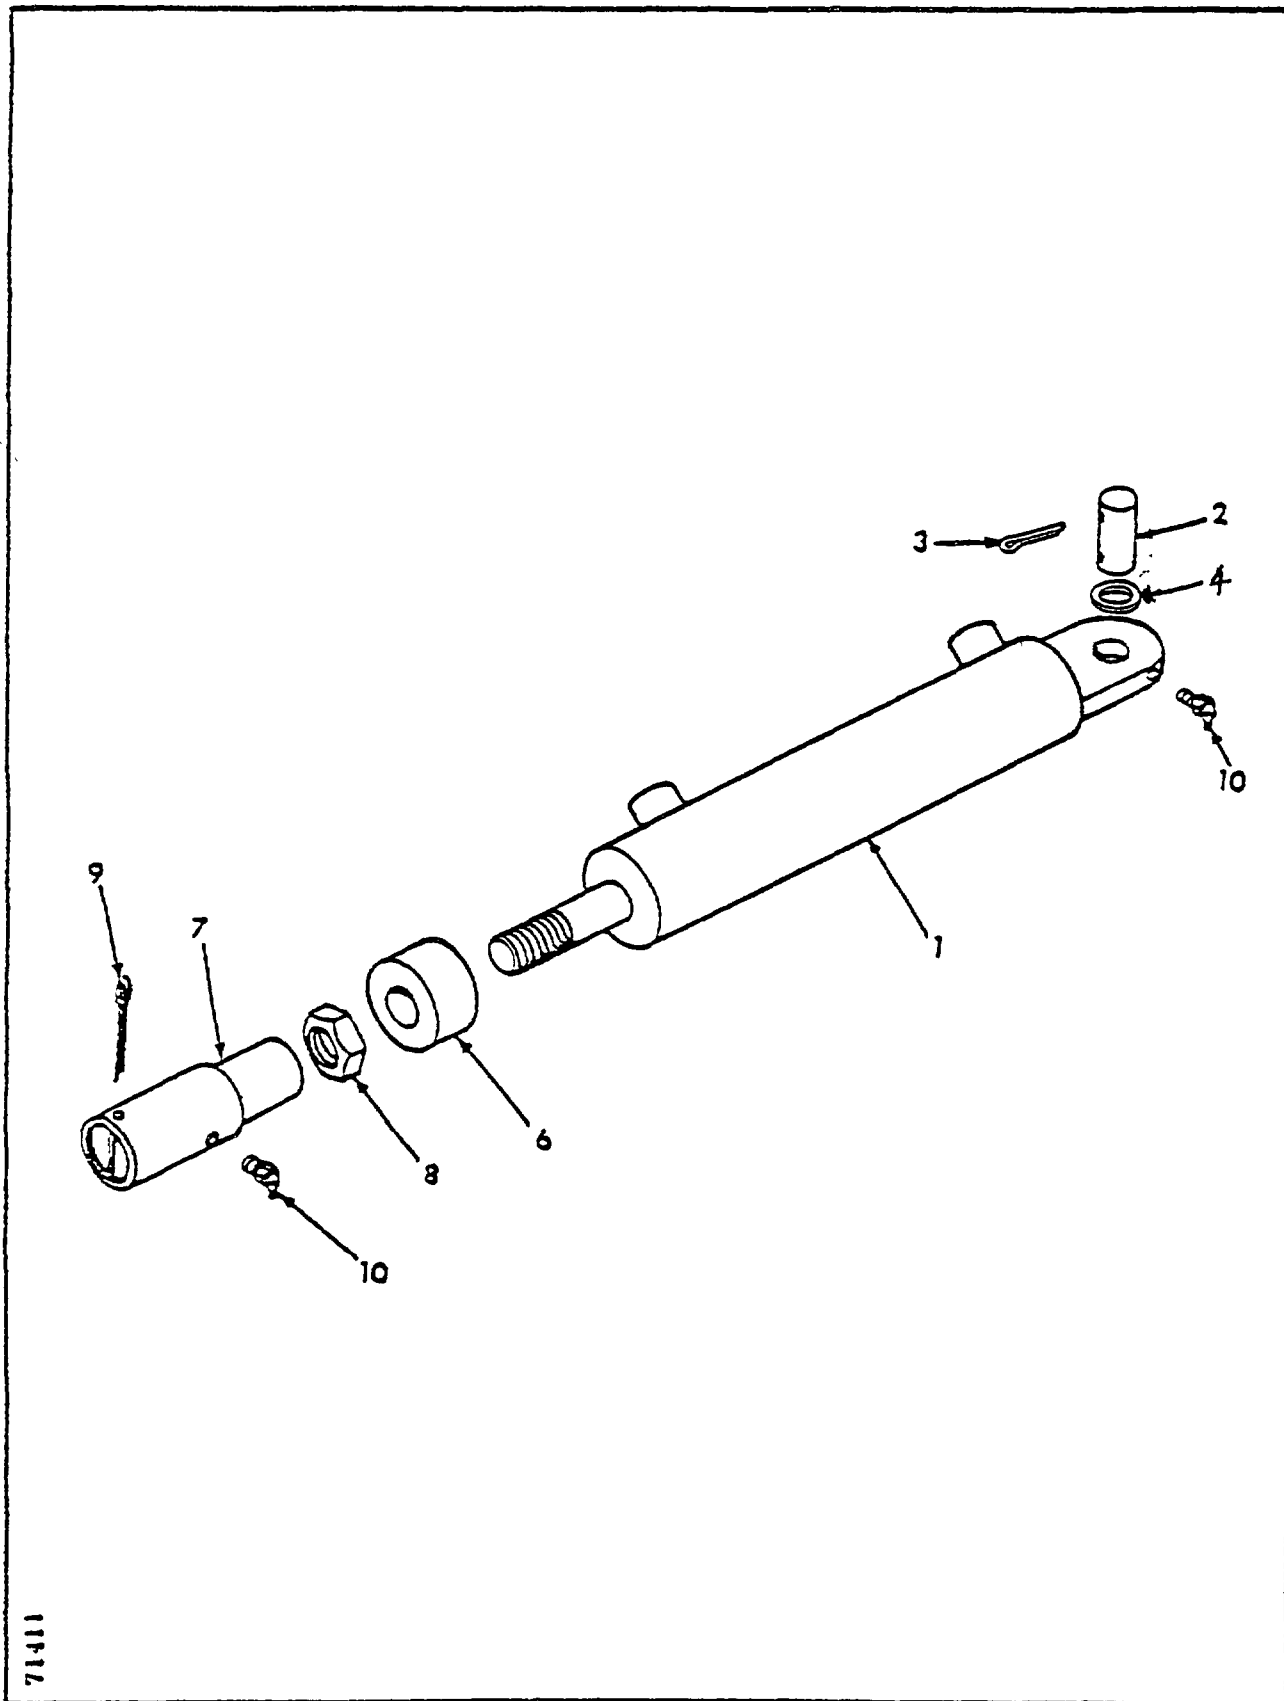

POWER STEERING LINKAGE


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4864447-0	CYLINDER ASSY	1	SEE PAGE 123
2	4812705-4	PIN ANCHOR	1	
3	0920117-9	PIN COTTER .156 X 1.5	2	
4	0919390-5	WASHER	2	
5			1	
6	4874858-6	SPACER	1	
7	4820980-3	LINK ASSY	1	SEE PAGE 125
8	0920439-7	NUT- .88" -14	2	
9	0918465-6	PIN- COTTER- .12" X 1.5"	1	
10	0918187-6	FITTING- LUBE 45° -.25 PT	2	

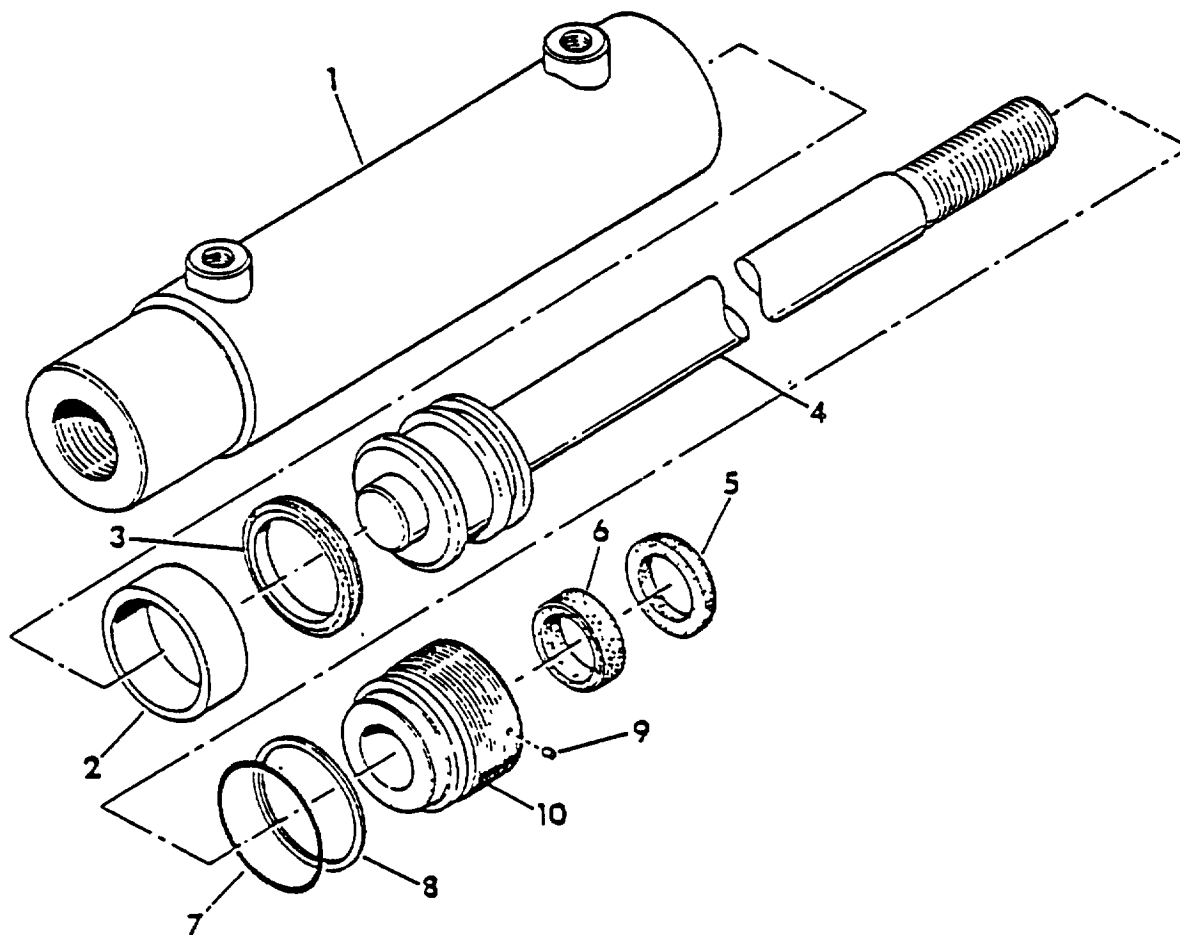

POWER STEER CYLINDER-4880515-4

ITEM	PART NO.	DESCRIPTION	QTY.
1	4880513-9	TUBE ASSY-CYLINDER	1
2	4814109-7	* BEARING	1
3	4814133-7	* T-RING	1
4	4880510-5	PLUNGER ASSY	1
5	4857829-8	* RING-WIPER	1
6	4814108-9	* ROD-PACKING	1
7	0923582-1	* O-RING-#-226	1
8	0926625-5	* RING-BACK-UP	1
9	4816749-8	PELLET-NYLON	2
10	4814134-5	NUT-GLAND	1


* INCLUDED IN KIT 4906332-4

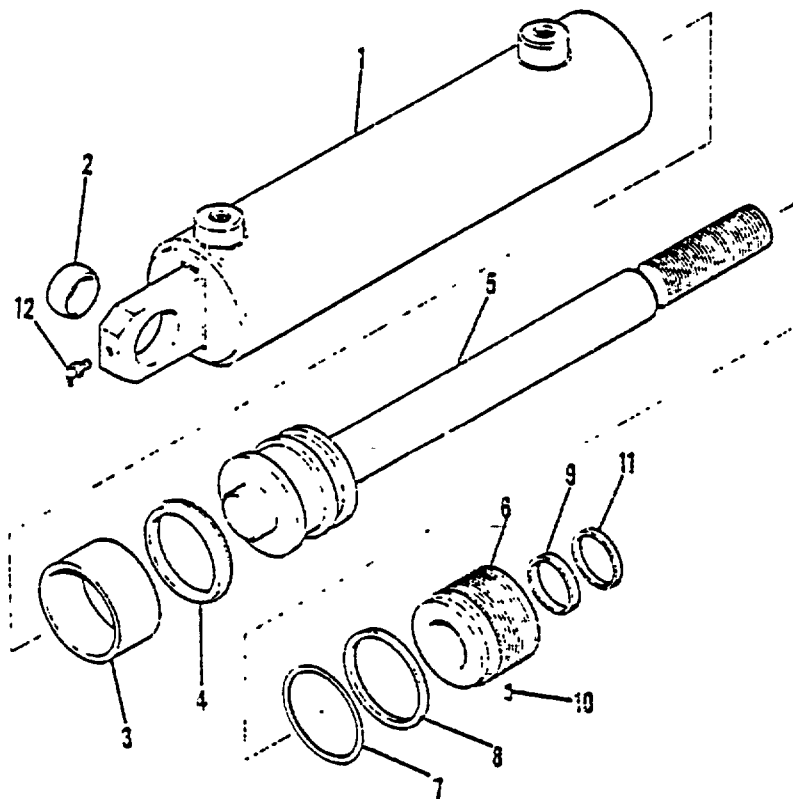

POWER STEERING CYLINDER 4864447-0 R

ITEM	PART NO.	DESCRIPTION	QTY.
1	4867521-9	TUBE ASSEMBLY	1
2	4829439-1	BUSHING	1
3	4863192-3	* BEARING	1
4	4863193-1	* T-RING	1
5	4867522-7	PLUNGER ASSEMBLY	1
6	4857708-4	GLAND-PACKING	1
7	0923572-2	* O-RING	1
8	0931433-7	* RING-BACK-UP	1
9	4875*92-3	* PACKING-ROD	1
10	4816749-8	* PELLET-NYLON	2
11	4863194-9	* RING-WIPER	1
12	0930679-6	FITTING LUBE	


*INCLUDED IN KIT 4910088-6

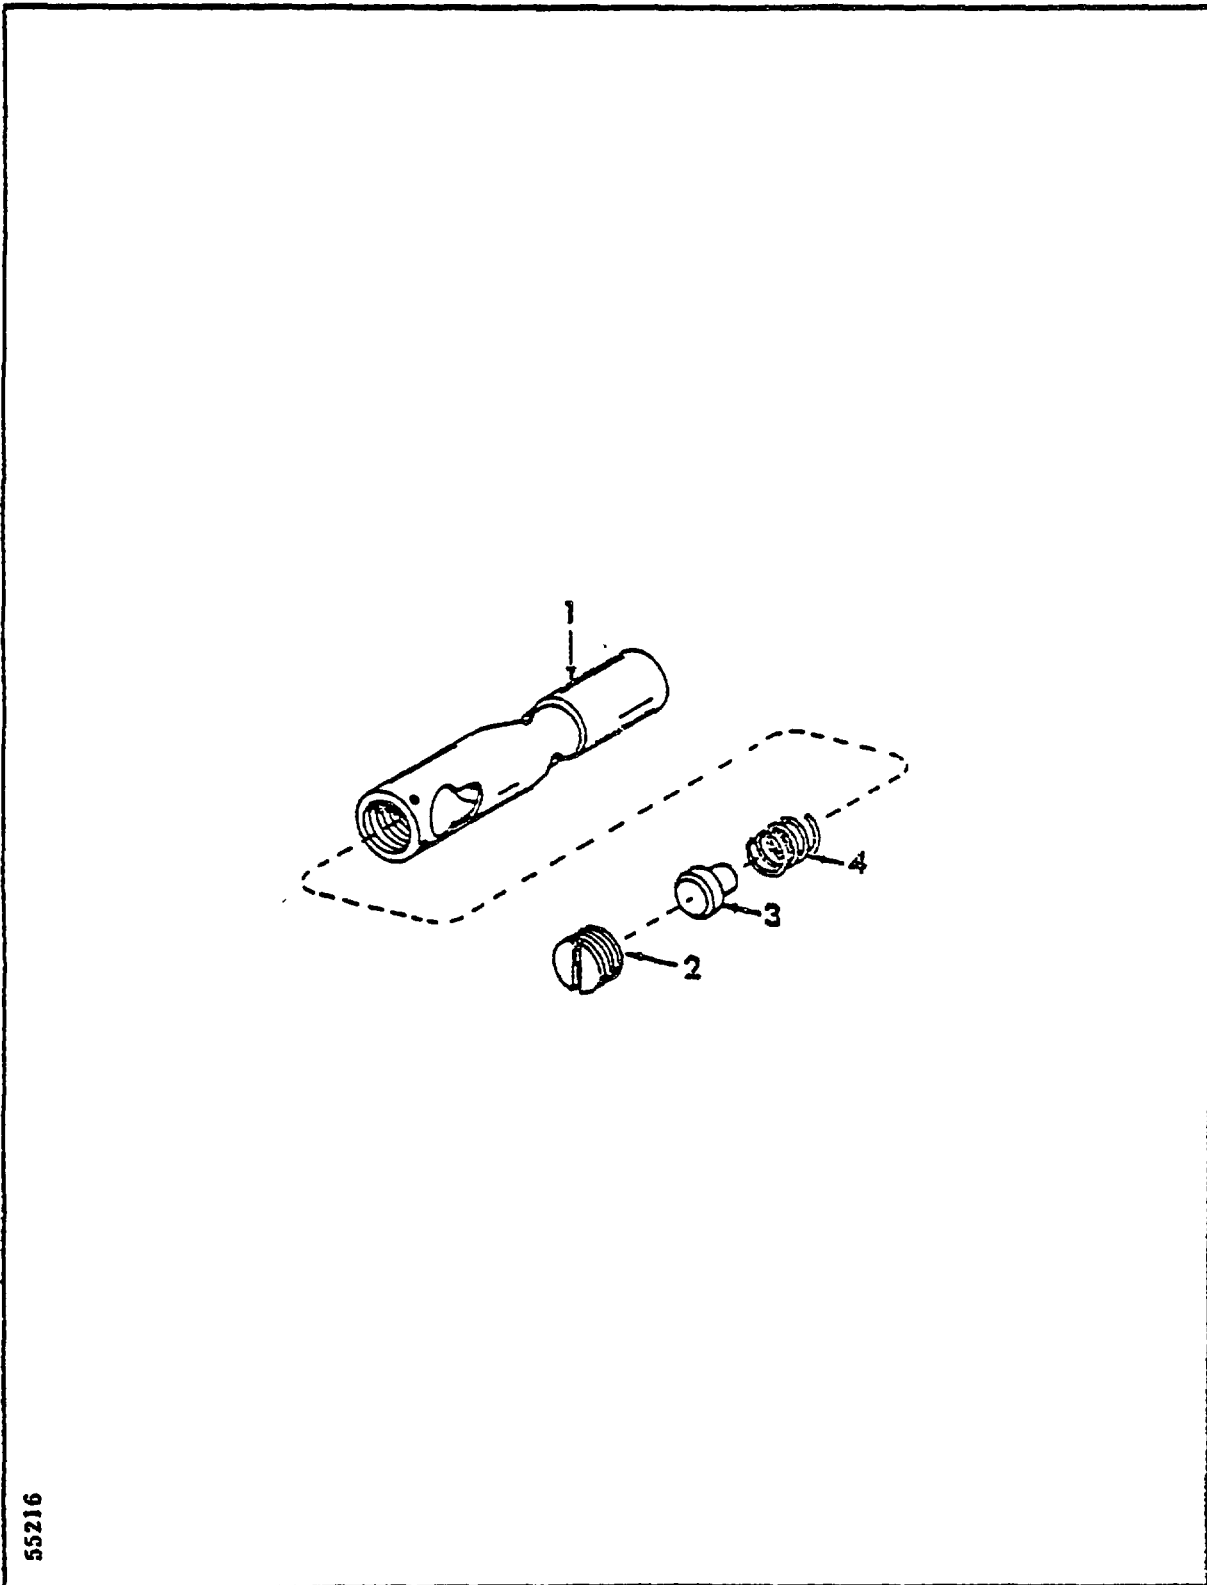

55216

YOKE ASSY - 4820980-3


ITEM	PART NO.	DESCRIPTION	QTY.	
1	-----	SOCKET	1	ORDER ASSY
2	4769248-8	PLUG-ADJUSTING	1	
3	4981815-6	SEAT-BALL	1	
4	4781446-2	SPRING	1	
R				

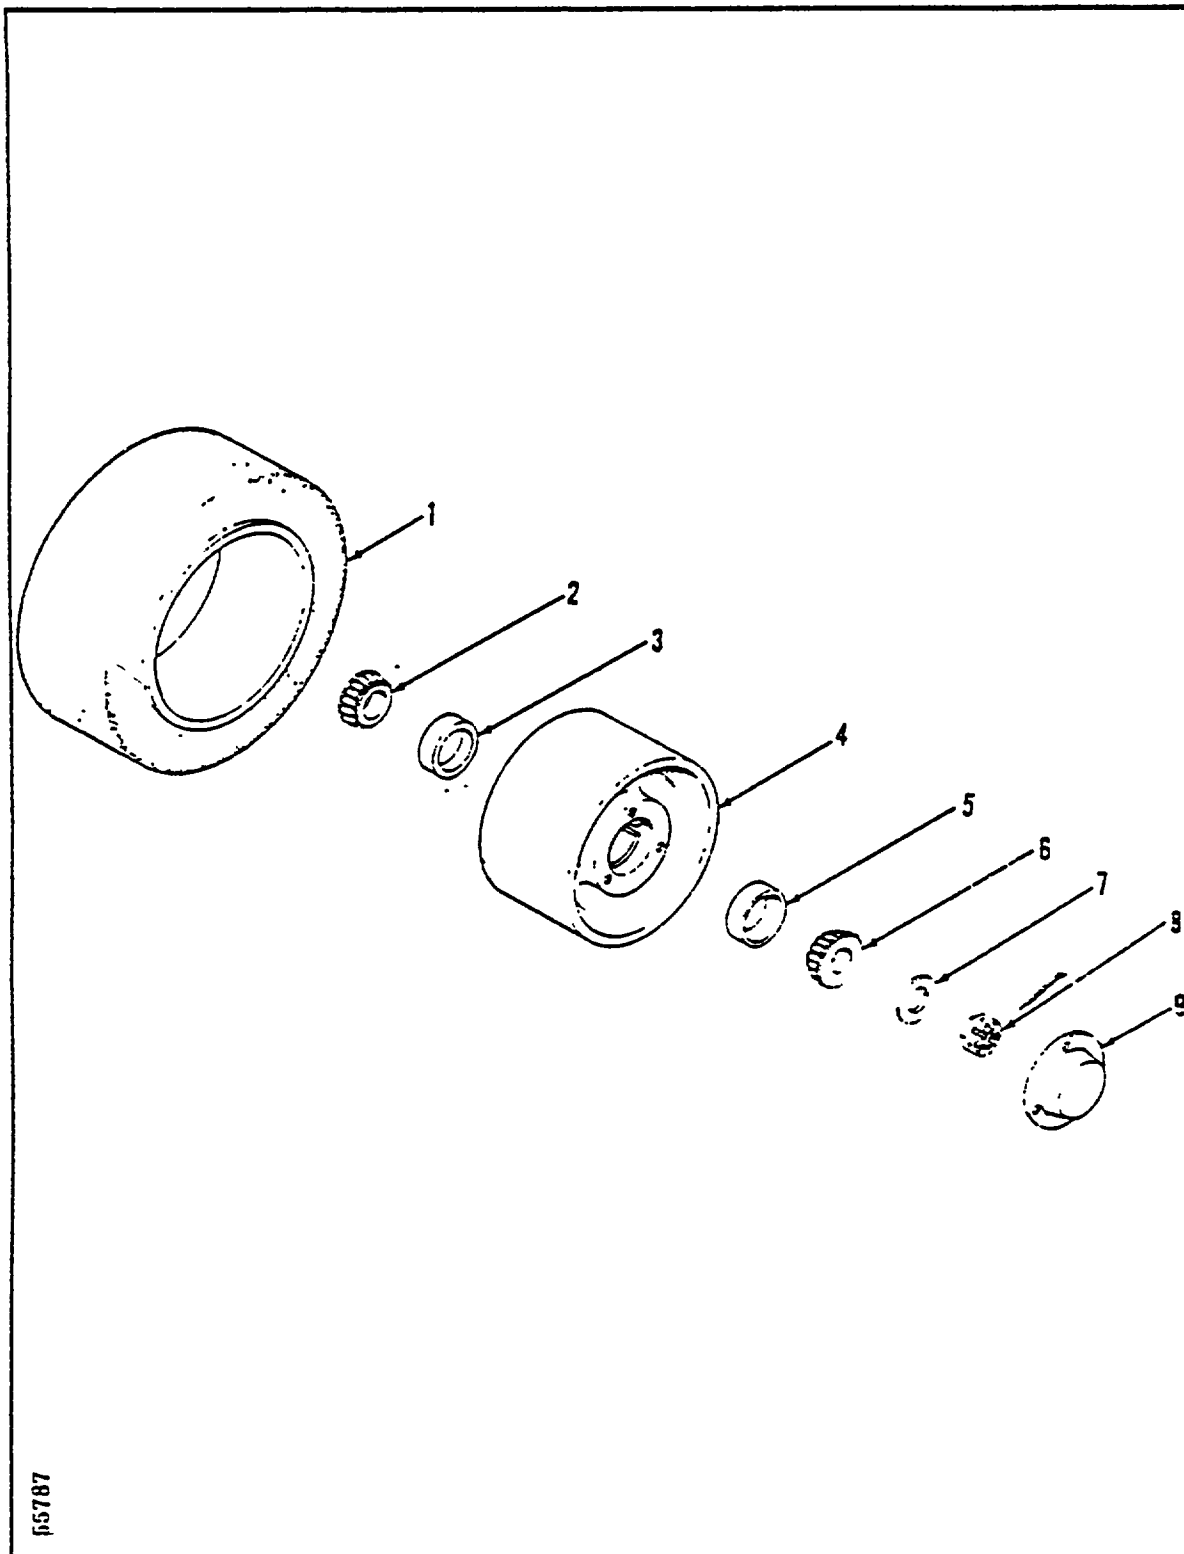

65787

STEER WHEEL


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4713023-2	TIRE- 16.25 X 5 X 11-1/4	2	CUSHION
2	0926702-2	CONE- INNER	2	
3	4254318-1	CUP- INNER	1	
4	4758727-4	WHEEL- STEER	2	
5	4254704-2	CUP- OUTER	2	
6	4254703-4	CONE- OUTER	2	
7	0929369-7	WASHER- 1.16" X 2"	2	
8	0929606-2	NUT- JAM- SLOTTED- 1.12" -12	2	
	0922002-1	PIN- COTTER- .19" X 2"	2	
9	4706891-1	CAP- HUB	2	
	0921965-0	CAPSCREW- .38" -16 X .75" .38"	6	
	0916803-0	LOCKWASHER- INT- .38"	6	

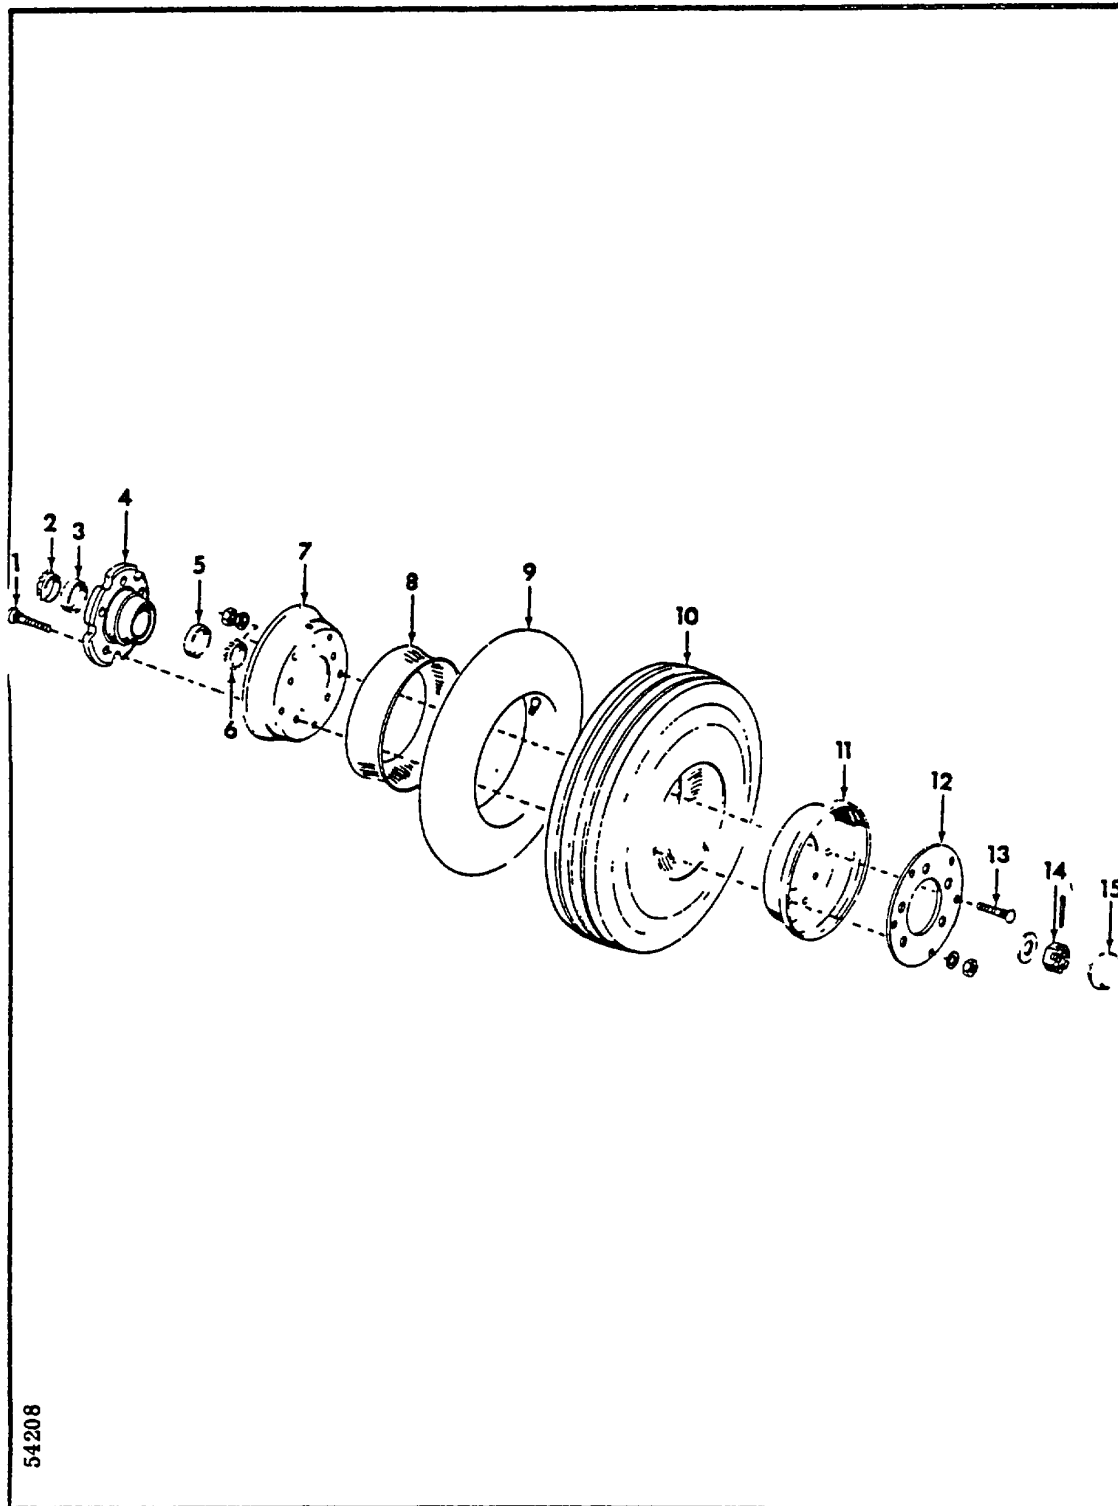

54208

STEER WHEEL


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4255646-4	BOLT-RIB-NECK	12	
	0916966-5	LOCKWASHER- .5"	12	
	0919423-4	NUT- .5"-20	12	
2	4254984-0	CONE-INNER BEARING	2	
3	0042887-1	CUP-INNER BEARING	2	
4	4799393-7	HUB	2	
5	4253284-6	CUP-OUTER BEARING	2	
6	4250052-0	CONE-OUTER BEARING	2	
7	4737517-5	DISC-INNER	2	
8	4712905-0	FLAP	2	OBTAIN LOCALLY
9	4737421-0	TUBE	2	OBTAIN LOCALLY
10	4795712-1	TIRE UNIT-6.50 X 10 - 10 PLY	2	INCLUDE ITEMS 8 AND 9
11	4765192-2	DISC-OUTER	2	
12	4789293-0	RING-STIFFENER	2	
13	4255637-3	BOLT-RIB NECK .5"-20	12	
	0904208-6	LOCKWASHER- .5	12	
	0913248-1	NUT-PLATED GR 5- .38"-24	12	
14	4718022-9	NUT-BEARING ADJUSTING	2	
	0923414-7	WASHER-1.06"	2	
	0925719-7	PIN-COTTER-.12" X 2"	2	
15	4747622-1	CAP-HUB	2	
	0921958-5	CAPSCREW .250-20 X .500	6	
	0916964-0	LOCKWASHER	6	
R				

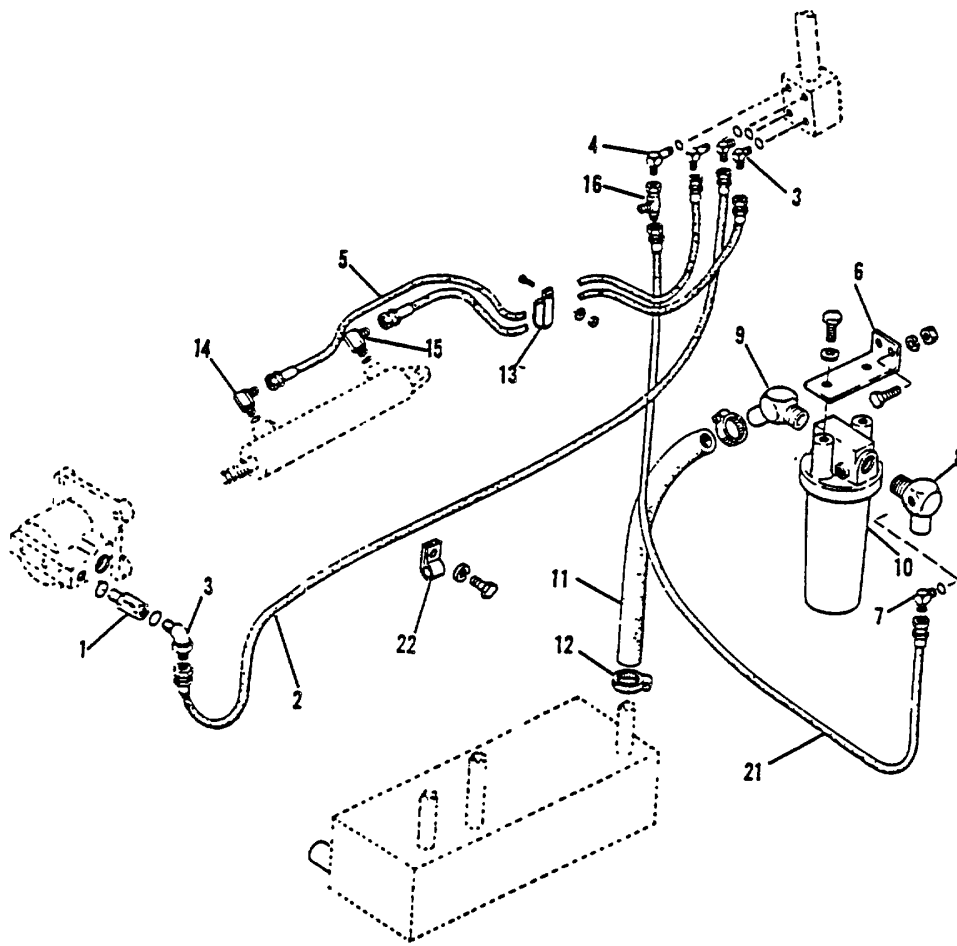

STEERING HYDRAULICS


ITEM	PART NO.	DESCRIPTION	QTY.
1	4839229-1	VALVE-.CHECK	1
	0921885-0	O-RING #906-.471D	1
2	4856248-9	HOSE	1
3	0922523-6	ELBOW-SHORT .56"-18	4
	0921885-0	O-RING #906-.471D	4
4	0925295-8	ELBOW-LONG .5"-18	3
	0921885-0	O-RING #906-.471D	3
5	4836043-2	HOSE-ASSEMBLY 22.0L	2
6	4878476-3	BRACKET-FILTER	1
	0921333-1	CAPSCREW	2
	0917356-8	LOCKWASHER	2
	0917642-1	WASHER	2
	0917372-5	NUT-.38-16	2
7	0919172-7	CONNECTOR-.38P-.562-18	1
8	4857172-3	ELBOW-DRILLED	1
9	0930978-2	ELBOW-90°-1.0 BARB	2
10	4878477-1	FILTER-OIL	1
	0923114-3	CAPSCREW-.5"-13 X 1	2
	0916966-5	LOCKWASHER-.5"	2
11	4810405-3	HOSE-1.0 ID	1
12	0922660-6	CLAMP	2
13	0930233-2	CLAMP	2
14	0922522-8	CONNECTOR	1
15	0922921-2	ELBOW	1
16	0921297-8	TEE-90°	1
17	NOT USED		
18	NOT USED		
19	NOT USED		
20	NOT USED		
21	4861541-3	HOSE	1
22	0928046-2	CLAMP	1
	0915815-5	WASHER	2
	0921333-1	CAPSCREW	1

SEE PAGE 130

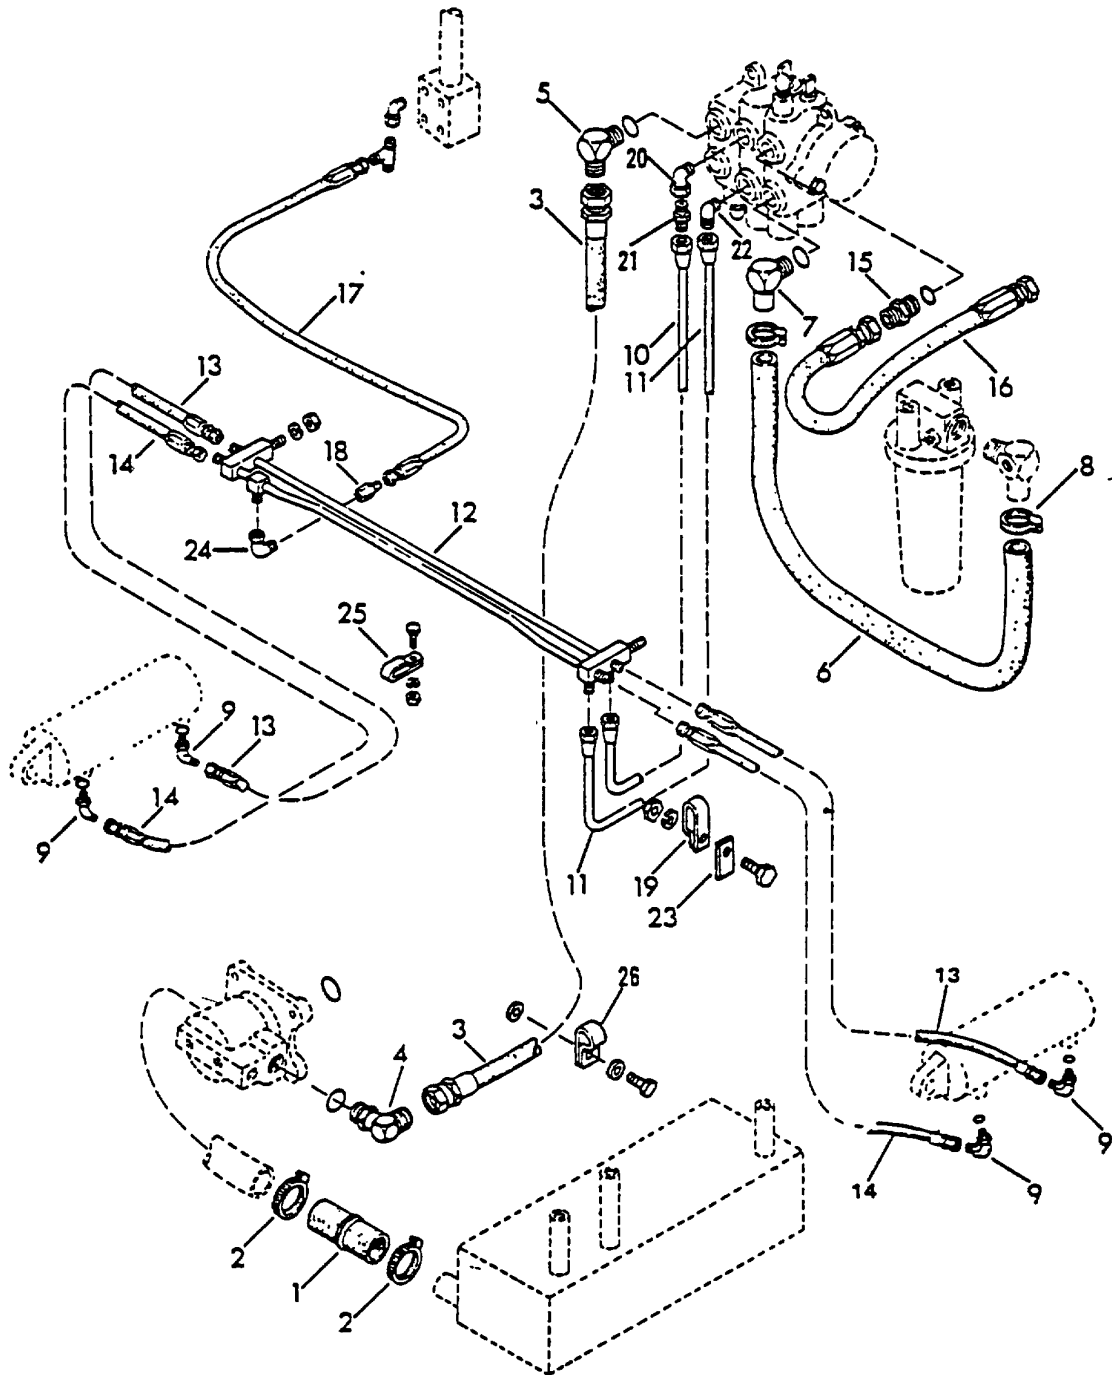


MAIN HYDRAULICS

ITEM	PART NO.	DESCRIPTION	QTY.
1	4811834-3	HOSE SUCTION	1
	4822178-2	SCREEN	1
2	0921912-2	CLAMP HOSE SAE SIZE 32	2
3	4814056-0	HOSE ASSY	1
4	0921203-6	ELBOW	1
	0921206-9	O-RING #912 - .92"	1
5	0921728-2	ELBOW 45°	1
6	4810405-3	HOSE 1.0 ID	1
7	0929259-0	ELBOW 90° BARB 1.0	1
8	0922660-6	CLAMP - HOSE	2
9	0922571-5	ELBOW - 90°	4
10	4859248-9	TUBE - VALVE	1
11	4859249-7	TUBE - VALVE	1
12	4859247-1	TUBE CROSSOVER	1
13	4855349-9	HOSE - TILT CYLINDER - 24.0 L	2
14	4827755-2	HOSE TILT CYLINDER - 20.0 L	2
15	0922974-1	ELBOW - 45° W/O RING	1
16	4862067-8	HOSE - LIFT	1
17	4855547-8	HOSE - TILT RETURN 12.0 L	1
18	4839229-4	VALVE - CHECK	1
	0921885-0	O-RING #906 - .47 ID	1
19	NOT USED		
20	0924044-1	ELBOW 90°	1
21	0923163-0	ADAPTER - HOSE	1
22	0922571-5	ELBOW - 90°	1
23	NOT USED		
24	0921013-9	ELBOW 90°	1
25	0929279-8	CLAMP	2
	0921333-1	CAPSCREW .31 -18 X 1.25	2
	0917356-8	LOCKWASHER .31	4
	0917372-5	NUT .31 -18	2
	0923325-6	CAPSCREW .31 -18 X .88	2
	4612682-7	WASHER	2
26	0928010-8	CLAMP	2
	0915815-5	WASHER	2
	0921333-1	CAPSCREW	1
	0917356-8	LOCKWASHER	1
	0917372-5	NUT	1

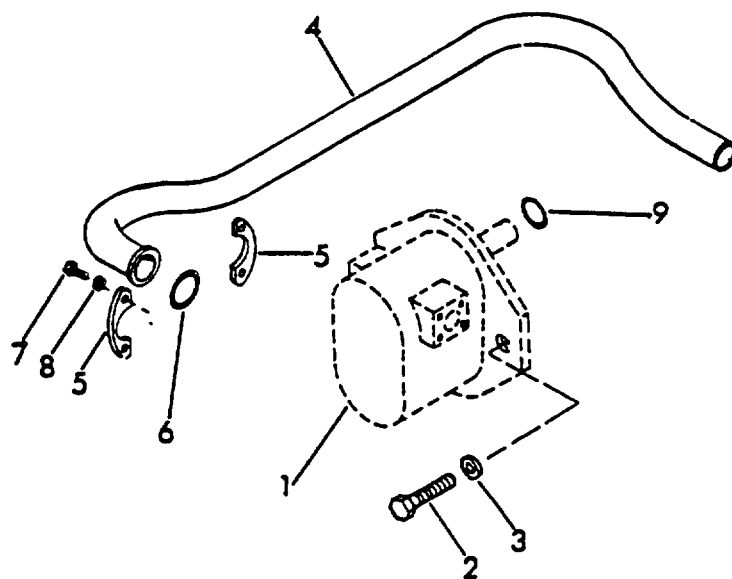

HYDRAULIC PUMP


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4880396-9	PUMP	1	SEE PAGE 127
2	0921176-4	CAPSCREW-.500-13 X 1.5	2	
3	0916966-5	LOCKWASHER .5	2	
4	4856611-1	TUBE	1	
5	0921118-6	FLANGE-SPLIT-1.5"	2	
6	0923578-9	O-RING-#-225-1.9" ID CLASS 1A	1	
7	0921176-4	CAPSCREW-.5"-13 X 1.25"	4	
8	0916966-5	LOCKWASHER-.5"	4	
9	4864816-6	SEAL 1		

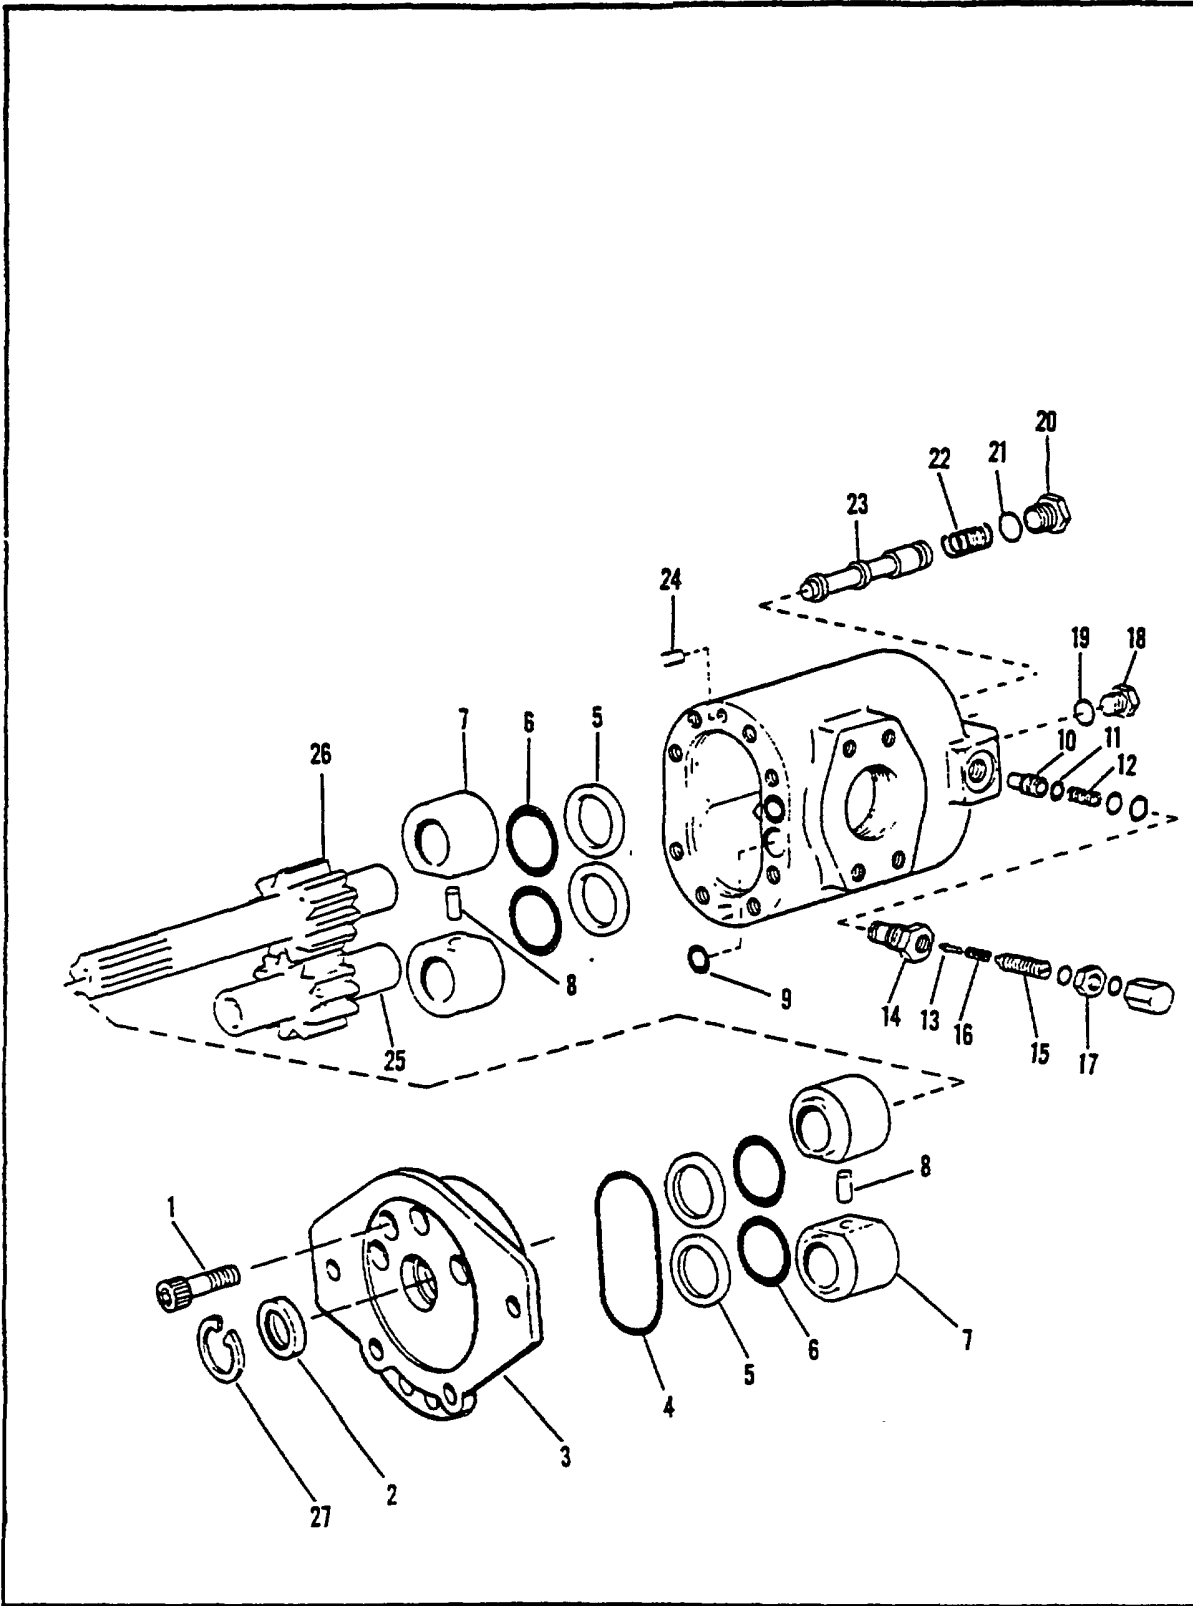

HYDRAULIC PUMP- 4880396-9


ITEM	PART NO.	DESCRIPTION	QTY.
1	0917469-9	CAPSCREW	8
R 2	4997977-5	*SEAL	1
3	4912409-2	FLANGE-MOUNTING	1
4	0927591-8	*O-RING-BODY	1
5	4999827-1	*RING-BACKUP	4
6	0924092-0	*O-RING-BUSHING	4
7	4912407-5	BUSHING	4
8	4993823-6	DOWEL-BUSHING	2
9	0924048-2	*O-RING-DRAIN	2
10	4912935-6	SPOOL	1
11	0928581-8	*RING-BACKUP	4
12	4912936-4	SPRING	1
13	4912934-9	CONE	1
14	4912931-5	PLUG	1
	0921205-1	*O-RING-PLUG	1
	0923841-1	*O-RING-PLUG	1
15	4912868-9	SETSCREW	1
16	4912933-1	SPRING	1
17	4912929-9	NUT-LOCK	1
	0928241-9	*O-RING	2
R	4912928-1	NUT-CAP	1
18	4912930-7	PLUG	1
19	0923841-1	*O-RING	1
20	4906387-8	PLUG	1
21	0921205-1	*O-RING-PLUG	1
22	4909493-0	SPRING	1
23	4908790-0	SPOOL-PRIORITY	1
24	4993825-1	DOWEL-BODY	2
25	4993759-2	GEAR-IDLER	1
26	4909289-2	GEAR-DRIVE	1
27	4254608-5	RING	1

*INCL IN KIT 4912510-7

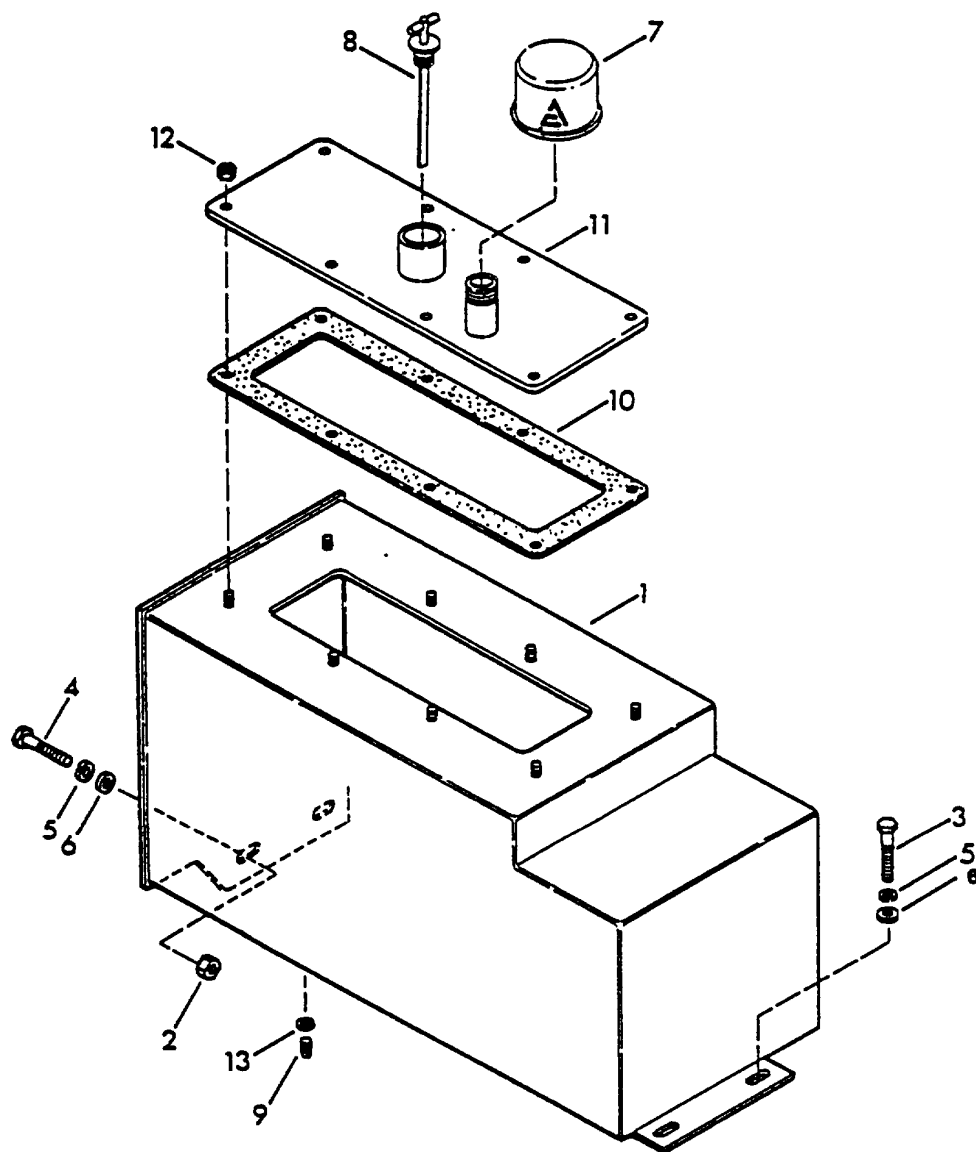


RESERVOIR

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4856695-4	RESERVOIR-HYDRAULIC OIL	1	INCL ITEMS 10-11- 12 AND 14
2	0916950-9	NUT 2		
3	0922130-0	CAPSCREW .375-16 X 2.25"	2	
4	0921210-1	CAPSCREW-.38"-16 X 1"	2	
5	0916965-7	LOCKWASHER- .38"	4	
6	0917378-2	WASHER- .38"	4	
7	4835378-3	FILTER-AIR	1	
8	4828800-5	DIPSTICK	1	
9	4855689-8	PLUG-MAGNETIC	1	
10	4909162-2	GASKET	1	
11	4909161-4	COVER	1	
12	0923362-8	NUT-LOCK-.31"-18	8	
13	4845678-4	WASHER NYLON	1	
14	4847435-7	DIFFUSER	1	NOT ILLUSTRATED
	4806357-2	SCREEN	1	

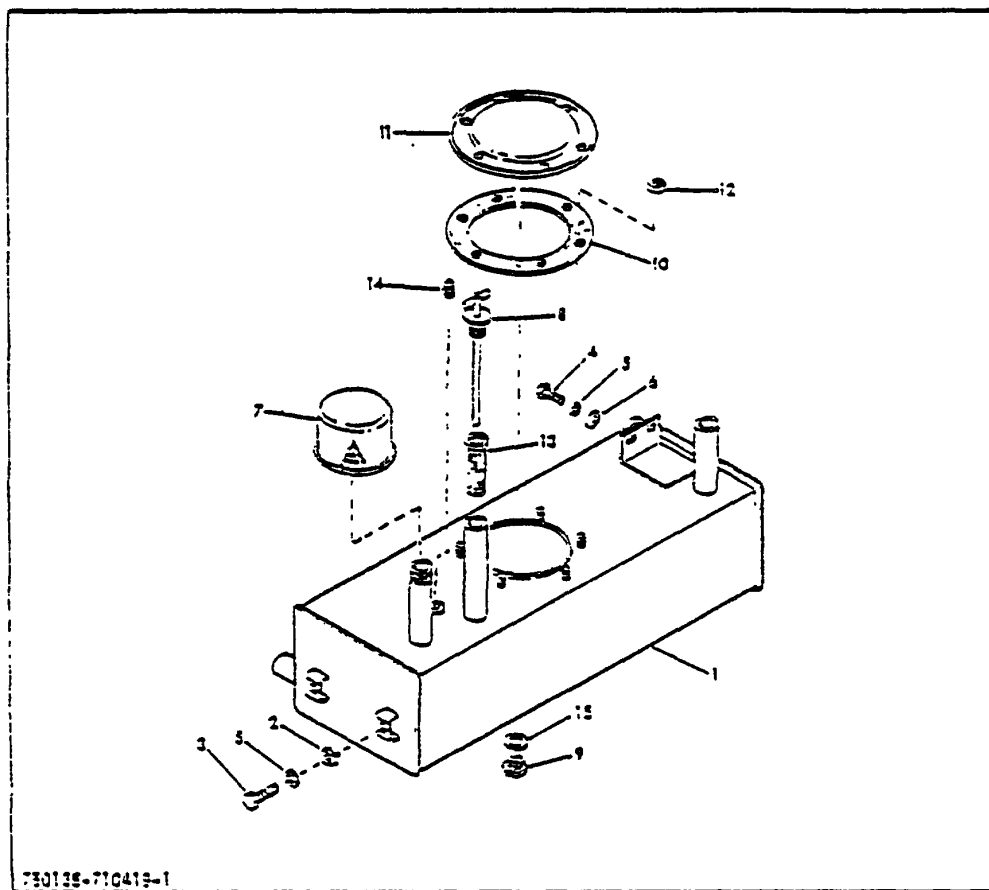


RESERVOIR

ITEM	PART NO.	DESCRIPTION	QTY.
1	4836253-7	RESERVOIR-HYDRAULIC OIL	1
2	0921705-0	NUT-RETAINER-.38"-16	2
3	0922130-0	CAPSCREW-.38"-16 X 2.25"	2
4	0921966-8	CAPSCREW-.38"-15 X .38"	2
5	0916965-7	LOCKWASHER-.38"	4
6	0918266-8	WASHER-.41" X .31"	2
7	4835378-3	FILTER-AIR	1
8	4882401-5	DIPSTICK	1
9	4855689-8	PLUG-DRAIN	1
10	4823391-0	GASKET	1
11	4907320-8	COVER	1
12	0919441-6	NUT-LOCK-.31"-18	6
13	4806357-2	SCREEN-FILLER	1
14	0901653-6	PLUG-PIPE-SQ HD-.38"	1
15	4845578-4	WASHER-NYLON	1

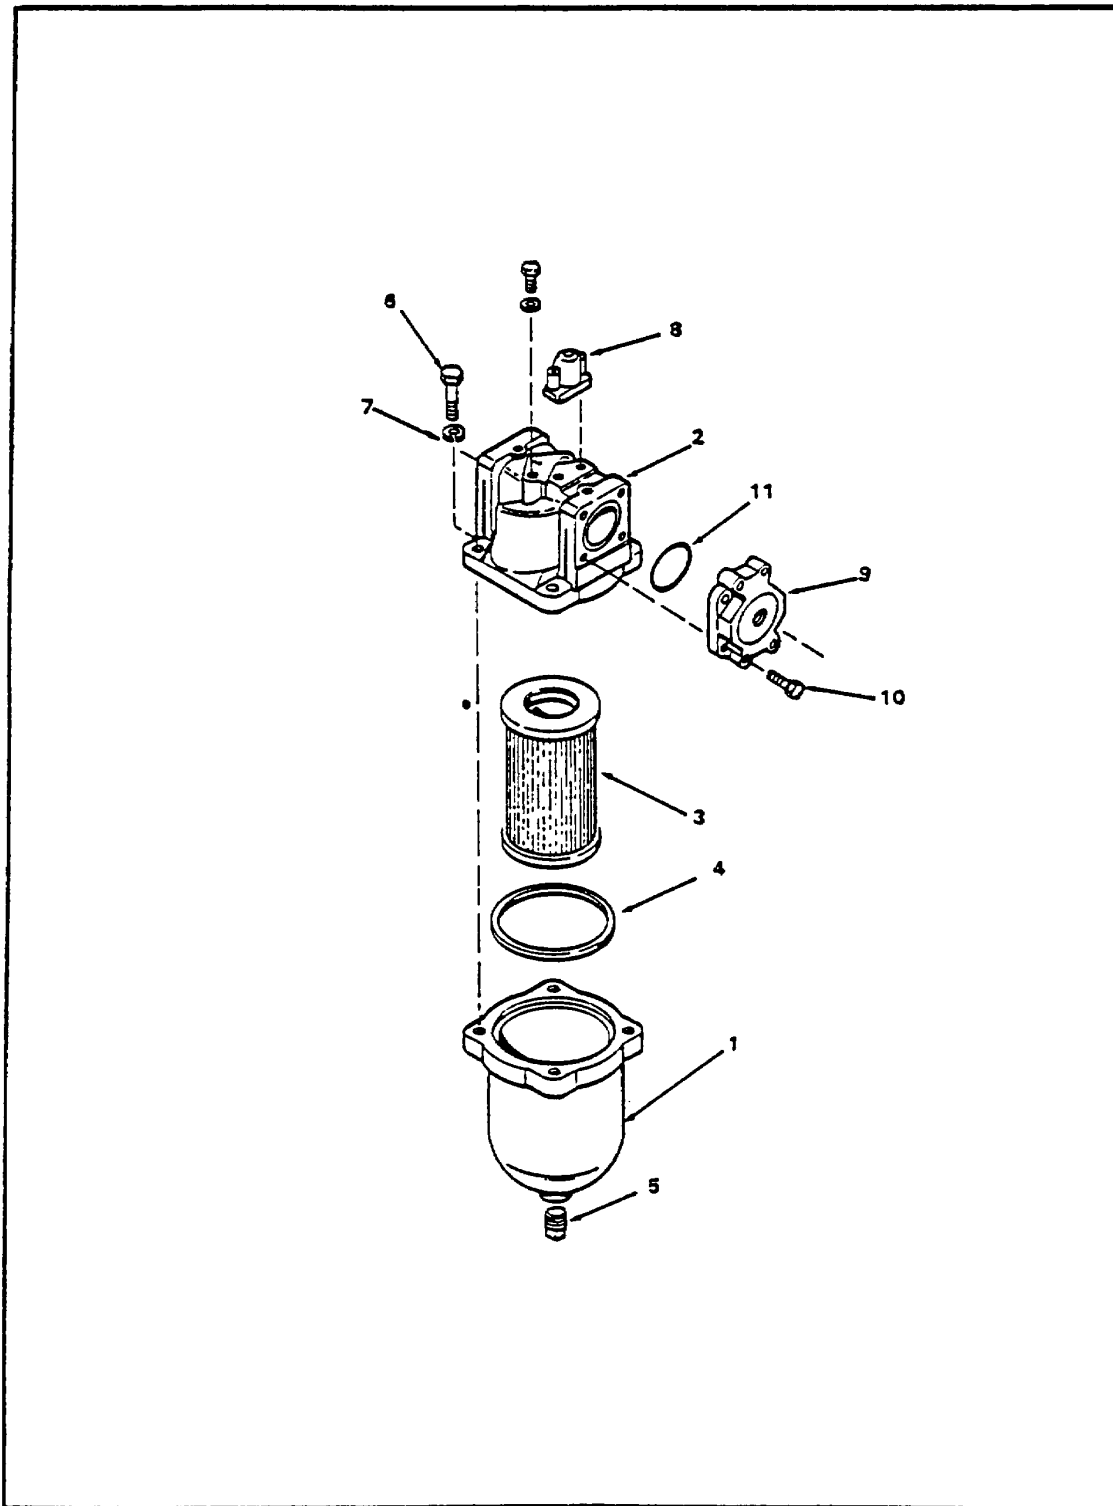


HYDRAULIC FILTER - 4878477-1

ITEM	PART NO.	DESCRIPTION	QTY.
1	4912566-9	HOUSING	1
2	4912557-3	HEAD	1
3	4907477-6	ELEMENT	1
4	4912558-6	SEAL-HOUSING	1
5	0901653-6	PLUG	1
6	0920648-3	CAPSCREW	4
7	0919383-0	WASHER	4
8	4912559-4	INDICATOR	1
	0922026-0	SCREW	2
9	4912560-2	ADAPTER	2
10	0922996-4	CAPSCREW	8
11	4912561-0	SEAL-ADAPTER	2

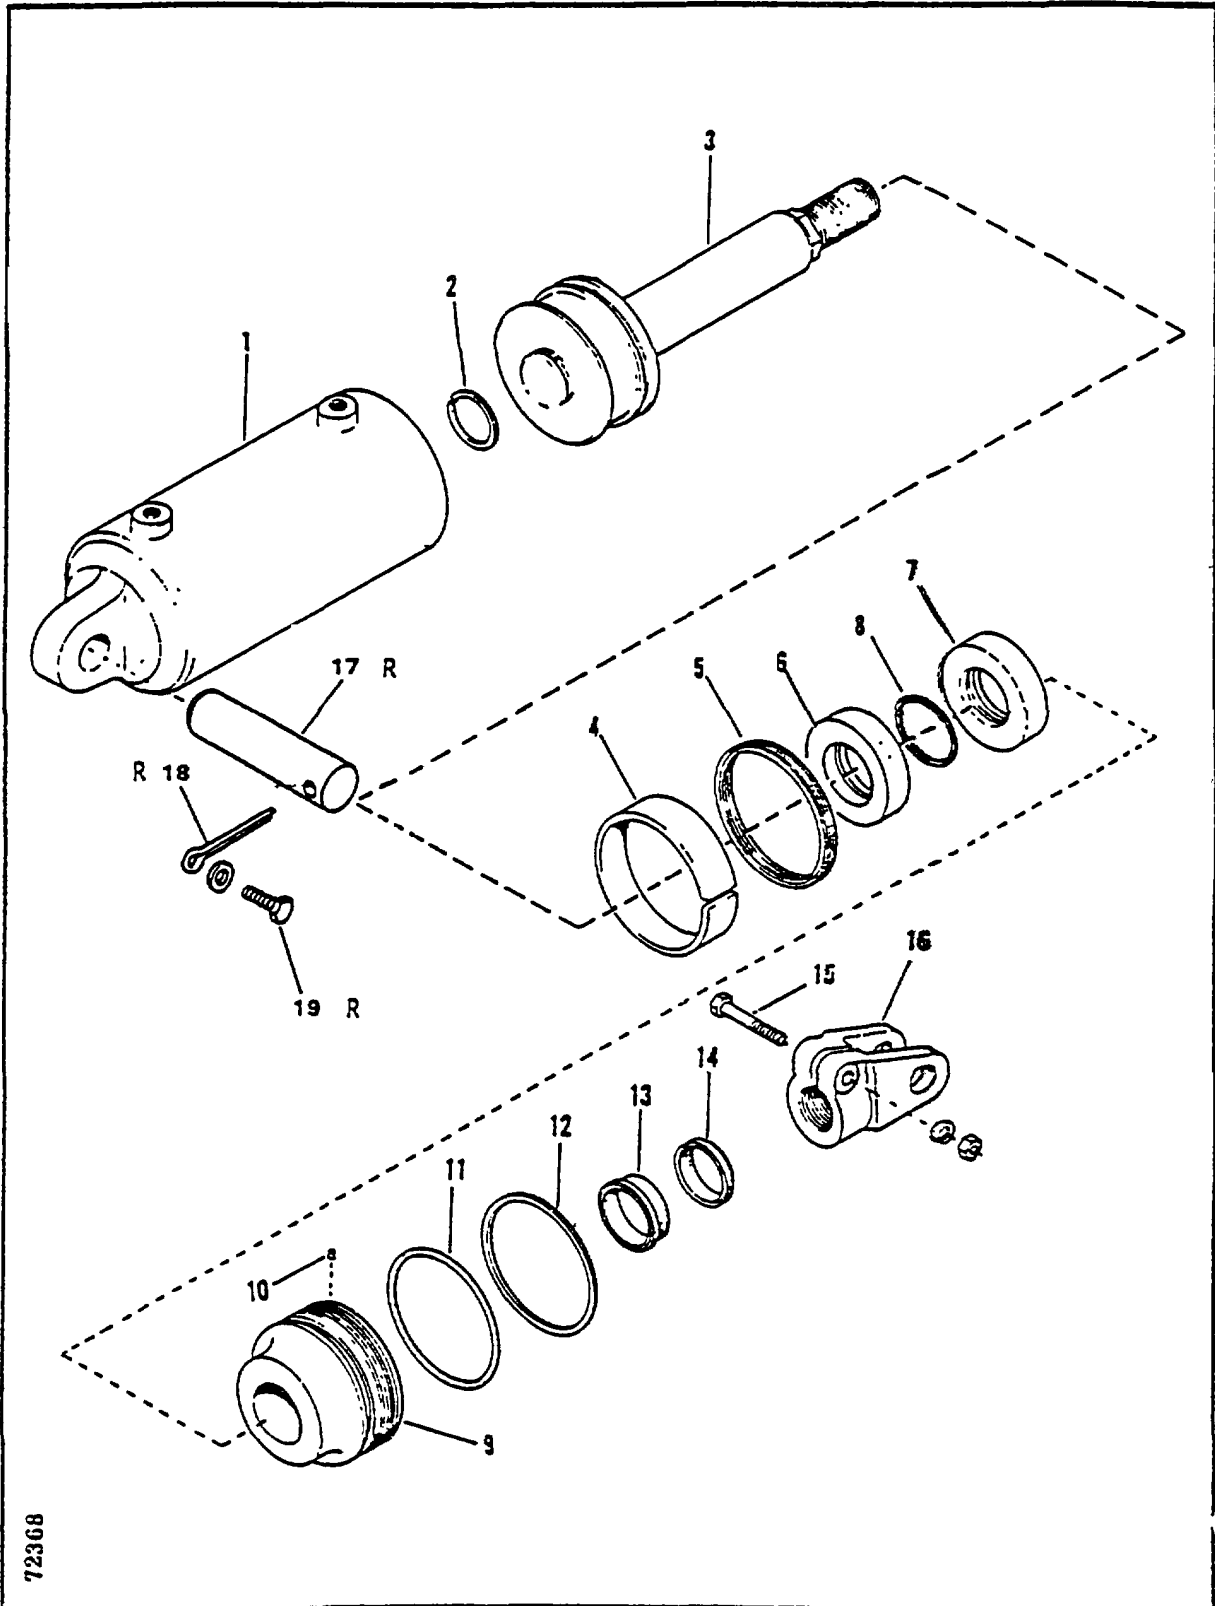


TILT CYLINDER AND CONNECTIONS

ITEM	PART NO.	DESCRIPTION	QTY.	
	4827196-9	CYLINDER ASSEMBLY	2	INCL ITEMS 1 THRU 14
1	4810184-4	TUBE-CYLINDER	2	
	0914687-9	FITTING-.25"-28 TAPER THREAD	2	
2		NOT USED		
		FREE DIAMETER	2	
3	4829336-9	ROD & PLUNGER ASSEMBLY	2	
4	4814109-7	# BEARING	2	
5	4814133-7	# PACKING-PISTON	2	
6	4769567-1	SPACER	4	
7	4822760-7	SPACER-W/O-RING GROOVE	2	
8	0923649-8	O-RING-#-218-1.23"ID CLASS 1A	*	USED W/ITEM 7 ONLY
9	4814134-5	GLAND	2	
10	4816749-8	# PELLET-NYLON	4	
11	0923582-1	# O-RING-#-229-2.36"ID-CLASS 1A	2	
12	0926625-5	# RING-BACK UP-#232-2.75" ID	2	
13	4814108-9	# PACKING-GLAND	2	
14	4857829-8	# WIPER-ROD	2	
15	0923293-5	CAPSCREW-.5"-20 X 2"	2	
	0916966-5	LOCKWASHER-.5"	2	
	0919423-4	NUT-.5"-20	2	
			2	
16	4712841-8	YOKE	2	
17	4774993-2	SHAFT-CYLINDER MOUNT	2	
18	4859095-4	PIN COTTER	2	
19	0921210-1	CAPSCREW-.38"-16 X 1"	2	
	0916965-7	LOCKWASHER-.38"	2	
		# INCLUDED IN KIT 4906332-4		

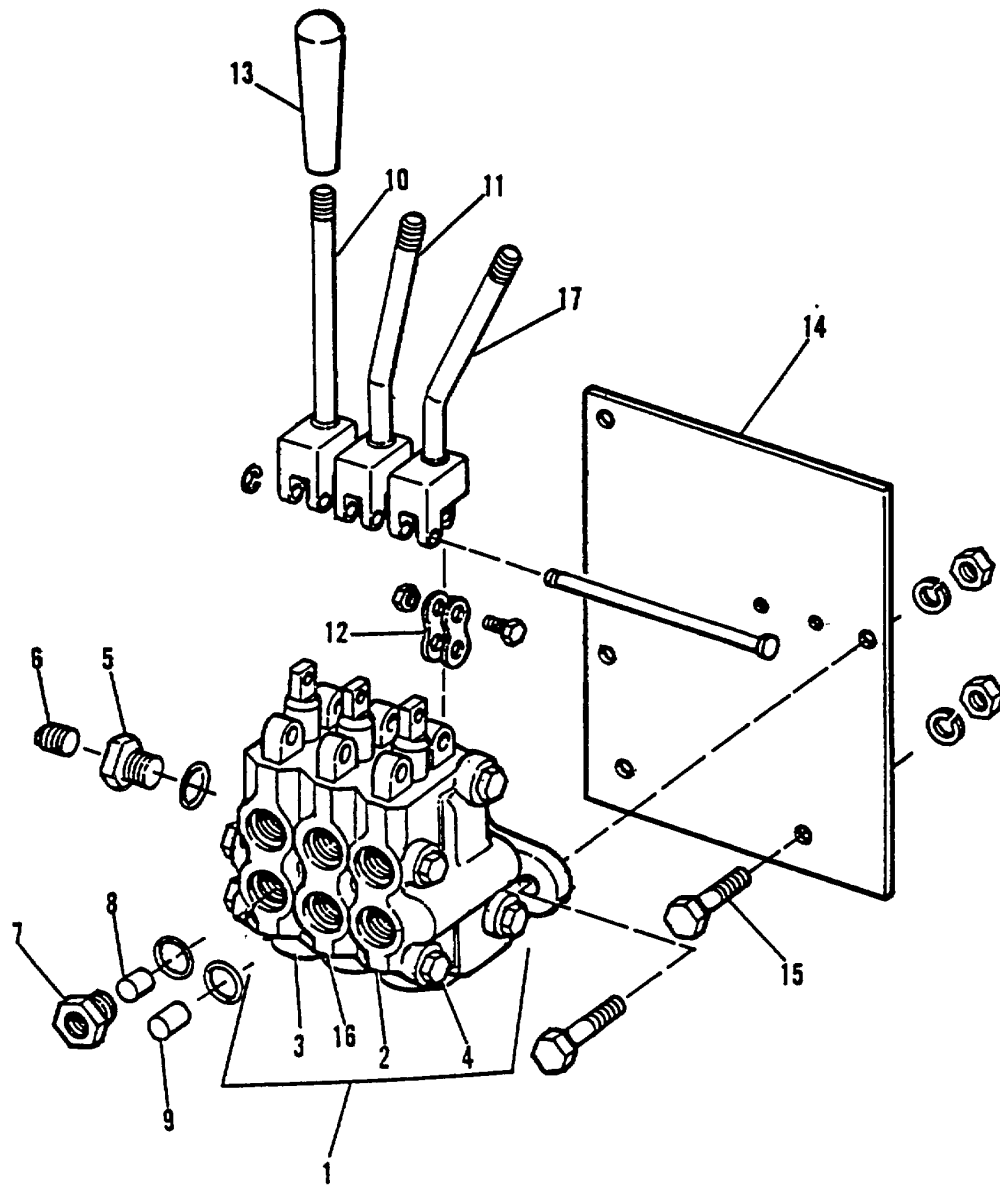

CONTROL VALVE

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4846112-3	VALVE ASSY-2 PLUNGER	1	INCL ITEMS 2, 3, 4 AND 16
	0921969-5	CAPSCREW-.38" -16 X 1.25"	3	
	0916965-7	LOCKWASHER	3	
	0916950-9	NUT-.38"-16	3	
2	4908223-3	PLUNGER SECTION ASSY-SIDE SHIFT	1	SEE PAGE 139
3	4908221-7	PLUNGER SECTION ASSY-LIFT	1	SEE PAGE 137
4	4908219-0	STUD	4	
	0916950-9	NUT-.38"-16	8	
5	4846665-0	PLUG	1	
	0921206-9	O-RING-#-912-.924" ID-SAE- TYPE 1	1	
6	0918850-9	PLUG-PIPE-.25"	1	
7	4843526-7	ADAPTOR-TILT	2	
	0921205-1	O-RING-#-910-.755"ID-SAE- TYPE 1	2	
8	4776665-4	POPPET-BLUE	1	
9	4776666-2	POPPET	1	
10	4857050-1	HANDLE ASSY-LIFT	1	
	0921967-6	CAPSCREW-.375"-16X1.12"	1	
	0916954-1	NUT-LOCK-.38"-16	1	
	4846667-6	PIN-YOKE-LOWER	1	
	0928197-3	RING-E-SIZE 37	2	
11	4857049-3	HANDLE ASSY-TILT	1	
	0921967-6	CAPSCREW-.375"-16X1.12"	1	
	0916954-1	NUT-LOCK-.38"	1	
	4846667-6	PIN-YOKE-LOWER	1	
	0928197-3	RING-E-SIZE 37	2	
12	4841221-7	LINK	6	
	0921973-4	CAPSCREW-.38"-16X2.75"	1	
	0916954-1	NUT-LOCK-.38"-16	1	
13	0233770-7	KNOB-BLACK RUBBER	3	
14	4878479-7	SUPPORT ASSY-VALVE	1	
15	0920328-2	CAPSCREW-	2	
	0923290-1	WASHER	2	
	0916966-5	LOCKWASHER-	2	
	0916951-7	NUT	2	
16	4908222-5	PLUNGER SECTION ASSY-TILT	1	SEE PAGE 141
17	4857048-5	HANDLE ASSEMBLY, SIDE SHIFT	1	
	0921967-6	CAPSCREW	1	
	0916954-1	NUT - LOCK	1	
	4846667-6	PIN - YOKE	1	
	0928197-3	RING - E	2	

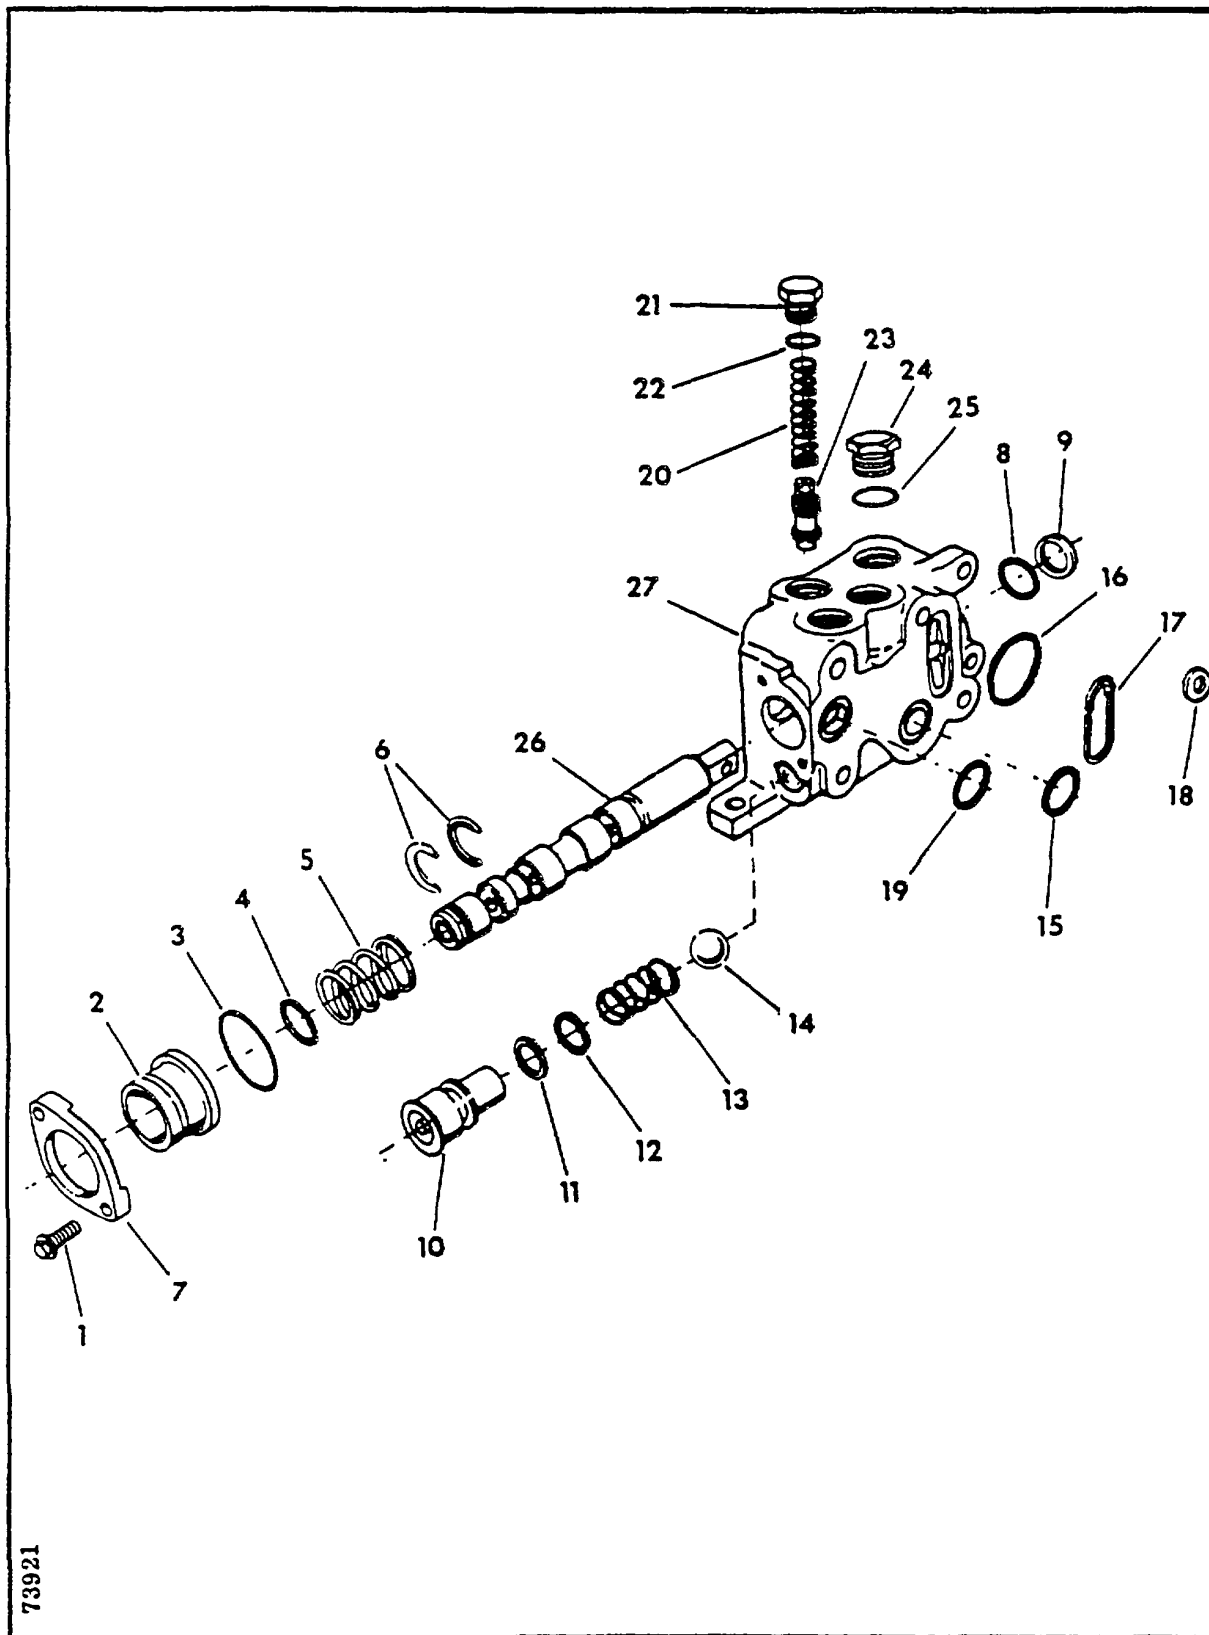


73921

PLUNGER SECTION ASSY - LIFT-4908221-7

ITEM	PART NO.	DESCRIPTION	QTY.
1	4908201-9	CAPSCREW	2
2	4908202-7	SLEEVE	1
3	0923989-8	*O-RING-#-024- 1.11" ID-CLASS 1A	1
4	4753681-8	*O-RING	1
5	4908203-5	SPRING	1
6	4908204-3	C-WASHER	2
7	4908205-0	RETAINER	1
8	4908208-4	*O-RING	1
9	4908209-2	*RING-BACKUP	1
10	4908214-2	PLUG	1
11	4908215-9	*RING-BACKUP	1
12	0923548-2	*O-RING-#-111- .42" ID-CLASS 1A	1
13	4908216-7	SPRING	1
14	4908217-5	BALL	1
15	4908213-4	*SEAL	1
16	4908210-0	*SEAL	1
17	4908211-8	RETAINER	1
18	4908212-6	SHIM	4
19	0926803-8	*SEAL-SQUARE CUT-#-118- .86" ID-70 DURO	1
20	4908206-8	SPRING	1
21	0927547-0	PLUG-SAE STD-.75" -16	1
22	0921349-7	*O-RING-#-908- .64" ID-SAE-TYPE 1	1
23	4908207-6	VALVE-RELIEF	1
24	0928208-8	PLUG-SAE STD- .88" -14	1
25	0921205-1	*O-RING-#-910- .76" ID-SAE-TYPE 1	1
26	-----	SPOOL	1
27	-----	HOUSING	1

ORDER 4908221-7 ASSY
ORDER 4908221-7 ASSY

*INCL IN KIT 4908224-1

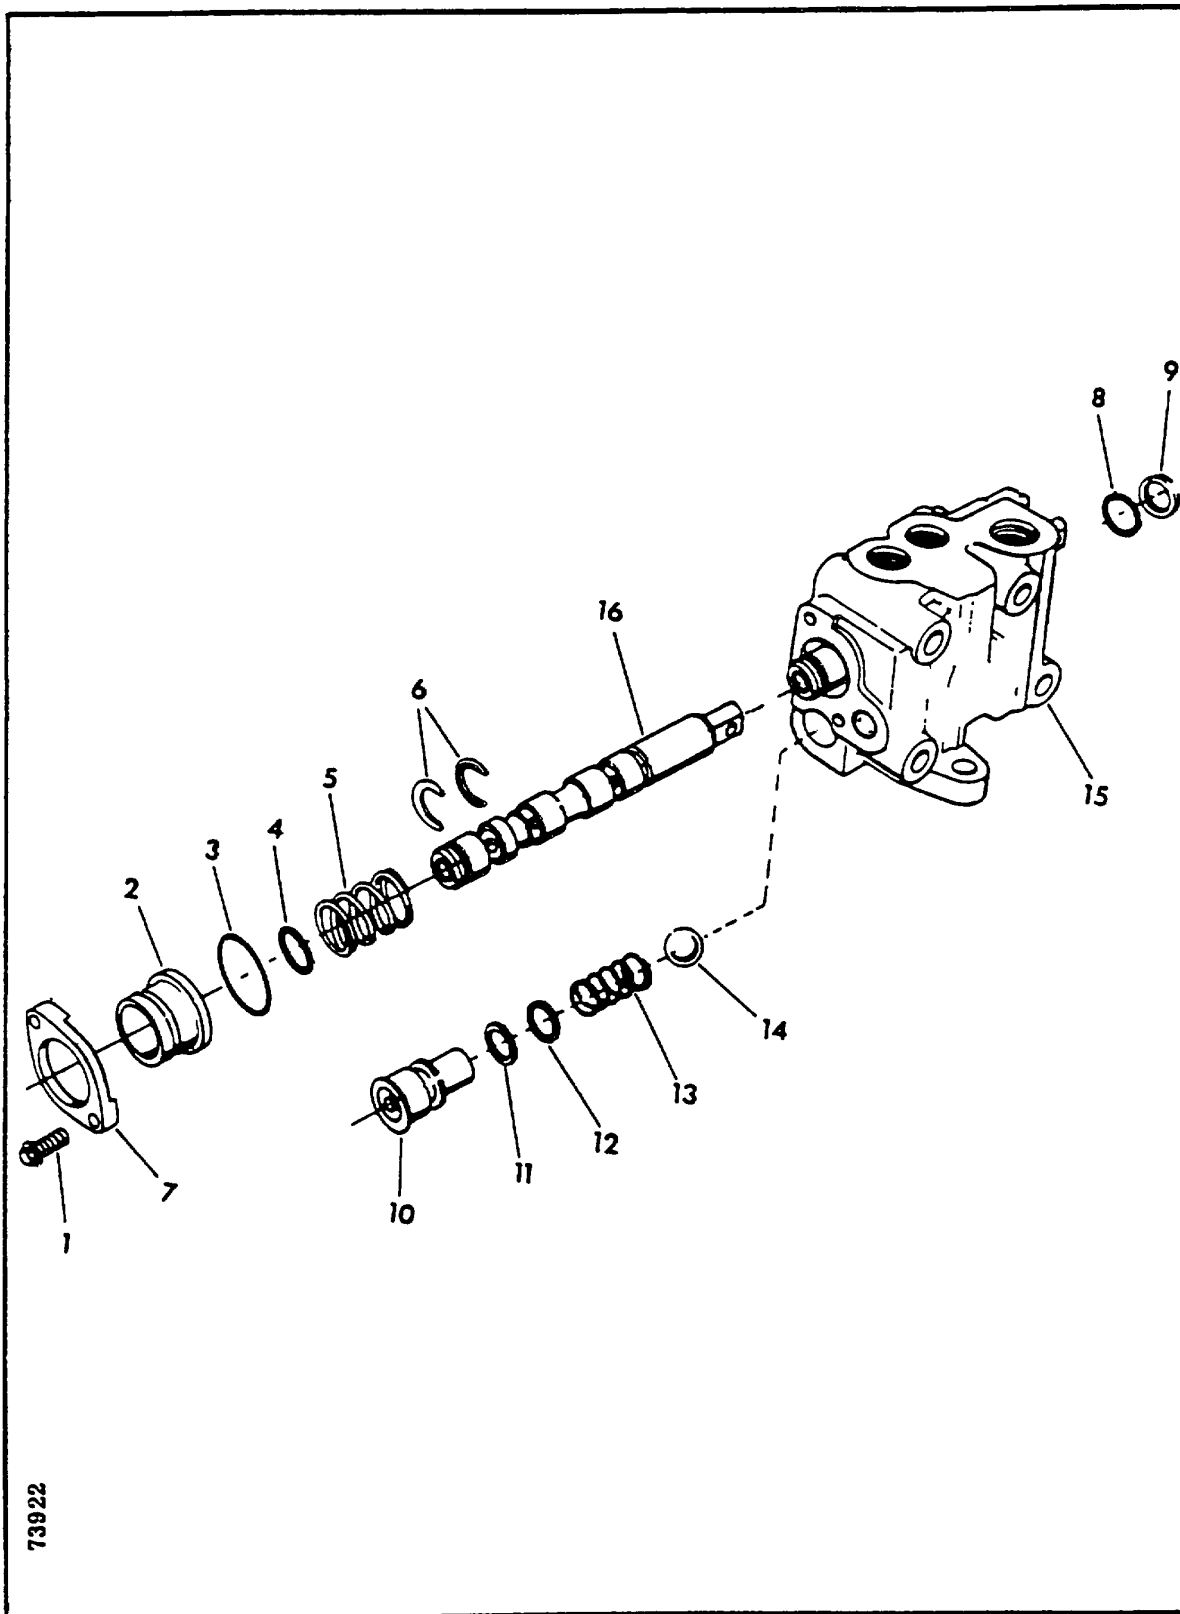


73922

PLUNGER SECT ASSY-TILT/ACC-4908223-3

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4908201-9	CAPSCREW	2	
2	4908202-7	SLEEVE	1	
3	0923989-8	*O-RING-#-024- 1.11" ID-CLASS 1A	1	
4	4753681-8	*O-RING	1	
5	4908203-5	SPRING	1	
6	4908204-3	C-WASHER	2	
7	4908205-0	RETAINER	1	
8	4908208-4	*O-RING	1	
9	4908209-2	*RING-BACKUP	1	
10	4908214-2	PLUG	1	
11	4908215-9	*RING-BACKUP	1	
12	0923548-2	*O-RING-#-111- .42" ID-CLASS 1A	1	
13	4908216-7	SPRING	1	
14	4908217-5	BALL	1	
15	-----	HOUSING	1	ORDER 4908223-3 ASSY
16	-----	SPOOL	1	ORDER 4908223-3 ASSY


*INCL IN KIT 4908224-1

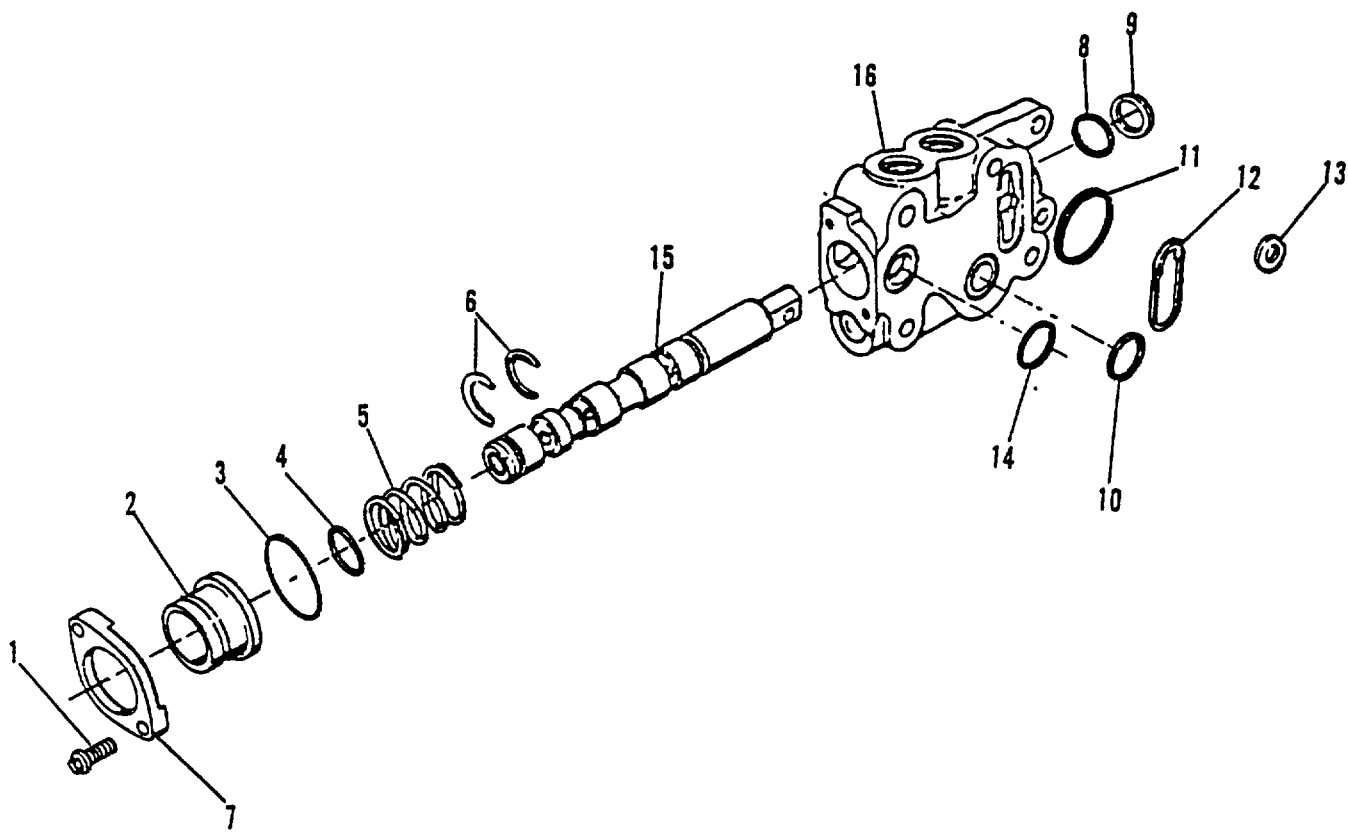

PLUNGER SECTION ASSY - SIDE SHIFT-4908222-5


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4908201-9	CAPSCREW	2	
2	4908202-7	SLEEVE	1	
3	0923989-8	*O-RING-#-024- 1.11" ID-CLASS 1A	1	
4	4753681-8	*O-RING	1	
5	4908203-5	SPRING	1	
6	4908204-3	C-WASHER	2	
7	4908205-0	RETAINER	1	
8	4908208-4	*O-RING	1	
9	4908209-2	*RING-BACKUP	1	
10	4908213-4	*SEAL	1	
11	4908210-0	*SEAL	1	
12	4908211-8	RETAINER	1	
13	4908212-6	SHIM	4	
14	0926803-8	*SEAL-SQUARE CUT-#-118- .86" ID-70 DURO	1	
15	-----	SPOOL	1	ORDER 4908222-5 ASSY
16	-----	HOUSING	1	ORDER 4908222-5 ASSY

*INCL IN KIT 4908224-1

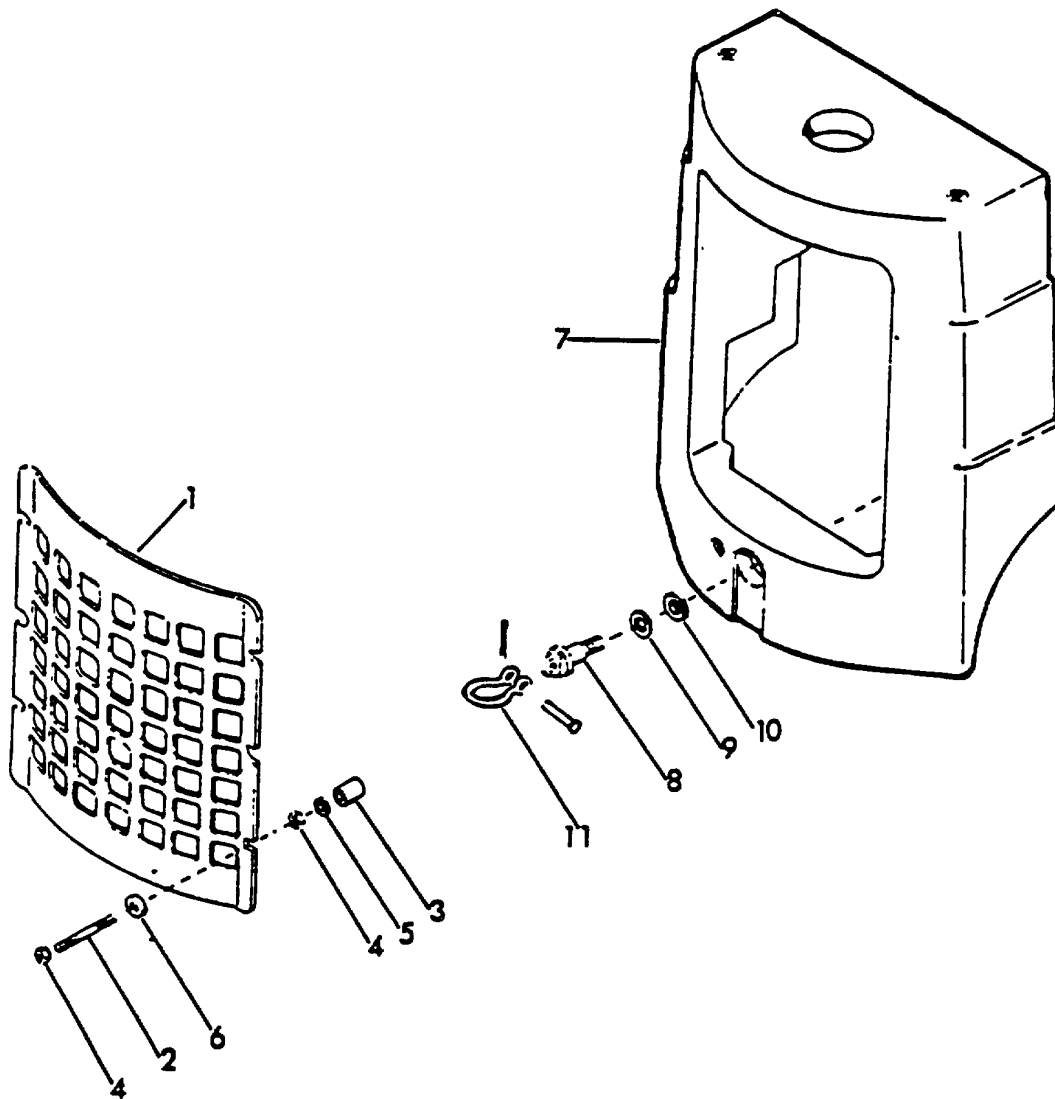

COUNTERWEIGHT


ITEM	PART NO.	DESCRIPTION	QTY.
1	4856658-2	GRILL.	1
2	4864097-3	ROD	4
3	4857258-0	SPACER	4
4	0931460-0	NUT-.38"-16	8
5	0916965-7	WASHER-LOCK	4
6	0925311-3	WASHER-	4
7	4857225-9	COUNTERWEIGHT ASSY	1
8	4857222-6	STUD-TOWING	1
9	4878165-2	SHIM	2
10	0929326-7	WASHER-1.44" X 2.75"	1
11	0920571-7	SHACKLE-.62"	1
	0918269-2	WASHER	2
	0919332-7	LOCKWASHER	2
	0922037-7	NUT	2
	0928898-6	CAPSCREW	2

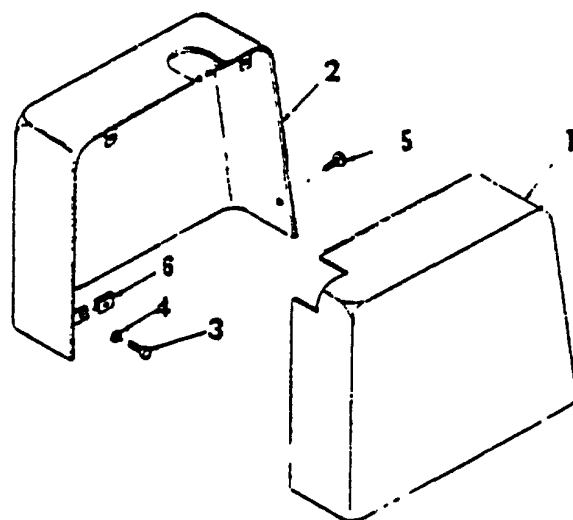

71412


COWL

ITEM	PART NO.	DESCRIPTION	QTY.
1	4881592-2	COWL-RIGHT HAND	1
2	4820955-5	COWL-LEFT HAND	1
3	0921977-5	CAPSCREW- .31"-18 X 1.25"	6
4	0917356-8	LOCKWASHER- .31"	6
5	0925670-2	SCREW-TR HD- .31"-18 X 1"	2
6	0921355-4	NUT-SPEED- .31"-18	2

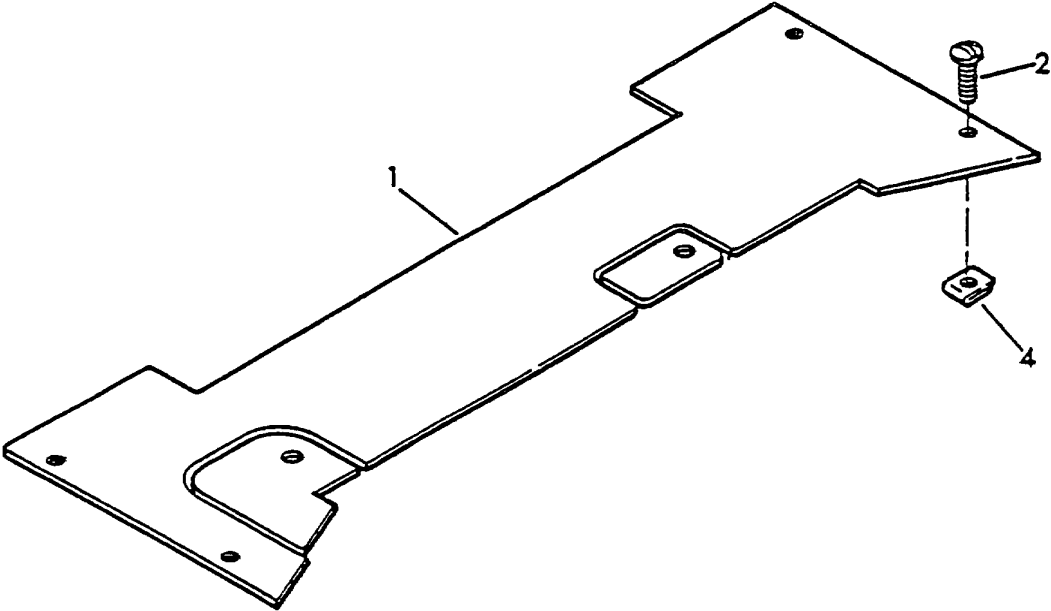


FLOOR PLATE - POWER SHIFT

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4858935-2	PLATE-FLOOR	1	144 INCH LIFT
2	0918249-4	SCREW-TRUSS HD-.31-18 X .75	4	
3		NOT USED	2	
4	0921355-4	NUT-SPEED	4	

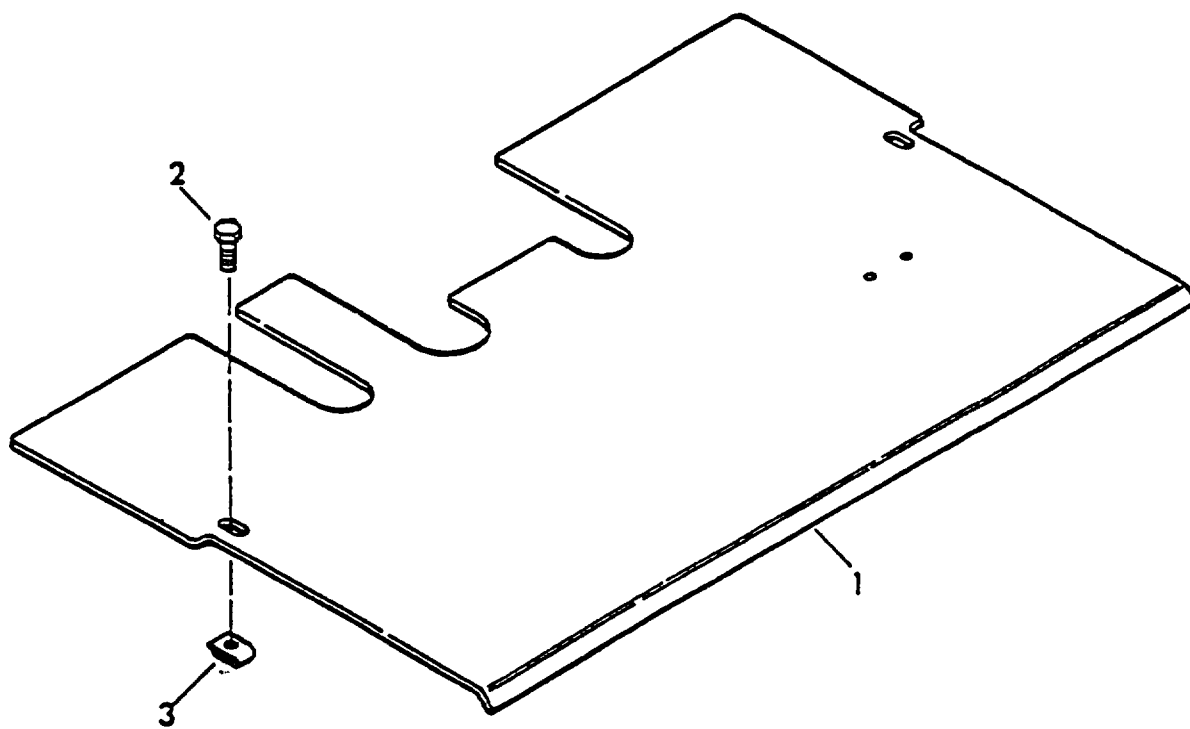

TOE PLATE - POWER SHIFT


ITEM	PART NO.	DESCRIPTION	QTY.
1	4866945-1	PLATE- TOE	1
2	0918249-4	CAPSCREW- .31" -18 X 1"	4
3	0916159-7	NUT- SPEED- .31" -18	4

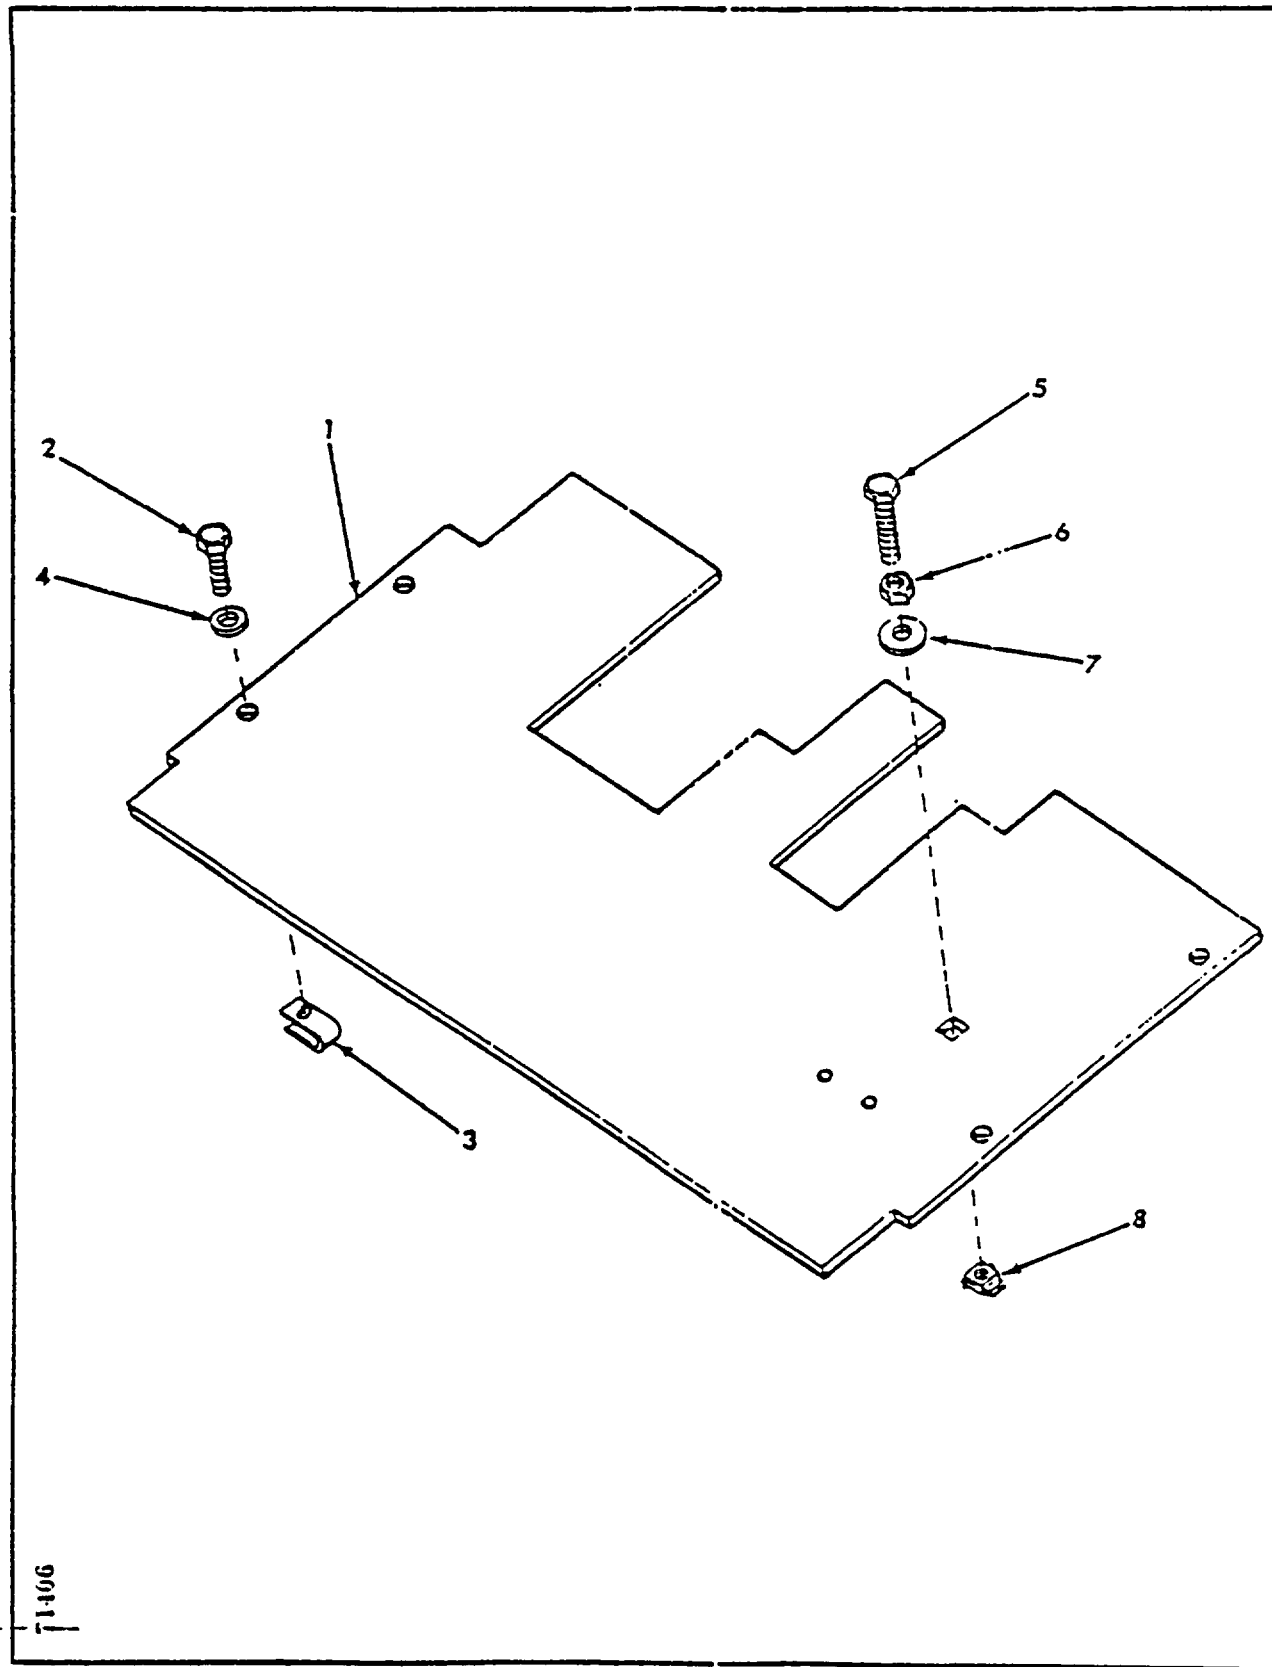

71466



TOE PLATE - POWER SHIFT

ITEM	PART NO.	DESCRIPTION	QTY.
1	4857195-4	PLATE-TOE	1
2	0921332-3	CAPSCREW - .31" - 18 X 1"	4
3	0921355-4	NUT- SPEED- .31" -18 X 1	4
4	0917642-1	WASHER- .38"	4
5	0921969-2	CAPSCREW- .38" -16 X .5"	1
6	0916950-9	NUT- .38" -16	1
7	0917378-2	WASHER- .44"	1
8	0921705-0	NUT- RETAINER- .38" -16	1

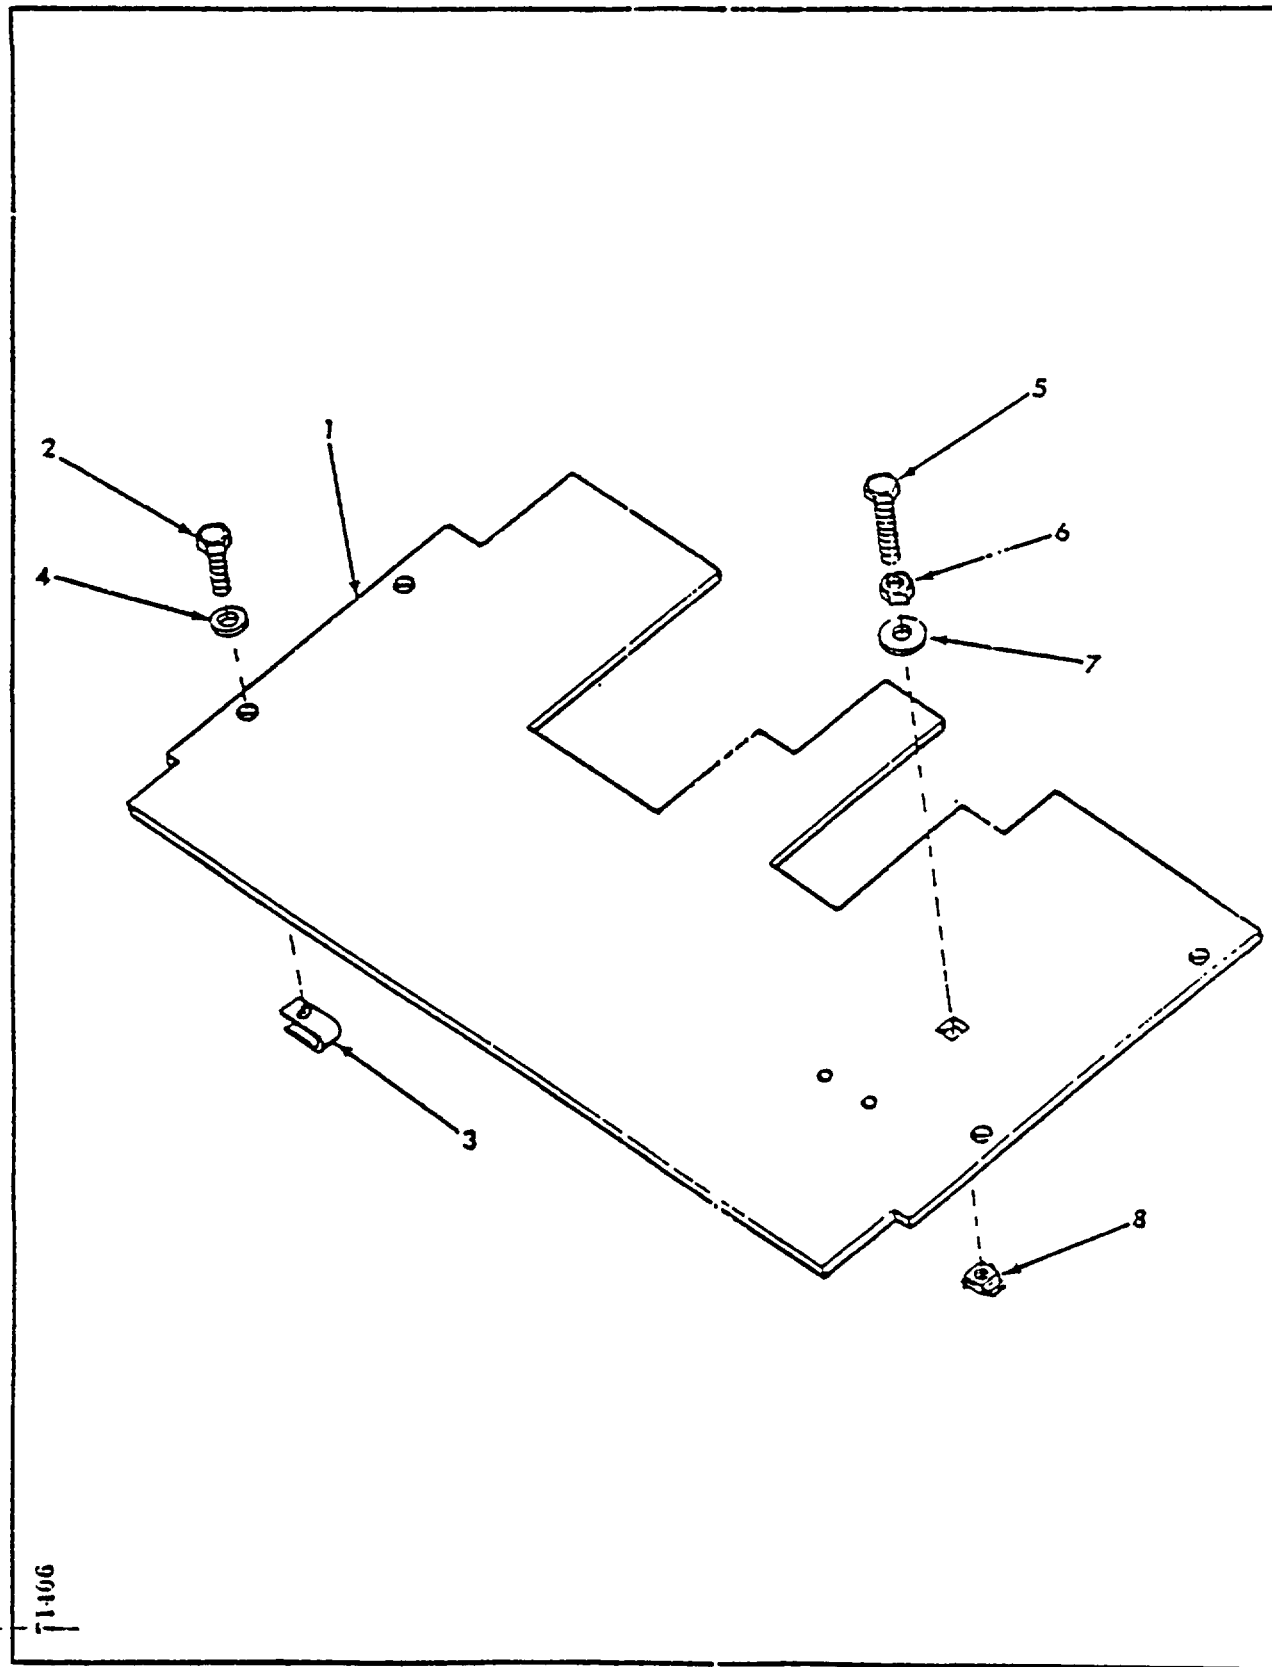


OVERHEAD GUARD

ITEM	PART NO.	DESCRIPTION	QTY.
1	4878132-2	GUARD ASSY	1
2	0921176-4	CAPSCREW- .5" -13 X 1.25"	4
3	0916966-5	LOCKWASHER- .5"	4
3A	0924360-1	WASHER- .5"	4
4	0916951-7	NUT- .5" -13	4
5	0919089-3	CAPSCREW- .5" -13 X 1.75"	2
6	0916966-5	LOCKWASHER- .5"	2
7	0916951-7	NUT- .5" -13	2

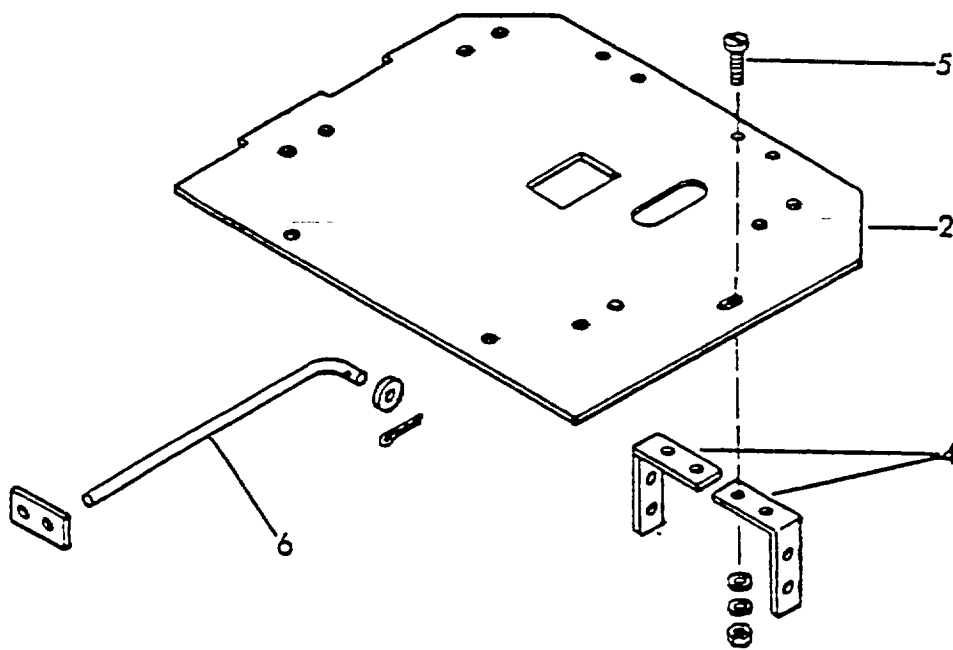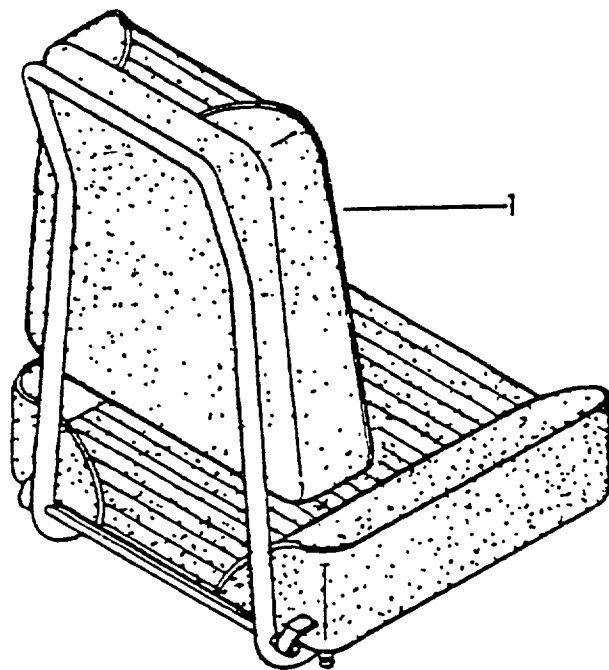

SEAT


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4825413-4	SEAT ASSY	1	SEE PAGE 153
2	4878141-3	SUPPORT ASSY	1	
R	0917356-8	LOCKWASHER-.31"	4	
R	0918265-0	WASHER-.31"	4	
3		NOT USED		
4	4844885-6	ANGLE-HINGE	2	
5	0921332-3	CAPSCREW-.31"-18 X .75"	4	
	0918265-0	WASHER-.31"	4	
	0917356-8	LOCKWASHER-.31"	4	
	0917372-5	NUT-.31"-18	4	
6	4880707-7	PROP SEAT	1	
	0917378-2	WASHER-.38"	1	
	0918447-4	PIN-COTTER-.12 X 1"	1	
	4750039-2	CLAMP	1	
	0923938-5	CAPSCREW-.375"-16 X 3.50	2	
	0916965-7	LOCKWASHER	2	
	0916950-9	NUT	2	
	0917441-8	CAPSCREW-#8-32 X .5	1	
	0917395-5	LOCKWASHER-#8	1	
	0917385-6	NUT-#8-32	1	
	0925369-1	SCREW	2	
	0917365-9	LOCKWASHER	2	
	0917415-2	NUT	2	

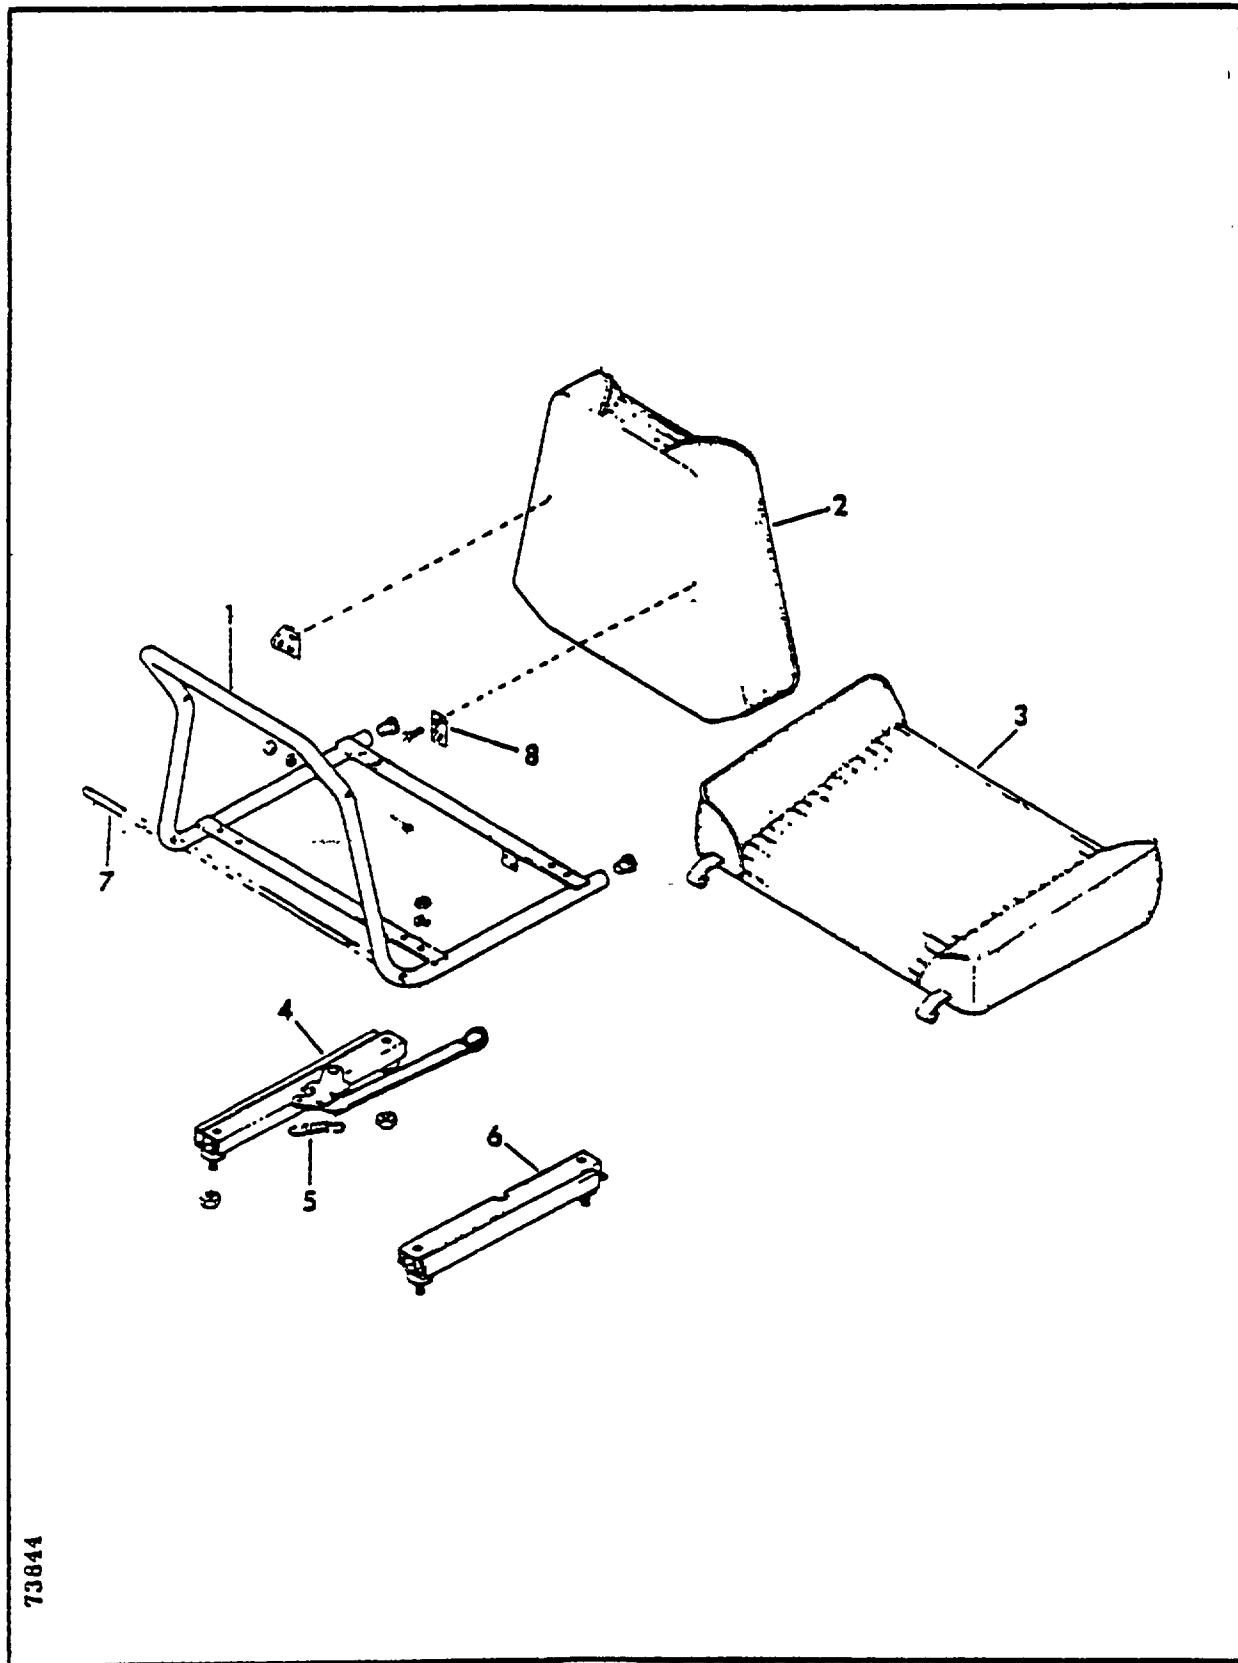

73844


SEAT ASSY

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4907651-6	FRAME	1	INCLUDES PLASTIC TIPS
	4906408-2	TIP- BLACK PLASTIC- .88"	2	
2	4828474-9	CUSHION-BACKREST INCLUDES ITEM 8	1	
	0900537-2	SCREW- .25" -20 X 1.5"	2	
	0918264-3	WASHER-PLATED- .28"	2	
	0920329-0	NUT-STOP- .25" -20	2	
3	4907650-8	CUSHION-SEAT	1	
4	4907382-8	ADJUSTER-SLIDE	1	INCL ITEM 5
	0917366-7	CAPSCREW-PLATED- .31" -24 X .87"	2	
	0917356-8	LOCKWASHER-PLATED- .31"	2	
	0920263-1	NUT-PLATED- .31" -24	2	
	0917372-5	NUT-PLATED- .31" -18	2	
5	4907476-8	SPRING-ADJUSTER	1	
6	4907383-6	SLIDE	1	
	0917366-7	CAPSCREW-PLATED- .31" -24 X .87"	2	
	0917356-8	LOCKWASHER-PLATED- .31"	2	
	0920263-1	NUT-PLATED- .31" -24	2	
	0917372-5	NUT-PLATED- .31" -18	2	
7	4819871-7	ROD	1	
	0918448-2	PIN-COTTER-PLATED- .09" -1"	2	
8	4906618-6	HINGE-BACKREST	2	
	0900576-0	SCREW- .25" -20 X .75"	4	

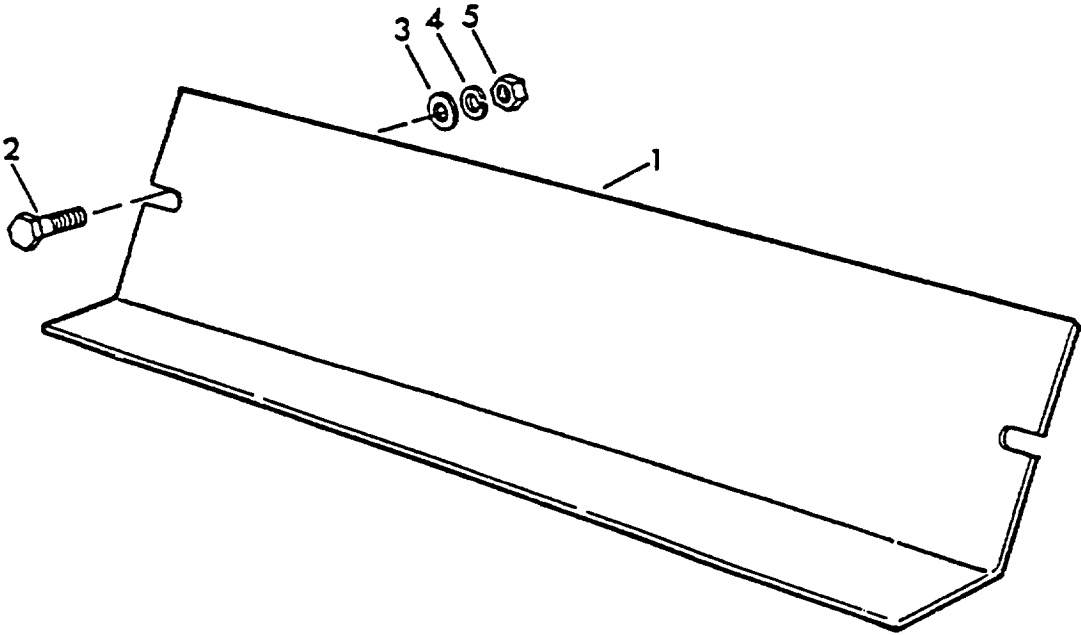

DECK


ITEM	PART NO.	DESCRIPTION	QTY.
1	4878140-5	GUARD	1
2	0921332-3	SCREW-RD HD-.31-18 X .75	2
3	0917642-1	WASHER	4
4	0917356-8	LOCKWASHER	2
5	0916159-7	NUT	2

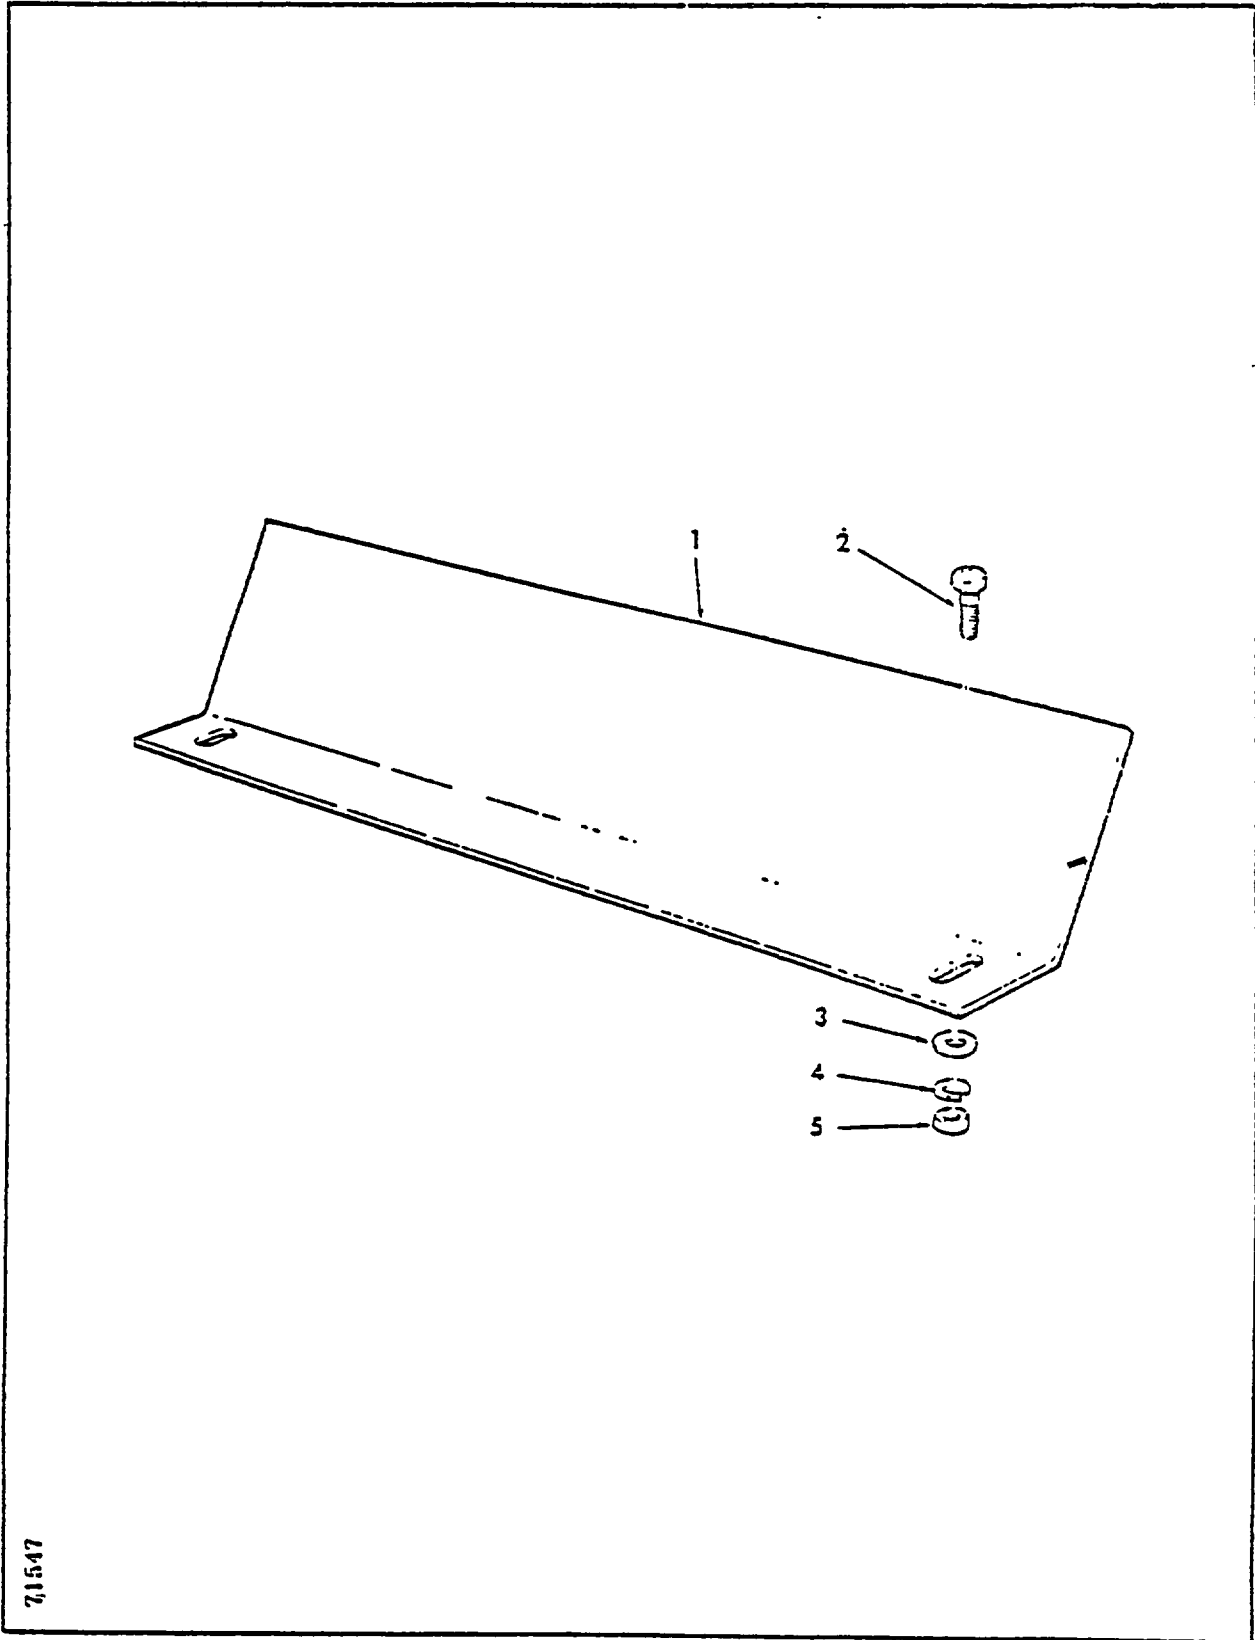

71547

DECK


ITEM	PART NO.	DESCRIPTION	QTY.
1	4820995-1	GUARD.	1
2	0916532-5	SCREW- RD HD- .25" -20 X .75"	2
3	0929361-4	WASHER- .31x.63 "	4
4	0916964-0	LOCKWASHER- .25'	2
5	0916622-4	NUT- .25" -20	2

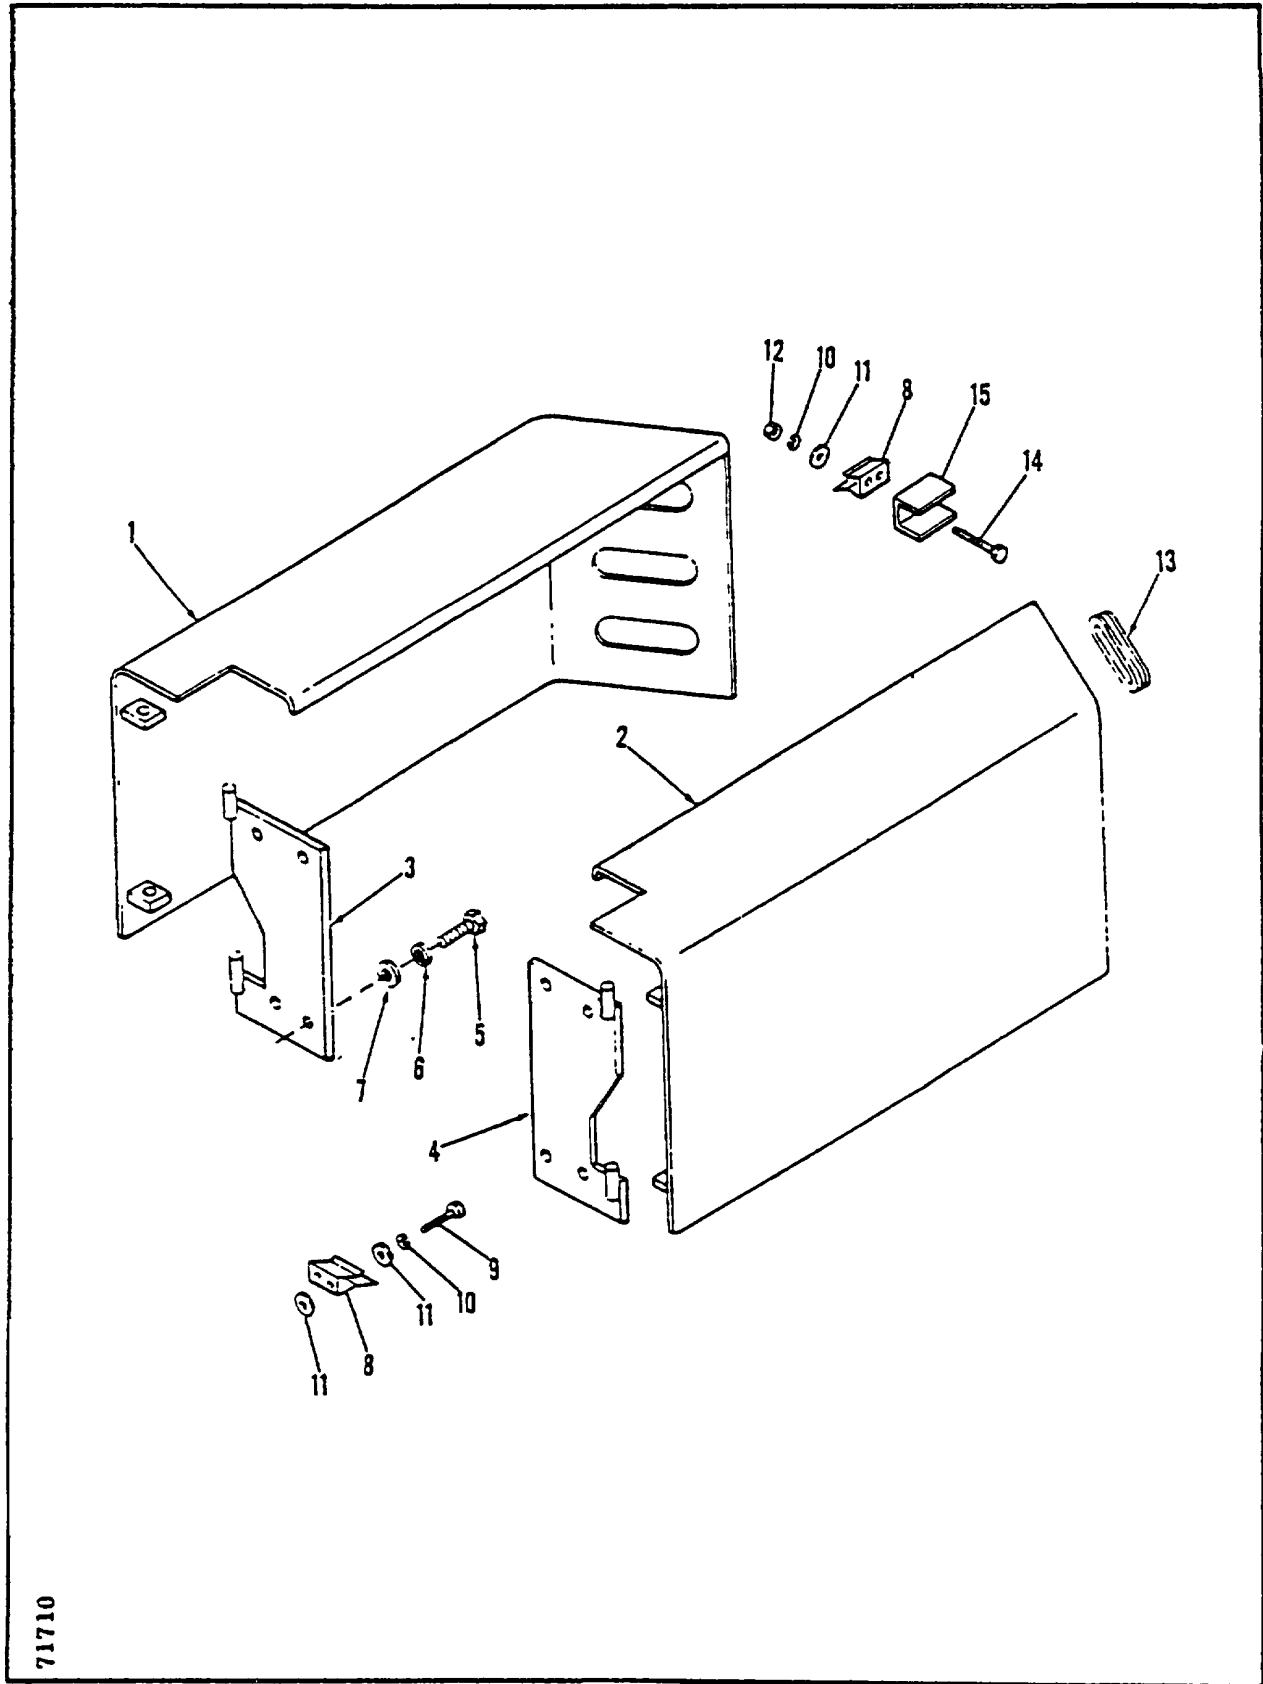

71710

SIDE PANEL


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4881716-7	PANEL ASSY-LEFT HAND	1	
2	4878480-5	PANEL ASSY-RIGHT HAND	1	144 INCH LIFT
3	4863263-2	HINGE ASSY-LEFT HAND	1	
4	4878135-5	HINGE ASSY-RIGHT HAND	1	
5	4255060-8	CAPSCREW	4	
6	NOT USED			
7	0924356-9	WASHER-.38"	4	
8	4881730-8	CLIP	3	
9	0923341-2	CAPSCREW-.25"-20 X .75"	2	
10	0916964-0	LOCKWASHER-.25"	6	
11	0918264-3	WASHER-.25"	8	
12	0916622-4	NUT-.Z5"-20	4	
13	4826029-3	GROMMET-RUBBER	2	
14	0921159-0	CAPSCREW	4	
15	4878142-1	SPACER	2	

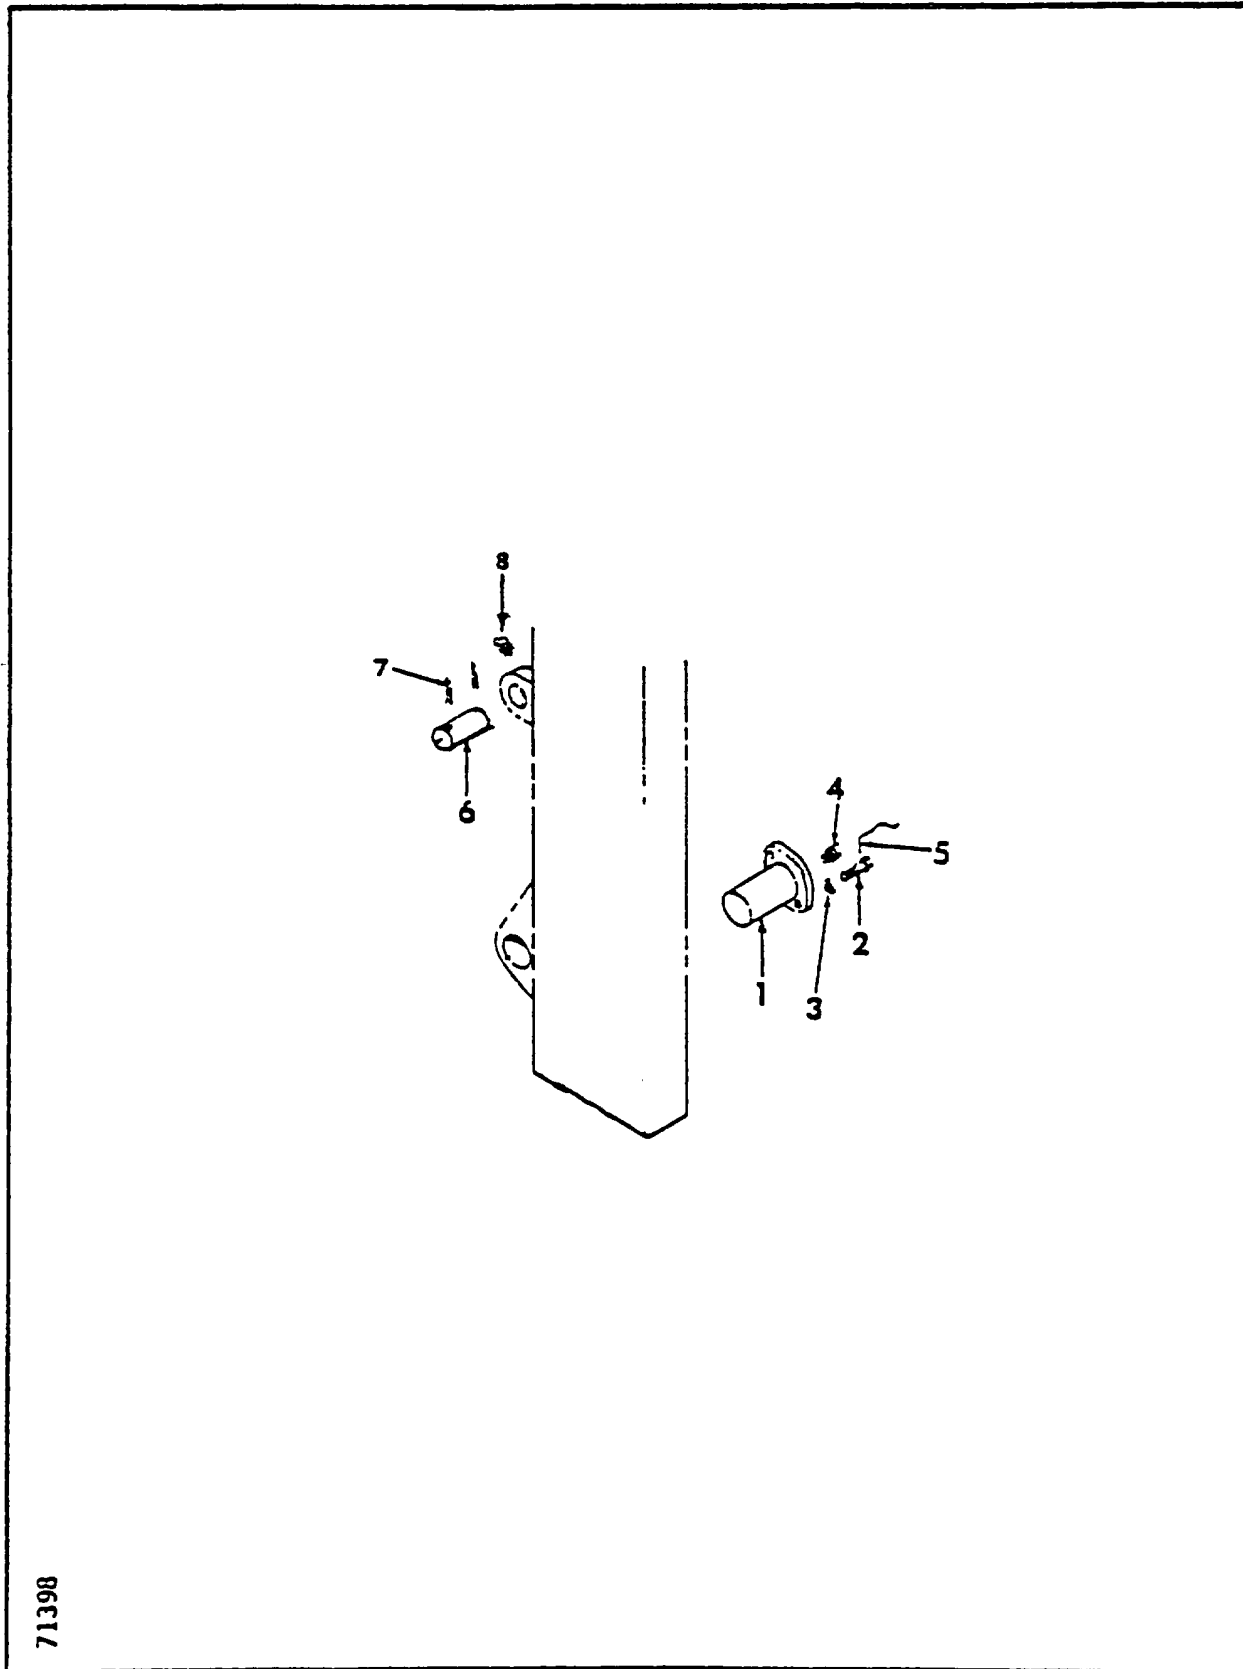

71398


MAST MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY.
1	4718482-5	PIN-MAST	2
2	4335601-3	CAPSCREW-.38" -16 X 1.25"	4
3	0916965-7	LOCKWASHER-.38"	4
4	0915276-0	FITTING-LUBE-650	2
5	4742113-6	WIRE	2
6	4826276-0	PIN	2
7	0919430-9	PIN-COTTER-.25" X .5"	4
8	0918187-6	FITTING-LUBE-450-.25"-28	2

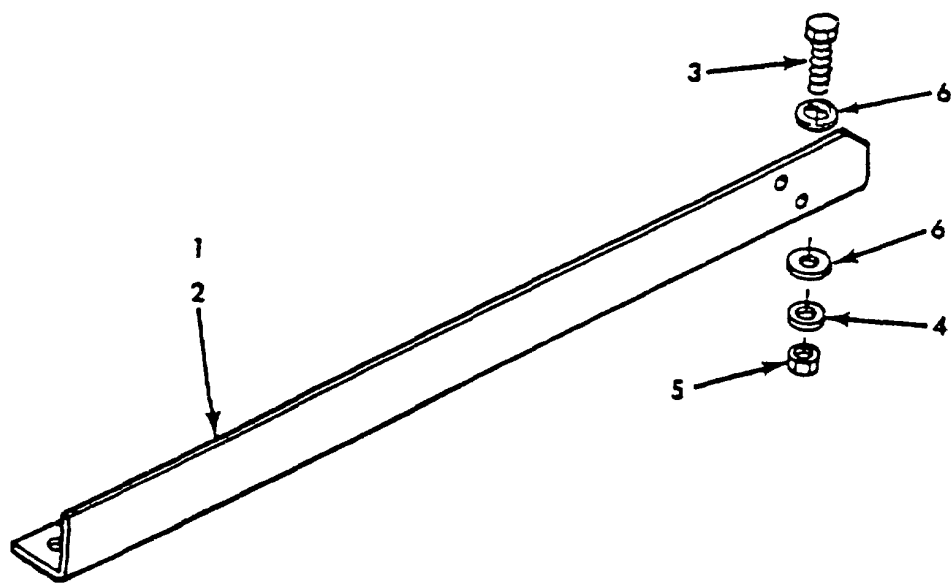


CROSS TIE

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4878149-6	ANGLE-LH	1	
2	4878145-4	ANGLE-RH	1	144 INCH LIFT
3	0921210-1	CAPSCREW-3.8"-16 X 1"	4	
4	0916965-7	LOCKWASHER-.38"	4	
5	0916950-9	NUT-.38"-16	2	
6	0917378-2	WASHER-.38"	6	

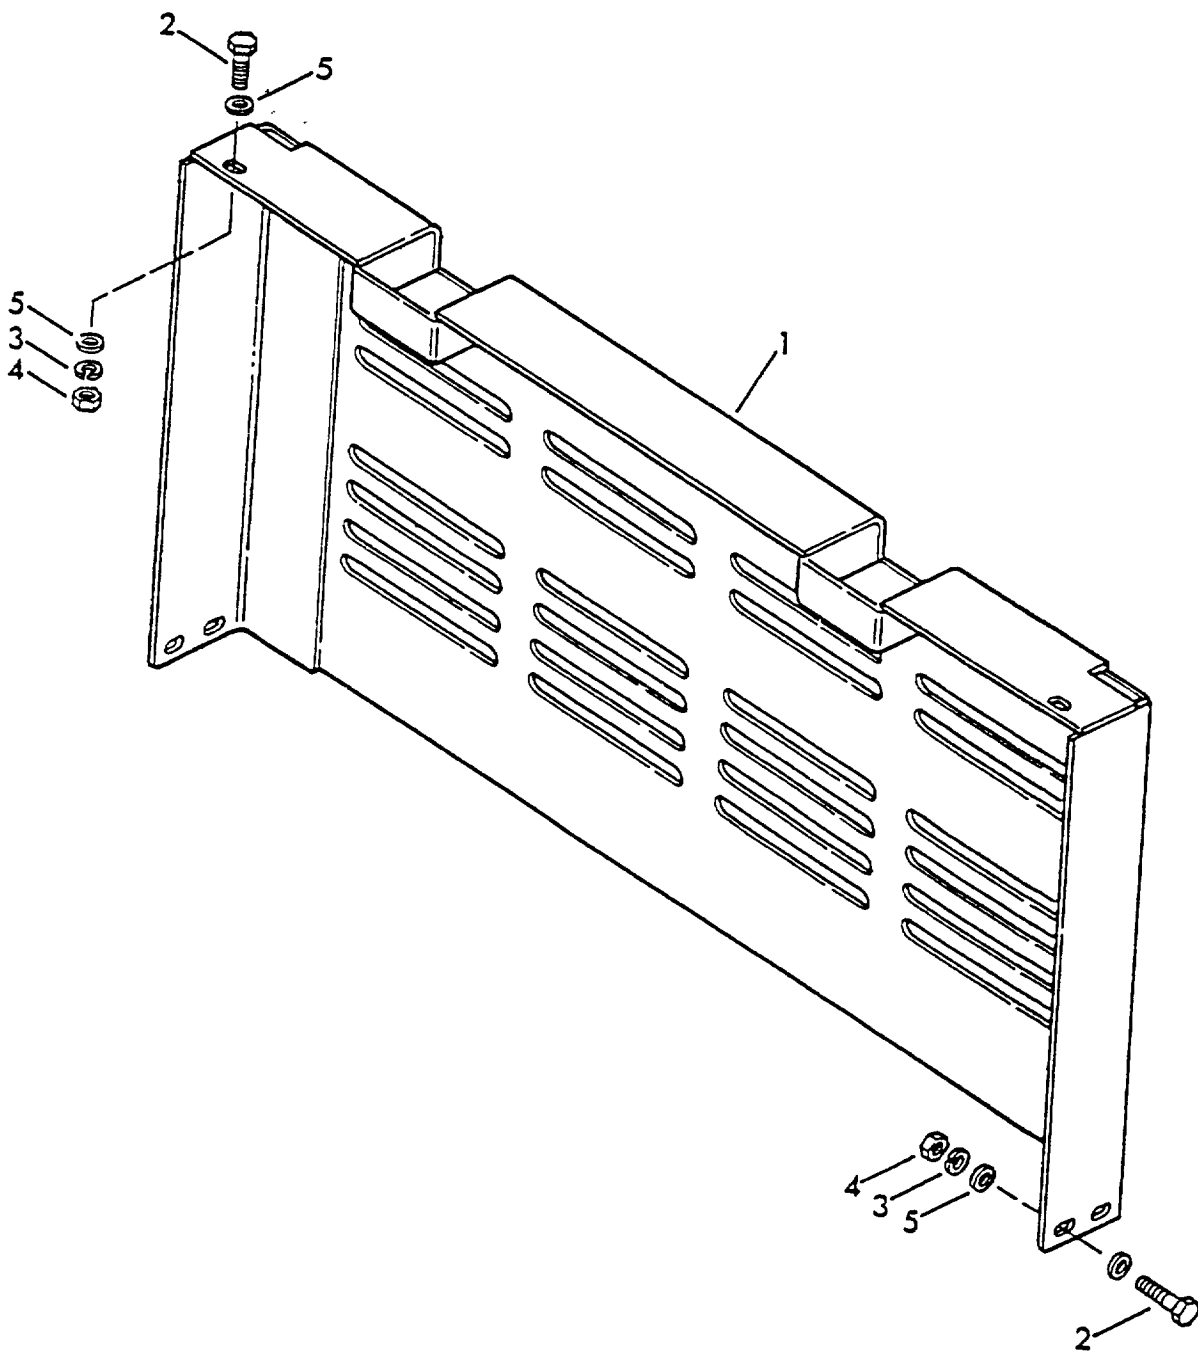


FRONT SCREEN

ITEM	PART NO.	DESCRIPTION	QTY.
1	4878139-7	SCREEN	1
2	0920415-7	CAPSCREW-.38"-16 X 1.25"	4
3	0916965-7	LOCKWASHER- .38	4
4	0916950-9	NUT- .38"-16	4
5	0918266-8	WASHER - .38" X .81"	8

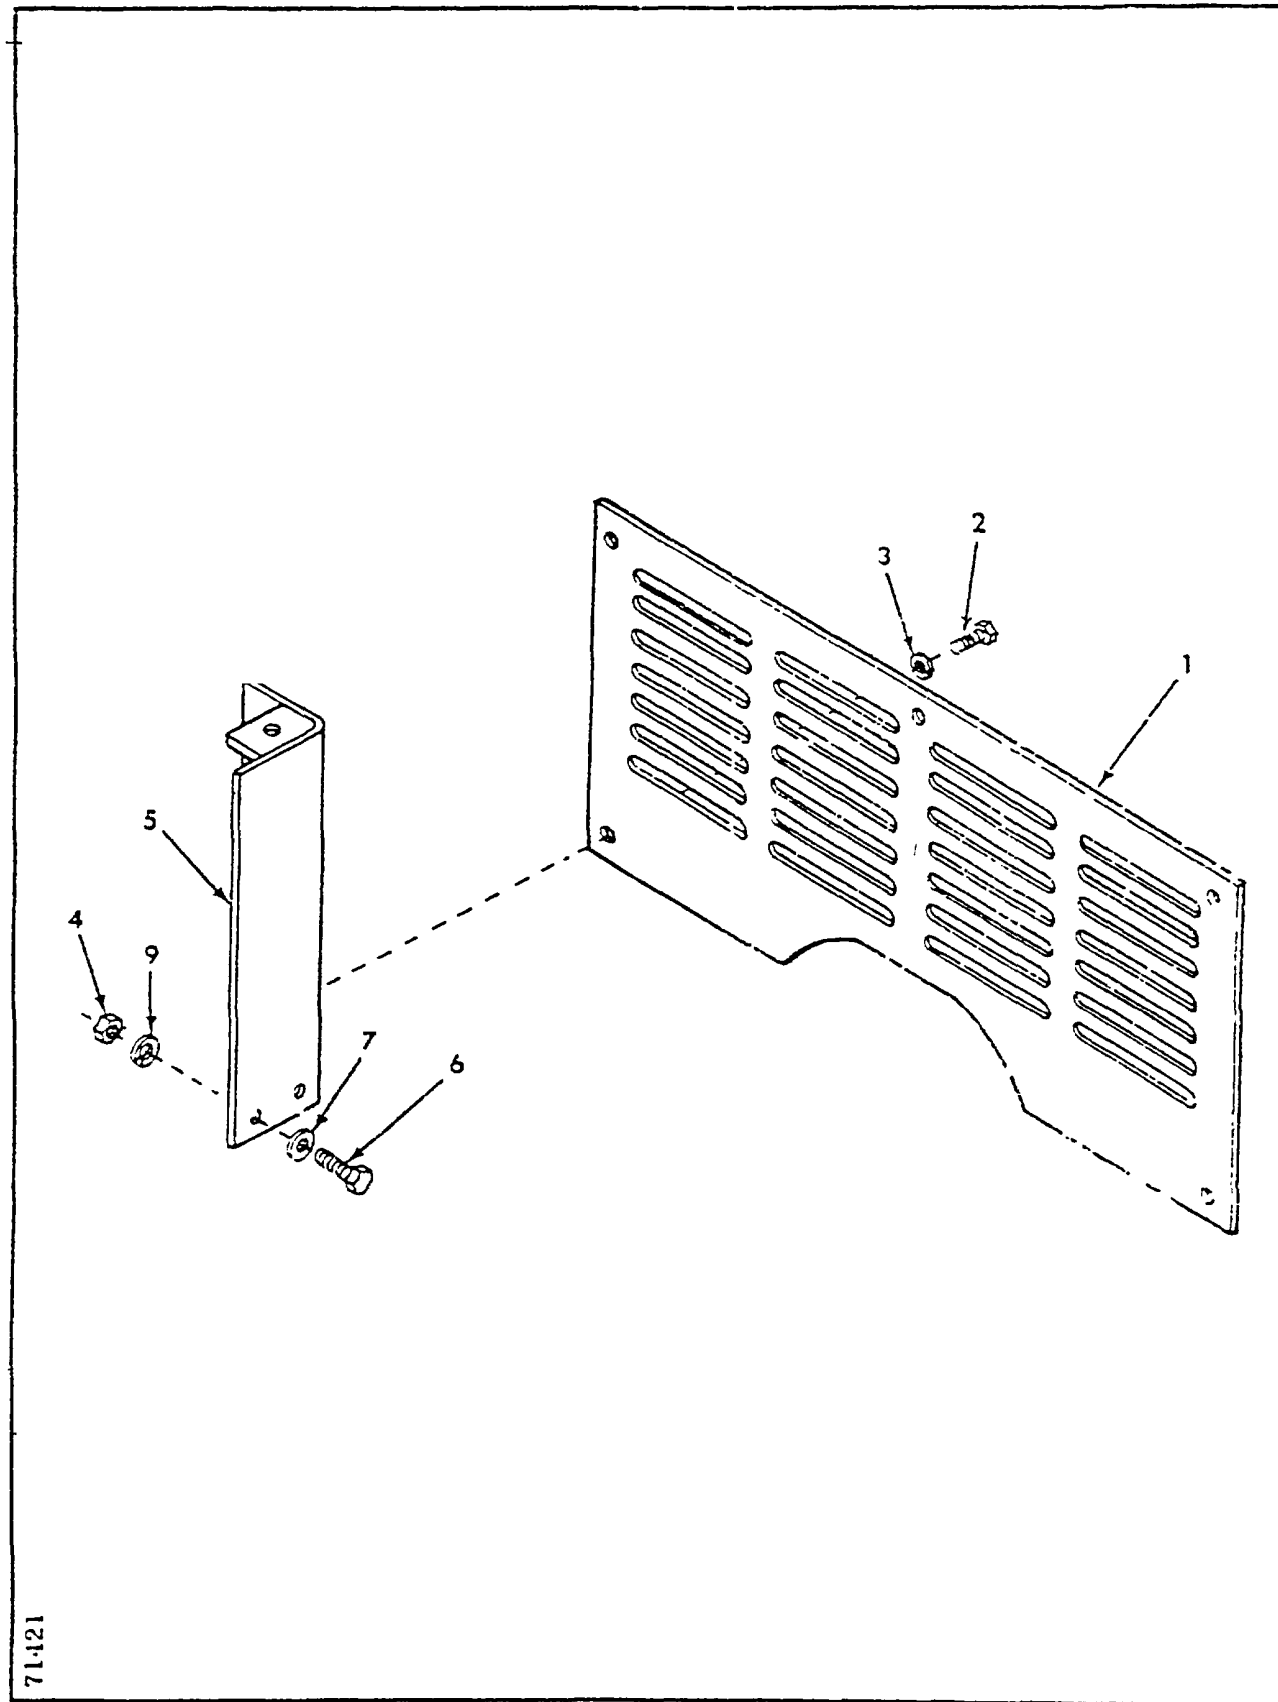

FRONT SCREEN


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4869541-5	SCREEN	1	
2	0918249/4	SCREW-TR. HD.-.31"-18 x .75"	2	
3	0917356/8	LOCKWASHER -.31"	2	
4	0917372/5	NUT- .31" -18	2	
5	4880716-8	SUPPORT ASSY -LH	1	
6	0920415-7	CAPSCREW -.38" -16 x 1.25"	4	
7	0916965/7	LOCKWASHER-	4	
8	0916950/9	NUT-.38"-16	4	NOT ILLUSTRATED
9	0918266/8	WASHER-.38" x' 81"	4	
	4880718-4	SUPPORT ASSY -RH	1	

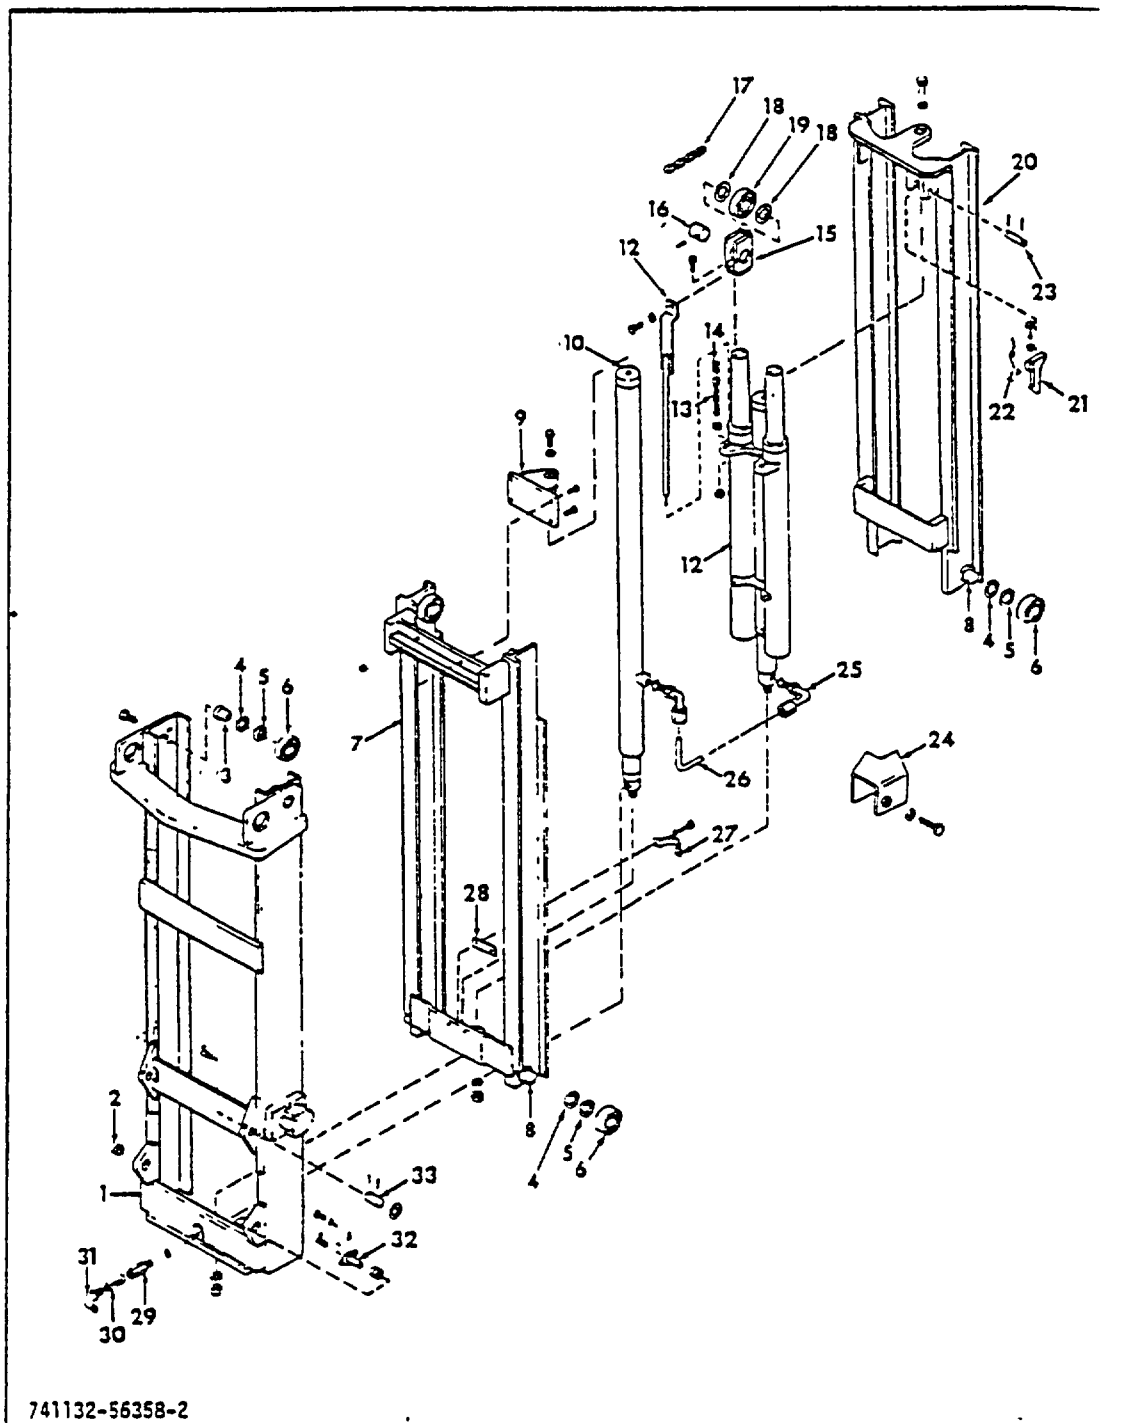

741132-56358-2

TRI-MAX LIFT ASSY - 180"


ITEM	PART NO.	DESCRIPTION	QTY.	
-	4881901-5	LIFT ASSY-TRI MAX	1	INCL ITEM 1 THRU 31
1	4853745-0	MAST ASSY-OUTER	1	INCL ITEM 2
2	4715712-8	BUSHING-MAST PIVOT	2	
3	4812974-6	STUD-ROLLER	2	
	0925161-1	CAPSCREW.-GR 8-.62"-11 X 1.5"	2	
4	4812930-8	SHIM-.015"	*	USE AS REQUIRED
5	4812929-0	SHIM-.040"	*	USE AS REQUIRED
6	4812920-0	BEARING-ROLLER	8	
7	4853849-0	MAST ASSY-INTERMEDIATE	1	INCL 4 OF ITEM 8
8	4829752-5	STUD-ROLLER	6	
9	4829288-2	BRACKET-CYLINDER	1	
	0923293-5	CAPSCREW-GR 5-.5"-20 X 2.25	2	
	0929530-4	CAPSCREW-GR 5-.5"-20 X 1.75	2	
	0923805-6	NUT-LOCK-. 5"-20	4	
10	4816888-4	CYLINDER ASSY-LIFT	1	SEE PAGE 183
11	-----	ROD ASSY-PROTECTOR	*	*NOT USED
	0920787-9	CAPSCREW-.31"-18 X .5"	2	
	0917356-8	LOCKWASHER-.31"	2	
12	4863125-3	CLUSTER-LIFT CYL	1	SEE PAGE 181
	0929533-8	CAPSCREW-GR 5-.52"-18 X 1.5	1	
	0917373-3	LOCKWASHER-.62"	1	
13	4765796-0	ANCHOR-CHAIN	2	
	0919333-5	NUT-.75"-16	4	
14	4701704-1	LINK-CHAIN CONNECTING	2	
R 15	4829757-6	CROSSHEAD	2	
	0926681-8	SCREW-GR 5-FH-HEX-SOC-.38" X 1.25"-W/NYLOCK INSERT	4	
16	4812935-7	PIN-CROSSHEAD BRG	2	
	0921464-4	SETSCREW-HE X-SOC-HAFT-DOG-POINT .25"-20 X .5"	2	
17	4719720-7	CHAIN-LIFT	2	
18	4813781-4	WASHER-SPACING	4	
19	4803599-2	BEARING-CROSSHEAD	2	
20	4853828-4	MAST ASSY INNER	1	INCL 2 OF ITEM 8
21	4829621-4	INTERLOCK	1	
22	4828568-8	SPRING-INTERLOCK	1	
	0916713-1	SETSCREW-HEX-SOC-.31"-18 X 1"	1	
	09201651-7	NUT-.31"-18	1	
23	4828179-4	PIN-PIVOT	1	
	09184-8-2	PIN-COTTER-.09" X 1"	2	
24	4819814-7	GUARD	1	
	0921966-8	CAPSCREW-.38"-16 X .88"	1	
	0916963-7	LOCKWASHER-.38"	1	
25	4816684-7	ELBOW	2	INCL NUT & O-RING
	4905843-1	NUT UNIT	2	
	0921206-9	O-RING-912 TYPE 1-.93" ID	2	

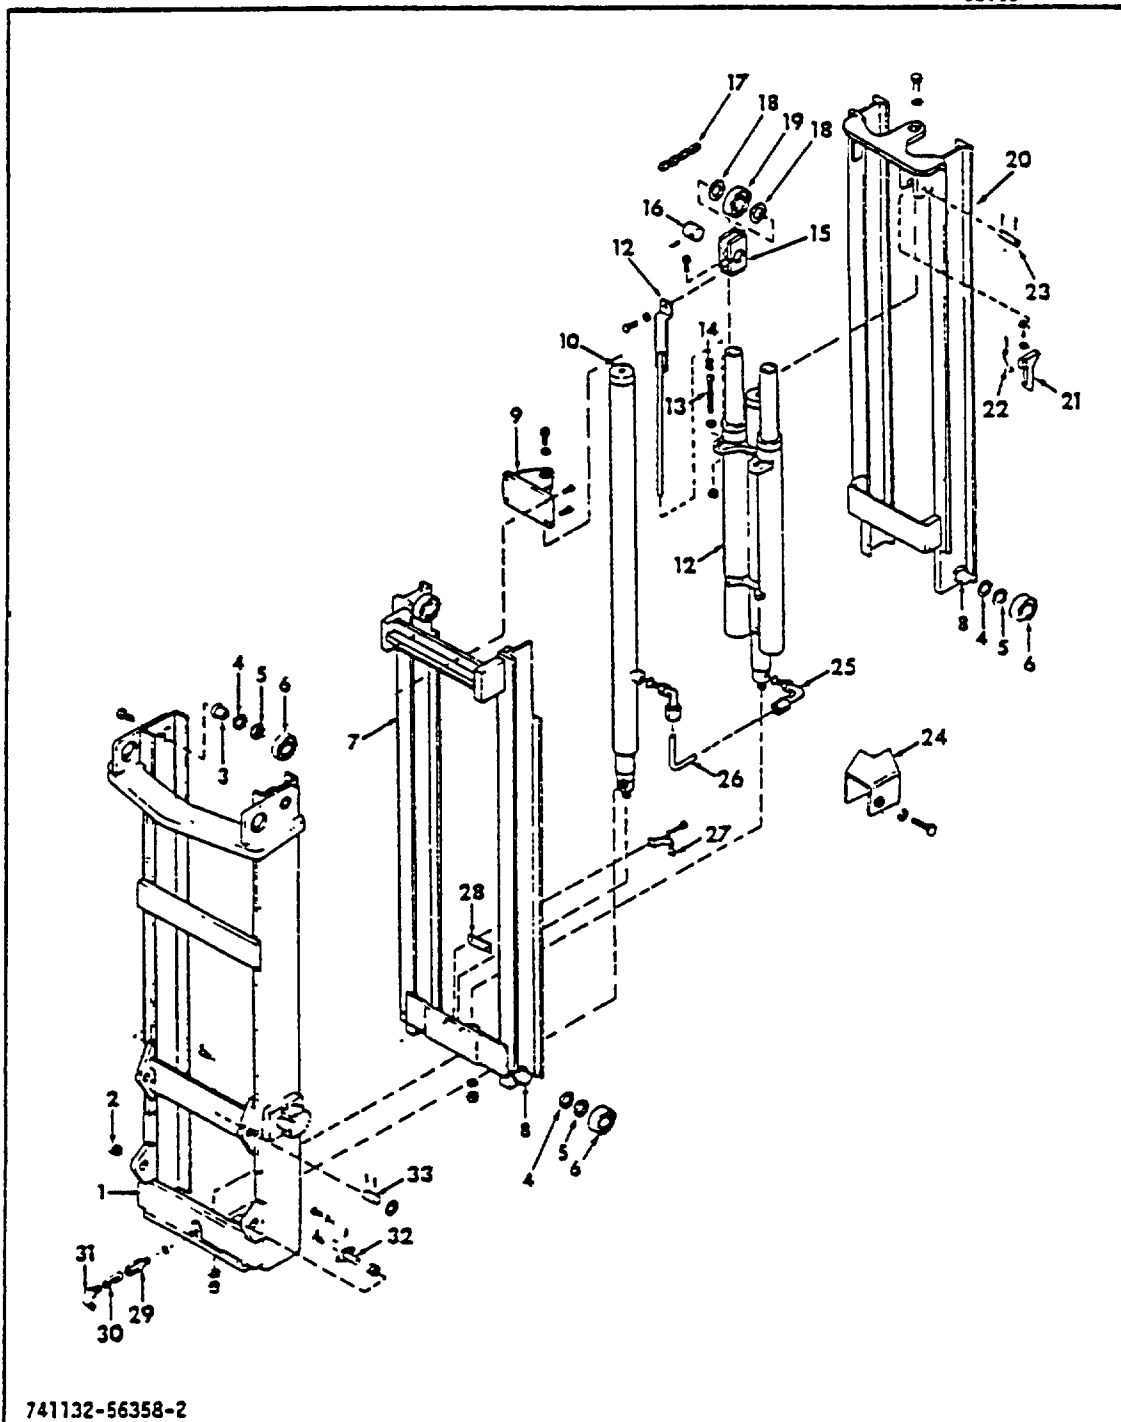

741132-56358-2

TRI-MAX LIFT ASSY - 180" (CONTINUED)


ITEM	PART NO.	DESCRIPTION	QTY.	
26	4817087-2	TUBE-LIFT CYL TO CYL-CLUSTER	1	
27	4816376-0	CLAMP-CYL	1	
	0925205-7	CAPSCREW-.31"-18 X .62"	2	
	0917356-8	LOCKWASHER-.31"	2	
28	4816375-2	SPACER-CLAMP	1	
29	4821743-4	BODY-FLOW REGULATOR	1	
	0921206-9	O-RING-#-912-93" ID-TYPE SAE 1	1	
30	4821902-6	REGULATOR-FLOW	1	
31	0921728-2	ELBOW 45°-ADJ- .75" TUBE-.112"-12		
		BOSS END	1	
	0921206-9	O-RING-#-912-.93" ID-TYPE SAE 1	1	
32	-----	PIN-MAST PIVOT	2	SEE PAGE
33	-----	PIN-TILT CYL	2	SEE PAGE
	0921342-2	NUT LOCK	2	
	0930450-2	NUT-.625-18	2	

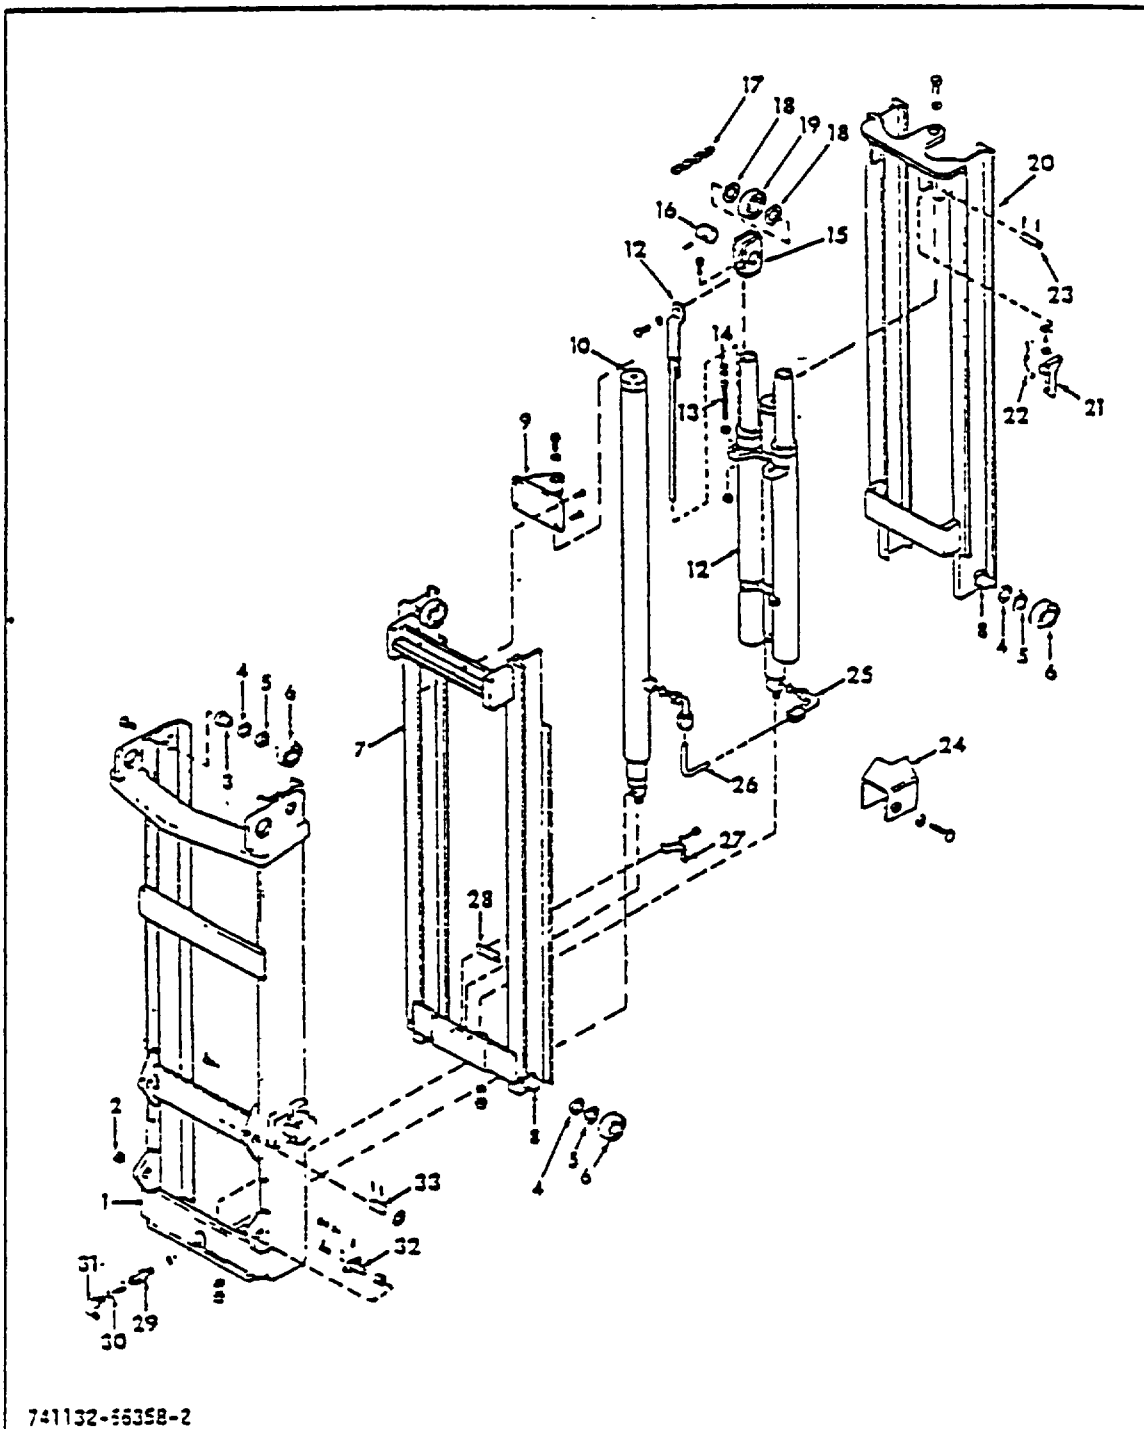

741132-56358-2

TRI-MAX LIFT ASSY - 144"


ITEM	PART NO.	DESCRIPTION	QTY.	
-	4881900-7	LIFT ASSY-TRI MAX	1	INCL ITEM 1 THRU 31
1	4867959-1	MAST ASSY-OUTER	1	INCL ITEM 2
2	4715712-8	BUSHING-MAST PIVOT	2	
3	4812974-6	STUD-ROLLER	2	
	0926161-1	CAPSCREW-GR 8-.62"-11 X 1.5"	2	
4	4812930-8	SHIM-.015"	*	USE AS REQUIRED
5	4812929-0	SHIM-.040"	*	USE AS REQUIRED
6	4812920-0	BEARING-ROLLER	8	
7	4856552-7	MAST ASSY-INTERMEDIATE	1	INCL 4 OF ITEM 8
8	4829752-5	STUD-ROLLER	6	WELDED TO INTERM & INNER MAST
9	4829288-2	BRACKET-CYLINDER	1	
	0923293-5	CAPSCREW-GR 5-.5"-20 X 2.25"	2	
	0929530-4	CAPSCREW-GR 5-.5"-20 X 1.75"	2	
	0923805-6	NUT-LOCK-.5"-20	4	
10	4839271-6	CYLINDER ASSY-LIFT	1	SEE PAGE 183
11	-----	ROD ASSY-PROTECTOR	*	*NOT USED
	0920787-9	CAPSCREW-.31"-18 X .5"	2	
	0917356-8	LOCKWASHER-.31"	2	
12	4863123-8	CLUSTER-LIFT CYL	1	SEE PAGE 181
	0929533-8	CAPSCREW-GR 5-.62"-18 X 1.5"	1	
	0917373-3	LOCKWASHER-.62"	1	
13	4765796-0	ANCHOR-CHAIN	2	
	0919333-5	NUT-.75"-16	4	
14	4701704-1	LINK-CHAIN CONNECTING	2	
15	4829757-6	CROSSHEAD	2	
	0926681-8	SCREW-GR 5-FH-HEX-SOC-.38" X 1.25"-W/NYLOCK INSERT	4	
16	4812935-7	PIN-CROSSHEAD BRG	2	
	0921464-4	SETSCREW-HEX-SOC-HAFT-DOG-POINT .25"-20 X .5"	2	
17	4719720-7	CHAIN-LIFT	2	
18	4813781-4	WASHER-SPACING	4	
19	4803599-2	BEARING-CROSSHEAD	2	
20	4867958-3	MAST ASSY-INNER	1	INCL 2 OF ITEM 8
21	4829621-4	INTERLOCK	1	
22	4828568-8	SPRING-INTERLOCK	1	
	0916713-1	SETSCREW-HEX-SOC-.31"-18 X 1"	1	
	0920161-7	NUT-.31"-18	1	
23	4828179-4	PIN-PIVOT	1	
	0918-48-2	PIN-COTTER-.09" X 1"	2	
24	4819814-7	GUARD	1	
	0921966-8	CAPSCREW-.38"-16 X .88"	1	
	0916965-7	LOCKWASHER-.38"	1	
25	4816684-7	ELBOW	2	
	4905843-1	NUT UNIT	2	
	0921206-9	O-RING-#-912 TYPE 1-,93" ID	2	

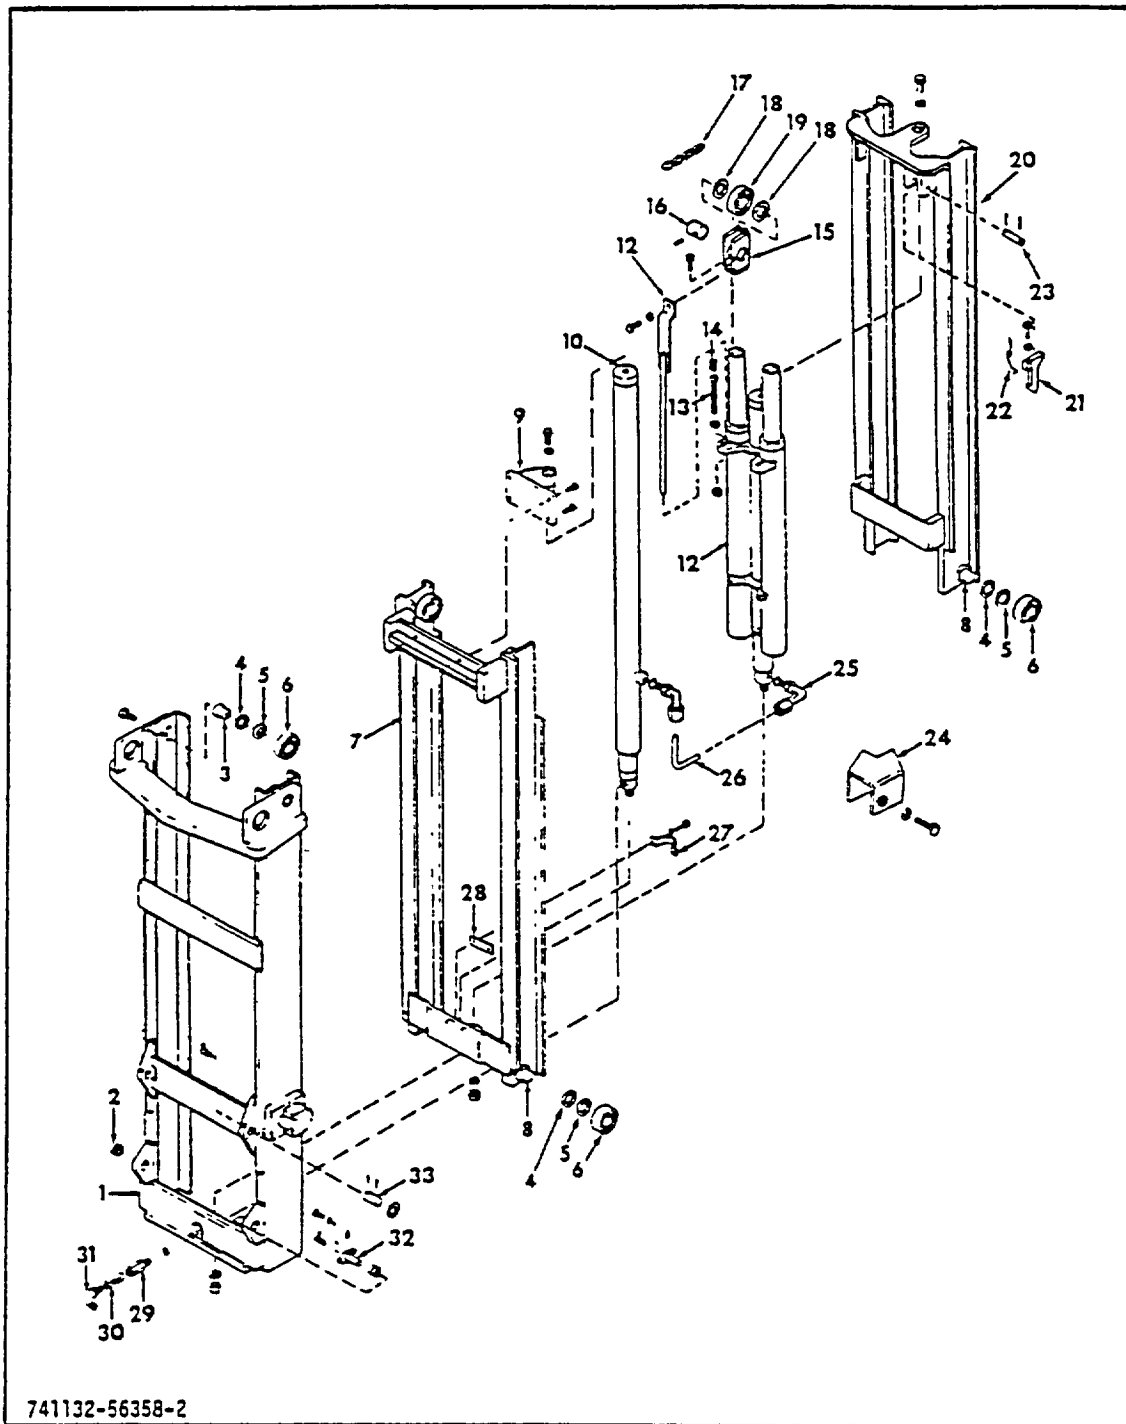

741132-56358-2

TRI-MAX LIFT ASSY - 144" (CONTINUED)

ITEM	PART NO.	DESCRIPTION	QTY.	
26	4817087-2	TUBE-LIFT CYL TO CYL-CLUSTER	1	
27	4816376-0	CLAMP-CYL	1	
	0925205-7	CAPSCREW-.31"-18 X .62"	2	
	0917356-8	LOCKWASHER-.31"	2	
28	4816375-2	SPACER-CLAMP	1	
29	4821743-4	BODY-FLOW REGULATOR	1	
	0921206-9	O-RING-#-912-93" ID-TYPE SAE 1	1	
30	4821902-6	REGULATOR-FLOW	1	
31	0921728-2	ELBOW 45°-ADJ-.75" TUBE-1.12"-12		
		BOSS END	1	INCL O-RING
	0921206-9	O-RING-#-912-.93" ID-TYPE SAE 1	1	
32	-----	PIN-MAST PIVOT	2	SEE PAGE
33	-----	PIN-TILT CYL	2	SEE PAGE
	0930450-2	NUT-.625-18	2	
	0921342-2	NUT-LOCK	2	

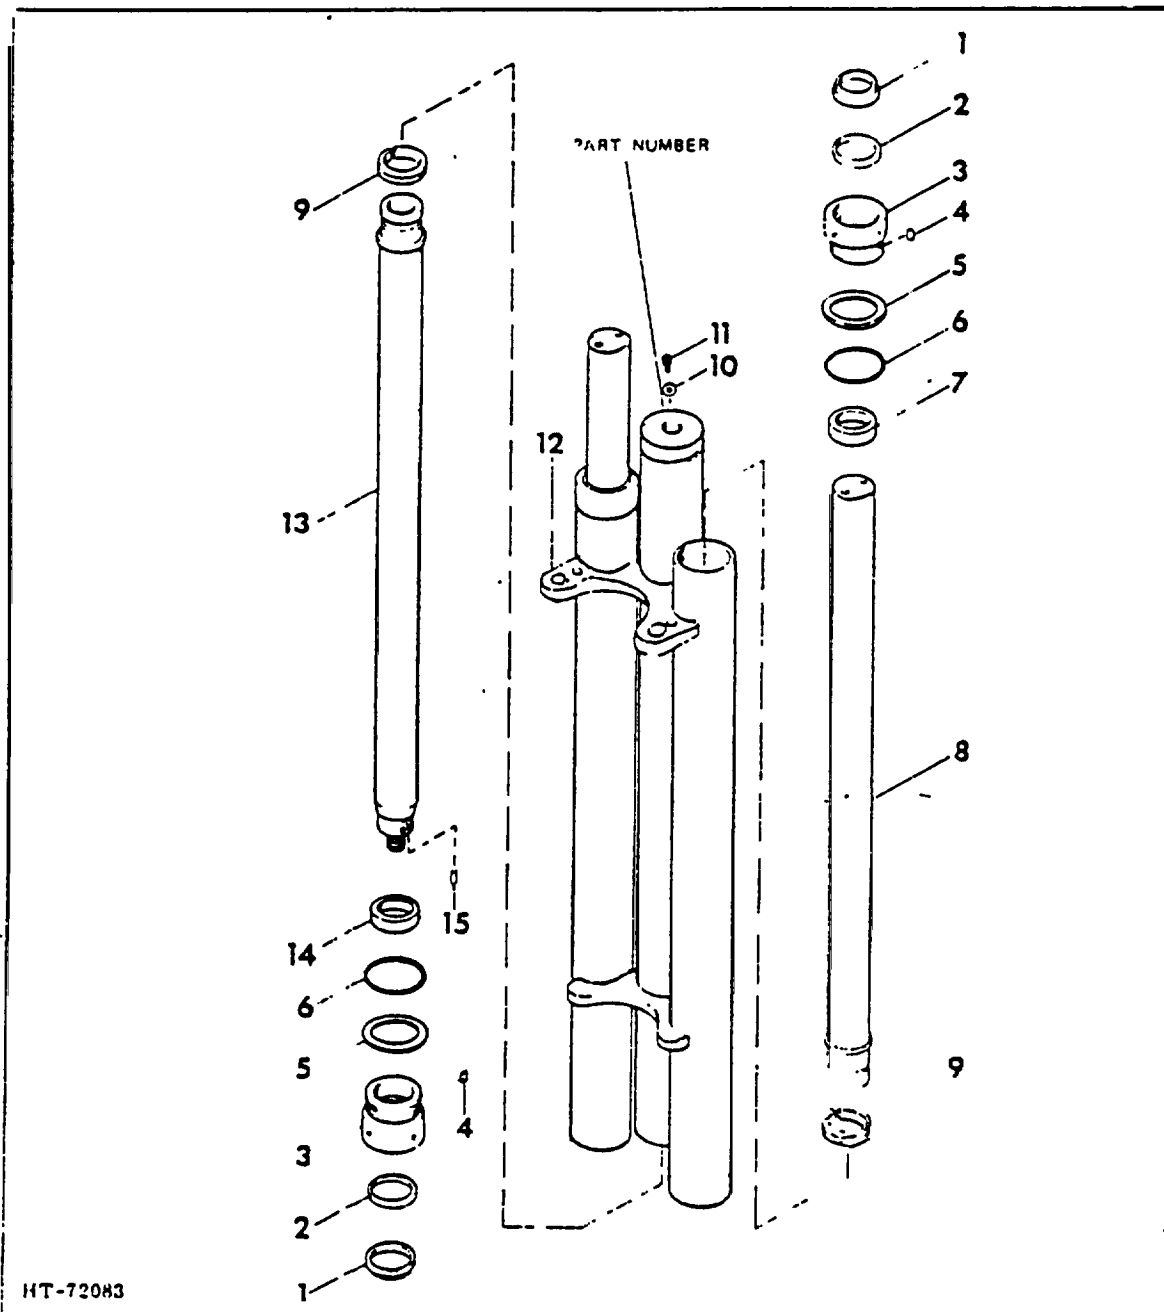


HT-72083

LIFT CYLINDER CLUSTER

LIFT CYLINDER CLUSTER - 4863123-8 144" LIFT
 4863125-3 180" LIFT

ITEM	PART NO.	DESCRIPTION	QTY.		
1	4816947-8	* WIPER-ROD	3		
2	4816748-0	* PACKING-ROD	3		
3	4816708-4	NUT-GLAND	3		
4	4816749-8	* PELLET-NYLON	6		
5	0926624-8	* WASHER-BACKUP-#230-2.52" ID	3		
6	0924093-8	* O-RING-#-230-2.48" ID-CLASS 1B	3		
7	-----	SPACER	0	NOT USED	
8	4848948-8	ROD-SHORT	2	144"	LIFT
8	4848955-3	ROD-SHORT	1	180"	LIFT
9	4816747-2	* RING-WEAR	3		
10	4833571-5	WASHER-NYLON	3		
11	0929652-6	SCREW-MACHINE-PAN HD-BLEEDER- W/INT LKW-#8-32 X .25"	3		
12	4839277-3	TUBE-CLUSTER	1	144"	LIFT
12	4817011-2	TUBE-CLUSTER	1	180"	LIFT
13	4839404-3	ROD-LONG	1	144"	LIFT
13	4816991-6	ROD-LONG	1	180"	LIFT
14	-----	SPACER	-	NOT USED	
15	0922946-9	PIN-SPIROL-.25" X 75"	1		

* INCLUDED IN KIT 4906099-9

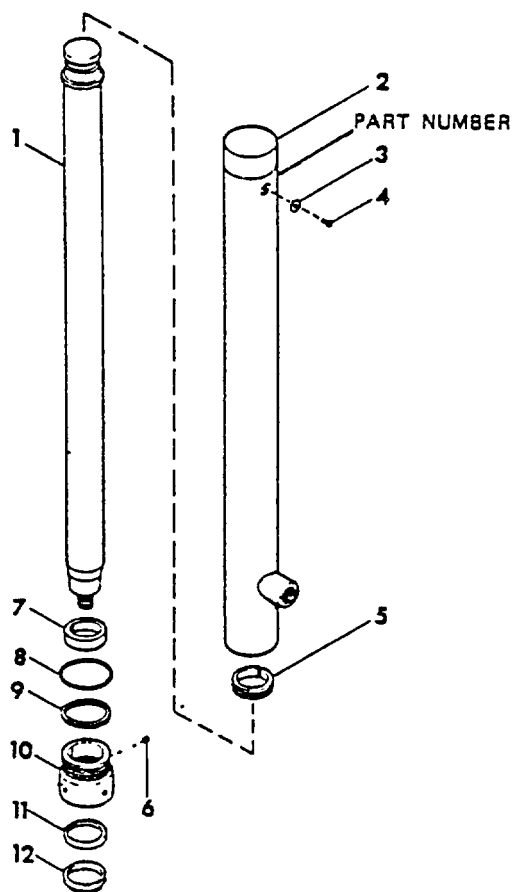


LIFT CYLINDER - 4839271-6 144" LIFT
4816888-4 180" LIFT

ITEM	PART NO.	DESCRIPTION	QTY.		
1	4816820-7	RAM	1	180"	LIFT
1	4839274-0	RAM	1	144"	LIFT
2	4816843-9	TUBE	1	180"	LIFT
2	4839272-4	TUBE	1	144"	LIFT
3	4833571-5	WASHER-NYLON	1		
4	0929652-6	SCREW-BLEED	1		
5	4816747-2	* RING-WEAR	1		
6	4816749-8	* PELLET-NYLON	2		
7	NOT USED				
8	0924093-8	* PACKING	1		
9	0926624-8	* WASHER-BACKUP	1		
10	4816708-4	NUT-GLAND	1		
11	4816748-0	* PACKING-ROD	1		
12	4816947-8	* RING-WIPER	1		

* INCLUDED IN KIT 4906100-5


MAST ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY.	
-	-----	LIFT ASSY	1	INCL ITEMS 1 THRU 39
1	4855988-4	MAST ASSY-OUTER	1	INCL ITEM 2
2	4715712-8	BUSHING-MAST PIVOT		
3	4812974-6	STUD-ROLLER	2	
	0926161-1	CAPSCREW-GR 8-.62"-11 X 1.5"	2	
4	4812930-8	SHIM-.015	*	USE AS REQUIRED
5	4812929-0	SHIM-.040"	*	USE AS REQUIRED
6	4812920-9	BEARING-ROLLER	8	
7	4856552-7	MAST ASSY-INTERMEDIATE	1	INCL 4 OF ITEM 8
8	4839752-5	STUD-ROLLER	4	WELDED TO INTERMEDIATE AND INNER MASTS
9	4829288-2	BRACKET-CYLINDER	1	
	0929530-4	CAPSCREW-GR 5-.5"-20 X 2"	2	
	0923293-5	CAPSCREW-GR 5-.5"-20 X 1.75"	2	
	0923805-6	NUT-LOCK	4	
R10	4839271-6	CYLINDER ASSY-LIFT	1	SEE PAGE 168
	0917373-3	LOCKWASHER-.62"	1	
	0921342-2	NUT-LOCK	1	
11	4819814-7	GUARD	2	
12	4839276-6	CLUSTER-LIFT CYLINDER	1	SEE PAGE 171
	0929533-8	CAPSCREW-GR 5-.62"-18 X 3.25"	2	INNER MAST TO CLUSTER
	0917373-3	LOCKWASHER-.62"	2	
	0921342-2	NUT-LOCK-.62"-18	2	
13	4765796-0	ANCHOR-CHAIN	2	
	0919333-5	NUT-.75"-16	4	
14	4701704-1	LINK-CHAIN	2	
15	4829757-6	CROSSHEAD	2	
	0926681-8	SCREW-GR 5-FL HD-HEX SOC W/NYLOK INSERT-.38"-16 X 1.25"	4	
16	4812935-7	PIN-CROSSHEAD BEARING	2	
	0921464-4	SETSCREW-HEX SOC-HALF-DOG POINT .15"-20 X .5"	2	
17	4719720-7	CHAIN-LIFT	2	
18	4813781-4	WASHER-SPACING	4	
19	4803599-2	BEARING-CROSSHEAD	2	
20	4852461-5	MAST ASSY-INNER	1	
	4828179-4	PIN-SPRING-.19" X .75"	1	
21	0920161-7	NUT	1	
22	4829621-4	INTERLOCK	1	
23	4828568-8	SPRING-INTERLOCK	1	
24	0916713-1	SCREW	1	
25	4819814-7	GUARD	1	
	0921966-8	CAPSCREW-.38"-16 X .88"	1	
	0916965-7	LOCKWASHER-.38"	1	
26	4816684-7	ELBOW	2	INCL O-RING AND NUT UNIT
	4905843-1	NUT UNIT	2	
	0921206-9	O-RING-#912-TYPE 1-.93"	2	

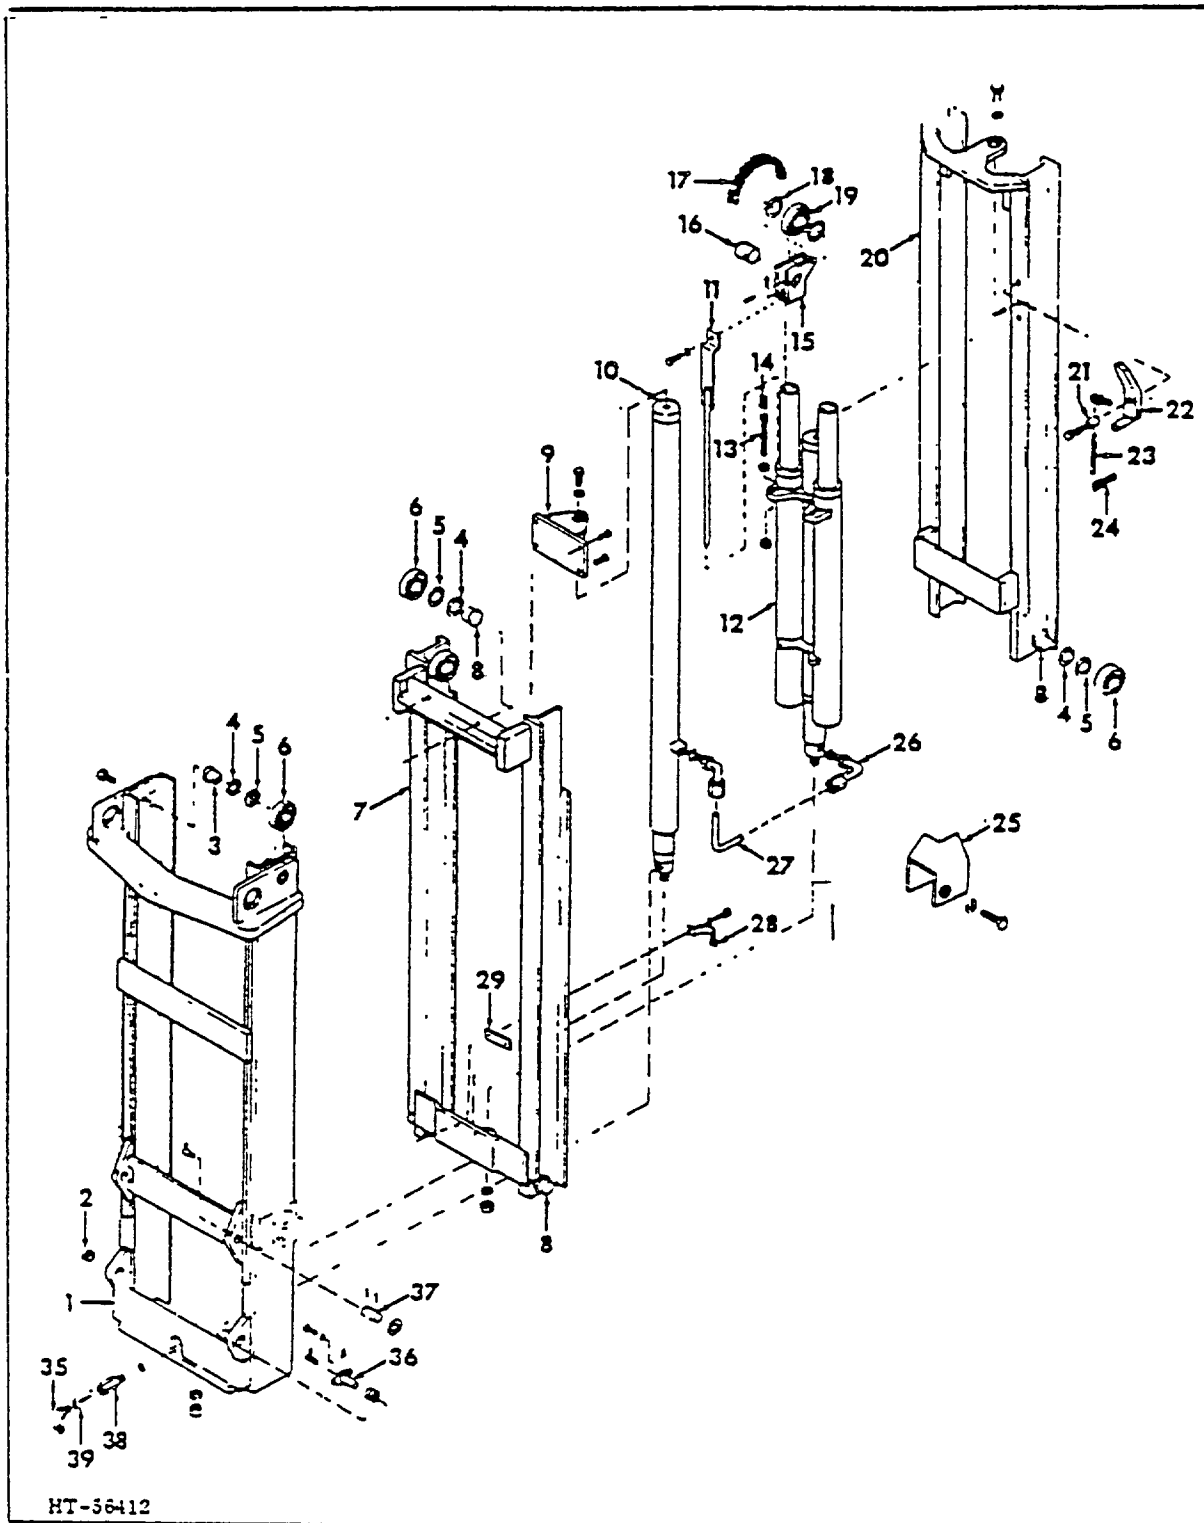

MAST ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY.	
27	4817087-2	TUBE-LIFT CYLINDER TO CYLINDER CLUSTER	1	
28	4816376-0	CLAMP-CYLINDER	1	
	0925205-7	CAPSCREW-.31"-18 X .62"	2	
	0917356-8	LOCKWASHER-.31"	2	
29	4816375-2	SPACER-CLAMP	1	
30		NOT USED		
31		NOT USED		
32		NOT USED		
33		NOT USED		
34		NOT USED		
35		NOT USED		
36	-----	PIN-MAST PIVOT	2	SEE MAST MOUNTING GROUP
37	-----	PIN-TILT CYLINDER	2	
38	4821743-4	BODY-FLOW REGULATOR	1	
	0921206-9	O-RING-#912-TYPE 1-.93" ID	1	
39	4821902-6	REGULATOR-FLOW	1	
	0920787-9	CAPSCREW	2	
	0917356-8	LOCKWASHER	2	
	0930450-2	NUT	2	
	0921728-2	ELBOW	1	
	0921206-9	O-RING	1	
	0916713-1	SETSCREW	1	
	0918448-2	COTTER PIN	2	
	0916965-7	WASHER	1	
	0921966-8	CAPSCREW	1	
	4816113-7	ROD	2	

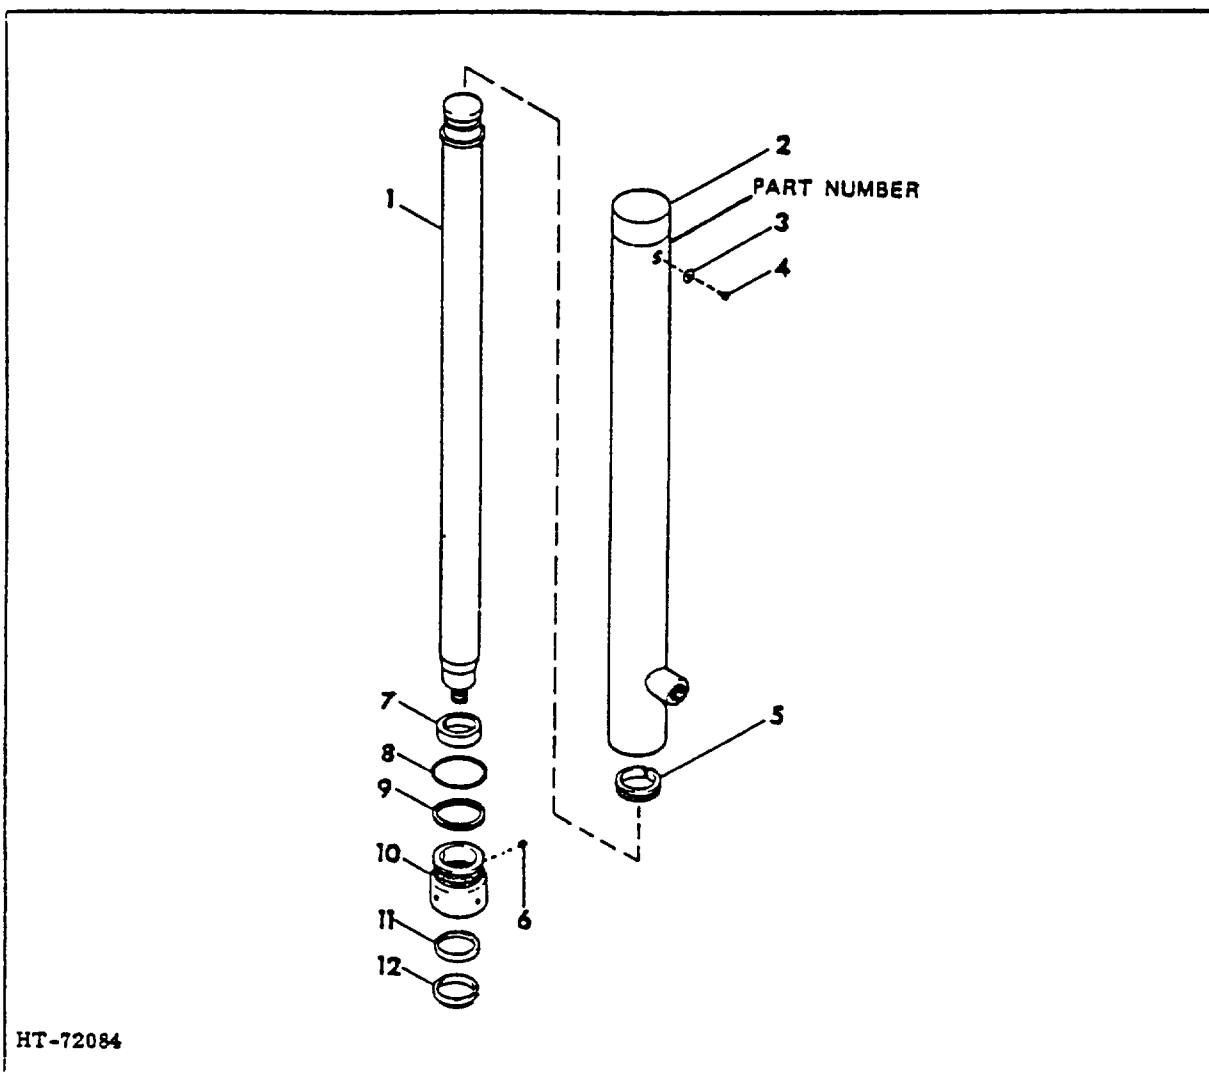

LIFT CYLINDER - 4839271-6

ITEM	PART NO.	DESCRIPTION	QTY.
1	4839274-0	RAM	1
2	4839272-4	TUBE	1
3	4833571-5	WASHER-NYLON	1
4	0929652-6	SCREW-BLEED	1
5	4816747-2	* RING-WEAR	1
6	4816749-8	* PELLET-NYLON	2
7	NOT USED		
8	0924093-8	* PACKING	1
9	0926624-8	* WASHER-BACKUP	1
10	4816708-4	NUT-GLAND	1
11	4816748-0	* PACKING-ROD	1
12	4816947-8	* RING-WIPER	1

* INCLUDED IN KIT 4906100-5

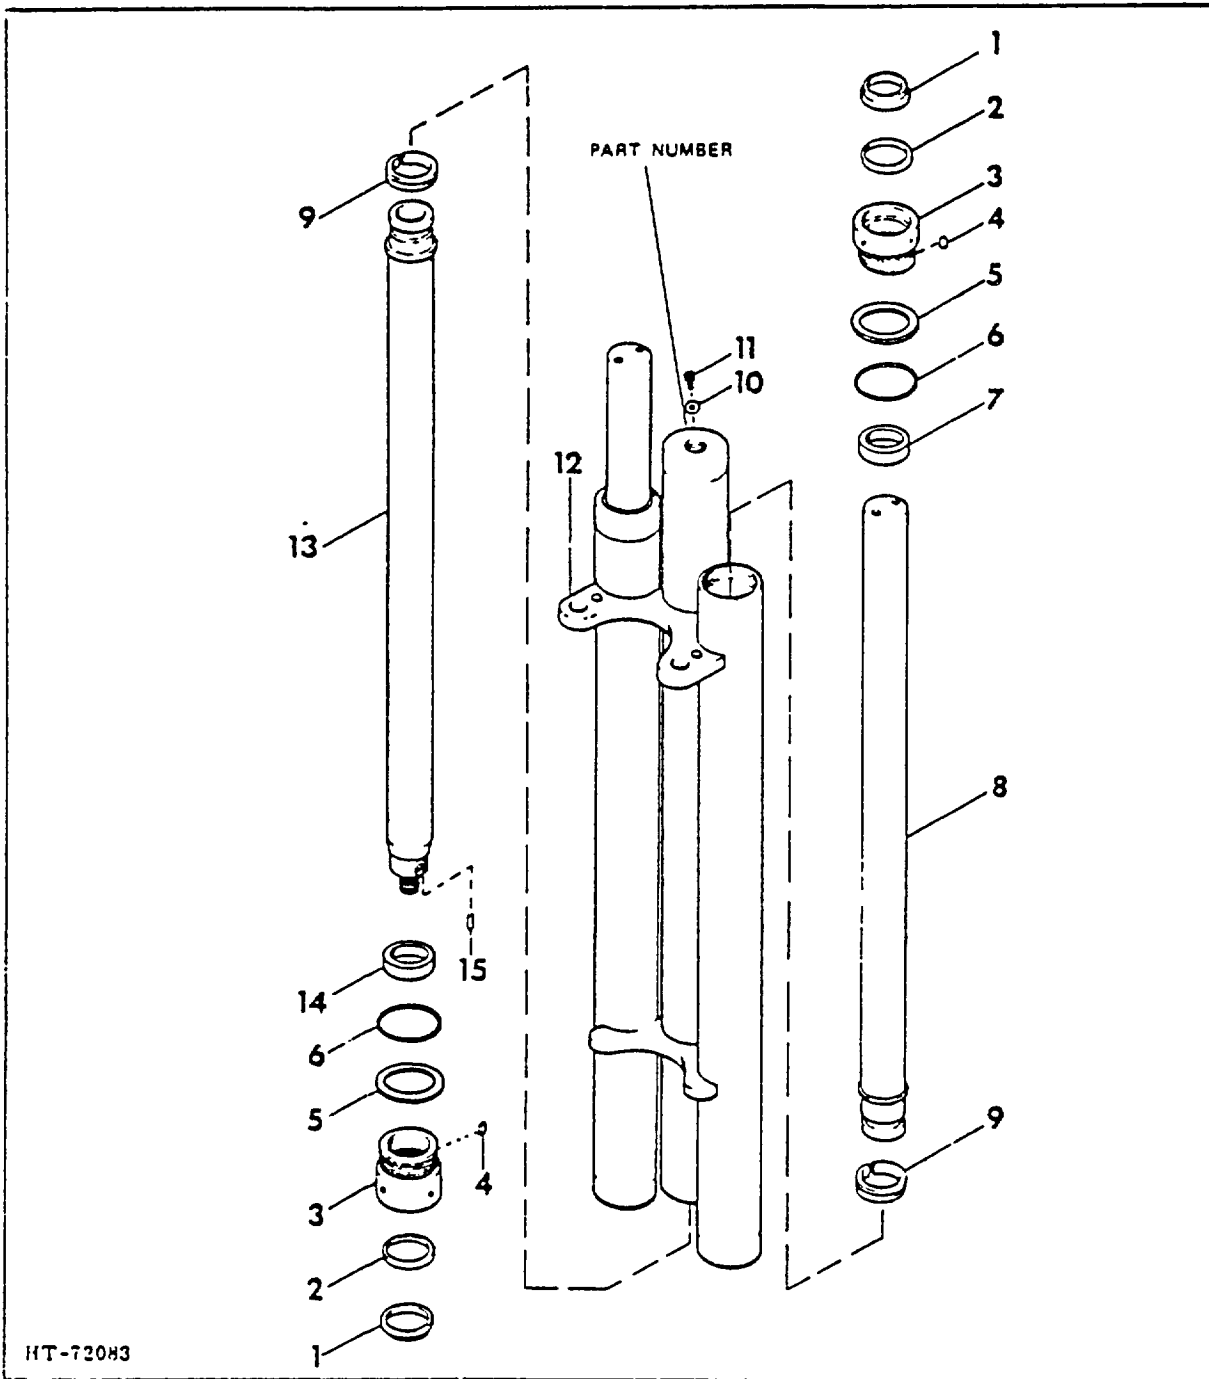


HT-72083

LIFT CYLINDER CLUSTER

LIFT CYLINDER CLUSTER - 4839276-5


ITEM	PART NO.	DESCRIPTION	QTY.	
1	4816947-8	* WIPER-ROD	3	
2	4816748-0	* PACKING-ROD	3	
3	4816708-4	NUT-GLAND	3	
4	4816749-8	* PELLET-NYLON	6	
5	0926624-8	* WASHER-BACK-UP	3	
R6	0924093-8	* PACKING-CLASS 1B	3	
7	-----	SPACER	2	NOT REQUIRED
8	4839402-7	ROD-SHORT	2	
9	4816747-2	* RING-WEAR	3	
10	4833571-5	WASHER-NYLON	3	
11	0929652-6	SCREW-BLEED	3	
12	4839277-3	TUBE-CLUSTER	1	
13	4839404-3	ROD-LONG	1	
14	-----	SPACER	*	NOT REQUIRED
15	0922946-9	PIN-SPIROL-.25" X .75"	1	
		* INCLUDED IN KIT 4906099-1		

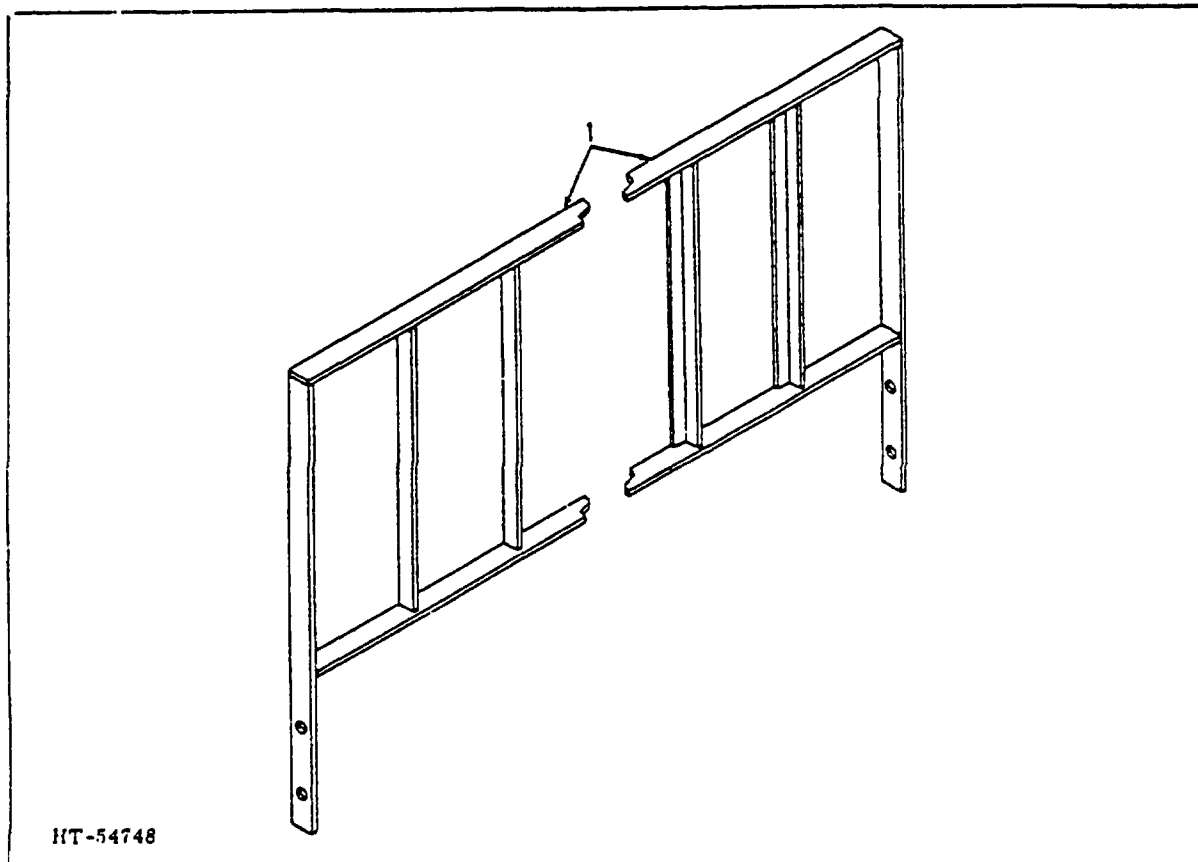

HT-54748

CARRIAGE BACKREST

ITEM	PART NO.	DESCRIPTION	QTY.
1	4823201-1	BACKREST ASSY	1
	0903641-9	CAPSCREW- .62"-11 x 1.25	2
	0904208-6	LOCKWASHER-.62"	2
	0910325-0	NUT	2
	0923858-5	WASHER .53 x 1.25	2

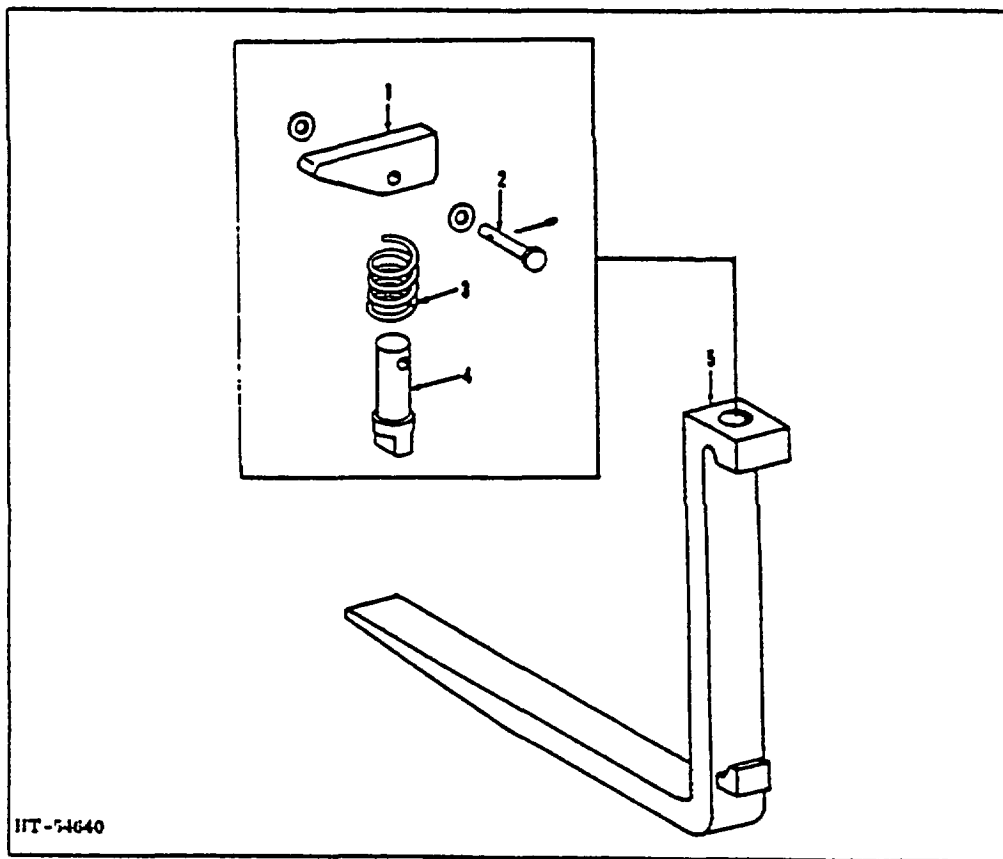


IIT-54640

FORK COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY.
1	4804779-9	* LATCH	2
2	4804768-2	* PIN-CLEVIS	2
	0924353-6	* WASHER-PLAIN- .203 x 50 x 18	2
	0911062-8	* PIN-COTTER- .06" x .5"	1
3	4807680-6	* SPRING-LOCK	2
4	4804776-5	* PIN-LOCK	2
5	4783362-9	FORK	2

* INCL IN KIT 4999281-1

MEMO

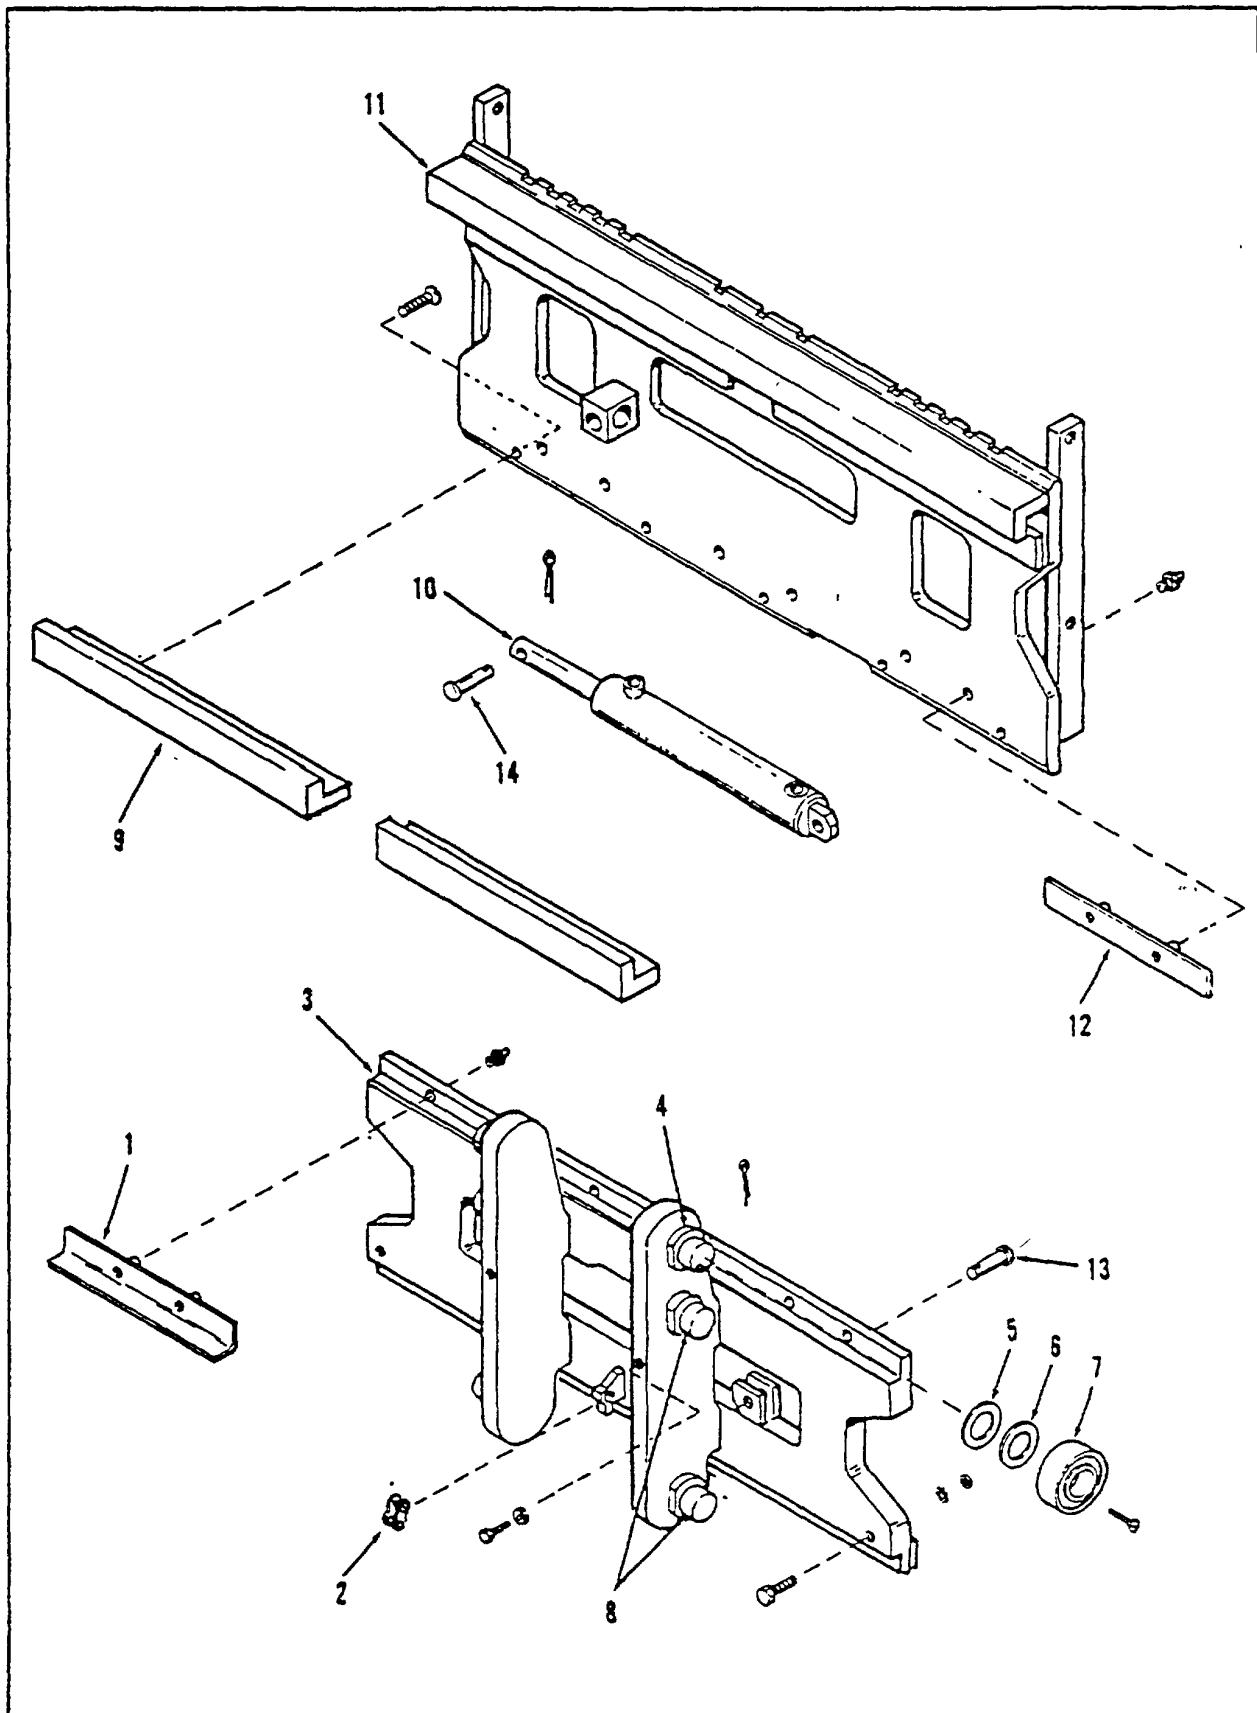

SIDE SHIFT CARRIAGE


ITEM	PART NO.	DESCRIPTION	QTY.
1	4822814-2	ANGLE-WEAR	3
	0914687-9	FITTING-LUBRICATION	6
-	4878456-5	CARRIAGE ASSY-INCL ITEMS 2 THRU 14	1
	0921672-2	CAPSCREW- .62"-11 x 1	2
	0917373-2	LOCKWASHER- .62"	2
	0912279-7	CAPSCREW-HEX SOC- .50"-13 x 1.75"	2
	0920428-0	LOCKWASHER-EXT- .50"	2
	0913744-9	NUT- .50"-13	2
2	4701704-1	LINK-CONNECTING	2
	0919313-7	PIN-COTTER	4
3	4823333-2	FRAME-CARRIAGE-INCL ITEMS 4 AND 8	1
4	4839751-7	STUD-ROLLER WELDED TO SUPPORT	2
5	4812930-8	SHIM- .015 (AS REQUIRED)	*
6	4812929-0	SHIM- .040 (AS REQUIRED)	*
7	4812920-9	BEARING	6
	0926680-0	SCREW-HEX SOC- .25" -20 x 2"	2
8	4839752-8	STUD-WELDED TO SUPPORT	4
9	4835376-7	BAR-HANGER-LOWER	1
	0927449-9	SCREW-HEX SOC- .38"-16 x 1.5"	6
10	4809524-4	CYLINDER ASSY-SIDE SHIFT	1
R11	4822279-0	PLATE-SIDE SHIFT	1
12	4822811-8	STRIP-WEAR	3
	0914687-9	FITTING-LUBRICATION	6
13	4809584-8	PIN-CYLINDER	1
	0918452-4	PIN-COTTER	1
14	4909834-7	PIN-ROD END	1
	0918451-6	PIN-COTTER	1
	4867850-2	SPACER	1
	0926705-5	CAPSCREW .62-11 x 1.50"	1
	4834705-8	BUSHING	1

SEE PAGE 178


CYLINDER ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY.
1	4999620-0	TUBE	1
2	4998682-1	BUSHING	1
3	4907479-2	NUT-JAM	1
4	4998612-8	* WASHER-BACKUP	2
5	0923826-2	* O-RING	2
6	4998178-0	PISTON	1
7	0923376-8	* SEAL-ROD	1
8	4999621-8	ROD	1
9	4906179-9	BUSHING	1
10	0924114-2	* SEAL-HEAD	1
11	4906800-0	HEAD	1
12	0923810-6	* O-RING-ROD	1
13	4905864-7	* WASHER-BACKUP	1
14	0927814-4	* RING-LOCK	1
15	4998176-4	SPACER	1
16	0927849-0	RING-LOCK	1
17	4905864-7	* WASHER-BACKUP	1

* INCLUDED IN KIT 4906113-8

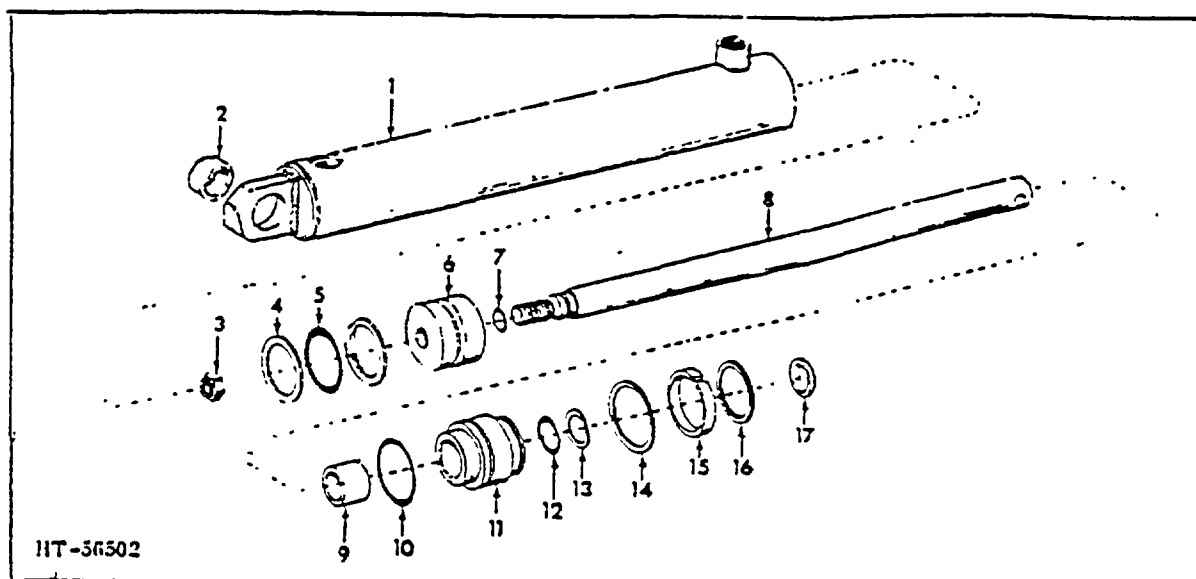


CYLINDER ASSY-4809524-4

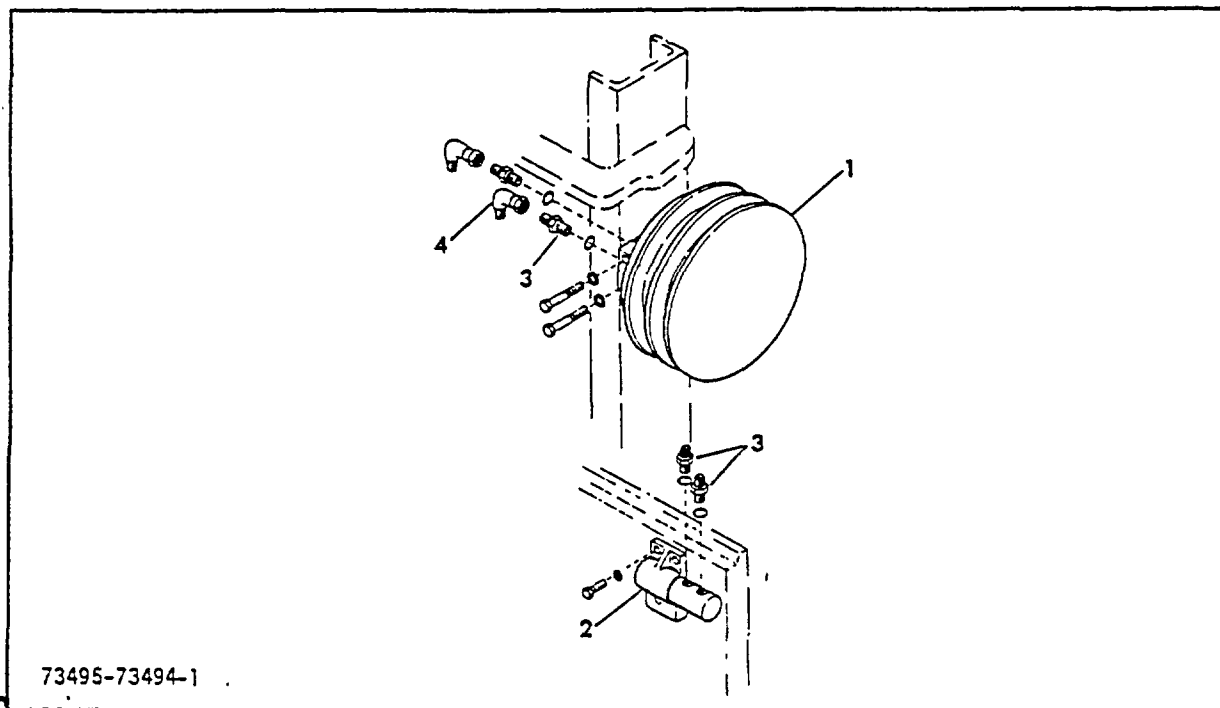

73495-73494-1

REEL GROUP - R.H.

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4839647-7	REEL	1	SEE PAGE 180
	0923320-6	CAPSCREW- .5"-13 x 3"	2	
	0916966-5	LOCKWASHER- .5"	2	
2	4844691-8	BLOCK-JUNCTION	1	SEE PAGE 181
	0921333-1	CAPSCREW- .31"-18 x 1"	2	
	0917356-8	LOCKWASHER- .31"	2	
3	0921409-9	CONNECTOR- .5" TUBE x .75"-16	4	INCL O-RING SAE TYPE 1
	0921349-7	O-RING- #-908-.644" ID	4	
4	0921279-6	ELBOW-900- .5" TUBE x .75"-16	2	
5	4844559-7	BLOCK, MOUNTING		
	0923320-6	CAPSCREW- .5-13 x 3.00	2	
	0916966-5	LOCKWASHER .5"	2	

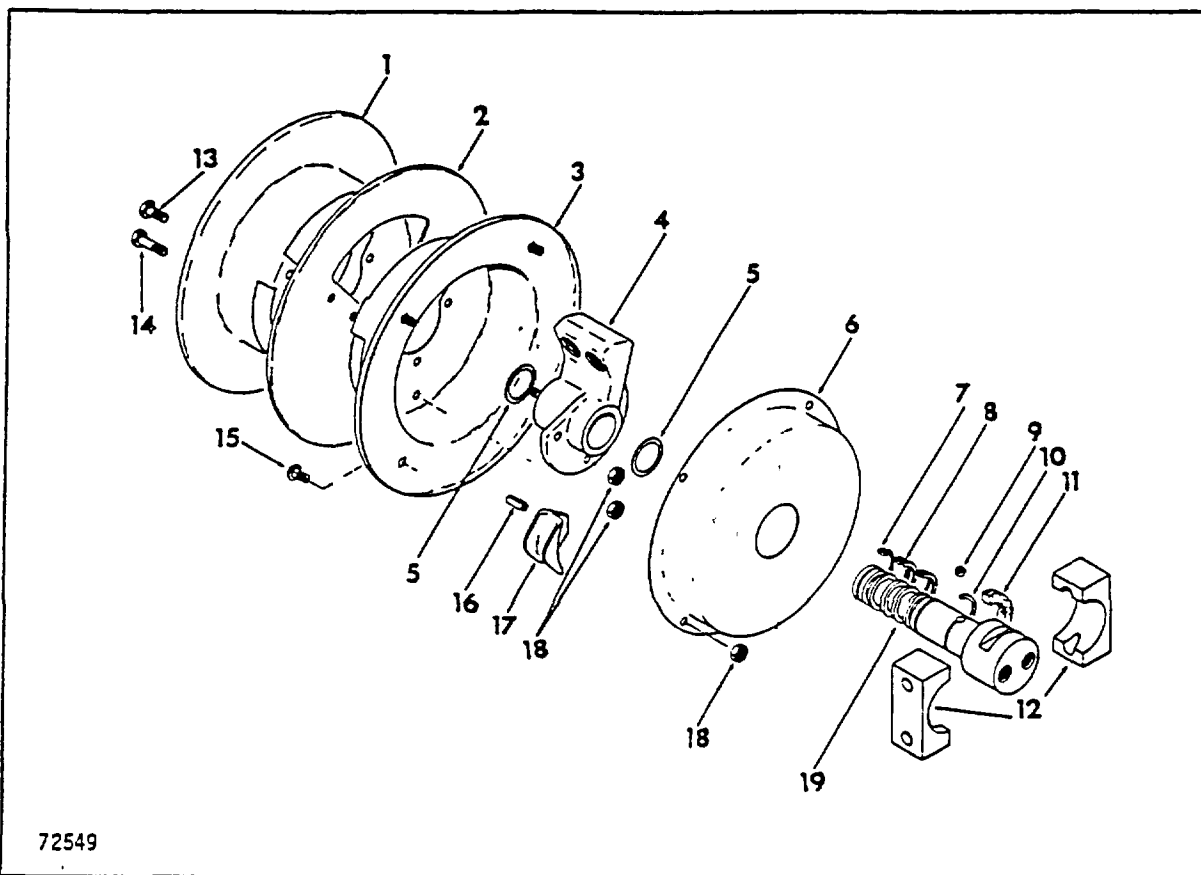


72549

HOSE REEL ASSEMBLY-4839647-7

ITEM	PART NO.	DESCRIPTION	QTY.
1	C-646068	FLANGE	1
2	C-645977	DIVIDER	1
3	C-646069	FLANGE	1
4	C-646064	HUB	1
5	C-7194	RING-SNAP	2
6	C-646250	SPRING	1
7	C-648569	* RING-BACK-UP	4
8	C-2715	* O-RING	3
9	C-645982	SPRING-RETAINING	1
10	C-7337	RING-SNAP	1
11	C-649055	SEAL-FELT	1
12	C-646246	BLOCK-MOUNTING	2
13	C-3552	CAPSCREW	3
14	C-3554	CAPSCREW	3
15	C-649106	CAPSCREW	4
16	C-7912	PIN-ROLL	1
17	C-646075	GUIDE-HOSE	2
18	C-645986	NUT	10
19	C-646079	SHAFT	1

* INCLUDED IN KIT C646081

NOTE: ORDER COMPONENT PARTS FROM CASCADE (02614)

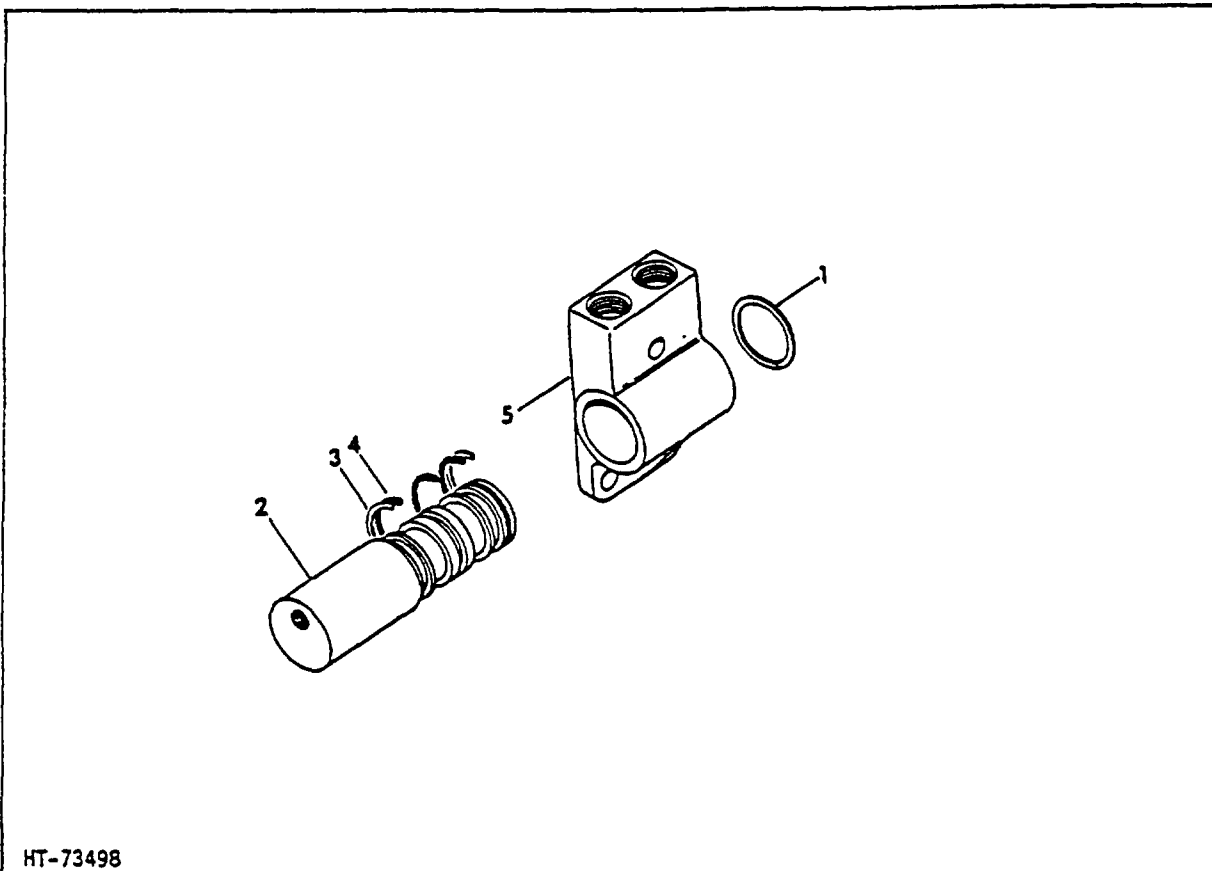


HT-73498

JUNCTION BLOCK-4844691-8

ITEM	PART NO.	DESCRIPTION	QTY.
1	C-7194	RING-SNAP	1
2	C-604032	SHAFT	1
3	C648569	* RING-BACK-UP	2
4	C2715	* O-RING	3
5	C-646036	BODY	1

* INCLUDED IN KIT C646340


NOTE: ORDER COMPONENT PARTS FROM CASCADE (02614)

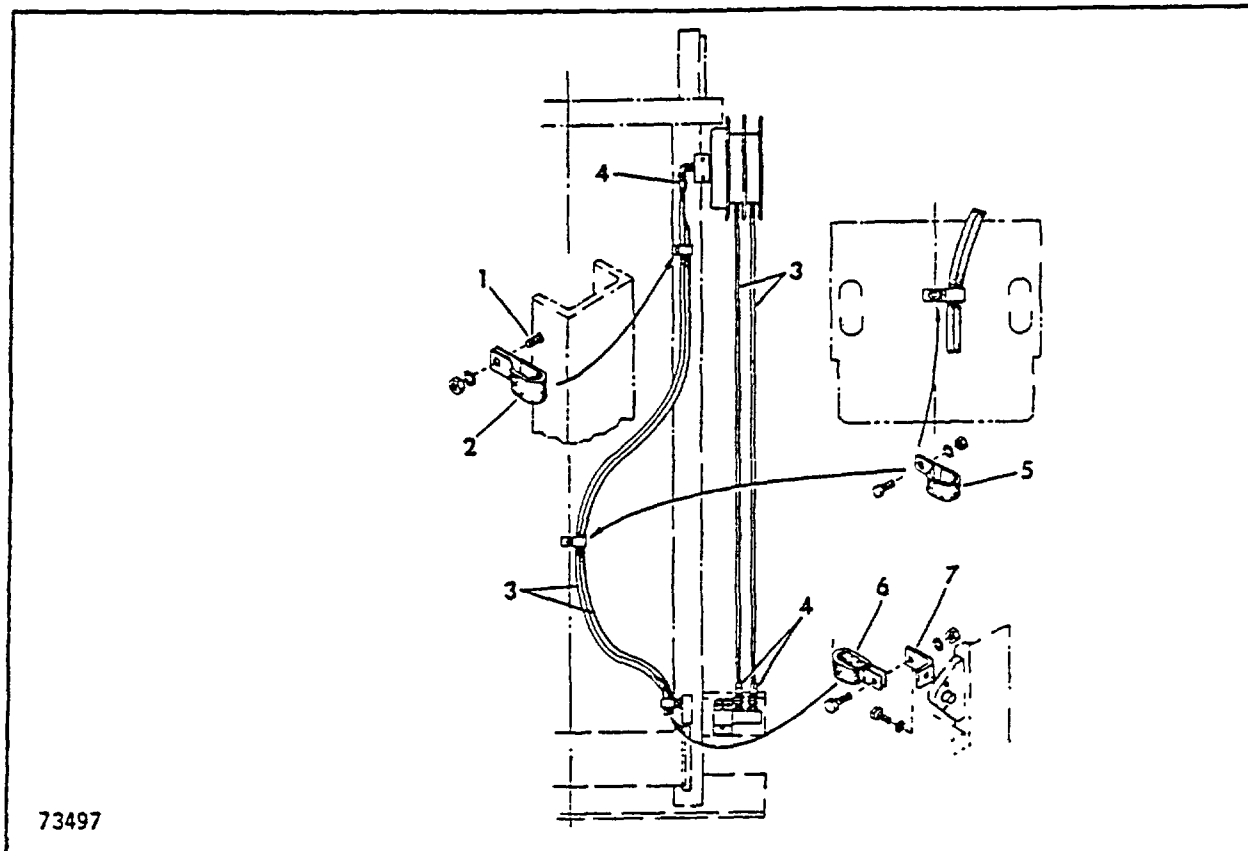

73497

HOSE GROUP

ITEM	PART NO.	DESCRIPTION	QTY.	
1	4255126-7	STUD	1	WELDED TO MAST
2	4714624-6	CLAMP	1	
	0919386-3	WASHER-.47" X 1" X 10 GA	1	
	0917356-8	LOCKWASHER-.31"	3	
	0917372-5	NUT-.31"-18	1	
3	4741167-3	HOSE-.41" ID-20 PT	4	
4	4715057-8	COUPLING-HOSE END	8	
5	4714624-6	CLAMP-DOUBLE	1	
	0920415-7	CAPSCREW-.31"-18 X 1.25"	1	
	0917356-8	LOCKWASHER-.31"	1	
	0917372-5	NUT-.31"-18	1	
6	4714624-6	CLAMP-DOUBLE	1	
	0921332-3	CAPSCREW-.31"-18 X .75"	1	
	0917356-8	LOCKWASHER-.31"	1	
	0917372-5	NUT-.31"-18	1	
7	4714907-5	BRACKET	1	
	0921333-1	CAPSCREW-.31"-18 X 1"	2	

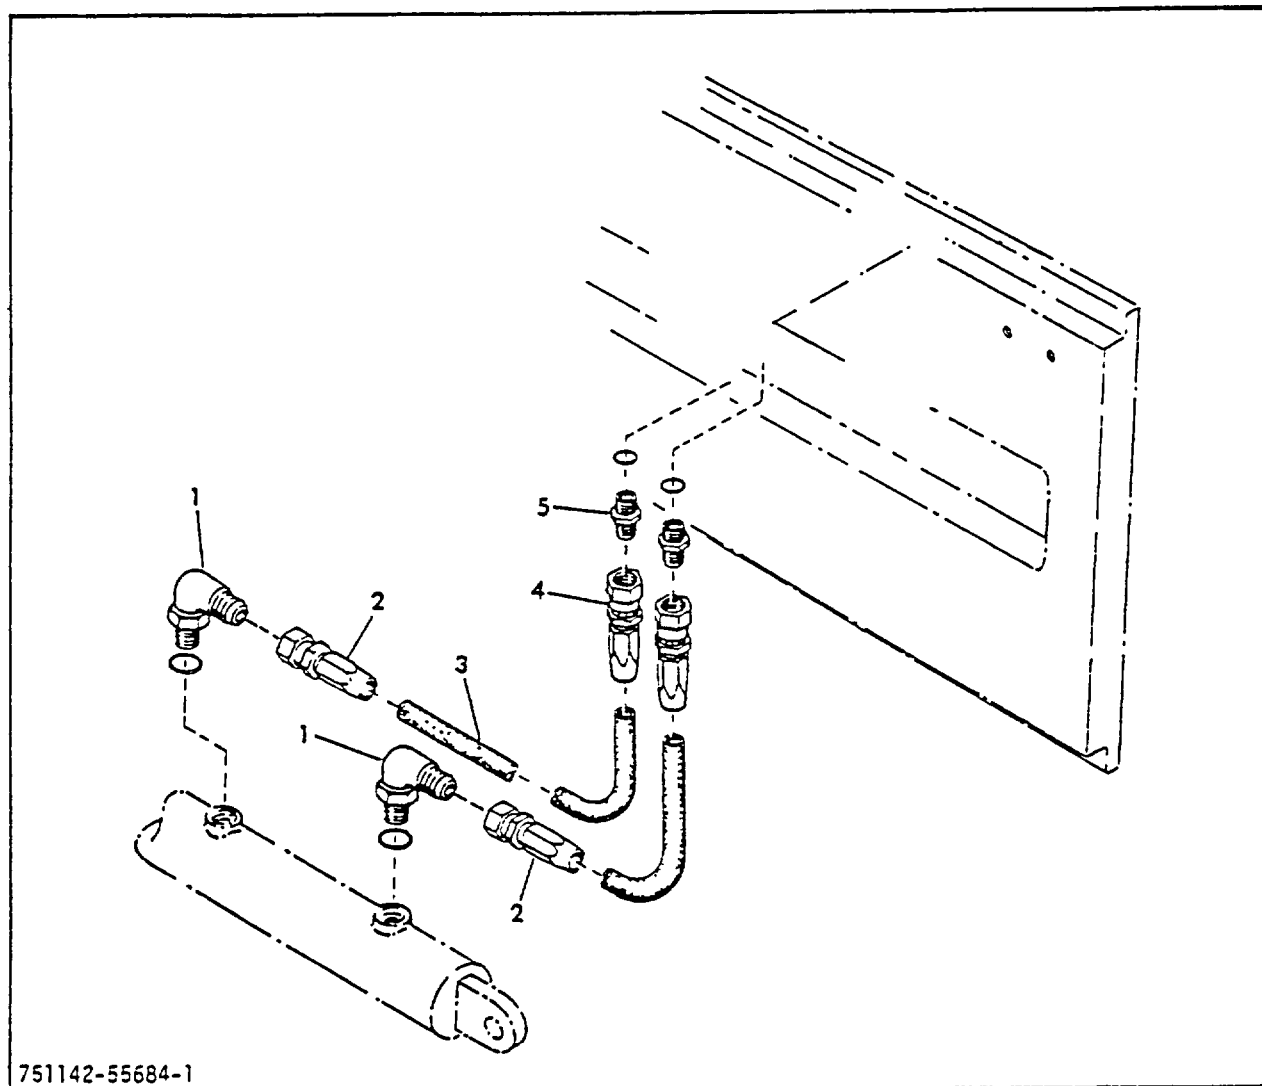

751142-55684-1

HYDRAULIC ADAPTATION

CATALOG NO. 4868395-7

ITEM	PART NO.	DESCRIPTION	QTY.	
1	0922571-5	ELBOW-90" ADJ-.25" TUBE X .44"-20	2	INCL O-RING
	0921883-5	O-RING-#-904-.351" ID	2	SAE TYPE 1
2	0925805-4	COUPLING-HOSE END-.25" ID x .44"-20	2	
3	4813026-4	HOSE-.25" ID X 3 FT	1	CUT TO LENGTH
4	0925805-4	COUPLING-HOSE END-.125" ID X .44"-20	2	
5	0925898-9	CONNECTOR-.25" TUBE X .38 TAPER THREAD	2	

By Order of the Secretary of the Army:

Official:

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

ROBERT M. JOYCE
Major General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-25A, Operator's Maintenance Requirements for Truck, Fork Lift, Rough Terrain.

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN JOT DOWN THE DOPE ABOUT IT ON THIS FORM CAREFULLY TEAR IT OUT FOLD IT AND DROP IT IN THE MAIL

SOMETHING WRONG WITH THIS PUBLICATION?

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)

Commander
 HHQ, 1st Signal Bde
 APO SF 96266

DATE SENT

1 March 1984

PUBLICATION NUMBER

TM 10-3930-644-14&P.

PUBLICATION DATE

June 1984

PUBLICATION TITLE

Truck, Fork Lift: GED,
 4,000 LB Cap

BE EXACT PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO
2-84	C		

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

Paragraph C describes the removal of cushion type tires. This type of tire is not used on this vehicle. Additionally, the procedure is not complete. Suggest that Paragraph C be deleted in the next change to this manual.

SAMPLE

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

Timothy E. Smith, SFC AV 949-3337

SIGN HERE

Timothy E. Smith, SFC

REVERSE OF DA FORM 2026-2

SAMPLE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



TEAR
PERFORATED LINE

Commander
US Army Tank-Automotive Command
ATTN: DRSTA-MB
Warren, MI 48090

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL.

SOMETHING WRONG WITH THIS PUBLICATION?

FROM (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 10-3930-644-14&P

PUBLICATION DATE

June 1984

PUBLICATION TITLE

Truck, Fork Lift: GED,
4,000 LB Cap

BE EXACT PIN-POINT WHERE IT IS

PAGE NO	PARA-GRAPH	FIGURE NO	TABLE NO

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

REVERSE OF DA FORM 2028-2

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



TEAR ALONG PERFORATED LINE

Commander
US Army Tank-Automotive Command
ATTN: DRSTA-MB
Warren, MI 48090

THE METRIC SYSTEM AND EQUIVALENTS

LINEAR MEASURE

1 Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches
 1 Meter = 100 Centimeters = 1000 Millimeters = 39.37 Inches
 1 Kilometer = 1000 Meters = 0.621 Miles

WEIGHTS

1 Gram = 0.001 Kilograms = 1000 Milligrams = 0.035 Ounces
 1 Kilogram = 1000 Grams = 2.2 Lb
 1 Metric Ton = 1000 Kilograms = 1 Megagram = 1.1 Short Tons

LIQUID MEASURE

1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces
 1 Liter = 1000 Milliliters = 33.82 Fluid Ounces

SQUARE MEASURE

1 Sq. Centimeter = 100 Sq. Millimeters = 0.155 Sq. Inches
 1 Sq. Meter = 10,000 Sq. Centimeters = 10.76 Sq. Feet
 1 Sq. Kilometer = 1,000,000 Sq. Meters = 0.386 Sq. Miles

CUBIC MEASURE

1 Cu Centimeter = 1000 Cu Millimeters = 0.06 Cu Inches
 1 Cu Meter = 1,000,000 Cu Centimeters = 35.31 Cu. Feet

TEMPERATURE

$\frac{5}{9} (^{\circ}\text{F} - 32) = ^{\circ}\text{C}$
 212° Fahrenheit is equivalent to 100° Celsius
 90° Fahrenheit is equivalent to 32° Celsius
 32° Fahrenheit is equivalent to 0° Celsius
 $\frac{9}{5} (^{\circ}\text{C} + 32) = ^{\circ}\text{F}$

APPROXIMATE CONVERSION FACTORS

TO CHANGE

Inches
 Feet.....
 Yards.....
 Miles.....
 Square Inches.....
 Square Feet.....
 Square Yards.....
 Square Miles.....
 Acres.....
 Cubic Feet.....
 Cubic Yards.....
 Fluid.....
 Pints.....
 Quarts.....
 Quarts.....
 Gallons.....
 Ounces.....
 Pounds.....
 Short Tons.....
 Pound-Feet.....
 Pounds per Square Inch.....
 Miles per Gallon.....
 Miles per Hour.....

TO

Centimeters.....
 Meters.....
 Meters.....
 Kilometers.....
 Square Centimeters.....
 Square Meters.....
 Square Meters.....
 Square Kilometers.....
 Square Hectometers.....
 Cubic Meters.....
 Cubic Meters.....
 Ounces Milliliters.....
 Liters.....
 Liters.....
 Liters.....
 Liters.....
 Grams.....
 Kilograms.....
 Metric Tons.....
 Newton-Meters.....
 Kilopascals.....
 Kilometers per Liter.....
 Kilometers per Hour.....

MULTIPLY BY

2.540
 0.305
 0.914
 1.609
 6.451
 0.093
 0.836
 2.590
 0.405
 0.028
 0.765
 29.573
 0.473
 0.946
 0.946
 3.785
 28.349
 0.45
 0.0907
 1.356
 6.895
 0.425
 1.609

TO CHANGE


Centimeters.....
 Meters.....
 Meters.....
 Meters.....
 Kilometers.....
 Square Centimeters.....
 Square Meters.....
 Square Meters.....
 Square Kilometers.....
 Square Hectometers.....
 Cubic Meters.....
 Cubic Meters.....
 Milliliters Fluid.....
 Liters.....
 Liters.....
 Liters.....
 Grams.....
 Kilograms.....
 Metric Tons.....
 Newton-Meters.....
 Kilopascals.....
 Kilometers per Liter.....
 Kilometers per Hour.....

TO

Inches.....
 Feet.....
 Yards.....
 Yards.....
 Miles.....
 Square Inches.....
 Square Feet.....
 Square Yards.....
 Square Miles.....
 Acres.....
 Cubic Feet.....
 Cubic Yards.....
 Ounces.....
 Pints.....
 Quarts.....
 Gallons.....
 Ounces.....
 Pounds.....
 Short Tons.....
 Pound-Feet.....
 Pounds per Square Inch.....
 Miles per Gallon.....
 Miles per Hour.....

MULTIPLY BY

0.394
 3.280
 1.094
 1.094
 0.621
 0.155
 10.764
 1.195
 0.386
 2.471
 35.315
 1.308
 0.034
 2.113
 1.057
 0.264
 0.035
 2.205
 1.102
 0.738
 0.145
 2.354
 0.621

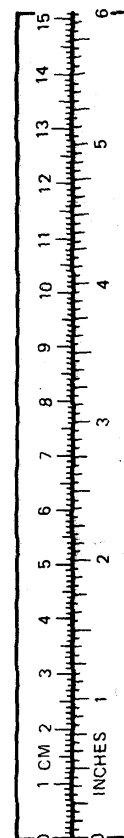

TM 10-3930-644-14&P

PIN: 055602-000