

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

**DS, GS, AND
DEPOT MAINTENANCE MANUAL**

MAST, AB-577 GRC

This copy is a reprint which includes current pages from Change 1.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
JANUARY 1969**

CHANGE
ARMY
No. 1
September 1976

HEADQUARTERS
DEPARTMENT OF THE
WASHINGTON, DC, 13

**Direct Support, General Support, and Depot Maintenance Manual
MAST. AB 577/GRC**

TM 11-5820-538-35, 16 January 1969, is changed as follows:

Page 2. Paragraph 1-2 is superseded as follows:

1-2. Reporting of Errors

The reporting of errors, omissions, and recommendations for improving this publication by the individual is encouraged. Reports

should be submitted on DA Form 2028 (Recommended Changes to Publications and Blank Forms), and forwarded direct to Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

Page 18. Paragraphs 3-7 and 3-8 are rescinded.

Page 19. Paragraph 3-9 and figure 3-2 are rescinded.

By Order of the Secretary of the Army:

Official:

FRED C. WEYAND
General, United States Army
Chief of Staff

PAUL T. SMITH
Major General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-51, Direct and General Support maintenance requirements for AB-577/GRC, MK806/GRC.

**DS, GS, and Depot Maintenance Manual
MAST AB-577/GRC**

	Paragraph	Page
CHAPTER 1. FUNCTIONING OF MAST AB-577/GRC		
Section I. General		
Scope	1-1	2
Reporting of equipment manual improvements	1-2	2
Indexes of publications	1-3	2
Section II. Component operation		
General.....	1-4	2
Mast carrier and launcher.....	1-5	2
Guy bag and contents	1-6	2
Tools and accessories roll and contents	1-7	4
CHAPTER 2. DS AND GS TROUBLESHOOTING AND REPAIRS		
Scope of DS and GS maintenance	2-1	6
Test equipment, tools, and materials	2-2	6
Troubleshooting	2-3	6
Mast base repair	2-4	6
Mast carrier repair	2-5	14
Guy bag and contents maintenance	2-6	14
Tools and accessories roll and contents maintenance	2-7	16
CHAPTER 3. DEPOT OVERHAUL STANDARDS		
Applicability of depot overhaul standards	3-1	17
Applicable references	3-2	17
Equipment required for depot testing	3-3	17
Visual inspection	3-4	17
Brake test	3-5	17
Mast section coupling test	3-6	18
Interchangeability test	3-7	18
Torsion transfer test	3-8	18
Bending test	3-9	19
Guy assembly test	3-10	20
Elevator, handcrank, and winch assembly tests	3-11	20
Miscellaneous parts test	3-12	20
APPENDIX REFERENCES		21

CHAPTER 1 FUNCTIONING OF MAST AB-577/GRC

Section I. GENERAL

1-1. Scope

a. This manual covers direct support (DS), general support (GS) and depot maintenance for Mast AB-577/GRC. It includes instructions for direct and general support and depot maintenance repairmen for troubleshooting, testing, aligning and repairing equipment, replacing maintenance parts, and repairing specified maintenance parts. The manual also lists tools, materials, and test equipment required for maintenance.

b. The complete technical manual for this equipment includes TM 11-5820-538-12 and TM 11-5820-538-35P.

1-2. Reporting of Equipment Manual Improvements

The reporting of errors, omissions and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended

Changes to DA Publications) and forwarded direct to Commanding General, U. S. Army Electronics Command, ATTN: AMSEL-ME-NMPAD, Fort Monmouth N.J. 07703.

Note. For applicable forms and records, see paragraph 1-3, TM 11-5820-538-12.

1-3. Indexes of Publications

a. DA Pam 310-4. Refer to the latest issue of DA Pam 3104 to determine whether there are new editions, Changes, or additional publications pertaining to the equipment.

b. DA Pam 310-7. Refer to DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

Section II. COMPONENT OPERATION

1-4. Control

Mast AB-577/GRC consists of three groups of items: the mast carrier and launcher (fig. 2-2), a guy bag and contents (fig. 1-1), and a tools and accessories roll and contents (fig. 1-2). These items are so designed that they may all be placed together in a wooden box for storage or transport. When unpacked and assembled (as described in TM 11-5820-538-12), the three groups fit together to form an eight-section antenna support that can be extended as high as 48 feet above the ground, or with Extension Kit, Mast MK-806/GRC as high as 75 feet.

1-5. Mast Carrier and Launcher

a. The mast carrier consists of steel angle bars welded together and designed to fit into the launcher. It houses the eight mast sections which are stacked two across and four deep and are secured in the carrier by a clamp. The mast carrier is secured to the launcher by six catches (three to each side).

b. The launcher (fig. 2-2) consists of steel angle bars that are welded together and designed to contain the mast carrier during storage or transport. A winch assembly (fig. 2-1) is fastened to a

plate which, in turn, is fastened to the launcher by four screws, two at each side. The winch is operated by a handcrank. The winch cable wraps around the reel and runs from the reel, up and over a pulley at the top of the launcher, to the elevator. When the handcrank is turned, the elevator is raised or lowered. The winch reel is locked in position by a lock release lever. A bench level on the side of the launcher is used in determining whether the mast is level. The brake assembly holds the tube sections during and after assembly. The elevator is used to raise or lower the mast sections.

1-6. Guy Bag and Contents

(fig. 1-1)

a. The handcrank (2) is placed in the square hole in the winch and turns the reel clockwise or counterclockwise, thereby raising or lowering the elevator.


b. An antenna adapter (11) is used as the coupler between the first (top) mast section and a T-bar antenna support such as Support, Antenna AB-957/GRC (TM 11-5820-58812).

c. The top guy attachment (7) is placed over the antenna adapter. Three 65-foot guy assemblies (10) are fastened to the top guy attachment.

d. The middle guy attachment (4) is used between mast sections 4 and 5. The three 47-foot guy assemblies (9) are fastened to the guy attachment.

e. The three sets of guy assemblies are as follows:

(1) Three 39-foot guy assemblies (fig. 2-7) consisting of cables, snaphooks, and a sliding grip line clamp (snubber) are coded blue. The snaphook end fastens to the launcher; the second end (snubber end) fastens to the guy anchors or stakes.

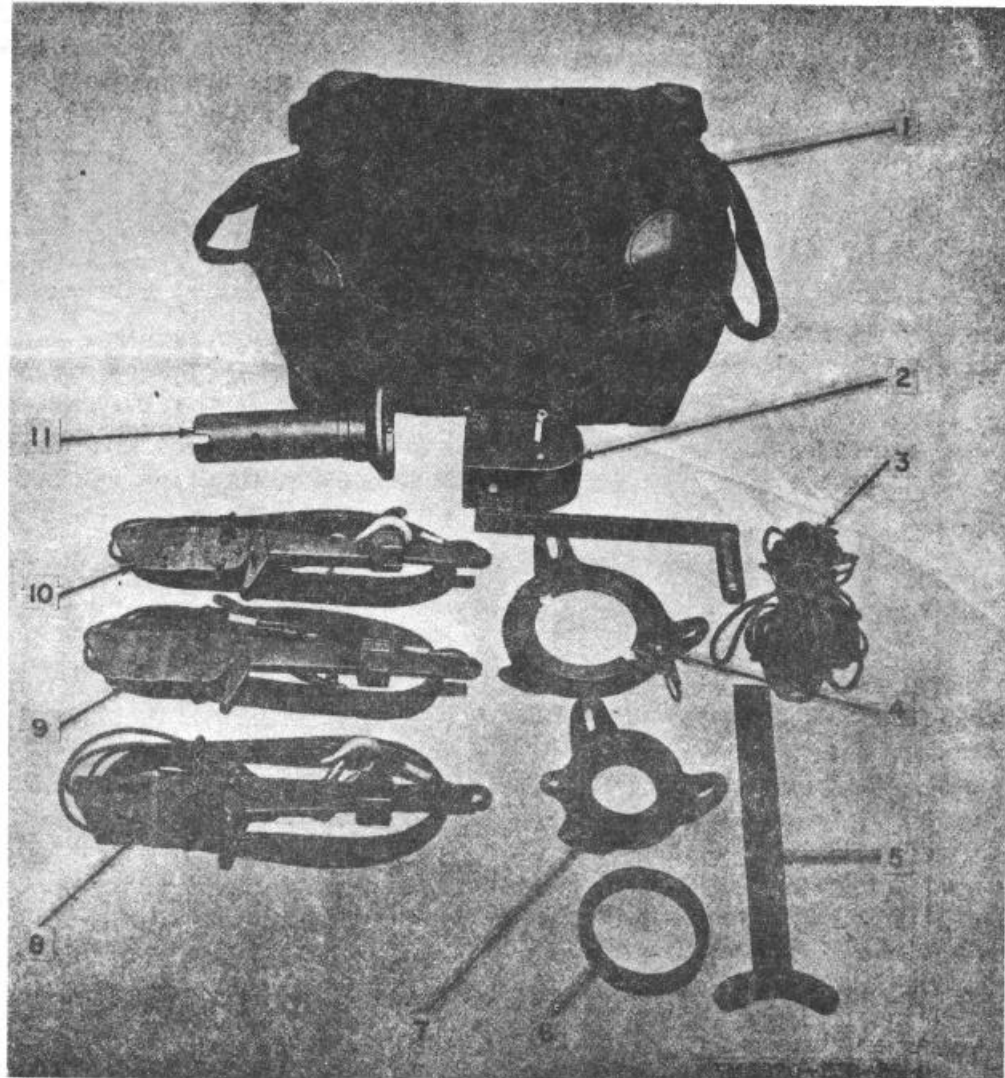

1	Cotton duck bag	A1A20MP1	7	Guy attachment (for top guys)	A1A20MP2
2	Handcrank	A1A20A21	8	Guy (39 ft)	A1A20A22A through A1A20A22C, 3 ea
3	Antenna halyard (radius rope)	A1A20MP5	9	Guy (47 ft)	A1A20A25A through A1A20A25C
4	Guy attachment (for center guys)	A1A20MP3	10	Guy (65 ft)	A1A20A28A through A1A20A28C
5	Bung wrench	A1A20MP6	11	Antenna adapter	A1A20MP4, 1 ea
6	Grooved clamp coupling (coupler)	A1MP3A through A1MP3K, 8 ea			

Figure 1-1. Guy bag and contents.

(2) Three 47-foot guy assemblies consisting of a cable, snaphooks, and a snubber are coded white. The snaphook end fastens to the middle guy attachment and the snubber end to the guy anchors or stakes.

(3) Three 65-foot guy assemblies consisting of a cable, snaphooks, and a snubber are coded red. The snaphook end is fastened to the top guy attachment and the snubber end to the guy anchors or stakes.

f. Eight grooved coupling clamps (couplers) (6, fig. 1-1) are used to join the mast sections.

g. The antenna halyard (radius rope) (3) is an 81-foot long piece of polyester rope for measuring the distance when positioning the guy anchors or stakes.

h. The bung wrench (5) is used on the base of the launcher to turn (rotate) the entire mast.

i. The canvas guy bag (1) has closing straps and two strap handles and is made large and strong enough to hold the items listed in a through h above.

1-7. Tools and Accessories Roll and Contents

(fig. 1-2)

a. Three screw-type guy anchors (5) are inserted in the ground as shown in figures 2-7 and 2-8, TM 11-

5820-538-12 for normal soil conditions. The guy assemblies are fastened to these anchors.


b. Three Guy Stakes GP-112/U (3) are used if the ground is composed of shale, sandstone, soft rock, or ice. They are driven into the ground by a sledge hammer as shown in figure 2-8, TM 11-5820-538-12. The guy assemblies are fastened to these GP-112,U's.

c. Three Stakes GP-2 (2) keep the launcher from slipping during erection (fig. 2-17 1 TM 11-5820-538-12) and hold the launcher in position when erected (fig. 2-17 6 TM 115820-538-12).

d. The hand hammer (sledge hammer) (4, fig. 1-2) is used to drive the stakes in the ground and to straighten bent anchors or stakes.

e. The digging bar (6) is used in leveling the launcher during erection and in placing the screw-type anchors in the ground.

f. The canvas tools and accessories roll (1) is designed so that each item listed in a through e above has a place.

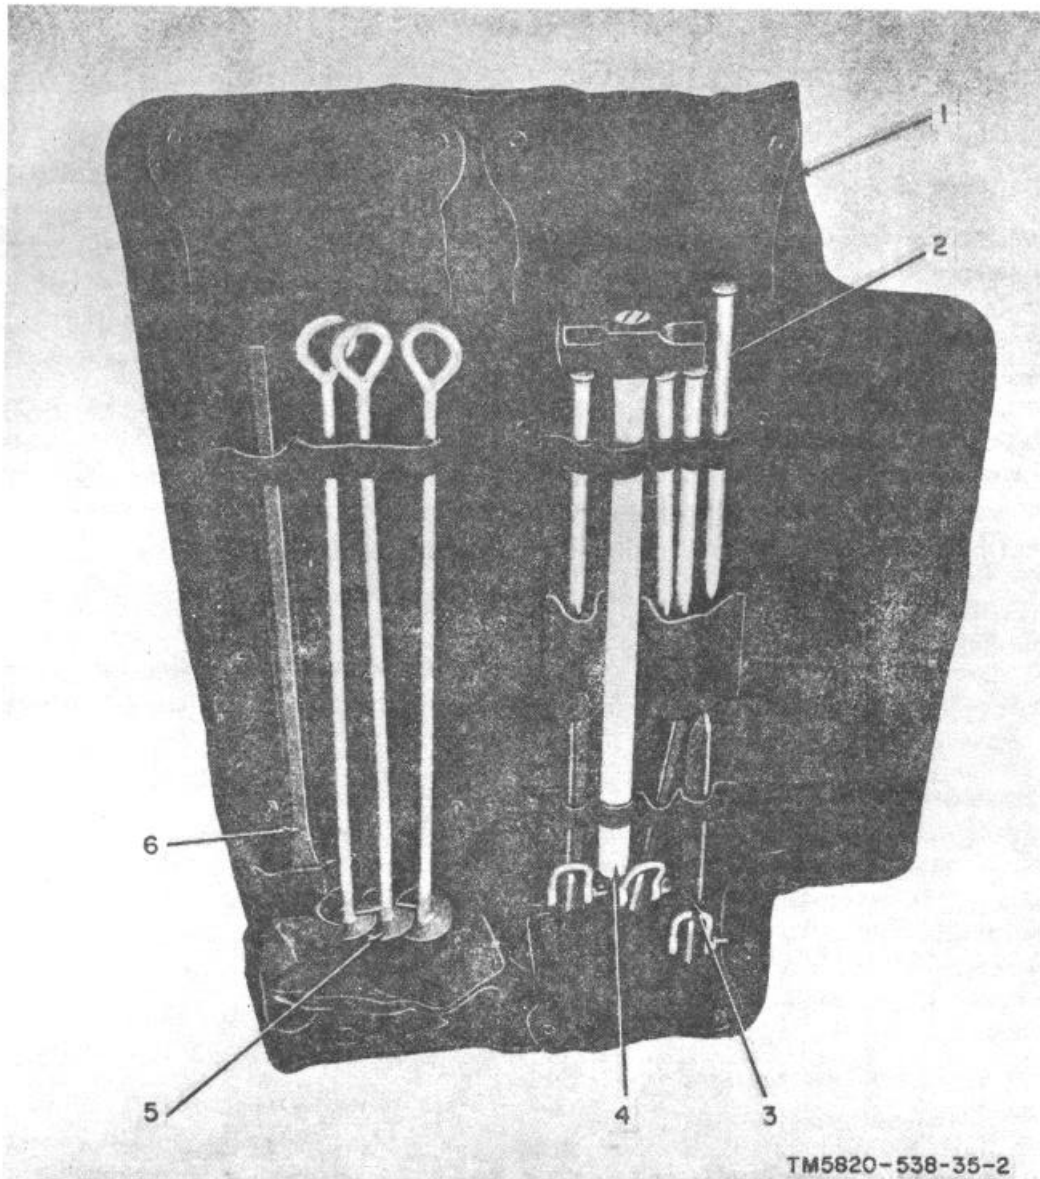

- | | | |
|---|-----------------------------|-----------------------------|
| 1 | Tools and accessories roll | A1A19MP1 |
| 2 | Guy Stake GP-2 | A1A19MP4A through A1A19MP4D |
| 3 | Guy Stake GP-112/U | A1A19MP5A through A1A19MP5C |
| 4 | Hand hammer (sledge hammer) | A1A19MP3 |
| 5 | Guy anchor | A1A19MP2A through A1A19MP2C |
| 6 | Digging bar | A1A19MP6 |

Figure 1-2. Tools and accessories roll and contents.

CHAPTER 2 DS AND GS TROUBLESHOOTING AND REPAIRS

2-1. Scope of DS and GS Maintenance

a. Troubleshooting at direct and general support maintenance categories includes all the techniques outlined for organizational maintenance, plus any special or additional techniques required to isolate a defective part. The DS and GS maintenance techniques are not complete in themselves but supplement the procedures described in organizational maintenance (TM 11-5820-538-12). The systematic trouble-shooting procedure, which begins at the organizational category with operational and sectional checks, must be completed by further localizing and isolating techniques. Paragraphs 2-3 and through 2-7 provide DS and GS troubleshooting and repair procedures for this equipment.

b. Troubleshooting may be performed while the equipment is erected or, if necessary, after the equipment has been dismantled. When trouble occurs, certain observations and measurements can be made that will help determine the source of trouble. Paragraph 2-3 describes the systematic procedures which will enable maintenance personnel to isolate the cause of the trouble and correct the fault.

c. No tests of the equipment are required after repair.

2-2. Test Equipment, Tools and Materials

- a. Tool Kit Electronic Equipment TK-100/G.
- b. Tool Kit Electronic Equipment TK-105/G.

2-3. Troubleshooting

a. Check the framework of the mast carrier and the launcher for bends and dents or broken and cracked welds. Repair or replace a damaged mast base (para 2-4) or mast carrier (para 2-5.)

b. Check the eight mast sections for bends, a, scratches, or cracks. Replace a defective ; section.

c. Check the operation of the handcrank and winch for smoothness of operation. If operation faulty, replace the defective part. Replace nap slide fastener (7, fig. 2-1) if it has lost its spring tension. Check the square shaft of the gear assembly to see that it has not

been distorted or twisted. Replace the gear assembly if the square shaft is not true.

d. Check the elevator for smoothness of operation. If operation is faulty, repair or replace parts as necessary (para 2-4c).

e. Check the brake assembly operation. If slippage or buckling of the mast section occurs, adjust the brake (para 2-4e). Replace the brake shoe assembly, if necessary (para 2-4d).

f. Check the antenna, adapter and top and middle guy attachments for dents, bends or cracks (para 2-6b).

g. Check the nine guy assemblies for kinks, Bends, and fraying, and check the snubbers for smooth operation (para 2-6c).

h. Check the operation of the couplers by placing two mast sections together with a coupler. It should hold the sections securely. If the coupler does not operate correctly, replace it.

i. Check the guy anchors and stakes for bends. If they are bent or damaged, straighten or replace them.

2-4. Mast Base Repair

a. Launcher. Inspect the mast base (launcher) frame for dents, bends, or broken welds. Straighten minor dents or bends with the sledge hammer. If welds are cracked or broken, reweld them. Check the surfaces for scratches to the paint, rust marks, blisters, etc. If necessary, clean the surface with sandpaper or a grinding wheel, then paint the area (TB SIG 364).

b. Removal and Replacement of Winch Cable.

(1) Lower the elevator to the bottom of the launcher.

(2) Cut the winch cable (2, fig. 2-1).


(3) Remove the bolt and nut (23 and 24, fig. 2-4), releasing one end of the cable; remove the cable.

(4) Move the snap fastener (7, fig. 2-1), to free the handcrank shaft.

(5) Remove the gear assembly (1, fig. 2-6).


(6) Remove the four screws (8, fig. 2-1), freeing the winch assembly.

(7) Remove the two screws at the right end of the winch assembly that hold the two plates together (6, fig. 2-1).

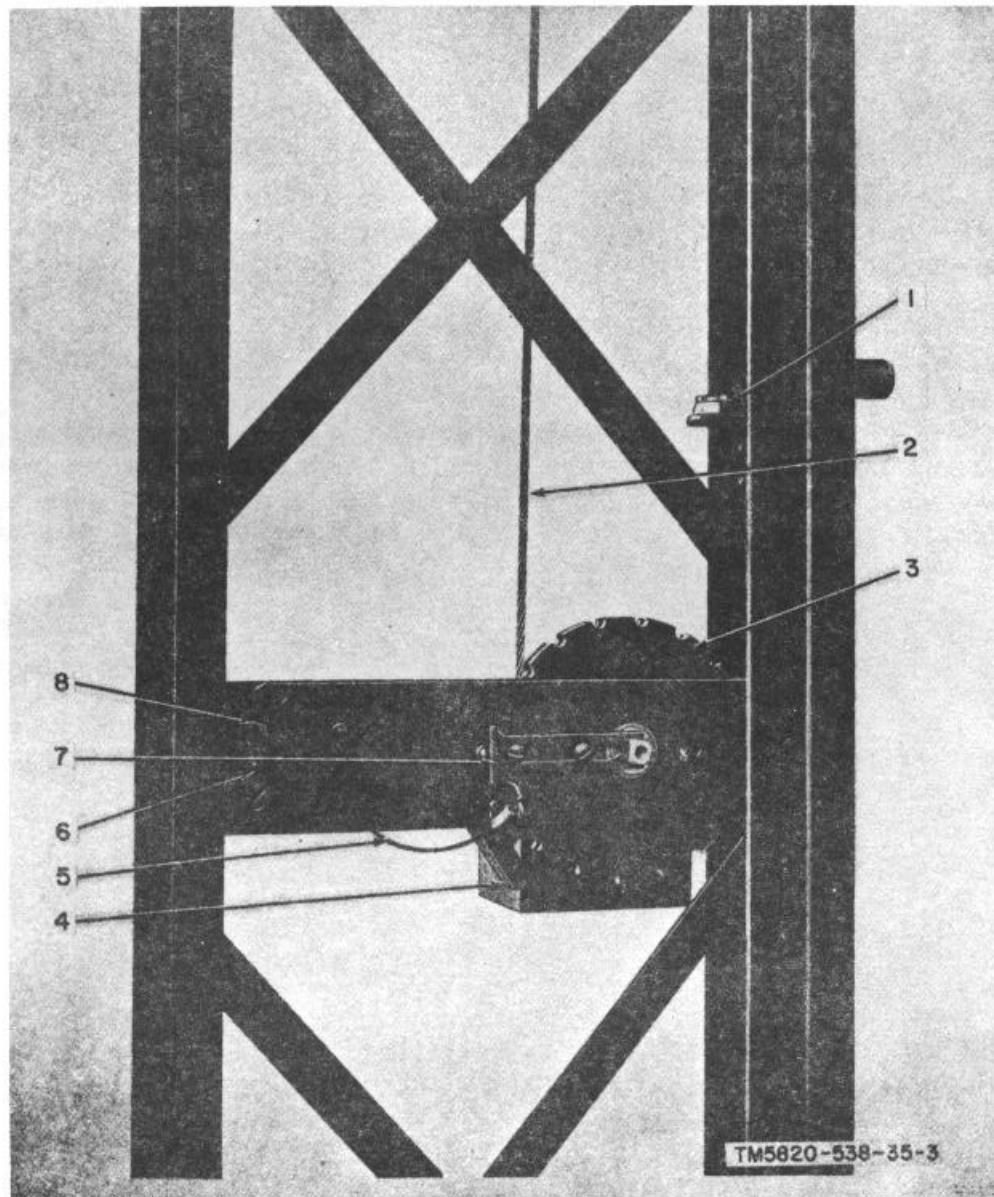

- | | | |
|---|--|-----------------|
| 1 | Bench level | A1A2MP23 |
| 2 | Single-leg, wire-rope assembly (winch cable) | A1A2A4R5A6 |
| 3 | Grooved pulley | A1A2A4A5MP1 |
| 4 | Release lock lever | A1A2A4A7 |
| 5 | Single-leg, wire-rope assembly | A1A2A4A8 |
| 6 | Retaining plate | A1A2A4MP1, 2 ea |
| 7 | Snap slide fastener | A1A2A4MP5 |
| 8 | Machine screw | A1A2A4H1, 4 ea |

Figure 2-1. Winch assembly parts.

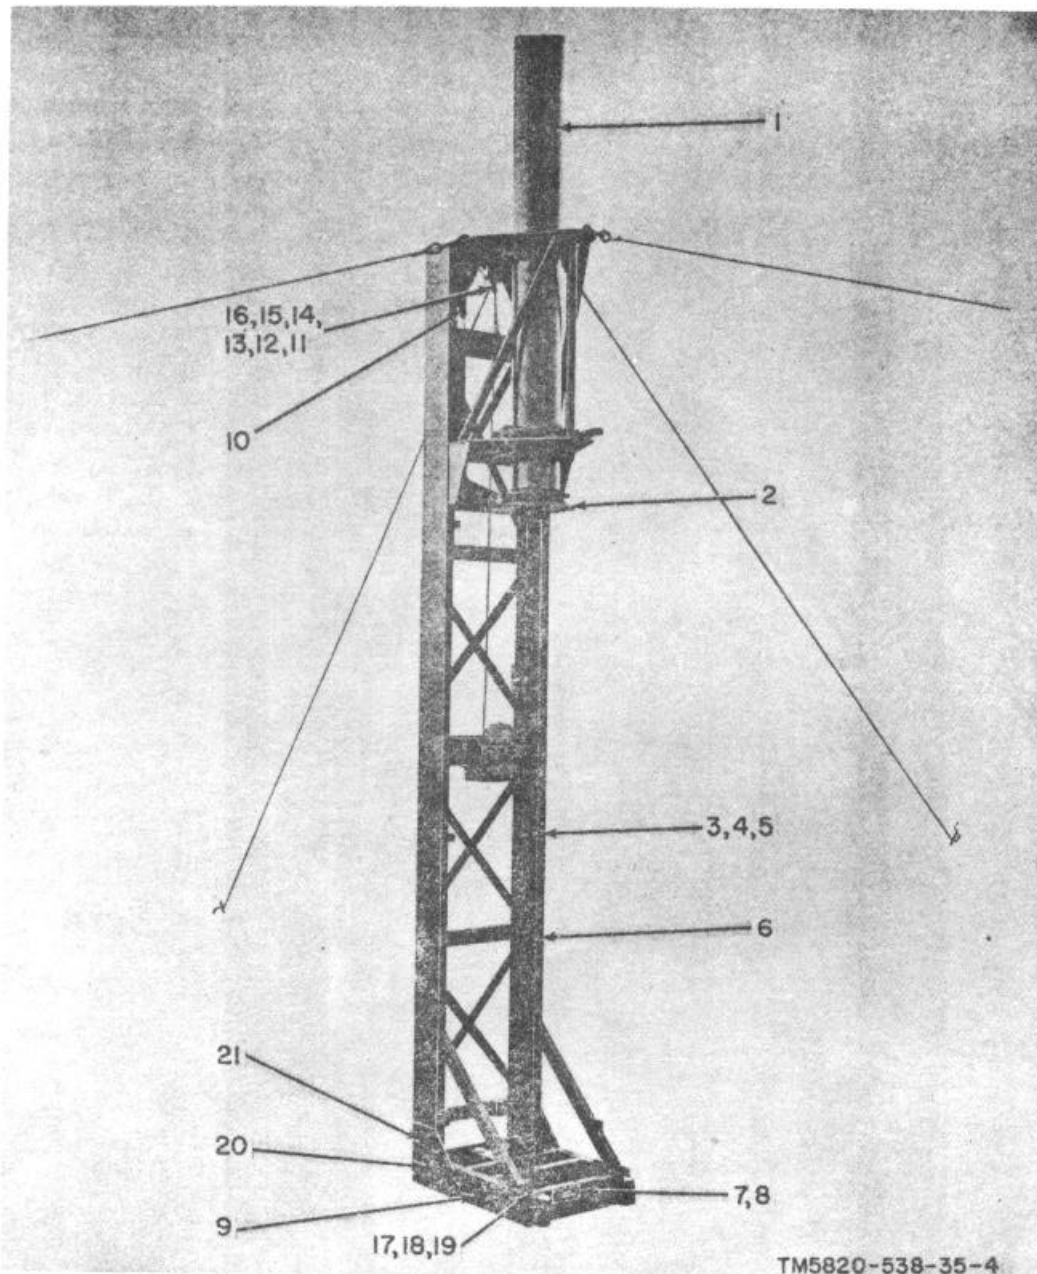

1 Mast section	A1MP1A through A1MP1H	11 Grooved pulley	A1A2MP6
2 Antenna elevator	A1A2A12	12 Machine bolt	A1A2MP16H1
3 Catch strike	A1A2MP17A through A1A2MP17D	13 Flat washer	A1A2MP16H1, A1A2MP16H2
4 Machine screw	A1A2MP17H1, A1A2MP17H2	14 Flat washer	A1A2MP16H1
5 Self-locking hexagonal nut	A1A2MP17H1, A1A2MP17H2	15 Sleeve spacer	A1A2MP16H1
6 Frame assembly	A1A2A3	16 Self-locking hexagonal nut	A1A2MP16H1
7 Identification plate	A1A2MP24	17 Machine bolt	A1A2MP2H1
8 Drive screw	A1A2MP24H1 through A1A2MP24H4	18 Flat washer	A1A2MP2H1
9 Mast base subassembly	A1A2MP1	19 Self-locking hexagonal nut	A1A2MP2H1
10 Claw bar	A1A2MP21	20 Machine screw	A1A2MP2H1
		21 Machine screw	A1A2MP2H1A

Figure 2-2. Mast base (launcher) parts.

(8) Separate the plates, and remove the grooved pulley (3).

(9) Slide the end of the winch cable out of the grooved pulley.

(10) Put the elevator end through the pulley of a new winch cable (11, fig. 2-2).

(11) Slide the ball at the second end of the winch cable into the groove in the pulley.

(12) Reverse the procedures in (3) through (8) above.

(13) Check the operation by raising and lowering the elevator.

c. Removal and Replacement of Elevator and Parts.

(1) Remove the twelve screws (20, fig. 2-2) (six on each side of the base).

(2) Remove the four bolts, washers, and nuts (17, 18, and 19).

(3) Remove two screws (21) at the rear of the base. The base is now free from the launcher frame.

(4) Slide the elevator out of the frame assembly (6).

(5) Remove the two retaining rings (6, fig. 2-3) and the one flat washer (5) which holds the wheel on the elevator.

(6) Remove the headless grooved pin (4) and the metal wheel (3).


(7) Remove the bolt and nut (9 and 10).

(8) Remove the solid wheel (8) which is now free.

(9) Remove the nut and bolt (13 and 12).

(10) Remove the flagstaff socket (11).

(11) Reverse the procedure in (1) through (10) above to reassemble the elevator.

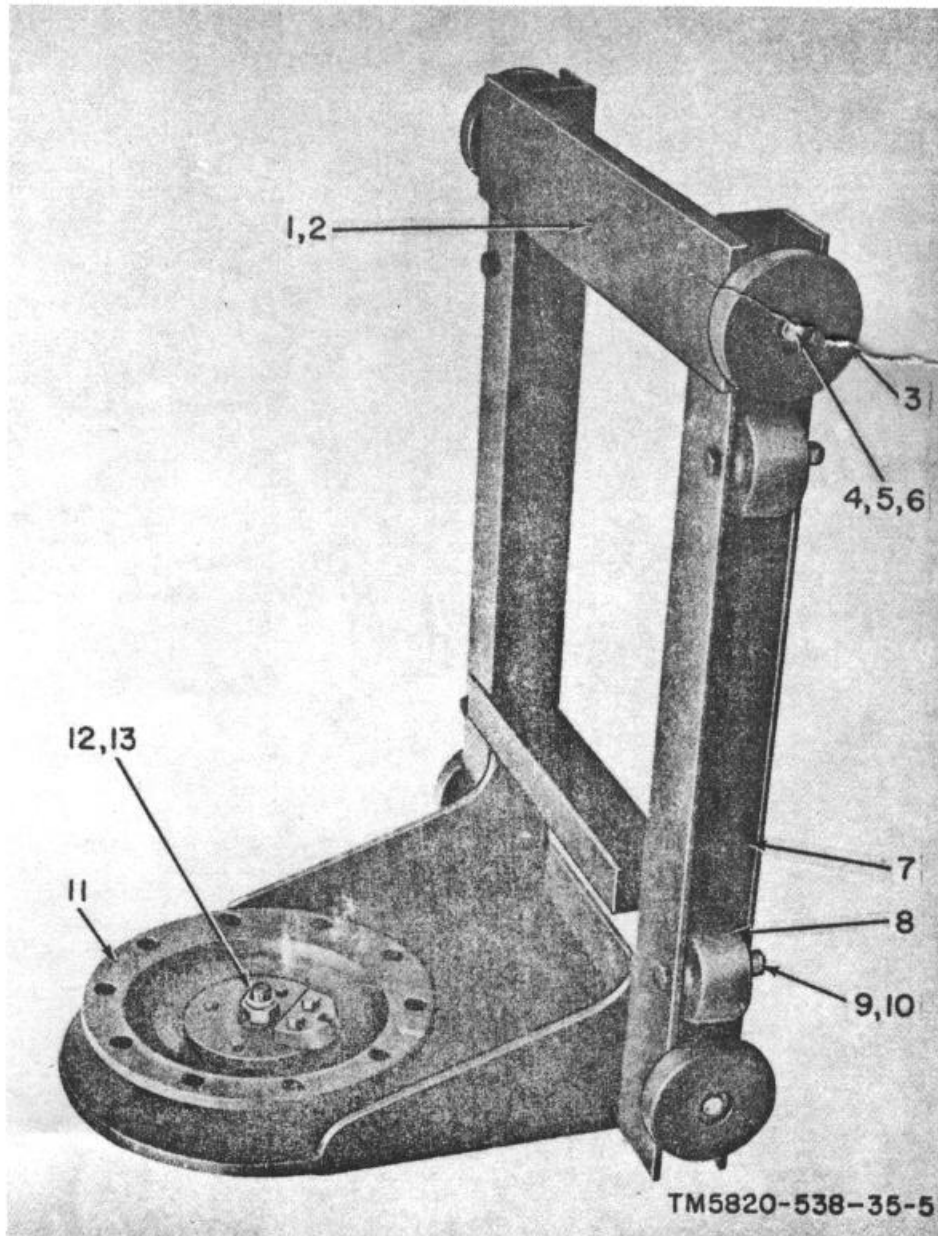

- | | | |
|----|----------------------------|---------------------------------|
| 1 | Machine bolt | A1A2A12H1 |
| 2 | Plain hexagonal nut | A1A2A12H1 |
| 3 | Metal wheel | A1A2A12MP4A through A1A2A12MP4D |
| 4 | Headless grooved pin | A1A2A12MP4AH1, 4 ea |
| 5 | Flat washer | VMP4AH1, 4 ea |
| 6 | Retaining ring | A1A2A12MP2A through A1A2A12MPD |
| 9 | Machine bolt | A1A2A12MP2AH1, 4 ea |
| 10 | Self-locking hexagonal nut | A1A2A12MP2AH1, 4 ea |
| 11 | Flagstaff socket | A1A2A12A13 |
| 12 | Machine bolt | A1A2A12A13H1 |
| 13 | Self-locking hexagonal nut | A1A2A12A13H1 |

Figure 2-3. Antenna elevator parts, elevator removed from launcher.

d. Removal and Replacement of Brake Shoe.

- (1) Release the brake by pulling the handle.
- (2) Remove all mast sections.
- (3) Remove the nut and bolt (21 and 20, fig. 2-4).
- (4) Remove the damaged shoe-type brake (brake shoe) (22).
- (5) Place a good brake shoe in place.
- (6) Replace the nut and bolt that were removed in (3) above.
- (7) Adjust the brake (e below).

e. Brake Adjustment.

- (1) Place a mast section in the brake (fig. 2-4).
- (2) Close the brake as shown in figure 2-4.

(3) Place the hook of a 50-pound scale (that is, John Chatillon and Sons, Type 100) in the hole of the brake handle.


(4) Pull the scale away from the brake handle, and note the reading at which the brake opens. If this reading is not approximately 30, continue as follows:

(5) Loosen the plain hexagonal nut (7, fig. 2-4).

(6) If the reading is less than 30 in (4) above, turn the self-locking hexagonal nut (2) clockwise one-half revolution, tightening the brake pressure. If the reading is greater than 30 in (4) above, turn the nut counterclockwise, loosening the brake pressure.

(7) Tighten the nut that was loosened in (5) above.

(8) Repeat the procedures in (4), (5), and (6) above until the reading is approximately 30 in (4) above.

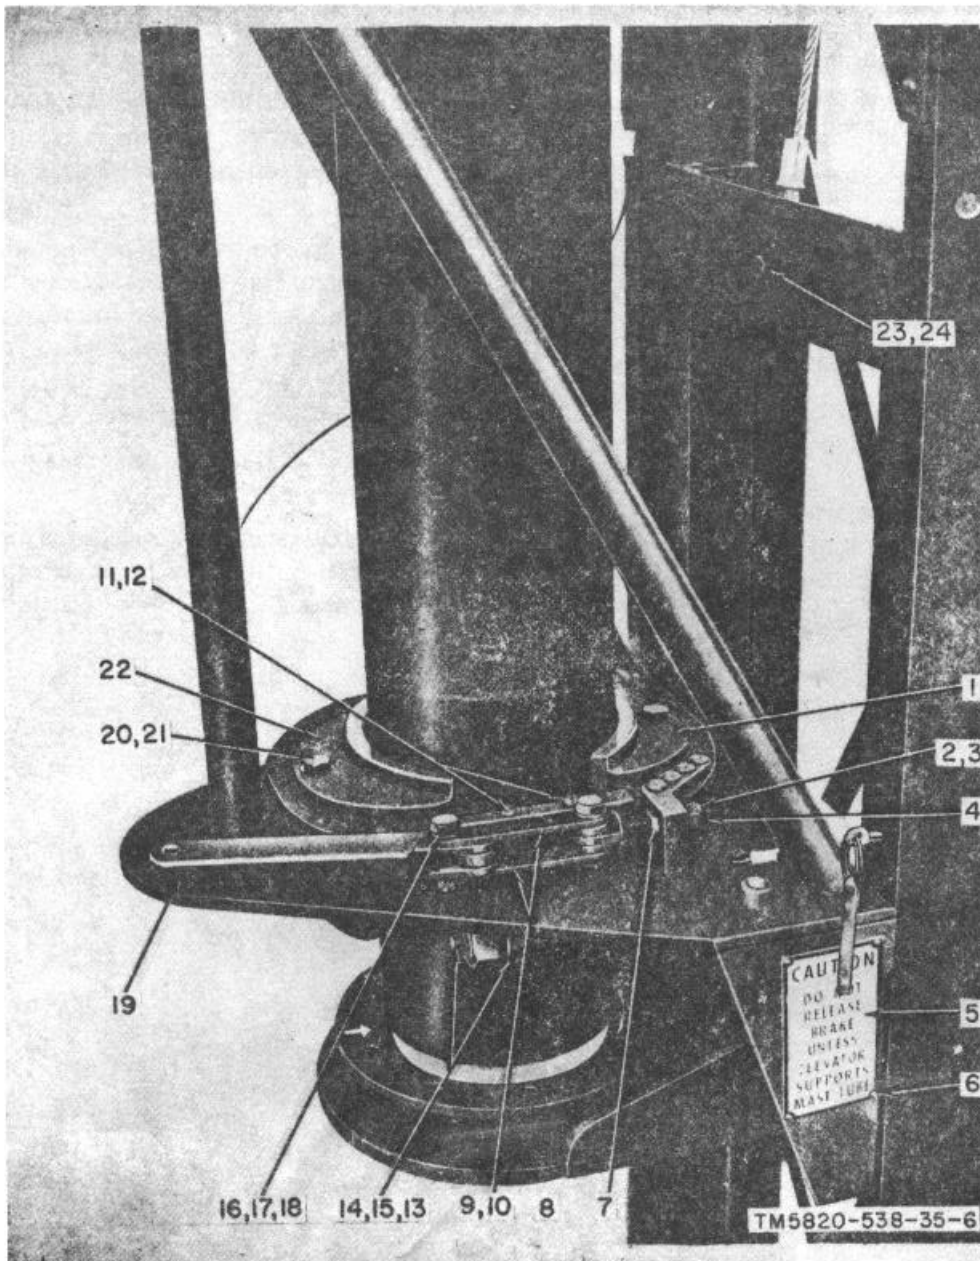


1 Shoe-type brake	A1A2A9MP1	14 Headless grooved pin	A1A2MP8AH1
2 Self-locking hexagonal nut	A1A2MP11H1	15 Retaining ring	A1A2MP8AH1
3 Flat washer	AN960C516	16 Machine bolt	A1A2MP8AH2
4 Eye bolt	A1A2MP11H1	17 Cotter pin	A1A2MP11H1,
5 Instruction plate	A1A2MP13	18 Plain hexagonal nut	A1A2MP11H2
6 Drive screw	A1A2MP13H1 through	19 Handle	A1A2MP11H1,
	A1A2MP13H4	20 Machine bolt	A1A2MP11H2
7 Plain hexagonal nut	A1A2MP11H3	21 Self-locking hexagonal nut	A1A2A9MP2H1
8 Retaining shaft plate	A1A2MP9	22 Shoe-type brake	A1A2A10
9 Anchor brake shoe link	A1A2MP11A	23 Machine bolt	A1A2A12H1
10 Anchor brake shoe link	A1A2MP11B	24 Plain hexagonal nut	A1A2A12H1
11 Machine screw	A1A2MP9H1,		
	A1A2MP9H2		
12 Lockwasher	A1A2MP9H1,		
	A1A2MP9H2		
13 Material handling roller	A1A2MP8A through		
	A1A2MP8D		

Figure 2-4. Brake assembly parts.

- f. Replacement of Material Handling Roller.
- (1) Remove two retaining rings (6, fig. 2-5), one from each side of the pin.
 - (2) Remove the headless grooved pin (5).
 - (3) Remove the damaged material handling roller.

- (4) Put a new roller in place of the damaged one.
- (5) Slide the pin that was removed in (2) above through the hole in the bracket and through the roller.
- (6) Replace the two retaining rings (6).

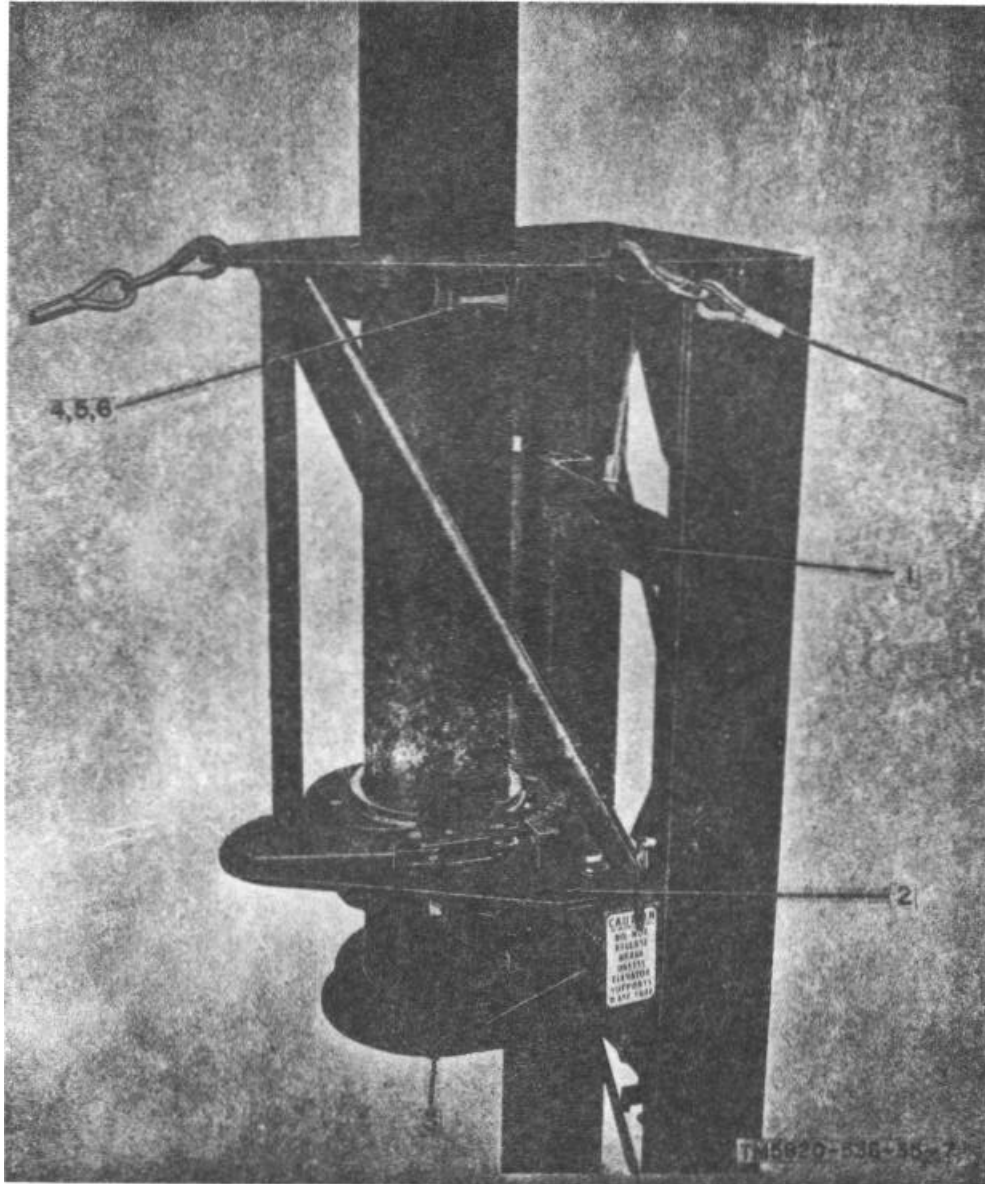

- | | |
|---------------------------|---------------------------|
| 1 Elevator frame | A1A2A12MP1 |
| 2 Guide assembly | A1A2MP6 |
| 3 Antenna elevator | A1A2A12 |
| 4 Material handing roller | A1A2MP8E through A1A2MP8H |
| 5 Headless grooved pin | A1A2MP8EH1 |
| 6 Retaining ring | A1A2MP8EH1, A1A2MP8EH2 |

Figure 2-5. Mast base (launcher) parts, top section.

2-5. Mast Carrier Repair

a. Inspect the frame of the mast carrier for dents, bends, or broken welds. Straighten minor bends or dents. If welds are cracked or broken, reweld them. Check the painted surfaces for scratches, rust, or blisters. If necessary, clean the surface with sandpaper or a grinding wheel and paint the area (TB SIG 364).

b. Check the operation of the six latches to see that they hold the carrier securely to the launcher. If the latches are defective, repair or replace them.

2-6. Guy Bag and Contents Maintenance


a. Check the gear assembly (1, fig. 2-6) for smoothness of operation. Binding may be caused by the improper winding of the cable on the reel or over the pulley. To correct binding, rewind and straighten the cable. If the gear assembly does not turn, replace it.

b. Check the antenna adapter (11, fig. 1-1) and the top and middle guy attachments (7 and 4) for dents,

scratches, or rust. Straighten dents; remove scratches or rust with sandpaper, and touchup paint (TB SIG 364). Replace any item that is defective.


c. Check the nine guy assemblies (fig. 2-7) Make sure the cables are free of kinks, severe bends, and fraying. Check the snaphooks and snubbers to see that they operate smoothly and are in good working condition. Check the swaging sleeves (3 and 8) to see that the rope thimbles (4 and 7) are inside. Replace the guy assembly if any part is defective.

d. Check the eight grooved clamp couplings (couplers) (6, fig. 1-1) for smoothness of operation. Replace any defective couplers.

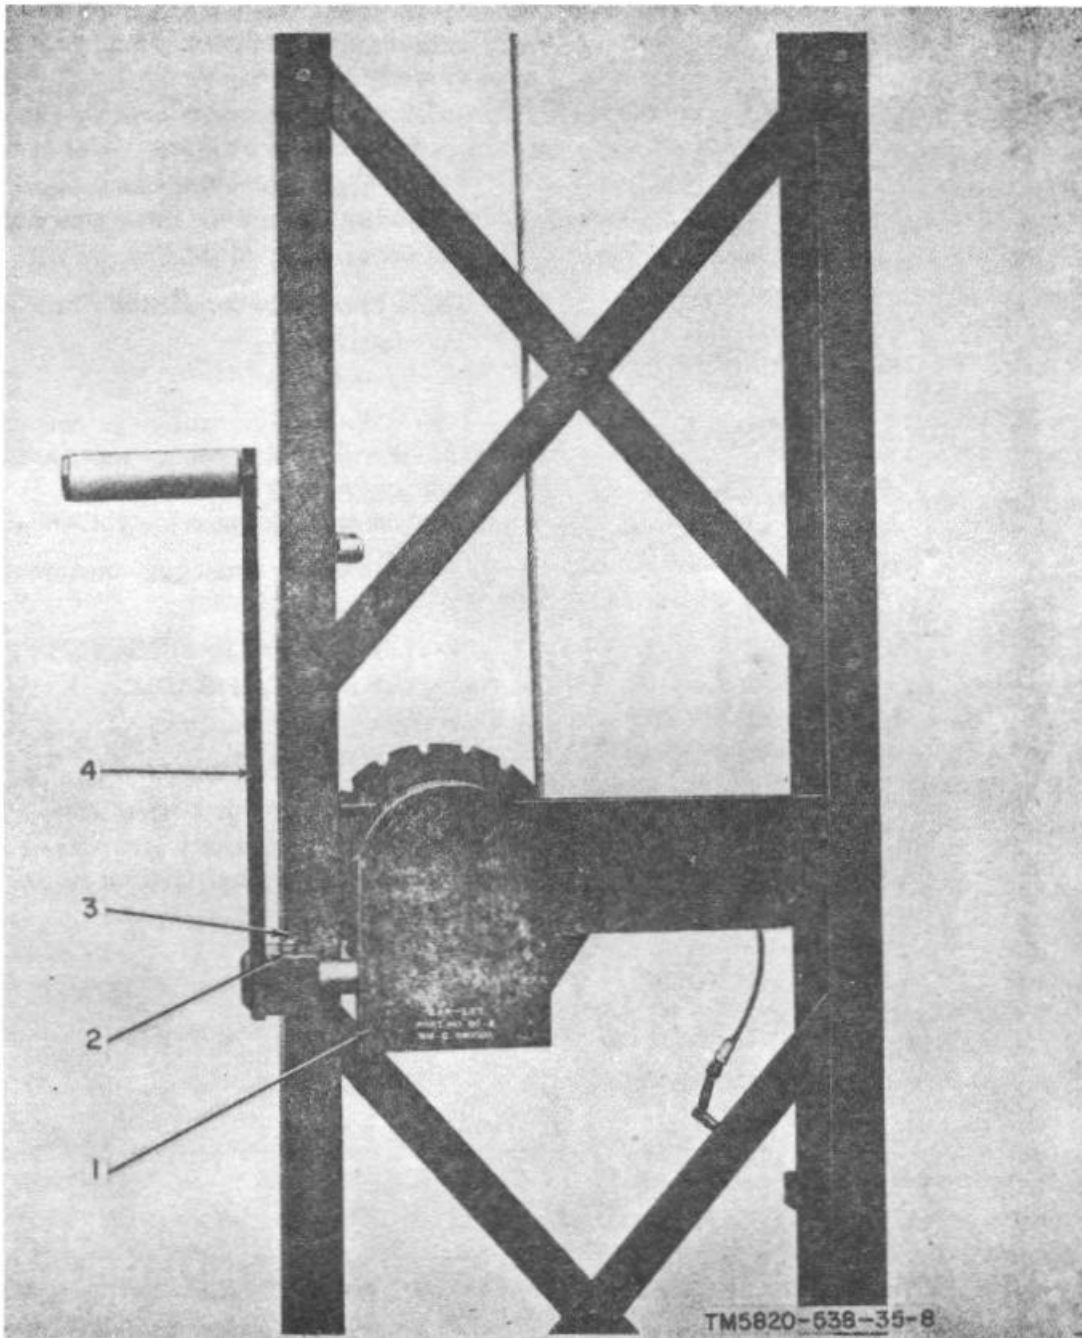

- | | | |
|---|----------------------------|--------------|
| 1 | Gear assembly | A1A2A21MP1 |
| 2 | Self-locking hexagonal nut | A1A2A21MP2H1 |
| 3 | Machine bolt | A1A2A21MP2H1 |
| 4 | Handle | A1A2A21MP2 |

Figure 2-6. Handcrank parts.

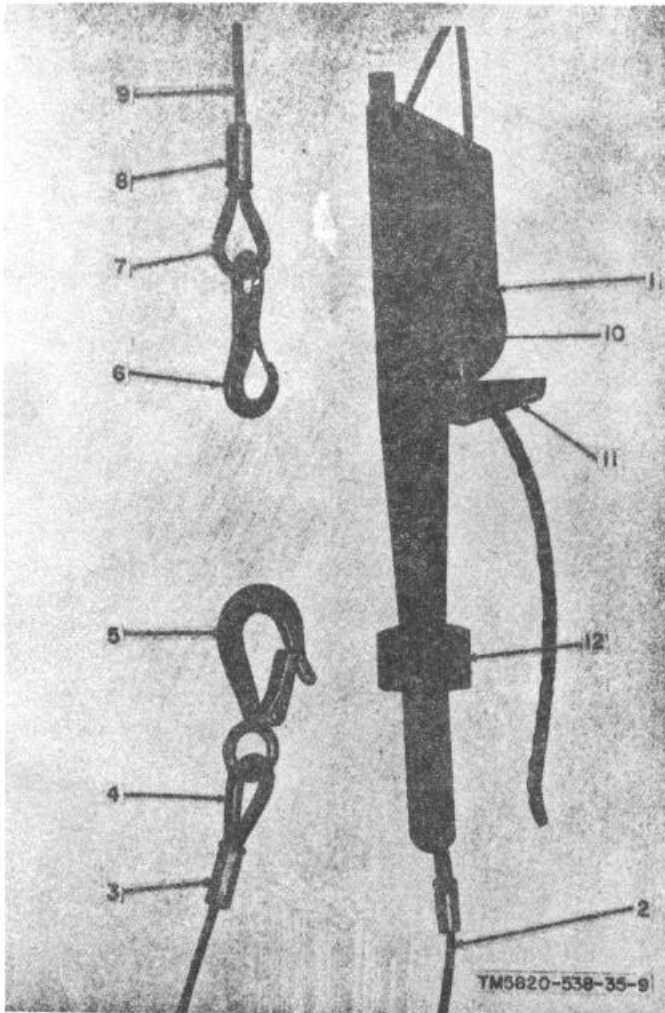

- | | |
|----------------------------------|------------------|
| 1 Sliding grip line clamp | A1A20A22A24 |
| 2 Single-leg, wire-rope assembly | A1A20A22A23 |
| 3 Swaging sleeve | A1A20A22A23MP2 |
| 4 Rope thimble | A1A20A22A23MP3 |
| 5 Snaphook | A1A20A22A23MP4 |
| 6 Snaphook | A1A20A22MP2 |
| 7 Rope thimble | A1A20A22MP3, 2ea |
| 8 Swaging sleeve | A1A20A22MP4, 2ea |
| 9 Steel wire rope | A1A20A22MP1 |
| 10 Cam handle | |
| 11 Latch | |
| 12 Nut | |

Figure 2-7. Guy assembly parts.

e. Check the condition of the antenna halyard (radius rope) (3, fig. 1-1). If it is frayed or badly worn, replace it.

f. Check the bung wrench (5) for bends or cracks in the metal. Replace it if it is damaged.

g. Check the cotton duck bag (1) for tears, holes, and wear. Mend or patch the holes; replace the bag if it is worn.

2-7. Tools and Accessories Roll and Contents Maintenance

(fig. 1-2)

a. Check the condition of the items listed in (1) through (5) below for bends and wear; sandpaper and paint (TB SIG 364) as necessary. Straighten bent items, or replace them.

(1) Three screw-type guy anchors (5, fig. 1-2).

(2) Three Stakes GP-112/U (3).

(3) Four Stakes GP-2 (2).

(4) Sledge hammer.

(5) Digging bar (6).

b. Check the tools and accessories roll (1) for tears, holes, and wear. Mend or patch the holes or replace the roll if it is worn.

CHAPTER 3 DEPOT OVERHAUL STANDARDS

3-1. Applicability of Depot Overhaul Standards

The tests outlined in this chapter are designed to measure the performance capability of a repaired equipment. Equipment that is to be returned to stock should meet the standards given in these tests.

3-2. Applicable References

a. Repair Standards. Applicable procedures of the depot performing this test and the general standards for repaired equipment given in TB SIG 355-1, TB SIG 355-2, and TB SIG 355-3 form a part of the requirements for testing this equipment.

b. Technical Publications. The technical publications applicable to the equipment to be tested are TM 11-5820-538-12 and TM 11-5820-538-35P.

c. Modification Work Orders. Perform all modification work orders (MWO's) applicable to this equipment before making the tests specified. DA Pam 310-7 lists the current MWO's.

3-3. Equipment Required for Depot Testing

The items listed in the chart below are required for depot testing.

Item	Common name
Dynamometer, Dillon Part No. AN26996	Dynamometer
Turnbuckle, Bremer-Tichner Type 518 X 12.	Turnbuckle
Protractor, commercial 50-lb scale, John Chatillon and Sons, Type 100.	Protractor
Government Gages: 324347 324350 324352 324357 324361 324362	Gage

3-4. Visual Inspection

Inspect the following items for bends, warping, broken welds, loose rivets, scratches and rust, frayed cable or rope, and tears in cotton duck material.

- a.* Carrier.

- b.* Mast base.
- c.* Winch assembly.
- d.* Brake assembly.
- e.* Elevator assembly.
- f.* Handcrank.
- g.* Guy attachments.
- h.* Antenna adapter.
- i.* Mast sections.
- j.* Couplers.
- k.* Guy assemblies.
- l.* Radius rope.
- m.* Bung (spanner) wrench.
- n.* Anchors.
- o.* Guy stakes.
- p.* Digging bar.
- q.* Sledge hammer.
- r.* Guy bag.
- s.* Tools and accessories roll.

3-5. Brake Test

(fig. 3-1)

- a.* Place the launcher in a horizontal position.
- b.* Place a mast section in the launcher, and close the brake.
- c.* Place the hook of a 50-pound scale in the hole of the brake shoe.
- d.* Pull the scale away from the brake. The scale meter should indicate approximately 30 pounds. Remove the scale.
- e.* Attach a wire cable from a stationary beam to the turnbuckle, and attach the second end of the turnbuckle to the dynamometer as shown in figure 3-1.
- f.* Attach a wire cable from the second end of the dynamometer through the mast section, and tie the cable around the steel bar that is on the end of the antenna adapter so that the load is applied axially to the brake.
- g.* Tighten the turnbuckle until the dynamometer indicates 500 pounds. There should be no slippage of the mast section.
- h.* Refer to paragraph 2-4e for brake adjustment.

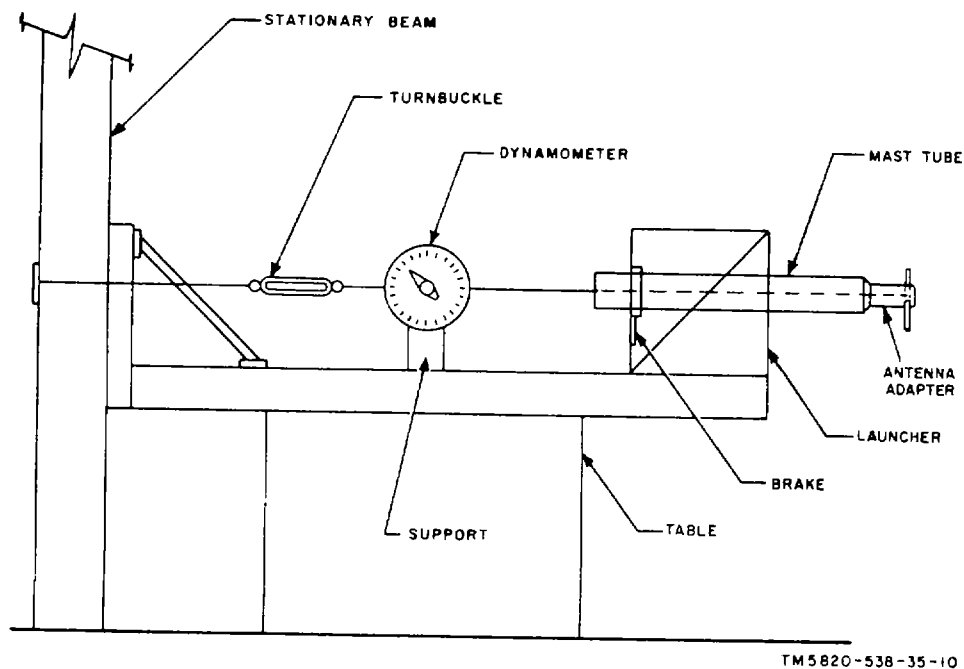


Figure 3-1. Brake test setup.

3-6. Mast Section Coupling Test

- a. Place two mast sections end to end.
- b. Place a coupling around the two mast sections.

Note. Use a 1/8-inch thick shim between the coupling and the locating pin on the gage in c below. As pressure is applied, the shim is removed so that there is no contact between the coupling and the pin.

c. Measure the coupling closing pressure on the smaller end of Government Gage #324361. The pressure should be a minimum of 2 pounds.

d. Measure the coupling closing pressure on the larger end of the gage. It should be a maximum of 75 pounds.

3-7. Interchangeability Test

a. Mating dimensions of the mast section ends and the coupling are verified with Government Gages #324357 and #324352.

b. Mounting dimensions of the winch assembly are verified with Government Gage #324347.

c. The outside diameter of the mast cap is verified with mast cap go and no-go rings, Government Gages #324350 and #324362.

3-8. Torsion Transfer Test

a. Couple the eight mast sections together with the couplings, and lay the assembly horizontally on a series of frames equipped with ball bearing trunnions to permit frictionless rotation of the mast.

b. Anchor one end of the mast to a vertical steel beam.

c. At the second end, attach the antenna adapter to the mast section with a coupling.

d. Position a 10-foot beam with the protractor scale in the slots in the antenna adapter with the indicator directly under the protractor scale.

e. Attach a 60-lb weight to the right end of the beam. The angular displacement should be less than 4°.

f. Switch the 60-lb weight to the left end of the beam. The angular displacement should be less than 4°.

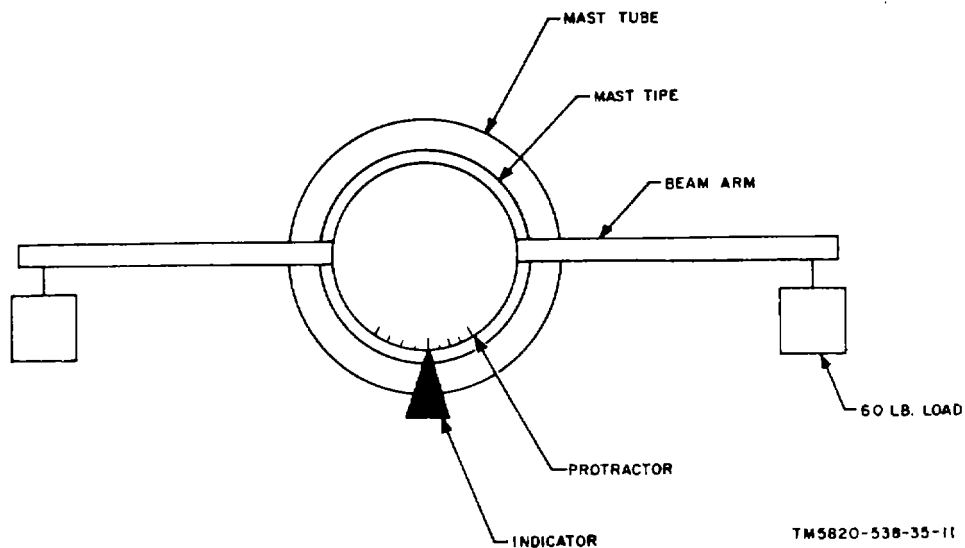


Figure 3-2. Torsion transfer test setup.

3-9. Bending Test

(fig. 3-3)

- a. Connect two mast sections with a coupling.
- b. Suspend the coupled mast sections in a cradle with both ends free to rotate as shown.
- c. Measure the heights of the mast sections above the base.
- d. Attach the dynamometer and turnbuckle as shown.
- e. Tighten the turnbuckle until a reading of 1240 is obtained from the dynamometer.

f. Loosen the turnbuckle, and measure the height of the mast sections above the base.

g. The difference in measurements between c and f above should be less than 1/2 inch.

Note. To avoid any deflection caused by friction, rotate the mast sections 180° and apply a slight pressure to break the friction between the mast ends and the coupling.

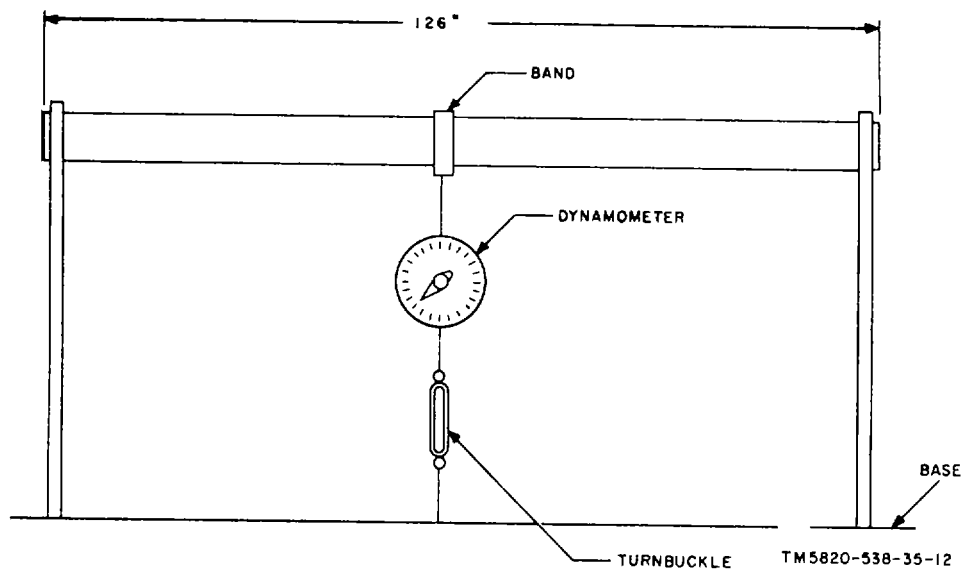


Figure 3-3, Bending test setup.

3-10. Guy Assembly Test

- Check the snaphook to make sure the locking tongue has tension.
- Check to see that the rope thimbles are in the swaging sleeves.
- Check the cable for fraying, and see that it moves freely through the snubber.
- Check to see that the nut (12, fig. 2-7) turns easily.
- Check to see that the latch (11) uncouples from the cam handle (10) and that the cam handle swings freely.

3-11. Elevator, Handcrank, and Winch Assembly Tests

Turn the handcrank clockwise and counterclockwise. The handcrank should turn without binding. The elevator should move smoothly up and down. If there is any trouble, refer to paragraph 2-4b and c.

3-12. Miscellaneous Parts Test

- Make sure that the radius rope (3, fig. 1-1) is 81 feet long +2 inches and that there is no fraying.
- Check to see that the couplers (6) are not bent and they open and close with pressure.
- Check to see that the top guy attachment (7) is not bent or damaged. The inside diameter should be 2.700 inches.
- Check to see that the middle guy attachment (4) is not bent or damaged. Remove the pin, and make sure that the guy attachment opens freely.
- Examine the bung (spanner) wrench (5) for bends and broken or bent pins.
- Examine the cotton duck bag (1) and the canvas tools and accessories roll (1, fig. 1-2) for tears.

APPENDIX REFERENCES

The following is a list of applicable publications which are available to the DS, GS, and depot maintenance personnel of Mast AB-577/GRC:

DA Pam 310-4	Index of Technical Manuals, Technical Bulletins, Supply Manuals, (types 7, 8, and 9) Supply Bulletins, and Lubrication Orders.
DA Pam 310-7	U. S. Army Equipment Index of Modification Work Orders.
SC 5180-91-CLR07	Tool Kit, Electronic Equipment TK-105/G (FSN 5180-610-8177).
SM 11-4-5180-S21	Tool Kit, Electronic Equipment TK-100/G.
TB SIG 355-1	Depot Inspection Standard for Repaired Signal Equipment.
TB SIG 355-2	Depot Inspection Standard for Refinishing Repaired Signal Equipment.
TB SIG 355-3	Depot Inspection Standard for Moisture and Fungus Resistant Treatment.
TB SIG 364	Field Instructions for Painting and Preserving Electronics Command Equipment.
TM 11-5820-538-12	Operator and Organizational Maintenance Manual Including Repair Parts List: Mast AB-577/GRC and Extension Kit, Mast MK-806/GRC.
TM 11-5820-538-35P	DS, GS, and Depot Maintenance Repair Parts and Special Tool Lists: Mast AB-577/GRC and Extension Kit, Mast MK-806/GRC.
TM 38-750	Army Equipment Record Procedures.

By Order of the Secretary of the Army:

Official:

KENNETH G. WICKHAM,
Major General, United States Army,
The Adjutant General.

W. C. WESTMORELAND,
General, United States Army,
Chief of Staff.


Distribution:

To be distributed in accordance with DA Form 12-51, Direct and General Support maintenance requirements for AN/GRC-50 and AN/TRC-24 radio sets.

912/30071

*U.S. GOVERNMENT PRINTING OFFICE: 1990-262-

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

 <p style="font-size: small; margin: 0;"><i>THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.</i></p>		SOMETHING WRONG WITH PUBLICATION	
		FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)	
		DATE SENT	
PUBLICATION NUMBER		PUBLICATION DATE	PUBLICATION TITLE
IN THIS SPACE, TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT.			
BE EXACT PIN-POINT WHERE IT IS			
PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.
PRINTED NAME, GRADE OR TITLE AND TELEPHONE NUMBER		SIGN HERE	

The Metric System and Equivalents

Linear Measure

1 centimeter = 10 millimeters = .39 inch
 1 decimeter = 10 centimeters = 3.94 inches
 1 meter = 10 decimeters = 39.37 inches
 1 dekameter = 10 meters = 32.8 feet
 1 hectometer = 10 dekameters = 328.08 feet
 1 kilometer = 10 hectometers = 3,280.8 feet

Weights

1 centigram = 10 milligrams = .15 grain
 1 decigram = 10 centigrams = 1.54 grains
 1 gram = 10 decigrams = .035 ounce
 1 decagram = 10 grams = .35 ounce
 1 hectogram = 10 decagrams = 3.52 ounces
 1 kilogram = 10 hectograms = 2.2 pounds
 1 quintal = 100 kilograms = 220.46 pounds
 1 metric ton = 10 quintals = 1.1 short tons

Liquid Measure

1 centiliter = 10 milliliters = .34 fl. ounce
 1 deciliter = 10 centiliters = 3.38 fl. ounces
 1 liter = 10 deciliters = 33.81 fl. ounces
 1 dekaliter = 10 liters = 2.64 gallons
 1 hectoliter = 10 dekaliters = 26.42 gallons
 1 kiloliter = 10 hectoliters = 264.18 gallons

Square Measure

1 sq. centimeter = 100 sq. millimeters = .155 sq. inch
 1 sq. decimeter = 100 sq. centimeters = 15.5 sq. inches
 1 sq. meter (centare) = 100 sq. decimeters = 10.76 sq. feet
 1 sq. dekameter (are) = 100 sq. meters = 1,076.4 sq. feet
 1 sq. hectometer (hectare) = 100 sq. dekameters = 2.47 acres
 1 sq. kilometer = 100 sq. hectometers = .386 sq. mile

Cubic Measure

1 cu. centimeter = 1000 cu. millimeters = .06 cu. inch
 1 cu. decimeter = 1000 cu. centimeters = 61.02 cu. inches
 1 cu. meter = 1000 cu. decimeters = 35.31 cu. feet

Approximate Conversion Factors

<i>To change</i>	<i>To</i>	<i>Multiply by</i>	<i>To change</i>	<i>To</i>	<i>Multiply by</i>
inches	centimeters	2.540	ounce-inches	Newton-meters	.007062
feet	meters	.305	centimeters	inches	.394
yards	meters	.914	meters	feet	3.280
miles	kilometers	1.609	meters	yards	1.094
square inches	square centimeters	6.451	kilometers	miles	.621
square feet	square meters	.093	square centimeters	square inches	.155
square yards	square meters	.836	square meters	square feet	10.764
square miles	square kilometers	2.590	square meters	square yards	1.196
acres	square hectometers	.405	square kilometers	square miles	.386
cubic feet	cubic meters	.028	square hectometers	acres	2.471
cubic yards	cubic meters	.765	cubic meters	cubic feet	35.315
fluid ounces	milliliters	29.573	cubic meters	cubic yards	1.308
pints	liters	.473	milliliters	fluid ounces	.034
quarts	liters	.946	liters	pints	2.113
gallons	liters	3.785	liters	quarts	1.057
ounces	grams	28.349	liters	gallons	.264
pounds	kilograms	.454	grams	ounces	.035
short tons	metric tons	.907	kilograms	pounds	2.205
pound-feet	Newton-meters	1.356	metric tons	short tons	1.102
pound-inches	Newton-meters	.11296			

Temperature (Exact)

°F	Fahrenheit temperature	5/9 (after subtracting 32)	Celsius temperature	°C
----	------------------------	----------------------------	---------------------	----

