

**\*TB11-6625-2672-35**

**DEPARTMENT OF THE ARMY TECHNICAL BULLETIN**

**CALIBRATION PROCEDURE FOR  
ELECTRONIC COUNTER,  
HEWLETT • PACKARD  
MODEL 5223L AND C10-5223L**

**Headquarters, Department of the Army, Washington, DC  
12 July 1974**

SECTION	Paragraph	Page
I. INTRODUCTION AND DESCRIPTION		
Purpose and Scope	1	2
Calibration data card (DA Form 2416)	2	2
Reporting of errors	3	2
Calibration description	4	2
II. EQUIPMENT REQUIREMENTS (A AND C LEVEL)		
Equipment required	5	2
Accessories required	6	3
III. PRELIMINARY OPERATIONS (A LEVEL)		
Preliminary instructions	7	4
Equipment setup	8	5
IV. CALIBRATION PROCEDURES (A LEVEL)		
Time base and visibility	9	5
Self-check	10	6
Input amplifier	11	6
Sensitivity	12	7
Trigger level	13	7
Power supply	14	7
Final procedure	15	7
V. PRELIMINARY OPERATIONS (C LEVEL)		
Preliminary instructions	16	8
Equipment setup	17	8

**VI. CALIBRATION PROCEDURE LEVELS**

Two bin counter	10
Input sensitivity	8
Range limit	9
External standard type counter	10
Two bin counter	11
Stabilized	12
Flame detector	13

**SECTION I**  
**INTRODUCTION AND DESCRIPTION**

- Purpose and Scope.** This bulletin provides instructions for the calibration of Electronic Counter, Hewlett-Packard Model 2200L and C10-2200L. It is to be used by personnel that are trained and qualified in the usage of calibration standards and equipment. Electronic Counter, Hewlett-Packard Model 2200L and C10-2200L will be referred to as the "test instrument" throughout this bulletin.
- Model Variations.** Variations among models are described in note.
- Time and Technique.** The time required for this calibration is approximately 5 hours, using the dc and low frequency techniques.

**2. Calibration Data Card (DA Form 2410). Maintenance forms, records, and reports**

which are to be used by calibration personnel at all calibration levels are listed in and prescribed by TM 28-700. Separable adjustments are followed by 00.

- Reporting of Errors.** The reporting of errors, corrections, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2406 (Recommended Changes to Publications and Blank Form) and forwarded direct to Commander, US Army Electronic Counter, ATTN: AMETL-EM-A-DS, Fort Monmouth, NJ 07744.

- Calibration Description.** Test instrument parameters and performance specifications which pertain to this calibration are listed in table 1.

Table 1. Calibration Descriptions

Test instrument parameters	Performance specifications
<b>Power input requirements</b>	115 or 230 v $\pm$ 10%, 60 to 63 Hz, 30 w
<b>Frequency</b>	Range: 0 to 200 kHz Accuracy: $\pm 1$ count $\pm$ time base accuracy
<b>Time base</b>	Internal Frequency 100 kHz Aging rate: Less than $\pm 2$ parts in $10^5$ /month
<b>Input sensitivity and frequency response</b>	Range: DC coupled, 0 to 500 mV; ac coupled, 10 Hz to 200 kHz. Sensitivity: 0.1 v rms sine wave, 1 v pulse, 1 micro sec pulse width

**SECTION II**  
**EQUIPMENT REQUIREMENTS**  
**(A AND C LEVEL)**

- Equipment Required.** Tables 2 and 4 list the specific equipment used in the calibration procedure in sections IV and VI, respectively. The equipment in tables 2 and 4 are issued with second-

ary transfer calibration standards set 0101-001-7077 and AN/TEM25A1(v) Transportable Maintenance Calibration Facility, respectively, and is to be used in performing this procedure. Alternates

Items may be used by the calibrating activity when the equipment listed in table 2 or 4 is not available. The items selected must be verified to perform satisfactorily prior to use and must bear evidence of current calibration. The equipment must meet or exceed the minimum use specifications listed in table 2 or 4. The Accuracies listed in table 2 provide a four-to-one accuracy ratio between the standard and test instrument. Where the four-to-one ratio cannot be met, the actual accuracy of the equipment selected is shown in parenthesis.

6. **Accuracies Required.** The accuracies listed in tables 3 and 5 are based with secondary trace-for calibration standards set 4901-021-7677 and AN/TSM36A/v1 Transportable Maintenance Calibration Facility, respectively, and are to be used in this calibration procedure. When necessary, these items may be substituted by equivalent items unless specifically prohibited.

Table 2. Minimum Specifications of Equipment Required (A Line)

Item	Common name	Minimum use specifications	Manufacturer, model and part no.
A1	AUTOTRANSFORMER	Range: 100 to 125 vac Accuracy: $\pm 1\%$	General Radio Co. Model W10MT3AS1 (7910581)
A2	DT VOLTmeter	Range: -30 to +30 vdc Accuracy: $\pm 1\%$	Dana Lab. Model 5700-S-2127 (7912981)
A3	FREQUENCY DIFFERENCE METER	Range: 100 kHz Resolution: $\pm 1$ part in $10^4$	Hedek Inst. Co. FDM 2100 (MIS 10012)
A4	OSCILLOSCOPE w/ TIME BASE PLUG-IN AND VERTICAL PLUG-IN	Range: 100 Hz to 100 kHz Accuracy: $\pm 3\%$	Tektronix, Model 551A/W (7910581), Model 3A6 (7911441), and Model 3B4 (7912981)
A5	OSCILLATOR, FREQUENCY STANDARD	Range: 100 kHz Accuracy: $\pm 5$ parts in $10^6$	Versatek Model FS 223 (MIS 10022)
A6	TEST OSCILLATOR	Frequency Range: 10 Hz to 300 kHz $0 \pm 1$ VRMS Accuracy: $\pm 1\%$	Precision Model 134A or Hewlett-Packard Model 662A (MIS 10020)

Table 3.

Item	Common name	Description and part number
B1	ADAPTER CONNECTOR	BNC plug to double banana jack (7908601)
B2	CABLE ASSEMBLY, RADIO FREQUENCY <sup>1</sup>	36-in., RG 18 U, BNC plug terminations (7907467)
B3	PROBE, STANDARD	Tektronix, Type P0005 (7911561)
B4	TERMINAL	Hewlett Packard, Model 14940B (7911567)

<sup>1</sup> Two required

Table 4. Minimum Specifications of Equipment Required (C Level)

Item	Common name	Minimum part specification	Description, model, part number
A1	AUTOTRANSFORMER	105 to 125 volt, $\pm 5\%$	Variable Power Transformer TP-410/U (General Radio, Model WNR12A)
A2	DIFFERENTIAL VOLTMETER	0 to 35 volt, $\pm 0.01$ volt	Voltmeter TS-2040/U (Pfizer, Model 00440)
A3	METER CALIBRATOR	50 to 100 volt, $\pm 2$ volt, 600 Hz	Meter Calibrator TS-2704/U (Pfizer, Model 708A)
A4	OSCILLOSCOPE	2 Hz to 200 kHz, $\pm 3\%$	Oscilloscope AN/URR-276 (Teletronics Model 420) with X10 Probe (Teletronics, Model 016-010-001)
A5	ELECTRONIC COUNTER	2 Hz to 200 kHz 1微秒, Time Base 5 parts in $10^{-6}$ /24 hours	Electronic Digital Counter Counter AN/URR-257A (Systems Doctor, Model 1057B4-7-SD) w/R Frequency Converter CY-2549/U (Systems Doctor, Model 1058A)
A6	OSCILLATOR	2 Hz to 200 kHz	Signal Generator AN/FGR-200 (General Radio, Model 1310A)

Table 5. Accessories Required (C Level)

Item	Common name	Description and part number
B1	ADAPTER	BNC Jack to Clip Leads or Tee Lead Assembly GX-12040/U (Teletronics Model 013-4070-00)
B2	ADAPTER	Tee, BNC Plug to 2 BNC Jacks or Connector Adapter UG-2748/U (Amphenol, Model UG-2748/U)
B3	CABLE ASSEMBLY (C REQUIRED)	16 inch, RG-58/U, BNC Plug to BNC Plug or Cable Assembly, Perma Electronics, Model BNC-C-36
B4	CABLE ASSEMBLY (C REQUIRED)	BNC Plug to Black and Red Banana Plugs or Radio Frequency Cable Assembly CG-3672/U (Perma Electronics, Model 2261-C-36)
B5	VOLTAGE DIVIDER	600 ohm or 100:1 divider or Voltage Divider TS-2140/U (Hewlett-Packard, Model 1162TA)

## SECTION III

### PRELIMINARY OPERATIONS (A LEVEL)

7. Preliminary Instructions. a. The instructions outlined in this section are preparatory to the calibration process. Personnel should become familiar with the entire bulletin before beginning the calibration.

b. Items of equipment used in this procedure are referenced within the text by common name and item identification number as listed in tables 2 and 3. For the identification of equipment referenced by item

numbers prefixed with A, see table 2, for prefix B, see table 3.

#### WARNING

HIGH VOLTAGE is used during the performance of this calibration. DEATH ON CONTACT may result if personnel fail to observe safety precautions.

8. Equipment Setup. a. Set test instruments:

## SECTION IV


### CALIBRATION PROCESS (A LEVEL)

#### NOTE

Unless otherwise specified, verify the results of each test and take corrective action whenever the test requirement is not met before continuing with the calibration.

9. Time Base and Stability. a. Performance Check.  
 (1) Position test instrument controls as listed in (a) through (d) below:  
 (a) FUNCTION switch to FREQUENCY A.  
 (b) TIME BASE MULTIPLIER switch to  $10\mu - 10^{\circ}$ .  
 (c) COM SEP CHECK switch to COM.

- (d) Channel A and B DC VOLTS-AC VOLTS switch to AC VOLTS XI.  
 (e) Both SLOPE switches to  $\pm$  (positive).  
 (f) LEVEL A and B controls to  $+0$ .  
 (g) Connect STD. FREQ. OUTPUT jack of test instrument to TEST INPUT jack of frequency difference meter (A3), using cable (B2).  
 (h) Connect REF INPUT jack of frequency difference meter to 100 kHz jack of frequency standard (A5), using cable (B3).  
 (i) Adjust C5 (fig. 1) for no frequency difference (null) on frequency difference meter.

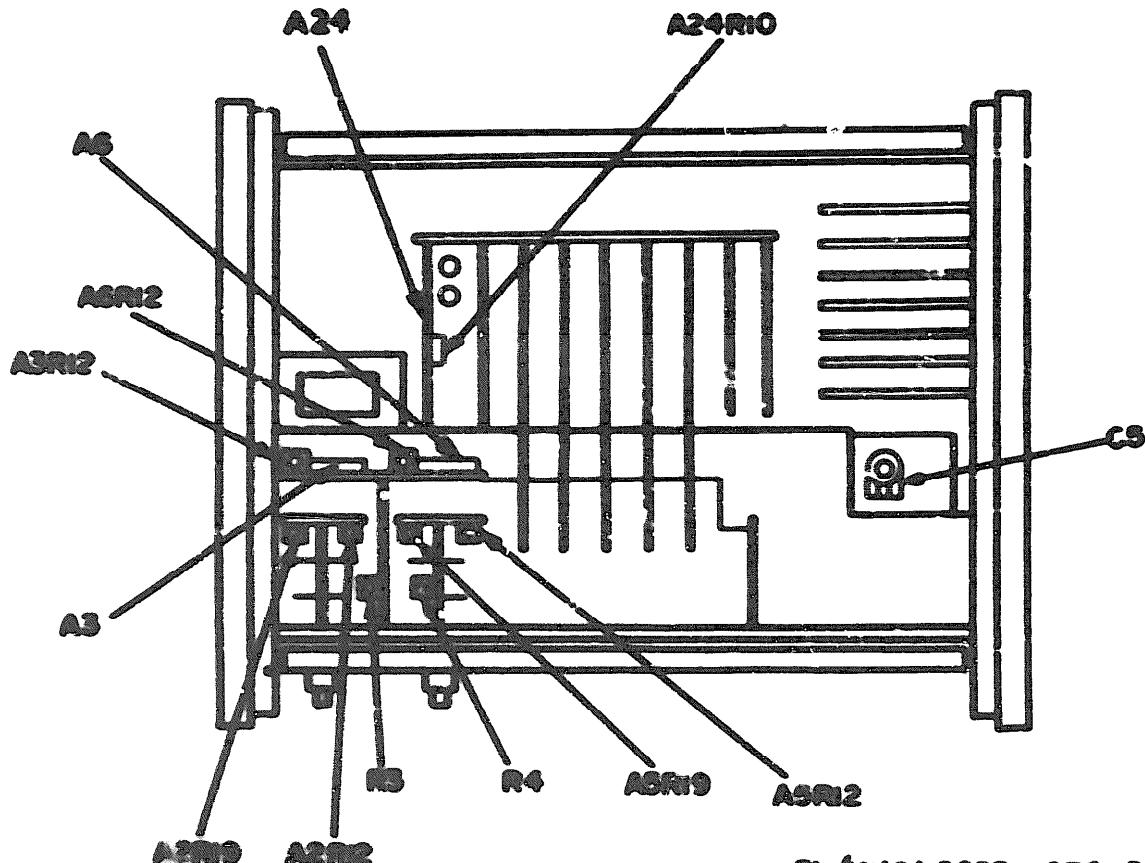

EL/MK(G) 0623-1276-35-1

Figure 1. ~~Block diagram top view~~

(6) Very meter selector (A1) between 105 and 125 volts. Wait at least 1 minute at 105 and 125 volts for stabilization. Frequency difference meter indication will remain within  $\pm 1$  part of  $10^6$ .

(7) Adjust autotransformer output to 115 volts.

(8) Monitor test instrument time base for 4 hours. Frequency difference meter indication will remain within 5 parts in  $10^6$ .

b. Adjustments. No adjustments can be made.

#### 10. Self Check. a. Performance Check.

(1) Set COM-SEP-CHECK switch to CHECK.

(2) Set TIME BASE-MULTIPLIER switch to settings listed in table 6 at each setting of TIME BASE-MUL.TIPLIER switch, set FUNCTION switch to settings listed. Test instrument will indicate within specified limits.

b. Adjustments. No adjustments can be made.

Table 6. Self Check

TIME BASE-MULTIPLIER Switch setting	FUNCTION Switch setting	Indication
10 $\mu$ S	FREQUENCY A	0000.0 to 0000.2 MHz.
10 $\mu$ S	PERIOD A	100.00 to 000.01 $\mu$ s
10 $\mu$ S	PERIOD AVG A	00.00 to 00.01 $\mu$ s
1 $\mu$ S	PERIOD AVG A	00.00 to 00.01 $\mu$ s
1 $\mu$ S	PERIOD A	0000.0 to 100.01 $\mu$ s
1 $\mu$ S	FREQUENCY A	000.00 to 00.01 MHz.
1 $\mu$ S	FREQUENCY A	00.000 to 00.101 MHz.
1 $\mu$ S	PERIOD A	0000.0 to 000.01 $\mu$ s
10 $\mu$ S	PERIOD A	000.00 to 001.01 $\mu$ s
10 $\mu$ S	FREQUENCY A	0000.0 to 0000.1 KHz.
1 $\mu$ S	FREQUENCY A	000.00 to 10.01 KHz.
1 $\mu$ S	PERIOD A	0000.0 to 0001.00 $\mu$ s
1 $\mu$ S	PERIOD AVG A	00.000 to 00.001 $\mu$ s
1 $\mu$ S	RATIO A/B	0.0000 to 1.0001 $\mu$ s
1 $\mu$ S	PERIOD AVG A	0.0000 to 0.0001 $\mu$ s
1 $\mu$ S	FREQUENCY A	00.000 to 00.001 KHz.
10S	FREQUENCY A	00.000 to 0.0001 KHz.
10S	PERIOD AVG A	0000.0 to 0000.1 $\mu$ s

#### 11. Input Amplifier. a. Performance Check.

(1) Position test instrument controls as listed in (a) through (f) below:

(a) DC VOLTS-AC VOLTS switches to DC VOLTS XI (channels A and B).

(b) COM-SEP-CHECK switch to SEP.

(c) Connect dc voltmeter (A2) to channel A input connector, using adapter (B1). Dc voltmeter indication will be between  $-0.1$  and  $+0.1$  volt dc. If not, perform b (1) below.

(d) Repeat technique of (c) above for channel B. If dc voltmeter does not indicate between  $-0.1$  and  $+0.1$  volt dc, perform b (2) below.

(e) Turn channel A and B LEVEL controls to  $\pm 1$ .

(f) Connect test oscillator (A5) to channel A input connector, using cable and termination (B2 and B4).

(g) Adjust test oscillator for 1 kHz and minimum output.

(h) Connect oscilloscope (A4) vertical input to center pin of channel A SLOPE switch and channel ground, using probe (B3).

(i) Slowly increase test oscillator amplitude until stable trigger pulses appear on oscilloscope. Amplitude of test oscillator will not exceed 0.7 volt rms. If amplitude exceeds 0.7 volt, perform b (3) and (4) below.

(j) Turn channel A LEVEL control to  $-1$  and repeat technique of (g) above. If amplitude exceeds 0.7 volt rms, perform b (3) and (5) below.

(k) Connect oscilloscope probe to center terminal of channel B SLOPE switch, and test oscillator to channel B input connector.

(l) Repeat (k) above for channel B. If amplitude exceeds 0.7 volt, perform b (3) and (6) below.

(m) Turn B level control to  $-1$  and repeat technique of (k) above for channel B. If amplitude exceeds 0.7 volt, perform b (3) and (7) below.

b. Adjustments.

(1) Adjust R3 (fig. 1) for dc voltmeter indication of zero,  $\pm 0.01$  volt. (II)

(2) Adjust R4 (fig. 1) for dc voltmeter indication of zero,  $\pm 0.01$  volt. (II)

(3) Adjust test oscillator amplitude to 0.7 volt rms.

(4) Turn A2R12 (fig. 1) fully counterclockwise and then clockwise until stable trigger pulses appear on oscilloscope. (II)

(5) Turn A2R10 (fig. 1) fully clockwise and then counterclockwise until stable trigger pulses appear on oscilloscope. (II)

(6) Turn A2R12 (fig. 1) fully counterclockwise and then clockwise until stable trigger pulses appear on oscilloscope.

(7) Turn AST10 (fig. 1) fully clockwise and then counter-clockwise until stable trigger points appear on oscilloscope.

12. Sensitivity. a. Performance Check.

(1) Connect test oscillator (A8) to channel A connector, using cable and termination (B3 and B4).

(2) Turn FUNCTION SWITCH to FREQUENCY A, and turn TIME BASE MULTIPLIER switch to 1s - 10<sup>4</sup>.

(3) Adjust test oscillator frequency to 1 kHz and output level to 0.1 volt.

(4) Adjust LEVEL A control to display stable count.

(5) Adjust test oscillator frequency from 10 Hz to 100 kHz, while maintaining output level of 0.1 volt. Test instrument will display stable count over entire frequency range. For 100 kHz turn TIME BASE MULTIPLIER switch to .1s - 10<sup>4</sup>.

NOTE

If test instrument fails to count, or counts erratically, adjust LEVEL A control to obtain stable count.

(6) Turn channel A DC VOLTS-AC VOLTS switch to AC VOLTS X1.

(7) Repeat technique of (3) through (5) above.

(8) Position test instrument controls as listed in (a) through (c) below:

(a) Channel A DC VOLTS-AC VOLTS switch to DC VOLTS X1.

(b) FUNCTION switch to RATIO A/B.

(c) TIME BASE MULTIPLIER to 1-10 sec.

(9) Move connection from channel A to channel B connector.

(10) Repeat (3) above and adjust B LEVEL control until gate indicator flickers.

(11) Repeat technique of (5) above. Test instrument gate indicator will flicker over entire frequency range.

NOTE

Readjust B LEVEL control if necessary.

(12) Turn TIME BASE MULTIPLIER switch to 10-.1 sec.

(13) Adjust test oscillator frequency from 10 Hz to 100 kHz while maintaining output level at 0.1 volt. Test instrument gate indicator will flicker over entire frequency range.

(14) Turn LEVEL B DC VOLTS-AC VOLTS switch to AC VOLTS X1.

b. Adjustments. No adjustments can be made.

13. Trigger Level. a. Performance Check.

(1) Turn FUNCTION switch to FREQUENCY

A.

(2) Connect test oscillator (A8) to channel A connector, using cable and termination (B3 and B4).

(3) Connect oscilloscope (A4) to MARKER A connector (rear panel of test instrument) using cable (B2).

(4) Turn channel A DC VOLTS-AC VOLTS switch to AC VOLTS X1 and LEVEL A control to +1.

(5) Adjust test oscillator frequency to 1 kHz and output for 1 volt rms.

(6) While observing oscilloscope, reduce amplitude of input to test instrument until marker disappears. Marker will disappear when input signal level is between 0.5 and 0.9 volt rms.

(7) Turn LEVEL A control to -1.

(8) Repeat technique of (3) and (6) above.

(9) Repeat (2) through (8) above for test instrument channel B with FUNCTION switch set to RATIO A/B.

b. Adjustments. No adjustments can be made.

14. Power Supply

NOTE

Do not perform power supply checks if all other parameters are within tolerance.

a. Performance Check.

(1) Connect dc voltmeter (A2) between pin 16 of A24 (fig. 1) and ground. Dc voltmeter indication will be between -34 and -36 volts. If not, perform b below. Record dc voltmeter indication.

(2) Vary autotransformer (A1) output from 105 to 125 volts and back to 115 volts. Dc voltmeter indication will remain within  $\pm 0.2$  volt of value recorded in (1) above.

b. Adjustments. Adjust A24R10 (fig. 1) for indication of -36 volts on dc voltmeter. (2).

15. Final Procedure. a. Disassemble and disconnect all equipment and replace test instrument within protective cover.

b. In accordance with TM 38-700, annotate and affix DA Label 80 (U.S. Army Calibration System). When the test instrument cannot be adjusted within tolerance, annotate and affix DA Form 3017 (Unserviceable Test Instrument or Limited Use).

## SECTION V

### PRELIMINARY OPERATIONS (C LEVEL)

16. Preliminary Instructions. a. The instructions outlined in this section are preparatory to the calibration process. Personnel should become familiar with the entire bulletin before beginning the calibration.

b. Items of equipment used in this procedure are referenced within the test by common name and item identification number as listed in tables 4 and 5. For the identification of equipment referenced by item numbers prefixed with A see table 4, and for prefix B, see table 5.

#### WARNING

HIGH VOLTAGE is used during the performance of this calibration. DEATH ON CONTACT may result if personnel fail to observe safety precautions.

17. Equipment Setup. a. Set test instrument STORAGE switch (rear panel) to OFF and INT INT switch to INT (rear panel).

#### NOTE

Verify that slide switch on rear panel is set to 115 volts ac.

b. Remove protective cover. Jaws test instrument only if required to perform adjustments.

c. Connect test instrument to autotransformer (A).

d. Connect autotransformer to 115-volt ac source and adjust for 115 volts ac.

e. Turn test instrument SAMPLE RATE switch to midrange, and allow sufficient time for equipment to warm up and stabilize.

## SECTION VI

### CALIBRATION PROCESS (C LEVEL)

#### NOTE

Unless otherwise specified, verify the results of each test and take corrective action whenever the test requirement is not met before continuing with the calibration.

18. Time Base Stability. a. Performance Check.

(1) Connect test instrument FRQ STD connector (rear panel) to electronic counter (AC) input using cable assembly (B).

(2) Position test instrument controls as follows:

(a) STORAGE switch (rear panel) to OFF.

(b) FRQ STD switch (rear panel) to INT.

(3) Set electronic counter TIME BASE switch to 10.

(4) Adjust C5 (fig. 1) for electronic counter indication of 0100.0000 kHz.

(5) Allow a minimum of 24 hours warmup. Do not remove electrical power from test instrument or

electronic counter. electronic counter indicates between 0000.9999 and 0100.0000 kHz.

b. Adjustments. No adjustments can be made.

19. Input Sensitivity. a. Performance Check.

(1) Position test instrument controls as follows:

(a) -LEVEL A+switch to 0.

(b) -LEVEL B+switch to 0.

(c) A channel DC VOLTS/AC switch to AC VOLTS X1.

(d) B channel DC VOLTS/AC switch to AC VOLTS X1.


(e) COM-SEP-CHECK switch to SEP.

(f) A channel -SLOPE +switch to + (positive).

(g) B channel -SLOPE +switch to + (positive).

(h) FUNCTION switch to FREQUENCY A.

(2) Connect equipment as shown in figure 2.

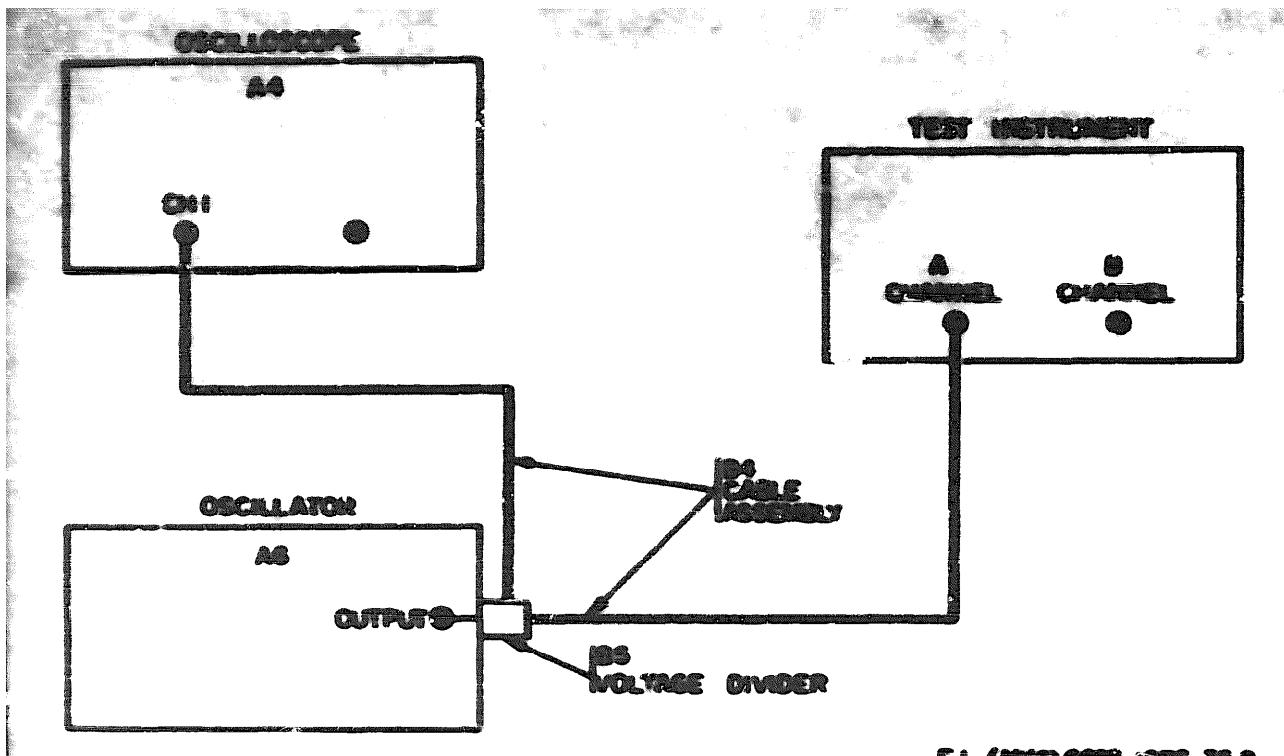

EL/MOD 0005-270-35-2

Figure 2. Input Sensitivity Setup IC Level.

(b) Set oscillator (AS) frequency controls to settings listed in table 7. At each setting perform the following:

(a) Adjust oscillator OUTPUT LEVEL control for oscilloscope display of 0.25 volt peak to peak.

(b) Set FUNCTION switch to setting listed.

(c) Set TIME BASE-MULTIPLIER switch to setting listed.

(d) Set -LEVEL A + control for stable test instrument indication within specified limits.

#### NOTE

The test instrument indications listed in table 7 reflect oscillator (A-S) frequency conversion and test instrument ± error factor.

(e) Set A channel DC VOLTS/AC VOLTS switch to AC VOLTS X10.

(f) Adjust oscillator level control for oscilloscope display 2.0 volts peak to peak.

(g) Adjust - LEVEL A + control for stable test instrument indication between 6279.9 and 6308.1 kHz.

(h) Position test instrument controls as follows:

(i) A channel DC VOLTS/AC VOLTS switch to DC VOLTS XI.

(j) TIME BASE MULTIPLIER switch to 1 S.

(k) Adjust oscillator controls for 2 Hz and oscilloscope display 0.25 volt peak to peak.

Table 7. Input Sensitivity

Oscillator Frequency	FUNCTION Sync Sync	Test Indication	
		TIME BASE-MULTIPLIER Setting	Indication
10 Hz	FREQUENCY A	1 S	62629 to 62.631 kHz
50 Hz	FREQUENCY A	1mS	62627.5 to 62.628.5 kHz
1 kHz	FREQUENCY A	1 S	62.675 to 62.676.5 kHz
5 kHz	FREQUENCY A	10 mS	6227.9 to 6228.1 kHz
10 kHz	FREQUENCY A	10 mS	6222.9 to 6223.1 kHz

(11) Adjust - LEVEL A + control for stable test instrument indication between 00.001 and 00.005 kHz.

(12) Set A channel DC VOLTS/AC VOLTS switch to DC VOLTS X10.

(13) Adjust oscillator level control for oscilloscope display 2.0 v peak to peak.

(14) Adjust - LEVEL A + control for stable test instrument indication between 00.001 and 00.005 kHz.

(15) Relocate cable assembly (B4) from A channel input connector to B channel input connector.

(16) Connect cable assembly (B3) between FREQ STD connector (rear panel) and A channel input connector.

(17) Position test instrument controls as follows:

(a) A channel DC VOLTS/AC VOLTS switch to AC VOLTS X1.

(b) TIME BASE-MULTIPLIER switch to 10 us.

(c) FUNCTION switch to RATIO A/B.

(18) Adjust oscillator controls for 10 Hz and oscilloscope display 0.20 peak to peak.

(19) Adjust - LEVEL B + control for stable test instrument indication between 10001. and 00700.

(20) Adjust oscillator controls for 100 kHz and oscilloscope display 0.20 volt peak to peak.

(21) Set TIME BASE-MULTIPLIER switch to 1 s.

(22) Adjust - LEVEL B + control for stable test instrument indication between 0.3700 and 1.0001.

#### A. Adjustments.

(1) Disconnect equipment.

(2) Connect cable assembly (B4) between differential voltmeter (A3) and test instrument A channel input connector.

(3) Position test instrument controls as follows:

(a) - LEVEL A + control to 0.

(b) - LEVEL B + control to 0.

(c) A channel DC VOLTS/AC VOLTS switch to DC VOLTS X1.

(4) Adjust B3 (fig. 1) for differential voltmeter indication between -0.01 and +0.01 volt. (10)

(5) Relocate cable assembly (B4) from A channel input connector to B channel input connector.

(6) Adjust B4 (fig. 1) for differential voltmeter indication between -0.01 and +0.01 volt. (10)  
11) Report performance check.

#### 20. Trigger Level & Performance Check.

(1) Connect equipment as shown in figure 2.

(2) Connect cable assembly (B3) between oscilloscope CH2 input connector and test instrument MARKER A connector (rear panel).

(3) Set FUNCTION switch to FREQUENCY

A.

(4) Adjust oscillator (A-4) controls for 1 kHz and oscilloscope CH1 display of 2.0 v peak to peak.

(5) Turn - LEVEL A + control clockwise (positive) to 1.

(6) Oscilloscope CH2 displays negative going marker pulse.

(7) Adjust oscillator OUTPUT LEVEL control to reduce amplitude of 1 kHz test signal until oscilloscope CH2 pulse display disappears.

(8) Oscilloscope CH1 displays 1 kHz test signal amplitude between 1.5 and 2.5 volts peak to peak.

(9) Turn - LEVEL A + control counter-clockwise (negative) to 1.

(10) Repeat steps (7) and (8).

(11) Relocate cable assembly (B4) from A channel input connector to B channel input connector.

(12) Relocate cable assembly (B3) from MARKER A connector to MARKER B connector (rear panel).

(13) Turn - LEVEL B + control clockwise (positive) to 1.

(14) Repeat steps (7) and (8).

(15) Turn - LEVEL B + control counter-clockwise (negative) to 1.

(16) Repeat steps (7) and (8).

(17) Disconnect cable assembly (B-4) connected between B channel input connector and voltage divider (B5).

(18) Connect B channel input connector to meter calibrator (A-3) output terminals with cable assembly (B4).

(19) Position test instrument controls as follows:

(a) A channel DC VOLTS/AC VOLTS switch to AC VOLTS X100.

(b) B channel DC VOLTS/AC VOLTS switch to AC VOLTS X100.

(c) Adjust meter calibrator controls for 400 Hz and 100 volts.

(d) Adjust meter calibrator controls until oscilloscope CH2 pulse display disappears.

(22) Meter calibrator indicates between 50 and 50 volt.

(23) Adjust meter calibrator for zero output.

(24) Relocate cable assembly (B4) from B channel input connector to A channel input connector.

(25) Relocate cable assembly (B3) from MARKER B connector (rear panel) to MARKER A connector (rear panel).


(26) Repeat steps (20) through (23).

(27) Disconnect equipment.

#### B. Adjustments.

(1) Connect equipment as shown in figure 2.

- (9) Connect cable (B3) between oscilloscope CH2 input connector and adapter (B1).  
 (10) Connect adapter (B1) red lead between A channel - SLOPE + switch center terminal (B2) and red adapter black lead to test instrument chassis.  
 (11) Adjust oscillator controls for 1 hertz and oscilloscope CH1 display of 2 volts peak to peak.  
 (12) Set A channel and B channel controls as follows:  
     (a) Turn - LEVEL A + control clockwise to + (positive) 1.  
     (b) Set DC VOLTS/AC VOLTS switch to AC VOLTS X1.  
 (13) Adjust A6R12 (fig. 1) fully counter-clockwise then clockwise for oscilloscope CH2 display of trigger pulses. (B)  
 (14) Turn - LEVEL A + control counter-clockwise (negative) to 1.  
 (15) Adjust A6R10 (fig. 1) fully clockwise then counter-clockwise for oscilloscope CH2 display of trigger pulses. (B)  
 (16) Disconnect adapter (B1) and cable assembly (B3).  
 (17) Connect oscilloscope CH2 input to pin A of A6 connector (fig. 1) and ground with oscilloscope X10 probe.  
 (18) Ensure that oscillator controls are set for 1 hertz and oscilloscope CH1 displays 2 volts peak to peak.  
 (19) Adjust A6R12 adjustment (fig. 1) fully counter-clockwise then clockwise for oscilloscope CH2 display of symmetrical square wave and note setting. (B)  
 (20) Adjust A6R12 fully clockwise then counter-clockwise for oscilloscope CH2 display of symmetrical square wave and note setting. (B)  
 (21) Readjust A6R12 halfway between settings noted in steps (18) and (19). (B)  
 (22) Relocate cable assembly (B4) from B channel input connector to A channel input connector.  
 (23) Relocate adapter (B1) from A channel - SLOPE + switch terminal to B channel - SLOPE + switch center terminal.  
 (24) Turn - LEVEL B + counter clockwise  
 (25) Adjust A6R12 (fig. 1) fully counter-clockwise then clockwise for oscilloscope CH2 display of trigger pulses. (B)  
 (26) Turn - LEVEL B + control counter-clockwise (negative) to 1.  
 (27) Adjust A6R10 (fig. 1) fully clockwise then counter-clockwise for oscilloscope CH2 display of trigger pulses. (B)  
 (28) Disconnect adapter (B1) and cable assembly (B3).  
 (29) Repeat steps (17) through (24) using A6R12 (fig. 1). (B)  
 (30) Remove performance chart
21. External Standard Input Sensitivity.  
 a. Performance Check.
- (1) Connect equipment as shown in figure 3.

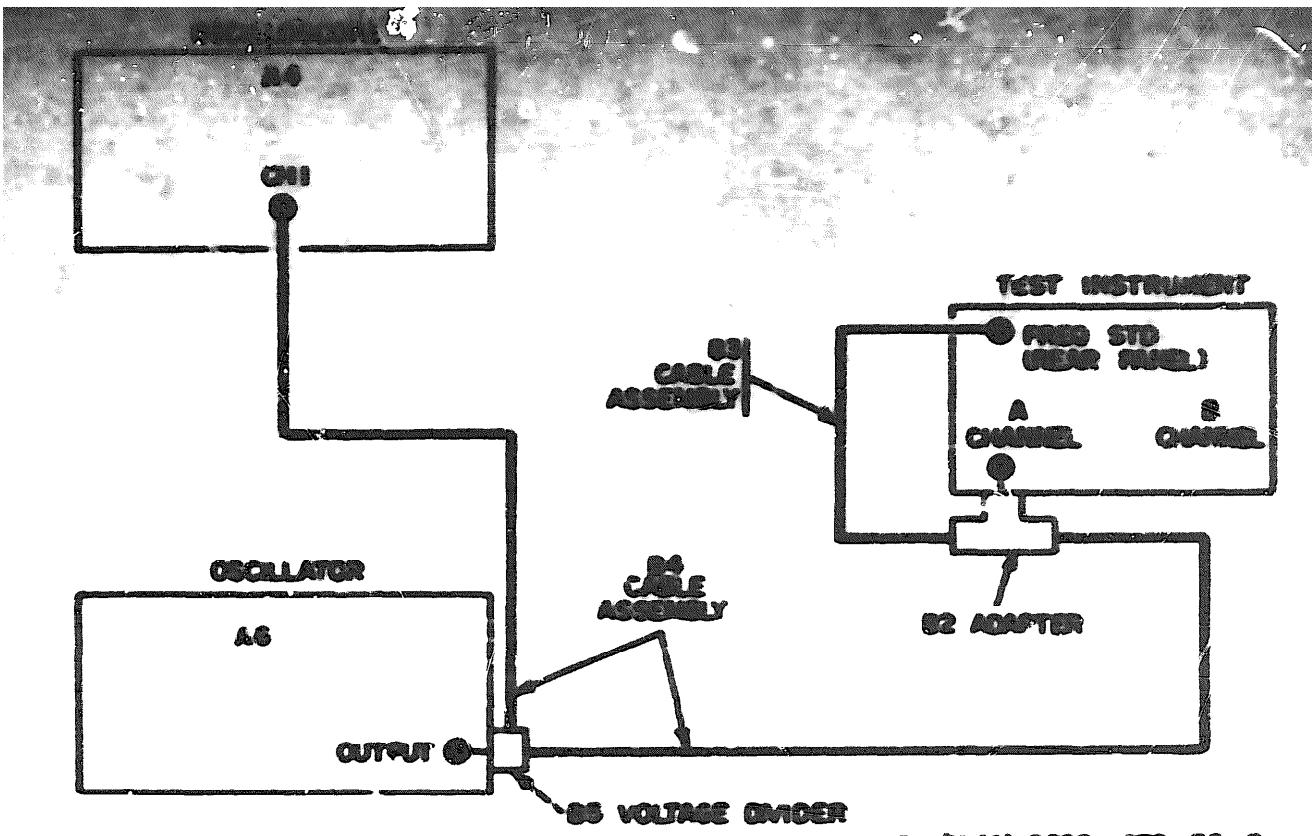

EL/104(C) 0029-1270-39-3

Figure 3. External Standard Input Blockivity. Equipment setup (C Level).

- (1) Position test instrument controls as follows:
  - (a) FUNCTION switch to FREQUENCY A.
  - (b) A channel DC VOLTS/AC VOLTS switch to AC VOLTS X1.
  - (c) TIME BASE-MULTIPLIER switch to .1 s.
  - (d) PRFQ STD switch (rear panel) to EXPT.
  - (e) Adjust oscillator controls for 100 Hz and oscilloscope display of 2.0 volts peak to peak.
  - (f) Test instrument indicates between 000.00 and 000.01.
  - (g) Slowly adjust oscillator frequency control between 100 and 200 kHz and maintain oscilloscope display amplitude of 2.0 volts peak to peak.
  - (h) Test instrument indicates between 000.00 and 000.01 at any oscillator frequency between 100 and 200 kHz.
  - (i) Disconnect equipment.
  - (j) Adjustments. No adjustments can be made.
22. Time Base Output. - *oscilloscope Check.*
  - (1) Connect oscillator (A-4) CH1 input connector to test instrument TIME BASE connector (rear panel) with cable assembly (25).
  - (2) Position test instrument controls as follows:
    - (a) Function switch to MANUAL START A.

- (k) COM-SKIP-CHECK switch to CHECK.
- (l) PRFQ STD switch (rear panel) to INT.
- (m) Set TIME BASE-MULTIPLIER switch to each setting between 10 ns and 10 s. At each setting oscilloscope displays waveform with amplitude greater than 3 volts peak to peak.
- (n) Disconnect equipment.
- (o) Adjustments. No adjustments can be made.

#### 23. Self-Check. a. Performance Check.

- (1) Position test instrument controls as follows:
  - (a) - LEVEL A control to 0.
  - (b) - LEVEL B control to 0.
  - (c) Channel A - SLOPE switch to (positive).
  - (d) Channel B - SLOPE switch to (positive).
  - (e) SAMPLE RATE control counter-clockwise (maximum rate).
- (2) Set TIME BASE-MULTIPLIER switch to settings listed in table 8. At each setting of TIME BASE-MULTIPLIER switch, set FUNCTION switch to settings listed. Test instrument indicates within specified limits.
- (f) Adjustments. No adjustments can be made.

Table 8.

TEST DESCRIPTION NUMBER	FUNCTION NAME	UNITS
10 .48	FREQUENCY A	000.0 to 0000.2 MC
10 .49	PERIOD A	00.00 to 000.01 ms
10 .50	PERIOD AVG A	000.00 to 000.01 ms
10 .51	PERIOD AVG A	00.00 to 00.01 ms
10 .52	PERIOD A	000.0 to 0000.1 ms
10 .53	FREQUENCY A	000.00 to 000.11 MC
10 .54	FREQUENCY A	00.000 to 00.001 MC
10 .55	PERIOD A	0000.0 to 0000.1 ms
10 .56	FREQUENCY A	000.0 to 0000.01 MC
10 .57	PERIOD A	000.00 to 000.01 ms
10 .58	PERIOD A	000.00 to 000.01 ms
10 .59	FREQUENCY A	000.0 to 0000.1 MC
10 .60	FREQUENCY A	000.00 to 000.01 MC
10 .61	PERIOD A	000.00 to 000.01 ms
10 .62	PERIOD AVG A	00.00 to 000.01 ms
10 .63	RATIO A/B	0.0000 to 1.0000 ± S
10 .64	PERIOD AVG A	0.0000 to 0.0001 ± S
10 .65	FREQUENCY A	0.0000 to 0.0001 ± S
10 .66	FREQUENCY A	0.0000 to 0.0001 ± S
10 .67	PERIOD AVG A	0.0000 to 0.0001 ± S

24. Final Procedure. a. Detangle and disconnect all equipment and replace test instrument within protective cover.

b. In accordance with TM 38-100, annotate and

affix DA Label 80 (U.S. Army Calibration System). When the test instrument cannot be adjusted within tolerance, annotate and affix DA Form 2417 (U.S. Serviceable or Limited Use).

**Official:**  
**VIRGIL L. BOWERS**  
Major General, United States Army,  
The Adjutant General.

**CARLTON W. ALABAMIS**  
General, United States Army,  
Chief of Staff.


**Distribution:**  
To be distributed in accordance with DA Form 12-34, copy my block no. 75:  
Requirements for Calibration Procedures Publications.

**END**

**7-18-83**


**DATE**



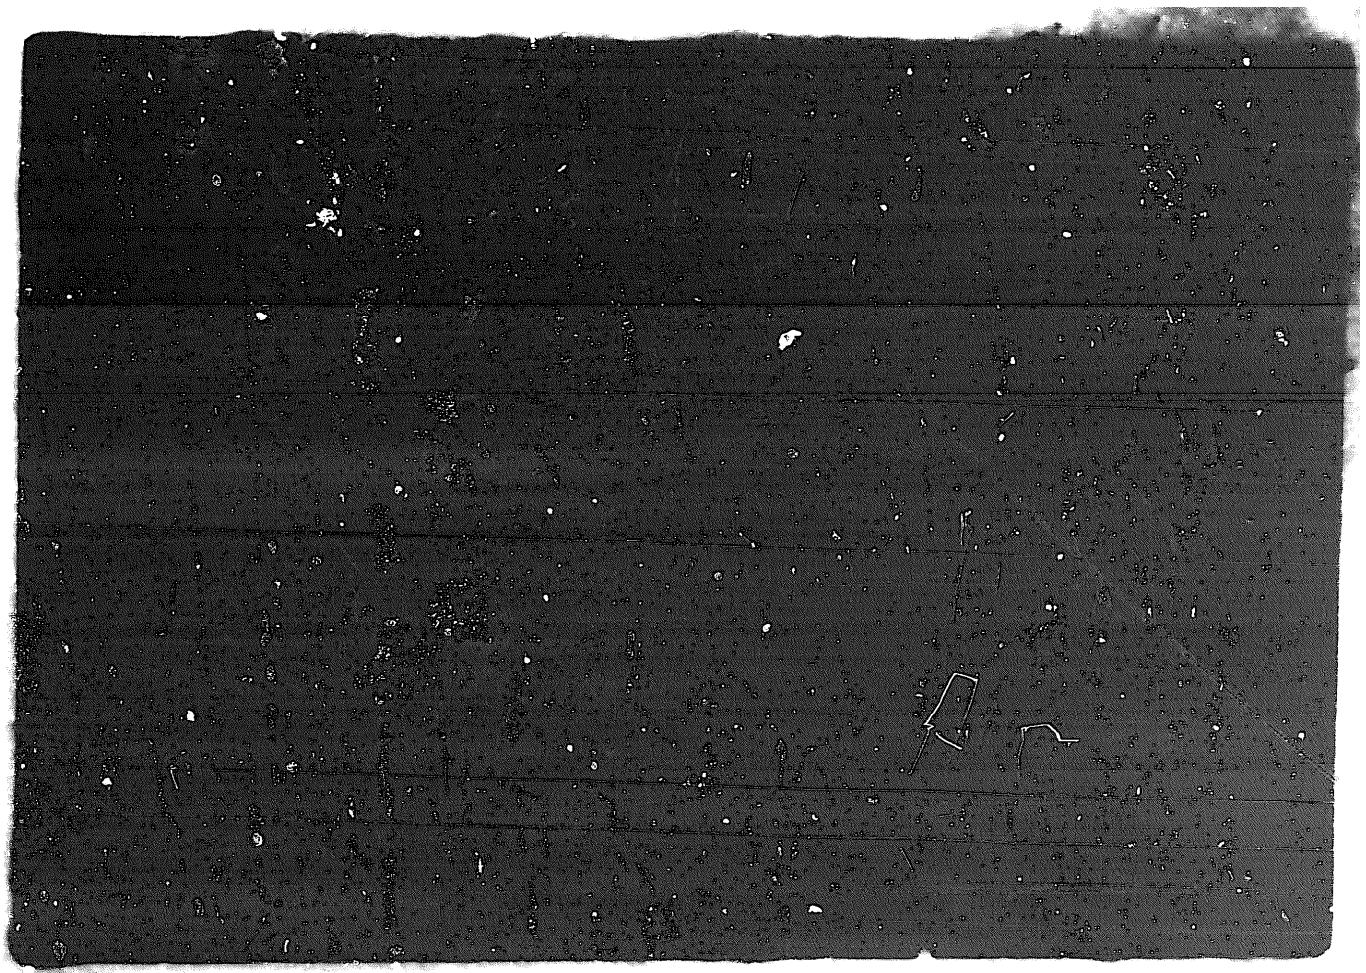

**www.orientaltravelways.com**

**NOTES**

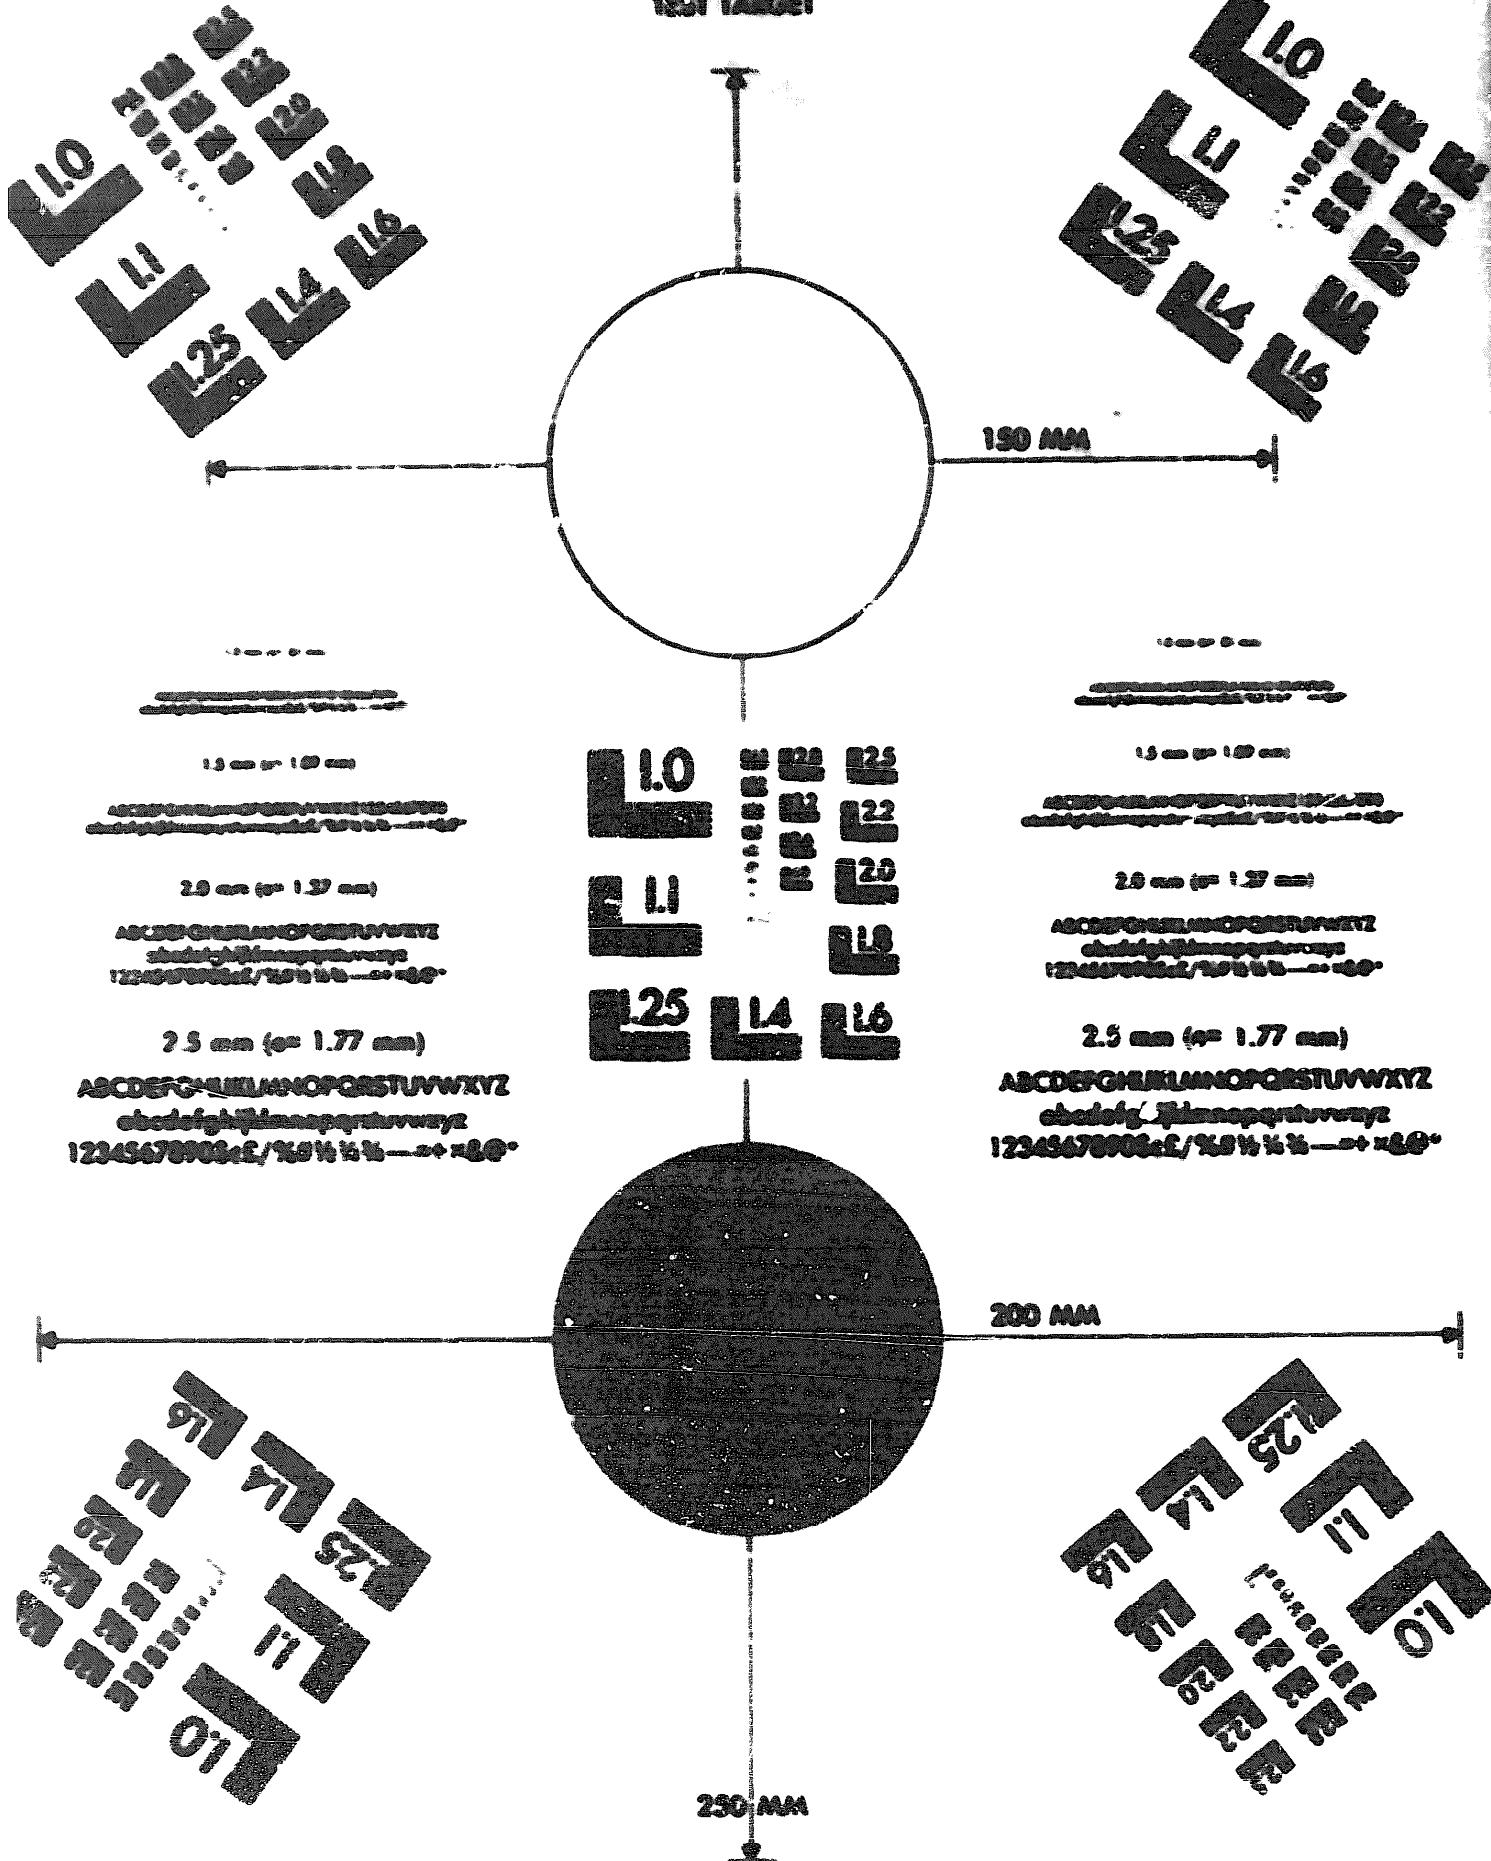

**TB 11-6625-2672-35**

C1

**DEPARTMENT OF THE ARMY TECHNICAL BULLETIN**

**CALIBRATION PROCEDURE FOR  
COUNTER ELECTRONIC DIGITAL READOUT,  
CP-1033/U  
(HEWLETT-PACKARD MODEL 5223L)  
(NSN 6625-00-407-0762) AND  
HEWLETT-PACKARD MODEL C10-5223L  
(NSN 6625-00-946-6061)**

Headquarters, Department of the Army, Washington, DC  
3 January 1978

TB 11-6625-2672-35, 12 July 1974, is changed as follows:

The title of the bulletin is changed as shown above.

Page 1, paragraph 1, line 2, "Hewlett-Packard Model 5223L" is changed to read, "Digital Readout, CP-1033 U (Hewlett-Packard, Model 5223L)"

Line 6, "Hewlett-Packard Model 5223L" is changed to read, "Digital Readout, CP-1033 U (Hewlett-Packard, Model 5223L)"

Paragraph 3, line 2, "AXEEL-MA-PS" is changed to read, "DR-EI-MA-Q."

Paragraph 5, line 6, "431-421-7877" is changed

to read, "6695-00-621-7877."

Page 5, paragraph 6, line 3, "431-421-7877" is changed to read, "6695-00-621-7877."

Page 5, paragraph 9(1) (e), "(positive)" is changed to read, "(positive)."

Page 6, paragraph 9(1), line 1, "3 parts in 10<sup>6</sup>" is changed to read, "2 parts in 10<sup>6</sup>".

Paragraph 11(1), line 2, "±0.01 volt" is deleted.

Paragraph 11(2), line 2, "±0.01 volt" is deleted.

By Order of the Secretary of the Army:

Official:

**BERNARD W. ROGERS**  
*General, United States Army*  
*Chief of Staff*

**J. C. PENNINGTON**

*Brigadier General, United States Army*  
*The Adjutant General*

Distribution:

To be distributed in accordance with DA Form 12-34A, requirements for Calibration Procedures Publications.

DEPARTMENT OF THE ARMY  
US ARMY AG PUBLICATIONS CENTER  
1000 FORT MONMOUTH ROAD  
RT. 202A, NEW BRUNSWICK, NJ 08811-0000  
\_\_\_\_\_  
OFFICIAL BUSINESS  
FEE IS \$1.00 FOR PRIVATE USE \$2.00

POSTAGE AND FEES PAID  
DEPARTMENT OF THE ARMY  
GPO 214



**END**

**7-18-83**

**DATE**



