
Simulink® PLC Coder™

User's Guide

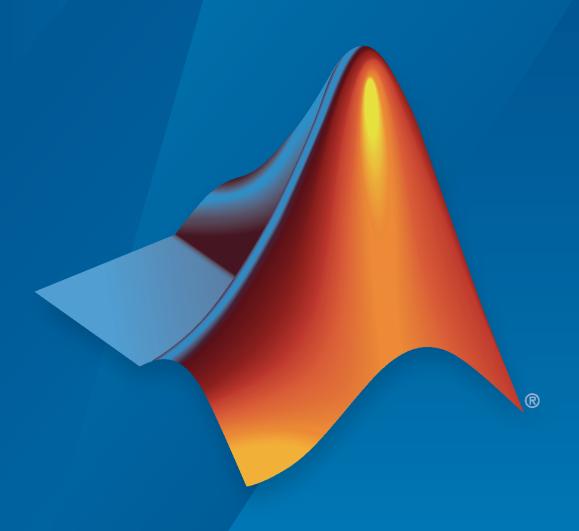

MATLAB&SIMULINK®



How to Contact MathWorks



Latest news: www.mathworks.com

Sales and services: www.mathworks.com/sales_and_services

User community: www.mathworks.com/matlabcentral

Technical support: www.mathworks.com/support/contact_us

70

Phone: 508-647-7000



The MathWorks, Inc. 1 Apple Hill Drive Natick, MA 01760-2098

Simulink® PLC Coder™ User's Guide

© COPYRIGHT 2010-2020 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

 $MathWorks\ products\ are\ protected\ by\ one\ or\ more\ U.S.\ patents.\ Please\ see\ www.mathworks.com/patents\ for\ more\ information.$

Revision History

March 2010	Online only	New for Version 1.0 (Release 2010a)
September 2010	Online only	Revised for Version 1.1 (Release 2010b)
April 2011	Online only	Revised for Version 1.2 (Release 2011a)
September 2011	Online only	Revised for Version 1.2.1 (Release 2011b)
March 2012	Online only	Revised for Version 1.3 (Release 2012a)
September 2012	Online only	Revised for Version 1.4 (Release 2012b)
March 2013	Online only	Revised for Version 1.5 (Release 2013a)
September 2013	Online only	Revised for Version 1.6 (Release 2013b)
March 2014	Online only	Revised for Version 1.7 (Release 2014a)
October 2014	Online only	Revised for Version 1.8 (Release 2014b)
March 2015	Online only	Revised for Version 1.9 (Release 2015a)
September 2015	Online only	Revised for Version 2.0 (Release 2015b)
March 2016	Online only	Revised for Version 2.1 (Release 2016a)
September 2016	Online only	Revised for Version 2.2 (Release 2016b)
March 2017	Online only	Revised for Version 2.3 (Release 2017a)
September 2017	Online only	Revised for Version 2.4 (Release 2017b)
March 2018	Online only	Revised for Version 2.5 (Release 2018a)
September 2018	Online only	Revised for Version 2.6 (Release 2018b)
March 2019	Online only	Revised for Version 3.0 (Release 2019a)
September 2019	Online only	Revised for Version 3.1 (Release 2019b)
March 2020	Online only	Revised for Version 3.2 (Release 2020a)
September 2020	Online only	Revised for Version 3.3 (Release R2020b)

Contents

	<u>-</u>	
Pre ₃	pare Model for Structured Text Generation	
	Tasking Mode	
	Configuring Simulink Models for Structured Text Code Generation	
	Check System Compatibility for Structured Text Code Generation	
Gen	erate and Examine Structured Text Code	
	Generate Structured Text from the Model Window	
	Generate Structured Text with the MATLAB Interface	
	View Generated Code	
Pro	pagate Block Descriptions to Code Comments	
File	s Generated by Simulink PLC Coder	
Spe	cify Custom Names for Generated Files	
Imp	ort Structured Text Code Automatically	
	PLC IDEs That Qualify for Importing Code Automatically	
	Generate and Automatically Import Structured Text Code	
	Troubleshoot Automatic Import Issues	
Usi	ng Simulink Test with Simulink PLC Coder	
	Limitations	
Sim	ulation and Code Generation of Motion Instructions	
	Workflow for Using Motion Instructions in Model	
	Structured Text Code Generation	
	Adding Support for Other Motion Instructions	
	Mapping Simulink Semantics to Structured	7
		_

Generated Code Structure for Triggered Subsystems	2-
Generated Code Structure for Stateflow Charts	2-
Stateflow Chart with Event Based Transitions	2-
Stateflow Chart with Absolute Time Temporal Logic	2-
Generated Code Structure for MATLAB Function Block	2-1
Generated Code Structure for Multirate Models	2-1
Generated Code Structure for Subsystem Mask Parameters	2-1
Global Tunable Parameter Initialization for PC WORX	2-2
Considerations for Nonintrinsic Math Functions	2-2
Generating Ladder Diag	ırar
Generating Lauder Diag	jiai
Simulink PLC Coder Ladder Diagram Code Generation	3.
Ladder Diagram Generation Workflow	3-
Prepare Chart for Simulink PLC Coder Ladder Diagram Code Generation	
Device DI O A callegation with Orange de	3.
Design PLC Application with Stateflow	3- 3-
Generate Simulink PLC Coder Ladder Diagram Code from Stateflow Char	
	3-
Stateflow Chart and Ladder Logic Diagram	3- 3-1
Generate Ladder Diagram Along with Test Bench	3-1 3-1
Import Ladder Diagram Code to CODESYS 3.5 IDE and Validate Diagram	
Inspert I add as Diagram VMI	3-1
Import Ladder Diagram XML Verify Ladder Diagram with Test Bench	3-1 3-1
Restrictions on Stateflow Chart for Ladder Diagram Generation	3- 1
Supported Features in Ladder Diagram	3-2
Supported Ladder Elements	3-2
Import L5X Ladder Files into Simulink	3-2
Description of the Ladder Diagram	3-2
Import Ladder Diagram	3-2
Modeling and Simulation of Ladder Diagrams in Simulink	3-2
Model an AOI Prescan Routine	3-3 3-3
Lauuer Model Siilidiadoil	3

Generating Ladder Diagram Code from Simulink	3-34
Generating C Code from Simulink Ladder	3-36
Verify Generated Ladder Diagram Code	3-38
Simulink PLC Coder Workflow vs. Rockwell Automation RSLogix IDE Workflow	3-42
Create User-Defined Instruction	3-44 3-44 3-45
Generating Test Bench C	ode
How Test Bench Verification Works	4-2
Integrate Generated Code with Custom Code	4-3
Import and Verify Structured Text Code	4-4 4-4
Software MULTIPROG 5.0 and Phoenix Contact PC WORX 6.0 IDEs Troubleshooting: Long Test Bench Code Generation Time	4-4 4-5
Verify Generated Code That Has Multiple Test Benches Troubleshooting: Test Data Exceeds Target Data Size	4-7 4-8 4-9
Code Generation Repo	orts
Information in Code Generation Reports	5-2
Create and Use Code Generation Reports	5-4 5-4 5-5
Keep the Report Current	5-5 5-6 5-7
Generate a Static Code Metrics Report	5-11 5-12
View Requirements Links from Generated Code	5-13
<u>. </u>	5-14 5-14 5-14

Environm	er
Block Parameters in Generated Code	6
Control Appearance of Block Parameters in Generated Code Configure Tunable Parameters with Simulink.Parameter Objects Make Parameters Tunable Using Configuration Parameters Dialog Box	6 6 6
Controlling Generated Code Partiti	on
Generate Global Variables from Signals in Model	7
Control Code Partitions for Subsystem Block Control Code Partitions Using Subsystem Block Parameters One Function Block for Atomic Subsystems One Function Block for Virtual Subsystems Multiple Function Blocks for Nonvirtual Subsystems	7. 7. 7. 7.
Control Code Partitions for MATLAB Functions in Stateflow Charts	7
Integrating Externally Defined Identif	ìeı
Integrate Externally Defined Identifiers	8
Integrate Custom Function Block in Generated Code	8
IDE-Specific Considerati	or
Integrate Generated Code with Siemens IDE Project	9

5-15

Rockwell Automation RSLogix Requirements Add-On Instruction and Function Blocks Double-Precision Data Types	. 9-4
Unsigned Integer Data Types	. 9-4
Enumerated Data Types	. 9-4
Rockwell Automation IDE selection	
Siemens IDE Requirements	
Target PLCs and Supported Data Types	
int8 Data Type and Unsigned Integer Types	. 9-6
Unsigned Fixed-Point Data Types	
Selectron CAP1131 IDE Requirements	
Double-Precision Floating-Point Data Types	
Supported Simulink and Stateflow E	Blocks
Supported Blocks	10-2 10-2
Supported Simulink Blocks	10-2
Supported Stateflow Blocks	10-9
Blocks with Restricted Support	10-9
Limita	ations
11	
Structured Text Code Generation Limitations	11-2
General Limitations	11-2 11-2
Negative Zero	11-2
Divide by Zero	11-3
Fixed-Point Data Type Multiword Operations	11-3
Ladder Logic Code Generation Limitations	
plcladderlib Limitations	11-4 11-4
Ladder Diagram Modeling and Simulation Limitations	11-4 11-4
Ladder Diagram Code Generation Limitations	11-4
Ladder Diagram Verification Limitations	11-4

Configuration Parameters for Simulink PLC Coder Models

12

PLC Coder: General	12-2
PLC Coder: General Tab Overview	12-2
Target IDE	12-3
Show Full Target List	12-5 12-6
Target IDE Path	12-0 12-7
Code Output Directory	12-7 12-7
Include Testbench Diagnostic Code	12-7
Generate Functions Instead of Function Block	12-8
Allow Functions with Zero Inputs	12-9
Suppress Auto-Generated Data Types	12-10
Emit Data type Worksheet Tags for PCWorx	12-10
Aggressively Inline Structured Text Function Calls	12-11
33	
PLC Coder: Comments	12-12
Comments Overview	12-12
Include Comments	12-12
Include Block Description	12-13
Simulink Block / Stateflow Object Comments	12-14
Show Eliminated Blocks	12-14
PLC Coder: Optimization	12-15
Optimization Overview	12-15
Default Parameter Behavior	12-16
Signal Storage Reuse	12-17
Remove Code from Floating-Point to Integer Conversions That Wraps Out-	10.15
Of-Range Values	12-17
Generate Reusable Code	12-18 12-19
Inline Named Constants	12-19
Loop Unrolling Threshold	12-20
Loop onforming fineshold	12-20
PLC Coder: Identifiers	12-22
Identifiers Overview	12-23
Use Subsystem Instance Name as Function Block Instance Name	12-23
Override Target Default Maximum Identifier Length	12-23
Maximum Identifier Length	12-24
Override Target Default enum Name Behavior	12-24
Generate enum Cast Function	12-25
Use the Same Reserved Names as Simulation Target	12-26
Reserved Names	12-26
Externally Defined Identifiers	12-27
Preserve Alias Type Names for Data Types	12-27
PLC Coder: Report	12-29
Report Overview	12-29
Generate Traceability Report	12-30
Generate Model Web View	12-30 12-31
Open Report Automatically	12-31
DIC Coder Interface	12-32
PLC Coder:Interface	12-32 12-32
11110011u00 O V O I V I O VV	-U-U-

	Generate Logging Code	12-33
	Remove Top-level Subsystem Ssmethod Type	12-33 12-34
	Absolute-Time Temporal Logic	12-34 12-35
1 7 [External I	Mode
13		
	External Mode Logging	13-2
	Generate Structured Text Code with Logging Instrumentation	13-3
	Use the Simulation Data Inspector to Visualize and Monitor the Logging	
	Data Set Up and Download Code to the Studio 5000 IDE	13-7 13-7
	Configure RSLinx OPC Server	13-8
	Use PLC External Mode Commands to Stream and Display Live Log Data	13-8
1 / [Ladder Diagram Instruc	tions
14	Instructions Supported in Ladder Diagram	14-2
4 P T	Ladder Diagram B	locks
15 [Ladder Diagram Blocks	15-2
16 [Fixed Point Code Gener	ation
	Block Parameters	16-2
	Model Parameters	16-3
	Limitations	16-4

	Generating PLC Code for Multirate Mo	oaeis
7		
	Multirate Model Requirements for PLC Code Generation	17-2 17-2
	Limitations	17-2
	Generating PLC Code for MATLAB Function I	Block
	Configuring the rand function for PLC Code generation	18-2
	Width block requirements for PLC Code generation	18-3
	Workspace Parameter Data Type Limitations	18-4
	Limitations	18-5
	Model Architecture and De	esign
	Fixed Point Simulink PLC Coder Structured Text Code Generation	19-2
	Block Parameters	19-2 19-3
	Limitations	19-4
	Generating Simulink PLC Coder Structured Text Code For Multirate Models	19-7
	Models	19-7 19-7
	MATLAB Function Block Simulink PLC Coder Structured Text Code	10.0
	Generation	19-9 19-9
	SimulinkWidth Block Requirements for PLC Code generation	19-9
	Workspace Parameter Data Type Limitations	19-9 19-9
	PLC Coder Code Deploy	ment
	Deploy Structured Text	20-2
	Learning Objectives	20-2 20-2
	Workflow	20-2
	Importing Generated Structured Text Code Manually	20-2

	Deploy Ladder Diagram Learning Objectives	20-5 20-5 20-5
	Workflow	20-5 20-5
21 [Simulink PLC Coder Structured Text Code Generatio Simulink Data Dictionary (S	
	Structured Text Code Generation Support for Simulink Data Dictionary	
	Limitations	21-2 21-2
	Generate Structured Text Code For Simulink Data Dictionary Defined	21.2
	Model Parameters Learning Objectives Requirements Workflow	21-3 21-3 21-3 21-3
22	Structured Text Code Congretion for From To Integer Conversion	Type
22 [Structured Text Code Generation for Enum To Integer Conversion	22-2
22	Structured Text Code Generation for Enum To Integer Conversion IDE Limitations	22-2 22-3
22 23	Structured Text Code Generation for Enum To Integer Conversion	22-2 22-3
	Structured Text Code Generation for Enum To Integer Conversion IDE Limitations	22-2 22-3
	Structured Text Code Generation for Enum To Integer Conversion IDE Limitations	22-2 22-3 Coder
	Structured Text Code Generation for Enum To Integer Conversion IDE Limitations	22-2 22-3 Coder
	Structured Text Code Generation for Enum To Integer Conversion IDE Limitations Distributed Code Generation with Simulink PLC Of the control of the code Generation Options Generated Code Structure for PLC_RemoveSSStep	22-2 22-3 20-3 23-2 23-3
	Structured Text Code Generation for Enum To Integer Conversion IDE Limitations Distributed Code Generation with Simulink PLC C Distributed Model Code Generation Options Generated Code Structure for PLC_RemoveSSStep Generated Code Structure for PLC_PreventExternalVarInitialization	22-2 22-3 20-3 23-2 23-3 23-5

$\textbf{Generate Structured Text Code for a Simple Simulink} \textbf{\$ Subsystem} \ \dots$	24-2
Generating Structured Text for a Simple Simulink® Subsystem without Internal State	24-7
Generating Structured Text for a Hierarchical Simulink® Subsystem with Virtual Subsystems	h 24-8
Generating Structured Text for a Hierarchical Simulink® Subsystem	24-10
Generating Structured Text for a Reusable Simulink® Subsystem	24-12
Generating Structured Text for a Simple Simulink® Subsystem Using Multirate	24-14
Simulate and Generate Structured Text Code for a Stateflow® Chart .	24-16
Generating Structured Text for a MATLAB® Block	24-19
Generating Structured Text for a Feedforward PID Controller	24-20
Mapping Tunable Parameters to Structured Text	24-22
Mapping Tunable Parameters Defined Using Simulink.Parameter Objects to Structured Text	5 24-24
Simulate and Generate Code for Speed Cruise Control System	24-28
Variable Step Speed Cruise Control System	24-30
Simulate and Generate Code for Airport Conveyor Belt Control System	24-32
Generating Structured Text for Simulink® Model with Fixed-Point Data Types	24-33
Generating Structured Text for Stateflow® Chart with Absolute Time Temporal Logic	24-35
Integrating User Defined Function Blocks, Data Types, and Global Variables into Generated Structured Text	24-37
Simulating and Generating Structured Text Code for Rockwell Motion Instructions	24-39
Tank Control Simulation and Code Generation by Using Ladder Logic	24-41
Liging Timore in Laddon Logic	24 44

Temperature Control Simulation and Code Generation Using Ladder Logic	24-47
Elevator Control Simulation and Code Generation Using Ladder Logic	24-51
Structured Text Code Generation for Simulink Data Dictionary	24-54
Structured Text Code Generation for Subsystem Reference Blocks	24-55
PLC_RemoveSSStep for Distributed Code Generation	24-57
Structured Text Code Generation for Enum To Integer Conversion	24-60
Structured Text Code Generation for Integer To Enum Conversion	24-61
PLC_PreventExternalVarInitialization for Distributed Code Generation	24-62
Simulation and Structured Text Generation For MPC Controller Block	24-64

Getting Started

- "Simulink PLC Coder Product Description" on page 1-2
- "Prepare Model for Structured Text Generation" on page 1-3
- "Generate and Examine Structured Text Code" on page 1-9
- "Propagate Block Descriptions to Code Comments" on page 1-13
- "Files Generated by Simulink PLC Coder" on page 1-14
- "Specify Custom Names for Generated Files" on page 1-16
- "Import Structured Text Code Automatically" on page 1-17
- "Using Simulink Test with Simulink PLC Coder" on page 1-20
- "Simulation and Code Generation of Motion Instructions" on page 1-22

Simulink PLC Coder Product Description

Generate IEC 61131-3 Structured Text and Ladder Diagrams for PLCs and PACs

Simulink PLC Coder generates hardware-independent IEC 61131-3 Structured Text and Ladder Diagrams from Simulink models, Stateflow® charts, and MATLAB® functions. The Structured Text and Ladder Diagrams are generated in PLCopen XML and other file formats supported by widely used integrated development environments (IDEs) including 3S-Smart Software Solutions CODESYS, Rockwell Automation® Studio 5000, Siemens® TIA Portal, and OMRON® Sysmac® Studio. As a result, you can compile and deploy your application to numerous programmable logic controller (PLC) and programmable automation controller (PAC) devices.

Simulink PLC Coder generates test benches that help you verify the Structured Text and Ladder Diagrams using PLC and PAC IDEs and simulation tools. It also provides code generation reports with static code metrics and bidirectional traceability between model and code. Support for industry standards is available through IEC Certification Kit (for IEC 61508 and IEC 61511).

Prepare Model for Structured Text Generation

In this section...

"Tasking Mode" on page 1-3

"Solvers" on page 1-3

"Configuring Simulink Models for Structured Text Code Generation" on page 1-3

"Check System Compatibility for Structured Text Code Generation" on page 1-6

Tasking Mode

This step is only required if your Simulink model contains multi-rate signals. If your Simulink model does not contain multi-rate signals, you may proceed to solver selection.

Simulink PLC Coder only generates code for single-tasking subsystems. For multi-rate subsystems, you must first explicitly set the tasking mode to single-tasking before selecting a solver. In the model configuration, on the Solver pane, clear the check box for **Treat each discrete rate as a separate task**.

Solvers


Choose a solver for your Simulink PLC Coder model.

Model	Solver Setting
Variable-step	Use a continuous solver. Configure a fixed sample time for the subsystem for which you generate code.
Fixed-step	Use a discrete fixed-step solver.

Configuring Simulink Models for Structured Text Code Generation

You must already have a model for which you want to generate and import code to a PLC IDE. Before you use this model, perform the following steps.


1 In the Command Window, open your model.

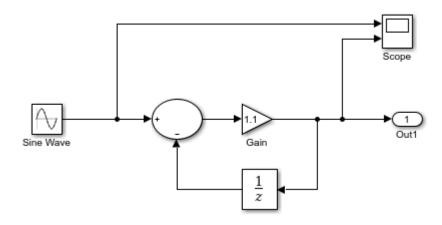


2 Configure the model to use the fixed-step discrete solver. Click the solver link in the lower-right corner. The **Solver information** pane opens. In the pane, click the **View solver settings** button to open the **Solver** pane of the model configuration parameters. Under the **Solver** selection, set **Type** to Fixed-step and **Solver** to discrete (no continuous states).

If your model uses a continuous solver, has a subsystem, configure a fixed sample time for the subsystem for which you generate code.


- 3 Save this model as plcdemo simple subsystem1.
- 4 Create a subsystem containing the components for which you want to generate Structured Text code.

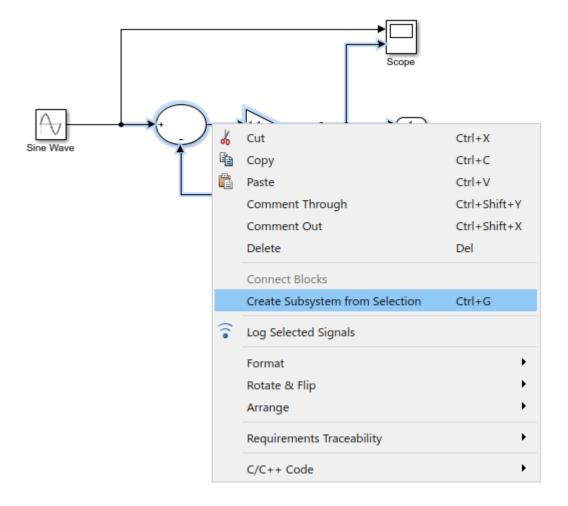

Optionally, rename In1 and Out1 to U and Y respectively. This operation results in a subsystem like the following figure:

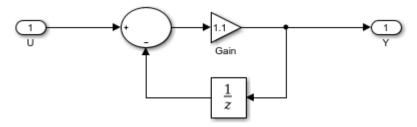

- **5** Save the model with the new subsystem.
- 6 In the top-level model, right-click the Subsystem block and select **Block Parameters** (Subsystem).
- 7 In the resulting block dialog box, select **Treat as atomic unit**.

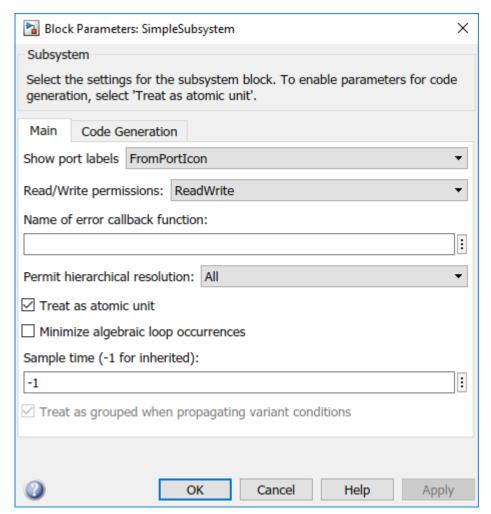

- 8 Click OK.
- **9** Simulate your model.
- 10 Save your model. In later procedures, you can use either this model, or the plcdemo_simple_subsystem model that comes with your software.

You are now ready to:


- Set up your subsystem to generate Structured Text code. See "Check System Compatibility for Structured Text Code Generation" on page 1-6.
- Generate Structured Text code for your IDE. See "Generate and Examine Structured Text Code" on page 1-9.

Check System Compatibility for Structured Text Code Generation


You must already have a model that you have configured to work with the Simulink PLC Coder software.

- 1 In your model, navigate to the subsystem for which you want to generate code.
- 2 Right-click that Subsystem block and select PLC Code > Check Subsystem Compatibility.


The coder checks whether your model satisfies the Simulink PLC Coder criteria. When the checking is complete, a **View diagnostics** hyperlink appears at the bottom of the model window. Click this hyperlink to open the Diagnostic Viewer window.

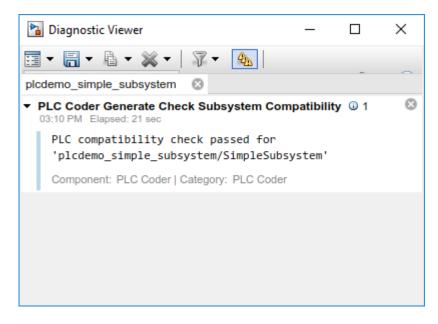

If the subsystem is not atomic, right-click the Subsystem block and select **PLC Code**, which prompts **Enable "Treat as atomic unit" to generate code**.

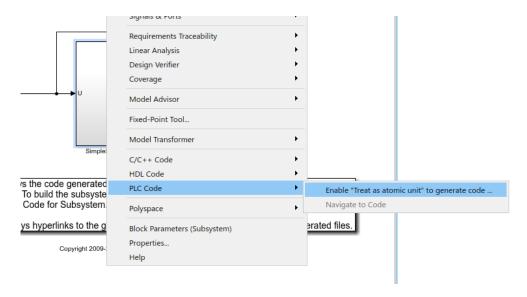

This command opens the block parameter dialog box. Select **Treat as atomic unit**.

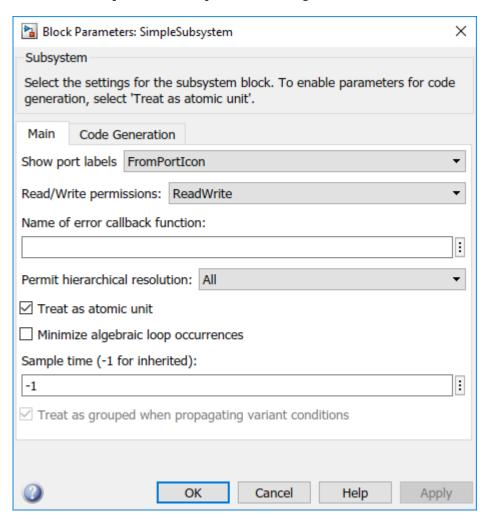

You are now ready to generate Structured Text code for your IDE. See "Generate and Examine Structured Text Code" on page 1-9.

Generate and Examine Structured Text Code


In this section... "Generate Structured Text from the Model Window" on page 1-9 "Generate Structured Text with the MATLAB Interface" on page 1-10 "View Generated Code" on page 1-11

Generate Structured Text from the Model Window

You must already have set up your environment and Simulink model to use the Simulink PLC Coder software to generate Structured Text code. If you have not yet done so, see "Prepare Model for Structured Text Generation" on page 1-3.

- 1 If you do not have the plcdemo simple subsystem model open, open it now.
- 2 Open the **PLC Coder** app. Click **PLC Code** tab.
- 3 Click **Settings**.

The Configuration Parameters dialog box is displayed.

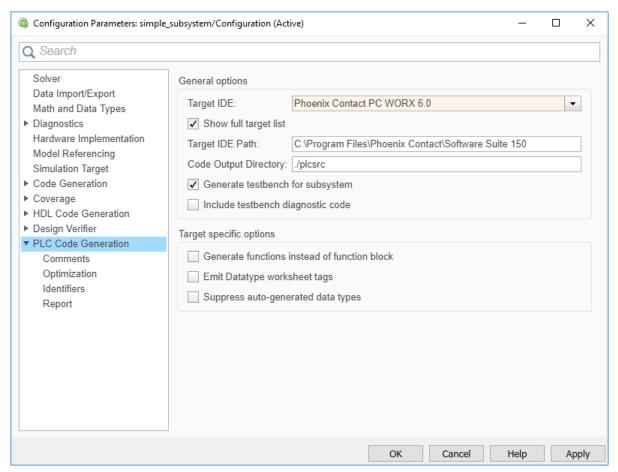

4 On the **PLC Code Generation** pane, select an option from the **Target IDE** list, for example, 3S CoDeSys 2.3.


The default **Target IDE** list displays the full set of supported IDEs. To see a reduced subset of the target IDEs supported by Simulink PLC Coder, disable the option **Show full target list**. To customize this list, use the plccoderpref function.

- 5 Click OK.
- 6 Click Generate PLC Code.

This button:

- Generates Structured Text code (same as the PLC Code > Generate Code for Subsystem option)
- Stores generated code in model_name.exp (for example, plcdemo simple subsystem.exp)

When code generation is complete, a **View diagnostics** hyperlink appears at the bottom of the model window. Click this hyperlink to open the Diagnostic Viewer window.

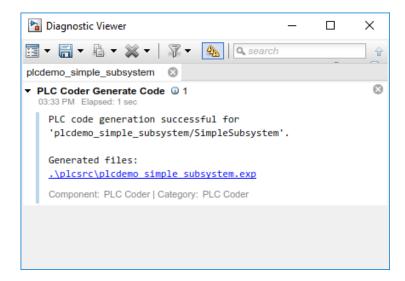

This window has links that you can click to open the associated files. For more information, see "Files Generated by Simulink PLC Coder" on page 1-14.

Generate Structured Text with the MATLAB Interface

You can generate Structured Text code for a subsystem in the Command Window with the plcgeneratecode function. You must have already configured the parameters for the model or, alternatively, you can use the default settings.

For example, to generate code from the SimpleSubsystem subsystem in the plcdemo_simple_subsystem model:

- $\textbf{1} \quad \text{ Open the plcdemo_simple_subsystem model:} \\$
 - plcdemo_simple_subsystem
- 2 Open the Configuration Parameters dialog box using the plcopenconfigset function:
 - plcopenconfigset('plcdemo_simple_subsystem/SimpleSubsystem')

- 3 Select a target IDE.
- **4** Configure the subsystem as described in "Prepare Model for Structured Text Generation" on page 1-3.
- **5** Generate code for the subsystem:

```
generatedfiles = plcgeneratecode('plcdemo_simple_subsystem/SimpleSubsystem')
```

When using plcgeneratecode for code generation, all diagnostic messages are printed to the MATLAB command window.

View Generated Code

After generating the code, you can view it in the MATLAB Editor. For a description of how the generated code for the Simulink components map to Structured Text components, see "PLC Code Generation Basics". In addition, note the following:

- Matrix data types: The coder converts matrix data types to single-dimensional vectors (column-major) in the generated Structured Text.
- Generated code header: If your model has author names, creation dates, and model descriptions, the generated code contains these items in the header comments. The header also lists fundamental sample times for the model and the subsystem block for which you generate code.
- Code comments: You can choose to propagate block descriptions to comments in generated code. See "Propagate Block Descriptions to Code Comments" on page 1-13.

The figure illustrates generated code for the CoDeSys Version 2.3 PLC IDE. Generated code for other platforms, such as Rockwell Automation RSLogix $^{\text{\tiny M}}$ 5000, is in XML or other format and looks different.

```
FUNCTION_BLOCK SimpleSubsystem
   VAR_INPUT
17
        ssMethodType: SINT;
18
        U: LREAL;
   END VAR
19
   VAR_OUTPUT
20
21
        Y: LREAL:
22
   END VAR
23
   VAR
24
25
        UnitDelay_DSTATE: LREAL;
    END VAR
26
    VAR_TEMP
        rtb_Gain: LREAL;
29
    CASE ssMethodType OF
30
        SS INITIALIZE:
31
            (* InitializeConditions for UnitDelay: '<S1>/Unit Delay' *)
32
            UnitDelay_DSTATE := 0;
33
34
        SS OUTPUT:
            (* Gain: '<S1>/Gain' incorporates:
35
36
             * Inport: '<Root>/U'
37
             * Sum: '<S1>/Sum'
             * UnitDelay: '<S1>/Unit Delay'
39
            rtb Gain := (U - UnitDelay DSTATE) * 0.5;
            (* Outport: '<Root>/Y' *)
            Y := rtb_Gain;
45
            (* Update for UnitDelay: '<S1>/Unit Delay' *)
            UnitDelay DSTATE := rtb Gain;
   END CASE:
   END FUNCTION BLOCK
```

If you are confident that the generated Structured Text is good, optionally change your workflow to automatically generate and import code to the target IDE. For more information, see "Import Structured Text Code Automatically" on page 1-17.

Propagate Block Descriptions to Code Comments

You can propagate block descriptions from the model to comments in your generated code.

For specific IDEs, you can propagate the block descriptions into specific XML tags in the generated code. The IDEs use the tags to create a readable description of the function blocks in the IDE.

- For Rockwell Automation RSLogix 5000 AOI/routine target IDEs, the coder propagates block descriptions from the model into the L5X AdditionalHelpText XML tag. The IDE can then import the tag as part of AOI and routine definition in the generated code.
- For CoDeSys 3.5 IDE, the coder propagates block descriptions from the model into the documentation XML tag. When you import the generated code into the CoDeSys 3.5 IDE, the IDE parses the content of this tag and provides readable descriptions of the function blocks in your code.

To propagate block descriptions to comments:

- **1** Enter a description for the block.
 - a Right-click the block for which you want to write a description and select **Properties**.
 - **b** On the **General** tab, enter a block description.
- **2** Before code generation, specify that block descriptions must propagate to code comments.
 - a Right-click the subsystem for which you are generating code and select PLC Code > Options.
 - **b** Select the option Include block description on page 12-13.

Your block description appears as comments in the generated code.

Files Generated by Simulink PLC Coder

The Simulink PLC Coder software generates Structured Text code and stores it according to the target IDE platform. These platform-specific paths are default locations for the generated code. To customize generated file names, see "Specify Custom Names for Generated Files" on page 1-16.

Platform	Generated Files
3S-Smart Software Solutions CoDeSys 2.3	<pre>current_folder\plcsrc\model_name.exp — Structured Text file for importing to the target IDE.</pre>
3S-Smart Software Solutions CoDeSys 3.3	<pre>current_folder\plcsrc\model_name.xml — Structured Text file for importing to the target IDE.</pre>
3S-Smart Software Solutions CoDeSys 3.5	<pre>current_folder\plcsrc\model_name.xml — Structured Text file for importing to the target IDE.</pre>
B&R Automation Studio® IDE	The following files in <code>current_folder\plcsrc\model_name</code> — Files for importing to the target IDE:
	Package.pkg — (If test bench is generated) Top-level package file for function blocks library and test bench main program in XML format.
	In the main folder (if test bench is generated):
	• IEC.prg — Test bench main program definition file in XML format.
	• mainInit.st — Text file. Test bench init program file in Structured Text.
	• mainCyclic.st — Text file. Test bench cyclic program file in Structured Text.
	• mainExit.st — Text file. Test bench exit program file in Structured Text.
	• main.typ — Text file. Main program type definitions file in Structured Text.
	main.var — Text file. Main program variable definitions file in Structured Text.
Beckhoff® TwinCAT® 2.11	<pre>current_folder\plcsrc\model_name.exp — Structured Text file for importing to the target IDE.</pre>
Beckhoff TwinCAT 3	<pre>current_folder\plcsrc\model_name.xml — Structured Text file for importing to the target IDE.</pre>
KW-Software MULTIPROG® 5.0	<pre>current_folder\plcsrc\model_name.xml — Structured Text file, in XML format, for importing to the target IDE.</pre>
Phoenix Contact® PC WORX™ 6.0	<pre>current_folder\plcsrc\model_name.xml — Structured Text file, in XML format, for importing to the target IDE.</pre>
Rockwell Automation Studio 5000 IDE: AOI	<pre>current_folder\plcsrc\model_name.L5X — (If test bench is generated) Structured Text file for importing to the target IDE using Add-On Instruction (AOI) constructs. This file is in XML format and contains the generated Structured Text code for your model.</pre>

Platform	Generated Files	
Rockwell Automation Studio 5000 IDE: Routine	<pre>current_folder\plcsrc\model_name.L5X — (If test bench is generated) Structured Text file for importing to the target IDE using routine constructs. This file is in XML format and contains the generated Structured Text code for your model.</pre>	
	In <i>current_folder</i> \plcsrc\model_name (if test bench is not generated), the following files are generated:	
	• subsystem_block_name.L5X — Structured Text file in XML format. Contains program tag and UDT type definitions and the routine code for the top-level subsystem block.	
	• routine_name.L5X — Structured Text files in XML format. Contains routine code for other subsystem blocks.	
Rockwell Automation RSLogix 5000 IDE: AOI	<pre>current_folder\plcsrc\model_name.L5X — (If test bench is generated) Structured Text file for importing to the target IDE using Add-On Instruction (AOI) constructs. This file is in XML format and contains the generated Structured Text code for your model.</pre>	
Rockwell Automation RSLogix 5000 IDE: Routine	<pre>current_folder\plcsrc\model_name.L5X — (If test bench is generated) Structured Text file for importing to the target IDE using routine constructs. This file is in XML format and contains the generated Structured Text code for your model.</pre>	
	In <i>current_folder</i> \plcsrc\model_name (if test bench is not generated), the following files are generated:	
	• subsystem_block_name.L5X — Structured Text file in XML format. Contains program tag and UDT type definitions and the routine code for the top-level subsystem block.	
	• routine_name.L5X — Structured Text files in XML format. Contains routine code for other subsystem blocks.	
Siemens SIMATIC® STEP® 7 IDE	<pre>current_folder\plcsrc\model_name\model_name.scl — Structured Text file for importing to the target IDE.</pre>	
	<pre>current_folder\plcsrc\model_name\model_name.asc — (If test bench is generated) Text file. Structured Text file and symbol table for generated test bench code.</pre>	
Siemens TIA Portal IDE	<pre>current_folder\plcsrc\model_name\model_name.scl — Structured Text file for importing to the target IDE.</pre>	
Generic	<pre>current_folder\plcsrc\model_name.st — Pure Structured Text file. If your target IDE is not available for the Simulink PLC Coder product, consider generating and importing a generic Structured Text file.</pre>	
PLCopen XML	<pre>current_folder\plcsrc\model_name.xml — Structured Text file formatted using the PLCopen XML standard. If your target IDE is not available for the Simulink PLC Coder product, but uses a format like this standard, consider generating and importing a PLCopen XML Structured Text file.</pre>	
Rexroth IndraWorks	<pre>current_folder\plcsrc\model_name.xml — Structured Text file for importing to the target IDE.</pre>	
OMRON Sysmac Studio	<pre>current_folder\plcsrc\model_name.xml — Structured Text file for importing to the target IDE.</pre>	

Specify Custom Names for Generated Files

The Simulink PLC Coder software generates Structured Text code and stores it according to the target IDE platform. These platform-specific paths are default locations for the generated code. For more information, see "Files Generated by Simulink PLC Coder" on page 1-14.

To specify a different name for the generated files, set the **Function name options** parameter in the Subsystem block:

- 1 Right-click the Subsystem block for which you want to generate code and select Subsystem Parameters.
- 2 In the **Main** tab, select the **Treat as atomic unit** check box.
- 3 Click the **Code Generation** tab.
- 4 From the **Function Packaging** parameter list, select Reusable Function.

These options enable the **Function name options** and **File name options** parameters.

5 Select the option that you want to use for generating the file name.

Function name options	Generated File Name	
Auto	Default. Uses the model name, as listed in "Prepare Model for Structured Text Generation" on page 1-3, for example, plcdemo_simple_subsystem.	
Use subsystem name	Uses the subsystem name, for example, SimpleSubsystem.	
User specified	Uses the custom name that you specify in the Function name parameter, for example, SimpleSubsystem.	

Import Structured Text Code Automatically

In this section...

"PLC IDEs That Qualify for Importing Code Automatically" on page 1-17

"Generate and Automatically Import Structured Text Code" on page 1-17

"Troubleshoot Automatic Import Issues" on page 1-18

PLC IDEs That Qualify for Importing Code Automatically

If you are confident that your model produces Structured Text that does not require visual examination, you can generate and automatically import Structured Text code to one of the following target PLC IDEs:

- 3S-Smart Software Solutions CoDeSys Version 2.3
- PHOENIX CONTACT (previously KW) Software MULTIPROG Version 5.0 or 5.50
- Phoenix Contact PC WORX Version 6.0
- Rockwell Automation RSLogix 5000 Version 17, 18, or 19

For the Rockwell Automation RSLogix routine format, you must generate testbench code for automatic import and verification.

- Siemens SIMATIC STEP 7 Version 5.4 only for the following versions:
 - Siemens SIMATIC Manager: Version V5.4+SP5+HF1, Revision K5.4.5.1
 - S7-SCL: Version V5.3+SP5, Revision K5.3.5.0
 - S7-PLCSIM: Version V5.4+SP3, Revision K5.4.3.0

Working with the default CoDeSys Version 2.3 IDE should require additional changes for only the PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0/5.50 and Phoenix Contact PC WORX 6.0 IDE. For information about automatically importing Structured Text code to these IDEs, see "Import and Verify Structured Text to PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0 and Phoenix Contact PC WORX 6.0 IDEs" on page 4-4.

Generate and Automatically Import Structured Text Code

You can generate and automatically import Structured Text code. Before you start:

- In the target IDE, save your current project.
- Close open projects.
- Close the target IDE and target IDE-related windows.

Note While the automatic import process is in progress, do not use your mouse or keyboard. Doing so might disrupt the process. When the process completes, you can resume normal operations.

You must have already installed your target PLC IDE in a default location, and it must use the CoDeSys V2.3 IDE. If you installed the target PLC IDE in a nondefault location, open the Configuration Parameters dialog box. In the PLC Coder node, set the **Target IDE Path** parameter to the installation folder of your PLC IDE. See "Target IDE Path" on page 12-6.

- 1 If it is not already started, open the Command Window.
- 2 Open the plcdemo_simple_subsystem model.
- 3 Right-click the Subsystem block and select **PLC Code** > **Generate and Import Code for Subsystem**.

The software:

- **a** Generates the code.
- **b** Starts the target IDE interface.
- **c** Creates a project.
- **d** Imports the generated code to the target IDE.

If you want to generate, import, and run the Structured Text code, see "Import and Verify Structured Text Code" on page 4-4.

Troubleshoot Automatic Import Issues

Following are guidelines, hints, and tips for questions or issues you might have while using the automatic import capability of the Simulink PLC Coder product.

Supported Target IDEs

The Simulink PLC Coder software supports only the following versions of target IDEs for automatic import and verification:

- 3S-Smart Software Solutions CoDeSys Version 2.3
- PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0 or 5.50 (English)
- Phoenix Contact PC WORX 6.0 (English)
- Rockwell Automation RSLogix 5000 Series Version 17, 18, 19 (English)

For the Rockwell Automation RSLogix routine format, you must generate testbench code for automatic import and verification.

• Siemens SIMATIC STEP 7 Version 5.4 (English and German)

Note Some antivirus softwares falsely identify the executables that implement the automatic import feature as malware. This can be safely ignored. For more information, see "Issues with Anti-Virus Software".

Unsupported Target IDEs

The following target IDEs currently do not support automatic import. For these target IDEs, the automatic import menu items (**Generate and Import Code for Subsystem** and **Generate, Import, and Verify Code for Subsystem**) are disabled.

- 3S-Smart Software Solutions CoDeSys Version 3.3
- 3S-Smart Software Solutions CoDeSys Version 3.5
- B&R Automation Studio IDE
- Beckhoff TwinCAT 2.11, 3

- Generic
- PLCopen
- Rockwell Automation Studio 5000 Logix Designer (both routine and AOI constructs)

Possible Automatic Import Issues


When the Simulink PLC Coder software fails to finish automatically importing for the target IDE, it reports an issue in a message dialog box. To remedy the issue, try the following actions:

- Check that the coder supports the target IDE version and language setting combination.
- Check that you have specified the target IDE path in the subsystem Configuration Parameters dialog box.
- Close currently open projects in the target IDE, close the target IDE completely, and try again.
- Some target IDEs can have issues supporting the large data sets the coder test bench generates. In these cases, try to shorten the simulation cycles to reduce the data set size, then try the automatic import again.
- Other applications can interfere with automatic importing to a target IDE. Try to close other unrelated applications on the system and try the automatic import again.


Using Simulink Test with Simulink PLC Coder

You can use Simulink Test $^{\text{m}}$ with Simulink PLC Coder to author, manage, and execute simulation-based tests of the generated code.

- 1 If you do not have the plcdemo_simple_subsystem model open, open it now.
- Create a signal build test harness for the subsystem as shown. To create a test harness for a subsystem, select the subsystem, right-click, and from the context menu, select Test Harness Create for <subsystem name>. Set test harness properties using the Create Test Harness dialog box.

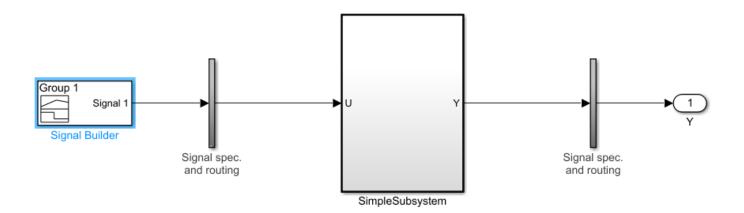

- 3 Open the **PLC Coder** app. Click **PLC Code** tab.
- 4 Click **Settings**. The Configuration Parameters dialog box is displayed.

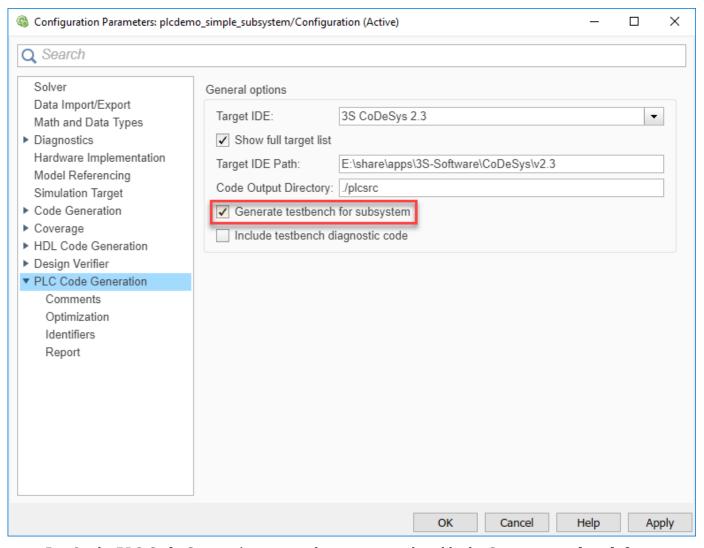

- 5 On the **PLC Code Generation** pane, select a target and enable the **Generate testbench for subsystem**option.
- 6 Click OK.
- Right-click and select **Generate code** for the subsystem from the **Test Harness Window**. The generated code contains multiple test-benches from the signal builder. You can run this code in the PLC emulator to make sure it matches simulation.

Limitations

- If you use anything other than a signal builder block in the test harness, you must create a toplevel atomic subsystem in the test harness that contains both the subsystem under test and the testing blocks (for example, say test sequence block) and generate code for this subsystem.
- Simulink PLC Coder does not yet support verify keyword in the test sequence block
- Simulink PLC Coder does support duration keyword in the test sequence block but it requires the generate code to be run with the same sample rate as in the Simulink model

Simulation and Code Generation of Motion Instructions

The Simulink PLC Coder software supports a workflow for the behavioral simulation and structured text code generation for the Rockwell Automation RSLogix motion control instructions.

Workflow for Using Motion Instructions in Model

This workflow uses the "Simulating and Generating Structured Text Code for Rockwell Motion Instructions" on page 24-39 example in the plccoderdemos folder. This example provides a template that you can use with motion instructions. It contains the following files:


Name	Description
MotionControllerExample.slx	Simulink model containing an example Stateflow chart for modeling motion instructions.
DriveLibrary.slx	Simulink library with a Stateflow chart that is used for modeling a real world drive (axis) with trajectories, delays, and other parameters.
MotionTypesForSim.mat	MAT-file containing the bus data types for the AXIS_SERVO_DRIVE and MOTION_INSTRUCTION. The MotioncontrollerExample.slx model loads the content of the MAT-file into the workspace. If you are creating a new model you must load this MAT-file for simulation and code generation.
Trajectory.m	MATLAB class file for implementing trapezoidal velocity profile. This is used to simulate the behavior of the Motion Axis Move (MAM) command.
MotionApiStubs.slx	Supporting file for code generation.
MotionInstructionType.m	MATLAB enumeration class file that represents the type of motion API calls. For example, isMAM, isMSF. This file is used only during simulation.
plc_keyword_hook.m	Helper file to avoid name mangling and reserved keyword limitations.
plcgeneratemotionapicode.p	Function that transforms the chart in the model to make it suitable for code generation.

Before you start, copy the files in the example to the current working folder.

- **1** Create a Simulink model with a Stateflow chart.
- 2 Load the bus data types from the MotionTypesForSim.mat file into the workspace by using the load function.
- 3 Create data that represents the drive and motion instructions for the chart. For information on adding data to Stateflow charts, see "Add Stateflow Data" (Stateflow)




4 Copy the drive(axis) model from the DriveLibrary.slx file into the Stateflow chart. The drive model must be copied as an atomic subchart.

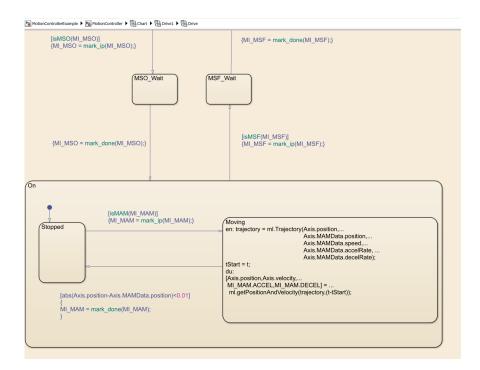

The drive logic Stateflow chart models a real world drive with parameters such as trajectory and delay. Any drive subchart has the following data:



5 Use the **Subchart Mappings** dialog to map the drive subchart data store memory data with the local data of the appropriate names in the container chart. For more information, see "Map Variables for Atomic Subcharts and Boxes" (Stateflow). The "Simulating and Generating Structured Text Code for Rockwell Motion Instructions" on page 24-39 example has the following mapping for Drive1.

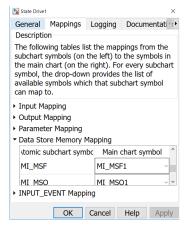

6 Use graphical functions to create motion API instructions. For example, for the Motion Servo On (MSO) instruction:




```
function [AxisTagOut,MITagOut] = MSO(AxisTag,MITag)

{AxisTagOut = AxisTag;
MITagOut = MITag;
AxisTagOut.currentInstruction = MotionInstructionType.isMSO;
MITagOut.EN = true;
MITagOut.IP = false;
MITagOut.DN = false;}
```


The mapping between the inputs to the outputs is through "pass by reference".

7 Create the controller logic in another subchart and use the motion instructions created in the previous step in the chart. Controller1 in the example has the following Stateflow chart.

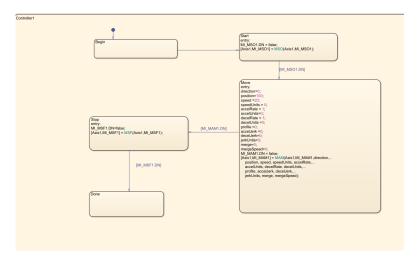


Simulation of the Motion API Model

You can run simulation on the model containing the motion instructions and see the state changes the controller chart and the Drive subchart. You can also log the local data of the chart such as AXIS and the MOTION_INSTRUCTION variables For more information, see "Configure States and Data for Logging" (Stateflow).

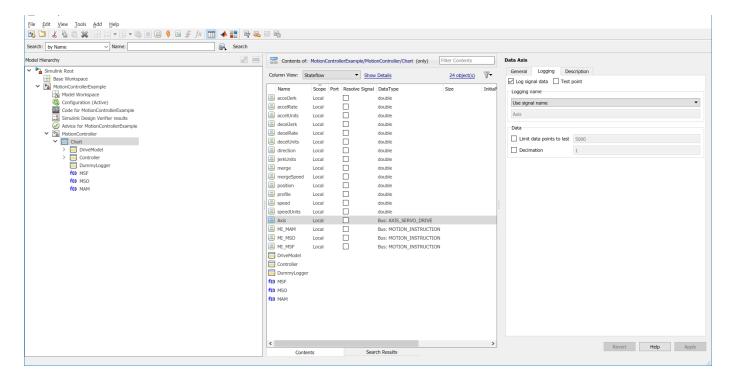

At the end of simulation, the logged signals are captured in the base workspace as a variable called logsout. This can be imported into Simulation Data Inspector.

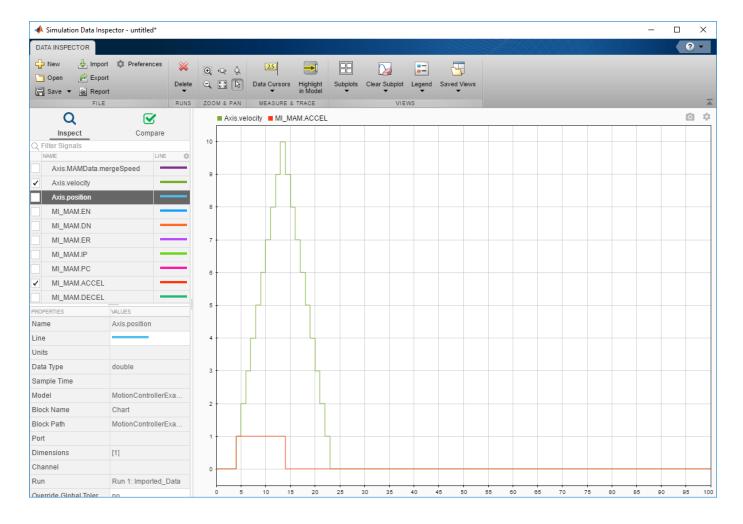

Structured Text Code Generation

Use the plcgeneratemotionapicode function to prepare the model for code generation and generate structured text code. The plcgeneratemotionapicode takes the full path name of subsystem containing the original chart as an input and creates a new model from which structured text code can be generated.

Adding Support for Other Motion Instructions

The plcdemo_motion_api_rockwell example has support for only the following motion instructions:

- MAM
- MAS
- MSF
- MS0

To use other Rockwell Automation RSLogix motion instructions in the model (For example, Motion Axis Jog (MAJ)), you must perform the following steps:

1 Because the MAJ instruction is similar to MAM instruction, create a bus for MAJ with elements similar to that of MAM.



- 2 Update the MotionTypesForSim.mat file with the new definitions for MAJDATA and AXIS SERVO DRIVE.
- 3 In the Stateflow chart, create a graphical function representing MAJ (similar to MAM). Assign the appropriate inputs and outputs.

4 Create single transition with commands to set the output values.

```
function [AxisTagOut,MITagOut] = MAM(AxisTag,MITag,directionIn, positionIn, speedIn, speedUnitsIn, ...
                    accelRateIn, accelUnitsIn, ...
                    decelRateIn, decelUnitsIn, ...
                    profileIn, accelJerkIn, decelJerkIn, jerkUnitsIn, ...
                    mergeln, mergeSpeedln, ...
                lockPositionIn, lockDirectionIn, ...
             eventDistanceIn, calculatedDataIn)
                                          AxisTagOut = AxisTag;
                                          MITagOut = MITag;
                                          AxisTagOut.currentInstruction = MotionInstructionType.isMAM;
                                          AxisTagOut.MAMData.direction = directionIn;
                                          AxisTagOut.MAMData.position = positionIn;
                                          AxisTagOut.MAMData.speed = speedIn;
                                          AxisTagOut.MAMData.speedUnits = speedUnitsIn;
                                          AxisTagOut.MAMData.accelRate = accelRateIn;
                                          AxisTagOut.MAMData.accelUnits = accelUnitsIn;
                                          AxisTagOut.MAMData.decelRate = decelRateIn;
                                          AxisTagOut.MAMData.decelUnits = decelUnitsIn;
                                          AxisTagOut.MAMData.profile = profileIn;
                                          AxisTagOut.MAMData.accelJerk = accelJerkIn;
                                          AxisTagOut.MAMData.decelJerk = decelJerkIn;
                                          AxisTagOut.MAMData.jerkUnits = jerkUnitsIn;
                                          AxisTagOut.MAMData.merge = mergeIn;
                                          AxisTagOut.MAMData.mergeSpeed = mergeSpeedIn;
                                          AxisTagOut.MAMData.lockPosition = lockPositionIn;
                                          AxisTagOut.MAMData.lockDirection = lockDirectionIn;
                                          AxisTagOut.MAMData.eventDistance = eventDistanceIn;
                                          AxisTagOut.MAMData.calculatedData = calculatedDataIn;
                                          MITagOut.EN = true;
                                          MITagOut.IP = false;
                                          MITagOut.DN = false;
```


5 Remove the transition commands and copy the graphical function to the MotionApiStubs.slx.




6 Update the functionName variable in the getDriveTemplateNames.m file to include MAJ.

```
Editor - Y:\17\amathewi.ladderFB\plcdemo_motion_api_rockwell\getDriveTemplateNames.m
   getDriveTemplateNames.m 💥
11
                  delete them before ST generation. However, these are req
        응
12
                  simulation
13
14
                  functionNames : names of the motion api function calls. '
15
                  motion api calls are needed for simulation and also need
16
                  appear in the ST code. However,
17
                        a) these should appear as function calls just as
18
                        represented in the controller. They should not get
19
                        b) the definition should not get generated. So we
20
        응
                        to the plc options symbols that are to not to be g
21
22
                  globalDataNames : names of the motionAPI global data s
                  which behind hte scenes are used to updated the status of
23
24
                  instruction calls both in the controller and the drive.
                  data store memories in the stateflow chart. The type
25
26
                  definition for these should not be generated in the ST a.
27
                  will be provided by RSLogix. So we add these to the plc
28
       - 응
                  symbols that are to not to be generated.
29
30 -
            driveNames = {'Drive1', 'Drive2', 'DriveModel'};
            dummvStateNames = {'DummvLogger'};
31 -
32 -
            functionNames = {'MSF', 'MSO', 'MAM'};
33 -
            globalDataNames = { 'AXIS SERVO DRIVE', 'MOTION INSTRUCTION',
34
35 -
        end
```


- 7 Update the DriveLibrary.slx file to respond to MAJ calls during simulation.
 - Create isMAJ graphical function (similar to isMAM).

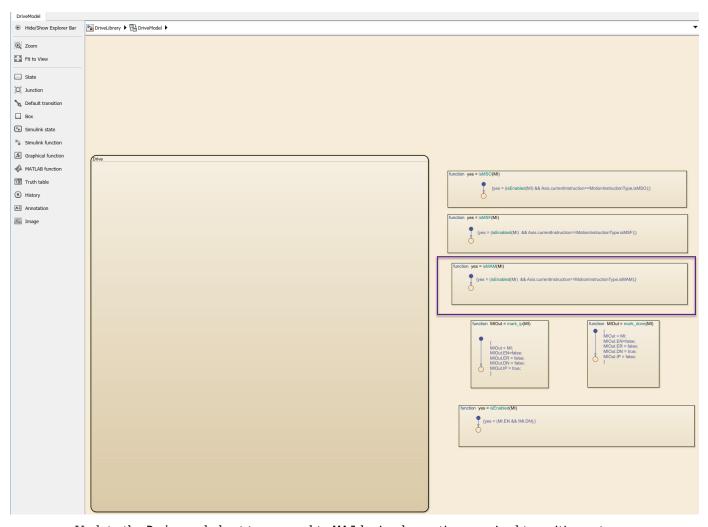

• Update the Drive subchart to respond to MAJ by implementing required transitions etc (similar to MAM as shown).

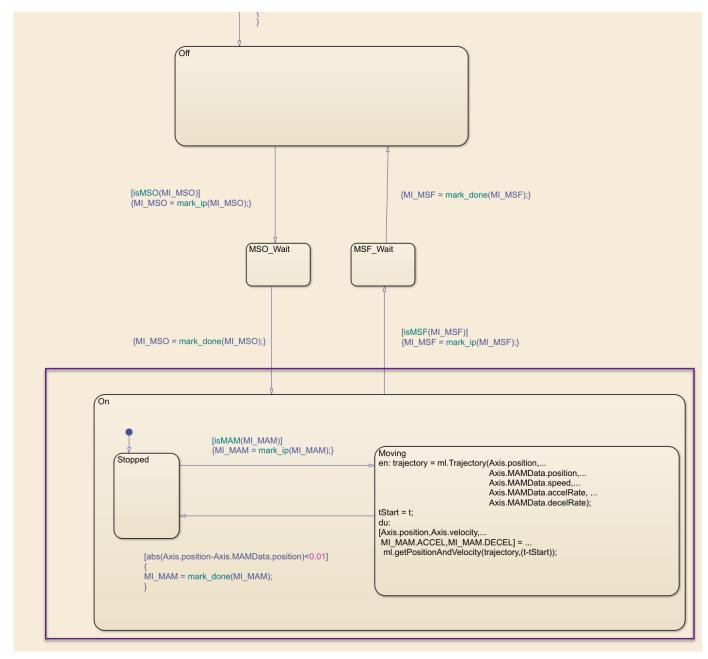

8 Create or update the controller logic as required. Create a new state and add MAJ instruction to it (similar to the MAM)

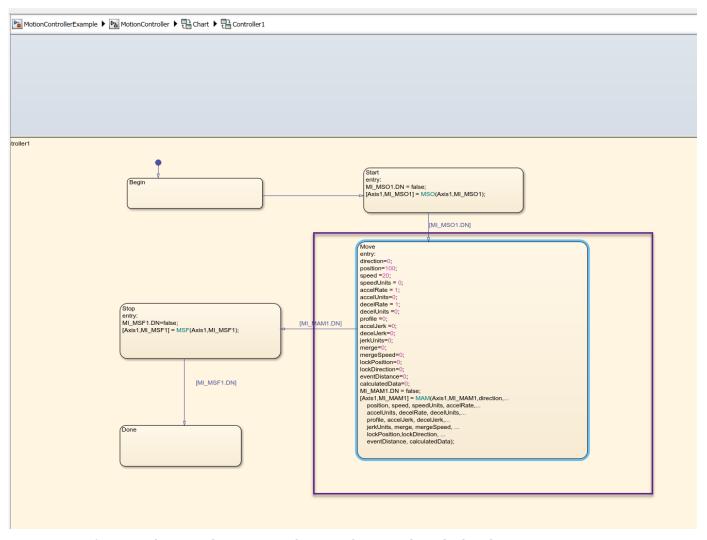

9 Perform simulation and generate code using the steps described earlier.

Mapping Simulink Semantics to Structured Text

- "Generated Code Structure for Simple Simulink Subsystems" on page 2-2
- "Generated Code Structure for Reusable Subsystems" on page 2-4
- "Generated Code Structure for Triggered Subsystems" on page 2-6
- "Generated Code Structure for Stateflow Charts" on page 2-8
- "Generated Code Structure for MATLAB Function Block" on page 2-12
- "Generated Code Structure for Multirate Models" on page 2-14
- "Generated Code Structure for Subsystem Mask Parameters" on page 2-16
- "Global Tunable Parameter Initialization for PC WORX" on page 2-20
- "Considerations for Nonintrinsic Math Functions" on page 2-21

Generated Code Structure for Simple Simulink Subsystems

This topic assumes that you have generated Structured Text code from a Simulink model. If you have not yet done so, see "Generate Structured Text from the Model Window" on page 1-9.

The example in this topic shows generated code for the CoDeSys Version 2.3 IDE. Generated code for other IDE platforms looks different.


1 If you do not have the plcdemo_simple_subsystem.exp file open, open it in the MATLAB editor. In the folder that contains the file, type:

```
edit plcdemo_simple_subsystem.exp
```

A file like the following is displayed.

The following figure illustrates the mapping of the generated code to Structured Text components for a simple Simulink subsystem. The Simulink subsystem corresponds to the Structured Text function block, Subsystem.

Note The coder maps alias data types to the base data type in the generated code.

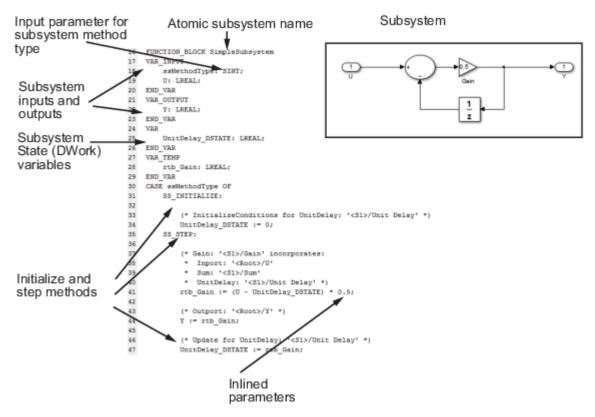

2 Inspect this code as you ordinarily do for PLC code. Check the generated code.

Note The Simulink model for plcdemo_simple_subsystem does not contain signal names at the input or output of the SimpleSubsystem block. So the generated code has the port names U and Y

as the input and output variable names of the $FUNCTION_BLOCK$. However, even if your model does contain signal names, coder only uses port names in the generated code.

Generated Code Structure for Reusable Subsystems

This topic assumes that you have generated Structured Text code from a Simulink model. If you have not yet done so, see "Generate Structured Text from the Model Window" on page 1-9.


The example in this topic shows generated code for the CoDeSys Version 2.3 IDE. Generated code for other IDE platforms looks different.

- 1 Open the plcdemo reusable subsystem model.
- 2 Open the **PLC Coder** app.
- 3 Click Generate PLC Code.

The Simulink PLC Coder software generates Structured Text code and places it in *current_folder*/plcsrc/plcdemo_reusable_subsystem.exp.

4 If you do not have the plcdemo_reusable_subsystem.exp file open, open it in the MATLAB editor.

The following figure illustrates the mapping of the generated code to Structured Text components for a reusable Simulink subsystem. This graphic contains a copy of the hierarchical subsystem, ReusableSubsystem. This subsystem contains two identical subsystems, S1 and S2. This configuration enables code reuse between the two instances (look for the ReusableSubsystem string in the code).

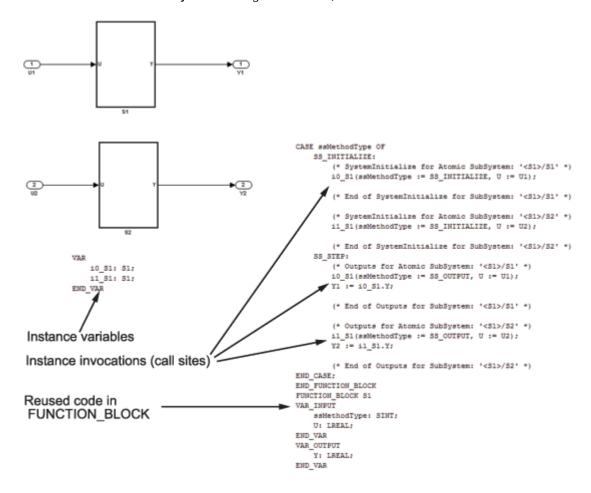

- **5** Examine the generated Structured Text code. The code defines FUNCTION_BLOCK S1 once.
 - Look for two instance variables that correspond to the two instances declared inside the parent FUNCTION_BLOCK ReusableSubsystem (i0_S1: S1 and i1_S1: S1). The code invokes these two instances separately by passing in different inputs. The code invokes the outputs per the Simulink execution semantics.
- For IEC 61131-3 compatible targets, the non-step and the output ssMethodType do not use the output variables of the FUNCTION_BLOCK. Therefore, the generated Structured Text code for SS INITIALIZE does not contain assignment statements for the outputs Y1 and Y2.

Note This optimization is applicable only to IEC 61131-3 compatible targets.

Generated Code Structure for Triggered Subsystems

This topic assumes that you have generated Structured Text code from a Simulink model. If you have not yet done so, see "Generate Structured Text from the Model Window" on page 1-9.


The example in this topic shows generated code for the CoDeSys Version 2.3 PLC IDE. Generated code for other IDE platforms looks different.

- 1 Open the plcdemo cruise control model.
- 2 Open the **PLC Coder** app. Click the **PLC Code** tab.
- 3 Click Generate PLC Code.

The Simulink PLC Coder software generates Structured Text code and places it in *current folder*/plcsrc/plcdemo cruise control.exp.

4 If you do not have the plcdemo cruise control.exp file open, open it in the MATLAB editor.

The following figure illustrates the mapping of the generated code to Structured Text components for a triggered Simulink subsystem. The first part of the figure shows the Controller subsystem and the triggered Stateflow chart that it contains. The second part of the figure shows excerpts of the generated code. Notice the zero-crossing functions that implement the triggered subsystem semantics.

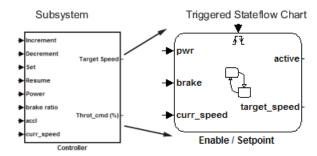

Generated code


```
EnableSetpoint_Trig_ZCE: ARRAY [0..6] OF USINT := 3,3,3,3,3,3,3;
i0_ZCFCN_d_ANY: ZCFCN_d_ANY;
END VAR
                    SS_STEP:
                                         (* DiscretePulseGenerator: '<Sl>/Pulse Generator' *)
                                      IF (clockTickCounter < 1) AND (clockTickCounter >= 0) THEN temp1 := 1.0;
                                      ELSE
                                      temp1 := 0.0;
END_IF;
                                      clockTickCounter := clockTickCounter + 1;
                                        (* End of DiscretePulseGenerator: '<S1>/Pulse Generator' *)
                                     (* Chart: '<Sl>/Enable // Setpoint ' incorporates:
    TriggerFort: '<52>/ input events ' *)
tempInputSignal[0] := rtb_PulseGenerator;
(* Inport: '<Roots/Increment' *)
tempInputSignal[1] := Increment;
tempInputSignal[2] := Increment;
(* Inport: '<Roots/Decrement' *)
***PartInputSignal[2] -- PartInputSignal[2] -- PartInputSignal[
                                                                                                                                                                                                                                                                                                                                                                                                                         Triggered subsystem semantics
                                      (* inport: 'knoot/)westement *)
tempInputSignal[4] := Decrement;
tempInputSignal[4] := Decrement;
(* Inport: '<Root>/Set' *)
tempInputSignal[5] := Set;
(* Inport: '<Root>/Resume' *)
tempInputSignal[6] := Resume;
                                     tempInputSignal(6) := Resume;
(* Chart: '<Sl>/Enable // Setpoint ' incorporat
* TriggerFort: '<Sl>/ input events ' *)
FOR inputEventIndex := 0 TO 6 DO
i0_ZCFCN_d_ANY(u0 := EnableSetpoint_Fig_ZCCcallChartStep := 10_ZCFCN_d_ANY.y0
tmp := 10_ZCFCN_d_ANY.y1;
tempOutEvent[inputEventIndex] := callChartS
                                                                                                                                                                                                                                                  rig_ZCE[inputEventIndex],
                                                                                                                                                                                                                   = callChartStep;
                                                            outState[inputEventIndex]
  FUNCTION_BLOCK ZCFCN_d_ANY
END_FUNCTION_BLOCK
```

Generated Code Structure for Stateflow Charts

The examples in this topic show generated code for the CoDeSys Version 2.3 PLC IDE. Generated code for other IDE platforms looks different.

Stateflow Chart with Event Based Transitions

Generate code for the Stateflow chart ControlModule in the model plcdemo stateflow controller. Here is the chart:

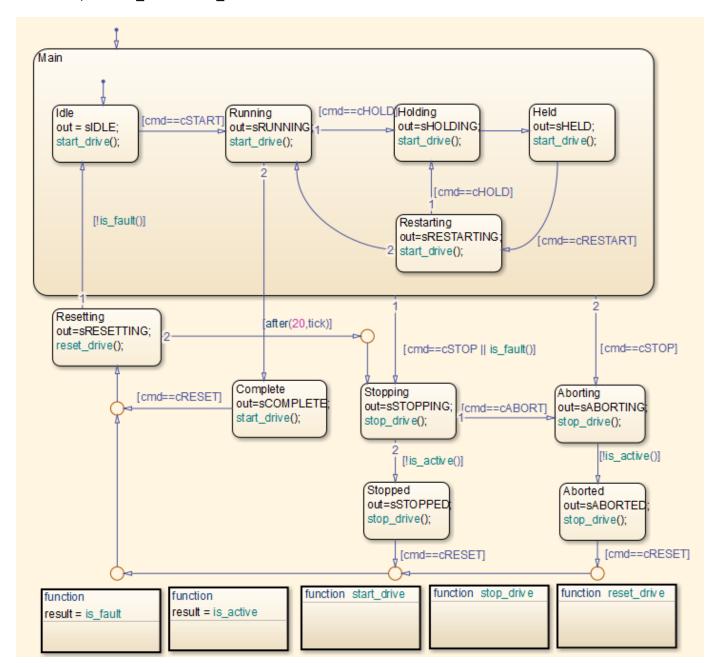

You can map the states and transitions in the chart to the generated code. For instance, the transition from the state Aborting to Aborted appears in the generated code as:


driveOut.Reset := FALSE:

For more information on the inlining of functions such as start_drive, stop_drive, and reset_drive in the generated code, see "Control Code Partitions for MATLAB Functions in Stateflow Charts" on page 7-8.

Stateflow Chart with Absolute Time Temporal Logic

END IF;

Generate code for the Stateflow chart Temporal in the model plcdemo_sf_abs_time. Here is the chart:

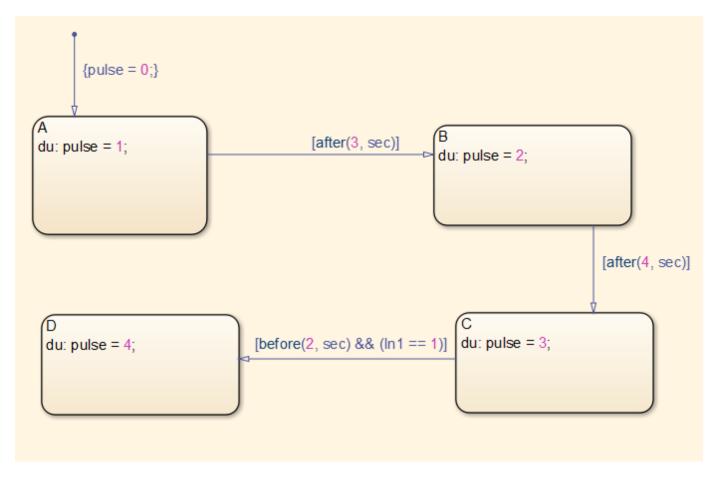

You can map states and transitions in the chart to the generated code. For instance, the transition from state B to C appears as:

The variable temporalCounter_i1 is an instance of the function block PLC_CODER_TIMER defined as:

```
FUNCTION_BLOCK PLC_CODER_TIMER
VAR_INPUT
        timerAction: INT;
        maxTime: DINT;
END_VAR
VAR_OUTPUT
        done: BOOL;
END_VAR
VAR
        plcTimer: TON;
        plcTimerExpired: BOOL;
```


```
END VAR
CASE timerAction OF
    1:
        (* RESET *)
        plcTimer(IN:=FALSE, PT:=T#0ms);
plcTimerExpired := FALSE;
        done := FALSE;
    2:
        (* AFTER *)
        IF (NOT(plcTimerExpired)) THEN
            plcTimer(IN:=TRUE, PT:=DINT_TO_TIME(maxTime));
        END_IF;
        plcTimerExpired := plcTimer.Q;
        done := plcTimerExpired;
    3:
        (* BEFORE *)
        IF (NOT(plcTimerExpired)) THEN
            plcTimer(IN:=TRUE, PT:=DINT_TO_TIME(maxTime));
        END IF;
        plcTimerExpired := plcTimer.Q;
        done := NOT(plcTimerExpired);
END CASE;
END_FUNCTION_BLOCK
```

Generated Code Structure for MATLAB Function Block

This topic assumes that you have generated Structured Text code from a Simulink model. If you have not yet done so, see "Generate Structured Text from the Model Window" on page 1-9.

The example in this topic shows generated code for the CoDeSys Version 2.3 IDE. Generated code for other IDE platforms looks different.

- 1 Open the plcdemo eml tankcontrol model.
- 2 Open the **PLC Coder** app. Click the **PLC Code** tab.
- 3 Click Generate PLC Code.
 - The Simulink PLC Coder software generates Structured Text code and places it in *current folder*/plcsrc/plcdemo eml tankcontrol.exp.
- 4 If you do not have the plcdemo_eml_tankcontrol.exp file open, open it in the MATLAB editor.
 - The following figure illustrates the mapping of the generated code to Structured Text components for a Simulink Subsystem block that contains a MATLAB Function block. The coder tries to perform inline optimization on the generated code for MATLAB local functions. If the coder determines that it is more efficient to leave the local function as is, it places the generated code in a Structured Text construct called FUNCTION.
- **5** Examine the generated Structured Text code.

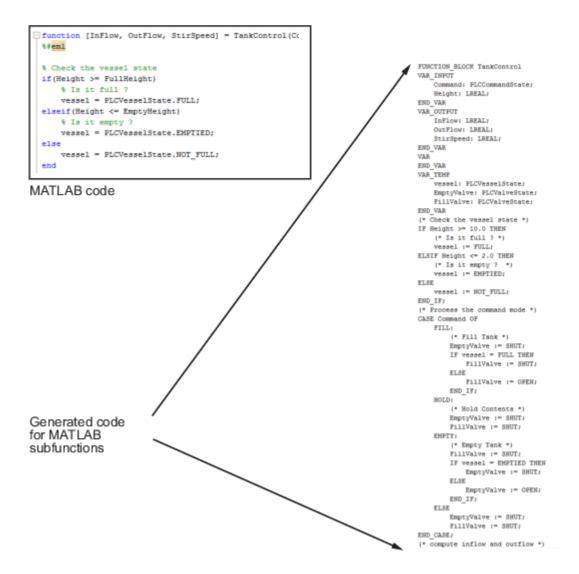

Generated Code Structure for Multirate Models

This example assumes that you have generated Structured Text code from a Simulink model. If you have not yet done so, see "Generate Structured Text from the Model Window" on page 1-9.

The example in this topic shows generated code for the CoDeSys Version 2.3 IDE. Generated code for other IDE platforms looks different.

- 1 Open the plcdemo multirate model. This model has two sample rates.
- 2 Open the **PLC Coder** app. Click the **PLC Code** tab.
- 3 Click Generate PLC Code.

The Simulink PLC Coder software generates Structured Text code and places it in *current folder*/plcsrc/plcdemo multirate.exp.

4 If you do not have the plcdemo_multirate.exp file open, open it in the MATLAB editor and examine the Structured Text code.

The generated code contains a global time step counter variable:

```
VAR_GLOBAL
    plc_ts_counter1: DINT;
END VAR
```

In this example, there are two rates, and the fast rate is twice as fast as the slow rate, so the time step counter counts to 1, then resets:

```
IF plc_ts_counter1 >= 1 THEN
        plc_ts_counter1 := 0;
ELSE
        plc_ts_counter1 := plc_ts_counter1 + 1;
END_IF;
```

The generated code for blocks running at slower rates executes conditionally based on the corresponding time step counter values. In this example, the generated code for Gain1, Unit Delay1, and Sum1 executes every other time step, when $plc_ts_cunter1 = 0$, because those blocks run at the slow rate. The generated code for Gain, Unit Delay, Sum, and Sum2 executes every time step because those blocks run at the fast rate.

SS_STEP:

```
* Sum: '<S1>/Sum1' *)
rtb_Gain1 := (U2 - UnitDelay1) * 0.5;

(* Outport: '<Root>/Y2' *)
Y2 := rtb_Gain1;
END_IF;

(* Outport: '<Root>/Y3' incorporates:
   * Sum: '<S1>/Sum2'
   * UnitDelay: '<S1>/Unit Delay' *)
Y3 := UnitDelay_DSTATE - UnitDelay1;

(* Update for UnitDelay: '<S1>/Unit Delay' *)
UnitDelay_DSTATE := rtb_Gain;

IF plc_ts_counter1 = 0 THEN
   (* Update for UnitDelay: '<S1>/Unit Delay1' *)
UnitDelay1_DSTATE := rtb_Gain1;


END_IF;
```


In general, for a subsystem with n different sample times, the generated code has n-1 time step counter variables, corresponding to the n-1 slower rates. Code generated from parts of the model running at the slower rates executes conditionally, based on the corresponding time step counter values.

Generated Code Structure for Subsystem Mask Parameters


In the generated code for masked subsystems, the mask parameters map to function block inputs. The values you specify in the subsystem mask are assigned to these function block inputs in the generated code.

For example, the following subsystem, Subsystem, contains two instances, Filt1 and Filt2, of the same masked subsystem.

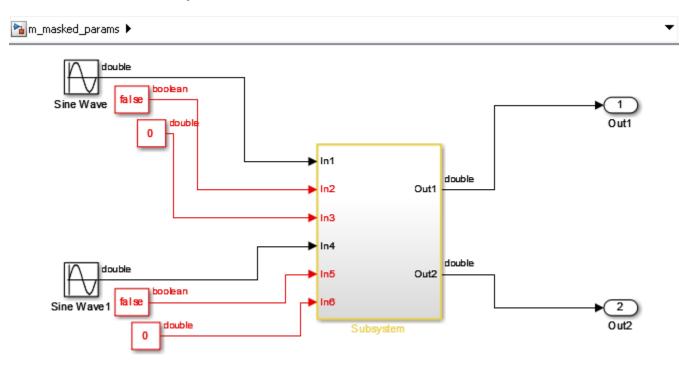


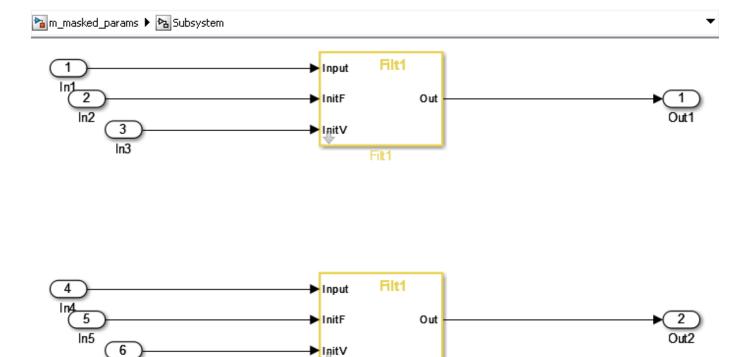

The two subsystems, Filt1, and Filt2, have different values assigned to their mask parameters. In this example, Filt1_Order_Thau is a constant with a value of 5.

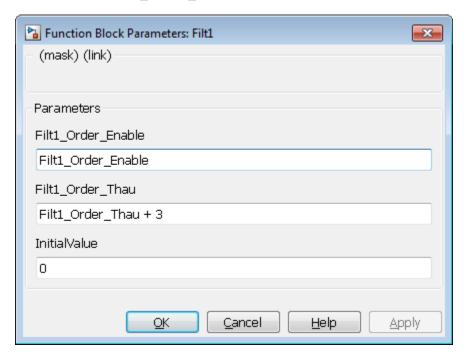

In6

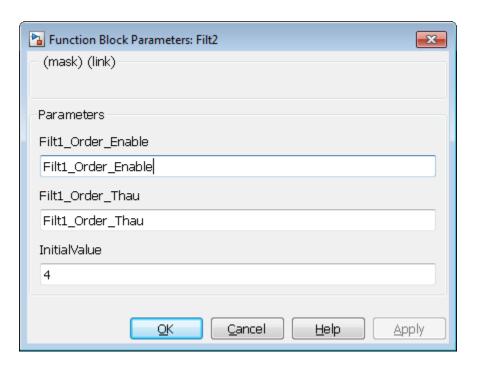

Therefore, for the Filt1 subsystem, the Filt1_Order_Thau parameter has a value of 8, and for the Filt2 subsystem, the Filt1_Order_Thau parameter has a value of 5.

The following generated code shows the Filt1 function block inputs. The rtp_Filt1_Order_Thau input was generated for the Filt1 Order Thau mask parameter.

```
FUNCTION_BLOCK Filt1
VAR_INPUT
    ssMethodType: SINT;
    InitV: LREAL;
    InitF: BOOL;
    Input: LREAL;
    rtp_Filt1_Order_Thau: LREAL;
    rtp_InitialValue: LREAL;
    rtp_Filt1_Order_Enable: BOOL;
END_VAR
```

The following generated code is from the FUNCTION_BLOCK Subsystem. The function block assigns a value of 8 to the rtp_Filt1_Order_Thau input for the i0_Filt1 instance, and assigns a value of 5 to the rtp_Filt1 Order_Thau input for the i1_Filt1 instance.

```
(* InitializeConditions for Atomic SubSystem: '<S1>/Filt2' *)
        i1_Filt1(ssMethodType := SS_INITIALIZE, InitV := In6,
                 InitF := In5, InpuT := In4,
                 rtp_Filt1_Order_Thau := 5.0,
                 rtp_InitialValue := 4.0,
                 rtp_Filt1_Order_Enable := TRUE);
        Out2 := i1 Filt1.Out;
        (* End of InitializeConditions for SubSystem: '<S1>/Filt2' *)
SS_STEP:
        (* Outputs for Atomic SubSystem: '<S1>/Filt1' *)
        i0_Filt1(ssMethodType := SS_OUTPUT, InitV := In3, InitF := In2,
                 Input := In1, rtp_Filt1_Order_Thau := 8.0,
                 rtp InitialValue := 0.0,
                 rtp_Filt1_Order_Enable := TRUE);
        Out1 := i0 Filt1.Out;
        (* End of Outputs for SubSystem: '<S1>/Filt1' *)
        (* Outputs for Atomic SubSystem: '<S1>/Filt2' *)
        i1_Filt1(ssMethodType := SS_OUTPUT, InitV := In6, InitF := In5,
                 Input := In4, rtp_Filt1_Order_Thau := 5.0,
                 rtp_InitialValue := 4.0,
                 rtp_Filt1_Order_Enable := TRUE);
        Out2 := i1_Filt1.Out;
        (* End of Outputs for SubSystem: '<S1>/Filt2' *)
```

Global Tunable Parameter Initialization for PC WORX

For PC WORX, the coder generates an initialization function, PLC_INIT_PARAMETERS, to initialize global tunable parameters that are arrays and structures. This initialization function is called in the top-level initialization method.

For example, suppose that your model has a global array variable, ParArrayXLUT:

```
ParArrayXLUT=[0,2,6,10];
```

In the generated code, the PLC_INIT_PARAMETERS function contains the following code to initialize ParArrayXLUT:

```
(* parameter initialization function starts *)<br/>ParArrayXLUT[0] := LREAL#0.0;<br/>ParArrayXLUT[1] := LREAL#2.0;<br/>ParArrayXLUT[2] := LREAL#6.0;<br/>ParArrayXLUT[3] := LREAL#10.0;<br/>(* parameter initialization function ends *)<br/>/<br/>/html>
```

The PLC_INIT_PARAMETERS function is renamed i0_PLC_INIT_PARAMETERS, and called in the top-level initialization method:

```
CASE SINT_TO_INT(ssMethodType) OF<br/>0: <br/>     i0 PLC INIT PARAMETERS();<br/>
```

Considerations for Nonintrinsic Math Functions

When Simulink PLC Coder encounters a math function that is not intrinsic, it generates Structured Text by replacing the non-intrinsic function with an equivalent IEC-61131 compatible intrinsic function. For such cases, an input value that is larger than the allowed input range, causes overflow and generates a NaN value.

For example, hyperbolic tan is not an intrinsic function. Simulink PLC Coder uses exp in the generated code to represent tanh. More specifically, it uses (exp(2*x)-1)/(exp(2*x)+1). For large values of x, this function overflows. The issue can be addressed by adding validation code or using blocks before calling the tanh function to check that the range of the input is within acceptable values. In MATLAB, tanh(x) for tanh(x) for

See Also

Generating Ladder Diagram

- "Simulink PLC Coder Ladder Diagram Code Generation" on page 3-2
- "Prepare Chart for Simulink PLC Coder Ladder Diagram Code Generation" on page 3-6
- "Generate Simulink PLC Coder Ladder Diagram Code from Stateflow Chart" on page 3-9
- "Import Ladder Diagram Code to CODESYS 3.5 IDE and Validate Diagram" on page 3-14
- "Restrictions on Stateflow Chart for Ladder Diagram Generation" on page 3-18
- "Supported Features in Ladder Diagram" on page 3-20
- "Import L5X Ladder Files into Simulink" on page 3-22
- "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27
- "Generating Ladder Diagram Code from Simulink" on page 3-34
- "Generating C Code from Simulink Ladder" on page 3-36
- "Verify Generated Ladder Diagram Code" on page 3-38
- "Simulink PLC Coder Workflow vs. Rockwell Automation RSLogix IDE Workflow" on page 3-42
- "Create Custom Instruction in PLC Ladder Diagram Models" on page 3-44

Simulink PLC Coder Ladder Diagram Code Generation

Note Ladder diagram generation from Stateflow charts will be removed in a future release. To generate ladder diagrams, use Simulink models instead. To create Simulink models compatible with ladder logic generation, do one of the following:

- Use the blocks from the PLC Ladder library to create a model that is compatible with ladder diagram generation. To open the PLC Ladder library, type plcladderlib at the MATLAB command prompt.
- Import ladder logic from a L5X file with the plcimportladder function.

To generate ladder logic from the Simulink models, use these functions: plcgeneratecode and plcgeneraterunnertb


Ladder Diagram (LD) is a graphical programming language used to develop software for programmable logic controllers (PLCs). It is one of the languages that the IEC 61131 Standard specifies for use with PLCs.

A program in Ladder Diagram notation is a circuit diagram that emulates circuits of relay logic hardware. The underlying program uses Boolean expressions that translate readily to switches and relays. When you program complex applications directly in Ladder Diagram notation, it is challenging because you must write the programs with only Boolean variables and expressions.

Using Simulink PLC Coder, you can generate Ladder Diagram code for your applications from a Stateflow chart (Stateflow). The benefits are:

- You can design your application by using states and transitions in a Stateflow chart. Once you
 complete the design, you can generate Ladder Diagram code in XML or another format. You then
 import the generated code to an IDE such as CODESYS 3.5 or RSLogix AOI 5000 and view the
 Ladder Diagram.
- When you test your Stateflow chart by using a set of inputs, you can reuse these inputs to create a test bench for the Ladder Diagram code. You import the test bench to your PLC IDE and compare the results of simulation with the results of running the Ladder Diagram. If the results agree, the original Stateflow chart is equivalent to the generated Ladder Diagram code.

The figure shows a simple Stateflow chart with three states and two transitions. Based on the transition conditions, the chart transitions from one state to another.

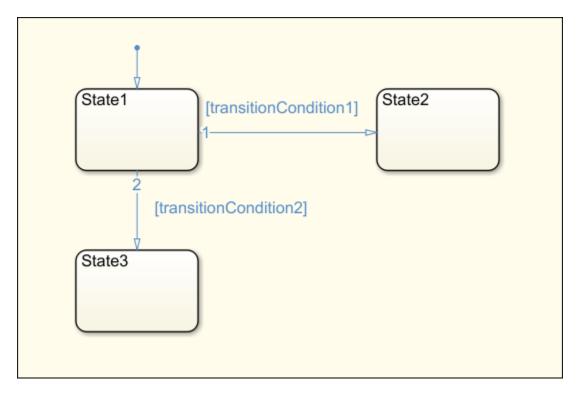


The state State1 is active as long transitionCondition1 and transitionCondition2 are not true. This means, State1 is active in one of these two cases:

- The chart has started execution through the default transition.
- The previous active state is also State1 and the conditions transitionCondition1 and transitionCondition2 are false.

State3 is active in one of these two cases:

- The previous active state is State1, transitionCondition1 is false, and transitionCondition2 is true.
- The previous active state is also State3. State3 is a terminating state.

You can import the generated Ladder Diagram code to CODESYS 3.5 and view the diagram. A portion of the Ladder Diagram is shown.

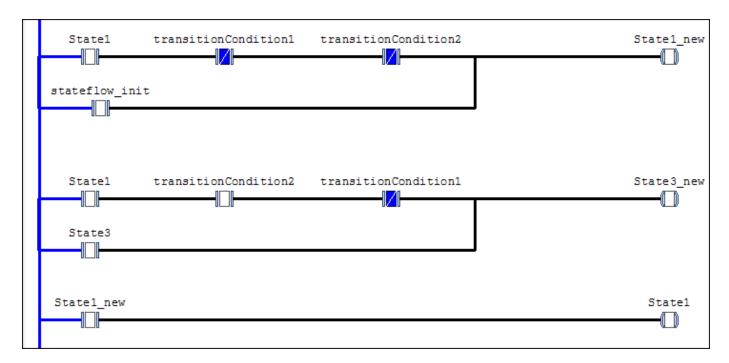

In the preceding Ladder Diagram, each rung of the ladder ends in a coil. The coil corresponds to a state of the original chart. The contacts before the coil determine if the coil receives power. You can compare the Ladder Diagram visually with the Stateflow chart. For instance, the coil State1_new receives power in one of these two cases:

- The normally open contact State1 is closed and the normally closed contacts transitionCondition1 and transitionCondition2 are open.
- The normally open contact stateflow_init is closed. This contact corresponds to the default transition.

Once the coil State1_new receives power, the contact State1_new further down in the ladder is then closed and the coil State1 receives power.

The Ladder Diagram executes from top to bottom and from left to right.

Ladder Diagram Generation Workflow

- **1** Before generating Ladder Diagram code from your Stateflow chart, confirm that your chart is ready for code generation.
 - See "Prepare Chart for Simulink PLC Coder Ladder Diagram Code Generation" on page 3-6.
- Generate Ladder Diagram code from the Stateflow chart. The code is in a format suitable for import to an IDE.

Generate a test bench along with the code. The test bench is in the Structured Text language. You can later import the code along with the test bench to your IDE. The test bench invokes the Ladder Diagram code and compares the output against the expected outputs from the original Stateflow chart.

See "Generate Simulink PLC Coder Ladder Diagram Code from Stateflow Chart" on page 3-9.

3 Import the generated Ladder Diagram code to your CODESYS 3.5 IDE. Validate the diagram in the IDE by using the generated test bench.

See "Import Ladder Diagram Code to CODESYS 3.5 IDE and Validate Diagram" on page 3-14.

Prepare Chart for Simulink PLC Coder Ladder Diagram Code Generation

Note Ladder diagram generation from Stateflow charts will be removed in a future release. To generate ladder diagrams, use Simulink models instead. To create Simulink models compatible with ladder logic generation, do one of the following:

- Use the blocks from the PLC Ladder library to create a model that is compatible with ladder diagram generation. To open the PLC Ladder library, type plcladderlib at the MATLAB command prompt.
- Import ladder logic from a L5X file with the plcimportladder function.

To generate ladder logic from the Simulink models, use these functions: plcgeneratecode and plcgeneraterunnertb

This example shows how to prepare your Stateflow chart for Ladder Diagram code generation. Once your chart is ready, you can generate Ladder Diagram code from the chart.


For the complete Ladder Diagram code generation workflow, see "Ladder Diagram Generation Workflow" on page 3-4.

Design PLC Application with Stateflow

Use Stateflow to design state machines that model PLC controllers. Your Stateflow chart must have these properties:


- The inputs and outputs to the chart must be Boolean. They correspond to the input and output terminals of your PLC.
- Each state in the chart must correspond to an output. The output is true if the state is active.

To ensure that each state in the chart is mapped to an output, in the Properties dialog box of each state, select **Create output for monitoring**. Then, select **Self activity**.

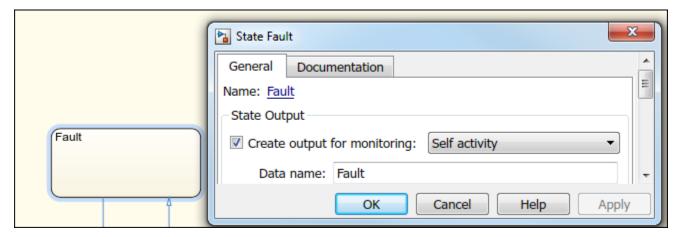

• The transition conditions must involve only Boolean operations such as \sim , &, and | between the inputs.

For instance, in the following chart, transitionCondition1, and transitionCondition2 are Boolean inputs to the model. State1, State2, and State3 correspond to Boolean outputs from the model.

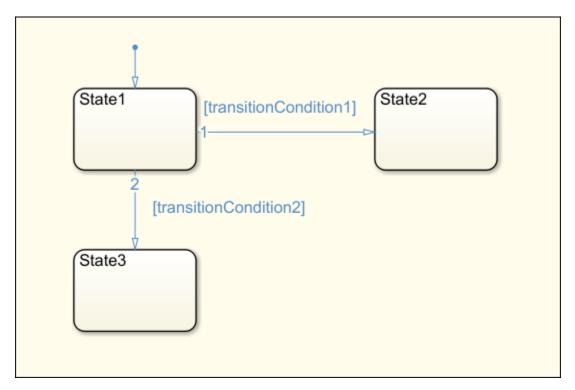

Some advanced Stateflow features on page 3-18 are not supported because of inherent restrictions in Ladder Diagram semantics. You can use the function plccheckforladder to check if the chart has the required properties. You can also use the function plcprepareforladder to change certain chart properties so that the chart is ready for Ladder Diagram code generation.

You can start generating Ladder Diagram code from the chart. See the example in "Generate Simulink PLC Coder Ladder Diagram Code from Stateflow Chart" on page 3-9.


Create Test Harness for Chart

If you want to generate a test bench for validation of the Ladder Diagram code, create a test harness for the Stateflow chart. The test harness can consist of multiple test cases. Using the test harness, Simulink PLC Coder can generate test benches for validation of the Ladder Diagram code.


You can manually create a test harness by using the Signal Builder block or autogenerate a test harness by using Simulink Design Verifier $^{\text{\tiny M}}$. To autogenerate the test harness:

- 1 Right-click the chart or a subsystem containing the chart. Select **Design Verifier > Generate Tests for Subsystem**.
- 2 After test creation, select **Create harness model**.

The harness model is created. The model consists of the original subsystem coupled with inputs from a Signal Builder block. The block consists of multiple test cases, so that the states and transitions in your model are covered at least once.

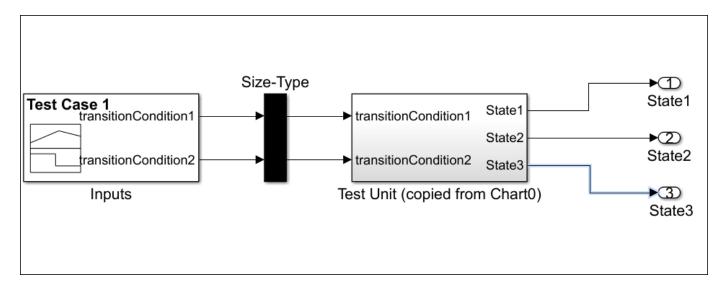

You can also create tests by using other blocks from the Simulink library. However, you must ensure that the inputs to the chart are Boolean.

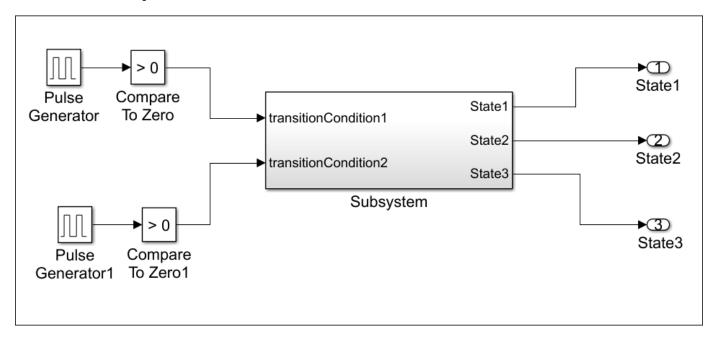

You can now generate Ladder Diagram code from the chart and validate the diagram.

- To generate Ladder Diagram code only, use the original Stateflow chart.
- To generate Ladder Diagram code with test bench, use the Stateflow chart coupled with the Boolean inputs from the test cases. For instance, if you create a harness model with Simulink Design Verifier, use the harness model for the Ladder Diagram code and test bench generation instead of the original chart.

See "Generate Simulink PLC Coder Ladder Diagram Code from Stateflow Chart" on page 3-9.

Generate Simulink PLC Coder Ladder Diagram Code from Stateflow Chart

Note Ladder diagram generation from Stateflow charts will be removed in a future release. To generate ladder diagrams, use Simulink models instead. To create Simulink models compatible with ladder logic generation, do one of the following:

- Use the blocks from the PLC Ladder library to create a model that is compatible with ladder diagram generation. To open the PLC Ladder library, type plcladderlib at the MATLAB command prompt.
- Import ladder logic from a L5X file with the plcimportladder function.

To generate ladder logic from the Simulink models, use these functions: plcgeneratecode and plcgeneraterunnertb


This example shows how to:

- Generate code from a Stateflow chart that you can view as Ladder Diagram in your IDE.
- Generate test bench for validation of the Ladder Diagram code in your IDE.

For the complete Ladder Diagram code generation workflow, see "Ladder Diagram Generation Workflow" on page 3-4.


Stateflow Chart and Ladder Logic Diagram

The figure shows a Stateflow chart that implements three-aspect logic, a decision logic for many railway signaling applications.

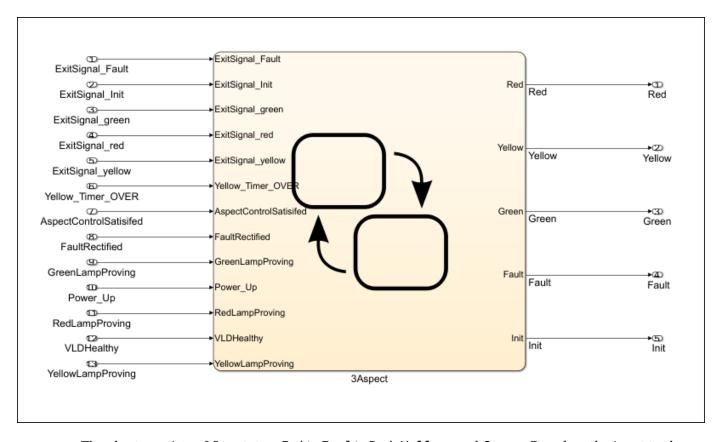

The chart consists of five states: Init, Fault, Red, Yellow, and Green. Based on the input to the chart, transitions to any of these states can take place. For instance, the state Red becomes active in the following scenarios:

- Initialization and power up: The previous state is Init and the condition Power Up is true.
- Fault rectification: The previous state is Fault and the condition VLDHealthy & FaultRectified is true.
- Transitions from other colors: The previous state is Green or Yellow, the conditions that allow transition to Red are true, and the conditions that allow transition to another color or to the Fault state are false.
- **Staying red**: The previous state is **Red** and the conditions that allow transition to another state are false.

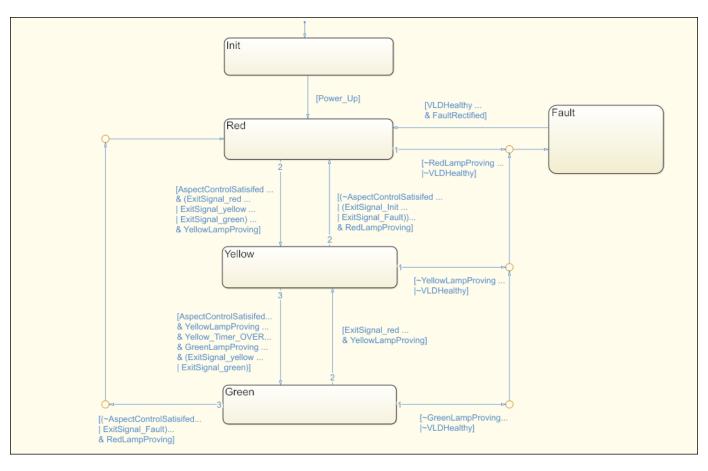

The figure shows a portion of the Ladder Diagram code generated from the chart when viewed in the CODESYS 3.5 IDE. The Ladder Diagram consists of contacts (normally open and normally closed) and coils (normal, set, and reset).

```
Red_new
 ٦ŀ
             T_2_3_trans
 Green
                            T_2_1_trans
 -
                                                -171
 Init
               Power Up
  -1 1-
                 ⊢IĒ
  Red
             T_4_1_trans
                            T_4_2_trans
  1 1
Yellow
             T_5_2_trans
                            T_5_1_trans
 -\mathbb{L}
             T_2_2_trans
                            T_2_1_trans
 \dashv \vdash
 \dashv \vdash
Yellow
             T_5_1_trans
                            T_5_2_trans
 ┨╟
Red new
```

You can map elements of the original Stateflow chart to these coils and contacts. For instance, the coil Red_new corresponds to the update of the state Red in the Stateflow chart. For the coil to receive power, one of the following must be true:

- Initialization and power up: The normally open contacts Init and Power Up must be closed.
- Fault rectification: The normally open contacts Fault and T_1_1_trans must be closed. The contact T_1_1_trans represents the transition condition VLDHealthy & FaultRectified in the chart.
- **Transitions from other colors**: The normally open contact Green must be closed and the following must be true:
 - The normally open contact T_2_3_trans must be closed. This contact corresponds to the chart condition that must be true for transition to the Red state.
 - The normally closed contacts T_2_1_trans and T_2_2_trans must stay closed. These contacts correspond to the chart condition that must be false for transition to the Red state. If the conditions are true, the contacts open and the coil no longer receives power.
- **Staying red**: The normally open contact Red must be closed, and the normally closed contacts T_4_1_trans and T_4_2_trans must stay closed. These contacts correspond to the chart conditions that must be false for the Red state to continue to be active. If the conditions are true, the contacts open and the coil no longer receives power.

Generate Ladder Diagram from Chart

To generate Ladder Diagram code from the model plcdemo_ladder_three_aspect:

- 1 Open the model.
- 2 Open the **PLC Coder** app. Click the **PLC Code** tab.
- **3** Specify the target IDE for which to generate the Ladder Diagram code.
 - Click **Settings**. Specify a supported IDE for the option "Target IDE" on page 12-3. See "IDEs Supported for Ladder Diagram Code Generation". Click **OK**.
- 4 Right-click the chart and select **PLC Code > Generate Ladder Logic for Chart**.

If code generation is successful, in the subfolder plcsrc of the current working folder, you see the file <code>ModelName.xml</code>. You import this file to your IDE and view the Ladder Diagram. For the CODESYS 3.5 IDE, see "Import Ladder Diagram Code to CODESYS 3.5 IDE and Validate Diagram" on page 3-14.

You can also use the function plcgenerateladder to generate Ladder Diagram code from a Stateflow chart.

Generate Ladder Diagram Along with Test Bench

You can generate a test bench to validate the generated Ladder Diagram code. You import the code together with the test bench in your IDE and validate the Ladder Diagram against the original Stateflow chart using the test bench. To generate test bench along with the Ladder Diagram code:

- 1 Open the **PLC Coder** app. Click the **PLC Code** tab.
- **2** Click **Settings**. Select the option "Generate Testbench for Subsystem" on page 12-7.

3 Right-click the chart and select PLC Code > Generate Ladder Logic for Chart.

The test benches use the inputs to the original Stateflow chart. Therefore, you can create test harnesses for the original chart and reuse them for validation of the Ladder Diagram code.

You can also use the function plcgenerateladder to generate test benches.

After generating the Ladder Diagram code and the test benches, you can import them to your IDE. For the CODESYS 3.5 IDE, see "Import Ladder Diagram Code to CODESYS 3.5 IDE and Validate Diagram" on page 3-14.

Import Ladder Diagram Code to CODESYS 3.5 IDE and Validate Diagram

Note Ladder diagram generation from Stateflow charts will be removed in a future release. To generate ladder diagrams, use Simulink models instead. To create Simulink models compatible with ladder logic generation, do one of the following:

- Use the blocks from the PLC Ladder library to create a model that is compatible with ladder diagram generation. To open the PLC Ladder library, type plcladderlib at the MATLAB command prompt.
- Import ladder logic from a L5X file with the plcimportladder function.

To generate ladder logic from the Simulink models, use these functions: plcgeneratecode and plcgeneraterunnertb.

This example shows how to import generated Ladder Diagram code to an IDE and validate the generated code against the original Stateflow chart by using the generated test bench.

For this example, the CODESYS 3.5 IDE is used. You can also use one of the other supported IDE. See "IDEs Supported for Ladder Diagram Code Generation".

For the complete Ladder Diagram code generation workflow, see "Ladder Diagram Generation Workflow" on page 3-4.


Import Ladder Diagram XML

After code generation, you see the Ladder Diagram code XML file <code>ModelName.xml</code> in a subfolder <code>plcsrc</code> of the current working folder. To import the generated XML and view the Ladder Diagram in the CODESYS 3.5 IDE:

- **1** Create an empty project.
- 2 Import the Ladder Diagram code to the project.

Select **Project** > **Import PLCOpenXML** and navigate to the folder containing the XML file.


A dialog box opens with a full list of the components imported from the XML. If you generate a test bench for validation, you also see the testbench.

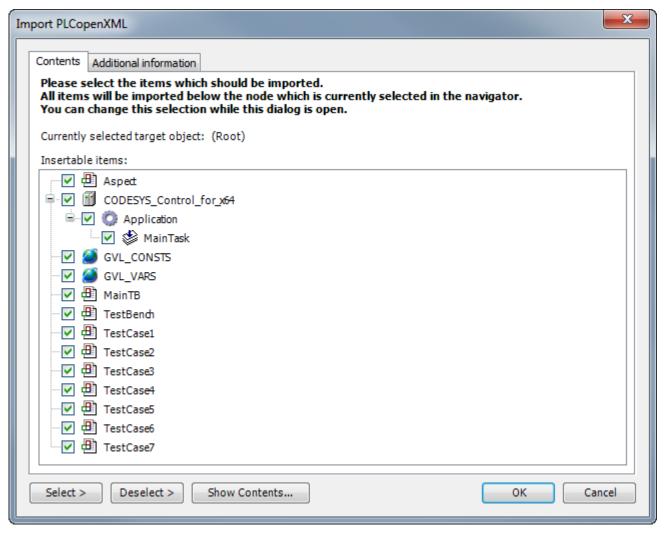

3 On the **POUs** pane, you see the project. View the Ladder Diagram in the project.

You can compare the Ladder Diagram with the original Stateflow chart.

For instance, if you generate Ladder Diagram code from the model plcdemo_ladder_three_aspect, in the Ladder Diagram, you can identify the transition from the Fault state to the Red state.

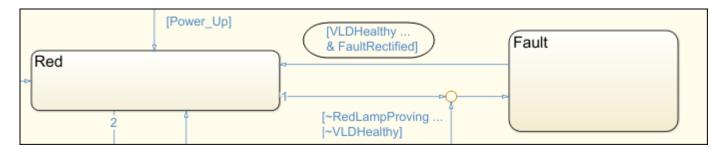

The transition appears in the Ladder Diagram in three steps:

The normally open contacts VLDHealthy and FaultRectified are closed. Coil T_1_1_trans receives power and is energized.



b The normally open contacts Fault and T_1_1_trans are closed. The coil Red_new receives power and is energized. Other conditions not shown in figure must also be satisfied.



c The normally open contact Red new is closed. The coil Red receives power and is energized.



Besides coils and normally open contacts h, the Ladder Diagram also uses:

- Normally closed contacts H/H: They appear if the ~ operator is used in a transition condition.
- Set coils and reset coils They are used in the Ladder Diagram for chart initialization. Reset coils are also used if you enforce additional safeguards against multiple states from being simultaneously active. See the argument InsertGuardResets in plcgenerateladder.

For more information about these symbols, refer to the IEC 61131-3 specifications.

Select **Online** > **Simulation**. Click the (Build) button and verify that there are no build errors.

If the option is not active, you might have to change the version number in your XML. Search for the version number in the XML and depending on the patch that you have, replace it with the following version number:

- CODESYS V3.5 SP6 Patch1: 3.5.4.30
- CODESYS V3.5 SP6 Patch3: 3.5.6.30
- CODESYS V3.5 SP8 Patch2: 3.5.8.20
- CODESYS V3.5 SP8 Patch4: 3.5.8.40

Verify Ladder Diagram with Test Bench

In your project, you see the generated test bench. To simulate using the test bench and validate your generated code:

- Click the (Login) button and log in to the emulator device.
- Click the (Start) button and begin simulation.
- **3** Double-click a test bench in your project. You see the following variables updating to reflect the results of validation.

- The variable testCycleNum increases from 0 to the number of cycles.
- The variable testVerify remains TRUE as long as the test bench verification succeeds.

Restrictions on Stateflow Chart for Ladder Diagram Generation

Note Ladder diagram generation from Stateflow charts will be removed in a future release. To generate ladder diagrams, use Simulink models instead. To create Simulink models compatible with ladder logic generation, do one of the following:

- Use the blocks from the PLC Ladder library to create a model that is compatible with ladder diagram generation. To open the PLC Ladder library, type plcladderlib at the MATLAB command prompt.
- Import ladder logic from a L5X file with the plcimportladder function.

To generate ladder logic from the Simulink models, use these functions: plcgeneratecode and plcgeneraterunnertb


Ladder Diagram semantics must be represented with switches and relays. Therefore, if you intend to generate a Ladder Diagram from a Stateflow chart, you cannot use some advanced features in your chart. The Stateflow chart must have the following form:

- The inputs and outputs to the chart must be Boolean. These inputs and outputs correspond to the input and output terminals of your PLC.
- Each state of the chart must correspond to a chart output.
- The expressions controlling the transition between states must involve only Boolean operations between the inputs.

In addition, the chart must have the following properties. You can use the function plccheckforladder to check if the chart has the required properties. You can also use the function plcprepareforladder to change certain chart properties so that the chart is ready for Ladder Diagram code generation.

- The chart **Action Language** must be C.
- Disable the following chart properties:
 - Enable Super Step Semantics
 - Execute (enter) Chart At Initialization
 - Initialize Outputs Every Time Chart Wakes Up
- The chart must have at least one input and output. The input and output data must be Boolean.
- Each output must correspond to a state in the chart. The output is true if the state is active.

To ensure that each state in the chart is mapped to an output, in the Properties dialog box of each state, select **Create output for monitoring**. Then, select **Self activity**.

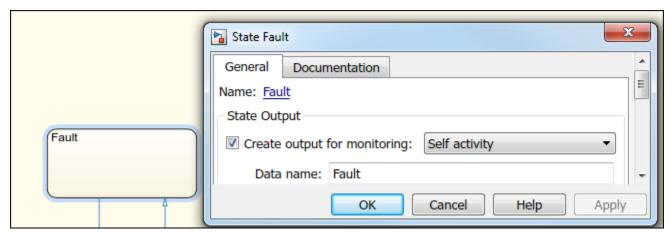

- The chart must not have data with scope other than input or output.
- The chart must not include:
 - · Atomic subcharts
 - Multiple default transition
 - Simulink functions
 - · Parallel states
 - State hierarchy
 - History junctions
 - Dangling transitions
 - Super transitions crossing subchart boundaries
 - Conditional default paths
 - Self transitions

See Also

Related Examples

- "Prepare Chart for Simulink PLC Coder Ladder Diagram Code Generation" on page 3-6
- "Generate Simulink PLC Coder Ladder Diagram Code from Stateflow Chart" on page 3-9
- "Import Ladder Diagram Code to CODESYS 3.5 IDE and Validate Diagram" on page 3-14

More About

• "Simulink PLC Coder Ladder Diagram Code Generation" on page 3-2

Supported Features in Ladder Diagram

The ladder import feature of Simulink PLC Coder allows you to import Ladder Diagram created with Rockwell Automation IDEs such as RSLogix 5000 and Studio 5000 into the Simulink environment as a model.

Supported Ladder Elements

Simulink PLC Coder supports the following ladder elements:

- Boolean variables
- Data access to array elements, bus elements, bit, and constant variables.
- · Multiple rungs
- Simple Jump, Temporary End, and other supported execution control elements.
- Ladder diagram blocks. See plcladderlib.
- Ladder Diagram Instructions. See "Instructions Supported in Ladder Diagram" on page 14-2
- L5X Datatypes:

L5X Data Types	Simulink Types
BOOL	Boolean datatype
SINT	Int8 datatype
INT	Int16 datatype
DINT	Int32 datatype
REAL	Single datatype
TIMER	Timer bustype
COUNTER	Counter bustype
CONTROL	Control bustype
UDT	UDT bustype
AOI	AOI bustype

- Ladder diagram tags
 - · Controller Tags
 - Program Tags
 - · AOI Tags such as Input, Output and InOut

See Also

plccleartypes | plcgeneratecode | plcgeneraterunnertb | plcimportladder |
plcladderlib | plcladderoption | plcloadtypes

More About

- "Import L5X Ladder Files into Simulink" on page 3-22
- "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27

- "Generating Ladder Diagram Code from Simulink" on page 3-34
- "Generating C Code from Simulink Ladder" on page 3-36
- "Verify Generated Ladder Diagram Code" on page 3-38
- "Simulink PLC Coder Workflow vs. Rockwell Automation RSLogix IDE Workflow" on page 3-42

Import L5X Ladder Files into Simulink

This example shows how to import a Ladder Diagram from an .L5X file created by using Rockwell Automation IDEs such as RSLogix 9 5000 and Studio 5000 into the Simulink environment. The import operation is performed by using the plcimportladder function.

Description of the Ladder Diagram

The figure shows a Ladder Diagram with a simple timer. The Ladder Diagram consists of four rungs with contacts (Switch_A, Light1, Motor_timer.DN), coils (Light1, Light2, Motor), and TON timer function.



The simple_timer.L5X file was created by using the RSLogix 5000 IDE. A snippet of the .L5X file is shown.

```
<?xml version="1.0" encoding="UTF-8" standalone="yes"?>
<RSLogix5000Content SchemaRevision="1.0" SoftwareRevision="30.00"</pre>
TargetName="simple timer" TargetType="Controller"
ContainsContext="false" Owner="Arun Mathew Iype, MathWorks"
ExportDate="Mon Nov 12 16:35:28 2018" ExportOptions="NoRawData
L5KData DecoratedData ForceProtectedEncoding AllProjDocTrans">
<Controller Use="Target" Name="simple timer'</pre>
ProcessorType="Emulate 5570" MajorRev="30"
MinorRev="11" TimeSlice="20" ShareUnusedTimeSlice="1"
ProjectCreationDate="Mon Nov 12 16:33:36 2018"
LastModifiedDate="Mon Nov 12 16:33:43 2018"
SFCExecutionControl="CurrentActive"
SFCRestartPosition="MostRecent" SFCLastScan="DontScan"
ProjectSN="16#0000 0000"
MatchProjectToController="false" CanUseRPIFromProducer="false"
InhibitAutomaticFirmwareUpdate="0" PassThroughConfiguration="EnabledWithAppend"
DownloadProjectDocumentationAndExtendedProperties="true"
DownloadProjectCustomProperties="true"
ReportMinorOverflow="false">
<RedundancyInfo Enabled="false" KeepTestEditsOnSwitchOver="false"</pre>
IOMemoryPadPercentage="90"
DataTablePadPercentage="50"/>
<Security Code="0" ChangesToDetect="16#ffff_ffff_fffff_/>
<SafetyInfo/>
<DataTypes/>
<Modules>
<Module Name="Local" CatalogNumber="Emulate 5570" Vendor="1" ProductType="14"</pre>
ProductCode="53" Major="30" Minor="11" ParentModule="Local" ParentModPortId="1"
Inhibited="false" MajorFault="true">
<EKey State="ExactMatch"/>
<Ports>
<Port Id="1" Address="0" Type="ICP" Upstream="false">
```

```
<Bus Size="10"/>
</Port>
</Ports>
</Module>
</Modules>
<AddOnInstructionDefinitions/>
<Tags/>
<Programs>
<Programs>
<Program Name="MainProgram" TestEdits="false" MainRoutineName="MainRoutine" Disabled="false" UseAsFolder="false">
...
<Tags>
```

Import Ladder Diagram

Before importing the .L5X file into Simulink:


- Verify the Ladder Diagram file is a valid .L5X file. The file can be verified by compiling it in Rockwell Automation IDE.
- If the file is valid, copy the .L5X file into a folder with read and write permissions. You can also create a separate folder to store all the imported files along with the original Ladder Diagram .L5X file.

Use the plcimportladder function to import the ladder into Simulink. For this example, the program Name of the ladder is MainProgram and the MainRoutineName is MainRoutine.


```
>> plcimportladder('simple timer.L5X')
```

The Ladder Diagram is imported into the pwd\simple_timer.slx Simulink model. The state information of the ladder elements is stored in the data store memory and updated by the model during simulation. The plcout\simple_timer_value.m file gets called during the pre-load stage of the Simulink model. This file sets the timer initial values in Motor timer data store memory.


The simple timer.slx Simulink model consists of a Ladder Diagram Controller as the top unit.

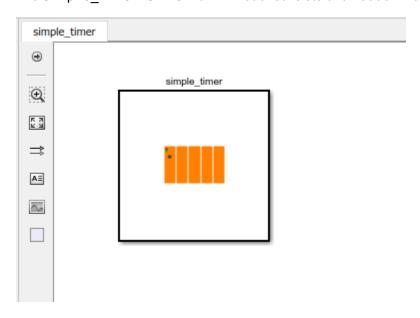

This controller has a Main Task and Controller Tags. The Main Task consists of a Main Program.

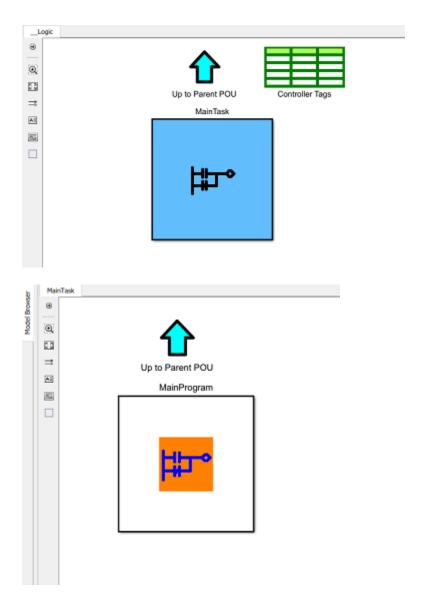

The Main Program contains the Simulink implementation of the simple_timer.L5X Ladder Diagram. The ladder rung executes from top to bottom and left to right.

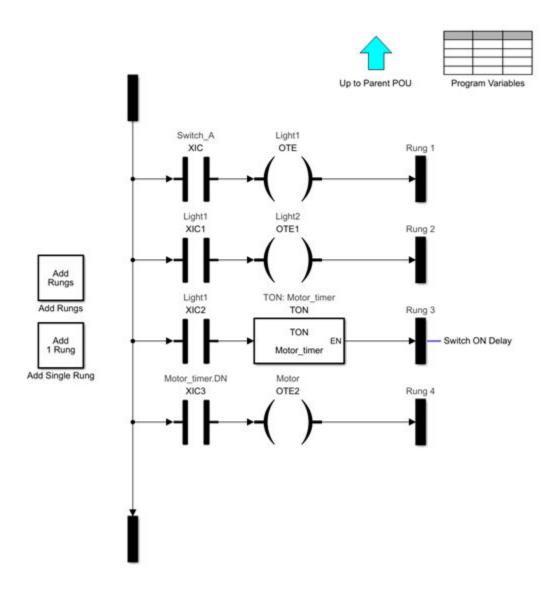

You can use the Signal Builder block to create test inputs for Switch_A and verify the operation of the imported ladder. You can also generate a PLC Ladder Diagram code or a C code for the top-level subsystem. If you want to edit the imported ladder, the Simulink blocks are in the template Ladder Diagram Library. To open the library, enter:

plcladderlib

If your Ladder Diagram has comments associated with the rung, these comments are also imported to Simulink. In the Simulink environment, the comments are connected to the respective rung. For example, the Ladder Diagram for the simple timer has a comment Switch ON Delay. After importing the ladder diagram to Simulink, the comment is also imported as seen in Rung 3 of the imported Simulink model.

Similarly, when you generate Ladder Diagram code from a Simulink model containing a rung comment, the comment is also generated in the (L5X) ladder file. If your Simulink model has multiple comments associated with the rung, in the generated Ladder Diagram, these comments are merged into a single comment with each individual comment appearing in a separate line.

If you have an L5X file containing an AOI with mixed ordered arguments, this order is preserved during import and export of the files.

See Also

plccleartypes | plcgeneratecode | plcgeneraterunnertb | plcimportladder |
plcladderlib | plcladderoption | plcloadtypes

More About

- "Supported Features in Ladder Diagram" on page 3-20
- "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27
- "Generating Ladder Diagram Code from Simulink" on page 3-34
- "Generating C Code from Simulink Ladder" on page 3-36
- "Verify Generated Ladder Diagram Code" on page 3-38
- "Simulink PLC Coder Workflow vs. Rockwell Automation RSLogix IDE Workflow" on page 3-42


Modeling and Simulation of Ladder Diagrams in Simulink

The ladder modeling feature of Simulink PLC Coder enables you to create Ladder Diagrams in the Simulink environment as a model. After creating the Ladder Diagram, you can simulate and generate code for the Ladder Diagram models from within the Simulink environment.

1 To create a Ladder Diagram, open the Simulink PLC Coder Ladder library. At the MATLAB command line, enter:

plcladderlib

The Ladder library opens containing all the blocks required for building the Ladder Diagram in Simulink.

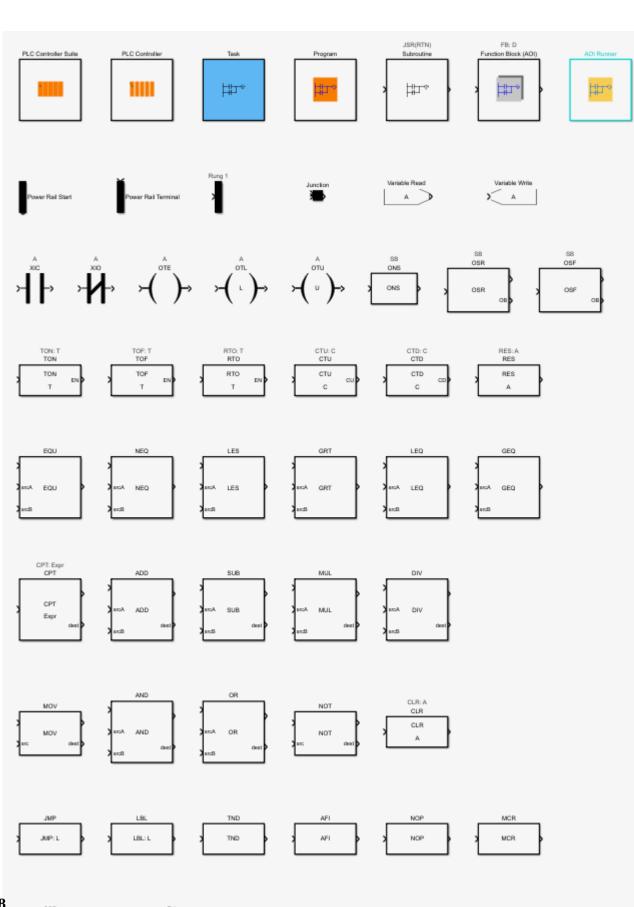




- 2 Create a blank Simulink model. You can drag appropriate blocks from the library to build your ladder logic model in Simulink. For each block, you can double-click the block to see the block parameters and use the help menu to view its description. For more information on the Ladder instructions that are implemented by these blocks, refer to the LOGIX 5000 Controllers General Instructions Reference Manual.
- 3 The Simulink PLC Coder Ladder library contains top level ladder logic block such as PLCControllerSuite, PLC Controller, Task, Ladder Diagram Program, Ladder diagram Subroutine, Ladder Diagram Function Block (AOI), and AOI Runner. All these blocks are organization blocks (Ladder Diagram containers) that cannot be on Ladder Diagram rungs. Apart from these organizational blocks, other blocks from the library cannot be top level ladder logic block for simulation.




- PLCControllerSuite can hold controller tags that are visible for all ladder logic blocks in this
 controller, and also can contain Task block.
- PLCController allows you to build ladder logic directly. All the tags in the controller level ladder diagram are controller tags (global variables or I/O symbols)
- Task is used to contain Ladder Diagram programs that are using the same sample time and priority.

Note Code generation for empty Task blocks is not supported. If a Task block is empty, the software does not issue warnings or errors during code generation, but the generated code produces errors in Rockwell IDEs.

- Ladder Diagram Program enables you to build ladder logic directly. Program-level Ladder Diagram can have program scope variables and also can access controller tags if defined.
- Ladder Diagram Subroutine enables you to create and define a named ladder routine. You can
 edit the logic implemented by the subroutine by clicking the Routine Logic button under
 the block parameters menu of this block.
- Ladder Diagram Function Block (AOI) enables you to create the Ladder Diagram function block. You can edit the parameters and specifications of this block by using the various options available under the block parameters menu of this block.
- AOI Runner is special program block that can contain only one Ladder Diagram Function Block (AOI: add-on instruction) designed for AOI testing (test bench generation and verification).
- **4** Drag a PLCControllerSuite block into the blank model you created in the previous step. You can double-click each organizational unit to traverse to the lower level ladder logic semantics and build your Ladder Diagram. The empty ladder logic semantics is shown.

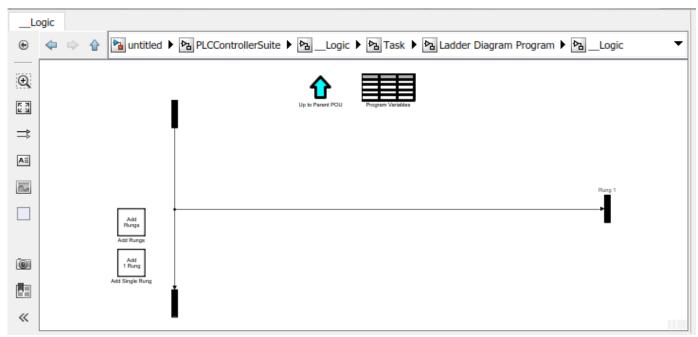


5 Use the XIC and Motor blocks from the library to construct a simple ladder diagram. Use **Add Rungs** or **Add 1 Rung** buttons in the ladder logic semantic to add a new rung. All added blocks must be on the rung. Use the Junction block to merge rung branches.

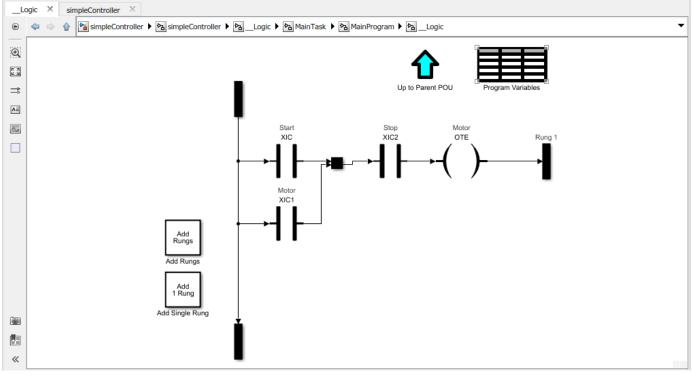

6 Double-click each new block added to the rung and specify the tags. In Ladder Diagrams, tags (variables) are used for representing all inputs, outputs, and internal memory. The tag can be a variable name or an expression like:

- · Variable Name: Start, Stop, Switch
- Bit Access: MyInt.0, MyInt.31
- Array Element: A[1], B[2,3], C[idx], D[i, j]. Use of braces for indexing is not allowed in a tag expression. For example, A(2) is illegal.
- Structure: A.B, C.D, E.F.GMixture: A[1].B[i,j].C[3].D
- Expressions: A[3].B > C.D; A[3]+B[4].C
- 7 The tags can have attributes such as Data Type, Initial Value, and size. To change the attributes of the tag, open the **Program Variables** table within the Ladder Diagram Program block. You can delete the unused variables in the variable table by selecting the **Delete** option. You must select **Apply** for the changes to take effect. Go to controller level block, and double-click the **Controller Tags** table to specify the global variable and I/O symbol attributes.
- 8 To add rung comments to your model in Simulink, create a connected annotation (see Motor Control Logic in image) to the rung terminal block. For more information on annotation connectors, see "Associate Annotations with Blocks and Areas".

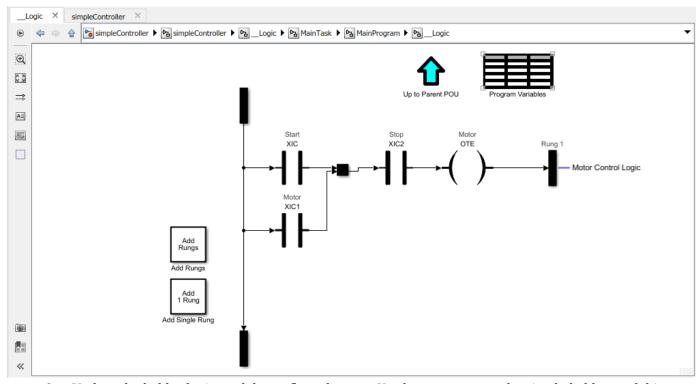

9 Update the ladder logic model to reflect changes. You have now created a simple ladder model in Simulink.

Model an AOI Prescan Routine


- **1** Double-click the Function Block (AOI) inside the parent program unit.
- 2 Select the **Allow Prescan Routine** check box and click **Apply** button.
- **3** Click the **Prescan Routine** button.
- **4** Add the logic to **Prescan Routine** Ladder Diagram.

Note If Function Block (AOI) is at the top level of a ladder diagram model and not inside a parent program unit, the **Allow Prescan Routine** option is not enabled.


Ladder Model Simulation

To perform Ladder Diagram simulation in Simulink, you must connect appropriate input and output blocks to the ladder model.


- 1 Use the plcladderoption function to enable Animation. At the MATLAB command line, enter: plcladderoption('simpleController','Animation','on')
- 2 Connect input and output ports to the PLCControllerSuite block to provide inputs for simulation and read the outputs. You must modify the attributes of the switch and motor tags. To change the attributes of the tag, open the **Program Variables** table within the Ladder Diagram Program block and set them to the values shown.

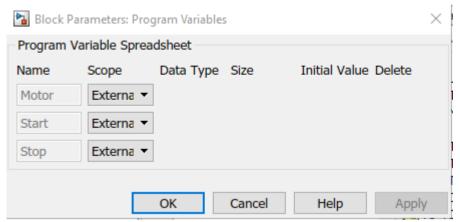

3 Go to controller level block and double-click the **Controller Tags** table to specify the global variable and I/O symbol attributes.

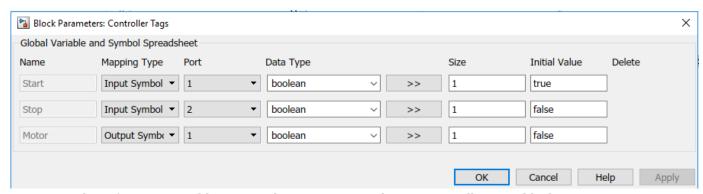

- 4 The software now adds input and output ports to the PLCControllerSuite block. You can use Simulink blocks to add inputs to the ladder model. For example, you can use the Constant block to add Boolean inputs to mimic switch behavior.
- Traverse to the Ladder Diagram Program block of the ladder model and **Step Forward** through the simulation. The software uses the inputs provided, runs a behavioral simulation, and animates the ladder rungs and blocks based on the execution state.

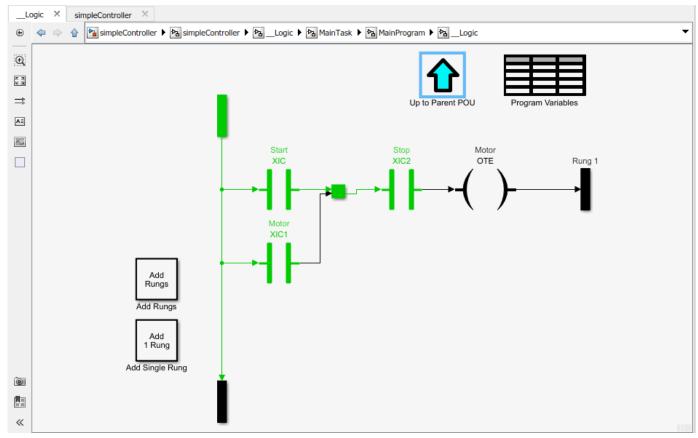

6 You can continue stepping forward or run a continuous simulation to the end.

See Also


plccleartypes | plcgeneratecode | plcgeneraterunnertb | plcimportladder |
plcladderlib | plcladderoption | plcloadtypes

More About


- "Supported Features in Ladder Diagram" on page 3-20
- "Import L5X Ladder Files into Simulink" on page 3-22
- "Generating Ladder Diagram Code from Simulink" on page 3-34
- "Generating C Code from Simulink Ladder" on page 3-36
- "Verify Generated Ladder Diagram Code" on page 3-38
- "Simulink PLC Coder Workflow vs. Rockwell Automation RSLogix IDE Workflow" on page 3-42

Generating Ladder Diagram Code from Simulink

The following example demonstrates how to import a simple Ladder Diagram from an .L5X file (simpleController.L5X) into the Simulink environment and then generate Ladder Diagram (L5X) from the imported model. The Ladder Diagram .L5X file was created using RSLogix 5000 IDE and contains contacts and coils representing switches and motor. The following is a snapshot of the ladder structure.

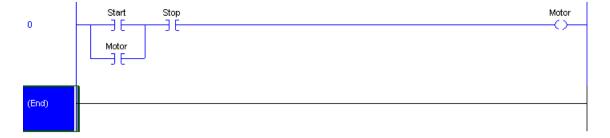

- 1 Use the plcladderimport function to import the ladder into Simulink.
 - [mdlName,mdlLib,busScript] = plcimportladder('simpleController.L5X','OpenModel','On')
- 2 The imported model contains a PLC Controller block named simpleController, followed by a Task block named MainTask and finally a Ladder Diagram Program block named MainProgram. The model imported into Simulink has blocks that implement the functionality of the contacts and coils.

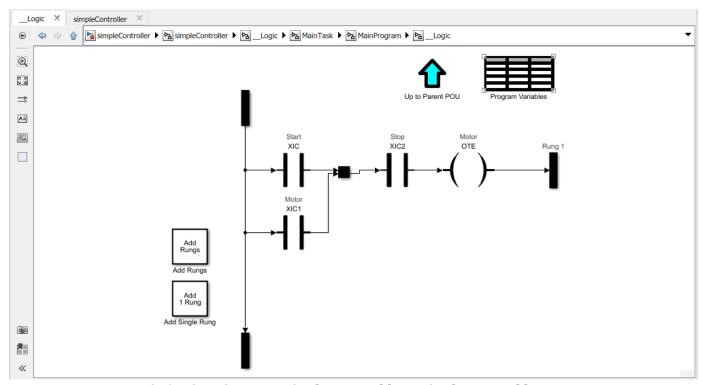

3 Generate code for the subsystem, simpleController/simpleController.

generatedFiles = plcgeneratecode('simpleController/simpleController');

```
PLC code generation successful for 'simpleController/simpleController'.

Generated ladder files:
plcsrc\simpleController_gen.L5X
```

Note You cannot generate Structured Text code from the Ladder Diagram blocks. The Ladder feature supports only ladder code generation.

See Also

plccleartypes | plcgeneratecode | plcgeneraterunnertb | plcimportladder |
plcladderlib | plcladderoption | plcloadtypes

More About

- "Supported Features in Ladder Diagram" on page 3-20
- "Import L5X Ladder Files into Simulink" on page 3-22
- "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27
- "Generating C Code from Simulink Ladder" on page 3-36
- "Verify Generated Ladder Diagram Code" on page 3-38
- "Simulink PLC Coder Workflow vs. Rockwell Automation RSLogix IDE Workflow" on page 3-42

Generating C Code from Simulink Ladder

The following example demonstrates how to import a simple ladder diagram from an .L5X file (simpleController.L5X) into the Simulink environment and then generate C code from the imported model. You must have a valid Simulink Coder license and necessary compilers to generate C code from the model. For more information, see "Get Started with Simulink Coder" (Simulink Coder).

The .L5X file was created using RSLogix 5000 IDE and contains contacts and coils representing switches and motor. The following is a snapshot of the ladder structure.


```
Start Stop Motor

| Hotor | Ho
```

Use the plcladderimport function to import the ladder into Simulink.

```
[mdlName,mdlLib,busScript] = plcimportladder('simpleController.L5X','OpenModel','On')
```

The imported model contains a PLC Controller block named simpleController, followed by a Task block named MainTask and finally a Ladder Diagram Program block named MainProgram. The model imported into Simulink has blocks that implement the functionality of the contacts and coils.

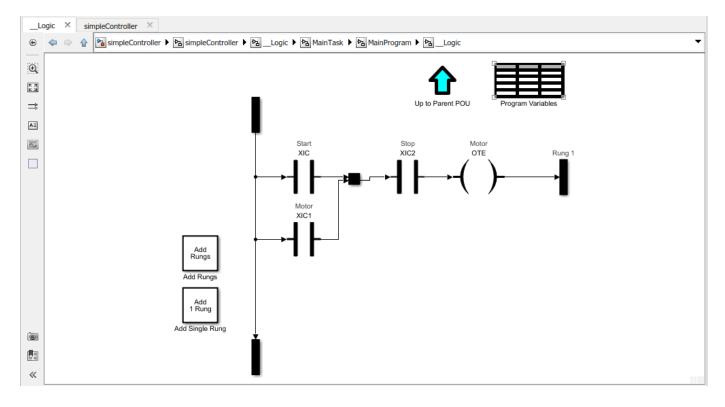

To generate C code for the subsystem, simpleController/simpleController you must first enable 'FastSim' option for the Simulink Ladder Diagram model.

```
currentState = plcladderoption('simpleController/simpleController','FastSim','on');
```

Open the Configuration Parameters dialog box from the model editor by clicking **Modeling > Model Settings**.

Alternately, type the following commands at the MATLAB command prompt.

```
cs = getActiveConfigSet(model);
openDialog(cs);
```

Ensure that a valid **Toolchain** is selected.

In the model window, initiate code generation and the build process for the model by using any of the following options:

- · Click the Build Model button.
- Press Ctrl+B.
- In the Apps gallery, under Code Generation, click Embedded Coder. The C Code tab opens.
 Select Build> Build.
- Invoke the rtwbuild command from the MATLAB command line.

See Also


plccleartypes | plcgeneratecode | plcgeneraterunnertb | plcimportladder |
plcladderlib | plcladderoption | plcloadtypes

More About

- "Supported Features in Ladder Diagram" on page 3-20
- "Import L5X Ladder Files into Simulink" on page 3-22
- "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27
- "Generating Ladder Diagram Code from Simulink" on page 3-34
- "Verify Generated Ladder Diagram Code" on page 3-38

Verify Generated Ladder Diagram Code


The following example demonstrates how to import a simple Ladder Diagram from an .L5X file (simpleXIC.L5X) into the Simulink environment and generate test bench code for it. The Ladder Diagram .L5X file was created using RSLogix 5000 IDE and contains an AOI named simpleXIC with contact and coil representing a switch and a light. The following is a snapshot of the ladder structure.

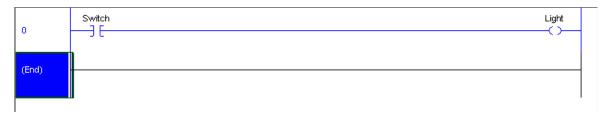


1 Use the plcladderimport function to import the ladder into Simulink.

```
[mdlName,mdlLib,busScript] = plcimportladder('simpleXIC.L5X',...
'OpenModel','On','TopAOI','simpleXIC')
```


The imported model contains an AOI Runner block named simpleXIC_runner, followed by a Ladder Diagram Function (AOI) block named simpleXIC.

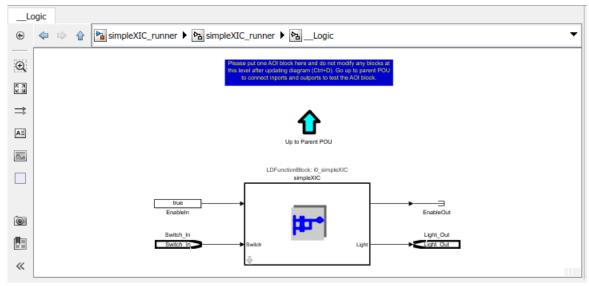

3 Add Signal Builder input block, Scope and output ports as shown.

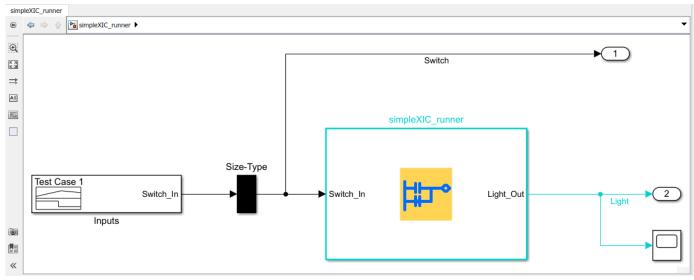

4 Modify the Signal Builder input to mimic a switch operation as shown.

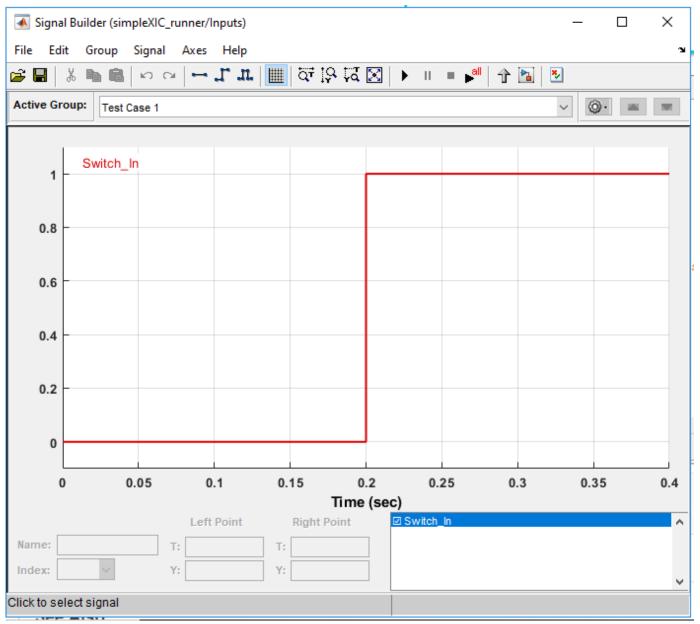


5 Generate test-bench for the Ladder Diagram model.

```
Tbcode = plcgeneraterunnertb('simpleXIC_runner/simpleXIC_runner')
Tbcode =
   1×1 cell array
   {'C:\runnerTB\simpleXIC runner.L5X'}
```

If the test-bench code generation is successful, a test-bench file simpleXIC_runner.L5X is created. The generated AOI test bench file can be verified on Rockwell Automation IDE.

If you have created the Ladder Diagram model in Simulink and are generating Ladder Diagram (L5X) code, you can also use the $\bf Generate\ testbench\ for\ subsystem$ option available on the $\bf PLC\ Code$

Generation pane in the Configuration Parameters dialog box to generate test bench code along with ladder code. When the selected subsystem is ladder AOI Runner block and test bench option is on, the generated code will include test bench, selected AOI, as well as dependent AOI and UDT types.

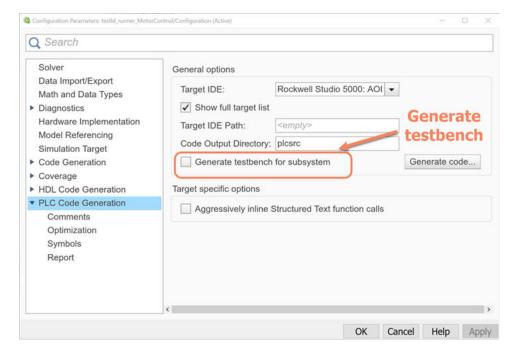

See Also

plccleartypes | plcgeneratecode | plcgeneraterunnertb | plcimportladder |
plcladderlib | plcladderoption | plcloadtypes


More About

- "Supported Features in Ladder Diagram" on page 3-20
- "Import L5X Ladder Files into Simulink" on page 3-22
- "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27
- "Generating Ladder Diagram Code from Simulink" on page 3-34
- "Generating C Code from Simulink Ladder" on page 3-36
- "Simulink PLC Coder Workflow vs. Rockwell Automation RSLogix IDE Workflow" on page 3-42

Simulink PLC Coder Workflow vs. Rockwell Automation RSLogix IDE Workflow

These flowcharts show the workflow comparison in a ladder diagram created by Simulink PLC Coder versus a ladder diagram created in the Rockwell Automation RSLogix IDE.

- You first place either the PLC Controller or PLC Controller Suite block onto the blank Simulink model page. This block contains all the tasks, programs, program tags, controller tags, routines, AOI blocks and so on. For more information, see PLC Controller.
- You place the Task block inside the PLC Controller or PLC Controller suite block. The Task blocks house the programs, program tags, routines, AOI blocks, and so on. For more information see, Task.
- You place the Ladder Diagram Program block or blocks inside the Task block. The Ladder Diagram
 Program block contains program tags, routines, AOI blocks, and so on. For more information see,
 Program
- You next place JSR (Jump To Subroutine) blocks within the Ladder Diagram Program block. The JSR blocks contain the ladder rungs, ladder logic and AOI blocks within them. For more information see ,Subroutine.
- You can place the AOI block either inside the JSR block or inside the Ladder Diagram Program block. For more information see, Function Block (AOI).

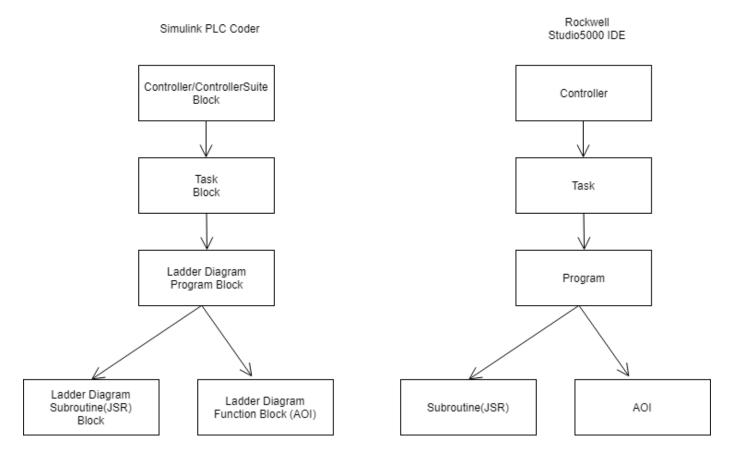

See Also

Function Block (AOI) | PLC Controller | PLC Controller Suite | Program | Subroutine | Task

More About

- "Supported Features in Ladder Diagram" on page 3-20
- "Import L5X Ladder Files into Simulink" on page 3-22
- "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27
- "Generating Ladder Diagram Code from Simulink" on page 3-34
- "Verify Generated Ladder Diagram Code" on page 3-38


Create Custom Instruction in PLC Ladder Diagram Models

You can create user-defined instructions for your ladder models by using the Custom Instruction block. You can store these blocks containing custom instructions in a user-defined library named plcuserlib.slx. You can also import, simulate, and export your ladder instructions by using your custom blocks.


Create User-Defined Instruction

To create a user-defined instruction, use a Custom Instruction block added to the Simulink PLC Coder Ladder Library.

- To open the Ladder Library, at the MATLAB command line, enter: plcladderlib
 - The Ladder Library opens all the blocks required for building the Ladder Diagram in Simulink.
- 2 To create a new Simulink library, in the **Library** tab click **New > Library**. From the Simulink start page, select **Blank Library** and click **Create Library**.
- **3** Drag a Custom Instruction block from the Ladder Library to the new library that you created.
- **4** To build your own ladder logic model, double-click your Custom Instruction block to see the block parameters. Use the **Help** menu to view their descriptions.

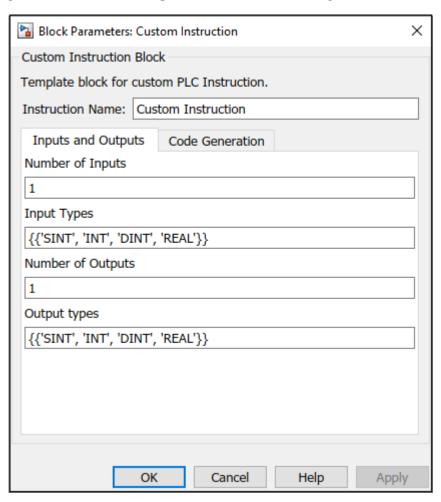

- 5 In **Instruction Name** text field, give a name to your instruction. Specify the inputs and outputs required for your instruction block. Click **Apply**, and then click **OK**.
- To look inside the mask, click $\label{eq:problem}$ in the Custom Instruction block. The blocks inside the mask enable the instruction to simulate with other PLC Ladder instructions. The user-defined logic is included in the Instruction Enable block.

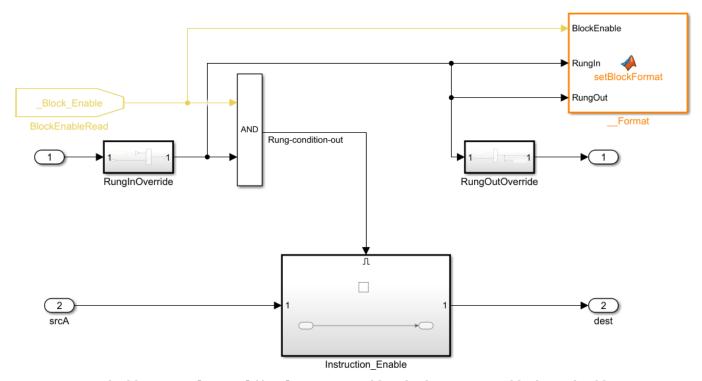


7 Save the library as plcuserlib.slx. You can add multiple instruction blocks to this library.

Calculate Square Root by using Custom Instruction Block

This example shows how to calculate square root of an input signal by using a Custom Instruction block.

- 1 To open the Simulink Start Page, on the MATLAB **Home** tab, click **Simulink**.
- 2 Select **Blank Library** and click **Create Library**.
- **3** Save the library as plcuserlib.slx to a folder on the MATLAB path.
- **4** To open the PLC Ladder Library, at the MATLAB command line, enter:
 - plcladderlib
- **5** Drag the Custom Instruction block from plcladderlib to your user-defined library plcuserlib.slx.
- **6** Double-click the Custom Instruction block to open the Block Parameters.
- 7 Specify the **Instruction Name** as **SQR**. Check that the **Number of Inputs** is 1 and **Input Types** is specified as a cell array of allowed data types. Similarly, check that the **Number of Outputs** is 1 and **Output Types** is specified as a cell array of allowed data types. Click **OK**.
- Click $\frac{1}{2}$ in the SQR block and double-click the Instruction Enable subsystem.

- 9 Inside the Instruction_Enable subsystem, add a Sqrt block from the Simulink / Math Operations Library. Double-click this block and select signedSqrt from Main>Function, and then click OK.
- **10** Connect the input and output ports to the input and output ports of Sqrt block by using Data Type Conversion blocks.

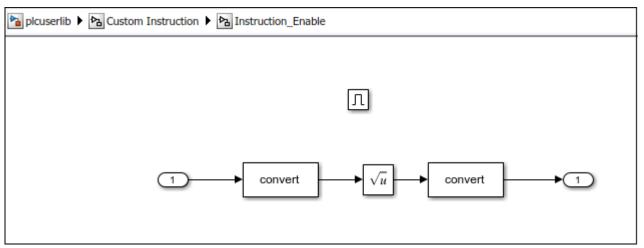


- 11 Navigate to the top level of the library. Click **Lock Links** and **Unlock Library** in the **Library** tab, and then save the library. Simulink PLC Coder can now use the SQR instruction when plcuserlib.slx is on the MATLAB path. You can drag this instruction to your models from the library that you have created and saved.
- 12 To verify if Simulink PLC Coder has identified the newly created instruction, at the MATLAB command line, enter:

plcladderinstructions

This command lists the instructions that Simulink PLC Coder can use. The supported instructions displayed in the output includes the SQR instruction.

The example in the image shows the use of the SQR instruction inside an Add-On Instruction block.

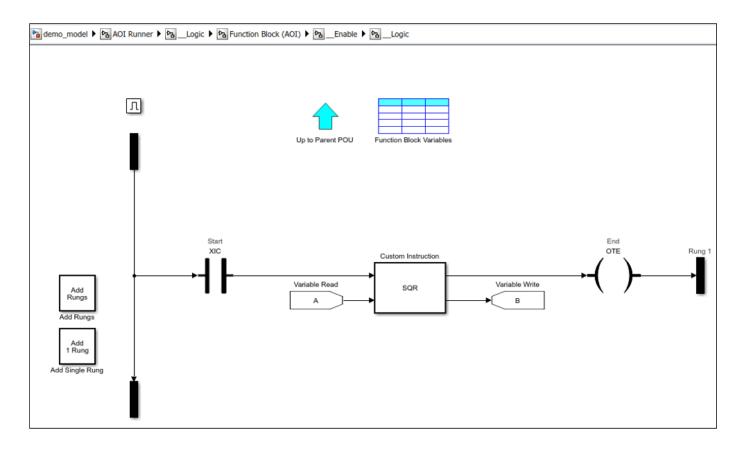

Limitations

The Custom Instruction block does not support instructions:

- With data type array and struct (composite) as arguments.
- That require internal data storage (states).

See Also

Custom Instruction | plcimportladder | plcladderinstructions | plcladderlib

More About

- "Supported Features in Ladder Diagram" on page 3-20
- "Import L5X Ladder Files into Simulink" on page 3-22
- "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27
- "Generating Ladder Diagram Code from Simulink" on page 3-34

Generating Test Bench Code

- "How Test Bench Verification Works" on page 4-2
- "Integrate Generated Code with Custom Code" on page 4-3
- "Import and Verify Structured Text Code" on page 4-4
- "Verify Generated Code That Has Multiple Test Benches" on page 4-7

How Test Bench Verification Works

The Simulink PLC Coder software simulates your model and automatically captures the input and output signals for the subsystem that contains your algorithm. This set of input and output signal data is the test bench data. The coder also automatically generates a test bench, or test harness, using the test bench data.

The test bench runs the generated code to verify that the output is functionally and numerically equivalent to the output from the execution of a Simulink model. The following table shows how the test bench compares the expected and actual data values.

Data Type	Comparison	Error Tolerance
integer	absolute	0
boolean	absolute	0
single	relative	0.0001
double	relative	0.00001

The relative tolerance comparison for single or double data types uses the following logic:

```
IF ABS(actual_value - expected_value) > (ERROR_TOLERANCE * expected_value) THEN
    testVerify := FALSE;
END_IF;
```

To verify the generated code using the test bench, import the generated Structured Text and the test bench data into your target IDE. You can import test bench code:

- · Manually.
- Automatically, including running the test bench.

For more information, see "Import and Verify Structured Text Code" on page 4-4.

Depending on the target IDE platform, the Simulink PLC Coder software generates code into one or more files. See "Files Generated by Simulink PLC Coder" on page 1-14 for list of the target IDE platforms and the possible generated files.

Integrate Generated Code with Custom Code

For the top-level subsystem that has internal state, the generated FUNCTION_BLOCK code has ssMethodType is a special input argument that the coder adds to the input variables section of the FUNCTION_BLOCK section during code generation. ssMethodType enables you to execute code for Simulink Subsystem block methods such as initialization and computation steps. The generated code executes the associated CASE statement based on the value passed in for this argument.

To use ssMethodType with a FUNCTION_BLOCK for your model, in the generated code, the top-level subsystem function block prototype has one of the following formats:

Has Internal State	ssMethodType Contains
Yes	The generated function block for the block has an extra first parameter ssMethodType of integer type. This extra parameter is in addition to the function block I/O parameters mapped from Simulink block I/O ports. To use the function block, first initialize the block by calling the function block with ssMethodType set to integer constant SS_INITIALIZE. If the IDE does not support symbolic constants, set ssMethodType to integer value 0. For each follow-up invocation, call the function block with ssMethodType set to constant SS_STEP. If the IDE does not support symbolic constants, set ssMethodType to integer value 1. These settings cause the function block to initialize or compute and return output for each time step. If you select Keep top level ssMethod name same as non-top level, the ssMethodType SS_STEP will be generated as SS_OUTPUT with integer value 3.
No	The function block interface only has parameters mapped from Simulink block I/O ports. There is no ssMethodType parameter. To use the function block in this case, call the function block with I/O arguments.

For non top-level subsystems, in the generated code, the subsystem function block prototype has one of the following formats:

Has Internal State	ssMethodType Contains
	The function block interface has the ssMethodType parameter. The generated code might have SS_INITIALIZE, SS_OUTPUT, or other ssMethodType constants to implement Simulink semantics.
	The function block interface only has parameters mapped from Simulink block I/O ports. There is no ssMethodType parameter.

Import and Verify Structured Text Code

After you generate code and test benches for your subsystem, you can import them to your target IDE. Using the test bench data, you can verify that the results from your generated code match your simulation results.

If you want to import the generated code, see "Generate and Automatically Import Structured Text Code" on page 1-17.

Generate, Import, and Verify Structured Text

If you are working with the PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0/5.50 or Phoenix Contact PC WORX 6.0 IDE, see "Import and Verify Structured Text to PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0 and Phoenix Contact PC WORX 6.0 IDEs" on page 4-4.

Otherwise, to generate, import, and verify Structured Text code:

- **1** Specify that test bench code must be generated for the subsystem.
 - a Open the **PLC Coder** app. Click the **PLC Code** tab.
 - b Click **Settings**.
 - **c** Select "Generate Testbench for Subsystem" on page 12-7.

If you do not specify that test bench code must be generated, when you automatically verify the generated code, you see the error Testbench not selected.

You can generate the code and testbench, and manually import them to your target IDE. For information on how to import generated code, see the user manual for your target IDE.

Alternatively, after code generation, import and verify the generated code automatically. Right-click the subsystem and select **PLC Code > Generate, Import, and Verify Code for Subsystem**. The software:

- **a** Generates the code and test bench.
- **b** Starts the target IDE.
- **c** Creates a project.
- **d** Imports the generated code and test bench to the new project in the target IDE.
- **e** Runs the generated code on the target IDE to verify it.

For information on:

- IDEs not supported for automatic import and verification, see "Troubleshoot Automatic Import Issues" on page 1-18.
- Possible reasons for long testbench code generation time, see "Troubleshooting: Long Test Bench Code Generation Time" on page 4-5.

Import and Verify Structured Text to PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0 and Phoenix Contact PC WORX 6.0 IDEs

Before you can automatically import generated code to this IDE, create an Empty template. You must have already set your target IDE to KW-Software MULTIPROG 5.0 or Phoenix Contact PC WORX 6.0.

- Start the PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0/5.50 or Phoenix Contact PC WORX 6.0 IDE.
- 2 Select File > Delete Template. Delete any template named Empty, and click OK when done.
- 3 Select File > New Project, select Project Wizard, then click OK.
 - a In the **Project Name** field, type Empty,
 - **b** In the **Project Path** field, type or select a path to which you have write privileges.
 - c Click Next.
 - **d** In the remaining wizard pages, click **Next** to leave the default selections. At the end of the wizard, click **Finish**.

The IDE is updated with the new Empty project tree.

- In the project, delete everything under the following nodes:
 - Logical POUs
 - Physical Hardware
- Verify that the project tree has only top-level nodes for Libraries, Data Types, Logical POUs, and Physical Hardware. There must not be any subtree nodes.
- 6 In the IDE, select **File > Save As Template**.
- 7 In **Template Name**, type Empty.
- 8 Click OK.
- **9** Close the IDE interface.

Open your model, right-click the Subsystem block, and select one of the following:

- PLC Code > Generate and Import Code for Subsystem
- PLC Code > Generate, Import, and Verify Code for Subsystem

If you automatically generate, import, and verify code, the software:

- **1** Generates the code and test bench.
- **2** Starts the target IDE.
- **3** Creates a project.
- 4 Imports the generated code and test bench to the new project in the target IDE.
- **5** Runs the generated code on the target IDE to verify it.

Troubleshooting: Long Test Bench Code Generation Time

If code generation with test bench takes too long, one possible reason is that the test bench data size exceeds the limit that Simulink PLC Coder can handle. The test bench data size is directly related to the number of times the input signal is sampled during simulation. For large simulation time or more frequent sampling, the test bench data can be large.

To reduce test bench generation time, do one of the following:

- Reduce the duration of the simulation.
- Increase the simulation step size.

• If you want to retain the simulation duration and the step size, divide the simulation into multiple parts. For a simulation input signal with duration [0, t], divide the input into multiple parts with durations $[0, t_1]$, $[t_1, t_2]$, $[t_2, t_3]$, etc., where $t_1 < t_2 < t_3 < \ldots < t$. Generate test bench code for each part separately and manually import them together to your IDE.

See Also

Related Examples

• "Verify Generated Code That Has Multiple Test Benches" on page 4-7

Verify Generated Code That Has Multiple Test Benches

You can generate code that has multiple test benches from your subsystem. For the generated code to have multiple test benches, the input to your subsystem must consist of multiple signal groups.


To generate multiple test benches for your subsystem:

1 Provide multiple signal groups as inputs by using a Signal Builder block with multiple signal groups.

Instead of manually entering a Signal Builder block and creating multiple signal groups, you can use Simulink Design Verifier to create a test harness model from the subsystem. In the test harness model, a Signal Builder block with one or more signal groups provides input to the subsystem. You can use this Signal Builder block to provide inputs to your subsystem. If your model is complex, Simulink Design Verifier can create a large number of signal groups. See "Troubleshooting: Test Data Exceeds Target Data Size" on page 4-8.


To create your Signal Builder block by using Simulink Design Verifier:

- a Right-click the subsystem and select **Design Verifier > Generate Tests for Subsystem**.
- **b** In the Simulink Design Verifier Results Summary window, select **Create harness model**.

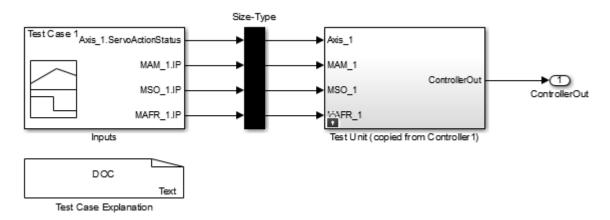

• Open the Inputs block in the test harness model. The Inputs block is a Signal Builder block that can have one or more signal groups.

In the Signal Builder window, make sure that more than one signal group is available in the **Active Group** drop-down list.

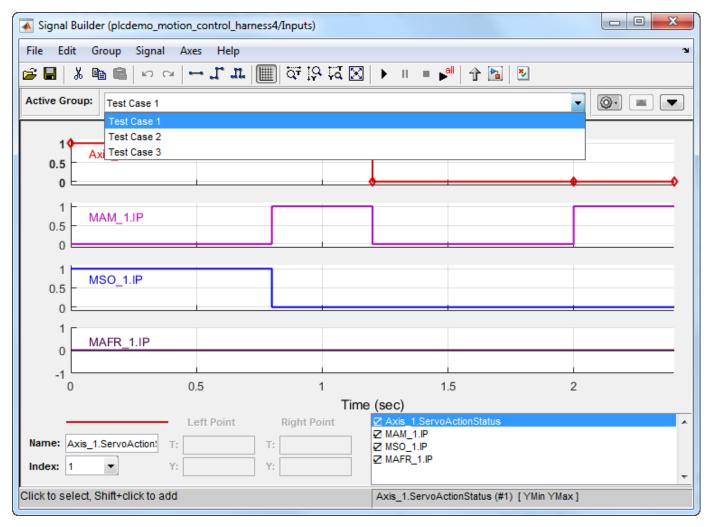

- **d** Copy the Signal Builder block from the test harness model and use this block to provide inputs to your original subsystem.
- **2** Specify that test benches must be generated for the subsystem.
 - a Open the **PLC Coder** app. Click the **PLC Code** tab.
 - b Click Settings.
 - **c** Select "Generate Testbench for Subsystem" on page 12-7.
- 3 Right-click the subsystem and select PLC Code > Generate, Import and Verify Code for Subsystem.

In your target IDE, you can see multiple test benches. Each test bench corresponds to a signal group.

Troubleshooting: Test Data Exceeds Target Data Size

If the test data from the multiple signal groups exceeds the maximum data size on your target, you can encounter compilation errors. If you encounter compilation errors when generating multiple test benches, try one of the following:

- Reduce the number of signal groups in the Signal Builder block and regenerate the test benches.
- Increase the simulation step size for the subsystem.

Limitations

When you are switching between signal groups, the model simulation time must remain the same for the entire simulation. Do not change the model simulation time when switching between signal groups.

See Also

Related Examples

"Import and Verify Structured Text Code" on page 4-4

Code Generation Reports

- "Information in Code Generation Reports" on page 5-2
- "Create and Use Code Generation Reports" on page 5-4
- "View Requirements Links from Generated Code" on page 5-13
- "Working with the Static Code Metrics Report" on page 5-14

Information in Code Generation Reports

The coder creates and displays a Traceability Report file when you select one or more of these options:


GUI Option	Command-Line Property	Description
Generate traceability report	PLC_GenerateReport	Specify whether to create code generation report.
Generate model web view	PLC_GenerateWebview	Include the model web view in the code generation report to navigate between the code and model within the same window. You can share your model and generated code outside of the MATLAB environment.

In the Configuration Parameters dialog box, in the **Report** panel, you see these options.

Code generation report
Generate traceability report
Generate model web view

Note You must have a Simulink Report Generator™ license to generate traceability reports.

The coder provides the traceability report to help you navigate more easily between the generated code and your source model. When you enable code generation report, the coder creates and displays an HTML code generation report. You can generate reports from the Configuration Parameters dialog box or the command line. Traceability report generation is disabled when generating Ladder Diagrams from Stateflow chart. See "Traceability Report Limitations" on page 12-30 . A typical traceability report looks something like this figure:

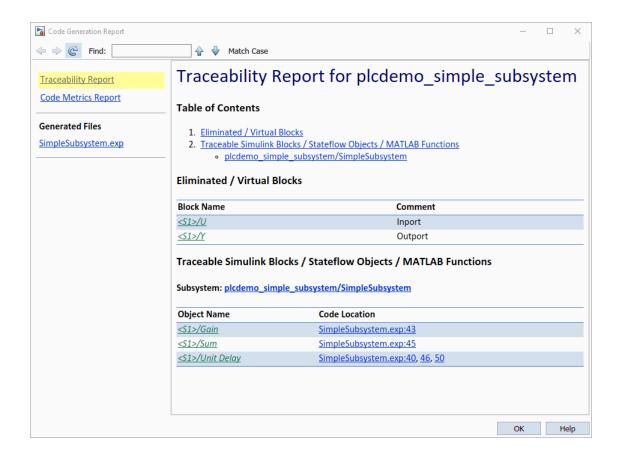


Create and Use Code Generation Reports

"Generate a Traceability Report from Configuration Parameters" on page 5-4 "Keep the Report Current" on page 5-5 "Trace from Code to Model" on page 5-5 "Trace from Model to Code" on page 5-6 "Model Web View in Code Generation Report" on page 5-7 "Generate a Static Code Metrics Report" on page 5-11 "Generate a Traceability Report from the Command Line" on page 5-12

Generate a Traceability Report from Configuration Parameters


To generate a Simulink PLC Coder code generation report from the Configuration Parameters dialog box:

- **1** Verify that the model is open.
- 2 Open the **PLC Coder** app. Click the **PLC Code** tab.
- 3 Click **Settings** and navigate to the **PLC Code Generation** pane.
- 4 To enable report generation, select **Report > Generate traceability report**.
- 5 Click Apply.

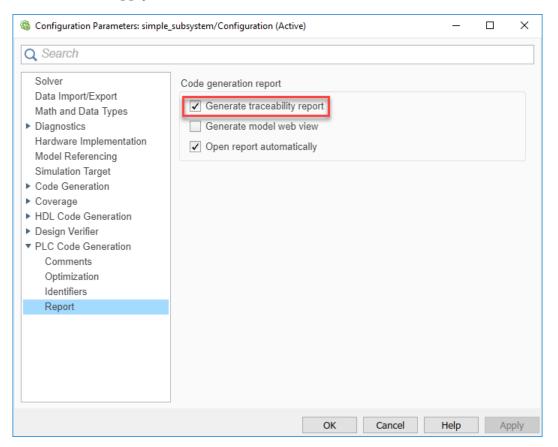

6 Click **Generate PLC Code** to initiate code and report generation. The coder generates HTML report files as part of the code generation process.

The HTML report appears:

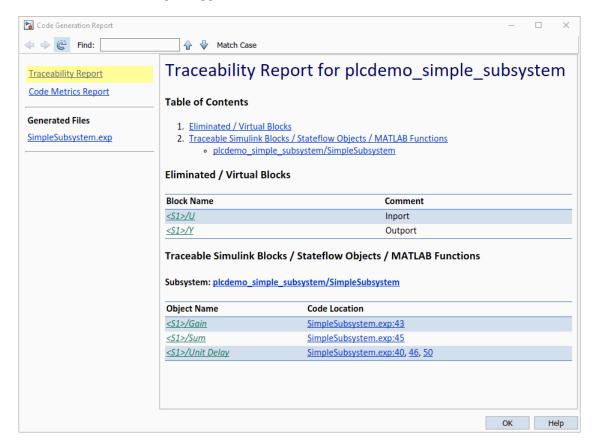

For more information, see:

- "Trace from Code to Model" on page 5-5
- "Trace from Model to Code" on page 5-6

Keep the Report Current

If you generate a code generation report for a model, and then change the model, the report becomes invalid. To keep your code generation report current, after modifying the source model, regenerate code and the report. If you close and then reopen a model, regenerate the report.

Trace from Code to Model


You must have already generated code with a traceability report. If not, see "Generate a Traceability Report from Configuration Parameters" on page 5-4 or "Generate a Traceability Report from the Command Line" on page 5-12.

To trace generated code to your model:

In the generated code HTML report display, look for <S1>/Gain. Code Generation Report has syntax highlighting for easy readability. PLC-specific keywords are highlighted in blue, comments in green, and the rest of the code in black.

```
END VAR
35
     VAR TEMP
36
         rtb Gain: LREAL;
37
     END VAR
     CASE ssMethodType OF
38
39
         SS INITIALIZE:
40
              (* InitializeConditions for UnitDelay: '<S1>/Unit Delay'
41
             UnitDelay DSTATE := 0.0;
42
         SS STEP:
43
              (* Gain:
                                    incorporates:
44
                  Inpor
45
                  Sum:
46
                  UnitDela
47
              rtb Gain :=
                           (U - UnitDelay DSTATE)
48
              (* Outport
                           '<Root>/Y' *)
49
             Y := rtb Gain;
50
              (* Update
                        for UnitDelay: '<S1>/Unit Delay'
51
                        DSTATE := rtb Gain;
             UnitDelay
52
     END CASE:
53
     END FUNCTION BI
               S1/Gain
```

2 In the HTML report window, click a link to highlight the corresponding source block. For example, in the HTML report shown in the previous figure, you click the hyperlink for the Gain block (highlighted) to view that block in the model. Clicking the hyperlink locates and displays the corresponding block in the model editor window. You can use the same method to trace other block from the HTML report.

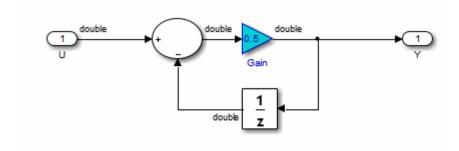

Trace from Model to Code

You can select a component at any level of the model with model-to-code traceability. You can also view the code references to that component in the HTML code generation report. You can select the following objects for tracing:

Subsystem

- Simulink block
- MATLAB Function block
- · Truth Table block
- State Transition Table block
- Stateflow chart, or the following elements of a Stateflow chart:
 - State
 - Transition
 - · Graphical function
 - MATLAB function
 - · Truth table function

You must have already generated code with a traceability report to trace a model component to the generated code. If not, see "Generate a Traceability Report from Configuration Parameters" on page 5-4 or "Generate a Traceability Report from the Command Line" on page 5-12.

To trace a model component to the generated code:

- **1** Open the subsystem.
- 2 Click PLC Code.
- 3 Click the component to trace and in the **Review Results** section, click **Navigate to Code**.
- 4 Selecting **Navigate to Code** activates the HTML code generation report. The following figure shows the result of tracing the Gain block within the subsystem.

In the report, the highlighted tag S1/Gain indicates the beginning of the generated code for the block. You can use the same method to trace from other Simulink, Stateflow, and MATLAB objects to the generated traceability report.

For a programmatic way to trace a block in the model to generated code, see rtwtrace.

Model Web View in Code Generation Report

Model Web Views

To review and analyze the generated code, it is helpful to navigate between the code and model. You can include a web view of the model within the HTML code generation report. You can then share your model and generated code outside of the MATLAB environment. You need a Simulink Report Generator license to include a Web view (Simulink Report Generator) of the model in the code generation report.

Browser Requirements for Web Views

Web views require a web browser that supports Scalable Vector Graphics (SVG). Web views use SVG to render and navigate models.

You can use the following web browsers:

- Mozilla® Firefox® Version 1.5 or later, which has native support for SVG. To download the Firefox browser, go to https://www.mozilla.org/en-US/firefox/.
- · Apple Safari Web browser
- The Microsoft® Internet Explorer® web browser with the Adobe® SVG Viewer plugin. To download the Adobe SVG Viewer plugin, go to www.adobe.com/devnet/svg/.


Note Web views do not currently support Microsoft Internet Explorer 9.

Generate HTML Code Generation Report with Model Web View


This example shows how to create an HTML code generation report which includes a web view of the model diagram.

- 1 Open the plcdemo simple subsystem model.
- 2 Open the PLC Coder app. Click the PLC Code tab.
- **3** Click **Settings** and navigate to the Code Generation pane.
- 4 To enable report generation, select **Report > Generate traceability report**.
- 5 To enable model web view, select **Report > Generate model web view**.
- 6 Click OK.

The dialog box looks something like this figure:

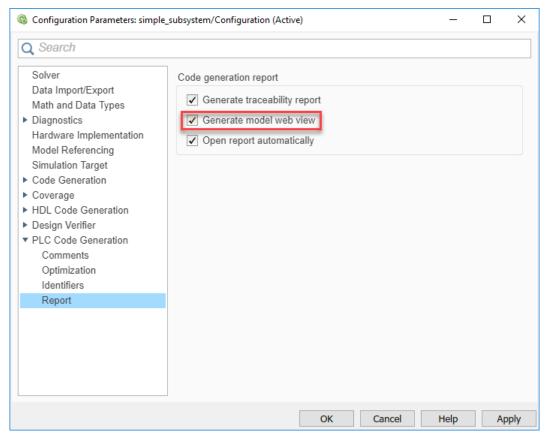

7 Click **Generate PLC Code** to initiate code and report generation. The code generation report for the top model opens in a MATLAB web browser.

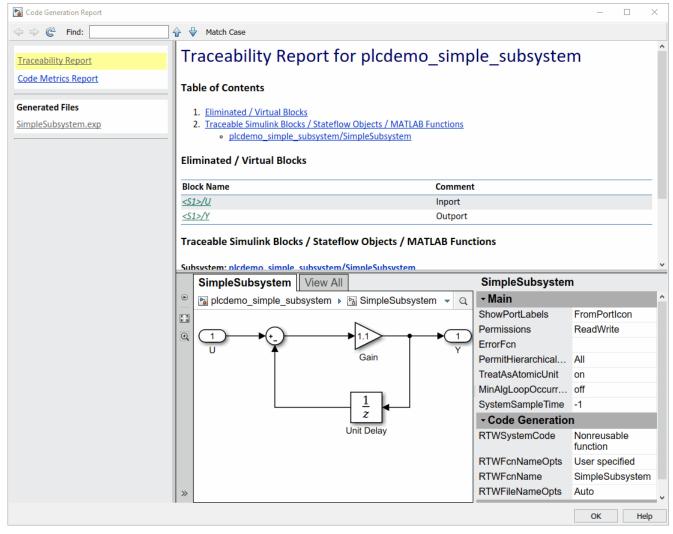

- In the left navigation pane, select a source code file. The corresponding traceable source code is displayed in the right pane and includes hyperlinks.
- **9** Click a link in the code. The model web view displays and highlights the corresponding block in the model.
- 10 To go back to the code generation report for the top model, at the top of the left navigation pane, click the Back button until the report for the top model is displayed.

For more information about navigating between the generated code and the model diagram, see:

- "Trace from Code to Model" on page 5-5
- "Trace from Model to Code" on page 5-6

Model Web View Limitations

When you are using the model web view, the HTML code generation report includes the following limitations:

• Code is not generated for virtual blocks. In the model web view, if you click a virtual block, the code generation report clears highlighting in the source code files.


- Stateflow truth tables, events, and links to library charts are not supported in the model web view.
- Searching in the code generation report does not find or highlight text in the model web view.
- In a subsystem build, the traceability hyperlinks of the root-level inports and outports blocks are disabled.
- If you navigate from the actual model diagram (not the model web view in the report), to the source code in the HTML code generation report, the model web view is disabled and not visible. To enable the model web view, open the report again, see "Open Code Generation Report" (Simulink Coder).

Generate a Static Code Metrics Report

The PLC Coder Static Code Metrics report provides statistics of the generated code. The report is generated when you select **Generate Traceability Report** in the Configuration Parameters dialog box. You can use the Static Code Metrics Report to evaluate the generated PLC code before implementation in your IDE. For more information, see "Working with the Static Code Metrics Report" on page 5-14.

The procedure is the same as generating the Traceability Report.

- 1 Open the **PLC Coder** app. Click the **PLC Code** tab.
- 2 Click **Settings** and navigate to the **PLC Code Generation** pane.
- **3** To enable report generation, select **Report > Generate traceability report**.
- 4 Click OK.
- 5 Click **Generate PLC Code** to initiate code and report generation. The coder generates HTML report files as part of the code generation process. The Code Metrics Report is shown on the left navigation pane.

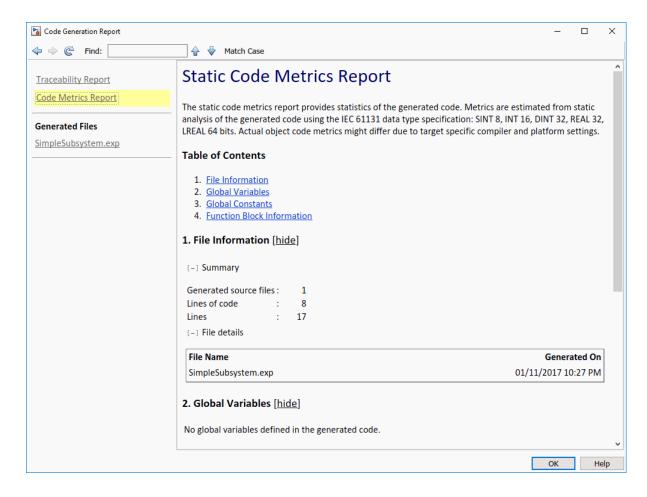

Generate a Traceability Report from the Command Line

To generate a Simulink PLC Coder code generation report from the command-line code for the subsystem, plcdemo_simple_subsystem/SimpleSubsystem:

1 Open a Simulink PLC Coder model, for example:

```
open system('plcdemo simple subsystem');
```

2 Enable the code generation parameter PLC_GenerateReport. To view the output in the model web view, also enable PLC GenerateWebview:

```
set_param('plcdemo_simple_subsystem', 'PLC_GenerateReport', 'on');
set_param('plcdemo_simple_subsystem', 'PLC_GenerateWebView', 'on');
```

3 Generate the code.

```
generatedfiles = plcgeneratecode('plcdemo_simple_subsystem/SimpleSubsystem')
```

A traceability report is displayed. In your model, a **View diagnostics** hyperlink appears at the bottom of the model window. Click this hyperlink to open the Diagnostic Viewer window.

If the model web view is also enabled, that view is displayed.

View Requirements Links from Generated Code

For requirements reviews, design reviews, traceability analysis, or project documentation, you can create links to requirements documents from your model with the Simulink Requirements $^{\text{m}}$ software. If your model has links to requirements documents, you can also view the links from the generated code.

Note The requirement links must be associated with a model object. If requirements links are associated with the code in a MATLAB Function block, they do not appear in generated code comments.

To view requirements from generated code:

- **1** From your model, create links to requirements documents.
 - See, "Requirements Management Interface" (Simulink Requirements).
- 2 For the subsystem for which you want to generate code, specify the following configuration parameters.

Option	Purpose
Include comments on page 12-12	Model information must appear in code comments.
Generate traceability report on page 12-30	After code is generated, a Code Generation Report must be produced.

3 Generate code.

The Code Generation Report opens. The links to requirements documents appear in generated code comments. When you view the code in the Code Generation Report, you can open the links from the comments.

Working with the Static Code Metrics Report

In this section...

"Workflow for Static Code Metrics Report" on page 5-14

"Report Contents" on page 5-14

"Function Block Information" on page 5-15


You can use the information in the Static Code Metrics Report to assess the generated code and make model changes before code implementation in your target IDE.

Before starting, you must familiarize yourself with potential code limitations of your IDE. For example, some IDEs have limits on the number of variables or lines of code in a function block.

For detailed instructions on generating the report, see "Generate a Static Code Metrics Report" on page 5-11.

Workflow for Static Code Metrics Report

This is the basic workflow for using the Static Code Metrics Report with your model.

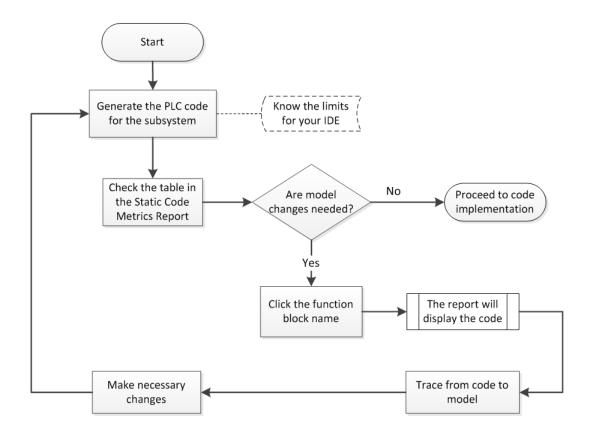


Report Contents

The Static Code Metrics Report is divided into the following sections:

- **File Information**: Reports high-level information about generated files, such as lines and lines of code.
- Global Variables: Reports information about global variables defined in the generated code.
- Global Constants: Reports information about global constants defined in the generated code.
- **Function Block Information**: Reports a table of metrics for each function block generated from your model.

Function Block Information

You can use the information in the Function Block Information table to assess the generated code before implementation in your IDE. The leftmost column of the table lists function blocks with hyperlinks. Clicking a function block name leads you to the function block location in the generated code. From here, you can trace from the code to the model. For more information, see "Trace from Code to Model" on page 5-5.

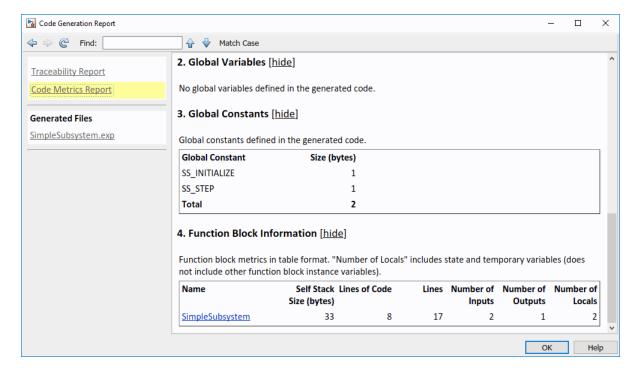

Working with Tunable Parameters in the Simulink PLC Coder Environment

- "Block Parameters in Generated Code" on page 6-2
- "Control Appearance of Block Parameters in Generated Code" on page 6-4

Block Parameters in Generated Code

To control how the block parameters appear in the generated code, you can either define the parameters as Simulink.Parameter objects in the MATLAB workspace or use the Model Parameter Configuration dialog box. For more information, see "Control Appearance of Block Parameters in Generated Code" on page 6-4.

Simulink PLC Coder exports tunable parameters as exported symbols and preserves the names of these parameters in the generated code. It does not mangle these names. As a result, if you use a reserved IDE keyword as a tunable parameter name, the code generation can cause compilation errors in the IDE. As a best practice, do not use IDE keywords as tunable parameter names.

The coder maps tunable parameters in the generated code as listed in the following table:

Target IDE	Parameter Storage Class								
	SimulinkGlobal	ExportedGlobal	ImportedExtern	Imported- ExternPointer					
CoDeSys 2.3	Local function block variables	Global variable	Variable is not defined in generated code and expected to be defined externally.	parameter to this					
CoDeSys 3.3	Local function block variables	Global variable	Variable is not defined in generated code and expected to be defined externally.						
CoDeSys 3.5	Local function block variables	Global variable	Variable is not defined in generated code and expected to be defined externally.						
B&R Automation Studio 3.0	Local function block variable	Local function block variable	Local function block variable.	Ignored. If you set the parameter to this value, the software treats it the same as ImportedExtern.					
B&R Automation Studio 4.0	Local function block variable	Local function block variable	Local function block variable.	Ignored. If you set the parameter to this value, the software treats it the same as ImportedExtern					
Beckhoff TwinCAT 2.11	Local function block variable	Global variable		Ignored. If you set the parameter to this value, the software treats it the same as ImportedExtern.					

Target IDE	Parameter Storage Class								
	SimulinkGlobal	ExportedGlobal	ImportedExtern	Imported- ExternPointer					
KW-Software MULTIPROG 5.0	Local function block variable	Local function block variable	Local function block variable.	Ignored. If you set the parameter to this value, the software treats it the same as ImportedExtern.					
Phoenix Contact PC WORX 6.0	Local function block variable	Global variable	Variable is not defined in generated code and pexpected to be defined externally.						
RSLogix 5000 17, 18: AOI	AOI local tags	AOI input tags	AOI input tags.	Ignored. If you set the parameter to this value, the software treats it the same as ImportedExtern.					
RSLogix 5000 17, 18: Routine	Instance fields of program UDT tags	Program tags	Variable is not defined in generated code and expected to be defined externally.	parameter to this					
Siemens SIMATIC STEP 7	Local function block variable	Global variable	Variable is not defined in generated code and expected to be defined externally.						
Siemens TIA Portal	Local function block variable	Global variable	Variable is not defined in generated code and expected to be defined externally.						
Generic	Local function block variable	Global variable	Variable is not defined in generated code and expected to be defined externally.						
PLCopen	Local function block variable	Global variable	Variable is not defined in generated code and expected to be defined externally.	parameter to this					

Control Appearance of Block Parameters in Generated Code

Unless you use constants for block parameters in your model, they appear in the generated code as variables. You can choose how these variables appear in the generated code. For more information, see "Block Parameters in Generated Code" on page 6-2.

To control how the block parameters appear in the generated code:

- **1** Use variables instead of constants for block parameters.
- **2** Define these parameters in the MATLAB workspace in one of the following ways:
 - Use a MATLAB script to create a Simulink.Parameter object. Run the script every time that the model loads.
 - Simulink stores Simulink.Parameter objects outside the model. You can then share Simulink.Parameter objects between multiple models.
 - Use the Model Configuration Parameters dialog box to make the parameters tunable.
 - Simulink stores global tunable parameters specified using the Configuration Parameters dialog box with the model. You cannot share these parameters between multiple models.

Note The MATLAB workspace parameter value must be of the same data type as used in the model. Otherwise, the value of the variable in the generated code is set to zero. See "Workspace Parameter Data Type Limitations" on page 18-4.

Configure Tunable Parameters with Simulink.Parameter Objects

This example shows how to create and modify a Simulink.Parameter object.

The model plcdemo_tunable_params_slparamobj illustrates these steps. The model contains a Subsystem block SimpleSubsystem that has three Gain blocks with tunable parameters, K1, K2, and K3.


1 Write a MATLAB script that defines the tunable parameters.

The following script setup_tunable_params.m creates the constants K1, K2, and K3 as Simulink.Parameter objects, assigns values, and sets the storage classes for these constants. For more information on the storage classes, see "Block Parameters in Generated Code" on page 6-2.

```
% tunable parameter mapped to local variable
K1 = Simulink.Parameter;
K1.Value = 0.1;
K1.CoderInfo.StorageClass = 'Model default';
% tunable parameter mapped to global variable
K2 = Simulink.Parameter;
K2.Value = 0.2;
K2.CoderInfo.StorageClass = 'ExportedGlobal';
% tunable parameter mapped to global const
K3 = Simulink.Parameter;
K3.Value = 0.3;
```

```
K3.CoderInfo.StorageClass = 'Custom';
K3.CoderInfo.CustomStorageClass = 'Const';
```

- 2 Specify that the script setup_tunable_params.m must execute before the model loads and that the MATLAB workspace must be cleared before the model closes.
 - In the model window, go to the **Modeling** tab and select **Model Properties** from the **Model Settings** drop-down.
 - b In the Model Properties dialog box, on the Callbacks tab, select PreLoadFcn. Enter setup_tunable_params for Model pre-load function.

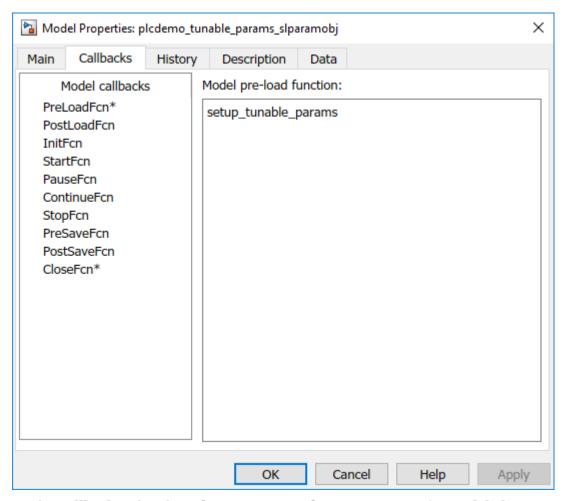

c On the Callbacks tab, select CloseFcn. Enter clear K1 K2 K3; for Model close function.

Every time that you open the model, the variables K1, K2, and K3 are loaded into the base workspace. You can view the variables and their storage classes in the Model Explorer.

3 Generate code and inspect it.

Variable	Storage Class	Generated Code (3S CoDeSys 2.3)
K1	Model default	K1 is a local function block variable.
		FUNCTION_BLOCK SimpleSubsystem
		VAR K1: LREAL := 0.1;
		END_VAR
		END_FUNCTION_BLOCK
K2	ExportedGlobal	K2 is a global variable. VAR_GLOBAL
		K2: LREAL := 0.2; END_VAR
К3	CoderInfo.CustomStorageClass set to Const.	K3 is a global constant. VAR_GLOBAL CONSTANT SS_INITIALIZE: SINT := 0; K3: LREAL := 0.3; SS_STEP: SINT := 1; END_VAR


Make Parameters Tunable Using Configuration Parameters Dialog Box

This example shows how to make parameters tunable using the Model Configuration Parameters dialog box.

The model plcdemo_tunable_params illustrates these steps. The model contains a Subsystem block SimpleSubsystem that has three Gain blocks with tunable parameters, K1, K2, and K3.

- 1 Specify that the variables K1, K2, and K3 must be initialized before the model loads and that the MATLAB workspace must be cleared before the model closes.
 - a In the **Modeling** tab and select **Model Properties** from the **Model Settings** drop-down.
 - In the Model Properties dialog box, on the Callbacks tab, select PreLoadFcn. Enter K1=0.1; K2=0.2; K3=0.3; for Model pre-load function.
 - c On the Callbacks tab, select CloseFcn. Enter clear K1 K2 K3; for Model close function.
- 2 On the **Modeling** tab and select **Model Settings** to open the Configuration Parameters dialog box.
- 3 Navigate to **Optimization** pane. Specify that all parameters must be inlined in the generated code. Select **Inlined** for **Default Parameter Behavior**.
- 4 To override the inlining and make individual parameters tunable, click **Configure**. In the Model Parameter Configuration dialog box, from the **Source list**, select Referenced workspace variables.
- **5 Ctrl**+select the parameters and click **Add to table >>**.

By default, this dialog box sets all parameters to the SimulinkGlobal storage class. Set the **Storage class** and **Storage type qualifier** as shown in this figure. For more information on the storage classes, see "Block Parameters in Generated Code" on page 6-2.

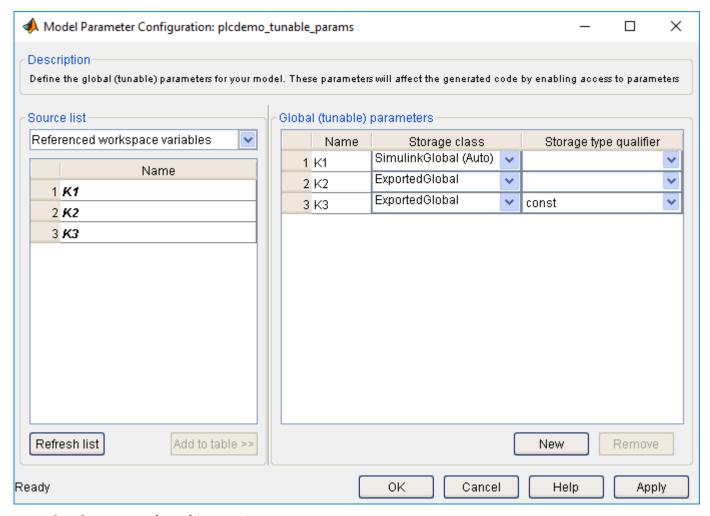

6 Generate code and inspect it.

Variable	Storage Class	Generated Code (3S CoDeSys 2.3)
K1	SimulinkGlobal	K1 is a local function block variable.
		FUNCTION_BLOCK SimpleSubsystem
		<u> </u> :
		VAR
		K1: LREAL := 0.1;
		END_VAR
		•
		END_FUNCTION_BLOCK

Variable	Storage Class	Generated Code (3S CoDeSys 2.3)
K2	ExportedGlobal	K2 is a global variable. VAR_GLOBAL K2: LREAL := 0.2; END_VAR
К3	CoderInfo.CustomStorageC lass and Storage type qualifier set to Const.	K3 is a global constant. VAR_GLOBAL CONSTANT SS_INITIALIZE: SINT := 0; K3: LREAL := 0.3; SS_STEP: SINT := 1; END_VAR

Controlling Generated Code Partitions

- "Generate Global Variables from Signals in Model" on page 7-2
- "Control Code Partitions for Subsystem Block" on page 7-3
- "Control Code Partitions for MATLAB Functions in Stateflow Charts" on page 7-8

Generate Global Variables from Signals in Model

If you want to generate a global variable in your code, use a global Data Store Memory block based on a Simulink.Signal object in your model.

- **1** Set up a data store in your model by using a Data Store Memory block.
- **2** Associate a Simulink. Signal object with the data store.
 - a In the base workspace, define a Simulink.Signal object with the same name as the data store. Set the storage class of the object to ExportedGlobal or ImportedExtern.
 - b Use the Model Data Editor to enable the Data store name must resolve to Simulink signal object parameter of the Data Store Memory block. To use the Model Data Editor in a model, on the Modeling tab, select Model Data Editor under the Design category. On the Data Stores tab, set the Change View drop-down to Design. Enable Resolve for the Data Store Memory block. For more information, see "Configure Data Properties by Using the Model Data Editor".
- 3 In your model, attach the signals that you want to Data Store Read blocks that read from the data store and Data Store Write blocks that write to the data store.

The Simulink.Signal object that is associated with the global Data Store Memory block appears as a global variable in generated code.

Note If you follow this workflow for Rockwell Automation RSLogix 5000 AOIs, the generated code uses INOUT variables for the global data.

Control Code Partitions for Subsystem Block

Simulink PLC Coder converts subsystems to function block units according to the following rules:

- Generates a function block for the top-level atomic subsystem for which you generate code.
- Generates a function block for an atomic subsystem whose Function packaging parameter is set to Reusable function.
- Inlines generated code from atomic subsystems, whose **Function packaging** parameter is set to **Inline**, into the function block that corresponds to the nearest ancestor subsystem. This nearest ancestor cannot be inlined.

For code generation from a subsystem with no inputs or outputs, you must set the **Function packaging** parameter of the block to Reusable function.

These topics use code generated with CoDeSys Version 2.3.

Control Code Partitions Using Subsystem Block Parameters

You can partition generated code using the following Subsystem block parameters on the **Code Generation** tab. See the Subsystem block documentation for details.

- Function packaging
- Function name options

Leave the **File name options** set to the default, Auto.


Generating Separate Partitions and Inlining Subsystem Code

Use the **Function packaging** parameter to specify the code format to generate for an atomic (nonvirtual) subsystem. The Simulink PLC Coder software interprets this parameter depending on the setting that you choose:

Setting	Coder Interpretation
Auto	Uses the optimal format based on the type and number of subsystem instances in the model.
Reusable function	Generates a function with arguments that allows reuse of subsystem code when a model includes multiple instances of the subsystem.
Nonreusable function	The Simulink PLC Coder does not support Nonreusable function packaging. See, "Restrictions" on page 11-2.
Inline	Inlines the subsystem unconditionally.

For example, in the plcdemo_hierarchical_virtual_subsystem, you can:


- Inline the S1 subsystem code by setting **Function packaging** to Inline. This setting creates one function block for the parent with the S1 subsystem inlined.
- Create a function block for the S2 subsystem by setting Function packaging to Reusable function or Auto. This setting creates two function blocks, one for the parent, one for S2.

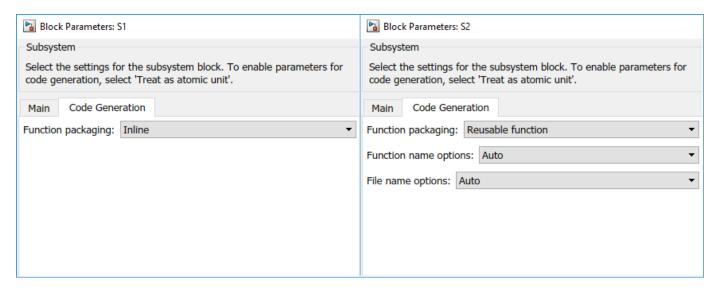

Changing the Name of a Subsystem

You can use the **Function name options** parameter to change the name of a subsystem from the one on the block label. When the Simulink PLC Coder generates software, it uses the string you specify for this parameter as the subsystem name. For example, see plcdemo hierarchical virtual subsystem:

- 1 Open the S1 subsystem block parameter dialog box.
- 2 If the **Treat as atomic unit** check box is not yet selected, select it.
- 3 Click the **Code Generation** tab.
- 4 Set **Function packaging** to Reusable function.
- 5 Set **Function name options** to User specified.
- 6 In the **Function name** field, specify a custom name. For example, type my own subsystem.

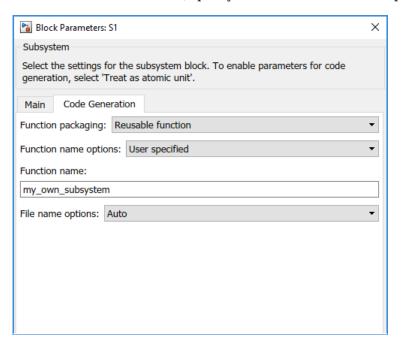

- **7** Save the new settings.
- **8** Generate code for the parent subsystem.
- **9** Observe the renamed function block.

```
FUNCTION_BLOCK my_own_subsystem
VAR_INPUT
ssMethodType: SINT;
U: LREAL;
END VAR
```

One Function Block for Atomic Subsystems

The code for plcdemo_simple_subsystem is an example of generating code with one function block. The atomic subsystem for which you generate code does not contain other subsystems.

```
FUNCTION BLOCK SimpleSubsystem
VAR INPUT
   ssMethodType: SINT;
   U: LREAL;
END VAR
VAR OUTPUT
   Y: LREAL;
END VAR
VAR
   UnitDelay DSTATE: LREAL;
END VAR
CASE ssMethodType OF
   SS INITIALIZE:
        (* InitializeConditions for UnitDelay: '<S1>/Unit Delay' *)
        UnitDelay DSTATE := 0.0;
    SS STEP:
        (* Gain: '<S1>/Gain' incorporates:
         * Sum: '<S1>/Sum'
         * UnitDelay: '<S1>/Unit Delay' *)
        Y := (U - UnitDelay DSTATE) * 0.5;
        (* Update for UnitDelay: '<S1>/Unit Delay' *)
        UnitDelay DSTATE := Y;
END CASE;
END FUNCTION BLOCK
VAR GLOBAL CONSTANT
    SS INITIALIZE: SINT := 0;
   SS STEP: SINT := 1;
END VAR
```

One Function Block for Virtual Subsystems

The plcdemo_hierarchical_virtual_subsystem example contains an atomic subsystem that has two virtual subsystems, S1 and S2, inlined. A virtual subsystem does not have the **Treat as atomic unit** parameter selected. When you generate code for the hierarchical subsystem, the code contains only the FUNCTION_BLOCK HierarchicalSubsystem component. There are no additional function blocks for the S1 and S2 subsystems.

```
FUNCTION BLOCK HierarchicalSubsystem
VAR INPUT
    ssMethodType: SINT;
   In1: LREAL;
    In2: LREAL;
    In3: UINT:
    In4: LREAL;
END VAR
VAR OUTPUT
   Out1: LREAL;
   Out2: LREAL;
END VAR
VAR
   UnitDelay1 DSTATE: LREAL;
   UnitDelay DSTATE: LREAL;
   UnitDelay DSTATE_i: LREAL;
   UnitDelay DSTATE a: LREAL;
END VAR
VAR TEMP
    rtb Gain n: LREAL;
END VAR
CASE ssMethodType OF
    SS INITIALIZE:
        (* InitializeConditions for UnitDelay: '<S1>/Unit Delay1' *)
        UnitDelay1 DSTATE := 0.0;
```

Multiple Function Blocks for Nonvirtual Subsystems

The plcdemo_hierarchical_subsystem example contains an atomic subsystem that has two nonvirtual subsystems, S1 and S2. Virtual subsystems have the **Treat as atomic unit** parameter selected. When you generate code for the hierarchical subsystem, that code contains the FUNCTION_BLOCK HierarchicalSubsystem, FUNCTION_BLOCK S1, and FUNCTION_BLOCK S2 components.

Function block for Hierarchical Subsystem

```
FUNCTION BLOCK HierarchicalSubsystem
VAR INPUT
   ssMethodType: SINT;
   In1: LREAL;
   In2: LREAL;
   In3: UINT;
   In4: LREAL;
END VAR
Function block for S1
FUNCTION BLOCK S1
VAR INPUT
    ssMethodType: SINT;
    U: LREAL;
END VAR
Function block for S2
FUNCTION BLOCK S2
VAR INPUT
    ssMethodType: SINT;
    U: LREAL;
END VAR
```

Control Code Partitions for MATLAB Functions in Stateflow Charts

Simulink PLC Coder inlines MATLAB functions in generated code based on your inlining specifications. To specify whether to inline a function:

- **1** Right-click the MATLAB function and select **Properties**.
- For **Function Inline Option**, select Inline if you want the function to be inlined. Select Function if you do not want the function to be inlined. For more information, see "Specify Properties of MATLAB Functions" (Stateflow).


However, Simulink PLC Coder does not follow your inlining specifications exactly in the following cases:

- If a MATLAB function accesses data that is local to the chart, it is inlined in generated code even if you specify that the function must not be inlined.
 - Explanation: The chart is converted to a function block in generated code. If the MATLAB function in the chart is converted to a Structured Text function, it cannot access the data of an instance of the function block. Therefore, the MATLAB function cannot be converted to a Structured Text function in generated code and is inlined.
- If a MATLAB function has multiple outputs and you specify that the function must not be inlined, it is converted to a function block in generated code.


Explanation: A Structured Text function cannot have multiple outputs, therefore the MATLAB function cannot be converted to a Structured Text function.

The following simple example illustrates the different cases. The model used here has a Stateflow chart that contains four MATLAB functions fcn1 to fcn4.

Here is the model.

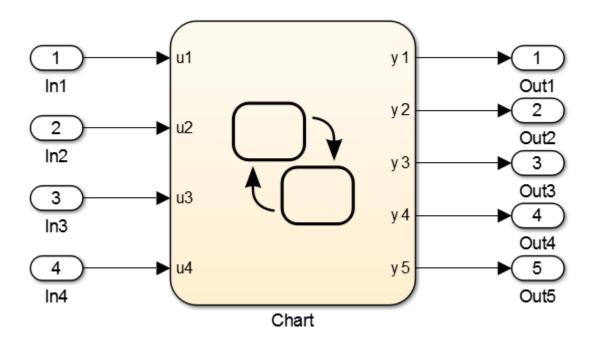

Here is the Stateflow chart.

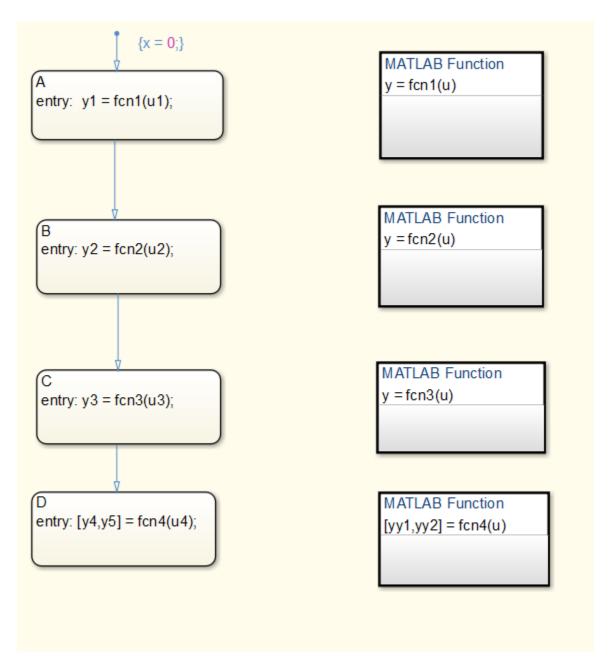

The functions fcn1 to fcn4 are defined as follows.

Function	Inlining Specification	Generated Code
fcn1:	Specify that the	fcn1 is inlined in the generated code.
<pre>function y = fcn1(u) y = u+1;</pre>	function must be inlined.	<pre>is_c3_Chart := Chart_IN_A; (* Outport: '<root>/y1'</root></pre>
fcn2:	Specify that the	fcn2 is not inlined in the generated code.
<pre>function y = fcn2(u) y = u+2;</pre>	function must not be inlined.	<pre>is_c3_Chart := Chart_IN_B; (* Outport: '<root>/y2'</root></pre>
<pre>fcn3: function y = fcn3(u) % The function accesses % local data x of % parent chart y = u+3+x;</pre>	Specify that the function must not be inlined.	fcn3 is inlined in the generated code because it accesses local data from the Stateflow chart. is_c3_Chart := Chart_IN_C; (* Outport: ' <root>/y3'</root>

Function	Inlining Specification	Generated Code
<pre>fcn4: function [yy1,yy2] = fcn4(u)</pre>	Specify that the function must not be inlined.	fcn4 is converted to a function block in the generated code because it has multiple outputs.
tcn4(u) yy1 = u+4; yy2 = u+5;		<pre>is_c3_Chart := Chart_IN_D; (* Entry 'D': '<s1>:28' *) i0_fcn4(u := u4); b_y4 := i0_fcn4.yy1; b_y5 := i0_fcn4.yy2; (* Outport: '<root>/y4'</root></s1></pre>

Integrating Externally Defined Identifiers

- "Integrate Externally Defined Identifiers" on page 8-2
- "Integrate Custom Function Block in Generated Code" on page 8-3

Integrate Externally Defined Identifiers

The coder allows you to suppress identifier (symbol) definitions in the generated code. This suppression allows you to integrate a custom element, such as user-defined function blocks, function blocks, data types, and named global variable and constants, in place of one generated from a Simulink subsystem. You must then provide these definitions when importing the code into the target IDE. You must:

- Define the custom element in the subsystem for which you want to generate code.
- Name the custom element.
- In the Configuration Parameters dialog box, add the name of the custom element to PLC Code Generation > Identifiers > Externally Defined Identifiers in the Configuration Parameters dialog box.
- · Generate code.

For a description of how to integrate a custom function block, see "Integrate Custom Function Block in Generated Code" on page 8-3. For a description of the **Externally Defined Identifiers** parameter, see "Externally Defined Identifiers" on page 12-27.


Integrate Custom Function Block in Generated Code

To integrate a custom function block, ExternallyDefinedBlock, this procedure uses the example plcdemo external symbols.

- 1 In a Simulink model, add a MATLAB Function block.
- **2** Double-click the MATLAB Function block.
- **3** In the MATLAB editor, minimally define inputs, outputs, and stubs. For example:

```
function Y = fcn(U,V)
% Stub behavior for simulation. This block
% is replaced during code generation
Y = U + V;
```

- **4** Change the MATLAB Function block name to ExternallyDefinedBlock.
- **5** Create a subsystem from this MATLAB Function block.
- 6 Complete the model to look like plcdemo external symbols.

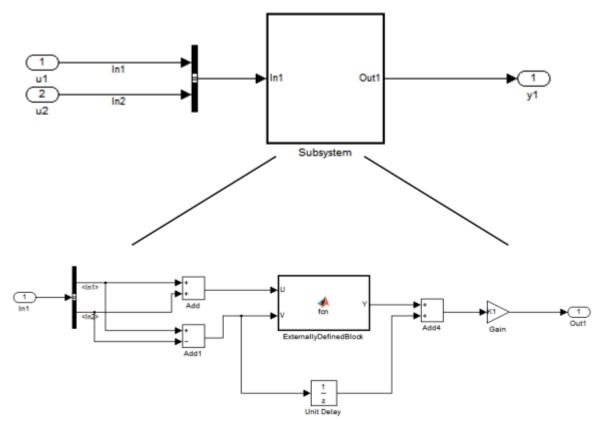

- **7** Open the Configuration Parameters dialog box for the model.
- 8 Add ExternallyDefinedBlock to PLC Code Generation > Identifiers > Externally Defined Identifiers.
- 9 The plcdemo_external_symbols model also suppresses K1 and InBus. Add these symbol names to the Externally Defined Identifiers field, separated by spaces or commas. For other settings, see the plcdemo_external_symbols model.

Externally Defined Symbols ExternallyDefinedBlock InBus K1

- 10 Save and close your new model. For example, save it as plcdemo_external_symbols_mine.
- **11** Generate code for the model.
- 12 In the generated code, look for instances of ExternallyDefinedBlock.

The reference of ExternallyDefinedBlock is:

```
VAR
      UnitDelay_DSTATE: LREAL;
      i0_ExternallyDefinedBlock: ExternallyDefinedBlock;
END_VAR

The omission of ExternallyDefinedBlock is:

(* MATLAB Function: '<S1>/ExternallyDefinedBlock' *)
i0_ExternallyDefinedBlock(U := rtb_Add, V := rtb_Add1);
rtb_Y := i0_ExternallyDefinedBlock.Y;
```

IDE-Specific Considerations

- "Integrate Generated Code with Siemens IDE Project" on page 9-2
- "Use Internal Signals for Debugging in RSLogix 5000 IDE" on page 9-3
- "Rockwell Automation RSLogix Requirements" on page 9-4
- "Siemens IDE Requirements" on page 9-6
- "Selectron CAP1131 IDE Requirements" on page 9-8

Integrate Generated Code with Siemens IDE Project

You can integrate generated code with an existing Siemens SIMATIC STEP 7 or Siemens TIA Portal project. For more information on:

- How to generate code, see "Generate and Examine Structured Text Code" on page 1-9.
- The location of generated code, see "Files Generated by Simulink PLC Coder" on page 1-14.

Integrate Generated Code with Siemens SIMATIC STEP 7 Projects

- In the Siemens SIMATIC STEP 7 project, right-click the **Sources** node and select **Insert New Object > External Source**.
- 2 Navigate to the folder containing the generated code and open the file.
 - The custom file name unless assigned differently, is the <code>model_name.scl</code>. After you open the file, a new entry called <code>model name.scl</code> appears under the **Sources** node.
- 3 Double-click the new entry. The generated code is listed in the SCL editor window.
- 4 In the SCL editor window, select **Options** > **Customize**.
- 5 In the customize window, select Create block numbers automatically, and click OK.
 Symbol addresses are automatically generated for Subsystem blocks.
- In the SCL editor window, compile the *model name*.scl file for the Subsystem block.

The new Function Block is now integrated and available for use with the existing Siemens SIMATIC STEP 7 project.

Integrate Generated Code with Siemens TIA Portal Projects

- 1 In the **Project tree** pane, on the **Devices** tab, under the **External source files** node in your project, select **Add new external file**.
- 2 Navigate to the folder containing the generated code and open the file.
 - The custom file name unless assigned differently, is the <code>model_name.scl</code>. After you open the file, a new entry called <code>model_name.scl</code> appears under the <code>External source files</code> node.
- **3** Right-click the new entry and select **Generate blocks from source**.
 - The Siemens TIA Portal IDE compiles the new file and generates TIA Portal program blocks from the code. The program blocks appear under the **Program blocks** node. They are available for use with the existing Siemens TIA Portal project.


Use Internal Signals for Debugging in RSLogix 5000 IDE

For debugging, you can generate code for test point outputs from the top-level subsystem of your model. The coder generates code that maps the test pointed output to optional AOI output parameters for RSLogix 5000 IDEs. In the generated code, the variable tags that correspond to the test points have the property Required=false. This example assumes that you have a model appropriately configured for the coder, such as plcdemo simple subsystem.

- Open the plcdemo_simple_subsystem model. plcdemo simple subsystem
- 2 In the Configuration Parameters dialog box, set **Target IDE** to Rockwell RSLogix 5000: A0I.
- In the top-level subsystem of the model, right-click the output signal of SimpleSubsystem and select **Properties**.

The Signal Properties dialog box is displayed.

4 On the **Logging and accessibility** tab, click the **Test point** check box.

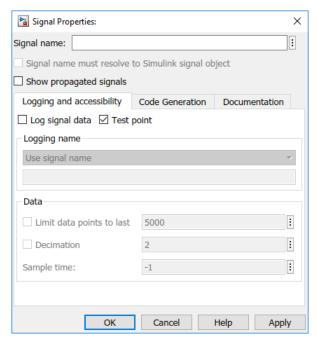

- 5 Click **OK**.
- **6** Generate code for the top-level subsystem.
- 7 Inspect the generated code for the string Required=false.

For more information on signals with test points, see "What Is a Test Point?".

Rockwell Automation RSLogix Requirements

Following are considerations for this target IDE platform.

Add-On Instruction and Function Blocks

The Structured Text concept of function block exists for Rockwell Automation RSLogix target IDEs as an Add-On instruction (AOI). The Simulink PLC Coder software generates the AOIs for Add-On instruction format, but not FUNCTION BLOCK.

Double-Precision Data Types

The Rockwell Automation RSLogix target IDE does not support double-precision data types. At code generation, Simulink PLC Coder converts this data type to single-precision data types in generated code.

Design your model to use single-precision data type (single) as much as possible instead of double-precision data type (double). If you must use doubles in your model, the numeric results produced by the generated Structured Text can differ from Simulink results. This difference is due to double-single conversion in the generated code.

Unsigned Integer Data Types

The Rockwell Automation RSLogix target IDE does not support unsigned integer data types. At code generation, Simulink PLC Coder converts this data type to signed integer data types in generated code.

Design your model to use signed integer data types (int8, int16, int32) as much as possible instead of unsigned integer data types (uint8, uint16, uint32). Doing so avoids overflow issues that unsigned-to-signed integer conversions can cause in the generated code.

Unsigned Fixed-Point Data Types

In the generated code, Simulink PLC Coder converts fixed-point data types to target IDE integer data types. Because the Rockwell Automation RSLogix target IDE does not support unsigned integer data types, do not use unsigned fixed-point data types in the model. For more information about coder limitations for fixed-point data type support, see "Fixed Point Simulink PLC Coder Structured Text Code Generation" on page 19-2.

Enumerated Data Types

The Rockwell Automation RSLogix target IDE does not support enumerated data types. At code generation, Simulink PLC Coder converts this data type to 32-bit signed integer data type in generated code.

Reserved Keywords

The Rockwell AutomationRSLogix target IDE has reserved keywords. Do not use them as tag names in subsystems from which code will be for be generated for Rockwell AutomationRSLogix IDE.

ABS	ACS	AND	ASN	ATN	COS	DEG	FRD	LN	LOG	MOD
NOT	OR	RAD	SIN	SQR	TAN	TOD	TRN	XOR	acos	asin
atan	by	case	do	else	elsif	end_cas e	end_for	end_if	end_rep eat	end_wh ile
exit	for	if	of	repeat	return	then	to	trunc	until	while

These keywords are case insensitive. If your code generation target IDE is the Rockwell AutomationRSLogix 5000 or Studio 5000 IDE do not use these keywords as variable names.

Rockwell Automation IDE selection

Based on the L5X import file target IDE version you will choose the PLC target IDE to be RSLogix5000 or Studio 5000. If importing into v24 or later choose Studio 5000 else for versions prior to v24 choose RSLogix 5000.

Siemens IDE Requirements

Target PLCs and Supported Data Types

To choose your target PLC based on supported data types, see the options in this table.

Data Type	S7-300/400	S7-1200	S7-1500
BOOL	Yes	Yes	Yes
BYTE	Yes	Yes	Yes
WORD	Yes	Yes	Yes
DWORD	Yes	Yes	Yes
LWORD	No	No	Yes
SINT	No	Yes	Yes
INT	Yes	Yes	Yes
DINT	Yes	Yes	Yes
USINT	No	Yes	Yes
UINT	No	Yes	Yes
UDINT	No	Yes	Yes
LINT	No	No	Yes
ULINT	No	No	Yes
REAL	Yes	Yes	Yes
LREAL	No	Yes	Yes

To generate code for your S7-300/400 series PLCs use the SIMATIC STEP 7 or TIA Portal as the target IDE.. To generate code for your S7-1200 or S7-1500 series PLCs, use the TIA Portal: Double Precision as the target IDE .

Double-Precision Floating-Point Data Types

To generate code for your Siemens targets that do not support double-precision, floating-point data types, use the SIMATIC STEP 7 or TIA Portal as the target IDE. At code generation, Simulink PLC Coder converts this data type to single-precision real data types in the generated code. Design your model so that the possible precision loss of generated code numeric results does not change the expected semantics of the model.

To generate code for your Siemens targets that support double-precision, floating-point types, use Siemens TIA Portal: Double Precision as the target IDE. The generated code uses the LREAL type for double-precision, floating-point types in the model. For more information, see "Target IDE" on page 12-3.

int8 Data Type and Unsigned Integer Types

To generate code for your Siemens targets that do not support the int8 data type and unsigned integer data types, use Siemens SIMATIC Step 7 or Siemens TIA Portal as the target IDE. At code

generation, Simulink PLC Coder converts the int8 data type and unsigned integer data types to int16 or int32 in the generated code.

Design your model to use int16 and int32 data types as much as possible instead of int8 or unsigned integer data types. The Simulink numeric results by using the int8 data type or unsigned integer data types can differ from the numeric results produced by the generated structured text.

Design your model so that the effects of integer data type conversion of the generated code do not change the expected semantics of the model.

To generate code for your Siemens targets that support the int8 data type and unsigned integer data types, use Siemens TIA Portal: Double Precision as the target IDE. The generated code preserves the int8 data type and unsigned integer data types. For more information, see "Target IDE" on page 12-3.

Unsigned Fixed-Point Data Types

Do not use unsigned, fixed-point data types in your model to generate code for your Siemens targets that do not support unsigned integer data types. For more information about coder limitations for fixed-point data type support, see "Fixed Point Simulink PLC Coder Structured Text Code Generation" on page 19-2.

Enumerated Data Types

The Siemens SIMATIC STEP 7 and TIA Portal target IDEs do not support enumerated data types. Simulink PLC Coder converts this data type to 16-bit signed integer data type in the generated code for Siemens targets.

Selectron CAP1131 IDE Requirements

For the Selectron CAP1131 target IDE platform, consider these limitations:

Double-Precision Floating-Point Data Types

The Selectron CAP1131 target IDE does not support double-precision floating-point data types. At code generation, the Simulink PLC Coder converts this data type to single-precision real data types in the generated code. Design your model so that the possible precision loss of numerical results of the generated code numeric results does not change the model semantics that you expect.

Enumerated Data Types

The Selectron CAP1131 target IDE does not support enumerated data types. The Selectron CAP1131 IDE converts this data type to 32-bit signed integer data type in the generated code.

See Also


Supported Simulink and Stateflow Blocks

Supported Blocks

For Simulink semantics not supported by Simulink PLC Coder, see "Structured Text Code Generation Limitations" on page 11-2.

View Supported Blocks Library

To view a Simulink library of blocks that the Simulink PLC Coder software supports, type plclib in the Command Window. The coder can generate Structured Text code for subsystems that contain these blocks. The library window is displayed.

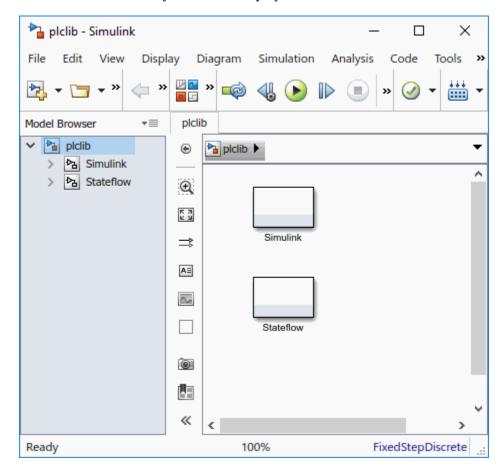

This library contains two sublibraries, Simulink and Stateflow. Each sublibrary contains the blocks that you can include in a Simulink PLC Coder model.

Supported Simulink Blocks

The coder supports the following Simulink blocks.

Additional Math & Discrete/Additional Discrete

Transfer Fcn Direct Form II

Transfer Fcn Direct Form II Time Varying

Unit Delay Enabled (Obsolete) Unit Delay Enabled External IC (Obsolete) Unit Delay Enabled Resettable (Obsolete) Unit Delay Enabled Resettable External IC (Obsolete) Unit Delay External IC (Obsolete) Unit Delay Resettable (Obsolete) Unit Delay Resettable External IC (Obsolete) Unit Delay With Preview Enabled (Obsolete) Unit Delay With Preview Enabled Resettable (Obsolete) Unit Delay With Preview Enabled Resettable External RV (Obsolete) Unit Delay With Preview Resettable (Obsolete) Unit Delay With Preview Resettable External RV (Obsolete) **Commonly Used Blocks** Inport **Bus Creator Bus Selector** Constant Data Type Conversion Demux Discrete-Time Integrator Gain Ground Logical Operator Mux Product Relational Operator Saturation

Scope

Subsystem

Inport

Outport

Sum

Switch

Terminator

Unit Delay

Discontinuities

Coulomb and Viscous Friction

Dead Zone Dynamic

Rate Limiter

Rate Limiter Dynamic

Relay

Saturation

Saturation Dynamic

Wrap To Zero

Discrete

Difference

Discrete Transfer Fcn

Discrete Derivative

Discrete FIR Filter

Discrete Filter

Discrete PID Controller

Discrete PID Controller (2 DOF)

Discrete State-Space

Discrete-Time Integrator

FIR Interpolation

Integer Delay

Memory

Tapped Delay

Transfer Fcn First Order

Transfer Fcn Lead or Lag

Transfer Fcn Real Zero

Unit Delay

Zero-Order Hold

Logic and Bit Operations

Bit Clear

Bit Set

Bitwise Operator

Compare To Constant

Compare To Zero

Detect Change

Detect Decrease

Detect Increase

Detect Fall Negative

Detect Fall Nonpositive

Detect Rise Nonnegative

Detect Rise Positive

Extract Bits

Interval Test

Interval Test Dynamic

Logical Operator

Shift Arithmetic

Lookup Tables

Dynamic-Lookup

Interpolation Using Prelookup

PreLookup

n-D Lookup Table

Math Operations Abs Add Assignment Bias Divide **Dot Product** Gain Math Function Matrix Concatenate MinMax MinMax Running Resettable **Permute Dimensions** Polynomial Product **Product of Elements** Reciprocal Sqrt Reshape Rounding Function Sign Slider Gain Sqrt Squeeze Subtract

Sum of Elements

Trigonometric Function

Unary Minus

Vector Concatenate

Model Verification

Assertion

Check Discrete Gradient

Check Dynamic Gap

Check Dynamic Range

Check Static Gap

Check Static Range

Check Dynamic Lower Bound

Check Dynamic Upper Bound

Check Input Resolution

Check Static Lower Bound

Check Static Upper Bound

Model-Wide Utilities

DocBlock

Model Info

Ports & Subsystems

Atomic Subsystem

CodeReuse Subsystem

Enabled Subsystem

Enable

Function-Call Subsystem

Subsystem

Inport

Outport

Signal Attributes

Data Type Conversion

Data Type Duplicate

Signal Conversion

Signal Routing

Bus Assignment

Bus Creator

Bus Selector

Data Store Memory

Demux

From

Goto

Goto Tag Visibility

Index Vector

Multiport Switch

Mux

Selector

Sinks

Display

Floating Scope

Scope

Stop Simulation

Terminator

To File

To Workspace

XY Graph

Sources

Constant

Counter Free-Running

Counter Limited

Enumerated Constant

Ground

Pulse Generator

Repeating Sequence Interpolated

Repeating Sequence Stair

User-Defined Functions

MATLAB Function (MATLAB Function Block)

Supported Stateflow Blocks

The coder supports the following Stateflow blocks.

Stateflow

Chart

State Transition Table

Truth Table

Blocks with Restricted Support

Simulink Block Support Exceptions

The Simulink PLC Coder software supports the plclib blocks with the following exceptions. Also, see "Structured Text Code Generation Limitations" on page 11-2 for a list of limitations of the software.

If you get unsupported fixed-point type messages during code generation, update the block parameter. Open the block parameter dialog box. Navigate to the **Signal Attributes** and **Parameter Attributes** tabs. Check that the **Output data type** and **Parameter data type** parameters are not Inherit: Inherit via internal rule. Set these parameters to either Inherit: Same as input or a desired non-fixed-point data type, such as double or int8.

Stateflow Chart Exceptions

If you receive a message about consistency between the original subsystem and the S-function generated from the subsystem build, and the model contains a Stateflow chart that contains one or more Simulink functions, use the following procedure to address the issue:

- 1 Open the model and double-click the Stateflow chart that causes the issue.
 - The chart Stateflow Editor dialog box is displayed.
- **2** Right-click in this dialog box.
- 3 In the context-sensitive menu, select **Properties**.
 - The Chart dialog box is displayed.
- 4 In the Chart dialog box, navigate to the **States When Enabling** parameter and select Held.
- 5 Click **Apply** and **OK** and save the model.

Data Store Memory Block

To generate PLC code for a model that uses a Data Store Memory block, first define a Simulink.Signal object in the base workspace. Then, in the **Signal Attributes** tab of the block parameters, set the data store name to resolve to that Simulink.Signal object.

For more information, see "Data Stores with Data Store Memory Blocks".

Reciprocal Sqrt Block

The Simulink PLC Coder software does not support the Simulink Reciprocal Sqrt block signedSqrt and rSqrt functions.

Lookup Table Blocks

Simulink PLC Coder has limited support for lookup table blocks. The coder does not support:

- Number of dimensions greater than 2
- · Cubic spline interpolation method
- · Begin index search using a previous index mode
- · Cubic spline extrapolation method

Note The Simulink PLC Coder software does not support the Simulink Lookup Table Dynamic block. For your convenience, the plclib/Simulink/Lookup Tables library contains an implementation of a dynamic table lookup block using the Prelookup and Interpolation Using Prelookup blocks.

Limitations

- "Structured Text Code Generation Limitations" on page 11-2
- "Ladder Logic Code Generation Limitations" on page 11-4

Structured Text Code Generation Limitations

General Limitations

The Simulink PLC Coder software does not support:

- Complex data types
- String data types
- · Model reference blocks
- · Stateflow machine-parented data and events
- Stateflow messages
- Limited support for math functions
- Merge block
- · Step block
- · Clock block
- Signal and state storage classes
- Shared state variables between subsystems
- For Each Subsystem block
- Variable-size signals and parameters
- MATLAB System block or system objects
- · MATLAB classes.
- The Simulink.CoderInfo Identifier name property with Simulink.Parameter and Simulink. Signal objects.
- The Simulink.LookupTable, Simulink.Breakpoint, and Simulink.DualScaledParameter objects.
- Code generation for Simulink signals that do not resolve to a Simulink.Signal data store memory object.
- Code generation when UseRowMajorAlgorithm='on'.
- The use of enum datatype numeric values for comparison inside model subsystem blocks. Use a data type conversion block to perform an enum to integer conversion, to perform the numeric comparison.
- The use of special characters in comments. This could lead to errors when importing the generated code.
- Signal lines named using Simulink. Signal mappings.
- Half precision fixed-point data types.
- Testbench generation for models using software-in-the-loop (SIL) simulation mode.
- Testbench generation for models using processor-in-the-loop (PIL) simulation mode.

Restrictions

The structured text language has inherent restrictions. As a result, the Simulink PLC Coder software has these restrictions:

- Supports code generation only for atomic subsystems.
- Supports automatic, inline, or reusable function packaging for code generation. Nonreusable function packaging is not supported.
- Does not support blocks that require continuous time semantics. This restriction includes integrator blocks, zero-crossing detection blocks, physical blocks, such as Simscape[™] library blocks and so on.
- Does not support pointer data types.
- Does not support recursion (including recursive events).
- Does not support nonfinite data, for example NaN or Inf.
- Does not support MATLAB 64-bit integer data types.

Negative Zero

In a floating-point data type, the value 0 has either a positive sign or a negative sign. Arithmetically, 0 is equal to -0, but some operations are sensitive to the sign of a 0 input. Examples include rdivide, atan2, atan2d, and angle. Division by 0 produces Inf, but division by -0 produces -Inf. Similarly, atan2d(0,-1) produces 180, but atan2d (-0,-1) produces -180.

Simulink PLC Coder stores -0 as 0 because there is no representation of -0 in IEC61131. This leads to division by -0 producing -Inf in Simulink, but Inf in PLC IDE. Similarly, atan2d(-0,-1) produces -180 in Simulink, but 180 in PLC IDE as the -0 is converted to 0.

Divide by Zero

In Simulink, division by zero produces either Inf or the largest number for the data type. In the Codesys target IDE, division by zero results in a -1. Code generation by using a testbench might result in testbench verification failures due to a difference in results from divide by zero operations.

Fixed-Point Data Type Multiword Operations

Simulink PLC Coder does not support code generation for block parameter settings that require fixed-point data type multiword operations. For example, the square root block that has int32 integer data type as input and output data type setting of Inherit via internal rule is not supported for code generation.

Ladder Logic Code Generation Limitations

plcladderlib Limitations

Simulink PLC Coder plcladderlib has these limitations:

Only Rockwell Automation RSLogix 5000 and Studio 5000 IDEs can import ladder logic generated using the plcladderlib library.

Ladder Diagram Import Limitations

- When importing an .L5X file that contains a continuous task, the imported Simulink model has a sample time of -1. For periodic tasks, the sample time is the value specified in the .L5X file. Event tasks are not supported.
- Simulink PLC Coder may not follow the same initialization order specified in the Prescan mode. Do not read variables that are read by the Prescan mode because this leads to different behavior in simulation of the model when compared to execution in the IDE. The affected Simulink PLC Coder plcladderlib blocks are: OTE, ONS, OSF, OSR, CTD, CTU, TON, TOF, RTO, JSR, AOI, and **FBC**
- If you Ladder Diagram implementation has multiple AOI or subroutine instances with the same name, the software does not check if these instances refer to the same implementation. It is recommended to use different names if these structures contain different functionality.

Ladder Diagram Modeling and Simulation Limitations

- Ladder models do not support unsigned integer types. Use signed integer instead.
- Ladder models do not support double type. Instead, use single type.
- The Rockwell Automation IDEs have limitations on the character length used for names. The length should not be more than 40 characters. For supported name lengths consult the Rockwell documentation.
- Label the **Port** numbers in the **Controller Tags** uniquely and sequentially, when modeling Ladder Diagrams in Simulink.

Ladder Diagram Code Generation Limitations

- Code generation requires a controller, task, program model, AOI runner, or AOI model hierarchy
- AOI input argument should be either non-array or 1-D array type. Test bench generation does not support 2-D or 3-D array types. This limitation includes nested 2-D, 3-D array types in structure fields.
- The Rockwell Automation IDEs have limitations on the character length used for names. The length should not be more than 40 characters. For supported name lengths consult the Rockwell documentation.

Ladder Diagram Verification Limitations

• Ladder test bench generation is supported for only AOI Runner block.


- AOI input argument should be either non-array or 1-D array type. Test bench generation does not support 2-D or 3-D array types. This limitation includes nested 2-D, 3-D array types in structure fields.
- AOI input argument in the L5X file should not be single-element array type for runner test bench generation.
- Test bench generation for Ladder Diagram models containing timer blocks such as TON, TOF and RTO fails. To generate test-bench code for these models, modify the Ladder Diagram structure while maintaining the logic.
- If the Simulink model is set as read-only, the model can become corrupted during the test bench generation process. When the code generation process completes, it reverts all code generation changes performed on the model. You can ignore or close the model during this process.


"Generating Ladder Diagram Code from Simulink" on page 3-34 | "Import L5X Ladder Files into Simulink" on page 3-22 | "Modeling and Simulation of Ladder Diagrams in Simulink" on page 3-27 | "Verify Generated Ladder Diagram Code" on page 3-38

Configuration Parameters for Simulink PLC Coder Models

- "PLC Coder: General" on page 12-2
- "PLC Coder: Comments" on page 12-12
- "PLC Coder: Optimization" on page 12-15
- "PLC Coder: Identifiers" on page 12-22
- "PLC Coder: Report" on page 12-29
- "PLC Coder:Interface" on page 12-32

PLC Coder: General

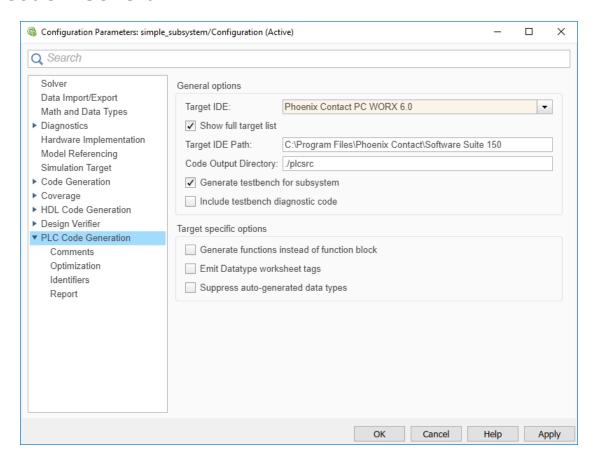

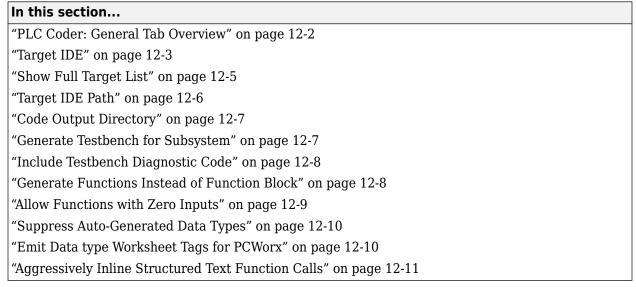

PLC Coder: General Tab Overview

Set up general information about generating Structured Text code to download to target PLC IDEs.

Configuration

To enable the Simulink PLC Coder options pane, you must:

- 1 Create a model.
- Add either an Atomic Subsystem block, or a Subsystem block for which you have selected the **Treat as atomic unit** check box.
- **3** Right-click the subsystem block and select **PLC Code > Options**.

qiT

- In addition to configuring parameters for the Simulink PLC Coder model, you can also use this dialog box to generate Structured Text code and test bench code for the Subsystem block.
- Certain options are target-specific and are displayed based on the selection for Target IDE.

See Also

"Prepare Model for Structured Text Generation" on page 1-3

"Generate Structured Text from the Model Window" on page 1-9

Target IDE

Select the target IDE for which you want to generate code. This option is available in the Configuration Parameters dialog box, **PLC Code Generation** pane.

The default **Target IDE** list shows the full set of supported targets. See "Show Full Target List" on page 12-5.

To see a reduced subset of targets, clear the option **Show full target list**. To customize this list and specify IDEs that you use more frequently, use the plccoderpref function.

For version numbers of supported IDEs, see "Supported IDE Platforms".

Settings

Default: 3S CoDeSys 2.3

3S CoDeSvs 2.3

Generates Structured Text (IEC 61131-3) code for 3S-Smart Software Solutions CoDeSys Version 2.3.

3S CoDeSvs 3.3

Generates Structured Text code in PLCopen XML for 3S-Smart Software Solutions CoDeSys Version 3.3.

3S CoDeSys 3.5

Generates Structured Text code in PLCopen XML for 3S-Smart Software Solutions CoDeSys Version 3.5.

B&R Automation Studio 3.0

Generates Structured Text code for B&R Automation Studio 3.0.

B&R Automation Studio 4.0

Generates Structured Text code for B&R Automation Studio 4.0.

Beckhoff TwinCAT 2.11

Generates Structured Text code for Beckhoff TwinCAT 2.11 software.

Beckhoff TwinCAT 3

Generates Structured Text code for Beckhoff TwinCAT 3 software.

KW-Software MULTIPROG 5.0

Generates Structured Text code in PLCopen XML for PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0 or 5.50.

Phoenix Contact PC WORX 6.0

Generates Structured Text code in PLCopen XML for Phoenix Contact PC WORX 6.0.

Rockwell RSLogix 5000: A0I

Generates Structured Text code for Rockwell Automation RSLogix 5000 using Add-On Instruction (AOI) constructs.

Rockwell RSLogix 5000: Routine

Generates Structured Text code for Rockwell Automation RSLogix 5000 routine constructs.

Rockwell Studio 5000: AOI

Generates Structured Text code for Rockwell Automation Studio 5000 Logix Designer using Add-On Instruction (AOI) constructs.

Rockwell Studio 5000: Routine

Generates Structured Text code for Rockwell Automation Studio 5000 Logix Designer routine constructs.

Siemens SIMATIC Step 7

Generates Structured Text code for Siemens SIMATIC STEP 7.

Siemens TIA Portal

Generates Structured Text code for Siemens TIA Portal S7-300/400 CPUs.

Siemens TIA Portal: Double Precision

Generates Structured Text code for Siemens TIA Portal S7-1200 and S7-1500 CPUs. THE IDE also supports the int8 data type, unsigned integer data types, and double-precision, floating-point data types. The code uses LREAL type for double data type in the model and can be used on Siemens PLC devices that support the LREAL type.

Generic

Generates a pure Structured Text file. If the target IDE that you want is not available for the Simulink PLC Coder product, consider generating and downloading a generic Structured Text file.

PLCopen XML

Generates Structured Text code formatted using PLCopen XML standard.

Rexroth Indraworks

Generates Structured Text code for Rexroth IndraWorks version 13V12 IDE.

OMRON Sysmac Studio

Generates Structured Text code for OMRON® Sysmac® Studio Version 1.04, 1.05, or 1.09.

Selectron CAP1131

Generates Structured Text code for Selectron CAP1131 v 11 IDE.

Tips

- Rockwell Automation RSLogix 5000 routines represent the model hierarchy using hierarchical user-defined types (UDTs). UDT types preserve model hierarchy in the generated code.
- The coder generates code for reusable subsystems as separate routine instances. These subsystems access instance data in program tag fields.

Command-Line Information

Parameter: PLC_TargetIDE

Type: string

Value: 'codesys23' | 'codesys33' | 'codesys35' | 'rslogix5000' |
'rslogix5000_routine' | 'studio5000' | 'studio5000_routine' | 'brautomation30' |
'brautomation40' | 'multiprog50' | 'pcworx60' | 'step7' | 'plcopen' | 'twincat211' |
'twincat3' | 'generic' | 'indraworks' | 'omron' | 'tiaportal' | 'tiaportal_double'
Default: 'codesys23'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Show Full Target List

View the full list of supported target IDEs in the **Target IDE** drop-down list. For more information, see "Target IDE" on page 12-3. This option is available on the **PLC Code Generation** pane in the Configuration Parameters dialog box.

Settings

Default: On



The **Target IDE** list displays the full set of supported IDEs. For more information, see "Supported IDE Platforms".



The **Target IDE** list displays only the more commonly used IDEs. The default subset contains the following IDEs:

- codesys23 3S-Smart Software Solutions CoDeSys Version 2.3 (default) target IDE
- studio5000 Rockwell Automation Studio 5000 Logix Designer target IDE for AOI format
- step7 Siemens SIMATIC STEP 7 target IDE
- omron OMRON Sysmac Studio
- plcopen PLCopen XML target IDE

You can customize the entries in the reduced **Target IDE** list by using the plccoderpref function.

Command-Line Information

Parameter: PLC ShowFullTargetList

Type: string

Value: 'on' | 'off'

Default: 'on'

You can change the contents of the reduced **Target IDE** list using the plccoderpref function. See plccoderpref.

Target IDE Path

Specify the target IDE installation path. The path already specified is the default installation path for the target IDE. Change this path if your IDE is installed in a different location. This option is available on the **PLC Code Generation** pane in the Configuration Parameters dialog box.

Settings

Default: C:\Program Files\3S Software

C:\Program Files\3S Software

Default installation path for 3S-Smart Software Solutions CoDeSys software Version 2.3.

C:\Program Files\3S CoDeSys

Default installation path for 3S-Smart Software Solutions CoDeSys software Version 3.3 and 3.5.

C:\Program Files\BrAutomation

Default installation path for B&R Automation Studio 3.0 and 4.0 software.

C:\TwinCAT

Default installation path for Beckhoff TwinCAT 2.11 and 3 software.

C:\Program Files\KW-Software\MULTIPROG 5.0

Default installation path for PHOENIX CONTACT (previously KW) Software MULTIPROG 5.0 software. For MULTIPROG 5.50, the installation path may be different, change accordingly.

C:\Program Files\Phoenix Contact\Software Suite 150

Default installation path for Phoenix Contact PC WORX 6.0 software.

C:\Program Files\Rockwell Software

Default installation path for Rockwell Automation RSLogix 5000 software.

C:\Program Files\Siemens

Default installation path for Siemens SIMATIC STEP 7 5.4 software.

C:\Program Files\Siemens\Automation

Default installation path for Siemens TIA Portal software.

Tips

- When you change the **Target IDE** value, the value of this parameter changes.
- If you right-click the Subsystem block, the PLC Code > Generate and Import Code for **Subsystem** command uses this value to import generated code.
- If your target IDE installation is standard, do not edit this parameter. Leave it as the default value.
- If your target IDE installation is nonstandard, edit this value to specify the actual installation path.
- If you change the path and click **Apply**, the changed path remains for that target IDE for other models and between MATLAB sessions. To reinstate the factory default, use the command:

```
plccoderpref('plctargetidepaths','default')
```

Command-Line Information

See plccoderpref.

See Also

"Import Structured Text Code Automatically" on page 1-17

Code Output Directory

Enter a path to the target folder into which code is generated. This option is available on the **PLC Code Generation** pane in the Configuration Parameters dialog box.

Settings

Default: plcsrc subfolder in your working folder

Command-Line Information Parameter: PLC OutputDir

Type: string
Value: string
Default: 'plcsrc'

Tips

- If the target folder path is empty, a default value of ./plcsrc is used as the **Code Output Directory**.
- If, you want to generate code in the current folder use . as the output directory.
- The Code Output Directory can have the same name as your current working folder.

See Also

"Generate Structured Text from the Model Window" on page 1-9

Generate Testbench for Subsystem

Specify the generation of test bench code for the subsystem. This option is available on the **PLC Code Generation** pane in the Configuration Parameters dialog box.

Settings

Default: off



Enables generation of test bench code for subsystem.

Disables generation of test bench code for subsystems.

Command-Line Information

Parameter: PLC_GenerateTestbench

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Include Testbench Diagnostic Code

Specify the generation of test bench code with additional diagnostic information that will help you identify output variables causing test bench failures. This option is available on the PLC Code Generation pane in the Configuration Parameters dialog box. To enable this parameter, you must select the **Generate testbench for subsystem** option

Settings

Default: off



Enables generation of test bench code with additional diagnostic information.



Disables generation of test bench code with additional diagnostic information.

Command-Line Information

Parameter: PLC_GenerateTestbenchDiagCode

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Generate Functions Instead of Function Block

Use this option to control whether the generated Structured Text code contains Function instead of Function Block. This option is available for only the Phoenix Contact PC WORX or the PHOENIX CONTACT (previously KW) Software MULTIPROG target. There are certain cases where you may not be able to generate code with Function instead of Function Block. For example, if your Simulink subsystem or MATLAB Function block has internal state or persistent variables. In such cases, the software issues a diagnostic warning.

This option is available on the **PLC Code Generation** pane in the Configuration Parameters dialog box, when the Target IDE is set to Phoenix Contact PC WORX 6.0 or KW-Software MULTIPROG 5.0.

Settings

Default: off

On

The generated Structured Text code contains Function instead of Function Block where possible.

Off

Switch to the default behavior of the software.

Command-Line Information

Parameter: PLC EmitAsPureFunctions

Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Allow Functions with Zero Inputs

Emit a function with no inputs as a function instead of a function block. This option is available for only the Phoenix Contact PC WORX or the PHOENIX CONTACT (previously KW) Software MULTIPROG target.

When the **Target IDE** is set to Phoenix Contact PC WORX 6.0 or KW-Software MULTIPROG 5.0, in the Configuration parameters dialog box, **PLC Code Generation** pane, this option is available.

Settings

Default: off



The generated Structured Text code contains Function instead of Function Blocks when there is a function with no inputs.

Off

The generated Structured Text code contains function blocks and no functions.

Command-Line Information

Parameter: PLC_PureFunctionNoInputs

Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Suppress Auto-Generated Data Types

Use this option to control whether the generated Structured Text code contains auto-generated data types for array types. This option is available for only the Phoenix Contact PC WORX or the PHOENIX CONTACT (previously KW) Software MULTIPROG target.

This option is available on the **PLC Code Generation** pane in the Configuration Parameters dialog box, when the Target IDE is set to Phoenix Contact PC WORX 6.0 or KW-Software MULTIPROG 5.0.

Settings

Default: off



The software automatically generates named types for array types in your Simulink model.

Off

Switch to the default behavior of the software.

Command-Line Information

Parameter: PLC_SuppressAutoGenType

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Emit Data type Worksheet Tags for PCWorx

Use this option to control whether datatypeWorksheet tags are represented in code generated for Phoenix Contact PC WORX target. This option allows you to have finer control and generate multiple datatypeWorksheet definitions.

This option is available on the PLC Code Generation pane in the Configuration Parameters dialog box, when the **Target IDE** is set to Phoenix Contact PC WORX 6.0.

Settings

Default: off



The datatypeWorksheet tags are marked as separate tags in the generated code.

Off

No separate datatypeWorksheet tags are in the generated code.

Command-Line Information

Parameter: PLC EmitDatatypeWorkSheet

Type: string
Value: 'on' | 'off'
Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Aggressively Inline Structured Text Function Calls

Using this option, you can control inlining of Structured Text function calls for Rockwell Automation targets. By default, the software attempts to inline only math functions where possible. With this option, the software aggressively inlines all function calls so that the generated code has less number of Function blocks.

This option is available on the **PLC Code Generation** pane in the Configuration Parameters dialog box, when the **Target IDE** is set to Rockwell Automation targets such as Rockwell Studio 5000: AOI, Rockwell Studio 5000: Routine, Rockwell RSLogix 5000: AOI, or Rockwell RSLogix 5000: Routine.

Settings

Default: off



Aggressively inlines Structured Text function calls for RSLogix IDE.



Reverts to its default behavior and inlines only math function calls in the generated code.

Command-Line Information

Parameter:PLC EnableAggressiveInlining


Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

- "Generate Structured Text from the Model Window" on page 1-9
- "Generated Code Structure for Simple Simulink Subsystems" on page 2-2

PLC Coder: Comments

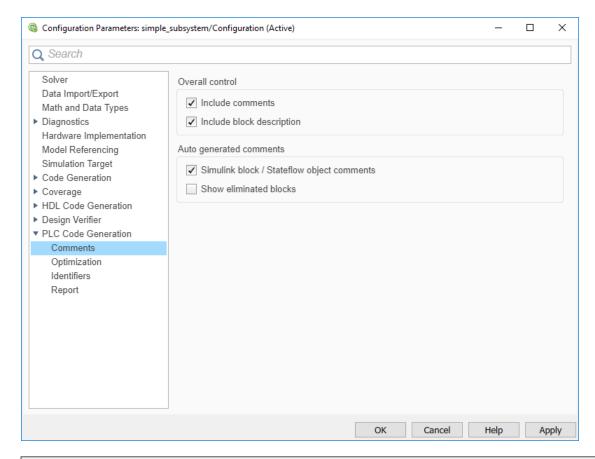

In this section...

"Comments Overview" on page 12-12

"Include Comments" on page 12-12

"Include Block Description" on page 12-13

"Simulink Block / Stateflow Object Comments" on page 12-14

"Show Eliminated Blocks" on page 12-14

Comments Overview

Control the comments that the Simulink PLC Coder software automatically creates and inserts into the generated code.

See Also

"Generate Structured Text from the Model Window" on page 1-9

Include Comments

Specify which comments are in generated files. This option is available on the **PLC Code Generation** > **Comments** pane in the Configuration Parameters dialog box.

Settings

Default: on



Places comments in the generated files based on the selections in the **Auto generated comments** pane.

If you create links to requirements documents from your model using the Simulink Requirements software, the links also appear in generated code comments.



Omits comments from the generated files.

Command-Line Information

Parameter: PLC RTWGenerateComments

Type: string

Value: 'on' | 'off'
Default: 'on'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Include Block Description

Specify which block description comments are in generated files. This option is available on the **PLC Code Generation** > **Comments** pane in the Configuration Parameters dialog box.

Settings

Default: on



Places comments in the generated files based on the contents of the block properties **General** tab.

Off

Omits block descriptions from the generated files.

Command-Line Information

Parameter: PLC PLCEnableBlockDescription

Type: string

Value: 'on' | 'off'
Default: 'on'

See Also

- "Propagate Block Descriptions to Code Comments" on page 1-13
- "Generate Structured Text from the Model Window" on page 1-9

Simulink Block / Stateflow Object Comments

Specify whether to insert Simulink block and Stateflow object comments. This option is available on the **PLC Code Generation > Comments** pane in the Configuration Parameters dialog box.

Settings

Default: on



Inserts automatically generated comments that describe block code and objects. The comments precede that code in the generated file.



Suppresses comments.

Command-Line Information

Parameter: PLC RTWSimulinkBlockComments

Type: string

Value: 'on' | 'off' Default: 'on'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Show Eliminated Blocks

Specify whether to insert eliminated block comments. This option is available on the PLC Code **Generation > Comments** pane in the Configuration Parameters dialog box.

Settings

Default: off



Inserts statements in the generated code from blocks eliminated as the result of optimizations (such as parameter inlining).



Suppresses statements.

Command-Line Information

Parameter: PLC RTWShowEliminatedStatement


Type: string

Value: 'on' | 'off' Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

PLC Coder: Optimization

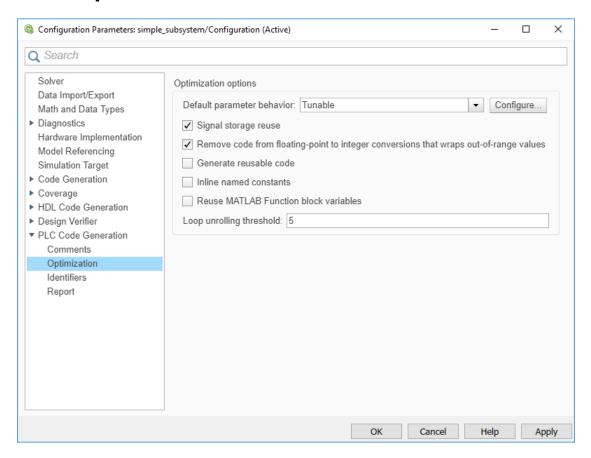

In this section... "Optimization Overy

"Optimization Overview" on page 12-15

"Default Parameter Behavior" on page 12-16

"Signal Storage Reuse" on page 12-17

"Remove Code from Floating-Point to Integer Conversions That Wraps Out-Of-Range Values" on page 12-17

"Generate Reusable Code" on page 12-18

"Inline Named Constants" on page 12-19

"Reuse MATLAB Function Block Variables" on page 12-20

"Loop Unrolling Threshold" on page 12-20

Optimization Overview

Select the code generation optimization settings.

See Also

"Generate Structured Text from the Model Window" on page 1-9

Default Parameter Behavior

Transform numeric block parameters into constant inlined values in the generated code. This option is available on the **PLC Code Generation > Optimization** pane in the Configuration Parameters dialog box.

Description

Transform numeric block parameters into constant inlined values in the generated code.

Category: Optimization

Settings

Default: Tunable for GRT targets | Inlined for ERT targets

Inlined

Set **Default parameter behavior** to Inlined to reduce global RAM usage and increase efficiency of the generated code. The code does not allocate memory to represent numeric block parameters such as the Gain parameter of a Gain block. Instead, the code inlines the literal numeric values of these block parameters.

Tunable

Set **Default parameter behavior** to Tunable to enable tunability of numeric block parameters in the generated code. The code represents numeric block parameters and variables that use the storage class Auto, including numeric MATLAB variables, as tunable fields of a global parameters structure.

Tips

- Whether you set **Default parameter behavior** to Inlined or to Tunable, create parameter data objects to preserve tunability for block parameters. For more information, see "Create Tunable Calibration Parameter in the Generated Code" (Simulink Coder).
- When you switch from a system target file that is not ERT-based to one that is ERT-based, **Default** parameter behavior sets to Inlined by default. However, you can change the setting of **Default** parameter behavior later.
- When a top model uses referenced models, or if a model is referenced by another model:
 - All referenced models must set **Default parameter behavior** to Inlined if the top model has **Default parameter behavior** set to Inlined.
 - The top model can specify **Default parameter behavior** as Tunable or Inlined.
- If your model contains an Environment Controller block, you can suppress code generation for the branch connected to the Sim port if you set **Default parameter behavior** to Inlined and the branch does not contain external signals.

Command-Line Information

Parameter: PLC PLCEnable Var Reuse

Type: string

Value: 'on' | 'off' Default: 'on'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Signal Storage Reuse

Reuse signal memory. This option is available on the **PLC Code Generation > Optimization** pane in the Configuration Parameters dialog box.

Settings

Default: on



Reuses memory buffers allocated to store block input and output signals, reducing the memory requirement of your real-time program.



Allocates a separate memory buffer for each block's outputs. This allocation makes block outputs global and unique, which in many cases significantly increases RAM and ROM usage.

Tips

- This option applies only to signals with storage class Auto.
- Signal storage reuse can occur among only signals that have the same data type.
- Clearing this option can substantially increase the amount of memory required to simulate large models.
- Clear this option if you want to:
 - Debug a C-MEX S-function.
 - Use a Floating Scope or a Display block with the **Floating display** option selected to inspect signals in a model that you are debugging.
- If you select **Signal storage reuse** and attempt to use a Floating Scope or floating Display block to display a signal whose buffer has been reused, an error dialog box opens.

Command-Line Information

Parameter:PLC_PLCEnableVarReuse
Type: string

Value: 'on' | 'off'
Default: 'on'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Remove Code from Floating-Point to Integer Conversions That Wraps Out-Of-Range Values

Enable code removal for efficient casts. This option is available on the **PLC Code Generation** > **Optimization** pane in the Configuration Parameters dialog box.

Settings

Default: on



Removes code from floating-point to integer conversions.

Of

Does not remove code from floating-point to integer conversions.

Tips

Use this parameter to optimize code generation.

Command-Line Information

Parameter: PLC_PLCEnableEfficientCast

Type: string

Value: 'on' | 'off'
Default: 'on'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Generate Reusable Code

Using this option, you can generate better reusable code for reusable subsystems. For instance, if your model contains multiple instances of the same subsystem and some instances have constant inputs, by default, the generated code contains separate function blocks for each instance. If you select this option, the software does not consider whether the inputs to the subsystem are constant and generates one function block for the multiple instances.

This option is available on the **PLC Code Generation > Optimization** pane in the Configuration Parameters dialog box.

Settings

Default: off



Generates better reusable code for reusable subsystems.

Off

Reverts to its default behavior. Instead of a single reusable function block, the software generates separate function blocks for individual instances of a reusable subsystem because of certain differences in their inputs.

Tips

• If you find multiple function blocks in your generated code for multiple instances of the same subsystem, select this option. The software performs better identification of whether two

instances of a subsystem are actually the same and whether it can combine the multiple blocks into one reusable function block.

- If different instances of a subsystem have different values of a block parameter, you cannot generate reusable code. Clear this option or use the same block parameter for all instances.
- Despite selecting this option, if you do not see reusable code for different instances of a subsystem, you can determine the reason. To determine if two reusable subsystems are identical, the code generator internally uses a checksum value. You can compare the checksum values for two instances of a subsystem and investigate why they are not identical.

To get the checksum values for the two instances that you expect to be identical, use the function Simulink.SubSystem.getChecksum. If the checksum values are different, investigate the checksum details to see why the values are not identical.

Command-Line Information

Parameter:PLC GenerateReusableCode

Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

- "Generate Structured Text from the Model Window" on page 1-9
- "Generated Code Structure for Reusable Subsystems" on page 2-4

Inline Named Constants

Using this option, you can control inlining of global named constants. By default, the generated code contains named ssMethodType constants for internal states or other Simulink semantics. If you select this option, the software replaces the named constants with its integer value.

This option is available on the **PLC Code Generation > Optimization** pane in the Configuration Parameters dialog box.

Settings

Default: off



Inlines named constants.



Reverts to its default behavior and uses named constants in the generated code.

Command-Line Information

Parameter:PLC InlineNamedConstant

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

- "Generate Structured Text from the Model Window" on page 1-9
- "Generated Code Structure for Simple Simulink Subsystems" on page 2-2

Reuse MATLAB Function Block Variables

You can use this option to enable reuse of MATLAB function block variables in the generated code.

This option is available on the **PLC Code Generation > Optimization** pane in the Configuration Parameters dialog box.

Settings

Default: off



Generates code that reuses MATLAB Function block variables where appropriate.



Reverts to its default behavior and does not reuse variables in the generated code.

Command-Line Information

Parameter: PLC ReuseMLFcnVariable

Type: string Value: 'on' | 'off' Default: 'off'

See Also

- "Generate Structured Text from the Model Window" on page 1-9
- "Generated Code Structure for MATLAB Function Block" on page 2-12

Loop Unrolling Threshold

Specify the minimum signal or parameter width for which a for loop is generated. This option is available on the **PLC Code Generation > Optimization** pane in the Configuration Parameters dialog box.

Settings

Default: 5

Specify the array size at which the code generator begins to use a for loop instead of separate assignment statements to assign values to the elements of a signal or parameter array.

When the loops are perfectly nested loops, the code generator uses a for loop if the product of the loop counts for all loops in the perfect loop nest is greater than or equal to this threshold.

Command-Line Information


Parameter: PLC_RollThreshold

Type: string
Value: any valid value
Default: '5'

See Also

"Generate Structured Text from the Model Window" on page 1-9 $\,$

PLC Coder: Identifiers

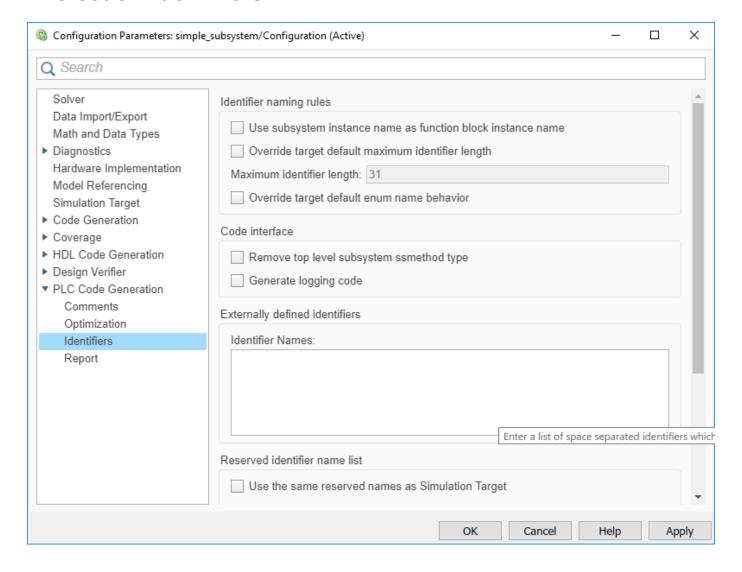

"Identifiers Overview" on page 12-23 "Use Subsystem Instance Name as Function Block Instance Name" on page 12-23 "Override Target Default Maximum Identifier Length" on page 12-23 "Maximum Identifier Length" on page 12-24 "Override Target Default enum Name Behavior" on page 12-24 "Generate enum Cast Function" on page 12-25 "Use the Same Reserved Names as Simulation Target" on page 12-26 "Reserved Names" on page 12-26 "Externally Defined Identifiers" on page 12-27 "Preserve Alias Type Names for Data Types" on page 12-27

Identifiers Overview

Select the automatically generated identifier naming rules.

See Also

"Generate Structured Text from the Model Window" on page 1-9

Use Subsystem Instance Name as Function Block Instance Name

Specify how you want the software to name the Function block instances it generates for the subsystem. When you select this option, the software uses the subsystem instance name as the name of the Function blocks in the generated code. By default, the software generates index-based instance names.

This option is available on the **PLC Code Generation** > **Identifiers** pane in the Configuration Parameters dialog box.

Settings

Default: off



Uses the subsystem instance name as the name of the Function block instances in the generated code.



Uses auto-generated index-based instance names for the Function blocks in the generated code.

Command-Line Information

Parameter: PLC FBUseSubsystemInstanceName

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Override Target Default Maximum Identifier Length

If your custom target IDE version supports long name identifiers, you can use this option along with the Maximum identifier length to specify the maximum number of characters in the generated function, type definition, and variable names. By default, the software complies with the maximum identifier length of standard versions of the target IDE and ignores unsupported values specified in the **Maximum identifier length**.

This option is available on the **PLC Code Generation** > **Identifiers** pane in the Configuration Parameters dialog box.

Settings

Default: off

On

Override target default maximum identifier length in the generated code.



The generated code uses the default identifier length of the target IDE.

Command-Line Information

Parameter: PLC OverrideDefaultNameLength

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Maximum Identifier Length

Specify the maximum number of characters in generated function, type definition, and variable names. This option is available on the PLC Code Generation > Identifiers pane in the Configuration Parameters dialog box.

Settings

Default: 31

Minimum: 31

Maximum: 256

You can use this parameter to limit the number of characters in function, type definition, and variable names. Many target IDEs have their own restrictions for these names. Simulink PLC Coder complies with target IDE limitations.

Command-Line Information

Parameter: PLC RTWMaxIdLength

Type: int

Value: 31 to 256 Default: 31

See Also

"Generate Structured Text from the Model Window" on page 1-9

Override Target Default enum Name Behavior

Use this option to enable enum names to be used as the identifier names instead of enum values. The PLC target IDE must support enum type.

This option is available on the **PLC Code Generation** > **Identifiers** pane in the Configuration Parameters dialog box.

Settings

Default: off



Override target default enum behavior and always have enum names instead of enum values.



The generated code uses the enum behavior of the target IDE.

Command-Line Information

Parameter: PLC_GenerateEnumSymbolicName

Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Generate enum Cast Function

Autogenerate the enum type conversion code. The target PLC IDE must support enum type.

This option is available in the Configuration Parameters dialog box, **PLC Code Generation > Identifiers** pane .

Settings

Default: off



Simulink PLC Coder autogenerates the enum type conversion code.

Off

Manually create a MATLAB function to convert the enum type value to an integer or to convert an integer to an enum type value.

Command-Line Information

Parameter: PLC_GenerateEnumCastFunction

Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Use the Same Reserved Names as Simulation Target

Specify whether to use the same reserved names as those specified in the **Reserved names** field of the Simulation Target pane in the Configuration Parameters dialog box. This option is available on the **PLC Code Generation > Identifiers** pane in the Configuration Parameters dialog box.

Settings

Default: off



Uses the same reserved names as those specified in the **Reserved names** filed of the **Simulation** Target pane in the Configuration Parameters dialog box.



Does not use the same reserved names as those specified in the **Simulation Target** > Identifiers pane pane.

Command-Line Information

Parameter: PLC RTWUseSimReservedNames

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Reserved Names

Enter the names of variables or functions in the generated code that you do not want to be used. This option is available on the PLC Code Generation > Identifiers pane in the Configuration Parameters dialog box.

Settings

Default: ()

Changes the names of variables or functions in the generated code to avoid name conflicts with identifiers in custom code. Reserved names must be fewer than 256 characters in length.

Tips

- Start each reserved name with a letter or an underscore.
- Each reserved name must contain only letters, numbers, or underscores.
- Separate the reserved names by using commas or spaces.

Command-Line Information

Parameter: PLC RTWReservedNames

Type: string Value: string Default: ' '

See Also

"Generate Structured Text from the Model Window" on page 1-9

Externally Defined Identifiers

Specify the names of identifiers for which you want to suppress definitions. This option is available on the **PLC Code Generation > Identifiers** pane in the Configuration Parameters dialog box.

Settings

Default: ()

Suppresses the definition of identifiers, such as those for function blocks, variables, constants, and user types in the generated code. This suppression allows the generated code to refer to these identifiers. When you import the generated code into the PLC IDE, you must provide these definitions.

Tips

- Start each name with a letter or an underscore.
- Each name must contain only letters, numbers, or underscores.
- Separate the names by using spaces or commas.

Command-Line Information

Parameter: PLC ExternalDefinedNames

Type: string Value: string Default: ''

See Also

- "Generate Structured Text from the Model Window" on page 1-9
- "Integrate Externally Defined Identifiers" on page 8-2
- Integrating User Defined Function Blocks, Data Types, and Global Variables into Generated Structured Text

Preserve Alias Type Names for Data Types

Specify that the generated code must preserve alias data types from your model. This option is available on the **PLC Code Generation** > **Identifiers** pane in the Configuration Parameters dialog box.

Using the Simulink.AliasType class, you can create an alias for a built-in Simulink data type. If you assign an alias data type to signals and parameters in your model, when you use this option, the generated code uses your alias data type to define variables corresponding to the signals and parameters.

For instance, you can create an alias SAFEB00L from the base data type boolean. If you assign the type SAFEB00L to signals and parameters in your model, the variables in the generated code corresponding to those signals and parameters also have the type SAFEB00L. Using this alias type SAFEB00L, you can conform to PLCopen safety specifications that suggest using safe data types for differentiation between safety-relevant and standard signals.

Settings

Default: off



The generated code preserves alias data types from your model.

For your generated code to be successfully imported to your target IDE, the IDE must support your alias names.



The generated code does not preserve alias types from your model. Instead, the base type of the Simulink.AliasType class determines the variable data type in generated code.

Tips

The alias that you define for a Simulink type must have the same semantic meaning as the base Simulink type. It must not be a data type already supported in Structured Text and semantically different from the base Simulink type. For instance, WORD is a data type supported in Structured Text but is semantically different from an integer type. If you define an alias WORD for a Simulink built-in integer type, for instance uint16, and preserve the alias name, the type WORD that appears in your generated code is used semantically as a WORD and not as an INT. The generated code has a different meaning from the semantics of the model.


Command-Line Information

Parameter: PLC PreserveAliasType

Type: string

Value: 'on' | 'off'
Default: 'off'

PLC Coder: Report

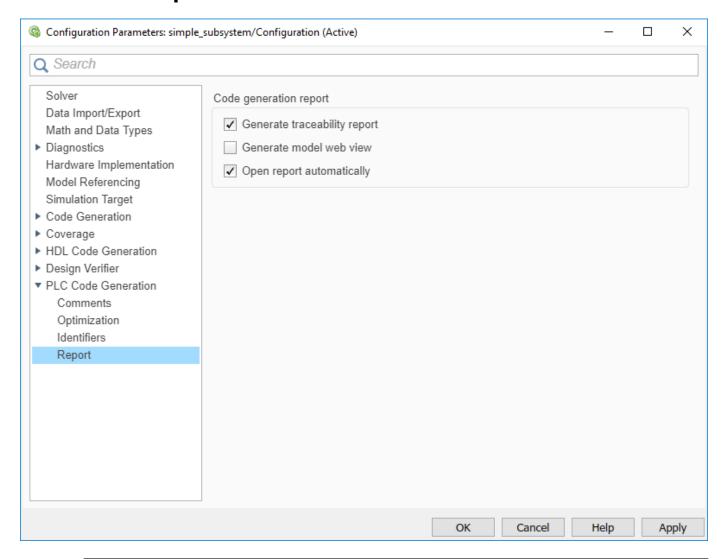

In this section...

"Report Overview" on page 12-29

"Generate Traceability Report" on page 12-30

"Generate Model Web View" on page 12-30

"Open Report Automatically" on page 12-31

Report Overview

After code generation, specify whether a report must be produced. Control the appearance and contents of the report.

The code generation report shows a mapping between Simulink model objects and locations in the generated code. The report also shows static code metrics about files, global variables, and function blocks.

See Also

"Generate Structured Text from the Model Window" on page 1-9

Generate Traceability Report

Specify whether to create a code generation report. This option is available on the PLC Code **Generation > Report** pane in the Configuration Parameters dialog box.

Settings

Default: on



Creates code generation report as an HTML file.



Suppresses creation of code generation report.

Command-Line Information

Parameter: PLC GenerateReport

Type: string

Value: 'on' | 'off' Default: 'on'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Traceability Report Limitations

Simulink PLC Coder does not generate a traceability report file when generating Ladder Diagrams from Stateflow charts. However, traceability report file is generated when generating Structured Text from Stateflow charts.

Ladder Diagrams. charts. However, traceability report file is generated when generating Structured Text from charts.

Generate Model Web View

To navigate between the code and the model within the same window, include the model web view in the code generation report. This option is available on the PLC Code Generation > Report pane in the Configuration Parameters dialog box.

You can share your model and generated code outside of the MATLAB environment. You must have a Simulink Report Generator to include a Web view (Simulink Report Generator) of the model in the code generation report.

Settings

Default: Off

On

Includes model Web view in the code generation report.

Off

Omits model Web view in the code generation report.

Command-Line Information

Parameter: PLC_GenerateWebView

Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Open Report Automatically

Specify whether to open the code generation report automatically. This option is available on the **PLC Code Generation** > **Report** pane in the Configuration Parameters dialog box.

Settings

Default: off

On

Opens the code generation report as an HTML file.

Off

Suppresses opening of the code generation report.

Command-Line Information

Parameter: PLC_LaunchReport


Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

PLC Coder:Interface

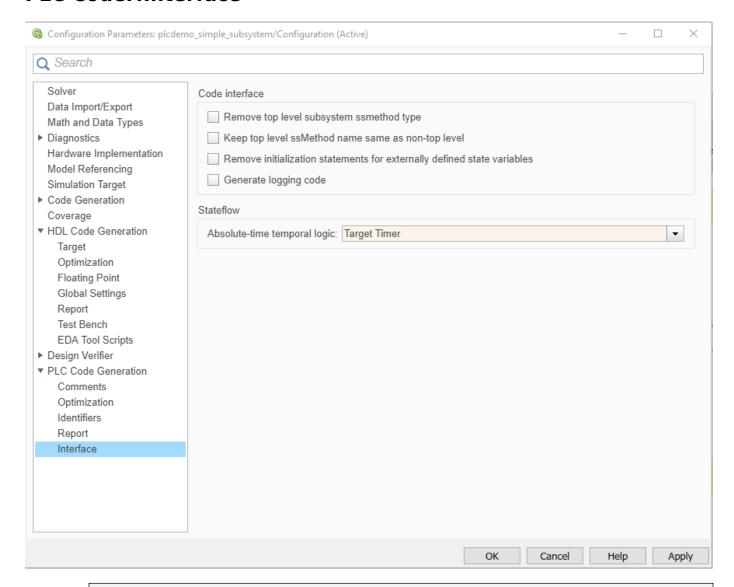

In this section...

"Interface Overview" on page 12-32

"Generate Logging Code" on page 12-33

"Keep Top-Level ssmethod Name the Same as the Non-Top Level Name" on page 12-33

"Remove Top-level Subsystem Ssmethod Type" on page 12-34

"Remove Initialization Statements for Externally Defined State Variables" on page 12-34

"Absolute-Time Temporal Logic" on page 12-35

Interface Overview

The **PLC Code Generation > Interface** category includes parameters for configuring the interface of the generated code.

See Also

"Generate Structured Text from the Model Window" on page 1-9

Generate Logging Code

With this option, you can generate code with logging instrumentation to collect run-time data on supported PLC targets. The PLC target IDEs must have support for inout variables. For Rockwell Automation targets, you can set up an Open Platform Communications (OPC) server and use the Simulation Data Inspector (SDI) in Simulink to visualize and monitor the logging data.

This option is available on the **PLC Code Generation > Interface** pane in the Configuration Parameters dialog box.

Settings

Default: off



Generate Function block logging code for supported targets.

Off

No logging instrumentation is included in the generated code.

Command-Line Information

Parameter: PLC GenerateLoggingCode

Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Keep Top-Level ssmethod Name the Same as the Non-Top Level Name

Prevent renaming the SS_OUTPUT type to SS_STEP type from the top-level subsystem argument interface. When you select this option, the software emits the same ssMethod type in the code generation for both top and non-top level blocks.

This option is available on the **PLC Code Generation** > **Interface** pane in the Configuration Parameters dialog box.

Settings

Default: off

On

Generated code for top-level block does not contain the SS STEP type in generated code.

Off

Generated code contains SS STEP AND SS OUTPUT type function blocks.

Command-Line Information

Parameter: PLC RemoveSSStep

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

- "Distributed Model Code Generation Options" on page 23-2
- "Generated Code Structure for PLC RemoveSSStep" on page 23-3

Remove Top-level Subsystem Ssmethod Type

Use this option to remove the ssmethod type from the top-level subsystem argument interface. When this option is enabled, the software removes the ssmethod type and converts the subsystem initialization code from switch case statement to conditional if statement. As a result, the generated code has the same interface as the model subsystem.

This option is available on the **PLC Code Generation** > **Interface** pane in the Configuration Parameters dialog box.

Settings

Default: off



Remove top level function block ssmethod type in generated code.



Generated code contains ssmethod type Function block and switch case statements.

Command-Line Information

Parameter: PLC RemoveTopFBSSMethodType

Type: string

Value: 'on' | 'off' Default: 'off'

See Also

"Generate Structured Text from the Model Window" on page 1-9

Remove Initialization Statements for Externally Defined State **Variables**

Use this option to remove initialization assignment statements for variables that have storage class ImportedExtern and ExportedGlobal from the generated code.

Mark ExportedGlobal variables as externally defined. For more information, see "Externally Defined Identifiers" on page 12-27

Settings

Default: off



Remove from the generated code initialization assignment statements for variables that have storage class ImportedExtern and ExportedGlobal.

Off

Generated code contains initialization assignment statements for variables that have storage class ImportedExtern and ExportedGlobal.

Command-Line Information

Parameter: PLC PreventExternalVarInitialization

Type: string

Value: 'on' | 'off'
Default: 'off'

See Also

- "Distributed Model Code Generation Options" on page 23-2
- "Generated Code Structure for PLC PreventExternalVarInitialization" on page 23-5

Absolute-Time Temporal Logic

Use this option to specify if the generated code uses the target timer or a target-independent counter for Stateflow absolute-time temporal logic semantics implementation.

Settings

Default: Target Timer

Target Timer

Generated code uses the target timer to implement Stateflow absolute-time temporal logic semantics.

Target-independent Counter

Generated code contains a target-independent integer counter to implement Stateflow absolute-time temporal logic semantics.

Command-Line Information

Parameter: PLC AbsTimeTemporalLogic

Type: character vector

Value: 'timer' | 'counter'

Default: 'timer'

Limitations

- Absolute-time temporal logic does not support stateflow chart using global clocks.
- Testbench code verification can fail for absolute-time temporal logic using floating-point comparison operations.

External Mode

- "External Mode Logging" on page 13-2
- "Generate Structured Text Code with Logging Instrumentation" on page 13-3
- "Use the Simulation Data Inspector to Visualize and Monitor the Logging Data" on page 13-7

External Mode Logging

With external mode logging, you can generate code from Simulink models with logging instrumentation to collect run-time data on PLC targets. You can enable this feature by using **Generate logging code** option in the configuration parameters or by using the PLC_GenerateLoggingCode command-line property. The PLC target IDEs must have support for inout variables. You can generate logging code for one of the following target PLC IDEs:

- 3S-Smart Software Solutions CoDeSys Version 2.3
- 3S-Smart Software Solutions CoDeSys Version 3.5
- Rockwell Automation RSLogix 5000
- Rockwell Automation Studio 5000
- Beckhoff TwinCAT 2.11
- Beckhoff TwinCAT 3
- Generic
- PLCopen XML
- · Rexroth IndraWorks
- · OMRON Sysmac Studio

For Rockwell Automation targets, you can set up an Open Platform Communications (OPC) server and use the Simulation Data Inspector in Simulink to visualize and monitor the logging data. The OPC Toolbox $^{\text{\tiny TM}}$ is required to run the external mode visualization.

See Also

More About


- "Generate Structured Text Code with Logging Instrumentation" on page 13-3
- "Use the Simulation Data Inspector to Visualize and Monitor the Logging Data" on page 13-7

Generate Structured Text Code with Logging Instrumentation


This topic assumes that you have generated Structured Text code from a Simulink model. If you have not yet done so, see "Generate Structured Text from the Model Window" on page 1-9.


The example in this topic shows generated code for the Rockwell Automation Studio 5000 IDE. Generated code for other IDE platforms looks different.

1 Create a Simulink model ext_demol.slx containing a top-level subsystem with two child subsystems S1, S2, a MATLAB Function block and a Stateflowchart.

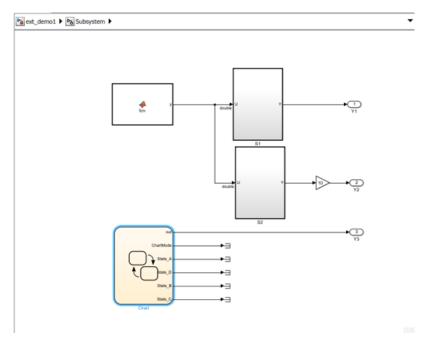

2 The S1, S2 blocks are identical and contain simple feedback loop. The Stateflow chart contains a simple state machine.

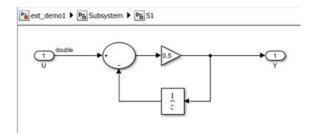

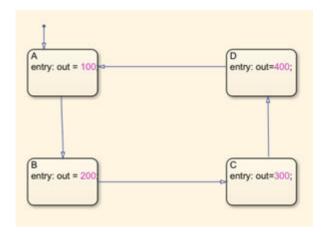

3 The MATLAB function block implements the following code:


```
function y = fcn
persistent i;

if isempty(i)
    i=0;
end

if (i>20)
    i = 0;
else
    i=i+1;
end
```


 $y = \sin(pi*i/10);$

4 Select the top-level subsystem and open the configuration parameters window. On the **PLC Code Generation** pane, select the **Target IDE** as Rockwell Studio 5000: AOI. On the **Identifiers**pane, select **Generate logging code**.

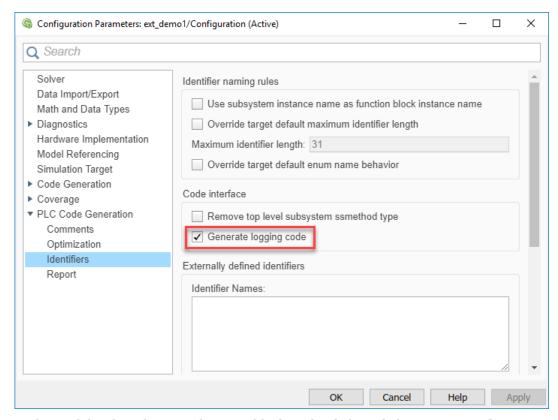

In the model, select the top subsystem block, right-click, and choose **PLC Code>Generate Code** for **Subsystem**.

This operation generates L5X AOI code for the top subsystem block and the children S1, S2, MATLAB function, and Stateflow chart blocks. In the code folder, it also generates plc_log_data.mat which has the logging data information.

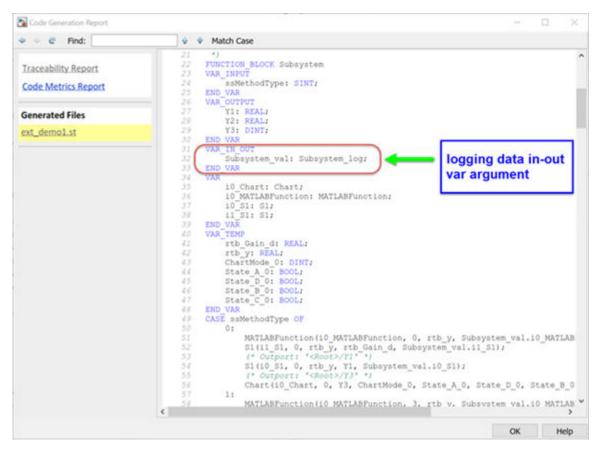

6 After generating the code, you can download and run the logging code from the PLC IDE.

See Also

More About

- "External Mode Logging" on page 13-2
- "Use the Simulation Data Inspector to Visualize and Monitor the Logging Data" on page 13-7

Use the Simulation Data Inspector to Visualize and Monitor the Logging Data

This workflow is supported for Rockwell Automation targets. This workflow shows you how to set up an Open Platform Communications (OPC) server and use the Simulation Data Inspector in Simulink to visualize and monitor the logging data.

Set Up and Download Code to the Studio 5000 IDE

The following procedure shows you how to create a Studio 5000 project to import the generated logging code. You can use a similar procedure to import the generated code into an existing project.


- 1 Start the Studio 5000 IDE and create project with the name ext demo1.
- 2 Import the generated ext_demo.L5X to the Add-On Instructions tree node of the project.
- 3 In the MainProgram node, delete the ladder MainRoutine and create an ST MainRoutine node.



4 In ST MainRoutine, define the following tags:

Tag Name	Tag Type
i0_Subsystem	Subsystem
i0_Subsystem_val	Subsystem_log
Init	B00L
Y1	REAL
Y2	REAL
Y3	DINT

5 The tag definition looks like the following in Studio 5000 IDE, i0_Subsystem tag is the instance of the top subsystem AOI, the i0_Subsystem_val tag is the log data with structure type Subsystem_log. Set the initial value of init tag to 1.

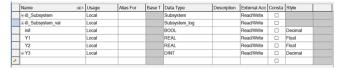


Double-click MainRoutine tree node and type in the following code. The statement Subsystem(i0_Subsystem, 23, Y1, Y2, Y3, i0_Subsystem_val) calls the logging method (ssmethod value=23) to log in data to the i0_Subsystem_val tag.

```
| Sectorities Organiser | Image: The control of the
```


7 Compile the project in Studio 5000 IDE, connect, and download to the PLC target.

Configure RSLinx OPC Server

- 1 Start RSLinx Classic Gateway, select the menu item DDE/OPC->Topic Configuration.
- In the resulting pop-up dialog box, create a topic ext_demo1 by using the New button. Select the target PLC from the PLC list.

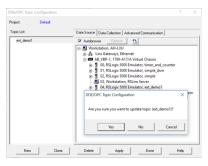

- 3 Click Yes button to update the topic (ext demo1).
- 4 To verify that the log data is set up on the OPC server, select the menu item Edit->Copy DDE/OPC Link. The i0_Subsystem_val tag for log data must be shown on the RSLinx OPC Server.

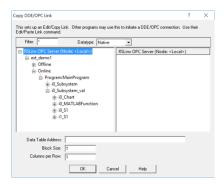

Use PLC External Mode Commands to Stream and Display Live Log Data


After the RSLinx OPC Server is configured, you can use the PLC external mode commands to connect to the server, stream, and display live logging data on the Simulation Data Inspector. The log data information is in the plc_log_data.mat file which can be found in plcsrc folder. You can use the plcdispextmodedata function to display the contents of the MAT-file. In the MATLAB command, type:

```
>>cd plcsrc
>>plcdispextmodedata plc_log_data.mat
```

```
Log data:
#1: Y1: LREAL
#2: Y2: LREAL
#3: Y3: LREAL
#4: io_Chart.out: DINT
#5: io_Chart.ChartMode: DINT
#6: io Chart.State A: BOOL
#7: io_Chart.State_B: B00L
#8: io_Chart.State_C: BOOL
#9: io_Chart.State_D: B00L
#10: io_Chart.is_active_c3_Subsystem: USINT
#11: io_MATLABFunction.y: LREAL
#12: io MATLABFunction.i: LREAL
#13: io S1.y: LREAL
#14: io S1.UnitDelay DSTATE: LREAL
#15: i1_S1.y: LREAL
#16: i1 S1.UnitDelay DSTATE: LREAL
```

The format for the log data information is index number, name, and type. The log data for non-top subsystem function block output and state variables are named using the dot notation to represent the function block instances that own the data. The index and name of the log data can be used with the plcrunextmode command to specify a subset of log data for streaming and visualization.

Use the plcrunextmode function to connect to the OPC server and stream log data. For example, executing plcrunextmode ('localhost', 'studio5000', 'ext_demo1', 'plc_log_data.mat'); command streams live log data for the example model in to Simulation Data Inspector.

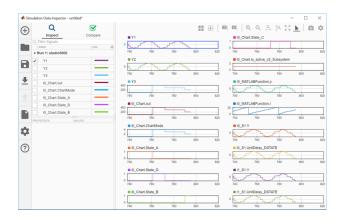

The plcrunextmode command continues to run and stream log data. To exit streaming, type Ctrl-C in MATLAB to stop.

See Also

plcdispextmodedata|plcrunextmode

More About

- "External Mode Logging" on page 13-2
- "Generate Structured Text Code with Logging Instrumentation" on page 13-3

Ladder Diagram Instructions

Instructions Supported in Ladder Diagram

The supported ladder diagram instructions are useful while importing the ladder into Simulink. The instructions can be categorised into two:

- Instructions that are implemented in Simulink using ladder diagram blocks with same name
- Instructions that are implemented in Simulink using other ladder diagram blocks.

The table lists the instructions that map to blocks in Simulink

Ladder Model Blocks
ADD Block
AFI Block
AND Block
CLR Block
COP Block
CTD Block
CTU Block
DIV Block
EQU Block
FBC Block
FLL Block
GEQ Block
GRT Block
JMP Block
LBL Block
LEQ Block
LES Block
MCR Block
MOV Block
MUL Block
NCP Block
NEQ Block
NOT Block
OR Block
OTE Block
OTL Block
OTU Block
RES Block
RTO Block

L5X Instructions	Ladder Model Blocks
SUB	SUB Block
TND	TND Block
TOF	TOF Block
TON	TON Block
XIC	XIC Block
XIO	XIO Block

The special instructions that are implemented using another block in Simulink are:

- JSR instruction is implemented by using a $Subroutine\ block$.
- AOI call instruction is implemented by using an Inline AOI block

Ladder Diagram Blocks

Ladder Diagram Blocks

The Ladder Diagram Blocks that are a part of Ladder Diagram Library are listed.


XIC	XIO	OTE	OTL
OTU	TON	TOF	RTO
CTU	CTD	RES	JMP
LBL	TND	AFI	NOP
MCR	ADD	SUB	MUL
DIV	FRD	CPT	AND
OR	NOT	ONS	OSR
OSF		NEQ	EQU
LEQ	GEQ	LES	GRT
MOV	CLR	COP	FLL
Power Rail Start	Power Rail Terminal	RungTerminal	Junction
Variable Read	Variable Write	PLC Controller	Task
Program	Subroutine	Function Block (AOI)	

Fixed Point Code Generation

- "Block Parameters" on page 16-2
- "Model Parameters" on page 16-3
- "Limitations" on page 16-4

Block Parameters


- If the block in the subsystem has a **Signal Attributes** tab, navigate to that tab.
- 2 For the **Integer rounding mode** parameter, select Round.
- 3 Clear the Saturate on integer overflow check box.
- 4 For the **Output data type** parameter, select a fixed-point data type.
- 5 Click the **Data Type Assistant** button.
- **6** For the Word length parameter, enter **8**, **16**, or **32**.
- 7 For the **Mode** parameter, select Fixed point.
- 8 For the **Scaling** parameter, select Binary point.

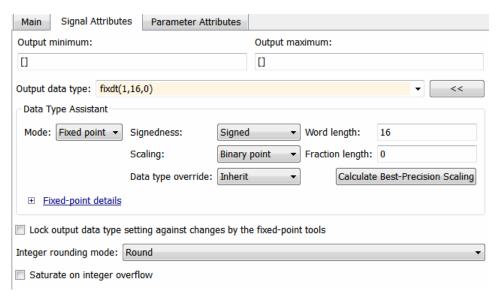

9 Click OK.

Model Parameters

- 1 In model Configuration Parameters dialog box, click the Hardware Implementation node.
- **2** For the **Device vendor** parameter, select **Generic**.
- **3** For the **Device type**, select Custom.
- **4** For the **Signed integer division rounds to**, select Zero.
- 5 For the **Number of bits**, set **char** to 16.

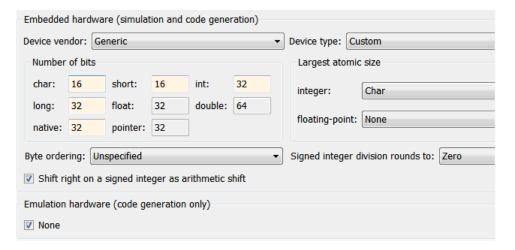

Limitations

 ${\bf 1} \hspace{0.5cm} {\bf 64}\hbox{-bit fixed-point data type is not supported}.$

Generating PLC Code for Multirate Models

Multirate Model Requirements for PLC Code Generation

In this section...

"Model Configuration Parameters" on page 17-2

"Limitations" on page 17-2

Model Configuration Parameters

Before generating Structured Text from a multirate model, you must configure the model as follows:

- **Solver** options that are recommended or required for PLC code generation:
 - Type:Fixed-step.
 - **Solver**:Discrete(no continuous states). Other fixed-step solvers could be selected, but this option is usually best for simulating discrete systems.
 - Tasking mode: Must be explicitly set to SingleTasking. Do not set Tasking mode to Auto
- Change any continuous time signals in the top level subsystem to use discrete fixed sample times.

When you deploy code generated from a multirate model, you must run the code at the fundamental sample rate.

Limitations

These are the limitations when generating Structured Text from multirate models:

• The B&R Automation Studio IDE is not supported for multirate model code generation.

Generating PLC Code for MATLAB Function Block

- "Configuring the rand function for PLC Code generation" on page 18-2
- "Width block requirements for PLC Code generation" on page 18-3
- "Workspace Parameter Data Type Limitations" on page 18-4
- "Limitations" on page 18-5

Configuring the rand function for PLC Code generation

Simulink PLC Coder generates Structured Text code for MATLAB Function blocks and Stateflow charts that use rand functions from the library. The rand function is implemented using a pseudo random number generator that only works with PLC IDEs supporting the uint32 data type. The software has conformance checks to report diagnostics for incompatible targets. Currently, the following targets have been tested for rand function support.

- 3S-Smart Software Solutions CODESYS Version 2.3 or 3.3 or 3.5 (SP4 or later)
- B&R Automation Studio 3.0 or 4.0
- Beckhoff TwinCAT 2.11 or 3
- OMRON Sysmac Studio Version 1.04, 1.05, 1.09 or 1.12
- Rexroth IndraWorks version 13V12 IDE
- Generic
- PLCopen XML

Width block requirements for PLC Code generation

Use a MATLAB Function block instead. In the MATLAB function on the block, use the length function to compute input vector width.

Workspace Parameter Data Type Limitations

If the data type of the MATLAB work space parameter value does not match that of the block parameter used in your model, the value of the variable in the generated code is set to zero.

If you specify the type of the Simulink.Parameter object by using the DataType property, use a typed expression when assigning a value to the parameter object. For example, if the Simulink.Parameter object K1 is used to store a value of the type single, use a typed expression such as single(0.3) when assigning a value to K1.

```
K1 = Simulink.Parameter;
K1.Value = single(0.3);
K1.StorageClass = 'ExportedGlobal';
K1.DataType = 'single';
```

Limitations

These are the limitations when generating Structured Text from MATLAB Fubnction blocks:

- Cell arrays in MATLAB Function blocks
- In MATLAB Function blocks, only standard MATLAB functions are supported. Functions from toolboxes have not been tested and may result in issues during code generation or produce incorrect results. For a list of standard functions supported for code generation, see the items listed under the MATLAB category in the "Functions and Objects Supported for C/C++ Code Generation" table.

Model Architecture and Design

- "Fixed Point Simulink PLC Coder Structured Text Code Generation" on page 19-2
- "Generating Simulink PLC Coder Structured Text Code For Multirate Models" on page 19-7
- "MATLAB Function Block Simulink PLC Coder Structured Text Code Generation" on page 19-9


Fixed Point Simulink PLC Coder Structured Text Code Generation


In this section... "Block Parameters" on page 19-2 "Model Parameters" on page 19-3 "Limitations" on page 19-4

Block Parameters

At the MATLAB command prompt type plcdemo_fixed_point. Once the example model opens, follow these instructions to configure the model for Structured Text code generation.

- If the block in the subsystem has a **Signal Attributes** tab, navigate to that tab and jump to step 3.
- 2 If there are no blocks in the subsystem with a **Signal Attributes** tab use the Data Type Conversion block. Add the Data Type Conversionblock to the model and continue to the next step.
- **3** For the **Integer rounding mode** parameter, select Round.
- 4 Clear the **Saturate on integer overflow** check box.
- **5** For the **Output data type** parameter, select a fixed-point data type.
- 6 Click the **Data Type Assistant** button .
- **7** For the Word length parameter, enter **8**, **16**, or **32**.
- 8 For the **Mode** parameter, select Fixed point.
- **9** For the **Scaling** parameter, select Binary point.

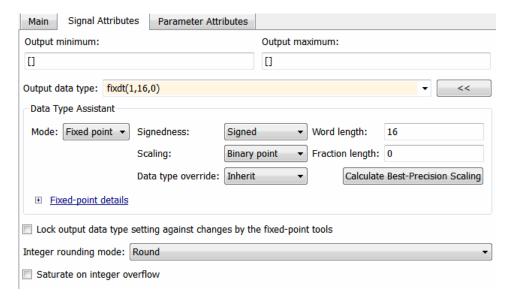


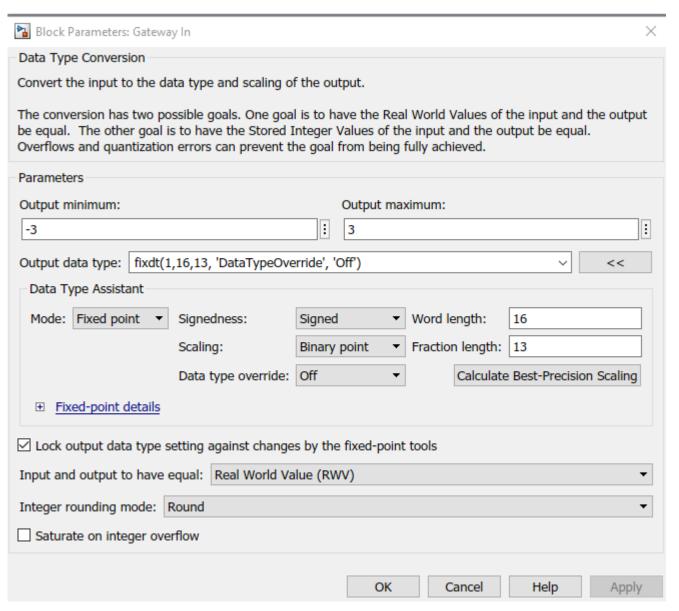


10 Click **OK**.

Model Parameters

- 1 In the Model Configuration Parameters dialog box, click the Hardware Implementation node.
- For the **Device vendor** parameter, select Generic or Custom Processor. If you select Custom Processor proceed to step 4.
- **3** For the **Device type**, select Custom.
- **4** For the **Signed integer division rounds to**, select Zero.
- 5 For the **Number of bits**, set **char** to 16.

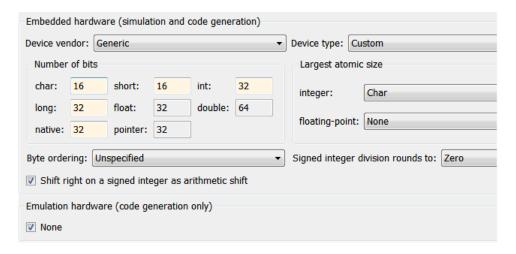


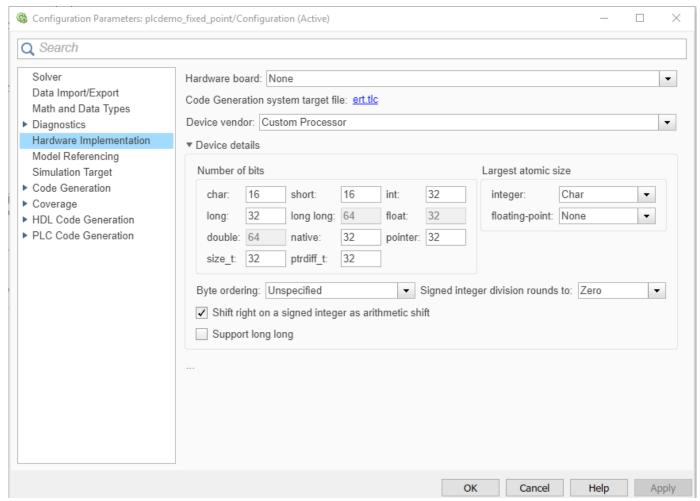

Limitations

• 64 bit fixed-point data type not supported.

• The data type and value type must match for fixed-point tunable parameters of type Simulink.Parameter.

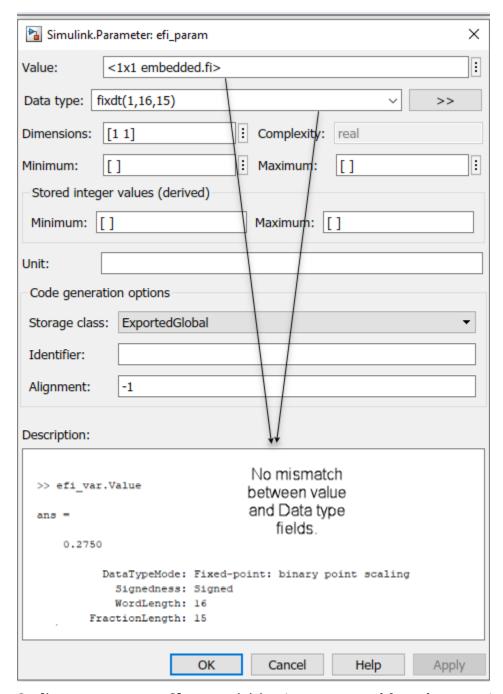

• Scaling parameter type Slope and bias is not supported for code generation.

You are now ready to:

- "Prepare Model for Structured Text Generation" on page 1-3
- "Check System Compatibility for Structured Text Code Generation" on page 1-6

• "Generate and Examine Structured Text Code" on page 1-9

Generating Simulink PLC Coder Structured Text Code For Multirate Models


Multirate Model Requirements for PLC Code Generation

At the MATLAB command prompt type in plcdemo_multirate. Once the demo model opens up follow the instructions below to configure the model for Structured Text code generation:

Model Configuration Parameters

Before generating Structured Text from a multirate model, you must configure the model as follows:

- **Solver** options that are recommended or required for PLC code generation:
 - Type:Fixed-step.
 - **Solver**:Discrete(no continuous states). Other fixed-step solvers could be selected, but this option is usually best for simulating discrete systems.
 - Tasking mode: Must be explicitly set to Single Tasking. Do not set Tasking mode to Auto
- Change any continuous time input signals in the top level subsystem to use discrete fixed sample times
- In the top-level model, right-click the Subsystem block and select **Block Parameters** (Subsystem).
- In the resulting block dialog box, select **Treat as atomic unit**.

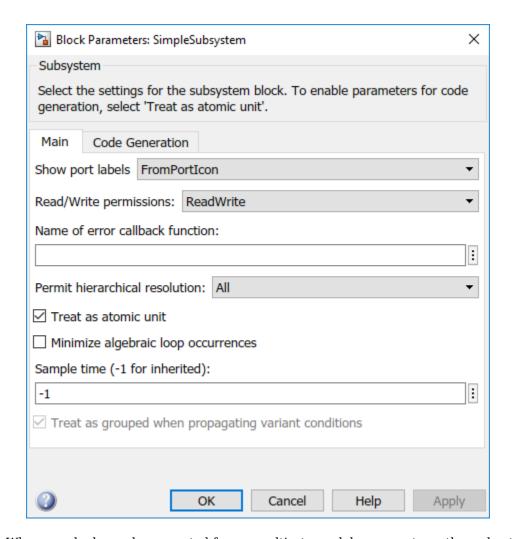

When you deploy code generated from a multirate model, you must run the code at the fundamental sample rate.

Limitations

The B&R Automation Studio does not support structured text code generation from multirate models.

You are now ready to:

- "Check System Compatibility for Structured Text Code Generation" on page 1-6
- "Generate and Examine Structured Text Code" on page 1-9

MATLAB Function Block Simulink PLC Coder Structured Text Code Generation

In this section...

"Configuring the rand function for PLC Code Generation" on page 19-9

"SimulinkWidth Block Requirements for PLC Code generation" on page 19-9

"Workspace Parameter Data Type Limitations" on page 19-9

"Limitations" on page 19-9

Configuring the rand function for PLC Code Generation

Simulink PLC Coder generates structured text code for MATLAB Function blocks and Stateflow charts that use the MATLAB rand function. You implement the rand function by using a pseudo random number generator that works with PLC IDEs supporting the uint32 data type. The software has conformance checks to report diagnostics for incompatible targets. These targets have been tested for rand function support.

- 3S-Smart Software Solutions CODESYS Version 2.3 or 3.3 or 3.5 (SP4 or later)
- B&R Automation Studio 3.0 or 4.0
- Beckhoff TwinCAT 2.11 or 3
- OMRON Sysmac Studio Version 1.04, 1.05, 1.09 or 1.12
- Rexroth IndraWorks version 13V12 IDE
- PLCopen XML

SimulinkWidth Block Requirements for PLC Code generation

Instead of using the Simulink Width block , inside the MATLAB Functionuse the MATLAB length function to compute the input vector width.

Workspace Parameter Data Type Limitations

If the data type of the MATLAB work space parameter value does not match that of the block parameter in your model, the value of the variable in the generated code is set to zero.

If you specify the type of the Simulink.Parameter object by using the DataType property, use a typed expression when assigning a value to the parameter object. For example, if the Simulink.Parameter object K1 stores a value of the type single, use a typed expression such as single(0.3) when assigning a value to K1.

```
K1 = Simulink.Parameter;
K1.Value = single(0.3);
K1.StorageClass = 'ExportedGlobal';
K1.DataType = 'single';
```

Limitations

When generating structured text from MATLAB Function blocks, these are the limitations :

- Cell arrays in MATLAB Function blocks are not supported.
- If you want to use a function from a toolbox within the MATLAB Function block, you must check the toolbox function page to see if that block supports code generation from Simulink PLC Coder.
- When generating a testbench for models that use the rand function , different rand output values may be generated when gathering test vectors vs code generation, leading to testbench verification failures . To prevent these failures make sure that the rand output value remains constant across different model compilations.

PLC Coder Code Deployment

- "Deploy Structured Text" on page 20-2
- "Deploy Ladder Diagram" on page 20-5

Deploy Structured Text

In this section...

"Learning Objectives" on page 20-2

"Prerequisites" on page 20-2

"Workflow" on page 20-2

"Importing Generated Structured Text Code Manually" on page 20-2

Using Simulink PLC Coder, you can generate structured text and test bench code, and then import the generated code into the target IDE.

Learning Objectives

In this tutorial you learn how to:

- Open the plcdemo simple subsystem model and prepare the model for code generation.
- Verify the code that you generated.
- Automatically or manually import your generated code into your target IDE.

Prerequisites

- Simulink PLC Coder
- Target IDE folder location (for automatic import).

Workflow


- Open the plcdemo simple subsystem model.
- Open the model settings and set Solver Selection to Fixed-step and Solver to discrete(no continuous states).
- If your target IDE is in the "PLC IDEs That Qualify for Importing Code Automatically" on page 1-17, see "Generate and Automatically Import Structured Text Code" on page 1-17. Otherwise, see "Importing Generated Structured Text Code Manually" on page 20-2

Importing Generated Structured Text Code Manually

If your target IDE does not automatically import generated code:

Right-click the Subsystem block and select **PLC Code > Options**.

The Configuration Parameters dialog box is displayed.

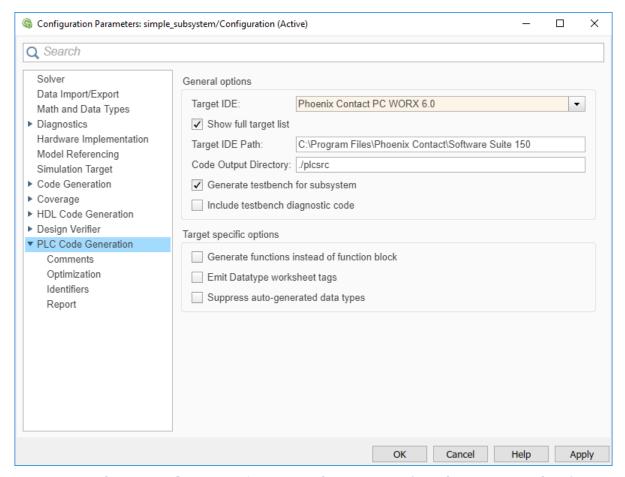

On the PLC Code Generation pane, select an option from the Target IDE list, for example, 3S CoDeSys 2.3.


The default **Target IDE** list displays the full set of supported IDEs. To see a reduced subset of the target IDEs supported by Simulink PLC Coder, disable the option **Show full target list**. To customize this list, use the plccoderpref function.

- 3 Click Apply.
- 4 Click Generate code.

This button:

- Generates Structured Text code (same as the PLC Code > Generate Code for Subsystem option)
- Stores generated code in model_name.exp (for example, plcdemo_simple_subsystem.exp)

When code generation is complete, a **View diagnostics** hyperlink appears at the bottom of the model window. Click this hyperlink to open the Diagnostic Viewer window.

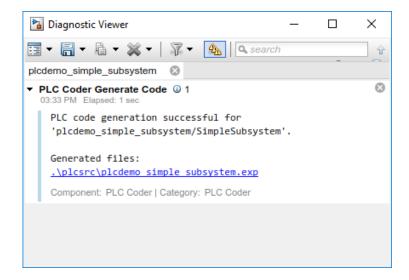

This window has links that you can click to open the associated files. For more information, see "Files Generated by Simulink PLC Coder" on page 1-14.

To import generated code into your target IDE import the generated files manually into your target IDE.

Deploy Ladder Diagram

In this section...

"Learning Objectives" on page 20-5

"Prerequisites" on page 20-5

"Workflow" on page 20-5

"Importing Generated Ladder Diagram Code Manually" on page 20-5

Using Simulink PLC Coder you can generate Structured Text, along with test bench code and import the generated code into the target IDE.

Learning Objectives

In this tutorial you will learn how to:

- Open the plcdemo ladder timers model and prepare the model for code generation.
- · Verify the code you generated.
- Have your generated code either automatically or manually imported into your target IDE.

Prerequisites

- · Simulink PLC Coder
- You have access to either Rockwell Automation RSLogix 5000 or Studio 5000 IDE.

Workflow

- 1 Open the plcdemo ladder timers model.
- 2 Open the model settings and set **Solver Selection** to Fixed-step and **Solver** to discrete(no continuous states).
- 3 See "Importing Generated Ladder Diagram Code Manually" on page 20-5


You can manually import the generated L5X file into RSLogix 5000 or Studio 5000 IDEs.

Importing Generated Ladder Diagram Code Manually


For L5X import file generation:

1 Right-click the Motor Controller block and select PLC Code > Options.

This displays the **PLC Code Generation** configuration parameters window:

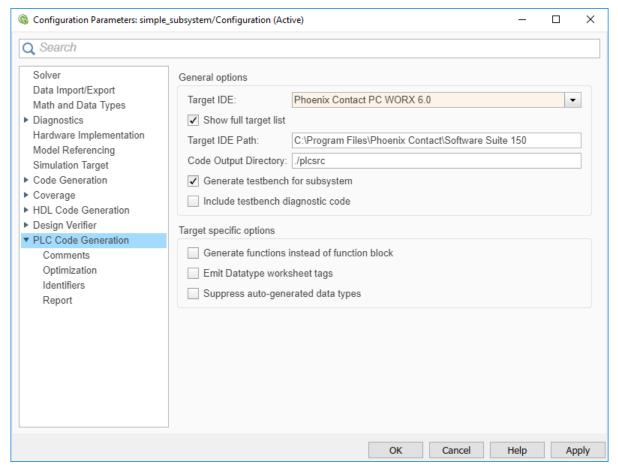

- 2 On the **PLC Code Generation** pane, from the **Target IDE** list, select either Rockwell Studio 5000:A0I or Rockwell RSLogix5000:A0I.
- In **Target IDE Path**, enter the path to the folder where you want the generated L5X file to be saved. In, **Code Output Directory**, enter the name of the folder to save the generated L5X file.
- 4 Click Apply.
- 5 Right-click the Motor Controller block and select **PLC CodeGenerate Code for Subsystem** .
- 6 Upon, completion of code generation the Diagnostic window displays a message with the path to the generated L5X file.

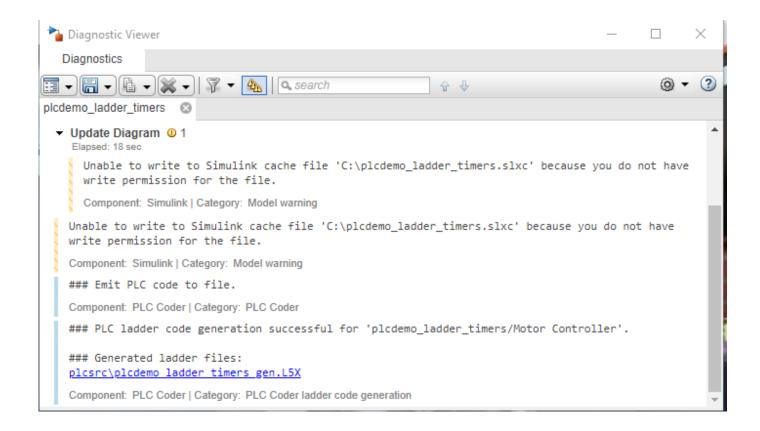

Simulink PLC Coder Structured Text Code Generation For Simulink Data Dictionary (SLDD)

- "Structured Text Code Generation Support for Simulink Data Dictionary" on page 21-2
- "Generate Structured Text Code For Simulink Data Dictionary Defined Model Parameters" on page 21-3

Structured Text Code Generation Support for Simulink Data **Dictionary**

Simulink Data Dictionary (SLDD) is the preferred Model-Based-Design (MBD) data modeling and management tool. SLDD provides advantages such as data separation, logical partitioning, traceability, and so on. To achieve traceability between your generated code and model, and for code reusability and model and data sharing, use SLDD

Limitations

Simulink PLC Coder does not support:

- The mixed use of the base workspace and SLDD files. Use the Simulink migration utility to migrate your entire base workspace to SLDD files.
- Model workspace parameters and signals for code generation.
- MATLAB variables in SLDD files for code generation. To generate code convert these variables to Simulink.Parameter objects.

Simulink.parameter types that have StorageClass options other than ExportedGlobal and ImportedExtern are auto converted to ExportedGlobal StorageClass during code generation.

See Also

More About

- "What Is a Data Dictionary?"
- "Generate Structured Text Code For Simulink Data Dictionary Defined Model Parameters" on page 21-3
- Simulink.Parameter
- Simulink.Signal

Generate Structured Text Code For Simulink Data Dictionary Defined Model Parameters

In this section...

"Learning Objectives" on page 21-3

"Requirements" on page 21-3

"Workflow" on page 21-3

Learning Objectives

In this tutorial, you learn how to:

- Open the plcdemo_tunable_params model and migrate the model to use Simulink Data Dictionary (SLDD).
- Generate code for the model.

Requirements

- Base workspace variable definition must match the variable definition in the SLDD file. If there is a mismatch, Simulink PLC Coder displays an error during the code generation process.
- If your model has a Data Store Memory(DSM) object, you must have a matching Simulink.Signal object in the SLDD file.

Workflow

Migrate the plcdemo_tunable_params model base workspace variables to an SLDD file for code generation:

Note Copy the plcdemo_tunable_params model to your current working directory prior to starting the workflow.

- 1 Open the plcdemo tunable params model.
- 2 From the Simulink Editor **Modeling** tab, click **Model Explorer**.
- 3 Under the Model Hierarchy pane, click Base Workspace. The Contents pane displays the base workspace variables.
- 4 Right-click K1, K2, and K3. Choose the Convert to parameter object option to convert them to the Simulink. Parameter type.
- 5 Right-click plcdemo_tunable_params, and then select Properties.
- 6 Select the **External Data** tab.
- 7 Click **New**. Enter the file name as plcdemo tunable params.
- 8 Click the **Migrate data** button. Then click **Apply** in response to the Link Model to Data Dictionarymessage and **Migrate** in response to the Migrate Data message.
- 9 Click OK.

10

To open the dictionary, in the Simulink Editor, click the model data badge in the bottom left corner, then click the External Data link. To inspect the contents of the dictionary, in the Model Explorer Model Hierarchy pane, under the External Data node, expand the dictionary node.

To generate code for the model, see "Generate and Examine Structured Text Code" on page 1-9.

See Also

More About

- Simulink.Parameter
- Simulink.Signal
- Data Store Memory
- "Migrate Models to Use Simulink Data Dictionary"
- "Structured Text Code Generation Support for Simulink Data Dictionary" on page 21-2

Simulink PLC Coder Structured Text Code Generation For Enumerated Data Type

- "Structured Text Code Generation for Enum To Integer Conversion" on page 22-2
- "IDE Limitations" on page 22-3

Structured Text Code Generation for Enum To Integer Conversion


Autogenerate structured text code for enum to integer conversion model.

Load enum class

For this example, the myEnum.m script loads the enum class definition. Place this script file in the same project folder as the plc enum to int model file.

Open the model

open_system('plc_enum_to_int.slx')

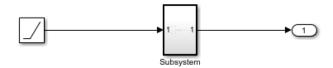

This model shows PLC code generation for enum to integer type conversion.

To generate PLC code, open PLC Coder App. Select Settings->PLC Code Generation->General options->Target IDE and choose Target IDE that supports enum type. Select Settings->PLC Code Generation->Identifiers->Generate enum cast function. Click the Subsystem block and click the Generate PLC Code button.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2009-2020 The MathWorks, Inc.

See Also

More About

- "Use Enumerated Data in Simulink Models"
- "Code Generation for Enumerations"

IDE Limitations

The following IDEs support enum data type:

- 3S-Smart Software Solutions CODESYS Version 2.3 or 3.3 or 3.5 (SP4 or later). To generate code enable "Generate enum Cast Function" on page 12-25 option.
- PHOENIX CONTACT Software MULTIPROG 5.0 or 5.50. To generate code enable "Override Target Default enum Name Behavior" on page 12-24 and "Generate enum Cast Function" on page 12-25 options.
- Selectron CAP1131 IDE. To generate code enable "Override Target Default enum Name Behavior" on page 12-24 and "Generate enum Cast Function" on page 12-25 options.
- Beckhoff TwinCAT 2.11 or 3. To generate code enable "Override Target Default enum Name Behavior" on page 12-24 and "Generate enum Cast Function" on page 12-25 options.
- Rexroth IndraWorks version 13V12 IDE. To generate code enable "Override Target Default enum Name Behavior" on page 12-24 and "Generate enum Cast Function" on page 12-25 options.

See Also

Distributed Code Generation with Simulink PLC Coder

- "Distributed Model Code Generation Options" on page 23-2
- "Generated Code Structure for PLC_RemoveSSStep" on page 23-3
- "Generated Code Structure for PLC PreventExternalVarInitialization" on page 23-5
- "PLC RemoveSSStep for Distributed Code Generation" on page 23-7
- "Structured Text Code Generation for Subsystem Reference Blocks" on page 23-10
- "Distributed Code Generation Limitations" on page 23-12

Distributed Model Code Generation Options

Distributed models allow you to model complex systems as individual components and simulate the components at different sample times or cycle rates. The Simulink PLC Coder distributed model code generation options allow you to generate structured text code for individual components of the model and integrate the generated code externally. Use this table to decide the code generation option to use based on your distributed model design and requirements.

Goal	Option
	"Keep Top-Level ssmethod Name the Same as the Non-Top Level Name" on page 12-33
Prevent initialization of externally defined variables.	"Remove Initialization Statements for Externally Defined State Variables" on page 12-34

The distributed code generation options are model-specific, and when selected at the top level, are enabled for all the model subsystems. Once you enable the option, it stays on. When generating code for individual subsystems, you might see unintended behavior in the generated code due to the option remaining on.

See Also

More About

- "Generated Code Structure for PLC RemoveSSStep" on page 23-3
- "Generated Code Structure for PLC PreventExternalVarInitialization" on page 23-5

Generated Code Structure for PLC RemoveSSStep

The example shows you how to enable the PLC_RemoveSSStep option for your model, generate code and display the comparison between code generated with the PLC_RemoveSSStep option enabled and then disabled.

1 Open the UsePLC_RemoveSSStepforDistributedCode GenerationExample example:

```
open Example (\ 'plccoder/UseRemoveSSStepForDistributedCodeGenerationExample') \\
```

- **2** Copy all the model files to a folder of your choice.
- 3 Open the mSystemIntegration model.
- 4 Open the Simulink PLC Coder app, and then select the Subsystem1 block..
- 5 Click Settings. Navigate to PLC Code Generation > Identifiers. Select the Keep top level ssMethod name same as non-top level check box.
- 6 Click OK.
- 7 Click Generate PLC Code.
- 8 Select the Subsystem1 block.
- 9 Click Settings. Navigate to PLC Code Generation > Identifiers. Clear the Keep top level ssMethod name same as non-top level check box.
- 10 Click Generate PLC Code.

This image shows a comparison between the code generated with PLC_RemoveSSStep enabled, and then disabled. Removing SS_STEP enables easier external code integration of the different subsystems because they all the same ssMethodType.

```
FUNCTION BLOCK SubSystem1
                                                                                        FUNCTION BLOCK SubSystem1
                                                                                        VAR_INPUT
    VAR_INPUT
30
        ssMethodType: SINT;
                                                                                    30
                                                                                            ssMethodType: SINT;
31
        U: LREAL;
                                                                                    31
                                                                                            U: LREAL;
   END VAR
32
                                          PLC_RemoveSSStep
                                                                                                                                PLC RemoveSSStep
                                                                                    33
33
                                                                                        VAR_OUTPUT
    VAR_OUTPUT
34
        Y: LREAL:
                                                   Enabled
                                                                                    34
                                                                                            Y: LREAL;
                                                                                                                                         Disabled
35
   END VAR
                                                                                        END VAR
                                                                                    36
                                                                                        VAR
37
       UnitDelay_DSTATE: LREAL;
                                                                                    37
                                                                                            UnitDelay DSTATE: LREAL;
38
   END VAR
                                                                                    38
                                                                                        END VAR
    CASE ssMethodType OF
                                                                                        CASE ssMethodType OF
        SS_INITIALIZE:
                                                                                            SS INITIALIZE:
40
                                                                                                (* SystemInitialize for Atomic SubSystem: '<Root>/SubSystem1'
            (* SystemInitialize for Atomic SubSystem: '<Root>/SubSystem1' *)
41
                                                                                    41
            (* InitializeConditions for UnitDelay: '<Sl>/Unit Delay'
                                                                                                 (* InitializeConditions for UnitDelay: '<Sl>/Unit Delay'
            UnitDelay_DSTATE := 0.0;
43
                                                                                    43
                                                                                                UnitDelay_DSTATE := 0.0;
                                                                                                (* End of SystemInitialize for SubSystem: '<Root>/SubSystem1' *)
44
            (* End of SystemInitialize for SubSystem: '<Root>/SubSystem1' *)
                                                                                    44
45
            (* Outputs for Atomic SubSystem: '<Root>/SubSystem1' *)
46
                                                                                    46
                                                                                                (* Outputs for Atomic SubSystem: '<Root>/SubSystem!' *)
            (* Gain: '<Sl>/Gain' incorporates:
                                                                                    47
                                                                                                (* Gain: '<S1>/Gain' incorporates:
47
                                                                                                    Sum: '<S1>/Sum'
48
               Sum: '<S1>/Sum'
             * UnitDelay: '<Sl>/Unit Delay' *)
                                                                                    49
                                                                                                 * UnitDelay: '<Sl>/Unit Delay' *)
50
           Y := (U - UnitDelay DSTATE) * 0.5;
                                                                                    50
                                                                                                Y := (U - UnitDelay DSTATE) * 0.5:
                                                                                    51
                                                                                                (* Update for UnitDelay: '<Sl>/Unit Delay' *)
            (* Update for UnitDelay: '<Sl>/Unit Delay' *)
51
            UnitDelay_DSTATE := Y;
                                                                                    52
                                                                                                UnitDelay_DSTATE := Y;
53
            (* End of Outputs for SubSystem: '<Root>/SubSystem1' *)
                                                                                    53
                                                                                                (* End of Outputs for SubSystem: '<Root>/SubSystem1' *)
                                                                                    54
                                                                                       END CASE:
   END CASE;
54
   END FUNCTION BLOCK
                                                                                        END_FUNCTION_BLOCK
    FUNCTION_BLOCK TestBench
                                                                                    56
                                                                                        FUNCTION BLOCK TestBench
    VAR OUTPUT
                                                                                        VAR OUTPUT
```

See Also

"Keep Top-Level ssmethod Name the Same as the Non-Top Level Name" on page 12-33

More About

"Distributed Model Code Generation Options" on page 23-2

Generated Code Structure for PLC_PreventExternalVarInitialization

The example shows you how to enable the PLC_PreventExternalVarInitialization option for your model, generate code and display the comparison between code generated with the PLC PreventExternalVarInitialization option disabled and then enabled.

1 Open the PLC PreventExternalVarInitializationExample example:

```
openExample('plccoder/PreventExternalVarInitializationExample')
```

- **2** Copy all the model files to a folder of your choice.
- 3 Open the External Var Distributed Codegen model.
- 4 Open the Simulink PLC Coder app, and select the Subsystem block.
- 5 Click **Settings**. Navigate to **PLC Code Generation > Interface**. Clear the **Remove initialization statements for externally defined state variables** check box.
- 6 Click OK.
- 7 Click Generate PLC Code.
- 8 Select the Subsystem block.
- 9 Click Settings. Navigate to PLC Code Generation > Interface. Set the Remove initialization statements for externally defined state variables check box.
- 10 Click Generate PLC Code.

This image shows a comparison between the code generated with PLC_PreventExternalVarInitialization disabled, and then enabled. Removing initialization statements for externally defined variables prevents the corruption of their data values.



See Also

"Remove Initialization Statements for Externally Defined State Variables" on page 12-34

More About

"Distributed Model Code Generation Options" on page 23-2


PLC_RemoveSSStep for Distributed Code Generation

Generate structured text code for different components of your model.

Open model

Open the model by using the following command:

```
open_system('mSystemIntegration');
```

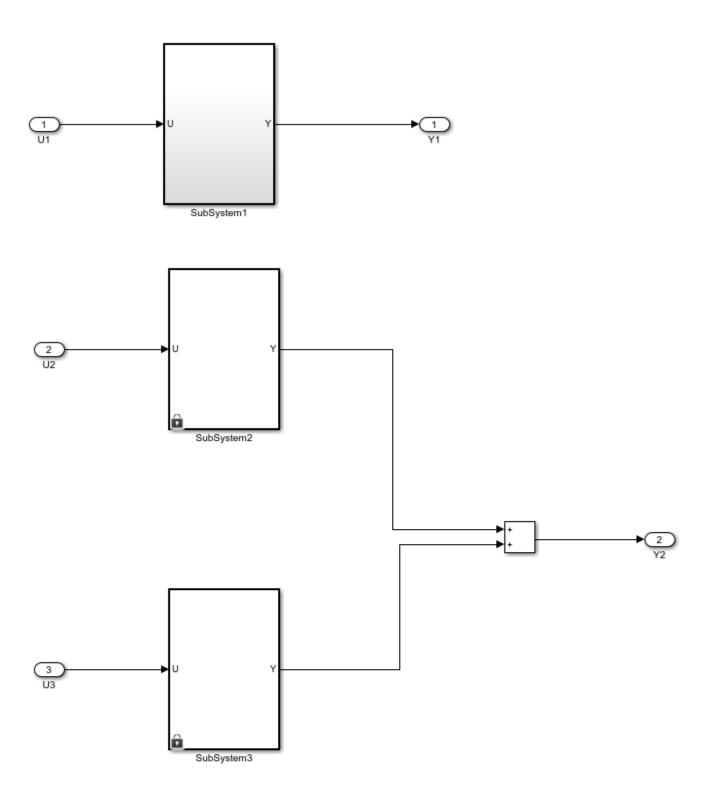

Note: Before code generation, copy mSubSystem1, mSubSystem2, mSubSystem3, and mSystemIntegration SLX files to the same folder location in your current working directory (CWD).

Configure Model Components for Distributed Code Generation

To autogenerate structured text code with the same ssMethod type for every component of your model for external code integration later on, use Keep Top-Level ssMethod Name the Same as the Non-Top Level Name. For more information, see "Keep Top-Level ssmethod Name the Same as the Non-Top Level Name" on page 12-33 function.

Mark Externally Defined Variables

- 1 Open the Simulink PLC Coder app. For more information, see Simulink PLC Coder.
- 2 Select the TopSystem block.
- 3 Click Settings. Navigate to PLC Code Generation > Identifiers. In the Identifier Names box enter Subsystem1, Subsystem2, Subsystem3.
- 4 Click OK.

Code Generation

- 1 Open the Simulink PLC Coder app. For more information, see Simulink PLC Coder.
- 2 Select the Subsystem1 block.
- 3 Click Settings. Navigate to PLC Code Generation > Identifiers. Select the Keep top level ssMethod name same as non-top level check box.
- 4 Click OK.
- 5 Repeat steps 2 through 4 for SubSystem2, SubSystem3, and TopSystem.

Generate Code for the Subsystem

To generate code for the individual subsystem use the plcgenerate code function:

plcgeneratecode('mSystemIntegration/TopSystem/SubSystem1');

plcgeneratecode('mSystemIntegration/TopSystem/SubSystem2');

plcgeneratecode('mSystemIntegration/TopSystem/SubSystem3');

Generate Code for the Integrated Model

To generate code for the integrated model:

plcgeneratecode('mSystemIntegration/TopSystem');


Structured Text Code Generation for Subsystem Reference Blocks

This example shows how to autogenerate structured text code for subsystem reference blocks.

Open Simulink Model

To open the Simulink test bench model, use the following command.

open_system('mSubSysRefSystemIntegration')

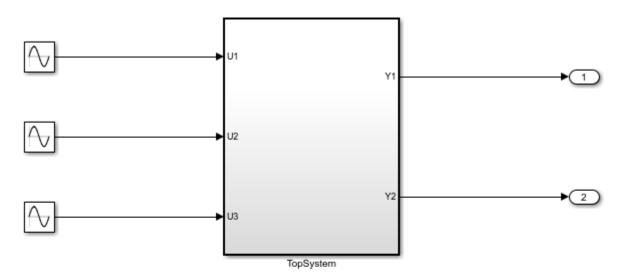

Note: Before code generation, copy SSRefSubSystem1, SSRefSubSystem2, SSRefSubSystem3, refSubSystem1, refSubSystem2, refSubSystem3 and mSubSysRefSystemIntegration SLX files to the same folder location in your current working directory (CWD).

Generate Code for the Subsystem

To generate code for the subsystem use plcgeneratecode

```
generatedfiles = plcgeneratecode('mSubSysRefSystemIntegration/TopSystem');
### Generating PLC code for 'mSubSysRefSystemIntegration/TopSystem'.
### Using <a href="matlab:configset.showParameterGroup('mSubSysRefSystemIntegration', { 'PLC Code
### Begin code generation for IDE <a href="matlab:configset.showParameterGroup('mSubSysRefSystemIntegration')
### Creating PLC code to file.
### Creating PLC code generation report <a href="matlab:web('C:\TEMP\Bdoc20b_1465442_5924\ib8F426")
### PLC code generation successful for 'mSubSysRefSystemIntegration/TopSystem'.
### Generated files:
<a href="matlab:edit('plcsrc\mSubSysRefSystemIntegration.exp')">plcsrc\mSubSysRefSystemIntegrat.</a>
```

See Also

More About

- "Subsystem Reference"
- "Distributed Code Generation Limitations" on page 23-12

Distributed Code Generation Limitations

The Simulink PLC Coder software does not support:

- Code generation inside subsystem reference blocks.
- Code generation for nested subsystem reference blocks.

See Also


Examples Book

- "Generate Structured Text Code for a Simple Simulink® Subsystem" on page 24-2
- "Generating Structured Text for a Simple Simulink® Subsystem without Internal State" on page 24-7
- "Generating Structured Text for a Hierarchical Simulink® Subsystem with Virtual Subsystems" on page 24-8
- "Generating Structured Text for a Hierarchical Simulink® Subsystem" on page 24-10
- "Generating Structured Text for a Reusable Simulink® Subsystem" on page 24-12
- "Generating Structured Text for a Simple Simulink® Subsystem Using Multirate" on page 24-14
- "Simulate and Generate Structured Text Code for a Stateflow® Chart" on page 24-16
- "Generating Structured Text for a MATLAB® Block" on page 24-19
- "Generating Structured Text for a Feedforward PID Controller" on page 24-20
- "Mapping Tunable Parameters to Structured Text" on page 24-22
- "Mapping Tunable Parameters Defined Using Simulink.Parameter Objects to Structured Text" on page 24-24
- "Simulate and Generate Code for Speed Cruise Control System" on page 24-28
- "Variable Step Speed Cruise Control System" on page 24-30
- "Simulate and Generate Code for Airport Conveyor Belt Control System" on page 24-32
- "Generating Structured Text for Simulink® Model with Fixed-Point Data Types" on page 24-33
- "Generating Structured Text for Stateflow® Chart with Absolute Time Temporal Logic" on page 24-35
- "Integrating User Defined Function Blocks, Data Types, and Global Variables into Generated Structured Text" on page 24-37
- "Simulating and Generating Structured Text Code for Rockwell Motion Instructions" on page 24-39
- "Tank Control Simulation and Code Generation by Using Ladder Logic" on page 24-41
- "Using Timers in Ladder Logic" on page 24-44
- "Temperature Control Simulation and Code Generation Using Ladder Logic" on page 24-47
- "Elevator Control Simulation and Code Generation Using Ladder Logic" on page 24-51
- "Structured Text Code Generation for Simulink Data Dictionary" on page 24-54
- "Structured Text Code Generation for Subsystem Reference Blocks" on page 24-55
- "PLC RemoveSSStep for Distributed Code Generation" on page 24-57
- "Structured Text Code Generation for Enum To Integer Conversion" on page 24-60
- "Structured Text Code Generation for Integer To Enum Conversion" on page 24-61
- "PLC PreventExternalVarInitialization for Distributed Code Generation" on page 24-62
- "Simulation and Structured Text Generation For MPC Controller Block" on page 24-64

Generate Structured Text Code for a Simple Simulink® Subsystem

This example shows how to select the target IDE for a Simulink® model, generate code, and view generated files.


1. Open model plcdemo simple subsystem and save a copy to a writable location.

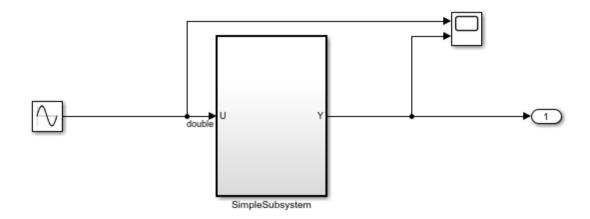

This example shows how to generate code for a simple subsystem block. To generate structured text code for the subsystem, select the SimpleSubsystem block and right-click PLC Code > Generate Code for Subsystem.

Copyright 2009-2019 The MathWorks, Inc.


- 2. Open the **Simulink PLC Coder** app.
- 3. Open the PLC Code Generation dialog box.. In the Target IDE select **3S CoDeSys 2.3**.

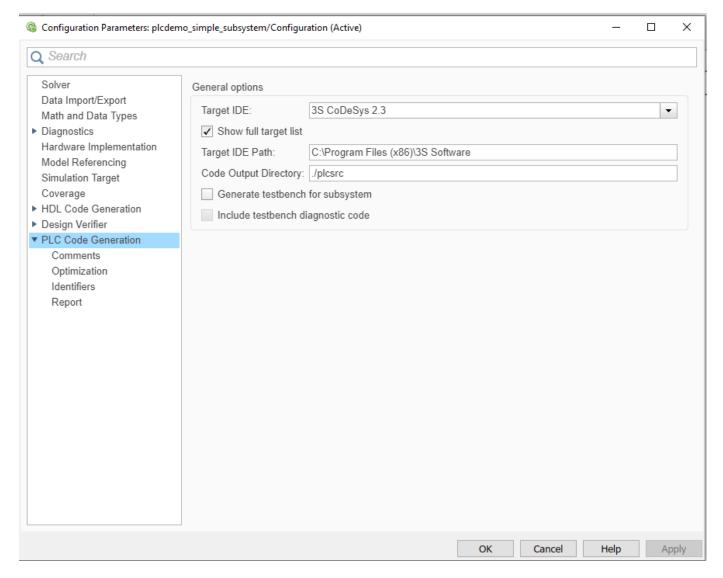

Click **OK**


4. Select the SimpleSubsystem block and click **Generate PLC Code**. Alternatively, from the command line, enter:

generatedfiles = plcgeneratecode('plcdemo_simple_subsystem/SimpleSubsystem');

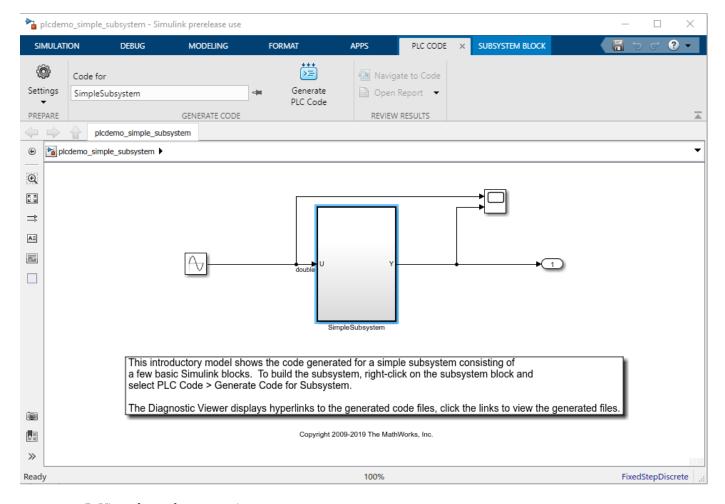

5. View the code generation report.

The report includes links to the generated code file plcdemo_simple_subsystem.exp and associated traceability and code metrics reports.

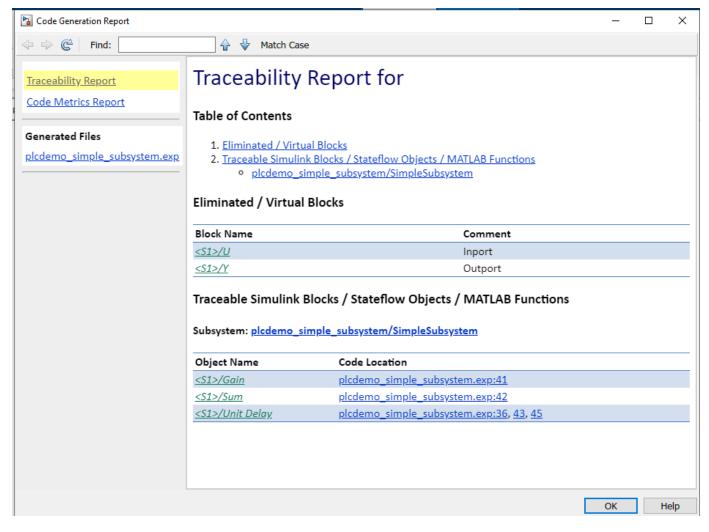


6. This figure contains the generatecode plcdemo_simple_subsystem.exp.

Related Topics

"Generate and Examine Structured Text Code" on page 1-9

Generating Structured Text for a Simple Simulink® Subsystem without Internal State

This model shows the code generated for a simple subsystem without internal state.

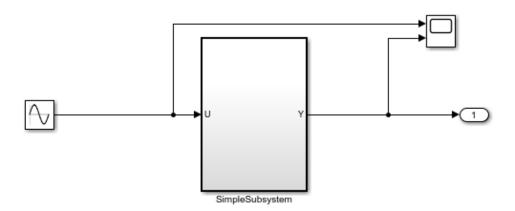


This introductory model shows the code generated for a simple subsystem without internal state. To build the subsystem, right-click on the subsystem block and select PLC Code > Generate Code for Subsystem

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2009-2019 The MathWorks, Inc.

This model shows how a subsystem without internal state maps to Structured Text.

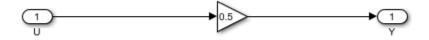


You can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem

Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo simple subsystem nostate/SimpleSubsystem');

Generating Structured Text for a Hierarchical Simulink® Subsystem with Virtual Subsystems

This introductory model shows the code generated for a hierarchical subsystem consisting of other Simulink subsystems.

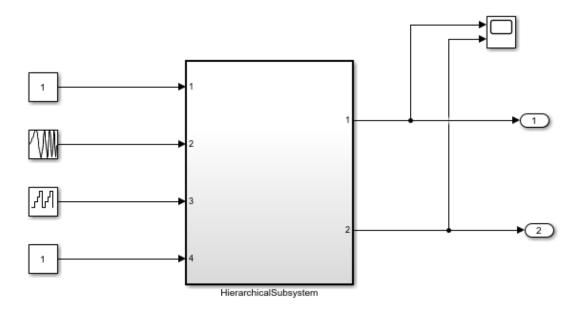


This introductory model shows the code generated for a hierarchical subsystem consisting of two other subsystems named "S1" and "S2". These subsystems are not marked atomic and hence they do not generate separate Function Blocks. The code for these subsystems gets inlined into the Function Block for the parent subsystem "HierarchicalSubsystem".

To build the subsystem, right-click on the subsystem block and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2008-2019 The MathWorks, Inc.


This model contains a hierarchical subsystem containing other virtual subsystems.

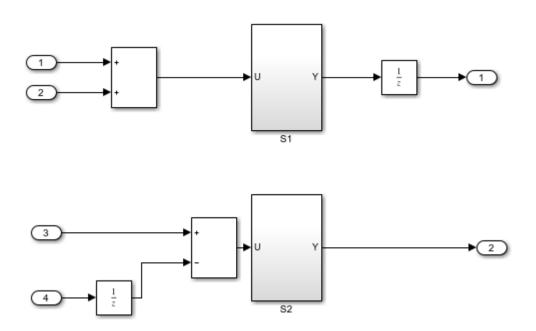

You can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo_hierarchical_virtual_subsystem/ HierarchicalSubsystem');

Generating Structured Text for a Hierarchical Simulink® Subsystem

This introductory model shows the code generated for a hierarchical subsystem consisting of other Simulink subsystems.

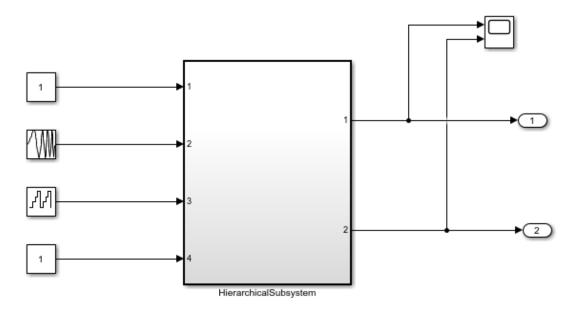


This introductory model shows the code generated for a hierarchical subsystem consisting of two other subsystems named "S1" and "S2". Each of these subsystems generate a separate Function Block. To build the subsystem, right-click on the subsystem block and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2008-2019 The MathWorks, Inc.


This model contains a hierarchical subsystem containing other subsystems.

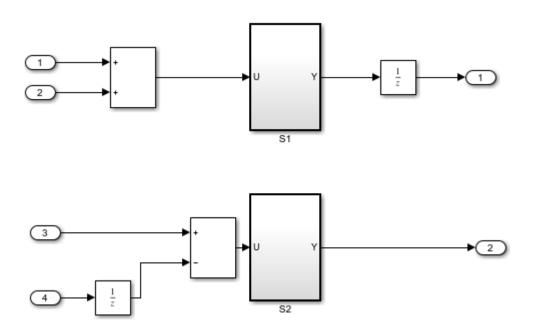

You can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo_hierarchical_subsystem/ HierarchicalSubsystem');

Generating Structured Text for a Reusable Simulink® Subsystem

This model shows the code generated for a reusable subsystem consisting of a few basic Simulink blocks.

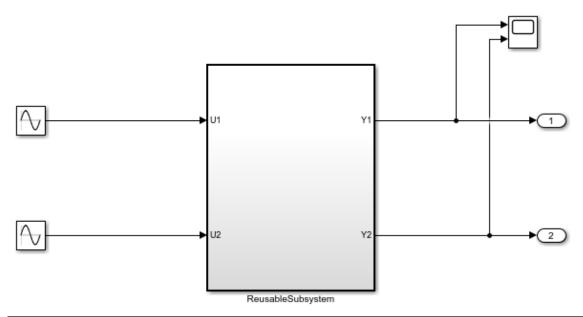


This introductory model shows the code generated for a hierarchical subsystem consisting of two identical subsystems named "S1" and "S2". These two subsystems result in a single shared function block due to code reuse optimization.

To build the subsystem, right-click on the subsystem block and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2008-2019 The MathWorks, Inc.

This model contains a subsystem with two copies of an identical subsystem.

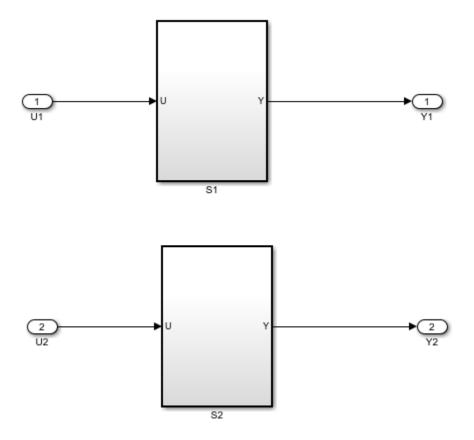


You can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem

Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo reusable subsystem/ReusableSubsystem');

Generating Structured Text for a Simple Simulink® Subsystem Using Multirate

This model shows the code generated for a simple subsystem using multirate.

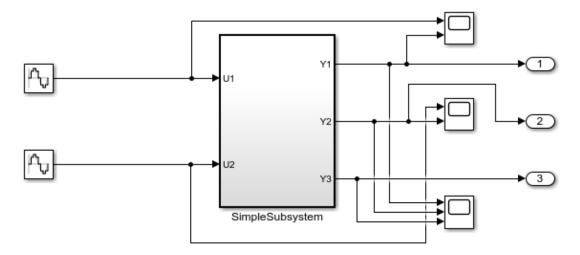


This example model shows a simple subsystem with two sample rates: the sample time of input signal U1 is set to 0.1s and the sample time of U2 is set to 0.2s. Output Y1 and Y2 are calculated based on U1 and U2 separately and output Y3 is calculated based on both U1 and U2. In the generated code, the slower rate (0.2s) is predicated by checking the corresponding rate counter. PLC Coder generates rate scheduling and management code along with code for model operations.

To build the subsystem, right-click on the subsystem block and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2012-2019 The MathWorks, Inc.

This model shows how a subsystem using multirate maps to Structured Text.

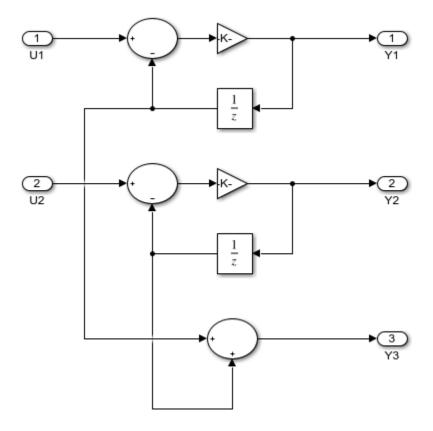

You can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem


Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo multirate/SimpleSubsystem');

Simulate and Generate Structured Text Code for a Stateflow® Chart

This example shows how to simulate and generate code for the ControlModule stateflow chart from the plcdemo stateflow controller model.

Open the Model

open_system('plcdemo_stateflow_controller')

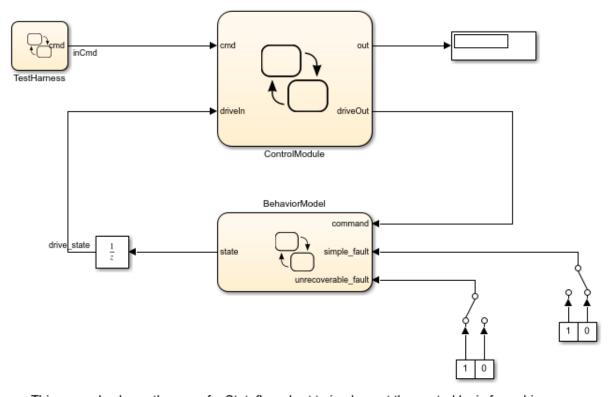

This example shows the use of a Stateflow chart to implement the control logic for a drive.

The TestHarness chart provides a test scenario of starting, holding, and resetting the drive.

The BehaviorMode chart provides a simple chart to test the ControlModule chart behavior by injecting faults.

The ControlModule chart performs the drive control logic.

To generate code for the subsystem, select the ControlModule chart and right-click PLC Code > Generate Code for Subsystem.

Copyright 2009-2019 The MathWorks, Inc.

To start the simulation, click Run.


Generate Code

To generate code for the ControlModule chart, use plcgeneratecode. For more information, see plcgeneratecode:

generatedfiles = plcgeneratecode('plcdemo stateflow controller/ControlModule');


The plcdemo_stateflow_controller consists of stateflow charts to simulate a drive module. The TestHarness chart provides a test scenatio of starting, holding, and resetting the drive.

open system('plcdemo stateflow controller/TestHarness');

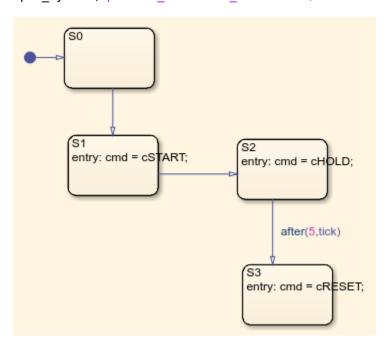


The BehaviorModel chart provides a simple chart to test the ControlModule chart behavior by injecting faults.

open_system('plcdemo_stateflow_controller/BehaviorModel');

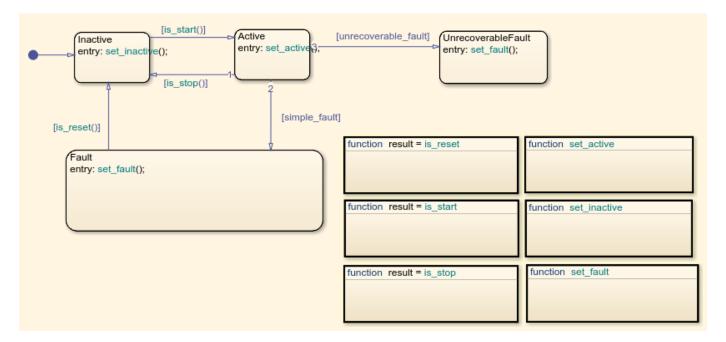


The ControlModule chart performs the drive control logic.

open_system('plcdemo_stateflow_controller/ControlModule');

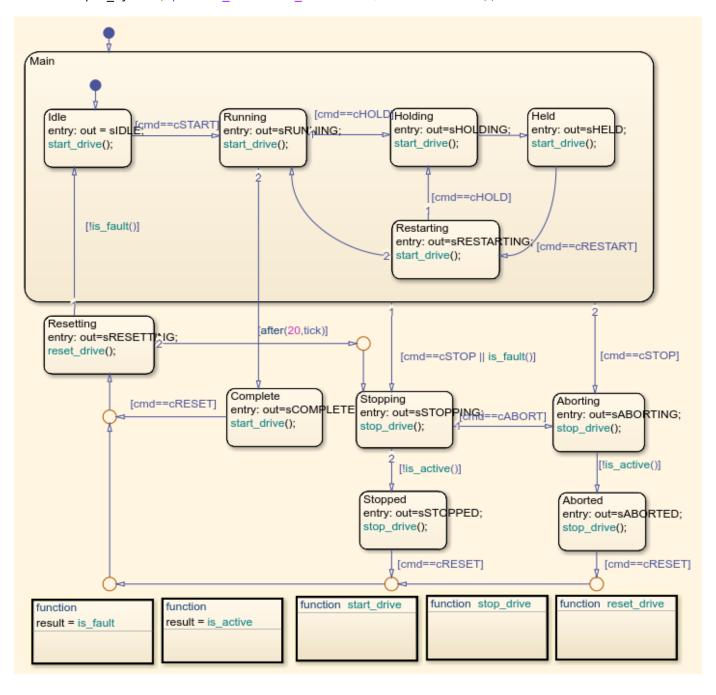

Generating Structured Text for a MATLAB® Block

This model shows the code generated for a MATLAB block implementing tank valve control logic.

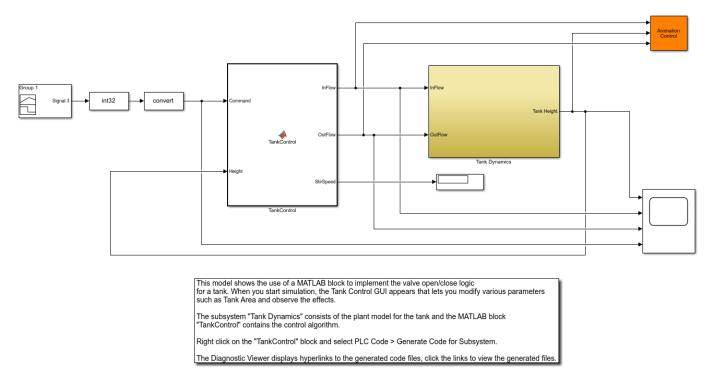

Copyright 2009-2019 The MathWorks, Inc.

TankControl is a MATLAB block.


You can generate PLC Structured Text code for this block by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo eml tankcontrol/TankControl');

Generating Structured Text for a Feedforward PID Controller

This model shows the code generated for a Feedforward PID Controller implemented using Simulink library blocks.

```
mdl = 'plcdemo_pid_feedforward';
open system(mdl);
```

Anti-Windup PID Control Demonstration with Feedforward Control

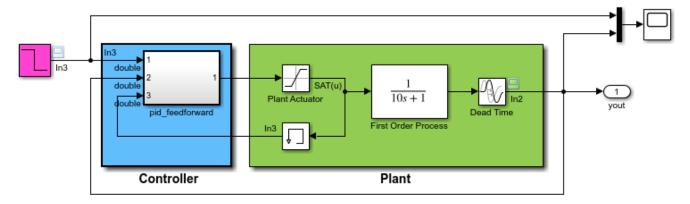

? [

This model shows the code generated for a PID Feedforward Controller subsystem.

Open up the "pid_feedforward" subsystem to examine the use of PID block for implementing a feed-forward controller.


To build code for the subsystem, right-click on the subsystem block and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2009-2019 The MathWorks, Inc.

This model contains the following subsystem which implements the Feedforward controller.

open_system('plcdemo_pid_feedforward/pid_feedforward');

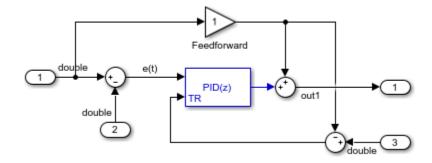


You can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem Alternatively, you can use the following command

generatedFiles = plcgeneratecode('plcdemo_pid_feedforward/pid_feedforward');

```
### Generating PLC code for 'plcdemo_pid_feedforward/pid_feedforward'.
### Using <a href="matlab:configset.showParameterGroup('plcdemo_pid_feedforward', { 'PLC Code Ger### Gathering test vectors for PLC testbench.
### Begin code generation for IDE <a href="matlab:configset.showParameterGroup('plcdemo_pid_feed'
### Emit PLC code to file.
### Creating PLC code generation report <a href="matlab:web('C:\TEMP\Bdoc20b_1465442_5924\ib8F426'
### PLC code generation successful for 'plcdemo_pid_feedforward/pid_feedforward'.
### Generated files:
<a href="matlab:edit('.\plcsrc\plcdemo_pid_feedforward.exp')">.\plcsrc\plcdemo_pid_feedforward.exp')">.\plcsrc\plcdemo_pid_feedforward.exp')</a>
```

Mapping Tunable Parameters to Structured Text

This model shows how to map tunable parameters from the Simulink® model to the generated Structured Text code.

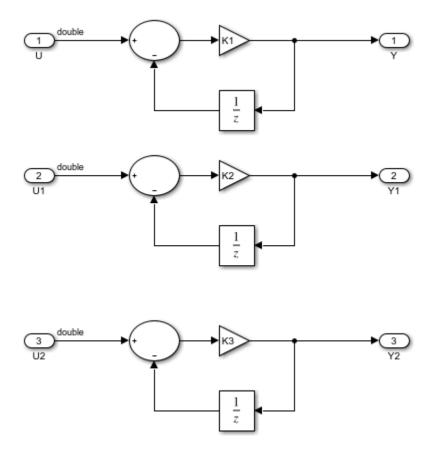

This model shows the different implementations of tunable parameters in the generated code. It makes use of three parameters K1, K2, and K3 defined in the MATLAB base workspace. To build the subsystem, right-click on the subsystem block and select PLC Code Generation > Generate Code for Subsystem. The Diagnostic Viewer with hyperlinks to the generated code is displayed automatically.

In this model:

- K1 is set to "Auto" storage class
- K2 is set to "ExportedGlobal" storage class
- K3 is set to "ExportedGlobal" constant storage class

In the generated Structured Text code for compatible IDE targets:

- K1 is mapped to a Function Block local variable
- K2 is mapped to a global variable
- K3 is mapped to a global constant

For the RSLogix 5000 Add On Instruction (AOI) format:

- K1 is mapped to an AOI local tag
- K2 and K3 are mapped to AOI input tags

For the RSLogix 5000 Routine format:


- K1 is mapped to routine instance tag
- K2 and K3 are mapped to global program tags

See the Simulink PLC Coder documentation on tunable parameter code generation for more information.

You can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo_tunable_params/SimpleSubsystem');

Mapping Tunable Parameters Defined Using Simulink.Parameter Objects to Structured Text

This model shows how tunable parameters map to Structured Text by specifying them as Simulink.Parameter objects in MATLAB base workspace.

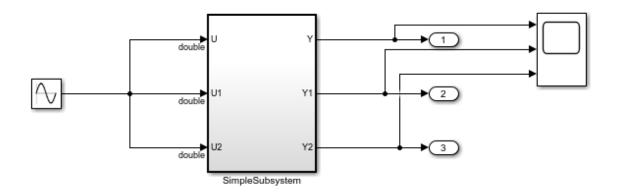

This model shows the usage of tunable parameters by specifying them as Simulink.Parameter objects in MATLAB base workspace. This model makes use of three parameters K1, K2 and K3 defined in the MATLAB base workspace as Simulink.Parameter objects (please see 'setup_tunable_params.m' in the same directory as this model). To build the subsystem, right-click on the subsystem block and select PLC Code > Generate Code for Subsystem. The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

In this model:

- * K1 has 'Model default' storage class
- * K2 has 'ExportedGlobal' storage class
- * K3 has 'Custom' storage class and 'Const' custom storage class

In the generated Structured Text code for compatible IDE targets:

- * K1 is mapped to a Function Block local variable
- * K2 is mapped to a global variable
- * K3 is mapped to a global constant

For the Step7 and TIA Portal targets:

- * K1 is mapped to a Function Block local variable
- * K2 and K3 are mapped to fields of DATA BLOCK PLCGlobalVar

For the Studio 5000 and RSLogix 5000 Add On Instruction (AOI) format:

- * K1 is mapped to an AOI local tag
- * K2 and K3 are mapped to fields in an AOI InOut tag, top_subsystem_name_Gvar, of struct type top_subsystem_name_GVarUDT. At initialization, the top subsystem AOI calls the PLC_INIT_PARAMETERS AOI to initialize the tag with values of K2 and K3. Besides the generated code L5X file, a separate L5X file has definition of the tag. You can import the tag through this file.


For the Studio 5000 and RSLogix 5000 Routine format:

- * K1 is mapped to routine instance tag
- * K2 and K3 are mapped to global program tags

See the Simulink PLC Coder documentation on tunable parameter code generation for more information.

Copyright 2009-2019 The MathWorks, Inc.

This model uses three parameters K1, K2 and K3 defined in the MATLAB base workspace as Simulink.Parameter object. These parameters are used in the Gain blocks:

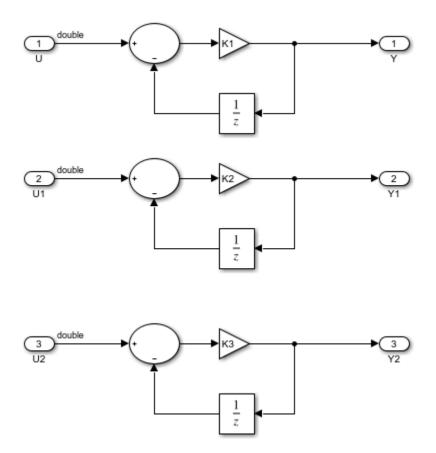

In this model:

- K1 has 'SimulinkGlobal' storage class
- K2 has 'ExportedGlobal' storage class
- K3 has 'ExportedGlobal' storage class and 'Const' custom storage class

The parameters and their storage classes have been defined using the following MATLAB script (setup_tunable_params.m) which is run at model load time:

% define tunable parameters in base workspace as Simulink.Parameter objects
% tunable parameter mapped to local variable

```
K1 = Simulink.Parameter;
K1.Value = 0.1;
K1.StorageClass = 'SimulinkGlobal';
% tunable parameter mapped to global variable
K2 = Simulink.Parameter;
K2.Value = 0.2;
K2.StorageClass = 'ExportedGlobal';
K2.CoderInfo.CustomStorageClass = 'Default';
% tunable parameter mapped to global constant
K3 = Simulink.Parameter;
```

```
K3.Value = 0.3;
K3.StorageClass = 'ExportedGlobal';
K3.CoderInfo.CustomStorageClass = 'Const';
```

Now you can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem

Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo tunable params slparamobj/SimpleSubsystem');

After the code generation, the Diagnostic Viewer window is displayed with hyperlinks to the generated code files. You can open the generated files by clicking on the links.

In the generated Structured Text code for compatible IDE targets:

- K1 is mapped to a Function Block local variable
- K2 is mapped to a global variable
- K3 is mapped to a global constant

For the RSLogix 5000 Add On Instruction (AOI) format:

- K1 is mapped to an AOI local tag
- K2 and K3 are mapped to AOI input tags

For the RSLogix 5000 Routine format:

- K1 is mapped to routine instance tag
- K2 and K3 are mapped to global program tags

See the Simulink PLC Coder documentation on tunable parameter code generation for more information.


Simulate and Generate Code for Speed Cruise Control System

This example shows how to simulate and generate code for the Controller subsystem from a speed cruise control model by using Simulink® and Stateflow®.

Open the Model

open_system('plcdemo_cruise_control')

Speed Cruise Control System Using Simulink and Stateflow

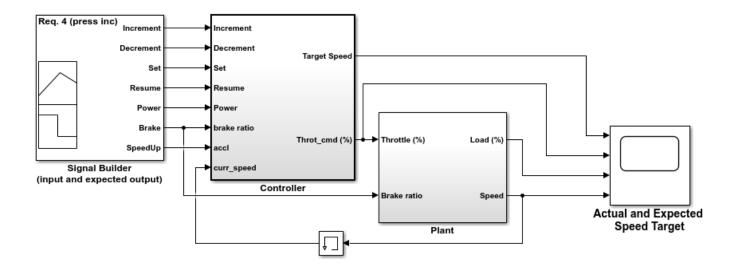

This model shows the code generation for the Speed Cruise Control Controller subsystem. Open the Controller subsystem. This model uses a Triggered Stateflow Chart for the Enable and Setpoint calculations. It uses a discrete PID Controller to compute the Throttle Command. Click the scopes to observe the Target and Actual speeds.

Copyright 2002-2019 The MathWorks, Inc.

To start the simulation, click Run.

Generate Code

To generate code for the Controller subsystem, use plcgeneratecode:

```
generatedfiles = plcgeneratecode('plcdemo_cruise_control/Controller');
```

The Controller subsystem performs the Enable and Setpoint calculations by using a Triggered Stateflow $^{\circledR}$ chart. The Throttle Command is computed by using a discrete PID controller.


Variable Step Speed Cruise Control System

This example shows how to simulate and generate code for the Controller subsystem from a speed cruise control model by using variable continuous step solver.

Open the Model

open_system('plcdemo_cruise_control_continuous');

Speed Cruise Control System Using Variable-Step Continuous Solver

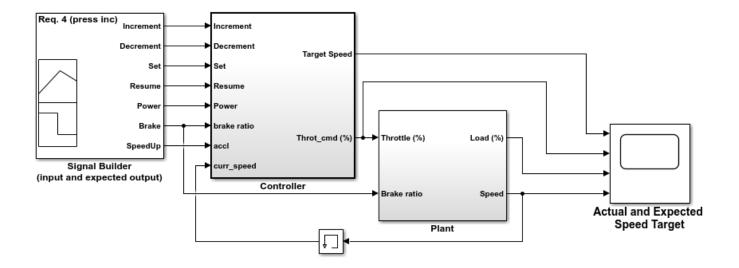

This model shows PLC code generation using variable-step continuous solver for a Speed Cruise Control controller subsystem. PLC Coder supports code generation of model controller subsystem block with fixed sample time. To satisfy this requirement, user can

- Choose fixed-step solver so the controller subsystem block runs at fixed sample time as demonstrated in the plcdemo_cruise_control demo;
- Choose variable-step continuous solver and set explicit sample time for the controller block as demonstrated in this demo.

In this model, the model solver is set to variable-step continuous (ode45); the sample time of the controller subsystem is set to 0.1. To set the controller sample time, right click on the controller block and select Subsystem Parameters, on the Main tab, set the Sample time parameter. This method allows combined modeling of discrete-time controller and continuous-time plant in the same model with PLC code generation support.

To build code for the subsystem, right-click on the "Controller" subsystem block and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2002-2019 The MathWorks, Inc.

To start the simulation, click Run

Generate Code

To generate code for the Controller subsystem, use plcgeneratecode:

```
generatedfiles =
plcgeneratecode('plcdemo_cruise_control_continuous/Controller');
```

In this model, the model solver is set to variable-step continuous (ode45); the sample time of the controller subsystem is set to 0.05. To set the controller sample time, right click on the controller block and select Subsystem Parameters, on the Main tab, set the Sample time parameter. This method allows combined modeling of discrete-time controller and continuous-time plant in the same model with PLC code generation support.


Simulate and Generate Code for Airport Conveyor Belt Control System

This example shows how to simulate and generate code for the Controller subsystem from an airport conveyor belt model.

Open the Model

open system('plcdemo airport conveyor')


Airport Conveyor Belt Control System

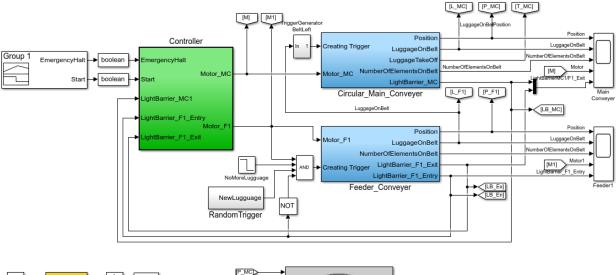



To vary the animation speed, double click Simulation Speed and use the slider to vary the speed of the animation.

A lower Simulation Speed setting means a faster animation, while a higher Simulation Speed setting means a slower animation.

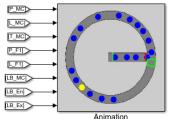

This model shows the code generation for the Airport Conveyor Belt System Controller subsystem. Open the Controller Subsystem. This model uses a Stateflow chart to implement the control logic for starting and stopping the conveyor belt motor based on sensor inputs.

and stopping the conveyor belt motor based on sensor inputs.

To generate structured text code for the subsystem, select the Controller subsystem block and right-click PLC Code > Generate Code for Subsystem.

Copyright 2010-2019 The MathWorks, Inc.


To start the simulation, click **Run**. Observe the conveyor belt animation.

Generate Code

To generate code for the Controller subsystem, use plcgeneratecode:

generatedfiles = plcgeneratecode('plcdemo airport conveyor/Controller')

Generating Structured Text for Simulink® Model with Fixed-Point Data Types

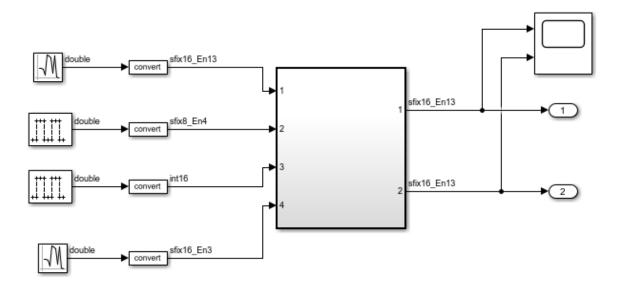


This model shows the code generated for a subsystem including fixed-point data type. Open the subsystem at the top level named 'Subsystem'. Simulate the model and observe the fixed point types displayed on the signals.

To build code for the subsystem, right-click on the "Subsystem" subsystem block and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2011-2019 The MathWorks, Inc.

Open the subsystem at the top level named 'Subsystem'. Simulate the model and observe the fixed point types displayed on the signals.

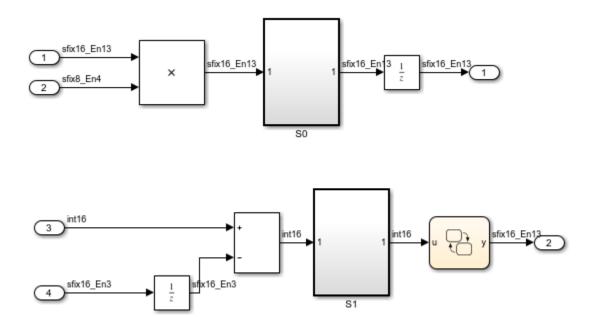


You can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo fixed point/Subsystem');

After the code generation, the Diagnostic Viewer window is displayed with hyperlinks to the generated code files. You can open the generated files by clicking on the links. You will notice that all the fixed-point input/outputs in the model as well as internal state variables have been lowered to integer data types.

Generating Structured Text for Stateflow® Chart with Absolute Time Temporal Logic

This model shows the code generated for a Stateflow chart which uses absolute time temporal logic. Simulate the model. Click on the scope to observe the "pulse" output.

Generating Structured Text for Stateflow Chart with Absolute Time Temporal Logic

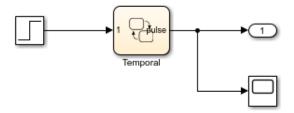


This model shows the code generated for a Stateflow chart with absolute time temporal logic. Open up the "Temporal" chart. Notice that this chart uses absolute time temporal logic operators like 'after' and 'before'. Click on the scope to observe the 'pulse' output.

To build code for the chart, right-click on the "Temporal" chart and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2002-2020 The MathWorks, Inc.

Open up the "Temporal" Stateflow chart. Notice that this chart uses absolute time temporal logic operators like 'after' and 'before'. These operators are mapped to Structured Text timer operations in the generated code.

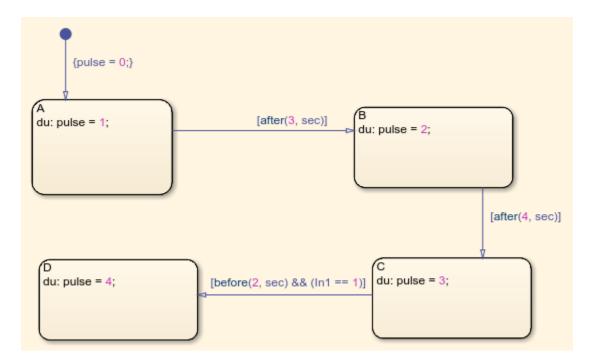


You can generate PLC Structured Text code for this chart by right-clicking on the chart and select PLC Code -> Generate Code for Subsystem

Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo_sf_abs_time/Temporal');

After the code generation, the Diagnostic Viewer window is displayed with hyperlinks to the generated code files. You can open the generated files by clicking on the links.

Integrating User Defined Function Blocks, Data Types, and Global Variables into Generated Structured Text

This model shows how to integrate user defined function blocks, data types and global variables into generated structured text

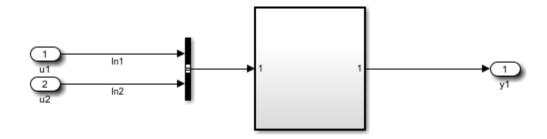

This model shows how to integrate user defined function blocks, data types and global variables into generated structured text.

Right click on the top level subsystem 'Subsystem' and select 'PLC Code > Options ...' to bring up the 'Configuration Parameters' dialog box. In the dialog box, select 'Symbols' pane under 'PLC Code Generation'. You will see the following symbols in the 'Externally Defined Symbols' field:

ExternallyDefinedBlock InBus K1


Specifying these symbols here would respectively omit the function block, bus data type and global variable with the same names in the generated structured text.

To build the subsystem, right-click on the subsystem block and select PLC Code > Generate Code for Subsystem.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files. In the generated code, you will notice that there are calls to function block 'ExternallyDefinedBlock', however the definition of the function block has been omitted. Similarly, the definition of bus type 'InBus1' and global variable 'K1' have also been omitted.

Copyright 2009-2019 The MathWorks, Inc.

Open the top level subsystem 'Subsystem' by double clicking on it. You will notice it has a bunch of blocks including the block 'ExternallyDefinedBlock'. The user would like to replace this with an externally defined block in the PLC IDE in the generated code. In this model 'ExternallyDefinedBlock' is a MATLAB® block. This could be any other Simulink® block or subsystem as well. The input port 'In1' is a bus input of 'InBus' data type. The user would like to provide the definition of 'InBus' externally in the PLC IDE. Similarly, the user would like to provide the definition of the 'K1' global tunable parameter of the Gain block externally.

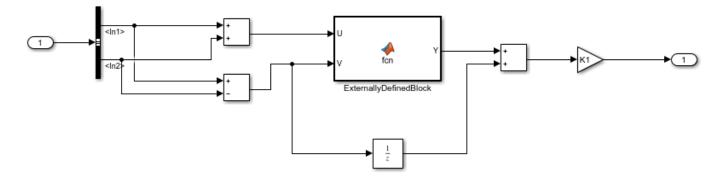

To do this, right click on the top level subsystem 'Subsystem' and select 'PLC Code -> Options ...' to bring up the 'Configuration Parameters' dialog box. In the dialog box, select 'Symbols' pane under 'PLC Code Generation'. You will see the following symbols in the 'Externally Defined Symbols' field:

ExternallyDefinedBlock InBus K1

Specifying these symbols here would respectively omit the function block, bus data type and global variable with the same names in the generated structured text.

Now you can generate PLC Structured Text code for this subsystem by right-clicking on the subsystem block and select PLC Code -> Generate Code for Subsystem Alternatively, you can use the following command generatedFiles = plcgeneratecode('plcdemo_external_symbols/Subsystem');

After the code generation, the Diagnostic Viewer window is displayed with hyperlinks to the generated code files. You can open the generated files by clicking on the links.

In the generated code, you will notice that there are calls to function block 'ExternallyDefinedBlock', however the definition of the function block has been omitted. Similarly, the definition of bus type 'InBus1' and global variable 'K1' have also been omitted.

Simulating and Generating Structured Text Code for Rockwell Motion Instructions

This model shows how to model Rockwell motion api calls in Stateflow. This representation can then be further used for code generation using the "plcgeneratemotionapicode" function. For more information on this workflow, refer to the "Simulation and Code Generation of Motion Instructions" topic in the Simulink® PLC Coder $^{\text{\tiny TM}}$ documentation.


Create a Folder and Copy Relevant Files

The following code will create a folder in your current working folder. The new folder will contain only the files that are relevant for this example. If you do not want to affect the current folder (or if you cannot generate files in this folder), change your working folder.

```
plccoderdemo_setup('plcdemo_motion_api_rockwell');
```

Open up the "MotionController" subsystem. Open the Stateflow® chart named "Chart" chart inside it. This chart implements the control logic for controlling the drives or the axes.

load_system('MotionControllerExample');
open_system('MotionControllerExample/MotionController/Chart');

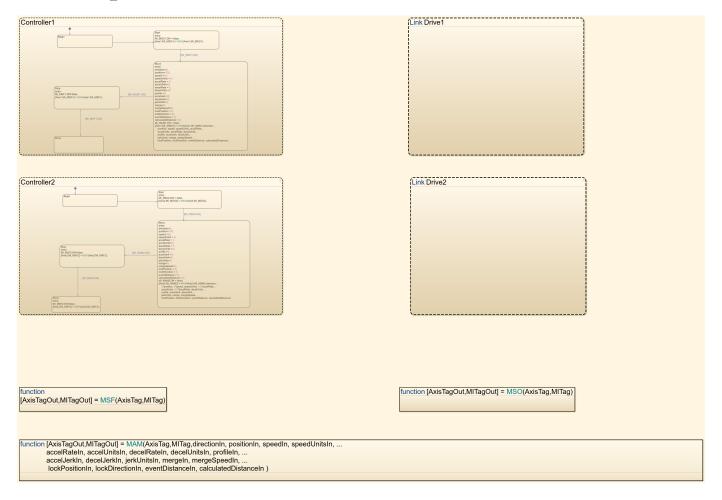

You can generate PLC Structured Text code for this subsystem by using the script file "plcgeneratemotionapicode"

```
plcgeneratemotionapicode('MotionControllerExample/MotionController');
   Created temporary model for codegeneration : MotionController0
   PLC code generation successful for 'MotionController0/MotionController'.
   Generated files:
   plcsrc/MotionController0.L5X
```

Clean Up

Run the following commands to close the model, remove files, and return to the original folder.

```
>> close system('MotionControllerExample');
```

>> cleanup

Tank Control Simulation and Code Generation by Using Ladder Logic

This example shows how to simulate ladder logic and generate code from the ladder tank controller model.

Import, Simulate, and Generate Code

- 1. Create a folder with write permission and copy the files plcdemo_ladder_tankcontrol_template.slx and TankControl.L5X into that folder.
- 2. Change the current folder to the newly created folder and rename plcdemo_ladder_tankcontrol_template.slx to plcdemo_ladder_tankcontrol.slx.
- In MATLAB, run the plcimportladder command. for more information, see plcimportladder command:

```
plcimportladder('TankControl','TopAOI','TankControl');
```

- 4. Open the generated model TankControl_runner_TankControl.slx and select and copy the TankControl_runner block. Open plcdemo_ladder_tankcontrol, and replace Controller/TankControl_runner with the copied block.
- 5. To start the simulation, click **Run**. Open the **Tank** HMI block and use the Control Command rotary switch to set controller command input.

Set the Control Command Input

- Set the Control Command switch to the 'Fill' position to fill the tank.
- Set the Control Command switch to the 'Hold' position to hold the current tank state.
- Set the Control Command switch to the 'Empty' position to empty the tank.
- Set the Control Command switch to the 'Stir' position to activate the tank stir state.

The tank enters the Stir state only when the fluid level is full. Otherwise the Stir command has no effect. If the tank is in the Stir state, the Stir indicator lamp is on. Otherwise, it is off. The numeric value of the tank command is:

- Fill -- 0
- Hold -- 1
- Empty -- 2
- Stir --3


The tank animation UI shows the tank status as the simulation runs.

The completed simulink model should resemble

```
open_system('plcdemo_ladder_tankcontrol_complete');
```



Tank HMI

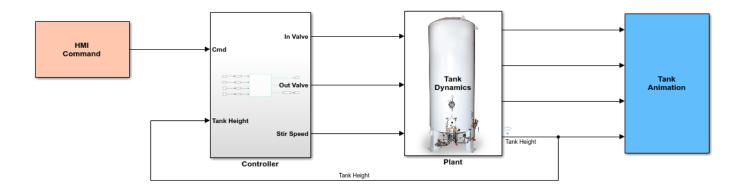

This model is the completed model for the ladder tank controller example. The controller is autogenerated from the ladder file TankControl.L5X by using the plcimportladder command.

To start the simulation, click **Run.** Use the Tank **HMI Control Command** rotary switch to set the controller command input.

The Tank Model UI displays the tank animation and status. The states of the ladder rungs and the data values are displayed in the ladder block window.


Copyright 2018-2019 The MathWorks, Inc.

6. To generate code for the subsystem, use plcgeneratecode. for more information, see plcgeneratecode:

generatedfiles = plcgeneratecode('plcdemo_ladder_tankcontrol/Controller')

7. To generate a testbench, open the ladder tank control testbench model:

open_system('plcdemo_ladder_tankcontrol_tb');

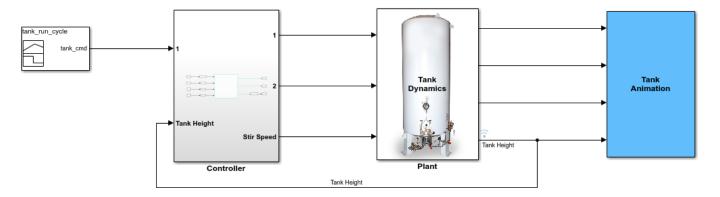

This model shows the ladder code generation from the ladder tank controller example.

To generate ladder code, select the Controller/TankControl_runner block and right-click PLC Coder > Generate Code for Subsystem.


To generate the testbench, in the PLC Configuration Parameters dialog box, select the **Generate testbench for subsystem** option, and then generate code.


Copyright 2018-2019 The MathWorks, Inc.

Using Timers in Ladder Logic

This example shows how to model and simulate a motor controller in Simulink® by using Ladder Logic. The example uses the ladder Timer instruction to implement the logic for delayed switching of a motor. The timer T1 is used to control the starting delay and the timer T2 is used to control the stopping delay.

Ladder Logic Diagrams using Timers

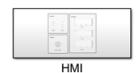

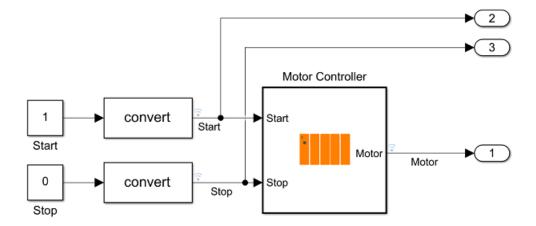


Inputs and Outputs

The Motor Controller has two inputs, Start and Stop. Changing the Start input value to 1 will start the motor after 5 seconds. Changing the Stop input value to 1 will stop the motor after 2 seconds. Stop input will override the Start input.

The output signal named Motor will be 1 when the motor is ON and 0 when the motor id OFF.

Motor Controller

The Motor Controller block is a PLC Controller block. It contains a Ladder Program block which houses the ladder logic. Open the Motor Controller block and then open the Ladder Diagram Program block to view the ladder logic for the controller.

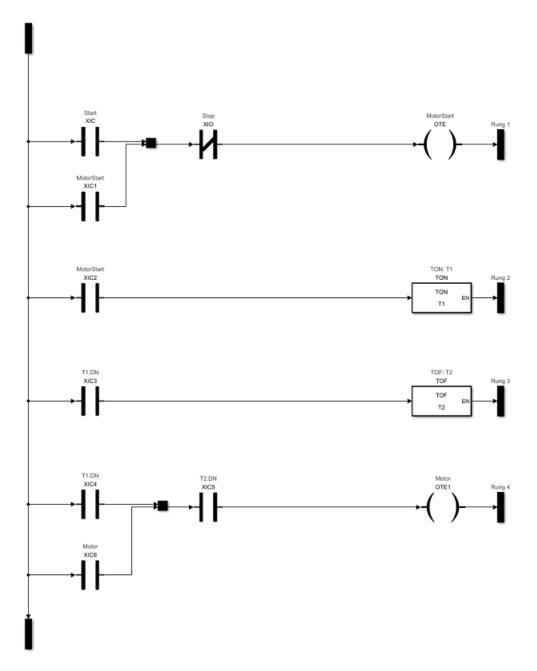

This ladder logic has a TON timer named as T1 which is responsible for the delay during starting the motor, and a TOF timer named as T2 which is responsible for the delay during the stopping of the motor.

When the Start input is toggled to 1, the MotorStart output in the first rung gets activated which starts the timer T1 counting operation. T1.DN bit is set when the T1 finishes counting. This causes the third rung with timer T2 to become activated. Since T2 is a T0F timer, the T2.DN bit is set but, timer starts counting operation only when this rung becomes false. Hence, both the inputs to the lowermost rung are true and the Motor output gets activated.

When the Stop input is toggled to 1, the MotorStart coil gets deactivated and hence the T1.DN bit is reset and the timer T2 starts counting. Once the T2 finishes counting operation, the T2.DN bit gets reset and the Motor output gets deactivated.

Timer Configuration

The timer configurations are specified in the InitFcn callback inside the Model Properties. To modify the start and stop delays, open the InitFcn callback from the Model Properties dialog from Modeling > Model Settings > Model Properties.

T1_InitialValue.PRE specifies the Preset value of timer T1 and the T2_InitialValue.PRE specifies the Preset value of timer T2. Both these values are specified as milliseconds.

Human Machine Interface (HMI)

Double click the HMI Subsystem if it is not already open to bring up the Human Machine Interface (HMI) for this example. This HMI has the following sections:

- **Inputs:** The Start and Stop toggle switches are used to change the value of the respective inputs. When the toggle switch is in On position the value of the corresponding input will be 1.
- Motor: This indicates the status of the motor. Green colored Motor ON indicator means that the motor is running whereas grey colored indicator means that the motor is stopped.
- Graphs: This section of the HMI Subsystem displays the status of Start, Stop and Motor against time as the simulation progresses.

Temperature Control Simulation and Code Generation Using Ladder Logic

This example shows how to model a temperature controller in Simulink® by using ladder logic. The example also showcases test case generation using Simulink Design Verifier $^{\text{\tiny TM}}$, C and ladder code generation, and ladder testbench generation.

The plcdemo_ladder_househeat_data.m file initializes data in the model workspace. To make changes, you can edit the model workspace directly or edit the file and re-load the model workspace. To view the model workspace, select **MODELING** > **Model Explorer** from the Simulink editor.

Step 1: Opening the Model

Open the plcdemo ladder househeat by using:

>> plcdemo ladder househeat complete

Step 2: Model Initialization


When the model is opened, it loads the information about the house from the plcdemo ladder househeat data.m file. The file does the following:

- Defines the house geometry (size, number of windows)
- Specifies the thermal properties of house materials
- Calculates the thermal resistance of the house
- Provides the heater characteristics (temperature of the hot air, ... flow-rate)
- Defines the cost of electricity (0.09\$/kWhr)
- Specifies the initial room temperature (20 deg. Celsius = 68 deg. ... Fahrenheit)

Note: Time is given in units of hours. Certain quantities, like air flow-rate, are expressed per hour (not per second).

Step 3: Understanding Model Components

Temperature Control via Ladder Logic

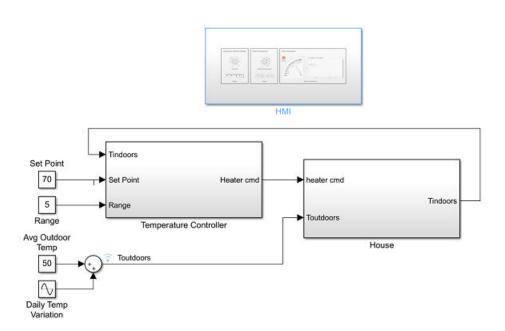

Set Point

Set Point is a constant block. It specifies the temperature that must be maintained indoors. It is 70 degrees Fahrenheit by default. Temperatures are given in Fahrenheit, but then are converted to Celsius to perform the calculations.

Range

Range is a constant block. This specifies the range around the Set Point for the room temperature to fluctuate. It is 5 degrees Fahrenheit by default. Hence, the room temperature will fluctuate between $Set\ L$ and $Set\ H$ where

$$Set_{-}L = SetPoint - Range$$

$$Set_{-}H = SetPoint + Range$$


Temperature Controller

Temperature Controller is a subsystem that has a AOI Runner container. Inside this temperature controller AOI Runner is a Ladder Diagram Function Block. Double click this block and select Logic routine to view the ladder logic for the temperature controller.

House

House is a subsystem which models the outside environment, house and the heater dynamics. Refer to the Thermal Model of House example for more information on these.

Ladder Logic

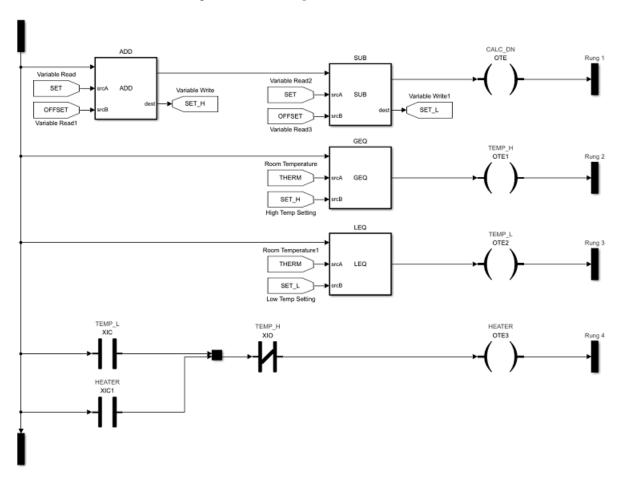

Open the Temperature Controller > Ladder Diagram Function Block > Logic Routine to view the ladder diagram for the temperature controller

The first rung calculates the Set_L and Set_H values based on the Set_Point and Range inputs. The GEQ activates the TEMP_H coil if the Room Temperature is greater than or equal to the SET_H. Similarly, The LEQ activates the TEMPL_L coil if the Room Temperature is less than or equal to the SET_L value.

The lowermost rung turns the heater ON if the TEMP_L output is active and turns the hearer OFF if the TEMP_H output is active.

Step 4: Run the Simulation

Click Run button to start simulation. Open HMI and use the following controls:

- **Temperature Controller Settings:** Allows changing the Set Point and Range input values.
- **Ambient Temperature:** Allows changing the average outside temperature and the range of its variation.
- **Room Temperature:** Displays the heater status, and the inside and outside temperature graphs.

Step 5: Generate Simulink Design Verifier Test Cases

Preprocess the Simulink model for SLDV Test Case generation by executing the following command in the MATLAB Command Window:

>> plcladderoption (gcs, 'SLDV', 'on')

Open the Temperature Controller Subsystem and right click on the AOI Runner Block named Temperature Controller. Select Design Verifier > Generate test case for subsystem.

Step 6: Generate C code

Ensure that an ert.tlc is selected in the Code Generation tab of the Model Configuration Parameters. Preprocess the simulink model for C/C++ code generation by executing the following command in the MATLAB Command Window:

>> plcladderoption(gcs, 'FastSim', 'on');

Open the Temperature Controller Subsystem and right click on the AOI Runner Block named Temperature Controller. Select C/C++ Code > Build This Subsystem.

Step 7: Ladder code and testbench generation

Open ladder tank control testbench model:

>> plcdemo ladder househeat tb

Select the Temperature Controller/ Temperature Controller Runner block and right-click PLC Coder->Generate Code for Subsystem to generate ladder code.

To generate testbench, select the Generate testbench for subsystem option in the PLC Configuration Parameters Dialog and generate code.

Elevator Control Simulation and Code Generation Using Ladder Logic

This example shows how to model a controller for a single-car elevator in Simulink® by using ladder logic. The elevator system is modeled as a MATLAB Function Block. The example also showcases ladder code generation.

Step 1: Opening the Model

Open the plcdemo_ladder_elevator by using:

>> plcdemo ladder elevator


Step 2: Model Initialization

When the model is opened, it sets the initial values of different parameters used in elevator controller from the plcdemo ladder elevator init.m file.

Floor Requests

Step 3: Model Components

Simple Elevator Contol using Ladder Logic

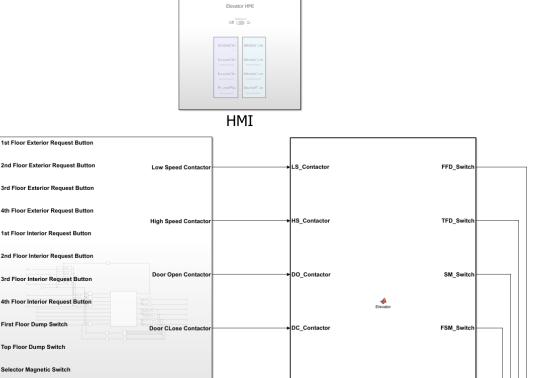

Elevator

Floor Requests

Floor Requests are a group of constant blocks. It specifies the indoor and outdoor floor requests to the controller. By default all the constant blocks are set to zero.

Unit Delay

Elevator Control System

Elevator Control System

Elevator Control System is a subsystem which consists of Digital Input modules(DI), Digital Output modules(DO) and a PLC Controller. DI modules preprocess floor request input and other sensor inputs. Similarly, DO modules preprocess output of PLC controller and sets output contactors. PLC controller is the brain of the system. It performs all the calculations and control action.

Elevator

Elevator is a MATLAB function block which show cases mathematical model of a single car elevator system.

Step 4: Run the Simulation

Click Run button to start simulation. Open HMI and use the following controls:

- **Exterior Buttons:** Represents the exterior floor request buttons.
- Interior Buttons: Represents the interior floor request buttons.
- **Photocell:** Represents the door sensor.

Step 5: Ladder code generation

Open elevator control model:

>> plcdemo ladder elevator

Select the plcdemo_ladder_elevator/Elevator Control System/Elevator PLC Ladder Diagram System/Elevator Controller block and right-click PLC Coder->Generate Code for Subsystem to generate ladder code.

Structured Text Code Generation for Simulink Data Dictionary


This example shows how to autogenerate structured text code for a model with a Simulink Data Dictionary Component

Prerequisites

Copy **plc_sldd_ex.slx** and **plc_sldd_ex.sldd** to the same folder in your current working directory (CWD)

Open the model

open_system('plc_sldd_ex')

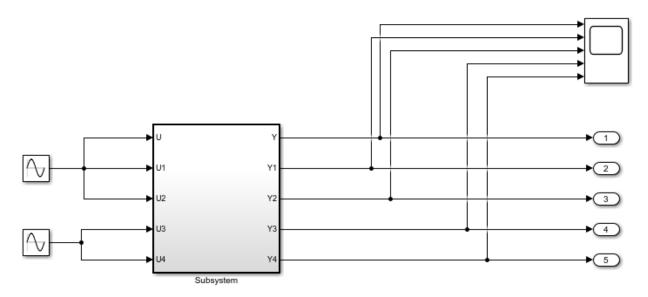

This model shows the use of Simulink Data Dictionary to specify model parameter and signal data and generate PLC code. The parameters K1, K2, K3, and signals dsm1, dsm2 are defined in data dictionary file plc_sldd_ex.sldd. To generate PLC code, open PLC Coder App. Select the Subsystem block and click the Generate PLC Code button.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2009-2020 The MathWorks, Inc.


Structured Text Code Generation for Subsystem Reference Blocks

This example shows how to autogenerate structured text code for subsystem reference blocks.

Open Simulink Model

To open the Simulink test bench model, use the following command.

open_system('mSubSysRefSystemIntegration')

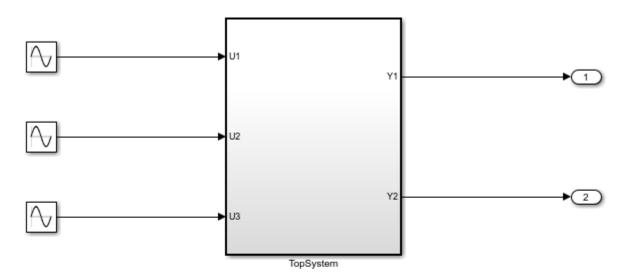

Note: Before code generation, copy SSRefSubSystem1, SSRefSubSystem2, SSRefSubSystem3, refSubSystem1, refSubSystem2, refSubSystem3 and mSubSysRefSystemIntegration SLX files to the same folder location in your current working directory (CWD).

Generate Code for the Subsystem

To generate code for the subsystem use plcgeneratecode

```
generatedfiles = plcgeneratecode('mSubSysRefSystemIntegration/TopSystem');
### Generating PLC code for 'mSubSysRefSystemIntegration/TopSystem'.
### Using <a href="matlab:configset.showParameterGroup('mSubSysRefSystemIntegration', { 'PLC Code
### Begin code generation for IDE <a href="matlab:configset.showParameterGroup('mSubSysRefSystem)
### Emit PLC code to file.
### Creating PLC code generation report <a href="matlab:web('C:\TEMP\Bdoc20b_1465442_5924\ib8F420")
### PLC code generation successful for 'mSubSysRefSystemIntegration/TopSystem'.
### Generated files:
<a href="matlab: edit('plcsrc\mSubSysRefSystemIntegration.exp')">plcsrc\mSubSysRefSystemIntegrat
```


PLC_RemoveSSStep for Distributed Code Generation

Generate structured text code for different components of your model.

Open model

Open the model by using the following command:

```
open_system('mSystemIntegration');
```

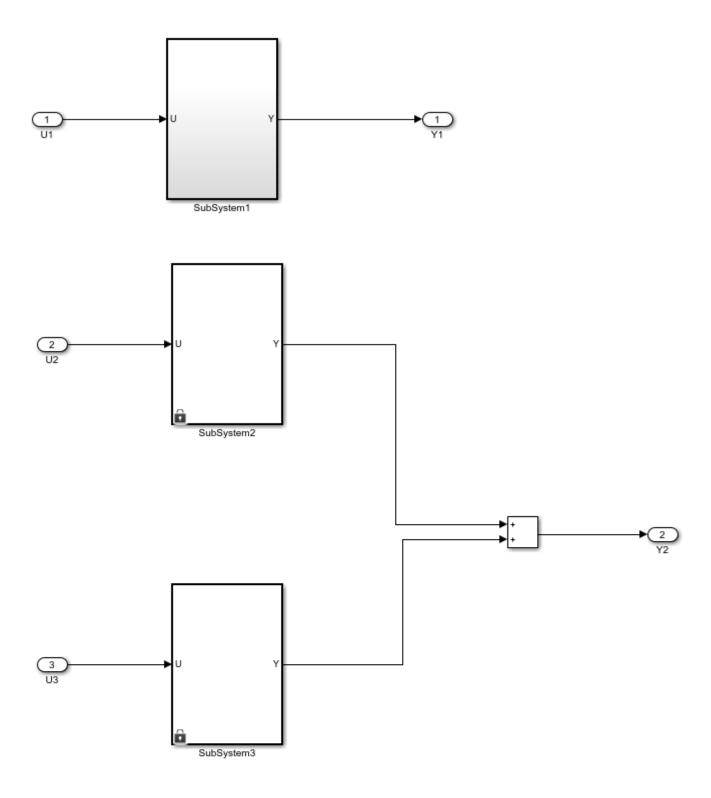

Note: Before code generation, copy mSubSystem1, mSubSystem2, mSubSystem3, and mSystemIntegration SLX files to the same folder location in your current working directory (CWD).

Configure Model Components for Distributed Code Generation

To autogenerate structured text code with the same ssMethod type for every component of your model for external code integration later on, use Keep Top-Level ssMethod Name the Same as the Non-Top Level Name. For more information, see "Keep Top-Level ssmethod Name the Same as the Non-Top Level Name" on page 12-33 function.

Mark Externally Defined Variables

- 1 Open the Simulink PLC Coder app. For more information, see Simulink PLC Coder.
- 2 Select the TopSystem block.
- 3 Click Settings. Navigate to PLC Code Generation > Identifiers. In the Identifier Names box enter Subsystem1, Subsystem2, Subsystem3.
- 4 Click OK.

Code Generation

- 1 Open the Simulink PLC Coder app. For more information, see Simulink PLC Coder.
- 2 Select the Subsystem1 block.
- 3 Click Settings. Navigate to PLC Code Generation > Identifiers. Select the Keep top level ssMethod name same as non-top level check box.
- 4 Click OK.
- 5 Repeat steps 2 through 4 for SubSystem2, SubSystem3, and TopSystem.

Generate Code for the Subsystem

To generate code for the individual subsystem use the plcgenerate code function:

plcgeneratecode('mSystemIntegration/TopSystem/SubSystem1');

plcgeneratecode('mSystemIntegration/TopSystem/SubSystem2');

plcgeneratecode('mSystemIntegration/TopSystem/SubSystem3');

Generate Code for the Integrated Model

To generate code for the integrated model:

plcgeneratecode('mSystemIntegration/TopSystem');

See Also

More About

- "Generated Code Structure for PLC RemoveSSStep" on page 23-3
- "Distributed Model Code Generation Options" on page 23-2

Structured Text Code Generation for Enum To Integer Conversion


Autogenerate structured text code for enum to integer conversion model.

Load enum class

For this example, the myEnum.m script loads the enum class definition. Place this script file in the same project folder as the plc_enum_to_int model file.

Open the model

open_system('plc_enum_to_int.slx')

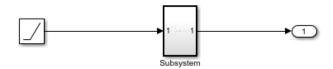

This model shows PLC code generation for enum to integer type conversion.

To generate PLC code, open PLC Coder App. Select Settings->PLC Code Generation->General options->Target IDE and choose Target IDE that supports enum type. Select Settings->PLC Code Generation->Identifiers->Generate enum cast function. Click the Subsystem block and click the Generate PLC Code button.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2009-2020 The MathWorks, Inc.

Structured Text Code Generation for Integer To Enum Conversion


This example shows how to autogenerate structured text code for integer to enum conversion model.

Load enum class

For this example, the myColor.m script loads the enum class definition. Place this script file in the same project folder as the plc_int_to_enum model file.

Open the model

open_system('plc_int_to_enum.slx')

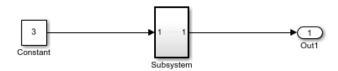

This model shows PLC code generation for integer to enum type conversion.

To generate PLC code, open PLC Coder App. Select Settings->PLC Code Generation->General options->Target IDE and choose Target IDE that supports enum type. Select Settings->PLC Code Generation->Identifiers->Generate enum cast function. Click the Subsystem block and click the Generate PLC Code button.

The Diagnostic Viewer displays hyperlinks to the generated code files, click the links to view the generated files.

Copyright 2009-2020 The MathWorks, Inc.


PLC_PreventExternalVarInitialization for Distributed Code Generation

Generate structured text code for different components of your model.

Open model

Open the model by using the following command:

open_system('External_Var_Distributed_Codegen');

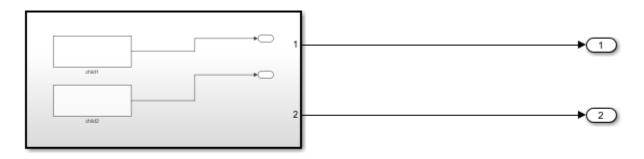

Copyright 2020 The MathWorks, Inc.

Configure Model Components for Distributed Code Generation

To autogenerate structured text code by preventing initialization statements for externally defined variables for external code integration later on, use remove Initialization Statements for Externally Defined State Variables. for more information, see "Remove Initialization Statements for Externally Defined State Variables" on page 12-34.

Mark Externally Defined Variables

- 1 Open the Simulink PLC Coder app. For more information, see Simulink PLC Coder.
- 2 Select the Subsystem block.
- 3 Click **Settings**. Navigate to **PLC Code Generation** > **Identifiers**. In the **Identifier** Names box enter child1, child2, DSExportedGlobal.
- 4 Click OK.

Code Generation

- 1 Open the Simulink PLC Coder app. For more information, see Simulink PLC Coder.
- 2 Select the Subsystem block.
- 3 Click **Settings**. Navigate to **PLC Code Generation > Interface**. Select the **Remove Initialization Statements for externally defined state variables** check box.
- 4 Click OK.

Generate Code for the Subsystem

To generate code for the individual subsystem use the plcgenerate code function:

plcgeneratecode('External Var Distributed Codegen/Subsystem');

Related Topics

"Generated Code Structure for PLC_PreventExternalVarInitialization" on page 23-5.

See Also

More About

- "Generated Code Structure for PLC PreventExternalVarInitialization" on page 23-5
- "Distributed Model Code Generation Options" on page 23-2

Simulation and Structured Text Generation For MPC Controller Block

This example shows how to simulate and generate Structured Text for an MPC Controller block using Simulink® PLC Coder™ software. The generated code uses single-precision.

Required Products

To run this example, MPC Toolbox, Simulink and Simulink PLC Coder are required.

```
if ~mpcchecktoolboxinstalled('simulink')
   disp('Simulink is required to run this example.')
    return
end
if ~mpcchecktoolboxinstalled('plccoder')
   disp('Simulink PLC Coder is required to run this example.');
if ~mpcchecktoolboxinstalled('mpc')
   disp('MPC Toolbox is required to run this example.');
    return
end
```

Define Plant Model and MPC Controller

```
Define a SISO plant.
```

```
plant = ss(tf([3 1],[1 0.6 1]));
```


Define the MPC controller for the plant.


```
Ts = 0.1;
            %Sample time
p = 10;
            %Prediction horizon
m = 2;
            %Control horizon
Weights = struct('MV',0,'MVRate',0.01,'0V',1); % Weights
MV = struct('Min',-Inf,'Max',Inf,'RateMin',-100,'RateMax',100); % Input constraints
OV = struct('Min',-2,'Max',2); % Output constraints
mpcobj = mpc(plant,Ts,p,m,Weights,MV,OV);
```

Simulate and Generate Structured Text

Open the Simulink model.

```
mdl = 'mpc plcdemo';
open system(mdl)
```

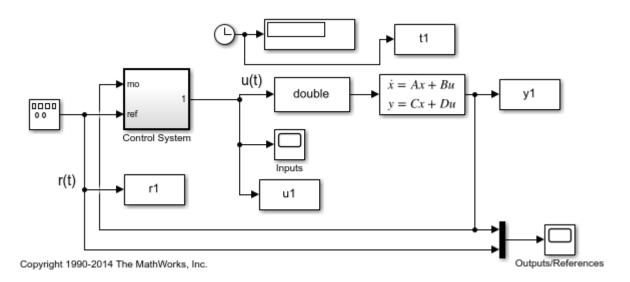


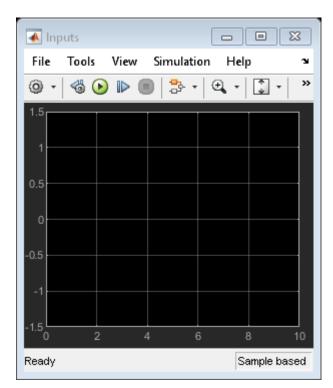


To generate structured text for the MPC Controller block, complete the following two steps:

• Configure the MPC block to use single-precision data. Set the **Output data type** property of the MPC Controller block to single.

open_system([mdl '/Control System/MPC Controller'])

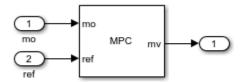

• Put the MPC block inside a subsystem block and treat the subsystem block as an atomic unit. Select the **Treat as atomic unit** property of the subsystem block.

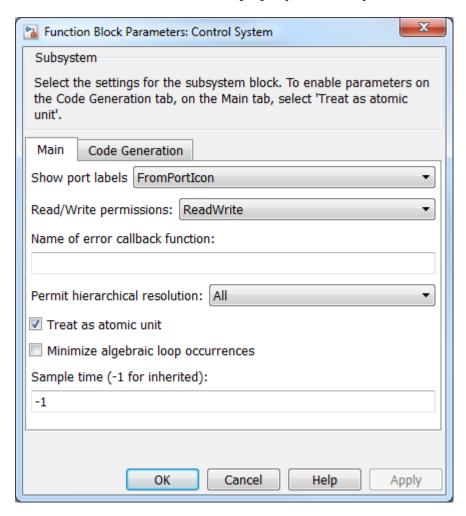


Simulate the model in Simulink.

```
close_system([mdl '/Control System/MPC Controller'])
open_system([mdl '/Outputs//References'])
open_system([mdl '/Inputs'])
sim(mdl)
```

- --->Converting model to discrete time.
- -->Assuming output disturbance added to measured output channel #1 is integrated white noise.
- -->The "Model.Noise" property of the "mpc" object is empty. Assuming white noise on each measure




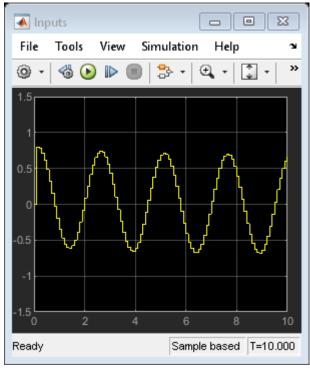


To generate code with the PLC Coder, use the plcgeneratecode command.


```
disp('Generating PLC structure text... Please wait until it finishes.')
plcgeneratecode([mdl '/Control System']);
```

```
Generating PLC structure text... Please wait until it finishes.
### Generating PLC code for 'mpc_plcdemo/Control System'.
### Using <a href="matlab:configset.showParameterGroup('mpc_plcdemo', { 'PLC Code Generation' }</pre>
### Begin code generation for IDE <a href="matlab:configset.showParameterGroup('mpc_plcdemo', {</pre>
### Emit PLC code to file.
### Creating PLC code generation report <a href="matlab:web('C:\TEMP\Bdoc20b_1465442_5924\ib8F42"
### PLC code generation successful for 'mpc_plcdemo/Control System'.
### Generated files:
<a href="matlab: edit('plcsrc\mpc_plcdemo.exp')">plcsrc\mpc_plcdemo.exp</a>
```

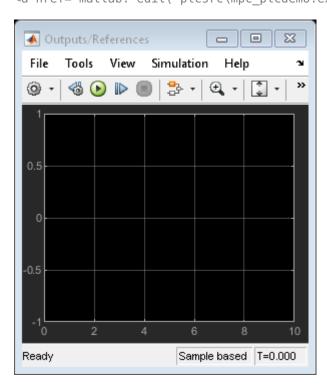

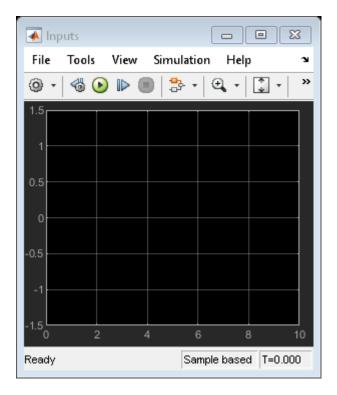

The Message Viewer dialog box shows that PLC code generation was successful.

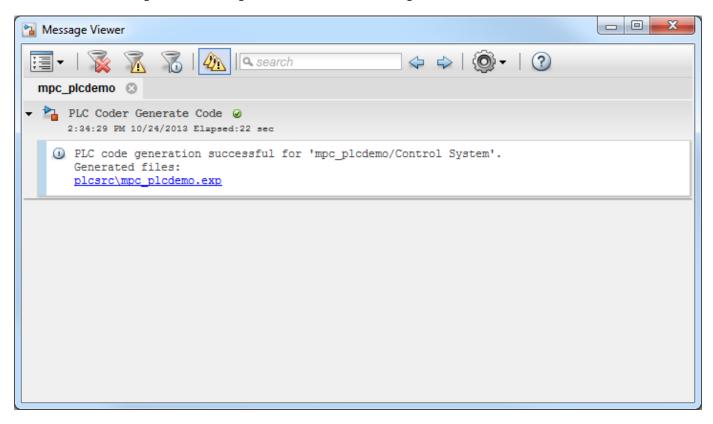

Close the Simulink model, and return to the original directory.

bdclose(mdl)