

3746 Nways Multiprotocol Controller  
Model 950



# Installation Guide





3746 Nways Multiprotocol Controller  
Model 950



# Installation Guide

**Note!**

Before using this information and the product it supports, be sure to read the general information under “Notices” on page xi.

**Sixth Edition (July 1999)**

This edition applies to the 3746 Model 950.

Order publications through your IBM representative or the IBM branch office serving your locality. Publications are not stocked at the address given below.

A form for readers' comments appears at the back of this publication. If the form has been removed, address your comments to:

Department CGFA  
Design & Information Development  
IBM Corporation  
PO Box 12195  
Research Triangle Park NC 27709  
U.S.A.

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

© **Copyright International Business Machines Corporation 1996, 1999. All rights reserved.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

# Contents

<b>Figures</b>	vii
<b>Notices</b>	xi
Electronic Emission Notices	xii
Industry Canada Class A Emission Compliance Statement	xii
Avis de conformité aux normes d'Industrie Canada	xii
European Union (EU) Mark of Conformity Statement	xii
Japanese Voluntary Control Council for Interference (VCCI) Statement	xiii
Korean Communications Statement	xiii
Taiwanese Class A Warning Statement	xiv
New Zealand Radiocommunications (Radio) Regulations	xiv
Notice to UK Users	xiv
Year 2000 Statement	xiv
Trademarks	xvi
<b>Product Safety Information</b>	xvii
General Safety	xvii
Safety Notices	xvii
Service Inspection Procedures	xvii
<b>About This Book</b>	xix
Who Should Use This Book	xix
How To Use This Book	xix
How This Book is Organized	xix
Where to Find More Information	xx
World Wide Web	xx
Online Documentation from CD-ROM	xx
Service Personnel Definitions	xxi
<b>Chapter 1. Preparing for Installation</b>	1-1
Overview	1-2
Documentation	1-3
3746-950	1-3
Special Tools/Test Equipment	1-6
Installation Time	1-7
Making Ready to Install	1-7
<b>Chapter 2. Connecting the 3746-950 to the Power and Devices</b>	2-1
Checking the 3746-950 Frame	2-2
Removing the Shipping Bars	2-3
Installing the Controller Expansion	2-3
Installing the Controller Expansion Attached to the 3746-950	2-4
Installing the Controller Expansion Detached from the 3746-950	2-5
Installing the Controller Expansion Detached from the 3746-950	2-6
Locking the frames	2-7
Installing an Ethernet Bridge	2-8
Connection to Main Power	2-24
Power Description and Load Requirements	2-24
Power Attachment Configuration	2-24
3746-950 Power Requirements	2-24

Controller Expansion Power Requirements . . . . .	2-24
Measuring and Adjusting the 3746-950 Power to the Customer Supply . . . . .	2-25
Measuring the Customer's Primary Power . . . . .	2-25
Adjusting the 3746-950 Power to the Customer's Primary Power . . . . .	2-26
Connecting the 3746-950 to the Customer's ac Power . . . . .	2-27
Connecting the ac Outlet Distribution Box . . . . .	2-27
Connecting the 3746-950 to the LAN. . . . .	2-28
Installing the Service Processor . . . . .	2-30
Installing a 6275 in the Controller Expansion . . . . .	2-31
Installing a 7585 in the Controller Expansion . . . . .	2-32
Installing a 3172 in the Controller Expansion . . . . .	2-33
Installing a 9585 in the Controller Expansion . . . . .	2-34
Installing a 9577 in the Controller Expansion . . . . .	2-35
Installing the 3746-950 Code Level . . . . .	2-36
Installing the 3746-950 Code Level from a CD-ROM . . . . .	2-36
Installing the 3746-950 Code Level from an Optical Disk . . . . .	2-37
Configuring the Service Processor . . . . .	2-38
Installing the Network Node Processor (A or B) . . . . .	2-39
Configuring NetView Performance Monitor (NPM) . . . . .	2-40
Installing the Multiaccess Enclosure . . . . .	2-42
Installing Software Feature on the 3746-950 . . . . .	2-43
Calling RETAIN . . . . .	2-45

### **Chapter 3. 3746-950 and Service Processor Power On and Test**

<b>Procedure</b> . . . . .	3-1
3746-950 Control Panel General Information . . . . .	3-2
3746-950 Checkout Procedure . . . . .	3-3

### **Chapter 4. Cable Setup** . . . . . 4-1

Installing the TRA Cables . . . . .	4-2
Shielded Cables . . . . .	4-2
Unshielded Twisted-Pair Cables . . . . .	4-3
Installing the ESCA Cables . . . . .	4-4
Installing the RVX Cables . . . . .	4-7
Installing the LCBs and Cable from the LCBB to LCBE . . . . .	4-8
Installing the Cables From LIC11-to-LCBB . . . . .	4-9
Installing the ARCs and Cables . . . . .	4-10
Active Remote Connector (ARC) Assembly A . . . . .	4-11
Active Remote Connector (ARC) Assembly B with Cables . . . . .	4-12
Cables for ARC Assembly B . . . . .	4-13
Connecting the ARC Assembly A to the LCBB/LCBE . . . . .	4-15
Connecting the ARC Assembly B to the LCBB/LCBE . . . . .	4-16
Connecting the Cable Connector Type 3746-900 to the DCE/DTE . . . . .	4-18
Connecting the Cable Connector Type 3745 to the DCE/DTE . . . . .	4-19
LIC12 Cable Installation . . . . .	4-19
Updating and Saving the CDF-E . . . . .	4-20

### **Chapter 5. Installing the 3746-950 Ground Brackets** . . . . . 5-1

Installing the 3746-950 and Controller Expansion Ground Brackets . . . . .	5-2
Installing the 3746-950 Ground Brackets . . . . .	5-4
Installing the Controller Expansion Ground Brackets . . . . .	5-5

### **Chapter 6. Making the Machine Ready for the Customer** . . . . . 6-1

Making Machine Ready for Customer . . . . .	6-2
---	-----

<b>Chapter 7. Removal or Relocation of the 3746-950</b>	7-1
Before Removing the 3746-950	7-2
Updating the Service Processor Network Configuration	7-2
Disconnecting the Mainline Power	7-2
Disconnecting the Interface Cables	7-3
Preparing Machines for Shipment	7-3
<b>Appendix A. Parameter Worksheets</b>	A-1
Parameter worksheet for Processor Loading	A-1
Parameter worksheet for Ethernet Bridge	A-1
Location and Cable Type	A-1
SNMP Community Name	A-1
SNMP Trap Community Name	A-1
<b>Appendix B. 3746-950 Component Locations</b>	B-1
Board Locations	B-5
AC and DC Power Box Locations	B-8
Distribution Box and AC-1 Power Box Locations	B-9
<b>Appendix C. Controller Expansion Component Locations</b>	C-1
<b>Glossary</b>	X-1
<b>Bibliography</b>	X-7
Service Documentation for the IBM 3746 Model 950	X-7
Customer Documentation for the 3746 Model 950	X-10
<b>Index</b>	X-15





# Figures

1-1.	3746-950 Data Flow . . . . .	1-2
1-2.	Plan View of a 3746-950 Configuration . . . . .	1-4
1-3.	Plan View of a 3746-950 Configuration . . . . .	1-4
1-4.	Plan View of a 3746-950 Alone . . . . .	1-5
1-5.	The 3746-950 . . . . .	1-5
1-6.	Plan View of a Controller Expansion . . . . .	1-5
1-7.	The Controller Expansion . . . . .	1-5
1-8.	Plan View of a 3746-950 and two Controller Expansion Installed . . .	1-6
1-9.	The 3746-950 and two Controller Expansion Installed . . . . .	1-6
2-1.	3746-950 Power Rating Plate (Rear View) . . . . .	2-2
2-2.	Shipping Bars . . . . .	2-3
2-3.	Installing the Controller Expansion Attached to the 3746-950 . . . . .	2-4
2-4.	Installing the Controller Expansion Alone . . . . .	2-5
2-5.	Installing the Controller Expansion Alone (more than 6 m) . . . . .	2-6
2-6.	Caster lock Screw . . . . .	2-7
2-7.	Contents of the Shipping Carton for the Ethernet Bridge. . . . .	2-8
2-8.	Single-Port Token-Ring Attachment Module . . . . .	2-9
2-9.	Ethernet Attachment Module . . . . .	2-9
2-10.	The Ethernet Bridge Front Panel . . . . .	2-10
2-11.	Connecting the Ethernet Bridge to the Service Processor . . . . .	2-11
2-12.	Managing the Ethernet Bridge . . . . .	2-12
2-13.	Restoring LLC2 Code . . . . .	2-12
2-14.	Reload 8229 microcode . . . . .	2-13
2-15.	Configure Ethernet Bridge . . . . .	2-13
2-16.	IBM 8229 Utility Program Main Menu . . . . .	2-13
2-17.	Configuring SNMP . . . . .	2-14
2-18.	Configuring SNMP Ethernet Bridge . . . . .	2-14
2-19.	Use of the 8228 Setup Aid . . . . .	2-16
2-20.	Installing One Ethernet Bridge in the Controller Expansion-A (Rear View) . . . . .	2-17
2-21.	Installing Four Ethernet Bridge in the Controller Expansion-B (Rear View) . . . . .	2-18
2-22.	Placing the Ethernet Bridge in a Controller Expansion . . . . .	2-19
2-23.	Captive Nuts and Ethernet Bridge Installation . . . . .	2-20
2-24.	Connection of the 8228 to a TIC3 . . . . .	2-21
2-25.	Routing the Cable from a TIC3 to a 8228 (Controller Expansion Attached) . . . . .	2-22
2-26.	Routing the Cable from a TIC3 to a 8228 (Controller Expansion Detached) . . . . .	2-22
2-27.	Connection of the Ethernet Bridge to the 8228 and Power . . . . .	2-23
2-28.	ac Power Transformer Connection . . . . .	2-26
2-29.	Connecting the ac Outlet Distribution Box . . . . .	2-27
2-30.	Token Ring Cable . . . . .	2-28
2-31.	Connection of the 3746-950 to the 8228 (Controller Expansion Attached) . . . . .	2-29
2-32.	Connection of the 3746-950 to the 8228 (Controller Expansion Detached) . . . . .	2-29
2-33.	Service Processor type 6275 . . . . .	2-31
2-34.	Service Processor type 7585 . . . . .	2-32
2-35.	Service Processor type 3172 . . . . .	2-33

2-36.	Service Processor type 9585	2-34
2-37.	Service Processor type 9577	2-35
2-38.	Configuration Management Window	2-36
2-39.	LIC Installation Menu	2-37
2-40.	LIC Installation Main Menu	2-37
2-41.	3746-9x0 Menu	2-40
2-42.	Network Node Processor Menu	2-40
2-43.	Manage Control Points on NNP	2-40
2-44.	NPM Management Menu	2-41
2-45.	Example of Resource Resolution Table	2-41
2-46.	Example of Switched Major Node	2-42
2-47.	NPM Management Message	2-42
2-48.	Manage Control Points on NNP	2-42
2-49.	Controller Installation	2-43
2-50.	Features Selection Window	2-43
2-51.	Network Routing Selection	2-44
2-52.	Features Selection Successfull Message	2-44
2-53.	Link to RETAIN	2-45
3-1.	3746-950 Control Panel Layout	3-2
3-2.	Display Part of the 3746-950 Control Panel Layout	3-3
3-3.	3746-9x0 Menu	3-7
3-4.	Network Node Processor Management Functions	3-7
3-5.	CCM	3-8
3-6.	Importing a Configuration	3-8
3-7.	Importing a Configuration	3-9
3-8.	Activate a Configuration	3-9
3-9.	Typical ESCON Link between a 3746-9x0 and a Host	3-10
4-1.	TIC3 (Token-Ring 16Mbps)	4-2
4-2.	Connecting The UTP Cables	4-3
4-3.	Routing the Optical Fibers	4-4
4-4.	Routing the Optical Fibers	4-5
4-5.	ESCA Cable Plugging	4-6
4-6.	RVX Cables	4-7
4-7.	LCBB and LCBE Connection	4-8
4-8.	ARC Assembly A and B	4-10
4-9.	ARC Location in the LCBB and LCBE	4-10
4-10.	ARC/Cable Installation	4-15
4-11.	ARC Connection Type 3746-900	4-15
4-12.	ARC Connection Type 3745	4-15
4-13.	ARC Type	4-16
4-14.	ARC Installation	4-16
4-15.	Cable Installation	4-17
4-16.	Cable Connector Type 3746-900	4-17
4-17.	Cable Connector Type 3745	4-17
4-18.	Adapter for ARC 3A1 or 3A2 (PN 1749352)	4-18
4-19.	Adapter for ARC 3B (PN 65X9899)	4-18
4-20.	Connection of the Cable Type 3745	4-19
4-21.	CLP Display	4-20
4-22.	LCB Display	4-21
4-23.	ARC Display	4-21
5-1.	3746-950 and Controller Expansion Ground Brackets (Front View)	5-3
5-2.	3746-950 Ground Brackets (Front View)	5-4
5-3.	Controller Expansion Ground Brackets (Front View)	5-5
6-1.	Manage the Control Points	6-4

B-1.	3746-950 Locations (Front)	B-1
B-2.	3746-950 Locations (Rear)	B-2
B-3.	3746-950 Locations with Enclosure Expansion 2 Installed (Front)	B-3
B-4.	3746-950 Locations with Enclosure Expansion 2 Installed (Rear)	B-4
B-5.	Basic Board 07G-A1 Locations (Processor Side, 3746-950 Front View)	B-5
B-6.	3746-950 Labels (Front Side)	B-5
B-7.	Basic Board 07N-A1 Locations (Coupler Side, 3746-950 Rear View)	B-6
B-8.	Range Addresses for Couplers, Labels Rear Side	B-6
B-9.	Basic Board 07N-A1 Locations (Coupler Side)	B-7
B-10.	Expansion Board 07M-A1/07L-A1 Locations (Coupler Side)	B-7
B-11.	3746-950 Power Area with 2 AC (AC-2 is Optional)	B-8
B-12.	3746-950 Power Area with 1 AC + 1 DC (DC Power is Optional)	B-8
B-13.	Power Area	B-9
C-1.	Controller Expansion Inventory Chart (Front View).	C-2
C-2.	Controller Expansion Inventory Chart (Rear View).	C-3
C-3.	Installing Captive Nuts and Brackets for the Display, Drawer, SP and NNP Type 6275 or 7585	C-4
C-4.	Installing Captive Nuts and Brackets for the Display, Drawer, SP and NNP Type 3172	C-5
C-5.	Installing Captive Nuts for LCBs	C-6
C-6.	Installing Captive Nuts for 8229s	C-7
C-7.	Installing Captive Nuts and Brackets for MAE	C-8
C-8.	Installing Brackets (PN 58G5752) for Processor Type 6275 or 7585	C-9
C-9.	Installing Brackets for Processor Type 3172	C-10
C-10.	Units Installation in the Controller Expansion (SP and NNP Type 6275)	C-11
C-11.	Units Installation in the Controller Expansion (SP and NNP Type 6275 + MAE)	C-11
C-12.	Units Installation in the Controller Expansion (SP Type 7585)	C-12
C-13.	Units Installation in the Controller Expansion (SP Type 7585 + MAE)	C-12
C-14.	Units Installation in the Controller Expansion (SP Type 3172)	C-13
C-15.	Units Installation in the Controller Expansion (SP Type 9585)	C-13
C-16.	Units Installation in the Controller Expansion (SP Type 9577)	C-14
C-17.	Connecting the Units to the ac Outlet Distribution Box.	C-14
C-18.	Connecting the Units to the Dual ac Outlet Distribution Boxes	C-15



---

## Notices

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only IBM's product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any of IBM's intellectual property rights may be used instead of the IBM product, program, or service. Evaluation and verification of operation in conjunction with other products, except those expressly designated by IBM, are the user's responsibility.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk, NY 10504-1785  
U.S.A.

For license inquiries regarding double-byte (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

IBM World Trade Asia Corporation  
Licensing  
2-31 Roppongi 3-chome, Minato-ku  
Tokyo 106, Japan

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

---

## Electronic Emission Notices

### Federal Communications Commission (FCC) Statement

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Industry Canada Class A Emission Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

### Avis de conformité aux normes d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

### European Union (EU) Mark of Conformity Statement

This product is in conformity with the protection requirements of EU Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to CISPR 22/European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

**Attention:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

**Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) vom 30. August 1995 (bzw. der EMC EG Richtlinie 89/336).**

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Konformitätserklärung nach Paragraph 5 des EMVG ist die IBM Deutschland Informationssysteme GmbH, 70548 Stuttgart.

Informationen in Hinsicht EMVG Paragraph 3 Abs. (2) 2:

Das Gerät erfüllt die Schutzanforderungen nach EN 50082-1 und EN 55022 Klasse A.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:  
"Warnung: Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen."

EN 50082-1 Hinweis:

"Wird dieses Gerät in einer industriellen Umgebung betrieben (wie in EN 50082-2 festgelegt), dann kann es dabei eventuell gestört werden. In solch einem Fall ist der Abstand bzw. die Abschirmung zu der industriellen Störquelle zu vergrößern."

Anmerkung:

Um die Einhaltung des EMVG sicherzustellen, sind die Geräte, wie in den IBM Handbüchern angegeben, zu installieren und zu betreiben.

## Japanese Voluntary Control Council for Interference (VCCI) Statement

This product is a Class A Information Technology Equipment and conforms to the standards set by the Voluntary Control Council for Interference by Technology Equipment (VCCI). In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

## Korean Communications Statement

Please note that this device has been certified for business purpose with regard to electromagnetic interference. If you find this is not suitable for your use, you may exchange it for one of residential use.

### A급 기기(업무용)

이 기기는 업무용으로 전자파적합등록을 받은 기기이오니 판매자 또는 이용자는 이점을 주의하시기 바라며, 만약 구입하였을 때에는 구입한 곳에서 가정용으로 교환하시기 바랍니다.

## Taiwanese Class A Warning Statement

警告使用者：  
這是甲類的資訊產品，在  
居住的環境中使用時，可  
能會造成射頻干擾，在這  
種情況下，使用者會被要  
求採取某些適當的對策。

## New Zealand Radiocommunications (Radio) Regulations

**Attention:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

---

## Notice to UK Users

The IBM 3746 Model 900 and IBM 3746 Model 950 are manufactured according to the International Safety Standard IEC950 and, as such, are approved in the UK under the General Approval number NS/G/1234/J/100003.

The Active Remote Couplers (ARCs) and the X.21 Interface, housed within the 3746 Model 900 and 3746 Model 950, are approved separately, each having their own independent approval number. These interface adapters, supplied by IBM, do not contain excessive voltages. An excessive voltage is one which exceeds 42.4 V peak ac or 60 V dc. They interface with the 3746 Model 900 or 3746 Model 950, using Safe Extra Low Voltages only.

In order to maintain the independent approval of the IBM adapters, it is essential that other optional cards, not supplied by IBM, do not use mains voltages or any other excessive voltages. Seek advice from a competent engineer before installing other adapters not supplied by IBM.

---

## Year 2000 Statement

This product is Year 2000 ready. When used in accordance with its associated documentation, it is capable of correctly processing, providing, and/or receiving date data within and between the 20th and 21st centuries, provided all other products (for example, software, hardware, and firmware) used with the product properly exchange accurate date data with it.

For more information, refer to:

<http://www.ibm.com/year2000>



The 3745 and 3746 controllers require a certain level of microcode to be Year 2000 ready. For more detailed information, access the URL listed above and click **Product Readiness**.

---

## Trademarks

The following terms are trademarks of International Business Machines Corporation in the United States, or other countries, or both:

APPN  
ESCON  
IBM

Nways  
RETAIN  
VTAM

NetView and Tivoli are trademarks of Tivoli Systems, Inc. in the United States, or other countries, or both.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.

Microsoft, Windows, Windows NT, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation.

Pentium is a registered trademark of Intel Corporation in the U.S. and other countries.

UNIX is a registered trademark in the United States and other countries licensed exclusively through X/Open Company Limited.

Other company, product, and service names may be trademarks or service marks of others.

---

# Product Safety Information

---

## General Safety

This product meets IBM safety standards.

---

## Safety Notices

For *Safety Notices* refer to *IBM 3745 Communication Controller All Models*, *IBM 3746 Expansion Unit Model 900*, *IBM 3746 Nways Multiprotocol Controller Model 950*, *Safety Information*, GA33-0400.

---

## Service Inspection Procedures

The Service Inspection Procedures help service personnel check whether the 3746-950 conforms to IBM safety criteria. They have to be used each time the 3746-950 safety is suspected. The *Service Inspection Procedures* section is located at the beginning of the *3746-950 Service Guide*, SY33-2108. The 3746-950 areas and functions checked through service inspection procedures are:

1. External covers
2. Safety labels
3. Safety covers and shields
4. Grounding
5. Circuit breaker and protector rating
6. Input power voltage
7. Test of control power switch
8. Power-ON indicator.



---

## About This Book

---

### Who Should Use This Book

The IBM personnel using this manual should be:

- Trained to service the 3746 Nways Multiprotocol Controller Model 950
- Familiar with the 3746-950 service documentation.

---

### How To Use This Book

This manual provides step-by-step procedures for installing a 3746-950. **Many steps depend on previously completed instructions** before continuing the procedure. To ensure the most efficient installation:

- Read the instructions carefully before attempting to do them,
- Complete each step before going to the next one,
- Go through the chapters sequentially.

---

### How This Book is Organized

<b>Chapter 1</b>	Introduces the 3746-950 configuration and gives a list of what the CE must do before beginning to install. Read this chapter before any installation.
<b>Chapter 2</b>	Presents the procedures to connect the 3746-950 to the customer's power sources and to connect the service console or the local console to the 3746-950 and 8228.
<b>Chapter 3</b>	Presents the 3746-950 power ON and test procedures that the CE must perform on the 3746-950 before installing the external cables.
<b>Chapter 4</b>	Presents the external cable setup procedures.
<b>Chapter 5</b>	Presents the procedures to install the ground plates on the 3746-950.
<b>Chapter 6</b>	Presents the procedures to make the machine ready for the customer.
<b>Chapter 7</b>	Presents relocating/removing procedures for the 3746-950.
<b>Appendix A</b>	Gives an example of the Ethernet parameters worksheet
<b>Appendix B</b>	Shows the 3746-950 component locations.
<b>Appendix C</b>	Shows the controller expansion component locations.

A **service and customer documentation bibliography**, a **list of abbreviations**, and an **index** are provided at the end of this manual.

---

## Where to Find More Information

For a complete list of the 3746-950 customer and service information manuals, see at the end of this manual. In this *Installation Guide*, references are made to the following publications:

*3746-950 Service Guide*, SY33-2108

*Service Processor Installation and Maintenance (Based on 6275)*, SY33-2125

*Service Processor Installation and Maintenance (Based on 7585, 3172, and 9585)*, SY33-2120

*Service Processor Installation and Maintenance (Based on 7585, 3172, 9585, and 9577)*, SY33-2115

*3745 Communication Controller Models A and 3746 Models 900 and 950: Overview, Installation, and Integration*, GA27-4234

*3745 Communication Controller Models A and 3746 Models 900 and 950: Serial Line Adapters*, GA27-4235

*3745 Communication Controller Models A and 3746 Models 900 and 950: Token Ring and Ethernet*, GA27-4236

*3745 Communication Controller Models A and 3746 Models 900 and 950: ESCON Channels*, GA27-4237

*3745 Communication Controller Models A and 3746 Models 900 and 950: Physical Planning*, GA27-4238

*3745 Communication Controller Models A and 3746 Models 900 and 950: Management Planning*, GA27-4239

*3745 Communication Controller Models A and 3746 Models 900 and 950: Multiaccess Enclosure Planning*, GA27-4240

*3745 Communication Controller Models A and 3746 Models 900 and 950: Protocol Introductions*, GA27-4241

*Multiaccess Enclosure Installation and Maintenance Guide*, SY33-2124.

*Multiaccess Enclosure Installation and Maintenance Guide*, SY33-2118

## World Wide Web

You can access the latest news and information about IBM network products, customer service and support, and microcode upgrades via the Internet at the URL:  
<http://www.networking.ibm.com/>

## Online Documentation from CD-ROM

With the service processor is now shipped a CD which contains the LIC and a copy of the 3746 web site. You will find from this web page, marketing, PE, and all information about CCP products.

To access this page:

1. Insert the CD into the CD disk drive of the service processor.
2. From the MOSS-E primary menu, click on **Information**
3. Double click on **CD-ROM documentation**

4. Then if you want to display the CCP documentation, click on **Documentation**
5. Click on **La Gaude Information Development: Communication Controllers Information**

**Note:** To have the very last version of the web site, connect to Internet at:  
<http://w3is.lagaude.ibm.com/WEB/COMLGE.nsf>

---

## Service Personnel Definitions

See the *3746-950 Service Guide*, SY33-2108.





---

# Chapter 1. Preparing for Installation

Overview . . . . .	1-2
Documentation . . . . .	1-3
3746-950 . . . . .	1-3
Special Tools/Test Equipment . . . . .	1-6
Installation Time . . . . .	1-7
Making Ready to Install . . . . .	1-7

## Overview

The 3746-950 is an APPN Network Node based on the 3746-900 structure. A service processor provides the operator and service console support for the 3746-950. A network node processor houses the control point to support APPN and or IP.

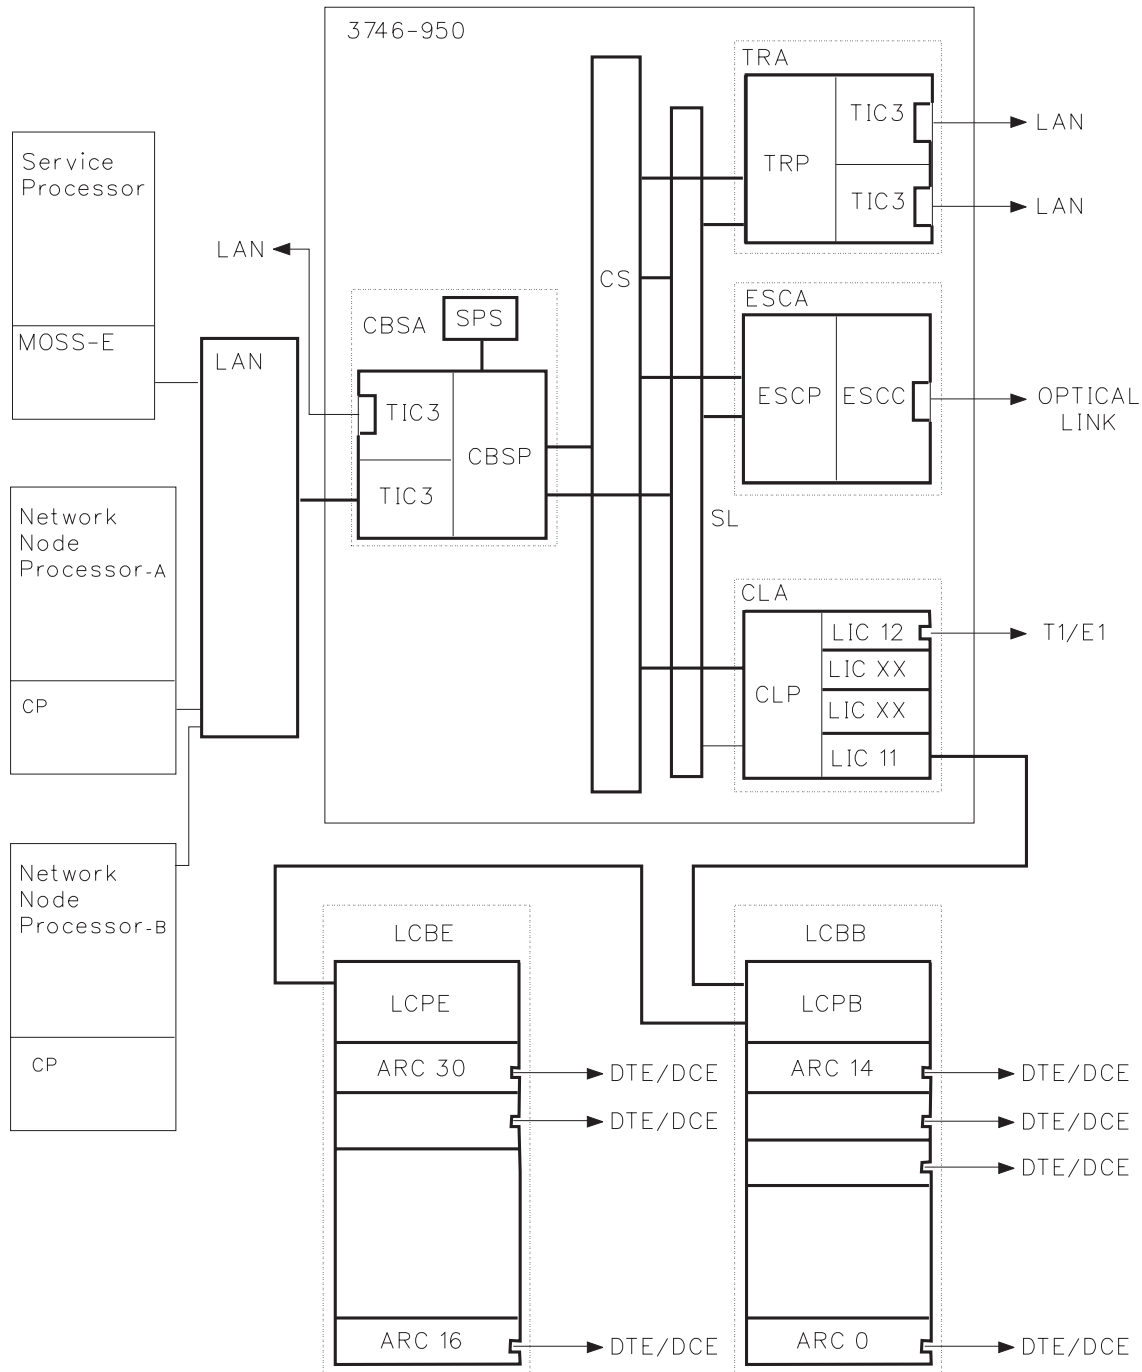


Figure 1-1. 3746-950 Data Flow

## Documentation

**Note:** The following list gives the reference to all the documents that can be used during the installation.

- 3746-950 IG: *3746-950 Installation Guide*, SY33-2107
- SPIM:
  - *Service Processor Installation and Maintenance (Based on 6275)*, SY33-2125, or
  - *Service Processor Installation and Maintenance (Based on 7585, 3172, and 9585)*, SY33-2120, or
  - *Service Processor Installation and Maintenance (Based on 7585, 3172, 9585, and 9577)*, SY33-2115
- NNPIM:
  - *Network Node Processor Installation and Maintenance (Based on 6275)*, SY33-2126 or
  - *Network Node Processor Installation and Maintenance (Based on 7585 or 3172)*, SY33-2112
- MES: 3746-900 MES and Field BMs for model conversion to 3746-950
- *IBM 7858 Professional Modem Guide to Operation*, GA13-1981
- *IBM 7857 Guide to Operation*, GA13-1839
- Parameter worksheets from the *3745 Communication Controller Models A and 3746 Models 900 and 950: Physical Planning*, GA27-4238
- *3746-950 Service Guide*, SY33-2108

## 3746-950

Doors on the front and rear of a 3746-950 give access to the inside of the unit. A clear path must be provided around the configuration to access covers. Never install the machine with its right or left side against a wall or fixed material. Keep a servicing area 0,75 m (2.5 ft) wide at front and back, and at least 0.85 m (2.80 ft) at the right and left sides to install/remove the end covers.

**Note:** The controller expansion can be attached to the 3746-950 (see Figure 1-2 on page 1-4) or detached but no more than 6 meters (with the standard token ring cable shipped with the machine) from the 3746-950 (see Figure 1-4 on page 1-5 and Figure 1-5 on page 1-5). If two controller expansion are installed refer to Figure 1-8 on page 1-6 and Figure 1-9 on page 1-6.

## 3746-950 preparing for installation

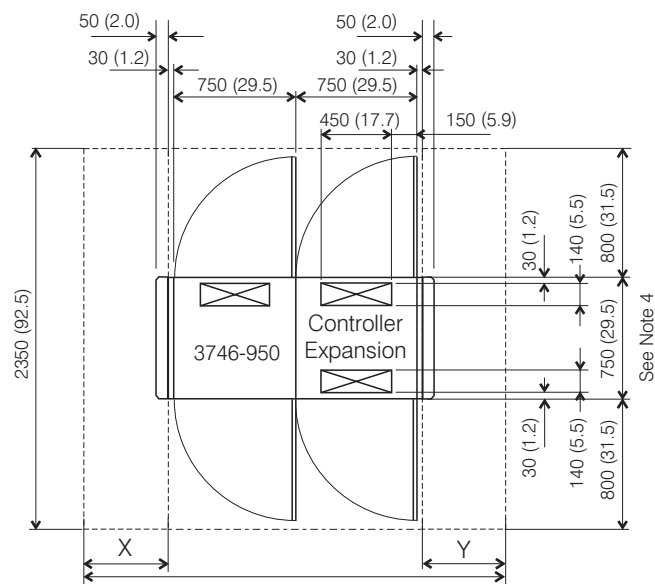


Figure 1-2. Plan View of a 3746-950 Configuration



Figure 1-3. Plan View of a 3746-950 Configuration

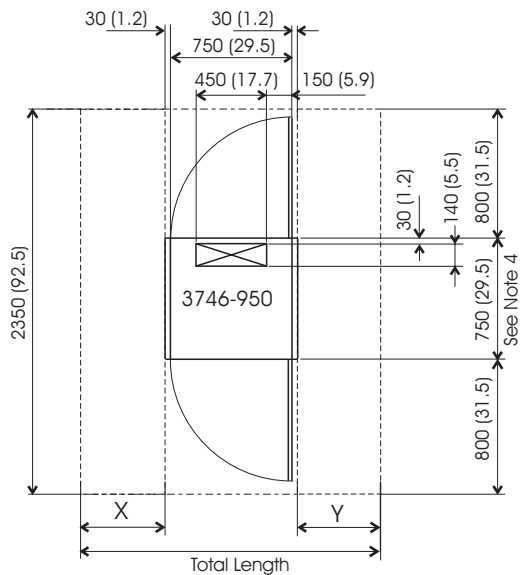


Figure 1-4. Plan View of a 3746-950 Alone

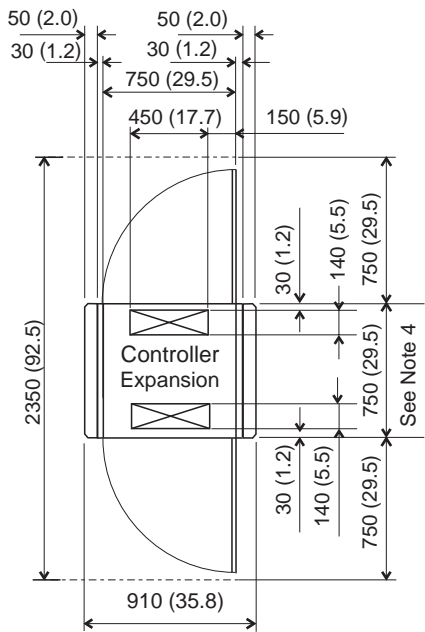


Figure 1-6. Plan View of a Controller Expansion

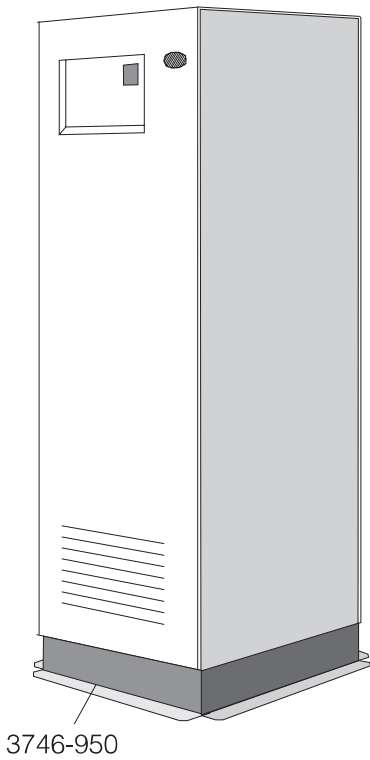


Figure 1-5. The 3746-950

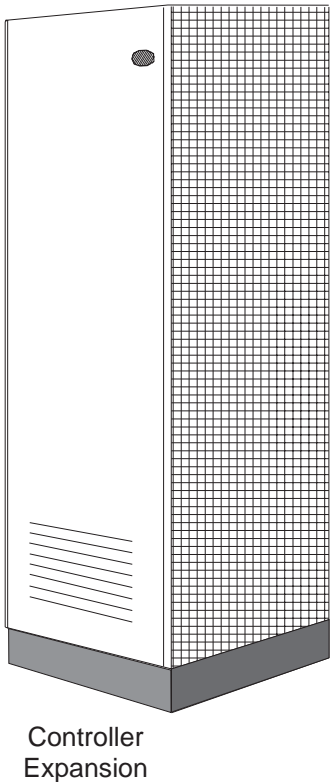


Figure 1-7. The Controller Expansion

## 3746-950 preparing for installation

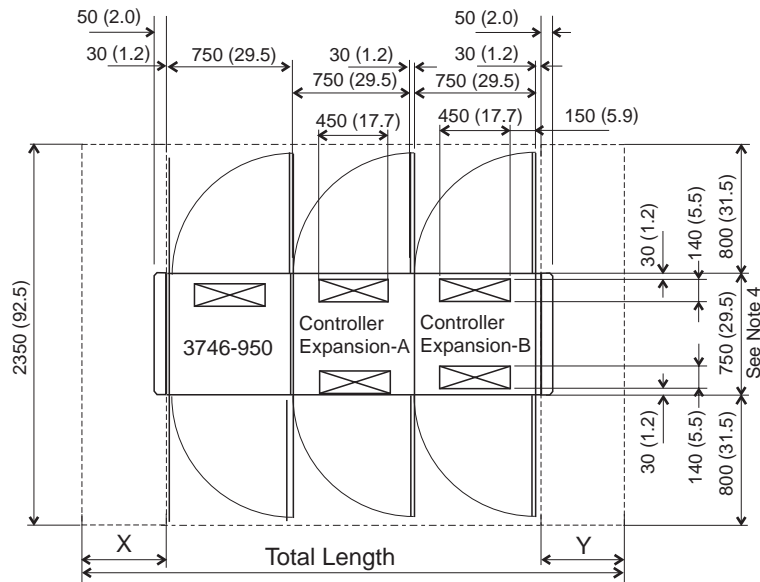


Figure 1-8. Plan View of a 3746-950 and two Controller Expansion Installed

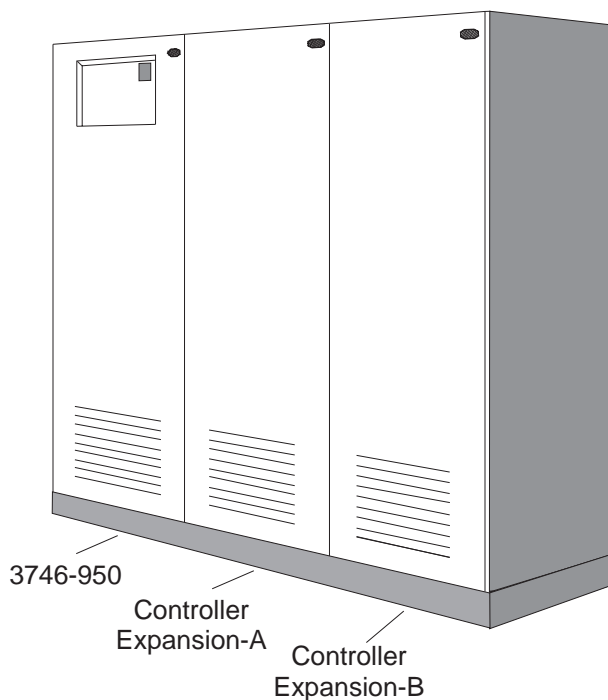


Figure 1-9. The 3746-950 and two Controller Expansion Installed

## Special Tools/Test Equipment

- A cover lock key P/N 1643894 shipped with the 3746-950.

**Note:** Not required but preferred for unpacking if available from branch office:

- A power screwdriver
- A 3/8" socket set

## Installation Time

- The estimated installation time for the service processor is 2.45 hours.
- The estimated hardware installation time for the 3746-950 is 4.0 hours.
- The average time for installing the external cables is 1.0 hour.
- The average time for installing the network node processor is 2.0 hours.
- The average time for installing the controller expansion is 1.0 hour.
- The estimated installation time for the ethernet bridge is 1.0 hour.
- The estimated installation time for the multiaccess enclosure is 2.45 hours.

### Note

Under the installation service code, only report the time spent on the procedures described in this manual. Other activities must be reported on another service code according to your general reporting instruction guide.

## Making Ready to Install

*(Place a check mark next to each completed step.)*

- Step 1. \_\_\_\_ Connect to the following web site:  
<http://www.lagaude.ibm.com/3746pe>, and download all mandatory fixes according to the level of the code that you are going to install.
- Step 2. \_\_\_\_ Ensure that the RSF link is installed and working.
- Note:** If the customer has not provided an RSF link, review or have marketing review the maintenance exposure with the customer.
- Step 3. \_\_\_\_ Ensure that the machine type and model are registered in RETAIN (CCPF).  
 For **U.S.A.** machines, please call the Raleigh Multiplexor Support Center and verify your machine's registration in CCPF for:
- a. The seven digit **serial number** of the 3746-950 is **correct**.
  - b. The three digit **model** designation for the 3746-950 is **correct**.
- Step 4. \_\_\_\_ Check all items listed on the shipping group bill of material (B/M). Verify that all parts have been received.
- Step 5. \_\_\_\_ Make sure that all the cables specified on the cable order form have been received. Report any difference to the IBM sales representative and to the CE branch office.
- Step 6. \_\_\_\_ Verify that the service processor access unit (8228) is available to connect the 3746-950.
- Step 7. \_\_\_\_ Refer to the 3746-950 bibliography at the end of this manual. Ensure that all the customer and service manuals supplied with the 3746-950 have been received and updated with TNLs (if any) before beginning installation.
- Step 8. \_\_\_\_ Familiarize yourself with the installation procedures in this manual. You must also be familiar with the *3746-950 Service Guide*, SY33-2108 used for troubleshooting.
- Step 9. \_\_\_\_ Make sure that the installation area is in accordance with Figure 1-2 on page 1-4. If not, inform the customer.

**Note:** Verify that the floor cutout size and location correspond to the plan otherwise the ESCA cable guide can't be installed.

Step 10. \_\_\_\_ From the IBM system engineer or from the customer, obtain :

- a. The **HONE configuration sheet**.
- b. The **Parameter worksheet "Service Processor Integration"** (This worksheet is in the Appendix of the *3745 Communication Controller Models A and 3746 Models 900 and 950: Overview, Installation, and Integration*, GA27-4234).
- c. The **configuration file** if this file has been produced using a stand-alone Controller Configuration and Management



## Chapter 2. Connecting the 3746-950 to the Power and Devices

Checking the 3746-950 Frame . . . . .	2-2
Removing the Shipping Bars . . . . .	2-3
Installing the Controller Expansion . . . . .	2-3
Installing the Controller Expansion Attached to the 3746-950 . . . . .	2-4
Installing the Controller Expansion Detached from the 3746-950 . . . . .	2-5
Installing the Controller Expansion Detached from the 3746-950 . . . . .	2-6
Locking the frames . . . . .	2-7
Installing an Ethernet Bridge . . . . .	2-8
Connection to Main Power . . . . .	2-24
Power Description and Load Requirements . . . . .	2-24
Measuring and Adjusting the 3746-950 Power to the Customer Supply . . . . .	2-25
Connecting the 3746-950 to the Customer's ac Power . . . . .	2-27
Connecting the ac Outlet Distribution Box . . . . .	2-27
Connecting the 3746-950 to the LAN. . . . .	2-28
Installing the Service Processor . . . . .	2-30
Installing a 6275 in the Controller Expansion . . . . .	2-31
Installing a 7585 in the Controller Expansion . . . . .	2-32
Installing a 3172 in the Controller Expansion . . . . .	2-33
Installing a 9585 in the Controller Expansion . . . . .	2-34
Installing a 9577 in the Controller Expansion . . . . .	2-35
Installing the 3746-950 Code Level . . . . .	2-36
Installing the 3746-950 Code Level from a CD-ROM . . . . .	2-36
Installing the 3746-950 Code Level from an Optical Disk . . . . .	2-37
Configuring the Service Processor . . . . .	2-38
Installing the Network Node Processor (A or B) . . . . .	2-39
Configuring NetView Performance Monitor (NPM) . . . . .	2-40
Installing the Multiaccess Enclosure . . . . .	2-42
Installing Software Feature on the 3746-950 . . . . .	2-43
Calling RETAIN . . . . .	2-45

## Checking the 3746-950 Frame

- Step 1. \_\_\_\_ Compare the machine serial number on the packing material with that listed on the shipping documents. Report any difference to the IBM branch office, and confirm whether the installation can continue.
- Step 2. \_\_\_\_ Unpack the 3746-950 and ensure that all shipping material is removed. Refer to the unpacking instructions attached to the external packing.
- Step 3. \_\_\_\_ Open the rear door. Locate the power rating plate (see Figure 2-1). **Check that the 3746-950 Basic ac power and the Optional ac power rating plate data are consistent with the customer's available voltage ac and the frequency.**  
Record the power information. It will be used later in chapter "Connection to Main Power" on page 2-24

Basic Power: \_\_\_\_\_ Optional Power: \_\_\_\_\_

- Step 4. \_\_\_\_ Inspect the 3746-950 carefully for shipping damage. Report any damage in accordance with local procedures.
- Step 5. \_\_\_\_ Check that the serial number stamped on the frame is the same as on the serial number plate (see Figure 2-1 for location).

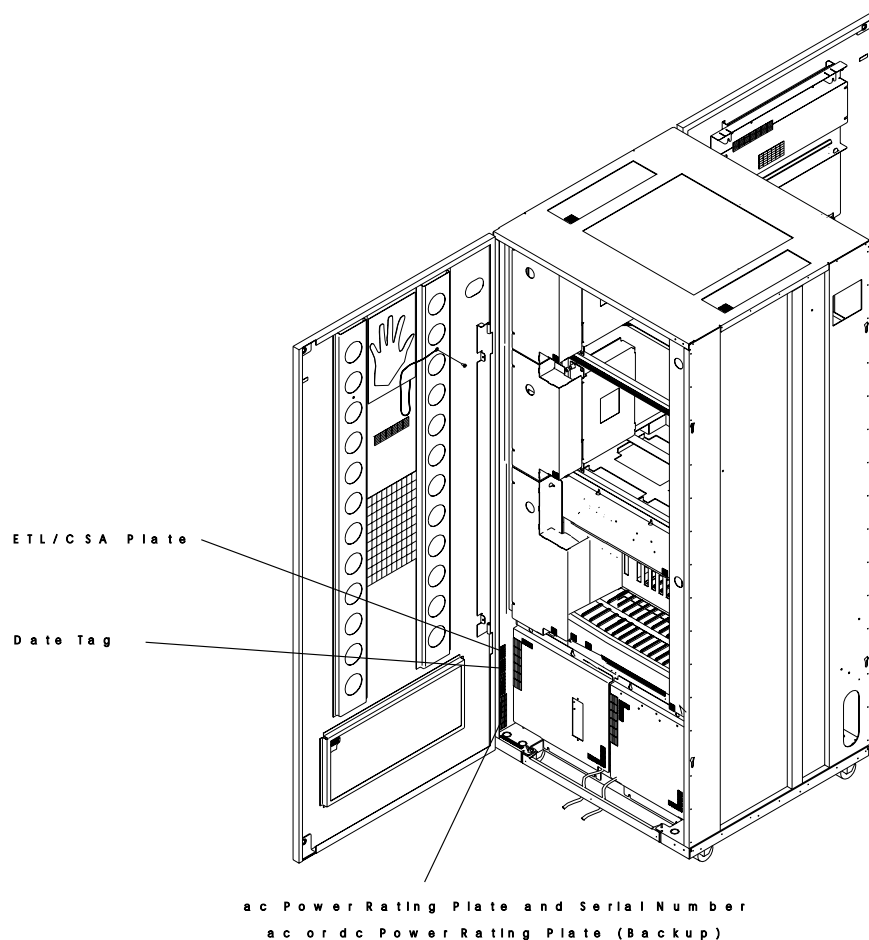


Figure 2-1. 3746-950 Power Rating Plate (Rear View)

---

## Removing the Shipping Bars

1. \_\_\_\_ Open the front and rear covers.
2. \_\_\_\_ Remove the CBC covers (see Figure 2-1 on page 2-2).
3. \_\_\_\_ Remove the screws maintaining the red shipping bars **1**
4. \_\_\_\_ Store these bars in a safe place for further use.

**Note:** These red shipping bars keep the cards in the boards during the transportation and are located on the upper and lower sides of the board (front and rear sides of the 3746-950) see Figure 2-2.

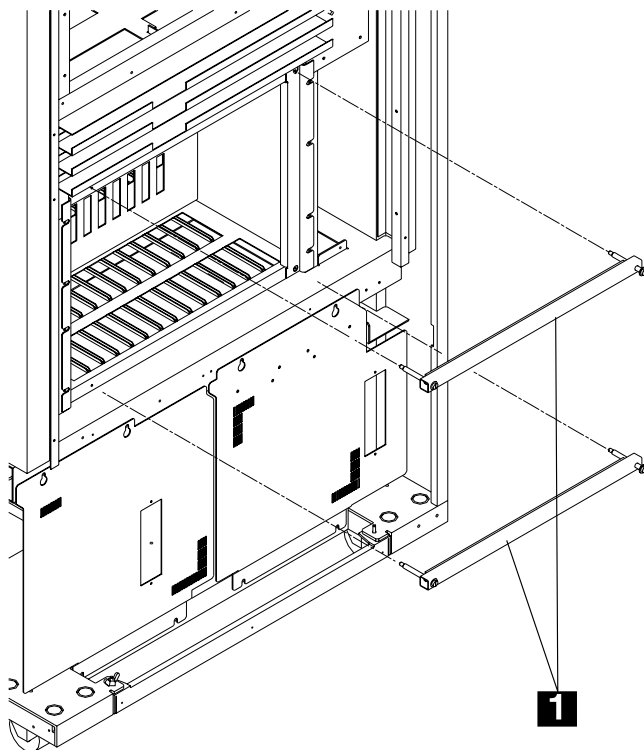


Figure 2-2. Shipping Bars

---

## Installing the Controller Expansion

The controller expansion can be installed:

- **Attached** to the 3746-950, go to “Installing the Controller Expansion Attached to the 3746-950” on page 2-4
- **Detached** from the 3746-950 frame and installed:
  - **Less than 6 meters (19.7 ft)** from the 3746-950, go to “Installing the Controller Expansion Detached from the 3746-950” on page 2-5
  - **More than 6 meters (19.7 ft)** from the 3746-950, go to “Installing the Controller Expansion Detached from the 3746-950” on page 2-6

## Installing the Controller Expansion Attached to the 3746-950

1. \_\_\_\_ Remove the right and left covers from the 3746-950 frame. The right cover will be reinstalled on the right side of the controller expansion when the ground brackets will be installed (refer to “Installing the 3746-950 and Controller Expansion Ground Brackets” on page 5-2).
2. \_\_\_\_ Using four screws (PN 1621534) and four spacers (PN 72F0659) attach the controller expansion to the 3746-950.
3. \_\_\_\_ Route and connect one ground wire (PN 58G5691) **A** between the two frames using:
  - a. One screw (PN 61F4511) **B** and one washer (PN 1622347) on the 3746-950 frame.
  - b. One screw (PN 61F4513) **C** and one washer (PN 1622347) on the controller expansion frame.
4. \_\_\_\_ Connect the other ground wire (PN 58G5691) **A** between the controller expansion frame and the building ground, then go to “Locking the frames” on page 2-7.

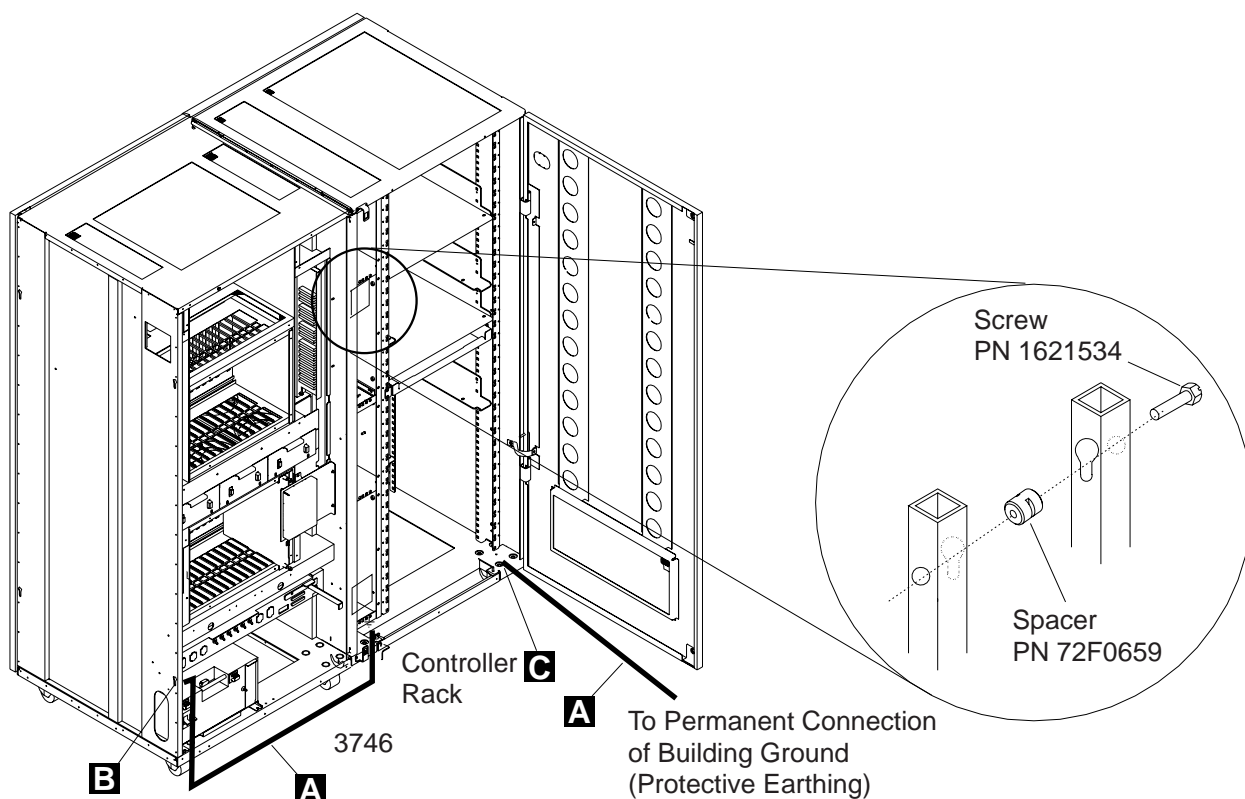


Figure 2-3. Installing the Controller Expansion Attached to the 3746-950

## Installing the Controller Expansion Detached from the 3746-950

**Note:** In this installation the controller expansion is less than 6 meters (19.7 ft) from the 3746-950 frame.

1. \_\_\_\_ Install the controller expansion to a maximum of 6 meters from the 3746-950 (with the standard cable shipped with the machine).
2. \_\_\_\_ Route and connect one ground wire (PN 58G5691) **A** between the two frames using:
  - a. One screw (PN 61F4511) **B** and one washer (PN 1622347) on the 3746-950 frame
  - b. One screw (PN 61F4513) **C** and one washer (PN 1622347) on the controller expansion frame.
3. \_\_\_\_ Connect the other ground wire (PN 58G5691) **A** between the controller expansion frame and the building ground, then go to "Locking the frames" on page 2-7.

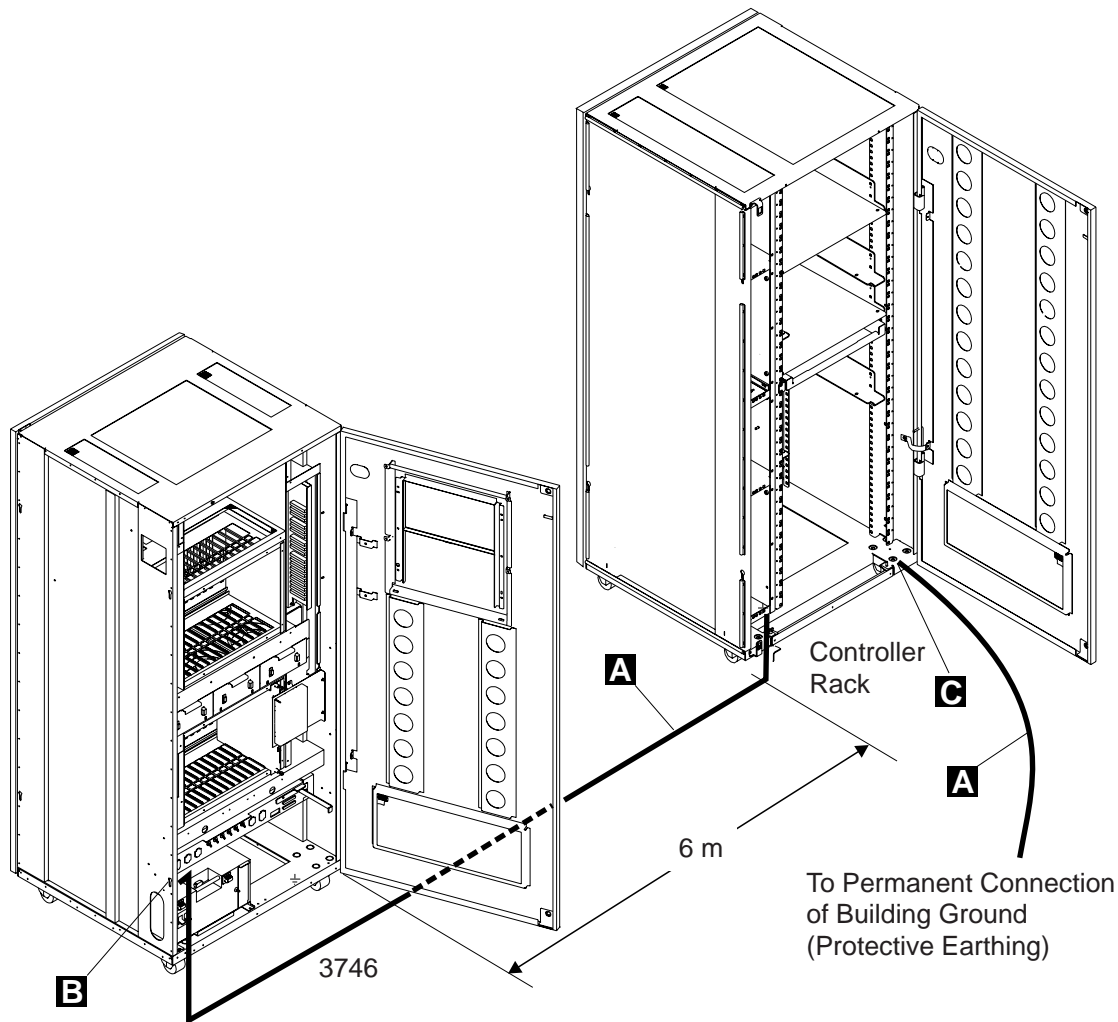


Figure 2-4. Installing the Controller Expansion Alone

## Installing the Controller Expansion Detached from the 3746-950

**Note:** In this installation the controller expansion is more than 6 meters (19.7 ft) from the 3746-950 frame.

1. \_\_\_\_ Install the controller expansion in its final position
2. \_\_\_\_ Connect one ground wire (PN 58G5691) **A** between the 3746-950 frame and the building ground using one screw (PN 61F4511) **B** and one washer (PN 1622347) on the 3746-950 frame.
3. \_\_\_\_ Connect the other ground wire (PN 58G5691) **A** between the controller expansion frame and the building ground using one screw (PN 61F4513) **C** and one washer (PN 1622347) on the controller expansion frame, then go to "Locking the frames" on page 2-7.

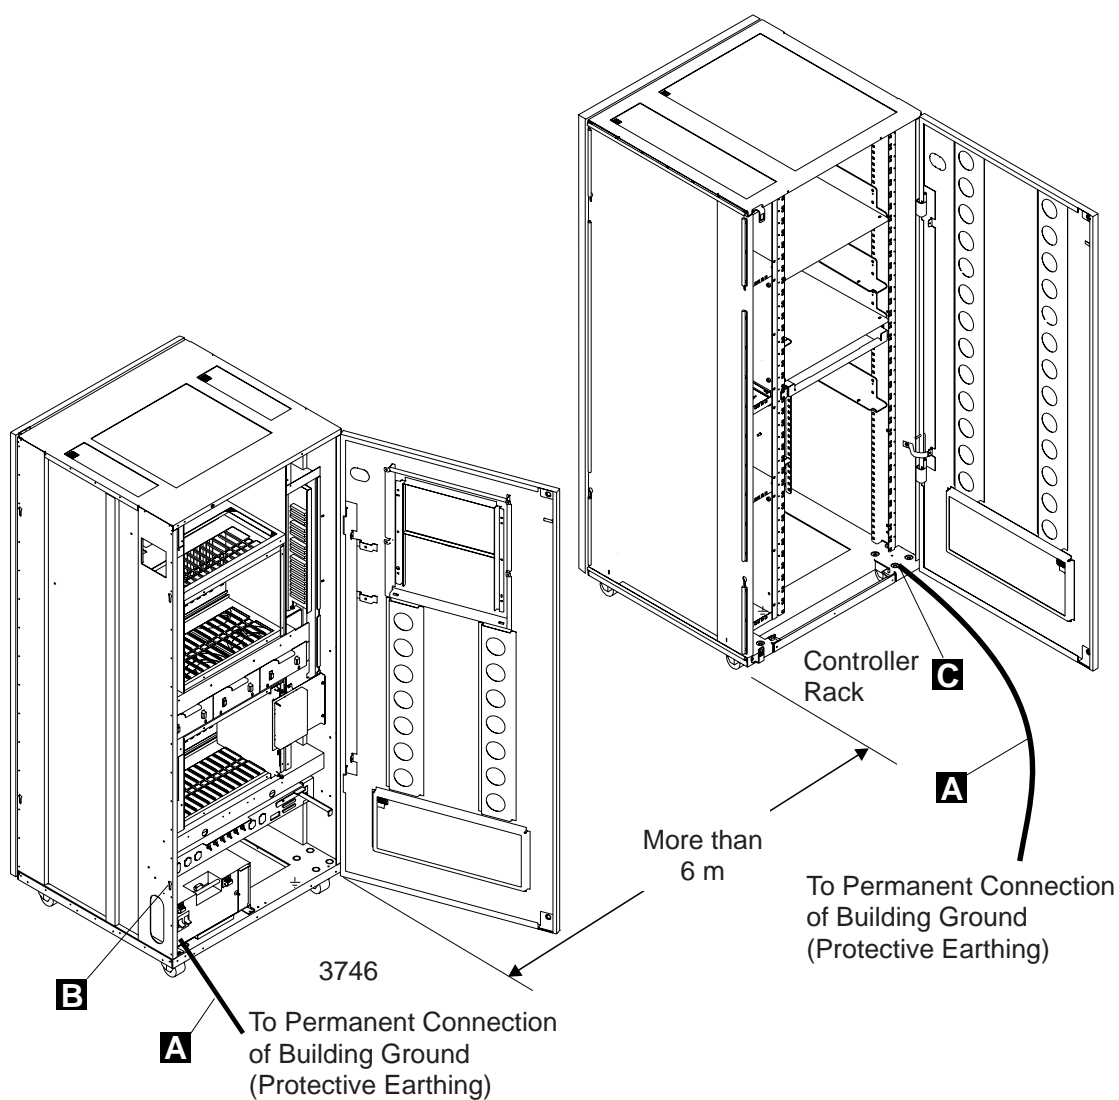
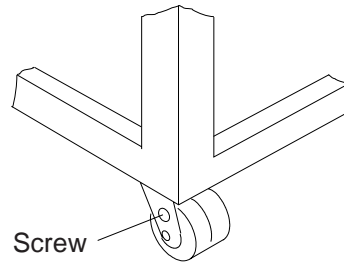


Figure 2-5. Installing the Controller Expansion Alone (more than 6 m)

## Locking the frames

When the 3746-950 and controller expansion frames are on their final positions, tighten the caster lock screws (see Figure 2-6).



*Figure 2-6. Caster lock Screw*

Do you have to install Ethernet Bridge?

- **Yes**, go to “Installing an Ethernet Bridge” on page 2-8
- **No**, go to “Connection to Main Power” on page 2-24.

## Installing an Ethernet Bridge

For any error or unexpected message, go to the START page of the *3746-950 Service Guide*, SY33-2108.

### Notes:

1. For details refer to *8229 Bridge Manual*, GA27-4025.
2. **Two ethernet bridges** can be connected to the **same 8228** and the maximum of ethernet bridge connected to a 3746-9x0 is **four**.
3. The ethernet bridge is based on the 8229

### Step 1. Unpacking the Ethernet Bridge

- a. \_\_\_\_ Remove the power cord, diskette, and mounting accessories. (The mounting brackets, small package of screws, cable mounting handle, cable management bracket, and rubber feet are in the plastic bag.)
- b. \_\_\_\_ Remove the ethernet bridge from its packaging.
- c. \_\_\_\_ Make sure that you have everything (see Figure 2-7), then go to step 2 on page 2-9.

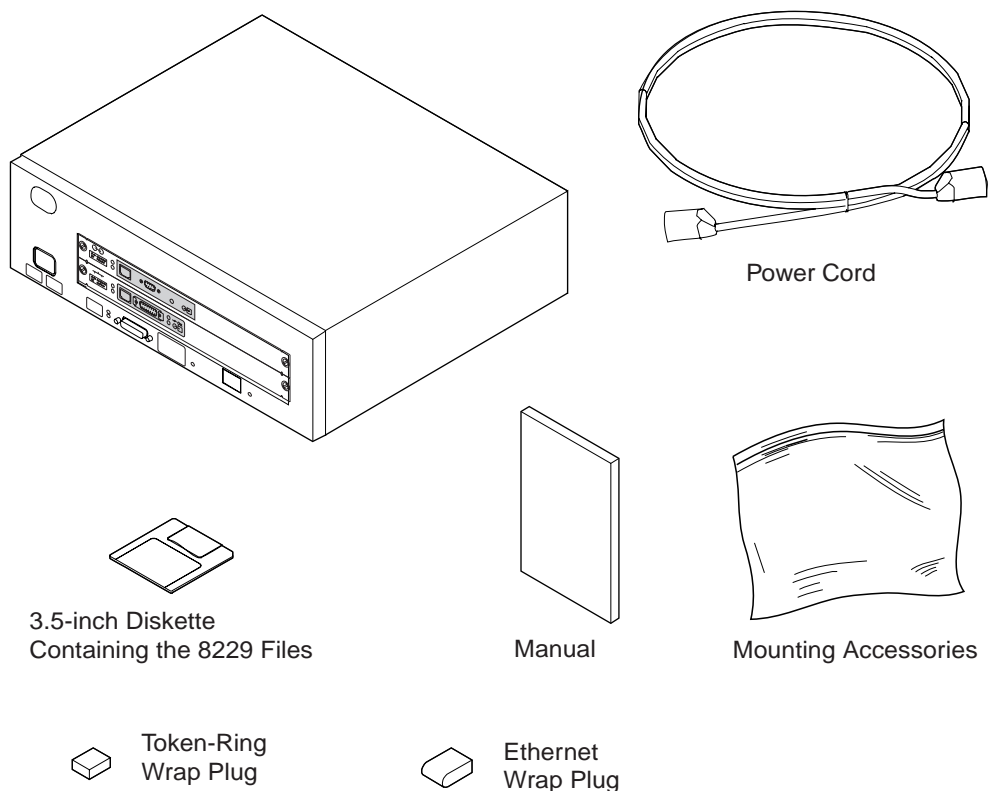


Figure 2-7. Contents of the Shipping Carton for the Ethernet Bridge.

Go to step 2 on page 2-9 .



## Step 2. Verifying the Ethernet Bridge and the Attachment Modules

Notice the icon in the upper left-hand corner on the front. (See the matching symbol in the figures below.) Verify that the **token-ring module** is installed in the **upper slot** and the **Ethernet** in the **lower slot** of the ethernet bridge, refer to Figure 2-10 on page 2-10.

**Verify** the switch setting of the modules:

- For the **token-ring module**, switches **1** and **2** must be **ON** and **3** to **8** **OFF**.
- For the **Ethernet module**, switch **1** must be **ON** and **2** to **8** **OFF**.

**Note:** Switch **7** can be set to **ON** if the customer will use a 10 Base T Ethernet cable (refer to the worksheet “Parameter worksheet for Ethernet Bridge” on page A-1).

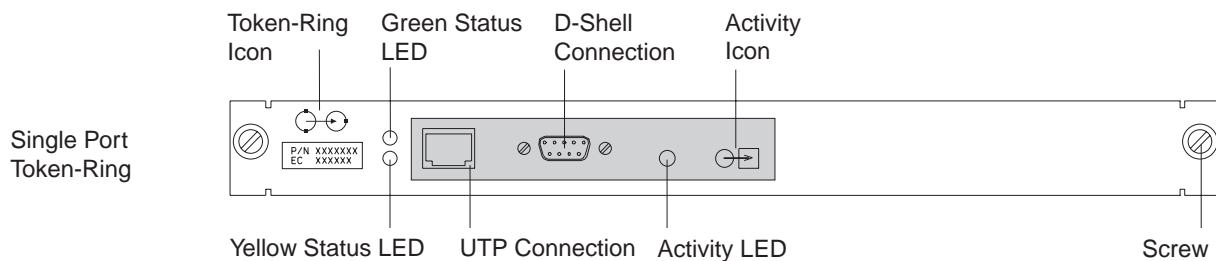


Figure 2-8. Single-Port Token-Ring Attachment Module

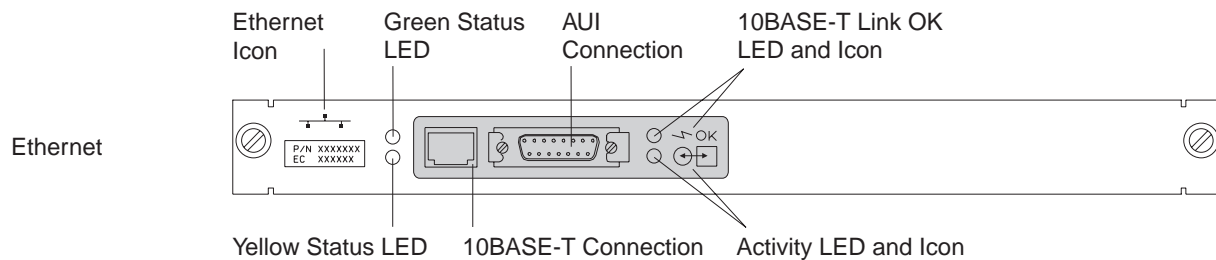


Figure 2-9. Ethernet Attachment Module

Meaning of the attachment module indicators.

**Port Status Indicators** Each attachment module has a pair of status LEDs for each port. The green status LED, when lit, indicates that the internal tests for the port have been successfully completed; the yellow status LED, when lit, indicates a detected internal fault.

**LAN Activity Indicators** Each attachment module indicates outbound activity for each port. The green activity LED indicates that the ethernet bridge is successfully connected to the respective LAN and that traffic is being forwarded by the ethernet bridge from that network.

**Go to step 3 on page 2-10**

### Step 3. Identifying the Ethernet Bridge front panel

The **EIA 232** data terminal element (DTE) port is for loading operating software to the FLASH memory contained on the main logic board.

**Power Light-Emitting Diode (LED)** When green, indicates that power is available to the ethernet bridge.

**Green Status LED** Indicates that the ethernet bridge has successfully completed its basic tests and is ready for operation.

**Yellow Status LED** Indicates that the ethernet bridge has detected an internal fault as part of the basic tests and is inoperative. The fault code appears as a numeric display.

**Numeric Display** A 2-digit numeric display indicates the current status of the diagnostics in progress, or the fault code in the case of a detected fault.

**Hardware Reset** A recessed reset button is accessible on the front panel of the ethernet bridge. To have details about this reset button, refer to *8229 Bridge Manual*, GA27-4025, chapter 'Restarting and Resetting the 8229'.

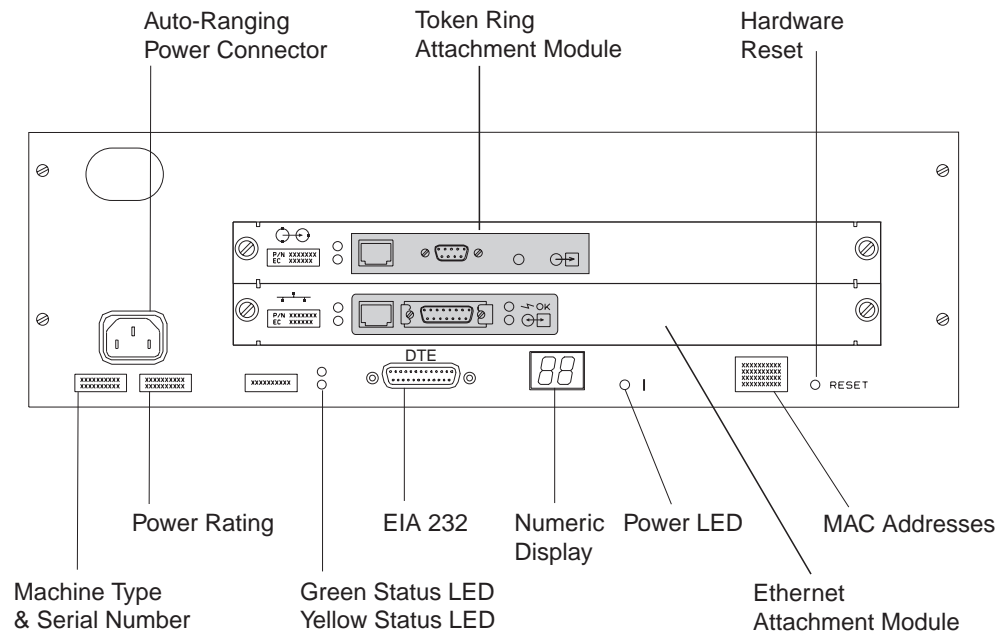


Figure 2-10. The Ethernet Bridge Front Panel

Go to step 4 on page 2-11.

#### Step 4. Connecting the Ethernet Bridge to the Service Processor

**Note:** The purpose of these procedures is to connect temporarily the Ethernet Bridge to the service processor in order to configure the Ethernet Bridge using the MOSS-E functions.

- a. \_\_\_\_ Refer to Figure 2-11 and install the Ethernet Bridge on a table close to the controller expansion

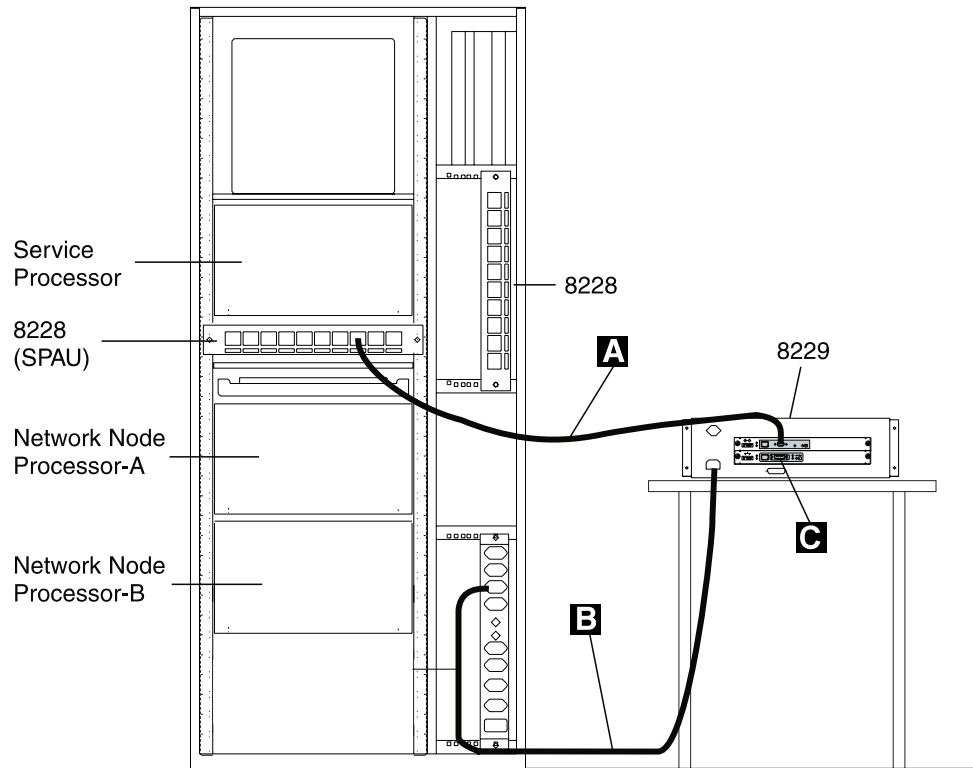


Figure 2-11. Connecting the Ethernet Bridge to the Service Processor

- b. \_\_\_\_ Connect cable **A** (PN 6339098) from the D-Shell connector of the token ring module (refer to Figure 2-8 on page 2-9) to the SPAU (8228).
- c. \_\_\_\_ Plug wrap plug **C** (PN 70X8670) in the AUI connector of the Ethernet module (refer to Figure 2-9 on page 2-9).
- d. \_\_\_\_ Connect power cord **B** (PN 58G5783) first to the ac outlet distribution box and then to the Ethernet Bridge.

**Note:** There is no power switch. The power supply is auto-ranging (100/240 V ac 50/60 Hz). Connection of the power cord from a primary power source supplies power to the ethernet bridge.

- e. \_\_\_\_ Observe the following bring-up sequence:

When you connect power to the ethernet bridge, it will go through a basic assurance test (BAT) that lasts about 90 seconds. All of the LEDs should light momentarily and the numeric display should show ascending values. At the conclusion of the test, the numeric display should go blank, the power and green status LEDs on the ethernet

bridge should be lit, the green status on each attachment module. should be lit, and the green status LED should be lit.

- f. \_\_\_\_ If any number is still displayed, or if any yellow LED is lit, refer to *8229 Bridge Manual*, GA27-4025, chapter 'Problem Determination and Servicing'.

**Go to step 5.**

### Step 5. Setting up the Ethernet Bridge

- a. \_\_\_\_ On the service processor, double click on the **Service Processor** icon.
- b. \_\_\_\_ Click on **Manage Ethernet Bridge**.

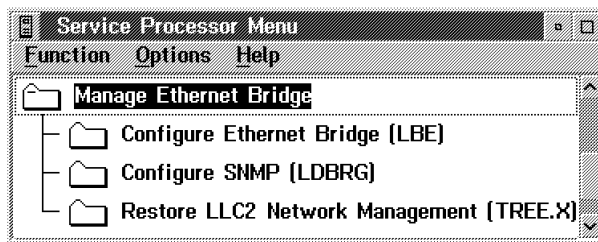


Figure 2-12. Managing the Ethernet Bridge

**Note:** If the Ethernet Bridge has been already configured, go to **step 5c** , otherwise go to **step 5d on page 2-13** .

- c. \_\_\_\_ Double click on **Restore LLC2 Network Management (TREE.X)**

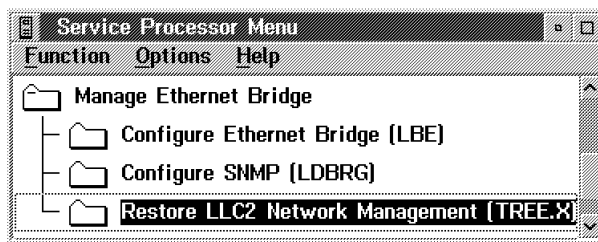


Figure 2-13. Restoring LLC2 Code

- 1) \_\_\_\_ Locate the first MAC address on top of the label on the front of the ethernet bridge (to the left of the reset button). See Figure 2-10 on page 2-10 for a view of the ethernet bridge front panel.

- 2) \_\_\_\_ Enter the MAC address recorded in step 5c1 on page 2-12, then click on **OK**. The Ethernet Bridge is reinitialized twice and it last about 3 minutes to complete.

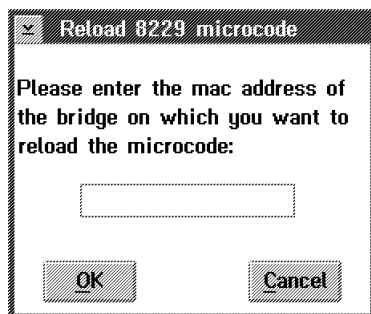


Figure 2-14. Reload 8229 microcode

- d. \_\_\_\_ Double click on **Configure Ethernet Bridge**

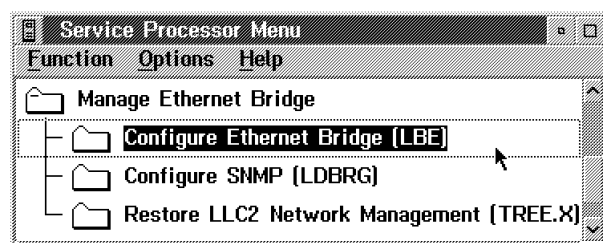


Figure 2-15. Configure Ethernet Bridge

- 1) \_\_\_\_ Refer to Figure 2-16, select option **5. Bridge definition**, then press **enter**.

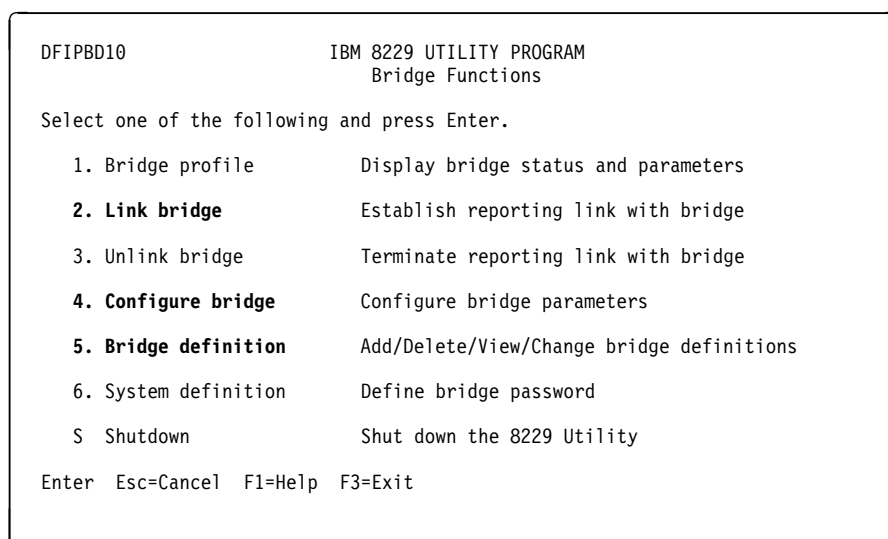


Figure 2-16. IBM 8229 Utility Program Main Menu

- 2) \_\_\_\_ Select option **1. New bridge definition**, then press **enter**.
- \_\_\_\_ Enter the **bridge name**
  - \_\_\_\_ Click on the check mark to **enable the link during bring up**

- c) \_\_\_\_ Locate the MAC addresses on the label on the front of the ethernet bridge (to the left of the reset button). See Figure 2-10 on page 2-10 for a view of the ethernet bridge front panel. **Enter the top two MAC addresses** recorded on the label. , then press **enter**.
- 3) \_\_\_\_ Press **Escape** twice.
- 4) \_\_\_\_ Press escape, select S to shutdown, enter Yes, then press enter.
- 5) \_\_\_\_ Obtain from your customer the **SNMP parameter worksheet** (refer to "Parameter worksheet for Ethernet Bridge" on page A-1).
- 6) \_\_\_\_ Double click on **Configure SNMP**, and modify the parameters according to the customer specifications.

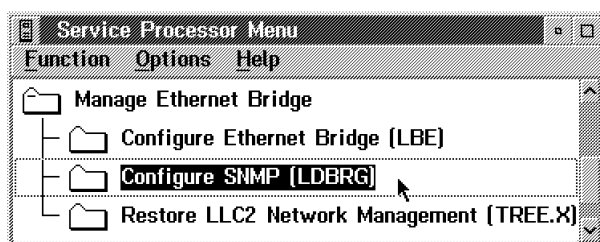


Figure 2-17. Configuring SNMP

- 7) \_\_\_\_ Select the **configuration** file from the Existing Configurations list.

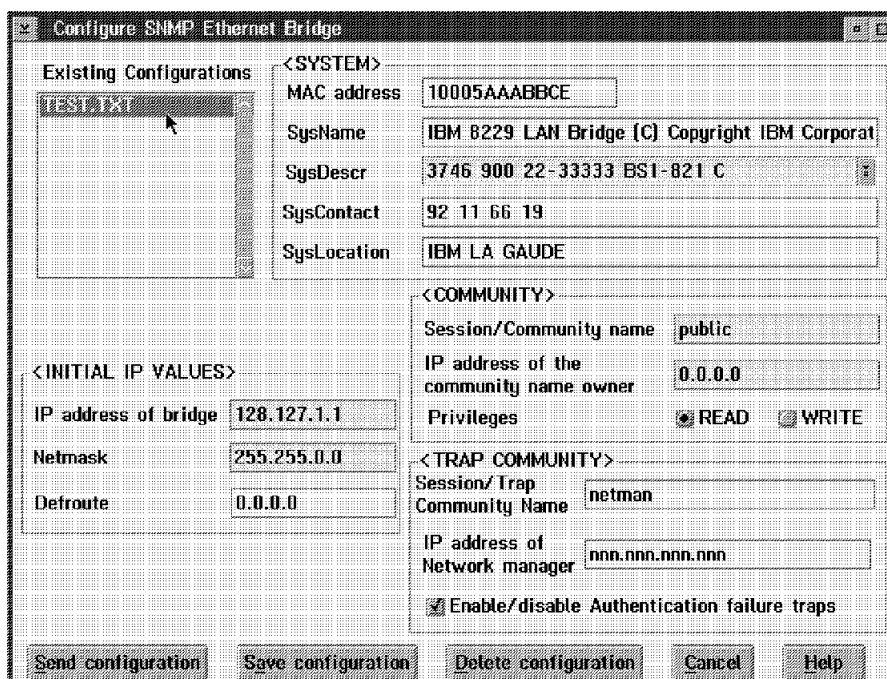


Figure 2-18. Configuring SNMP Ethernet Bridge

- 8) \_\_\_\_ In <**SYSTEM**> square box enter:
  - a) \_\_\_\_ Click on the **SysDescr** right button
  - b) \_\_\_\_ Select the 3746-9x0.
- 9) \_\_\_\_ In <**Community**> square box enter:
  - a) Session/Community name
  - b) IP address of community name owner
  - c) Select privileges (read or write)
- 10) \_\_\_\_ In <**Trap Community**> square box enter:
  - a) Session/Trap Community name
  - b) IP address of network manager
- 11) \_\_\_\_ Click on **Save configuration** then click on **Send configuration**
- 12) \_\_\_\_ Click on OK
- 13) \_\_\_\_ Click on Cancel

**Go to step 6**

**Step 6. Disconnect the Ethernet Bridge**

- a. \_\_\_\_ Refer to Figure 2-11 on page 2-11, and disconnect the power cord **B** first from the Ethernet Bridge and then from the ac outlet distribution box.
- b. \_\_\_\_ Remove cable **A** from the SPAU (8228) plug.

Do you have to install a 8228 ?

- **Yes**, go to **step 7 on page 2-16**.
- **No**, go to **step 8 on page 2-19**.

### Step 7. Installing the 8228

- a. \_\_\_\_ Unpack the 8228, and then reset the 8228 ports as explained in the following steps:

**Note:** Use the IBM 8228 Setup Aid after you have installed the 8228 and before you connect any cables to it. Save one Setup Aid to be used later if you relocate an 8228.

- b. \_\_\_\_ Before you begin, make sure no cables are connected to the 8228. If a cable bracket has been installed on the 8228, remove it.
- c. \_\_\_\_ Insert the aid into receptacle 1 of the 8228. The yellow stripe should be aligned with the edge of the receptacle to ensure that the aid is firmly seated.

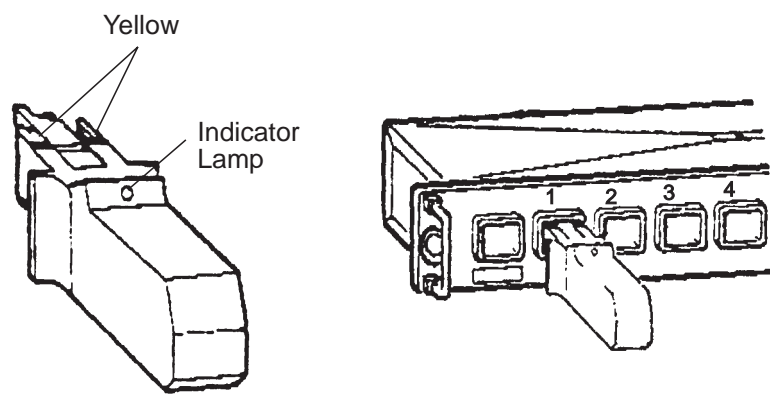


Figure 2-19. Use of the 8228 Setup Aid

The light will glow brightly when the aid is initially inserted and will gradually dim when the aid is firmly seated in the receptacle.

If the light does not glow brightly when you insert the Setup Aid, remove the screw from the aid and replace the battery. If the light still does not glow brightly after you have replaced the battery, try another Setup Aid.

- d. \_\_\_\_ Leave the aid in the receptacle for four seconds after the light has gone out. Remove the aid from the receptacle and insert it into the next receptacle. The yellow stripe should be aligned with the edge of the receptacle to ensure that the aid is firmly seated.

Go to the next receptacle and repeat this step until you have set each receptacle, 1 through 8.

- e. \_\_\_\_ When you have set receptacle 8, insert the aid into the RI receptacle for four seconds.

The light should glow brightly while the aid is in the receptacle. If the light does not come on or goes out while the aid is connected to the receptacle, the 8228 must be replaced. Notify your network planner or supervisor.

**Note:** The 8228 Setup Aid is to be used only in setting up the 8228 either initially or after relocating the 8228. It should never be used when the network is operating.



- f. \_\_\_\_ Where are you installing the 8228?
- In the **controller expansion-A**, go to **step 7g**
  - In the **controller expansion-B**, go to **step 7h on page 2-18**
- g. \_\_\_\_ Refer to Figure 2-20, and install vertically the 8228 **A** on the rear side of the controller expansion-A using two screws (PN 1621232) and two captive nuts (PN 58G5766). Using label **B** (PN 782964), identify the 8228 as Ethernet Bridge Access Unit-A

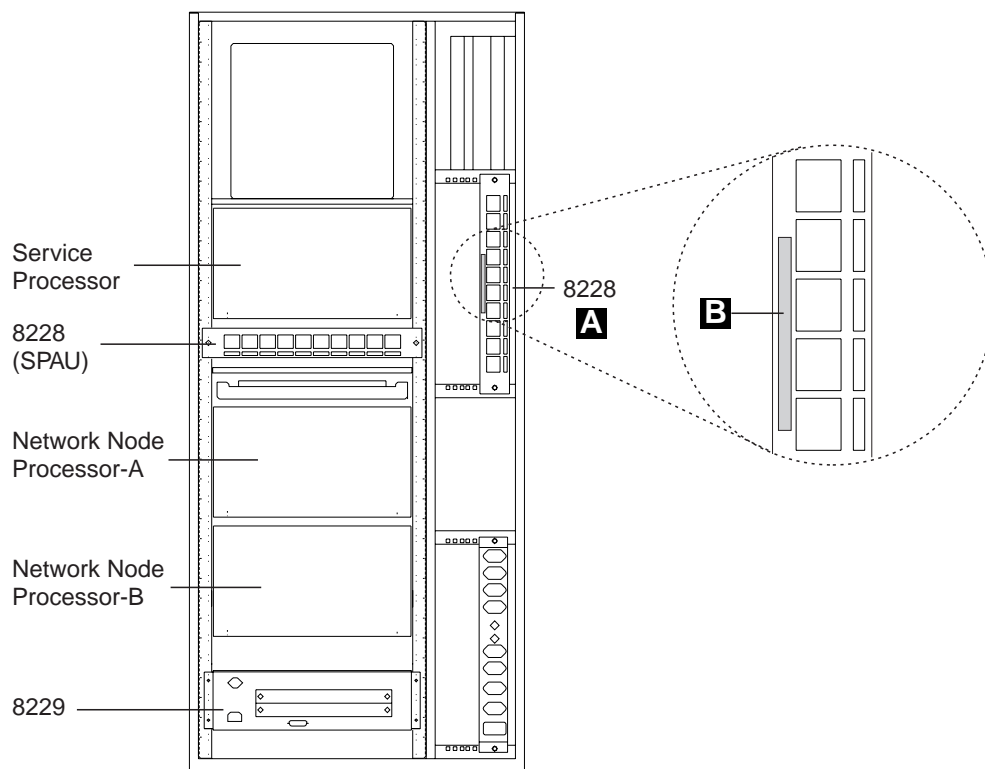


Figure 2-20. Installing One Ethernet Bridge in the Controller Expansion-A (Rear View)

**Go to step 8 on page 2-19**

- h. \_\_\_\_ Refer to Figure 2-21, in this example two 8228s and four Ethernet bridges are installed (maximum configuration). Install vertically a 8228 **A** on the rear side of the controller expansion-B using two screws (PN 1621232) and two captive nuts (PN 58G5766). Using label **B** (PN 782964), identify the 8228s as Ethernet Bridge Access Unit-A and Ethernet Bridge Access Unit-B.

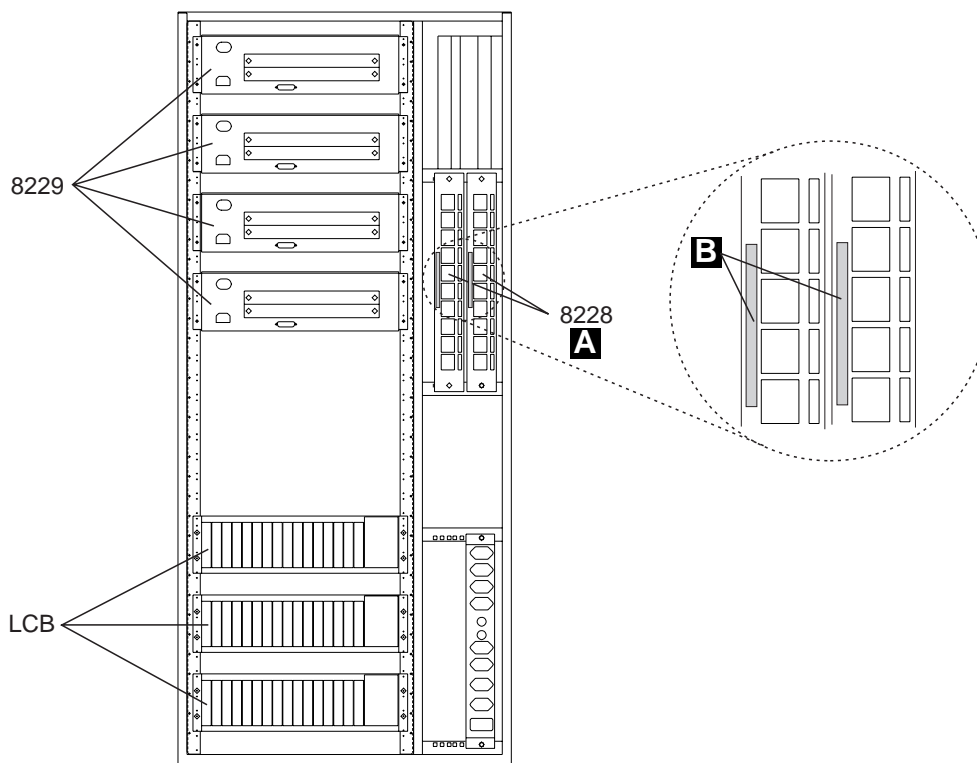


Figure 2-21. Installing Four Ethernet Bridge in the Controller Expansion-B (Rear View)

Go to step 8 on page 2-19

## Step 8. Installing the Ethernet Bridge in a Controller Expansion

- a. \_\_\_\_ Locate the mounting brackets **B** and small package of screws **C** which are shipped in the plastic bag.

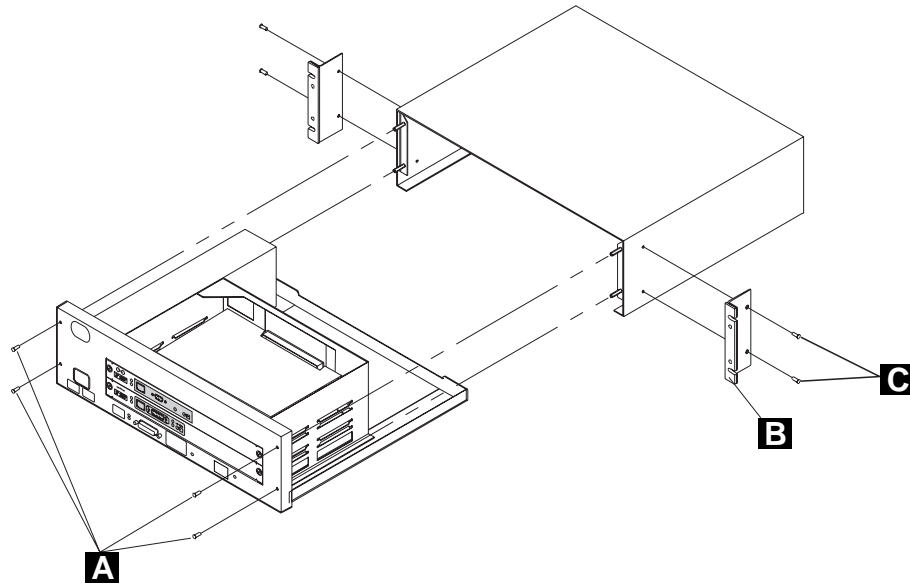


Figure 2-22. Placing the Ethernet Bridge in a Controller Expansion

- b. \_\_\_\_ Attach the rack-mounting brackets using the four short screws. See Figure 2-22.
- c. \_\_\_\_ If you prefer to reduce the weight of the box temporarily to facilitate installation, you can separate the cover from the inner power supply and planar board combination:
- 1) \_\_\_\_ Put the ethernet bridge on a flat surface.
  - 2) \_\_\_\_ Remove the four retaining screws **A** on the front of the ethernet bridge. See Figure 2-22.
  - 3) \_\_\_\_ Slide the cover off backwards.
- d. \_\_\_\_ Examine the controller expansion inventory chart provided by the network administrator to determine where in the controller expansion the ethernet bridge should be mounted.
- e. \_\_\_\_ Install four captive nuts **3** (PN 58G5766) in the proper locations **Z**, refer to Figure 2-23 on page 2-20.

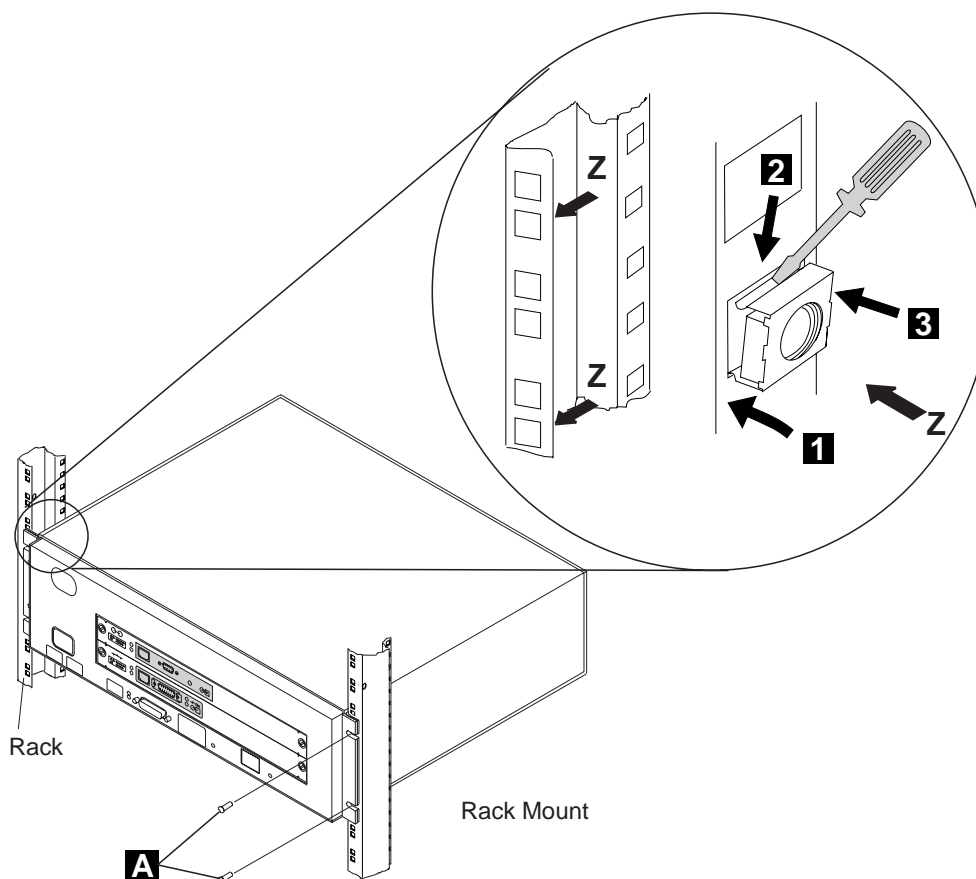


Figure 2-23. Captive Nuts and Ethernet Bridge Installation

- f. \_\_\_\_ Mount the cover (or the entire ethernet bridge) in the controller expansion, using four screws **A** (PN 1621232).
- g. \_\_\_\_ If you have removed the chassis (the inner power supply and planar board combination), slide it back into the cover and replace the four retaining screws, which you removed earlier. See Figure 2-22 on page 2-19.
- h. \_\_\_\_ Record the addresses in the spaces provided on the cabling chart.
- i. \_\_\_\_ Locate the numeric display in the center of the lower portion of the front of the ethernet bridge display.
- j. \_\_\_\_ Remove the protective film from the numeric display.

**Do not connect the power cord yet, go to step 9 on page 2-21**

## Step 9. Connecting the cables

Make certain that the ethernet bridge is powered off before you start this procedure.

- a. \_\_\_\_ Locate the TIC3 and the 8228 where you are connecting the ethernet bridge.
- b. \_\_\_\_ Route and connect the **8228** to the TIC3 using the token ring attachment cable PN 76F9441 (9 m, 27 ft). To route the cable, refer to Figure 2-25 on page 2-22 or Figure 2-26 on page 2-22.
- c. \_\_\_\_ Using a sticker, identify the cable as the "8228-XX cable".
- d. \_\_\_\_ Plug connector **1** to the TIC3
- e. \_\_\_\_ Plug connector **2** to one of the 8228 LAN adapter plugs 1 to 8 (Refer to Figure 2-24 below).

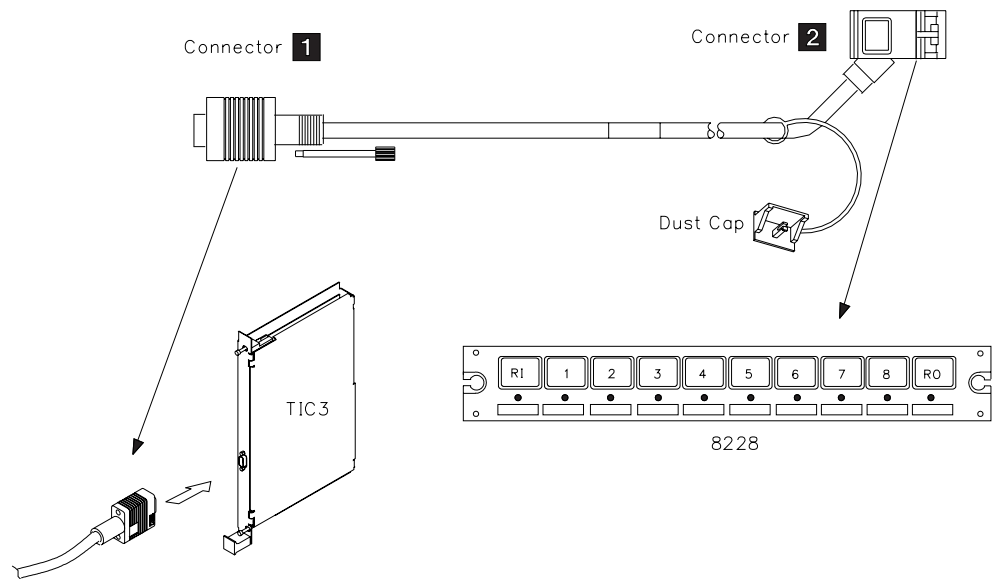


Figure 2-24. Connection of the 8228 to a TIC3

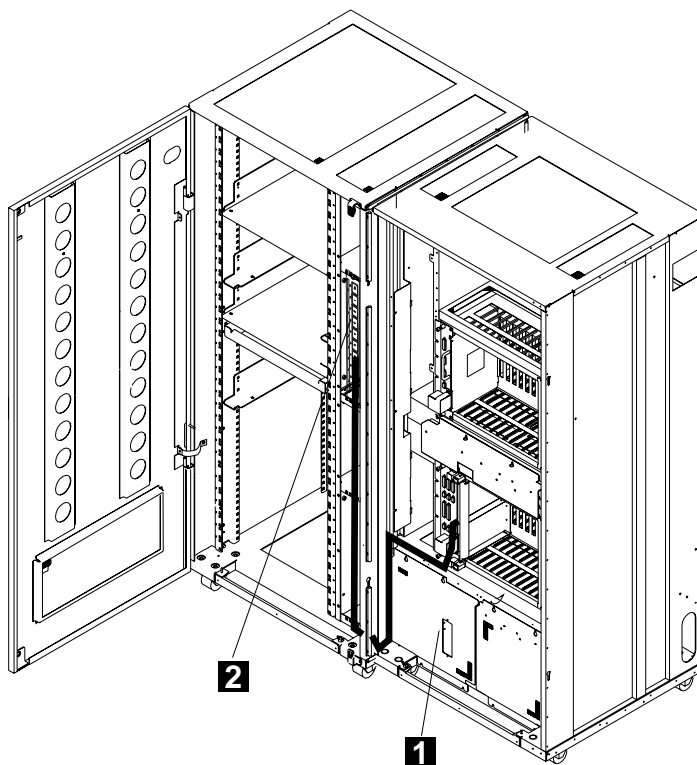


Figure 2-25. Routing the Cable from a TIC3 to a 8228 (Controller Expansion Attached)

**Note:** The controller expansion can be detached from the 3746-9x0 frame.

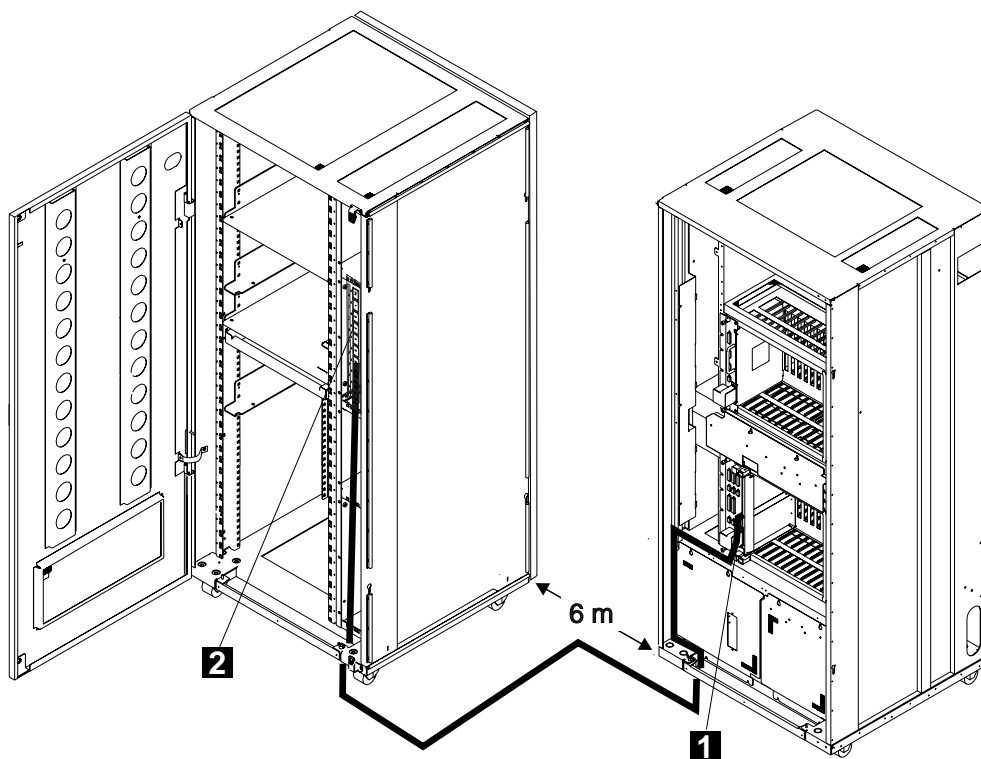


Figure 2-26. Routing the Cable from a TIC3 to a 8228 (Controller Expansion Detached)

- f. \_\_\_\_ Connect the **ethernet bridge** to the **8228** using cable **A** PN 6339098 (2.4 m, 8ft).
- g. \_\_\_\_ Connect the **ethernet bridge** to the ac outlet distribution box using power cable **B** PN 58G5783, and observe the bring-up sequence.

**Note:** At the conclusion of the test, the numeric display should go blank, the power and green status LEDs on the ethernet bridge should be lit, the green status on each attachment module. should be lit, and the green status LED should be lit.

If any number is still displayed, or if any yellow LED is lit, refer to *8229 Bridge Manual*, GA27-4025, chapter 'Problem Determination and Servicing'.

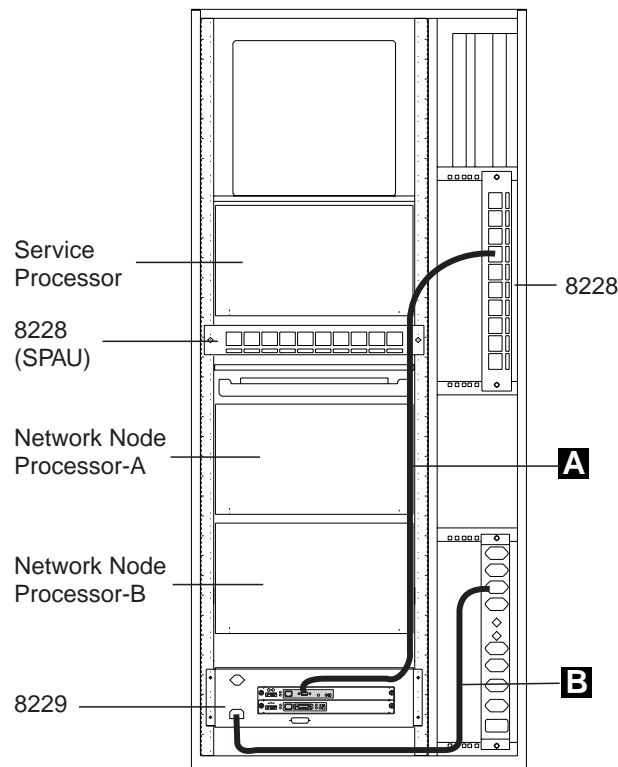


Figure 2-27. Connection of the Ethernet Bridge to the 8228 and Power

Step 10. If you have to **install another Ethernet Bridge**, return to **step1 on page 2-8** and go through all the installation steps.

---

## Connection to Main Power

### Power Description and Load Requirements

**Note:** The following procedures apply to both **basic** and **optional** power attachments and must be performed twice if an ac optional power attachment is installed on the machine.

#### Power Attachment Configuration

**Basic Attachment: Single Power Supply:** The **basic** attachment is **ac** connected to input **AC-1** (see Figure B-13 on page B-9).

**Optional Attachment: Dual Power Supply Feature:** The **optional ac** attachment is connected to the input **AC-2**

There is no internal relation (or connection) between AC-1 and AC-2.

Therefore, AC-2 voltage and frequency can be different from those of AC-1 (see Figure B-11 on page B-8 or Figure B-12 on page B-8).

#### *ac power input for the controller expansion*

An ac outlet distribution box is installed in the lower rear side of the controller expansion to power all the equipment installed in the controller expansion. It is connected to a separate 220V ac power input using a power cord which is country sensitive.

### 3746-950 Power Requirements

1. Basic AC-1 power input:  
The standard voltage input to the 3746-950 is single-phase, 200 to 240 volts 60 Hz, or 200 to 240 volts 50 Hz. The maximum power requirement is 2.5 kVA.
2. Optional AC-2 power input:  
Voltage and frequency limits are the same as for AC-1.

**Note for World Trade:** This product allows connection to an impedance grounded (impedance "terre" or IT) power system.

(An IT power system is a power distribution having no direct connection to earth, the exposed conductive parts of the electrical installation being grounded.)

### Controller Expansion Power Requirements

The power input to the ac outlet distribution box must be between 200 to 240V with a total of 15 Amp. Maximum output per outlet is 6 Amp. A fuse of 7 Amp protect this equipment.



## Measuring and Adjusting the 3746-950 Power to the Customer Supply

### Measuring the Customer's Primary Power

*CEs are not allowed access to the customer's **main power receptacle**. The customer or a customer-appointed electrician may have to do some of the work involved in the following procedures, and the CE must ensure that all the steps have been completed.*

- Step 1. \_\_\_\_ Switch or ask the customer to switch the 3746-950 branch circuit breaker to the **ON** position. Perform the following voltage measurements. *(It is recommended to use high-voltage probes to make these measurements. All voltage values should be less than 1.0 Vac.)*
- a. \_\_\_\_ Measure the voltage between the ground pin of the customer's receptacle and the building ground.
  - b. \_\_\_\_ Measure the voltage between the exterior shell of the customer's receptacle and the building ground.
  - c. \_\_\_\_ (World Trade only) Measure the voltage between the neutral of the customer's receptacle (if present) and the building ground.

**For any of the previous measurement, if the voltage is greater than 1.0 Vac, notify the customer and do not proceed until the problem is corrected.**

- Step 2. \_\_\_\_ Measure the customer's phase-to-neutral or phase-to-phase voltage. Continue only if the measured value is in accordance with the following
- For ac input (basic or optional power attachment) the input voltage must be within 180V to 260V.
- Step 3. \_\_\_\_ Switch or ask the customer to switch the branch circuit breaker that feeds the 3746-950 **to the OFF position**.
- Step 4. \_\_\_\_ Repeat the same procedures (from step 1 to step 3) to check the power receptacle used to connect the controller expansion.

## Adjusting the 3746-950 Power to the Customer's Primary Power

### ac Input Voltage

1. Remove the transformer cover located on the rear bottom of the 3746-950 frame (see Figure B-2 on page B-2).
2. According to the voltage recorded previously in step 2 on page 2-25, move the cable lead **2** from 01Q-A1 TB1-2 to TB1-3 or to TB1-4 (see Figure 2-28).

**Note:** If necessary refer to page YZ246 (AC BOX schematic).

Voltage Mesured	Wire Position	Nominal Voltage
From 180 to 210 Volts	TB1-2	200/208 Volts
From 210 to 230 Volts	TB1-3	220 Volts
From 230 to 260 Volts	TB1-4	240 Volts

**Note:** This adjustment help reduce alarms caused by external voltage variations, and regulates the blower rotation speed (noise reduction).

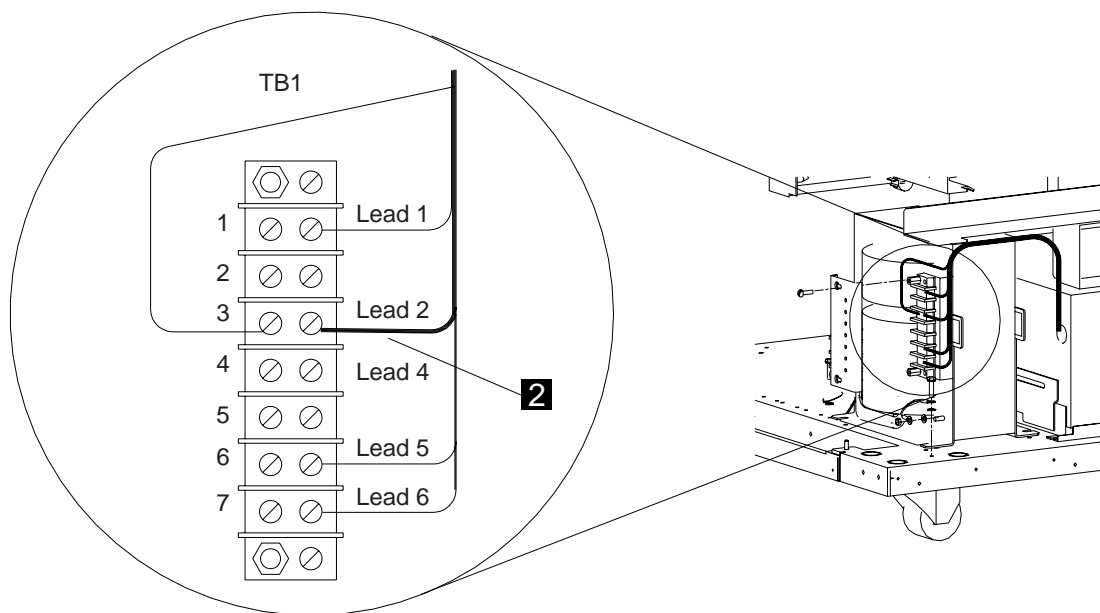


Figure 2-28. ac Power Transformer Connection

## Connecting the 3746-950 to the Customer's ac Power

### Notes:

1. If you have the optionnal power supply installed, before routing the power cables identify these cables using the labels PN 811825 to be able to locate the primary and secondary power supply cables.
2. Perform the following steps for the basic AC-1 input and, if present, for the optional AC-2 input.

- Step 1. \_\_\_\_ Ensure that the customer's branch circuit breaker which feeds the 3746-950 primary power supply is in the **OFF position**, and that CB1(s) is switched to **OFF** in front of the 3746-950 ac power box(es) (see Figure B-13 on page B-9, and refer to Figure B-11 on page B-8).
- Step 2. \_\_\_\_ Remove the cover in front of the ac power supply.
- Step 3. \_\_\_\_ Unroll the power cable stored at the back of the power supply.
- Step 4. \_\_\_\_ Route the power cable to the customer's power socket, and insert the power plug into the customer's main socket.

## Connecting the ac Outlet Distribution Box

**Note:** The power input for the ac outlet distribution box must be within the range 200V to 240V.

Remove cable retainer from connector 'IN' of the ac outlet distribution box, plug cable **A** in this location reinstall the cable retainer and plug the other end of the cable to the customer's power receptacle (see Figure 2-29).

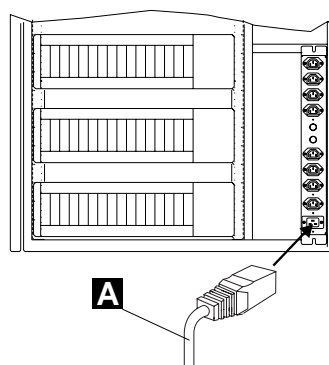


Figure 2-29. Connecting the ac Outlet Distribution Box

## Connecting the 3746-950 to the LAN.

Connect the **3746-950** to the LAN using the token ring attachment cable PN 76F9441 (9 m, 27 ft).

### Notes

1. If the controller expansion is installed at **more than 6 meters** (19.7 ft) from the 3746-950, a **specific LAN cable** must be ordered by the customer (refer to *3745 Communication Controller Models A and 3746 Models 900 and 950: Physical Planning*, GA27-4238 for details of token-ring attachment cables).
2. The 8228 is provided by the customer or, ordered and shipped with the service processor.

Step 1. \_\_\_\_ Using a sticker, identify the cable as the "3746-950 cable".

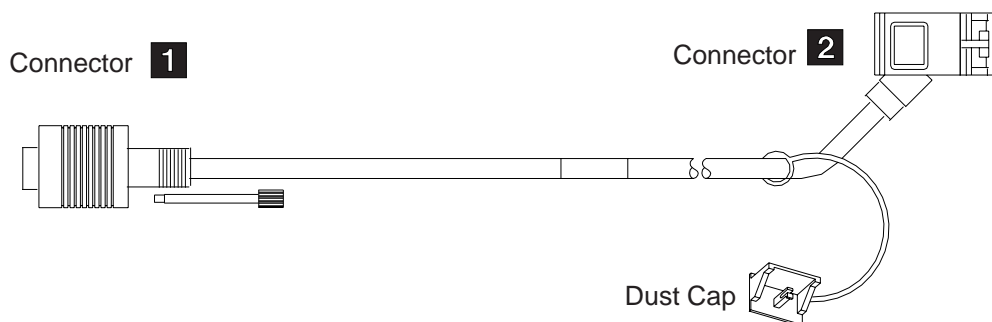


Figure 2-30. Token Ring Cable

Step 2. \_\_\_\_ Locate the TIC3 plugged in 07N-A1 F1 (refer to Figure B-9 on page B-7 detail **1**)  
If your 3746-950 is :

- **Attached** to the controller expansion frame, refer to Figure 2-31 on page 2-29
- **Detached** from the controller expansion frame, refer to Figure 2-32 on page 2-29

Step 3. \_\_\_\_ Plug **connector 1** to the TIC3 07N-A1 F1

Step 4. \_\_\_\_ Plug **connector 2** to one of the 8228 LAN adapter plugs 1 to 8

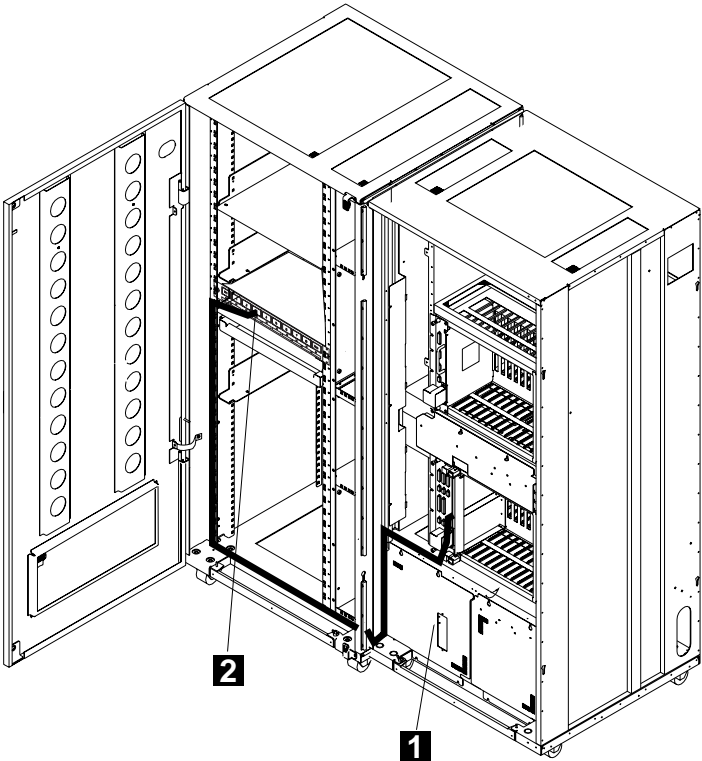


Figure 2-31. Connection of the 3746-950 to the 8228 (Controller Expansion Attached)

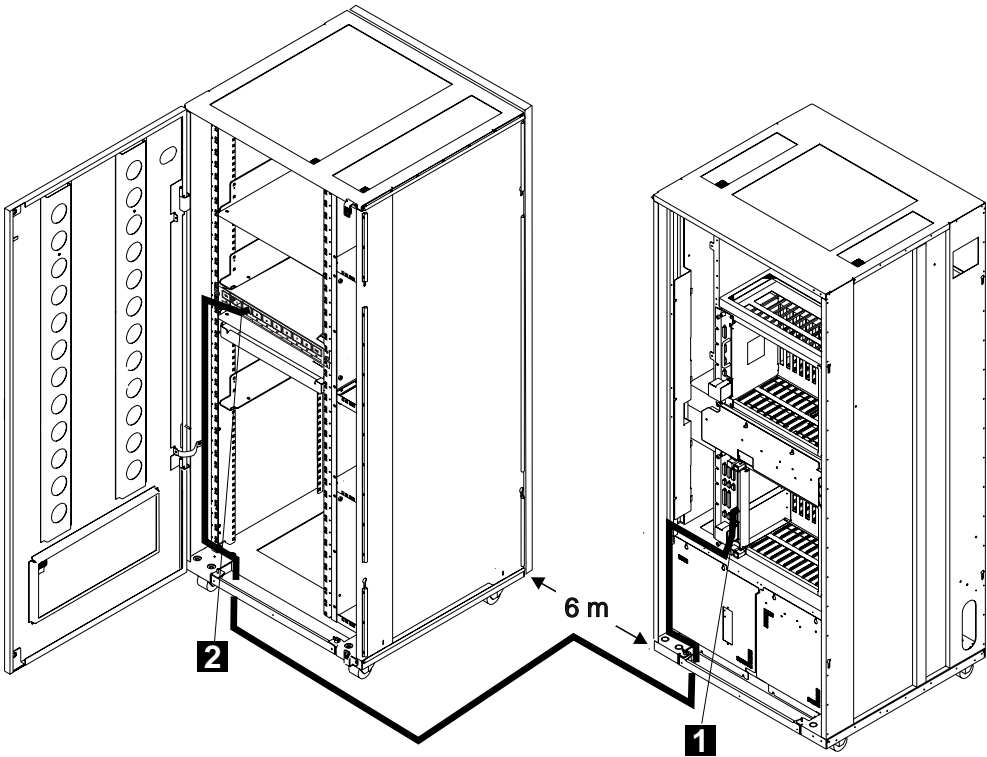


Figure 2-32. Connection of the 3746-950 to the 8228 (Controller Expansion Detached)

---

## Installing the Service Processor

The service processor can be:

- **Not installed**, using:
  - the *Service Processor Installation and Maintenance (Based on 6275)*, SY33-2125, or
  - *Service Processor Installation and Maintenance (Based on 7585, 3172, and 9585)*, SY33-2120, or
  - *Service Processor Installation and Maintenance (Based on 7585, 3172, 9585, and 9577)*, SY33-2115

install the service processor shipped with the 3746-950 then go to “Installing the 3746-950 Code Level” on page 2-36.

- **Installed** but not setup in a controller expansion (controlling other 3745 XXA or 3746) and the model is a:
  - **6275**, go to “Installing a 6275 in the Controller Expansion” on page 2-31
  - **7585**, go to “Installing a 7585 in the Controller Expansion” on page 2-32
  - **3172**, go to “Installing a 3172 in the Controller Expansion” on page 2-33
  - **9585**, go to “Installing a 9585 in the Controller Expansion” on page 2-34
  - **9577**, go to “Installing a 9577 in the Controller Expansion” on page 2-35

**Note:** If the Customer has ordered the small keyboard PN 61G2900, all the units can be installed in the controller expansion. Use cable PN 1398014 (shipped with the keyboard) to connect the keyboard to the system unit. But to install the display and keyboard outside of controller expansion, the Customer must have ordered one extension cable for the display PN 59G1270 and the long cable PN 59G1271 for the keyboard.


## Installing a 6275 in the Controller Expansion

**Note:** Use cables PN 58G5783 (shipped with the controller expansion) to connect the display and system unit to the ac outlet distribution box (see Figure C-17 on page C-14).

Install in the controller expansion:

- The display
- The service processor unit
- The 8228
- The modem

For details refer to the SPIM shipped with the 6275, and see Figure 2-33, then go to “Installing the 3746-950 Code Level” on page 2-36.

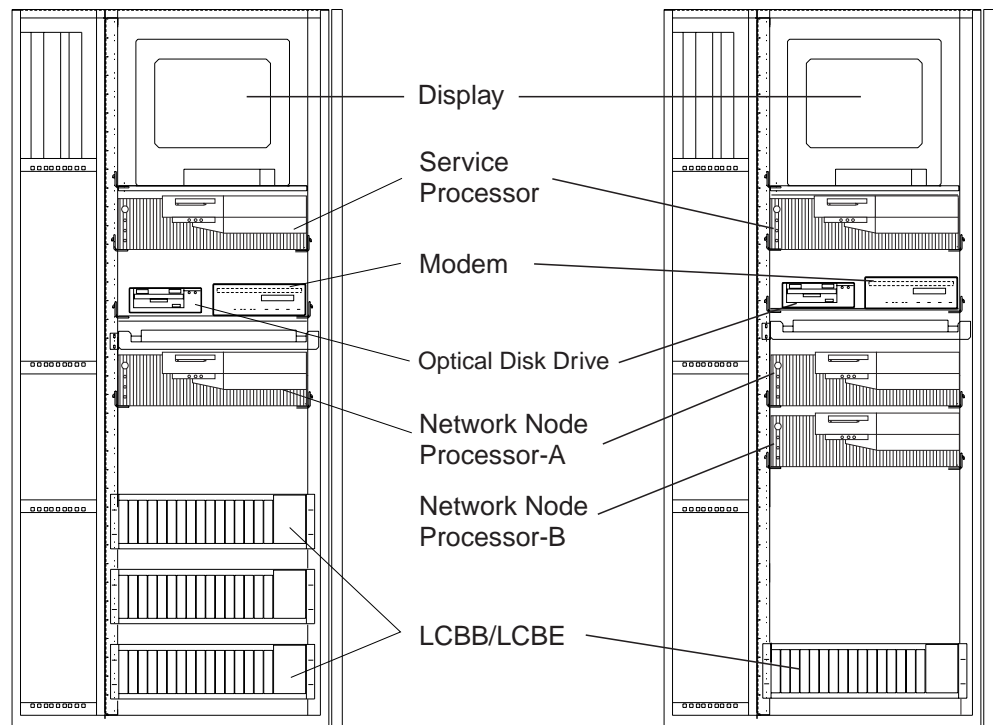

**Note:** On the left side of the drawing the NNP-B is not installed.

Figure 2-33. Service Processor type 6275

## Installing a 7585 in the Controller Expansion

All the units can be installed in the controller expansion or the display and keyboard can be installed outside.

**Note:** Use cables PN 58G5783 (shipped with the controller expansion) to connect the display, optical disk drive, and system unit to the ac outlet distribution box (see Figure C-17 on page C-14). If not installed in a controller expansion, install the following units in the controller expansion

- The display
- The optical disk drive
- The service processor unit
- The 8228
- The modem

For details refer to: the SPIM shipped with the 7585 and see Figure 2-34, then go to "Installing the 3746-950 Code Level" on page 2-36.

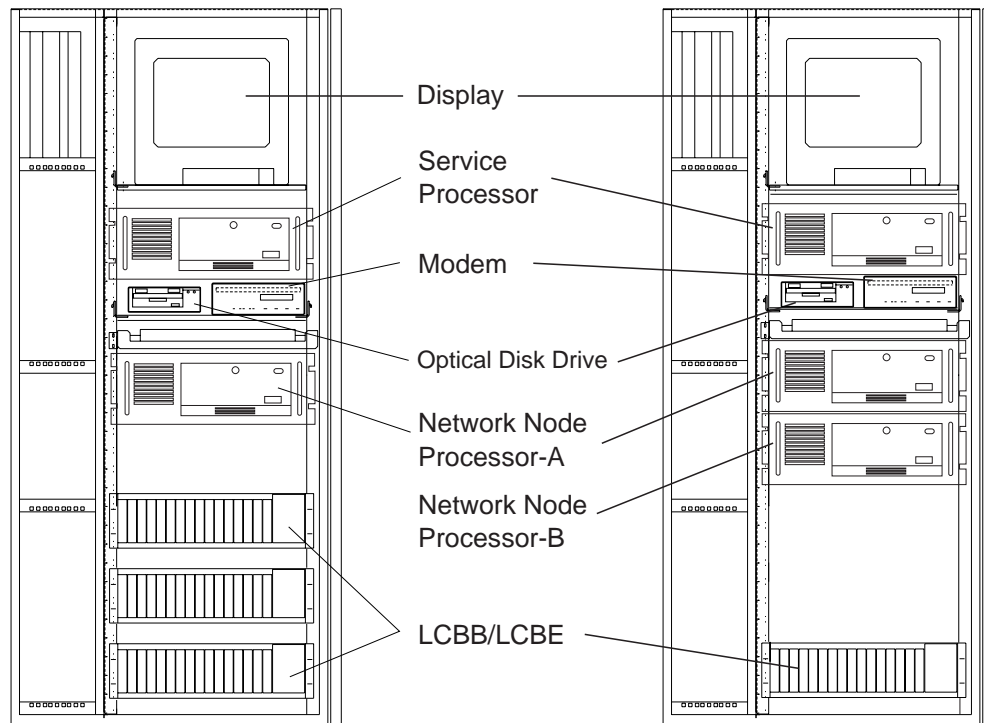


Figure 2-34. Service Processor type 7585

**Note:** On the left drawing the NNP-B is not installed



## Installing a 3172 in the Controller Expansion

All the units can be installed in the controller expansion or the display and keyboard can be installed outside.

**Note:** Use cables PN 58G5783 (shipped with the controller expansion) to connect the display, optical disk or CD-ROM drive, and system unit to the ac outlet distribution box (see Figure C-17 on page C-14). If not installed in a controller expansion, install the following units in the controller expansion

- The display
- The optical disk drive
- The service processor unit
- The 8228
- The modem

For details refer to: the SPIM shipped with the 3172 and see Figure 2-35, then go to "Installing the 3746-950 Code Level" on page 2-36.

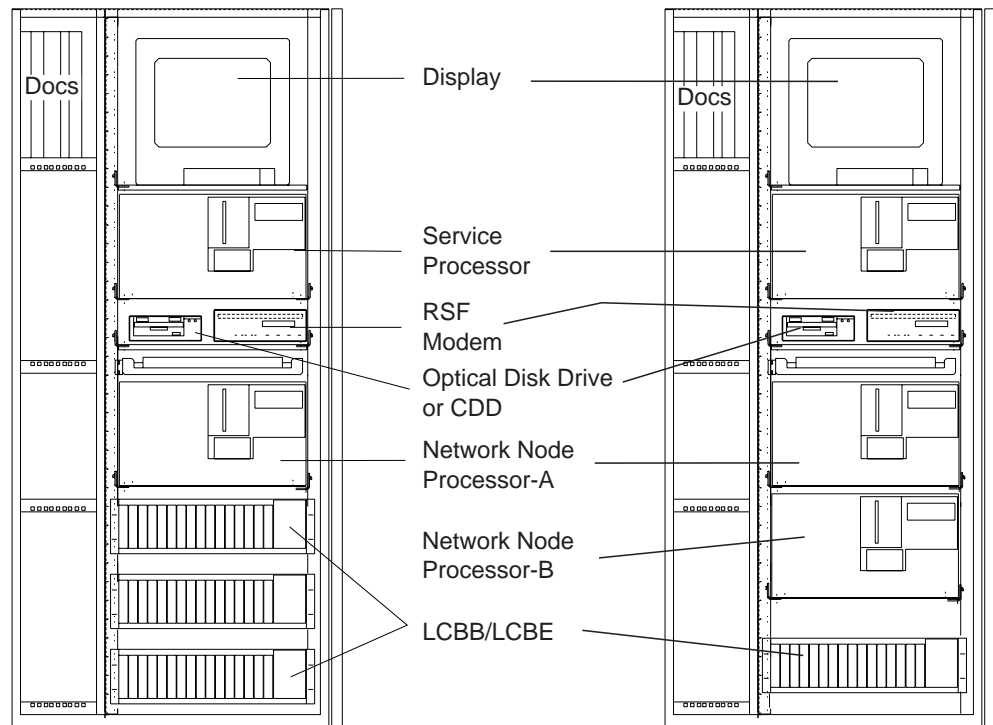


Figure 2-35. Service Processor type 3172

**Note:** On the left drawing the NNP-B is not installed

## Installing a 9585 in the Controller Expansion

**Note:** Use cables PN 58G5783 (shipped with the controller expansion) to connect the display, the CD-ROM drive, and system unit to the ac outlet distribution box (see Figure C-17 on page C-14).

If not installed in a controller expansion, install the following units in the controller expansion

- The display
- The service processor unit
- The 8228
- The modem
- The CD-ROM drive

For details refer to: the SPIM shipped with the 9585 and see Figure 2-36 , then go to "Installing the 3746-950 Code Level" on page 2-36.

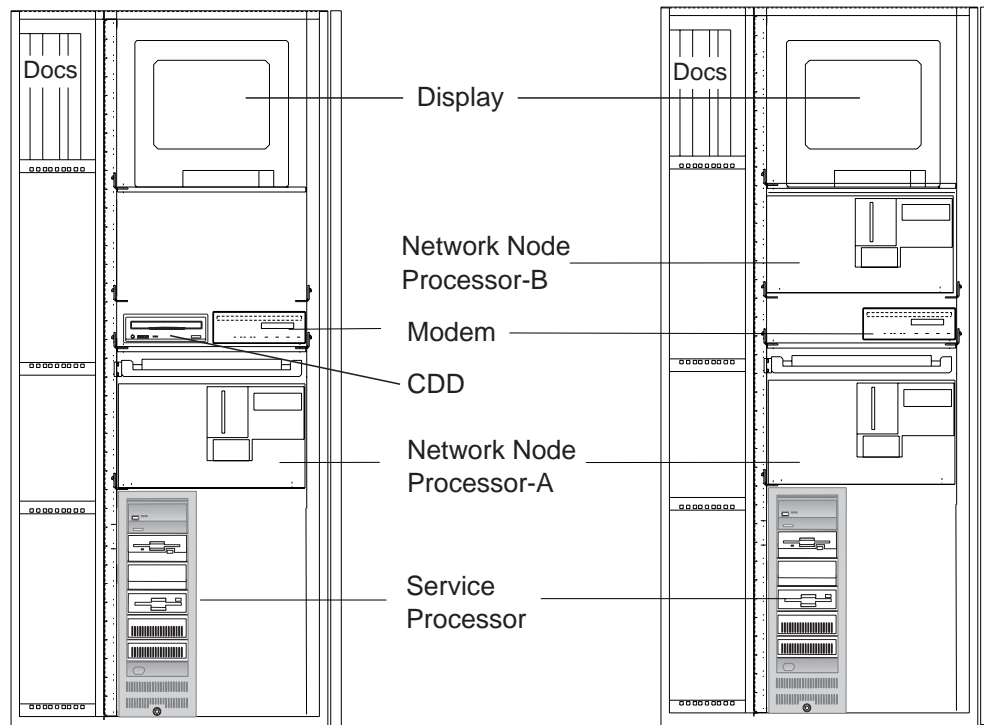


Figure 2-36. Service Processor type 9585

**Note:** On the left drawing the NNP-B is not installed

## Installing a 9577 in the Controller Expansion

**Note:** Use cables PN 58G5783 (shipped with the controller expansion) to connect the display and system unit to the ac outlet distribution box (see Figure C-17 on page C-14).

If necessary, install the new hard drive in the service processor shipped with the 9577 MES, then install in the controller expansion:

- The display
- The service processor unit
- The 8228
- The modem

For details refer to: the SPIM shipped with the 9577 and see Figure 2-37, then go to “Installing the 3746-950 Code Level” on page 2-36.

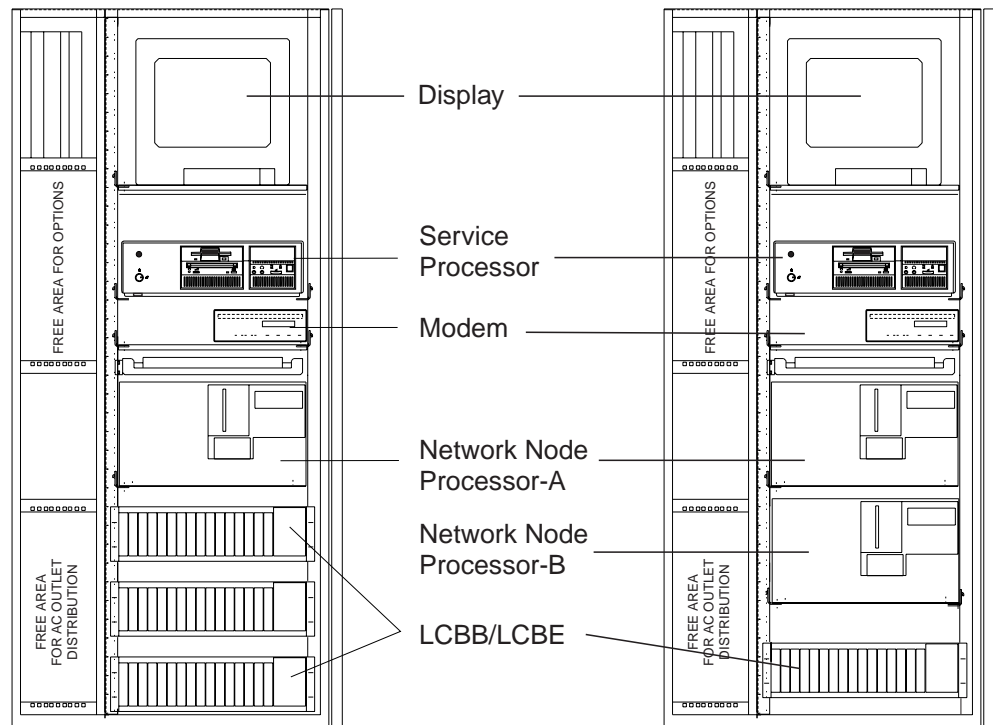


Figure 2-37. Service Processor type 9577

**Note:** On the left drawing the NNP-B is not installed

### Installing the 3746-950 Code Level

Is the LIC available on a **CD-ROM** (EC F12380 and above)?:

- **YES**, go to “Installing the 3746-950 Code Level from a CD-ROM.”
- **NO**, go to “Installing the 3746-950 Code Level from an Optical Disk” on page 2-37.

The LIC is shipped on a **CD-ROM** starting at **EC F12380** and above. All LIC levels up to **EC D46130** are shipped on an **optical disk**.

**Note:** During the following procedures:

1. keep the 3746-950 powered **OFF**, otherwise ALARM panels can be generated.
2. Follow the screen prompts in conjunction with the Installation Guide.

### Installing the 3746-950 Code Level from a CD-ROM

1. \_\_\_\_ Power on the service processor and its display screen.
2. \_\_\_\_ Enter the service processor maintenance password (*default is IBM3745*).
3. \_\_\_\_ Install the CD-ROM shipped with the machine in the CD disk drive.
4. \_\_\_\_ Double click on the **Service Processor** icon.
5. \_\_\_\_ Click on **Configuration Management**.
6. \_\_\_\_ Double click on **Install 3746 and NNP LIC on SP hard disk**.

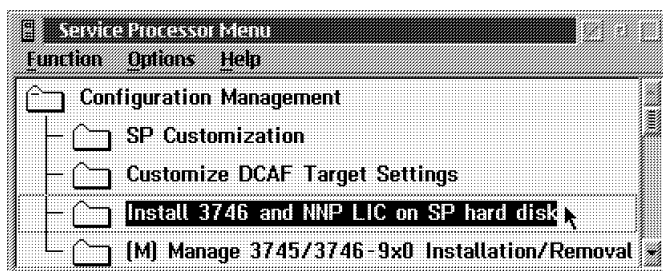


Figure 2-38. Configuration Management Window

7. \_\_\_\_ Select the 3746 (1 or 2) to be installed and select the 3746 where the NNP will be installed and enter its serial number, then click on **Start LIC installation...**

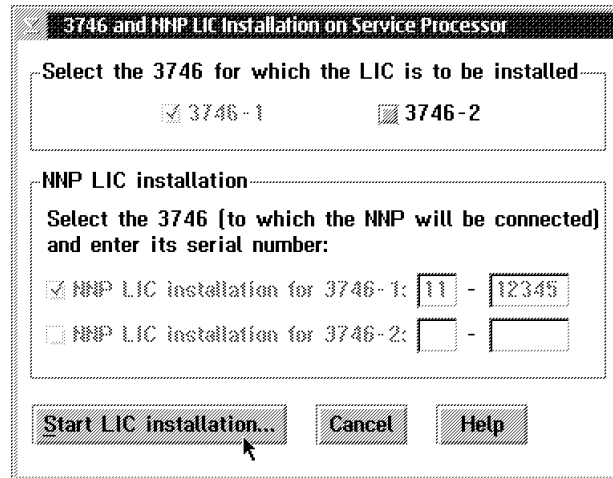


Figure 2-39. LIC Installation Menu

8. \_\_\_\_ when completed, click on **OK**.

Go to “Configuring the Service Processor” on page 2-38.

## Installing the 3746-950 Code Level from an Optical Disk

1. \_\_\_\_ Install the **Service Processor installation diskette 1** in the diskette drive, and the optical disk received with the 3746-950 in the optical drive.
2. \_\_\_\_ **Power** the Service Processor **ON** and its display screen or press **Ctrl + Alt + Del**.
3. \_\_\_\_ On the **Service Processor Installation Diskette** window, press **Enter**.
4. \_\_\_\_ From the primary window select option **1 Update Licensed Internal Code (LIC) when installing a 3746-9x0**

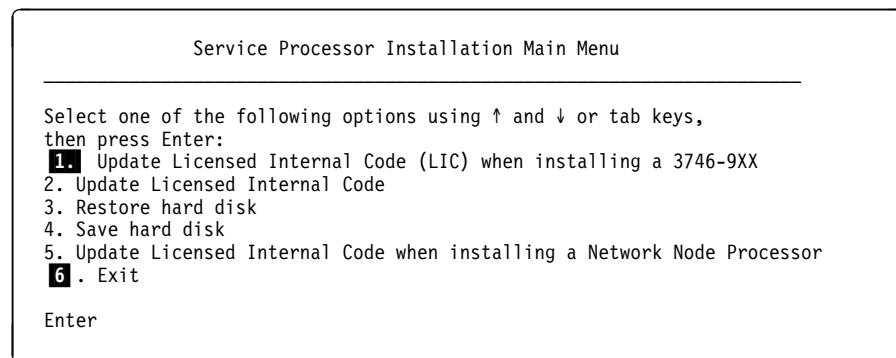


Figure 2-40. LIC Installation Main Menu

5. \_\_\_\_ Press **Enter** and follow the prompts, when requested select the option to **Install the Network Node Processor**.

**Note:** The process length will depend on the quantity of code to be upgraded.

6. \_\_\_\_ At the end the main menu is prompted, select option **6 Exit** and follow the prompts.

### Configuring the Service Processor

**Note:** If any unexpected panel code is displayed at the 3746-950 control panel, go to the START page of the *3746-950 Service Guide*, SY33-2108.

Step 1. \_\_\_\_ **Power the 3746-950 On**

- a. \_\_\_\_ Verify that all the 3746-950 CPs are set to the ON position (refer to Figure B-13 on page B-9).
- b. \_\_\_\_ Turn or ask the customer to turn the branch circuit breaker which feeds the 3746-950 to the **ON** position.
- c. \_\_\_\_ Switch CB1 to **ON** in front of the 3746-950 primary power box.  
**Note:** If the optional power supply is installed, switch its CB1 to **ON**, the power is now present in the primary power box.
- d. \_\_\_\_ Press the Power control key repeatedly until 3 is displayed in the *Power control* window, and press the validate key. You are now in **Local Power Control mode**.
- e. \_\_\_\_ Wait for the code **05-28-2805** at the 3746-950 control panel.

Then on the Service Processor select the following options:

Step 2. \_\_\_\_ **Add the 3746-950**

- a. \_\_\_\_ From the service processor **Configuration Management** window, double click on **Manage 3745/3746-9x0 installation/Removal**
- b. \_\_\_\_ On the Controller Installation menu, select the 3746 to be installed by clicking on any **<3746 not installed>** field.
- c. \_\_\_\_ Verify that the code **05-28-2805** is still displayed on the 3746-950 panel, then click on **ADD**.
- d. \_\_\_\_ Specify the model by clicking on **950**, then enter the 3746-950 **serial number** (format XX-XXXXX), then click on **OK**.
- e. \_\_\_\_ When requested, install the 3746-950 installation parameters **diskette PN 17G5878** in the Service Processor diskette drive.
- f. \_\_\_\_ Click on **OK**. The reference CDF-E is being restored.
- g. \_\_\_\_ Enter the **Token-Ring Local address (MAC address)** according to the value recorded by the customer on the parameter worksheet: **3746-950 Integration - Definition of 3746-950 LAN Address**, and click on **OK**.  
**Note:** If the LAN address cannot be obtained from the customer, enter a value in the range 400000000000 to 7FFFFFFFFFFFFF.
- h. \_\_\_\_ Perform action according to the "Controller Installation Message", then follow the prompts.
- i. \_\_\_\_ At the end of the process, a general IML is started and stops with a completion code **00-00-0000** displayed at the 3746-950 control panel.
- j. \_\_\_\_ Enter the controller name, then click on **OK**.
- k. \_\_\_\_ Click on **Cancel** to exit from the function.

---

## Installing the Network Node Processor (A or B)

According to the type of network node processor that you have to install use either

- the *Network Node Processor Installation and Maintenance (Based on 6275)*, SY33-2126, or
- *Network Node Processor Installation and Maintenance (Based on 7585 or 3172)*, SY33-2112,

to install the network node processor following the instructions given in chapter 1: "Installing Your Network Node Processor". Then, return here when done.

Is your customer going to use Netview performance monitor (NPM)?

- **Yes**, go to "Configuring NetView Performance Monitor (NPM)" on page 2-40.
- **No**, go to step 8 on page 2-42.

## Configuring NetView Performance Monitor (NPM)

1. \_\_\_\_ Double click on the **3746-9x0** icon where you installed APPN® feature.
2. \_\_\_\_ From the 3746-9x0 menu, click on **Network Node Processor (NNP) Management**.

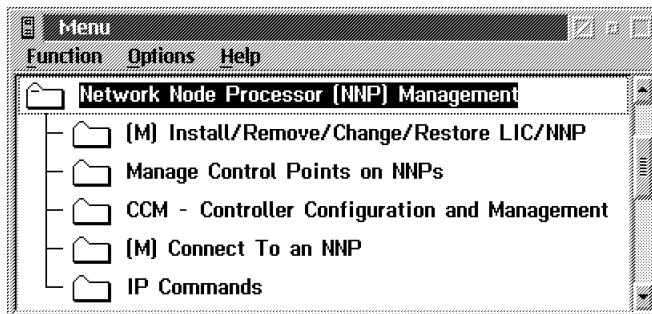


Figure 2-41. 3746-9x0 Menu

3. \_\_\_\_ Double click on **Manage Control Points on NNPs**.

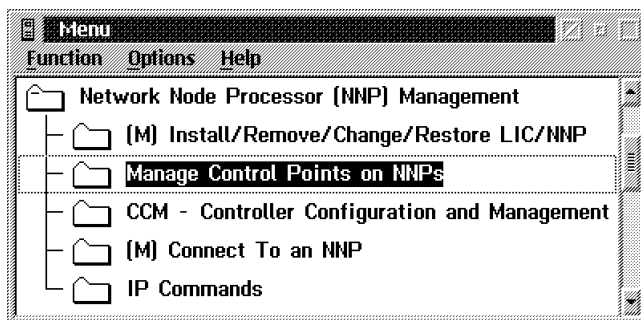


Figure 2-42. Network Node Processor Menu

4. \_\_\_\_ Select the network node processor A (or B) , then click on **Manage NPM**.

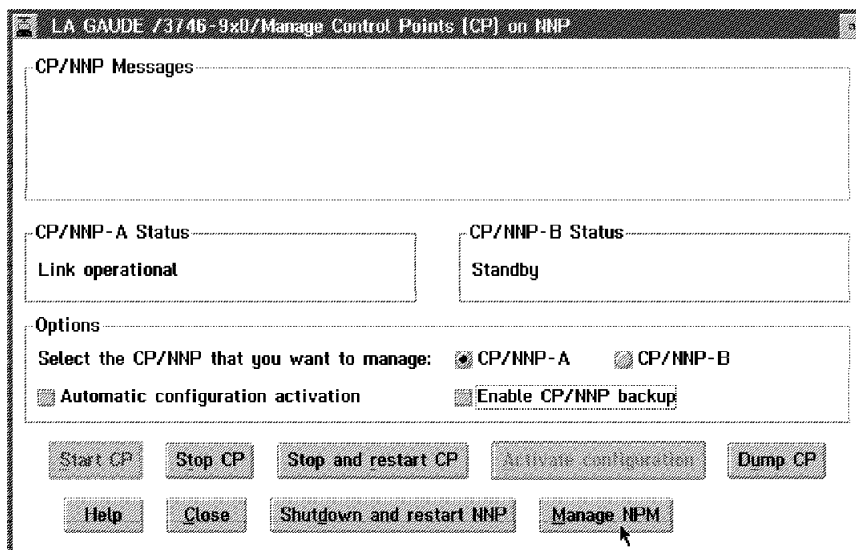


Figure 2-43. Manage Control Points on NNP



5. \_\_\_\_ Check **Enable NPM**, and check **Activate immediately** (according to the customer choice). Then enter the **Network ID**, **Local node name** which is the name of the local PU for NPM = PU name in switched major node (refer to Figure 2-46 on page 2-42). Modify the **LU name** (LU name for NPM defined in VTAM®), then click on **OK**.

The image shows a dialog box titled "NPM Management". It contains two checked checkboxes: "Enable NPM" and "Activate immediately (otherwise at next CP restart)". Below these are two groups of input fields. The first group, "Local Node Characteristics", contains "Network ID" (with the value "SYSTSTAP") and "Local node name" (with the value "TESTNODP"). The second group, "LUA API", contains "LU name" (with the value "TESTNPA"). At the bottom are three buttons: "OK", "Cancel", and "Help".

Figure 2-44. NPM Management Menu

**Note:** To support NPM, the customer has to define a:

- Switched major node**, refer to the example given in Figure 2-46 on page 2-42.
- Resource resolution table**, refer to the example given in Figure 2-45.

In these tables the CP and LU names must be equal to the names given in NPM management (define in Figure 2-44.):

- CPNAME (TESTNODP) = Local node name
- LUNAME (TESTNPA) = LU name

```
*****
*   DESCRIPTIVE NAME : 3746 MODEL 900 VTAMLST DEFINITION   *
*****
*   BUILD STATEMENT - CONTROLLER INFO                       *
*****
*
TESTNOD BUILD MODEL=3746-900,                                X
          NETID=SYSTSTAP,                                    X
          NEWNAME=TESTNOD,                                   X
          NPA=(YES,DR),                                       X
          VERSION=N/A
*
*****
*   NPM VIRTUAL RESOURCES                                   *
*****
M900NPA  GROUP LNCTL=SDLC,                                    X
          NPARSC=YES,                                        X
          VIRTUAL=YES,                                       X
          NPACOLL=YES,                                       X
          ISTATUS=ACTIVE
*
TESTNODL LINE
TESTNODP  PU
TESTNPA   LU
*
*****
*   END OF GEN SOURCE                                       *
*****
*
GENEND    GENEND
          END
```

Figure 2-45. Example of Resource Resolution Table

```

ERS4NPM  VBUILD TYPE=SWNET,MAXGRP=1,MAXNO=1
-----*
* ERS4 : PU NNP                                     *
-----*
TESTNODP PU  ADDR=04,PUTYPE=2,CPNAME= TESTNODP
TESTNPA LU   LOCADDR=1

```

Figure 2-46. Example of Switched Major Node

6. \_\_\_\_ Click on **Yes**.

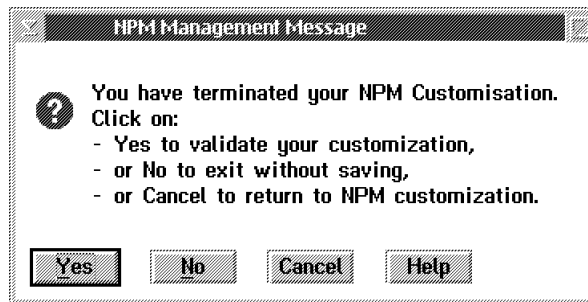


Figure 2-47. NPM Management Message

7. \_\_\_\_ Click on **OK**.

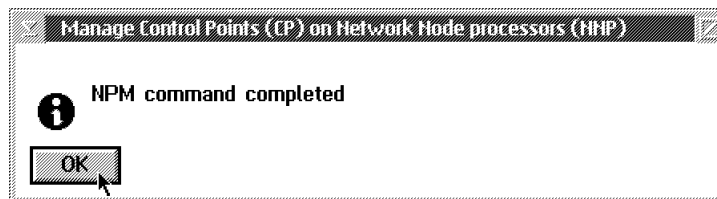


Figure 2-48. Manage Control Points on NNP

8. \_\_\_\_ Go to one of the following chapters:

Are you installing a **multiaccess enclosure**?

- **Yes**, go to "Installing the Multiaccess Enclosure"
- **No**, do you have to install **specific software**?
  - **Yes**, go to "Installing Software Feature on the 3746-950" on page 2-43
  - **No**, go to "Calling RETAIN" on page 2-45.

## Installing the Multiaccess Enclosure

Using the *Multiaccess Enclosure Installation and Maintenance Guide*, SY33-2124, or the *Multiaccess Enclosure Installation and Maintenance Guide*, SY33-2118, install the multiaccess enclosure following the instructions given in chapter 1, then, return here when done.

Do you have to install **specific software**?

- **Yes**, go to "Installing Software Feature on the 3746-950" on page 2-43
- **No**, go to "Calling RETAIN" on page 2-45.

# Installing Software Feature on the 3746-950

1. \_\_\_\_ On the Controller Installation menu, select the 3746 just installed by clicking on the <3746-950> line, then click on **Select Feature**.

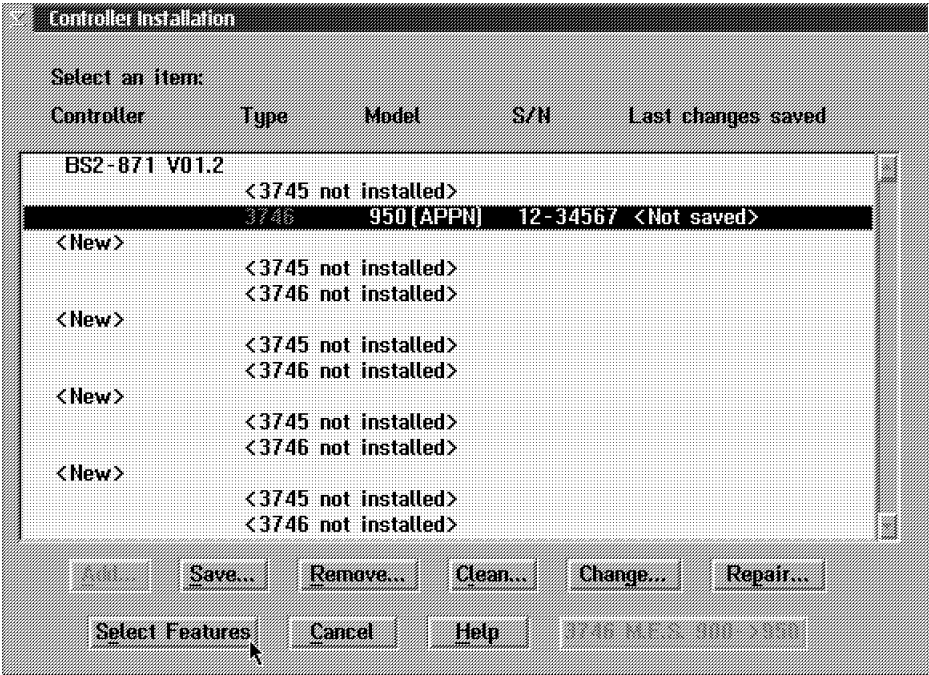


Figure 2-49. Controller Installation

2. \_\_\_\_ Click on the **Features** to be installed, enter the corresponding password, then click on **OK**.

**Notes:**

- a. The following screen can be different. It depends on the microcode level installed.
- b. The password for each feature is recorded on the installation instructions part of the shipping group.

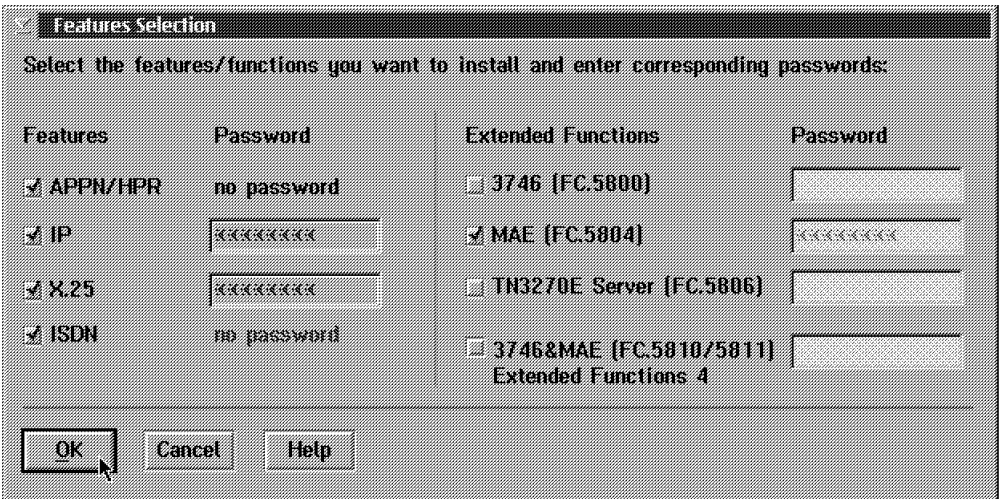


Figure 2-50. Features Selection Window

3. \_\_\_\_ According to the customer's requirement, select the protocol loaded per processor type, then click on **OK**. For details, refer to "Parameter worksheet for Processor Loading" on page A-1.

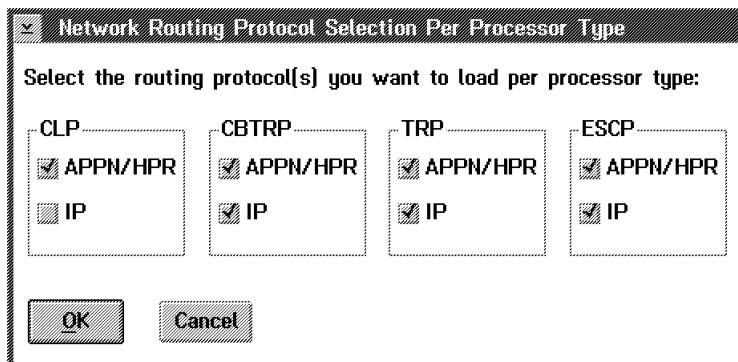


Figure 2-51. Network Routing Selection

4. \_\_\_\_ This information message remind you to set the NPM parameters required in communications manager if the customer is going to use NPM (for details refer to "Configuring NetView Performance Monitor (NPM)" on page 2-40), click on **OK**.

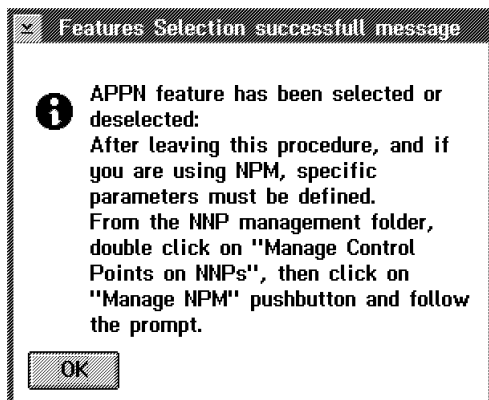


Figure 2-52. Features Selection Successfull Message

5. \_\_\_\_ When completed, click on **OK** and perform a general IML to activate the feature installed.

---

## Calling RETAIN

**Note:** This procedure is used to test the link to RETAIN® and to verify if the machine is correctly recorded in the RETAIN database.

1. \_\_\_\_ Double click on the **3746-950** icon.
2. \_\_\_\_ Click on **Problem management**.
3. \_\_\_\_ Double click on **Report Problem using Remote Support Facility**.
4. \_\_\_\_ See Figure 2-53, enter a **short description** "Installing the 3746-950 and testing the RSF link", then click on **OK**.  
Wait for the message "Call to RETAIN successful" indicating the normal end of the transmission.  
If you get the message "Call to RETAIN unsuccessful", record the Customer Problem Number (CPN) and go to the START page of the *3746-950 Service Guide*, SY33-2108.

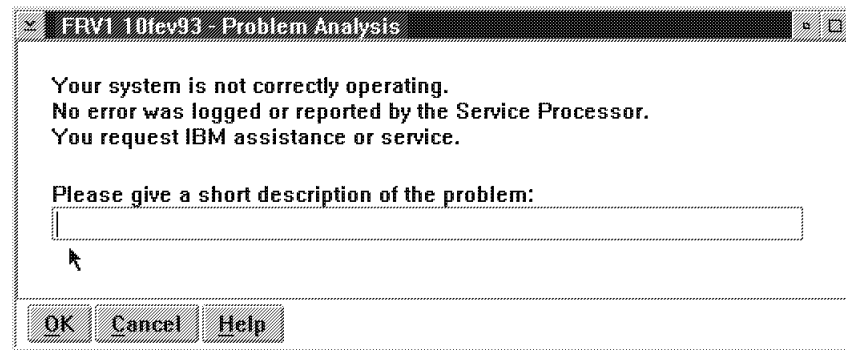


Figure 2-53. Link to RETAIN

Go to Chapter 3, “3746-950 and Service Processor Power On and Test Procedure” on page 3-1.



---

## Chapter 3. 3746-950 and Service Processor Power On and Test Procedure

- 3746-950 Control Panel General Information (page 3-2)
- 3746-950 Checkout Procedure (page 3-3)
  - Step 1. Power OFF the 3746-950 (page 3-3)
  - Step 2. Verifying the 3746-950 Standby State (page 3-3)
  - Step 3. 3746-950 Control Panel Test (page 3-4)
  - Step 4. Perform the 3746-950 General IML and Build the Active CDF-E. (page 3-5)
  - Step 5. Compare the Active CDF-E versus the Reference CDF-E (page 3-5)
  - Step 6. Select Diagnostics to Test All the Resources (page 3-6)
  - Step 7. Import the Customer Configuration (page 3-7).

## 3746-950 Control Panel General Information

- The **function**, **service mode**, and the **power control** keys allow to scroll through options at their corresponding display window.

### Note:

- When you are in **normal (0)** service mode, pressing the function key will scroll through the 3, 4, 6, and 8 functions.
- When you are in **maintenance (1)** service mode, pressing the function key will scroll through the 3, 4, 5, 6, 7 and 8 functions.
- To select functions 0, 1, and 2 press the following keys:
  1. **General IML** will select **function 0** (General IML).
  2. **CBSA IML** will select **function 1** (CBSA IML).
  3. **CBSA dump** will select **function 2** (CBSA dump).
- When you are in **display error code (7)** pressing the **service mode** key will **scroll the System Reference Code (SRC) forward** and pressing the **power control** key will **scroll the SRC backward**.
- The **validate** key enables options selected with the preceding keys (digits stop blinking).
- The **exit** key cancels a scrolled option.

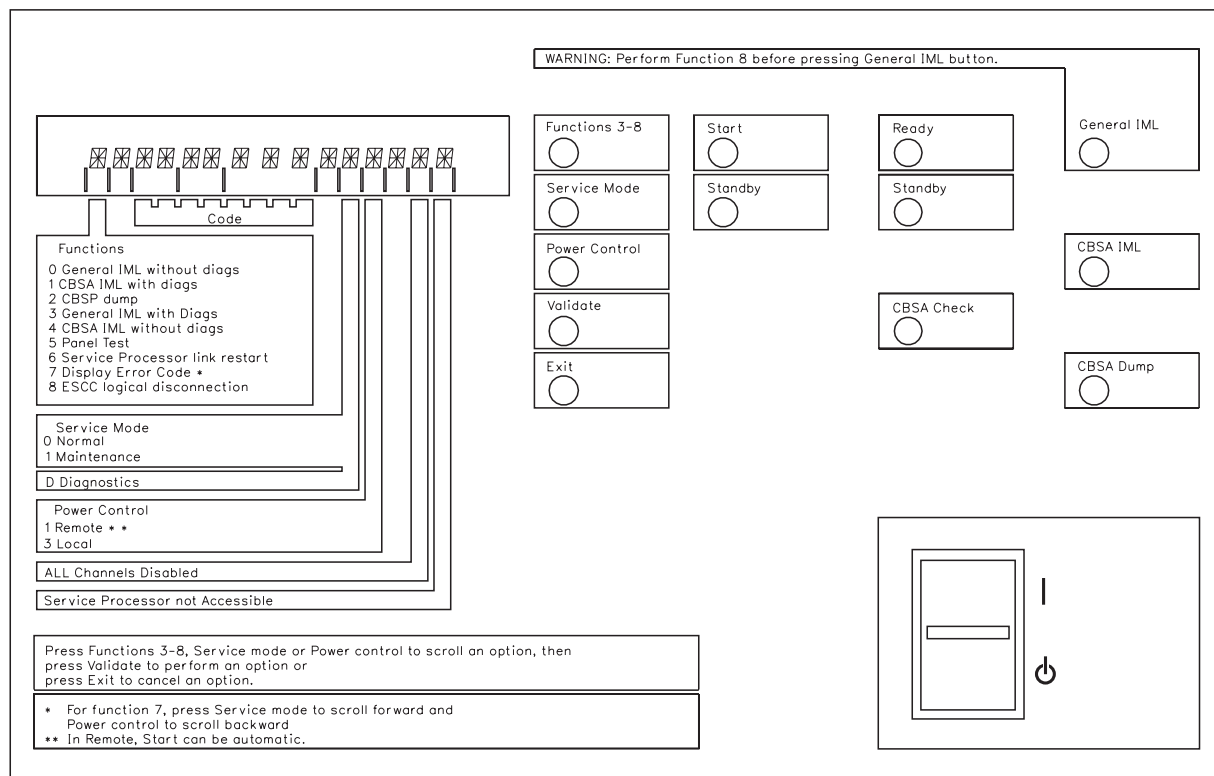


Figure 3-1. 3746-950 Control Panel Layout

For a description of the panel display values, refer to the *3746-950 Service Guide*, SY33-2108.



## 3746-950 Checkout Procedure

- Ensure that you complete each step in sequence.
- If the expected panel code is not displayed, go to the START page of the *3746-950 Service Guide*, SY33-2108.

### Step 1. \_\_\_\_ Power the 3746-950 Off

Press the **Standby** key to power the 3746-950 off, in that state only the CBSP is power ON all the others processors are power OFF.

### Step 2. \_\_\_\_ Verifying the 3746-950 Standby State

At the 3746-950 control panel, check for the following indications:

- Service Mode = **0**,
- Power control = **3**,
- Progression code = **05 28 2806**
- The standby led blinks first for a few seconds and then stays **ON**

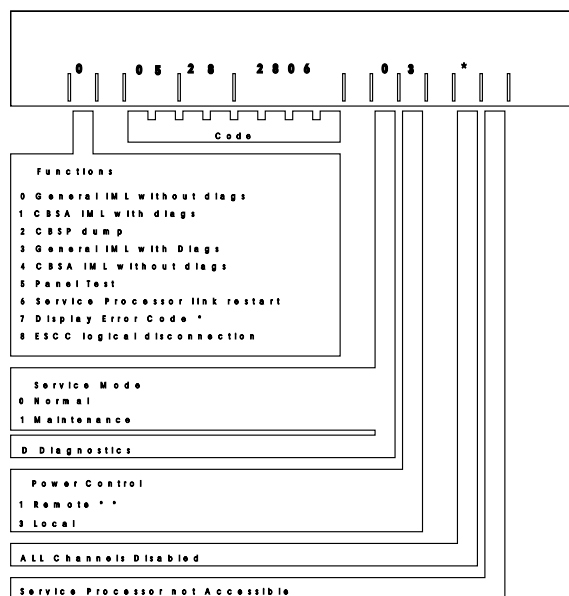


Figure 3-2. Display Part of the 3746-950 Control Panel Layout

If the conditions of the normal end of standby IML are not met, use the *3746-950 Service Guide*, SY33-2108, at the START page.

### Step 3. \_\_\_\_ 3746-950 Control Panel Test


For details on this test, refer to *"How to Run the Panel Test"* in the *3746-950 Service Guide*, SY33-2108

It is not a sequential test and can be cancelled at any time, by pressing the **Exit** key.

#### Notes:

- a. Any inactivity lasting about 30 seconds during the panel test, will result in the test being automatically cancelled and the panel will return to operational mode.
- b. During this test the control panel's audible alarm will sound for each action.

**special character:** Can be described as when every possible segment of the window is lit.



- a. \_\_\_\_ Press the **Power Control** key repeatedly until **3** is displayed in the power control window.
- b. \_\_\_\_ Press the **Validate** key.
- c. Press the **Service mode** key repeatedly until **1** is displayed in the 'service mode' window.
- d. \_\_\_\_ Press the **Validate** key.
- e. \_\_\_\_ Press the **Function** key repeatedly until **5** is displayed in the function window.
- f. \_\_\_\_ Press the **Validate** key.

Observe the display: All 13 'special characters' will be displayed.

**Note:** If panel test code detects an error, the SRC is stacked but not displayed on the panel.

- g. \_\_\_\_ Press the **Function** key repeatedly.

Observe the display: In the 'Function' window a 'special character' will be displayed and you will scroll through the 'Function' and 'Code' windows sequentially, and wrap around.

- h. \_\_\_\_ Press the **Service mode** key repeatedly.

Observe the display: In the 'Service' window a 'special character' will be displayed and you will scroll through the 'Service' and 'Power Control' windows, and wrap around.

- i. \_\_\_\_ Press the **Power Control** key repeatedly.

Observe the display: In the 'Console not accessible' window a 'special character' will be displayed and you will scroll through the 'All channels disabled' and 'Console not accessible' windows sequentially, and wrap around.

- j. \_\_\_\_ Press the **Start** key.

Observe the display: **8** will be displayed in the 'Function' window, and the standby LED will be ON.

- k. \_\_\_\_ Press the **Standby** key.

Observe the display: The display will be completely blank.

- l. \_\_\_\_ Press the **Exit** key.

Observe the display: The display will present the 'Service Mode' (**1**) and 'Power Control' (**3**) indicating that the test is complete, and the panel has returned to operational mode.

Step 4. \_\_\_\_ **Perform the 3746-950 General IML and Build the CDF-E**

**Notes**

1. If any unexpected SRCs or leds are ON, go to the START page of the *3746-950 Service Guide*, SY33-2108
2. SRC **06 00 00 D1** indicates that the link between the 3746-950 and the Service Processor has been lost and this is a normal condition during the re-IML of the machine.

- a. \_\_\_\_ Press the **Power control** key to select local mode **3**
- b. \_\_\_\_ Press the **Service Mode** key to select Maintenance Mode **1**.
- c. \_\_\_\_ Press the **Function** key to select General IML with Diags **3**.
- d. \_\_\_\_ Press the **Validate** key to execute General IML with Diags.

The progression codes are now dynamically displayed on the control panel up to the **normal end of the Standby state** which is indicated as follow:

- Ready led **OFF**.
  - Standby led **ON**.
  - SRC **05-28-2806** is displayed on the control panel.
- e. \_\_\_\_ Press the **Start** key to execute the General IML with Diags from Standby state to the normal end of Power ON IML which is indicated as follow:
    - Ready led **ON**.
    - Standby led **OFF**.
    - SRC **00-00-0000** is displayed on the control panel.
    - The 3746-950 object Icon is **green**.

Step 5. \_\_\_\_ **Compare the Active CDF-E to the Reference CDF-E**

From the Service Processor, select the following screen options:

- a. \_\_\_\_ Enter the Service Processor Maintenance password (default is IBM3745).
- b. \_\_\_\_ Double click on the **3746-950** icon..

- c. \_\_\_\_ Click on **Configuration Management**.
- d. \_\_\_\_ Double click on **Compare reference CDF-E with active CDF-E**.  
The active CDF-E is now being compared with the reference CDF-E

**Note:** If there is no difference, an information message is displayed. Click on the **OK** pushbutton to leave the function.

If there is difference, double click on the resource in error to get more details about that resource then:

- 1) Check that the cards are properly plugged.
- 2) Compare the configuration recorded in the CDF-E to the HONE installation sheets.

### Step 6. \_\_\_\_ **Select Diagnostics to Test All the Resources**

**Note:** For any unexpected message go to the START page of the *3746-950 Service Guide*.

- a. \_\_\_\_ On the **3746-9x0** menu, click on **Problem Management**
- b. \_\_\_\_ Double click on **Set 3746-9x0 Online/Offline Option**, then click on **Yes**.
- c. \_\_\_\_ Click on **OK** when the offline request has been successfully processed.
- d. \_\_\_\_ Press **General IML** on the 3746-950 control panel to set the 3746-950 offline.  
  
**Note:** The 3746-950 object icon will become **white**, **yellow**, and finally **red** and will stay **red** as long as the 3746-950 is offline.
- e. \_\_\_\_ From the list of Problem management functions, double click on **Perform offline Diagnostics**.
- f. \_\_\_\_ Using the radio buttons define how to run a general diagnostic. Select **Whole 3746-9x0** and **No wrap** (normally the default options), enter the **number of cycles** that you want the test to run (one cycle can take up to 15 minutes).
- g. \_\_\_\_ Click on the **Start** pushbutton (a 'stop' pushbutton is now visible). The normal end will be indicated by **Hardware error: 0, 00-00-0000** displayed on the 3746-950 control panel, and the 'Start' pushbutton will be visible again.
- h. \_\_\_\_ Click on **Cancel** to exit from the function.

**Note:** If the hardware error counter is incremented:

- 1) \_\_\_\_ Click on **Manage Alarms/Errors/Events (SRC's)**, the **System Reference Code Options Selection** is displayed.
- 2) \_\_\_\_ Select **Alarms** and click on **OK**.
- 3) \_\_\_\_ An **Alarms** panel is displayed, select the last alarm (at the top of the screen).

- 4) \_\_\_\_ Click on **View** (on the action bar), click on **Problem interpretation...**, a panel is displayed and gives the list of suspected FRUs and their defective probability.
- 5) \_\_\_\_ Click on **Cancel(s)** to exit from the function.
- i. \_\_\_\_ Click on **OK** on the warning message which remind you to put back the 3746-950 online.
- j. \_\_\_\_ **Resume** step 6b on page 3-6 to **put the 3746-950 ON LINE**.
- k. \_\_\_\_ Press **General IML** on the 3746-950 control panel to set the 3746-950 online (indicated by a **green** object icon).

Step 7. \_\_\_\_ **Import ESCON® Configuration Using CCM**

- a. \_\_\_\_ Double click on the **3746-9x0** icon.

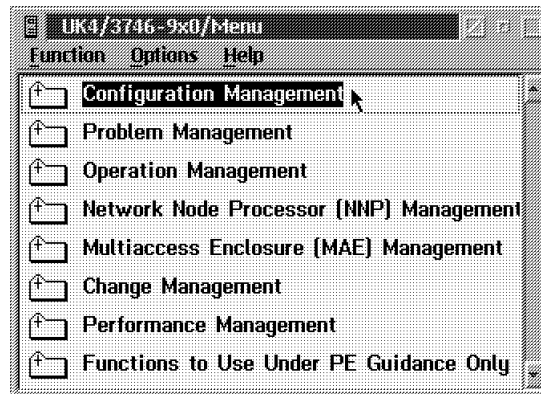


Figure 3-3. 3746-9x0 Menu

- b. \_\_\_\_ Click on **Network Node Processor (NNP) Management**.

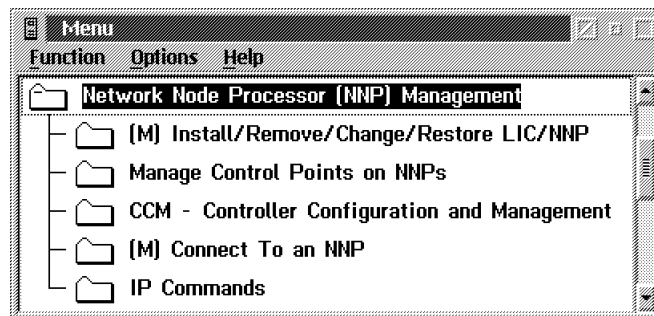


Figure 3-4. Network Node Processor Management Functions

- c. \_\_\_\_ Double click on **CCM -Controller Configuration and Management**

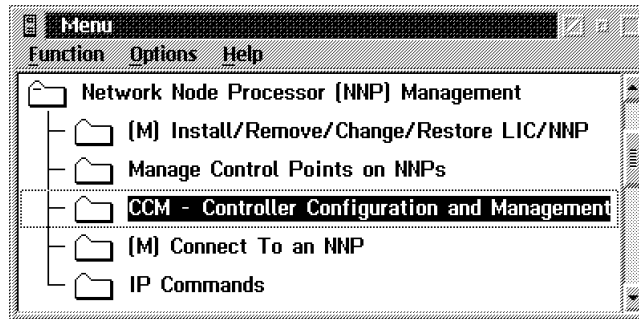


Figure 3-5. CCM

- d. \_\_\_\_ Click on **file**, then click on **Import a configuration** .

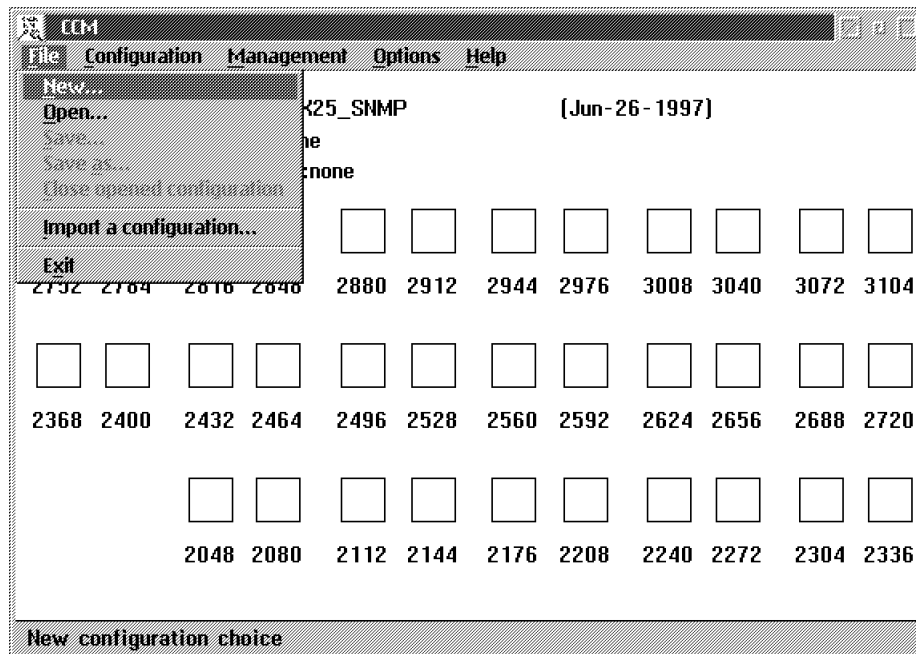


Figure 3-6. Importing a Configuration

- e. \_\_\_\_ Insert the diskette which contains the CCM config file, then click on **OK**.
- f. \_\_\_\_ Select the configuration to be imported , then click on **Import selected configuration** .

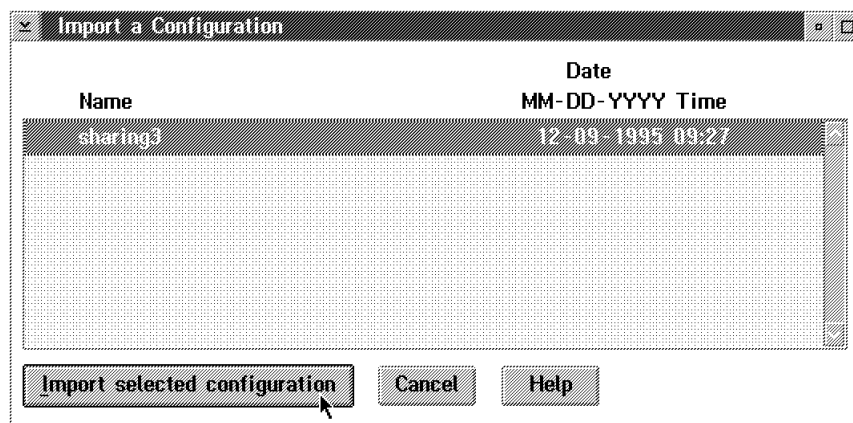


Figure 3-7. Importing a Configuration

- g. \_\_\_\_ When completed, click on **OK** , then click on **Cancel**
- h. \_\_\_\_ Click on **File**, click on **Open**
- i. \_\_\_\_ Select the config file that you just imported , then click on **Activate** and verify that a "A" is displayed on the left side of the configuration activated.

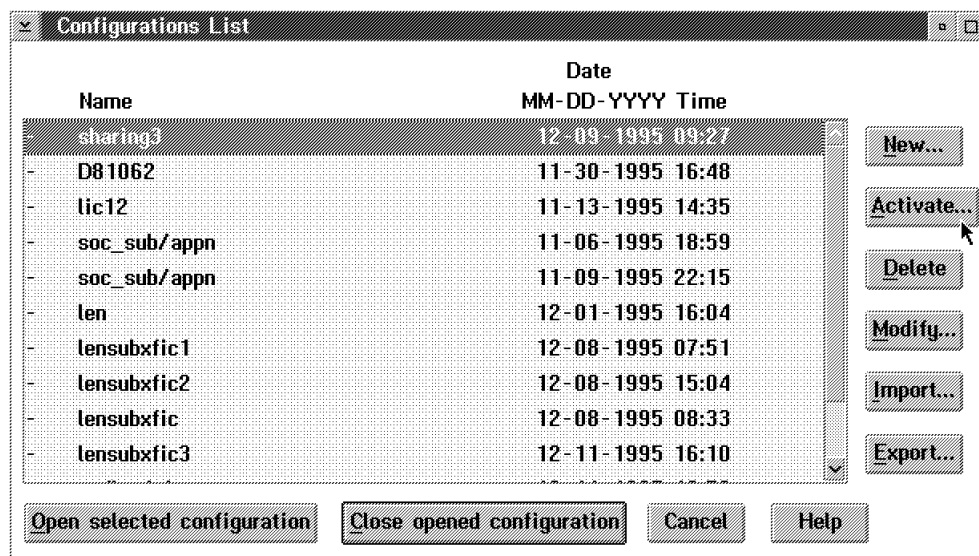


Figure 3-8. Activate a Configuration

#### Step 8. \_\_\_\_ Test the ESCON network

- Step a. \_\_\_\_ Route and temporarily plug the ESCON cables of the links to be tested into the ESCC connectors. Install the cables according to the plugging sheets obtained from the customer (refer to Figure 4-5 on page 4-6 and Figure B-8 on page B-6 to locate the connectors).

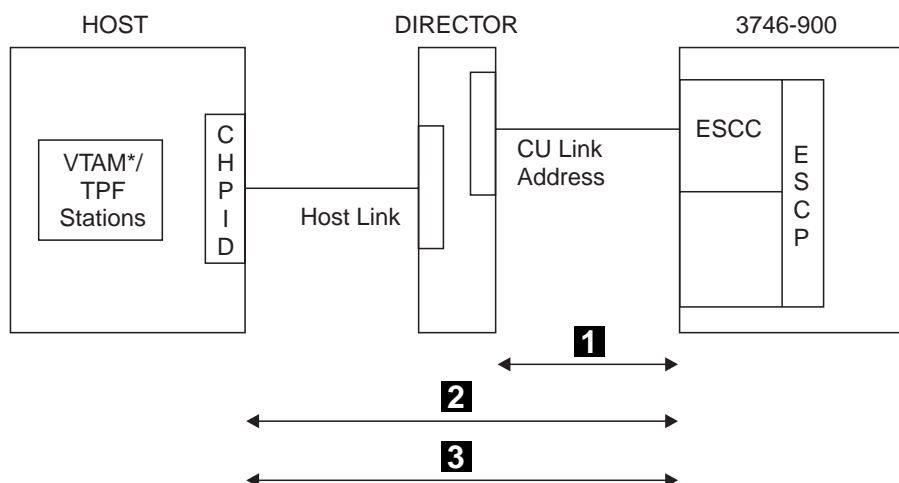


Figure 3-9. Typical ESCON Link between a 3746-9x0 and a Host

Step b. \_\_\_\_ To validate the link between the ESCC and the host:

From the **service processor console**, establish the path **2** from the ESCC to the Channel Path ID (CHPID) of the host, and verify that the **Path Status** of the host link is **Path**. Display the host link status as follow:

- 1) \_\_\_\_ Click on the **3746-9x0** icon..
- 2) \_\_\_\_ Click on **Configuration Management**.
- 3) \_\_\_\_ Double click on **Manage ESCON processor**.
- 4) \_\_\_\_ Double click on the **ESCP** to be selected.
- 5) \_\_\_\_ Click on **Options**, click on **Manage ESCC status**.
- 6) \_\_\_\_ Click on **Enable**.
- 7) \_\_\_\_ Click on **Options**, click on **Send request and save**.
- 8) \_\_\_\_ Click on **OK** twice.
- 9) \_\_\_\_ Click on **Options**, click on **Return**.
- 10) \_\_\_\_ Click on **Refresh**, click on **One shot**.
- 11) \_\_\_\_ Verify on the **ESCON Configuration - Lines** Window that the **host link status** is **Path** (this means that the path is available). Then if you have an **ESCON director**, go to **step 8b12** , otherwise go to **step 8b14** .
- 12) \_\_\_\_ Verify the **Control unit link address**.  
To validate the Link **1** from the ESCC to the ESCON Director or to the Channel Path ID (CHPID), verify that the **Control Unit Link Address** received dynamically from the director is the same as the value entered by the customer when he defined the ESCA configuration.
- 13) \_\_\_\_ Record the **CU Link addr** (hex) value (CNTLUNIT LINK) and **Compare** this address to the output provided by the Customer.
- 14) \_\_\_\_ To leave the function, click on **Options** and from the pulldown menu select **Return**.



From the **MVS console**, activate the path **3** between the ESCC and the Channel Path ID (CHPID) of the host, ask the customer to **vary-ON vary-OFF** the specific device address and verify the status of the link (see example below of the MVS commands to vary on the line).

Enter the command: **V Path (XXX,YY), online**  
You will get the status: **IEE3021 PATH (XXX,YY) ONLINE**

**Note:** Before the 'Vary on', the path status was: "**Not physically available**".

Step c. \_\_\_\_ Unplug the cables installed in step 8a on page 3-9.

**Go to Chapter 4, "Cable Setup" on page 4-1 .**



---

## Chapter 4. Cable Setup

Which cables are to be installed?

- If **TRA** cables, go to “**Installing the TRA Cables**” on page 4-2 .
- If **ESCA** cables, go to “**Installing the ESCA Cables**” on page 4-4 .
- If **RVX** cables, go to “**Installing the RVX Cables**” on page 4-7 .

### Installing the TRA Cables

**Note:** If you are going to install **unshielded twisted-pair (UTP)** cables, go to “Unshielded Twisted-Pair Cables” on page 4-3

### Shielded Cables

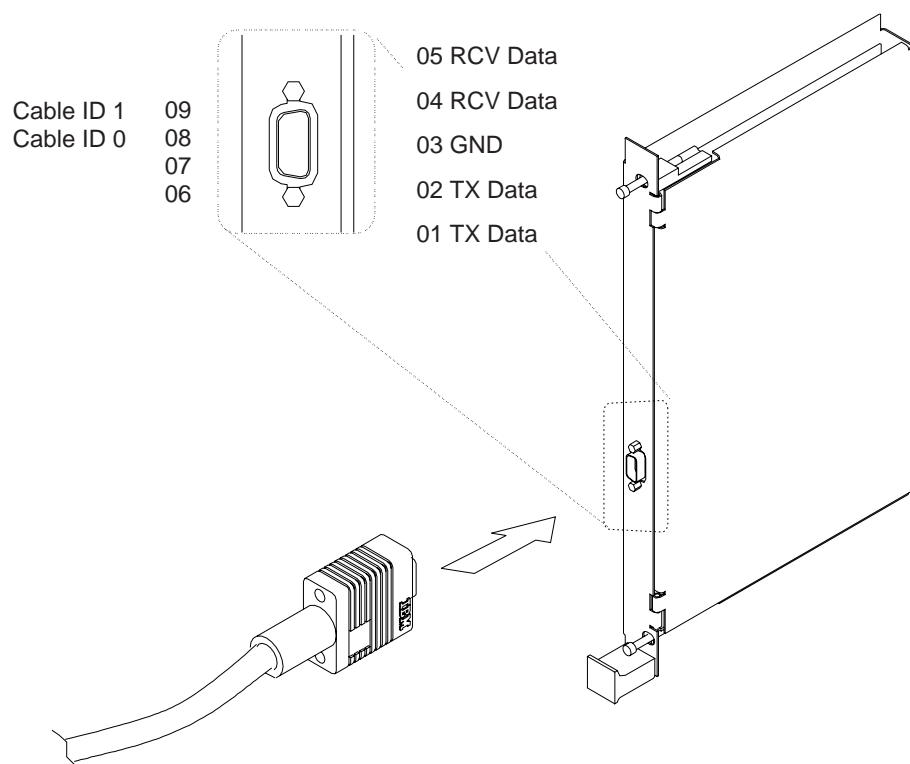


Figure 4-1. TIC3 (Token-Ring 16Mbps)

Step 1. \_\_\_ Obtain the plugging sheets from the customer (prepared using the *3745 Communication Controller Models A and 3746 Models 900 and 950: Physical Planning, GA27-4238*).

Step 2. \_\_\_ Plug the TRA cables into the TIC3 couplers accordingly.

For the coupler location, refer to Figure B-8 on page B-6.

## Unshielded Twisted-Pair Cables

The token-ring Multistation Access Unit (MAU) may be attached to a TIC3 using unshielded twisted-pair cables with 100-ohm impedance. In that case, a token-ring UTP Media Filter (PN 43G3875) is installed between the TIC3 connector and the cable (see Figure 4-2).

- Step 1. \_\_\_ Obtain from the shipping group the Token-Ring UTP media filters and plug these filters into the appropriate location according to the plugging sheet (prepared using the *3745 Communication Controller Models A and 3746 Models 900 and 950: Physical Planning*, GA27-4238).
- Step 2. \_\_\_ Plug the UTP cables into the filters.

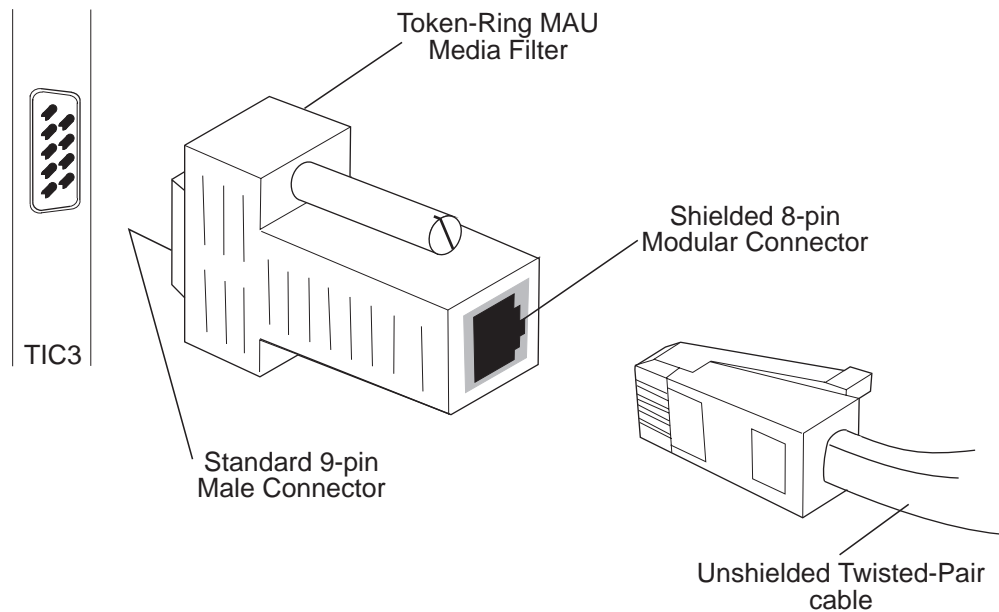


Figure 4-2. Connecting The UTP Cables

### Which other cables do you have to install?

- If **ESCA** cables, go to “Installing the ESCA Cables” on page 4-4 .
- If **RVX** cables, go to “Installing the RVX Cables” on page 4-7 .
- If there are **No more** cables to be installed. Go to **Chapter 5**, “Installing the 3746-950 Ground Brackets” on page 5-1 .

## Installing the ESCA Cables

**Note:** With the new machines, brackets PN 76F9407 and 58G5503 are no more shipped, if you did not received any of these brackets, go to step 2 on page 4-6.

1. If there is a raised floor and:

- If you have a bracket **2** with PN 76F9407 and the guide **3** with PN 69F2204 (see Figure 4-3) install as follows:

- Step a. \_\_\_ **loosen** the 2 screws **1** maintaining the cover of the AC 1 power supply
- Step b. \_\_\_ **Install** the bracket **2** (PN 76F9407), tighten the 2 screws **1**. See Figure 4-3
- Step c. \_\_\_ **Slide** the optical fiber guide **3** (PN 69F2204) in the bracket **2**, tighten the screw **4**.

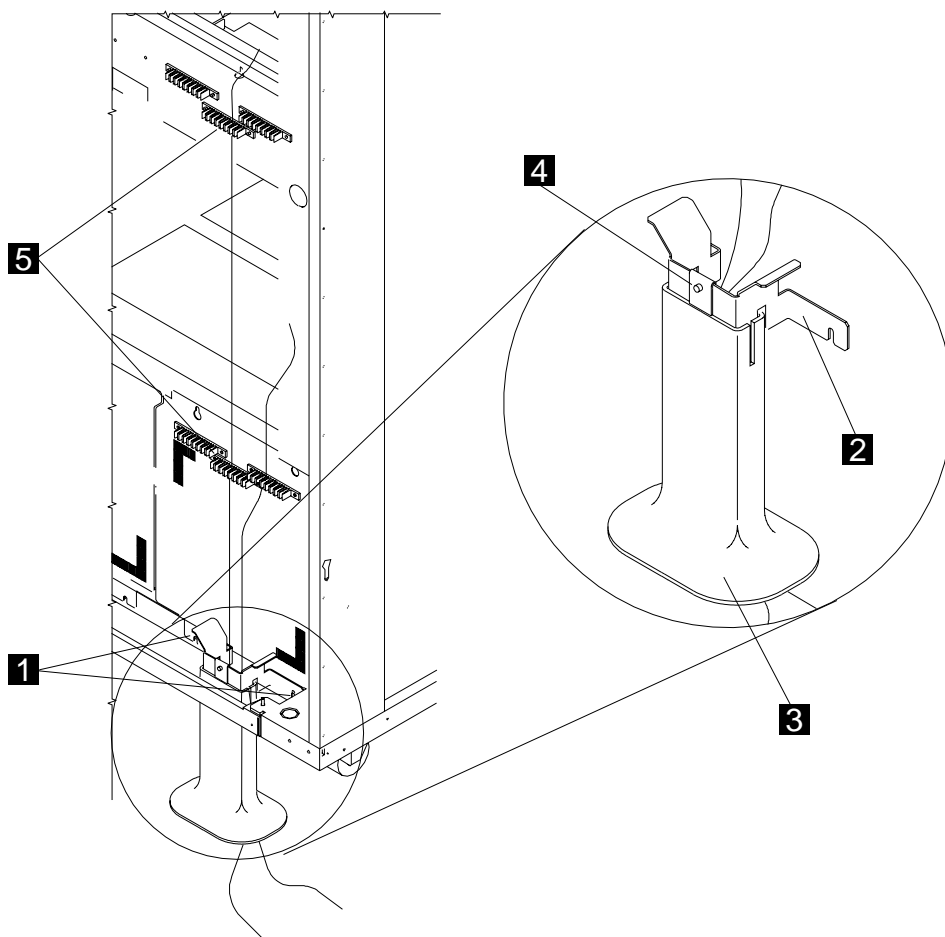


Figure 4-3. Routing the Optical Fibers

- If you have a bracket **2** with PN 58G5503 and the guide **3** with PN 58G5504 (see Figure 4-4) install as follows:

- Step a. \_\_\_ **Remove** the 2 screws **6** maintaining the cover of the AC 1 power supply
- Step b. \_\_\_ **Install** the two spacers **4** (PN 58G5711) and the bracket **2** (PN 58G5503) using two screws **1** (PN 1621214) See Figure 4-4
- Step c. \_\_\_ **Install** the optical fiber guide **3** (PN 58G5504) and tighten the 2 screws **1**.

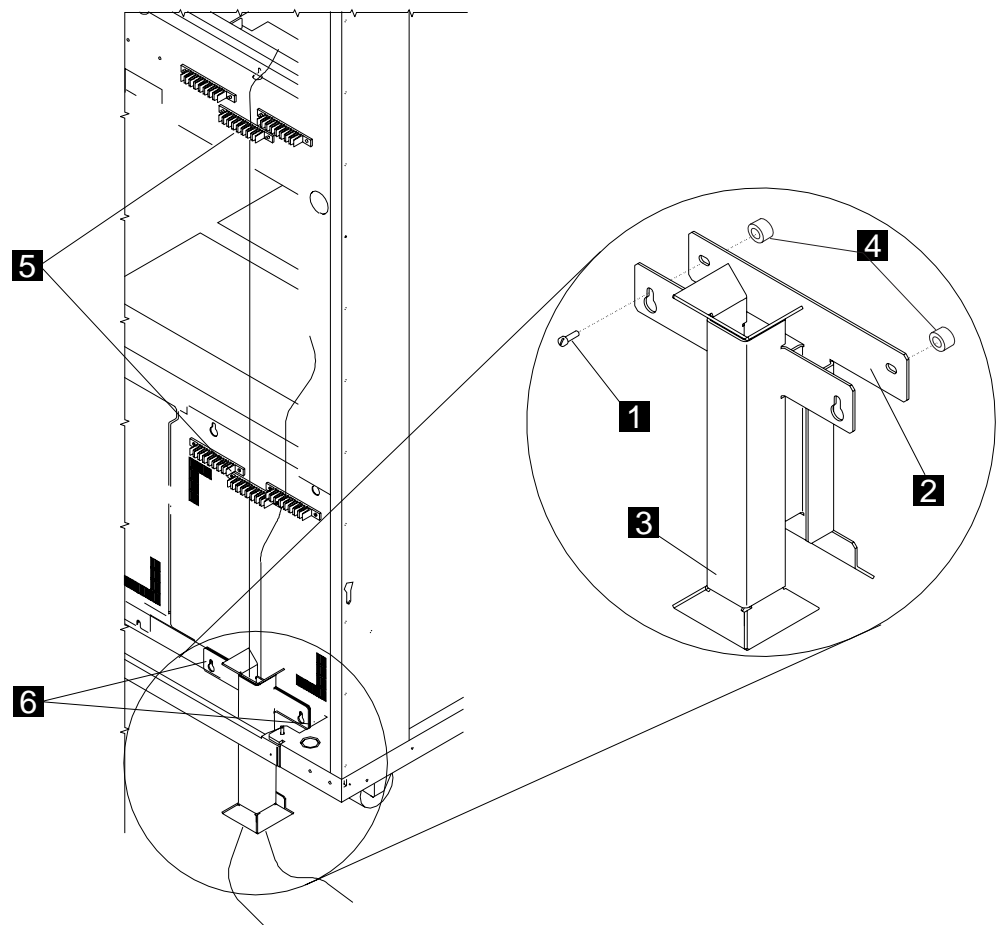


Figure 4-4. Routing the Optical Fibers

## Cable Setup Procedures

2. **Obtain the plugging sheets from the customer (prepared using the 3745 Communication Controller Models A and 3746 Models 900 and 950: Physical Planning, GA27-4238) and plug the ESCA cables as follows: (see Figure 4-5)**

Step a. \_\_\_ **Route** the cables through the optical fiber guide if installed and insert the cables into the retaining strips **5**. (see Figure 4-3 on page 4-4 or Figure 4-3 on page 4-4)

Step b. \_\_\_ **Loosen** the screws **1**.

Step c. \_\_\_ **Slide** the bracket **2** upwards, plug the ESCA cable into the cassette.

**Note:** To properly plug the ESCA connectors, apply pressure simultaneously to both grooved angled shoulders on the connectors.

Step d. \_\_\_ **Slide** the bracket **2** downwards, then tighten the screws **1**

For the coupler location refer to Figure B-8 on page B-6.

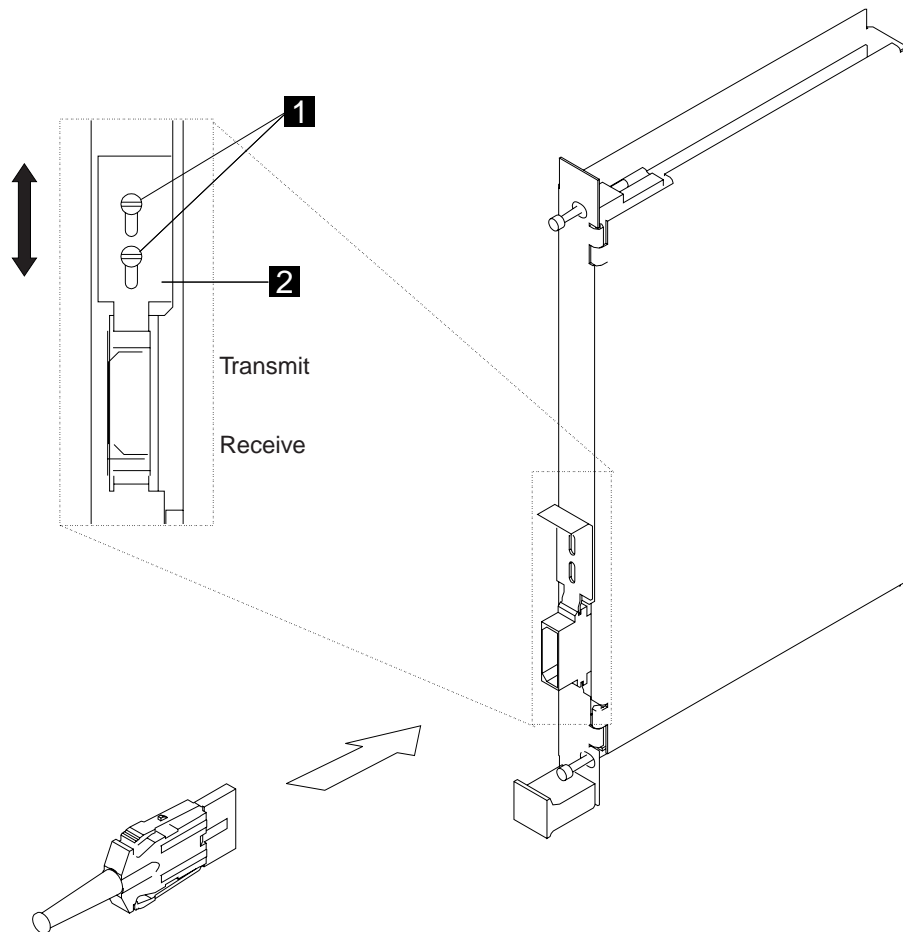


Figure 4-5. ESCA Cable Plugging

Do you have to install RVX cables? \_\_\_\_\_

- If **Yes**, go to “Installing the RVX Cables” on page 4-7 .
- If **No**, go to **Chapter 5**, “Installing the 3746-950 Ground Brackets” on page 5-1 .



## Installing the RVX Cables

Obtain (from the customer) the plugging sheets described in the appendix of the *3745 Communication Controller Models A and 3746 Models 900 and 950: Physical Planning*, GA27-4238, where all the information required to install the LCBs and cables is recorded.

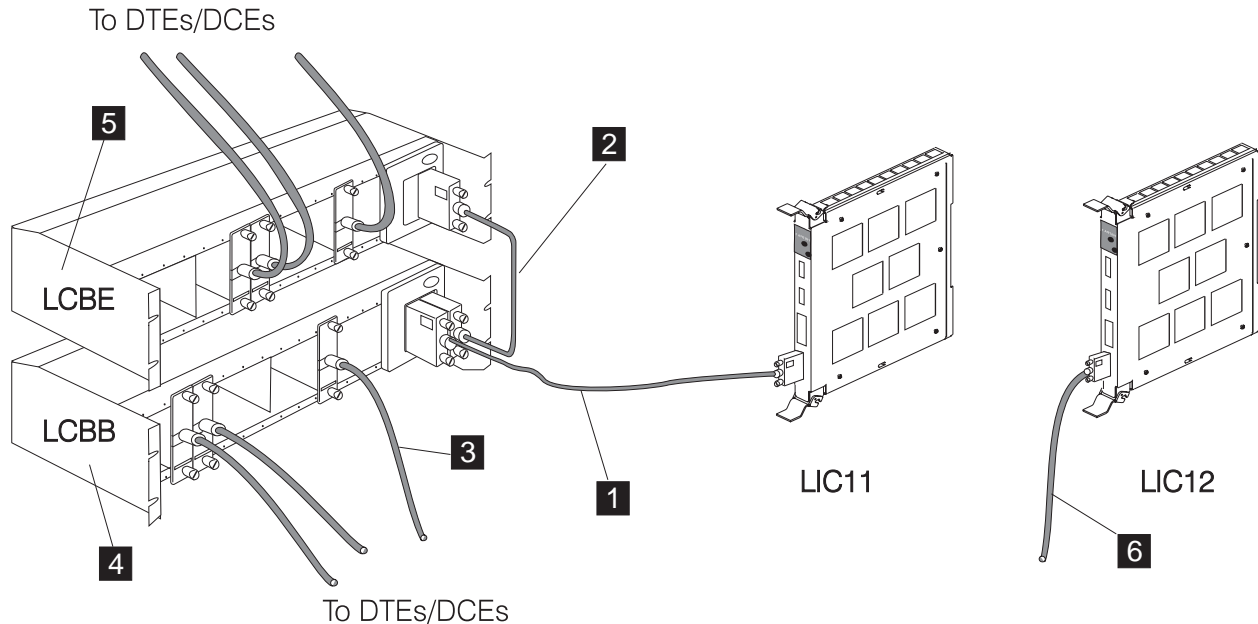


Figure 4-6. RVX Cables

There are **two** different **Line Interface Couplers** (LIC11 and LIC12):

1. The **LIC11** is connected to the DTE/DCE using the following cables:
  - a. Cable **1** is used to connect the LIC11s to the LCBB (see “Installing the Cables From LIC11-to-LCBB” on page 4-9 for details of the installation).
  - b. Cable **2** is used to connect the LCBBs to the LCBEs (see “Installing the LCBs and Cable from the LCBB to LCBE” on page 4-8 for details of the installation).
  - c. Cable **3** is used to connect the LCBB/LCBE ARC location to the DTE/DCE (see “Installing the ARCs and Cables” on page 4-10 for details of the installation).

**Note:** This cable is connected to the ARC plugged in the LCB or, if the ARC is part of the cable, it is directly connected into the LCB.
2. The **LIC12** is connected to the DTE/DCE using the following cable:
  - Cable **6** is used to directly connect the LIC12 to the DTE/DCE (see “LIC12 Cable Installation” on page 4-19 for details of the installation).

There are **two** types of **Line Connection Boxes** (LCB):

1. The **Line Connection Box Base** **4** (LCBB)
2. The **Line Connection Box Expansion** **5** (LCBE)

**Note:** Two LCBs (two LCBBs or one LCBB+ one LCBE) can be installed in the 3746-900 frame in locations 07D-A1 and 07D-B1 (see Figure B-1 on page B-1). These LCBs are installed by manufacturing.

### Installing the LCBs and Cable from the LCBB to LCBE

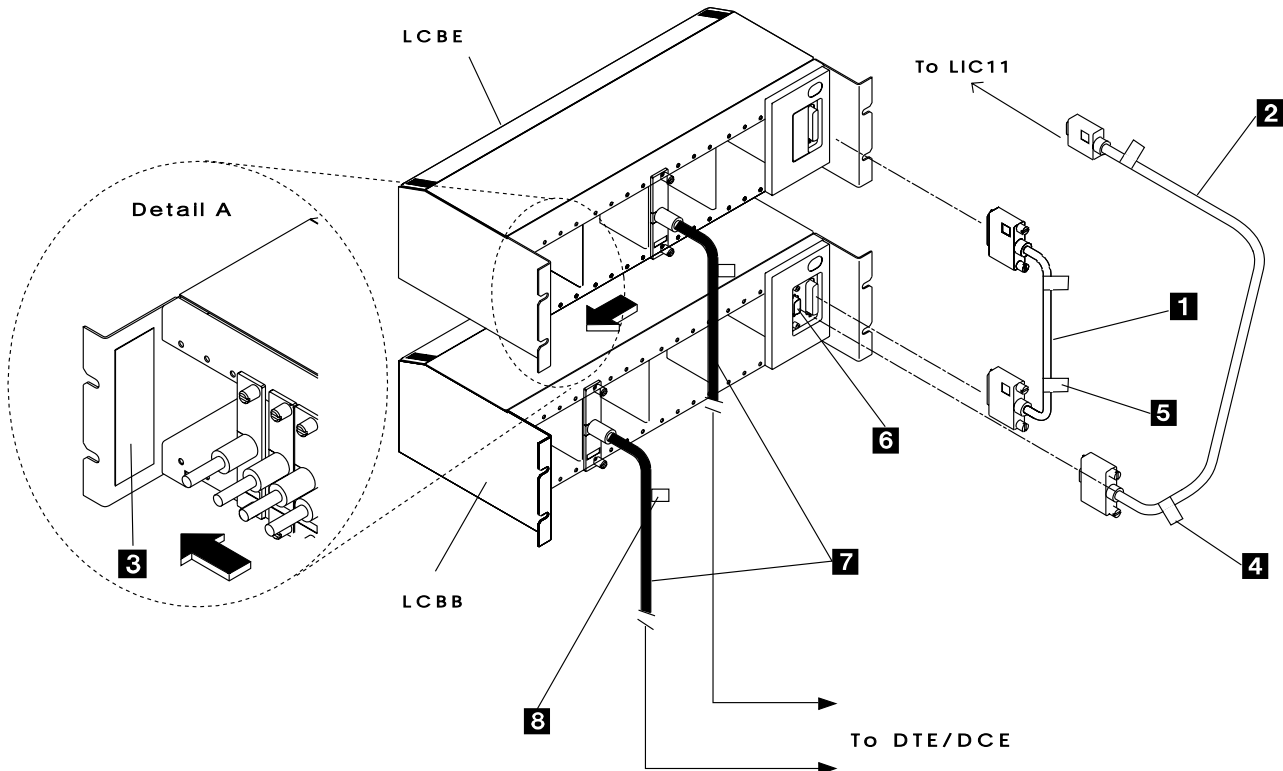


Figure 4-7. LCBB and LCBE Connection

1. \_\_\_\_ **Unpack** the LCB and obtain (from the shipping group) the different labels which will be used to identify the LCB and cables (at the end of the installation, save the unused labels for further needs).
2. \_\_\_\_ Start **installing** the LCBs **from the bottom** of the rack. The LCBE is always installed on top of its associated LCBB (see Figure 4-7).
3. \_\_\_\_ Refer to Figure C-5 on page C-6, and **install** and **fasten** the LCB in the 19 in. rack-mount using four captive nuts (PN 58G5766) and four screws (PN 1621230).
4. \_\_\_\_ Using the label **3** (PN 63F2503), **identify** this LCB by recording the following information:
  - a. The **3746-900 name**.
  - b. The **LCB number/location** (up to 25 characters).
  - c. The **NCP range address** (see following note)

**Note:** Record the same address on the other labels used to identify the (LIC11 to LCB) cable and the ARC/cable of the same link.

5. \_\_\_\_ **Stick** the label on the LCB (see detail A **3** in Figure 4-7).
6. \_\_\_\_ If you have installed one LCBB and one LCBE, **install** cable **1** (PN 58G5700) between the LCBB and the LCBE. This cable is part of the LCBE shipping group (see cable **1** in Figure 4-7 on page 4-8).

**Note:** When installing an empty LCBE, it will not be detected in the CDF-E before an ARC is plugged or a CLP IML is performed.

## Installing the Cables From LIC11-to-LCBB

Obtain (from the shipping group) the low/medium speed line attachment cables ordered by the customer (see Table 4-1 for cable characteristics).

Table 4-1. Low/Medium-Speed Line Attachment Cables			
Cable Part Number		Feature Code	Length Meters (Feet)
World Wide	World Wide Except Canada		
58G5601 (1)	58G5705 (1)	9913 (1)	1.3 (4)
17G5915 (2)	58G5717 (2)	9715 (3)	7 (23)
58G5602	58G5706	9714 (3)	7 (23)
17G5916 (2)	58G5718 (2)	9717 (3)	15 (50)
58G5603	58G5707	9716 (3)	15 (50)
17G5917 (2)	58G5719 (2)	5219	35 (115)
58G5604	58G5708	5218	35 (115)
17G5918 (2)	58G5720 (2)	5221	70 (230)
58G5605	58G5709	5220	70 (230)
17G5919 (2)	58G5721 (2)	5223	105 (345)
58G5606	58G5710	5222	105 (345)

**Note:**

1. This cable is connected from a LIC11 to the LCBB installed in the 3746-900 frame and it is identified by a specify code.
2. Plenum cable for U.S.A. and Canada only.
3. This code is a specify code.

For each LCBB installed in the 3746-900 frame, the cable (PN 17G5826) is already connected in the LCBB. Connect the LIC side of the cable to the appropriate LIC11 according to the worksheet information.

Install the LIC11-to-LCBB cables (see cable **2** in Figure 4-7 on page 4-8) as follows:

1. \_\_\_\_ Using two labels **4** (PN 63F2504), **identify** the cables by recording the following information:
  - a. The **3746-900 name**.
  - b. The **LCB number/location** (up to 25 characters).
  - c. The **NCP range address**.
2. \_\_\_\_ **Stick** the labels **4** on the two leads of the cable at about 220 mm (9 in.) from the edges.
3. \_\_\_\_ **Connect** the cable **2** from the LCBB connector **6** to the LIC11 connector according to the plugging sheet information.

**Note:** For the LIC11 location, refer to Figure B-8 on page B-6.

## Installing the ARCs and Cables

Obtain (from the 3746-900 shipping group) the ARC and cables ordered by the customer (see tables on the following pages).

### Notes:

1. The ARC can be part of the cable (assembly A) or separate from the cable (assembly B). See Figure 4-8.
2. When the ARC and cables will be plugged, using tie wraps to route properly the cables along the frame and allow easy access for further repair actions.

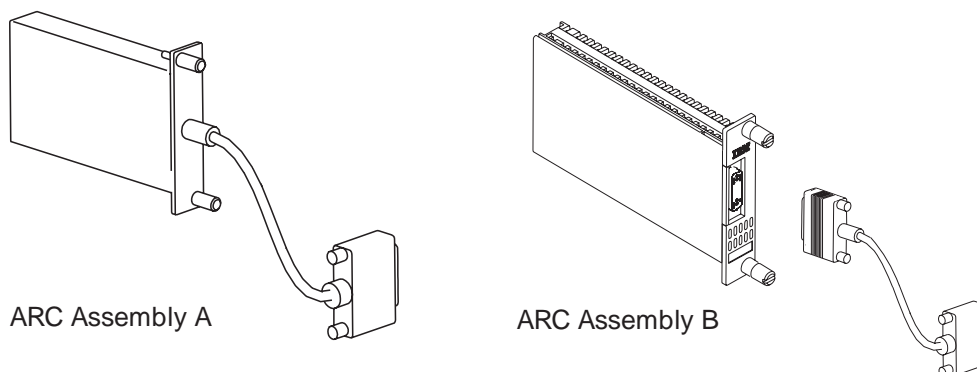


Figure 4-8. ARC Assembly A and B

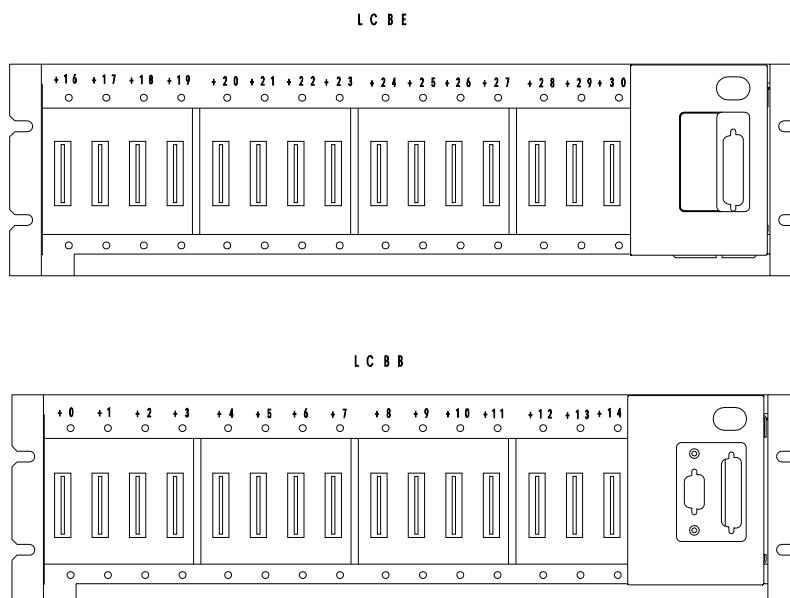


Figure 4-9. ARC Location in the LCBB and LCBE

## Active Remote Connector (ARC) Assembly A

Table 4-2. Active Remote Connector (ARC) Assembly A				
ARC Type	ARC Name	Feature Code	Length m (ft)	Wrap Plug
ARC V.24 DTE	ARC1B	6400	15 (50)	61F4523
ARC V.24 DCE	ARC1A1 ARC1A2	6405 6415	5 (16) 12 (40)	61F4522 61F4522
ARC V.35 DTE (see Note 1)	ARC3B	6500	15 (50)	61F4527
ARC V.35 DCE (see Note 2)	ARC3A1 ARC3A2	6505 6515	5 (16) 15 (50)	61F4526 61F4526
ARC X.21 DTE	ARC4B	6600	15 (50)	61F4530
ARC X.21 DCE	ARC4A1 ARC4A2	6605 6615	5 (16) 15 (50)	61F4529 61F4529
ARC X.21 DCE Transfix	ARC4A3 ARC4A4	6630 6635	5 (16) 15 (50)	61F4529 61F4529
ARC/3745 V.24 DTE (see Note 3)	ARC1D	<b>(NLP)</b>	5 (16)	61F4525
ARC/3745 V.24 DCE (see Note 3)	ARC1C	6485	5 (16)	61F4525
ARC/3745 V.35 DTE (see Note 3)	ARC3D	<b>(NLP)</b>	5 (16)	61F4578
ARC/3745 V.35 DCE (see Note 3)	ARC3C	6585	5 (16)	61F4528
ARC/3745 X.21 DTE (see Note 3)	ARC4D	<b>(NLP)</b>	5 (16)	65X8927
ARC/3745 X.21 DCE (see Note 3)	ARC4C	6625	5 (16)	65X8927
<b>Note:</b> 1. When connected to a <b>French DTE</b> , connect the adapter (PN 65X9899) between the cable and the DTE. 2. When connected to a <b>French DCE</b> , connect the adapter (PN 1749352) between the cable and the DCE. 3. Connect these cables to the 3745 cables according to the ARC type. If 3745 RPQ plenum cables must be connected, see: <i>Migration and Planning Guide</i> , GA33-0183				

**Note:** **(NLP)** No longer provided.

## Active Remote Connector (ARC) Assembly B with Cables

Table 4-3. ARC V.24 and Standard Cables

ARC Type	To	ARC Name	Length m (ft)	Feature Code
V.24	DCE	ARC1A0	1.2 (4)	6406
V.24	DCE		2.4 (8)	6404
V.24	DCE		5 (17)	6405
V.24	DCE		12 (40)	6415
V.24	DTE	ARC1B0	15 (50)	6400
V.24 (3745)	DCE		5 (17)	6485

Table 4-4. ARC V.35 and Standard Cables

ARC Type	To	ARC Name	Length m (ft)	Feature Code
V.35 (see Note 1)	DCE	ARC3A0	1.2 (4)	6506
V.35 (see Note 1)	DCE		2.4 (8)	6504
V.35 (see Note 1)	DCE		5 (17)	6505
V.35 (see Note 1)	DCE		15 (50)	6515
V.35 (see Note 2)	DTE	ARC3B0	15 (50)	6500
V.35 (3745)	DCE		5 (17)	6585

**Note:**

1. When connected to a **French DTE**, connect the adapter (PN 65X9899) between the cable and the DTE.
2. When connected to a **French DCE**, connect the adapter (PN 1749352) between the cable and the DCE.

Table 4-5. ARC X.21 and Standard Cables

ARC Type	To	ARC Name	Length m (ft)	Feature Code
X.21	DCE	ARC4A0	1.2 (4)	6606
X.21	DCE		2.4 (8)	6604
X.21	DCE		5 (17)	6605
X.21	DCE		15 (50)	6615
X.21	DTE	ARC4B0	15 (50)	6600
X.21 (Transfix)	DCE	ARC4E0	15 (50)	6635
X.21 (3745)	DCE		5 (17)	6625

## Cables for ARC Assembly B

<i>Table 4-6. Standard Cables for ARC</i>				
Cable Type	To	Length m (ft)	Current Part Number	Old Part Number (See Note 1)
V.24	DCE	.6 (2)	(NLP)	58G5610
V.24	DCE	1.2 (4)	02L3280	58G5611
V.24	DCE	2.4 (8)	02L3281	58G5612
V.24	DCE	5 (17)	02L3281	58G5613
V.24	DCE	10 (33)	(NLP)	58G5614
V.24	DCE	12 (40)	02L3283	58G5615
V.24	DTE	15 (50)	02L3284	58G5616
V.24 (3745)	DCE	.6 (2)	(NLP)	58G5640
V.24 (3745)	DCE	1.2 (4)	(NLP)	58G5641
V.24 (3745)	DCE	2.4 (8)	(NLP)	58G5642
V.24 (3745)	DCE	5 (17)	58G5643	58G5643
V.24 (3745)	DTE	5 (17)	(NLP)	58G5644
V.35	DCE	.6 (2)	(NLP)	58G5620
V.35	DCE	1.2 (4)	02L3285	58G5621
V.35	DCE	2.4 (8)	02L3286	58G5622
V.35	DCE	5 (17)	02L3287	58G5623
V.35	DCE	10 (33)	(NLP)	58G5624
V.35	DCE	15 (50)	02L3288	58G5625
V.35	DTE	15 (50)	02L3289	58G5626
V.35 (3745)	DCE	.6 (2)	(NLP)	58G5645
V.35 (3745)	DCE	1.2 (4)	(NLP)	58G5646
V.35 (3745)	DCE	2.4 (8)	(NLP)	58G5647
V.35 (3745)	DCE	5 (17)	58G5648	58G5648
V.35 (3745)	DTE	5 (17)	(NLP)	58G5649
X.21	DCE	.6 (2)	(NLP)	58G5630
X.21	DCE	1.2 (4)	02L3290	58G5631
X.21	DCE	2.4 (8)	02L3291	58G5632
X.21	DCE	5 (17)	02L3292	58G5633
X.21	DCE	10 (33)	(NLP)	58G5634
X.21	DCE	15 (50)	02L3293	58G5635
X.21	DTE	15 (50)	02L3294	58G5636
X.21 (Transfix)	DCE	5 (17)	(NLP)	58G5637
X.21 (Transfix)	DCE	15 (50)	02L3295	58G5638
X.21 (3745)	DTE	5 (17)	(NLP)	58G5654
X.21 (3745)	DCE	.6 (2)	(NLP)	58G5650
X.21 (3745)	DCE	1.2 (4)	(NLP)	58G5651
X.21 (3745)	DCE	2.4 (8)	(NLP)	58G5652
X.21 (3745)	DCE	5 (17)	56G5653	58G5653

## Cable Setup Procedures

### Notes:

1. Old cables can be used but not ordered for 3746-9x0.
2. NLP: This cable is no longer provided.

Depending on the ARC assembly received, go to the corresponding pages:

- **ARC assembly A:** "Connecting the ARC Assembly A to the LCBB/LCBE" on page 4-15.
- **ARC assembly B:** "Connecting the ARC Assembly B to the LCBB/LCBE" on page 4-16.



## Connecting the ARC Assembly A to the LCBB/LCBE

According to the plugging sheet information, install the ARC/cables as follows (see Figure 4-7 on page 4-8):

1. \_\_\_\_ Using two labels **8** (PN 63F2505), **identify** the cables by recording the following information:
  - a. The **3746-900 name**.
  - b. The **LCB number/location** (up to 25 characters).
  - c. The **NCP range address**.
  - d. The **connector position** (+0 to +14 or +16 to +30).
  - e. The **symbolic line name** (up to eight characters).
2. \_\_\_\_ **Stick** the labels **8** on the two leads of the cable at about 220 mm (9 in.) from the edges.
3. \_\_\_\_ **Plug** the cable into the LCBB/LCBE ARC position (+0 to +14 for the LCBB, or +16 to +30 for the LCBE). See Figure 4-9 on page 4-10.

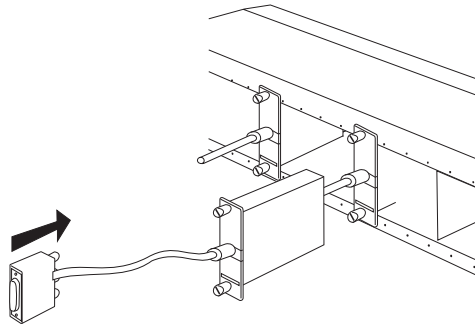


Figure 4-10. ARC/Cable Installation

4. \_\_\_\_ Determine the ARC connection type: 3746-900 or 3745.

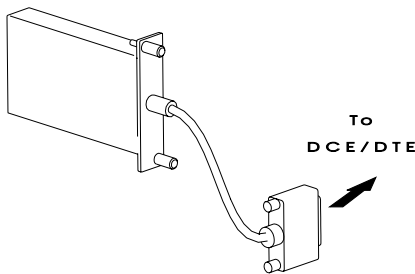


Figure 4-11. ARC Connection Type 3746-900

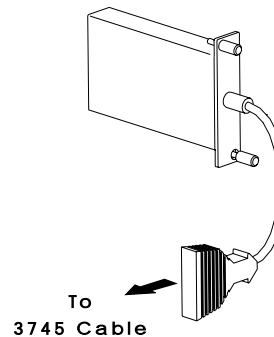


Figure 4-12. ARC Connection Type 3745

To connect an ARC connection type:

- **3746-900**: go to “Connecting the Cable Connector Type 3746-900 to the DCE/DTE” on page 4-18.
- **3745**: go to “Connecting the Cable Connector Type 3745 to the DCE/DTE” on page 4-19.

### Connecting the ARC Assembly B to the LCBB/LCBE

1. \_\_\_\_ According to the plugging sheet information, identify the ARC type (see Figure 4-13, note that ARC V.35 DTE is no more provided) and plug the ARC in the LCBB/LCBE locations (see Figure 4-9 on page 4-10).

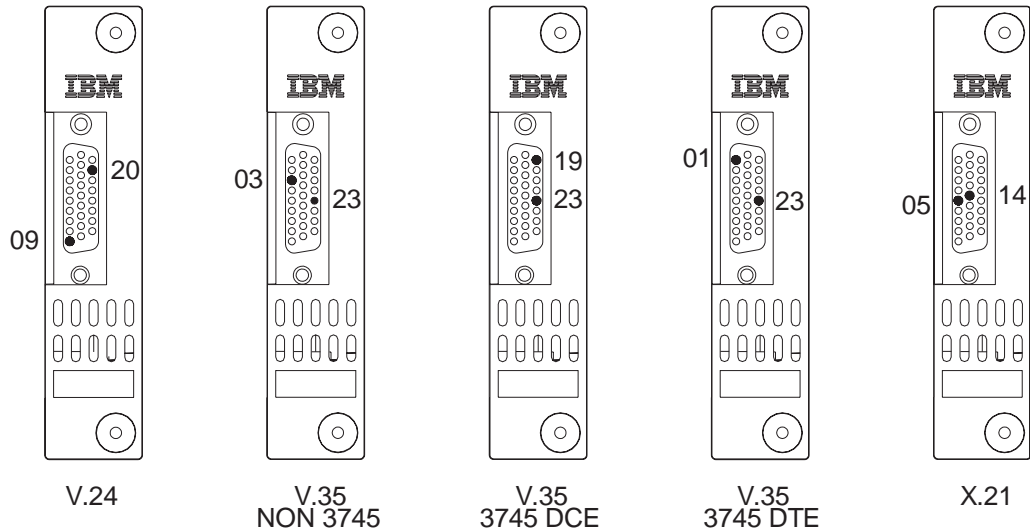


Figure 4-13. ARC Type

**Note:** The different ARCs are identified by labels and key pins which avoid plugging a wrong cable in a specific ARC type.

2. \_\_\_\_ Tighten screws **A** to secure the ARC cassette.

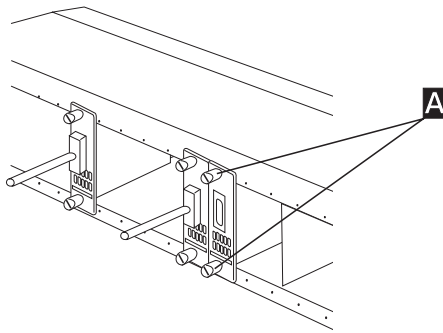


Figure 4-14. ARC Installation

3. \_\_\_\_ Obtain the corresponding cables to the ARCs installed in Step 1. Using two labels (PN 63F2505), **identify** these cables by recording the following information:
  - a. The **3746-900 name**.
  - b. The **LCB number/location** (up to 25 characters).
  - c. The **NCP range address**.
  - d. The **connector position** (+0 to +14 or +16 to +30)
  - e. The **symbolic line name** (up to eight characters).

4. \_\_\_\_ **Stick** the labels on the two leads of the cable at about 220 mm (9 in.) from the edges.
5. \_\_\_\_ **Connect** the cable into the ARC plugged in positions (+0 to +14 for the LCBB, or +16 to +30 for the LCBE). See Figure 4-9 on page 4-10. Tighten these cables with two screws **G**.

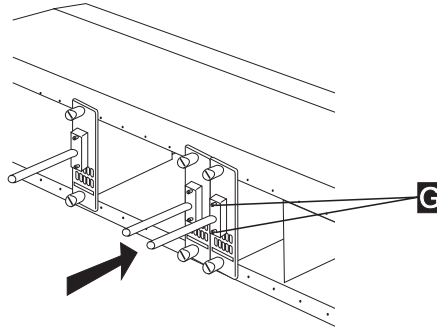


Figure 4-15. Cable Installation

6. \_\_\_\_ Determine the cable connector type plugged on the ARCs (see Figure 4-16 and Figure 4-17).

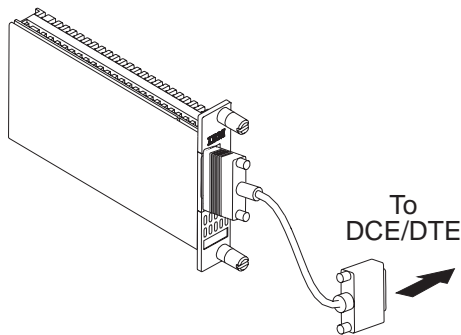


Figure 4-16. Cable Connector Type 3746-900

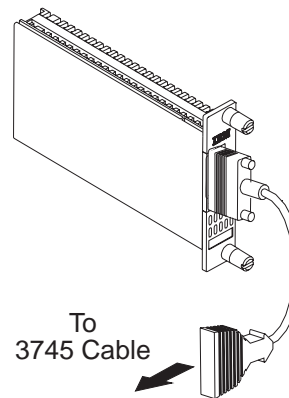


Figure 4-17. Cable Connector Type 3745

To connect a cable type:

- **3746-900**: go to “Connecting the Cable Connector Type 3746-900 to the DCE/DTE” on page 4-18.
- **3745**: go to “Connecting the Cable Connector Type 3745 to the DCE/DTE” on page 4-19

### Connecting the Cable Connector Type 3746-900 to the DCE/DTE

Plug cable connectors **type 3746-900** (ARC 1A1, 1A2, 3A1, and 3A2) to the DCEs. Plug cables ARC 1B and 3B to the DTEs.

The **adapters** (PN 1749352 and PN 65X9899) plugged between the cable and the DTE/DCE are optional. They are country dependant (see the following notes):

1. If you are connecting a **V.35 DCE (ARC 3A1 or 3A2)** to a **French modem**, connect one adapter (PN 1749352) between the modem and the cable (see Figure 4-18). Connect **connector 1** to the **cable** and **connector 2** to the **modem**.



Figure 4-18. Adapter for ARC 3A1 or 3A2 (PN 1749352)

2. If you are connecting a **V.35 DTE (ARC 3B)** to a **French terminal**, connect one adapter (PN 65X9899) between the terminal and the cable (see Figure 4-19). Connect **connector 1** to the **cable** and **connector 2** to the **terminal**.

**Note:** This ARC 3B is no more provided.

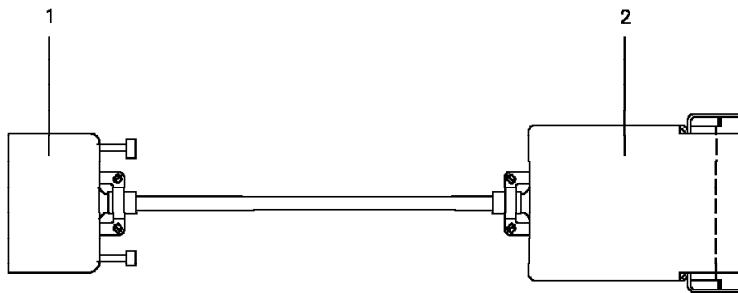


Figure 4-19. Adapter for ARC 3B (PN 65X9899)

### Connecting the Cable Connector Type 3745 to the DCE/DTE

Plug cable connectors **type 3745** (ARC 1C, 1D, 3C, and 3D) directly to the 3745 cables as follows (see Figure 4-20):

1. \_\_\_\_ Remove the seal **1** from the ARC/cable.
2. \_\_\_\_ Place the seal on the end of connector **3**.
3. \_\_\_\_ Plug the connector **2** into connector **3** firmly until you hear a click.

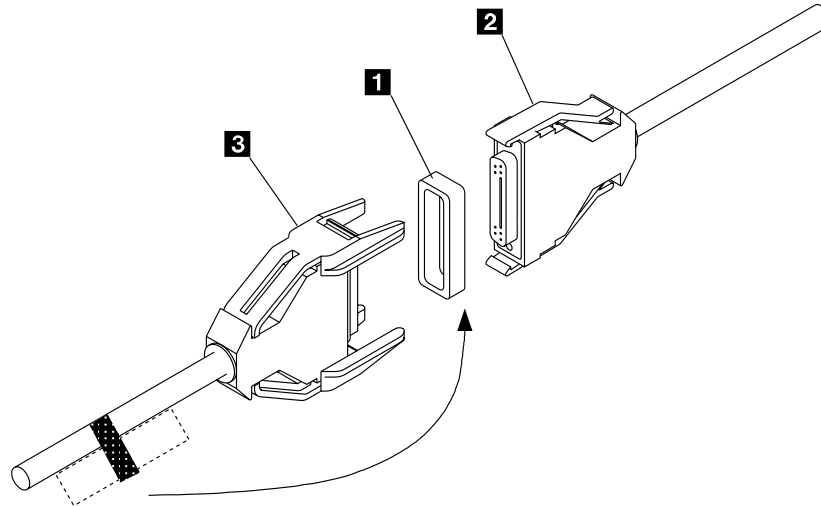


Figure 4-20. Connection of the Cable Type 3745

## LIC12 Cable Installation

Obtain (from the 3746-900 shipping group) the LIC cables ordered by the customer (see Table 4-7).

Table 4-7. High-Speed Line Attachment Cables

Part Number	Cable Type	Cable Group	Fixed Length m (ft)	Variable Length m (ft)	
				Short Cable	Long Cable
58X9344	V.35 DCE	5831	10 (33)	Up to 10 (33)	Up to 35 (115)
76F8633 (1)	V.35 DCE	7007	10 (33)	Up to 10 (33)	Up to 35 (115)
58X9345	X.21 DCE	5833	10 (33)	Up to 10 (33)	Up to 100 (328)
76F8634 (1)	X.21 DCE	7009	10 (33)	Up to 10 (33)	Up to 100 (328)
58X9347	V.35 DTE	5837	10 (33)	Up to 10 (33)	Up to 35 (115)
76F8635 (1)	V.35 DTE	7011	10 (33)	Up to 10 (33)	Up to 35 (115)
58X9348	X.21 DTE	5839	10 (33)	Up to 10 (33)	Up to 100 (328)
76F8636 (1)	X.21 DTE	7013	10 (33)	Up to 10 (33)	Up to 100 (328)
58X9346 (2)	X.21 Transfix	5835	10 (33)	Up to 10 (33)	Up to 100 (328)
11F4837	X.21 EIA-547 DCE	5844	10 (33)	Up to 10 (33)	
76F8637 (1)	X.21 EIA-547 DCE	7015	10 (33)	Up to 10 (33)	
11F4838	X.21 EIA-547 DTE	5845	10 (33)	Up to 10 (33)	
76F8638 (1)	X.21 EIA-547 DTE	7017	10 (33)	Up to 10 (33)	

**Note:** (1) Plenum cable for U.S.A and Canada only - (2) X.21 Transfix is available in France only.

According to the plugging sheet information:

1. \_\_\_\_ **Connect** the cables to the LIC12 (for location, refer to Figure B-8 on page B-6).
2. \_\_\_\_ **Connect** the other end of the cable to the DCE or DTE, depending on the cable type (refer to Table 4-7).

## Updating and Saving the CDF-E

These procedures are **required** only when **RVX cables** (LCB and ARC) are **installed**. During these procedures you must record and test the new resources, display and update the created CDF-E, and save this new CDF-E on diskette.

1. To IML the 3746-900 to record the LCB and ARC information:
  - a. \_\_\_\_ Obtain (from the customer) the **Plugging Sheet for 3746-900 LIC11** (this sheet is available in the *3745 Communication Controller Models A and 3746 Models 900 and 950: Physical Planning*, GA27-4238).
  - b. \_\_\_\_ Double click on the **3746-900** icon.
  - c. \_\_\_\_ Click on the **Operation Management**.
  - d. \_\_\_\_ Double click on **Perform General IML**.
  - e. \_\_\_\_ Click on **Yes** two times, to execute a **General IML with Diagnostics**.
  - f. \_\_\_\_ Click on **OK**, and wait for the end of IML indicated when the **3746-900** icon comes green.
2. To display and update the active CDF-E:
  - a. \_\_\_\_ Click on **Configuration Management**.
  - b. \_\_\_\_ Double click on **Display/Update Active Configuration (CDF-E)**.
  - c. \_\_\_\_ Verify (on the display screen) the presence of the LCBs and ARCs installed in previous steps (when an LCB and ARC is detected installed, the CDF-E displays **LCB/ARC** on the right side of the associated LIC11. If there is **no ARC** installed, only **LCB** is displayed).

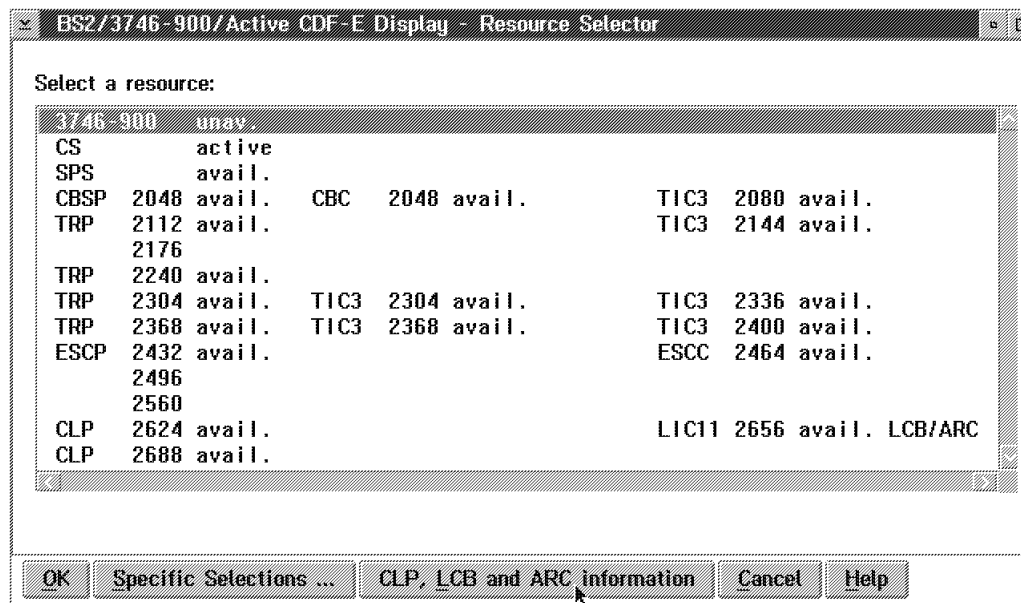


Figure 4-21. CLP Display

- d. \_\_\_\_ Click on **CLP, LCB and ARC information**.
- e. \_\_\_\_ Click on the **LIC11-LCB** line, then enter the **LCB number / location** of the LCB (or LCBE) according to the plugging sheet.

BS2/3746-900/Display and Update LCB geographical locations.

PRC name Line range status	LIC name Line range	LCB name	Geographical location
CLP 2624	LIC11 2656	LCBB	Room 4 Building B4
CLP 2624	LIC11 2656	LCBB	Room 4 Building B4
avail.		LCBE	Room 5 Building B4
CLP 2688			
avail.			

ARC information   Save   Cancel   Help

Figure 4-22. LCB Display

- f. \_\_\_\_ If you have to enter the information for only one LCB, click on **Save**, then click on **OK**. If you have to define more than one LCB, press **Enter**, then return to Step 2e on page 4-20. Then click on **ARC information**.
- g. \_\_\_\_ Click on the first **ARC** line and enter the **Symbolic Line Name** according to the customer information. Press **Enter**, then click on the other ARC lines and enter their symbolic line names.

BS2/3746-900/Display and Update ARC symbolic line names.

LCB range 2656-2671   LCB location Room 4 Building B4

ARC name	Line addr	Position	Symbolic line name
ARC1A2	2659	+ 3	ARC-01
		+ 0	
		+ 1	
		+ 2	
ARC1A2	2659	+ 3	ARC-01
		+ 4	
		+ 5	
		+ 6	
ARC1A2	2663	+ 7	ARC-02
		+ 8	
		+ 9	
ARC1A2	2667	+ 11	ARC-03
		+ 12	
		+ 13	
		+ 14	

Save   Cancel   Help

Figure 4-23. ARC Display

- h. \_\_\_\_ When all the ARCs are identified, click on **Save**, then click on **OK**.
- i. \_\_\_\_ Click on **Cancel** (3 times) to exit from the function .

## Cable Setup Procedures

3. To save the reference CDF-E on diskette:

- a. \_\_\_\_ Double click on **Save Active CDF-E as Reference**.
- b. \_\_\_\_ Click on **OK**.
- c. \_\_\_\_ When the save is completed, double click on **Copy Reference on diskette**.
- d. \_\_\_\_ Click on **OK**, insert the 3746-900 installation parameter diskette, then follow the prompts.

**Go to Chapter 5, “Installing the 3746-950 Ground Brackets” on page 5-1 .**



---

# Chapter 5. Installing the 3746-950 Ground Brackets

Installing the 3746-950 and Controller Expansion Ground Brackets . . . . . 5-2

Installing the 3746-950 Ground Brackets . . . . . 5-4

Installing the Controller Expansion Ground Brackets . . . . . 5-5

If the controller expansion is:

- **Attached** to the 3746-950 frame go to “Installing the 3746-950 and Controller Expansion Ground Brackets”
- **Detached** from the 3746-950 frame, go to “Installing the 3746-950 Ground Brackets” on page 5-4 and then go to “Installing the Controller Expansion Ground Brackets” on page 5-5.

**Note:** The ground brackets reduce the possibility of radio frequency interference that might be produced by the operating machine. A proper installation of the ground brackets is necessary to meet FCC requirements, and to conduct electrostatic discharges to ground.

---

### Installing the 3746-950 and Controller Expansion Ground Brackets

If installed, remove the two covers **1** by loosening their mounting screws.

Step 1. On the **3746-950 frame**:

- \_\_\_\_ Install the front ground plate **4** (PN 58G5677) and left ground plate **3** (PN 58G5676) using screws (PN 2665527) (refer to Figure 5-1 on page 5-3).

**Note:** Before securing the ground plate screws, push down on the plate to give it maximum contact with the floor.

- \_\_\_\_ Install the rear bracket **6** (PN 58G5675) using screws (PN 2665527).

Step 2. On the **controller expansion frame**:

- \_\_\_\_ Install the front ground plate **5** (PN 58G5675) and the right ground plate **3** (PN 58G5676) using screws (PN 2665527) (refer to Figure 5-1 on page 5-3).
- \_\_\_\_ Install the rear bracket **6** (PN 58G5675) using screws (PN 2665527), then re-install covers **1**.

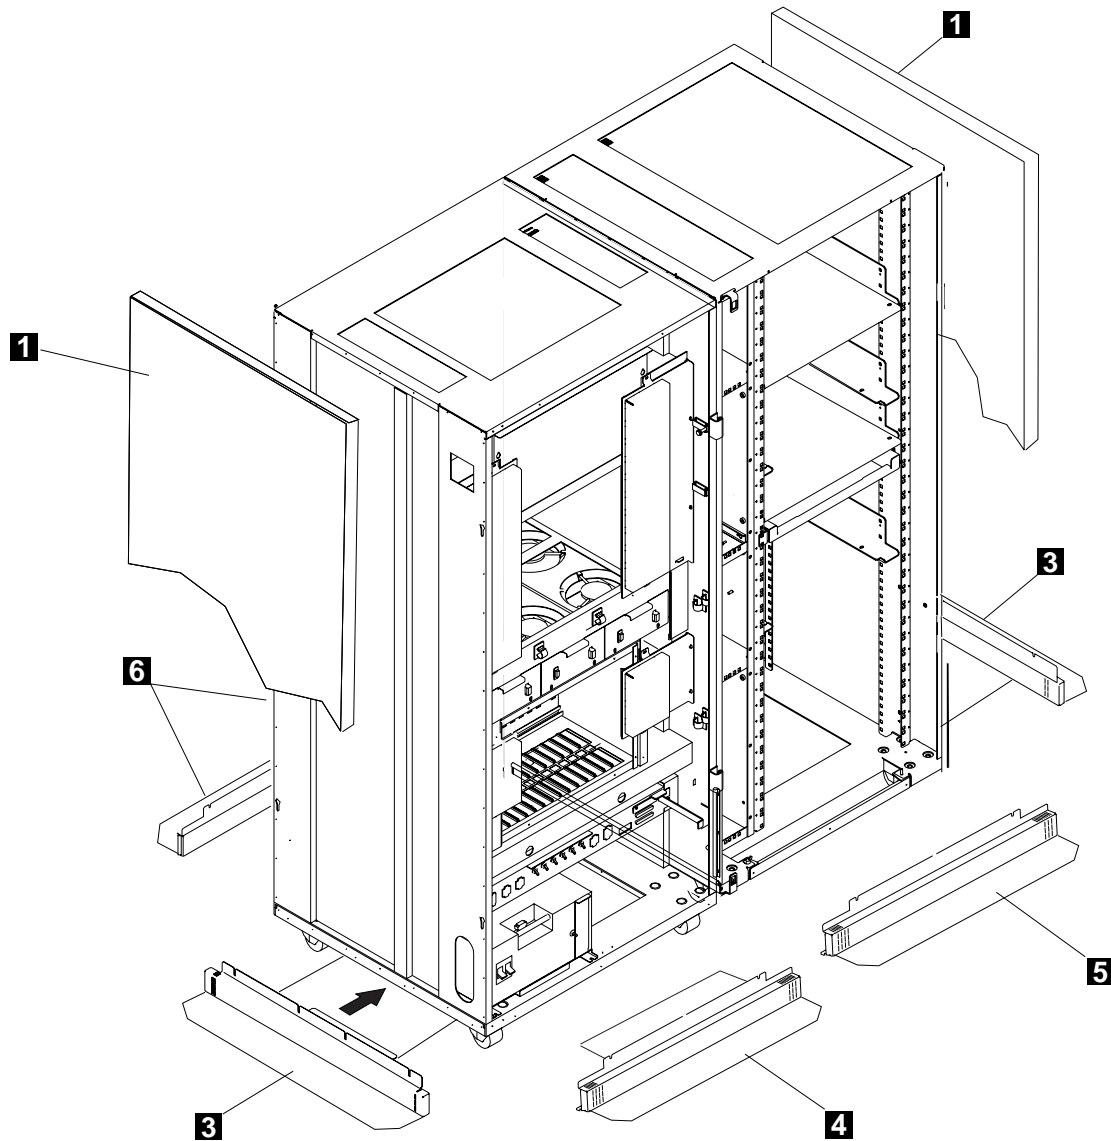


Figure 5-1. 3746-950 and Controller Expansion Ground Brackets (Front View)

Go to Chapter 6, “Making the Machine Ready for the Customer” on page 6-1 .

### Installing the 3746-950 Ground Brackets

Step 1. \_\_\_\_ If installed, remove the two covers **4** by loosening their mounting screws (refer to Figure 5-2).

Step 2. \_\_\_\_ Install the right and left brackets **1** (PN 58G5676) using screws (PN 2665527).

**Note:** Before securing the ground plate screws, push down on the plate to give it maximum contact with the floor.

Step 3. \_\_\_\_ Install the front ground plate **2** (PN 58G5677) and rear ground plate **3** (PN 58G5675) using screws (PN 2665527) then re-installed covers **4**.

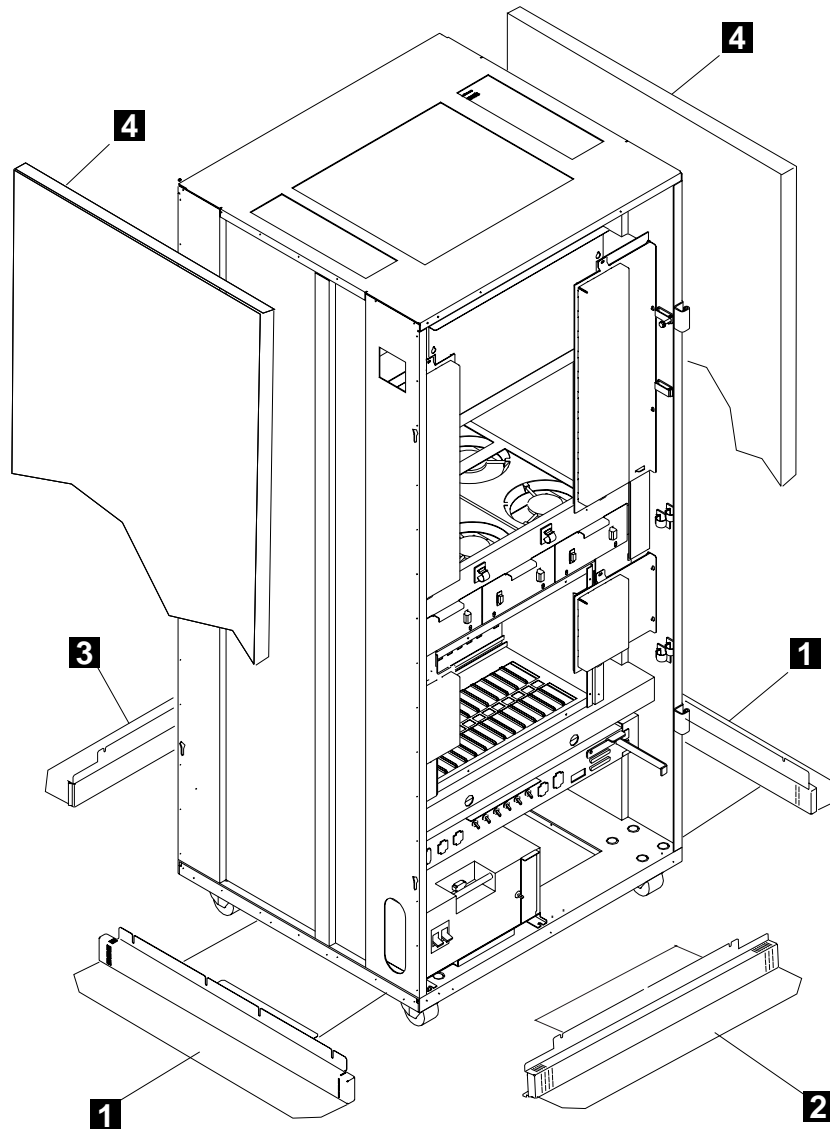


Figure 5-2. 3746-950 Ground Brackets (Front View)

## Installing the Controller Expansion Ground Brackets

- Step 1. \_\_\_\_ If installed, remove the two covers **4** by loosening their mounting screws.
- Step 2. \_\_\_\_ Install the right and left brackets **1** (PN 58G5676) using screws (PN 2665527).  
Before securing the ground plate screws, push down on the plate to give it maximum contact with the floor.
- Step 3. \_\_\_\_ Install the front ground plate **2** (PN 58G5675) and rear ground plate **3** (PN 58G5675) using screws (PN 2665527) then re-installed covers **4**.

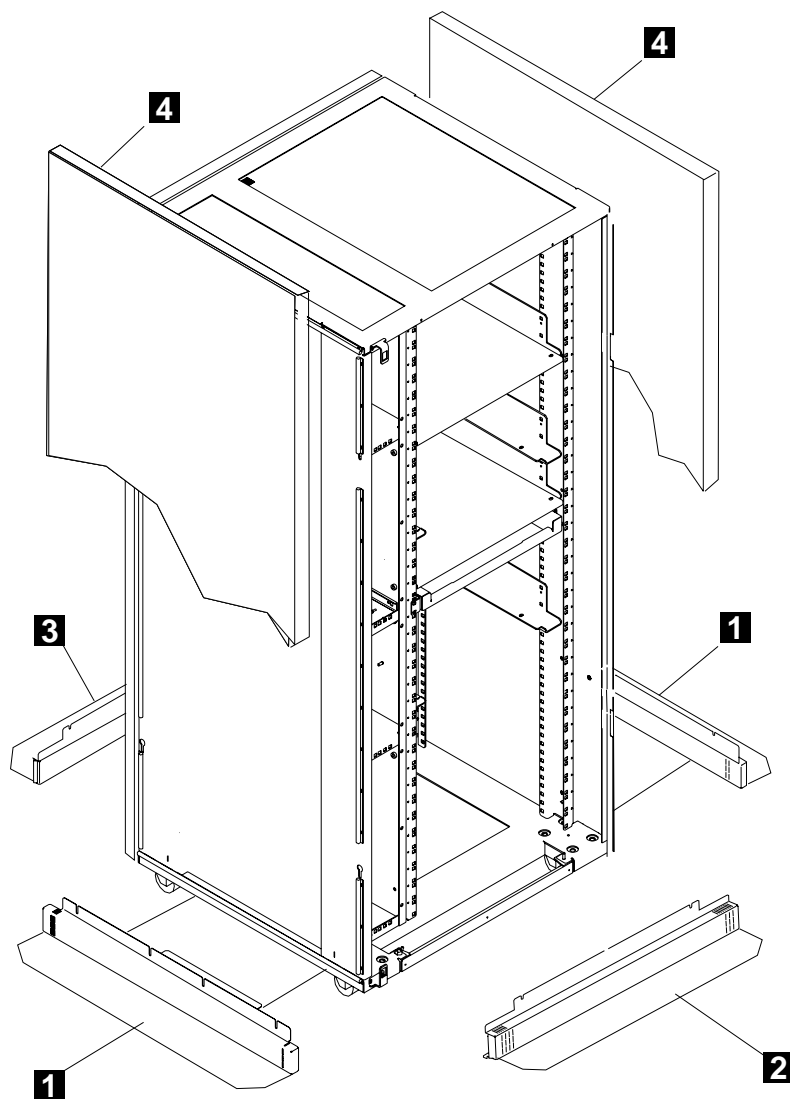


Figure 5-3. Controller Expansion Ground Brackets (Front View)

Go to Chapter 6, “Making the Machine Ready for the Customer” on page 6-1 .



---

## **Chapter 6. Making the Machine Ready for the Customer**

---

### Making Machine Ready for Customer

Is the LIC available on a **CD-ROM** (EC F12380 and above):

- **Yes**, go to step 1
  - **No**, go to step 4
1. \_\_\_\_ Save the configuration parameters on diskette
    - a. \_\_\_\_ Double click on the **Service Processor** icon.
    - b. \_\_\_\_ Click on **Operation Management**.
    - c. \_\_\_\_ Double click on **Manage Disks and Databases**.
    - d. \_\_\_\_ Click on **Save databases on diskette**, and click on **O**.
    - e. \_\_\_\_ Insert the **configuration parameters diskette** (1.44 diskette, PN 02L3427) and follow the prompts.
    - f. \_\_\_\_ When the save is completed, click on **Cancel** to exit from the function.
  2. \_\_\_\_ Do you have a **Backup** Service Processor?
    - **Yes**, go to step 3.
    - **No**, go to step 7 on page 6-3
  3. \_\_\_\_ Update the **Backup** Service Processor

To have the same image of the information recorded on the **active** and **backup** service processors:

- a. Install the same level of code (LIC) on the backup and active SP:
  - 1) Insert the CD-ROM in the CD drive
  - 2) Double click on the **service processor** icon.
  - 3) Click on **change management**
  - 4) Double click on **update SP (& NNP) LIC on non-active version**, the code is being copied from the CD to the SP hard drive
- b. Restore the configuration data:
  - 1) \_\_\_\_ From the SP menu, click on **Operation Management**.
  - 2) \_\_\_\_ Double click on **Manage Disks and Databases**.
  - 3) \_\_\_\_ Click on **Restore databases from diskette**, and click on **OK**.
  - 4) \_\_\_\_ Insert the **configuration parameters diskette** and follow the prompts.
  - 5) \_\_\_\_ When the restore is completed, click on **Cancel** to exit from the function.

Go to **step 7 on page 6-3**

4. \_\_\_\_ Save the service processor hard disk on the optical disk drive

Use the procedure **Saving the service processor hard disk on the optical disk** described in chapter 3 of the *Service Processor Installation and Maintenance (Based on 7585, 3172, 9585, and 9577)*, SY33-2115.



5. \_\_\_\_ Do you have a **Backup** Service Processor?
  - **Yes**, go to step 6.
  - **No**, go to step 7
6. \_\_\_\_ Update the **Backup** Service Processor
 

To have the same image of the information recorded on the **active** and **backup** service processors, copy the backup optical disk on the backup service processor hard disk.

Use the procedure **Restoring the service processor hard disk from the optical disk** described in chapter 3 of the *Service Processor Installation and Maintenance (Based on 7585, 3172, 9585, and 9577)*, SY33-2115.
7. \_\_\_\_ Clean up the SRC database for the 3746-950 installed
  - a. \_\_\_\_ Double click on the **3746-950** icon.
  - b. \_\_\_\_ Click on **Problem Management**.
  - c. \_\_\_\_ Double click on the **Manage Alarms/Errors/Events (SRCs)** function.
  - d. \_\_\_\_ Select **all alarms, errors, events**, and click on **OK**.
  - e. \_\_\_\_ Click on **Options** on the action bar.
  - f. \_\_\_\_ From the pulldown menu, click on **Delete SRCs from database**.
  - g. \_\_\_\_ Confirm your selection by clicking on the **YES** pushbutton.
  - h. \_\_\_\_ Click on **Cancel** to leave the function.
8. \_\_\_\_ Shutdown your service processor
  - a. \_\_\_\_ On the MOSS-E view, click on **Program**, then select **Shutdown**.
  - b. \_\_\_\_ Enter the administrator password to exit from MOSS-E view.
9. \_\_\_\_ Reinitialize the Service Processor
  - a. \_\_\_\_ Press **Ctrl, Alt, and Del** simultaneously, to reinitialize the Service Processor.

**Note:** While the initialization is in progress, start the 3746-950 initialization (go to Step 10).

  - b. \_\_\_\_ Open the MOSS-E session.
    - 1) Enter the **administrator password** (default is IBM3745).
    - 2) Click on **OK** or press **ENTER**.
10. \_\_\_\_ IML the 3746-950, at the 3746-950 control panel
  - a. Set **Service Mode = 0** and validate.
  - b. Set **Power Control = 1**.
  - c. Press the **General IML** push button to select **Function 0**. A general IML is started.
11. \_\_\_\_ Verify that the IML/IPL are completed
 

Wait until the **3746-950** icon comes green, indicating that IML has completed successfully. Panel code displayed **00-00-0000**
12. \_\_\_\_ Ensure that the control panel gates are closed and secured.
13. \_\_\_\_ Ensure that all internal covers, shields, and parts previously removed are re-installed.
14. \_\_\_\_ Store the CD-ROM and diskettes in the service drawer.
15. \_\_\_\_ Close the external doors. Using the cover lock key, **push and turn** the camlocks to fasten the doors.
16. \_\_\_\_ Clean up the installation area.

17. \_\_\_\_ If necessary, ask the customer to:
- Change the passwords using the function **Manage Passwords**. For details, see the chapter "Maintaining the Code Loaded on Service Processor" in the appropriate manual:
    - Service Processor and Network Node Processor Service User*, SY33-2127, or
    - Service Processor Installation and Maintenance (Based on 7585, 3172, and 9585)*, SY33-2120, or
    - Service Processor Installation and Maintenance (Based on 7585, 3172, 9585, and 9577)*, SY33-2115.
  - Set or reset the automatic configuration activation, refer to Figure 6-1.
  - Enable the CP/NNP backup if the NNP-B is installed, refer to Figure 6-1.

**Note:** These options referenced in steps 17b and 17c are accessible from **Network Node Processor (NNP) Management** using the function **Manage Control Points on NNPs**. For details refer to *3745 Communication Controller Models A and 3746 Models 900 and 950: Management Planning*, GA27-4239, paragraph 'Dual Network Node Processors'.

LA GAUDE /3746-9x0/Manage Control Points [CP] on NNP

CP/NNP Messages

CP/NNP-A Status: Link operational

CP/NNP-B Status: Standby

Options

Select the CP/NNP that you want to manage: ☒ CP/NNP-A ☐ CP/NNP-B

☐ Automatic configuration activation ☒ Enable CP/NNP backup

Start CP Stop CP Stop and restart CP Activate configuration Dump CP

Help Close Shutdown and restart NNP Manage NNP

Figure 6-1. Manage the Control Points

---

## Chapter 7. Removal or Relocation of the 3746-950

Before Removing the 3746-950 . . . . .	7-2
Updating the Service Processor Network Configuration . . . . .	7-2
Disconnecting the Mainline Power . . . . .	7-2
Disconnecting the Interface Cables . . . . .	7-3
Preparing Machines for Shipment . . . . .	7-3

### Before Removing the 3746-950

The sales branch office must determine if packaging materials and instructions are required and must obtain applicable bill(s) of material. This should normally be ordered 90 days before the anticipated removal date.

**Note:** In the U.S.A the CE orders this package.

It may be necessary for the customer, or a customer-appointed electrician to do all or some of the work involved in the following steps. The CE must ensure that all of the following steps have been completed.

*Go through the following procedures sequentially.*

### Updating the Service Processor Network Configuration

- Step 1. \_\_\_\_ If not logged, enter the Service Processor maintenance password. (default password IBM3745).
- Step 2. \_\_\_\_ Double click on the **Service Processor** icon.
- Step 3. \_\_\_\_ Click on **Configuration Management**.
- Step 4. \_\_\_\_ Double click on **Manage 3745/3746-9x0 installation/removal**.
- Step 5. \_\_\_\_ Select **the 3746-950** to be removed.
- Step 6. \_\_\_\_ Click on **Save** and insert the 3746-950 installation parameters diskette to save the data.  
**Note:** This diskette must be shipped with the machine.
- Step 7. \_\_\_\_ Re-select the 3746-950 to be removed and click on **Remove**.
- Step 8. \_\_\_\_ Check and confirm the delete option. At the end, the Service Processor is reinitialized.

### Disconnecting the Mainline Power

- Step 1. \_\_\_\_ At the control panel, ensure that the Power Control window displays '3' (Local), and then push the Standby key.
- Step 2. \_\_\_\_ **Switch** the main circuit breaker CB1 **OFF** at the 3746-950 primary power box. (See Figure B-11 on page B-8, or Figure B-12 on page B-8 if the optional power feature is installed).
- Step 3. \_\_\_\_ Ensure that the customer's branch-circuit breakers feeding the 3746-950 receptacle are **turned OFF**.
- Step 4. \_\_\_\_ Unplug the 3746-950 and controller expansion main power cables, or ask the customer to disconnect these power cables from its ac power receptacles (or dc power if any).
- Step 5. \_\_\_\_ Coil the disconnected power cables inside the 3746-950 and controller expansion.

## Disconnecting the Interface Cables

- Step 1. \_\_\_\_ If the machines are being relocated, label and remove all data set cables from the TRA and ESCA adapters.

**Note:** It is advisable to disconnect the cables, starting at the top of the gate (expansion board 07M-A1), and working down.

- Step 2. \_\_\_\_ Remove the cable (PN 76F9440 or 76F9441) from the 8228 LAN adapter (plugs 1 to 8) to the 3746-950 01N-A1 E1.

## Preparing Machines for Shipment

- Step 1. \_\_\_\_ Remove from the controller expansion, the display, the service processor, the optical disk, the network node processor, and keyboard.

- Step 2. \_\_\_\_ If the controller expansion is attached to the 3746-950 frame, remove the end cover from the right side of the controller expansion. Loosen the four retaining screws using a 5/16 socket from inside the machine. Then lift the cover from the slotted holes on the frame and pull it towards you.

- Step 3. \_\_\_\_ Re-install the end cover to the right side of the 3746-950 frame.

- Step 4. \_\_\_\_ Re-install all parts removed from frames, covers, and doors.

- Step 5. \_\_\_\_ Re-install the shipment bars on the upper and lower ends of the basic board (and expansion board if any, see Figure 2-2 on page 2-3)

- Step 6. \_\_\_\_ Pack the machine using the pack/unpack instructions.

- Step 7. \_\_\_\_ Pack the customer's parts and documentation in one package and label it: "Customer Package".

- Step 8. \_\_\_\_ Pack other parts and all maintenance documentation in another package and label it: "Maintenance Package". Hold for use by IBM Service Representative.

- Step 9. \_\_\_\_ Coil all removed cables and store them alongside the machine.

- Step 10. \_\_\_\_ Complete the removal records according to existing procedures. Inform the IBM Branch Office that the machines are ready for shipment.

## Removal the 3746-950

---

## Appendix A. Parameter Worksheets

---

### Parameter worksheet for Processor Loading

For details about these parameters, refer to chapter 'Network Routing Protocol for each Processor Type' in *3745 Communication Controller Models A and 3746 Models 900 and 950: Planning Guide*, GA33-0457.

Select a routing protocol for each type of processor that you have.

CLP	CBTRP2	TRP2	ESCP2
<input type="checkbox"/> APPN/HPR	<input type="checkbox"/> APPN/HPR	<input type="checkbox"/> APPN/HPR	<input type="checkbox"/> APPN/HPR
<input type="checkbox"/> IP	<input type="checkbox"/> IP	<input type="checkbox"/> IP	<input type="checkbox"/> IP

---

### Parameter worksheet for Ethernet Bridge

#### Location and Cable Type

Ethernet bridge name	
Ethernet attachment type	<input type="checkbox"/> 10 Base T <input type="checkbox"/> AUI
TIC3 location	
8229 location	<input type="checkbox"/> controller expansion A <input type="checkbox"/> controller expansion B

#### SNMP Community Name

Community name	
IP address (in dotted notation) of the community name owner	
Privilege	<input type="checkbox"/> Read <input type="checkbox"/> Write

#### SNMP Trap Community Name

Trap community name	
IP address (in dotted notation) of the network manager	
Authentication of failure traps	<input type="checkbox"/> Enable <input type="checkbox"/> Disable





## Appendix B. 3746-950 Component Locations

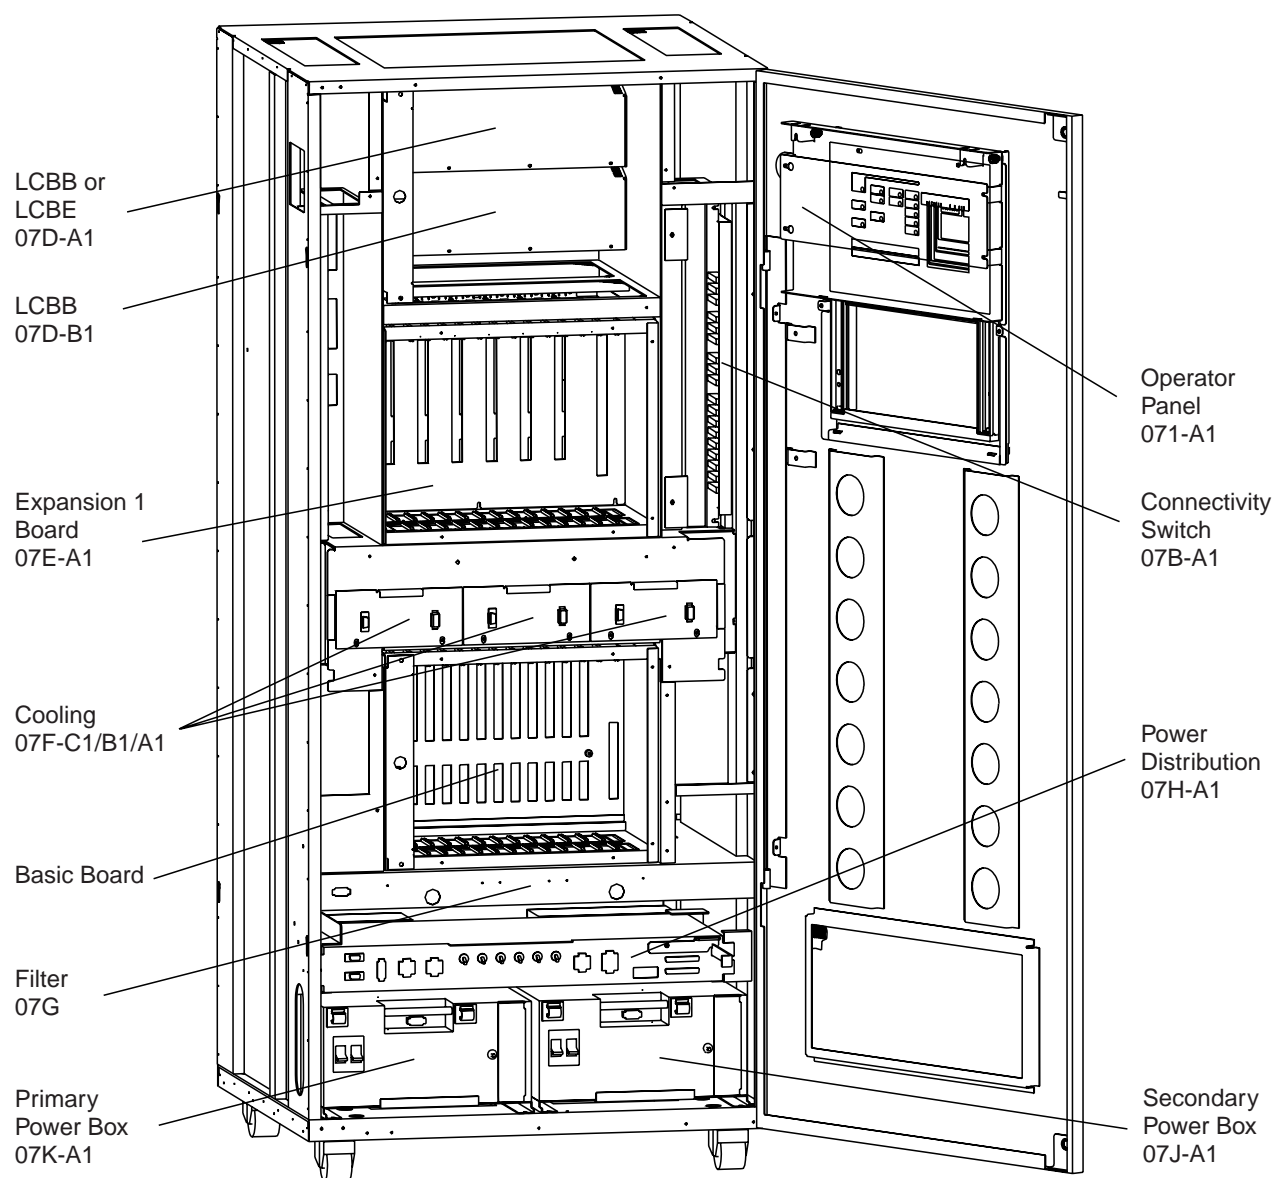


Figure B-1. 3746-950 Locations (Front)

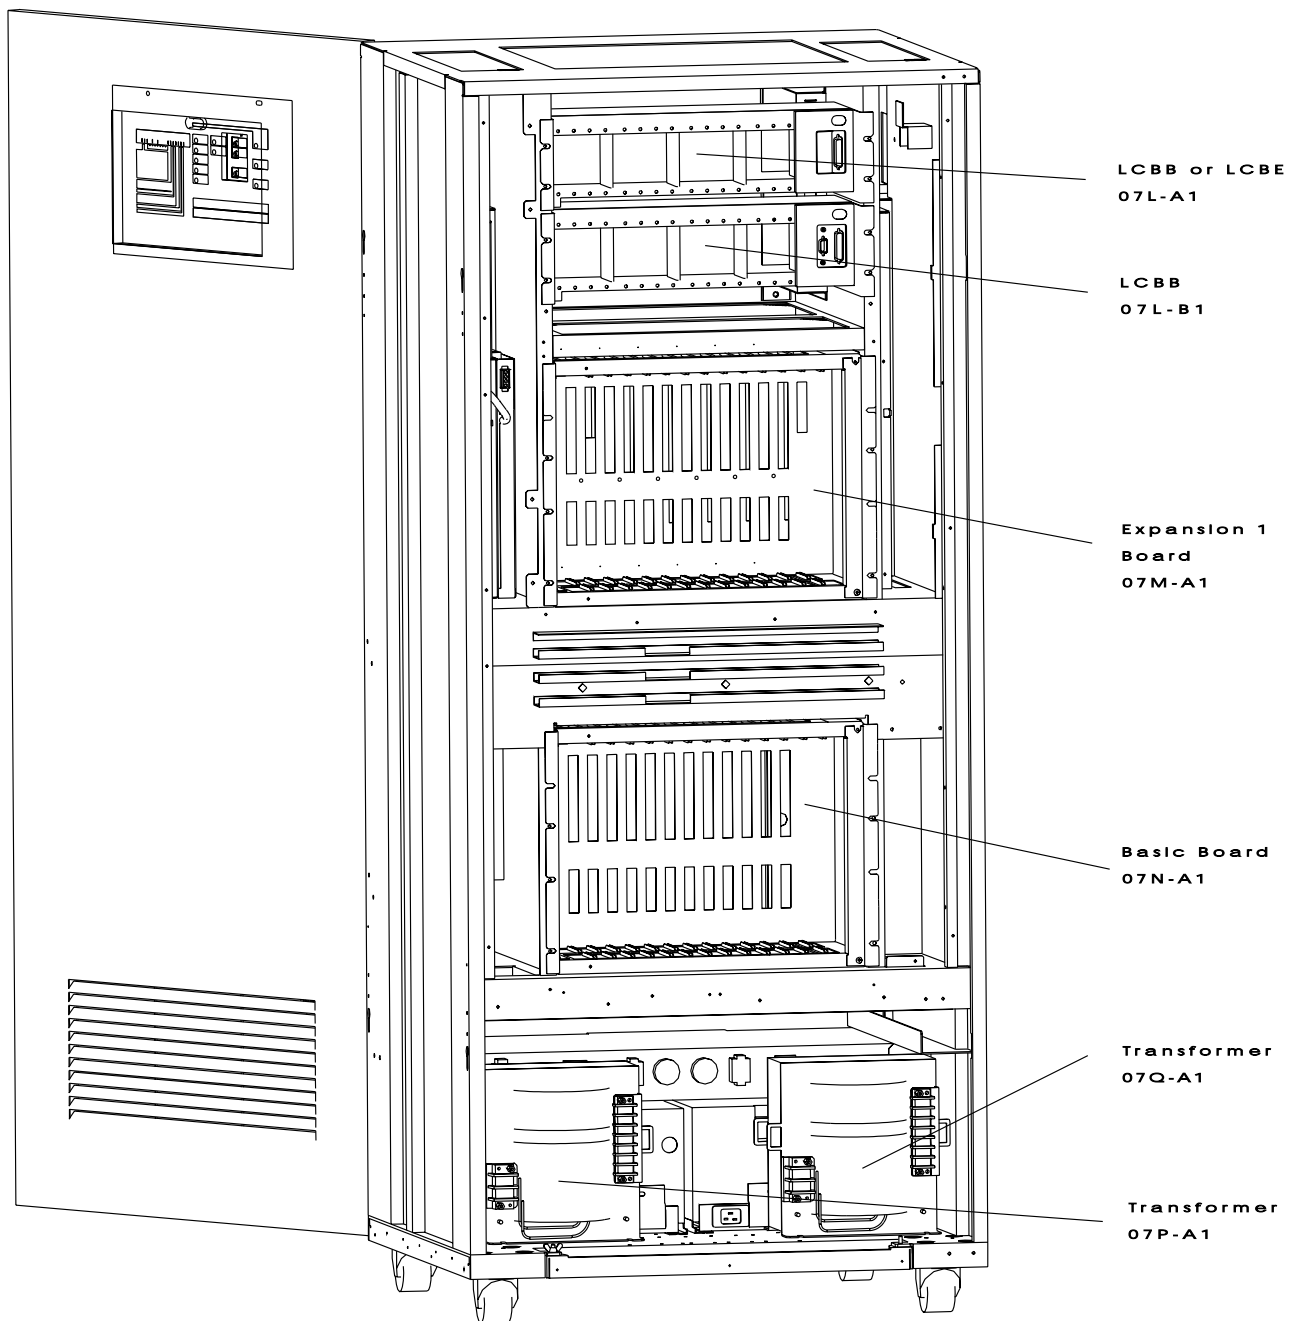


Figure B-2. 3746-950 Locations (Rear)

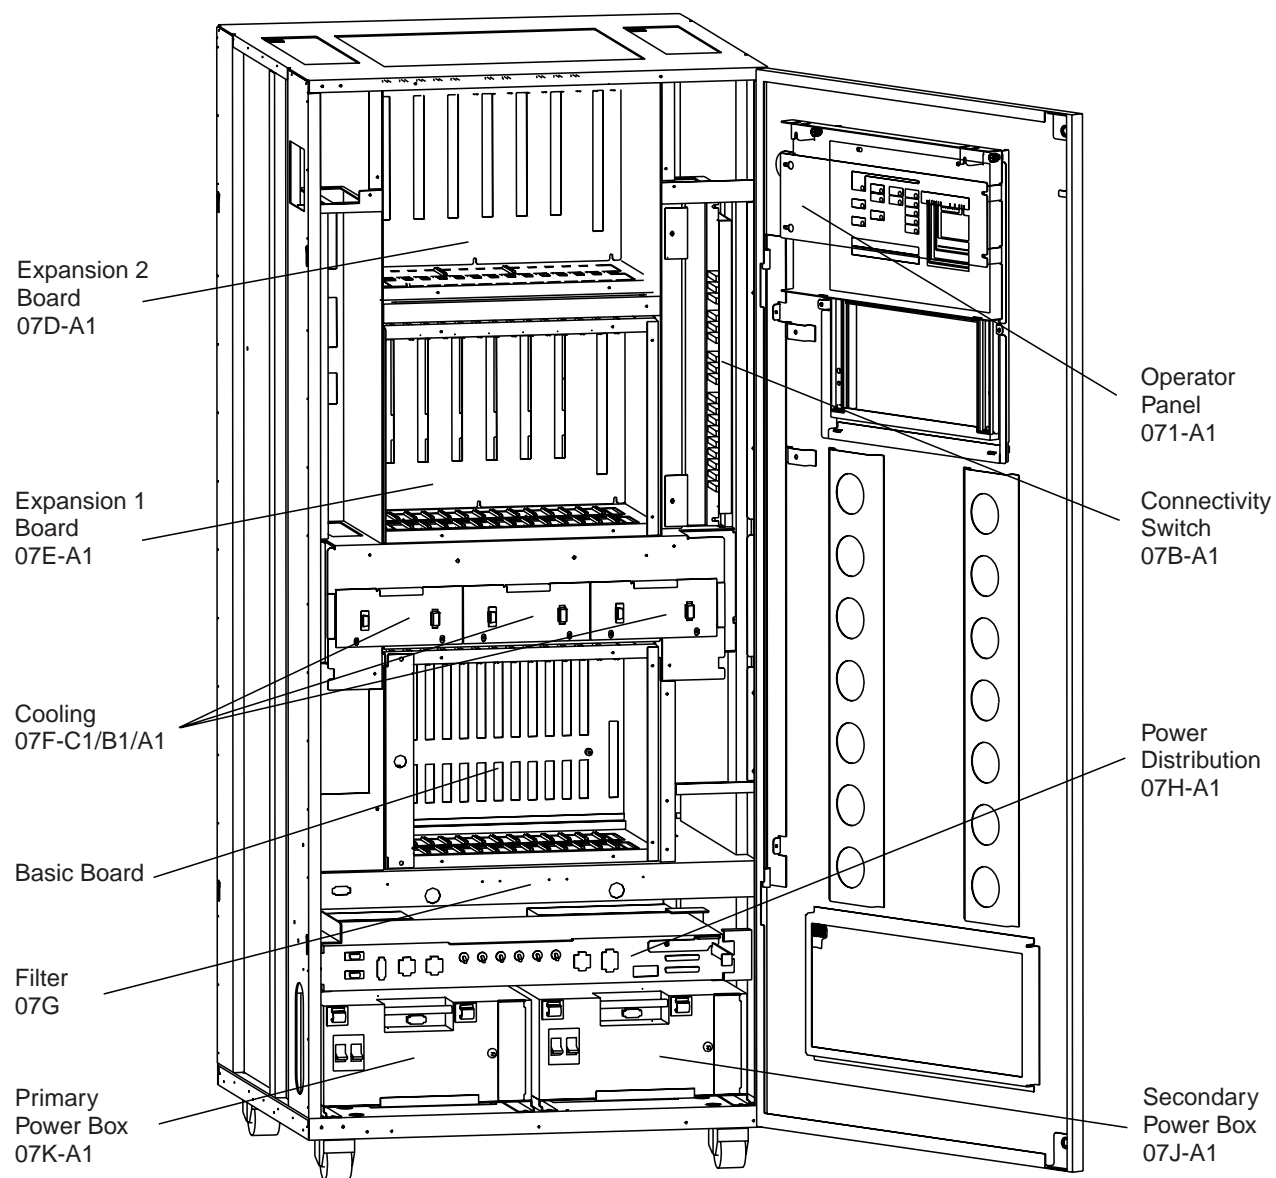


Figure B-3. 3746-950 Locations with Enclosure Expansion 2 Installed (Front)

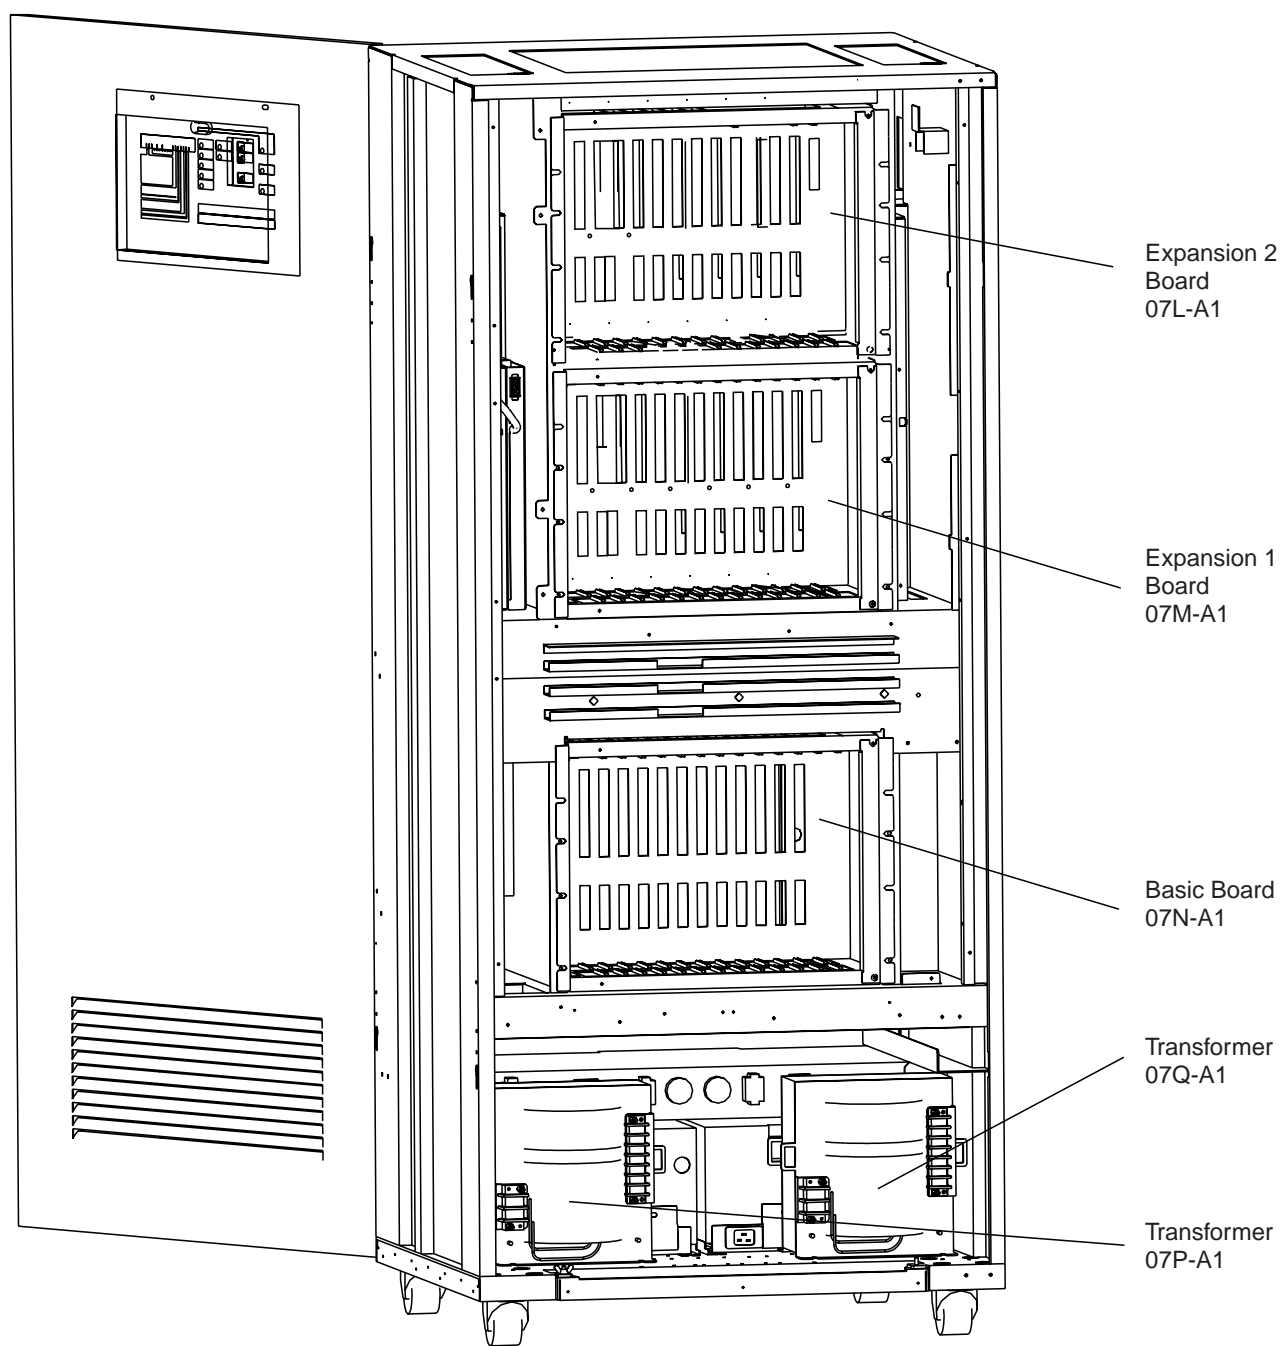


Figure B-4. 3746-950 Locations with Enclosure Expansion 2 Installed (Rear)

# Board Locations

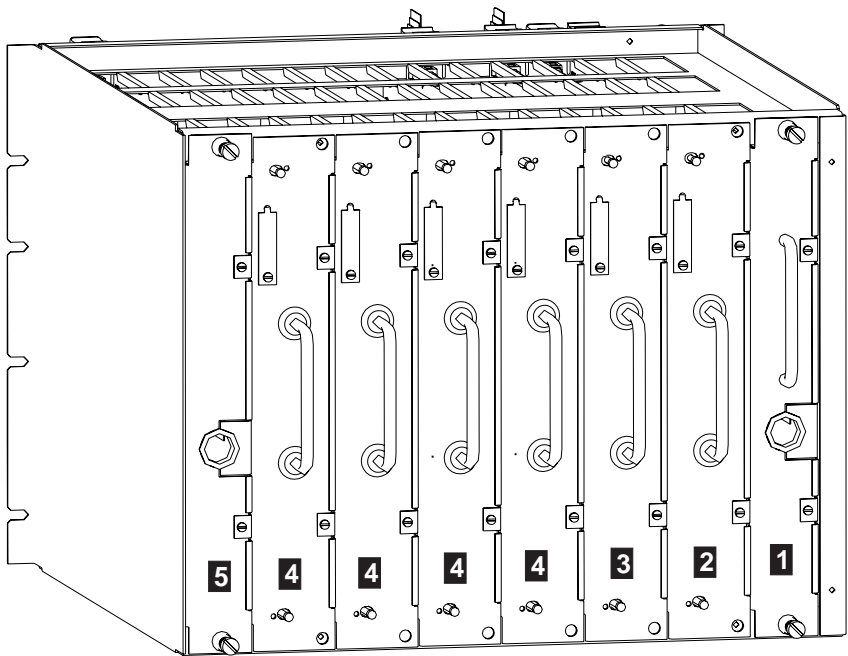


Figure B-5. Basic Board 07G-A1 Locations (Processor Side, 3746-950 Front View)

- **1** 07G-A1 B3, CSCE
- **2** 07G-A1 D3, SPS card
- **3** 07G-A1 F3, CBSP
- **4** from 07G-A1 H3 to P3 any processor type
- **5** not used

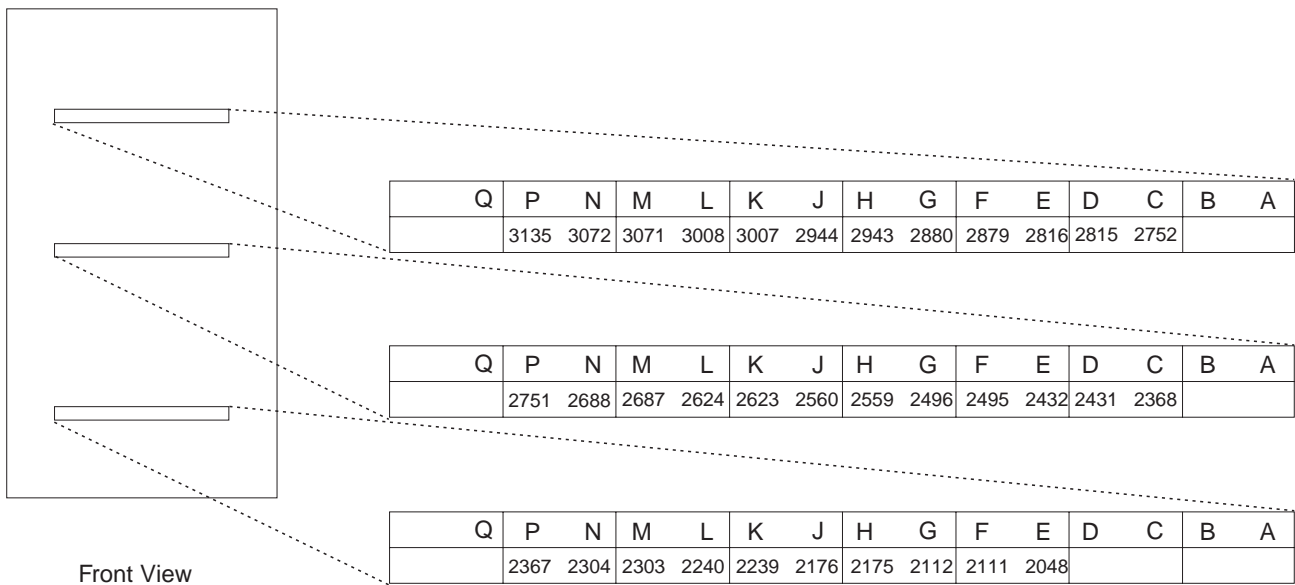


Figure B-6. 3746-950 Labels (Front Side)

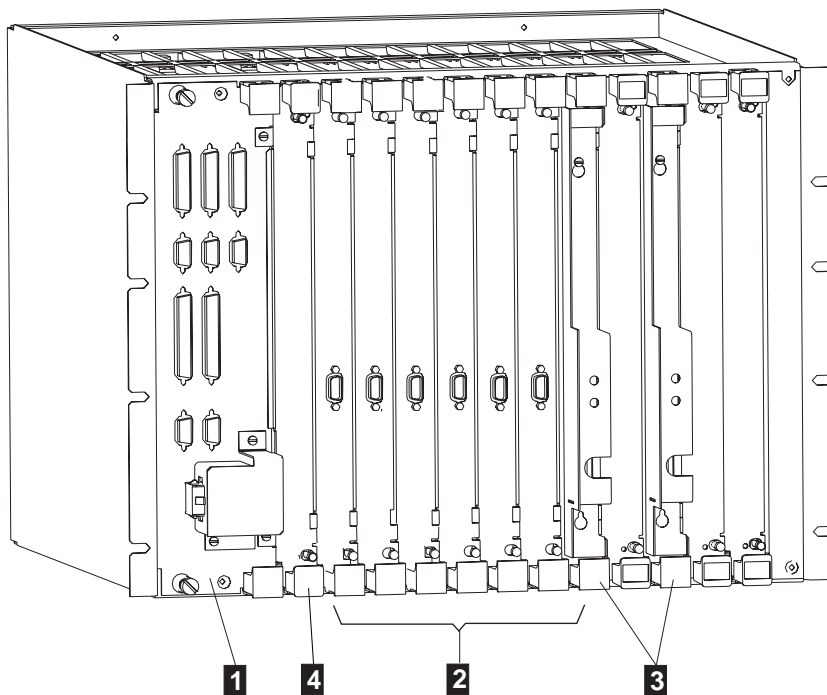


Figure B-7. Basic Board 07N-A1 Locations (Coupler Side, 3746-950 Rear View)

- **1** 07N-A1 A1, SPD1
- **2** 07N-A1 E1, TIC3
- **3** 07N-A1 L1, ESCC
- **4** Dummy coupler

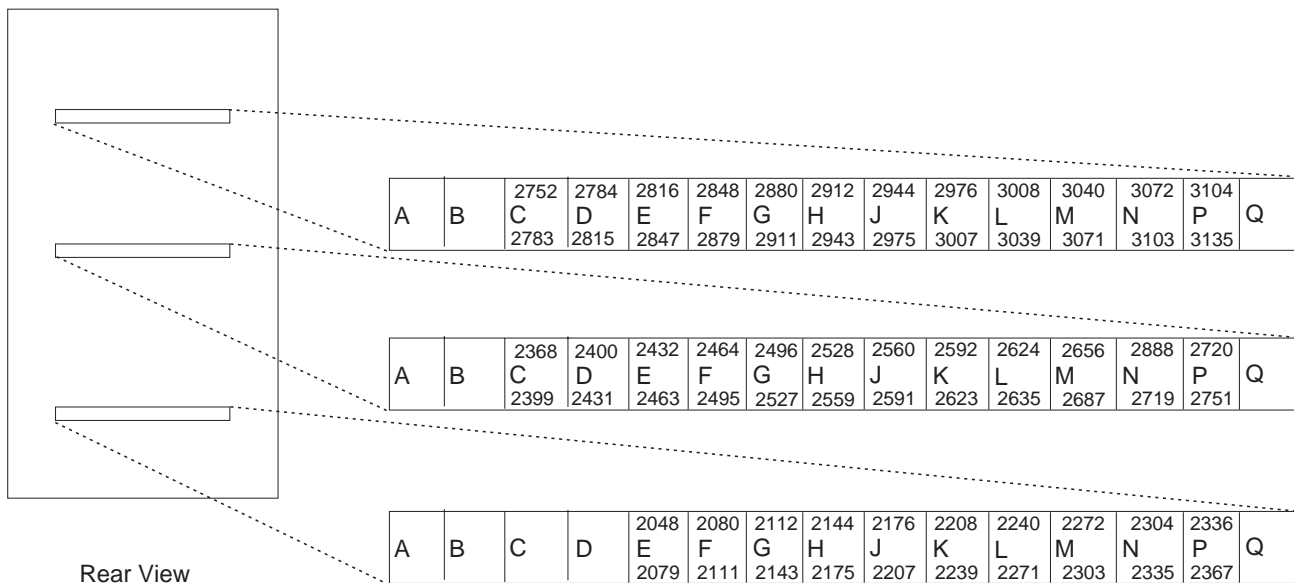


Figure B-8. Range Addresses for Couplers, Labels Rear Side

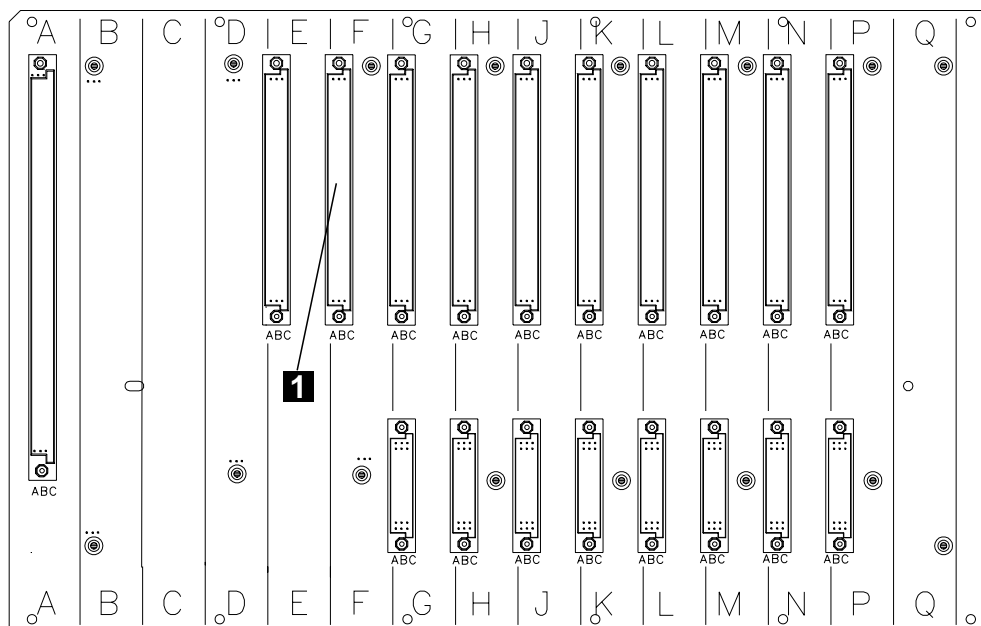


Figure B-9. Basic Board 07N-A1 Locations (Coupler Side)

- **1** TIC3 used to connect the service processor.

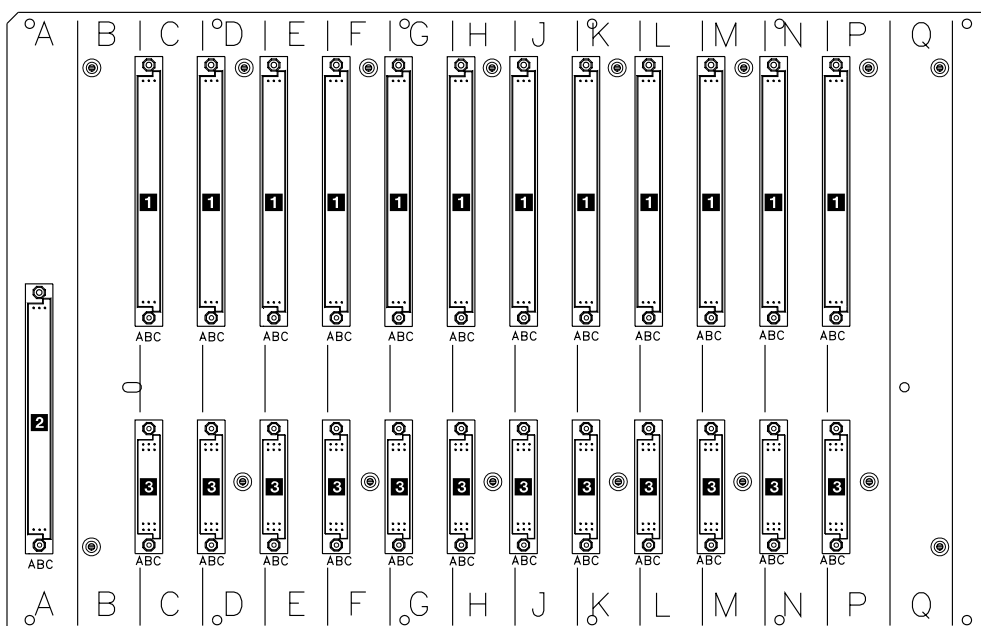


Figure B-10. Expansion Board 07M-A1/07L-A1 Locations (Coupler Side)

- **1** TIC3, ESCC, LIC11, or LIC12 sockets
- **2** SPD2 location
- **3** Not Used

## AC and DC Power Box Locations

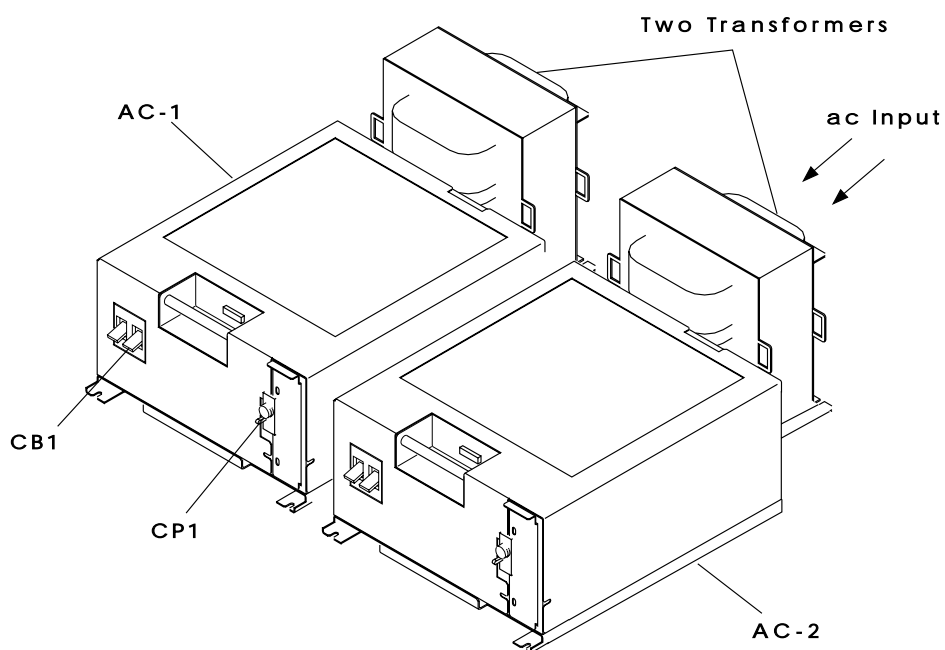


Figure B-11. 3746-950 Power Area with 2 AC (AC-2 is Optional)


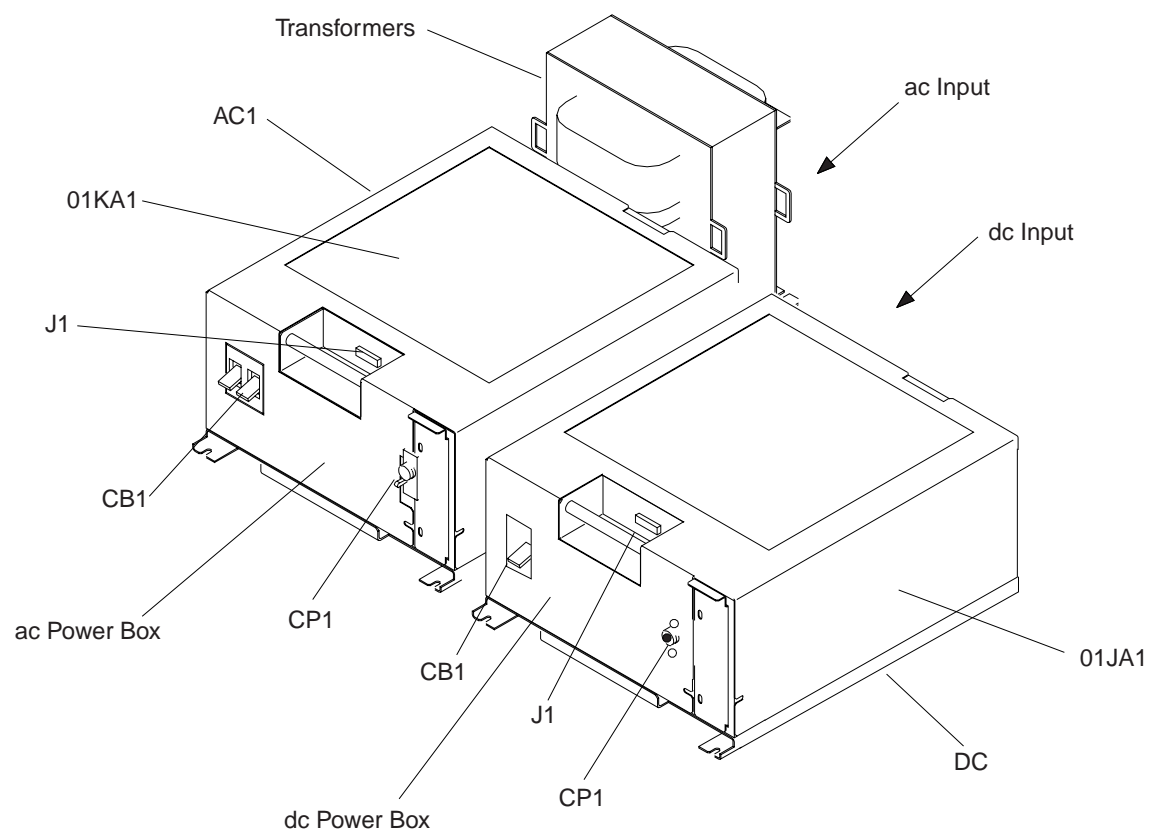


Figure B-12. 3746-950 Power Area with 1 AC + 1 DC (DC Power is Optional)



## Distribution Box and AC-1 Power Box Locations

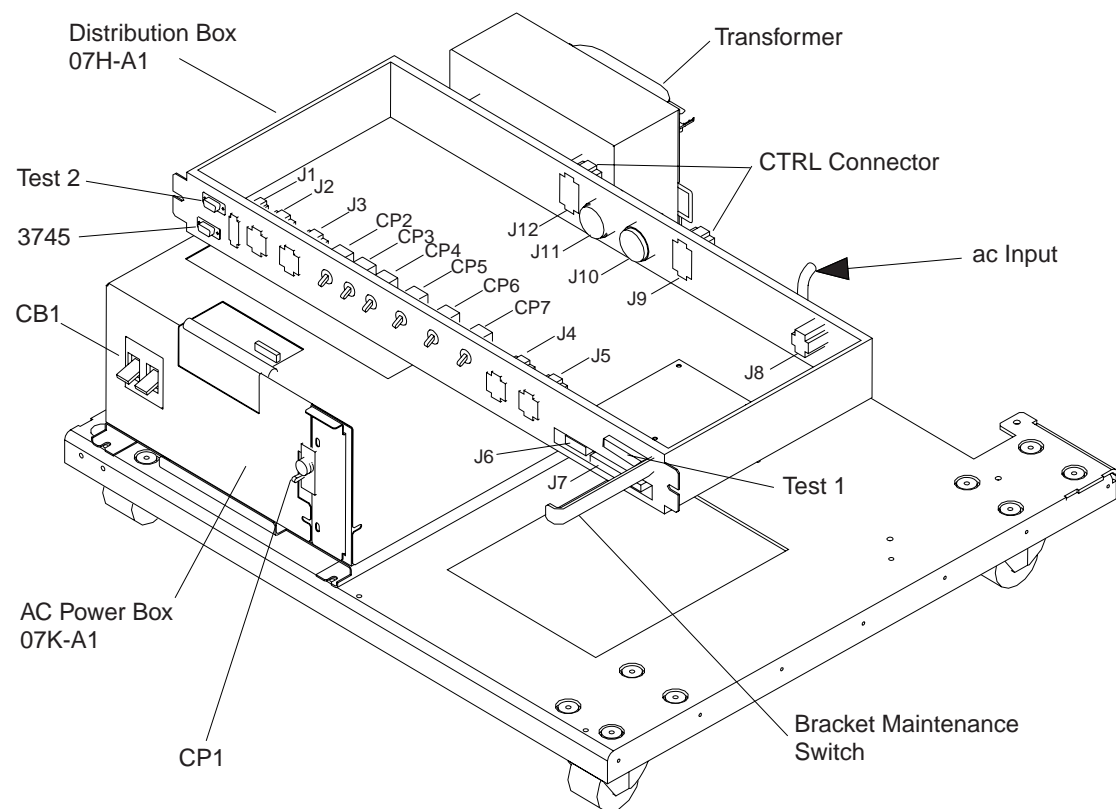

**Note:** The bracket maintenance switch is used to keep the 3746-950 power ON when the SPS card is removed.

Figure B-13. Power Area



---

## Appendix C. Controller Expansion Component Locations

If you want more information about:	Refer to
<ul style="list-style-type: none"><li>• Positioning the units in the front side of the controller expansion</li><li>• Positioning the units in the rear side of the controller expansion</li><li>• Installing captive nuts and brackets (for 6275, or 7585)</li><li>• Installing captive nuts and brackets (for 3172, 9585, or 9577)</li><li>• Installing captive nuts for LCBs</li><li>• Installing captive nuts for 8229s</li><li>• Installing captive nuts and brackets for MAE</li><li>• Installing brackets for processor type 6275 or 7585</li><li>• Installing brackets for processor type 3172</li><li>• Example of units installation (processor type 6275)</li><li>• Example of units installation (processor type 6275 + MAE)</li><li>• Example of units installation (processor type 7585)</li><li>• Example of units installation (processor type 7585 + MAE)</li><li>• Example of units installation (processor type 3172)</li><li>• Example of units installation (processor type 9585)</li><li>• Example of units installation (processor type 9577)</li><li>• Connecting the units to the ac Outlet Distribution Box.</li><li>• Connecting the units to the dual ac Outlet Distribution Boxes</li></ul>	<ul style="list-style-type: none"><li>• Figure C-1 on page C-2</li><li>• Figure C-2 on page C-3</li><li>• Figure C-3 on page C-4</li><li>• Figure C-4 on page C-5</li><li>• Figure C-5 on page C-6</li><li>• Figure C-6 on page C-7</li><li>• Figure C-7 on page C-8</li><li>• Figure C-8 on page C-9</li><li>• Figure C-9 on page C-10</li><li>• Figure C-10 on page C-11</li><li>• Figure C-11 on page C-11</li><li>• Figure C-12 on page C-12</li><li>• Figure C-13 on page C-12</li><li>• Figure C-14 on page C-13</li><li>• Figure C-15 on page C-13</li><li>• Figure C-16 on page C-14</li><li>• Figure C-17 on page C-14</li><li>• Figure C-18 on page C-15</li></ul>

Use this drawing to setup the **units** on the **front side** of the controller expansion, for the units that can be installed on the rear, refer to Figure C-2 on page C-3.

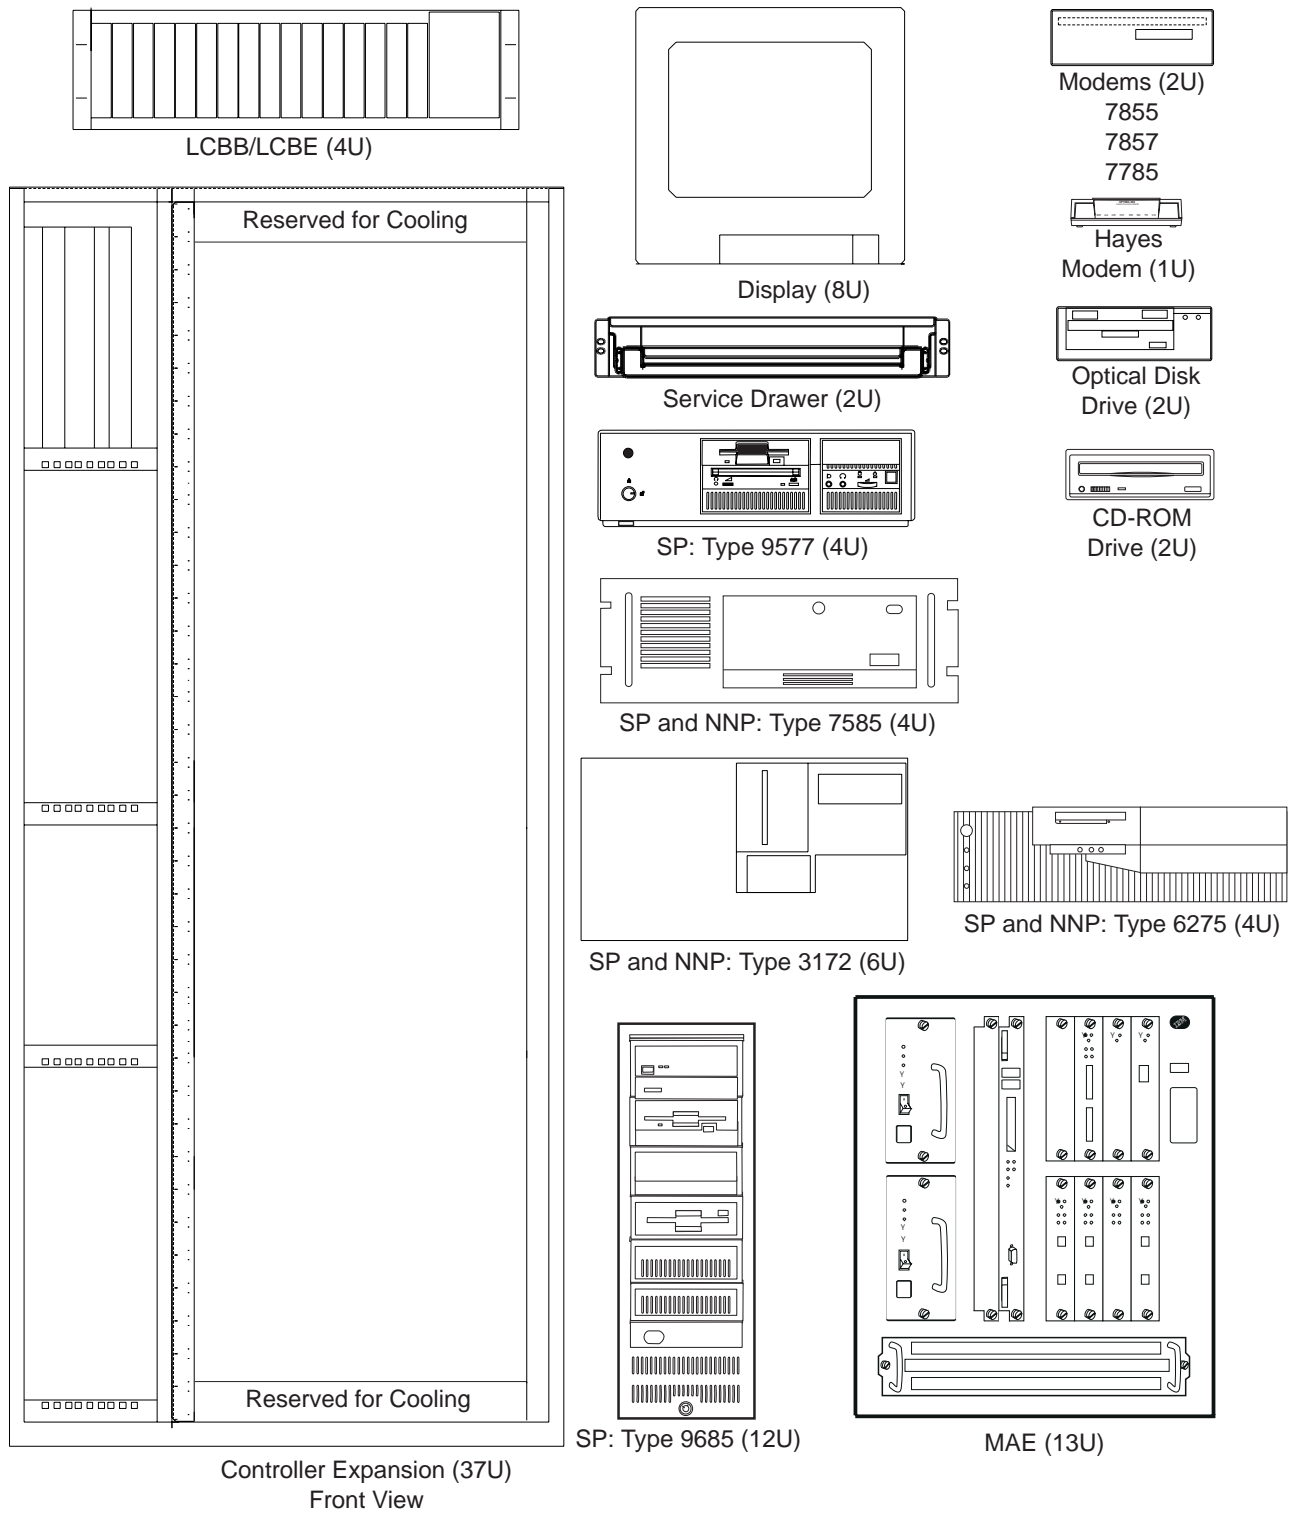


Figure C-1. Controller Expansion Inventory Chart (Front View).

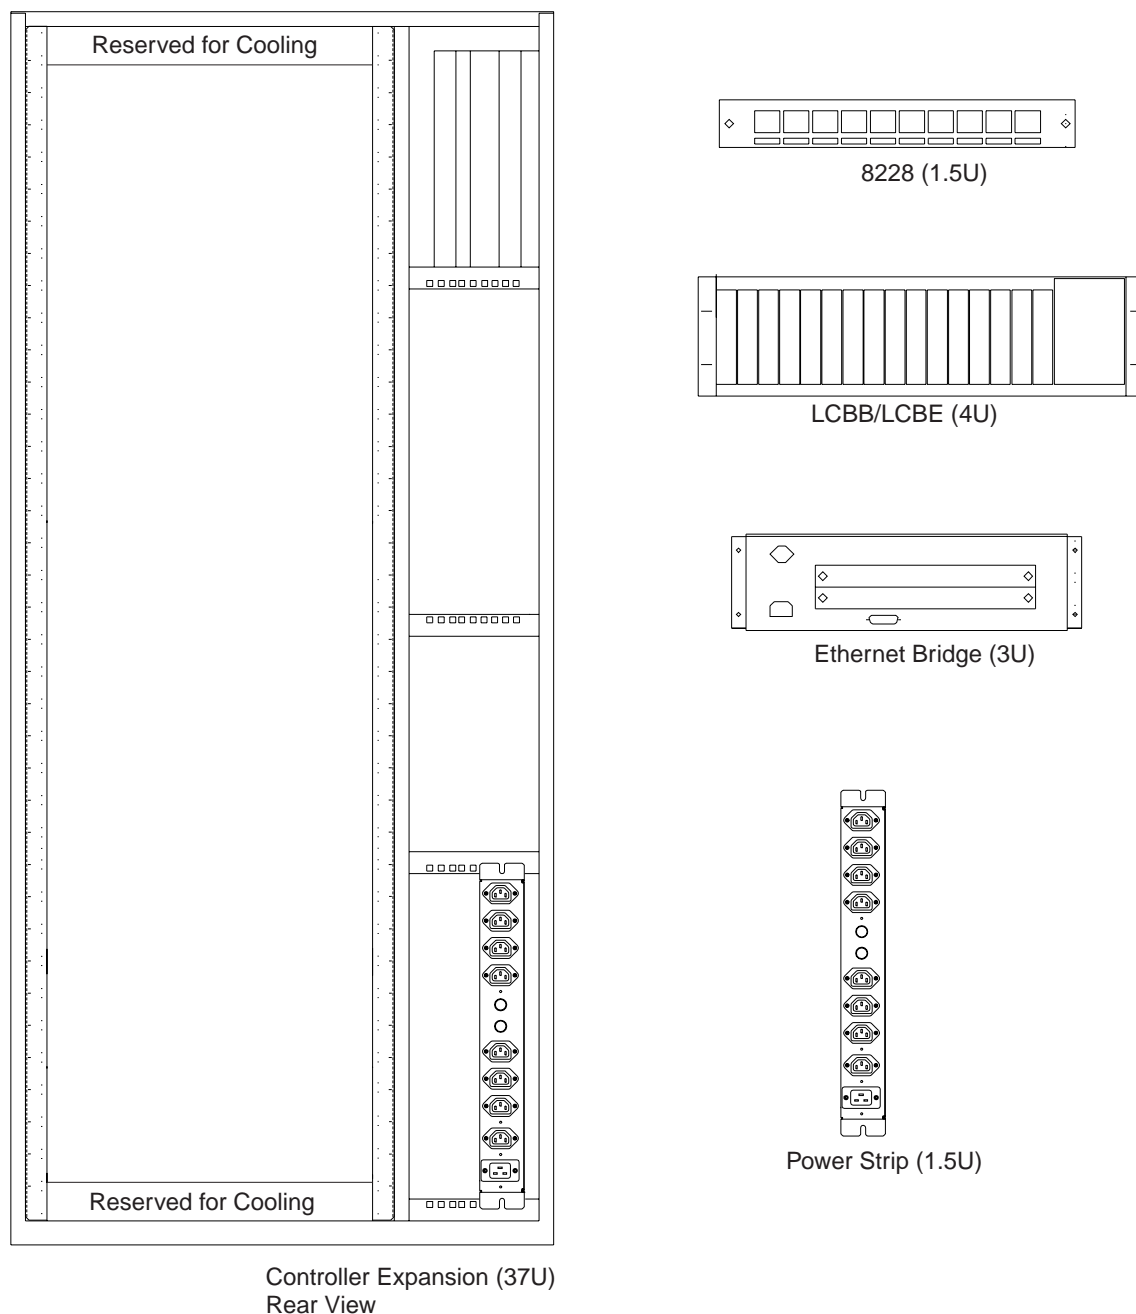


Figure C-2. Controller Expansion Inventory Chart (Rear View).

**Notes:**

1. The units dimensions are scaled to the size of the controller expansion diagram. The values represent the size used to setup the units in the controller expansion, it is not the size of the units themselves.
2. The attachment holes along each side of the controller expansion are divided into units of measure called EIA units. Each EIA unit (U) equals 44.5 millimeters (1.75 inches).
3. The controller expansion is 37 U high but only 35 are usable, one U must be reserved at the top and at the bottom for proper cooling.

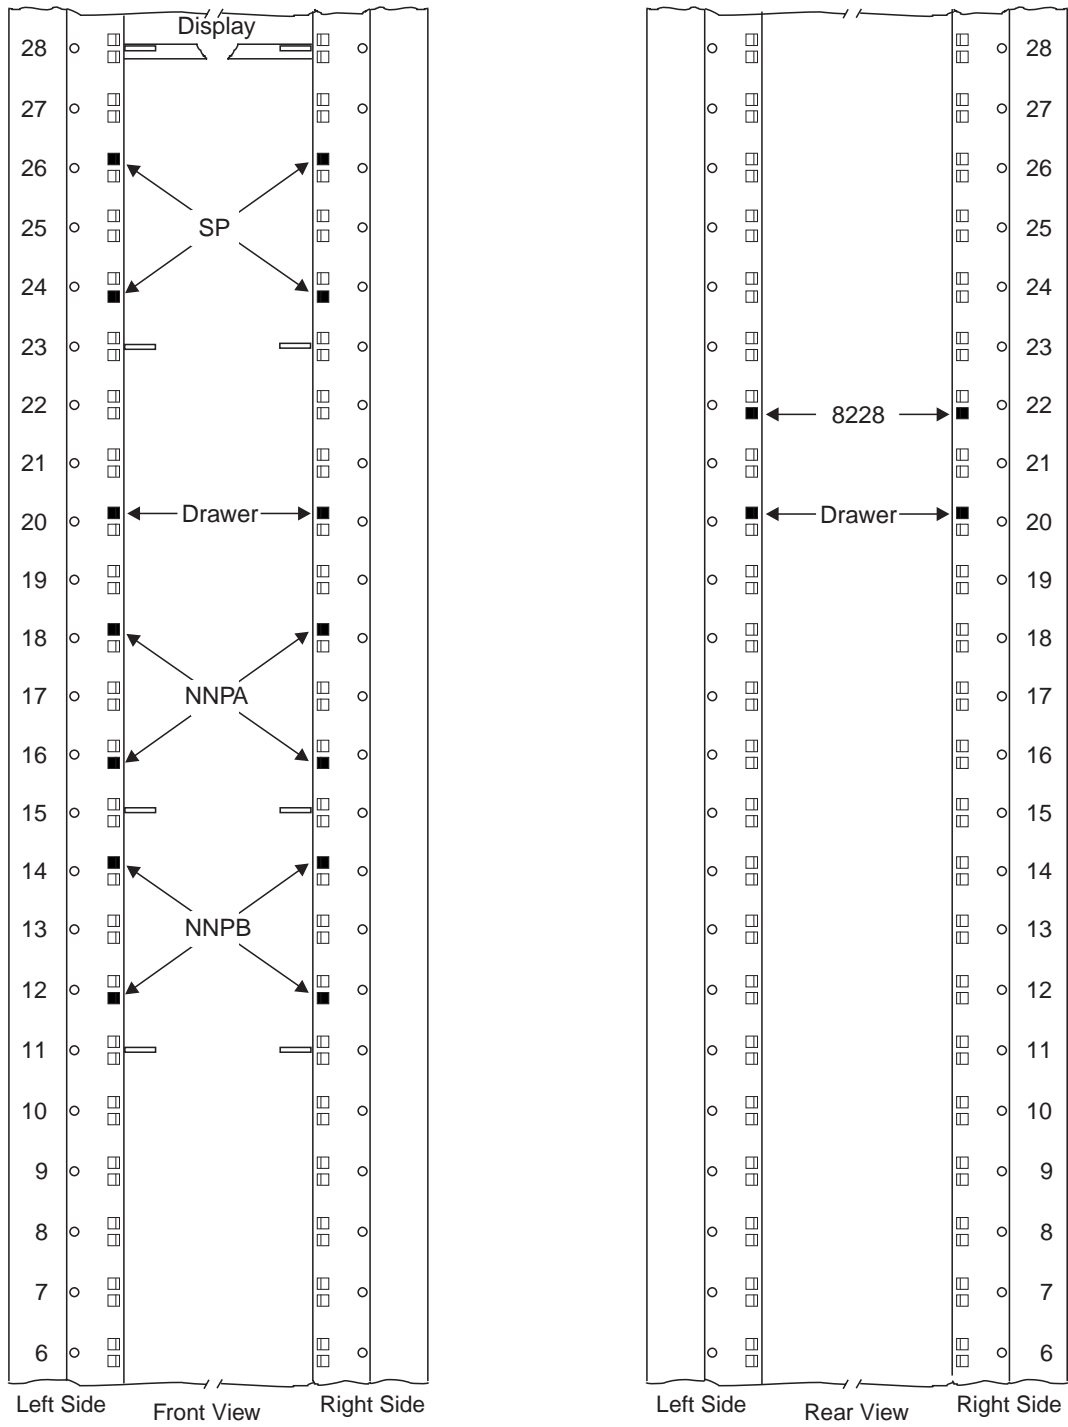


Figure C-3. Installing Captive Nuts and Brackets for the Display, Drawer, SP and NNP Type 6275 or 7585

**Note:** This symbol '■' identify the locations to install the captive nuts.

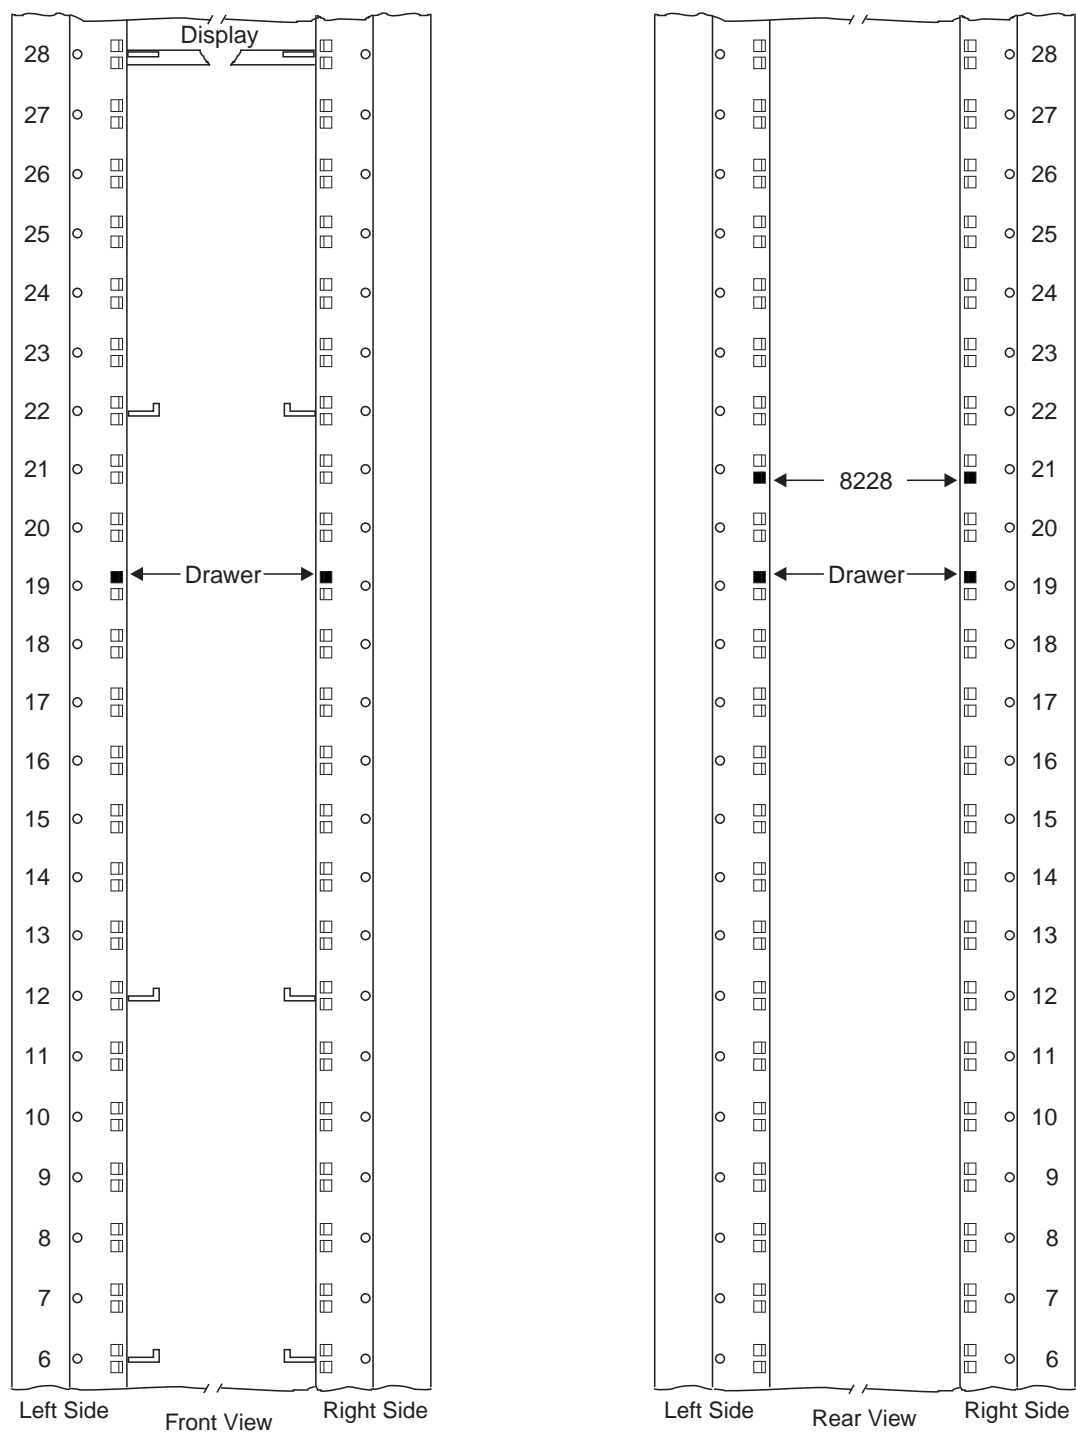


Figure C-4. Installing Captive Nuts and Brackets for the Display, Drawer, SP and NNP Type 3172

**Notes:**

1. This drawing can be used to setup the SP type **9585** or **9577**
2. This symbol '■' identify the locations to install the captive nuts.

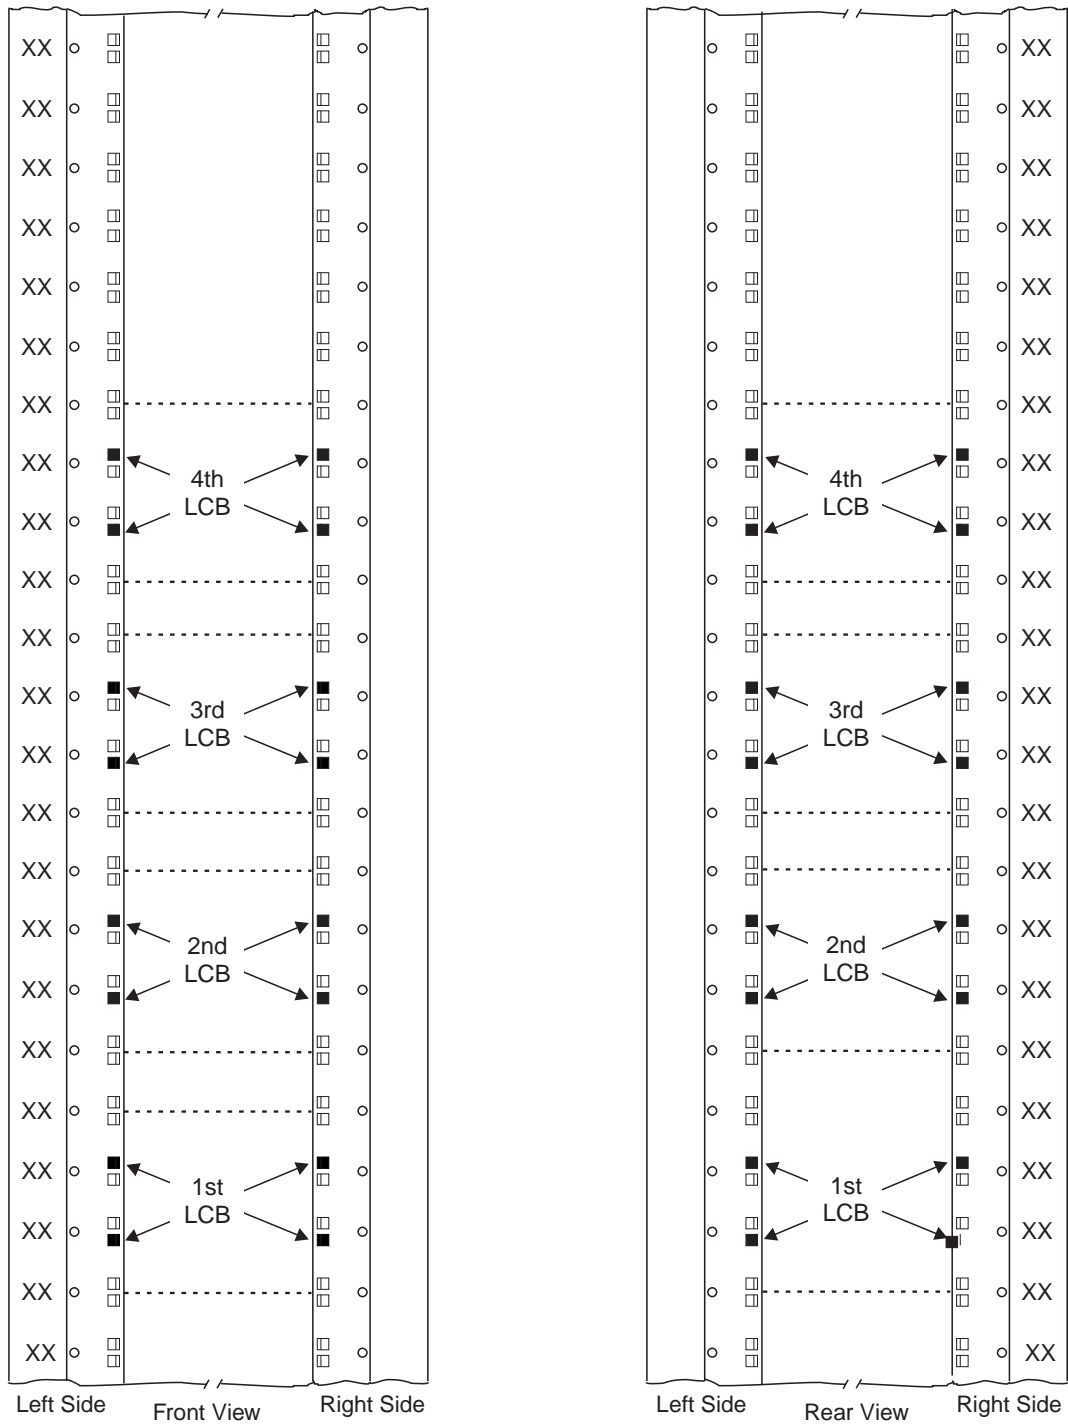


Figure C-5. Installing Captive Nuts for LCBs

**Note:** This symbol '■' identify the locations to install the captive nuts.



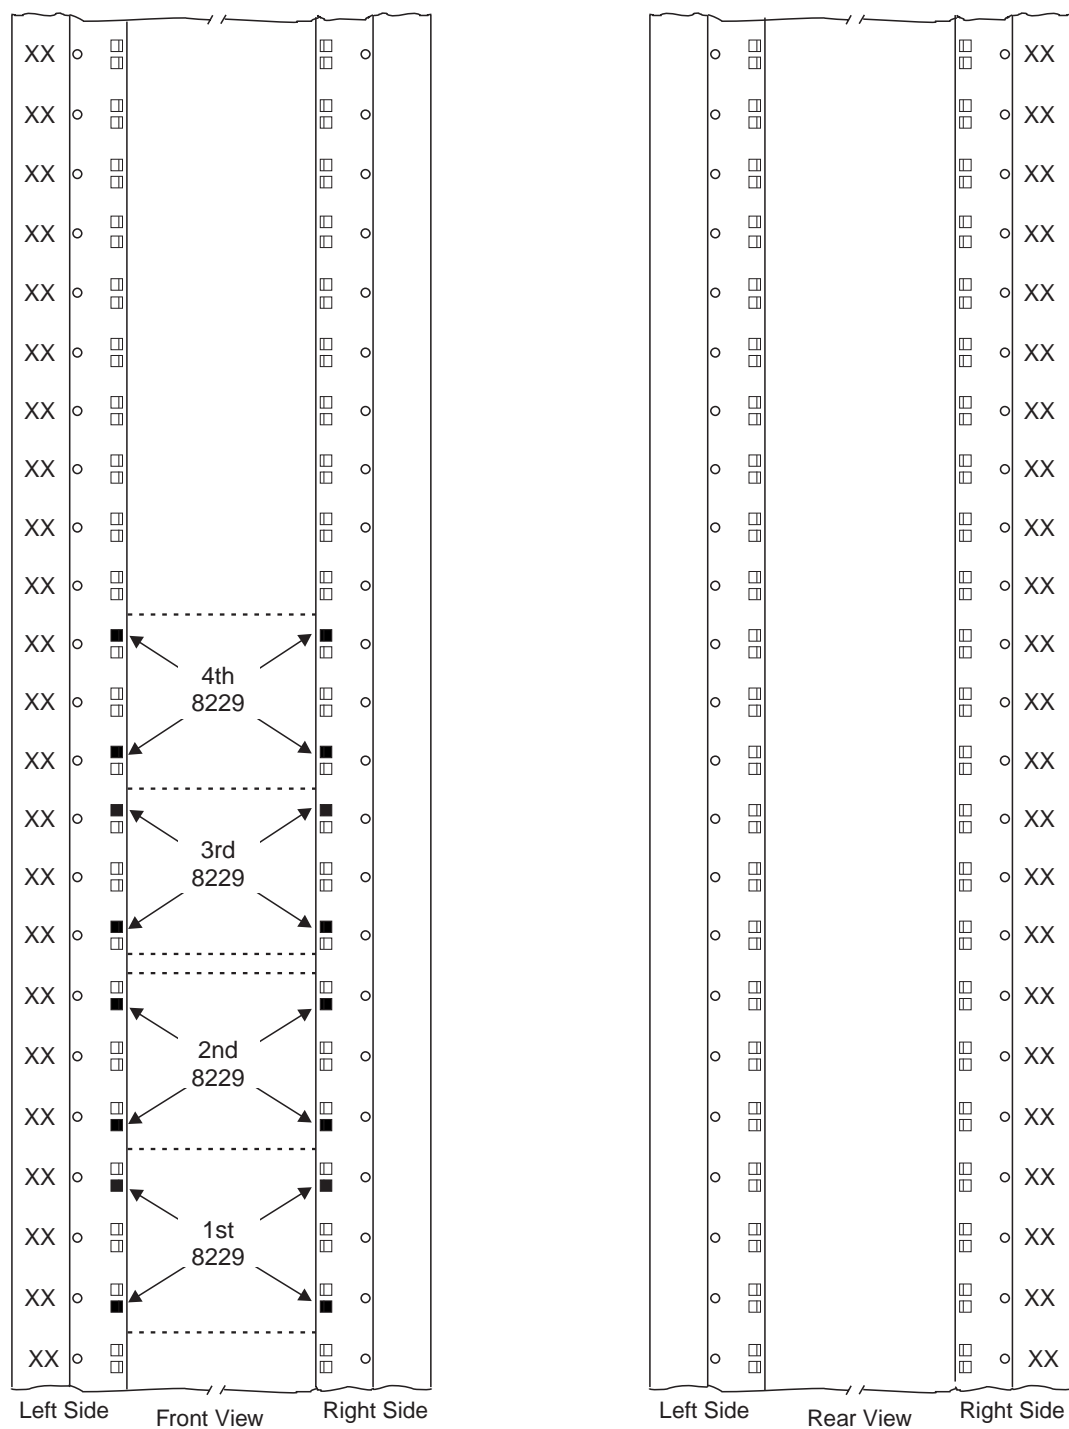


Figure C-6. Installing Captive Nuts for 8229s

**Note:** This symbol '■' identify the locations to install the captive nuts.

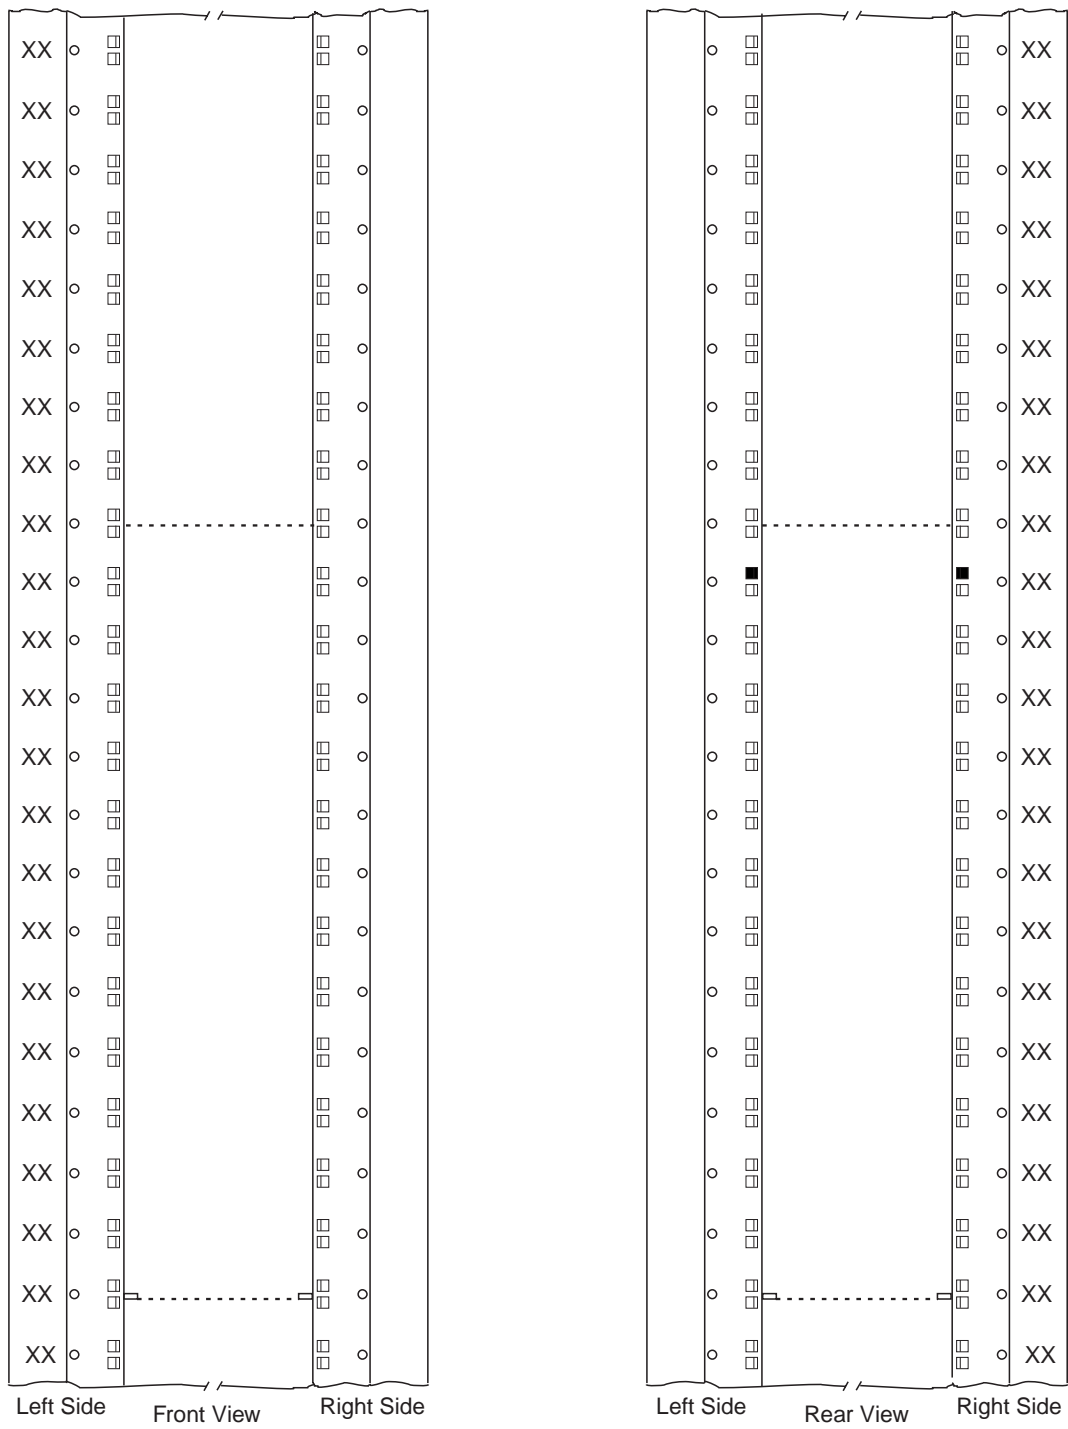


Figure C-7. Installing Captive Nuts and Brackets for MAE

**Note:** This symbol '■' identify the locations to install the captive nuts.

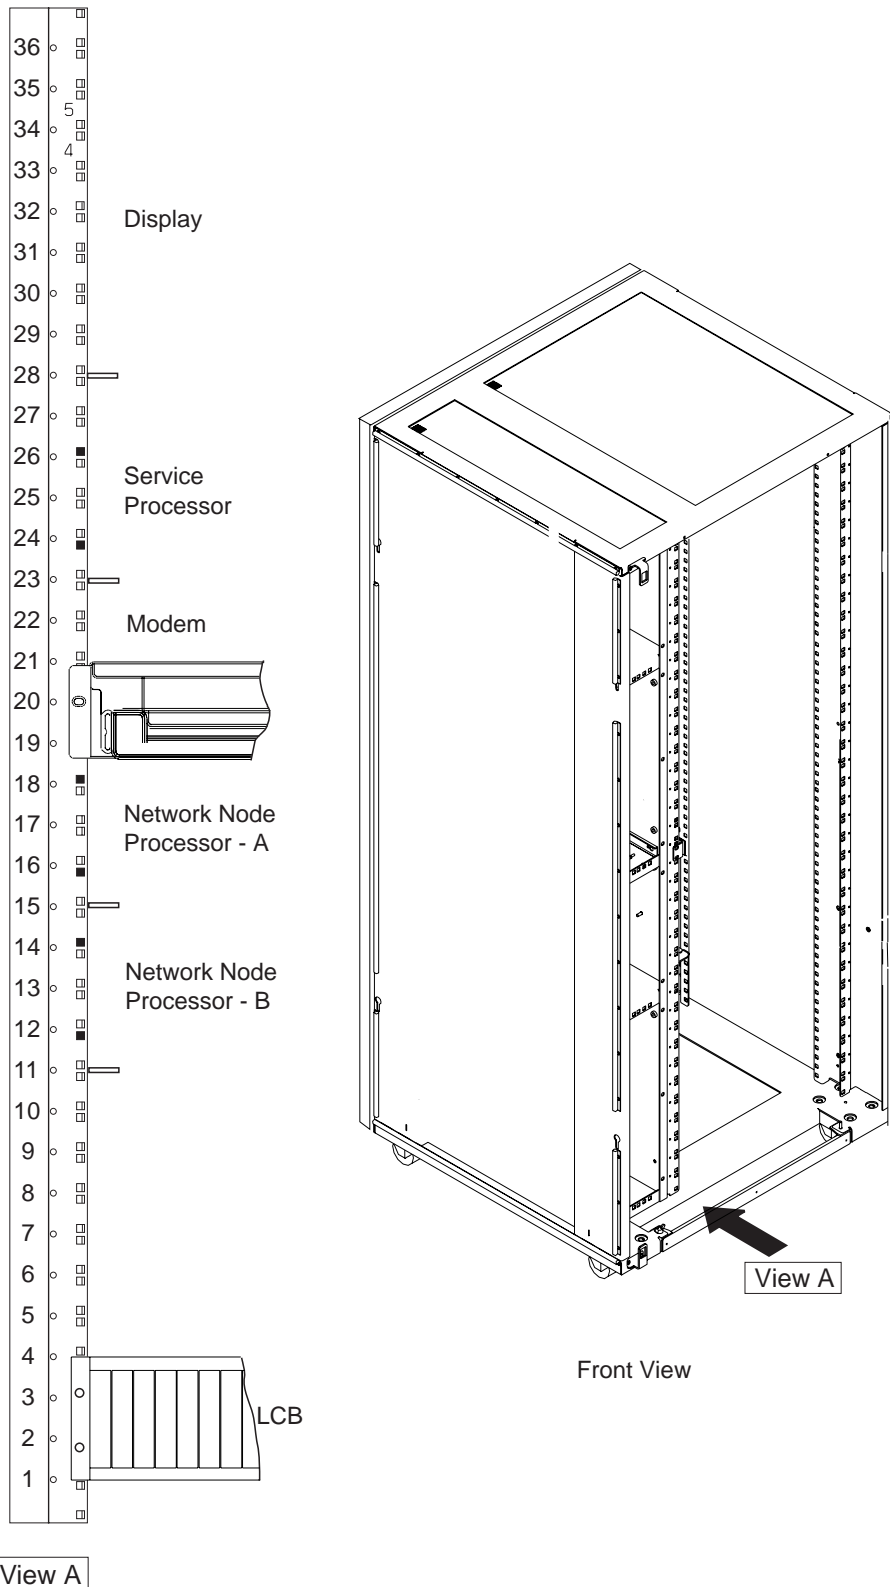


Figure C-8. Installing Brackets (PN 58G5752) for Processor Type 6275 or 7585

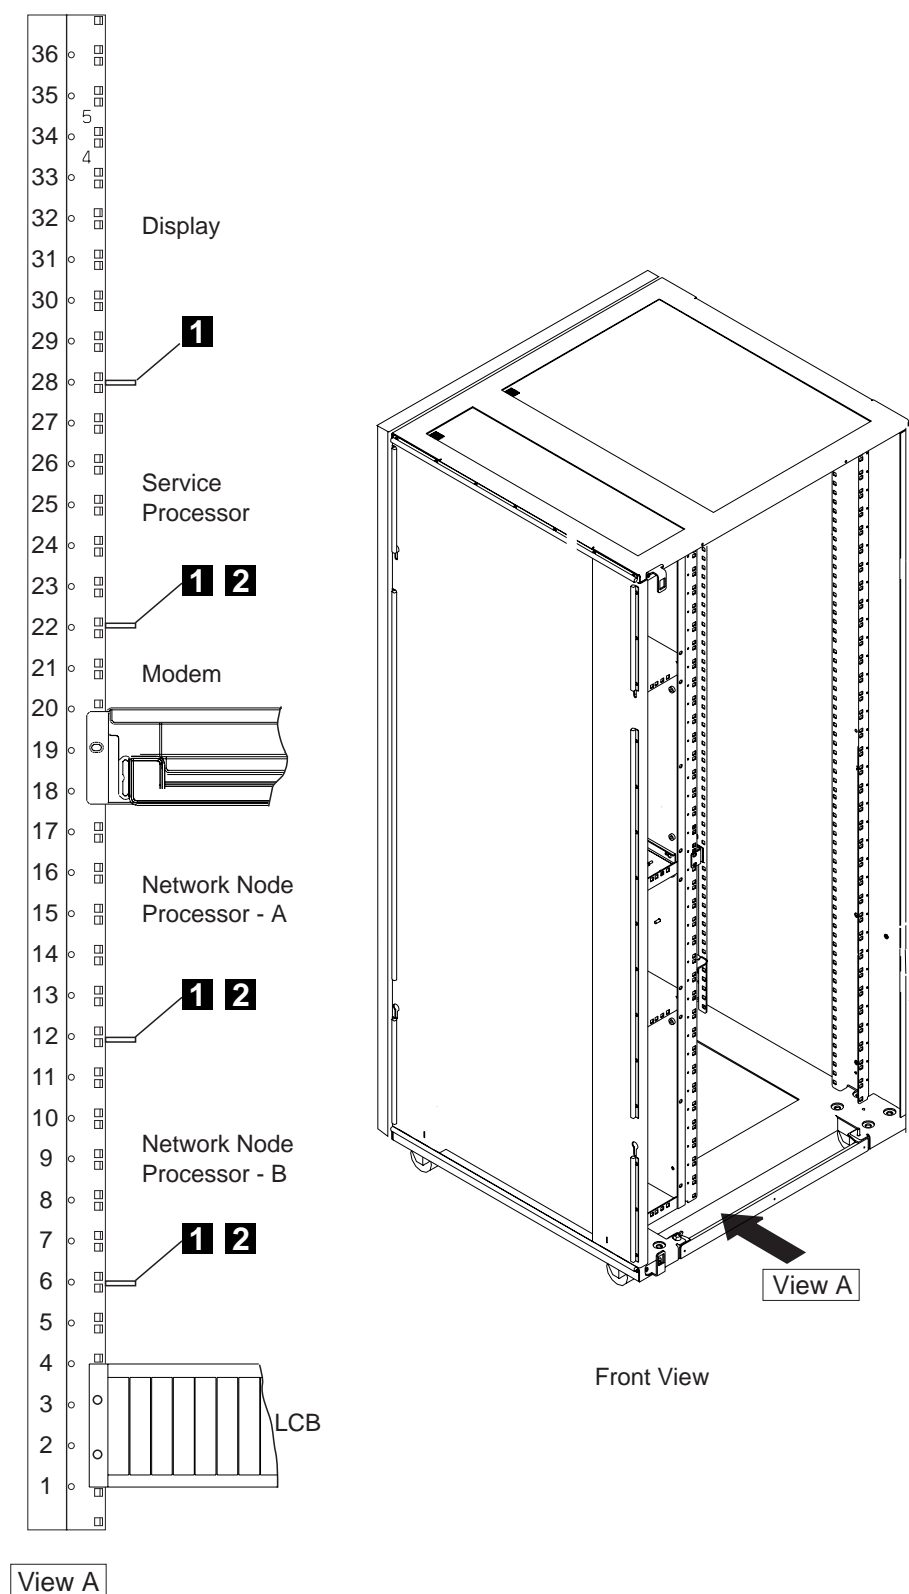


Figure C-9. Installing Brackets for Processor Type 3172

- **1** bracket used to install the display (PN 58G5752)
- **2** screws used to install the SP and NNP (PN 0782986)

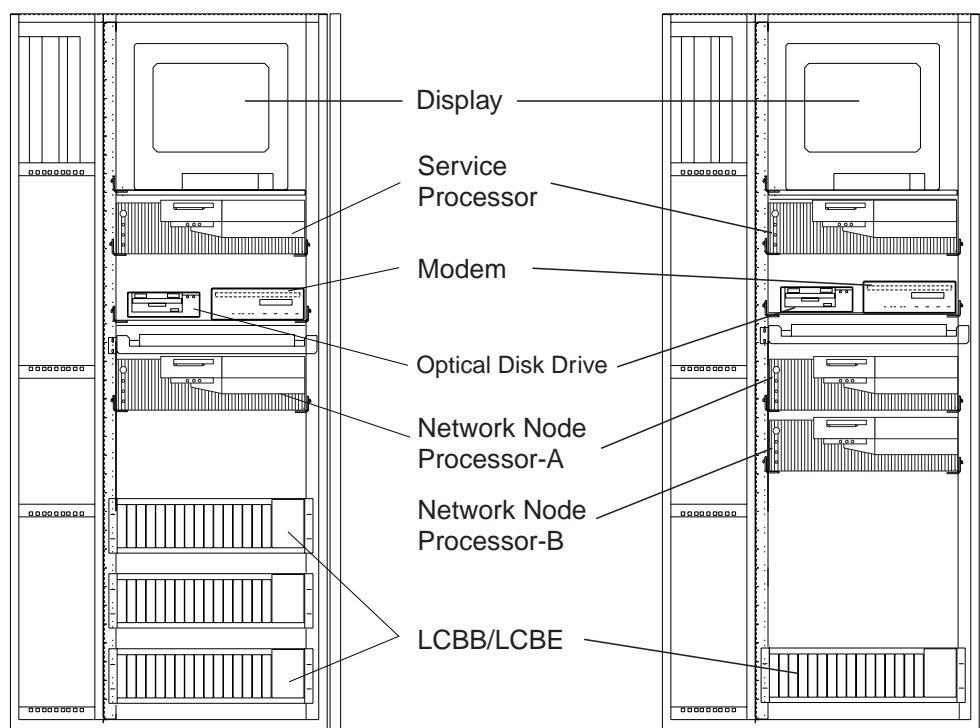


Figure C-10. Units Installation in the Controller Expansion (SP and NNP Type 6275)

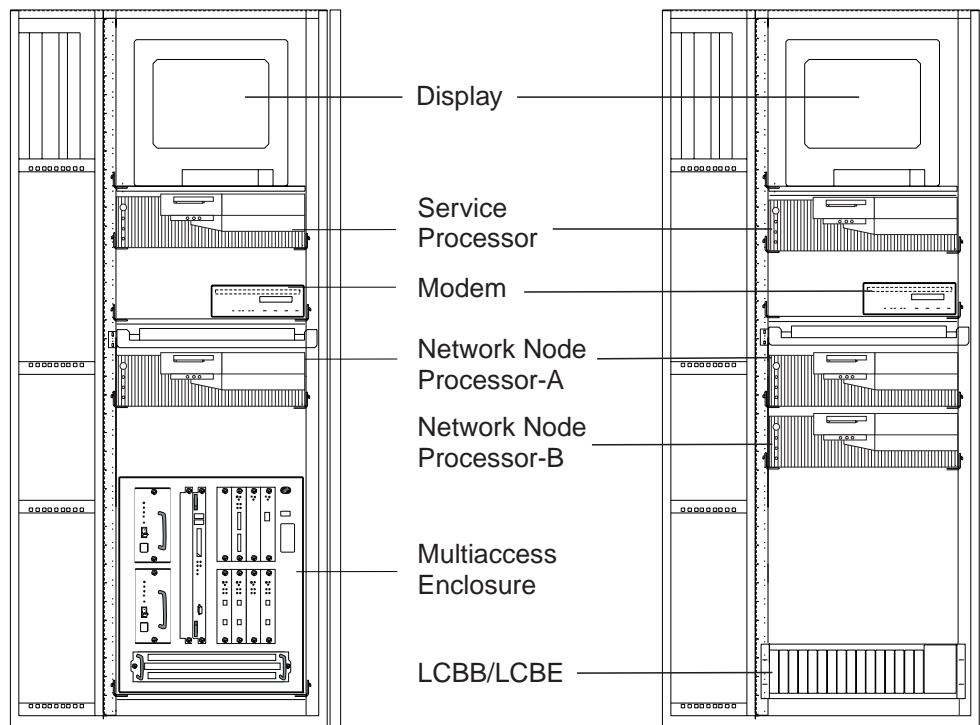


Figure C-11. Units Installation in the Controller Expansion (SP and NNP Type 6275 + MAE)

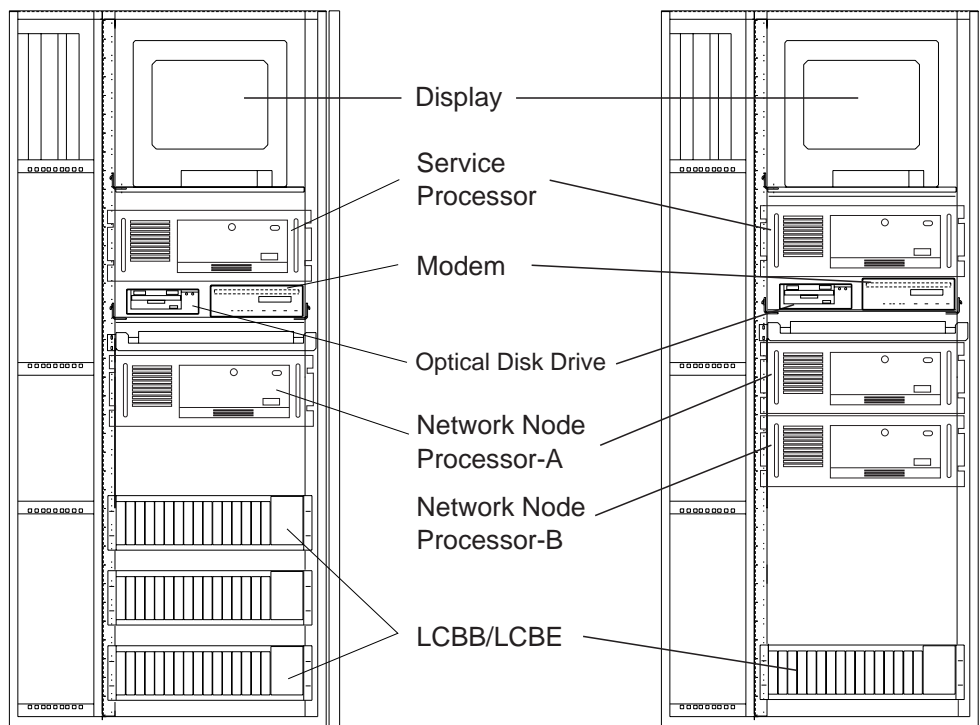


Figure C-12. Units Installation in the Controller Expansion (SP Type 7585)

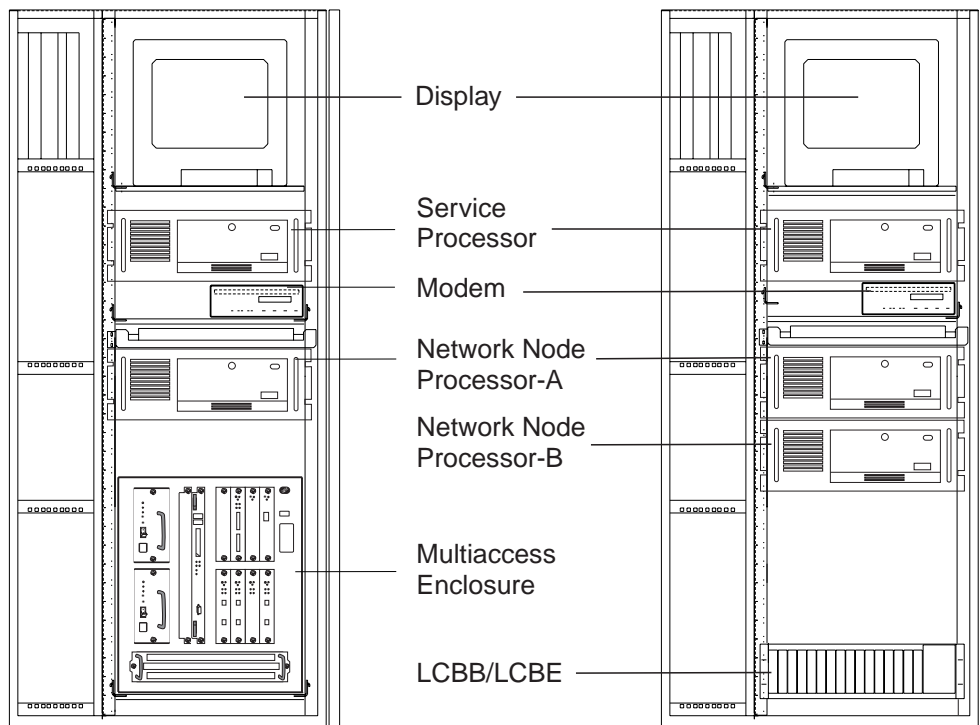


Figure C-13. Units Installation in the Controller Expansion (SP Type 7585 + MAE)

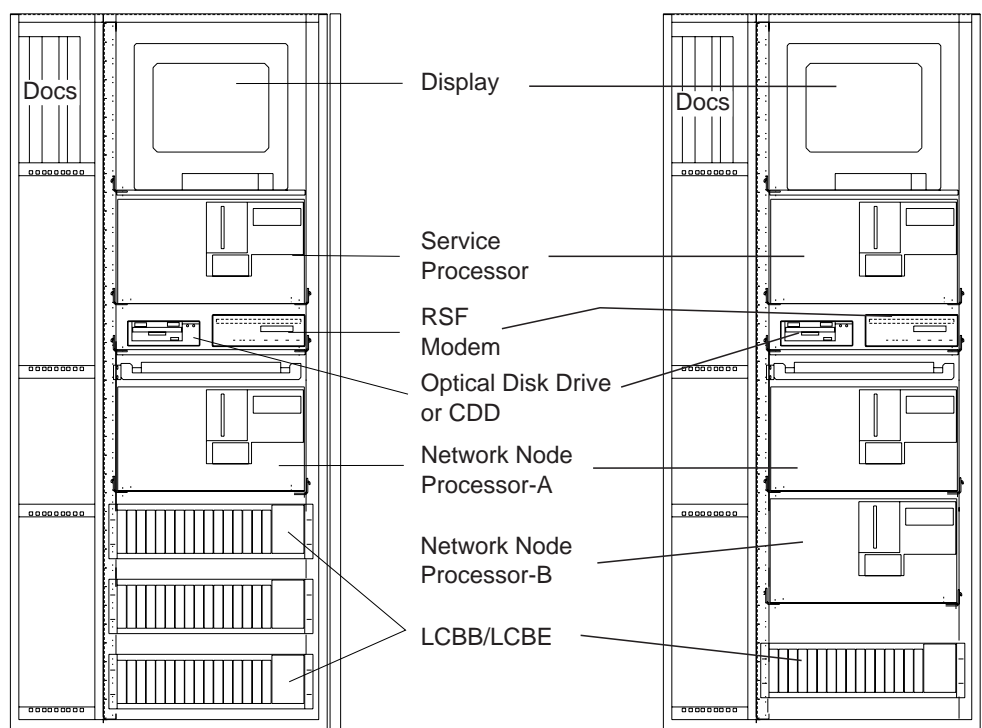


Figure C-14. Units Installation in the Controller Expansion (SP Type 3172)

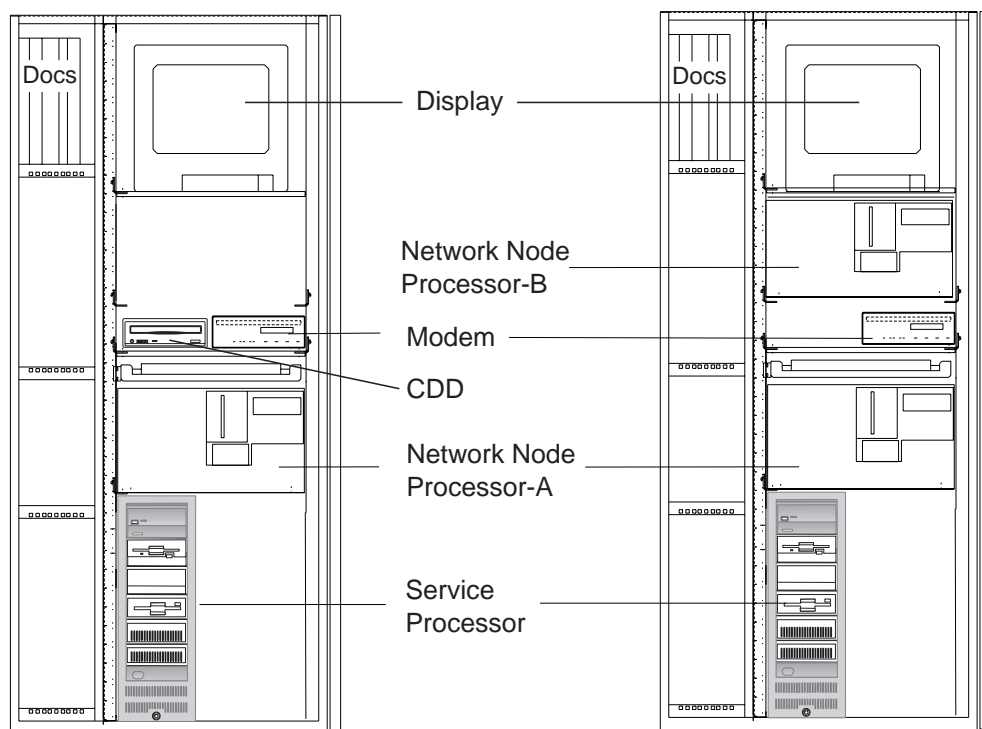


Figure C-15. Units Installation in the Controller Expansion (SP Type 9585)

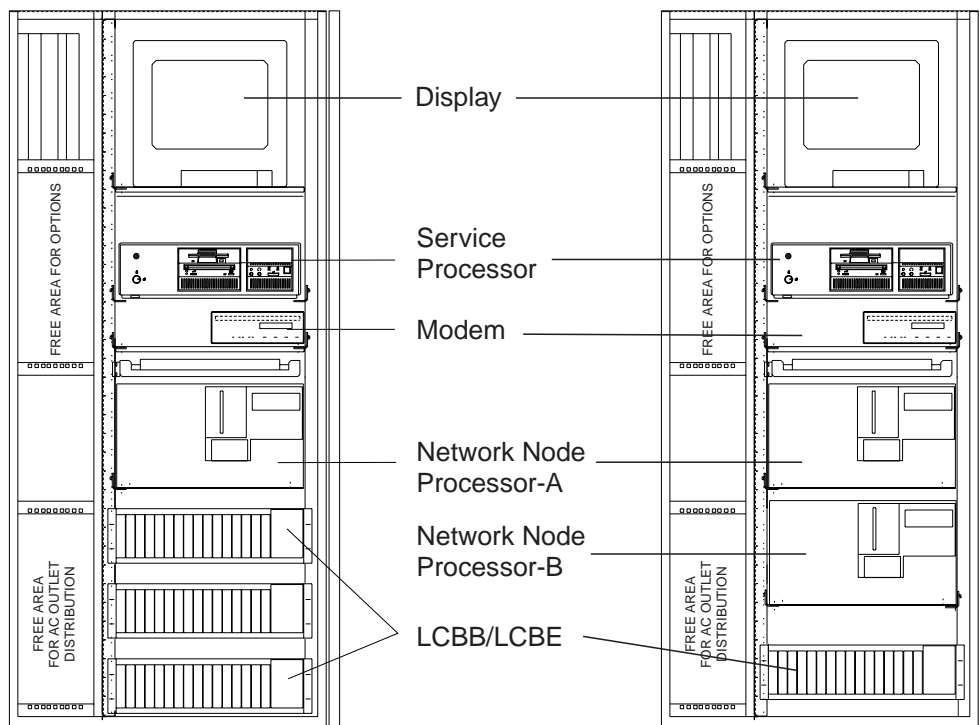


Figure C-16. Units Installation in the Controller Expansion (SP Type 9577)

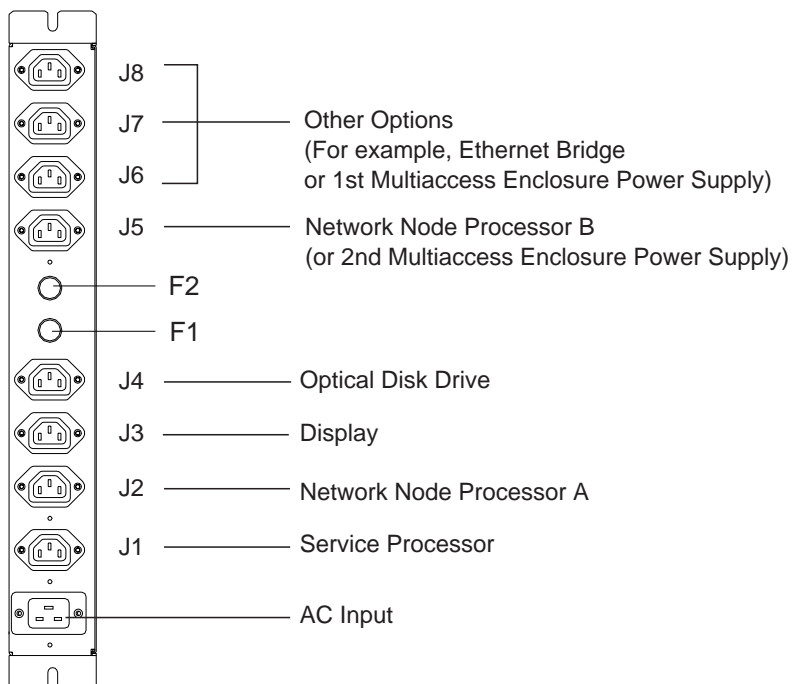


Figure C-17. Connecting the Units to the ac Outlet Distribution Box.



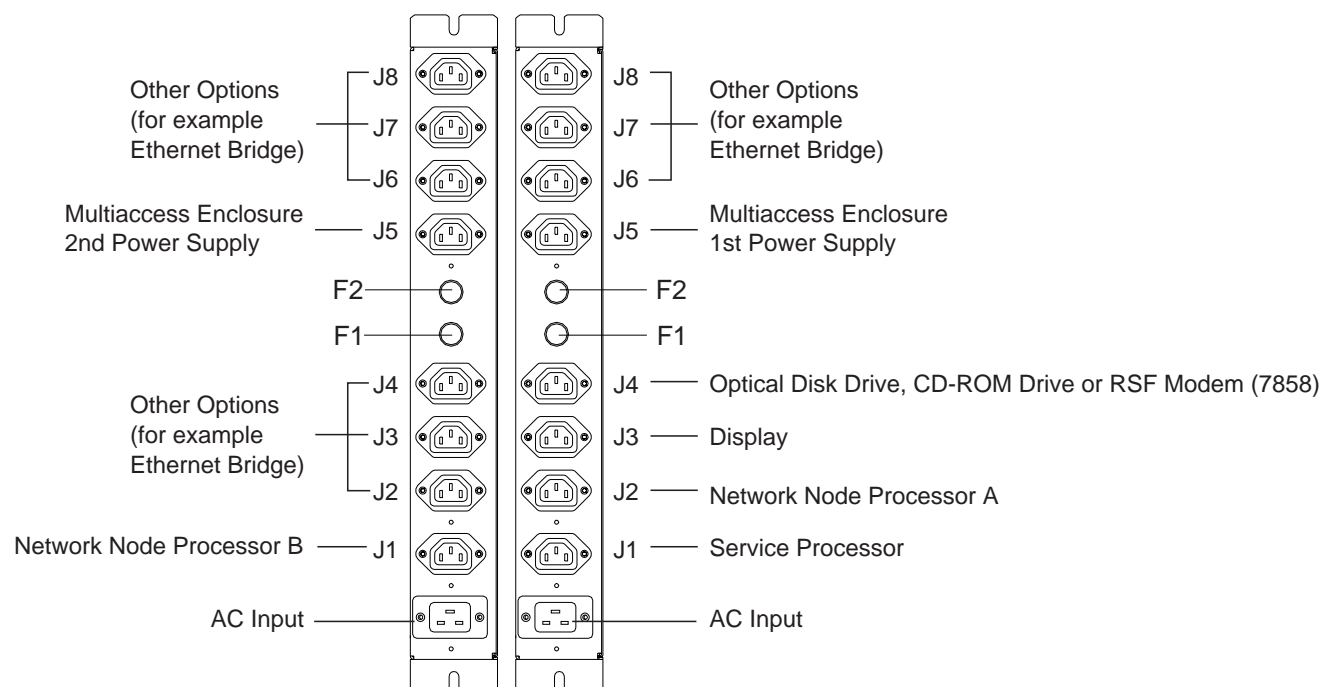


Figure C-18. Connecting the Units to the Dual ac Outlet Distribution Boxes



---

# Glossary

**ac.** alternating current

**ACPW.** AC power (box)

**AFD.** airflow detector

**alarm.** A message sent to the MOSS console. In case of an error a reference code identifies the nature of the error.

**alert.** A message sent to the host console. In case of an error a reference code identifies the nature of the error.

**AMD.** air moving device

**APPN.** advanced peer-to-peer networking

**ARC.** active remote connector

**ARC1A1.** ARC V.24 DCE attachment with 5 meter tethered cable

**ARC1A2.** ARC V.24 DCE attachment with 15 meter tethered cable

**ARC1B.** ARC V.24 DTE attachment with 15 meter tethered cable

**ARC1C.** ARC V.24 DCE 3745 interface with 5 meter tethered cable

**ARC1D.** ARC V.24 DTE 3745 interface with 5 meter tethered cable

**ARC1E.** ARC V.24 3174 AEA interface (1)

**ARC1F.** ARC V.24 3174 PCA EIA interface (1)

**ARC2A.** ARC V.25 autocall interface with 5 meter tethered cable

**ARC2C.** ARC V.25 autocall interface 3745 with 5 meter tethered cable

**ARC3A1.** ARC V.35 DCE attachment with 5 meter tethered cable

**ARC3A2.** ARC V.35 DCE attachment with 15 meter tethered cable

**ARC3B.** ARC V.35 DTE attachment with 15 meter tethered cable

**ARC3C.** ARC V.35 DCE 3745 interface with 5 meter tethered cable

**ARC3D.** ARC V.35 DTE 3745 interface with 5 meter tethered cable

**ARC4A1.** ARC X.21 DCE attachment with 5 meter tethered cable

**ARC4A2.** ARC X.21 DCE attachment with 15 meter tethered cable

**ARC4B.** ARC X.21 DTE attachment with 15 meter tethered cable

**ARC4C.** ARC V.21 DCE 3745 interface with 5 meter tethered cable

**ARC4D.** ARC V.21 DTE 3745 interface with 5 meter tethered cable

**ARC5A.** Reserved

**ARC5B.** Reserved

**ARC5C.** ARC RS-422 3708 interface (or RJ-11 connection) (1)

**ARC5D.** ARC RS-422 IBM Cabling System interface (1)

**ARC6A.** ARC V.25 autocall interface with 15 meter tethered cable

**ARC6C.** ARC V.25 autocall 3745 interface with 15 meter tethered cable

**BA.** basic access

**BAS.** basic board

**BATS.** basic assurance tests

**BER.** box event record

**BLPU.** basic level packaging unit

**BMI.** bit multiplex interface

**box event record (BER).** Information about an event detected by the controller. It is recorded on the disk/diskette and can be displayed on the operator console for event analysis.

**bps.** bits per second

**BSC.** binary synchronous communication

**BSI.** bus synchronism interface

**C.** Celsius

**C&SM.** customer and service information

**CA.** channel adapter

**cache.** A high-speed buffer storage that contains frequently accessed instructions and data; it is used to reduce access time.

**CB.** circuit breaker

**CBA.** controller bus adapter

**CBC.** controller bus coupler

**CBR.** circuit burst request

**CBSA.** controller bus and service adapter  
(CBSP+CBC+TIC3)

**CBSP.** controller bus and service processor

**CBTRA.** controller bus and token-ring adapter  
(TRP+CBC+TIC3)

**CBTRM.** cable terminator (IOC and DMA buses)

**CCITT.** Comite Consultatif International Telephonique  
et telegraphique

**CCU.** central control unit

**CDF.** configuration data file (3745)

**CDF-E.** configuration data file extended (37CS)

**CE.** customer engineer

**CEPT.** Comite Europeen des Postes et Telecommuni-  
cations

**CLA.** communication line adapter (CLP+LICnn)

**CLDP.** controller load/dump program

**clear channel.** Mode of data transmission where the data passes through the DCE and network, and arrives at the receiving communication controller (for example, the IBM 3745) unchanged from the data transmitted. The DCE or network can modify the data during transmission because of certain network restrictions, but must ensure the received data stream is the same as the transmitted data stream.

**CLP.** communication line processor

**CMIP.** common management interface protocol

**CNM.** communication network management

**CP.** 1.communication processor 2.control program  
3.circuit protector 4.control point

**CPLR.** coupler

**CPN.** customer problem number

**CPx.** FRU name of circuit protector

**CRC.** cyclic redundancy check character

**CS.** connectivity switch

**CSA.** common subassembly

**CSB.** connectivity switch bus

**CSC.** connectivity switch cable

**CSCE.** connectivity switch cable extension

**CSM.** centralized support module

**CSP.** central service point

**CSS.** control subsystem (3745)

**CTDA.** configuration target device (processor) address

**dc.** direct current

**DCAF.** Distributed Console Access Facility (licensed  
program)

**DCCS.** DC to connectivity subsystem

**DCE.** data circuit-terminating equipment

**DCDP.** DC distribution and protection (box)

**DCM.** diagnostic control monitor

**DCPW.** DC power box

**DICO.** DMA IOC connection card

**DM.** distribution manager

**DMA.** direct memory access

**DS.** data storage

**DSB.** data storage bus

**DSI.** data storage interface

**DSM.** data storage manager

**DSS.** data storage interface for SBA

**DSU.** data service unit (DCE-like for high-speed com-  
munication lines)

**DTE.** data terminal equipment

**EC.** engineering change

<b>EE.</b> extended edition	<b>initial program load (IPL).</b> The initialization procedure that causes the 3745 control program to commence operation.
<b>EIA.</b> Electronic Industries Association	<b>IO.</b> input/output
<b>EPO.</b> emergency power-off	<b>IOC.</b> input/output control
<b>EPROM.</b> eraseable PROM	<b>IOCB.</b> input/output control bus
<b>ESCA.</b> ESCON adapter	<b>IPL.</b> initial program load
<b>ESCC.</b> ESCON coupler	<b>IRAM.</b> instruction random access memory
<b>ESCON*.</b> Enterprise Systems Connection	<b>ISO.</b> International Organization for Standardization
<b>ESCP.</b> ESCON processor	<b>kbps.</b> kilobits per second
<b>ESD.</b> electrostatic discharge	<b>LA.</b> line adapter
<b>EXP.</b> expansion enclosure	<b>LAN.</b> local area network
<b>EXP1.</b> first expansion enclosure	<b>LCB.</b> line connection box
<b>EXP2.</b> second expansion enclosure	<b>LED.</b> light-emitting diode
<b>FCS.</b> frame check sequence	<b>LIC.</b> line interface coupler
<b>FRU.</b> field-replaceable unit	<b>LICx.</b> FRU name of line interface coupler type x (3745)
<b>HCS.</b> Hardware Central Service	<b>LLC.</b> logical link control
<b>HDLC.</b> high-level data link control	<b>LS.</b> local storage
<b>hex.</b> hexadecimal	<b>LSA.</b> link service architecture
<b>host processor.</b> (1) A processor that controls all or part of a user application network. (2) In a network, the processing unit in which the access method for the network resides. (3) In an SNA network, the processing unit that contains a system services control point (SSCP). (4) A processing unit that executes the access method for attached communication controllers. Also called <i>host</i> .	<b>LSCT.</b> LIM software configuration table
<b>HPPB.</b> high-performance parallel bus	<b>LSM.</b> local storage manager
<b>HSC.</b> hardware support center	<b>LSSD.</b> level-sensitive scan design (total hardware latches chain collection)
<b>HSF.</b> hardware service facility	<b>LU.</b> logical unit
<b>Hz.</b> Hertz	<b>MAC.</b> medium access control
<b>IBM service representative.</b> An individual in IBM who performs maintenance services for IBM products or systems.	<b>MAE.</b> Multiaccess enclosure
<b>IEEE.</b> Institute of Electrical and Electronics Engineers	<b>MAP.</b> maintenance analysis-procedure
<b>IML.</b> initial microcode load	<b>MAU.</b> multistation access unit
<b>initial microcode load (IML).</b> The process of loading the microcode into a scanner or into MOSS.	<b>MB.</b> megabyte; 1 048 576 bytes
	<b>MCF.</b> microcode fix
	<b>MCL.</b> microcode change level
	<b>MES.</b> miscellaneous equipment specification
	<b>MG.</b> motor generator

**MI.** maskable interrupt

**microcode.** A program, that is loaded in a processor (for example, the MOSS processor)

**MLA.** MOSS LAN adapter

**MMIO.** memory mapped input/output

**maintenance and operator subsystem (MOSS).** The part of the controller that provides operating and servicing facilities to the customer's operator and the IBM service representative.

**MOSS.** maintenance and operator subsystem (3745)

**MOSS-E.** maintenance and operator subsystem extended (37CS)

**NA.** network addressable

**NCP.** Network Control Program

**NDM.** netview distribution manager

**NetView.** An IBM licensed program used to monitor a network, manage it, and diagnose its problems.

**Network Control Program (NCP).** An IBM licensed program that provides communication controller support for single-domain, multiple-domain, and interconnected network capability.

**NMI.** non-maskable interrupt

**NMVT.** network management vector transport

**NNP.** network node processor

**NODA.** next origin device (processor) address

**NPM.** NetView performance monitor

**NTDA.** next target device (processor) address

**OEMI.** original equipment manufacturer's interface

**OLT.** online test

**online tests.** Testing of a remote data station concurrently with the execution of the user's programs (that is, with only minimal effect on the user's normal operation).

**OSI.** open system interconnect

**PA.** primary access

**PBC.** packet burst control

**PBG.** packet burst grant

**PCR.** 1.pico-processor command register 2.power check reset

**PICA.** process and intertask communication architecture

**PMH.** problem management hardware

**PN.** part number

**PNL.** control panel

**POR.** power-ON reset

**PP.** pico-processor

**PPB.** primary power box

**PPC.** PowerPC (system card of MAE)

**PRC.** processor

**PRDA.** packet request device (processor) address

**PROM.** programable read-only memory

**PS.** power supply

**PSI.** packet switch interface

**PSN.** public switched network

**PTCE.** product-trained CE

**PTF.** program temporary fix

**PTT.** Post, Telephone and Telegraph (agency)

**PU.** physical unit

**RETAIN.** Remote Technical Assistance Information Network

**RNR.** receiver not ready

**RPL.** remote program load

**RPO.** remote power-off

**RSC.** remote service center

**RSF.** remote support facility

**RVX.** stands for RS232, RS422, V.24-35, X.21-2x connections

**SAC.** switch adapter card

**SATS.** specific assurance tests

**SBA.** switch bus adapter

<b>SBI.</b> switch bus interface	<b>TIC2.</b> token-ring interface coupler type 2 (3745) running at speed of 4 or 16 Mbits
<b>SC.</b> switch control	<b>TIC3.</b> token-ring interface coupler type 3 (37CS) running at speed of 4 or 16 Mbits
<b>SDLC.</b> synchronous data link control	<b>time out.</b> The time interval allotted for certain operations to occur.
<b>SIE.</b> switch interface extender	<b>TPS.</b> two-processor switch
<b>SL.</b> service logic	<b>TR.</b> token-ring
<b>SNA.</b> Systems Network Architecture	<b>TRA.</b> token-ring adapter (TRP+TIC3)
<b>SNMP.</b> Simple network management protocol	<b>TRFM.</b> transformer
<b>SPD1.</b> signal and power distribution type 1	<b>TRP.</b> token-ring processor
<b>SPD2.</b> signal and power distribution type 2	<b>TRS.</b> transmitter/receiver subassembly
<b>SPDL.</b> signal and power distribution card in LCB	<b>UEPO.</b> unit emergency power-off
<b>SPS.</b> service and power support	<b>URSF.</b> universal remote support facility
<b>SQL.</b> structured query language	<b>UTP.</b> Unshielded twisted pair cable
<b>SRC.</b> system reference code	<b>V.</b> volt
<b>SSA.</b> system service architecture	<b>V.24.</b> CCITT V.24 recommendation
<b>SSCP.</b> system services control point	<b>V.25.</b> CCITT V.25 recommendation
<b>STCn.</b> signal transfer card n	<b>V.28.</b> CCITT V.28 recommendation
<b>SSS.</b> subsystem support service	<b>V.35.</b> CCITT V.35 recommendation
<b>Systems Network Architecture (SNA).</b> The description of the logical structure, formats, protocols, and operational sequences for transmitting information through a user application network. The structure of SNA allows the users to be independent of specific telecommunication facilities.	<b>VPD.</b> vital product data
<b>TB.</b> terminator block	<b>VTAM*.</b> Virtual Telecommunications Access Method
<b>TDM.</b> time division multiplexing	<b>VTL.</b> vendor technology logic
<b>TDR.</b> technical data record	<b>W.</b> watt
<b>TERC.</b> terminator card	<b>X.21.</b> CCITT X.21 recommendation
<b>TIC1.</b> token-ring interface coupler type 1 (3745) running at speed of 4 Mbits	<b>X.25.</b> CCITT X.25 recommendation
	<b>YZxxx.</b> wiring diagram






# Bibliography

## Service Documentation for the IBM 3746 Model 950

Table X-1 (Page 1 of 3). Service Documentation for the 3746 Model 950

This service documentation has the following formats:

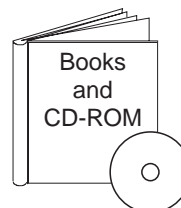

SY33-2107

**IBM 3746 Nways Multiprotocol Controller Model 950  
Installation Guide<sup>1</sup>**

Provides instructions for installing or relocating the Nways Controller.



SY33-2108

**IBM 3746 Nways Multiprotocol Controller  
Model 950  
Service Guide<sup>1</sup>**

Provides procedures for isolating and fixing the IBM 3746-950 problems.



SY33-2115

**IBM 3745 Communication Controller Models A<sup>2</sup>  
IBM 3746 Expansion Unit Model 900  
IBM 3746 Nways Multiprotocol Controller Model 950  
Service Processor Installation and Maintenance<sup>3</sup>  
(Based on the 7585, 3172, 9585, or 9577)**

Provides information on installing and maintaining the service processor based on PS/2 Types 7585, 3172, 9585, or 9577. Can be for systems with microcode that has up to and including EC D46130 (any level) installed.



SY33-2120

**IBM 3745 Communication Controller Models A<sup>3</sup>  
IBM 3746 Expansion Unit Model 900  
IBM 3746 Nways Multiprotocol Controller Model 950  
Service Processor Installation and Maintenance<sup>4</sup>  
(Based on the 7585, 3172, or 9585)**

Provides information on installing and maintaining the service processor based on PS/2 Types 7585, 3172, or 9585. Can be for systems with microcode EC F12380 or higher installed.



SY33-2125

**IBM 3745 Communication Controller Models A<sup>3</sup>  
IBM 3746 Expansion Unit Model 900  
IBM 3746 Nways Multiprotocol Controller Model 950  
Service Processor Installation and Maintenance<sup>4</sup>  
(Based on 6275)**

Provides information on installing and maintaining the service processor based on PS/2 Type 6275. Can be for systems with microcode EC F12380 or higher installed.

Table X-1 (Page 2 of 3). Service Documentation for the 3746 Model 950











	SY33-2118	<p><b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b></p> <p><b>Multiaccess Enclosure Installation and Maintenance<sup>4</sup></b></p> <p>Provides information on installing and maintaining the Multiaccess Enclosure (MAE).</p>
	SY33-2124	<p><b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b></p> <p><b>Multiaccess Enclosure Installation and Maintenance<sup>4</sup></b> (Starting from EC F12430 and Above)</p> <p>Provides information on installing and maintaining the Multiaccess Enclosure (MAE). For systems with microcode EC F12430 or higher installed.</p>
	SY33-2112	<p><b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b></p> <p><b>Network Node Processor Installation and Maintenance<sup>3</sup></b> (Based on the 7585 or 3172)</p> <p>Provides information on installing and maintaining the network node processor based on the PS/2 Type 7585 or 3172.</p>
	SY33-2126	<p><b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b></p> <p><b>Network Node Processor Installation and Maintenance<sup>3</sup></b> (Based on 6275)</p> <p>Provides information on installing and maintaining the network node processor based on the PS/2 Type 6275.</p>
	SY33-2127	<p><b>IBM 3745 Communication Controller Models A<sup>3</sup></b> <b>IBM 3746 Expansion Unit Model 900</b> <b>IBM 3746 Nways Multiprotocol Controller Model 950</b></p> <p><b>Service Processor and Network Node Processor<sup>4</sup></b> <b>Service User's Guide</b></p> <p>Provides information on installing and maintaining the operational code on service processor, or network node processor. Can be for systems with microcode EC F12380 or higher installed.</p>
	SY33-2117	<p><b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b></p> <p><b>External Cable Reference<sup>4</sup></b></p> <p>Provides references to console and line cables used for connecting the IBM 3746 Models 900 and 950.</p>
	S135-2015	<p><b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b></p> <p><b>Parts Catalog<sup>4</sup></b></p> <p>Provides reference information for ordering parts for the IBM 3746 Models 900 and 950.</p>
	S135-2014	<p><b>IBM Controller Expansion</b></p> <p><b>Parts Catalog</b></p> <p>Provides reference information for ordering parts for the controller expansion attached to the IBM 3745 Models A<sup>2</sup>, and 3746 Models 900 and 950.</p>

Table X-1 (Page 3 of 3). Service Documentation for the 3746 Model 950		
CD-ROM Bibliography		
	ZK2T-8214	<p><b>IBM Networking Softcopy Collection Kit</b></p> <p>Allows service manuals consulting via CD-ROM viewer. EMEA version.</p>
	ZK2T-8187	<p><b>IBM Networking Softcopy Collection Kit</b></p> <p>Allows service manuals consulting via CD-ROM viewer. US version.</p>
<p><sup>1</sup> Documentation shipped with the 3746 Model 950</p> <p><sup>2</sup> 3745 Models 17A to 61A</p> <p><sup>3</sup> Documentation shipped with the processor</p> <p><sup>4</sup> Documentation shipped with the 3746 Models 900 and 950</p>		

## Customer Documentation for the 3746 Model 950

Table X-2 (Page 1 of 4). Customer Documentation for the 3746 Model 950

This customer documentation has the following formats:

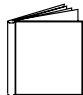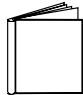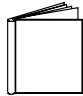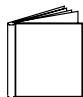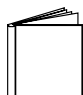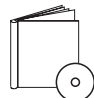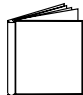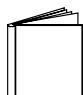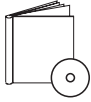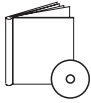

### Finding Information

#### **3745 Models A and 3746 Books**

All of the books in the 3745 Models A and 3746 library are available on the CD-ROM that contains the Licensed Internal Code (LIC) for the machine.

### Preparing for Operation



GA33-0400

**IBM 3745 Communication Controller All Models<sup>1</sup>**  
**IBM 3746 Expansion Unit Model 900**  
**IBM 3746 Nways Multiprotocol Controller Model 950**

#### **Safety Information<sup>2</sup>**

Provides general safety guidelines.

### Evaluating and Configuring



GA33-0180

**IBM 3745 Communication Controller Models A and 170<sup>3</sup>**  
**IBM 3746 Nways Multiprotocol Controller**  
**Models 900 and 950**

#### **Overview**

Gives an overview of connectivity capabilities within SNA, APPN, and IP networking.



GA27-4234

**IBM 3745 Communication Controller Models A<sup>2</sup>**  
**IBM 3746 Nways Multiprotocol Controller**  
**Models 900 and 950**

#### **Planning Series: Overview, Installation, and Integration**

Provides information for:

- Overall 3746 planning
- Installation and upgrade scenarios
- Controller and service processor network integration
- Related MOSS-E and CCM worksheets for these tasks.

Table X-2 (Page 2 of 4). Customer Documentation for the 3746 Model 950





	GA27-4235	<b>IBM 3745 Communication Controller Models A<sup>2</sup></b> <b>IBM 3746 Nways Multiprotocol Controller</b> <b>Models 900 and 950</b>
		<b>Planning Series:</b> <b>Serial Line Adapters</b>
		Provides information for: <ul style="list-style-type: none"> <li>• Serial line adapter descriptions</li> <li>• Serial line adapter line weights and connectivity</li> <li>• Types of SDLC support</li> <li>• Configuring X.25 lines</li> <li>• Performance tuning for frame-relay, PPP, X.25, and NCP lines.</li> <li>• ISDN adapter description and configuration.</li> </ul>
	GA27-4236	<b>IBM 3745 Communication Controller Models A<sup>2</sup></b> <b>IBM 3746 Nways Multiprotocol Controller</b> <b>Models 900 and 950</b>
		<b>Planning Series:</b> <b>Token Ring and Ethernet</b>
		Provides information for: <ul style="list-style-type: none"> <li>• Token-ring adapter description and configuration</li> <li>• Ethernet adapter description and configuration.</li> </ul>
	GA27-4237	<b>IBM 3745 Communication Controller Models A<sup>2</sup></b> <b>IBM 3746 Nways Multiprotocol Controller</b> <b>Models 900 and 950</b>
		<b>Planning Series:</b> <b>ESCON Channels</b>
		Provides information for: <ul style="list-style-type: none"> <li>• ESCON adapter descriptions</li> <li>• ESCON configuration and tuning information</li> <li>• ESCON configuration examples.</li> </ul>
	GA27-4238	<b>IBM 3745 Communication Controller Models A<sup>2</sup></b> <b>IBM 3746 Nways Multiprotocol Controller</b> <b>Models 900 and 950</b>
		<b>Planning Series:</b> <b>Physical Planning</b>
		Provides information for: <ul style="list-style-type: none"> <li>• 3746 and MAE physical planning details</li> <li>• 3746 and MAE cable information</li> <li>• Explanation of installation sheets</li> <li>• 3746 plugging sheets.</li> </ul>

Table X-2 (Page 3 of 4). Customer Documentation for the 3746 Model 950





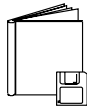

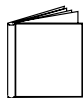
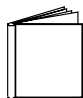

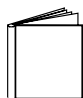
	GA27-4239	<b>IBM 3745 Communication Controller Models A<sup>2</sup></b> <b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b>
		<b>Planning Series:</b> <b>Management Planning</b>
		Provides information for: <ul style="list-style-type: none"> <li>• Overview for 3746</li> <li>• 3746 APPN/HPR, IP router, and X.25</li> <li>• NetView Performance Monitor (NPM), remote consoles, and RSF</li> <li>• MAE APPN/HPR management.</li> </ul>
	GA27-4240	<b>IBM 3745 Communication Controller Models A<sup>2</sup></b> <b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b>
		<b>Planning Series:</b> <b>Multiaccess Enclosure Planning</b>
		Provides information for: <ul style="list-style-type: none"> <li>• MAE adapters details</li> <li>• MAE ESCON planning and configuration</li> <li>• ATM and ISDN support.</li> </ul>
	GA27-4241	<b>IBM 3745 Communication Controller Models A<sup>2</sup></b> <b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b>
		<b>Planning Series:</b> <b>Protocols Description</b>
		Provides information for: <ul style="list-style-type: none"> <li>• Overview and details about APPN/HPR and IP.</li> </ul>
	On-line information	<b>IBM 3745 Communication Controller Models A<sup>2</sup></b> <b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b>
		<b>Planning Series:</b> <b>Controller Configuration and Management Worksheets</b>
		Provides planning worksheets for ESCON, Multiaccess Enclosure, serial line, and token-ring definitions.

Table X-2 (Page 4 of 4). Customer Documentation for the 3746 Model 950

Operating and Testing		
	SA33-0356	<p><b>IBM 3746 Nways Multiprotocol Controller Model 950</b></p> <p><b>User's Guide<sup>2</sup></b></p> <p>Explains how to:</p> <ul style="list-style-type: none"> <li>• Carry out daily routine operations on Nways controller</li> <li>• Install, test, and customize the Nways controller after installation</li> <li>• Configure user's workstations to remotely control the service processor using: <ul style="list-style-type: none"> <li>– DCAF program</li> <li>– Telnet client program</li> <li>– Java Console support.</li> </ul> </li> </ul>
	On-line information	<p><b>Controller Configuration and Management Application</b></p> <p>Provides a graphical user interface for configuring and managing a 3746 APPN/HPR network node and IP Router, and its resources. It is also available as a stand-alone application, using an OS/2 workstation. Defines and explains all the 3746 Network Node and IP Router configuration parameters through its on-line help.</p>
	SH11-3081	<p><b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b></p> <p><b>Controller Configuration and Management: User's Guide<sup>2</sup></b></p> <p>Explains how to use CCM and gives examples of the configuration process.</p>
	GA33-0479	<p><b>IBM 3745 Communication Controller Models A</b>  <b>IBM 3746 Nways Multiprotocol Controller Models 900 and 950</b></p> <p><b>NetView Console</b>  <b>APPN Command Reference Guide</b></p> <p>Explains how to use the RUN COMMAND from the NetView S/390 Program and gives examples.</p>
Managing Problems		
	On-line information	<p><b>Problem Analysis Guide</b></p> <p>An on-line guide to analyze alarms, events, and control panel codes on:</p> <ul style="list-style-type: none"> <li>• IBM 3745 Communication Controller Models A<sup>3</sup></li> <li>• IBM 3746 Nways Multiprotocol Controller Models 900 and 950.</li> </ul>
	SA33-0175	<p><b>IBM 3745 Communication Controller Models A<sup>3</sup></b>  <b>IBM 3746 Expansion Unit Model 900</b>  <b>IBM 3746 Nways Multiprotocol Controller Model 950</b></p> <p><b>Alert Reference Guide</b></p> <p>Provides information about events or errors reported by alerts for:</p> <ul style="list-style-type: none"> <li>• IBM 3745 Communication Controller Models A<sup>3</sup></li> <li>• IBM 3746 Nways Multiprotocol Controller Models 900 and 950.</li> </ul>
<p><sup>1</sup> Models 130 to 61A.  <sup>2</sup> Documentation shipped with the 3746-950  <sup>3</sup> 3745 Models 17A to 61A.</p>		

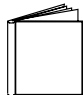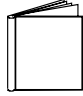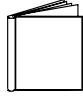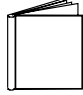

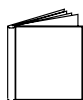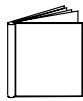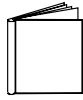

---

# Index

## Numerics

- 3746-950
  - documentation for installation 1-3
  - Frame checking 2-2
  - overview 1-2
- 3746-950 Component locations B-1
- 3746-950 frame
  - rear view 2-2
- 3746-950 installation and connection to the service processor 2-1
- 3746-950 locations
  - basic board (coupler side) B-7
  - board (coupler side) B-6
  - board (processor side) B-5
  - expansion board (coupler side) B-7
  - Labels front side B-5
  - Labels rear side B-6
- 8228

## A

- Adapter
  - Adapter for ARC 3A1 or 3A2 4-18
  - Adapter for ARC 3B 4-18
- ARC
  - ARC Connection Type 3746-900 4-15
  - ARC location 4-10
  - ARC Type 4-16
  - ARC Type 3745 4-15
  - Connection cable type 3745 4-19

## B

- basic assurance test
  - See BAT (basic assurance test)
- BAT (basic assurance test) 2-11

## C

- Cable
  - ARC cables 4-11
  - Cable connector type 3745 4-17
- cables setup
- checkout procedure (3746-950) 3-3
- configuration 1-3
- connecting the main power 2-24
- control panel
  - test 3-4
- control panel (3746-950)
  - layout 3-2
- Controller Expansion Component locations C-1

Controller Expansion locations

## D

- data cables
  - ethernet bridge cabling 2-21
- data transmission exchange
  - See DTE (data transmission exchange) port
- DTE (data transmission exchange) port 2-10

## E

- ESCA
  - ESCA view 4-6
  - RVX cables 4-7

## F

- flash memory 2-10

## G

- ground bracket installation 5-1
- ground brackets
  - 3746-950 and controller expansion 5-2
  - 3746-950 ground brackets 5-4
  - controller expansion ground brackets 5-5
  - on 3746-950 (front) 5-4

## I

- installation
  - preparation 1-7
- installation time 1-7
- installing
  - cables from LCBB/LCBE to DTE/DCE 4-10
  - cables from LIC11 to LCBB 4-9
  - cables from LIC12 to DTE/DCE 4-19
  - controller expansion 2-3
  - ESCA cables 4-4
  - LCB 4-8
  - TRA cables 4-2

## L

- LCB
  - LCB view 4-8

## M

- machine ready for customer 6-1
- Making ready to install 1-7

## O

operational software 2-10

## P

plan view 1-3

Power 2-24

connection 2-24

measurement 2-25

Power Area with 1 AC and 1 DC.

front view B-8

Power Area with 2 AC.

front view B-8

power cable attachment 2-11

Preparing for Installation 1-1

## R

Removal

Removal or Relocation of the 3746-950 7-1

removing

shipping bars 2-3

RETAIN

Manual Call to RETAIN from a 3746-950 2-45

Route the Optical Fiber

optical fiber guide 4-4, 4-5

## S

special tools/test equipment 1-6

## T

test procedure 3-1

TIC3

TIC3 view 4-2

TRA cables

shielded cables 4-2

unshielded cables 4-3

Transformer Connection

Transformer Connection 2-26

## Y

Year 2000

microcode levels required xiv

readiness xiv

---

# Tell Us What You Think!

**3746 Nways Multiprotocol Controller  
Model 950  
Installation Guide  
Publication No. SY33-2107-05**

We hope you find this publication useful, readable, and technically accurate, but only you can tell us! Your comments and suggestions will help us improve our technical publications. Please take a few minutes to let us know what you think by completing this form. If you are in the USA, you can mail this form postage free or fax it to us at 1-800-253-3520. Elsewhere, your local IBM branch office or representative will forward your comments or you may mail them directly to us.

Overall, how satisfied are you with the information in this book?	Satisfied	Dissatisfied
	<input type="checkbox"/>	<input type="checkbox"/>

How satisfied are you that the information in this book is:	Satisfied	Dissatisfied
Accurate	<input type="checkbox"/>	<input type="checkbox"/>
Complete	<input type="checkbox"/>	<input type="checkbox"/>
Easy to find	<input type="checkbox"/>	<input type="checkbox"/>
Easy to understand	<input type="checkbox"/>	<input type="checkbox"/>
Well organized	<input type="checkbox"/>	<input type="checkbox"/>
Applicable to your task	<input type="checkbox"/>	<input type="checkbox"/>

Specific comments or problems:

---

---

---

Please tell us how we can improve this book:

---

---

---

Thank you for your comments. If you would like a reply, provide the necessary information below.

Name	Address
Company or Organization	
Phone No.	

**Tell Us What You Think!**  
SY33-2107-05



Cut or Fold  
Along Line


Fold and Tape

Please do not staple

Fold and Tape



NO POSTAGE  
NECESSARY  
IF MAILED IN THE  
UNITED STATES



## BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

Design & Information Development  
Dept. CGF/Bldg. 656  
International Business Machines Corporation  
PO BOX 12195  
RESEARCH TRIANGLE PARK NC 27709-9990



Fold and Tape

Please do not staple

Fold and Tape

SY33-2107-05

Cut or Fold  
Along Line






Part Number: 29H4713



Printed in the United States of America  
on recycled paper containing 10%  
recovered post-consumer fiber.

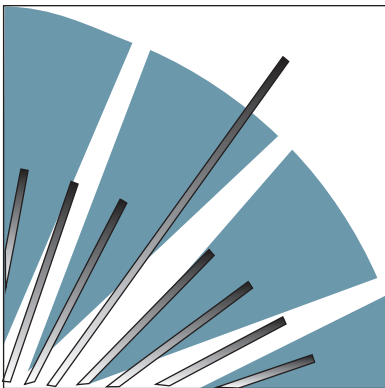

SY33-2107-05



29H4713

