

Pioneer

ELITE

**AUDIO/VIDEO
MULTI-CHANNEL RECEIVER**

VSX-33TX

Operating Instructions

Thank you for buying this Pioneer product. Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

[For U.S. model] IMPORTANT NOTICE

The serial number for this equipment is located on the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

THE STANDBY/ON BUTTON IS SECONDARY CONNECTED AND THEREFORE DOES NOT SEPARATE THE UNIT FROM MAINS POWER IN STANDBY POSITION.

IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

[For Canadian model]

This Class B digital apparatus complies with Canadian ICES-003.

[Pour le modèle Canadien]

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

[For Canadian model]

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR LES CHOCES ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSERES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

ATTENTION: AFIN DE PREVENIR TOUTS RISQUES DE CHOC ELECTRIQUE OU DE DEBUT D'ENCENDIE, NE PAS EXPOSER CET APPAREIL A L'HUMIDITE OU A LA PLUIE.

LE BOUTON STANDBY/ON EST RACCORDE SECONDAIREMENT ET PAR CONSEQUENT NE SEPARA PAS L'APPAREIL DE L'ALIMENTATION SECTEUR SUR LA POSITION D'ATTENTE.

[For U.S. model]



As an ENERGY STAR® Partner, Pioneer Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

K001 En

IMPORTANT SAFETY INSTRUCTIONS

READ INSTRUCTIONS — All the safety and operating instructions should be read before the product is operated.

RETAIN INSTRUCTIONS — The safety and operating instructions should be retained for future reference.

HEED WARNINGS — All warnings on the product and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS — All operating and use instructions should be followed.

CLEANING — Unplug this product from the wall outlet before cleaning. The product should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.

ATTACHMENTS — Do not use attachments not recommended by the product manufacturer as they may cause hazards.

WATER AND MOISTURE — Do not use this product near water — for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

ACCESSORIES — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

CART — A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



VENTILATION — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

POWER SOURCES — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

LOCATION — The appliance should be installed in a stable location.

NONUSE PERIODS — The power cord of the appliance should be unplugged from the outlet when left un-used for a long period of time.

GROUNDING OR POLARIZATION

- If this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other), it will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- If this product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin, it will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

POWER-CORD PROTECTION — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

OUTDOOR ANTENNA GROUNDING — If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.

LIGHTNING — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

POWER LINES — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

OVERLOADING — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

OBJECT AND LIQUID ENTRY — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

SERVICING — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

DAMAGE REQUIRING SERVICE — Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance — this indicates a need for service.

REPLACEMENT PARTS — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

SAFETY CHECK — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

WALL OR CEILING MOUNTING — The product should not be mounted to a wall or ceiling.

HEAT — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

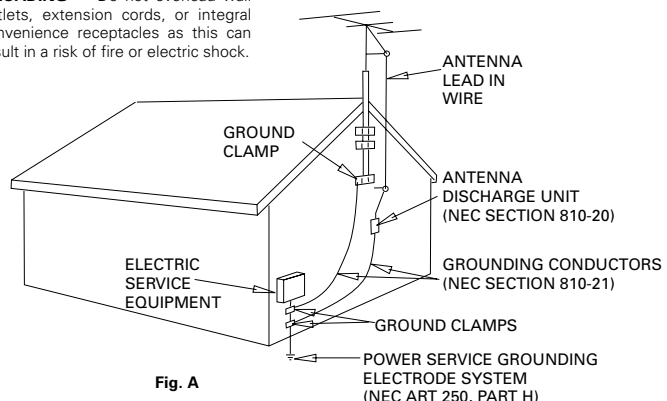


Fig. A

NEC — NATIONAL ELECTRICAL CODE

Quick Start Guide

This is a quick guide to setting up your new receiver so you can get home theater surround sound. For more details on any of the information presented here check the main section of the manual.


Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

1 Hooking Up Your DVD Player & TV

In order to use Dolby Digital/DTS soundtracks which are at the heart of home theater you need to hook up your DVD player with digital audio connections. You can do this by either a coaxial or an optical connection, **you don't need to do both**. The quality of these two types of connections is the same but since some digital components only have one type of digital terminal you need to figure out which yours has and hook it up to the appropriate terminal on the receiver. In order to do this you will need the proper cable. For coaxial connections you can use a regular RCA stereo cord or the specially-made coaxial cords, they have the same type of plugs. For optical connections you will need a special optical cord which you can buy at your local stereo store. Also hook up the video connection of your DVD player, the analog audio (for recording the audio on DVDs, use regular RCA stereo cords), and your TV (it's easiest to use a regular composite RCA video cords) as shown below. We also recommend hooking up your all your digital components to analog audio jacks. For this you can use regular RCA stereo cords.


Coaxial Digital Connection

If your DVD player has a coaxial terminal (not a PCM-only output) for the audio out hook it up using this terminal. Follow the diagram below. This is the best scenario, as you will be able to follow the default settings of this receiver and won't need to assign the digital inputs.

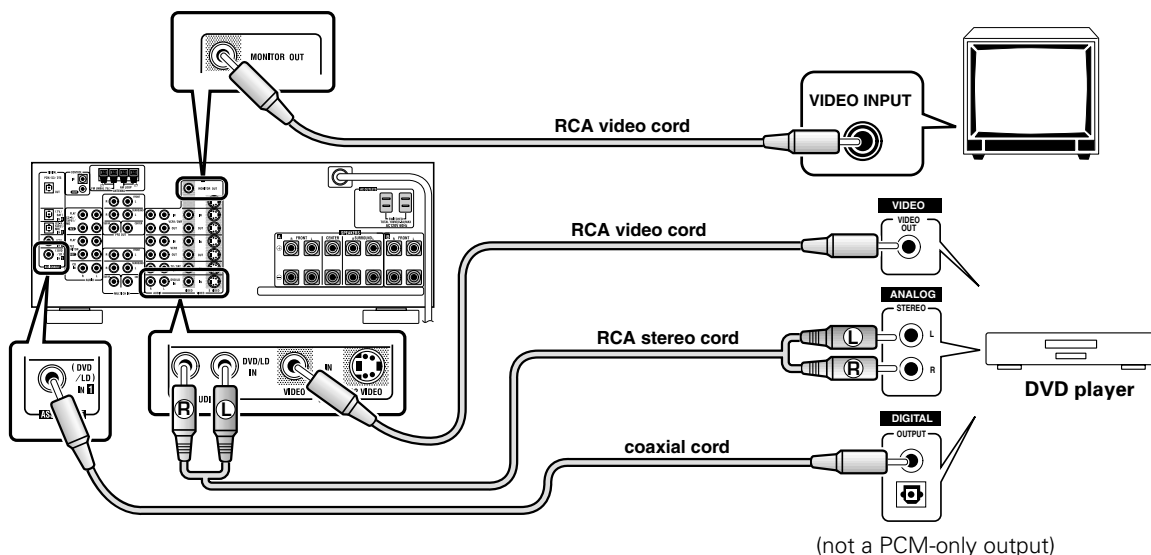

Optical Digital Connection


If your DVD player has an optical terminal (not a PCM-only output) for the audio out you can hook it up using this following the diagram below. You will need to assign the digital input (tell the receiver which input you put your DVD digital audio into). See the page 6 for this.

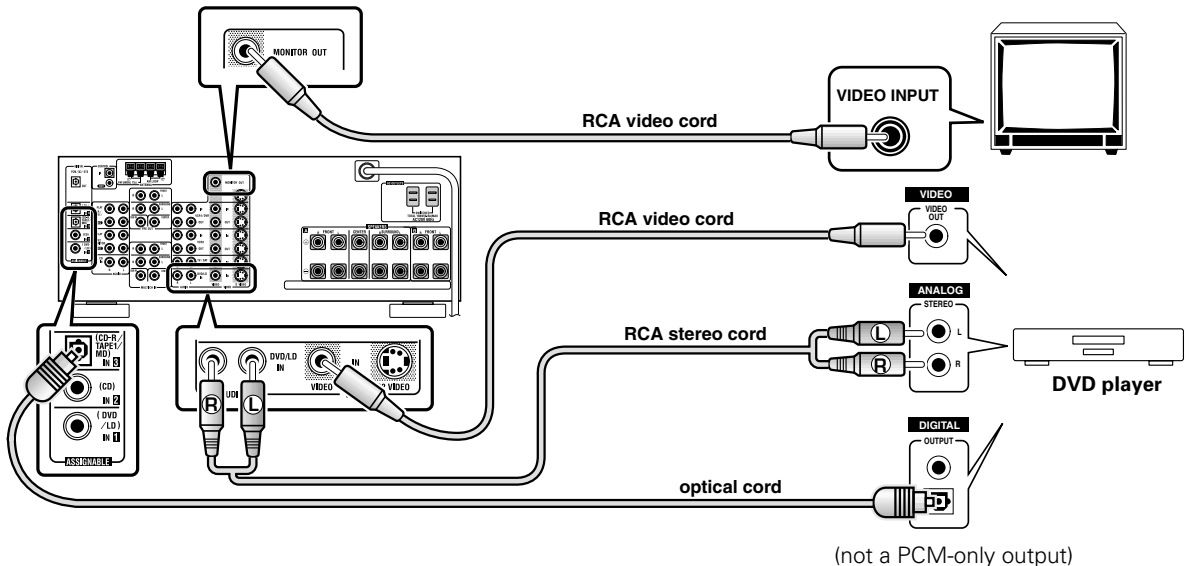


2 Speaker Connections

Home theater is designed to be setup with five speakers (front left & right; center; surround left & right) and a subwoofer but you can use this receiver with fewer speakers. Hook up the speakers you have to the **speaker A terminals** on the back of the receiver. If you only have two speakers hook them up as "FRONT." If you have three hook up the single speaker as "CENTER." Follow the diagram on p. 19 in order to hook up all your speakers. A center speaker is very important for watching films because the dialog comes from the center speaker in digital soundtracks. **If you do not have a CENTER speaker you must tell the receiver the CENTER channel is OFF or when you listen to digital soundtracks you won't hear any dialog.** Use the instructions on page 31-32 in order to do this.

Make sure you connect the speaker on the right to the right terminal and the speaker on the left to the left terminal. Also make sure the positive and negative (+/-) terminals on the amplifier match those on the speakers.

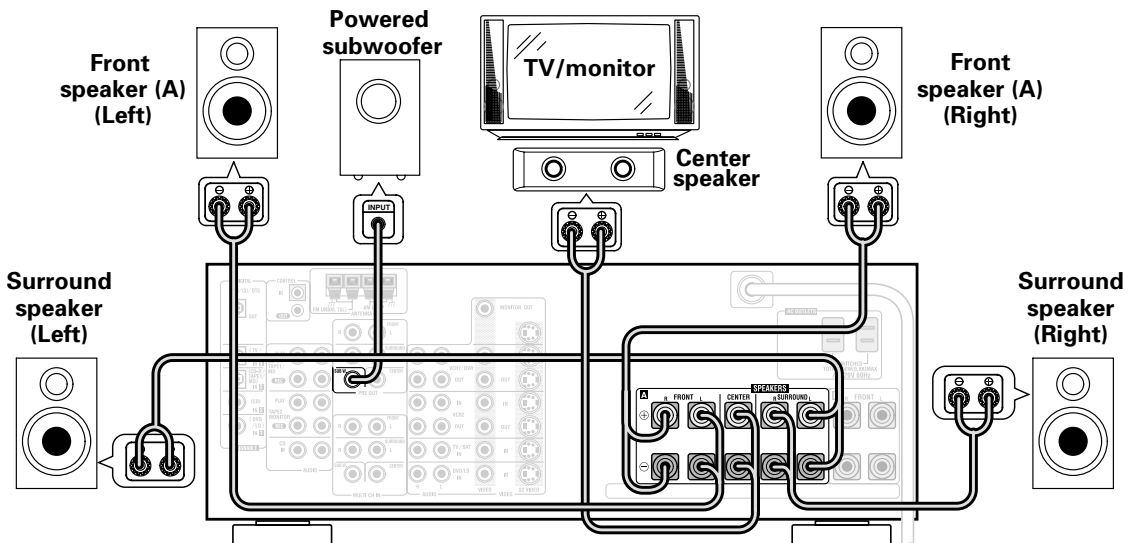


3 Setting up the Remote Control & Unit

- 1 Put the batteries in the remote control.
- 2 Plug the main unit into a AC wall outlet.
- 3 Press the  STANDBY/ON button on the receiver to put the receiver in ON mode.

4 Digital Input Assignment

This is only necessary if you hooked up your DVD to DIGITAL IN 3, as in the first diagram on p. 5.

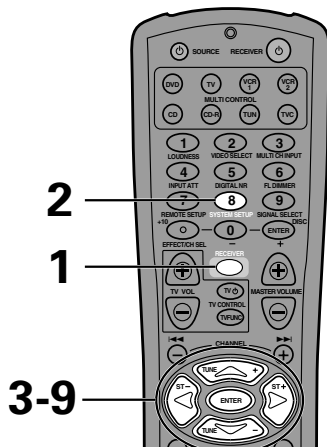

- 1 **Press the RECEIVER.**
This switches the remote to the surround setup mode.
- 2 **Press the SYSTEM SETUP button.**
You should see the following display on your receiver.

```
Assgin Set  ---
```

- You can escape from this screen at any time by pressing the SYSTEM SETUP button again. None of the settings you made will be entered in this case.
- If don't enter any settings the receiver will revert back to its prevoius state after three minutes.

- 3 **"Assgin Set" should be selected (if it isn't use the ▲/▼ buttons to select it). Press ENTER.**

You should see the following display on your receiver.

```
Digital In  ---
```

- 4 **"Digital In" should be selected (if it isn't use the ▲/▼ buttons to select it). Press ENTER.**

You should see the following display on your receiver.

```
Digi-1: DVD/LD---
```

- 5 **Choose the "Digital-3" with ▲/▼ buttons you hooked up your DVD player to. Press ENTER.**

```
Digi-3: CD-R ---
```

- 6 **Choose the "DVD/LD"(if it isn't use the ▲/▼ buttons to select it). Press ENTER.**

```
Digi-3: DVD/LD---
```

- 7 **Select "Dig-In End" with ▲/▼ buttons and press ENTER to return to the Dig-In Setup menu.**

```
Dig-In End  ---
```

- 8 **Select "Assign End" with ▲/▼ buttons and press ENTER to return to the Assgin Setup menu.**

```
Assign End  ---
```

- 9 **Select "Setup End" with ▲/▼ buttons and press ENTER to return to the System Setup menu.**

```
Setup End  ---
```

5 Playing a DVD with Surround Sound

- 1 Turn on your TV, and the DVD player.**
- 2 Press the DVD button on the remote control.**
You should see "DVD/LD" in the display on the receiver.
- 3 Press the STANDARD button for the basic surround sound setting.**
- 4 Play a DVD.**

6 For Better Surround Sound

- 1 Go through the entire "Initial Setup" procedures as outlined on pages 27– 38 of this instruction manual.**
If you don't hook up any other components with digital audio or do so following the default settings of the receiver (see page 13) you won't have to assign any more digital inputs, but many other adjustments will improve the sound tremendously.
- 2 Experiment with the different sound settings offered with the DDD/DTS and DSP buttons.**
For more information see pages 39-42.
- 3 As mentioned above you should go through the "SpeakerSetting" instructions on pages 31-32 to set up your speakers properly. If you don't do this you, at least, need to make sure the CENTER channel is turned off if you don't have a center speaker. Use the instructions on pages 31-32.**

Features

Multi Channel Stereophonic Concept

The VSX-33TX receiver is constructed with Pioneer's industry-leading multi channel stereophonic concept. This well-developed approach to receiver circuitry takes the high level base technology that, up until now, has been only used for stereo equipment and applies it to multi-channel audio-visual receivers. The result is that the product, in addition to being expertly built, and gives you optimal sound reproduction of DVDs, other multi channel sources and stereo sources as well. This receiver is designed capture to a true reproduction of the intentions of a filmmaker or music producer at the time they were mastering the soundtrack in the studio. It incorporates 5 independent 80 watt built in power amplifiers, with high-performance Hex power Direct Power MOS FET output transistors. This construction provides improved linearity and accurate representation of each channel for true high fidelity reproduction from even the most demanding Dolby Digital and DTS program sources. In addition, the amplifier uses Direct Construction to give the purest sound available. All these elements consolidated in one receiver afford the listener a new surround sound experience in his or her home.

Universal Player Compatibility

This receiver incorporates the latest technology and is able to handle cutting edge audio formats, like DVD Audio, which are just hitting the market. Its high compatibility offers a variety of inputs to decode all types of sources at the highest possible quality. The receiver's multi channel in connections lets you hook up six discrete channels of audio. It also has multi channel direct inputs and the ability to decode the cutting edge formats.

Decoding of Digital Source Film Formats

Built into this receiver is the latest in film sound format technology. This technology includes HOME THX CINEMA surround modes which employ special processing to allow you to enjoy movie soundtracks with the same level of power and realism you experience in well-designed movie theaters. This receiver has the ability to decode Dolby Digital, Dolby Pro Logic and DTS (Digital Theater Systems) sources, which are the standards of home theater today.

Manufactured under license from Lucasfilm Ltd. U.S. patent numbers 5,043,970; 5,189,703; and/or 5,222,059. European patent number 0323830. Other U.S. and foreign patents pending. Lucasfilm and THX are registered trademarks of Lucasfilm Ltd.

"DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. Manufactured under licence from Digital Theater Systems, Inc.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992 - 1997 Dolby Laboratories. All rights reserved.

Advanced Theater Modes & DSP Surround Modes

Advanced Theater modes enhance the sound of either film or music so a more dramatic effect can be achieved. The four modes are each designed to accentuate specific sound qualities, giving the listener a wide range of possibilities. DSP (Digital Signal Processing) surround modes give you the capability of transforming your living room into seven different sonic environments when listening to music.

Midnight Mode, Digital Noise Reduction & 5 Channel Tone Control

The Midnight mode allows you to obtain excellent surround sound effects even when listening at low volumes, something that was previously impossible. Digital noise reduction filters out unwanted noise from recordings to give you a clearer sound and the 5 channel tone control allows you to adjust the treble and bass of each channel individually to suit your listening tastes.

Remote Control of Other Components

The supplied remote control can be used to operate a variety of other components simply by recalling the appropriate preset codes or by using the learning function to teach the remote control new commands.

The Energy-saving Design

This unit is designed to use less than 1 W of energy when the receiver is in standby mode.

Table of Contents


Quick Start Guide	4
Before You Start	10
Checking the Supplied Accessories	10
How to Use This Manual	10
Preparing the Remote Control	10
Installing the Receiver	11
Opening the Front Panel	11
The PIONEER SR System: Operating other PIONEER components	11
Connecting Your Equipment	12
Audio Components	12
Digital Connections	13
Example Connection for a DVD/LD or LD player	14
Video Components	15
TV/Satellite tuner Components	16
TV	17
Multi Channel Input (External Decoder)	17
Connecting the Radio Antennas	18
Speakers	19
Placing Your Speakers	20
Connecting Additional Amplifiers	21
Plugging In	21
Displays & Controls	22
Front Panel	22
Remote Control	24
Display	26
Initial Setup	27
Setting Up for Surround Sound	27
Basic Playback	39
Learning about the Sound Modes	39
Selecting a Sound Mode	41
Playing Sources with Dolby Digital or DTS Sound	42
Playing Stereo Sources	43
Switching Analog and Digital Signal Input	44
Reducing Noise During Playback	45
Listening in Midnight Mode	46
Listening the Loudness Mode	46
Adjusting Bass and Treble	47
MULTI CHANNEL IN Playback	48
96 kHz 24 bit Performance	48
Direct Playback	49
Adjusting the Brightness of the Display	49
DUAL MONO Setting	50
Using the Tuner	51
Automatic and Manual Tuning	51
Direct Access Tuning	52
Memorizing Frequently Used Stations	53
Recalling Memorized Stations	54

Remote Control of Other Components ..	55
Setting Up the Remote Control	55
Programming a Different Component into a MULTI CONTROL button	58
Checking Preset Codes	58
Clearing One of the Remote Control Settings	59
Clearing All the Remote Control Settings	59
CD/CD-R/MD/VCR/LD Player Controls	60
Cassette Deck Controls	61
DVD/DVR Player Controls	62
DTV Controls	63
Cable TV/Satellite TV/TV Controls	64
Using Other Functions	65
Function Rename	65
Recording from Audio Components	67
Recording from Digital Audio Components	68
Recording from Video Components	68
Direct Function	69
Video Select	70
Changing the Display	70
Techno Tidbits & Problem-solving ...	71
Dolby Digital	71
DTS	71
THX	72
Preset Code List	73
Troubleshooting	78
Specifications	81

Before You Start

Checking the Supplied Accessories


Please check that you have received all of the following supplied accessories.




FM wire Antenna



AM loop Antenna



"AA" IEC LR6
batteries x 2

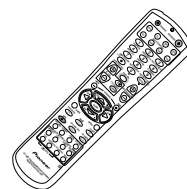

Remote Control Unit
• Operating Instructions

How to Use This Manual

This manual is for the VSX-33TX Audio/Video Multi-Channel Receiver.

This manual is divided into three main sections which will tell you how to setup and use the unit :

PREPARATION

First carry out the tasks below in this "Before You Start" section to prepare the remote control, then connect the receiver to your other components as described in "Connecting Your Equipment" (p.12). Take special care to connect your digital equipment like DVDs and LDs properly to be able to take advantage of the receiver's surround sound systems (p.13-14). To learn about a specific button, control, or indicator, see "Displays & Controls" starting on p.22.

SET UP

Performing the tasks in "Initial Setup" (from p.27) is essential to get proper surround sound.

OPERATION

To play some music or soundtrack refer to "Basic Playback" on p.39. "Using the Tuner" (p.51) explains how to use the radio of this unit. Doing the operations in "Remote Control of Other Components" (p.55) is highly recommended so you can use this unit's remote control for all your components. "Using Other Functions" (p.65) explain the other possibilities of the receiver.

"Techno Tidbits & Problem-solving" (p.71) provide detailed technical information and a troubleshooting guide.

The following marks and symbols are used throughout the manual:



Provides additional information, precautions, and advice.



Indicates a blinking button, indicator, or display.




Indicates a steadily lit button, indicator, or display.

Preparing the Remote Control

Loading the batteries

Load the batteries into the remote control as shown below. Please use alkaline batteries. When you notice a decrease in the operating range of the remote control, replace all batteries with new ones.

"AA" IEC LR6 batteries x 2

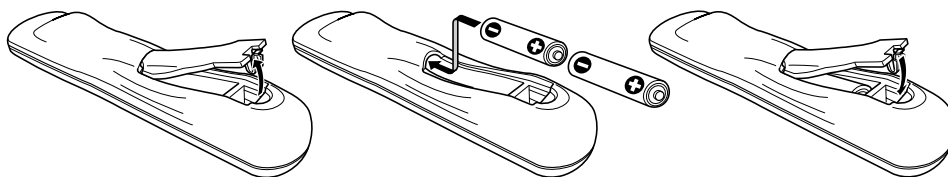

CAUTION!

Incorrect use of batteries may result in such hazards as leakage and bursting. Observe the following precautions.


- Never use new and old batteries together.
- Insert the plus and minus sides of the batteries properly according to the marks in the battery case.
- Batteries with the same shape may have different voltages. Do not use different batteries together.
- When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country or area.

Operating range of remote control unit

The area in which you can use the remote control to operate the VSX-33TX is fairly large. To use, point the remote control toward the remote sensor on the front panel of this unit while within the range shown in right.

Remote control may not function properly if:


- There are obstacles between the remote control and the remote sensor.
- Direct sunlight or fluorescent light is shining onto the remote sensor.
- The receiver located near a device emitting infrared rays.
- Operated simultaneously with another remote control which uses infrared rays.

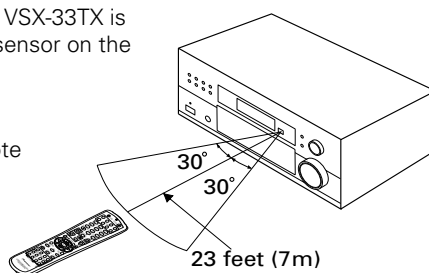

Installing the Receiver


Please note:

- Do not place objects directly on top of this unit. This would prevent proper heat dispersal.
- When installing in a rack, shelf, etc., be sure to leave more than 8 inches of space above the receiver.

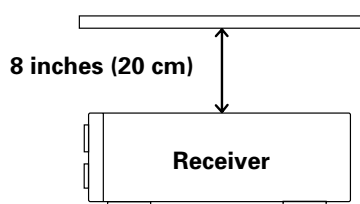


Opening the Front Panel

To open the front panel push gently on the lower third of the panel with your finger.

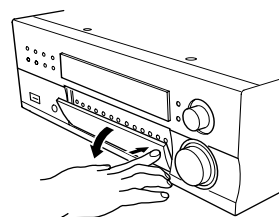

The PIONEER SR System: Operating other PIONEER components

Connecting an optional control cord allows you to operate other PIONEER components simply by pointing the receiver's remote control at the remote sensor on the front panel of the receiver. The receiver then sends the remote control signals to the other devices via the CONTROL OUT terminal.

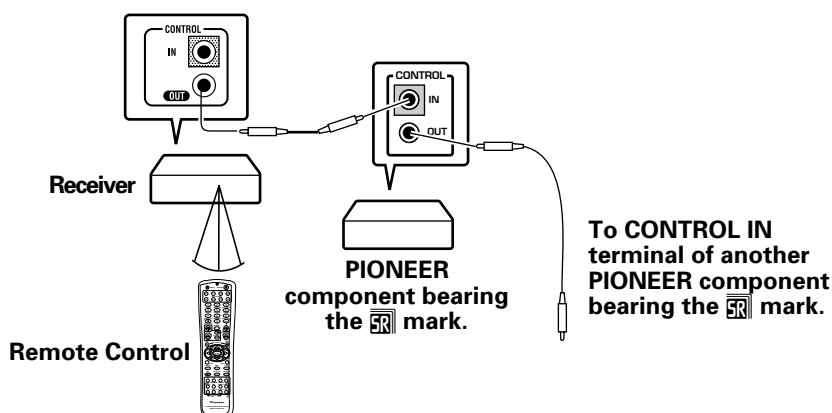

- You can also control PIONEER components (and those made by other manufacturers) by pointing the receiver's remote control directly at the respective component. This type of operation does not require control cords. All you have to do is recall the appropriate the stored settings (see p.58-59).
- If you use a remote control hooked up via the CONTROL IN jack with a control cord, you won't be able to use this unit's remote control.


Connecting Your Equipment

Audio Components

To begin set up connect your audio components to the jacks as shown below. These are all analog connections and your analog audio components (cassette deck) use these jacks. Remember that for components you want to record with you need to hook up four plugs (a set of stereo ins and a set of stereo outs), but for components that only play you only need to hook up one set of stereo plugs (two plugs). To use DTS or Dolby Digital surround sound features you must hook up your digital components to the digital inputs (see p.13). We also recommend hooking up your digital components to analog audio jacks. If you want to record to/from digital components (like a CD-R) to/from analog components you must hook up your digital equipment with these analog connections. See p.13 & 14 for more on digital connections.


Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

*The arrows indicate the direction of the audio signal.

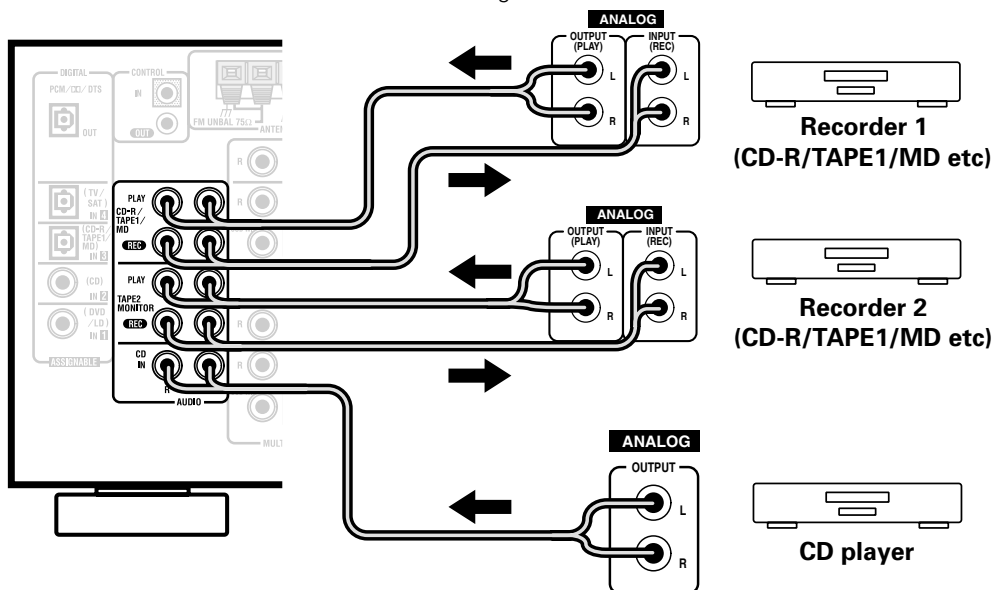

■ Analog audio/video cords

Use audio/video cords (not supplied) to make analog audio and video connections.

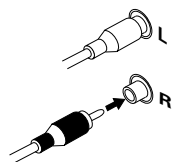

Connect red plugs to R (right) and white plugs to L (left).
Be sure to insert completely.

Cassette deck placement


Depending on where the cassette deck is placed, noise may occur during playback of your cassette deck which is caused by leakage flux from the transformer in the receiver. If you experience noise, move the cassette deck farther away from the receiver.

■ Coaxial cords/Optical cables


Commercially available digital audio coaxial cords (standard video cords can also be used) or optical cables (not supplied) are used to connect digital components to this receiver.

When you use optical digital input or output terminals, pull off the caps and insert the plugs. Be sure to insert completely.

Coaxial cord (or standard video cord)

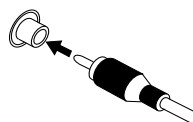

Optical cable

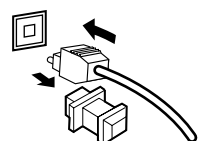

Digital Connections


In order to use Dolby Digital/DTS soundtracks which are at the heart of home theater you need to make digital audio connections. You can do this by either a coaxial or an optical connection (you don't need to do both). The quality of these two types of connections is the same but since some digital components only have one type of digital terminal, it is a matter of matching like with like (for example, the coaxial out from the component to coaxial in on the receiver). The VSX-33TX has two coaxial and two optical inputs for a total of four digital inputs. For a DVD/LD player or LD player hook up see p.14. If possible hook up your digital equipment in accordance with this receiver's default settings, refer to the "Digital Input Assignment" on this page in order to do this. We also recommend hooking up your digital components to analog audio jacks in order to make recording from some digital sources which may be copy protected.

Connect your digital components as shown below.

There is one optical digital out jack (the CD recorder is connected to one in the diagram below). If you connect this to the optical input on a digital recorder (currently these include MD, DAT and CD-R) you can make direct digital recordings with this unit.

Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

*The arrows indicate the direction of the audio signal.

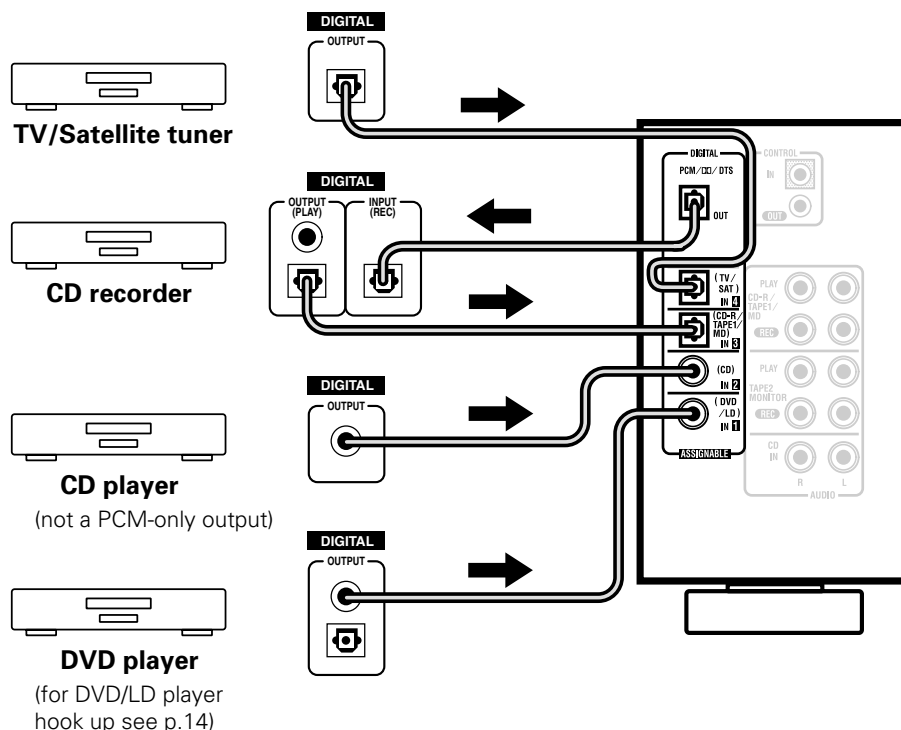

Digital Input Assignment

Unlike analog connections, the jacks for digital connections are not dedicated to one type of component, they can be used freely. Thus you must tell the receiver what digital component is in which jack so your components will be in sync with the the names on the remote control buttons and the like. To avoid having to assign the digital inputs you can hook up your equipment in accordance with the receiver's default settings. The default settings are:


- DIGITAL IN 1: DVD/LD
- DIGITAL IN 2: CD
- DIGITAL IN 3: CD-R/TAPE1/MD
- DIGITAL IN 4: TV/SAT

You will notice that Digital IN 1, for example, is a coaxial jack. If your DVD/LD player only has an optical out jack on it then you won't be able to hook up your components in accordance with the VSX-33TX default setting. In this case you will need to assign the digital inputs. See Digital Input Select on p.29 in order to do this.

Make sure you connect your DVD/LD or LD players using both a RF demodulator and either a coaxial or optical digital connections. To connect a DVD/LD player or LD player with it's **RF** (AC-3) RF output, a commercially available RF demodulator (RFD-1) is required. The RF demodulator changes the RF signal to a digital signal which is then processed by the VSX-33TX model through their digital input jacks. For more details, refer to the instruction manual supplied with the RFD-1. If your player has an **RF** RF output this will ensure you can use all LDs. We also recommend hooking up your digital components to analog audio jacks.

Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

*The arrows indicate the direction of the audio signal.

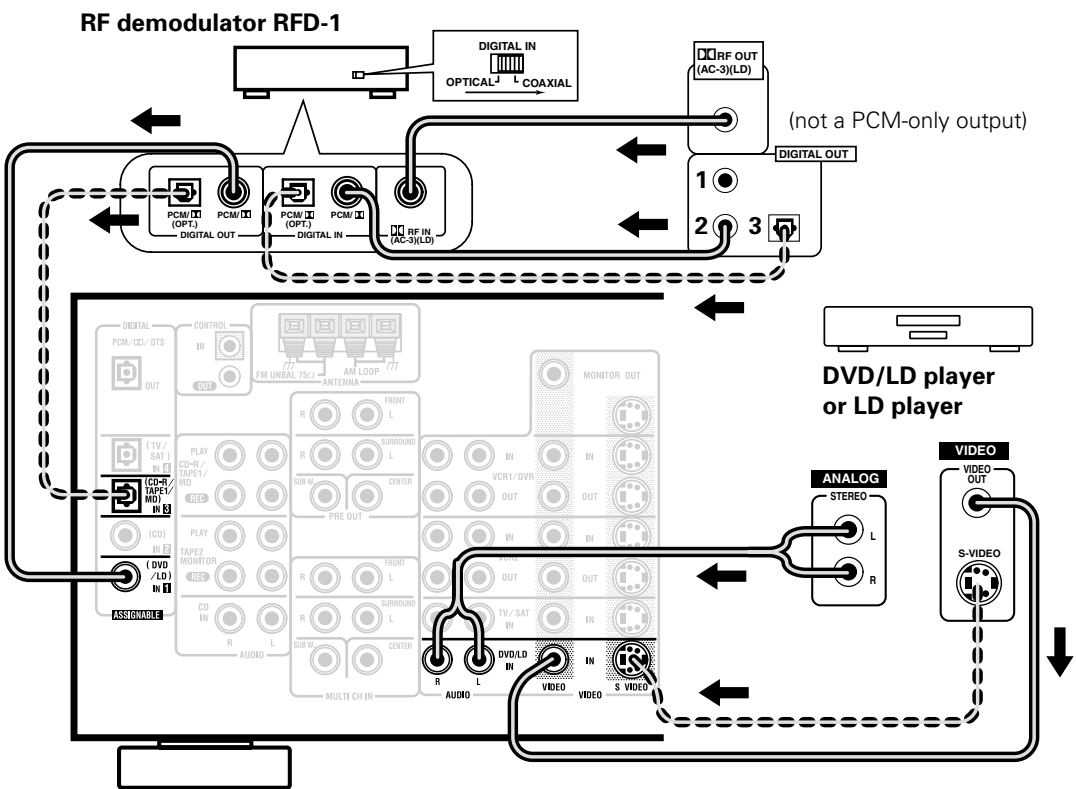

Be sure to make either a digital coaxial or digital optical connection (pictured as DIGITAL jack 1 or DIGITAL jack 3 in this diagram) as well, but you don't need to make both.

Also, be sure to assign the jacks to the proper component(s) with the Digital Input Select procedure (see p.29) if necessary. See the explanation on p.13 for details.


Make sure the RF demodulator digital in switch is set correctly (optical or coaxial depending on the connection).

Video Components


Connect your video components to the jacks as shown below. Regarding a DVD there are two types of connections to make. Hook up your video signal with either S-video or composite video cords (the quality descends in this order) but remember, the video component you are watching and your TV must be hooked up with same type of video cord or you won't be able to see the picture. For the audio signal, in order to use Dolby Digital/DTS you must hook up a digital input. It is also a good idea to hook up your DVD components with analog audio connections as well, since some DVDs may not have a digital audio track. To cover all possible LaserDiscs a DVD/LD player or LD player requires an analog connection and two digital connections (a coaxial or optical and a specialized RF demodulator connection shown on 14 page). Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

*The arrows indicate the direction of the video signal.

Connecting DVD players

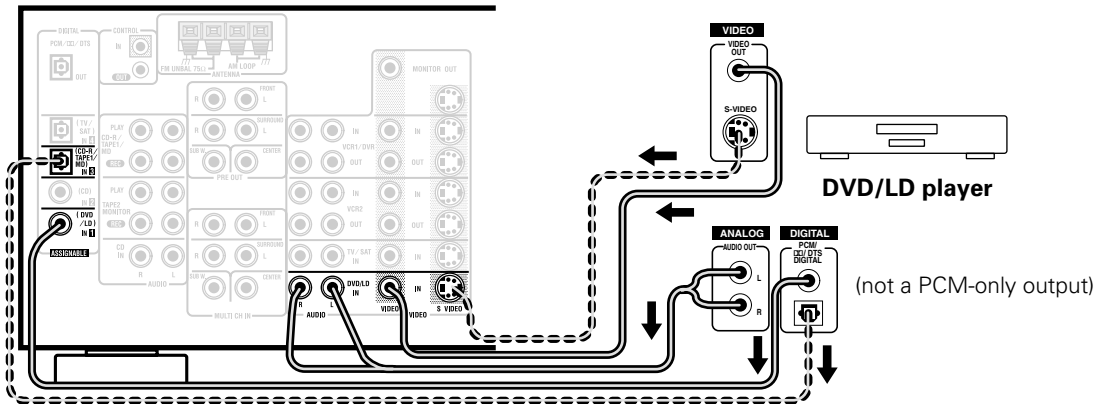

Connecting VCRs or DVRs

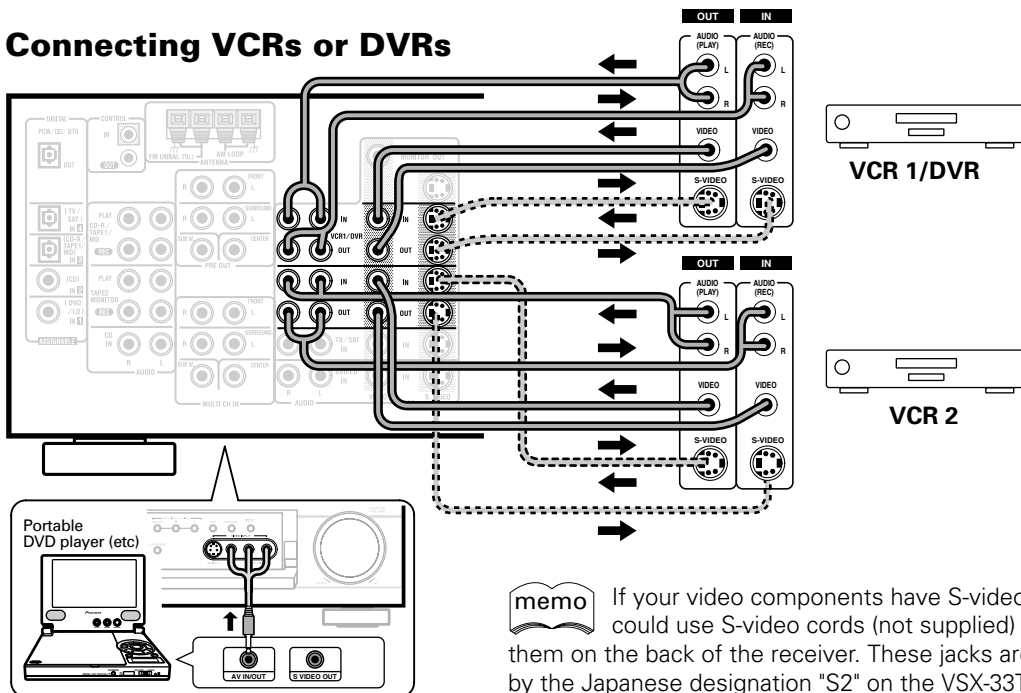

If your video components have S-video jacks, you could use S-video cords (not supplied) to connect them on the back of the receiver. These jacks are labeled by the Japanese designation "S2" on the VSX-33TX but they are simply S-video jacks.

However, if you use S-video cords for your video hook ups you must also hook up your TV with S-video connections. Conversely, if you use regular composite video cords for video hook ups, you should use them for your TV as well.


Front video connections are accessed via the front panel input selector as "VIDEO."

TV/Satellite tuner Components

Connect your satellite TV components to the jacks as shown below. Hook up the video signal with either S-video, or composite video cords (the quality descends in this order) but remember, the video component you are watching and your TV must be hooked up with same type of video cord or you won't be able to see the picture. For the audio signal, in order to use digital soundtracks (sometimes broadcast over digital satellite TV) you must hook up a digital input. Use either a coaxial or optical cables, it doesn't matter which (you don't need to use both). It's also a good idea to hook up your audio with analog cables (see below). This connection is called STEREO AUDIO OUT in the diagram.


Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

*The arrows indicate the direction of the TV signal.

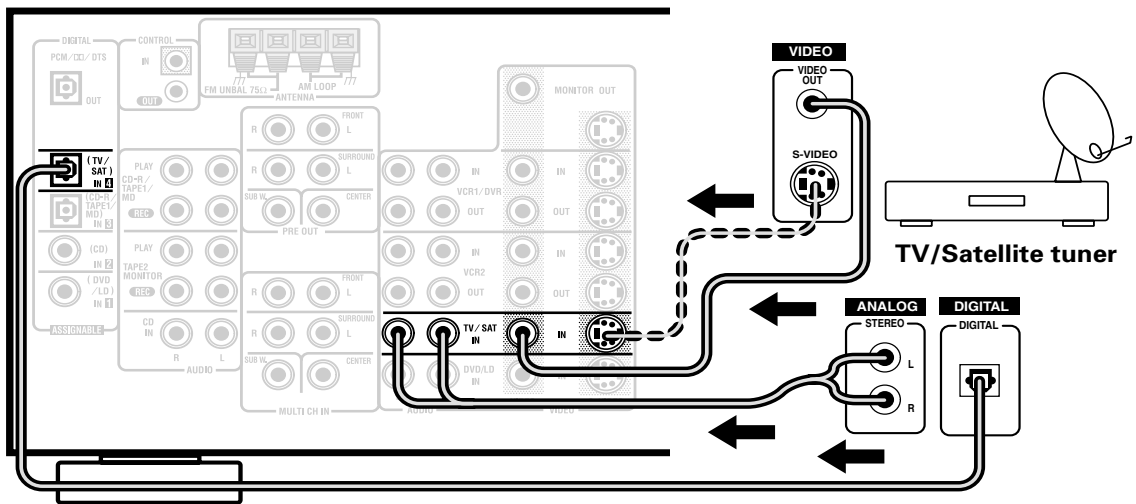

TV


Connect your TV to the jacks as shown below. Hook up the signal with either S-video or composite video cords (the quality descends in this order) but remember, the video component you are watching and your TV must be hooked up with same type of video cord or you won't be able to see the picture. Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

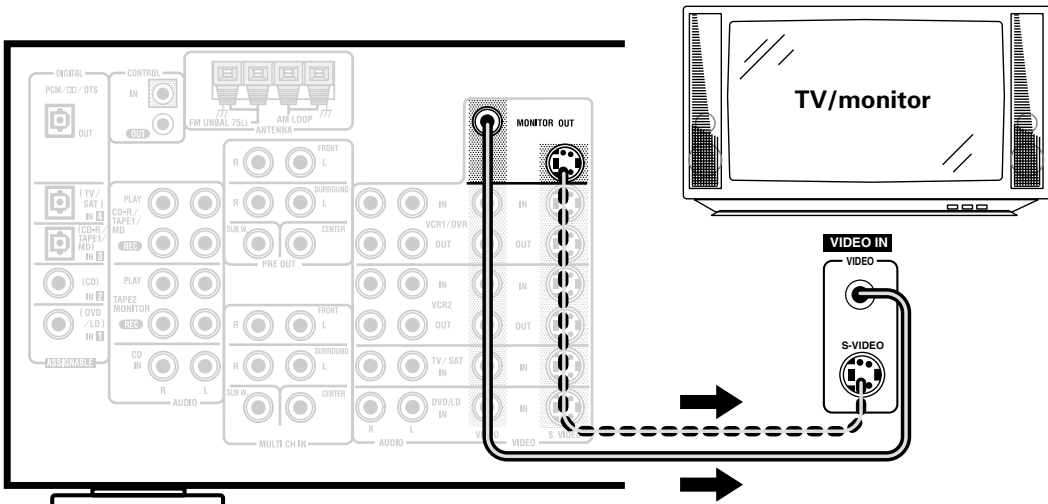

Multi Channel Input (External Decoder)

In some cases you may want to have you source material (DVD, etc) decoded externally. If you find you need a multi channel external decoder hook one up as shown below, but for most people this component is unnecessary (For more on this see p.48).


Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

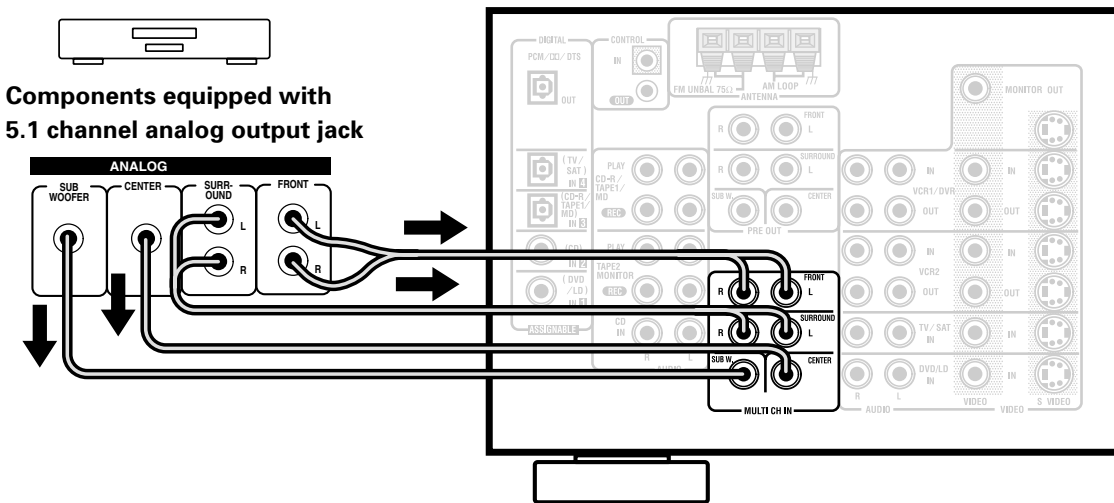

Connecting the Radio Antennas


Connect the supplied FM wire antenna and the AM loop antenna to the antenna terminals as shown below. These antennas should provide adequate reception quality in most cases, but connecting outdoor antennas should noticeably improve sound quality.

Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

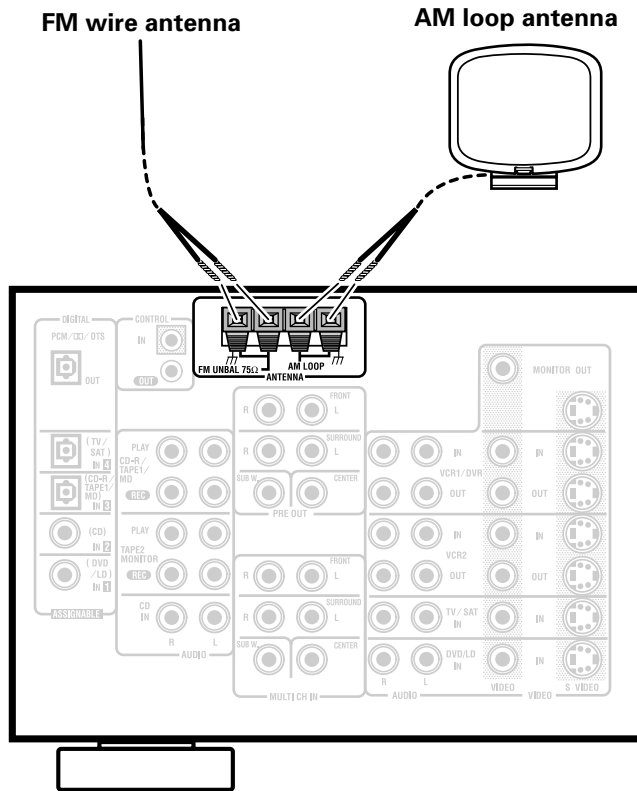


■ AM loop antenna


- 1 Assemble the antenna.

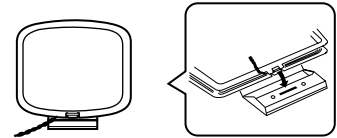

- 2 Twist exposed wire strands together and insert.

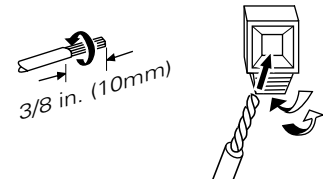


- 3 Attach to a wall, etc. (if desired) and face toward the direction providing the best reception.

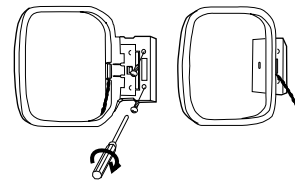

Using external antennas

■ To improve FM reception


Connect an external FM antenna.

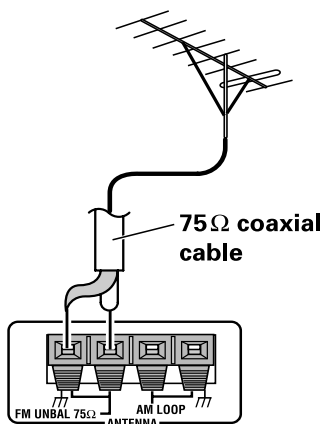

■ To improve AM reception

Connect a 15-18 feet (5-6 meter) length of vinyl-coated wire to the AM antenna terminal in addition to the supplied AM loop antenna.

For best possible reception, suspend horizontally outdoors.

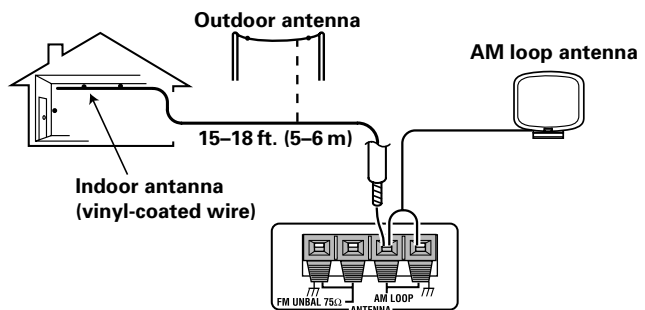

Speakers


A full complement of six speakers is shown here but, naturally, everyone's home set up will vary. Simply connect the speakers you have in the manner described below. The receiver will work with just two stereo speakers (called "front" speakers in the diagram) but the receiver is designed to be used with at least three speakers.

In general, make sure you connect the speaker on the right to the right terminal and the speaker on the left to the left terminal. Also make sure the positive and negative (+/-) terminals on the receiver match those on the speakers. Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.




The receiver has two speaker systems, A & B. A is the main system supporting the full complement of surround sound speakers. If you switch on both A & B speaker systems, only front speakers and the subwoofer will be audible. No sound will come from the center or surround speakers but multi channel sources will be down-mixed to the active speakers so no sound will be lost. Similarly, if you choose just the B system you'll only hear the front speakers connected to the B system and multi channel sources will be down-mixed to these two speakers.

For the VSX-33TX you can use speakers with a nominal impedance rated 6Ω-16Ω, see the following page.

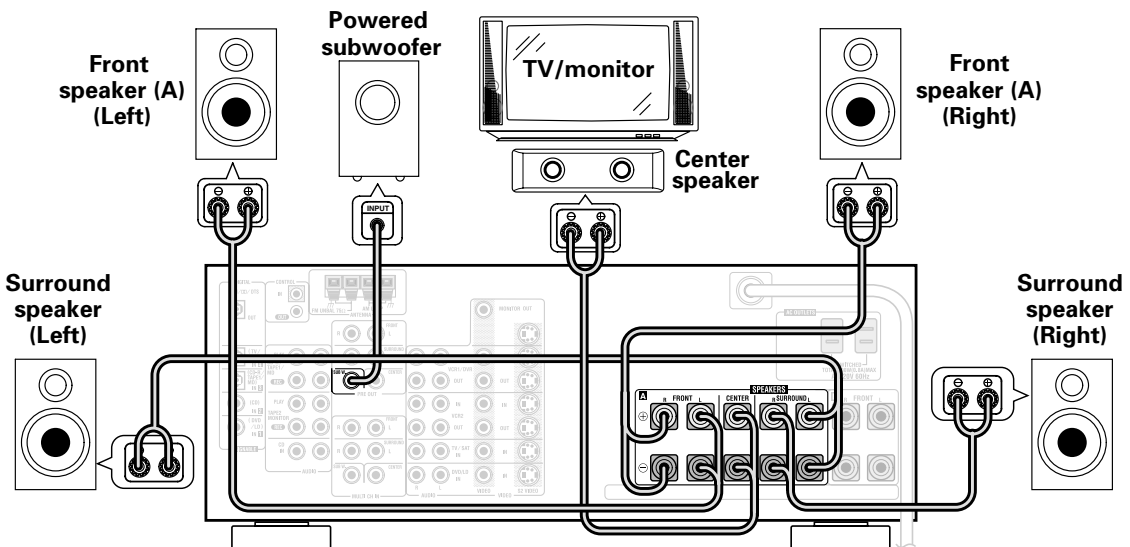


■ Speaker terminals


- ① Twist exposed wire strands together.




- ② Loosen speaker terminal and insert exposed wire.

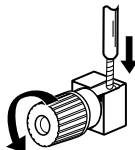

- ③ Tighten terminal.



The speaker terminals also accept single banana plugs. (Refer to speaker manual for details.)

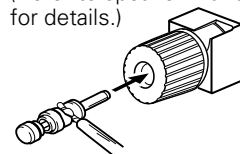


Connecting Your Equipment

Speaker impedance

You can change the speaker impedance for VSX-33TX but we recommend using speakers with an impedance of 8Ω-16Ω (the default setting). If you are using 6Ω- less than 8Ω impedance speakers, you need to change the impedance setting. Use any speaker rated between 6Ω-16Ω.

ⓘ **STANDBY/ON
SPEAKERS**

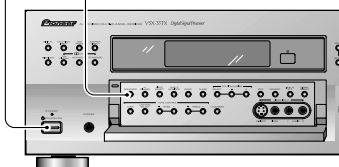


To check which impedance setting to hold down the SPEAKERS button for 2-3 seconds. You'll get a display like these telling you the speaker impedance setting.

First turn the receiver off, then press the power button while holding down the SPEAKERS button.

The receiver will re-set to the new impedance setting. You can choose the 8Ω-16Ω setting or the 6Ω-8Ω setting.



(This display indicates a 6Ω- less than 8Ω impedance setting.)





(This display indicates an 8Ω-16Ω impedance setting.)

Placing Your Speakers

Proper speaker placement is essential to realize the best sound from your system. The diagram and tips given here are just a rough guide; be sure to read the instructions that come with your speakers.

Speaker placement

If you have a multiple speaker arrangement the placement of the speakers is extremely important. To achieve the best possible surround sound, install your speakers as shown below. Make sure all speakers are installed securely to prevent accidents and improve sound quality. Be sure to consult your speaker manuals for the best placement of the speakers. Some speakers are designed to be floor-standing but others benefit greatly from speakers stands which raise them off the floor.

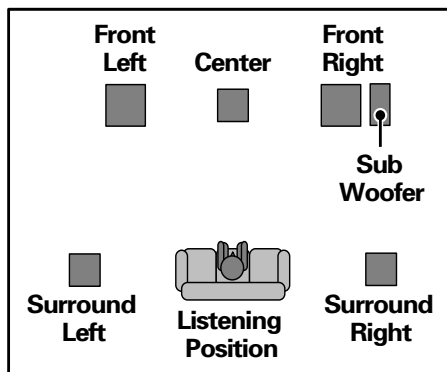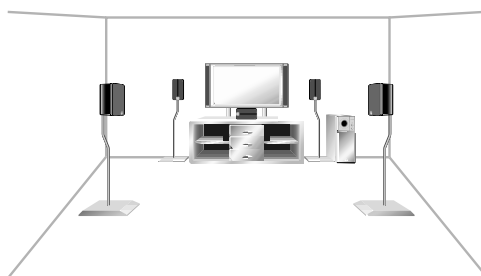

- Install the left and right front speakers at equal distances from the TV.
- When installing speakers near the TV, we recommend using magnetically shielded speakers to prevent possible interference such as distortion in the color of the TV screen. If you do not have magnetically shielded speakers and notice discoloration of the TV screen, place the speakers farther away from the TV.
- Install the center speaker above or below the TV so that the sound of the center channel is localized at the TV screen.


CAUTION:

When installing the center speaker on top of the TV, be sure to secure it with tape or some other suitable means. Otherwise, the speaker may fall from the TV due to external shocks such as earthquakes, and it may lead to endangering those nearby or damaging the speaker.

- If possible, install the surround speakers slightly above ear level.
- It may be difficult to obtain a cohesive surround effect if the surround speakers are installed farther away from the listening position than the front and center speakers.

Connecting Additional Amplifiers

This receiver has more than sufficient power for any home use, but it is possible to add additional amplifiers to every channel of your system. Make the connections shown below to add amplifiers to power your speakers. Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

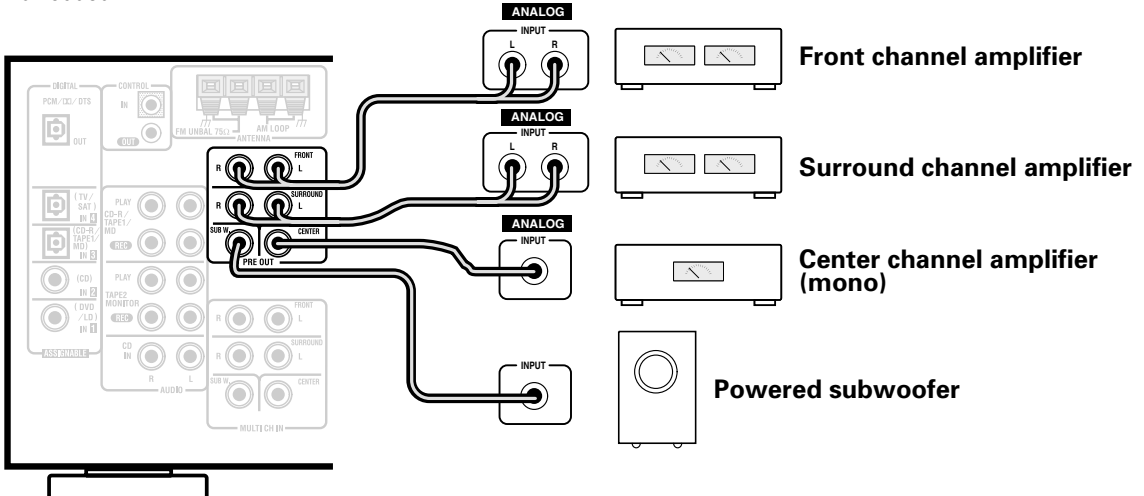


Plugging In

Up to two components can be powered from this receiver. Two of the outlets are switched, which means that power is switched on and off with the receiver.

Before making or changing the connections, switch off the power and disconnect the power cord from the AC wall outlet.

After connecting all your components, plug the receiver's power cord into a standard wall power outlet.

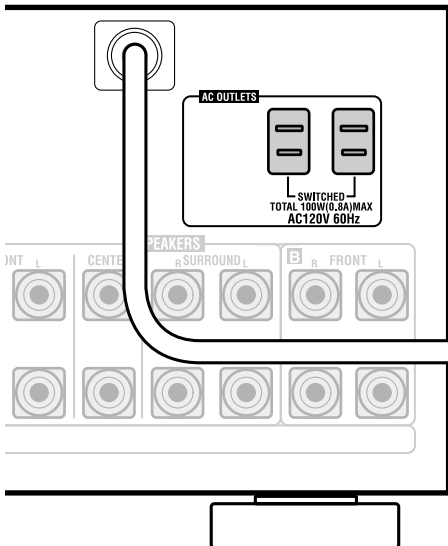

Caution!

Power consumption of any equipment connected to the **switched** power outlets should not exceed **100W (0.8 A)**.

To avoid overheating, fire risk and possible malfunction, do not connect high-wattage appliances such as heaters, irons, monitors or TV sets to this unit's AC outlets.

Disconnect the receiver from the power outlet when it's not in regular use, for example, when on vacation.


Caution!

Do not connect a monitor or TV to this unit's AC OUTLETS.

Displays & Controls

Front Panel

All the controls on the front panel are explained and/or referenced here. To open the front panel push gently on the lower third of the panel.

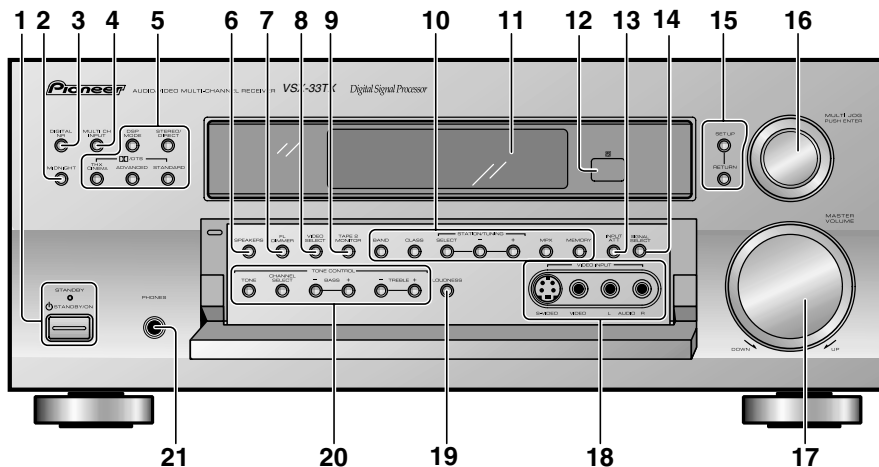

1 **STANDBY/ON button**

Press to switch the receiver ON or into STANDBY mode.

STANDBY indicator

Lights when the receiver is in STANDBY mode. (Please note that this receiver consumes a small amount of power [1.0 W] in the standby mode.)

2 **MIDNIGHT button (See p.46)**

Switches the MIDNIGHT mode on or off.

3 **DIGITAL NR button (See p.45)**

Switches the DIGITAL NR on or off (cannot be used in THX mode).

4 **MULTI CH INPUT (See p.48)**

Use to hook up an external component that can decode other types of signals and input them into the VSX-33TX.

5 **DSP MODE button (See p.40 – 41)**

Press repeatedly to select a DSP sound mode. (HALL 1, HALL 2, JAZZ, DANCE, THEATER 1, or THEATER 2, 5 CH STEREO). Use these modes to produce surround sound from standard (two channel) stereo sources and create different listening environments.

STEREO/DIRECT button (See p.40, 49)

Switches the receiver into STEREO mode if it was in a different sound mode (like ADVANCED THEATER) or toggles between DIRECT and STEREO mode. For more on STEREO mode see p.43.

DIRECT playback bypasses the tone controls and channel level for the most accurate reproduction of a program source.

/ **THX CINEMA – (See p.39, 71, 72)**

Use when listening THX-certified sources if you have THX-certified speaker setup or want to re-create a THX-style sound environment. It is also appropriate for Dolby Digital, Dolby Pro Logic or DTS sources. Those with surround back speakers can use all three THX modes, those without should use the THX CINEMA mode.

ADVANCED – Use to select one of the four Advanced Theater modes. Use to create certain types of sound environments when listening to Dolby Digital, Dolby Pro Logic or DTS sources.

STANDARD – Use for pure decoding of multi channel sources, especially Dolby Digital, Dolby Pro Logic or DTS sources.

6 **SPEAKERS (A/B) button**

Use to select the speaker system. A is the primary setting. It plays all speakers hooked up to the A system. A & B setting only plays the front speakers of both the A & B systems and the subwoofer. Multi channel sources will be down-mixed to these speakers so no sound will be lost. B setting only plays the front speakers connected to the B system and multi channel sources will be down-mixed to these two speakers. The button cycles through the speaker systems as follows: A⇒B⇒A&B⇒off

7 **FL DIMMER button**

Use to adjust the brightness of the fluorescent display (FL = fluorescent display). Four levels of the brightness ranging from very dim to very bright can be selected. Each press changes the brightness of the display.

8 VIDEO SELECT button

Switches the receiver between the various types of video input (DVD, VCR 1, etc.) while keeping the audio on a fixed source (for example, the CD function).

9 TAPE 2 MONITOR button (See p.67)

Selects the tape deck (MD recorder, etc.) connected to the TAPE 2 MONITOR inputs/outputs. Allows monitoring of a recording as it's being made.

10 TUNER CONTROL buttons (See p.51-54)

BAND – Press to select the AM or FM band.

CLASS – Press repeatedly to switch the preset station classes.

TUNING SELECT – Switches the STATION/TUNING button between station memory and frequency select modes.

STATION –/+ – Selects station memories when using the tuner.

TUNING –/+ – Selects the frequency when using the tuner.

MPX – Press to switch between auto stereo and MONO reception of FM broadcasts. When the broadcast signal is weak, selecting MONO will improve the sound quality.

MEMORY – Press to start the memorization of a preset station.

11 Display (See p.26)

12 Remote sensor

Point the remote control toward the remote sensor to operate the receiver.

13 INPUT ATT button

Use to lower the input level of an analog signal that is too powerful, thus causing the sound to distort (the OVER indicator will light when this is the case)

14 SIGNAL SELECT button

Press SIGNAL SELECT repeatedly to select one of the following:

ANALOG – Analog signal.

DIGITAL – Digital signal (DVD/LD, TV/SAT, CD, CD-R/TAPE 1/MD, VCR 1/DVR, VCR 2).

AUTO – This is the default. If there are both analog, digital, the receiver automatically selects the best possible signal.

15 MULTI-JOG CONTROL buttons

SETUP – Press to switch the setup mode.

RETURN – Press to move back one step in the SETUP process.

16 MULTI JOG dial

You can use this dial for three purposes. In normal mode turn it to select a source component. Press it to switch the display between function mode and sound mode. When you press the SETUP button (15), you can use it to perform SETUP operations (turn to select, push to enter). The source indicators show the current component:

DVD/LD – DVD player or LaserDisc player.

TV/SAT– TV or satellite tuner.

CD – Compact Disc player.

CD-R/TAPE1/MD – CD recorder, Tape deck or Mini Disc recorder connected to CD-R/TAPE1/MD inputs/outputs.

TUNER – The built-in tuner.

VIDEO – Portable DVD player or game (etc.) connected to the VIDEO INPUT on the front panel.

VCR1/DVR – Video cassette recorder connected to VCR1/DVR inputs.

VCR 2 – Video cassette recorder or other component connected to VCR 2 inputs.

17 MASTER VOLUME

Adjusts the overall receiver volume.

18 VIDEO INPUT jacks (See p.15)

S-VIDEO : Video input for connecting a Portable DVD player or game (etc.), that has an S-Video out.

VIDEO / AUDIO (L/R) : Video input for connecting a Portable DVD player or game (etc.),that has standard video/audio outputs.

19 LOUDNESS button (See p.46)

Switches the LOUDNESS mode on or off (cannot be used in THX mode).

20 TONE button

This button has two functions. Firstly, it switches between TONE on and TONE BYPASS, which bypasses the tone circuitry. Secondly, you need to press the button before using the CHANNEL SELECT buttons to adjust the BASS & TREBLE(cannot be used in THX mode).

CHANNEL SELECT button

Switches the tone adjust controls between the FRONT, CENTER, SURROUND speakers. You can then use the BASS and TREBLE controls to adjust the sound.

BASS (–/+) button (See p.47)

Use to adjust low frequencies.


TREBLE (–/+) button (See p.47)

Use to adjust the high frequencies.

21 PHONES jack

Connect headphones for private listening (no sound will be heard through the speakers)

Remote Control

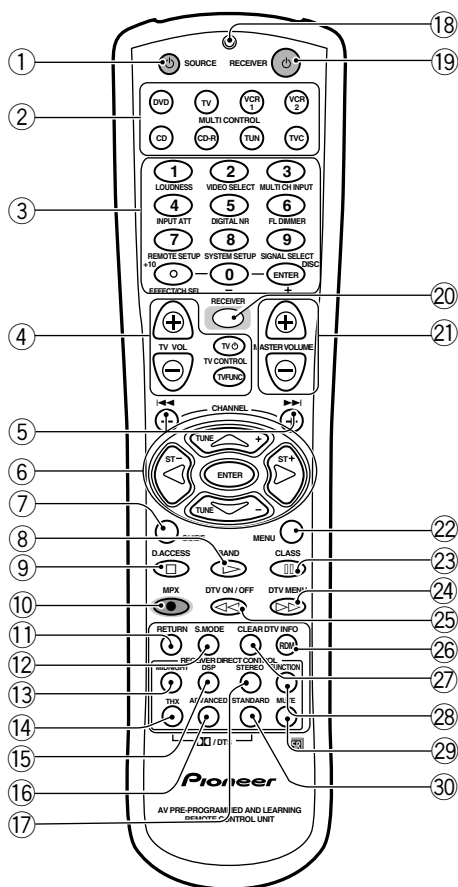

- ① **SOURCE button**
Use to turn on/off other components connected to the receiver.
- ② **MULTI CONTROL buttons**
Use to put the receiver/remote control in the stated mode.
For other equipment controls, see Controlling the Rest of Your System on pages 55-59.
- ③ **Number/MODE buttons**
Use the number buttons to select the radio frequency in tuner DIRECT ACCESS mode or the tracks in CD, DVD mode etc.

Also, buttons marked with the following names have special functions. If you try to use one of these functions but the display flashes it means that function cannot be used in the current mode (for example DSP modes cannot be used when 5.1 CH setting is on).

LOUDNESS button

Use to switch on the loudness. This feature is useful for getting good bass and treble sounds listening at low volumes.

VIDEO SELECT button

Switches the receiver between the various types of video input.

MULTI CH INPUT button

Use to hook up an external component that can decode other types of signals and input them into the VSX-33TX (see p.48).

INPUT ATT button

Use to lower the input level of an analog signal that is too powerful, thus causing the sound to distort (the OVER indicator will light when this is the case).

DIGITAL NR button

Press to switch Digital NR on or off. (See page 45)

FL DIMMER button

Use to adjust the brightness of the fluorescent display (FL = fluorescent display).
Four levels of the brightness ranging from very dim to very bright can be selected. Each press changes the brightness of the display.

REMOTE SETUP button

Use to customize the remote control functions and the remote control itself. (See "Remote Control of Other Components" starting on p.55.)

SYSTEM SETUP button

Use to set up the speaker and sound systems. For more information see "Setting Up for Surround Sound" starting on p.27.

SIGNAL SELECT button

Press SIGNAL SELECT repeatedly to select one of the following:

ANALOG – Analog signal.

DIGITAL – Digital signal (DVD/LD, TV/SAT, CD, CD-R/TAPE 1/MD, VCR 1/DVR, VCR 2).

AUTO – This is the default. If there are analog, or digital signals input the receiver automatically selects the best possible signal.

EFFECT / CH SEL button

For DSP/advanced theater sound modes use to put into the mode to add or subtract the amount of effect. For other sound modes use to select individual channels to increase or decrease channel level.

EFFECT +/- buttons

Use to add or subtract the amount of effect in different DSP/advanced listening sound modes or the level of individual channels.

ENTER button (DISC)

Use to enter commands into TVs or DTVs. For CD players use to change discs.

④ THE FOLLOWING FOUR SETS OF BUTTONS ARE DEDICATED TV CONTROL. THEY ARE ONLY USED FOR CONTROLLING YOUR TV.

TV VOL +/- buttons

Use to adjust the volume on your TV.

TV button

Use to turn on the power of the TV.

TV FUNC button

Use select the TV function.

⑤ /CHANNEL +/- buttons

Use to adjust the volume on your TV.

⑥ (+) / (-) / / /ENTER buttons

Use to set up surround sound, speakers levels & settings, and other set up features see p.27-38). Specific use of these buttons is described in conjunction with the operations they perform. For more information see each individual section. Also, use these buttons to select radio frequencies.

⑦ GUIDE button

Use to control the guide for TV/Satellite TV.

⑧ button (BAND)

Use to play components or use to switch between the AM and FM band when in TUNER mode. You can also use to select the green channel on digital TVs (DTV).

⑨ button (D.ACCESS)

Use to stop other components. Also use to directly access a radio station by pressing the number of the station you want. You can also use to select the blue channel on digital TVs (DTV).

⑩ (MPX)

Use to record other components. Also use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to MONO will improve the sound quality. You can also use to select the yellow channel on digital TVs (DTV).

⑪ RETURN button

Use to return to a previous setting during SETUP operations

⑫ S.MODE button

Use to select the screen mode.

⑬ MIDNIGHT button (see page 46)

Use to put receiver in MIDNIGHT mode. To use first press the RECEIVER button then operate this button.

⑭ THX button (see page 39,41)

Press to select the HOME THX CINEMA sound mode when listening to Dolby Digital, Dolby Pro Logic or DTS a variety of other sources.

⑮ DSP button (See p.40-41)

Press repeatedly to select a DSP sound mode. (HALL 1, HALL 2, JAZZ, DANCE, THEATER 1, or THEATER 2, 5 CH STEREO). Use these modes to produce surround sound from standard (two channel) stereo sources and create different listening environments.

⑯ ADVANCED button

Use to select one of the four Advanced Theater modes. Use to create certain types of sound environments when listening to Dolby Digital, Dolby Pro Logic or DTS sources.

⑰ STEREO button (See p.40 & 49)

Switches the receiver into STEREO mode if it was in a different sound mode (like ADVANCED THEATER) or toggles between DIRECT and STEREO mode.

DIRECT playback bypasses the tone controls and channel level for the most accurate reproduction of a program source.

⑱ LED DISPLAY

This display flashes when a command is sent from the remote control to the receiver. It also flashes at other times, for example when teaching the receiver preset codes, with specific meanings.

⑲ RECEIVER button

This switches between STANDBY mode and power ON for this receiver.

⑳ RECEIVER button

Use to switch the remote to the receiver control mode.

㉑ MASTER VOLUME +/- buttons

Use to set the overall listening volume.

㉒ MENU button

Use to get the various menus for your TV or DTV.

㉓ button (CLASS)

Use to pause components or use the CLASS feature to switch between the three banks (classes) of station memories. You can also use to select the red channel on digital TVs (DTV).

㉔ button (DTV MENU)

Use to fast forward search on CDs etc. Also you can access the DTV menu with this button.

㉕ button (DTV ON/OFF)

Use to fast reverse search on CDs etc. Also use to turn DTV on/off.

㉖ RDM (DTV INFO)

Use to fast reverse search on CDs etc. Also you can access the DTV information with this button.

㉗ CLEAR button

This button clears the on-screen display (OSD) of a digital TV (DTV) menu.

㉘ FUNCTION button

Press to select a source. The button will cycle through all the possible sources.

㉙ MUTE button


Press to mute or restore the volume.

㉚ STANDARD button

Use for pure decoding of multi channel sources, especially Dolby Digital, Dolby Pro Logic, DTS sources.

Display

All the display information is explained and/or referenced here.

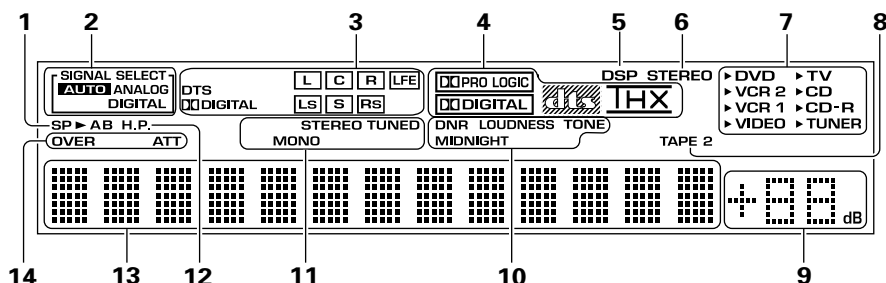

1 Speaker indicators

Light to indicate the current speaker system, A and/or B.

2 SIGNAL SELECT indicators

Light to indicate the input signal you selected.

AUTO : Lights when the receiver is set to select the input signal automatically.

ANALOG : Lights when analog signals are assigned.

DIGITAL : Lights when digital audio signals are selected.

3 Program Format indicator

DOLBY DIGITAL : Lights when a source with Dolby Digital signals is played.

DTS : Lights when a source with DTS audio signals is played.

For Dolby Digital or DTS sources, these indicators change according to which channels are active in the source.

L – Left front channel.

C – Center channel.

R – Right front channel.

LS – Left surround channel.

S – Surround channel (mono).

RS – Right surround channel.

LFE – Low Frequency Effects channel.

4 DTS / dts mode indicators

DOLBY DIGITAL – Indicates multi channel playback of a Dolby Digital source.

DOLBY PRO LOGIC – Lights when Dolby Pro Logic decoding is switched on.

dts – When the DTS/dts mode on the receiver is on, this indicator lights to indicate playback of a DTS signal.

THX – Lights when the HOME THX CINEMA mode is selected.

6 STEREO indicator

Lights when a STEREO mode is selected.

7 Source indicators

► indicator lights at the selected source.

8 TAPE 2 indicator

Lights when the TAPE 2 monitor is on.

9 MASTER VOLUME indicator

Displays current volume level.

10 Sound control indicators

DNR – Lights when the digital NR is on.

LOUDNESS – Lights when the Loudness is on.

TONE – Lights when the Tone control is on.

MIDNIGHT – Lights when the Midnight mode is on.

11 Tuner indicators

STEREO – Lights when a FM stereo broadcast is received in the auto stereo mode.

TUNED – Lights when a broadcast is received.

MONO – Lights when the tuner is set to receive FM broadcasts with the mono mode selected.

12 H.P (headphones)

Lights when headphones are connected to the PHONES jack (speakers systems A and B both turn off automatically).

13 Character display

Shows current mode, status, etc.

14 Analog level indicators

OVER – When the source signal is analog, this lights if the signal is in danger of distorting. Press INPUT ATT to lower the signal level.

ATT – Lights when ATT is used to reduce the level of the analog source signal.

5 DSP indicator (See p.40 – 41)


Lights when a DSP or Advanced Theater mode is selected.

Initial Setup

Setting Up for Surround Sound

To ensure that this receiver works properly and you get the best possible surround sound, be sure to complete the following setup operations. You only need to make these settings once (unless you change the placement of your current speaker system, add new speakers or components, etc.).

These instructions are written using the remote control to make the settings but you can also use the multi jog dial, setup and return buttons on the front panel for the same purpose. Turn the multi jog dial left or right to instead of using the ▲ or ▼ arrow buttons and press the multi jog dial to enter the command.

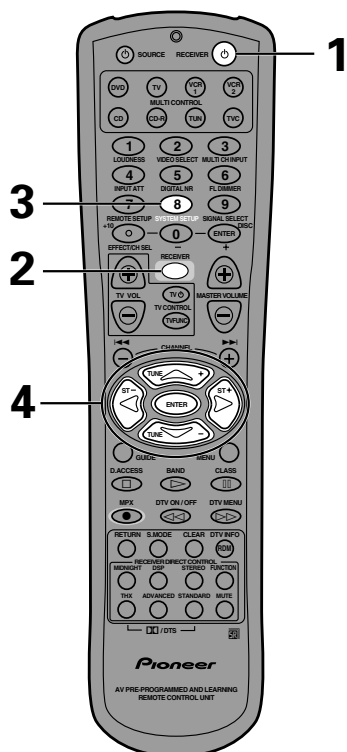

1 Press RECEIVER to turn the power on.

The STANDBY indicator goes out.

2 Press RECEIVER.

This switches the remote to the receiver control mode.

3 Press the SYSTEM SETUP (or SETUP on the front panel) button.

Assign Set

This display appears on the receiver.

- You can escape from this screen at any time by pressing the SYSTEM SETUP button again. None of the settings you made will be entered in this case.
- If don't enter any settings the receiver will revert back to it's previous state after three minutes.
- If you want to go back one level in the setup process press the RETURN button or ◀ button on the remote control.

4 Press the ▲ or ▼ arrow buttons (or use the MULTI JOG dial) to move the hand to the second tier of setup modes and choose the one you want. Then press the ENTER button (or the MULTI JOG dial) .


There are three second tier setup modes: **ASSIGN SETUP**, **SURROUND SETUP** and **FUNCTION RENAME**. The first of these, ASSIGN SETUP, is for telling the receiver which components are hooked up to which terminals and how they are connected. In the ASSIGN SETUP menu you must make the DIGITAL-IN-SELECT adjustments if you didn't follow the default settings when you hooked up your DVD/LD player.

We suggest you start with DIGITAL-IN-SELECT and adjust and make all the necessary adjustments here and then move on to the other entries in this menu and decide if you need to make these adjustments. It is likely you will not need to bother with any of the other things on this menu.

Next move on to the SURROUND SETUP menu and make all the necessary settings. It is essential you make these settings in order to get good surround sound .

The last set up menu, FUNCTION RENAME, lets you customize the receiver to match your home system.

The system set up modes explained here in a little more detail. The order follows that of the SYSTEM SETUP menu.

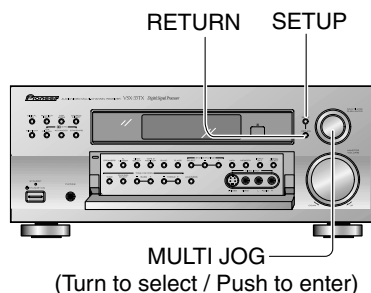

ASSIGN SETUP:

Digital In Select (See p.29)

In order to use your digital components you must match the numbered digital input settings with the numbered digital jacks used by your digital components.

Multi Channel In Setting (See p.30)

This is for hooking up a multi channel external decoder that may give you higher quality when decoding discs. This feature lets you select adjustable to non-adjustable sound.

SURROUND SETUP:

Speaker Setting (See p.31-32)

Use to specify the type and number of speakers you connected.

Channel Delay (See p.33)

Adding a slight delay to some speakers enhances sound separation and is particularly important for achieving a surround sound effect. You need to figure out the distance from your listening position to your speakers to add the proper delay.

Channel Level (See p.34-35)

Use to balance the volumes of your different speakers.

Crossover Network (See p.36)

This feature lets you select which bass frequencies will be sent to the subwoofer or front speakers.

Bass Level (See p.37)


Dolby Digital and DTS audio sources include ultra-low bass tones. Set the bass peak level as needed to prevent the ultra-low bass tones from distorting the sound from the speakers.

D-Range Control (See p.38)

This feature makes possible excellent surround sound effects when listening to Dolby Digital sources at low volumes.

FUNCTION RENAME

This feature lets you rename specific "functions," which in this case stands for components like DVD/LD, VCR 1, etc. This is a useful feature for matching the remote control and receiver display exactly with your home setup.


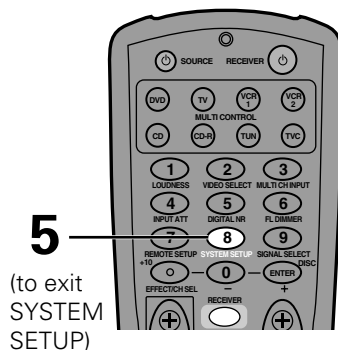


- 5 Go on to the next page to start the set up. If you don't want to make any settings go can exit this setup. To exit the SYSTEM SETUP MENU press the SYSTEM SETUP (or SETUP on the front panel) button again.**

ASSIGN SETUP MENU

Digital-In Select

In order to be able to use your digital equipment properly you need to assign digital inputs for each of the digital components you connected. Match the Digital 1-4 settings with the digital jacks 1-4 in accordance with what is connected to each digital jack. Check the digital jack numbers on the back of the receiver to make certain what component is in which jack (if necessary, see page 13 for more on digital connections). If continuing from the last page go to step 1. If starting fresh, complete steps 1-3 in "Setting Up for Surround Sound" (p.27) first.

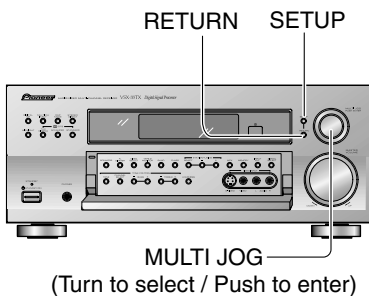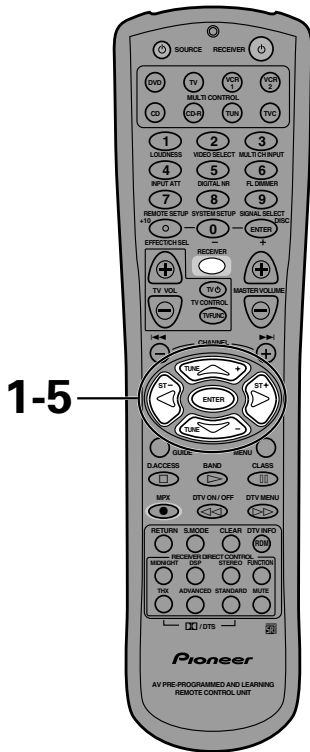

The default settings are:

DIGITAL IN 1: DVD/LD

DIGITAL IN 2: CD

DIGITAL IN 3: CD-R/TAPE1/MD

DIGITAL IN 4: TV/SAT




The default settings for the DIGITAL INs are printed next to the jacks in parentheses on the back of the receiver.

- 1 "Assign Setup" should be selected (if it isn't use the SYSTEM SETUP or SETUP buttons to select it).**

See "Setting Up for Surround Sound" on page 27 if you need more information.

Press the ENTER button.

- 2 "Digital In" will appear in the display. To go to the first Digital In setup press the ENTER button.**



- 3 "Digi-1 DVD/LD" will appear. To change the digital input press ENTER. The input function selected will start to flash on the receiver's display.**



If you want leave it as is don't press ENTER, use the ▲/▼ buttons instead to move on to "Digi-2 CD" or another Digital In.

- 4 Use the ▲/▼ buttons (or the MULTI JOG dial) to choose the input function that matches the component hooked up to that digital terminal. Press ENTER when you've matched the two.**

The possible choices include: DVD/LD, CD, CD-R/TAPE 1/MD, TV/SAT, VCR 1, You cannot assign digital inputs to the TUNER, VIDEO, and TAPE 2 MONITOR functions.

If you assign a function (for example DVD/LD) that was previously assigned to a different Digital In the first Digital In will automatically revert to an OFF setting. This is because one function cannot be assigned twice.

Pressing ENTER moves you to the next DIGITAL IN. Repeat steps 3 & 4 until all the Digital Ins are set.


- 5 Select "Dig-In End" with the ▲/▼ buttons (or the MULTI JOG dial) and press ENTER to go to Multi In Set.**

If you want to change a setting before proceeding use the arrow buttons to go back.

Initial Setup

Multi Channel In Setting


For most people this setting will not be necessary, if this is the case for you go on to the next setup. If you have a Multi Channel external decoder you can choose whether to have the sound level set to BYPASS, which bypasses the level adjust circuit or set to ADJUST, which goes through the level adjust circuit. If continuing from Digital In Select go to step 1. If starting fresh, complete steps 1-3 in "Setting Up for Surround Sound" (p.27) first.

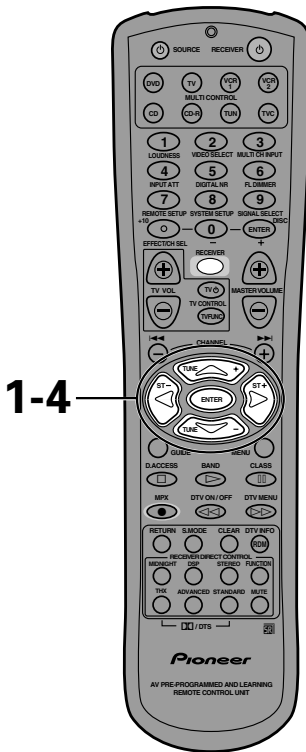

1 Use the ▲/▼ buttons (or the MULTI JOG dial) to select "Multi In Set".

See "Setting Up for Surround Sound" on page 27 if you need more information.

Press the ENTER button.



2 Use the ▲/▼ buttons (or the MULTI JOG dial) to select the setting you want, BYPASS or ADJUST.

ADJUST

Use the ADJUST setting when you want to be able to control each channel level individually.

BYPASS


This setting is good for getting the cleanest possible signal. In this setting you won't be able to change each channel individually.

We recommend using BYPASS and the default setting is BYPASS.

3 Press the ENTER button.

You will go to "Assign End".


4 Press ENTER again and move on to "Surround Set" (the Surround Setup Menu).

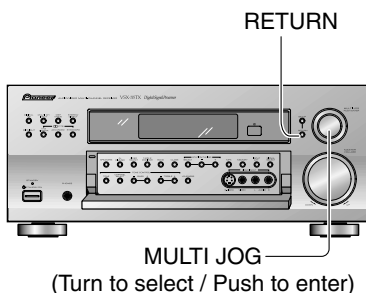

SURROUND SETUP MENU

Speaker Setting


Starting from this procedure use the SURROUND SETUP menu. To access the menu follow steps 1-3 on p.27 and in step three choose SURROUND SETUP (Surround Set is shown on the receiver's display). The steps below show you how to specify the type of speakers you connected. Use the ▲/▼ buttons (or the MULTI JOG dial) to make a selection from the display, and use the ENTER button to register the information.

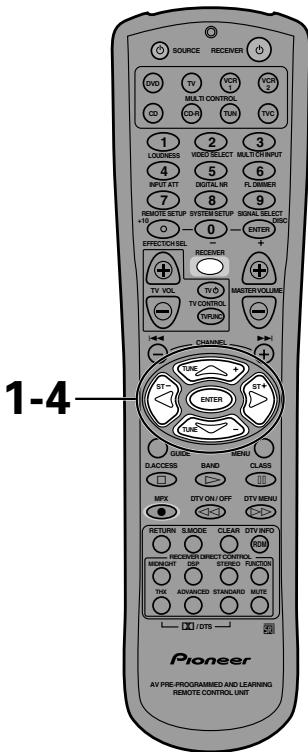

- 1 Select "Speaker Set" from the SURROUND SETUP MENU with the ▲/▼ buttons or MULTI JOG dial (if continuing from the last set up, it should already be selected). then press the ENTER button.**

See "Setting Up for Surround Sound" on the page 27 if you are unsure how to do this.

- 2 "Speaker Set" will appear in the display, press ENTER again to move to the settings.**



- 3 Select either the FREE or THX speaker setting mode with the ▲/▼ buttons (or MULTI JOG dial) then press ENTER.**


To specify each speaker individually select FREE.

If you connected a complete set of THX speakers select THX and skip step 5.



- 4 Specify the type of speakers you connected. See the explanations below for the meaning of each size.**

- ① Press ENTER. Use the ▲ or ▼ buttons (or MULTI JOG dial) to move the cursor to the speaker you want to adjust.
- ② Press ENTER to select that speaker. The speaker name will flash in the receiver's display.
- ③ Press ▲ or ▼ to move the setting to LARGE, SMALL, or NO depending on the size of your speakers (You can't select NO for the FRONT speakers. See below for detailed explanations).
- ④ Press ENTER.
- ⑤ Repeat ② and ④ for each speaker.

(see next page for explanations of sizes)

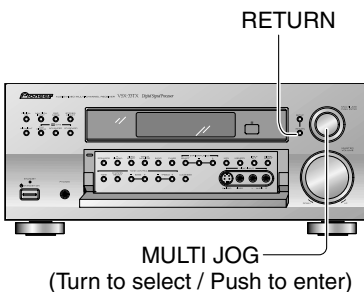

Initial Setup

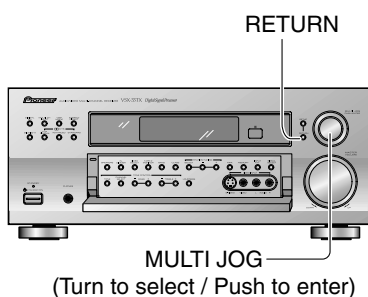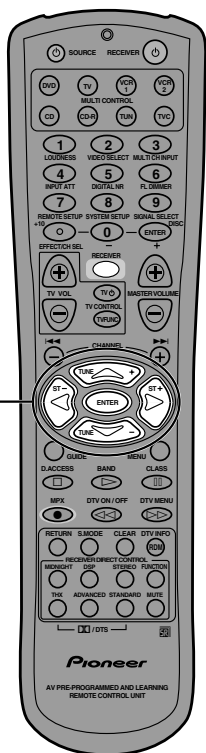

If you have a subwoofer and like lots of bass, it may seem logical to select LARGE for your FRONT speakers and leave the subwoofer selected. This may not, however, yield the best bass results. Depending on the size and shape of your room you may actually experience a decrease in the amount of bass due to what is called "low frequency cancellations." If you have a subwoofer, listen to the bass response with the FRONT speakers set to LARGE and SMALL alternatively and let your ears judge which sounds best.

The safest option in this case is to route all the bass sounds to the subwoofer by selecting SMALL for the FRONT speakers.

Depending on your choices the sound will be routed differently, read below for detailed explanations.

FRONT (default setting is LARGE)

- Select SMALL to send bass frequencies to the subwoofer.
- Select LARGE if your speakers will reproduce bass frequencies effectively or if you did not connect a subwoofer. (If you select SMALL for the front speakers the subwoofer will automatically be set to YES. Also, the center and surround speakers cannot be set to LARGE if the front speakers are set to SMALL. In this case, all bass frequencies are sent to the subwoofer.)

CENTER (default setting is LARGE)

- Select LARGE if your speaker will reproduce bass frequencies effectively.
- Select SMALL to send bass frequencies to the other speakers or subwoofer.
- If you did not connect a center speaker select NO. In this case, the center channel is output from the front speakers.
- If the front speakers are set to SMALL the CENTER speaker will automatically be set to SMALL.

SURROUND (default setting is LARGE)

- Select LARGE if your speakers will reproduce bass frequencies effectively.
- Select SMALL to send bass frequencies to the other speakers or subwoofer.
- If you did not connect SURROUND speakers select NO. In this case, the sound of the surround channels is output from the front and center speakers.
- If the FRONT speakers are set to SMALL, the SURROUND speakers will automatically be set to SMALL.

SUBWOOFER (default setting is YES)

- Selected YES you connected a subwoofer.
- If you did not connect a subwoofer select NO. In this case, the bass frequencies are output from the front or surround speakers.
- Choose the PLUS setting if you want stronger reproduction of deep bass sounds.
- If you select PLUS the bass frequencies that would normally come out the front and center speakers are all routed to the subwoofer.



5 Select "Sp Set End" with the ▲/▼ buttons or MULTI JOG dial and press ENTER to go to "Channel Delay".

Next, proceed to Channel Delay on the next page.

If you want to change a setting before proceeding use the arrow buttons to go back.

Channel Delay


Adding a slight delay to some speakers is necessary to achieve a surround sound effect. You need to figure out the distance from your listening position to your speakers to add the proper delay. The following steps show you how to set the delay time for each channel by specifying the distances from your listening position to each speaker. Once you specify the speaker distances, the receiver calculates the correct delay times automatically. If continuing from Speaker Setting go to step 1. If starting fresh, complete steps 1-3 in "Setting Up for Surround Sound" (p.27) first.

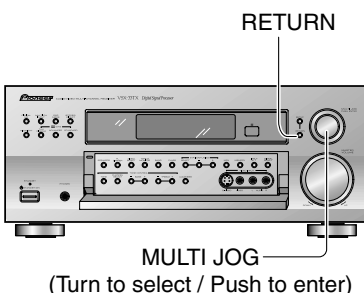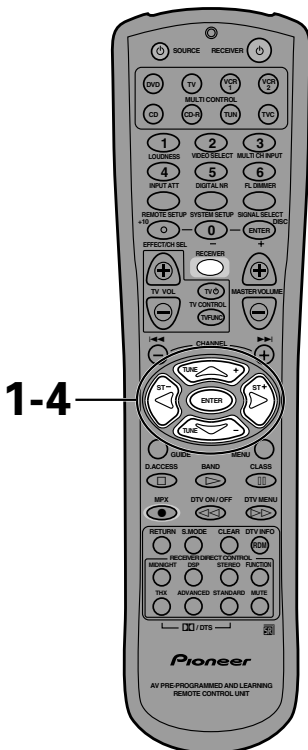

1 Select "Channel Delay" with the ▲/▼ buttons or MULTI JOG dial (if continuing from the last set up, it should already be selected).

See "Setting Up for Surround Sound" on page 27 if you are unsure how to do this.

Press the ENTER button.



- The default setting is 10 ft.

2 Press ENTER again.

The distance will flash in the receiver's display.



3 Specify the distance from your listening position to each speaker using the commands below.

- ① Use the ▲/▼ buttons to adjust the speaker distance in half foot increments from 0.5 to 45 feet. The default setting is 10 feet.
 - ② Press ENTER.
 - ③ Repeat steps 2 and 3 for the rest of the speaker settings.
- Sound takes about 1 millisecond to travel 1 foot.

4 When you've finished the last setup and pressed ENTER, "Ch Delay End" should be selected. Press ENTER button again to send the information to the receiver and go to "Channel Level" settings.



Next, proceed to Channel Level on the next page.

If you want to change a setting before proceeding use the arrow buttons to go back.

Initial Setup

Channel Level

The following steps show you how to balance the sound output level of your speakers. Proper speaker balance is essential for obtaining high quality surround sound. If continuing from Channel Delay go to step 1. If starting fresh, complete steps 1-3 in "Setting Up for Surround Sound" (p.27) first.

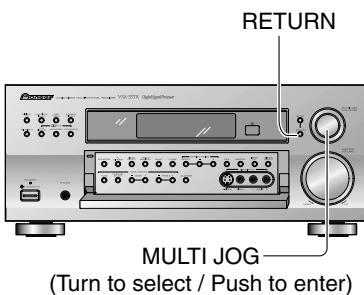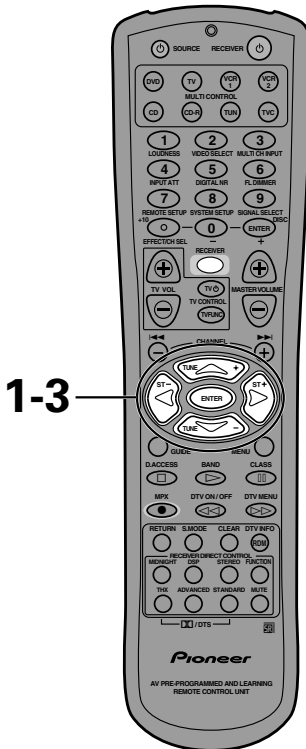

1 Select "Channel Level" with the ▲/▼ buttons or MULTI JOG dial (if continuing from Channel Delay, it will already be selected).

See "Setting Up for Surround Sound" on page 27 if you are unsure how to do this.

Press the ENTER button.



NOTE : Be prepared! The test tone is output at a high volume level.

MASTER VOLUME rotates to the reference position (0 dB) and the display on the receiver flashes TEST TONE. After a few seconds the test tone is output.


2 Select a TEST TONE mode.

- ① Press ▲/▼ (or the MULTI JOG dial) to move the cursor to AUTO or MANUAL.
- ② Press ENTER to start the test tone.

AUTO (automatic TEST TONE)

This mode switches the test tone between each speaker automatically.

The test tone is output in the following order:




MANUAL (manual TEST TONE)

This mode lets you switch the test tone between each speaker manually. You can use this mode when you want to balance the speaker levels at a more leisurely pace.

3 After pressing ENTER it will take a moment for the volume to get to the reference position (0 dB) and the TEST TONE will be output.



(This display appears when you choose Auto test mode.)

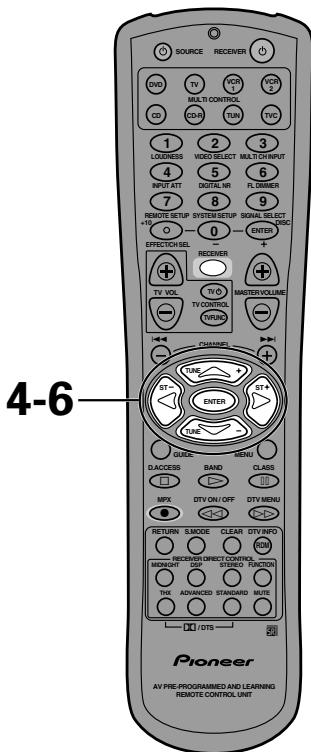

4 Adjust speaker levels so that you hear the test tone at the same volume from each speaker when seated in your main listening position.

Note: The volume of the subwoofer tends to sound lower than it actually is, you may need to raise its level after testing the sound with actual soundtracks.

In AUTO mode

The receiver will automatically cycle through the speakers emitting a test tone from each one. It will continue to do this until you press ENTER to signify you have finished your adjustments.

In MANUAL mode

- ① Press ENTER
- ② Press the ▲/▼ buttons (or the MULTI JOG dial) to adjust the level of the speaker outputting the TEST TONE.
- ③ Press ENTER again to input the information and move to the next channel.
- ④ Repeat ①, ② and ③ for each speaker.

If you are using a Sound Pressure Level (SPL) meter

Take the readings from your main listening position and adjust the level of each speaker to 75 dB SPL (C-weighted/slow mode).

5 When you have adjusted each speaker level and entered the information “Ch Level End” will be selected. Press ENTER .

It will again take a moment as the MASTER VOLUME returns to its original position.

6 Press ENTER again to return to go to the “Crossover” settings.

Next, proceed to Crossover Network on the next page.

If you want to change a setting before proceeding

use the ▲/▼ buttons (or the MULTI JOG dial) to go back.




Note that it is also possible to set channel levels temporarily. Then follow the same procedure as explained on this page. This function is designed to be used when you want to change the levels temporarily to raise the level of one channel. Using this method you can set speaker levels in different modes, such as, STEREO, and each DSP mode, independently. You should return the settings to their original state when done. Doing the set up procedures on this page will erase any temporary/independent level settings that have been made.

Initial Setup

Crossover Network

The following steps show you how to adjust the crossover network. The crossover network is the frequency at which the system divides the signal and sends the different parts (high, mid, low) to different speakers. Speaking precisely, this setting sets the cutoff point for the bass frequencies rerouted from your SMALL speakers to your subwoofer or speaker set to LARGE.


If continuing from Channel Level go to step 1. If starting fresh, complete steps 1-3 in "Setting Up for Surround Sound" (p.27) first.

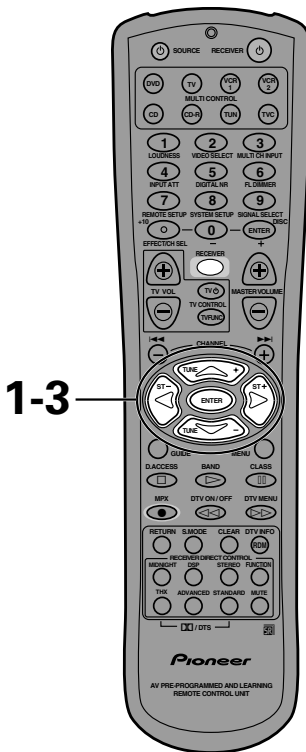

1 Select "Crossover" with the ▲/▼ buttons or MULTI JOG dial (if continuing from CHANNEL LEVEL, it will already be selected).

See "Setting Up for Surround Sound" on page 27 if you are unsure how to do this.

Press the ENTER button.



• The default setting is 80 Hz.

2 Specify the crossover frequency for your small speakers.

Setting speakers to SMALL in "Speaker Setting" sends the respective channel's bass frequencies to the subwoofer (or LARGE speakers). The present function lets you determine which frequencies will be sent to the subwoofer or LARGE speakers.

① Use the ▲/▼ buttons (or the MULTI JOG dial) to select 80 Hz, 100 Hz, or 150 Hz.

80Hz

Sends bass frequencies below 80 Hz to the subwoofer (or LARGE speakers).


100Hz

Sends bass frequencies below 100 Hz to the subwoofer (or LARGE speakers).

150Hz

Sends bass frequencies below 150 Hz to the subwoofer (or LARGE speakers).

Experiment with the different settings to see which sounds best to you.

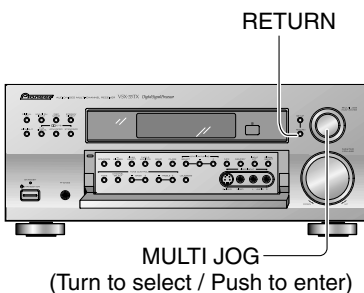


3 Press ENTER to send the information to the receiver and got to the "Bass Level"

Next, proceed to Bass Level on the next page.

If you want to change a setting before proceeding use the ▲/▼ buttons to go back.

Bass Level


The LFE (Low Frequency Effect) channel in Dolby Digital or DTS program sources can produce heavy ultra-low bass tones that may exceed the capabilities of your speaker system. The following steps show you how to set a maximum output level for the LFE channel. If continuing from Crossover Network go to step 1. If starting fresh, complete steps 1-3 in "Setting Up for Surround Sound" (p.27) first.

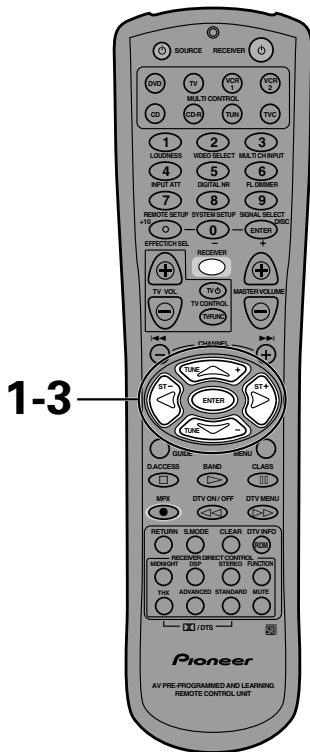

1 Select "Bass Level" with the ▲/▼ buttons or MULTI JOG dial (if continuing from Crossover Network it will already be selected).

See "Setting Up for Surround Sound" on page 27 if you are unsure how to do this.

Press the ENTER button.



2 Output the test tone for the LFE channel and specify the peak level.

If your subwoofer has a volume control, set it to the middle position before proceeding.


- ① SETTING START will be selected, press ENTER

The MASTER VOLUME goes to the reference level [MIN (—dB)]. Then the test tone is output to the subwoofer, front or surround speakers.

- ② Use the ▲/▼ buttons (or the MULTI JOG dial) to select the Bass Level. Each press moves the level 1dB in a range of -80dB to +12dB. Gradually increase the level of the LFE channel until the test tone begins to distort. Then go back and leave the level setting at a point just before that.

- ③ Press the ENTER button.

It takes a few seconds for the MASTER VOLUME to return to its previous position.

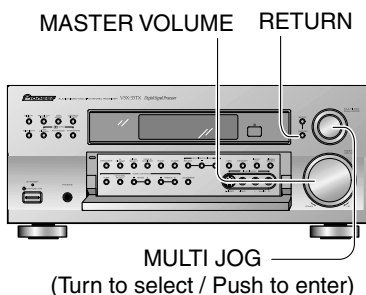

3 "Bass Level End" will appear in the display. Press the ENTER button to go to "D-Range Cont."


Next, proceed to D-Range Control on the next page.

If you want to change a setting before proceeding use the ▲/▼ buttons (or the MULTI JOG dial) to go back.

Initial Setup

D-Range Control (Dynamic Range)


This feature makes it possible to enjoy full surround sound effects on Dolby Digital sources even at low volumes. It does this by compressing the dynamic range. Dynamic Range is the difference between the loudest and the softest sounds in any given signal. Compressing the range plays sounds so the quieter ones are audible and the louder ones don't get distorted or become overpowering. This feature only applies to Dolby Digital sources but the MIDNIGHT LISTENING mode accomplishes the same end for a variety of sources (see page 46). If continuing from Bass Peak Level go to step 1. If starting fresh, complete steps 1-3 in "Setting Up for Surround Sound" (p.27) first.

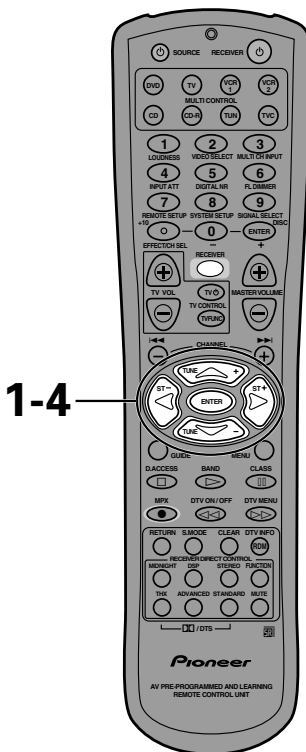

1 Select "D-Range Cont" with the ▲/▼ buttons or MULTI JOG dial (if continuing from Bass Level, it will already be selected).

See "Setting Up for Surround Sound" on page 27 if you are unsure how to do this.

Press the ENTER button.



- The default setting is OFF.
- If listening at loud volumes we recommend turning the D-Range Control OFF.

2 Use the ▲/▼ buttons (or the MULTI JOG dial) to choose OFF, MID or MAX.

3 Press the ENTER button.

If you want to change a setting before proceeding


Choose a new D-Range Control setting using the ▲/▼ buttons (or the MULTI JOG dial).

You may need to experiment with different Dolby Digital sources before you can use the D-Range Control setting to suit your low volume listening needs.

4 "Surr Set End" will appear in the display. Press the ENTER button.

You will go on to the "Rename" tier of the setup menus. This is not necessary for the basic operation of the receiver but lets you customize your system (see p.65-66). If you don't want to rename anything at this time use the ▲/▼ buttons (or the MULTI JOG dial) to select "Setup End" and press ENTER.

This setting completes the surround setup.

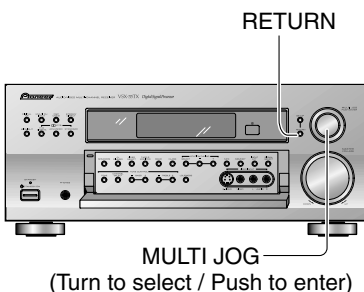

Basic Playback

Learning about the Sound Modes

The sound modes are explained here.

There are three cinema modes: STANDARD, HOME THX CINEMA, and ADVANCED THEATER. These are designed to be used with multi channel surround sound audio/visual sources (like DVDs and LDs). Intrinsic to home theater, these modes can deliver realistic and powerful surround sound that recreates the movie theater experience. You may need to experiment with them to see which settings suit your home system and personal tastes.

The DSP and STEREO modes are designed to be used with music sources but some DSP modes are also suited for film soundtracks. Again, try different settings with various soundtracks to see which you like.

STANDARD mode


This mode is for pure decoding of Dolby Digital, DTS and Dolby Surround. No special effects are added. It is good for enjoying movies that have been recorded in Dolby Digital, DTS or Dolby Surround.

You can identify Dolby Digital software by the  or  marks. Most Dolby Surround software is marked , but unmarked software may also incorporate Dolby Surround.

HOME THX CINEMA mode

THX is a set of technical standards created by Lucasfilm, Ltd. These standards were designed to emulate a film sound stage and thus reproduce, with the greatest possible accuracy, the soundtrack intended by the filmmakers.

ADVANCED THEATER modes

The Advanced Theater mode is a newly designed system for enhancing movie soundtracks and other audio-visual sources. It incorporates the use of DTS as well as Dolby Digital into its sound processing. These functions switch on automatically when the source you are playing is encoded with DTS or Dolby Digital (bearing the  logo). There are four Advanced Theater settings that use DSP (Digital Signal Processing) to create different types of sound environments.

MUSICAL

This mode is primarily for music and adds a spacious feeling to the sound. A long delay time of reflected sounds, provides resonant tones which emulate a concert hall.

DRAMA

This mode is designed for movies with a lot of dialog. The elements of dialog are enhanced, making the characters seem more real. The mode also compresses the dynamic range somewhat so loud sounds do not overpower softer ones (compare this with the MIDNIGHT LISTENING mode explained on p.46).

ACTION

This mode is designed for action movies, which generally use lots of sound effects. The mode enriches the sound to make it more realistic and extends the parameters to pick up high and low sound effects.

5-D THEATER

This mode is especially designed to give sound depth to stereo sources. The overall effect builds a dynamic and broad sound space, allowing two-channel (stereo) signals to faithfully imitate a five speaker sound. The mode should be used in conjunction with Dolby Pro Logic for sources bearing the

 mark.



When a Dolby Digital soundtrack is played back the Dialog Normalization function of the receiver activates automatically. Dialog Normalization is a Dolby Digital function that establishes the average dialog level for the program source being played. If the receiver's level does not match the average dialog level, first you see "DIAL NORM" flash in the receiver's display and next "OFFSET +4 dB" (as an example) will appear. In this example, the number +4 dB is the difference between the receiver's gain structure and the Dolby Digital average dialog level. To match the average dialog level, subtract or add the OFFSET level. For example, if the OFFSET level is +4 dB, the amplifier's output is 4 dB over the average recorded level.

Basic Playback

DSP modes

The DSP (Digital Signal Processing) modes allow you to transform your living room into a variety of different sonic environments when playing either two-channel or multi-channel sources.

HALL 1

Simulates the acoustic effects of a large concert hall. Suitable for classical music. A long delay time of reflected sounds, coupled with reverb effects, let the listener enjoy the dynamic and rich sounds characteristic of concert halls and powerful orchestral performances.

HALL 2

Simulates the acoustic environment of a very resonant concert hall. Rich reverberation and a full sound create the impression of a lively performance space.


JAZZ

Simulates the acoustic effects of a jazz club. Reflected sound is virtually below 100 msec so that the listener can enjoy a live band effect.

DANCE

Simulates the acoustic effects of a dance club. Features a strong bass sound. Reflected sound delay time is virtually below 50 msec, for the listener to enjoy the visceral power of dance music.

THEATER 1

Reproduces theater sound field effects without losing the localization of each channel. Theater effects can be enjoyed without losing Dolby Digital/ Pro Logic (Surround) effects when used in combination those formats (with movies bearing the  DOLBY SURROUND trademark).

THEATER 2

Simulates the acoustic environment of a theater while maintaining proper localization of each channel.


5CH STEREO



Simulates the acoustic environment of a regular stereo while using all the speakers in the system to induce a rich, all-around sound.

STEREO mode

Use the STEREO mode to enjoy standard (two-channel) stereo sound from the front left and right speakers. This mode is most like the sound reproduction you would get from a regular stereo receiver or amplifier that is not equipped to handle A/V formats as this one is. You might want to use this mode for listening to regular music sources (like CDs) but remember, you will only get sound from your front two speakers and possibly sub woofer.

Selecting a Sound Mode

To ensure the best possible surround sound, be sure to complete the set up procedures described in "Setting Up for Surround Sound" (starting on page 27) before using the sound modes. This is particularly important when using the  (Dolby) Digital or DTS sources. When using the sound modes, using SPEAKERS A will give the best results. If you use SPEAKERS B the sound will be down mixed to the two front B speakers.

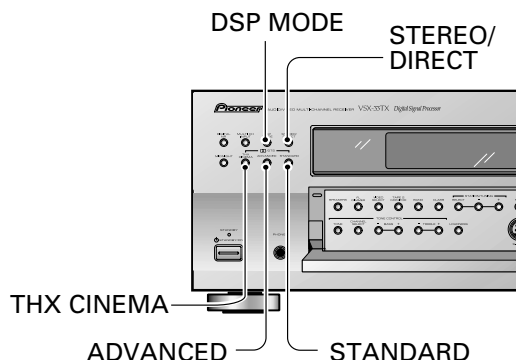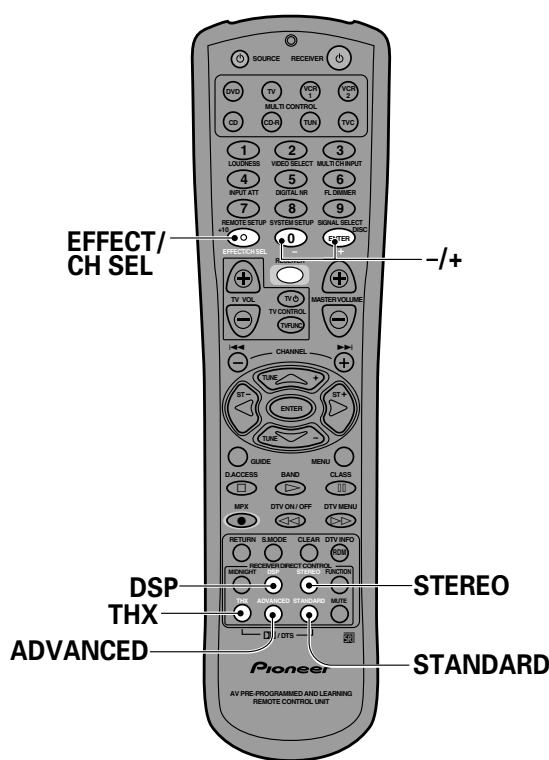

1 Select the sound mode.

- For **STANDARD** → Press **STANDARD**
- For **HOME THX CINEMA** → Press **THX(THX CINEMA)**
- For **ADVANCED THEATER** → Press **ADVANCED**
Each press changes the ADVANCED THEATER mode as follows:

MUSICAL	→	DRAMA
5-D THEATER	←	ACTION
- For **DSP modes** → Press **DSP(DSP MODE)** repeatedly
Each press changes the DSP mode as follows:

HALL 1	→	HALL 2	→	JAZZ	→	DANCE
5CH STEREO	←	THEATER 2	←	THEATER 1		
- For **STEREO** → Press **STEREO (STEREO/DIRECT)**
Each press changes the STEREO mode as follows:


STEREO	→	DIRECT
--------	---	--------

memo

- The effects of **ADVANCED THEATER** mode can be adjusted in the range of 10 to 90 by pressing **EFFECT +/-** (The default setting is 70). Also, the effect level can be set in each **ADVANCED THEATER** mode by pressing the **EFFECT(+/-)** button.
- The amount of effect of each **DSP** mode can be adjusted in the range of 10 to 90 (the default setting value is 70) by pressing **EFFECT +/-**.
- 5CH STEREO** modes cannot be changed.

Playing Sources with Dolby Digital or DTS Sound

The following instructions show you how to play Dolby Digital or DTS sound sources with the VSX-33TX.

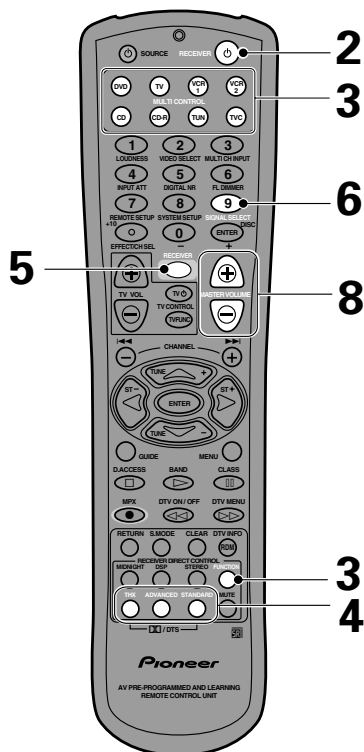


1 Turn on the power of the playback component.

2 Turn on the power of the receiver.

Be sure that the standby indicator turns off on the front panel.

3 Press the MULTI CONTROL buttons or the FUNCTION button to select the source you want to playback.

The FUNCTION button cycles through the sources in the following order:



4 Choose a sound mode by pressing THX, ADVANCED or STANDARD.

The default setting is STEREO.

(For more see "Learning about the Sound Modes" and "Selecting a Sound Mode" on pages 39-41.)

5 Press RECEIVER.


The set the remote to receiver control mode.

6 Press the SIGNAL SELECT button to select the input signal. Set to AUTO.

(See "Switching Analog and Digital Signal Input" on page 44.)

7 Start playback of the component you selected in step 1.


8 Adjust the volume by using the volume buttons on the remote control or the MASTER VOLUME on the front panel.

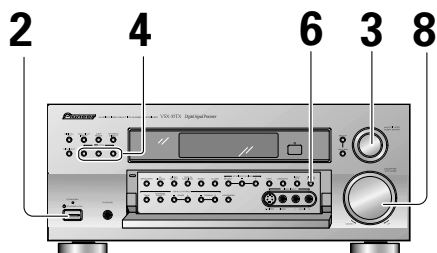

- We recommend using different modes for different types of DTS material. For watching movies, the THX or ADVANCED THEATER setting should provide the best results. For listening to music, the STANDARD, DIRECT, STEREO, or DSP modes should serve the listener best.
- Make sure you connect your DVD/LD or LD player with the RF demodulator. If your player has an RF output this will ensure you can use all LDs. Refer to p.14.

Playing Stereo Sources

The following instructions show you how to use the receiver for stereo audio or audio-visual.

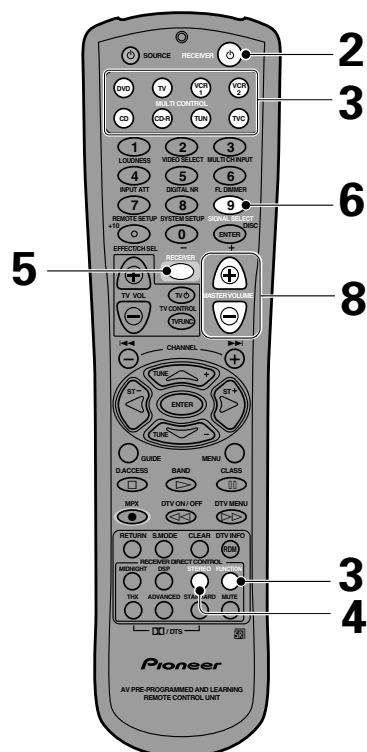

- 1 Turn on the power of the playback component.**

- 2 Turn on the power of the receiver.**

Be sure that the standby indicator turns off on the front panel.

- 3 Press the MULTI CONTROL buttons or the FUNCTION button to select the source you want to playback.**

The FUNCTION button cycles through the sources in the following order:



- 4 Press the STEREO/DIRECT button to select the stereo mode.**

The STEREO indicator lights on the display.

- 5 Press RECEIVER.**


The set the remote to the receiver control mode.

- 6 Press the SIGNAL SELECT button to select the input signal. Set to AUTO.**

(See "Switching Analog and Digital Signal Input" on page 44 for more information.)


- 7 Start playback of the component you selected in step 1.**

- 8 Adjust the volume by using the VOLUME buttons on the remote control or the MASTER VOLUME on the front panel.**

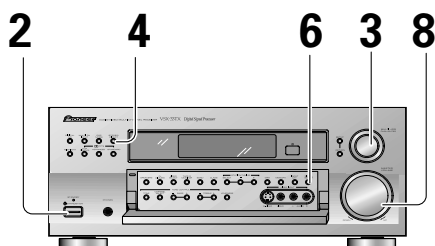

Switching Analog and Digital Signal Input

This switch moves the input fed to the receiver between analog and digital sources. You need to take special care to switch to the appropriate input, when necessary. For example, the switch would have to be on DIGITAL to use DOLBY DIGITAL or DTS surround sound but it would have to be on ANALOG to record to the analog out jacks on the receiver. The default setting is AUTO (priority is given to a digital signal, if there is one).

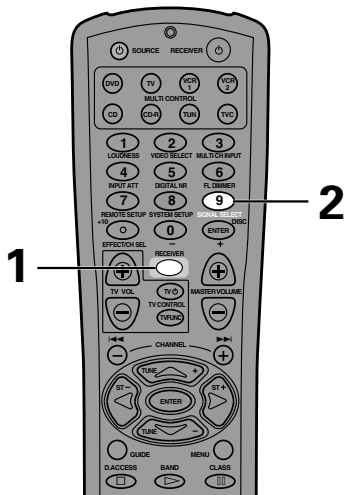


1 Press RECEIVER.



This switches the remote to the receiver control mode.

2 Press the SIGNAL SELECT button to select the input signal corresponding to the source component.

Each press switches the signal in the order below:



3 While SIGNAL SELECT is set to DIGITAL lights when a Dolby Digital signal is input, DTS lights when a DTS signal is input.

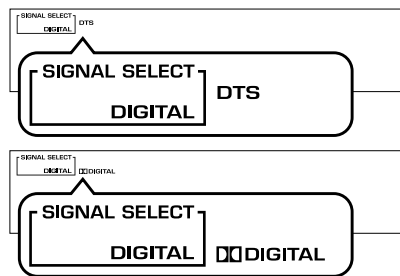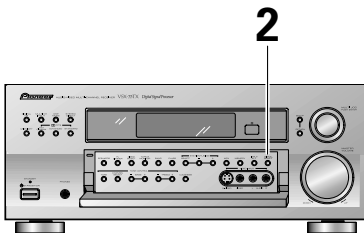

When a DTS signal is input.


When a Dolby Digital signal is input.



- In the AUTO setting, SIGNAL SELECT chooses the signal in the following order: DIGITAL, ANALOG.
- If the Digital-In Select (see page 29) choices are set to OFF, the SIGNAL SELECT will default to ANALOG.
- Because the audio from a karaoke microphone and LD recorded with analog audio only is not output from the digital output, set SIGNAL SELECT to ANALOG.
- This receiver can only playback Dolby Digital, PCM (32kHz, 44kHz, 48kHz, and 96kHz), and DTS digital signal formats. If you have some equipment that outputs digital audio in a format other than these you'll have to connect and playback via the receiver's analog inputs (make sure that SIGNAL SELECT is set to ANALOG).
- When an LD or CD with DTS is played back with the SIGNAL SELECT set in ANALOG, digital noise caused by playing back the DTS directly (with no decoding) is output. To prevent noise, you need to make digital connections (See pages 13 and 14) and set SIGNAL SELECT to DIGITAL or AUTO.
- Some DVD players don't output DTS signals. For more details, refer to the instruction manual supplied with your DVD player.
- The levels between analog and digital sources may vary so be careful with volume levels when switching between these two.

Reducing Noise During Playback

To reduce extraneous noise switch on DIGITAL NR. This noise reduction can be used with every mode except THX, MULTI CHANNEL IN and DIRECT.

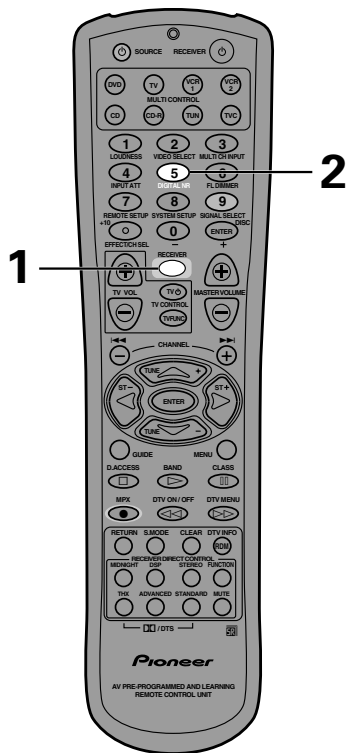

1 Press RECEIVER.


This switches the remote to the receiver control mode.

2 Press the DIGITAL NR button on the remote control or on the front panel.

Each press switches DIGITAL NR on or off.




- In cases described below, noises may not be reduced even if DIGITAL NR is on.
 - Sudden noise
 - Extremely loud noise
 - Signals that do not contain many high frequencies
- DIGITAL NR is effective at and above levels shown below for each source.
 - STEREO
 - analog input..... 10 -18 dB
 - digital input..... 10 -15 dB
 - AM/FM tuner 10 -15 dB
 - DSP/ADVANCED/STANDARD/96kHz
stereo 6 -10 dB
- Depending on the condition of the source, there may not be a noticeable improvement in the quality of the sound.
- You can't use the DIGITAL NR mode with the THX or MULTI CH IN modes.
- If you press DIGITAL NR when in DIRECT mode the receiver switches to STEREO mode.

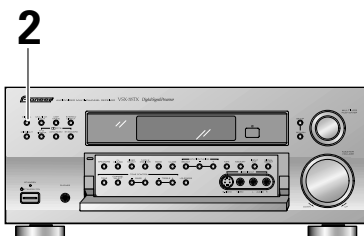

Listening in Midnight Mode

This feature makes it possible to get excellent surround sound effects even when listening at low volumes. It can be used with a variety of surround sound sources and plays soundtracks so that the quieter sounds are audible while the noisier sounds don't become overly loud or distorted. It does this by bringing all the sounds in a given soundtrack closer together in volume. Compare this feature with the D-Range Control (only for Dolby Digital sources) on page 38.

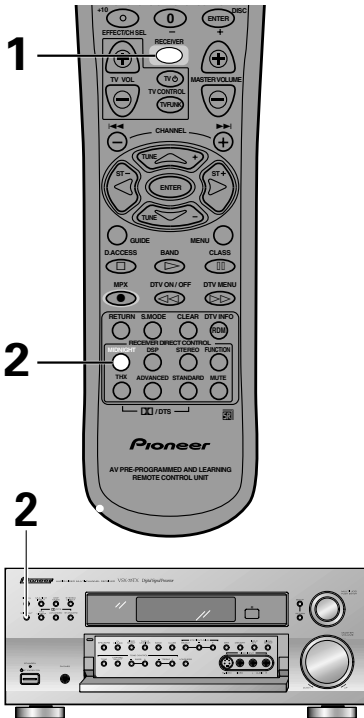

1 Press RECEIVER.

This switches the remote to the receiver control mode.

2 Press the MIDNIGHT button.


Each press switches MIDNIGHT LISTENING mode on or off.



- The effect adjusts itself automatically in accordance with the volume level.
- You can't use the MIDNIGHT LISTENING mode with the THX or MULTI CH IN modes.
- If you press MIDNIGHT when in DIRECT mode the receiver switches to STEREO mode.

Listening the Loudness Mode

The LOUDNESS mode allows you to boost the bass in a signal. It is useful for listening to music at low volumes.

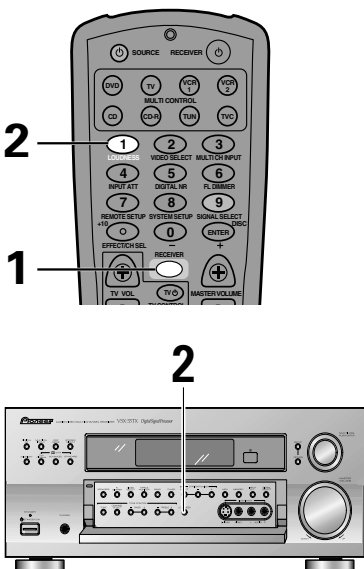

1 Press RECEIVER.

This switches the remote to the receiver control mode.

2 Press the LOUDNESS button.


Each press switches LOUDNESS mode between on and off.




- You can't use the LOUDNESS mode with the MULTI CH IN or THX modes.
- If you press LOUDNESS in DIRECT mode the receiver will switch to STEREO mode.

Adjusting Bass and Treble

You can use BASS +/- or TREBLE +/- buttons to adjust the low and high frequencies for each individual set of speakers. If the receiver is in STEREO mode you can only adjust the FRONT speakers. In a surround mode (STANDARD, ADVANCED THEATER, etc.) you can adjust the FRONT, CENTER, SURROUND speakers. The TONE button can also be used to bypass the tone circuitry (see p.22-23).

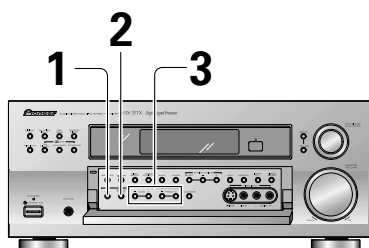


- 1 Press the TONE button on the front panel to put the receiver in TONE ON mode.**



- 2 Press the CHANNEL SELECT button on the front panel to cycle through the different tone adjust modes.**

The button cycles through the possibilities in the following order:



- 3 Use the BASS or TREBLE (+/-) buttons to adjust the low or high frequencies of each channel.**




A few seconds after you finish adjusting the tone the receiver will revert to the sound mode it was in at the beginning of the process.



- The tone control can be adjusted in a range of ± 6 dB.
- The tone control cannot be adjusted in THX or MULTI CH IN modes.
- If you press TONE button in DIRECT mode, the receiver switch to STEREO mode and "TONE ON" appears in the display.

MULTI CHANNEL IN Playback

MULTI CH IN allows you to connect an external decoder to enjoy certain types of specialized discs. To use MULTI CH IN playback follow the instructions below.

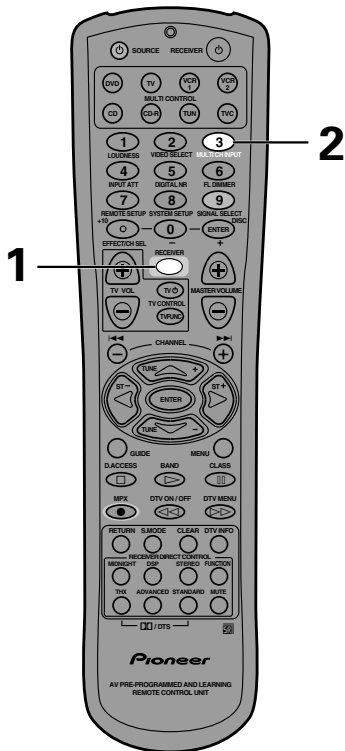

1 Press RECEIVER.


This switches the remote to the receiver control mode.

2 Press the MULTI CH INPUT button on the remote control or the front panel.

Each press switches the input between the previous mode and MULTI CH IN.



When MULTI CH IN is selected only the volume level can be set. All of this unit's other features (DIGITAL NR, etc.) cannot be used. Also, all speaker settings and other setup settings have no effect.

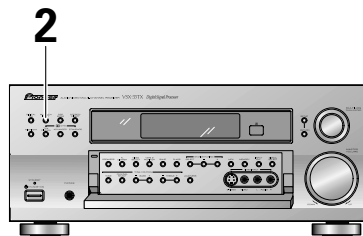

96 kHz 24 bit Performance


This receiver is capable of playing back advanced DVD discs which are recorded in 96 kHz/24 bit format (these are all stereo discs) and any source recorded in 96 kHz and up to 24 bit. The receiver will automatically read the format of the source and play accordingly (of course the SIGNAL SELECT will have to set to AUTO or DIGITAL to read the DVD soundtrack). When the receiver plays a 96 kHz disc and whatever mode you're using (for example "STEREO," "DIRECT") will appear in the display.



- When a 96 kHz/24 bit disc is played back the volume may be louder than that of a normal disc.
- Some DVD players cannot play 96 kHz/24 bit discs. Check the manual of your DVD player to make sure.
- During this playback the player enters the STEREO mode and you can use the controls available in STEREO mode (LOUDNESS, MIDNIGHT, TONE controls, etc., see p.46-47).
- With 96 kHz/24 bit discs you are able to use MULTI CH IN playback and the TAPE 2 MONITOR.
- In 96 kHz/24 bit mode you can't use the STANDARD, ADVANCED THEATER, THX, or DSP modes.

Direct Playback

This mode is for playing back a sound source in its purest form, no tone adjustments or other sound modes can be used.

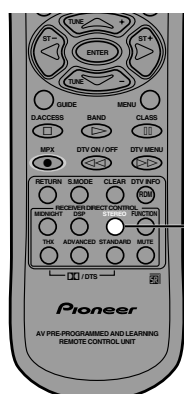


- 1 Use the **STEREO** button to alternate between **STEREO** or **DIRECT** mode (you can also use the **STEREO/DIRECT** button on the front panel).

The **DIRECT** mode will give you the most accurate reproduction of two channel (stereo) sources but won't let you add any effects to the sound.




- None of the tone controls or other sound modes can be used with **DIRECT** playback.
- If the receiver is in a different mode than **STEREO** to start with the first push of the **STEREO** button will put it in **STEREO** mode. After that the button will toggle the receiver between **STEREO** and **DIRECT** mode.
- For more on this button see the explanation of **STEREO** mode on p.43.

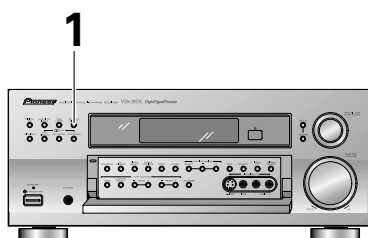

Adjusting the Brightness of the Display

Use the **FL DIMMER** button to adjust the brightness of the fluorescent display (FL=fluorescent display).

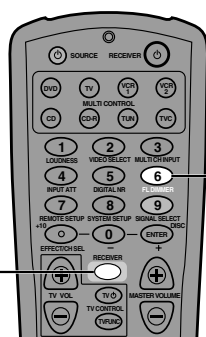

- 1 Press **RECEIVER**.


This switches the remote to the receiver control mode.

- 2 Press the **FL DIMMER** button.

Four levels of brightness ranging from very dim to very bright can be selected. Each press changes the brightness of the display. When rotating through the options, the default brightness can also be selected.




Please note: it is a feature of this unit that the fluorescent display will be brighter for a few seconds after you choose a function (like DVD/LD, CD, etc.) and then get softer. This will still happen when you adjust the brightness but the new setting will be the one the display softens to.

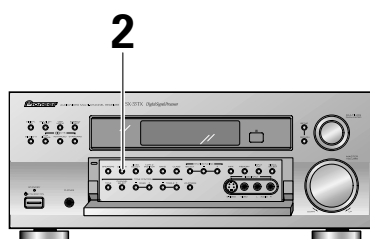

DUAL MONO Setting

The dual mono setting can only be used when listening to Dolby Digital discs that have dual mono software encoded in them. Dual mono software usually is used to put two different soundtracks on one DVD. With this setting you can choose which channel in the dual mono setting you want to listen to. Thus, it is useful for soundtracks that have one language on one channel and a different language on the other. Remember this setting is only applicable if you are using Dolby Digital software with dual mono and want to isolate one of the channels therein. Otherwise, just ignore this function.

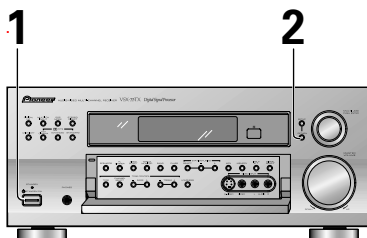

1 Turn the receiver ON.

2 Hold down the RETURN button for 3 or 4 seconds. The receiver will cycle through the three different dual mono settings for as long as you hold the button down.


Take your finger off the button when the mode that you want to use is displayed.

The different settings are: DUAL ch1, where you only hear channel 1; DUAL ch2, where you only hear channel 2; and DUAL ch1/ch2, where you hear both channels, but independently from different speakers.

The display will show dual mono for a while then revert to the sound mode you are in but you will still be listening to dual mono.



DUAL ch1 setting



DUAL ch2 setting



DUAL ch1/ch2 setting



When DUAL MONO is playing with ch 1 selected the L will light. When playing with ch 2 selected the R will light. When playing with ch 1/2 selected the L and R will light.




The default setting is DUAL ch1.

Using the Tuner


Automatic and Manual Tuning

The following steps show you how to tune in FM and AM radio broadcasts using the automatic (search) and manual (step) tuning functions. If you already know the exact frequency of the station you desire, see "Direct Access Tuning" on the following page.

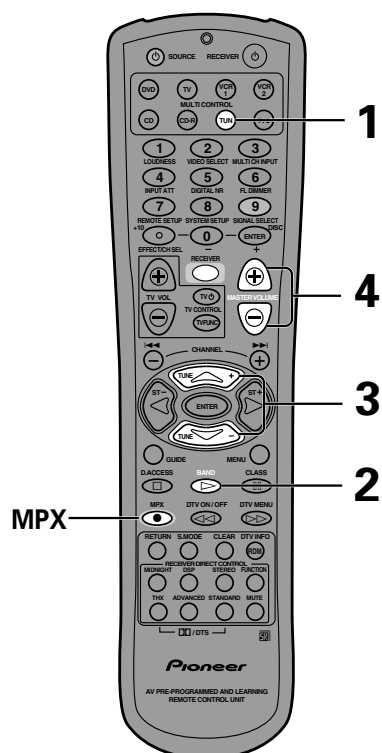

1 Press the TUN button

On the receiver, select "TUNER" with the multi jog.



2 Press BAND button on the remote or the front panel to select the band (FM or AM).

Each press switches the band: FM ↔ AM



3 Tune in the station.

For Automatic Tuning


Press and hold TUNING +/- buttons for about one second, then release.

The tuner starts searching the selected band and stop automatically at the first station it locates. Repeat to locate other stations.

For Manual Tuning

- To change frequencies one step at a time, press TUNING +/- repeatedly.
- To change frequencies quickly, hold down TUNING +/- and release when you reach the frequency you desire.

4 Adjust the MASTER VOLUME buttons on the remote control or the MASTER VOLUME on the front panel.

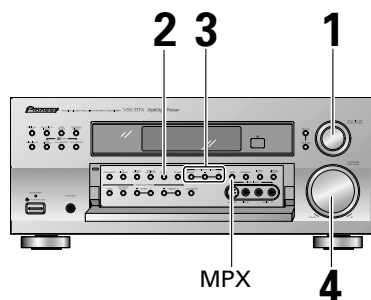


MPX Mode

If the TUNED or STEREO indicators do not light when tuning an FM station, because the station is too far away or the broadcast signal is weak, press MPX on the remote control or front panel to switch to MONO reception. This should improve reception enough for you to enjoy the broadcast.

Direct Access Tuning

The following steps show you how to tune directly to a specific frequency using the remote control.

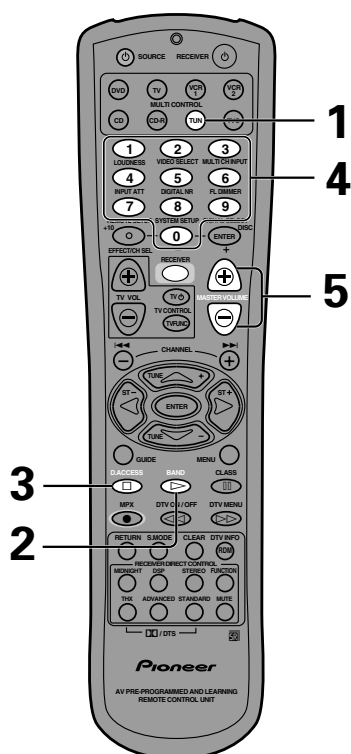

1 Press the TUN button


On the receiver, select "TUNER" with the multi jog.

2 Press the BAND button on the remote or the front panel to select the band (FM or AM).

Each press switches the band : FM ↔ AM

3 Press D. ACCESS button to activate the direct Access tuning mode.



The cursor blinks in the display on the front panel.



4 Use the Number buttons to enter the frequency of the station you want.

Example:

To tune station 106.00 (FM), press:




To cancel before inputting the frequency

Press D. ACCESS button, and enter the frequency again.

5 Adjust the MASTER VOLUME buttons on the remote control or the MASTER VOLUME on the front panel.

Memorizing Frequently Used Stations

The following steps show you how to memorize up to 30 radio stations in 3 classes (each holding 10 channels). When memorizing FM frequencies, the receiver also memorizes the MPX mode (STEREO or MONO).

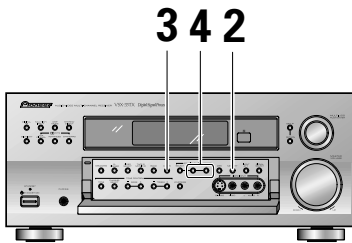

1 Tune in the desired station.


See "Automatic and Manual Tuning" or "Direct Access Tuning" on p.51 and 52.

2 Press the MEMORY button to activate the memory function.



3 Press the CLASS button repeatedly to select a class number.

Each press switches the display:



4 Press the STATION +/- buttons repeatedly to select a channel (0-9) within the respective class.



The station is memorized automatically after 5 seconds.

If you want to escape from MEMORY mode


Press the MEMORY button again.

Repeat steps 1 through 4 to memorize up to 30 stations.

Using the Tuner

Recalling Memorized Stations

Using the remote control

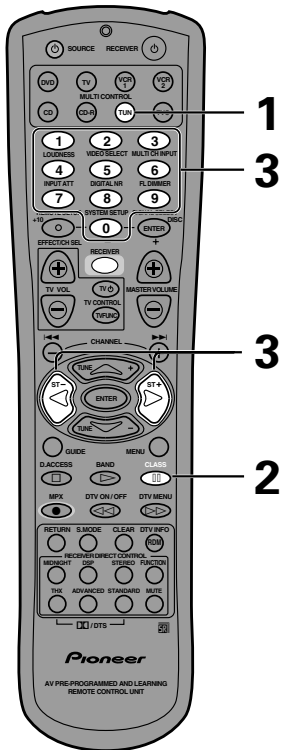


1 Press the TUN button

On the receiver, select "TUNER" with the multi jog.



2 Press the CLASS button repeatedly to select a class number.

Each press switches the display:



3 Use the NUMBER buttons to select the channel you want.

To select channel 7, press **7**.

To select channel 0, press **0**.


For example : If 99.50 MHz (FM) was memorized in class A at channel 7.



To skip through each channel in order

Press STATION -/+ repeatedly.

Using the front panel

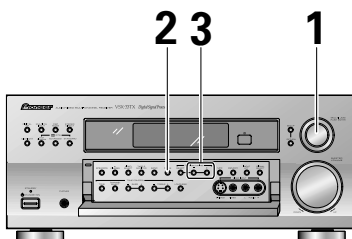

1 Select the TUNER function.

2 Press the CLASS button repeatedly to select a class number.

3 Press the STATION -/+ buttons repeatedly to select the channel you want.

Remote Control of Other Components

Setting Up the Remote Control


In addition to controlling the receiver, the supplied remote control can operate your other components (DVD, MD, VCR, TV, LD, CD, etc.). If your component(s) are listed in the "Preset Code List", simply recall the corresponding preset code.

Recalling Preset Codes

The following steps show you how to recall preset codes for each MULTI CONTROL button. Once the preset code is assigned, pressing the button will automatically set the remote to operate the respective component.



- Refer to "Preset Code List" on pages 73 to 77 for the components and manufacturers available.
- Refer on pages 60 to 64 for detailed explanations on how to operate your other components.

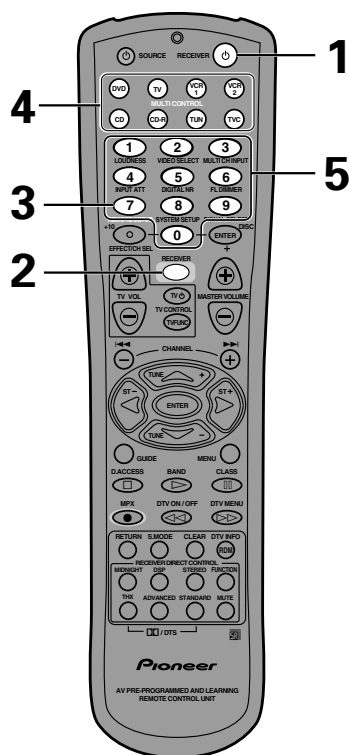

1 Press RECEIVER to turn the power on.

The STANDBY indicator goes out.

2 Press RECEIVER.









This switches the remote to the receiver control mode.

3 Press the REMOTE SETUP button and hold for three seconds to select the preset mode.

The LED will blink twice.

4 Press the MULTI CONTROL button for the component you want to control.

Each button can be set to control one of the following components.

- | | | | |
|---|---|---|---|
|  |  |  | : DVD/LD player or DVD Recorder, VCR |
|  |  | | : TV, Satellite tuner or Cable TV tuner |
|  |  | | : CD player, CD-R, TAPE, MD, DAT |
|  | | | : FM/ AM tuner |


5 Use the number buttons to enter the 4 digit setup code.

The LED will blink after each digit is input and will blink twice to confirm a valid code has been input.

If the LED shows one long blink it means an invalid code has been input. Check the preset code list and try again. If you are not able to input a preset code you can refer to page 56 to teach the remote control individual commands.

Repeat steps 3 through 5 to assign preset codes for as many components as necessary.

Remote Control of Other Components

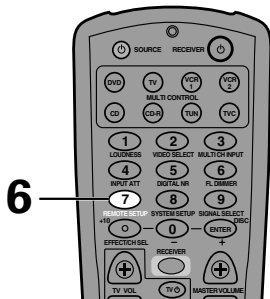

6 Press REMOTE SETUP to exit the preset mode.


The remote control returns to the previous operation mode. It will also return to the previous mode after ten seconds of inactivity.



- The Receiver button cannot be preset.
- You can only input a code for the component type written on each MULTI CONTROL button. See page 58 for information on how to program a different type of component than specified on the button.
- If you recall a preset code for the tuner (TUN MULTI CONTROL), you will not be able to control the built-in tuner of this receiver using the remote. To reset the remote to the built-in tuner, input the preset code 0080.

Learning mode: Programming signals from other remote controls

If preset codes are not available for your component(s), or the available preset codes do not operate correctly, you can use this function to program in signals from the remote control(s) of your other component(s). This operation can also be used after recalling a preset code to program additional operations not covered in the preset codes.

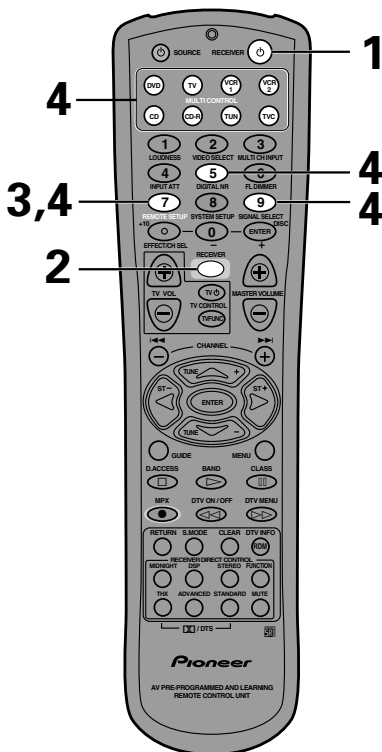

1 Press RECEIVER to turn the power on.

The STANDBY indicator goes out.

2 Press RECEIVER.

This switches the remote to the receiver control mode.

3 Press the REMOTE SETUP button.

The LED will blink twice.

4 Press the MULTI CONTROL button for the component you want to control and then press 9, 7, then 5 to select the LEARNING setup mode. The remote is ready to learn new commands from other remote controls.

The LED flashes rapidly.


To cancel LEARNING setup mode

Press SETUP button.


After ten seconds if no commands are entered the remote will revert to its previous mode.

5 Press the button to be programmed (for example the ► [play] button).

6 Point the remote controls at each other, about 1-2 inches apart, and press the button on the other remote control for the operation you want to program (only the buttons highlighted in the diagram on the left can be programmed).

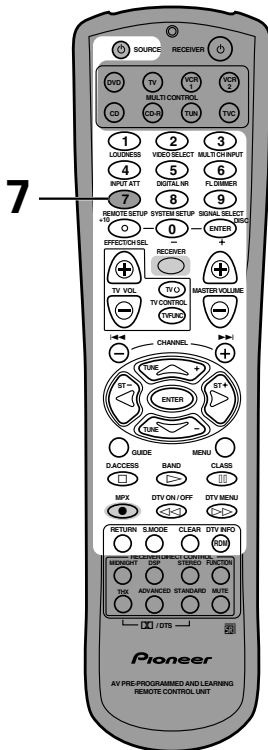

- ① Point the remote controls toward each other.
- ② Press the button on the other remote control corresponding to the operation you wish to program. The LED on this receiver's remote will go out and then blink twice when the operation is learned. Press the teaching key repeatedly, varying the distances between the remotes, until you see this receiver's remote blink twice, indicating the operation has been learned.



To program additional operations for the current component
Repeat steps 3 and 4.

To program operations for another component
Repeat steps 2 through 4.

7 Press REMOTE SETUP to exit the LEARNING setup mode


After ten seconds of inactivity the remote control will automatically leave the LEARNING mode and revert to its previous mode.



Some commands from other remote controls cannot be learned, but in most cases the remotes just need to be moved closer together a farther apart.

Programming a Different Component into a MULTI CONTROL button

This feature changes a selected Multi Control button to a different component. For example, if you don't have a second TV, but you do have a second DVD, you could reassign the TV Multi Control to DVD so that DVD control buttons are available when you select TV.

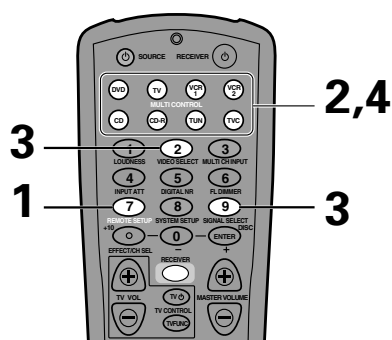

1 Press REMOTE SETUP and hold for three seconds.

The LED on the remote will blink twice.

2 Press the MULTI CONTROL button which you want to change.


For the example above, press TV.

3 Press 9, 9, then 2.

4 Press the MULTI CONTROL button which you want to be duplicated.

In the above example, press TV. The LED will blink twice. The TV button will now make the remote function as a DVD controller. Remember to assign the correct preset code for your equipment (the default is for Pioneer equipment).

Checking Preset Codes

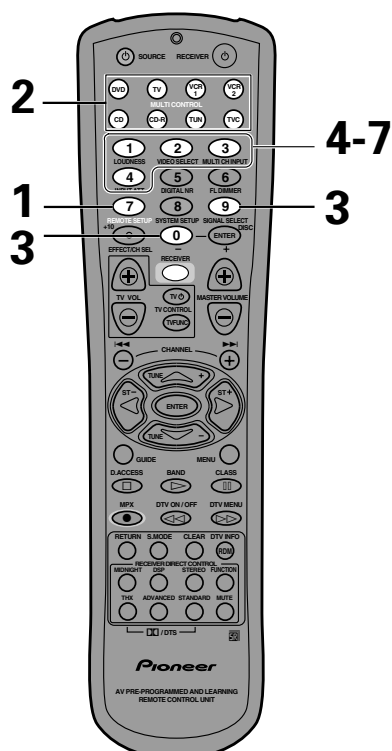

To check which preset code is associated with a Multi Control button:

1 Press REMOTE SETUP and hold for three seconds.

The LED on the remote will blink twice.

2 Press the MULTI CONTROL button you want to check the preset code for.

3 Press 9, 9, then 0.

Each preset code consists of four digits, for example 1329. Each digit will be represented by a series of blinks on the remote's LED—3 blinks to represent the digit "3", etc.

4 Press 1.

The blinking LED indicates the left-most digit of the preset code ("1" in the example above).

5 Press 2.

The blinking LED indicates the next digit of the preset code ("3" in the example above).


6 Press 3.

The blinking LED indicates the next digit of the preset code ("2" in the example above).

7 Press 4.

The blinking LED indicates the right-most digit of the preset code ("9" in the example above).

Clearing One of the Remote Control Settings

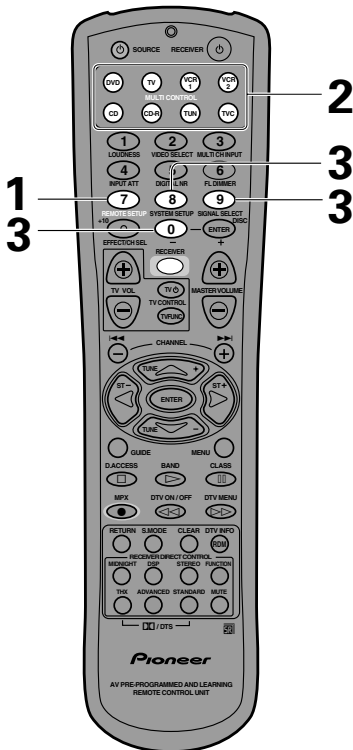

This method clears one of the buttons you have programmed and restores the factory installed preset to that button.

1 Press REMOTE SETUP and hold for three seconds.

The LED will blink twice.

2 Press the MULTI CONTROL button relating to the button to be cleared.


3 Press 9, 8, then 0.

4 Press the button to be cleared.

5 Press the button to be cleared once more.

The LED blinks twice to indicate the button has been cleared.

Clearing All the Remote Control Settings

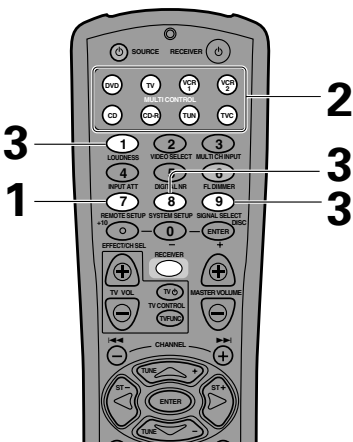

Clears all presents, all learned functions and restores the factory presets.

1 Press REMOTE SETUP and hold for three seconds.

The LED will blink twice.

2 Press the MULTI CONTROL button .

3 Press 9, 8, then 1.


The LED blinks in sets of two twice (thus four times) to indicate the button has been cleared.

CD/CD-R/MD/VCR/LD Player Controls



This remote control can control these components after entering the proper codes or teaching the receiver the commands (see p.55-59).

Use MULTI CONTROL buttons to put the remote control in the stated mode.

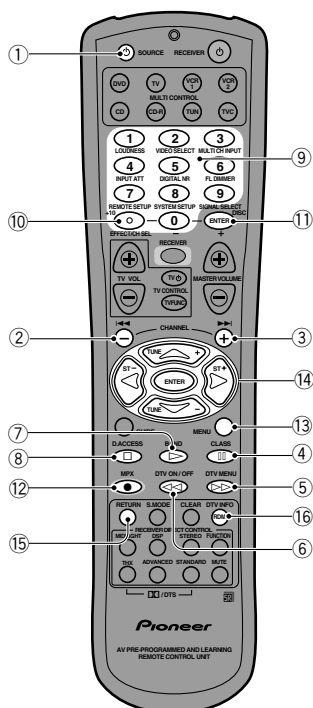

① **SOURCE**

Press to switch the CD, CD-R or MD player between **STANDBY** and **ON**.

② **⏮**

Press to return to the start of the current track. Repeated presses skips to the start of previous tracks. When controlling a VCR, use this button to go back channels (channel -).

③ **⏭**

Press to advance to the start of the next track. Repeated presses skips to the start of following tracks. When controlling a VCR, use this button to go forward channels (channel +).

④ **⏸**

Press to pause playback.

⑤ **⏩**

Hold down for fast forward playback.

⑥ **⏪**

Hold down for fast reverse playback.

⑦ **▶**

Press to start playback.

⑧ **■**

Press to stop playback (on some models, pressing this when the disc is already stopped will cause the disc tray to open).

⑨ **Number Buttons**

Used to directly access tracks on a program source.

⑩ **+10 Button**

Use this button to select tracks higher than 10. Press this button and the remaining number to get the track (+10 Button + 3= track 13).

⑪ **ENTER (DISC) Button**

For a multiple CD player use this button to choose the disc. On an MD player use it ejects the disc, on a VCR it switches between the VCR tuner and the TV tuner. On an LD it changes sides of the LD.

⑫ **● MPX Button**

Use to start recording. To prevent accidental recording, this button must be pressed twice to take effect (the second press must be within 10 seconds of the first). For a LD player use this button to change the LD between sides A and B.

⑬ **MENU**

Press to advance to the start of the next track. Repeated presses skips to the start of following tracks.

⑭ **◀▶ ▲▼ & ENTER buttons**

These buttons can be used play or stop (etc.) many components and also to navigate DVD menus/options. Specifically:

◀ to rewind or reverse program source

▶ to fast forward program source

▲ to pause program source

▼ to stop program source

ENTER to play program source

⑮ **RETURN Button**

Use to program the playback order of tracks on a disc.

⑯ **DTV INFO (RDM) Button**

For a CD player use this button to choose random mode.

For a LD player use this button to change the LD between analog and digital.


For a VCR use this button to switch the VCR between its tuner (for watching videos) and the TV.

Cassette Deck Controls



This remote control can control these components after entering the proper codes or teaching the receiver the commands (see p.55-59).

Use MULTI CONTROL buttons to put the remote control in the stated mode.

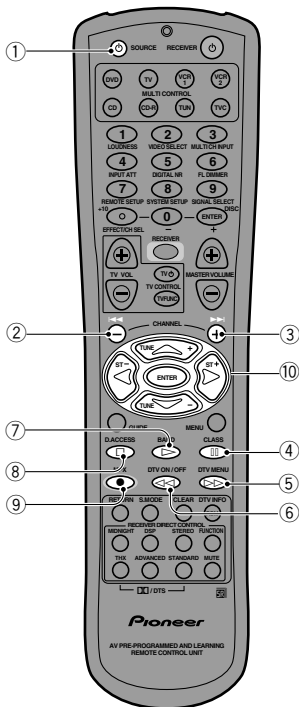

① **SOURCE**

Press to switch the cassette deck between **STANDBY** and **ON** (not possible on all models).

② **REVERSE**

Use to play the reverse side of the tape on a reversible deck.

③ **FAST FORWARD**

Use to play the forward side of the tape on a reversible deck.

④ **PAUSE**

Press to pause playback or recording.

⑤ **FAST FORWARD**

Press to fast forward the tape. Pressing during playback starts forward search.

⑥ **REWIND**

Press to rewind the tape. Pressing during playback starts reverse search.

⑦ **PLAY**

Press to start playback.

⑧ **STOP**

Press to stop playback.

⑨ **MPX Button**

Use to start recording. To prevent accidental recording, this button must be pressed twice to take effect (the second press must be within 10 seconds of the first).

⑩ **THESE CONTROLS CAN BE USED FOR DECK ONE OF A DUAL TAPE DECK**

▲ : Press to pause the tape.

▼ : Press to stop the tape.

ENTER : Press to start playback

◀ : Press to rewind the tape.


▶ : Press fast forward the tape

DVD/DVR Player Controls



This remote control can control this component after entering the proper codes or teaching the receiver the commands (see p.55-59).

Use MULTI CONTROL buttons to put the remote control in the stated mode.

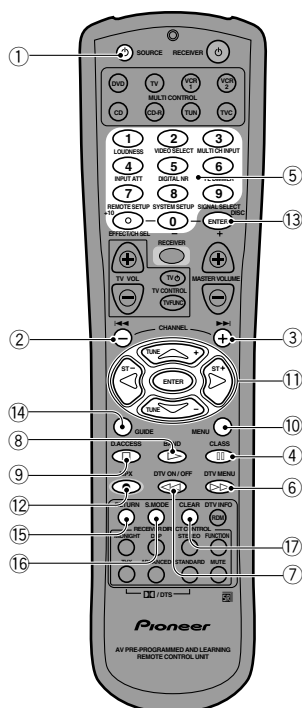

① **SOURCE**

Press to switch the DVD/LD player between STANDBY and ON.

② **⏮**

Press to return to the start of the current chapter (track). Repeated presses skips to the start of previous tracks. When controlling a DVR, use this button to go back channels (channel +).

③ **⏭**

Press to advance to the start of the next chapter (track). Repeated presses skips to the start of following tracks. When controlling a DVR, use this button to go forward channels (channel +).

④ **⏸**

Press to pause playback (on some models this will freeze-frame the picture).

⑤ **Number buttons**

Use the number buttons to navigate the on-screen display.

The **ENTER** button is used as a **SETUP** button for the DVD players internal menus. The +10 button is used to select tracks higher than 10.

⑥ **⏮⏮**

Hold down for fast forward playback.

⑦ **⏮⏮**

Hold down for fast reverse playback.

⑧ **▶**

Press to start playback (on some models, pressing this when the disc tray is empty will cause the disc tray to open).

⑨ **■**

Press to stop playback (on some models, pressing this when the disc is already stopped will cause the disc tray to open).

⑩ **MENU**

Displays menus concerning the current DVD or DVR you are using.

⑪ **USE THESE BUTTONS TO NAVIGATE DVD MENUS**

▲ : up

▼ : down

ENTER: enter the command selected

◀ : left

▶ : right

⑫ **● MPX Button**

Use to start recording. To prevent accidental recording, this button must be pressed twice to take effect (the second press must be within 10 seconds of the first).

⑬ **ENTER**

Use to display the lead trailer on a DVD.

⑭ **GUIDE**

Press to call up the menu programmed on the DVD.

⑮ **RETURN**

Press to return to the beginning of the current chapter (track). Press repeatedly to return to the beginning of previous chapters (tracks)..

⑯ **S.MODE**

Use to select the screen mode.

⑰ **CLEAR**


This button clears the on-screen display (OSD) for the DVD menu.

DTV Controls



This remote control can control these components after entering the proper codes or teaching the receiver the commands (see p.55-59).

Use MULTI CONTROL buttons to put the remote control in the stated mode.

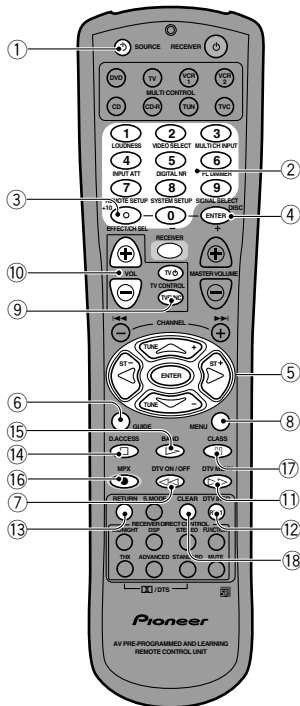

① SOURCE

Press to switch the TV or CATV between **STANDBY** and **ON**.

② Number buttons

Use to select a specific TV channel.

③ ○ (+10) button

Use to add a decimal point when selecting a specific TV channel.

④ ENTER (DISC) button

Use to enter a channel.

⑤ ▲/▼/◀/▶/ENTER

Press to select or adjust and navigate items on the menu screen.

ENTER : Use to bring up the DTV menus.

⑥ GUIDE

Use as the GUIDE button for navigating .

⑦ DTV ON/OFF

Press to switch the DTV on or off.

⑧ MENU

Use to select different menus from the DTV functions.

THESE FOUR BUTTONS ARE DEDICATED TV CONTROL BUTTONS FOR ANY TYPE OF TV SETUP.

⑨ TV FUNC. (TV only)

Press to switch the TV input (not possible with some models).

⑩ TV VOL +/-

Use to adjust the TV volume.

⑪ DTV MENU

Use to select different menus from the DTV functions.

⑫ DTV INFO

Use to get INFO on the DTV program.

⑬ RETURN

Use to return channels.

⑭ ■

Use to choose the BLUE commands on a DTV menu.

⑮ ►

Use to choose the GREEN commands on a DTV menu.

⑯ ●

Use to choose the YELLOW commands on a DTV menu.

⑰ II

Use to choose the RED commands on a DTV menu.

⑱ CLEAR


Press to clear the DTV menu.

Cable TV/Satellite TV/TV Controls



This remote control can control these components after entering the proper codes or teaching the receiver the commands (see p.55-59).

Use MULTI CONTROL buttons to put the remote control in the stated mode.

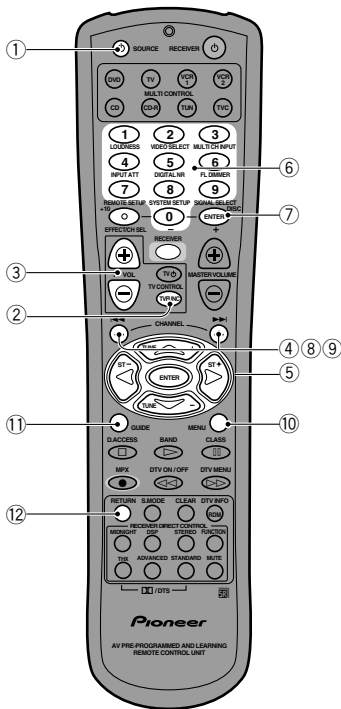

① **SOURCE**

Press to switch the TV or CATV between **STANDBY** and **ON**.

② **TV FUNC (TV only)**

Press to switch the TV input. (Not possible with all models. If it doesn't work with the preset code, use the learning feature.)

③ **TV VOL +/-**

Use to adjust the TV volume.

④ **CHANNEL +/-**

Use to select channels.

⑤ **▲/▼/◀/▶/ENTER**

Press to select or adjust and navigate items on the menu screen.

⑥ **Number buttons**

Use to select a specific TV channel.

⑦ **ENTER (DISC) button**

Use to enter a channel.

⑧ **◀◀**

Use to move to lower numbered channels

⑨ **▶▶**

Use to move to higher numbered channels

⑩ **MENU**

Use to select the menu screen.

⑪ **GUIDE**

Use to bring up the GUIDE on a satellite TV.


⑫ **RETURN**

Use to return channels.

Using Other Functions

Function Rename

Use the FUNCTION RENAME capability to rename the functions, like DVD/LD, CD, etc., in the display. You might want to do this in order to personalize the display on the receiver or if your components are different than the names preset in the receiver (for example if you connect a video camera to the VIDEO jacks on the front of the receiver). Follow the display on the receiver to carry out this task.

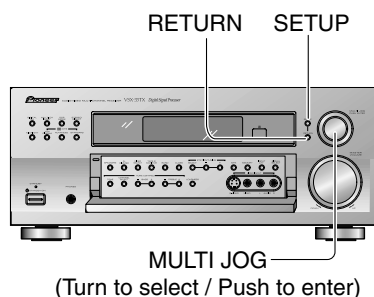

- 1 Press the **SETUP** button (**SYSTEM SETUP** button on the remote control).

System Set ---

- 2 Use the **MULTI JOG** dial (**▲/▼** buttons on the remote control) to select **FUNCTION RENAME**.

Rename ---

- 3 Press the **MULTI JOG** dial (**ENTER** on the remote control).


- 4 Use the **MULTI JOG** dial (**▲/▼** buttons) to select the function that you want to rename.

VIDEO ---

- 5 Press the **MULTI JOG** dial (press **ENTER**).

- 6 Use the **MULTI JOG** dial (**▲/▼** buttons) to choose the first character.


The **MULTI JOG** dial scrolls through the letters, numbers and symbols you can input.

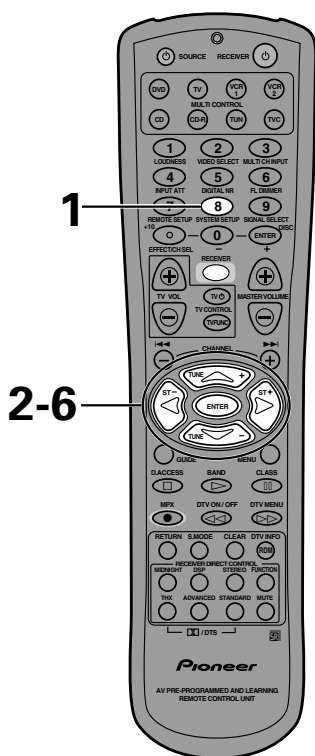

Here are all the possible characters you can input:

ABCDEFGHIJKLMNOPQRSTUVWXYZ
abcdefghijklmnopqrstuvwxyz
0123456789
!"#\$%&'()*+,-./:;<=>?_

Using Other Functions

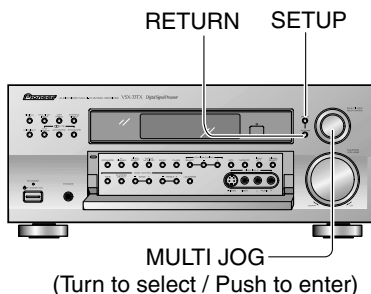

7 Press the MULTI JOG dial (press ENTER).

That character appears on the screen and the cursor automatically moves to the next space.



After ten characters have been entered, the character input mode is exited.

8 Repeat steps 4 to 7, spell out the function name you want to rename.



- You can include spaces, hyphens, most punctuation marks, other symbols and capital or lowercase letters in the name.
- When you want to change a function name, input the new function name using the same procedure.
- If you make a mistake you can use the RETURN button (◀ button) to go back a step.
- You can press the SETUP button (SYSTEM SETUP button on the remote control) to exit the process altogether. If you've input characters however, these will be entered.

9 Use the MULTI JOG dial (▲/▼ buttons) to select "Rename End".




10 Press the MULTI JOG dial (press ENTER). "Setup End" will appear in the display.



11 Press the MULTI JOG dial again (press ENTER).

You will return to the previous mode the receiver was in.

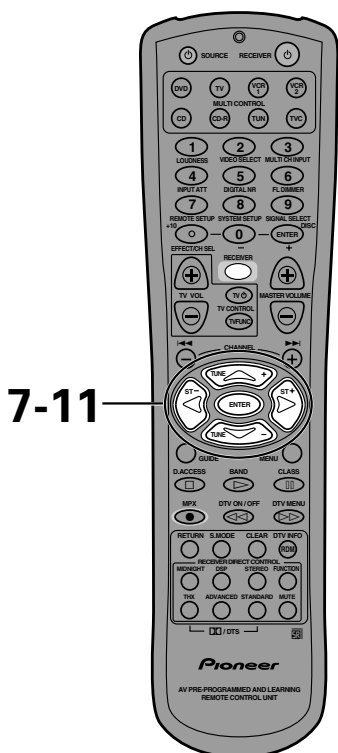


Recording from Audio Components

The following explanations show you how to record an analog or digital audio signal. Note that your analog components cannot record a player that is only connected digitally (and vice-versa). If you want to record from a digital component to an analog one (for example, a tape deck), or vice-versa, the digital component it must be connected via analog jacks and you need to set the SIGNAL SELECT switch to ANALOG. To make exact digital copies (of digital sources like CDs) both the source component and the recorder must be connected with digital connections. See p.12 for more on analog audio connections and p.13 for digital audio connections.



The receiver's volume, channel level, balance, TONE, DIGITAL NR, MIDNIGHT, LOUDNESS and surround effects have no effect on the recorded signal and the MULTI CHANNEL IN cannot be recorded. In some cases, digital recordings have copy guard protections and making a digital copy is not possible. In this case you can only copy them in an analog manner.

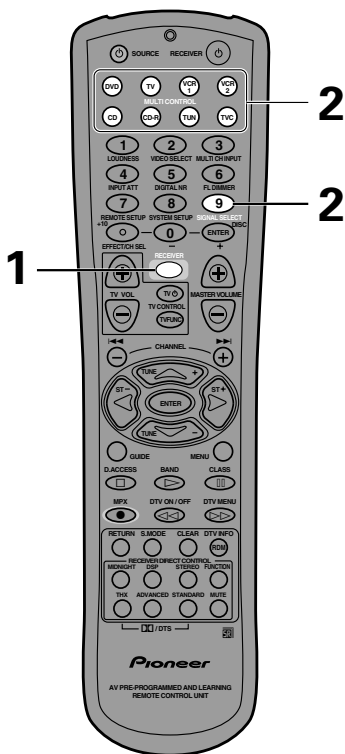

1 Press RECEIVER.

This switches the remote to the receiver control mode.

2 Select the source component. Set SIGNAL SELECT according to the source component's signal (ANALOG or DIGITAL).

Press the SIGNAL SELECT button on the remote control (or use the button on the front panel) and choose ANALOG.

3 Start recording with a recorder.


4 Playback the source to be recorded.

Record monitor (TAPE 2 MONITOR)

If you connect a cassette deck with a record monitor function to the TAPE 2 MONITOR jacks, you can listen to the sound of an analog recording as it is being recorded.

Press TAPE 2 MONITOR to switch between the sound of the recording (TAPE 2 indicator on) and the sound of the source component (TAPE 2 indicator off).

TAPE 2 MONITOR

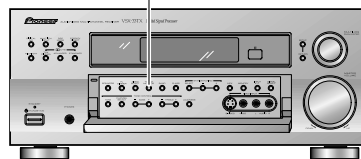


Recording from Digital Audio Components

The following explanations show you how to record digital audio. Using this method you can make exact digital copies of sources like CDs or MDs. The only drawback is that you cannot switch between various recorders at the touch of a button like you can with analog recordings (see the previous page). If you look on the back of the receiver you will find one digital out jack which are marked PCM/DIG/DTS. If you connect this to the optical input on a digital recorder (currently these include MD, DAT, and CD-R), you can make direct digital recordings with this unit. Of course, the digital components you want to record, all need to be connected to the receiver with digital inputs as well. See p.13 if you have not made these connections.



The receiver's volume, channel level, tone (BASS, TREBLE, and LOUDNESS), and surround effects have no effect on the recorded signal.

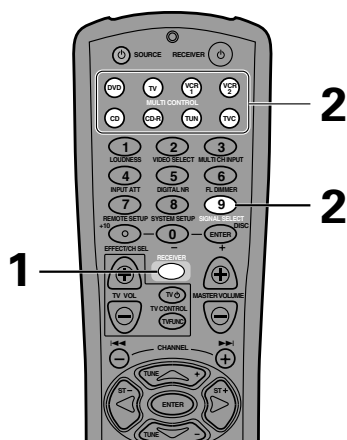

1 Press RECEIVER.

This switches the remote to the receiver control mode.

2 Prepare the source you want to record and put the receiver in that function. Set SIGNAL SELECT to DIGITAL.

Press the SIGNAL SELECT button on the remote control (or use the button on the front panel) and choose DIGITAL.

3 Start recording with a CD-R or MD (etc.).

4 Play back the source to be recorded.




In some cases, digital recordings have copy guard protections on them and making a digital copy is not possible. It is still possible to copy these digital sources if you have hooked the components up with analog connections (in this case, the copies will not be exact digital reproductions). Refer to the previous page in this case.

Recording from Video Components

The following operations show you how to record audio and video to the video tape recorder connected to the VCR 1, VCR 2 or DVR jacks. Note that all signals coming out of these jacks will be analog and it is not possible to record Dolby Digital/DTS soundtracks.



The receiver's volume, channel level, balance, TONE, DIGITAL NR, MIDNIGHT, LOUDNESS and surround effects have no effect on the recorded signal.

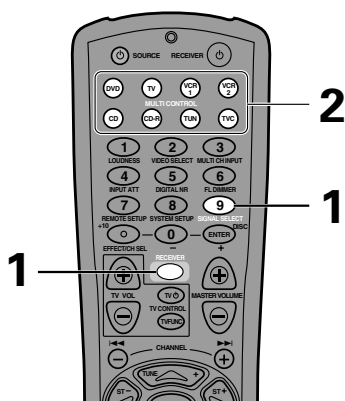

1 First, decide the component you'd like to record and put the receiver in that function. Set the SIGNAL SELECT to analog.

Press the SIGNAL SELECT button on the remote control (or use the button on the front panel) and choose analog. Recording DIGITAL signals is not possible.


2 Start recording with VCR 1 or VCR 2 (etc.).

3 Playback the source to be recorded.

Direct Function

The direct function is a useful feature which allows you keep the receiver in one function (for example, CD) while putting the remote control in a different function. This could let you, for example, use the remote control to set up and listen to a CD on the receiver and then use the remote control to rewind a tape in your VCR while you continue to listen to your CD player.

When the DIRECT function is ON any MULTI CONTROL button you press will change the function of both the receiver and the remote control. When you turn the DIRECT function OFF, you can operate the remote control without affecting the receiver. Thus you could switch the remote control the VCR and operate that component while the receiver plays a different component.

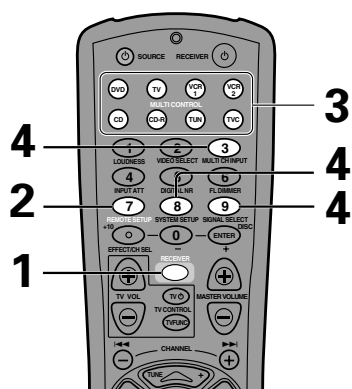


To set a MULTI-CONTROL button to DIRECT OFF:

- 1 Press RECEIVER.**
This switches the remote to the receiver control mode.
- 2 Press REMOTE SETUP and hold for three seconds.**
The LED will blink twice.
- 3 Press MULTI CONTROL button which you want to set to OFF.**
- 4 Press 9, 8, then 3.**
The LED blinks twice to indicate the button has been cleared.

To set a MULTI-CONTROL button to DIRECT ON:



- 1 Press RECEIVER.**
This switches the remote to the receiver control mode.
- 2 Press REMOTE SETUP and hold for three seconds.**
The LED will blink twice.
- 3 Press MULTI CONTROL button which you want to set to ON.**
- 4 Press 9, 8, then 2.**
The LED blinks twice to indicate the button has been cleared.

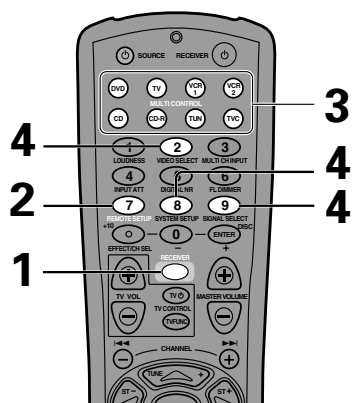

TV CONT doesn't have this feature and thus can't use the DIRECT FUNCTION.


Video Select

This function allows you to listen to one sound source while you watch a different video source on your TV. The sound source is set in the normal fashion as is explained on p.42. You then alter the video input with the VIDEO SELECT button.

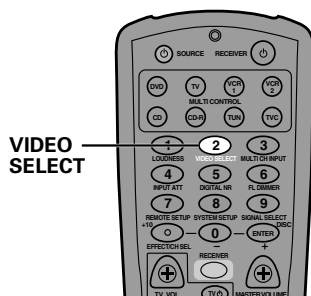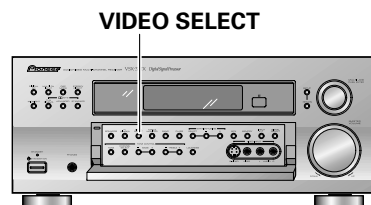

Press the VIDEO SELECT button on the front panel to cycle through the different possible video inputs.

The first press shows the video input you are currently using. After that pressing VIDEO SELECT cycles through the possibilities in the following order:



The OFF setting means that no video signal is output.

After choosing a video input the display on the receiver will show that input for about 5 seconds and then revert to showing the sound mode the receiver is in.


The VIDEO SELECT remains set to the input you chose until you change the audio input.

If you change audio functions the receiver will reset itself to make the video and audio inputs correspond.

Also, if you switch the power of the receiver OFF when you turn it back on the video and audio inputs will reset so that they correspond.

Changing the Display

You can change the display on the front panel between the function and the sound mode by pressing the MULTI JOG dial (see #16 on p.23).

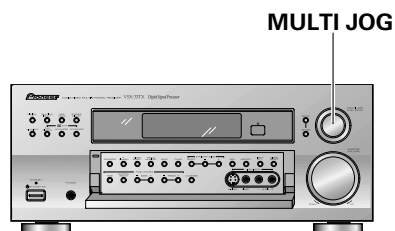

Press the MULTI JOG dial on the front panel to move between the function (DVD/LD, CD, etc.) display and the sound mode display.

The display will remain on the setting you choose. If you turn the MULTI JOG dial to select a new function the function is displayed.


Techno Tidbits & Problem-solving

Dolby Digital



Dolby Digital is a compression format which records the sound of 6 channels of the theater surround system (Dolby Digital) on the movie film digital track. Of the 6 channels, the sub woofer channel is intended for bass only, and because the frequency range is smaller than the main channel, it is expressed as 5.1 channel.

Dolby Digital is the name of the Dolby surround multi-channel digital system that was developed after the Dolby Surround System and Dolby Pro Logic Surround System.

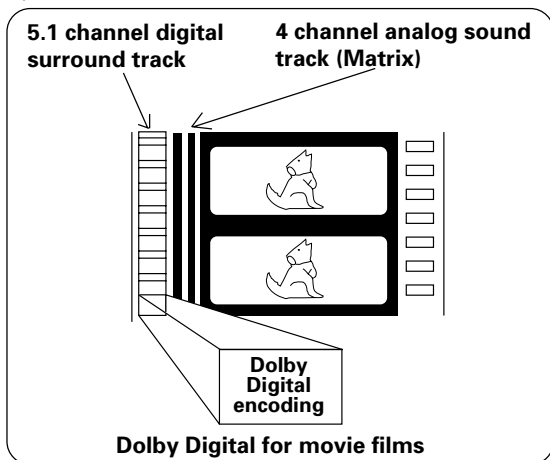


The number of movies made using Dolby Digital since 1992 has exceeded 300 and continues to increase. For compact disc players and laser disc digital sounds, 16 bits are used to sample the original analog audio waveform and sampling is carried out 44,100 times every second. However because an enormous amount of recording signal data is required for the multi channel system with this method, Dolby Digital is used to compress the data.

In reproducing audio signals, the smaller the bit number used, the lower the sound quality. With Dolby Digital, drop in auditory sound quality is prevented by using masking technology and digital filtering technology based on the human auditory characteristics.

Laser disc format

Laser discs are now available on the market in large numbers. This means that the recording of different format audio signals on the laser disc raises the important question of compatibility with existing laser discs. Dolby Digital tracks on laser discs record signals using the space of one analog audio channel so it will maintain compatibility with existing discs and players.

As shown in the following figure, the digital audio sounds of Dolby Digital discs can be played back as currently done. Analog sounds are played back by using the other channel without the Dolby Digital signals for monaural audio signals.

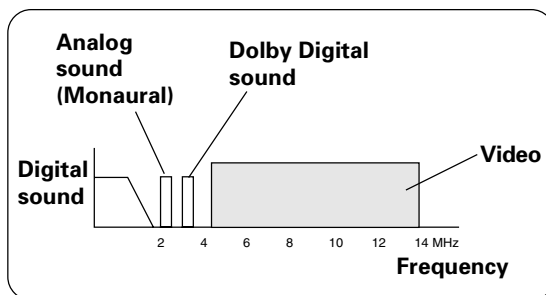

DTS



DTS has been adopted as a sound recording format in the latest movie theaters since the release of "JURASSIC PARK" in 1993, and has a good reputation for high quality sound and dynamic surround effects.

In this system, 6 channels of digital sound are recorded on CD-ROM, rather than on the film. DTS adopts a simultaneous playback format. With a low rate of compression of sound signals and a high rate of transmittance, a higher sound quality format is produced. Also, unlike the process of recording digital sounds on film directly, the only components required are a CD-ROM player as might be used with a personal computer and a DTS processor, and therefore less investment is required than with other formats. For this reason, the format is being introduced in more and more movie theaters, and is being adopted in home movie software (DVD, LD) and music software (5.1 channel CD).

THX



THX is a Lucasfilm, Ltd. program dedicated to maximum accuracy in movie presentation. Movie sound tracks are recorded in large movie dubbing stages using movie theater equipment. For a sound track to be presented accurately in your home, special technologies are required. In your home the room is much smaller and has a bright sound, the speakers are very different and there are only six of them, plus, you sit much closer to each one of those speakers. Because of these differences we often miss the power and emotion that thrills us in a good movie. Now Pioneer and THX have teamed up to bring the full glory of accurate cinema sound to the comfort and convenience of your home.

Re-Equalization™ : In a theater the room is very large and dead sounding, you sit a long way back from the speakers and the speakers themselves are very specialized. Because a sound track recorded in this dead sounding space when it is played at home it sounds overbright. THX Re-Equalization adjusts for this difference in a very precise way.

Adaptive Decorrelation™ : When a sound track sends mono sound to the surround speakers it often seems to be coming from one side instead of from all around you as it would in a theater. Adaptive Decorrelation helps to correct this inaccuracy.

Timbre Matching™ : When recording a sound track it is very important that the surround sounds move smoothly and seamlessly around the theater. It is very distracting when sounds seem to jump from speaker to speaker. Timbre Matching helps to smooth the movement of the surround sounds even though you are using only two speakers.

Bass Peak Level Manager™ : Some Dolby Digital sound tracks can produce bass peaks that are undesirable in a home theater environment. The Bass Peak Level Manager allows you to set the maximum peak levels appropriate to your system. (Set this function according to the **Bass Level** instructions on page 37.)

Loudspeaker Position Time Synchronization™ : This feature allows you to adjust for the difference in the distance from each individual loudspeaker to the listening position. Doing this ensures that all the speakers operate in precise synchronization improving the seamless nature of the soundfield. (Set this function according to the **Channel Delay** instructions on p.33.)

Preset Code List

Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code
DVD	Denon	0490	TV	Alaron	0179	TV	Emerson	0019,0038,0039
	GE	0522		Allegro	0720,0774			0154,0177,0178
	Harman/Kardon	0582		Ambassador	0177			0179,0180,0236
	JVC	0558,0623		Ameroca Action	0180			0282,0463,0623
	Kenwood	0534		Ampro	0751			0624
	Magnavox	0503		Amstrad	0412		Fiderity	0412,0512
	Marantz	0539		Anam National	0161,0250,0425		Fisher	0154
	Mitsubishi	0521		Anam	0004,0009,0068		Fortress	0093
	Onkyo	0503,0627			0161,0180,0250		Fujitsu	0179
	Optimus	0571			0425		Futuretech	0180
	Panasonic	0490,0632		Audiovox	0092,0180,0451		Funai	0171,0179,0180
	Philips	0503,0539			0623			0264
	Proscan	0522		Baur	0010,0512		GE	0021,0047,0051
	RCA	0522		Baysonic	0180			0093,0178,0282
	Samsung	0573		Belcor	0019			0451,1147,1347
	Sharp	0630		Bell & Howell	0016,0154		Gibraltar	0017,0019,0030
	Sony	0533		Beon	0418		GoldStar	0001,0002,0019
	Technics	0490		Bradford	0180			0030,0037,0039
	Theta Digital	0571		Brinkmann	0418			0056,0178
	Toshiba	0503		Brackwood	0019		Goodmans	0035
	Yamaha	0490,0545		Broksonic	0236,0463		Gradiente	0053,0056,0170
	Zenith	0503,0591		CCE	0037		Granada	0108,0339
	Pioneer	0525,0571,0632		CGE	0418		Grundig	0037
		0631(DVD-RW)		CXC	0180		Grunpy	0179,0180
LD	Akai	0598		Candle	0030,0056		Hallmark	0178
	Amoisonic	0475		Carnivale	0030		Harley Davidson	0179
	BBK	0624		Carver	0054,0170		Harman/Kardon	0054
	Denon	0059		Celebrity	0000		Harvard	0068,0180
	Disco Vision	0023		Cineral	0092,0451		Harwood	0412
	Funai	0584		Citizen	0030,0039,0056		HCM	0412,0418
	Hitachi	0023			0060,0092		Hitachi	0016,0038,0056
	Hong Deng	0542		Concerto	0056			0145
	Idall	0595		Contec	0180		Imperial	0418
	Kebao	0581		Craig	0161,0180		Infinity	0054
	Mitsubishi	0059		Crosley	0054		Innova	0037
	NAD	0059		Crown	0039,0180,0339		Interfunk	0512
	Optimus	0059			0418		Inteq	0017
	Panasonic	0496		Curtis Mathes	0016,0030,0039		IR	0010,0035,0108
	Philips	0475			0047,0051,0054			0512
	Rowa	0541			0056,0060,0093		ITT	0339
	SMC	0596			0145,0154,1166		JBL	0054
	Sega	0023			0451,0466,1147		JCB	0000
	Sharp	0597			1347		JVC	0036,0053,0069
	Shinco	0540		Daewoo	0019,0039,0066			0160,0418
	Sony	0193,0201,0583			0092,0154,0451		KEC	0180
		0589			0623,0624		KTV	0030,0039,0180
	Super	0581		Dansai	0035		Kenwood	0019,0030
	Toshiba	0599		Daytron	0019		Kyoshu	0412
	Pioneer	0023,0059,0463		Denon	0145		LG	0056
		0572		Dumont	0017,0019		Loewe	0512
TV	AOC	0019,0030		Dwin	0720,0774		LXI	0047,0054,0154
	Admiral	0093,0463		ECE	0037			0156,0178
	Aiko	0092		Electroband	0000		Logik	0016
	Akai	0030,0035		Envision	0030		Luxman	0056
	Akura	0412		Etron	0009,0646		M Electronic	0512

Techno Tidbits & Problem-solving

Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code
TV	Matsui	0035	TV	RCA	0019,0038,0047	TV	Teknika	0016,0019,0039
	MGA	0019,0030,0150			0051,0090,0093			0054,0056,0060
		0178			1047,1147,1247			0092,0150,0179
	MTC	0019,0030,0056			1347,1447			0180
		0060,0512		Radio Shack	0019,0030,0039		Thorn	0035,0512
	Magnavox	0030,0036,0054			0047,0056,0154		Toshiba	0035,0036,0060
		0179			0165,0178,0180			0154,0156
	Majestic	0016		Realistic	0019,0030,0039		Totevision	0039
	Manesth	0035			0056,0154,0165		Uher	0418
	Marantz	0030,0037,0054			0178,0180		Universum	0010,0418,0512
	Matsushita	0250		Royal Lux	0412		Vector Research	0030
	Megatron	0145,0178		Roadstar	0418		Victor	0036,0053,0160
	Minutz	0021		Runco	0017,0030,0603			0250
	Memorex	0016,0056,0150		SKY	0037		Vidikron	0054
		0154,0178,0250		SSS	0019,0180		Vidtech	0019,0036,0178
		0463		Samsung	0019,0030,0037		Voxson	0418
	Minoka	0412			0056,0060,0090			0418
	Midland	0017,0039,0047			0178		Waltham	0418
		0051		Sampo	0030,0039		Wards	0016,0019,0021
	Mitsubishi	0019,0093,0150		Samsux	0039			0030,0054,0056
		0178,0108,0512		Sansei	0451			0165,0178,0179
	Motorola	0093		Sansui	0463		White	
	Multitech	0180		Sanyo	0108,0154,0208		Westinghouse	0463,0623,0624
	NAD	0156,1166,0178			0339		Yamaha	0019,0030
	NTC	0092		Scimitsu	0019		Yoko	0339
	NEC	0019,0030,0036		Scotch	0178		Zenor	039
		0056,0170		Scott	0019,0178,0179		Zenith	0016,0017,0092
	Neckermann	0418			0180,0236			0463,0624
	Netsat	0037		Sinudyne	0010		Pioneer	0038,1166,0172
	Nikkai	0035		Semivox	0180			0679
	Nikko	0030,0092,0178		Semp	0156	CATV	ABC	1003,1008,1011
	Nokia	0339		Sears	0047,0054,0056			1014
	Onwa	0180			0154,0156,0171		Bell & Howell	1014
	Optimus	0154,1166,0250			0178,0179		Contec	1019
	Optonica	0093,0165		SEI	0010		Daehan	1778
	Orion	0179,0236,0463		Sentra	0035		Daeryung	1008
	Osaki	0412		Sharp	0039,0093,0165		Everquest	1015
	Otto Versand	0010,0512		Shogun	0019		Gemini	1015
	Palladium	0418		Signature	0016		GoldStar	1144,1838
	Panasonic	0051,0161,0250		Sky-Worth	0037		General	1011,1276,1476
	Penny	0002,0019,0021		Sonitron	0339		Instrument	1810
		0030,0039,0047		Sony	0000,0010		Hitachi	1011
		0051,0056,0060		Soundesign	0178,0179,0180		Jasco	1015
		0156,0178,1347		Soundwave	0418		Jerrold	1003,1011,1012
	Philco	0019,0030,0054		Squareview	0171			1014,1015,1276
		0145,0418,0463		Starlite	0180			1476,1810
	Philips	0037,0054		Supreme	0000		LG Alps	1779
	Pilot	0019,0030,0039		Sylvania	0030,0054		Memorex	1000
	Portland	0019,0039,0092		Symphonic	0171		Now	1776
	Prism	0051		TMK	0056,0177,0178		Oak	1019
	Proscan	0047		Tandy	0093		Pacific	1678
	Protech	0418		Technics	0051,0250		Panasonic	1000,1107
	Proton	0178,0466		Technal Ace	0179		Paragon	1000
	Pulsar	0017,0019		Techwood	0051,0056		Pulsar	1000
	Quasar	0051,0165,0250		Telefunken	0056		Quasar	1000
	Quelle	0010,0512						

Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code
CATV	Radio Shack	1015	SAT	Radio Shack	1869	CD/	MCS	0029
	Rembrandt	1011		Sanyo	1493	CD-R/		
	Runco	1000		Sharp	1494	MD		
	Samsung	1144,1702		Sony	1275,1639,1661		QED	0157
	Scientific Atlanta	1008,1477,1877		Star Choice	1869		Quasar	0029
	Seawoo	1780		Tae Kwang	1733		RCA	0053,0179,0305
	Signal	1015		Toshiba	1486,1790		Realistic	0179,0180,0420
	Signature	1011		Uniden	1722,1724		Rotel	0157,0420
	Starcom	1003,1015		VTech	1321		SAE	0157
	Stargate	1015		Victor	1492,1505,1506		Sansui	0157,0305
	Starquest	1015		Zenith	1856		Sanyo	0179,0349
	Taihan	1778		Pioneer	1662,1329		Scott	0305
	Tocom	1012			1010 (DTV,SAT)		Sears	0305
	Tongkook	1777,1840	CD/	Aiwa	0124,0157		Sharp	0037,0180,0861
	Toshiba	1000	CD-R/				Sherwood	0114,0180
	Tusa	1015	MD	Anam	0362		Sony	0000,0185,0490
	Zenith	1000,1525		Burmester	0420		Soundesign	0145
	Pioneer	1023,1144,1260		California Audio Labs	0029,0303		Tascam	0420
		1533		Carver	0157,0179,0437		Teac	0174,0180,0393
				DKK	0000		Technics	0029,0303
				Denon	0003,0358,0873			
SAT	AlphaStar	1772		Dynamic Bass	0179		Toshiba	0481
	Chaparral	1216		Emerson	0305		Victor	0072
	Dae Young	1735		Eroica	0562,0563		Wards	0053,0157
	Daeryung	1396		Fantasia	0525		Yamaha	0036,0187
	Echostar	1396,1775		Fisher	0174,0179		Yorx	0461
	Expressvu	1775		Garrard	0393,0420		Pioneer	0032,0244,0305
	General Instrument	1361,1627,1869		Genexxa	0032,0305			0468,0551
	HTS	1775		GoldStar	0383,0525			1062 (CD-R)
	Hitachi	1489,1819		Harman/Kardon	0157,0173			1063 (MD)
	Hughes Network Systems	1749		Hitachi	0032			1087
	Hung Chang	1732		Inkel	0114,0180,0437	TAPE	ADC	1171
	JVC	1492,1505,1506		JVC	0072		Aiwa	1029,1197,1223
		1775		Kenwood	0028,0037,0190		Akai	1189
					0626,0681,0826		Anam	1364
	Jerrold	1361,1627		Krell	0157		Carver	1029,1261
	JiWon	1364		LXI	0305		Denon	1076
	Kabil	1737		Linn	0157		Dual	1383
	Magnavox	1722,1724		Luxman	0266		Dynamic Bass	1261
	Marantz	1200		MCS	0029		Eroica	1418
	Memorex	1724		MTC	0420		Fisher	1261
	Mitsubishi	1491		Magnavox	0157,0305		Garrard	1375
	NEC	1496,1499,1507		Marantz	0029,0157,0180		GoldStar	1375
		1508		Mission	0157		Harman/Kardon	1029,1182
		1869		NSM	0157		Inkel	1070
	Panasonic	1340,1500,1701		Nikko	0174,0362,0525		JVC	1244,1273
	Philips	1200,1722,1724		Onkyo	0101,0381,0868		Kenwood	1070
	Primestar	1361,1627		Optimus	0000,0032,0037		Kyocera	1171
	RCA	1143,1392,1566			0145,0179,0305		Lotte	1339
		1855			0420,0437,0468		Luxman	1266
					1063		Magnavox	1029
				Panasonic	0029,0303		Marantz	1029
				Parasound	0420		Nakamichi	1218
				Philips	0157,0626		Nikko	1364

Techno Tidbits & Problem-solving

Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code
TAPE	Olympus	1266	VCR	Denon	0042	VCR	Memorex	0000,0035,0037
	Onkyo	1135,1282		Dynatech	0000			0039,0046,0047
	Optimus	1027,1220		Electrohome	0037			0048,0104,0209
	Panasonic	1229		Electrohome	0037			0240,0307,1037
	Philips	1029		Emerex	0032			1162,1262
	RCA	1261		Emerson	0000,0002,0037		Minolta	0042
	Renaissance	1413			0043,0121,0184		Motorola	0035,0048
	Samsung	1391			0208,0209,0278		Multitech	0000,0072
	Sansui	1029			0479,0561		NAD	0058
	Sanyo	1261		Fisher	0047,0104		NEC	0038,0040,0041
	Sonic	1375		Fuji	0035			0067,0104
	Sony	1170,1243,1291		Funai	0000		National	0226
	Teac	1391		GE	0035,0048,0060		Nikko	0037
	Technics	1229			0240		Nikon	0034
	Victor	1244,1273		Garrard	0000		Noblex	0240
	Wards	1027		General	0052		Olympus	0035,0226
	Yamaha	1094,1097		Go Video	0432,0526		Optimus	0037,0048,0058
	Pioneer	1027,1099,1101		GoldStar	0037,0038,0225			0104,0162,0432
		1220			0480			1048,1062,1162
				Gradiente	0000,0008			1262
VCR	Admiral	0048,0209		HI-Q	0047		Orion	0002,0184,0209
	Adventura	0000		Harley Davidson	0000			0479
	Aiko	0278		Harman/Kardon	0038,0081		Panasonic	0035,0162,0225
	Aiwa	0000,0037,0307		Harwood	0072			0226,0227,1062
	Akai	0041,0106,0281		Headquarter	0046			1162,1262
		0315		Hitachi	0000,0041,0042		Penney	0035,0037,0038
	America Action	0278			0166.,0235			0040,0042,0240
	American High	0035		Hughes Network	0042		Pentax	0042
	Anam	0037,0162,0226		Systems			Philco	0035,0209,0479
		0240,0278,0553		JVC	0008,0041,0067		Philips	0035,0081
		0579		Jensen	0041		Pilot	0037
	Anam National	0162,0226,1162		KEC	0037,0278		Portland	0020
	Asha	0240		KLH	0072		Profitronic	0240
	Audiovox	0037		Kenwood	0038,0041,0067		Proscan	0060
	Beaumark	0240		Kodak	0035,0037		Protec	0072
	Boll & Howell	0104		LG	0480		Pulsar	0039
	Blaupunkt	0226		LXI	0037		Quarter	0046
	Broksonic	0002,0121,0184		Lloyd's	0000,0208		Quartz	0046
		0209,0479		Logik	0072		Quasar	0035,0162,1162
	CCE	0072,0278		MEI	0035		RCA	0035,0042,0048
	Calix	0037		MGA	0043,0240			0060,0106,0240
	Canon	0035		MGN Technology	0240		Radio Shack	0000,1037
	Capehart	0020		MTC	0000,0240		Radix	0037
	Carver	0081		Magnasonic	0278		Randex	0037
	Cineral	0278		Magnavox	0000,0035,0039		Realistic	0000,0035,0037
	Citizen	0037,0278			0081			0046,0047,0048
	Craig	0037,0047,0072		Magnin	0240			0104
		0240,0271		Marantz	0035,0081		Ricoh	0034
	Curtis Mathes	0035,0041,0060		Marta	0037		Runco	0039
		0162		Matsushita	0035,0162,0227		STS	0042
	Colt	0072		Mitsubishi	0043,0048,0067		Samsung	0045,0240,0426
	Cybernex	0240			0173			0432
	Daewoo	0020,0045,0046		Marantz	0035,0081		Sanky	0039,0048
		0278,0561		Marta	0037		Sansui	0000,0041,0067
	Daytron	0020		Matsushita	0035,0162,0227			0209,0271,0479
	Denon	0042		Mitsubishi	0043,0048,0067		Sanyo	0046,0047,0104
					0173			0240
							Scott	0043,0045,0121
								0184

Device	Manufacturer	Manufacturer Code	Device	Manufacturer	Manufacturer Code
VCR	Sears	0000,0035,0037 0042,0046,0047 0104	RECEIVERS	ADC	0531
	Semp	0045		Aiwa	0121,0301,1089 1405
	Sharp	0048,0363		Akai	0115
	Shintom	0072		Anam	0112,0609
	Shogun	0240		Capetronic	0531
	Singer	0072		Carver	1089,1189
	Sony	0000,0032,0034 0035		Curtis Mathes	0080
	Sylvania	0000,0035,0043 0081		Daewoo	0407
	Symphonic	0000		Denon	1104,1160
	TMK	0208,0240		Dual	0512
	Tatung	0041		Eroica	0051
	Teac	0000,0041		Fantasia	0466
	Technics	0035,0162		GP Audio	0423
	Teknika	0000,0035,0037 0052		Garrard	0407,0440,0463
	Thomas	0000		GoldStar	0112
	Toshiba	0043,0045		Harman/Kardon	0110,0891
	Totevision	0037,0240		Inkel	0502,0512
	Unitech	0240		JBL	0110
	Vector	0045		JVC	0074
	Vector Research	0038,0040		Kenwood	0186,1027,1313 1569
	Victor	0008,0041,0067		Lotte	0466,0506
	Video Concepts	0040,0045		Luxman	0267
	Videosonic	0240		MCS	0039
	Wards	0000,0035,0042 0047,0048,0060 0072,0081,0240		Magnavox	0391,0531,1089 1189
	White			Marantz	0039,1089,1189
	Westinghouse	0209,0278		McIntosh	0258
	XR-1000	0000,0035,0072		McSilver	0466
	Yamaha	0038		Nikko	0407,0466,0609
	Zenith	0000,0034,0039 0209,0479		Nikko	0135,0380
	Pioneer	0058,0067,0168		Optimus	0080,0186,0440 0531,0670,1023
DAT	Carver	0158		Panasonic	0039,1518
	Denon	0031		Philips	0391,0891,1089 1189
	Harman/Kardon	0158		Pioneer	0014,0080,0150 0289,0531,0630 1023
	Magnavox	0158		Quasar	0039
	Marantz	0158		RCA	0054,0531
	Philips	0158		Renaissance	0564
	Sony	0093		Samsung	0112
	Pioneer	0019		Sansui	1089
				Sharp	0186
				Sherwood	0502
				Sony	1058,1158,1258
				Soundesign	0670
				Sunfire	1313
				Tae Kwang	0440
				Teac	0112,0463
				Technics	0039,1308,1309 1518
				Thorens	1189
				Victor	0074
				Wards	0014,0054,0080
				Yamaha	0176,0186

Troubleshooting

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used. If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

Symptom	Cause	Remedy
The power does not turn ON.	<ul style="list-style-type: none"> The power plug is disconnected. The protection circuit may have been activated. 	<ul style="list-style-type: none"> Connect the power plug to the wall outlet. Plug in again. If it still doesn't work call a service center.
The unit does not respond when the buttons are pressed.	<ul style="list-style-type: none"> Static electricity caused by dry air. 	<ul style="list-style-type: none"> Disconnect the power plug from the outlet, and insert again.
No sound is output when a function is selected.	<ul style="list-style-type: none"> Improper connections. Sound is muted. The volume is turned down. The TAPE 2 MONITOR is ON. Speakers are turned OFF. DIGITAL/ANALOG switch is set incorrectly. The digital inputs are assigned incorrectly, or not at all. 	<ul style="list-style-type: none"> Make sure the component is connected correctly (see p. 12-21). Press MUTE on the remote control. Adjust MASTER VOLUME. Press the TAPE 2 MONITOR button. Press SPEAKERS (A/B) to select the speakers you connected. Set SIGNAL SELECT (see p.44). Set the digital input settings correctly (see p.29).
No image is output when a function is selected.	<ul style="list-style-type: none"> Improper connections. The input source is not properly selected. 	<ul style="list-style-type: none"> Make sure the component is connected correctly (see p.12-21). Press the correct function button.
Considerable noise in radio broadcasts.	<ul style="list-style-type: none"> Incorrect frequency. The antenna is not connected. RF and/or digital cables are near the antenna terminals and wires. <p>FM broadcasts</p> <ul style="list-style-type: none"> The FM antenna is not fully extended or is poorly positioned. Weak radio signals. <p>AM broadcasts</p> <ul style="list-style-type: none"> The AM antenna is poorly positioned. Weak radio signals. Interference caused by other equipment (fluorescent lamp, motor, etc.). 	<ul style="list-style-type: none"> Tune in the correct frequency. Connect the antenna (see p.18). Route RF and digital cables away from the antenna terminals and wires. Fully extend the FM wire antenna, position for best reception, and secure to a wall. Connect an outdoor FM antenna (see p.18). Adjust the direction and position for best reception. Connect an additional internal or external AM antenna (see p.18). Turn off the equipment causing the noise or move it away from the receiver. Place the antenna farther away from the equipment causing the noise.
Broadcast stations cannot be selected automatically.	<ul style="list-style-type: none"> Weak radio signals. 	<ul style="list-style-type: none"> Connect an outdoor antenna (see p.18).
Subwoofer output is very low.	<ul style="list-style-type: none"> Settings route signal away from sub woofer. 	<ul style="list-style-type: none"> To get more signal to the subwoofer set it to PLUS or choose SMALL for the FRONT speakers (see p.31-32).
When playing an LD the SIGNAL SELECT is on DIGITAL but there is still no sound.	<ul style="list-style-type: none"> The LD is not a Dolby Digital compatible disc. 	<ul style="list-style-type: none"> Set the SIGNAL SELECT to analog (make sure your LD player is hooked up with analog connections in addition to digital and RF (with RF demodulator connections, see p.14).
When playing a Dolby Digital / DTS source the 5.1 Channel indicator doesn't light.	<ul style="list-style-type: none"> The Dolby Digital / DTS source is not 5 channels. 	<ul style="list-style-type: none"> There is no problem with the receiver but if you want 5 channel sound you must play a 5 channel source.

Symptom	Cause	Remedy
No sound from surround or center speakers.	<ul style="list-style-type: none"> • Speaker settings are incorrect. • The rear and/or center levels are turned down. • The surround and/or center speakers are disconnected. 	<ul style="list-style-type: none"> • See "Speaker Setting" on p.31-32 to check the speaker settings. • See "Channel Level" p.34-35 to check the speaker levels. • Connect the speakers (see p.19).
Sound is produced from some components, but not from digital components.	<ul style="list-style-type: none"> • SIGNAL SELECT is set incorrectly. • The digital inputs are assigned incorrectly, or not at all. 	<ul style="list-style-type: none"> • Set SIGNAL SELECT to "AUTO" or according to the type of connections made (see p. 44). • Set the digital input settings correctly (see p.29).
No sound is output or a noise is output when software with DTS is played back.	<ul style="list-style-type: none"> • SIGNAL SELECT is set to "ANALOG". • A DVD player not compatible with DTS is used, or the setting of the DVD player is incorrect. • The digital output level has been turned down on a CD player or other component equipped with digital output level adjustment capability. (The DTS signal has been altered by the player, and cannot be read.) • The speakers are turned OFF. 	<ul style="list-style-type: none"> • Make digital connections (see p.13) and set SIGNAL SELECT to "AUTO" (see p.44). • Refer to the instruction manual supplied with the DVD player. • Set the digital volume level of the player to full, or to the neutral position. • Turn the speakers ON.
The sound is output intermittently when software with DTS is played back.	<ul style="list-style-type: none"> • Disc being played back has a huge amount of information on it. 	<ul style="list-style-type: none"> • Use the STANDARD mode to get the best results (see p.42).
When a search is performed by a DTS compatible CD player during playback, noise is output.	<ul style="list-style-type: none"> • The search function performed by the player interferes with the reading of digital information. 	<ul style="list-style-type: none"> • This is not a malfunction, but be sure to turn the volume down to prevent the output of loud noise from your speakers.
Cannot be remote controlled.	<ul style="list-style-type: none"> • The remote control batteries have worn out. • Too far away or bad angle of operation. • There is an obstacle between the receiver and the remote control. • Strong light such as fluorescent light is shining onto the unit's remote control signal light-receiving window. • A cord is connected to the CONTROL IN terminal on this unit. 	<ul style="list-style-type: none"> • Replace the batteries (see p.10). • Operate within 23ft (7 m), 30° of the remote sensor on the front panel (see p.11). • Remove the obstacle or operate from another position. • Avoid exposing the remote sensor on the front panel to direct light. • Connect cord to the correct jack.
The display is dark.	<ul style="list-style-type: none"> • The FL DIMMER button is pushed. 	<ul style="list-style-type: none"> • Press FL DIMMER on the front panel repeatedly to return to the default setting (see p.49).
The OVER indicator is constantly lit.	<ul style="list-style-type: none"> • If you are using an analog source, the signal is too strong. 	<ul style="list-style-type: none"> • Press the INPUT ATT button (see p.24).
When playing a Dolby Digital / DTS format LD there is noise audible on the soundtrack.	<ul style="list-style-type: none"> • If you are using a digital source, there is too much information for the receiver to handle. • The SIGNAL SELECT is on ANALOG. 	<ul style="list-style-type: none"> • For DD/DTS sources put the receiver in STANDARD mode (see p.42). • Set the SIGNAL SELECT to DIGITAL.

Techno Tidbits & Problem-solving

Symptom	Cause	Remedy
You can't get DIGITAL to come up when using the SIGNAL SELECT button.	<ul style="list-style-type: none"> Either the digital connections or the DIGITAL IN SELECT choices are incorrect. The TAPE2 MONITOR mode is ON. 	<ul style="list-style-type: none"> Make sure the digital connections and the DIGITAL IN SELECT choices are done correctly. Press the TAPE2 MONITOR button so it goes into the OFF setting.
The Dolby Digital / DTS indicator doesn't light up even when playing a Dolby Digital / DTS source.	<ul style="list-style-type: none"> The player is paused or stopped. There is a mistake in the player settings for audio output. Although it's a Dolby Digital / DTS source there is a possibility the present track is not Dolby Digital / DTS. 	<ul style="list-style-type: none"> Play the source. Fix the audio settings (check the manual that came with your DVD player). There is no problem. The indicator won't light when the track is not a Dolby Digital / DTS track.

If the unit does not operate normally due to external effects such as static electricity

Disconnect the power plug from the outlet and insert again to return to normal operating conditions.

STATION CALL button fill in sheet

It's a good idea to make a note of your preset stations.

CLASS A	Station No.	*1	*2	*3	*4	*5
	Station Name					
	Frequency					
	Station No.	*6	*7	*8	*9	*0
	Station Name					
	Frequency					
CLASS B	Station No.	*1	*2	*3	*4	*5
	Station Name					
	Frequency					
	Station No.	*6	*7	*8	*9	*0
	Station Name					
	Frequency					
CLASS C	Station No.	*1	*2	*3	*4	*5
	Station Name					
	Frequency					
	Station No.	*6	*7	*8	*9	*0
	Station Name					
	Frequency					

Specifications

Amplifier Section

Continuous average power output of 80 watts* per channel, min., at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.09 % total harmonic distortion (front).**

Continuous Power Output

Front	80 W + 80 W (20Hz-20 kHz, 0.09 %, 8 Ω)
Center	80 W (20Hz-20 kHz, 0.09 %, 8 Ω)
Rear	80 W + 80 W (20Hz-20 kHz, 0.09 %, 8 Ω)

Input (Sensitivity/Impedance)

VCR 1/DVR, VCR 2, DVD/LD, TV/SAT, VIDEO, CD, CD-R/TAPE 1/MD, TAPE 2	335 mV/47 k Ω
---	----------------------

Frequency Response

VCR 1/DVR, VCR 2, DVD/LD, TV/SAT, VIDEO, CD, CD-R/TAPE 1/MD, TAPE 2	5 Hz to 100,000 Hz $_{-3}^{+0}$ dB
VCR 1/DVR REC, VCR 2 REC, CD-R/TAPE 1/MD REC, TAPE 2 REC	335 mV/2.2 k Ω

Tone Control

BASS	± 6 dB (100 Hz)
TREBLE	± 6 dB (10 kHz)
LOUDNESS	+10 dB (100 Hz/10 kHz)

Signal-to-Noise Ratio (IHF, short circuited, A network)

VCR 1/DVR, VCR 2, DVD/LD, TV/SAT, VIDEO, CD, CD-R/TAPE 1/MD, TAPE 2	101 dB
MULTI CH IN	101 dB

Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]

VCR 1/DVR, VCR 2, DVD/LD, TV/SAT, VIDEO, CD, CD-R/TAPE 1/MD, TAPE 2	83 dB
---	-------

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers.

** Measured by Audio Spectrum Analyzer.

VIDEO Section (S jack)

Input (Sensitivity/Impedance)

VCR 1/DVR, VCR 2, VIDEO, DVD/LD, TV/SAT	
Luminance signal (Y)	1 V _{p-p} /75 Ω
Chrominance signal (C)	0.286 V _{p-p} /75 Ω

Output (Level/Impedance)

VCR 1/DVR, VCR 2, MONITOR OUT	
Luminance signal (Y)	1 V _{p-p} /75 Ω
Chrominance signal (C)	0.286 V _{p-p} /75 Ω

Frequency Response

VCR 1/DVR, VCR 2, VIDEO, DVD/LD, TV/SAT	
Luminance signal (Y)	5 Hz to 10 MHz $_{-3}^{+0}$ dB

Signal-to-Noise Ratio

Luminance signal (Y)	65 dB
----------------------	-------

VIDEO Section (Composite)

Input (Sensitivity/Impedance)

VCR 1/DVR, VCR 2, VIDEO, DVD/LD, TV/SAT	1 V _{p-p} /75 Ω
---	---------------------------------

Output (Level/Impedance)

VCR 1/DVR, VCR 2, MONITOR OUT	1 V _{p-p} /75 Ω
-------------------------------	---------------------------------

Frequency Response

VCR 1/DVR, VCR 2, TV/SAT, DVD/LD	
VIDEO→MONITOR OUT	5 Hz to 10 MHz $_{-3}^{+0}$ dB

Signal-to-Noise Ratio

	65 dB
--	-------

FM Tuner Section

Frequency Range	87.5 MHz to 108 MHz
Usable Sensitivity	Mono: 13.2 dBf, IHF (1.3 μ V/75 Ω)
50 dB Quieting Sensitivity	Mono: 20.2 dBf
	Stereo: 38.6 dBf
Signal-to-Noise Ratio	Mono: 73 dB (at 85 dBf)
	Stereo: 70 dB (at 85 dBf)
Distortion	Stereo: 0.5 % (1 kHz)
Alternate Channel Selectivity	60 dB (400 kHz)
Stereo Separation	40 dB (1 kHz)
Frequency Response	30 Hz to 15 kHz (± 1) dB
Antenna Input	75 Ω unbalanced

AM Tuner Section

Frequency Range	530 kHz to 1,700 kHz
Sensitivity (IHF, Loop antenna)	350 μ V/m
Selectivity	25 dB
Signal-to-Noise Ratio	50 dB
Antenna	Loop antenna

Miscellaneous

Power Requirements	AC 120 V, 60 Hz
Power Consumption	400 W, 550 VA
Power Consumption in Standby mode	1.0 W
AC Outlet SWITCHED (x2)	Total 100 W (0.8 A) MAX
Dimensions	420 (W) \times 173 (H) \times 463 (D) mm
	(16-9/16 (W) \times 6-13/16 (H) \times 18-1/4 (D) in.)
Weight (without package)	14.6 kg (32 lb 3 oz)

Furnished Parts

FM wire Antenna	1
AM loop Antenna	1
"AA" IEC LR6 batteries	2
Remote Control Unit	1
Operating Instructions	1

NOTE:

Specifications and the design are subject to possible modifications without notice, due to improvements.



Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Decibel

<u>Level</u>	<u>Example</u>
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.



Power cord CAUTION!

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

Maintenance of External Surfaces

- Use a polishing cloth or dry cloth to wipe off dust and dirt.
- When the surfaces are dirty, wipe with a soft cloth dipped in some neutral cleanser diluted five or six times with water, and wrung out well, and then wipe again with a dry cloth. Do not use furniture wax or cleaners.
- Never use thinners, benzine, insecticide sprays or other chemicals on or near this unit, since these will corrode the surfaces.

Should this product require service in the U.S.A. and you wish to locate the nearest Pioneer Authorized Independent Service Company, or if you wish to purchase replacement parts, operating instructions, service manuals, or accessories, please call the number shown below.

8 0 0 – 4 2 1 – 1 4 0 4

Please do not ship your product to Pioneer without first calling the Customer Service Department at the above listed number for assistance.

PIONEER ELECTRONICS SERVICE, INC.
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 1760, LONG BEACH,
CA 90801-1760, U.S.A.

For warranty information please see the Limited Warranty sheet included with your product.

Should this product require service in Canada, please contact a Pioneer Canadian Authorized Dealer to locate the nearest Pioneer Authorized Service Company in Canada.
Alternatively, please contact the Customer Service Department at the following address:

Pioneer Electronics of Canada, Inc.
Customer Service Department
300 Allstate Parkway, Markham, Ontario L3R
OP2
(905) 479-4411
1-877-283-5901

For warranty information please see the Limited Warranty sheet included with your product.

Si ce produit doit être réparé au Canada, veuillez vous adresser à un distributeur autorisée Pioneer au Canada pour obtenir le nom de la Société de Service Autorisée Pioneer le plus près de chez vous. Ou encore, veuillez vous communiquer avec le Service de Clientèle de Pioneer:

Pioneer électroniques du Canada, Inc.
Département de service au consommateurs
300 Allstate Parkway, Markham, Ontario L3R
OP2
(905) 479-4411
1-877-283-5901

Pour obtenir des renseignements sur la garantie, veuillez vous reporter au feuillet sur la Garantie Limitée qui accompagne le produit.

Published by Pioneer Corporation.
Copyright © 2000 Pioneer Corporation.
All rights reserved.

PIONEER CORPORATION

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan

PIONEER ELECTRONICS [USA] INC.

P.O. BOX 1540, Long Beach, California 90801-1540, U.S.A.

PIONEER ELECTRONICS OF CANADA, INC.

300 Allstate Parkway, Markham, Ontario L3R OP2, Canada

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium TEL: 03/570.05.11

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 9586-6300

PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.

San Lorenzo 1009 3er Piso Desp. 302 Col. Del Valle Mexico D.F. C.P. 03100
TEL: 5-688-52-90