


# KENWOOD



## 1997 CHANGER AND CONTROLLER COMPATIBILITY

Cables packed w/unit		CI	CG	H	G	F	J	J
Connector at unit		(m)	(m)	(f)	(f)	(f)	(f)	(f)
Model		C200	C300 C400	C301 FM	C401	C600 C601 C601FM C800	C56FM C504 C604 C560 C660 C602 C710 C603 C810 C602FM	C803 KMD-C80
(m)	KCA- R2FMA, R20, R10	C (d)	C (d)	D (bf)	D (bf)	F (d)	F (b)	F (b)
(f)	KCA-R51FM, 41FM, 40FM, 31FM, 30FM	CA (a)	CA (a)	A (f)	A (f)	J (a)	J (d)	J (d)
I	(f) KCA-R200	D (a)	D (a)	⊗	⊗	⊗	⊗	⊗
E	(f) KCA-R2FM	CE (e)	CE (e)	E (g)	E (g)	A(e)	A (be)	A (be)
(f)	KDC-PS907, PS905	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
(f)	KDC-9007, 8007, 8005, 8003, 7007, 7003, 6007, 6005, 4007	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
(m)	KDC-9000, 85R, 95R	C (d)	C (d)	D (bf)	D (bf)	F(d)	F (b)	F (b)
(f)	KDC-9000 II	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
(db)	KDC-PS900	⊗	⊗	⊗	⊗	⊗	⊗	L (I)
(f)	KRC-3006, 980, 953, 903, 902, 901, 880, 803, 802, 801, 703, 702, 701, 603C, 602, 601, 580, 503, 502, 501, 480, 403, 402, 401, S400, 380, 302, 301, S300,	CA (a)	CA (a)	A (f)	A (f)	J(a)	J (d)	J (d)
(m)	KRC-960, 940, 930, 910, 860, 830, 810, 740, 730, 660, 640, 630, 610, 560, 540, 530,	C (d)	C (d)	D (bf)	D (bf)	F(d)	F (b)	F (b)
(f)	KRC-860 II,	CA (a)	CA (a)	A (f)	A(f)	J (a)	J (d)	J (d)
(m)	KRC-878	C (d)	C (d)	D (bf)	D(bf)	F (d)	F (b)	F (b)
(m)	MAV-205	K (d)	K (d)	⊗	⊗	⊗	⊗	⊗
(m)	X205	K (d)	K (d)	⊗	⊗	⊗	⊗	⊗
(f)	602 FM MOD	CA (a)	CA (a)	A (f)	A(f)	J (a)	J (d)	J (d)
(m)	601 FM MOD	CG (d)	CG (d)	D (bf)	D(bf)	F (d)	F (b)	F (b)
(f)	301 FM MOD	CE (a)	CE (a)	E (g)	E (g)	A (e)	A (be)	A (be)

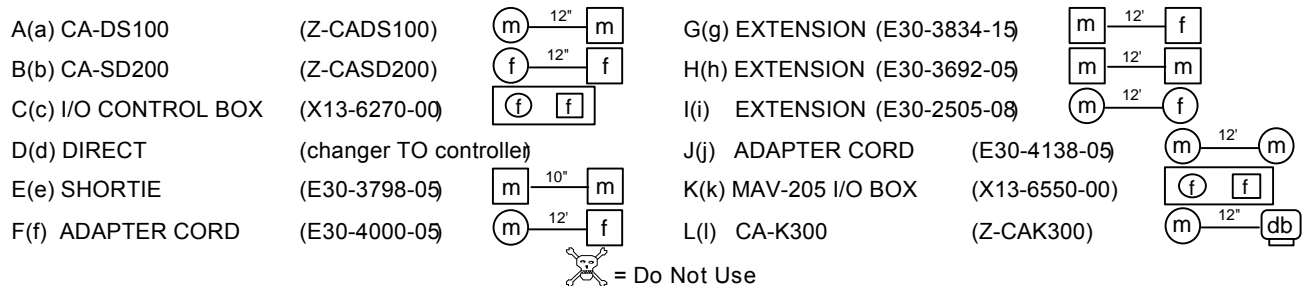

- The table above indicates the minimum requirements to interface a CD changer with a controller
- If the customer has all the cables that are packed with the unit then use the letter within the parenthesis.
- In most cases you can use one of the extensions to extend the distance from the changer to the controller by at least 12 feet.