AV RECEIVER/AV AMPLIFIER
RX-V663/HTR-6160/ DSP-AX763
SERVICE MANUAL

IMPORTANT NOTICE

This manual has been provided for the use of authorized YAMAHA Retailers and their service personnel.
It has been assumed that basic service procedures inherent to the industry, and more specifically YAMAHA Products, are already known and understood by the users, and have therefore not been restated.

WARNING: Failure to follow appropriate service and safety procedures when servicing this product may result in personal injury, destruction of expensive components, and failure of the product to perform as specified. For these reasons, we advise all YAMAHA product owners that any service required should be performed by an authorized YAMAHA Retailer or the appointed service representative.

IMPORTANT: The presentation or sale of this manual to any individual or firm does not constitute authorization, certification or recognition of any applicable technical capabilities, or establish a principle-agent relationship of any form.

The data provided is believed to be accurate and applicable to the unit(s) indicated on the cover. The research, engineering, and service departments of YAMAHA are continually striving to improve YAMAHA products. Modifications are, therefore, inevitable and specifications are subject to change without notice or obligation to retrofit. Should any discrepancy appear to exist, please contact the distributor's Service Division.

WARNING: Static discharges can destroy expensive components. Discharge any static electricity your body may have accumulated by grounding yourself to the ground buss in the unit (heavy gauge black wires connect to this buss).

IMPORTANT: Turn the unit OFF during disassembly and part replacement. Recheck all work before you apply power to the unit.

■ CONTENTS

TO SERVICE PERSONNEL 2
FRONT PANELS 3–5
REAR PANELS 6–9
REMOTE CONTROL PANELS 10
SPECIFICATIONS / 参考仕様 11–13
INTERNAL VIEW 14
DISASSEMBLY PROCEDURES / 分解手順 14–19
UPDATING FIRMWARE /
ファームウェアの書き込み 20–34
SELF DIAGNOSIS FUNCTION (DIAG) /
自己診断機能（ダイアグ） 35–61
CONFIRMATION OF IDLING CURRENT OF AMP UNIT /
アンプユニットのアイドリング電流の確認 62
DISPLAY DATA 63
IC DATA 64–80
PIN CONNECTION DIAGRAMS 81–84
BLOCK DIAGRAMS 85–89
PRINTED CIRCUIT BOARDS 90–103
SCHEMATIC DIAGRAMS 105–115
REPLACEMENT PARTS LIST 117–145
REMOTE CONTROL 146–151
ADVANCED SETUP / 本機の設定を変更する 152–155
Using Bluetooth components /
Bluetooth機器を再生する 155

このサービスマニュアルは、エコマーク認定の再生紙を使用しています。
This Service Manual uses recycled paper.

101087


© 2008 YAMAHA CORPORATION All rights reserved.
This manual is copyrighted by YAMAHA and may not be copied or redistributed either in print or electronically without permission.

YAMAHA
YAMAHA CORPORATION
P.O.Box 1, Hamamatsu, Japan
'08.03

■ TO SERVICE PERSONNEL

1. Critical Components Information
   Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
2. Leakage Current Measurement (For 120V Models Only)
   When service has been completed, it is imperative to verify that all exposed conductive surfaces are properly insulated from supply circuits.

- Meter impedance should be equivalent to 1500 ohms shunted by 0.15μF.

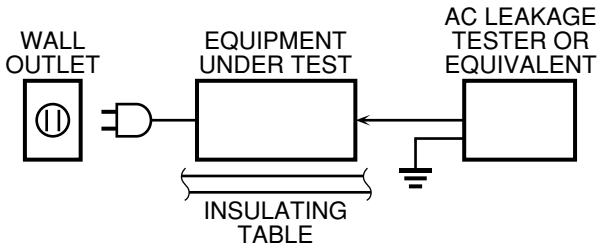

- Leakage current must not exceed 0.5mA.
- Be sure to test for leakage with the AC plug in both polarities.



For U model

"CAUTION"

"F2501, F2502: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE 10A, 125V FUSE."

For C model

CAUTION

F2501, F2502: REPLACE WITH SAME TYPE 10A, 125V FUSE.

ATTENTION

F2501, F2502: UTILISER UN FUSIBLE DE RECHANGE DE MÉME TYPE DE 10A, 125V.

WARNING: CHEMICAL CONTENT NOTICE!

This product contains chemicals known to the State of California to cause cancer, or birth defects or other reproductive harm.

DO NOT PLACE SOLDER, ELECTRICAL/ELECTRONIC OR PLASTIC COMPONENTS IN YOUR MOUTH FOR ANY REASON WHAT SO EVER!

Avoid prolonged, unprotected contact between solder and your skin! When soldering, do not inhale solder fumes or expose eyes to solder/flux vapor!

If you come in contact with solder or components located inside the enclosure of this product, wash your hands before handling food.

About lead free solder / 無鉛ハンダについて

All of the P.C.B.s installed in this unit and solder joints are soldered using the lead free solder.

Among some types of lead free solder currently available, it is recommended to use one of the following types for the repair work.

- Sn + Ag + Cu (tin + silver + copper)
- Sn + Cu (tin + copper)
- Sn + Zn + Bi (tin + zinc + bismuth)

Caution:

As the melting point temperature of the lead free solder is about 30°C to 40°C (50°F to 70°F) higher than that of the lead solder, be sure to use a soldering iron suitable to each solder.

本機に搭載されているすべての基板およびハンダ付けによる接合部は無鉛ハンダでハンダ付けされています。

無鉛ハンダにはいくつかの種類がありますが、修理時には下記のような無鉛ハンダの使用を推奨します。


・Sn+Ag+Cu(錫+銀+銅)
・Sn+Cu(錫+銅)
・Sn+Zn+Bi(錫+亜鉛+ビスマス)

注意：


無鉛ハンダの融点温度は通常の鉛入りハンダに比べ30～40℃程度高くなっていますので、それぞれのハンダに合ったハンダごてをご使用ください。

■ FRONT PANELS


RX-V663 (U, C models)

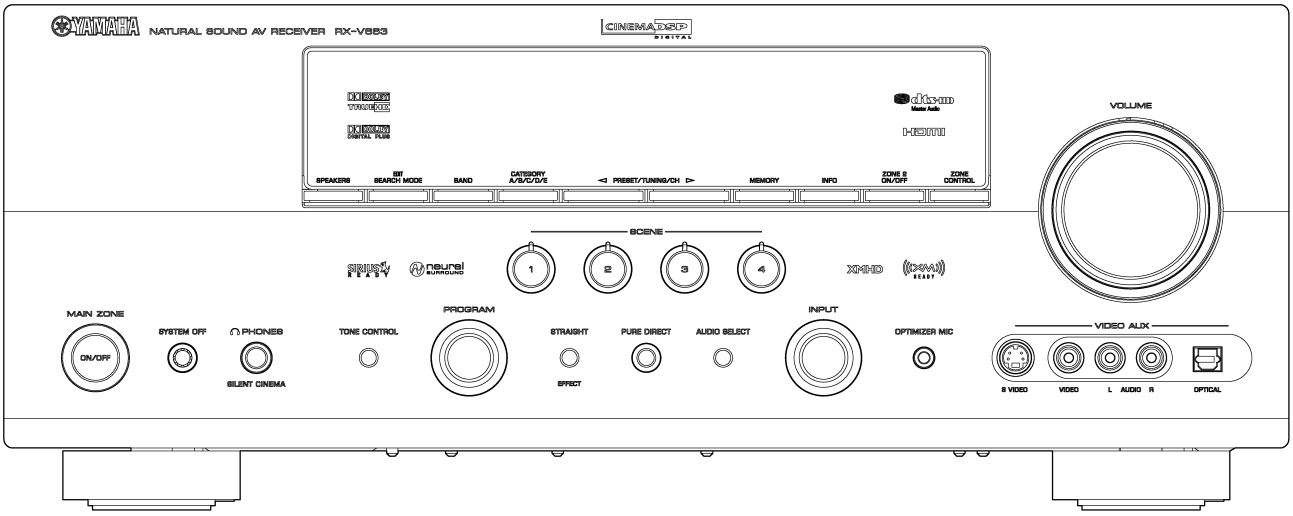


RX-V663 (R, T, K, A, G, E, F, L models)

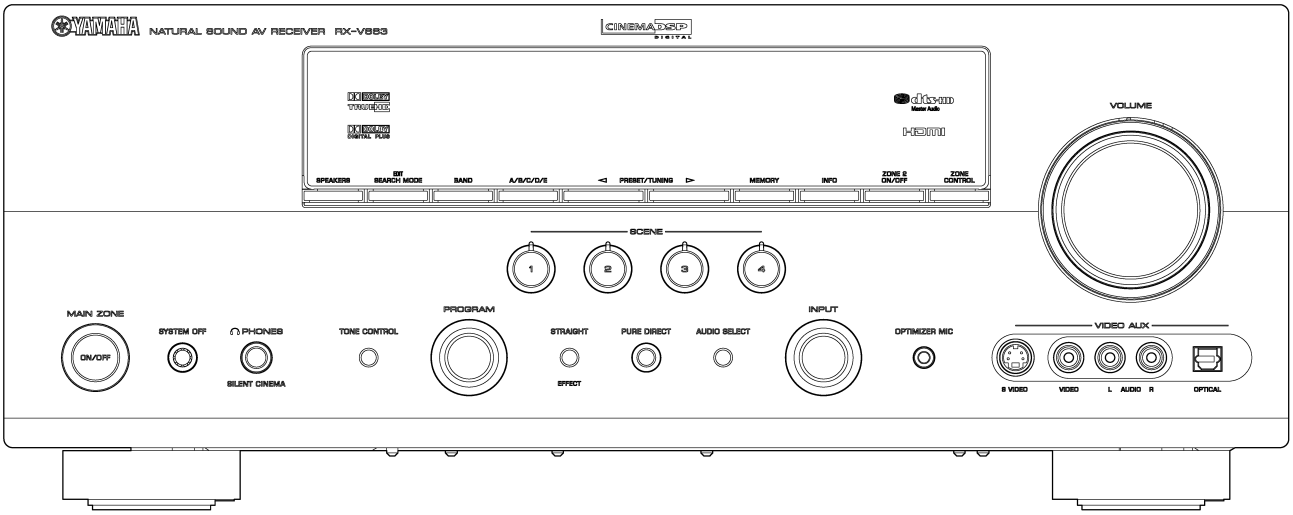


HTR-6160 (U model)

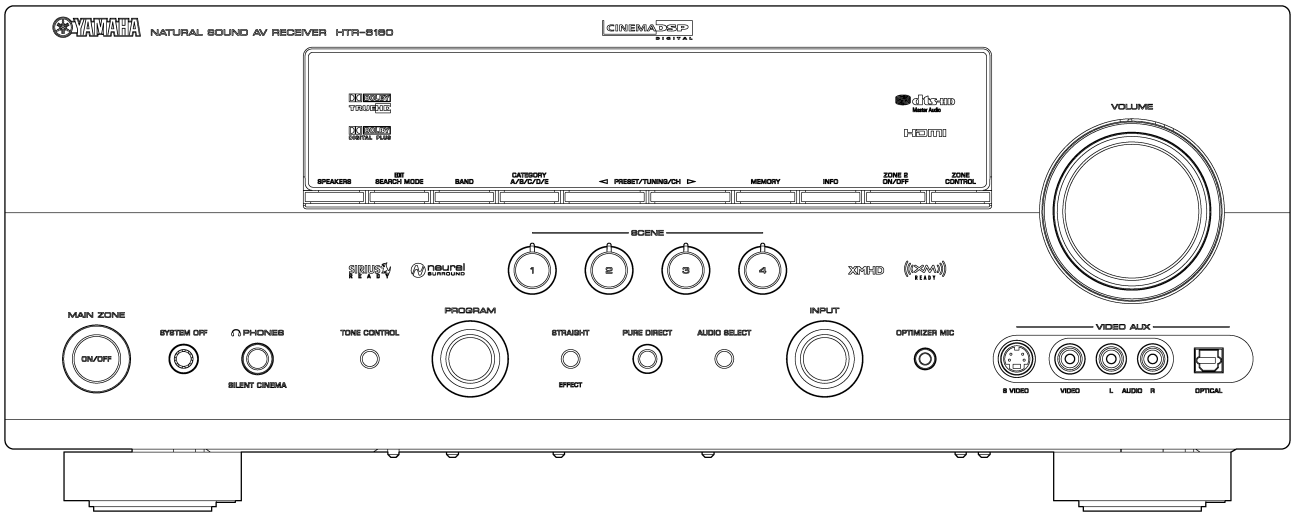


HTR-6160 (C model)

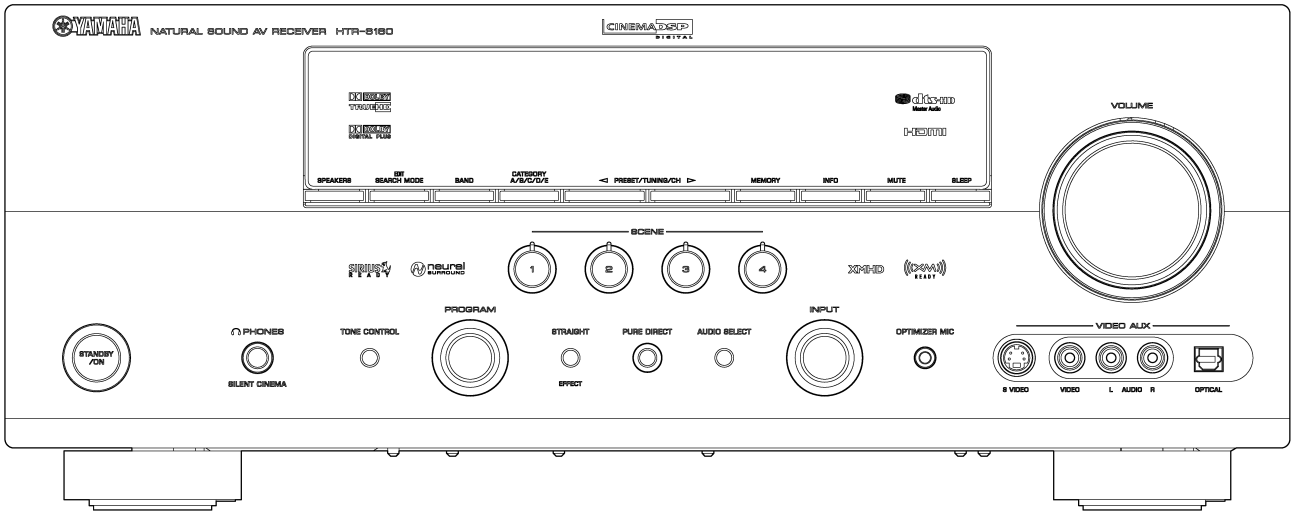


HTR-6160 (F model)

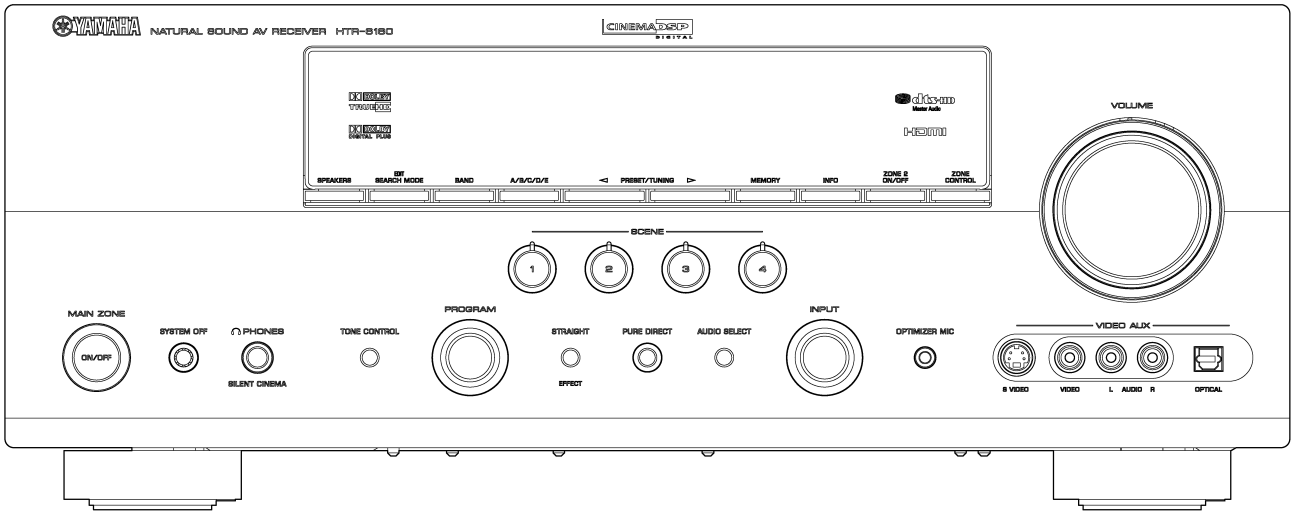

DSP-AX763 (B model)

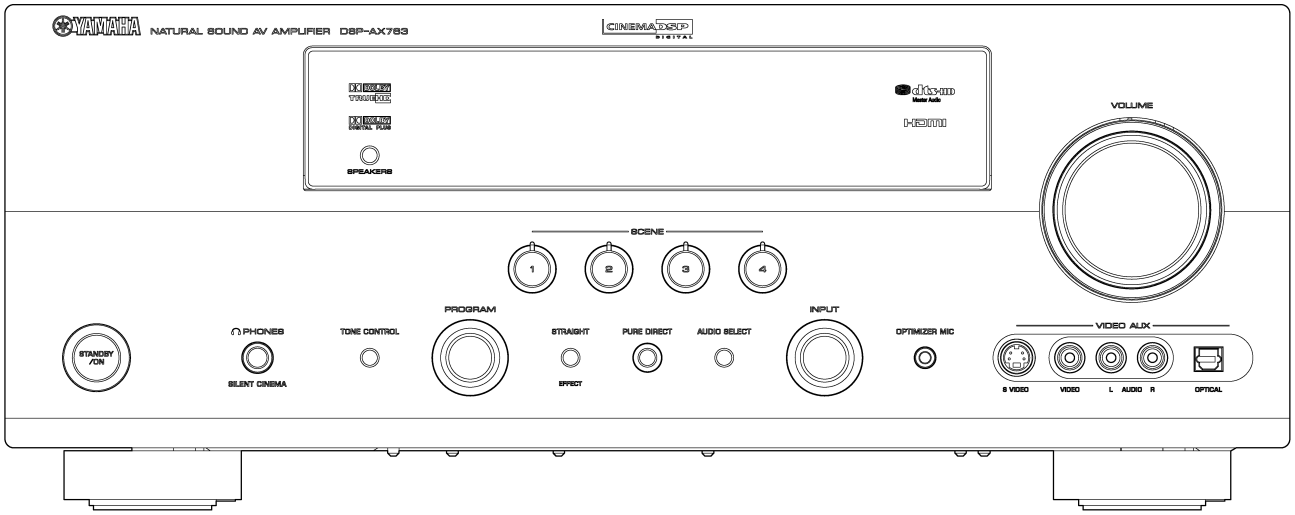


DSP-AX763 (J model)

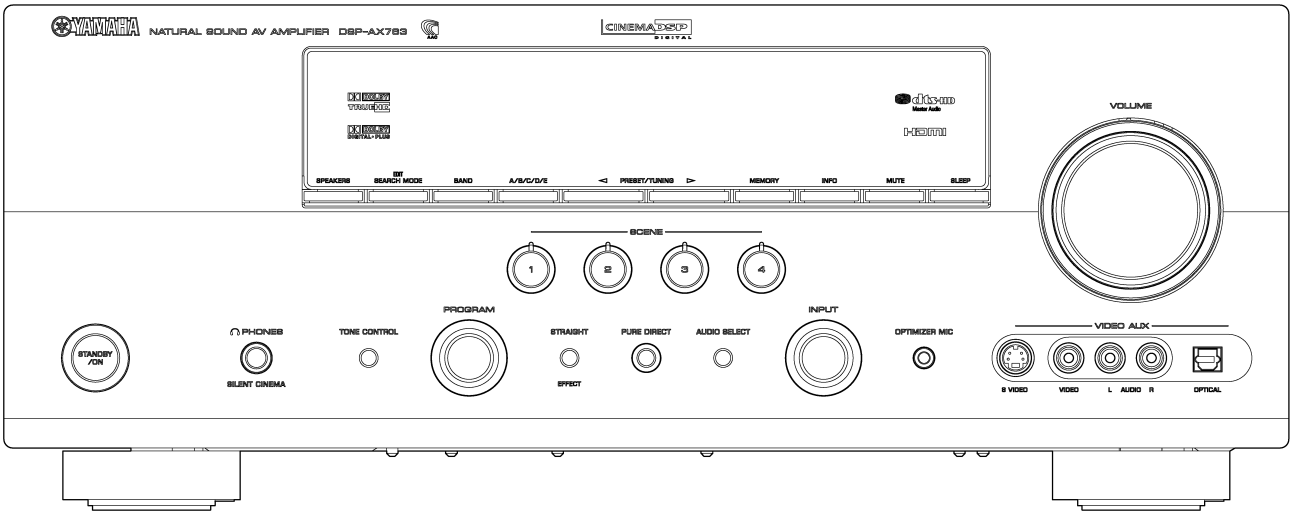


■ REAR PANELS


RX-V663 (U, C models)

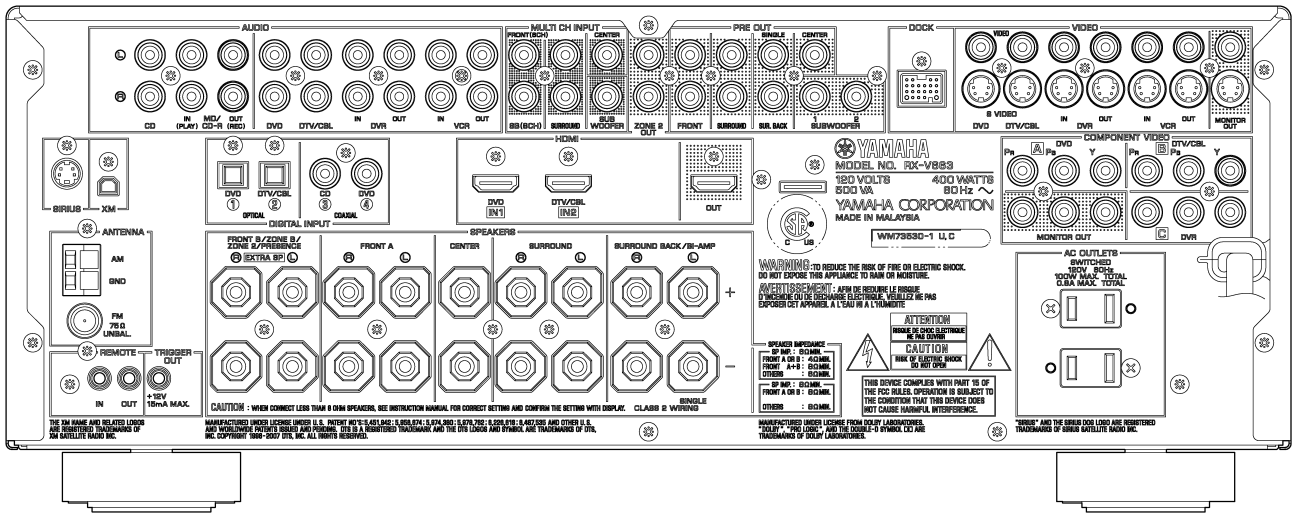


RX-V663 (R model)

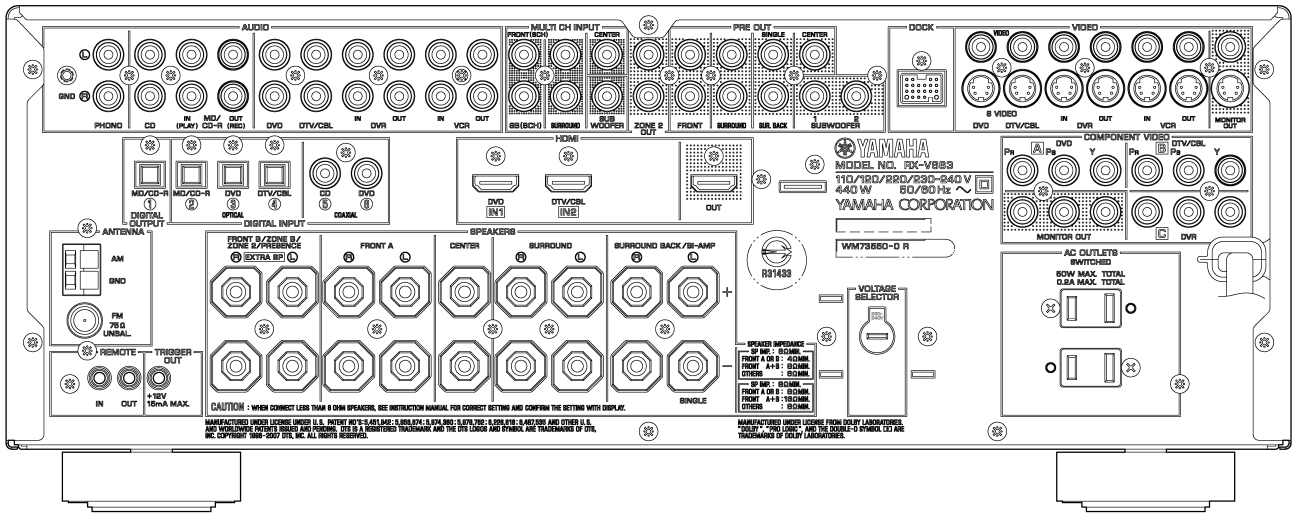


RX-V663 (T model)

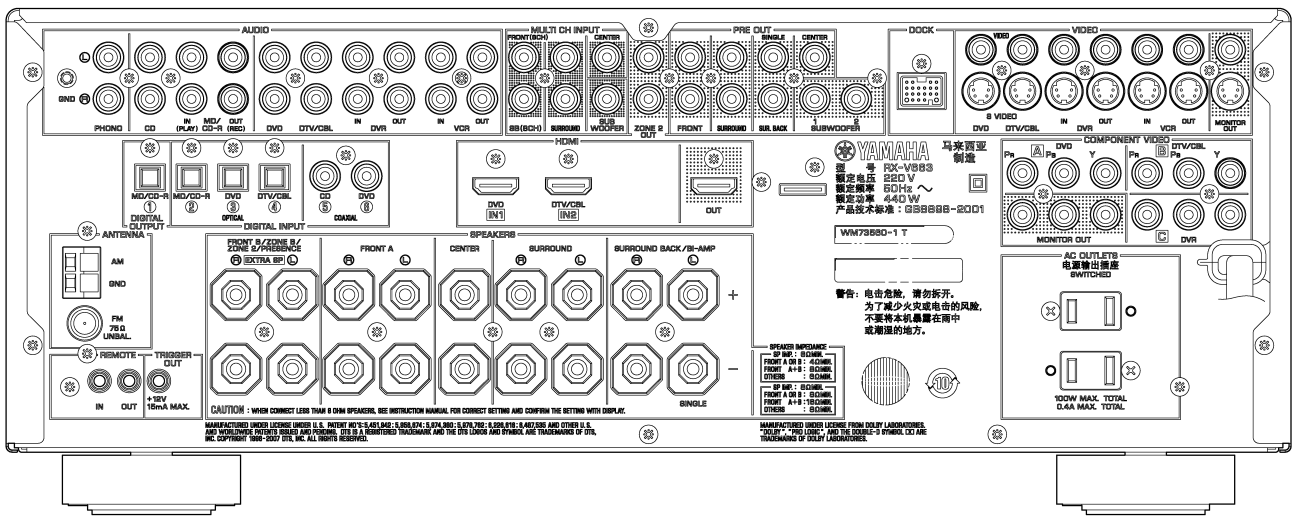


RX-V663 (K model)

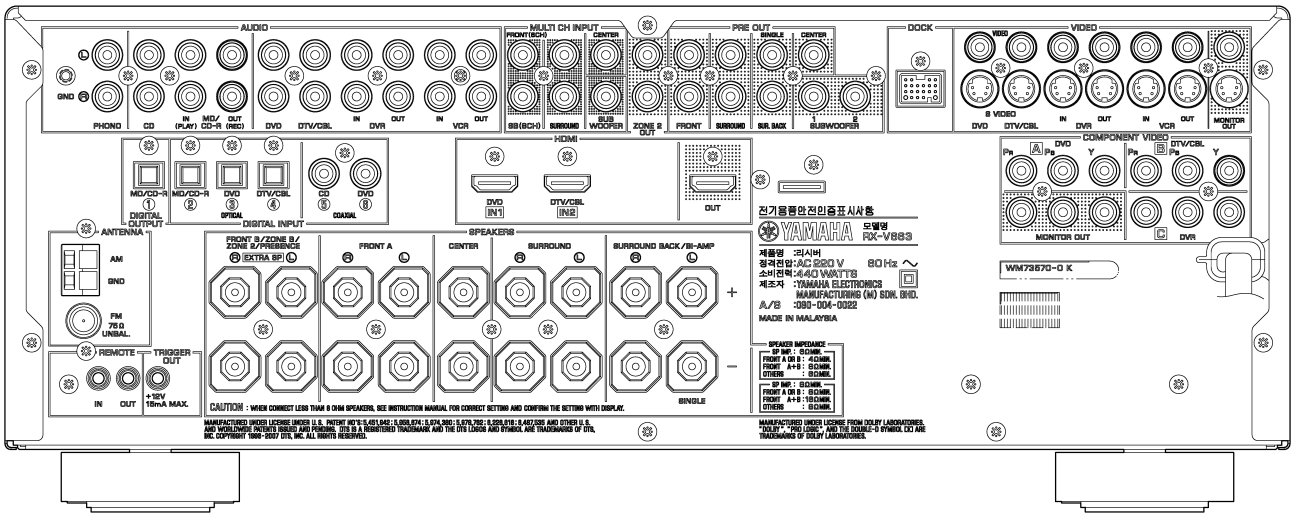


RX-V663 (A model)

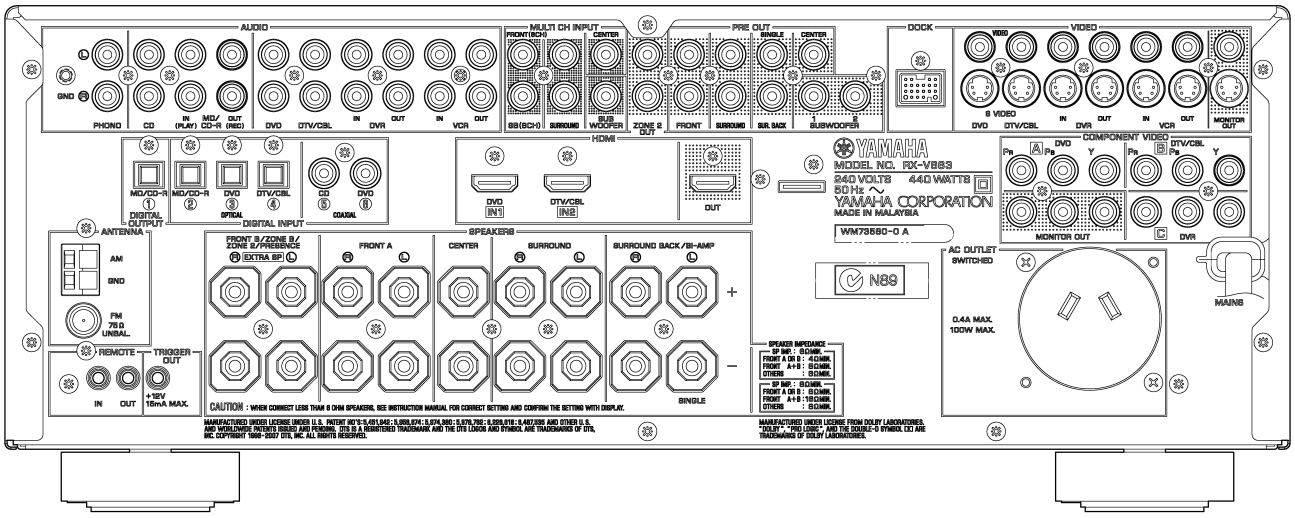


RX-V663 (G, E, F models)

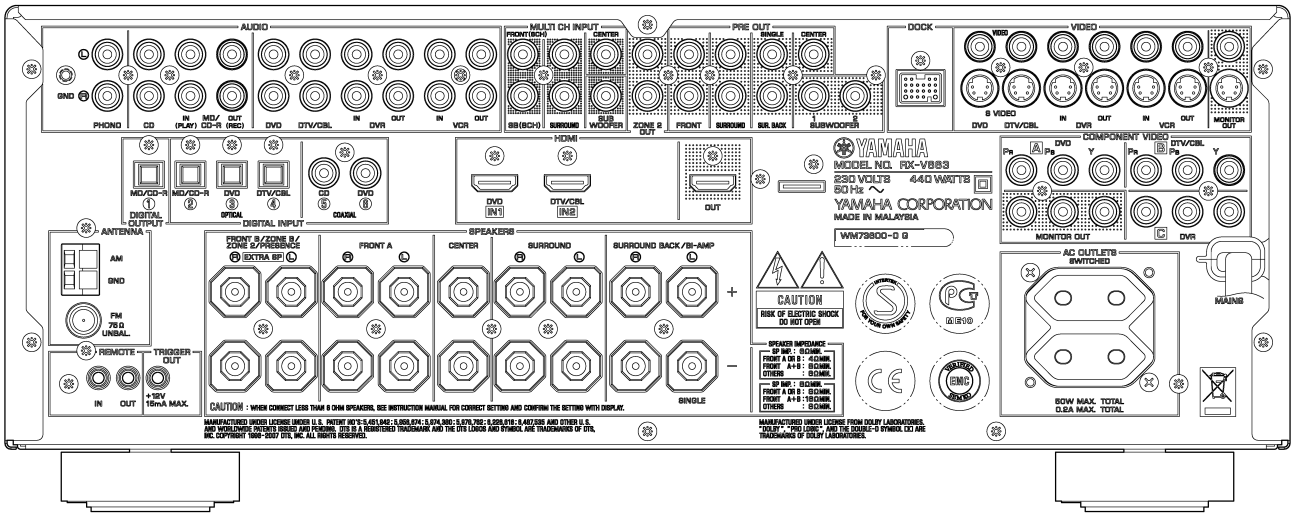


RX-V663 (L model)

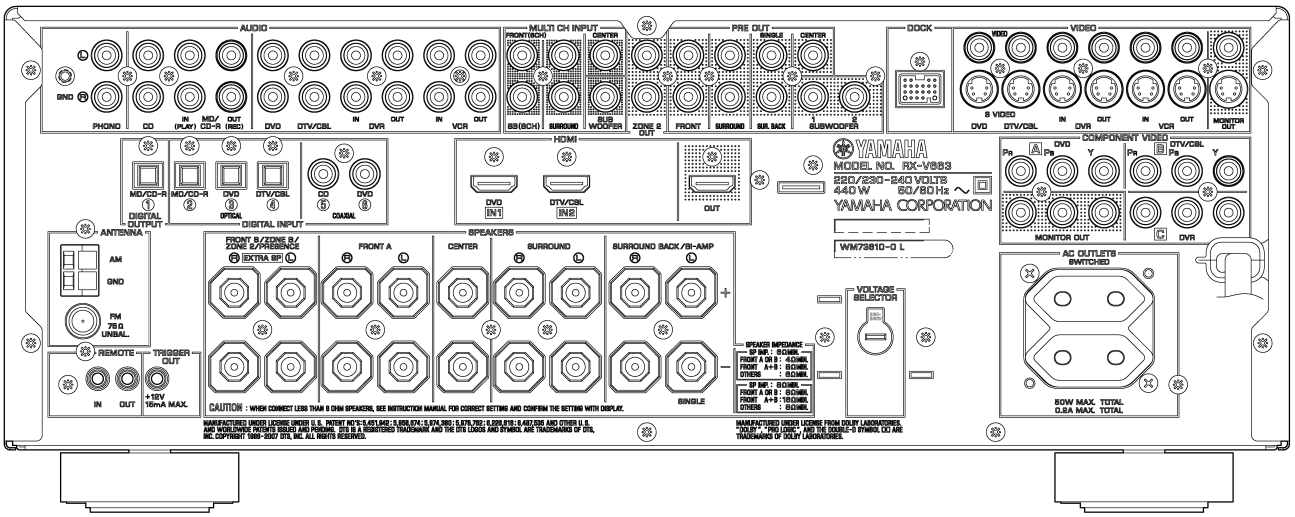


HTR-6160 (U model)

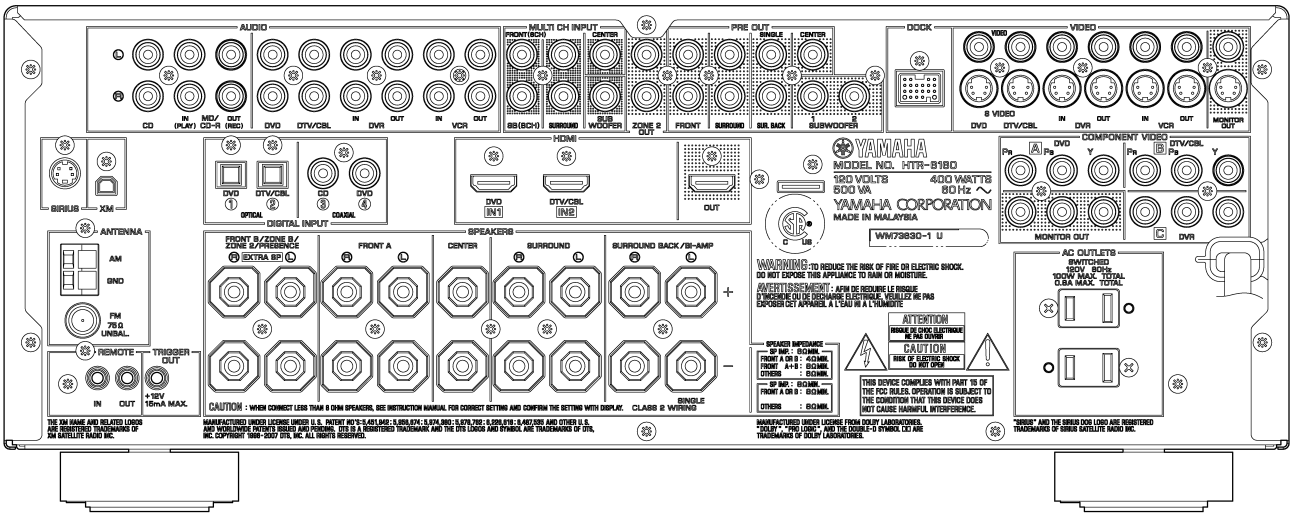


HTR-6160 (C model)

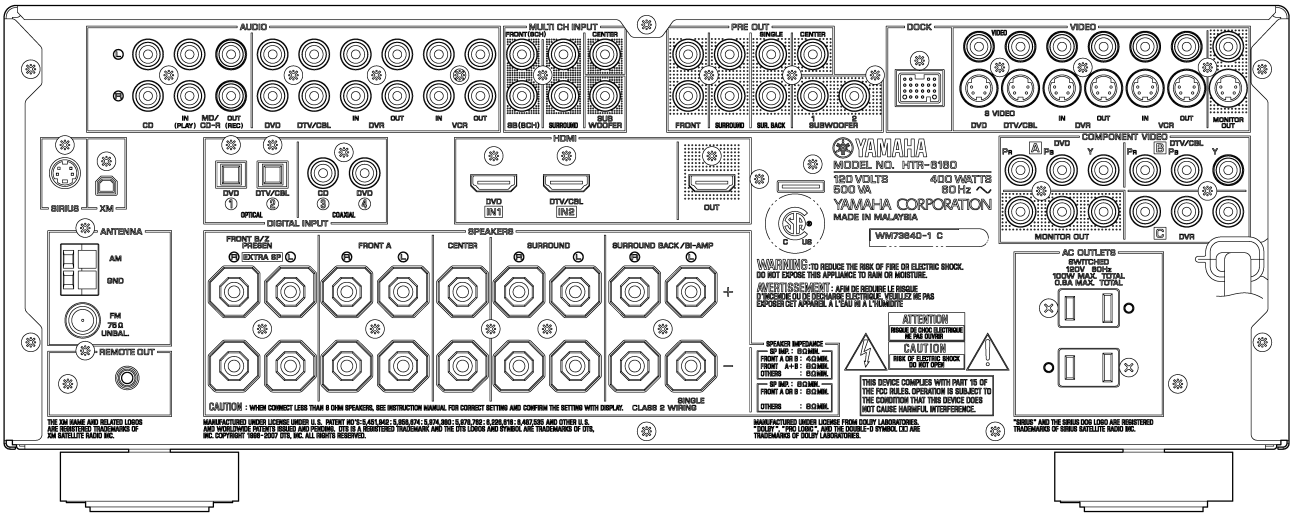


HTR-6160 (F model)

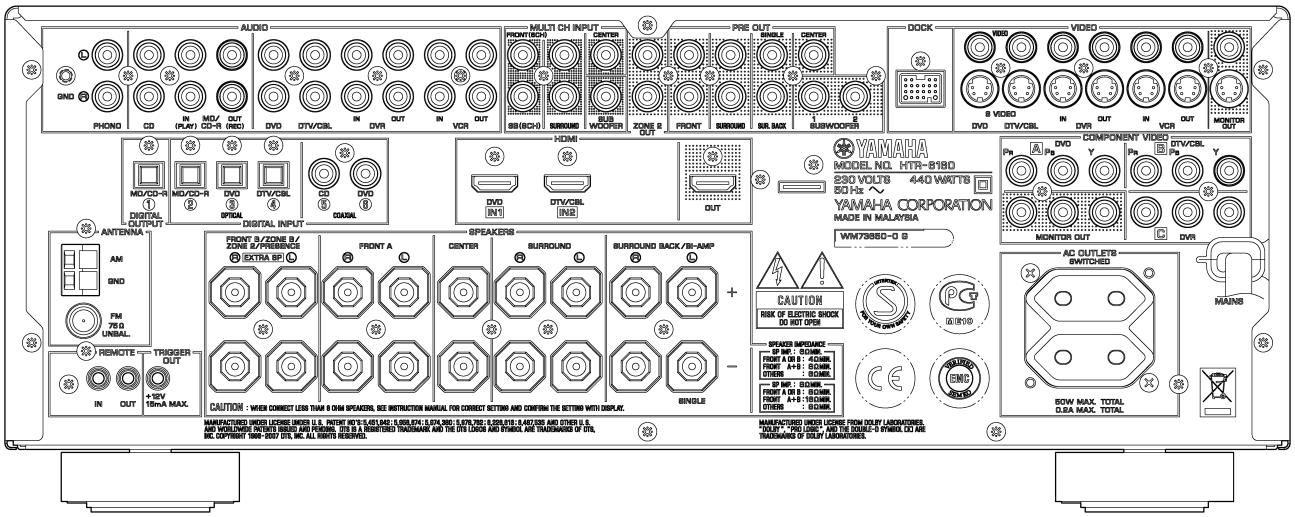

DSP-AX763 (B model)

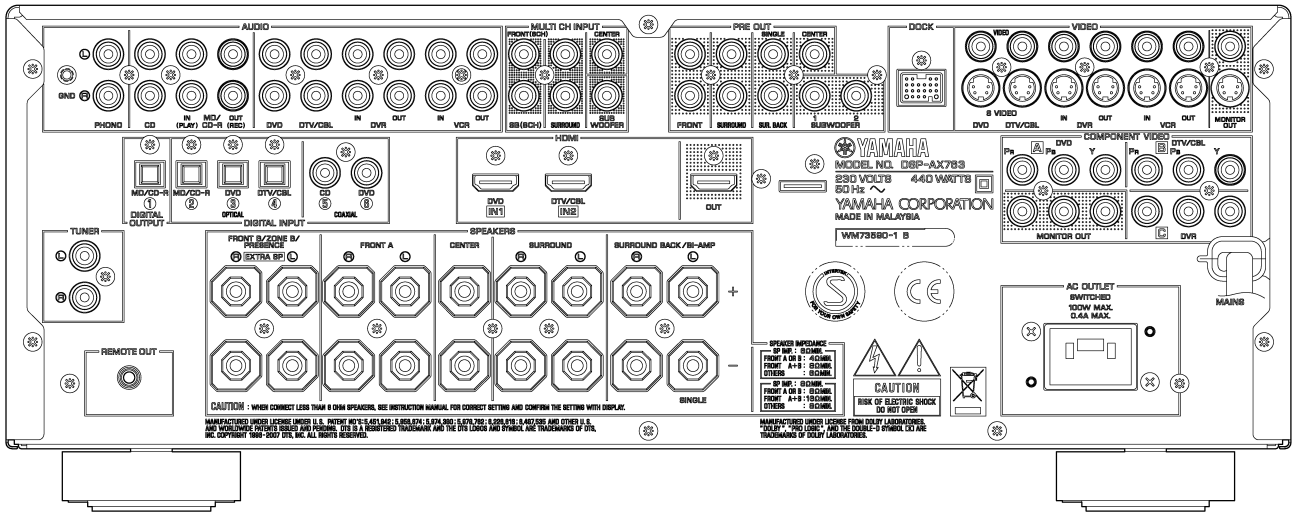


DSP-AX763 (J model)

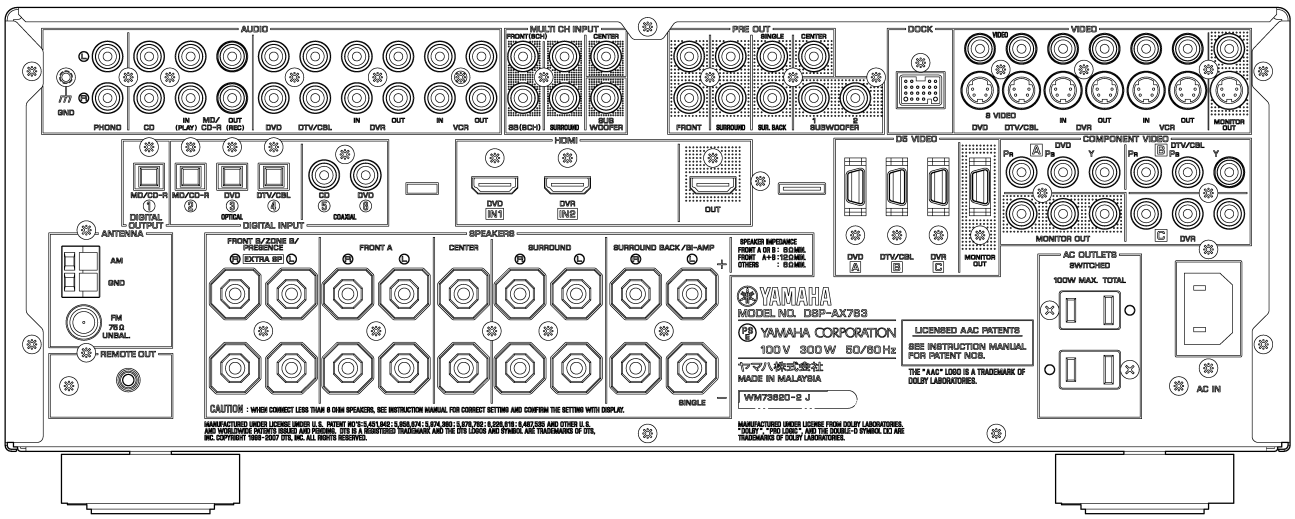


■ REMOTE CONTROL PANELS


- **RAV285**
  RX-V663 (U, C models)
  HTR-6160 (U, C models)

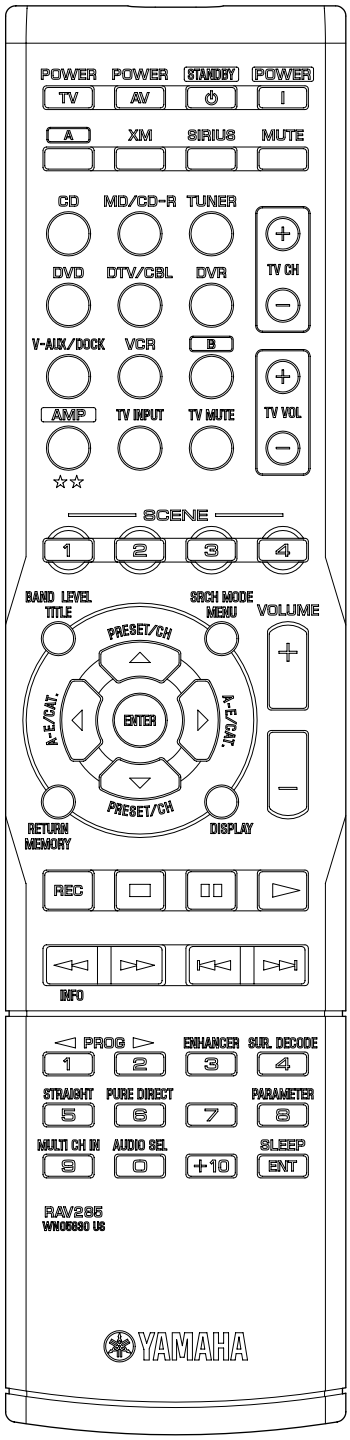

- **RAV330**
  RX-V663 (R, T, A, L models)
  DSP-AX763 (J model)

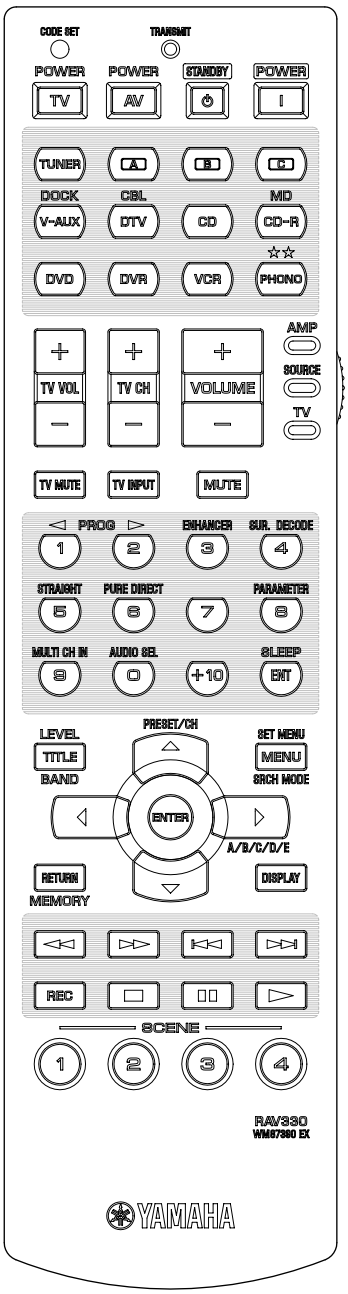

- **RAV372**
  RX-V663 (K, G, E, F models)
  HTR-6160 (F model)
  DSP-AX763 (B model)

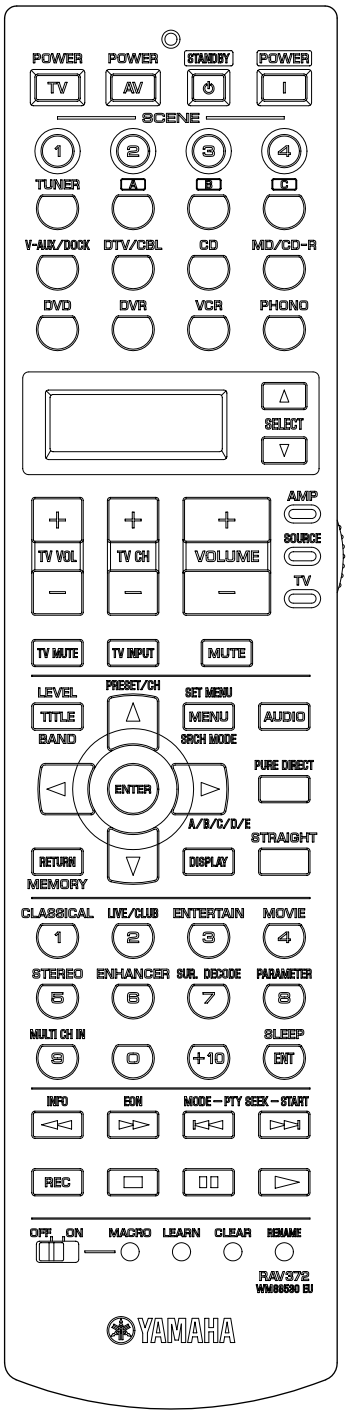

■ SPECIFICATIONS / 参考仕様

■ Audio Section / オーディオ部

Minimum RMS Output Power (Power Amp. Section) / 定格出力 (パワーアンプ部)
[RX-V663/DSP-AX763] (20 Hz to 20 kHz)
U, C, R, T, K, A, B, G, E, F, L models (0.06 % THD, 8 ohms)
J model (0.09 % THD, 6 ohms)
FRONT L/R ..... 95 W + 95 W
CENTER ..... 95 W
SURROUND L/R ..... 95 W + 95 W
SURROUND BACK L/R ..... 95 W + 95 W
[HTR-6160] (1 kHz, 0.7 % THD, 8 ohms)
FRONT L/R ..... 110 W + 110 W
CENTER ..... 110 W
SURROUND L/R ..... 110 W + 110 W
SURROUND BACK L/R ..... 110 W + 110 W

Maximum Power / 実用最大出力 (JEITA, 1 kHz, 10 % THD)
FRONT L/R
R, T, K, L models (8 ohms) ..... 135 W + 135 W
J model (6 ohms) ..... 135 W + 135 W
CENTER
R, T, K, L models (8 ohms) ..... 135 W
J model (6 ohms) ..... 135 W
SURROUND L/R
R, T, K, L models (8 ohms) ..... 135 W + 135 W
J model (6 ohms) ..... 135 W + 135 W
SURROUND BACK L/R
R, T, K, L models (8 ohms) ..... 135 W + 135 W
J model (6 ohms) ..... 135 W + 135 W

Max. Power Per Channel
(SP impedance set: 8 ohms minimum, 1 kHz, 0.7 % THD, 4 ohms)
B, G, E, F, L models
FRONT L/R ..... 145 W + 145 W
CENTER ..... 145 W
SURROUND L/R ..... 145 W + 145 W
SURROUND BACK L/R ..... 145 W + 145 W

IEC Power (1 kHz, 0.06 % THD, 8 ohms)
B, G, E, F, L models
FRONT L/R ..... 105 W + 105 W

Dynamic Power Per Channel / ダイナミックパワー (IHF)
FRONT L/R (8/6/4/2 ohms)
U, C, R, T, K, A, B, G, E, F, L models ..... 130/165/195/240 W
J model ..... –/135/165/210 W

Dynamic Headroom
U, C models (8 ohms) ..... 1.4 dB

Damping Factor / ダンピングファクタ
FRONT L/R (20 Hz to 20 kHz, SPEAKER-A, 8 ohms) ..... 120 or more

Input Sensitivity/Input Impedance / 入力感度／入力インピーダンス (1 kHz, 100 W/8 ohms)
PHONO (MM)
R, T, K, A, B, G, E, F, L, J models ..... 3.5 mV / 47 k-ohms
CD, etc. ..... 200 mV / 47 k-ohms
MULTI CH INPUT
FRONT L/R, CENTER, SURROUND L/R, SURROUND BACK L/R, SUBWOOFER
..... 200 mV / 47 k-ohms

Maximum Input Signal Level / 最大許容入力 (1 kHz)
PHONO (MM) (0.1 % THD)
R, T, K, A, B, G, E, F, L, J models ..... 60 mV or more
CD, etc. (Effect on) (0.5 % THD) ..... 2.3 V or more

Output Level/Output Impedance / 出力電圧／出力インピーダンス
REC OUT ..... 200 mV / 1.2 k-ohms
PRE OUT (FRONT L/R, CENTER, SURROUND L/R, SURROUND BACK L/R) ..... 1.0 V / 1.2 k-ohms
SUBWOOFER (2ch stereo & FRONT L/R SP: small)
..... 2.0 V / 1.2 k-ohms
[RX-V863 (U, C, R, T, K, A, G, E, F, L models)**/HTR-6180** (U, F models)**]**
ZONE2 OUT ..... 200 mV / 1.2 k-ohms

Headphone Jack Rated Output/Impedance / ヘッドフォン出力／出力インピーダンス
CD, etc. (1 kHz, 50 mV, 8 ohms) ..... 150 mV / 100 ohms

Frequency Response / 周波数特性 (10 Hz to 100 kHz)
CD, etc. to FRONT L/R (Pure direct) ..... +0/-3.0 dB

RIAA Equalization Deviation / RIAA偏差 (20 Hz to 20 kHz)
PHONO (MM)
R, T, K, A, B, G, E, F, L, J models ..... 0 ± 0.5 dB

Total Harmonic Distortion / 全高調波歪率 (20 Hz to 20 kHz)
PHONO (MM) to REC OUT (1 V)
R, T, K, A, B, G, E, F, L, J models ..... 0.02 % or less
CD, etc. (2ch stereo) to FRONT L/R SP OUT (50 W, 8 ohms)
..... 0.06 % or less

Signal to Noise Ratio / 信号対雑音比 (IHF-A network)
PHONO (MM) (Input shorted) to REC OUT
R, T models (5 mV) ..... 86 dB or more
K, A, B, G, E, F, L models (5 mV) ..... 81 dB or more
J model (2.5 mV) ..... 80 dB or more
CD, etc. (Effect off) (Input shorted) to SP OUT
250 mV ..... 100 dB or more

Residual Noise / 残留ノイズ (IHF-A network)
FRONT L/R, SP OUT ..... 150 µV or less

Channel Separation / チャンネルセパレーション (1 kHz/10 kHz)
PHONO (Input shorted)
R, T, K, A, B, G, E, F, L, J models ..... 60 dB or more/55 dB or more
CD, etc. (Input 5.1 k-ohms shorted) ..... 60 dB or more/45 dB or more

Volume Control / 可変範囲／ステップ
..... MUTE/-80 dB to +16.5 dB/0.5 dB step

Tone Control Characteristics / トーンコントロール特性
BASS
Boost/Cut ..... ± 10 dB/2 dB (step 50 Hz)
Turnover frequency ..... 350 Hz
TREBLE
Boost/Cut ..... ± 10 dB/2 dB (step 20 kHz)
Turnover frequency ..... 3.5 kHz

Filter Characteristics / フィルター特性
(fc=40/60/80/90/100/110/120/160/200 Hz)
FRONT, CENTER, SURROUND, SURROUND BACK small
(H.P.F.) ..... 12 dB/oct.
SUBWOOFER (L.P.F.) ..... 24 dB/oct.

■ Video Section / ビデオ部

Video Signal Type / ビデオ信号方式
Gray back
U, C, R, K, J models ..... NTSC
T, A, B, G, E, F, L models ..... PAL
Video conversion ..... NTSC/PAL

Composite Video Signal Level / コンポジットビデオ信号
..... 1 Vp-p / 75 ohms

S-Video Signal Level / Sビデオ信号
Y ..... 1 Vp-p / 75 ohms
C ..... 0.286 Vp-p / 75 ohms

Component Video Signal Level / コンポーネントビデオ信号
Y ..... 1 Vp-p / 75 ohms
Cb/Cr ..... 0.7 Vp-p / 75 ohms

D5-Video Signal Level / D5ビデオ信号 (J model)
Y ..... 1 Vp-p / 75 ohms
Cb/Cr ..... 0.7 Vp-p / 75 ohms

Video Maximum Input Level / ビデオ最大許容入力
VIDEO CONV. OFF ..... 1.5 Vp-p or more

Video Signal to Noise Ratio / ビデオ信号対雑音比
VIDEO CONV. OFF ..... 50 dB or more

Monitor Out Frequency Response / モニターアウト周波数帯域
(VIDEO CONV. OFF)
Component video signal level ..... 5 Hz to 100 MHz, -3 dB
D5-video signal level (J model) ..... 5 Hz to 100 MHz, -3 dB

HDMI ..... Ver. 1.3a

■ FM Section / FM部 [U, C, R, T, K, A, G, E, F, L, J models]

Tuning Range / 受信周波数範囲
U, C models ..... 87.5 to 107.9 MHz
R, L models ..... 87.5 to 108.0 / 87.50 to 108.00 MHz
T, K, A, G, E, F models ..... 87.50 to 108.00 MHz
J model ..... 76.0 to 90.0 MHz

50dB Quieting Sensitivity / 50 dB SN感度 (IHF, 1 kHz, 100 % MOD.)
Mono ..... 2.8 µV (20.2 dBf)

Signal to Noise Ratio / 信号対雑音比 (IHF)
Mono / Stereo ..... 73 dB / 70 dB

Harmonic Distortion / 歪率 (1 kHz)
Mono / Stereo ..... 0.5 % / 0.5 %

Antenna Input / アンテナ入力 ..... 75 ohms unbalanced

■ AM Section / AM部 [U, C, R, T, K, A, G, E, F, L, J models]

Tuning Range / 受信周波数範囲
U, C models ..... 530 to 1,710 kHz
R, L models ..... 530 to 1,710 / 531 to 1,611 kHz
T, K, A, G, E, F, J models ..... 531 to 1,611 kHz

Antenna Input / アンテナ入力 ..... Loop antenna

■ General / 総合

Power Supply / 電源電圧
U, C models ..... AC 120 V, 60 Hz
R model ..... AC 110/120/220/230-240 V, 50/60 Hz
T model ..... AC 220 V, 50 Hz
K model ..... AC 220 V, 60 Hz
A model ..... AC 240 V, 50 Hz
B, G, E, F models ..... AC 230 V, 50 Hz
L model ..... AC 220/230-240 V, 50/60 Hz
J model ..... AC 100 V, 50/60 Hz

Power Consumption / 消費電力
U, C models ..... 400 W / 500 VA
R, T, K, A, B, G, E, F, L models ..... 440 W
J model ..... 300 W

Standby Power Consumption (reference data) / 待機時消費電力(参考値)
U, C models ..... 0.8 W
R, T, K, A, B, G, E, F, L, J models ..... 0.1 W

Maximum Power Consumption (6ch drive, 10 % THD)
R model ..... 850 W

AC Outlets / ACアウトレット
2 switched outlets
U, C, T, J models ..... 100 W max. total
R, G, E, F, L models ..... 50 W max. total
1 switched outlet
A, B models ..... 100 W max.

Dimensions / 寸法 (W x H x D)
..... 435 x 171 x 393 mm (17-1/8" x 6-3/4" x 15-1/2")

Weight / 質量
..... 11.8 kg (26 lbs)

Finish / 仕上げ
[RX-V663]
Gold color ..... R, T models
Black color ..... U, C, R, A, G, E, F models
Titanium color ..... K, G, E, F, L models
[HTR-6160]
Black color ..... U, C, F models
Titanium color ..... F model
[DSP-AX763]
Gold color ..... J model
Black color ..... B, J models
Titanium color ..... B model

Accessories / 付属品
Remote control x 1, Batteries (R6, AA, UM-3) x 2 (U, C, R, T, A, L, J models) / (R03, AAA, UM-4) x 4 (K, B, G, E, F models), Indoor FM antenna x 1 (U, C, R, T, K, A, G, E, F, L, J models), AM loop antenna x 1 (U, C, R, T, K, A, G, E, F, L, J models), Optimizer microphone x 1, Power cable x 1 (J model)

* Specifications are subject to change without notice due to product improvements.

※ 参考仕様および外観は予告なく変更されることがあります。

U ..... U.S.A. model
C ..... Canadian model
R ..... General model
T ..... Chinese model
K ..... Korean model
A ..... Australian model
B ..... British model
G ..... European model
E ..... South European model
F ..... Russian model
L ..... Singapore model
J ..... Japanese model

Manufactured under license from Dolby Laboratories.
"Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.
ドルビーラボラトリーズからの実施権に基づき製造されています。「ドルビー」、「PRO LOGIC」、「Surround EX」およびダブルD記号は、ドルビーラボラトリーズの商標です。

DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademark of DTS, Inc.
DTSはDTS社の登録商標です。また、DTSロゴ、記号、およびDTS-HD、DTS-HD Master AudioはDTS社の商標です。

iPod™
"iPod" is a trademark of Apple Inc., registered in the U.S. and other countries.
iPodは、米国およびその他の国々で登録されたApple Inc.の商標または登録商標です。

Bluetooth™
Bluetooth is a registered trademark of the Bluetooth SIG and is used by Yamaha in accordance with a license agreement.
Bluetoothは、Bluetooth SIGの登録商標でありヤマハはライセンスに基づき使用しています。

"HDMI", the "HDMI" logo and "High-Definition Multimedia Interface" are trademarks or registered trademarks of HDMI Licensing LLC.
HDMI、HDMIロゴ、およびHigh-Definition Multimedia Interfaceは、HDMI Licensing, LLCの商標または登録商標です。

x.v.Color™
"x.v.Color" is a trademark of Sony Corporation.
「x.v.Color」は、ソニー株式会社の商標です。

"SILENT CINEMA" is a trademark of Yamaha Corporation.
「サイレントシネマTM　SILENT CINEMATM」はヤマハ株式会社の登録商標です。


The XM name and related logos are registered trademarks of XM Satellite Radio Inc.

Neural Surround™ name and related logos are trademarks owned by Neural Audio Corporation.

©2006 SIRIUS Satellite Radio Inc. "SIRIUS", "SiriusConnect", the SIRIUS dog logo, channel names and logos are trademarks of SIRIUS Satellite Radio Inc.

AACロゴマーク はドルビーラボラトリーズの商標です。

- **DIMENSIONS / 寸法図**

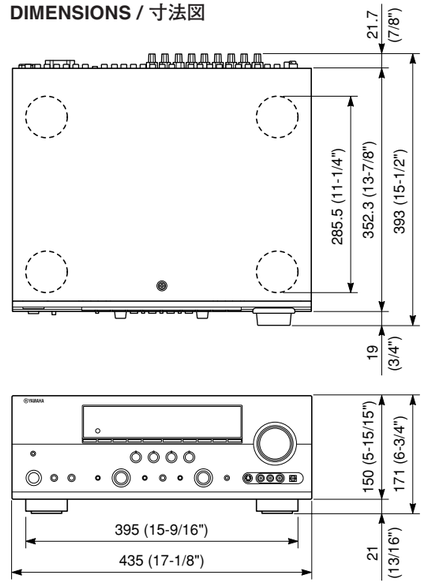

Unit: mm (inch)
単位：mm（インチ）

- **SELECT MENU**

CATEGORY	SOUND FIELD	PARAMETER ＊3 / Decode Type	DSP Level -6 to +3 dB	Init. Delay 1 to 99 ms	Room Size 0.1 to 2.0	Liveness 0 to 10	Sur. Init. Delay 1 to 49 ms	Sur. Room Size 0.1 to 2.0	Sur. Liveness 0 to 10	SB. Init. Delay 1 to 49 ms	SB. Room Size 0.1 to 2.0	SB. Liveness 0 to 10	Rev. Time 1.0 to 5.0 s	Rev. Delay 0 to 250 ms	Rev. Level 0 to 100 %	Dialogue Lift 0 to 5	Center Level 0 to 100 %	Surround L Level 0 to 100 %	Surround R Level 0 to 100 %	Sur.Back Level 0 to 100 %	Presence L Level 0 to 100 %	Presence R Level 0 to 100 %	Direct Auto/Off	Effect Level High/Low	Panorama On/Off	Center Width 0 to 7	Dimension -3 to +3	Center Image 0.0 to 1.0	FOCUS 0 to 8	TruBass 0 to 8	Initialize
CLASSICAL	Hall in Munich		●	●	●	●										●															●
	Hall in Vienna		●	●	●	●										●															●
	Chamber		●	●		●							●	●	●	●															●
LIVE/CLUB	Cellar Club		●	●	●	●										●															●
	The Roxy Theatre		●	●	●	●							●	●	●	●															●
	The Bottom Line		●	●	●	●										●															●
ENTERTAINMENT	Sports		●	●	●		●	●		●	●					●															●
	Action Game		●	●	●		●	●		●	●					●															●
	Roleplaying Game		●	●	●		●	●		●	●					●															●
	Music Video		●	●	●		●	●		●	●					●															●
MOVIE	Standard	● ＊1	●				●	●	●	●	●	●				●															●
	Spectacle	● ＊1	●	●	●		●	●		●	●					●															●
	Sci-Fi	● ＊1	●	●	●		●	●		●	●					●															●
	Adventure	● ＊1	●	●	●		●	●		●	●					●															●
	Drama	● ＊1	●	●	●		●	●		●	●					●															●
	Mono Movie		●	●	●	●							●	●	●	●															●
STEREO	2ch Stereo																						●								●
	7ch Stereo																●	●	●	○	●	●									●
MUSIC ENHANCER	Straight Enhancer																							●							●
	7ch Enhancer																							●							●
SUR. DECODE	Surround Decoder	● ＊2																							△	△	△	▲	■	■	●
STRAIGHT																															

＊1 : Refer to “＊1 Decode Type”. / ＊1 Decode Typeを参照
＊2 : Refer to “＊2 Decode Type”. / ＊2 Decode Typeを参照
＊3 : No display may be provided, depending on parameters. / パラメータによっては表示されない場合もある

○ : Parameters to use vary whether the number of surround back is one or two but parameters are displayed by the same names while only parameter values are changed. / サラウンドバックの数が1つの場合と2つの場合で使用するパラメータは変わるが、パラメータ名は同じ表示でパラメータ値のみを切換えて表す
△ : Setting is possible only when Pro Logic II x Music is selected using decode type. / Decode TypeでPro Logic II x Music（Pro Logic II Music）を選択時のみ設定可
▲ : Setting is possible only when Neo:6 Music is selected using decode type. / Decode TypeでNeo:6 Musicを選択時のみ設定可
■ : Setting is possible only when CS II Cinema/Music is selected using decode type. / Decode TypeでCS II Cinema/Musicを選択時のみ選択可

＊1 Decode Type

Decode Type	PL II x Movie	PL II when Surround Back is None. / Surround BackがNoneの場合はPL II
	Neo:6 Cinema	

＊2 Decode Type

Decode Type	Pro Logic	
	PL II x Movie	PL II when Surround Back is None. / Surround BackがNoneの場合はPL II
	PL II x Music	PL II when Surround Back is None. / Surround BackがNoneの場合はPL II
	PL II x Game	PL II when Surround Back is None. / Surround BackがNoneの場合はPL II
	Neo:6 Cinema	
	Neo:6 Music	
	Neural Sur.	(U, C models)

- **SCENE TEMPLATE**


SCENE name	Contents		Source	Program		NIGHT	Select (Default)	
				Mode	Sub-mode	Mode	U, C models	R, T, K, A, B, G, E, F, L, J models
DVD Viewing	DVD	Movie	DVD	STRAIGHT	–	SYSTEM	O (SCENE 1)	O
DVD Movie Viewing			DVD	MOVIE	Sci-Fi	SYSTEM	O	O (SCENE 1)
DVD Live Viewing		Music Live	DVD	ENTERTAINMENT	Music Video	SYSTEM	O	O
DVR Viewing	DVR		DVR	MOVIE	Drama	SYSTEM	O	O
Disc Hi-Fi Listening	DVD-Audio / SA-CD / CD	Music Disc	DVD	PURE DIRECT	–	SYSTEM	O	O
Music Disc Listening			DVD	STEREO	2ch Stereo	SYSTEM	O	O (SCENE 2)
Disc Listening			DVD	STEREO	7ch Stereo	SYSTEM	O (SCENE 2)	O
CD Hi-Fi Listening	CD	Music Disc	CD	PURE DIRECT	–	SYSTEM	O	O
CD Listening			CD	STEREO	7ch Stereo	SYSTEM	O	O
CD Music Listening			CD	STEREO	2ch Stereo	SYSTEM	O	O
Radio Listening	TUNER/RADIO	FM/AM	FM/AM (TUNER)	MUSIC ENHANCER	7ch Enhancer	SYSTEM	O (SCENE 4)	O (SCENE 4)
XM Listening		XM	XM	MUSIC ENHANCER	7ch Enhancer	SYSTEM	O	–
SIRIUS Listening		SIRIUS	SIRIUS	MUSIC ENHANCER	7ch Enhancer	SYSTEM	O	–
Dock Listening	DAP	iPod	DOCK (V-AUX)	MUSIC ENHANCER	7ch Enhancer	SYSTEM	O	O
		Bluetooth						
TV Viewing	TV		DTV/CBL	STRAIGHT	–	SYSTEM	O (SCENE 3)	O (SCENE 3)
TV Sports Viewing			DTV/CBL	ENTERTAINMENT	Sports	SYSTEM	O	O
Action Game Playing	GAME	Action	V-AUX	ENTERTAINMENT	Action Game	SYSTEM	O	O
RPG Playing		RPG	V-AUX	ENTERTAINMENT	Roleplaying Game	SYSTEM	O	O
LP Record Listening	LP Record	LP	PHONO	PURE DIRECT	–	SYSTEM	–	O

- **SET MENU TABLE / セットメニュー**

CATEGORY	MAIN MENU	SUB MENU	SELECT MENU			VALUE [INITIAL]
AUTO SETUP	Use this feature to automatically adjust speaker and system parameters. 本機に搭載の「YPAO」により、お使いになるスピーカーの配置や性能、お部屋の音響特性を測定し、最適な視聴空間を自動的に設定します。					
MANUAL SETUP	1 BASIC MENU	A) SPEAKER SET	EXTRA	FRONT B		ZONE2 / [FRONT B] / ZONE B / PRNS / NONE
			BASS OUT	BOTH		[BOTH] / SWFR / FRONT
			FRONT	LARGE		[LARGE] / SMALL
			CENTER	SMALL		LARGE / [SMALL] / NONE
			SUR. L/R	SMALL		
			SUR. B	SMLx2		LRGx1 / LRGx2 / SMLx1 / [SMLx2] / NONE
			CROSSOVER	80Hz		40 / 60 / [80] / 90 / 100 / 110 / 120 / 160 / 200 Hz
			SWFR PHASE	NRM		[NRM (normal)] / REV (reverse)
		B) SP LEVEL	FL	−−−−−|−−−−−		-10.0 to +10.0 dB, [0 dB], 0.5 dB step
			FR	−−−−−|−−−−−		
			C	−−−−−|−−−−−		-10.0 to +10.0 dB, [-1.0 dB], 0.5 dB step
			SL	−−−−−|−−−−−		
			SR	−−−−−|−−−−−		
			SBL	−−−−−|−−−−−		
			SBR	−−−−−|−−−−−		
			SWFR	−−−−−|−−−−−		-10.0 to +10.0 dB, [0 dB], 0.5 dB step
			PL	−−−−−|−−−−−		
			PR	−−−−−|−−−−−		
		C) SP DISTANCE	UNIT	feet		feet (ft) / meters (m)
			UNIT: feet — FRONT L	10.0ft		feet: 1.0 to 80.0 ft [10.0 ft], 0.5 ft step
			FRONT R	10.0ft		
			CENTER	8.5ft		feet: 1.0 to 80.0 ft [8.5 ft], 0.5 ft step
			SUR. L	8.0ft		feet: 1.0 to 80.0 ft [8.0 ft], 0.5 ft step
			SUR. R	8.0ft		
			SBL	8.0ft		
			SBR	8.0ft		
			SWFR	10.0ft		feet: 1.0 to 80.0 ft [10.0 ft], 0.5 ft step
			PRNS L	10.0ft		
			PRNS R	10.0ft		
			UNIT: meters — FRONT L	3.00m		meters: 0.30 to 24.00 m [3.00 m], 0.10 m step
			FRONT R	3.00m		
			CENTER	2.60m		meters: 0.30 to 24.00 m [2.60 m], 0.10 m step
			SUR. L	2.40m		meters: 0.30 to 24.00 m [2.40 m], 0.10 m step
			SUR. R	2.40m		
			SBL	2.40m		
			SBR	2.40m		
			SWFR	3.00m		meters: 0.30 to 24.00 m [3.00 m], 0.10 m step
			PRNS L	3.00m		
			PRNS R	3.00m		
		D) TEST TONE	> OFF ON			[OFF] / ON
	2 VOLUME MENU	ADPTV DRC	OFF			AUTO / [OFF]
		ADAPTV DSP	OFF			
		MUTE TYP.	FULL			[FULL] / -20 dB
		MaxVol.	+16.5dB			-30.0 to +15.0 dB / +16.5 dB, [+16.5 dB], 5.0 dB step
		IniVol.	OFF			OFF / MUTE / -80.0 to +16.5 dB, [OFF], 0.5 dB step
	3 SOUND MENU	A) EQUALIZER	EQ SELECT	GEQ		AUTO PEQ / [GEQ] / OFF
				CHANNEL		FRNT L / FRNT R / CENTER / SUR. L / SUR. R / SBL / SBR / SWFR / PRNS L / PRNS R
				63 Hz	−−−−|−−−	-0.6 to +6.0 dB, [0 dB], 0.5 dB step
				160 Hz	−−−−|−−−	
				400 Hz	−−−−|−−−	
				1 kHz	−−−−|−−−	
				2.5 kHz	−−−−|−−−	
				6.3 kHz	−−−−|−−−	
				16 kHz	−−−−|−−−	
				TEST TONE	OFF	[OFF] / ON
		B) LFE LEVEL	SP LFE			-20 to 0 dB, [0 dB], 1 dB step
			HP LFE			
		C) D. RANGE	SP			MIN/AUTO / STD / [MAX]
			HP			
		D) LIPSYNC	HDMI AUTO	OFF		ON / [OFF]
			AUTO	−−− ms		0 to 240 ms, [0 ms], 1 ms step
			MANUAL	0 ms		
		E) EXTD SUR.	EXTD	AUTO		[AUTO] / PLIIxMovie / PLIIxMusic / EX/ES / EX / OFF
	4 INPUT MENU (U, C models) (R, T, K, A, B, G, E, F, L, J models)	A) SIRIUS	Items that can be set. / 設定可能項目 : [2], [3], [5]			
		B) XM	: [2], [3]			
		C) PHONO	: [1], [2], [3], [4]			
		D) TUNER	: [2], [3]			
		E) CD	: [1], [2], [3], [4]			
		F) MD/CD-R	: [1], [2], [3], [4]			
		G) DVD	: [1], [2], [3], [4]			
		H) DTV/CBL	: [1], [2], [3], [4]			
		I) V-AUX	: [1], [2], [3], [4]			
		J) DOCK	: [2], [3], [6]			
		K) BLUETOOTH	: [2], [3], [7]			
		L) DVR	: [1], [2], [3], [4]			
		M) VCR	: [1], [2], [3], [4]			
		N) MULTI CH	: [2], [3], [8], [9], [10]			
		(U, C models)	[1] I/O ASSIGNMENT	COAX. IN	NONE	NONE / CD / DVD
				OPT. IN	NONE	NONE / MD/CD-R / DVD / DTV/CBL
				OPT. OUT	NONE	NONE / MD/CD-R
			[2] INPUT RENAME			Input is possible to 9 characters / 9文字まで入力可能 Input possible Character type / 入力可能文字 Capital / 英大文字: A to Z Small / 英小文字: a to z Figure / 数字: 0 to 9 Space / 空白 Marks / 記号: # * + , - . / : < > ?
			[3] V. TRIM		0.0dB	-6.0 to +6.0 dB, [0.0 dB], 0.5 dB step
			[4] DECODER		AUTO	[AUTO] / DTS
			[5] PARENTAL LOCK			
			[6] CHARGE		AUTO	[AUTO] / OFF
			[7] START PAIRING			
			[8] BGV		LAST	[LAST] / DVD, DTV/CBL, DVR, VCR, V-AUX / OFF
			[9] INPUT CH		6ch	[6ch] / 8ch
			[10] FRONT		DVD	CD / MD/CD-R / [DVD] / DTV/CBL / DVR / VCR / V-AUX ＊ Setting is possible only when 8ch is selected using [9 (INPUT CH)]. / [9 (INPUT CH)] で 8ch 選択時のみ設定可
	5 OPTION MENU	A) DISPLAY SET	DIMMER	0		-4 to 0, [0], 1 step
			OSD SHIFT	0		-5 (downward) to +5 (upward), [0], 1 step
			OSD-SOURCE	30s		ON / 10s / 30s
			OSD-AMP	30s		
			FL SCROLL	COTN		[CONT] / ONCE
		B) VIDEO SET	VIDEO CONV.	ON		[ON] / OFF
		C) MEMORY GUARD	MEM. GUARD	OFF		[OFF] / ON
		D) INIT. CONFIG	A. SELECT	AUTO		[AUTO] / LAST
			DECODER	AUTO		
			EXTD SUR.	AUTO		
		E) HDMI SET	HDMI CONTROL	OFF		ON / [OFF]
		(J model)	S. AUDIO	V663		[V663 / 6160 / AX763] / OTHER
			STANDBY THROUGH	OFF		ON / [OFF]
	(RX-V663, HTR-6160: U, F models)	F) ZONE2 SET	MAX VOL.	+16.5dB		-30.0 to +15.0 dB / +16.5 dB, [+16.5 dB], 5.0 dB step
			INI. VOL.	OFF		OFF / MUTE / -80.0 to +16.5 dB, [OFF], 0.5 dB step
SIGNAL INFO	AUDIO	FORMAT (Signal format)				Analog / − − − / − − − / − − − / − − − / − − − / − − −
		SAMPLING				
		CHANNEL				
		BITRATE				3/2/0.1 (front/surround/LFE)
		DIALOG				
		FLAG				DTS, Dolby Digital, or PCM
	VIDEO	HDMI SIGNAL				xxx –> xxx
		HDMI RES.				1080p –> 1080p
		ANALOG RES.				480/576i
		HDMI ERROR (HDMI MESSAGE)				DEVICE OVER / HDCP ERROR / Out of Res.


■ INTERNAL VIEW

- **Top view**

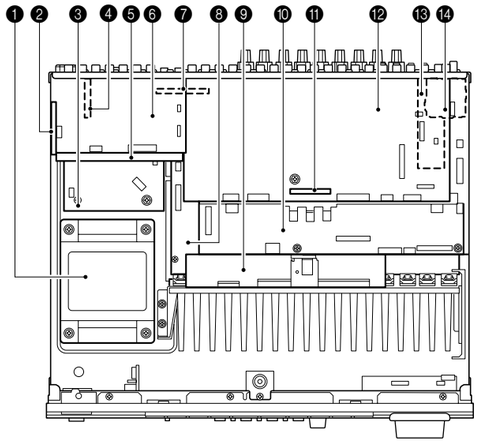

❶ POWER TRANSFORMER
❷ FUNCTION (6) P.C.B.
❸ FUNCTION (3) P.C.B.
❹ FUNCTION (2) P.C.B. (J model)
❺ VIDEO (2) P.C.B.
❻ VIDEO (1) P.C.B.
❼ FUNCTION (4) P.C.B. (R, L models)
❽ MAIN (1) P.C.B.
❾ MAIN (2) P.C.B.
❿ DIGITAL P.C.B.
⓫ FUNCTION (9) P.C.B.
⓬ FUNCTION (1) P.C.B
⓭ Tuner (U, C, R, T, K, A, G, E, F, L, J models)
⓮ FUNCTION (5) P.C.B. (B model)
⓯ OPERATION (2) P.C.B.
⓰ OPERATION (3) P.C.B.
⓱ OPERATION (1) P.C.B.
⓲ OPERATION (4) P.C.B.
⓳ OPERATION (5) P.C.B.

- **Front view**

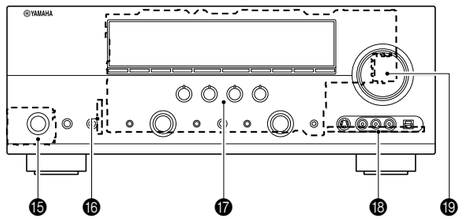

■ DISASSEMBLY PROCEDURES / 分解手順

(Remove parts in the order as numbered.)
Disconnect the power cable from the AC outlet.

1. Removal of Top Cover
a. Remove 4 screws (①), 5 screws (②) and screw (③). (Fig. 1)
b. Slide the top cover rearward to remove it. (Fig. 1)

2. Removal of Front Panel Unit
a. Remove 2 knobs. (Fig. 1)
b. Remove screw (④) and then remove the support top. (Fig. 1)
c. Remove 6 screws (⑤). (Fig. 1)
d. Remove the front panel unit. (Fig. 1)

3. Removal of Sub Chassis Unit
a. Remove 2 push rivets (⑥). (Fig. 1)
b. Remove the plate side L and plate side R. (Fig. 1)
c. Remove 2 screws (⑦). (Fig. 1)
d. Remove CB30, CB46, CB63, CB201, CB221 and CB422. (Fig. 1)
e. Remove the sub chassis unit. (Fig. 1)

（番号順に部品を取り外してください。）
AC電源コンセントから、電源コードを抜いてください。

1. トップカバーの外し方
a. ①のネジ4本、②のネジ5本、③のネジ1本を外します。(Fig. 1)
b. トップカバーを後方へスライドさせ、取り外します。(Fig. 1)

2. フロントパネルユニットの外し方
a. ノブを2個取り外します。(Fig. 1)
b. ④のネジ1本を外し、サポートトップを取り外します。(Fig. 1)
c. ⑤のネジ6本を外します。(Fig. 1)
d. フロントパネルユニットを取り外します。(Fig. 1)

3. サブシャーシユニットの外し方
a. ⑥のプッシュリベット2本を外します。(Fig. 1)
b. プレートサイドLおよびプレートサイドRを取り外します。(Fig. 1)
c. ⑦のネジ2本を外します。(Fig. 1)
d. CB30、CB46、CB63、CB201、CB221、CB422を外します。(Fig. 1)
e. サブシャーシユニットを取り外します。(Fig. 1)

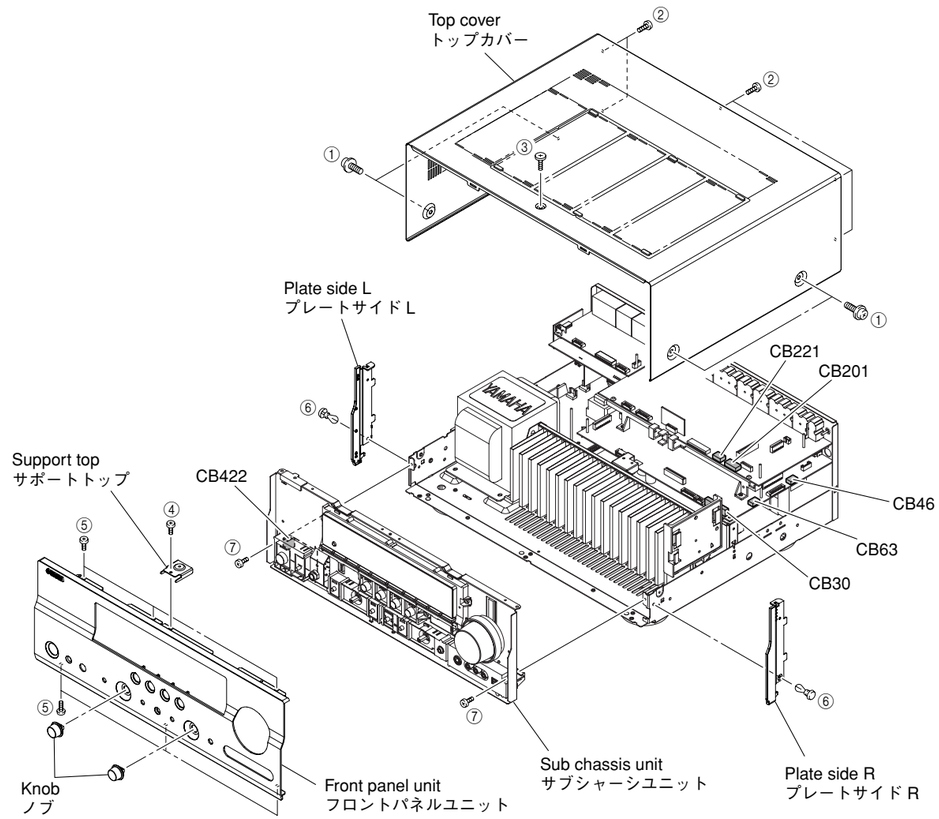


Fig. 1

4. Removal of FUNCTION (1) P.C.B.

a. Remove 2 push rivets (⑧). (Fig. 2)
b. Remove 10 screws (RX-V663: U, C, R, T, K, A, G, E, F, L models / HTR-6160: U, F models) / 9 screws (HTR-6160: C model / DSP-AX763: B model) (⑨). (Fig. 3)
c. Remove CB205, CB206, CB231, CB232, CB242 (C, R, T, K, A, G, E, F, L models), CB243 (DSP-AX763: B model) and CB302. (Fig. 2)
d. Remove the FUNCTION (1) P.C.B.. (Fig. 2)

5. Removal of DIGITAL P.C.B.

a. Remove 2 screws (⑩). (Fig. 2)
b. Remove 9 screws (⑪). (Fig. 3)
c. Remove CB31-33, CB62 and CB80-82. (Fig. 2)
d. Remove the DIGITAL P.C.B.. (Fig. 2)

4. FUNCTION(1)P.C.B.の外し方

a. ⑧のプッシュリベット2本を外します。(Fig. 2)
b. ⑨のネジ9本を外します。(Fig. 3)
c. CB205、CB206、CB231、CB232、CB242、CB302を外します。(Fig. 2)
d. FUNCTION(1)P.C.B. を取り外します。(Fig. 2)

5. DIGITAL P.C.B.の外し方

a. ⑩のネジ2本を外します。(Fig. 2)
b. ⑪のネジ9本を外します。(Fig. 3)
c. CB31-33、CB38、CB62、CB80-82を外します。(Fig. 2)
d. DIGITAL P.C.B.を取り外します。(Fig. 2)


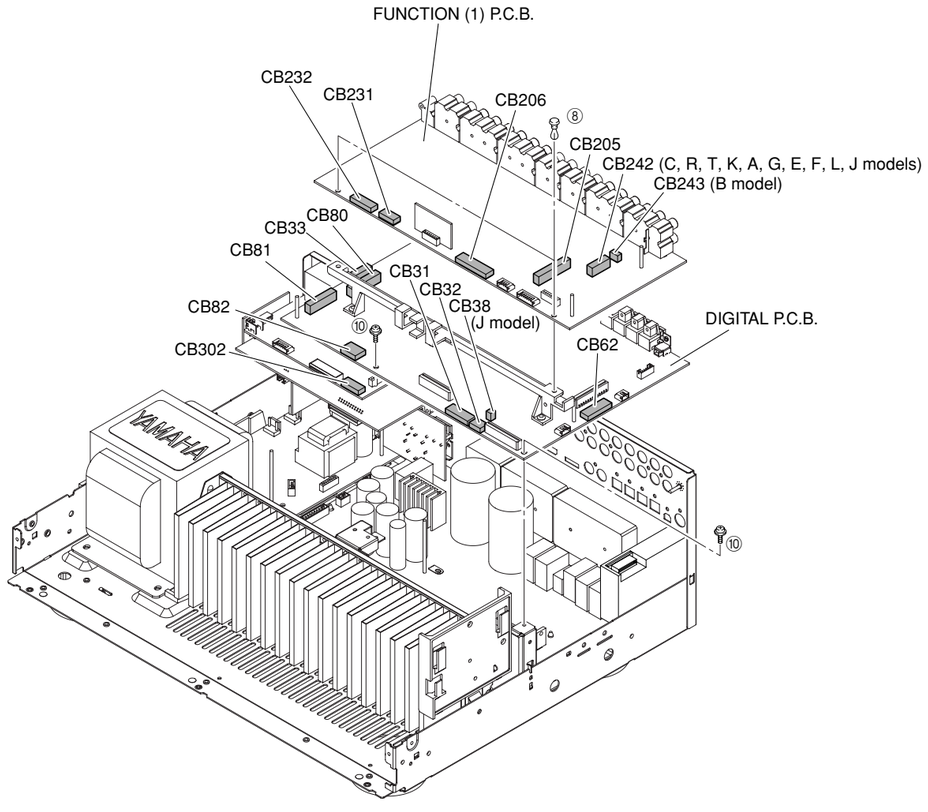


Fig. 2

RX-V663 (U, C models)
HTR-6160 (U, C models)

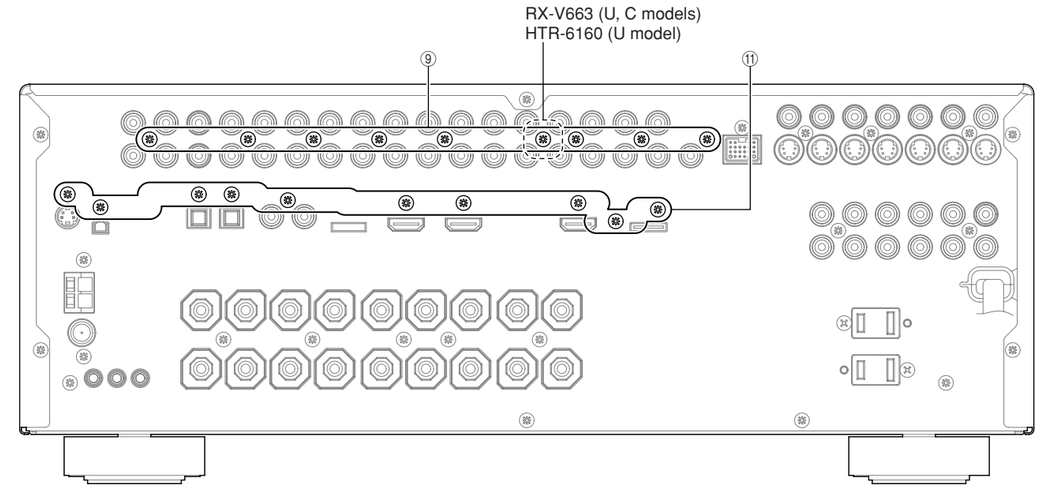

RX-V663 (R, T, K, A, G, E, F, L models)
HTR-6160 (F model)
DSP-AX763 (B, J models)

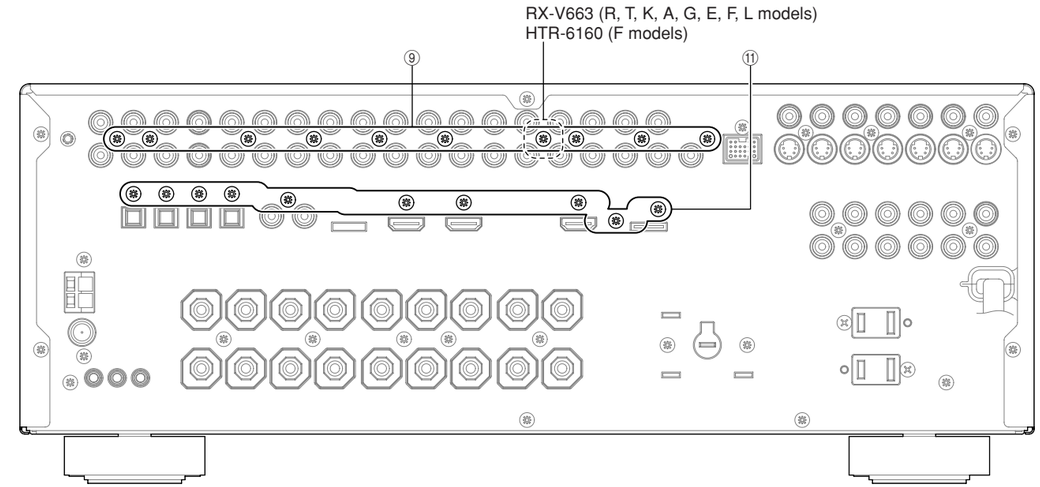


Fig. 3

6. Removal of VIDEO (1) and (2) P.C.B.s

a. Remove 2 screws (⑫) and then remove the FUNCTION (6) P.C.B. which is connected directly to the VIDEO (1) and (2) P.C.B.s with board to board connectors. (Fig. 4)
b. Remove 4 screws (⑬). (Fig. 5)
c. Remove CB303. (Fig. 4)
d. Remove the VIDEO (1) P.C.B.. (Fig. 4)
e. Remove 3 screws (⑭). (Fig. 5)
f. Remove the VIDEO (2) P.C.B.. (Fig. 4)

6. VIDEO(1)、(2)P.C.B.の外し方

a. ⑫のネジ2本を外し、FUNCTION(6)P.C.B.を取り外します。(Fig. 4)
ただし、FUNCTION(6)P.C.B.は、VIDEO(1)、(2)P.C.B.に基板対基板コネクターで直接接続されています。(Fig. 4)
b. ⑬のネジ4本を外します。(Fig. 5)
c. CB303を外します。(Fig. 4)
d. VIDEO(1)P.C.B.を取り外します。(Fig. 4)
e. ⑭のネジ6本を外します。(Fig. 5)
f. VIDEO(2)P.C.B.を取り外します。(Fig. 4)

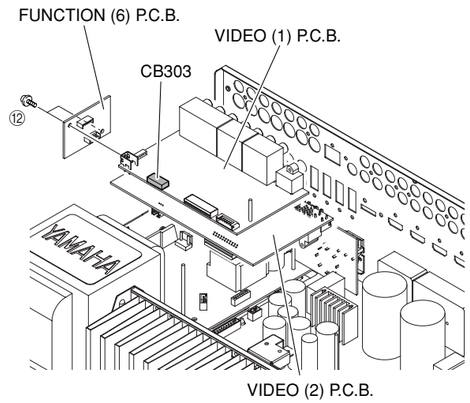


Fig. 4

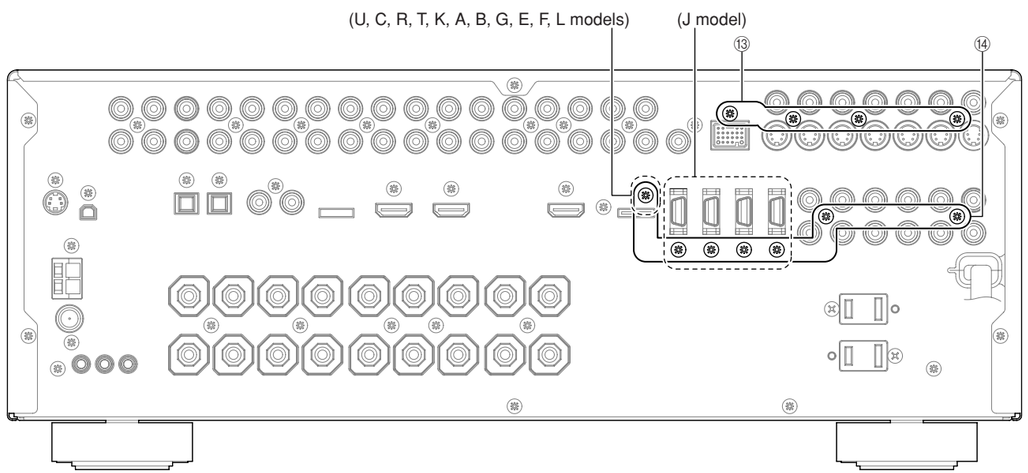


Fig. 5

7. Removal of AM/FM Tuner (U, C, R, T, K, A, G, E, F, L models)

a. Remove 2 screws (⑮). (Fig. 6)
b. Remove the AM/FM tuner. (Fig. 6)

7. AM/FMチューナーの外し方

a. ⑮のネジ2本を外します。(Fig. 6)
b. AM/FMチューナーを取り外します。(Fig. 6)

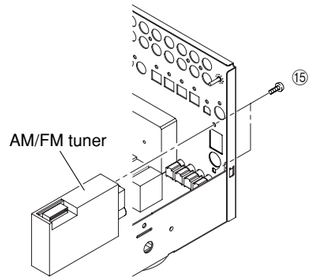


Fig. 6

8. Removal of FUNCTION (5) P.C.B. (B model)

a. Remove screw (⑯). (Fig. 7)
b. Remove the FUNCTION (5) P.C.B.. (Fig. 7)

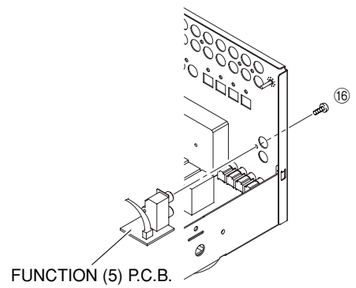


Fig. 7

9. Removal of Amp Unit

a. Remove 2 screws (⑰), screw (⑱), 2 screws (⑲) and screw (⑳). (Fig. 8)
b. Remove 6 screws (㉑). (Fig. 8)
c. Remove CB100, CB101 and CB251. (Fig. 8)
d. Remove the MAIN (1) and (2) P.C.B.s together with heat sink. (Fig. 8)

9. アンプユニットの外し方

a. ⑰のネジ2本、⑱のネジ1本、⑲のネジ2本、⑳のネジ1本を外します。(Fig. 8)
b. ㉑のネジ6本を外します。(Fig. 8)
c. CB100、CB101、CB251を外します。(Fig. 8)
d. MAIN(1)、(2)P.C.B.をヒートシンクと一緒に取り外します。(Fig. 8)

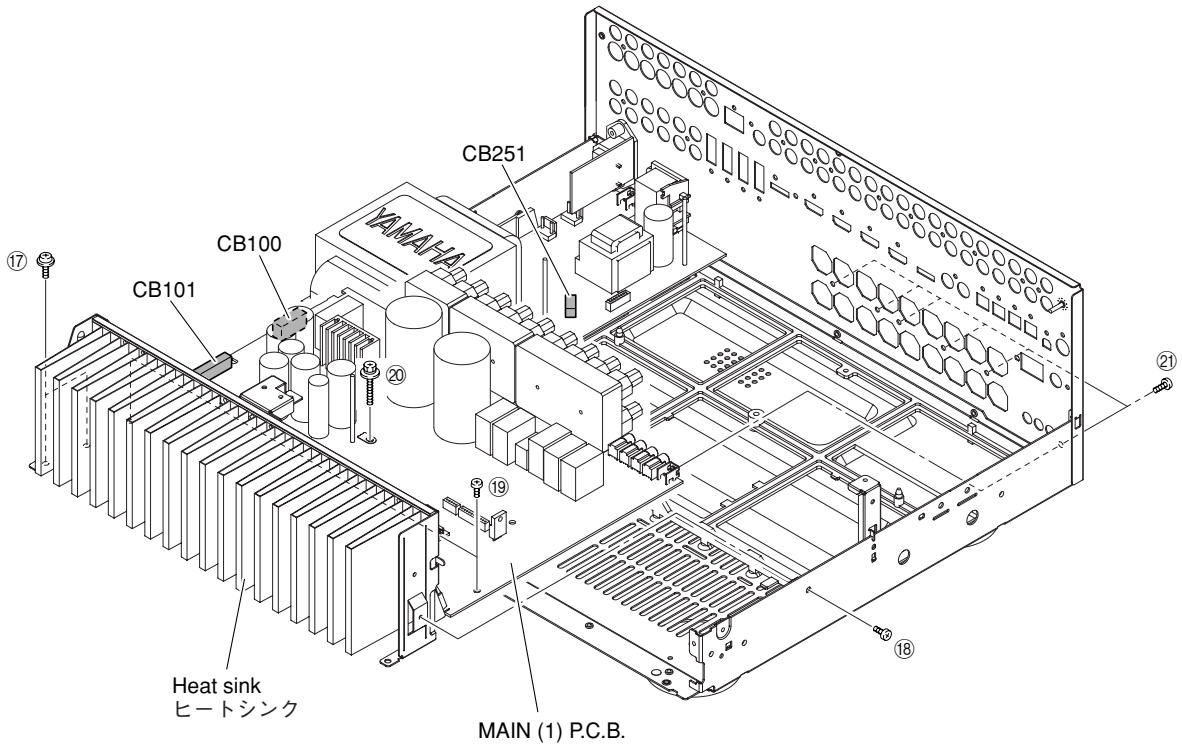


Fig. 8

When checking the P.C.B.:

- Put the rubber sheet and cloth over the equipment. Then place the FUNCTION(1) P.C.B. upside down on the cloth and check it. (Fig. 9)
- Reconnect all cables (connectors) that have been disconnected.
- When connecting the flexible flat cable, be careful with polarity.
- Be sure to use the extension cable for servicing for the following section. (Fig. 9)
  FUNCTION (1) P.C.B. CB205–DIGITAL P.C.B. CB61:
  MF125400 (25P, 400mm, P=1.25)
- In this unit, the ground of P.C.B.s shown below is connected to the rear panel and chassis.
  When FUNCTION (1) P.C.B. is removed from the rear panel and chassis, connect the ground point to the rear panel or chassis, using a ground lead or the like. (Fig. 9)
  FUNCTION (1) P.C.B.: PJ201 (PHONO)
  FUNCTION (1) P.C.B.: PJ203 (DVD)
  FUNCTION (1) P.C.B.: PJ209 (PRE OUT)
  FUNCTION (1) P.C.B.: PJ294 (SUBWOOFER2)

P.C.B.チェックをする場合には：

- 本機の上にゴムシートと布を敷き、その上にFUNCTION(1)P.C.B.を裏返しに置いてチェックします。(Fig. 9)
- 外したケーブル(コネクター)をすべて接続します。
- フラットケーブルを接続する際、極性に注意してください。
- 次の区間は、サービス用延長ケーブルを使用してください。(Fig. 9)
  FUNCTION(1)P.C.B. CB205ーDIGITAL P.C.B. CB61:
  MF125400(25P、400mm、P=1.25)
- 本機ではP.C.B.のアースがリアパネルおよびシャーシに接続されています。
  FUNCTION(1)P.C.B.をリアパネルおよびシャーシより取り外した場合、リード線等でアースポイントをリアパネルまたはシャーシに接続してください。(Fig. 9)
  FUNCTION(1)P.C.B.：PJ201(PHONO)
  FUNCTION(1)P.C.B.：PJ203(DVD)
  FUNCTION(1)P.C.B.：PJ209(PRE OUT)
  FUNCTION(1)P.C.B.：PJ294(SUBWOOFER2)

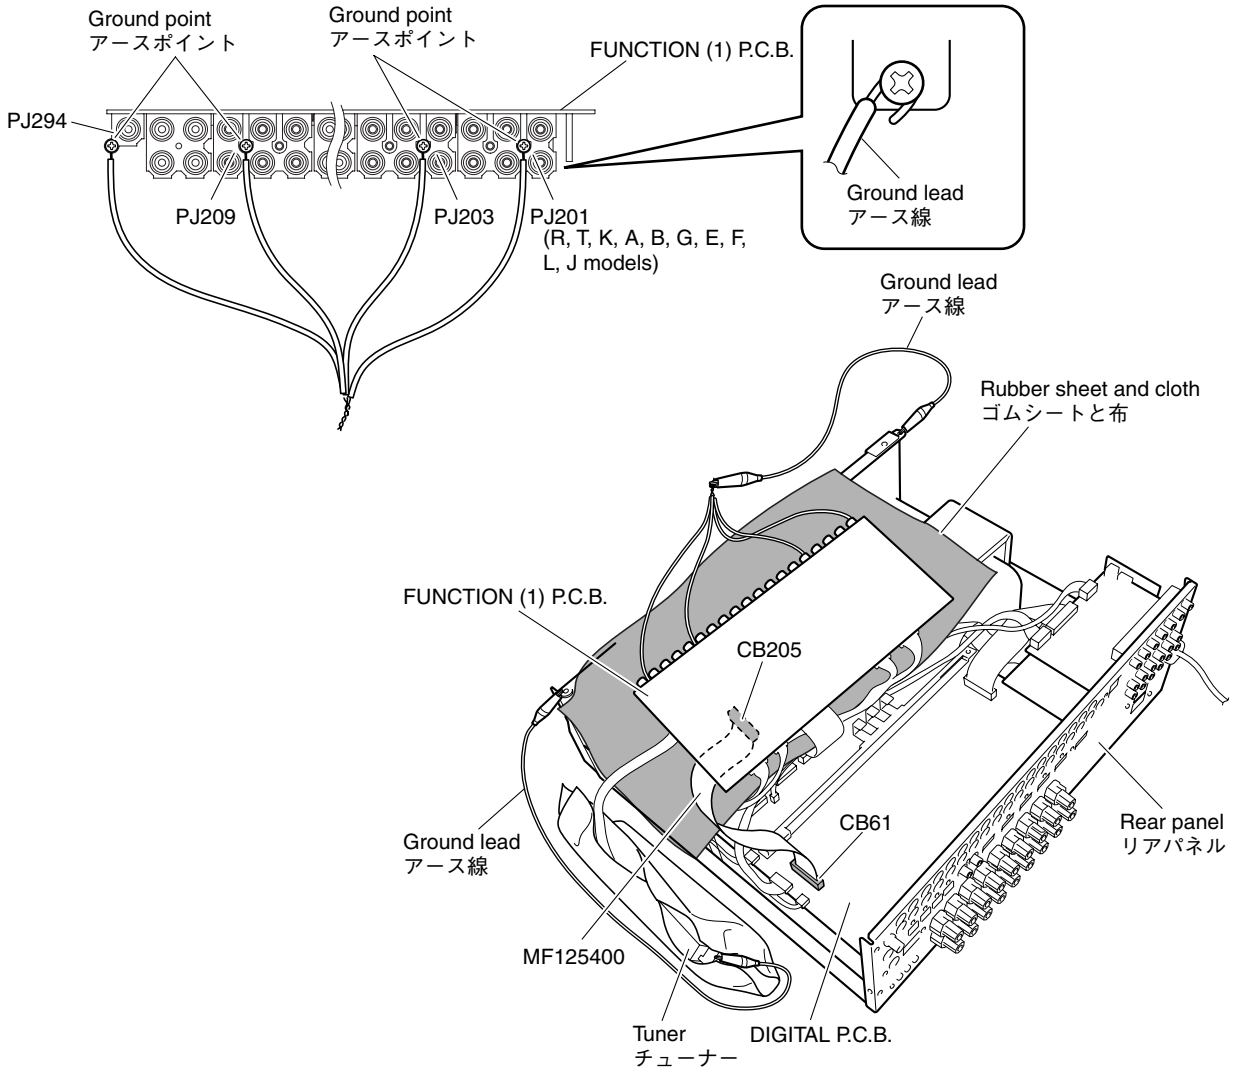


Fig. 9

When checking the P.C.B.:

- Put the rubber sheet and cloth over the equipment. Then place the FUNCTION (1) and DIGITAL P.C.B.s upside down on the cloth and check it. (Fig. 10)
- Reconnect all cables (connectors) that have been disconnected.
- When connecting the flexible flat cable, be careful with polarity.
- Be sure to use the extension cable for servicing for the following section. (Fig. 10)
  FUNCTION (1) P.C.B. CB205–DIGITAL P.C.B. CB61: MF125400 (25P, 400mm, P=1.25)
  DIGITAL P.C.B. CB80–VIDEO (1) P.C.B. CB305: MF126500 (26P, 500mm, P=1.25)
  DIGITAL P.C.B. CB81–VIDEO (2) P.C.B. CB302: MF116400 (16P, 400mm, P=1.25)
- In this unit, the ground of P.C.B.s shown below is connected to the rear panel and chassis.
  When FUNCTION (1) P.C.B. is removed from the rear panel and chassis, connect the ground point to the rear panel or chassis, using a ground lead or the like. (Fig. 10)
  FUNCTION (1) P.C.B.: PJ201 (PHONO)
  FUNCTION (1) P.C.B.: PJ203 (DVD)
  FUNCTION (1) P.C.B.: PJ209 (PRE OUT)
  FUNCTION (1) P.C.B.: PJ294 (SUBWOOFER2)
  DIGITAL P.C.B. : ST100
  DIGITAL P.C.B. : PJ41 (DVD COAXIAL INPUT)
  DIGITAL P.C.B. : G100, G300
  DIGITAL P.C.B. : ST41 (XM) (U, C models)

P.C.B.チェックをする場合には：

- 本機の上にゴムシートと布を敷き、その上にFUNCTION(1)P.C.B.およびDIGITAL P.C.B.を裏返しに置いてチェックします。(Fig. 10)
- 外したケーブル(コネクター)をすべて接続します。
- フラットケーブルを接続する際、極性に注意してください。
- 次の区間は、サービス用延長ケーブルを使用してください。(Fig. 10)
  FUNCTION(1)P.C.B. CB205−DIGITAL P.C.B. CB61：MF125400(25P、400mm、P=1.25)
  DIGITAL P.C.B. CB80−VIDEO(1)P.C.B. CB305：MF126500(26P、500mm、P=1.25)
  DIGITAL P.C.B. CB81−VIDEO(2)P.C.B. CB302：MF116400(16P、400mm、P=1.25)
- 本機ではP.C.B.のアースがリアパネルおよびシャーシに接続されています。
  FUNCTION(1)P.C.B.をリアパネルおよびシャーシより取り外した場合、リード線等でアースポイントをリアパネルまたはシャーシに接続してください。(Fig. 10)
  FUNCTION(1)P.C.B.：PJ201(PHONO)
  FUNCTION(1)P.C.B.：PJ203(DVD)
  FUNCTION(1)P.C.B.：PJ209(PRE OUT)
  FUNCTION(1)P.C.B.：PJ294(SUBWOOFER2)
  DIGITAL P.C.B. ：ST100
  DIGITAL P.C.B. ：PJ41(DVD COAXIAL INPUT)
  DIGITAL P.C.B. ：G100、G300

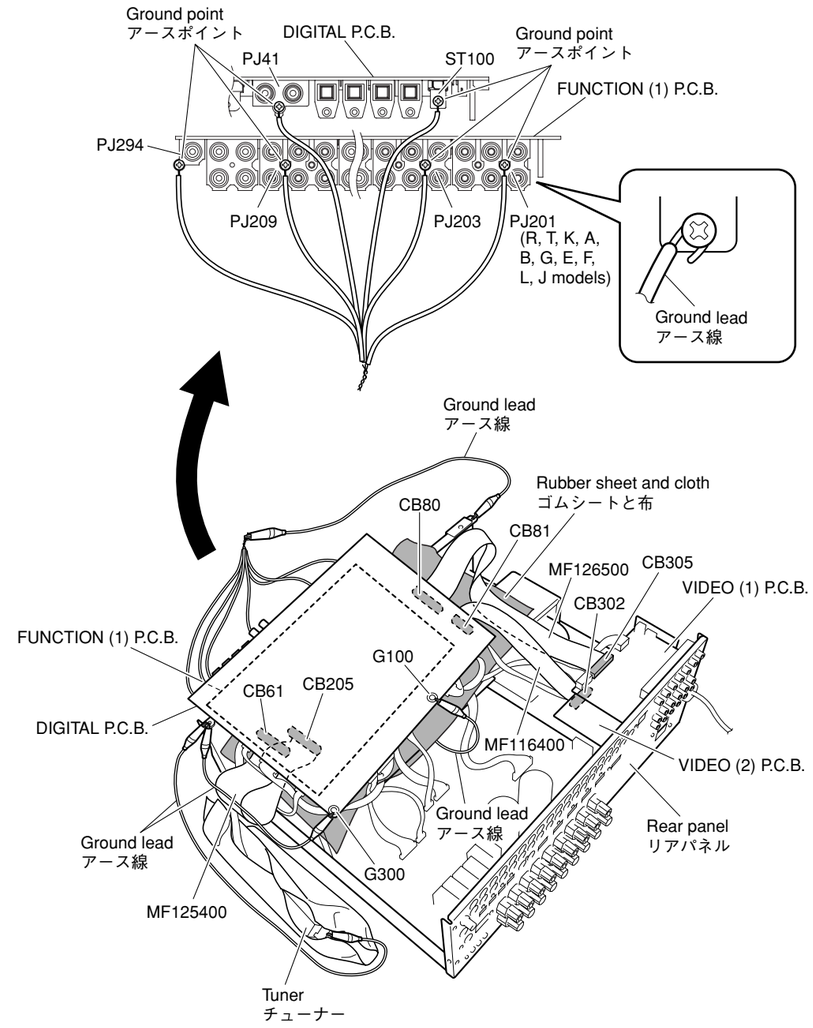


Fig. 10

■ UPDATING FIRMWARE / ファームウェアの書き込み

Note) Updating the firmware restores all the sound field parameters, system memory and tuner presetting, etc. to the original factory settings.

When replacing the following parts, be sure to write the latest firmware.

P.C.B. ass'y DIGITAL P.C.B.
IC30 (Main microprocessor) of DIGITAL P.C.B.
IC51 (TI (DSP) flash ROM) of DIGITAL P.C.B.

There are 2 ways to write the firmware.

- Writing method using the CD:
  Transferring data using CD through digital inputs.
  * When IC30 of DIGITAL P.C.B. is replaced, it is not possible to write the firmware by using the CD.
- Writing method using PC (RS232C):
  Transferring data using PC through serial port (RS232C).

Writing method using the CD

● Required Tools

- DVD or CD player (with DIGITAL OUTPUT (OPTICAL or COAXIAL) jack)
- Optical cable (when OPTICAL jack is used)
- Digital audio pin cable (when COAXIAL jack is used)
- Firmware CD
  * To make the firmware CD, download the latest firmware from the specified download source to PC.

注意）ファームウェアの書き込みを行うと、音場プログラムのパラメーターやシステムメモリー、チューナープリセット等はすべて工場出荷時に初期化されます。

下記の部品をサービス部品に交換した場合、最新のファームウェアの書き込みを行ってください。

P.C.B. ASSY ：DIGITAL
DIGITAL P.C.B. ：IC30（メインマイコン）
DIGITAL P.C.B. ：IC51（TI（DSP）FLASH ROM）

ファームウェアを書き込む方法は2通りあります。

- CDを使用して書き込む方法：
  CDを使用して書き込みを行うことができます。
  ※ DIGITAL P.C.B. IC30（メインマイコン）を交換した場合、CDでの書き込みはできません。
- PC（RS232C）を使用して書き込む方法：
  PCを使用して書き込みを行うことができます。

CDを使用して書き込む方法


● 必要なツール

- DVDまたはCDプレーヤー（DIGITAL OUTPUT（OPTICALまたはCOAXIAL）端子付き）
- 光ファイバーケーブル（OPTICAL端子使用時）
- デジタル音声ピンケーブル（COAXIAL端子使用時）
- ファームウェアCD
  ※ ファームウェアCDは、PCへ最新のファームウェアを指定のダウンロード先からダウンロードして制作してください。

● Operation Procedures

1. Connect this unit and DVD/CD player as shown below. (Fig. 1)

Example of OPTICAL jack / OPTICAL端子使用例

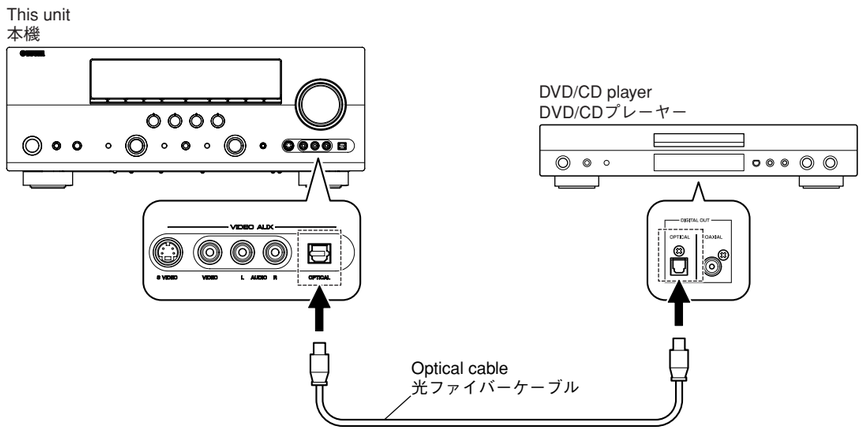

Example of COAXIAL jack / COAXIAL端子使用例

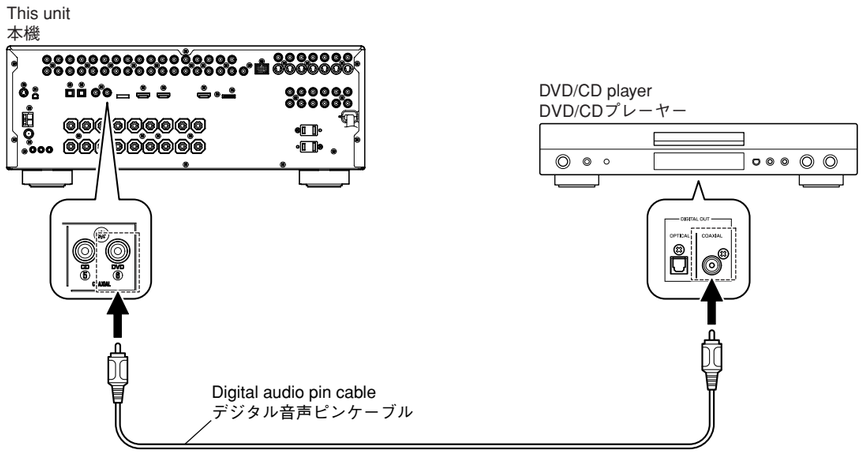


Fig. 1

● 操作手順

1. 本機とDVD/CDプレーヤーを下記のように接続します。（Fig. 1）

2. While pressing the “TONE CONTROL” key of this unit, connect the power cable of this unit to the AC outlet. (Fig. 2)
   The FIRMWARE UPDATE mode is activated and “CDDA Upgrader” is displayed. (Fig. 2)

2. 本機の“TONE CONTROL”キーを押しながら、本機の電源コードをACコンセントに接続します。（Fig. 2）
   FIRMWARE UPDATEモードが起動し、“CDDA Upgrader”が表示されます。（Fig. 2）

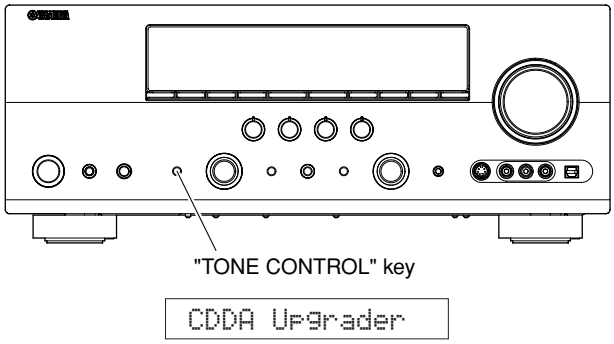


Fig. 2

3. Connect the power cable of DVD/CD player to the AC outlet.
4. Press the “STANDBY/ON” key of the DVD/CD player.
5. Press the “EJECT” key of the DVD/CD player to open the disc tray.
6. Put the firmware CD on the disc tray and close the disc tray.
7. Press the “PLAY” key of the DVD/CD player.
   Then writing of the firmware is started. (Fig. 3)
8. When writing of the firmware is completed, “Update Success”, “Please...” and “Power off!!” are displayed repeatedly. (Fig. 3)

3. DVD/CDプレーヤーの電源コードをACコンセントに接続します。
4. DVD/CDプレーヤーの“STANDBY/ON”キーを押します。
5. DVD/CDプレーヤーの“EJECT”キーを押し、トレーを開きます。
6. ファームウェアCDをトレーに載せ、トレーを閉じます。
7. DVD/CDプレーヤーの“PLAY”キーを押します。
   ファームウェアの書き込みが開始されます。（Fig. 3）
8. ファームウェアの書き込み完了後、“Update Success”、“Please...”、“Power off!!”が繰り返し表示されます。（Fig. 3）

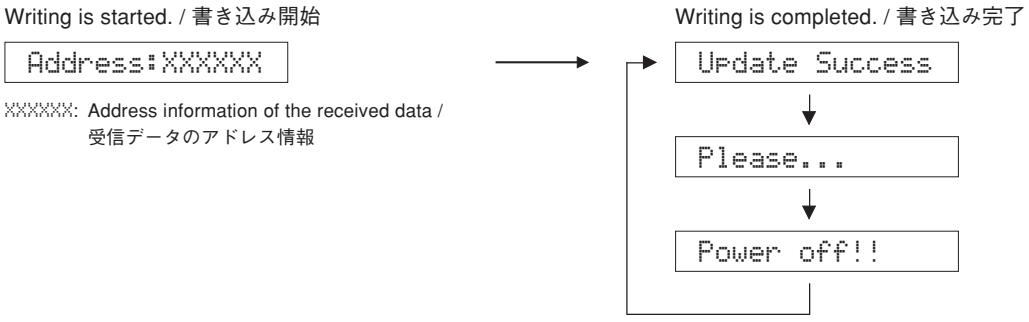


Fig. 3

* When the version of the firmware to be written is the same as the one existing in this unit, “Same Version”, “Please...” and “Power off!!” are displayed repeatedly. (Upgrading is not necessary.)

If the display remains unchanged for more than 10 seconds after starting the firmware CD play procedure, perform the firmware CD play procedure again from the beginning.

If “FILE CORRUPTED” is displayed after “Address:XXXXXX”, make sure that the written data is not corrupted and perform Steps 1 to 8 of “Operation Procedures” again.

If “Upgrade Failed” is displayed, perform Steps 1 to 8 of “Operation Procedures” again.

9. Press the “STOP” key of the DVD/CD player.
10. Press the “EJECT” key of the DVD/CD player to open the disc tray.
11. Remove the firmware CD from the disc tray and close the disc tray.
12. Turn off the power of the DVD/CD player and disconnect the power cable from the AC outlet.
13. Turn off the power by pressing the “MAIN ZONE ON/OFF” (RX-V663 / THR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763) key of this unit.

● Initializing of this unit

* After updating the firmware, be sure to initialize this unit.

1. Connect the power cable of this unit to the AC outlet.
2. Press the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763) key while simultaneously pressing the “STRAIGHT” and “AUDIO SELECT” keys. (Fig. 4)
   Then the self-diagnostic function is activated.
3. Select the self-diagnostic function menu “23. FACTORY PRESET”.
4. Select the “PRESET RSRV”.

※ 本機に既存のファームウェアと、書き込もうとしているファームウェアのバージョンが同じ場合、“Same Version”、“Please...”、“Power off!!”の表示が繰り返されます。（バージョンアップの必要はありません。）

ファームウェアCDの再生開始後、10秒以上経過してもディスプレイ表示が変わらない場合、ファームウェアCDの再生を最初からやり直してください。

“Address:XXXXXX”の後に、“FILE CORRUPTED”が表示された場合、書き込みデータが破損していないかを確認し、“操作手順”の1から8までをもう一度やり直してください。


“Upgrade Failed”が表示された場合、“操作手順”の1から8までをもう一度やり直してください。

9. DVD/CDプレーヤーの“STOP”キーを押します。
10. DVD/CDプレーヤーの“EJECT”キーを押し、トレーを開きます。
11. ファームウェアCDをトレーから外し、トレーを閉じます。
12. DVD/CDプレーヤーの電源を切り、電源コードをACコンセントから抜きます。
13. 本機の“STANDBY/ON”キーを押して電源を切ります。

● 本機の初期化

※ ファームウェアのアップデート後は、必ず本機を初期化してください。

1. 本機の電源コードをACコンセントに接続します。
2. “STRAIGHT”キーと“AUDIO SELECT”キーを押しながら、“STANDBY/ON”キーを押し、ダイアグを起動します。（Fig. 4）
3. ダイアグ“23. FACTORY PRESET”を選択します。
4. “PRESET RSRV”を選択します。

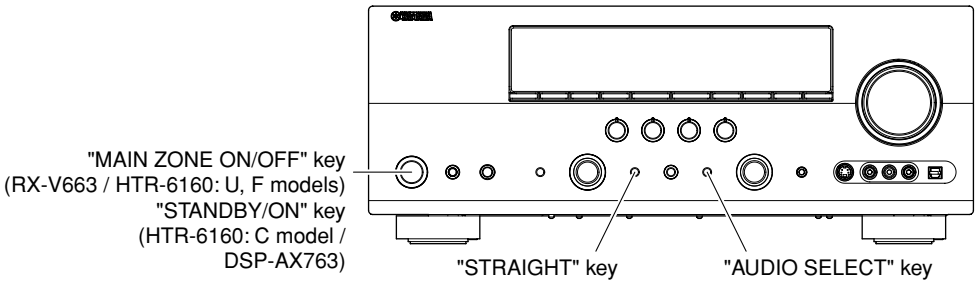

PRESET INHIBIT (Initialization inhibited) /
初期化禁止



PRESET RESERVED (Initialization reserved) /
初期化予約



Fig. 4

5. Turn off the power of this unit and disconnect the power cable from the AC outlet.

● Confirmation of firmware version and checksum

To confirm that the firmware is updated successfully, check the firmware version and checksum value by using the self-diagnostic function.
For more information, refer to “SELF-DIAGNOSTIC FUNCTION”.

1. Reconnect the power cable of this unit to the AC outlet.
2. Press the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763: B model) key while simultaneously pressing the “STRAIGHT” and “AUDIO SELECT” keys. (Fig. 5)
   Then the self-diagnostic function is activated.
3. Select the self-diagnostic function menu “24-1. Version”.
   Confirm the displayed firmware version is the same as the written firmware version. (Fig. 5)

5. 本機の電源を切り、電源コードをACコンセントから抜きます。

● ファームウェアバージョンおよびチェックサムの確認

ファームウエアが正しく更新されたことを確認するためにファームウエアバージョンおよびチェックサムをダイアグでチェックします。
ダイアグメニューの詳細は「ダイアグ（自己診断機能）」を参照してください。

1. 本機の電源コードをACコンセントに接続します。
2. “STRAIGHT”キーと“AUDIO SELECT”キーを押しながら、“STANDBY/ON”キーを押し、ダイアグを起動します。（Fig. 5）
3. ダイアグ“24-1. Version”を選択します。
   表示されたファームウェアのバージョンが書き込んだファームウェアのバージョンと同じであることを確認します。（Fig. 5）

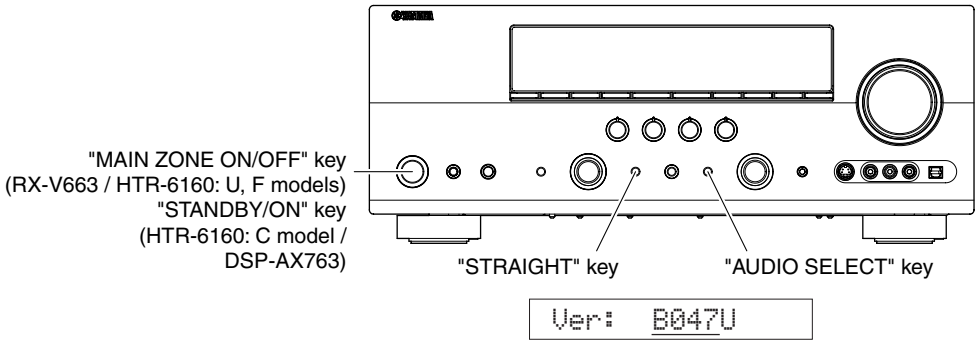


Fig. 5

4. Select the self-diagnostic function menu “24-2. All checksum”.
   Confirm the displayed checksum is the same as the written firmware checksum. (Fig. 5)
   (The checksum value is found where downloading is specified to.)

4. ダイアグ“24-2. All checksum”を選択します。
   表示されたチェックサムが書き込んだファームウェアのチェックサムと同じであることを確認します。（Fig. 6）
   （チェックサム値は指定ダウンロード先に記載されています。）



Fig. 6


* When the displayed firmware version and checksum are different from written firmware version and checksum, follow the steps from 1 to 13 of “Operation Procedures” again.

※ 表示されたファームウェアのバージョンおよびチェックサムが、書き込んだファームウェアのバージョンおよびチェックサムと異なる場合、“操作方法”の1から13までをもう一度やり直してください。

Writing method using PC (RS232C)

● Required Tools

- Windows 2000/XP, PC with a serial port (RS232C)
- Firmware downloader program
  For microprocessor:
  DSP_FLASHER_v3.0_M16C80.exe
  For DSP (TI flash ROM):
  DSP_FLASHER Ver2.7.exe
- Firmware
  For microprocessor:
  VX63xxxx.mot
  For DSP (TI flash ROM):
  Vx63_data1_verxxxxxr.hex
- RS232C cross cable “D-sub 9 pin female” (Specifications)

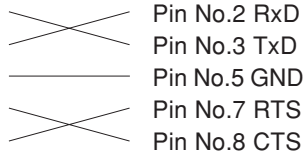

- RS232C conversion adapter (Including flexible flat cable 9P, 300mm) / Part no.: AAX77610

● Preparation and precautions before starting the operation

- Download firmware upgrading program and firmware from the specified source to the same folder of the PC.
- Prepare the above specified RS232C cross cable.
- While writing, keep the other application software on the PC closed.
  It is also recommended to keep the software on the task tray closed as well.

● Operation Procedures

Writing to the microprocessor


- **Writing firmware**

1. Turn off the power of this unit and disconnect the power cable from the AC outlet.

PC（RS232C）を使用して書き込む方法

● 必要なツール

- Windows 2000／XP、シリアルポート（RS232C）付きPC
- ファームウェア書き込み用プログラム
  マイコン用：
  DSP_FLASHER_v3.0_M16C80.exe
  DSP（TI flash ROM）用：
  DSP_FLASHER Ver2.7.exe
- ファームウェア
  マイコン用：
  JX63xxxx.mot
  DSP（TI flash ROM）用：
  Vx63_data1_verxxxxxr.hex
- RS232Cクロスケーブル“D-sub 9pin”メス（仕様）

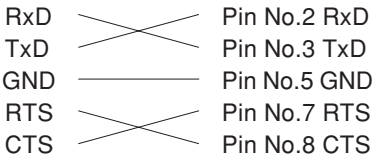

- RS232C変換アダプター（カード電線 9P、300mm含む）／部品番号：AAX77610

● 操作前の準備と注意

- PCへ指定のダウンロード先からファームウェアアップグレードプログラムおよび、ファームウェアを同じフォルダにダウンロードしてください。
- RS232Cクロスケーブルは必ず上記仕様のものを用意してください。
- 書き込み時は、PC上の他のアプリケーションソフトは閉じてください。
  さらに、タスクトレイ上にあるソフトも閉じておくことを推奨します。

● 操作手順

マイコンへの書き込み

- ファームウェアの書き込み

1. 本機の電源を切り、電源コードをACコンセントから抜きます。

2. Set the switch (SW301) of RS232C conversion adapter to the “FLASH UCOM” side. (Fig. 1)
3. Connect the writing port of this unit to the serial port (RS232C) of the PC with RS232C cross cable, RS232C conversion adapter and flexible flat cable as shown below. (Fig. 1)

2. RS232C変換アダプターのスイッチ（SW301）を“FLASH UCOM”側に設定します。（Fig.1）
3. 本機の書き込み用ポートとPCのシリアルポート（RS232C）を下記のように接続します。（Fig. 1）

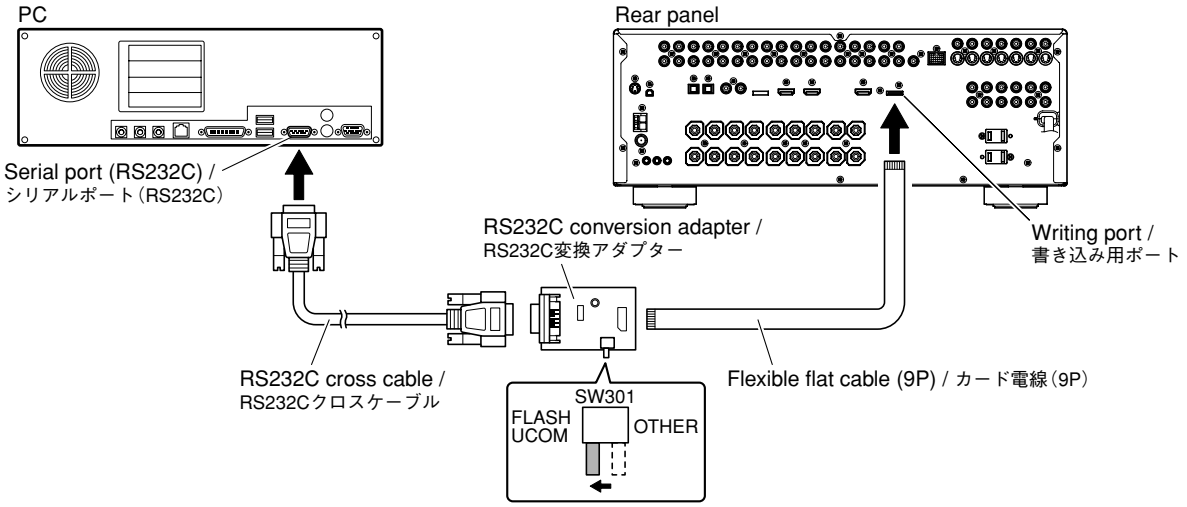


Fig. 1

4. Start up “DSP_FLASHER_v3.0_M16C80.exe”. “DSP FLASHER_V3.0” is displayed. (Fig. 2)
5. Click [...]. (Fig. 2)

Select “VX63xxx.mot (Fig. 2)

4. “DSP_FLASHER_v3.0_M16C80.exe”を起動します。“DSP FLASHER_V3.0”が表示されます。（Fig. 2）
5. [...]をクリックします。（Fig. 2）

“JX63xxxx.mot”を選択します。（Fig. 2）


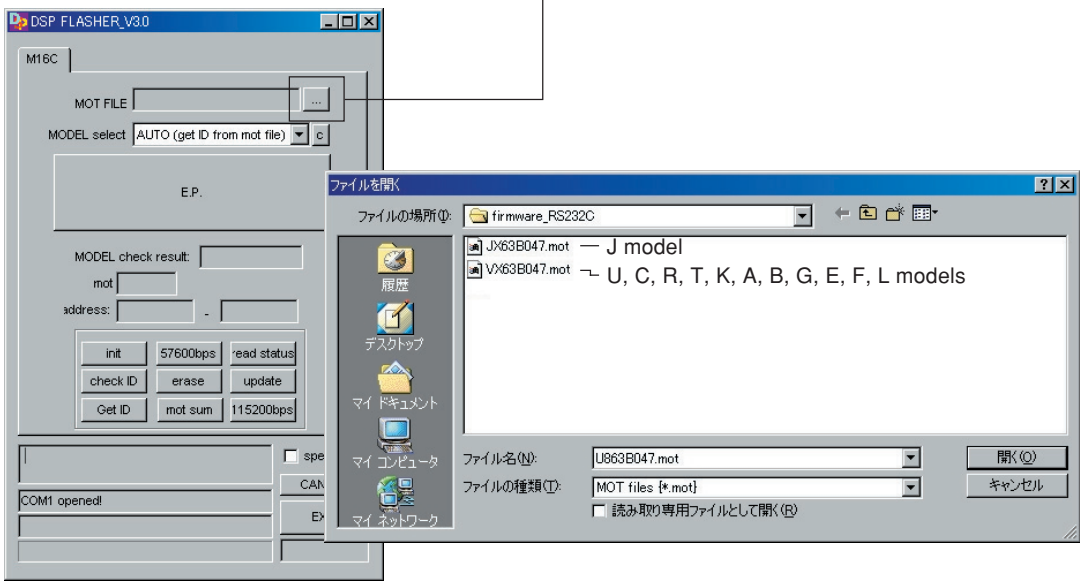


Fig. 2

6. Reconnect the power cable of this unit to the AC outlet.
7. Click [E.P.] to start writing. (Fig. 3)
8. When writing is completed, “Program Finished!” is displayed. (Fig. 3)
   Click [OK]. (Fig. 3)
9. Click [EXIT] to end “DSP_FLASHER_v3.0_M16C80.exe”. (Fig. 3)

6. 本機の電源コードをACコンセントに接続します。
7. [E.P.]をクリックし、書き込みを開始します。（Fig. 3）
8. 書き込み完了後、“Program Finished!”が表示されます。（Fig. 3）
   [OK]をクリックします。（Fig. 3）
9. [EXIT]をクリックし、“DSP_FLASHER_v3.0_M16C80.exe”を終了します。（Fig. 3）

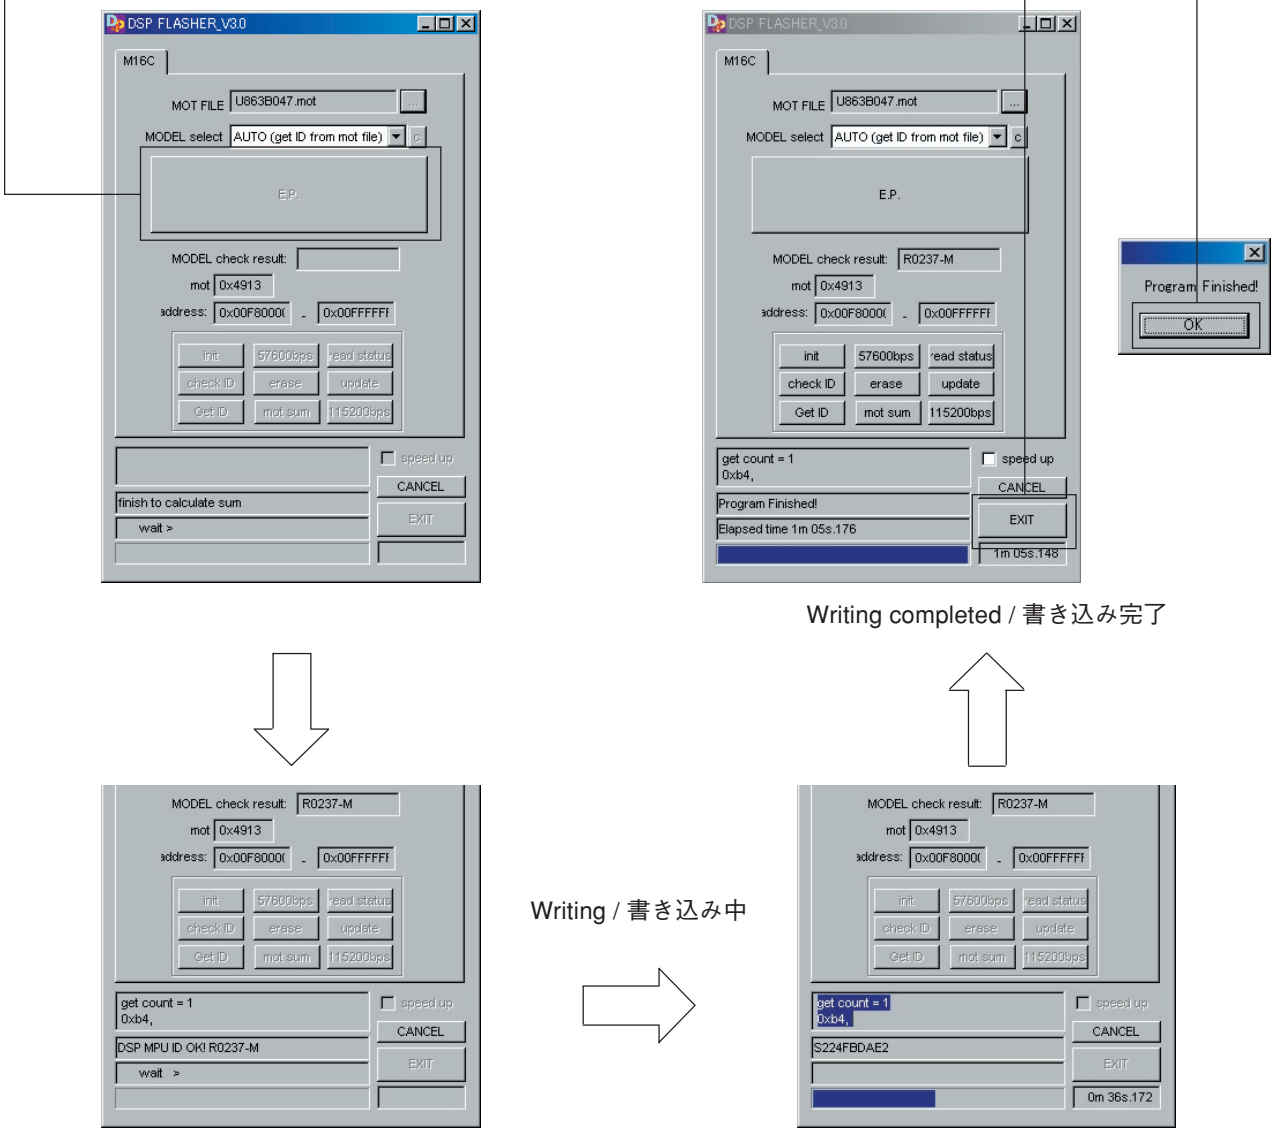

Writing completed / 書き込み完了

Writing / 書き込み中

Fig. 3

10. Disconnect the power cable of this unit from the AC outlet.
11. Disconnect the RS232C cross cable, RS232C conversion adapter and flexible flat cable.

- **Initializing of this unit**

* After updating the firmware, be sure to initialize this unit.

1. Connect the power cable of this unit to the AC outlet.
2. Press the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763) key while simultaneously pressing the “STRAIGHT” and “AUDIO SELECT” keys. (Fig. 4)
   Then the self-diagnostic function is activated.
3. Select the self-diagnostic function menu “23. FACTORY PRESET”.
4. Select the “PRESET RSRV”.

10. 本機の電源コードをACコンセントから抜きます。
11. RS232Cクロスケーブル、RS232C変換アダプター、カード電線を取り外します。

- 本機の初期化

※ ファームウェアのアップデート後は、必ず本機を初期化してください。

1. 本機の電源コードをACコンセントに接続します。
2. “STRAIGHT”キーと“AUDIO SELECT”キーを押しながら、“STANDBY/ON”キーを押し、ダイアグを起動します。(Fig. 4)
3. ダイアグ“23. FACTORY PRESET”を選択します。
4. “PRESET RSRV”を選択します。

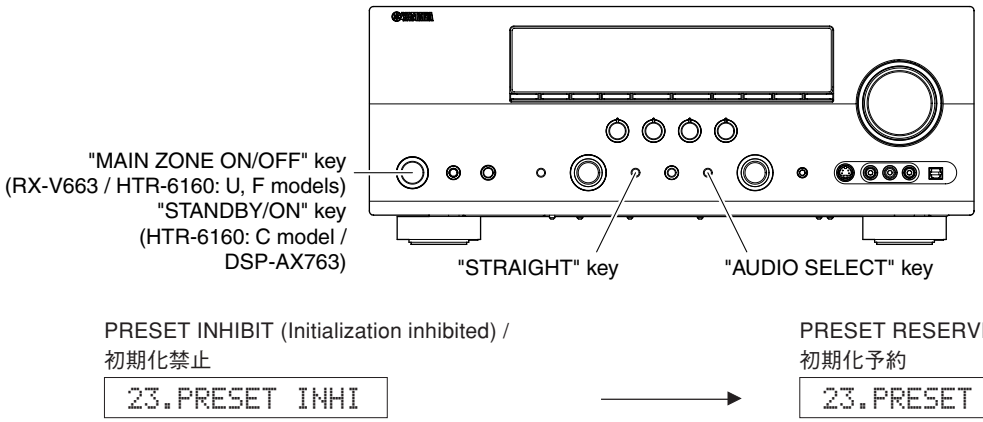


Fig. 4

- **Confirmation of firmware version and checksum**

To confirm that the firmware is updated successfully, check the firmware version and checksum value by using the self-diagnostic function.
For more information, refer to “SELF-DIAGNOSTIC FUNCTION”.

- ファームウェアのバージョンおよびチェックサムの確認

ファームウエアが正しく更新されたことを確認するためにファームウエアバージョンおよびチェックサムをダイアグでチェックします。
ダイアグメニューの詳細は「ダイアグ(自己診断機能)」を参照してください。

1. Reconnect the power cable of this unit to the AC outlet.
2. Press the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763: B model) key while simultaneously pressing the “STRAIGHT” and “AUDIO SELECT” keys. (Fig. 5)
   Then the self-diagnostic function is activated.
3. Select the self-diagnostic function menu “24-1. Version”.
   Confirm the displayed firmware version is the same as the written firmware version. (Fig. 5)

1. 本機の電源コードをACコンセントに接続します。
2. “STRAIGHT”キーと“AUDIO SELECT”キーを押しながら、“STANDBY/ON”キーを押し、ダイアグを起動します。(Fig. 5)
3. ダイアグ“24-1. Version”を選択します。
   表示されたファームウェアのバージョンが書き込んだファームウェアのバージョンと同じであることを確認します。(Fig. 5)

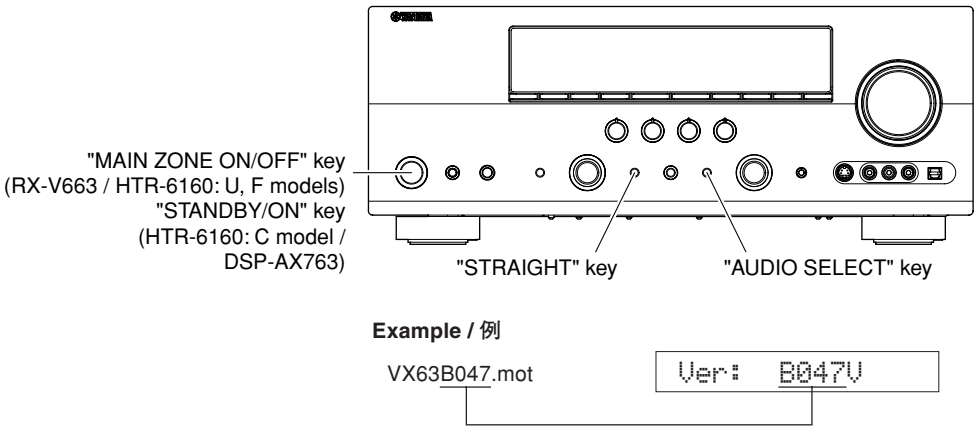


Fig. 5

4. Select the self-diagnostic function menu “24-2. All checksum”.
   Confirm the displayed checksum is the same as the written firmware checksum. (Fig. 5)
   (The checksum value is found where downloading is specified to.)

4. ダイアグ“24-2. All checksum”を選択します。
   表示されたチェックサムが書き込んだファームウェアのチェックサムと同じであることを確認します。(Fig. 6)
   (チェックサム値は指定ダウンロード先に記載されています。)




Fig. 6

* When the displayed firmware version and checksum are different from written firmware version and checksum, follow the steps from 1 to 11 of “Operation Procedures” again.

※ 表示されたファームウェアのバージョンおよびチェックサムが、書き込んだファームウェアのバージョンおよびチェックサムと異なる場合、“操作方法”の1から11までをもう一度やり直してください。

Writing to DSP

- **Writing firmware**

1. Turn off the power of this unit and disconnect the power cable from the AC outlet.
2. Set the switch (SW301) of RS232C conversion adapter to the “OTHER” side. (Fig. 1)
3. Connect the writing port of this unit to the serial port (RS232C) of the PC with RS232C cross cable, RS232C conversion adapter and flexible flat cable as shown below. (Fig. 1)

DSPへの書き込み

- ファームウェアの書き込み

1. 本機の電源を切り、電源コードをACコンセントから抜きます。
2. RS232C変換アダプターのスイッチ（SW301）を“OTHER”側に設定します。（Fig. 1）
3. 本機の書き込み用ポートとPCのシリアルポート（RS232C）を下記のように接続します。（Fig. 1）

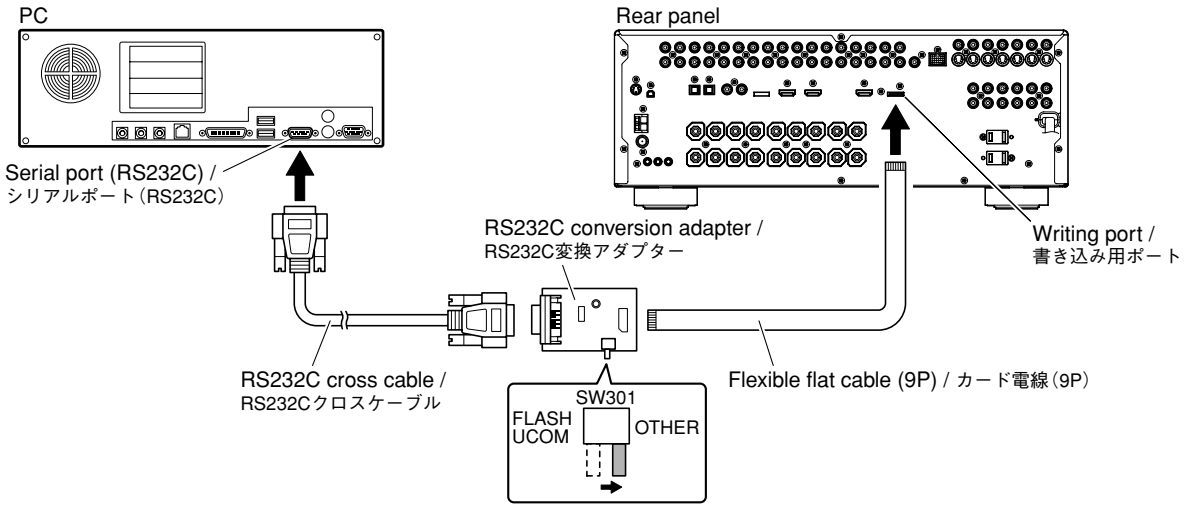


Fig. 1

4. Start up “DSP_FLASHER Ver2.7.exe”. “DSP FLASHER_V2.70” is displayed. (Fig. 2)
5. Click [Vx61 DSP]. (Fig. 2)

4. “DSP_FLASHER Ver2.7.exe”を起動します。“DSP FLASHER_V2.70”が表示されます。（Fig. 2）
5. [Vx61 DSP]をクリックします。（Fig. 2）

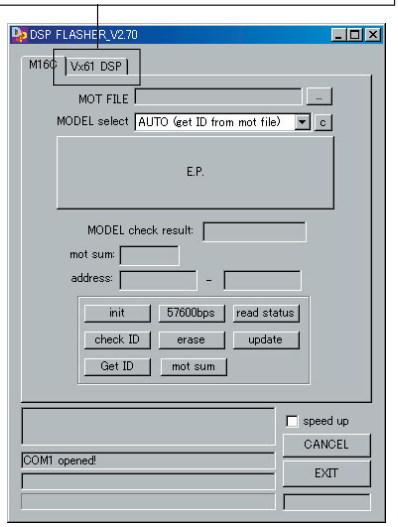


Fig. 2

6. Click [...]. (Fig. 3)

Select “Vx63_data1_verxxxxxr.hex”. (Fig. 3)

6. [...]をクリックします。(Fig. 3)

“Vx63_data1_verxxxxxr.hex”を選択します。(Fig. 3)

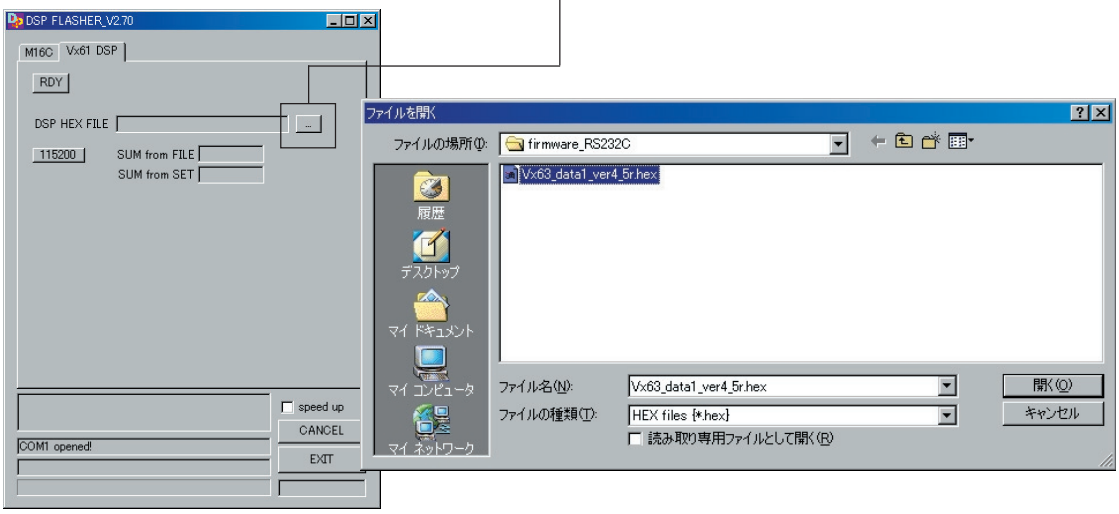


Fig. 3

7. Click [RDY]. (Fig. 4)

7. [RDY]をクリックします。(Fig. 4)



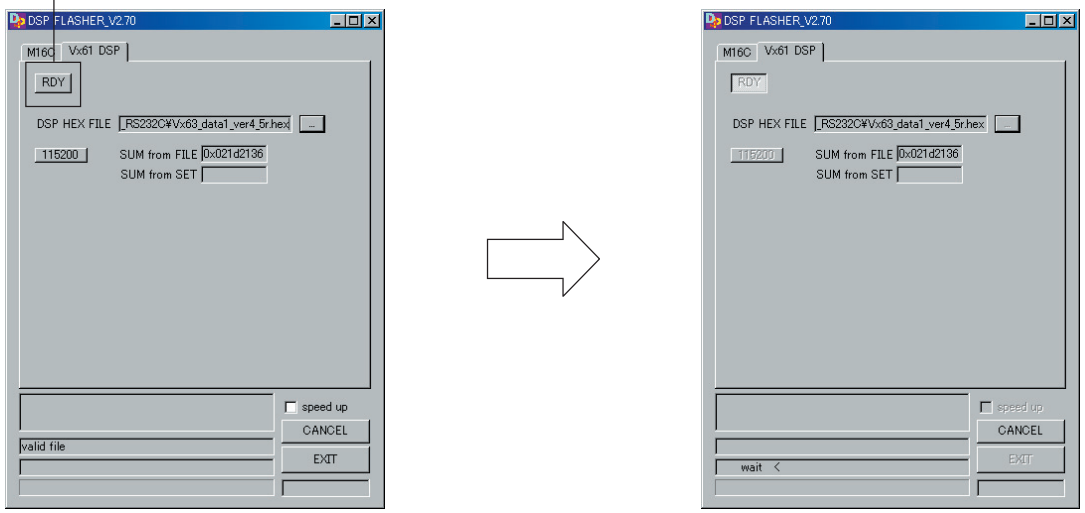


Fig. 4

8. Connect the power cable of this unit to the AC outlet while pressing the “AUDIO SELECT” key. (Fig. 5)
   Writing is started automatically. (Fig. 5)

8. 本機の“AUDIO SELECT”キーを押しながら、電源コードをACコンセントに接続します。(Fig. 5)
   自動的に書き込みを開始します。(Fig. 5)

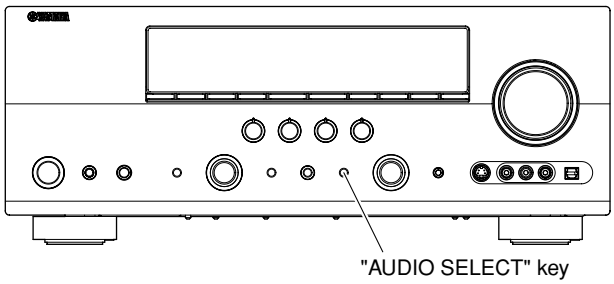

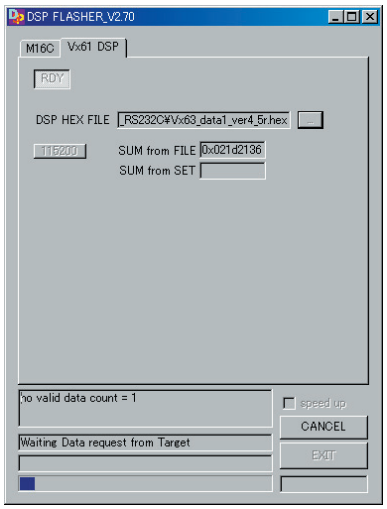


Writing / 書き込み中

Fig. 5

9. When writing is completed, “Vx61 DSP Flash finished!” is displayed. (Fig. 6)
10. Click [EXIT] to end “DSP_FLASHER Ver2.7.exe”. (Fig. 6)

9. 書き込み完了後、“Vx61 DSP Flash finished!”が表示されます。（Fig. 6）
10. [EXIT]をクリックし、“DSP_FLASHER Ver2.7.exe”を終了します。（Fig. 6）

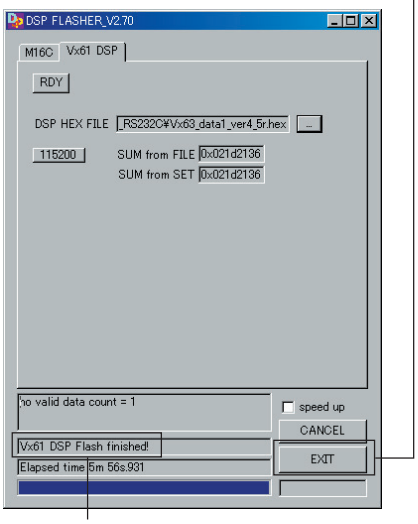

When writing is completed, “Vx61 DSP Flash finished!” is displayed.
書き込み完了後、“Vx61 DSP Flash finished!”が表示されます。

Fig. 6

11. Disconnect the power cable of this unit from the AC outlet.
12. Disconnect the RS232C cross cable, RS232C conversion adapter and flexible flat cable.

11. 本機の電源コードをACコンセントから抜きます。
12. RS232Cクロスケーブル、RS232C変換アダプター、カード電線を取り外します。

- **Initializing of the main unit**

  * After updating the firmware, be sure to initialize this unit.

  1. Connect the power cable of this unit to the AC outlet.
  2. Press the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763: B model) key while simultaneously pressing the “STRAIGHT” and “AUDIO SELECT” keys. (Fig. 7)
     Then the self-diagnostic function is activated.
  3. Select the self-diagnostic function menu “23. FACTORY PRESET”.
  4. Select the “PRESET RSRV”.

- **本機の初期化**

  ※ ファームウェアのアップデート後は、必ず本機を初期化してください。

  1. 本機の電源コードをACコンセントに接続します。
  2. “STRAIGHT”キーと“AUDIO SELECT”キーを押しながら、“STANDBY/ON”キーを押し、ダイアグを起動します。(Fig. 7)
  3. ダイアグ“23. FACTORY PRESET”を選択します。
  4. “PRESET RSRV”を選択します。

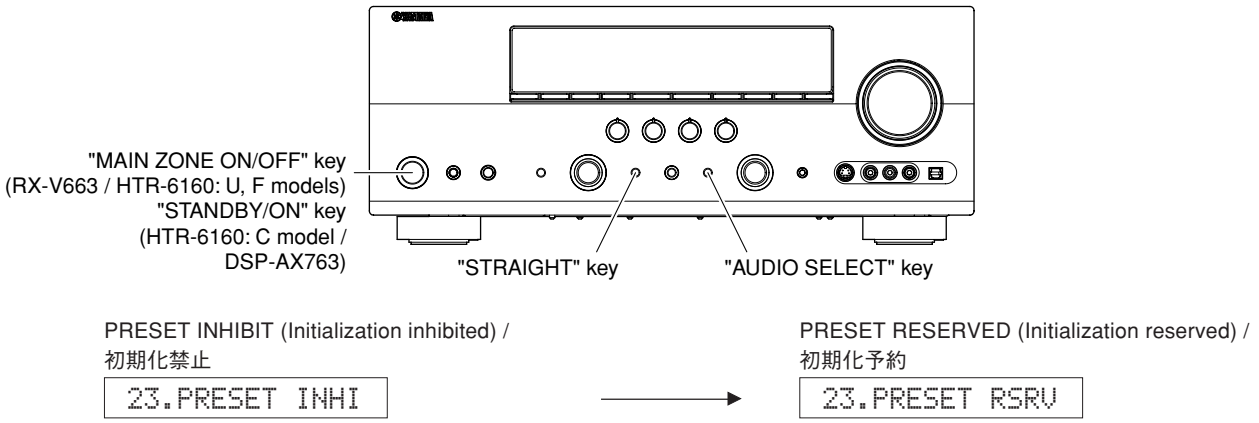


Fig. 7

- **Confirmation of firmware version and checksum**


  To confirm that the firmware is updated successfully, check the firmware version and checksum value by using the self-diagnostic function.
  For more information, refer to “SELF-DIAGNOSTIC FUNCTION”.

- **ファームウェアのバージョンおよびチェックサムの確認**

  ファームウエアが正しく更新されたことを確認するためにファームウエアバージョンおよびチェックサムをダイアグでチェックします。
  ダイアグメニューの詳細は「ダイアグ(自己診断機能)」を参照してください。

1. Connect the power cable of this unit to the AC outlet.
2. Press the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763: B model) key while simultaneously pressing the “STRAIGHT” and “AUDIO SELECT” keys. (Fig. 8)
   Then the self-diagnostic function is activated.
3. Select the self-diagnostic function menu “24-3. TI FLASH version”.
   Confirm the displayed firmware version is the same as the written firmware version. (Fig. 8)

1. 本機の電源コードをACコンセントに接続します。
2. “STRAIGHT”キーと“AUDIO SELECT”キーを押しながら、“STANDBY/ON”キーを押し、ダイアグを起動します。(Fig. 8)
3. ダイアグ“24-3. TI FLASH version”を選択します。
   表示されたファームウェアのバージョンが書き込んだファームウェアのバージョンと同じであることを確認します。(Fig. 8)

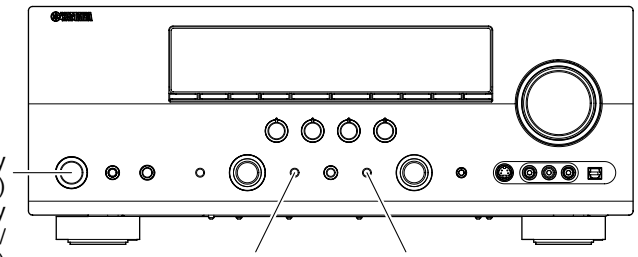

Example / 例

TiVer:04.05r2

Fig. 8

4. Select the self-diagnostic function menu “24-4. TI FLASH checksum”.
   Confirm the displayed checksum is the same as the written firmware checksum. (Fig. 9)
   (The checksum value is found where downloading is specified to.)

4. ダイアグ“24-4. TI FLASH checksum”を選択します。
   表示されたチェックサムが書き込んだファームウェアのチェックサムと同じであることを確認します。(Fig. 9)
   (チェックサム値は指定ダウンロード先に記載されています。)

Example / 例

TiSum:021D2136

Fig. 9

* When the displayed firmware version and checksum are different from written firmware version and checksum, follow the steps from 1 to 12 of “Operation Procedures” again.

※ 表示されたファームウェアのバージョンおよびチェックサムが、書き込んだファームウェアのバージョンおよびチェックサムと異なる場合、“操作方法”の1から12までをもう一度やり直してください。

■ SELF-DIAGNOSTIC FUNCTION／ダイアグ（自己診断機能）

This unit has self diagnosis functions that are intended for inspection, measurement and location of faulty point.
There are 24 main menu items, each of which has sub-menu items.
Listed in the table below are menu items and sub-menu items.
Note that not all menu items listed will apply to the models covered in this service manual.

本機には、検査、測定、不良個所の発見を目的にしたダイアグ（自己診断機能）があります。
ダイアグメニューは24個あり、そのそれぞれにサブメニューがあります。
下表はダイアグメニュー一覧です。
下表の全ダイアグメニュー項目が、このサービスマニュアル記載のモデルに適用されるとは限りません。

No.	Main menu	Sub-menu
1	BYPASS	1. ANALOG BYPASS
		2. DSP BYPASS
2	RAM THR	1. RAM MARGIN
		2. RAM FULL BIT
3	HDMI AUDIO	1. SPDIF
		2. Multi
		3. DSD
4	SPEAKERS SET	1. FRONT : SML 0dB
		2. CENTER : NONE
		3. LFE/B : FRONT
		4. PRESENCE Mix-P
		5. PRESENCE Mix-F
		6. Zone2 Amp ON
		7. Bi-AMP
		8. TONE : MAX
		9. TONE : MIN
5	XCH-INPUT	1. 6ch INPUT 6ohms
		2. 8ch INPUT 6ohms
		3. 6ch INPUT 8ohms
		4. 8ch INPUT 8ohms
		5. LIMIT
6	MIC CHECK	1. MIC CHECK
7	FL/OSD CHECK	1. VFD CHECK
		2. VFD DISP OFF / MONITOR MUTE
		3. VFD DISP ALL / Conponent MUTE
		4. VFD DIMMER / OSD CHARACTERS PATTERN
		5. CHECK PATTERN / OSD CHARACTERS PATTERN
8	MANUAL TEST	1. TEST ALL
9	A/D DATA CHECK	1. PS1, PS2
		2. DC, TH
		3. IMP, PL
		4. DST, DK
		5. K0, K1
10	VIDEO CHECK	1. I2C : XXXXXXXX
		2. DIGITAL COMPONENT
		3. DIGITAL CVBS
		4. DIGITAL Y/C
		5. ANALOG BYPASS
		6. TEST PATTERN
		7. VIDEO INFORMATION
11	XM STATUS (U, C models)	1. 1k -1dB/44kHz
		2. 1k -61dB/44kHz
		3. MUTE/44kHz
		4. XM TONE/44kHz
		5. ISO TONE/44kHz
		6. 1k -1dB/32kHz
		7. 1k -61dB/32kHz
		8. MUTE/32kHz
		9. XM TONE/32kHz
		10. ISO TONE/32kHz
		11. BUS POWER : OFF
12	SIRIUS (U, C models)	1. SIRIUS : OK (NG)
		2. SR : XX XX XX
		3. SSP : (SIRIUS #0 version)
		4. MAC : (SIRIUS #1 version)
		5. ADP : (SIRIUS #2 version)
		6. PRDID : (Product ID)
		7. SEQID : (Sequence ID)
13	HD RADIO (U model)	1. HD CPU V : XXXXX
		2. D : XXXXX
14	DOCK	1. DOCK : XXXXX
		2. BT V : －－－－－－－－
15	HDMI INFORMATION	1. MN : XXXXXXX
		2. PI : 312X
		3. VN : YAMAHA
16	HDMI SELECT	1. HDMI NONE
		2. HDMI IN 1
		3. HDMI IN 2
		4. HDMI IN 3
		5. HDMI UPCONV.
		6. HDMI UP THR
17	IF STATUS	1. DSP STATUS (5 Byte)
18	DSP BUS CHECK	1. TI BUS :
19	RESERVED	
20	PROTECTION HISTORY	1. HISTORY 1
		2. HISTORY 2
		3. HISTORY 3
		4. HISTORY 4
21	RESERVED	
22	UPDATE (Not applied to these models. / このモデルには適用されません。)	1. TI FLASH BOOT
		2. CEC UPDATE
23	FACTORY PRESET	1. PRESET INHI
		2. PRESET RSRV
24	ROM VER./SUM/PORT	1. VERSION DISP
		2. SUM ALL / PROGRAM
		3. TI FLASH VERSION (1 Byte)
		4. TI FLASH SUM (4 Byte)
		5. CEC VERSION
		6. XM VERSION (U, C models)
		7. SIRIUS VERSION (U, C models)
		8. XX XXX X XXX

• Starting Self-Diagnostic Function

Press the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763) key while simultaneously pressing those two keys of this unit as indicated in the figure below.

● ダイアグの起動

本機の下図に示すキーを同時に押しながら“STANDBY/ON”キーを押すと、ダイアグが起動します。


Keys of this unit / 本機キー

RX-V663 / HTR-6160 (U, F models)



HTR-6160 (C model) /
DSP-AX763



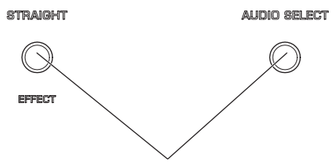

Turn on the power while pressing these keys. /
これらのキーを同時に押しながら、電源オンする。

• Starting Self-Diagnostic Function in the protection cancel mode

If the protection function works and causes hindrance to trouble diagnosis, cancel the protection function as described below, and it will be possible to enter the self-diagnostic function mode. (The protection functions other than the excess current detect function will be disabled.)

Press the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763) key while simultaneously pressing those two keys indicated in the figure above. At this time, keep pressing those two keys for 3 seconds or longer.
In this mode, the [SLEEP] segment of the FL display of this unit flashes to indicate that the mode is self-diagnostic function mode with the protection functions disabled.

CAUTION!
Using this product with the protection function disabled may cause damage to this unit. Use special care for this point when using this mode.

● プロテクション解除モードでの起動

プロテクションが動作することにより、故障箇所の診断に支障をきたすような場合は、次の方法によりプロテクションを解除した状態でダイアグモードに入ることができます。（過電流検出以外のプロテクション動作を解除する）

上図のキーを同時に押しながら“STANDBY/ON”キーを押します。このとき、上図のキーを3秒以上押し続けてください。
このモードでは本機FLの「SLEEP」セグメントが点滅し、プロテクションを解除した状態でのダイアグモードであることを知らせます。

注意！
プロテクション解除モードでの起動は、危険な状態でもプロテクションが作動しないため、動作させると本機を破壊することがあります。
このモードを使用する場合は十分注意してください。

• Canceling Self-Diagnostic Function

1. Before canceling self-diagnostic function, execute setting for FACTORY PRESET of main menu No. 23 (Memory initialization inhibited or Memory initialized).
   * In order to keep the user memory stored, be sure to select PRESET INHIBITED (Memory initialization inhibited).
2. Turn off the power by pressing the “MAIN ZONE ON/OFF” (RX-V663 / HTR-6160: U, F models) / “STANDBY/ON” (HTR-6160: C model / DSP-AX763: B, J models) key of this unit.

● ダイアグの解除

1. ダイアグを解除する前に、ダイアグメニューNo. 23 FACTORY PRESET（メモリーの初期化禁止／またはメモリーの初期化）の設定をします。
   ※ ユーザーメモリーを保持したい場合は、必ずPRESET INHIBITED（メモリー初期化禁止）を選択してください。
2. 本機の“STANDBY/ON”キーを押し、電源オフします。

• Display provided when Self-Diagnostic Function started

On the FL display of this unit, an opening message (including the version and the protection history) appears for a few seconds followed by the main menu display (1. ANALOG BYPASS).


When there is no history of protection function:

Opening message / オープニング表示

When there is no protection history
プロテクション履歴が無い場合



After a few seconds / 数秒後





● ダイアグ起動時の表示

本機のFLディスプレイには、オープニング（プロテクション履歴／バージョン）が表示され、数秒後にメインメニュー表示（1. ANALOG BYPASS）となります。

プロテクション履歴が無い場合：

Main menu display / メインメニュー表示

When there is a history of protection function:

When there is a history of protection function due to excess current

プロテクション履歴がある場合：

過電流によるプロテクション履歴がある場合

```
I PROTECT
```

Cause: An excessive current flowed through the power amplifier.

Supplementary information:

As current of the power amplifier is detected, the abnormal channel can be identified by checking the current detect transistor.
Turning on the power without correcting the abnormality will cause the protection function to work immediately and the power supply will instantly be shut off.

原因： パワーアンプに過電流が流れた。

補足： パワーアンプの電流を検出していますので、電流検出トランジスタをチェックすれば異常チャンネルが特定できます。
異常状態のまま電源オンすると、瞬時にプロテクションがかかり、すぐに電源が切れます。

Note)

- **Applying the power to this unit without correcting the abnormality can be dangerous and cause additional circuit damage. To avoid this, if protection function has been activated 3 times continuously, the power will not turn on even when the "MASTER ON/OFF" (RX-V663 / HTR-6160: F model) / "STANDBY/ON" (HTR-6160: U, C models / DSP-AX763) key is pressed. In order to turn on the power again, disconnect the power cable of this unit from the AC outlet once and then reconnect it again.**
- **The output transistors in each power amplifier should be checked for damage before applying power to this unit.**
- **Power amplifier current should be monitored by measuring DC voltage across the emitter resistors for each channel.**

注意！

- 異常状態のまま本機の電源を入れると、危険な状態になり、さらに回路が損傷を受ける原因になります。そのため連続してプロテクションが働いた場合、3回目から"STANDBY/ON"キーを押しても電源が入らなくなります。再度電源を入れる場合、一度本機の電源コードをAC電源コンセントから抜いて接続し直してください。
- 本機の電源をいれる前に、各パワーアンプの出力トランジスタに損傷がないかチェックしてください。
- パワーアンプの電流は、各チャンネルのエミッターの抵抗器間DC電圧を測定することによりモニターしてください。

When there is a history of protection function due to abnormal DC output

DC出力異常によるプロテクション履歴がある場合

```
DC PRT :xxx G
```

Cause: DC output of the power amplifier is abnormal.

Supplementary information:

The protection function worked due to a DC voltage appearing at the speaker terminal.
A cause could be a defect in the amplifier.
If the power is turned on with the abnormality unsolved, the protection function works in 3 seconds to turn off the power.

原因： パワーアンプのDC出力が異常。

補足： アンプの故障でスピーカー端子に直流電圧が掛かるなどが原因で、プロテクションが働いたことを示します。
異常状態のままパワーオンすると、3秒後にプロテクションが掛かり、電源が切れます。

When there is a history of protection function due to abnormal voltage in the power supply section

電源部の電圧異常によるプロテクション履歴がある場合

PS1 PRT:xxx or PS2 PRT:xxx

Cause: The voltage in the power supply section is abnormal.

Supplementary information:
The protection function worked due to a defect or overload in the power supply.
If the power is turned on with the abnormality unsolved, the protection function works in 1 second to turn off the power.

原因： 電源部の電圧が異常。

補足： 電源電圧による原因で、プロテクションが働いたことを示します。
異常状態のままパワーオンすると、1秒後にプロテクションが掛かり、電源が切れます。

When there is a history of protection function due to excessive heat sink temperature

ヒートシンクの異常温度によるプロテクション履歴がある場合

TMP PRT:xxx G

Cause: The temperature of the heat sink is excessive.

Supplementary information:
The protection function worked due to the temperature limit being exceeded.
Causes could be poor ventilation or a defect related to the thermal sensor.

原因： ヒートシンクの温度が異常。

補足： 温度制限を越えた原因で、プロテクションが働いたことを示します。

If the power is turned on with the abnormality unsolved, the protection function works in 1 second to turn off the power.

異常状態のままパワーオンすると、1秒後にプロテクションが掛かり、電源が切れます。

For detection of each protection function, refer to main menu described later.

各プロクテクションの検出に関しては、後述のメインメニューを参照してください。

History of protection function

When the protection function has worked, its history is stored in memory with a backup.
Even if no abnormality is noted while servicing this unit, an abnormality which has occurred previously can be defined as long as the backup data has been stored.
The history of the protection function is cleared when self-diagnostic function is cancelled by selecting PRESET RESERVED (Memory initialized) of main menu No. 23 or when the backup data is erased.

プロテクションの履歴

プロテクションが働いた場合、履歴をバックアップして記憶しています。
サービスのときに異常が認められなくても、バックアップが残っていれば、お客様のところで起きた異常を区別できます。
メインメニューNo. 23 PRESET RESERVED(メモリーの初期化)を選んでダイアグを解除した場合、またはバックアップが消えた場合にプロテクションの履歴はクリアされます。

• Display during menu operation

The function at work is indicated on the FL indicator of this unit.
The contents displayed during the function operation are described later in the “Details of self-diagnostic function menu” section.

● メニュー動作中の表示

本機のFLディスプレイには動作中の機能が表示されます。
機能動作中の表示内容については、後述の機能詳細で記述します。

• Operation procedure of Main menu and Sub-menu

There are 24 main menu items, each them having sub-menu items.

Main menu selection:
Select the main menu using “PROGRAM” knob.

Sub-menu selection:
Select the sub-menu using “SCENE 2” (forward) / “SCENE 1” (reverse) keys or “PRESET/TUNING >” (forward) / “PRESET/TUNING <” (reverse) keys (U, C, R, T, K, A, G, E, F, L models).


● メインメニューとサブメニューの操作

ダイアグにはNo. 1～24のメインメニューがあり、そのそれぞれにサブメニューがあります。

メインニューの選択：
“PROGRAM”ツマミで選択します。

サブメニューの選択：
“SCENE 2”(順送り)、“SCENE 1”(逆送り)キーまたは“PRESET/TUNING＞”(順送り)、“PRESET/TUNING＜”(逆送り)キーで選択します。

Keys of this unit / 本機キー

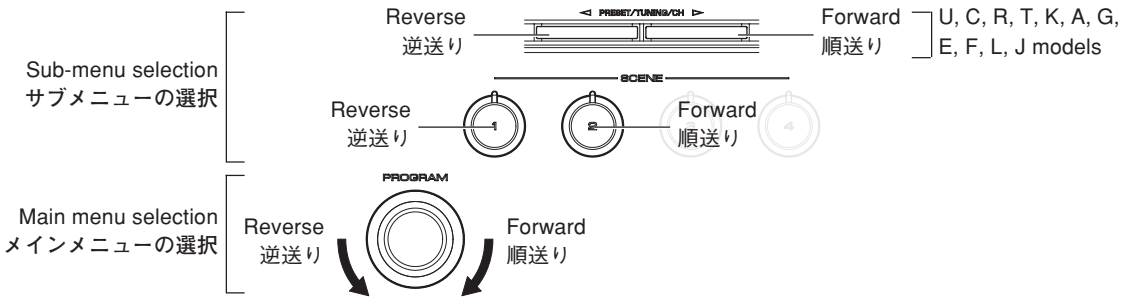

• Functions in Self-Diagnostic Function mode

In addition to the self-diagnostic function menu items, functions as listed below are available.

- Power on/off
- Master volume
- Muting
- Speaker relay control of A and B
- Input selection
- Audio select
- Tone control

* Functions related to the tuner and the set menu are not available.

● ダイアグ中の機能

ダイアグメニューの他に、以下の機能が動作します。

・ パワーオン／オフ
・ マスターボリューム
・ ミューティング
・ スピーカーリレーA、B
・ インプットセレクト
・ オーディオセレクト
・ トーンコントロール

※ チューナー関連、セットメニュー関連は機能しません。

• Initial settings when starting Self-Diagnostic Function

The following are initial settings when starting self-diagnostic function.

- Master volume: -20 dB
- Input: DVD (MULTI CHANNEL INPUT OFF)
- Effect level: 0 dB
- Main menu: 1. ANALOG BYPASS

When self-diagnostic function is canceled, these settings are restored to those before starting self-diagnostic function.

● ダイアグ開始時の初期設定

ダイアグ開始時に以下のような設定になります。

・ マスターボリューム：-20 dB
・ インプット：DVD(マルチチャンネルINPUT オフ)
・ エフェクトレベル：0 dB
・ メインメニュー：1. ANALOG BYPASS

ダイアグ解除時にはダイアグ開始前の状態に戻ります。

• Details of Self-Diagnostic Function menu

1. BYPASS

Using the sub-menu, it is possible to select ANALOG BYPASS output or DSP BYPASS output.

ANALOG BYPASS

The analog input audio signal is output to FRONT L/R by PURE DIRECT.

● ダイアグメニュー詳細

1. BYPASS

サブメニュー操作によりANALOG BYPASS/DSP BYPASSが選択可能です。

ANALOG BYPASS

アナログ入力の音声信号をPURE DIRECTでFRONT L/Rへ出力します。

1.ANALOG BYPAS

INPUT: DVD ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT				SUBWOOFER OUTPUT
		FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	
Both ch, -20 dBm	+6.0 dB	+12.0 dBm	-∞	-∞	-∞	-∞

DSP BYPASS

The digital input audio signal is output to FRONT L/R by PURE DIRECT.

DSP BYPASS


デジタル入力の音声信号をPURE DIRECTでFRONT L/Rへ出力します。

1.DSP BYPASS

INPUT: DVD ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz


Input level	Volume	SPEAKER OUT				SUBWOOFER OUTPUT
		FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	
Both ch, -20 dBm	+6.0 dB	+12.0 dBm	-∞	-∞	-∞	-∞

ANALOG BYPASS

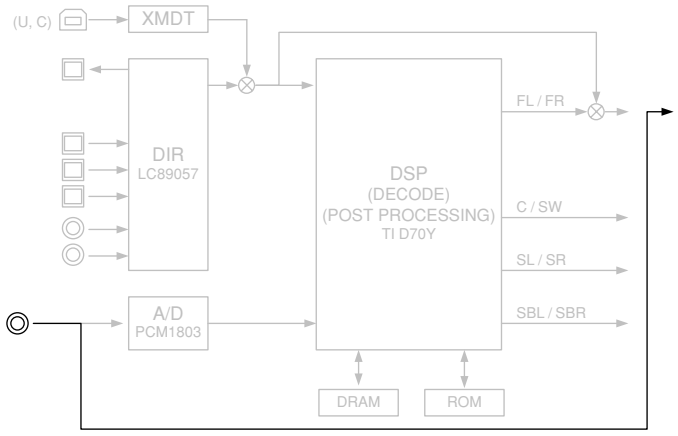

(Shaded items not used in this example)

DSP BYPASS

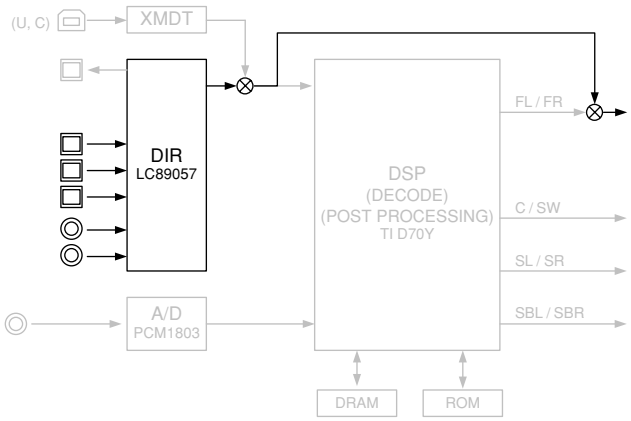

(Shaded items not used in this example)

2. RAM THROUGH

Using the sub-menu, it is possible to select MARGIN output or FULL BIT output.

RAM MARGIN

The signal is output including the head margin.

2. RAM THROUGH

サブメニュー操作によりMARGIN/FULL BITが選択可能です。

RAM MARGIN

ヘッドマージンを含んで出力されます。

2.RAM MARGIN

FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	SUBWOOFER
+9.0 dB	+13.5 dB	+9.0 dB	+7.5 dB	+21.0 dB

INPUT: DVD ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT				SUBWOOFER
		FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	OUTPUT
Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-7.0 dBm

RAM FULL BIT

The signal is output in digital full bit without including the head margin.
The SUBWOOFER signal is output but not in digital full bit.

RAM FULL BIT


ヘッドマージンを含まず、デジタルフルビットで出力されます。
SUBWOOFERは出力されますが、デジタルフルビットではありません。

2.RAM FULL BIT

FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	SUBWOOFER
0 dB	0 dB	0 dB	0 dB	+21.0 dB

INPUT: DVD ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT				SUBWOOFER
		FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	OUTPUT
Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-7.0 dBm

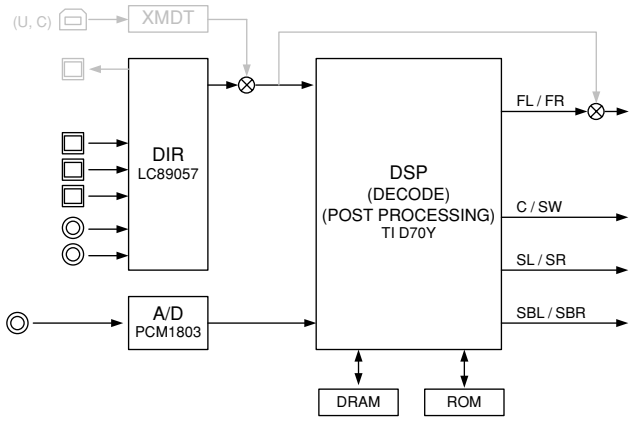

(Shaded items not used in this example)

When input source is stereo, signal is assigned as below.
2 ch信号入力時、以下のように信号を振り分けて出力します。

Front L → Center / Surround L / Surround Back L, R
Front R → Surround R
Front L +10 dB → SWFR

3. HDMI AUDIO


The audio signals input to HDMI IN are selected by the sub-menu and output.

* When selecting “DSD”, be sure to connect an HDMI unit equipped with DSD output function to this unit.

3. HDMI AUDIO

HDMI INに入力された音声信号をサブメニューで選択し、出力します。

※“DSD”を選択する場合、必ずDSD出力が可能なHDMI機器を接続してください。

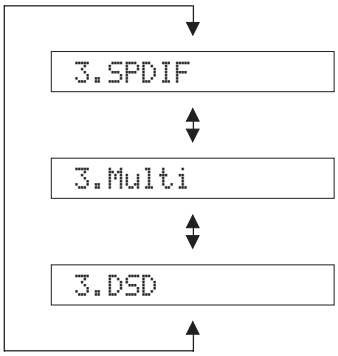

SPDIF
SPDIF signal is output.
SPDIF信号を出力します。

Multi (DVD-Audio)
Multi signal is output.
Multi信号を出力します。

DSD (Direct stream digital)
DSD signal is output.
DSD信号を出力します。

4. SPEAKER SET

The analog switch settings for each sub-menu are as shown in the table below.

4. SPEAKER SET

各サブメニューにおけるアナログスイッチの設定は以下の通りです。

	FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	SUBWOOFER
FRNT : SML 0dB	SMALL	LARGE	LARGE	LARGE	SWFR
CENTER : NONE	LARGE	NONE	LARGE	LARGE	SWFR
LFE/B : FRNT	LARGE	SMALL	SMALL	SMALL	FRONT
Pres Mix-P	LARGE	LARGE	LARGE	LARGE	SWFR
Pres Mix-F	LARGE	LARGE	LARGE	LARGE	SWFR
Zone2 Amp ON	LARGE	LARGE	LARGE	NONE (*)	SWFR
Bi-AMP	LARGE	LARGE	LARGE	NONE	SWFR
TONE : MAX	LARGE	LARGE	LARGE	LARGE	SWFR
TONE : MIN	LARGE	LARGE	LARGE	LARGE	SWFR

(*) ZONE2 L/R (EXTRA SP L/R): LARGE

LARGE: This mode is used for a speaker with high bass reproduction performance (a large unit).
Full bandwidth signals are output.

SMALL: This mode is used for a speaker with low bass reproduction performance (a small unit).
The signals of 90 Hz or less are mixed into the channel specified by LFE/BASS.

NONE: This mode is used for no center speaker.
The center content is reduced by 3 dB and distributed to FRONT L/R.

SWFR: LFE of 5.1 ch signal or LFE/BASS lower than 90 Hz is output through SUBWOOFER OUT.

FRONT: LFE of 5.1 ch signal or LFE/BASS lower than 90 Hz is distributed to FRONT L/R.


LARGE： 低音再生能力の高い（ユニットの大きい）スピーカーを使用するモードです。
全帯域が出力されます。

SMALL： 低音再生能力の低い（ユニットの小さい）スピーカーを使用するモードです。
90 Hz以下がLFE/BASSで指定したチャンネルにミックスされます。

NONE： センタースピーカーを使用しないモードです。
センター成分は-3 dBされて、FRONT L/Rに振り分けられます。

SWFR： 5.1 ch信号のLFEまたは90 Hz以下のLFE/BASSがSUBWOOFER OUTに出力されます。

FRONT： 5.1 ch信号のLFEまたは90 Hz以下のLFE/BASSをFRONT L/Rに振り分けます。

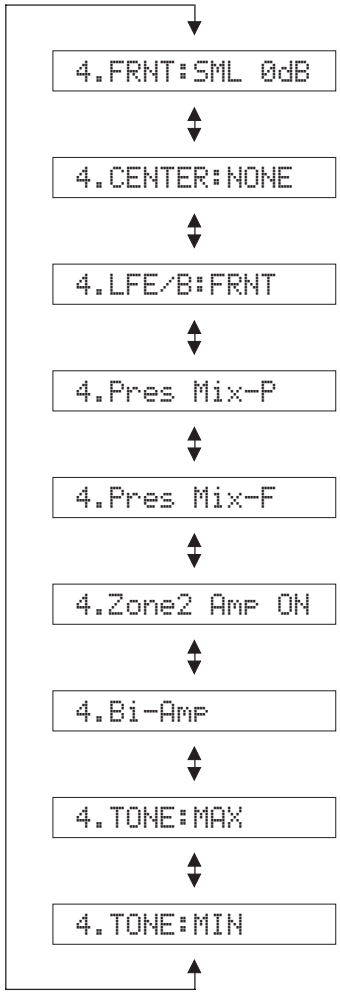

FRONT: SML 0dB
90 Hz or lower signal is mixed to the channel specified by LFE/BASS and output.
90 Hz以下の信号がLFE/BASSで指定したチャンネルにミックスされて出力します。

CENTER: NONE
The CENTER signal is assigned to FRONT L/R.
CENTERの信号をFRONT L/Rに振り分け出力します。

LFE / BASS: FRONT
The LFE/BASS signal is assigned to FRONT L/R.
LFE/BASSの信号をFRONT L/Rに振り分け出力します。

PRESENCE Mix-P
The PRESENCE L/R signal is increased by 6.0 dB and assigned to FRONT L/R.
PRESENCE L/Rの信号が+6.0 dBされてFRONT L/Rに振り分け出力します。

PRESENCE Mix-F
The FRONT L/R signal is increased by 6.0 dB and output.
FRONT L/Rの信号が+6.0 dBされて出力します。

Zone2 Amp (EXTRA SP) ON
The ZONE2 L/R (EXTRA SP L/R) signal is output.
EXTRA SP L/Rの信号を出力します。

Bi-AMP
The Bi-AMP signal is output.
Bi-AMPの信号を出力します。

TONE: MAX
The signal is output with tone control of “BASS +10 dB” and “TREBLE +10 dB”.
トーンコントロール“BASS +10 dB”、“TREBLE +10 dB”で出力します。

TONE: MIN
The signal is output with tone control of “BASS -10 dB” and “TREBLE -10 dB”.
トーンコントロール“BASS -10 dB”、“TREBLE -10 dB”で出力します。

INPUT: DVD ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Sub-menu	Input level	Volume	SPEAKER OUT				SUBWOOFER OUTPUT
			FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	
FRNT : SML 0dB	Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-3.0 dBm
CENTER : NONE	Both ch, -20 dBm	+6.0 dB	+9.0 dBm	-∞	+12.0 dBm	+12.0 dBm	-7.0 dBm
LFE/B : FRNT (50 Hz)	Both ch, -20 dBm	+6.0 dB	+25.0 dBm	+3.0 dBm	+3.0 dBm	+3.0 dBm	-∞
Pres Mix-P	Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-7.0 dBm
Pres Mix-F	Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-7.0 dBm
Zone2 Amp ON	Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	-∞ (*)	-7.0 dBm
Bi-AMP	Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+18.0 dBm	+12.0 dBm	-7.0 dBm
TONE : MAX	Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-7.0 dBm
TONE : MIN	Both ch, -20 dBm	+6.0 dB	+11.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-7.0 dBm

(*) ZONE2 L/R (EXTRA SP L/R) SPEAKER OUT: +12.0 dBm

5. XCH-INPUT

The input source “MULTI CHANNEL INPUT” is selected.
It is possible to select the 6 ch/8 ch and 6-ohm/8-ohm by using the sub-menu.
When LIM / PLDET / THM menu is selected, it is possible to move to the next self-diagnostic function menu by turning the “PROGRAM” knob of this unit.

5. XCH-INPUT

入力ソース“MULTI CHANNEL INPUT”が選択されます。
サブメニューにより、6 ch/8 ch入力および6オーム/8オームが選択可能です。
LIM / PLDET / THMのメニューにすると、キー操作はできなくなりますが、本機の“PROGRAM”ツマミを回すことにより、次のダイアグメニューに進めることができます。

6 ch INPUT 6-ohm

6 ch INPUT 6-ohm

```
5.6CH INPUT_6Ω
```

INPUT: MULTI CH INPUT
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT				SUBWOOFER
		FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	OUTPUT
Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	-∞	-18.0 dBm

8 ch INPUT 6-ohm

8 ch INPUT 6-ohm

```
5.8CH INPUT_6Ω
```

INPUT: MULTI CH INPUT
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT				SUBWOOFER
		FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	OUTPUT
Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-18.0 dBm

6 ch INPUT 8-ohm

6 ch INPUT 8-ohm

```
5.6CH INPUT_8Ω
```

INPUT: MULTI CH INPUT
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT				SUBWOOFER
		FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	OUTPUT
Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	-∞	-18.0 dBm

8 ch INPUT 8-ohm

8 ch INPUT 8-ohm

```
5.8CH INPUT_8Ω
```

INPUT: MULTI CH INPUT
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT				SUBWOOFER
		FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	OUTPUT
Both ch, -20 dBm	+6.0 dB	+12.0 dBm	+12.0 dBm	+12.0 dBm	+12.0 dBm	-18.0 dBm

LIM / PLDET / THM

LIM: Setting value of LIM (Limiter control)

* Do not change the value settings because this menu is only for the use of development staff.

PLDET: Power limiter detection
The A/D conversion value during operation is displayed.
(Reference voltage: 5.0 V=255)

THM: Thermo protection detection
The A/D conversion value during operation is displayed.
(Reference voltage: 5.0 V=255)


LIM / PLDET / THM

LIM： LIM（リミッター制御）の設定値

※ 開発スタッフ専用メニューですので、設定値の変更は行わないでください。

PLDET： パワーリミッターの検出
動作時のA/D変換値が表示されます。
（基準電圧：5.0 V＝255）

THM： 温度プロテクションの検出
動作時のA/D変換値が表示されます。
（基準電圧：5.0 V＝255）

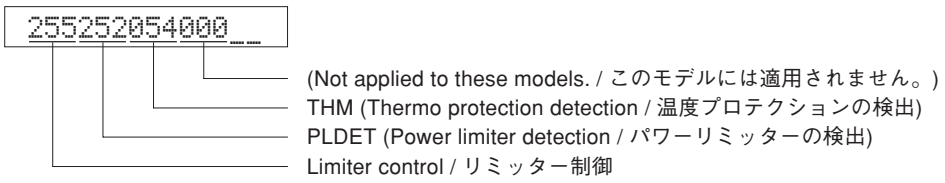


6. MIC CHECK

The signals input through the microphone are output of FRONT L/R via A/D and D/A.

6. MIC CHECK

マイク入力された信号をA/D－D/A経由でFRONT L/Rに出力します。

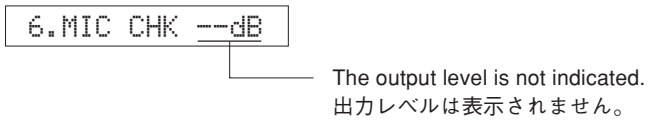

7. FL/OSD CHECK


Use this program to check the FL display section and video control section. When checking the video control section, connect a TV monitor to this unit with a component video cable, S video cable and video pin cable.

Selection of the FL display section or video control section varies according to the submenu operation as shown below.


For audio signal processing, use STRAIGHT.

Checking FL display section /
FL表示部のチェック


Initial display / 初期表示




All segments OFF / 全セグメント消灯




All segments ON (dimmer 100 %) /
全セグメント点灯（ディマー100 %）



All segments ON (dimmer 50 %) /
全セグメント点灯（ディマー50 %）



Lighting of segments in lattice /
セグメント格子状点灯



Lighting in lattice / 格子状点灯



Short / ショート



Normal / 正常

7. FL/OSD CHECK

FL表示部および映像表示部のチェックプログラムです。映像制御部をチェックする場合には、TVモニターと本機をコンポーネント/Dビデオケーブル、Sビデオケーブル、ビデオ用ピンケーブルで接続します。

サブメニュー操作により、FL表示部と映像表示部の選択が以下のように連動して変わります。

オーディオ信号処理はSTRAIGHTです。

Check of the Video control section. (Monitor out) /
映像表示部のチェック（モニター出力）

Initial display (OSD OFF) /
初期表示（OSD表示オフ）

OSD OFF /
OSD表示オフ

OSD OFF /
OSD表示オフ

OSD characters ON /
OSDキャラクター表示オン

OSD characters ON /
OSDキャラクター表示オン

OSD characters / OSDキャラクター表示



8. MANUAL TEST

Noise is output to all channels through the noise generation circuit which is included in the microprocessor. The noise frequency for LFE (SUBWOOFER) is 35 to 80 Hz. Other than that, the noise frequency is 500 to 2 kHz.

TEST ALL

Noise is output from all channels.

8. MANUAL TEST

マイコンに内蔵されているノイズ発生回路によって、全チャンネルへノイズを出力します。
LFE(SUBWOOFER)用のノイズ周波数は35～80 Hz、それ以外はノイズ周波数500～2 kHzとなります。

TEST ALL

全チャンネルからノイズを出力します。



9. A/D DATA CHECK

This menu is used to display the A/D conversion value of the microprocessor which detects panel keys of this unit and protection functions in using the sub-menu.
During signal processing, the condition before execution is maintained.
When K0/K1 menu is selected, keys become non-operable due to detection of the values of all keys. However, it is possible to move to the next self-diagnostic function menu by turning the PROGRAM knob of this unit.

* The figures in the diagram are given as reference only.

PS1/PS2

PSx: Power supply voltage protection detection

PS1

Voltage detects: AC_BH, AC_BL, AC12, AC5, +10, +5.3H and +XM (U, C models)

Normal value: 110 to 205 (Reference voltage: 5.0 V=255)

PS2

Voltage detects: +12, -12, +5V, +5D, +5I and +3.3D

Normal value: 88 to 140 (Reference voltage: 5.0 V=255)

* If PS1 and PS2 are out of the normal value range, the protection function works to turn off the power.

9. A/D DATA CHECK

本機パネルキー、プロテクションなどを検出しているマイコンのA/D変換値を、サブメニューで表示します。
信号処理は実行前の状態を維持します。
K0/K1のメニューにすると、全キーの値を検出するためキー操作はできなくなりますが、本機の“PROGRAM”ツマミを回すことにより、次のダイアグメニューに進めることができます。
※ 図中の数値は参考例です。

PS1/PS2

PSx： 電源電圧プロテクションの検出

PS1

検出電圧： AC_BH、AC_BL、AC12、AC5、+10、+5.3H


正常値： 110～205(基準電圧：5.0 V=255)

PS2

検出電圧： +12、-12、+5V、+5D、+5I、+3.3D

正常値： 88～140(基準電圧：5.0 V=255)

※ PS1およびPS2は正常値を外れるとプロテクションが働き、電源オフされます。



DC/TH

DC: Power amplifier DC protection detection
Power amplifier DC (DC voltage) output is detected.
Normal value: 5 to 36 (Reference voltage: 5.0 V=255)

TH: THM (Thermo protection detection)
Temperature of the heat sink is detected.
Normal value: 0 to 124 (Reference voltage: 5.0 V=255)


* If THM is out of the normal value range, the protection function works to turn off the power.

DC/TH

DC： パワーアンプDCプロテクションの検出
パワーアンプDC（直流電圧）出力の検出
正常値： 5～36（基準電圧：5.0 V＝255）

TH： THM（温度プロテクションの検出）
ヒートシンク温度の検出
正常値： 0～124（基準電圧：5.0 V＝255）

※ THMは正常値を外れるとプロテクションが働き、電源オフされます。



IMP/PL

IMP: 8 or 4 ohms impedance setup detection
IMP 8: 8 ohms setting
IMP 4: 6 ohms setting

PL: PLDET (Power limiter detection)
Power amplifier output voltage detection
The power amplifier output voltage is detected and the power amplifier input voltage is controlled.

TH/PL

IMP： インピーダンス設定の検出
このモデルには適用されません。

PL： PLDET（パワーリミッターの検出）
パワーアンプ出力電圧の検出
パワーアンプ出力電圧を検出して、パワーアンプ入力電圧を制御します。



U, C, T, K, A, B, G, E, F models (Reference voltage: 5.0 V=255)

	During normal operation	Value for starting limiter operation	Value for canceling limiter operation
PLDET (8-ohm/6-ohm)	255 / 255	87 / 146	125 / 171
LIM (Limiter control)	H	L	H

R, L models (Reference voltage: 5.0 V=255)

	During normal operation	Value for starting limiter operation	Value for canceling limiter operation
PLDET (8-ohm/6-ohm)	255 / 255	100	131
LIM (Limiter control)	H	L	H

J model（基準電圧：5.0 V＝255）

	通常値	リミッタ動作開始値	リミッタ動作解除値
PLDET（8-ohm/6-ohm）	255 / 255	100	131
LIM（リミッター制御）	H	L	H

DST/DK

DST: Destination detection
(Reference voltage: 5V=255)

DK: DOCK type detection
(Reference voltage: 5V=255)

DST/DK

DST： 仕向けの検出
（基準電圧：5V=255）

DK： DOCKタイプの検出
（基準電圧：5V=255）



Destination detection for AD port
Pull-up resistance 10 k-ohms

Ohm	0.0 k	1.2 k	2.7 k	4.7 k	6.8 k	10.0 k	15.0 k	27.0 k	47.0 k	100.0 k	–
V	0-0.3	0.4-0.7	0.8-1.3	1.4-1.8	1.9-2.2	2.3-2.7	2.8-3.2	3.3-3.8	3.9-4.3	4.4-4.7	4.8-5.0
A/D (5 V=255)	0-13	14-40	41-68	69-92	93-115	116-140	141-170	171-198	199-221	222-243	245-255
DEST, 139pin	J	U, C	–	R	T	K	A	B	G, E, F	L	–

DOCK detection for AD port (IC30 Microprocessor pin no. 128)
Pull-up resistance 10 k-ohms

DOCK type	DOCK (Bluetooth)	Reserved	Reserved	DOCK (iPod)	Reserved	(Develop-ment)	No connect
Ohm	0.56k	2.7k	5.6k	10.0k	18.0k	39.0k	–
DKID (Pin no. 21)	5-25	50-60	85-100	120-140	150-170	195-210	245-255

K0/K1

K0/K1: KEY0/KEY1 (Panel key of main unit)
The key will fail to function properly if its A/D conversion value deviates from the specific range. In that case, check the constant of partial pressure resistor, solder condition, etc. with referring to the table below.
(Reference voltage: 5.0 V=100)

K0/K1

K0/K1： KEY0/KEY1（本機パネルキー）
キーのA/D値は基準値から外れると、正常な動きをしません。
下表をご覧になり、各キーの分圧抵抗の定数、ハンダ不良等の確認をしてください。
（基準電圧：5.0 V＝100）

K0:255 K1:255

RX-V663 (U, C, R, T, K, A, G, E, F, L models) / HTR-6160 (U, F models)

Display / 表示	KEY0	KEY1
0 - 4	SYSTEM OFF	Zone2 ON/OFF
5 - 13	SCENE1	SCENE3
14 - 21	SCENE2	SCENE4
22 - 31	–	ZONE CONTROL
32 - 42	–	AUDIO SELECT
43 - 53	STRAIGHT	BAND
54 - 61	TONE CONTROL	A/B/C/D/E
62 - 68	SEARCH MODE /EDIT	PRESET <
69 - 75	–	PRESET >
76 - 82	SPEAKERS	MEMORY
83 - 89	PURE DIRECT	INFO
90 - 100	KEY OFF	KEY OFF

HTR-6160 (C model) / DSP-AX763 (J model)

Display / 表示	KEY0	KEY1
0 - 4	–	MUTE
5 - 13	SCENE1	SCENE3
14 - 21	SCENE2	SCENE4
22 - 31	–	SLEEP
32 - 42	–	AUDIO SELECT
43 - 53	STRAIGHT	BAND
54 - 61	TONE CONTROL	A/B/C/D/E
62 - 68	SEARCH MODE /EDIT	PRESET <
69 - 75	–	PRESET >
76 - 82	SPEAKERS	MEMORY
83 - 89	PURE DIRECT	INFO
90 - 100	KEY OFF	KEY OFF

DSP-AX763 (B model)

Display / 表示	KEY0	KEY1
0 - 4	–	–
5 - 13	SCENE1	SCENE3
14 - 21	SCENE2	SCENE4
22 - 31	–	–
32 - 42	–	AUDIO SELECT
43 - 53	STRAIGHT	–
54 - 61	TONE CONTROL	–
62 - 68	–	–
69 - 75	–	–
76 - 82	SPEAKERS	–
83 - 89	PURE DIRECT	–
90 - 100	KEY OFF	KEY OFF

10. VIDEO CHECK

The video circuit is checked by the sub-menu operation.

I2C (Inter integrated circuit) read/write check


Self-diagnosis is executed to check whether data reading/writing between the microprocessor connected to the 12C line and each IC is done properly or not.

10. VIDEO CHECK

サブメニュー操作により、ビデオ回路の確認をします。

I2C（Inter integrated circuit）read/write check

I2Cラインに接続されているマイコンと各IC間でデータ読み出し／書き込みの正否を自己診断します。

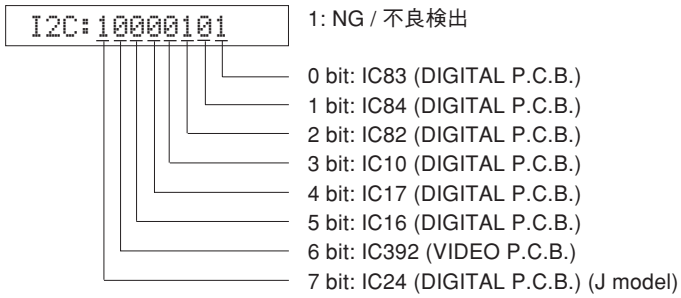

Digital component


The signal passage as shown below is checked.

Digital component

下記の信号経路を確認します。



Digital Component

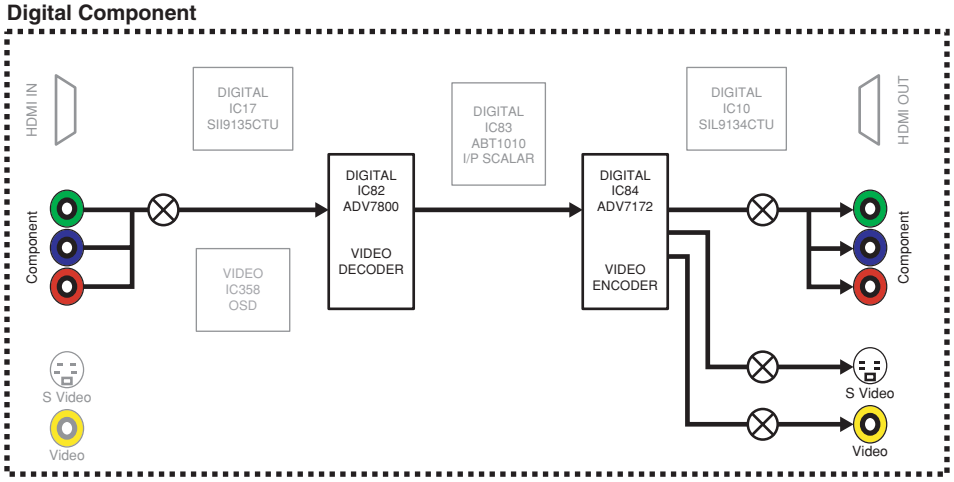


Digital CVBS (Video)
The signal passage as shown below is checked.

Digital CVBS（Video）
下記の信号経路を確認します。

DIGITAL CVBS

Digital CVBS (Video)

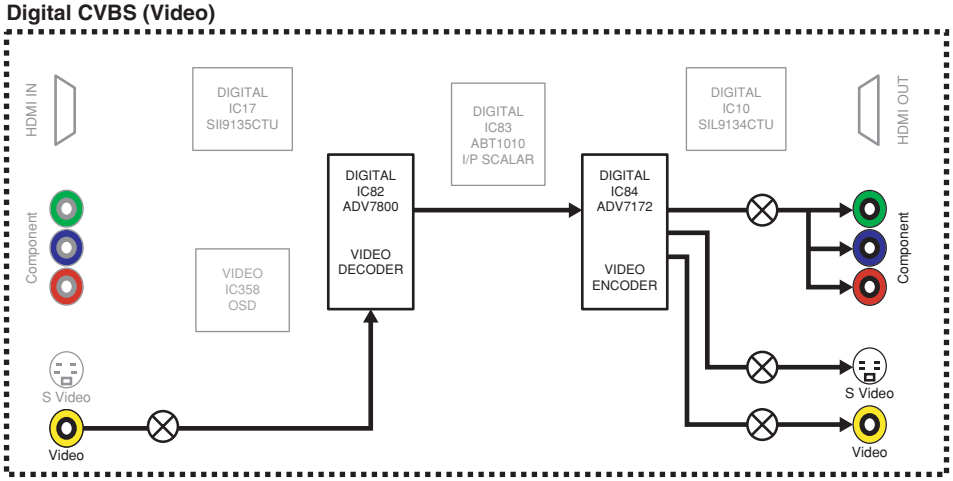


Digital Y/C (S-Video)
The signal passage as shown below is checked.

Digital Y/C（S-Video）
下記の信号経路を確認します。

DIGITAL Y/C

Digital Y/C (S Video)

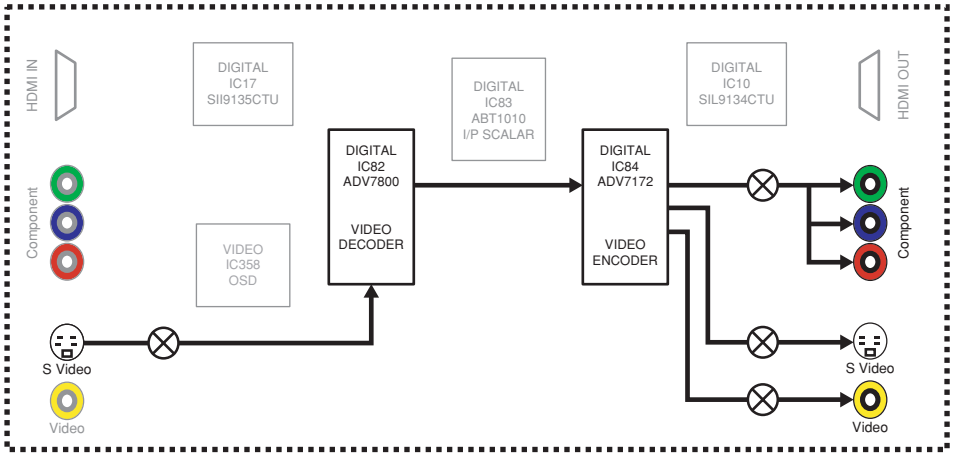


Analog bypass
The signal passage as shown below is checked.

Analog bypass
下記の信号経路を確認します。

ANALOG BYPASS

Analog bypass (Conversion OFF)

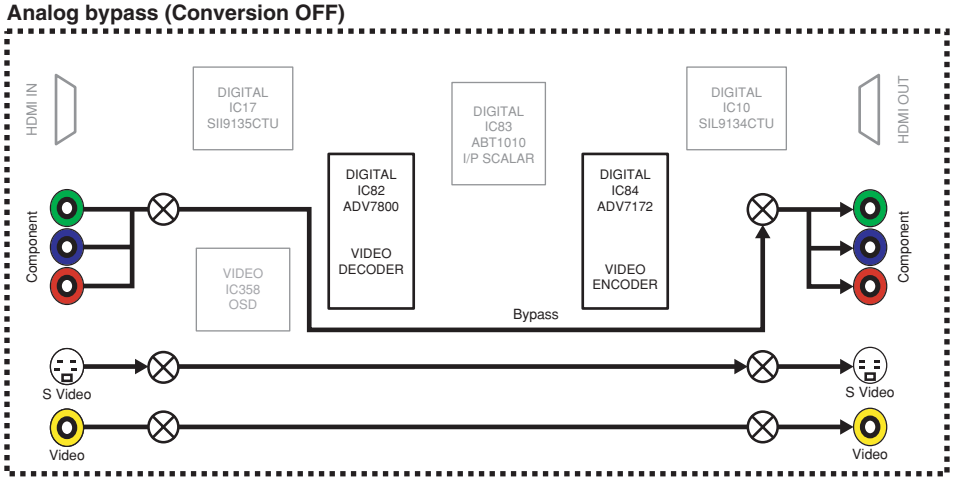


Test pattern
The test pattern is output from IC84 (DIGITAL P.C.B.).


Test pattern
IC84（DIGITAL P.C.B.）からテストパターンを出力します。

TEST PATTERN

Test pattern

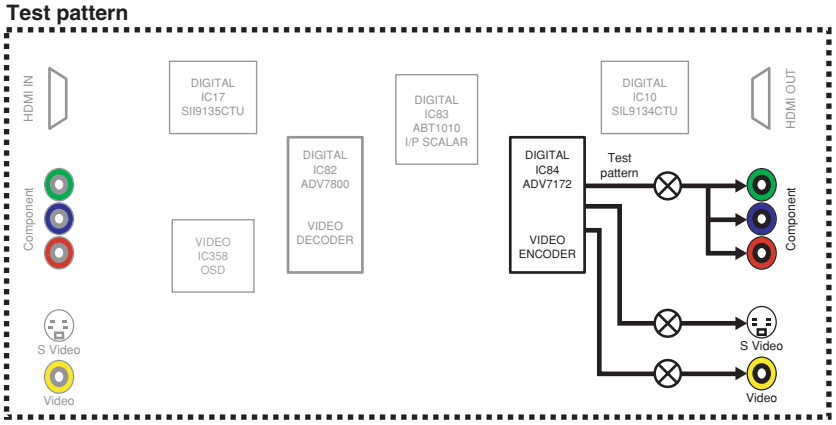

IC84 Test pattern

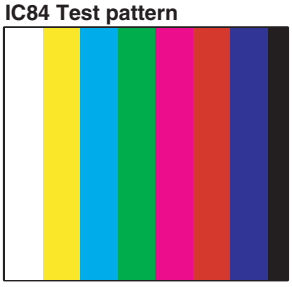

Video information
Displays the information of image signals being input.

Video information
入力されている映像信号の情報を表示します。

Example / 例


VIDEO IN 480i

11. XM STATUS (U, C models)

The output check of XM radio is executed.
(Connect XM radio antenna module to this unit before executing.)

11. XM STATUS（U、C models）

このモデルには適用されません。

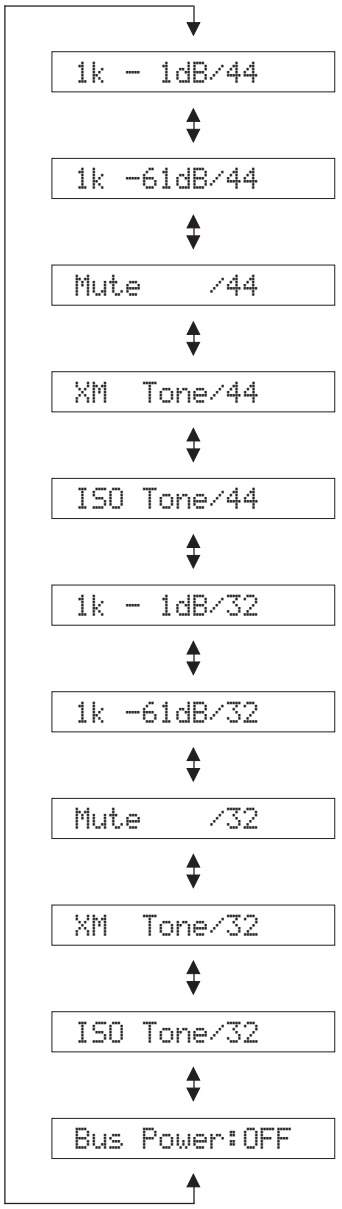

1 kHz, -1 dB / 44.1 kHz
The test tone (1 kHz, -1 dB / 44.1 kHz) is output.

1 kHz, -61 dB / 44.1 kHz
The test tone (1 kHz, -61 dB / 44.1 kHz) is output.

Mute / 44.1 kHz
No signal is output.

XM tone / 44.1 kHz
The XM tone / 44.1 kHz is output.

ISO tone / 44.1 kHz
The ISO tone /44.1 kHz is output.

1 kHz, -1 dB / 32.0 kHz
The test tone (1 kHz, -1 dB / 32.0 kHz) is output.

1 kHz, -61 dB / 32.0 kHz
The test tone (1 kHz, -61 dB / 32.0 kHz) is output.

Mute / 32.0 kHz
No signal is output.

XM tone / 32.0 kHz
The XM tone / 32.0 kHz is output.

ISO tone / 32.0 kHz
The ISO tone / 32.0 kHz is output.


XM bus power: OFF
The power of XM radio antenna module is turned off.

12. SIRIUS (U, C models)

The SIRIUS version is displayed.

12. SIRIUS（U、C models）

このモデルには適用されません。

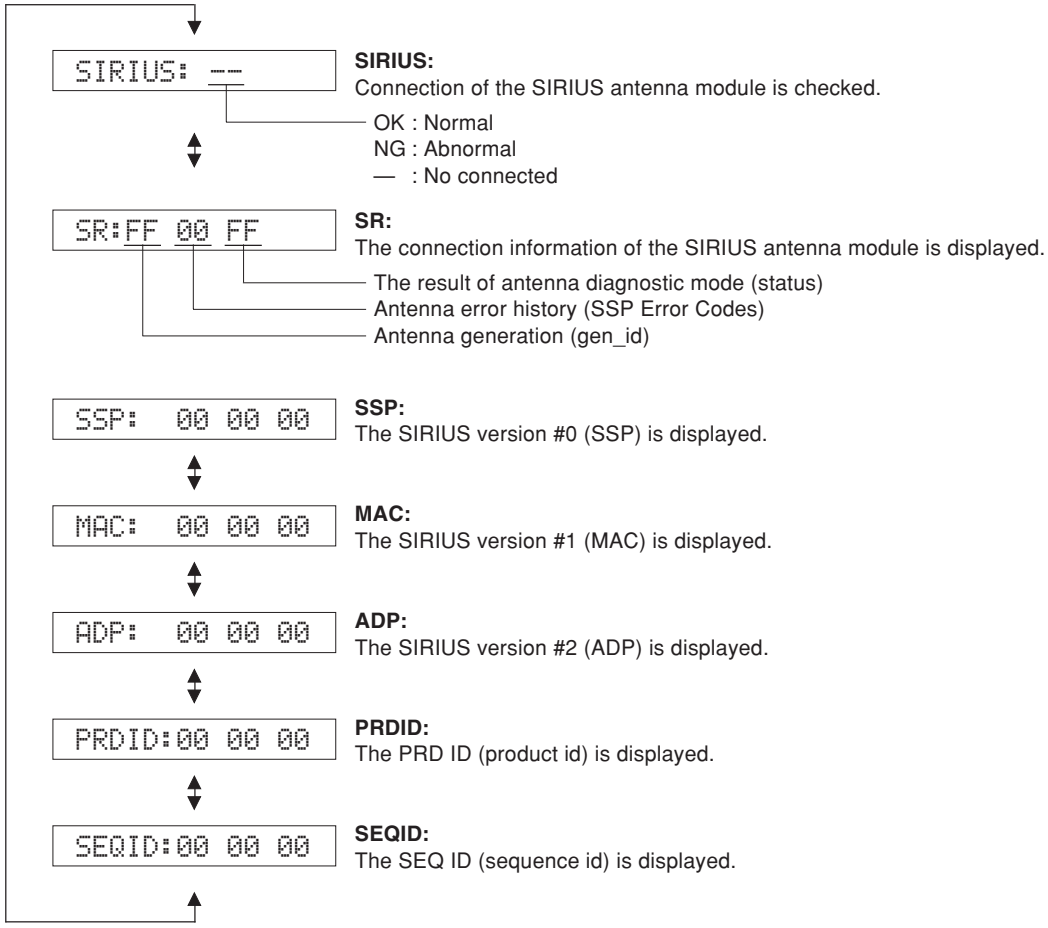

13. HD RADIO (U model)

CPU version

The sub-microprocessor version in HD radio module is displayed.

13. HD RADIO（U model）

このモデルには適用されません。

CPU version

HD CPU V:09.13

DSP version

The DSP version in HD radio module is displayed.

DSP version

D:DRI-352-V016

14. DOCK


This menu is used to test the DOCK connector without the iPod itself.
After turning off the power, short between pins No. 14 (TX) and No. 18 (RX), between pins No. 1 (PWR) and No. 17 (ACCPOW) and between pins No. 4 (iPDET) and No. 8 (DGND).
Start the self-diagostic function and select the menu.
The check result is displayed according to the following display specifications.

Note) Be sure to return the shorted locations to their original state.


14. DOCK

iPod本体無しで、DOCKコネクターの検査を行うメニューです。
電源オフの状態にしてから、DOCKコネクターの14ピン（TX）と18ピン（RX）、1ピン（PWR）と17ピン（ACCPOW）、4ピン（iPDET）と8ピン（DGND）をショートさせます。
ダイアグを起動してメニューを選択します。
下記表示仕様に従って、チェック結果が表示されます。

注） ショート箇所は、必ず元に戻してください。

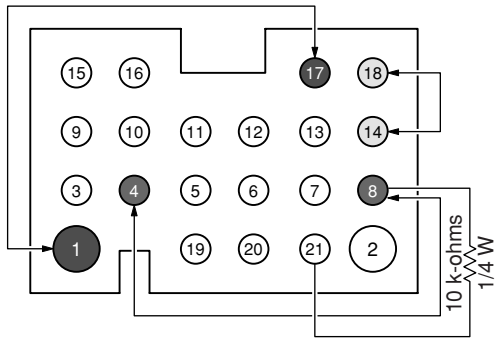


DOCK



Check item / チェック項目	Short pins / ショートピン	Result / 結果		Display / 表示
UART loop back test / UARTループバックテスト	Pins No.14 (TX) – No.18 (RX)	OK		Y
		NG		N
iPAP (iPod accessory power) detection / iPAP（iPod accessory power）検出	Pins No.1 (PWR) – No.17 (ACCPOW)	IC30 pin No. 141	High	Y
			Low	N
iPDET (iPod installation to DOCK) detection / iPDET（iPod installation to DOCK）検出	Pins No.4 (iPDET) – No.8 (DGND)	IC30 pin No. 4	Low	Y
			High	N
DKID (DOCK ID) detection / DKID（DOCK ID）検出	Pins No.21 (DKID) – No.8 (DGND) * 10 k-ohms, 1/4 W pull down	IC30 pin No. 28	10 k-ohms, 1/4 W pull down	Y
			Other	N

15. HDMI INFORMATION

15. HDMI INFORMATION

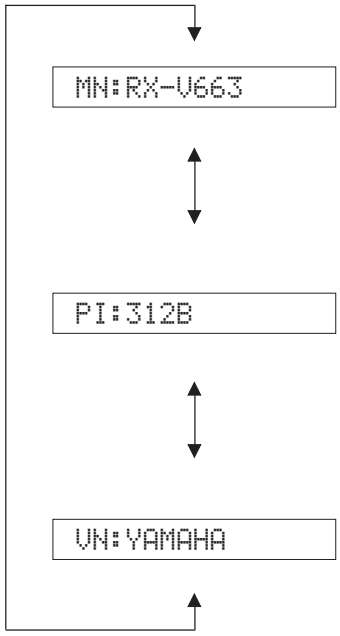

HDMI model name
The model name of this unit written in HDMI module is displayed.
HDMIモジュールに書き込まれている本機のモデル名を表示します。
RX-V663 : (U, C, R, T, K, A, G, E, F, L models)
HTR-6160 : (U, C, F models)
DSP-AX763 : (B, J models)

HDMI product ID
The product ID of this unit written in HDMI module is displayed.
HDMIモジュールに書き込まれている本機のプロダクトIDを表示します。
3127: RX-V663 (U, C, R, T, K, A, B, G, E, F, L models)
3124: HTR-6160 (U, C, F models)
3126: DSP-AX763 (B model)
3125: DSP-AX763 (J model)

HDMI vendor name
The vendor name “YAMAHA” of this unit written in HDMI module is displayed.
HDMIモジュールに書き込まれている本機のベンダ名“YAMAHA”を表示します。

16. HDMI SELECT


The selected input signal is output to HDMI OUT by the sub-menu operation.

* Support audio is set to “OTHER”.

16. HDMI SELECT

サブメニュー操作により, 選択された入力信号をHDMI OUTへ出力します。

※ SUPPORT AUDIOは“OTHER”に設定されます。

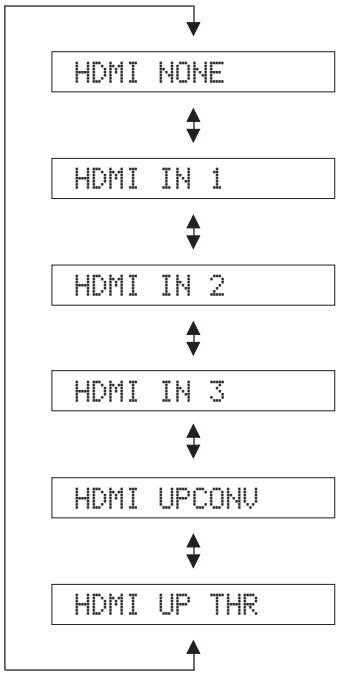

HDMI none
No signal is output.
何も出力されません。

HDMI in 1
HDMI “IN 1” is output.
HDMI “IN 1”が出力されます。


HDMI in 2
HDMI “IN 2” is output.
HDMI “IN 2”が出力されます。

HDMI in 3
HDMI “IN 3” is output.
HDMI “IN 3”が出力されます。


HDMI up conversion
The analog video signals are output after undergoing Interlace/Progressive conversion.
アナログ映像信号はI/P変換し、出力されます。

HDMI up conversion through
The analog video signals are output after undergoing video up-conversion.
アナログ映像信号がビデオコンバージョンし、出力されます。

HDMI up-conversion 1080p

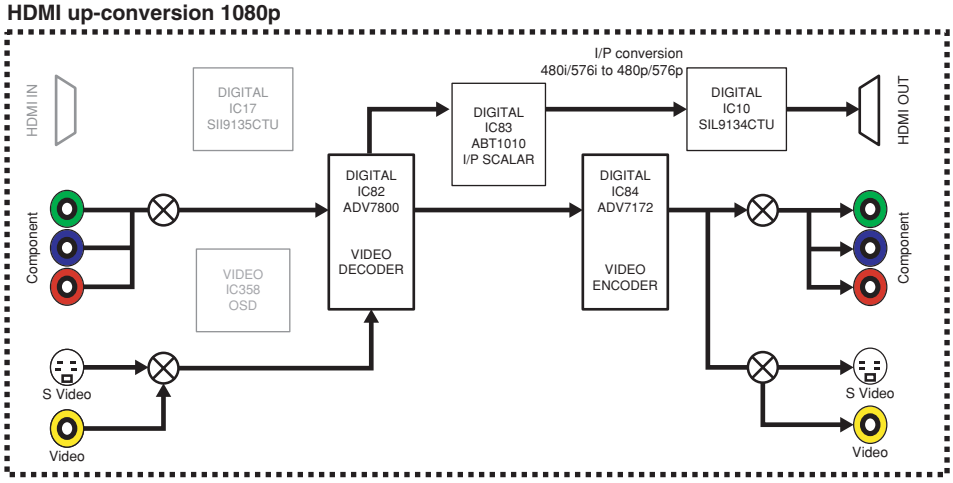

HDMI up-conversion through

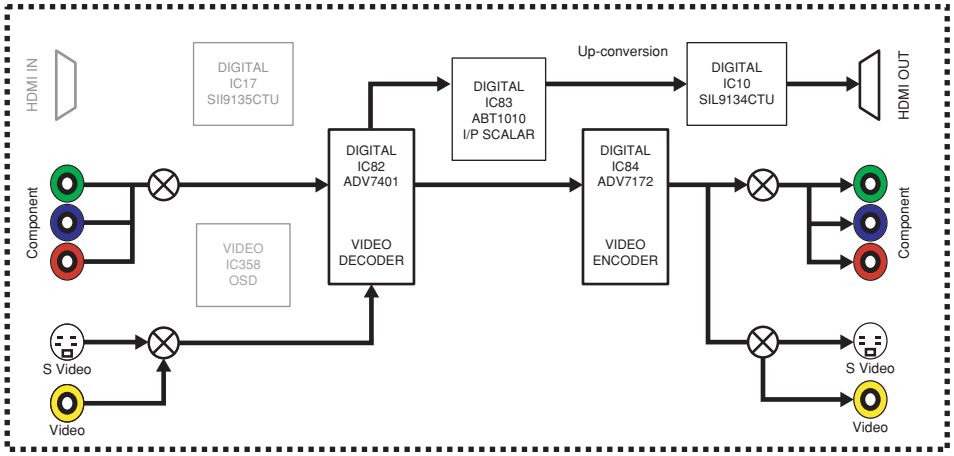

17. IF STATUS (Input function status)

The status information is displayed in the hexadecimal notation one after another by the sub-menu operation.
For signal processing, the status before the sub-menu operation is maintained.

* Mentioning the details is not allowed because this menu is only for the use of development staff.
* The figures in the diagram are given as reference only.

17. IF STATUS（Input function status）

サブメニュー操作により、ステータス情報を順次16進数で表示します。
信号処理は、サブメニュー操作前の状態を維持します。

※ 開発スタッフ専用メニューですので、詳細を記述することはできません。
図中の数値は参考例です。

DST:3000020000	**DSP status**

18. DSP BUS CHECK

This menu is used to self-diagnose whether or not the bus connection for the TI (DA70Y) and the external ROM/RAM is made properly.

18. DSP BUS CHECK

TI（DA70Y）と外付けROM/RAMとのバス接続の正否を自己診断します。

TI BUS:NoEr

NoEr: No error detected.
Boot: When “Boot” is displayed for a few seconds or “Boot” and “NoEr” are displayed alternately, there is possibility that an error occurs.

NoEr： 不良検出なし
Boot： “Boot”が数秒間表示されるまたは“Boot”と“NoEr”が交互に表示される場合、異常が発生している可能性があります。

19. RESERVED


19. RESERVED

20. PROTECTION HISTORY

Four protection histories are displayed.

20. PROTECTION HISTORY

過去のプロテクション履歴が4つまで表示されます。

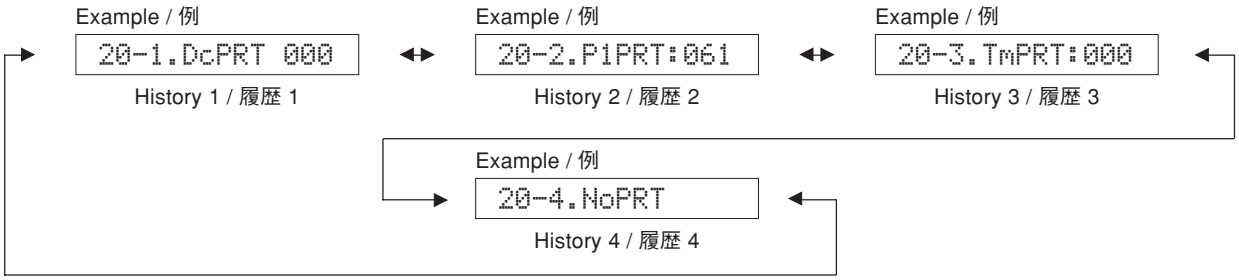

21. RESERVED

21. RESERVED

22. UPDATE

Not applied to these models.

22. UPDATE

このモデルには適用されません。




23. FACTORY PRESET

This menu is used to reserve/inhibit initialization of the user memory (Parameters and set menu contents, etc. of the sound field program).
The signals are processed using EFFECT OFF (The L/R signal is output using ANALOG BYPASS).

23. FACTORY PRESET

ユーザーメモリ（音場プログラムのパラメーターやセットメニュー内容等）の初期化を予約／禁止します。
信号処理はEFFECT OFF（ANALOG BYPASSでL/Rを出力）です。

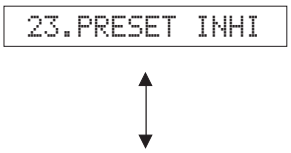

PRESET INHIBIT (Initialization inhibited) / PRESET INHIBIT（初期化禁止）
User memory initialization is not executed. Select this sub-menu to protect the user memory.
ユーザーメモリの初期化は行われません。ユーザーメモリを保護するときは、こちらを選択してください。

PRESET RESERVED (Initialization reserved) / PRESET RESERVED（初期化予約）
Initialization of the user memory is reserved. (Actually, initialization is executed the next time that the power is turned on.)
Select this sub-menu to reset to the original factory settings or to reset the user memory.
Any protection history will be cleared.
ユーザーメモリの初期化が予約されます。（実際に初期化されるのは、次回の電源投入時です。）
工場出荷時やユーザーメモリをリセットしたいときは、こちらを選択してください。
このとき、プロテクション履歴も初期化されます。

CAUTION: Before setting to the PRESET RESERVED, write down the existing preset memory content of the tuner in a table as shown below. (This is because setting to the PRESET RESERVED will cause the user memory content of the tuner to be erased.)

注意： PRESET RESERVEDを選んで初期化をする前に、チューナーのユーザーメモリー内容を下表に書き写してください。（初期化をすると、チューナーのユーザーメモリーの内容は消えてしまいます。）

Preset Group	P1	P2	P3	P4	P5	P6	P7	P8
A								
B								
C								
D								
E								


24. ROM VER. / SUM / PORT

The firmware version and checksum value are displayed. The signal is processed using EFFECT OFF. The checksum is obtained by adding the data at every 8-bit for each program area and expressing the result as a 4-figure hexadecimal data.

* The figures in the diagram are given as reference only.

24. ROM VER. / SUM / PORT

ファームウエアのバージョン、チェックサムを表示します。 信号はエフェクトオフです。
チェックサムは、プログラムエリア別にデータを8ビットごとに加算していき、4桁の16進データで現したものです。
※ 図中の数値は参考例です。

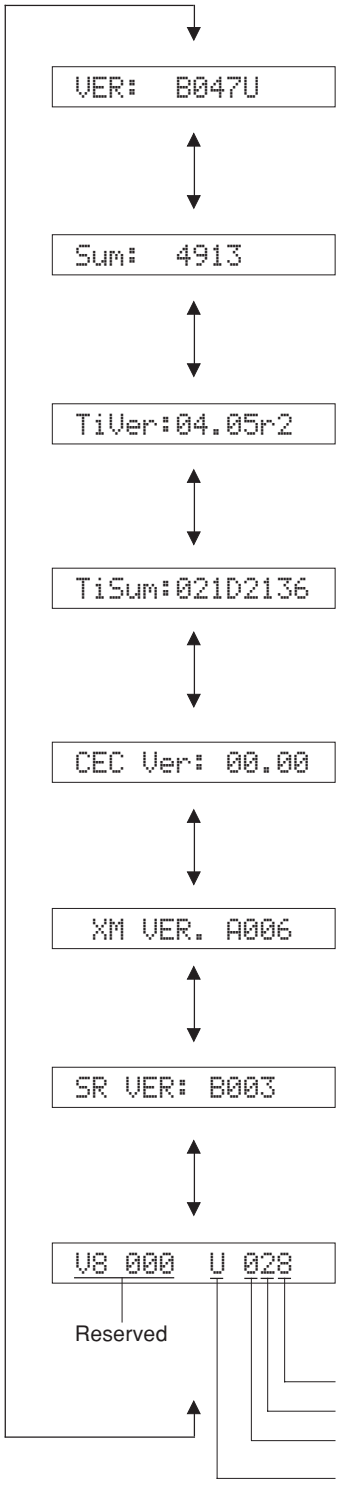

Version
Firmware version of microprocessor (IC30 DIGITAL P.C.B.) is displayed.
マイコン(IC30 DIGITAL P.C.B.)のファームウェアのバージョンを表示します。

All checksum
Checksum value of microprocessor (IC30 DIGITAL P.C.B.) is displayed.
マイコン(IC30 DIGITAL P.C.B.)のチェックサム値を表示します。

TI FLASH ROM version
Firmware version of TI FLASH ROM (IC51 DIGITAL P.C.B.) is displayed.
TI FLASH ROM(IC51 DIGITAL P.C.B.)のファームウェアのバージョンを表示します。

TI FLASH ROM checksum
Checksum value of TI FLASH ROM (IC51 DIGITAL P.C.B.) is displayed.
TI FLASH ROM(IC51 DIGITAL P.C.B.)のチェックサム値を表示します。

CEC version
Firmware version of CEC (IC24 DIGITAL P.C.B.) is displayed.
CEC(IC24 DIGITAL P.C.B.)のファームウェアのバージョンを表示します。

XM version (U, C models)
The version of XM firmware is displayed.
XMのファームウェアのバージョンを表示します。

SIRIUS version
Firmware version of SIRIUS is displayed.
SIRIUS のファームウェアのバージョンを表示します。

Port
The condition of ports for model detection / モデル判別ポートの状態

Model: RX-V663/DSP-AX763/HTR-6160

	RX-V663/DSP-AX763	HTR-6160
MOD0	0	1
MOD1	1	1
MOD2	1	1

Destination: U, C, R, T, K, A, B, G, E, F, L, J

■ CONFIRMATION OF IDLING CURRENT OF AMP UNIT / アンプユニットのアイドリング電流の確認

- Right after power is turned on, confirm that the voltage across the terminals of R1303 (SURROUND BACK R ch), R1153 (SURROUND R ch), R1154 (FRONT R ch), R1152 (CENTER), R1150 (FRONT L ch), R1151 (SURROUND L ch), R1149 (SURROUND BACK L ch) are between 0.1 mV and 10.0 mV.
- If measured voltage exceeds 10.0 mV, open (cut off) R1252 (SURROUND BACK R ch), R1112 (SURROUND R ch), R1114 (FRONT R ch), R1110 (CENTER), R1106 (FRONT L ch), R1108 (SURROUND L ch), R1104 (SURROUND BACK L ch) and reconfirm the voltage.

  Attention
  If the measured voltage exceeds 10.0 mV after repairing a power amplifier first check for a defective component before cutting the bias resistor.


- Confirm that the voltage is 0.2 mV to 15.0 mV after 60 minutes.


● 電源投入直後、R1303（SURROUND BACK R ch）、R1153（SURROUND R ch）、R1154（FRONT R ch）、R1152（CENTER）、R1150（FRONT L ch）、R1151（SURROUND L ch）、R1149（SURROUND BACK L ch）の端子間電圧を測定し、0.1 mVから10.0 mVの間であることを確認してください。

● 電圧が10.0 mVを超えている場合は、R1252（SURROUND BACK R ch）、R1112（SURROUND R ch）、R1114（FRONT R ch）、R1110（CENTER）、R1106（FRONT L ch）、R1108（SURROUND L ch）、R1104（SURROUND BACK L ch）をカットし、電圧を再確認してください。


注意
パワーアンプ修理後に10.0 mVを超えている場合は、抵抗をカットする前に故障箇所を調べてください。

● 60分後、電圧が0.2 mV～15.0 mVであることを確認してください。

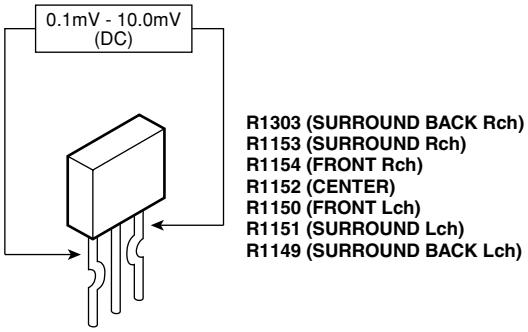

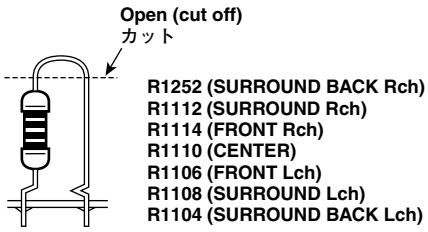


Rear

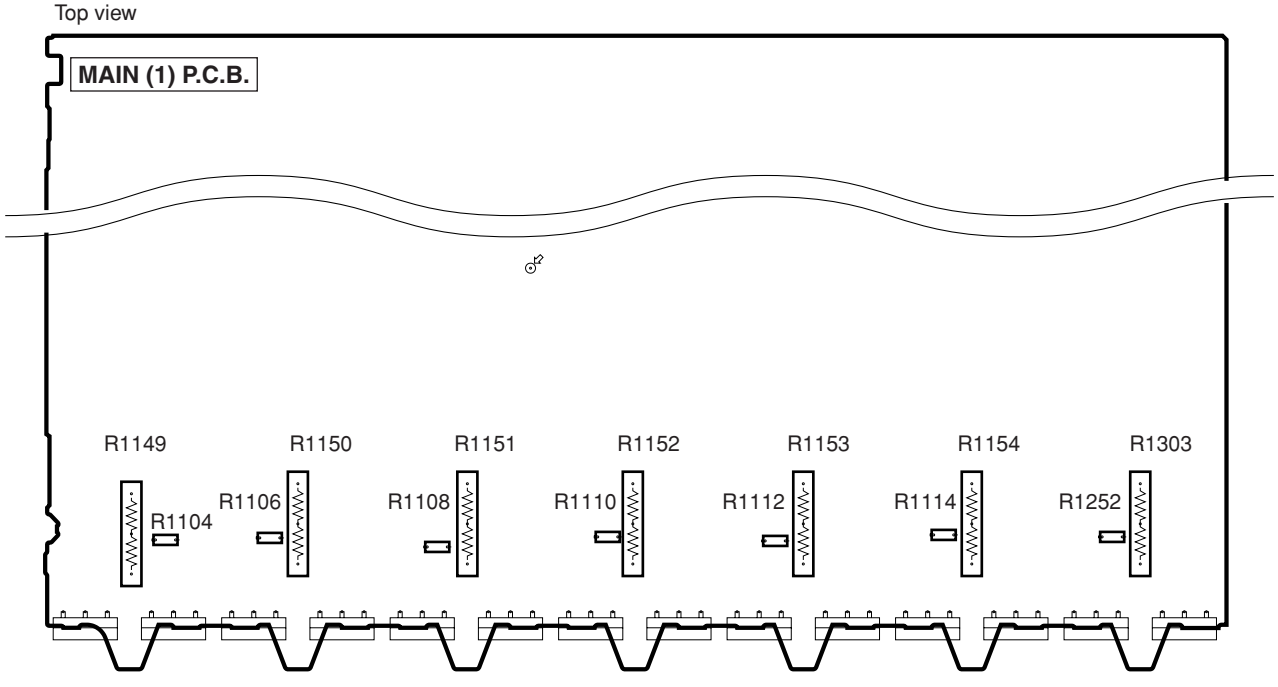

Front

■ DISPLAY DATA

● V401: 17-BT-32GNK (OPERATION P.C.B.)

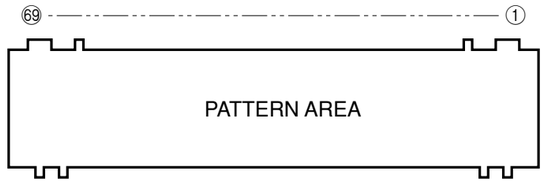


● PIN CONNECTION


Pin No.	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35
Connection	F2	NX	NP	NP	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15	P16	P17	P18	P19	P20	P21	P22	P23	P24	P25	P26	P27	P28	P29	P30	P31

Pin No.	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
Connection	P32	P33	P34	P35	P36	P37	NX	NX	NX	NX	NX	NX	NX	17G	16G	15G	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	NP	NP	NX	F1

Note : 1) F1, F2 ..... Filament pin 2) NP ..... No pin 3) NX ..... No extend pin 4) 1G~17G ..... Grid pin

● GRID ASSIGNMENT

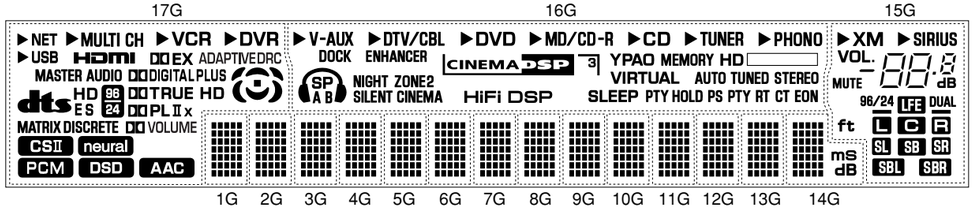

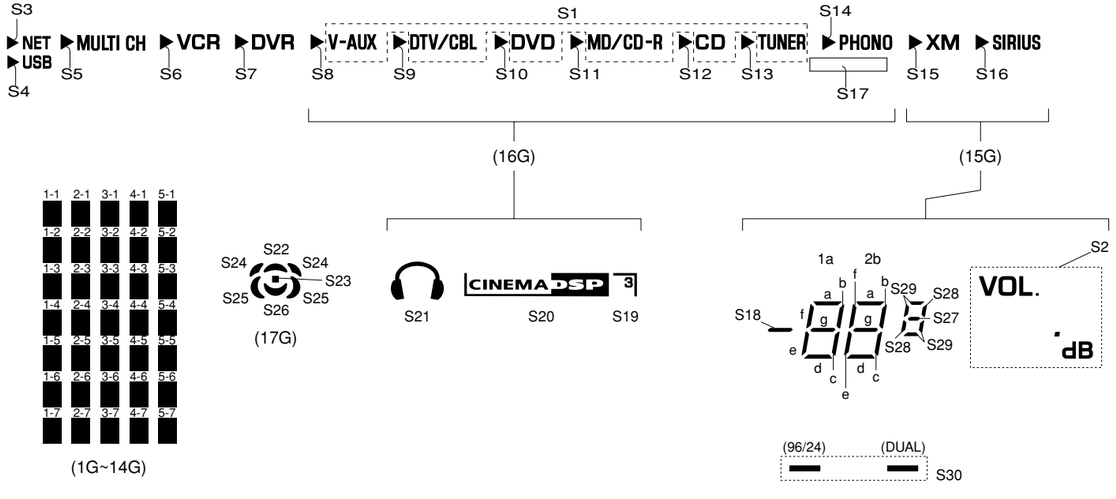


● ANODE CONNECTION

	17G	16G	15G	14G	13G~1G
1P	NET	S1	XM	1-1	1-1
2P	MULTI CH	PHONO	SIRIUS	2-1	2-1
3P	VCR	S8	S15	3-1	3-1
4P	DVR	S9	S16	4-1	4-1
5P	USB	S10	S2	5-1	5-1
6P	S3	S11	S18	1-2	1-2
7P	S5	S12	1a	2-2	2-2
8P	S6	S13	1b	3-2	3-2
9P	S7	S14	1c	4-2	4-2
10P	S4	DOCK	1d	5-2	5-2
11P	HDMI	ENHANCER	1e	1-3	1-3
12P	DOLBY EX	S21	1f	2-3	2-3
13P	ADAPTIVEDRC	SP	1g	3-3	3-3
14P	MASTER AUDIO	A	2a	4-3	4-3
15P	dts	B	2b	5-3	5-3
16P	HD (ES)	NIGHT	2c	1-4	1-4
17P	ES	ZONE2	2d	2-4	2-4
18P	96/24	SILENT CINEMA	2e	3-4	3-4
19P	DOLBY DIGITAL	S20	2f	4-4	4-4
20P	PLUS	S19	2g	5-4	5-4
21P	DOLBY TRUE HD	HiFi DSP	S27	1-5	1-5
22P	DOLBY PL	YPAO	S28	2-5	2-5
23P	II	MEMORY	S29	3-5	3-5
24P	x	HD	MUTE	4-5	4-5
25P	MATRIX	S17	96/24	5-5	5-5
26P	DISCRETE	VIRTUAL	DUAL	1-6	1-6
27P	DOLBY VOLUME	AUTO	ft	2-6	2-6
28P	CS II	TUNED	S30	3-6	3-6
29P	neural	STEREO	LFE	4-6	4-6
30P	PCM	SLEEP	L	5-6	5-6
31P	DSD	PTY (HOLD)	C	1-7	1-7
32P	AAC	HOLD	R	2-7	2-7
33P	S22	PS	SL	3-7	3-7
34P	S23	PTY (RT)	SB	4-7	4-7
35P	S24	RT	SR	5-7	5-7
36P	S25	CT	SBL	mS	–
37P	S26	EON	SBR	dB	–

■ IC DATA

IC41: LC89057W-VF4AD-E (DIGITAL P.C.B.)
Digital audio interface transceiver

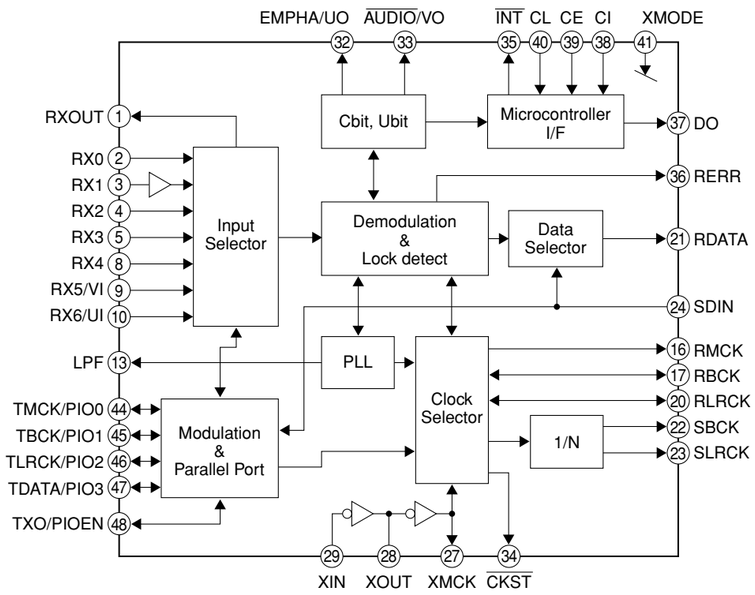



Pin No.	Function Name	I/O	Detail of Function
1	RXOUT	O	Output pin of input bi-phase selection data
2	RX0	Is	Input pin of TTL-compatible digital data
3	RX1	I	Digital data input pin with built-in amplifier that supports coaxial
4	RX2	Is	Input pin of TTL-compatible digital data
5	RX3	Is	Input pin of TTL-compatible digital data
6	DGND		Digital GND
7	DVDD		Digital power supply (3.3 V)
8	RX4	Is	Input pin of TTL-compatible digital data
9	RX5	Is	TTL-compatible digital data / Validity flag input pin for modulation
10	RX6	Is	TTL-compatible digital data / User data input pin for modulation
11	DVDD		Digital power supply for PLL
12	DGND		Digital GND for PLL
13	LPF	O	PLL loop filter connection pin
14	AVDD		Analog power supply for PLL (3.3 V)
15	AGND		Analog GND for PLL
16	RMCK	O	R system clock output pin (256 fs, 512 fs, XIN, VCO)
17	RBCK	O/I	R bit clock input/output pin (64 fs)
18	DGND		Digital GND
19	DVDD		Digital power supply (3.3 V)
20	RLRCK	O/I	R LR clock input/output pin (fs)
21	RDATA	O	Output pin of serial audio data
22	SBCK	O	S bit clock output pin (32 fs, 64 fs, 128 fs) (No connected.)
23	SLRCK	O	S LR clock output pin (fs/2, fs, 2 fs) (No connected.)
24	SDIN	Is	Input pin of serial audio data
25	DGND		Digital GND
26	DVDD		Digital power supply (3.3 V)
27	XMCK	O	Oscillation amplifier output pin
28	XOUT	O	Quartz resonator connection output pin
29	XIN	I	Quartz resonator connection, input pin of external supply clock (24.576 MHz or 12.288 MHz)
30	DVDD		Digital power supply (3.3 V)
31	DGND		Digital GND
32	EMPHA/UO/CD	I/O	Emphasis information / U data output / C data output / Chip address setting pin
33	AUDIO/VO	I/O	Non-PCM detection / V flag output / Chip address setting pin
34	CKST/PT	I/O	Output of clock switch transitional period signal / Preamble B output / Demodulation master or slave function switch pin
35	INT	I/O	Interrupt output for microprocessor (Possible to select an interrupt factor.) / Modulation or general-purpose I/O switch pin
36	RERR	O	PLL clock error, data error flag output
37	DO	O	Microprocessor I/F, read data output pin (3-state)
38	DI	Is	Microprocessor I/F, write data input pin
39	CE	Is	Microprocessor I/F, chip enable input pin
40	CL	Is	Microprocessor I/F, clock input pin"
41	XMODE	Is	System reset input pin
42	DGND		Digital GND
43	DVDD		Digital power supply (3.3 V)
44	PIO0	I/O	512 fs, 256 fs, 128 fs system clock input for modulation or external / General-purpose I/O input/output pin
45	PIO1	I/O	64 fs bit clock input for modulation / General-purpose I/O input/output pin
46	PIO2	I/O	fs clock input for modulation / General-purpose I/O input/output pin
47	PIO3	I/O	Serial audio data input for modulation / General-purpose I/O input/output pin
48	PIOEN	I/O	Modulation data output / General-purpose I/O enable output pin

1) Withstand voltage input/output: I or O = -0.3 to 3.6 V, Is = -0.3 to 5.5 V
2) Pins 32 and 33 are input pins for chip address setting, when pin 41 = "L".
3) Pin 34 is a demodulation function master or an input pin for slave setting, when pin 41 = "L".
4) Pin 35 is a modulation function or an input pin for general-purpose I/O function switch setting, when pin 41 = "L".
5) ON/OFF for all power supplies must be done at the same timing as a latch-up countermeasure.

IC44 : D70YE101BRFP266 (DIGITAL P.C.B.)
Floating-point digital signal processors

* No replacement part available. / サービス部品供給なし

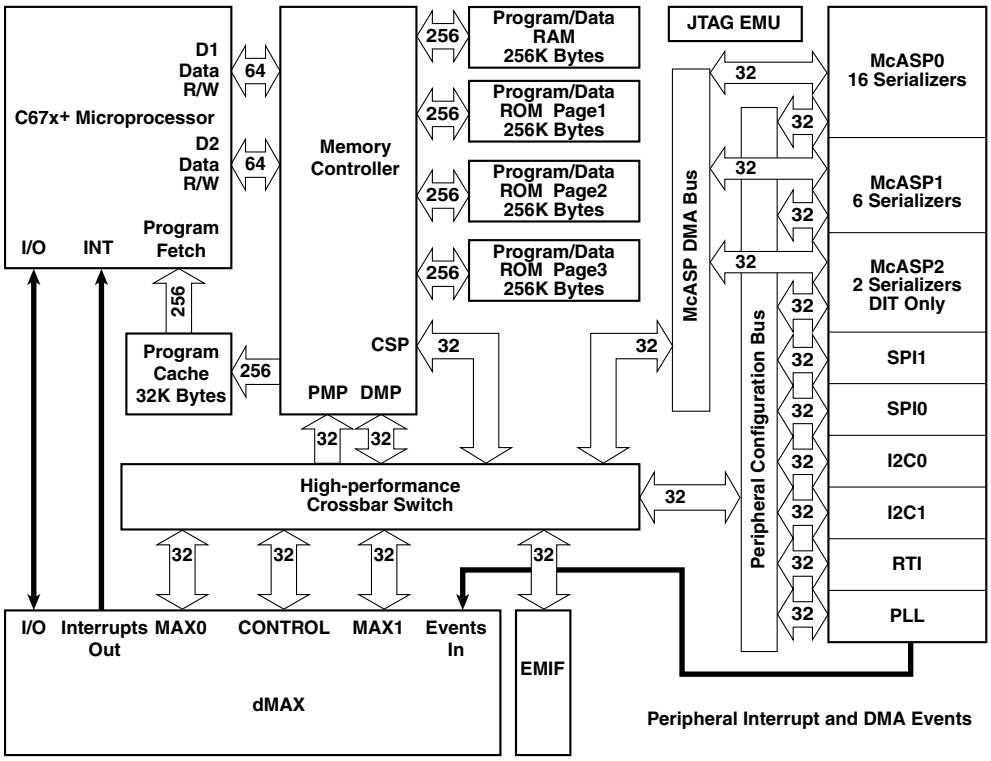

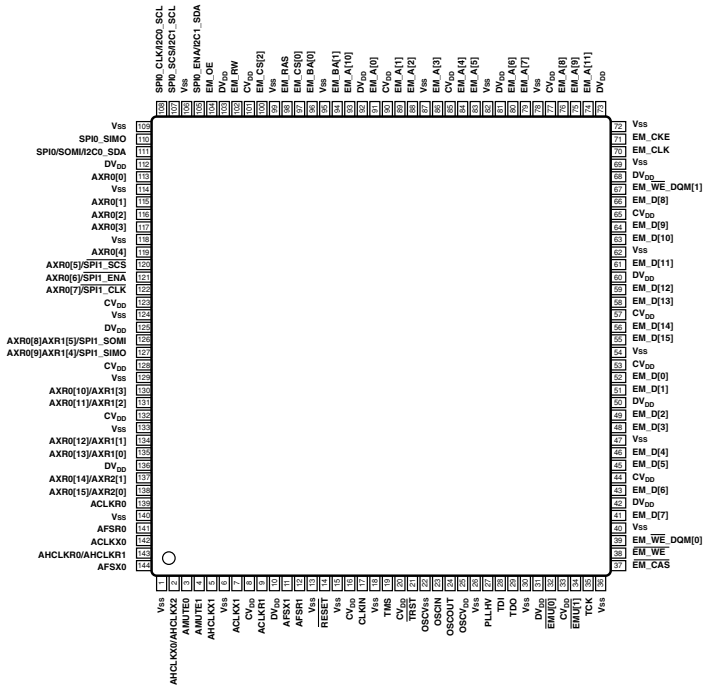


Pin No.	Function Name	I/O			Detail of Function
		TYPE(1)	PULL(2)	GPIO(3)	
External memory interface (EMIF) address and control					
37	EM_CAS	O	–	N	SDRAM column address strobe
38	EM_WE	O	–	N	SDRAM write enable
39	EM_WE_DQM[0]	O	–	N	Write enable or byte enable for EM_D[7:0]
67	EM_WE_DQM[1]	O	–	N	Write enable or byte enable for EM_D[15:8]
70	EM_CLK	O	–	N	SDRAM clock
71	EM_CKE	O	–	N	SDRAM clock enable
74	EM_A[11]	O	–	N	EMIF address bus
75	EM_A[9]	O	–	N	
76	EM_A[8]	O	–	N	
79	EM_A[7]	O	–	N	
80	EM_A[6]	O	–	N	
83	EM_A[5]	O	–	N	
84	EM_A[4]	O	–	N	
86	EM_A[3]	O	–	N	
88	EM_A[2]	O	–	N	
89	EM_A[1]	O	–	N	
91	EM_A[0]	O	–	N	
93	EM_A[10]	O	–	N	
94	EM_BA[1]	O	–	N	SDRAM bank address and asynchronous memory low-order address
96	EM_BA[0]	O	–	N	
97	EM_CS[0]	O	–	N	SDRAM chip select
98	EM_RAS	O	–	N	SDRAM row address strobe
100	EM_CS[2]	O	–	N	Asynchronous memory chip select
102	EM_RW	O	–	N	Asynchronous memory read/not write (No connected.)
104	EM_OE	O	–	N	SDRAM output enable
External memory interface (EMIF) data bus					
41	EM_D[7]	I/O	–	N	EMIF data bus [Lower 16-bit]
43	EM_D[6]	I/O	–	N	
45	EM_D[5]	I/O	–	N	
46	EM_D[4]	I/O	–	N	
48	EM_D[3]	I/O	–	N	
49	EM_D[2]	I/O	–	N	
51	EM_D[1]	I/O	–	N	
52	EM_D[0]	I/O	–	N	
55	EM_D[15]	I/O	–	N	
56	EM_D[14]	I/O	–	N	
58	EM_D[13]	I/O	–	N	
59	EM_D[12]	I/O	–	N	
61	EM_D[11]	I/O	–	N	
63	EM_D[10]	I/O	–	N	
64	EM_D[9]	I/O	–	N	
66	EM_D[8]	I/O	–	N	
McASP0, McASP1, McASP2 and SPI1 serial ports					
2	AHCLKX0	I/O	–	Y	McASP0 and McASP2 transmit master clock
3	AMUTE0	O	–	Y	McASP0 mute output
4	AMUTE1	O	–	Y	McASP1 mute output
5	AHCLKX1	I/O	–	Y	McASP1 transmit master clock
7	ACLKX1	I/O	–	Y	McASP1 transmit bit clock
9	ACLKR1	I/O	–	Y	McASP1 receive bit clock
11	AFSX1	I/O	–	Y	McASP1 transmit frame sync (L/R clock)
12	AFSR1	I/O	–	Y	McASP1 receive frame sync (L/R clock)
113	AXRO[0]	I/O	–	Y	McASP0 serial data 0
115	AXR0[1]	I/O	–	Y	McASP0 serial data 1
116	AXR0[2]	I/O	–	Y	McASP0 serial data 2

Pin No.	Function Name	I/O			Detail of Function
		TYPE(1)	PULL(2)	GPIO(3)	
117	AXR0[3]	I/O	–	Y	McASP0 serial data 3
119	AXR0[4]	I/O	–	Y	McASP0 serial data 4
120	SPI1_SCS	I/O	–	Y	McASP0 serial data 5 or SPI1 slave chip select
121	SPI1_ENA	I/O	–	Y	McASP0 serial data 6 or SPI1 enable (Ready)
122	SPI1_CLK	I/O	–	Y	McASP0 serial data 7 or SPI1 serial clock
126	SPI1_SOMI	I/O	–	Y	McASP0 serial data 8 or McASP1 serial data 5 or SPI1 data pin slave out master in
127	SPI1_SIMO	I/O	–	Y	McASP0 serial data 9 or McASP1 serial data 4 or SPI1 data pin slave in master out
130	AXR0[10]	I/O	–	Y	McASP0 serial data 10 or McASP1 serial data 3
131	AXR0[11]	I/O	–	Y	McASP0 serial data 11 or McASP1 serial data 2
134	AXR0[12]	I/O	–	Y	McASP0 serial data 12 or McASP1 serial data 1
135	AXR0[13]	I/O	–	Y	McASP0 serial data 13 or McASP1 serial data 0
137	AXR0[14]	I/O	–	Y	McASP0 serial data 14 or McASP2 serial data 1
138	AXR0[15]	I/O	–	Y	McASP0 serial data 15 or McASP2 serial data 0
139	ACLKR0	I/O	–	Y	McASP0 receive bit clock
141	AFSR0	I/O	–	Y	McASP0 receive frame sync (L/R clock)
142	ACLKX0	I/O	–	Y	McASP0 transmit bit clock
143	AHCLKR0/AHCLKR1	I/O	–	Y	McASP0 and McASP1 receive master clock
144	AFSX0	I/O	–	Y	McASP0 transmit frame sync (L/R clock)
			SPI0, I2C0 and I2C1 serial port pins		
105	SPIO_ENA	I/O	–	Y	SPI0 enable (Ready) or I2C1 serial data
107	SPIO_ENA	I/O	–	Y	SPI0 slave chip select or I2C1 serial clock
108	SPIO_CLK	I/O	–	Y	SPI0 serial clock or I2C0 serial clock
110	SPIO_SIMO	I/O	–	Y	SPI0 data pin slave in master out
111	SPIO/SOMI	I/O	–	Y	SPI0 data pin slave out master in or I2C0 serial data
			Clocks		
17	CLKIN	I	–	N	Alternate clock input (3.3 V LVCMOS input)
22	OSCVSS	PWR	–	N	oscillator Vss tap point (for filter only)
23	OSCIN	I	–	N	1.2 V oscillator input
24	OSCOUT	O	–	N	1.2 V oscillator output (No connected.)
25	OSCVDD	PWR	–	N	oscillator 1.2 V VDD tap point (for filter only)
27	PLLHV	PWR	–	N	PLL 3.3 V supply input (requires external filter)
			Device reset		
14	RESET	I	–	N	Device reset pin
			Emulation/JTAG port		
19	TMS	I	IPU	N	Test mode select
21	TRST	I	IPD	N	Test reset
28	TDI	I	IPU	N	Test data in
29	TDO	OZ	IPU	N	Test data out
32	EMU[0]	I/O	IPU	N	Emulation pin 0
34	EMU[1]	I/O	IPU	N	Emulation pin 1
35	TCK	I	IPU	N	Test clock
			Power pins		
8					
16					
20					
33					
44					
53					
57	CVDD				Core supply
65					
77					
85					
90					
101					
123					

Pin No.	Function Name	I/O			Detail of Function
		TYPE(1)	PULL(2)	GPIO(3)	
128	CVDD				Core supply
132					
10	DVDD				I/O supply
31					
42					
50					
60					
68					
73					
81					
92					
103					
112					
125					
136					
1	VSS				Ground
6					
13					
15					
18					
26					
30					
36					
40					
47					
54					
62					
69					
72					
78					
82					
87					
95					
99					
106					
109					
114					
118					
124					
129					
133					
140					

1) TYPE column refers to pin direction in functional mode. If a pin has more than one function with different directions, the functions are separated with a slash (/).
2) PULL column:
   IPD = Internal Pull-down resistor
   IPU = Internal Pull-up resistor
3) If the GPIO column is 'Y', then in GPIO mode, the pin is configurable as an I/O unless otherwise marked.


IC202 : R2A15218FP (FUNCTION P.C.B.)
8 ch electronic volume with 11 input selector and tone control

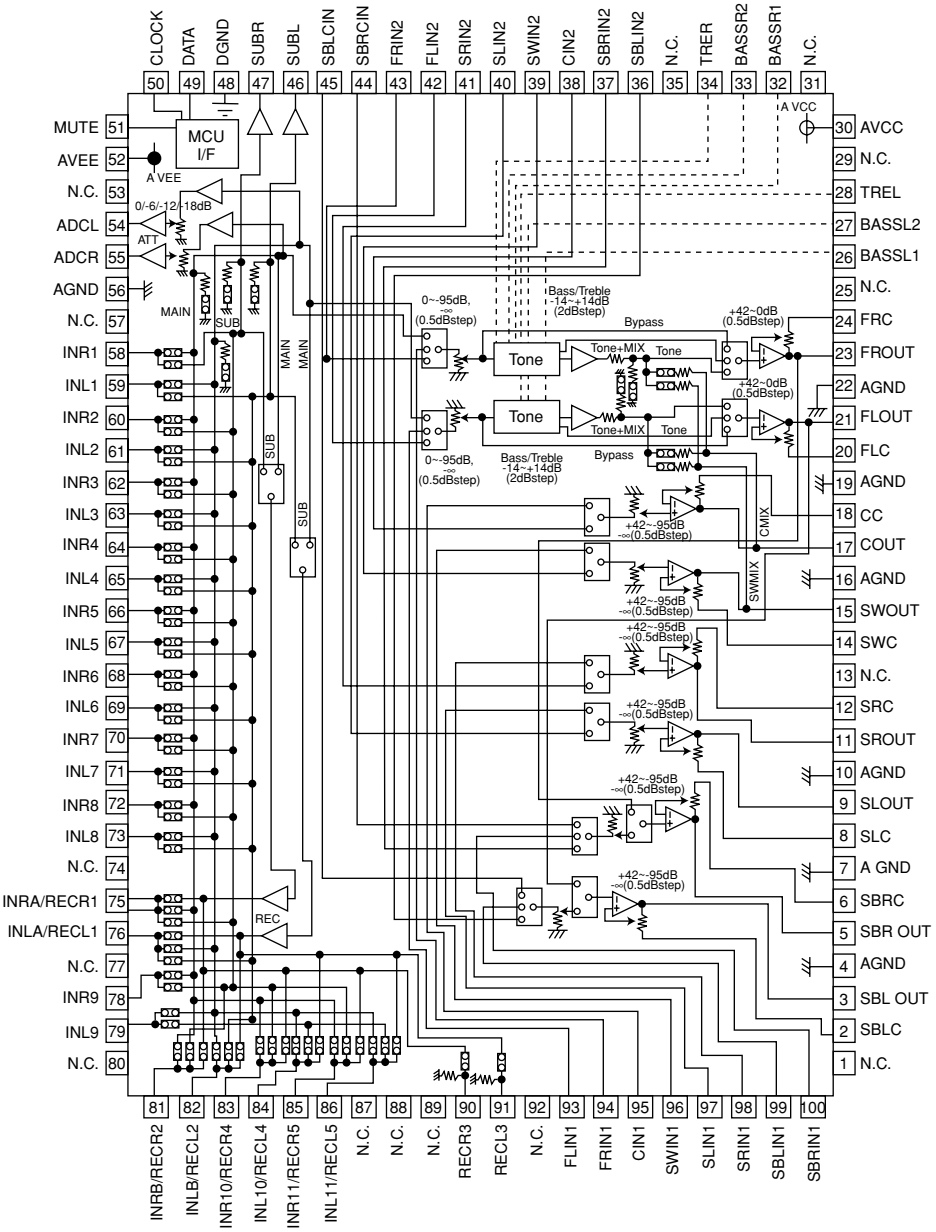


Pin No.	Function Name	Detail of Function
1	NC	
2	SBLC	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
3	SBL OUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
4	AGND	Analog ground of internal circuit
5	SBR OUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
6	SBRC	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
7	AGND	Analog ground of internal circuit
8	SLC	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
9	SLOUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
10	AGND	Analog ground of internal circuit
11	SROUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
12	SRC	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
13	NC	
14	SWC	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
15	SWOUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
16	AGND	Analog ground of internal circuit
17	COUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
18	CC	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
19	AGND	Analog ground of internal circuit
20	FLC	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
21	FLOUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
22	AGND	Analog ground of internal circuit
23	FROUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
24	FRC	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
25	NC	
26	BASSL1	Frequency characteristic setting pin of L/R channel tone control (Bass)
27	BASSL2	
28	TREL	Frequency characteristic setting pin of L/R channel tone control (Treble)
29	NC	
30	AVCC	Positive power supply to internal circuit
31	NC	
32	BASSR1	Frequency characteristic setting pin of L/R channel tone control (Bass)
33	BASSR2	
34	TRER	Frequency characteristic setting pin of L/R channel tone control (Treble)
35	NC	
36	SBLIN2	Input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
37	SBRIN2	
38	CIN2	
39	SWIN2	
40	SLIN2	
41	SRIN2	
42	FLIN2	
43	FRIN2	
44	SBRCIN	Input pin for SBL/SBR channel volume
45	SBLCIN	
46	SUBL	Output pin for L/R channel SUB output
47	SUBR	
48	DGND	Digital ground of internal circuit
49	DATA	Input pin of control data
50	CLOCK	Input pin of control clock

Pin No.	Function Name	Detail of Function
51	MUTE	Outside mute control pin
52	AVEE	Negative power supply to internal circuit
53	NC	
54	ADCL	Output pin for L/R channel ADC
55	ADCR	
56	AGND	Analog ground of internal circuit
57	NC	
58	INR1	Input pin of L/R channel (Input selector)
59	INL1	
60	INR2	
61	INL2	
62	INR3	
63	INL3	
64	INR4	
65	INL4	
66	INR5	
67	INL5	
68	INR6	
69	INL6	
70	INR7	
71	INL7	
72	INR8	
73	INL8	
74	NC	
75	INRA/RECR1	Input pin of L/R channel (Input selector) / Output pin for L/R channel REC output
76	INLA/RECL1	
77	NC	
78	INR9	Input pin of L/R channel (Input selector)
79	INL9	
80	NC	
81	INRB/RECR2	Input pin of L/R channel (Input selector) / Output pin for L/R channel REC output
82	INLB/RECL2	
83	INR10/RECR4	
84	INL10/RECL4	
85	INR11/RECR5	
86	INL11/RECL5	
87	NC	
88	NC	
89	NC	
90	RECR3	Output pin for L/R channel REC output
91	RECL3	
92	NC	
93	FLIN1	Input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
94	FRIN1	
95	CIN1	
96	SWIN1	
97	SLIN1	
98	SRIN1	
99	SBLIN1	
100	SBRIN1	


IC401 : M66003-0131FP (OPERATION P.C.B.)
FL display driver

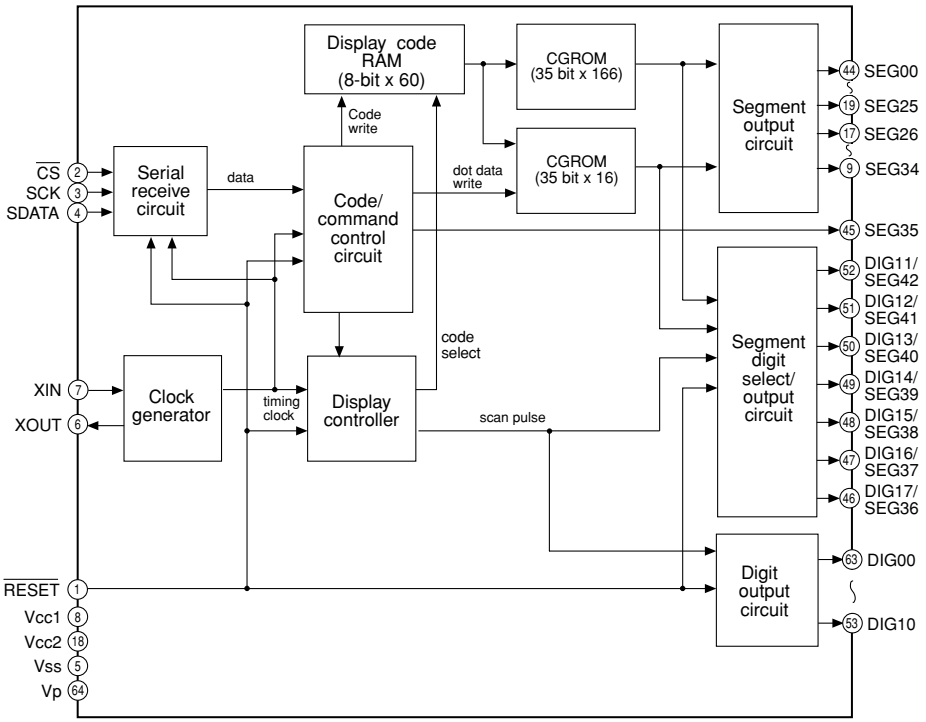

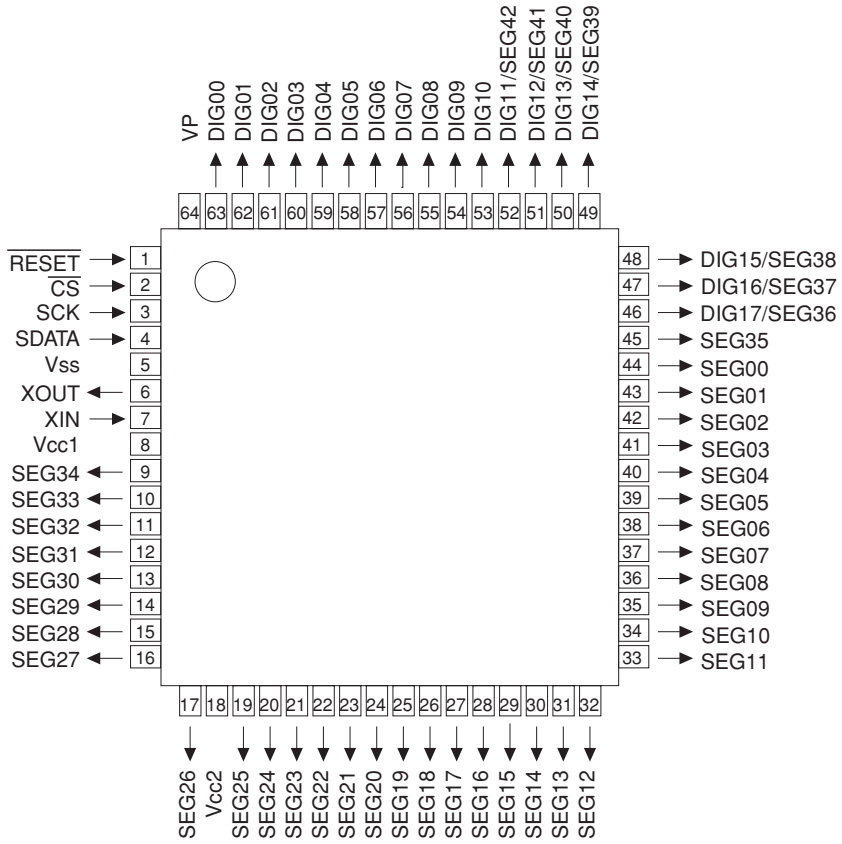


Pin No.	Port Name	Function Name	I/O	Detail of Function
1	RESET	/RESET	Reset input	When “L”, M66003 is initialized.
2	CS	/CEFL	Chip select input	When “L”, communication with the MCU is possible.
3	SCK	CKFL	Shift clock input	When “H”, any instruction from the MCU is neglected.
4	SDATA	DTFL	Serial data input	Serial input data is taken and shifted by the positive edge of SCK.
5	Vss	VSS		GND (0V)
6	XOUT	XOUT	Clock out	When use as a CR oscillator, connect external resistor and capacitor.
7	XIN	XIN	Clock in	When use an external clock input external clock to XIN, and XOUT must be opened.
8	Vcc1	VDD		Positive power supply for internal logic.
9	SEG34	P1I	Segment output	Connect to segment (anode) pins of VFD.
10	SEG33	P2		
11	SEG32	P3		
12	SEG31	P4		
13	SEG30	P5		
14	SEG29	P6		
15	SEG28	P7		
16	SEG27	P8		
17	SEG26	P9		
18	Vcc2	VDD		Positive power supply for DIG and SEG outputs.
19	SEG25	P10	Segment output	Connect to segment (anode) pins of VFD.
20	SEG24	P11		
21	SEG23	P12		
22	SEG22	P13		
23	SEG21	P14		
24	SEG20	P15		
25	SEG19	P16		
26	SEG18	P17		
27	SEG17	P18I		
28	SEG16	P19		
29	SEG15	P20		
30	SEG14	P21		
31	SEG13	P22		
32	SEG12	P23		
33	SEG11	P24		
34	SEG10	P25		
35	SEG09	P26		
36	SEG08	P27		
37	SEG07	P28		
38	SEG06	P29		
39	SEG05	P30		
40	SEG04	P31		
41	SEG03	P32		
42	SEG02	P33		
43	SEG01	P34		
44	SEG00	P35		
45	SEG35	P36		
46	SEG36	P37		
47	DIG16/SEG37	G17I	Digital output	Connect to digit (grid) pins of VFD.
48	DIG15/SEG38	G16I		
49	DIG14/SEG39	G15I		
50	DIG13/SEG40	G14		
51	DIG12/SEG41	G13		
52	DIG11/SEG42	G12		
53	DIG10	G11		
54	DIG09	G10		
55	DIG08	G9		
56	DIG07	G8		
57	DIG06	G7		
58	DIG05	G6		
59	DIG04	G5		
60	DIG03	G4		
61	DIG02	G3		
62	DIG01	G2		
63	DIG00	G1		
64	VP	VP		Negative power supply to pull down.

IC30 : M30878FJBGP (DIGITAL P.C.B.)
Single chip 16/32-bit microprocessor

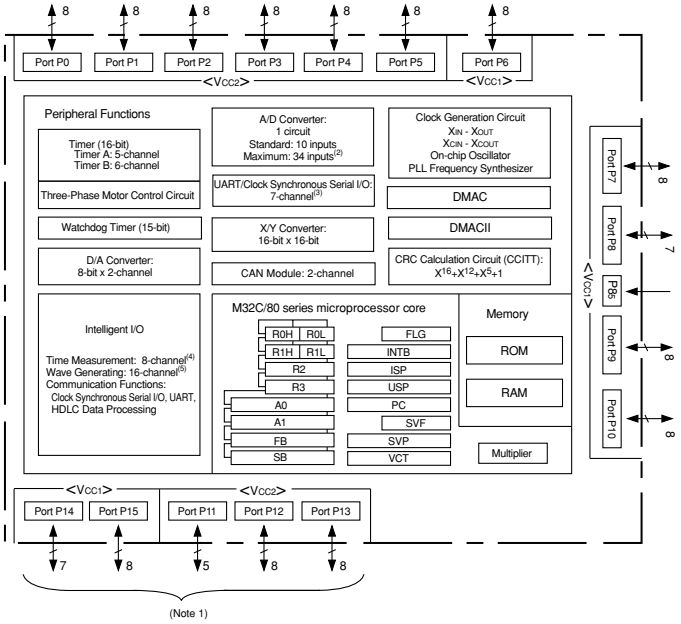

NOTES:
1. Ports P11 to P15 are provided in the 144-pin package only.
2. Included in the 144-pin package only. 26 inputs maximum in the 100-pin package.
3. 6-channel available in the 100-pin package.
4. 6-channel available in the 100-pin package.
5. 10-channel available in the 100-pin package.

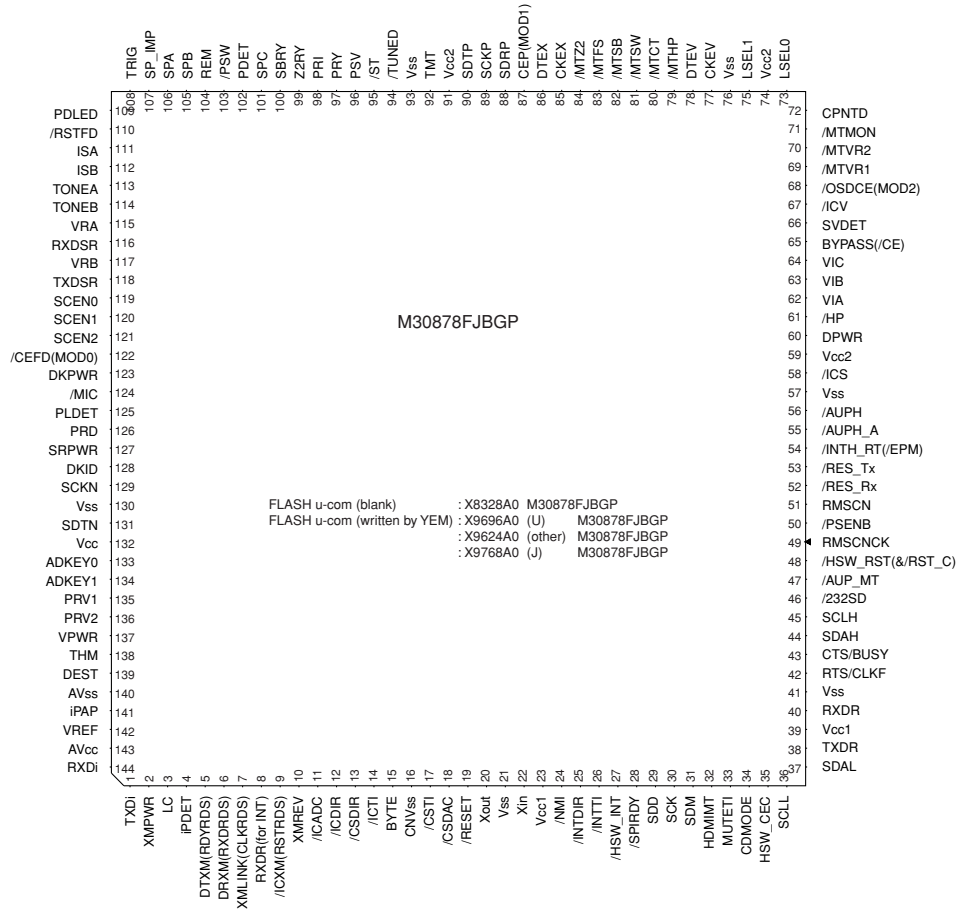

Pin No.	Port Name	Function Name (P.C.B.)	I/O							Detail of Function
			Power ON	VPWR OFF	STBY Thrh	STBY CEC	232C ON [232C OFF]	STANDBY [STBY Sleep]	MCU Sleep [Sleep]	
1	TXD4	TXDi	SO		O			O	O	Asynchronous data output for iPod
2	P95	XMPWR	O		O			O	O	Power control output for XM antenna H: ON, L: OFF (U, C models)
3	DA1	LC	DA		DA			I	I	Limiter control output
4	TB3in	iPDET	TMR						O	iPod loaded in DOCK detect Low when iPod is in Dock Stop mode (MCU sleep) when set to event counter
5	TXD3	DTXM	SO		O			O	[O]	Asynchronous data output for XM/DT IC (U, C models)
	P92	RDYRDS	I		I			O	[O]	READY input for RDS IC (G model)
6	RXD3	DRXM	SI		I			O	[O]	Asynchronous data input for XM/DT IC (U, C models)
		RXDRDS	SI		I			O	O	Synchronous data input for RDS IC (G model)
7	P90	XMLINK	I		O			O	O	LINK ACTIVE input for XM/DT IC (U, C models)
	CLK3	CLKRDS	SO		O			O	O	Synchronous clock output for RDS IC (G model) Setting to Low level standby required
8	INT8	RXDR	IRQ						O	RS-232C reception detect (U, C models) Used for return trigger from stop mode (MCU sleep) / Connect to 40pin
9	P145	/ICXM	O		O			O	[O]	Reset output for XM/DT IC (U, C models)
		RSTRDS	O		O			O	[O]	Reset output for RDS IC (G model)
10	P144	XMREV	I		O			O	O	ANT_REV input for XM/DT IC High: Non-compatible antenna
		DIRSDO	I		O			O	(O)	DIR DATA input for CDDA writing
11	P143	/ICADC	O		O			O	O	AD converter power down
12	P142	/ICDIR	O		O			O	O	Initial clear output for DIR
13	P141	/CSDIR	CS		O			O	O	Chip select output for DIR
14	P140	/ICTI	O		O			O	O	Initial clear output for TI (DA70Y)
15	BYTE	BYTE	MCU		MCU			MCU	MCU	When set to single chip mode: Vss
16	CNVss	CNVss	MCU		MCU			MCU	MCU	Processor mode select Low: Single chip mode
										High: To Flash included boot mode
										To boot mode with hardware resetting of P50=H, P55=L, CNVss=H
17	P87	/CSTI	CS		O			O	O	Chip select output for TI (DA70Y)
18	P86	/CSDAC	CS		O			O	O	Chip select output for DAC (for both 2ch/8ch)
19	RESET	/RESET	MCU		MCU			MCU	MCU	Reset
20	Xout	Xout	MCU		MCU			MCU	MCU	
21	Vss	Vss	MCU		MCU			MCU	MCU	
22	Xin	Xin	MCU		MCU			MCU	MCU	
23	Vcc1	Vcc	MCU		MCU			MCU	MCU	
24	NMI	/NMI	MCU		I				I	Unused, connect to Vcc
25	INT2	/INTDIR	IRQ		O			O	O	Interrupt input for DIR
26	INT1	/INTTI	IRQ		O			O	O	Interrupt input for TI (DA70Y)
27	INT0	/HSW_INT	IRQ		IRQ	IRQ		O	O	MATSUSHITA CEC microprocessor (13 pins) interrupt input
28	P81	/SPIRDY	I		O			O	O	READY input for TI (DA70Y)
		RWCK	I		O			O	[O]	DIR WCK input for CDDA writing
29	RXD5	SDD	SI		O			O	O	Synchronous data input for DIR, TI (DA70Y), DAC
										DIR: 4M, LSBF TI: 1M, MSBF
30	CLK5	SCK	SO		O			O	O	Synchronous clock output for DIR, TI (DA70Y), DAC
31	TXD5	SDM	SO		O			O	O	Synchronous data output for DIR, TI (DA70Y), DAC DIR: 4M, LSBF TI: 1M, MSBF
32	TA2in	HDMIMT	TMR		TMR			O	O	MDMI AUDIO MUTE input H: Mute
33	P74	MUTETI	O		O			O	O	Mute output (High=MUTE) for TI (DA70Y)
34	P73	CDMODE	O		O			O	O	CDDA write mote control output
										H: CDDA write mode L: Normal operation mote
35	P72	HSW_CEC	I		I	I		O	O	MATSUSHITA CEC microprocessor (12 pins) interrupt input Reset request from MATSUSHITA microprocessor

Pin No.	Port Name	Function Name (P.C.B.)	I/O							Detail of Function
			Power ON	VPWR OFF	STBY Thrh	STBY CEC	232C ON [232C OFF]	STANDBY [STBY Sleep]	MCU Sleep [Sleep]	
36	SCL2	SCLL	SIO		SIO	SIO		O	O	I2C clock input/output for HDMI switcher & video switch (100kHz device) Pull up at HDMI block
37	SDA2	SDAL	SIO		SIO	SIO		O	O	I2C clock input/output for HDMI switcher & video switch (100kHz device) Pull up at HDMI block
38	TxD1	TXDR					SO[O]		O	RS-232C asynchronous communication data output
		TXDF								Data output for AF220
39	Vcc1	Vcc	MCU		MCU			MCU	MCU	Power source of microprocessor +5BU
40	RxD1	RXDR					SI [O]		O	RS-232C asynchronous communication data input Pull Down by 100k-ohms
		RXDF	SI							Data input for AF220
41	Vss	Vss	MCU		MCU			MCU	MCU	Ground of microprocessor
42	P65	RTS					O [O]		O	RS-232C asynchronous communication RTS output
	CLK1	CLKF	SI							Clock input for AF220
43	CTS1	CTS					SI [O]		O	RS-232C asynchronous communication CTS input Pull Down by 100k-ohms
	RTS1	BUSY	SO							BUSY output for AF220
44	SDA0	SDAH	SIO		SIO			O	O	HDMI-RX/TX, VIDEO-DEC/ENC I2C clock input/output (400kHz device) Pull up at HDMI block / HDMI Rx,Tx: 5V tolerant
45	SCL0	SCLH	SIO		SIO			O	O	HDMI-RX/TX, VIDEO-DEC/ENC I2C data input/output (400kHz device) Pull up at HDMI block / HDMI Rx,Tx: 5V tolerant
46	P61	/232SD					O [O]		O	232C driver shut-down control L: Shut down Default High (232C ON) for U, C model Default Low for other than U, C model
47	P60	/AUP_MT	O		O			O	O	Audio Up conversion Mute output L: Mute Muted even when audio up conversion is not executed
48	P137	/HSW_RST	O		O	O		O	O	Reset output for HDMI switcher IC L: Reset
49	ISCLK2	RMSCNCK	SO		O			O	O	Clock output for scene select DVD control remote control code generation Unused externally
50	P135	PSENB	O	O	O	O		O	O	MATSUSHITA CEC microprocessor reset
51	ISTXD2	RMSCN	SO		O			O	O	Scene select DVD control remote control code output
52	P57	/RES_RX	O		O			O	O	Reset output for HDMI Rx IC L: Reset Pull down at HDMI P.C.B.
53	P56	/RES_TX	O		O			O	O	Reset output for HDMI Rx IC L: Reset Pull down at HDMI P.C.B.
54	P55	/INT_RT	I		I			O	O	HDMI interrupt (Polarity inversion enabled by HDMI Rx,Tx resistor) Connect Rx only Pull up at HDMI P.C.B.
		/EPM	I							47k-ohms pull down for flash write mode
55	P54	/AUPH_A	O	O	O			O	O	ADC output / Rx output for selection of audio path to HDMI L: ADC output, H: Rx output High Fix when VPWR OFF
56	P133	/AUPH	O	O	O			O	O	Video path (Decoder output) to HDMI ON/OFF L: ON, H: HiZ High Fix when VPWR OFF
57	Vss	Vss	MCU		MCU			MCU	MCU	

Pin No.	Port Name	Function Name (P.C.B.)	I/O							Detail of Function
			Power ON	VPWR OFF	STBY Thrh	STBY CEC	232C ON [232C OFF]	STANDBY [STBY Sleep]	MCU Sleep [Sleep]	
58	P132	/ICS	O	O	O			O	O	Reset output for VIDEO SCALER IC L: Reset Low Fix when VPWR OFF
59	Vcc2	Vcc	MCU		MCU			MCU	MCU	
60	P131	CEC_DPWR	O	O	O			O	O	ON/OFF control of CEC and DSP power supply H: ON, L: OFF DIR, TI DSP, XMIC resetting executed 50ms after DSP power ON
61	P130	/HP	I		O			O	O	Head Phone detect L: Head phone in use
62	P53	VIA	O	O	O			O	O	CVBS/S input select A Low Fix when VPWR OFF
63	P52	VIB	O	O	O			O	O	CVBS/S input select B
										Low Fix when VPWR OFF
64	P51	VIC	O	O	O			O	O	CVBS/S input select C
										Low Fix when VPWR OFF
65	P50	BYPASS								BYPASS CVBS/S select Low Fix when VPWR OFF Low Fix when Stby Thrh (10/23 changed) Input port when standby / Sleep / Backup
		/CE	I							For flash write mode 10k-ohms pull up (+5BU), flash preventive diode
66	P127	SVDET	I	O	O			O	O	S-Video signal detect Low Fix when VPWR OFF
67	P126	/ICV	O		O			O	O	Reset output for VIDEO ENC/DEC IC Low Fix when VPWR OFF
68	P125	/OSDCE	CS	O	O			O	O	Chip enable output for OSD IC Low Fix when VPWR OFF Data is taken in with PSV port set to High 20ms after resetting is cancelled
		MOD2	I							Model detect 2 (663/863)
69	P47	/MTVR1	O	O	O			O	O	VCR1 MUTE
										Low Fix when VPWR OFF
70	P46	/MTVR2	O	O	O			O	O	VCR2 MUTE
										Low Fix when VPWR OFF
71	P45	/MTMON	O	O	O			O	O	Monitor MUTE
										Low Fix when VPWR OFF
72	P44	CPNTD	I	O	O			O	O	Component signal detect
										Low Fix when VPWR OFF
73	P43	LSEL0	O	O	O			O	O	L1 to 3 select 0
										Low Fix when VPWR OFF
74	Vcc2	Vcc	MCU		MCU			MCU	MCU	
75	P42	LSEL1	O	O	O			O	O	L1 to 3 select 1
										Low Fix when VPWR OFF
76	Vss	Vss	MCU		MCU			MCU	MCU	
77	P41	CKEV	O		O			O	O	PATAPATA synchronous clock output for electronic volume
78	P40	DTEV	O		O			O	O	PATAPATA synchronous data output for electronic volume
79	P37	/MTHP	O		O			O	O	Mute Head Phone
80	P36	/MTCT	O		O			O	O	Mute Center
81	P35	/MTSW	O		O			O	O	Mute SW
82	P34	/MTSB	O		O			O	O	Mute SBL/SBR
83	P33	/MTFS	O		O			O	O	Mute FL/FR/SL/SR
84	P32	/MTZ2	O		O			O	O	Mute Zone2
85	P31	CKEX	O		O			O	O	BATABATA synchronous clock output for expansion input selector
86	P124	DTEX	O		O			O	O	BATABATA synchronous data output for expansion input selector

Pin No.	Port Name	Function Name (P.C.B.)	I/O							Detail of Function
			Power ON	VPWR OFF	STBY Thrh	STBY CEC	232C ON [232C OFF]	STANDBY [STBY Sleep]	MCU Sleep [Sleep]	
87	P123	CEP	CS		O			O	O	Chip enable output for tuner PLL
		HDRD_N_RST	I		I			I	[I]	Reset output for HD Radio Use prohibited, always set to input (HiZ) Data is taken in with PSV port set to High 20ms after resetting is cancelled (U model)
		MOD1	I							Model detect 1 (net)
88	RXD6	SDRP	SI		I			O	O	Synchronous data input for tuner PLL
		HDRD_MISO	SI		I			O	O	Asynchronous data input for HD Radio (U model)
89	CLK6	SCKP	SO		O			O	O	Synchronous clock output for tuner PLL
90	TXD6	SDTP	SO		O			O	O	Synchronous data output for tuner PLL
		HDRD_MOSI	SO		O			O	O	Asynchronous data output for HD Radio (U model)
91	Vcc2	Vcc	MCU		MCU			MCU	MCU	
92	P30	TMT	O		O			O	O	TUNER Mute output H: Mute Always Mute when tuner is not selected
93	Vss	Vss	MCU		MCU			MCU	MCU	Commonly used with ZONE mute being in use when selecting FM/AM band
94	P27	/TUNED	I		I			O	O	TUNER TUNED input Pull up to +5S
95	P26	/ST	I		I			O	O	TUNER STEREO input Pull up to +5S
96	P25	PSV	O		O			[O]	O	+5S ON/OFF control * +5S is OFF in the sleep mode so as to reduce wasteful power consumption when set to low power consumption (Mute circuit, pull up, etc.) * Shifted to sleep mode about 10 seconds after SYSTEM OFF
97	P24	PRY	O		O			O	O	Power relay control
98	P23	PRI	I		I			O	O	Protection excess current detect
99	P22	Z2RY	O		O			O	O	ZONE2 SP relay control Z2RY and SPB must not be High at the same time
100	P21	SBRY	O		O			O	O	Surround back SP relay control
101	P20	SPC	O		O			O	O	Center & surround SP relay control
102	INT5	PDET	IRQ						O	Interrupt input for power down detect
103	INT4	/PSW	IRQ						O	MAIN power/ZONE2 power /SCENE1-4SW interrupt Pressed SW is judged by ADKEY0 and ADKEY1
104	INT3	REM	IRQ						O	Remote control pulse input
105	P14	SPB	O		O			O	O	Front SP B relay control
106	P13	SPA	O		O			O	O	Front SP A relay control
107	P12	SP_IMP	O		O			O	O	±B voltage control by impedance selection Power consumption is reduced because B voltage becomes Low Low (Relay OFF, B voltage High) when set to 8 ohm, High (Relay ON, B voltage Low) when set to 6 ohms and temperature rises
108	P11	TRIG	O		O			O	O	DC TRIGGER output
109	P10	PDLED	O		O			O	O	Pure direct LED
110	P07	/RSTFD	O		O			O	O	Reset output for FL driver
111	P06	ISA	I		O			O	O	Rotary A for input selector
112	P05	ISB	I		O			O	O	Rotary B for input selector
113	P04	TONEA	I		O			O	O	Rotary A for TONE/PROGRAM
114	P114	TONEB	I		O			O	O	Rotary B for TONE/PROGRAM
115	P113	VRA	I		O			O	O	
116	ISRXD1	RXDSR	SI		O			O	O	Rotary A for volume Asynchronous communication data input for SIRIUS radio Serial communication is 5V TTL/CMOS logic level Pull Down by 100k-ohms
117	P111	VRB	I		O			O	O	Rotary B for volume

Pin No.	Port Name	Function Name (P.C.B.)	I/O							Detail of Function
			Power ON	VPWR OFF	STBY Thrh	STBY CEC	232C ON [232C OFF]	STANDBY [STBY Sleep]	MCU Sleep [Sleep]	
118	ISTXD1	TXDSR	SO		O			O	O	Asynchronous communication data output for SIRIUS radio
										Serial communication is 5V TTL/CMOS logic level (U, C models)
119	P03	SCEN0	O		O			O	O	SCENE button LED control 0
120	P02	SCEN1	O		O			O	O	SCENE button LED control 1
121	P01	SCEN2	O		O			O	O	SCENE button LED control 2
122	P00	/CEFD	CS		O			O	O	Chip enable output for FL driver
										Data is taken in with PSV port set to High 20 ms after resetting is cancelled
		MOD0	I							Model detect 0 (RX/HTR)
123	P157	DKPWR	O		O			O	O	DOCK power control output / H: ON, L: OFF
124	P156	/MIC	I		O			O	O	MIC detect
125	AN155	PLDET	AD		AD			O	O	SP output level detect for AD power limiter
										Refer to the limiter setting table
126	AN154	PRD	AD		AD			O	O	AD protection power amplifier DC detect
										Refer to the protection setting table
127	P153	/SRPWR	O		I			I	I	SIRIUS radio power enable output
										L: Power ON HiZ: Power OFF
										Used as input port because SIRIUS power turns ON if set to Low Fix when in
										the Standby/Sleep mode (U, C models)
128	AN152	DKID	AD		AD			AD	O	AD Dock ID judgment
										The type of Dock being connected is judged and operation is changed
129	ISCLK0	SCKN	SO		O			O	O	Synchronous clock output for FL DRIVER IC
			SO		O			O	O	Synchronous clock output for OSD IC
										Include 1k-ohms in the series to make applicable to pure direct
130	Vss	Vss	MCU		MCU			MCU	MCU	
131	ISTXD0	SDTN	SO		O			O	O	Synchronous data output for FL DRIVER IC
			SO		O			O	O	Synchronous data output for OSD IC
										Include 1k-ohms in the series to make applicable to pure direct
132	Vcc1	Vcc	MCU		MCU			MCU	MCU	
133	AN7	ADKEY0	AD		AD			[I]	O	AD KEY1 for taking in AD value
134	AN6	ADKEY1	AD		AD			[I]	O	AD KEY0 for taking in AD value
135	AN5	PRV1	AD		AD			O	O	AD protection power voltage detect1
136	AN4	PRV2	AD		AD			O	O	AD protection power voltage detect2
137	P103	VPWR	O		O			O	O	CIDEO power control
										Low when VIDEO OFF
										Set according to specifications of pure direct and return to Low Fix when in
										Standby/Sleep mode
138	AN2	THM	AD		AD			O	O	AD temperature detect
										Refer to the protection setting table
139	AN1	DEST	AD		AD			O	O	AD destination discrimination
										Data is taken in when resetting is cancelled
140	AVss	AVss	MCU		MCU			MCU	MCU	
141	P100	iPAP	I		I			I	O	iPod accessory power detect
										Becomes Low while iPod is booting (for about 2 seconds)
										Identification executed when booting is judged as completed
142	Vref	VREF	MCU		MCU			MCU	MCU	
143	AVcc	AVcc	MCU		MCU			MCU	MCU	
144	RXD4	RXDi	SI		I			I	O	Asynchronous data input for iPod

Standby --- All Zone power OFF, Master ON
MCUSleep --- Low current consumption state at Master OFF

Key detection for AD port
Key input (A/D) pull-up resistance 10 k-ohms
RX-V663 (U, C, R, T, K, A, G, E, F, L models), HTR-6160 (U, F models)

Ohm	0	+1.0 k	+1.0 k	+1.5 k	+2.2 k	+3.3 k	+4.7 k	+4.7 k	+6.8 k	+10.0 k	+22.0 k
V	0-0.23	0.24-0.64	0.65-1.06	1.07 - 1.55	1.56-2.09	2.10-2.62	2.63-3.06	3.07-3.40	3.41-3.73	3.74-4.07	4.08-4.45
ADKEY0 (133 pin)	SYSTEM OFF	SCENE1	SCENE2	–	–	STRAIGHT	TONE CONTROL	SEARCH MODE / EDIT	–	SPEAKERS	PURE DIRECT
ADKEY1 (134 pin)	Zone2 ON/OFF	SCENE3	SCENE4	ZONE CONTROL	AUDIO SELECT	FM/AM	A/B/C/D/E	PRESET <	PRESET >	MEMORY	INFO

HTR-6160 (C model), DSP-AX763 (J model)

Ohm	0	+1.0 k	+1.0 k	+1.5 k	+2.2 k	+3.3 k	+4.7 k	+4.7 k	+6.8 k	+10.0 k	+22.0 k
V	0-0.23	0.24-0.64	0.65-1.06	1.07-1.55	1.56-2.09	2.10-2.62	2.63-3.06	3.07-3.40	3.41-3.73	3.74-4.07	4.08-4.45
ADKEY0 (133 pin)	–	SCENE1	SCENE2	–	–	STRAIGHT	TONE CONTROL	SEARCH MODE /EDIT	–	SPEAKERS	PURE DIRECT
ADKEY1 (134 pin)	MUTE	SCENE3	SCENE4	SLEEP	AUDIO SELECT	FM/AM	A/B/C/D/E	PRESET <	PRESET >	MEMORY	INFO

DSP-AX763 (B model)

Ohm	0	+1.0 k	+1.0 k	+1.5 k	+2.2 k	+3.3 k	+4.7 k	+4.7 k	+6.8 k	+10.0 k	+22.0 k
V	0-0.23	0.24-0.64	0.65-1.06	1.07-1.55	1.56-2.09	2.10-2.62	2.63-3.06	3.07-3.40	3.41-3.73	3.74-4.07	4.08-4.45
ADKEY0 (133 pin)	–	SCENE1	SCENE2	–	–	STRAIGHT	TONE CONTROL	–	–	SPEAKERS	PURE DIRECT
ADKEY1 (134 pin)	–	SCENE3	SCENE4	–	AUDIO SELECT	–	–	–	–	–	–

Destination detection for AD port
Pull-up resistance 10 k-ohms

Ohm	0.0 k	1.2 k	2.7 k	4.7 k	6.8 k	10.0 k	15.0 k	27.0 k	47.0 k	100.0 k	–
V	0-0.3	0.4-0.7	0.8-1.3	1.4-1.8	1.9-2.2	2.3-2.7	2.8-3.2	3.3-3.8	3.9-4.3	4.4-4.7	4.8-5.0
A/D (5 V=255)	0-13	14-40	41-68	69-92	93-115	116-140	141-170	171-198	199-221	222-243	245-255
DEST, 139pin	J	U, C	–	R	T	K	A	B	G, E, F	L	–


Model detection
1: Pull-up / 0: Pull-down

Model	RX-V663/DSP-AX763	HTR-6160
/CEFD/MOD0 (122 pin)	0	1


■ PIN CONNECTION DIAGRAMS

ICs


ADV7172KST

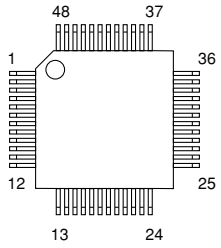


ADV7800BSTZ-80

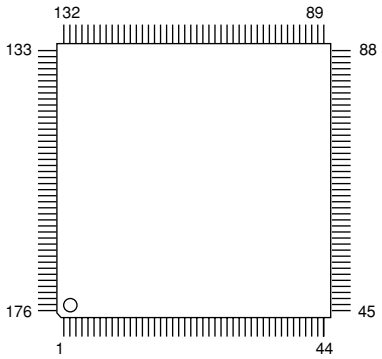


BA15218F




BD3841FS

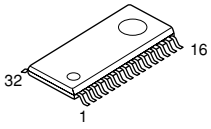


D70YE101BRFP266
M30878FJBGP

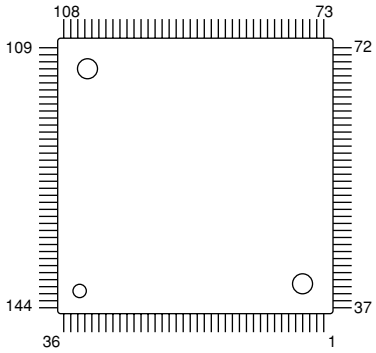


EN29LV160AB-70TCP

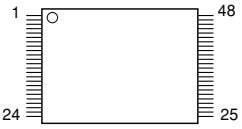


F2621E-01-TR

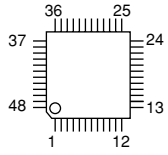


KIA7812API




KIA7912PI




LA73050-TLM-E

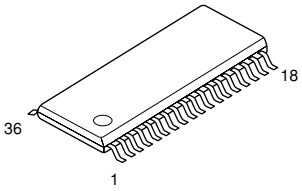


LC72725KM-UY-TLM-E
PCM1780DBQR
PCM1781DBQR

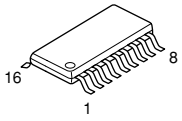


LC74782JM-8A16-TLMC

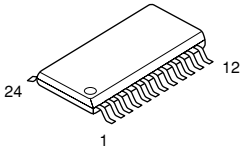


LC89057W-VF4AD-E

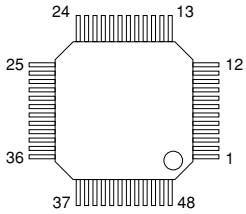


LM61CIZ




M12L64164A-5TG

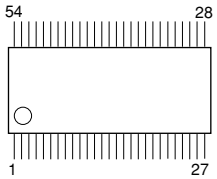


M66003-0131FP-R

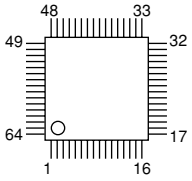


MN103SFD7G

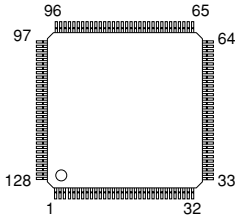

NJM2068MD-TE2




NJM2388F05




1. VIN
2. VOUT
3. GND
4. ON/OFF CONTROL

NJM2388F09
NJM2396F33




1. VIN
2. VOUT
3. GND
4. ON/OFF CONTROL


NJM2581M
TC74VHC08FT
TC74VHCU04FT




NJM2867F3-05
TC7SET32FU




NJM4565M




NJM7805FA
NJM7812FA

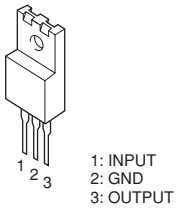


NJM78M05DL1A

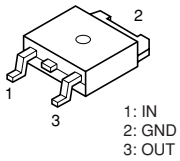


NJW1321FP1

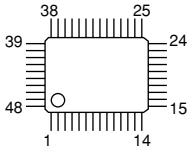


PCM1803DBR
SN74LVC245APWR
SN74LVTH245APW
TC74VHC541FT
TC74VHCT541AFT

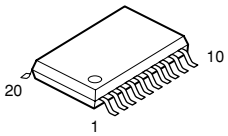


PCM1680DBQR

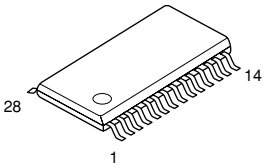


R1154H058B-T1-F




R1172H181B-T1-F
R1172H331D-T1-F




R1172S121D-E2-F
R1172S181B-E2-F
R1172S331B-E2-F




R1232D181A-TR-F




R2A15218FP

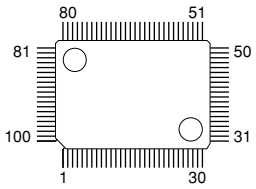


Sil9134CTU

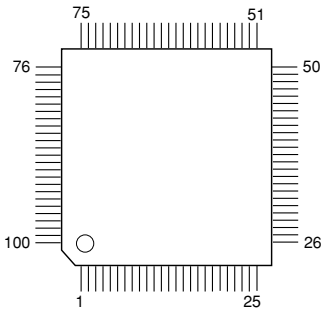


Sil9135CTU

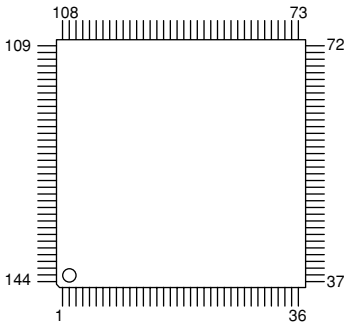


Sil9185ACTU

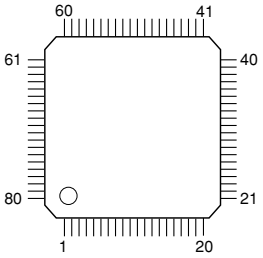


TC4013BP

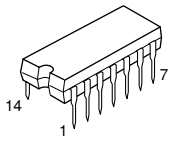


TC4051BF




TC74HC4051AFEL
TC74HC4052AF




TC74HC4053AF



TC74VHC153FT
TC74VHC157FT




TC7WZ32FK




Diodes


1N4002S
1SS133
1SS176
1SS270A

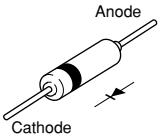


1SS355
1SS380

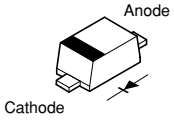


D6SBN20




DB105




MA8024-(TX) 2.4V

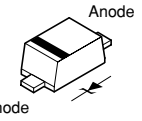


MA8030-L 2.9V
MA8036 3.6V
MA8051-M 5.1V
MA8056-M 5.6V
MA8068-M 6.8V
MA8075-H 7.7V
MA8091-L 8.8V
MA8091-M 9.1V
MA8100-H 10.3V
MA8100-M 10.0V

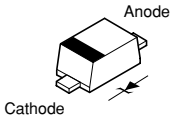


MTZJ2.4B
MTZJ5.1C
MTZJ6.2B
MTZJ13B
MTZJ15B
MTZJ30A

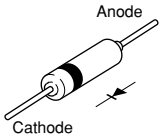


RB441Q-40

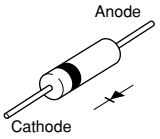


RB500V-40
RB501V-40

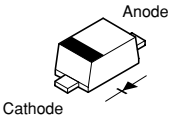


RLZ7.5B 7.5V




RS103-B-D-V50




RS203M-B-C-J80



RS403M
RS603M




SB01-05Q

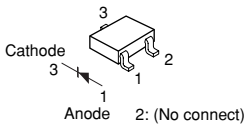


Transistors


2N5401C-AT/P
2SA1015-Y
2SC2240



2N5551C-AT




2SA949
2SC1815 Y
2SC2229




2SA1576A




2SA1695 O,P,Y
2SC4468 O,P,Y




2SA1708



2SA1770S/T-AN



2SC1740S




2SC2412K




2SC3326-A (TE85R, F)
2SC3326-B (TE85R, F)
2SC4081 T106
2SD1938F
KTA1504S
KTC3875S




2SC4614S/T-AN




2SD1915F



2SD2014




2SK246-Y (TPE2, F)



1: Source
2: Gate
3: Drain

2SK3850



3LN01C-TB-E




DTA114EKA
DTA143EKA
DTA144EKA
DTC114EKA
DTC124EKA
DTC144EKA




1: GND
2: IN
3: OUT


KRA102M-AT/P




KRA102S-RTK/P
KRC102S-RTK
KRC104S-RTK



KRC102M-AT



KTA1046-Y-U/P




RSR025P03TL



1: GATE
2: SOURCE
3: DRAIN

µPA672T-T1-A




1. Source 1 (S1)
2. Gate 1 (G1)
3. Drain 2 (D2)
4. Source 2 (S2)
5. Gate 2 (G2)
6. Drain 1 (D1)


■ BLOCK DIAGRAMS

AUDIO (DIGITAL) SECTION BLOCK DIAGRAM

DIGITAL • See page 105-109 → SCHEMATIC DIAGRAM

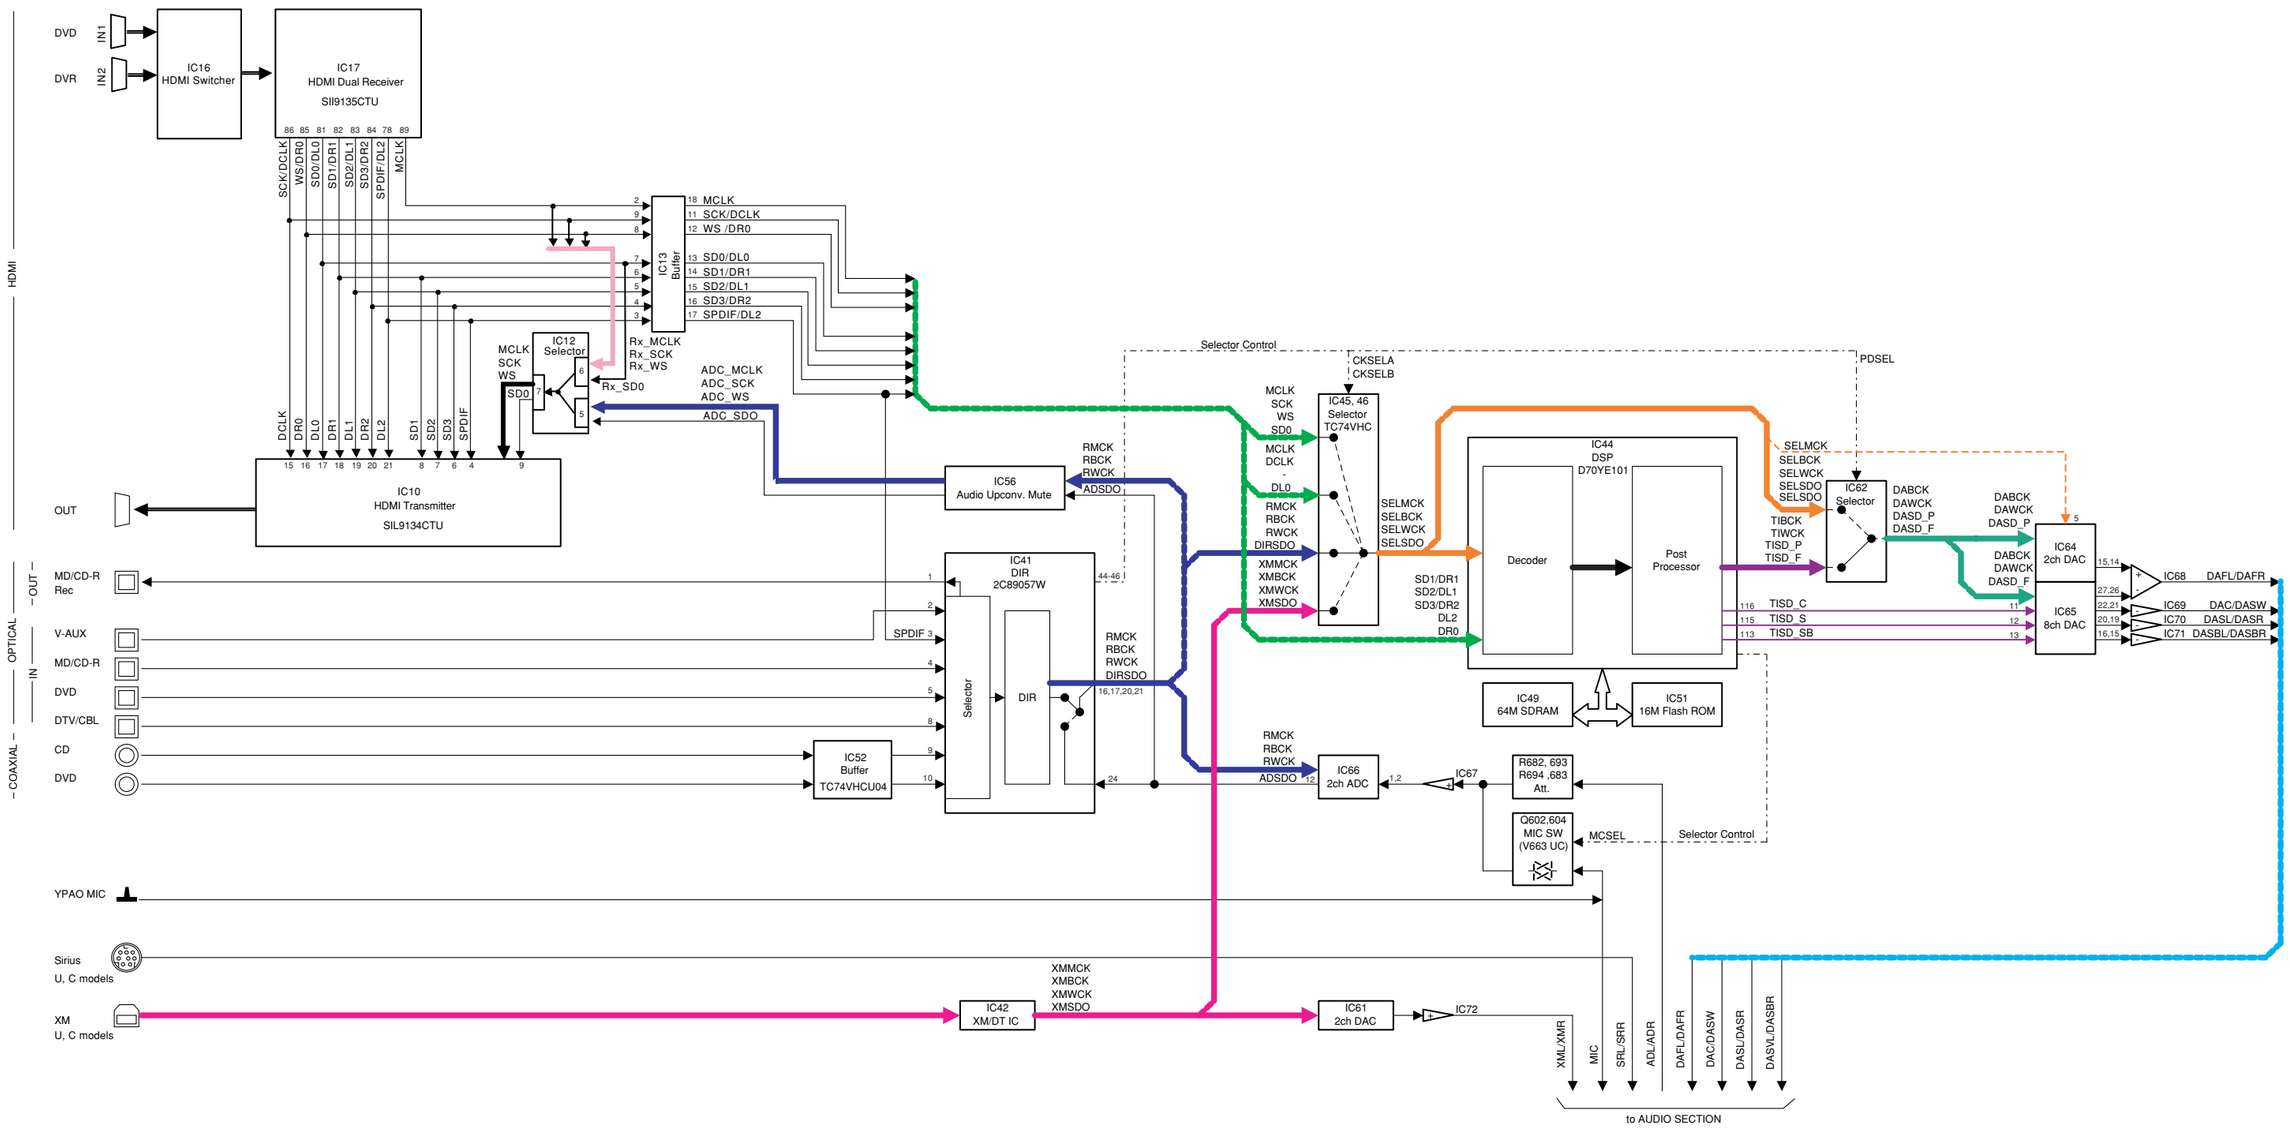


AUDIO (ANALOG) SECTION BLOCK DIAGRAM

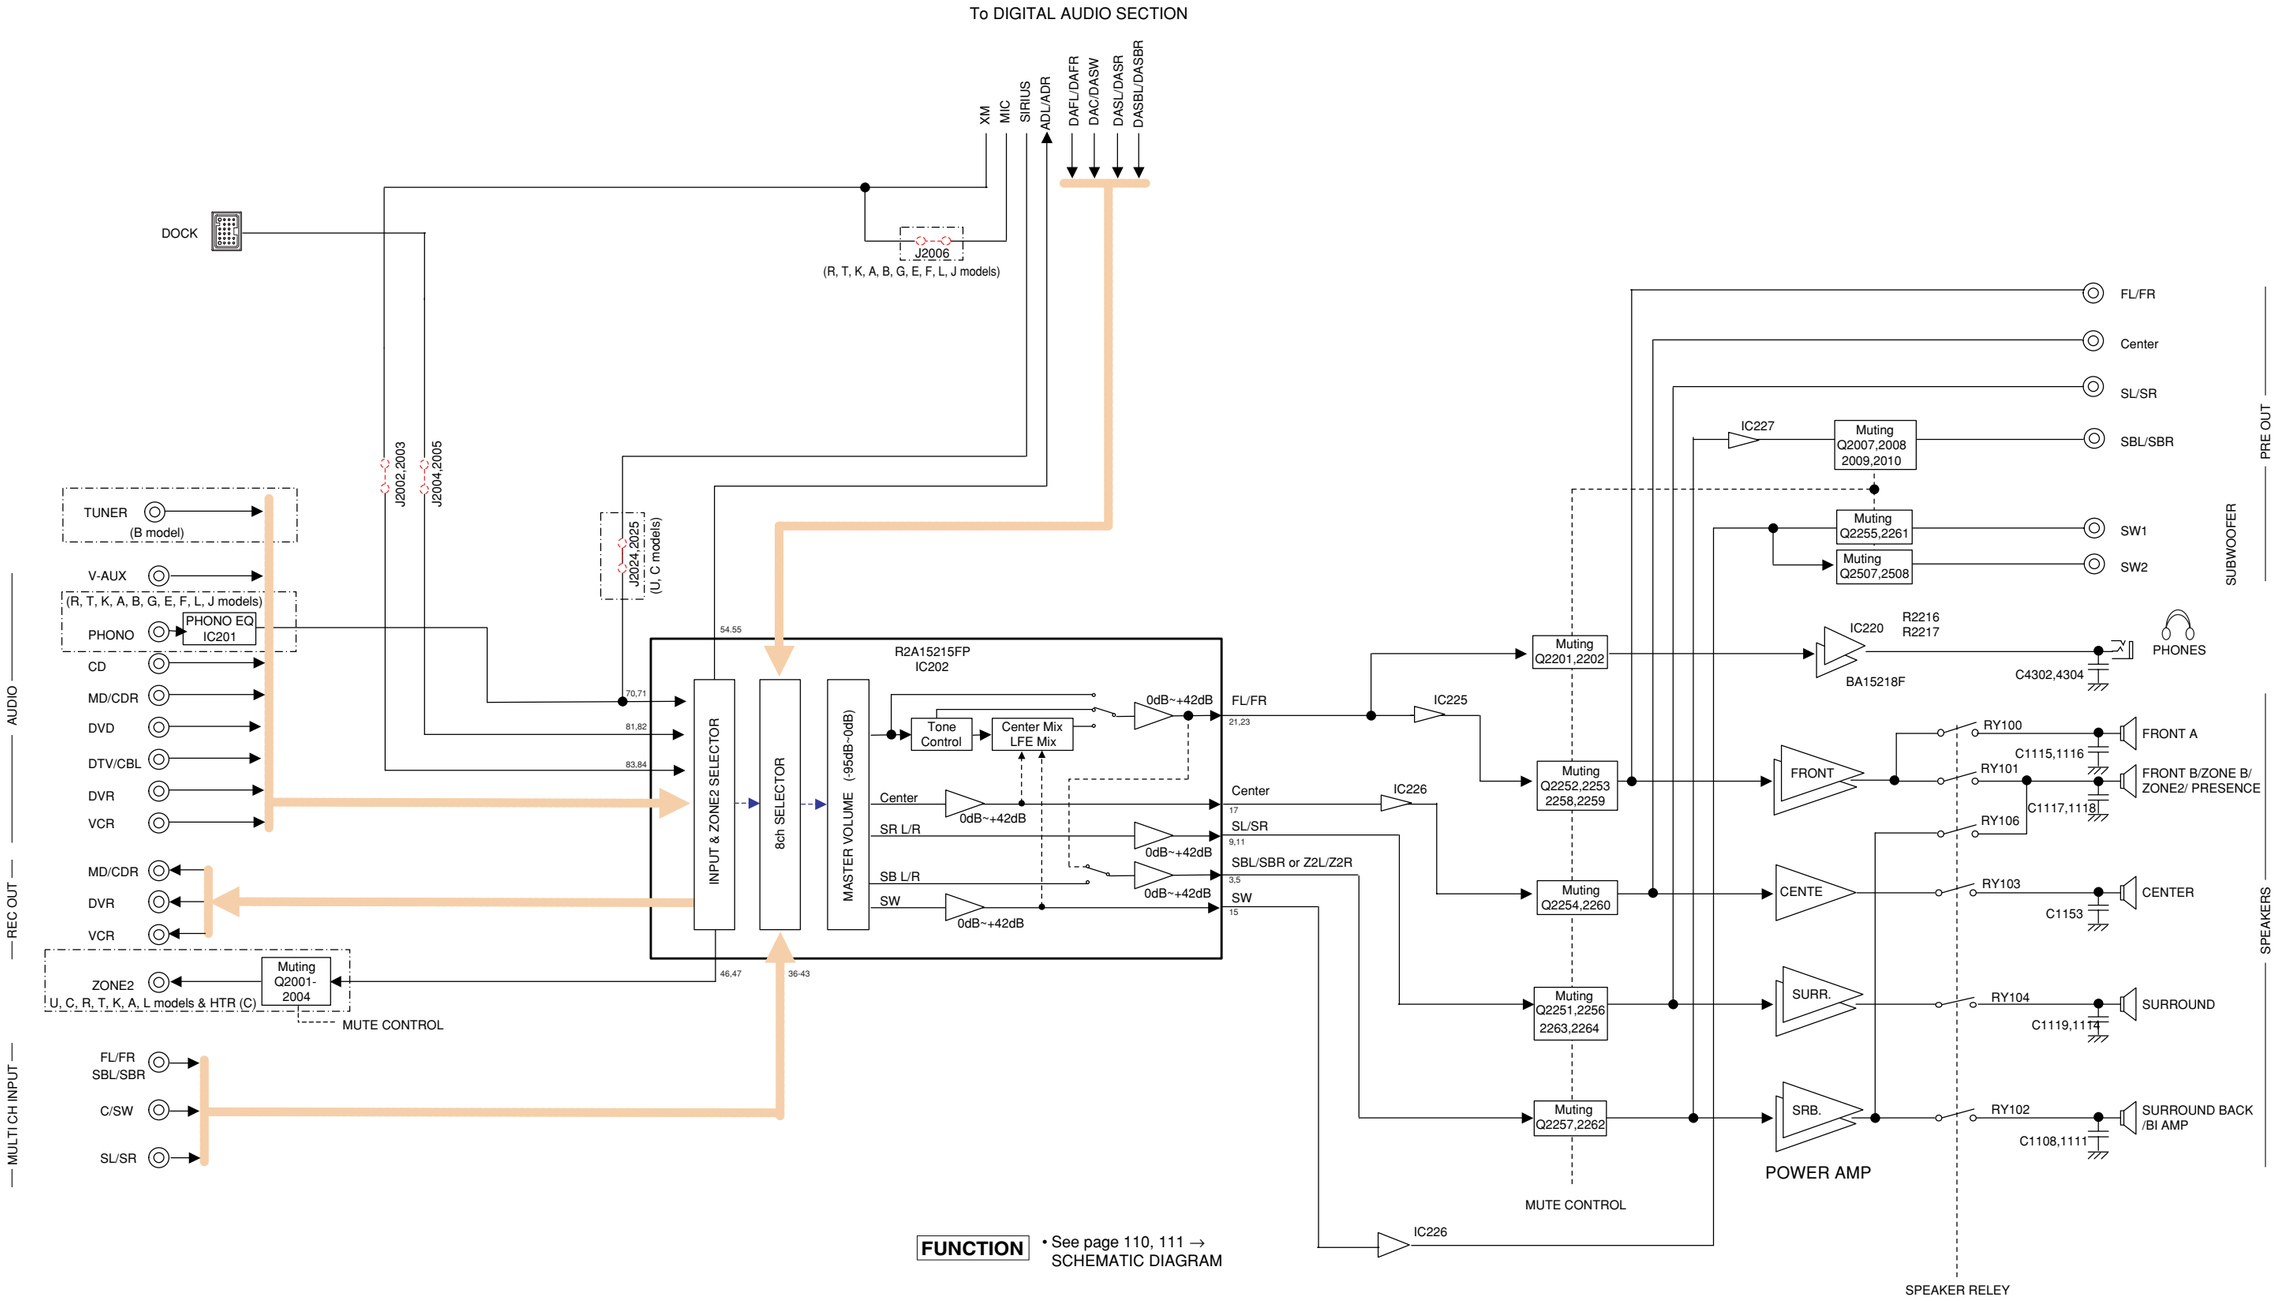

FUNCTION • See page 110, 111 → SCHEMATIC DIAGRAM

VIDEO SECTION BLOCK DIAGRAM


POWER SECTION BLOCK DIAGRAM

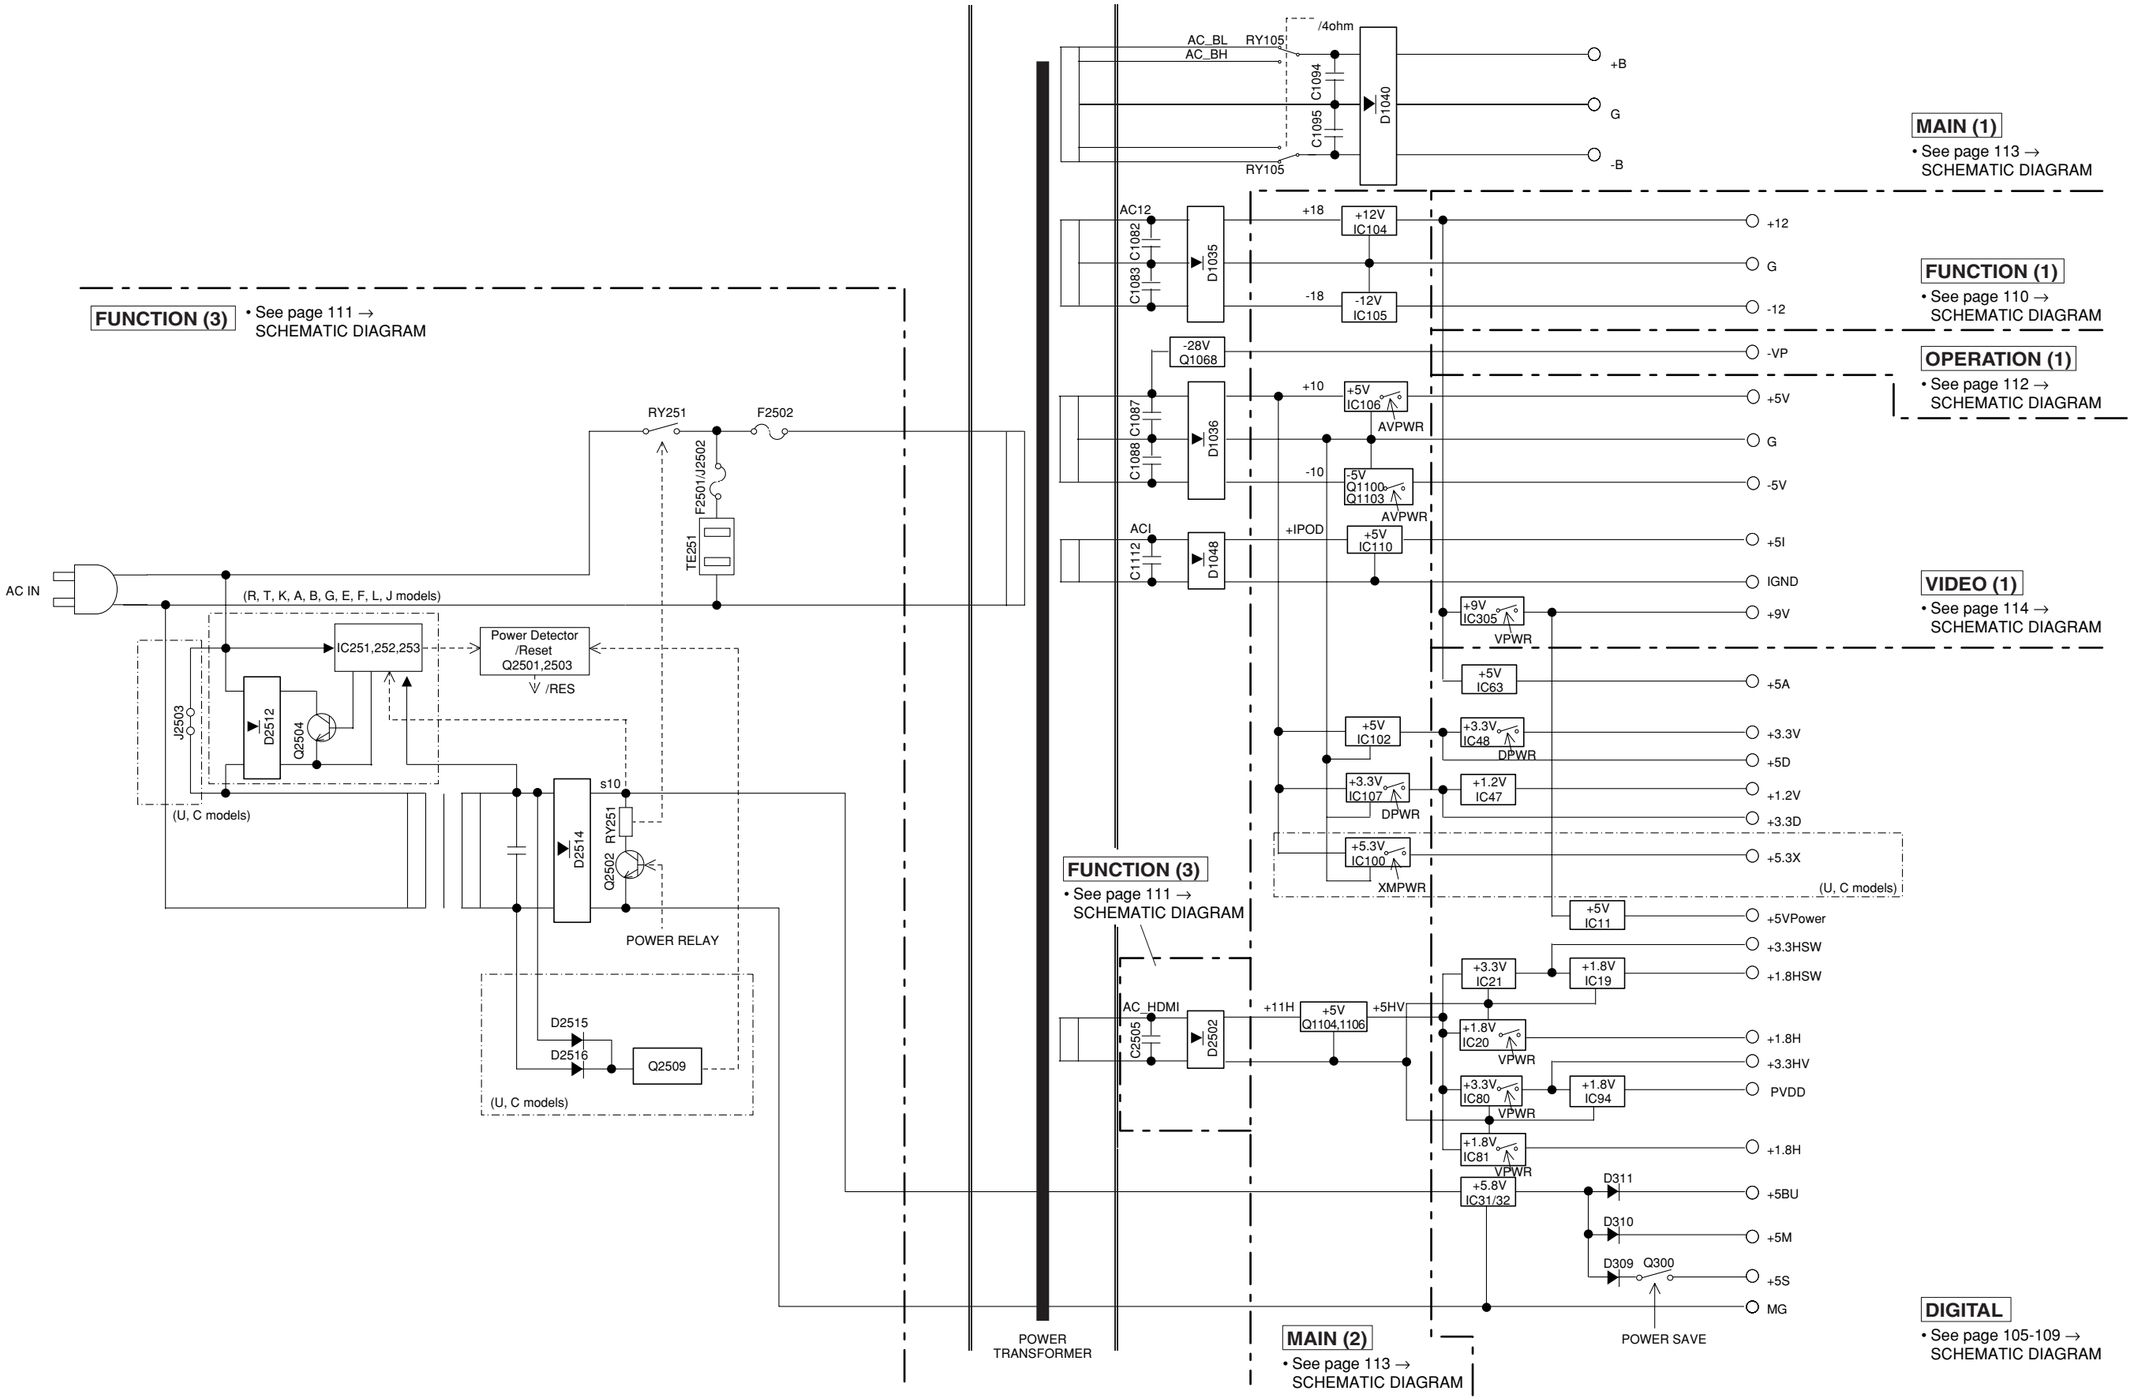

CONTROL SECTION BLOCK DIAGRAM

■ PRINTED CIRCUIT BOARDS

DIGITAL P.C.B. (Side A)

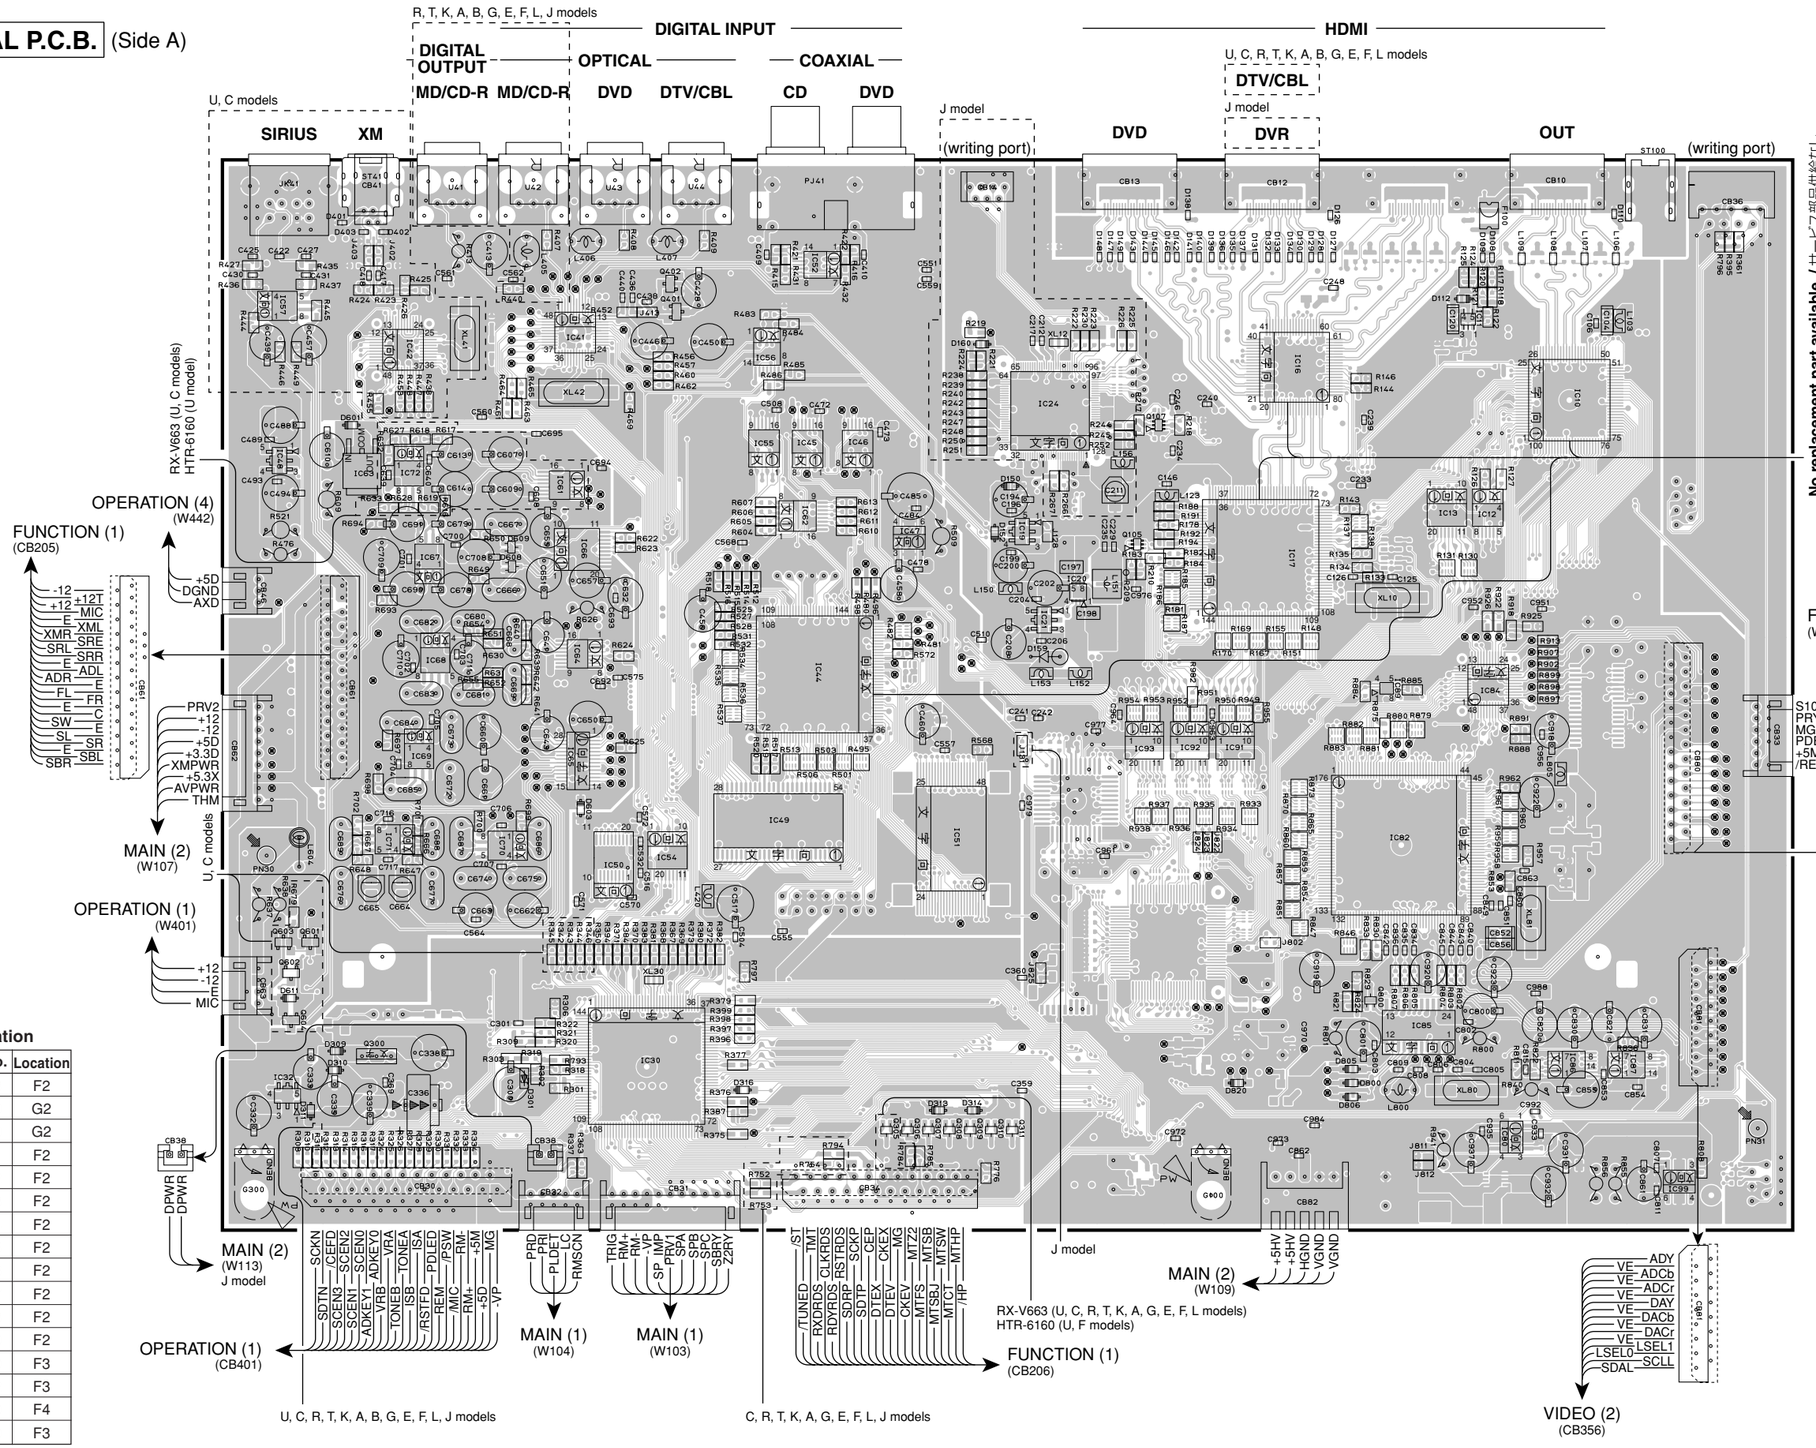


- **Semiconductor Location**

Ref no.	Location	Ref no.	Location
D108	H2	D138	F2
D109	H2	D139	G2
D110	H2	D140	G2
D112	H2	D141	F2
D126	G2	D142	F2
D127	G2	D143	F2
D128	G2	D144	F2
D129	G2	D145	F2
D130	G2	D146	F2
D131	G2	D147	F2
D132	G2	D148	F2
D133	G2	D149	F2
D134	G2	D150	F3
D135	G2	D152	F3
D136	G2	D159	F4
D137	G2	D160	F3

Ref no.	Location	Ref no.	Location
D301	D6	IC21	F4
D309	C6	IC24	F3
D310	C6	IC30	D6
D311	C6	IC32	C6
D313	E6	IC41	D3
D314	F6	IC42	C3
D316	E6	IC44	E4
D401	C2	IC45	E3
D402	C2	IC46	E3
D403	C2	IC47	E3
D601	C3	IC48	C3
D603	D5	IC49	E5
D608	D3	IC50	D5
D609	D3	IC51	D5
D611	C5	IC52	E2
D800	G6	IC54	D5
D805	G6	IC55	E3
D806	G6	IC56	E3
D820	G6	IC57	C2
IC10	H3	IC61	D3
IC11	H2	IC62	E3
IC12	H3	IC63	C3
IC13	H3	IC64	D4
IC16	G3	IC65	D4
IC17	G3	IC66	D3
IC19	F3	IC67	C3
IC20	F4	IC68	C4

Ref no.	Location	Ref no.	Location
IC69	C4	Q107	F3
IC70	D5	Q300	C6
IC71	C5	Q305	E6
IC72	C3	Q306	E6
IC80	H6	Q307	E6
IC82	G5	Q308	E6
IC84	H4	Q309	F6
IC85	G5	Q310	F6
IC86	H6	Q311	F6
IC87	H6	Q401	D2
IC89	G4	Q402	D2
IC91	G4	Q601	C5
IC92	F4	Q602	C5
IC93	F4	Q603	C5
IC99	I6	Q604	C5
Q105	F3	Q800	G5


DIGITAL P.C.B. (Side B)

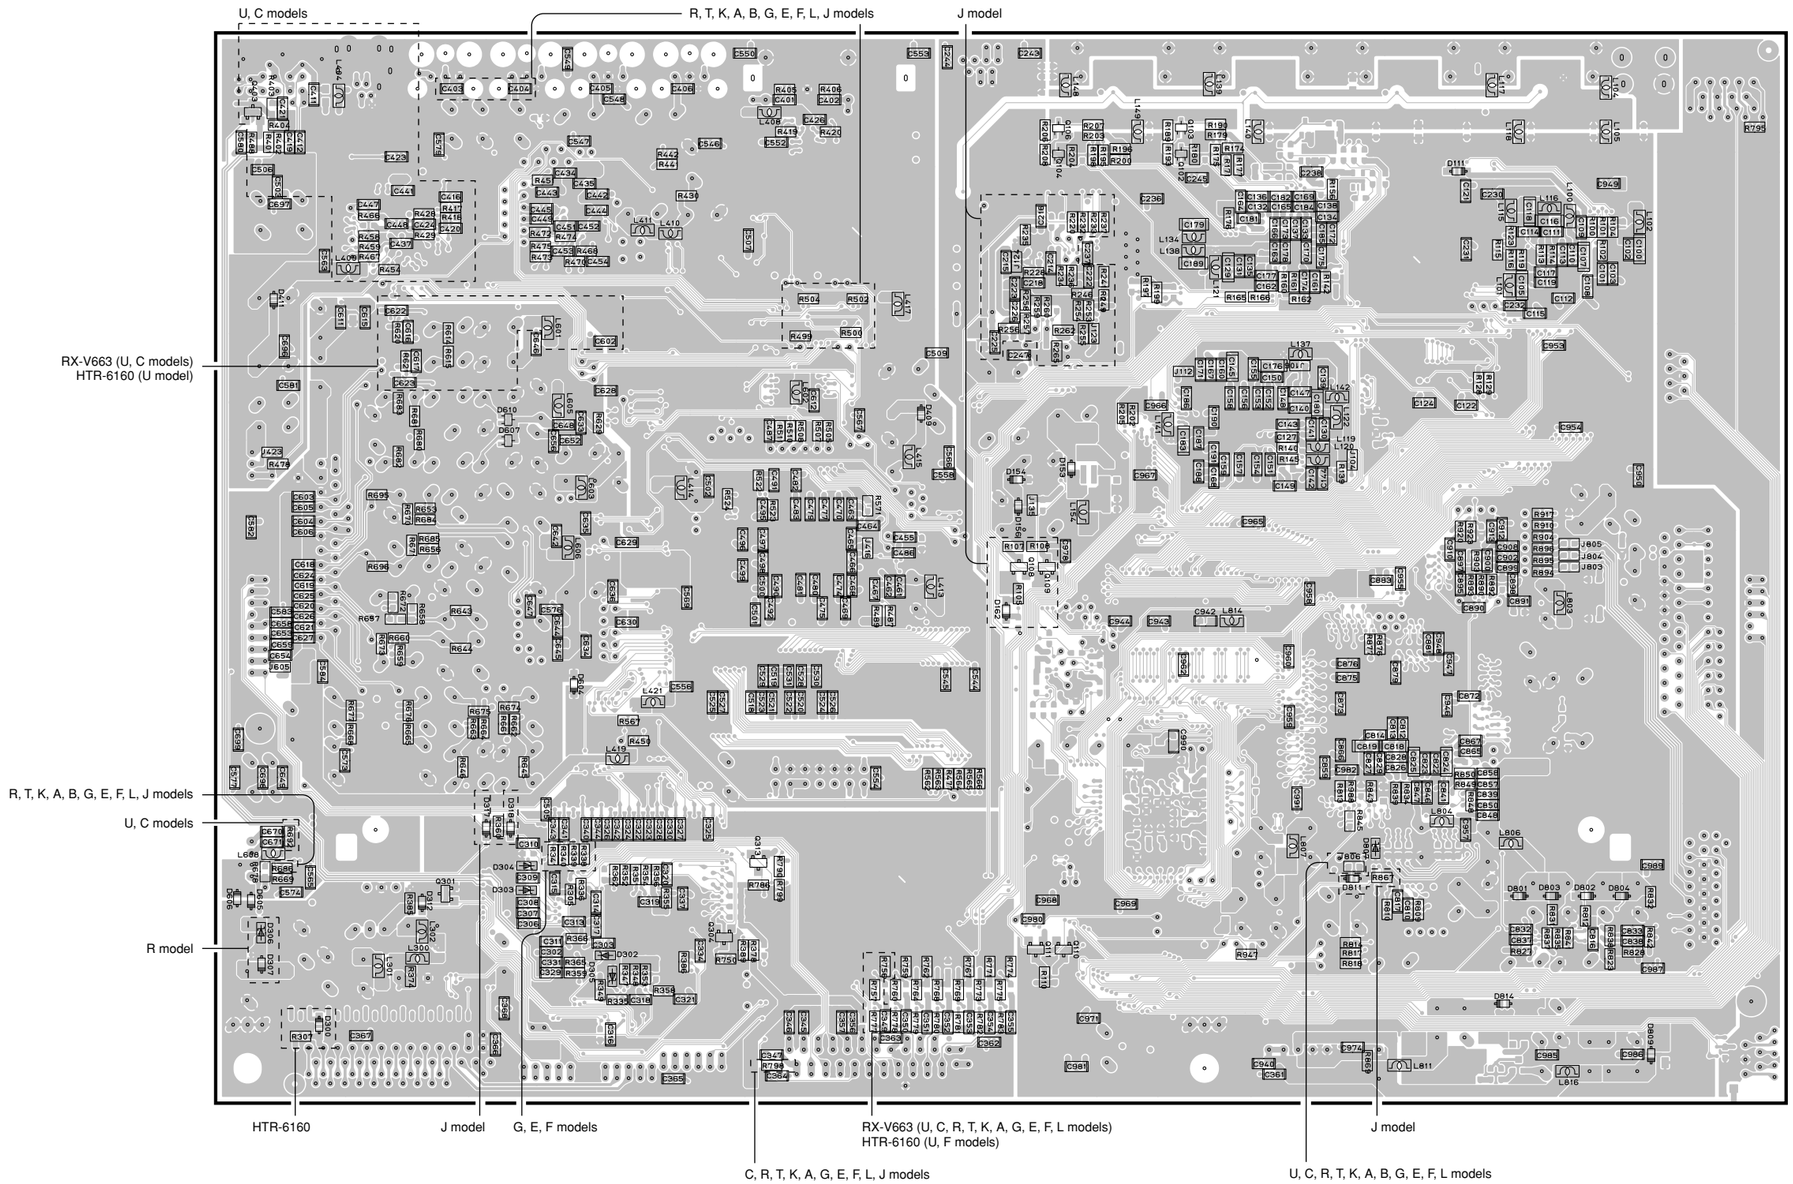

- **Semiconductor Location**

Ref no.	Location	Ref no.	Location
D111	H2	D610	D3
D153	F4	D801	H5
D154	F4	D802	H5
D156	F4	D803	H5
D162	F4	D804	H5
D300	C6	D807	G5
D302	D6	D809	H6
D303	D5	D811	G5
D304	D5	D814	H6
D305	D6	Q102	F2
D306	C6	Q103	F2
D307	C6	Q104	F2
D312	C5	Q106	F2
D317	D5	Q108	F4
D318	D5	Q109	F4
D409	E3	Q110	F6
D411	C3	Q111	F6
D604	D5	Q301	C5
D605	C5	Q304	E6
D606	C5	Q313	E5
D607	D4	Q403	C2


FUNCTION (1) P.C.B. (Side A)

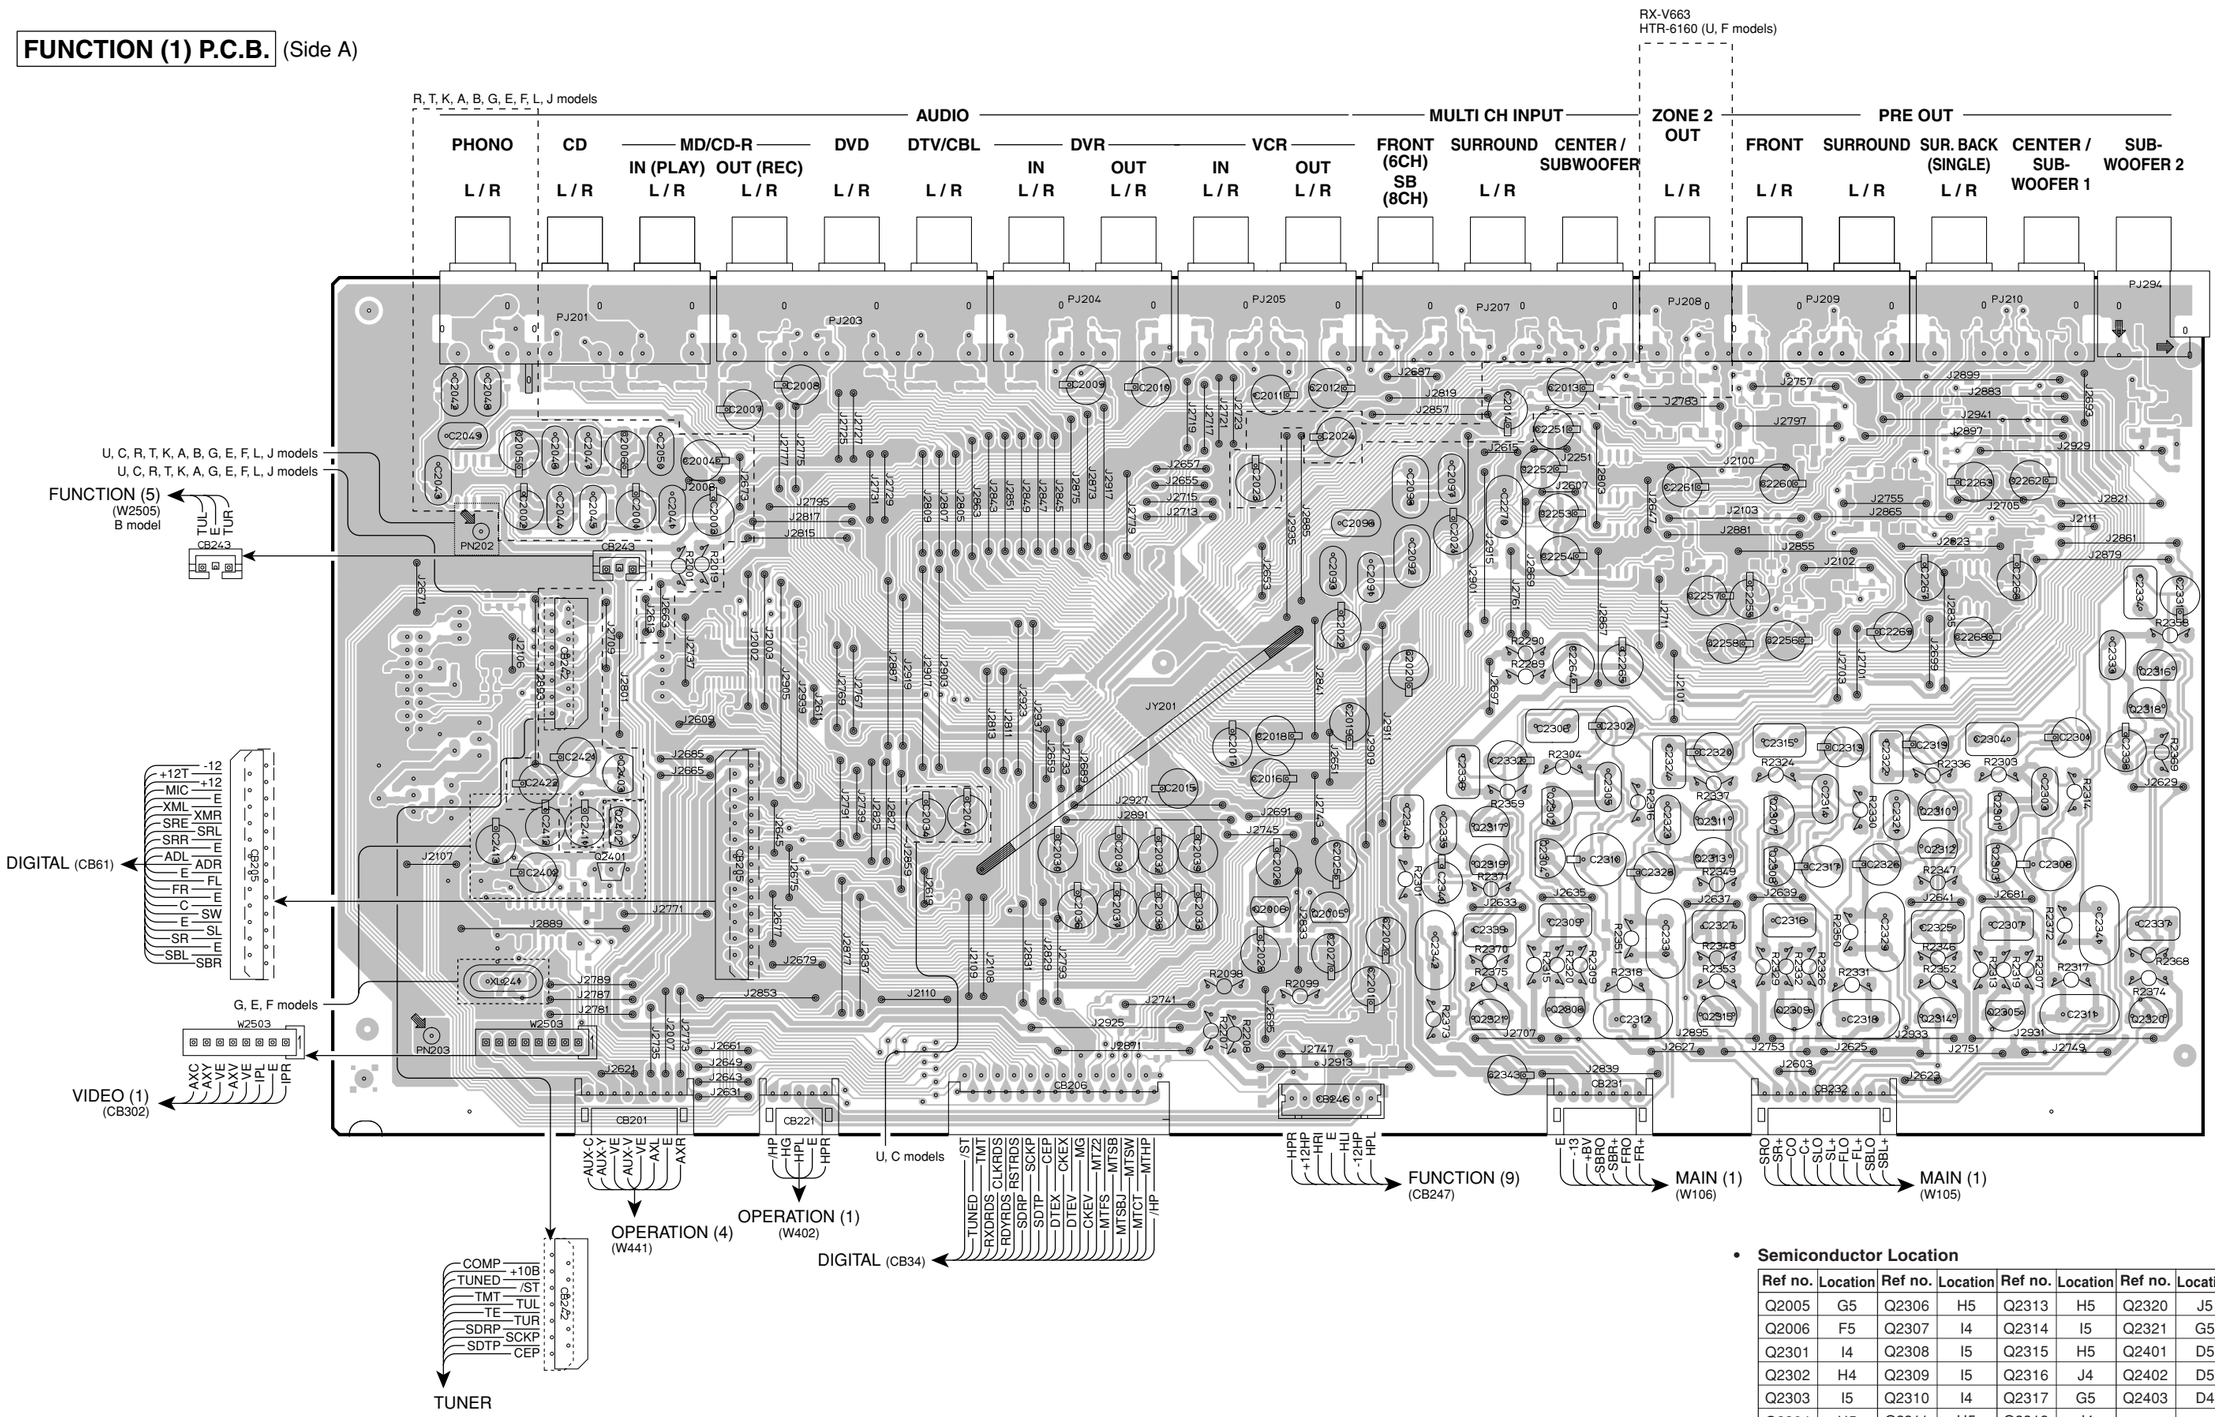

- **Semiconductor Location**

Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location
Q2005	G5	Q2306	H5	Q2313	H5	Q2320	J5
Q2006	F5	Q2307	I4	Q2314	I5	Q2321	G5
Q2301	I4	Q2308	I5	Q2315	H5	Q2401	D5
Q2302	H4	Q2309	I5	Q2316	J4	Q2402	D5
Q2303	I5	Q2310	I4	Q2317	G5	Q2403	D4
Q2304	H5	Q2311	H5	Q2318	J4		
Q2305	I5	Q2312	I5	Q2319	G5		


FUNCTION (1) P.C.B. (Side B)

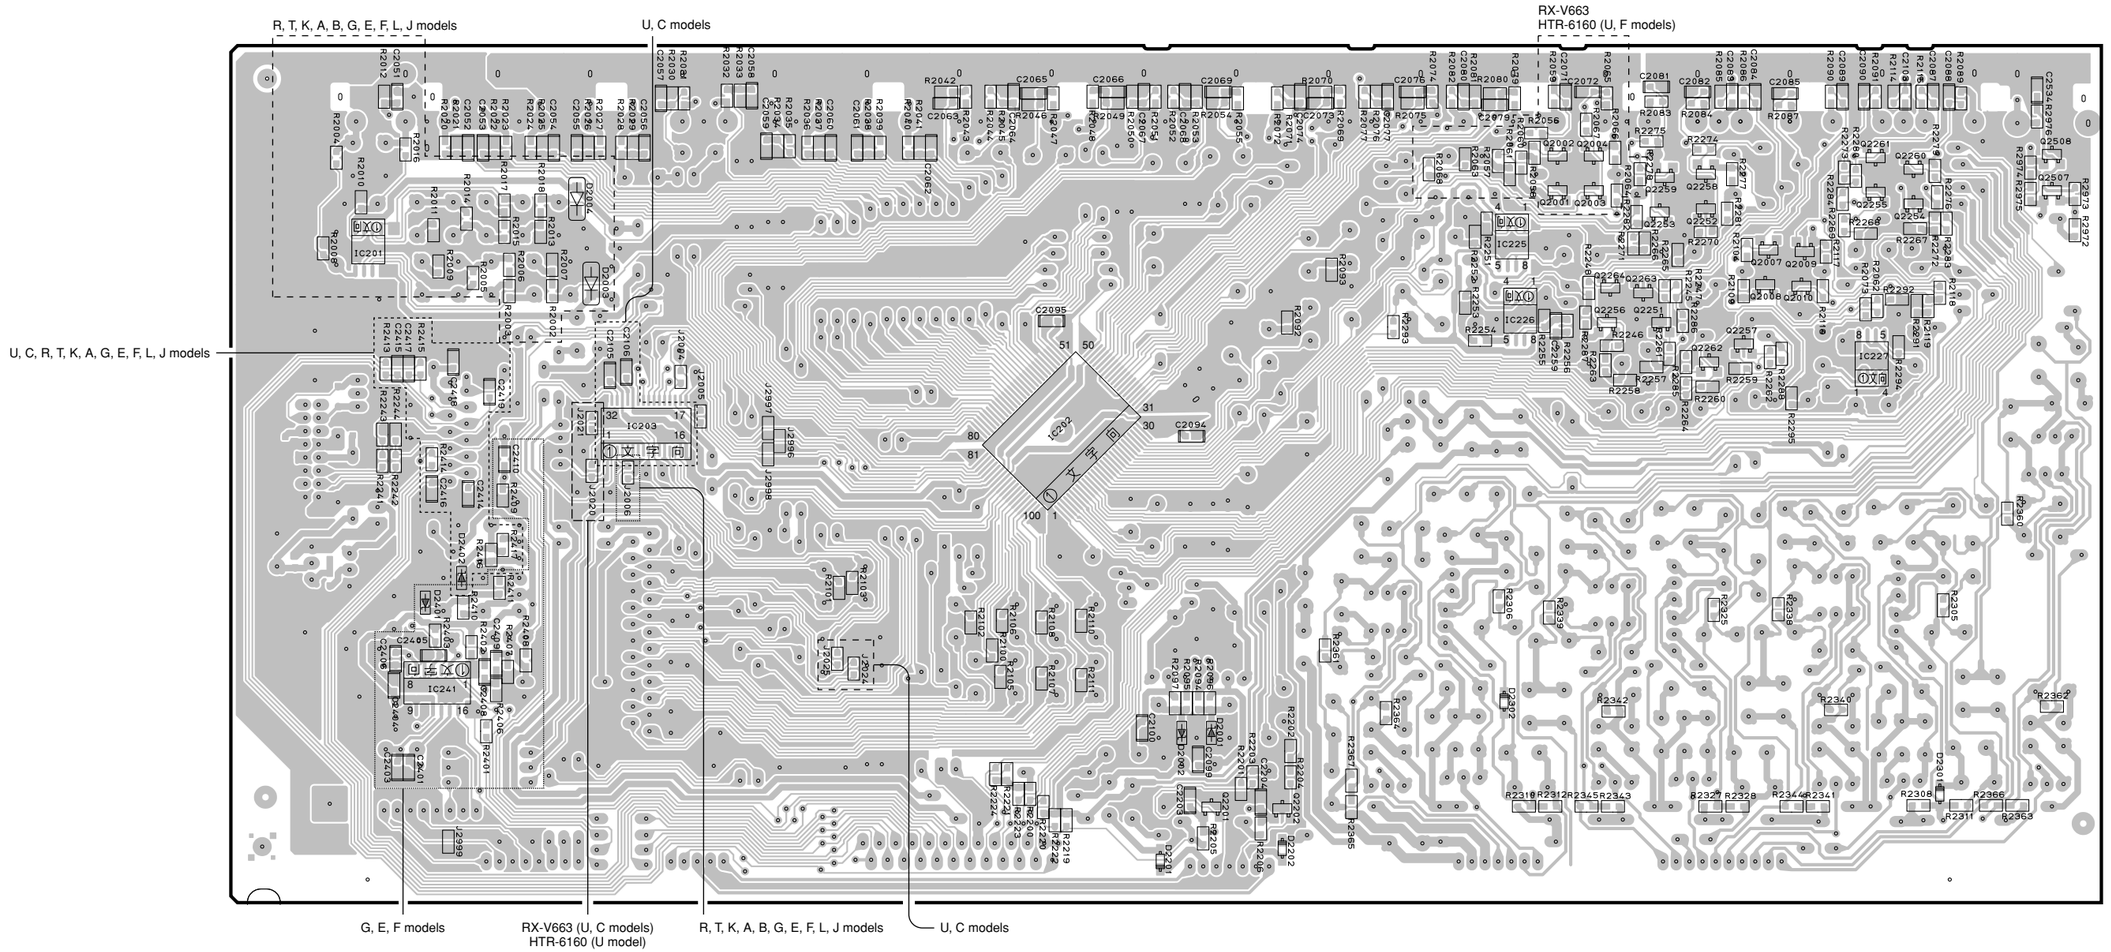


- **Semiconductor Location**

Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location
D2001	F5	D2402	C4	Q2002	G3	Q2201	F5	Q2256	H3	Q2263	H3
D2002	F5	IC202	E4	Q2003	H3	Q2202	F5	Q2257	H4	Q2264	H3
D2201	F6	IC225	G3	Q2004	H3	Q2251	H3	Q2258	H3	Q2507	I3
D2202	F6	IC226	G3	Q2007	H3	Q2252	H3	Q2259	H3	Q2508	I3
D2301	I5	IC227	I4	Q2008	H3	Q2253	H3	Q2260	I3		
D2302	G5	IC241	C5	Q2009	H3	Q2254	I3	Q2261	I3		
D2401	C5	Q2001	G3	Q2010	H3	Q2255	I3	Q2262	H4		

FUNCTION (3) P.C.B. (Side A)

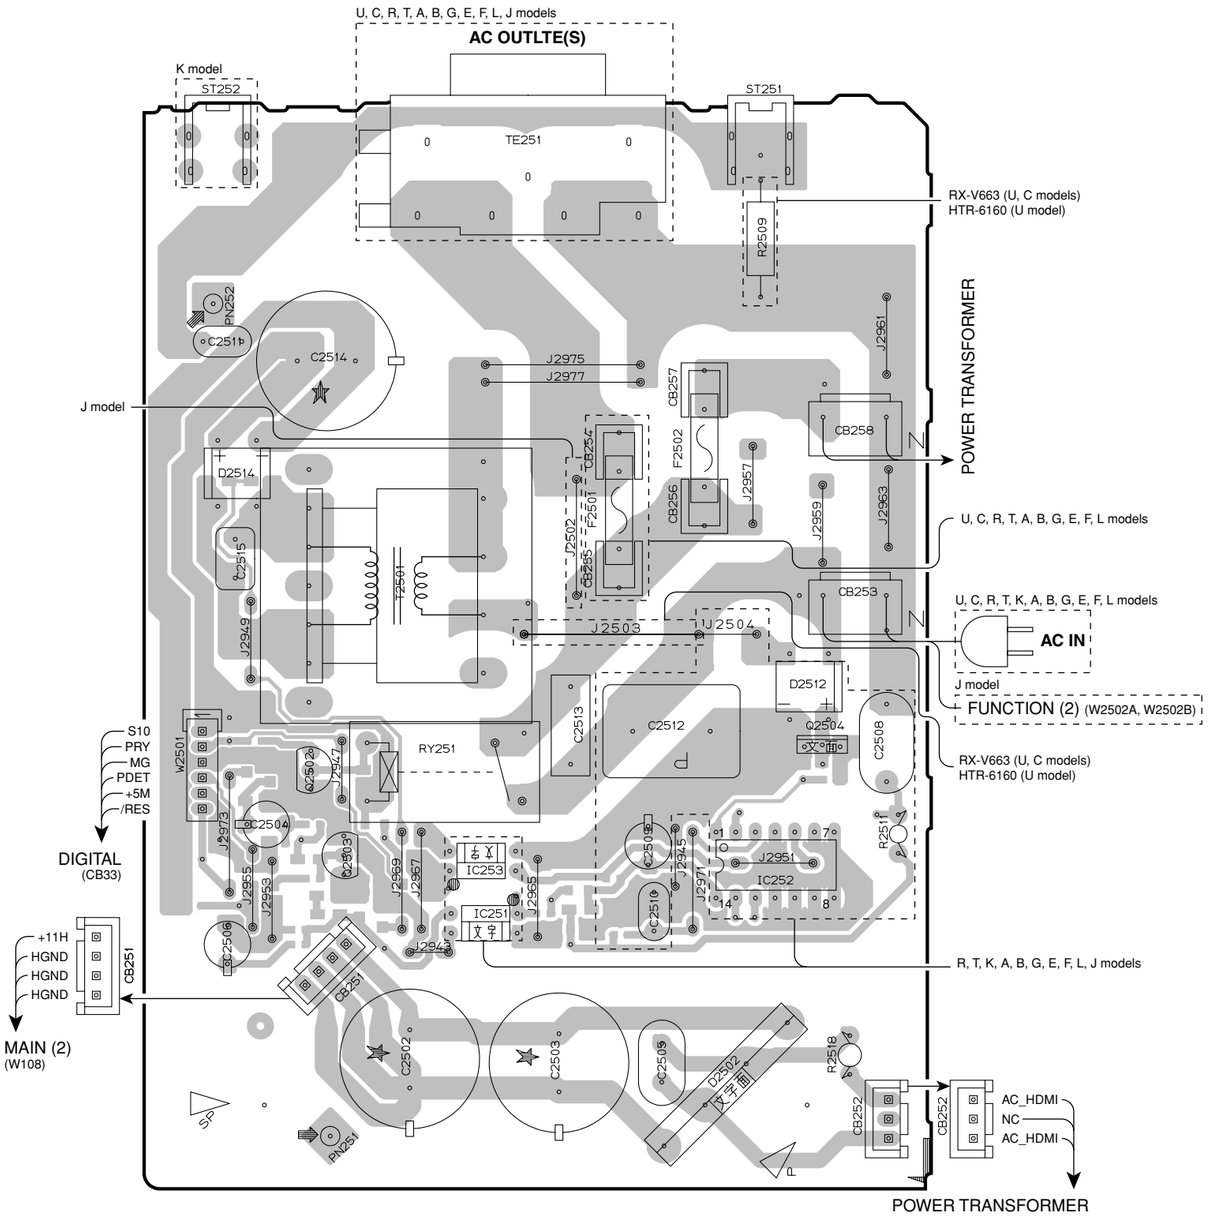

FUNCTION (3) P.C.B. (Side B)

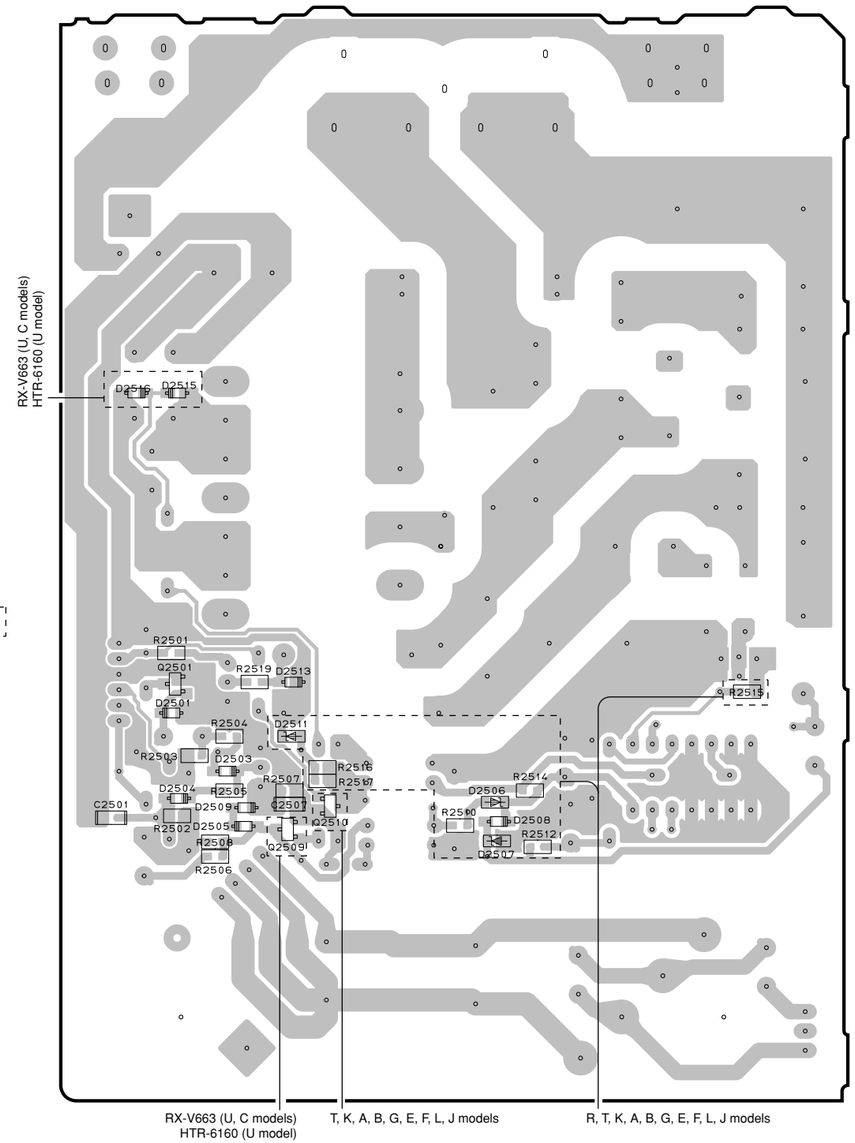


- **Semiconductor Location**

Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location
D2501	G5	D2505	G5	D2509	G5	D2514	B3	IC252	D5	Q2503	B5
D2502	D6	D2506	H5	D2511	G5	D2515	G3	IC253	C5	Q2504	D5
D2503	G5	D2507	H5	D2512	D4	D2516	G3	Q2501	G5	Q2509	G5
D2504	G5	D2508	H5	D2513	G5	IC251	C5	Q2502	B5	Q2510	G5

Circuit No.	RX-V663	RX-V663/HTR-6160/DSP-AX763
	C	U, C, R, T, K, A, B, G, E, F, L, J
J2945, 2951	O	X


FUNCTION (2) P.C.B. (Side A)

J model

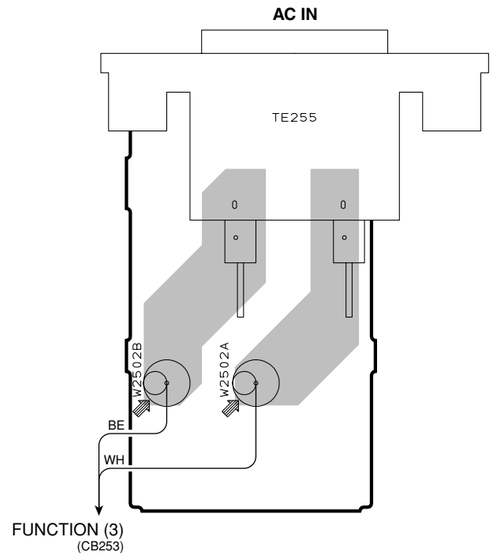

FUNCTION (4) P.C.B. (Side A)

R, L models

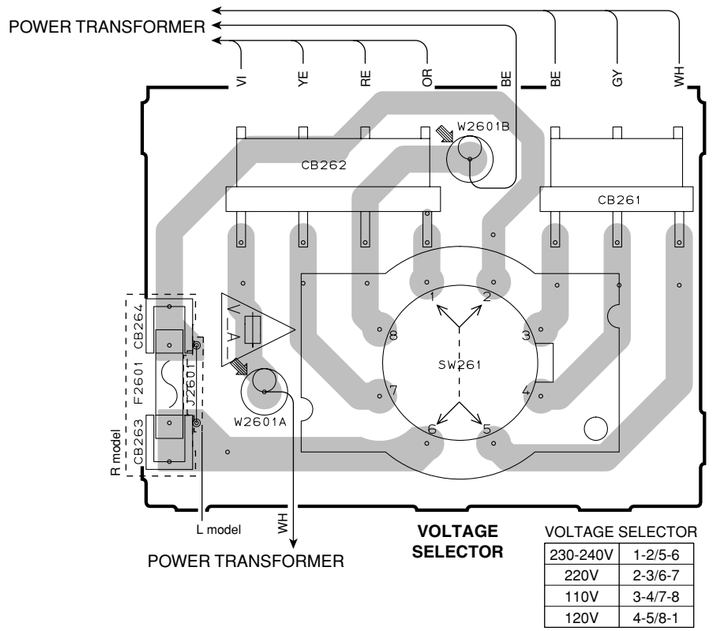


VOLTAGE SELECTOR

230-240V	1-2/5-6
220V	2-3/6-7
110V	3-4/7-8
120V	4-5/8-1


FUNCTION (5) P.C.B. (Side A)

B model

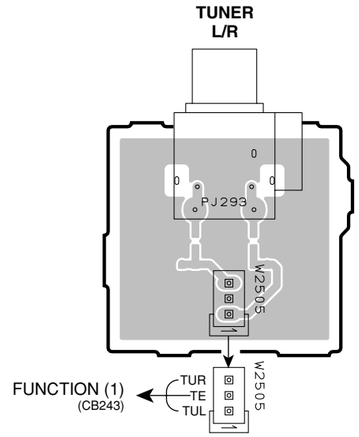


FUNCTION (5) P.C.B. (Side B)


B model

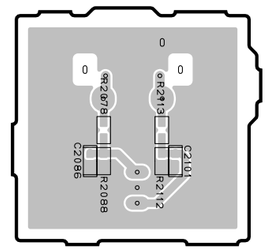


FUNCTION (6) P.C.B. (Side A)

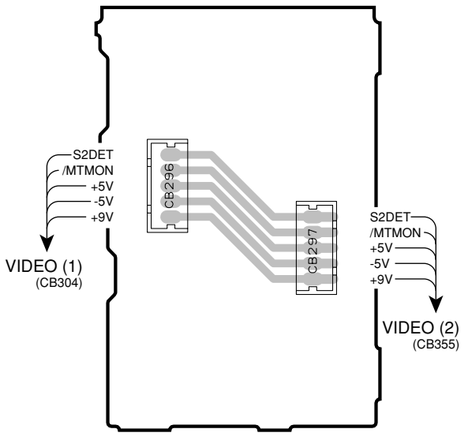


FUNCTION (6) P.C.B. (Side B)

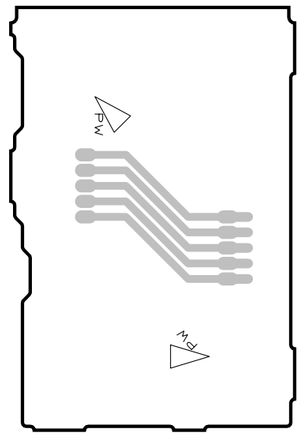

FUNCTION (9) P.C.B. (Side A)

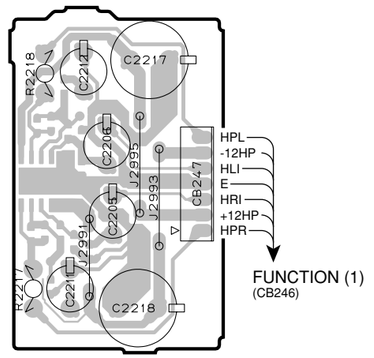


FUNCTION (9) P.C.B. (Side B)

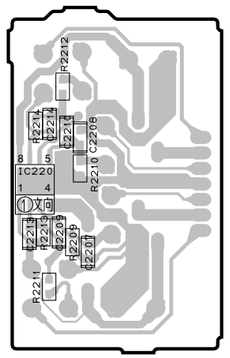

- **Semiconductor Location**

Ref no.	Location
IC220	H6

OPERATION (1) P.C.B. (Side A)

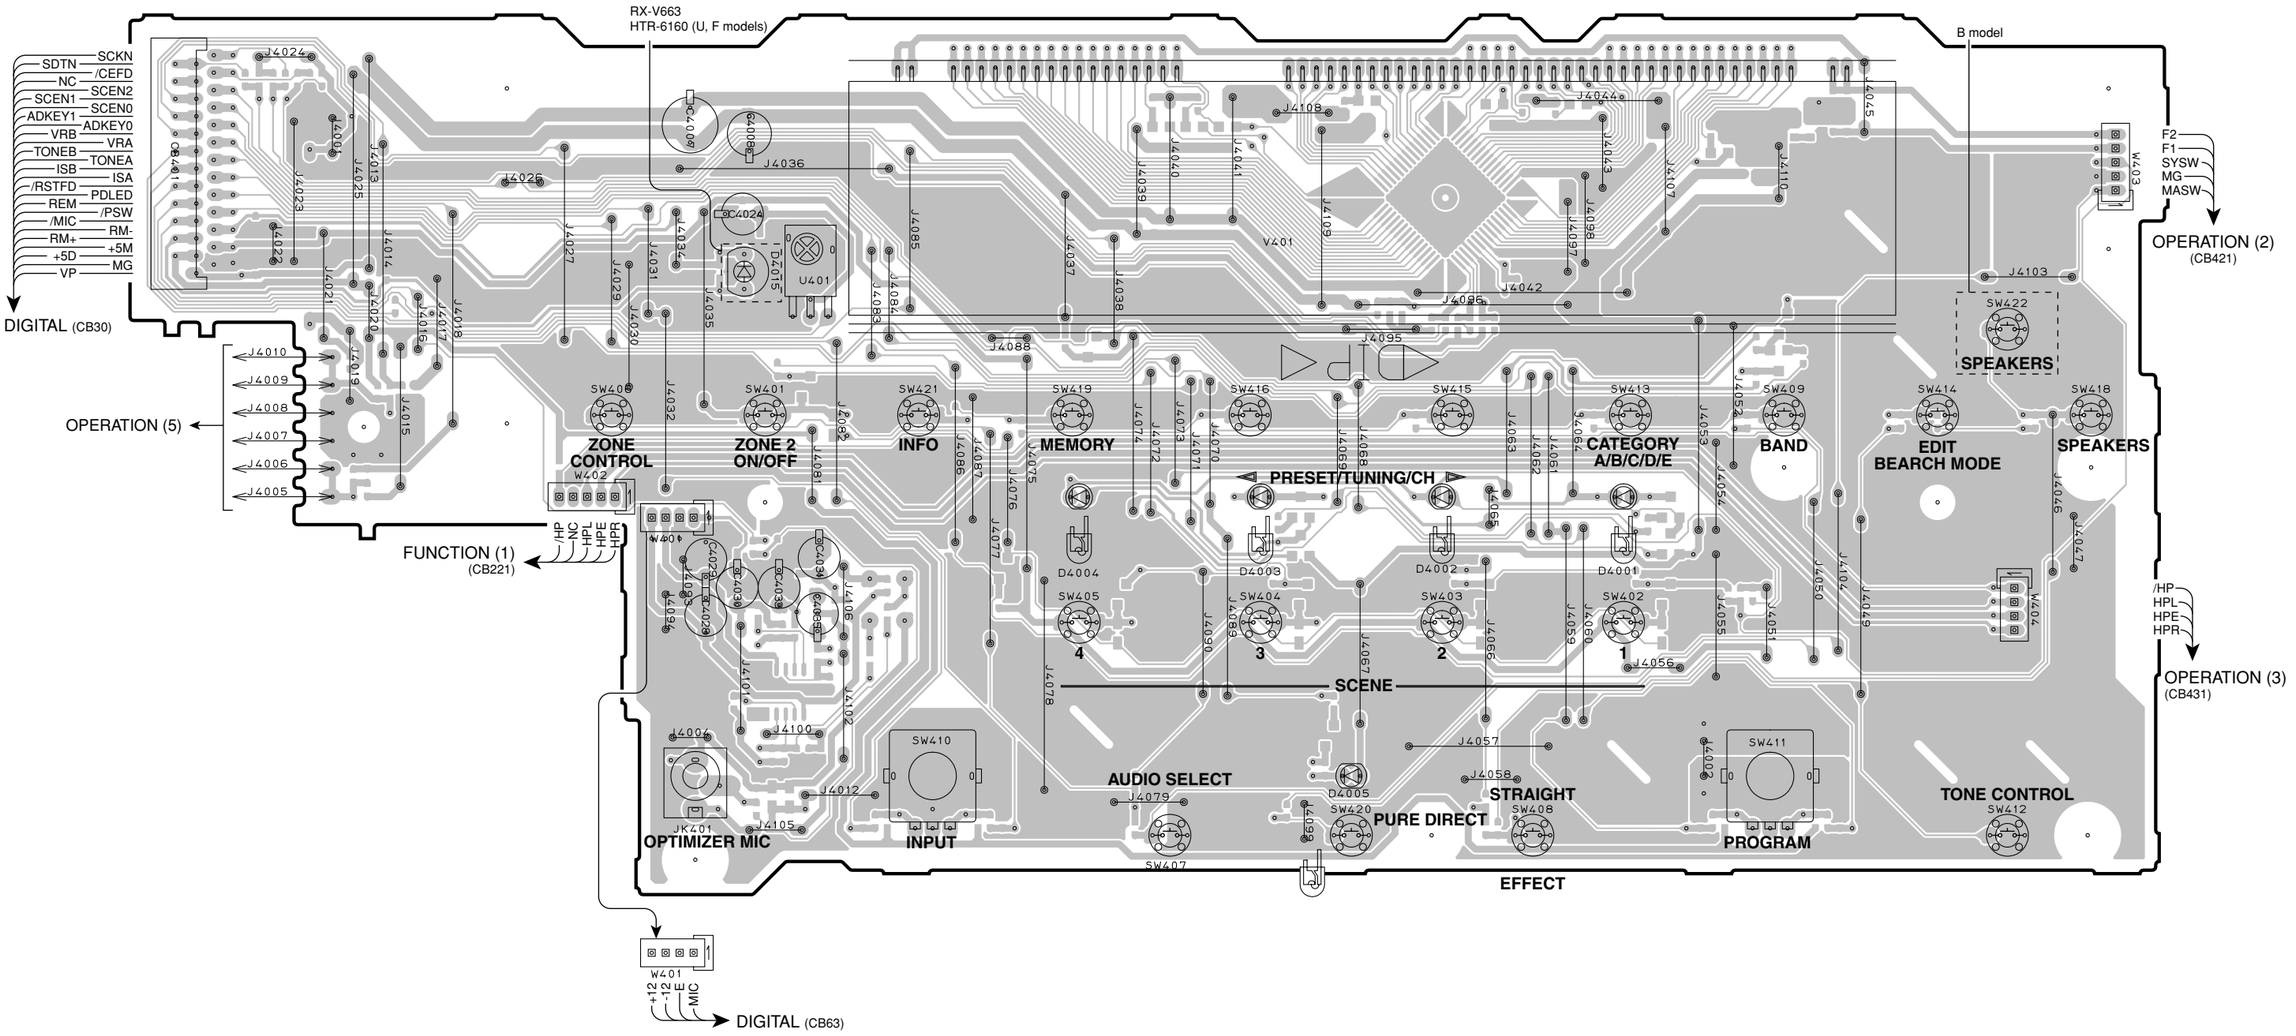


- **Semiconductor Location**

Ref no.	Location	Ref no.	Location	Ref no.	Location
D4001	H4	D4003	F4	D4005	F5
D4002	G4	D4004	E4	D4015	D3

Circuit No.	U, C, R, T, K, A, G, E, L, J	B
SW401, 406, 409, 413-416, 418, 419, 421	O	X


OPERATION (1) P.C.B. (Side B)

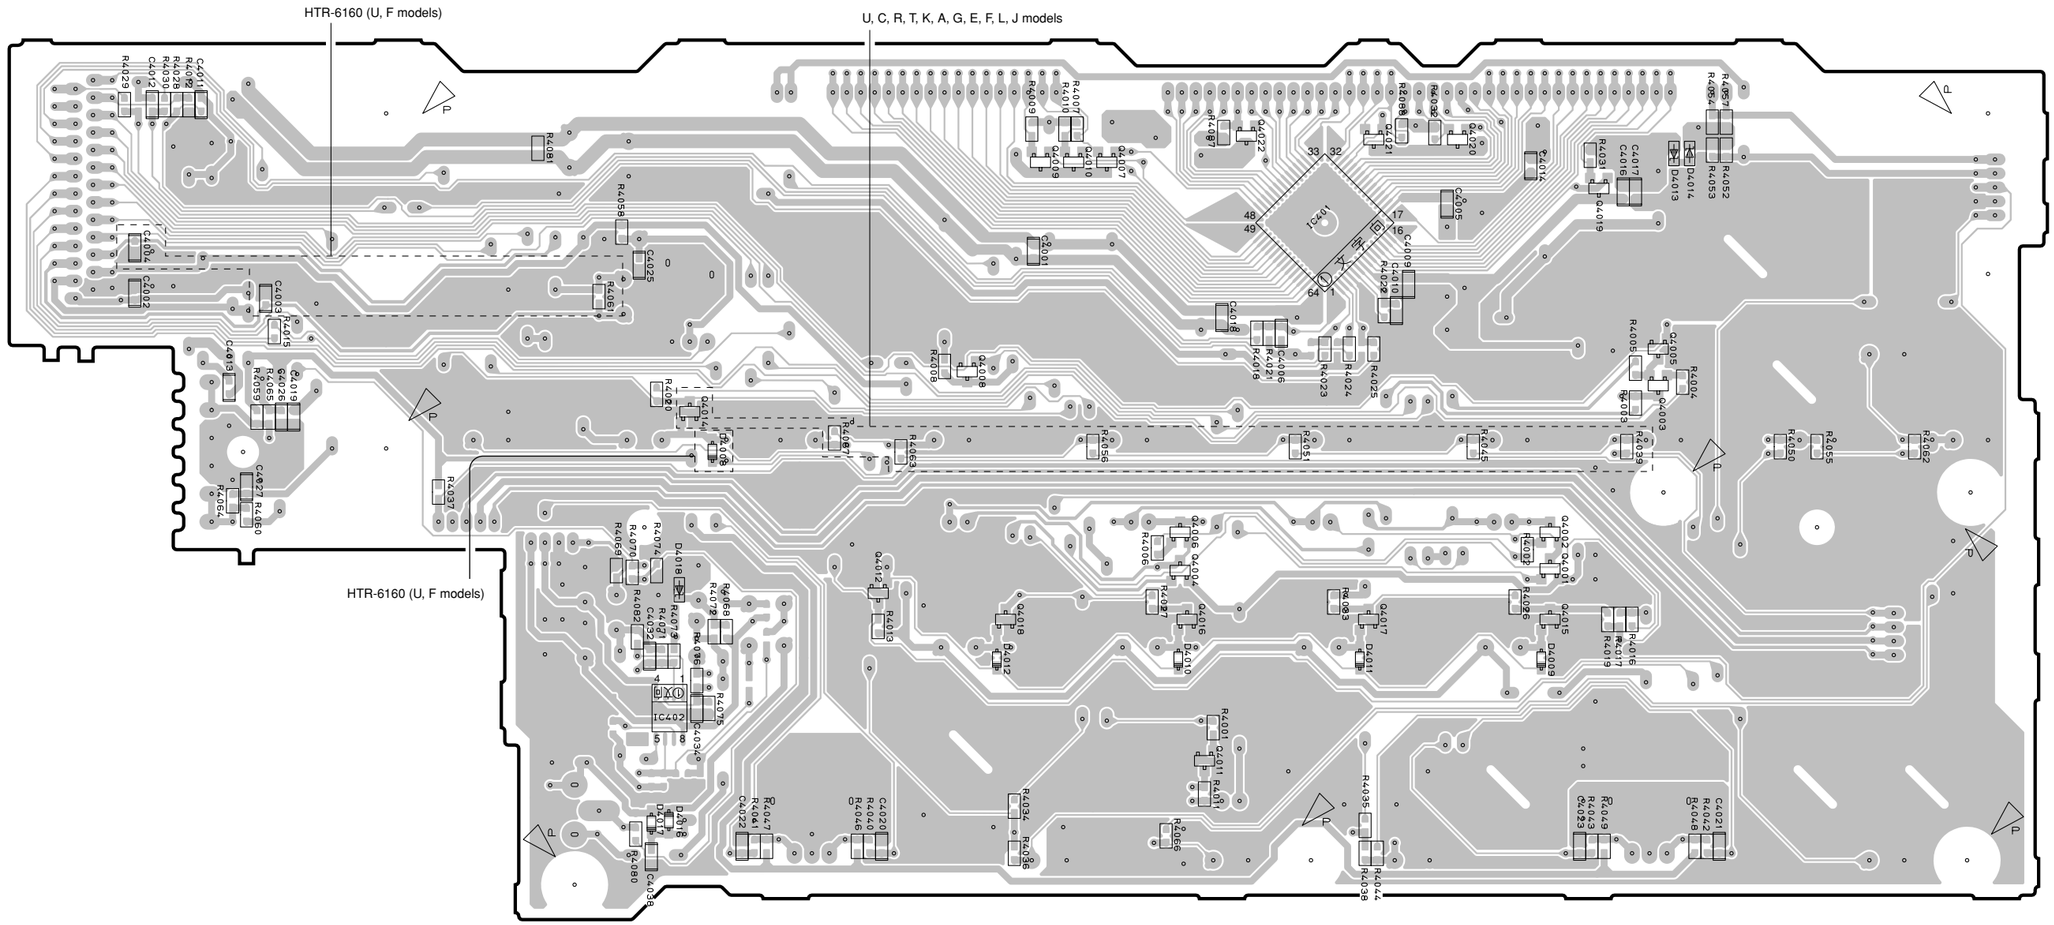


- **Semiconductor Location**

Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location
D4008	D4	D4018	D5	Q4007	F3	Q4017	G5
D4009	H5	IC401	G3	Q4008	E4	Q4018	F5
D4010	F5	IC402	D5	Q4009	F3	Q4019	H3
D4011	G5	Q4001	H4	Q4010	F3	Q4020	G3
D4012	E5	Q4002	H4	Q4011	F5	Q4021	G3
D4013	H3	Q4003	H4	Q4012	E5	Q4022	G3
D4014	H3	Q4004	F4	Q4014	D4		
D4016	D6	Q4005	H4	Q4015	H5		
D4017	D6	Q4006	F4	Q4016	F5		


OPERATION (2) P.C.B. (Side A)

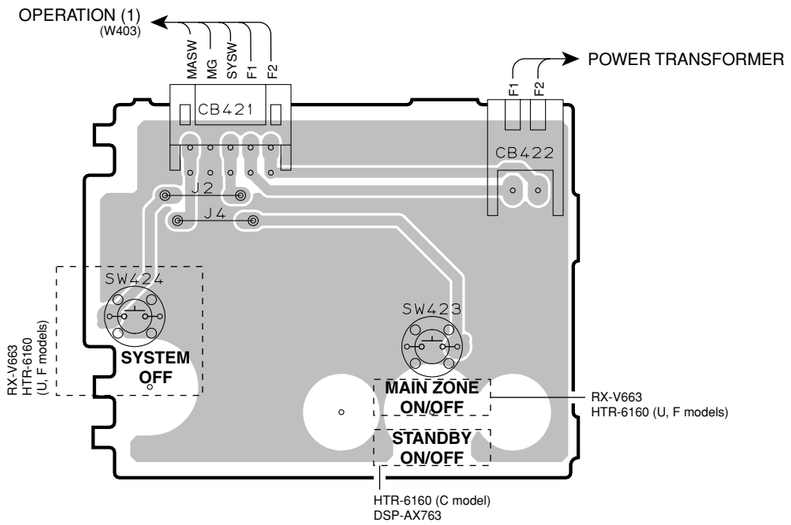


OPERATION (2) P.C.B. (Side B)

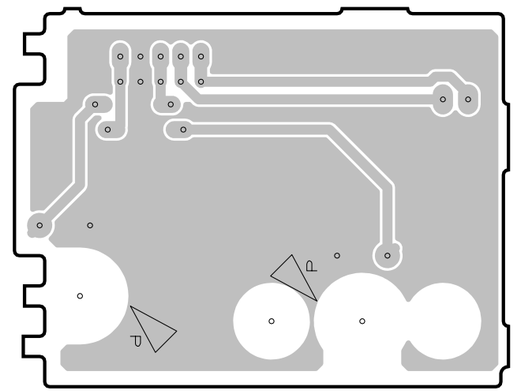

OPERATION (3) P.C.B. (Side A)

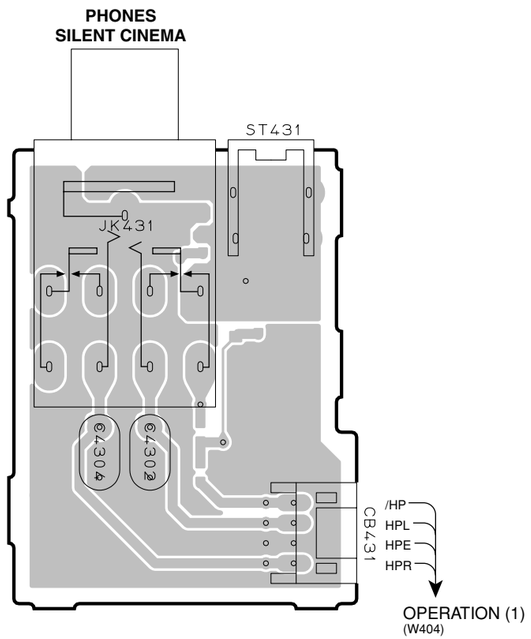


OPERATION (3) P.C.B. (Side B)

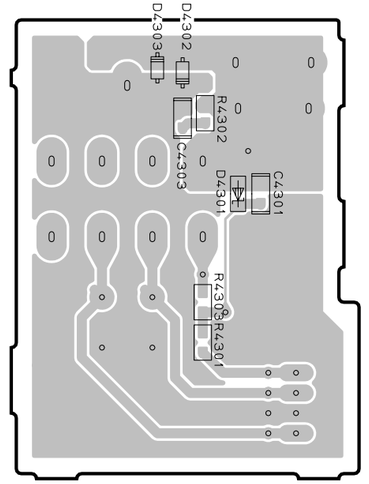


- **Semiconductor Location**

Ref no.	Location
D4301	H6
D4302	H5
D4303	H5


OPERATION (4) P.C.B. (Side A)

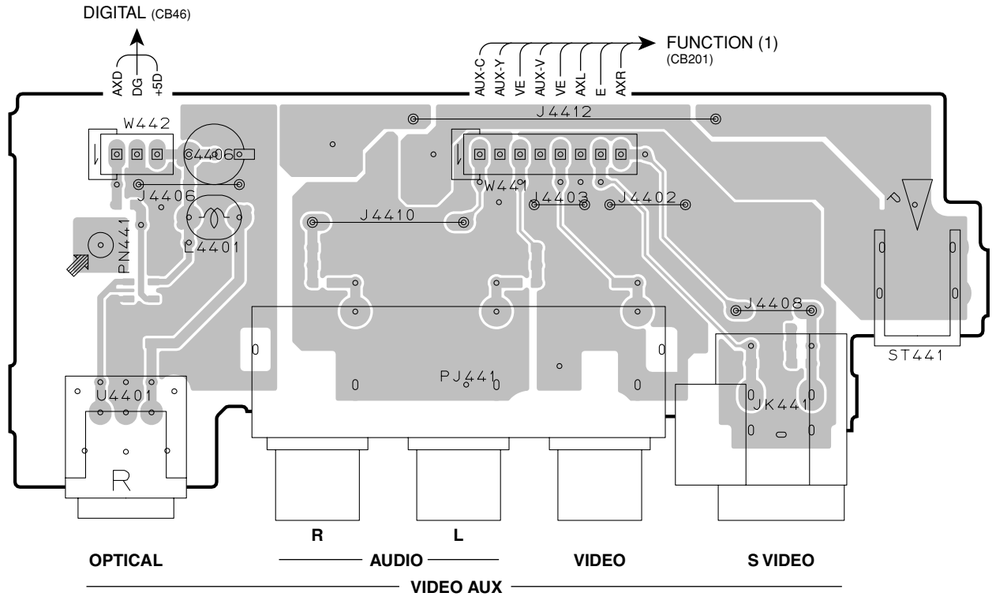

OPERATION (4) P.C.B. (Side B)

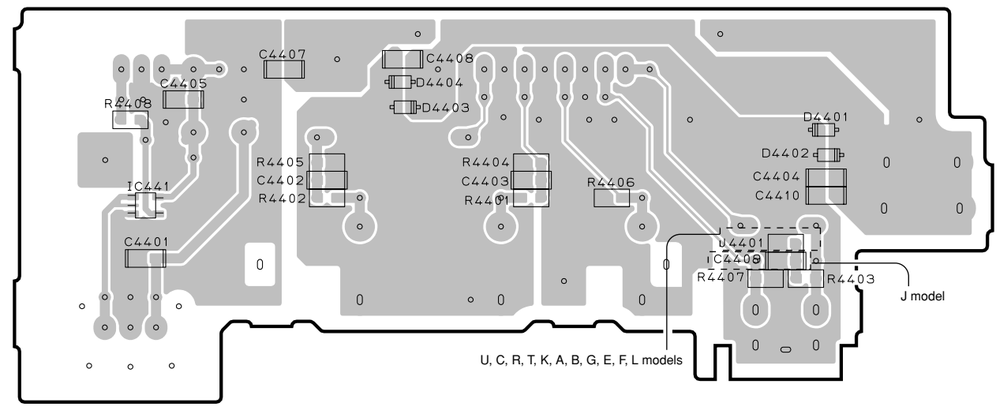

OPERATION (5) P.C.B. (Side A)

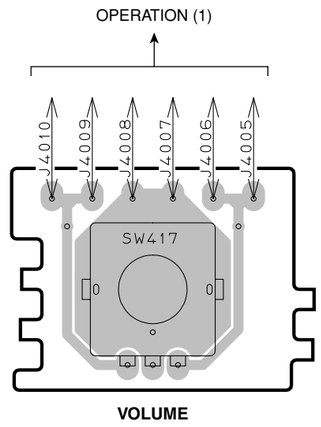

- **Semiconductor Location**


Ref no.	Location
D4401	I3
D4402	I3
D4403	H3
D4404	H3
IC441	G3

MAIN (1) P.C.B. (Side A)


- **Semiconductor Location**

Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location
D1000	C5	D1029	E4	D1065	D4	Q1026	I6
D1001	H4	D1030	E4	D1066	F4	Q1027	H6
D1002	H4	D1031	D3	D1067	C3	Q1028	G6
D1003	C5	D1032	H3	D1068	C3	Q1029	F6
D1004	I6	D1033	C3	D1069	C2	Q1030	E6
D1005	I6	D1034	D3	Q1000	C5	Q1031	C5
D1006	H6	D1035	I5	Q1001	E4	Q1032	D5
D1007	H6	D1036	I5	Q1002	E4	Q1033	I7
D1008	G6	D1037	E4	Q1003	E4	Q1034	I7
D1009	G6	D1038	E4	Q1004	D4	Q1035	I6
D1010	F6	D1039	I3	Q1005	E4	Q1036	H6
D1011	F6	D1040	H3	Q1006	H2	Q1037	H6
D1012	E6	D1043	E4	Q1007	D4	Q1038	G7
D1013	E6	D1044	H4	Q1008	E4	Q1039	G6
D1014	E6	D1045	H4	Q1009	E4	Q1040	F6
D1015	E6	D1047	D4	Q1010	E4	Q1041	F6
D1016	D5	D1048	I5	Q1011	D4	Q1042	E6
D1017	D7	D1049	D4	Q1012	E4	Q1043	E6
D1018	H6	D1050	H5	Q1013	H3	Q1044	D6
D1019	I6	D1053	I6	Q1014	D4	Q1045	C5
D1020	H6	D1054	I6	Q1015	C3	Q1046	D5
D1021	G6	D1055	H6	Q1016	C3	Q1047	C5
D1022	F6	D1056	G6	Q1019	I7	Q1048A	I7
D1023	E6	D1057	F6	Q1020	H7	Q1048C	I7
D1024	D6	D1058	E6	Q1021	G7	Q1049A	H7
D1025	D4	D1061	D6	Q1022	F7	Q1049C	H7
D1026	F4	D1062	D6	Q1023	E7	Q1050A	G7
D1027	D4	D1063	D6	Q1024	D7	Q1050C	H7
D1028	E4	D1064	C6	Q1025	I6	Q1051A	F7


Ref no.	Location	Ref no.	Location	Ref no.	Location	Ref no.	Location
Q1051C	G7	Q1061	H6	Q1067	F4	Q1079	D6
Q1052A	E7	Q1062	G6	Q1068	H3	Q1080	C6
Q1052C	F7	Q1063	F6	Q1069	D3	Q1081A	C7
Q1053A	D7	Q1064	E6	Q1070	D3	Q1081C	D7
Q1053C	E7	Q1065	D6	Q1077	C7	Q1083	C6
Q1060	I6	Q1066	I6	Q1078	D6		

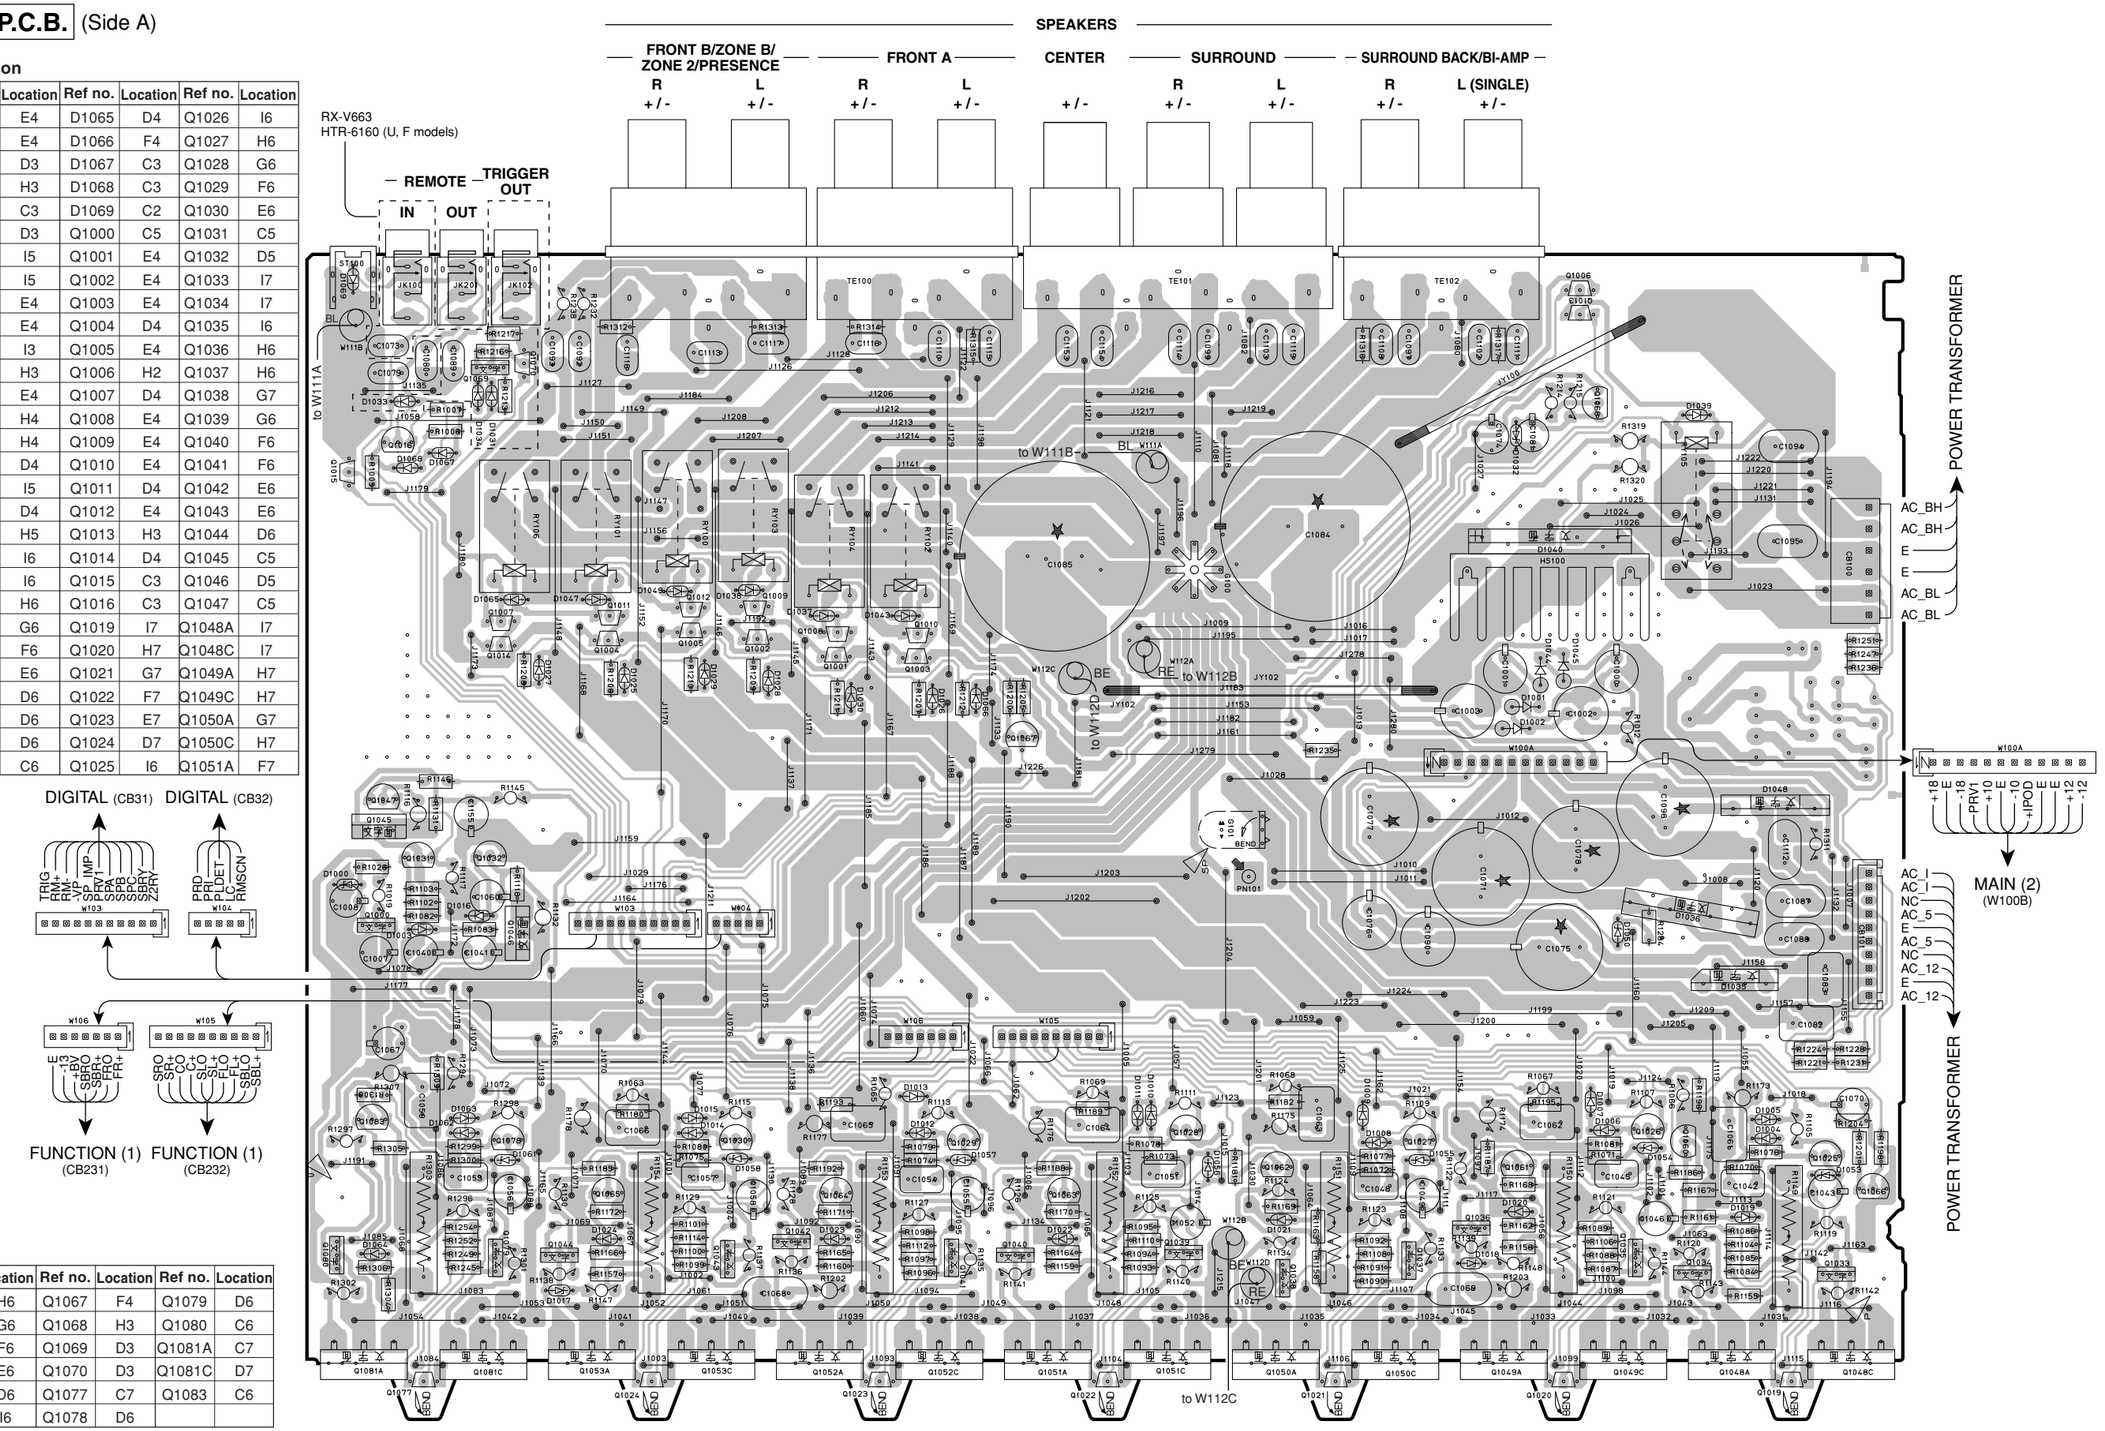


MAIN (2) P.C.B. (Side A)

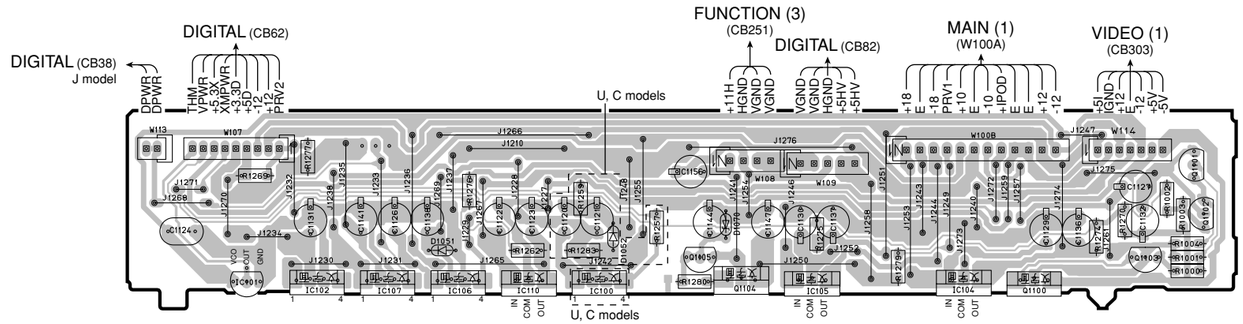

VIDEO (1) P.C.B. (Side A)

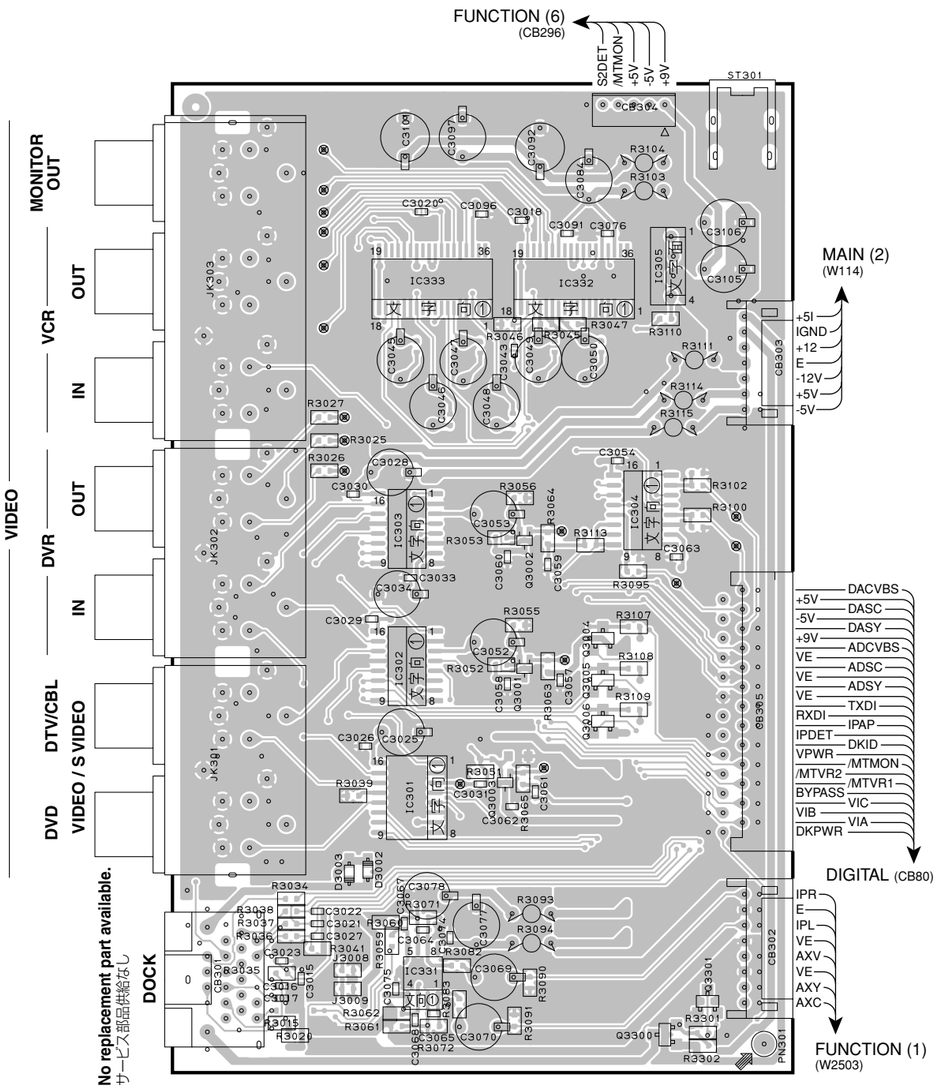


VIDEO (1) P.C.B. (Side B)

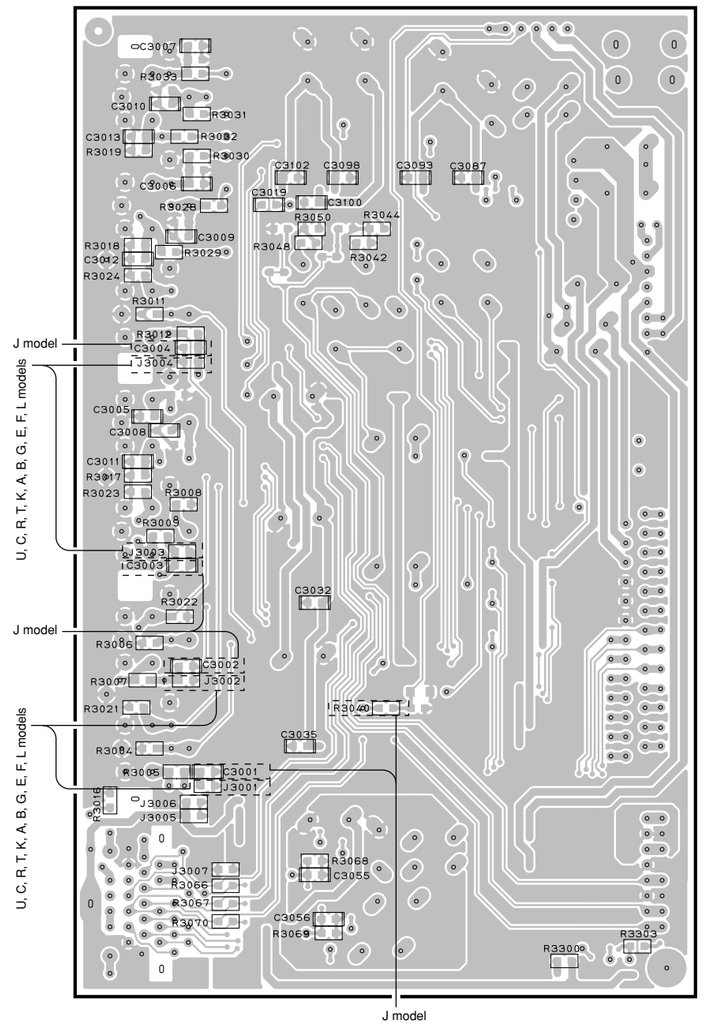


- **Semiconductor Location**

Ref no.	Location	Ref no.	Location
D3002	C6	IC333	C3
D3003	B6	Q3001	C5
IC301	C5	Q3002	C4
IC302	C5	Q3003	C5
IC303	C4	Q3004	D5
IC304	D4	Q3005	D5
IC305	D3	Q3006	D5
IC331	C6	Q3300	D6
IC332	C3	Q3301	D6

VIDEO (2) P.C.B. (Side A)

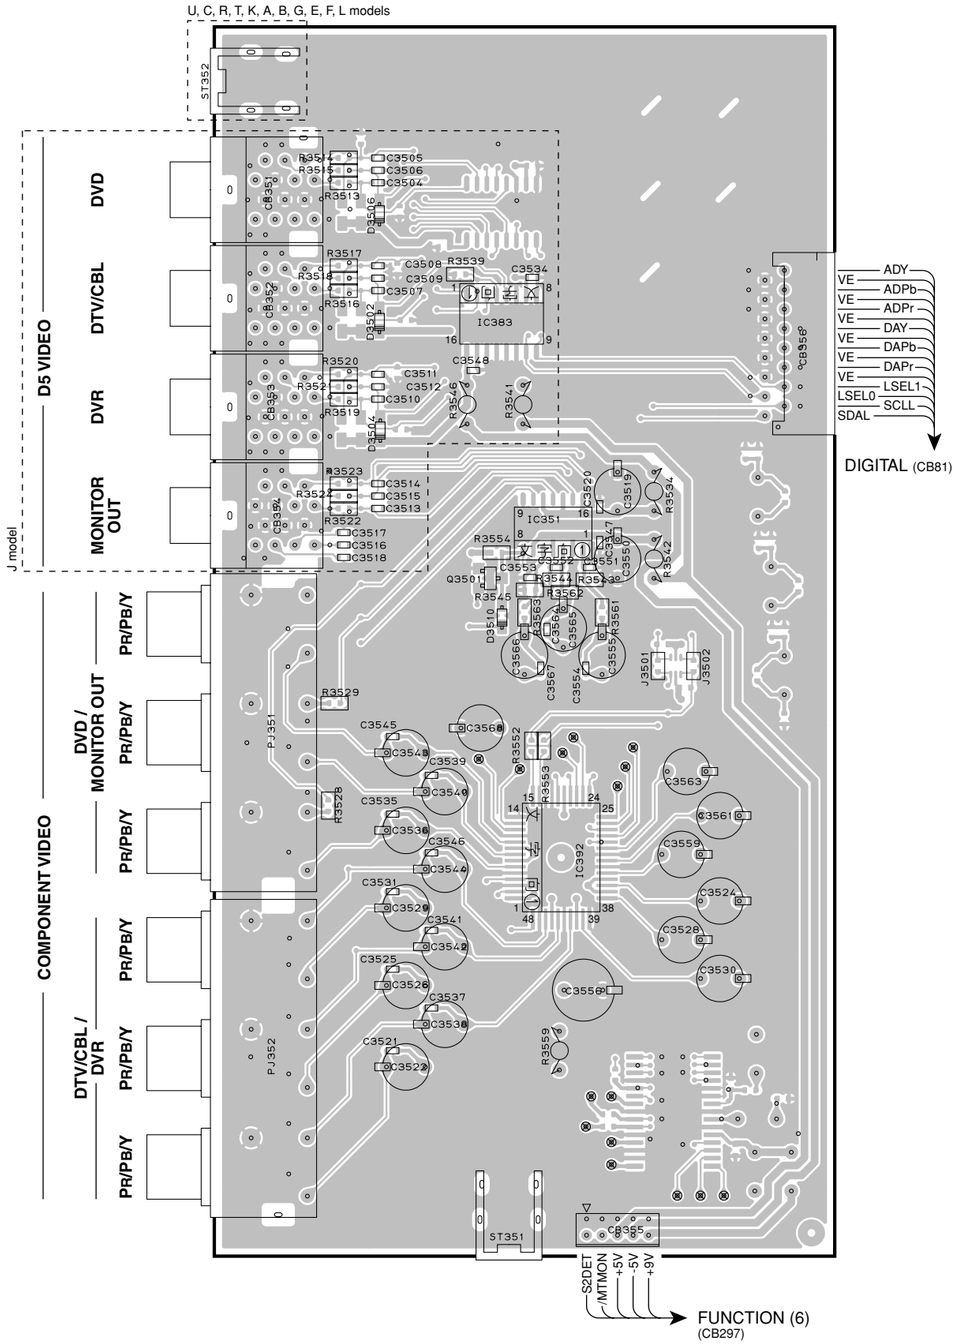

VIDEO (2) P.C.B. (Side B)

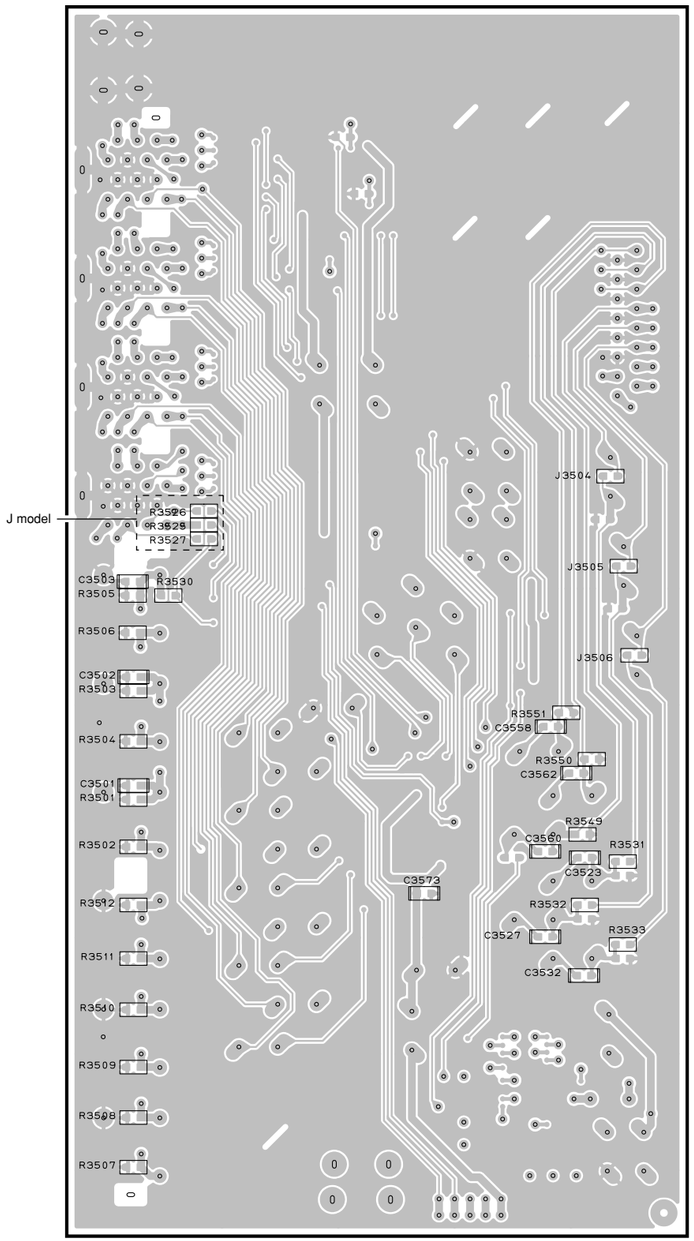

- **Semiconductor Location**

Ref no.	Location
D3502	C3
D3504	C3
D3506	C2
D3510	C4
IC351	C4
IC383	C3
IC392	C5
Q3501	C4

MEMO

MEMO

■ SCHEMATIC DIAGRAMS
DIGITAL 1/5

HDMI

OUT

HDMI OUT
SMK

DTV/CBL (U, C, R, T, K, A, B, G, E, F, L models)
DVR (J model)

HDMI IN-3
SMK

V663 only

HDMI IN-2
SMK

DVD

HDMI IN-1
SMK

Differential Impedance: 105 ohm

Destination Part List			DSP-AX763	RX-V663/HTR-6160	RX-V663			DSP-AX763	RX-V663/HTR-6160	RX-V663
★xx	LOC	J	J	A	A	B	REF	A	B	A
★100	CB14	W01426 (CPWH-0376-4)(LF)	x	x	x	x	x	x	x	x
★101	IC24	V6570C0 MN103SFD7G46B	x	x	x	x	x	x	x	x
★102	XL12	W60270 27.000MHz	x	x	x	x	x	x	x	x
★103	Q108 Q109	V30BC5 DTC144EKA	x	x	x	x	x	x	x	x
★104	Q102	V73S00 DTC144EKA	x	x	x	x	x	x	x	x
★105	Q103	V37S00 RB521CM-40	x	x	x	x	x	x	x	x
★106	L106	V24499 BLM21PG600SN1D	x	x	x	x	x	x	x	x
★107	Q211	UP0371G DTA	x	x	x	x	x	x	x	x
★108	Q210 Q212	UN1041 DTA	x	x	x	x	x	x	x	x
★109	C214-222,232 -239,245,246	UCJ1H101 0.5736	x	x	x	x	x	x	x	x
★110	C216 C217	UCH1A102 MCH	x	x	x	x	x	x	x	x
★111	★L23,124,131	RD3R000 0	x	x	x	x	x	x	x	x
★112	R215-223,232 -239,245,246 -250,252,254 -257	RD3R422 4.22K	x	x	x	x	x	x	x	x
★113	R220-222,223 -225,227,228	RD3R047 47K	x	x	x	x	x	x	x	x
★114	★R217-219,226 -230-243 -247-249 -251-255 -258	RD3R747 47K	x	x	x	x	x	x	x	x
★115	R224	RF4R237 237K	x	x	x	x	x	x	x	x
★116	RD01	RF4R00K 0ohm	x	x	x	x	x	x	x	x

CAPACITOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
⊛	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
⊛	CERAMIC TUBULAR CAPACITOR
Ⓜ	POLYESTER FILM CAPACITOR
Ⓒ	POLYPROPYLENE FILM CAPACITOR
Ⓢ	MICA CAPACITOR
Ⓟ	POLYPROPYLENE FILM CAPACITOR
●	SEMICONDUCTIVE CERAMIC CAPACITOR
⊕	POLYPHENYLENE SULFIDE FILM CAPACITOR

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (5%)
Ⓜ	METAL OXIDE FILM RESISTOR (5%)
Ⓐ	METAL FILM RESISTOR
Ⓜ	METAL PLATE RESISTOR
◪	FINE PROOF CARBON FILM RESISTOR
Ⓒ	CEMENT MOLDED RESISTOR
⊛	NON-INFLAMMABLE RESISTOR
■	CHIP RESISTOR

NOTICE (model)
(J)----- JAPAN
(U)----- U.S.A
(C)----- CANADA
(R)----- GENERAL
(T)----- CHINA
(K)----- KOREA
(A)----- AUSTRALIA
(B)----- BRITISH
(G)----- SINGAPORE
(E)----- SOUTH EUROPE
(V)----- TAIWAN
(F)----- RUSSIAN

(J model)
J dest. only
HDMI CEC

CEC MICROPROCESSOR
YSP共通
V697G00
IC24
MN103SFD7G46
0.8mA@1ch 72FP

(Writing port)

IC16
SII9185ACTU
3.3V-50mA
1.8V-275mA
HDMI SWITCHER

I2CSEL/INT
High-I2C mode
Low-Standard mode

I2C Address
LOW High
Local D0 D4
EDID E0 E4
CEC C0 C4

HDMI TRANSMITTER
IC10
SIL9134CTU
HDMI Transmitter
3.3V-5mA
1.8V-276mA

SELECTOR

HDMI DUAL RECEIVER
IC17
SII9135CTU
HDMI Dual Receiver
3.3V-316mA
1.8V-472mA

BUFFER

D0-35, DE, VSYNC, HSYNC, IDCK

No replacement part available.
サービス部品供給なし

TC74VHC157FT
Vcc: 2.0 ~ 5.5V
VIH: 0.7*Vcc
VIL: 0.3*Vcc

/ST	SEL	I*O
L	L	Y*A
L	H	Y*B
H	X	HiZ

to DIGITAL 5S
To 005.sht
(DVIDEO)


to DIGITAL 2S
To 002.sht
(u-com)

to DIGITAL 5S
To 005.sht
(DVIDEO)


to DIGITAL 3S
To 003.sht
(DSP)

to DIGITAL 5/S
005.sht
to DVIDEO


IC10: SiI9134CTU
HDMI transmitter

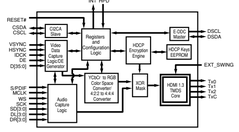


IC13: SN74LVC245APWR
Octal bus transceivers with 3-state outputs

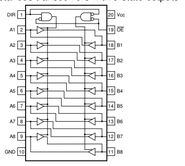


IC16: SiI9185ACTU
HDMI switch

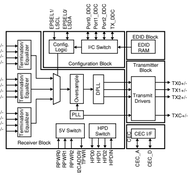

IC17: SiI9135CTU
HDMI receiver

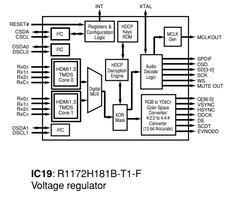


IC19: R1172H181B-T1-F
Voltage regulator

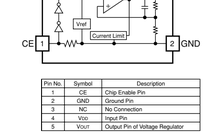


Pin No.	Symbol	Description
1	CE	Chip Enable Pin
2	GND	Ground Pin
3	NC	No Connection
4	VDD	Input Pin
5	VOUT	Output Pin of Voltage Regulator

IC20: R1232D181A-TR-F
DC-DC converter

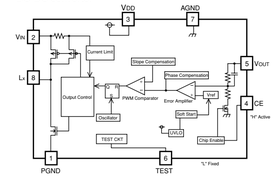


IC21: R1172H331D-T1-F
Voltage regulator

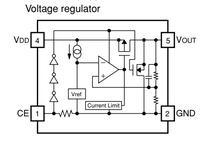


Pin No.	Symbol	Description
1	CE	Chip Enable Pin
2	GND	Ground Pin
3	NC	No Connection
4	VDD	Input Pin
5	VOUT	Output Pin of Voltage Regulator


IC11: NJM2867F3-05
Low dropout voltage regulator




IC12: TC74VHC157FT
Quad 2-channel multiplexer




IC24: MN103SFD7G
Microprocessor

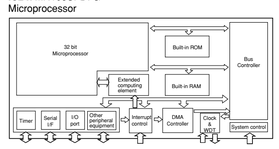

POINT (A-1) XL10 (Pin 95 of IC17)

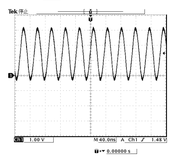

POINT (A-2) XL12 (Pin 83 of IC24)

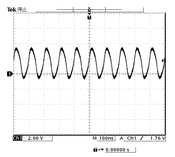

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ！ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ！印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

DIGITAL 2/5

Page 112 G9
to OPERATION (1)_CB401

Page 113 H4
to MAIN (1)_W103

Page 113 H4
to MAIN (1)_W104

Page 111 B7
to FUNCTION (3)_W2501

Page 113 K10
to MAIN (2)_W113
(J model)

Page 110 B8
to FUNCTION (1)_CB206

to OPE(1) | to MAIN(1) | to MAIN(1) | to FUNC(3) | to MAIN(2) | to FUNC(1) | to FUNC(1)

no_use

to NET module

MICROPROCESSOR

IC30

s2

Blank
X6328A0 M30878FJBGP

Written by YEM
J : X9768A0
Other : X9624A0

Power ON
H•DSP Power ON

Standby through
L•DSP Power OFF

Sleep
L•DSP Power OFF

HTR-6160

RX-V663/DSP-AX763

MODEL / DESTINATION

RX-V663 / DSP-AX763 / HTR-6160

MODEL / DESTINATION

RX-V663 / DSP-AX763 / HTR-6160

RX-V663 / HTR-6160

DSP-AX763

RX-V663

MODEL / DESTINATION

RX-V663 / DSP-AX763 / HTR-6160

RX-V663 / DSP-AX763

RX-V663

HTR-6160

DSP-AX763

RX-V663

RX-V663

HTR-6160

DIGITAL 3/5

Page 112 H2
to OPERATION (4)_W442

to OPE(4)

to DIGITAL 2/5
to 002.sht(u-com)

s1 ~19:002.sht(u-com)
*s20~80:004.sht(DSP)
s81~99:005.sht(DVIDEO)

Destination Part List

		DSP-AX763	RX-V663/HTR-6160	RX-V663				DSP-AX763	RX-V663/HTR-6160	RX-V663
&Xx	CGC	J	K	L	M	N	P	Q	R	S
s20	C841	X	X	X	X	X	X	X	X	X
			CAM-D960044024B							
s21	ST41	X	WJ56810	X	X	X	X	X	X	X
			0							
s22	D402 D401 D403	X	WE67480 AVRL161A1R1NTB	X	X	X	X	X	X	X
s23	J403 J402	X	RD35000 0	X	X	X	X	X	X	X
s24	C417 C418 C423	X	USD3510 0.1/16	X	X	X	X	X	X	X
s25	R424 R423 R417 R438 R448 R447	X	RD35610 100	X	X	X	X	X	X	X
s26	R425 R426	X	RD35610 1K	X	X	X	X	X	X	X
s27	R418	X	RD35633 3.3K	X	X	X	X	X	X	X
s28	XL41	X	WH45530 45.158MHZ	X	X	X	X	X	X	X
s29	C420 C416	X	USD6110 10P(CH)	X	X	X	X	X	X	X
s30	R429 R428	X	RD35647 4.7K	X	X	X	X	X	X	X
s31	C424 C448 C447 C437 C441	X	USD3510 0.1/16	X	X	X	X	X	X	X
s32	IC42	X	X8192A0 F2621E-01-TR	X	X	X	X	X	X	X
s33	R453	X	RD35447 47	X	X	X	X	X	X	X
s34	R466 R455 R459 R467 R458 R454	X	RD35722 22K	X	X	X	X	X	X	X
s35	L404 L409	X	V24490 BLM21PG600SN1D	X	X	X	X	X	X	X
s36	R500 R504 R502	RD35810 100K	X	RD35810 100K	RD35810 100K	RD35810 100K	RD35810 100K	RD35810 100K	RD35810 100K	RD35810 100K
s37	JK41	X	VV26950 MD-S8130-90	X	X	X	X	X	X	X
s38	C421 C411 C427 C412 C430 C431 C425	X	USD6222 220P(SL)	X	X	X	X	X	X	X
s39	C422	X	USD6310 100P(B)	X	X	X	X	X	X	X
s40	R403	X	RD35410 10	X	X	X	X	X	X	X
s41	R449 R446 R488 R404	X	RD35810 100K	X	X	X	X	X	X	X
s42	Q403	X	VV69520 DTA143EKA	X	X	X	X	X	X	X
s43	R402 R401	X	RD35433 33	X	X	X	X	X	X	X
s44	R445 R444	X	RD35510 100	X	X	X	X	X	X	X
s45	R435 R427	X	RD35647 470	X	X	X	X	X	X	X
s46	R436 R437	X	RD35847 470K	X	X	X	X	X	X	X
s47	IC57	X	X7378A0 NJM4565M	X	X	X	X	X	X	X
s48	C439 C457	X	URB3710 10/16	X	X	X	X	X	X	X
s49	C506 C503	X	USI3510 0.1/16	X	X	X	X	X	X	X
s50	U41	WN33330 JST1165	X	WN33330 JST1165	WN33330 JST1165	WN33330 JST1165	WN33330 JST1165	WN33330 JST1165	WN33330 JST1165	WN33330 JST1165
s51	U42	WN33320 JSR1165	X	WN33320 JSR1165	WN33320 JSR1165	WN33320 JSR1165	WN33320 JSR1165	WN33320 JSR1165	WN33320 JSR1165	WN33320 JSR1165
s52	C403 C404	USI3510 0.1/16	X	USI3510 0.1/16	USI3510 0.1/16	USI3510 0.1/16	USI3510 0.1/16	USI3510 0.1/16	USI3510 0.1/16	USI3510 0.1/16
s53	R407 R440	RD35510 100	X	RD35510 100	RD35510 100	RD35510 100	RD35510 100	RD35510 100	RD35510 100	RD35510 100
s54	L405	V272650 68UH	X	V272650 68UH	V272650 68UH	V272650 68UH	V272650 68UH	V272650 68UH	V272650 68UH	V272650 68UH

CAPACITOR


REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
☑	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
◇	METAL FILM RESISTOR
⊗	METAL PLATE RESISTOR
■	FIRE PROF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
▽	SEMI VARIABLE RESISTOR
●	CHIP RESISTOR

RESISTOR


REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
‖	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
❀	CERAMIC TUBULAR CAPACITOR
◎	POLYESTER FILM CAPACITOR
○	POLYSTYRENE FILM CAPACITOR
①	MICA CAPACITOR
②	POLYPROPYLENE FILM CAPACITOR
●	SEMICONDUCTIVE CERAMIC CAPACITOR
⑩	POLYPHENYLENE SULFIDE FILM CAPACITOR

NOTICE (Model)
(J)···· JAPAN
(U)···· U.S.A
(C)···· CANADA
(R)···· GENERAL
(T)···· CHINA
(K)···· KOREA
(A)···· AUSTRALIA
(B)···· BRITISH
(G)···· EUROPE
(L)···· SINGAPORE
(E)···· SOUTH EUROPE
(V)···· TAIWAN
(F)···· RUSSIAN

IC41: LC89057W-VF4AD-E
Digital audio interface transceiver

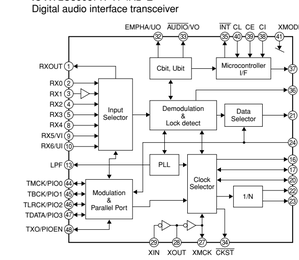


IC47: R1172S121D-E2-F
Voltage regulator




Pin No.	Symbol	Description
1	VOUT	Output Pin of Voltage Regulator
2, 5	GND	Ground Pin
3	CE	Chip Enable Pin
4	NC	No Connection
6	VDD	Input Pin

IC48: R1172H331D-T1-F
Voltage regulator




Pin No.	Symbol	Description
1	CE	Chip Enable Pin
2	GND	Ground Pin
3	NC	No Connection
4	VDD	Input Pin
5	VOUT	Output Pin of Voltage Regulator


IC50: TC74VHC541FT
Octal bus buffer

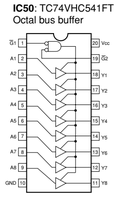


IC52: TC74VHCU04FT
Hex inverters




IC54: TC74VHCT541AFT
Octal bus buffer

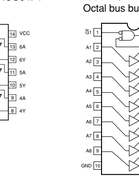


IC55: TC74VHC157FT
Quad 2-channel multiplexer

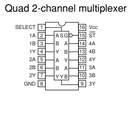


IC56: TC74VHC08FT
Quad 2-input AND gate

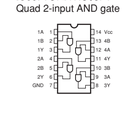


IC57: NJM4565M
Dual operational amplifier

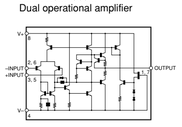

POINT (B-1) XL41 (Pin 28 of IC42)

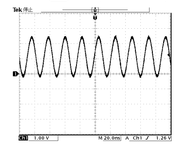


POINT (B-2) XL42 (Pin 29 of IC41)

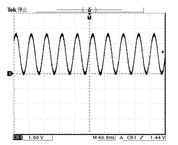

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

DIGITAL 4/5

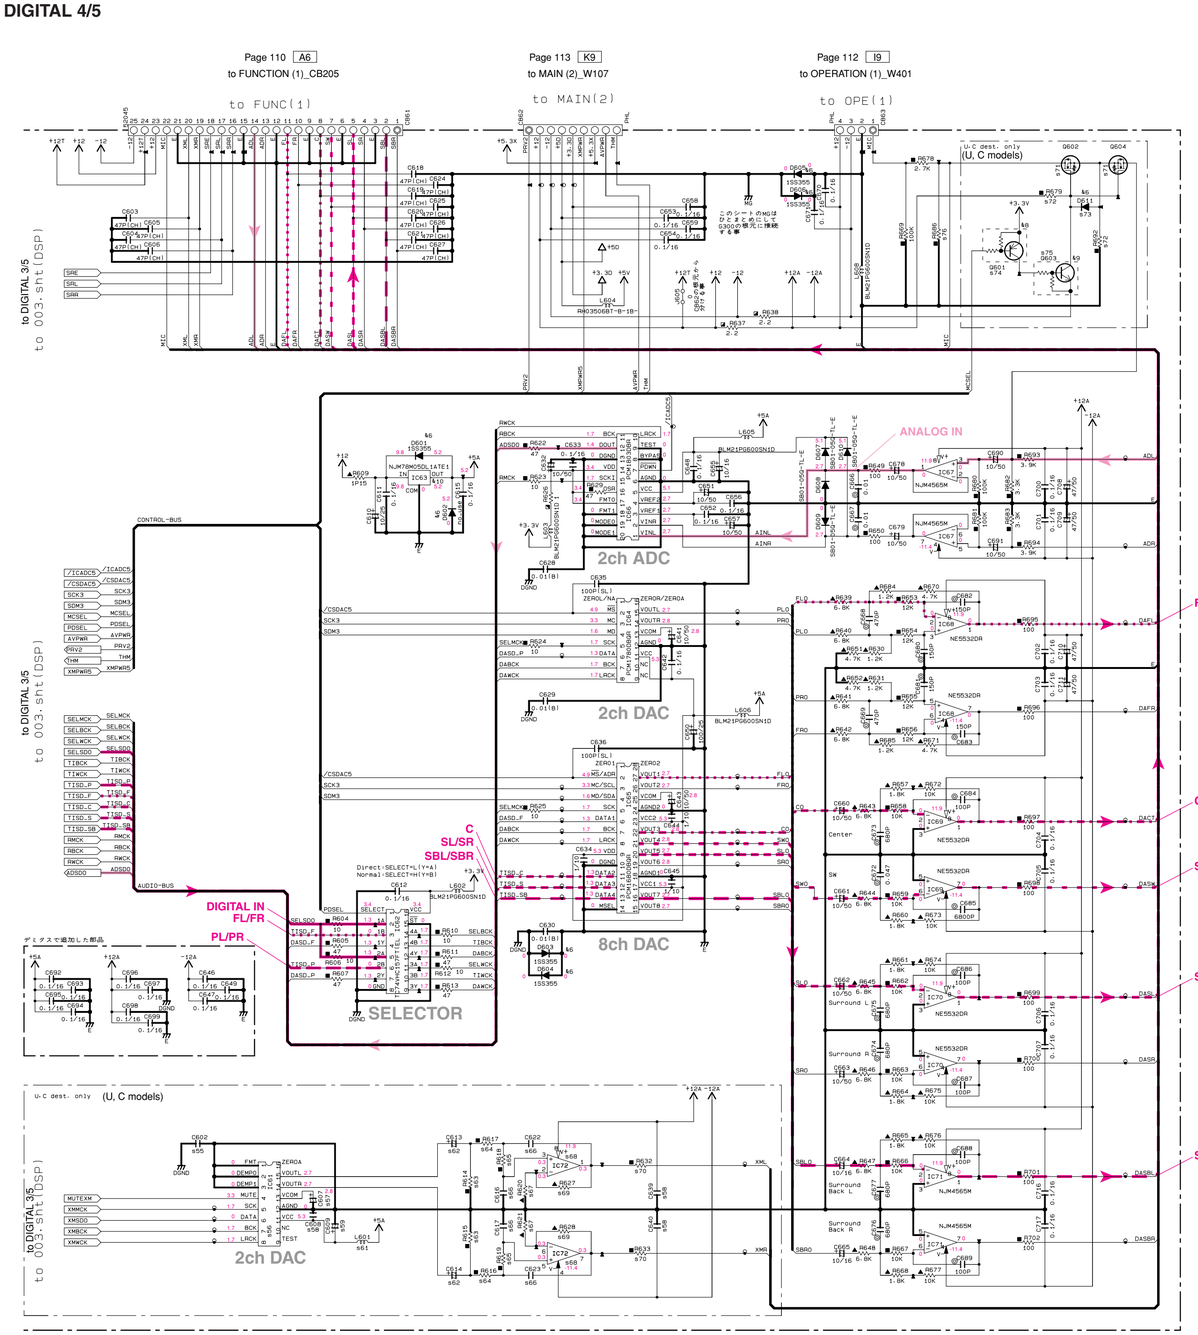

Interchangeable Parts at Manufacture-Stage

Mark	Reference Parts Number	Parts Name
k1	U41	JST1165 GP1FAV51TK0F
k2	U42~44	JSR1165 GP1FAV51RK0F
k3		
k4	IC49	M12L6416A-5TG K4S641632K-UC60000
k5	Q402	2SC3326(A/B) 2SC3326(B) 2SC5938A[A/B] 2SD2704K[K] 2SD1938[F]ST KTC2875-B
k6	D112~150,152~154,156~162 300~307,309~310,312~314 316~409,411~601 603~605,611~800~806 809~811,814~820	1SS355 MA2J1110SL KDS160-RTK/P
k7	Q401	DTC114EKA KRC102S-RTK/P
k8	Q601	DTA114EKA KRA102S-RTK/P
k9	Q603	DTC124EKA KRC103S-RTK/P
k10	IC63	NJM78M05DL1ATE1 KIA78M05F
k11		
k12		
k13		
k14		
k15	G108~111,301	DTC144EKA KRC104S-RTK/P
k16		
k17	G304	DTA144EKA KRA104S-RTK/P
k18	D401~403	AVRL161A1R1NTB SDV160BH100C050YPT
k19		

s1 ~19:002.sht(u-com)
*s20~80:004.sht(DSP)
s81~99:005.sht(DVIDEO)

Destination Part List

sXx	LOC	DSP-AX763	RX-V663/HTR-6160	RX-V663				DSP-AX763	RX-V663/HTR-6160	RX-V663	HTR-6160
		J	UC	R	T	K	A	B	GEF	L	C
s55	C602	X	US06410 0.01[B]	X	X	X	X	X	X	X	X
s56	IC61	X	X737SA0 PCM1781DBQR	X	X	X	X	X	X	X	X
s57	C607	X	UR23710 10/16	X	X	X	X	X	X	X	X
s58	C640 C608 C639	X	US13510 0.1/16	X	X	X	X	X	X	X	X
s59	C609	X	UR21810 100/6.3	X	X	X	X	X	X	X	X
s61	L601	X	V244990 BLM21PG600SN1D	X	X	X	X	X	X	X	X
s62	C613 C614	X	UR83747 47/16	X	X	X	X	X	X	X	X
s63	R615 R614	X	RD35710 10K	X	X	X	X	X	X	X	X
s64	R617 R616	X	RD35639 3.9K	X	X	X	X	X	X	X	X
s65	R618 R619	X	RD35627 2.7K	X	X	X	X	X	X	X	X
s66	C622 C623 C616 C617	X	US16310 1000P	X	X	X	X	X	X	X	X
s67	R620 R621	X	RF35633 3.3K	X	X	X	X	X	X	X	X
s68	IC72	X	X737SA0 NJM4565M	X	X	X	X	X	X	X	X
s69	R627 R628	X	RF35615 1.5K	X	X	X	X	X	X	X	X
s70	R633 R632	X	RD35610 1K	X	X	X	X	X	X	X	X
s71	Q604 Q602	X	WN16410 5HN01C-TB-E	X	X	X	X	X	X	X	WN16410 5HN01C-TB-E
s72	R692 R679	X	RD35810 100K	X	X	X	X	X	X	X	RD35810 100K
s73	D611	X	VT33290 1SS355	X	X	X	X	X	X	X	VT33290 1SS355
s74	Q601	X	VV65500 DTA114EKA	X	X	X	X	X	X	X	VV65500 DTA114EKA
s75	Q603	X	VV65550 DTC124EKA	X	X	X	X	X	X	X	VV65550 DTC124EKA
s76	R686	RD35747 47K	X	RD35747 47K	RD35747 47K	RD35747 47K	RD35747 47K	RD35747 47K	RD35747 47K	RD35747 47K	X

CAPACITOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
⊗	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
◉	CERAMIC TUBULAR CAPACITOR
Ⓜ	POLYESTER FILM CAPACITOR
Ⓢ	POLYSTYRENE FILM CAPACITOR
Ⓘ	MICA CAPACITOR
Ⓟ	POLYPROPYLENE FILM CAPACITOR
◉	SEMICONDUCTIVE CERAMIC CAPACITOR
Ⓖ	POLYPHENYLENE SULFIDE FILM CAPACITOR


RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
◰	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
▦	CHIP RESISTOR


NOTICE (model)
(U)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

IC BLOCK DIAGRAMS DIGITAL 3/5


IC44: D70YE101BRFP266
Floating-point digital signal processors

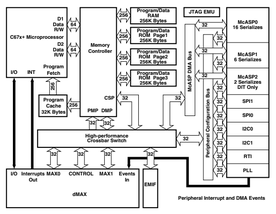


IC45, 46: TC74VHC153FT
Dual 4-channel multiplexer



IC49: M12L64164A-5TG
1M x 16-bit x 4 banks synchronous DRAM

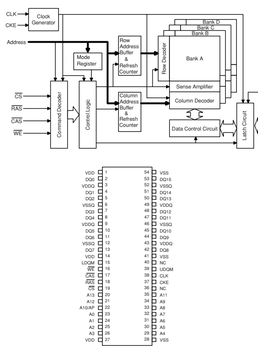

IC51: EN29LV160AB-70TCP
16 M-bit flash memory boot sector flash memory, CMOS 3.0 V-only

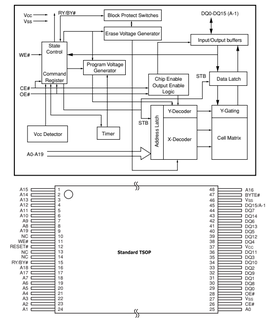

IC61: PCM1781DBQR
Audio digital-to-analog converter

(1) Open-drain output for the PCM1792
NOTE: Signal names in parenthesis ( ) are for the PCM1781.

IC62: TC74VHC157FT
Quad 2-channel multiplexer

IC63: NJM78M05DL1A
Voltage regulator

IC64: PCM1780DBQR
Audio digital-to-analog converter

(1) Open-drain output for the PCM1792
NOTE: Signal names in parenthesis ( ) are for the PCM1781.

IC66: PCM1803DBR
Stereo A/D converter

IC65 : PCM1680DBQR
Audio digital-to-analog converter

IC67, 71, 72: NJM4565M
Dual operational amplifier

IC68-70: NE5532DR
Dual low-noise operational amplifiers

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.


● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

DIGITAL 5/5

Page 114 K6
to VIDEO (1)_CB305


Page 115 I9
to VIDEO (2)_CB356

Page 113 K8
to MAIN (2)_W109

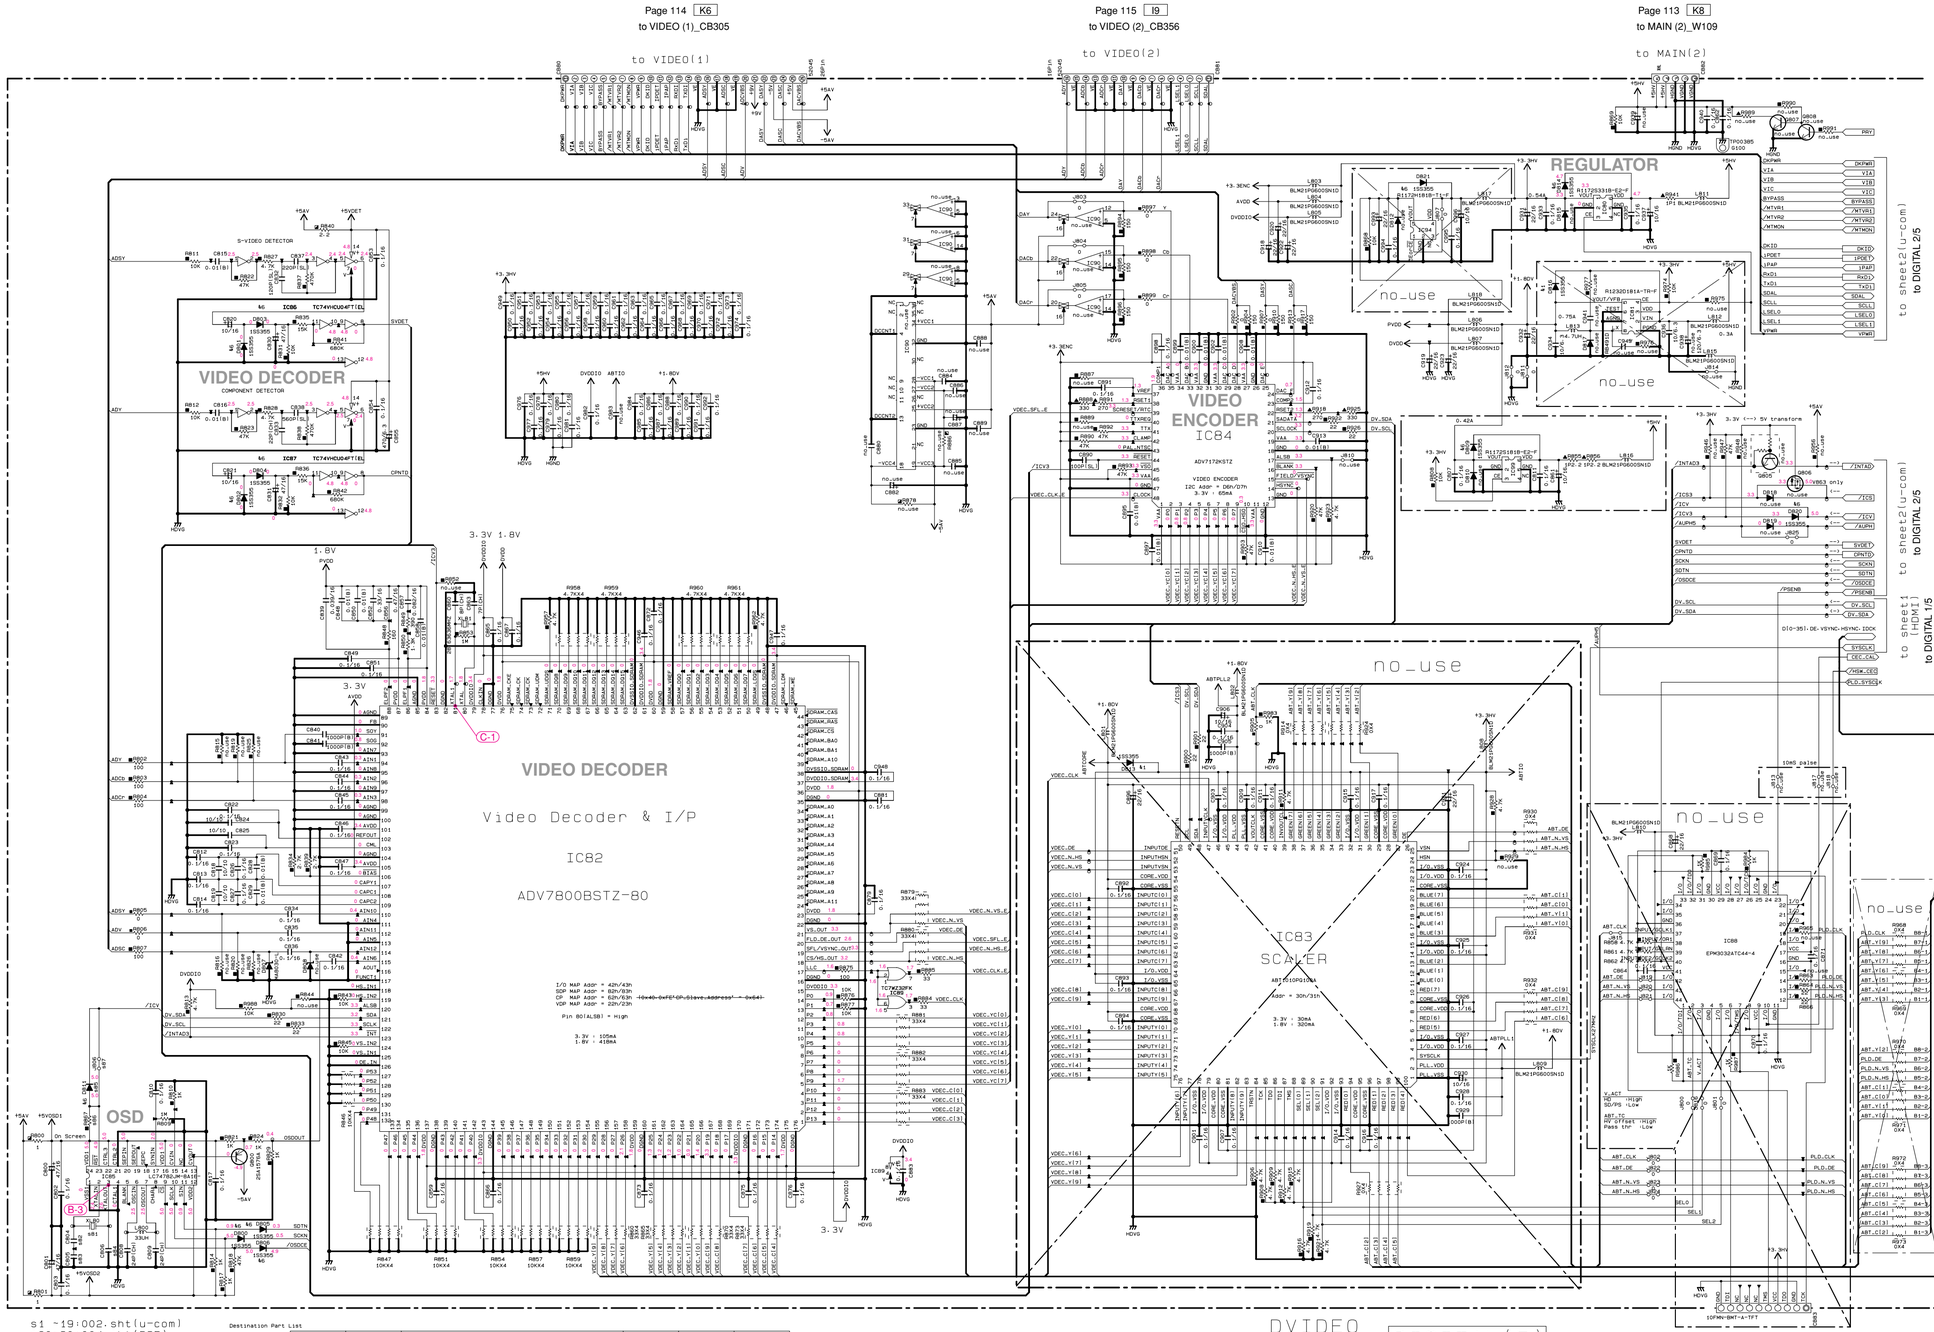


to sheet2(u-com)
to DIGITAL 2/5
to sheet2(u-com)
to DIGITAL 2/5
to sheet
to DIGITAL 1/5

IC85: LC74782JM-8A16-TLMC
The on-screen display controller LSI

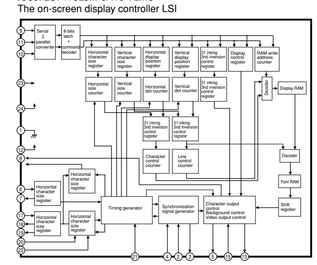


IC80: R1172S331B-E2-F
CMOS-based positive-voltage regulator IC

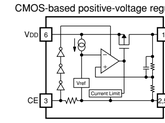

Pin No.	Symbol	Description
1	VOUT	Output Pin of Voltage Regulator
2,5	GND	Ground Pin
3	CE	Chip Enable Pin
4	NC	No Connection
6	VDD	Input Pin

IC99: R1172S181B-E2-F
Voltage regulator

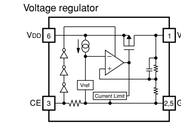

Pin No.	Symbol	Description
1	VOUT	Output Pin of Voltage Regulator
2,5	GND	Ground Pin
3	CE	Chip Enable Pin
4	NC	No Connection
6	VDD	Input Pin

CAPACITOR


REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
◇	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
❀	CERAMIC TUBULAR CAPACITOR
◎	POLYESTER FILM CAPACITOR
○	POLYSTYRENE FILM CAPACITOR
ⓜ	MICA CAPACITOR
◴	POLYPROPYLENE FILM CAPACITOR
◉	SEMICONDUCTIVE CERAMIC CAPACITOR
Ⓛ	POLYPHENYLENE SULFIDE FILM CAPACITOR

RESISTOR


REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
◇	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
◎	METAL FILM RESISTOR
◎	METAL PLATE RESISTOR
◁	FIRE PROOF CARBON FILM RESISTOR
ⓒ	CEMENT MOLDED RESISTOR
◴	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

NOTICE (model)
(J)..... JAPAN
(U)..... U.S.A
(C)..... CANADA
(R)..... GENERAL
(T)..... CHINA
(K)..... KOREA
(A)..... AUSTRALIA
(B)..... BRITISH
(G)..... EUROPE
(L)..... SINGAPORE
(E)..... SOUTH EUROPE
(V)..... TAIWAN
(F)..... RUSSIAN

POINT (B-3) XL80 (Pin 3 of IC85)

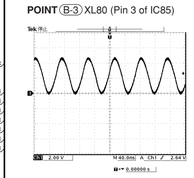

POINT (C-1) XL81 (Pin 81 of IC82)

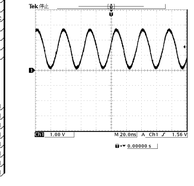


s1 ~19:002.sht(u-com)
s20~80:004.sht(DSP)
*s81~99:005.sht(DVIDEO)


Destination Part List

sXx	LOC	DSP-AX763	RX-V663/HTR-6160	RX-V663				DSP-AX763	RX-V663/HTR-6160	RX-V663
		J	UC	R	T	K	A	B	GEF	L
s01	XL80	#C20G80 14.31818MZ	#C20G80 14.31818MZ	#C20G80 14.31818MZ	#C20G90 17.73449MZ	#C20G80 14.31818MZ	#C20G90 17.73449MZ	#C20G90 17.73449MZ	#C20G90 17.73449MZ	#C20G90 17.73449MZ
s02	CB04	US0G080 8P(CH)	US0G080 8P(CH)	US0G080 8P(CH)	US0G630 3P(CH)	US0G080 8P(CH)	US0G630 3P(CH)	US0G630 3P(CH)	US0G630 3P(CH)	US0G630 3P(CH)
s03	CB05	US0G110 10P(CH)	US0G110 10P(CH)	US0G110 10P(CH)	US0G640 4P(CH)	US0G110 10P(CH)	US0G640 4P(CH)	US0G640 4P(CH)	US0G640 4P(CH)	US0G640 4P(CH)
s04	CB06	US0G050 5P(CH)	US0G050 5P(CH)	US0G050 5P(CH)	US0G630 3P(CH)	US0G050 5P(CH)	US0G630 3P(CH)	US0G630 3P(CH)	US0G630 3P(CH)	US0G630 3P(CH)
s05	DB11	V13G290 15S355	x	x	x	x	x	x	x	x
s06	RB67	RD35747 47k	x	x	x	x	x	x	x	x
s07	JB06	x	RD35000 0	RD35000 0	RD35000 0	RD35000 0	RD35000 0	RD35000 0	RD35000 0	RD35000 0


IC84: ADV7172KSTZ
Digital PAL/NTSC video encoder

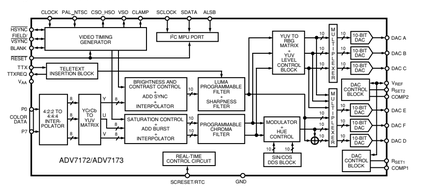


IC86, 87: TC74VHCU04FT
Hex inverters

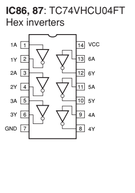


IC89: TC7WZ32FK (TE85L, F)
Dual 2-input OR gate



IC91-93: SN74LVC245APWR
Octal bus transceivers with 3-state outputs

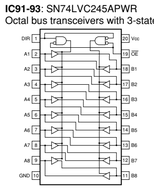

IC82: ADV7800BSTZ-80
10-bit, SDTV/HDTV 3D comb filter, video decoder and graphics digitizer

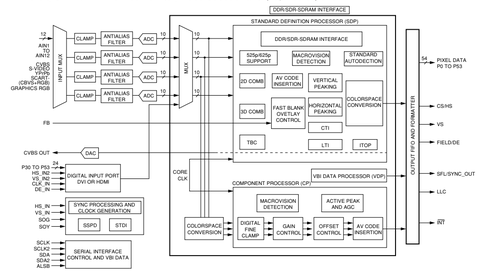

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

FUNCTION 1/2

(R, T, K, A, B, G, E, F, L, J models)

AUDIO — MULTI CH INPUT — PRE OUT

PHONO · CD · MD/CD-R · DVD · D-TV · DVR · VCR · Xch IN · ZONE 2 OUT

ANALOG IN

INPUT & ZONE2
8ch SELECTOR/
MASTER VOLUME

IC202
R2A15218FP

RDS IC

[Tuner]

[RDS]

2401~2500

SUB WOOFER

2251~2300

2301~2400

2001~2200

FRONT L

CENTER

SURROUND L

SURROUND BACK L

FL

FR

CT

SL

SR

SBL

SBR

SW1

SW2

MUTE

HP_R

HP_L

HP

SW

SL

SBL

C

Page 112 N4
to OPERATION (4)_W441

Page 114 H2
to VIDEO (1)_CB302

Page 108 B2
to DIGITAL_CB61

Page 106 I2
to DIGITAL_CB34

Page 111 B3
to FUNCTION (9)_CB247

Page 112 J9
to OPERATION (1)_W402

Page 113 B10
to MAIN (1)_W106

Page 113 B4
to MAIN (1)_W105


Page 111 E4
to FUNCTION (5)_W2505
(B model)

to TUNER
(U, C, R, T, K, A, G, E, F, L, J models)


FUNCTION (1)

FUNC(1)


IC202: R2A15218FP
8-channel electronic volume with 11 input selector and tone control

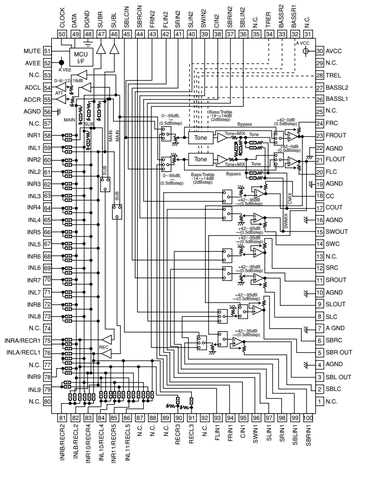


IC201: NJM2068MD-TE2
Dual operational amplifier

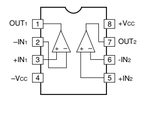


IC225-227: NJM4565M
Dual operational amplifier

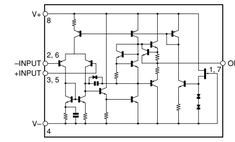

IC203: BD3841FS
Function switch

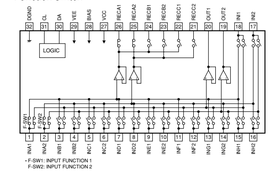

IC241: LC72725KM-UY-TLM-E
RDS signal demodulation IC

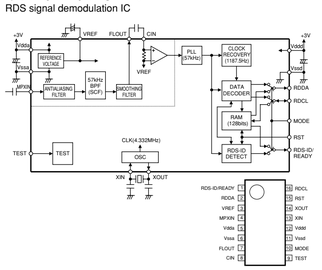

CAPACITOR	
REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
⊕	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
◎	POLYESTER FILM CAPACITOR
○	POLYESTER FILM CAPACITOR
○	MICA CAPACITOR
●	POLYPROPYLENE FILM CAPACITOR
●	POLYPROPYLENE FILM CAPACITOR
●	POLYPHENYLENE SULFIDE FILM CAPACITOR

RESISTOR	
REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (1PCS)
⊕	CARBON FILM RESISTOR (5PCS)
Ⓐ	METAL FILM RESISTOR
Ⓑ	METAL OXIDE FILM RESISTOR
Ⓒ	METAL PLATE RESISTOR
Ⓓ	FINE PROOF CARBON FILM RESISTOR
Ⓔ	CEMENT MOLDED RESISTOR
Ⓕ	SEMI VARIABLE RESISTOR
Ⓖ	CHIP RESISTOR

NOTICE (model)
(J) ▷▷▷▷ JAPAN
(U) ▷▷▷▷ U.S.A
(C) ▷▷▷▷ CANADA
(R) ▷▷▷▷ GENERAL
(T) ▷▷▷▷ CHINA
(K) ▷▷▷▷ KOREA
(A) ▷▷▷▷ AUSTRALIA
(B) ▷▷▷▷ BRAZILIAN
(G) ▷▷▷▷ EUROPE
(L) ▷▷▷▷ SINGAPORE
(E) ▷▷▷▷ SOUTH EUROPE
(F) ▷▷▷▷ TAIWAN
(F) ▷▷▷▷ RUSSIAN

Destination Part List

		DSP-AX663	RX-V663/HTR-6160	RX-V663			DSP-AX763	RX-V663/HTR-6160	RX-V663		HTR-6160
s××	LOC	J	U	R	C	T	A	B	GEF	L	K	C
s001	C2410	x	x	x	x	x	x	x	US1R510	x	x	x
	C2454								0.1/10			
	C2455											
s002	R2402	x	x	x	x	x	x	x	RC35651	x	x	x
									5.1K			
s005	R2401	x	x	x	x	x	x	x	RC35510	x	x	x
	R2403								510			
s006	IC241	x	x	x	x	x	x	x	XB035A0	x	x	x
									LC74725KM-UY-TL			
s007	XL241	x	x	x	x	x	x	x	V27310	x	x	x
									or 332KHZ			
s008	C2401	x	x	x	x	x	x	x	US06127	x	x	x
	C2403								270 (2H)			
s009	C2406	x	x	x	x	x	x	x	US06256	x	x	x
									560P (5L)			
s010	C2409	x	x	x	x	x	x	x	US06233	x	x	x
	C2408								330P (5L)			
s011	R2406	x	x	x	x	x	x	x	RC35720	x	x	x
									22K			
s012	R2407	x	x	x	x	x	x	x	RC35633	x	x	x
									3.3K			
s013	Q2401	x	x	x	x	x	x	x	IC17402	x	x	x
									(C17403/B/E)			
s014	R2408	x	x	x	x	x	x	x	RC35610	x	x	x
									100K			
s015	R2409	x	x	x	x	x	x	x	RC35733	x	x	x
									33K			
s020	C2402	x	x	x	x	x	x	x	UR23710	x	x	x
									33K			
s021	C2412	x	x	x	x	x	x	x	UR23747	x	x	x
	C2413								47/16			
s022	R2410	x	x	x	x	x	x	x	RC35647	x	x	x
									4.7K			
s023	R2411	x	x	x	x	x	x	x	RC35510	x	x	x
									100			
s024	Q2402	x	x	x	x	x	x	x	IC18151	x	x	x
									C1815(Y)			
s025	Q2401	x	x	x	x	x	x	x	US06300	x	x	x
									MA8050-M			
s026	CB242	x	VH92360	VH92360	VH92360	VH92360	VH92360	VH92360	VH92360	VH92360	VH92360	VH92360
			52045	52045	52045	52045	52045	52045	52045	52045	52045	52045
s027	R2414	x	RD35510	RD35510	RD35510	RD35510	RD35510	x	RD35510	RD35510	RD35510	RD35510
	R2415		100	100	100	100	100		100	100	100	100
s028	C2414	x	US06210	US06210	US06210	US06210	US06210	x	US06210	US06210	US06210	US06210
	C2415		150P(5L)	150P(5L)	150P(5L)	150P(5L)	150P(5L)		150P(5L)	150P(5L)	150P(5L)	150P(5L)
	C2419											
	C2417											
s029	C2416	x	US06310	US06310	US06310	US06310	US06310	x	US06310	US06310	US06310	US06310
			150P(8I)	150P(8I)	150P(8I)	150P(8I)	150P(8I)		150P(8I)	150P(8I)	150P(8I)	150P(8I)
s030	C2418	x	US06410	US06410	US06410	US06410	US06410	x	US06410	US06410	US06410	US06410
			0.01(B)	0.01(B)	0.01(B)	0.01(B)	0.01(B)		0.01(B)	0.01(B)	0.01(B)	0.01(B)
s032	Q2403	x	IC18151	IC18151	IC18151	IC18151	IC18151	x	IC18151	IC18151	IC18151	IC18151
			C1815(Y)	C1815(Y)	C1815(Y)	C1815(Y)	C1815(Y)		C1815(Y)	C1815(Y)	C1815(Y)	C1815(Y)
s033	R2417	x	RD35547	RD35547	RD35547	RD35547	RD35547	x	RD35547	RD35547	RD35547	RD35547
			470	470	470	470	470		470	470	470	470
s034	R2416	x	RD35510	RD35510	RD35510	RD35510	RD35510	x	RD35510	RD35510	RD35510	RD35510
			100	100	100	100	100		100	100	100	100
s035	C2421	x	UR23747	UR23747	UR23747	UR23747	UR23747	x	UR23747	UR23747	UR23747	UR23747
	C2411		47/16	47/16	47/16	47/16	47/16		47/16	47/16	47/16	47/16
	C2422											
s036	Q2402	x	VU99950	VU99950	VU99950	VU99950	VU99950	x	VU99950	VU99950	VU99950	VU99950
			MA8100-H	MA8100-H	MA8100-H	MA8100-H	MA8100-H		MA8100-H	MA8100-H	MA8100-H	MA8100-H
s037	CB243	x	x	x	x	x	x	x	VB39990	x	x	x
									PH2			
s038	PN202	x	WH51520	WH51520	WH51520	WH51520	WH51520	x	WH51520	WH51520	WH51520	WH51520
s040	PJ209	x	V704670	x	x	x	x	x	V704670	x	x	x
			MSP-24491-01N2						MSP-24491-01N2			
s241	PJ208	x	x	V704680	V704680	V704680	V704680	x	x	V704680	V704680	V704680
				MSP-24691-01N2	MSP-24691-01N2	MSP-24691-01N2	MSP-24691-01N2			MSP-24691-01N2	MSP-24691-01N2	MSP-24691-01N2
s242	C2013	x	x	UR83710	UR83710	UR83710	UR83710	x	UR83710	UR83710	UR83710	UR83710
	C2014			10/25	10/25	10/25	10/25		10/25	10/25	10/25	10/25
s243	R2061	x	RD35810	RD35810	RD35810	RD35810	RD35810	x	RD35810	RD35810	RD35810	RD35810
	R2053		100K	100K	100K	100K	100K		100K	100K	100K	100K
s244	R2057	x	RD35568	RD35568	RD35568	RD35568	RD35568	x	RD35568	RD35568	RD35568	RD35568
	R2058		680	680	680	680	680		680	680	680	680
s245	R2064	x	RD35710	RD35710	RD35710	RD35710	RD35710	x	RD35710	RD35710	RD35710	RD35710
	R2059		10K	10K	10K	10K	10K		10K	10K	10K	10K
	R2060											
s246	G2003	x	VZ72590	VZ72590	VZ72590	VZ72590	VZ72590	x	VZ72590	VZ72590	VZ72590	VZ72590
	G2001		D1938(F)	D1938(F)	D1938(F)	D1938(F)	D1938(F)		D1938(F)	D1938(F)	D1938(F)	D1938(F)
	G2002											
s247	R2067	x	RC35533	RC35533	RC35533	RC35533	RC35533	x	RC35533	RC35533	RC35533	RC35533
	R2056		330	330	330	330	330		330	330	330	330
s248	R2065	x	RC35522	RC35522	RC35522	RC35522	RC35522	x	RC35522	RC35522	RC35522	RC35522
	R2059		220	220	220	220	220		220	220	220	220
s249	C2072	x	US06147	US06147	US06147	US06147	US06147	x	US06147	US06147	US06147	US06147
	C2071		470(CH)	470(CH)	470(CH)	470(CH)	470(CH)		470(CH)	470(CH)	470(CH)	470(CH)
s255	C2042	x	x	x	x	x	UA65222	x	UA65222	UA65222	UA65222	UA65222
	C2048						220P		220P	220P	220P	220P
s256	R2004	x	RD35447	RD35447	RD35447	RD35447	RD35622	x	RD35622	RD35622	RD35622	RD35447
	R2015		47	47	47	47	2.2K		2.2K	2.2K	2.2K	47
s258	C2040	x	UR83710	x	x	x	x	x	x	x	x	UR83710
	C2034		10/16									10/16
s270	J2006	RC35000	0	x	RC35000	0	RC35000	x	RC35000	RC35000	RC35000	x
		0			0		0		0	0	0	
s280	C2024	x	UR26710	x	UR26710	UR26710	UR26710	x	UR26710	UR26710	UR26710	UR26710
	C2023		10/50		10/50	10/50	10/50		10/50	10/50	10/50	10/50
s288	C2330	WK54180	WK04180	WK23710	WK04180	WK23710	WK23710	WK04180	WK04180	WK23710	WK23710	WK54180
	C2331	10/16	10/16	10/16	10/16	10/16	10/16	10/16	10/16	10/16	10/16	10/16
	C2035											
	C2332											
	C2301											
	C2319											
	C2036											
	C2038											
	C2052											
	C2320											
	C2039											
s289	C2341	WE10020	WE10020	WG21170	WE10020	WG21170	WE10020	WE10020	WG21170	WG21170	WE10020	WE10020
	C2342	220/630	220/630		220/630		220/630	220/630			220/630	220/630
	C2343											
	C2309											
	C2311											
	C2312											
s290	IC203	x	x	x	x	x	x	x	x	x	x	x
s291	C2105	x	x	x	x	x	x	x	x	x	x	x
	C2106											
s295	PHONO	O	x	O	x	O	O	O	O	O	O	x
s296	J2024	x	RD35000	x	RD35000	x	x	x	x	x	x	RD35000
	J2025											


Interchangeable Parts at Manufacture-Stage


Mark	Reference Parts Number	Parts Name
¥1	D2504	K3B5016
		2SK3481-E
¥2		
¥3	D2512-2514	DB105
		S1NB60
¥4		
¥5	Q2201-2202	2SC3326(A/B)
		2SC3326(B)
	Q2001~2004-2007~2010	2SD1938(F)
	2251~2264-2507~2508	2SC5938A(A/B)
		2SD870(M)
¥6	Q2001~2004-2007~2010	2SD1938(F)
	2251~2264-2507~2508	2SC5938A(A/B)
¥7	D2301~2302-2501~2503	1S1955
	2504~2505~2508~2509	MA2J1100L
	2513~2515~2516	KDS160-RTK/P
¥8	D2501~2509~2510	DTC144EKA
		KRC104S-RTK/P
¥9	Q2006	2SA1015(Y)
		KTA1266 Y-AT
¥10	Q2401	2SC1740S(A/S)
		2SC3116A(A/S)
¥11	Q2005-2402-2403-2502	2SC1815(Y)
	2503	KTC3198 Y-AT
¥12	IC251-253	TLP421GR
		ELB1618

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ! and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ! 印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

FUNCTION 2/2

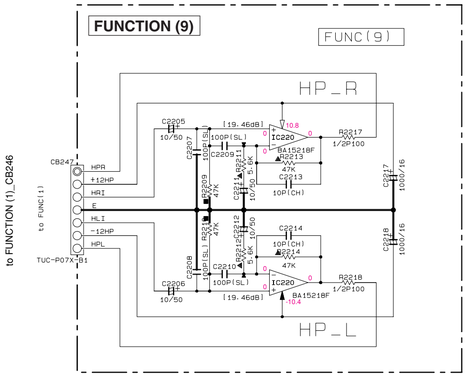

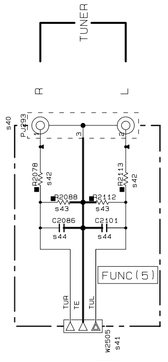

FUNCTION (5)
B model

CAPACITOR

REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	‖
⊗	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	‖
⦿	CERAMIC TUBULAR CAPACITOR	
◎	POLYESTER FILM CAPACITOR	
○	POLYSTYRENE FILM CAPACITOR	
Ⓘ	MICA CAPACITOR	
ⓟ	POLYPROPYLENE FILM CAPACITOR	
◉	SEMICONDUCTIVE CERAMIC CAPACITOR	

RESISTOR


REMARKS	PARTS NAME
◪	CARBON FILM RESISTOR (P=5)
◪	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR


NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

Destination Part List


sXX	LOC	J	U	R	C	T	A	B	GEF	L	K
s1	C2508	WJ36120 0.047/400	X	WJ36180 0.022/630	X	WJ36180 0.022/630	WJ36180 0.022/630	WJ36180 0.022/630	WJ36180 0.022/630	WJ36180 0.022/630	WJ36180 0.022/630
s2	C2512	WB69630 0.1/400	X	WD25760 0.047/800	X	WD25760 0.047/800	WD25760 0.047/800	WD25760 0.047/800	WD25760 0.047/800	WD25760 0.047/800	WD25760 0.047/800
s3	F2502	WG41080 10A125V	WG41080 10A125V	WG41080 10A125V	WG41080 10A125V	KB00078 T5AL250V	KB00078 T5AL250V	KB00078 T5AL250V	KB00078 T5AL250V	KB00078 T5AL250V	KB00078 T5AL250V
s4	TE255	WB78260 R-30190(26)	X	X	X	X	X	X	X	X	X
s5	W2502B W2502A	V941190 VH-ST	X	X	X	X	X	X	X	X	X
s6	J2502	VN50000 -	X	X	X	X	X	X	X	X	X
s7	CB254 CB255	X	WN10300 TP00351-31	WN10300 TP00351-31	WN10300 TP00351-31	WN10300 TP00351-31	WN10300 TP00351-31	WN10300 TP00351-31	WN10300 TP00351-31	WN10300 TP00351-31	X
s8	F2501	X	WG41080 10A125V	VT94290 T2.5AH250V	WG41080 10A125V	VT94290 T2.5AH250V	VT94290 T2.5AH250V	VT94290 T2.5AH250V	VT94290 T2.5AH250V	VT94290 T2.5AH250V	X
s9	TE251	VU54310 S2-764T-214	VU54310 S2-764T-214	V586740 -	VU54310 S2-764T-214	V586740 -	VT91500 -	VU54330 -	VU54340 -	VU54340 -	X
s10	T2501	XW605A0 XW605 -	XW606A0 -	X6351A0 -	XW606A0 XW605 -	XW608A0 -	XW608A0 -	XW608A0 -	XW608A0 -	XW608A0 -	XW608A0 -
s11	R2509	X	V673000 1/2P2.2M	X	V673000 1/2P2.2M	X	X	X	X	X	X
s12	C2514	UU24933 3300/25	UU24933 3300/25	WD04730 -	UU24933 3300/25	UU24933 3300/25	UU24933 3300/25	UU24933 3300/25	UU24933 3300/25	UU24933 3300/25	UU24933 3300/25
s13	J2601	X	X	X	X	X	X	X	X	VN50000 -	X
s14	SW261	X	X	WB49370 RB140246	X	X	X	X	X	WD07370 RB140254	X
s15	CB261	X	X	V937780 B3P5S-VH	X	X	X	X	X	V937780 B3P5S-VH	X
s16	CB262	X	X	V937790 B4P7S-VH	X	X	X	X	X	V937790 B4P7S-VH	X
s17	CB264 CB263	X	X	WN10300 TP00351-31	X	X	X	X	X	X	X
s18	W2601A W2601B	X	X	WG79700 VH-ST	X	X	X	X	X	WG79700 VH-ST	X
s19	F2601	X	X	KB00078 T5AL250V	X	X	X	X	X	X	X
s20	RY251	WJ44660 ALKT321_M01	WJ44660 ALKT321_M01	V936690 DLS9D1-01M10.25	WJ44660 ALKT321_M01	WJ44660 ALKT321_M01	WJ44660 ALKT321_M01	WJ44660 ALKT321_M01	WJ44660 ALKT321_M01	WJ44660 ALKT321_M01	WJ44660 ALKT321_M01
s21	J2503	X	VN50000 -	X	VN50000 -	X	X	X	X	X	X
s22	D2515 D2516	X	VT33290 1SS355	X	VT33290 1SS355	X	X	X	X	X	X
s23	Q2509	X	VV65570 DTC144EKA	X	VV65570 DTC144EKA	X	X	X	X	X	X
s24	IC253 IC251	V810050 TLP421GR	X	V810050 TLP421GR	X	V810050 TLP421GR	V810050 TLP421GR	V810050 TLP421GR	V810050 TLP421GR	V810050 TLP421GR	V810050 TLP421GR
s25	IC252	IG00118 TC4013BP	X	IG00118 TC4013BP	X	IG00118 TC4013BP	IG00118 TC4013BP	IG00118 TC4013BP	IG00118 TC4013BP	IG00118 TC4013BP	IG00118 TC4013BP
s26	D2512	WH47170 DB105	X	WH47170 DB105	X	WH47170 DB105	WH47170 DB105	WH47170 DB105	WH47170 DB105	WH47170 DB105	WH47170 DB105
s27	Q2504	WC74120 K3850-E	X	WC74120 K3850-E	X	WC74120 K3850-E	WC74120 K3850-E	WC74120 K3850-E	WC74120 K3850-E	WC74120 K3850-E	WC74120 K3850-E
s28	D2506	VU99380 MA8068-M	X	VU99380 MA8068-M	X	VU99380 MA8068-M	VU99380 MA8068-M	VU99380 MA8068-M	VU99380 MA8068-M	VU99380 MA8068-M	VU99380 MA8068-M
s29	D2507	VU99540 MA8100-M	X	VU99540 MA8100-M	X	VU99540 MA8100-M	VU99540 MA8100-M	VU99540 MA8100-M	VU99540 MA8100-M	VU99540 MA8100-M	VU99540 MA8100-M
s30	D2511	VU99490 MA8091-L	X	VU99490 MA8091-L	X	VU99490 MA8091-L	VU99490 MA8091-L	VU99490 MA8091-L	VU99490 MA8091-L	VU99490 MA8091-L	VU99490 MA8091-L
s31	D2508	VT33290 1SS355	X	VT33290 1SS355	X	VT33290 1SS355	VT33290 1SS355	VT33290 1SS355	VT33290 1SS355	VT33290 1SS355	VT33290 1SS355
s32	R2517 R2516	RD35622 2.2K	X	RD35622 2.2K	X	RD35622 2.2K	RD35622 2.2K	RD35622 2.2K	RD35622 2.2K	RD35622 2.2K	RD35622 2.2K
s33	R2510	RD35510 100	X	RD35510 100	X	RD35510 100	RD35510 100	RD35510 100	RD35510 100	RD35510 100	RD35510 100
s35	R2511	HF35622 1/2P2.2K	X	HF35622 1/2P2.2K	X	HF35622 1/2P2.2K	HF35622 1/2P2.2K	HF35622 1/2P2.2K	HF35622 1/2P2.2K	HF35622 1/2P2.2K	HF35622 1/2P2.2K
s36	R2514 R2515	RD35822 220K	X	RD35822 220K	X	RD35822 220K	RD35822 220K	RD35822 220K	RD35822 220K	RD35822 220K	RD35822 220K
s37	R2512	RD35910 1M	X	RD35910 1M	X	RD35910 1M	RD35910 1M	RD35910 1M	RD35910 1M	RD35910 1M	RD35910 1M
s38	C2509	UR86610 1/50	X	UR86610 1/50	X	UR86610 1/50	UR86610 1/50	UR86610 1/50	UR86610 1/50	UR86610 1/50	UR86610 1/50
s39	C2510	UA65347 4700P	X	UA65347 4700P	X	UA65347 4700P	UA65347 4700P	UA65347 4700P	UA65347 4700P	UA65347 4700P	UA65347 4700P
s40	PJ293	X	X	X	X	X	X	WC61270 MSP-242V-01NI	X	X	X
s41	W2505	X	X	X	X	X	X	WD75660 SAN-PH -	X	X	X
s42	R2078 R2113	X	X	X	X	X	X	RD35547 470	X	X	X
s43	R208B R2112	X	X	X	X	X	X	RD35847 470K	X	X	X
s44	C2101 C2086	X	X	X	X	X	X	US06147 47P(CH) -	X	X	X
s45	ST252	X	X	X	X	X	X	X	X	V404050 -	X
s46	J2504	VN50000 -	X	VN50000 -	X	VN50000 -	VN50000 -	VN50000 -	VN50000 -	VN50000 -	VN50000 -
s47	Q2510	VV65570 DTC144EKA	X	X	X	VV65570 DTC144EKA	VV65570 DTC144EKA	VV65570 DTC144EKA	VV65570 DTC144EKA	VV65570 DTC144EKA	VV65570 DTC144EKA
s48	C2506	UR86622 2.2/50	UR86610 1/50	UR86622 2.2/50	UR86610 1/50	UR86622 2.2/50	UR86622 2.2/50	UR86622 2.2/50	UR86622 2.2/50	UR86622 2.2/50	UR86622 2.2/50

FUNCTION (6)

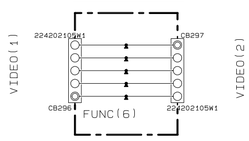


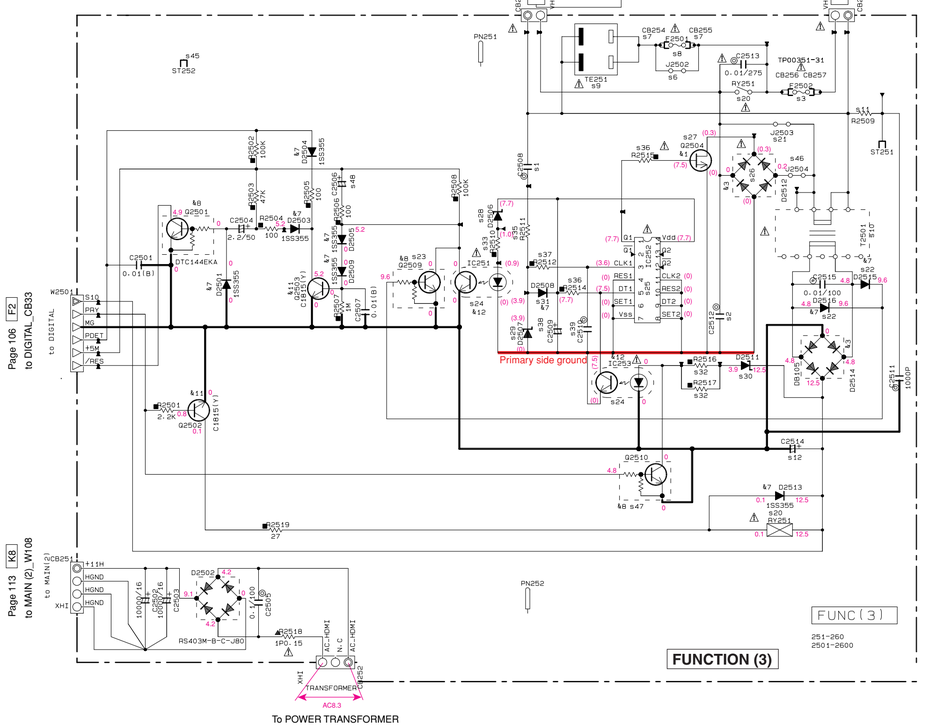

FUNCTION (2)
J model




FUNCTION (4)
R, L models

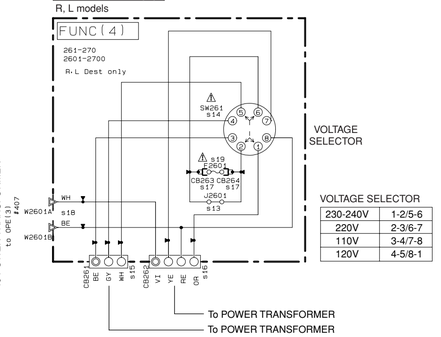


VOLTAGE SELECTOR	
230-240V	1-2/5-6
220V	2-3/6-7
110V	3-4/7-8
120V	4-5/8-1

IC220: BA15218F
Dual high slew rate, low noise operational amplifier

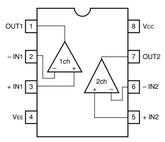

IC252: TC4013BP
Dual D-type flip flop

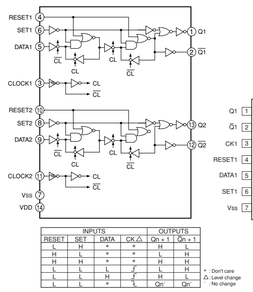

INPUTS				OUTPUTS	
RESET	SET	DATA	CK,△	Qn + 1	Q̄n + 1
L	H	*	*	H	L
H	L	*	*	L	H
H	H	*	*	H	H
L	L	L	↑	L	H
L	L	H	↑	H	L
L	L	*	L	Qn	Q̄n

* : Don't care
△: Level change
No change

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ! and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ! 印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

OPERATION

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
⊘	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
⩓	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
▨	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

CAPACITOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
⊗	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
◉	CERAMIC TUBULAR CAPACITOR
◎	POLYESTER FILM CAPACITOR
○	POLYSTYRENE FILM CAPACITOR
ⓘ	MICA CAPACITOR
Ⓟ	POLYPROPYLENE FILM CAPACITOR
◉	SEMICONDUCTIVE CERAMIC CAPACITOR


NOTICE (model)
- (J)····· JAPAN
- (U)····· U.S.A
- (C)····· CANADA
- (R)····· GENERAL
- (T)····· CHINA
- (K)····· KOREA
- (A)····· AUSTRALIA
- (B)····· BRITISH
- (G)····· EUROPE
- (L)····· SINGAPORE
- (E)····· SOUTH EUROPE
- (V)····· TAIWAN
- (F)····· RUSSIAN

Destination Part List


		DSP-AX763	RX-V663	DSP-AX763	HTR-6160	
SYX	LOC	J	UCRTKAGEFL	B	UF	C
s402	SW415 SW419 SW416 SW421 SW418 SW414 SW401 SW413 SW409 SW406	WD48310 SKRGAAD010	WD48310 SKRGAAD010	X	WD48310 SKRGAAD010	WD48310 SKRGAAD010
s403	R4039	RD35633 3.3K	RD35633 3.3K	X	RD35633 3.3K	RD35633 3.3K
s404	R4045 R4051	RD35647 4.7K	RD35647 4.7K	X	RD35647 4.7K	RD35647 4.7K
s405	R4056	RD35668 6.8K	RD35668 6.8K	X	RD35668 6.8K	RD35668 6.8K
s406	R4063	RD35710 10K	RD35710 10K	X	RD35710 10K	RD35710 10K
s407	R4067	RD35722 22K	RD35722 22K	X	RD35722 22K	RD35722 22K
s408	R4061	X	RD35710 10K	X	RD35710 10K	X
s409	D4015	X	V259820 SIR-505STA47	X	V259820 SIR-505STA47	X
s410	Q4014	WC43500 KRC102S-RTK/P	WC43500 KRC102S-RTK/P	X	WC43500 KRC102S-RTK/P	WC43500 KRC102S-RTK/P
s411	D4008	X	VT33290 1SS355	X	VT33290 1SS355	X
s413	SW422	X	X	WD48310 SKRGAAD010	X	X
s416	C4003 C4004	X	US06310 1000P(B)	X	US06310 1000P(B)	X
S421	SW424	X	WD48310 SKRGAAD010	X	WD48310 SKRGAAD010	X
s441	J4401	X	RD35000 0	RD35000 0	RD35000 0	RD35000 0
s442	C4409	US13510 0.1/16	X	X	X	X

Interchangeable Parts at Manufacture-Stage


Mark	Reference Parts Number	Parts Name
k1	Q4001-4004	KRA102S-RTK/P DTA114EKA
k2	Q4005-4008-4012- Q4014-4018	KRC102S-RTK/P DTC114EKA
k3	Q4002-4006	KTA1504S-Y-GR-RTK/P A1037AK(Q/R/S)
k4	Q4003-4007-4009-4011- 4019-4022	KTC3875S-Y-GR-RTK/P C2412K(Q/R/S) 2SD601AK/AL(R/S)
k5	D4008-4012-4016-4017 4302-4303-4401-4404	1SS355 MA2J1110GL KDS160-RTK/P
k6	IC441	TC7SET32FU SN74AHCT1G32DCKR
k7	V401	17-BT-32GNK HNA-17MM06T

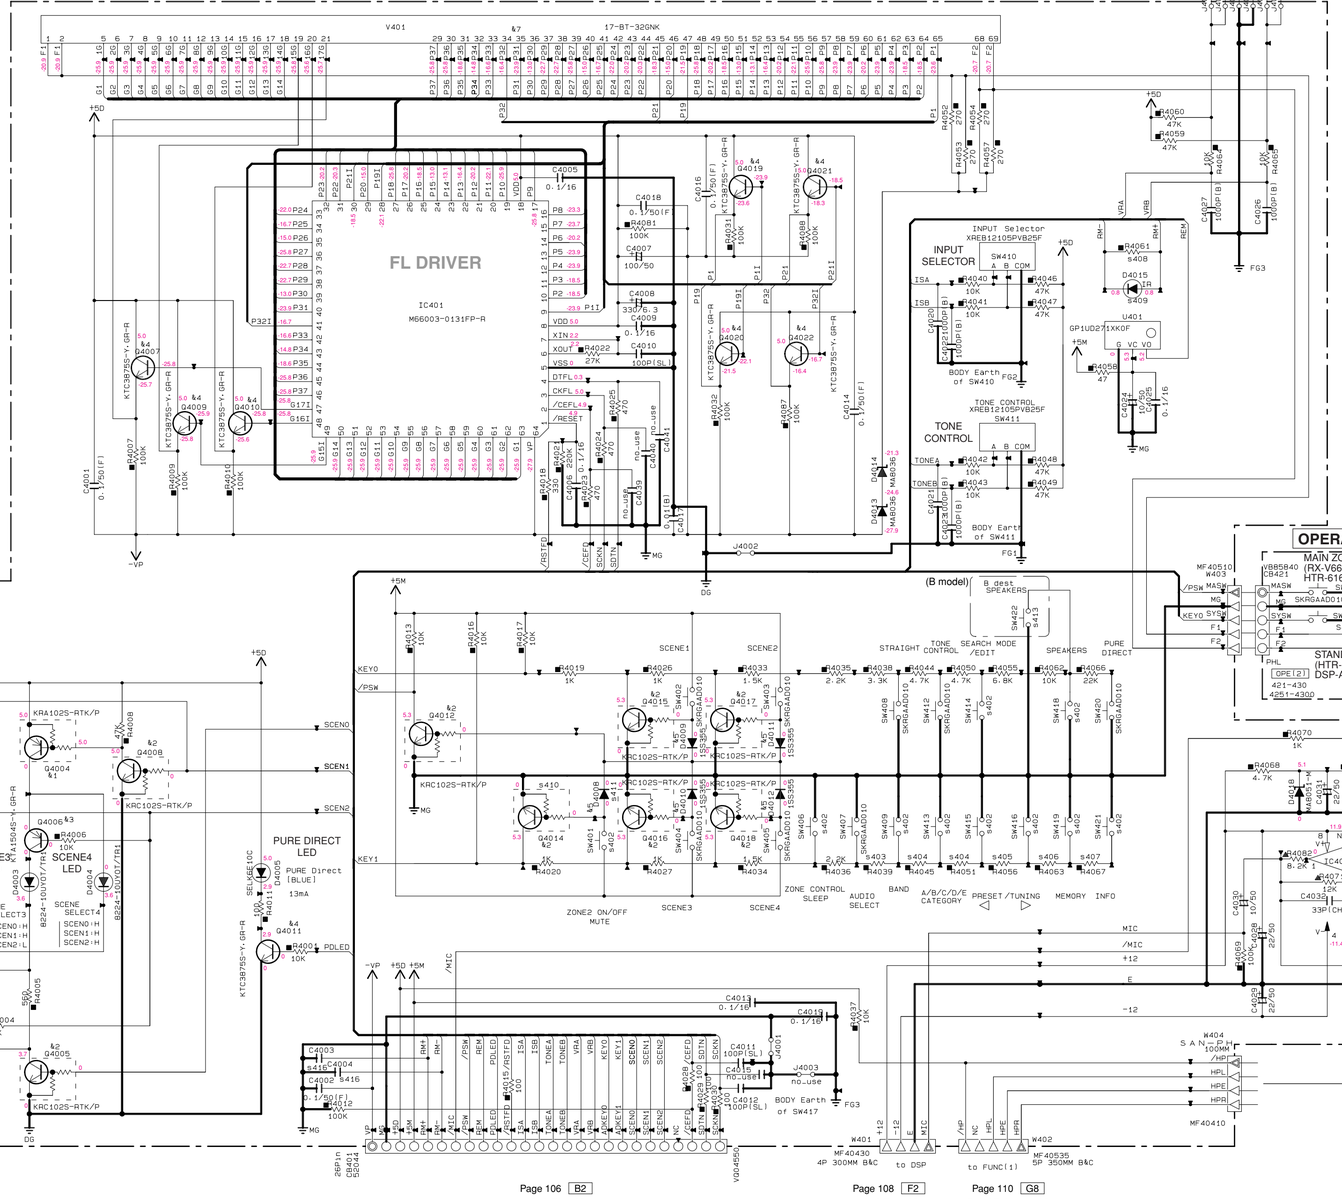


IC401: M66003-0131FP-R
18 digit 5 x 7 segment VFD controller/driver

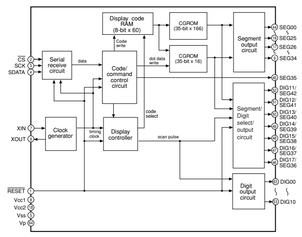

IC441: TC7SET32FU
2-input OR gate



IC402: NJM4565M
Dual operational amplifier

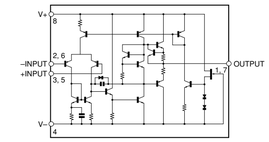

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

MAIN

SURROUND BACK L

FRONT L

SURROUND L

CENTER

Page 110 I8
to FUNCTION (1)_CB232

Page 110 I8
to FUNCTION (1)_CB231

FRONT B/ZONE B/ ZONE2/PRESENCE

FRONT A

SPEAKERS

CENTER

SURROUND

SURROUND BACK/ BI-AMP

Page 106 E2
to DIGITAL_CB32

Page 106 D2
to DIGITAL_CB31

To POWER TRANSFORMER

To POWER TRANSFORMER

MAIN (1)

Destination Part List

		DSP-AX763	RX-V663/HTR-6160	RX-V663	RX-V663/HTR-6160	DSP-AX763	HTR-6160
xxx	LOC	wk37260	wk37260	wk37270	wk37280	wk37290	wk37260
x1	TE100	wk96340 LTS0610-0020FW	wk96340 LTS0610-0020FW	wk96340 LTS0610-0020FW	wk96350 LTS0610-0023FW	wk96350 LTS0610-0023FW	wk96340 LTS0610-0020FW
x2	TE101	wk96320 LTS0610-0014FW	wk96320 LTS0610-0014FW	wk96330 LTS0610-0016FW	wk96330 LTS0610-0015FW	wk96330 LTS0610-0015FW	wk96320 LTS0610-0014FW
x3	TE102	wk96300 LTS0410-0015FW	wk96300 LTS0410-0015FW	wk96300 LTS0410-0015FW	wk96310 LTS0410-0018FW	wk96310 LTS0410-0018FW	wk96300 LTS0410-0015FW
x4	D1040	WB21270 RS6039HB-C-JB0	WB21270 RS6039HB-C-JB0	WB31310 DS5BA20	WB21270 RS6039HB-C-JB0	WB21270 RS6039HB-C-JB0	WB21270 RS6039HB-C-JB0
x13	IC100	x	x	x	x	x	XE143A2 NJM2388F05
x14	D1052	x	VU64720 RB441Q-40	x	x	x	VU64720 RB441Q-40
x15	C1120	x	x	x	x	x	UR26610 1/50
x16	C1121	x	UR27247 4V/10uF	x	x	x	UR27247 4V/10uF
x17	R1283 R1287	x	HF45610 4.7k	x	x	x	HF45610 4.7k
x18	R1259	x	HF45647 4.7k	x	x	x	HF45647 4.7k
x19	JK100 JK102	x	VU43570 MEJ-035-124PC	VU43570 MEJ-035-124PC	VU43570 MEJ-035-124PC	x	x
x20	G1070	x	WC52900 KNC102M-A1/P	WC52900 KNC102M-A1/P	WC52900 KNC102M-A1/P	x	x
x21	G1069	x	WB72960 A1708(S7)1	WB83260 A1708(S7)1	WB72960 A1708(S7)1	x	x
x22	D1034 D1035 D1036 D1037	x	VD63160 HSS104	VD63160 HSS104	VD63160 HSS104	x	x
x23	C1073	x	UA65310 1000P	UA65310 1000P	UA65310 1000P	x	x
x24	C1089	x	UA65410 0.01	UA65410 0.01	UA65410 0.01	x	x
x25	R1216	x	HF45647 4.7k	HF45647 4.7k	HF45647 4.7k	x	x
x26	R1213	x	HF45627 27	HF45627 27	HF45627 27	x	x
x27	R1217	x	HF45810 100k	HF45810 100k	HF45810 100k	x	x
x28	W113	WB10307	x	x	x	x	x

Interchangeable Parts at Manufacture-Stage

Mark	Reference Parts Number	Parts Name
N1	D1001 D1002 D1031 D1032 D1033 D1034 D1035 D1036 D1037 D1038 D1039 D1040 D1041 D1042 D1043 D1044 D1045 D1046 D1047 D1048 D1063 D1065 D1067 D1069	HS104 HS133 HS176

RESISTOR


REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (5%)
☑	CARBON FILM RESISTOR (1%)
△	METAL OXIDE FILM RESISTOR
△	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
◇	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

CAPACITOR


REMARKS	PARTS NAME	
	ELECTROLYTIC CAPACITOR	⊟
⊗	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	
◉	CERAMIC TUBULAR CAPACITOR	
◎	POLYESTER FILM CAPACITOR	⫿
○	POLYSTYRENE FILM CAPACITOR	
⊤	MICA CAPACITOR	
◎	POLYPROPYLENE FILM CAPACITOR	
■	SEMICONDUCTIVE CERAMIC CAPACITOR	

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN


IC100, 102, 106: NJM2388F05
Low dropout voltage regulator with ON/OFF control

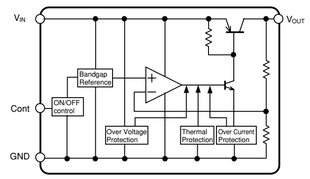


IC101: LM61CIZ
Temperature sensor

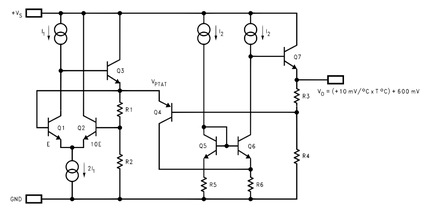


IC104: KIA7812API
Voltage regulator

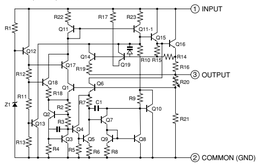

IC105: KIA7912PI
Voltage regulator

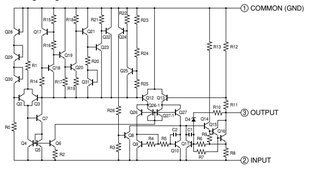

IC110: NJM7805FA
3-terminal positive voltage regulator

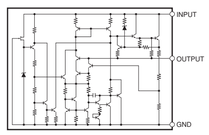

MAIN (2)

REGULATOR

Page 111 B9
to FUNCTION (3)_CB251

Page 109 J2
to DIGITAL_CB82

Page 108 D2
to DIGITAL_CB62


Page 114 K3
to VIDEO (1)_CB303

Page 106 H2
to DIGITAL_CB38
(J model)

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 1/2

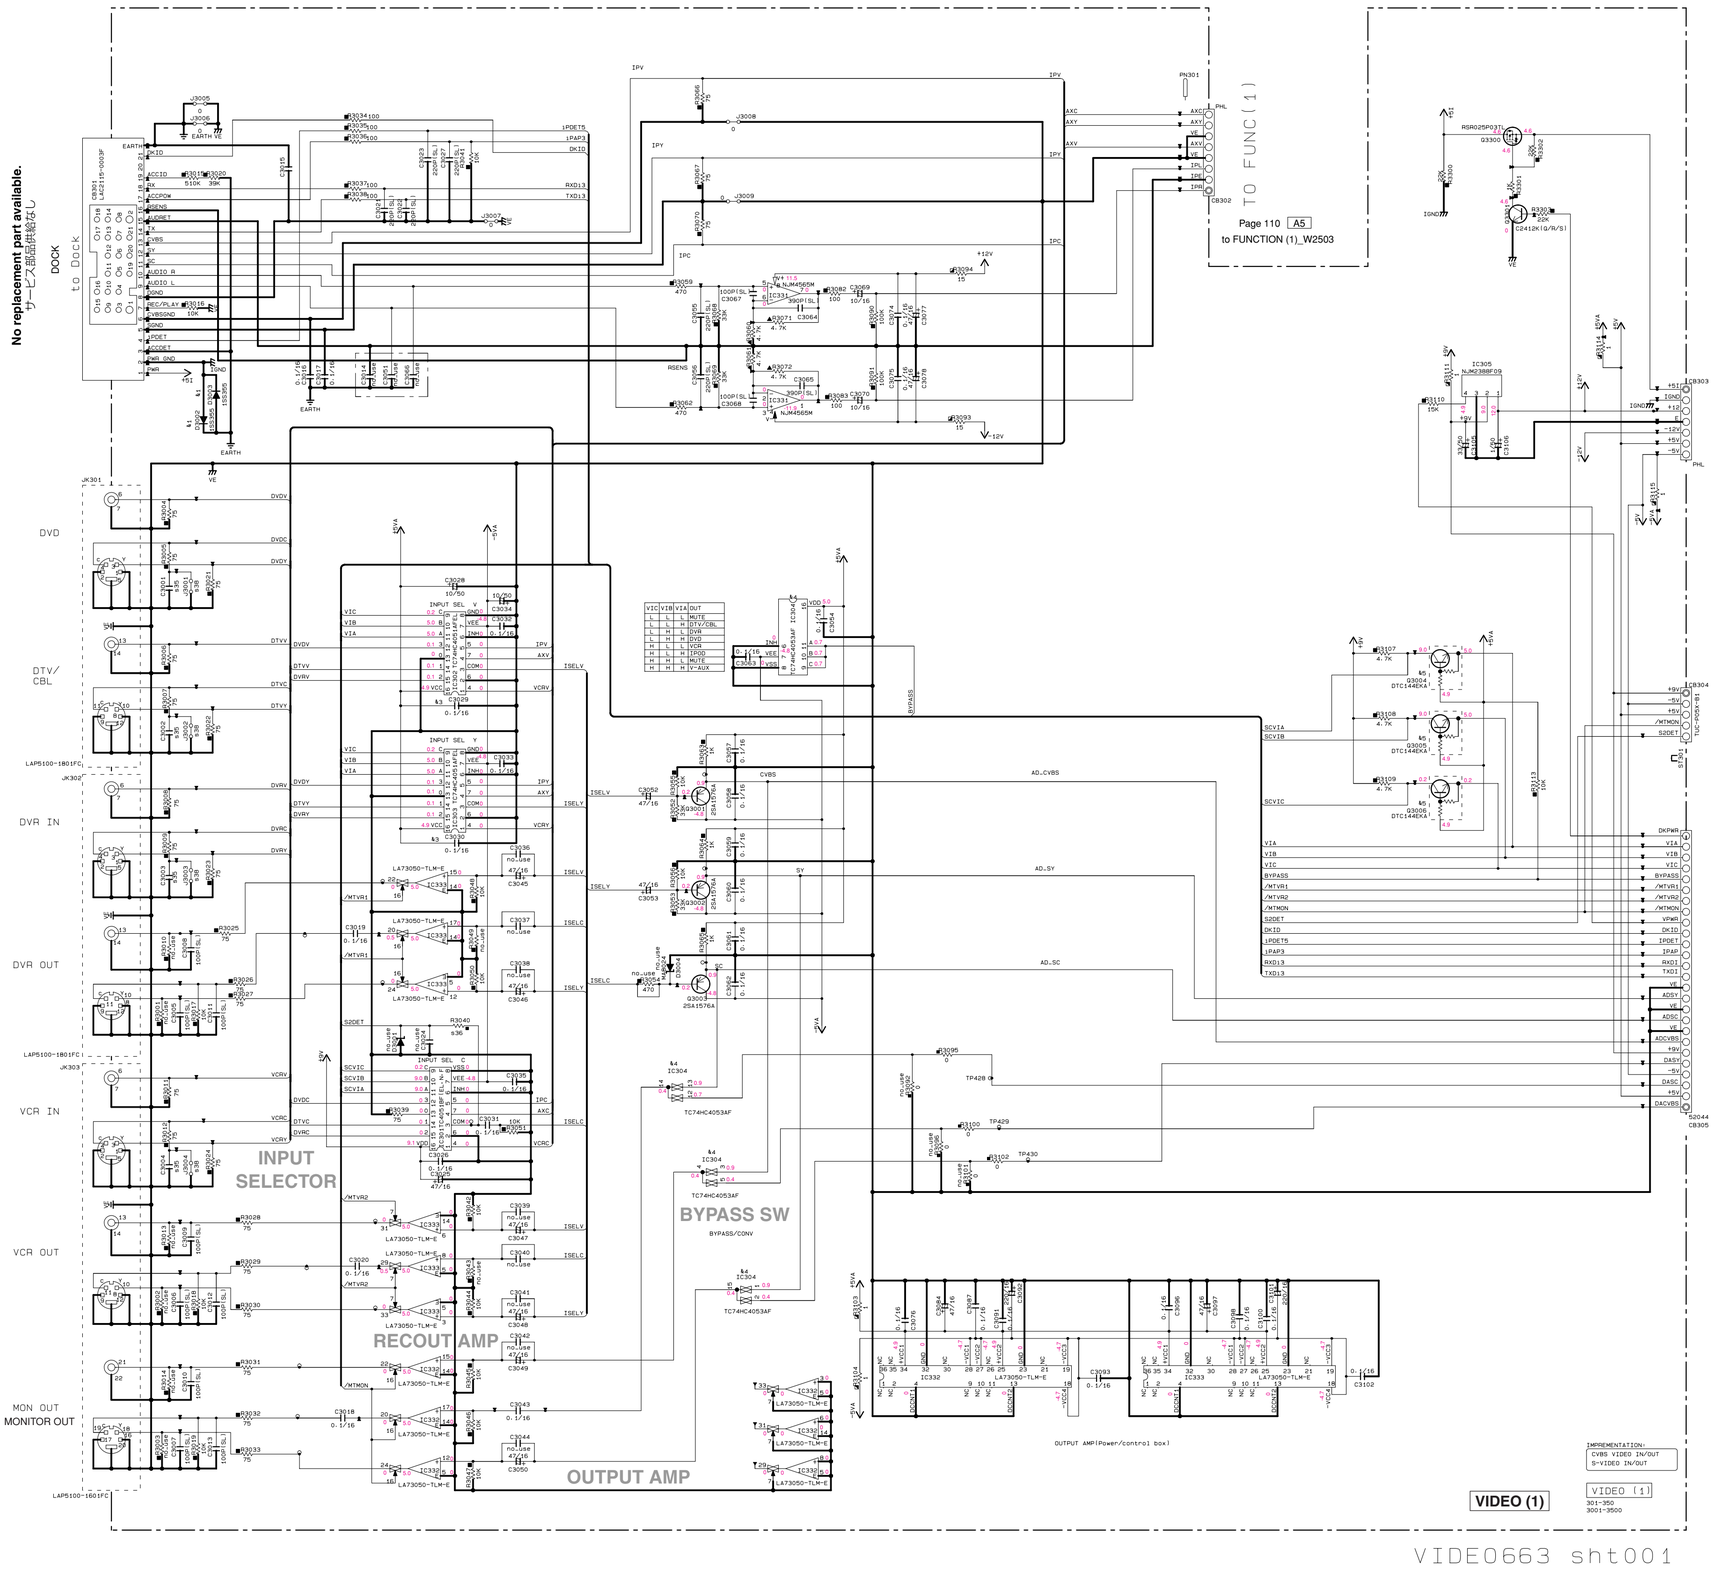

Interchangeable Parts at Manufacture-Stage

Mark	Reference Parts Number	Parts Name
&1	D3002-3003-3502-3504 3506	1SS355 MA2U1110GL KDS160-RTK/P
&2	IC383	TC74HC4052AFIEL-F1 MM74HC4052SJX-NL
&3	IC302-303	TC74HC4051AFEL MM74HC4051SJX-NL
&4	IC304	TC74HC4053AFIEL-F1 MM74HC4053SJX-NL
&5	Q3004-3006	DTC144EKA KRC104S-RTK/P
&6	Q3501	KRC102S-RTK/P DTC114EKA

Destination Part List

sXX	LOC	J	UCRTKABGEFL
s35	C3004 C3007 C3002 C3003	US13510 0.1/16	X
s36	R3040	RD35610 1K	X
s38	J3002 J3004 J3003 J3003	X	RD35000 0

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN


RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
⊘	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
⚠	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR


CAPACITOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
⊗	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
◈	CERAMIC TUBULAR CAPACITOR
◎	POLYESTER FILM CAPACITOR
○	POLYSTYRENE FILM CAPACITOR
ⓘ	MICA CAPACITOR
ⓟ	POLYPROPYLENE FILM CAPACITOR
◉	SEMICONDUCTIVE CERAMIC CAPACITOR


IC301: TC4051BF
Multiplexer/demultiplexer

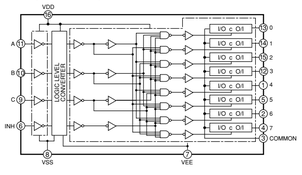

IC302, 303: TC74HC4051AFEL
8-channel analog multiplexer/demultiplexer




IC304: TC74HC4053AF
Analog multiplexer/demultiplexer

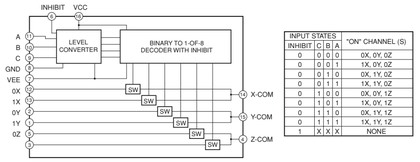


INPUT STATES			
INHIBIT	C	B	A	"ON" CHANNEL (S)
0	0	0	0	0X, 0Y, 0Z
0	0	0	1	1X, 0Y, 0Z
0	0	1	0	0X, 1Y, 0Z
0	0	1	1	1X, 1Y, 0Z
0	1	0	1	0X, 0Y, 1Z
0	1	1	0	0X, 1Y, 1Z
0	1	1	1	1X, 1Y, 1Z
1	X	X	X	NONE


IC332, 333: LA73050-TLM-E
6-channel 75-ohm video driver

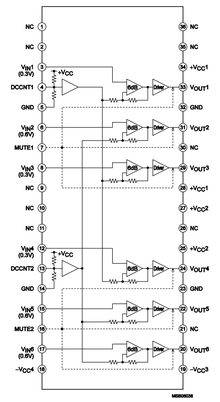

IC305: NJM2388F09
Low dropout voltage regulator with ON/OFF control

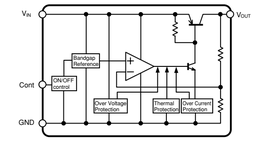


IC331: NJM4565M
Dual operational amplifier

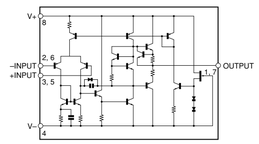

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠, and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ⚠印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

VIDEO 2/2

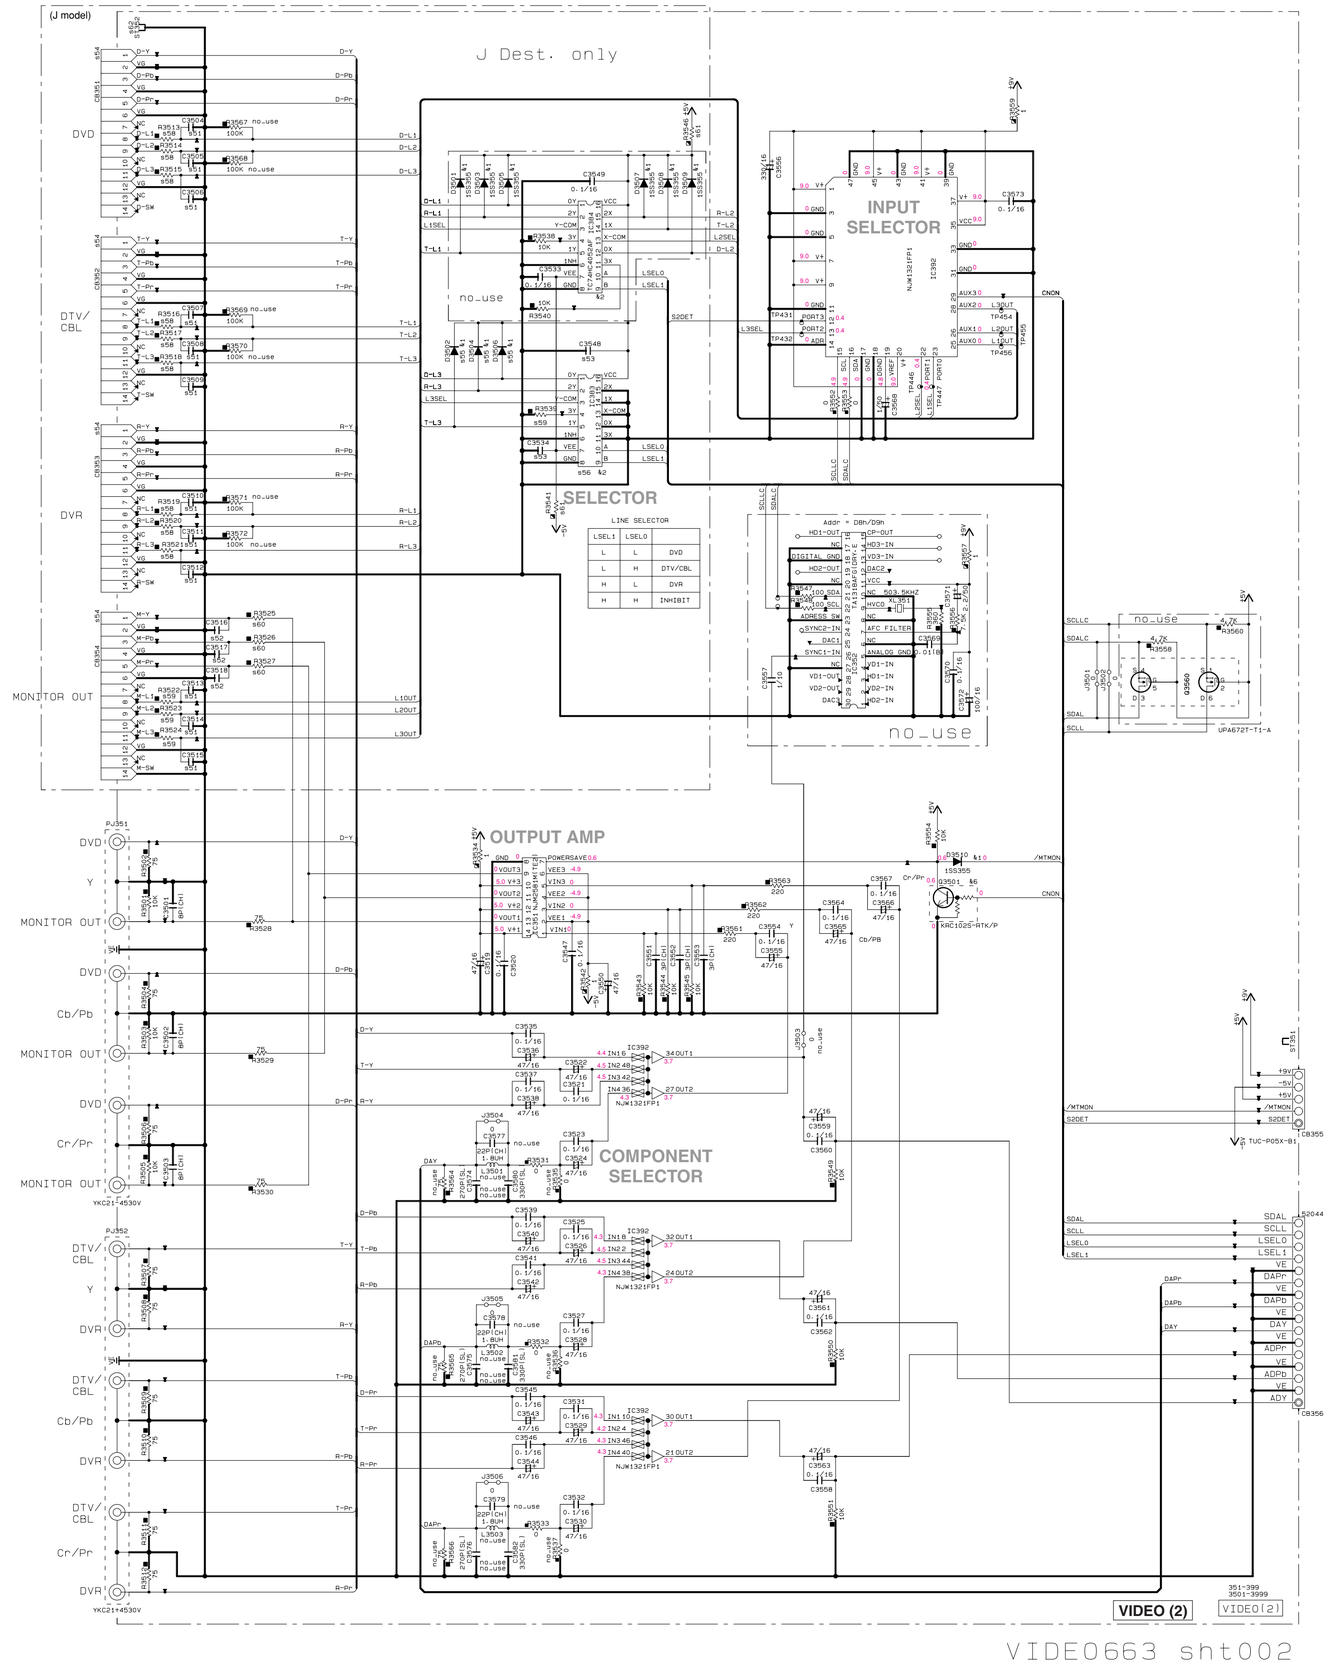

Destination Part List			
sXX	LOC	J	UCRTKABGEFL
s51	C3513 C3514 C3515 C3510 C3504 C3507 C3511 C3505 C3506 C3512 C3508 C3509	US06410 0.01(B)	X
s52	C3518 C3516 C3517	US06080 BP(CH)	X
s53	C3548 C3534	US13510 0.1/16	X
s54	CB354 CB353 CB352 CB351	WD39840 YKF45-3011	X
s55	D3506 D3504 D3502	VT33290	X
s56	IC383	XS790A0	X
s58	R3513 R3514 R3521 R3515 R3518 R3517 R3516 R3519 R3520	RD39510 100	X
s59	R3524 R3523 R3522 R3539	RD35710 10K	X
s60	R3526 R3525 R3527	RD35475 75	X
s61	R3541 R3546	HV75310 1	X
s62	ST352	X	V404050

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(A)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN


CAPACITOR

REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	‡‡
⊗	TANTALUM CAPACITOR	‡‡
NO MARK	CERAMIC CAPACITOR	‡
⊙	CERAMIC TUBULAR CAPACITOR	‡
◎	POLYESTER FILM CAPACITOR	‡
○	POLYSTYRENE FILM CAPACITOR	‡
Ⓘ	MICA CAPACITOR	‡
Ⓟ	POLYPROPYLENE FILM CAPACITOR	‡
◉	SEMICONDUCTIVE CERAMIC CAPACITOR	‡


RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
◪	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

IC351: NJM2581M
Video amplifier

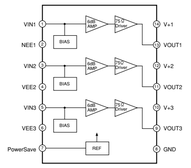


IC383: TC74HC4052AF
Analog multiplexer/demultiplexer

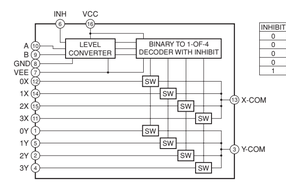

INHIBIT	B	A	
0	0	0	0x, 0y
0	0	1	1x, 1y
0	1	0	2x, 2y
0	1	1	3x, 3y
1	X	X	NONE

IC392: NJW1321FP1
Wide band video switch with I²C bus

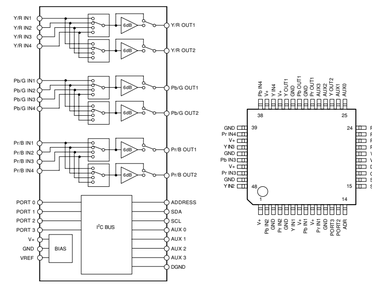

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ↑ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

● 電圧は、内部抵抗10MΩの電圧計で測定したものです。
● ↑印のある部品は、安全性確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
● 本回路図は標準回路図です。改良のため予告なく変更することがございます。

■ REPLACEMENT PARTS LIST

• ELECTRICAL COMPONENT PARTS

WARNING

- Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
- The chip resistor is not supplied as a replacement part.
  * When a chip resistor is necessary, use the following part.
    AAX60720: CHIP RESISTOR SAMPLE BOOK
- ⚠印のある部分は、安全確保部品を示しています。部品の交換が必要な場合、パーツリストに記載されている部品を使用してください。
- 部品価格ランクは、予告なく変更することがあります。
- チップ抵抗はサービス部品として供給できません。
  ※ チップ抵抗が必要な場合は、下記の部品をご利用ください。
  AAX60720: CHIP RESISTOR SAMPLE BOOK

ABBREVIATIONS IN THIS LIST ARE AS FOLLOWS:

C.A.EL.CHP	: CHIP ALUMI.ELECTROLYTIC CAP
C.CE	: CERAMIC CAP
C.CE.ARRAY	: CERAMIC CAP ARRAY
C.CE.CHP	: CHIP CERAMIC CAP
C.CE.ML	: MULTILAYER CERAMIC CAP
C.CE.M.CHP	: CHIP MULTILAYER CERAMIC CAP
C.CE.SAFTY	: RECOGNIZED CERAMIC CAP
C.CE.TUBLR	: CERAMIC TUBULAR CAP
C.CE.SMI	: SEMI CONDUCTIVE CERAMIC CAP
C.EL	: ELECTROLYTIC CAP
C.MICA	: MICA CAP
C.ML.FLM	: MULTILAYER FILM CAP
C.MP	: METALLIZED PAPER CAP
C.MYLAR	: MYLAR FILM CAP
C.MYLAR.ML	: MULTILAYER MYLAR FILM CAP
C.PAPER	: PAPER CAPACITOR
C.PLS	: POLYSTYRENE FILM CAP
C.POL	: POLYESTER FILM CAP
C.POLY	: POLYETHYLENE FILM CAP
C.PP	: POLYPROPYLENE FILM CAP
C.TNTL	: TANTALUM CAP
C.TNTL.CHP	: CHIP TANTALUM CAP
C.TRIM	: TRIMMER CAP
CN	: CONNECTOR
CN.BS.PIN	: CONNECTOR,BASE PIN
CN.CANNON	: CONNECTOR,CANNON
CN.DIN	: CONNECTOR,DIN
CN.FLAT	: CONNECTOR,FLAT CABLE
CN.POST	: CONNECTOR,BASE POST
COIL.MX.AM	: COIL,AM MIX
COIL.AT.FM	: COIL,FM ANTENNA
COIL.DT.FM	: COIL,FM DETECT
COIL.MX.FM	: COIL,FM MIX
COIL,OUTPT	: OUTPUT COIL
DIOD.ARRAY	: DIODE ARRAY
DIODE.BRG	: DIODE BRIDGE
DIODE.CHP	: CHIP DIODE
DIODE.VAR	: VARACTOR DIODE
DIOD.Z.CHP	: CHIP ZENER DIODE
DIODE.ZENR	: ZENER DIODE
DSCR.CE	: CERAMIC DISCRIMINATOR
FER.BEAD	: FERRITE BEADS
FER.CORE	: FERRITE CORE
FET.CHP	: CHIP FET
FL.DSPLY	: FLUORESCENT DISPLAY
FLTR.CE	: CERAMIC FILTER
FLTR.COMB	: COMB FILTER MODULE
FLTR.LC.RF	: LC FILTER,EMI
GND.MTL	: GROUND PLATE
GND.TERM	: GROUND TERMINAL
HOLDER.FUS	: FUSE HOLDER
IC.PRTCT	: IC PROTECTOR
JUMPER.CN	: JUMPER CONNECTOR
JUMPER.TST	: JUMPER,TEST POINT
L.DTCT	: LIGHT DETECTING MODULE
L.EMIT	: LIGHT EMITTING MODULE
LED.DSPLY	: LED DISPLAY
LED.INFRD	: LED,INFRARED
MODUL.RF	: MODULATOR,RF
PHOT.CPL	: PHOTO COUPLER
PHOT.INTR	: PHOTO INTERRUPTER
PHOT.RFLCT	: PHOTO REFLECTOR
PIN.TEST	: PIN,TEST POINT
PLST.RIVET	: PLASTIC RIVET
R.ARRAY	: RESISTOR ARRAY
R.CAR.	: CARBON RESISTOR
R.CAR.CHP	: CHIP RESISTOR
R.CAR.FP	: FLAME PROOF CARBON RESISTOR
R.FUS	: FUSABLE RESISTOR
R.MTL.CHP	: CHIP METAL FILM RESISTOR
R.MTL.FLM	: METAL FILM RESISTOR
R.MTL.OXD	: METAL OXIDE FILM RESISTOR
R.MTL.PLAT	: METAL PLATE RESISTOR
RSNR.CE	: CERAMIC RESONATOR
RSNR.CRYS	: CRYSTAL RESONATOR
R.TW.CEM	: TWIN CEMENT FIXED RESISTOR
R.CEMENT	: CEMENT RESISTOR
SCR.BND.HD	: BIND HEAD B-TIGHT SCREW
SCR.BW.HD	: BW HEAD TAPPING SCREW
SCR.CUP	: CUP TIGHT SCREW
SCR.TERM	: SCREW TERMINAL
SCR.TR	: SCREW,TRANSISTOR
SUPRT.PCB	: SUPPORT,P.C.B.
SURG.PRTCT	: SURGE PROTECTOR
SW.TACT	: TACT SWITCH
SW.LEAF	: LEAF SWITCH
SW.LEVER	: LEVER SWITCH
SW.MICRO	: MICRO SWITCH
SW.PUSH	: PUSH SWITCH
SW.RT.ENC	: ROTARY ENCODER
SW.RT.MTR	: ROTARY SWITCH WITH MOTOR
SW.RT	: ROTARY SWITCH
SW.SLIDE	: SLIDE SWITCH
TERM.SP	: SPEAKER TERMINAL
TERM.WRAP	: WRAPPING TERMINAL
THRMST.CHP	: CHIP THERMISTOR
TR.CHP	: CHIP TRANSISTOR
TR.DGT	: DIGITAL TRANSISTOR
TR.DGT.CHP	: CHIP DIGITAL TRANSISTOR
TRANS	: TRANSFORMER
TRANS.PULS	: PULSE TRANSFORMER
TRANS.PWR	: POWER TRANSFORMER ASS'Y
TUNER.AM	: TUNER PACK,AM
TUNER.FM	: TUNER PACK,FM
TUNER.PK	: FRONT-ENDTUNER PACK
VR	: ROTARY POTENTIOMETER
VR.MTR	: POTENTIOMETER WITH MOTOR
VR.SW	: POTENTIOMETER WITH ROTARY SW
VR.SLIDE	: SLIDE POTENTIOMETER
VR.TRIM	: TRIMMER POTENTIOMETER

P.C.B. DIGITAL

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
*		WN252300	P.C.B.	DIGITAL 763		J	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN252400	P.C.B.	DIGITAL 663		U	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN254200	P.C.B.	DIGITAL 6160		U	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN252400	P.C.B.	DIGITAL 663		C	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN254300	P.C.B.	DIGITAL 6160		C	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN253000	P.C.B.	DIGITAL 663		R	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN253100	P.C.B.	DIGITAL 663		T	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN253200	P.C.B.	DIGITAL 663		K	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN253300	P.C.B.	DIGITAL 663		A	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN253400	P.C.B.	DIGITAL 763		B	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN254000	P.C.B.	DIGITAL 663		GEF	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN254400	P.C.B.	DIGITAL 6160		F	ＰＣＢ ＤＩＧＩＴＡＬ	
*		WN254100	P.C.B.	DIGITAL 663		L	ＰＣＢ ＤＩＧＩＴＡＬ	
*	CB10	WM462600	CN.HDMI	19P SE			コネクタ ＨＤＭＩ	
*	CB12-13	WM462600	CN.HDMI	19P SE			コネクタ ＨＤＭＩ	
	CB14	WA014300	CN	7P SE FMN		J	ＦＭＮコネクター	
	CB30	VN520900	CN.BS.PIN	52045 26P TE			ＦＦＣコネクター	
	CB31	VB389600	CN.BS.PIN	11P			コネクタベースポスト	
	CB32	VB858400	CN.BS.PIN	5P			ベースピン	
	CB33	VB858500	CN.BS.PIN	6P			ベースピン	
	CB34	VP127700	CN	24P			コネクター	
	CB36	VQ044400	CN.BS.PIN	9P			ＦＦＣコネクター	
	CB38	VB389800	CN.BS.PIN	2P			ベースピン	
*	CB41	WJ458700	CN.XM	4P, CAM-D96		UC	ＸＭコネクタ	
	CB46	VB858200	CN.BS.PIN	3P			ベースピン	
	CB61	VP082900	CN.BS.PIN	25P			ＦＦＣコネクター	
	CB62	VB858800	CN.BS.PIN	9P			ベースピン	
	CB63	VB858300	CN.BS.PIN	4P			コネクタベースポスト	
	CB80	VN520900	CN.BS.PIN	52045 26P TE			ＦＦＣコネクター	
	CB81	VM859700	CN.BS.PIN	16P			ＦＦＣコネクター	
	CB82	LB919050	CN.BS.PIN	5P			ベース付ポスト	
	C100	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
	C101-103	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C104-105	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
	C106	US063100	C.CE.CHP	1000pF 50V B			チップセラコン	
	C107	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
	C108-115	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C116	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
	C117	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C118	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
	C119	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C120	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
	C121-122	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C124	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C125-126	US061150	C.CE.CHP	15pF 50V B			チップセラコン	
	C127	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C129	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
	C130-134	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C135-138	US061100	C.CE.CHP	10pF 50V B			チップセラコン	
	C139-144	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C145	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
	C146	US063100	C.CE.CHP	1000pF 50V B			チップセラコン	
	C147-149	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C150	US063100	C.CE.CHP	1000pF 50V B			チップセラコン	
	C151-157	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	

＊New Parts ＊新規部品

P.C.B. DIGITAL

Ref No.	Part No.	Description			Remarks	Markets	部 品 名	ランク
C158	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C159-160	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C161-166	US061100	C.CE.CHP	10pF	50V B			チップセラコン	
C167-168	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C169-170	US061100	C.CE.CHP	10pF	50V B			チップセラコン	
C171	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C172	US061100	C.CE.CHP	10pF	50V B			チップセラコン	
C173-175	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C176	WD758300	C.CE.CHP	10uF	10V			チップセラコン	
C177-178	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C179-180	WD758300	C.CE.CHP	10uF	10V			チップセラコン	
C181-182	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C183	WD758300	C.CE.CHP	10uF	10V			チップセラコン	
C184-188	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C189	WD758300	C.CE.CHP	10uF	10V			チップセラコン	
C190	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C191	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C194	UR837220	C.EL	22uF	16V			ケミコン	
C196	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C197-198	V5333500	C.CE.CHP	10uF	6.3V			チップセラコン	
C199	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C200	UR837100	C.EL	10uF	16V			ケミコン	
C202	UR837220	C.EL	22uF	16V			ケミコン	
C204	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C206	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C208	UR837100	C.EL	10uF	16V			ケミコン	
C211	UF037100	C.EL.CHP	10uF	16V		J	チップケミコン	
C212	US064100	C.CE.CHP	0.01uF	50V B		J	チップセラコン	
C214-215	US135100	C.CE.CHP	0.1uF	16V		J	チップセラコン	
C216	US126100	C.CE.CHP	1uF	10V		J	チップセラコン	
C217	US064100	C.CE.CHP	0.01uF	50V B		J	チップセラコン	
C218	US126100	C.CE.CHP	1uF	10V		J	チップセラコン	
C222-223	US135100	C.CE.CHP	0.1uF	16V		J	チップセラコン	
C225-226	US135100	C.CE.CHP	0.1uF	16V		J	チップセラコン	
C229-248	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C300	UR837330	C.EL	33uF	16V			ケミコン	
C301	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C302-303	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C306-311	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C313	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C314-315	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C316	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C317-321	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C322-328	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C329	US062220	C.CE.CHP	220pF	50V B			チップセラコン	
C330	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C331	US062220	C.CE.CHP	220pF	50V B			チップセラコン	
C332	UR237470	C.EL	47uF	16V		JRTKABGEFL	ケミコン	
C332	UR267100	C.EL	10uF	50V		UC	ケミコン	
C333	UR237470	C.EL	47uF	16V			ケミコン	
C334	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C335	UR218220	C.EL	220uF	6.3V			ケミコン	
C336	WB165500	C.EL	0.33F	5.5V			ゴールドキャパシタ	
C337	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C338	UR218330	C.EL	330uF	6.3V			ケミコン	

✻ New Parts ＊新規部品

P.C.B. DIGITAL

Ref No.	Part No.	Description			Remarks	Markets	部 品 名	ランク
C339	UR218220	C.EL	220uF	6.3V			ケミコン	
C340	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C341	US062220	C.CE.CHP	220pF	50V B			チップセラコン	
C342	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C343	US062220	C.CE.CHP	220pF	50V B			チップセラコン	
C344	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C345-347	US062100	C.CE.CHP	100pF	50V B			チップセラコン	
C349	US046100	C.CE.CHP	1uF	25V	663	UCRTKAGEFL	チップセラコン	
C349	US046100	C.CE.CHP	1uF	25V	6160	UF	チップセラコン	
C350	US046100	C.CE.CHP	1uF	25V			チップセラコン	
C350-351	US046100	C.CE.CHP	1uF	25V			チップセラコン	
C351-352	US046100	C.CE.CHP	1uF	25V			チップセラコン	
C352-353	US046100	C.CE.CHP	1uF	25V			チップセラコン	
C353-354	US046100	C.CE.CHP	1uF	25V			チップセラコン	
C354-355	US046100	C.CE.CHP	1uF	25V			チップセラコン	
C355	US046100	C.CE.CHP	1uF	25V			チップセラコン	
C356	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C357	US062100	C.CE.CHP	100pF	50V B			チップセラコン	
C359-360	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C361-369	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C401-402	US061220	C.CE.CHP	22pF	50V B			チップセラコン	
C403	US135100	C.CE.CHP	0.1uF	16V	763, 663	JRTKABGEFL	チップセラコン	
C403	US135100	C.CE.CHP	0.1uF	16V	6160	F	チップセラコン	
C404	US135100	C.CE.CHP	0.1uF	16V	763, 663	JRTKABGEFL	チップセラコン	
C404	US135100	C.CE.CHP	0.1uF	16V	6160	F	チップセラコン	
C405-406	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C409-410	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C411-412	US062220	C.CE.CHP	220pF	50V B		UC	チップセラコン	
C413	UR067470	C.EL	47uF	50V			ケミコン	
C416	US061100	C.CE.CHP	10pF	50V B		UC	チップセラコン	
C417-418	US035100	C.CE.CHP	0.1uF	16V B		UC	チップセラコン	
C419	US062220	C.CE.CHP	220pF	50V B		UC	チップセラコン	
C420	US061100	C.CE.CHP	10pF	50V B		UC	チップセラコン	
C421	US062220	C.CE.CHP	220pF	50V B		UC	チップセラコン	
C422	US063100	C.CE.CHP	1000pF	50V B		UC	チップセラコン	
C423	US035100	C.CE.CHP	0.1uF	16V B		UC	チップセラコン	
C424	US135100	C.CE.CHP	0.1uF	16V		UC	チップセラコン	
C425	US062220	C.CE.CHP	220pF	50V B		UC	チップセラコン	
C426	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C427	US062220	C.CE.CHP	220pF	50V B		UC	チップセラコン	
C428	UR238100	C.EL	100uF	16V			ケミコン	
C430-431	US062220	C.CE.CHP	220pF	50V B		UC	チップセラコン	
C434-435	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C436	US035100	C.CE.CHP	0.1uF	16V B			チップセラコン	
C437	US135100	C.CE.CHP	0.1uF	16V		UC	チップセラコン	
C438	WJ343900	C.CE.CHP	0.33uF	10V			チップセラコン	
C439	UR837100	C.EL	10uF	16V		UC	ケミコン	
C440	US044220	C.CE.CHP	0.022uF	25V B			チップセラコン	
C441	US135100	C.CE.CHP	0.1uF	16V		UC	チップセラコン	
C442-444	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C445	US062100	C.CE.CHP	100pF	50V B			チップセラコン	
C446	UR067470	C.EL	47uF	50V			ケミコン	
C447-448	US135100	C.CE.CHP	0.1uF	16V		UC	チップセラコン	
C449	US062100	C.CE.CHP	100pF	50V B			チップセラコン	
C450	UR067470	C.EL	47uF	50V			ケミコン	

＊New Parts ＊新規部品

P.C.B. DIGITAL

Ref No.	Part No.	Description			Remarks	Markets	部 品 名	ランク
C451-452	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C453-454	US060800	C.CE.CHP	8pF	50V B			チップセラコン	
C455	US062100	C.CE.CHP	100pF	50V B			チップセラコン	
C456	UU297220	C.EL	22uF	100V			ケミコン	
C457	UR837100	C.EL	10uF	16V		UC	ケミコン	
C458	UU297220	C.EL	22uF	100V			ケミコン	
C460	UR067100	C.EL	10uF	50V			ケミコン	
C461	US126100	C.CE.CHP	1uF	10V			チップセラコン	
C462-470	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C472-475	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C477	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C478	WG251600	C.CE.CHP	4.7uF	6.3V			チップセラコン	
C479-483	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C484	WG251600	C.CE.CHP	4.7uF	6.3V			チップセラコン	
C485	UR219100	C.EL	1000uF	6.3V			ケミコン	
C486	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C487	US062680	C.CE.CHP	680pF	50V B			チップセラコン	
C488	UR267470	C.EL	47uF	50V			ケミコン	
C489	WG251600	C.CE.CHP	4.7uF	6.3V			チップセラコン	
C490-493	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C494	UR067470	C.EL	47uF	50V			ケミコン	
C495-502	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C503	US135100	C.CE.CHP	0.1uF	16V		UC	チップセラコン	
C504-505	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C506	US135100	C.CE.CHP	0.1uF	16V		UC	チップセラコン	
C507-508	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C509-510	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C516	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C517	UR067470	C.EL	47uF	50V			ケミコン	
C518	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C519	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C520-521	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C522-524	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C525-526	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C527-529	US063100	C.CE.CHP	1000pF	50V B			チップセラコン	
C530-532	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C544-577	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C579-584	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C602	US064100	C.CE.CHP	0.01uF	50V B	663	UC	チップセラコン	
C602	US064100	C.CE.CHP	0.01uF	50V B	6160	U	チップセラコン	
C603-606	US061470	C.CE.CHP	47pF	50V B			チップセラコン	
C607	UR237100	C.EL	10uF	16V	663	UC	ケミコン	
C607	UR237100	C.EL	10uF	16V	6160	U	ケミコン	
C608	US135100	C.CE.CHP	0.1uF	16V	663	UC	チップセラコン	
C608	US135100	C.CE.CHP	0.1uF	16V	6160	U	チップセラコン	
C609	UR218100	C.EL	100uF	6.3V	663	UC	ケミコン	
C609	UR218100	C.EL	100uF	6.3V	6160	U	ケミコン	
C610	UR067100	C.EL	10uF	50V			ケミコン	
C611-612	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C613	UR837470	C.EL	47uF	16V	663	UC	ケミコン	
C613	UR837470	C.EL	47uF	16V	6160	U	ケミコン	
C614	UR837470	C.EL	47uF	16V	663	UC	ケミコン	
C614	UR837470	C.EL	47uF	16V	6160	U	ケミコン	
C615	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C616	US163100	C.CE.CHP	1000pF	50V	663	UC	チップセラコン	

※ New Parts ＊ 新規部品

P.C.B. DIGITAL

Ref No.	Part No.	Description			Remarks	Markets	部 品 名	ランク
C616	US163100	C.CE.CHP	1000pF	50V	6160	U	チップセラコン	
C617	US163100	C.CE.CHP	1000pF	50V	663	UC	チップセラコン	
C617	US163100	C.CE.CHP	1000pF	50V	6160	U	チップセラコン	
C618-621	US061470	C.CE.CHP	47pF	50V B			チップセラコン	
C622	US163100	C.CE.CHP	1000pF	50V	663	UC	チップセラコン	
C622	US163100	C.CE.CHP	1000pF	50V	6160	U	チップセラコン	
C623	US163100	C.CE.CHP	1000pF	50V	663	UC	チップセラコン	
C623	US163100	C.CE.CHP	1000pF	50V	6160	U	チップセラコン	
C624-627	US061470	C.CE.CHP	47pF	50V B			チップセラコン	
C628-630	US064100	C.CE.CHP	0.01uF	50V B			チップセラコン	
C632	UR067100	C.EL	10uF	50V			ケミコン	
C633	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C634	US126100	C.CE.CHP	1uF	10V			チップセラコン	
C635-636	US062100	C.CE.CHP	100pF	50V B			チップセラコン	
C639	US135100	C.CE.CHP	0.1uF	16V	663	UC	チップセラコン	
C639	US135100	C.CE.CHP	0.1uF	16V	6160	U	チップセラコン	
C640	US135100	C.CE.CHP	0.1uF	16V	663	UC	チップセラコン	
C640	US135100	C.CE.CHP	0.1uF	16V	6160	U	チップセラコン	
C641	UR067100	C.EL	10uF	50V			ケミコン	
C642	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C643	UR067100	C.EL	10uF	50V			ケミコン	
C644-645	US126100	C.CE.CHP	1uF	10V			チップセラコン	
C646-649	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C650	UR348100	C.EL	100uF	25V			ケミコン	
C651	UR067100	C.EL	10uF	50V			ケミコン	
C652-654	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C655	WK041800	C.EL	10uF	16V			ケミコン	
C656	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C657	UR067100	C.EL	10uF	50V			ケミコン	
C658-659	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C660-663	UR267100	C.EL	10uF	50V			ケミコン	
C664-665	UF037100	C.EL.CHP	10uF	16V			チップケミコン	
C666-667	UA654100	C.MYLAR	0.01uF	50V J			マイラーコン	
C668-669	UA652470	C.MYLAR	470pF	50V J			マイラーコン	
C670-671	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C672	UA654470	C.MYLAR	0.047uF	50V J			マイラーコン	
C673-677	UA652680	C.MYLAR	680pF	50V J			マイラーコン	
C678-679	UR067100	C.EL	10uF	50V			ケミコン	
C680-683	UA652150	C.MYLAR	150pF	50V J			マイラーコン	
C684	UA652100	C.MYLAR	100pF	50V J			マイラーコン	
C685	UA653680	C.MYLAR	6800pF	50V J			マイラーコン	
C686-689	UA652100	C.MYLAR	100pF	50V J			マイラーコン	
C690-691	UR267100	C.EL	10uF	50V			ケミコン	
C692-707	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C708-709	UR067470	C.EL	47uF	50V			ケミコン	
C710-711	UR267470	C.EL	47uF	50V			ケミコン	
C716-717	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C800-801	UR237470	C.EL	47uF	16V			ケミコン	
C802-803	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	
C804	US060800	C.CE.CHP	8pF	50V B		JUCRK	チップセラコン	
C804	US060300	C.CE.CHP	3pF	50V B		TABGEFL	チップセラコン	
C805	US061100	C.CE.CHP	10pF	50V B		JUCRK	チップセラコン	
C805	US060400	C.CE.CHP	4pF	50V B		TABGEFL	チップセラコン	
C806	US060500	C.CE.CHP	5pF	50V B		JUCRK	チップセラコン	
C806	US060300	C.CE.CHP	3pF	50V B		TABGEFL	チップセラコン	

✻ New Parts ＊ 新規部品

P.C.B. DIGITAL

Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
C807	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C808-809	US061240	C.CE.CHP	24pF 50V B			チップセラコン	
C810-814	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C815-816	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C817	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C818-819	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
C820-821	UR837100	C.EL	10uF 16V			ケミコン	
C822-823	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C824-825	WD758300	C.CE.CHP	10uF 10V			チップセラコン	
C826-827	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C828-829	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C830-831	UR837470	C.EL	47uF 16V			ケミコン	
C832	US062120	C.CE.CHP	120pF 50V B			チップセラコン	
C833	US061220	C.CE.CHP	22pF 50V B			チップセラコン	
C834-836	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C837	US062220	C.CE.CHP	220pF 50V B			チップセラコン	
C838	US062560	C.CE.CHP	560pF 50V B			チップセラコン	
C839	US034390	C.CE.CHP	0.039uF 16V B			チップセラコン	
C840-841	US063100	C.CE.CHP	1000pF 50V B			チップセラコン	
C842-847	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C848	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C849	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C850	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C851	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C852	VZ243400	C.CE.CHP	0.33uF 16V			チップセラコン	
C853-854	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C855	UR218470	C.EL	470uF 6.3V			ケミコン	
C856	VZ281900	C.CE.CHP	0.47uF 16V K			チップセラ	
C857	US034820	C.CE.CHP	0.082uF 16V K			チップセラコン	
C858	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C859	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C860	US060800	C.CE.CHP	8pF 50V B			チップセラコン	
C861	UR837100	C.EL	10uF 16V			ケミコン	
C862	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C863	US060700	C.CE.CHP	7pF 50V B			チップセラコン	
C865-867	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C872-873	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C875-876	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C879	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C881	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C883	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C890	US062100	C.CE.CHP	100pF 50V B			チップセラコン	
C891	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C895	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C897	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C898	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C899-900	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C902	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C908	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C910	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C912	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
C913	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	
C918-920	UR237220	C.EL	22uF 16V			ケミコン	
C922-923	UR237220	C.EL	22uF 16V			ケミコン	
C931-932	UR837220	C.EL	22uF 16V			ケミコン	

※ New Parts ＊新規部品

P.C.B. DIGITAL

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	C933	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C935	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C937	UR837100	C.EL	10uF 16V			ケミコン	
	C940	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C942-944	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C946-974	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C976-982	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	C984-992	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	
	D108-110	WE674800	DIODE	AVRL161A1R1NTB			チップバリスタ	
	D111	VV220700	DIODE.SHOT	RB501V-40			ショットキーダイオード	
	D112	VT332900	DIODE	1SS355			ダイオード	
	D126	WE674800	DIODE	AVRL161A1R1NTB			チップバリスタ	
	D127-134	WH641900	ESD	PESD0603-140			ポリマーＥＳＤ	
	D135-138	WE674800	DIODE	AVRL161A1R1NTB			チップバリスタ	
	D139-146	WH641900	ESD	PESD0603-140			ポリマーＥＳＤ	
	D147-149	WE674800	DIODE	AVRL161A1R1NTB			チップバリスタ	
	D150	VT332900	DIODE	1SS355			ダイオード	
	D152-154	VT332900	DIODE	1SS355			ダイオード	
	D156	VT332900	DIODE	1SS355			ダイオード	
	D159	VV307700	DIODE	1N4002S			ダイオード	
	D160	V2376600	DIODE.SHOT	RB500V-40		J	ショットキーダイオード	
	D162	VT332900	DIODE	1SS355		J	ダイオード	
	D300	VT332900	DIODE	1SS355	6160		ダイオード	
	D301-305	VU992600	DIODE.ZENR	MA8051-M 5.1V			ツェナーダイオード	
	D306	V8960900	DIODE.ZENR	MA8024-(TX) 2.4V		R	ツェナーダイオード	
	D307	VT332900	DIODE	1SS355		R	ダイオード	
	D309-310	VT332900	DIODE	1SS355			ダイオード	
	D311	VV833200	DIODE	1SS380			ダイオード	
	D312-314	VT332900	DIODE	1SS355			ダイオード	
	D316	VT332900	DIODE	1SS355			ダイオード	
	D317-318	VV220700	DIODE.SHOT	RB501V-40		J	ショットキーダイオード	
	D401-403	WE674800	DIODE	AVRL161A1R1NTB		UC	チップバリスタ	
	D409	VT332900	DIODE	1SS355			ダイオード	
	D411	VT332900	DIODE	1SS355			ダイオード	
	D601	VT332900	DIODE	1SS355			ダイオード	
	D603-606	VT332900	DIODE	1SS355			ダイオード	
	D607-610	WB081800	DIODE.SHOT	SB01-05Q			ショットキーダイオード	
	D611	VT332900	DIODE	1SS355		UC	ダイオード	
	D800-806	VT332900	DIODE	1SS355			ダイオード	
	D807	VU990500	DIODE.ZENR	MA8030-L 2.9V			ツェナーダイオード	
	D809	VT332900	DIODE	1SS355			ダイオード	
	D814	VT332900	DIODE	1SS355			ダイオード	
	D820	VT332900	DIODE	1SS355			ダイオード	
	F100	V2997600	SW.POLY	SMDC050-02			ポリスイッチ	
	IC11	X7741A00	IC	NJM2867F3-05(TE1)			電源ＩＣ	
	IC12	X0199B00	IC	TC74VHC157FT(EL,K)			ロジックＩＣ	
	IC13	XZ287A00	IC	SN74LVC245APWR			ロジックＩＣ	
*	IC19	X9460A00	IC	R1172H181B-T1-F			電源ＩＣ	
*	IC20	X8986A00	IC	R1232D181A-TR-F			ＤＣ－ＤＣコンバータ	
	IC21	X8194A00	IC	R1172H331D-T1-F			電源ＩＣ	
*	IC24	X9370D00	IC.CEC	MN103SFD7GYAC CPU	written	J	ＩＣ ＣＰＵ	
	IC30	X8328A00	IC.CPU	M30878FJBGP	boot only		ＩＣ ＣＰＵ	
*	IC32	X9428A00	IC	R1154H058B-T1-F			電源ＩＣ	
	IC41	X7746A00	IC	LC89057W-VF4AD-E			ＩＣ	
*	IC42	X8192A00	IC	F2621E-01-TR		UC	ＩＣ	

＊New Parts ＊新規部品

P.C.B. DIGITAL

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	IC45-46	XV894A00	IC	TC74VHC153FT MULTI			ロジックＩＣ	
	IC47	X7195A00	IC	R1172S121D-E2-F			電源ＩＣ	
	IC48	X8194A00	IC	R1172H331D-T1-F			電源ＩＣ	
*	IC49	X9625A00	IC	M12L64164A-5TG			メモリＩＣ ６４Ｍ	
*	IC50	X4964B00	IC	TC74VHC541FT(EL,K)			ロジックＩＣ	
*	IC51	X9627A00	IC.MEMORY	EN29LV160AB-70TCP	written		メモリＩＣ １６Ｍ	
	IC52	XZ509A00	IC	TC74VHCU04FT INVER			ロジックＩＣ	
*	IC54	XZ744B00	IC	TC74VHCT541AFT			ロジックＩＣ	
	IC55	X0199B00	IC	TC74VHC157FT(EL,K)			ロジックＩＣ	
*	IC56	XV891B00	IC	TC74VHC08FT(EL,K)			ロジックＩＣ	
	IC57	X7378A00	IC	NJM4565M(TE1)		UC	アンプＩＣ	
	IC61	X7375A00	IC	PCM1781DBQR	663	UC	ＩＣ	
	IC61	X7375A00	IC	PCM1781DBQR	6160	U	ＩＣ	
	IC62	X0199B00	IC	TC74VHC157FT(EL,K)			ロジックＩＣ	
	IC63	XS534A00	IC	NJM78M05DL1A			電源ＩＣ	
	IC64	X7356A00	IC	PCM1780DBQR			ＩＣ	
	IC65	X7355A00	IC	PCM1680DBQR			ＩＣ	
	IC66	X7357A00	IC	PCM1803DBR			ＩＣ	
	IC67	X7378A00	IC	NJM4565M(TE1)			アンプＩＣ	
	IC68-70	X5482A00	IC	NE5532DR OP AMP			アンプＩＣ	
	IC71	X7378A00	IC	NJM4565M(TE1)			アンプＩＣ	
	IC72	X7378A00	IC	NJM4565M(TE1)	663	UC	アンプＩＣ	
	IC72	X7378A00	IC	NJM4565M(TE1)	6160	U	アンプＩＣ	
	IC80	X8897A00	IC	R1172S331B-E2-F			電源ＩＣ	
*	IC82	X9393A00	IC	ADV7800BSTZ-80			ＩＣビデオデコーダ	
	IC84	X6671A00	IC	ADV7172KSTZ			ＩＣ	
	IC85	X7818A00	IC	LC74782JM-8A16-TLM			ＩＣ	
	IC86-87	XZ509A00	IC	TC74VHCU04FT INVER			ロジックＩＣ	
	IC89	X8531A00	IC	TC7WZ32FK			ロジックＩＣ	
	IC91-93	XZ287A00	IC	SN74LVC245APWR			ロジックＩＣ	
	IC99	X7887A00	IC	R1172S181B-E2-F			電源ＩＣ	
	JK41	VV269500	CN	8P DIN		UC	複合コネクタ	
	PJ41	V5715300	JACK.PIN	2P OR/OR			ピンジャック	
*	PN30-31	WN515200	PIN	L=70 #20			スタイルピン	
	Q102-104	VQ986700	TR	2SC4081 T106			トランジスタ	
	Q105	WE834500	FET	UPA672T-T1-A			ＦＥＴ	
	Q106	VQ986700	TR	2SC4081 T106			トランジスタ	
	Q107	WE834500	FET	UPA672T-T1-A			ＦＥＴ	
	Q108-109	VV655700	TR.DGT	DTC144EKA		J	デジタルトランジスタ	
	Q110-111	VV655700	TR.DGT	DTC144EKA			デジタルトランジスタ	
	Q300	VP872600	TR	2SA1708 S,T			トランジスタ	
	Q301	VV655700	TR.DGT	DTC144EKA			デジタルトランジスタ	
	Q304	VV655300	TR.DGT	DTA144EKA			デジタルトランジスタ	
	Q305	VR936300	TR	2SA1576A T106	663	UCRTKAGEFL	トランジスタ	
	Q305	VR936300	TR	2SA1576A T106	6160	UF	トランジスタ	
	Q306-311	VR936300	TR	2SA1576A T106			トランジスタ	
	Q313	WH445000	FET	3LN01C-TB-E			ＦＥＴ	
	Q401	VV655400	TR.DGT	DTC114EKA			デジタルトランジスタ	
	Q402	VD303700	TR	2SC3326 A,B			トランジスタ	
	Q403	VV655200	TR.DGT	DTA143EKA		UC	デジタルトランジスタ	
	Q601	VV655000	TR.DGT	DTA114EKA		UC	デジタルトランジスタ	
*	Q602	WN164100	FET	5HN01C-TB-E		UC	ＦＥＴ	
	Q603	VV655500	TR.DGT	DTC124EKA		UC	デジタルトランジスタ	
*	Q604	WN164100	FET	5HN01C-TB-E		UC	ＦＥＴ	
	Q800	VR936300	TR	2SA1576A T106			トランジスタ	

※ New Parts ＊新規部品

P.C.B. DIGITAL and P.C.B. FUNCTION

	Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
	R413	HV753100	R.CAR.FP 1Ω 1/4W	763,663		不燃化カーボン抵抗	
	R413	HF353100	R.CAR 1Ω 1/2W	6180		カーボン抵抗	
	R476	HV753100	R.CAR.FP 1Ω 1/4W			不燃化カーボン抵抗	
	R509	V8070000	R.MTL.FLM 1Ω 1W			金属被膜抵抗	
	R521	V8070000	R.MTL.FLM 1Ω 1W			金属被膜抵抗	
	R609	V8070400	R.MTL.FLM 15Ω 1W			金属被膜抵抗	
	R626	HV753100	R.CAR.FP 1Ω 1/4W			不燃化カーボン抵抗	
	R637-638	HV753220	R.CAR.FP 2.2Ω 1/4W			不燃化カーボン抵抗	
	R800-801	HV753100	R.CAR.FP 1Ω 1/4W			不燃化カーボン抵抗	
	R840	HV753220	R.CAR.FP 2.2Ω 1/4W			不燃化カーボン抵抗	
	R855-856	VP939600	R.MTL.FLM 2.2Ω 1W			金属被膜抵抗	
	R941	VP939500	R.MTL.FLM 1Ω 1W			金属被膜抵抗	
	ST100	V4040500	SCR.TERM M3			スクリュー／ターミナル	
*	U41	WN333300	CN.PHOTO.T 1P JST1165		JRTKABGEFL	光ファイバー送信器	
*	U42	WN333200	CN.PHOTO.R 1P JSR1165		JRTKABGEFL	光ファイバー受信器	
*	U43-44	WN333200	CN.PHOTO.R 1P JSR1165			光ファイバー受信器	
	XL10	WH625000	RSNR.CRYS 27MHz			水晶振動子	
	XL12	WM227900	RSNR.CE 10MHz		J	セラミック振動子	
	XL30	WF997400	RSNR.CE 20MHz			セラミック振動子	
*	XL41	WH455300	RSNR.CRYS 45.1584MHz		UC	水晶振動子	
	XL42	V3625700	RSNR.CRYS 24.576MHz			水晶振動子	
	XL80	WD280800	RSNR.CRYS 14.31818MHz		JUCRK	水晶振動子	
*	XL80	WD280900	RSNR.CRYS 17.734475MHz		TABGEFL	水晶振動子	
	XL81	VZ772700	RSNR.CRYS 28.63636MHz			水晶振動子	
*		WN373100	P.C.B. FUNCTION		J	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN374200	P.C.B. FUNCTION	663,6160	U	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN374200	P.C.B. FUNCTION	663	C	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN374300	P.C.B. FUNCTION	6160	C	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN373400	P.C.B. FUNCTION		R	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN373500	P.C.B. FUNCTION		T	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN373600	P.C.B. FUNCTION		K	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN373700	P.C.B. FUNCTION		A	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN373800	P.C.B. FUNCTION		B	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN373900	P.C.B. FUNCTION	663,6160	GEF	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
*		WN374000	P.C.B. FUNCTION		L	ＰＣＢ　ＦＵＮＣＴＩＯＮ	
	CB201	VB858700	CN.BS.PIN 8P			ベースピン	01
	CB205	VP082900	CN.BS.PIN 25P			ＦＦＣコネクター	02
	CB206	VP798200	CN.BS.PIN 24P			ＦＦＣコネクター	01
	CB221	VB858400	CN.BS.PIN 5P			ベースピン	01
	CB231	VB858600	CN.BS.PIN 7P			ベースピン	01
	CB232	VB858900	CN.BS.PIN 10P			ベースピン	01
	CB242	VM923600	CN.BS.PIN 13P		JUCRTKAGEFL	ＦＦＣコネクター	01
	CB243	VB389900	CN.BS.PIN 3P		B	ベースピン	01
*	CB244	WK835300	CN.BS.PIN 16P YDW200-16		U	コネクター	
	CB245	LB918030	CN.BS.PIN 3P		U	ベース付ポスト	01
	CB246	V7825700	CN 7P TE TUC SERIES			コネクタープラグ	
	CB247	V7827400	SOCKET 7P TE TUC SERIES			コネクターソケット	
	CB251	LB918040	CN.BS.PIN 4P			ベース付ポスト	01
	CB252	LB918030	CN.BS.PIN 3P			ベース付ポスト	01
⚠	CB253	VG879900	CN.BS.PIN 2P			ベースピン	01
*	CB254-255	WN103000	CLIP.FUSE TP00351-31		UCRTABGEFL	ヒューズクリップ	
*	CB256-257	WN103000	CLIP.FUSE TP00351-31			ヒューズクリップ	

＊New Parts　＊新規部品

P.C.B. FUNCTION

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
⚠	CB258	VG879900	CN.BS.PIN	2P			ベースピン	01
	CB261	V9377800	CN.BS.PIN	3P		RL	ベース付ポスト	
	CB262	V9377900	CN.BS.PIN	4P		RL	ベース付ポスト	
*	CB263-264	WN103000	CLIP.FUSE	TP00351-31		R	ヒューズクリップ	
	CB296-297	V7825500	CN	5P TE TUC SERIES			コネクタープラグ	01
	C2001	UR267100	C.EL	10uF 50V		JRTKABGEFL	ケミコン	
	C2002	UR218220	C.EL	220uF 6.3V		JRTKABGEFL	ケミコン	
	C2003-2004	UR267470	C.EL	47uF 50V		JRTKABGEFL	ケミコン	01
	C2005	UR218220	C.EL	220uF 6.3V		JRTKABGEFL	ケミコン	
	C2006	UR267100	C.EL	10uF 50V		JRTKABGEFL	ケミコン	
	C2007-2012	UR837100	C.EL	10uF 16V			ケミコン	01
	C2013	UR837100	C.EL	10uF 16V	663	UCRTKAGEFL	ケミコン	01
	C2013	UR837100	C.EL	10uF 16V	6160	UF	ケミコン	01
	C2014	UR837100	C.EL	10uF 16V	663	UCRTKAGEFL	ケミコン	01
	C2014	UR837100	C.EL	10uF 16V	6160	UF	ケミコン	01
	C2015-2016	UR238100	C.EL	100uF 16V			ケミコン	
	C2017-2018	UR838100	C.EL	100uF 16V			ケミコン	01
	C2019-2022	UR238100	C.EL	100uF 16V			ケミコン	
	C2023	UR267100	C.EL	10uF 50V	663	UCRTKAGEFL	ケミコン	
	C2023	UR267100	C.EL	10uF 50V	6160	UF	ケミコン	
	C2024	UR267100	C.EL	10uF 50V	663	UCRTKAGEFL	ケミコン	
	C2024	UR267100	C.EL	10uF 50V	6160	UF	ケミコン	
	C2025-2026	UR267470	C.EL	47uF 50V			ケミコン	01
	C2027-2028	UR267100	C.EL	10uF 50V			ケミコン	
	C2030	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2030	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2031	UR267100	C.EL	10uF 50V			ケミコン	
	C2032	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2032	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2033	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2033	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2034	UR837100	C.EL	10uF 16V		UC	ケミコン	01
	C2036	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2036	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2037	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2037	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2038	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2038	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2039	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2039	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2040	UR837100	C.EL	10uF 16V		UC	ケミコン	01
	C2041	UA653100	C.MYLAR	1000pF 50V J		JRTKABGEFL	マイラーコン	03
	C2042	UA652220	C.MYLAR	220pF 50V J		KABGEFL	マイラーコン	01
	C2043	UA652220	C.MYLAR	220pF 50V J		JRTKABGEFL	マイラーコン	01
	C2044	UA653910	C.MYLAR	9100pF 50V J		JRTKABGEFL	マイラーコン	01
	C2045	UA654330	C.MYLAR	0.033uF 50V J		JRTKABGEFL	マイラーコン	01
	C2046	UA653910	C.MYLAR	9100pF 50V J		JRTKABGEFL	マイラーコン	01
	C2047	UA654330	C.MYLAR	0.033uF 50V J		JRTKABGEFL	マイラーコン	01
	C2048	UA652220	C.MYLAR	220pF 50V J		KABGEFL	マイラーコン	01
	C2049	UA652220	C.MYLAR	220pF 50V J		JRTKABGEFL	マイラーコン	01
	C2050	UA653100	C.MYLAR	1000pF 50V J		JRTKABGEFL	マイラーコン	03
	C2051	US064100	C.CE.CHP	0.01uF 50V B		JRTKABGEFL	チップセラコン	01
	C2052-2055	US062220	C.CE.CHP	220pF 50V B			チップセラコン	01
	C2056-2057	US061470	C.CE.CHP	47pF 50V B			チップセラコン	01
	C2058-2063	US062220	C.CE.CHP	220pF 50V B			チップセラコン	01

⚠ New Parts ＊新規部品

P.C.B. FUNCTION

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	C2064-2065	US061470	C.CE.CHP	47pF 50V B			チップセラコン	01
	C2066-2067	US062220	C.CE.CHP	220pF 50V B			チップセラコン	01
	C2068-2069	US061470	C.CE.CHP	47pF 50V B			チップセラコン	01
	C2071	US061470	C.CE.CHP	47pF 50V B	663	UCRTKAGEFL	チップセラコン	01
	C2071	US061470	C.CE.CHP	47pF 50V B	6160	UF	チップセラコン	01
	C2072	US061470	C.CE.CHP	47pF 50V B	663	UCRTKAGEFL	チップセラコン	01
	C2072	US061470	C.CE.CHP	47pF 50V B	6160	UF	チップセラコン	01
	C2073-2074	US062220	C.CE.CHP	220pF 50V B			チップセラコン	01
	C2076-2077	US062220	C.CE.CHP	220pF 50V B			チップセラコン	01
	C2079-2080	US062220	C.CE.CHP	220pF 50V B			チップセラコン	01
	C2081-2082	US062470	C.CE.CHP	470pF 50V B			チップセラコン	01
	C2083	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
	C2084-2085	US062470	C.CE.CHP	470pF 50V B			チップセラコン	01
	C2086	US061470	C.CE.CHP	47pF 50V B		B	チップセラコン	01
	C2087	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
	C2088-2090	US062470	C.CE.CHP	470pF 50V B			チップセラコン	01
	C2091	UA654330	C.MYLAR	0.033uF 50V J			マイラーコン	01
	C2092	VR169000	C.MYLAR	0.33uF 50V			マイラーコン	01
	C2093	UA653820	C.MYLAR	8200pF 50V J			マイラーコン	01
	C2094-2095	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
	C2096	UA653820	C.MYLAR	8200pF 50V J			マイラーコン	01
	C2097	UA654330	C.MYLAR	0.033uF 50V J			マイラーコン	01
	C2098	VR169000	C.MYLAR	0.33uF 50V			マイラーコン	01
	C2099-2100	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
	C2101	US061470	C.CE.CHP	47pF 50V B		B	チップセラコン	01
	C2103	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
	C2201-2202	UR267100	C.EL	10uF 50V			ケミコン	
	C2203-2204	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
	C2205-2206	UR267100	C.EL	10uF 50V			ケミコン	
	C2207-2210	US062100	C.CE.CHP	100pF 50V B			チップセラコン	01
	C2211-2212	UR267100	C.EL	10uF 50V			ケミコン	
	C2213-2214	US061100	C.CE.CHP	10pF 50V B			チップセラコン	01
	C2217-2218	UR239100	C.EL	1000uF 16V			ケミコン	
	C2251-2252	UR266220	C.EL	2.2uF 50V			ケミコン	
	C2253-2254	UR267100	C.EL	10uF 50V			ケミコン	
	C2255	UR837100	C.EL	10uF 16V			ケミコン	01
	C2256	UR267100	C.EL	10uF 50V			ケミコン	
	C2257	UR837100	C.EL	10uF 16V			ケミコン	01
	C2258	UR267100	C.EL	10uF 50V			ケミコン	
	C2259	US062100	C.CE.CHP	100pF 50V B			チップセラコン	01
	C2260-2263	UR267100	C.EL	10uF 50V			ケミコン	
	C2264-2265	UR267470	C.EL	47uF 50V			ケミコン	01
	C2266-2269	UR267100	C.EL	10uF 50V			ケミコン	
	C2270	VR169200	C.MYLAR	0.47uF 50V			マイラーコン	01
	C2301	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2301	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2302	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2302	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2303	UA652120	C.MYLAR	120pF 50V J			マイラーコン	
	C2304	WE100900	C.PP	220pF 630V			ＰＰコン	
	C2305	UA652120	C.MYLAR	120pF 50V J			マイラーコン	
	C2306	WE100900	C.PP	220pF 630V			ＰＰコン	
*	C2307	WE102300	C.PP	3300pF 100V			ＰＰコン	
	C2308	UR068100	C.EL	100uF 50V			ケミコン	01
*	C2309	WE102300	C.PP	3300pF 100V			ＰＰコン	

＊New Parts ＊新規部品

P.C.B. FUNCTION

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	C2310	UR068100	C.EL	100uF 50V			ケミコン	01
	C2311	WE100200	C.PP	22pF 630V		JUCBGEF	ＰＰコン	01
	C2311	WG211700	C.CE	22pF 500V		RTKAL	セラコン	01
	C2312	WE100200	C.PP	22pF 630V		JUCBGEF	ＰＰコン	01
	C2312	WG211700	C.CE	22pF 500V		RTKAL	セラコン	01
	C2313	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2313	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2314	UA652120	C.MYLAR	120pF 50V J			マイラーコン	
	C2315	WE100900	C.PP	220pF 630V			ＰＰコン	
*	C2316	WE102300	C.PP	3300pF 100V			ＰＰコン	
	C2317	UR067470	C.EL	47uF 50V			ケミコン	01
	C2318	WE100200	C.PP	22pF 630V		JUCBGEF	ＰＰコン	01
	C2318	WG211700	C.CE	22pF 500V		RTKAL	セラコン	01
	C2319	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2319	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2320	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2320	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2321	UA652120	C.MYLAR	120pF 50V J			マイラーコン	
*	C2322	WN164200	C.PP	220pF 100V			ＰＰコン	
	C2323	UA652120	C.MYLAR	120pF 50V J			マイラーコン	
*	C2324	WN164200	C.PP	220pF 100V			ＰＰコン	
*	C2325	WN164900	C.PP	3300pF 100V			ＰＰコン	
	C2326	UR067470	C.EL	47uF 50V			ケミコン	01
*	C2327	WN164900	C.PP	3300pF 100V			ＰＰコン	
	C2328	UR067470	C.EL	47uF 50V			ケミコン	01
	C2329	WE100200	C.PP	22pF 630V		JUCBGEF	ＰＰコン	01
	C2329	WG211700	C.CE	22pF 500V		RTKAL	セラコン	01
	C2330	WE100200	C.PP	22pF 630V		JUCBGEF	ＰＰコン	01
	C2330	WG211700	C.CE	22pF 500V		RTKAL	セラコン	01
	C2331	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2331	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2332	WK041800	C.EL	10uF 16V		JUCBGEF	ケミコン	01
	C2332	UR237100	C.EL	10uF 16V		RTKAL	ケミコン	
	C2333	UA652120	C.MYLAR	120pF 50V J			マイラーコン	
*	C2334	WN164200	C.PP	220pF 100V			ＰＰコン	
	C2335	UA652120	C.MYLAR	120pF 50V J			マイラーコン	
*	C2336	WN164200	C.PP	220pF 100V			ＰＰコン	
*	C2337	WN164900	C.PP	3300pF 100V			ＰＰコン	
	C2338	UR067470	C.EL	47uF 50V			ケミコン	01
*	C2339	WN164900	C.PP	3300pF 100V			ＰＰコン	
	C2340	UR067470	C.EL	47uF 50V			ケミコン	01
	C2341	WE100200	C.PP	22pF 630V		JUCBGEF	ＰＰコン	01
	C2341	WG211700	C.CE	22pF 500V		RTKAL	セラコン	01
	C2342	WE100200	C.PP	22pF 630V		JUCBGEF	ＰＰコン	01
	C2342	WG211700	C.CE	22pF 500V		RTKAL	セラコン	01
	C2343	WK041800	C.EL	10uF 16V			ケミコン	01
	C2344	WE100900	C.PP	220pF 630V			ＰＰコン	
	C2401	US061270	C.CE.CHP	27pF 50V B		GEF	チップセラコン	01
	C2402	UR237100	C.EL	10uF 16V		GEF	ケミコン	
	C2403	US061270	C.CE.CHP	27pF 50V B		GEF	チップセラコン	01
	C2404-2405	US135100	C.CE.CHP	0.1uF 16V		GEF	チップセラコン	01
	C2406	US062560	C.CE.CHP	560pF 50V B		GEF	チップセラコン	01
	C2408-2409	US062330	C.CE.CHP	330pF 50V B		GEF	チップセラコン	01
	C2410	US135100	C.CE.CHP	0.1uF 16V		GEF	チップセラコン	01
	C2411	UR237470	C.EL	47uF 16V		JUCRTKAGEFL	ケミコン	01

* New Parts ＊新規部品

P.C.B. FUNCTION

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	C2412-2413	UR237470	C.EL	47uF 16V		GEF	ケミコン	01
	C2414-2415	US062100	C.CE.CHP	100pF 50V B		JUCRTKAGEFL	チップセラコン	01
	C2416	US063100	C.CE.CHP	1000pF 50V B		JUCRTKAGEFL	チップセラコン	01
	C2417	US062100	C.CE.CHP	100pF 50V B		JUCRTKAGEFL	チップセラコン	01
	C2418	US064100	C.CE.CHP	0.01uF 50V B		JUCRTKAGEFL	チップセラコン	01
	C2419	US062100	C.CE.CHP	100pF 50V B		JUCRTKAGEFL	チップセラコン	01
	C2421-2422	UR237470	C.EL	47uF 16V		JUCRTKAGEFL	ケミコン	01
	C2501	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
	C2502-2503	UR03A100	C.EL	10000uF 16V			ケミコン	
	C2504	WJ335500	C.EL	2.2uF 50V			ケミコン	
	C2505	VR324900	C.MYLAR	0.1uF 100V			マイラーコン	01
	C2506	WJ335500	C.EL	2.2uF 50V		JRTKABGEFL	ケミコン	
	C2506	UR866100	C.EL	1uF 50V		UC	ケミコン	01
	C2507	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
	C2508	WJ361200	C.POL.MTL	0.047uF 400V		J	メタライズドポリコン	
	C2508	WJ361800	C.POL.MTL	0.022uF 630V		RTKABGEFL	メタライズドポリコン	
	C2509	UR866100	C.EL	1uF 50V		JRTKABGEFL	ケミコン	01
	C2510	UA653470	C.MYLAR	4700pF 50V J		JRTKABGEFL	マイラーコン	01
	C2511	UA653100	C.MYLAR	1000pF 50V J			マイラーコン	03
	C2512	WB696300	C.POL.MTL	0.1uF 400V		J	メタライズドポリコン	
	C2512	WD257600	C.PP	0.047uF 800V		RTKABGEFL	ＰＰコン	
⚠	C2513	V6185300	C.CE.SAFTY	0.01uF 275V			規格認定コンデンサ	01
	C2514	UU249330	C.EL	3300uF 25V		JUCTKABGEFL	ケミコン　ＦＷ	04
	C2514	WD047300	C.EL	3300uF 50V		R	ケミコン　ＫＭＱ	
	C2515	WE102900	C.PP	0.01uF 100V			ＰＰコン	
	C2534	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
	D2001-2002	VU994300	DIODE.ZENR	MA8075-H 7.7V			ツェナーダイオード	01
	D2003-2004	VV659300	DIODE.ZENR	RLZ7.5B 7.5V			ツェナーダイオード	01
	D2201-2202	VT332900	DIODE	1SS355			ダイオード	01
	D2301-2302	VT332900	DIODE	1SS355			ダイオード	01
	D2401	VU993000	DIODE.ZENR	MA8056-M 5.6V		GEF	ツェナーダイオード	01
	D2402	VU995500	DIODE.ZENR	MA8100-H 10.3V		JUCRTKAGEFL	ツェナーダイオード	02
	D2501	VT332900	DIODE	1SS355			ダイオード	01
	D2502	WJ286700	DIODE.BRG	RS403M 4A 140V			ダイオートブリッジ	03
	D2503-2505	VT332900	DIODE	1SS355			ダイオード	01
	D2506	VU993800	DIODE.ZENR	MA8068-M 6.8V		JRTKABGEFL	ツェナーダイオード	01
	D2507	VU995400	DIODE.ZENR	MA8100-M 10V		JRTKABGEFL	ツェナーダイオード	
	D2508	VT332900	DIODE	1SS355		JRTKABGEFL	ダイオード	01
	D2509	VT332900	DIODE	1SS355			ダイオード	01
	D2511	VU994900	DIODE.ZENR	MA8091-L 8.8V		JRTKABGEFL	ツェナーダイオード	
⚠	D2512	WH471700	DIODE.BRG	DB105 1A 600V			ダイオートブリッジ	02
⚠	D2512	WH471700	DIODE.BRG	DB105 1A 600V		JRTKABGEFL	ダイオートブリッジ	02
	D2513	VT332900	DIODE	1SS355			ダイオード	01
	D2514	WH471700	DIODE.BRG	DB105 1A 600V			ダイオートブリッジ	02
	D2515-2516	VT332900	DIODE	1SS355		UC	ダイオード	01
⚠	F2501	WG410800	FUSE	10A 125V		UC	ヒユーズ	01
⚠	F2501	VT942900	FUSE	T2.5A 250V		RTABGEFL	ヒューズ	01
⚠	F2502	WG410800	FUSE	10A 125V		JUCR	ヒユーズ	01
⚠	F2502	KB000780	FUSE	T5A 250V		TKABGEFL	ヒューズ	02
⚠	F2601	KB000780	FUSE	T5A 250V		R	ヒューズ	02
	IC201	X3505A00	IC	NJM2068MD-TE2		JRTKABGEFL	アンプＩＣ	02
	IC202	X8155B00	IC	R2A15218FP			ＩＣ	
	IC220	XS377A00	IC	BA15218F OP AMP			アンプＩＣ	01
	IC225-227	X7378A00	IC	NJM4565M(TE1)			アンプＩＣ	01
*	IC241	X8235A00	IC	LC72725KM		GEF	ＩＣ	

* New Parts　＊ 新規部品

P.C.B. FUNCTION

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
⚠	IC251	V8100500	PHOT.CPL	TLP421 GR		JRTKABGEFL	フォトカプラ	01
⚠	IC252	IG001180	IC	TC4013BP FF		JRTKABGEFL	ロジックＩＣ	05
⚠	IC253	V8100500	PHOT.CPL	TLP421 GR		JRTKABGEFL	フォトカプラ	01
*	PJ201	WN303900	JACK.PIN	RJ-1074+09-0H54A		JRTKABGEFL	ピンジャック 6P	
	PJ202	V7046700	JACK.PIN	4P MSP-244V1-01NI		UC	ピンジャック	03
	PJ203	V7046800	JACK.PIN	6P MSP-246V1-01NI			ピンジャック	04
	PJ204-205	V7046700	JACK.PIN	4P MSP-244V1-01NI			ピンジャック	03
	PJ207	V7190400	JACK.PIN	6P			ピンジャック	03
	PJ208	V7046800	JACK.PIN	6P MSP-246V1-01NI	663	UCRTKAGEFL	ピンジャック	04
	PJ208	V7046800	JACK.PIN	6P MSP-246V1-01NI	6160	UF	ピンジャック	04
	PJ209	V7046700	JACK.PIN	4P MSP-244V1-01NI	663	JB	ピンジャック	03
	PJ209	V7046700	JACK.PIN	4P MSP-244V1-01NI	6160	C	ピンジャック	03
	PJ210	WG674900	JACK.PIN	4P			ピンジャック 4P	02
	PJ293	WC612700	JACK.PIN	2P		B	ピンジャック	
	PJ294	V7189700	JACK.PIN	1P			ピンジャック	01
	Q2001	VZ725900	TR	2SD1938F S,T	663	UCRTKAGEFL	トランジスタ	01
	Q2001	VZ725900	TR	2SD1938F S,T	6160	UF	トランジスタ	01
	Q2002	VZ725900	TR	2SD1938F S,T	663	UCRTKAGEFL	トランジスタ	01
	Q2002	VZ725900	TR	2SD1938F S,T	6160	UF	トランジスタ	01
	Q2003	VZ725900	TR	2SD1938F S,T	663	UCRTKAGEFL	トランジスタ	01
	Q2003	VZ725900	TR	2SD1938F S,T	6160	UF	トランジスタ	01
	Q2004	VZ725900	TR	2SD1938F S,T	663	UCRTKAGEFL	トランジスタ	01
	Q2004	VZ725900	TR	2SD1938F S,T	6160	UF	トランジスタ	01
	Q2005	IC181510	TR	2SC1815 Y			トランジスタ	01
	Q2006	IA101510	TR	2SA1015 Y			トランジスタ	01
	Q2007-2010	VZ725900	TR	2SD1938F S,T			トランジスタ	01
	Q2201-2202	VD303700	TR	2SC3326 A,B			トランジスタ	01
	Q2251-2264	VZ725900	TR	2SD1938F S,T			トランジスタ	01
	Q2301-2304	IC224030	TR	2SC2240 GR,BL			トランジスタ	01
	Q2305-2306	V3966800	TR	2SA949 O,Y			トランジスタ	02
	Q2307-2308	IC224030	TR	2SC2240 GR,BL			トランジスタ	01
	Q2309	V3966800	TR	2SA949 O,Y			トランジスタ	02
	Q2310-2313	IC224030	TR	2SC2240 GR,BL			トランジスタ	01
	Q2314-2315	V3966800	TR	2SA949 O,Y			トランジスタ	02
	Q2316-2319	IC224030	TR	2SC2240 GR,BL			トランジスタ	01
	Q2320-2321	V3966800	TR	2SA949 O,Y			トランジスタ	02
	Q2401	IC174020	TR	2SC1740S QRS		GEF	トランジスタ	01
	Q2402	IC181510	TR	2SC1815 Y		GEF	トランジスタ	01
	Q2403	IC181510	TR	2SC1815 Y		JUCRTKAGEFL	トランジスタ	01
	Q2501	VV655700	TR.DGT	DTC144EKA			デジタルトランジスタ	01
	Q2502-2503	IC181510	TR	2SC1815 Y			トランジスタ	01
⚠	Q2504	WC741200	FET	2SK3850		JRTKABGEFL	ＦＥＴ	03
	Q2507-2508	VZ725900	TR	2SD1938F S,T			トランジスタ	01
	Q2509	VV655700	TR.DGT	DTC144EKA		UC	デジタルトランジスタ	01
	Q2510	WC435100	TR.DGT	KRC104S-RTK		JTKABGEFL	デジタルトランジスタ	01
	R2001	HV755470	R.CAR.FP	470Ω 1/4W		JRTKABGEFL	不燃化カーボン抵抗	01
	R2019	HV755470	R.CAR.FP	470Ω 1/4W		JRTKABGEFL	不燃化カーボン抵抗	01
	R2098-2099	HV754470	R.CAR.FP	47Ω 1/4W			不燃化カーボン抵抗	01
	R2207-2208	HV755120	R.CAR.FP	120Ω 1/4W			不燃化カーボン抵抗	01
	R2217-2218	HF355100	R.CAR	100Ω 1/2W			カーボン抵抗	
	R2289-2290	HV755100	R.CAR.FP	100Ω 1/4W			不燃化カーボン抵抗	01
	R2301	HF353220	R.CAR	2.2Ω 1/2W			カーボン抵抗	
	R2303-2304	HF356100	R.CAR	1KΩ 1/2W			カーボン抵抗	
	R2307	HF356180	R.CAR	1.8KΩ 1/2W			カーボン抵抗	
	R2309	HF356180	R.CAR	1.8KΩ 1/2W			カーボン抵抗	

※ New Parts ＊ 新規部品

P.C.B. FUNCTION and P.C.B. OPERATION

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	R2313	HF355330	R.CAR	330Ω 1/2W			カーボン抵抗	
	R2314	HF356120	R.CAR	1.2KΩ 1/2W			カーボン抵抗	
	R2315	HF355330	R.CAR	330Ω 1/2W			カーボン抵抗	
	R2316	HF356120	R.CAR	1.2KΩ 1/2W			カーボン抵抗	
	R2317-2318	HF357330	R.CAR	33KΩ 1/2W			カーボン抵抗	
	R2319-2320	HV755100	R.CAR.FP	100Ω 1/4W			不燃化カーボン抵抗	01
	R2324	HF356100	R.CAR	1KΩ 1/2W			カーボン抵抗	
	R2326	HF356180	R.CAR	1.8KΩ 1/2W			カーボン抵抗	
	R2329	HF355330	R.CAR	330Ω 1/2W			カーボン抵抗	
	R2330	HF356120	R.CAR	1.2KΩ 1/2W			カーボン抵抗	
	R2331	HF357330	R.CAR	33KΩ 1/2W			カーボン抵抗	
	R2332	HV755100	R.CAR.FP	100Ω 1/4W			不燃化カーボン抵抗	01
	R2336-2337	HF356100	R.CAR	1KΩ 1/2W			カーボン抵抗	
	R2346	HF355330	R.CAR	330Ω 1/2W			カーボン抵抗	
	R2347	HF356120	R.CAR	1.2KΩ 1/2W			カーボン抵抗	
	R2348	HF355330	R.CAR	330Ω 1/2W			カーボン抵抗	
	R2349	HF356120	R.CAR	1.2KΩ 1/2W			カーボン抵抗	
	R2350-2351	HF357330	R.CAR	33KΩ 1/2W			カーボン抵抗	
	R2352-2353	HV755100	R.CAR.FP	100Ω 1/4W			不燃化カーボン抵抗	01
	R2358-2359	HF356100	R.CAR	1KΩ 1/2W			カーボン抵抗	
	R2368	HF355330	R.CAR	330Ω 1/2W			カーボン抵抗	
	R2369	HF356120	R.CAR	1.2KΩ 1/2W			カーボン抵抗	
	R2370	HF355330	R.CAR	330Ω 1/2W			カーボン抵抗	
	R2371	HF356120	R.CAR	1.2KΩ 1/2W			カーボン抵抗	
	R2372-2373	HF357330	R.CAR	33KΩ 1/2W			カーボン抵抗	
	R2374-2375	HV755100	R.CAR.FP	100Ω 1/4W			不燃化カーボン抵抗	01
	R2509	V6730000	R.CAR.	2.2MΩ 1/2W		UC	放電抵抗	01
	R2511	HF356220	R.CAR	2.2KΩ 1/2W		JRTKABGEFL	カーボン抵抗	
⚠	R2518	WJ787400	R.MTL.FLM	0.15Ω 1W			金属被膜抵抗	
⚠	RY251	WJ446600	RELAY	DC ALKT321 M01		JUCTKABGEFL	電源リレー ＴＶ－８	04
⚠	RY251	V9366900	RELAY	DLS9D1-0(M)0.25W		R	リレー ９Ｖ ＴＶ－８	05
	ST251	V4040500	SCR.TERM	M3			スクリュー／ターミナル	01
	ST252	V4040500	SCR.TERM	M3		K	スクリュー／ターミナル	01
⚠	SW261	WB493700	VOLT.SELCT	R8140246		R	電圧切替器	
⚠	SW261	WD073700	VOLT.SELCT	R8140254		L	電圧切替器	
⚠	T2501	XW605A00	TRANS.PWR			J	電源トランス	04
⚠	T2501	XW606A00	TRANS.PWR			UC	電源トランス	04
⚠	T2501	X6351A00	TRANS.PWR			R	電源トランス	
⚠	T2501	XW608A00	TRANS.PWR			TKABGEFL	電源トランス	
	TE251	VU543100	OUTLET.AC	2P		JUC	ＡＣアウトレット	03
	TE251	V5867400	OUTLET.AC	2P		RT	ＡＣアウトレット	03
	TE251	VT915000	OUTLET.AC	1P		A	ＡＣアウトレット	06
	TE251	VU543300	OUTLET.AC	1P		B	ＡＣアウトレット	05
	TE251	VU543400	OUTLET.AC	2P		GEFL	ＡＣアウトレット	05
	TE255	WB782600	AC INLET	R-30190(26)		J	ＡＣインレット ２Ｐ	
	XL241	V2731100	RSNR.CRYS	4.332M HC-49/U		GEF	水晶振動子	
*	3-1	WN378100	P.C.B.	OPERATION	763	J	ＰＣＢ ＯＰＥＲＡＴＩＯＮ	
*	3-1	WN378200	P.C.B.	OPERATION	663,6160	URTKAGEFL	ＰＣＢ ＯＰＥＲＡＴＩＯＮ	
*	3-1	WN378200	P.C.B.	OPERATION	663	C	ＰＣＢ ＯＰＥＲＡＴＩＯＮ	
*	3-1	WN378400	P.C.B.	OPERATION	6160	C	ＰＣＢ ＯＰＥＲＡＴＩＯＮ	
*	3-1	WN378300	P.C.B.	OPERATION	763	B	ＰＣＢ ＯＰＥＲＡＴＩＯＮ	
	CB401	VQ045500	CN.BS.PIN	26P			ＦＦＣコネクター	02

⚠ New Parts ＊ 新規部品

P.C.B. OPERATION

Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
CB421	VB858400	CN.BS.PIN	5P			ベースピン	01
CB422	LB919020	CN.BS.PIN	2P			ベース付ポスト	01
CB431	VB858300	CN.BS.PIN	4P			コネクタベースポスト	01
C4001-4002	US065100	C.CE.CHP	0.1uF 50V B			チップセラコン	01
C4003	US063100	C.CE.CHP	1000pF 50V B	663	UCRTKAGEFL	チップセラコン	01
C4003	US063100	C.CE.CHP	1000pF 50V B	6160	UF	チップセラコン	01
C4004	US063100	C.CE.CHP	1000pF 50V B	663	UCRTKAGEFL	チップセラコン	01
C4004	US063100	C.CE.CHP	1000pF 50V B	6160	UF	チップセラコン	01
C4005-4006	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C4007	UR068100	C.EL	100uF 50V			ケミコン	01
C4008	UR218330	C.EL	330uF 6.3V			ケミコン	
C4009	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C4010-4012	US062100	C.CE.CHP	100pF 50V B			チップセラコン	01
C4013	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C4014	US065100	C.CE.CHP	0.1uF 50V B			チップセラコン	01
C4016	US065100	C.CE.CHP	0.1uF 50V B			チップセラコン	01
C4017	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
C4018	US065100	C.CE.CHP	0.1uF 50V B			チップセラコン	01
C4019	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C4020-4023	US063100	C.CE.CHP	1000pF 50V B			チップセラコン	01
C4024	UR267100	C.EL	10uF 50V			ケミコン	
C4025	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C4026-4027	US063100	C.CE.CHP	1000pF 50V B			チップセラコン	01
C4028-4029	UR267220	C.EL	22uF 50V			ケミコン	01
C4030	UR867100	C.EL	10uF 50V			ケミコン	01
C4031	UR867220	C.EL	22uF 50V			ケミコン	01
C4032	US061330	C.CE.CHP	33pF 50V B			チップセラコン	01
C4033	UR257470	C.EL	47uF 35V			ケミコン	01
C4034	US062100	C.CE.CHP	100pF 50V B			チップセラコン	01
C4035	UR867100	C.EL	10uF 50V			ケミコン	01
C4038	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
C4301	US063100	C.CE.CHP	1000pF 50V B			チップセラコン	01
C4302	UA653330	C.MYLAR	3300pF 50V J			マイラーコン	01
C4303	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
C4304	UA653330	C.MYLAR	3300pF 50V J			マイラーコン	01
C4401	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C4402-4403	US062220	C.CE.CHP	220pF 50V B			チップセラコン	01
C4404-4405	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C4406	UR067100	C.EL	10uF 50V			ケミコン	01
C4407	US064100	C.CE.CHP	0.01uF 50V B			チップセラコン	01
C4408	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C4409	US135100	C.CE.CHP	0.1uF 16V		J	チップセラコン	01
C4410	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
D4001-4004	WJ249600	LED	ORANGE			ＬＥＤ	01
D4005	WG760400	LED	SELK6E10C BLUE			ＬＥＤ	04
D4008	VT332900	DIODE	1SS355	663	UCRTKAGEFL	ダイオード	01
D4008	VT332900	DIODE	1SS355	6160	UF	ダイオード	01
D4009-4012	VT332900	DIODE	1SS355			ダイオード	01
D4013-4014	VU991000	DIODE.ZENR	MA8036 3.6V			ツェナーダイオード	01
D4015	V2598200	LED	SIR-505ST	663	UCRTKAGEFL	ＬＥＤ	01
D4015	V2598200	LED	SIR-505ST	6160	UF	ＬＥＤ	01
D4016-4017	VT332900	DIODE	1SS355			ダイオード	01
D4018	VU992600	DIODE.ZENR	MA8051-M 5.1V			ツェナーダイオード	01
D4301	VU995000	DIODE.ZENR	MA8091-M 9.1V			ツェナーダイオード	
D4302-4303	VT332900	DIODE	1SS355			ダイオード	01

※ New Parts ＊新規部品

P.C.B. OPERATION and P.C.B. MAIN

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	D4401-4404	VT332900	DIODE	1SS355			ダイオード	01
	IC401	X6386A00	IC	M66003-0131FP			ＩＣ	07
	IC402	X7378A00	IC	NJM4565M(TE1)			アンプＩＣ	01
	IC441	XW814A00	IC	TC7SET32FU			ロジックＩＣ	01
	JK401	WC814400	JACK.MNI	JY-3554-01-130			ミニジャック	02
	JK431	V9408200	JACK.PHONE	MSJ-064-05B GR			ホーンジャック	03
	JK441	V2589500	CN.DIN	1P			ミニＤＩＮコネクタ	02
	PJ441	V7190100	JACK.PIN	3P			ピンジャック	04
	Q4001	WC434800	TR.DGT	KRA102S-RTK/P			デジタルトランジスタ	01
	Q4002	WC529500	TR	KTA1504S Y GR RTK			トランジスタ	
	Q4003	WC529400	TR	KTC3875S Y GR RTK			トランジスタ	01
	Q4004	WC434800	TR.DGT	KRA102S-RTK/P			デジタルトランジスタ	01
	Q4005	WC435000	TR.DGT	KRC102S-RTK			デジタルトランジスタ	01
	Q4006	WC529500	TR	KTA1504S Y GR RTK			トランジスタ	
	Q4007	WC529400	TR	KTC3875S Y GR RTK			トランジスタ	01
	Q4008	WC435000	TR.DGT	KRC102S-RTK			デジタルトランジスタ	01
	Q4009-4011	WC529400	TR	KTC3875S Y GR RTK			トランジスタ	01
	Q4012	WC435000	TR.DGT	KRC102S-RTK			デジタルトランジスタ	01
	Q4014	WC435000	TR.DGT	KRC102S-RTK		JUCRTKAGEFL	デジタルトランジスタ	01
	Q4015-4018	WC435000	TR.DGT	KRC102S-RTK			デジタルトランジスタ	01
	Q4019-4022	WC529400	TR	KTC3875S Y GR RTK			トランジスタ	01
	ST431	V4040500	SCR.TERM	M3			スクリュー／ターミナル	01
	ST441	WA246200	SCR.TERM	3.5			スクリューターミナル	
	SW401	WD483100	SW.TACT	SKRGAAD010		JUCRTKAGEFL	タクト　ＳＷ	01
	SW402-405	WD483100	SW.TACT	SKRGAAD010			タクト　ＳＷ	01
	SW406	WD483100	SW.TACT	SKRGAAD010		JUCRTKAGEFL	タクト　ＳＷ	01
	SW407-408	WD483100	SW.TACT	SKRGAAD010			タクト　ＳＷ	01
	SW409	WD483100	SW.TACT	SKRGAAD010		JUCRTKAGEFL	タクト　ＳＷ	01
	SW410-411	V9266400	SW.RT.ENC	XREB12105PVB25F			ロータリーエンコーダ	02
	SW412	WD483100	SW.TACT	SKRGAAD010			タクト　ＳＷ	01
	SW413-416	WD483100	SW.TACT	SKRGAAD010		JUCRTKAGEFL	タクト　ＳＷ	01
	SW417	V9597100	SW.RT.ENC	EC12E2460802			ロータリーエンコーダ	04
	SW418-419	WD483100	SW.TACT	SKRGAAD010		JUCRTKAGEFL	タクト　ＳＷ	01
	SW420	WD483100	SW.TACT	SKRGAAD010			タクト　ＳＷ	01
	SW421	WD483100	SW.TACT	SKRGAAD010		JUCRTKAGEFL	タクト　ＳＷ	01
	SW422	WD483100	SW.TACT	SKRGAAD010		B	タクト　ＳＷ	01
	SW423	WD483100	SW.TACT	SKRGAAD010			タクト　ＳＷ	01
	SW424	WD483100	SW.TACT	SKRGAAD010	663	UCRTKAGEFL	タクト　ＳＷ	01
	SW424	WD483100	SW.TACT	SKRGAAD010	6160	UF	タクト　ＳＷ	01
	U401	V8210200	L.DTCT	GP1UD271XK			リモコン受光ユニット	03
	U4401	WH169900	CN.PHOTO.R	1P GP1FAV51RK0F			光ファイバー受信器	04
*	V401	WN049000	FL.DSPLY	17-BT-32GNK			螢光表示管	
		V6880300	SHEET				シート／ＦＬ	
		V6007100	SPACER.FL	4.6/10/32			スペーサ　ＦＬ	
*		WN372500	P.C.B.	MAIN		J	ＰＣＢ　ＭＡＩＮ	
*		WN372600	P.C.B.	MAIN		U	ＰＣＢ　ＭＡＩＮ	
*		WN372600	P.C.B.	MAIN	663	C	ＰＣＢ　ＭＡＩＮ	
*		WN373000	P.C.B.	MAIN	6160	C	ＰＣＢ　ＭＡＩＮ	
*		WN372700	P.C.B.	MAIN		RTA	ＰＣＢ　ＭＡＩＮ	
*		WN372800	P.C.B.	MAIN		KGEFL	ＰＣＢ　ＭＡＩＮ	
*		WN372900	P.C.B.	MAIN		B	ＰＣＢ　ＭＡＩＮ	
	CB100	LB932060	CN.BS.PIN	6P			ベースポスト	01

＊New Parts　＊新規部品

P.C.B. MAIN

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	CB101	LB918100	CN.BS.PIN	10P			ベース付ポスト	02
	C1000-1001	UR058220	C.EL	220uF 35V			ケミコン	01
	C1002-1003	UR268220	C.EL	220uF 50V			ケミコン	01
	C1007-1008	UR267330	C.EL	33uF 50V			ケミコン	01
	C1040-1041	UR297100	C.EL	10uF 100V			ケミコン	
*	C1042	WN164300	C.PP	330pF 100V			ＰＰコン	
	C1043	UR397100	C.EL	10uF 100V			ケミコン	03
*	C1045	WN164300	C.PP	330pF 100V			ＰＰコン	
	C1046	UR397100	C.EL	10uF 100V			ケミコン	03
*	C1048	WN164300	C.PP	330pF 100V			ＰＰコン	
	C1049	UR397100	C.EL	10uF 100V			ケミコン	03
*	C1051	WN164300	C.PP	330pF 100V			ＰＰコン	
	C1052	UR397100	C.EL	10uF 100V			ケミコン	03
*	C1053-1054	WN164300	C.PP	330pF 100V			ＰＰコン	
	C1055-1056	UR397100	C.EL	10uF 100V			ケミコン	03
*	C1057	WN164300	C.PP	330pF 100V			ＰＰコン	
	C1058	UR397100	C.EL	10uF 100V			ケミコン	03
*	C1059	WN165500	C.PP	0.022uF 100V			ＰＰコン	
	C1060	UR297100	C.EL	10uF 100V			ケミコン	
*	C1061-1066	WN165500	C.PP	0.022uF 100V			ＰＰコン	
	C1067	UR838100	C.EL	100uF 16V			ケミコン	01
*	C1068-1069	WN156000	C.PP	1000pF 250V			ＰＰコン	
	C1070	UR866470	C.EL	4.7uF 50V			ケミコン	01
	C1071	UR03A100	C.EL	10000uF 16V			ケミコン	
	C1073	UA653100	C.MYLAR	1000pF 50V J	663	UCRTKAGEFL	マイラーコン	03
	C1073	UA653100	C.MYLAR	1000pF 50V J	6160	UF	マイラーコン	03
	C1074	UR058100	C.EL	100uF 35V			ケミコン	01
	C1075	UR049470	C.EL	4700uF 25V			ケミコン	
*	C1076	UR049100	C.EL	1000uF 25V			ケミコン	
	C1077	UR03A100	C.EL	10000uF 16V			ケミコン	
	C1078	UR039470	C.EL	4700uF 16V			ケミコン	03
	C1079	UA653100	C.MYLAR	1000pF 50V J			マイラーコン	03
	C1080	UA654100	C.MYLAR	0.01uF 50V J			マイラーコン	01
	C1081	UR267100	C.EL	10uF 50V			ケミコン	
*	C1082-1083	WN165500	C.PP	0.022uF 100V			ＰＰコン	
*	C1084-1085	WN331300	C.EL	6800uF 71V			ケミコン	
	C1087-1088	VR324900	C.MYLAR	0.1uF 100V			マイラーコン	01
	C1089	UA654100	C.MYLAR	0.01uF 50V J	663	UCRTKAGEFL	マイラーコン	01
	C1089	UA654100	C.MYLAR	0.01uF 50V J	6160	UF	マイラーコン	01
*	C1090	UR048470	C.EL	470uF 25V			ケミコン	
	C1092-1093	UA654220	C.MYLAR	0.022uF 50V J			マイラーコン	01
	C1094-1095	VR324900	C.MYLAR	0.1uF 100V			マイラーコン	01
	C1097	UA654100	C.MYLAR	0.01uF 50V J			マイラーコン	01
	C1098	WG601900	C.EL	10000uF 16V			ケミコン	04
	C1099	UA654100	C.MYLAR	0.01uF 50V J			マイラーコン	01
	C1102-1103	UA654100	C.MYLAR	0.01uF 50V J			マイラーコン	01
	C1108	UA654150	C.MYLAR	0.015uF 50V J			マイラーコン	01
	C1110	UA654100	C.MYLAR	0.01uF 50V J			マイラーコン	01
	C1111	UA654150	C.MYLAR	0.015uF 50V J			マイラーコン	01
⚠	C1112	VR324900	C.MYLAR	0.1uF 100V			マイラーコン	01
	C1113	UA654100	C.MYLAR	0.01uF 50V J			マイラーコン	01
	C1114	UA654150	C.MYLAR	0.015uF 50V J			マイラーコン	01
	C1115-1116	UA653470	C.MYLAR	4700pF 50V J			マイラーコン	01
	C1117-1118	UA654100	C.MYLAR	0.01uF 50V J			マイラーコン	01
	C1119	UA654150	C.MYLAR	0.015uF 50V J			マイラーコン	01

* New Parts ＊新規部品

P.C.B. MAIN

Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
C1120	UR266100	C.EL	1uF 50V		UC	ケミコン	01
C1121	UR237470	C.EL	47uF 16V		UC	ケミコン	01
C1122-1123	UR266100	C.EL	1uF 50V			ケミコン	01
C1124	UA654470	C.MYLAR	0.047uF 50V J			マイラーコン	01
C1126-1127	UR266100	C.EL	1uF 50V			ケミコン	01
C1129-1130	UR266100	C.EL	1uF 50V			ケミコン	01
C1131	WN896900	C.EL	1uF 100V		J	ケミコン	
C1131	UU296100	C.EL	1uF 100V		UCRTKABGEFL	ケミコン	01
C1132	WN896800	C.EL	33uF 50V		J	ケミコン	
C1132	UR267330	C.EL	33uF 50V		UCRTKABGEFL	ケミコン	01
C1136	WN951300	C.EL	10uF 16V		J	ケミコン	
C1136	WK041800	C.EL	10uF 16V		UCRTKABGEFL	ケミコン	01
C1137	WN951300	C.EL	10uF 16V		J	ケミコン	
C1137	WK041800	C.EL	10uF 16V		UCRTKABGEFL	ケミコン	01
C1138	WN896800	C.EL	33uF 50V		J	ケミコン	
C1138	UR267330	C.EL	33uF 50V		UCRTKABGEFL	ケミコン	01
C1141	WN896900	C.EL	1uF 100V		J	ケミコン	
C1141	UU296100	C.EL	1uF 100V		UCRTKABGEFL	ケミコン	01
C1144	UR266100	C.EL	1uF 50V			ケミコン	01
C1147	WN951300	C.EL	10uF 16V		J	ケミコン	
C1147	WK041800	C.EL	10uF 16V		UCRTKABGEFL	ケミコン	01
C1153	UA654150	C.MYLAR	0.015uF 50V J			マイラーコン	01
C1154	UA654100	C.MYLAR	0.01uF 50V J			マイラーコン	01
C1155	UR297100	C.EL	10uF 100V			ケミコン	
C1156	UR266100	C.EL	1uF 50V			ケミコン	01
D1000	VG440500	DIODE.ZENR	MTZJ13B 13V			ツェナーダイオード	01
D1001-1002	VV307700	DIODE	1N4002S			ダイオード	01
D1003-1016	VD631600	DIODE	1SS133,176			ダイオード	01
D1017-1018	VG435500	DIODE.ZENR	MTZJ2.4B 2.4V			ツェナーダイオード	01
D1019-1030	VN008700	DIODE	1SS270A			ダイオード	01
D1031	VD631600	DIODE	1SS133,176	663	UCRTKAGEFL	ダイオード	01
D1031	VD631600	DIODE	1SS133,176	6160	UF	ダイオード	01
D1032	VG443200	DIODE.ZENR	MTZJ30A 30V			ツェナーダイオード	01
D1033	VD631600	DIODE	1SS133,176	663	UCRTKAGEFL	ダイオード	01
D1033	VD631600	DIODE	1SS133,176	6160	UF	ダイオード	01
D1034	VD631600	DIODE	1SS133,176	663	UCRTKAGEFL	ダイオード	01
D1034	VD631600	DIODE	1SS133,176	6160	UF	ダイオード	01
⚠ D1035	WB121700	DIODE.BRG	RS103 1.0A 200V			ダイオードブリッジ	01
⚠ D1036	WJ286700	DIODE.BRG	RS403M 4A 140V			ダイオードブリッジ	03
D1037-1039	VD631600	DIODE	1SS133,176			ダイオード	01
* ⚠ D1040	WB212700	DIODE.BRG	RS603M 6A 200V		JUCKBGEFL	ダイオードブリッジ	
⚠ D1040	WK611100	DIODE.BRG	D6SBN20 6A 200V		RTA	ダイオードブリッジ	
D1043	VD631600	DIODE	1SS133,176			ダイオード	01
D1044-1045	VV307700	DIODE	1N4002S			ダイオード	01
D1047	VD631600	DIODE	1SS133,176			ダイオード	01
⚠ D1048	WH487300	DIODE.BRG	RS203M 2.0A 200V			ダイオードブリッジ	02
D1049	VD631600	DIODE	1SS133,176			ダイオード	01
D1050	VG440800	DIODE.ZENR	MTZJ15B 15V			ツェナーダイオード	01
D1051	VU647200	DIODE.SHOT	RB441Q-40 T-77			ショットキーダイオード	01
D1052	VU647200	DIODE.SHOT	RB441Q-40 T-77		UC	ショットキーダイオード	01
D1053-1058	VG437500	DIODE.ZENR	MTZJ5.1C 5.1V			ツェナーダイオード	01
D1061	VG437500	DIODE.ZENR	MTZJ5.1C 5.1V			ツェナーダイオード	01
D1062-1063	VD631600	DIODE	1SS133,176			ダイオード	01
D1064	VN008700	DIODE	1SS270A			ダイオード	01
D1065	VD631600	DIODE	1SS133,176			ダイオード	01

* New Parts ＊新規部品

P.C.B. MAIN

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	D1066	VN008700	DIODE	1SS270A			ダイオード	01
	D1067-1069	VD631600	DIODE	1SS133,176			ダイオード	01
	D1070	VG438000	DIODE.ZENR	MTZJ6.2B 6.2V			ツェナーダイオード	01
	G100	V5995800	PLATE.GND				アースプレート	
	IC100	X6143A00	IC	NJM2388F05 5.0V		UC	電源ＩＣ	04
	IC101	X0515A00	IC	LM61CIZ THERMAL			電源ＩＣ	03
	IC102	X6143A00	IC	NJM2388F05 5.0V			電源ＩＣ	04
	IC104	X4153A00	IC	KIA7812API			電源ＩＣ	02
	IC105	X4154A00	IC	KIA7912PI			電源ＩＣ	
	IC106	X6143A00	IC	NJM2388F05 5.0V			電源ＩＣ	04
	IC107	X6248A00	IC	NJM2388F33			電源ＩＣ	04
	IC110	XJ607A00	IC	NJM7805FA 5V			ＩＣ	02
	JK100	V9435700	JACK.MNI	MSJ-035-12APC	663	UCRTKAGEFL	モノラル ミニジャック	01
	JK100	V9435700	JACK.MNI	MSJ-035-12APC	6160	UF	モノラル ミニジャック	01
	JK102	V9435700	JACK.MNI	MSJ-035-12APC	663	UCRTKAGEFL	モノラル ミニジャック	01
	JK102	V9435700	JACK.MNI	MSJ-035-12APC	6160	UF	モノラル ミニジャック	01
	JK201	V9435700	JACK.MNI	MSJ-035-12APC			モノラル ミニジャック	01
*	PN101	WN515200	PIN	L=70 ♯20			スタイルピン	
⚠	Q1000	VP872600	TR	2SA1708 S,T			トランジスタ	01
	Q1001-1006	WC529200	TR.DGT	KRC102M-AT			デジタルトランジスタ	01
	Q1007-1013	WC398500	TR.DGT	KRA102M-AT			デジタルトランジスタ	01
	Q1014-1015	WC529200	TR.DGT	KRC102M-AT			デジタルトランジスタ	01
	Q1016	WC397700	TR	2N5401C-AT			トランジスタ	
⚠	Q1019-1024	VK432900	TR	2SD1915F S,T			トランジスタ	01
	Q1025-1030	VR325600	TR	2SC2229 O,Y			トランジスタ	01
	Q1031	WC398400	TR	2N5551C-AT			トランジスタ	01
	Q1032	WC397700	TR	2N5401C-AT			トランジスタ	
⚠	Q1033	V4096100	TR	2SC4614 S,T			トランジスタ	02
⚠	Q1034	V4096000	TR	2SA1770 S,T			トランジスタ	03
⚠	Q1035	V4096100	TR	2SC4614 S,T			トランジスタ	02
⚠	Q1036	V4096000	TR	2SA1770 S,T			トランジスタ	03
⚠	Q1037	V4096100	TR	2SC4614 S,T			トランジスタ	02
⚠	Q1038	V4096000	TR	2SA1770 S,T			トランジスタ	03
⚠	Q1039	V4096100	TR	2SC4614 S,T			トランジスタ	02
⚠	Q1040	V4096000	TR	2SA1770 S,T			トランジスタ	03
⚠	Q1041	V4096100	TR	2SC4614 S,T			トランジスタ	02
⚠	Q1042	V4096000	TR	2SA1770 S,T			トランジスタ	03
⚠	Q1043	V4096100	TR	2SC4614 S,T			トランジスタ	02
⚠	Q1044	V4096000	TR	2SA1770 S,T			トランジスタ	03
⚠	Q1045-1046	WG538600	TR	KTA1046-Y-U/P			トランジスタ	02
	Q1047	WC398400	TR	2N5551C-AT			トランジスタ	01
⚠	Q1048-1053	VR355900	TR.PAIR	A1695/C4468 OPY	(IX630850,IX630860)		ペアトランジスタ	07
	Q1060-1065	WC398400	TR	2N5551C-AT			トランジスタ	01
	Q1066	WC397700	TR	2N5401C-AT			トランジスタ	
	Q1067	IC181510	TR	2SC1815 Y			トランジスタ	01
⚠	Q1068	WC397700	TR	2N5401C-AT			トランジスタ	
	Q1069	VP872600	TR	2SA1708 S,T	663	UCRTKAGEFL	トランジスタ	01
	Q1069	VP872600	TR	2SA1708 S,T	6160	UF	トランジスタ	01
	Q1070	WC529200	TR.DGT	KRC102M-AT	663	UCRTKAGEFL	デジタルトランジスタ	01
	Q1070	WC529200	TR.DGT	KRC102M-AT	6160	UF	デジタルトランジスタ	01
⚠	Q1077	VK432900	TR	2SD1915F S,T			トランジスタ	01
	Q1078	VR325600	TR	2SC2229 O,Y			トランジスタ	01
⚠	Q1079	V4096100	TR	2SC4614 S,T			トランジスタ	02
⚠	Q1080	V4096000	TR	2SA1770 S,T			トランジスタ	03
⚠	Q1081	VR355900	TR.PAIR	A1695/C4468 OPY	(IX630850,IX630860)		ペアトランジスタ	07

※ New Parts ＊ 新規部品

P.C.B. MAIN

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
	Q1083	WC398400	TR	2N5551C-AT			トランジスタ	01
	Q1100	WG538600	TR	KTA1046-Y-U/P			トランジスタ	02
	Q1101	IA101510	TR	2SA1015 Y			トランジスタ	01
	Q1102	IC181510	TR	2SC1815 Y			トランジスタ	01
	Q1103	IA101510	TR	2SA1015 Y			トランジスタ	01
	Q1104	WF691400	TR	2SD2014			トランジスタ	03
	Q1105	IE102620	FET	2SK246 Y			ＦＥＴ	01
	R1002-1003	WG728000	R.MTL.FLM	4.7KΩ 1/4W			金属被膜抵抗	01
⚠	R1012	HV753100	R.CAR.FP	1Ω 1/4W			不燃化カーボン抵抗	01
	R1019	HV756100	R.CAR.FP	1KΩ 1/4W			不燃化カーボン抵抗	01
	R1063	HF355470	R.CAR	470Ω 1/2W			カーボン抵抗	
	R1065-1069	HF355470	R.CAR	470Ω 1/2W			カーボン抵抗	
	R1084	WG727400	R.MTL.FLM	2.7KΩ 1/4W			金属被膜抵抗	01
	R1085	WG725600	R.MTL.FLM	470Ω 1/4W			金属被膜抵抗	01
	R1086	WG726200	R.MTL.FLM	820Ω 1/4W			金属被膜抵抗	01
	R1087	WG727400	R.MTL.FLM	2.7KΩ 1/4W			金属被膜抵抗	01
	R1088	WG725600	R.MTL.FLM	470Ω 1/4W			金属被膜抵抗	01
	R1089	WG726200	R.MTL.FLM	820Ω 1/4W			金属被膜抵抗	01
	R1090	WG727400	R.MTL.FLM	2.7KΩ 1/4W			金属被膜抵抗	01
	R1091	WG725600	R.MTL.FLM	470Ω 1/4W			金属被膜抵抗	01
	R1092	WG726200	R.MTL.FLM	820Ω 1/4W			金属被膜抵抗	01
	R1093	WG727400	R.MTL.FLM	2.7KΩ 1/4W			金属被膜抵抗	01
	R1094	WG725600	R.MTL.FLM	470Ω 1/4W			金属被膜抵抗	01
	R1095	WG726200	R.MTL.FLM	820Ω 1/4W			金属被膜抵抗	01
	R1096	WG727400	R.MTL.FLM	2.7KΩ 1/4W			金属被膜抵抗	01
	R1097	WG725600	R.MTL.FLM	470Ω 1/4W			金属被膜抵抗	01
	R1098	WG726200	R.MTL.FLM	820Ω 1/4W			金属被膜抵抗	01
	R1099	WG727400	R.MTL.FLM	2.7KΩ 1/4W			金属被膜抵抗	01
	R1100	WG725600	R.MTL.FLM	470Ω 1/4W			金属被膜抵抗	01
	R1101	WG726200	R.MTL.FLM	820Ω 1/4W			金属被膜抵抗	01
*	R1104	WG726400	R.MTL.FLM	1KΩ 1/4W			金属被膜抵抗	
	R1105	HV755120	R.CAR.FP	120Ω 1/4W			不燃化カーボン抵抗	01
*	R1106	WG726400	R.MTL.FLM	1KΩ 1/4W			金属被膜抵抗	
	R1107	HV755120	R.CAR.FP	120Ω 1/4W			不燃化カーボン抵抗	01
*	R1108	WG726400	R.MTL.FLM	1KΩ 1/4W			金属被膜抵抗	
	R1109	HV755120	R.CAR.FP	120Ω 1/4W			不燃化カーボン抵抗	01
*	R1110	WG726400	R.MTL.FLM	1KΩ 1/4W			金属被膜抵抗	
	R1111	HV755120	R.CAR.FP	120Ω 1/4W			不燃化カーボン抵抗	01
*	R1112	WG726400	R.MTL.FLM	1KΩ 1/4W			金属被膜抵抗	
	R1113	HV755120	R.CAR.FP	120Ω 1/4W			不燃化カーボン抵抗	01
*	R1114	WG726400	R.MTL.FLM	1KΩ 1/4W			金属被膜抵抗	
	R1115	HV755120	R.CAR.FP	120Ω 1/4W			不燃化カーボン抵抗	01
	R1116	V8072100	R.MTL.OXD	5.6KΩ 1W			酸化金属被膜抵抗	
	R1117	HV755560	R.CAR.FP	560Ω 1/4W			不燃化カーボン抵抗	01
⚠	R1119-1130	HV755120	R.CAR.FP	120Ω 1/4W			不燃化カーボン抵抗	01
	R1132	V8072000	R.MTL.OXD	4.7KΩ 1W			酸化金属被膜抵抗	
⚠	R1133-1145	HV754100	R.CAR.FP	10Ω 1/4W			不燃化カーボン抵抗	01
	R1147-1148	HV754100	R.CAR.FP	10Ω 1/4W			不燃化カーボン抵抗	01
⚠	R1149-1150	WG471300	R.WW	0.22Ωx2 5W	RF-5EGKR22		セメント抵抗	
* ⚠	R1151	WM216400	R.WW	0.22Ω 3W			セメント抵抗	
⚠	R1152	WG471300	R.WW	0.22Ωx2 5W	RF-5EGKR22		セメント抵抗	
* ⚠	R1153	WM216400	R.WW	0.22Ω 3W			セメント抵抗	
⚠	R1154	WG471300	R.WW	0.22Ωx2 5W	RF-5EGKR22		セメント抵抗	
⚠	R1173-1178	V8070300	R.MTL.FLM	10Ω 1W			金属被膜抵抗	
⚠	R1202-1203	V8070200	R.MTL.FLM	4.7Ω 1W			金属被膜抵抗	

＊New Parts ＊新規部品

P.C.B. MAIN and P.C.B. VIDEO

	Ref No.	Part No.	Description	Remarks	Markets	部 品 名	ランク
⚠	R1214	HV754100	R.CAR.FP 10Ω 1/4W			不燃化カーボン抵抗	01
⚠	R1215	HV756150	R.CAR.FP 1.5KΩ 1/4W			不燃化カーボン抵抗	01
	R1232	HV753470	R.CAR.FP 4.7Ω 1/4W			不燃化カーボン抵抗	01
	R1238	HV753470	R.CAR.FP 4.7Ω 1/4W			不燃化カーボン抵抗	01
	R1245	WG727400	R.MTL.FLM 2.7KΩ 1/4W			金属被膜抵抗	01
	R1249	WG725600	R.MTL.FLM 470Ω 1/4W			金属被膜抵抗	01
*	R1252	WG726400	R.MTL.FLM 1KΩ 1/4W			金属被膜抵抗	
	R1254	WG726200	R.MTL.FLM 820Ω 1/4W			金属被膜抵抗	01
	R1294	HF355470	R.CAR 470Ω 1/2W			カーボン抵抗	
⚠	R1296-1298	HV755120	R.CAR.FP 120Ω 1/4W			不燃化カーボン抵抗	01
	R1301-1302	HV754100	R.CAR.FP 10Ω 1/4W			不燃化カーボン抵抗	01
⚠	R1303	WG471300	R.WW 0.22Ωx2 5W	RF-5EGKR22		セメント抵抗	
⚠	R1307	V8070300	R.MTL.FLM 10Ω 1W			金属被膜抵抗	
	R1311	HL002220	R.MTL.OXD 0.22Ω 1/2W			酸化金属被膜抵抗	01
*	R1319-1320	V8072400	R.MTL.OXD 15KΩ 1W			酸化金属被膜抵抗	
	RY100-104	WJ122400	RELAY 981-2A-24DS-SP7			リレー 24V	04
	RY105	WE648700	RELAY DC DH24D2-O-Q			リレー 24V	06
	RY106	WJ122400	RELAY 981-2A-24DS-SP7			リレー 24V	04
	ST100	V4040500	SCR.TERM M3			スクリュー/ターミナル	01
	TE100	WH963400	TERM.SP 8P LTS0810-0020FM		JUCRTA	スピーカーターミナル	07
*	TE100	WH963500	TERM.SP 8P LTS0810-0021FM		KBGEFL	スピーカーターミナル	
	TE101	WH963200	TERM.SP 6P LTS0610-0014FM		JUCRTA	スピーカーターミナル	07
*	TE101	WH963300	TERM.SP 6P LTS0610-0015FM		KBGEFL	スピーカーターミナル	
	TE102	WH963000	TERM.SP 4P LTS0410-0015FM		JUCRTA	スピーカーターミナル	05
*	TE102	WH963100	TERM.SP 4P LTS0410-0016FM		KBGEFL	スピーカーターミナル	
		WE774200	SCR.BND.HD 3x10 MFZN2W3			バインドBタイトネジ	01
*		WN374400	P.C.B. VIDEO		J	PCB VIDEO	
*		WN374500	P.C.B. VIDEO		UCRTKABGEF	PCB VIDEO	
	CB302	VB858700	CN.BS.PIN 8P			ベースピン	01
	CB303	VB858600	CN.BS.PIN 7P			ベースピン	01
	CB304	V7827200	SOCKET 5P TE TUC SERIES			コネクターソケット	
	CB305	VQ045500	CN.BS.PIN 26P			FFCコネクター	02
	CB351-354	WD398400	CN.DIN 14P YKF45-3011		J	DINコネクタ	05
	CB355	V7827200	SOCKET 5P TE TUC SERIES			コネクターソケット	
	CB356	VQ044700	CN.BS.PIN 16P			FFCコネクター	01
	C3001-3004	US135100	C.CE.CHP 0.1uF 16V		J	チップセラコン	01
	C3005-3013	US062100	C.CE.CHP 100pF 50V B			チップセラコン	01
	C3015-3020	US135100	C.CE.CHP 0.1uF 16V			チップセラコン	01
	C3021-3023	US062220	C.CE.CHP 220pF 50V B			チップセラコン	01
	C3025	UR237470	C.EL 47uF 16V			ケミコン	01
	C3026	US135100	C.CE.CHP 0.1uF 16V			チップセラコン	01
	C3027	US062220	C.CE.CHP 220pF 50V B			チップセラコン	01
	C3028	UR267100	C.EL 10uF 50V			ケミコン	
	C3029-3033	US135100	C.CE.CHP 0.1uF 16V			チップセラコン	01
	C3034	UR267100	C.EL 10uF 50V			ケミコン	
	C3035	US135100	C.CE.CHP 0.1uF 16V			チップセラコン	01
	C3043	US135100	C.CE.CHP 0.1uF 16V			チップセラコン	01
	C3045-3050	UR837470	C.EL 47uF 16V			ケミコン	01
	C3052-3053	UR837470	C.EL 47uF 16V			ケミコン	01
	C3054	US135100	C.CE.CHP 0.1uF 16V			チップセラコン	01
	C3055-3056	US062220	C.CE.CHP 220pF 50V B			チップセラコン	01
	C3057-3063	US135100	C.CE.CHP 0.1uF 16V			チップセラコン	01

※ New Parts ＊新規部品

P.C.B. VIDEO

Ref No.	Part No.	Description			Remarks	Markets	部 品 名	ランク
C3064-3065	US062390	C.CE.CHP	390pF	50V B			チップセラコン	01
C3067-3068	US062100	C.CE.CHP	100pF	50V B			チップセラコン	01
C3069-3070	UR837100	C.EL	10uF	16V			ケミコン	01
C3074-3076	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3077-3078	UR237470	C.EL	47uF	16V			ケミコン	01
C3084	UR237470	C.EL	47uF	16V			ケミコン	01
C3087	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3091	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3092	UR238220	C.EL	220uF	16V			ケミコン	01
C3093	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3096	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3097	UR237470	C.EL	47uF	16V			ケミコン	01
C3098	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3100	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3101	UR238220	C.EL	220uF	16V			ケミコン	01
C3102	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3105	UR267330	C.EL	33uF	50V			ケミコン	01
C3106	UR266100	C.EL	1uF	50V			ケミコン	01
C3501-3503	US060800	C.CE.CHP	8pF	50V B			チップセラコン	01
C3504-3515	US064100	C.CE.CHP	0.01uF	50V B		J	チップセラコン	01
C3516-3518	US060800	C.CE.CHP	8pF	50V B		J	チップセラコン	01
C3519	UR237470	C.EL	47uF	16V			ケミコン	01
C3520-3521	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3522	UR837470	C.EL	47uF	16V			ケミコン	01
C3523	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3524	UR837470	C.EL	47uF	16V			ケミコン	01
C3525	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3526	UR837470	C.EL	47uF	16V			ケミコン	01
C3527	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3528-3530	UR837470	C.EL	47uF	16V			ケミコン	01
C3531-3532	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3534	US135100	C.CE.CHP	0.1uF	16V		J	チップセラコン	01
C3535	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3536	UR837470	C.EL	47uF	16V			ケミコン	01
C3537	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3538	UR837470	C.EL	47uF	16V			ケミコン	01
C3539	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3540	UR837470	C.EL	47uF	16V			ケミコン	01
C3541	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3542-3544	UR837470	C.EL	47uF	16V			ケミコン	01
C3545-3547	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3548	US135100	C.CE.CHP	0.1uF	16V		J	チップセラコン	01
C3550	UR237470	C.EL	47uF	16V			ケミコン	01
C3551-3553	US060300	C.CE.CHP	3pF	50V B			チップセラコン	01
C3554	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3555	UR837470	C.EL	47uF	16V			ケミコン	01
C3556	UR238330	C.EL	330uF	16V			ケミコン	01
C3558	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3559	UR837470	C.EL	47uF	16V			ケミコン	01
C3560	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3561	UR837470	C.EL	47uF	16V			ケミコン	01
C3562	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3563	UR837470	C.EL	47uF	16V			ケミコン	01
C3564	US135100	C.CE.CHP	0.1uF	16V			チップセラコン	01
C3565-3566	UR837470	C.EL	47uF	16V			ケミコン	01

＊New Parts　＊新規部品


P.C.B. VIDEO

Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
C3567	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
C3568	UR866100	C.EL	1uF 50V			ケミコン	01
C3573	US135100	C.CE.CHP	0.1uF 16V			チップセラコン	01
D3002-3003	VT332900	DIODE	1SS355			ダイオード	01
D3502	VT332900	DIODE	1SS355		J	ダイオード	01
D3504	VT332900	DIODE	1SS355		J	ダイオード	01
D3506	VT332900	DIODE	1SS355		J	ダイオード	01
D3510	VT332900	DIODE	1SS355			ダイオード	01
IC301	X8083A00	IC	TC4051BF			ロジックＩＣ	02
IC302-303	XY549A00	IC	TC74HC4051AFEL			ロジックＩＣ	02
IC304	XY879A00	IC	TC74HC4053AF(EL)			ロジックＩＣ	03
IC305	X8274A00	IC	NJM2388F09			電源ＩＣ	
IC331	X7378A00	IC	NJM4565M(TE1)			アンプＩＣ	01
IC332-333	X6742A00	IC	LA73050-TLM-E			アンプＩＣ	04
IC351	X2904A00	IC	NJM2581M VIDEO AMP			アンプＩＣ	06
IC383	XS790A00	IC	TC74HC4052AF MPX		J	ロジックＩＣ	02
IC392	X6757A00	IC	NJW1321FP1			ＩＣ	08
JK301-302	WD396100	JACK.PIN	LAP5100-1801FC			ピンジャック	04
JK303	WD396300	JACK.PIN	LAP5100-1601FC			ピンジャック	04
PJ351-352	WG471900	JACK.PIN	6P			ピンジャック 6Ｐ	03
* PN301	WN515200	PIN	L=70 #20			スタイルピン	
Q3001-3003	VR936300	TR	2SA1576A T106			トランジスタ	01
Q3004-3006	VV655700	TR.DGT	DTC144EKA			デジタルトランジスタ	01
Q3300	WH628700	FET	RSR025P03TL			ＦＥＴ	
Q3301	VV556400	TR	2SC2412K Q,R,S			トランジスタ	01
Q3501	WC435000	TR.DGT	KRC102S-RTK			デジタルトランジスタ	01
R3093-3094	HV754150	R.CAR.FP	15Ω 1/4W			不燃化カーボン抵抗	01
R3103-3104	HV753100	R.CAR.FP	1Ω 1/4W			不燃化カーボン抵抗	01
R3111	HV753100	R.CAR.FP	1Ω 1/4W			不燃化カーボン抵抗	01
R3114-3115	HV753100	R.CAR.FP	1Ω 1/4W			不燃化カーボン抵抗	01
R3534	HV753100	R.CAR.FP	1Ω 1/4W			不燃化カーボン抵抗	01
R3541	HV753100	R.CAR.FP	1Ω 1/4W		J	不燃化カーボン抵抗	01
R3542	HV753100	R.CAR.FP	1Ω 1/4W			不燃化カーボン抵抗	01
R3546	HV753100	R.CAR.FP	1Ω 1/4W		J	不燃化カーボン抵抗	01
R3559	HV753100	R.CAR.FP	1Ω 1/4W			不燃化カーボン抵抗	01
ST301	V4040500	SCR.TERM	M3			スクリュー／ターミナル	01
ST351	V4040500	SCR.TERM	M3			スクリュー／ターミナル	01
ST352	V4040500	SCR.TERM	M3		UCRTKABGEFL	スクリュー／ターミナル	01

＊ New Parts ＊ 新規部品


Chip Resistors

Value	**1/4W** Type Part No.	**1/6W** Type Part No.	Value	**1/4W** Type Part No.	**1/6W** Type Part No.
1.0 Ω	HJ35 3100	HF85 3100	10 kΩ	HF45 7100	HF45 7100
1.8 Ω	HJ35 3180	＊	11 kΩ	HF45 7110	HF45 7110
2.2 Ω	HJ35 3220	HF85 3220	12 kΩ	HJ35 7120	HF85 7120
3.3 Ω	HJ35 3330	HF85 3330	13 kΩ	HF45 7130	HF45 7130
4.7 Ω	HJ35 3470	HF85 3470	15 kΩ	HF45 7150	HF45 7150
5.6 Ω	HJ35 3560	HF85 3560	18 kΩ	HF45 7180	HF45 7180
10 Ω	HF45 4100	HF45 4100	22 kΩ	HF45 7220	HF45 7220
15 Ω	HJ35 4150	HF85 4150	24 kΩ	HF45 7240	HF45 7240
22 Ω	HF45 4220	HF45 4220	27 kΩ	HJ35 7270	HF85 7270
27 Ω	HJ35 4270	HF85 4270	30 kΩ	HF45 7300	HF45 7300
33 Ω	HF45 4330	HF45 4330	33 kΩ	HF45 7330	HF45 7330
39 Ω	HJ35 4470	HF85 4390	36 kΩ	HF45 7360	HF45 7360
47 Ω	HF45 4470	HF45 4470	39 kΩ	HF45 7390	HF45 7390
56 Ω	HF45 4560	HF45 4560	47 kΩ	HF45 7470	HF45 7470
68 Ω	HF45 4680	HF45 4680	51 kΩ	HF45 7510	HF45 7510
75 Ω	HF45 4750	HF45 4750	56 kΩ	HF45 7560	HF45 7560
82 Ω	HF45 4820	HF45 4820	62 kΩ	HF45 7620	HF45 7620
91 Ω	HF45 4910	HF45 4910	68 kΩ	HF45 7680	HF45 7680
100 Ω	HF45 5100	HF45 5100	82 kΩ	HF45 7820	HF45 7820
110 Ω	HJ35 5110	HF85 5110	91 kΩ	HF45 7910	HF45 7910
120 Ω	HF45 5120	HF45 5120	100 kΩ	HF45 8100	HF45 8100
150 Ω	HF45 5150	HF45 5150	110 kΩ	HF45 8110	HF45 8110
160 Ω	HJ35 5160	＊	120 kΩ	HF45 8120	HF45 8120
180 Ω	HF45 5180	HF45 5180	150 kΩ	HF45 8150	HF45 8150
200 Ω	HF45 5200	HF45 5200	180 kΩ	HF45 8180	HF45 8180
220 Ω	HF45 5220	HF45 5220	220 kΩ	HJ35 8220	HF85 8220
270 Ω	HF45 5270	HF45 5270	270 kΩ	HF45 8270	HF45 8270
330 Ω	HF45 5330	HF45 5330	300 kΩ	HF45 8300	HF45 8300
390 Ω	HF45 5390	HF45 5390	330 kΩ	HF45 8330	HF45 8330
430 Ω	HF45 5430	HF45 5430	390 kΩ	HJ35 8390	HF85 8390
470 Ω	HF45 5470	HF45 5470	470 kΩ	HF45 8470	HF45 8470
510 Ω	HF45 5510	HF45 5510	560 kΩ	HJ35 8560	HF85 8560
560 Ω	HF45 5560	HF45 5560	680 kΩ	HJ35 8680	HF85 8680
680 Ω	HF45 5680	HF45 5680	820 kΩ	HJ35 8820	HF85 8820
820 Ω	HF45 5820	HF45 5820	1.0 MΩ	HF45 9100	HF45 9100
910 Ω	HF45 5910	HF45 5910	1.2 MΩ	HJ35 9120	＊
1.0 kΩ	HF45 6100	HF45 6100	1.5 MΩ	HJ35 9150	HF85 9150
1.2 kΩ	HF45 6120	HF45 6120	1.8 MΩ	HJ35 9180	HF85 9180
1.5 kΩ	HF45 6150	HF45 6150	2.2 MΩ	HJ35 9220	HF85 9220
1.8 kΩ	HF45 6180	HF45 6180	3.3 MΩ	HJ35 9330	HF85 9330
2.0 kΩ	HJ35 6200	HF85 6200	3.9 MΩ	HJ35 9390	＊
2.2 kΩ	HF45 6220	HF45 6220	4.7 MΩ	HJ35 9470	HF85 9470
2.4 kΩ	HJ35 6240	HF85 6240			
2.7 kΩ	HF45 6270	HF45 6270			
3.0 kΩ	HF45 6300	HF45 6300			
3.3 kΩ	HF45 6330	HF45 6330			
3.6 kΩ	HJ35 6360	HF85 6360			
3.9 kΩ	HF45 6390	HF45 6390			
4.7 kΩ	HF45 6470	HF45 6470			
5.1 kΩ	HF45 6510	HF45 6510			
5.6 kΩ	HF45 6560	HF45 6560			
6.8 kΩ	HF45 6680	HF45 6680			
8.2 kΩ	HF45 6820	HF45 6820			
9.1 kΩ	HF45 6910	HF45 6910			

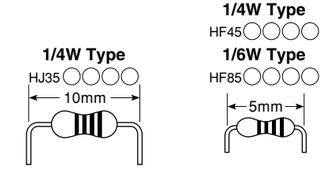

＊ : Not available

• OVERALL ASS'Y

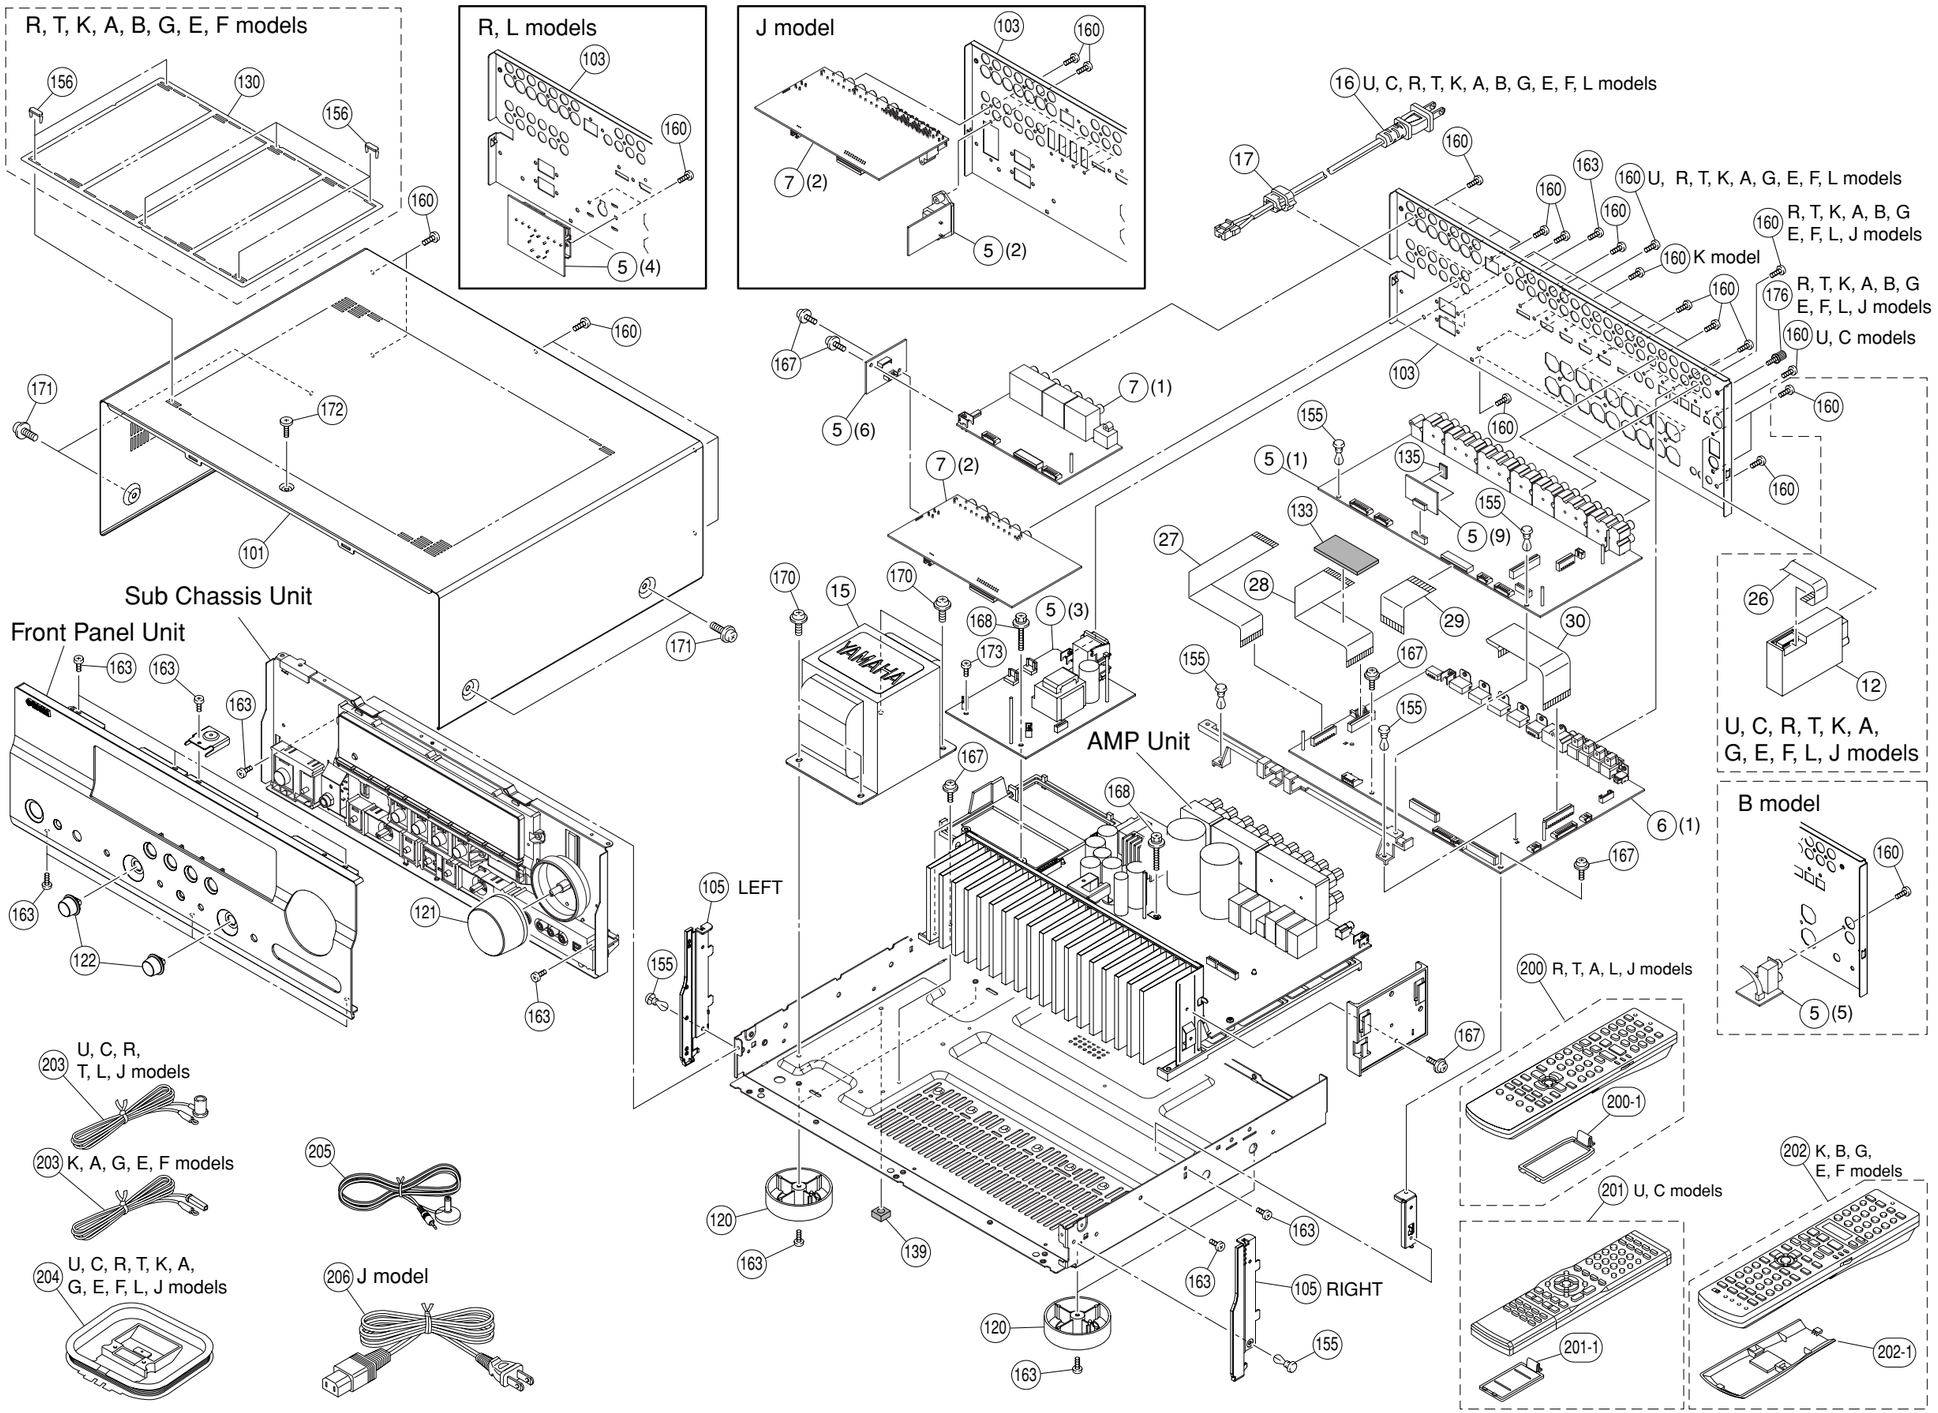


	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
*	5	WN373100	P.C.B. ASS'Y	FUNCTION		J	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN374200	P.C.B. ASS'Y	FUNCTION		U	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN374200	P.C.B. ASS'Y	FUNCTION	V663	C	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN374300	P.C.B. ASS'Y	FUNCTION	6160	C	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN373400	P.C.B. ASS'Y	FUNCTION		R	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN373500	P.C.B. ASS'Y	FUNCTION		T	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN373600	P.C.B. ASS'Y	FUNCTION		K	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN373700	P.C.B. ASS'Y	FUNCTION		A	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN373800	P.C.B. ASS'Y	FUNCTION		B	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN373900	P.C.B. ASS'Y	FUNCTION		GEF	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	5	WN374000	P.C.B. ASS'Y	FUNCTION		L	ＰＣＢ ＦＵＮＣＴＩＯＮ	
*	6	WN252300	P.C.B. ASS'Y	DIGITAL		J	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN252400	P.C.B. ASS'Y	DIGITAL	V663	U	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN254200	P.C.B. ASS'Y	DIGITAL	6160	U	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN252400	P.C.B. ASS'Y	DIGITAL	V663	C	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN254300	P.C.B. ASS'Y	DIGITAL	6160	C	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN253000	P.C.B. ASS'Y	DIGITAL		R	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN253100	P.C.B. ASS'Y	DIGITAL		T	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN253200	P.C.B. ASS'Y	DIGITAL		K	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN253300	P.C.B. ASS'Y	DIGITAL		A	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN253400	P.C.B. ASS'Y	DIGITAL		B	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN254000	P.C.B. ASS'Y	DIGITAL	V663	GEF	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN254400	P.C.B. ASS'Y	DIGITAL	6160	F	ＰＣＢ ＤＩＧＩＴＡＬ	
*	6	WN254100	P.C.B. ASS'Y	DIGITAL		L	ＰＣＢ ＤＩＧＩＴＡＬ	
*	7	WN374400	P.C.B. ASS'Y	VIDEO		J	ＰＣＢ ＶＩＤＥＯ	
*	7	WN374500	P.C.B. ASS'Y	VIDEO		UCRTKABGEFL	ＰＣＢ ＶＩＤＥＯ	
	12	WB877200	AM/FM TUNER	FAE381-J07F		J	ＡＭ／ＦＭチューナー	12
	12	WB877300	AM/FM TUNER	FAE381-A07F		UCRTL	ＡＭ／ＦＭチューナー	
	12	WB877400	AM/FM TUNER	FAE481-E07F		KAGEF	ＡＭ／ＦＭチューナー	
* ⚠	15	X9525A00	POWER TRANSFORMER			J	電源トランス	
* ⚠	15	X9529A00	POWER TRANSFORMER			UC	電源トランス	
* ⚠	15	X9530A00	POWER TRANSFORMER			RL	電源トランス	
* ⚠	15	X9568A00	POWER TRANSFORMER			TK	電源トランス	
* ⚠	15	X9569A00	POWER TRANSFORMER			A	電源トランス	
* ⚠	15	X9528A00	POWER TRANSFORMER			BGEF	電源トランス	
⚠	16	V9293500	POWER CABLE	2m		UC	電源コード	
⚠	16	WC992700	POWER CABLE	2m		R	電源コード	
⚠	16	WB120600	POWER CABLE	2m		T	電源コード	
⚠	16	WC753000	POWER CABLE	2m		K	電源コード	
⚠	16	WC743700	POWER CABLE	2m		A	電源コード	
⚠	16	WB212200	POWER CABLE	2m		B	電源コード	
⚠	16	V9293600	POWER CABLE	2m		GEFL	電源コード	
	17	V2438700	CORD STOPPER	10P1		UCRTKABGEFL	コードストッパー	02
	26	MF113120	FLEXIBLE FLAT CABLE	13P 120mm P=1.25		JUCRTKAGEFL	カード電線 Ｃ＆Ｃ	01
*	27	WP241800	FLEXIBLE FLAT CABLE	16P 140mm P=1.25			カード電線 Ｃ＆Ｃ	
*	28	WP242100	FLEXIBLE FLAT CABLE	26P 120mm P=1.25			カード電線 Ｃ＆Ｃ	
	29	MF124070	FLEXIBLE FLAT CABLE	24P 70mm P=1.25			カード電線 Ｃ＆Ｃ	01
*	30	WP242000	FLEXIBLE FLAT CABLE	25P 120mm P=1.25			カード電線 Ｃ＆Ｃ	
	101	WG364700	TOP COVER		GD		トップカバー	11
	101	WG364600	TOP COVER		BL		トップカバー	
	101	WG364800	TOP COVER		TI		トップカバー	
*	103	WM736200	REAR PANEL		AX763	J	リヤパネル	
*	103	WM735300	REAR PANEL		V663	UC	リヤパネル	
*	103	WM735500	REAR PANEL		V663	R	リヤパネル	
*	103	WM735600	REAR PANEL		V663	T	リヤパネル	
*	103	WM735700	REAR PANEL		V663	K	リヤパネル	
*	103	WM735800	REAR PANEL		V663	A	リヤパネル	
*	103	WM735900	REAR PANEL		AX763	B	リヤパネル	
*	103	WM736000	REAR PANEL		V663	GEF	リヤパネル	
*	103	WM736100	REAR PANEL		V663	L	リヤパネル	

＊New Parts ＊新規部品

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
*	103	WM736300	REAR PANEL		6160	U	リヤパネル	
*	103	WM736400	REAR PANEL		6160	C	リヤパネル	
*	103	WM736500	REAR PANEL		6160	F	リヤパネル	
	105	WK437600	PLATE SIDE		GD		プレートサイド	
	105	WK437500	PLATE SIDE		BL		プレートサイド	
	105	WK437700	PLATE SIDE		TI		プレートサイド	
	112	WM738000	SUPPORT PCB/F				サポートＰＣＢ／Ｆ	
	120	V0042500	LEG	D60xH21 GD	GD		レッグ	03
	120	VS025000	LEG	D60xH21 HS	BL, TI		レッグ	02
*	121	WM737800	KNOB D50		GD		ノブＤ５０	
*	121	WM737700	KNOB D50		BL		ノブＤ５０	
*	121	WM737900	KNOB D50		TI		ノブＤ５０	
	122	WJ182100	KNOB D20	PROGRAM/INPUT	GD		ノブＤ２０	02
	122	WJ182000	KNOB D20	PROGRAM/INPUT	BL		ノブＤ２０	
	122	WJ182200	KNOB D20	PROGRAM/INPUT	TI		ノブＤ２０	
	131	WK667900	SHEET TOP			RTKABGEF	シート トップ	
	133	V6742300	DAMPER	3/30/60			ダンパー	
	135	WE812900	DAMPER	18x12 t=2			ダンパー	
	139	WC879000	DAMPER	SCREW MASK			ダンパー	
	155	VQ368600	PUSH RIVET	P3555-B			プッシュリベット	01
	156	WJ053800	RIVET TOP			RTKABGEF	リベットトップ	
	160	WE774100	BIND HEAD BONDING B-T. SCREW	3x8 MFZN2B3			ボンディングＢタイトネジ	01
	163	WE774300	BIND HEAD B-TIGHT SCREW	3x8 MFZN2W3			バインドＢタイトネジ	01
	167	WF002600	PW HEAD B-TIGHT SCREW	3x8 MFZN2W3			ＰＷヘッドＢタイトネジ	01
	168	WH010900	SCREW IC	3x20 MFZN2W3			スクリュー ＩＣ	
	170	WE774700	BIND HEAD S-TIGHT SCREW	4x10 MFZN2W3			バインドＳタイトネジ	01
	171	VD069600	PW HEAD S-TIGHT SCREW	4x8-10 MFNI33	GD, TI		ＰＷヘッドＳタイトネジ	01
	171	VH313200	PW HEAD S-TIGHT SCREW	4x8-10 MFNI3BL	BL		ＰＷヘッドＳタイトネジ	01
	172	WE200400	DISH HEAD B-TIGHT SCREW	3x6 MFNI33	GD, TI		ＤＩＳＨ Ｂタイトネジ	01
	172	WE200500	DISH HEAD B-TIGHT SCREW	3x6 MFNI3BL	BL		ＤＩＳＨ Ｂタイトネジ	01
	173	WE774800	BIND HEAD P-TIGHT SCREW	3x8 MFZN2W3			バインドＰタイトネジ	01
	176	AA627310	GROUND TERMINAL			JRTABGEF	ＧＮＤターミナル	01
			ACCESSORIES				付属品	
*	200	WM873900	REMOTE CONTROL	RAV330		JRTAL	リモコン	
	200-1	AAX76600	BATTERY COVER		UR76EC6103A	JRTAL	電池蓋	04
*	201	WN058300	REMOTE CONTROL	RAV285		UC	リモコン	
	201-1	AAX82380	BATTERY COVER		CG-2209	UC	電池蓋	
*	202	WM885300	REMOTE CONTROL	RAV372		KBGEF	リモコン	
	202-1	AAX59640	BATTERY COVER		3139 238 08051	KBGEF	電池蓋	02
	203	V6267000	INDOOR FM ANTENNA	1.4m 1pc		JUCRTL	ＦＭ簡易アンテナ	03
	203	VQ147100	INDOOR FM ANTENNA	1.4m 1pc		KAGEF	ＦＭ簡易アンテナ	02
	204	VR248500	AM LOOP ANTENNA	1.0m 1pc		JUCRTKAGEFL	ＡＭループアンテナ	03
	205	WJ264300	OPTIMIZER MICROPHONE	6m 1pc			オプティマイザーマイク	08
⚠	206	WA642300	POWER CABLE	2m 1pc		J	電源コード	07
			BATTERY	R6,AA,UM-3 2pcs		JRTAL	単３乾電池	
			BATTERY	R03,AAA,UM-4 2pcs		UC	単４乾電池	
			BATTERY	R03,AAA,UM-4 4pcs		KBGEF	単４乾電池	
			SERVICE TOOLS				サービス用部品	
		AAX77610	RS232C CONVERSION ADAPTER	with CABLE(9P)			ＲＳ２３２Ｃ変換アダプタ	
		MF116400	FLEXIBLE FLAT CABLE	16P 400mm P=1.25			カード電線 Ｃ＆Ｃ	
		MF125400	FLEXIBLE FLAT CABLE	25P 400mm P=1.25			カード電線 Ｃ＆Ｃ	
		MF126500	FLEXIBLE FLAT CABLE	26P 500mm P=1.25			カード電線 Ｃ＆Ｃ	

＊New Parts ＊新規部品


• FRONT PANEL and SUB CHASSIS UNIT

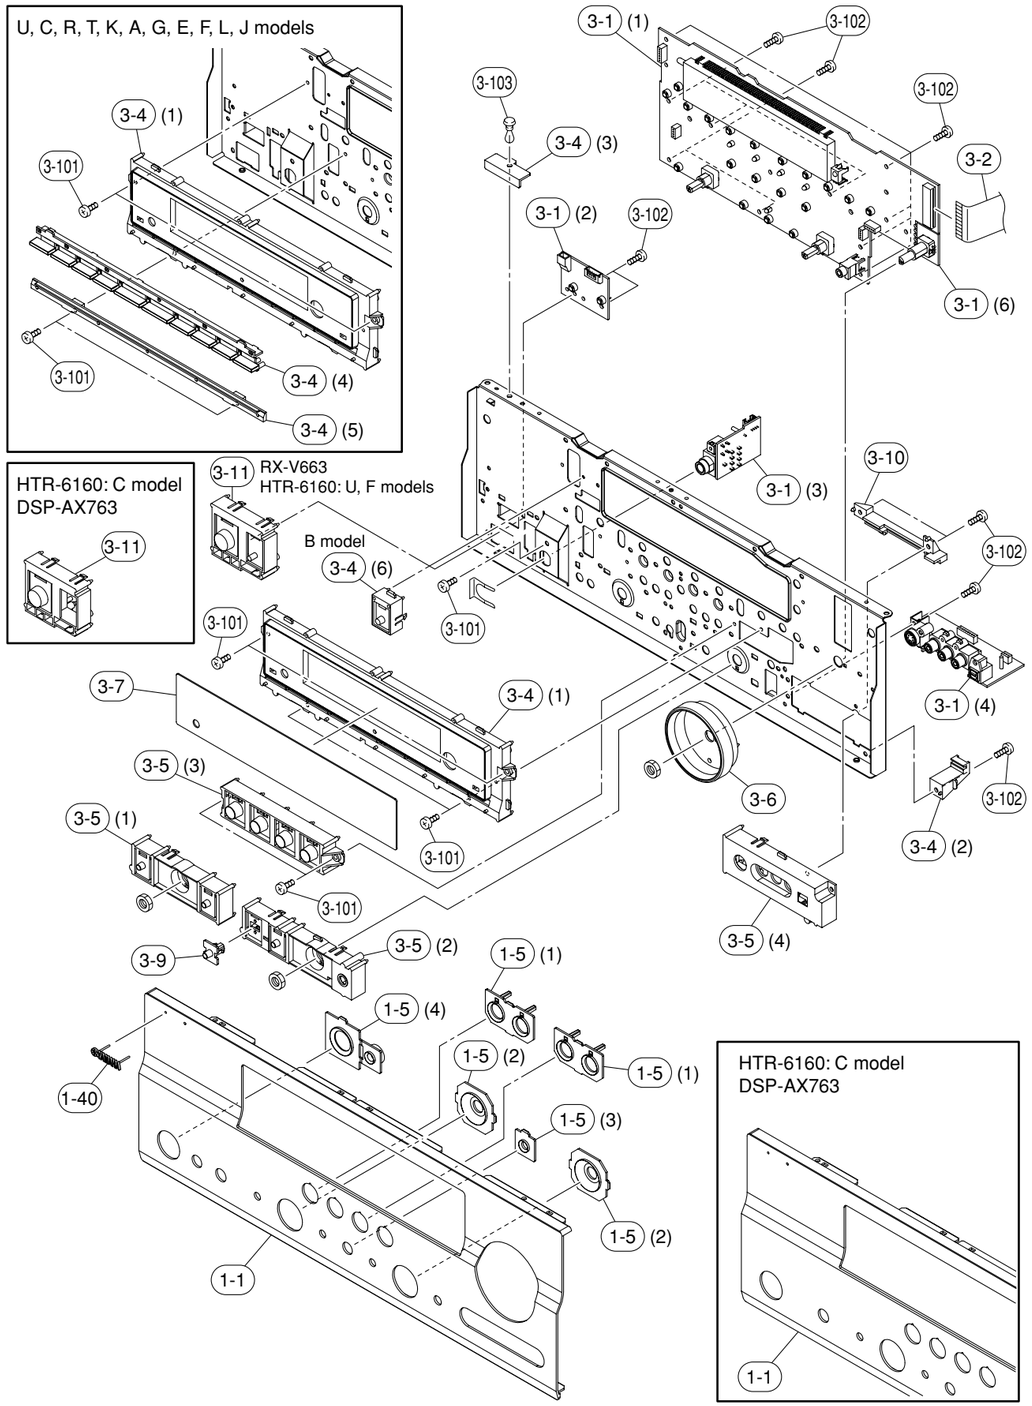

	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
*	1-1	WM739300	FRONT PANEL		AX763GD	J	フロントパネル	
*	1-1	WM739200	FRONT PANEL		V663GD	RT	フロントパネル	
*	1-1	WM958800	FRONT PANEL		AX763BL	J	フロントパネル	
*	1-1	WM738600	FRONT PANEL		V663BL	UC	フロントパネル	
*	1-1	WM738700	FRONT PANEL		V663BL	RAGEF	フロントパネル	
*	1-1	WM958700	FRONT PANEL		AX763BL	B	フロントパネル	
*	1-1	WM739900	FRONT PANEL		V663TI	KGEFL	フロントパネル	
*	1-1	WM740000	FRONT PANEL		AX763TI	B	フロントパネル	
*	1-1	WM738800	FRONT PANEL		6160BL	U	フロントパネル	
*	1-1	WN083300	FRONT PANEL		6160BL	C	フロントパネル	
*	1-1	WM738900	FRONT PANEL		6160BL	F	フロントパネル	
*	1-1	WM740100	FRONT PANEL		6160TI		フロントパネル	
*	1-5	WM740600	ESCUTCHEON ASS'Y		GD		エスカッションＡＳＳＹ	
*	1-5	WM740500	ESCUTCHEON ASS'Y		BL		エスカッションＡＳＳＹ	
*	1-5	WM740700	ESCUTCHEON ASS'Y		TI		エスカッションＡＳＳＹ	
	1-40	V6034200	EMBLEM		GD		エンブレム	03
	1-40	V6034100	EMBLEM		BL, TI		エンブレム	03
*	3-1	WN378100	P.C.B. ASS'Y	OPERATION		J	ＰＣＢ　ＯＰＥＲＡＴＩＯＮ	
*	3-1	WN378200	P.C.B. ASS'Y	OPERATION		URTKAGEFL	ＰＣＢ　ＯＰＥＲＡＴＩＯＮ	
*	3-1	WN378200	P.C.B. ASS'Y	OPERATION	V863	C	ＰＣＢ　ＯＰＥＲＡＴＩＯＮ	
*	3-1	WN378400	P.C.B. ASS'Y	OPERATION	6180	C	ＰＣＢ　ＯＰＥＲＡＴＩＯＮ	
*	3-1	WN378300	P.C.B. ASS'Y	OPERATION		B	ＰＣＢ　ＯＰＥＲＡＴＩＯＮ	
*	3-2	WP242200	FLEXIBLE FLAT CABLE	26P 250mm P=1.25			カード電線　Ｃ＆Ｃ	
	3-4	WJ183200	SUBPANEL			JUCRTKAGEFL	サブパネル	04
*	3-4	WJ183300	SUBPANEL			B	サブパネル	
*	3-5	WM741300	BUTTON CASE 863		GD		ボタンケース８６３	
*	3-5	WM741100	BUTTON CASE 863		BL		ボタンケース８６３	
*	3-5	WM741400	BUTTON CASE 863		TI		ボタンケース８６３	
*	3-6	WM737500	ESCUTCHEON VOL		GD		エスカッションＶＯＬ	
*	3-6	WM737400	ESCUTCHEON VOL		BL		エスカッションＶＯＬ	
*	3-6	WM737600	ESCUTCHEON VOL		TI		エスカッションＶＯＬ	
*	3-7	WM741800	SHEET WINDOW			J	シートウインドウ	
*	3-7	WN081600	SHEET WINDOW			U	シートウインドウ	
*	3-7	WN081600	SHEET WINDOW		V863	C	シートウインドウ	
*	3-7	WM741900	SHEET WINDOW		6160	C	シートウインドウ	
*	3-7	WM741600	SHEET WINDOW			RTKAGEFL	シートウインドウ	
*	3-7	WM741700	SHEET WINDOW			B	シートウインドウ	
	3-9	WJ184100	LENS BUTTON				ボタンレンズ	01
	3-10	WJ917000	SUPPORT AUX		GD		サポートＡＵＸ	01
	3-10	WJ916900	SUPPORT AUX		BL		サポートＡＵＸ	
	3-10	WJ917100	SUPPORT AUX		TI		サポートＡＵＸ	
*	3-11	WM736900	BUTTON STANDBY		AX863GD		ボタン　スタンバイ	
*	3-11	WM736700	BUTTON STANDBY		AX863BL		ボタン　スタンバイ	
*	3-11	WM737100	BUTTON STANDBY		AX863TI		ボタン　スタンバイ	
*	3-11	WM736700	BUTTON STANDBY		6160BL	C	ボタン　スタンバイ	
*	3-11	WM736800	BUTTON MAIN		V863GD		ボタン　ＭＡＩＮ	
*	3-11	WM736600	BUTTON MAIN		V863BL		ボタン　ＭＡＩＮ	
*	3-11	WM737000	BUTTON MAIN		V863TI		ボタン　ＭＡＩＮ	
*	3-11	WM736600	BUTTON MAIN		6160BL	UF	ボタン　ＭＡＩＮ	
*	3-11	WM737000	BUTTON MAIN		6160TI		ボタン　ＭＡＩＮ	
	3-101	WE774300	BIND HEAD B-TIGHT SCREW	3x8 MFZN2W3			バインドＢタイトネジ	01
	3-102	WE774800	BIND HEAD P-TIGHT SCREW	3x8 MFZN2W3			バインドＰタイトネジ	01
	3-103	VQ368600	PUSH RIVET	P3555-B			プッシュリベット	01

＊New Parts　＊新規部品

• AMP UNIT

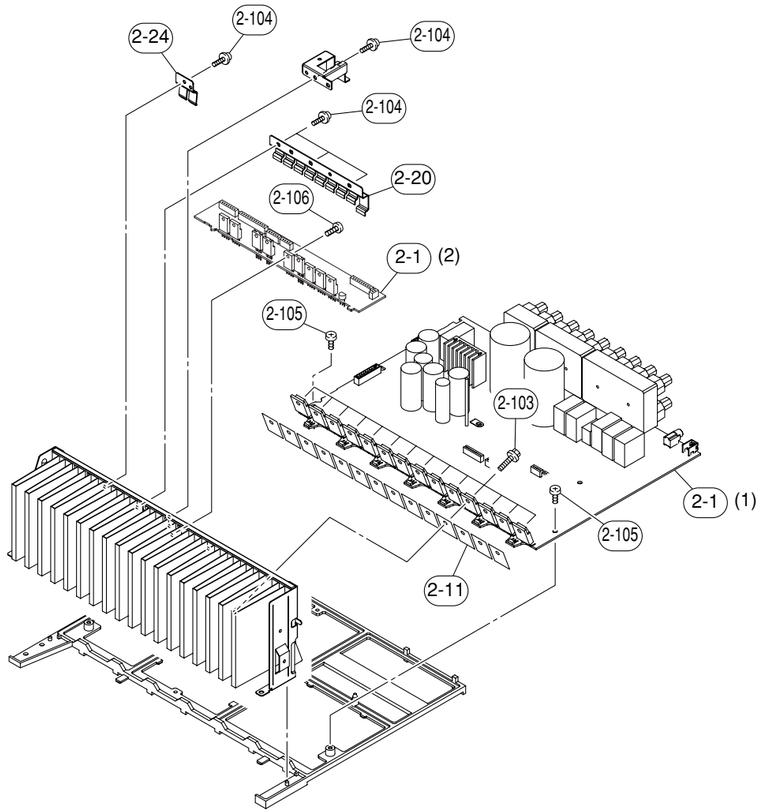


	Ref No.	Part No.	Description		Remarks	Markets	部 品 名	ランク
*	2-1	WN372500	P.C.B. ASS'Y	MAIN		J	ＰＣＢ　ＭＡＩＮ	
*	2-1	WN372600	P.C.B. ASS'Y	MAIN		U	ＰＣＢ　ＭＡＩＮ	
*	2-1	WN372600	P.C.B. ASS'Y	MAIN	V663	C	ＰＣＢ　ＭＡＩＮ	
*	2-1	WN373000	P.C.B. ASS'Y	MAIN	6160	C	ＰＣＢ　ＭＡＩＮ	
*	2-1	WN372700	P.C.B. ASS'Y	MAIN		RTA	ＰＣＢ　ＭＡＩＮ	
*	2-1	WN372800	P.C.B. ASS'Y	MAIN		KGEFL	ＰＣＢ　ＭＡＩＮ	
*	2-1	WN372900	P.C.B. ASS'Y	MAIN		B	ＰＣＢ　ＭＡＩＮ	
*	2-11	WM280900	MICA SHEET	TBM-51W			マイカシート	
	2-20	WG440600	SUPPORT TR-8P				サポートＴＲ－８Ｐ	04
	2-24	WJ402000	SUPPORT TR-2P				サポートＴＲ－２Ｐ	01
*	2-103	WM220800	HEXAGONAL HEAD B-TIGHT SCREW	3x15 SP MFZN2W3			６角Ｂタイトネジ	
	2-104	WF002600	PW HEAD B-TIGHT SCREW	3x8 MFZN2W3			ＰＷヘッドＢタイトネジ	01
	2-105	WE774800	BIND HEAD P-TIGHT SCREW	3x8 MFZN2W3			バインドＰタイトネジ	01
	2-106	WE774300	BIND HEAD B-TIGHT SCREW	3x8 MFZN2W3			バインドＢタイトネジ	01

＊ New Parts　＊ 新規部品

■ REMOTE CONTROL

● RAV285 (U, C models)


• SCHEMATIC DIAGRAM

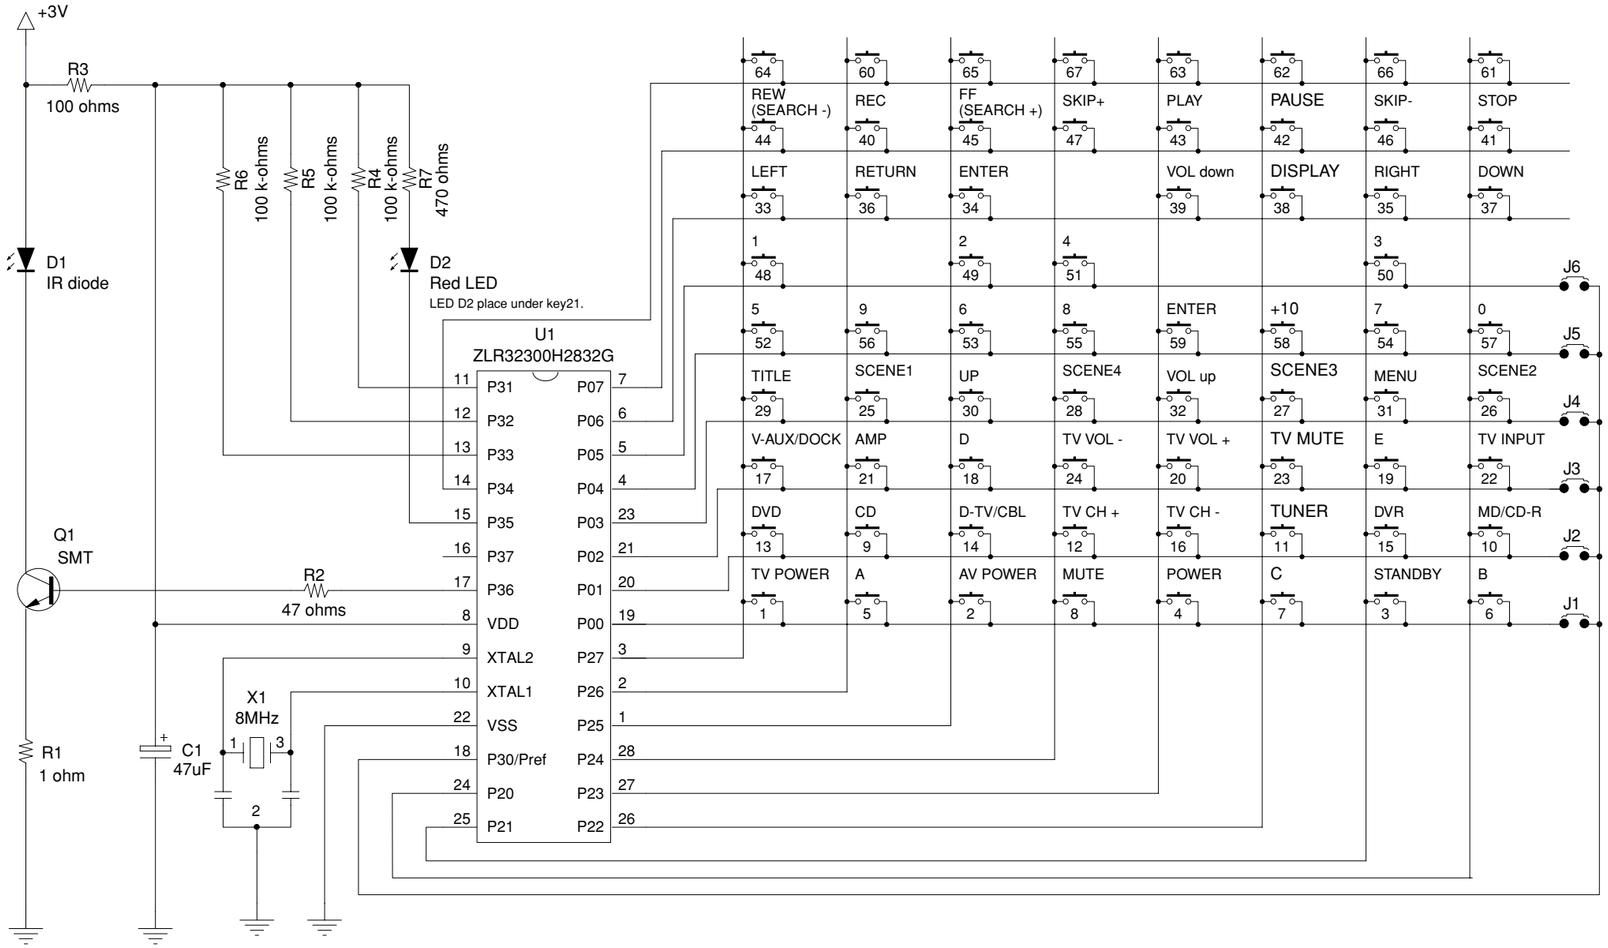


	RAV285
J1	X
J2	X
J3	X
J4	X
J5	X
J6	O

• PANELS

RAV285 (U, C models)

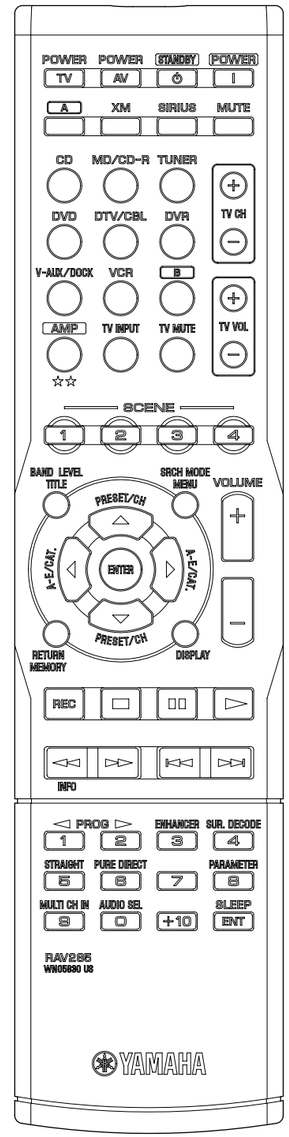

- **KEY NO. LAYOUT**

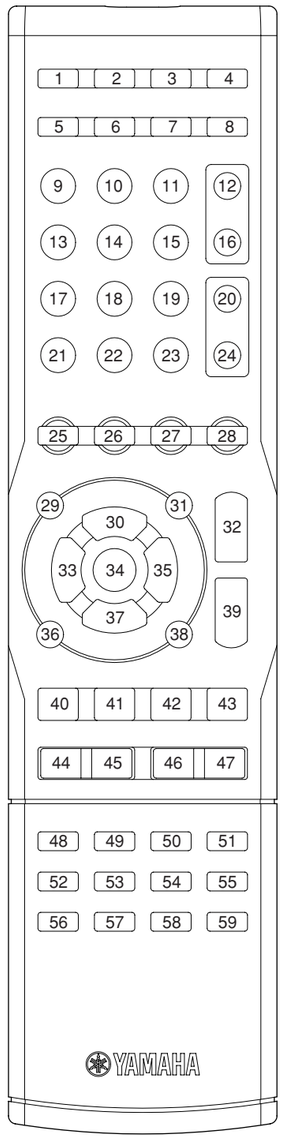


- **KEY CODE**

Key No.	Label	Command key	AMP ID1	AMP ID2										
1	TV POWER	–	(TV POWER)	(TV POWER)	(TV POWER)	(TV POWER)	(TV POWER)	(TV POWER)	(TV POWER)	–	(TV POWER)	(TV POWER)	(TV POWER)	TV POWER
2	AV POWER	–	(device)	(device)	79-60	7F-80	D1-1B	–	7C-80	(DVR POWER)	048.012	7F01-00	–	(DVR POWER)
3	STANDBY	O	7E-7F	7E-7F81	STANDBY									
4	POWER	O	7E-7E	7E-7E80	POWER									
5	A	O	7F01-3F	7F01-3FC1	A									
6	B	O	7A-B4	7A-B44A	B									
7	C	O	7A-39	7A-39C7	C									
8	MUTE	O	7A-1C	7A-1CE2	MUTE									
9	CD	O	7A-15	7A-15EB	CD									
10	MD/CD-R	O	7A-C9	7A-C937	MD/CD-R									
11	TUNER	O	7A-16	7A-16E8	TUNER									
12	TV CH +	–	(TV CH +)	(TV CH +)	(TV CH +)	(TV CH +)	(TV CH +)	(TV CH +)	(TV CH +)	–	(TV CH +)	(TV CH +)	(TV CH +)	(TV CH +)
13	DVD	O	7A-C1	7A-C13F	DVD									
14	D-TV/CBL	O	7A-54	7A-54AA	DTV/CBL									
15	DVR	O	7A-13	7A-13ED	DVR									
16	TV CH -	–	(TV CH -)	(TV CH -)	(TV CH -)	(TV CH -)	(TV CH -)	(TV CH -)	(TV CH -)	–	(TV CH -)	(TV CH -)	(TV CH -)	(TV CH -)
17	V-AUX/DOCK	O	7A-55	7A-55AB	V-AUX (/DOCK)									
18	D	O	7A-0F	7A-0FF1	VCR									
19	E	O	7A-14	7A-14EA	PHONO									
20	TV VOL +	–	(TV VOL +)	(TV VOL +)	(TV VOL +)	(TV VOL +)	(TV VOL +)	(TV VOL +)	(TV VOL +)	–	(TV VOL +)	(TV VOL +)	(TV VOL +)	(TV VOL +)
21	AMP	O			Enter into AMP mode									
					9	10	11 (ID1)	11 (ID2)	13	14	15	17	18	19
					CD	MD/CD-R	TUNER	TUNER	DVD	DTV/CBL	DVR	V-AUX/DOCK	VCR	PHONO
22	TV INPUT	–	(TV INPUT)	(TV INPUT)	(TV INPUT)	(TV INPUT)	(TV INPUT)	(TV INPUT)	(TV INPUT)	TV INPUT	(TV INPUT)	(TV INPUT)	(TV INPUT)	TV INPUT
23	TV MUTE	–	(TV MUTE)	(TV MUTE)	(TV MUTE)	(TV MUTE)	(TV MUTE)	(TV MUTE)	(TV MUTE)	TV MUTE	(TV MUTE)	(TV MUTE)	(TV MUTE)	TV MUTE
24	TV VOL -	–	(TV VOL -)	(TV VOL -)	(TV VOL -)	(TV VOL -)	(TV VOL -)	(TV VOL -)	(TV VOL -)	TV VOL -	(TV VOL -)	(TV VOL -)	(TV VOL -)	TV VOL -
25	SCENE 1	O	7A-007F	7A-007E	SCENE SELECT									
26	SCENE 2	O	7A-037C	7A-037D	SCENE SELECT									
27	SCENE 3	O	7A-0679	7A-0678	SCENE SELECT									
28	SCENE 4	O	7A-0976	7A-0977	SCENE SELECT									
29	TITLE	–	7A-86	7A-8678	–	–	7A-AE	7A-AE50	7C-B1	–	048.200	7F01-0D	–	–
30	UP	–	7A-9D	7A-9D63	–	–	7A-10	7A-10EE	7C-B4	–	048.088	7F01-0E	–	–
31	MENU	–	7A-84	7A-847A	–	–	7A-AB	7A-AB55	7C-B2	–	048.084	7F01-0F	–	–
32	VOL up	O	7A-1A	7A-1AE4	VOL UP									
33	LEFT	–	7A-9F	7A-9F61	–	–	7A-AC	7A-AC52	7C-B5	–	048.090	7F01-10	–	–
34	ENTER	–	7A-DE	7A-DE20	–	–	7A-AD	7A-AD53	7C-B8	–	048.092	7F01-11	–	–
35	RIGHT	–	7A-9E	7A-9E60	–	–	7A-12	7A-12EC	7C-B6	–	048.091	7F01-12	–	–
36	RETURN	–	7A-AA	7A-AA54	–	–	7A-AF	7A-AF51	7C-B7	–	048.131	7F01-13	–	–
37	DOWN	–	7A-9C	7A-9C62	–	–	7A-11	7A-11EF	7C-B3	–	048.089	7F01-14	–	–
38	DISPLAY	–	7A-C2	7A-C23C	79-0A	7F-9E	7A-B0	7A-B04E	7C-A6	–	048.015	7F01-15	–	–
39	VOL down	O	7A-1B	7A-1BE5	VOL DOWN									
40	REC	–	(device)	(device)	7A-4F	–	–	–	7C-8B	(DVR REC)	048.055	7F01-16	–	(DVR REC)
41	STOP	–	(device)	(device)	7A-09	7F-84	–	–	7C-85	(DVR STOP)	048.049	7F01-1D	–	(DVR STOP)
42	PAUSE	–	(device)	(device)	7A-09	7F-83	–	–	7C-83	(DVR PAUSE)	048.048	7F01-1A	–	(DVR PAUSE)
43	PLAY	–	(device)	(device)	7A-08	7F-82	–	–	7C-82	(DVR PLAY)	048.044	7F01-1E	–	(DVR PLAY)
44	REW (SEARCH -)	–	(device)	(device)	7A-0D	7F-88	7A-A4	7A-A45A	7C-86	(DVR REW)	048.041	7F01-17	–	(DVR REW)
45	FF (SEARCH +)	–	(device)	(device)	7A-0C	7F-89	7A-A5	7A-A55B	7C-87	(DVR FF)	048.040	7F01-18	–	(DVR FF)
46	SKIP -	–	(device)	(device)	7A-0B	7F-86	7A-A6	7A-A658	7C-B9	(DVR SKIP-)	048.033	7F01-1B	–	(DVR SKIP-)
47	SKIP +	–	(device)	(device)	7A-0A	7F-87	7A-A7	7A-A759	7C-AB	(DVR SKIP+)	048.032	7F01-1C	–	(DVR SKIP+)
48	1	–	7A-59	7A-59A7	79-11	7F-91	7A-E5	7A-E51B	7C-94	–	048.001	7F01-01	–	–
49	2	–	7A-58	7A-58A6	79-12	7F-92	7A-E6	7A-E618	7C-95	–	048.002	7F01-02	–	–
50	3	–	7A-94	7A-946A	79-13	7F-93	7A-E7	7A-E719	7C-96	–	048.003	7F01-03	–	–
51	4	–	7A-8D	7A-8D73	79-14	7F-94	7A-E8	7A-E816	7C-97	–	048.004	7F01-04	–	–
52	5	–	7A-56	7A-56A8	79-15	7F-95	7A-E9	7A-E917	7C-98	–	048.005	7F01-05	–	–
53	6	–	7A-DD	7A-DD23	79-16	7F-96	7A-EA	7A-EA14	7C-99	–	048.006	7F01-06	–	–
54	7	–	7A-95	7A-956B	79-17	7F-97	7A-EB	7A-EB15	7C-9A	–	048.007	7F01-07	–	–
55	8	–	7A-C4	7A-C43A	79-18	7F-98	7A-EC	7A-EC12	7C-9B	–	048.008	7F01-08	–	–
56	9	–	7A-87	7A-8779	79-19	7F-99	7A-B1	7A-B14F	7C-9C	–	048.009	7F01-09	–	–
57	0	–	7A-C3	7A-C33D	79-10	7F-90	7A-B2	7A-B24C	7C-93	–	048.000	7F01-0A	–	–
58	+10	–	–	–	79-1A	7F-9A	–	–	7C-9D	–	–	7F01-0B	–	–
59	ENTER	–	7A-57	7A-57A9	79-0B	7F-8A	7A-B3	7A-B34D	7C-9E	–	–	7F01-0C	–	–

● RAV330 (R, T, A, L, J models)

• SCHEMATIC DIAGRAM

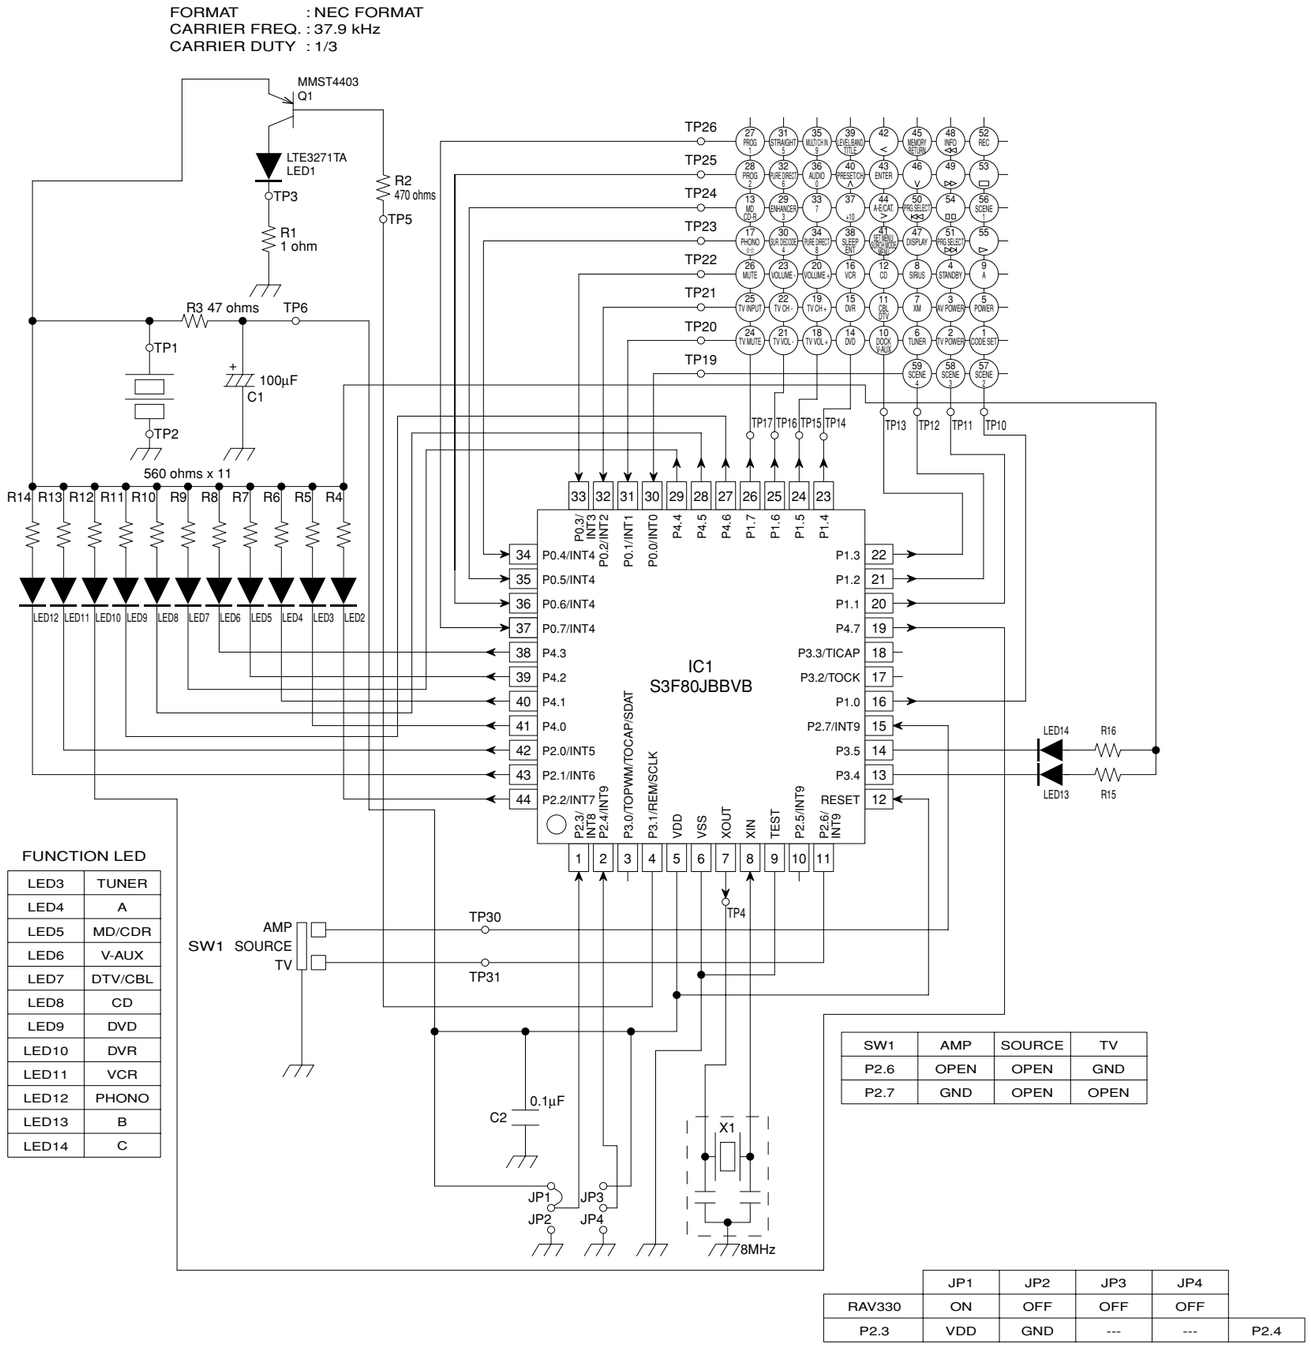

FUNCTION LED


LED3	TUNER
LED4	A
LED5	MD/CDR
LED6	V-AUX
LED7	DTV/CBL
LED8	CD
LED9	DVD
LED10	DVR
LED11	VCR
LED12	PHONO
LED13	B
LED14	C

SW1	AMP	SOURCE	TV
P2.6	OPEN	OPEN	GND
P2.7	GND	OPEN	OPEN


	JP1	JP2	JP3	JP4	
RAV330	ON	OFF	OFF	OFF	
P2.3	VDD	GND	---	---	P2.4

• PANELS

RAV330 (R, T, A, L, J models)

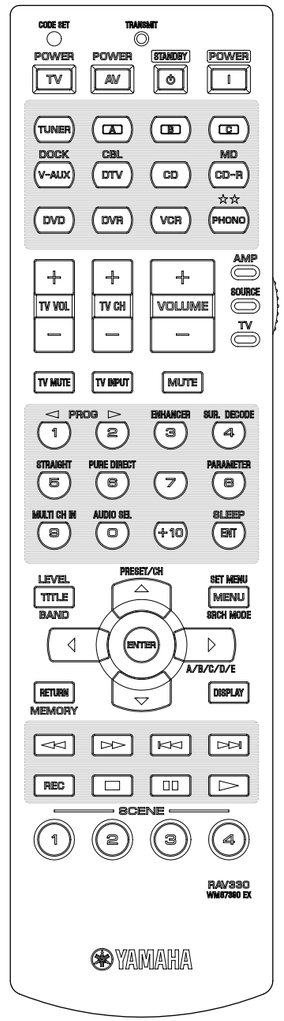

• KEY LAYOUT

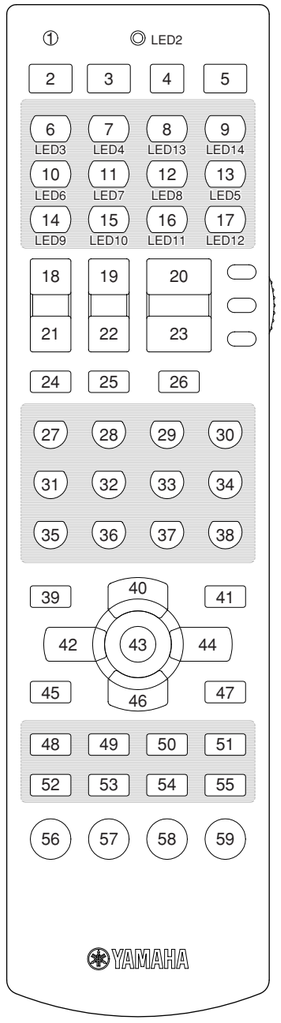

• KEY CODE


No.	Label	Yamaha Receiver				Yamaha LD	Yamaha D-tuner			Yamaha Misc Audio		Yamaha DVD	Yamaha DVD-R	Yamaha Tape	Universal CD-R	Yamaha CD
		ID1		ID2		[40127]	[82915] R2915	[82918] R2918	[82176]	[82981] M2981	[82982] M2982	[42543] Y2543	[52544] Y2544	[70542]	[71292]	[62907] D2907
		MAIN	ZONE2	MAIN	ZONE2	N-1			N-2	N-2	N-2	N-1	P		N-1	N-1
–	TRANSMIT (LED)															
1	CODE SET	–	–	–	–											
4	STANDBY	7E-7F	7E-BB	7E-7F81	7E-BB45											
5	POWER	7E-7E	7E-BA	7E-7E80	7E-BA44											
6	TUNER	7A-16	7A-D2	7A-16E8	7A-D22C											
7	A	7A-B4	7A-B8	7A-B44A	7A-B846											
8	B	7A-39	7A-3A	7A-39C7	7A-3AC4											
9	C	7F01-3F	7F01-40	7F01-3FC1	7F01-40BE											
10	V-AUX/DOCK	7A-55	7A-D8	7A-55AB	7A-D826											
11	DTV/CBL	7A-54	7A-D9	7A-54AA	7A-D927											
12	CD	7A-15	7A-D1	7A-15EB	7A-D12F											
13	MD/CD-R	7A-C9	7A-CF	7A-C937	7A-CF31											
14	DVD	7A-C1	7A-CD	7A-C13F	7A-CD33											
15	DVR	7A-13	7A-D7	7A-13ED	7A-D729											
16	VCR	7A-0F	7A-D6	7A-0FF1	7A-D628											
17	PHONO	7A-14	7A-D0	7A-14EA	7A-D02E											
2	TV POWER															
3	AV POWER						D1-1B	–	7F01-D0	7F01-00	7F01-20	7C-80	048-012		7F-80	79-60
18	TV VOL. up															
19	TV CH up															
20	VOL. up	7A-1A	7A-DA	7A-1AE4	7A-DA24											
21	TV VOL. down															
22	TV CH down															
23	VOL. down	7A-1B	7A-DB	7A-1BE5	7A-DB25											
24	TV MUTE															
25	TV INPUT															
26	MUTE	7A-1C	7A-DC	7A-1CE2	7A-DC22											
27	PROG -	7A-59		7A-59A7		7C-17	7A-E5	7A-61	7F01-D1	7F01-01	7F01-21	7C-94	048.001		7F-91	79-11
28	PROG +	7A-58		7A-58A6		7C-18	7A-E6	7A-62	7F01-D2	7F01-02	7F01-22	7C-95	048.002		7F-92	79-12
29	ENHANCER	7A-94		7A-946A		7C-19	7A-E7	7A-63	7F01-D3	7F01-03	7F01-23	7C-96	048.003		7F-93	79-13
30	SUR.DECODE	7A-8D		7A-8D73		7C-1A	7A-E8	7A-64	7F01-D4	7F01-04	7F01-24	7C-97	048.004		7F-94	79-14
31	STRAIGHT	7A-56		7A-56A8		7C-1B	7A-E9	7A-65	7F01-D5	7F01-05	7F01-25	7C-98	048.005		7F-95	79-15
32	PURE DIRECT	7A-DD		7A-DD23		7C-1C	7A-EA	7A-66	7F01-D6	7F01-06	7F01-26	7C-99	048.006		7F-96	79-16
33	–	7A-95		7A-956B		7C-1D	7A-EB	7A-67	7F01-D7	7F01-07	7F01-27	7C-9A	048.007		7F-97	79-17
34	PARAMETER	7A-C4		7A-C43A		7C-1E	7A-EC	7A-68	7F01-D8	7F01-08	7F01-28	7C-9B	048.008		7F-98	79-18
35	MULTI CH IN	7A-87		7A-8779		7C-1F	7A-B1	7A-69	7F01-D9	7F01-09	7F01-29	7C-9C	048.009		7F-99	79-19
36	AUDUO SEL	7A-C3		7A-C33D		7C-16	7A-B2	7A-60	7F01-DA	7F01-0A	7F01-2A	7C-93	048.000		7F-90	79-10
37	–	–		–		7C-5D			7F01-DB	7F01-0B	7F01-2B	7C-9D			7F-9A	79-1A
38	SLEEP	7A-57		7A-57A9		7C-15	7A-B3	7A-BF	7F01-DC	7F01-0C	7F01-2C	7C-9E			7F-8A	79-0B
39	LEVEL	7A-86		7A-8678			7A-AE	7A-70	7F01-DD	7F01-0D	7F01-2D	7C-B1	048.200			
40	Up	7A-9D		7A-9D63			7A-10	7A-6A	7F01-E1	7F01-0E	7F01-2E	7C-B4	048.088			
41	SET MENU	7A-84		7A-847A			7A-AB	7A-6D	7F01-DE	7F01-0F	7F01-2F	7C-B2	048.084			
42	Left	7A-9F		7A-9F61			7A-AC	7A-6E	7F01-E2	7F01-10	7F01-30	7C-B5	048.090			
43	ENTER	7A-DE		7A-DE20			7A-AD	7A-6F	7F01-E3	7F01-11	7F01-31	7C-B8	047.092			
44	Right	7A-9E		7A-9E60			7A-12	7A-6C	7F01-E4	7F01-12	7F01-32	7C-B6	048.091	7A-06		
45	RETURN	7A-AA		7A-AA54			7A-AF	7A-71	7F01-DF	7F01-13	7F01-33	7C-B7	048.131			
46	Down	7A-9C		7A-9C62			7A-11	7A-6B	7F01-E5	7F01-14	7F01-34	7C-B3	048.089			
47	DISPLAY	7A-C2		7A-C23C		7C-13	7A-B0	7A-72	7F01-E0	7F01-15	7F01-35	7C-A6	048.015		7F-9E	79-0A
48	REW (Search)					7C-06	7A-A4	7A-3D	7F01-EA	7F01-17	7F01-37	7C-86	048.041	7A-01	7F-88	7A-0D
49	FF (Search)					7C-07	7A-A5	7A-3E	7F01-EB	7F01-18	7F01-38	7C-87	048.040	7A-02	7F-89	7A-0C
50	CHP/Skip-					7C-02	7A-A6	7A-3F	7F01-EC	7F01-1B	7F01-3B	7C-B9	048.033	7A-07	7F-86	7A-0B
51	CHP/Skip+					7C-03	7A-A7	7A-EF	7F01-ED	7F01-1C	7F01-3C	7C-BA	048.032	7A-40	7F-87	7A-0A
52	REC								7F01-E6	7F01-16	7F01-36	7C-8B	048.055	7A-04		7A-4F
53	Stop					7C-5B			7F01-E9	7F01-1D	7F01-3D	7C-85	048.049	7A-03	7F-84	7A-09
54	Pause					7C-5A			7F01-E7	7F01-1A	7F01-3A	7C-83	048.048		7F-83	7A-09
55	Play					7C-05			7F01-E8	7F01-1E	7F01-3E	7C-82	048.044	7A-00	7F-82	7A-08
56	SCENE1	7A-007F	7A-017E	7A-007E	7A-017F											
57	SCENE2	7A-037C	7A-047B	7A-037D	7A-047A											
58	SCENE3	7A-0679	7A-0778	7A-0678	7A-0779											
59	SCENE4	7A-0976	7A-0A75	7A-0977	7A-0A74											

Mode	Default Device
Receiver (Slide switch-AMP)	00001-Yamaha Receiver
CD (Default-slide switch Source)	62907-Yamaha CD
MD/CD	71292-Yamaha CD-R
XM	82918-Yamaha Digital Tuner *1
SIRIUS	82176-Yamaha Digital Tuner *1
DVD	42543-Yamaha DVD
DTV/CBL	None (can be set as a DVD, DVD-R, VCR, PVR, TV, CBL, SAT, LD, CD, CD-R, MD, Tape and Tuner)
TUNER	82915-Yamaha Tuner
VCR	None (can be set as a DVD, DVD-R, VCR, PVR, TV, CBL, SAT, LD, CD, CD-R, MD, Tape and Tuner)
DVR	52544-Yanmaha DVD-R
V-AUX/DOCK	82981-Yamaha MISC Audio
NET	82982-Yamaha MISC Audio
PHONO	None (can be set as a DVD, DVD-R, VCR, PVR, TV, CBL, SAT, LD, CD, CD-R, MD, Tape and Tuner)
TV (slide switch-TV)	N/A

Note *1: Default ID will vary upon jumper setting.


● RAV372 (K, B, G, E, F models)

• SCHEMATIC DIAGRAM

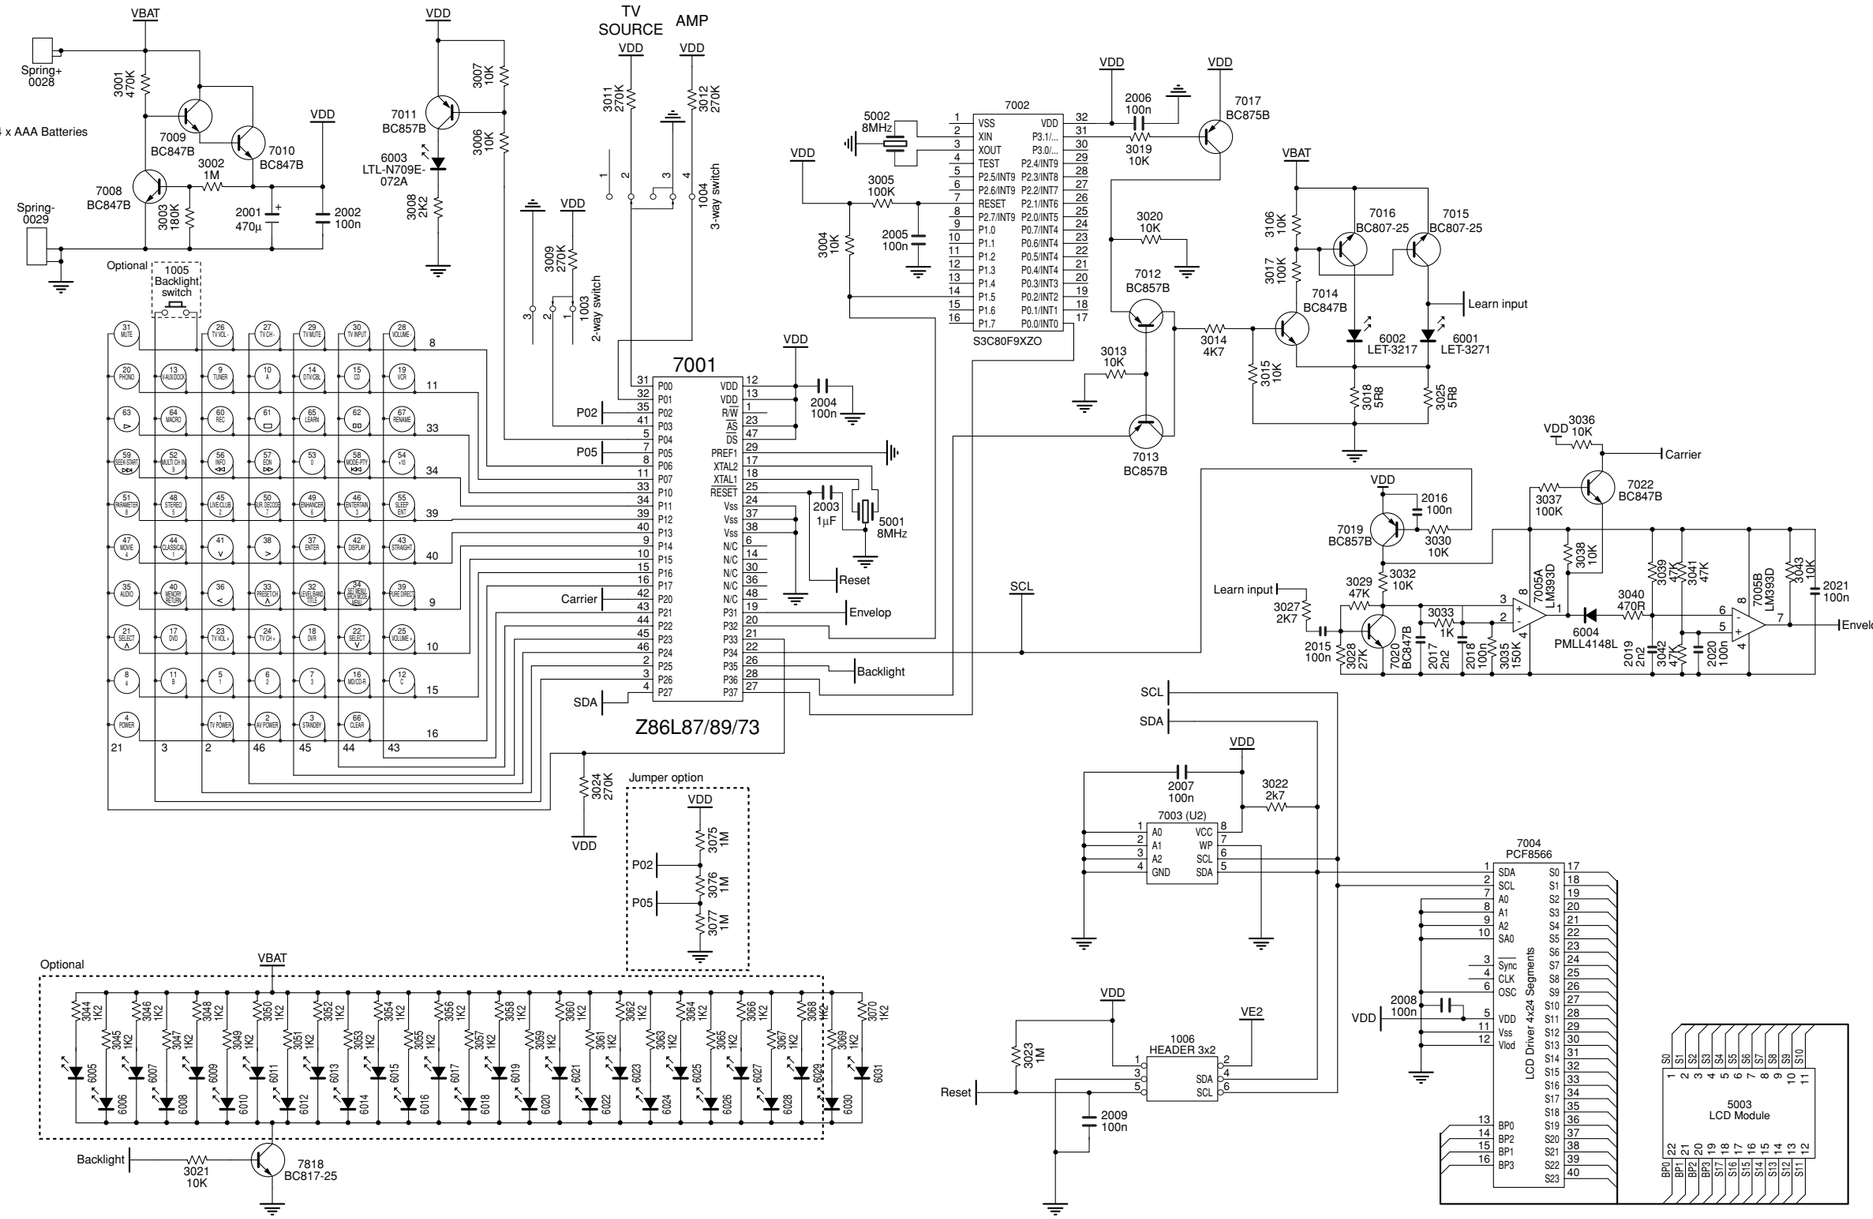


• PANELS

RAV372 (K, B, G, E, F models)

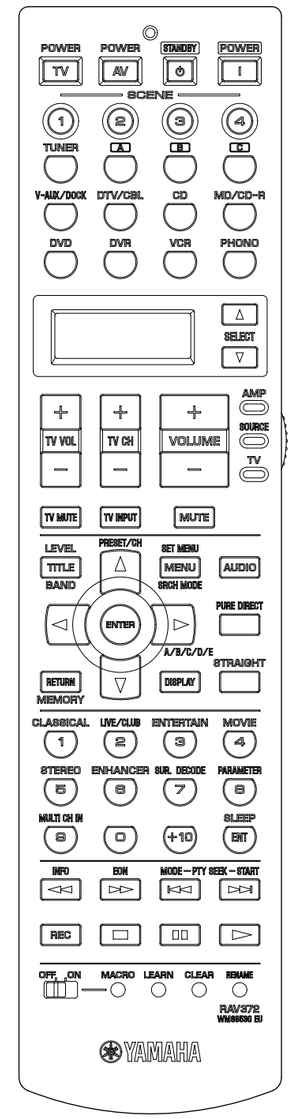

• KEY LAYOUT

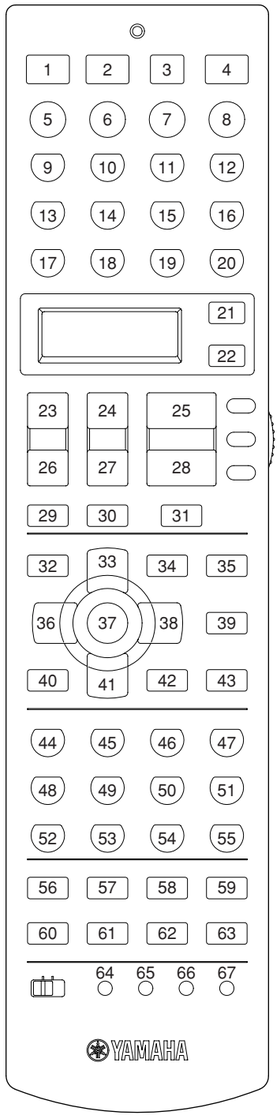

• KEY CODE

No.	Label	Area	Learn	Macro	Luminous	AMP library 2001 (default) MAIN	ZONE2	ZONE3	ALL	AMP library 2002 MAIN	ZONE2	ZONE3	ALL											
-	LED	–	–	–	–	–	–	–	–	–	–	–	–	Linked with IR signal										
	SW2 (MACRO ON/OFF)													OFF	ON									
3	STANDBY	1	O	O	O	7E-7F	7E-BB	7A-EE	7A-1E	7E-7F81	7E-BB45	7A-EE10	7A-1EE0	Power STANDBY	Macro feature									
4	POWER on	1	O	O	O	7E-7E	7E-BA	7A-ED	7A-1D	7E-7E80	7E-BA44	7A-ED13	7A-1DE3	Power ON	Macro feature									
5	SCENE 1	1	O	–	O	7A-007F	7A-017E	7A-027D		7A-007E	7A-017F	7A-027C		Output IR signal & Change device mode										
6	SCENE 2	1	O	–	O	7A-037C	7A-047B	7A-057A		7A-037D	7A-047A	7A-057B		Output IR signal & Change device mode										
7	SCENE 3	1	O	–	O	7A-0679	7A-0778	7A-0877		7A-0678	7A-0779	7A-0876		Output IR signal & Change device mode										
8	SCENE 4	1	O	–	O	7A-0976	7A-0A75	7A-0B74		7A-0977	7A-0A74	7A-0B75		Output IR signal & Change device mode										
9	TUNER	1	O	O	–	7A-16	7A-D2	7A-F3		7A-16E8	7A-D22C	7A-F30D		Output IR signal & Change device mode	Macro feature & Change device mode	TUNER	TUN	TUNER	YAMAHA3	2602				
10	A	1	O	O	–	7A-B4	7A-B8	7A-B9		7A-B44A	7A-B846	7A-B947		Output IR signal & Change device mode	Macro feature & Change device mode	XM	XM	TUNER	YAMAHA5	2604				
		1	O	O	–	–	–	–		–	–	–		Change device mode	Macro feature & Change device mode	TAPE	TAPE	TAPE	YAMAHA1	2700				
11	B	1	O	O	–	7A-39	7A-3A	7A-3B		7A39C7	7A-3AC4	7F3BC5		Output IR signal & Change device mode	Macro feature & Change device mode	SAT	SAT	TUNER	YAMAHA9	NEW-1				
		1	O	O	–	–	–	–		–	–	–		Change device mode	Macro feature & Change device mode	LD	LD	LD	YAMAHA	2200				
12	C	1	O	O	–	7F01-3F	7F01-40	7F01-41		7F01-3FC1	7F01-40BE	7F01-40BF		Output IR signal & Change device mode	Macro feature & Change device mode	USB	USB	TUNER	YAMAHA8	2607				
		1	O	O	–	7F01-3F	7F01-40	7F01-41		7F01-3FC1	7F01-40BE	7F01-40BF		Output IR signal & Change device mode	Macro feature & Change device mode	NET	NET	TUNER	YAMAHA8	2607				
13	V-AUX/DOCK	1	O	O	–	7A-55	7A-D8	7A-F0		7A-55AB	7A-D826	7A-F00E		Output IR signal & Change device mode	Macro feature & Change device mode	V-AUX	AUX	TUNER	YAMAHA7	2606				
14	DTV/CBL	1	O	O	–	7A-54	7A-D9	7A-F6		7A-54AA	7A-D927	7A-F608		Output IR signal & Change device mode	Macro feature & Change device mode	DTV	DTV	TV	nothing	nothing				
15	CD	1	O	O	–	7A-15	7A-D1	7A-F2		7A-15EB	7A-D12F	7A-F20C		Output IR signal & Change device mode	Macro feature & Change device mode	CD	CD	CD	YAMAHA1	2300				
16	MD/CD-R	1	O	O	–	7A-C9	7A-CF	–		7A-C937	7A-CF31	–		Output IR signal & Change device mode	Macro feature & Change device mode	CD-R	CDR	CD-R	YAMAHA	2400				
17	DVD	1	O	O	–	7A-C1	7A-CD	7A-FC		7A-C13F	7A-CD33	7A-FC02		Output IR signal & Change device mode	Macro feature & Change device mode	DVD	DVD	DVD	YAMAHA1	2100				
18	DVR	1	O	O	–	7A-13	7A-D7	7A-FA		7A-13ED	7A-D729	7A-FA04		Output IR signal & Change device mode	Macro feature & Change device mode	DVR	DVR	DVR	YAMAHA	2807				
19	VCR	1	O	O	–	7A-0F	7A-D6	7A-F9		7A-0FF1	7A-D628	7A-F907		Output IR signal & Change device mode	Macro feature & Change device mode	VCR	VCR	VCR	nothing	nothing				
20	PHONO	1	O	O	–	7A-14	7A-C0	7A-F1		7A-14EA	7A-D02E	7A-F10F		Output IR signal & Change device mode	Macro feature & Change device mode	PHONO	PHO	TV	nothing	nothing				
21	SELECT up	1	–	–	O	–	–	–	–	–	–	–	–	Select device mode (up)										
22	SELECT down	1	–	–	O	–	–	–	–	–	–	–	–	Select device mode (down)										

SW1 (AMP/SOURCE/TV)						AMP								SOURCE													TV
														9	10		11		12	13	14	15	16	17	18	19	20	Option	
														TUNER	XM	TAPE	SAT	LD	NET	V-AUX/DOCK	DTV/CBL	CD	MD/CD-R	DVD	DVR	VCR	PHONO	OPTN	
1	TV POWER	16	O	–	O	–				–				–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
2	AV POWER	16	O	–	O	Punch to SOURCE				Punch to SOURCE				D1-1B	–	–	7F01-D0	–	7F01-20	7F01-00	–	79-60	7F-80	7C-80	AA5A A5AA	–	–	–	Punch to SOURCE
23	TV VOL up	16	O	–	O	–				–				–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
24	TV CH up	16	O	–	O	–				–				–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
25	VOL up	1	O	–	O	7A-1A	7A-DA	7A-FD		7A-1AE4	7A-DA24	7A-FD03		Punch to AMP mode															
26	TV VOL down	16	O	–	O	–				–				–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
27	TV CH down	16	O	–	O	–				–				–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
28	VOL down	1	O	–	O	7A-1B	7A-DB	7A-FE		7A-1BE5	7A-DB25	7A-FE00		Punch to AMP mode															
29	TV mute	16	O	–	O	–				–				–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
30	TV input	16	O	–	O	–				–				–	–	–	–	–	–	–	–	–	–	–	–	–	–	–	–
31	MUTE	1	O	–	O	7A-1C	7A-DC	7A-FF		7A-1CE2	7A-DC22	7A-FE01		Punch to AMP mode															
32	TITLE	16	O	–	O	7A-86	–	–		7A-8678	–	–		7A-AE	7A-70	–	7F01-DD	–	7F01-2D	7F01-0D	–	–	–	7C-B1	AA5A A9A5	–	–	–	–
33	Up	16	O	–	O	7A-9D	–	–		7A-9D63	–	–		7A-10	7A-6A	–	7F01-E1	–	7F01-2E	7F01-0E	–	–	–	7C-B4	AA5A A966	–	–	–	–
34	MENU	16	O	–	O	7A-84	–	–		7A-847A	–	–		7A-AB	7A-6D	–	7F01-DE	–	7F01-2F	7F01-0F	–	–	–	7C-B2	AA5A A A686	–	–	–	–
35	AUDIO	16	O	–	O	7A-C3	–	–		7A-C33D	–	–		–	–	–	7F01-EE	7C-12	7F01-39	7F01-19	–	–	–	7C-AD	AA5A 95A5	–	–	–	–
36	Left	16	O	–	O	7A-9F	–	–		7A-9F61	–	–		7A-AC	7A-6E	–	7F01-E2	–	7F01-30	7F01-10	–	–	–	7C-B5	AA5A 9966	–	–	–	–
37	ENTER	16	O	–	O	7A-DE	–	–		7A-DE20	–	–		7A-AD	7A-6F	–	7F01-E3	–	7F01-31	7F01-11	–	–	–	7C-B8	AA5A A566	–	–	–	–
38	Right	16	O	–	O	7A-9E	–	–		7A-9E60	–	–		7A-12	7A-6C	7A-06	7F01-E4	–	7F01-32	7F01-12	–	–	–	7C-B6	AA5A 5966	–	–	–	–
39	PURE DIRECT	1	O	–	O	7A-DD	–	–		7A-DD23	–	–		Punch to AMP mode															
40	RETURN	16	O	–	O	7A-AA	–	–		7A-AA54	–	–		7A-AF	7A-71	–	7F01-DF	–	7F01-33	7F01-13	–	–	–	7C-B7	AA5A 5AA9	–	–	–	–
41	Down	16	O	–	O	7A-9C	–	–		7A-9C62	–	–		7A-11	7A-6B	–	7F01-E5	–	7F01-34	7F01-14	–	–	–	7C-B3	AA5A 6966	–	–	–	–
42	DISPLAY	16	O	–	O	7A-C2	–	–		7A-C23C	–	–		7A-B0	7A-72	–	7F01-E0	7C-13	7F01-35	7F01-15	–	79-0A	7F-9E	7C-A6	AA5A 55AA	–	–	–	–
43	STRAIGHT	1	O	–	O	7A-56	–	–		7A-56AB	–	–		Punch to AMP mode															
44	1	16	O	–	–	7A-88	–	–		7A-8876	–	–		7A-E5	7A-61	–	7F01-D1	7C-17	7F01-21	7F01-01	–	79-11	7F-91	7C-94	AA5A 6AAA	–	–	–	–
45	2	16	O	–	–	7A-89	–	–		7A-8977	–	–		7A-E6	7A-62	–	7F01-D2	7C-18	7F01-22	7F01-02	–	79-12	7F-92	7C-95	AA5A 9AAA	–	–	–	–
46	3	16	O	–	–	7A-8A	–	–		7A-8A74	–	–		7A-E7	7A-63	–	7F01-D3	7C-19	7F01-23	7F01-03	–	79-13	7F-93	7C-96	AA5A 5AAA	–	–	–	–
47	4	16	O	–	–	7A-8B	–	–		7A-8B75	–	–		7A-E8	7A-64	–	7F01-D4	7C-1A	7F01-24	7F01-04	–	79-14	7F-94	7C-97	AA5A A6AA	–	–	–	–
48	5	16	O	–	–	7A-8C	–	–		7A-8C72	–	–		7A-E9	7A-65	–	7F01-D5	7C-1B	7F01-25	7F01-05	–	79-15	7F-95	7C-98	AA5A 66AA	–	–	–	–
49	6	16	O	–	–	7A-94	–	–		7A-946A	–	–		7A-EA	7A-66	–	7F01-D6	7C-1C	7F01-26	7F01-06	–	79-16	7F-96	7C-99	AA5A 96AA	–	–	–	–
50	7	16	O	–	–	7A-8D	–	–		7A-8D73	–	–		7A-EB	7A-67	–	7F01-D7	7C-1D	7F01-27	7F01-07	–	79-17	7F-97	7C-9A	AA5A 56AA	–	–	–	–
51	8	16	O	–	–	7A-C4	–	–		7A-C43A	–	–		7A-EC	7A-68	–	7F01-D8	7C-1E	7F01-28	7F01-08	–	79-18	7F-98	7C-9B	AA5A A9AA	–	–	–	–
52	9	16	O	–	–	7A-87	–	–		7A-8779	–	–		7A-B1	7A-69	–	7F01-D9	7C-1F	7F01-29	7F01-09	–	79-19	7F-99	7C-9C	AA5A 69AA	–	–	–	–
53	0	16	O	–	–	7A-95	–	–		7A-956B	–	–		7A-B2	7A-60	–	7F01-DA	7C-16	7F01-2A	7F01-0A	–	79-10	7F-90	7C-93	AA5A AAAA	–	–	–	–
54	+10	16	O	–	–	–	–	–		–	–	–		–	–	–	7F01-DB	7C-5D	7F01-2B	7F01-0B	–	79-1A	7F-9A	7C-9D	–	–	–	–	–
55	ENT	16	O	–	–	7A-57	–	–		7A-57A9	–	–		7A-B3	7A-BF	–	7F01-DC	7C-15	7F01-2C	7F01-0C	–	79-0B	7F-8A	7C-9E	–	–	–	–	–
56	REW (SEARCH)	16	O	–	–	Punch to SOURCE				Punch to SOURCE				7A-A4	7A-3D	7A-01	7F01-EA	7C-06	7F01-37	7F01-17	–	7A-0D	7F-88	7C-86	AA5A 699A	–	–	–	Punch to SOURCE
57	FF (SEARCH)	16	O	–	–	Punch to SOURCE				Punch to SOURCE				7A-A5	7A-3E	7A-02	7F01-EB	7C-07	7F01-38	7F01-18	–	7A-0C	7F-89	7C-87	AA5A A99A	–	–	–	Punch to SOURCE
58	CHP/SKIP-	16	O	–	–	Punch to SOURCE				Punch to SOURCE				7A-A6	7A-3F	7A-07	7F01-EC	7C-02	7F01-3B	7F01-1B	–	7A-0B	7F-86	7C-B9	AA5A 6A9A	–	–	–	Punch to SOURCE
59	CHP/SKIP+	16	O	–	–	Punch to SOURCE				Punch to SOURCE				7A-A7	7A-EF	7A-40	7F01-ED	7C-03	7F01-3C	7F01-1C	–	7A-0A	7F-87	7C-BA	AA5A AA9A	–	–	–	Punch to SOURCE
60	REC	16	O	–	–	Punch to SOURCE				Punch to SOURCE				–	–	7A-04	7F01-E6	–	7F01-36	7F01-16	–	7A-4F	–	7C-8B	AA5A 565A	–	–	–	Punch to SOURCE
61	STOP	16	O	–	–	Punch to SOURCE				Punch to SOURCE				–	–	7A-03	7F01-E9	7C-5B	7F01-3D	7F01-1D	–	7A-09	7F-84	7C-85	AA5A 6A5A	–	–	–	Punch to SOURCE
62	PAUSE	16	O	–	–	Punch to SOURCE				Punch to SOURCE				–	–	–	7F01-E7	7C-5A	7F01-3A	7F01-1A	–	7A-09	7F-83	7C-83	AA5A AA5A	–	–	–	Punch to SOURCE
63	PLAY	16	O	–	–	Punch to SOURCE				Punch to SOURCE				–	–	7A-00	7F01-E8	7C-05	7F01-3E	7F01-1E	–	7A-08	7F-82	7C-82	AA5A A59A	–	–	–	Punch to SOURCE
64	MACRO	–	–	–	–	–	can not use			–	can not use			Change to MACRO mode															
65	LEARN	–	–	–	–	–	can not use			–	can not use			Change to LEARNING or PRESET mode															
66	CLEAR	–	–	–	–	–	can not use			–	can not use			Change to CLEAR mode (Macro clear, Rename clear, Preset clear, All key clear)															
67	RE-NAME	–	–	–	–	–	can not use			–	can not use			Change to RE-NAME mode															

Advanced setup

This unit has additional menus that are displayed in the front panel display. The advanced setup menu offers additional operations to adjust and customize the way this unit operates. Change the initial settings (indicated in bold under each parameter) to reflect the needs of your listening environment.

Notes

- The settings you make are reflected next time you press **MAIN ZONE ON/OFF** to turn on this unit.
- Only **MAIN ZONE ON/OFF**, **SYSTEM OFF**, **TONE CONTROL** and the **PROGRAM** selector are effective while you are using the advanced setup menu.
- No other operations can be made while you are using the advanced setup menu.
- The advanced setup menu is only available in the front panel display.

Using the advanced setup

1 Press SYSTEM OFF on the front panel to set this unit to the standby mode.


2 Press and hold TONE CONTROL and then press MAIN ZONE ON/OFF to turn on this unit.

This unit turns on, and the advanced setup menu appears in the front panel display.



3 Rotate the PROGRAM selector to select the parameter you want to adjust.

The name of the selected parameter appears in the front panel display.



4 Press TONE CONTROL repeatedly to change the selected parameter setting.

5 Press SYSTEM OFF to save the new setting and set this unit to the standby mode.

The settings you made are reflected next time you turn on this unit.

■ Speaker impedance SP IMP.

Use this feature to set the speaker impedance of this unit so that it matches that of your speakers.
Choices: **8Ω MIN**, 6ΩMIN

- Select "8ΩMIN" to set the speaker impedance to 8 Ω.
- Select "6ΩMIN" to set the speaker impedance to 6 Ω.

SP IMP.	Speaker	Impedance level
8ΩMIN	Front	If you use one set (A or B), the impedance of each speaker must be 8 Ω or higher.
		If you use two sets (A and B), the impedance of each speaker must be 16 Ω or higher.*
	Center	The impedance of each speaker must be 8 Ω or higher.
	Surround	
	Surround back	
6ΩMIN	Front	If you use one set (A or B), the impedance of each speaker must be 4 Ω or higher.
		If you use two sets (A and B), the impedance of each speaker must be 8 Ω or higher.
	Center	The impedance of each speaker must be 6 Ω or higher.
	Surround	
	Surround back	

* The Canada model cannot use two separate speaker systems (A and B) simultaneously when "SP IMP." is set to "8ΩMIN".

REMOTE CONTROL RAV285

Advanced setup

■ Remote control AMP ID REMOTE AMP

Use this feature to set the AMP ID of this unit for remote control recognition. This feature is useful when you operate this unit and the other Yamaha receivers/ amplifiers in the same room separately.
Choices: **ID1**, ID2


- Select "ID1" when the remote control AMP ID code is set to "5019".
- Select "ID2" when the remote control AMP ID code is set to "5020".

Setting remote control AMP ID codes

You need to set the remote control AMP ID code for the remote control.

1 While pressing and holding AMP on the remote control, press AV POWER for more than 3 seconds.

AMP flashes twice.

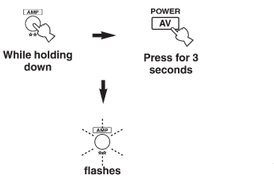

2 Press the numeric buttons to enter the code number "5019" or "5020".

When the setting succeeds, **AMP** flashes twice; however, when it does not, **AMP** flashes repeatedly.

AMP ID code *1	Function	Remote control AMP ID *2
5019 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
5020	To operate this unit using an alternative code.	ID2

*1 The remote control setting
*2 The setting of this unit

■ Remote control TUNER ID REMOTE TU

Use this feature to set the TUNER ID of this unit for remote control recognition.
Choices: **ID1**, ID2


- Select "ID1" when the remote control TUNER ID code is set to "5007".
- Select "ID2" when the remote control TUNER ID code is set to "5016".

Setting remote control TUNER ID codes

You need to set the remote control TUNER ID library code for the remote control.

1 While pressing and holding TUNER on the remote control, press AV POWER for more than 3 seconds.

AMP flashes twice.

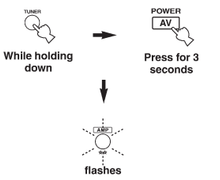

2 Press the numeric buttons to enter the code number "5007" or "5016".

When the setting succeeds, **AMP** flashes twice; however, when it does not, **AMP** flashes repeatedly.

TUNER ID code *1	Function	Remote control TUNER ID *2
5007 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
5016	To operate this unit using an alternative code.	ID2

*1 The remote control setting
*2 The setting of this unit

REMOTE CONTROL RAV285

Advanced setup

■ Remote control XM ID REMOTE XM (U.S.A. and Canada models only)

Use this feature to set the XM ID of this unit for remote control recognition.
Choices: **ID1**, ID2


- Select "ID1" when the remote control XM ID code is set to "5009".
- Select "ID2" when the remote control XM ID code is set to "5015".

Setting remote control XM ID codes

You need to set the remote control XM ID code for the remote control.

1 While pressing and holding XM on the remote control, press AV POWER for more than 3 seconds.

AMP flashes twice.

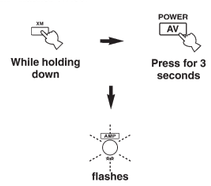

2 Press the numeric buttons to enter the code number "5009" or "5015".

When the setting succeeds, **AMP** flashes twice; however, when it does not, **AMP** flashes repeatedly.

XM ID code *1	Function	Remote control XM ID *2
5009 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
5015	To operate this unit using an alternative code.	ID2

*1 The remote control setting
*2 The setting of this unit

■ Remote control SIRIUS ID REMOTE SR (U.S.A. and Canada models only)

Use this feature to set the SIRIUS ID of this unit for remote control recognition.
Choices: **ID1**, ID2


- Select "ID1" when the remote control SIRIUS ID code is set to "5017".
- Select "ID2" when the remote control SIRIUS ID code is set to "5018".

Setting remote control SIRIUS ID codes

You need to set the remote control SIRIUS ID code for the remote control.

1 While pressing and holding SIRIUS on the remote control, press AV POWER for more than 3 seconds.

AMP flashes twice.

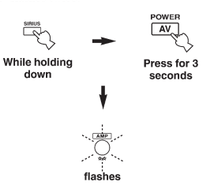

2 Press the numeric buttons to enter the code number "5017" or "5018".

When the setting succeeds, **AMP** flashes twice; however, when it does not, **AMP** flashes repeatedly.

SIRIUS ID code *1	Function	Remote control SIRIUS ID *2
5017 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
5018	To operate this unit using an alternative code.	ID2

*1 The remote control setting
*2 The setting of this unit

REMOTE CONTROL RAV330

Advanced setup

■ Remote control AMP ID REMOTE AMP

Use this feature to set the AMP ID of this unit for remote control recognition. This feature is useful when you operate this unit and the other Yamaha receivers/ amplifiers in the same room separately.
Choices: **ID1**, ID2

- Select "ID1" when the remote control AMP ID code is set to "00001".
- Select "ID2" when the remote control AMP ID code is set to "00002".

Setting remote control AMP ID codes

You need to set the remote control AMP ID code for the remote control.


1 Press CODE SET using a ballpoint pen or a similar object.

The **TRANSMIT** indicator on the remote control flashes twice.



2 Press the numeric buttons to enter the code number "00001" or "00002".

The **TRANSMIT** indicator on the remote control flashes twice, and the AMP ID code is changed.

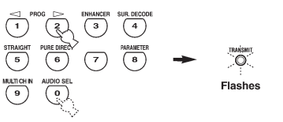

AMP ID code *1	Function	Remote control AMP ID *2
00001 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
00002	To operate this unit using an alternative code.	ID2

*1 The remote control setting
*2 The setting of this unit

■ Remote control TUNER ID REMOTE TU

Use this feature to set the TUNER ID of this unit for remote control recognition.
Choices: **ID1**, ID2

- Select "ID1" when the remote control TUNER ID code is set to "82915".
- Select "ID2" when the remote control TUNER ID code is set to "82178".

Setting remote control TUNER ID codes

You need to set the remote control TUNER ID library code for the remote control.

1 Press TUNER to select "TUNER" as the input source.



2 Press CODE SET using a ballpoint pen or a similar object.

The **TRANSMIT** indicator on the remote control flashes twice.



3 Press the numeric buttons to enter the code number "82915" or "82178".

The **TRANSMIT** indicator on the remote control flashes twice, and the TUNER ID code is changed.



TUNER ID code *1	Function	Remote control TUNER ID *2
82915 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
82178	To operate this unit using an alternative code.	ID2

*1 The remote control setting
*2 The setting of this unit

REMOTE CONTROL RAV330

Advanced setup

■ Remote control XM ID REMOTE XM (U.S.A. and Canada models only)

Use this feature to set the XM ID of this unit for remote control recognition.
Choices: **ID1**, ID2
- Select "ID1" when the remote control XM ID code is set to "82918".
- Select "ID2" when the remote control XM ID code is set to "82179".

Setting remote control XM ID codes


You need to set the remote control XM ID code for the remote control.

1 Press XM to select "XM" as the input source.



2 Press CODE SET using a ballpoint pen or a similar object.

The **TRANSMIT** indicator on the remote control flashes twice.



3 Press the numeric buttons to enter the code number "82918" or "82179".

The **TRANSMIT** indicator on the remote control flashes twice, and the XM ID code is changed.



XM ID code *1	Function	Remote control XM ID *2
82918 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
82179	To operate this unit using an alternative code.	ID2

*1 The remote control setting
*2 The setting of this unit

■ Remote control SIRIUS ID REMOTE SR (U.S.A. and Canada models only)

Use this feature to set the SIRIUS ID of this unit for remote control recognition.
Choices: **ID1**, ID2
- Select "ID1" when the remote control SIRIUS ID code is set to "82176".
- Select "ID2" when the remote control SIRIUS ID code is set to "82177".

Setting remote control SIRIUS ID codes


You need to set the remote control SIRIUS ID code for the remote control.

1 Press TUNER to select "SIRIUS" as the input source.



2 Press CODE SET using a ballpoint pen or a similar object.

The **TRANSMIT** indicator on the remote control flashes twice.



3 Press the numeric buttons to enter the code number "82176" or "82177".

The **TRANSMIT** indicator on the remote control flashes twice, and the SIRIUS ID code is changed.



SIRIUS ID code *1	Function	Remote control SIRIUS ID *2
82176 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
82177	To operate this unit using an alternative code.	ID2

*1 The remote control setting
*2 The setting of this unit

ADVANCED OPERATION

English

REMOTE CONTROL RAV372

Advanced setup

■ Remote control AMP ID REMOTE AMP


Use this feature to set the AMP ID of this unit for remote control recognition. This feature is useful when you operate this unit and the other Yamaha receivers/amplifiers in the same room separately.
Choices: **ID1**, ID2
- Select "ID1" when the remote control AMP ID code is set to "2201".
- Select "ID2" when the remote control AMP ID code is set to "2202".

Setting remote control AMP ID codes

You need to set the remote control AMP ID code for the remote control.

1 Set the operation mode selector to AMP or SOURCE.

2 Press and hold LEARN for about 3 seconds using a ballpoint pen or similar object and then press ◁ / ▷ repeatedly until "L;AMP" appears in the display window on the remote control.

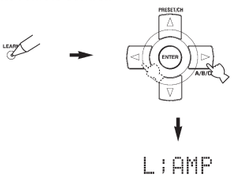


Notes

- Be sure to press and hold **LEARN** for at least 3 seconds, otherwise the learning process will start.
- If you do not complete each of the following steps within 30 seconds, the setting mode will be automatically canceled. In this case, start over from step 1.

3 Press ENTER.

The four-digit code set for the selected input area appears in the display window on the remote control.

4 Press the numeric buttons to enter the four-digit remote control code for the input area you want to use.



Remote control AMP ID codes

Select one of the following codes to set the remote control AMP ID code for the input area you want to use.

AMP ID code (remote control setting)	Function	Remote control AMP ID
2201 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
2202	To operate this unit using an alternative code.	ID2

5 Press ENTER to set the number.

"OK" appears in the display window if setting was successful.
"NG" appears in the display window if the setting was unsuccessful. In this case, start over from step 1.

6 Press LEARN again to exit from the setup mode.



REMOTE CONTROL RAV372

Advanced setup

■ Remote control TUNER ID REMOTE TU


Use this feature to set the TUNER ID of this unit for remote control recognition.
Choices: **ID1**, ID2
- Select "ID1" when the remote control TUNER ID code is set to "2602".
- Select "ID2" when the remote control TUNER ID code is set to "2610".

Setting remote control TUNER ID codes

You need to set the remote control TUNER ID library code for the remote control.

1 Set the operation mode selector to AMP or SOURCE and then press TUNER on the remote control to select the tuner to change the remote control ID.

2 Press and hold LEARN for about 3 seconds using a ballpoint pen or similar object and the ◁ / ▷ repeatedly until "L;TUN" and "TUNER" appear in the display window on the remote control.

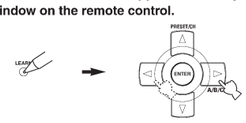


Notes

- Be sure to press and hold **LEARN** for at least 3 seconds, otherwise the learning process will start.
- If you do not complete each of the following steps within 30 seconds, the setting mode will be automatically canceled. In this case, start over from step 1.

3 Press ENTER.

The four-digit code set for the selected input area appears in the display window on the remote control.

4 Press the numeric buttons to enter the four-digit remote control code for the input area you want to use.



Remote control tuner ID codes

Select one of the following codes to set the remote control tuner ID code for the input area you want to use.

Tuner ID code (remote control setting)	Function	Remote control tuner ID
2602 (initial setting)	To operate this unit using the default code.	ID1 (initial setting)
2610	To operate this unit using an alternative code.	ID2

5 Press ENTER to set the number.

"OK" appears in the display window if setting was successful.
"NG" appears in the display window if the setting was unsuccessful. In this case, start over from step 1.

6 Press LEARN again to exit from the setup mode.



ADVANCED OPERATION

English

Advanced setup

■ SIRIUS Satellite Radio Parental Lock personal identification number reset SR PIN

Use this feature to set the code number (personal identification number) for the SIRIUS Satellite Radio Parental Lock feature to the initial factory setting. This feature is useful when you forget or want to change the current code number.
Choices: RESET, **CANCEL**
- Select "RESET" to set the code number to the initial factory setting.
- Select "CANCEL" to set the code number to the initial factory setting.

Note

Even if you set "SR PIN" to "RESET", this unit does not unlock the locked channels. The initial factory setting of the Parental Lock code number is "0000".

■ Bi-amplifier setting BI-AMP

Use this feature to activate or deactivate the bi-amplifier function.
Choices: ON, **OFF**
- Select "ON" if you want to activate the bi-amplifier function. "SUR.B L/R SP" is set to "NONE" automatically, and this unit outputs the front channel audio signals at the SURROUND BACK/BI-AMP speaker terminals.
- Select "OFF" if you want to deactivate the bi-amplifier function.

Note

When "BI-AMP" is set to "ON", you can only select "FRONT B" or "NONE" in "EXTRA SP ASSIGN".

■ SCENE IR code setting SCENE IR

Use this feature to output the remote control signals at the REMOTE OUT jack automatically when this unit is in the SCENE mode.
Choices: **ON**, OFF
- Select "ON" when the component connected to the REMOTE OUT jack is the Yamaha component and has the capability of the SCENE control signals. This unit automatically sends the remote control signals to the component.
- Select "OFF" when the component connected to the REMOTE OUT jack is not the Yamaha component and does not have the capability of the SCENE control signals.

Note

If noises are output when you operate the SCENE function, set "SCENE IR" to "OFF".

■ Tuner frequency step TU (Asia and General models only)

Use this feature to set the tuner frequency step according to the frequency spacing in your area.
Choices: **AM10/FM100**, AM9/FM50
- Select "AM10/FM100" for North, Central and South America.
- Select "AM9/FM50" for all other areas.

■ Parameter initialization INIT

Use this feature to reset the parameters of this unit to the initial factory settings. You can select the category of parameters to be initialized.
Choices: DSP PARAM, VIDEO, ALL, **CANCEL**
- Select "DSP PARAM" to initialize all the parameters of the sound field programs.
- Select "VIDEO" to initialize the parameters in "VIDEO SET" and "OSD SHIFT" in "DISPLAY SET".
- Select "ALL" to initialize all the parameters of this unit.
- Select "CANCEL" to cancel the initialization procedure.

Notes

- The advanced setup menu parameters are not initialized.
- Use "INITIALIZE" in the sound field program menu to initialize the parameters of the desired program.

ADVANCED OPERATION

English

Resetting the system

Use this feature to reset all the parameters of this unit to the initial factory settings.

Notes

- This procedure completely resets all the parameters of this unit including the "SET MENU" parameters. However, the advanced setup menu parameters will not be initialized.
- The initial factory settings are activated next time you turn on this unit.

To cancel the initialization procedure at any time without making any changes, press **SYSTEM OFF** on the front panel.

1 Press SYSTEM OFF on the front panel to set this unit to the standby mode.

2 Press and hold TONE CONTROL and then press MAIN ZONE ON/OFF to turn on this unit.
This unit turns on, and the advanced setup menu appears in the front panel display.



3 Rotate the PROGRAM selector to select "INIT".

4 Press TONE CONTROL repeatedly to select "ALL".

Select "CANCEL" to cancel the initialization procedure without making any changes.

5 Press SYSTEM OFF to confirm your selection and set this unit to the standby mode.

ADDITIONAL INFORMATION

English

本機の設定を変更する（ADVANCED SETUP）

フロントパネルディスプレイに表示されるメニューを見ながら、さまざまな項目を設定します。アドバンストセットアップメニューでは、本機の設定を初期設定に戻したり、リモコン ID を変更したりすることができます。お好みに合わせて、設定を変更してください。各項目の初期設定は、太字で記載しています。

ご注意

- 変更した設定は、STANDBY/ON キーを押して本機の電源を入れ直したときから有効になります。
- アドバンストセットアップメニューの操作中は、本体の STANDBY/ON キー、TONE CONTROL キー、PROGRAM セレクター以外は機能しません。
- アドバンストセットアップメニューの操作中は、他の操作はできません。
- アドバンストセットアップメニューはフロントパネルディスプレイでのみ操作できます。

アドバンストセットアップメニューの操作手順

1 本体の STANDBY/ON キーを押して、本機の電源をスタンバイにする。

2 TONE CONTROL キーを押しながら、もう一度 STANDBY/ON キーを押す。
本機の電源がオンになり、アドバンストセットアップメニューがフロントパネルディスプレイに表示されます。



3 PROGRAM セレクターを回して、設定したいメニューを選ぶ。
フロントパネルディスプレイにメニューが表示されます。



4 TONE CONTROL キーを繰り返し押して、設定したい項目を選ぶ。

5 STANDBY/ON キーを押して、本機の電源をスタンバイにする。
変更した設定が保存されます。

変更した設定は、次回電源を入れたときから有効になります。


■ アンプ用リモコン ID 設定 REMOTE AMP
本体のアンプ操作用リモコン ID を、リモコンのアンプ操作用コードの設定に合わせて切り替えます。本機を設置している部屋で別のヤマハ製アンプをお使いの場合に、本機のリモコン操作でもう 1 台のアンプが動作するのを防止します。
選択項目：**ID1**、ID2
- リモコンのアンプ操作用コードを「00001」に設定しているときは、「ID1」を選んでください。
- リモコンのアンプ操作用コードを「00002」に設定しているときは、「ID2」を選んでください。

リモコンのアンプ操作用コードを変更する
リモコンのアンプ操作用コードをアンプ操作用リモコン ID に合わせて変更します。

1 CODE SET ボタンを、ボールペンなどの先の細いもので押す。
TRANSMIT インジケーターが 2 回点滅します。



2 数字キーを押して、「00001」または「00002」と入力する。
TRANSMIT インジケーターが 2 回点滅し、アンプ操作用コードが変更されます。

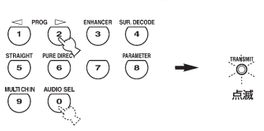

応用操作

本機の設定を変更する（ADVANCED SETUP）

アンプ ID コード *1	機能	アンプ用リモコン ID *2
00001（初期設定）	初期設定のコードを使って操作します。	ID1（初期設定）
00002	別コードを使って操作します。	ID2

*1 リモコン側の設定
*2 本体側の設定

■ チューナー用リモコン ID 設定 REMOTE TU
本体のチューナー操作用リモコン ID を、リモコンのチューナー操作用コードの設定に合わせて切り替えます。
選択項目：**ID1**、ID2
- リモコンのチューナー操作用コードを「82915」に設定しているときは、「ID1」を選んでください。
- リモコンのチューナー操作用コードを「82178」に設定しているときは、「ID2」を選んでください。

リモコンのチューナー操作用コードを変更する
リモコンのチューナー操作用コードをチューナー操作用 ID に合わせて変更します。

1 TUNER キーを押して、入力をチューナーに切り替える。



2 CODE SET ボタンを、ボールペンなどの先の細いもので押す。
TRANSMIT インジケーターが 2 回点滅します。



3 数字キーを押して、「82915」または「82178」と入力する。
TRANSMIT インジケーターが 2 回点滅し、チューナー操作用コードが変更されます。



チューナー ID コード *1	機能	チューナー用リモコン ID *2
82915（初期設定）	初期設定のコードを使って操作します。	ID1（初期設定）
82178	別コードを使って操作します。	ID2

*1 リモコン側の設定
*2 本体側の設定

■ バイアンプ設定 BI-AMP
SURROUND BACK/BI-AMP 端子を使って、バイアンプ接続するかしないかを設定します。

選択項目：ON、**OFF**
- バイアンプ接続する場合は、「ON」を選んでください。「SUR. B L/R SP」が自動的に「NONE」に設定され、本機の SURROUND BACK/BI-AMP 端子からはフロントチャンネル信号が出力されます。
- バイアンプ接続しない場合は、「OFF」を選んでください。

ご注意
「BI-AMP」を「ON」に設定した場合、「EXTRA SP ASSIGN」の「PRESENCE」は選べません。

■ SCENE 選択時の IR 出力設定 SCENE IR
SCENE（シーン）キーを押したときに、本機リアパネルの REMOTE OUT 端子からコントロール信号を出力するかしないかを設定します。
選択項目：**ON**、OFF
- 本機の REMOTE OUT 端子に接続した機器が SCENE コントロール信号の受信機能を持つヤマハ製機器の場合は、「ON」を選んでください。本機は自動的に、接続した機器にコントロール信号を伝送します。
- 本機の REMOTE OUT 端子に接続した機器がヤマハ製機器でない場合や、SCENE コントロール信号の受信機能を持たない場合は、「OFF」を選んでください。

ご注意
SCENE 機能を操作しているときにノイズが出力される場合は、「OFF」に設定してください。

■ 初期設定に戻す INIT

変更した設定を初期設定に戻します。初期設定に戻す項目を選んでください。

選択項目：DSP PARAM、VIDEO、ALL、CANCEL

- 音場プログラムを初期設定に戻すには、「DSP PARAM」を選んでください。
- 「DISPLAY SET」の「VIDEO SET」、および「OSD SHIFT」を初期設定に戻すには、「VIDEO」を選んでください。
- すべてを初期設定に戻すには、「ALL」を選んでください。
- 初期設定に戻さない場合は、「CANCEL」を選んでください。

ご注意

音場プログラムごとに音場パラメーターを初期設定に戻すには、音場パラメーター「INITIALIZE」で設定してください。

すべての設定を初期設定に戻す

変更したセットメニューの設定や音場パラメーター、プリセットした FM ／ AM 放送局などをすべて初期設定に戻します。

ご注意

変更した設定は、次回電源を入れたときから有効になります。

☀
初期化操作を中止するには、フロントパネルの **STANDBY/ON** キーを押してください。

1 STANDBY/ON キーを押して、本機の電源をスタンバイにする。

2 TONE CONTROL キーを押しながら STANDBY/ON キーを押す。
本機の電源がオンになり、フロントパネルディスプレイにアドバンストセットアップメニューが表示されます。



3 PROGRAM セレクターを回して、「INIT」を選ぶ。

4 TONE CONTROL キーを繰り返し押して、「ALL」を選ぶ。

☀
初期設定に戻さない場合は、「CANCEL」を選んでください。

5 STANDBY/ON キーを押して、本機の電源をスタンバイにする。
すべての設定が初期設定に戻ります。

Using Bluetooth™ components

You can connect a Yamaha Bluetooth adapter (such as YBA-10, sold separately) to the DOCK terminal of this unit and enjoy the music contents stored in your Bluetooth component (such as a portable music player) without wiring between this unit and the Bluetooth component. You need to perform "pairing" the connected Bluetooth adapter and your Bluetooth component in advance.

Pairing the Bluetooth™ adapter and your Bluetooth™ component

Pairing must be performed when using a Bluetooth component with the Bluetooth adapter connected to this unit for the first time or if the pairing data has been deleted. "Pairing" refers to the operation of registering a Bluetooth component for Bluetooth communications.

☀
- You only need the pairing operation for the first time that you use the Bluetooth component with the Bluetooth adapter.
- Pairing requires operations on this unit and on the other component with which Bluetooth communications are to be established. If necessary, refer to the other component's operating instructions.

There are two pairing methods: pairing by using "START PAIRING" in "SET MENU" and quick pairing.

■ **Pairing by using "SET MENU"**

Use this feature to perform pairing with the video monitor. Select "START PAIRING" in "INPUT MENU".

■ **Quick pairing**

To ensure security, a time limit of 8 minutes is set for the pairing operation. You are recommended to read and fully understand all the instructions before starting.

1 Rotate the ⓇINPUT selector (or press ④V-AUX/DOCK) to select "V-AUX" as the input source.

2 Turn on the Bluetooth component you want to pair with.

3 Press and hold ⓒBAND (or ⑦BAND) for 3 seconds.
Once the Bluetooth adapter starts pairing, "Searching..." appears for a moment. While the Bluetooth adapter is in the pairing mode, DOCK indicator flashes in the front panel display.

☀
To cancel the pairing, press ⓒBAND (or ⑦BAND) again.

Note

If the Bluetooth adapter is not connected to the DOCK terminal of this unit, "No BT adapter" appears in the front panel display.

4 Check that the Bluetooth component detects the Bluetooth adapter.
If the Bluetooth component detects the Bluetooth adapter, "YBA-10 YAMAHA" (example) appears in the Bluetooth device list.

5 Select the Bluetooth adapter in the Bluetooth device list and then enter the pass key "0000" on the Bluetooth component.
When the pairing procedure is successful, "Completed" appears in the front panel display.

Note

The Yamaha Bluetooth adapter can be paired with up to eight Bluetooth components. When pairing is conducted successfully with a ninth component and the pairing data is registered, the pairing data for the least recently used other component is cleared.

Playback of the Bluetooth™ component

1 Rotate the ⓇINPUT selector (or press ④V-AUX/DOCK) to select "V-AUX" as the input source.

2 Start playback of your Bluetooth component.
When the connected Bluetooth adapter detects the Bluetooth component, "BT connected" and the DOCK indicator appears in the front panel display.

☀
- When you press ⑧ENTER on the remote control, the connected Bluetooth adapter searches and connect to the last connected Bluetooth component. If the Bluetooth adapter cannot find the Bluetooth component, "Not found" appears in the front panel display.
- To disconnect the Bluetooth adapter from the Bluetooth component, press ⑨RETURN.

Bluetooth® 機器を再生する

ヤマハ製 Bluetooth アダプター（別売 YBA-10 など）を DOCK 端子に接続すれば、本機と Bluetooth 機器（ポータブルオーディオプレーヤーなど）をケーブルで接続することなく、Bluetooth 機器に保存した音楽ファイルを再生できます。再生する前に、Bluetooth アダプターと Bluetooth 機器を「ペアリング」してください。

Bluetooth® アダプターと Bluetooth® 機器をペアリングする

Bluetooth 機器を Bluetooth アダプターを使って本機で再生する前に、「ペアリング」を行います。本機能をはじめて使う場合や、ペアリングしたデータが消去された場合は、必ず行ってください。「ペアリング」とは、Bluetooth で通信するために Bluetooth 機器を登録することです。

☀
- ペアリングは、Bluetooth 機器と Bluetooth アダプターをはじめて使うときのみ必要です。
- Bluetooth で通信できるようにするには、本機および Bluetooth 機器の両方でペアリングしてください。必要に応じて Bluetooth 機器の取扱説明書もご覧ください。

本機では、セットメニュー「START PAIRING」と、クイックペアリングの 2 種類の方法でペアリングできます。

■ **セットメニューでペアリングする**

モニターに表示されるメニューを見ながらペアリングします。「INPUT MENU」の「START PAIRING」を選んでください。

■ **クイックペアリングでペアリングする**

セキュリティー確保のため、ペアリングできる時間は 8 分に制限されています。以下の手順を一通り読んでから操作に移ることをおすすめします。

1 ⓖINPUT セレクターを回して（または操作機器選択スイッチ（⑯）で SOURCE を選び、④V-AUX キーを押して）、V-AUX を入力選択する。

2 ペアリングしたいBluetooth機器の電源をオンにする。

3 ⓒBAND キー（または ⑦BAND キー）を、約 3 秒間押し続ける。
フロントパネルディスプレイに「Searching...」と一時的に表示され、DOCK インジケーターが点滅します。

☀
ペアリングをキャンセルするには、再度 ⓒBAND キー（または ⑦BAND キー）を押します。

ご注意

Bluetooth アダプターが DOCK 端子に接続されていない場合は、フロントパネルディスプレイに「No BT Adapter」と表示されます。

4 Bluetooth機器がBluetoothアダプターを認識していることを確認する。
Bluetooth 機器が Bluetooth アダプターを認識している場合は、Bluetooth デバイスリストに「YBA-10 YAMAHA」（例）と表示されます。

5 BluetoothデバイスリストからBluetoothアダプターを選び、Bluetooth 機器にパスキー「0000」を入力する。
正しくペアリングされた場合は、フロントパネルディスプレイに「Completed」と表示されます。

ご注意

ヤマハ製 Bluetooth アダプターは 8 台までの Bluetooth 機器とペアリングできます。9 台目の機器が正しくペアリングされ、ペアリングデータが登録された場合、最初にペアリングした機器のデータは消去されます。

Bluetooth® 機器の再生を楽しむ

1 ⓖINPUT セレクターを回して（または操作機器選択スイッチ（⑯）で SOURCE を選び、④V-AUX キーを押して）、V-AUX を入力選択する。

2 Bluetooth 機器の再生を開始する。
接続した Bluetooth アダプターが Bluetooth 機器を認識すると、フロントパネルディスプレイに「BT connected」と表示され、DOCK インジケーターが点灯します。

☀
- ⑧ENTER キーを押すと、接続した Bluetooth アダプターは最後に接続していた Bluetooth 機器を検索し、接続します。Bluetooth アダプターが Bluetooth 機器を検索できなかった場合は、フロントパネルディスプレイに「Not found」と表示されます。
- Bluetooth アダプターと Bluetooth 機器の接続を解除するには、⑨RETURN キーを押してください。

RX-V663/HTR-6160/
DSP-AX763

YAMAHA