

The 40 Meter Full-Wave Horizontal Loop

Horizontal Loop

Take your signal to the treetops.

by Dean Frazier NH6XK

If you have the space to put up 142 feet of wire in a closed loop configuration, and you desire 10-80 meter operation, including the WARC bands, the 40 meter full-wave horizontal magnetic loop may be just what you're looking for. It doesn't have to be square, out in the open, or very high off the ground to perform well.

My 40 meter loop averages 35 feet in height (about 1/4 wave high on 40 meters), and yields 5-9 signal reports to middle America and 5-6 reports to the East Coast from my QTH on Oahu, Hawaii, with 100 watts. The loop gets 5-9 to 10 dB over into VK and ZL, across open water, and this despite the fact that (1) the loop is buried in and amongst trees of a forest, (2) the loop is not at all square, and (3) my feedline (50 ohm coax terminated with 22' 6-5/8" of 75 ohm coax, velocity factor 0.66, giving 1/4 wave on 7.2 MHz) is almost 300 feet long.

I use #12 AWG copper wire, PVC covered, and I do not use a balun. A 1:1 current balun (inductive coupling) can help to reduce RF signal pickup and re-radiation by the coax braid, but I suggest not using a balun for multiband operation unless the balun is very broadbanded (low Q) lest you burn it up at high reactance levels on frequencies other than the design band. I do cancel RF at the feed point with eight turns of the coax wound to a diameter of 6", taped together as a "coil" or RF air choke.

All antenna attachment points are via 1/8" nylon line terminating in a 3" loop of spaghetti tubing. I avoid direct contact with trees because this seems to increase the antenna's noise level on receive and also seems to cause some degradation of transmitted signal due to energy absorption into the trees (see Figure 1 and Table 2).

On bands other than 40 meters I use a matchbox (L/C circuit) to tune out reactance and help keep the SWR down to allow full power transfer. Some form of magnetic coupling in the transmission train from rig to antenna helps to suppress harmonics which can cause TVI/RFI, so a tuner, no matter how simple, is suggested, regardless of whether it is needed for impedance matching or reactance tune-out.

The feed point mechanical construction consists of a strip of plastic (a 2" PVC strip cut down the middle to make a "plate" or

strip, about 9" long) to which is mounted, via plastic ties, an SO 239 connector. One end of the antenna wire is soldered directly into the SO's center conductor; the other, after making its way around the forest through the trees, is attached to the braid side of the

PL connector of the coax (now screwed onto the SO connector) by a small hose clamp. (See Figure 2). The plastic strip is hoisted up into the trees by nylon line thrown up previously. I use the "weight and string" method of getting lines up into trees. Some fast

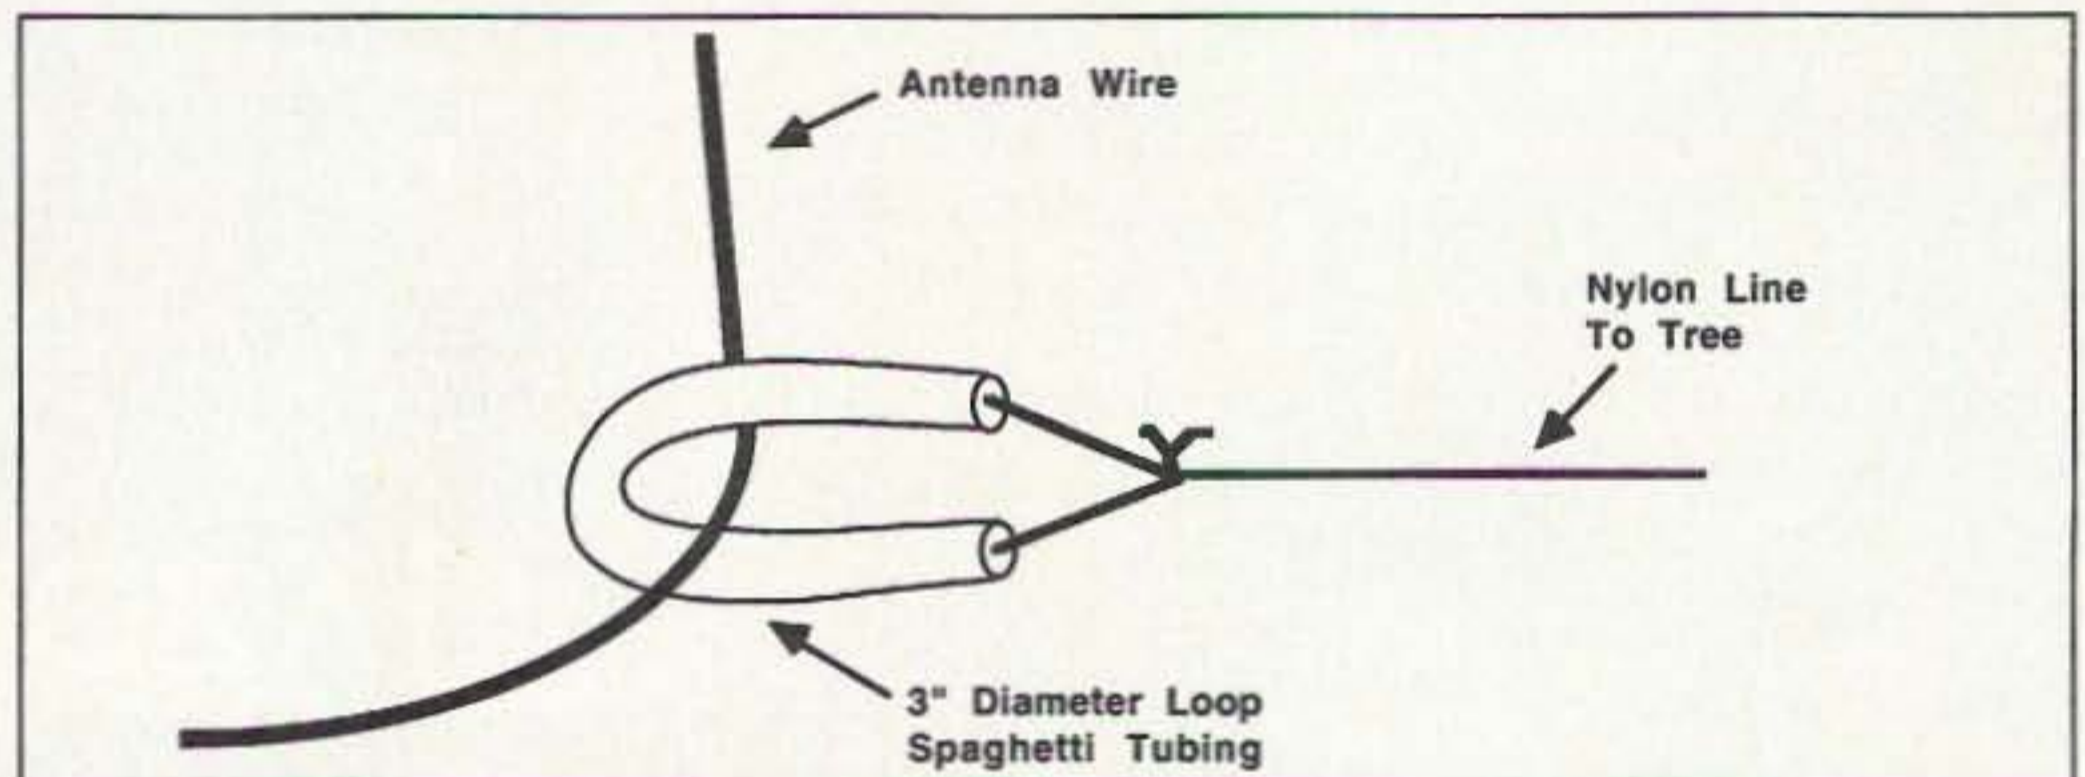


Figure 1. Attaching the nylon support line(s) to the antenna wire.

Band (meters)	Frequency (MHz)	# Waves (on wire)	Gain (dBd)	Feed Point (resistance, ohms)	Wave Angle (degrees)
10	28.500	4	+5+	140	10
12	24.940	3-1/2	+5	130	
15	21.225	3	+4+	125	13
17	18.118	2-1/2	+4	120	
20	14.200	2	+3+	110	15
30	10.120	1-1/2	+3	100	
40	7.150	1	+2+	90	30
80	3.750	1/2	+1+	60	

Table 1. 40 Meter Full-Wave Horizontal Loop (142 feet of #12 PVC covered copper wire) at 35 feet.

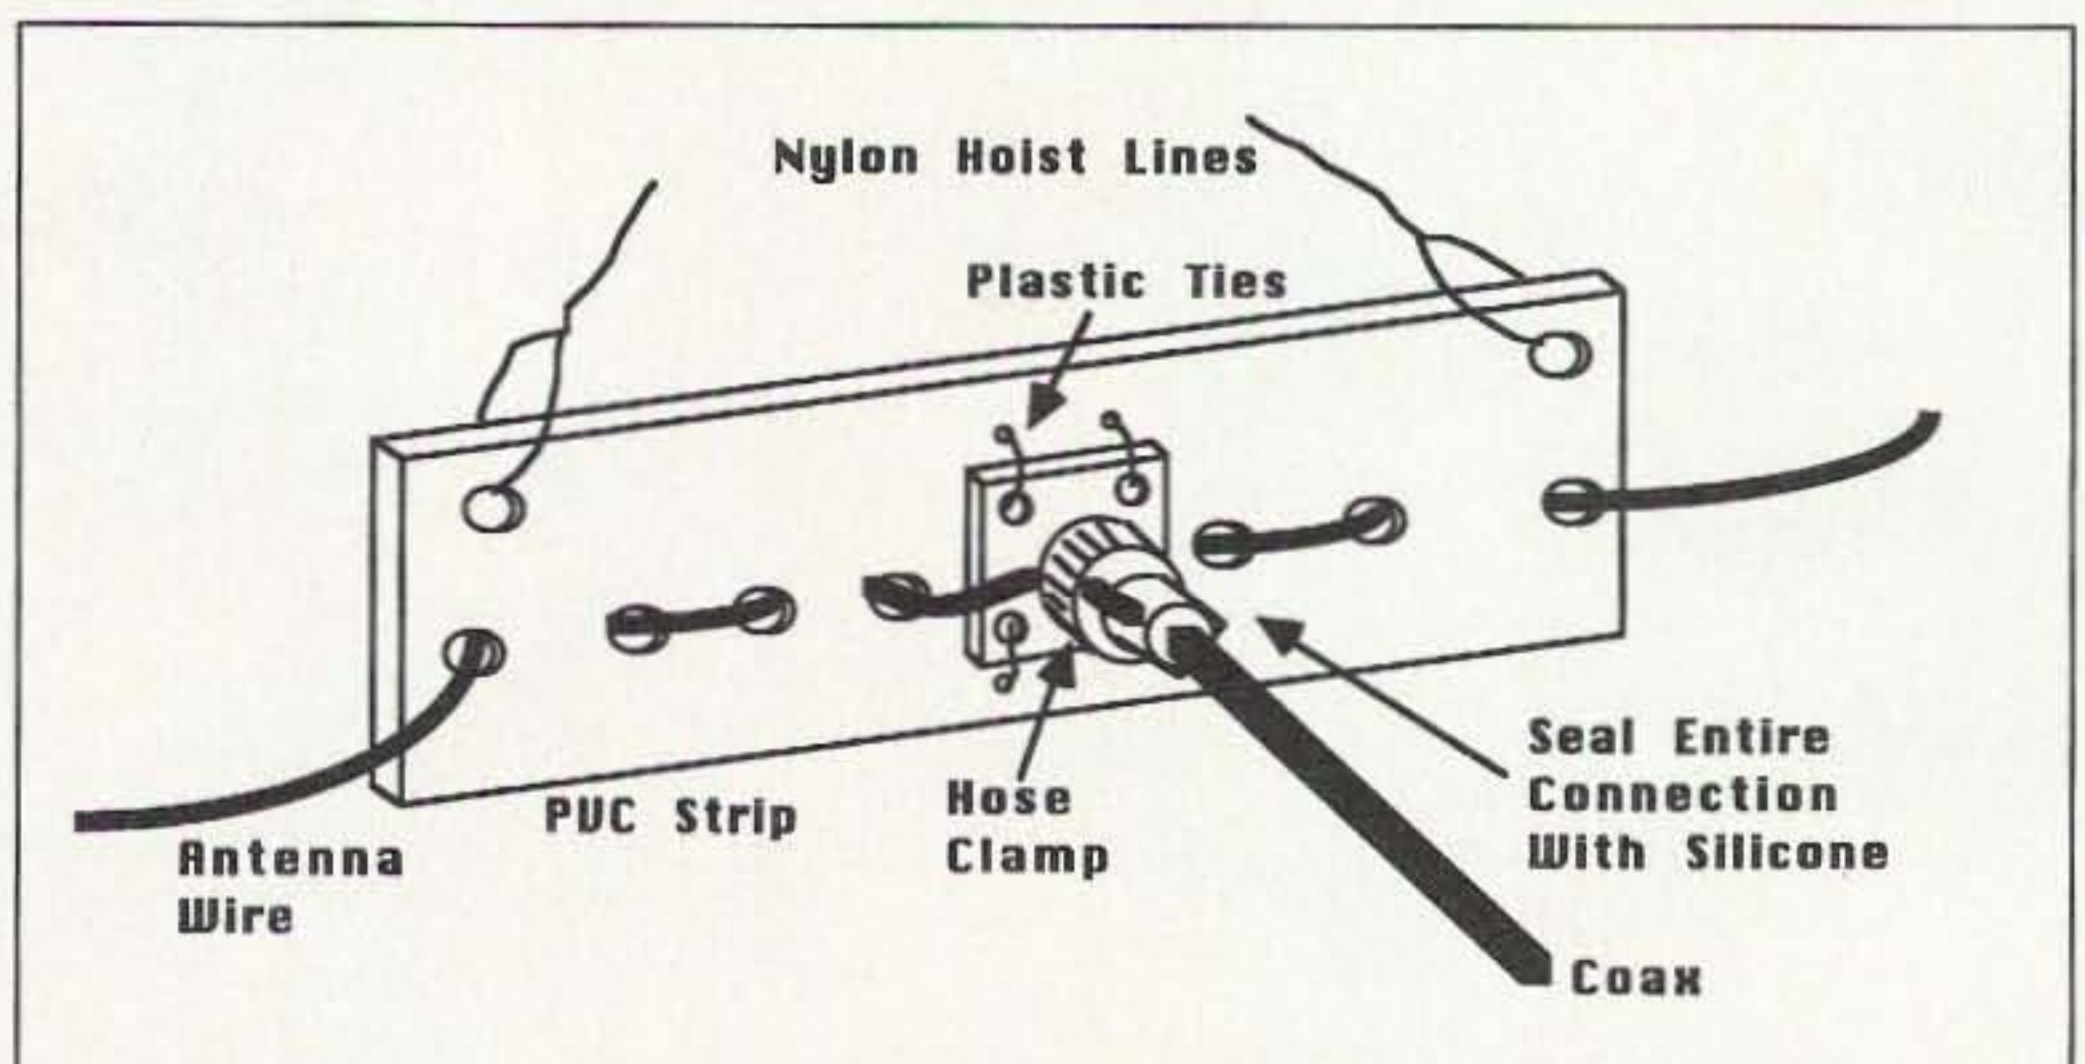


Figure 2. Feed point detail. Wire strain relief is provided by first threading each end of the loop's wires through three holes each about an inch apart, on each side of the S.O. connector, before electrical connections are made.

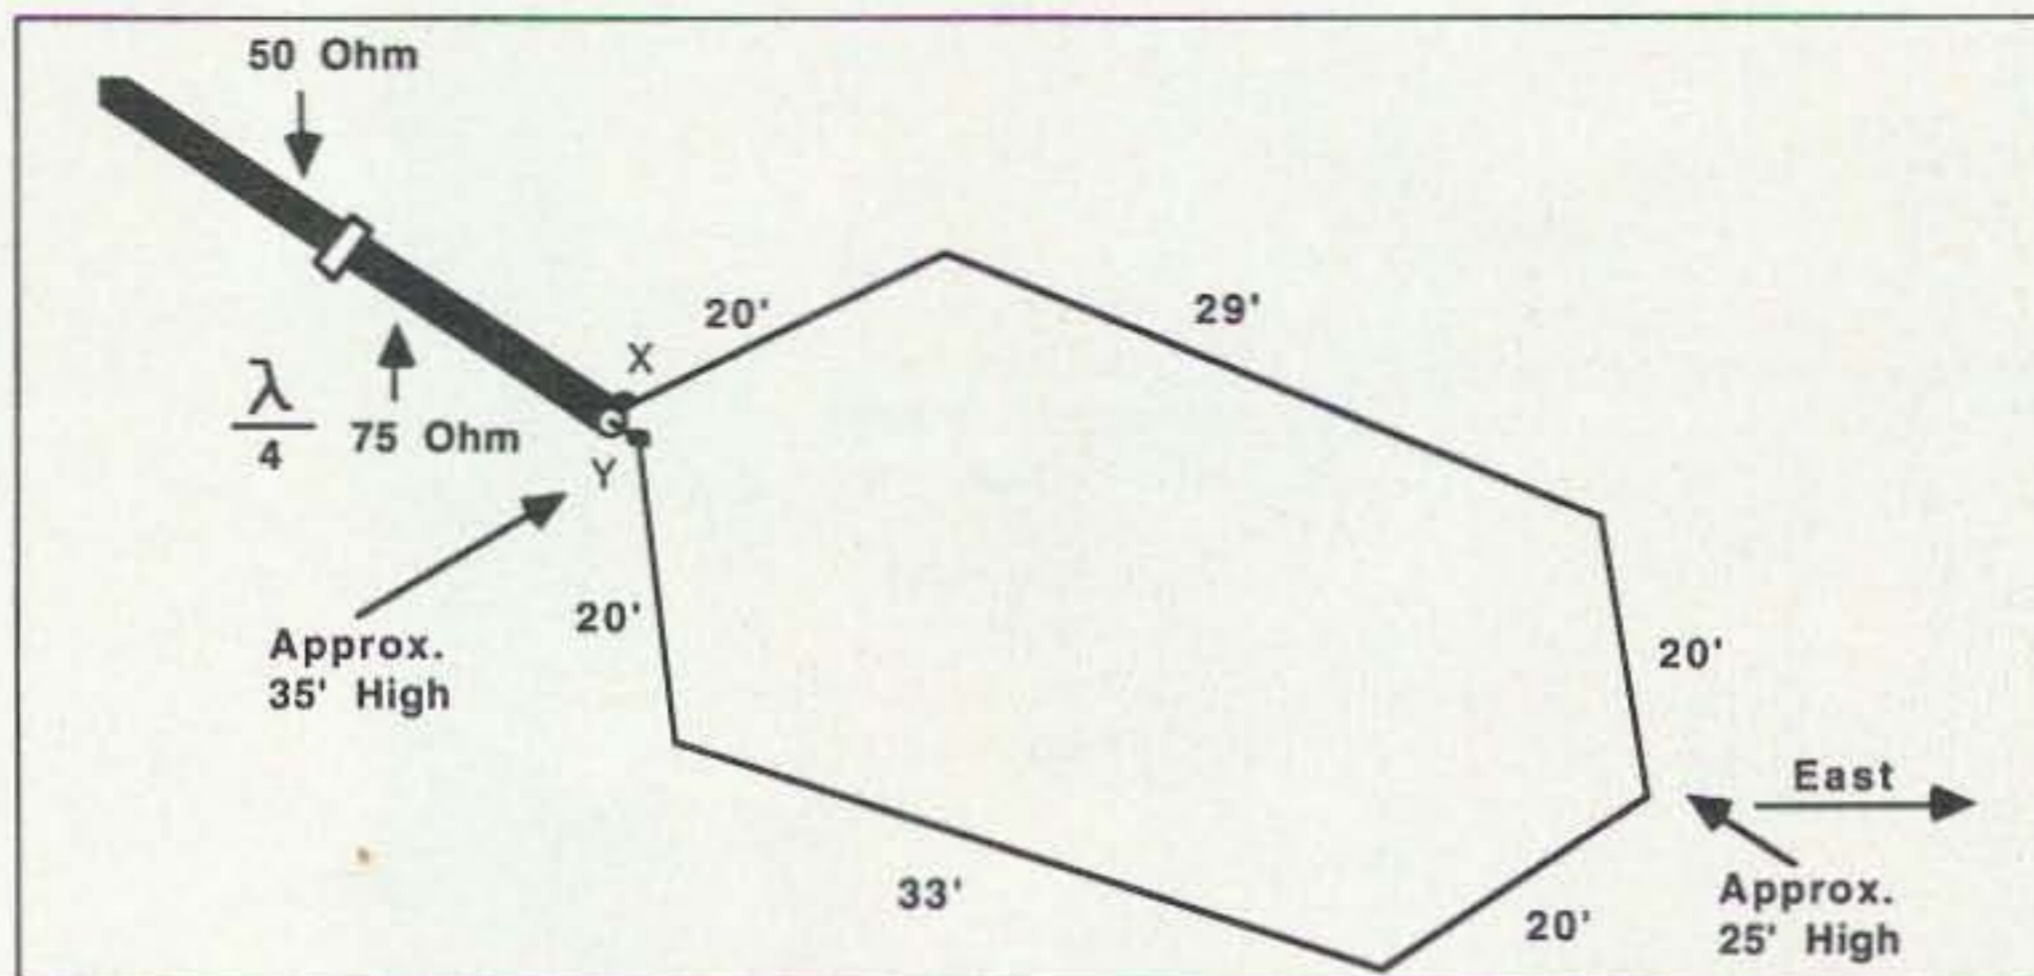


Figure 3. A view of the 40 Meter Full Wave Horizontal Loop.

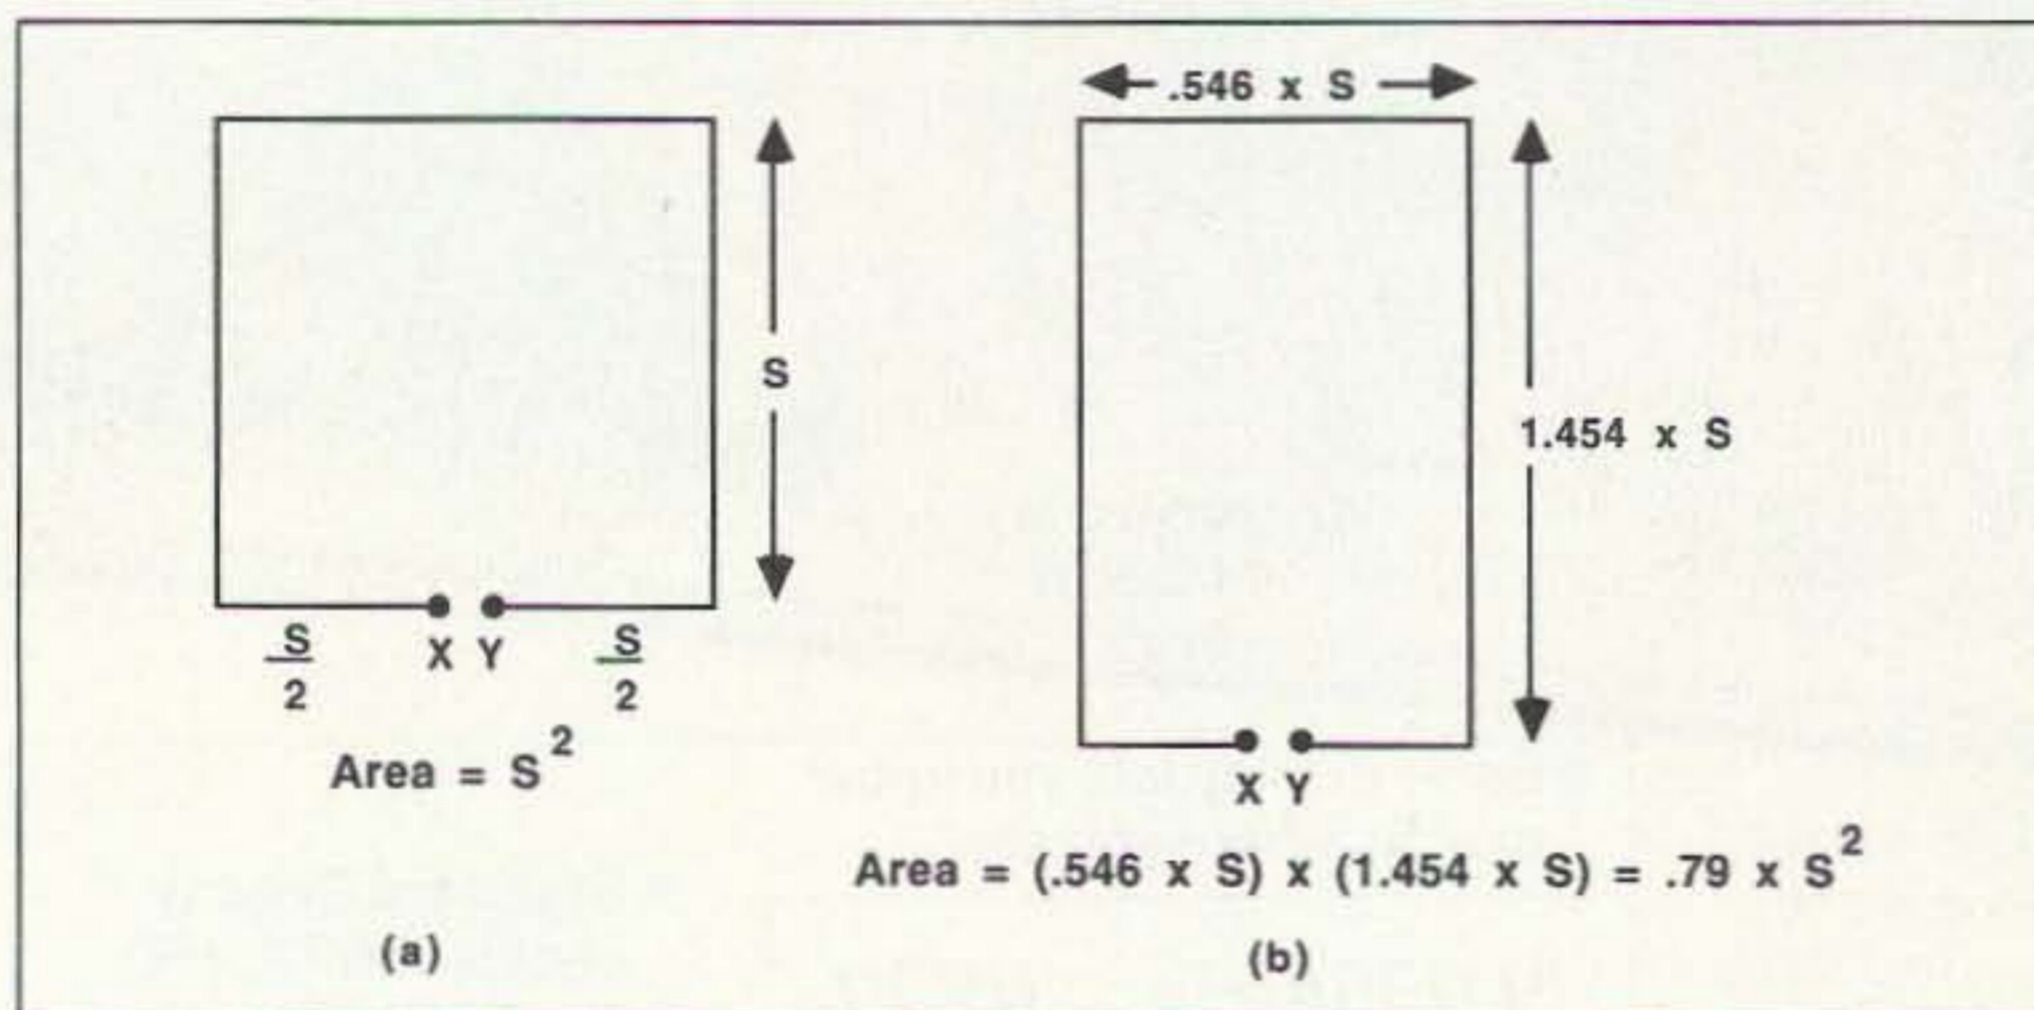


Figure 4. You don't have to make the loop square to make it work well.

twirling and a hard launch at the right angle can put a 4 oz. lead weight with light line some height up. A fishing rod/spinner works well also.

Lots of line throwing, tree branch trimming, climbing, sweat and hard work may be necessary in a thick forest to get the loop up and clear of small branches, but then again, in a clear area some supports for the antenna would be required, and it takes work to put them up, too. So, as long as you can avoid near $(\lambda/2\pi)$ field proximity to large (over 6") limbs, the loop will work almost as if the forest weren't there . . . e.g. on 40 meters, try to stay 22 feet away from large tree trunks, 12 feet on 20 meters, etc., otherwise a significant percentage of energy will be absorbed by the trees, resulting in reduced primary signal strength (see Table 1).

Concerning gain and enclosed areas, realize that a square loop (each side $1/4$ electrical wave long, all corner angles 90 degrees) has a bit more than 2 dB gain over a dipole at the same height over the same ground. For a not-square loop to lose 1 dB in signal strength compared to a square loop (a just barely detectable audio difference), its enclosed area has to be reduced about 79% of that of a square:

$$10\log(0.79) = -1 \text{ dB}$$

The signal from the loop in Figure 4B will be about 1 dB less than that from the loop in Figure 4A.

The point of this geometrical digression has been to show that you don't have to make the loop square to make it work well; just avoid making (if rectangular) the short side less than $0.546 \times$ the length of a square loop's side.

Example:

$$\text{Total wire in loop} = 1005/f(\text{MHz}) \text{ feet.}$$

$$40 \text{ meter loop wire} = 1005/7.077 \text{ MHz} = 142 \text{ feet.}$$

$$\text{If square, then each side length} = 142/4 = 35\text{-}1/2$$

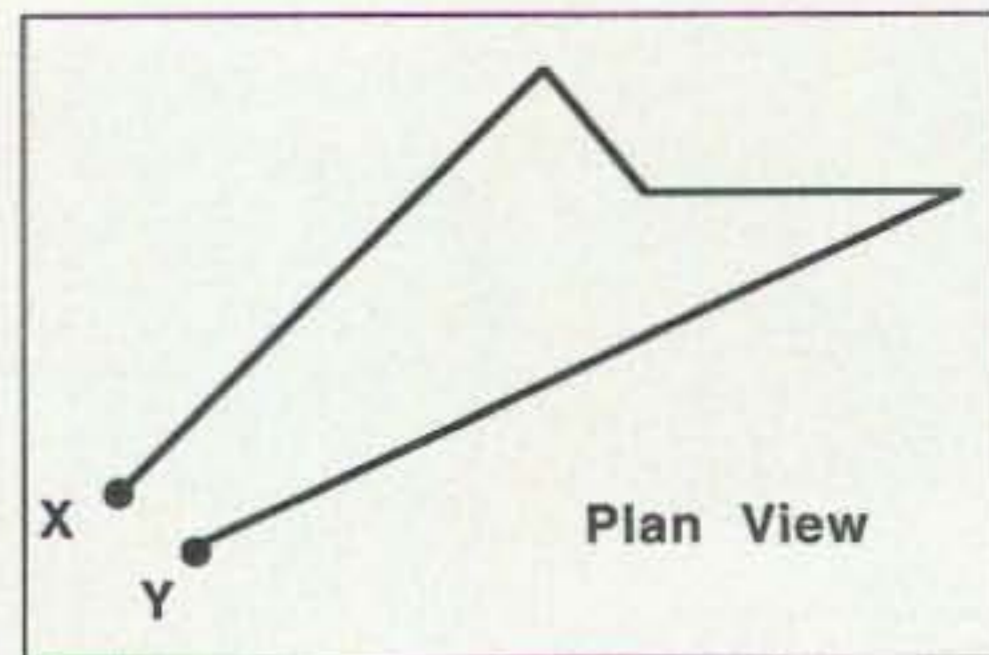


Figure 5. Internal angles of less than 90 degrees can cause signal cancellation problems.

feet, but not less than $0.546 \times 35\text{-}1/2 = 19\text{-}1/3$ feet.

Avoid internal angles less than 90 degrees. Don't use a design like that in Figure 5, for obvious reasons of signal cancellation.

If you desire stronger propagation in a preferred direction, angle the plane of the loop toward the desired direction in a sloping loop (or diamond) configuration (see Figure 6).

But if you do make the loop into a diamond shape and slope it, don't let the short width (across) become less than $0.885 \times$ the length of a side when square (see Figure 7).

Specifically, for 40 meters, a sloping diamond would look like Figure 8 (The sketch shows the minimum width and maximum length allowable before the loss resulting, compared to that of a square loop, exceeds 1 dB).

Comment: My 80 meter SkyLoop (282 feet of wire, another antenna) enjoys the advantage of both horizontal and vertical polarization, as half of the loop (the west half) is more or less horizontal, while the remaining east half slopes down into a gulch. The result is that the SkyLoop is effectively a sloping loop. It's plan layout is not at all square, but the short width is greater than $0.885 \times$ the length of a square loop's side.

Always feed horizontal loops at their highest point. And note that a 40 meter full-wave loop is a half-wave vertical on 80 meters, the loop functioning as a capacitance

Continued on page 18


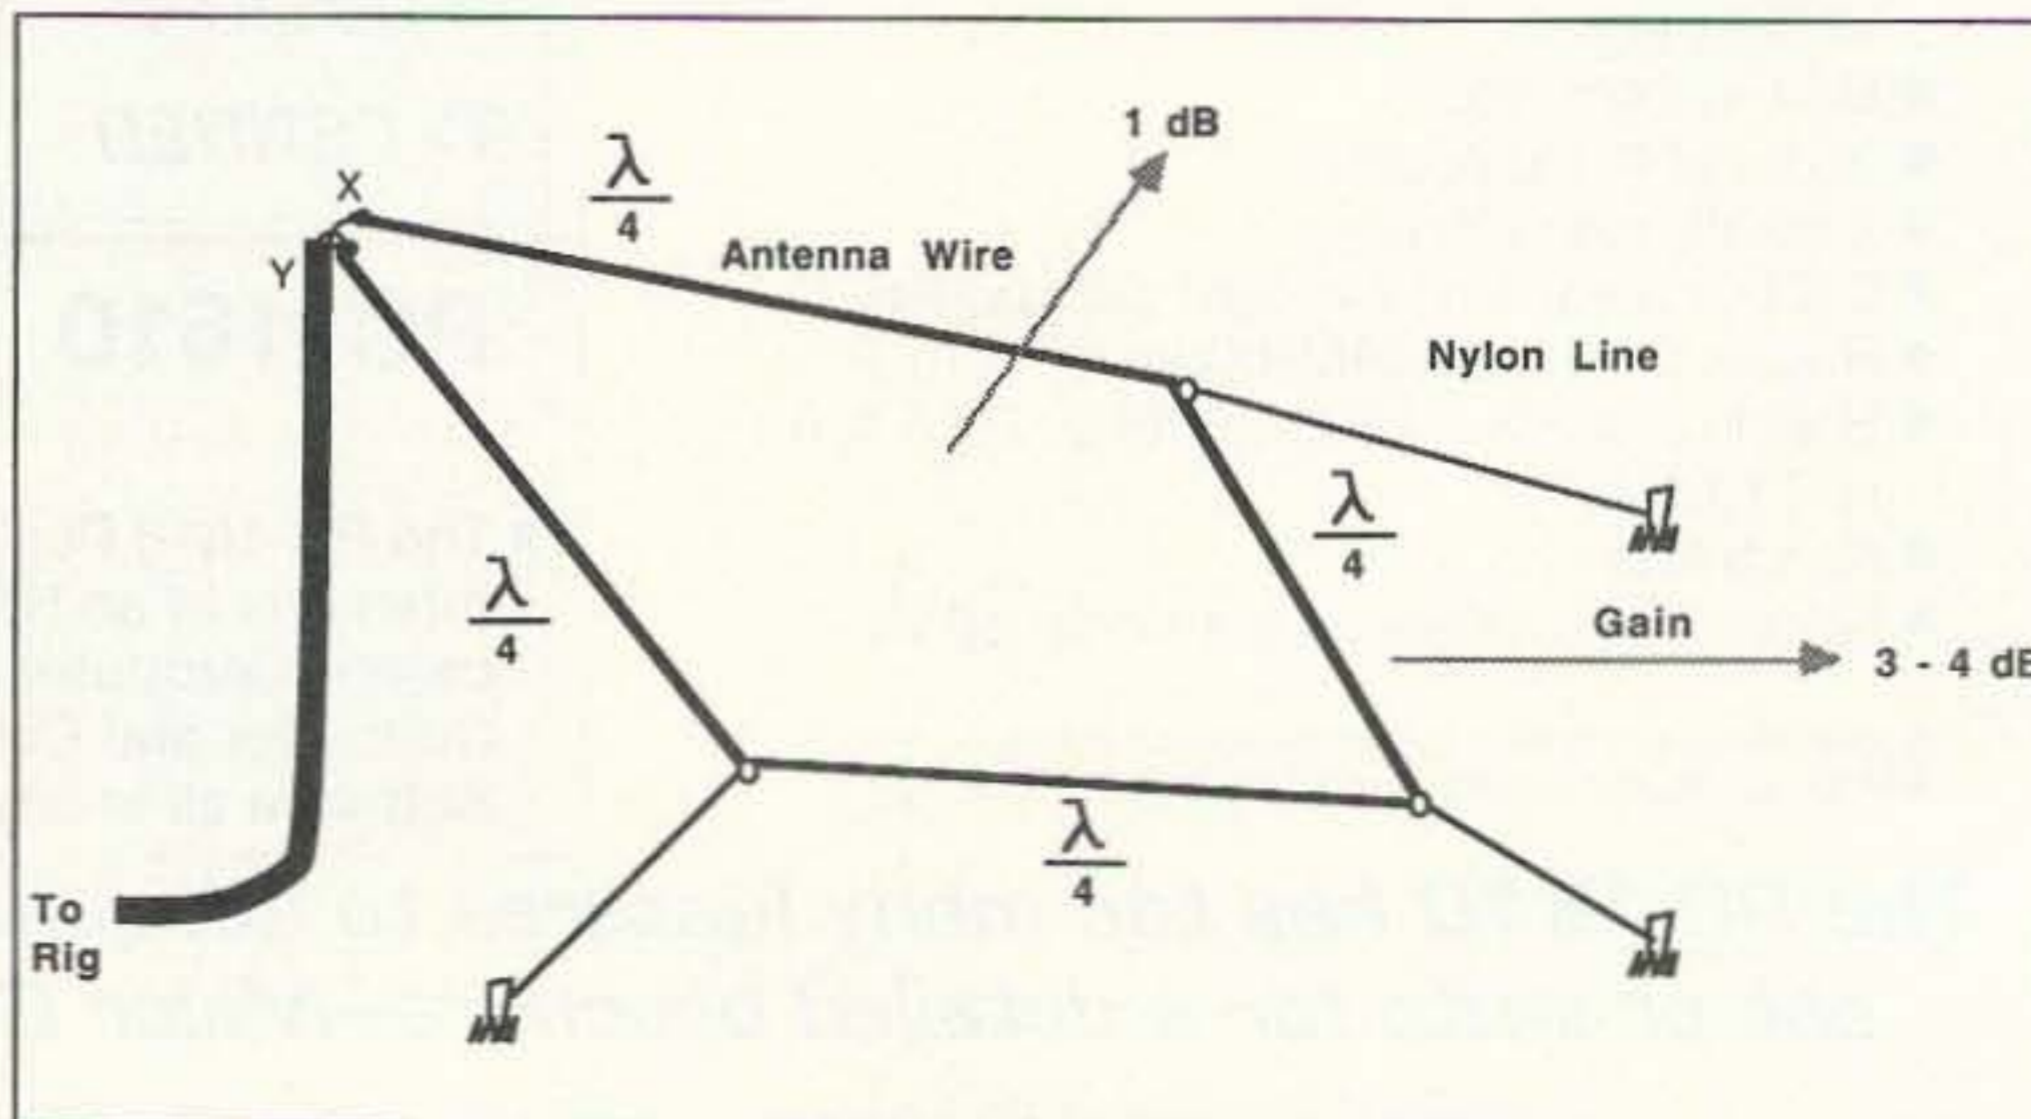


Figure 6. Directional enhancements are made by positioning the plane toward the desired angle.

See you in Dayton — Booth 340-342

MICROWAVE ANTENNAS

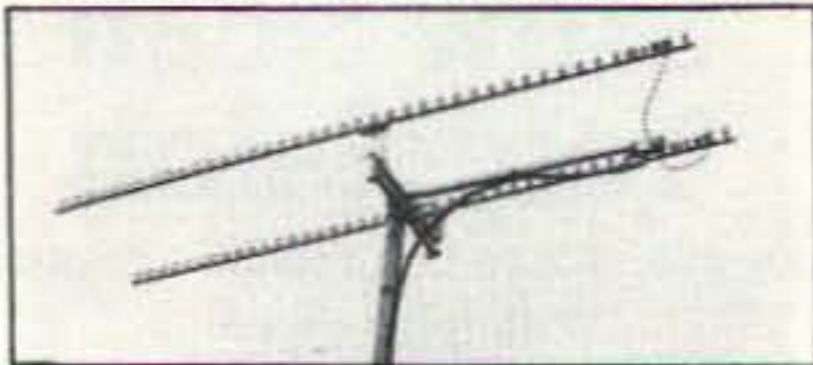


Loop Yagis, Power Dividers, Stacking Frames, Complete Array of 902, 910, 1269, 1296, 1691, 2304, 2401, 3456 MHz. For Tropo, EME, Weak Signal, OSCAR, ATV, Repeaters, WEFAX, Commercial point to point. Available in kit form or assembled and tested.

3333LYK	33el loop Yagi Kit	902 MHz	18.5 dBi	\$103.00
2345LYK	45el loop Yagi Kit	1296 MHz	21 dBi	\$103.00
2445LYK	45el loop Yagi Kit	1269 MHz	21 dBi	\$103.00
1844LY	44el loop Yagi Kit	1691 MHz	21 dBi	\$115.00
2355LYK	55el loop Yagi Kit	1296 MHz	22 dBi	\$118.00
1345LYK	45el loop Yagi Kit	2304 MHz	21 dBi	\$85.00
945LYK	45el loop Yagi Kit	3456 MHz	21 dBi	\$85.00

Now in stock- VHF & UHF Yagi's by Rutland Arrays
Other models available. Call or write for catalog.

DOWN EAST MICROWAVE

Bill Olson, W3HQT
Box 2310, RR1 Troy, ME 04987
(207) 948-3741
FAX: (207) 948-5157



TRANSVERTERS

VHF UHF MICROWAVE

Linear transverters convert IF frequency (28 or 144 MHz) to higher frequency, transmit and receive — all modes.

DEM 50-28K
6 Meter Kit, 28 MHz IF 20W out high dynamic range GaAsFET 12-14VDC. Kit includes assembled main PCB, Hybrid Amp module, Box heatsink, connectors. \$295

DEM 144-28K DEM 222-28K
2 Meters and 222 MHz high dynamic range, 20W, 12-14V. Basic kit includes pcb and components, complete kit also includes box connectors, heatsink and hardware. \$225/\$295

DEM 432K
70cm Kit, 28MHz IF 70mW out, no-tune design. \$155

DEM 432-15S
70cm, assembled and tested, 15W with internal TR switching and dual L.O. (432 and 435 MHz) \$395

Also still available — no-tune transverters for 900 to 5760 MHz. WRITE

DEM 144-28DCK.
Complete low power 2M transverter board 1-10mW out. Can be used alone or with microwave transverters for double conversion to 28 MHz IF. Kit. \$109

DEM 10-432K
10 GHz linear transverter 432 MHz IF 10 mw kit \$250
100 mw version \$300

Also available: poweramps, preamps, antennas, antenna relays, coax, components.

FREE Catalog available.

DOWN EAST MICROWAVE

BILL OLSON W3HQT
RR 1, BOX 2310
TROY, ME 04987-9721 USA
PHONE (207)948-3741
FAX (207)948-5157



MICROWAVE AMPLIFIERS

from

DOWN EAST MICROWAVE

Linear Power Amps
for SSB, ATV, FM, 902 — 1296 — 2304 — 3456 MHz

2303 PA	10mW in 3W out	1240-1300 MHz	\$130
2318 PAM	0.5W in 18W out	1240-1300 MHz	\$205
2335 PA	10W in 35W out	1240-1300 MHz	\$325
2340 PA	1W in 35W out	1240-1300 MHz	\$355
2370 PA	5W in 70W out	1240-1300 MHz	\$695
3318 PA	1W in 20W out	902-928 MHz	\$275
3335 PA	14W in 40W out	902-928 MHz	\$335
3310 PA	10mW in 10W out	902-928 MHz	\$150
432 PA	70mW in 18W out	420-450 MHz	\$180
50 - 222 Mz version now available			Write

T/R Switching available, all 13.8 VDC/Some available in kit form. Low Noise Preamps & preamp kits —432, 902, 1296, 1691, 2304, 2401, 3456 MHz, 5.7 and 10 GHz.



33LNA	preamp .5 dB NF	902 MHz	13.8V	\$ 95
23LNA	preamp .5 dB NF	1296 MHz	13.8V	\$ 95
13LNA20WP	preamp .7 dB NF	2300-2400 MHz	13.8V	\$130
1691LNAWP	preamp 1 dB NF	1691 MHz	must mounted	\$140
4017LNAK	preamp kit	400-1700 MHz	.5dB	\$ 40

Preamp kits for 2304-10 GHz weatherproof versions available Write or Call

CALL OR WRITE FOR MORE INFORMATION

DOWN EAST MICROWAVE

Bill Olson, W3HQT
Box 2310, RR1 Troy, ME 04987



(207) 948-3741 FAX: (207) 948-5157

The 40 Meter Full-Wave Horizontal Loop

Continued from page 16

hat for radiation from the vertical feedline.

Horizontal loops are easy to build, erect, and require no tuning if you cut the wire according to $L = 1005/f$ (MHz) feet, where the frequency f is for the lowest band of desired operation. Feed the loop either directly with 50 ohm coax or with a quarter wave (electrical, considering velocity factor) of 75 ohm coax; again, the quarter-wave matching

section's length is based on the lowest frequency of planned operation. Of course, tuned feeders may also be used.

For those who are unable to erect antennas very high, the 142-foot length of wire as a 40 meter full-wave horizontal loop about 35 feet above ground is a winner. And it doesn't have to be textbook square, or horizontal, to be effective. 73

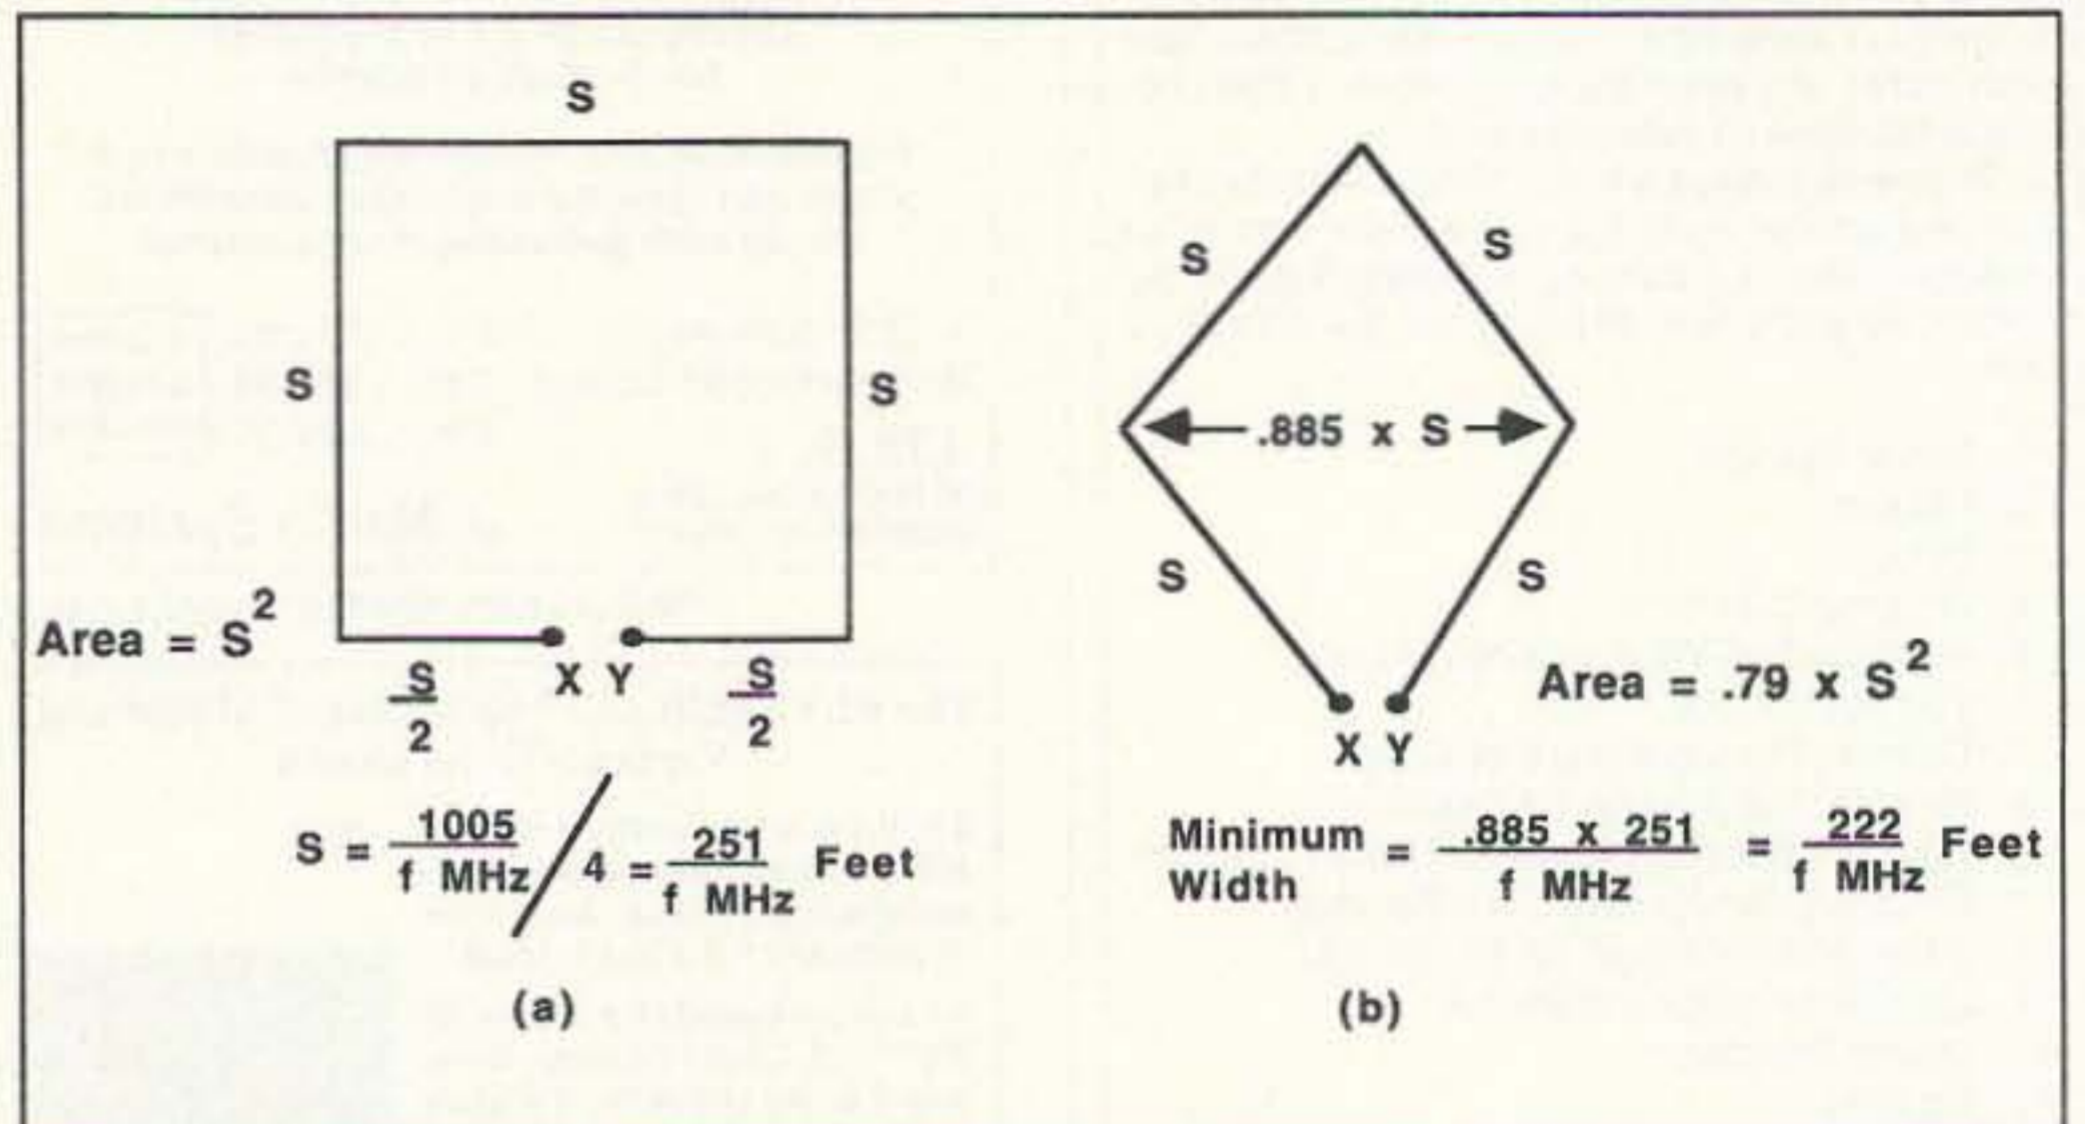


Figure 7. Don't let the short width (across) become less than 0.885 x the length of a side when square.

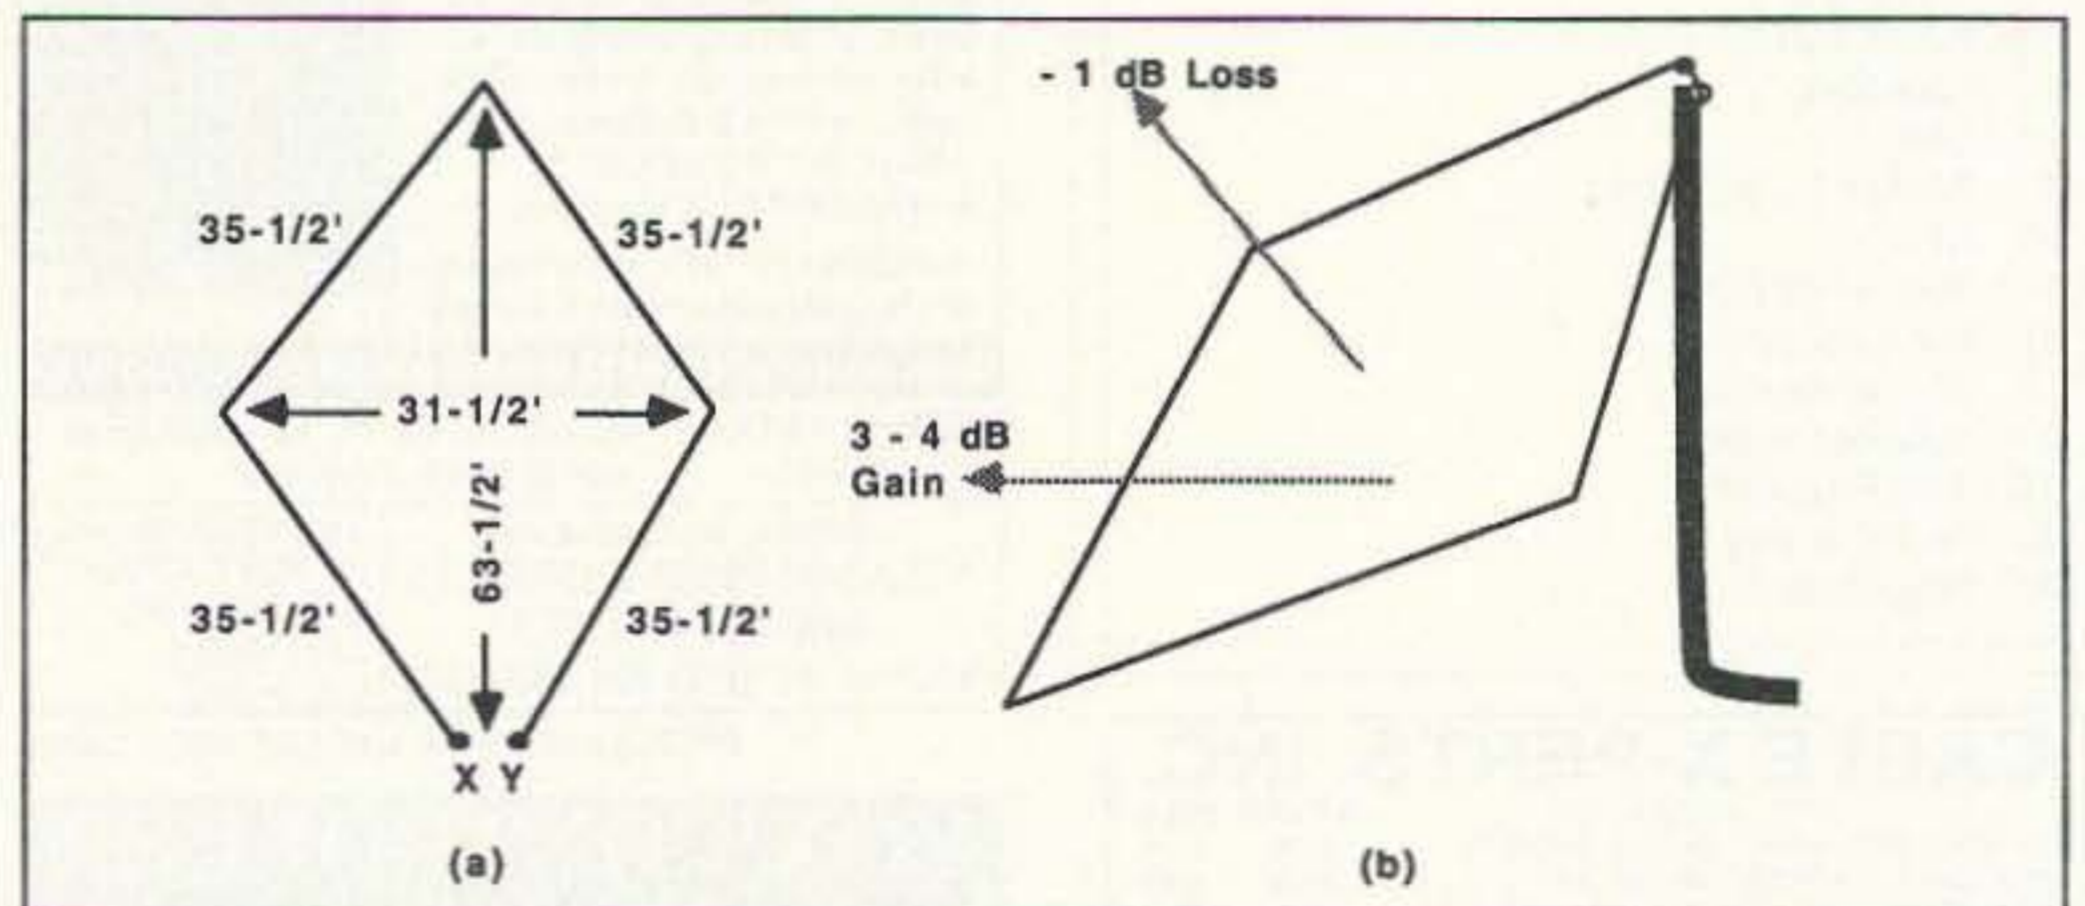


Figure 8. A sloping diamond for 40 meters.

Band (meters)	Near-Field ($\lambda/2\pi$) Clearance Distance (feet)
10	6
12	7
15	8
17	9
20	12
30	16
40	22
80	42
160	83

Table 2. When an antenna is within $\lambda/2\pi$ feet of a nearby object, such as a tree (a capacitor) or some metal (an inductor), being the free space wavelength at the frequency of operation (feet), primary signal attenuation occurs due to the energy of the near (storage) field being absorbed by the tree or metal. As a result, this energy is no longer available to reinforce, by ground reflection, the signal of the primary radiation. The loss can amount to as much as 6 dB. To avoid this phenomenon, keep all antenna wire at least these distances away from 6" diameter or larger energy-absorbing objects: