




TO-220 (3 PIN) FULL-PAK Tandem

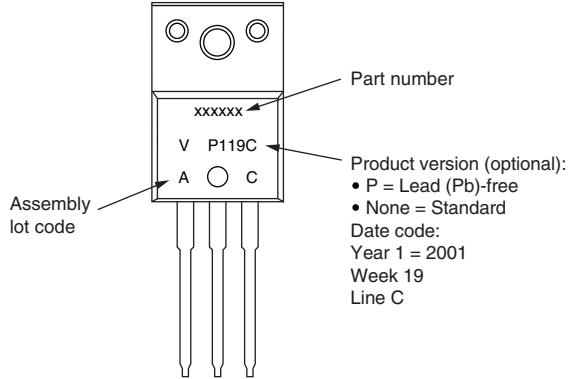

Example: This is a xxxxxx with assembly lot code AC assembled on WW 19, 2001 in the assembly line "C"