


DEVICES: PolarPAK™

PolarPAK

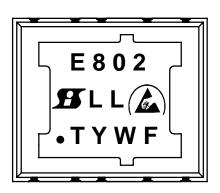

E802 = Example Base Part Number

= Siliconix Logo

LL = Lot Code

= ESD Symbol

= Pin 1 Indicator

T = Assembly Factory Code

Y = Year Code

W = Week Code

F = Wafer Fab Code

The current marking strategy is reflected. Contact your local sales representative for historical marking strategies for these packages.