





D²PAK, TO-262

D²PAK

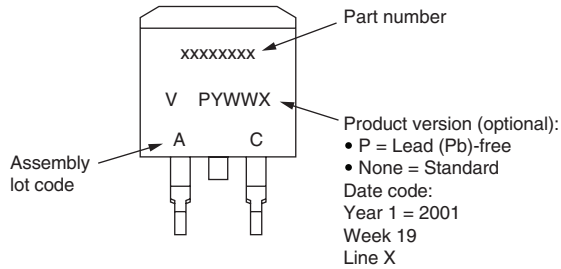

Example: This is a xxxxxxxx with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"

TO-262

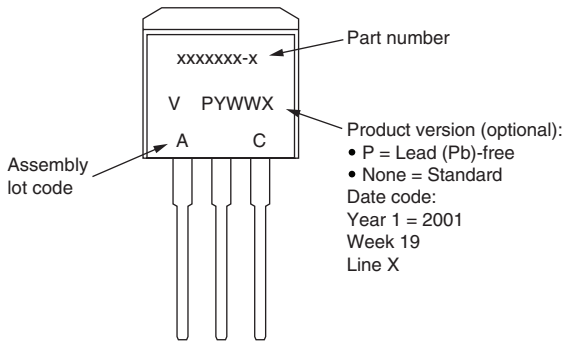

Example: This is a xxxxxxx-x with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"