





### TO-220AB, TO-220AB FULL-PAK

#### TO-220AB

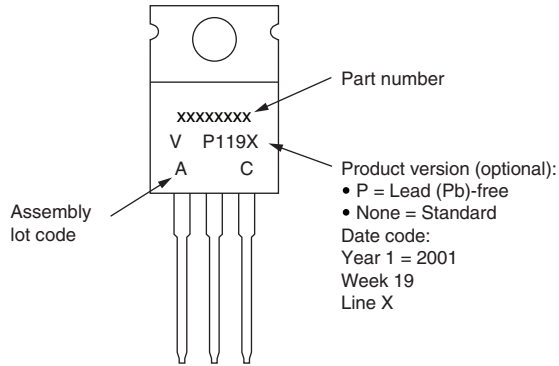

Example: This is a xxxxxxx with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"

#### TO-220AB FULL-PAK

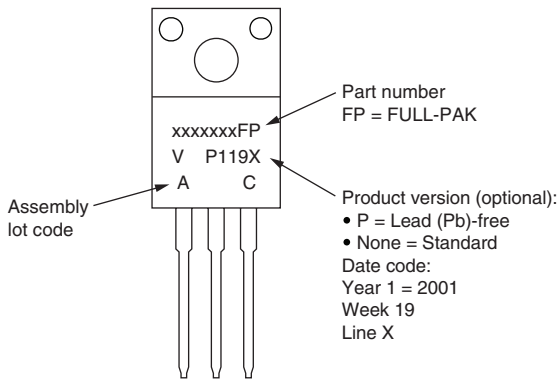

Example: This is a xxxxxxFP with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"