




## TO-220AC FULL-PAK

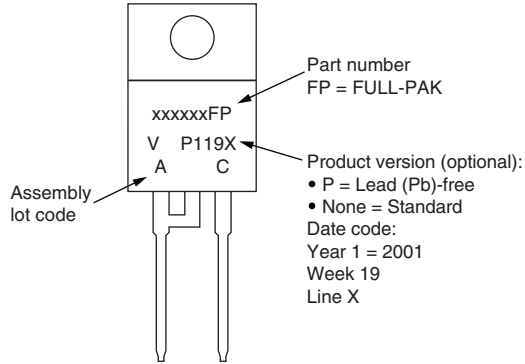

Example: This is a xxxxxxFP with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "X"