


TO-218

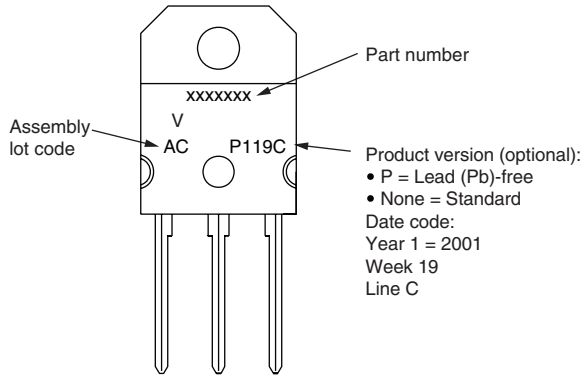

Example: This is a xxxxxxxx with assembly lot code AC, assembled on WW 19, 2001 in the assembly line "C"