


CP650 Installation Manual Installation

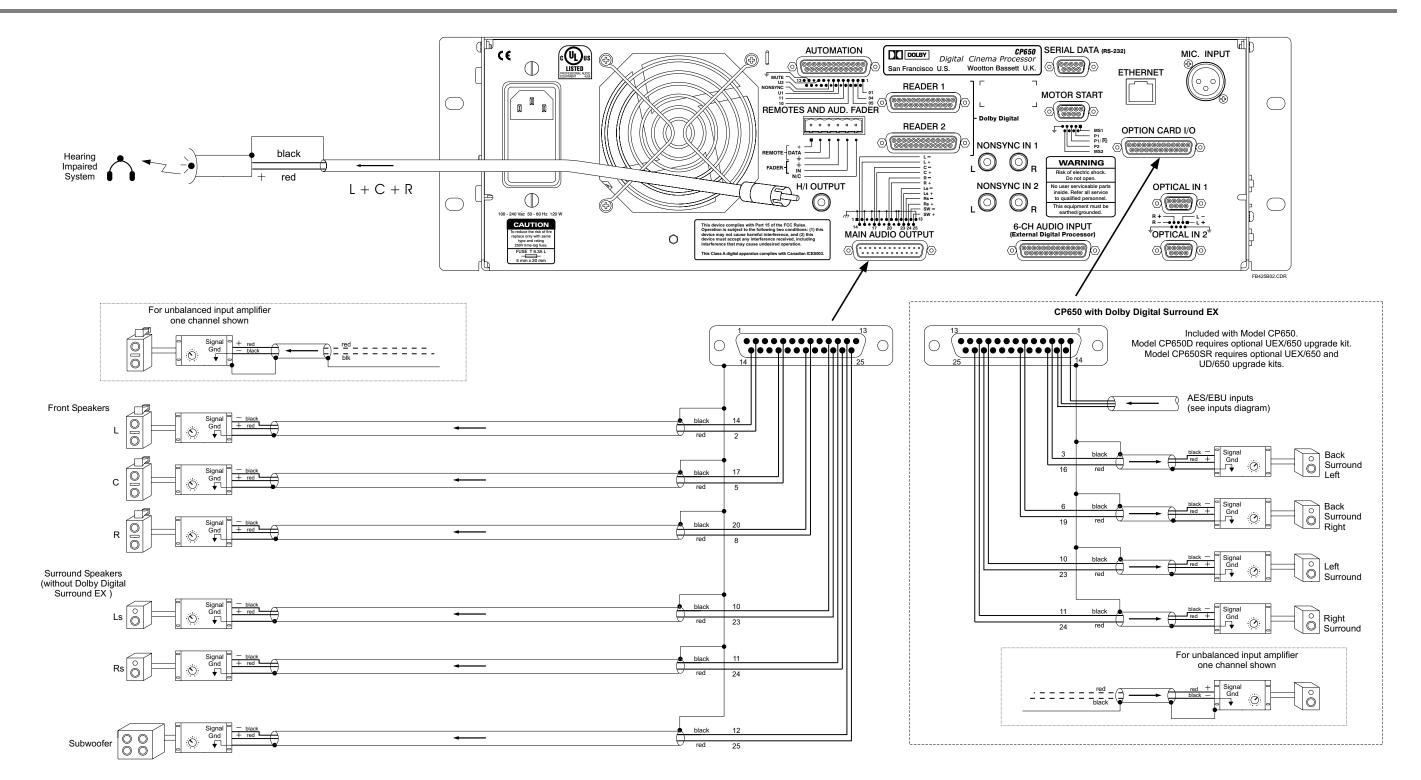

Notes:

- 1. Follow all local electrical and building codes.
- 2. Use grounded (earthed) conduit wherever possible. Avoid routing signal wiring near electric motors, rectifiers, power wiring, dimmer wiring, or other sources of electrical noise.
- 3. For two conductor with shield wiring, use Belden 8451 2-conductor shielded cable or equivalent: tinned copper, twisted pair, 22 AWG stranded tinned copper drain wire, aluminum-polyester shield, 100% shield coverage, conductor-to-conductor 111pF per meter.
- 4. All shields must be connected to the CHASSIS of the CP650. This achieves the required RF interference immunity. A metal housing must be used for all D-connectors and the shields must be connected to the housing. Chassis ground and circuit (audio) ground are internally connected.

CP650 INSTALLATION WIRING AUDIO OUTPUT CONNECTIONS