


GPSMAP 2006/2010/3006/3010 FLUSH MOUNT TEMPLATES

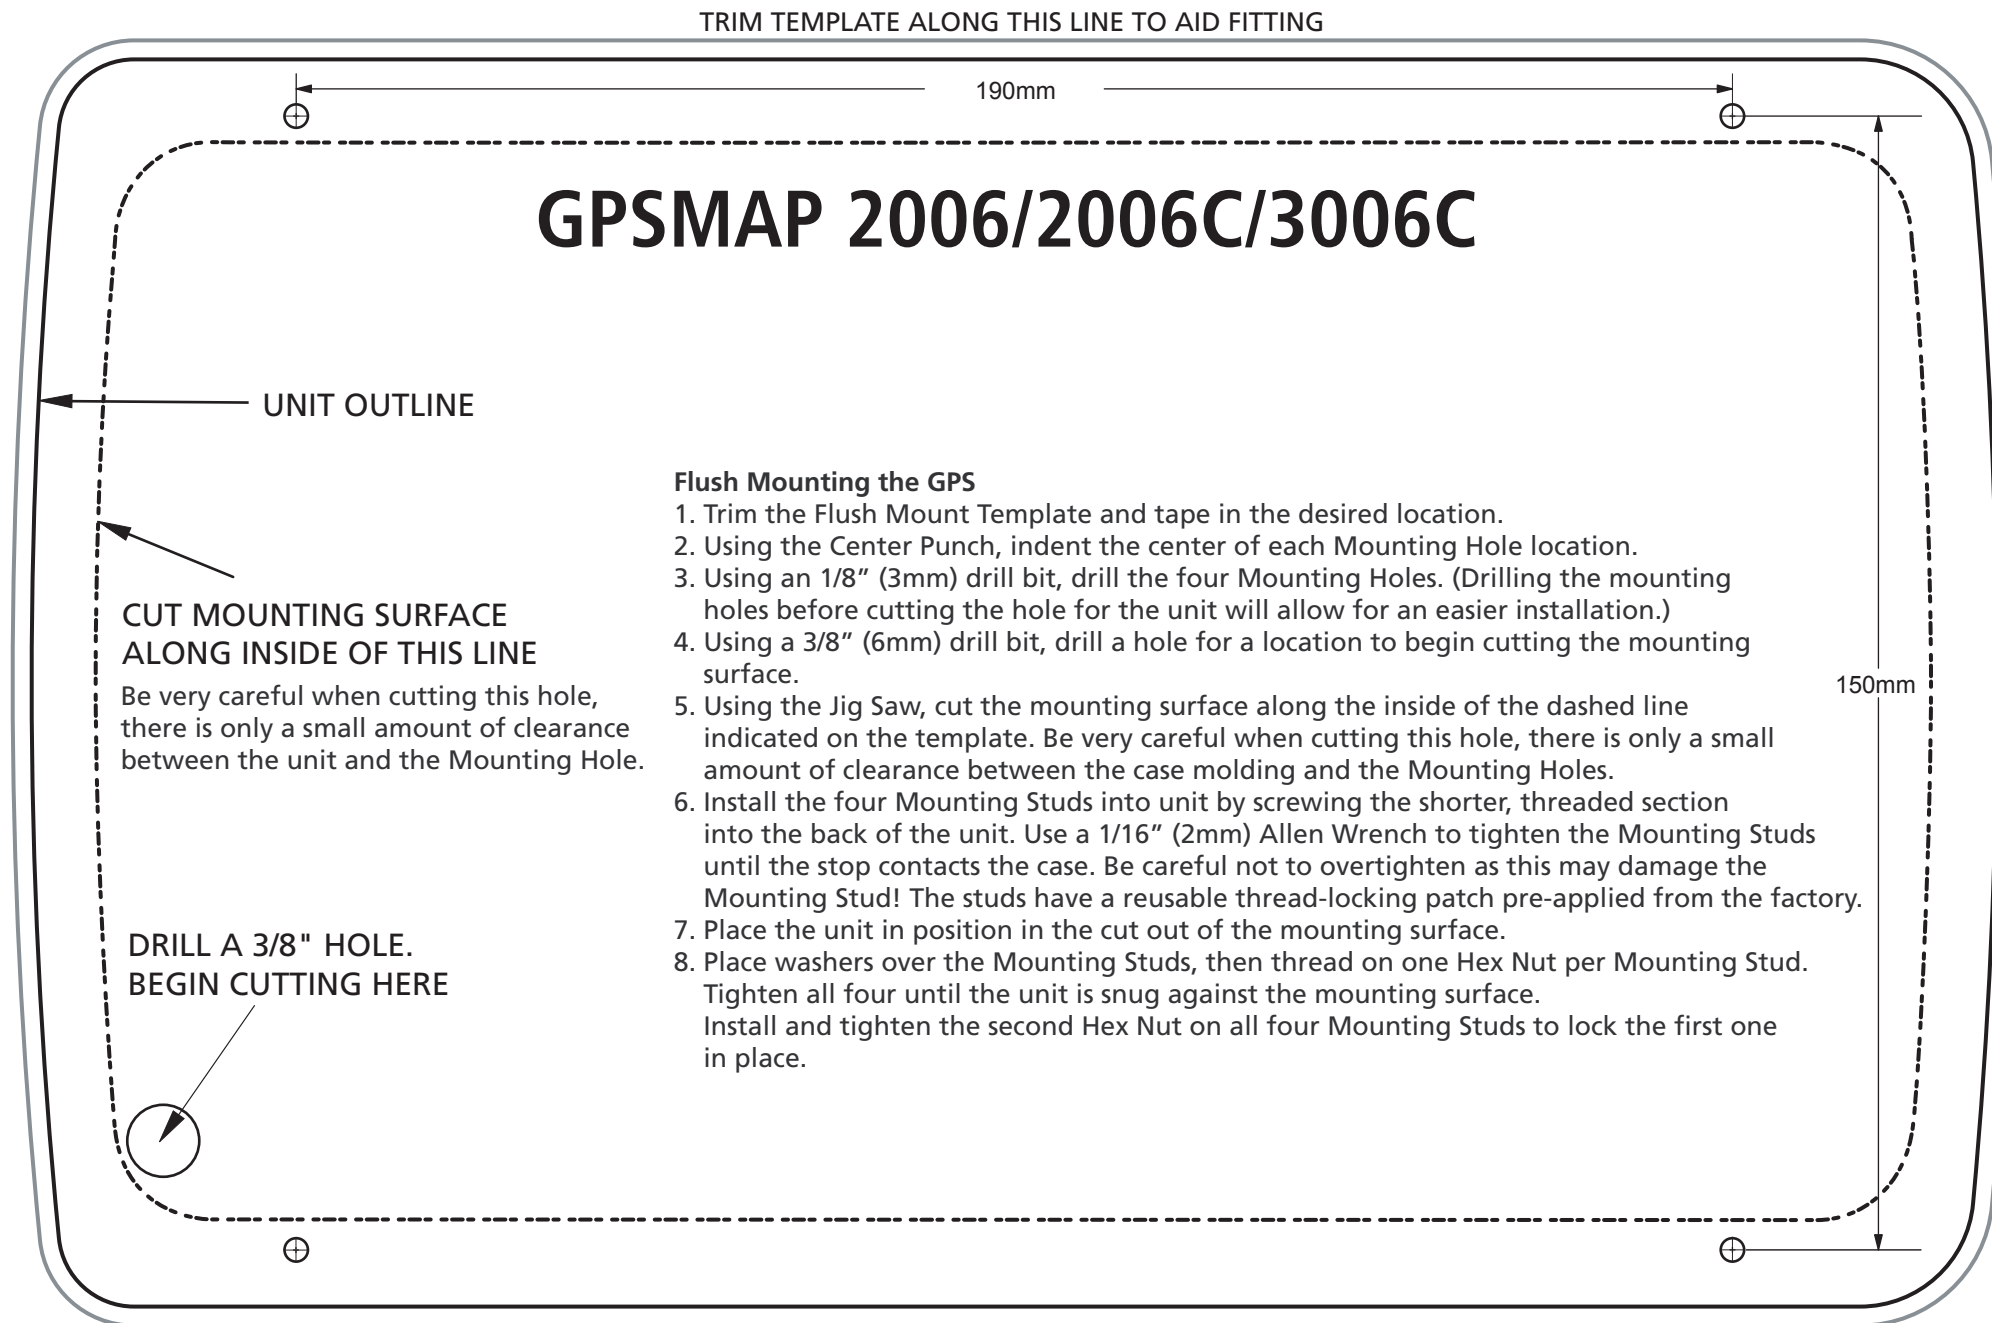

TRIM TEMPLATE ALONG THIS LINE TO AID FITTING

230mm

GPSMAP 2010/2010C/3010C

CUT MOUNTING SURFACE
ALONG INSIDE OF THIS LINE

Be very careful when cutting this hole,
there is only a small amount of clearance
between the unit and the Mounting Hole.

UNIT OUTLINE

DRILL A 3/8" HOLE.
BEGIN CUTTING HERE

208mm

Flush Mounting the GPS

1. Trim the Flush Mount Template and tape in the desired location.
2. Using the Center Punch, indent the center of each Mounting Hole location.
3. Using an 1/8" (3mm) drill bit, drill the four Mounting Holes. (Drilling the mounting holes before cutting the hole for the unit will allow for an easier installation.)
4. Using a 3/8" (6mm) drill bit, drill a hole for a location to begin cutting the mounting surface.
5. Using the Jig Saw, cut the mounting surface along the inside of the dashed line indicated on the template. Be very careful when cutting this hole, there is only a small amount of clearance between the case molding and the Mounting Holes.
6. Install the four Mounting Studs into unit by screwing the shorter, threaded section into the back of the unit. Use a 1/16" (2mm) Allen Wrench to tighten the Mounting Studs until the stop contacts the case. Be careful not to overtighten as this may damage the Mounting Stud! The studs have a reusable thread-locking patch pre-applied from the factory.
7. Place the unit in position in the cut out of the mounting surface.
8. Place washers over the Mounting Studs, then thread on one Hex Nut per Mounting Stud. Tighten all four until the unit is snug against the mounting surface. Install and tighten the second Hex Nut on all four Mounting Studs to lock the first one in place.