## **Installation Note**

## **Extended Frequency Range Upgrade Kit**

## For E8362B PNA Series Microwave Network Analyzers WITH the Configurable Test Set Option

Network Analyzer	Upgrade Kit	Frequency
Model Number	Part Number	Extension
E8362B, Option 014	E8362-60110	20 GHz to 40 GHz



Agilent Part Number: E8362-90005Printed in USAMay 2003© Copyright 2003 Agilent Technologies, Inc. All rights reserved.



E8362-90005

## Notice

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

## **Getting Assistance from Agilent**

Online assistance: www.agi	lent.com/find/assist	
<b>United States</b> ( <i>tel</i> ) 1 800 452 4844	Latin America (tel) (305) 269 7500 (fax) (305) 269 7599	Canada ( <i>tel</i> ) 1 877 894 4414 ( <i>fax</i> ) (905) 282-6495
<b>Europe</b>	Australia	New Zealand
( <i>tel</i> ) (+31) 20 547 2323	(tel) 1 800 629 485	(tel) 0 800 738 378
( <i>fax</i> ) (+31) 20 547 2390	(fax) (+61) 3 9210 5947	(fax) (+64) 4 495 8950
<b>Japan</b>	Singapore	Malaysia
(tel) (+81) 426 56 7832	( <i>tel</i> ) 1 800 375 8100	(tel) 1 800 828 848
(fax) (+81) 426 56 7840	( <i>fax</i> ) (65) 836 0252	(fax) 1 800 801 664
<b>India</b>	Hong Kong	<b>Taiwan</b>
( <i>tel</i> ) 1 600 11 2929	(tel) 800 930 871	( <i>tel</i> ) 0800 047 866
( <i>fax</i> ) 000 800 650 1101	(fax) (852) 2506 9233	( <i>fax</i> ) (886) 2 25456723
Philippines     (tel) (632) 8426802     (tel) (PLDT subscriber only)     1 800 16510170     (fax) (632) 8426809     (fax) (PLDT subscriber only)     1 800 16510288	<b>Thailand</b> ( <i>tel</i> ) (outside Bangkok) (088) 226 008 ( <i>tel</i> ) (within Bangkok) (662) 661 3999 ( <i>fax</i> ) (66) 1 661 3714	People's Republic of China (tel) (preferred) 800 810 0189 (tel) (alternate) 10800 650 0021 (fax) 10800 650 0121

By internet, phone, or fax, get assistance with all your test and measurement needs.

## About the Upgrade Kit

Products affected	. E8362B with Option 014, Configurable Test Set
Installation to be performed by	. Agilent service center or personnel qualified by Agilent
Estimated installation time	. 1 hour
Estimated verification time	. 5 minutes
Estimated calibration adjustment time	. 45 minutes

If you need assistance, refer to "Getting Assistance from Agilent" on page 2.

## **Description of the Upgrade**

This upgrade kit is used to extend the frequency range of the:

\* E8362B, Option 014 PNA microwave network analyzer from 20 GHz to 40 GHz

## Items Included in the Upgrade Kit

Check the contents of your kit against the following list. If any item is missing or damaged, contact Agilent Technologies. Refer to "Getting Assistance from Agilent" on page 2.

Ref. Desig.	Description	Qty	Part Number
	Parts for ALL analyzers with Option 014 (with or without an	y other o	ptions)
N/A	Installation note (this document)	1	E8362-90005
N/A	License key certificate	1	5964-5136
N/A	Model number nameplate (for 40 GHz analyzer, E8363B)	1	E8363-80002
A21	SOMA 50	1	5087-7130
A25	Test port 1 coupler		F007 7510
A26	Test port 2 coupler	2	5087-7518
A27	Channel A first converter (mixer)	2	5007 7100
A30	Channel B first converter (mixer)	2	5087-7122
N/A	Machine screw M3.0 x 18 (for attaching A23 and A24 detectors)	4	0515-0666
N/A	Machine screw M3.0 x 30 (for attaching SOMA 50)	4	0515-1349
N/A	Ribbon cable, A21 SOMA 50 to A16 test set motherboard	1	8121-0818
N/A	Cable, wrapped wire, detectors to A16 test set motherboard	2	E7340-60075
N/A	Test set deck front panel	1	E8364-00014
W1	A12 source 20 to A21 SOMA 50	1	E8364-20036
W2	A21 SOMA 50 to A22 switch/splitter	1	E8364-20034
W3	A22 switch/splitter to A23 channel R1 detector	1	E8364-20144
W4	A22 switch/splitter to A24 channel R2 detector	1	E8364-20024
W37	A23 channel R1 detector to A16 test set motherboard J204	1	E8364-60121
W38	A24 channel R2 detector to A16 test set motherboard J205	1	E8364-60122
W39	A21 SOMA 50 to A16 test set motherboard J206	1	E8364-60123
W60	Front-panel jumper	6	E8364-20059
	Parts for analyzers with Option 014 ONLY (with or withou	ut Option	080)
A23	Channel R1 detector	2	5087 7122
A24	Channel R2 detector	2	5087-7133
W61	A22 switch splitter to PORT 1 SOURCE OUT	1	E8364-20081
W62	A22 switch splitter to PORT 2 SOURCE OUT	1	E8364-20082
W63	PORT 1 CPLR THRU to A25 test port 1 coupler	1	E8364-20073
W64	PORT 2 CPLR THRU to A26 test port 2 coupler	1	E8364-20074
W65	A23 channel R1 detector to REFERENCE 1 SOURCE OUT	1	E8364-20047

Table 1Option 040 Upgrade Kit (E8362-60110) to Extend the E8362B to 40 GHz

Ref. Desig.	Description	Qty	Part Number
W66	A24 channel R2 detector to REFERENCE 2 SOURCE OUT	1	E8364-20048
W67	A25 test port 1 coupler to PORT 1 CPLR ARM	1	E8364-20043
W68	A26 test port 2 coupler to PORT 2 CPLR ARM	1	E8364-20044
W69	PORT 1 RCVR A IN to A27 channel A mixer	1	E8364-20045
W70	REFERENCE 1 RCVR R2 IN to A28 channel R1 mixer	1	E8364-20075
W71	REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8364-20076
W72	PORT 2 RCVR B IN to A30 channel B mixer	1	E8364-20046
	Parts for analyzers WITH Options 014 and UNL ONLY (with or	without Op	otion 080)
A23	Channel R1 detector	2	5087 7199
A24	Channel R2 detector	2	5087-7133
A38	Port 1 bias tee	2	5087-7233
A39	Port 2 bias tee	2	5067-7255
W65	A23 channel R1 detector to REFERENCE 1 SOURCE OUT	1	E8364-20047
W66	A24 channel R2 detector to REFERENCE 2 SOURCE OUT	1	E8364-20048
W67	A25 test port 1 coupler to PORT 1 CPLR ARM	1	E8364-20043
W68	A26 test port 2 coupler to PORT 2 CPLR ARM	1	E8364-20044
W69	PORT 1 RCVR A IN to A27 channel A mixer	1	E8364-20045
W70	REFERENCE 1 RCVR R2 IN to A28 channel R1 mixer	1	E8364-20075
W71	REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8364-20076
W72	PORT 2 RCVR B IN to A30 channel B mixer	1	E8364-20046
W81	A36 port 1 step attenuator to PORT 1 SOURCE OUT	1	E8364-20053
W82	A37 port 2 step attenuator to PORT 2 SOURCE OUT	1	E8364-20054
W83	PORT 1 CPLR THRU to A38 port 1 bias tee	1	E8364-20039
W84	PORT 2 CPLR THRU to A39 port 2 bias tee	1	E8364-20040
Pa	rts for analyzers WITH Options 014, UNL, and 016 ONLY (with o	or without	Option 080)
A23	Channel R1 detector	2	5087-7133
A24	Channel R2 detector	2	
A38	Port 1 bias tee	2	5087-7233
A39	Port 2 bias tee	2	
W49	PORT 1 RCVR A IN to A43 channel A step attenuator	1	E8364-20129
W50	PORT 2 RCVR B IN to A44 channel B step attenuator	1	E8364-20130
W65	A23 channel R1 detector to REFERENCE 1 SOURCE OUT	1	E8364-20047
W66	A24 channel R2 detector to REFERENCE 2 SOURCE OUT	1	E8364-20048
W67	A25 test port 1 coupler to PORT 1 CPLR ARM	1	E8364-20043
W68	A26 test port 2 coupler to PORT 2 CPLR ARM	1	E8364-20044

Table 1Option 040 Upgrade Kit (E8362-60110) to Extend the E8362B to 40 GHz

Ref. Desig.	Description	Qty	Part Number
W70	REFERENCE 1 RCVR R2 IN to A28 channel R1 mixer	1	E8364-20151
W71	REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8364-20126
W81	A36 port 1 step attenuator to PORT 1 SOURCE OUT	1	E8364-20053
W82	A37 port 2 step attenuator to PORT 2 SOURCE OUT	1	E8364-20054
W83	PORT 1 CPLR THRU to A38 port 1 bias tee	1	E8364-20039
W84	PORT 2 CPLR THRU to A39 port 2 bias tee	1	E8364-20040
	Parts for analyzers WITH Options 014, 080, and 081 O	NLY	
A23	Channel R1 detector	1	5087-7242
A24	Channel R2 detector	1	5087-7133
W61	A22 switch splitter to PORT 1 SOURCE OUT	1	E8364-20081
W62	A22 switch splitter to PORT 2 SOURCE OUT	1	E8364-20082
W63	PORT 1 CPLR THRU to A25 test port 1 coupler	1	E8364-20073
W64	PORT 2 CPLR THRU to A26 test port 2 coupler	1	E8364-20074
W66	A24 channel R2 detector to REFERENCE 2 SOURCE OUT	1	E8364-20048
W67	A25 test port 1 coupler to PORT 1 CPLR ARM	1	E8364-20156
W68	A26 test port 2 coupler to PORT 2 CPLR ARM	1	E8364-20157
W69	PORT 1 RCVR A IN to A27 channel A mixer	1	E8364-20045
W71	REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8364-20153
W72	PORT 2 RCVR B IN to A30 channel B mixer	1	E8364-20046
W95	A23 channel R1 detector to A45 reference switch	1	E8364-20119
W97	A46 reference switch to REFERENCE R1 SOURCE OUT	1	E8364-20121
W98	REFERENCE 1 RCVR R1 IN to A45 reference switch	1	E8364-20123
W99	A45 reference switch to A28 channel R1 mixer	1	E8364-20152
	Parts for analyzers WITH Options 014, UNL, 080, and 081	ONLY	
A23	Channel R1 detector	1	5087-7242
A24	Channel R2 detector	1	5087-7133
A38	Port 1 bias tee	2	5087-7233
A39	Port 2 bias tee		5067-7255
W66	A24 channel R2 detector to REFERENCE 2 SOURCE OUT	1	E8364-20048
W67	A25 test port 1 coupler to PORT 1 CPLR ARM	1	E8364-20043
W68	A26 test port 2 coupler to PORT 2 CPLR ARM	1	E8364-20044
W69	PORT 1 RCVR A IN to A27 channel A mixer	1	E8364-20045
W71	REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8364-20155
W72	PORT 2 RCVR B IN to A30 channel B mixer	1	E8364-20046
W81	A36 port 1 step attenuator to PORT 1 SOURCE OUT	1	E8364-20053

Table 1 Option 040 Opgrade Alt (E0302-00110) to Extend the E0302D to 40 Gr	Table 1	Option 040 Upgrade Kit (E8362-60110) to Extend the E8362B to 40 GHz
--	---------	---

Ref. Desig.	Description	Qty	Part Number
W82	A37 port 2 step attenuator to PORT 2 SOURCE OUT	1	E8364-20054
W83	PORT 1 CPLR THRU to A38 port 1 bias tee	1	E8364-20039
W84	PORT 2 CPLR THRU to A39 port 2 bias tee	1	E8364-20040
W95	A23 channel R1 detector to A45 reference switch	1	E8364-20119
W97	A46 reference switch to REFERENCE 1 SOURCE OUT	1	E8364-20121
W98	REFERENCE 1 RCVR R1 IN to A45 reference switch	1	E8364-20123
W99	A45 reference switch to A28 channel R1 mixer	1	E8364-20154
	Parts for analyzers WITH Options 014, UNL, 016, 080, a	nd 081 ONI	Л
A23	Channel R1 detector	1	5087-7242
A24	Channel R2 detector	1	5087-7133
A38	Port 1 bias tee	2	5087-7233
A39	Port 2 bias tee	2	
W49	PORT 1 RCVR A IN to A43 channel A step attenuator	1	E8364-20129
W50	PORT 2 RCVR B IN to A44 channel B step attenuator	1	E8364-20130
W66	A24 channel R2 detector to REFERENCE 2 SOURCE OUT	1	E8364-20048
W67	A25 test port 1 coupler to PORT 1 CPLR ARM	1	E8364-20156
W68	A26 test port 2 coupler to PORT 2 CPLR ARM	1	E8364-20157
W71	REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer	1	E8364-20126
W81	A36 port 1 step attenuator to PORT 1 SOURCE OUT	1	E8364-20053
W82	A37 port 2 step attenuator to PORT 2 SOURCE OUT	1	E8364-20054
W83	PORT 1 CPLR THRU to A38 port 1 bias tee	1	E8364-20039
W84	PORT 2 CPLR THRU to A39 port 2 bias tee	1	E8364-20040
W95	A23 channel R1 detector to A45 reference switch	1	E8364-20119
W97	A46 reference switch to REFERENCE 1 SOURCE OUT	1	E8364-20121
W98	REFERENCE 1 RCVR R1 IN to A45 reference switch	1	E8364-20123
W99	A45 reference switch to A28 channel R1 mixer	1	E8364-20125

Table 1Option 040 Upgrade Kit (E8362-60110) to Extend the E8362B to 40 GHz

## Installation Procedure for the Upgrade Kit

The network analyzer must be in proper working condition prior to installing this option. Any necessary repairs must be made before proceeding with this installation.

# WARNING This installation requires the removal of the analyzer's protective outer covers. The analyzer must be powered down and disconnected from the mains supply before performing this procedure.

## **Electrostatic Discharge Protection**


Protection against electrostatic discharge (ESD) is essential while removing or connecting cables or assemblies within the network analyzer.

Static electricity can build up on your body and can easily damage sensitive internal circuit elements when discharged. Static discharges too small to be felt can cause permanent damage. To prevent damage to the instrument:

- *always* wear a grounded wrist strap having a  $1 M\Omega$  resistor in series with it when handling components and assemblies.
- *always* use a grounded, conductive table mat while working on the instrument.
- *always* wear a heel strap when working in an area with a conductive floor. If you are uncertain about the conductivity of your floor, wear a heel strap.

Figure 1 shows a typical ESD protection setup using a grounded mat and wrist strap. Refer to "Tools Required for the Installation" on page 9 for part numbers.

#### Figure 1 ESD Protection Setup

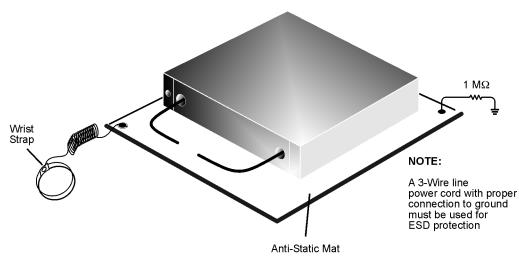

esd\_setup

#### **Overview of the Installation Procedure**

- Step 1. Verify the Model, Serial, and Option Numbers of the Analyzer
- Step 2. Remove the Outer Cover
- Step 3. Remove the Inner Cover
- Step 4. Remove the Front Panel Assembly
- Step 5. Disconnect the A12 Source 20 to A22 Switch/Splitter Cable at the A12 Source 20
- Step 6. Raise the Receiver Deck
- Step 7. Remove the Old Hardware and Cables
- Step 8. Replace the A38 and A39 Bias Tees (Option UNL Only)
- Step 9. Install the Remaining New Hardware
- Step 10. Install the Remaining Cables
- Step 11. Lower the Receiver Deck
- Step 12. Connect the A12 Source 20 to A21 SOMA 50 Cable at the A12 Source 20
- Step 13. Replace the Front Panel Nameplate
- Step 14. Reinstall the Front Panel Assembly and Front Panel Jumpers
- Step 15. Reinstall the Inner and Outer Covers
- Step 16. Enter the New Model Number
- Step 17. Verify that the New Model Number Is Shown Correctly
- Step 18. Perform Source and Receiver Calibration Adjustments

#### **Tools Required for the Installation**

Description	Agilent Part Number
T-8 TORX driver (set to 5 in-lbs)	N/A
T-10 TORX driver (set to 9 in-lbs)	N/A
T-20 TORX driver (set to 21 in-lbs)	N/A
5/16-inch torque wrench (set to 10 in-lbs) <sup>a</sup>	N/A
5/16-inch torque wrench (set to 21 in-lbs) <sup>a</sup>	N/A
1-inch torque wrench (set to 72 in-lbs)	N/A

a. Use a 5/16-inch torque wrench set to 10 in-lbs for all cable connections except the hex nuts on the front-panel bulkhead connectors to which the front-panel jumpers attach. Use a 5/16-inch torque wrench set to 21 in-lbs for these.

Description	Agilent Part Number
ESD grounding wrist strap	9300-1367
5-ft grounding cord for wrist strap	9300-0980
2 x 4 ft conductive table mat and 15-ft grounding wire	9300-0797
ESD heel strap (for use with conductive floors)	9300-1308

### ESD Equipment and Supplies Required for the Installation

### **Equipment Required for Post-Installation Adjustments**

Equipment Type	Model or Part Number	Alternate Model or Part Number
Power meter	E4418B/E4419B	E4418A/E4419A
Power sensor, 2.4 mm	8487A	None
Adapter, 2.4 mm (f) to 2.4 mm (f)	11900B	85056-60007
RF cable, 2.4 mm (f) to 2.4 mm (f)	85133C	85133E

## Step 1. Verify the Model, Serial, and Option Numbers of the Analyzer

Refer to the License Key Certificate supplied with the kit:

- Verify that the analyzer's model and serial numbers match those on the certificate.
- Verify that the option number on the certificate matches the option described by this installation note.


If the model, serial, or option number do not match the expected results, you will not be able to install the option. If this is the case, contact Agilent for assistance. Refer to "Getting Assistance from Agilent" on page 2.

#### Step 2. Remove the Outer Cover

**CAUTION** This procedure is best performed with the analyzer resting on its front handles in the vertical position. *Do not place the analyzer on its front panel without the handles*. This will damage the front panel assemblies.

- 1. Disconnect the power cord (if it has not already been disconnected).
- Using a T-20 TORX driver, remove the strap handles (item ④) by loosening the screws (item ⑤) on both ends until the handle is free of the analyzer.
- 3. Using a T-20 TORX driver, remove the four rear panel feet (item ①) by removing the center screws (item ②).
- 4. Slide the four bottom feet (item (3)) off the cover.
- 5. Slide the cover off of the frame.


#### Figure 2 Outer Cover Removal

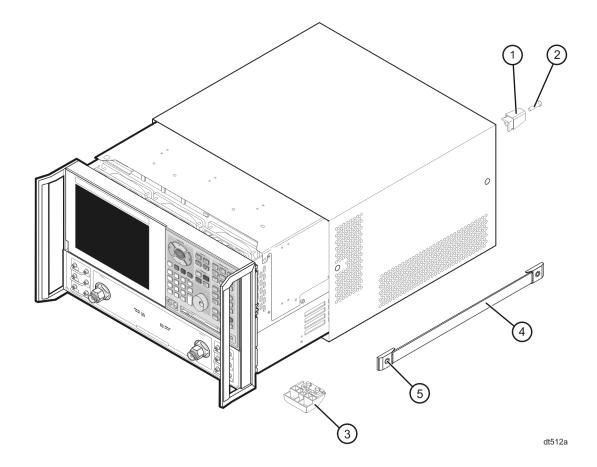

## Step 3. Remove the Inner Cover

- 1. Place the analyzer top-side up on a flat surface.
- 2. Using a T-10 TORX driver, remove the eleven screws (item ①).
- 3. Lift off the cover.

#### Figure 3 Inner Cover Removal

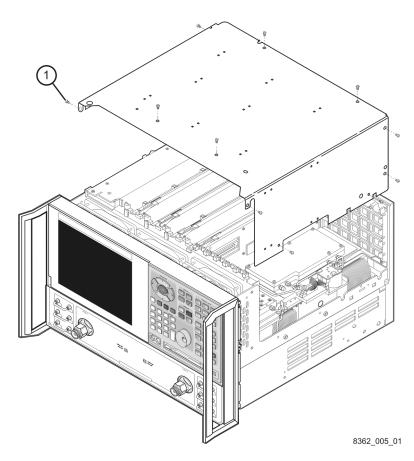


## Step 4. Remove the Front Panel Assembly

- 1. Using a 5/16-inch wrench, remove the six front panel semirigid jumper cables (item 1).
- 2. Using a T-10 TORX driver, remove the eight screws (item (2)) from the sides of the frame.

**CAUTION** Before removing the front panel from the analyzer, lift and support the front of the analyzer chassis.

- 3. Slide the front panel over the test port connectors.
- 4. Disconnect the front panel interface ribbon cable (item ③). The front panel is now free from the analyzer.


Figure 4 Front Panel Assembly Removal

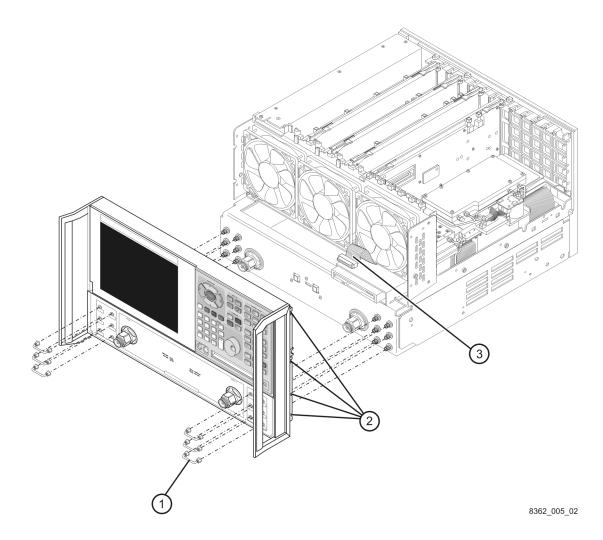

## Step 5. Disconnect the A12 Source 20 to A22 Switch/Splitter Cable at the A12 Source 20

1. Using a 5/16-inch wrench, disconnect the A12 source 20 to A22 switch/splitter cable, W1, at the A12 source 20 as shown.


#### Figure 5 A12 Source Cable Disconnection

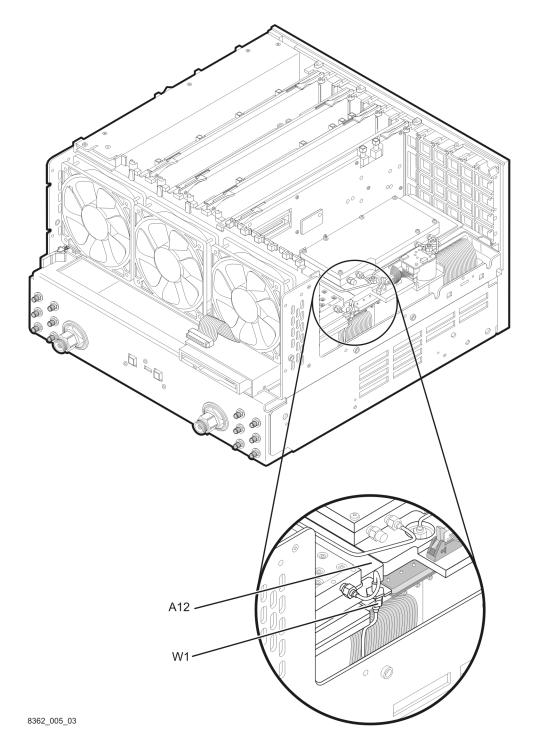

### Step 6. Raise the Receiver Deck

- 1. Place the analyzer bottom-side up on a flat surface.
- 2. Using a T-10 TORX driver, remove the four screws, (item 1), that secure the receiver deck.
- 3. Pull the latch pin (item 2) towards the opposite side of the analyzer to release the receiver deck.
- 4. Lift the receiver deck to partially raise it, then release the latch pin (item 2). Lift the receiver deck to its fully raised position and ensure that the latch pin latches in the raised position.

#### Figure 6 Receiver Deck Raising

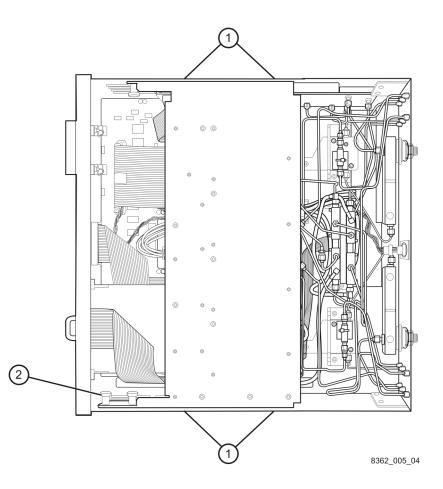

## Step 7. Remove the Old Hardware and Cables

#### Remove the Old Cables (Refer to Figure 7.)

- 1. Using a 5/16-inch wrench, remove the following cables in the order listed.
  - W1 A12 source 20 to A22 switch splitter
  - W3 A22 switch splitter to channel R1 fixed attenuator
  - W4 A22 switch splitter to channel R2 fixed attenuator
- 2. Using a 5/16-inch wrench, remove the hex nuts from all 12 front panel connectors (item 1). Remove the lock washers. Retain both the hex nuts and the lock washers for installation of new connectors later.
- 3. Using a 5/16-inch wrench, remove each of the configurable test set cables (item <sup>(2)</sup>) from the analyzer. Discard these cables, they will be replaced with new ones.

#### Remove the Fixed Attenuators (Refer to Figure 7.)

- 4. Cut the cable ties (item ③).
- 5. Remove the attenuators (item 4) from the analyzer.
- 6. Remove the adhesive clamps (item (5)) by sliding a thin, sharp blade under the clamp and lifting. Scrape away any excess adhesive from the bracket.

#### Replace the A27 and A30 Mixers (Refer to Figure 7 and Figure 8.)

- 7. Disconnect all RF cables (item <sup>(6)</sup>) from the mixers.
- 8. Remove four screws (item O) from the mixer bracket. Retain the screws for reinstallation later.
- 9. Remove the mixer bracket, with the mixers attached, from the analyzer. Observe the **CAUTION** below. Disconnect the ribbon cable to allow the mixer bracket to be removed.

CAUTION	Be careful not to damage the center pins of the semirigid cables. Some flexing of
	the cables is necessary when removing the assemblies. Do not over-bend them.

- 10. Remove the old A27 and A30 mixers from the mixer bracket by removing three screws (item <sup>®</sup>) from each, as shown in Figure 8. Retain the screws to install the new mixers.
- 11. Install the new A27 and A30 mixers using the screws removed from the old mixers. Be sure to orient the mixers as shown in Figure 8.
- 12. Reconnect the ribbon cable, and place the mixer bracket, with all four mixers attached, into the analyzer. Observe the **CAUTION** above.
- 13. Reinstall the four screws (item  $\overline{\mathbb{O}}$ ) to secure the bracket.
- 14. Reconnect all RF cables (item 6) to the mixers.


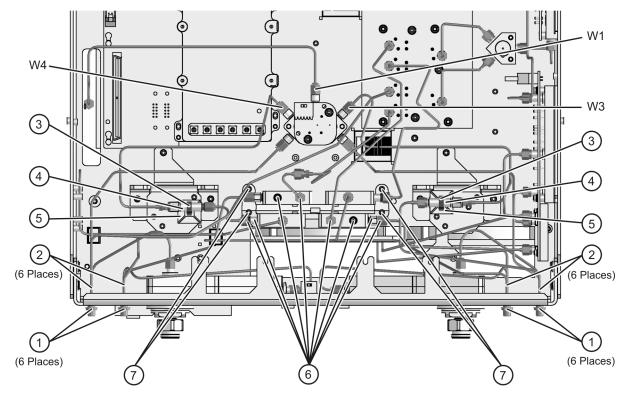


Figure 7 Old Hardware and Cables Removal

8362\_005\_05

Figure 8 Mixers Replacement

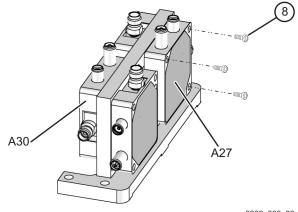


8362\_005\_06

#### Replace the Test Set Deck Front Panel and the A25 and A26 Test Port Couplers

#### Remove the Existing Test Set Deck Front Panel (Refer to Figure 9.)

- 1. Disconnect the wrapped wire cable (item 1) from the front-panel LED board.
- 2. Disconnect any RF cables from the test port couplers that have not yet been removed.
- 3. Using a T-10 TORX driver, remove eight screws (items **1** through **3**) from the test set deck front panel, to release it.
- 4. Remove the test set deck front panel from the analyzer, with the LED board and both couplers attached.
- 5. Using a 1-inch wrench, remove the flange nut (item <sup>(2)</sup>) from each coupler. Retain the flange nuts for installation of the new couplers.


#### Figure 9 Test Set Deck Front Panel Replacement

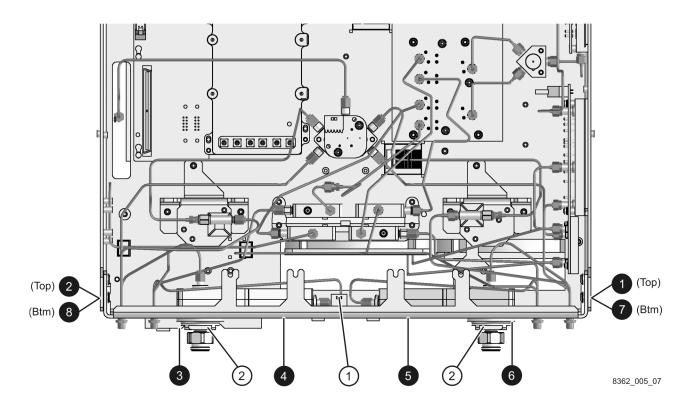

#### Install the Old Front Panel LED Board onto the New Front Panel (Refer to Figure 10.)

- 1. Remove the LED board from the old front panel by removing the three retaining screws (item 1).
- 2. Place the LED board in position on the new front panel and attach it with the three screws (item ①) removed from the old front panel.

Figure 10 Front Panel LED Board Reinstallation

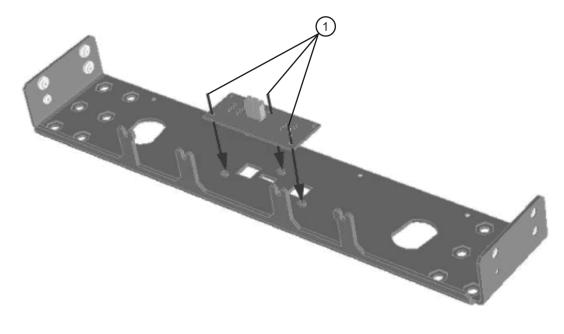

8362\_005\_08

#### Install the New Couplers on the New Front Panel (Refer to Figure 9.)

- 1. Place the new couplers onto the new front panel. Orient them the same as the old ones as shown in Figure 9.
- 2. Install a flange nut (item <sup>(2)</sup>) removed from the old couplers, onto each new coupler. Using a 1-inch torque wrench, tighten each flange nut to 72 in-lbs.

#### Install the New Front Panel on the Analyzer (Refer to Figure 9.)

- 1. Place the new test set deck front panel, with the new LED board and both new couplers attached, onto the test set deck as shown in Figure 9.
- Using a T-10 TORX driver, *loosely* reinstall the eight screws (items ① through ③) to secure the front panel to the test set deck. Torque each of the eight screws to 9 in-lbs in the order indicated (① through ③). This is important to ensure proper alignment.
- 3. Reconnect the wrapped wire cable (item 1) to the front-panel LED board.


## Step 8. Replace the A38 and A39 Bias Tees (Option UNL Only)

#### Remove the Detector/Bias Tee/Attenuator Brackets (Refer to Figure 11.)

- 1. Disconnect all remaining RF cables from each attenuator (item 1) and bias tee (item 2).
- 2. Disconnect the bias tee control cables at the A16 test set motherboard connectors, J22 (P1 BIAS T) and J25 (P2 BIAS T), and release them from the cable clamp (item 3).
- 3. Disconnect the ribbon cables at the step attenuators (item 1).
- 4. Remove three screws (item ④) from each bracket. Retain the screws for reinstallation.
- 5. Remove the brackets, with the attenuators and bias tees attached, from the analyzer.

**CAUTION** Be careful not to damage the center pins of the semirigid cables. Some flexing of the cables is necessary when removing the assemblies. Do not over-bend them.

#### Figure 11 Detector/Bias Tee/Attenuator Brackets Removal

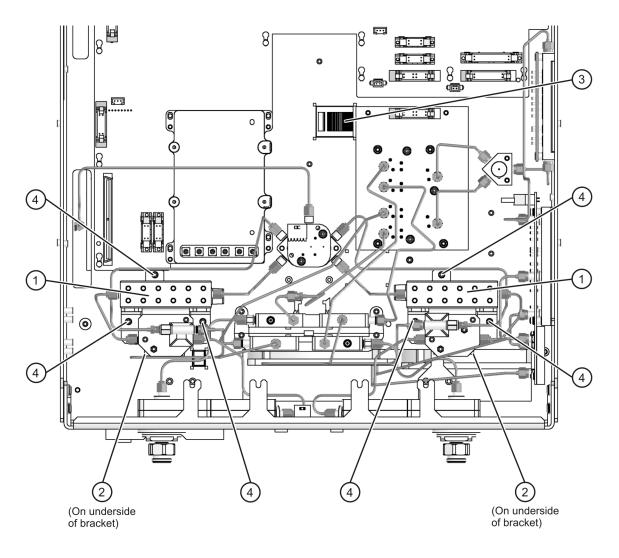

8362\_005\_09

#### Replace the Bias Tees (Refer to Figure 12.)

- 1. Remove the old bias tees from the bracket by removing two screws (item 1) from each. Retain the screws for installing the new bias tees.
- 2. Install the new bias tees using the screws (item ①) removed from the old bias tees. Be sure to install the ground lug (item ②) over the attachment screw as shown.

Serial # Here
Image: Constrained for the series of the

#### Figure 12 Bias Tees Replacement

#### Reinstall the Detector/Bias Tee/Attenuator Brackets (Refer to Figure 11.)

- 1. Place the brackets, with the attenuators and bias tees attached, into the analyzer as shown in Figure 11.
- 2. Reinstall the three screws (item 4) in each bracket.
- 3. Reconnect the ribbon cables to the attenuators (item 1).
- 4. Reconnect the bias tee control cables to the A16 test set motherboard. The A38 cable connects to J22 (P1 BIAS T) and the A39 cable connects to J25 (P2 BIAS T). Be sure to route them under the cable clamp, (item ③).
- 5. Reconnect the RF cables to the attenuators (item 1) and bias tees (item 2).

## Step 9. Install the Remaining New Hardware


#### Install the A23 and A24 Detectors (Refer to Figure 13.)

- 1. Place the A23 and A24 detectors on top of the brackets in the analyzer. Be sure to orient them as shown.
- 2. Install two screws (item 1) in each detector to secure them to the brackets.
- 3. Connect the wrapped wire control cables from the A23 and A24 detectors:
  - A23 detector to A16 test set motherboard J5 (R1 DET)
  - A24 detector to A16 test set motherboard J6 (R2 DET)

#### Install the A21 SOMA 50 (Refer to Figure 13.)

- 1. Place the A21 SOMA 50 in position in the analyzer. Be sure to orient it as shown.
- 2. Install four screws (item 2) to secure the SOMA 50 to the A16 test set motherboard.
- 3. Connect the A21 SOMA 50 ribbon cable to A16 test set motherboard J4 (SOMA50).

#### Figure 13 A23 and A24 Detectors and A21 SOMA 50 Installation

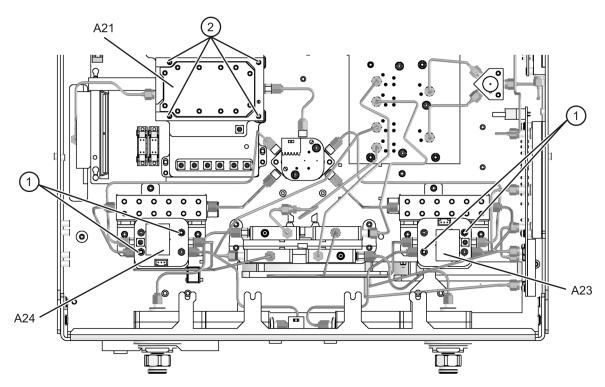

8362\_005\_11


## Step 10. Install the Remaining Cables

#### **Cables Common to All Analyzers with Option 014**

Using a 5/16-inch torque wrench set to 10 in-lbs, install the following new cables **in the order listed**. Front panel connectors will be secured later. Table 1 on page 4 lists the new parts.

- W1 A12 source 20 to A21 SOMA 50 (Connect this cable to the A21 SOMA 50 connector, as shown, with the other end of the cable routed through the opening to the top side of the analyzer. The other end of this cable will be connected later.)
- W2 A21 SOMA 50 to A22 switch/splitter
- W3 A22 switch/splitter to A23 channel R1 detector
- W4 A22 switch/splitter to A24 channel R2 detector
- W37 A23 channel R1 detector to A16 test set motherboard J204 (R1)
- W38 A24 channel R2 detector to A16 test set motherboard J205 (R2)
- W39 A21 SOMA 50 to A16 test set motherboard J206 (SOMA 50)

Figure 14 Cables Installation, Cables Common to All Analyzers

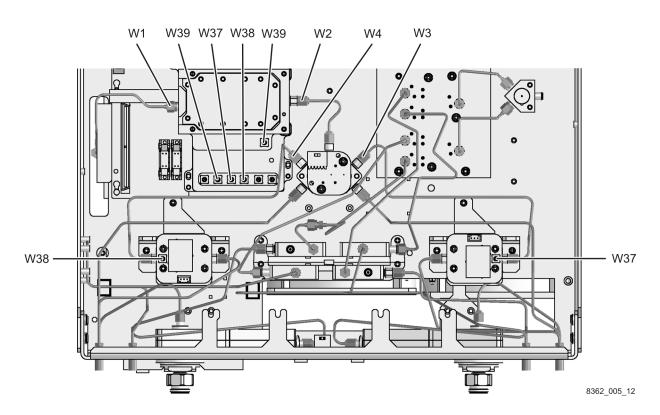


#### Additional Cables for Analyzers with Only Option 014 (with or without Option 080)

Using a 5/16-inch torque wrench set to 10 in-lbs, install the following new cables **in the order listed**. Front panel connectors will be secured later. Table 1 on page 4 lists the new parts.

- W61 A22 switch/splitter to PORT 1 SOURCE OUT
- W62 A22 switch/splitter to PORT 2 SOURCE OUT
- W63 PORT 1 CPLR THRU to A25 test port 1 coupler
- W64 PORT 2 CPLR THRU to A26 test port 2 coupler
- W65 A23 channel R1 detector to REFERENCE 1 SOURCE OUT
- W66 A24 channel R2 detector to REFERENCE 2 SOURCE OUT
- W67 A25 test port 1 coupler to PORT 1 CPLR ARM
- W68 A26 test port 2 coupler to PORT 2 CPLR ARM
- W69 PORT 1 RCVR A IN to A27 channel A mixer
- W70 REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer
- W71 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W72 PORT 2 RCVR B IN to A30 channel B mixer

#### Figure 15 Additional Cables Installation, Option 014 Only

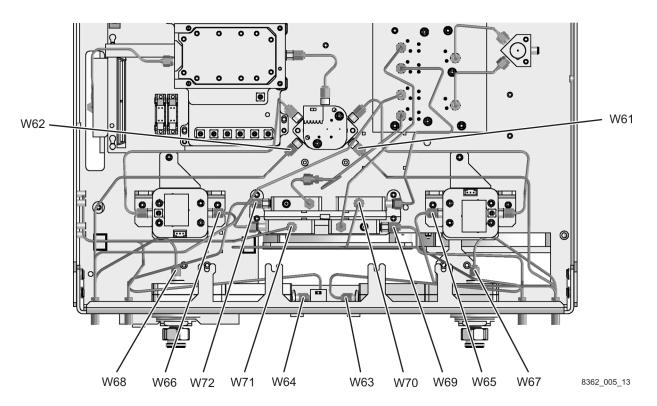


## Additional Cables for Analyzers with Only Options 014 and UNL (with or without Option 080)

Using a 5/16-inch torque wrench set to 10 in-lbs, install the following new cables **in the order listed**. Front panel connectors will be secured later. Table 1 on page 4 lists the new parts.

- W65 A23 channel R1 detector to REFERENCE 1 SOURCE OUT
- W66 A24 channel R2 detector to REFERENCE 2 SOURCE OUT
- W67 A25 test port 1 coupler to PORT 1 CPLR ARM
- W68 A26 test port 2 coupler to PORT 2 CPLR ARM
- W69 PORT 1 RCVR A IN to A27 channel A mixer
- W70 REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer
- W71 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W72 PORT 2 RCVR B IN to A30 channel B mixer
- W81 A36 port 1 step attenuator to PORT 1 SOURCE OUT
- W82 A37 port 2 step attenuator to PORT 2 SOURCE OUT
- W83 PORT 1 CPLR THRU to A38 port 1 bias tee
- W84 PORT 2 CPLR THRU to A39 port 2 bias tee

#### Figure 16 Additional Cables Installation, Options 014 and UNL Only

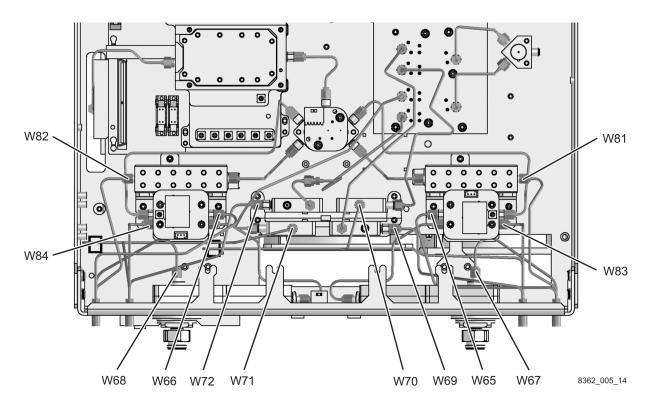


## Additional Cables for Analyzers with Only Options 014, UNL, and 016 (with or without Option 080)

Using a 5/16-inch torque wrench set to 10 in-lbs, install the following new cables **in the order listed**. Front panel connectors will be secured later. Table 1 on page 4 lists the new parts.

- W49 PORT 1 RCVR A IN to A43 channel A step attenuator
- W50 PORT 2 RCVR B IN to A44 channel B step attenuator
- W65 A23 channel R1 detector to REFERENCE 1 SOURCE OUT
- W66 A24 channel R2 detector to REFERENCE 2 SOURCE OUT
- W67 A25 test port 1 coupler to PORT 1 CPLR ARM
- W68 A26 test port 2 coupler to PORT 2 CPLR ARM
- W70 REFERENCE 1 RCVR R1 IN to A28 channel R1 mixer
- W71 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W81 A36 port 1 step attenuator to PORT 1 SOURCE OUT
- W82 A37 port 2 step attenuator to PORT 2 SOURCE OUT
- W83 PORT 1 CPLR THRU to A38 port 1 bias tee
- W84 PORT 2 CPLR THRU to A39 port 2 bias tee

#### Figure 17 Additional Cables Installation, Options 014, UNL, and 016 Only

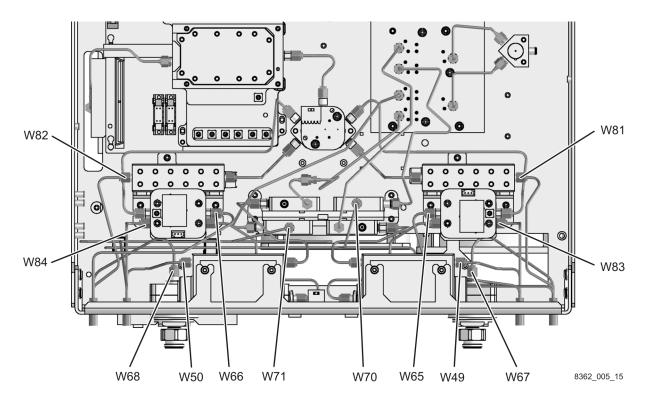


#### Additional Cables for Analyzers with Only Options 014, 080, and 081

Using a 5/16-inch torque wrench set to 10 in-lbs, install the following new cables **in the order listed**. Front panel connectors will be secured later. Table 1 on page 4 lists the new parts.

- W61 A22 switch/splitter to PORT 1 SOURCE OUT
- W62 A22 switch/splitter to PORT 2 SOURCE OUT
- W63 PORT 1 CPLR THRU to A25 test port 1 coupler
- W64 PORT 2 CPLR THRU to A26 test port 2 coupler
- W66 A24 channel R2 detector to REFERENCE 2 SOURCE OUT
- W67 A25 test port 1 coupler to PORT 1 CPLR ARM
- W68 A26 test port 2 coupler to PORT 2 CPLR ARM
- W69 PORT 1 RCVR A IN to A27 channel A mixer
- W71 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W72 PORT 2 RCVR B IN to A30 channel B mixer
- W95 A23 channel R1 detector to A45 reference switch
- W97 A46 reference switch to REFERENCE 1 SOURCE OUT
- W98 REFERENCE 1 RCVR R1 IN to A45 reference switch
- W99 A45 reference switch to A28 channel R1 mixer

#### Figure 18 Additional Cables Installation, Options 014 and 081 Only

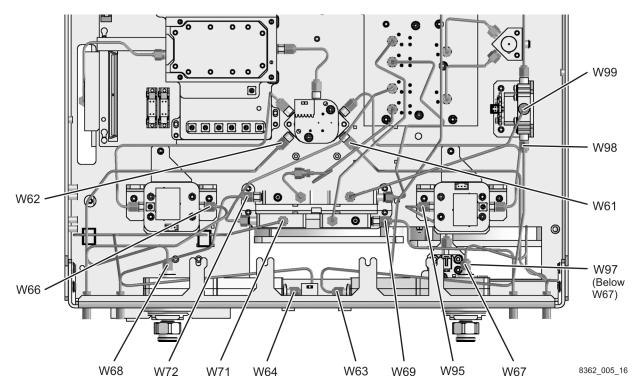


#### Additional Cables for Analyzers with Only Options 014, UNL, 080, and 081

Using a 5/16-inch torque wrench set to 10 in-lbs, install the following new cables **in the order listed**. Front panel connectors will be secured later. Table 1 on page 4 lists the new parts.

- W66 A24 channel R2 detector to REFERENCE 2 SOURCE OUT
- W67 A25 test port 1 coupler to PORT 1 CPLR ARM
- W68 A26 test port 2 coupler to PORT 2 CPLR ARM
- W69 PORT 1 RCVR A IN to A27 channel A mixer
- W71 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W72 PORT 2 RCVR B IN to A30 channel B mixer
- W81 A36 port 1 step attenuator to PORT 1 SOURCE OUT
- W82 A37 port 2 step attenuator to PORT 2 SOURCE OUT
- W83 PORT 1 CPLR THRU to A38 port 1 bias tee
- W84 PORT 2 CPLR THRU to A39 port 2 bias tee
- W95 A23 channel R1 detector to A45 reference switch
- W97 A46 reference switch to REFERENCE 1 SOURCE OUT
- W98 REFERENCE 1 RCVR R1 IN to A45 reference switch
- W99 A45 reference switch to A28 channel R1 mixer

#### Figure 19 Additional Cables Installation, Options 014, UNL, and 081 Only

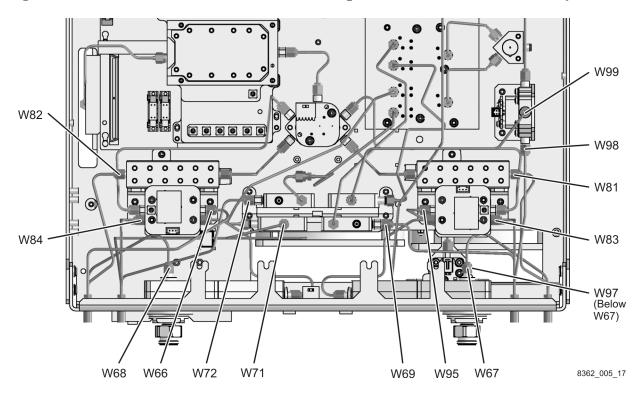


#### Additional Cables for Analyzers with Only Options 014, UNL, 016, 080, and 081

Using a 5/16-inch torque wrench set to 10 in-lbs, install the following new cables **in the order listed**. Front panel connectors will be secured later. Table 1 on page 4 lists the new parts.

- W49 PORT 1 RCVR A IN to A43 channel A step attenuator
- W50 PORT 2 RCVR B IN to A44 channel B step attenuator
- W66 A24 channel R2 detector to REFERENCE 2 SOURCE OUT
- W67 A25 test port 1 coupler to PORT 1 CPLR ARM
- W68 A26 test port 2 coupler to PORT 2 CPLR ARM
- W71 REFERENCE 2 RCVR R2 IN to A29 channel R2 mixer
- W81 A36 port 1 step attenuator to PORT 1 SOURCE OUT
- W82 A37 port 2 step attenuator to PORT 2 SOURCE OUT
- W83 PORT 1 CPLR THRU to A38 port 1 bias tee
- W84 PORT 2 CPLR THRU to A39 port 2 bias tee
- W95 A23 channel R1 detector to A45 reference switch
- W97 A46 reference switch to REFERENCE 1 SOURCE OUT
- W98 REFERENCE 1 RCVR R1 IN to A45 reference switch
- W99 A45 reference switch to A28 channel R1 mixer


#### Figure 20 Additional Cables Installation, Options 014, UNL, 016, and 081 Only

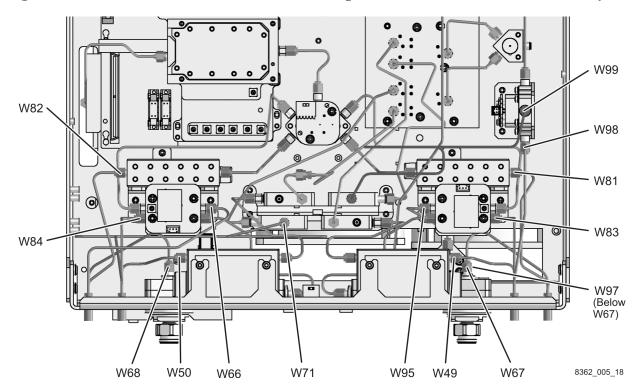

## Step 11. Lower the Receiver Deck

- 1. Pull the latch pin (item 2) towards the opposite side of the analyzer to release the receiver deck.
- 2. Lift the receiver deck to partially lower it, then release the latch pin (item (2)). Lower the receiver deck to its fully lowered position and ensure that the latch pin latches in the lowered position.
- 3. Using a T-10 TORX driver, reinstall the four screws, (item 1), to secure the receiver deck.


Figure 21 Receiver Deck Lowering

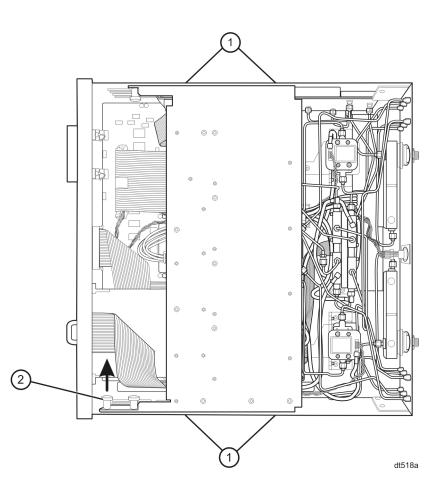

## Step 12. Connect the A12 Source 20 to A21 SOMA 50 Cable at the A12 Source 20

- 1. Place the analyzer top-side up on a flat surface.
- 2. Using a 5/16-inch wrench set to 10 in-lbs, connect the A12 source 20 to A21 SOMA 50 cable, W1, at the A12 source 20 as shown.

#### Figure 22 A12 Source Cable Connection

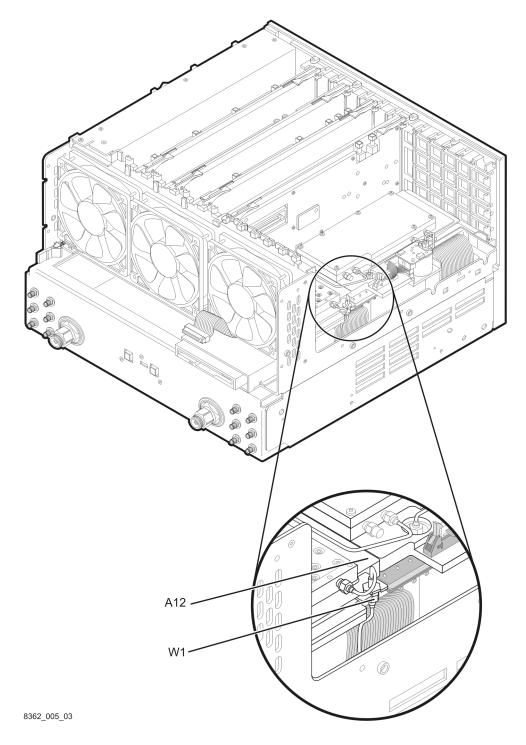

## Step 13. Replace the Front Panel Nameplate

#### **Remove the Old Nameplate**


- 1. Using a sharp object such as a knife blade, lift one end of the old nameplate (item 1). Be careful not to scratch the painted surface.
- 2. Using your fingers, pull the nameplate completely off of the front panel and discard it.
- 3. If any adhesive remains on the front panel surface, it can be removed by rubbing it with your finger. Do not use a sharp object to remove this adhesive. If necessary, the surface can be cleaned with isopropol alcohol.

#### Install the New Nameplate

IMPORTANT	If the Option 050 upgrade kit will be installed to extend the frequency to 50 GHz, do not install the new nameplate provided in this upgrade kit.
	Instead, use the one provided in the Option 050 upgrade kit.

- 1. Remove the protective backing from the new nameplate to expose the adhesive. Avoid touching the adhesive with your fingers as this may affect its ability to adhere to the front panel surface.
- 2. Loosely align the new nameplate over the recess in the front panel and apply lightly.
- 3. Once the nameplate is properly aligned, press it firmly onto the surface to secure it.

#### Figure 23 Model Number Nameplate Replacement

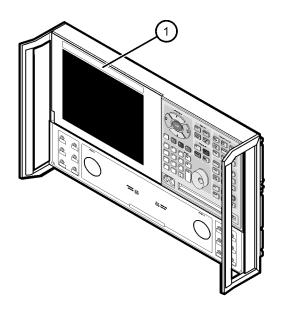

8364\_023\_16

## Step 14. Reinstall the Front Panel Assembly and Front Panel Jumpers


#### **Before Installing the Front Panel Assembly**

- 1. Install a lock washer and hex nut on each of the 12 front-panel feed-through connectors. Using a 5/16-inch torque wrench, tighten these hex nuts to 21 in-lbs.
- 2. Lift and support the front of the analyzer chassis.

#### **Install the Front Panel Assembly and Jumpers**

- 1. Reconnect the ribbon cable (item (3)) to the A3 front panel interface board.
- 2. Slide the front panel over the test port connectors being careful to align the power switch and floppy disk drive to their corresponding front panel cutouts. Ensure that the ribbon cable (item ③) is located below the fan to prevent it from being damaged by the fan blades.
- 3. Using a T-10 TORX driver, install the eight screws (item 2) in the sides of the frame.
- 4. Install the six semirigid jumpers, W60, (item ①) on the front panel, and, using a 5/16-inch torque wrench, tighten the connector nuts to 10-in lbs.

#### Figure 24 Front Panel Assembly Reinstallation

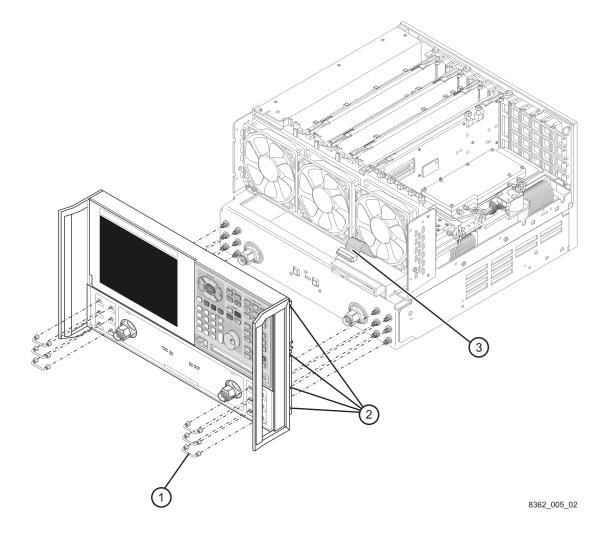


## Step 15. Reinstall the Inner and Outer Covers

#### **Reinstall the Inner Cover**

- 1. Place the inner cover on the analyzer as shown. There are two alignment pins on the front frame that align with holes in the front of the cover to ensure proper alignment.
- 2. Using a T-10 TORX driver, reinstall the eleven screws (item ①).

#### Figure 25 Inner Cover Reinstallation

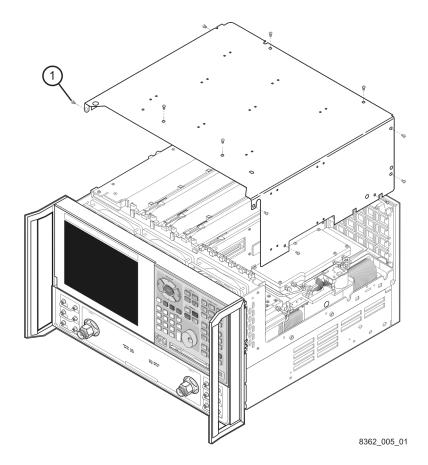


#### **Reinstall the Outer Cover**

**CAUTION** This procedure is best performed with the analyzer resting on its front handles in the vertical position. *Do not place the analyzer on its front panel without the handles*. This will damage the front panel assemblies.

- 1. Slide the cover onto the frame.
- 2. Using a T-20 TORX driver, install the four rear panel feet (item ①) by installing the center screws (item ②).
- 3. Slide the four bottom feet (item (3)) onto the cover.
- 4. Using a T-20 TORX driver, install the strap handles (item ④) by tightening the screws (item ⑤) on both ends.

#### Figure 26 Outer Cover Reinstallation

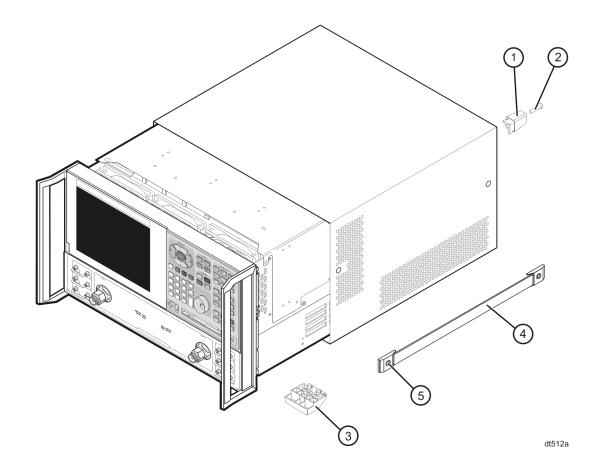

## Step 16. Enter the New Model Number

#### **Procedure Requirements**

- The analyzer must be powered up and operating to perform this procedure.
- The Network Analyzer program must be running.
- A keyboard is required for this procedure.
- A mouse is recommended for this procedure but is not required.

#### **Mouse Procedure**

- 1. On the analyzer's System menu, point to Service, then click Option Enable.
- 2. Click Repair.
- 3. Check Model shown is incorrect!, then click Begin Repair.
- 4. In the Model Change box, select the new model number, E8363B.
- 5. Using the keyboard, enter the keyword in the box provided. The keyword is printed on the License Key Certificate. Enter this keyword *exactly* as it is printed on the certificate.
- 6. Click Enter Model.
- 7. Verify that the new model number displayed is correct, then click **YES**. If it is not correct, click **NO** and repeat the repair.
- 8. When the installation is complete, click **Exit**.

#### **Front Panel Keys Procedure**

- 1. In the **COMMAND** block, press Menu/Dialog.
- 2. In the **NAVIGATION** block, press the right tab and arrow keys to move over to the **System** menu and down to the **Service** selection. Press the right tab to display the extended menu and the arrows to select **Option Enable**. Press **Click**.
- 3. Press Menu/Dialog, then press R on the keyboard to select Repair.
- 4. Tab to Model shown is incorrect!, then press Click.
- 5. Tab to the **Model Change** box, then use the arrows to select the new model number, **E8363B**.
- 6. Tab to the **Keyword** box and, using the keyboard, enter the keyword. The keyword is printed on the License Key Certificate. Enter this keyword *exactly* as it is printed on the certificate.
- 7. Tab to Enter Model, then press Click.
- 8. Verify that the new model number displayed is correct, then tab to **Yes** and press **Click**. If it is not correct, tab to **NO**, press **Click**, and repeat the repair.
- 9. When the installation is complete, Tab to Exit, then press Click.

## Step 17. Verify that the New Model Number Is Shown Correctly

#### **Procedure Requirements**

- The analyzer must be powered up and operating to perform this procedure.
- The Network Analyzer program must be running.
- A mouse is recommended for this procedure but is not required.

#### **Mouse Procedure**

- 1. On the analyzer's Help menu, click About Network Analyzer.
- 2. Verify that the new model number, E8363B, is shown correctly in the display. Click **OK**.
- 3. On the analyzer front panel, press **Preset**. Verify that the full frequency range of the analyzer is correct. The analyzer should preset to a frequency range of 10 MHz to 40 GHz.

#### **Front Panel Keys Procedure**

- 1. In the COMMAND block, press Menu/Dialog.
- 2. In the **NAVIGATION** block, press the right tab and arrow keys to move over to the **Help** menu, and down to the **About Network Analyzer** selection. Press **Click**.
- 3. Verify that the new model number, E8363B, is shown correctly, then press Click.
- 4. On the analyzer front panel, press **Preset**. Verify that the full frequency range of the analyzer is correct. The analyzer should preset to a frequency range of 10 MHz to 40 GHz.

## Step 18. Perform Source and Receiver Calibration Adjustments

The following adjustments must be made due to the change in the full frequency range of the analyzer.

- source calibration
- receiver calibration

These adjustments are described in the PNA service guide and in the PNA on-line HELP. A list of equipment required to perform these adjustments can be found at "Tools Required for the Installation" on page 9.

#### **Performance Tests and System Verification**

The analyzer should now operate and phase lock over its entire frequency range.

If you experience difficulty with the basic functioning of the analyzer, contact Agilent. Refer to "Getting Assistance from Agilent" on page 2.

Although the analyzer functions, its performance relative to its specifications has not been verified for the additional frequency range enabled by this upgrade.

It is recommended that a full instrument calibration be performed using the N2721A performance test software.

If the testing of the analyzer's full range of specifications is not required, a system verification can be performed.

Refer to the analyzer's service guide for information on performance tests and system verification.