


## Ferrite Installation Guide

The ferrite clamp included with the power supply for the E5900B emulation probe reduces RFI emissions from the power cable when it is properly installed. To ensure compliance with the CISPR 11 Class A radio frequency interference (RFI) limits, you must install the ferrite to absorb radio frequency energy. Installing the ferrite will not affect the normal operation of the emulation probe.

- 1 Open the ferrite and place it no more than 2 cm (about 1 inch) from the end of the cable where it connects to the emulation probe.
- **2** Close the ferrite around the cable.

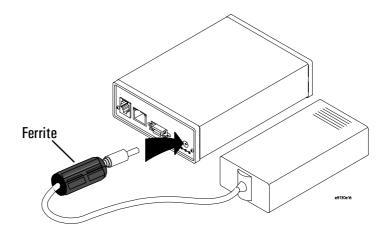

Manual Part Number E8130-92000 December 1999

