STEREO SYSTEM RACK

SRC-780



KENWOOD

ASSEMBLY INSTRUCTIONS


©PRINTED IN U.S.A B61-0130-00(K)(TCA) R0142

IMPORTANT

- Before operating your new KENWOOD product, read through this assembly manual carefully to get the most out of it.
- · Save this assembly instructions.

Before Assembling

- Be sure to check that all parts are accounted for before disposing of the packing case.
- A Phillips screwdriver and a mallet are required for assembling.
- Be carefull not to damage the floor and rack.

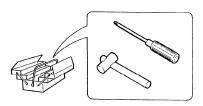

Notes on Assembling


- During assembling, be sure to verify the numbers stamped on the boards.
- Mount the rear panel after assembling the side panel on the bottom shelf at a right angle.
- When mounting the top shelf and kick plate on the side panel, use glue for adhesive. Be sure to remove any excess glue before it dries.
- If the amplifier wobbles when its key switches are pressed, insert a wooden dowel into the hole on the side panel and fix the rear of the amplifier.

Handling Precautions


- Tempered glass is used for the glass doors for providing sufficient strength.
 However, pay attention not to apply excessive force or to scratch the doors.
 Cracking or breaking of the glass may occur.
- When moving the cabinet, remove all the components from the rack before carrying the cabinet. Also do not grasp the top shelf when carrying.
- To allow head radiation from the components, leave a space of 4 inches between the cabinet and wall.
- Do not place the cabinet in a location subject to direct sunlight or near a heater, an air-conditioner, or a place with high humidity.

Cleaning Instructions


Clean the cabinet with a damp cloth and mild detergent.

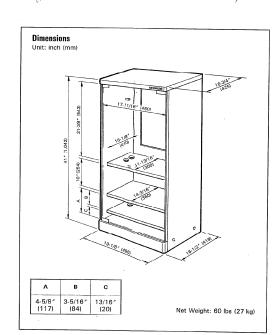



ASSEMBLY INSTRUCTIONS

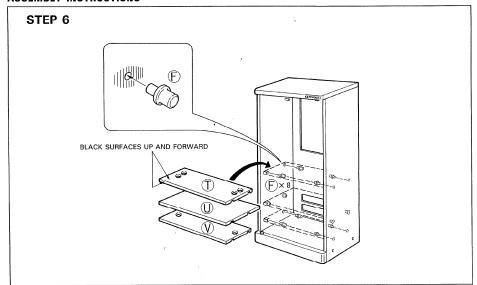


STEP 7

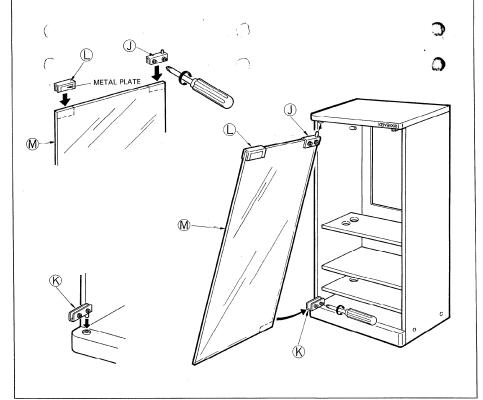

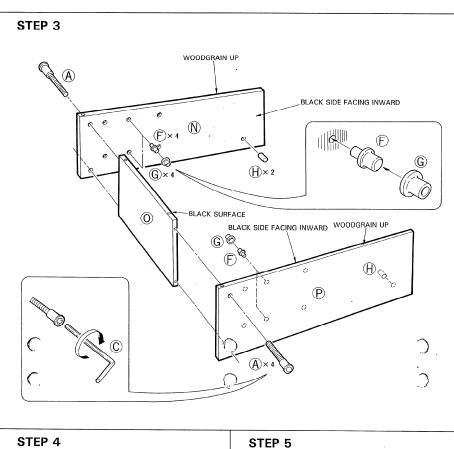

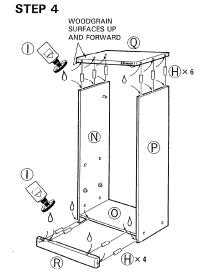

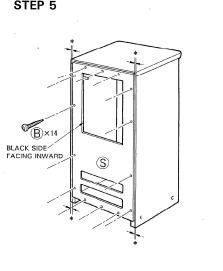

CONTINUED NEXT PAGE

PARTS	LIST MODEL SRC-78	0		ASSEMBLY INSTRUCITONS
Item	Description	α.т.ү.	Part No.	ASSEMBLED RACK
A		4	S0033	
B	()	16	S0034	
©		1	M0018	T P
D	(2)	2	P0054	
Ē		1	P0011	© R
E		12	P0053	STEP 1
G		4	G0067	
\oplus	6))))	12	W0092	D P R WOODGRAIN UP
1		1	G0012	
(J)	900	1	M0026	STEP 2
(K)		1	M0027	
(1	P0055	WOODGRAIN SURFACES DOWN AND FORWARD
M	Glass Door	1	G0065	;
