


Continued from the previous page

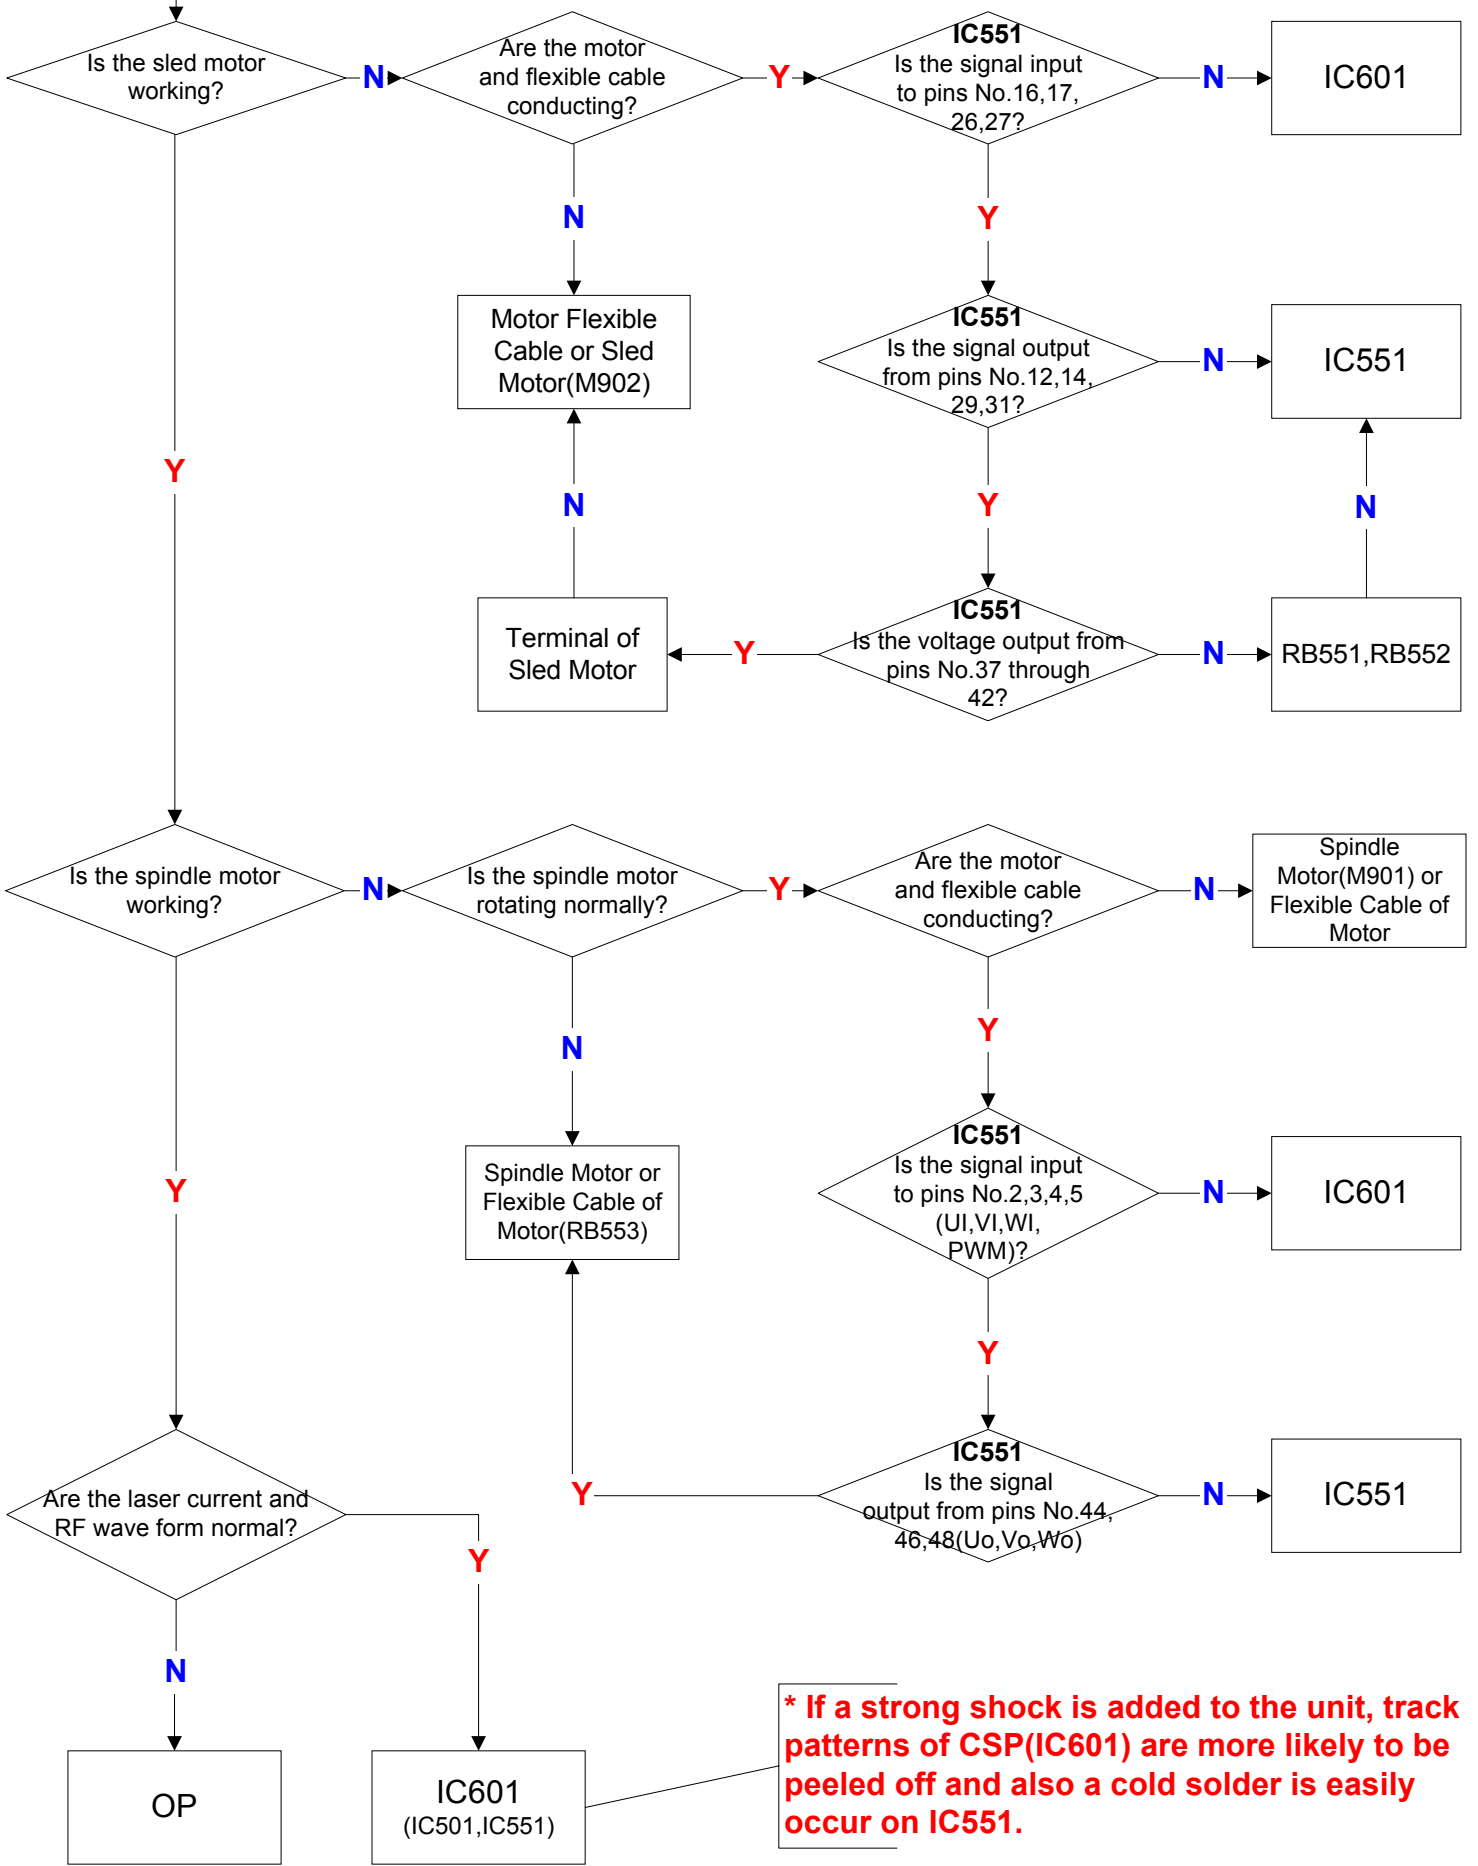

*** If a strong shock is added to the unit, track patterns of CSP(IC601) are more likely to be peeled off and also a cold solder is easily occur on IC551.**

