CECW-EH-D	Department of the Army U.S. Army Corps of Engineers Washington, DC 20314-1000	EM 1110-2-1605
Engineer Manual 1110-2-1605		12 May 1987
	Engineering and Design	
	HYDRAULIC DESIGN OF NAVIGATION DAMS	
	Distribution Restriction Statement Approved for public release; distribution is unlimited.	



Hydraulic Design of Navigation Dams

U. S. Army Corps of Engineers
Washington, DC 20314-1000

DAEM-ECE-HD

Engineer Manual No. 1110-2-1605

12 May 1987

Engineering and Design
HYDRAULIC DESIGN OF NAVIGATION DAMS

- 1. <u>Purpose</u>. This manual provides current guidance and engineering procedures for the hydraulic design of navigation dams.
- 2. <u>Applicability</u>. This manual applies to all HQUSACE/OCE elements and field operating activities (FOA) having responsibility for the design of civil works projects.
- 3. <u>General</u>. Subjects covered are design, construction, and operation of navigation dams. The goal of a good design is to provide a cost effective structure with consideration given to social and environmental impacts.

FOR THE COMMANDER:

ARTHUR E. WILLIAMS

Colonel, Corps of Engineers

Chief of Staff

DAEN-ECE-HD

Engineer Manual No. 1110-2-1605

Engineering and Design HYDRAULIC DESIGN OF NAVIGATION DAMS

Table of Contents

		Subject	<u>Paragraph</u>	<u>Page</u>
Chapter	1.	INTRODUCTION		
Section	I.	General		
		Purpose	1-1	1-1
		Applicability	1-2	1-1
		References	1-3	1-1
		Bibliography	1-4	1-2
		Symbol	1-5	1-2
		Other Guidance and Design Aids	1-6	1-2
		WES Capabilities and Services	1-7	1-2
		Design Memorandum Presentations	1-8	1-3
Section	II.	Typical Navigation Projects		
		Navigation Dams	1-9	1-3
		Basic Project Components	1-10	1-3
		Supplemental Project Components	1-11	1-3
Section	III.	Special Considerations		
		Safety	1-12	1-4
		Environmental	1-13	1-4
		Aesthetics	1-14	1-5
CHAPTER	2.	PROJECT IDENTIFICATION		
Section	I.	Navigation Systems		
		General Considerations	2-1	2-1
Section	II.	Project Purposes		
		General	2-2	2-1
		Purposes	2-3	2-1
Section	III.	Project Studies		
		General	2-4	2-2
		Project Water Requirements	2-5	2-2
		Pool Levels	2-6	2-2
		Pool Storage	2-7	2-3
		Environmental	2-8	2-3
		Foundations	2-9	2-4

	Subject	<u>Paragraph</u>	<u>Page</u>
CHAPTER 3.	PROJECT PARAMETERS		
Section I.	Hydrology		
	General	3-1	3-1
	Basin Description	3-2	3-1
	Hydrologic Data	3-3	3-1
	Hydrologic Data Sources	3-4	3-2
	Hydrologic Model	3-5	3-4
	Flow Computations	3-6	3-4
Section II.	Hydraulics		
	General	3-7	3-6
	Channel Discharge Rating Curves	3-8	3-7
	Water-Surface Profiles	3-9	3-7
	Specific Profile Uses	3-10	3-8
	Navigation Pool Level Stability	3-11	3-9
Section III.	Sedimentation		
	General	3-12	3-9
	Problems	3-13	3-10
	Sediment Data Needs	3-14	3-10
	Sedimentation Study	3-15	3-10
	Analysis Tool	3-16	3-11
	Sediment Control Measures	3-17	3-12
Section IV.	Ice Conditions		
	General	3-18	3-13
CHAPTER 4.	PROJECT LAYOUT (SITING OF STRUCTURES)		
	General	4-1	4-1
	Upper Pool Elevation	4-2	4-1
	Navigation Considerations	4-3	4-1
	Foundations	4-4	4-1
	Sediment Movement	4-5	4-2
	Channel Rectification	4-6	4-2
	Channel Stabilization	4-7	4-2
CHAPTER 5.	PROJECT DESIGN		
Section I.	Spillway Design		
	General	5-1	5-1
	Crest Design	5-2	5-1
	Spillway Capacity for High-Head Dams	5-3	5-3
	Spillway Capacity for Low-Head Dams	5-4	5-6
	Pool Tailwater Relationships	5-5	5-8
	Pool Elevations Discharge Rating Curves for Gated, Broad-	5-6	5-8
	Crested Weirs	5-7	5-9
	Overflow Embankments	5-8	5-17

	Subject	<u>Paragraph</u>	<u>Page</u>
	Stilling Basin Design	5-9	5-19
	Approach Area	5-10	5-27
	Exit Area	5-11	5-28
	Spillway Gates	5-12	5-34
	Gate Types and Selection	5-13	5-35
	Tainter Gate Design	5-14	5-39
	Vertical-Lift Gate Design	5-15	5-43
	Spillway Piers	5-16	5-43
	Abutments	5-17	5-46
Section II.	Design of Other Appurtenances		
	Navigable Passes	5-18	5-47
	Low-Flow and Water Quality Releases	5-19	5-47
	Fish Passage Facilities	5-20	5-47
	Ice Control Methods	5-21	5-47
Section III.	Model Studies		
	General	5-22	5-49
Section IV.	Example Design		
	Known Information	5-23	5-50
	Development of Design	5-24	5-51
CHAPTER 6.	PROJECT CONSTRUCTION		
Section I.	General		
	Flow Diversion Schemes	6-1	6-1
	Maintenance of Navigation	6-2	6-1
	Construction Phases	6-3	6-2
Section II.	Cofferdams		
	General Schemes	6-4	6-2
	Cofferdam Heights	6-5	6-4
	Cofferdam Preflooding Facilities Example Determination of Cofferdam	6-6	6-8
	Heights	6-7	6-8
	Scour Protection	6-8	6-15
CHAPTER 7.	PROJECT OPERATION		
Section I.	Normal Spillway Operations		
	Maintenance of Navigation Pool Levels	7-1	7-1
	Low-Flow Periods	7-2	7 – 4
	Flood Flow Periods	7-3	7-4
	Ice and Debris Passage	7 – 4	7-11
Section II.	Special Spillway Operations	7 -	7 10
	Purpose	7-5	7-12
	Loss of Scour Protection	7-6	7-12
	Operator Error	7-7	7-13

	Subject	<u>Paragraph</u>	<u>Page</u>
	Equipment Malfunction	7-9	7-13 7-14 7-14
CHAPTER 8.	REPAIR AND REHABILITATION General Design Life Modernization Features Typical Repair and Rehabilitation Items Scour Protection Repair and Rehabilitation Model Studies	8-2 8-3 8-4 8-5	8-1 8-1 8-1 8-1 8-2 8-3
APPENDIX A.	BIBLIOGRAPHY AND SELECTED REFERENCES		
APPENDIX B.	NOTATION		
APPENDIX C.	NAVIGATION DAM MODEL AND PROTOTYPE STUDY DATA		
APPENDIX D.	TYPICAL SPILLWAY OPTIMIZATION STUDY		

CHAPTER 1

INTRODUCTION

Section I. General

- 1-1. <u>Purpose.</u> This manual provides guidance in designing, constructing, and operating navigation dams. Some of the factors affecting the safety and efficiency of waterways that are discussed include: types of dams; environmental considerations; equipment in general use on navigation dams; options of design to accommodate ice/debris passage, emergency operation; normal operation to pass flood flows, removal of sediment, or assistance in hydropower development. Some information is also provided on the repair and rehabilitation of existing structures.
- 1-2. <u>Applicability.</u> This manual applies to all HQ-USACE/OCE elements and all field operating activities having responsibilities for the design of civil works projects.

1-3. References.

- a. National Environmental Policy Act (NEPA), PL 9-190, Section 102(2)(c), 1 Jan 1970, 83 Stat 853.
- b. ER 1110-2-50, Low Level Discharge Facilities for Drawdown of Impoundments.
- $_{\text{C.}}$ ER 1110-2-1403, Hydraulic and Hydrologic Studies by Corps Separate Field Operating Activities and Others.
- d. ER 1110-2-1458, Hydraulic Design of Shallow Draft Navigation Projects.
 - e. EM 1110-2-1405, Flood Hydrograph Analysis and Computation.
 - f. EM 1110-2-1408, Routing of Floods Through River Channels.
 - g. EM 1110-2-1409, Backwater Curves in River Channels.
 - h. EM 1110-2-1411, Standard Project Flood Determinations.
 - i. EM 1110-2-1601, Hydraulic Design of Flood Control Channels.
 - j. EM 1110-2-1602, Hydraulic Design of Reservoir Outlet Works.
 - k. EM 1110-2-1603, Hydraulic Design of Spillways.
 - 1. EM 1110-2-1604, Hydraulic Design of Navigation Locks.
 - m. EM 1110-2-1611, Layout and Design of Shallow Draft Waterways.
 - n. EM 1110-2-1612, Ice Engineering.

- o. EM 1110-2-1901, Soil Mechanics Design Seepage Control.
- p. EM 1110-2-2701, Vertical Lift Crest Gates.
- q. EM 1110-2-2702, Design of Spillway Tainter Gates.
- r. EM 1110-2-4000, Reservoir Sedimentation Investigations Programs.
- s. Hydraulic Design Criteria (HDC) sheets and charts. Available from: Technical Information Center, US Army Engineer Waterways Experiment Station (WES), PO Box 631, Vicksburg, MS 39180-0631
- 1-4. <u>Bibliography</u>. Bibliographic items are indicated throughout the manual by' numbers (item I, 2, etc.) that correspond to similarly numbered items in Appendix A. They are available for loan by request to the Technical Information Center Library, US Army Engineer Waterways Experiment Station, PO Box 631, Vicksburg, MS 39180-0631.
- 1-5. <u>Symbols</u>. A list of symbols is included as Appendix B, and as far as practical, agrees with the American Standard Letter Symbols for Hydraulics (item I of Appendix A).
- 1-6. Other Guidance and Design Aids. Use has been made of the following:
- a. Hydraulic Design Criteria (HDC). This loose-leaf design notebook was prepared and is maintained by OCE and WES. References to these criteria are by specific HDC chart numbers. Since the charts are periodically updated, users need to verify the latest versions. Complete notebooks are available from: Technical Information Center, US Army Engineer Waterways Experiment Station (WES), PO Box 631, Vicksburg, MS 39180-0631.
- b. <u>Computer Program Library.</u> The WES Computer Program Library (WESLIB) provides time-sharing computer services to CE Divisions and Districts. One such service is the Conversationally Oriented Real-Time Program-Generating System (CORPS) that especially provides the noncomputer-oriented or noncomputer-expert engineer a set of proven engineering application programs, which can be accessed on several different computer systems with little or no training. (Item 9 of Appendix A gives instructions on use of the system and a partial list of available programs. Updated lists of programs can be obtained through the CORPS system.)
- c. <u>Project Design Memorandums.</u> Liberal use has been made of design memorandums and model study reports resulting from Corps District studies for specific projects. These references are used generally to illustrate a design concept rather than provide specific feature dimensions for proposed projects.
- 1-7. <u>WES Capabilities and Services.</u> WES has capabilities and furnishes services in the fields of hydraulic modeling, analysis, design, and prototype testing. Recently, expertise has been developed in the areas of water quality studies, mathematical modeling, and computer programming. Procedures necessary to arrange for WES participation in hydraulic studies of all types are

covered in ER 1110-2-1403. WES also has the responsibility for coordinating the Corps of Engineers hydraulic prototype test program.

1-8. <u>Design Memorandum Presentations.</u> General and feature design memoranda should contain sufficient information to assure that the reviewer is able to reach an independent conclusion as to the design adequacy. For convenience, the hydraulic information, factors, studies, and logic used to establish such basic spillway features as type, location, alignment, elevation, size, and discharge should be summarized at the beginning of the hydraulic design section. Basic assumptions, equations, coefficients, alternative designs, consequences of flow exceeding the design flow, etc., should be complete and given in appropriate places in the hydraulic presentation. Operating characteristics and restrictions over the full range of potential discharge should be presented for all release facilities provided.

Section II. Typical Navigation Projects

- 1-9. Navigation Dams. The Corps of Engineers has built or operated 182 navigation dams. These dams have normal heads from one foot to over 100 feet. Most dams have spillways with either a gated or uncontrolled crest section. However, a few projects such as Bay Springs on the Tennessee-Tombigbee Waterway or Lock 2 on the Arkansas River System have no spillways; they are both located in canals which traverse two drainage basins. Their upper pools are controlled by spillways located on the main river for the drainage basin on the upstream end of the canal. An inventory of reports on navigation dams is provided in Appendix C. Inland waterway design studies are outlined in ER 1110-2-1458. Lock design procedures are found in EM 1110-2-1604.
- 1-10. <u>Basic Project Components.</u> Navigation dams can be single purpose and only consider navigation; or a project may be developed for multipurposes such as flood control, hydropower, recreation, and water supply in addition to navigation. Therefore the basic components of a navigation dam could include the following:
 - a. Spillway (gated or uncontrolled).
 - b. Overflow embankment or weir.
 - c. Nonoverflow embankment.
 - d. Navigation pass.
 - e. Lock or locks.
 - f. Out let works.
- 1-11. <u>Supplemental Project Components.</u> The design of a single purpose or multipurpose project should accommodate each purpose as much as possible and develop a cost-effective functional plan. Common supplemental components are:

- a. Powerhouse.
- b. Fish passages facilities.
- c. Recreation facilities.
- d. Water supply intakes.
- e. Water quality, low-flow controls, multilevel outlets.
- f. Irrigation outlet works.

Section III. Special Considerations

1-12. <u>Safety.</u> The safety of the public is an important consideration in the design and operation of navigation dams. Many individuals do not recognize some of the dangerous situations that exist near hydraulic structures. Uneven gate operation can result in eddy action that can sweep small boats into the stilling basin. Overflow weirs form zones of reverse flow (Figure 1-1) for certain tailwater conditions which have resulted in small boats being trapped and capsized by the roller action. Surges downstream of locks and hydropower installations can pose hazards to small boats. The hydraulic designer should have input into determining the limited public access areas downstream of structures.

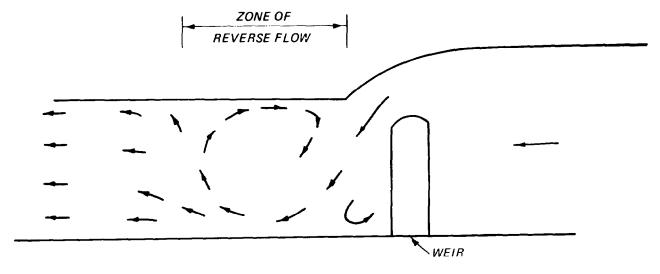


Figure 1-1. Reverse flow downstream of overflow weir

1-13. <u>Environmental.</u> Design of low-head navigation dams should consider measures prevent environmental degradation, as well as enhancement where possible. Design should also facilitate operational procedures for environmental enhancement. Opportunities to add enhancing features should be considered during planning and design. Water quality effects frequently cited for low-head navigation dams are low dissolved oxygen (DO) or nitrogen supersaturation. DO levels in a stream are increased in high turbulence in the

presence of air, such as in a stilling basin. In some cases, stream reaeration can be enhanced by the mode of operation, such as proper gate operation during low-flow periods in the summer and fall when DO levels are typically lower. Aeration devices can be installed on the downstream face of the spill-way to promote aeration. Nitrogen dissolved to supersaturation levels can be induced by operation of navigation dams particularly where there is a sub-merged hydraulic jump and low velocity in the downstream flow. This condition can stress aquatic life. During design, projects should be investigated for nitrogen supersaturation potential. An example of environment enhancement at a low-head navigation dam exists at McAlpine Locks and Dam, constructed at the falls of the Ohio River. These falls were historically a habitat for shore and wading birds. Modernization of McAlpine Dam reduced the flow over the rocks that provided feeding opportunities for the birds. Constructing low-overflow sections in the fixed-weir portion of the dam provided a relatively continuous flow that has improved the habitat measurably.

1-14. Aesthetics. Aesthetics should be given consideration by the designers of navigation structures. The size, shape, and composition of elements of the dam primarily are determined by functional requirements; however, as much as possible, the elements should be designed to be visually pleasing when combined with all other elements of the navigation structure. Some European projects have used streamlined piers with gate-operating mechanisms contained within the piers. This type of installation would provide an improved structure appearance as well as protection for gate-operating equipment. Another method of improving a structure's appearance is the use of "pebble-finished" concrete surfaces as opposed to a smooth form-finished surface. The hydraulic designer should ensure that these surfaces are not used in areas of high-velocity flow.

CHAPTER 2

PROJECT IDENTIFICATION

Section I. Navigation Systems

2-1. General Considerations. During the design of an individual navigation dam project within a series of projects, one must consider the total navigation system. The total system of dams must be considered during preliminary site selection to establish the complete navigation layout. Navigation dams should be designed and located to provide for passage of flood flows and safe transit for all traffic expected to use the waterways when flow conditions permit. Other multipurpose functions such as irrigation and power may need to be accommodated. Site alternatives are usually considered and initial site selection determined in the early stages. Other disciplines (geotechnical, structural, etc.) should be involved in the site selection as in all major design decisions. The site selection is made by evaluating the physical characteristics of each potential site and making comparative estimates of costs and advantages for each site that would be adaptable to either a single or multipurpose project plan. Consideration must be given to whether one site has important hydraulic, foundational, operational, economic, or environmental advantages over other alternatives.

Section II. Project Purposes

2-2. <u>General.</u> Project purposes and their overall social, environmental, and economic effects greatly influence the hydraulic design of navigation dams. Optimization of the hydraulic design and operation requires an awareness by the designer of the reliability, accuracy, sensitivity, and possible variances of the data used. The ever-increasing importance of environmental considerations requires that the designer maintain close liaison with many disciplines to be sure environmental and other objectives are satisfied in the design, General project purposes and related design considerations are briefly discussed in the following paragraphs.

2-3. Purposes.

- a. <u>Navigation</u>. Reservoirs that store water for subsequent release to downstream navigation usually discharge at lower capacity than flood-control reservoirs, but the need for close regulation of the flow is more important. The navigation season often coincides with the season of low rainfall, and close regulation aids in the conservation of water.
- b. <u>Flood Control</u>. Flood control structures are designed for relatively large capacities where close regulation of flow is less important than are other requirements. When large discharges must be released under high heads, the design of gates, water passages, and energy dissipators should be carefully developed.
- c. <u>Irrigation</u>. The gates or valves for controlling irrigation flows are often basically different from those used for flood control due to the necessity for close regulation and conservation of water in arid regions.

Irrigation discharge facilities are normally much smaller in size than flood regulation facilities. The irrigation outlet sometimes discharges into a canal or conduit rather than to the original riverbed. These canals or conduits are usually at a higher level than the bed of the stream.

- d. <u>Water Supply.</u> Municipal water supply intakes are sometimes provided in dams built primarily for other purposes. Such problems as future water supply requirements and peak demands for a municipality or industry should be determined in cooperation with engineers representing local interests. Reliability of service and quality of water are of prime importance in water supply problems. Multiple intakes and control mechanisms are often installed to assure reliability, to enable the water to be drawn from any selected reservoir level to obtain water of a desired temperature, and/or to draw from a stratum relatively free from silt or algae or other undesirable contents. Ease of maintenance and repair without interruption of service is of primary importance. An emergency closure gate for priority use by the resident engineer is required for water supply conduits through the dam.
- e. <u>Power.</u> Power plants are not within the scope of this manual. However, if power plants are to be located in the vicinity of the locks and/or dams, they should be designed so as not to cause conditions that are adverse to navigation or spillway operation such as adverse flow patterns in lock approaches, high pool-level fluctuations, or surge waves.
- f. <u>Low-Flow Requirements.</u> Continuous low-flow releases are required at some dams to satisfy environmental objectives, water supply, downstream water rights, etc. To meet these requirements multilevel intakes, skimmer weirs, or other provisions must be incorporated separately or in combination with other functions of the navigation dam facility.
- g. <u>Multiple Purpose</u>. Any number of purposes may be combined in one project. However, each added purpose will impact on project features and generally complicate project operational requirements.

Section III. Project Studies

- 2-4. <u>General.</u> The development of a navigation system involves a number of studies to determine the basic engineering feasibility of the proposed design. Study details are covered in later chapters, but a general discussion of some study purposes follows.
- 2-5. Project Water Requirements. Navigation projects require a minimum water supply for continuous operation. For projects with lock and dam structures, water supplies must be adequate to meet the following uses: lock filling and emptying needs (these depend on the proposed lock chamber size, lock lift, and maximum anticipated traffic); evaporation from the impounded pool; ground seepage from the pool; seepage under the dam; and leakage past spillway gates and other structural features. Minimum flows must also be adequate to meet the needs of other water-using project purposes such as water supply, irrigation, hydropower, environmental, etc. Procedures for evaluating minimum available flows are covered in Chapter 3.

- 2-6. <u>Pool Levels.</u> Navigation pool levels must be adequate to accommodate the drafts of design vessels plus the necessary clearances. Selected pool levels determine the dam classification. Dams with heads between 10 and 40 feet are generally considered low-head dams and those over 40 feet high-head dams. Because of the problems connected with overbank flooding, the pools of most navigation dams are essentially contained within the natural riverbanks, and would consequently be low-head projects. However, as explained in paragraph 3-11, navigation conditions are enhanced by the pool stability provided with high-head dams. If economically and environmentally feasible, high-head dams should be preferred.
- 2-7. <u>Pool Storage</u>. Inflow into navigation pools must always equal or exceed all outflows to ensure maintaining the navigation pool level. If natural minimum flows are inadequate to maintain the pools, flood storage should be provided to supplement natural flows during the low-flow periods. In an effort to minimize navigation pool fluctuations, the necessary storage should be provided in separate storage projects located in the drainage basin headwaters or on storage projects located on major tributaries.
- 2-8. Environmental. The general philosophy and guidance for preservation, mitigation, and/or enhancement of the natural environment have been set forth (item 33). Many scientific and engineering disciplines are involved in the environmental aspects of hydraulic structures. Some studies influencing the navigation dam design are briefly discussed below. Pertinent data from these studies should be presented in the design memorandum. The designers should have a working knowledge of these data and their limitations.
- a. Fish and Wildlife. Navigation dam design and operation can maintain, enhance, or damage downstream fish and wildlife. Flow releases not compatible with naturally seasonal stream quantity and quality can drastically change aquatic life. These changes may be beneficial or may be damaging, such as adverse temperatures, chemical composition, or nitrogen supersaturation. Information from fish and wildlife specialists on the desired stream regimen should be obtained and considered in the design. Downstream wildlife requirements may fix minimum low-flow discharges. The water quality presentation should include summary data on requirements and reference to source studies.
- b. <u>Recreation.</u> Recreation needs including fishing, camping, boating, and swimming facilities, scenic outlooks, etc., should be considered in the design of the project. These requirements are usually formulated by the planning discipline in cooperation with local interests. To accomplish the desired objectives, close cooperation between the hydraulic and planning engineers is required. Special consideration should be given to facilities for the handicapped, such as wheelchair ramps to fishing sites below stilling basins. Safety fences for the protection of facilities and the public are important. Appreciable damage to stilling basins has resulted from rocks thrown in by the public.
- c. <u>Water Quality</u>. An awareness of maintaining and/or enhancing the environment within the past decade has brought into existence a relatively new and expanded art of reservoir hydrodynamics. Until recently, the study of

reservoir hydrodynamics has been limited to a few prototype vertical temperature gradients and recognition of the seasonal inversions accompanying the fall surface water cooling. However, environmental considerations of today have necessitated the development of preproject capability for prediction of the expected seasonal reservoir stratification and circulation to permit construction and operation of navigation dams designed to meet storage and outflow regimes needed for the reservoir and downstream environment. voir hydrodynamic studies may be done by other than the hydraulic designer (such as the hydrologic engineers) and they would specify the withdrawal requirements (quantity, elevation, etc.). The hydraulic engineer then designs the navigation dam to meet these requirements. However, the hydraulic designer furnishes some of the information for the hydrologic studies. The most common water quality parameter that needs consideration for low-head navigation dams is the downstream DO concentration. The reaeration of the discharge from these types of projects will need to be given consideration in design. Also see paragraph 1-13.

- d. <u>Environmental Impact Statements.</u> Section 102(2)(c) of the National Environmental Policy Act (NEPA)^a requires detailed documentation in the project design memoranda on the impact of the planned project on the environment. The hydraulic engineer may be required to cooperate in the preparation of impact statements. An analysis of 234 Corps of Engineers environmental impact statements on various projects is given in IWR Report No. 72-3 (item 31 of Appendix A). This report can be used as a guide to the type of material needed and format to be used in developing these statements. Basic to environmental impact statements are studies made to define the preproject and project functions and their effects on the environment. In most cases the effect of each project function must be set forth in detail. Item 12 of Appendix A summarizes the concepts involved and presents examples relative to water resources impact assessments. Presentation of the hydraulic design in design memoranda must identify environmental requirements and demonstrate how these are satisfied by the hydraulic facility.
- 2-9. <u>Foundations.</u> Foundation information of interest to the hydraulic designer includes: composition and depth of overburden, quality of underlying rock, and quality of exposed rock. In addition, sideslope stability is of considerable importance in the design of riprap protection. Tailwater stage change rates are required for bank stability design. Sufficient foundation data and/or reference to its source should be included in the hydraulic presentation to substantiate the energy dissipator and exit channel design.

CHAPTER 3

PROJECT PARAMETERS

Section I. Hydrology

- 3-1. <u>General.</u> Watershed hydrology is one of the first needs in developing a navigable waterway. The hydrologic conditions along the full waterway length will impact on the possible need for dams to establish reliable navigation. For instance, coastal regions, the Great Lakes, and the lower reaches of such major rivers as the Mississippi and Missouri are the only locations in the United States where existing depths or flows are adequate to maintain reliable navigation without dams. Hydrologic parameters also determine if the natural flows of the basin are adequate for continuous lock operations, or if supplemental supplies or special storage facilities will be required. Some navigation systems will traverse more than one river basin and require a hydrologic analysis of each basin. Basic hydrologic parameters for the design of all navigation dams are presented.
- 3-2. <u>Basin Description.</u> An understanding of certain physical features of a basin are necessary to properly evaluate the hydrologic and hydraulic functions. These physical features, as outlined below, are needed to determine the rainfall-runoff and the discharge-stage relationships of the basin.
 - a. The location, size, shape, and general topographic nature of basins.
- b. The names, drainage patterns, and longitudinal slopes of the mainstem and major tributaries.
- c. The stream geometry including meandering patterns, channel widths, bank-line heights, cross-section shapes, bed slopes, and information on the historic changes to these features.
- d. The density of vegetation cover over the basin and the soil types with respect to porosity and erodibility. An indication of water table levels in that portion of the basin that could be affected by establishing permanent navigation pools.
- e. The density of vegetation within the floodplain of the stream and the type and erodibility of materials compromising the bed and banks of the streams.
- f. All lake, reservoir, flood control, water supply, levee, irrigation, or other water resource projects that have caused modifications to streamflow discharges or durations. The dates when these modifications began affecting the natural flows need to be identified for proper correlation with streamflow records.
- 3-3. <u>Hydrologic Data.</u> The hydrologic studies for a river basin identify the discharges which a dam structure--located at any particular point within the basin--must be designed to control. Minimum, normal, and maximum discharges are all significant to the dam design. Furthermore, discharges must be

determined that reflect not only existing basin conditions but also future basin conditions covering the economic life of the navigation system. For design purposes, stream discharges and stages at any site are commonly identified with respect to flow duration and exceedence frequency. The impacts of various flows on dam design are indicated.

- a. Minimum Flows. These flows are essential to evaluate the quantity of water available for lock operations and for other potential project purposes such as water supply, low flow, hydropower, etc. Minimum available flows will also identify the possible need for water storage or water import facilities to meet project purposes. At sites with limited water supplies, special seals may be proposed on spillway gates or other dam features to minimize water leakage.
- b. <u>Normal Flows</u>. Moderate or commonly recurring flood flows are needed to establish the elevation of various project features such as access roads, lock walls, operating decks, etc., and also project-related relocations and real estate requirements. Typical discharges used to determine the elevations include: the two percent duration flow, the 2-, 10-, 50- and 100-year interval flood flows, and the standard project flood (SPF).
- c. Maximum Flows. The maximum experienced flood of record is determined for each project, but the dam should generally be designed with adequate capacity to pass the probable maximum flood (PMF). Passage of this discharge may be exclusively through a gated spillway, but a portion could pass over the lock, the esplanade, and overflow weirs or embankments extending across the waterway overbanks.

Chouteau Lock and Dam is a typical navigation structure located on the McClellan-Kerr Arkansas River Navigation System. The pertinent discharge and stage data for this project is presented in Figure 3-1.

- 3-4. Hydrologic Data Sources. The records resulting from field measurements of both streamflows and climatological parameters such as rainfall, snowfall, evaporation rates, humidity, wind, and temperature are the basic source of needed hydrologic data. Streamflow records provide the simplest and most direct means of determining needed discharge data. However, streamflow recording stations are limited in number, often cover too short a time period, and occasionally are not reliable enough to provide all the flow information required for dam design. The normal procedure for obtaining the required supplemental data is to simulate flows from climatological data. In the United States, the sources of basic hydrologic data are as follows:
- a. <u>Streamflow Records.</u> Most streamflow data within the United States are measured and recorded by the United States Geologic Survey (USGS) of the Department of the Interior. Occasionally, records are maintained by other agencies such as the Corps of Engineers, Soil Conservation Service, National Forest Service, various state agencies, and local municipalities. USGS records are published in convenient annual reports covering all gages maintained within a specified state.
 - b. Climatological Records. In the United States, climatological data

McClellan-Kerr Arkansas River Navigation System CHOUTEAU LOCK AND DAM, VERDIGRIS RIVER, OKLAHOMA

From Design Memorandum No. 1, General Design

PERTINENT DATA

GENERAL

Purpose of project Location of lock Location of dam, river mile Upper pool elevation, feet Normal lower pool elevation, feet Minimum lower pool elevation, feet STREAMFLOW AT DAM SITE, cfs	Navigation 3,400 feet east river mile 8.5 9.6 511.0 490.0 487.0
Estimated maximum flood of record (1943) Maximum modified flood of record 5-year recurrence interval flood, modified 10-year recurrence interval flood, modified 50-year recurrence interval flood, modified Modified standard project flood Discharge, 50 percent of time Average flow Minimum modified flow Navigation design flood Project design flood Discharge, 2 percent of time	224,000 122,200 50,000 65,000 126,000 155,000 4,096 230 65,000 155,000 34,000
Estimated maximum river stage (1943) Maximum modified flood of record 5-year recurrence interval stage, modified 10-year recurrence interval stage, modified 50-year recurrence interval stage, modified Modified standard project flood Discharge, 2 percent of time Discharge, 50 percent of time Average flow Minimum modified flow Navigation design flood Project design flood	529 526.3 515.8 519.0 526.6 529.3 510.7 491.4 496.0 490.5 518.5 529.3

Figure 3-1. Pertinent hydrologic data for a typical navigation dam project

such as precipitation, evaporation, wind speed, temperature, etc., are archived in various formats by the National Oceanic and Atmospheric Administration (NOAA), a unit of the US Department of Commerce. These data can be retrieved from annual reports or by magnetic tape from the NOAA data base. Most studies that have limited streamflow records utilize synthetic single storm events to determine flood frequencies. The general depth-area-duration rainfall data required for these computations are published by NOAA.

- 3-5. <u>Hydrologic Model.</u> For effective use in dam design, climatological data must be converted into streamflow data. This is normally accomplished by developing a math model to simulate the hydrologic response of the proposed project basin. A number of effective models have been developed, but the one most commonly used is Computer Program 723-X6-L2010, "Flood Hydrograph Package." This model, commonly called HEC-1, was developed and is maintained by the Hydrologic Engineering Center (HEC) located in Davis, California. The three main steps in developing an HEC-1 model for a specific project site are summarized.
- a. Rainfall-Runoff. The HEC-1 model needs to represent the rainfall-runoff relationship at any particular location in the basin. This relationship is based on developing one or more unit hydrographs for that location within the basin. EM 1110-2-1405 provides guidance in unit hydrograph development.
- b. Routing and Combining. The HEC-1 model is then used to route runoff from the various parts of the basin and combine them to establish flow conditions at the project location. General guidance for flood routing is contained in EM 1110-2-1408.
- c. <u>Calibration</u>. Verification of the HEC-1 model requires an analysis of most of the experienced storms on the basin for which resulting flood hydrographs are known. Experienced rainfalls are applied to the model and the computed flood flows are compared with the experienced flood hydrographs. From several such tests, adjustments are made to the unit hydrographs, routing criteria, rainfall, and infiltration data within the model until a reasonable reproduction of all experienced flood hydrographs is obtained.
- 3-6. <u>Flow Computations.</u> Establishing a navigation system through a basin will usually affect the hydrology of the basin. Consequently, both existing and postproject conditions must be determined. Basic hydrologic computations required for all studies include the following.
- a. Probable Maximum Flood (PMF). This hypothetical event represents the flood resulting from the most severe combination of critical meteorologic and hydrologic conditions that are reasonably possible to occur in a region. The National Weather Service has identified the Probable Maximum Storm (PMS) upon which the PMF is based for all regions of the US. The precipitation data for these storms are contained in a series of regionally oriented Hydrometeorological Reports (HMR's). For any particular project, the PMF discharges are determined by inputting the PMS rainfall data into the adopted HEC-1 model for the project.

- b. Standard Project Flood (SPF). As identified in EM 1110-2-1411, the SPF is runoff resulting from the Standard Project Storm (SPS)—the rainfall representing the most severe storm that is considered reasonably characteristic of the region in which the drainage basin is located. The EM provides the necessary guidance for developing this storm. For very large watersheds which are beyond the scope of EM 1110-2-1411, the SPS is frequently estimated to be half of the PMS as determined above.
- c. <u>Flood Frequencies.</u> The designs of many dam features are based on the frequency of floods at the project site. Flood frequencies are identified as the time in years between which a particular flood discharge is likely to recur. For instance, a 50-year recurrence interval flood discharge would have an average time interval of 50 years between occurrence of a given or greater magnitude discharge. It would have a 2 percent chance of being equaled or exceeded in any one year. A typical discharge-frequency curve is shown in Figure 3-2.

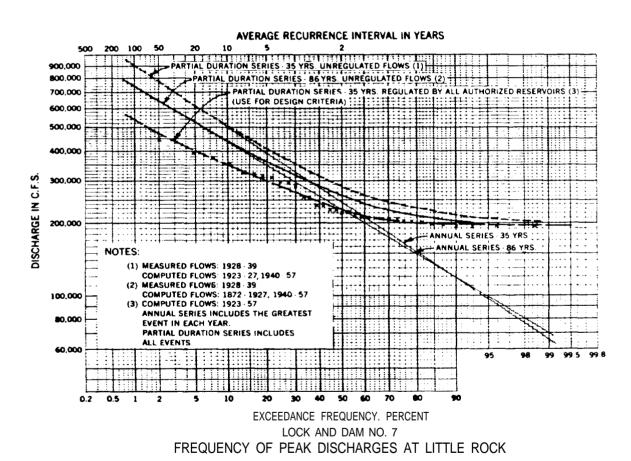


Figure 3-2. Typical discharge-frequency curve used in the design of Murray Lock and Dam, Arkansas River, Arkansas

d. <u>Flow Duration.</u> Lesser project flows are commonly expressed with respect to their duration—the percent of time that a particular discharge is equaled or exceeded. Discharge—duration curves are determined from the total period of flow data records. These records are also used to determine existing minimum flow conditions. A typical stage—duration curve as derived from the discharge—duration and discharge rating curves for Murray Lock and Dam is shown in Figure 3-3.

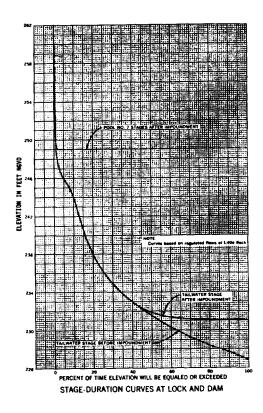


Figure 3-3. Typical stage-duration curve for Murray Lock and Dam, Arkansas River, Arkansas

Section II. Hydraulics

3-7. <u>General.</u> Hydraulic studies for navigation dam design generally cover two distinct phases. One phase is establishing the stage-discharge relationship over the entire area affected by the proposed project under both existing and postproject conditions. The studies in this phase coordinate closely with the hydrologic studies. They establish stage-discharge relationships both at specific sites and over extended river or channel reaches affected by the project. The second phase of hydraulic studies involves the design of dams and other structures—their type, shape, size, and siting to assure satisfactory hydraulic performance. These second phase studies are covered in CHAPTER 5. The required stage-discharge studies presented here cover channel discharge rating curves, water-surface profiles, and establishment of navigation pool elevations.

- 3-8. Channel Discharge Rating Curves. Stage-discharge relationships are required to initiate water-surface profile computations and also to establish the tailwater conditions for the hydraulic design of dams and their spillway structures. The basic source of discharge rating curves is stage-discharge records collected at stream-gaging stations. These stations are located at relatively fixed stream cross sections such as bridge openings or weir structures where the stage-discharge relationships will stay relatively fixed with time. Most existing stream-gaging stations are established and operated by the USGS. However, existing station locations are limited and establishing new stations for specific projects may be advisable.
- a. <u>Stream Changes.</u> Existing rating curves can be determined directly from stream records. However, these curves are affected by project-related changes to the downstream channel alignments, cross sections, channel stabilization measures, and established navigation pools. Postproject or future condition rating curves must reflect these changes. The effects of these changes can only be estimated until the project design has been finalized, so the postproject rating curves are generally adjusted and refined throughout the project design process. See paragraph 5-7 for factors that can affect tailwater rating curves.
- b. <u>Backwater Effects.</u> Occasionally, channel rating curves under both existing and postproject conditions are affected by backwater effects from downstream receiving rivers, major tributaries, lakes, or bays. In such instances, channel stages cannot be related to a specific stream discharge. For any specific channel discharge, the water level would vary over a range of stages depending on the downstream backwater stages. The specific rating curve application will determine if a low, high, or average backwater stage should be considered. A study of experienced coincident discharge and stage conditions can be helpful in selecting appropriate backwater conditions.
- 3-9. <u>Water-Surface Profiles.</u> A key tool in the development of a navigation system through a drainage basin is the model used to calculate water-surface profiles for both existing and postproject conditions. By comparing the two profiles over a wide range of the discharges, the hydraulic impacts of establishing various dam locations and navigation pool elevations can be evaluated. The preproject and postproject profiles are also needed to evaluate the effects on flood heights, relocation requirements within the pool length, and flooding effects on adjacent real estate.
- a. <u>Computation Procedures.</u> Navigation projects are located on or along streams that flow within the subcritical range. Development of a basin specific computer model for calculating standard backwater computations is the normal method for determining water-surface profiles. The most common computer program for conducting water-surface profiles is HEC-2. Information on the theoretical basis, latest version, and operating instructions for HEC-2 can be obtained from HEC, the model developer. Basic guidance for operating HEC-2 is provided in EM 1110-2-1409. Other satisfactory backwater programs have been developed for specific projects. For instance, the Arkansas River profiles were computed with the LRD-1 program. This program was developed for handling flood flows that spread over broad overbank areas containing both cleared and heavily wooded areas. However, the HEC-2 program is the most

common one used to compute water-surface profiles.

- b. <u>Multiple Computations.</u> During floods when water levels are well over the riverbanks, flow patterns can become very complex. Man-made obstructions such as transportation embankments, levees, building developments, dams, etc., or even natural features such as swales, cutoffs, or divided channels can require multiple backwater runs through the study reach to properly identify water profiles. In some complex study reaches, development of a hydrodynamic (unsteady or multidimensional) math model as an alternative to standard backwater computations may be advisable. WES or HEC personnel can advise users on available hydrodynamic models.
- c. <u>Profile Plots.</u> Plotting existing and postproject water-surface profiles over a complete navigation system can be a major undertaking. Many HEC-2 users have developed computer graphics programs for accomplishing this task. Information on many of these programs, both locally available and remotely accessible, can be obtained from HEC.
- 3-10. <u>Specific Profile Uses.</u> Following are descriptions of some of the most common uses of water-surface profiles in navigation dam design.
- a. Real Estate. The extent of lands acquired under fee-simple purchase or under easement rights purchase are based on envelope curves which directly compare preproject with postproject water-surface profiles.
- b. <u>Relocations.</u> Highway and railroad embankments, bridges, overhead utility crossings, flood protection levees, drainage structures, and a multitude of riverside facilities such as water and sewage treatment plants, pumping stations, parks, and industrial and residential areas are all affected by floodwaters when a navigation pool is established. Alteration, protection, or relocation of all these facilities are based on the water-surface profiles.
- c. Lock and Dam Features. The elevations of a number of structural features are determined from water-surface profiles. For example, on the Arkansas River navigation system the channel was anticipated to be navigable for flows up to the lo-year recurrence interval flood. Flow velocities at larger floods were expected to be too high for safe or efficient operation of most tows. Consequently, the top of lock walls and the esplanade areas were set at the higher of 10 feet above the navigation pool or two feet above the IO-year recurrence interval flood. Access roads were set at the lo-year recurrence interval flood. Other feature elevations were similarly dependent on the profiles.
- d. Groundwater Table. Permanently establishing navigation pools at elevations near the top of riverbanks may cause significant changes to the water table levels on adjacent lands. Saturated soils can adversely affect or destroy the productivity of farmlands. Established land drainage facilities can loose their efficiency by reduction of the hydraulic heads between the fields or ditches and the river. A special study of water table changes resulting from proposed navigation pools may be necessary. Such a study was conducted by the USGS along reaches of the Arkansas River. The study included an inventory of over 1,500 existing wells, installing and periodic reading of

an additional 1,500 wells, 27 pumping tests, numerous aquifer sample tests, and geologic mapping. The study covered the affected lands in each proposed pool. It led to shifting of some project sites to minimize adverse drainage problems. Study results are summarized in item 29.

- 3-11. Navigation Pool Level Stability. In addition to the flooding impacts of an established navigation pool elevation, consideration should be given to the operational stability of the selected pool. A navigation dam should provide a fixed pool elevation with as little stage variation as possible. Attainment of this goal best promotes reliability and growth in waterway traffic and also simplifies development of port facilities. A number of factors that have an effect on pool stability need to be considered.
- a. <u>Project Purposes.</u> Pool stability for any navigation dam can best be maintained by eliminating or minimizing those project purposes that require water storage within navigation pools. To the extent possible, project purposes requiring storage should be located in headwater or tributary projects to the navigation channel. If included in navigation dams, the water requirements should be restricted to amounts less than the minimum inflows into each pool minus that amount required for navigation lockage and dam leakage. Recreation purposes normally are enhanced by stable pools. Many navigation pools do include hydroelectric power plants. To minimize pool fluctuations, they should be operated as run-of-river plants with allowable pool fluctuations limited to three feet or less. Allowable tailwater fluctuations should be established. Rates of change in pool and tailwater elevations should also be considered.
- b. <u>Dam Head.</u> Stable navigation pools are more easily maintained with high-head rather than low-head dams. This is because high pools are less frequently affected by flood stages--particularly in the downstream portion of the pools. However, existing developments are so extensive in many reaches of those rivers which can economically justify navigation projects that low-head dams with pool levels contained within the riverbanks are usually mandated. In such instances, stable pools can best be maintained with dams that have high capacity spillways which minimize upper and lower pool head differentials during flood conditions. Both high- and low-head dams are common on navigation projects located throughout the United States.

Section III. Sedimentation

3-12. General, Sedimentation problems should be grouped into two main categories: (a) local scour and deposition problems and (b) general degradation and aggradation problems. The first is controlled or influenced primarily by the hydraulic design of the project structures. The second is the result of the stream's response to changes in the discharge hydrograph and sediment transport caused by the proposed navigation projects. Each of these problem areas should be reported separately. State the refinements, if any, for subsequent sedimentation studies and the impact of either more or less sediment on project performance. General information and guidance about sedimentation is obtained in EM 1110-2-4000.

3-13. Problems.

- a. Alluvial rivers tend to establish an equilibrium between the water and sediment loads imposed upon them. Any significant modifications to the system (realignments, lock and dams, etc.) will disrupt this balance and a period of adjustment will occur as the stream attempts to reestablish a new state of equilibrium. During this period of adjustment, sediment-related problems are increased. Development of a river system for navigation involves the construction of several major work components such as locks and dams, bank stabilization, reservoirs, and realignments. The impacts of each of these components of work can be assessed individually. However, the ultimate response depends on how the system integrates these individual impacts in an effort to attain a new equilibrium state. Because of this complexity it is difficult and sometimes dangerous to develop definite rules or trends that apply to all navigation projects. Design criteria and techniques that have been successful on one river system may not be feasible on another system which has different hydrologic or geomorphic characteristics.
- b. Sediment problems are generally more difficult to predict for low-head navigation dams than for high-head dams. Common problems associated with high-head dams are aggradation in the upper pool followed by degradation of the downstream channel. Low-head dams generally follow somewhat different trends, since they are designed to allow open-river conditions during the high-flow periods when the majority of sediment is transported. Special care must be taken to ensure that open-river flows occur frequently enough so that the existing sediment transport regime is not significantly altered.
- 3-14. Sediment Data Needs. Knowledge of sediment transport, in terms of both quantity and quality, is essential for design of river engineering works on alluvial streams. The primary sediment problems associated with navigation systems are related to deposition in navigation pools, degradation below dams, and streambank erosion. In order to assess these problems, certain basic data must be available. These basic data should include suspended sediment samples, bed-load samples (if possible), bed material samples, and borings in the streambed and banks. Sampling stations should not be restricted to the limits of the navigation project but should include upstream and downstream reaches, as well as major tributaries.
- 3-15. <u>Sedimentation Study.</u> Potential sediment problems may be minimized and in some cases eliminated by conducting a detailed sedimentation study of the entire stream system. As one component of a comprehensive geomorphic analysis the sedimentation study is aimed at developing an improved understanding of the significant sedimentation processes within the basin. The major emphasis of this type study should be on analyzing the channel morphology and sedimentation phenomenon during the historic period, although long-term system changes are also considered. As a minimum the sedimentation study should document the variations in sediment transport (size and quantity), identify all major sources of sediments (bed and banks, tributaries, etc.), locate degrading, aggrading, and stable reaches, and establish the range of flows transporting the majority of sediments. Correlating the results of the sedimentation study with historical changes in the basin (channel improvements, land use, reservoirs, etc.) enables the engineer to develop a firm

understanding of past and present sedimentation processes. With this information the effects of anticipated project features can be analyzed qualitatively. A qualitative analysis of this nature is essential for the development of and interpretation of results from sediment transport models.

- Analysis Tools. A number of methods are available to design engineers to analyze sedimentation problems associated with the design and operation of navigation projects. These tools include numerical models, physical models, and analysis of prototype data. Prior to use of any of these tools, the designer should have developed an understanding of the existing sediment regime of the planned navigation system. The methods for establishing baseline sediment study were discussed in paragraph 3-15 of this section. Also prior to the development of either numerical or physical models, the designer should have a knowledge of the expected sedimentation changes as a result of altering the river system. This knowledge should help the design engineer in selection of model to be used, study limits for the model, and estimating the cost of the model study. The first analysis tool used by the engineer designing the navigation projects should be review of sedimentation control methods that have been used on other navigation projects. control measures have been used on a number of rivers in the US including the Missouri, Ohio, Mississippi, Arkansas, Ouachita, Red, and Black Warrior Rivers. A review of what has worked and more important what has not worked as a means of controlling and reducing sediment problems on these rivers will provide the designer of a new navigation system with a basis for developing solutions to sediment problems that develop during the model studies. The following tools are available for the detailed studies. It should be emphasized that tools listed below, whether they be numerical or physical in character, have all been successfully applied to navigation sedimentation problems and if correctly applied using good engineering judgment will provide reliable guidance in selections of sediment control measures.
- The first model the engineer should consider for analyzing sedimentation problems is "Scour and Deposition in Rivers and Reservoirs," (HEC-6) developed by the HEC (item 28). HEC-6 is a one-dimensional flow model that can be used to analyze scour and deposition in both rivers and reservoirs. The program is very useful in determining long-term trends of scour and deposition in a stream channel and can be used to determine degradation that can be expected downstream of dams. Downstream degradation of the channel bed can be a significant problem in areas downstream of high-lift locks and dams. Deposition in navigation channels and lock approaches is usually a problem in low-lift and run of river projects. HEC-6 is useful in the initial studies associated with navigation project because of its ability to provide the location and volumes of deposition that can be expected with a navigation project. Locations and volumes of deposition can be used to estimate the amount of maintenance dredging that can be expected. Although one-dimensional models will point out locations and volumes of deposition, more detailed physical models and/or two-dimensional numerical model studies will most likely be needed to develop alternative methods of reducing or eliminating maintenance dredging. HEC-6 can also be used to study sedimentation problems that can be expected during floods and the effect dredging depth has on the rate of deposition. Detailed discussion of the input data for HEC-6 can be found in the user manual for HEC-6 and can be obtained from the HEC; briefly

the data needs are geometric, sediment, hydrologic, and operational data. Of the models to be discussed in this section, HEC-6 will usually be most useful in the initial studies of the proposed system and are the only models that can address the entire system at one time, HEC-6 is not designed to model hydraulic structures in great detail and the user should not try to use HEC-6 in areas where the one-dimensional flow assumptions do not apply.

- If it is determined that HEC-6 cannot adequately provide solutions to sediment problems, the TABS-2 modeling system can be used (item 25). A word of caution at this time is necessary in that when you decide to apply the TABS-2 system, everything involved gets bigger. The data required to do the modeling increase, the computer cost increases, and the level of expertise required to apply the model increases. TABS-2 is a generalized numerical modeling system for open-channel flows, sedimentation, and constituent trans-It consists of more than 40 computer programs to perform modeling and The major modeling components--RMA-2V, STUDH, and RMA-4-related tasks. calculate two-dimensional, depth-averaged flows; sedimentation; and dispersive transport, respectively. The other programs in the system perform digitizing, mesh generation, data management, graphical display, output analysis, and model interfacing tasks. Utilities include file management and automatic generation of computer job control instructions. TABS-2 has been applied to a variety of waterways, including rivers, estuaries, bays, and marshes. TABS-2 model can be used to analyze scour and deposition problems associated with navigation structures, locks and dams, dikes, and approach and exit channels. TABS-2 is also a useful tool in lock site studies. If there are a number of possible sites to place a proposed lock and dam, the TABS-2 system can be used to determine the possible scour and deposition problems associated with each site and to evaluate preventive measures necessary to prevent sediment problems. Because of cost and data requirements, the TABS-2 model limits should be limited to area of concern and not used to model long reaches of Long reaches of river can be modeled more efficiently using HEC-6. The TABS-2 model is also a useful tool in the initial analysis of alternative methods of reducing sediment problems before construction and testing of physical models. Other sediment models are available, one of which is a stream tube model used to determine scour and fill trends in an alluvial stream. St. Louis District has applied the model to navigation dams, cofferdams, and other related structures,
- c. Before beginning the detailed design of a proposed navigation project, a movable-bed physical model study should be considered. The cost of the model study is small when compared with the total engineering design and construction cost of a navigation project, and results of physical model study are often useful in verifying the design developed in numerical model studies and in providing guidance for design of the overall project. Each lock and dam should be physically modeled with a movable-bed prior to detailed design; if the project requires major channel realignment a typical reach model should also be considered.
- 3-17. <u>Sediment Control Measures.</u> A number of methods for controlling sediment problems are associated with navigation projects. These methods of sediment control involve the management of sediment problems at an isolated location, and source reduction of sediment either by bank stabilization or an

upstream reservoir. Control of sediment problems at isolated locations involve such things as dikes, bank stabilization, and structural modifications to the lock and dam. Controlling the source of sediment must be carefully analyzed to ensure that the control does not have adverse impacts upstream or downstream of the project. The reduction of upstream sediment source does not in itself imply overall reduction of sediment problems. In areas where no sediment source is obvious, measures such as covering the sediment source with polyethylene filter cloth should be considered. Bank stabilization methods can be found in numerous reports and design documents for the Arkansas and Red Rivers and good literary review can be found in Section 32 Bank Stabilization Report (Item 26). When considering an upstream reservoir as a method for reducing sediment inflows, the need for grade control in the channel downstream of the reservoir should also be considered. This review of grade control structures should also include tributaries to main channels that might be subject to degradation resulting from the construction of upstream reservoirs.

Section IV. Ice Conditions

3-18. <u>General</u>. The prediction of extent and duration of ice conditions at navigation dams is necessary to allow development of ice control methods. The extent of ice problems can be determined by review of historical records and monitoring the site conditions during the study. EM 1110-2-1612 provides methods of estimating ice growth and duration using winter air temperatures.

CHAPTER 4

PROJECT LAYOUT (SITING OF STRUCTURES)

- 4-1. General. Detailed guidance on project layout is provided in EM $111\overline{0-2-1611}$. This chapter provides an overview of the major aspects of project layout. Navigation locks and dams are usually required in some streams or canals to provide adequate depths for navigation during low flows without excessive velocities. Lock and dam layout is an iterative process in which the physical, hydraulic, geologic, and other parameters are evaluated for a preliminary layout and necessary adjustments made eventually come up with a feasible layout. The basic tools required to initiate this process are topographic maps, water-surface profiles, geological data, and preferably aerial mosaics that cover the full length of the proposed project. The number of navigation structures required for the system is basically dependent on the stream bed slope and on the levels of the upper pools that can be economically Ideally, the pools would be as high as possible to reduce the total number of lock and dam structures, thereby minimizing system transit Also, all the pools would have roughly equal heads so that lockage water requirements and operation times at each project are roughly the same. Physical constraints normally prevent attaining these ideal conditions.
- 4-2. Upper Pool Elevation. The selection of the optimum upper pool elevation will require a detailed analysis of the local terrain; areas subject to flooding; effects on groundwater elevation, drainage, environmental impact; need for raising, relocation, or replacement of existing facilities such as bridges, levees, highways, railroads, sewer lines, etc.; real estate acquisition; and need for dredging and/or training and stabilization structures. In some cases it might be more economical to increase the length of the pool by dredging in the upper reach than by raising the pool elevation. When sediment movement is involved training structures might be required to maintain navigation widths and depths in the dredged area. The ultimate selection of the upper pool elevation and location of the structures has to be based on an economic evaluation of the factors involved and navigation conditions that could result from the proposed project. However, navigation conditions are normally better with high-head pools because velocities are lower and pool fluctuations are less.
- 4-3. Navigation Considerations. The site selected for each structure can be one of the most important factors in the development of satisfactory navigation conditions. In addition to other factors, the design engineer should consider the reach upstream and downstream of the proposed sites (including current directions and velocities), sediment movement for the various flows possible, effects of the structure on the currents and movement of sediment, and the effects of the resulting currents on the movement of tows approaching and leaving the lock or locks.
- 4-4. <u>Foundations.</u> The foundation available may have a significant effect on the location and arrangement of the structure. The characteristics of the foundation material determined during the early stages of the investigation should provide some indication of the probability that the structures needed can be constructed at reasonable cost with ordinary design standards and may

reduce the number of sites available. Movement in the location of the structures because of foundation conditions should not jeopardize safe and efficient navigation conditions.

- 4-5. Sediment Movement. The effects of sediment movement in a stream should be considered in the evaluation of the location of the structures and the selection of the normal pool elevation. Many of these streams will require some modifications within the pool because of short-radius bends and shoaling in crossings, particularly in the upper reach of the pool. Solution of sedimentation problems requires a knowledge of the sedimentation processes in alluvial streams and methods that can be used to modify these processes to eliminate any undesirable conditions. Heavy sediment movement could have an effect on the length of pool that could be economically developed but would otherwise have little effect on the location of the individual structure. Normally, lock or locks sited to provide good navigation conditions (normally on the outside of bends) should experience no difficulties with shoaling in the upper lock approach. Shoaling can be expected in the lower lock approach because of the sudden expansion in channel width at the end of the riverside lock wall. However, structures have been developed in model studies that can be used to minimize or even eliminate shoaling in the lower approach and thereby minimize or eliminate maintenance costs (see EM 1110-2-1611).
- 4-6. Channel Rectification. The natural bends in most streams are too sharp and long to establish a safe navigation sailing line for most commercially sized tows. Lock and dam layout needs to consider these channel realignments to be assured of satisfactory approach conditions. Channel realignments should change the natural alignment as little as possible to minimize the changes to the natural flow regime of the stream. Severe regime changes frequently result in the stream not conforming to the proposed alignment. Expensive maintenance problems will result.
- 4-7. <u>Channel Stabilization.</u> Channel rectification measures normally require channel stabilization structures to coax the stream to assume the realignment. Channel stabilization structures are also useful in the control of sediment deposition tendencies. Through properly placed structures, ultimate channel maintenance dredging can be minimized.

CHAPTER 5

PROJECT DESIGN

Section I. Spillway Design

5-1. <u>General.</u> Navigation dams can be relatively high structures, such as those on the Columbia and Snake Rivers, in which cases the spillway should be designed in accordance with procedures described in EM 1110-2-1603. However, most navigation dams are low-head structures. Their basic purpose is to provide adequate depths for navigation during low-flow periods and to offer minimum resistance to high flows. This chapter concentrates on the design of spillways for low-head dams. The following guidance is mainly a result of analysis of specific low-head navigation projects. A definition sketch is given in Figure 5-1 and symbols are defined in Appendix B. An example design is provided at the end of this chapter.

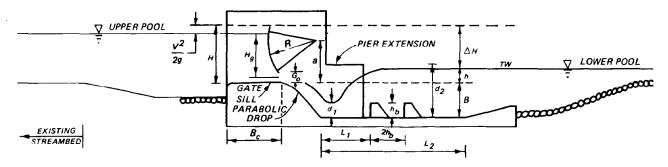


Figure 5-1. Definition sketch of typical navigation dam

5-2. Crest Design.

General. Since the project is planned to offer minimum resistance to flood flows, the fixed portion of the spillway must occupy only a small part of the cross section of the river channel. Thus a gate sill with its elevation at or near the elevation of the streambed is required and damming during low flows must be accomplished by movable gates. The lower the head on the crest, the lower the unit discharge. This results in a longer crest but lesser requirements for the stilling basin and downstream channel protection. Conversely, the higher the head on the crest, the higher the unit discharge. This results in a shorter crest length but greater requirements for the stilling basin and downstream channel protection. Many low-head navigation dams operate under highly submerged flow conditions. The discharge coefficients for a low, submerged, broad-crested weir are close to those for a similar low, submerged ogee crest. With a low gate sill an ogee crest may not provide sufficient space for operating gates and bulkheads. Thus, for these reasons, a broad-crested weir is often indicated and structural requirements usually dictate the width of the crest to be approximately the same as the damming height of the gates. For structures that do not operate under submerged flow conditions, an ogee crest is often used to improve efficiency of the spillway. EM-1110-2-1603 provides guidance for design of ogee crests. The remainder of paragraph 5-2 addresses crest design for broad-crested weirs.

b. <u>Upstream Face.</u> Although a vertical upstream face slope has been used on most low-head navigation dams having a broad-crested weir, other slopes can be used. Based on an analysis of the data presented in item 3 of Appendix A, the minimum radius connecting the upstream face with the horizontal portion of the broad-crested weir should be as follows:

<u>Head, feet</u>	Radius, feet
<20	3
20-30	4
30-40	5
40-50	6

Downstream Face for Nonsubmersible Gate Spillway. The downstream face of the weir can be shaped so that flow under partially opened gates will adhere to this face of the weir and thus move to the floor of the stilling basin where it can be dispersed by baffles and/or the end sill. If the downstream face breaks away from the weir crest too sharply, the nappe will separate from the weir, and an eddy in a vertical plane will form under the nappe in the upstream portion of the stilling basin. Under certain tailwater conditions, this eddy will force the nappe upward and then it will dive through the tailwater and attack the exit channel downstream of the stilling basin. This undesirable type of action, known as an undulating jet with a free nappe, generates severe surface waves. Of course, economics dictates that the horizontal extent of the downstream face of the weir be minimum. In item 6 of Appendix A, tests are described wherein it was established that the downstream face of the weir should be parabolic based on the trajectory of a free jet, A free jet leaving the horizontal weir crest will follow the path:

$$X^2 = \frac{2V_o^2Y}{g} \tag{5-1}$$

where

X,Y = horizontal and vertical coordinates

 V_0 = initial free jet in feet per second (ft/sec) = $\sqrt{2gH}$


g = acceleration due to gravity in ft/sec²

H = upper pool elevation, crest elevation


However, based on item 6 of Appendix A, the nappe will adhere to the downstream face if V is the theoretical velocity resulting from only one-third of the actual head. Thus, if the upper pool is 36 feet above the weir crest (H = 36 feet), V_o for determination of the shape of the downstream face of the weir should be based on a head of only 36/3 or 12 feet. That is, $V_o = \sqrt{2g(12)} = 27.8$ ft/sec; and the equation for the downstream face should be about $X^2 = 48Y$. Since the range of data used to develop this relation is limited, the steepest trajectory that should be used is $X^2 = 40Y$. For heads


greater than 40 feet, model testing is required. Using one-third of the head on the crest in Equation 5-1 results in a downstream face shape which is close to that resulting from the procedure used for high spillways (presented in EM 1110-2-1603). The techniques presented in EM 1110-2-1603 can be used for heads greater than 40 feet. The trajectory resulting from using one-third of the head on the crest is the steepest that can be used without severe negative pressures occurring on the downstream face; flatter trajectories can be used. The parabolic trajectory continues to the stilling basin floor unless terminated by a constant slope which may be desired for ease of construction. A slope of 1V:1H was used below the parabolic trajectory in the investigation of pressures on the downstream face of the crest (Item 6). Examples of different crests are shown in Figure 5-2. Downstream faces having "steps" have been used on Mississippi River Locks and Dams Nos. 5A, 6, 7, 8, and 9. These structures have relatively small differentials (5.5 to 11.0 feet) between upper and lower pool elevation.

- d. <u>Downstream Face</u>, <u>Submergible</u>. Submergible tainter gates are used to pass ice over the top of the gates. As shown in Figure 5-3, submersible tainter gates can be either the "piggyback" type or-those in which the crest shape allows the bottom of the tainter gate to drop below the flat portion of the crest. The piggyback type uses the parabolic trajectory given in (c) above. Two examples of the downstream crest shape for the 2nd type of submergible tainter gate are shown in Figure 5-3. Gate bays for submergible gates should not be so wide that undesirable gate vibrations develop.
- e. <u>Intersection of Downstream Spillway Face and Stilling Basin Floor.</u>
 Toe curves at the intersection of the downstream spillway face and the stilling basin floor are not widely used in low-head navigation dams.
 Guidance for toe curve pressures below ogee crests is given in HDC 122-5.
- f. Crest Pressures, Velocities, and Water-Surface Profiles. For most low-head navigation dams, spillway velocities are relatively moderate because of tailwater submergence effects. Under normal spillway operations, all the gate openings would be balanced and maximum velocities would occur at small gate openings when the effective head is high and tailwater level is low. The latest design policies require that under emergency conditions, any one gate can be fully opened without causing severe erosion damage to the downstream scour protection measures. Flow velocities and pressures should be determined for both of these operational conditions. The velocities are needed to assign appropriate tolerances for construction of the spillway surfaces. resulting from these velocities are needed to ensure against cavitation conditions and also to determine the uplift forces needed by structural designers to check the spillway stability. Crest pressures and water-surface profiles have not been measured for a wide range of heads, gate openings, approach elevation, apron elevations, etc. Available information is given in item 6 of Appendix A and shown in Figures 5-4 and 5-5 for water-surface profiles and pressures, respectively.
- 5-3. Spillway Capacity for High-Head Dams. Spillways for high-head navigation dams are generally designed with adequate capacity to pass the PMF flows. At this condition, all-flows-would still be limited to the spillway section; adjacent concrete or embankment structures would have adequate freeboard to

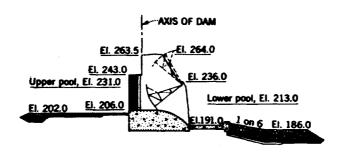


DAVID D. TERRY LOCK & DAM (NO.. 6) (ARKANSAS RIVER)

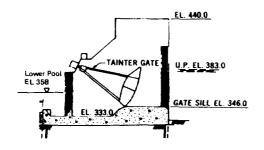

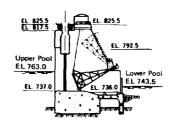


CANNELTON LOCKS & DAM (OHIO RIVER)

MAXWELL LOCK & DAM (MONONGAHELA RIVER)

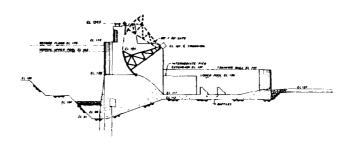


COLUMBUS LOCK & DAM (TOMBIGBEE RIVER)


Figure 5-2. Examples of crests, nonsubmergible gates

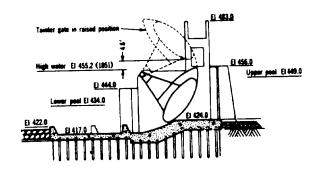

LOCK & DAM 24 (MISSISSIPPI RIVER)

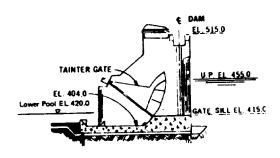

MARKLAND LOCKS & DAM (OHIO RIVER)

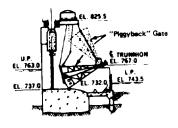

MAXWELL LOCK & DAM (MONONGAHELA RIVER)

Figure 5-3. Examples of crests, submergible gates

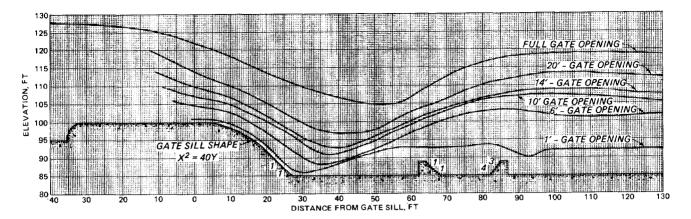


Figure 5-4. Water-surface profiles (from item 6, Appendix A)

prevent overtopping of these structures. In some cases, stilling basin designs would be based on the PMF condition, but in other cases tailwater buildup for this discharge would drown out the hydraulic jump and the design would be based on some lesser discharge condition. Reference EM 1110-2-1603 for determining spillway capacity for high-head dams.

- Spillway Capacity for Low-Head Dams. Typically, low-head navigation dams are designed to pass flood flows utilizing not only the main spillway section normally located within the river channel but also supplemental spillways located across the overbanks and even the lock access road and esplanade The width and potential carrying capacity of the overbanks will affect the main spillway capacity. However, the objective in sizing the main spillway is to minimize the headwater-tailwater differential at the time flood stages exceed the riverbanks, extend out into the overbank areas, and begin overtopping the uncontrolled spillways. The smaller this head differential, the less will be flood stage increases over preproject conditions, and the simpler will be the scour protection measures required for the overbank uncontrolled spillway sections. These head differentials can be kept low by providing a main spillway capacity roughly equivalent to the natural river capacity at the project design flood. Providing this much capacity can be difficult on smaller rivers because the navigation lock must be prominently located within the main river channel to provide safe lock approach condit ions. Consequently, low-flow dam spillways frequently extend well into the bank line opposite the lock, unless the lock is located within a navigation canal separated from the natural river. Locating the spillway in a bypass canal is another means of reducing the head differential.
- a. <u>Spillway Crest Elevation</u> Low-head, gated spillways typically have crest elevations set near the riverbed elevation to maximize capacity. Of course, riverbed elevations generally vary across the proposed spillway section. Furthermore, bed elevations in alluvial rivers vary with discharges. An understanding of these alluvial characteristics during flood conditions is required to select the optimum crest elevation. If selected too high, the spillway will be wider than necessary. If selected too low, the discharge control will shift from the spillway crest to an approach channel section when

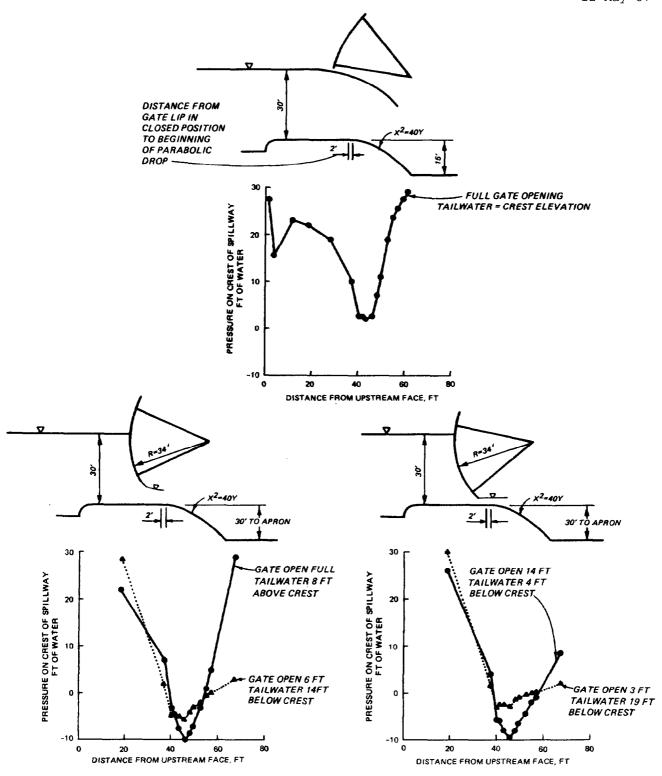


Figure 5-5. Pressures on crest for various gate openings (from item 6, Appendix A)


the gates are fully opened; the spillway gates will be higher than necessary; the spillway structural stability will be more difficult to attain; and during low-flow periods sediment will deposit on the spillway thereby hampering gate operations and increasing wear and tear of the gates. At Lock and Dam 4 on the Arkansas River, the spillway crest was set at two elevations with the deeper section next to the lock and the higher section at the opposite bank line where under preproject conditions sediments normally deposited, After over 15 years of operation, the benefits of the stepped crest are considered negligible, and a constant crest elevation would be recommended. The stilling basin design for multilevel crest elevations is complex.

- b. Overbank Crest Elevation. The spillway crest elevations of uncontrolled overbank sections are generally set as close to the natural groundline as possible to best utilize the natural flow capacity of the overbank areas. However, the overbank spillway should normally be at least three feet above the navigation pool elevation to allow for pool regulation variations, wind setup, and wave runup heights. One exception would be the crest height at a navigation bypass section that is normally just one foot above the navigation pool level.
- 5-5. <u>Pool-Tailwater Relationships.</u> The size of the spillway (both horizontal and vertical) affects pool and tailwater elevations. Three general cases can be identified.
- a. <u>Case 1.</u> The dam is of sufficient height that the spillway is not submerged by tailwater for any discharge.
- b. Case 2. The height of the dam is such that the spillway operates continuous \overline{ly} or intermittently submerged, but open-river conditions will not obtain at any time.
- c. Case 3. The height of the dam is such that the spillway operates continuously or intermittently submerged with open-river conditions sometimes.

The pool and tailwater elevation regimes (see Figure 5-6) resulting from a particular project (particularly pool elevations) can affect numerous related factors such as the extent of real estate flooded, groundwater table, levee heights, dam and lock wall heights, number and extent of relocations, navigation pass velocities, etc. Determination of spillway design in relation to these factors is complex, but in general high, narrow spillways are spillway cost-effective, while low, wide spillways reduce the costs associated with high pool elevations. Sufficient spillway sizes should be studied to optimize overall project costs. Cases 2 and 3 are the most complex due to spillway submergence.

5-6. Pool Elevations. The complexity of approach flow and interaction with locks, dams, overflow sections, nonoverflow embankments, and spillway submergence make accurate pool elevation determination difficult. This is particularly true when flow approaches spillways at an angle. The d'Aubuisson (see paragraph 5-7) or Kindsvater and Carter formulas can be used for an approximate pool elevation estimate during preliminary submerged spillway design studies (see item 32). However, hydraulic models will usually be

needed to obtain an estimate of pool and tailwater elevations suitable for detailed design. Computations should be made for the design flood with all gates fully opened and for all operating conditions to establish the maximum upstream pool and backwater profile. Pool elevations and backwater profiles associated with recurrence interval should also be computed to evaluate real estate, relocations, and other pertinent factors. Some Corps Districts have successfully used the special bridge routine in the HEC-2 backwater program to make these computations.

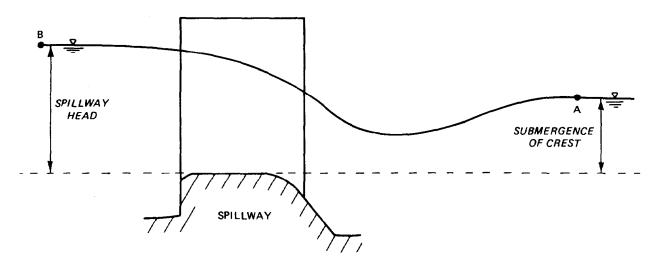


NOTE: POINTS A & B OUTSIDE AREA OF LOCAL DISTURBANCE, DRAWDOWN, ETC.

Figure 5-6. Spillway head/submergence

5-7. Discharge Rating Curves for Gated, Broad-Crested Weirs.

General. Discharge rating curves are needed for project design and Low-head navigation structures have four possible regimes of flow that result from the effects of the gates and the effects of tailwater on the amount of discharge through the structure. The four regimes are discussed in the following paragraphs and shown in Figure 5-7. Discharge coefficients for low-head navigation dams have been developed mainly for tainter gates. ence EM 1110-2-1603 for discharge rating of unsubmerged vertical gates or discharge rating of ogee crests. Sufficient data are not available to define the effects of different pier lengths and nose shapes. Results from item 6 of Appendix A comparing the ogival and semicircular shapes showed no significant difference for the highly submerged broadcrested weir. Preliminary curves are usually computed from established analytical equations. Physical and mathematical model studies of project facilities frequently include tests to verify both spillway rating curves and flood flow distributions between river channel and overbanks. Model and prototype data from other projects with similar spillway designs are often valuable in refining rating curves. Commonly used equations for preliminary rating curve computations under various spillway

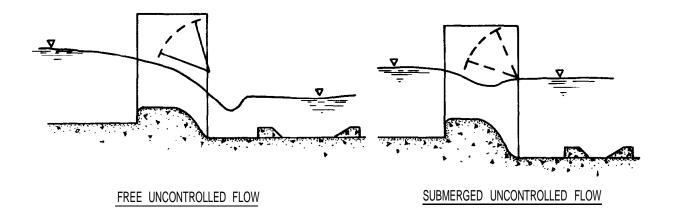


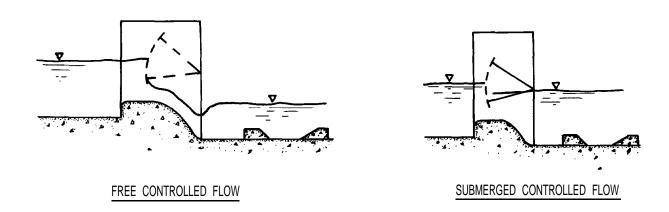


Figure 5-7. Four flow regimes

conditions are presented. A computer program was developed in the Pittsburgh District for discharge rating of navigation dams and is presented in item 22 of Appendix A.

- b. Determining Flow Regime. Figure 5-8 gives guidance to determine the flow regime given headwater H, tailwater h, and gate opening G_{\circ} (definition sketch in Figure 5-1).
- c. Free Uncontrolled Flow. For this flow regime the gates are fully opened and the upper pool is unaffected by the tailwater. The standard weir equation ${\sf C}$

$$Q = C_{F}LH^{3/2}$$
 (5-2)

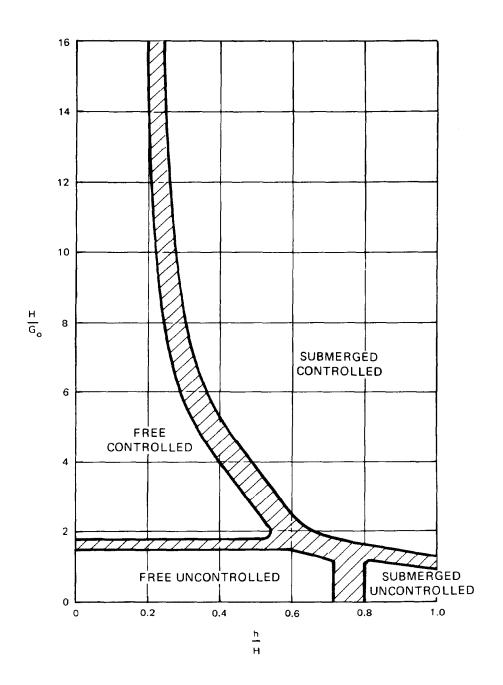

NOTE: CROSS-HATCHED AREAS REPRESENT TRANSITION ZONES FULLY OPENED GATE EQUIVALENT TO $H/G_{\text{\scriptsize 0}}=0$

Figure 5-8. Flow regime based on headwater, tailwater, and gate opening

EM 1110-2-1605 12 May 87

is applicable and free uncontrolled flow discharge coefficients versus (Head/Breadth of Crest) from item 22 of Appendix A are shown in Figure 5-9. This curve should be used with caution above $\rm\,H/B_{c}$ = 1.5 . No correction for pier effects is recommended with these coefficients. Crest length should be reduced for abutment effects by the equation

$$L_{effective} = L_{actual} - 2KH$$
 (5-3)

Since the discharge coefficients presented in Figure 5-9 already account for pier effects, the abutment contraction coefficient K should be about one-half of the value selected from HDC Chart 111.

- d. <u>Submerged Uncontrolled Flow.</u> For this flow regime, the gates are fully opened and the discharge is reduced by tailwater conditions. Two procedures are available for determining discharges for uncontrolled spillways under submerged conditions.
- $\mbox{\ensuremath{(1)}}$ Discharge over a submerged weir can be expressed by the equation :

$$Q = \frac{C}{S} LH^{3/2}$$
 (5-4)

 $C_{\rm s}$ from model data is shown to vary with h/H. Results from item 22 of Appendix A show that discharge coefficients for this flow regime are not significantly affected by stilling basin apron elevation. Figure 5-10 presents recommended submerged uncontrolled flow discharge coefficients as a function of h/H. These coefficients were developed from a large number of model investigations.

(2) Preliminary rating curves for low-head dams under submerged uncontrolled flow conditions can be computed by the d' Aubuisson equation

Q = KLh
$$\sqrt{[2g (H - h) + V^2]}$$
 (5-5)

where

K = spillway coefficient of contraction

L = crest length = number of bays times the bay width, ft

V = spillway approach velocity, ft/sec

H, h = see Figure 5-1

Suggested K values vary with spillway bay width as follows:

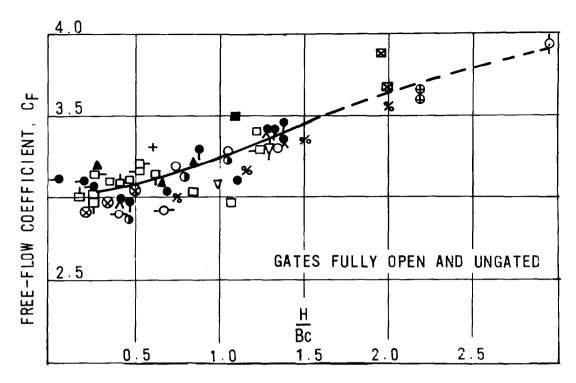


Figure 5-9. Free flow discharge coefficient for uncontrolled flow over a broad-crested weir

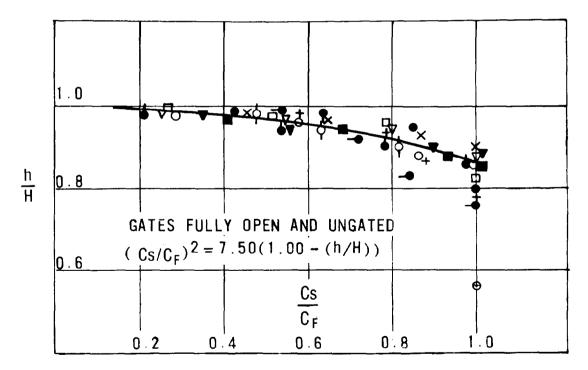


Figure 5-10. Submerged uncontrolled discharge coefficient for broad-crested weir

Bay	Width,	feet	K	
	40		0.8	0
	50		0.8	5
	60		0.9	0
	110		0.9	5

These coefficients were developed from experience with prototype structures. Several different methods exist for predicting discharge for submerged uncontrolled flow. These include the methods presented above and HDC 111-4, items 6 and 32 in Appendix A. These methods do not give similar results.

- e. <u>Free Controlled Flow.</u> For this flow regime, the gates are partially open and the upper pool is unaffected by the tailwater. Discharge is controlled by the gate opening and two approaches are available for determining discharge.
- (1) Results from item 22 of Appendix A shown in Figure 5-11 present the free controlled flow discharge coefficient as a function of gate opening, gate radius (R), trunnion height above crest (a), and gross head on the gate. Figure 5-11 is applicable to heads and gate openings less than 30 and 14 ft, respectively. The applicable equation is

$$Q = C_g LG_0 \sqrt{2gH}$$
 (5-6)

- (2) For conditions outside the range covered in (1), a comprehensive treatment of the effects of gate location and geometry on discharge for free controlled flow is presented in HDC 320-4 to 320-7. Caution should be used because the equations and symbols are not the same in the two methods.
- f. <u>Submerged Controlled Flow.</u> For this flow regime, the gates are partially open and the upper pool is controlled by both the submergence effect of the tailwater and the gate opening. The applicable equation is


$$Q = C_{gs}Lh \sqrt{2g\Delta H}$$
 (5-7)

The submerged controlled discharge coefficient $C_{\rm gs}$ as a function of h/G for various apron elevations is given in Figure 5-12. See item 22 in Appendix A for a similar method for submerged controlled flow that has been used in the computer program referred in paragraph 5-7 (a).

g. Rating Curve Accuracy.


(1) Discharge Coefficients. Spillway rating curves as computed by the above equations require verification for final designs. Significant errors are possible because of the unique approach conditions at proposed projects. Although data comparing model-prototype rating curves are rare, such information derived from similar existing projects would be valuable for

(from item 22, Appendix A)

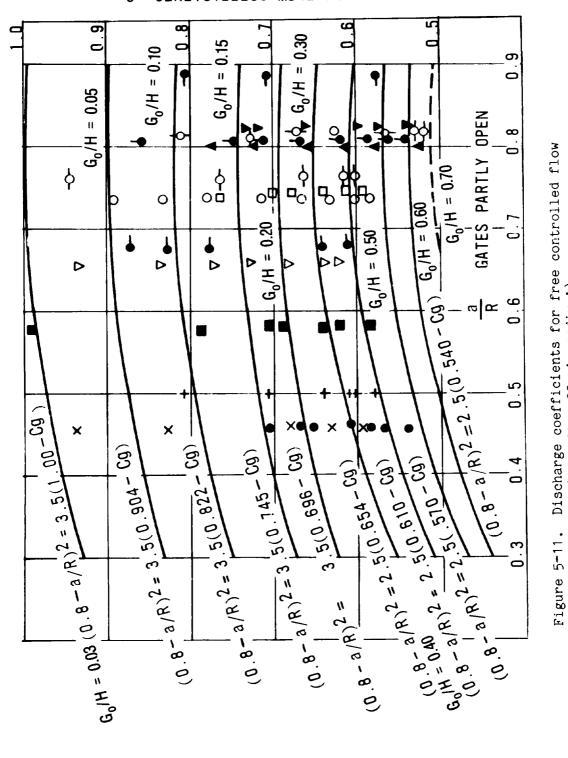

GATED FREE FLOW COEFFICIENTS, Co

5-15

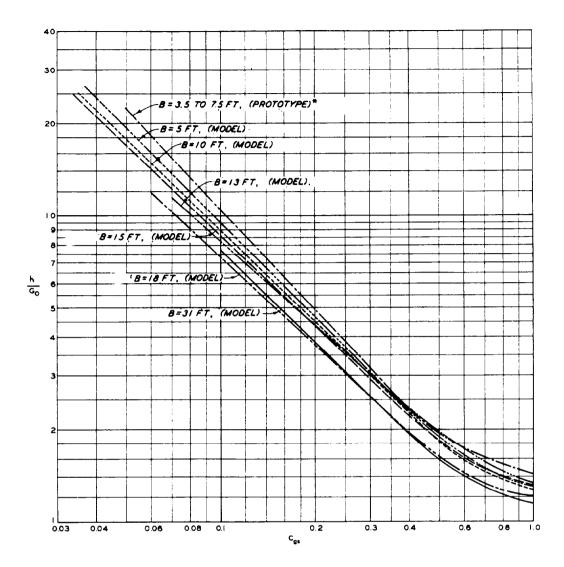



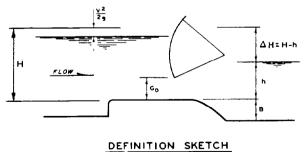


Figure 5-12. Discharge coefficients for submerged controlled flow $(\mbox{HDC } 320-8)$

rating curve verification. In finalizing rating curves for major navigation systems, special prototype spillway measurements on similar existing projects should be considered.

(2) Tailwater Inaccuracies. Tailwater rating curves are extremely important to the design engineer. The selected tailwater curve will be used in design of spillway capacity, stilling basins, wall heights, foundation drainage, erosion protection, navigation channel depths, and many other critical elements that make up a total project design. It is imperative that the hydraulic engineer have an accurate estimate of what the tailwater curve will be before, during, and after project construction; and throughout the life of the project. The hydraulic engineer must evaluate the likelihood that the tailwater rating will change over this time period and evaluate the extremes to which this change may take place. Furthermore, this information must be passed on to other engineers designing project features so that project integrity will remain as the rating curve shifts. The designer is cautioned against spending too much effort in refining inconsequential parameters, such as spillway pier shape coefficients, without paying sufficient attention to potential shifts in tailwater rating curves which can, of course, have drastic influences on submerged spillway capacity. An example of a very large shift in tailwater rating is shown in Figure 5-13. This figure compares the tailwater ratings for the natural conditions before construction of the Aliceville Lock and Dam on the Tennessee-Tombigbee Waterway with project conditions after construction was complete. The drastic shift of the rating is largely due to excavation of the downstream navigation channel which caused not only an increase in channel flow capacity, but also a significant decrease in channel roughness. The variation in a tailwater rating curve may shift toward more flow capacity, less flow capacity, or oscillate from one to the other and back again. The shift in rating may be abrupt, gradual, or sporadic. It may be caused by sediment erosion or aggradation, excavation or deposition of channel bed or bank material, variations in hydrologic events, loops in rating curves as flow transitions from the rising to falling flood stages, inaccurate estimates of channel roughness, or by man-induced events. The hydraulic engineer should ensure that project features are designed for the proper conditions. For example, for projects with loop rating curves, rising stages should be used for design of stilling basins and erosion protection and falling stages used for setting wall heights. Use of an average tailwater rating curve in this case may yield inadequate design for both wall height and the high-velocity flow areas. The designer might also perform a sensitivity study of various channel "n" values to ensure that an incorrect assumption does not lead to an inadequate design. It will be the primary responsibility of the hydraulic design engineer to recognize the potential for shifts in tailwater ratings, evaluate the magnitude and consequences of a shift, and communicate this knowledge to others on the design team.

5-8. Overflow Embankments.

a. <u>General.</u> Required length of overflow embankments is often determined by selecting the combination of number of gates, length of overflow section, flowage easement, and levee raising that has the least total cost.

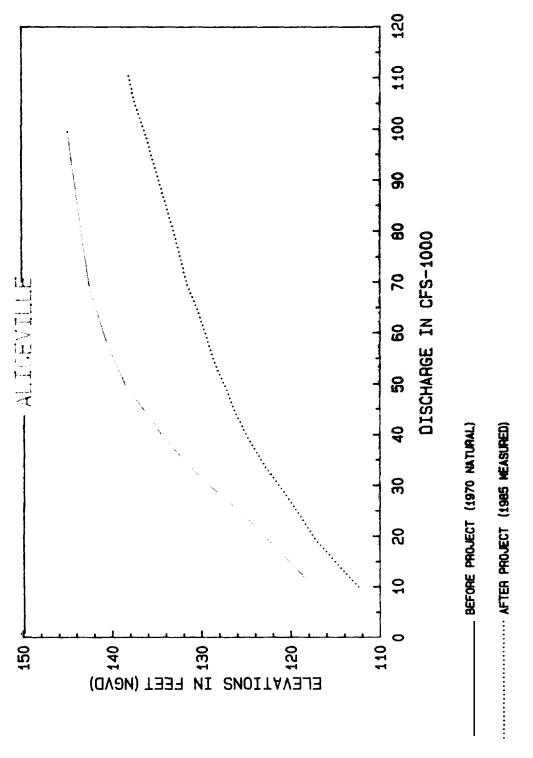



Figure 5-13. Tailwater rating curves, Aliceville Lock and Dam, Tennessee-Tombigbee Waterway

An example of an optimization study accomplishing this is given in Appendix D. When the overflow section operates under only highly submerged conditions the shape of the crest is of little significance on capacity. Overflow sections having significant head differentials will require properly shaped crests (normally ogee), energy dissipation structures, and downstream channel protection. The relatively low embankment sections used on the Arkansas River were designed for submerged conditions with head differentials of up to three feet. These riprap protected embankments are either access or nonaccess embankments having trapezoidal cross sections with a 1V-on-3H upstream face and a 1V-on-4H downstream face. The access embankments have a paved roadway on the crown of the embankment. Detailed discharge and riprap stability guidance is given in item 5 of Appendix A.


b. <u>Discharge over Uncontrolled Sections</u>. Figure 5-14 shows the submerged flow discharge coefficient for access and nonaccess type embankments. The second type of uncontrolled overflow section is the concrete wall having considerable height and designed to operate under submerged conditions. Discharge coefficients for a rectangular cross section and free flow conditions are shown in Figure 5-15; the reduction in free flow discharge due to submergence is also shown in Figure 5-15.

5-9. <u>Stilling Basin Design</u>.

- a. <u>General.</u> The purpose of the stilling basin is to reduce the kinetic energy of the flow entering the downstream exit channel. The stilling basin in conjunction with the downstream riprap ensures that local scour downstream of the structure will not undermine or otherwise threaten the integrity of the structure. Model tests can be used to find the optimum combination of stilling basin and downstream channel protection.
- b. Influence of Operating Schedules. Operating schedules, both normal and emergency, are vital considerations in stilling basin design. Normal operating schedules should result in approximately equal distribution of flow across the outlet channel. Thus changes in the position of individual gates should be made in small increments with no two gate openings varying more than one foot. However, unusual or emergency operation must be considered. Unusual operation would include passage of floating debris (ice, logs, trash, etc.) through the gated structure during periods of minimum flow in the river. Such debris usually will begin to be drawn under a gate that is about onethird opened (see items 15 and 18, Appendix A). Emergency operation would include design for one gate fully opened during periods of minimum flow which generally means minimum tailwater. Thus these operation requirements dictate a stilling basin that will adequately dissipate the excess kinetic energy at a low tailwater elevation.
- c. Requirements for New Project Design. The following three conditions are used to optimize stilling basin length and downstream scour protection thickness, size, and length. Structure foundation should be considered in determining the design condition. Structures founded on rock may have less restrictive energy dissipation and downstream protection requirements.

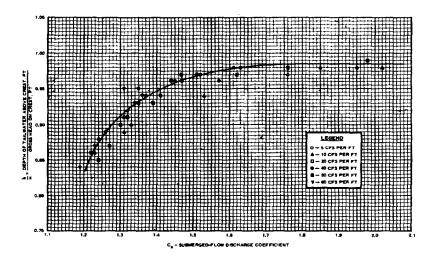



Access type embankments

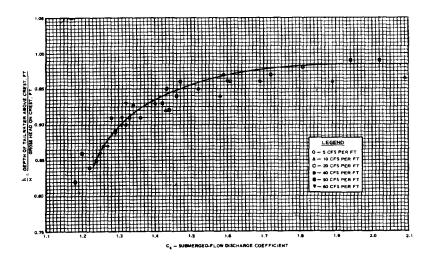

Nonaccess type embankments

Figure 5-14. Discharge coefficients for embankments under submerged flow (from item 5, Appendix A), Q = C_s Lh $\sqrt{2g\Delta H}$

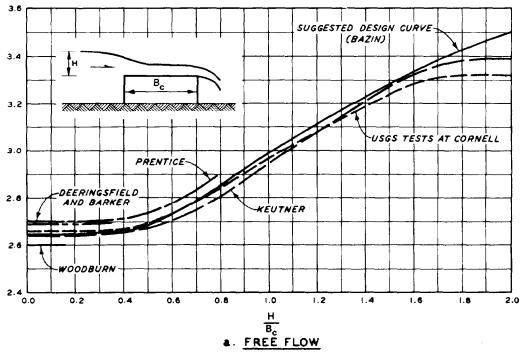

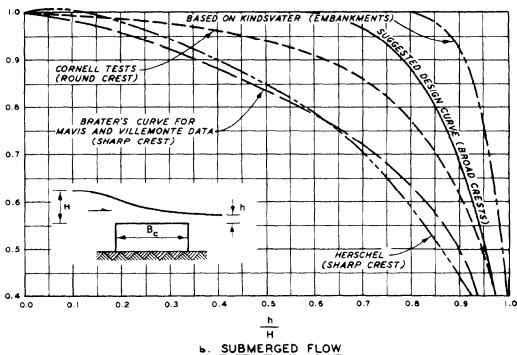

NOTE : C_f = FREE-FLOW COEFFICIENT C_s = SUBMERGED-FLOW COEFFICIENT NEGLIGIBLE VELOCITY OF APPROACH

Figure 5-15. Low-monolith diversion, discharge coefficients (from HDC 711)

EM 1110-2-1605 12 May 87

- (1) Uniform discharge through all spillway gates for a range of headwaters and tailwaters expected during project life.
- (2) Single gate fully opened with normal headwater and minimum tailwater. This condition would assume gate misoperation or marine accident. Minor damage to the downstream scour protection may occur as long as the integrity of the structure is not jeopardized. Single gate fully opened with above normal pool (perhaps the 50- to 100-year pool) should also be given consideration. This condition would simulate loose barges that could block several gates causing above normal pools as occurred at Arkansas River Lock and Dam No. 2 during December 1982.
- (3) Single gate opened sufficiently wide to pass floating ice or drift at normal headwater and minimum tailwater. During preliminary design, a gate half opened can be assured to approximate ice- or drift-passing condition. Final design usually requires model studies to determine the proper gate opening. No damage should occur for this condition. For most low-head navigation structures, conditions (2) and (3) result in free flow over the crest. The stilling basin design guidance presented in this chapter is for free flow, Stilling basins designed for submerged flow normally require a model study.
- d. <u>Hydraulics of Stilling Basins</u>. Computations for d_1 and V_1 can be based on the assumption that there is no energy loss between the upper pool and the toe of the jump. The energy equation can be used to determine the entering depth and velocity into the stilling basin according to

Upper Pool + Velocity Stilling Basin +
$$\frac{v_1^2}{2g}$$
 + d_1 (5-8)

Knowing the upper pool elevation, velocity head upstream (if significant), and discharge, V_1 and d_1 can be solved by trial and error for an <u>assumed</u> stilling basin floor elevation. Next the Froude number of the flow entering the stilling basin is computed according to

$$F_1 = \frac{V_1}{\sqrt{gd_1}} \tag{5-9}$$

Then the momentum equation is used to determine the ratio between the depths before and after the hydraulic jump according to

$$\frac{d_2}{d_1} = 0.5 \left(\sqrt{1 + 8F_1^2} - 1 \right)$$
 (5-10)

(This form of the momentum equation ignores the forces on baffle blocks in the

analysis. A comprehensive treatment of these forces in the momentum equation is given in item 2 of Appendix A.) At this point, the assumed stilling basin elevation is checked against the available tailwater according to

Tailwater for Assumed Stilling Basin
Given Discharge - Floor Elevation = Factor
$$(d_2)$$
 (5-11)

A new stilling basin floor elevation is assumed until Equation 5-11 is satisfied. Early stilling basin design guidance used a factor equal to 1.0. Recent guidance has allowed higher stilling basin floor elevations by setting this factor equal to 0.85 when used with baffle blocks and an end sill. The higher stilling basin floor elevation often improves performance at intermediate discharges and results in lower cost. Use of a factor less than 1.0 in Equation 5-11 can only be used in conjunction with Equation 5-10, the simplified momentum approach.

e. Recommendations from Results of Previous Model Tests.

- (1) General. Model tests have been conducted at WES, Vicksburg, Miss. (items 10, 13-16 of Appendix A), during which stilling basin designs were developed for one gate half or fully opened. Recommendations from results of these tests are summarized in Table 5-1 and in the paragraphs that follow. The energy dissipators for one gate half or fully opened are not hydraulic-jump type stilling basins. These basins often have entering Froude numbers less than 4.0 which means they are inefficient and unstable—the flow will oscillate between the bottom and water surface resulting in irregular wave formation propagating downstream. Baffles and end sills help to stabilize low Froude number basins. Primary dissipation results from impact of the jet against the baffles, which also assists lateral spreading of the jet, with tailwater as a supporting element. In a hydraulic-jump type stilling basin, tailwater is a primary force and baffles are supporting elements; lateral spreading of the jet, outside of the confining walls, usually is not a consideration.
- (2) Basin Elevation. In a baffle-assisted hydraulic-jump type stilling basin, the apron must be placed at an elevation that allows tailwater to provide a depth on the apron of at least $0.85d_2$ (factor = 0.85). In the stilling basin considered herein, this has not proved to be a rigid requirement. However, for initial design of a specific project and until it has been established in model tests that conditions at that project will permit an apron at a higher elevation, it is suggested that the apron be placed at an elevation that will provide a tailwater depth of at least $0.85d_2$ for both one gate half or fully opened.
- (3) Basin Length. Items 10 and 13-16 of Appendix A suggest a required length, L_2 from toe of jump to beginning of 1V-on-5H upslope of

$$L_2 = 2d_1F_1^{1.5}$$
 (5-12)

Hydraulic Design Data from Physical Model Studies for Low-Head Navigation Dam Spillways
Based on Single-Gate Opening (Fully and/or Half) Criteria

Project Name	Item No.	Basin No.	Designed for What Gate Opening	Unit Dis- charge cfs/ft	Bay Width ft	Entering Froude No. F'*	d ₂	42 d	1-1-6 -2-1-5	Baffle Height d2	1 ₂ ₂	End Sill Height d ₂	d ₅₀ †
L&D 26	15	16	Full	775	110	2.5	44.5	0.81	1.08	0.27	2.6	0.25	3.8
Aliceville	13	9	Full	350	09	3.5	30.5	0.72	1.31	0.26	5.6	0.16	2.2
Columbus	16	5	Full	350	09	3.7	31.0	11.0	1.29	0.26	5.6	0.16	2.0
Red River No. 1	177	16	Full	48 4	50	3.9	39.6	0.81	1.26	0.25	2.8	0.43	1.7
Red River No. 2	10	13	Full	683	09	2.4	39.5	0.71	1.06	0.23	2.5	0.18	2.5
Red River No. 3	*	2	Full	817	09	2.75	47.9	0.79	1.15	0.21	3.0	0.15	2.6
L&D 26	15	30	Ice and Debris	382	110	3.7	32.8	0.91	1.58	0.24	3.0	0.15	2.6
Columbus	91,	≉	Half	242	09	n.t	26.2	0.84	1.53	0.31	3.1	0.19	1.7
Red River No. 1	7.	6	Half	390	50	3.6	33.2	0.72	1.51	0.33	3.0	60.0	
Red River No. 1	1 1	17	Half	370	50	3.7	32.3	ħ2.0	1.55	0.32	3.1	60*0	1.5
Red River No. 1	14	7	Half	370	50	1.4	33.7	0.71	1.48	0.34	2.7	0.27	
						•							

* Assumes no energy loss between upper pool and stilling basin. ** Unpublished draft report. † $\rm d_{50}$ size immediately downstream from end sill. Definition sketch shown in Figure 5-1.

5-24

(4) Baffles. The position and height of the first row of baffles have a major influence on stilling action. Baffle height and position recommended for the basins developed in items 10 and 13-16 of Appendix A are as follows:


	Height	Distance to First Row
Gate Opening	h_{b}	$\underline{\hspace{1cm}} \mathbf{L}_1$
Full	0.25d ₂	1.3d ₂
Half	$0.3d_2$	1.5d ₂

These basins designed for a single gate half or fully opened require higher baffle blocks than hydraulic-jump type basins. A second row of baffles is not required for maintaining the jump within the basin but is recommended to reduce attack on the downstream channel protection. These baffles should be the same height as those in the first row, placed with their upstream faces about two baffle heights downstream from the upstream faces of the first row and staggered with respect to the baffles in the first row. Reference item 2 of Appendix A for determining forces on baffle blocks. In cases where foundation requirements dictate a deep basin $(>d_2)$, baffle blocks may not be required.

- (5) Gate Pier Extensions. Gate pier extensions are required to extend into the basin to a position five feet upstream of the baffles to prevent return flow from inoperative bays. The pier extension can be extended farther downstream if required for stability. These extensions are required to ensure adequate stilling basin performance for the single gate half- and fully opened criteria given in paragraphs 5-9c(2) and 5-9c(3), respectively. The pier extensions should be at least one foot higher than the tailwater used for the single gate half- or fully opened criteria. Pier extension width can be less than the main spillway piers.
- (6) End Sill. An end sill slope of 1V on 5H was effective in spreading the flow for single gate operation. The higher the end sill, the more effective it will be in spreading the jet during single gate operation, but there are limitations. The higher end sill results in shallower depths in the exit channel and possibly higher velocities over the riprap. Of course, the top of the end sill should not be appreciably above the exit channel. Also, the end sill should not be so high that it causes flow to drop through critical depth and form a secondary jump downstream. To prevent this, the Froude number $F = V/\sqrt{gd}$ at the top of the end sill, calculated as described below, should not exceed 0.86 for single gate guidance given in paragraph 5-In this calculation, V is difficult to determine because of spreading of the flow for single gate operation. A reasonable estimate for V is 80 percent of the velocity over the end sill without spreading based on bay width, discharge, and depth over end sill. The terms d and g represent depth of tailwater over the end sill and the acceleration due to gravity, respectively. Experiments in a rectangular channel indicated that tranquil flow becomes unstable when F exceeds 0.86; thus this limiting value. Excessive spreading will cause attack of boundaries in outside bays. Based on items 10, and 13-16 of Appendix A, the end-sill height varied considerably for basins designed for either fully or half-opened gate criteria. A value of

0.15 to $0.20d_2$ is recommended for basins designed for either a fully or half-opened gate.

(7) Training Walls. The elevation of the top of the training walls is normally selected to prevent overtopping at all but the highest discharges. This is not a strict requirement for low-head navigation dams and training wall tops have been placed as low as two feet above the downstream normal pool elevation. This reduction in height should be model tested. Training walls are normally extended at a constant top elevation to the end of the stilling basin as shown in Figure 5-16a. This, too, is not a strict requirement. The Red River design is shown in Figure 5-16b. Adjacent project features and topography have a significant impact on training wall design. Reference EM 1110-2-1603 for determining hydraulic forces (static and dynamic) on stilling basin training walls.

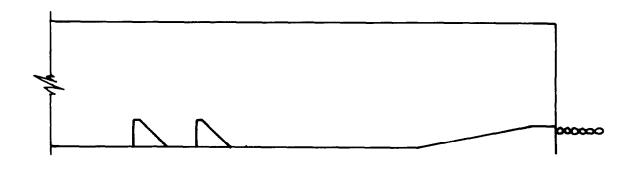

a. CONVENTIONAL TRAINING WALL

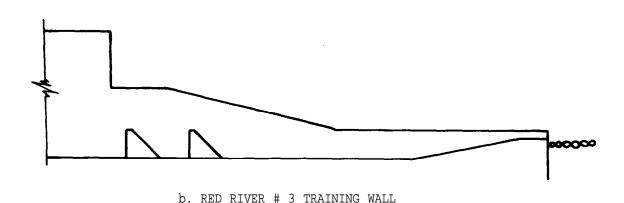


Figure 5-16. Training walls

(8) Abrasion. Abrasion of concrete can be caused by the presence of gravel or other hard particles. Rock, gravel, scrap metal, and other hard material may find their way into the energy dissipator by various means. Rock

may be carried into a stilling basin over the top of low monoliths during construction, by rollers or eddies bringing debris in from downstream, or by cobbles moving as bed load. Protection stone in the vicinity of the end sill should not contain stone sizes that can be transported by underrollers into the stilling basin. In some cases, the contractor may fail to clean out all hard, loose material after construction. During operation, rocks may be thrown in from the sidewall by the public, or fishermen using rocks for anchors may leave them behind. The elimination of such material may require specification of construction practices or proper restriction of the public during operation. In cases where it is believed that rock and gravel are being transported into the basin by rollers, all gates should discharge an equal amount of water.

(9) Cavitation is the successive formation and collapse of vapor pockets in low-pressure areas associated with high-velocity flow. Cavitation damage can occur on the sides of baffle blocks, on the floor of a stilling basin just downstream from baffle blocks, and at construction joints near the upstream end of the stilling basin. Any surface discontinuity of the boundary into or away from high-velocity flow can cause cavitation. Relative movement of two concrete monoliths or slabs with a lateral construction joint so that the downstream slab comes to rest higher than the upstream slab produces a situation where cavitation may result. In any case where high-velocity flow tends to separate from the solid boundary, cavitation may be expected to exist. Cavitation is not normally a problem at low-head navigation dams because of the relatively low velocities. There is reason to believe that both abrasion and cavitation are responsible for damage at some structures. If a sizable depression in the concrete surface is eroded by abrasion, cavitation may then form and augment the damage. Likewise abrasion can mask cavitation where both are occurring. In general, concrete damaged by cavitation has a ragged angular appearance as though material had been broken out of the mass. In contrast, damage caused by abrasion has a smoother or rounded appearance, such as would be caused by grinding. Reference EM 1110-2-1602 for additional guidance relative to cavitation.

5-10. Approach Area.

- a. <u>Configuration.</u> The approach to the spillway should be greater than three feet below the crest of the spillway. An approach depth of five feet is recommended because most discharge calibration data were taken with this depth. Approaches with depths less than three feet can result in greater tendency for movement of the riprap in front of the structure for a single gate fully opened. Approaches having a deep tranch in front of the structure can result in instabilities of the flow over the crest and may simply fill with sediment. The approach should be horizontal for a minimum of 50 feet and then sloped to the streambed at a rate not to exceed 1V on 20H.
- b. <u>Upstream Channel Protection</u>. To prevent scour upstream of the structure, protection is required, particularly for single gate operation. An estimate of the required riprap size upstream of a navigation dam can be obtained by determining the approach velocity by taking the unit discharge (discharge/width of bay) and dividing by the depth (difference in elevation

between the upper pool and the approach channel to the spillway). This provides an average velocity and depth that can be used in the following relation to determine the stone size required.

$$\frac{D_{g}}{\text{depth}} = C \left[\left(\frac{Y_{W}}{Y_{S} - Y_{W}} \right)^{1/2} \frac{V}{V_{g \text{ depth}}} \right]^{2.5}$$
(5-13)

The following coefficients are recommended for riprap design in low turbulence open channel flow:

D. 1	Safe Design, C	Gradation	<u>Thickness</u>
D ₅₀ (Min)	0.44	Table 5-2	1.0 D ₁₀₀ (MAX)
D ₅₀ (Min)	0.30	Table 5-3	1.5 D ₁₀₀ (MAX)
D ₃₀ (Min)	0.375	$d_{85}/d_{15} = 1.35-4.6$	1.0 D ₁₀₀ (MAX)

The safe design C is equal to 1.25 times the C determined for incipient failure. See item 11 for additional information. Placement underwater requires an increase in thickness of 50 percent. Single gate operation will generally be the most severe with respect to design of upstream riprap but hinged pool operation (as described in paragraph 7-3(c)) should be evaluated. Concrete aprons have been used in place of riprap when riprap size becomes excessive. The riprap or concrete apron should be extended upstream a minimum distance equal to the head on the crest. If protection must be provided for the effects of sunken barges in front of the structure, the concrete apron should be used.

5-11. Exit Area.

a. Configuration. For the condition of only a single gate discharging, configuration of the exit area has a major influence on stilling action. Abrupt side contractions and areas of unequal elevation across the channel cause side eddies to be intensified and thus hamper jet spreading. There is little agreement on the effectiveness of a preformed scour hole. Many projects have been designed with a deepened area downstream to lessen attack on the riprap. A relatively small amount of expansion, preferably both vertically and horizontally, will reduce the severity of attack of the channel boundary. However, there is a tendency for this deepened exit channel to exhibit stronger side eddies which tends to reduce spreading for single gate operation and can lead to a decrease in riprap stability. Final riprap configurations downstream from spillways should be model-tested and adjusted as necessary to ensure the adequacy of the protection. Based on the above field and model experiences the following guides for preliminary layout are suggested. Begin the riprap with the top of the blanket 1 to 2 feet below the top of the basin end sill, If possible, extend the riprap section horizontally. Where the streambed is higher than the end sill, slope the riprap upward on a 1V-on-20H slope. Where locks or other structures do not abut the

spillway the riprap section is extended up the bank-line slope. The toe of this slope should be set back 5 to 10 feet from the face of the spillway training wall. These guides are illustrated in Plates 5-4 to 5-6 (example at end of this chapter).

b. <u>Downstream Channel Protection.</u> The size and extent of the riprap required in the exit area depend upon the effectiveness of the stilling basin, tailwater depth in the exit, and configuration of the exit area. The size of riprap required is almost always governed by either the fully or half-opened gate criteria or diversion conditions. As flow leaves the single gate bay, spreading occurs and the average velocity decreases in the downstream direction. At the end sill the average velocity over the end sill can be 75 to 90 percent of the velocity without spreading. Results from items 10 and 13-16 of Appendix A show a wide variation in required riprap size. Use of 80 percent of the velocity over the riprap without spreading in the relation

$$V = 1.12 \left[2g \left(\frac{Y_s - Y_w}{Y_w} \right) \right]^{1/2} D_{50}(MIN)^{1/2}$$
 (5-14)

provides riprap size for use immediately downstream of the end sill. This equation is restricted to basins designed using the guidance presented in this chapter. This equation is the same form as the Isbash relation given in HDC- 712-1. A comparison of the results given in Table 5-1 and Equation 5-14 is given in the following:

Project Name	Basin No.	Velocity over Riprap Without Spreading, ft/sec	D ₅₀ Model, feet	D ₅₀ Computed,
L&D 26	16	29.9	3.8	4.3
Aliceville	6	19.4	2.2	1.8
Columbus	5	17.6	2.0	1.5
RR 1	16	30.2	1.5	4.4
RR 2	13	31.1	2.5	4.7
RR 3	2	25.8	2.6	3.2
L&D 26	30	14.7	2.6	1.0
Columbus	4	13.4	1.7	0.9
RR 1	17	16.8	1.5	1.4
RR 2	7	23.4	1.1	2.7

The large differences between model and computed results are largely due to difference in stilling basin performance, particularly the effects of a wide variation in end-sill height. These values should be used in preliminary design and verified in a physical model. Riprap gradations are given in Table 5-3 for placement in the dry. Thickness for placement in the dry should be $1.5D_{100}(\text{MAX})$ or $2.0D_{50}(\text{MAX})$, whichever is greater. Thickness for placement underwater should be increased 50 percent. The top of the riprap should be placed one to two feet below the top of the end sill. Total length of riprap protection on the channel invert downstream of the end sill ranged from $4d_2$ to

 $27d_2$ in items 10 and 13-16 of Appendix A. A minimum length of $10d_2$ downstream of the end sill is recommended for fully or half-opened gate design. The change in riprap size in the downstream direction should be as follows:

<u>Distance</u>	Riprap Size
$3d_2$	x = thickness immediately downstream of end sill
Next 3d ₂	0.8x
Next 2d ₂	0.6x
Next 2d ₂	0.4x

TABLE 5-2

Gradations for Riprap Placement in the Dry, Low Turbulence Zones

Percent	Limits	s of	Limit	s of	Limit	s of	Limi	ts of
Lighter	Stone We	eight,	Stone W	eight,	Stone V	Weight,	Stone	Weight,
by Weight	pound	_	poun	_	pour	_		nds
			pour	<u> </u>		10.0		
		Speci	fic Weight	= 155 1	.b/cu ft			
Thickness =	12 Inc	ches	15 I	nches	18 Iı	nches	21 I	inches
100	81	32	159	63	274	110	435	174
50	24	16	47	32	81	55	129	87
15	12	5	23	10	41	17	64	27
Thickness =	24 Inc	ches	27 In	ches	30 I1	nches	33 In	ches
100	649	260	924	370	1,268	507	1,688	675
50	192	130	274	185	376	254	500	338
15	96	41	137	58	188	79	250	105
Thickness =	36 Inc	ches	42 In	ches	48 Ir	nches	54 In	ches
100	2,191	877	3,480	1,392	5,194	2,078	7,396	2,958
50	649	438	1,031	696	1,539	1,039	2,191	1,479
15	325	137	516	217	769	325	1,096	462
							,	

TABLE 5-2 (Concluded)

Percent Lighter by Weight	Limits Stone W	eight,	Stone	its of Weight, unds		ts of Weight,	Stone	ts of Weight,
		<u>Speci</u>	fic Weig	ht = 165	lb/cu ft			
Thickness =	12 In		15	Inches	18 I	nches	21 In	nches
100	86	35	169	67	292	117	463	185
50	26	17	50	34	86	58	137	93
15	13	5	25	11	43	18	69	29
Thickness =	24 In	ches	27	Inches	30 I	nches	33 In	ches
100	691	276	984	394	1,350	540	1,797	719
50	205	138	292	197	400	270	532	359
15	102	43	146	62	200	84	266	112
Thickness =	36 Inc	ches	42	Inches	48 Iı	nches	54 In	ches
100	2,331	933	3,704	1,482	5,529	2,212	7,873	3,149
50	691	467	1,098	741	1,638	1,106	2,335	1,575
15	346	146	549	232	819	346	1,168	492
		Specif	ic Weigh	nt = 175 l	.b/cu ft			
Thickness =	12 Inc	chec	15	Inches	18 Ir	nchec	21 In	chec
100	92	37	179	72	309	124	491	196
50	27	18	53	36	92	62	146	98
15	14	5	27	11	46	19	73	31
13	11	J	21	11	10	19	7.5	31
Thickness =	24 Inc	ches	27	Inches	30 Ir	nches	33 In	ches
100	733	293	1,044	417	1,432	573	1,906	762
50	217	147	309	209	424	286	565	381
15	109	46	155	65	212	89	282	119
Thickness =	36 Inc	ches	42	Inches	48 Ir	nches	54 In	ches
100	2,474	990	3,929	1,571	5,864	2,346	8,350	3,340
50	733	495	1,164	786	1,738	1,173	2,474	1,670
15	367	155	582	246	869	367	1,237	522

TABLE 5-3

Gradations for Riprap Placement in the Dry, High Turbulence Zones


Percent	Limits of	Limits of	Limits of	Limits of
Lighter	Stone Weight,	Stone Weight,	Stone Weight,	Stone Weight,
by Weight	pounds	pounds	pounds	pounds
	Specif	ic Weight = 155	lb/cu ft	
Thickness =	12 Inches	15 Inches	18 Inches	21 Inches
100	24 10	47 19	81 32	129 52
50	7 5	14 9	24 16	38 26
15	4 2	7 3	12 5	19 8
Thickness =	24 Inches	27 Inches	30 Inches	33 Inches
100	192 77	274 110	376 150	500 200
50	57 38	81 55	111 75	148 100
15	28 12	41 17	56 23	74 31
Thickness =	36 Inches	42 Inches	48 Inches	54 Inches
100	649 260	1,031 412	1,539 616	2,191 877
50	192 130	305 206	456 308	649 438
15	96 41	153 64	228 96	325 137
Thickness =	60 Inches	66 Inches	72 Inches	78 Inches
100	3,006 1,202	4,001 1,600	5,194 2,078	6,604 2,642
50	890 601	1,185 800	1,539 1,039	1,957 1,321
15	445 188	593 250	770 325	978 413
Thickness =	84 Inches	90 Inches	96 Inches	102 Inches
100	8,248 3,299	10,145 4,058	12,312 4,925	14,768 5,907
50	2,444 1,650	3,006 2,029	3,648 2,462	4,376 2,954
15	1,222 516	1,503 634	1,824 770	2,188 923
	Specif	ic Weight = 165]	lb/cu ft	
Thickness =	12 Inches	15 Inches	18 Inches	21 Inches
100	26 10	50 20	86 35	137 55
50	11 5	21 10	36 17	58 27
15	5 2	11 3	18 5	29 9
Thickness =	24 Inches	27 Inches	30 Inches	33 Inches
100	205 82	292 117	400 160	532 213
50	86 41	123 58	169 80	225 106
15	43 13	62 18	84 25	112 33

(Continued)

TABLE 5-3 (Concluded)

Percent Lighter by Weight	Limits of Stone Weight, pounds	Limits of Stone Weight, pounds	Limits of Stone Weight, pounds	Limits of Stone Weight, pounds			
	Specific Wei	ght = 165 lb/cu	ft (continued)				
Thickness = 100 50 15	36 Inches 691 276 292 138 146 43	42 Inches 1,098 439 463 220 232 69	48 Inches 1,638 655 691 328 346 102	54 Inches 2,333 933 984 467 492 146			
Thickness = 100 50 15	60 Inches 3,200 1,280 948 640 474 200	66 Inches 4,259 1,704 1,262 852 631 266	72 Inches 5,529 2,212 1,638 1,106 819 346	78 Inches 7,030 2,812 2,083 1,406 1,041 439			
Thickness = 100 50 15	84 Inches 8,780 3,512 2,602 1,756 1,301 549	90 Inches 10,799 4,320 3,200 2,160 1,600 675	96 Inches 13,106 5,243 3,883 2,621 1,942 819	102 Inches 15,720 6,288 4,658 3,144 2,329 983			
Specific Weight = 175 lb/cu ft							
Thickness = 100 50 15	12 Inches 27 11 11 5 6 2	15 Inches 53 21 22 11 11 3	18 Inches 92 37 39 18 19 6	21 Inches 146 58 61 29 31 9			
Thickness =	24 Inches	27 Inches	30 Inches	33 Inches			
100 50 15	217 87 92 43 46 14	309 124 130 62 65 19	424 170 179 85 89 27	536 226 238 113 119 35			
Thickness =	36 Inches	42 Inches	48 Inches	54 Inches			
100 50 15	733 293 309 147 155 46	1,164 466 491 233 246 73	1,738 695 733 348 367 109	2,474 990 1,044 495 522 155			
Thickness = 100 50 15	60 Inches 3,394 1,357 1,006 679 503 212	66 Inches 4,517 1,807 1,338 903 669 282	72 Inches 5,864 2,346 1,738 1,173 869 367	78 Inches 7,456 2,982 2,204 1,491 1,105 466			
Thickness = 100 50 15	84 Inches 9,312 3,725 2,759 1,862 1,380 582	90 Inches 11,454 4,581 3,394 2,291 1,697 716	96 Inches 13,901 5,560 4,119 2,780 2,059 869	102 Inches 16,673 6,669 4,940 3,335 2,470 1,042			

Riprap creates locally high boundary turbulence that leads to local scour at the downstream end of the riprap blanket. This requires that the downstream end of the riprap be "keyed in" as shown in Figure 5-17. Method A requires extending the riprap to a depth equal to or greater than the anticipated scour. Method B provides sufficient riprap in a trench to launch as local scour occurs, EM 1110-2-1601 provides guidance for designing riprap end protection. The need to "key in" the riprap is most apparent at projects where the downstream riprap protection does not extend $10d_2$ below the end sill. In some cases, adjacent vertical walls inhibit spreading of the jet during single gate operation and increase the size of riprap required. In cases where the riprap size becomes excessive, concrete aprons or grout-filled bags have been used. Side-slope riprap is normally the same size as the invert. If required, riprap downstream of the $10d_2$ limit should be designed according to EM 1110-2-1601. Granular filters are recommended for riprap placement adjacent to structures. EM 1110-2-1901 presents quidance for filter design.

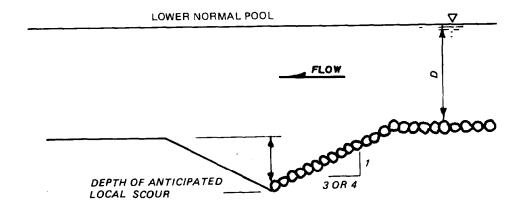

a. METHOD A - EXTEND TO ANTICIPATED SCOUR DEPTH

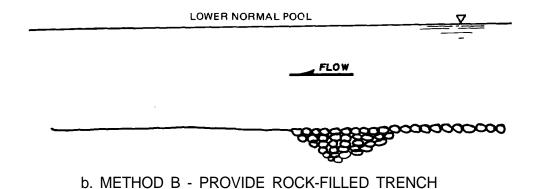


Figure 5-17. Methods for transitioning from riprap to the unprotected downstream channel

5-12. <u>Spillway Gates.</u> Various types of gates have been used as control devices at Corps of Engineers navigation projects. Examples are tainter

gates, roller gates, vertical-lift gates, etc. The current most commonly used and recommended control is the tainter gate.

- 5-13. <u>Gate Types and Selection.</u> The types of gates used at Corps of Engineers navigation dams and factors considered in the selection of type of gate at a specific project are described in the following paragraphs.
- a. Roller Gates. A roller gate is a long metal cylinder with "ring gears" at each end that mesh with inclined metal racks supported by the piers. The cylinder is braced internally to act as a beam to transmit the water load into the piers. The effective damming height of the structural cylinder can be increased by means of a projecting apron that rotates into contact with the sill as the gate rolls down the inclined racks. The gate is raised and lowered by means of a chain wrapped around one end of the cylinder and operated by a hoist permanently mounted in the pier. The rolling movement of the gate and the limited amount of frictional contact at the sealing points permit comparatively fast operation with a small expenditure of power. Roller gates have been built with a damming height of 30 feet, with lengths up to 125 feet on pile foundations and 150 feet on rock foundations.
- Tainter Gates. A tainter gate in its simplest form is a segment of a cylinder mounted on radial arms that rotate on trunnions embedded in the The tainter gate is considered the most economical, and usually the most suitable, type of gate for controlled spillways because of its simplicity, light weight, and low hoist-capacity requirements. The use of side seals eliminates the need for gate slots that are conducive to local low-pressure areas and possible cavitation damage. The damming surface consists of a skin plate and a series of beams that transmit the water load into the radial supporting arms. The tainter gate is raised and lowered by chains or wire rope attached at both ends, since the tainter type is less capable of resisting torsional stress than the roller gate. Gates may be manipulated by a traveling hoist, or by individual hoists, depending upon the desired speed of operation and consideration of costs. Tainter gates require more power for operation than roller gates of similar size, since nearly all the weight of the gate is suspended from the hoisting chains while the weight of a roller gate is about equally divided between the chain and the pier. Counterweights will reduce power required, but will add to the total weight of the structure. Tainter gates built to heights of 75 feet and lengths of 110 feet have been used for navigation dams. It is desirable but not mandatory that the trunnions of tainter gates be placed above high water, and essential that the gate itself be capable of being raised above high water. Item 3 of Appendix A identifies three types of tainter gate mounting arrangements and describes, with pertinent geometrical data, the gate design and mounting arrangement at 176 Corps of Engineers projects.
- c. <u>Vertical-Lift Gates.</u> The vertical-lift gate moves vertically in slots formed in the piers and consists of a skin plate and horizontal girders that transmit the water load into the piers. For the larger heads, the gate must be mounted on rollers to permit movement under water load. The vertical-lift gate, like the tainter gate, must be hoisted at both ends, and the entire weight is suspended from the hoisting chains. Piers must be extended to a considerable height above high water in order to provide guide slots for the

gate in the fully raised position. Vertical-lift gates have been designed for spans in excess of 100 feet. High vertical-lift gates are sometimes split into two or more sections in order to reduce hoist capacity, reduce damage to fingerlings passing downstream, or ease passing ice and debris. However, this does increase operating difficulties, because the top leaf or leaves have to be removed and placed in another gate slot.


- d. Other Types. Various other types of damming surfaces have been used for navigation dams. These usually have been relatively slow-acting adaptations of stop-log bulkheads or needle dams for operation by hand or limited amounts of mechanical power. The stop-log type of dam consists of piers with vertical slots in which timbers or built-up sections of skin plate and girders are stacked to the desired height. The needle dam consists of a sill and piers that support a girder designed for horizontal loading. Needles or shutters of comparatively narrow width are placed vertically or inclined downstream to rest against the girder and sill and are held in place by the water load. Other navigation dam types such as wicket (Chanoine and Bebout), bear trap, and Boule'dam (see Figure 5-18) are movable dams that are no longer being constructed but are still being used.
- e. <u>Selection of Gates.</u> Gates that best meet the operational requirements of the proposed spillway should be provided. Where two or more types of gates appear equally efficient, from a functional standpoint, the decision should be made upon an economic basis. Tainter gates have been used in most recently constructed navigation dams. The following advantages may be ascribed to tainter gate installations:
 - (1) Lighter lifting weight with smaller hoist requirements.
- (2) Adaptable to fixed individual hoists and push-button operation. Individual hoists may have a lower first cost than gantry cranes and require fewer operating personnel.
- (3) Less time required for gate operation (more than one gate can be operated at the same time.
 - (4) Favorable discharge characteristics.

Disadvantages of tainter gate installations are:


- (1) Encroachment of radial arm on the water passage.
- (2) The necessity for excessively long radial arms where the flood level, to be cleared, is extremely high.

The advantages of a vertical-lift gate installation are:


- (1) Provision of a clear gate opening with no encroachment, when raised, of any part of the gate structure on the water passage.
- (2) More adaptable to extreme pool fluctuations in that it is lifted bodily out of the water.

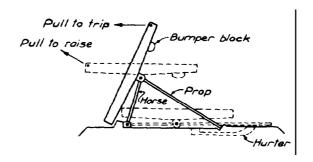

WOODEN CHANOINE WICKET

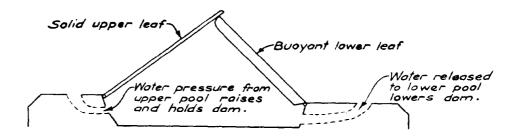


BEAR TRAP DAM

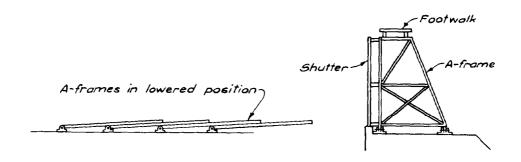

BOULE' DAM

Figure 5-18. Typical movable dams (Sheet 1 of 2)

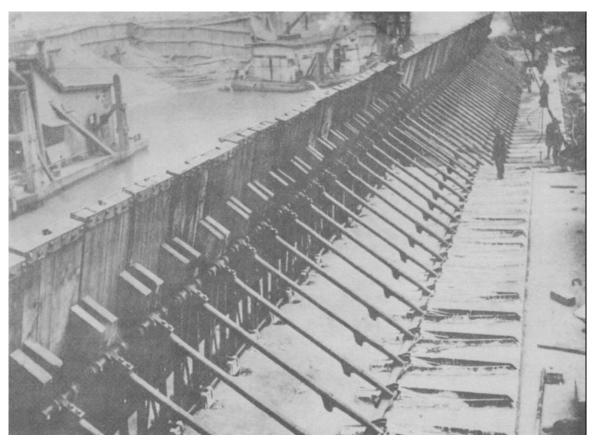

Chanoine Wicket

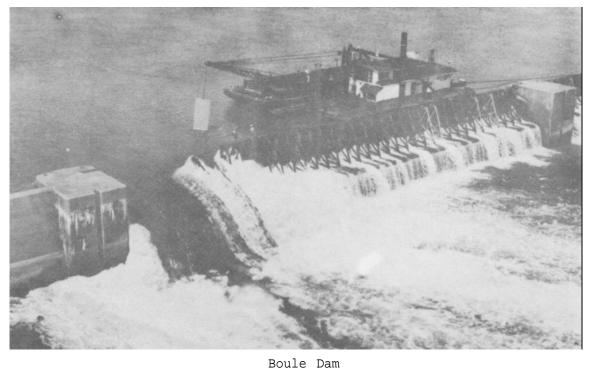


Figure 5-18. (Sheet 2 of 2)

Some of the disadvantages encountered in the use of vertical-lift gates are:

- (1) Heavier lifting load which requires greater hoist capacity and often necessitates a "split-gate." The split-gate increases operation difficulties.
- (2) Not favorable for adaption to fixed individual hoist operation. The most common method of operation is by gantry crane which may have a greater first cost than do fixed hoists and also requires more operating personnel.
- (3) Greater time required for gate operation because normally only one crane is provided. Time element may be especially significant at sites subject to flash floods.
 - (4) Gate slots lead to potential cavitation and debris collection.
- 5-14. <u>Tainter Gate Design.</u> Reference is made to EM 1110-2-2702 and EM 1110-2-1603 for design guidance for tainter gates. Additional design guidance is given in the following paragraphs.
- a. <u>Gate Seal Design and Vibration.</u> Many laboratory and field studies have been concerned with instabilities (gate vibration and oscillation) at CE projects. Reports given in items 4, 7, 8, 17, 19-21, 23, and 24 of Appendix A are representative of problems encountered and their solution. The following guidance is recommended for gate seal design:
- (1) The configuration of the tainter gate lip and bottom seal is a major factor in setting up flow conditions that cause gate vibrations. Ideally, tainter gate lips should provide as sharp and clean a flow breakoff point as possible. Supporting structural members downstream from the lip should be kept as high and narrow as possible. The Type C gate lip design (Figure 5-19), as used on Arkansas River Locks and Dams 8, 9, 13, and 14 gates, adequately meets these criteria. Severe vibrations adequate to eventually destroy the gates were experienced with Types A and B (see item 21, Appendix A).
- (2) Rubber seals should not be used on the gate bottom unless water conservation requirements cannot tolerate the normal leakage. If required, a narrow rubber bar seal attached rigidly to the back side of the gate lip, as in type D design (Figure 5-19), is recommended. However, even minor variations from this seal design can result in vibrations. Consideration should also be given to providing a rubber seal in the gate-sill bearing plate. However, such seals are normally more difficult to maintain than gate-mounted seals.
- (3) In wider tainter gates with high trunnion anchorages, the hydrostatic force of the pool against the skin plate tends to bow up the lip at the center of the gate. The Type D seal designs are too inflexible to prevent leakage under these conditions. The Type A designs are very flexible but also vibration prone. Figure 5-20 shows an untested lip design developed to prevent this leakage problem. The notch in the gate sill may be subject to cavitation damage and should be tested under proposed operation conditions before being adopted.

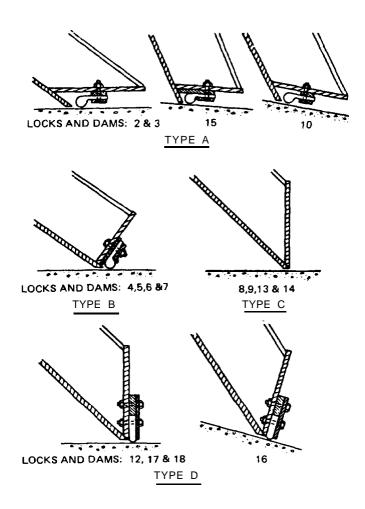


Figure 5-19. Gate lip design

- (4) Structurally, the gate members should be rigidly designed to limit possible gate flexing under hydraulic loads. Rigid rib-to-girder welded connections and stiffener braces between the bottom girders and the cantilevered portion of the skin plate provided the necessary rigidity on the Arkansas gate designs.
- (5) Gate side seals should be designed with sufficient flexibility to remain in contact with the side seal plates at all gate openings and for all probable gap openings as might be caused by construction inaccuracies, gate skews, gate temperature shrinkage and expansion, and normal structural settlements. The side seals should initially be set with a slight deflection forcing the seal against the seal plate. Debris that becomes wedged between the seal and seal plate should be cleaned out at regular intervals. The normal J-bulb gate side seal is shown in Figure 5-21. Also shown is a modified rubber seal shape that was designed to maintain a seal over wide gap variations between the gate and the pier. This design should be tested on a prototype gate before extensive use on proposed projects.

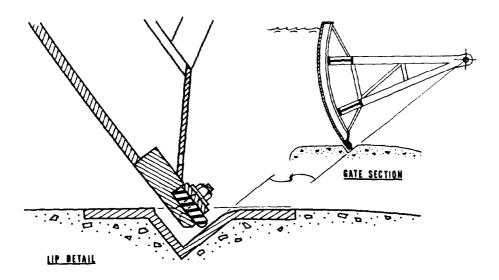
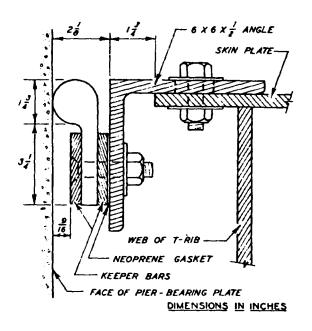


Figure 5-20. Bottom seal design for tainter gates, design proposed for vibration-free, leakage-free operation

- (6) Unusual gate designs or features should be tested in model facilities or, if practical, on existing spillway gates that have similar geometric and hydraulic conditions to ensure against cavitation tendencies.
- (7) No spillway tainter gate design or feature should be predicated, or made contingent, on the use of any specific gate operating scheme or plan.
- b. <u>Surging of Flow.</u> Design criteria have been developed to prevent periodic surging of flow on spillway tainter gates. Model tests have indicated that the most effective means of eliminating the periodic surge on the tainter gates is to decrease the length of crest piers upstream from the gates or to increase the width of gate bays, or both. For low-overflow spillways, the gate-bay width should be equal to or greater than:
- (1) 1.1 times the maximum head on the weir crest for which the gates control the discharge when the length of crest piers is less than 0.3 times the gate-bay width.
- (2) 1.25 times the maximum head on the weir crest for which the gates control the discharge when the length of crest piers is between 0.3 and 0.4 times the gate-bay width. The maximum gate opening for which tainter gates will control the discharge should be taken as 0.625 times the head on the weir crest. By utilizing the spillway discharge curves for various gate openings, the maximum head on the weir crest for which the gates will control the discharge can be determined.
- c. <u>Gate Seat Location.</u> The gate seat should be located at the beginning of the parabolic drop or within two feet upstream of that point for low-head navigation structures. This location will help the jet adhere to the downstream face of the crest.



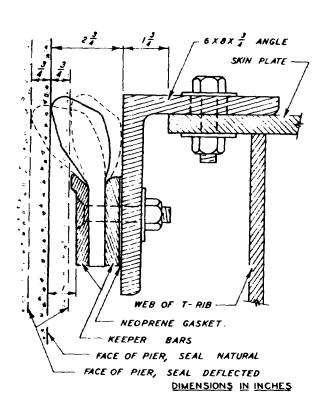


Figure 5-21. Gate side seals 5-42

- d. <u>Tainter Gate Trunnion Elevation</u>. Trunnion elevation is set above most floods. Typical submergence allowed is a maximum of five to ten percent of the time.
- e. <u>Top of Gates, Closed Position.</u> When in the closed position, the gates should have at least one foot of freeboard above the normal upstream pool. On large pools where fetch for wave setup is large and water conservation is important more than one foot may be required.
- f. Bottom of Tainter Gates, Raised Position. Gates should be designed to clear the highest flood with allowance for floating debris. Typical clearance is one to five feet above the PMF. Special consideration may be appropriate for projects with major flood levees along the overbanks. Often the maximum stage will occur just before the levees are overtopped. Subsequent discharge increases would result in lowered stages because of levee failure and dispersion of flows through the protected areas. For spillways in such locations, the maximum gate-opening height would be set at one foot above the adjacent levee crown elevation. Another consideration is raising the bottom of the gates to allow accidental passage of barges through the gate bays without damage to the tainter gates.
- g. <u>Gate Radius.</u> Skin plate radius ranges from 1.0 to 1.2 times the damming height of the gate. The radius of the gate is affected by the vertical distance between the bottom of the gate in the lowered position and low steel of the gate in the raised position. Spillway bridge clearance may also be a factor in determining the gate radius and the trunnion location.
- h. <u>Submergible Tainter Gates.</u> Submergible tainter gates were developed to allow passage of ice without having to use large gate openings. Case histories of various types of submergible gates are presented in item 30 of Appendix A. Two types have evolved, the type in which the top of the gate can be lowered below the normal upper pool elevation and the piggyback gate. Both types are shown in Figure 5-3. A shaped lip on the top of the gate can be used to keep the flow off the back of the gate. A listing of projects having submergible tainter gates is given in Table 5-4 and a definition sketch is shown in Figure 5-22. Some of these projects have experienced scour and/or vibration problems. Lifting chain or cable loads are much greater in deep submerged positions and must be considered in machinery costs. At Lock 24, Upper Mississippi, submerged tainter gates have only been effective for passing light floating ice.
- 5-15. <u>Vertical-Lift Gate Design.</u> Reference is made to EM 1110-2-2701 and EM 1110-2-1603 for design of vertical-lift gates.
- 5-16. <u>Spillway Piers.</u> The hydraulic performance and discharge capacity of spillways are affected by the pier designs. The following factors need to be considered.
- a. <u>Thickness</u>. Pier thickness is dependent upon structural requirements and is generally a function of the bay width and pier height. Pier widths for the spillways of item 10 and 13-16 projects, Appendix A, vary from 8 to 15 feet.


TABLE 5-4
Projects with Submergible Tainter Gates*

(COE District)	River	н	Sub _G	⁵	$^{\mathrm{D}_{\mathrm{G}}}$	lem	Remarks
Greenup (Huntington)	0h 1o	32.0	7.0	28.0	25.0	Yes	
Meldahl (Huntington)	Ohio	30.0	7.0	28.0	23.0	Yes	Problem: stilling basin and sill erosion and vibration Solution: submerged operation eliminated
Markland (Louisville)	Ohio	34.0	7.0	33.0	27.0	Yes	Problem: vibration and jet through stilling basin and across end sill Solution: gate stops added and spillway curve modified. Submerged operation eliminated
McAlpine (Louisville)	Ohio	37.0	7.0	12.0	30.0	Yes	Problem: bed-material abrasion of sill Solution: submerged operation eliminated, spillway curve modified
Cheatham (Nashville)	Cumberland	26.0	7.0	0.61	13.0	Yes	Problem: vibration Solution: submerged operation eliminated, design modifica- tion being considered
New Cumberland (Pittsburgh)	Ohio	22.6	7.0	12.5	15.6	, Yes	Problem: vibration, cavitation between gate and sill, and recreational craft hazard Solution: submerged operation eliminated
Pike Island (Pittsburgh)	Ohio	21.0	7.0	20.0	14.0	Yes	Problem: excessive leakage Solution: submerged operation eliminated
L&D No. 4 (Pittsburgh)	Monongahela	16.6	7.0	12.5	9.6	N _o	Movable crest or piggyback gate
Maxwell (Pittsburgh)	Monongahela	19.5	7.0	19.0	12.5	No	Movable crest or piggyback gate
L&D No. 11 (Rock Island)	Mississippi	11.0	8.0	12.0	3.0	No	13 gates
L&D No. 12 (Rock Island)	Mississippi	0.6	8.0	12.0	1.0	N _O	7 gates
L&D No. 13 (Rock Island)	Mississippi	11.0	8.0	12.0	3.0	No	10 gares
L&D No. 16 (Rock Island)	Mississippi	0.6	0.8	12.0	1.0	No	3 of 15 gates
L&D No. 17 (Rock Island)	Mississippi	8.0	8.0	8.0	0.0	No	8 gates
L&D No. 18 (Rock Island)	Mississippi	8.6	5.0	15.0	8.4	No	14 gates
L&D No. 20 (Rock Island)	Mississippi	0.01	3.0	17.0	7.0	O.N.	6 of 40 gates
L&D No. 21 (Rock Island)	Mississippi	10.5	0.8	12.0	2.5	No	10 gates
L&D No. 22 (Rock Island)	Mississippi	10.5	0 * 8	17.0	2.5	No	l of 10 gates
					(Continued)	(pan	

TABLE 5-4 (Concluded)

Кемагкз	15-80' TG's, vibration, stress on trunion; summerged operation eliminated	l4-00' lo's, vioration scress on claiming submerged operation eliminated	27.0 21.0 No 30-40 TG's
Prob-	Yes	Yes	Ş.
D _G	7.0	9.0 Yes	21.0
	8.0 17.0 Yes	18.0	27.0
O _O Oqn _S	0.6	7.0 18.0	3.0
H _D	15.0	15.0	24.0
River	Mississippi	Mississippi	Mississippi
Lock and Dam	St. Louis	St. Louis L&D No. 25	St. Louis L&D No. 26

* See Figure 5-22 for definition sketch.

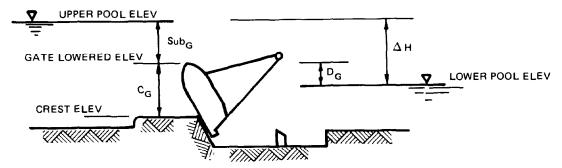

 Δ H = HEAD DIFFERENTIAL = UPPER POOL ELEV - LOWER POOL ELEV Sub_G = GATE SUBMERGENCE = UPPER POOL ELEV - GATE LOWERED ELEV

CG = GATE CLOSURE = GATE LOWERED ELEV - CREST ELEV

DG = DROP CONTROL = GATE LOWERED ELEV - LOWER POOL ELEV

Figure 5-22. Definition sketch for variables used in Table 5-4

- b. <u>Supplemental Closure Facilities.</u> Bulkheads are provided on all gated navigation spillways to permit gate maintenance without draining the pool. Bulkhead slots are located in the piers and have their upstream side about one pier thickness downstream from the pier nose. The slots must be upstream far enough to ensure that the bulkheads will clear the gate raising mechanisms while being placed. Occasionally, bulkhead slots are provided on the downstream ends of piers also. These bulkheads would permit dewatering and inspection of the spillway gate sill. When lower pool levels are higher than the gate sill, inspections must be made by divers if these bulkheads are not provided.
- c. Pier Nose Shape. A semicircular pier nose shape is the most common and generally satisfactory design. An ogival shape (Type 3, HDC 111-5) was found to be only slightly more efficient than the semicircular shape (see item 6, Appendix A). All the Arkansas River navigation spillways have a curved nose leading to a 90-degree point (similar to ogival). A structural angle is embedded in the point. The angle has helped to protect the piers from being damaged by colliding barges and other objects. This shape is very efficient when the gates on both sides of the pier are set at equal openings. However, when gate settings are very different, the sharp pier nose causes a flow separation from the pier on the larger gate opening side causing a reduction in efficiency.
- d. <u>Barge Hitches.</u> If floating plant is used for spillway or spillway gate maintenance, tie-up posts should be added to both the upstream and downstream end of the piers. By recessing the posts back from the pier face, they will cause minimal flow disturbances.
- 5-17. Abutments. Long-radius abutments are used infrequently at low-head navigation dams because the spillway is normally located for straight approach flow which minimizes need for large abutments, and operation of adjacent locks, overflow sections, powerhouses, etc., would be hindered by large abutments. Abutment radius used on projects in items 10 and 13-16 of Appendix A

were the same as the interior piers that equaled one-half of the pier width.

Section II. Design of Other Appurtenances

- Navigable Passes. Navigable passes permit the passage of tows over low head dams without the requirement for locking. These may be appropriate at some dams if certain conditions obtain. These include stages high enough to permit open-river navigation for a significant portion of the year, individual high-water periods usually of considerable duration, and a gate regulating system commensurate with the rate of river rise and fall. The benefits of a navigable pass may include lower lock wall heights and lower tow operating costs when lockage is unnecessary. This may be offset by higher maintenance costs for locks that sustain relatively frequent overtopping. In addition to dams for which a navigable pass is included as an element in their configuration, many other dams have high-water navigation over a weir section. This includes both dams with gated and weir sections as well as dams entirely constructed as fixed-crest structures. These dams also may require less lock-The design of a navigable pass must provide for sufficient clear wall height. width for safe passage of tow traffic, including poorly aligned tows. At some locations this may include two-way traffic. In addition, the pass must have sufficient depth for tows of the authorized draft, including a buffer to account for overdraft, tow squat, etc. Model studies have shown that a navigable pass should have a minimum cross-sectional area 2-1/2 times the area blocked by a loaded tow. Current direction should be aligned normal to the axis of the navigable pass and velocity through the pass must be low enough for upbound loaded tows of the horsepower range that operates on the waterway. A model study should be considered in the design of a navigable pass. At the present time, the Corps is operating dams with navigable passes on the Ohio and Ouachita Rivers. Pass widths vary from 200 feet on the Ouachita to 932 and 1,248 feet on the Ohio River. In addition, the Corps operates dams on the Illinois Waterway at which tows transit the regulating wicket section during higher stages. Gate types for navigable passes include Chanoine wickets (Figure 5-18) and hydraulically operated bottom hinged gates. Fabridam has also been used but has experienced considerable problems with vandals and debris punctures. Drum gates are under consideration for a replacement structure on the Ohio River (Figure 7-3).
- 5-19. <u>Low-Flow and Water Quality Releases</u>. Provision for sluices as part of the main spillway or a separate outlet works to accomplish low-flow or multilevel releases should be designed according to EM 1110-2-1602.
- 5-20. <u>Fish Passage Facilities.</u> Most fish passage facilities are located on rivers in the North Pacific Division (NPD). Engineers in NPD should be contacted for design information.
- 5-21. <u>Ice Control Methods.</u> It is desirable and often essential to continue operation of navigation dams and spillways during winter. Traffic may be curtailed or even stopped on the waterway but provision must be made to pass winter flows and to handle ice during winter and at breakup. Designers must consider ice passage procedures, possible ice retention, ice forces on the structures, and icing problems leading to blocking of moving parts or simply excess weight (Figure 5-23). Provisions to move ice past or through dams have

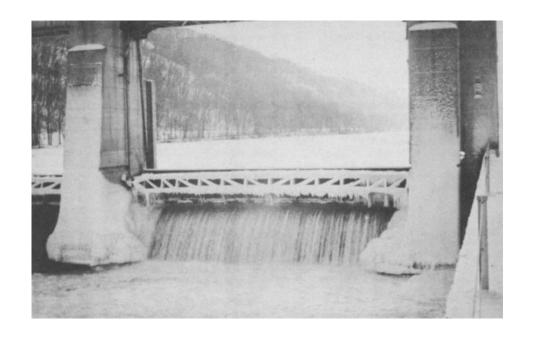




Figure 5-23. Ice on control gate

been many and varied and none have met with perfect success. At some locations, it is preferable to retain the ice in the upstream pool, while at others an ice-passing capability is necessary. Spillway gates should be as wide as practicable to minimize arching across the openings. The primary factor controlling ice passage appears to be the velocity of the approaching ice. When the velocity is great enough, the flows are broken and pass through spillway bays. Passage of ice through a submerged outlet requires sufficient velocity to entrain the ice into the flow. Therefore, to maintain pool during periods of low flow, it is preferable to pass ice over the top of gates in a skimming type mode. At low flows ice can be passed with one or more gates open at a time and arching broken by alternating gate openings. Physical models of ice control methods for specific projects can be made in the Ice Engineering Laboratory at the Corps of Engineers Cold Region Research and Engineering Laboratory in Hanover, N. H. EM 1110-2-1612 provides additional information on ice control methods.

Section III. Model Studies

5-22. General.

- In the design of navigation dam spillways for major structures, a combination of analytical, laboratory, and field studies is usually needed. The laboratory studies can be physical or numerical models of flow conditions which are usually conducted at WES or ice studies for dams in cold regions which can be modeled at the Ice Engineering Laboratory at CRREL. problems in the design of spillways cannot always be solved satisfactorily without the use of model studies. Experience has shown that a model often can indicate more economical treatment of certain features which may reduce construction costs by many times the cost of the model. A model may reveal inadequacies in the basic design that would limit discharge capacity, result in costly maintenance, or even cause hazardous operation. It may be desirable to use hydraulic models for a specific project or for a typical case of a number of small structures. By using model studies, alternate plans and modifications can be tested within a relatively short time with all flow conditions that can be expected. Also, the design and operating engineers can observe conditions resulting with a particular arrangement and satisfy themselves as to the adequacy of the plan in addition to the advantages given above.
- b. Examples of previous hydraulic models at WES used to solve spillway design problems are numerous. Among the most common usages is the verification of general spillway adequacy and performance. Generally, undistorted models of various linear scale ratios are used (commonly 1:12 to 1:60) depending upon the problems involved, and practical space and discharge limitations. A general model is normally used when approach conditions, flow over the spillway, and exit channel hydraulics are to be studied. A section model simulating one or more spillway gate bays is extremely effective for improving various details of spillway design at larger scales than the general model. If only a section model is to be used to simulate a structure, careful consideration should be given to the model limits since a two-dimensional model may not introduce flow patterns that can be addressed in a three-dimensional model.

- c. The effect of approach conditions on discharge of a navigation dam spillway and required excavation can be studied to advantage in a model. Abutment configuration may seriously affect the discharge of a spillway, and the model can indicate the most cost-effective design. The effect of waves from the ends of piers upon the height of sidewalls can best be studied in a model.
- d. Determination of the performance of stilling basins is an important objective in hydraulic model studies. The length and width of stilling basins and the arrangement of baffles and end sills can be tested. The scour tendency and protective measures downstream from stilling basins can also be studied in a model.
- e. A typical example of model study benefits is found in item 13 of Appendix A, where tests of a spillway as originally designed indicated that several modifications could improve performance and reduce project cost. Stilling basin tests demonstrated that the apron could be raised two feet to el 87.0 and still maintain an adequate jump under the most critical operating condition of one gate fully opened with the normal pool and minimum tailwater elevation expected. Two rows of baffles, eight feet high, seven feet wide, and eight feet apart, were found to be more beneficial than the original single row in dissipating energy and maintaining the hydraulic jump. Pier extensions 37 feet long and 23 feet high were essential for the elimination of return flows and eddies experienced during single-gate operations. terminal apron elevation and riprap on a 1V-on-20H upslope were required downstream of the stilling basin to prevent the formation of a secondary jump over the horizontal downstream riprap protection. Multiple- or single-gate openings greater than six feet created a secondary jump with the original design basin and low tailwaters. The recommended design stilling basin eliminated the secondary jump and provided satisfactory energy dissipation for both normal and emergency operating conditions. Other changes from the original design included eliminating the approach trench upstream of the spillway, eliminating the go-degree curved endwall downstream of the left stilling basin training wall, and shortening the right training wall between the gated and ungated spillways from 115 to 40 feet. The approach trench was removed to prevent irregular flow conditions. The go-degree curved endwall tended to magnify wave action on the left bank. Reducing the length of the right training wall was economically beneficial since any length beyond 40 feet did not improve hydraulic performance. A considerable reduction in the excavation requirements along the right downstream bank was recommended to improve flow patterns and decrease construction costs. This recommended reduction in width decreased eddy action, eliminated much of the return flow along the right bank, and produced better flow patterns for both single- and multiple-gate operations.

Section IV. Example Design

5-23. <u>Known Information.</u> From optimization study (see Appendix D for example), a six-gated structure is required having the following dimensions:

Normal Upper Pool Elevation = 140

Normal Lower Pool Elevation = 110

Crest Elevation = 100

Maximum High Water Elevation = 165

Tailwater Stage Exceeded 10 Percent of the Time = 139

Tailwater Buildup Is Slow

Channel Invert Elevation = 100

Left Side of Spillway Adjacent to Lock Wall

Right Side of Spillway Has 1V-on-3H Side Slope

Use Standard, Nonsubmergible Tainter Gate

Gate Width = 60 feet = (Width of Monolith - Pier Width)

Pier Width = 10 feet

Unit Weight of Available Stone = 165 lb/ft³

Riprap to be Placed in the Dry

5-24. Development of Design.

a. $\underline{\text{Upstream Face and Radius}}$ - Use vertical upstream face with a five-foot radius (due to 40-foot head) connecting the upstream face and horizontal crest.

b. Structural requirements usually dictate length of horizontal crest from upstream face to beginning of downstream face. Past projects have used approximately 110 percent of the head on the crest. Distance = 1.10(40) = 44 feet.

c. <u>Downstream Face:</u>

H = Normal Pool - Crest Elevation = 40 feet

 V_o (for parabolic drop) = $\sqrt{2g(1/3)H}$ = 29.3 ft/sec

$$\chi^2 = \frac{2V_0^2 Y}{g} = \frac{2(29.3)^2 Y}{32.2} = 53.3Y$$
 (5-1 bis)

This is the steepest slope recommended for a head of 40 feet; use X^2 q 55Y. The downstream face shaped according to this equation will not experience severely negative pressures and the jet will adhere to the downstream face of

the crest. Point at which slope equals 1V on 1H:

$$Y = \frac{X^2}{55}$$

Slope =
$$\frac{dY}{dX} = \frac{2x}{55}$$

For slope = 1 =
$$\frac{2x}{55}$$
, X = 27.5, Y = 13.75

d. <u>Discharge Rating</u> - Free uncontrolled flow is needed for input into stilling basin design. Some of the other three flow regimes require the stilling basin apron elevation and will not be computed in this step.

$$Q = C_F LH^{3/2}$$
 (5-2 bis)

Using Figure 5-9, and using an abutment contraction coefficient since the adjacent bays are not operating, the following table results for discharge through a single bay.

Upper Pool Elevation	H _e /R*	K _a /2**	L _effective' feet	H/B _c	С	Q, cfs/bay
100	0		60.0	0		0
105	1	0.015	59.85	0.11	3.00	2,007
110	2	0.021	59.6	0.23	3.04	5,730
115	3	0.027	59.2	0.34	3.07	10,557
120	4	0.036	58.6	0.45	3.09	16,196
125	5	0.04	58.0	0.57	3.11	22,548
130	6	0.042	57.5	0.68	3.15	29,762
135	7	0.044	56.9	0.80	3.19	37,584
140	8	0.046	56.3	0.91	3.24	46,163

^{*} R = 1/2 pier width for use in HDC 111-3/1

e. <u>Stilling Basin Apron Elevation</u> - Use a single gate fully opened, normal upper pool, and minimum tailwater (which equals the normal lower pool since there is a slow tailwater buildup) to determine the apron elevation. The unit discharge into the basin is

$$q = \frac{Q}{W} = \frac{46163}{60} = 769.4 \text{ cfs/ft}$$

^{**} See paragraph 5-7c

Assume Stilling basin apron elevation = 75

Solve Equation 5-8 by trial and error for $\,V_1\,\,$ and $\,d_1\,\,$ using no energy loss between upper pool and stilling basin apron

$$140 = 75 + \frac{v_1^2}{2g} + d_1$$

$$v_1 = \frac{q}{d_1} = \frac{769.4}{d_1}$$

we are actually solving

$$140 = 75 + \frac{\left(\frac{769.4}{d_1}\right)^2}{2g} + d_1$$

The solution is $d_1 = 13.35$ feet

and

$$V_1 = \frac{769.4}{13.35} = 57.6$$
 ft/sec

$$F_1 = \frac{v_1}{\sqrt{gd_1}} = 2.78$$

$$\frac{d_2}{d_1} = 0.5 \left(\sqrt{1 + 8F_1^2} - 1 \right) = 3.46$$

$$d_2 = 3.46(13.35) = 46.2$$
 feet

Check assumed stilling basin elevation using tailwater equal to $85\%d_2$ (Factor = 0.85 in Equation 5-11)

A new stilling basin apron elevation must be assumed until the above equation

is satisfied. The correct solution is an apron elevation = 69.0.

$$d_1 = 12.55 \text{ feet}$$

$$V_1 = \frac{769.4}{12.55} = 61.31 \text{ ft/sec}$$

$$F_1 = \frac{61.31}{[(32.2)(12.55)]^{1/2}} = 3.05$$

$$d_2 = 48.25 \text{ feet}$$

- f. Basin Length Distance from beginning of basin to 1V-on-5H upslope L $_2$ = $2d_1F_1^{1.5}$ = 133.7 ft.
- g. Baffles Height = $0.25d_2$ = 12.06, use 12 feet. Distance to first row = $1.3d_2$ = 62.7 feet. Distance between upstream faces of baffle = 2(12) = 24 feet.
- h. <u>Pier Extensions</u> Extend 57.7 feet into basin. Use five feet wide beyond main piers and use top elevation of 112 (two feet above lower normal pool).
 - i. End Sill Use end-sill height = $0.15d_2$ = 7.2 feet, use 7.0.
- j. $\underline{\text{Training Wall}}$ Extend right training wall to end of basin at a top elevation of 112.
- k. $\underline{\text{Approach Area Configuration}}$ Use approach five feet below crest, horizontal for 50 feet, and slope up to streambed for 100 feet at 1V on 20H.
- l. Approach Area Riprap Average velocity = 769.4/(140 95) = 17.1 ft/sec. Using Equation 5-13, we have the following choices:

С	Thickness in D ₁₀₀	Gradation Table	D ₅₀ (MIN), feet	W ₅₀ (MIN), lbs	Thickness inches
0.44	$1.0 D_{100}(max)$	5-2	1.4	258	30
0.30	1.5 $D_{100}(max)$	5-3	1.0	86	33

Gradations other than those given in Tables 5-2 and 5-3 could be used by determining D_{30} in Equation 5-13 with a blanket thickness of 1.0 $D_{100}MAX$).

m. Exit Channel Configuration - The top of the end sill will be at 69 + 7 = 76.0. Place top of riprap 1.0 foot below top of end sill. Slope exit channel up to streambed for 500 feet at 1V on 20H.

 $\frac{\text{Exit Channel Riprap}}{\text{Riprap}} - \text{Velocity over end sill w/o spreading} = (769.\text{G/llO} - 76) = 22.6 \text{ ft/sec}, \text{ use } 0.80(22.6) = 18.1 \text{ ft/sec in Equation 5-14}.$

$$D_{50}(MIN) = 2.5 \text{ feet}$$

$$W_{50}(MIN) = 1,302 \text{ pounds}$$

Using gradation Table 5-3 for high turbulence, use thickness = 78 inches immediately below end sill.

Distance, feet	Thickness, inches
$3d_2 = 150$	78
$3d_2 = 150$	66
$2d_2 = 100$	48
$2d_2 = 100$	33

Adjacent to the lock wall, spreading of the single gate fully opened will be inhibited and rock size cannot be decreased as rapidly as given in the above table. Use 78-inch thickness for the first 300 feet then 66-inch thickness for the remaining 200 feet. Provide trench of riprap at downstream end to protect toe.

o. $\underline{\text{Tainter Gate Design}}$ - For this example design, a gate radius of 1.25 times the damming height of the gate will be used. In reality, this radius can depend on other factors not considered in this example. The trunnion elevation will be placed one foot above the stage that is exceeded 10 percent of the time.

$$R = 1.25(40) = 50$$
 feet

Trunnion elevation = 139 + 1 = 140 feet

The gate seat location will be at the beginning of the parabolic drop.

- p. <u>Pier Design</u> Use semicircular pier noses located in the same plane as the upstream face of the structure.
- ${\tt q.}$ $\underline{\tt Abutments}$ $\underline{\tt Abutment}$ radius should be one-half the pier width or five feet.

r. <u>Discharge Rating</u> -

(1) Submerged Uncontrolled - Use the d'Aubuisson equation (5-5) with K = 0.90 since bay width = 60 ft. An iterative solution is required.

		Approach			Q, cfs
H, feet	h, feet	Area, ft ²	K	AH, feet	All Gates
12.5	10	6,409	0.9	2.5	37,750
11.43	10	5,991	0.9	1.43	29,007
10.53	10	5,642	0.9	0.53	17,954
10.15	10	5,495	0.9	0.15	9,629
25.0	20	11,550	0.9	5.0	109,550
22.86	20	10,637	0.9	2.86	85,009
21.05	20	9,875	0.9	1.05	53,004
20.30	20	9,562	0.9	0.30	28,743
37.50	30	17,159	0.9	7.50	201,805
34.29	30	15,674	0.9	4.29	157,164
31.58	30	14,444	0.9	1.58	98,623
30.46	30	13,942	0.9	0.46	54,132

Results are plotted in Plate 5-1 along with the values for free uncontrolled flow.

(2) Free Controlled Flow - Using the coefficients presented in Figure 5-11:

H, feet	G _o , feet	C_g	Q, cfs/bay
30	1	1.0	2,636
30	6	0.69	10,912
30	14	0.58	21,401
20	1	0.90	1,937
20	6	0.65	8,393
10	1	0.82	1,248
10	6	0.54	4,930

Results are plotted in Plate 5-2 along with the curve for free uncontrolled flow. For heads greater than 30 feet or gate openings greater than 14 feet, HDC 320-4 to 320-7 must be used. The trunnion height above crest "a" equals 40 feet. This results in the ratio a/R = 40/50 = 0.8 which requires interpolation between HDC 320-5 and HDC 320-6. Determine L/P = 44/5 = 8.8 and find adjustment factor C2 = 1.03 .

Н			H/R	$C_1(a/R = 0.5)$	$C_1(a/R = 0.9)$	$C_1(a/R = 0.8)$	Q, cfs/bay
30	20	0.40	0.60	0.495	0.528	0.520	28,230
40	20	0.40	0.80	0.517	0.555	0.546	34,230
40	14	0.28	0.80	0.545	0.605	0.590	25,138
40	6	0.12	0.80	0.622	0.723	0.698	13,130

(3) Submerged Controlled Flow - This type of flow requires a different rating curve for each gate opening. Using Figure 5-12 for $c_{\rm gs}$, B = 31 feet:

G _o , ft	H, ft	h, ft	h/G	C_{gs}	∧ ⊔ £ +	Q, cfs/bay
1	30	10	10	0.076	20	1,636
1	25	10	10	0.076	20 15	1,416
1	20	10	10	0.076	10	1,156
1	15	10	10	0.076	5	818
1	30	20	20	0.070	10	1,126
1	25	20	20	0.037	5	796
6	30	10	1.67	0.47	20	10,114
6	25	10	1.67	0.47	15	8,759
6	20	10	1.67	0.47	10	7,152
6	15	10	1.67	0.47	5	5,057
6	30	20	3.33	0.23	10	7,000
6	25	20	3.33	0.23	5	4,950
14	30	20	1.43	0.58	10	17,652
14	25	20	1.43	0.58	5	12,482
	-			J –	_	,

Results are presented in Plate 5-3 along with the curves for free controlled flow.

s. Plan and profiles of the completed structure are given in Plates 5-4 to 5-6.

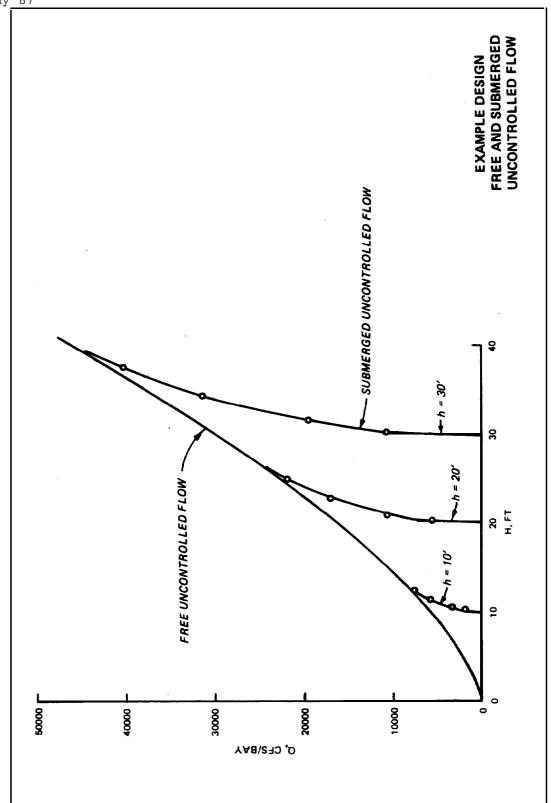


PLATE 5-1

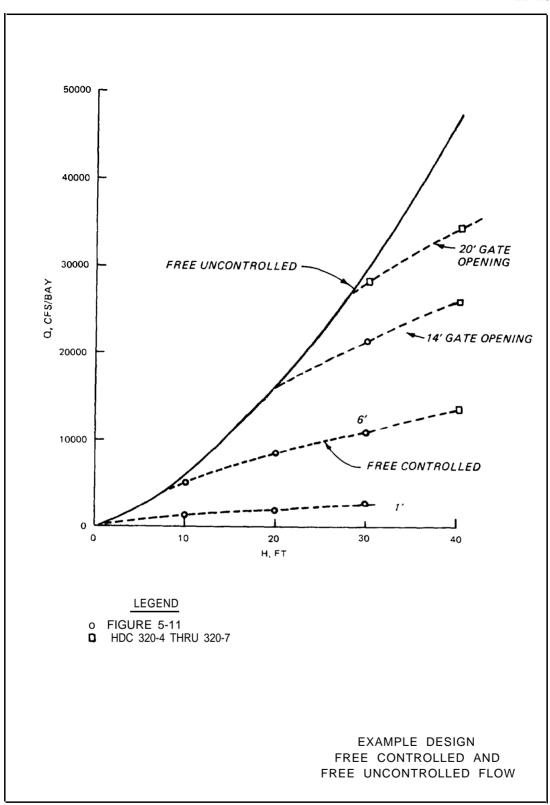


PLATE 5-2

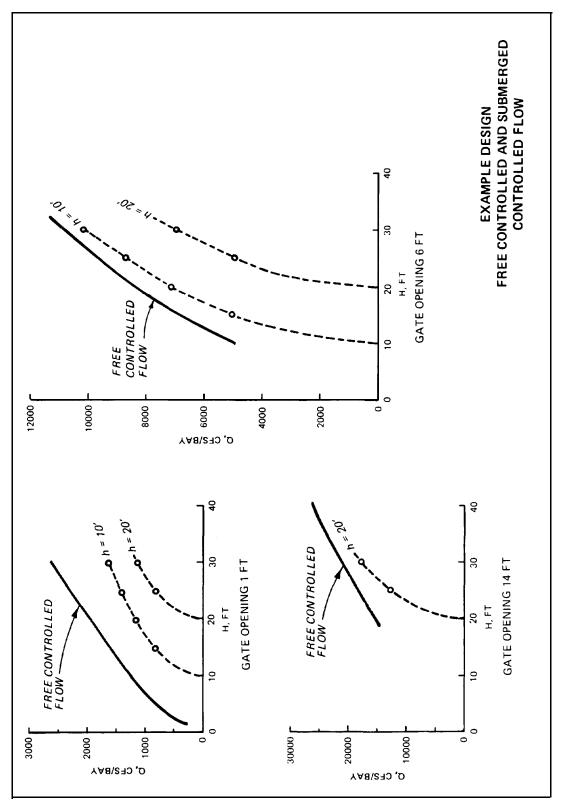


PLATE 5-3

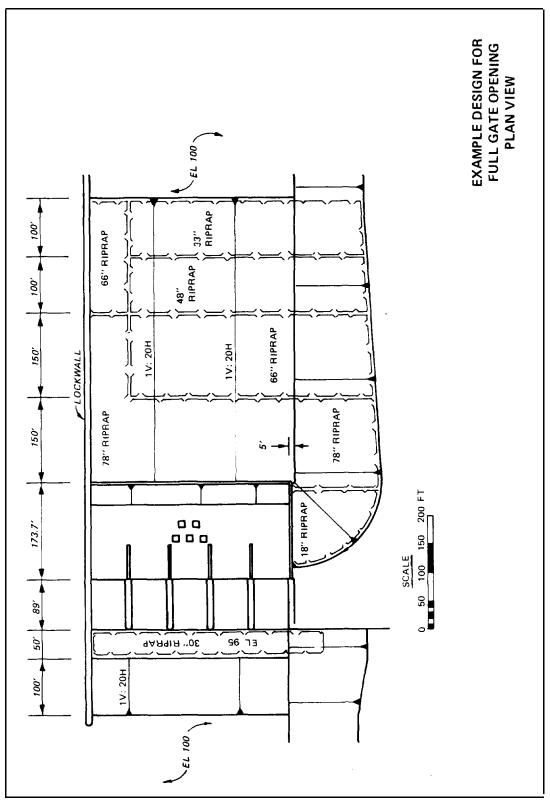


PLATE 5-4

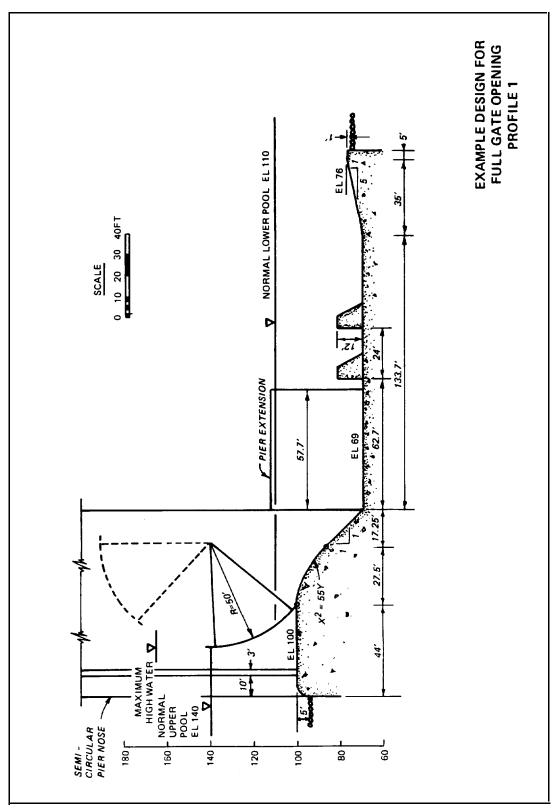


PLATE 5-5

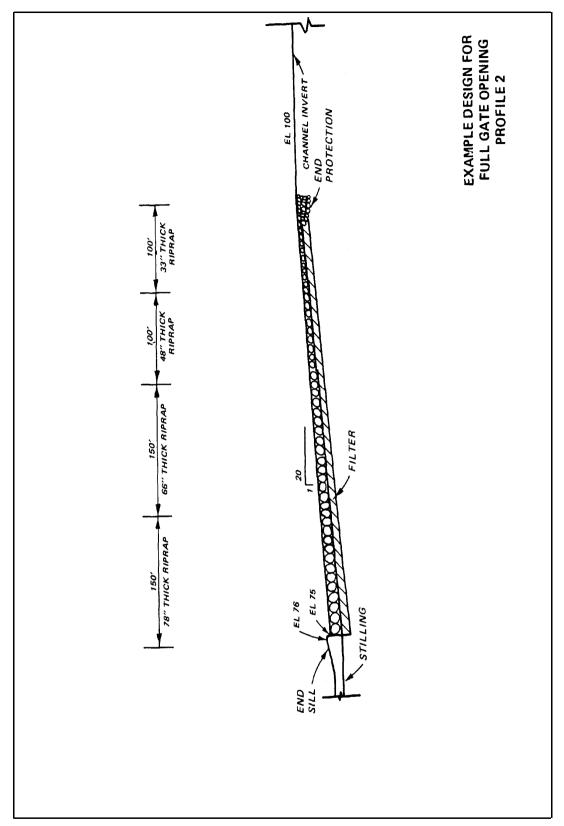


PLATE 5-6

CHAPTER 6

PROJECT CONSTRUCTION

Section I. General

- 6-1. Flow Diversion Schemes. Lock and dam construction normally requires a dry construction site. As these structures are usually located across or near streams, cofferdams are required for site dewatering and a reasonable degree of flood protection. The construction cofferdam usually creates a restriction in the river cross section. Usually several alternate diversion schemes are investigated before the most feasible and economical solution is found. Several factors need to be considered in developing a diversion scheme.
- a. Flooding. When designing a cofferdam scheme, an important design consideration is to limit upstream flooding to acceptable levels. Al though the flooding is only for the duration of construction, increased flooding may cause damage to agricultural, commercial, or other interests. An "acceptable" level depends on the general features and type of developments upstream from the construction site, cost of diversion structures, and cost of flooding the construction site.
- b. <u>Erosion.</u> Another consideration is scour in erodible bed streams. Scour must not endanger the stability and/or constructibility of temporary structures (cofferdams) or create conditions that would differ substantially from design assumptions at the permanent structure. Deflector cells are sometimes constructed adjoining the upper arm of the cofferdam to direct flow away and thereby protect the main cofferdam. Scouring increases the crosssectional area of the restriction and thus decreases the amount of induced upstream flooding. This may be taken into consideration during the cofferdam design. The stability of the riverbank at the restricted section must be analyzed. Temporary protection may have to be provided against induced erosive velocities.
- 6-2. Maintenance of-Navigation. Diversion schemes should take into account that during construction, navigation may have to be maintained on the river. The restriction caused by the construction cofferdam must not create conditions hazardous to navigation by introducing currents that tows cannot negotiate. Temporary locks may be needed. A value of 4 mph (6 ft/sec) has been used to approximate velocities that tows can generally negotiate, although this depends to a great extent on the power of the towboat. Helper boats may be considered in some situations to assist underpowered tows. currents, towboats must be able to enter and leave the restricted section safely without damage to the structure. It is preferable to maintain an open navigation section as long as possible to minimize traffic delays. However, at some construction sites this may not prove to be feasible, since the inclusion even of a relatively small portion of the dam in the first stage of the work may result in unacceptable navigation conditions. In this case, the construction sequence must usually begin with the lock so that it will be available for the passage of river traffic as soon as possible. In either case, special measures (reduced speed, helper boats, etc.) may have to be taken to ensure navigation safety. Alternatives of a navigation bypass channel,

temporary lock, or portage system may be considered. In some cases navigation improvements can be constructed without interference to existing river traffic, by using a cut across a bendway. In this case, no special provisions for flow diversion are necessary. General hydraulic models with model towboats or navigation simulators are usually recommended for major navigation structures to evaluate various diversion schemes.

Construction Phases. Since an opening must be provided to divert riverflows and in some cases to maintain existing navigation, projects must be constructed in two, three, or more stages. In general, economy dictates as few construction stages as possible, because of the cost and time delay associated with removal and replacing of earth embankments or sheet piling for cofferdam cells. However, the number of stages must be consistent with velocity limitations to prevent excessive scour and to maintain navigation. savings in initial costs sometimes offset the disadvantage of time delay provided the project can be constructed within the generally adopted schedule. As an example, in an analysis performed by the Little Rock District for the proposed Dardanelle Lock and Dam project on the Arkansas River, it was determined that a four-stage diversion plan was the most economical (Figure 6-1). This plan required the construction of 62-foot-diameter cofferdam cells to a maximum height of 59 feet, requiring 7,400 tons of piling with a total estimated cost of \$6 million. Another alternative was a three-stage plan with a stabilizing beam inside the cofferdam that required the construction of 52.5-foot-diameter cells to a maximum height of 66 feet above bedrock. alternative required 10,200 tons of piling with a cost of \$6.8 million. the four-stage plan required less sheet piling because of a smaller increase in upstream stages and it was therefore recommended for construction. had the advantage of the reduced headwater flooding. Navigation structures can be constructed in a single phase cofferdam scheme, resulting in significant time and cost savings. Dam 2 Spillway on the Arkansas River is an The existing river was not disturbed; the spillway was located on the alignment of a proposed river channel cutoff; the spillway was constructed; and finally the river was diverted to flow through the completed structure. Once diverted, an additional phase was required to construct the closure structure across the old river channel. The time for raising of the pool and the rate of rise must be carefully chosen. From a project operation standpoint, it is preferable to raise the pool as soon as conditions permit; however, environmental, commercial, recreational, and social considerations must be taken into account also. In addition, adequate flow must be maintained during the pool rise to prevent degradation of river water quality. Generally, on rivers with existing open-river navigation, locks must be constructed while maintaining navigation at the same time. To supplement flow capacity lost during later construction phases, the completed lock can be used as a floodway to reduce the effect of induced flooding, but only after careful analysis of hydraulic and structural consequences of such action.

Section II. Cofferdams

6-4. <u>General Schemes.</u> Cofferdams are temporary structures in the river providing an enclosure to permit the construction of the entire or a part of the navigation dam. In the following, a few typical cofferdam layout schemes are presented as illustrations of possible solutions. However, this does not

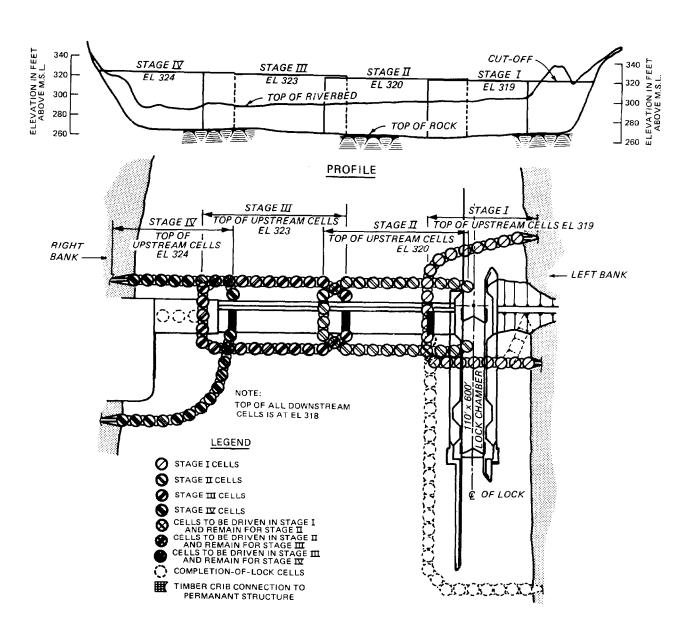


Figure 6-1. Four-stage diversion plan

imply that these are the only possible alternatives; the design should be tailored for specific local conditions. Of interest to the hydraulic engineer is the method of establishing the top elevation of the cofferdam based on the discharge and/or stage frequency-durationships of the river. This subject frequency relationships will be more fully discussed later in this chapter. A typical cofferdam layout for the construction of Greenup Lock and Dam on the Ohio River is shown in Figure 6-2. In this case, two- and three-stage cofferdam layouts were studied, and the three-stage layout was selected to avoid high currents adversely affecting navigation. Another possibility is shown in Figure 6-3 which indicates the construction plan for the replacement of Lock and Dam 26 on the Mississippi River. As shown, 6-1/2 gatebays were constructed during the first stage. River traffic used the opening between the first stage and the Illinois bank during this phase. The second stage involves the construction of the lock, and the remaining one-half gatebay, during which phase the river traffic uses the opening between the second stage cofferdam and the Illinois bank. Riverflows pass through the navigation opening between the second stage cofferdam and the Illinois bank and that portion of the spillway completed during the first stage. In the third stage, the remaining gatebays are constructed and the lock is available for river traffic. example of a typical cofferdam scheme is shown in Figure 6-4, which is the recommended layout for the Newburgh Lock and Dam project on the Ohio River. In this case, two alternatives were studied: a three-stage plan involving partial construction of the dam, and a two-stage plan which involves the construction of all 10 gatebays in a single cofferdam. It was found that the recommended two-stage construction was more economical, in terms of initial construction cost and resulted in a shorter construction period for the project. River traffic used the opening between the first stage cofferdam and the left riverbank during the first stage construction, and was directed to the locks upon completion of the first stage. In the second stage, the fixed-weir section of the project was constructed providing nine gatebays for flow passage.

6-5. Cofferdam Heights. Cofferdam layout and establishment of the cofferdam height are primarily oriented toward an economical plan to minimize hazards to construction activity, minimize costs of flooding on adjacent properties, and minimize costs of cofferdam construction. An economic analysis must be done for a range of cofferdam heights to find an optimum elevation. Factors which influence the decision include cofferdam cost for various heights, damage costs due to overtopping of the cofferdam by floods, costs due to delay in construction when the cofferdam is overtopped, risk of flooding during the anticipated construction period, cofferdam maintenance costs, construction and diversion plan that is selected, and anticipated length of time required to complete construction. The determination of the probability of occurrence for the various frequency floods may be based on the following formula:

$$P = \frac{N! p^{i} (1 - p)^{N-i}}{i! (N - i)!}$$

Where P is the probability of obtaining, in N trials, exactly i events having a probability of p of occurring in a single trial. For the special case where i = 0, the formula becomes:

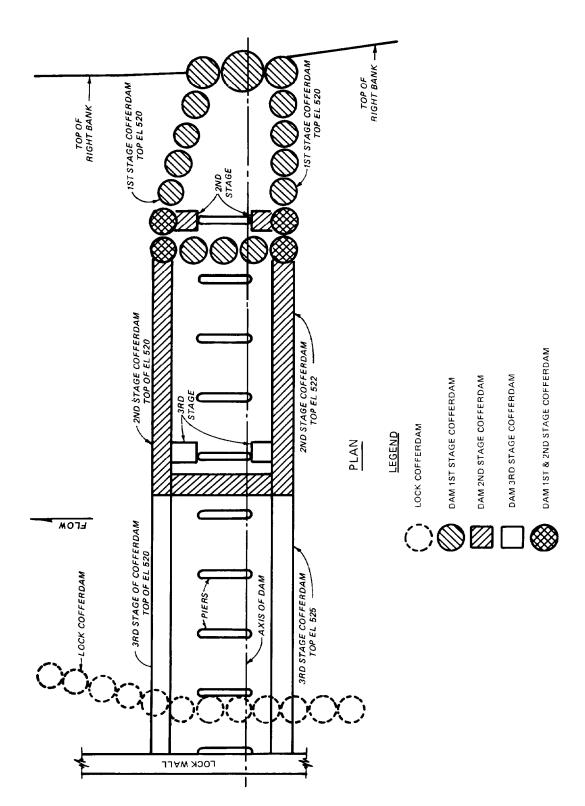


Figure 6-2. Cofferdam scheme, Greenup Lock and Dam, Ohio River


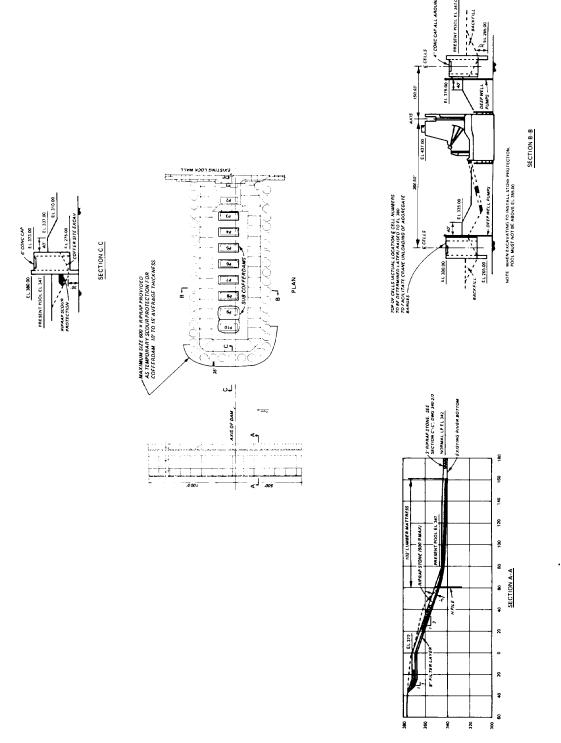


Figure 6-3. Cofferdam scheme, Newburgh Locks and Dam, Ohio River

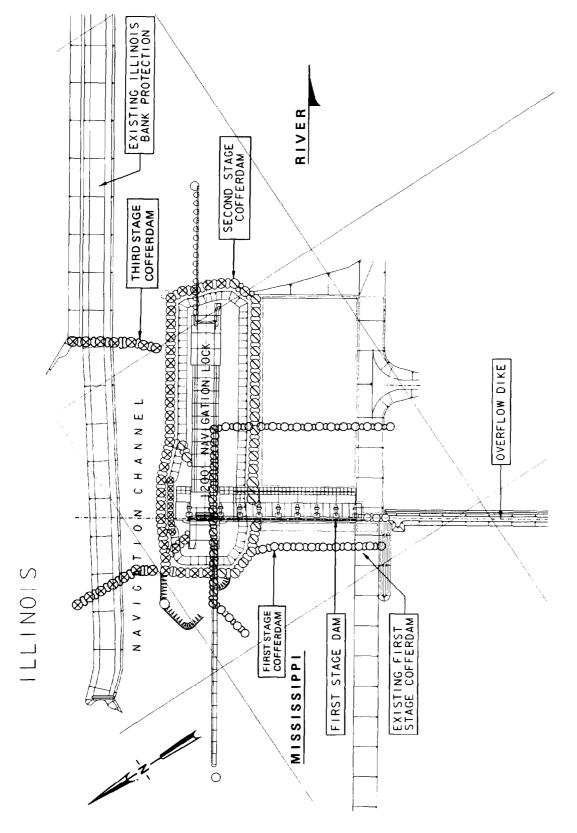

Cofferdam scheme, Lock and Dam 26, Mississippi River Figure 6-4.

$$P = (1 - p)^{N}$$

the probability of a flood event of magnitude p occurring zero times in N trials. Therefore the probability of event p occurring one or more times in N trials is:

$$P = 1 - (1 - p)^{N}$$

For example, in a project with a three-year construction period, N=3. To analyze the flooding for a lo-year flood, p=0.1. Therefore

$$P = 1 - (1 - 0.1)^3 = 0.271$$

or, a 27.1 percent chance that a lo-year flood will occur one or more times in a given three-year period. The total probable flooding cost for each height of cofferdam can be computed by the formula:

$$C_+ = P[(D)(C_1) + C_2]$$

where

 C_t = probable total flooding cost

P = probability of flooding

D = number of days construction area is flooded before cleanup operation can begin

 C_1 = investment losses per day while area is inaccessible

 C_2 = fixed cost of cleanup

- 6-6. Cofferdam Preflooding Facilities. When developing floods are so severe that cofferdam overtopping is predicted, scour damage and subsequent cleanup within the cofferdam can be minimized by preflooding the site. This can be accomplished by providing gated culverts or weir facilities with adequate capacity to raise the interior water level to near the river level prior to the time the river overtops the cofferdam.
- 6-7. Example Determination of Cofferdam Heights. The following example is similar to a design of the cofferdam height at the Columbus Lock and Dam on the Tennessee-Tombigbee Waterway. The estimated flooding costs, the flood damage costs, the comparative cofferdam construction costs, the method of duration analysis, and the high discharge duration curve are shown in Figures 6-5 to 6-9, respectively. In Figure 6-10, the estimated probable

FIXED COST PER FLOODING

Downtime	 10 days @ \$10,500/day	= \$105,000
Pumping and Cleanup	 10 days @ \$ 7,000/day	= \$ 70,000
Damage Cost	 Lump sum	= \$ 50,000
Investment Cost	 10 days @ \$ 3,000/day	= \$ 30,000
Liquidated Damages	 10 days @ \$ 500/day	x = \$ 5,000
		\$260,000

TOTAL COST PER FLOODING

 $$260,000 + [(D) \times ($10,500 + $3,000 + $500)]$

\$260,000 + (D x \$14,000)

where D = Duration of flood in days before pumping and cleanup can start

NOTES: Experience and professional judgment were used in estimating the cost for each of the items used in determining a realistic total cost for flooding of the cofferdam. The equipment downtime cost was based on the assumption that the cofferdam flooding would occur during peak concrete placement at which time the maximum amount of equipment would be on the job site. and cleanup cost was based on an average time of 10 days to pump out and clean up the protected area. This cost includes extra equipment for the pumping and cleanup crews. Damage cost was estimated considering equipment loss, duplication of work effort caused by berm and slope sloughing, wood form loss, and damage to prepared foundations. Investment cost is the estimated daily interest cost to the Federal Government during construction. Since the construction is on the critical path, downtime during the work phase will extend the total project completion time. This cost was derived by dividing the present estimated value for interest during construction by the construction period to get a one-day cost. The liquidated damages cost is the extra cost incurred by the Corps of Engineers for each day past the schedule completion date.

Figure 6-5. Estimated flooding costs

FLOOD FREQUENCY, YEARS

100	0.030	240,000	174.4	177.4	3.00	1	1.50	1.50	16.43	230,020	6,901	7,800	14,701
50	0.059	200,000	173.0	176.0	3.00	i	1.50	1.50	16.43	230,020	13,571	15,340	28,911
к	0.115	160,000	171.5	174.5	3.00	1	1.50	1.50	16.43	230,020	26,452	29,900	56,352
10	0.271	118,000	169.6	172.6	3.00	0.05	1.48	1,52	16.64	232,960	63,132	70,460	133,592
œ	0.330	110,000	169.3	172.3	3.00	0.07	1.47	1.53	16.75	234,500	77,385	85,800	163,185
v	0.421	98,000	168.6	171.6	3.00	0.11	1.43	1.55	16.97	237,580	100,021	109,460	209,481
ư	0.488	90,500	168.1	171.1	3.00	0.14	1.43	1.57	17.19	240,660	117,442	126,880	244,322
η	0.578	83,000	167.4	170.4	3.00	0.20	1.40	1.60	17.52	245,280	141,772	150,280	292,052
٣	401.0	74,000	166.4	169.4	3.00	0.29	1.36	1.64	17.96	251,440	177,013	183,040	360,053
	Probability (3-yr Const)	Q (cfs)	Stage (Elev)	Cofferdam (Elev)	Duration B %	Duration D %	Duration C $(B-D) + 2\%$	Duration A B - C %	Duration Days A × Const P	Duration Costs	Duration Cost × Prob	Fixed Costs × Prob	Flooding Costs

Natural ground level is 155 where dike will be breached for flooding of the construction area. Q=29,400 cfs Duration = 3.00% Downtime, investment loss, and liquidated damage cost per day = \$14,000 (Duration Cost). Fixed cost of flooding = \$260,000. NOTE:

Figure 6-6. Flood damage costs

TOP OF ELEVAT		COMPACTED FILL	STRIPPING	TOTAL COST OF VARIABLES
UPSTREAM	DOWNSTREAM	\$	\$	\$
169.5	168.5	406,100	15,400	421,500
171.5	170.5	510,500	17,200	527,700
173.5	172.5	626,500	19,000	645,500
175.5	174.5	754,400	20,900	775,300
177.5	176.5	893,800	22,700	916,500
179.5	178.5	1,047,200	24,500	1,071,700

Figure 6-7. Comparative cofferdam construction costs

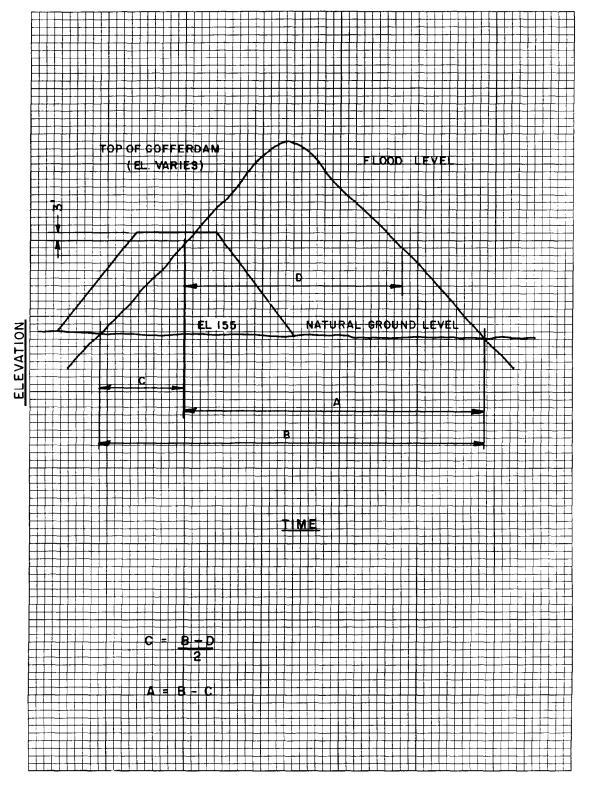


Figure 6-8. Method of duration analysis

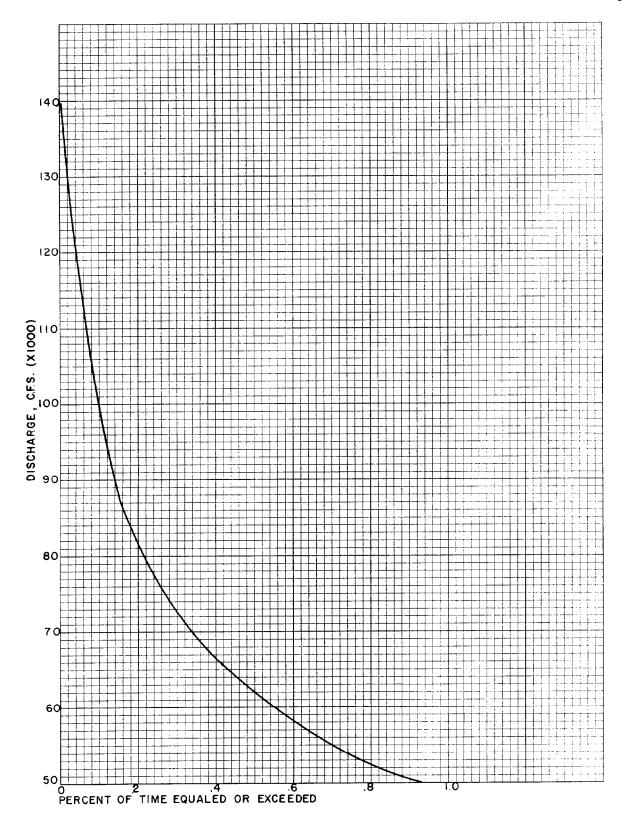


Figure 6-9. High discharge duration curve

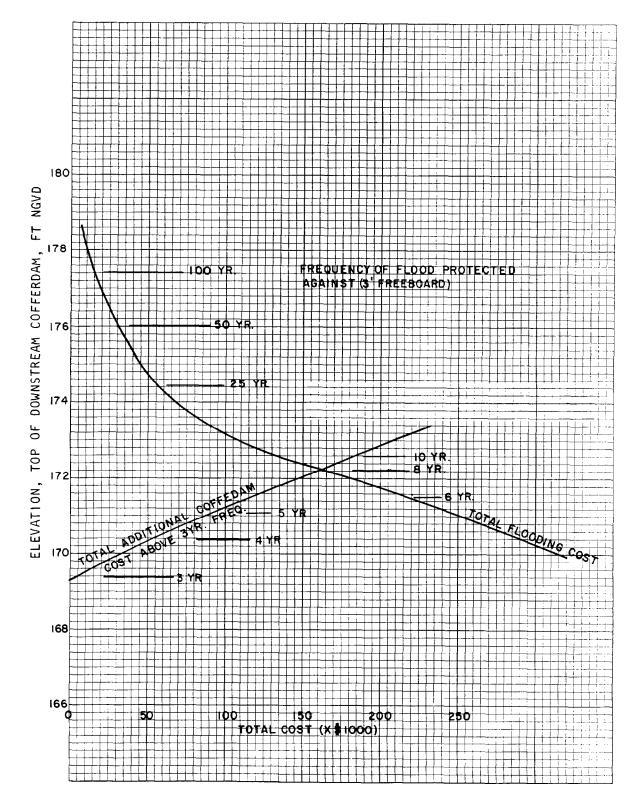


Figure 6-10. Cofferdam and flooding cost curves

flooding cost is compared with the total additional cofferdam cost required to provide protection above the three-year frequency flood level. Visual inspection of the curves indicates that the most economical cofferdam elevation will be near the 10-year flood level. It should be noted that the intersection of the two curves in Figure 6-10 has no significance because the beginning ordinate of the cofferdam cost curve is arbitrary. In Figure 6-11, the probable flooding cost reduction and the additional cofferdam costs were established by determining the slope of the total cost curves at incremental cofferdam heights. The curves show the rate of change in probable flooding cost reduction and the additional cofferdam cost for various cofferdam top elevations. The upper intersection between the two cost curves in Figure 6-11 represents the point of diminishing returns. In this example, the point is at elevation 172.9 which was arbitrarily rounded to 173.0. The design flood frequency was therefore set at 12 years.

6-8. Scour Protection. Each construction scheme must be carefully analyzed to ensure that scour protection is provided where necessary. Successful protection has consisted of timber mattresses or riprap both with and without filter blankets, depending upon the soil types and flow conditions. Physical and numerical models have been useful to assist in development of scour protection designs. The upstream riverward corner of the cofferdam is usually the critical point of scour potential. Wing extensions are sometimes added to the cofferdam to reduce velocity concentrations at this point.

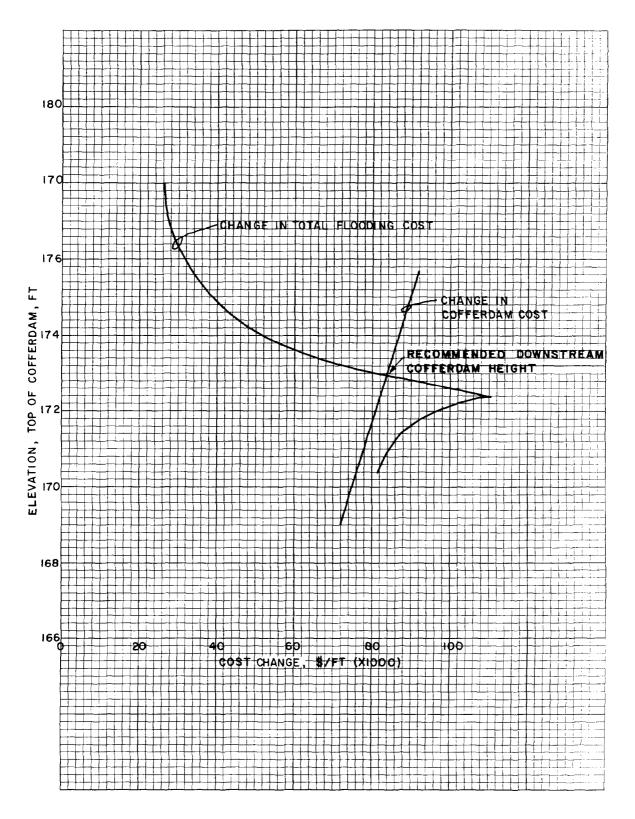


Figure 6-11. Cofferdam and flooding cost change curves

CHAPTER 7

PROJECT OPERATION

Section I. Normal Spillway Operations

- 7-1. <u>Maintenance of Navigation Pool Levels.</u> The purpose of maintaining a navigation pool on a river navigation project is to assure that the authorized navigable depth is available all the time at every point in the river controlled by the project. In general, the point farthest upstream from the project, which would be the next navigation dam upstream in a system, or the "head of navigation" for a single dam, will be critical in this respect. The minimum pool elevation at which the above purpose is met is usually defined as the "normal pool."
- <u>Uncontrolled Spillways.</u> These structures consist basically of a fixed-crest weir; a typical example is shown in Figure 7-1. The normal pool is defined as the upstream extension of the weir crest elevation for zero flow condition. The advantage of uncontrolled spillways is their simplicity of both operation and maintenance since the structure contains no moving parts (except for the locks) or equipment that could be subject to malfunctioning. The toe of the weir is subject to high-velocity, turbulent flows and therefore requires relatively frequent inspection to preserve the integrity of the foundation. An operational disadvantage of navigation projects with uncontrolled spillways is the increased possibility of pleasure boat accidents. drop in water surface at the weir is difficult to recognize from upstream, boats unfamiliar with the conditions may ram the weir instead of locking As riverflows increase, a pool elevation is reached where project navigation is suspended. In order to mitigate the effect of upstream flooding at uncontrolled spillways, locks are frequently used as floodways. Details of this special operation are described in EM 1110-2-1604.
- b. Gated Spillways. The normal pool elevation, consistent with its definition in paragraph 7-1, is maintained by the operation of dam gates. It should be noted that in case of multipurpose projects operated not only for navigation, other pool levels such as "minimum power pool" or "flood-control pool" may exist. These project operations are more complex than dams with navigation as their sole purpose. In the latter case, gates are operated as necessary to control all flows and to maintain a constant upper pool elevation (normal pool). At low dams (see paragraph 7-3b), a normal pool is maintained until the tailwater reaches the normal pool elevation at which time the gates are raised to maximum height and no further control. of the pool level is possible. If the river level rises still farther, an elevation may be reached at which navigation is suspended and the project will be prepared for flooding. A gate operation schedule should be prepared during the design stage. An example of Pittsburgh District's gate operation schedule for the Maxwell Lock and Dam on the Monongahela River is shown in Figure 7-2. The schedule should be consistent with the design and should reflect any operational constraint imposed on the structure by the design. A frequent problem is scour below the spillway apron induced by misoperation of gates, especially at low tailwater levels. The operation schedule should minimize adverse impact on navigation at the upper and lower lock approaches. In general, this concept requires the

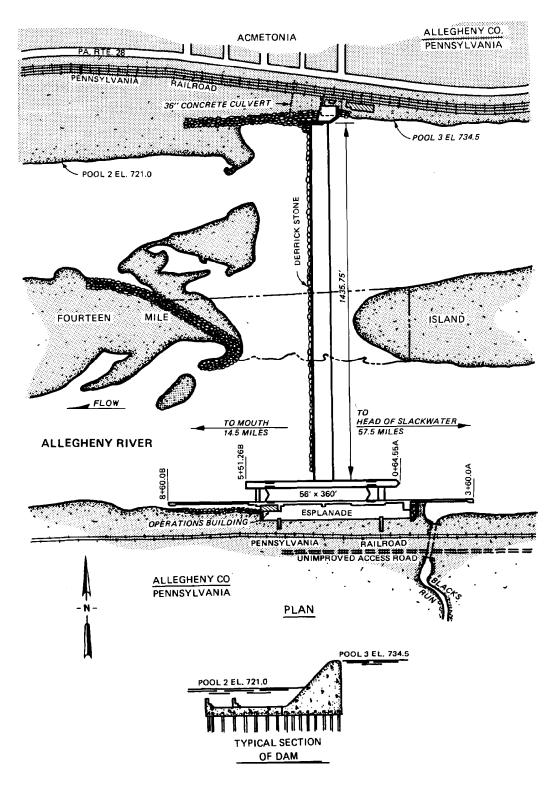


Figure 7-1. Uncontrolled spillway

NORMAL	UPPER	POOL	EL.	763	(GAGE	9.0)
MINIMIM	LOWER	POOL	EL.	743.5	5 (GAGE	9.0)

	Lower I	cool		Cate N	umbers and '	Types		Total	Upper Cage
Discharge	Elev	Cage	Double	Single	Single	Double	Double	Feet	in Feet
cfs	ft mal	ft	Leaf 1	Leef 2	Leaf 3	Leaf 4	Leaf 5	Open	Dam No. 7
0	743.5	9.0	GATES			•	CLOSED		9.0
2,900	743.8	9.3			1			1	10.3
5,300	7₩.0	9.5						2 3	11.0
8,150	744.5	10.0			2			3	11.6
10,800	744.9	10.4		1	_	1	L	4	12.0
16,100	745.8	11.3	1				11	6	12.9
22,200	747.1	12.6		l ₂		, 2	2	9	13.6
27,400	748.3	13.8	2		<u> </u>		1	12	14.2
33,700	749.6	15.1			4	4	L	16	14.9
39,300	750.8	16.3		4		 	3 4	20	15.4
45,500	752.1	17.6	4		J 6	•	L	24	16.0
50,900	753.3	18.8	<u> </u>	6		6 1	6	28	16.4
55,400	754.4	19.8	6) 8	L	ו	32 36	16.8
59,400	755.1	20.6	<u> </u>	J 8	0	8	L	50 40	17.1 17.4
63,000	755.8	21.3	8	0			า 8	40	17.8
66,800	<i>7</i> 56.4	21.9	ľ		J 10	10	L	48	18.1
69,500	757.1	22.6		10		1	10		18.3
72,000	757.6	23.1	10		ا 12	L	า 'ั	52 56	18.6
74,100	758.0	23.5		J 12	12	12	<u> </u>	60	18.8
76,000	758.4	23.9		12			12	64	19.0
78,100	759.0	24.5	12		14	14	<u> </u>	68	19.2
80,100	759.4	24.91	 	j 14		ן '		78*	19.6
83,800	760.2	25.7		14		L	ר 14	86*	20.1
87,400	761.0	26.5	14		j			94*	20.4
89,700	761.5	27.0		J 	GATES	• •		110*	20.7
92,400	762.0	27.5			VISED CLEA OF WATER				۵.,

No. 1 gate is next to lock. Gate openings are shown below the gate numbers; these openings are in feet from crest of dam to the bottom of gates. Any operation step may be made in parts for closer control. Two feet is the maximum desirable difference in opening of adjacent gates.

Figure 7-2. Gate operation schedule for Maxwell Lock and Dam

^{*} Effective opening raised clear of water assumed to be 22 feet. Gage readings at Dam 7 (upper) correspond to discharges shown at Maxwell.

t Desirable minimum tailwater for 1 gate fully open.

uniform distribution of gate openings across the structure to prevent the formation of dangerous eddies downstream. Finally, the attainment of low operation costs and enhancement of water quality at low flows are also important operating objectives. In summary, from the operation standpoint, the gated structure offers greater flexibility to attain project objectives; however, the operation is more complex and requires a higher degree of maintenance to minimize equipment malfunction than projects with uncontrolled spillways. Also, the consequences of navigation accidents on project operation are likely to be more severe (loss of pool due to barges lodged under gates).

- Movable Dams. At some locations, natural river discharges are sufficient during a portion of the navigation season (which could be continual throughout the calendar year, or extend over part of the calendar year only) to obtain the authorized navigation depth. This is an advantage from the operational standpoint since locking delays are eliminated. However, during periods of low discharges, the dam must be raised to assure sufficient depth for navigation. Movable dams are structures that accomplish this objective. An early version of movable dams were the wicket dams on the Ohio River, the majority of which are now replaced by gated structures. The wicket is a narrow wooden leaf that when raised, is supported in an inclined position by a prop and when lowered, lies flat on the foundation just downstream of the sill. A large number of wickets side by side constitute a movable dam. wickets are raised and lowered from a maneuver boat. A typical wicket dam is shown in Figure 5-18. The operation of the wicket dams in their original form is rather time-consuming and hazardous, especially during winter periods. Therefore this type of operation can be considered obsolete. An improved version of the wicket dam concept, utilizing remotely controlled hydraulic cylinders, has been built recently on the Seine River in France. A more modern type of movable dam has been proposed for the navigable pass portion of the single dam replacement structure at Olmsted on the lower Ohio River (Figure 7-3). For the preliminary design, a drum gate that is raised or lowered by the upstream hydraulic pressure was considered for the movable portion of the dam. The control is remote to eliminate any hazardous manual operation.
- 7-2. Low-Flow Periods. The operation of movable dams to ensure navigation depth during low-flow periods has been described in the previous paragraph. No special operation procedures can be implemented at fixed-crest dams during low-flow periods; however, projects with gated spillways can be operated to improve water quality during these periods. A study conducted on the Ohio River found that dissolved oxygen content downstream of navigation dams during critical low-flow periods can be increased by concentrated gate openings. An example of this operation is shown in Figure 7-4. Before implementing such an operation, a careful check must be made to ensure that concentrated gate openings will not result in downstream scour, eddy action, etc. A very special problem can arise in areas where during extremely low-flow periods sufficient water is not available for lockages. Provisions must be made for adequate storage under these conditions.

7-3. Flood Flow Periods.

a. <u>High Dams</u>. Navigation projects with high dams are usually

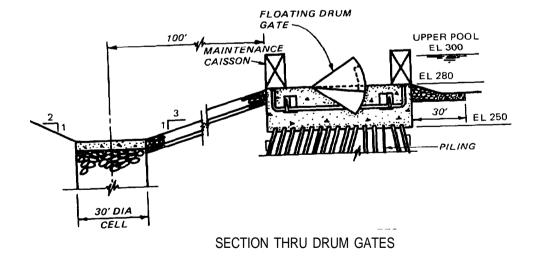


Figure 7-3. Movable dam

 1	2	3	Ga 4	tes 5	6	7	8	Approx Discharge cfs
1 3 5	1 3 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	1235555555555555555555	13555555555555555	12345555555555555555555555555	135555555555555	1355555555555555555	1 3 5 5 5 5	3,000 6,100 9,300 12,500 15,600 18,400 21,400 30,600 33,200 39,000 44,700 47,200 52,600 58,000 60,300 65,200 70,200 72,400 77,100 81,600 83,700 88,000 94,200 98,300 100,400

Note: Gate openings in feet.

Figure 7-4. Gate operating schedule for improved reaeration, Racine Locks and Dam

constructed in areas where the topography and lack of dense development in the river valley permit the utilization of greater lift heights, sometimes in excess of 100 feet. An important distinguishing feature of these projects from the low dams is that the tailwater has no effect on the operation of most high dams. Usually the project is authorized to operate to satisfy the demands of navigation, hydropower, and possibly flood control. Flood control is normally achieved by spillway gate operation. However, the gates only control that portion of the flow which is not used for hydropower generation. An example of a multipurpose high navigation dam is the Wheeler project on the Tennessee River operated by TVA (Figure 7-5). During flood periods, spillway gates are operated to pass flood flows until extremely high discharges are reached that the gates no longer control. At this project, the lock walls are above the maximum high-water elevation, theoretically rendering navigation possible at all times. As shown in Figure 7-6, the project is also operated for flood control by drawing the pool down to el 549 in anticipation of spring floods. The minimum pool is established by providing for authorized navigation depth.

- b. Low Dams. The operation of low dams during flood periods is controlled by both the tailwater and headwater. Spillway gates are raised for increasing spillway flows by maintaining the upper normal pool until the tailwater reaches that elevation. At this discharge, essentially open-river conditions exist and further increase in the riverflows cannot be controlled by project operation. If hydropower is part of the development, in contrast to high dams, power generation will be possible only during part of the year. Periods of flood flows are excluded due to insufficient head to operate the turbines.
- c. <u>Hinged Pool Operation</u>. Under normal spillway operations, the gates are adjusted to maintain the established normal pool level at all times except when flood stages exceed the pool level at the dam. Then the gates are fully opened. Hinged pool operations, which are limited to flood flow periods, involve opening the gates in excess of that required to maintain the pool. Thus


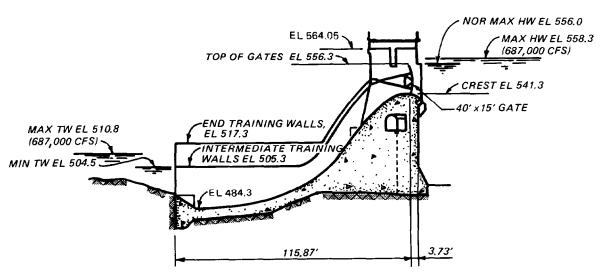


Figure 7-5. Multipurpose navigation project, Wheeler Dam, Tennessee

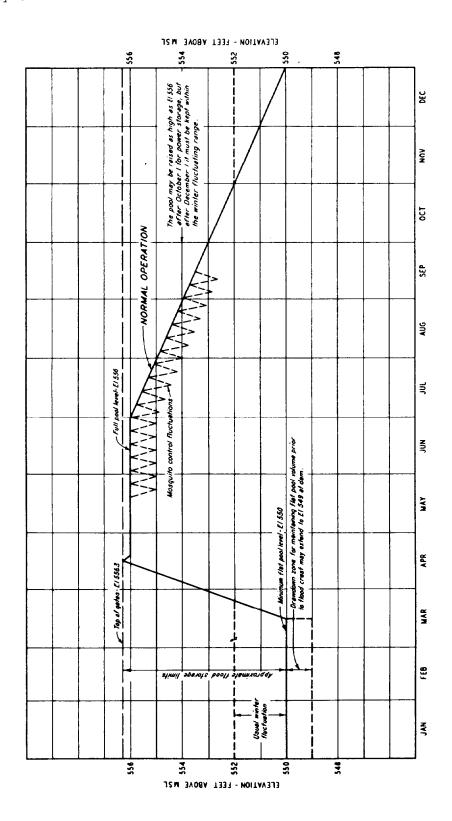

NOTES: Elevations apply only at dam. Maximum krel assumed for design of dam :[1558 3

Figure 7-6. Operating curve for pool elevations, Wheeler Dam, Tennessee

the lower reach of the navigation pool in the vicinity of the dam would be drawn down to below normal pool elevation. The amount of drawdown or "hinge" at the dam is controlled by the criterion of ensuring adequate navigation depth throughout the entire length of the pool. Three purposes for hinging pools and the consequences of doing so are described.

(1) Stage Control.


- (a) Purpose. The purpose is to provide navigation channel depth in the pool reach of the river for flows lower than a specified maximum discharge, at which the authorized navigation depth would exist naturally. Additionally, control stage limits exist at certain point or points within the pool that must not be exceeded for these range of flows. Thus, as discharges increase, approaching that specified maximum discharge, the pool at the dam must be lowered so stages at control point(s) upstream of the dam do not exceed the limiting stage.
- (b) Example. In the pool of Dam No. 26 on the Mississippi River, a nine-foot-deep navigation channel must be maintained during flow periods of 210,000 cfs or less. Additionally, stages at Grafton, Ill., approximately 15 miles upstream of Dam No. 26 must not exceed 420.0 feet NGVD. During minimum flows, the pool level at the dam is maintained at 419.0 feet NGVD. As discharges increase, dam gates are opened further and the pool is drawn down so as not to exceed the limiting stage at Grafton, Ill. When approaching a discharge of 210,000 cfs, the pool at the dam must be lowered to 414.0 feet NGVD to accomplish the above purpose. When flows exceed 210,000 cfs, all gates are opened fully and open-river conditions exist. It can be seen that a "hinge" of five feet exists at the dam (419.0 to 414.0 feet NGVD) as discharges increase from minimum flows to those providing uncontrolled navigation depth.

(2) Real Estate Acquisition.

- (a) Purpose. For some projects, hinging the pool can reduce the required amount of flowage easement acquisition because of lowered post-project flow-line profiles throughout the pool.
- (b) Example. For Pool No. 3 on the Red River Waterway Project, the criteria for real estate acquisition were the ordinary high-water line (OHWL) or the relationship of preproject versus postproject flow lines for any given discharge. Flowage easements were required where postproject flow lines were raised above both the OHWL and preproject flow lines for a given discharge. By hinging the pool, postproject flow lines can be depressed and the length of reach having flow lines above the OHWL can be reduced. Figure 7-7 illustrates the flow-line reductions that can be realized by hinging this pool.

(3) Pool Dredging Quantities.

(a) Purpose. During the recession period of flood flows, sediments tend to deposit in the middle portions of some pools. This occurs where the water-surface slope decreases because of the pool impoundment effects, and flow velocities are reduced. By hinging the pool, these deposits are carried

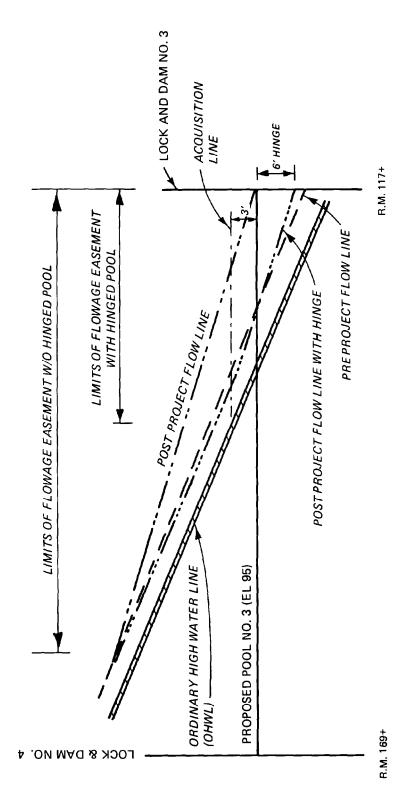

NOTE: Q = 100,000 CFS FOR THIS ILLUSTRATION

Figure 7-7. Hinged pool operation

farther downstream in the pool where postflooding depths are adequate for navigation without dredging.

- (b) Example. Pool hinging to reduce dredging quantities has been tested in several pools on the Arkansas River navigation system. These tests indicated a potential for significant dredging reductions in some pools. Maximizing benefits requires a determination of the optimum time to initiate and to terminate the hinging process for each pool. Additional prototype testing in each pool would be required to optimize potential benefits.
- (4) Hinged Pool Consequences. If hinged pool operations are anticipated on a navigation pool, several factors must be considered in the project design.
- (a) The upper gate sill to the navigation lock must be set low enough so that navigation depths are provided while operating in the hinged pool mode.
- (b) Velocities and crosscurrents in the upper lock approach will be more severe than under normal navigation pool conditions.
- (c) Tie-up facilities along the lock guide and guard walls must be usable at the lowered pool levels.
- (d) Port, docking, and other facilities located within the affected portion of the pool need to be designed to avoid serious grounding problems from the lowered pool levels. Water withdrawal intake structures along the pool would also need to be designed to operate properly under lowered pool levels.
 - (e) Sudden pool drawdowns can result in bank instabilities.
- (f) The increased complexity of operating the spillway gates for the hinged pool levels can lead to misoperations.

7-4. Ice and Debris Passage.

- a. <u>General.</u> A project operation plan needs to include methods of passing ice and debris. These methods can include both structural methods and operational procedures. See EM 1110-2-1612 for additional information.
- b. <u>Dam Gates.</u> Regulating gates on a dam structure can be used to pass ice and debris either by underflow or overflow. In the first case, the gates are opened sufficiently wide to create enough flow that accumulated ice and debris are pulled from the upper pool to the lower pool, to be carried from the structure by the current. The magnitude of opening for successful operation depends on local condition and experience; it is usually one-third to fully opened gate depending on tailwater level (see items 15 and 18). Hydraulic model tests give some indication of the required opening for new structures. One of the dangers of this operation is that scour holes downstream are often caused by this type of operation. To prevent occurrence of scour

during ice or debris passage, the operation of the gates should not be in conflict with limitations established during the design phase. Floating ice and debris can also be removed by creating an overflow condition, whereby gates are lowered below the normal pool thus permitting the flow to carry the debris over the gate. Naturally, this "skimming" type of operation can only be accomplished on projects equipped with submergible gates. Also, this operation is ineffective against frozen-over ice conditions since it does not create enough drawdown to eliminate support for sheet ice as opposed to the method of opening gates described above. At some projects on the Ohio and Mississippi Rivers, the use of submergible gates has been discontinued due to vibration problems. Both submergible tainter gates and roller gates are used in the North Central Division on the Illinois Waterways and the Mississippi River, respectively. Submergible tainter gates are proposed for several projects on the Illinois River and model studies will be conducted to ensure vibration-free operation.

- c. <u>Bulkheads.</u> Some of the newer navigation structures are equipped with emergency gates or sectionalized emergency bulkheads. The primary design function of these structures is to protect against loss of the pool in emergency conditions caused by inoperative dam or lock miter gates. However, they can also be used for routine and nonroutine maintenance and to pass ice and debris. Usually, at least one of the bulkhead sections should be designed for overflow. This unit is placed second from the top in the assembled closure structure, which is then lowered to the closed position with the dam or lock gates closed. When the emergency closure is in place, the dam gates are opened, the top unit of the emergency closure is lifted, and ice and/or debris is "skimmed" through the partially open emergency closure. As with the use of the gates, it is important to prevent scouring downstream of the structure.
- d. Other Operations. In areas experiencing ice problems, common practice is to operate dam and lock gates to keep elements from freezing, even when not needed for river traffic or normal pool regulation. Seals on tainter gates are especially vulnerable to freezing. However, oil-heated seal plates have worked successfully at some projects. Ice also builds up between lower chord members of tainter gates and piers due to stilling basin turbulence. Often this is a greater problem than the seals.

Section II. Special Spillway Operations

- 7-5. <u>Purpose.</u> Special spillway operations can be either intended or unintended. Intended operations may be due to such things as project repair, construction at the project or downstream, or grounded barges; unintended operation may be due to operator error, equipment failure, or tow impact with a dam.
- 7-6. Loss of Scour Protection. Failure of downstream stone protection below a stilling basin is an example of a condition that may require special operation. If the failure is localized below a limited section of spillway, reducing the opening of the spillway gates in that section or complete closing may be required until repair can be effected. Raising the tailwater elevation by operation of a downstream dam also may be effective in reducing the turbulence in the damaged areas. A combination may be required. Decreasing the

flow in one part of a spillway will increase the unit discharge in other sections of a run-of-river project without storage available to adjust the spillway discharge. This can cause increased stress to undamaged sections of the stone protection. The responsible individual will be required to decide on spillway operations that are in the best overall interest of the project, considering project protection, navigation needs, and safety.

- 7-7. Operator Error. Misoperation of spillway gates has the potential to create various problems with different degrees of seriousness. Outdrafts or adverse currents for navigation, or scour, can be created by the incorrect gate settings. Stone protection can be damaged or destroyed, as discussed in Section 7-6. Misoperation can cause abrupt changes in upper pool and tailwater elevations. It may also cause problems at adjacent locks or hydroelectric plants, such as inability to open lock lower miter gates due to a head differential across the miter gates. The changes in flows may cause problems, or require special operations, at upstream and downstream projects. The responsible individual will need to have the gate settings corrected as soon as possible after the misoperation is discovered. The recovery operation must be executed so that abrupt changes in stage that could cause problems are not created. A survey for damage should be conducted as soon as practicable after the recovery.
- 7-8. Equipment Malfunction. Many types of equipment malfunctions may require special operations in order to recover normal capability. Some examples are covered below. In any case, the responsible individuals will need to analyze the particularities of each case, and plan and execute necessary operations and repair, in order to return the facility to normal operational status while minimizing the impact on project functions during the recovery period.
- a. <u>Jammed Gates.</u> As in all cases, appropriate recovery procedures will depend on conditions and constraints existing at each given site. This may include placement of emergency closure in order to take the gate out of operation and adjustment of the remaining gate settings in order to compensate for the lost gate capacity. In general, it is important to correct the problem expeditiously in order to regain full operational capability and flexibility. It will be necessary for the emergency closure to be operable in flowing water.
- b. <u>Hoisting Machinery Breakdown.</u> Appropriate recovery procedures in this case may begin with the attempt to close the crippled gate, if possible. If this can be accomplished, placement of emergency closure may not be necessary. The responsible individual will need to know if the gate load is equally distributed on each side of the gate. If not, the operator runs the risk of causing additional damage when attempting to lower the gate. If the gate cannot be lowered, it may be necessary to install the emergency closure. Additional steps, as in paragraph a. above, may be required.
- c. <u>Equipment Vibrations</u>. Flow-induced vibrations have the potential for causing considerable damage to gates and other equipment. Vibrations are discussed in Chapter 5. Vibrations can vary from the nuisance level to a major, structurally damaging problem. Regardless of the perceived seriousness of the problem, vibrations observed by operating personnel should be brought

to the attention of higher authority for evaluation. Appropriate immediate action may be to check the seals or sill for loose or jammed materials. Serious vibrations may require closing of spillway gates or other appropriate operational change in order to stop the vibrations until there is opportunity for evaluation and correction. This may require additional gate changes, as in paragraph a. above, or other operational modifications appropriate to the instant circumstances.

7-9. Spillway Maintenance. Limited gate availability operation occurs when one or more gate bays are closed for maintenance or repair work on the gates. The most important consideration in this operation is that the remaining gate capacity should be sufficient to handle anticipated high flows without causing increased upstream stages exceeding that predicted in the design. If feasible, repair and/or maintenance work should be scheduled during low-flow periods. On some projects, locks could be used as floodways should an emergency develop during repair work if they have been designed for this purpose.

7-10. Emergency Operation.

- a. <u>General.</u> All navigation projects need to develop a contingency plan for access to spillway gates so closure can be made in case of an accident. However, it will not be possible to include all possible conditions because each navigation accident will be different from others.
- b. Navigation Equipment Collision with Spillway Gates and Piers. Potential for very serious damage to a navigation dam exists due to the presence of navigation traffic. Figure 7-8 illustrates an accident at Maxwell Lock and Dam on the Ohio River that occurred in December 1985. In the case of collision, damage can vary from the inconsequential to major damage, including loss of the navigational pool. Serious accidents are more likely to occur during high-water periods than during low water. Designers and operators should be aware of those conditions that are more likely to cause serious damage to the structure in case of collision. For spillway gates, the two positions presenting the least potential for damage at many projects are in the fully raised position, particularly if this is higher than barges or tows passing through gate bays, and in the fully closed position. A particularly vulnerable position is with the gates slightly below or slightly above water In a rising river situation, with consequent increasing gate openings, it should be required operating procedure, as well as a design criterion, that the gates should be raised to a position above the highest expected water level or above a potential damaging level due to runaway tows or barges. Designers may find it prudent to include remote operating capability in order to permit quick action on the part of operators during emergencies. In the process of developing an operating plan, the responsible individuals may want to require a staggered gate operation in order to reduce the potential for a current concentration approaching the spillway (e.g., gates 2, 4, and 6 should be raised one increment followed by raising gates 1, 3, and 5).
 - c. Emergency Closure. Two types of closure devices are common:
- (1) Bulkheads. The most common type of emergency closure for spillway gate bays is a bulkhead consisting of one or more sections and



Figure 7-8. Accident at Maxwell Lock and Dam, Ohio River

commonly constructed of welded, high-strength, low-alloy steel. It contains two or more horizontal trusses with lateral and longitudinal cross bracing and vertical tees between the chords of the trusses. A watertight skin plate generally provided on the upstream side, top and bottom seals, side seals, and roller assemblies complete the structure. The roller assemblies bear on bearing plates constructed in pier recesses. The vertical height of the structure may vary from three to twelve feet depending on design constraints of a specific project. Usually, several individual units are required to complete dam closure; some of these may be equipped with an overflow plate attached to the top truss. The purpose of such design is to utilize bulkheads for flushing ice and debris, when necessary. The bulkheads should be designed for placement in flowing water. Local geometry may make designs uncertain, so hydraulic model tests may be required to verify success. Most designs do not permit water flowing over and under the bulkhead units during lowering. Also, the stacking of more units may be required for successful placement on some projects. The units can be stored in a dogged position over the dam. latter case, an overhead gantry crane is used to transport the individual units to the gate to be closed. The first unit is dogged over the bay and the next unit is moved from storage, latched on the first one, and then the assembly is lowered and dogged a second time. Additional bulkhead units are latched to the assembly until complete closure is achieved.

(2) stop Logs. Stop logs usually consist of wooden beams that can be placed in the event of gate failure in recesses upstream of spillway gates. Generally, however, operating heads on the dam must be reduced before placement. Since this arrangement would result in partial or total loss of pool, they cannot be considered a true emergency closure. It should be noted

EM 1110-2-1605 12 May 87

that the bulkheads described in the previous paragraph are sometimes designated as stop logs.

d. <u>Drawdown.</u> Requirements for low-level discharge facilities for drawdown of impoundments are given in EM 1110-2-50. Such facilities may also provide flexibility in future project operation for unanticipated needs, such as major repairs of the structure, environmental controls, or changes in reservoir regulation.

CHAPTER 8

REPAIR AND REHABILITATION

- 8-1. <u>General.</u> Navigation dams will require major repairs, complete rehabilitation, or replacement when normal maintenance becomes excessive or structural integrity is threatened. Repair or rehabilitation is generally less expensive than replacement except where there are major structural stability problems. Specific repair and rehabilitation methods are presented in the REMR notebook (item 27).
- 8-2. <u>Design Life.</u> The major rehabilitation goal is to extend the useful life of the project for 50 years. When a 50-year design life is not possible, a shorter design life can be recommended with suitable justification. Al though the design life of most projects is 50 years, the practical usable life is much longer.
- 8-3. <u>Modernization Features</u>. Modernization items should be considered in any rehabilitation plan. These items are intended to make the structure comparable to a state-of-the-art replacement. Modernization items will be evaluated based on faster operating time, safety, reliability, and reduced manpower needs. Modernization items can include the following:
 - a. Modern machinery.
 - b. Modern electrical equipment.
 - c. Remote controls.
 - d. Television surveillance system including audio in some instances.
 - e. Emergency closure.
 - f. Adding gates to ungated spillways.
- 8-4. <u>Typical Repair and Rehabilitation Items.</u> The following are common items for major navigation dam rehabilitation projects:
 - a. Dam Stability.
 - (1) Replace upstream and downstream scour protection.
 - (2) Tendons through structure into foundation.
 - (3) Cutoff of dam underseepage.
 - b. Discharge Capacity.
 - (1) Additional gates.
 - (2) Overflow dikes.

- (3) Raise dam.
- c. <u>Ice and Debris Control.</u>
 - (1) Submerged gates.
 - (2) Control booms.
 - (3) Air screens.
 - (4) Gate heaters.

d. Replacement in Kind.

- (1) Resurface concrete surfaces.
- (2) Repair or replace gates.
- (3) Fix gate anchorages.
- (4) Replace embedded metal.
- (5) Electrical and mechanical equipment.

8-5. Scour Protection.

- a. <u>Background.</u> Inspections of the Corps of Engineers navigation dams (over 200) often show large scour holes downstream from the stilling basin. At some projects, the scour hole had undercut the stilling basin foundation to a point where remedial work was necessary. These scour holes are often caused by single gate operation to pass drift or ice during low tailwater conditions. Single gate operation produces jet flow that is constricted and intensified by return eddy currents in the stilling basin. Guidance for evaluation of major rehabilitation of existing projects follows.
- b. Existing Project Design. Repair of existing projects requires evaluation of the same conditions listed in paragraph 8-4. However, remedial work is usually directed to the downstream protection because of the high cost of enlarging existing stilling basins. Design life of the remedial work can be based on judgment of how the original project performed. Hydraulic model studies are usually needed to verify the final design.
- c. <u>Consequence of Failure</u>. An analysis of the consequences include repair and replacement costs and lost navigation benefits as well as loss of life and property. Very conservative design conditions are usually selected for a project on a busy waterway with sizable downstream population.
- d. <u>Design Rationale.</u> This guidance must be site-adapted to specific project conditions. The design engineer is responsible for developing a safe, efficient, reliable, and least-cost plan with adequate consideration of environmental and social impacts. Design innovations based upon sound judgment that are well documented are encouraged.

- e. <u>Fixed-Crest Dams.</u> Scour downstream from fixed-crest dams is often caused by high velocity and excessive turbulence exiting the spillway apron. Modifications to the existing dam are often required before a suitable scour protection plan can be implemented. If there is evidence of piping of underlying materials through the stone protection, the cause may be fluctuating pressures or excessive ground water pressure. The repair should consider appropriate filters.
- f. Gated Structures. Gated structures usually have a stilling basin that dissipates energy adequately when the project operation schedule is not violated. Scour downstream from these structures is usually caused when the structure is misoperated due to ice or debris passage and occasionally navigation accidents. A typical example would be a single gate that is raised higher than the operation schedule allows in order to pass ice through the structure. Generally during periods when ice passage is required, the tailwater is very low or at minimum elevation. The increased discharge due to the gate being raised higher than normal and the low tailwater cause significant turbulence in the downstream channel oftentimes resulting in severe scour and failure of the stone protection. Another flow condition that causes scour downstream from a gated structure is an undulating jet. This occurs when high tailwaters force the flow entering the basin to undulate and ride the surface of the tailwater through the basin and then plunge through the tailwater after leaving the basin. The plunging jet oftentimes is strong enough to reach the streambed or the stone protection and cause scour.
- g. Methods of Protection. Some Corps districts have already begun to repair the scoured areas below navigation dams using graded stone protection and grout-filled bags. Site-specific model studies are oftentimes used to select an appropriate scour protection plan. Graded stone protection has been used by the St. Paul District on many of their navigation projects located on the upper Mississippi River. Model studies on some of these projects revealed that if the existing scour holes were armored with a large graded stone the structure could be protected. Grout-filled bags were used by the Pittsburgh District at Emsworth Dam on the Ohio River. The bags were used as an emergency replacement for large rock that probably failed during ice passage. Sunken barges filled with grouted rock are being considered for scour repair at Dam 2 on the Arkansas River. This repair method has the advantage of being able to be placed in the wet.
- 8-6. Repair and Rehabilitation Model Studies. The following model studies for major rehabilitation have been conducted by WES to address repairs to scour protection:

Pro	ject	Feature	Problem	Recommendation
Arkansas Dams	River	Spillway gates	Gate vibrations	Remove seals on the bottom of gates. Projects requiring bottom gate seals should use Type D in Figure 5-19

Project	Feature	Problem	Recommendation
Cheatham Dam	Spillway gates	Modify partially submergible gates to lift gates	Retain original gates and modify the sill and trajectory (Add 1.2 feet to sill elevation and an x ² = 26.8y trajectory over the original 1-on-1 slope)
Upper Miss. River Locks No. 2-10	Scour repair downstream Stilling basin Gated structures	Excessive scour during past forty years of operation	Provide additional scour protection by underwater placement of quarrystone and graded riprap as determined in model tests
Montgomery Dam, Ohio River	Scow repair down-stream Stilling basin Gated structure	Excessive scour	Provide better toe protection and filter
Emsworth Dam, Ohio River	Scour repair downstream Stilling basin Gated structure	Excessive scour	Provide protection with large riprap or grout-filled begs
Allegheny, Ohio, and Monongahela Rivers	Scour downstream from stilling basin or structure Uncontrolled structures	Excessive scour	Provide protection with large riprap, grout-filled bags, sunken barges filled with grouted riprap, and/or modify structure
Dashields	Scour repair Uncontrolled structure	Excessive scour	Provide protection with large riprap and modify stilling basin
Pike Island, Ohio River	Scour repair Gated structure	Excessive saw	Provide protection with large riprap
L&D No. 2 Arkansas River	Scour repair Gated structure	Excessive scour due to barge accident and low tailwater	Sunken barges filled with grouted riprap

APPENDIX A

BIBLIOGRAPHY

- 1. American Society of Mechanical Engineers. 1958. "American Standard Letter Symbols for Hydraulics," ASA Y10-1958, New York.
- Basco, D. R. 1970 (May). "An Experimental Study of Drag Force and Other Performance Criteria of Baffle Blocks in Hydraulic Jumps," MP H-70-4, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 3. Cox, R. G. 1972 (Jun). "Pertinent Data on Spillway Tainter Gates for Corps of Engineers Projects," MP H-72-7, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 4. Glenn, H. T. 1976 (Apr). "Interim Report on Tainter Vibrations at Barkley Dam" (unpublished report), US Army Engineer District, Nashville, Nashville, Tenn.
- 5. Grace, J. L. 1964 (Jun). "Stability of Riprap and Discharge Characteristics, Overflow Embankments, Arkansas River, Arkansas," TR 2-650, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 6. Grace, J. L. 1964 (Sep). "Spillway for Typical Low-Head Navigation Dam, Arkansas River, Arkansas," TR 2-655, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 7. Hart, E. D., and Hite, J. E., Jr. 1979 (May). "Prototype Gate Vibration Tests," TR HL-79-8, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 8. Hite, J. E., Jr., and Pickering, G. A. 1983 (Aug). "Barkley Dam Spillway Tainter Gate and Emergency Bulkheads, Cumberland River, Kentucky," TR HL-83-12, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 9. Jones, H. W. 1977 (Jun). "Manual for a <u>Conversationally Oriented Real-Time Program-Generating System (CORPS)," Unnumbered Report, US Army-Engineer Waterways Experiment Station, Vicksburg, Miss.</u>
- 10. Markussen, J. V. "Red River Lock and Dam No. 2, Draft Report, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 11. Maynord, Steve T. (1986). "Open Channel Riprap Design," Proceedings of the Third International Symposium on River Sedimentation, Jackson, Miss.
- 12. Ortaono, L. 1974 (Jan). "Issues in Water Resources Impact Assessments," <u>Journal</u>, <u>Hydraulics Division</u>, <u>American Society of Civil</u> Engineering, Vol 100, No. HY1, Proc Paper 10292, pp 173-187.

- 13. Oswalt, N. A. 1974 (Oct). "Spillway for Aliceville Lock and Dam, Tombigbee River, Alabama, TR H-74-10, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 14. Oswalt, N. R. 1977 (Jun). "Red River Waterway, La., Tex., Ark., and Okla., Mississippi River to Shreveport, La., Reach, Lock and Dam No. 1," TR H-77-13, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 15. Oswalt, N. R., and Pickering, G. A. 1973 (Oct). "Spillway for Lock and Dam 26, Mississippi River, Missouri and Illinois," TR H-73-15, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 16. Oswalt, N. R., and Pickering, G. A. 1974 (Nov). "Spillway for Columbus Lock and Dam, Tombigbee River, Alabama," TR H-74-13, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 17. Pickering, G. A. 1971 (Jun). "Spillway Gate Vibrations on Arkansas River Dams, Arkansas and Oklahoma," TR H-71-5, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 18. Pickering, G. A., and Grace, J. L., Jr. 1965 (Dec). "Spillway for: Cannelton Locks and Dam, Ohio River, Kentucky and Indiana," TR 2-710, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 19. Price, James T. 1965 (Apr). "Flow-Induced Vibrations Experience of TVA with Hydraulic and Other Structures," <u>Civil Engineering</u>, Vol 35, No. 4, p 61.
- 20. Pugh, C. A. 1977 (Apr). "Spillway Vibration, Pressure and Velocity Measurements, Ozark Lock and Dam, Arkansas River, Arkansas," TR H-77-6, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- 21. Schmidgall, Tasso. 1972 (Jan). "Spillway Gate Vibrations on Arkansas River Dams," Journal of the Hydraulics Division, ASCE, Vol 98, No. HY1.
- 22. Schmitt, Robert W. 1969 (Aug). "Simulation of Flow Through Broad Crest Navigation Dams," Thirteenth Congress of the International Association of Hydraulic Research, Vol 1, Subject A, Japan.
- 23. Simmons, William P. 1967 (Mar). "Experiences with Flow-Induced Vibrations: <u>Journal of the Hydraulics Division</u>, Vol 91, No. HY 4, p 185, 6 Jul, 1965 and CLOSURE thereto in Vol 93, No. HY 2, p 45.
- 24. Thomas, William A. 1969 (Mar). "Interim Report on Vibration of Spillway Gates" and Supplement No. 1, "Natural Frequencies" (unpublished report), US Army Engineer District, Little Rock, Little Rock, Ark.

- 25. Thomas, William A. and McAnally, William H., Jr. "Users Manual for the Generalizer Computer Program System Open-Channel Flow and Sedimentation Tabs-2" Department of the Army, Waterways Experiment Station, Corps of Engineers, Vicksburg, Miss.
- 26. US Army Corps of Engineers. 1981 (Dec). "The Streambank Erosion Control Evaluation and Demonstration Act of 1974, Section 32, Public Law 93-251," Final Report to Congress.
- 27. US Army Corps of Engineers, Waterways Experiment Station. 1985. "The REMR Notebook," Vicksburg, Miss.
- 28. US Army Corps of Engineers, Water Resources Support Center, "HEC-6 Scour and Deposition in Rivers and Reservoirs, Users Manual," The Hydrological Engineering Center, Davis, Calif.
- 29. US Army Engineer District, Little Rock. 1960 (May). Arkansas River and Tributaries, Arkansas and Oklahoma, Project Design Memorandum No. 5-3, "Navigation Channel Appurtenances, Normal Pool Elevation and Dam Sites"; Little Rock, Ark.
- 30. US Army Engineer District, Louisville. 1985 (Jun). "Submergible Gate Use Within the Corps," Louisville, Kentucky.
- 31. US Army Engineer Institute for Water Resources, CE. 1972 (Jun). "An Analysis of Environmental Statements for Corps of Engineers Water Projects," IWR Report 72-3, Fort Belvoir, Va.
- 32. US Army Engineer Waterways Experiment Station. 1961 (Dec). "Swellhead Effect of Navigation Structures," MP No. 2-468, Vicksburg, Miss.
- 33. Working Committee on Federal Construction, Washington, DC. 1968 (1 Nov). "Report to the Vice-President and to the President's Council on Recreation and Natural Beauty."

Selected References

Petersen, Margaret S. 1986. "River Engineering," Prentice-Hall.

Schumm, Stanley A. "The Fluvial System," John Wiley & Sons, New York.

Shen, H. W. 1971. "River Mechanics," Colorado State University, Fort Collins, Colorado.

Simons, Li, & Associates. "Engineering Analysis of Fluvial Systems," Colorado State University, Fort Collins, Colorado.

Straub, L. G. 1935. "Missouri River Report," House Document 238, Appendix SV, US Army Corps of Engineers, to 73rd US Congress, 2nd Session.

Toffaleti, F. B. 1969 (Jan). "Definite Computations of Sand Discharge in Rivers," J of the Hydraulic Div., ASCE Vol 95, No. HY 1, pp 225-246.

Vanoni, V. A. Ed. 1975. "Sedimentation Engineering, ASCE Manual 54," American Society of Civil Engineers, New York.

APPENDIX B

NOTATION

Symbol	Term	Units
A	Cross-sectional area	ft ²
В	Crest elevation - stilling basin apron elevation	ft
B _c	Width of horizontal portion of broad-crested weir	ft
С	Discharge coefficient (subscript denotes type) Isbash coefficient Cost or losses (subscript denotes type)	 \$
C_{G}	Top of gate elevation - crest elevation	ft
d	Depth	ft
d_1	Depth before hydraulic jump	ft
d_2	Depth after hydraulic jump	ft
D	Number of days construction area is flooded before cleanup operations can begin	
D ₅₀ (MAX) I D ₅₀ (MIN)	Riprap diameter at which 50 percent is finer by weight. MAX and MIN refers to the upper and lower limits for the allowable gradation.	ft
D ₁₀₀	Maximum riprap size	ft
D_{G}	<pre>Drop control = top of gate elevation - lower pool elevation.</pre>	ft
F	Froude number = V/\sqrt{gd} (subscript denotes type)	
g	Gravitational acceleration	ft/sec ²
G_{O}	Gate opening = vertical distance between gate lip and spillway crest.	ft
Н	Energy head on spillway crest = upper pool elevation + $V^2/2g$ - crest elevation	ft
h	Height of tailwater above spillway crest	ft
H_g	Head on gate q H - $G_{o}/2$	ft
h_b	Height of baffle blocks	ft

Symbol	Term	Units
i	Number of event	
k	Spillway coefficient of contraction in d'Aubuisson equation	
L	Length of spillway crest	ft
L_1	Distance from beginning of stilling basin to upstream face of the first row of baffles	ft
L $_2$	Distance from beginning of stilling basin to beginning of end-sill upslope	ft
N	Number of trials	
Р	Probability	
Р	Probability, approach depth	
Q	Discharge	cfs
q	Unit discharge	cfs/ft
R	Radius	ft
$\mathrm{SUb}_{\mathrm{G}}$	Gate submergence = upper pool elevation - top of gate elevation	ft
TW	Tailwater elevation	ft, NGVD
V	Average velocity = Q/A (subscript denotes type)	ft/sec
V_{\circ}	Initial free jet velocity	ft/sec
W $_{50}$	Riprap weight at which 50 percent is finer by weight	lb
X	Horizontal or longitudinal coordinate or distance	ft
Y	Vertical or transverse coordinate or distance	ft
АН	Difference between headwater and tailwater elevations = H - h	ft
Υ _W	Unit weight of water	lb/ft ³
Ϋ́s	Unit weight of stone (saturated surface dry)	lb/ft ³
π	Constant = 3.1416	

APPENDIX C

NAVIGATION DAM MODEL AND PROTOTYPE STUDY DATA

- 1. <u>Introduction.</u> The availability of data from Corps of Engineers hydraulic model and prototype investigations of navigation dams is summarized in Table Cl. This information was obtained from a detailed review of 120 reports on model and prototype studies (1930 to 1984) by the St. Paul District, Bonneville Hydraulic Laboratory, and Waterways Experiment Station. These reports are listed in the accompanying bibliography. The organization and use of Table Cl are described in the following paragraphs. The data were not analyzed or evaluated with regard to quality, present design practice, etc.
- 2. <u>Design and Operational Variables.</u> A list of 221 hydraulic design and operational variables or significant features of navigation dams was derived from a review of such items in various designs of dams used at CE locks. This list is organized in an upstream-to-downstream order and has a numbering sequence for easier manipulation in a digital computer. The major divisions of the list include:

21000 UPSTREAM APPROACH
22000 CONTROL SILL
23000 GATES AND BULKHEADS
24000 STILLING BASIN (APRON)
25000 DOWNSTREAM CHANNEL

A listing of operational variables is included with each major division in Table Cl rather than in a separate division in order to group more closely the aspects of the dam operation with their related design features. The 20 "NOTED ITEMS" include special items peculiar to the specific projects and are identified in the notes at the end of Table Cl.

- 3. <u>Test Reports.</u> Each column heading in Table Cl includes a very brief identification of the project and a brief notation of the report number (full title in the Bibliography to this Appendix). All of the 120 reports are available on loan from the WES Technical Library. The initial letter rather than number characters in the column numbers (A01 to B21) was used for easier identification in a digital configuration for computer file manipulation.
- 4. <u>Types of Data in Reports.</u> The types of performance data available in each report and pertaining specifically or generally to the various design and operational features investigated are indicated by the following letter symbols in Table Cl:
 - T time-related data
 - O discharge, including coefficients
 - U stilling basin performance, flow regime, appearance
 - H hawser force on tow

- D tow displacement, unrestrained by hawsers
- V local velocities (surface, internal, bottom)
- C surface currents, including vortices
- N effects on navigation
- B boils, or surface turbulence
- W waves
- Y water-surface elevation profile
- S surges or oscillations
- I internal flow pattern or flow distribution
- E erosion pattern, profile or depth
- R riprap performance (scour, stability)
- Z local average piezometric pressures
- P local transient or fluctuating pressures
- L losses or differences (head, pressures)
- F mechanical forces or torque
- A vibration, bouncing
- X other data (see last line of NOTED ITEMS at end of Table Cl)
- 5. <u>Comments</u> The following comments result from observations during the compilation of Table Cl and may be of interest and/or assistance to users searching for available test data pertinent to their design problems.
- a. Consideration of both the design and operational variables of the feature under investigation, both more general and more specific identification of the variables, and related items or systems in Table Cl may aid in finding applicable data that might otherwise be missed.
- b. The listing of operational variables at "division level" in Table Cl and the compilation process may have resulted in some inappropriate entries of types of data relative to design variables. This would most likely occur where a report table or illustration includes several kinds of design and operational variables.
- c. Variables 24200 Apron, 25100 Channel, and 25121 Invert El were given data references for most of the citations involving spillway performance. Although there may not have been any design variations in the apron or

channel, they are locations of primary interest for most aspects of spillway operation.

- d. Studies of a few nonnavigation dams were included in the listings because of those projects' similarity to navigation dams in general design and/or operation. Some data on fishways and construction cofferdams were noted if such were included in the reports, but all available studies on these items were not reviewed.
- 6. <u>Detailed Test Data Listings.</u> The LINE NO'S correspond to those 221 numbers assigned to the design and operation variables. The TYPE OF DATA symbols correspond to those given in paragraph 4 above. The FORMAT symbols are:
 - T numbered tables
 - P numbered photographs
 - D numbered drawings (plates)
 - F numbered figures (covers all illustrations in St. Paul District reports)
 - W text paragraphs (or pages if unnumbered paragraphs) containing information not indicated by the tables, photographs, drawings, or figures.

The LOCATION IN REPORT numbers and letters are those of the pertinent tables, photographs, drawings, figures, and/or paragraphs in that particular report.

- 7. In addition to the indicated tables, photographs, drawings, and/or figures having data pertinent to a specific design and/or operational variable, the user should refer to those parts of the text where these data items are discussed. The comment in subparagraph 5b above also applies to the detailed data listings. Also, variations in design and/or operational variables from table to table, photograph to photograph, etc., rather than in individual tables, photographs, etc., are covered by listings of all the related data item location numbers. The user should compare variables from item to item as well as in a single item.
- 8. A total of 20,067 location citations was derived from a total of 4,930 single- or combined-item references (tables, photographs, drawings, figures, text) in the 120 reports. The item location numbers are referenced in the Bibliography to Appendix C (A01, B01, etc.)

TABLE 1 NAVIGATION DAM MODEL AND PROTOTYPE STUDY DATA

PAGE SEQUENCE FOR TABLE 1

DESIGN AND OPERATIONAL		TEST	REPORT COI	LUMN NUMBE	RS	
VARIABLES	A01 TO A20	A21 TO A45	A46 TO A65	A66 TO A90	A91 TO B11	B12 TO B36
21000 TO 21990	1	2	(3)	4	5	6
22000 TO 22990	7	(8)	9	10	(1)	12
23000 TO 23990	13	14	15	16	(17)	18
24000 TO 24760	(19)	20	21)	22	23	24
24900 TO 25400	25	26	27	28	29	30
25900 TO 25990 AND "NOTED ITEMS"	31)	32	33	34	35	36
	FACIN	G PAGES	FACING	PAGES	FACING	PAGES

- 1. SELECT DESIGN AND/OR OPERATIONAL VARIABLE(S) OF INTEREST AND NOTE LINE NUMBER(S) (21000 TO 25990).
- 2. TRACE SELECTED LINE(S) ACROSS APPROPRIATE TABLES AND NOTE WHICH REPORTS (COLUMNS) CONTAIN TYPES OF DATA (T,Q,U, ETC.) OF INTEREST.
- 3. SEE LAST PAGES OF TABLE 1 FOR DESCRIPTIONS OF NOTED ITEMS AND X'S,
- 4. SEE BIBLIOGRAPHY FOR FULL TITLES OF REPORTS.
- 5. SEE WES MP HL _____ FOR DATA LOCATIONS WITHIN REPORTS.

EM 1110-2-1605 12 May 87

DESIGN AND OPERATIONAL VARIABLES

		A01	A02	A03	A04	A05	A06	A07	BOA	A09	A10	Al1	A12	A13	A14	A15	A16	A17	A18	A19	A20
0		6	i i	5	I.B					\$ £		Cheatham Emergency Dam TM 2-358		Ð	Gavin's Point Spillway TM 2-404	tes -	de, Z	3 5 111		Old River O'bank Panel Gates TR 2-491	
	PROJECT AND REPORT	op8u	ngdo Buc	opgu	r S	ver				E a	Į,	Dan	Gate	rlan	olat	ٷٷ	효효	Pt to		es es	. 5
	ROJE PR	E Ki	Z Sec	es 1-3	ucie 3-1	9 F 20 	- A	tone es 243	252	35 gr 28	340 340	38 g	way 381	umbe 386	e is	iver -Lea	iver Ch	1ver 01 S 447	or 185	iver Gat 491	1,4er
01	DESIGN AND PERATIONAL VARIABLES	pill M 11	ubae H 11	Possum Kingdon Baffles TM 111-3	1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1. 1	ante pilli M 16	Pill Pill Pill	Iues affi	0 E	Portra	# G F	heat merg M 2-	heat pill M 2-	ен С &D М 2-	avin pill M 2-	1d R ulti R 2-	Id R nstr R 2-	1d R ontr R 2-	arri pill R 2-	ld R anel R 2-	Old River Closure Dam TR 2-496
├	JPSTREAM APPROACH	A W P	E OF	EME	NJE	<i>ज∞</i> <u>⊨</u>	3 6 5	m m F-	6 7 E	E OF	ㅋ그는	១៨⊨	S & F	N J	ONF	OXH	400	OOF	a o ⊢	Oar	301
21100	Channel		 	 	VC .	-	QY		-		U VC		QYL		QVCB			UC	-		
21110	Direction		1	├	WE		QUV		-	ļ	WYI				WYI	-	UVB	VC VC			
21110	Shape		├	├			UVC		vc	ļ	VC				 		WER		-		-+
21121	Invert El		-				BY				-				-				<u> </u>		
21122	Width	-		├	-																
├	Side Slopes	-		 		-			├						 						-
21123					-					-					-	-					
21124	Bottom Slope	 	├	<u> </u>			H		<u> </u>		VC				VC VC			<u> </u>	 	-	\vdash
21130	Dikes			-				-	├			-			B₩	-					\vdash
21140	Noted Items	ļ	-	ļ	c	-	QUV		 	QVCB		 			CB			UCB	c		-
51500	Training Walls		 	 			CBY		ļ	QVCB WYEZ	VC	 			WY		<u> </u>	WY	 		\vdash
21300	Guide/Guard Walls	 	-	-					ļ	<u> </u>	NH				-	-			-		
21400	Riprap	 —	 	 			\vdash					 	<u> </u>	-	 	 -			 	-	
21410	Bottom	 	<u> </u>	 	ļ					<u> </u>			<u> </u>		 	-	 -	<u> </u>			\vdash
21420	Side		ļ	<u> </u>							 	-			├─			ļ			R
21430	Size	 	ļ	├ _	_				<u> </u>	-	-				├		ļ	ļ			\vdash
21440	Thickness	ļ		├ ─	-	ļ					 	-					-			<u> </u>	R
21450	Slope	ļ		<u> </u>						ļ	<u> </u>	-			ļ		-		ļ		-
21460	Noted Items	<u> </u>		<u> </u>	ļ					ļ					├ ─	ļ	ļ	ļ	ļ		
21500	Noted Items	ļ	-	<u> </u>	ļ	<u> </u>			ļ	<u> </u>	ļ	ļ			<u> </u>			ļ	-	<u> </u>	├
21900	Operation	<u> </u>		↓	C	_	VCY		V C		VCN	ļ	QYL		vc			UCB	c	<u> </u>	
21910	Pool El	ļ	ļ	⊢	c				-		VCH	-			BW		<u> </u>	WY	ļ	<u> </u>	
21920	TW E1	├	ļ	<u> </u>	<u> </u>		<u> </u>					-			<u> </u>			WY	-		
21930	Type Flow	!	.	ļ	 				ļ	ļ	ļ	1	 				-			 	
21931	Free/Submerged	↓	ļ	<u> </u>			ļ		ļ			ļ			ļ		-			ļ	
21932	Gated/Uncontrolled	ļ		<u> </u>	c	<u> </u>	VCY			_	ļ	ļ		<u> </u>	VC	ļ			 		R
21933	Unit Discharge	<u> </u>	<u> </u>	 	ļ		V01		<u> </u>		VC	ļ	 		BW	Ь—	ļ	ļ	-	ļ—	\vdash
21940	Gate Schedule	↓	<u> </u>	ļ							-	ļ			↓	<u> </u>	_	uc	ļ	 -	
21941	Single	ļ		↓		<u> </u>					Ļ —	<u> </u>		-	-	-		UC	ļ	ļ	
21942	Multiple	ļ	<u> </u>	ļ							<u> </u>	ļ			 			BW	-	-	
21943	Locations	<u> </u>	<u> </u>	<u> </u>			<u> </u>		ļ	L	VCN	├ ─-		-	<u> </u>	<u> </u>		L		├	\vdash
21950	Gate Opening	<u> </u>					Ш		ļ		YUN	ļ				<u> </u>	<u>.</u>	↓			
21951	Uniform	↓	<u> </u>		С	ļ	 		<u> </u>	ļ	<u> </u>	Ļ	<u> </u>	<u> </u>	1	 	<u> </u>	 		<u> </u>	\vdash
21952	Variable	↓	ļ	-	ļ				<u> </u>	<u> </u>	ļ	<u> </u>		ļ	↓	 	 	ļ	ļ	 	\vdash
21960	Gate Submergence	<u> </u>		1	L			L	ļ	<u> </u>	ļ	<u> </u>	<u> </u>	ļ	<u> </u>	<u> </u>	ļ	ļ	-	 	\sqcup
21970	Gate Speed			L	<u> </u>	<u> </u>	L	L	ļ	<u> </u>	Ļ _	↓	<u> </u>	ļ	↓	_		↓_	-	 	\sqcup
21980	Other Factors			<u> </u>	<u> </u>	<u> </u>	ļ		ļ	<u> </u>	ļ	 		ļ	ļ	_	<u> </u>	ļ	ļ		igsquare
21981	Ice/Debris	<u> </u>	<u> </u>	<u> </u>		L.		L	<u> </u>	<u> </u>		ļ		ļ	1	<u> </u>	ļ	ļ	-	<u> </u>	├
21982	Loose Barges	1_	1		<u> </u>	ļ	ļ		<u> </u>	ļ	<u> </u>	<u> </u>	<u> </u>	L	1	<u> </u>	ļ	↓	 	ļ	
21983	Waves		1		<u> </u>	<u> </u>		L	L	ļ		<u> </u>	<u> </u>	ļ	1	<u> </u>	ļ	ļ	ļ		$\vdash \vdash \downarrow$
21984	Power Discharge	<u> </u>	ļ	<u> </u>	<u> </u>		ļ			ļ	Ļ	<u> </u>	<u> </u>	ļ	<u> </u>	<u> </u>	ļ	-		Ļ_	$\vdash \vdash$
21990	Noted Items		<u> </u>	<u> </u>		<u> </u>	ļ			<u> </u>			L	ļ		<u> </u>	<u> </u>	<u> </u>	 	_ _	$\vdash \vdash \vdash$
								L	<u> </u>		<u> </u>			<u> </u>	ļ	<u> </u>		<u> </u>	ļ	<u> </u>	\square
		L							<u>L</u>			1	L					<u> </u>	1		Ш
								<u> </u>	<u> </u>	<u> </u>		ļ	<u> </u>		<u> </u>	<u> </u>	L	↓_	<u> </u>	<u> </u>	\perp
						<u> </u>			<u></u>			1			1		<u> </u>	<u> </u>		<u> </u>	

	A21	A22	A23	A24	A25	A26	A27	1 A28	A29	A30	A31	A32	A33	A31	A35	A36	A37	A38	A39	A40	A ^L 1	A42	AL3	A44	Als
2			Dardanelle R	way	мау	¥8.	a sk	ъ.	e	5		Proctor Spillway TR 2-645	a k	MB V				Cannelton Spillway & Gates & TR 2-710					Spillway TR H-70-13 & App	E C	ž.
	9.		e.	t111q	1114	Ta	peki	rlar lasir	Bas	da	Pasir		~ 0	R Da pt11	1	Basi	Barkley Spillway TR 2-689				2	g	-#	R Da atic 5	ت جمر پی2
	Jeorg -519	100 531	ine 11 -558	and 366	up 1 & S	8, 2, 5, 2, 3, 2, 3, 3, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4, 4,	1170		15 m 86	lori Way	2 - 30 E 30 E 30	2 a 3	10 to	188.8 88d S	Way 657	ing fag	9. is 86.	Lton Way	ba1 way 731	7.45	way 69-1	70-0	70-1	V1br -71-0	R L
	W F George L&D TR 2-519	P Ck	arda 40	fark) Jates TR 2-	reen ates	Sates 18 2-	Sarie Sate	ates 2	2 K	25 F	fille Sates	roct Spill	Ver f	irkan o-He	8 2 2 8	78 2-	8 2 2 2 4 2 4 2 4 4 4 4 4 4 4 4 4 4 4 4	anne Spill	lann 1 ip 1 1 1 1 1 2 -	Holt L&D TR 2-745	Hugo Spillway TR H-69-15	Copan Spillway TR H-70-39	Jakle Spill	irkan Jate TR H-	fiss Ppf111
21000	УC	1			001	00.		- 01	37.1	0.71	٠,٠	1 374			0 274	- W.E	E 0, E		2 0,12		1 07 [007.	2005	407	- 3, [
21100	VC WY		V C			v		С							AL	<u> </u>	VCN			UVCB WYN	VC WS		VCW		
21110								1				1				<u> </u>	T				15				
21120																									
21121	c		ДY							QY		QYZ	E								VC WS				
21122													<u> </u>												
21123																									
21124																									
21130																					CW				
21140																	VC.				VC WS		QUVC BWYR		L
21200	VC VY																						BWYR VC BW		
21300			VC .													L	CN			Y					
21400																									
21410						L							QE RL			<u> </u>									<u> </u>
21420						L_				<u> </u>	<u> </u>	<u> </u>				L_					<u> </u>		R		_
21430												<u> </u>	QE RL												
21440		<u> </u>											QE RL		L					<u> </u>	ļ				<u> </u>
21450		L				L				<u> </u>			ļ							<u></u>					
21460							ļ	ļ		ļ			ļ									<u> </u>			
21500			X				<u> </u>					<u> </u>									CT!				<u> </u>
21900	180	<u> </u>				<u> </u>				ļ <u>.</u> .			0.00			L	1201			MON	CW				<u> </u>
21910	VC VC							ļ	ļ		L	<u> </u>	QE RL		ļ	L	WC .	ļ		VCN	VC VC		UVC BWR		<u> </u>
21920						<u> </u>	ļ			<u> </u>	ļ		QE RL			<u> </u>					<u> </u>				— —
51930	L			Ĺ						-		<u> </u>	QRL		ļ		}	-		<u> </u>	}—				
21931						ļ		-	<u> </u>				-				-	<u> </u>		ļ		ļ			-
21932		 								<u> </u>			QE .					ļ			ļ				
21933		├-						-	 -	<u> </u>	├-	<u> </u>	QE RL			<u> </u>	ļ		ļ						
21940								-										\vdash	_		ļ	-			
21941	ļ		VCX				-	-				-		-	ļ	 				-					<u> </u>
21942			VCX			 		-		ļ	-	├-			<u> </u>		_	-		<u> </u>	 	-			<u> </u>
21943						 -	 				 -					 		-		VCN			U V C		
21950	VCY					 -	-			-		├	 		<u> </u>		 	-		-	-		BWR		
21971			x			-				-	-	├─		<u> </u>						-	-				
21952 21960								\vdash	-	 			 	ļ		 					 	-	_	<u> </u>	\vdash
\vdash		 	-				-	-					ļ		_	 				-	<u> </u>				
21970 21980						 	-			-	 	\vdash				 			_	\vdash	 				
21981			x				 	ļ —	 	 	 		ļ			 		-	-	-	\vdash	-			
21982					-		 	+		\vdash	\vdash					-		 -			 				-
21983	<u> </u>			 -		-	├			 			 			-		-		 	 				
21984	VCY	-				<u> </u>	 	-			-	\vdash			 		_	 	-	\vdash	<u> </u>				_
21990	ļ						 	 			-		 			 		_	-		 				\vdash
[-//		 -				-	 			-	-	-	 		 	\vdash	 	-	<u> </u>	├─	 				
-				<u> </u>		-	+	-	-	 		\vdash			\vdash	 	 	<u> </u>		 -	<u> </u>				_
-		-				_	 	 —			 				\vdash	 	 	<u> </u>		\vdash	 	 			
-				-	_		 			-		<u> </u>		-	-	├		\vdash							
لــــا		L	لـــــــا		L	L	L	L	L	L	L				L	L	Щ.			L	L	Щ.			Ц

		A46	A47		A49	A50	A51	A52	A53	A54	A55	A56	A57	A58	A59	A60	A61	A62	A63	A64	A65
3			Columbus Spillway TR H-74-13	1115 Pa	1118						Page		5	2	ğ	8	ş	in in	SEE	Baffled Basins Design Trends MP H-69-01	
	PROJECT AND REPORT	ے به∣	_	5 tr		17.9	. I	2 4 E	် နွေ	13	h	era E	۵ -	g _	Emb	g	ğ _	igas.	d di	lastr ends	S S T
	PROJE	Way -	mbus 74	liver 76-1	liver tion	2 5-	liver 148y	18 y 87	ey -7-	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 4 6	e Pr	ratic head	t to	10th	Lift large	Town	24 Re 11er	1 989 2 2 2	P 69	Forc 70-0
DESIGN AND OPERATIONAL VARIABLES	- 2	15 6 E	100 E	F ot F	Old River L Operation TR H-77-02	Ozark Proto TR H-	Red River Lab 1 Spillway TR H-77-13	Spill F	R Totel	Spill Spill	Sark Fate	Saff Savil R 2	lavis Swell	30111 71 br 2	Verf	Jisch P 2	pery ress	Sparg Prope	Rend	Seste	P 48
21000 UPSTREAM APPROACH		2015	0 071	10.2.1	001	027	- W.E	-0,5	Щ ш г	007	400		20,2	07 2 2	0 2		7 12. 1	V, E. Z		шпъ	M C 2
21100 Channel				UCB WY	vc vc		VCY	UC BW			CBW										
21110 Direction				ļ . .				D#		<u> </u>							l .				
21120 Shape		VC -		1									QYL								*
21121 Invert El			1	E	 		QY			QYZ									ļ		
21122 Width			1		 		-					· · · · ·									
21123 Side Slopes		 			-												1		-		
21124 Bottom Slope																					$\overline{}$
21130 Dikes				1												<u> </u>				\vdash	\Box
21140 Noted Items							VCY		-							_			 		\Box
21200 Training Walls				UCB WYA	l —		T									 					
21300 Guide/Guard Walls																					\neg
21400 Riprap																					
21410 Bottom							R														
21420 Side																					
21430 Size					R													R	R		
21140 Thickness																			R		
21450 Slope																					
21460 Noted Items		-	I																		
21500 Noted Items																					_
21900 Operation																					
21910 Pool El				A	Y			UC BW													
21920 TW E1		<u> </u>		A	٧		Ř														
21930 Type Flow		L																			
21931 Free/Submerged					٧	<u> </u>															
21932 Gated/Uncontrolled			ļ				VR	UC BW									<u></u>	L			
21933 Unit Discharge					<u> </u>					<u> </u>											
21940 Gate Schedule				ļ	<u> </u>														<u> </u>	!	
21941 Single		ļ	<u> </u>	ļ				<u> </u>		L											
21942 Multiple			ļ	<u> </u>	L			L													
21943 Locations		L	<u> </u>		Ļ		<u></u>			<u> </u>		<u> </u>				<u> </u>	<u> </u>				
21950 Gate Opening			<u> </u>	ļ	V		VR	UC BW		L		<u> </u>			ļ	ļ			ļ		
21951 Uniform			<u> </u>		<u> </u>		ļ	L		<u> </u>	<u> </u>		<u> </u>			<u> </u>	<u> </u>	L_			
21952 Variable		<u> </u>	<u> </u>	ļ.—	<u> </u>	ļ	<u> </u>	 		ļ					<u> </u>		<u> </u>	<u> </u>		igsqcut	Щ
21960 Gate Submergence		ļ	<u> </u>	A	ļ	 	ļ	 		<u> </u>			<u> </u>			ļ	<u> </u>	<u> </u>		igsqcut	\square
21970 Gate Speed			<u> </u>	<u> </u>	<u> </u>	 	ļ				ļ	ļ				<u> </u>			ļ		Ш
21980 Other Factors		 	ļ	<u> </u>	ļ	ļ	ļ	L			ļ					ļ	ļ	ļ	ļ	ļ!	\sqcup
21981 Ice/Debris		<u> </u>	ļ	<u> </u>	<u> </u>	<u> </u>	<u> </u>	ļ		-	ļ	├	ļ			<u> </u>	L		<u> </u>		-
21982 Loose Barges		_	-		<u> </u>	ļ					<u> </u>	<u> </u>		<u> </u>		ļ	<u> </u>	<u> </u>	 	\vdash	Ш
21983 Waves		<u> </u>	-	 	-	1	<u> </u>	<u> </u>			ļ	↓				 	<u> </u>	<u> </u>	<u> </u>		\perp
21984 Power Discharge		<u> </u>	<u> </u>	ļ	<u> </u>	ļ .	<u> </u>	ļ			ļ	<u> </u>	ļ				ļ	<u> </u>	<u> </u>	igsquare	
21990 Noted Items			ļ		<u> </u>	ļ	ļ		<u> </u>		ļ	<u> </u>	ļ	<u> </u>		ļ			ļ	 	\square
		 	ļ	Ļ	<u> </u>	<u> </u>		 	 	 	ļ	↓	<u> </u>	<u> </u>		 -	<u> </u>	<u> </u>	-	\sqcup	
			-	ļ	<u> </u>	<u> </u>	 	ļ	ļ	 	<u> </u>	 	<u> </u>	<u> </u>	 	 	<u> </u>	_	<u> </u>		
		ļ	├	-	 	↓	 	ļ	ļ	├	 	├—	<u> </u>	<u> </u>	ļ	<u> </u>		<u> </u>	<u> </u>	Щ	
L		<u> </u>	<u> </u>	1	Щ.	<u> </u>	<u> </u>	<u> </u>	l	<u> </u>		<u> </u>	<u> </u>	<u>L_</u>	L	<u> </u>	<u>L</u>	<u> </u>	<u> </u>		ldot

	A66	A67	A68	A69	A70	A71	A72	A73	A74	A75	A76	A77	A7B	A79	A80	A81	A82	A83	A814	A85	A86	A87	88A	A89	A90
•	క	Tainter Gates CE Project Data	, e	e t	e	ank 1	1 1		. E	lal	rer i 13		Sand Dams O'flow Discharge STP 02	2 Juni	Beartrap Dam Chamber Silting S STP 04		eg S	£ 03	-r c	l g	n \$	£.3	g e e	5 rdami	Peorla/La Grange Wicket Discharge S STP 23
	Exit	ates t Da	Napp Face	5 cres	Chut ace	0. 10 to 10	Sres Fluc	9	osic	Car	8 S.1.		isch	itas A	Dama Silt	ľ	111	STP Pro	ela Basi	ates c c	ry I	ds 3	-5A- t Co	an z	a Grisch
	way TI-C	o Jec 72-(-	Sur 73-C	13 P. P.	Sur 1	8 c 8	98e	E ay	abani RE2	uoi Way	Clair Prge 16	ings Iway 31	8 2 N	imin Iway 03	rrap Oter	F 2	유 사 1 명 20	A to	18ah 12 & 1	er G harg	gome ne l	îeid nei 15	e = 5	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1a/1 et D 23
	1110 10110 10110	E Pr	p111 pper IP H-	pill esig	Tow TOW FP. H.	ot le	Pres.	Ohio R L&D 37 Spillway Paper D	RR Embar O'flow Paper R	St. Lucie Canal Spillways Paper 14	St. (Subme	Hastings Spillway STP 01	Sand C. P.	Spil Spil	Bear Cham STP	STP STP	Aiss Dam	App A to STP 07 Model vs Proto STP 09	Monongahela 4 Crest & Basin STP 12	Roll Disc STP	Montgomery Is Channel & Spwy STP 14	Winfield Channel STP 15	Miss R 5-54-8 Roller Gt Coef STP 17	MISS Chal STP	Peor Wick STP
21000	VI EL E	101	0) D E	01 11 2.	07 11. 12	001	11110	0 0, 12	<u></u> 0	0, 0, 12	0, 0, 12			- 51 51				1							
21100		-												QVC YIL		Q VC YL	QYL QYL	QV YL		UC BW	QVCY	QVCY INL		AG I	c
21110														1111	_	115	GAT	1.0		-	LEND	- AND			
21120	├─					\vdash								-		$\overline{}$		1				-	<u> </u>		
21121		x	q	QY	-		_		<u> </u>					QYL			_	 	QUW YZX		QCY ENL		QVY	F.	
21122			<u> </u>	_		 												 	1157		C				
21123	 -			-		 				-						 			 						
21124			-			├─	-									 	 	-	<u> </u>			†—-			
21130			<u> </u>				-	-			 				_		\vdash		_	1	VCI EN	QVCY			
21140		-		-	-		-	 -				<u> </u>			 	 	VC	 	 	 	E	1111			
51500	 		 -	 	c	\vdash	-	\vdash			 	 		+	-	t^{-}	 		t	 	c	<u> </u>	<u> </u>	VCE	
21300	 -	-		-	-	-	\vdash	 	<u> </u>		+	 		VCI	-	QVC YL	CNX	 		 	QVCY	QVCY	_	 	
21400	\vdash		-			+-				\vdash	 	_		 		YL	 		 	_	TWF	TMT	 -	_	
21410			 		 -		+-	 	TYR		_	 			<u> </u>		-	+	 	 	 	-	 		\vdash
21420		-		-			-	 		\vdash				-		<u> </u>	-	 	+	 	 	-	 	 	
21430			-	 -	-	├	-	├	 		 	 		 	 -	 	┼─	1	 	 	 	 	 	-	\vdash
21440		┼─			 	├─		<u> </u>						 	-	 	-		┼	 	 	 	<u> </u>		
21450	-			-		├	-	-		-	}			╁		\vdash	 	-	-	_	t	 	-	 	
21460	-			-			-	 		-						╁	┼~~	-		-					-
		-	 	 	}	}—	 	1	}		}		}	 -	-	}	QVCY NLX	 	+-	 	 	}	├	├──	
21500 21900		├				╁─	├~	-			\vdash	├	-	├	├	\vdash	NLX	1		├	 	-	-	 	\vdash
	}			 	-	├	╁	-	 -	-	1-	-		QVY IL	-	QVC YL	QCY	QV		\vdash	QVCY	QVCY INL	-	vc	
21910	 	ļ	 -			├			 		├	 	-	IL		QYL	NLX	QV QV	 	 - -	QVCY IENL QVCY IENL	QVCY	 	VCI	+
21920	├	-	-	}	}	├—	├	 		}	├	\vdash		├	├	1	╁~	YL	-	 	TENL	INL	}	-	+
21930	├-		-	- -		├	-	 	 	-	┼			├─-	├	QYL	╁──	VY	╁—-	╁	QYL	+	 	 	
21931		 -		 	-	├	\vdash	 -	 	├	 -	┼		├─		+	+		+-	 	 	┼─	-	 	
21932	+	 - -	-	- -	 	├	 	 	 	-	 	┼		 	 -	┼	 	+	 	\vdash	QYL		-	 	+
21933	+	├	-	-		 	┼	-	 	-	╁		1	 	 	 	+-	ŸĹ	┼─-	┼	QC YL	+-	-	-	
21940	+	├	+		 	 	 		+	┼	┼—	 	-	 	-	QYL	+	1		 -	YL	 	 	+	┼
21941	+	╁	 	┼	 	} —	╆	 	 	-		-	 		+	QV	QCY NLX	+	 	-	QYL	+-	 	 	 -
21942	+-		-	 		+	-	┼			+	-	-	-	-	QV YL QV YL	NLX QCY NX	+-	+	-	QC	 	+		+
21943	+	-		-		+	-	1-	-	-	}	+	 	vc	+	C	NX	YL	+	+	QC YL IENL	INT ØAGA	-	+-	+
21950	-	-	<u> </u>			 	+	 	├	+-	┼	+-		YI	+	-	+	+	+	+-	IENL	INL	 	+	
21951		+	 		-	+-	-	+-	 	-	╅	+	-	+	-	+	+	+	+	+	+	 	-	+	+
21952	+		+	-	-	 	+	+		+-	 	+-	-	+-	 		+-	+-	 	+-	+	+	 	+-	 ~
21960	-		+		+-	 	+-	+-	 	\vdash	┼	-	\vdash	-	 	┼	}	╅─	+	+-	-	+-	 	+-	+
21970	+-		<u> </u>	-	+-	┼	+	-	+	+-	+	+	+	+	+	+	+	+-	+	+	+-	+	+	-	+
21980	+	+	 	+-	 	+	+		+	-		+	-	+	+	+	CNX	+	+	+	+	 	-	+	+
21981		+	+-		+			+		+-	+	+		+-	-	+	+-	+	+	+	+	+	 	+-	+
21982	+		+		+-	 	-	1-	-	+-	 	+	}_	┼	+	+	+	+	+-	+-	 	+	1	+	+
21983	-	-	┼—		+			-	+	+-	┼	+-	 	\vdash	+	+		+	+	+	+	vc	 	+-	+
21984	+		-		-	┼	-	+	+	+	+	 	 	+	+	+	QYL	VYL	+	+	 	INL INL	 	+	
21990	4-	+	₩-	┼	├	+	-	+-	+	-	+-	┼	-	┼	+	+		+	+-	+	+	INL	+	+	+
-	-	-	1-	-		+	-	-	+-	-	+	+-		+	-	+		+	+-	+	+		-	+-	+
	+-		₩		 	╁—	+-	+		+	4	+	-	-	+-	+-	+	+-	 	+-	+-	+	+	+	+-
<u> </u>	+-		+-		+	+	-	+-		-	+	+	 	+-	-	+-	+	+	+	+	+-	+	+-	 	+
<u> </u>		<u> </u>	1	<u> </u>		<u> </u>	<u> </u>	<u>j</u>	L		Щ.	<u> </u>	1		1		Ц		ــــــــــــــــــــــــــــــــــــــ	<u> </u>	<u> </u>			Т	

			A91	A92	A93	A94	A95	A96	A97	89A	A99	B01	B02	B03	B04	B05	во6	B07	B08	B09	B10	Bll
⑤		• .			eta F	٦.			at e	App A to STP 13 Roller Gate Coef STP 39	_	Miss R L&D 1 Spillway Apron STP 63	- 5			•	Gates	ace	Ice Harbor Spillway	Basin	Basin	g
		PROJECT AND REPORT	D 20 Bast	D 7 erts	Coe	7 7 P	D 22 Basi	Basi	a u	STP te	D 4 asir	Apro	3 8	tes	Pre	& T-race	ag G	Į.	١	£ -4	a g	Dvrsm
	!	2 S C	2 8	3 4 2	er se	~ r -	3 80	5 8	R Ba	38	# # # # # # # # # # # # # # # # # # #	2 5	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	res /	111 4a -	_ <u>*</u> _	\$ -	of at -	g š.	1 a 1	녆릞닔	200
0.00	DESIGN AND RATIONAL VARIABLES	A P	Miss R L&D 20 Stilling Basin STP 24	Miss R L&D 7 Spwy Culverts STP 29	Chanoine Wickets Discharge Coef STP 30	Miss Tainte	Miss R L&D 22 Sulling Basin STP 33	Roller Gate Stilling Basins STP 36	Sub Tainter Gate Coef & Basin STP 37	4 5 6	Miss R L&D 4 Gates & Basin STP 53	18 19	ار ار ام 10 رو	111e	Bonneville Spillway Press BHL 3-1	McNary Cffrdms & BHL 20-1	McNary Spillway & (BHL 21-1	# # # K	# T T W	5 1 5 5 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Bonneville Rev Still Ba	John Day Spwy & Dv BHL 97-1
	STREAM APPROACH		₹ % %	<u> </u>	852	E 5 2	Evin	e 9. ≥	ଜ୍ନ	4 % 2	¥ 5 6	E 92 92	Ø ₽ 60	× 2 2	2 07 m	¥ 5 m	美好商		1 5 E	FVB	A & B	× 87 88
				├	c			VС		-	QVC	QY	-			DVC	W	QVC YI	 			UE
	Channel		H	├				ļ	<u> </u>	-	AIT	<u> </u>		-		YN		ΥI	 			-
21110	Direction		├	<u> </u>				ļ				₩.	ļ				-	VŸ		<u> </u>		
21120	Shape					 			QYL	<u> </u>		ļ	ļ			ļ <u>-</u>	ļ	VC VC	ļ	QUB	\sqcup	
21121	Invert El		Ь—	<u> </u>	<u> </u>			<u> </u>	-		<u> </u>	<u> </u>	ļ		<u> </u>	ļ	ļ	ΥI		WYZ	├ ─┤	\vdash
21122	Width		Щ.		<u> </u>			ļ		L		 	<u> </u>	-			L	L		<u> </u>	\sqcup	$\boldsymbol{\sqcup}$
21123	Side Slopes		Щ.			<u> </u>	<u> </u>	ļ		<u> </u>		<u> </u>				ļ	<u> </u>			<u> </u>	igspace	ldash
21124	Bottom Slope											ļ	<u> </u>					-			igsquare	$oldsymbol{\sqcup}$
21130	Dikes		<u> </u>												L			VC YI		ļ		
21140	Noted Items																			<u> </u>		
21200	Training Walls									<u> </u>	E									<u> </u>		
21300 (Guide/Guard Walls															DVC				<u> </u>		
21400	Ri prap																					
21410	Bottom																					
21420	Side																					
21430	Size																					
21440	Thickness																					
21450	Slope										1											
21460	Noted Items																					
21500 1	Noted Items											1										
21900	Operation			\vdash			<u> </u>				1	İ										
21910	Pool El			_							AL C				<u> </u>	VCY		QVC		YZ		
21920	TW E1		 				_				AT OC		h			VCY		AI AI	-			
21930	Type Flow		\vdash	\Box							III.	 						**				
21931	Free/Submerged		 	\vdash				<u> </u>				†	·		 -					_		
21932	Gated/Uncontrolled	,	T	\vdash	_	<u> </u>	 -	<u> </u>		<u> </u>							ļ			z		
21933	Unit Discharge				 		<u> </u>	<u> </u>				-										
21940	Gate Schedule								<u> </u>		Ar &c	<u> </u>						VC YI		Z		$\neg \neg$
21941	Single		 	 	 			 			IL.		 					112	ļ			\Box
21942	Multiple		<u> </u>	 		 	 	 				†				DV		<u> </u>	1		\vdash	П
21943	Locations		 	 		 	t	 		\vdash	<u> </u>	 	†	_	†	Ų.						\vdash
21950	Gate Opening		†	\vdash		 	 	vc			QC YL	1						AC AI	1	Z		\sqcap
21951	Uniform			-		<u> </u>			 	 	IL.	-		 	 			111	 	<u> </u>		\square
21952	Variable		\vdash	1	 	 	-	 		 	-	\vdash	-	 			 	 		 	\vdash	$\vdash \vdash \vdash$
21960	Gate Submergence		 	+	 			vc			-	 	 			 	 -	 		\vdash	+	┌─┤
22.070			 	 	 		 	 	-			\vdash		 	-		 			 	 	
21970	Other Factors		 	 	\vdash	\vdash		\vdash	-	 	\vdash	+	_	 				 	 	+-	 	\vdash
21981	Ice/Debris		 	 	 - 		 	Ÿ		-			-		-			 	-		+	\vdash
21982			<u> </u>	-		 	-			-	-	 	\vdash	+-		DV		 	-	 	+	
	Loose Barges		 	+	\vdash	 				 						CN	-	\vdash	 	 	+	$\vdash \dashv$
21983			 		\vdash							-	 			DΨ		vc	-	 		$\vdash \dashv$
21984	Power Discharge		├	-	\vdash			 		 		 	 	 	 	CN	 	YI			 	$\vdash \vdash \vdash$
21990	Noted Items		\vdash	 			 		-	<u> </u>	<u> </u>	-	├	-	 					 	 -	$\vdash\vdash\vdash$
			ļ	ļ	 	 	-		-	<u> </u>	-	<u> </u>	<u> </u>	<u> </u>	<u> </u>				 -			$\vdash\vdash\vdash$
			₩	 	 	 	 	 			ļ	 	ļ	-	<u> </u>			ļ	-		\vdash	$\vdash\vdash\vdash$
<u></u>			₩		 	 	 	<u> </u>		<u> </u>		-	├—	<u> </u>	ļ	ļ	<u> </u>	<u> </u>	L	├	 	$\vdash \vdash \vdash$
			<u> </u>	<u> </u>	Щ_	<u> </u>	<u> </u>	<u> </u>	L	<u> </u>	<u> </u>	L				<u>L</u> .	<u> </u>	L	L	Щ.	<u></u>	ш

	B12	B13	B14	B15	B16	B17	B18	819	B 20	B21		\Box		\neg											
6	tal sin	sin		6 ₁	ces	аи	av	E	Į.	8												Ì		1	
	Ba	Se Ba	8	3 E	يَّ بِو	2	. L	1881	ωdς.	ent		j	- }	- }	l	ļ	ļ							- 1	ļ
	or se	Coo ay L-1	111e 1p # 6-1	eg cha	in St	one PLe	Pie C	90 P	10 11 17 17 17 17 17 17 17 17 17 17 17 17 1	Cur			- 1		1			1				,			
	12.0	11w	inev e L 13	9 4 A	sket grat	riest Frie F B5	rnev Frie F B6	scal IIIi r T8	titp anne I G3	11 ip oto 3358				İ					-	İ			ĺ		1
	SP1	Little Goose Spillway & Basin B BHL 114-1	BR S	<u> </u>	3 & E	Bar CI7	Bal CIT	235	ខិតិ	S T H		\perp		$-\downarrow$		i								\rightarrow	
21000												\perp													
21100	C₩	VCW YI		UDVC BWN					CN	VC NX															
21110													-1					ı			_		ľ	Ì	ì
21120		VC WI																							
21121		MI										\neg									-				
21122						-						+	-									$\neg \uparrow$			
21123												-+	$\neg \dagger$											\dashv	
	-	 		 -						-		Ť	+							-				\dashv	
21124				DV					DV			-	-+												
21130				CN CN		<u> </u>		1	CN																
21140	ļ				ļ	ļ	<u> </u>		DV CN			-			-										
21200			ļ		L	ļ	<u> </u>		511	110		\perp													
21300			L_	DCN					DV CN	VC NX		\perp													
21400										L								l							
21710												Ī												ĺ	. 1
21420																									
21430	 				<u> </u>	<u> </u>						\dashv													
21440	_				$\overline{}$	 			_			1													
21450			 -									-+													
				-					-	-		_													
21460		QVC		-	-	├		-				\dashv													-
21500	├	MAI			_	 				ļ —	 -						<u> </u>	-						-	\vdash
21900				VCN			 	ļ	DV	VC		-	- i												
21910		<u> </u>			<u> </u>	<u> </u>		ļ	CN	VC NX VC NX									Ļ		ļ				
21920	L	ļ	L	CN		<u> </u>				NX	 	-													$-\!\!\!-\!\!\!\!-$
21930												\downarrow													
21931																			L		<u></u>				
21932							ĺ	1	ļ																
21933									Ī .			T													1_ 1
21940		WI WI	_					1		VC NX															
21941	· -	" .								-															
21942	 ~		 	†	 	 	 	<u> </u>		\vdash		_†													
21943		 	 	1	 	\vdash	 	 	 -	 -	 	$\neg +$						_	 		t				\vdash
	-		-	 -		\vdash	-	 	ĎΨ	VC	 	\dashv			-	_			-		<u> </u>		_		$\vdash \vdash$
21950	 	-	├	-	_	 	+		CN_	NX		-+				 	 			 	 	 			\dashv
21951	 -	ļ	 	-		├				+	+-+-	-+			-		-	-	-		 	 			
21952	<u> </u>		 	<u> </u>	 	├					├- ├-	\dashv			ļ				 						$\vdash \vdash \vdash$
21960	 	ļ		-				-		 -	+-+				-			 -		<u>i</u>	 	 			$\vdash \vdash$
21970	<u> </u>	<u> </u>	-	\perp		_		<u> </u>		<u> </u>		-4													$\vdash \vdash$
21980			ļ	L.			<u> </u>	1	L	<u> </u>	\perp				<u> </u>	Ļ	<u> </u>		1	ļ	 —	 			\sqcup
21981					1		ļ				<u> </u>				<u> </u>	ļ			<u> </u>	<u> </u>	<u> </u>	<u> </u>		<u> </u>	igspace
21982				L						<u></u>					L			<u></u>		<u> </u>		<u> </u>			igspace
21983	Τ											_]			<u></u>		<u></u>		L			<u> </u>			
21984	1	П		T	\top				1	VC NX									}		[L.	L		<u>∟</u> .]
21990	<u> </u>	<u> </u>			1	1				1															
-	†	+-	†	\vdash		t^-	†	t^-	<u> </u>		t	_			<u> </u>	t —	1		1						
-	 	+	 -	+-	+	+	+	+	-	+	 	\dashv				-	_		t		t^{-}	†		_	
-	┼──	+	-	+	+	+	+ -	+		+	1	-+			 	 	 	 	†	†	 		<u> </u>	-	\vdash
	┼	+	+	+-	+-	+	 	 		+	┼┼-				 		 		 		 	 			
	<u></u>	<u> </u>	<u> </u>	<u> </u>		1	<u> </u>	<u> </u>	<u></u>	<u> </u>			نـــــــ		L	<u> </u>	ــــــ	Щ.	ــــــــــــــــــــــــــــــــــــــ		<u> </u>	<u> </u>	Ĺ		<u> </u>

		A01	A02	Ã03	AO4	A05	A06	A07	A08	A09	A10	All	Al2	A13	A14	A15	A16	A17] A18	A19	A20
7		E	Possum Kingdom Submerged Bucket TM 111-2	e						Morganza Floodwy Contr Structure						a Sa	111 2 a b	Ξ.,		bank	
	DESIGN AND BROJECT AND REPORT	opa	Buc	9	Canal	ž.				loo letu	ĮĮ	Dam	ate	lan.	int	L S tot	L S	1 S 2 L	3	0 2	5
	OJEC	Kir.	2 5 5 5	Kir	cie	£ 2-	, e	s 43	115	za P Stru 26	odri.	F 50 82	83.0 83.0	mber 86	s ye o	ver Leaf	ver Ch F	ver 1. St	2 2 %	Cate	P o o
	DESIGN AND EN	Possum Kingdom Spillway TM 111-1	ssum oner	Possum Ki Baffles TM 111-3	St. Lucie C L&D TM 153-1	1114 168	Canton Spillway TM 190-1	rest Ffle	Demopolis L&D TM 2-252	ngan htr 7-3	Jim Wood L&D TM 2-340	Cheatham Emergency TM 2-358	Cheatham Spillway Gate TM 2-38)	New Cumberland L&D TM 2-386	Gavin's Point Spillway	3 Ri 1ti-	a Ri str 2-4	d Ri	Warrior Spillway TR 2-485	Old River O'l Panel Gates TR 2-491	5 RI
		S St E	S.S.E	3 8 ¥	4 E St	<u>યુ જે ₹</u>	S S E	188 F	<u> </u>	Ç S E CBW	53E	5.5₹	3 8 E	5 3 E	QYP QYP	č ₹ €	350	වේ වී ජි වෙගම	E SE	O E E	ಕರ್ಮ
22000 C	ONTROL SILL	`	<u> </u>		٧	YZ	CY		BWYI	C.B.	YX	ļ	QYL	M.X. Gr.A	Q.F			WY	ΥI	<u> </u>	
22100	Crest El		<u>[</u>	<u> </u>		12						Ĺ	QIL						<u> </u>		
22200	Sill Shape								_	VY EZ	QU VB WY I Z								QY		
22210	Upstream Face					L	VY IZ										<u> </u>			L	
22211	Shape																			<u> </u>	
22212	Slope																				
22220	Top Width									QCB WY											
22230	Downstream Face																				UV ER
22231	Shape				VC YE					ļ —									1		
22232	Slope						QVY 1Z			 	1		<u> </u>								
22233	Chute	 		t	<u> </u>		QUVB WYIZ						t		UB WY	<u> </u>			 	T	
22240	Noted Items		UB WE				QUB WYZ				QUVB				" .				1		UVY
22300	Net Length		4.5	_		\vdash	414				1711	1	_		 				1		ERX
22400	Gate Bays	 			i	Y					 	 			 		 		<u> </u>	<u> </u>	
22410	Number	 		 	-							<u> </u>			 	ļi		 		 	
22420	Width	 			<u> </u>	+	 -			 	\vdash	 -	-		 	-		\vdash	-	 	
22500	Piers	 		-						YZ	QY	-			QYP	-	-	Y	 	 	-
22510	Width	 	-	 -		 					-	<u> </u>	i	<u> </u>		ļ	 		-		
		├	₩	 -	-						<u> </u>			<u> </u>		-		-	ļ	 	
22520	Height		-				-				-		-	-	 	-				├	-
22530	Upstream Length	 	\vdash		-		WY				 	-	-	-	ļ			uc	-	├	
22540	Nose Shape		├	├	-		-		H	 		 -			ļ			BW	ļ		
22600	Navigable Pass			-	ļ	-					QV	-	ļ	-		ļ			 		
22700	Cofferdams	 	1	 	VCW		w			<u> </u>	ĊΥ	ļ	-	<u> </u>	 			⊢–	-		UYE
22830	Noted Items	├ ─	-			-	ļ .				<u> </u>	ļ	<u> </u>					├ —			RX
22900	Operation	10	(ID)	<u> </u>		V77	AU.		01/0	0.47	QUVCB		OUT	1 OY	1506		<u> </u>	70-	011	<u> </u>	in.
22910	Pool El	9	UB WE	<u> </u>	L	YZ	QVY 12		avc	QYZ	WYIZ		QYL	QY	QΥP	ļ		QY	QUW YI	Ь.	UV YX
22920	TW E1	<u> </u>	UB WE	ļ	<u></u>	YZ	VY IZ		ØΛG	QYZ	QUVCB WY12X		QYL	QY	Y	ļ		QY	QUW YI	<u> </u>	UV YX
22930	Type Flow	<u> </u>	<u> </u>	ļ		ļ				<u> </u>	QUX		ļ								ļ
22931	Free/Submerged			L		Y			QVC	Z	QUVB WY IZ	<u> </u>		QY				QY	QUW YT		UER
22932	Gated/Uncontrolled	L	\perp	<u></u>	ļ					<u></u>	QΥ								UW YI	<u></u>	
22933	Unit Discharge	L	UB WE			YZ	VY IZ		VC	QY2	QUVW YIZ			QY	ΥP						UV
22940	Gate Schedule										QUK							Y			
22941	Single						QYZ								Р						
22942	Multiple					Y							!		P						
22943	Locations														J						
22950	Gate Opening]				QUX	Ī			P			i			
22951	Uniform						<u> </u>				1						ļ			<u> </u>	
22952	Variable	T-			†		†			1	T	†			 		\Box				
22960	Gate Submergence	_		<u> </u>	†	_			-		1	1	_	1					1		
22970	Gate Speed	†		1	<u> </u>		 			1				—			t —	\vdash	 		
22980	Other Factors	 	—	<u> </u>	+	_	 			<u> </u>	 	†	<u> </u>	_	 	-		 	 	 	
22981	Ice/Debris	†	1	 	t -		 			\vdash	 	<u> </u>	 		1	-	<u> </u>	 		 	\vdash
22982	Loose Barges	+-	+	 	 -	 	 	<u> </u>		+	 	 	+	 	+	 			+	+-	
		+-	+	 	 	-				-	-	1						-	-	 	1
22983	Waves	+-				 -			<u> </u>	-	 	-			 			├—	+	 	-
22984	Power Discharge	+-	-	-	VCW	 	Ž		-			 		-	1				+	 	Ř
22990	Noted Items	<u> </u>		<u> </u>				L	L	L		<u> </u>	<u> </u>	<u></u>	<u> </u>	L	<u> </u>	Ь_	<u> </u>	<u> </u>	<u> </u>

	A21	A22	A23	A24	A25	A26	A27	A28	A29	A30	A31	A32	A33	A34	A35	A36	A37	A38	A39	A40	AL ₁	A42	A43	Alılı	A45
8				# Gates & Spillway F	Gates & Spillway & TR 2-572	'uay	Maxwell/Opekiska R Gates & Basins R TR 2-579	New Cumberland Gates & Basin TR 2-585	-	roj			nk a	Way A do		<u> </u>		Spillway & Gates &					App	ring CV	tes
	e.		100	Id	1114	110	pek	rlar	Basi	da A	erry		Emba	8 10 8 11 10 8		Basi		. 3			2	ō,	3	R D	0 4 V
	eorg 519	E 23	ne11	and 566	up \$72	578 578	11/0 12/0 13/0	4 B	131a 1ng 586	lori May 633	2 + 3 2 + 3 3 + 3	5 a c	sas 10# 650	sas ad S 655	4ay 657	111 111 111 111 111 111 111 111 111 11	83 y 83	ton 710	bal way 731	745	9-69	70 y 10-0	y 70-1	9as Vibr	# P 1
	W F George L&D TR 2-519	Jackson L&D TR 2-531	Dardanelle L&D TR 2-558	arki 2-2-	Greenup Gates & TR 2-572	olum tes	Tres	tes 2	ke	11111111111111111111111111111111111111	IIle stes	2-111	kan rerf	kan -He	2.11.2	115 2.2-	rki 2	1111 2 -2	1110 1110 12-	10 F	8 4 F	opan vill	KIE TIT	Kan H-	. SS 1110
	yc VC	MXI OUA VA TO E	QB WY	JE 35 €	ಪತ್≓ UBW	285	£ 3 £	2 0 F	ESE	S WE	£ 8 £	OUB GUB	¥6E WYZ	425	83 P. F.	E S	8 27 17	2 % E	E OUB	55.25 12.15 13.15	문상법	2 % 5	S 22 F	485	ESE
22000		WYI	WY			ļ <u>-</u>			-	WY		WYZ	₽UVW	UBW	ļ-	 -		ļ <u> </u>	WY	BW	 	-	QUV	 	QWY
55100	OTIVA V		QUVW	QYL	QY	QUVBW		UVB	QY							<u> </u>	<u> </u>	<u> </u>		QY	<u> </u>	QY	CY		-
55500	A1ES Onaca		YIZ	411	41	YIZP	41	WY	41				QUVW YERL			ļ						41		⊢–	
22210			ļ									-	ER			<u> </u>				Z				L	<u> </u>
55511															L						<u> </u>		L		
55515						L						QYZ												L	
55550													QE RL								QUY ZP				
55530				UVZ PAX									UBW YRZ			-		QY		Z					
22231	-					UVBW YIER			UV BW		QUV QUV	QYZ		QUVBW YERZL											
22232		us						_						LDINOD											
22233						 			<u> </u>		 			<u> </u>			<u> </u>			 -	 				
	QV CY	US		Z		 	_	-					QUVBW YERL	<u> </u>	 	 		 		QY	 				\vdash
22300	CY		 	 	 	-				- -			YERL,		 		-	 							
22400				 			-			-			-		-		-				 			 	
															 	├	 		-						
22410	<u> </u>					 			<u> </u>			<u> </u>				├			-				 	 	
22420	<u> </u>	_	QUVW	-	<u> </u>	-				-	-	QYZ					<u> </u>		ļ	QY	OUY	-	QY	<u> </u>	WY
22500	QY		YIZ	ļ <u>.</u>		ļ .	<u> </u>		ļ		ļ				ļ	<u> </u>	ļ	-		ļ	QUY ZP				
22510	<u> </u>					ļ	ļ		L									<u> </u>			L			<u> </u>	Ļ
22520			L		ļ	<u> </u>	<u> </u>		ļ		Ĺ	<u> </u>			<u> </u>								<u> </u>		<u> </u>
22530		Ĺ			<u> </u>													<u> </u>	L	CW				L_	
22540			QB WY											ď											
22600																									
22700	QV CY																			UVC BWY					
22800			VC								1	Ī													
22900																									
22910	QUVCW	QY	QUVN	QY	<u> </u>	QV YR		 	 	QY	QU	QYZ	QUVBW	QUM	QY	_	†	QY	ŞΥ	QVC YZ 2	QUY	ĐΥ	QY		QWY
22920	QUVCW	QŸ	QUVW YIZ QUVW YIZ	QY ZL QY ZL		QY	QY	 	QY	QY	QU VY QUV BWY	 	QUVBW YERZI, QUVBW YERZI.	QUW	QY	<u> </u>		QY	QY	2	ZP QUY ZP				
22930	TIEZ	<u> </u>	112	ZL		ZP		<u> </u>			BMI		TERZI.	125	-	 -		-			ZP				
22931	QY	QY	Ø0.4₩	QY	-	QY ZP	QY	<u> </u>	QY	QY	QUV		QU VBW YERZL	QUY	QY		 	ÇY	QY	z	QÜV			 -	QY
22932		QY	Y1Z UVW	ZL	-	QY		+	 	QY	BWY QU	 	YERZL	QUW YZ	QY		 	QY	QY		QUY	 			
22933	UVWY		QY		 	QY		 			VY		QUBWY	QYL		├	-	 -		-	 				
_	IEZ		-			-							ERZL				-				-				├
22940	 		-	 	 -	├	 	 	 	 -	ļ. <u></u> -		-				-	 			 	-			
22941	 		 		-	 —–			-		 		-				 		<u> </u>	<u> </u>	-	<u> </u>		 	 -
22942	<u> </u>	ļ			<u> </u>	<u> </u>	ļ			ļ					-	<u> </u>	-	-				_	-	├	├
22943	<u> </u>	 	 —-	2	L	QY	QY	<u> </u>	QY	2Y	ฉับ	Z	<u> </u>	QUW	QΥ	 	<u> </u>	QY	ļ	2.	 	<u> </u>	<u> </u>		<u> </u>
22950	0.77	l ov	ļ	Ľ		ZP	\	-	4.	<u> </u>	VY.	ļ		YZ	ļ	<u> </u>		ļ						ļ	
22951	QYZ	QY	<u> </u>	<u> </u>		Ļ	<u> </u>	ļ							L		ļ	ļ	ļ	L	<u> </u>			:	<u> </u>
22952				<u> </u>	ļ	<u> </u>		ļ				L		<u></u>	ļ	ļ	<u> </u>				<u> </u>	<u> </u>	ļ	<u> </u>	
22960		<u></u>	<u> </u>	Z		<u> </u>				L						L.	<u> </u>		İ		<u> </u>		L	L	<u></u>
22970											<u> </u>		<u></u>					<u></u>							
22980						[l							\mathbb{L}^{-}	,		L			L	L	L	
55991											T									i					
22982					<u> </u>	1					1					T	†			i		!		Γ	i.
22983		_	T			t		T -		 	1				1			1							
22984	\vdash	 	†	 		†		1		<u> </u>	<u> </u>	†			İ	1		T		· · ·	1			l —	<u> </u>
<u> </u>	 	 	-			+	-	 	-			+			+	+		+	 	 	+		 	 	

			A46	A47	A48	A49	A50	A51	A52	A53	A54	A55	A56	A57	A58	A59	A60	A61	A62	A63	A64	A65
9		_			E 5	Old River L Sill Operation TR H-77-02	2	_	- m	Barkley Proto Gate Vibr TR HL-79-08	_	Barkley Gate & Bulkhead TR HL-83-12		l _a	2	ž	8	200	Heir Ish	Rend L Sub Dams Riprap Cover MP H-68-01	5 E	
	DESIGN AND	5 e	ء و	E.	5 at .	7 - 8	1 1 9	E	S T	2 g	를 전	불은	5 E	G E	2 2 2	E E	eg a	Çm,	las.	e s	Pasir end:	2 8 3 3 8 3 3
	ROA	5 11 ×	747	way 74-	17 c	11 to	8.F	Ive Way	o age	200	3 9 6	9 4 8	atte	hear 168	t c a	10th	11.1 606 606	Town	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 0 89	ed 1.	70-0
0	DESIGN AND PERATIONAL VARIABLES	11ce	Sp111way TR H-74-10	10 E	Foto F F	Pera H	Proto Spillway	B 4 1 1 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	u de	Troto	rays R H	ark R H	arr avit	3v ig 4e1] P 2-	[14]	verf 1pra P 2	P Sch	ress o	rope 7	P P H	affl esig P H-	2 8 T
	CONTROL SILL	-	N H	OWE	DTF	QYZ	QVCYI EZPA	đλ ≅ Ν Ε	H OV F	20 a. F-	ONF	2 0 €	m O E	ØλΓ ≅ Ν Ξ	N > E	OEE	> Q X	N G X	N C X	QY X	MAE	20 X
22100	Crest El	+			F	QUVW	,	uvc				 		-		WYR			 		QV	
22200	Sill Shape	+				YZ LP QUVW	<u> </u>	B₩	QUVCB	 	QUBW	 			 -	WYR	QY	 	QYI		YX	-
22210	Upstream Face	+	-			YZLF	 	 	WYIZ	 	YZX	 	 	<u> </u>	 			 	 	 		-
22211	Shape	十				<u> </u>				 						-		 	 		-	-
22212	Slope	+				 		-	z	 	 		-	-	 	-		 	 	 	-	\dashv
22220	Top Width	+			-	 -		_								-		 	├			\dashv
22230	Downstream Face	+				 				<u> </u>		 	 		ZPA	UB			-			$\neg \neg$
22231	Shape	+	\neg								 				<u> </u>	WR			├	 -		
		+																	 			-
22232	Slope	+								 			-	<u> </u>					+	 		\dashv
22233		+				 	<u> </u>			-		 	-			UBW		z	QY	UBW		-
22240	Noted Items	+				-			QY	-	QYZ			-		YR			IR	İR		-
22300	Net Length	+-			L			<u> </u>	QUVC		 	 	\vdash	QYL				 	├			\dashv
22400	Gate Bays	+			_	-			BWY	├								<u> </u>	 			
22410	Number	+-				ļ		<u> </u>			<u> </u>	<u> </u>	\vdash						ļ			-+
22420	Width	+			A		CY		QUVCB	-	-	SF	-	QYL				-	 	_		
22500	Piers	+				 	PA		WYIZ				-					├	ļ			
22510	Width	+	\neg			ļ							-					ļ				
22520	Height									ļ	<u> </u>	 -	 					ļ				
22530	Upstream Length	+	-							<u> </u>	<u> </u>	<u> </u>						├	 	<u> </u>	L	
22540	Nose Shape	+								-	<u> </u>		_					<u> </u>			<u> </u> !	
22600	Navigable Pass	+			ļ			ļ		├								ļ	ļ			
22700	Cofferdams	+			Α	ļ				ļ	<u> </u>			QYL					QY	<u> </u>		
22800	Noted Items	+			r							├	-						IR		L	
22900	Operation	+			A	QY	<u> </u>	QY	QUC	ļ	GRBA	 		QYL		UBW		z	QY	QY		
22910	Pool El	-			Α	ZL		QY	BWY	<u> </u>	YZX QYZ			QYL		YR UBW			QY	R		
22920	TW B1	_			<u> </u>	ZL	PA	<u> </u>		ļ	4.5		<u> </u>	4.1		YR		<u> </u>	ļ.,	ļ.,		
22930	Type Flow	+				QY	VIZ	QY		↓	QUBW	— —	<u> </u>			UBW		-	-			
22931	Free/Submerged	4	_			ZL Z	PA	QY	QUC	<u> </u>	YZX	l				YR		 				
22932	Gated/Uncontrolled	\perp			<u> </u>	Ľ.,	PA	<u> </u>	BWY	ļ		ļ <u>.</u>	L			UBW		Z	QY	Ř		
22933	Unit Discharge	+						—		-						YR		<u> </u>	-	<u> </u>		
22940	Gate Schedule	\perp				ļ	VIZ				ļ				ļ	<u> </u>		 	-		ļ	
22941	Single	\perp				QY	PA			<u> </u>	<u> </u>		<u> </u>	<u> </u>			-		-			\vdash
22912	Multiple	\perp			<u> </u>	•	 			<u> </u>	├—	 							ļ	.	L	
22943	Locations	4			A	QYZ	VIZ	<u> </u>	UCB	L	<u> </u>	<u> </u>	_			ļ		ļ .	1	 		\vdash
22950	Gate Opening	_			<u></u>	412	PA	<u> </u>	MA		ļ	<u> </u>			<u> </u>			ļ		 	<u> </u>	
22951	Uniform	\perp			ļ					ļ		ļ	ļ						-	<u> </u>		
22952	Variable	\perp			ļ.—		ļ				<u> </u>	<u> </u>	<u> </u>			ļ		ļ	-	<u> </u>		
22960	Gate Submergence	1			A	L_		L	<u></u>	L		<u> </u>					L	L	<u> </u>	L		
22970	Gate Speed	\perp				<u></u>							<u> </u>						<u> </u>			
22980	Other Factors	\perp						<u> </u>		<u> </u>			L_			<u> </u>		_		ļ	L	
22981	Ice/Debris	L					<u> </u>				L	<u> </u>		<u></u>	L			L_		R		
22982	Loose Barges					L																
22983	Waves	\perp			L			L_										<u>L</u>	<u> </u>			
22984	Power Discharge	\perp					L		<u> </u>						ļ			乚	<u> </u>	<u> </u>	L	
22990	Noted Items	1					L							SAL					VIR	<u>L</u>		

	A66	A67	A68	A69	A70	A71	A72	A73	A74	A75	A76	A77	A78	A79	A80	A81	A82	A83	A84	A85	A86_	A87	A88	A89	A90
100	e P				0)	ž _						,,,,		. 7	50	1							٤.	Chnl & Cofferdam STP 20	Peoria/La Grange Wicket Discharge 6
	xit pe	Da	app	rest file	hute	o b	luct	37	ent Sior	Cana	Sil.		char	Chr	am 1tir		15 14a	TP C	a 4 sin	Sel	Spery	Speri	Coe	. 26 fero	Gran
	ay E Sha 1-05	r Ga Ject 2-07	Surf 3-04	ay C Pro 3-05	ay c urfa 6-19	ie G	re C	مرد و	Ero Fro	ays 14	sed 15	80 ag	Dis	init ay &	ap D		Spil	4 S S	ahel & Ba	rge r	mery 1 &	P 7	5.5	Je Cef	7. P. 12.
	Spillway Exit Ch Bottom Shape MP H-71-05	Inte Pro H-7	1112 H-7	1114 sign H-7	1114 34 S H-7	Fiet Flet	1-0g	Ohio R L&D 37 Spillway Paper D	Figure 1	3 E	C James	o in in	D of o	skim 111w	Beartrap Dam Chamber Silting STP 04	met)	Miss R L&D 15 Dam & Spillway STP 07	8 F P	Monongahela 4 Crest & Basin STP 12	Roller Gates Discharge Coef STP 13	Montgomery Is Channel & Spwy STP 14	onne 15	ss 8 11er	55 R 11 &	oria eket
	S B B	돌면말	Spillway Nappe Upper Surface MP H-73-04	R De S	옵. 전로 품	ğ §	# Pressure Fluct	Sp. Ch.	A HRR Embankment B A O'flow Erosion Paper R	S Sp. F	20.00	Hastings Spillway STP 01	Sog	OAT S S S	ST. Be	Marmet L&D STP 05	Mis	Model vs Proto	₹ 5.28	RO STS	ØYL ₹ G E	Minfield Channel & Spwy STP 15	F 8 STS	NAI S C 3	STE
22000		x	4.			L		L	WYER		VYL			Q1L		YL		I L		UC BW	dir.	ALD.		V11	
22100				QY			QY		L						L								QVY		
22200	UB WE	X	Y		QY		ðλ	QY		TUB	YY IL	<u> </u>	QU VB						TOUVE WY I EZ LX						
22210		X																							
22211				QY												UBW YI									
55575			Q	Ÿ	QY .							T													
22220												\vdash								_					
22230		x					UBWY					\vdash					UB					UB		UVB	
22231				Y			IZP				-	\vdash			 	UBW	WY					TUB		WYI	-
22232	<u> </u>					 	+		 	 	 	 		 -	 	ΥI		+	 	 	 	WER			
22233	 -				WY	-	+	-		 	-	-		-			 			 	 	 	 -		
1		x			WY	QY	 		 	ļ	VYL	├—	эuв		-		-		QYL		-				$\vdash\vdash\vdash$
22240					QY	 -	+	QY	├			┼	WYL	<u> </u>	-	├	 		<u> </u>		<u> </u>			-	
22300	<u> </u>					-	-				 -	├					-	<u> </u>		_					
22400	ļ			ļ			 	QY	 	 		 -	 		-		 	 	ļ		-	<u> </u>	ļ	-	
22410							ļ	-				ļ		<u> </u>		<u> </u>	ļ			<u> </u>	_			ļ	
22420						L	<u> </u>			ļ		↓		0.41		017				110					
22500							ļ		<u> </u>			L		QYL	ļ	QU YL				UC BW					
22510																									
22520							Ī																	<u> </u>	
22530																									
22540																									
22600							\top				VY IL					QUY NL								VC IN	QY
22700								İ			-					ANT ANT ANT ANT	QCY	QV YL				QVCY		TVCY	
1 1	TUB WE			-				_						VΪ	VYI	QVC		115			QCY NL	TAL		151	QUVB
22900	WE					-	 					+			EZ	INL		├			NL.				WYIE
22910	·		QY		QWY	QY	QUBW	QY	TUVB WYR	-	VYL	+	QUB	QYL		QVC	1		QUVW YZLX	1-	QYL	 		VC	QV
22920							YIZP UBW	QY	TUVB	 	VYL	 	WYL	QYL	-	YNL GUVC BUY INL			QUVW	 	QYL	Z	- -	VC VC	ΛΙ ΔΛ ΑΙ
-		<u> </u>				├	YIP		WYR		-	 	WYL			înt _	-	 	YZLX		-	 		YL	ΥI
22930			-			 		-	 		-	 	QUB			QYL	 	-	QUWY		QYL	Z			
22931		-				 -	ļ <u>.</u>						QUB WYL			-	 		QUWY ZLX		-	-			
22932					WY	QY	QUBW	ļ	-		VYL	<u> </u>	QUB	ļ		UBWY	-	ļ	∂ n∧n	ļ	-				
22933						<u> </u>	YIZP	-			<u> </u>		MAT	<u> </u>	ļ	-		-	YZLX	 	<u> </u>	 		-	QV
22940	ļ		ļ			<u> </u>		<u> </u>		<u> </u>	ļ	<u> </u>		<u> </u>	<u> </u>	QYL	<u> </u>			<u> </u>	ļ	-	<u> </u>		ΥI
22941						<u> </u>			L		<u>L</u>	ļ		ļ	-	l	<u> </u>	<u> </u>		<u> </u>	L		ļ	de .	
22942											L	$oxed{oxed}$			<u> </u>	QVYL	<u> </u>			<u> </u>	<u> </u>	<u> </u>	<u> </u>	CE	
22943																GAAL									
22950										Ĺ	L	Ĺ				QÚB WYL	UB WY			L		Z			
22951																									
22952									1							T		1					1		
22960					-		1									1	1	T							
22970			_									†						T		†	T -				
22980				<u> </u>					 			†						†					\vdash		
22981						 -	1	-	-	 		†	\vdash		-	 	-			\vdash	 	†	 	 	
22982					-		1	 	 	 	_	 	 	 		1		 		 	 	 		 	
22983							+		 			+	 	 -		 	 	 		+	-		 		$\vdash\vdash\vdash$
						<u> </u>	}	-	 	ļ	<u> </u>	+		-	 		-	 	ļ	 		 	-		
22984			<u> </u>	 	ļ	ļ	P	ļ				 	 		YZ	QYL		-		-	 	Z		YL	-
22990			L	لــــا		L	<u> </u>	L	L	<u> </u>	L	<u> </u>	L	L	<u> </u>		Ь	<u> </u>	<u> </u>	<u> </u>	L	L	<u> </u>	<u> </u>	

		A91	A92	A93	A 94	A95	A96	A97	A98	A99	BO1	B02	B03	BO4	B 05	во6	B07	808	B09	B10	B11
0		- F		rets	Sef.	. E	Bu	ate	13 20ef	_	Ę	e i		, s	T-race	Gates	T-race		Basin	Basin	Gap
	PROJECT AND REPORT	Bas 1	erts	S Co	25.5	Bas	ag g	Tainter Gate C & Basin 37	STP ft	Pasi	04 1 Q	38	ates	a P	-⊌		م. ٦-	ř	20 ~±0	le 1 Ba	vrsn
	ROJE ER		[23g	otne 30 me	# 5 = =	7 H L	71.18 2. 1.08	Tain a 75	3 3	2	# 15 %	35 6	er G	evil 1way 3-1	Z # 2	L'ay	Harb des 22-1	Harb Iway 31-1	Dall Hay	evil Stil 65-1	Day 6 D
OPI	DESIGN AND RATIONAL VARIABLES	Miss R L&D 20 Stilling Basin STP 24	Spery	Chanoine Wickets Discharge Coef STP 30	Miss R 5-5A-8 Tainter Gt Coef STP 31	Miss R L&D 22 Stilling Basin STP 33	Roller Cate Stilling Basins STP 36	Sub Tainter (Coef & Basin STP 37	App A to STP 13 Roller Gate Coef STP 39	Miss R Lab 4 Gates & Basin STP 53	Miss R L&D 1 Spillway Apron	SAF Lower L&D Thtr Gt & Basin STP 69	Roller Gates Pressures	Bonneville Spillway Press BHL 3-1	McNary Cffrdms BHL 20-1	McNary Spillway BHL 21-1	Ice Harbor Cffrdms & ' BHL 22-1	Ice Harbor Spillway BHL 31-1	The Dalles Spillway & BHL 55-1	Bonneville Rev Still Ba	John Day Spwy & Dvrsn (BHL 97-1
22000 CC	ONTROL SILL	QYL	QY	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		2, 0, 0	QYZ	Z	ATX	QYL	QY	UWY				CB WY		QY			QYZ
22100	Crest El	1	\vdash					QYL		QC YL	1				VY						YIE
22200	Sill Shape	1						CAT			<u> </u>	YZ									
22210	Upstream Face	1																YZ			
22211	Shape	1			1						_	1				QY ZP			QUB		
22212	Slope																				
22220	Top Width													Ϋ́Z				YZ			
22230	Downstream Face	1	1				TE					ZX	ZX			Y		UBW YZ		T	UBW YIE
22231	Shape	1	1			TUVB				1				YZX		QY ZP			QUB WYZ		UVB WY I
22232	Slope	1					T					1									
22233	Chute			1	1																
22240	Woted Items	1		I								1									UVBW
22300	Net Length	\top								ART	Π										
22400	Gate Bays	1	1		T											CB WY		UB WY			WIE
22410	Number	1	1						1												
22420	Width	1	1						Ø.	QY						QY				QY	
22500	Piers	1	1		GAL		v									QCBW YZP		QY	YZ		CW
22510	Width	1	1							1 -									Τ.	Ι	
22520	Height	1	\top	-	1	T									T			1	7		
22530	Upstream Length	_	1	1	QY			T		1											QYZ
22540	Nose Shape		1	1	1	1		QYL										UBW YZ			QYZ
25600	Navigable Pass	_	 		1			-	1			1									
22700	Cofferdams	_			1	T									VCY		AIE				
22800	Noted Items		QUB		1		E			QVC						2					QYZ
22900	Operation	+	1.2						T-												
22910	Pool El	баг	QY		QYL		Z	2		QYL	QY	UWY	ZX		VY	QCB WYZ	YCW	QUB WYZ	QYZ	1	QUVY IEZ
22920	TW E1	QYL	QY	1	QYL		QYZ	Z		QYL		UWY 2X	ZX		VY	z	YCW		YZ		IE UV
22930	Type Flow	\top	\top				Z					T					Ī	T			T
22931	Free/Submerged		QY				2	2.									I				
22932	Gated/Uncontrolled	T		1												CBW YZ	$oxed{oxed}$	Z	QYZ		
22933	Unit Discharge	7	1		\top						Ι										
22940	Gate Schedule	\top			1	I										C BW YZ	AI AC	YZ	2		YŽ
22941	Single		1	1	T															\perp	
22942	Multiple		1					T													
22943	Locations				\top							I									
22950	Gate Opening						VZ	Z				UWY	ZX	YZ		CBW YZ		Z	Z		QYZ
22951	Uniform	\top	1								I		$oxed{\Box}$								
22952	Variable	1	1	_							Ι		\prod								
22960	Gate Submergence	1	1		1		VZ	Z			Ι	UM YZ	2								
22970	Gate Speed	\top	1								I										
22980	Other Factors	\top	\top	1		\top	\top				Ι										
22981	Ice/Debris	\top					V				T		Γ	T							
22982	Loose Barges	\top	+	\top	+		1	1			1		\top			Г					
22983	Waves	\top	\top		\top	1	T	T-	T-	\top		\top			T	I	$oxed{\Box}$	I			
22984	Power Discharge		\top				1	\top				1		T			VC YI				
22990	Noted Items	\top	\top	\top	-	1	1	1	\top		T	\top	T	YZX		CBW YZ	T				

	B12	B13	& Bonneville Gate Lip Mod BHL 136-1	B15	B16	B17	B18	B19	B 20	B21			—-т							T				Т	
12	ia!	ıın		6	ses	2	2																		
	Bas	Bas	7	ne]	oro	ů,	3	ısir	Şpw)	ant:			l				ļ		1				İ		
	y & L	8 4	ia ₹ -	ny L Char	ng te	Pier R	11e Pie:	S B	1118 4. 2	-is			- 1						!					ļ	-
	1. B] Ha	evi Li 136	ghe Au	ati C3	sto le B57	levi levi B6C	alo lin TB	1po ne1 G35	5 0 K			ļ						İ	- 1		ĺ	1		
	Sp 11	H I	Sate SE	itte Spwy	iick per II	lue laff lT	Sonn Saff SIT	usc ttl	hail han	all rot IDG3			- 1	i			1								
22000	QY.	2 0, 114	QY	UVC	300	<u> </u>	QY	v	QY	0 11 1														1	
22100	QY			BW			-		12				-			-i									
22100	CW	ocv					 -							\rightarrow										\longrightarrow	
55500	CW YZ	OCW YZ																							
25510																									
22211			i											į											
22212																									
55550		_				<u> </u>										_									\neg
22230		-				VY	U V C																		
						-	BYX																		
22231		L								ļ															
22232				L	L		İ		L																
22233]	Ĩ					7				ſ	{	
22240														-											
22300	<u> </u>				_			 	 	 			-												\vdash
ļ	CW	CWY	СВ		-		QUC		UBW										_						
55400	 		WY	-		 	QUC BY		IZ	ļ <u></u>	 										ļ				
22410	<u> </u>	<u> </u>				<u> </u>			ļ		igsquare														
25420	Ì								İ																
22500	QCW YZ	OCW YZ	Y																						
22510	1.5																								
22520	<u> </u>		-		 —		 	 	 													-			
					 					ļ											<u> </u>				\vdash
22530							<u> </u>			ļ	ļ											Ļ			
22540		ļ		L			<u> </u>				<u>. </u>					L						<u> </u>			
22600					UBW			1			l					l									
22700	Z																								
22800	QCY		QCB WY	UVC			UC BY			-						- -									
22900	 	 -	71	DW	 		DI.				-					-					 				
22910	10000	QCW	QY	UVC		VY	QVY	v	QY		-				-	<u> </u>					<u> </u>	<u> </u>			
	 	YZ.	ξX	BW		1		-		ļ	—				1	-	ļ	-	ļ	ļ					ļ
22920			<u> </u>	U VC		ļ	<u> </u>	ļ	QUBW Y1Z	ļ											ļ	ļ			
22930						<u> </u>		İ									Ĺ				İ				
22931									QUBW YIZ																
22932		QC WY									<u> </u>														
22933	╀—	† "	t		1	t				† -	t			_	 	 								_	
22940	1017	QYZ	 	 		+	 	1	 	 	 	-			-	1-	-		<u> </u>	-	 	 			\vdash
-	 			 	 	 	 	 -	 					L		 	 	-	<u> </u>	-		 			
22941	ļ		-	<u> </u>	-	<u> </u>	ļ	₩	ļ		<u> </u>		<u> </u>		 		 -	ļ	<u> </u>	-		-	ļ		├ ─┤
22942	<u> </u>	<u> </u>	ļ		1	ļ	<u> </u>	<u> </u>	<u> </u>		<u> </u>	<u> </u>	ļ	L	L	ļ	ļ			ļ	ļ	<u> </u>	ļ		
22943									<u></u>							L	<u> </u>								
22950	CWZ	QCW YZ			1		CBY		QUBW YIZ]
22951	†	1	 -	1	1	t^-	1	T	1	1					<u> </u>	T	1			<u> </u>	<u> </u>	T			\Box
22952		 -		1	†	<u> </u>	 	+	 	 	 	\vdash	-		\vdash	 	 			 	t	 		 -	+-1
-	 	+		+		 				 	\vdash			l		 				-			\vdash		-
22960	+		ļ	ļ	 	╁		 	├ ─	· -		<u> </u>	<u> </u>		-	ļ						ļ	<u> </u>		
22970				<u> </u>	ļ	ļ	<u> </u>	1		-	L	<u> </u>	L		<u> </u>	<u> </u>	-	<u> </u>	ļ	-	<u> </u>	ļ			L
22980	<u>L</u>	L	<u>L</u>	<u></u>	<u> </u>	L	<u>L</u>	<u></u>	<u>L</u> .		L							L_		L		L	<u></u>		
22981]					!		
22982	1	_			1	T			1	1	1								1						
22983	↓		+	<u> </u>		\vdash	 	 	 	\vdash	 	 	 	-	-	<u> </u>	 	<u> </u>		<u> </u>	1	 			
-	-	 	+	 	 		 -		\vdash	 	 	<u> </u>	 	-	 -	 	 	-			\vdash	 			\vdash
22984		ļ	<u> </u>		1	ļ	↓	 	ـ	ļ	<u> </u>	ļ	<u> </u>	<u> </u>	ļ	ļ	<u> </u>	<u> </u>	 	ļ	<u> </u>		ļ	<u> </u>	
22990		<u>L</u> .	<u></u>	L		<u> </u>	L		<u>L</u>	<u>L_</u>	<u></u>			<u>L</u>			<u> </u>		<u> </u>	<u> </u>					

		\neg	A01	A02	_A03	AO L	A05	A06	A07	80A	A09	A10	All	A12	A13	A14	A15	A16	A17	A18	A19	A20
13			Ę	Possum Kingdom Submerged Bucket E				$\overline{}$			Morganza Floodwy Contr Structure TM 2-326			_	D	Gavin's Point Spillway TM 2-404	tes	111 2 2	3 t 11		bank	
	ŧ	AND REPORT	opøu	Page Buc	ngdo	Can	Ver			}	Floo uetu	ηŢ	Dam	Gate	la la	oint	L S F Ga	Ripr Ret	ruc B		es l	
	3508	32	# К1 way 1-1	rged 1-2	es 7-3	uese 3-1	8 ay - 8	7 - 0	tone es 243	0113	Str 326	340 340	as 358	ham 183	386 386	s and	iver Lea	iver F	iver ol S	er 185	iver Gat	re D
OF	DESIGN AND PERATIONAL VARIABLES	¥.	0.55UL D111	ossu ubme	SESTE H	7.02 E	pilly	Canton Spillway TM 190-1	lues affl	emop -	organ	1 S 2	Cheatham Emergency Dam TM 2-358	leatly 1117	2 3 7	avin 1211	ld R	ld R	nd R	arri	Old River O' Panel Gates TR 2-491	Old River Closure Dam TR 2-496
	ATES AND BULKHEADS	\dashv	a. w.t	a w F	- # F	S T E	NNE	១ភគ	m & F	476	£ŏ₽		DAF	ರ ೫ €	QUV WY	छ्य्ह	UBW	O E E	00F	QUVW YIP	UF	OUF
23100	Туре	-		-	-		-		<u> </u>		<u> </u>	YIX	\vdash		WY	<u> </u>	-			YIP		-
23200	Shape					 							СВ	QUBW			I	 				-
23210	Height			-	├	 		-	<u> </u>		 		WF	EZF			FA	 	<u> </u>			
23220	Radius	\dashv		<u> </u>	 		 	QY					<u> </u>			-	 	 	<u> </u>			
23230	Tilt					 		-			-		-									\vdash
23240	Lip			 	 		 	QY						_		-	FA		 			-
23300	Location on Sill					 		\vdash	L		-		-	-		-						
23400	Weight	-						-					 									
23500	Hoist	\dashv		-		-	-				-		-	F			PA	 			F	
23600	Emergency Closure	-		_		 					<u> </u>	-	CB				FA			VY	\vdash	\vdash
23700	Noted Items	\dashv			-	Q							WP	FX			FA	\vdash			-	\dashv
23900	Operation	\dashv			-	-	-		-										-		\vdash	-
23910	Pool El			<u> </u>		Q	 	QY			 -	 		F	QY	<u> </u>	FA	 			F	
23920	TW E1										_	QUW	F	QE	QY		PA				F	-
23930	Type Flow	\dashv			-							YIX	\vdash	ZF						YIF	-	
23931	Free/Submerged	_									CBW	UV		QZ PX	QY		FA			QY	UF	
23932	Gated/Uncontrolled	7					-					ΥI					FA					\neg
23933	Unit Discharge	7				 	-					UW			QY		-	-				\dashv
23940	Gate Schedule	\dashv										địx XI	-									一
23941	Single	7														_	FA				F	-
23942	Multiple	1				Q											FA				F	$\overline{}$
23943	Locations	_				-							P				FA				F	
23950	Gate Opening	┪										QUW YIX		QEZ FX	Θλ		I			QUVW YIF		
23951	Uniform					Q		QY									FA			117		
23952	Variable																					
23960	Gate Submergence	T												QEZ FX			FA			VY		\neg
23970	Gate Speed	ヿ																				
23980	Other Factors	\neg																				
23981	Ice/Debris	1																				
23982	Loose Barges																					
23983	Waves																					
23984	Power Discharge																					
23990	Noted Items																					
		_]																				
		[]]
		_]				L]	
]	
		_]																				
		_]																			7	
		J																				
		$oldsymbol{\mathbb{J}}$																				
				L	L	Щ.		إــــا	لـــــا	L—	L		لـــــا			ــــا	لــنــا					

	A21	A22	A23	A24	A25	A26	A27	A28	A29	A30	A31	A32	EEA	A34	A35	A36	A37	A38	A39	A40	A41	A42	A43	A744	A4
14		}	ļ	vay.	yea.	, Hay	ska	£	5	50,		Proctor Spillway TH 2-645	nk nk	Sms or	ĺ	.5		ates			A Spillway TR H-69-15		App	Sills	ates
	a l	1		110	T T] =	peki	rlar asir	Basi	da	erry	ļ	R Da Emba	R D2		Belleville Stilling Basin TR 2-687		્યું •ક		1	5	ō.	ص ج	R Diati	- 3
	George 2-519	g	61. 58	E = 66	2 S	8. S	0/4.5	e 38 8 8	S 28	3.95	8 4 5 H	25.5	50 W	28 S	tay 557	1111 1111 187	8 g g	tay 710	28 1 73 1	35	5.6	70-0	0.	sas Vibr	a E
	W F Georg L&D TR 2-519	cksd D 2-F	rdan 2-5	F. S. S. S. S. S. S. S. S. S. S. S. S. S.	tes 2-5	2.5 E	tes 2	tes 2-5	2-5	S F1	11er tes 2-6	2 to	kans erf1	kans Hea	Oahe Spille TR 2-6	11ev 1111	Barkley Spillway TR 2-689	1114 2-5	nn 11 1111 2-'	2-1	811 F	111. H-	Kley FILE	te a	33
	≥ 3 E QYZ	QVY QVY	요국문	107 E G E	មិនិ	885	8 8 €	S G E	P ST	2 25	5 8 E	무양도	A S K	45 A	Sp. 28	TR BE	A SP	a Se E	모양	요 3 1	크장도	S ds TH	S SP	Ga	£ %
23000	Q12	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	YIZ	05#	05"	, Q1		arm.			VY			401	QU VY			170	WY	Ľ			*.	<u></u>	***
23100				PFAX	FA	Ĺ	L	QUV YFA	QY	QUB WY		Ĺ				Ĺ	Ĺ	WX							L
23200				F			QY											JA.			İ				
23210						1				1							1								
23220		 					-										 	O UY					ŞΥ		QUV
23230		 	 			 -	 			 		_		 											YFA
		 		ZP	F	├										 			<u> </u>		-			Α	├
23240		<u> </u>	ļ	AX			 	 		 	<u> </u>	-						<u> </u>	ļ					 	-
23300	ļ	<u> </u>	ļ	<u> </u>			ļ		ļ	ļ	<u> </u>	ļ			ļ	ļ	ļ	ļ	ļ	<u> </u>	<u> </u>				ļ
23400				L	<u> </u>																				
23500				FA	FA			FA	ļ									İ						Ì	
23600					FA		T	CF											1					-	7
23700			1	AX	F		1			-	<u> </u>							QU VY							UW FA
23900	\vdash	\vdash	 	 	-	t	 	 	 	1	 	 			\vdash	t	 	 			<u> </u>				I'A
	QYZ	QY	UVW	ZFA	FA	QY	 	FA	 	QUB	QY	_	-	QUY	-		 	\vdash	QY		QUY		QY	A	QY
23910		QY	YI		1	QY	QY		QY	WY	QY	 	ļ	QUY	<u> </u>	1	 	QÝ	QY		QUY	 	VC.	Α	ŪΨ
23920	<u> </u>	ļ.,	WYI	QYZ FA	QY FA	ļ	ļ	QY FA	ļ*	QUB WY	ļ	 	<u> </u>	-	ļ			ļ	ļ	 	-		 	├	FA
23930		<u> </u>			<u> </u>		ļ		ļ	ļ		ļ		0.00	<u> </u>	ļ	<u> </u>			Ļ	O.I.M				ļ
23931		QVY	QUV WYI	QYZ PFA		QŸ	QY	QY	ðλ	QUB WY	QY			QUY		<u> </u>		QY	QY		QUY	ļ	L		L
23932		QY	UVW YI	QY						QUB WY	θÃ						-	đλ	QY	!]		ł	1
23933	Z		QY				†						VW YR		-		1			T					T
23940	-	v	 	†		 	<u> </u>	 					1.K		 -	\vdash				<u> </u>	1				†
		├	 	-	 	 	 		 	·	 			\vdash	-	┼			-		 	-		 	+
23941		-		ļ	F	├	 	F				├─		 	<u> </u>	├	 		-		<u> </u>	<u> </u>		├	
23942	L	<u> </u>	<u> </u>		ļ	ļ	ļ	F			<u> </u>	 	ļ			ļ	<u> </u>	ļ		├—	ļ	ļ		ļ	<u> </u>
23943						L	ļ	<u> </u>	ļ.,,,			<u> </u>					ļ			ļ				ļ	
23950		v		QYZP FAX	QY FA	QYX	QY	QCY FA	ðλ	QUB WY	QY			QUY				QY			QUY		QY	A	PAX
23951	QYZ	QY							1				ì	l		1	l	l	İ		1				
23952																									
23960				QYZP	QY	 	†—	QCY	-						_		-	†							Т
23970	-		 	FAX	FA	f	 -	FA	 	\vdash		 	 			 			_	1	 		<u> </u>	 	1-
23980		-	-	-	_	i -	1-	 	+-	-	 	-				 		 				-		 	╁
		 -		 		ix	 	├		 		├	ļ		 -	 -	 	 	_	 			-	 	×
23981	<u> </u>	<u></u>		ļ	ļ	ļ	ļ	<u> </u>	-	-		L				ļ	ļ	<u> </u>	<u> </u>	 	<u> </u>		<u> </u>	ļ	1
23982			1	ļ	ļ	1	ļ		ļ			1				<u> </u>	<u> </u>			ļ			ļ		
23963			L.										L				ļ			<u> </u>	L				_
23984						1								L											!
23990					F				\Box						_		T	T		Ţ	T]		j
	T -		1	†	-		†		<u> </u>	1	T^-	_				-	<u> </u>	 		1		<u> </u>		Τ	
	 	 		 		 		-	 	 	 	 				 	 	 			 				+
	 		 	<u> </u>			 	 	-	├				-		 -	 -	-	-		 			 	
	<u> </u>	-				ļ			 	ļ	<u> </u>	<u> </u>		ļ		}—	ļ	<u> </u>		├	├		ļ		-
	 		ļ	ļ		L	ļ		ļ	ļ	<u> </u>	ļ			ļ	ļ	ļ	<u> </u>		ļ				-	ـ
							L	L	<u> </u>	<u> </u>	L					L	<u> </u>	L		ļ		<u> </u>		<u> </u>	<u> </u>
									l							1	Ì					<u></u>	_	L	
						T										Ţ			Ţ			ľ			
	-		1			1	T	1	†	1	†	1	l	T		T -	†	1		1				Ι	T
		 	1	 	 	 	 	 	 	†	\vdash	 	-		_	 	 	 	-	 	 -		†		+-
	-		 	 	 	├	 	 	-	 	 -	 		 	 	₩	+	 	 	 	 			+-	+-
		 -				├ ─-	<u> </u>	├ ─	 	↓ —	 	 -		 		├	+-				 	 	-	 	<u> </u>
		ļ	1	<u>L</u>		<u> </u>	ļ	<u> </u>	<u> </u>	<u> </u>	<u> </u>	L	L_	ļ	<u> </u>	<u> </u>	ļ			L	L	<u> </u>		ــــــــــــــــــــــــــــــــــــــ	1
	1		1	ì		1	1	1	1	1	1		1	1		i i	1		ĺ	1	l	1			İ

	A46	A47	A48	A49	A50	Ā51	A52	A53	A54	A55	A56	A57	A58	A59	A60	A61	A62	A63	A6L	A65
(19)	7.10		11 6	7				ة		2	1,2,0	Navigation Dam Swellhead MP 2-468	ø,	a a	es	es	e c	SE SE		
DESIGN AND REPORT			LS	S 2	I Ma	3 2	ana A&B	9 v i	ding	ikhe 5	20 5	n Da	Gate	Emba	Gat	Curv	ck Was	rer rer	asin ends	8 8 3
OJEC	111 8 1-1	By W	ver Vib	ver 1007	Sp1	ver 7-1	om (1838	Sat.	Lan Pay 191-	3-13-13-13-13-13-13-13-13-13-13-13-13-13	Pi.	tio ead	tay ton 184	35 Se	irr Soe	Tow res 525	1 Ro	300	8 T 9	0 -0
DESIGN AND	Aliceville Spillway TR H-74-10	11 H	Old River Proto Vibr TR H-76-15	Old River L Operation TR H-77-02	Proto Spillway	E E	1114 H-7	불양분	ays 111,	F	7 1 tr	212	1111 brat	prag	Vert Lif Discharg MP 2-606	ess:	ope.	Pra H	Sign H	Baffle Piers Drag Forces MP H_70-04
OPERATIONAL VARIABLES	A SE	385	G & E	5 8 F	QPA C	8 23 E	4 % E	Proto Gate Vibr TR HL-79-08	2 8 E	SFA	8 S 3	N S X	S S E	óæ¥	2 G E	2 T E	9 F E	2 E E	202	8 0 E
23000 GATES AND BULKHEADS	<u> </u>			QUW YZF								├								
23100 Type		<u> </u>		<u> </u>			OIIC -						2PA						<u> </u>	
23200 Shape	<u> </u>	<u> </u>		ļ	ļ		QUC BWY				ļ		217	ļ				ļ <u>.</u>	ļ	
23210 Height	<u> </u>	<u> </u>	L_		ļ	v .	UBW					ļ						ļ	$lue{}$	
23220 Radius					ļ							L	<u> </u>					L		
23230 Tilt																L			L	
23240 Lip								PA		SF					Q					
23300 Location on Sill																ДХ			<u> </u>	L
23400 Weight]	-																	
23500 Hoiet			Fχ	F						SFA										
23600 Emergency Closure										CBW FA			A							
23700 Noted Items			FX	QUV WYZ	Τ-					SF			ĨΑ							
23900 Operation		\vdash																Ī		
23910 Pool El	1	\vdash	FA	QYF	\vdash	QΥ	QUC BWY			CBW			A		QY					
23920 TW E1		_	PA	QYF	1	QY	UC BW			CBW	<u> </u>	1	A		-			1		\Box
23930 Type Flow	 		_	-	_		₽₩			SF A	 					_		-	_	\Box
23931 Free/Submerged	+-	_	1	QYF	Q	QY		-		CBW							f	1		
23932 Gated/Uncontrolled	+	-	-	QY	Q		UC			SFA	 		 	 	Y	<u> </u>				$\vdash \dashv$
23933 Unit Discharge	 	 	 		 	-	BW_			 	_	 	 	├		-	 	 	 	\vdash
23940 Gate Schedule	┼	 	 		+-	-				 		 		├	-	-	_	<u> </u>	-	-
	┼	+	-	 	QCY	 -	 -	 		-	├		 	 	 		 		+-	+
	+-	 	┼	-	┼	 -			 	 	-	 		┼			 		 	\vdash
23942 Multiple	├	- -	+		┿~	 -				├	├		├	┼		 	 -	 	 	├
23943 Locations		-	FA	QYF	 	QY	QUC	PA	├	SFA	├	-	ZPA	\leftarrow	QY		-	-	┼	+
23950 Gate Opening	├		-	ļ	ļ	ļ. —	B₩Y	<u> </u>		-	} -	 	↓		ļ.	 	-		-	
23951 Uniform	┼	 	<u> </u>	 	 	-				 	 	├		┼			 	┼	┼─	
23952 Variable	 	 	FA	F -			<u> </u>	PA	ļ	CBW	├	 	IZP		ļ	ļ	-	ــــ		
23960 Gate Submergence	↓	 	ļ.,	ļ	 	├ ─-		<u> </u>	 -	SFA	↓ —	-	AX	 	ļ	<u> </u>		ļ	<u> </u>	\vdash
23970 Gate Speed	↓	<u> </u>	↓	ļ	 	ļ		ļ	ļ	/ n	ļ	ļ	↓	 -			<u> </u>	 		├ ─┤
23980 Other Factors		ļ	ļ	<u> </u>	↓	ļ	<u> </u>		ļ	<u> </u>			<u> </u>	↓_	ļ	L	.	-	↓	├
23981 Ice/Debris		<u> </u>	1_	<u> </u>	<u> </u>	ļ		<u> </u>		ļ	<u> </u>	<u> </u>	<u> </u>	—	↓	 		<u> </u>	├	1
23982 Loose Barges	_	1	otag	<u> </u>		<u> </u>		<u> </u>	<u> </u>		<u> </u>		<u> </u>	1_	<u> </u>		<u> </u>		↓	↓
23983 Waves					<u> </u>	L	ļ	L.			<u> </u>	<u> </u>	<u> </u>	Ļ.,	<u> </u>	ļ	<u> </u>	<u> </u>	↓_	1
23984 Power Discharge			<u> </u>	<u> </u>	L	<u>L</u> _	L_	<u> </u>	L				Ĺ		<u> </u>			<u> </u>	<u> </u>	$\perp \perp$
23990 Noted Items					1			<u> </u>		PA				<u> </u>			<u> </u>	<u> </u>	↓	\perp
			1		<u> </u>		L			<u> </u>	<u> </u>	<u> </u>			<u> </u>	<u> </u>			1	
	T			T							ſ									
						L^{-}	L^{-}													
	T						}													
		1			\top	1														
	1		1		\top			Γ						1		Γ		T	T	
	1	+-	\top	1	†	1			T^-	1	T			1	1	1	1	1	T	
	1	\top	+	1	+	 	†	1	+	+-	1	\top	1	\top	\top	Τ	\dagger	1	1	
	+	+-	+	+	+	\vdash	+-	+	+	+-	t^-	+-	+-	+	1	t^-	+-	 	+	11
	+-	+	+	+	+-	 	1	+-	+-	+	+-	+	+-	+	1-	1	$\dagger -$	1	+-	1-1
	+	+-	┼─	+	+	+-	+-	+	+-	+-	+	+-	+-	+	+-	+-	+-	+	+-	+
	+-	+	+	+		+	+	+	+-	+-	+-	+	+	+-	+-	+	+-	+	+-	+
L	Ь	┸-			Т.	┷					┺			ــــــــــــــــــــــــــــــــــــــ	.—.	┸	┸	٠	ــــــــــــــــــــــــــــــــــــــ	لــــــــــــــــــــــــــــــــــــــ

	A66	A67	A68	A 69	A70	A71	A72	A73	A74	A75	A76	A77	A78	A79	A80	A81	A82	A83	A84	A85	A86	A87	A88	A89	A90
169	£	Tainter Gates CE Project Data MP H-72-07		A) 61	0)	Old River O'bank Outlet Channel MP HL-80-05	נענע		-	al	13	Hastings Spillway STP 01	rge	2 mn	29					6.	Montgomery Is Channel & Spwy 89 STP 14			5	A Deoria/La Grange H S Wicket Discharge O H S STP 23
	žą.	Da	ace	Fires.	ee ce	on c	res 1uc	31	ent	Can	Sil		cha	2	Beartrap Dam Chamber Silting STP 04		15 14a	To to	a 4 sin	Coef	Spw	Spwj	Coe:	Per C	Grat
()	Sha Sha	96 5	2 2 2 E	2 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	rra 19 19	F 2 8	8 8 T	3 20	Ero F	3y3	1 2 9 <u>2</u>	E 20	ams Dis	init ay &	ap 7	1	15 15 15 15 15 15 15 15 15 15 15 15 15 1	8 5	nel Ba	Set	ery.	2 "	5-5 Gt	Cof	Ca Dis
]	1 to 1 7	Pro F	11w er 3	11 E T	1 2 T	Z # Z	-0g	O R	End Fe	er L	er a	1110	10 D	114 114	age a	Marmet L&D STP 05	8 + 6	4 7 6	ongs st. 1	ler char	g E =	fie] me]	S R ler	1 3 R	ket 2
	돌절	₹ 8 ₫	Sp1 Upp	Spi Des	Spi Flo	# E S	3 5 E	Ohio R L&D 37 Spillway Paper D	Pap Pap	St. Sp1 Pap	St. Pap	Has Sp1 STP	San O'f STP	KIS Spi STP	Cha STP	LED STP	Miss R L&D 15 Dam & Spillway STP 07	App A to STP 07 Model vs Proto STP 09	Mononga Crest & STP 12	Roller Gates Discharge Coef STP 13	Cha STP	Win Cha	Mis Rol STP	ST CPTS	Peo Wic STP
23000												QY										QYL	QUV	QŸ	QUVCE
23100		1						QY												QY	†==	<u> </u>			
23200		x					-											\vdash		-	 	-		$\neg \neg$	$\overline{}$
23210	-	x			<u> </u>	├─	 	-					_		<u> </u>	-	 	 		-	-	-			
23220		x					-								-	 	 				├		<u> </u>		
	├	X	-		_	 					 										├ ─	-		\vdash	
23230	_	ļ					ļ		L		<u> </u>		L					<u> </u>	ļ		<u> </u>	L			-
23240	L_	<u> </u>	L	<u> </u>			<u> </u>				L							<u> </u>	ļ		<u> </u>	<u> </u>			<u></u>
23300		X				<u> </u>					<u> </u>	İ			l					Ĺ				L .	L
23400		}															Ĭ								
23500																i									
23600		Х																		-	l -				
23700	<u> </u>				 	_		 							TVY	 		<u> </u>			t	E			QUVC1 WYIE
_	 		-	-	 	├	1	 	 						IE	1				-	 		-	\vdash	WYIE
23900	 	 	ļ.,		-	<u> </u>	 -	├—	ļ			QY	<u> </u>	<u> </u>	١				ļ	QY	 	├	QUY	QY	STILLE
23910	ļ	ļ	ļ		<u> </u>	<u> </u>	 	<u> </u>			<u> </u>	QY	-			ļ	ļ			L	 	ļ	QUY	QY.	QUVB WYI QUVB WYI
23920	<u> </u>	<u> </u>	-		<u> </u>		<u> </u>	<u> </u>	<u> </u>			<u> </u>		L		L_		<u> </u>		QY	↓		wo I	1	WYI
23930						<u> </u>		<u> </u>				<u> </u>				<u> </u>	<u> </u>	<u> </u>							L
23931	L					L	L	L				QŸ		L						QY			QUY	QY	
23932																									
23933	i —						P									1					† ·				
23940		 	_	<u> </u>	 		-		-		_	_			-	+-		 	_	QY	 	 			QVY
23941	-	\vdash				-		-		-		-					├-	├	-	QUC	├		-		C
23942		 					├	-	-			 				 		 		DWY	 	├			UC
-	-	ļ		-	-	-		<u> </u>				<u> </u>	ļ							QY	<u> </u>	 			UC BW UC
23943		x		_								_			TE						<u> </u>		QUY	QY	BW
23950		ļ^						<u> </u>		<u> </u>		<u> </u>	<u> </u>	<u> </u>	1.5					QUC BWY	<u> </u>	<u> </u>	Qu'i	4.	
23951		L			<u>.</u>	Ĺ.,				i								<u> </u>							Ĺ
23952											l										Ì				L _
23960																							QY		
23970	1																								
23980	 -					1		_	-		<u> </u>	 			1	 					†				
23981		 		<u> </u>	_	 	-			-			l	i	<u> </u>	<u> </u>	 -	 	-		 		ļ		·
23982					 -	-	 	 -				 		 	 			 			 	-			
-		 	 						 		-		ļ	-				 			├		-	\vdash	
23983		 			 	 	 		ļ				ļ		 -	├	<u> </u>	 		<u> </u>	 	├		 	
23984	<u> </u>	├	ļ		ļ	 -			<u> </u>		<u> </u>	<u> </u>			TE	 	L	ļ			↓	L		 	
23990		<u> </u>				<u> </u>		<u> </u>			<u> </u>				12	L					<u> </u>	L_			
	<u> </u>			L		<u></u>					<u> </u>	L			<u>L</u>	<u></u>	L		L.						
	L					<u> </u>		<u></u>		L [_]	L	L		L				L	L						
		T^-					 	·	<u> </u>			1				<u> </u>	\vdash				1	T			
	 	 	 -		 	 	 		-			\vdash			 	 	_	 	-		 	+	-		
 		 	 		 	 	 				 	 	· · · -		 				-		 	 			_
ļ		┼			 		 -	 -				-					-	<u> </u>			├	 			
 	 	 	 		<u> </u>	<u> </u>			ļ		ļ	<u> </u>	<u> </u>	<u> </u>	<u> </u>	<u> </u>	-	<u> </u>			├	<u> </u>	ļ		-
<u> </u>	<u> </u>	<u> </u>	<u> </u>	<u> </u>		ļ		L_	<u></u>			L	<u> </u>	<u> </u>	<u> </u>		ļ	ļ	ļ		Ļ				<u> </u>
	<u> </u>					<u> </u>	<u></u>				<u> </u>			ļ							<u> </u>				
		L						l			l														
					I																				
						Γ-					 														
	Ь—		1			—			Ь		Ь——				<u> </u>		Ь					ь	نــــا		

		A91	A92	A93	A94	A95	A96	A97	B9A	A99	B01	B02	B03	1904	805	B06	B07	B08	B 09	B10	B11
(T)	-	e.e		T-60		T -	_	Gate	13 96 13	_	Miss R L&D 1 Spillway Apron STP 63	ri.	T	$\overline{}$	-	7 5	T-race		Basin	5	de Cap
	DAN AND REPORT	Basi	erts	Selection	Miss R 5-5A-8 Tainter Gt Coef STP 31	Miss R LkD 22 Scilling Basin STP 33	Bas.	Sub Tainter Gate Coef & Basin STP 37	App A to STP 13 Roller Gate Coef STP 39	lasir	Apro	3 ag	tes s	Pres	McNary Cffrdms & T-rac BHL 20-1	eg eg	الم الم	١	n eg	Basin	John Day Spwy & Dvrsn BHL 97-1
}	ROJE D RE	7 5 7 2 8	17.70	erge o		2 5	2 m	Baint Ba	3 2	Į#,	13 A E	5 t 6	r Ga	1 & -	280	, a	S-1-5	a ye	alle	1111	200
n	DESIGN AND PERATIONAL VARIABLES	153 till 7P 2	S 5 6	L sch	iss aint	1 E 1 E	E SE	Sub T Coef STP 3	P P P	ates	Fig.	7 L	olle ress	onne pilli	Fra Z	McNary Spillway & G BHL 21-1	Ice Harbor Cffrdms & T BHL 22-1	ce H pilly	The Dalles Spillway & F BHL 55-1	ev S	# 5 H
 -	GATES AND BULKHEADS	WO.	ENN	WULD	Ar SA T ← N	UBWY	TOUL	OAL NON	A S N	QYL X G W	ENN	QUW YZ	ZFX	₩ (V W	まい面 UZ		H O E	QY ⊶ ഗ ⊞	CAX CAX	OX W we we	3.55
23100	Туре	YL UY	 	WYX	YL.	ZLF	EZF	 	TLX	TOUVC BAYIE RZF	\vdash	172	ZX		 	YF W	 		 -	-	-
23200	Shape	 	 	+	 	 	QYZ	HYEZL	 	RZT	 	 	ZFX	-	 -		├		 		\vdash
23210	Height	 		 		 	┼──	P	 		<u> </u>	<u> </u>	 	 	 -		 			-	
23220	Radius	 	 	 	├	E	┢	SA.			 	├──		├			 		 -	-	\dashv
23230	Tilt	├	 	 		 	 	GAT		 -	<u> </u>				 -	 	 	 			-
23240	Lip	 	 		├──		 	 	 		ļ		-			YI	 		 		
23300	Location on Sill	 		-	 -	 	 		-	 	_			YZ	-	Œ.	-	 	 	-	-
23400	Weight		 -	 		├	-									PF	 	├			
23500	Hoist		 	 		ZF	TE	ZF		VZF	├					F					
23600	Emergency Closure	-	├	_	 	\vdash	ZF				 -						 		├		1
23700	Noted Items	-	 	QUB		_		TUVY	-	-	 		ż		-	QŶ	 			-	
23900	Operation	_		WYX		 	-	EZF	 	 			-			-			-		
23910	Pool El	QU	+-	QYX	QV	UY	UYZ	QΥ	ATX GABM	Y	\vdash	QU	zx	-		-	-	QY	QY	QΥ	
23920	TW E1	QUY YL	 	QYX	QV	UBW	QYZ	QYŽ	OUA ATX	QVY	-	UBW UBW	ŽX			-					
23930	Type Flow	-	-	 	Ar	YZL	-	LF	LX_	ZF		YZ		_	<u> </u>	<u> </u>			<u> </u>		-
23931	Free/Submerged	QYL	<u> </u>	 	QYL	UBW	ZF	QYZ	U	QVY											
23932	Gated/Uncontrolled		-	 	 	YZL	 	LF	 	ZF	-		-		ļ						\dashv
23933	Unit Discharge			 	—		 -				-										
23940	Gate Schedule	-	-	-		-	-				-		-			w		QY	x	QY	-
23941	Single		 		-	-					-					-			-		
23942	Multiple		 	QYX		-	-									-	 				
23943	Locations				-	-	 				-					 					-
23950	Gate Opening	QU	-	QYX	QUVB	ZF	QY	QUY	QÜ	QVY		ଦ୍ୟ	ZPX	YZ		QF		QY	QYX	QY	
23951	Uniform	YL		 	WYL	 	ZF	ZLF	YL	ZF		YZ					ļ	-	 		
23952	Variable		-	<u> </u>		-				-					-	-					\dashv
23960	Gate Submergence		 		QUB	ZF	QY	QUY		Y	-		2			 					-
23970	Gate Speed				WY		ZF	ZLF	LX		-	YZ				<u> </u>	 				
23980	Other Factors	<u> </u>	-	<u> </u>		-	ļ	<u> </u>							 		-			-+	
23981	Ice/Debris	 				ZF	 	ZF			\vdash					-			X		
23982	Loose Barges	 	 							 						 	 				-
23983	Waves		-		 	 	<u> </u>			 		-				-					
23984	Power Discharge		 													 -					
23990	Noted Items	_		 		ZF		ZF						YZ		QWF	_		-		
			 	_			 				 									$\vdash \vdash \vdash$	
		 		 						 -						 		 			
	· · · · · · · · · · · · · · · · · · ·	\vdash	 		 		 		<u> </u>	<u> </u>	$\vdash \neg \vdash$	<u> </u>				-					-
		 	 	_		_	 				\vdash		 			-	 		 		
		\vdash			<u> </u>	<u> </u>			ļ	 	\vdash				<u> </u>		<u> </u>	_			
		 -	 		<u> </u>			-			-		 					-			-
				 				-	ļ		-							l	<u> </u>		
					ļ		<u> </u>	-	<u> </u>											\vdash	
																					\rightarrow
						-	<u> </u>									\vdash	\vdash				
							 														
		<u> </u>		 	├	-	<u> </u>			├							\vdash				
			<u> </u>		L		L			<u> </u>			لــــا		<u> </u>	نـــــا	L		<u></u>		

	B12	B13	B14	B15	B16	B17	в18	B19	B20	B21					r	Γ		г -	г						
18	tal sin	A Clittle Goose N Spillway & Basin W BHL 114-1		6 _	8	2	2	_	_										1						
	Ba	a eg	. 70	Land nne	ية به	<u>ت</u> ن	, ř	asir	Spw	ents	ł	İ		Į											
	Monu ay & 4-1	8 2 -	inte ip M 6-1	585	fug f	% P 9	Fig.	90 Sa	0113 1 & 5F	Curr					}		ļ	ļ	į			ļ	ļ	}	
	110	11 th	e L	ogh Y A	3 at the	Fle B	Tie Be	1211	11pc	11p								i						,	
	S S H	ES C	Bat B	Spirit	S e s	Blu Bar	Bar CIT	SEE	18 g T	요통증	<u> </u>														
23000	QYZ	QYZ					Øλ		12																
23100					UBW YF																				
23200					<u> </u>						_	†	<u> </u>					 		\vdash	·			<u> </u>	
23210								 				-			-		-		 			<u> </u>			
53550						<u> </u>		-	 			·					-	├	-	 	-				-
23230		-			-	 -			 				 			├—		-	 -	-		 			
-	QY		UBYIZ		<u> </u>	<u> </u>	ļ							<u> </u>			 _			<u> </u>					ļ
22.10			UBY 12 PFAX		<u> </u>											!	ļ		<u> </u>	<u> </u>		<u> </u>		<u> </u>	<u> </u>
23300					Ļ	<u> </u>	<u> </u>					ļ				 		ļ	· 						
23400												<u> </u>			<u></u>										
23500					F	<u> </u>		L														1			
23600																								!	
23700		[Ī	WYF													1							
23900					_							 			_	t					 	<u> </u>			
	QY	QY	ZP	 	UBW	 	QY	\vdash	 		 	 		 			_		 		 				-
23920			FA YIZ		YF UBW		-	 	UBW			 				 		 	 		 				
23930			PFA CB WY		YF				IZ	-			<u> </u>		 					 -	├-	-		-	
_			WY			<u> </u>			UBW						-			-		<u> </u>	<u> </u>				
23931		QY			ļ				IZ			_									<u> </u>		ļ		<u> </u>
23932		**			ļ			<u> </u>				<u> </u>								L					
23933					L		L				L											<u> </u>			
23940		ďλ																							
23941																									
23942											-														
23943																									\vdash
	QY	QY	YIZ		UB WF		QY		UBW			_								_			_		
23951			PFA		WF				12					L			 -	-		-		_		-	\vdash
23952		-						 								-	 -	ļ <u></u>	 						\vdash
-		-										_						-	 				-		
23960																				ļ					
23970																									
23980							L		L										ļ						
23981			UBX												L				<u></u>	L					L_ ¹
23982																									
23983					WF																				
23984																									
23990							<u> </u>				<u> </u>								 						
			_						L									_	 	_					
				 		-							-		 		 		 						
\longrightarrow						 				-		- -			ļ	 -		ļ	 						\vdash
																ļ	 		ļ		ļ	 		ļ	
-									L					_					ļ			ļ			
																L					ļ			L	 _
																								<u>_</u>	
$\neg \dagger$																					<u> </u>				
\dashv					-													٠							
		-		\vdash															 			 			
								ٺـــا							L		لــــــا	L			L				

		A01	A02	A03	A04	A05	A06	A07	A08	A09	A10	A11	A12	A13	A14	A15	A16	A17	A18	A19	A20_
19	_	Ę	Possum Kingdom Submerged Bucket	g	lai	1				Morganza Floodwy Contr Structure TM 2-326						Sill ates	Dustr Ch Riprap	5111 5t 3		Old River O'bank Panel Gates TR 2-491	
	DESSIGN AND PROJECT AND REPORT	ng qu	ng d	pgu	Canal	Ver			_	Floc	JJn	Dag	Gate	rla	otnt	្ដឹង	P R P	Pot L		es o	E C
	PROJE	IM Ki	E Se	In Ki	ucie 33-1	88 y R	2 4 0 V -	tone 243	252	str 326	poot 340	tency 358	tham 1381	-386	s ton	l-Le	Ch Ch Thu	rol 3	ior Luay -485	Car 491	1.06 L
OF	DESIGN AND SPERATIONAL VARIABLES	Possum Kingdom Spillway TM 111-1	Submer 1	Safr M 1	7. 38 E	Spillway	P T	Jues Jaff	Demog L&D TM 2-	forga Sontr	Jim Wood Lab	Cheatham Emergency Dam TM 2-358	head Spill	lew (Gavin's Point Spillway TM 2-404)1d 1	old F Onstr	Sont:	Jarri Spil	Pane	Old River Closure Dam TR 2-496
	STILLING BASIN (APRON)	ם טור	E 0) E	ш. ш. р	UBW	CE	0 87 1	дшн	0.71	LOF	E	CMA	CUL	225	0 8 1	925	VR	100	, o, E	-	305
24100	Туре	 	UB WE														-				$\neg \neg$
24120		†		ļ .		-	-				<u> </u>										
24140		l	 											<u> </u>							
24200	Apron	†	<u> </u>		UVCB	TUVCB WYIEZ	AE.	QUVBW YIEZP		CBW	WY I		UBW EF	UVB	TUVB	UBW	UBW	UC BW	UVW YI	U	
24210	Invert El	UVBW	\top				QUVBW YIEZ	1122	UVB WY I					E	VIE			VE	UVW		
24220	Length	UVBW IE			VC YE		QUVBW		UVB WY I	V	UVW		QUVY IEZF	UVW YE	VIE			VΕ			
24230	Width	1					1122														
24240	Slope	I E U V BW					QVY IBZ														
24250	Noted Items	1									QUVB WYI										
24300	End Sill	UVBW IE		E	UVCB	TUVC B WY I EZ	QUVEW YIE2	QUVBW YEZP		CBW				UVB	V						
24310	Shape																				
24320	Height				E				UVB WYI				QUVY IEZF		UVB		ER	VE			\Box
24330	Noted Items							IEZF	UB WY												
24400	Baffles			VBW IE	UVCB WYE	TUVCB	QUVBW YIEZP	QUVBW		VC B				UVB	VIE				A1 AAM		
24410	Shape																	VE			
24411	Height	1				-													YIE		
24412	Width	T																	VE		
24413	Spacing			BWE															UVW		
24420	Row(s)																	VE			
24421	Number																		UVW YIE	UV BW	1
24422	Location														VIE				UVW	UV BW	
24430	Noted Items							Z													
24500	Pier Extensions					TUVCB WY I EZ			VCN				QZF					UBW			
24510	Height	Ī																			
24520	Length																				
24530	Noted Items									<u> </u>				<u> </u>							
24600	Training Walls	U VBW		I E	Ĺ	VIE	ΛĒ			QVCB WYE	<u> </u>	<u> </u>			UBW			UCB WY	VE	<u> </u>	
24610	Height			<u></u>		<u> </u>					<u> </u>	<u> </u>		ļ					C .		
24620	Length	<u> </u>	<u> </u>	<u></u>	<u> </u>			L	ļ		ļ								<u></u>		
24630	Noted Items													L					<u> </u>		
24700	Riprap			ļ	<u></u>				ļ		<u> </u>	L		<u> </u>		ļ		<u> </u>		<u> </u>	
24710	Bottom			1		MIE	ļ			L	ļ	<u> </u>					ER	_		<u> </u>	
24720	Side		1		ļ	<u> </u>	ļ			ļ	<u> </u>					<u> </u>		<u> </u>	ļ	<u> </u>	
24730	Size		 	<u> </u>	1	ļ	ļ		<u> </u>	ļ	-	ļ.—			_	<u> </u>	L	<u> </u>		<u> </u>	R
24740	Thickness	1	4	1					L		_	<u> </u>		<u> </u>	<u> </u>					<u> </u>	_
24750	Slope	-	1	1			ļ				_	 		_						-	R
24760	Noted Items	1	1		1	<u> </u>	<u> </u>	ļ	<u> </u>	ļ	<u> </u>	 	1	ļ	<u> </u>	ļ	L	-	ļ	<u> </u>	<u> </u>
(Conti	nued)	1_		ļ	 		↓	<u> </u>	<u> </u>	ļ	<u>_</u>	<u> </u>		<u> </u>	<u> </u>	<u> </u>	<u> </u>	<u> </u>	ļ	<u> </u>	<u> </u>
<u></u>		<u> </u>	 	1	 	↓	 	<u> </u>	<u> </u>	ļ	 	<u> </u>		 	ļ	<u> </u>				<u> </u>	
<u></u>		ـــــ		<u> </u>		ļ	<u> </u>	<u> </u>	1	<u> </u>		 			ļ	<u> </u>	ļ	-			L
		↓	 	<u> </u>		ļ	ــــــ			 		 		<u> </u>	ļ	-	L	L	<u> </u>	<u> </u>	<u> </u>
<u></u>		↓		1	1		1	<u></u>	1_	<u> </u>	-	<u> </u>					<u> </u>	<u> </u>		<u> </u>	
L		ļ		<u> </u>	ļ	<u> </u>	<u> </u>	<u> </u>		igspace	_	<u> </u>		<u> </u>	<u> </u>	-	ļ	<u> </u>	ļ	<u> </u>	<u> </u>
<u></u>		\downarrow		1			L		ļ	1_	1_	<u> </u>			ļ	<u> </u>	<u> </u>	ļ	<u> </u>		<u> </u>
		\perp													Ì		<u>L</u>		<u> </u>	<u> </u>	

20	A21	A22	A23	A24	A25	A26	A27	A28	A29	A30	A31	A32	A33	A34	A35	A36	A37	A38	A39	A40	A41	A42	A43	Ali	A45
•			'	Markland Gates & Spillway R	1ма)	lwa _y	Maxwell/Opekiska Gates & Basins TR 2-579	P _c	Ę	Pro	<u>۽ ج</u>	A B Proctor Spillway TR 2-645	ams	lwa)		Ę	Barkley Spiilway TR 2-689	ates	Hannibal Spillway TR 2-731			Copan Spillway TR H-70-09	de	Arkansas R Dams Gate Vibration TR H-71-05	5 ates
Į	e l		9	Spil	Spii	Spii	Dpek Basi	er La Basi	Bas	ida	Ferr Basi		~ G	R D Spil		Bas	Ì	-49			ي (6	13	R D Pati	9 3
	W F George L&D TR 2-519	Jackson L&D TR 2-531	1ne1	and	up 272	101a	573	. 28č	181 186 586	10r	5 4 9 643	645	1883 104 650	383 28d 3	Way 657	11 v 11 mg	ey 689	Hay 710	way 731	Holt L&D TR 2-745	Hugo Spiliway TR H-69-15	, way	70-7	Vibr	₩ay v
	7 3 %	acks aD R 2-	Dardanel L&D TR 2-558	ark]	reen ates	ates	axwe ates	ates	1ke t []]	4.S. F Dill R. 2-	ille ates R 2-	70ct P111	rkar verf R 2-	rkar o-He R 2-	ahe p111	elle till R 2-	arkl Piil	anne p111	anni pill	61t	DI I	opan Pill R H-	akle pill	rkar ate R H-	188 p111
24000	3.76	J	0 J F	X OF	994	00 5	EGF	ZUF	TOF	285	Σ O ⊢	QUB	401	471	0 2 1	m ov t-	m v ⊱	200	X N F	보니다	INF	130	0 2 F	AΩ₽-	Συ
24100		UVW			-	UWY	 		-		 	WY		ÜBW						Ü	-	-	<u> </u>		
24120		YI				IE_									ļ		 	<u>-</u> -				ļ	-		
24140						-				<u> </u>		-			-				-						
	UVWY	UVW	ÜVВ	UVB	υv	UVB	UVB	UVB	UV	UBW	UBW		UBW	UVBW	QUV	UVB	UVW	UVB	υv	UVCE	UVCB	UVB	ųu vč		ΛI
24200	IEZ]	YIE UVW	MA1	UV	BM	WYI	WY	WY UV	BW	QY	UV			UVBW YERZ QUVB	WYI	WY R	ΥI	WX UR	BW	WYI	WYI	WYI	BWY		UBW
4210	IEZ UVWY	YIE	ΥI			<u> </u>	ļ	UV	v		UV			WRZ UVBW	ļ <u>-</u>	BW UV	ū	ER	ΠA	YI	WYI	UVW	QUVC		UB
24220	IEZ					L		υv		<u> </u>	J.,	ļ	ļ	YERZ		ļ°,	"		ļ.,		<u> </u>	YI	BWYR		WY
24230							<u> </u>	0,		L		<u> </u>					1								
24240											υV								L						!
24250												l 		UBW							ļ				Ĺ
24 300			YI WWU	UVE	UV	ZP	UVB	U VB WY	V				l '	UBW YER	QUV	UVB ₩YR	U	UVB WE		UBW	UVW YI	UVW YI	UBW YR		UB WY
24310			WYI																						
24320		Ü	UVB WYI	UE							UV			UV BW			i -		i						
24330																t-		-	1			1			
24400				UVE	ÚΫ		UVB WY	UVB WY	V					UBW YER	QUV WY I	UVB WYR		WE UVB			 	UVW YI	UB WY		UBW
24410						 -	"' -	*1						IER	WII	W: K	 	-			 	11	"1		
24411				A.E.				U										Uγ			-	VI	QUVC BWYR		_
24412							-		-		┢	_	├		-	+-	 	 			 		BWYR		
24413							-									 	├	 	 						-
24420			ļ	<u> </u>	├	-	├	-	-	<u> </u>			<u> </u>				ļ		<u> </u>		 -	-	-		
			ļ	AE	 		-						ļ		-	-			 -		ļ	VI			
24421				VE	ļ	<u> </u>		U	UBW							ļ	ļ	UVR	UŸ		ļ	<u> </u>	QUVC		L
24422			ļ			ļ			02-				<u> </u>	L.,	ļ		ļ	- N	ļ.,		L_		BWYR		
24430		U	ļ					<u> </u>				<u> </u>			<u> </u>				ļ.,,		<u> </u>	<u> </u>	BWYR		_
24500					ļ	<u> </u>	L				<u> </u>		L	UBW ER	L		ļ	X	UB WR		<u> </u>	<u> </u>			
24510						<u> </u>	ļ								L			ļ			<u> </u>	<u> </u>			
24520		<u> </u>									L		<u> </u>	L				R		Ĺ					UB WY
24530					<u> </u>																l				L.
24600															UVW YI		C		UB WR	UBW					1
24610	YY																				VCY	T			
24620	VY				1	T					T						-					UVW			
24630				Γ		\Box	<u> </u>		<u> </u>		1	<u> </u>	1								VCY	<u> </u>			
24700				<u> </u>		VR	1			 				UBWR		t —		T -					\vdash		<u> </u>
24710				 			 				1	 	QUVBW			R	1	UB	UB	Ι	R	 	\vdash		R
24720				\vdash	 	 	 						YERL		!	 		WR	WR		 	 	<u> </u>		
24730			-			 			 	<u> </u>	 		QVWY	UER	 	+-	-	 - 	<u> </u>		R	<u> </u>	R		R
24740			-	 	+		 	\vdash	 		 		CANA		 	 	+		-	 	R	 	 	<u> </u>	R
24750			-	 		 	-	 	 	-	-		ERL	R	 -		 	ÜВ		 		-	R		
	Ļ,	<u> </u>		}	 	 	 	 	-		-	 		<u> </u>	<u> </u>	├	 	WR R	 		₩-		 		R
24760	-				 -	 	 			 -	 									-	ļ		-		
(Cont	nued)			-	 	 		<u> </u>	ļ	-	 				<u> </u>	₩	 						<u> </u>	ļ	L
F			<u> </u>	 	↓	 	 	<u> </u>	<u> </u>		ļ	<u> </u>	<u> </u>	L	<u> </u>	ļ	 	ļ	 		<u> </u>	<u> </u>	<u> </u>		ļ
	L.			ļ	ļ	<u> </u>	├	ļ	ļ	<u> </u>		<u> </u>	<u> </u>	ļ	ļ	ļ	1	ļ	ļ	ļ	<u> </u>	ļ	ļ		
	L				ļ	L_	<u> </u>		<u> </u>				L.		<u> </u>	ļ		L	<u> </u>		<u> </u>		L_		
		Ĺ			<u></u>	L		<u>_</u>								$oxedsymbol{oxedsymbol{oxed}}$				L	L				L
													L^{\top}												
																Γ									
				\Box	T	T	T					1	1			Г					Г		$\overline{}$		

<u> </u>		A46	A47	A48	A49	A50	A51	A52	A53	A54	A55	A56	A57	A58	A59	A60	A61	A62	A63	A614	A65
(21)	_	ł	{	10 up	3111	<u></u>	-	7	ةٍ	ban	P G	ł	5	8	E E	tes	ves	Heir	SWe	S 20	1 1
	PROJECT AND REPORT	<u>.</u> 2		2 at 2	8	1	3 .	S 28.2	2 8	E 5	42	S E	8 T	Gat	置	e G	or "	ock Fa	ub D	Basi rend	ces 04
	ROJE B. RE	7 to 1	way 74-	11 ve.	t to	g.	Tive	Ton 18	Ga C	g & 6	\$ 26	at to	tat. hea	ttoo	10w	Lif	104 3 Lre -625	3d R 11e -821	2 0 00	5 1 49	For
DESIGN AND OPERATIONAL VARIABLES	₽. ₹	Aliceville Spillway TR H-74-10	10 E	Pot B	Old River L Sill Operation TR H-77-02	rotor H	Red River L&D 1 Spillway TR H-77-13	eno H E	rotc H	P E	Barkley Gate & Bulkhead TR HL-83-12	Baffle Piers Cavitation MP 2-154	avia Well	(1) (1) (1) (1) (1) (2)	Overflow Embank Riprap MP 2-552	Vert Lift Gates Discharge MP 2-606	res P 2	Sbmrgd Rock Weir Propeller Wash MP 2-821	P H	Pesign	Baffle Piers Orag Forces MP H-70-04
24000 STILLING BASIN (APRON)		A S F	2 8 E	OAH	HOOH	04.	E VI F	HOF	8 6 1	CNE	E 0 F	BOE	2012	0, > 1	OEL		0,12.2	0711.2		202	
24100 Type		-		†	 		 	 		UVB	1	 			 		Z				
24120		-		 	 			-	 	MĀ	+	_					 		 	<u> </u>	
24140			-	 	_		 	 	-		 	t									1
24200 Apron	-			UCB	UVW		TUVCB	UVCB		UVBW	UCB WS			x						QVX	UVBW YIFX
24210 Invert El		UB	UBW	WY	YZ		UVC	WY I		YRX	S						-				
24220 Length		WY UB		 			UVC	BWY			s								-		U
24230 Width	_	WY		 	-		BW			WY		-								TQX	\Box
24240 Slope		ŪB.	 	-				-				\vdash					<u> </u>	_			
24250 Noted Items		WY V						 - 			 	\vdash					ž				Y
24300 End Sill			 		-		UVC	-		UVB	ŝ									QVX	
24310 Shape				-			B₩			WY		 									
24320 Height			_	 	-	_			 		 	\vdash			-	<u> </u>	 			VYX	יט
24330 Noted Items		L		 			 	 				-							-		\vdash
24400 Baffles			-		-	-	UVC	-		UVB	 	 			-	-	 			QVX	UB
			-	-			BWN			WY		EX				-					UVBWY
			 	 						UBW						 				VYX	IZPFX UVBWY
24411 Height			 						-	YRX	 	 -				 					IZFX UVWY
24412 Width				├	ļ <u>.</u>		-		ļ			├									UVWY
24413 Spacing		<u> </u>	 	ļ	ļ						-	ļ					<u></u>				IZFX
24420 Rov(B)		UB	-	ļ		_			_			 				-				ļ	UWY
24421 Number		WY UBWY	ļ		-							 	-							VYX	ZF UVBWY
24422 Location			ļ	ļ						ļ		EX				-					IZPFX
24430 Noted Items		UŽ	UBW	-	├		TUVCB	HVCB			UB	-			_		-		-		
24500 Pier Extensions		WY	-		ļ		WENR	WYIF		-	VS FA	_	<u> </u>			ļ <u>.</u>				<u> </u>	
24510 Height			<u> </u>	ļ	ļ	ļ	ļ				PA	<u> </u>				ļ					
24520 Length			ļ	ļ	-		Ļ				F	 				<u> </u>	-	<u> </u>			
24530 Noted Items			ļ		_		uc	ļ			ļ					<u> </u>					ļi
24600 Training Walls		ļ	ļ	ļ	<u> </u>		BW	<u> </u>		ļ	<u> </u>	 	-		-			ļ		ļ <u>.</u>	
24610 Height		CW	<u> </u>	ļ	ļ		<u> </u>		ļ		 	ļ					ļ				-
24620 Length			ļ		ļ	<u> </u>	ļ			ļ	 	ļ		Ĺ		 	ļ		 	<u> </u>	├
24630 Noted Items				<u> </u>	<u> </u>		ļ					ļ				-	<u> </u>	<u> </u>	UB		
24700 Riprap		ļ	L_	ļ	ļ		<u> </u>				<u> </u>	-	L		UBW	├	-	ļ	WI.	-	<u> </u>
24710 Bottom		ļ	<u> </u>		<u></u>	ļ	L	<u> </u>	ļ	ļ		↓			YR .	ļ	ــــ	<u> </u>	<u> </u>	-	
24720 Side		L	<u> </u>	<u> </u>	ļ	L	<u> </u>	ļ			<u> </u>	 		L	R	ļ	ļ	R	R		ļ
24730 Size			<u> </u>				ļ	ļ	<u> </u>		ļ	ļ	<u> </u>		Α		<u> </u>	r .	R	Ļ	<u> </u>
24740 Thickness			<u> </u>	<u> </u>			L	<u> </u>		ļ	<u> </u>	↓	ļ			↓	ļ		Ľ_	 	⊢ −
24750 Slope			<u>. </u>	<u> </u>	ļ	L	<u> </u>	ļ	ļ			ļ	<u> </u>			-		L	<u> </u>	-	ļ
24760 Noted Items							ļ	<u> </u>	L	1		<u> </u>			<u> </u>	<u> </u>	<u> </u>			ļ	<u> </u>
(Continued)			1	<u> </u>			<u> </u>	<u> </u>	<u> </u>		<u> </u>	↓	<u> </u>	<u> </u>			ļ		<u> </u>	Ļ	—
							<u> </u>		<u> </u>		L	<u> </u>	1							_	<u></u>
																			<u> </u>	<u> </u>	<u> </u>
																				<u> </u>	
																			L		_
				I													L				
				T			Γ''	Γ	1												
			1			[Γ	\Box	Γ											_	

	A66	A67	A68	A69	A70	A71	Ä72	A73	A74	A75	A76	A77	A78	A79	AB0	18A	A82	A83	A84	A85	A86	A87	A88	A89	A90
	Spillway Exit Ch Bottom Shape MP H-71-05	Tainter Gates CE Project Data JMP H-72-07	Spillway Nappe Upper Surface MP H-73-04	Spillway Crest Design Profile MP H-73-05	Spillway Chute Flow Surface MP H-76-19	Old River O'bank Outlet Channel MP HL-80-05	Cow-Ogee Crest Pressure Fluct CR H=71=01	r —		St. Lucie Canal Spillways Paper 14	St. Clair River Submerged Sills Paper 16	Hastings Spillway STP 01	Sand Dams O'flow Discharge STP 02	Kiskiminitas 2 Spillway & Chnnl STP 03	Beartrap Dam Chamber Silting STP 04			í -			Montgomery Is Channel & Spwy STP 14		Miss R 5-5A-8 Roller Gt Coef STP 17	Miss R LMD 26 Chul & Cofferdam STP 20	Peoria/La Grange Wicket Discharge 5
24000												- 07.07	9,00,	- 5, 5,	3.5	2 07	2. 17 07	201	200,	s,	200,	3 0 07	2 11. 07	2.007	
24100	TUB WE	х				 	1			TUB															-
24120																CN				_				 	
24140																CN					·				
24200	UB W	X					UBWY 12P		TUVB WYER			UVWY IER			i	UBW YIE	UB WY		TOUVB WY I EZ	UC BW		UBW ER	MAE 5na	UVEW YIE	UBW
24210									1124			UVW				UBW	<u> </u>					TUB WE	QUY	AXE Anab	
24220								1		TUB WER		UWY			i	UBW YE						8		UVE	<u> </u>
24230										724						1.4			-						
51510																									-
24250																			QVW			TUB			
24300		х					ļ	t		TUB		٧I				UBW YE			YZ TQUVB WY I EZ			W.E.			
24310																1.5			•		_				
24320	-											ļ —										E			
24330								ļ —				 						-							-
24400		X										UVW YI				UBW YE			TOUVB					UE	_
24410												-			<u>-</u>				*					 	
24411												ļ				l —					 	<u> </u>	,		-
24412																									
24413								1					_		 	<u> </u>	_						 		
24420																			 						
24421																									
24422												1	-						<u> </u>			TUB		UB WY	-
24430					_			1														7.5	<u> </u>	<u> </u>	_
24500												σ				AE ABA					_			UBW	
24510								-				 			ļ	1.5									-
24520					-			 				<u> </u>										-			
4530																									
24600		X																						CE	
24610																									
4620															-										
24630																									1
24700				- "																					Τ-
24710	ER								TUVW													ER	QUY	UVE	-
24720																<u> </u>								<u> </u>	
24730									TUVW YER															\Box	
24740																			-						
4750	ER														<u> </u>										
4760																									
Conti	nued)																								
								†														 	_		<u> </u>
						 		1		 -	-							<u> </u>		 -	<u> </u>				
						_		 			-							<u> </u>		-					
\dashv							 	 		<u> </u>		 								-	<u> </u>		 		_
	-					\vdash		+		_	├─	 		<u> </u>	 	 		 		 					
	ļ		1					i			1	I			l		l .	1			ì		1		

<u> </u>	7	A91	A92	A93	A94	A95	A96	A97	A98	A99	B01	B02	BO3	B04	B 05	во6	B07	B08	B09	B10	B11
23	_[o in	Miss R L&D 7 Spwy Culverts STP 29	kets	ser Ser	Miss R L&D 22 Stilling Basin STP 33	ins	Gate	13 Coef	ı,	u	SAF Lower L&D Tntr Gt & Basin STP 69		20	race	McNary Spillway & Gates BHL 21-1	Ice Harbor Cffrdms & T-race BHL 22-1		Basin	Basin	John Day Spwy & Dvrsn Gap
Ę	PROJECT AND REPORT	&D 2 Bas	&D 7	3 3	5. 5. C. 5.	&D 2 Bas	Bas	ter asin	ate	AD 4 Basi	4. P. P.	2 d	ates	P. P.		-8	r o	į.	20 es	le Ba	Vr.81
	N PRO	_R_ 24.58	200	Parge 8	ter 3	1 4 E	ling 36	7ain 37	39 to	25 & E	E Page	9 5 6	er (lway 3-1	2 de 2	11. 11. 21-1	Ice Harbor Offrdms & BHL 22-1	Hart 1way 31-1	Dall 1 way 55-7	St 11 65-	7. Pag
DESIGN AND OPERATIONAL VARIABLES	٩	Miss Stii STP	Miss Spry STP	Chan Disc	Miss Tain STP	Miss Stil STP	Stil STP	See	App Roll STP	Miss Gate STP	Aiss StP	SaF	Roll Pres	Sp11	Ser Cris	Spil BH	5 7 H	Ice Harbor Spillway BHL 31-1	The Dalles Spillway & E BHL 55-1	Bonneville Rev Still B BHL 65-1	일 왕
24000 STILLING BASIN (APRON)																					
24100 Type																				UV YZ	
24120																					
24140																					
24200 Apron		QUBW	UB WY	UBW	UBW	TUBW YEZL	TUVB	TUV BWE	UBW		UBW	UBW YEZ	Z		UVC NL	QUV WYI	VC YI	QUVBW YIZX	QUVB WYIZ	UVBW YIZX	UVBW YIEZ
24210 Invert El		UBW				TUVB	TE	QYL		QUY									QUVB WYIZ		UB WY
24220 Length		UB WX				TUVB WIE	E	GAL		QY						UB WY			QUVB WYIZ		UB WY
24230 Width	\neg								-	YE QV								-			
24240 Slope																					
24250 Noted Items										TQUVB										UVBW YIZX	
24300 End Sill		UYX				VIE	TE			TQUVB	UW YE					Z		QUVB		TQUVB WY I E Z	UVBW YIZ
24310 Shape						TUVB	E											VIZ			Z
24320 Height		UBW		 		TUVB											UC		QUVB WYIZ		
24330 Noted Items	_				_	715	<u> </u>										1				
24400 Baffles		ATX Anbm	QYE		-	t -	TE	YEL		TQU VB WY I E	TUBW YER	YE YE			UZ	Z		QÜVB WY IZ	UYZ	TOUVB WY IEZ	UVBW
24410 Shape		ILLA	<u> </u>	-		TUVB	E	IED		-115	1 EI	112		1	t		ļ			UV YZ	Z
24411 Height	_			 	_	MIE	TU	 		<u> </u>	 	UWY	 			_	t —		-	12	
24412 Width			-	 	 	 	AB	 							<u> </u>	1	1	†	 	ļ	
24413 Spacing		<u> </u>	 	├──		 	 	\vdash	_			-	 	-				 			
24420 Row(s)			 	 	_	 	TU	-		-			 	<u> </u>	 		1	 	QUVB	UV	\vdash
24421 Number	-		 		 	+	E	TE	-	UER	 -	 	 	 		-	1		WYIZ	YZ	_
24422 Location			 	-		TUVB	UB	 					 -		 	UB	 		 	 	_
24430 Noted Items			 	-		WIE	WE	 		 		 		 	 	WY Z	· ·	<u> </u>	 	 	
24500 Pier Extensions	_		 	-	_		TE			TQUB				-	f		-	 	 	 	-
24510 Height	_		-	├	-	 	 	-		WYE	<u> </u>	\vdash	-	 	 	 -	†	-	 	+	
24520 Length			 	-			UB	-	-	 					 		UC	-	 	+	2
24530 Noted Items			 	\vdash	 -		WE	 - -	-	 	-	├		 	 	 		├	-	+	
24600 Training Walls	-	 	-	-	 	+	╁	-		E		╁	┯	 	 	Ϋ́L	_	┼─	+	+	
24610 Height			+	┼	├	 	 	 	 	├─	 	 	\vdash	<u> </u>	├	 	{	├	\vdash	+	
			+	-	-			<u> </u>		 	ļ	 -	 	 	+	 	├	├	 	+	+-
24620 Length 24630 Noted Items			+	 	 	 	-	+-		+	 	ļ —	 	 	UVC	 	uvc	U VB	┼	 	
		├—	+	+	_	+	TUB	+	<u> </u>	+	\vdash	+	+	\vdash	INL	├	YI	WIZ	+	+	+-
24700 Riprap 24710 Bottom		UBX	E	+-	+	+ -	WE	+	 	UER	UBW	+	+	+-	+	 	\vdash	-	 	+-	+-
24720 Side		-	+-	 	 	┼	+	+	 	+-	YER	\vdash	\vdash	 	+	-	╁	 	 	 	+-
24730 Size		-	+	+	+-	+-	 	 	 	+-	-	+-	 	\vdash	+-	 	\vdash	+	 	+	+-
24740 Thickness		+-	+	+	+	+	+-	+-	+	+-	+-	1 -	+	+	+	-	 	+-	-	+	+-
		├	+	+	+	+	\vdash	+	 	+	+-	\vdash			+-		\vdash	+	 	+	+-
24750 Slope 24760 Noted Items		├	+	+	-	+-	┼—	+	 	+	\vdash		 	+-	┼—	+	1		┼	+	-
(Continued)		-	+	+-	+-	+-	+	 	+	+	 	+-	+-	+	-	+	+	+-	+	+	+-
(Concinued)		-	+	+	+	+	+	+	 	+	+-	+-	┼	+	+-	\vdash	\vdash	+	+-	+-	+-
		-	+	-	 	+	+-	 	-		┼	+	 	 	+-	┼	+	1	+	+	+
		 	+			+	-	+	├	 -	1-	 	 	\vdash	+	┼	┼	+	 	+	+-
		├	\vdash	+	 	 	₩	┼	├	┼	₩-		+	₩		+-	 		┼	+-	
		 -	+-	\vdash	 	 	—	-	-	 		-		-	+	 	<u> </u>	-	 	 	+
		 	₩	\vdash		┼-	₩		-	 				-	+-	₩-	┼—	 	-	₩	 -
		 	+-	1		<u> </u>	4	1	↓	<u> </u>	-	 	 		 		<u> </u>	↓		₩	+
l L					1	<u> </u>		<u></u>	1	<u> </u>			1		Ш.		<u> </u>				⊥_

	B12	B13	B14	B15	B16	B17	B18	B19	B20	B21						_									
24	al iin	Little Goose Spillway & Basin E BHL 114-1		o	5	>	2								_					 	1				
	Bas	se Bas	. 8	L&D	Force	2	. E	lasto	Spwy	ents															ı
	Monu ays k-1	8 Coo	1 d - 9	5 6 2	a E	P F	F Pie	8 9u	10 11 15 15 15 15 15 15 15 15 15 15 15 15	Curr						-	ļ								ı
	wer 1114 IL 10	ttle 1115 11 11	te L	Tega T	cket Frat T C3	uest ffle T B5	ffle T B6	scal 1111 T T8	111p anne T G3	111p															i
al-acc	3 24 E	日の田	8 g H	4 % P	≆ಕಿಪ	E & C	882	2 % 5	855	2 5 €						 				L	-	<u> </u>			
24000				E				UVY								<u> </u>	<u> </u>								
24100					-			IE	ļ												-				<u> </u>
24120				-	ļ	├		├	ļ	ļ	 				 						-	 -			<u> </u>
24140 24200	UBW	TOUVE		UVC	UBW	UBY	UBY	UVY	UBW		-			-		-	 		 					ļ	
24210	YZ	TOUVE WYTEZ		BW E		IX	IEX	UVY	-	-	-				 		-			 	├ ┈─				
24220		P. IEZ		Ė	-	-		UVY	ļ				-	 				ļ			├			ļ	<u> </u>
24230								IΈ	-		 			<u> </u>							├			-	_
24240		<u> </u>				 								-		<u> </u>		-	ļ	-	 	ļ			
24250					_		├		 	-	 -			ļ	 		_			-			-		-
	UVBW YIZ	UY		E	-	-		UVY		-	<u> </u>	-									 				-
24300	YIZ	-	_			-	-	IE					-			-	-			-	-	<u> </u>	-		
24320		<u> </u>				 	 		-			 		-	-			-			<u> </u>	-	ļ		\vdash
24330		TOUVE WY I EZ			-	-	-	-		-	 	_			 		-			-	 			_	
24400		p 52		-		 	UYI	UVY	-							<u> </u>			-		-	-			├—
24410	-	ļ	<u> </u>		 	UBY	UBI	IE	-	ļ <u> </u>	_	<u> </u>		-			-			-	-	-		-	-
24411				 	1	IX	EX		-			_		-	ļ	-	<u> </u>			-	-	ļ			
24412										_			ļ			<u> </u>					-	-			
24413					-		U	 	 	 										 	 	-	ļ		 -
24420					-	-				-				-	<u> </u>		_	 		<u> </u>	 	-			
24421	_				-	 		-			ļ	 -			ļ	-				├	-				
24422		<u> </u>		<u> </u>			-		-				-				-			-				-	
24430										-											-	-			-
24500		UBW					 	_	-	 —					ļ					-	-	<u> </u>			
24510						-	 	 	 							 			-		-				-
24520						 					ļ									-	├	<u> </u>		-	
24530										 					 		-			-	 	_		 	
	UB WY					-			\vdash	CN								<u> </u>	-		 				
24610	WY					-		_								-							ļ <u>-</u>	-	
24620			-		 	<u> </u>		 	 							-				 	 				
24630						-	_		 	-							_			 -					
24700									 					-											
24710									-	<u> </u>											 				
24720				-					l		-				<u> </u>	l				<u> </u>					
24730							_		<u> </u>											 					
24740																					-				
24750	-		-						<u> </u>												 				
24760						<u> </u>		-	 -																
(Conti	nued)																_			_	 	 			
					\vdash					·							-				 			 	
								-								 									
																	 			l		- -			
																				·					
					·																				
			_																					-	
	نــــــا														·			L							

<u></u>	A01	A02	A03	A04	A05	A06	A07	A08	A09	A10] All	A12	A13	A14	A15	A16	A17	A18	A19	A20
25	E	Possum Kingdom Submerged Bucket	_		\Box				ž e		Cheatham Emergency Dam TM 2-358		10		1 s	Ξ ο ο	=	12.0	ž	Old River Closure Dam TR 2-496
DIEST CHAINES OF THE PROJECT	90 90	Buc	opgu	Can	re.				Floo	ıı	Dam	ate	Tan.	int	1 . g	L S	L S oruc		Öş	9
OJEC	. 4 Ki	8 ed	1 K	1 g 7	2 A	\$ 7	cone	1115	Str. 326	Po o	1 5 8 E	E 6.00	eg g	n e o	Feat Feat	ž S ž	.ver	7 8 8 2 8	Sate 91	96 e e
DESIGN AND OPERATIONAL VARIABLES	Possum Kingdom Spillway EM 111-1	Dasur Dane	Possum Ki Baffles TM 111-3	2 is	111.	1111	Liffices	E 2 -	2 7.5	E 0 7	eath 2-g	1111 1211	ر 13 م	15 12	2 t B	d Ri	d Ri	111	d Bi	Sur 2
24000 STILLING BASIN (CONTINUED)	A N.E	Z W ₽	2 2 2	2 E	N 47 E	<u>ನಿಸ್ಥ</u>	2 8 E	83F	¥ŏ£	53 6	ខែគឺE	ರ#೯	ž36	3 9 E	0 2 F	3 5 F	33E	38 22 12	252	8 G E
24900 Operation	├		1—		├			-		 	 					}				
24910 Pool El	UVBW		VBW	UVB	TOUVE	QVY IEZ	QUVBW	U V B	-	UVB		-	UVW	UVB			UCB	UVW		-
24920 TW E1	UVBW	ļ.—	VBW	UVB	TOUVC BWYIE	I EZ QUVBW	YIEZP QUVBW	UVB		MAI		UB	YE UVB	UVB		<u> </u>	UVCB	UVW	υ ν	-
24930 Type Flow	IE		TR	WYE	BWYIE	YIEZ	YIEZP	WYI		WYI		A.B	WYE	W <u>T</u>		 	WYE	YI	BW	\vdash
<u> </u>			<u> </u>		TQUVB	 		UVBW	CBW	UVB		UBW	U V B	-				UVW	Ü	
24931 Free/Submerged	 		-		WYIEZ	<u> </u>	<u> </u>	YIH		WYI			WYE UVB			 		AIE	ļ	\vdash
24932 Gated/Uncontrolled	UVBW	 	VBW	UVB	TUVCB	QUVBW	QUVBW	UVB		UVV			WYE UVB	UVB		 	ļ	YIE		R
24933 Unit Discharge	UBW		IE	WYE	WYIEZ		YIEZP			YI_			WYE	ΝĪ		<u> </u>				
24940 Gate Schedule		-		├	CE					-	-		E	UBW		<u> </u>	UC			
24941 Single	 -	 		UBW	TUVCB		<u> </u>				 			UBW			UVC	ÜVW	L	
24942 Multiple	ļ	-		UBW	WYIEZ	-		<u> </u>		<u> </u>	<u> </u>						BWE	YIE		
24943 Locations	U	ļ		<u> </u>		ļ	L			<u> </u>		UB	U V B	UBW				UWY	L	
24950 Gate Opening	<u> </u>		_	evu	<u> </u>	-		<u> </u>		<u> </u>		WE	WY_				ļ	22		
24951 Uniform	├		<u> </u>	WYE	CE	ļ	<u> </u>			<u></u>	 					ļ		UVW		
24952 Variable	<u> </u>	-		U	ļ .	_	L		L	<u> </u>	ļ	UB	<u> </u>	<u> </u>		L		AE AIE	<u> </u>	
24960 Gate Submergence		-	ļ		ļ							ME						12		
24970 Gate Speed	<u> </u>				<u> </u>			L			 									
24980 Other Factors	<u> </u>		ļ		ļ															
24981 Ice/Debris	_	ļ								<u></u>								<u> </u>	L	
24982 Loose Barges			ļ		<u> </u>					<u> </u>										
24983 Waves	<u> </u>	L			<u> </u>															
24984 Fower Discharge	<u> </u>					VYI				-									-	
24990 Noted Items		-				EZ														
25000 DOWNSTREAM CHANNEL	UWB	UBW	BW	UVC	UCB	VCY		U V B	VE	UVC		QUVBW	UV	UVC		UVB	UC	UN		עע
25100 Channel	ΛĪ			BW	WY	IEZ VC		WYI		WI		YIEL	WY	BWY		WR	BW			ER
25110 Direction	<u> </u>			ļ				vc vc		<u> </u>	-									
25120 Shape	E	E	VIE	VE	TUVCB	VE			VE	E	<u> </u>	_		TE		ER		ÛVW		
25121 Invert El		<u> </u>		<u> </u>	WYIE			ļ		ļ.,		L						YIE		
25122 Width					<u> </u>						 	-		$\vdash \vdash \downarrow$						
25123 Side Slopes	<u> </u>	├—		 		<u> </u>		<u> </u>		-									<u> </u>	
25124 Bottom Slope	<u> </u>	 	ļ			L				ļ.,		\dashv				Ļ.,	<u> </u>			
25130 Dikes						<u> </u>				 		-		 						
25140 Noted Items	<u> </u>	-	ļ		ļi			<u> </u>									L			
25200 Guide/Guard Walls		-			-					ļ						 				\vdash
25300 Riprap	L	 		L	<u> </u>	L		<u> </u>		\vdash				 		ER			L	
25310 Bottom	ļ	<u> </u>			<u> </u>					\vdash						ER	ļ			
25320 Side	_		<u> </u>		ļ					 	$\vdash \vdash \vdash$					VR VR		VR		<u> </u>
25330 Size	L	 -	L			L		<u> </u>		<u> </u>	$\vdash \vdash \downarrow$		_			VR VR		VR.	L	-+
25340 Thickness		<u> </u>		L				<u> </u>		<u> </u>										
25350 Slope								<u> </u>		\vdash				\vdash	_	VER	<u> </u>			\Box
25360 Noted Items				<u> </u>	-	ļ.—.				\vdash	 			С						
25400 Noted Items	L					L				<u> </u>	$\vdash \downarrow$			Ĭ						
(Continued)		<u> </u>								ЬЩ							<u> </u>			
. 		<u> </u>	ļ		L			<u> </u>		لــــا	 			├						
		<u> </u>			<u> </u>		L	<u> </u>		Ļ,	 						L			$ldsymbol{ldsymbol{ldsymbol{eta}}}$
		i	L	L	<u> </u>			<u> </u>		L	لــــا			L						

	A21	A22	A23	A24	A25	A26	A27	A28	A29	A30	A31	A32	A33	Á34	A35	A36	A37	A38	A39	A40	A41	A42	A43	A44	A45
26				Markland Gates & Spillway A	Gates & Spillway &	мау	ska	· ·	Pike Island Stilling Basin TR 2-586	rol			Arkansas R Dams Overflow Embank TR 2-650	Arkansas R Dams Lo-Head Spillway F TR 2-655 & App A				Gates					-		
			Q	1	1119	110	peki	rlar	Basi	g g	asin	ļ	Emba	P Da		Basi		ا بد ا			ي (٨	3 4	Arkansas R Dams Gate Vibration TR H-71-05	ro⊸ar n⊏a?
	George 2-519	on 531	ne]] 558	and 566	up & S 572	61a 8.5 578	11/0 8.8 579	585 a B	Isla Ing 586	lori May 633	13 P B	or 645	3a3 10a 650	3a3 ad S 655	нау 657	vill ing 687	683 es	ton Tay	bal uay 731	245	8ay 69-1	ğ. 0	70-1	3as Vibr	28 C.
	W F Georg L&D TR 2-519	Jackson L&D TR 2-531	Darda L&D TR 2-	arkl 2-2-	reen R 2-	ates 8 2-	axwe ates	atte C	1ke	12 F	TTe	200t	kerf 2-2-	-kan	ahe 51110 8-2-4	2.11 2.2-	Barkley Spillway TR 2-689	111s	Hannibal Spillway TR 2-731	Holt L&D TR 2-745	Hugo Spillway TR H-69-15	Copan Spillway TR H-70-09	kle viliv	kan Lte	SS (11)
24000	35 "J €	275	971	±3F	0 0 F	ರರ⊨	¥ 3 F	ž č E	FOF	OWE	≭ 3 ⊢	225	₹0F	4 7 F	80.6	B Ω E	8 % E	ತಿಕ್∺	# W E	¥3E	ENE	2 % 5	0 % F	₹ Ö E	E & E
24900									 -		 					-							\vdash		
	UVWY	UVW	UVB			UVBW		U		UBW	ŪΫ	QUB	QUVBW	UVBW		 		Ü	R	UVW	UVCB	UBW	QUVC		WY
24910	I EZ UVWY	YI	WYI	UVB	υ ν	YIR	UVB	UVB	ÜV	UBW	UV	QUB	YERL	YERZ	UVW	UÝB	UVW	UVB		YI UVW	UVCB	UBW	BWYR QUVC		ļ
24920	IEZ		WYI	WE	BW	UVBWY IEZP	WY	WY	BW		BW	WY	YERL	UVBW YERZ		WYR	YI	WRX	WR	YI	WYI	<u> </u>	BWYR		
24930	Ļ	UVW	UVW	UBW	UBW	UVBWY	UBW	UVB	UV	UBW	UV		QUVBW	U VBW	υ ν ¥	UVB	UVW	υ v	UV	UVW					ļ
24931	ļ	YI	YI U VW		-	IEZP	-	WY	BW	UBW	BW UV	<u> </u>	YERL	ERZ WYZ	v	WYR	YI UVW	, ,	BW	YI UVW		L			
24932	ÜVWY	YI	YI	Ļ	L	UVW				0.5.	ļ°,	<u> </u>	QUVBW	UV		L	YI			YI		L			
24933	IEZ	YI		<u> </u>	L.,	YI.							YERL	UV											
24940		 							L			<u></u>						UV B₩				L			
24941															UVW	UVB WYR			ÜV						UVB WIR
24942				L											UVW	UVB WYR									R
24943																									
24950			UBW	UVE	UΥ	UVBWY IEZP	UVB WY	UVB WY	Ÿ		UV			UVBW YBRZ		UB WY	UVW YI	UVB WR					UVCB		UVB
24951	VY	UVW YI													U VW			-	UV						
24952															0 VW										
24960				UVE				Ū															UB WY		
24970							_																		
24980	_									-	-														
24981							<u> </u>				<u> </u>					ÚVB	<u> </u>	UB							-
24982					-	_		\vdash			 					WYR		WX							
24983			_		-		-									 									
24984	VY							-	-			-							-	VCN					
24990				 																					
				-				_			 						_						-		
25000	UVCWY	υν₩	UVCB			UVBW	 	<u> </u>	v	UBW	UV	<u> </u>		UVB	٧٧		TUVC			UVCB	UVW	TUVC	UVCB		νı
25100	IENZH	ΥI	WYI	 —		YIE			ļ		BW			WYR	YI		WYI			WYIN	YI	BWIR	WYR		
25110	L		VC	 —		UVBWY		-							QY	L				VCN					
25120	U VWY			UVE		IR			 -	ЭY		ļ	WY	UBW				E		UVW					
25121	IEZ		YI	-					ļ				ER	ER.						YI		ļ			
25122				ļ				ļ				ļ <u>.</u>			ÚΨ										
25123				<u> </u>						<u> </u>					YI										
25124	L	Ļ		ļ	L	L	<u> </u>	ļ	ļ		ļ					<u> </u>		L		VCV.	<u> </u>				
25130				ļ			<u> </u>		<u> </u>		L	L			OLDY.		L			VCN		77711500			
25140	L				$oxed{oxed}$		L		<u> </u>		ļ	<u> </u>			MAI COA			L		OV.		TUVC BWYR			
25200							ļ					<u> </u>					TVC WY			CN					
25300								<u> </u>							U VW		vc								
25310																									VER
25320]			TR	I		
25330																							R		ER
25340																									ER
25350												l													ER
25360											Ī	Ī													R
25400							ļ —		l												CBW		UVC BWR		
(Conti	nued)																	i							
					\vdash																				\vdash
-					\vdash		-	 				 											 		
\vdash	-						 -	 		<u> </u>	 	 				_			\vdash			<u> </u>	-		
			1 3	1	. 1	1	1	ľ	l	i	i .	I	1			1	1 1	1	1				i 1		1

<u> </u>	A46		ALB	A49	A50	A51	A52	A53	A54	A55	A56	A57	A58	A59	A60	A61	A62	A63	A64	A65
(27) E			Old River L Sill Proto Vibration TR H-76-15	S111	à	-	Tenn-Tom Canal Spillways A&B TR H-78-21	1pr	80	Des		5	8	auk	tes	9	T,	Dams		
PROJECT AND REPORT	ے بوا	~	7 28 6	J _ 8	11.0	<u> </u>	Can	5 8	ding 13	1khe	ers	<u>ت</u>	Gate	E	Gates	Curves	ek Fa	ver 1	ends	ers a
ROJE ID RE	v1]]	Hay	iver Vit	t lor	Sp.	tver 77-	Ton Ways	2 8 6	a 8 9	9.50	e P1	at 10 head	Hay Hay	10 10	12.00	Tow Unes	d Rc 11er 821	7 d 9	P 1 1 1 1 1 69-0	e Pi Forc
DESIGN AND " & OPERATIONAL VARIABLES	Aliceville Spillway	10 TH	roto H	Old River Operation TR H-77-02	zark roto	P 2 7	Pill R H	roto H	Pays FELL	ark]	avit P 2-	avig Well	pill ibra	verf ipra	Vert Lift Discharge MP 2-606	Spwy Tow C Pressures MP 2-625	rope P 2	Rend L Sub Dams Riprap Cover MP H-68-01	Baffled Basins Design Trends MP H-69-01	Baffle Piers Drag Forces MP H-70-04
24000 STILLING BASIN (CONTINUED)	4 N F	ONE	04 1	001	0 6 6	≅ N F	H W H	80 A. F.	0 8 1	an G F	M U X	ZVI	N > I	0 2 1	> 0 X	NUE	S d X	a a z	<u> </u>	HOE
24900 Operation	<u> </u>		 	<u> </u>	-				_	 			-	 -					-	
24910 Pool El	_			UV WZ			UBW		UVB		<u> </u>			ÜВ	 	Z		UB	QVX	
24920 TW E1	UBW	UBW	1	UVW		UVC	UVB		UVB	UE	x			UB	_			VI UB	QV	UVBWY
24930 Type Flow	 	<u> </u>	<u> </u>	YZ	l	B⊌	AXI		WYX	WS				WR		 		WI	XX	IZFX
24931 Pree/Submerged	 	 	 	UVW		UVC			UVB	UB	 			UB	 	 				
24932 Gated/Uncontrolled	ÜВ	UBW		YZ		UVC	UVCB		WYX	Ws	 		 	WR	 		 	 	 	
24933 Unit Discharge	WY		 	YZ	_	BW	WYI				x			UB		z		-	TQ	VY-
24940 Gate Schedule	 		├	1		├								WR		 	 		VX	IX
24941 Single	UB	UBW		-		TUVC	UVC				 			 	 	 		 		
24942 Multiple	UBW			├──	 -	BWER	BWI			 	 	 -		_	 —	 			-	\vdash
24943 Locations	\vdash	UBW	\vdash	 	 	BW				-			-	-	 -			 		\vdash
24950 Gate Opening	UB	-	\vdash	υv		UVC	UVCB			UВ	-		x	-	 				 - 	\vdash
24951 Uniform	WY		-	WZ		BWR	WYI		<u> </u>	₩S	 	_		 	 -	<u> </u>		├~		┝┈┤
24952 Variable	 	 		 		 					 	 	 			}		 -	 	
24960 Gate Submergence	 			-						-	╁─╌	-		├	 		 		 	\vdash
24970 Gate Speed	├	-	 	╁					-			-		 	-			-		
24980 Other Pactors	 	 	 	├						 -	├─	 	 	 	├─			-	├-	
24981 Ice/Debris	 	-	 	 				 	UBW	 	├		-	 	├	 -			├	
24982 Loose Barges	 		 	 		N		<u> </u>	YX	 		<u> </u>				├	-		├	\vdash
24983 Waves		 		 -		├─	-		-	 	 	_	-	 -	 	├	 	-	 -	
24984 Power Discharge	 		 	 		 				 			 	├─-	 -			-	├~	
24990 Noted Items	 		 	├						├	x		-	├─-	├──		 		VYX	UVBWY IZPFX
25000 DOWNSTREAM CHANNEL	_	_	-	-	_	 			_		+-			┢	_	-		 		12PFX
25100 Channel	vc vc	 	 	עע -		v	UVCB		U V B		├		 	┼	├					
25110 Direction	YN	├─	 	CW			MA I	 	WYX	├	 -		<u> </u>	 	╁					├
25120 Shape	С	┼	├	-					-	 		QYL	├	 			 	-	├	\vdash
25121 Invert El	С	+	 	┼							 	 	├	├		-	 	 	├	
25122 Width	├	┼	┼	├		├	├			 	 	 		├	├	 		-	├	
25123 Side Slopes	 	 	1			\vdash	 -	-		├─	├	 	 	┼	├	-	\vdash	├		
25124 Bottom Slope	 	├	 			 			 —	 	├	├	 	┼─	 -			<u> </u>	 	
25130 Dikes	VCE	\vdash	┼	├		├	├-		├	┢──				┼─	+		├		├	-
25140 Noted Items	MR	┼─	 	-		\vdash	 	 	 		 	 -	 	 	 		├─		 	-
25200 Guide/Guard Walls	 		 	 		 	├		 	 	 			 	 				├	
25300 Riprap	ER	Ř	┼	-	-	-	+				 	 	+	 			 		+	
0F230 P-44	+-	VR	 	 	-	TV			R	┼	├-	-	+-	+	1-	├─	┼	 	+	1
25320 Side	╁	۷R	 			IESR .	├	 	├			├	╁─	┼	├	├	 	\vdash	┼	
25330 81ze	┼─	VR	 	 		TV		├	Ŕ	├	├		├	┼-	┼	├—	├	 	├	
25340 Thickness	+-	VR	╁	-	-	TV	-			├	├		┼	┼~	┼─	├	├		┼─	-
25350 Slope	 	+	+-	-	 	ER_				₩-	\vdash	+-	-	+	+	-		-	 	
25360 Noted Items	+-	+	┼	+-	-	├	 	 			\vdash	\vdash	├-	 -	-	├─	 	 	 	
	 	+	+	┼──	 	├-			 -	+	├	-	├	+-	+	┤─	-	-	+	
25400 Hoted Items	 	+	+-		-	├-	-		-	 	├	+	├-	-	+	-	├	-	+	
(Continued)	+-	 	┼	├		├	├ —		-	┼	├	}—	 	+-	┼	├—	├	├	┼	
		┼	┼	-		-	├		 	┼	├		-	 	+-	 		├		
	┼—	┼	┿-	₩-	 	₩-		<u> </u>	 		₩-		┼	₩	+	├	 —	ــ	┼	
L	<u> </u>	<u> </u>		<u> </u>	<u> </u>	<u> </u>	<u></u>	<u> </u>		ــــــــــــــــــــــــــــــــــــــ	<u> </u>				<u> </u>	<u> </u>	1		<u></u>	

	A66	A67	A 68	A69	A70	A71	A72	A73	A74	A75	A76	A77	A78	A79	A80	A81	A82	E8A	A84	A B5	A86	A87	A88	A89	A90
28	Spillway Exit Ch Bottom Shape MP H-71-05	t a	2	e t	e	ank 31	<u>برید</u>	,	5	na l	/er		arge	2 Innt	Beartrap Dam Chamber Silting & STP 04			0.07		J.	Montgomery Is Channel & Spwy & STP 14	ş	ي س	dam	Peoria/La Grange Wicket Discharge of STP 23
	Ex11 ape	te:	Nap face	Cres of 11	Chu?	Sand	Flu	3	neu	ğ	St		sch	tas & Cl	Dam 11t	i	6 I	STP	la. asir	Co	y Iş	Sp	54-8 C06	D 20 ffer	Sch
1	Nay FISH	er G o Jec 72-0	Sur 73-0	73-0-73	Surf 76-1	1 2 8 2 9	gee ure	R [6	F Er	ucie ways	ig ga	ngs Hay	Dams W Di	mini way 3	er S	ى د ر	1 Sp1	ر د د	gate & B	r Ca arge	omer el &	eld el &	8 2 6 6 7 9	33 S E # O	a/La
	otto	P. P.	oper P H-	3111 331g 94-	1 3 ±	E th	- F - C	110 pe	2 5 P	T ide	Dane Per	13C	F C	lski 2111 FP 0	Part P 0	5 5	85 E G	App A to STP 07 Model vs Proto STP 09	est rest	lach (P.)	ontg tann IP 1	infi Infi IP	133 116 FP 1	iss Int IP 2	icke IP 2
24000	<u>∿ w £</u>	ë ë ₹	ភភ⊊	7 A E	OL E	<u>00 E</u>	325	2 2 5	<u>≅0≈</u>	N 12 5	ଭ୍ୟୁଟ୍ଟ	£ 17 10	NO W	N N N	8 C N	¥ 7 €	<u>≇ 9 8</u>	A X W	¥ S N	ž ä is	¥ 0 0	3 C 36	* & W	≥ 0 8	<u>a 3≥ io</u>
<u> </u>			_	L		 -		<u> </u>	-		ļ						<u> </u>		L						├
24900	-				ļ	ļ	UBWY		TUVB	THE		UWY							TOUVB				UV	UVB	
24910					ļ	ļ	IZP UBW		TUVB	TUB WER TUB						umu	<u> </u>		TOUVE WY LEZ		L		M.B.	WYE UVB	
24920							YIP		WYR	WER		ÜWY			<u> </u>	UBW YIE	<u> </u>		TOUVE WYLEZ			L	WE	WYE	
24930					ļ	<u> </u>										L	L		marny 5		ļ				
24931						<u> </u>				<u> </u>								ļ	TOUVE WY1EZ X		L				
24932																									
24933							UBWY IZP			TUB						AE ABM			TQUVB WY I E Z						
24940																									
24941													,			A.B.									
24942												ER				UBW YE								UBW YE	UBW
24943																									UBW
24950					1				-			ER				UBW YE	UB WY					UBW			$\vdash \vdash$
24951		-				i		-	t	t	1					1.5	,								
24952				<u> </u>		 	 	\vdash		\vdash														-	
24960					<u> </u>	-						 			t	 -	 				 		UV		
24970														-			-						WE		
24980	-		_	-	\vdash	-	 		_	 	-		<u> </u>	-		 	-	_							
24981				 -		_		<u> </u>		-		-		-		-									
24982				-		├	ļ <u>.</u>						 _												
•		-	ļ	-	 		<u> </u>		ļ	 	<u> </u>		L					<u> </u>							\vdash
24983	<u> </u>		-		-		-		i										<u></u>						\vdash
24984					-		P	<u> </u>	ļ. <u></u>	 	L						ļ			L	-				
24990	⊢ –		-	-	-	<u> </u>	<u> </u>	 	-		_		<u> </u>	_	<u> </u>		-			<u></u>				<u> </u>	
25000	TUB		ļ		<u> </u>	-		<u> </u>	ļ	<u> </u>	<u> </u>	HUNCH	ļ	000		OUGBU	Olign	07		<u> </u>	OWON	OVOY	UV	LUZOV	
25100	WE				L		<u> </u>		ļ	-	ļ	UVCW YIER	L	QCY EL	<u> </u>	AIENT	QUCB WYNL	QV YL	ļ		IENL	QVCY	WE	UVCY	
25110	·m··				<u> </u>			<u> </u>		ļ	ļ							L							
25120	UBW ER				<u> </u>	<u> </u>	ļ <u>.</u>		<u> </u>		ļ					QCY INL	ļ	<u> </u>		L		<u></u>			
25121	<u>L</u>													ET.	<u> </u>	UBW YE	ļ		TE		QC Y	TUB WER	QUV WYE	TC ER	E
25122	<u></u>											<u> </u>		<u></u>		QYL									
25123	<u></u>		L			<u> </u>						<u> </u>													
25124																							QUY		
25130								L																TC YE	
25140								<u>L</u>								YNL	CH		TE		QC YL				
25200														С								VC IN			
25300	UB₩					[F	CER	
25310						UBW YER				TUB WER													QUY		
25320					†	T	†		 	/ المبو -				<u> </u>				_							\vdash
25330	\vdash	-		T	T -		1	—	-	†	1					 	1	<u> </u>	 		<u> </u>				
25340			 			t —	 	†	 	1-	t				\vdash		1	\vdash		-					
25350	 		†		t	 	t	 	1	 	\vdash		_	<u> </u>	 	†	 		-		<u> </u>	 	 	<u> </u>	
25360	-			_	 	UBW	-		 	1	-				 	 	 	_		 			<u> </u>	-	
25400	 		 	 	<u> </u>	YER	\vdash	 	1	 	\vdash	 	_		\vdash	QVY	 				 	-		TC	
	inued)	 	-		 	 	 	 	+	├	\vdash	├		 	├—	NL	 	-			 			ER	
Cont	inuea)		 	┼─	 	┼──	-	 -		┼	 	+	 -		├	-	 	-		 	\vdash				├──┤
-	 		 	├-	 	├	 	<u> </u>	 	 	 	 		 	├		┼				 				
	 	<u> </u>		<u> </u>	-	├	\vdash	 	-	 	 	├ ─	<u> </u>		├	\vdash	 			 	 		ļ		├
L	Ц	L	<u> </u>	L	L	L	<u> </u>	Ц	<u> </u>		L	L		<u> </u>	Ц	L	1	L		L	l		L	<u> </u>	لــــا

12 May 87

		A91	A92	A93	A94	A95	A96	A97	A98	A9 9	B01	B02	B03	BO 4	305	B 06	B07	808	B 09	B10	B11
29	-		_	r ets				Gate	13 20ef	Miss R L&D 4 Gates & Basin G	Ĕ	å			ace	McNary Spillway & Gates BHL 21-1	T-race		Basin	Basin	
	DERWINDISSED PROJECT AND REPORT	D 20 Basi	erts	S Co.	1. 5. E.	D 22 Basi	Basi	r is	STP te (Pasir	Apro	Bas	tes	e ie	Ē	-8 -8	<u>.</u>	L.	£ 45 10 10 10 10 10 10 10 10 10 10 10 10 10	a	rsn
	PROJE	8 1 2 3 3 5 1 3 5	E O o	Sar 6	% 5 5 5 2 5 5	7 T E	ະ - 2 % ເລື່ອ	Tainter & Basin 37	# # 50 C C C	~ * %	# 45 2. v. c.	1000	2 2 7	evil] tway 3-1	2 H 2	7y 14ay 21-1	darb das (Harb Iway 31-1	25-1-25	svil Stil 65-1	Day C. D
or	DESIGN AND ~~ ₹ PERATIONAL VARIABLES	(138 35 (111	Miss R LED 7 Spwy Culverts STP 29	Chanoine Wickets Discharge Coef STP 30	Miss R 5-5A-8 Tainter Gt Coef STP 31	(iss till	Roller Gate Stilling Basins STP 36	Sub Tainter (Coef & Basin STP 37	90 1	ilas Jates	1135 3011)	SAF Lo	Roller Gates Pressures STP 77	Bonneville Spillway Press BHL 3-1	ffro HL	fcNar Sp11	Ice Harbor Cffrdms & ' BHL 22-1	Sp. 12	The Dalles Spillway & 1 BHL 55-1	Bonneville Rev Still B BHL 65-1	John Day Spwy & Dvrsn Gap BHI 97-1
24000 E	STILLING BASIN (CONTINUED)	2.0,0	12010	0 2 0	1. 5.07	2. 0, 0,	u. 0, 0,	0,00,	4 4 9	200	2 07 0	, F 0.	u. u. v,	H 07 H	2011	20,2		- 5, 12	(- 0 / 12		3 57 5
24900	Operation								_												
24910	Pool El	QUB YEX	1	1	UBW	UVYI		UBW		TQUB	UBW YER	UWY				Z	VC YI	UE WX	QUVB WY IZ	UVBW	UVBW YIEZ
24920	TW E1	QUB			UBW	UVBWY IEZL	TUV YE	TUB WE	UBW	TQUB WYER	UBW YER	UB WY	Z		UZ.	QUVBW YIZL	VC YI	QUVBW	QUVB WYIZ	UVBW	UVBW YIEZ
24930	Type Flow	T																			
24931	Free/Submerged		UB WY			UVBWY		UBW	UBW	TQUB WYE											Ü
24932	Gated/Uncontrolled															QU ZY			QUVB WYIZ		
24933	Unit Discharge									QUY											
24940	Gate Schedule														UVC	YZ PL	VC YI	QUVB WYIZ	QUVB	Z	Z
24941	Single																				ĊW
24942	Multiple	L^{-}																Ĺ			
24943	Locations																				
24950	Gate Opening	QUB YEX			UBW	WIE	TUV YE	TUB WE		TQUB WYER		ÜΒ ₩Υ	2		UCN ZL	UBWY ZPL	AL AC	QUVBW YIZX	WYIZ	UVBW YIZ	Z
24951	Uniform																				
24952	Variable																				
24960	Gate Submergence					AIE	TU VE	TUB WE		TQUB		UB WY	Z		UZ						
24970	Gate Speed						L														
24980	Other Factors																				
24981	Ice/Debris						TU VE											UX			UBW YIE
24982	Loose Barges																				
24983	Waves	1																			
24984	Power Discharge														UVC		VC YI	i			V
24990	Noted Items										UBW					UVWY IZP					
25000 I	DOWNSTREAM CHANNEL																				
25100	Channel	UY EX	<u></u>		ĺ	WIE				TOUVC BWY I E	QUBW YER				VC YN		TUVC WYSI	UB WY		UVB WYI	UVB YIE
25110	Direction						<u> </u>					<u> </u>									
25120	Shape						Ĺ		<u> </u>	ļ		<u></u>			VC YN		VY				
25121	Invert El	E		<u> </u>		TUVB WIE	TU VE	AE		TQUVB WY I ER	TUBW	E				QUVW YIZ	VCY IE	QUVB WYIZ	QUVB WYIZ	TE	UVBW YIZ
25122	Width			ļ				ļ				L			<u> </u>		ļ				<u></u>
25123	Side Slopes			$oxed{oxed}$	ļ		<u> </u>					ļ						<u> </u>	ļ <u>.</u>		
25124	Bottom Slope			ļ																	
25130	Dikes	$oldsymbol{oldsymbol{\perp}}$	<u> </u>	L.		L	<u> </u>					<u> </u>					C		<u></u>		
25140	Noted Items			<u> </u>			<u> </u>			<u> </u>		<u> </u>	L		YIN	<u> </u>	VC YI	<u> </u>	<u> </u>	ļ	<u> </u>
25200	Guide/Guard Walls	↓_	ļ			<u> </u>	<u> </u>		ļ			ļ	L		VCH	<u> </u>	<u> </u>	ļ	<u> </u>	ļ	<u> </u>
25300	Riprap	┼	ļ	<u> </u>		<u> </u>	<u> </u>	ļ	<u> </u>	L.,	_	ļ	L		-				ļ		
25310	Bottom		_		<u> </u>		<u> </u>	 	<u> </u>			<u> </u>	<u> </u>		ļ			_	<u> </u>		
25320	Side	_	<u> </u>	<u> </u>	<u> </u>	ļ	 	ļ	L		ļ	Ļ	ļ		<u> </u>	<u> </u>			<u> </u>		<u> </u>
25330	Size	╁_	ļ	₩.		<u> </u>	 	<u> </u>	ļ		<u> </u>	 		<u> </u>	ļ	ļ	<u> </u>	ļ	}	<u> </u>	<u> </u>
25340	Thickness		_	 	ļ		 	<u> </u>	ļ	<u> </u>	ļ	Ļ	<u> </u>		<u> </u>	<u> </u>		<u> </u>	 		
25350	Slope	+	<u> </u>	<u> </u>			ļ	ļ	<u> </u>	<u> </u>		<u> </u>			L	<u> </u>	ļ		<u> </u>	<u> </u>	<u> </u>
25360	Noted Items	+-	-	<u> </u>		<u> </u>	├	 	<u> </u>	-	ļ	₩	<u> </u>	<u> </u>	UV		TUCW	-	<u> </u>	ļ	<u> </u>
25400	Noted Items	 	<u> </u>		ļ	1	ļ	<u> </u>	<u> </u>	<u> </u>	 		↓	<u> </u>	CI	<u> </u>	YSI	<u> </u>	ļ	-	
(Contin	iued)	4	-	1	<u> </u>	<u> </u>	├	<u> </u>		<u> </u>	-	<u> </u>			<u> </u>		<u> </u>	<u> </u>			
		_	—	₩	<u> </u>	<u> </u>	 	—	 -	<u> </u>	-	₩	1	<u> </u>	ļ	<u> </u>	 —		-		\vdash
		┷	_	 	<u> </u>		 	↓			<u> </u>	1		<u> </u>	<u> </u>	<u> </u>	Ļ	<u> </u>	ļ	<u> </u>	<u> </u>
		1			1	1	1	1		1	1	1				1	l	1	L		

30	al in	Ę		6	8	>	>											ļ							Ī
!	Lower Monument, Spillway & Bas. BHL 104-1	Little Goose Spillway & Bass BHL 114-1	Bonneville Gate Lip Mod BHL 136-1	Allegheny L&D Spwy & Channel CIT A4L9	Wicket Gate Operating Force CIT C3	Bluestone Baffle Pier Car SIT 8578	Bonneville Baffle Pier Car CIT B6C	Tuscalocsa Stilling Basin 618 CIT 78	Gallipolis Channel & Spwy CIT G35F	Gallipolis Proto Currents							ì								
24000									000	5 5 5	1										<u> </u>		$\overline{}$		7
24900		<u> </u>			i			_			<u> </u>		-		<u> </u>		l	_			<u> </u>	<u> </u>			-
	UVBW Y1Z	QUVBW Y I EZP		UVC	UBW	UBY	UBY	UYI			 	 				-	<u> </u>	 			 	-			-
24920	U VB₩	QUVBW YIEZP		UVC	UBW	UBY	UBY	UYI	 	-	╁──			-	_	-				ļ	 	-			1
24930	YIZ	YIEZP	ļ	BW		IX	IX			 	┢┈			_						1		-	-	-	1
24931		<u> </u>	<u> </u>			-	ļ	-			┼─	<u> </u>			<u> </u>			 	 	_	<u> </u>	-			7
24932					 	 	<u> </u>	 			 	-	 								 -			-	1
24933		-							-		 		-			-		i			\vdash				-
24940		<u> </u>	-							<u> </u>	├		 			-	_			├	-	-			1
24941											<u> </u>		-		-					 	 -	 -	 -		4
24942	<u> </u>						-	 			 		_					ļ		 	 	 	 		1
24943		-	-				 	+			 		-	-	 		-			+-	\vdash	-			1
24950	UVBW	QUVBW YIEZP	-	-	UBW	-	UBY	 			\vdash		-	<u> </u>	-	├				-	\vdash	 	-		7
24951	YIZ	YIEZP		 		 -	IX	+-					 	 	-							-			+
24952						 	 -	-	 	<u> </u>	 					<u> </u>		-		-			-		-
24952	<u> </u>	 		 		 	-				 	-	-	-	-	 				 	 		 		4
24970					<u> </u>				<u> </u>		├ ─				<u> </u>	-	_			├		-	-		4
					├		├	├			 -					<u> </u>	 	 			├		 -		-
24980		-				 	VIE				 	<u> </u>							<u> </u>		ļ				4
24981		ļ.,			├	├		├—	ļ		ļ	 -		<u> </u>		ļ		ļ	ļ	 	ļ			<u> </u>	-
24982		<u> </u>		-				<u> </u>		ļ	├				ļ						-				4
24983	UB	-	 			⊢-	-			-	├			-			-				 	-	-		4
24984	UB WY			ļ	<u> </u>	UB IX	UBI EX					<u> </u>									├				4
24990						1X	EX				<u> </u>	<u> </u>		 -	-	┢━	-				-				╡
25000	UVB	UBW		DV	<u> </u>	<u> </u>	-	UVY		vc				ļ.—.		 		ļ		ļ	├	<u> </u>			4
	U VB WY I	UBW YE		CN		 		UVY IE		VC NX						 -			ļ		 -	ļ <u>.</u>			4
25110	UVBW	TOUVB WY I EZ P				 		_			-				_	<u> </u>			ļ	├—	├	-			4
	YIZ	UBW		É	<u> </u>	<u> </u>		UVY	ļ		├	ļ				 -	<u> </u>		 		ļ				4
25121		YE		ļ		<u> </u>	<u> </u>	IE			 								ļ		 -	 -	_		+
25122											├—							<u> </u>	ļ	 					4
25123				<u> </u>				ļ			 		<u> </u>			ļ									+
25124			ļ	Ļ		<u> </u>		├──		_	 											 			4
25130		<u> </u>	<u> </u>	<u> </u>						<u> </u>		-				ļ		ļ	ļ			 -	ļ		4
25140		ļ			<u> </u>	<u> </u>		ļ			-		<u> </u>			ļ							ļ		4
25200		ļi			ļ	<u> </u>	<u> </u>	—	L		ļ		<u> </u>		<u> </u>	ļ					<u> </u>	<u> </u>			4
25300						 		ļ			<u> </u>	<u> </u>				ļ	<u> </u>			<u> </u>					4
25310		L				L	<u> </u>	_			├—		<u> </u>	<u> </u>		ļ									4
25320						L	<u> </u>	-					<u> </u>					<u></u>		<u> </u>					4
25330					-	<u> </u>	<u> </u>					<u> </u>	<u> </u>						L		⊢_	<u> </u>			4
25340				ļ	<u> </u>	_					ļ	ļ	<u> </u>	<u> </u>				ļ		<u> </u>				<u>-</u>	4
25350					ļ	<u> </u>	<u> </u>	ļ	L			ļ		L			Ļ,					<u></u>	ļ		4
25360		_			ļ	<u> </u>	<u> </u>	<u> </u>	<u> </u>			ļ					ļ				ļ				4
25400					L	ļ		<u> </u>		L	<u> </u>					L		L	<u> </u>		ļ	L.,			1
(Cont	nued)							L			<u> </u>				L		L		L						1
					L	<u> </u>		ļ!			<u></u>	ļ					L			<u> </u>	<u> </u>				1
- 1			1		l l	I		l l			I	1	1	1		1				1	ı				1

$\overline{}$		A01	A02	A03	A04	A05	A06	A07	A08	A09	A10	A11	A12	A13	A14	A15	A16	_A17	A18	A19	A20
39		Ē	ke t	Ē	al					dwy		_	_	to.		iiii ites i	1111 ap 2	3111 3		O'bank es	
	DINE WEIGHT AND REPORT	ngdo	ngdo Buc	op Bu	Can	ver.			_	Floo uctu	بالر	Pag.	Gate	rlar	oint	r L Sill af Gates Rot 1	R. P. S. P.	· L S truc Rot	4	S S	Ee
	ROJE	F A	1 K	es 1-3	ucle	8 4 E	0.40 0.10	to S#3	252	32 8 23	og Off	# 5 %	way 381	98.	s in	iver -Lea	Ch Ch	1, ver	r age	Lyer 19 cat	liver ire
OPE	DESIGN AND SERVICE CRATIONAL VARIABLES	ossu pill	Possum Kingdom Submerged Bucket CV TM 111-2	Possum Kingdon Baffles TM 111-3	7 5 E	ante Te	anto 10111	ilues N. 2-	E S	ontr	5 9 E	hear A 2-	Cheatham Spillway Gate TM 2-381	2 5 E	2 VIII	Old River L Sill Multi-Leaf Gates IR 2-447 Rot 1	old F Snstr R 2-	ontr	larri pill	Old River O'l Panel Gates TR 2-491	103t
	OWNSTREAM CHANNEL (CONT'D)	T N F	TOL	o.m.	N J F	NNF	180	B E ←	3.5	E O F	335	OMF	S	236	COL	OZH	900	OOF	38 07 1-	OLF	0.5
25900	Operation	\vdash	-		1	 												_		†	
25910	Pool El	VIE	E	VIE	VCE	TUVBW	VE			VE	UVW				TCE		ER	UC BW	UW		_
25920	TW E1	VIE	E	VIE	VCE	TUVBW	VC VE		VC	VE	UVC WY I		QYL		TCE		VER	UC BW	UN		
25930	Type Flow	\vdash			_	1162	15.				VC.							DW	<u> </u>	<u> </u>	
25931	Free/Submerged	_	1	-	l	TUVBW				V	UVW YI								1		_
25932	Gated/Uncontrolled	 		 		YIEZ					11		-		 				-	1	
25933	Unit Discharge	VIE	E	VIE	VCE	TUVBW	v c			VE	UVW				TE		VER	<u> </u>	VR		-
25940	Gate Schedule	 	t^{-}	†	 	YIEZ	ΥE				VCE	\vdash						-		1	<u> </u>
25941	Single	 	 			CE				<u> </u>		_						UC			<u> </u>
25942	Multiple		-	 	-	TUVCB				 	 	 		 				UC BW			
25943	Location	 	†	<u> </u>		WYIEZ	\vdash			<u> </u>	<u> </u>	<u> </u>	\vdash	 				UC			1
25950	Gate Opening	\vdash	 	 						-	VCE	_		 				-		_	
25951	Uniform	 	 	-	VCE						<u> </u>				 				<u> </u>	 	✝
25952	Variable	1		†		TCE			_		_	\vdash		_					\vdash	1	
25960	Gate Submergence	t^{-}	-	 							_	\vdash				_			-		
25970	Gate Speed	†			<u> </u>					<u> </u>		\vdash			_	_			<u> </u>	†	†
25980	Other Factors	 	<u> </u>	-	<u> </u>							<u> </u>		 							
25981	Ice/Debris	\vdash				1			 	i —	1	1	 	1	_				<u> </u>	<u> </u>	-
25982	Loose Barges	\vdash	\vdash	 	 	_					-			 	 	1		-	ļ —	 	
25983	Waves	 		-	┼─	1				-	 	 	-	 		_			 		<u> </u>
25984	Power Discharge	 	 	-	 	 									c	 			+	_	
25990	Noted Items	 	\dagger	 	 	†	VE					<u> </u>		 	 	<u> </u>			\vdash		
-777-	NOTED ITEMS		_			 					 										
21140 U	pstream approach channel	┼─	+	 	 		-						 	 			 -	_	 		
	pstream approach riprap	\vdash	 	 	\vdash					_	_		<u> </u>		 			 	_	 	\vdash
	pstream approach misc.	 -	 	 	-	 -						† —		1	┼	<u> </u>	 	 -	1	 	
	pstream approach operation	 	†	 	+	1	 							 		<u> </u>		 	1	† –	
	ontrol sill shape	+	Subme	rged	+	 	Sluice				Dike	\vdash	\vdash	1	 				+	+	Rock
	ontrol sill misc.	 	bucke	-	Lock	+	Outlet Pier		 		secti	in .		 	 	 	<u> </u>		\vdash	1	dam Seal cove
	ontrol sill operation	+	\vdash	 	Flow		Sluice	3100		<u> </u>		_				 			†	$^{\dagger -}$	Const
	ates & bulkheads misc.	 	+-	 	Orifi		flov			 	 	_	Seals		 	Air	 	<u> </u>	1		dure
	ates & bulkhead operation	+	 	 	gates				 			 	& ven	1	1	vents		 			+
	till basin apron	 	 	 	 		 	-		\vdash	Flip bucket				1	 			1	1	+
	till basin end sill	 -	\dagger	1	+	+	1	Sendr	Notch	ed	Bucker	1	1	 	1	<u> </u>	-			 	
	till basin baffles	+-	 	+	+	\vdash	\vdash	weir Locat	ion	<u> </u>			\vdash		†	 	 	 	\vdash	_	\vdash
	till basin pier ext	 	\vdash	+	<u> </u>	\vdash	 	in ro	<u> </u>	\vdash	\vdash	\vdash			†	†	\vdash	_	\vdash		\vdash
	till basin tr walls	+	+	+	†	†	I		 	 	 	 	 	+	 	 	 		1	+-	
	till basin riprap	1	1	1	 	+	\vdash	-	_	 	 	f	1-	†—	1	 			+		$\dagger -$
	till basin operation	 	+	1		+	Sluice				 	 	 	+	1	 	\vdash	 	+		
	ownstream channel geometry	+	+	+-	$\dagger -$	+	flow	 	-	+-	-	╁╌	\vdash	 	-	†			+	T^{-}	
	ownstream channel riprap	+-	+	+	+	+	\vdash	\vdash	+-	 	+	 	\vdash	+	+	+-	Filte	<u></u>	+-	_	
	ownstream channel misc.	+	+	 	+-	+-	\vdash	-	-	\vdash	+	+	 	t	Pyrh		blank	et_	+		t^-
	ownstream channel operation	+	+-	+	+	+	Sluice	 	 	-	 	+	 -	t-	taili	ace	 - 	+	+	+-	+
	ER TYPES OF DATA	┼~	\vdash	+-	+-	+-	flow		+	+	Gate opera sched	t 100	Air	+-	+	 	+	-	+-	+-	Seer age flow
Y OFF			1	1	1	1	1	1	ì	1	L'yera	V 4 O D	deman	ai	1	1	i .	1	1	1	flow

32	A21	A22	A23	A24	A 25	A26	A27	A28	A 29	A30	A31	A32	A33	A34	A35	A36	A37	A38	A39	A40	A41	A42	A43	A44	A45
				lway	lway	lway	1ska	2 =	Pike Island Stilling Basin &	Proj	> E		ang ank	Lway PD A	ł	5	Barkley Spillway TR 2-689	tes	}		}		App	and c	Miss R LAD 15 Spillway & Gates of TR H-73-15
	98		e .	Spii	Sp11	1100	as t	er la Basí	Bas	e p	Basi		E G	R D		age Bas		ري ا			L.	, g	<u>~</u>	in in in	5 4 5 T
	Geor ₁ -519	53 t	ane1 -558	land 5.4.	3 & 3	5 4 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	714	# 582	13. 13. 13. 13. 13. 13. 13. 13. 13. 13.	luay 633	8 & B	5 E 5	13a3 10H	288 284	1way 657	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	9 a 6	Tay 1	way 73.3	, i	, kay	20.0	70 Y	Vibr	R LI
	W F George L&D TR 2-519	Jackson L&D TR 2-531	Dard L&D TR 2	alark Raterk	iree late: IR 2-	Sate	la XV	leu (1ke	25.0 10.1 17.2 18.2	1116 R 2-	roct 1911	rkar Werf	P -He	ahe Pilla	till	ark]	anne pill	pt11	Holt L&D	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	opar Pill	akle pill	ate a	133 P111
25000		72.6		201	307	100	205	707	E 07 E	COL	206	201	401	a l H	ONE	EL WE	BOL	Owe	E W F	= J.	1 X OF	DWF	ONE	4 () F	ENH
25900											<u> </u>			_		 	<u> </u>	t	†		 				
25910	UVCWY IENZ	UVW	UVW YI			VR					ŰΫ		WY	UVB		-		<u> </u>	 -	UVW	 	TUVC	UVC	_	
25920	UACMA	UVW	ÜV₩		 -	UVW	_		v	 	υV		WY	WER UVB	QY	 	TUVC		\vdash	TACA	\vdash	BWYR TUVC BWYR	BWR UCB		
25930	IENZ	AIE	YI			YIE	<u> </u>	 			BW		ER	WER		 	WYI	_	 - -	YIN	 	BUYR	WR		-
25931		Ŭ V₩	UVW	<u> </u>		ÜVW	-		v		UV		Μ¥	UVB	 	<u> </u>	UVW		 	UVW	 				-
25932	-	YI UVW	UAA AI	-		YIE		 - -			B₩ UV		IC R	WER		 	AI	 	-	UVW	 	 	<u> </u>		
25933	UVWY	UVW YI	YI	 		-	-			<u> </u>	 		WY		 -		YI .	<u> </u>	 	AI	╁──	 -			-
25940	IEZ	ΥI				┢							ER						 	-	├	-	<u> </u>		
25941	<u> </u>	-	-	 		 -	-		 						├				├	-	╁		 	<u> </u>	VI
25942	VCM		vc	-			-				-				UVW				├	-	├		-		VER.
25943	VCN		V C	<u> </u>		 -		-			<u> </u>		-				 	<u> </u>	├		├	├			
25950				 		UVW	-	-	٧	UBW	ÜV		 	U VB			TUVC	-		ji .		 	UVC		VΙ
25951	VC N	U VW	L		\vdash	YI	-		-	<u> </u>	 		 	WER	UVW	-	WYIN	 	 	├	 	 	BWR	L	
\vdash		ΥI					 						├	<u> </u>	UVW			<u> </u>	├	<u> </u>	├—		-	<u> </u>	-
25952		 	-	 	-	ļ					<u> </u>		├—				1	 			├—			<u> </u>	
25960				-	ļ.,					ļ. <u></u> .		L	-	<u> </u>		ļ	├		-	L	├				
25970			-	-	<u> </u>	-	<u> </u>	├			<u> </u>	ļ	├—				<u> </u>		<u> </u>	-	├				<u> </u>
25980	L			L	ļ					ļ	<u> </u>		ļ		ļ	<u> </u>			├		 				VR
25981		ļ		<u> </u>			ļ	<u> </u>					<u> </u>						<u> </u>		ļ				L.,
25982				_		ļ	_						<u> </u>			<u> </u>	<u> </u>		<u> </u>	ļ	ļ		L	<u> </u>	
25983	ur	ļ	vc			<u> </u>	L		<u> </u>	ļ				L	<u></u>	<u> </u>	mus			190	ļ		<u> </u>		
	NH AG	ļ	vc vc	ļ						ļ							TVC			VC -	ļ .	L			
25990			-			<u> </u>	-		_							┡—	TVC			С					
				<u> </u>		<u> </u>		<u></u>										L.,	L		<u> </u>	<u> </u>		L	
21140				<u></u>		<u> </u>					<u> </u>				<u> </u>		Railro embani			L	Abutme shape	ent	Abutme shape	nt_	
21460			2-77	ļ		L					<u> </u>		<u> </u>				L				ļ	<u> </u>			
21500	Ļ	<u> </u>	Guide booms	<u> </u>	ļ!										ļ										
21990	<u> </u>	ļ				<u> </u>			<u> </u>		<u> </u>									<u> </u>	<u> </u>			Ĺ	L
22210	Divren notch	vents		Cheat!									Riprep cover						<u> </u>	Diver weir	sion				
22800			Project layout	; t								<u> </u>	<u> </u>								<u> </u>				
22990						<u> </u>	<u> </u>	<u> </u>			<u> </u>					Ĺ	Ĺi	<u> </u>	L.						
23700				Gate seals	Alr Vents		<u> </u>						L			L		Trunn: eleva	ion tion						Gate struct
23990			<u> </u>		Air Vents	L		<u> </u>			<u> </u>							L							
24250							ļ																		
24330	L		<u></u>		L		L .				L														
24430						L										L							Chute blocks		
24530																									
24630						匚						<u> </u>							L		Berm elev				
24760		<u> </u>		<u> </u>					L									Blanke lengt)	et h						Cover blocks
24990						L																			
25140															Channe rough	l ness						Levee			
25360																									Coner blocks
25400																					Bridge	•	Bridge		
25990			Lock discha	arge													Lock discha	rge		Trib inflo	1				
x			Debris accumu	Beal press	ire	Debris accusu lation												Debris remove	1						lce/ debris remova
	i							I^-	T							Ι		,	Ē		t				*******

	A46	A47	A48	A49	A50	A51	A52	A53	A54	A55_	A56	A57	A58	A59	A60	A61	A62	A63	A64	A65
33				11		-	н.	Į.		ad		a	9	Ä	8.8	89	eir h	2	s	
DESIGN AND			Sati	7 2	11.0	[3 ~	Cana	96 vi	ding 2	12 khe	9 c	5 5	Gate	Emba	Gat	Curv	kas Was	b Da	asin ends	0 0 ⇒
30 JB	L SE	E S	Vib	tion	Sp1	Tyer	Ton Ways	2 g &	5 g 6	2	e Pi atio 154	atio head 468	t ton	25° €	Lift arge 606	Tou ures 625	d Bo	1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	ed B n Tr 69-0	e Pi Fore 70-0
DESIGN AND OPERATIONAL VARIABLES	Aliceville Spillway TR H-74-10	Columbus Spillway TR H-74-	Old River L Sill Proto Vibration ITR H-76-15	Old River L Sill Operation TR H-77-02	Ozark Proto Spillway TR H-77-06	Red River L Spillway TR H-77-13	Tenn-Tom Canal Spillways A&B TR H-78-21	감양물	rays H	Barkley Gate & Bulkhead TR HL-83-12	arri avit P 2-	avig well	1111 1512 162	Overflow Embank Riprap MP 2-552	ert 19ch	Spwy Tow Curves Pressures MP 2-625	Sburgd Rock Weir Propeller Wash MP 2-821	Rend L Sub Dams Riprap Cover MP H-68-01	affl esig P H-	Baffle Pie Drag Force MP H-70-04
25000 DOWNSTREAM CHANNEL (CONT'D)	4 W.E	ರಿಶ್	D 4. F	050	BAH	æ or ∈	-0-	ari a. t-	DAF	# U E	ளிப்≢	<u> </u>	Ø > ₹	OEE	> 0 E	OT O. E	07 D. X	œ œ x	# A I	æ ⊕ ¥
25900 Operation	+	+	+	-					 	 			-				<u> </u>			
25910 Pool £1	╁──	 	+	עעט	-	\vdash	UC		UVBW	-				 	-	 		 		-
25920 TW E1	VCN	+	+	UVW	1	ν	DAC B	-	YRX UVBW	├	-							+-		-
25930 Type Flow	+	-	+	-	 		WYI		YRX	-				<u> </u>			-	<u> </u>		
25931 Free/Submerged	+-	+	 	U V₩	 	 			UVEW	\vdash				 		 	 	 		
25932 Gated/Uncontrolled	Y		 - -	UV	-		UVCB		YRX	 										
25933 Unit Discharge	 	 		-		<u> </u>	WYI		 	╁──								<u> </u>		
25940 Gate Schedule	+	\vdash	+		-	┢		<u> </u>	 				\vdash	 	-					
25941 Single	VC	VR	+	UW	-	v	UVB		 	├				 -	 	-	 	 		
25942 Multiple	YN	+	 	├—	├	-	WI		-	 	-						-	 		-
25943 Location	+-	+			-	TER				 		_	 	 		-				
	vc	VR	-	UVW	 	TV	UVCB		-	 			-	+	 	├—		 		
25950	YN	+	+			ER	WYI	<u> </u>	_	├─		<u> </u>	-		-	-				\vdash
25952 Variable	+	+	 	 	 	 	-			-				 		 	-	+		
	+	+	┼	 	 			 	├	├				 						-
	+	+	-	 		├			├				-	 	 	-		├		
	 	 	┿		-	├—		<u> </u>	ļ	-			<u> </u>		 	 	├──	-		
25980 Other Factors	-	 		 	-			_	UBW	<u> </u>	-			 -	-			 		
25981 Ice/Debris	 			├	<u> </u>	<u> </u>			YX	-					-	-	├	ļ		
25982 Loose Barges	╂	 	┼	 		├ ─			├—					 	├	<u> </u>	 	 		4
25983 Waves	┿-	-	↓	 	 		<u> </u>	<u> </u>						 						
25984 Power Discharge	+	 -	<u> </u>	├	<u> </u>	<u> </u>			 	 -			<u> </u>	-	 		-	<u> </u>		
25990 Noted Items	┿╾	┿━	-	┾=		-	 		╄	 -				+	-	_	-	+-		-
NOTED ITEMS	-	—	├ ─	-	├	Abutan	ent	<u> </u>	-	 				 	├	<u> </u>	 			
21140 Upstream approach channel	-	ļ	ļ	ļ		Abutm radiu	_			<u> </u>				ļ			<u> </u>	 		L
21460 Upstream approach riprap	-	-	ļ	ļ	 	<u> </u>	<u> </u>			├ ─-				 	ļ			 -		
21500 Upstream approach misc.	—	ļ	ļ	<u> </u>	↓		<u> </u>			<u> </u>				 	<u> </u>	[ļ	 		
21990 Upstream approach operation	4_	 	ļ	Ļ	<u> </u>		<u> </u>		↓	<u> </u>				Riprap		Flip	Rock	Riprap		
22240 Control sill shape	\bot	ļ	Da (dans	<u> </u>	↓	<u> </u>	<u> </u>	ļ	ļ	<u> </u>		Weir L		cover	<u> </u>	bkt	veir	cover	ļ	
22800 Control sill misc.	↓	<u> </u>	Bridge	`				ļ	<u> </u>	<u> </u>		Weir & O bank Flow Flow thru Lock		<u> </u>	<u> </u>		Cap blocks	ller		ļ
22990 Control sill operation	4	<u> </u>	Do.	10+-	-				<u> </u>	Bottom		bru lock	01 2	-			Prope dir &	dist	<u> </u>	<u> </u>
23700 Gates & bulkheads misc.	\bot	—	Dog mech	Gate as veir	1	<u> </u>		<u> </u>		girder	L		Single leaf	1	↓	ļ		-		<u> </u>
23990 Gates & bulkhead operation	TPH VAA	 	-	ļ	₩	<u> </u>		<u> </u>	 	Unita On crest	<u> </u>			<u> </u>		Toe	<u> </u>		ļ	Apron
24250 Still basin apron	Pixed crest apron	<u> </u>	<u> </u>	 		<u> </u>	ļ		ļ	<u> </u>	<u> </u>		ļ	<u> </u>	<u> </u>	curve		-	-	rough- ness
24330 Still basin end sill	4	ऻ		↓	<u> </u>	<u> </u>	<u> </u>	_	 	<u> </u>	Protot	VDe.			-	<u> </u>	-	-		<u> </u>
24430 Still basin baffles	↓	 	<u> </u>	<u> </u>	₩	ļ		<u> </u>	ļ	Pier	baffle		 		<u> </u>		<u> </u>	ļ	ļ	
24530 Still basin pier ext	 	<u> </u>	<u> </u>	ļ	<u> </u>	<u> </u>	<u> </u>	 	ļ	baffl	ļ. *	ļ	<u> </u>	<u> </u>	<u> </u>	ļ	ļ			<u> </u>
24630 Still basin tr walls		—	 	ļ	<u> </u>	<u> </u>	<u> </u>		<u> </u>	<u> </u>	ļ.—		<u> </u>	1	ऻ	ļ	<u> </u>		<u> </u>	
24760 Still basin riprap	\bot	<u> </u>		ļ	ـــــــــــــــــــــــــــــــــــــ	<u> </u>			<u> </u>	ļ	Wal .	<u> </u>	ļ		<u> </u>	<u> </u>	Ļ _	1	Ruo : - d -	Provid -
24990 Still basin operation		<u> </u>	\perp	<u> </u>	_	<u> </u>	<u> </u>		ļ	<u> </u>	Veloci & pres			<u> </u>		<u> </u>	<u> </u>	<u> </u>	Froude No.	Froude No.
25140 Downstream channel geometry	\bot	<u> </u>		ļ	Щ.	<u> </u>	L		ļ	L	<u> </u>	<u></u>	L	<u> </u>	<u> </u>	$ldsymbol{ldsymbol{ldsymbol{eta}}}$	<u> </u>			<u> </u>
25360 Downstream channel riprap			<u> </u>		<u> </u>				<u> </u>	<u> </u>	<u> </u>			<u> </u>	<u></u>		<u> </u>	<u> </u>		<u> </u>
25400 Downstream channel misc.	1_	1_	\perp	<u> </u>					ļ	<u> </u>	L	<u> </u>		<u></u>			<u> </u>			ļ
25990 Downstream channel operation			1									L			<u></u>			<u> </u>	<u></u>	disz=
X OTHER TYPES OF DATA			Tempe ature			<u></u>		<u></u>	Ice pass- age		Cavi- tation	<u> </u>	Debri on gate	•	L	<u>L</u>			data	Hydr jump loc & length
	1		1	1	1	1	1		1		[1	1	1	1	l				Hength

(a)	A66	A67	A68	A69	A70	A71	A72	A73	A74	A"5	A76	A77	A78	A79	A80	18A	A82	A83	A84	A85	A86	A87	A88	A89	A90
34	Exit Ch nape n5	Tainter Gates CE Project Data MP H-72-07	appe	rest	Spillway Chute Flow Surface MP H-76-19	Old River O'bank Outlet Channel MP HL-80-05	Low-Ogee Crest Pressure Fluct	37	RR Embankment O'flow Erosion Paper R	St. Lucie Canal Spillways Paper 14	St. Clair River Submerged Sills		Sand Dans O'flow Discharge	Kiskiminitas 2 Spillway & Chnnl	am Iting		Miss R L&D 15 Dam & Spillway STP 07	App A to STP 07 Model vs Proto	Monongahela 4 Crest & Basin STP 12	Soef	Montgomery Is Channel & Spwy STP 14	Spwy	1-8 Coef	26 Ferdam	Peoria/La Grange Wicket Discharge S
	Spillway Exit Bottom Shape MP H-71-05	r Gar	Sur Sur S	Spillway Crest Design Profile MP H-73-05	ay cr	char 80-08	10 E −	Ohio R L&D 37 Spillway Paper D	Eros	9 S 1	air B	8 8	D1sc	inita ay	ap De	Ì	Spill	50 ST	ahela F Bas	Cate 78e (rery sery	2	5-5P	33.9	Orac Disc
]	ttom ttom	Pro H-7	Per 7-4	sign H-7	111H	tlet H	essu H-7	10 R	E E	11 Ling	oner:	Hastings Spillway	2 2 2	Skii 1118	artr ambe	Marmet L&D STP OS	SS H C	del A	est 2	Roller Dischar	nt.gog	Winfie Channe STP 15	33 B	SS 82 7	oria,
	상용물	를 H H	암공룡	양말론	유로로	39₹	3 & 8	은 양 g	£ 0 g	\$ 55 E	Sul	井양동	800	S S	S C R	£35	E ag E	45.	₹ 5 E	8 6 6	₹ 9.8	is de	F 8 F	£65	Sar Pe
25000					-				-	1	-		-	-	-	ļ		<u> </u>		t			 		ļ
25900						UB	 	 	├	TUB		-	-	С	 	QVC		QV	ŤE	-	QCY			TUVC	
25910 25920	<u> </u>			<u> </u>		WY	-	₩-	 	TUB	.	ER	<u> </u>	QCY	 	QVC YNL QUVCB	-	YL QV YL	TE	ļ	NL QCY	QVCY INL QVCY		TUVC YIER TUVC	
25930		 -	├	Ь—		 	 	 	<u>. </u>	WER			-	EL		QUVCB L L		YL	-	├	NL	INL		YIBS	<u> </u>
25931		+	├		 			ļ		 			<u> </u>	├ -	ļ	QYL		VŸ	 		QYL			-	-
25932	-	-			-	├	<u> </u>	-		├	├	 		├	-	├	ļ		1		ļ.,		 	-	-
25933		 	-	 	├	UBW		-		TUB			 	<u> </u>		UBW	-		TE	├	QYL				
25940		_	-		├	YR		├	ļ	WER	├	-		CE		YE CN	-	YL			QCY		-	-	├
	-	 			 	 	├		 	┼	}		ļ <u>.</u>	ļ	-	QUBW		<u> </u>		 _	NL	-	-		
25941 25942	ļ	 				 	├	Ļ		ļ	 	ER	ļ	├		YEL	CN				QYL	VC		TVE	ļ
	├──			-				+	 -	ļ	ļ <u> </u>	C	+	-		AET Annam	CN		-		ųYI.	IN		TE	<u> </u>
25943	├─	┼		\vdash	├─		┼──		-	-		ER		CE	<u> </u>	UCBW	UB	Ϋ́L	Ļ		1	IN TOUVE BWYIE	<u> </u>		ļ
25950		 	ļ	<u> </u>	 -	├		 	ļ	ļ	ļ	ļ	<u> </u>	ļ		YEN	WY		ļ		NT OC Y	BWYIE	ļ	ļ	
25951		-							-		ļ		-	ļ	-	-	ļ	ļ	ļ	Ļ -	 	ļ	-		
25952	ļ	├	<u> </u>	ļ	 		├	<u> </u>	-		ļ	ļ	<u> </u>						<u> </u>			ļ	 	1	
25960	<u> </u>				├─-		ļ	↓	 	ļ	├		ļ	<u> </u>	 	ļ	-	<u> </u>	 		ļ		ļ	ļ	-
25970	-		├		-		├─	├		<u> </u>	<u> </u>	├ -			 		ļ	-	ļ	-		ļ		ļ	
25980		-	-		<u> </u>		-	├	├	 	├	 	ļ	<u> </u>	<u> </u>	 -	-		 	-		-	 		ļ
25981		-	-				<u> </u>		├	<u> </u>	 			ļ	<u> </u>	↓	<u> </u>				<u> </u>		ļ	ļ	
25982	ļ	-				 - -	-	-				 -	 	· 	-		-		<u> </u>	<u> </u>	-	L			
25983		-					 	 	 		<u> </u>		├	-	-	CIN			 -			VC	 		L
25984	E					<u> </u>	-	├			ļ	<u> </u>	 	<u> </u>	<u> </u>	CN	ļ	Ϋ́ΥL		-	ļ	IN QYL	L		
25990				 -	-		 		-		-	-	-	-	-	-	faland	-	 	-					
		 -					├	-	-	ļ		 -	-	<u> </u>	ļ	<u> </u>		<u> </u>	_	ļ	<u> </u>	ļ		ļ	
21140						-	-	 				-	₩-	 -		├	Ь	<u> </u>	<u> </u>	 -	<u> </u>		ļ		<u> </u>
21460		 							 -		-		-	-	-		Lock	<u> </u>	<u></u>	<u> </u>	-		<u> </u>		├ ─
21500	ļ					-	 	-	 				-		<u> </u>	<u> </u>	locat Lock	ion Lock	ļ			Lock		ļ	
21990		Design			Side	Surfa	ce -			ļ	Rows	of	Curb	_			disch	disch	Proto	 		gates		-	
22240	Outle	head	-			prote	tion	-	-		pilin	<u> </u>	Curb on stll	Lock	Ou1-	Chano	ne		type		Fixed	Ř.	 	ļ	Abut-
22800	condu	it			 	ļ <u> </u>	Bound	irv				ļ		site	verts Culv	weir Flow		<u> </u>		<u> </u>	skim	vetrs Model	ļ	Lock	Abut- ment con- daits
22990						 -	Bound layer	trip_		ļ			ļ	_	valve Leaf	lock	-		<u> </u>		<u> </u>	scale Flap		gates	Pifly
23700							ļ						ļ	ļ	chamb	er	<u> </u>		<u> </u>			gate	 		va: ve
23990			L							 		ļ			Syste: opera	tion		ļ.—	Loose		<u> </u>	Peirr	Ļ	ļ	
24250		 	-			-	-				<u> </u>					<u> </u>	<u> </u>		slabs		<u> </u>	Poirre dam s	1::		<u> </u>
24330 24430									-				-				-		 		<u> </u>	-	ļ	<u> </u>	
24530					-							-		-					-		<u> </u>	<u> </u>	ļ		
24530 24630						<u> </u>							<u> </u>	<u> </u>					ļ	<u> </u>	<u> </u>	ļ	<u> </u>		
24630 24760		 									<u> </u>	<u> </u>				-						:		!	
							Bound	ary			 						<u> </u>	-	ļ	ļ	<u> </u>	<u> </u>	<u> </u>		
24990	<u> </u>					 	layer								-	C.10	Lock		Frotu-	ļ	Train	ne			
25140			<u> </u>			Gabi-	ļ				<u> </u>	ļ	ļ			ioch Str	locat	nci	ty jee	<u> </u>	walls				<u> </u>
25360						ons	<u> </u>								<u> </u>	luck :	wall		ļ		L		<u> </u>	Eridge	·
25400	Protot	ype												-		exten Flow thru		Lock		<u> </u>		Loc k		piers	-
23990	operat	ion Design							<u> </u>				Seepa	ze.		thru lock	Surfac	disch	Intern press	al	 	gates			
X		data															debri		press veloci	a/or ty	<u> </u>				<u> </u>
- 1		·						LJ								L	L	L			L		<u> </u>		<u> </u>

		Á91	A92	A93	A94	A95	A96	A97	A98	A99	B01	B02	B03	BO 4	B05	B06	B07	B 08	B09	810	B11
35)		o in	3	Chanoine Wickets Discharge Coef STP 30	3 Sef	ri in	Roller Cate Stilling Basins STP 36	Sate	App A to STP 13 Roller Gate Coef STP 39	_	Miss R Lab 1 Spillway Apron STP 63	D sin		e0 e0	T-race	Gates	r T-race		Basin	Basin	Gap
	SCT EPOR'	ED 2	LD 7	2 4 C	-54-1 3t C	Bas	ate Bas	rer asin	STP	μD 4 Basi	Apr	1 LE	setes	Pre Pre	-1 P		P. T-	ŗ	es 4 B	le 1 Ba	vrsn
	DAN WEISED AND PROJECT	Miss R L&D 20 Stilling Basin STP 24	R L2 Culy 29	harg 30	۳. تو جا	Miss R L&D 22 Stilling Basin STP 33	19 13 75 75 75 75 75 75 75 75 75 75 75 75 75	Sub Tainter Gate Coef & Basin STP 37	A to er G	2 ° ° ° °	E L	Ct.	Roller Gates Pressures STP 77	evil 14ay 3-1	McNary Cffrdms & ' BHL 20-1	McNary Spillway BHL 21-1	Ice Harbor Cffrdms & ' BHL 22-1	Ice Harbor Spillway BHL 31-1	The Dalles Spillway & BHL 55-1	Bonneville Rev Still B BHL 65-1	John Day Spwy & Dvrsn (BHL 97-1
0 P	DESIGN AND Z	Miss Stil STP	Miss Spwy STP	Chan D1sc	Miss Tainte Tainte STP 3	Stil Stil	Roll Stil	Sub Coef STP	App Roll	Aiss Sate	Miss Spil STP	SAF Lor Thtr G STP 69	Roll Pres	Spt.	McNa Cffr BHL	McNary Spiliwa BHL 21-	ice Cffr BHL	Spil BH	The Dal Spillwa BHL 55-	Bonn Rev BHL	John Spwy BHL
25000 DI	DWNSTREAM CHANNEL (CONT'D)		****																		
25900	Operation			l																	
25910	Pool El					TUVB WIE				TQUVC BWYIE TQUVC BWYIE	TUBW				VCY		UVC YI		2	TUVB WY I E	UVBW YIE
25920	TW E1						TÚ VE	TU VE		TOUVC BUY I E	TQUB WY ER	E			UVC YNL		TUVC	UB WY	Z	TUVB	UVBW YIE
25930	Type Flow						-				W. C. Z.						C	-			
25931	Free/Submerged					TUVB WIE	TE	TVE		TQUB WYE											
25932	Gated/Uncontrolled			-			\vdash			7.5									Z		
25933	Unit Discharge						<u> </u>	<u> </u>													
25940	Gate Schedule						\vdash			QVCY					UVC			UB WY	Z		
25941	Single	-				\vdash	TUB WE			120					LAD						
25942	Multiple						TE														
25943	Location																				
25950	Gate Opening	_			 	TUVB	TU VE	TU VE		TOUVE		E			UVC YNL		TUVC WYSI	UB WY	2	TUVB WY I E	
25951	Uniform					T	<u> </u>			Ĭ							4501			7	
25952	Variable				1		E	_		<u> </u>											
25960	Gate Submergence				-	TUVB WIE	TU VE	TU VE		TQUB WYE		E									
25970	Gate Speed					715	V.E.	12	<u> </u>	715											
25980	Other Factors																				
25981	Ice/Debris		<u> </u>	_			TUV														UE
25982	Loose Barges						OF E														
25983	Waves		-			 	_			1											-
25984	Power Discharge	-					<u> </u>								VC YN		TUVC				
25990	Noted Items										UBW				UV CI		TUCW				
	NOTED ITEMS																				
21140 U	pstream approach channel										1										
<u> </u>	patream approach riprap					· · · · ·	t	1		ļ						_	-		_		
	patream approach misc.	1		†	1	\vdash	<u> </u>	<u> </u>		<u> </u>	f	— —			i						
	pstream approach operation		\vdash		<u> </u>	1	t		-		·							-	_		
	ontrol sill shape	 	-	 	\vdash		1	t		\vdash						_	_				Dvrsn
	Control sill misc.	\dagger	Cul- verts				Gate reces:			Dike spwy	<u> </u>	-				Proto-					Stop- log slots
22990 0	ontrol sill operation		Verca	_		1	reces	†		1000	 			Proto- type		Gate leaf					SIUCS
23700 0	ates & bulkheads misc.	t	—	Wicker gap	t	 		End &	trash				Seal &			Gate slota					
23990	ates & bulkhead operation	†	<u> </u>	Rep	<u> </u>	Water level Inside gate		Water level inside			· · · ·		creare	Proto- type		Gate leaf					
-	Still basin apren	 	-	 		gate	1	inside gate	\Box	Profi				-7.P.						Bucket	1
	till basin end sill	1	\vdash	1		1	\vdash			Terrebe	Τ						1			<u> </u>	
	till basin baffles	 		1			\vdash	T^{-}	T	†	I^{-}	T				Proto	1		T	T	
<u> </u>	till basin pier ext	†	1		1	-	<u> </u>	-	\vdash	†						TYPE.			1		
	Still basin tr walls	 	\vdash	<u> </u>		1		t^-	_	†				_	Pish ladder	ļ	Fish ladder	Fish	†	1	
<u> </u>	till basin riprap	1	t	†	T	1	T			1	\vdash			\vdash	Ladue	1	Laudel		T		
	till basin operation		1		1	+		<u> </u>		+-	Proto	<u> </u>				Gate leaf		1	†		
	ownstream channel geometry	 	 	_	 			 	<u> </u>	T	type			 -	Tail- race	Tear	Tail- race	 	_		T^-
	Ownstream channel riprap	†		 	+	†	-	<u> </u>	 	t	1		_		race	\vdash	Larce	†	 		†
<u> </u>	ownstream channel misc.	<u> </u>	\vdash	†	1	 	T	f	 	1	+	<u> </u>	t —	<u> </u>	Pump	<u> </u>	Lock		1	t	1
⊢—	ownstream channel operation	 	+	+	+-	\vdash	+	+	\dagger	\vdash	\vdash	 			intake Pump	\vdash	Lock		†	T^{-}	<u> </u>
_	HER TYPES OF DATA	Hydr locati dept	jumap ion	Leaks	ge .	+	+	+	Leaka	ge	T	Alr de- mand	Water level inside	Proto	flow type	—	operat	Debri:	Debris Das- Bage	Proto	type ation
<u> </u>		de pi	th	+	+	+	+-	+-	+	+	+-	mand	inside gate	profi	۳-	+	 	Desin	mage	Cavit	

	B12	T B13	R) 4	915	B16	B17	B18	B19	B20	B21			_						_						
36	in in	5		σ.	S.	2	2																		
l	Bas	a g	8	19 E	Forc	2	2	astn	Spery	ents	1					1									
1	a s	۔ ﴿ قُ	a E	الم في	Gate ⊓g	e Pre	Pier	S RO R EG	11 -9 F	E L						1					1			į	
	1 1 2	1 2 2	136 136	887 84.89	rati C3	rie Fie B57	Tevi 360	salo 11in	1 ipo	11 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5										ŀ	1				
	50 E	Little Goose Spillway & Basin E BHL 114-1	Bon Gat, BHL	Spirit	MIC Ope CIT	Blue Barri CIT	Bonneville Baffle Pier Cav CIT 86C	Sti CIT	Gallipolis Channel & Spwy CIT G35F	12 P 5									i						
25000																									
25900																									
25910		U VBW		VC.				UVY	_	VC				_											
25920	_	QUVB NY IE		EN VC EN			<u> </u>	IE UVY	 	VC NX VC NX												_			
25930	-	MAIR		EN				IE	-	NX	<u> </u>	-		_	_			 				-			_
}			ļ		L	-	<u> </u>	_		<u> </u>		<u> </u>	<u>-</u>			-		ļ			<u> </u>				
25931		 -							<u> </u>						<u> </u>	-			-						
25932	ļ		<u> </u>				<u> </u>		L		L		l			 									
25933	<u> </u>								ļ							L									
25940										VC HX															
25941																									
25942	L															[
25943																									
25950	<u> </u>	UVBW YIE								VC NX				_		t –				\vdash	\vdash				
25951		116				 		 	 	MA.	\vdash						-		<u> </u>		ļ				
25952			L			\vdash	-	<u> </u>	\vdash	 		 				 				 	\vdash	-	<u> </u>		
25960	 	 		-						-						├─			-		 				
25970	 		ļ <u>.</u>	 -		├			<u> </u>		 -	ļ	 -			├		ļ	 		\vdash				L
	 	_		<u> </u>		 -	<u> </u>			L	ļ					 			ļ		<u> </u>				
25980		<u> </u>			L.,		ļ				<u> </u>		ļ		L	<u> </u>			ļ		<u> </u>				
25981											L		<u> </u>			<u> </u>	l				L				
25982							<u></u>														l				
25983	<u></u>																								
25984		UBM.								VC NX															
25990																									
															_	1									
21140	_			 					Cells	 -	 					\vdash		<u> </u>			\vdash				
21460	_	-		-									 	<u> </u>		-					ļ				
21500		Abut- ment									 -		-		_	 —		<u> </u>			├				
\vdash	├	ment		_		-	<u> </u>	ļ		 	 		ļ			<u> </u>			ļ <u>.</u>	-	 				
21990	<u> </u>	ļ					├—		-	-	<u> </u>			<u> </u>		<u> </u>	<u> </u>		ļ	<u> </u>	<u> </u>				
22240	Abut-	<u> </u>	Bridas	Abute	nt -	<u> </u>	Gato	<u> </u>	ļ	ļ	<u> </u>	<u> </u>	 	L	ļ	<u> </u>	ļ	L	<u> </u>		<u> </u>	ļ			
22800	ments	ļ	Bridge Cleer-	vall	-	L	Gate Slots			ļ	L		ļ	<u> </u>		L		<u> </u>	L		L_		L		
22990	<u> </u>	Ļ		L		L				ļ	L	L				L	<u>L</u>	<u> </u>	ļ		<u> </u>				
23700	<u> </u>				Tripp: action	ng										<u> </u>									
23990	L			L	L_	<u> </u>															l _ ¯				
24250						l															I				
24330		Bucket teeth				T					Γ -														
24430						l					T					T		l —			l				
24530	†	 	 -			 	 		 	 			 								 				
24630	 	<u> </u>		 		 	 		 -	 	 				 	├					 -	 			
24760	\vdash	 		<u> </u>		╁	 	 	 	 	 	 		-	-		-			-	 	-			
	₩			-	<u> </u>	Vacuum	Vacuum				 		 			 					├─-	-			
24990	<u> </u>	ļ		 		test	Vacuum test	<u> </u>		<u> </u>	<u> </u>	<u> </u>	<u> </u>					<u> </u>	ļ		├		<u> </u>		
25140	_	 		-	L	<u> </u>	├	<u> </u>	 	ļ	<u> </u>	ļ			ļ	 		-	ļ	ļ	ļ	L			
25360	<u> </u>	<u> </u>	L	L		<u> </u>	<u> </u>				<u>L</u>			L		<u> </u>	<u> </u>	L	L		<u> </u>	<u> </u>			
25400	<u> </u>									<u> </u>						L					<u></u>				
25990		$oxed{oxed}$								1															
x			Debris			Cavi- tation	Cavi- tation			Proto data															
	Γ																								
									-																

BIBLIOGRAPHY TO APPENDIX C

- A01. US Army Engineer Waterways Experiment Station. 1936. "Model Studies of the Spillway and Stilling Basin for the Possum Kingdom Dam and Plates,"
 Technical Memoranda 111-1, Vicksburg, Miss.
- A02. US Army Engineer Waterways Experiment Station. 1936. "Additional Model Studies of the Stilling Basin for the Possum Kingdom Dam and Plates,"

 Technical Memoranda 111-2, Vicksburg, Miss.
- A03. US Army Engineer Waterways Experiment Station. 1937. "Model Study of Baffles for the Spillway Apron of the Possum Kingdom Dam and Plates,"
 Technical Memoranda 111-3, Vicksburg, Miss.
- A04. US Army Engineer Waterways Experiment Station. 1939. "Model Study of the Spillway for New Lock and Dam No. 1, St. Lucie Canal, Florida," Technical Memoranda 153-1, Vicksburg, Miss.
- A05. US Army Engineer Waterways Experiment Station. 1940. "Model Study of the Spillway for the Santee River Dam," Technical Memoranda 168-1, Vicksburg, Miss.
- A06. US Army Engineer Waterways Experiment Station. 1942. "Model Studies of the Spillway and Integral Sluices for the Canton Dam, North Canadian River, Oklahoma," Technical Memoranda 290-2, Vicksburg, Miss.
- A07. US Army Engineer Waterways Experiment Station. 1948. "A Laboratory Development of Cavitation-Free Baffle Piers, Bluestone Dam, New River, West Virginia," Technical Memoranda 2-243, Vicksburg, Miss.
- A08. US Army Engineer Waterways Experiment Station. 1948. "Spillway and Lock Approach Currents, Demopolis Lock and Dam, Tombigbee River, Alabama; Model Investigation," Technical Memoranda 2-252, Vicksburg, Miss.
- A09. US Army Engineer Waterways Experiment Station. 1951. "Morganza Floodway Control Structure, Mississippi River; Hydraulic Model Investigation," Technical Memoranda 2-326, Vicksburg, Miss.
- A10. US Army Engineer Waterways Experiment Station. 1952. "Spillway and Lock Approach, Jim Woodruff Dam, Apalachicola River, Florida; Model Investigation," Technical Memoranda 2-340, Vicksburg Miss.
- All. US Army Engineer Waterways Experiment Station. 1953. "Upstream Emergency Dam, Cheatham Lock, Cumberland River, Tennessee; Hydraulic Model Investigation," Technical Memoranda 2-358, Vicksburg, Miss.
- Al2. US Army Engineer Waterways Experiment Station. 1954. "Submergible-type Tainter Gate for Spillway, Cheatham Lock and Dam, Cumberland River, Tennessee; Hydraulic Model Investigation, Technical Memoranda 2-381, Vicksburg, Miss.

- Al3. US Army Engineer Waterways Experiment Station. 1954. "Spillway for New Cumberland Dam, Ohio River, West Virginia; Hydraulic Model Investigation," Technical Memoranda 2-386, Vicksburg, Miss.
- Al4. US Army Engineer Waterways Experiment Station. 1955. "Spillway for Gavins Point Dam, Missouri River, Nebraska; Hydraulic Model Investigation," Technical Memoranda 2-404, Vicksburg, Miss.
- Al5. US Army Engineer Waterways Experiment Station. 1956. "Old River Low-Sill Control Structure; Hydraulic Model Investigation: Report 1, Downpull Forces on Vertical-Lift Gates," Technical Report 2-447/1, Vicksburg, Miss.
- Al6. US Army Engineer Waterways Experiment Station. 1957. "Old River Low-Sill Control Structure; Hydraulic Model Investigation: Report 2, Studies of Riprap Placement Plans, " Technical Report 2-447/2, Vicksburg, Miss.
- Al7. US Army Engineer Waterways Experiment Station. 1959. "Old River Low-Sill Control Structure; Hydraulic Model Investigation: Report 3, Study of Over-all Performance," Technical Report 2-447/3, Vicksburg, Miss.
- Al8. US Army Engineer Waterways Experiment Station. 1958. "Stilling Basin for Warrior Dam, Warrior River, Alabama; Hydraulic Model Investigation," Technical Report 2-485, Vicksburg, Miss.
- Al9. US Army Engineer Waterways Experiment Station. 1959. "Old River Overbank Structure, Forces on Panel Gates; Hydraulic Model Investigation," Technical Report 2-491, Vicksburg, Miss.
- A20. US Army Engineer Waterways Experiment Station. 1959. "Old River Project; Rock-Fill Initial Closure Dam; Hydraulic Model Investigation," Technical Report 2-496, Vicksburg, Miss.
- A21. US Army Engineer Waterways Experiment Station. 1959. "Walter F. George Lock and Dam, Chattahoochee River, Alabama and Georgia; Hydraulic Model Investigation," Technical Report 2-519, Vicksburg, Miss.
- A22. US Army Engineer Waterways Experiment Station. 1960. "Spillways and Stilling Basins, Jackson Dam, Tombigbee River, Alabama; Hydraulic Model Investigation," Technical Report 2-531, Vicksburg, Miss.
- A23. US Army Engineer Waterways Experiment Station. 1960. "Dardanelle Lock and Dam, Arkansas River, Arkansas; Hydraulic Model Investigation,"
 Technical Report 2-558, Vicksburg, Miss.
- A24. US Army Engineer Waterways Experiment Station. 1961. Spillway for Markland Locks and Dam, Ohio River, Kentucky and Indiana; Hydraulic Model Investigation, Technical Report 2-566, Vicksburg, Miss.

- A25. US Army Engineer Waterways Experiment Station. 1961. "Spillway, Greenup Locks and Dam, Ohio River, Kentucky and Indiana; Hydraulic Model Investigation," Technical Report 2-572, Vicksburg, Miss.
- A26. US Army Engineer Waterways Experiment Station. 1961. "Spillway and Stilling Basin, Columbia Dam, Chattahoochee River, Alabama and Georgia; Hydraulic Model Investigation," Technical Report 2-578, Vicksburg, Miss.
- A27. US Army Engineer Waterways Experiment Station. 1961. "Spillway Stilling Basins for Maxwell and Opekiska Locks and Dams, Monongahela River, Pennsylvania and West Virginia; Hydraulic Model Investigation," Technical Report 2-579, Vicksburg, Miss.
- A28. US Army Engineer Waterways Experiment Station. 1961. "Spillway for New Cumberland Locks and Dam (Final Design), Ohio River, West Virginia; Hydraulic Model Investigation," Technical Report 2-585, Vicksburg, Miss.
- A29. US Army Engineer Waterways Experiment Station. 1961. "Spillway Stilling Basin for Pike Island Locks and Dam, Ohio River, Ohio and West Virginia; Hydraulic Model Investigation," Technical Report 2-586, Vicksburg, Miss.
- A30. US Army Engineer Waterways Experiment Station. 1963. "Typical Spillway Structure for Central and Southern Florida Water-Control Project; Hydraulic Model Investigation," Technical Report 2-633, Vicksburg, Miss.
- A31. US Army Engineer Waterways Experiment Station. 1964. "Spillway, Millers Ferry Lock and Dam, Alabama River, Alabama; Hydraulic Model Investigation," Technical Report 2-643, Vicksburg, Miss.
- A32. US Army Engineer Waterways Experiment Station. 1964. "Spillway for Proctor Dam, Leon River, Texas; Hydraulic Model Investigation," Technical Report 2-645, Vicksburg, Miss.
- A33. US Army Engineer Waterways Experiment Station. 1964. "Stability of Riprap and Discharge Characteristics, Overflow Embankments, Arkansas River, Arkansas; Hydraulic Model Investigation, Technical Report 2-650, Vicksburg, Miss.
- A34. Grace, J. L. 1964. "Spillway for Typical Low-Head Navigation Dam, Arkansas River, Arkansas; Hydraulic Model Investigation," Appendix A: "Gate Sills and Stilling Basins for Locks and Dams Nos. 5 and 7; Hydraulic Model Investigation," by R. S. Cummins and J. L. Grace. Technical Report 2-655, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A35. Melsheimer, E. S., and Rooke, A. D. 1964. "Spillway for Oahe Dam, Missouri River, South Dakota; Hydraulic Model Investigation," Technical Report 2-657, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.

- A36. Pickering, G. A. 1965. "Spillway for Belleville Locks and Dam, Ohio River, Ohio and West Virginia; Hydraulic Model Investigation," Technical Report 2-687, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A37. Murphy, T. E., and Cummins, R. S. 1965. "Tests of Structure Orientation, Spillway, and Lock Emergency Gate, Barkley Lock and Dam, Cumberland River, Kentucky; Hydraulic Model Investigation," Technical Report 2-689, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A38. Grace, J. L., and Pickering, G. A. 1965. "Spillway for Cannelton Locks and Dam, Ohio River," Technical Report 2-710, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A39. Pickering, G. A. 1966. "Spillway, Hannibal Locks and Dam, Ohio River, Ohio and West Virginia; Hydraulic Model Investigation," Technical Report 2-731, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A40. Melsheimer, E. S., and Murphy, T. E. 1966. "Spillway and Navigation Conditions, Holt Lock and Dam, Warrior River, Alabama; Hydraulic Model Investigation," Technical Report 2-745, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A41. Fletcher, B. P., and Grace, J. L. 1969. "Spillway for Hugo Dam, Kiamichi River, Oklahoma; Hydraulic Model Investigation," Technical Report H-69-15, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A42. Fletcher, B. P. 1970. "Spillway for Copan Dam, Little Caney River, Oklahoma; Hydraulic Model Investigation," Technical Report H-70-9, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A43. Melsheimer, E. S. 1970. "Spillway for Oakley Dam, Sangamon River, Illinois; Hydraulic Model Investigation," Appendix A: "Type 2 (Revised) Spillway; Hydraulic Model Investigation," Technical Report H-70-13, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A44. Pickering, G. A. 1971. "Spillway Gate Vibrations on Arkansas River Dams, Arkansas and Oklahoma; Hydraulic Model Investigation," Technical Report H-71-5, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A45. Oswalt, N. R., and Pickering, G. A. 1973. "Spillway for Lock and Dam 26, Mississippi River, Missouri and Illinois; Hydraulic Model Investigation," Technical Report H-73-15, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A46. Oswalt, N. R. 1974. "Spillway for Aliceville Lock and Dam, Tombigbee River, Alabama; Hydraulic Model Investigation," Technical Report H-74-10, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.

- A47. Oswalt, N. R., and Pickering, G. A. 1974. "Spillway for Columbus Lock and Dam, Tombigbee River, Alabama; Hydraulic Model Investigation,"

 Technical Report H-74-13, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A48. Neilson, F. M., and Tool, A. R. 1976,. "Prototype Tests, Old River Low-Sill Control Structure, April 1973-June 1975," Technical Report H-76-15, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A49. Rothwell, E. D., and Grace, J. L., Jr. 1977. "Old River Existing Low-Sill Control Structure, Louisiana; Hydraulic Model Investigation,'*
 Technical Report H-77-2, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A50. Pugh, C. A. 1977. "Spillway Vibration, Pressure, and Velocity Measurements, Ozark Lock and Dam, Arkansas River, Arkansas," Technical Report H-77-6, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A51. Oswalt, N. R. 1977. "Red River Waterway, La., Tex., Ark., and Okla., Mississippi River to Shreveport, La., Reach, Lock and Dam No. 1; Hydraulic Model Investigation, Technical Report H-77-13, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A52. Fletcher, B. P. 1978. "Typical Tennessee-Tombigbee Canal Section Spillways A and B; Hydraulic Model Investigation," Technical Report H-78-21, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A53. Hart, E. D., and Hite, J. E., Jr. 1979. "Prototype Gate Vibration Tests, Barkley Dam, Cumberland River, Kentucky," Technical Report HL-79-8, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A54. Rothwell, E. D., Oswalt, N. R., and Maynord, S. T. 1981. "Grays Landing Spillway and Stilling Basin, Monongahela River, Pennsylvania; Hydraulic Model Investigation, "Technical Report HL-81-13, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A55. Hite, J. E., Jr., and Pickering, G. A. 1983. "Barkley Dam Spillway Tainter Gate and Emergency Bulkheads, Cumberland River, Kentucky; Hydraulic Model Investigation," Technical Report HL-83-12, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A56. US Army Engineer Waterways Experiment Station. 1956. "Cavitation at Baffle Piers," Miscellaneous Paper 2-154, Vicksburg, Miss.
- A57. US Army Engineer Waterways Experiment Station. 1961. "Swellhead Effect of Navigation Structures," Miscellaneous Paper 2-468, Vicksburg, Miss.
- A58. US Army Engineer Waterways Experiment Station. 1962. "Fluctuation of Control Gates," Miscellaneous Paper 2-484, Vicksburg, Miss.

- A59. US Army Engineer Waterways Experiment Station. 1963. "Riprap Requirements for Overflow Embankments," Miscellaneous Paper 2-552, Vicksburg, Miss.
- A60. US Army Engineer Waterways Experiment Station. 1963. "Discharge Rating Curves for Vertical Lift Gates on Spillway Crests," Miscellaneous Paper 2-606, Vicksburg, Miss.
- A61. US Army Engineer Waterways Experiment Station. 1964. "An Investigation of Spillway Bucket and Toe Curve Pressures," Miscellaneous Paper 2-625, Vicksburg, Miss.
- A62. Grace, J. L. 1966. "Adequacy of Submerged Rock Weirs to Withstand Propeller Wash, St. Clair River, Michigan; Hydraulic Model Investigation," Miscellaneous Paper 2-821, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A63. Oswalt, N. R. 1968. "Riprap Protection for Subimpoundment Dams, Rend Lake Reservoir, Illinois; Hydraulic Model Investigation," Miscellaneous Paper H-68-1, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A64. Basco, D. R. 1969. "Trends in Baffled, Hydraulic Jump, Stilling Basin Designs of the Corps of Engineers Since 1947," Miscellaneous Paper H-69-1, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A65. Basco, D. R. 1970. "An Experimental Study of Drag Force and Other Performance Criteria of Baffle Blocks in Hydraulic Jumps," Miscellaneous Paper H-70-4, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A66. Murphy, T. E. 1971. "Control of Scour at Hydraulic Structures," Miscellaneous Paper H-71-5, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A67. Cox, R. G. 1972. "Pertinent Data on Spillway Tainter Gates for Corps of Engineers Projects," Miscellaneous Paper H-72-7, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A68. Cox, R. G. 1973. "Spillway Water-Surface Profiles," Miscellaneous Paper H-73-4, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A69. Murphy, T. E. 1973. "Spillway Crest Design," Miscellaneous Paper H-73-5, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A70. Neilson, F. M. 1976. "Convex Chutes in Converging Supercritical Flow,*' Miscellaneous Paper H-76-19, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.

- A71. Copeland, R. R. 1980. "Old River Overbank Structure Outlet Modifications; Hydraulic Model Investigation," Miscellaneous Paper HL-80-5, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A72. Lecher, F. A. 1971. "Some Characteristics of Pressure Fluctuations on Low-Ogee Crest Spillways Relevant to Flow-Induced Structural Vibrations," Contract Report H-71-1, US Army Engineer Waterways Experiment Station, Vicksburg, Miss.
- A73. US Army Engineer Waterways Experiment Station. 1931. "Hydraulic Studies of Proposed Dam No. 37, Ohio River, Paper D, Vicksburg, Miss.
- A74. US Army Engineer Waterways Experiment Station. 1931. "Experiments to Determine the Erosive Effects of Floodwaters on Railroad Embankments," Paper R, Vicksburg, Miss.
- A75. US Army Engineer Waterways Experiment Station. 1933. "Model Studies of Spillways for St. Lucie Canal, Martin County, Florida," Paper 14, Vicksburg, Miss.
- A76 US Army Engineer Waterways Experiment Station. 1934. "Experiments to Determine the Backwater Effects of Submerged Sills in the St. Clair River, Paper 16, Vicksburg, Miss.
- A77. Nelson, M. E. 1932. "Laboratory Tests on Hydraulic Models of the Hastings Dam," Report No. 1, US Army Engineer District, St. Paul, St. Paul, Minn.
- A78. US Army Engineer District, St. Paul. 1934. "Preliminary Report, Laboratory Tests on Hydraulic Models of Sand Dams, 1/5th Size Model," Hydraulic Laboratory Report No. 2, St. Paul, Minn.
- A79. US Army Engineer District, St. Paul. 1932. "Laboratory Tests on Hydraulic Model of Proposed Lock and Dam No. 2, Kiskiminitas River," Hydraulic Laboratory Report No. 3, St. Paul, Minn.
- A80. US Army Engineer District, St. Paul. 1932. "Laboratory Tests on Hydraulic Model of Beartrap Dam, Ohio River Type," Hydraulic Laboratory Report No. 4, St. Paul, Minn.
- A81. US Army Engineer District, St. Paul. 1932. "Laboratory Tests on Hydraulic Models of Marmet Lock and Dam, Kanawha River," Hydraulic Laboratory Report No. 5, St. Paul, Minn.
- A82. US Army Engineer District, St. Paul. 1934. "Final Report on Laboratory Tests on Hydraulic Models of Lock and Dam No. 15, Mississippi River," Hydraulic Laboratory Report No. 7, St. Paul, Minn.
- A83. US Army Engineer District, St. Paul. 1935. "Final Report on Laboratory Tests on Hydraulic Models of Lock and Dam No. 15, Mississippi River, Appendix A: Comparison of Model to Prototype," Hydraulic Laboratory Report No. 9, St. Paul, Minn.

- A84. US Army Engineer District, St. Paul. 1936. "Final Report, Laboratory Tests on Hydraulic Models of New Lock and Dam No. 4, Monongahela River, Charleroi, Pennsylvania, "Hydraulic Laboratory Report No. 12, St. Paul, Minn.
- A85. US Army Engineer District, St. Paul. 1936. "Final Report, Laboratory Tests on Hydraulic Models to Determine Roller Gate Coefficients,"
 Hydraulic Laboratory Report No. 13, St. Paul, Minn.
- A86. US Army Engineer District, St. Paul. 1936. "Final Report, Laboratory Tests on Hydraulic Model of Montgomery Island Lock and Dam, Ohio River, Near Industry, Ohio," Hydraulic Laboratory Report No. 14, St. Paul, Minn.
- A87. US Army Engineer District, St. Paul. 1936. "Final Report, Laboratory Tests on Hydraulic Models of Winfield Lock and Dam, Kanawha River, Winfield, West Virginia," Hydraulic Laboratory Report No. 15, St. Paul, Minn.
- A88. US Army Engineer District, St. Paul. 1937. "Final Report, Laboratory Tests on Hydraulic Models to Determine Roller Gate Coefficients for Dams No. 5, 5A, and 8, Mississippi River, Hydraulic Laboratory Report No. 17, St. Paul, Minn.
- A89. US Army Engineer District, St. Paul. 1937. "Final Report, Laboratory Tests on Hydraulic Models of Lock and Dam No. 26, Mississippi River, Alton, Illinois," Hydraulic Laboratory Report No. 20, St. Paul, Minn.
- A90. US Army Engineer District, St. Paul. 1937. "Final Report, Laboratory Tests on Hydraulic Models of Peoria and La Grange Dams, Illinois River, Peoria and La Grange, Illinois, Hydraulic Laboratory Report No. 23, St. Paul, Minn.
- A91. US Army Engineer District, St. Paul. 1937. "Final Report, Laboratory Tests on Hydraulic Model of Lock and Dam No. 20, Mississippi River, Canton, Missouri," Hydraulic Laboratory Report No. 24, St. Paul, Minn.
- A92. US Army Engineer District, St. Paul. 1938. "Final Report, Laboratory Tests on Hydraulic Models of Lock and Dam No. 7, Mississippi River, Onalaska Spillway, "Hydraulic Laboratory, Report No. 29, St. Paul, Minn.
- A93. US Army Engineer District, St. Paul. 1938. "Final Report, Laboratory Tests on Hydraulic Models to Determine Discharge Through Chanoine Wicket Dams," Hydraulic Laboratory Report No. 30, St. Paul, Minn.
- A94. US Army Engineer District, St. Paul. 1938. "Final Report, Laboratory Tests on Hydraulic Models to Determine Tainter Gate Coefficients for Dams No. 5, 5A, and 8, Mississippi River, " Hydraulic Laboratory Report No. 31, St. Paul, Minn.

- A95. US Army Engineer District, St. Paul. 1939. "Final Report, Laboratory Tests on Hydraulic Model of Lock and Dam No. 22, Mississippi River, Hannibal, Missouri, Hydraulic Laboratory Report No. 33, St, Paul, Minn.
- A96. US Army Engineer District, St. Paul. 1939. "Final Report, Laboratory Tests on Hydraulic Models of Roller Gate Stilling Basins," Hydraulic Laboratory Report No. 36, St. Paul, Minn.
- A97. US Army Engineer District, St. Paul. 1939. "Final Report, Laboratory Tests on Hydraulic Models of Submergible Tainter Gates," Hydraulic Laboratory Report No. 37, St. Paul, Minn.
- A98. US Army Engineer District, St. Paul. 1940. "Laboratory Tests on Hydraulic Model to Determine Roller Gate Coefficients, Appendix A," Hydraulic Laboratory Report No. 39, St. Paul, Minn.
- A99. US Army Engineer District, St. Paul. 1948. "Final Report, Laboratory Tests on Hydraulic Models of Lock and Dam No. 4, Mississippi River," Hydraulic Laboratory Report No. 53, St. Paul, Minn.
- B01. US Army Engineer District, St. Paul. 1959. "Final Report, Laboratory Tests on Hydraulic Model of Spillway Apron for Dam No. 1, Mississippi River," Hydraulic Laboratory Report No. 63, St. Paul, Minn.
- B02. US Army Engineer District, St. Paul. 1960. "Lower Lock and Dam Tainter Gates, St. Anthony Falls Upper Harbor Project, Mississippi River, Minneapolis, Minnesota; Hydraulic Model Investigation," Hydraulic Laboratory Report No. 69, St. Paul, Minn.
- B03. US Army Engineer District, St. Paul. 1963. "A Study of Water Pressures on Roller Gates; Hydraulic Model Investigation," Hydraulic Laboratory Report No. 77, St. Paul, Minn.
- B04. Bonneville Hydraulic Laboratory. 1941. "Spillway Pressure Head Investigation, Bonneville Spillway Dam, Bonneville, Oregon," Technical Report No. 3-1, Bonneville, Ore.
- B05. Bonneville Hydraulic Laboratory. 1956. "McNary Dam, Columbia River, Oregon & Washington; Hydraulic Model Investigation," Technical Report No. 20-1, Bonneville, Ore.
- B06. Bonneville Hydraulic Laboratory. 1961. "Spillway and Stilling Basin for McNary Dam, Columbia River, Oregon & Washington; Hydraulic Model Investigations," Technical Report No. 21-1, Bonneville, Ore.
- B07. Perkins, L. Z. 1973. "Ice Harbor Dam, Snake River, Washington; Hydraulic Model Investigation," Technical Report No. 22-1, Division Hydraulic Laboratory, US Army Engineer Division, North Pacific, Bonneville, Ore.

- B08. US Army Engineer Division, North Pacific. 1965. "Spillway and Stilling Basin for Ice Harbor Dam, Snake River, Washington; Hydraulic Model Investigation," Technical Report No. 31-1, Division Hydraulic Laboratory, Bonneville, Ore.
- B09. US Army Engineer Division, North Pacific. 1964. "Spillway and Stilling Basin for the Dalles Dam, Columbia River, Oregon and Washington,"

 Technical Report No. 55-1, Division Hydraulic Laboratory, Bonneville,
 Ore.
- B10. Bonneville Hydraulic Laboratory. 1958. "Revised Stilling Basin, Bonneville Dam, Columbia River, Oregon & Washington; Hydraulic Model Investigation," Technical Report No. 65-1, Bonneville, Ore.
- B11. US Army Engineer Division, North Pacific. 1974. "Spillway and Stilling Basin, John Day Dam, Columbia River, Oregon and Washington; Hydraulic Model Investigation," Technical Report No. 97-1, Division Hydraulic Laboratory, Bonneville, Ore.
- B12. US Army Engineer Division, North Pacific. 1967. "Spillway and Stilling Basin, Lower Monumental Dam, Snake River, Washington; Hydraulic Model Investigation," Technical Report No. 104-1, Division Hydraulic Laboratory, Bonneville, Ore.
- B13. Johnson, R. L., and Perkins, L. Z. 1975. "Spillway for Little Goose Dam, Snake River, Washington; Hydraulic Model Investigation," Technical Report No. 114-1, Division Hydraulic Laboratory, US Army Engineer Division, North Pacific, Bonneville, Ore.
- Bl4. Edmister, T. D., and Smith, P. M. 1975. "Spillway Gate Modification, Bonneville Dam, Columbia River, Oregon and Washington; Hydraulic Model Investigation," Technical Report No. 136-1, Division Hydraulic Laboratory, US Army Engineer Division, North Pacific, Bonneville, Ore.
- B15. Carnegie Institute of Technology. 1937. "Report on Hydraulic Model Tests of Lock and Dam No. 9, Allegheny River Near Rimerton, Pennsylvania," Hydraulic Research Laboratory, Pittsburgh, Pa.
- B16. Carnegie Institute of Technology. 1941. "A Report on Hydraulic Model Tests of Power-Operated Wicket in Connection with Ohio River Replacement Study," Hydraulic Research Laboratory, Pittsburgh, Pa.
- B17. Carnegie Institute of Technology. 1942. "A Report on Model Studies on Cavitation, Bluestone Dam, New River, Hinton, W. Va.," Hydraulic Research Laboratory, Pittsburgh, Pa.
- B18. Carnegie Institute of Technology. 1943. "Report on Model Studies on Cavitation, Bonneville Dam, Bonneville, Oregon," Hydraulic Research Laboratory, Pittsburgh, Pa.

- B19. Thomas, H. A., and Schuleen, E. P. 1936." Warrior River, Tuscaloosa Lock and Dam, Report on Hydraulic Model Tests," Carnegie Institute of Technology and US Engineer Office, Pittsburgh, Pa.
- B20. US Army Engineer District, Huntington. 1937. "Final Report, Laboratory Tests on Hydraulic Models of Gallipolis Locks and Dam, Ohio River," Huntington, W. Va.
- B21. US Army Engineer District, Huntington. 1939. "Report on Field Checks on Model Tests at Gallipolis Locks & Dam, Ohio River and London Locks & Dam, Kanawha River," Huntington, W. Va.

APPENDIX D

TYPICAL SPILLWAY OPTIMIZATION STUDY

(Red River, Louisiana)

1. $\underline{\text{SCOPE}}$. This appendix summarizes the optimization studies for selection of spillway components. The goal is to select the optimum number of spillway gates and length of overflow dam. The spillway alternatives studied are tabulated in Table D-3.

2. DESIGN GUIDANCE FOR NAVIGATION DAM STRUCTURES.

- a. Plans with Gates Only (No Overflow Dam). These plans provide a T-wall dam extending from last gate pier to nonoverflow embankment dam. Length of T-wall dam is governed by excavation slopes for last spillway gate bay and by location of the riverward end of the nonoverflow embankment dam. The landward end of the T-wall dam must be embedded in the riverward end of the nonoverflow embankment dam. The tops of abutments and T-wall dams must be above the headwater for the project design flood plus wave runup. Provide minimum training wall downstream of last gate bay.
- b. Overflow Dam Plans with Weir 300-, 600-, and 1,200-foot Crest
 Lengths. These plans provide concrete overflow dam from the last gate pier to
 the overflow embankment dam. Length of concrete overflow dam is governed by
 excavation slopes for last spillway gate bay and by the riverward end of the
 overflow embankment dam. The overflow embankment dam was extended landward so
 that total length of concrete overflow plus embankment overflow is 300, 600,
 1,200 feet, or other selected lengths. Easy vertical transition from overflow
 embankment to nonoverflow embankment has been provided. For some instances
 with four, five, and six gate bays, stone will not resist the overflow
 velocities on the downstream edge of the embankment crown, and a concrete
 section must be provided. Minimum training wall downstream of last gate bay
 must be provided.
- c. <u>Spillway Gate Piers.</u> The trunnion anchorage elevation can be the same for all gate arrangements since it is related to tailwater.
- d. <u>Riprap</u>. Riprap that is needed for each dam arrangement must be provided. A complete layout plan for each dam arrangement must be developed.
- e. $\underline{\text{Top of Lock Walls.}}$ The top of lock walls will be eight feet above the normal upper pool for all gate arrangements. This elevation will provide substantially more than two-foot clearance above the headwater for a IO-year flood for all gate arrangements.
- f. <u>Stilling Basins and Gated Weirs.</u> The stilling basin will have the same dimensions in an upstream-downstream direction regardless of the number of gates. The gated crests will also have the same dimensions regardless of the number of bays.

3. FLOWAGE EASEMENTS.

- a. Some of the spillways would raise flood heights above preproject elevations. Assume that flowage easements are required on all lands above the ordinary high-water line on which flood heights are increased.
- b. The channel realignments on this waterway would reduce the overall river length from the mouth of the Black River (1967 mile 34.2) to Shreveport (1967 mile 278) by 48 miles. This shortening will cause a reduction in flood elevations, and the reduction at the Lock and Dam 3 site is estimated to be 2.2 feet. This postproject reduction of 2.2 feet was taken into account when determining whether a given spillway arrangement would raise postproject flood levels above preproject levels. For example, the six-gate, 315-foot-weir spillway would cause a headwater elevation 2.2 feet above postproject tailwater elevation for the project design flood (PDF). However, this spillway would not raise flood heights since the postproject tailwater elevation is estimated to be 2.2 feet below the preproject tailwater elevation.
- c. Table D-2 shows how much various spillway arrangements would raise the PDF (248,600 cfs) above preproject level at the damsite and the land acreages on which the PDF would be raised. The calculations showed that the following spillway arrangements would not raise the PDF above preproject conditions.

Number of Gates	Length of Overflow Dam, feet
4	1,510 and longer
5	935 and longer
6	315 and longer
7	0 and longer
8	0 and longer

- d. It is proposed to acquire flowage easements up to elevation 98, which is three feet above the navigation pool elevation and one foot above the top of the overflow dam. When a postproject discharge reaches this headwater elevation at the damsite, the water-surface profile upstream will be higher than the flowage easement elevation 98 throughout Pool 3. The postproject discharge will be 178,000 cfs when the headwater elevation at the damsite is 98, and this discharge has an average recurrence interval of about 33 years.
- e. The preproject profile for 178,000 cfs was calculated and compared with the postproject profiles for this discharge for the various spillway arrangements. The postproject profiles for the six-, seven-, and eight-bay spillways were equivalent to or lower than the preproject profile. Since the 178,000-cfs discharge would be only about a foot above the top of the overflow dam, the length of overflow dam does not have a significant effect on the headwater elevation. Table D-l shows how much various spillway arrangements would raise the 178,000-cfs discharge above preproject level at the damsite and the land acreages on which this discharge would be raised.
- 4. <u>LEVEE RAISING.</u> The following spillway arrangements would raise the PDF by a foot or more above preproject and would require raising the flood-control levees adjacent to Pool 3 to provide the preproject level of protection.

Number of Bays	Length of Overflow Dam, feet
4	None
4	300
$\frac{4}{4}$	600
$\overline{4}$	1,200
5	None
5	300
5	600
6	None

The entire length of this levee would be raised by the amount of height that the postproject PDF is raised above preproject at the mouth of Saline Bayou. The levees would be raised to the same height above the postproject PDF as they were above the preproject PDF.

5. <u>COMPARATIVE COSTS.</u> Detailed cost estimates were calculated for each of the alternative spillway arrangements using October 1982 price levels. These estimates are summarized in Table D-3.

6. CONCLUSIONS AND RECOMMENDATIONS.

- a. The alternative consisting of a six-bay spillway and 315-foot overflow dam is the least costly considering all costs and is the selected spillway. The lock and dam structure costs for some of the alternatives were less than for the selected plan, but their costs for additional flowage easements and levee raising caused their total costs to be higher.
- b. The recommendations for this site-specific study is to proceed with the alternative consisting of six-bay spillway and 315-foot overflow dam design.

TABLE D-1
Spillway Arrangements That Would Raise 178,000 cfs Above Preproject

Spillway Arrangement		Height of Post- project 178,000	Flowage	Flowage
No. of Bays	Length of Overflow Dam, feet	cfs above Pre- project 178,000 cfs at Damsite feet	Easements Required on Main Stem acres	Easements Required on Tributaries Approx. acres
4 5	All All	2.0	7,000 7,000	6,910 6,910

 $$\operatorname{\textsc{TABLE}}$$ D-2 Spillway Arrangements That Would Raise the PDF Above Preproject

Spillway		Height of	Flowage	Flowage
Arrangement		Postproject	Easements	Easements
	Length of	PDF above Pre-	Required on	Required on
No. of	Overflow	project PDF at	Main Stem	Tributaries
Bays	Dam, feet	Damsite, feet	acres	Approx acres
4	None	5.3	8,500	6,910
4	300	2.8	8,241	6,910
4	600	2.0	8,147	6,910
4	1,200	0.6	7,000	6,910
5	None	2.4	8,273	6,910
5	300	1.2	7,000	6,910
5	600	0.7	7,000	6,910
6	None	1.0	3,328	3,075
6	300	0.2		

TABLE D-3

Comparative Costs

	Length of Overflow Dam, feet	Lock and Dam Structure costs In Dollars	Additional Flowage Easement	Levee Raising cost	Total Comparative
	of Overflow Dam, feet	costs	Easement	_	_
	Dam, feet			COSL	
вауѕ		In Dollars .			cost
	Ο		Rounded to Near	est Tenth of	a MIIIION
4	O	157.6	11.6	24.7	193.9
4	300	154.8	11.4	12.1	178.3
4	600	156.5	11.3	8.0	175.8
4	1,200	158.1	10.4	Min	168.5
4	1,510*	158.9	10.4	Min	169.3
5	0	163.8	11.4	10.8	186.0
5	300	162.0	10.4	4.9	177.3
5	600	162.4	10.4	Min	172.8
5	935**	163.3	10.4	0	173.7
5	1,200	164.5	10.4	0	174.9
6	0	170.0	4.8	3.4	178.2
6	300	168.0	0	0	168.0
6	315†	168.0	0	0	168.0
6	600	168.6	0	0	168.6
6	1,200	170.7	0	0	170.7
7	0	176.3	0	0	176.3
7	300	174.3	0	0	174.3
7	600	175.9	0	0	175.9
7	1,200	179.3	0	0	179.3
8	0	183.8	0	0	183.8
8	300	182.3	0	0	182.3
8	600	183.8	0	0	183.8
8	1,200	187.6	0	0	187.6

- * Structure costs were extrapolated. This alternative would not raise the
- ** Structure costs were interpolated. This alternative would not raise the PDF.
- † This is the selected alternative. It would not raise the PDF. The six-bay spillway and 315-foot overflow dam was selected over the six-bay spillway and 300-foot overflow dam because the latter alternative would raise flood heights slightly above preproject conditions. No additional costs were shown in the table for additional flowage easements and levee raising for this slight rise in flood heights because they would be of questionable accuracy. However, the 315-foot overflow dam has the advantage of not raising flood heights, while the 300-foot overflow dam could be difficult to defend since it will raise flood heights to some extent.