

## Introduction

The HA5023 is a low cost dual amplifier optimized for RGB video applications and gains between 1 and 10. It is a current feedback amplifier; thus it yields less bandwidth degradation at high closed loop gains than voltage feedback amplifiers. The macromodel for the HA5023 is PSPICE (registered trademark of MicroSim Corp.) compatible, and may be compatible with other simulation programs as well. The model file is in ASCII format and may be viewed/edited with any text editor.

All models require a trade-off between accuracy and complexity (simulation time). Intersil's models emulate the nominal performance of a typical device, and are designed to match the typical performance curves in the device data sheet.

SPICE simulations should not be considered a substitute for breadboarding a circuit; rather, they should be used to select preliminary component values and to verify the validity of a design approach.

Do not rely on simulations to predict device performance when deviating from the operating conditions specified in the data sheet (e.g. just because the model works with  $\pm 1V$  supplies, don't assume that the actual amplifier does). Instead, refer to the data sheet performance curves, or call the factory for assistance (321-724-7143).

The HA5023 model is configured as a subcircuit for easy incorporation into larger circuit files. When using PSpice, call a subcircuit from the top level circuit file by adding a .LIB statement to point to the file containing the subcircuit (e.g. .lib c:\models\ha5023.cir), and by including a subcircuit call of the following form:

```
xname  +IN  -IN  V+  V-  OUT  model name
(e.g. x22 101 111 113 114 112  HA5023)
```

Note that the node order in the subcircuit call follows the industry standard, and the order is also documented in the comment section at the beginning of the model file.

## Model Description

The macromodel [1] schematic is shown in Figure 1, and the PSPICE listing for the macromodel follows. The model topology consists of two main functional sections: a buffer between the two input pins, and an output section between the negative input pin and the output pin.

The topology of the input buffer section is a basic four transistor voltage follower. Additional components are added to this structure in order to model the critical characteristics of the actual amplifier. Of these additional components, some are used to model both the slew limiting of the negative input and the fractional step feed-through from the positive input to the negative input. Other elements model the voltage and current limiting of the negative input. The bias current of the positive input and the high frequency voltage gain are also accounted for in the input buffer section model.

The output section is a transimpedance amplifier constructed from four stages: current probe, mid stage, frequency transfer, and output drive. The current probe stage monitors the current through the negative input pin and also models the input offset voltage. The mid stage is used for the bias current of the negative input and for power supply gains. The frequency transfer block consists of two poles and two zeros for modelling the high frequency open-loop transimpedance gain. The output drive stage accounts for several characteristics including: the output slew limits and resulting transimpedance gain bandwidth product, the saturation delay times, and the voltage and current limiting at the output.

In addition to the two main functional sections, smaller constructs and individual components are used to model other important amplifier characteristics. Specifically, one section is used to capture the change in the voltage limits of the output as a function of the current through the negative input. Power supply currents are also modelled with an additional section. At each amplifier pin, several individual components are included to model high frequency impedance characteristics, including any significant package parasitics.

The model is optimized for operation at  $\pm 5V$ , but it operates over the full range of supply voltages. Beware, the model does not simulate various breakdown conditions such as exceeding the maximum ratings, but it does have input limiting. The model does not include input voltage or current noise, or temperature effects.

The poles and zeros of the transimpedance frequency transfer section have been located with great care to insure that the performance for 3 different inverting and non-inverting gains is matched closely to the curves given in the data sheet. Also, the pole/zero placement insures that the transient response matches that shown in the data sheet.

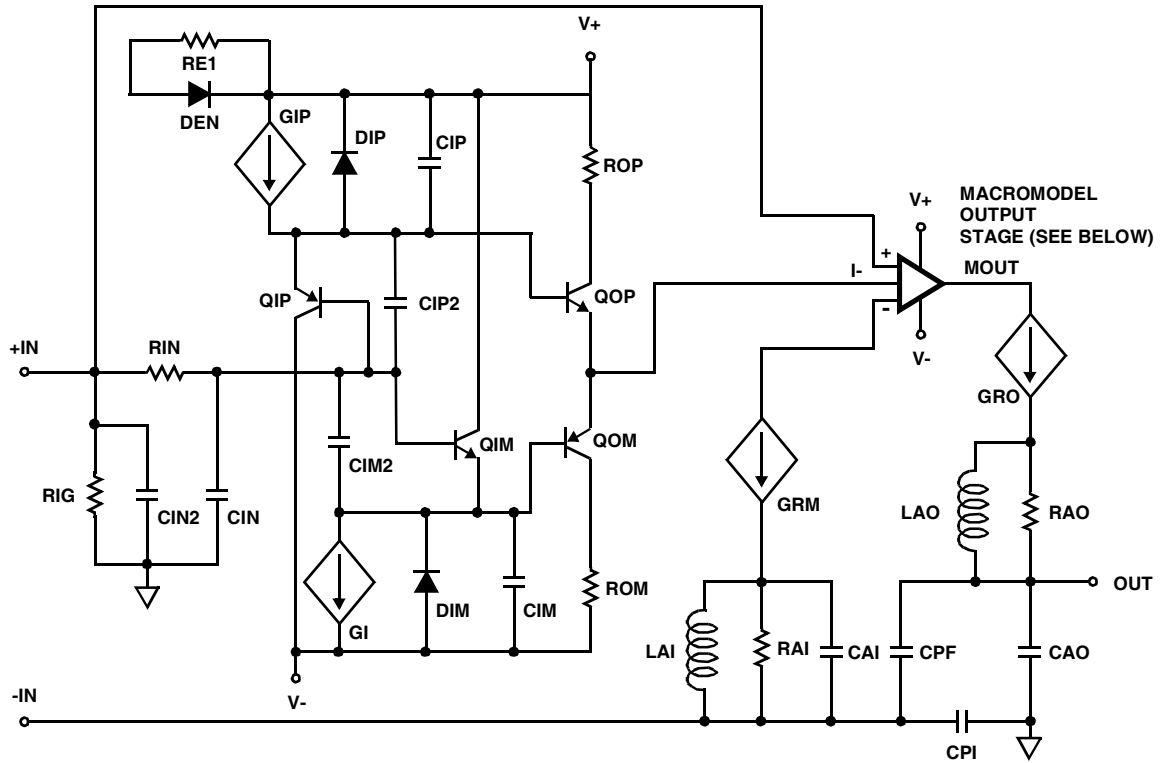


FIGURE 1A. HA5023 AMPLIFIER MACROMODEL SCHEMATIC

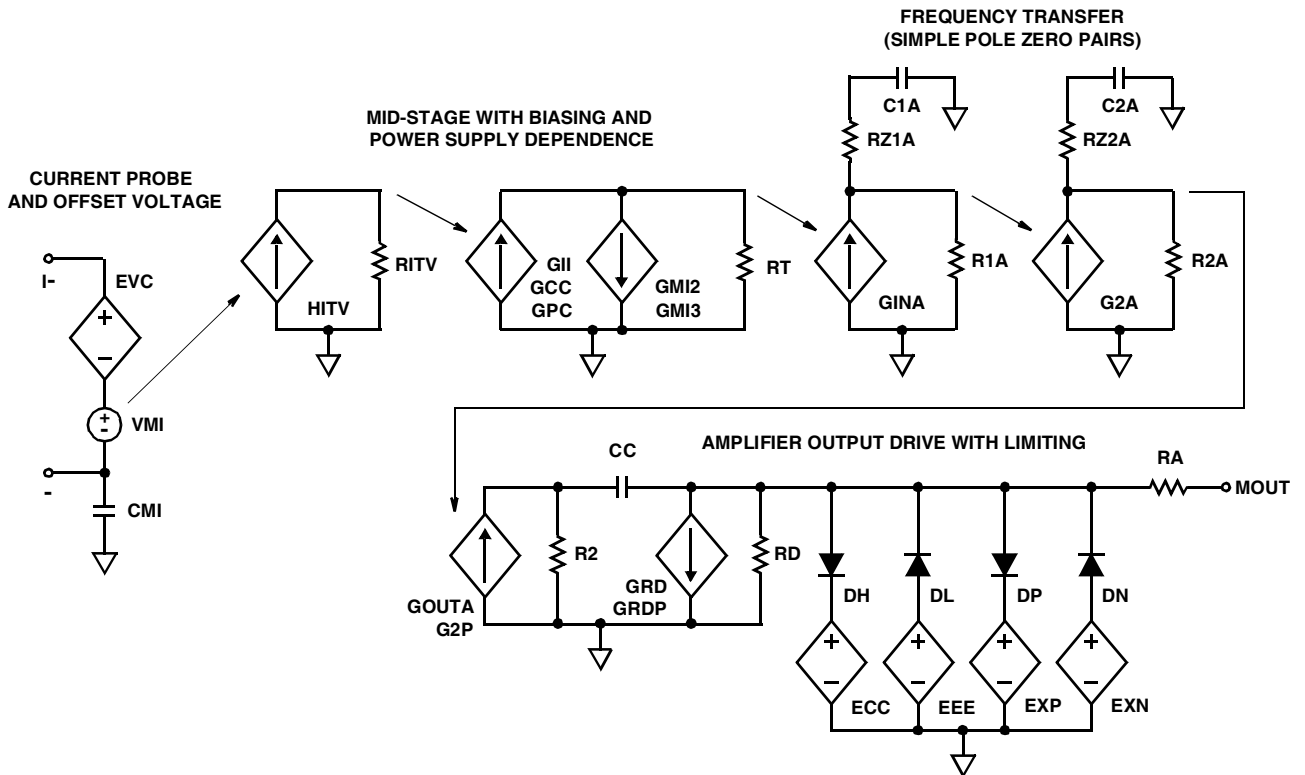


FIGURE 1B. HA5023 MACROMODEL OUTPUT STAGE

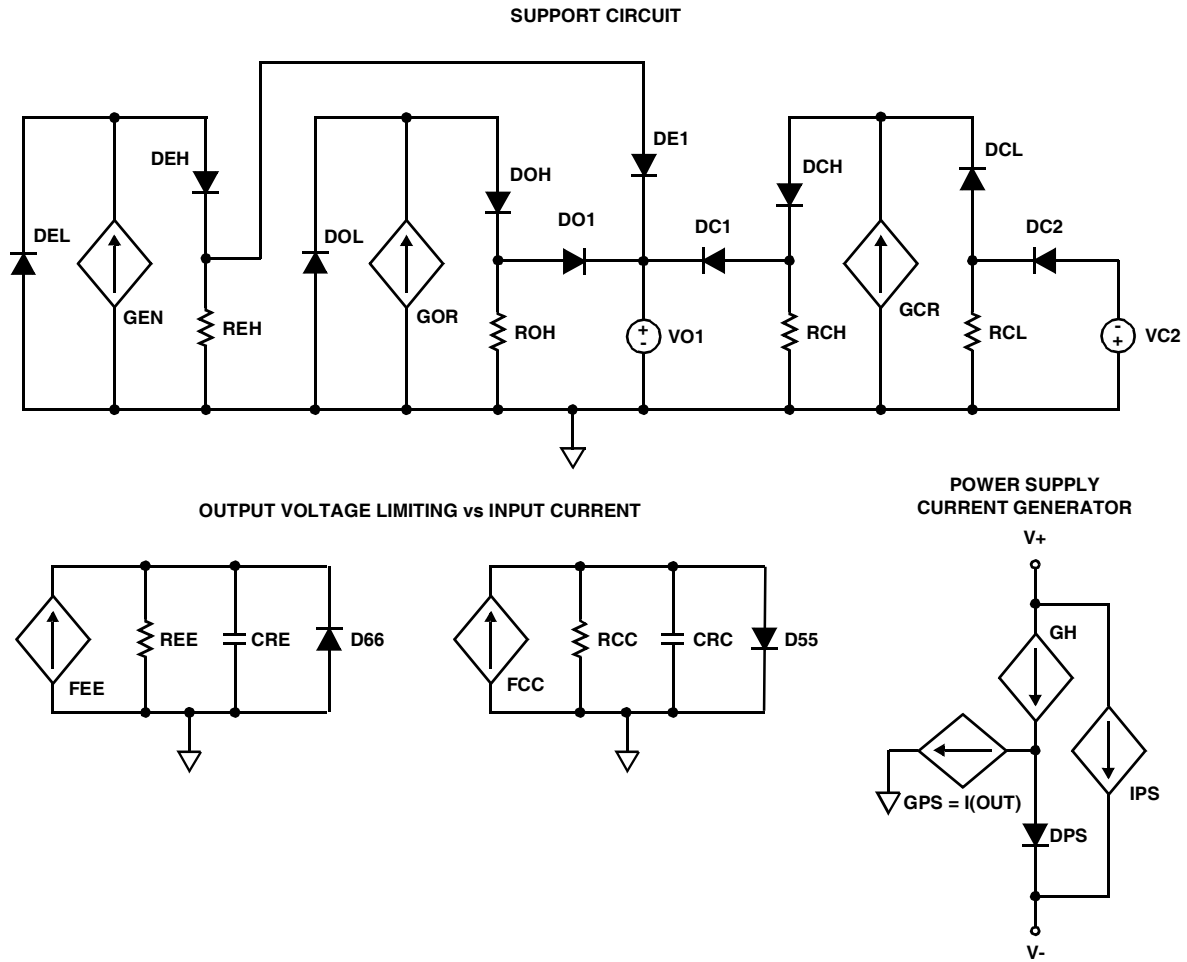


FIGURE 1C. HA5023 MACROMODEL ADDITIONAL SUPPORT CIRCUITS

### HA5023 SPICE Macro Model Listing

```
.SUBCKT HA5023 101 111 113 114 112
LAO 115 112 250N
RAO 115 112 125
CAO 112 0 4P
LAI 116 111 40N
RAI 116 111 200
CAI 116 111 3P
CPI 111 0 1.5P
CPF 112 111 2.5P
.MODEL QIP PNP IS=1.0E-16 BF=130 NF=2.2
.MODEL QIM NPN IS=1.0E-16 BF=220 NF=2.5
.MODEL QOP NPN IS=1.0E-16 BF=180 NF=2.2
.MODEL QOM PNP IS=1.1E-16 BF=50 NF=2.5
ROP 113 117 +3.50000000E+02
QOP 117 118 119 QOP
CIP2 120 118 +2.73661972E-13
CIP 113 118 +6.70000000E-13
```

**HA5023 SPICE Macro Model Listing** (Continued)

DIP 118 113 DLIM  
GIP 113 118 121 0 +3.35000000E-04  
DIPL 114 118 DLIM  
QIP 114 120 118 QIP  
RIN 101 120 280  
CIN2 101 0 .03P  
RIG 101 0 +2.60000000E+07  
CIN 120 0 .5PF  
QIM 113 120 122 QIM  
GIM 122 114 121 0 +3.35000000E-04  
DIML 122 113 DLIM  
DIM 114 122 DLIM  
CIM 122 114 +6.29914530E-13  
CIM2 120 122 +3.24501425E-13  
QOM 123 122 119 QOM  
ROM 123 114 +3.50000000E+02  
.MODEL DLIM2 D N=.01 IS=1E-10  
RE1 113 124 15K  
DEN 124 113 DEN  
.MODEL DEN D BV=+5.26 IBV=1.0E-10  
VMI 102 108 +0.00000000E+00  
EVC 119 108 POLY 4 101 0 102 0 113 0 114 0 -2.13000009E-03 +3.09210000E-04  
++3.09210000E-04 -3.15209991E-04 -3.03210009E-04 0 0 -1.88100000E-06  
++1.88100000E-06 0 -1.88100000E-06 +1.88100000E-06 +1.88100000E-06 0  
+-1.88100000E-06  
CMI 102 0 +1.00000000E-16  
HITV 0 125 VMI 1  
RITV 125 0 1  
GII 0 126 POLY 2 121 0 125 0 0 0 0 0 -1.97000000E-03  
GCC 0 126 POLY 5 121 0 101 0 102 0 113 0 114 0 0 +7.80927711E-09 0 0 0 0 0  
++2.78640749E-11 +2.78640749E-11 +3.49558407E-11 +2.07723091E-11 0 0 0 0 0 0  
+0 0 0 0 0 0 0 0 0 -1.92087022E-16 +1.92087022E-16 0 -1.92087022E-16  
++1.92087022E-16 +1.92087022E-16 0 -1.92087022E-16  
RT 126 0 +1.00000000E+00  
GPC 0 126 POLY 3 121 0 113 0 114 0 0 0 0 0 0 +0.00000000E+00 +0.00000000E+00  
R1A 127 0 +2.14285714E+03  
RZ1A 127 128 -1.14285714E+03  
C1A 128 0 +7.95798186E-13  
GINA 0 127 126 0 +4.66666667E-04  
R2A 129 0 +2.25000000E+03  
RZ2A 129 130 -1.25000000E+03  
C2A 130 0 +3.18319274E-13  
G2A 0 129 127 0 +4.44444444E-04  
GOUTA 106 0 129 0 -1.00000000E+00  
GRD 104 0 106 0 +1.02164070E+01  
G2P 0 106 POLY 2 113 0 114 0 0 +3.46573590E-07 +3.46573590E-07

**HA5023 SPICE Macro Model Listing** (Continued)


GRDP 104 0 POLY 2 113 0 114 0 0 -5.10970951E+00 -5.10970951E+00  
R2 106 0 +1.44269504E+06  
CC 106 104 +1.00000000E-14  
RD 104 0 +3.32000000E+02  
RA 104 109 +8.00000000E+00  
DH 104 100 DH +1.00000000E+00  
DL 131 104 DL +1.00000000E+00  
.MODEL DH D IS=+2.16387643E-14 N=.2  
.MODEL DL D IS=+6.45488179E-15 N=.2  
ECC 100 0 POLY 2 113 0 132 0 -1.10000000E+00 1 1  
EEE 131 0 POLY 2 114 0 133 0 +1.13500000E+00 1 1  
FCC 0 132 POLY 1 VMI -1.30520000E-04 +1.30000000E-01  
RCC 132 0 1K  
CRC 132 0 +1.00000000E-10  
D55 132 0 DLIMVO  
FEE 0 133 POLY 1 VMI +2.19120000E-04 +2.20000000E-01  
REE 133 0 1K  
CRE 133 0 +1.00000000E-10  
D66 0 133 DLIMVO  
.MODEL DLIMVO D N=.01 IS=1E-20  
DP 104 134 DCL +1.00000000E+00  
EXP 134 0 POLY 2 104 0 109 0 0 -1.75393075E-01 +1.17421768E+00  
DN 107 104 DCL +1.00000000E+00  
EXN 107 0 POLY 2 104 0 109 0 0 +8.82115687E-02 +9.09643047E-01  
.MODEL DCL D IS=1E-9 N=1  
IPS 113 114 +5.78000000E-03  
GPS 135 0 104 109 +1.25000000E-01  
GH 113 135 POLY 1 135 114 +1.52098765E-02 -3.04197531E-02 +2.28148148E-02  
+7.60493827E-03 +9.50617284E-04  
DPS 135 114 DPS  
.MODEL DPS D IS=1E-16 N=+3.40657494E+00  
GEN 0 136 POLY 3 113 0 113 0 114 0 +4.00000000E+00 +1.00000000E+00  
+1.00000000E+00 +0.00000000E+00  
DEH 136 121 DLIM  
REH 121 0 1K  
DE1 121 137 DLIM  
VO1 137 0 0.99  
DEL 0 136 DLIM  
.MODEL DLIM D N=.01 IS=1E-20  
GRM 102 116 POLY 2 102 116 121 0 0 0 0 +1.42857143E+01  
GMI2 126 0 POLY 2 104 0 121 0 0 +2.04356846E-10 0 0 -2.04356846E-10  
GOR 0 138 POLY 3 109 0 115 0 121 0 -6.40000000E-01 0 0 +1.28000000E+00 1 -2  
+0 1  
DOH 138 139 DLIM  
ROH 139 0 1K  
DO1 139 137 DLIM

**HA5023 SPICE Macro Model Listing** (Continued)


```
DOL 0 138 DLIM
GRO 109 115 POLY 2 109 115 139 0 0 0 0 +1.25000000E+01
GCR 0 140 POLY 3 0 140 121 0 104 109 0 0 0 +1.25000000E+01 0 100
DCH 140 141 DLIM
RCH 141 0 +8.00000000E+04
DC1 141 137 DLIM
DCL 142 140 DLIM
RCL 142 0 +8.00000000E+04
DC2 143 142 DLIM
VC2 0 143 0.99
GMI3 126 0 POLY 3 121 0 141 0 0 142 0 0 -1.10000000E-08 +1.60000000E-08 0
++1.10000000E-08 -1.60000000E-08
.ENDS HA5023
```

**HA5023 Macro Model Performance**

Intersil application note AN9523 titled "Evaluation Programs For SPICE Op Amp Models" was used as a guideline for evaluating the HA5023 performance. Figure 2 shows the non-inverting AC transfer function. In the gain of one configuration the peaking is 2.5dB versus the 3.2dB of peaking shown is the data sheet. The -3dB bandwidth is 125MHz in both cases. This is quite good correlation between the model and the data sheet. Similarly, the non-inverting gains of 2 and 10 closely match the data sheet transfer functions. In all cases the data sheet conditions were met during the SPICE analysis; i.e.,  $R_F = 1k\Omega$ ,  $R_L = 400\Omega$ ,  $V_{SUPPLY} = \pm 5V$ , and  $C_L = 10pF$ . The inverting AC transfer function is shown in Figure 3. Notice that in the gain of -1 configuration the peaking is 0.5dB versus the 1.5dB of peaking shown on the data sheet, and that the gain of -2 and -10 curves match those shown in the data sheet. Again the correlation between the model and the data sheet is quite good. The small signal pulse response is shown in Figure 4, and the rise time, fall time, propagation delay, and time domain peaking can be read off this waveform.

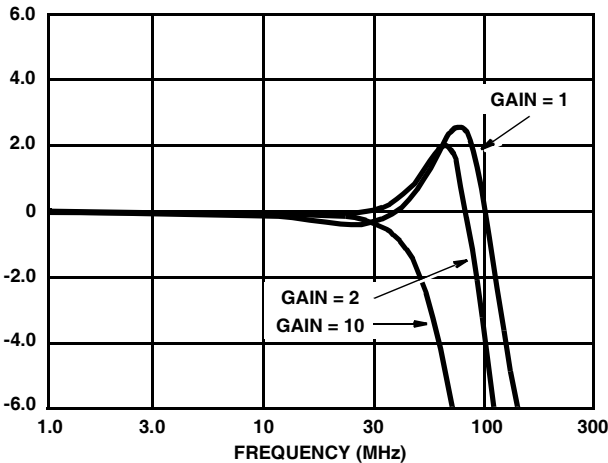

**FIGURE 2. HA5023 NON-INVERTING OP AMP AC TRANSFER FUNCTION**

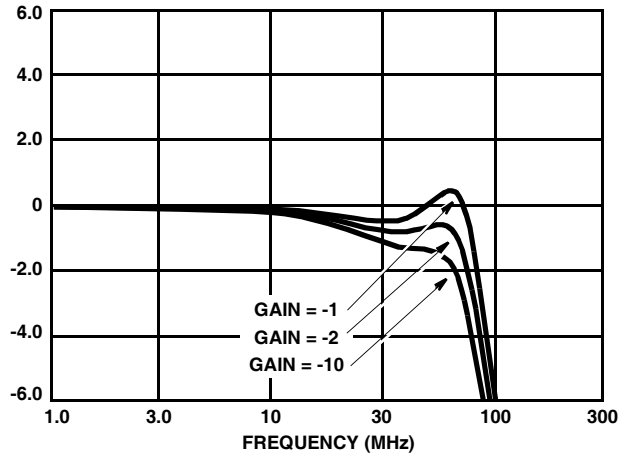

**FIGURE 3. HA5023 INVERTING OP AMP AC TRANSFER FUNCTION**

The common mode rejection ratio is obtained through the use of two identical amplifiers and the equation  $CMRR = \text{common mode input voltage} / \text{differential input voltage}$  for a constant output voltage (see Figure 5). The input for this test is chosen as a 2V square wave. This enables the evaluation of the worst case CMRR.

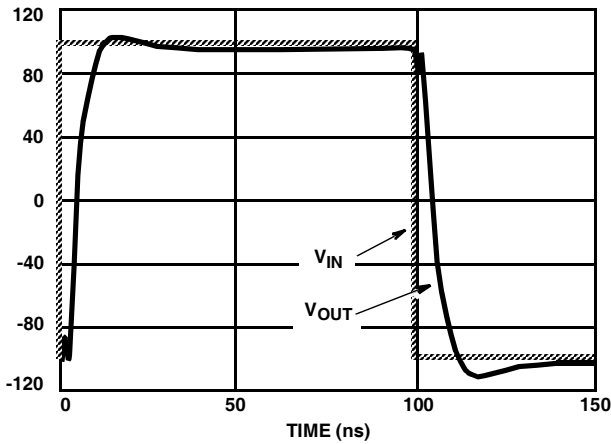


FIGURE 4. HA5023 SMALL SIGNAL PULSE RESPONSE

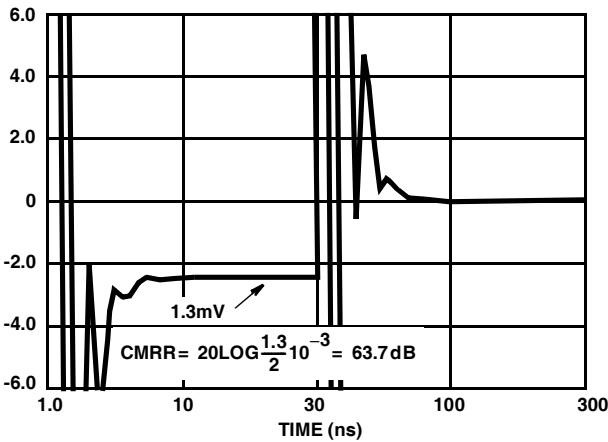


FIGURE 5. HA5023 CMRR

Figures 6, 7, and 8 show the salient DC parameters for the HA5023. The input signal for this test is a DC sweep which enables the evaluation of parameters around zero.

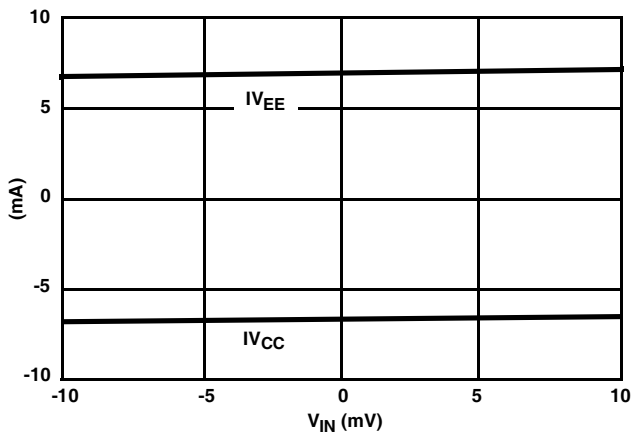


FIGURE 6. HA5023 POWER SUPPLY CURRENT DRAIN PER AMPLIFIER

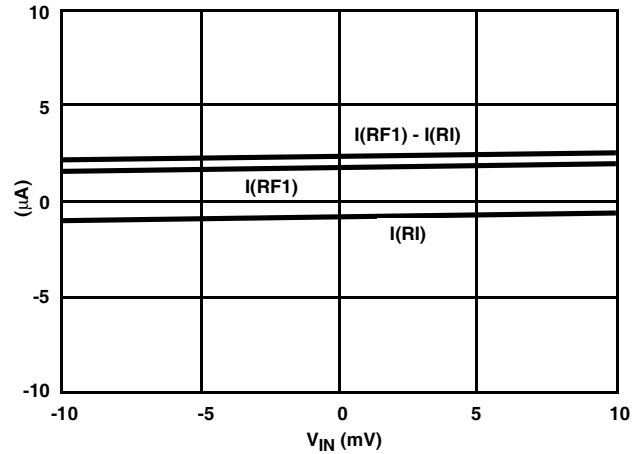


FIGURE 7. HA5023 INPUT CURRENT

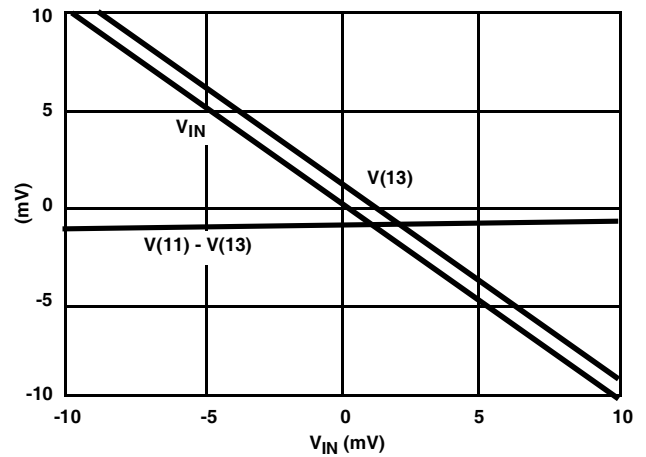


FIGURE 8. HA5023 INPUT OFFSET VOLTAGE

### Summary

The macromodel performs well for both the DC and AC parameters. It is a fraction of a dB off for some AC tests, but this is acceptable for an approximation. At least the model has peaking where the op amp has peaking, and the response for different gains is modeled correctly. The model is just an approximation! It cannot predict performance to a few percent; especially when one considers that the circuit layout parameters have such a large effect on high frequency performance. The model will not predict the actual performance in many circumstances such as non-linearities, limits of performance, or extended range operation. Only testing will confirm performance out of the normal operating range, and all circuits should be tested to confirm the model's predictions.

### License Statement

The information in these SPICE macromodels (models) is protected by the United States copyright laws. Intersil Corporation (Intersil) hereby grants users of these models, herein referred to as licensee, a nonexclusive, nontransferable license to use these models as long as the licensee abides by the terms of this agreement. Before using the models, the licensee should read this license and accept the terms.

## Application Note MM5023

---

The licensee may not sell, loan, rent, lease, or license the models, in whole, in part, or in modified form, to anyone outside the licensee's company. The licensee may modify these models to suit his specific application.

These models are provided "AS IS, WHERE IS, AND WITH NO WARRANTY OF ANY KIND EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE." In no event will Intersil be liable for special, collateral, incidental, or consequential damages in connection with or arising out of the use of these models. Intersil reserves the right to make changes to the products and the models without prior notice.

### Reference

- [1] Intersil Corporation application note MM5020,  
Authors: Ronald Mancini and Guy Morency

All Intersil U.S. products are manufactured, assembled and tested utilizing ISO9000 quality systems.  
Intersil Corporation's quality certifications can be viewed at [www.intersil.com/design/quality](http://www.intersil.com/design/quality)

---

*Intersil products are sold by description only. Intersil Corporation reserves the right to make changes in circuit design, software and/or specifications at any time without notice. Accordingly, the reader is cautioned to verify that data sheets are current before placing orders. Information furnished by Intersil is believed to be accurate and reliable. However, no responsibility is assumed by Intersil or its subsidiaries for its use; nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Intersil or its subsidiaries.*

---

For information regarding Intersil Corporation and its products, see [www.intersil.com](http://www.intersil.com)

### Sales Office Headquarters

#### NORTH AMERICA

Intersil Corporation  
7585 Irvine Center Drive  
Suite 100  
Irvine, CA 92618  
TEL: (949) 341-7000  
FAX: (949) 341-7123

Intersil Corporation  
2401 Palm Bay Rd.  
Palm Bay, FL 32905  
TEL: (321) 724-7000  
FAX: (321) 724-7946

#### EUROPE

Intersil Europe Sarl  
Ave. William Graisse, 3  
1006 Lausanne  
Switzerland  
TEL: +41 21 6140560  
FAX: +41 21 6140579

#### ASIA

Intersil Corporation  
Unit 1804 18/F Guangdong Water Building  
83 Austin Road  
TST, Kowloon Hong Kong  
TEL: +852 2723 6339  
FAX: +852 2730 1433