

# **PIC16C55X**

# **EPROM Memory Programming Specification**

This document includes the programming specifications for the following devices:

- PIC16C554
- PIC16C556
- PIC16C558

# 1.0 PROGRAMMING THE PIC16C55X

The PIC16C55X can be programmed using a serial method. In serial mode the PIC16C55X can be programmed while in the users system. This allows for increased design flexibility.


# 1.1 <u>Hardware Requirements</u>

The PIC16C55X requires two programmable power supplies, one for VDD (2.0V to 6.5V recommended) and one for VPP (12V to 14V). Both supplies should have a minimum resolution of 0.25V.

# 1.2 **Programming Mode**

The programming mode for the PIC16C55X allows programming of user program memory, special locations used for ID, and the configuration word for the PIC16C55X.

# **Pin Diagrams**

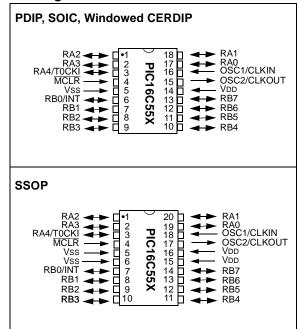

**Note:** Peripheral pinout functions are not shown (see data sheets for full pinout information).

# PIN DESCRIPTIONS (DURING PROGRAMMING): PIC16C554/556/558

		Durin	During Programming					
Pin Name	Pin Name	Pin Type	Pin Description					
RB6	CLOCK	I	Clock input					
RB7	DATA	I/O	Data input/output					
MCLR/Vpp	VPP	Р	Programming Power					
VDD	VDD	Р	Power Supply					
Vss	Vss	Р	Ground					

Legend: I = Input, O = Output, P = Power

# 2.0 PROGRAM MODE ENTRY

# 2.1 <u>User Program Memory Map</u>

The user memory space extends from 0x0000 to 0x1FFF (8K). Table 2-1 shows actual implementation of program memory in the PIC16C55X family.

TABLE 2-1: IMPLEMENTATION OF PROGRAM MEMORY IN THE PIC16C55X

Device	Program Memory Size	Access to Program Memory
PIC16C554	0x000 - 0x1FF (0.5K)	PC<8:0>
PIC16C556	0x000 - 0x3FF (1K)	PC<9:0>
PIC16C558	0x000 - 0x7FF (2K)	PC<10:0>

When the PC reaches the last location of the implemented program memory, it will wrap around and address a location within the physically implemented memory (see Figure 2-1).

In programming mode the program memory space extends from 0x0000 to 0x3FFF, with the first half (0x0000-0x1FFF) being user program memory and the second half (0x2000-0x3FFF) being configuration memory. The PC will increment from 0x0000 to 0x1FFF and wrap to 0x000 or 0x2000 to 0x3FFF and wrap around to 0x2000 (not to 0x0000). Once in configuration memory, the highest bit of the PC stays a '1', thus always pointing to the configuration memory. The only way to point to user program memory is to reset the part and reenter program/verify mode, as described in Section 2.2.

In the configuration memory space, 0x2000-0x20FF are utilized. When in a configuration memory, as in the user memory, the 0x2000-0x2XFF segment is repeatedly accessed as the PC exceeds 0x2XFF (see Figure 2-1).


A user may store identification information (ID) in four ID locations. The ID locations are mapped in [0x2000: 0x2003]. It is recommended that the user use only the four least significant bits of each ID location. In some devices, the ID locations read-out in a scrambled fashion after code protection is enabled. For these devices, it is recommended that ID location is written as "11 1111 1000 bbbb" where 'bbbb' is ID information.

**Note:** All other locations are reserved and should not be programmed.

In other devices, the ID locations read out normally, even after code protection. To understand how the devices behave, refer to Table 4-1.

To understand the scrambling mechanism after code protection, refer to Section 4.1.

FIGURE 2-1: PROGRAM MEMORY MAPPING

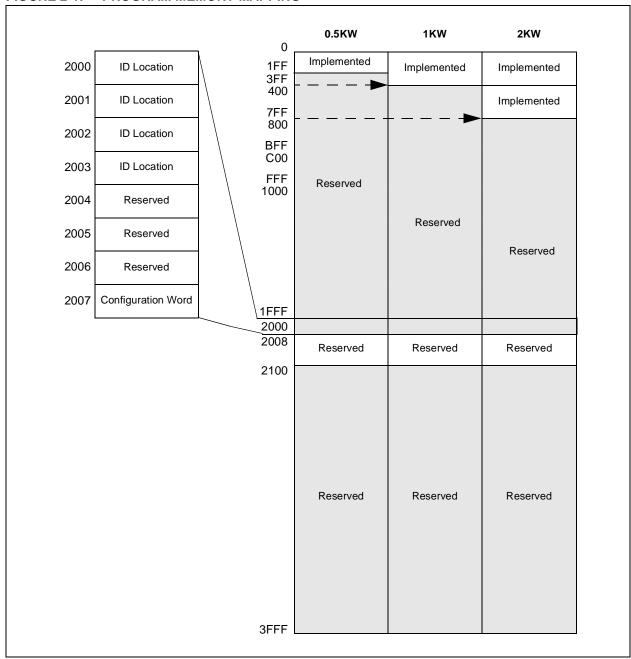

# 2.2 **Program/Verify Mode**

The program/verify mode is entered by holding pins RB6 and RB7 low while raising MCLR pin from VIL to VIHH (high voltage). Once in this mode the user program memory and the configuration memory can be accessed and programmed in serial fashion. The mode of operation is serial, and the memory that is accessed is the user program and configuration memory. RB6 is a Schmitt Trigger input in this mode.

The sequence that enters the device into the programming/verify mode places all other logic into the reset state (the  $\overline{MCLR}$  pin was initially at V<sub>IL</sub>). This means that all I/O are in the reset state (High impedance inputs).

Note: The MCLR pin should be raised as quickly as possible from VIL to VIHH. this is to ensure that the device does not have the PC incremented while in valid operation range.

#### 2.2.1 PROGRAM/VERIFY OPERATION

The RB6 pin is used as a clock input pin, and the RB7 pin is used for entering command bits and data input/output during serial operation. To input a command, the clock pin (RB6) is cycled six times. Each command bit is latched on the falling edge of the clock with the least significant bit (LSB) of the command being input first. The data on pin RB7 is required to have a minimum setup and hold time (see AC/DC specs) with respect to the falling edge of the clock. Commands that have data associated with them (read

and load) are specified to have a minimum delay of  $1\mu s$  between the command and the data. After this delay the clock pin is cycled 16 times with the first cycle being a start bit and the last cycle being a stop bit. Data is also input and output LSB first. Therefore, during a read operation the LSB will be transmitted onto pin RB7 on the rising edge of the second cycle, and during a load operation the LSB will be latched on the falling edge of the second cycle. A minimum  $1\mu s$  delay is also specified between consecutive commands.

The commands that are available are listed in Table 2-2.

#### 2.2.1.1 LOAD CONFIGURATION

After receiving this command, the program counter (PC) will be set to 0x2000. By then applying 16 cycles to the clock pin, the chip will load 14-bits a "data word" as described above, to be programmed into the configuration memory. A description of the memory mapping schemes for normal operation and configuration mode operation is shown in Figure 2-1. After the configuration memory is entered, the only way to get back to the user program memory is to exit the program/verify test mode by taking MCLR low (VIL).

TABLE 2-2: COMMAND MAPPING

Command		Mapping (MSB LSB)				Data	
Load Configuration	0	0	0	0	0	0	0, data(14), 0
Load Data	0	0	0	0	1	0	0, data(14), 0
Read Data	0	0	0	1	0	0	0, data(14), 0
Increment Address	0	0	0	1	1	0	
Begin programming	0	0	1	0	0	0	
End Programming	0	0	1	1	1	0	

Note: The CPU clock must be disabled during in-circuit programming.

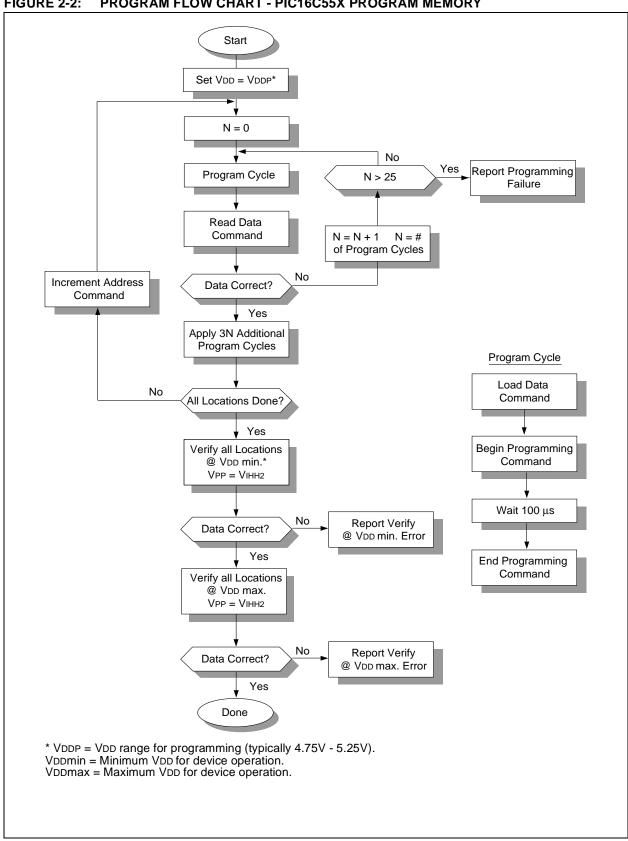


FIGURE 2-2: PROGRAM FLOW CHART - PIC16C55X PROGRAM MEMORY

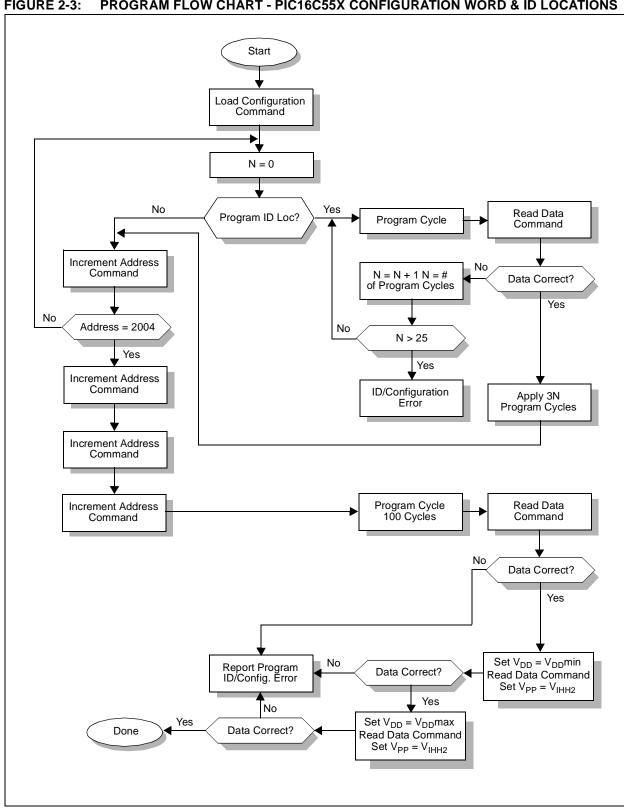


FIGURE 2-3: PROGRAM FLOW CHART - PIC16C55X CONFIGURATION WORD & ID LOCATIONS

#### 2.2.1.2 LOAD DATA

After receiving this command, the chip will load in a 14-bit "data word" when 16 cycles are applied, as described previously. A timing diagram for the load data command is shown in Figure 5-1.

#### 2.2.1.3 READ DATA

After receiving this command, the chip will transmit data bits out of the memory currently accessed starting with the second rising edge of the clock input. The RB7 pin will go into output mode on the second rising clock edge, and it will revert back to input mode (hi-impedance) after the 16th rising edge. A timing diagram of this command is shown in Figure 5-2.

#### 2.2.1.4 INCREMENT ADDRESS

The PC is incremented when this command is received. A timing diagram of this command is shown in Figure 5-3.

#### 2.2.1.5 BEGIN PROGRAMMING

A load command (load configuration or load data) must be given before every begin programming command. Programming of the appropriate memory (test program memory or user program memory) will begin after this command is received and decoded. Programming should be performed with a series of 100µs programming pulses. A programming pulse is defined as the time between the begin programming command and the end programming command.

# 2.2.1.6 END PROGRAMMING

After receiving this command, the chip stops programming the memory (configuration program memory or user program memory) that it was programming at the time.

# 2.3 <u>Programming Algorithm Requires</u> Variable VDD

The PIC16C55X uses an intelligent algorithm. The algorithm calls for program verification at VDDmin as well as VDDmax. Verification at VDDmin guarantees good "erase margin". Verification at VDDmax guarantees good "program margin".

The actual programming must be done with VDD in the VDDP range (4.75 - 5.25V).

VDDP = VCC range required during programming.

VDD min. = minimum operating VDD spec for the part.

VDD max.= maximum operating VDD spec for the part.

Programmers must verify the PIC16C55X at its specified VDDmax and VDDmin levels. Since Microchip may introduce future versions of the PIC16C55X with a broader VDD range, it is best that these levels are user selectable (defaults are ok).

**Note:** Any programmer not meeting these requirements may only be classified as "prototype" or "development" programmer but not a "production" quality programmer.

# 3.0 CONFIGURATION WORD

The PIC16C55X family members have several configuration bits. These bits can be programmed (reads '0') or left unprogrammed (reads '1') to select various device configurations. Figure 3-1 provides an overview of configuration bits.

#### FIGURE 3-1: CONFIGURATION WORD BIT MAP

Bit 3 2 0 6 5 4 1 13 12 11 10 9 8 7 Number: CP1 PIC16C554/556/558 CP1 CP0 CP1 CP0 CP1 CP0 0 CP0 PWRTE WDTE FOSC1 FOSC0

bit 7: Reserved for future use

bit 6: Set to 0

bit 5-4: CP1:CP0, Code Protect

bit 8-13

Device	CP1	CP0	Code Protection
PIC16C554	0	0	All memory protected
	0	1	Do not use
	1	0	Do not use
	1	1	Code protection off
PIC16C556	0	0	All memory protected
	0	1	Upper 1/2 memory protected
	1	0	Do not use
	1	1	Code protection off
PIC16C558	0	0	All memory protected
	0	1	Upper 3/4 memory protected
	1	0	Upper 1/2 memory protected
	1	1	Code protection off

bit 3: **PWRTE**, Power Up Timer Enable Bit

PIC16C554/556/558:

0 = Power up timer enabled

1 = Power up timer disabled

bit 2: WDTE, WDT Enable Bit

1 = WDT enabled

0 = WDT disabled

bit 1-0:FOSC<1:0>, Oscillator Selection Bit

11: RC oscillator 10: HS oscillator 01: XT oscillator

00: LP oscillator

# 4.0 CODE PROTECTION

The program code written into the EPROM can be protected by writing to the CP0 & CP1 bits of the configuration word.

# 4.1 <u>Programming Locations 0x0000 to 0x03F after Code Protection</u>

For PIC16C55X devices, once code protection is enabled, all protected segments read '0's (or "garbage values") and are prevented from further programming. All unprotected segments, including ID locations and configuration word, read normally. These locations can be programmed.

# 4.2 Embedding Configuration Word and ID Information in the Hex File

To allow portability of code, the programmer is required to read the configuration word and ID locations from the hex file when loading the hex file. If configuration word information was not present in the hex file then a simple warning message may be issued. Similarly, while saving a hex file, configuration word and ID information must be included. An option to not include this information may be provided.

Microchip Technology Inc. feels strongly that this feature is important for the benefit of the end customer.

# TABLE 4-1: CONFIGURATION WORD

#### PIC16C554

# To code protect:

Protect all memory 0000001000xxxxNo code protection 1111111011xxxx

Program Memory Segment	R/W in Protected Mode	R/W in Unprotected Mode
Configuration Word (0x2007)	Read Unscrambled, Write Enabled	Read Unscrambled, Write Enabled
Protected memory segment	Read All 0's, Write Disabled	Read Unscrambled, Write Enabled
ID Locations (0x2000 : 0x2003)	Read Unscrambled, Write Enabled	Read Unscrambled, Write Enabled

#### PIC16C556

# To code protect:

Protect all memory 0000001000xxxx
 Protect upper 1/2 memory 0101011001xxxx
 No code protection 1111111011xxxx

Program Memory Segment	R/W in Protected Mode	R/W in Unprotected Mode
Configuration Word (0x2007)	Read Unscrambled, Write Enabled	Read Unscrambled, Write Enabled
Protected memory segment	Read All 0's, Write Disabled	Read Unscrambled, Write Enabled
ID Locations (0x2000 : 0x2003)	Read Unscrambled, Write Enabled	Read Unscrambled, Write Enabled

# PIC16C558

# To code protect:

Protect all memory 0000001000xxxx
Protect upper 3/4 memory 0101011001xxxx
Protect upper 1/2 memory 1010101010xxxx
No code protection 1111111011xxxx

Program Memory Segment	R/W in Protected Mode	R/W in Unprotected Mode
Configuration Word (0x2007)	Read Unscrambled, Write Enabled	Read Unscrambled, Write Enabled
Protected memory segment	Read All 0's, Write Disabled	Read Unscrambled, Write Enabled
ID Locations (0x2000 : 0x2003)	Read Unscrambled, Write Enabled	Read Unscrambled, Write Enabled

# 4.3 Checksum

#### 4.3.1 CHECKSUM CALCULATIONS

Checksum is calculated by reading the contents of the PIC16C55X memory locations and adding up the opcodes up to the maximum user addressable location, e.g., 0x1FF for the PIC16C74. Any carry bits exceeding 16-bits are neglected. Finally, the configuration word (appropriately masked) is added to the checksum. Checksum computation for each member of the PIC16C55X devices is shown in Table 4-2.

The checksum is calculated by summing the following:

- · The contents of all program memory locations
- The configuration word, appropriately masked
- Masked ID locations (when applicable)

The least significant 16 bits of this sum is the checksum. The following table describes how to calculate the checksum for each device. Note that the checksum calculation differs depending on the code protect setting. Since the program memory locations read out differently depending on the code protect setting, the table describes how to manipulate the actual program memory values to simulate the values that would be read from a protected device. When calculating a checksum by reading a device, the entire program memory can simply be read and summed. The configuration word and ID locations can always be read.

Note that some older devices have an additional value added in the checksum. This is to maintain compatibility with older device programmer checksums.

TABLE 4-2: CHECKSUM COMPUTATION

Device	Code Protect	Checksum*	Blank Value	0x25E6 at 0 and max address
PIC16C554	OFF	SUM[0x000:0x1FF] + CFGW & 0x3F3F	3D3F	090D
	ALL	SUM_ID + CFGW & 0x3F3F	3D4E	091C
PIC16C556	OFF	SUM[0x000:0x3FF] + CFGW & 0x3F3F	3B3F	070D
	1/2	SUM[0x000:0x1FF] + CFGW & 0x3F3F + SUM_ID	4E5E	0013
	ALL	CFGW & 0x3F3F + SUM_ID	3B4E	071C
PIC16C558	OFF	SUM[0x000:0x7FF] + CFGW & 0x3F3F	373F	030D
	1/2	SUM[0x000:0x3FF] + CFGW & 0x3F3F + SUM_ID	5D6E	0F23
	3/4	SUM[0x000:0x1FF] + CFGW & 0x3F3F + SUM_ID	4A5E	FC13
	ALL	CFGW & 0x3F3F + SUM_ID	374E	031C

Legend: CFGW = Configuration Word

SUM[a:b] = [Sum of locations a through b inclusive]

SUM\_ID = ID locations masked by 0xF then made into a 16-bit value with ID0 as the most significant nibble. For example

ID0 = 0x12, ID1 = 0x37, ID2 = 0x4, ID3 = 0x26, then  $SUM_ID = 0x2746$ .

<sup>\*</sup>Checksum = [Sum of all the individual expressions] **MODULO** [0xFFFF]

<sup>+ =</sup> Addition

<sup>&</sup>amp; = Bitwise AND

# 5.0 PROGRAM/VERIFY MODE ELECTRICAL CHARACTERISTICS

# TABLE 5-1: AC/DC CHARACTERISTICS TIMING REQUIREMENTS FOR PROGRAM/VERIFY TEST MODE

# **Standard Operating Conditions**

Operating Temperature: +10°C ≤ TA ≤ +40°C, unless otherwise stated, (25°C is recommended)

Operating Voltage:  $4.5V \le VDD \le 5.5V$ , unless otherwise stated.

Parameter No.	Sym.	Characteristic	Min.	Тур.	Max.	Units	Conditions
General			l.	I			
PD1	VDDP	Supply voltage during programming	4.75	5.0	5.25	V	
PD2	IDDP	Supply current (from VDD) during programming	-	-	20	mA	
PD3	VDDV	Supply voltage during verify	VDDmin	-	VDDmax	V	Note 1
PD4	VIHH1	Voltage on MCLR/VPP during programming	12.75	-	13.25	V	Note 2
PD5	VIHH2	Voltage on MCLR/VPP during verify	VDD + 4.0	-	13.5	-	
PD6	IPP	Programming supply current (from VPP)	-	-	50	mA	
PD9	VIH1	(RB6, RB7) input high level	0.8 VDD	-	-	V	Schmitt Trigger input
PD8	VIL1	(RB6, RB7) input low level	0.2 VDD	-	-	V	Schmitt Trigger input

Serial Prog	ram Veri	fy					
P1	TR	MCLR/VPP rise time (VSS to VHH) for test mode entry	-	-	8.0	μs	
P2	Tf	MCLR Fall time	-	-	8.0	μs	
P3	Tset1	Data in setup time before clock ↓	100	-	-	ns	
P4	Thld1	Data in hold time after clock ↓	100	-	-	ns	
P5	Tdly1	Data input not driven to next clock input (delay required between command/data or command/command)	1.0	-	-	μs	
P6	Tdly2	Delay between clock ↓ to clock ↑ of next command or data	1.0	-	-	μs	
P7	Tdly3	Clock ↑ to date out valid (during read data)	200	-	-	ns	
P8	Thld0	Hold time after MCLR ↑	2	-	-	μs	
-	Tpw	Programming Pulse Width	10	100	1000	μs	

Note 1: Program must be verified at the minimum and maximum VDD limits for the part.

Note 2: VIHH must be greater than VDD + 4.5V to stay in programming/verify mode.

FIGURE 5-1: LOAD DATA COMMAND (PROGRAM/VERIFY)

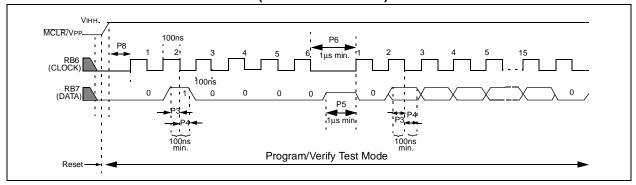


FIGURE 5-2: READ DATA COMMAND (PROGRAM/VERIFY)


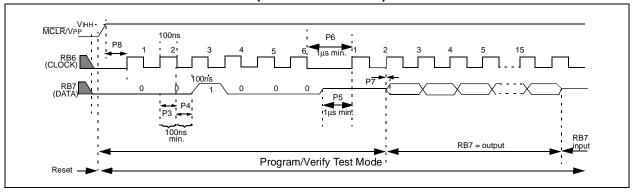


FIGURE 5-3: INCREMENT ADDRESS COMMAND (PROGRAM/VERIFY)



			_
NOTES:			

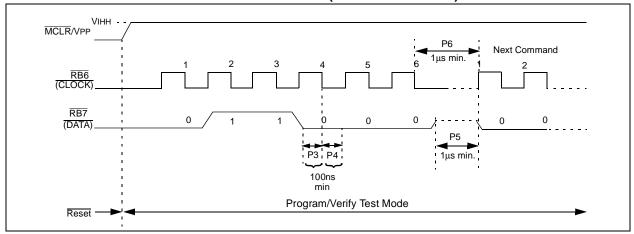

# WORLDWIDE SALES AND SERVICE

#### **AMERICAS**

# **Corporate Office**

Microchip Technology Inc. 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-786-7200 Fax: 480-786-7277 Technical Support: 480-786-7627 Web Address: http://www.microchip.com

#### Atlanta

Microchip Technology Inc. 500 Sugar Mill Road, Suite 200B Atlanta, GA 30350 Tel: 770-640-0034 Fax: 770-640-0307

#### **Boston**

Microchip Technology Inc. 5 Mount Royal Avenue Marlborough, MA 01752 Tel: 508-480-9990 Fax: 508-480-8575

#### Chicago

Microchip Technology Inc. 333 Pierce Road, Suite 180 Itasca, IL 60143

Tel: 630-285-0071 Fax: 630-285-0075

#### **Dallas**

Microchip Technology Inc. 4570 Westgrove Drive, Suite 160 Addison, TX 75248 Tel: 972-818-7423 Fax: 972-818-2924

#### Dayton

Microchip Technology Inc. Two Prestige Place, Suite 150 Miamisburg, OH 45342

Tel: 937-291-1654 Fax: 937-291-9175

#### Detroit

Microchip Technology Inc. Tri-Atria Office Building 32255 Northwestern Highway, Suite 190 Farmington Hills, MI 48334 Tel: 248-538-2250 Fax: 248-538-2260

# Los Angeles

Microchip Technology Inc. 18201 Von Karman, Suite 1090 Irvine, CA 92612 Tel: 949-263-1888 Fax: 949-263-1338

#### **New York**

Microchip Technology Inc. 150 Motor Parkway, Suite 202 Hauppauge, NY 11788 Tel: 631-273-5305 Fax: 631-273-5335

#### San Jose

Microchip Technology Inc. 2107 North First Street, Suite 590 San Jose, CA 95131 Tel: 408-436-7950 Fax: 408-436-7955

# **AMERICAS** (continued)

#### **Toronto**

Microchip Technology Inc. 5925 Airport Road, Suite 200 Mississauga, Ontario L4V 1W1, Canada Tel: 905-405-6279 Fax: 905-405-6253

#### ASIA/PACIFIC

#### **Hong Kong**

Microchip Asia Pacific Unit 2101, Tower 2 Metroplaza 223 Hing Fong Road Kwai Fong, N.T., Hong Kong Tel: 852-2-401-1200 Fax: 852-2-401-3431

# Beijing

Microchip Technology, Beijing Unit 915, 6 Chaoyangmen Bei Dajie Dong Erhuan Road, Dongcheng District New China Hong Kong Manhattan Building Beijing 100027 PRC Tel: 86-10-85282100 Fax: 86-10-85282104

#### India

Microchip Technology Inc. India Liaison Office No. 6, Legacy, Convent Road Bangalore 560 025, India Tel: 91-80-229-0061 Fax: 91-80-229-0062

#### Japan

Microchip Technology Intl. Inc. Benex S-1 6F 3-18-20, Shinyokohama Kohoku-Ku, Yokohama-shi Kanagawa 222-0033 Japan Tel: 81-45-471- 6166 Fax: 81-45-471-6122

#### Korea

Microchip Technology Korea 168-1, Youngbo Bldg. 3 Floor Samsung-Dong, Kangnam-Ku Seoul, Korea Tel: 82-2-554-7200 Fax: 82-2-558-5934

#### Shanghai

Microchip Technology RM 406 Shanghai Golden Bridge Bldg. 2077 Yan'an Road West, Hong Qiao District Shanghai, PRC 200335 Tel: 86-21-6275-5700 Fax: 86 21-6275-5060

#### ASIA/PACIFIC (continued)

#### Singapore

Microchip Technology Singapore Pte Ltd. 200 Middle Road #07-02 Prime Centre Singapore 188980

Tel: 65-334-8870 Fax: 65-334-8850

# Taiwan, R.O.C

Microchip Technology Taiwan 10F-1C 207 Tung Hua North Road Taipei, Taiwan, ROC Tel: 886-2-2717-7175 Fax: 886-2-2545-0139

# **EUROPE**

# **United Kingdom**

505 Eskdale Road Winnersh Triangle Wokingham Berkshire, England RG41 5TU Tel: 44 118 921 5858 Fax: 44-118 921-5835

Arizona Microchip Technology Ltd.

# Denmark

Microchip Technology Denmark ApS Regus Business Centre Lautrup hoj 1-3 Ballerup DK-2750 Denmark Tel: 45 4420 9895 Fax: 45 4420 9910

#### France

Arizona Microchip Technology SARL Parc d'Activite du Moulin de Massy 43 Rue du Saule Trapu Batiment A - Ier Etage 91300 Massy, France Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

#### Germany

Arizona Microchip Technology GmbH Gustav-Heinemann-Ring 125 D-81739 München, Germany Tel: 49-89-627-144 0 Fax: 49-89-627-144-44


# Italy

Arizona Microchip Technology SRL Centro Direzionale Colleoni Palazzo Taurus 1 V. Le Colleoni 1 20041 Agrate Brianza Milan, Italy Tel: 39-039-65791-1 Fax: 39-039-6899883



Microchip received QS-9000 quality system certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona in July 1999. The Company's quality system processes and procedures are QS-9000 compliant for its PICmicro® 8-bit MCUs, KEELOQ® code hopping devices, Serial EEPROMs and microperipheral products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001 certified.

All rights reserved. © 1999 Microchip Technology Incorporated. Printed in the USA. 11/99

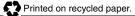

Information contained in this publication regarding device applications and the like is intended for suggestion only and may be superseded by updates. No representation or warranty is given and no liability is assumed by Microchip Technology Incorporated with respect to the accuracy or use of such information, or infiningement of patents or other intellectual property rights arising from such use or otherwise. Use of Microchips products ac critical components in life support systems is not authorized except with express written approval by Microchip, No licenses are conveyed, implicitly or otherwise, under any intellectual property rights. The Microchip logo and name are registered trademarks of Microchip Technology Inc. in the U.S.A. and other countries. All rights reserved. All other trademarks mentioned herein are the property of their respective companies.