


MF2400C Series

Microwave Frequency Counter

10 Hz to 20, 27, 40 GHz



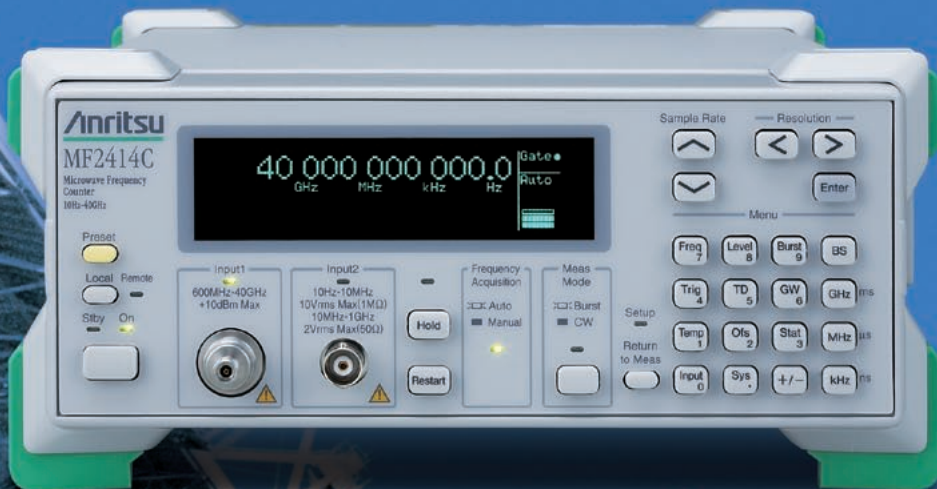

Newest Burst Wave Measurements

The MF2400C series lineup is composed of three frequency counters:

the MF2412C (20 GHz), the MF2413C (27 GHz), and the MF2414C (40 GHz).

This series is ideal for evaluating mobile radio communications devices and circuits, and can also measure the carrier frequency and pulse width of burst signals.

In addition to displaying measurement results on the 12-digit vacuum fluorescent display (VFD), frequency values can be read using the analog display function, which can be used for monitoring and is especially useful for adjusting the frequency of oscillators.

Furthermore, the template function is perfect for assessing whether or not results fall within upper and lower frequency limit specification. Because the evaluation result is output from the AUX connector on the back panel as a Go/No-go signal, an easy-to-use, automatic measurement system can be configured using the GPIB function.

MF2400C series

Microwave Frequency Counter
10 Hz to 20, 27, 40 GHz





Wide Band Measurement

The lineup of three counters with upper frequency limits of 20, 27, and 40 GHz, satisfies every usage requirement. In addition, a high-frequency fuse protects the input circuit from over-power signals, and a variety of adapters is available for coupling each connector.

High-Accuracy Burst Measurement

The carrier frequency, burst width, and burst repetition rate of burst signals from 100 ns to 0.1 s input to Input 1 can be measured quickly and accurately.

Measurement	Positive selected	Negative selected
Burst width	 Measurement at Burst ON	 Measurement at Burst OFF
Burst repetition	 Measurement of On-On period	 Measurement of Off-Off period

Analog Display Function

Using this function, the entire VFD becomes an analog meter and values are indicated by the meter needle. In addition to quickly grasping changes in measured frequency, this permits faster frequency adjustment and Go/No-Go evaluation of oscillators, which previously required reading of many digits. This analog meter also solves problems of misreading frequency values.



Moves left/right and indicates frequency value

Template Function


When the upper and lower frequency limits have been preset, Go is displayed when the measured frequency is within the preset range; if it is out of range, No-Go is displayed. In addition, the Go/No-Go signal can be output from the AUX connector on the back panel as a TTL signal.

This is very useful for configuring an automatic Pass/Fail evaluation system (using analog display).

High-Speed Transient Measurement

Frequency counters have an interval (sample rate) when measurement is not performed, so sudden frequency changes during this period cannot be measured.


However, the MF2400C series overcomes problems of measuring fast transients by capturing frequency variations at speeds of up to 10 μ s and saving a maximum of 2000 sampling points. Saved data can be read by a PC host using GPIB. When it is combined with a host computer, frequency changes can be displayed graphically. This is very effective for measuring VCO start-up characteristics and PLL lock times.

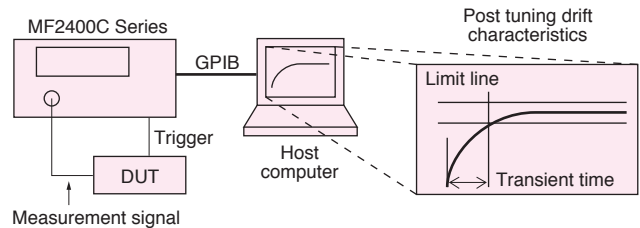

Gating Function

At burst signal measurement, the carrier frequency may be different at the burst start, middle, and end.

In the MF2400C series, the carrier signal frequency at any position of the signal (delay time from trigger signal leading edge) and at any specified time (gate time) can be measured using a combination of the gating and trigger delay functions.

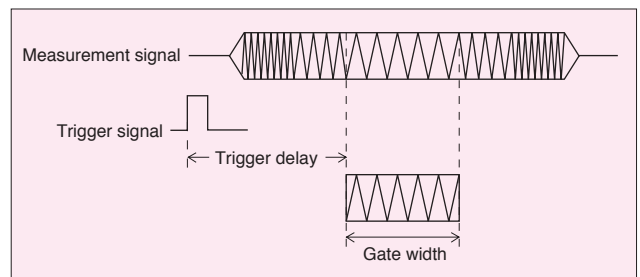

High-stability Reference Crystal Oscillator


A high-stability reference crystal oscillator is installed as standard in this counter instead of being available as an option in the previous MF2400B series.

It supports an order-of-magnitude better measurement stability than previous instruments without additional investment.

Added Save and Recall Functions

Up to 10 setups can be saved in the internal memory and freely recalled. Saving complex setups in advance, such as burst triggers and gate settings, supports immediate recall for measurement, reducing both measurement setup time and malfunctions due to setup mistakes.


Panel Layout

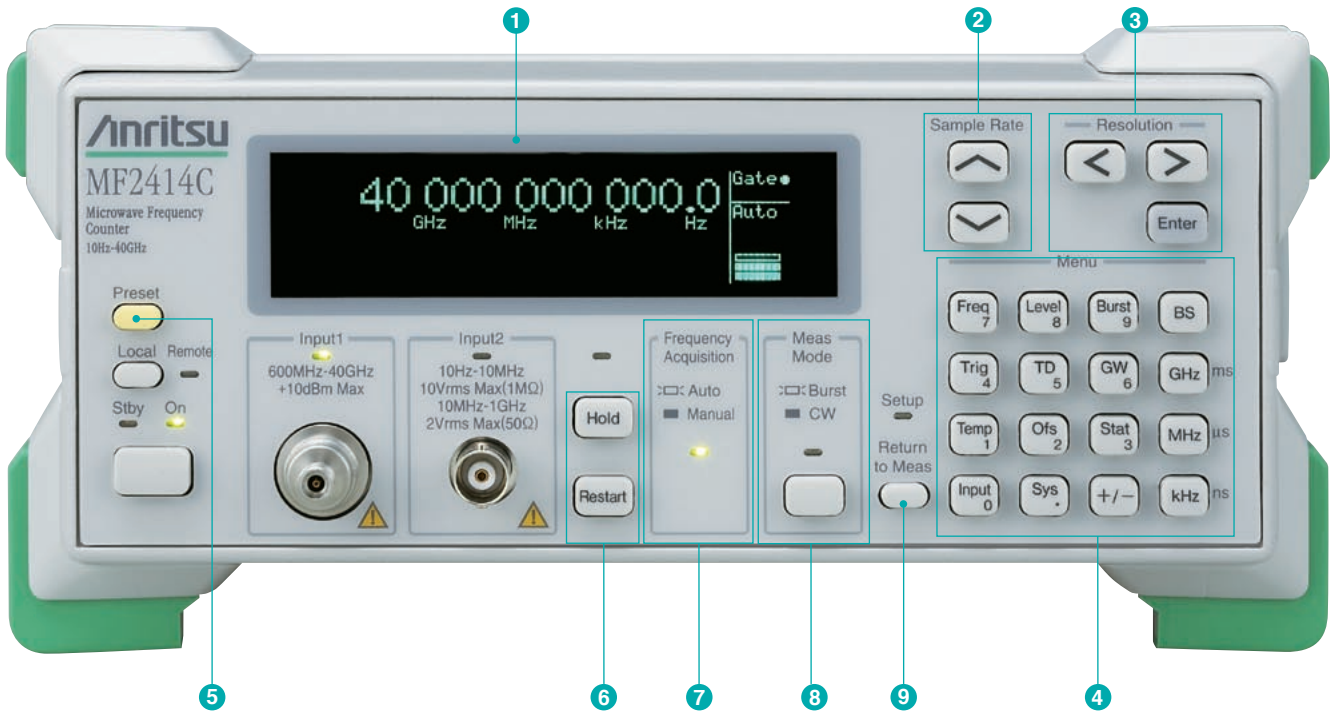

- 1 VFD display (256 x 64 dot):
Measurement results and parameter settings displayed. Excellent visibility compared to LCD due to self-luminescent display method
- 2 Sample Rate:
Sets measurement off time
- 3 Resolution:
At normal measurement, the \leftarrow and \rightarrow keys switch the frequency measurement resolution. However, when setting parameters, the \leftarrow and \rightarrow keys select the setting item, which is confirmed by pressing the Enter key.
- 4 Menu:
Sets measurement functions, such as frequency, level, burst, etc.
This menu changes automatically to the parameter setting condition, and changes numeric values and units.
- 5 Preset:
Returns each parameter to default setting
- 6 Hold, Restart:
The Hold key holds the measured value. When Hold is

ON, the key lamp is lit. The Restart key starts measurement over. When the Restart key is pressed when Hold is ON, the data is measured and held.

- 7 Frequency Acquisition:
Used at frequency measurement of Input 1. At Auto, the full frequency band is swept and the frequency of signals exceeding the specified level is measured. At Manual, the frequency in the allowable input frequency range centered on the preset frequency is measured.
- 8 Meas Mode:
At Burst, the burst signal width, period, and carrier frequency are measured (unrelated to Acquisition key setting, and change to manual measurement condition). Continuous wave measurement is performed in the CW mode.
- 9 Return to Meas:
Pressing this key after setting parameters returns to the normal measurement status (measurement screen).

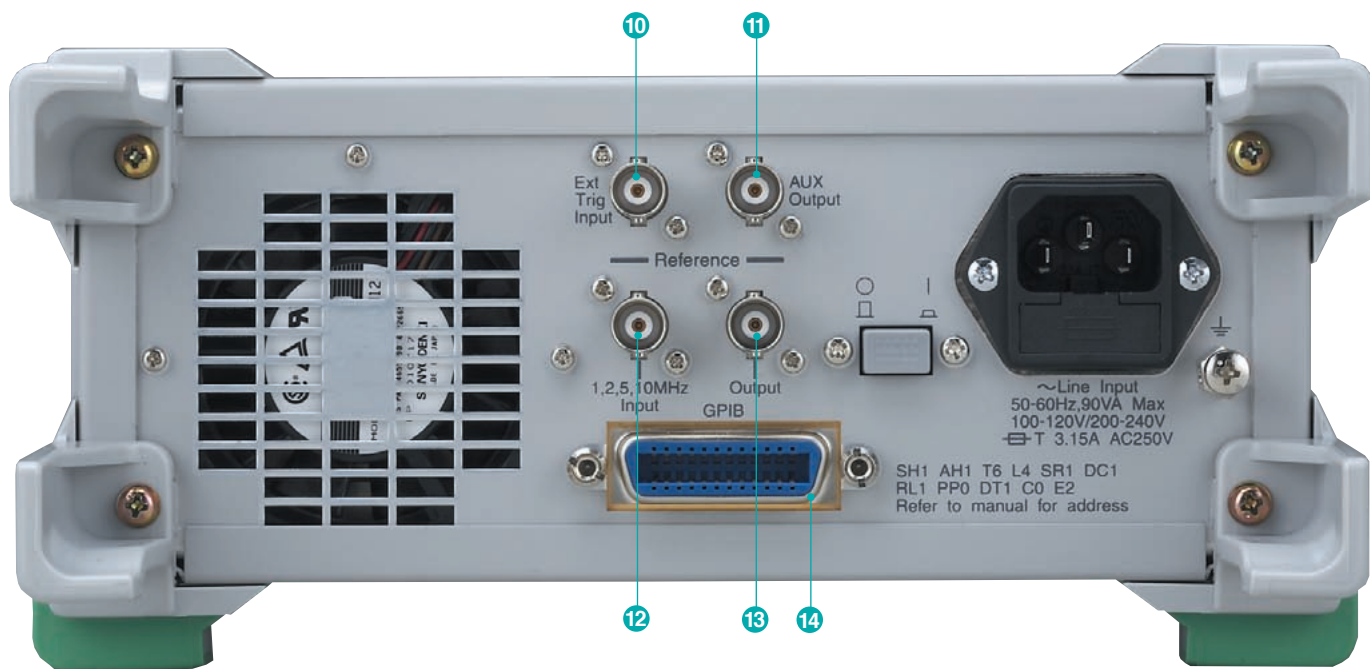


- 10 Ext Trig Input:
Measures frequency using external timing signal
- 11 AUX Output:
Outputs control signal for measurement function and set parameters
- 12 Reference Input:
Inputs external reference clock (1, 2, 5, 10 MHz)
- 13 Reference Output:
Outputs reference clock
- 14 GPIB Connector:
Connects GPIB cable

Specifications

• MF2400C Series Microwave Frequency Counter

Input	Frequency Range	Input 1 MF2412C: 600 MHz to 20 GHz MF2413C: 600 MHz to 27 GHz MF2414C: 600 MHz to 40 GHz Input 2 10 MHz to 1 GHz (50 Ω), 10 Hz to 10 MHz (1 MΩ)																
	Input Level Range (Sine Wave Input)	Input 1 -33 to 10 dBm (<12.4 GHz), -28 to 10 dBm (<20 GHz), -25 to 10 dBm (<27 GHz), [-44.6 + 0.741 x frequency (GHz)] to 10 dBm (≤40 GHz) Input 2 25 mVrms to 2 Vrms (50 Ω), 25 mVrms to 10 Vrms (1 MΩ)																
	Impedance, Coupling	Input 1: 50 Ω, AC coupled Input 2: 50 Ω or ≥1 MΩ (≤35 pF), AC coupled																
	Connector	Input 1 MF2412C: N-type, MF2413C: SMA-type, MF2414C: K-type Input 2: BNC-type																
Gating Function	Trigger Mode	Int: Triggered by measurement signal Ext: Triggered by external signal *Trigger level: 1.5 V ± (2 to 10 Vp-p), Trigger pulse width: ≥1 μs, Impedance: ≥100 Ω, Coupling: DC LINE: Triggered by AC line signal																
	Trigger Delay	20 ns to 0.1 s*1, Off (≤320 ns in 20 ns steps, and <1 μs in 40 ns steps variable; ≥1 μs in continuously variable as effective two digits)																
	Gate Width	100 ns to 0.1 s (<1 μs in 20 ns steps variable; ≥1 μs in continuously variable as effective two digits)																
Pulse Modulation Wave Measurement	Frequency Range	MF2412C: 600 MHz to 20 GHz MF2413C: 600 MHz to 27 GHz MF2414C: 600 MHz to 40 GHz																
	Pulse Width	340 ns to 0.1 s (NARROW), 1 μs to 0.1 s (WIDE)																
	Pulse Repetition Cycle	340 ns to 0.1 s (pulse off time: ≥240 ns)																
	Carrier Frequency Measurement*2	Max resolution: 1 kHz (pulse width: 100 ns to 1 μs), 100 Hz (pulse width: 1 to 10 μs), 10 Hz (pulse width: 10 to 100 μs), 1 Hz (pulse width: 100 μs to 1 ms), 0.1 Hz (pulse width: 1 to 100 ms) Measurement time: (T or Ts whichever is greater) x {1/(f _r x T _{GW})} ² *3 <table border="1"> <tr> <td>Resolution</td> <td>1 Hz</td> <td>10 Hz</td> <td>100 Hz</td> <td>1 kHz</td> <td>10 kHz</td> <td>100 kHz</td> <td>1 MHz</td> </tr> <tr> <td>Measurement time</td> <td>200 s</td> <td>20 s</td> <td>2 s</td> <td>200 ms</td> <td>20 ms</td> <td>5 ms</td> <td>5 ms</td> </tr> </table> <p>*Example of measurement time when measurement carrier frequency = 1 GHz, T = 2/f_r, and T_{GW} = 0.1f_r Accuracy: ±2 count ± time base accuracy x measurement frequency ± trigger accuracy ± residual error*5</p>	Resolution	1 Hz	10 Hz	100 Hz	1 kHz	10 kHz	100 kHz	1 MHz	Measurement time	200 s	20 s	2 s	200 ms	20 ms	5 ms	5 ms
	Resolution	1 Hz	10 Hz	100 Hz	1 kHz	10 kHz	100 kHz	1 MHz										
Measurement time	200 s	20 s	2 s	200 ms	20 ms	5 ms	5 ms											
Pulse Width Measurement	Resolution: 1 ns Accuracy: ±20 ns ± time base accuracy x measurement pulse width ± trigger accuracy (time) Unit: μs (fixed)																	
Pulse Period Measurement	Resolution: 1 ns Accuracy: ±20 ns ± time base accuracy x measurement period ± trigger accuracy (time) Unit: μs (fixed)																	
Carrier Wave Frequency Measurement	Resolution, Measurement Time	Input 1 NORMAL: 1 MHz/1 μs to 0.1 Hz/10 s FAST: 1 MHz/0.18 μs to 0.1 Hz/1.8 s (typ.) Input 2 10 MHz to 1 GHz (50 Ω): 1 MHz/1 μs to 0.1 Hz/10 s 10 Hz to 10 MHz (1 MΩ): 1 MHz to 0.001 Hz Measurement time shown on right																
	Measurement Accuracy	Input 1 NORMAL: ±1 count ± time base accuracy x measurement frequency ± residual error*4 FAST: ±1 count ± time base accuracy x measurement frequency ± trigger accuracy ± residual error*5 Input 2 10 MHz to 1 GHz: ±1 count ± time base accuracy x measurement frequency 10 Hz to 10 MHz: ±1 count ± time base accuracy x measurement frequency ± trigger accuracy																

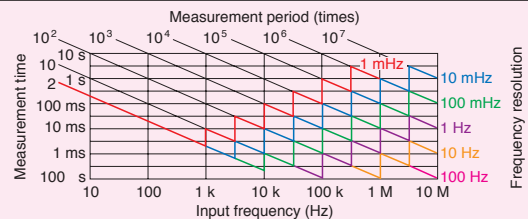

Auto/Manual Measurement	<p>Auto FM tolerance: 35 MHzp-p, Acquisition time: ≤ 50 ms</p> <p>Manual (CW measurement) Input frequency range: ± 30 MHz (600 MHz to 1 GHz), ± 40 MHz (≥ 1 GHz) Acquisition time: ≤ 15 ms</p> <p>Manual (Burst measurement) Input frequency range: ± 30 MHz (600 MHz to 1 GHz, pulse width mode: WIDE) ± 20 MHz (≥ 1 GHz, pulse width mode: NARROW) ± 40 MHz (≥ 1 GHz, pulse width mode: WIDE) Acquisition time: ≤ 15 ms</p>
Functions	<p>Template: Inputs at upper/lower limit of frequency, judged Go/No-Go Frequency offset: +offset, -offset, ppm Statistical processing: mean, maximum, minimum, p-p Save/recall: 10 panel settings (max)</p>
AUX Output	Output for Go/No-Go, count end, input level detection, internal gating, restart, and acquisition signal
Sample Rate	1 ms to 10 s (1-2-5 steps), hold
High-Speed Sample Period/Frequency Resolution	<p>Input 1: 10 μs/10 kHz, 100 μs/1 kHz, 1 ms/100 Hz Input 2: 10 μs/100 kHz, 100 μs/10 kHz, 1 ms/1 kHz *Measurement frequency: 100 MHz</p>
Memory Backup	Saved in backup memory at power off
Display	<p>Display digits: 12 digits and 1 digit (- mark) VFD: 256 x 64 dots</p>
Reference Crystal Oscillator	<p>Frequency: 10 MHz Warm-up: $\pm 5 \times 10^{-8}$/10 minutes Aging rate: $\pm 5 \times 10^{-9}$/day, $\pm 8 \times 10^{-8}$/year (after 24 h warm-up) Temperature characteristics: $\pm 5 \times 10^{-8}$ (0° to 50°C)</p>
External Reference Input	1, 2, 5, 10 MHz, Input voltage: 1 to 5 Vp-p (AC coupled), Input impedance: ≥ 1 k Ω
External Reference Output	1, 2, 5, 10 MHz*6, Output voltage: ≥ 2 Vp-p (open end, AC coupled), Output impedance: ≤ 400 Ω
External Control	GPIB (conforms to IEEE488.2 standards): SH1, AH1, T6, L4, SR1, RL1, PPO, DC1, DT1, C0, E2
Power	100 to 120 V/200 to 240 V (auto-switching), 50 to 60 Hz, ≤ 90 VA \leq , ≤ 80 VA
Operating Temperature	0° to 50°C
Dimensions and Mass	213 (W) x 88 (H) x 350 (D) mm, ≤ 5 kg
EMC	EN61326 EN61000-3-2
LVD	EN61010-1

*1 Delay time until counter started by trigger detection

*2 MANUAL measurement mode

*3 f_R : frequency resolution, T_{GW} : gate width, T_s : processing time (50 μ s), T: Pulse repetition cycle

*4 Measurement frequency (GHz)/10 count (rms), 5 GHz Measurement example: 5/10 = 0.5 count (rms)

*5 Measurement frequency (GHz)/2 count (rms), 5 GHz Measurement example: 5/10 = 0.5 count (rms)

*6 10 MHz when using internal reference signal; outputs signal based on this signal (1, 2, 5, 10 MHz) when using external reference signal

• Options: Crystal Oscillator

Option Number	MF2412C-003	MF2413C-003	MF2414C-003
Frequency	10 MHz		
Aging Rate	$\pm 5 \times 10^{-10}$ /day, $\pm 2 \times 10^{-8}$ /year *After power-on, with reference to frequency after 72 h		
Temperature Characteristics	$\pm 5 \times 10^{-9}$ -10° to 60°C (with reference to 25°C)		

Ordering Information

Please specify the model/order number, name and quantity when ordering.
The following name of articles is an order name. The actual name may differ name from the product.

Model/Order No.	Name
	- Main frame -
MF2412C	Microwave Frequency Counter (10 Hz to 20 GHz, N-J connector)
MF2413C	Microwave Frequency Counter (10 Hz to 27 GHz, SMA-J connector)
MF2414C	Microwave Frequency Counter (10 Hz to 40 GHz, K-J connector)
	- Standard accessories -
F0012	Power Cord, 2.5 m: 1 pc
W2897AE	Fuse, 3.15 A: 2 pcs
	MF2412C/2413C/2414C Operation Manual: 1 copy
	- Options -
MF2412C-003	Crystal Oscillator (5 x 10 ⁻¹⁰ /day)
MF2413C-003	Crystal Oscillator (5 x 10 ⁻¹⁰ /day)
MF2414C-003	Crystal Oscillator (5 x 10 ⁻¹⁰ /day)

*1: The K224B Coaxial Adapter prevents damage to the input connector.

*2: The MF2400C series has the MP612A Fuse Holder (with MP613A Fuse Element) to prevent over-power input.

In addition, the MP612A Fuse Holder has an N-type connector, so an adapter matching the coupled connector type is required.

Model/Order No.	Name
	- Optional accessories -
K224B*1,*3	Coaxial Adapter (K-P • K-J, SMA compatible, DC to 40 GHz, SWR: 1.2)
34RKNF50*3	Coaxial Adapter (ruggedized K-P • N-J, DC to 20 GHz, SWR: 1.25)
J0527*3	Coaxial Cord (K-P • K-P), 2 ft
J0127A	Coaxial Cord (BNC-P • RG-58A/U • BNC-P), 1 m
J0853*4	Coaxial Cord (N-P • SF104P • N-P), 2 m
J0854*5	Coaxial Cord (APC3.5-P • SF104P • APC3.5-P), 2 m
MP612A*2	Fuse Holder (N-P • N-J, DC to 1 GHz)
MP613A*2	Fuse Element (DC to 1 GHz, Power rating: +17 dBm, Fail-safe rating: ≥+35 dBm)
J0007	GPIB Cable, 1 m
J0008	GPIB Cable, 2 m
B0409	Carrying Case (With B0329L Protection Cover)
B0598A	Carrying Bag (soft type, with B0329L Protection Cover)
B0390G	Rack Mount Kit (19" type, one unit)
B0411A	Rack Mount Kit (19" type, two units, side-by-side)
B0329L	Protection Cover

*3: MF2414C Parts

*4: MF2412C Parts

*5: MF2413C and MF2414C Parts

Anritsu

Specifications are subject to change without notice.

Anritsu Corporation

5-1-1 Onna, Atsugi-shi, Kanagawa, 243-8555 Japan
Phone: +81-46-223-1111
Fax: +81-46-296-1264

• U.S.A.

Anritsu Company

1155 East Collins Blvd., Suite 100, Richardson,
TX 75081, U.S.A.
Toll Free: 1-800-267-4878
Phone: +1-972-644-1777
Fax: +1-972-671-1877

• Canada

Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120, Kanata,
Ontario K2V 1C3, Canada
Phone: +1-613-591-2003
Fax: +1-613-591-1006

• Brazil

Anritsu Eletrônica Ltda.

Praca Amadeu Amaral, 27 - 1 Andar
01327-010-Paraisópolis, São Paulo-Brazil
Phone: +55-11-3283-2511
Fax: +55-11-3288-6940

• Mexico

Anritsu Company, S.A. de C.V.

Av. Ejército Nacional No. 579 Piso 9, Col. Granada
11520 México, D.F., México
Phone: +52-55-1101-2370
Fax: +52-55-5254-3147

• U.K.

Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K.
Phone: +44-1582-433200
Fax: +44-1582-731303

• France

Anritsu S.A.

16/18 avenue du Québec-SILIC 720
91961 COURTABŒUF CEDEX, France
Phone: +33-1-60-92-15-50
Fax: +33-1-64-46-10-65

• Germany

Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1
81829 München, Germany
Phone: +49-89-442308-0
Fax: +49-89-442308-55

• Italy

Anritsu S.p.A.

Via Elio Vittorini 129, 00144 Roma, Italy
Phone: +39-6-509-9711
Fax: +39-6-502-2425

• Sweden

Anritsu AB

Borgarfjordsgatan 13, 164 40 KISTA, Sweden
Phone: +46-8-534-707-00
Fax: +46-8-534-707-30

• Finland

Anritsu AB

Teknobulevardi 3-5, FI-01530 VANTAA, Finland
Phone: +358-20-741-8100
Fax: +358-20-741-8111

• Denmark

Anritsu A/S

Kirkebjerg Allé 90, DK-2605 Brøndby, Denmark
Phone: +45-72112200
Fax: +45-72112210

• Spain

Anritsu EMEA Ltd.

Oficina de Representación en España

Edificio Veganova
Avda de la Vega, n° 1 (edf 8, pl 1, of 8)
28108 ALCOBENDAS - Madrid, Spain
Phone: +34-914905761
Fax: +34-914905762

• Russia

Anritsu EMEA Ltd.

Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor.
Russia, 125009, Moscow
Phone: +7-495-363-1694
Fax: +7-495-935-8962

• United Arab Emirates

Anritsu EMEA Ltd.

Dubai Liaison Office

P O Box 500413 - Dubai Internet City
Al Thuraya Building, Tower 1, Suit 701, 7th Floor
Dubai, United Arab Emirates
Phone: +971-4-3670352
Fax: +971-4-3688460

• Singapore

Anritsu Pte. Ltd.

60 Alexandra Terrace, #02-08, The Comtech (Lobby A)
Singapore 118502
Phone: +65-6282-2400
Fax: +65-6282-2533

• India

Anritsu Pte. Ltd.

India Branch Office

3rd Floor, Shri Lakshminarayan Niwas, #2726,
HAL 3rd Stage, Bangalore - 560 038, India
Phone: +91-80-4058-1300
Fax: +91-80-4058-1301

• P.R. China (Hong Kong)

Anritsu Company Ltd.

Units 4 & 5, 28th Floor, Greenfield Tower, Concordia Plaza,
No. 1 Science Museum Road, Tsim Sha Tsui East,
Kowloon, Hong Kong
Phone: +852-2301-4980
Fax: +852-2301-3545

• P.R. China (Beijing)

Anritsu Company Ltd.

Beijing Representative Office

Room 1515, Beijing Fortune Building,
No. 5, Dong-San-Huan Bei Road,
Chao-Yang District, Beijing 10004, P.R. China
Phone: +86-10-6590-9230
Fax: +86-10-6590-9235

• Korea

Anritsu Corporation, Ltd.

8F Hyunjuk Building, 832-41, Yeoksam Dong,
Kangnam-ku, Seoul, 135-080, Korea
Phone: +82-2-553-6603
Fax: +82-2-553-6604

• Australia

Anritsu Pty. Ltd.

Unit 21/270 Ferntree Gully Road, Notting Hill,
Victoria 3168, Australia
Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

• Taiwan

Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd., Taipei 114, Taiwan
Phone: +886-2-8751-1816
Fax: +886-2-8751-1817