

CHAPTER

52

DOORS



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 52
DOORS

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
52-EFFECTIVE PAGES		1		Aug 05/2009	52-71-14		1		Jan 21/2005
		2		BLANK					
52-CONTENTS		1		Mar 14/2007					
		2		Jun 28/2006					
52-ALPHABETICAL INDEX		1		Jan 21/2005					
		2		BLANK					
52-11-11		1		Jan 21/2005					
52-11-12		1		Jan 21/2005					
		2		Jan 21/2005					
52-11-13		1		Jan 21/2005					
52-34-11		1		Jan 21/2005					
52-34-12		1		Jan 21/2005					
		2		Jan 21/2005					
52-34-13		1		Jan 21/2005					
52-35-11		1		Jan 21/2005					
52-35-12		1		Jan 21/2005					
		2		Jan 21/2005					
52-35-13		1		Jan 21/2005					
		2		Jan 21/2005					
52-51-11		1		Mar 09/2006					
		1.1		Jan 21/2005					
		1.2		Mar 14/2007					
		1.3		Mar 14/2007					
		1.4		Mar 09/2006					
		1.5		Mar 09/2006					
		1.6		Mar 09/2006					
		1.7		Mar 09/2006					
		1.8		Mar 09/2006					
		2.1		Mar 09/2006					
		3.1		Mar 09/2006					
52-71-11		1		Jan 21/2005					
52-71-12		1		Jan 21/2005					
		2		Jan 21/2005					
		3		Jan 21/2005					
52-71-13		1		Jan 21/2005					

A = Added, R = Revised, D = Deleted, O = Overflow

52-EFFECTIVE PAGES

Page 1
Aug 05/2009

D280T132



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 52
DOORS

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<u>ENTRY/SERVICE DOORS</u>						
FORWARD ENTRY DOOR- POWER	52-11-11		1		Jan 21/2005	ALL
FORWARD ENTRY DOOR- CONTROL	52-11-12		1		Jan 21/2005	050-099 150-199
			2		Jan 21/2005	275-299
FORWARD ENTRY DOOR- SENSORS	52-11-13		1		Jan 21/2005	ALL
<u>STANDARD FORWARD CARGO DOOR</u>						
FORWARD CARGO DOOR- POWER	52-34-11		1		Jan 21/2005	ALL
FORWARD CARGO DOOR- CONTROL	52-34-12		1		Jan 21/2005	050-099
			2		Jan 21/2005	150-199 275-299
FORWARD CARGO DOOR- SENSORS	52-34-13		1		Jan 21/2005	ALL
<u>STANDARD AFT CARGO DOOR</u>						
AFT CARGO DOOR- POWER	52-35-11		1		Jan 21/2005	ALL
AFT CARGO DOOR- CONTROL	52-35-12		1		Jan 21/2005	050-099
			2		Jan 21/2005	150-199 275-299
AFT CARGO DOOR- SENSORS	52-35-13		1		Jan 21/2005	050-099
			2		Jan 21/2005	150-199 275-299
<u>FLIGHT COMPARTMENT DOOR</u>						
DOOR LOCK- FLIGHT COMPARTMENT	52-51-11		1		Mar 09/2006	050-099 151-152 154 156 162-199 275
			1.1		Jan 21/2005	050-051
			1.2		Mar 14/2007	151-152 275
			1.3		Mar 14/2007	154
			1.4		Mar 09/2006	156
			1.5		Mar 09/2006	162
			1.6		Mar 09/2006	163-165
			1.7		Mar 09/2006	166
			1.8		Mar 09/2006	167
			2.1		Mar 09/2006	150 153

52-CONTENTS



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 52 DOORS

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
DOOR LOCK- FLIGHT COMPARTMENT (cont.)	52-51-11		3.1		Mar 09/2006	155 157 276-280
<u>DOOR WARNING</u>						
DOOR WARNING- ENTRY DOORS	52-71-11		1		Jan 21/2005	ALL
DOOR WARNING- WING & SLIDE DOORS	52-71-12		1		Jan 21/2005	050-099
			2		Jan 21/2005	150-152
			3		Jan 21/2005	153-199 275-299
DOOR WARNING- CARGO DOORS	52-71-13		1		Jan 21/2005	ALL
DOOR WARNING- HATCHES	52-71-14		1		Jan 21/2005	ALL

52-CONTENTS

Page 2
Jun 28/2006

D280T132



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 52 DOORS


CH-SC-SU	Title
52-35-12	AFT CARGO DOOR- CONTROL
52-35-11	AFT CARGO DOOR- POWER
52-35-13	AFT CARGO DOOR- SENSORS
52-51-11	DOOR LOCK- FLIGHT COMPARTMENT
52-71-13	DOOR WARNING- CARGO DOORS
52-71-11	DOOR WARNING- ENTRY DOORS
52-71-14	DOOR WARNING- HATCHES
52-71-12	DOOR WARNING- WING & SLIDE DOORS
52-34-12	FORWARD CARGO DOOR- CONTROL
52-34-11	FORWARD CARGO DOOR- POWER
52-34-13	FORWARD CARGO DOOR- SENSORS
52-11-12	FORWARD ENTRY DOOR- CONTROL
52-11-11	FORWARD ENTRY DOOR- POWER
52-11-13	FORWARD ENTRY DOOR- SENSORS

52-ALPHABETICAL INDEX

D280T132

Page 1
Jan 21/2005

2

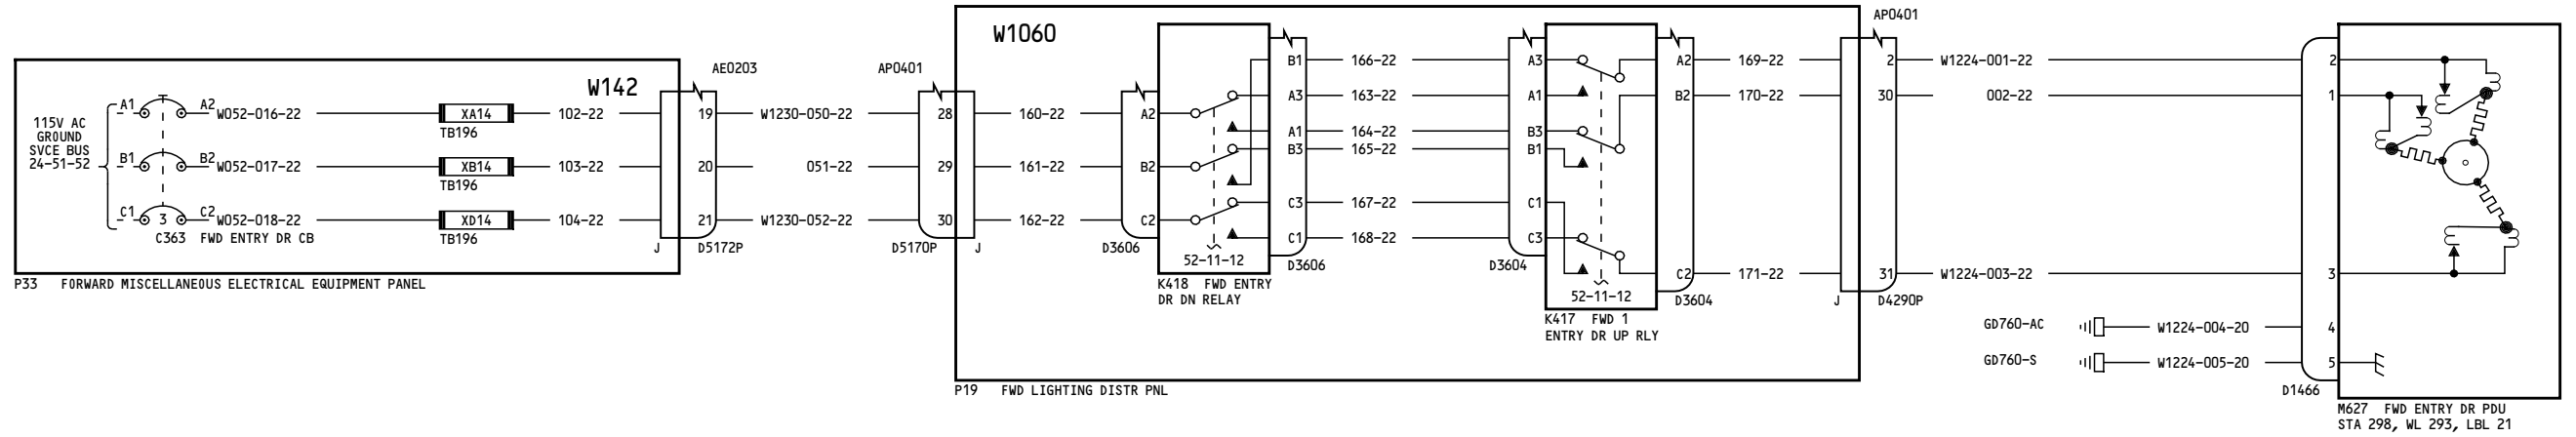

ALL	FORWARD ENTRY DOOR-POWER
	D280T132

52-11-11


Page 1

Jan 21/2005

52-11-11

Page 1

Jan 21/2005

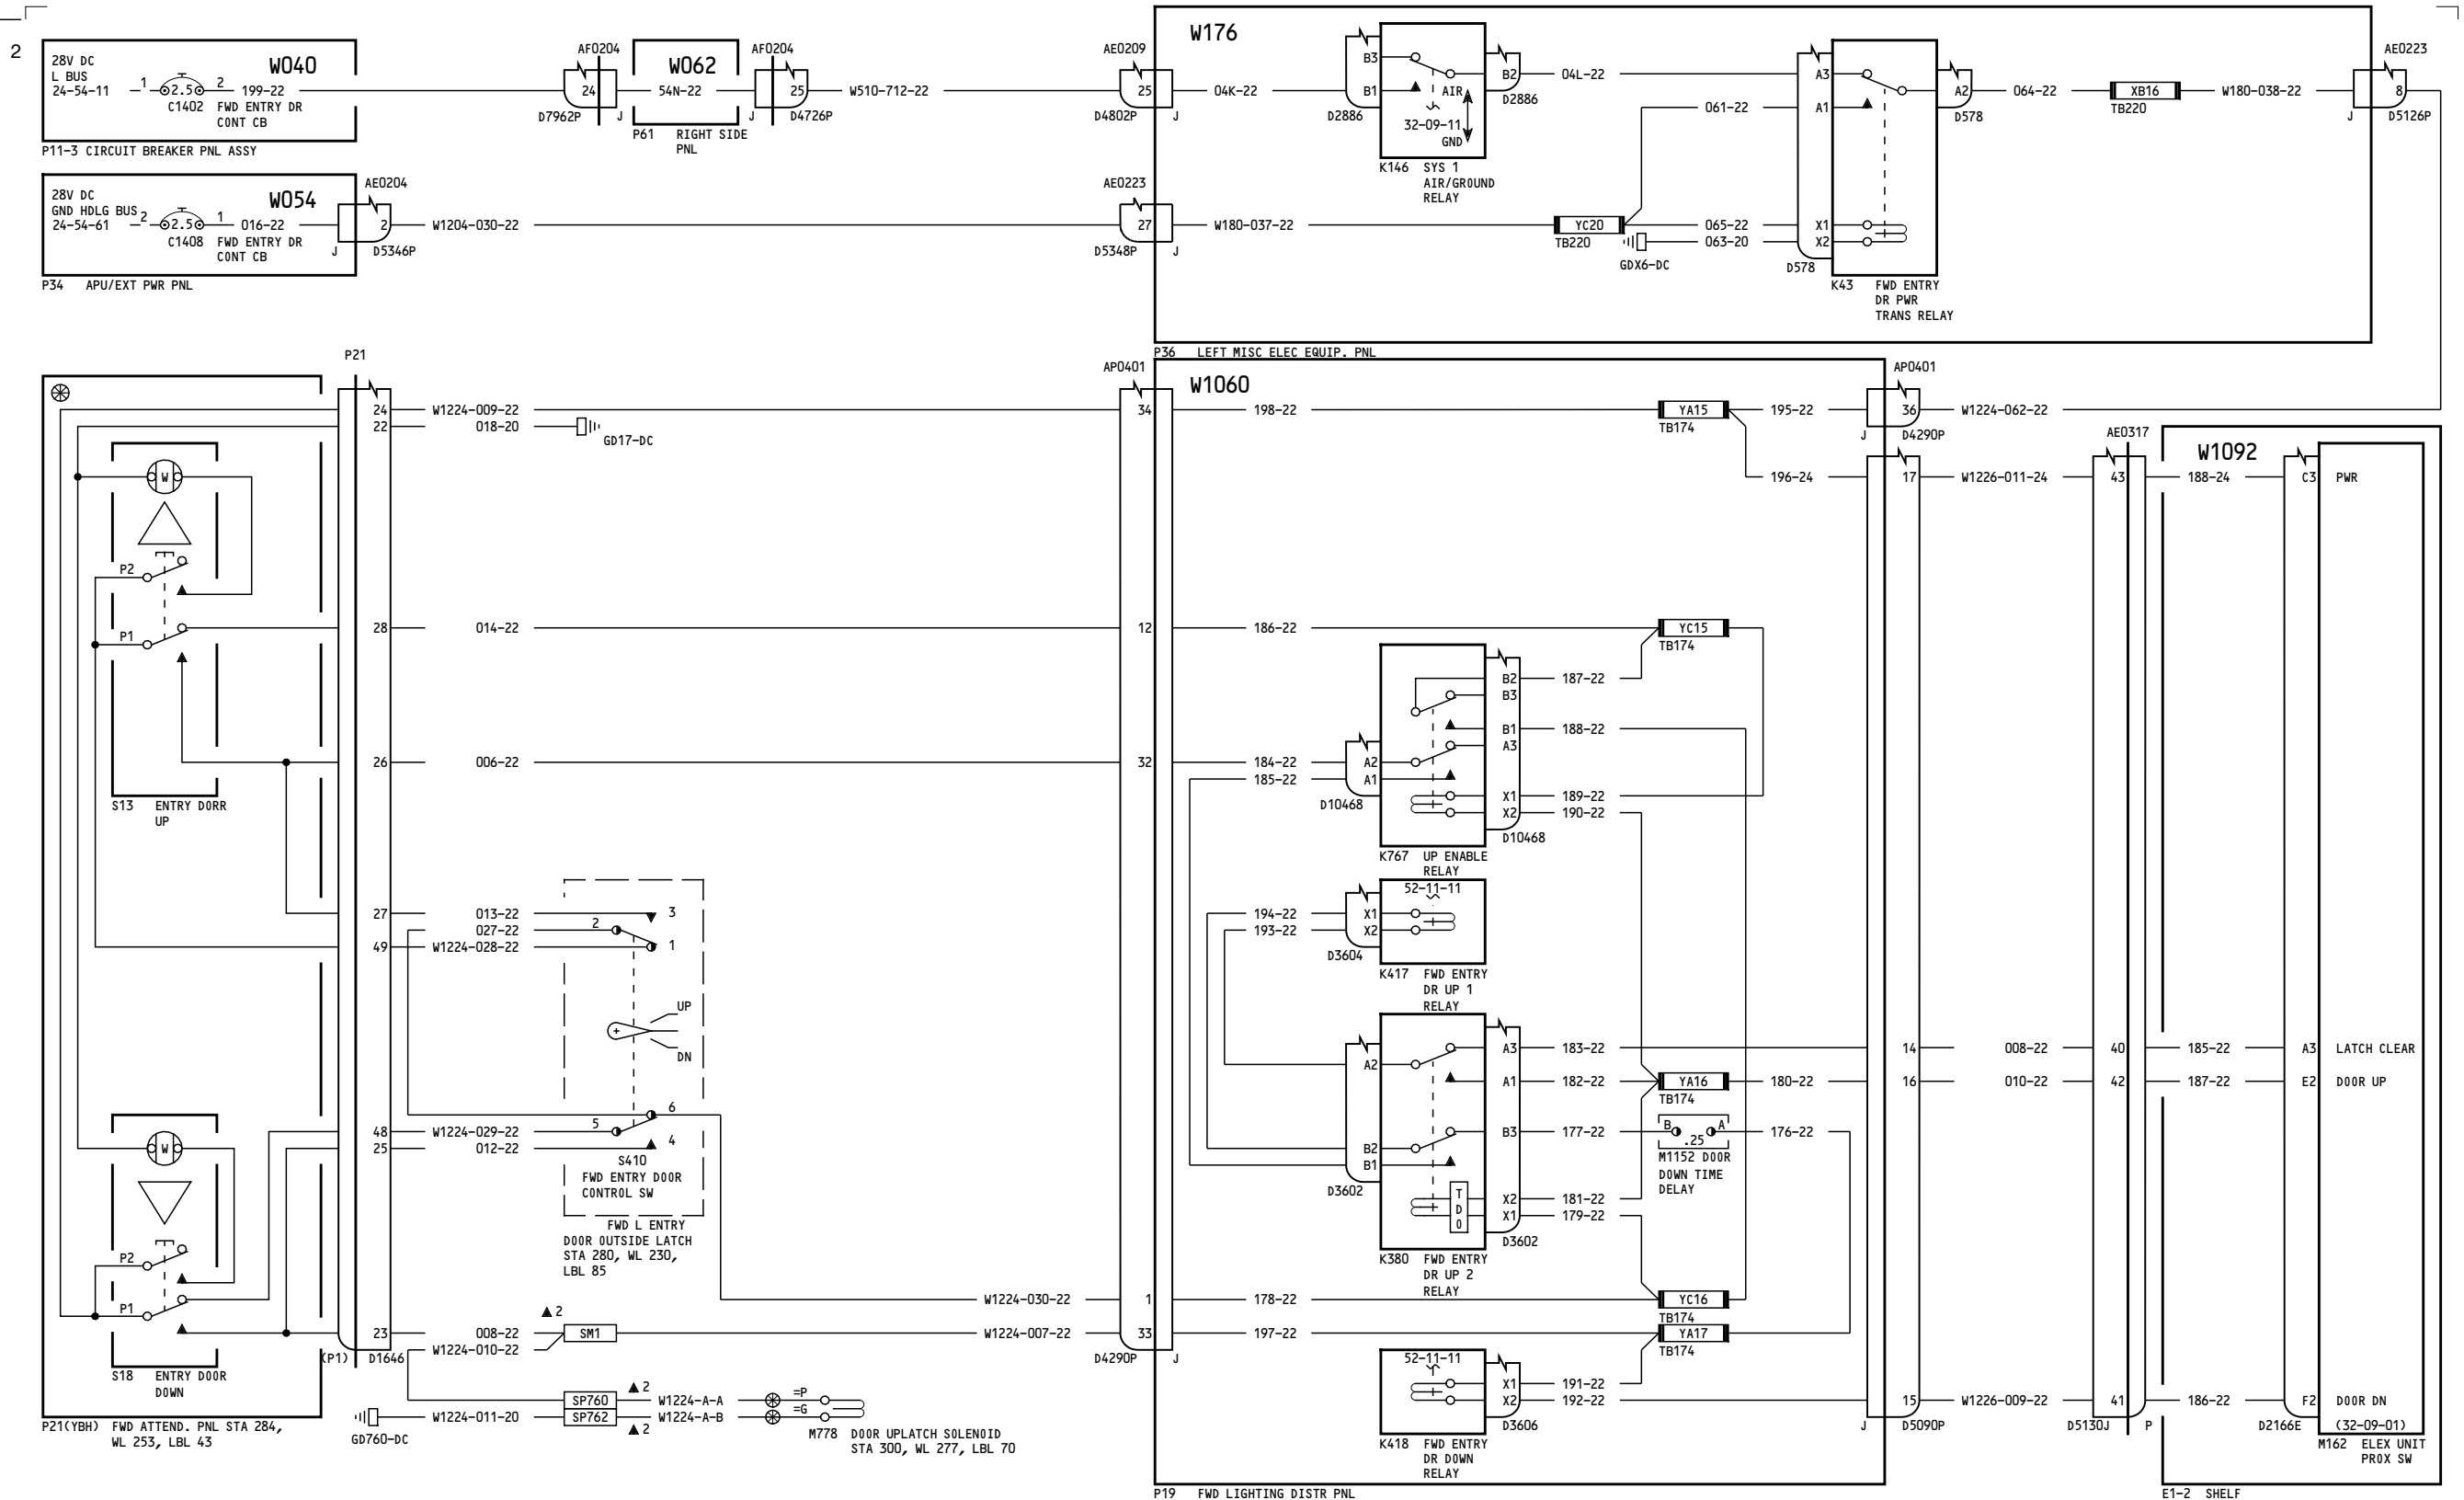

050-099, 150-199

FORWARD ENTRY DOOR-CONTROL

52-11-12

Page 1


D280T132

Jan 21/2005

52-11-12

Page 1

Jan 21/2005

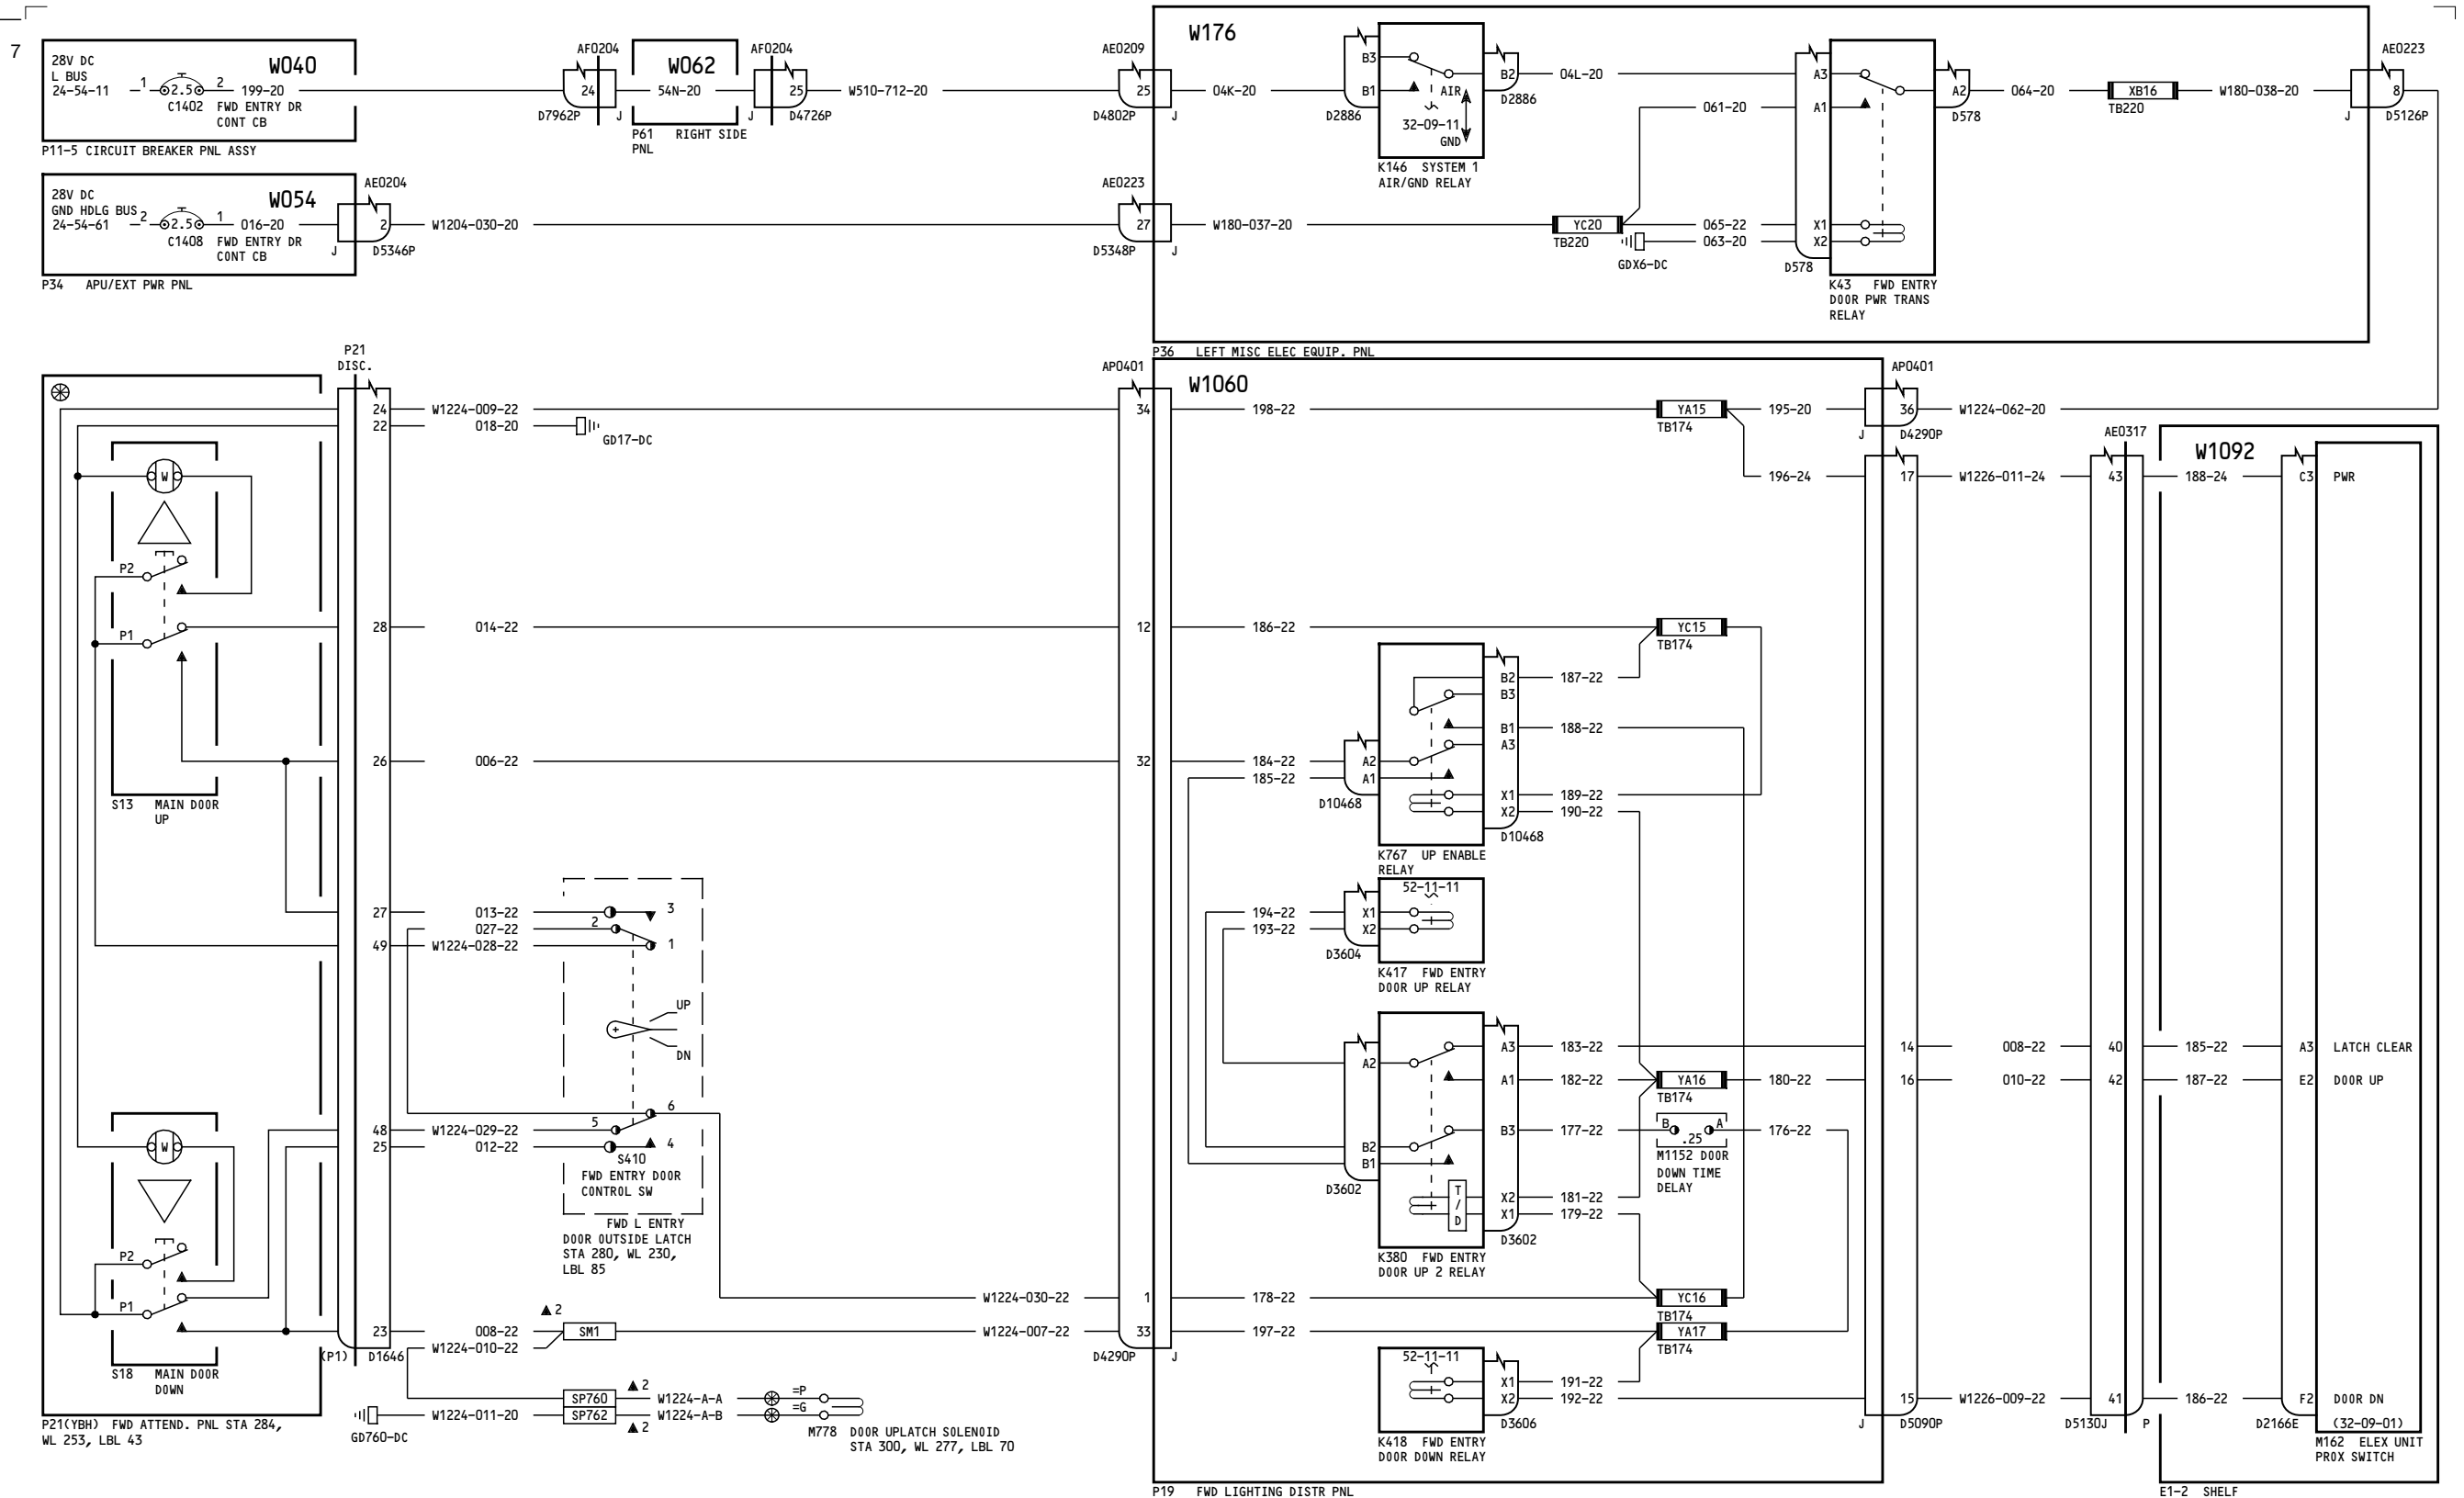

275-299

FORWARD ENTRY DOOR-CONTROL

52-11-12

Page 2


D280T132

Jan 21/2005

52-11-12

Page 2

Jan 21/2005

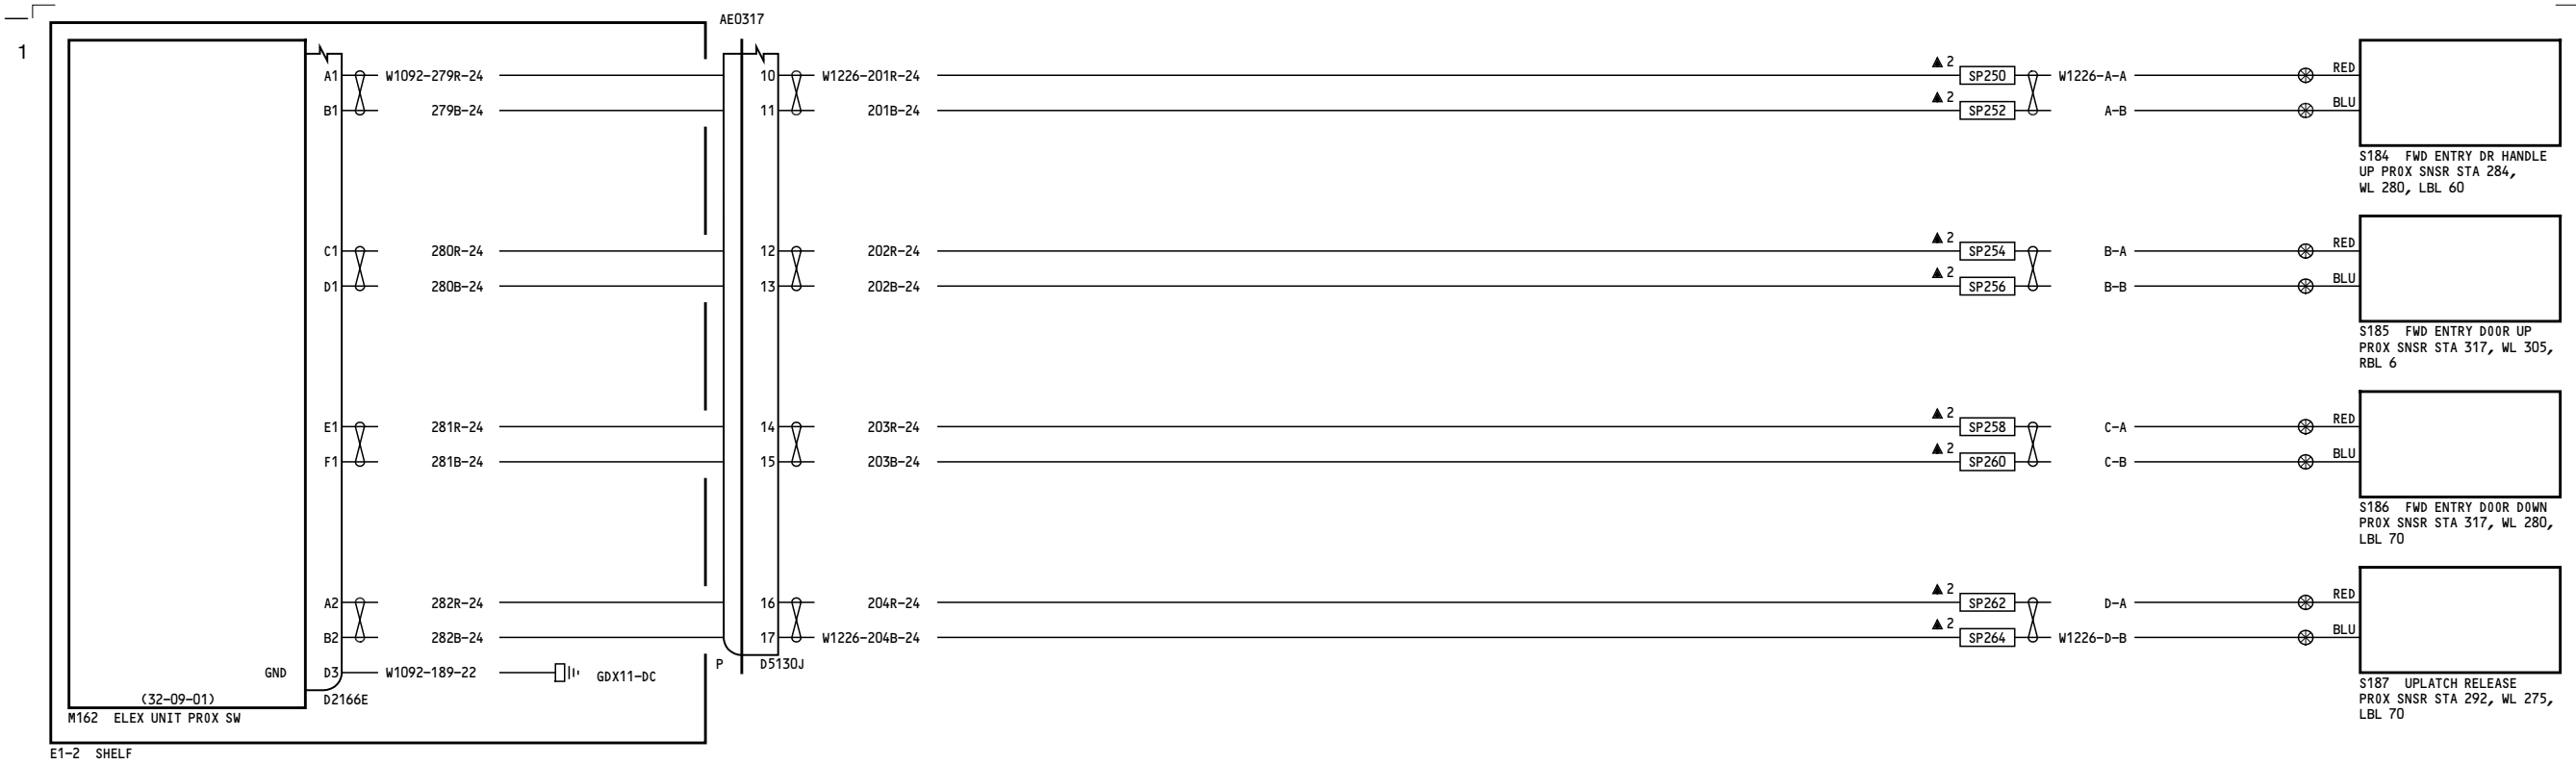

ALL	FORWARD ENTRY DOOR-SENSORS
	D280T132

52-11-13


Page 1

Jan 21/2005

52-11-13

Page 1

Jan 21/2005

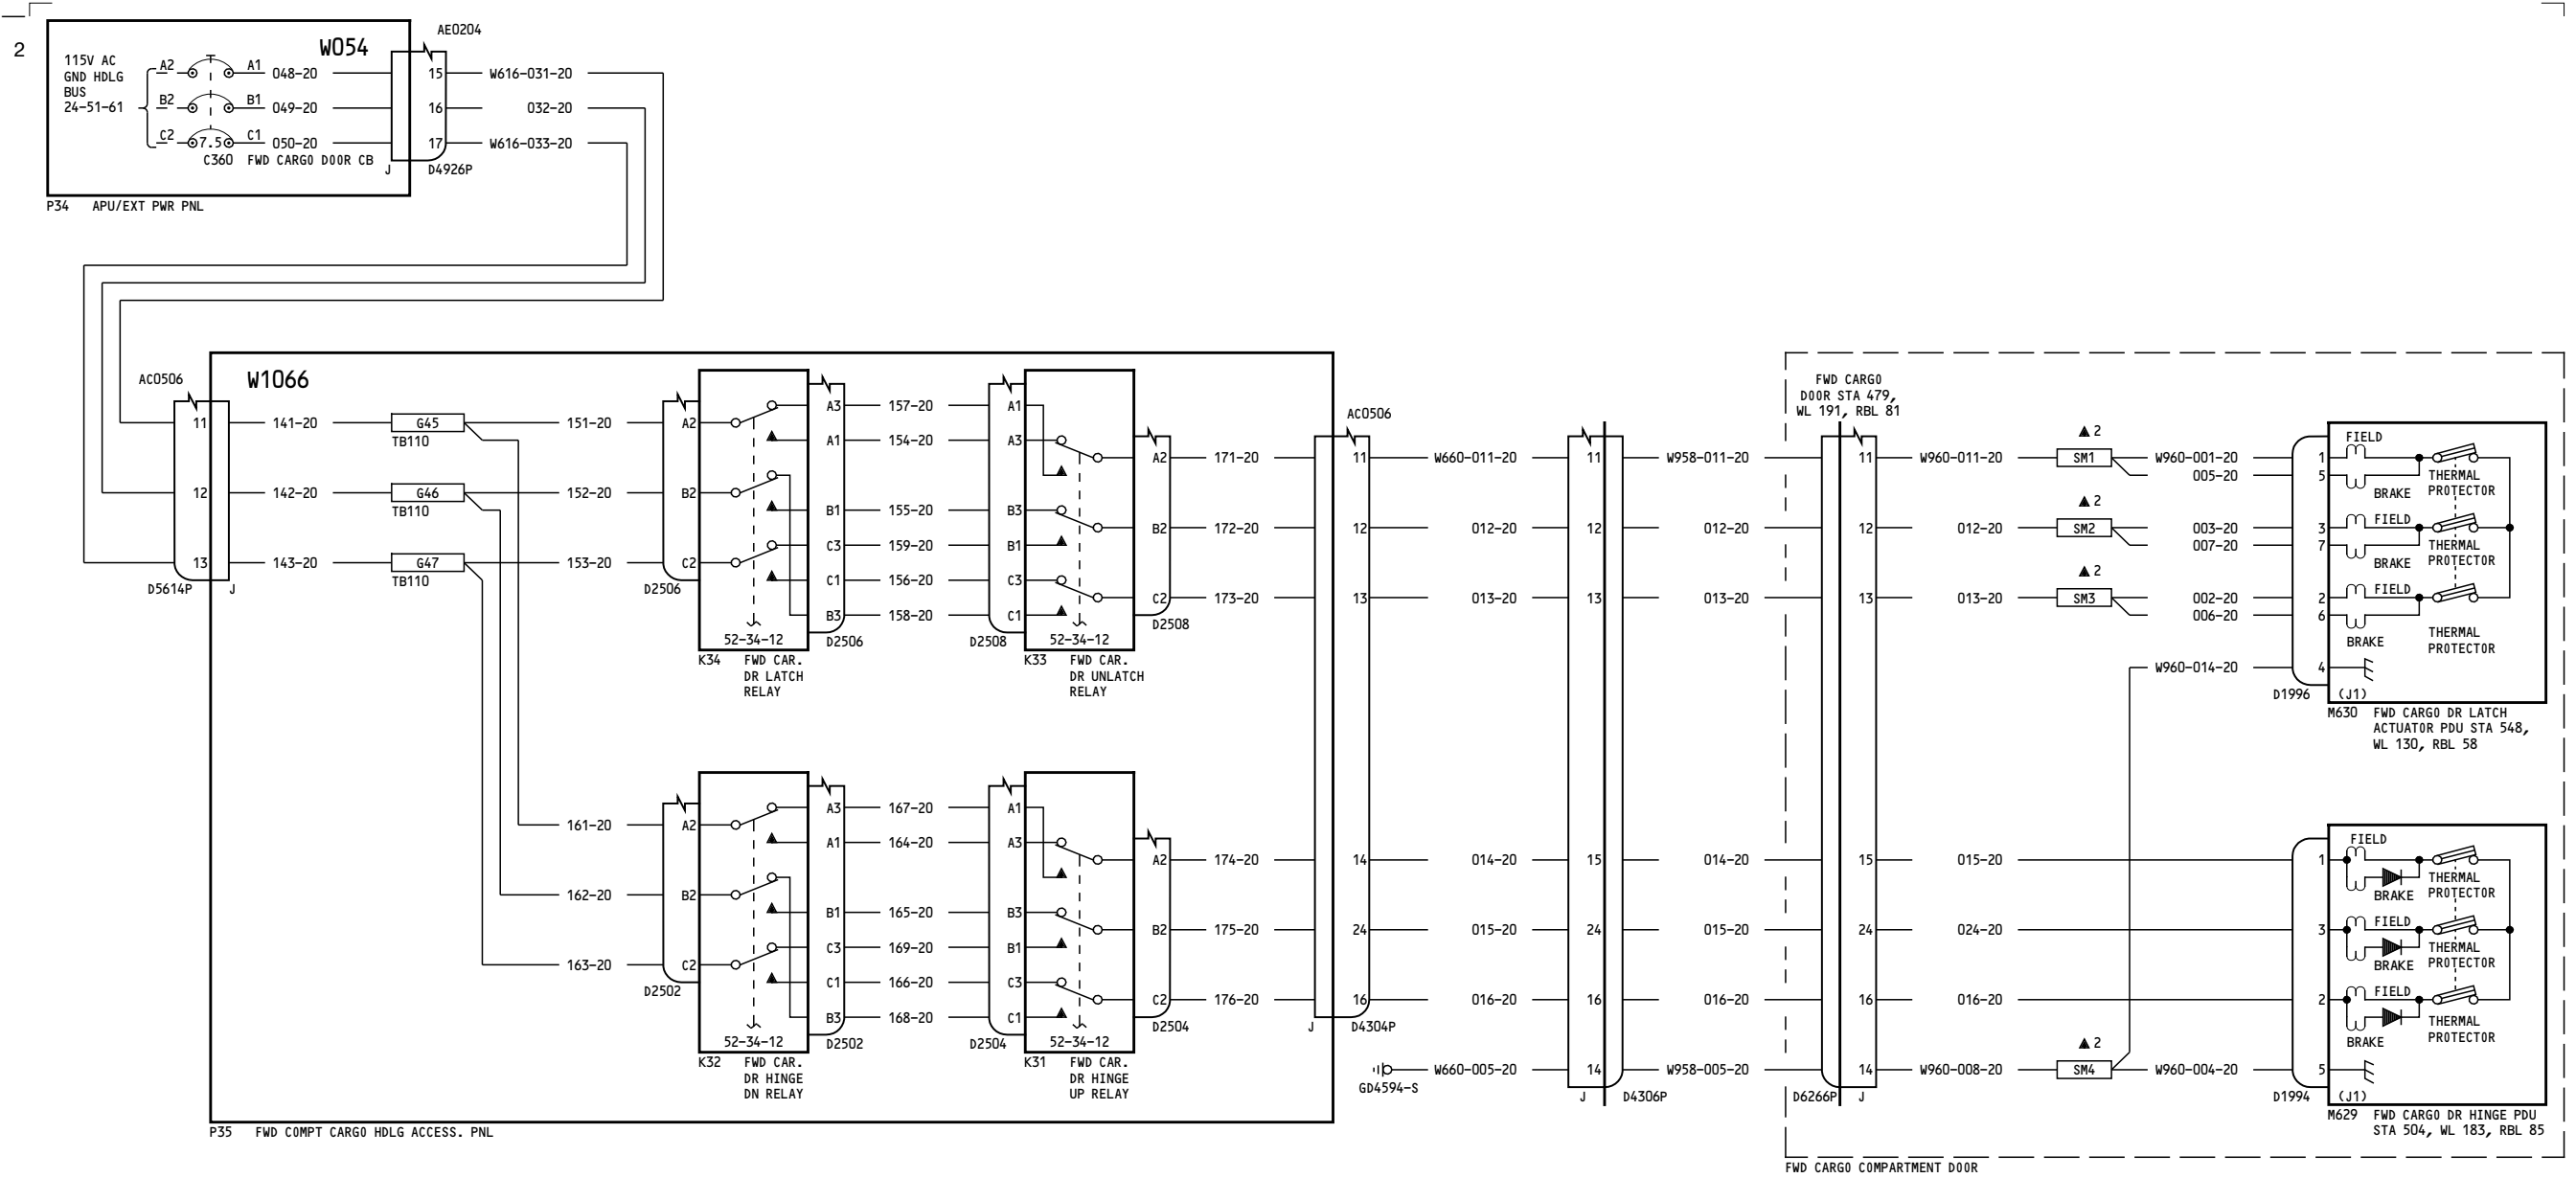

ALL

**FORWARD CARGO DOOR-
POWER**

52-34-11

Page 1


D280T132

Jan 21/2005

52-34-11

Page 1

Jan 21/2005

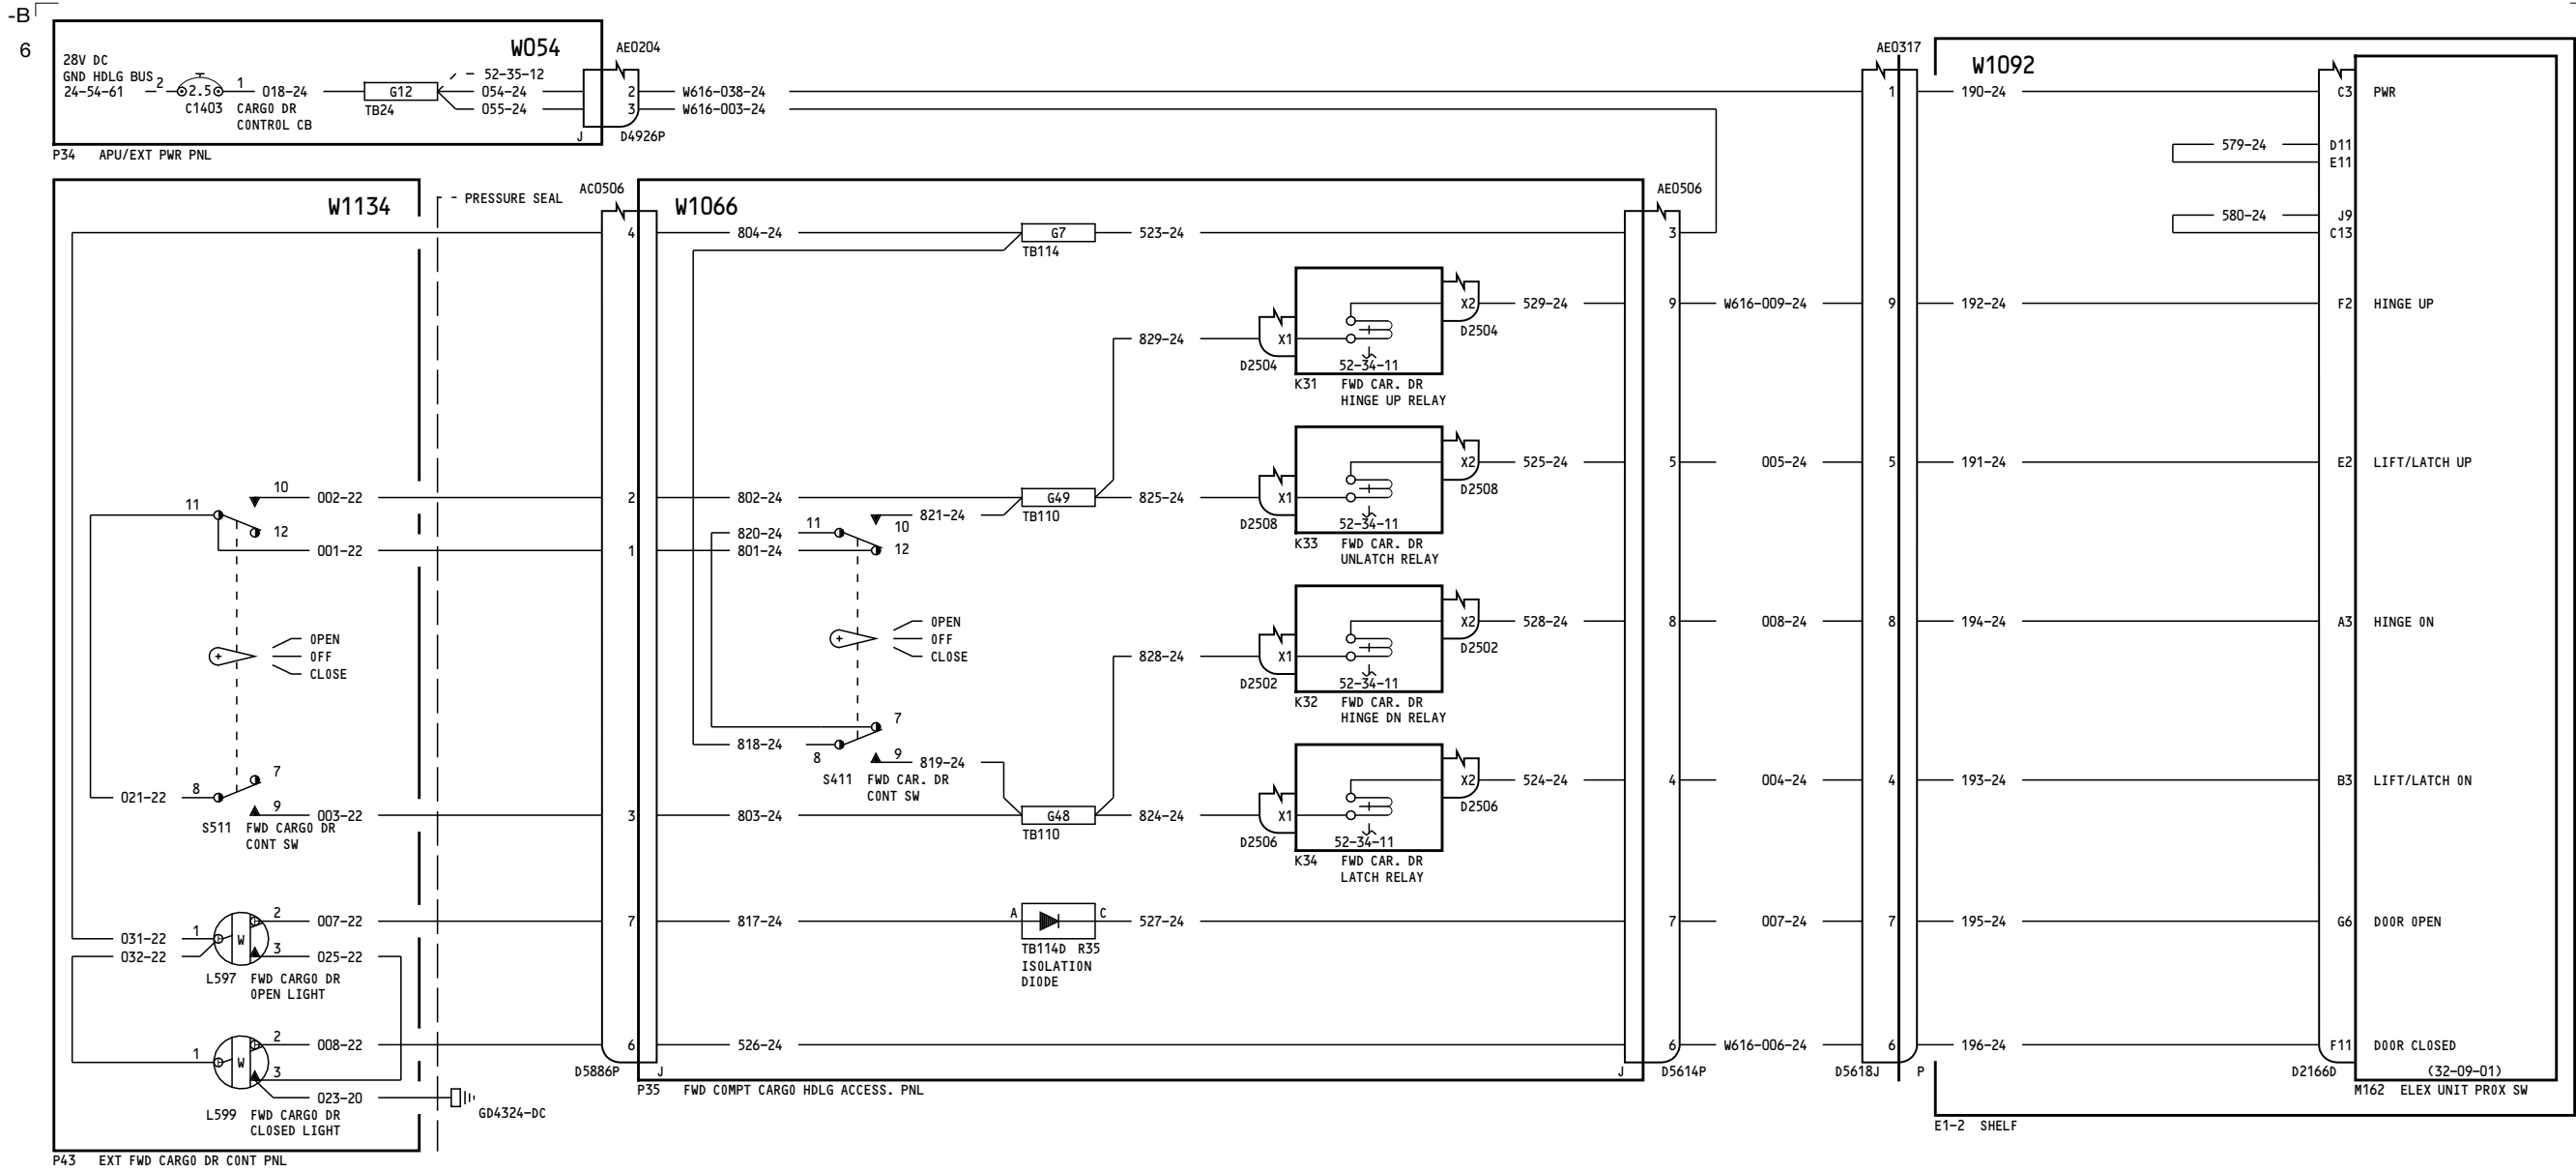

050-099

FORWARD CARGO DOOR-CONTROL

52-34-12

Page 1


D280T132


Jan 21/2005

52-34-12

Page 1

Jan 21/2005

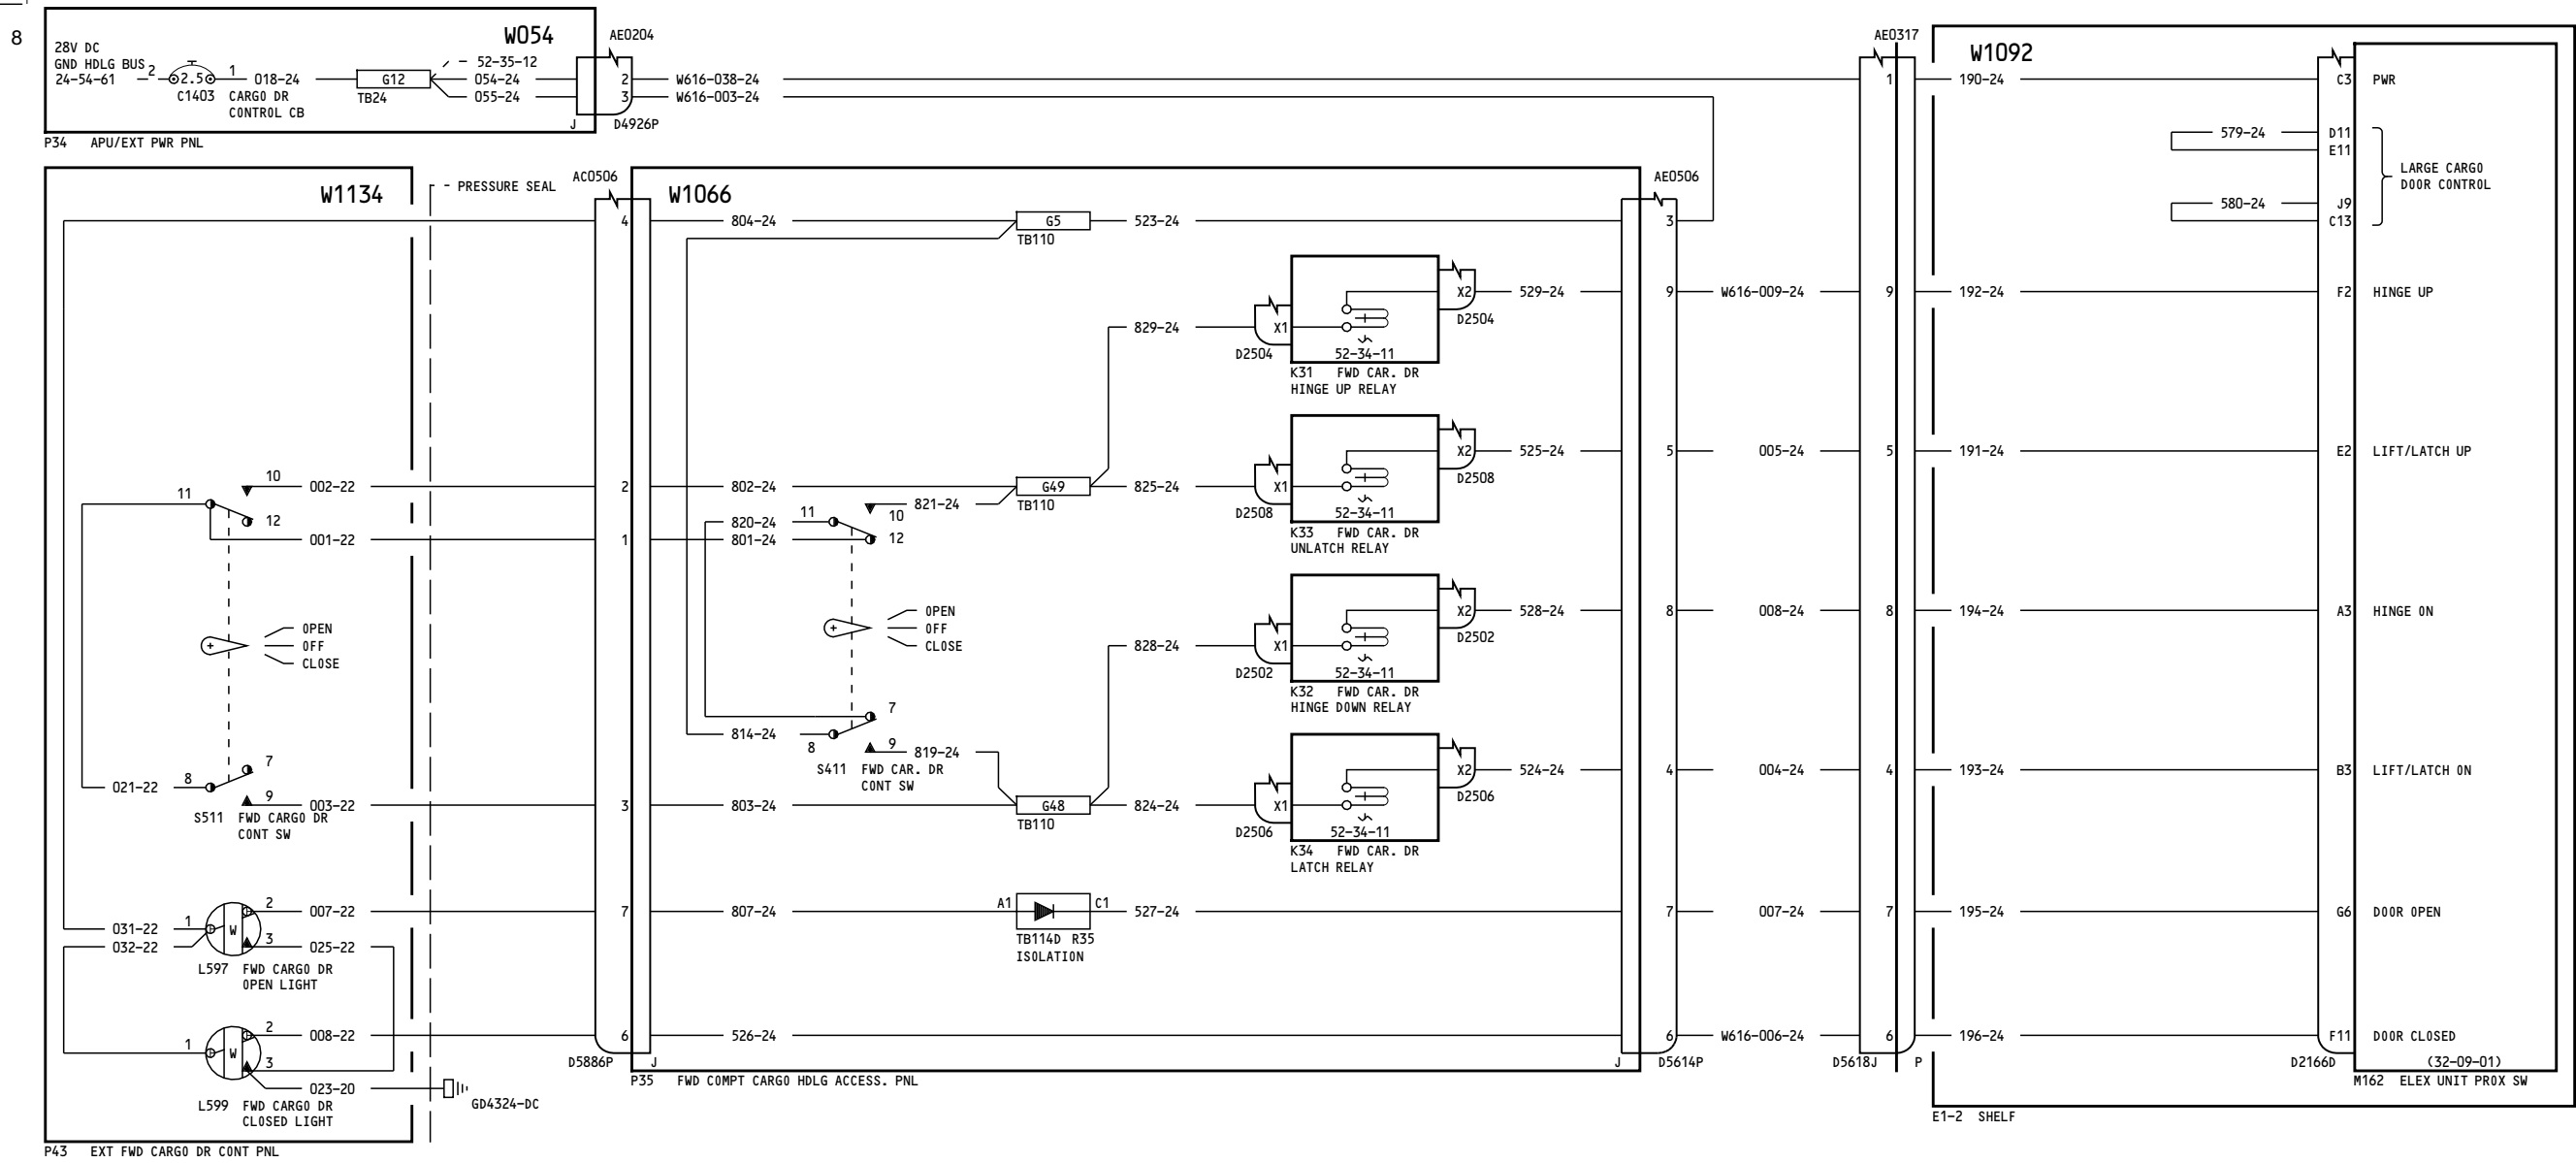

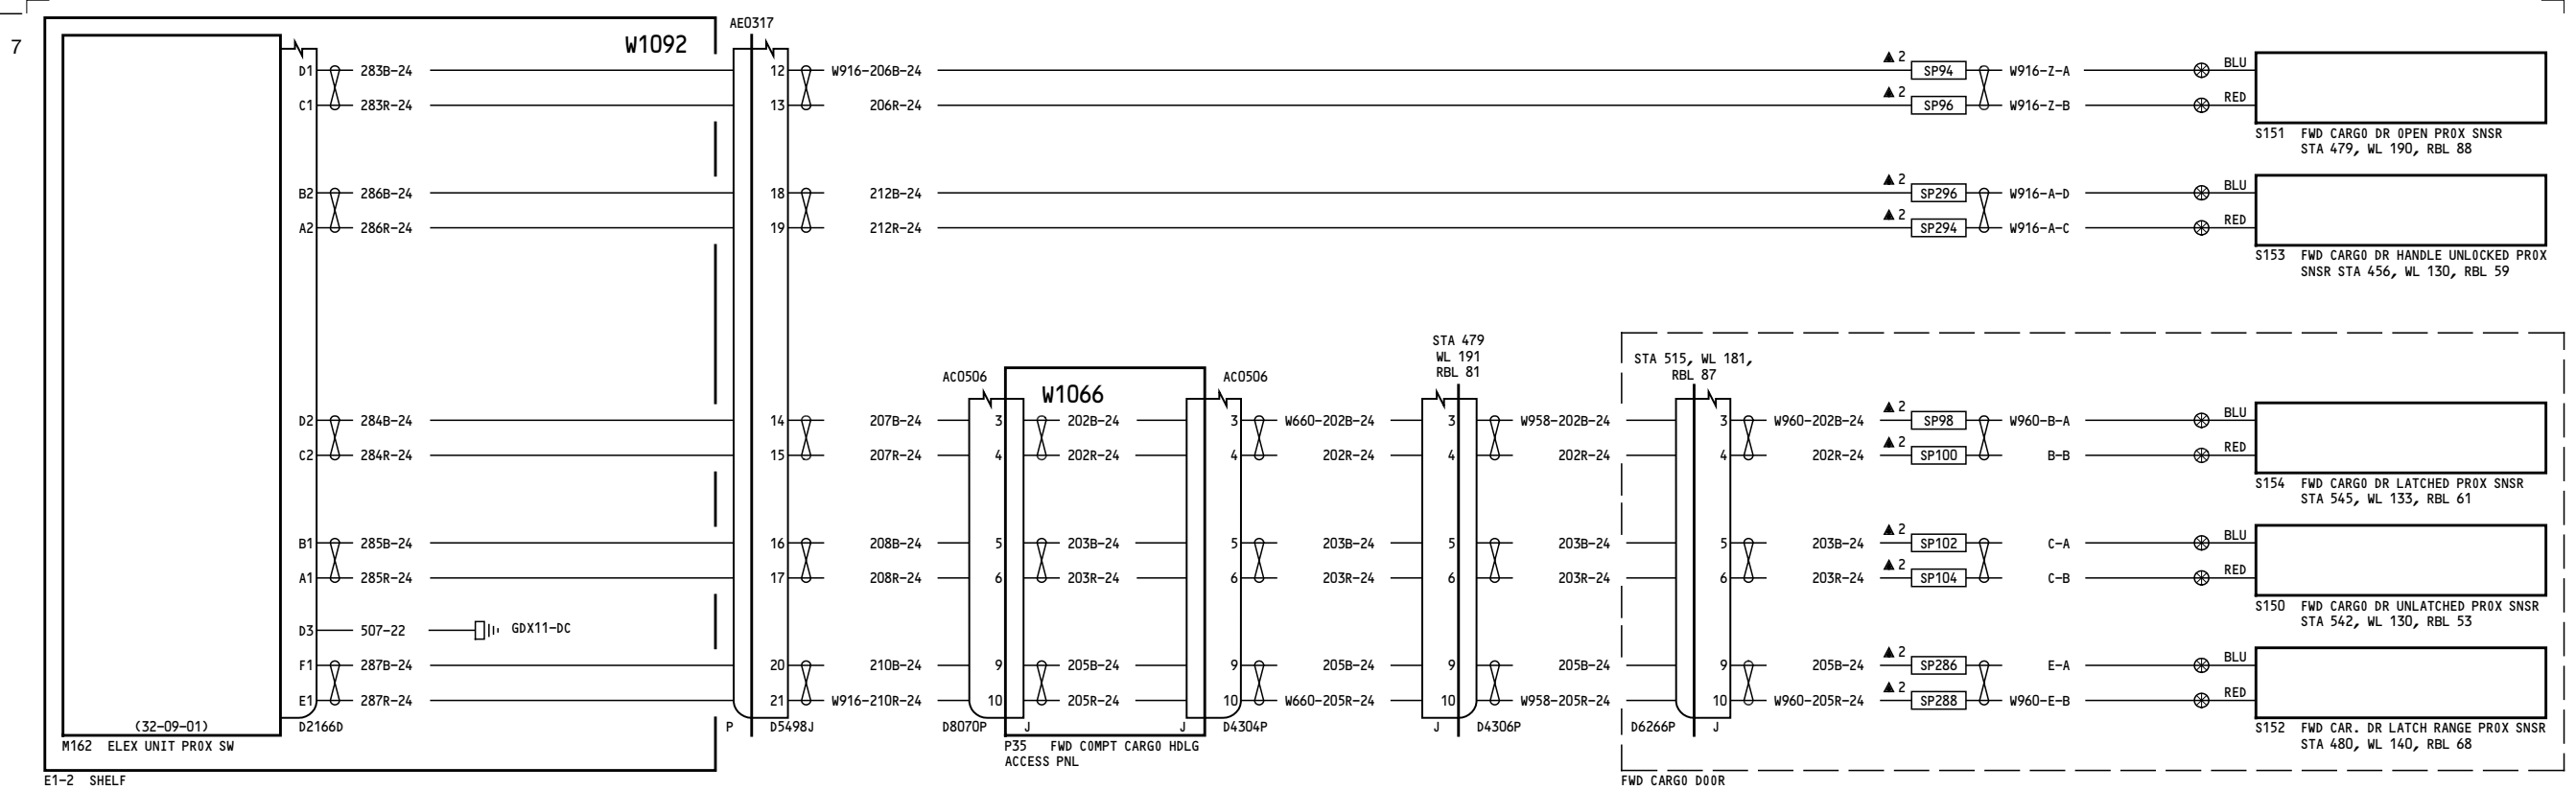

ALL

FORWARD CARGO DOOR-SENSORS

D280T132

52-34-13


Page 1

Jan 21/2005


52-34-13

Page 1

Jan 21/2005

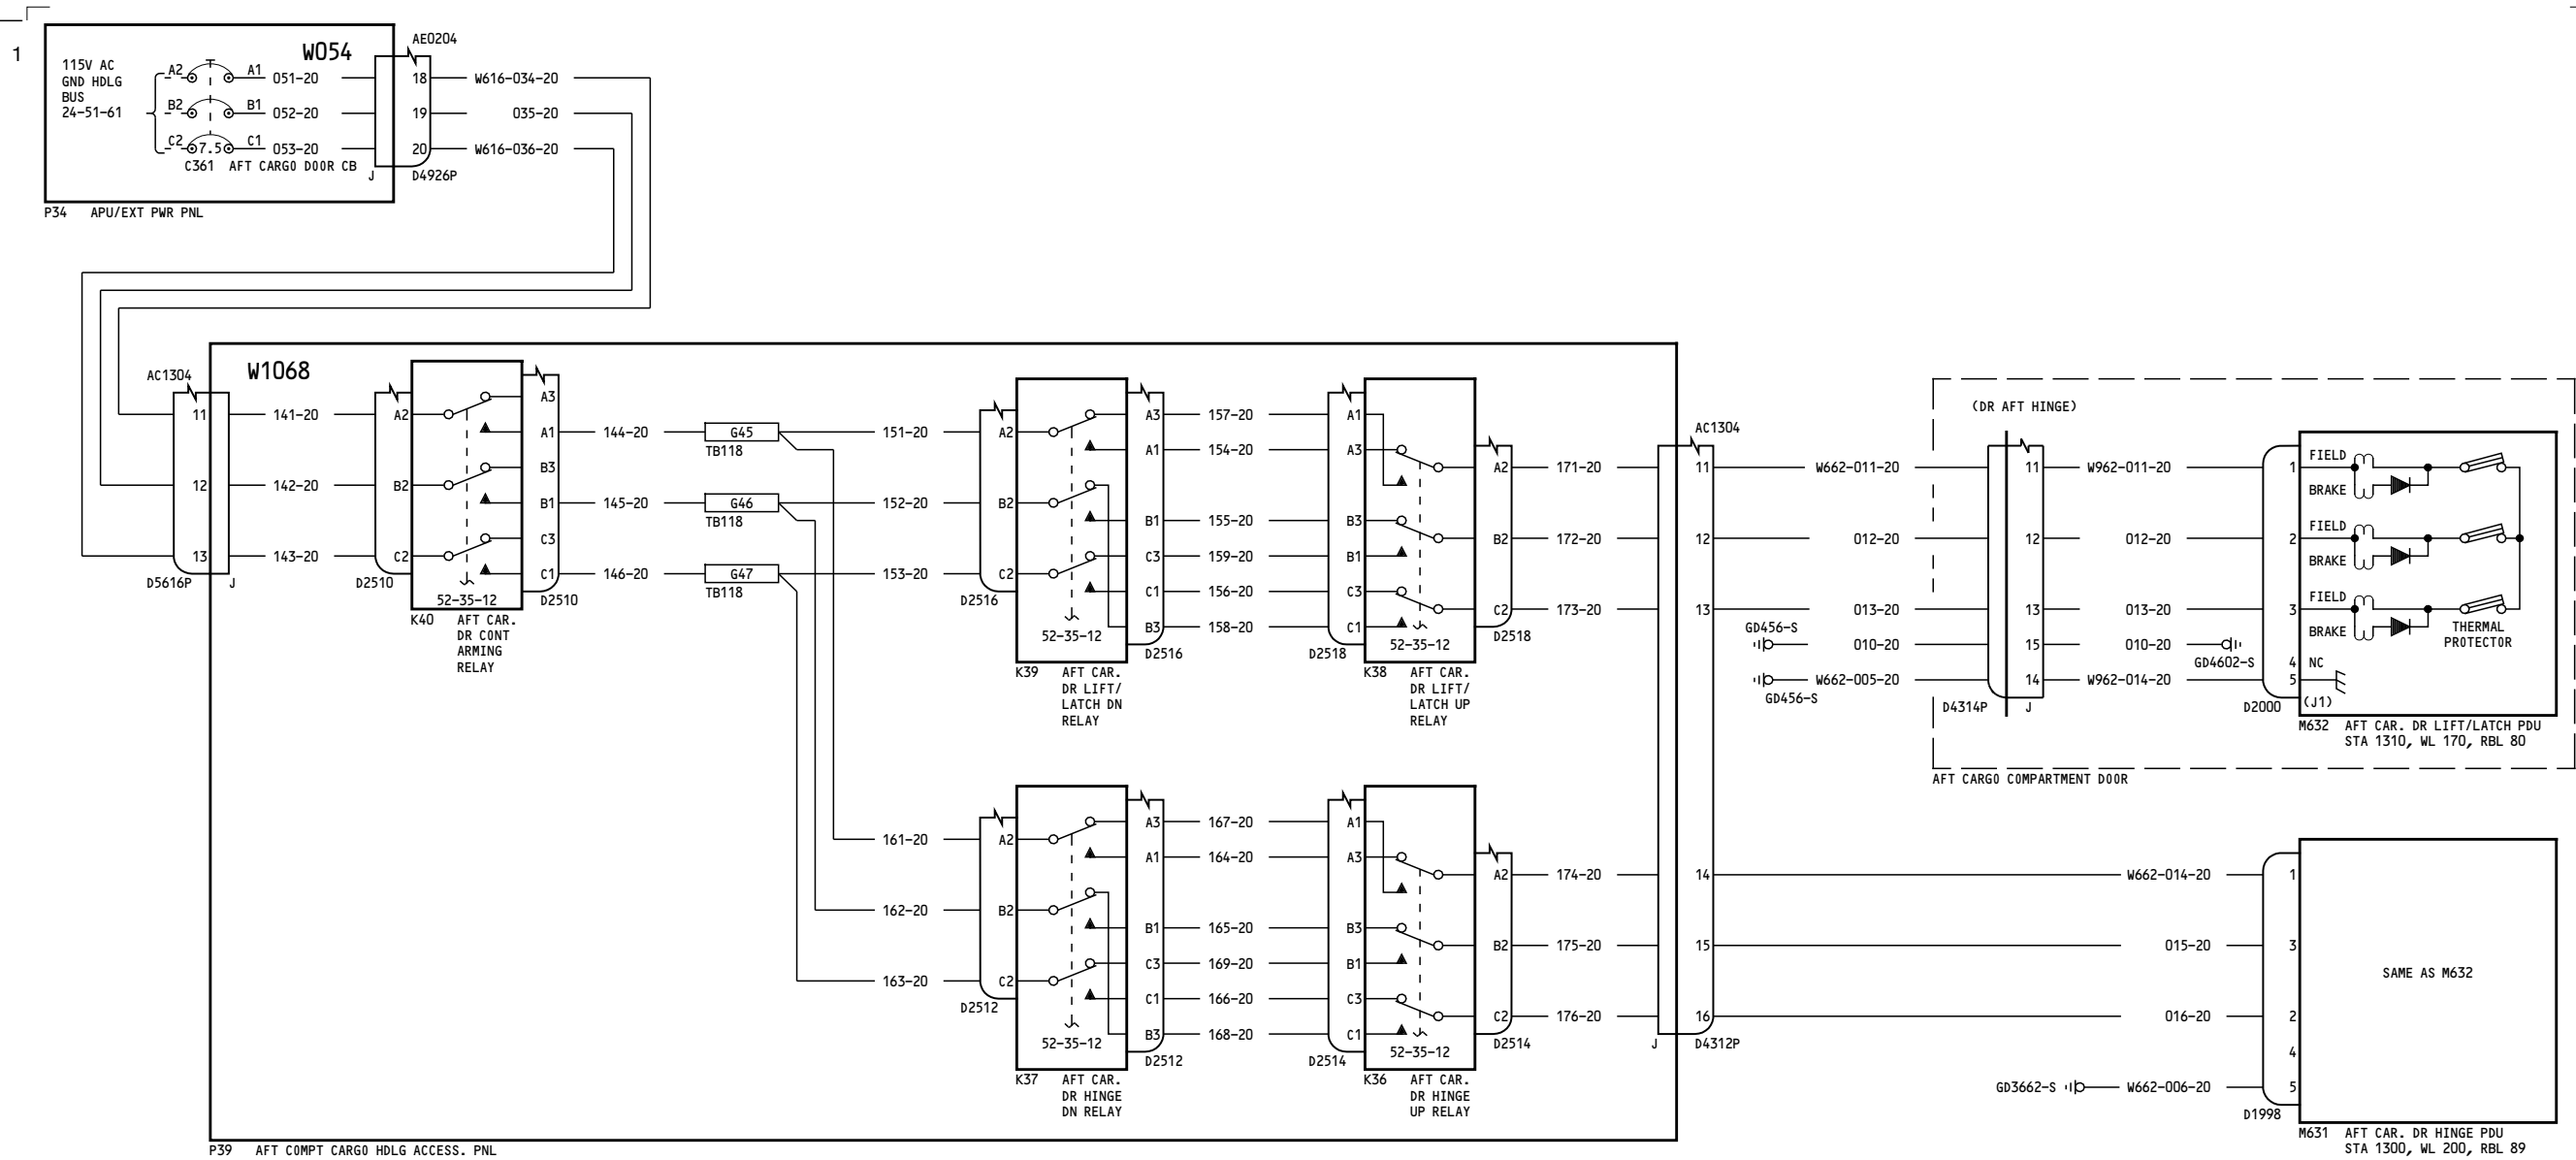

ALL	AFT CARGO DOOR-POWER
	52-35-11
	Page 1
	Jan 21/2005
	D280T132

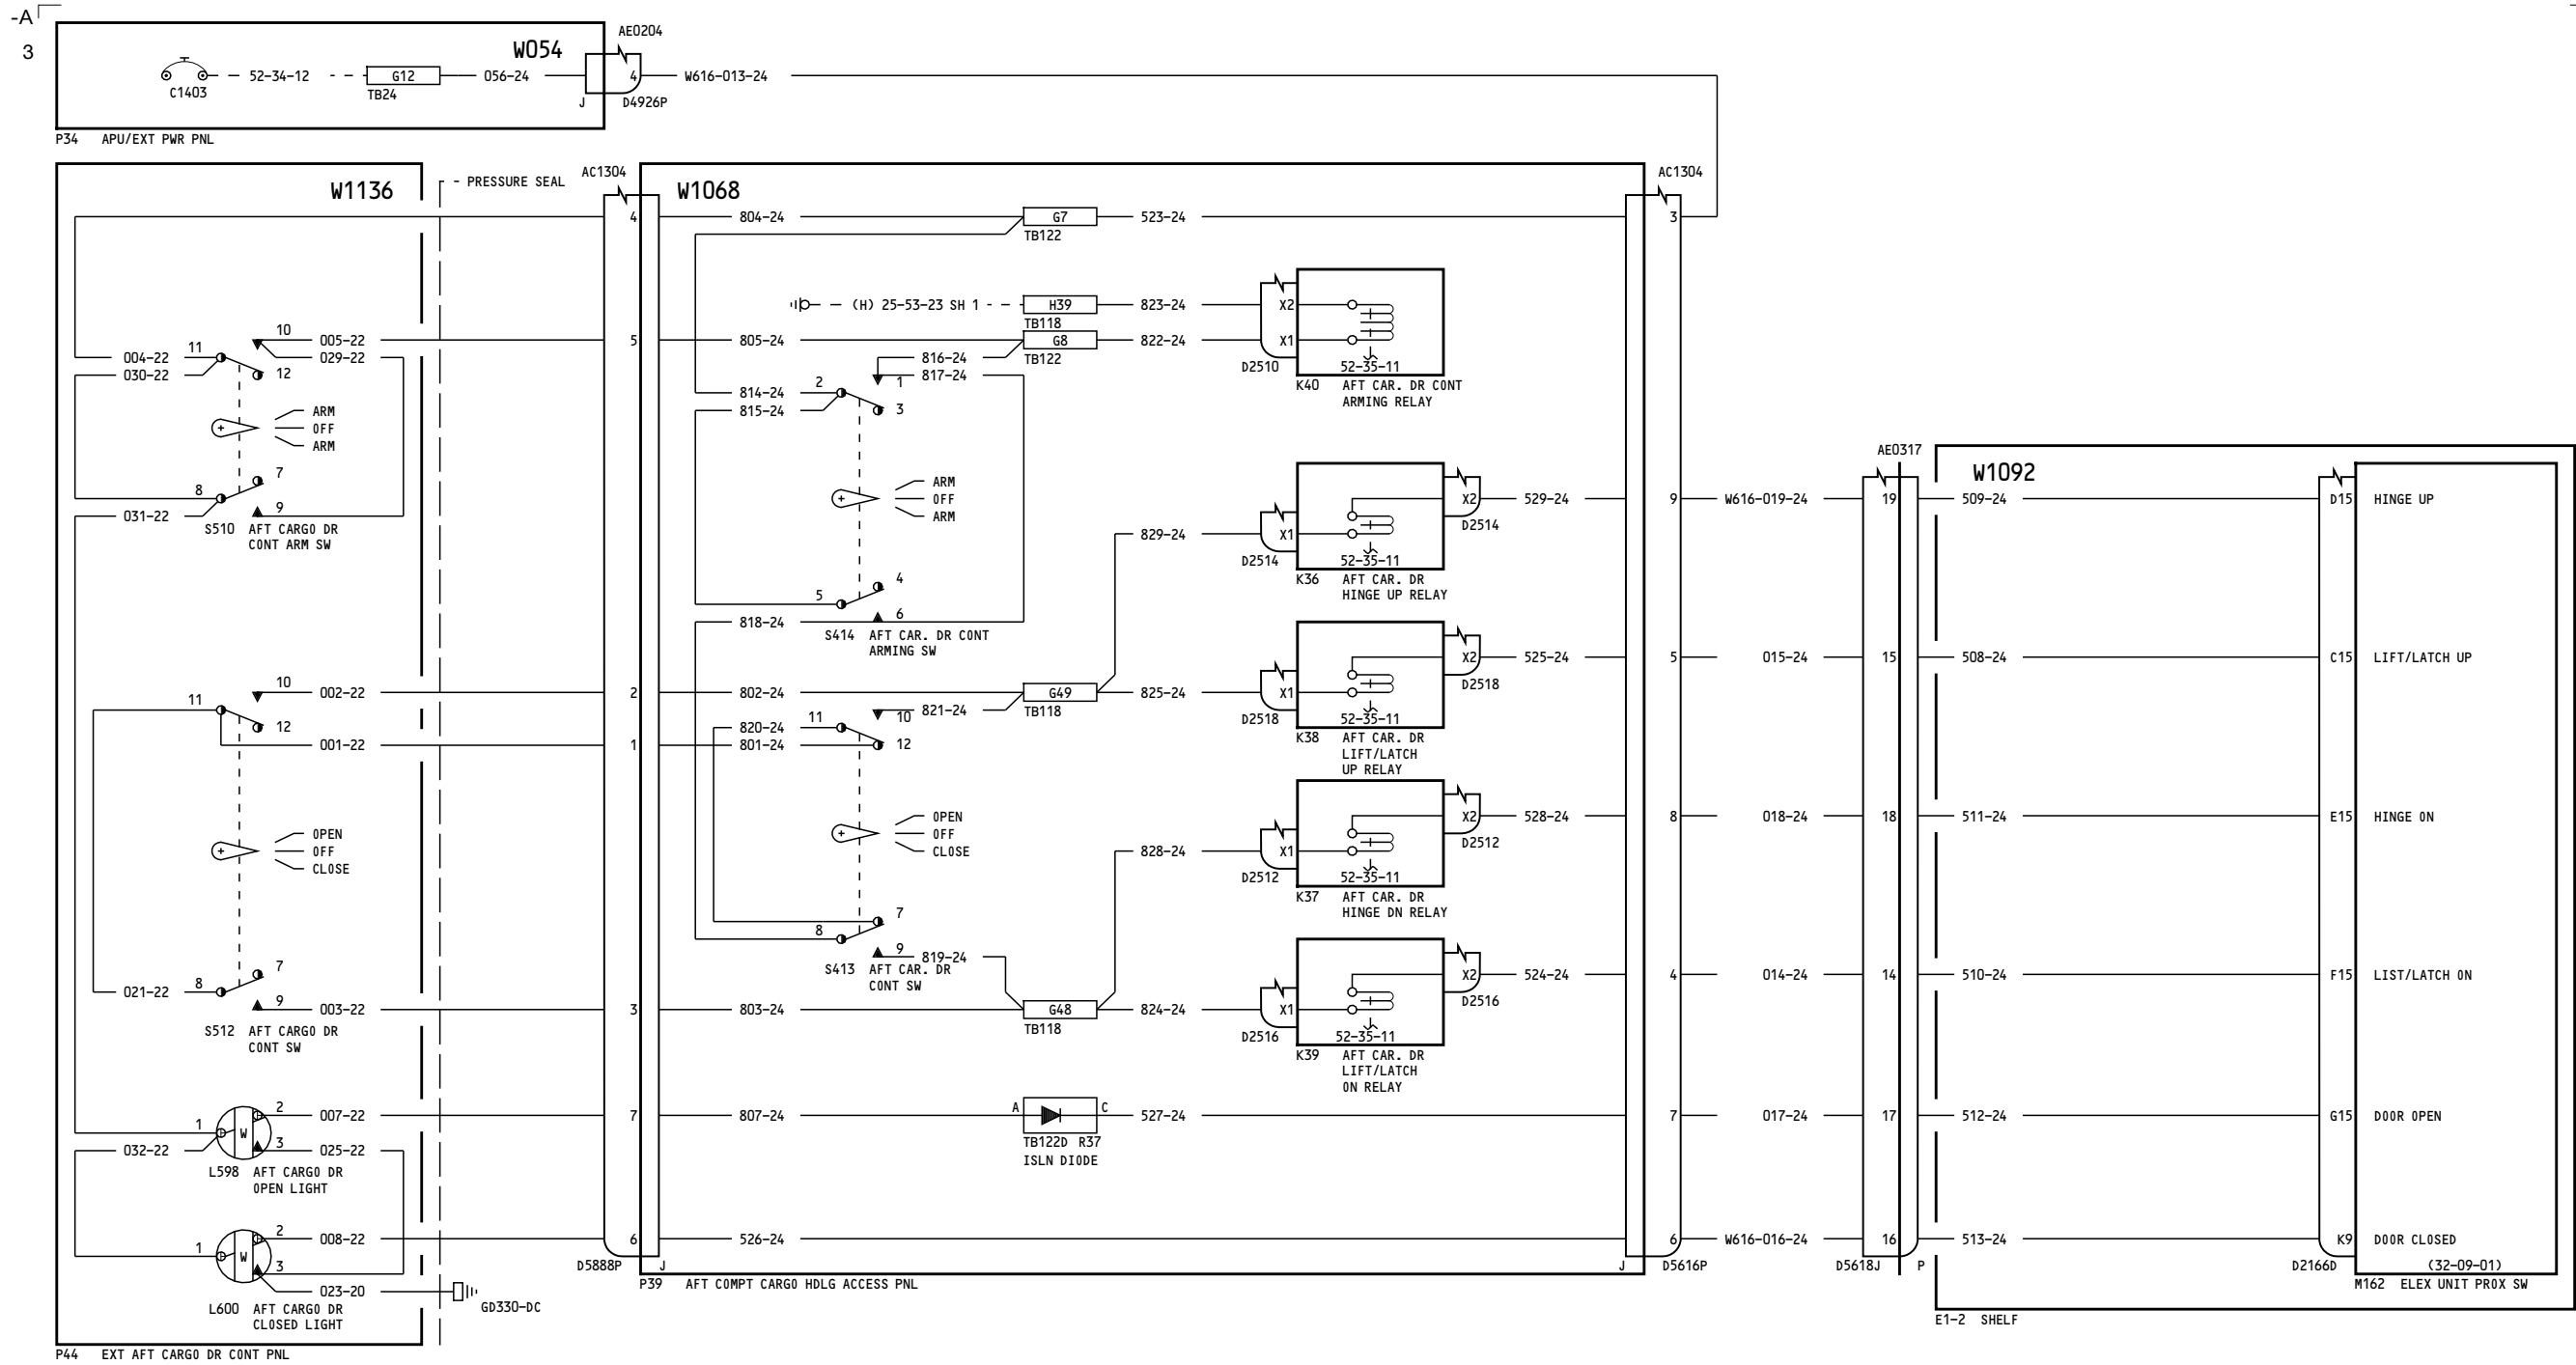

050-099

AFT CARGO DOOR-CONTROL

52-35-12

Page 1


D280T132


Jan 21/2005

52-35-12

Page 1

Jan 21/2005

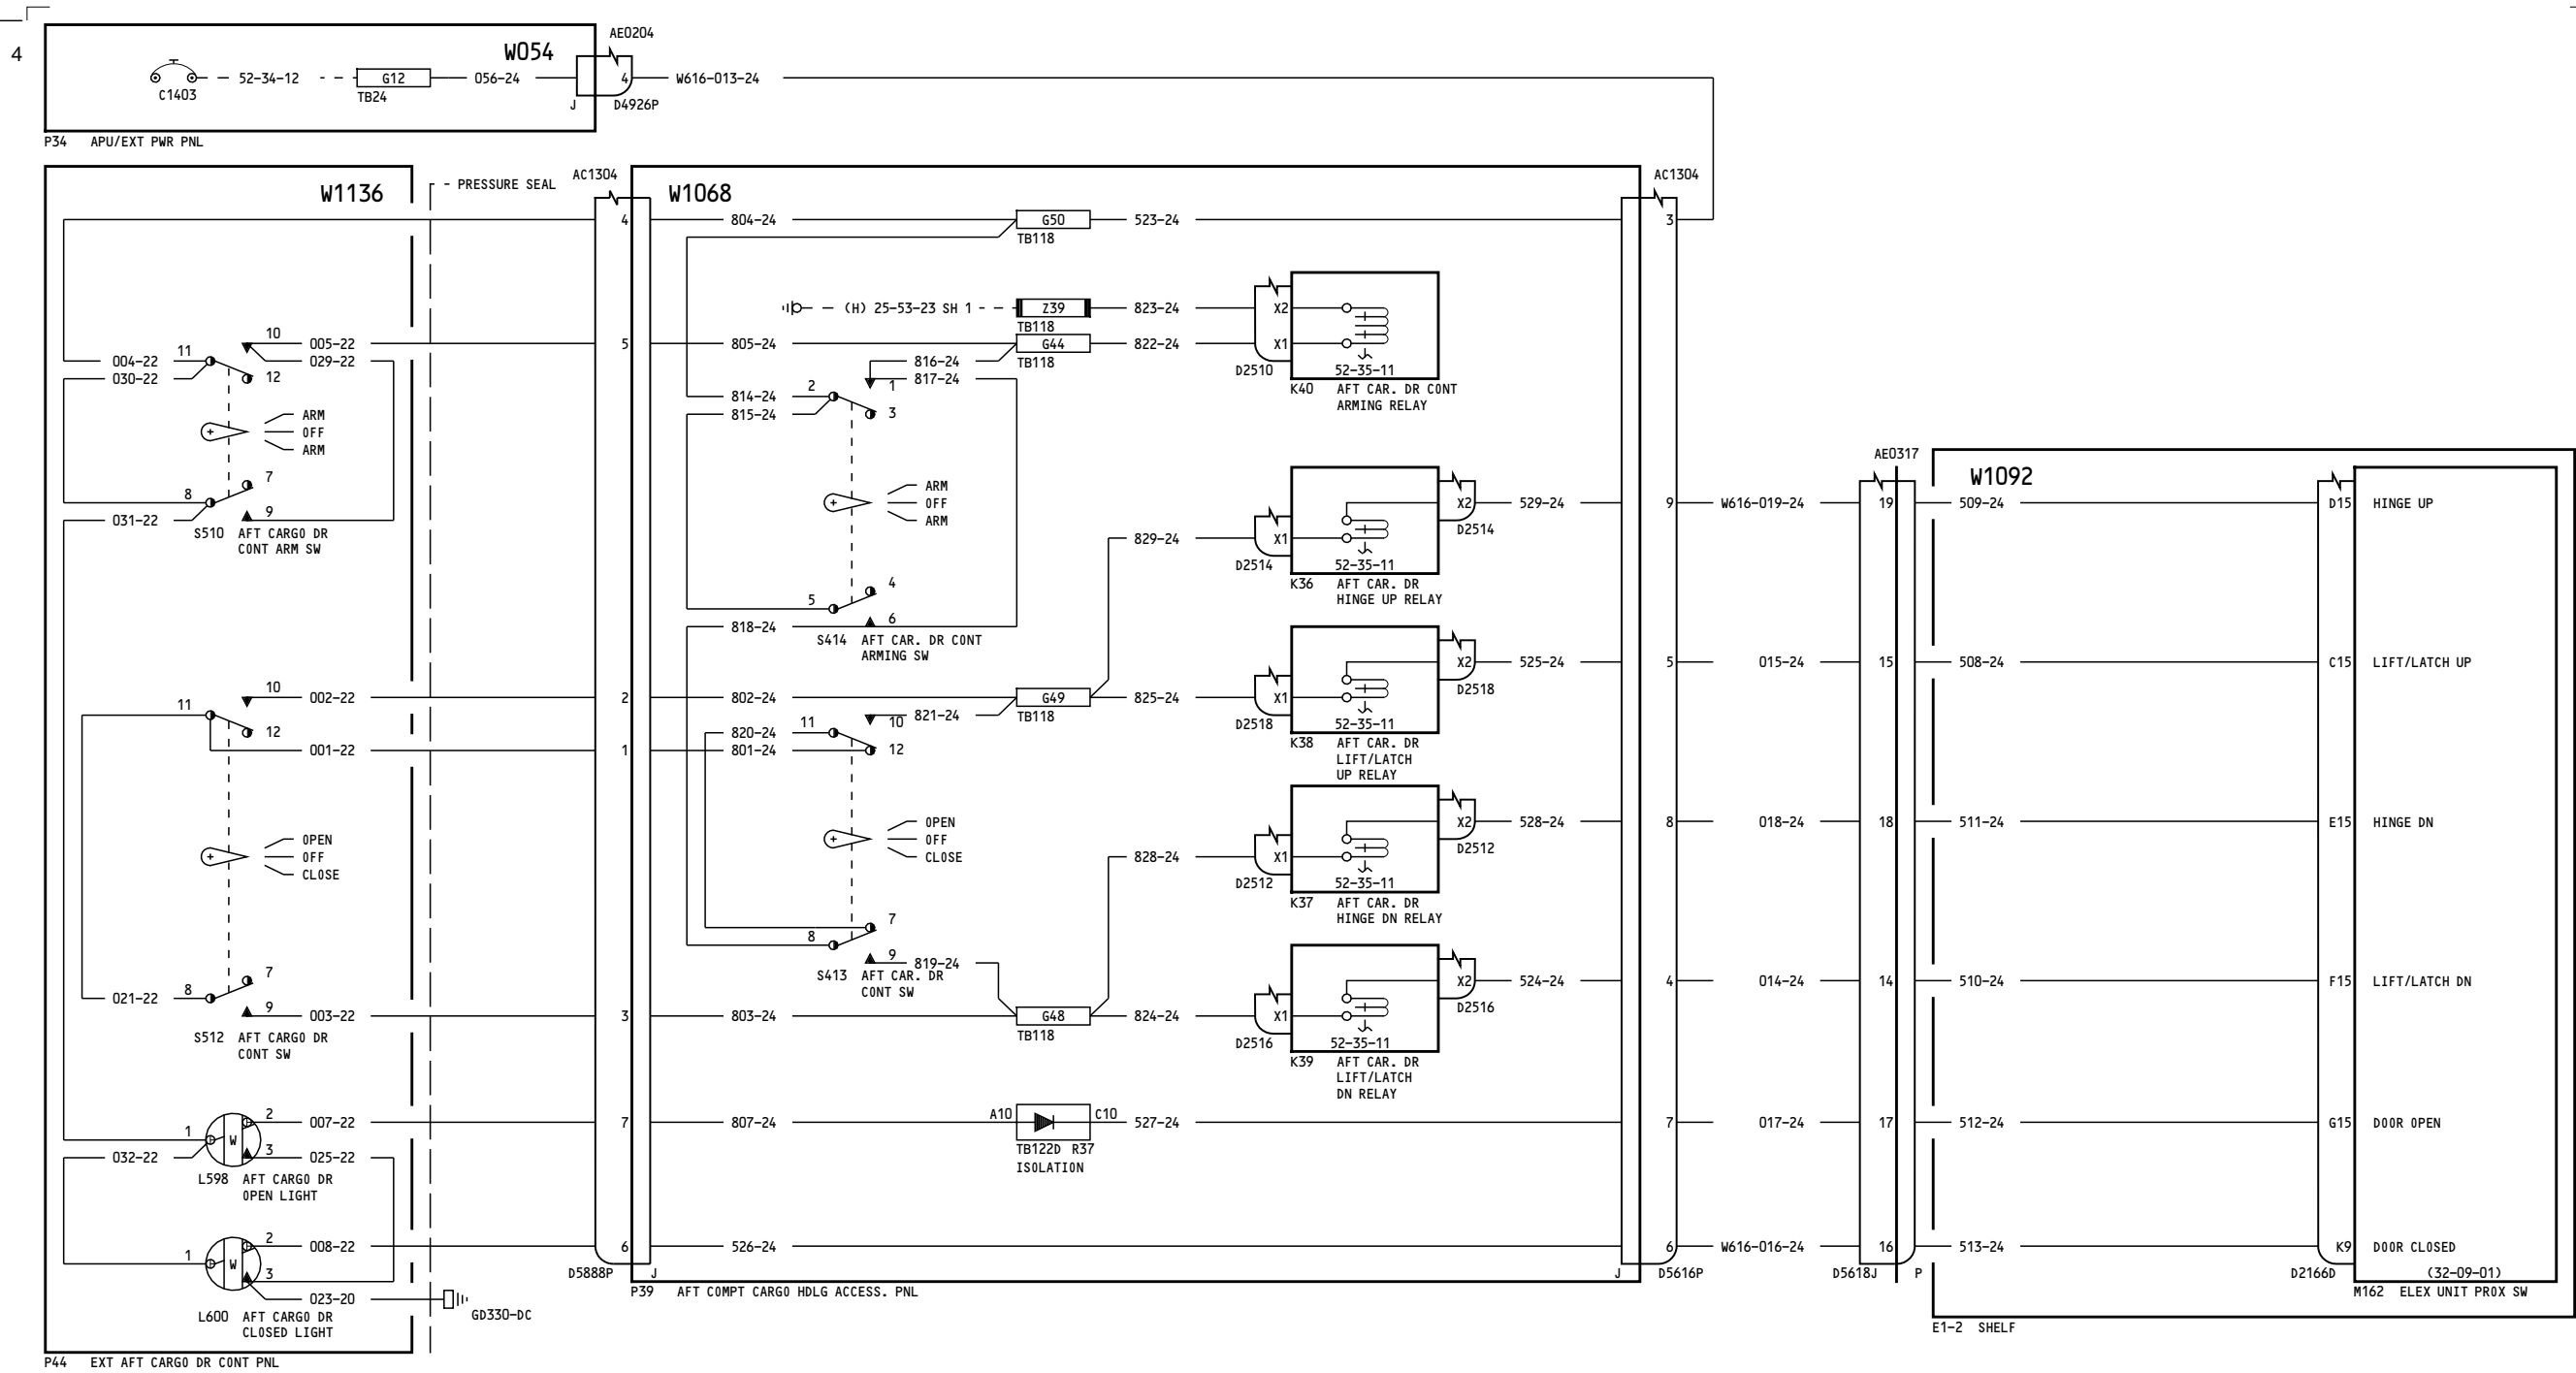

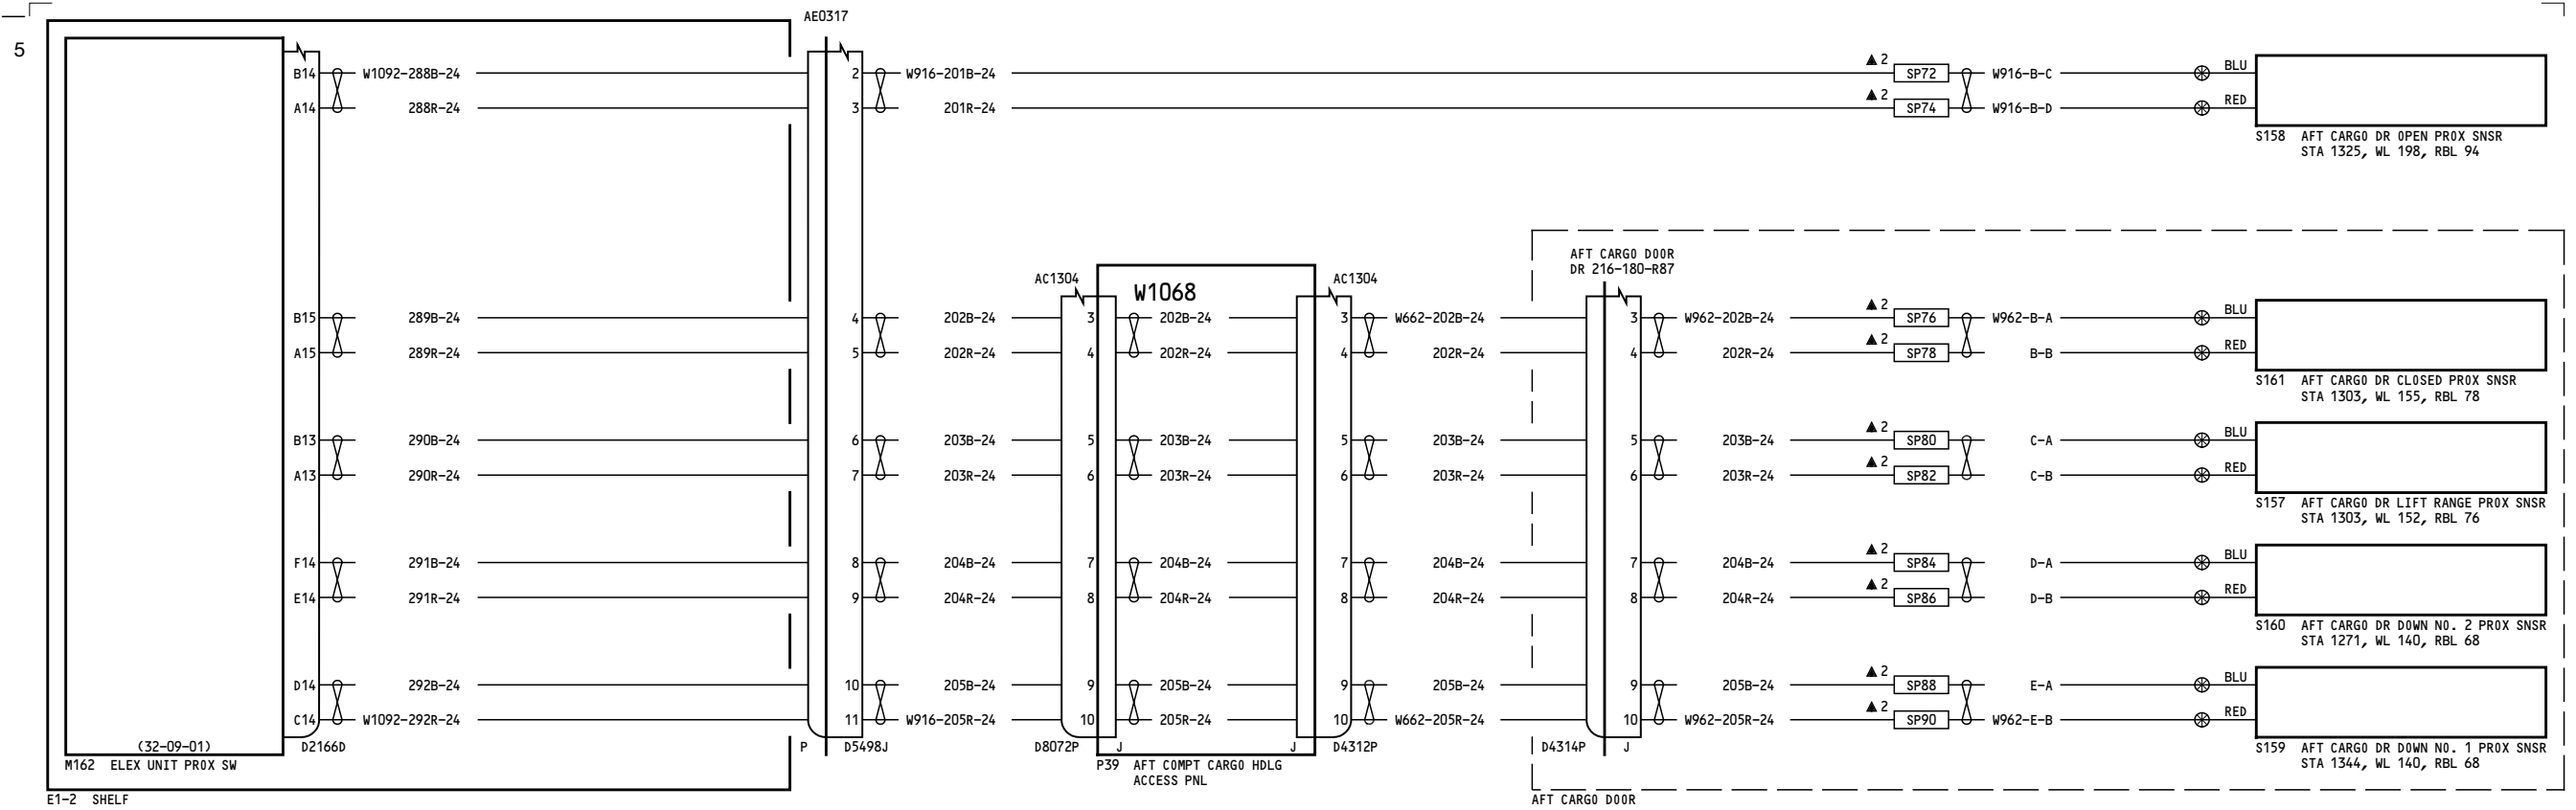

050-099

AFT CARGO DOOR-SENSORS

52-35-13

Page 1


Jan 21/2005


D280T132

52-35-13


Page 1

Jan 21/2005

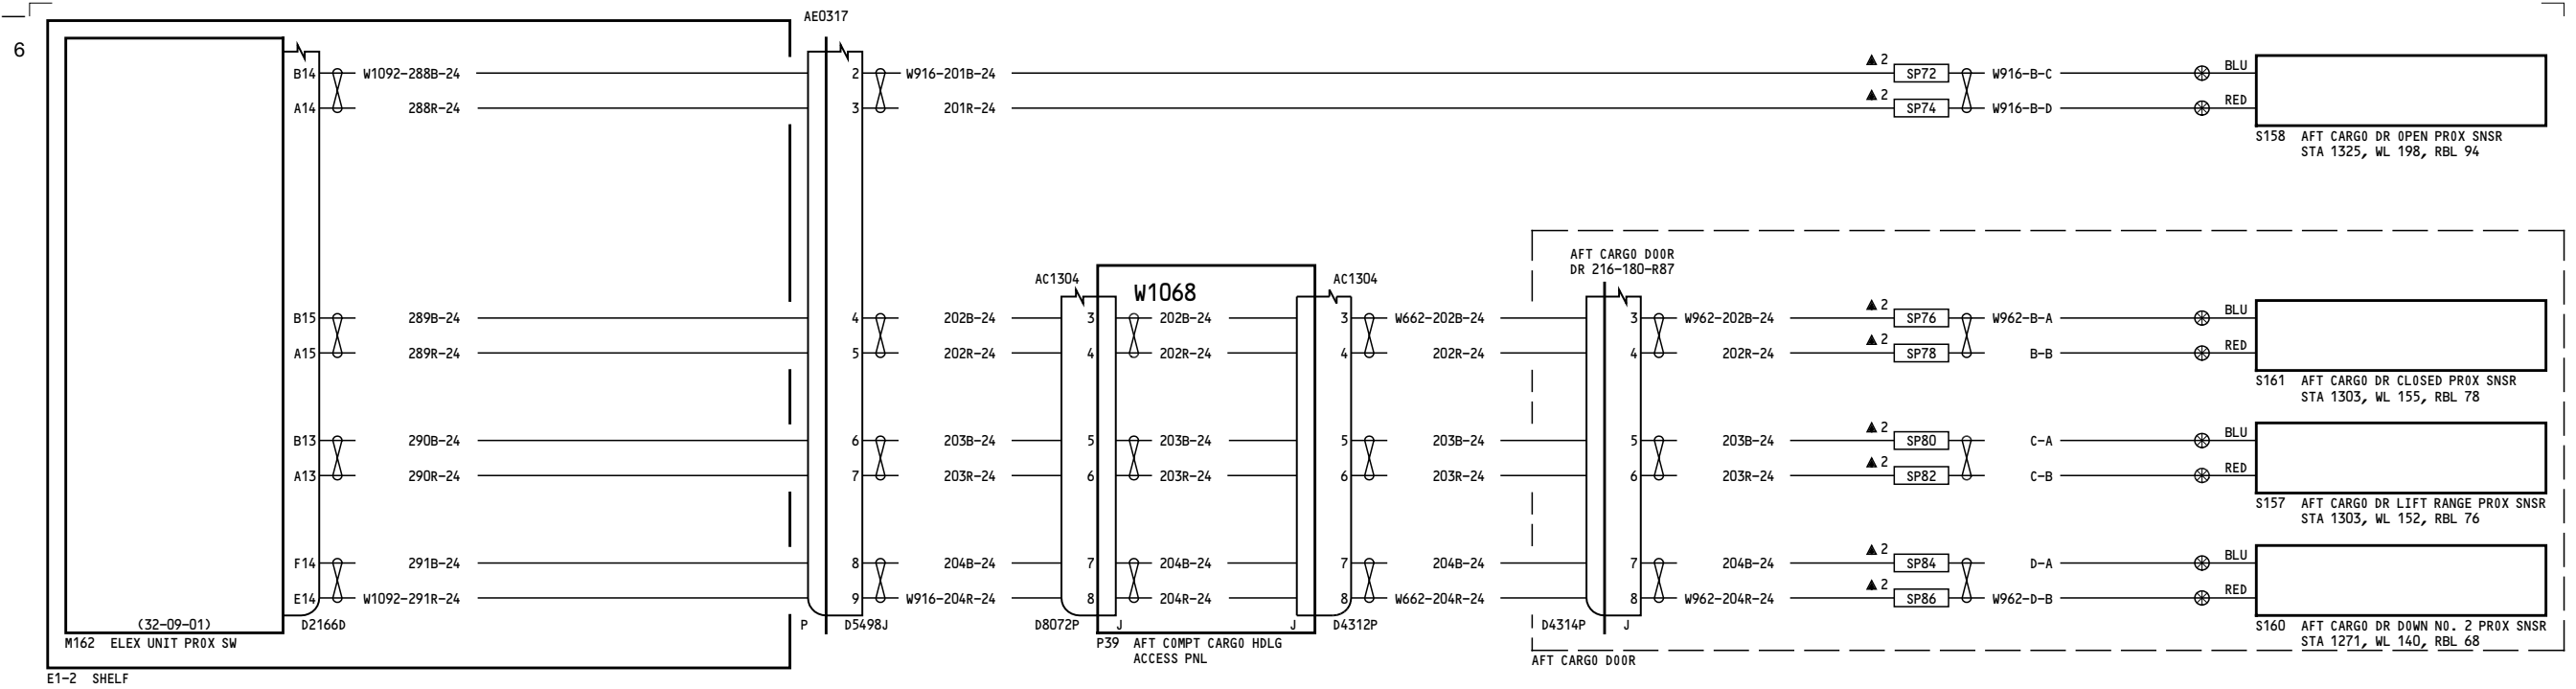

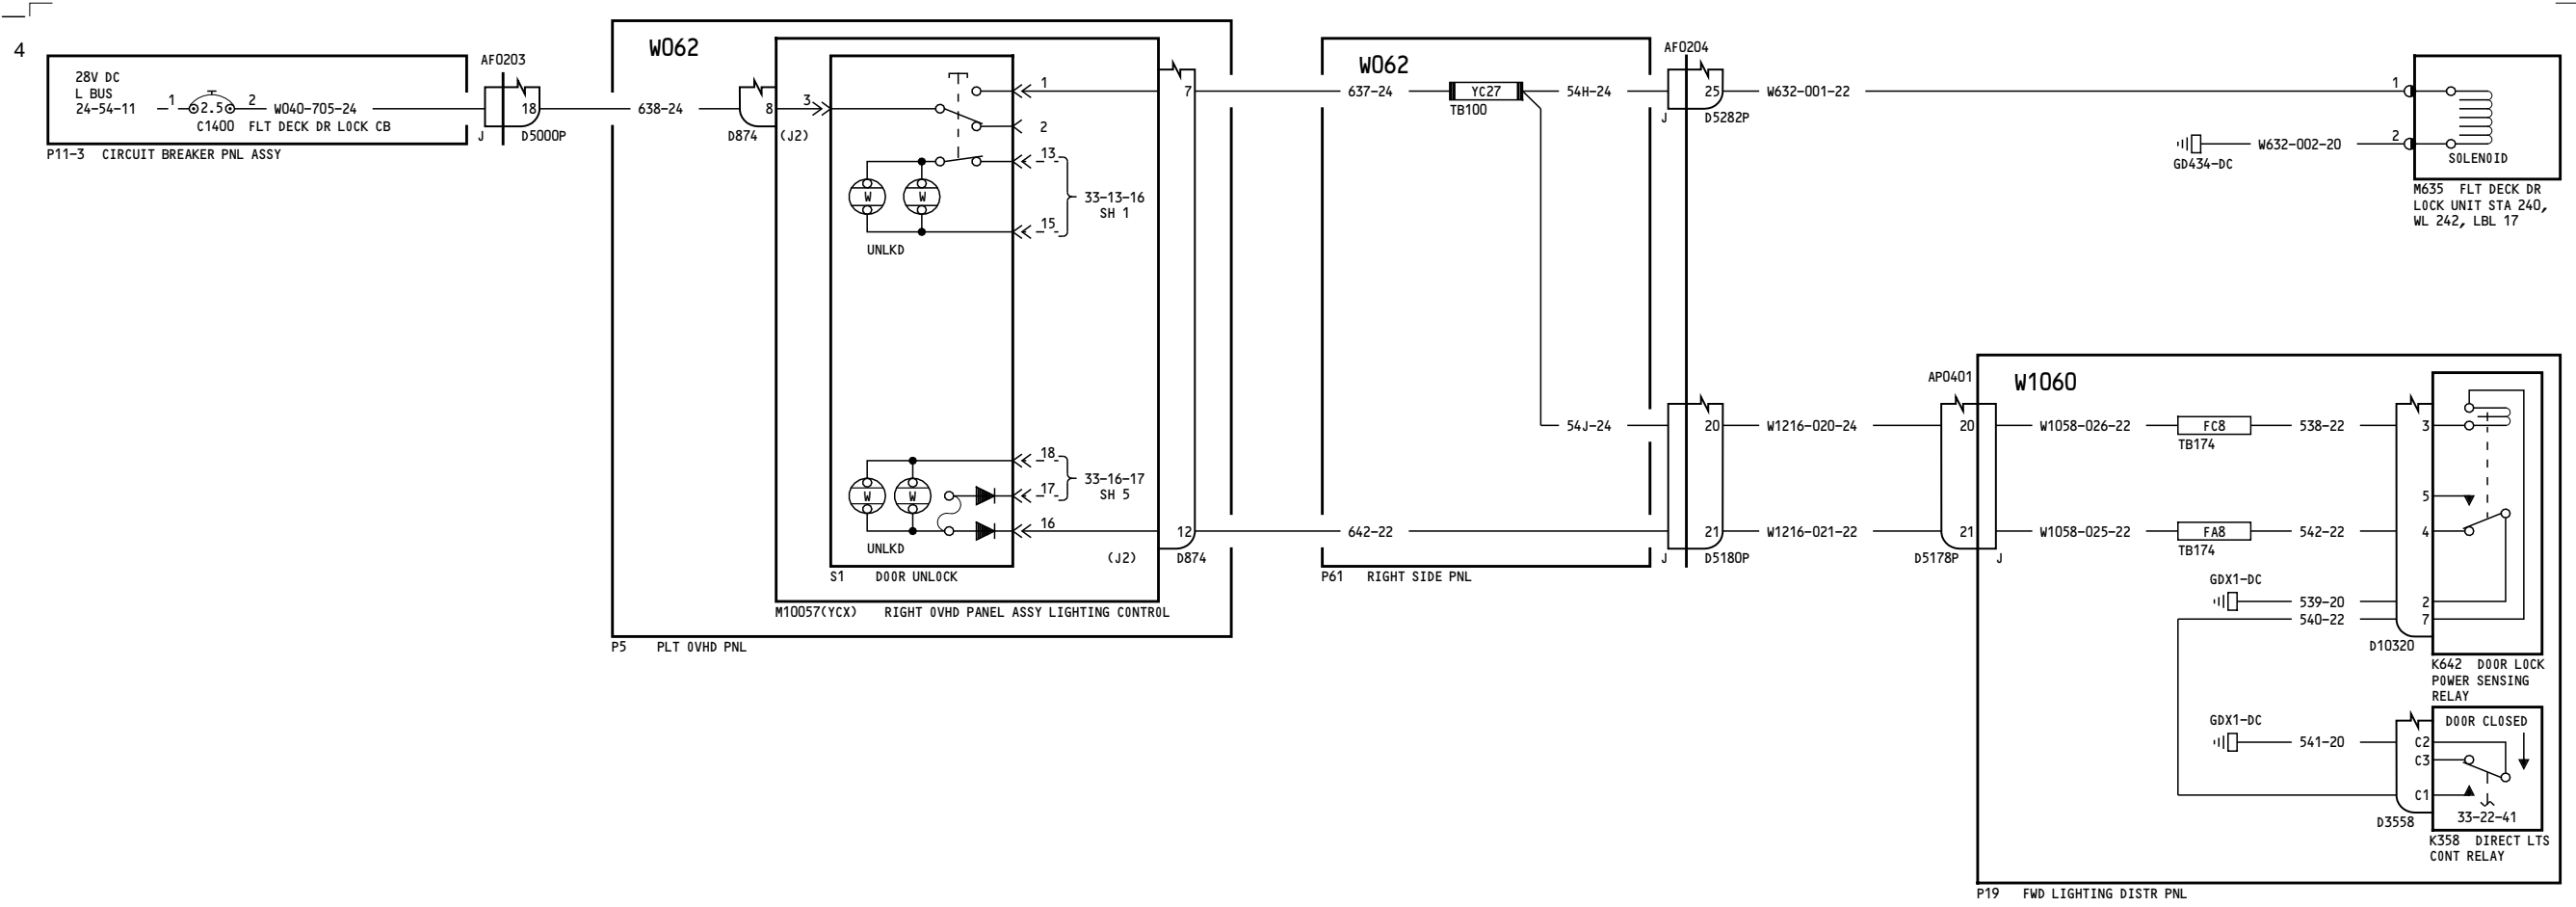

-B
42

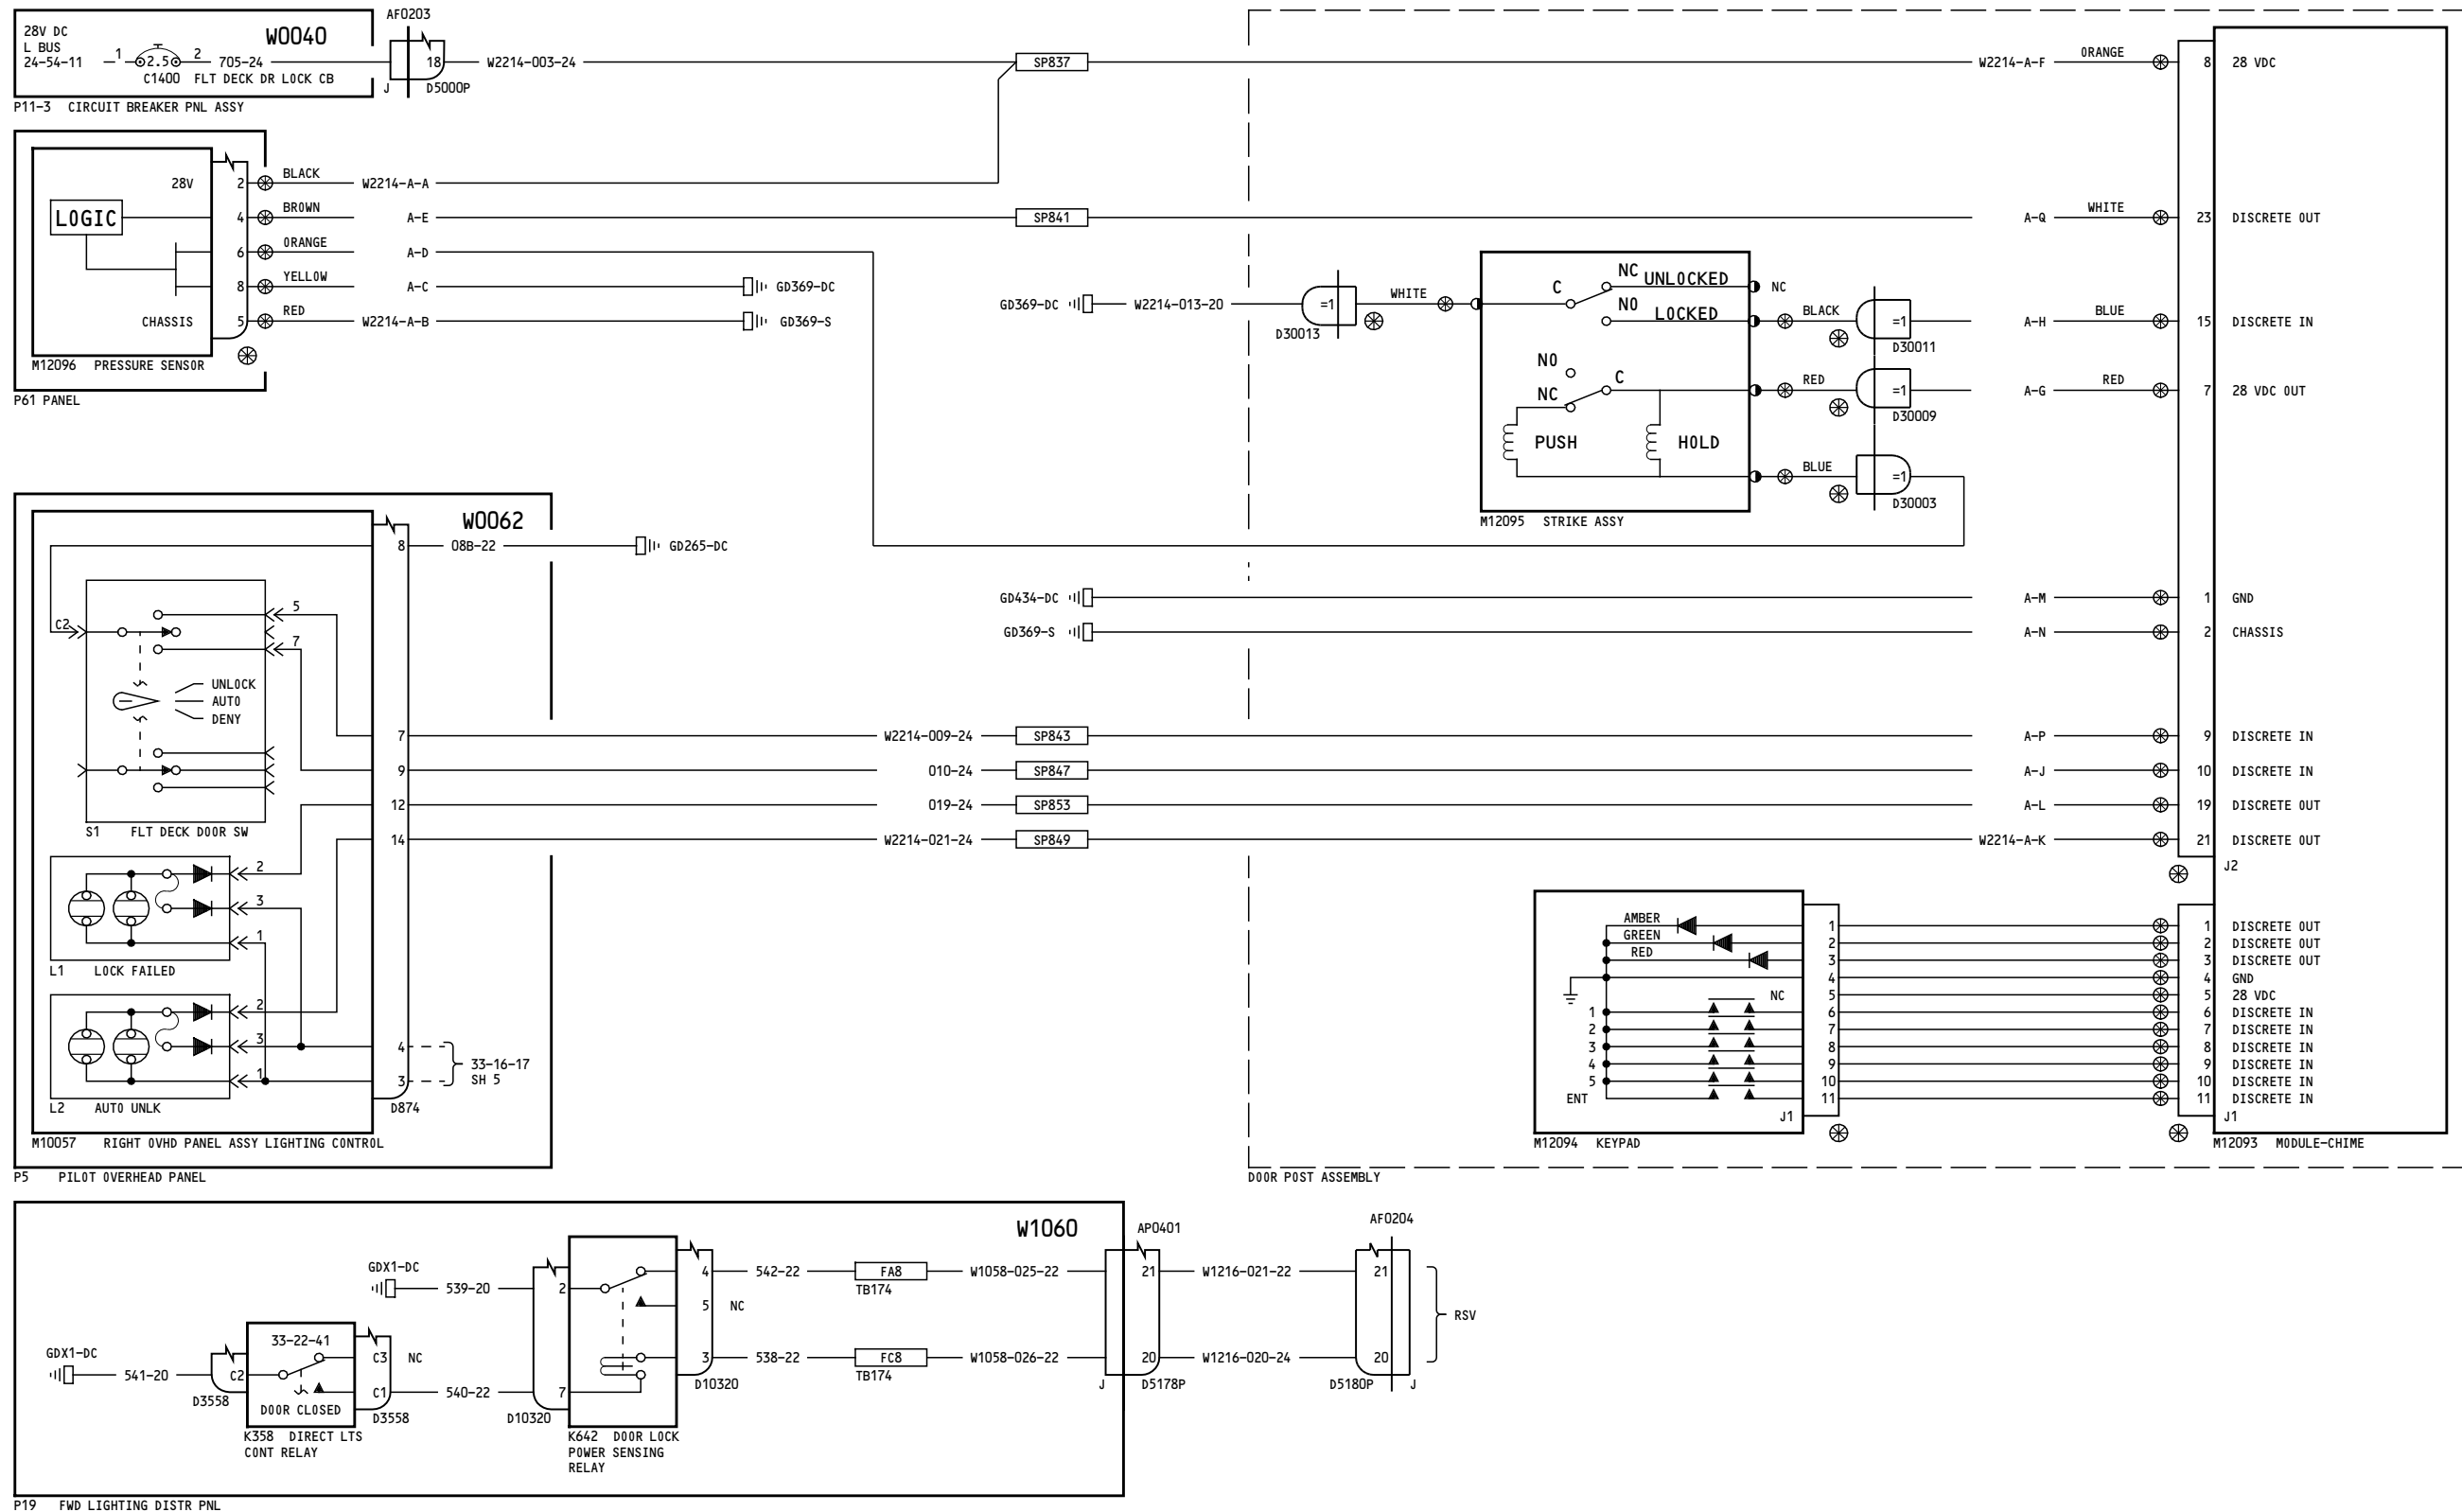

050-051

**DOOR LOCK-
FLIGHT COMPARTMENT**

52-51-11

Page 1.1

D280T132

Jan 21/2005


Incorporates
25-0325

52-51-11

Page 1.1

Jan 21/2005

55

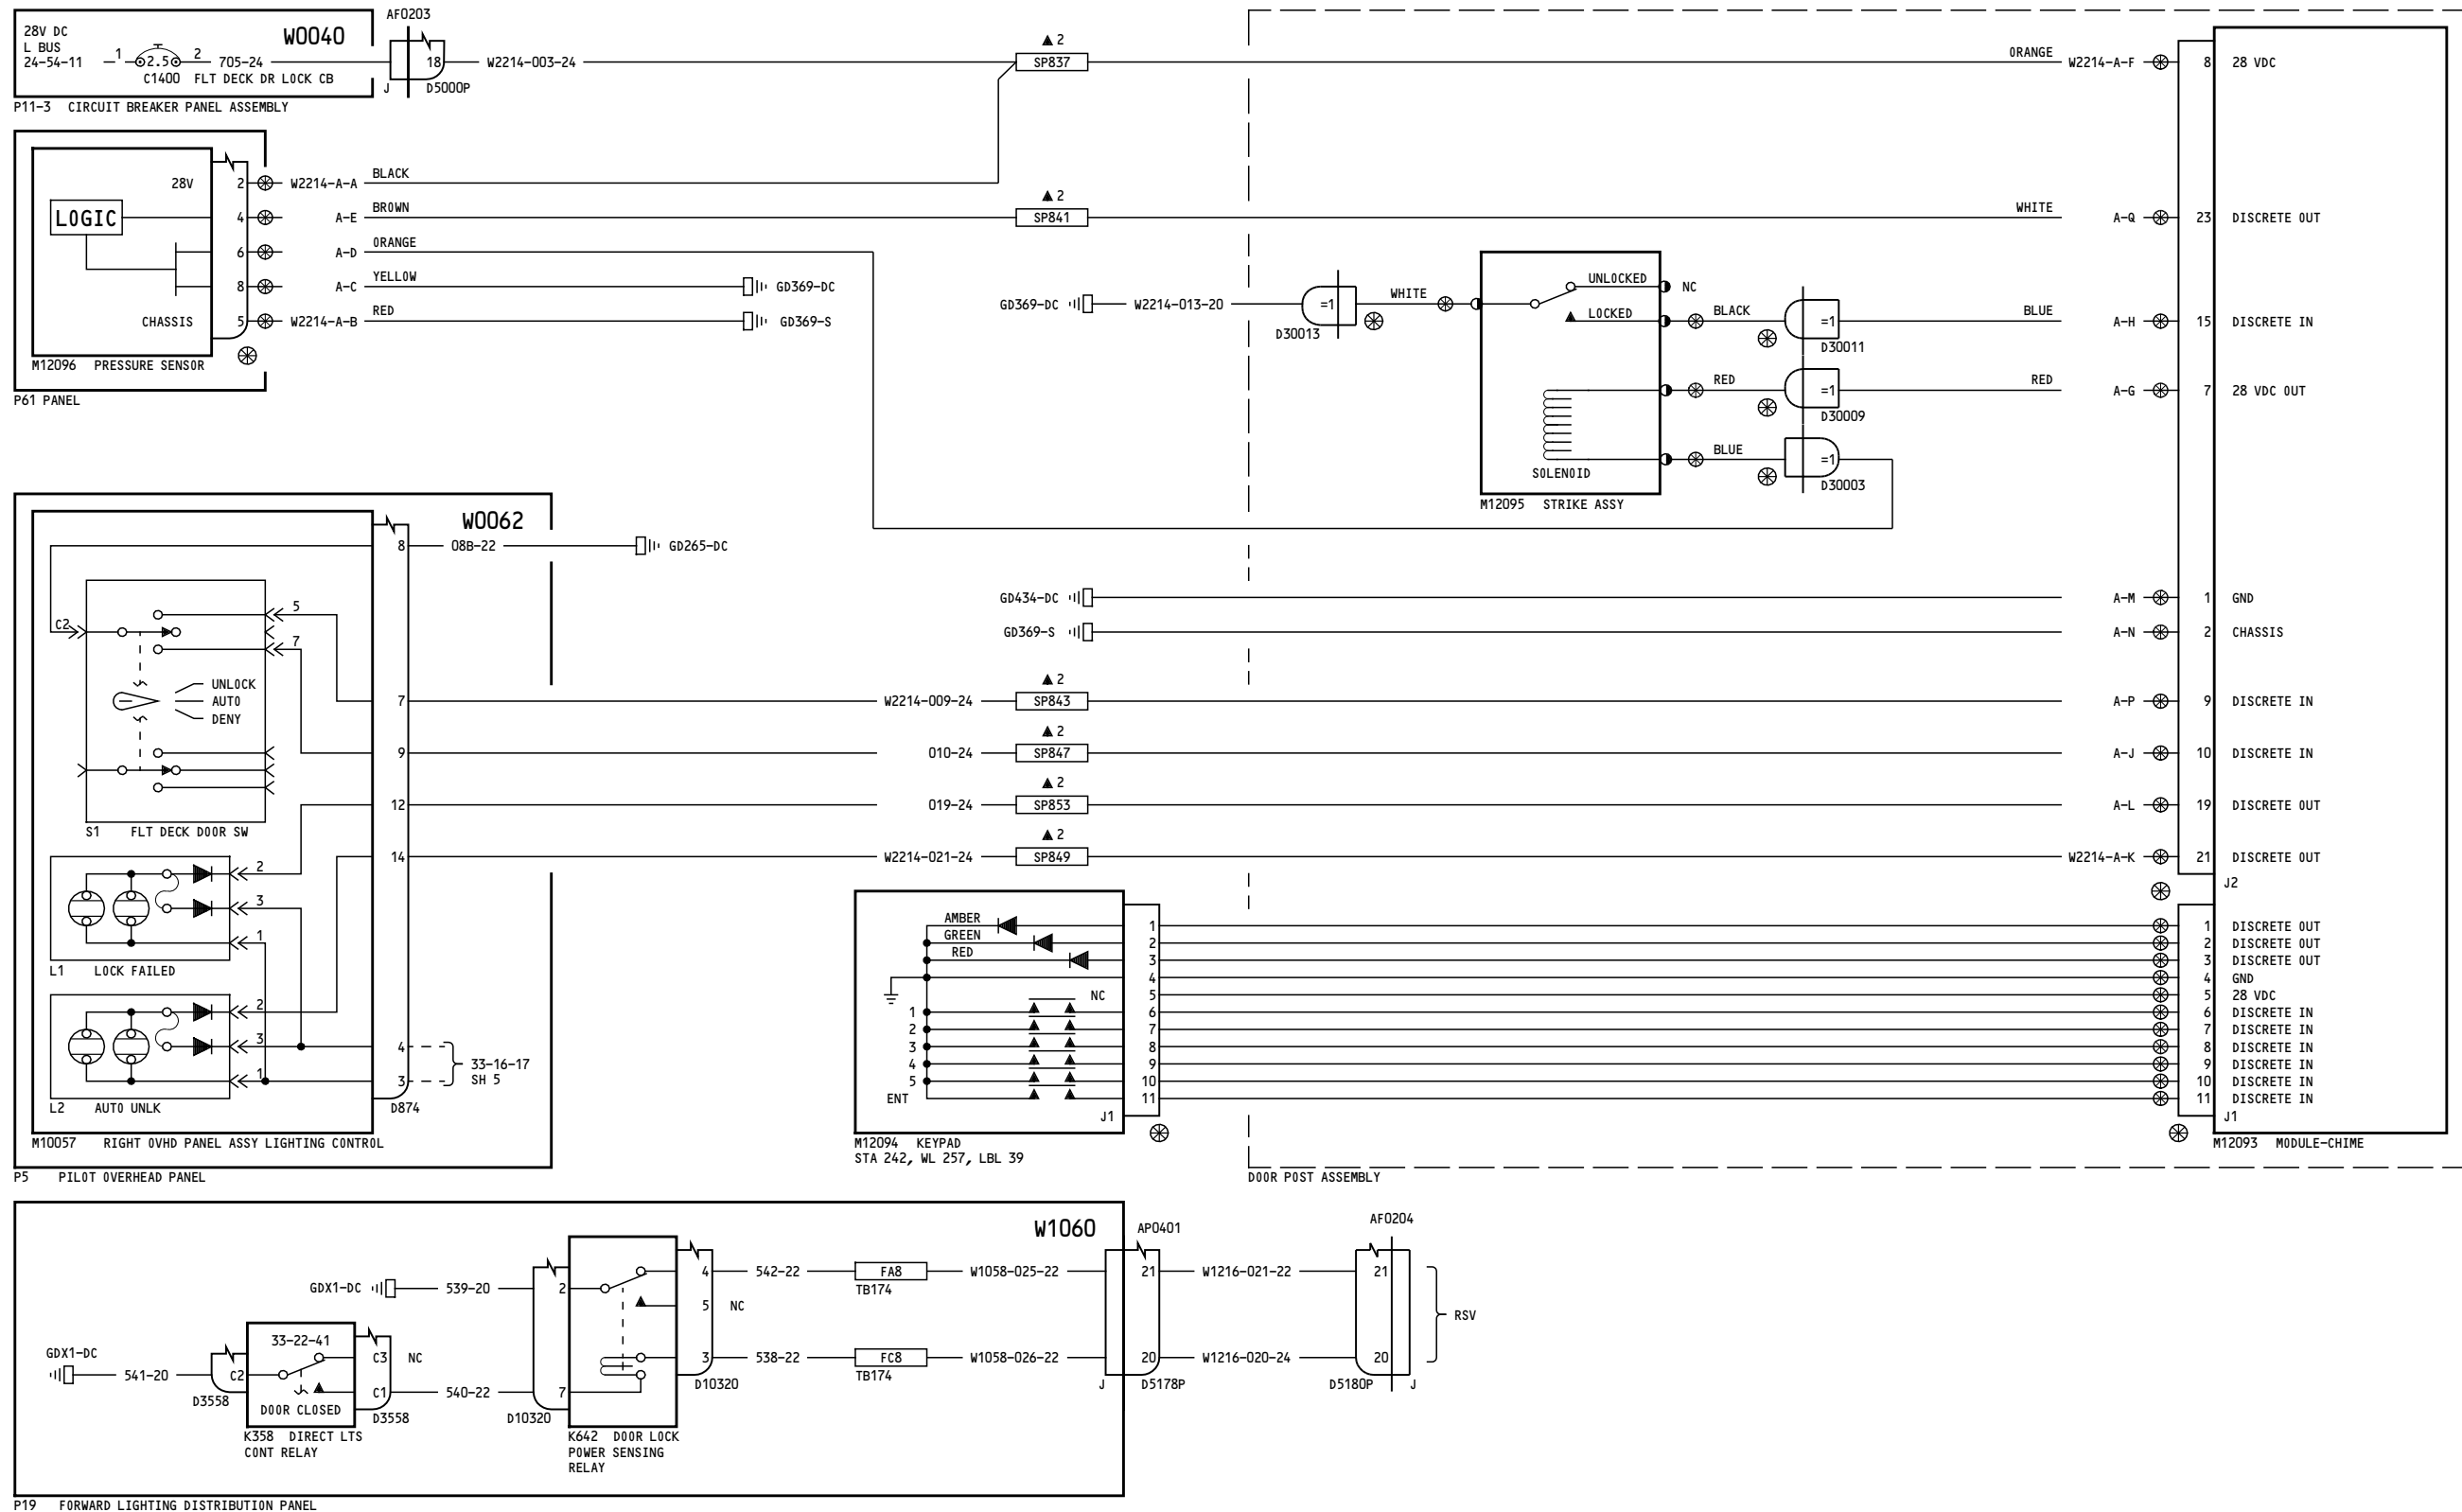

151-152, 275

DOOR LOCK-FLIGHT COMPARTMENT

52-51-11

Page 1.2

Mar 14/2007


D280T132

Incorporates
 25-0332
 25-0332 R09

52-51-11

Page 1.2

Mar 14/2007

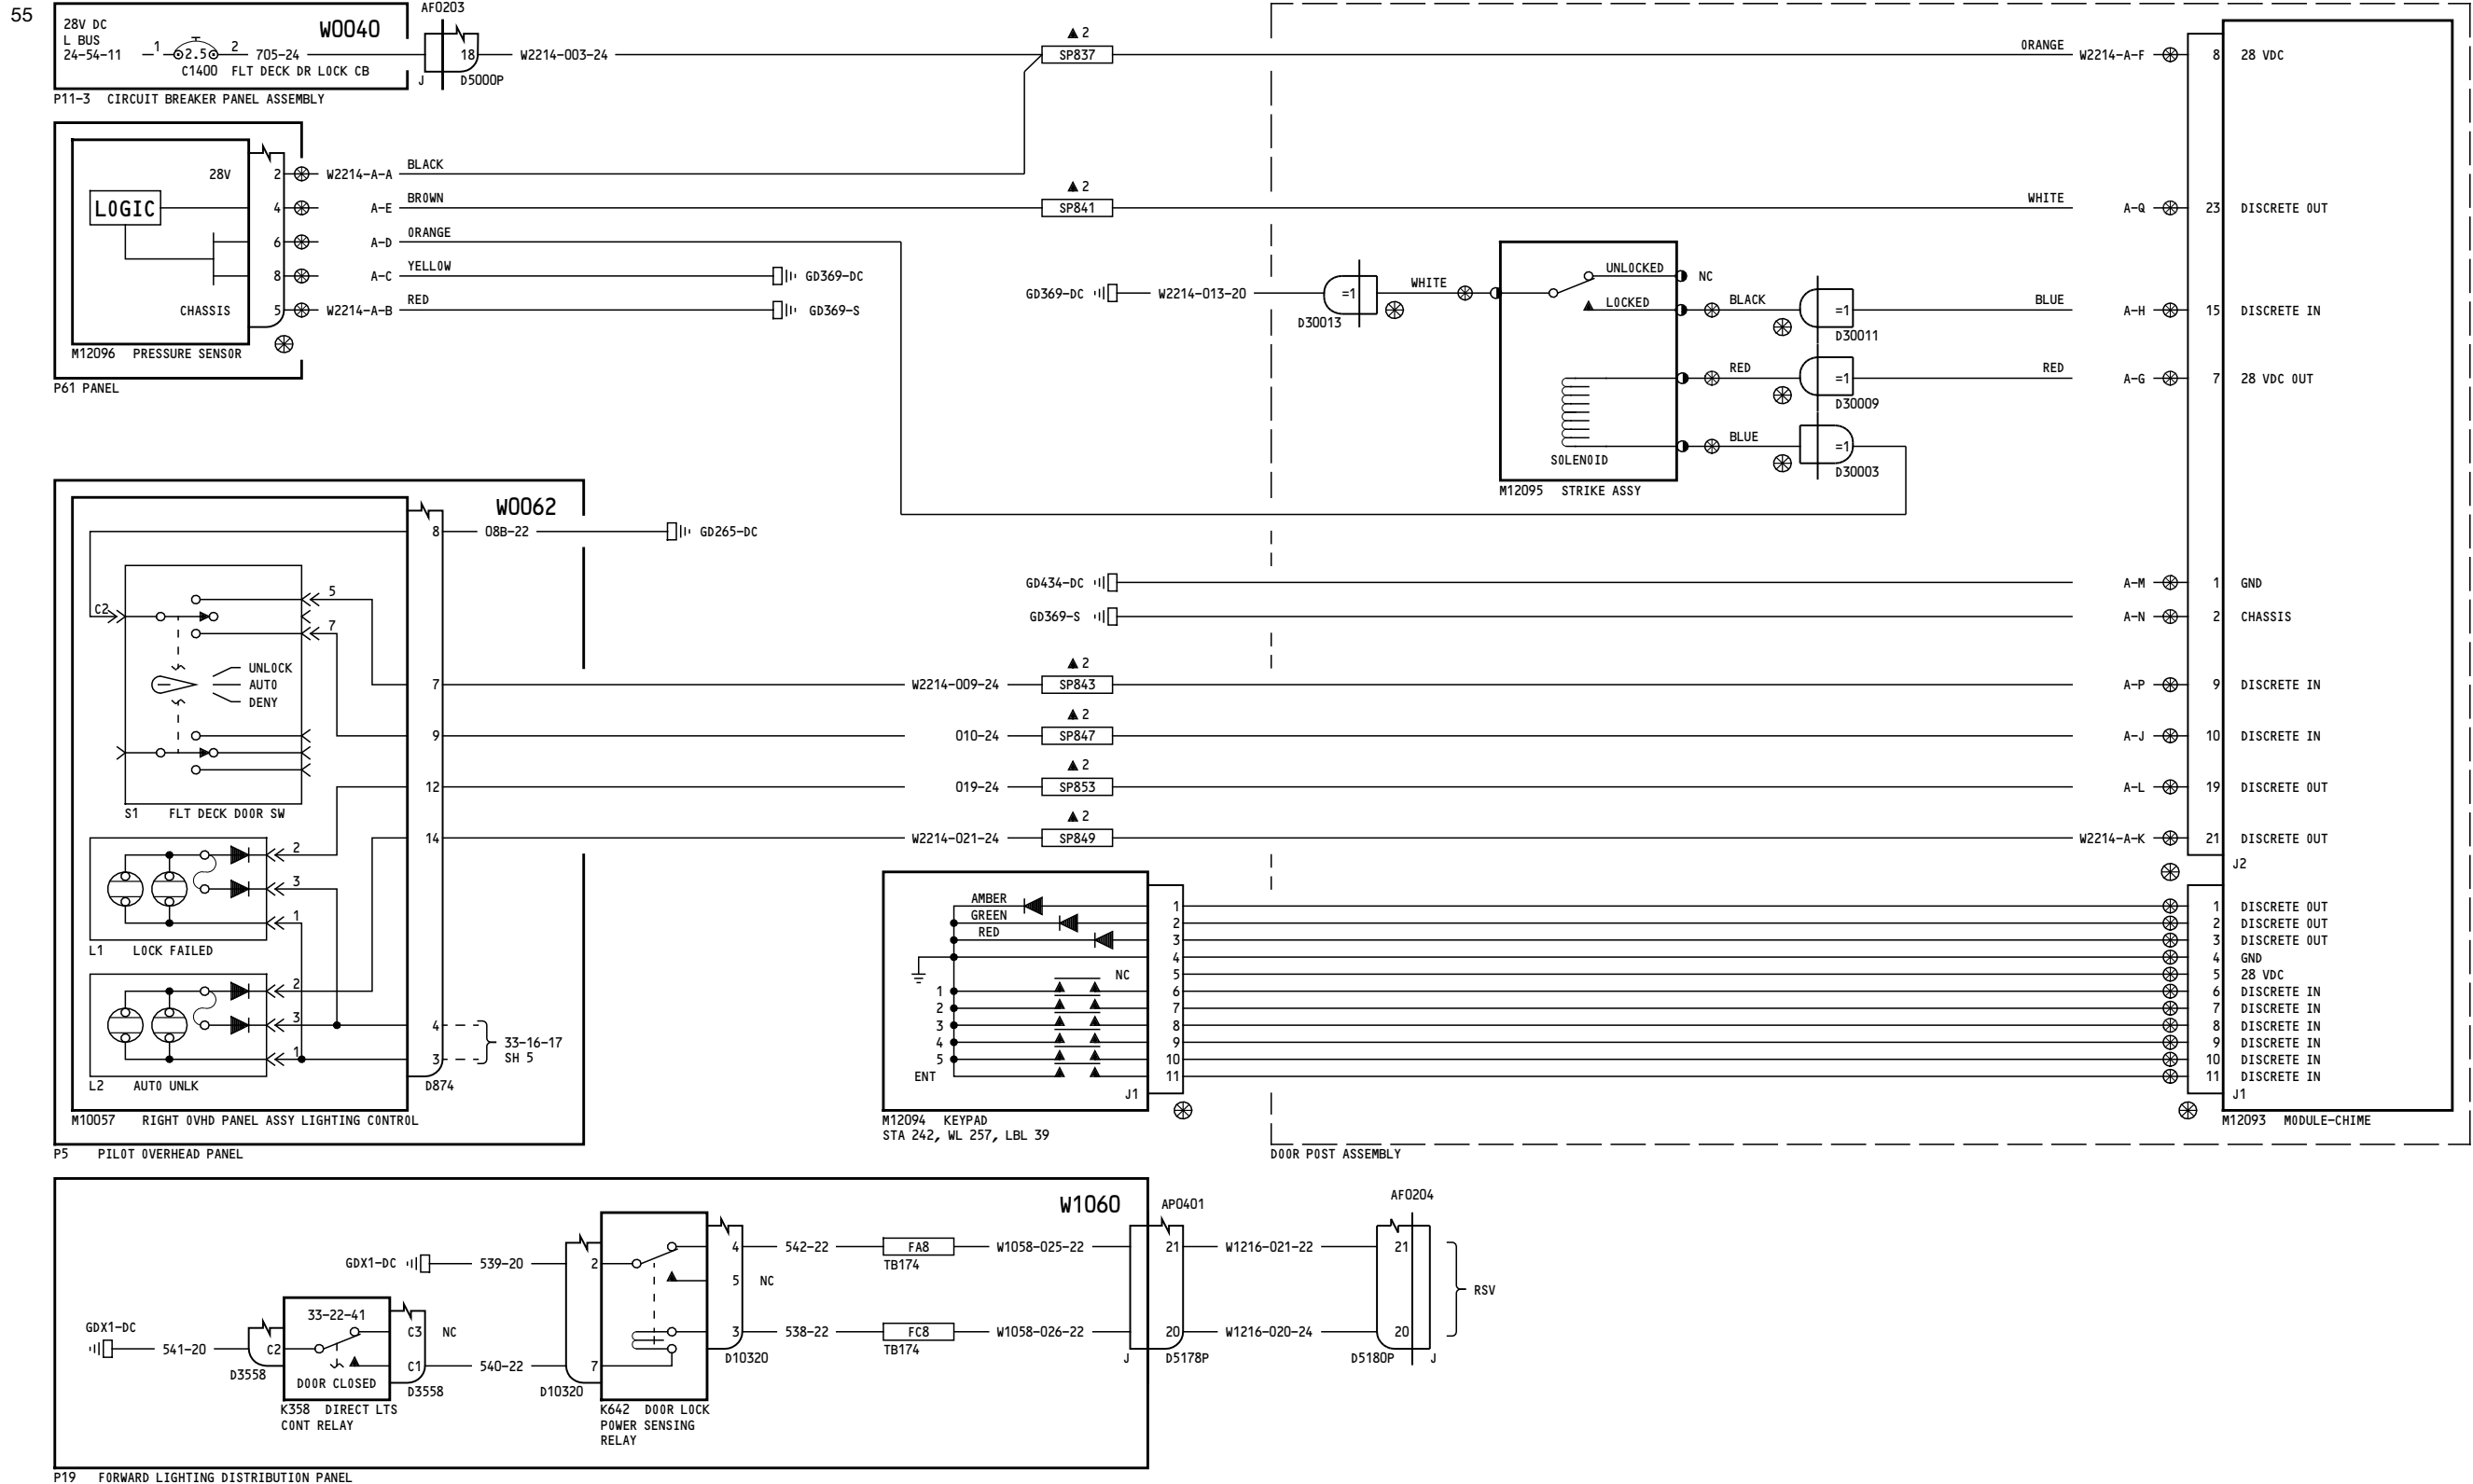

154

DOOR LOCK-FLIGHT COMPARTMENT

52-51-11

Page 1.3

Mar 14/2007

D280T132


Incorporates
25-0332 R02
25-0332 R09

52-51-11

Page 1.3

Mar 14/2007

-A
41

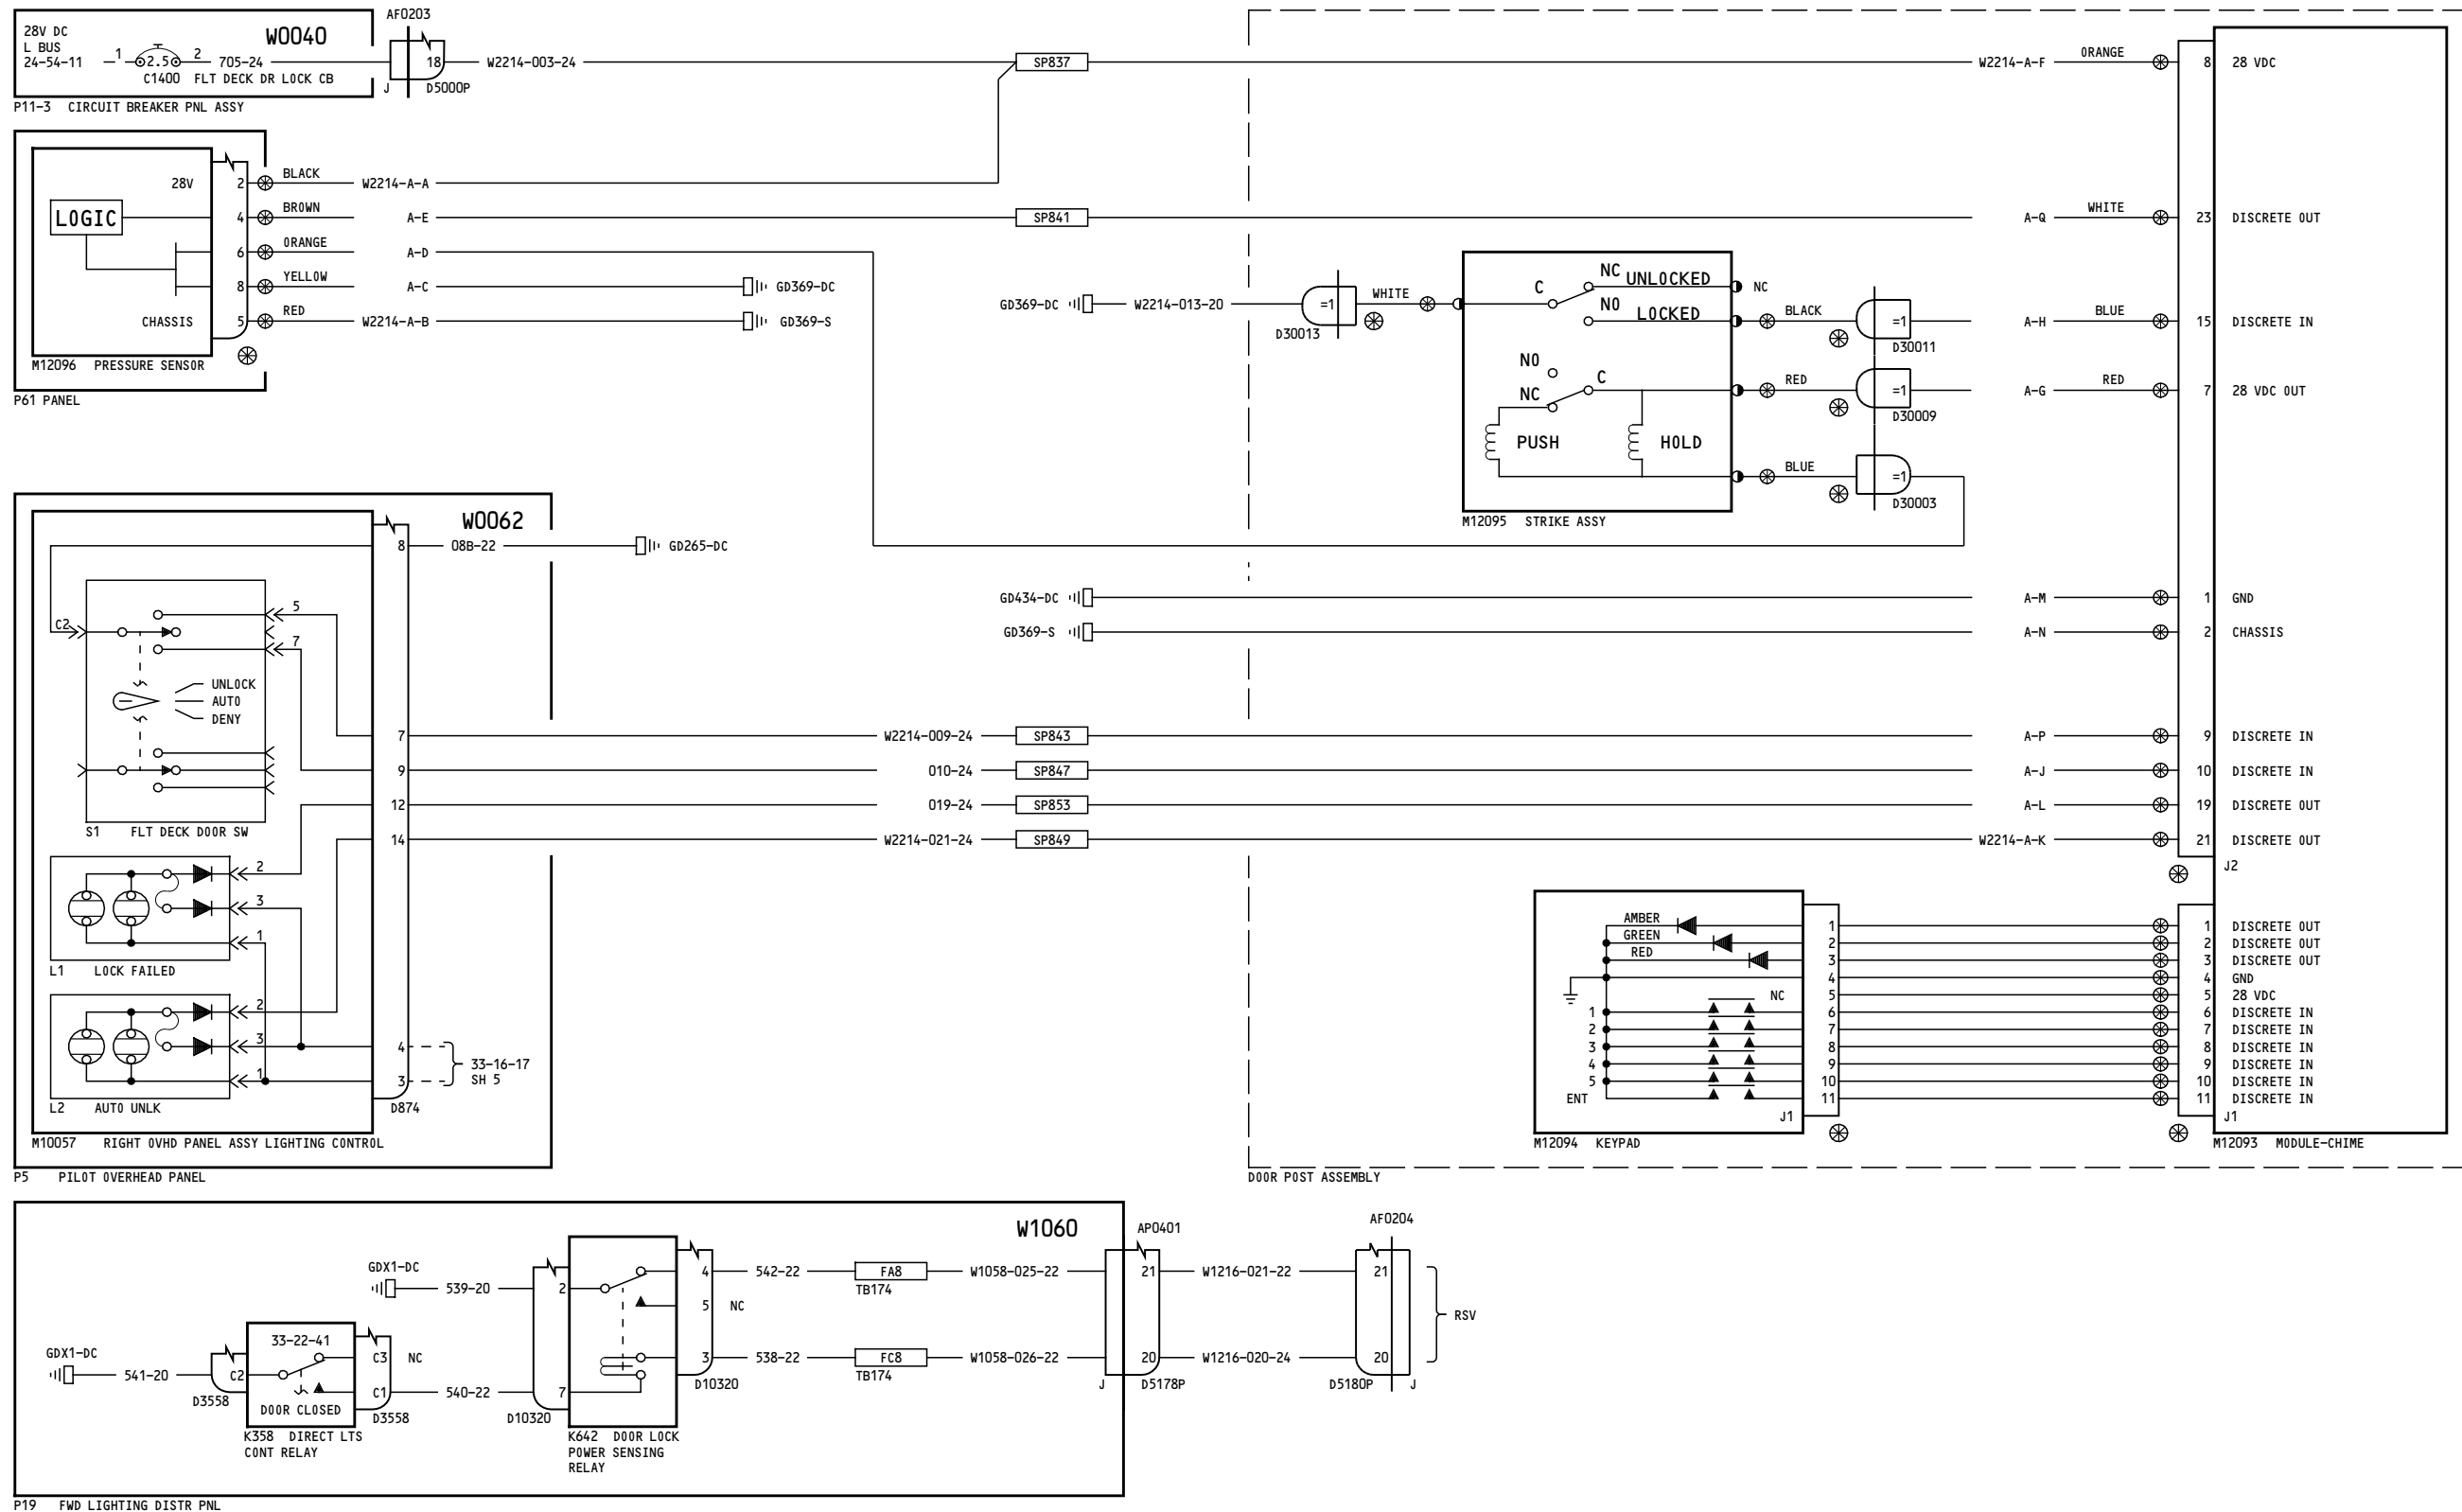

156

**DOOR LOCK-
FLIGHT COMPARTMENT**

52-51-11

Page 1.4

D280T132

Mar 09/2006


Incorporates
25-0325 R07

52-51-11

Page 1.4

Mar 09/2006

-A
41

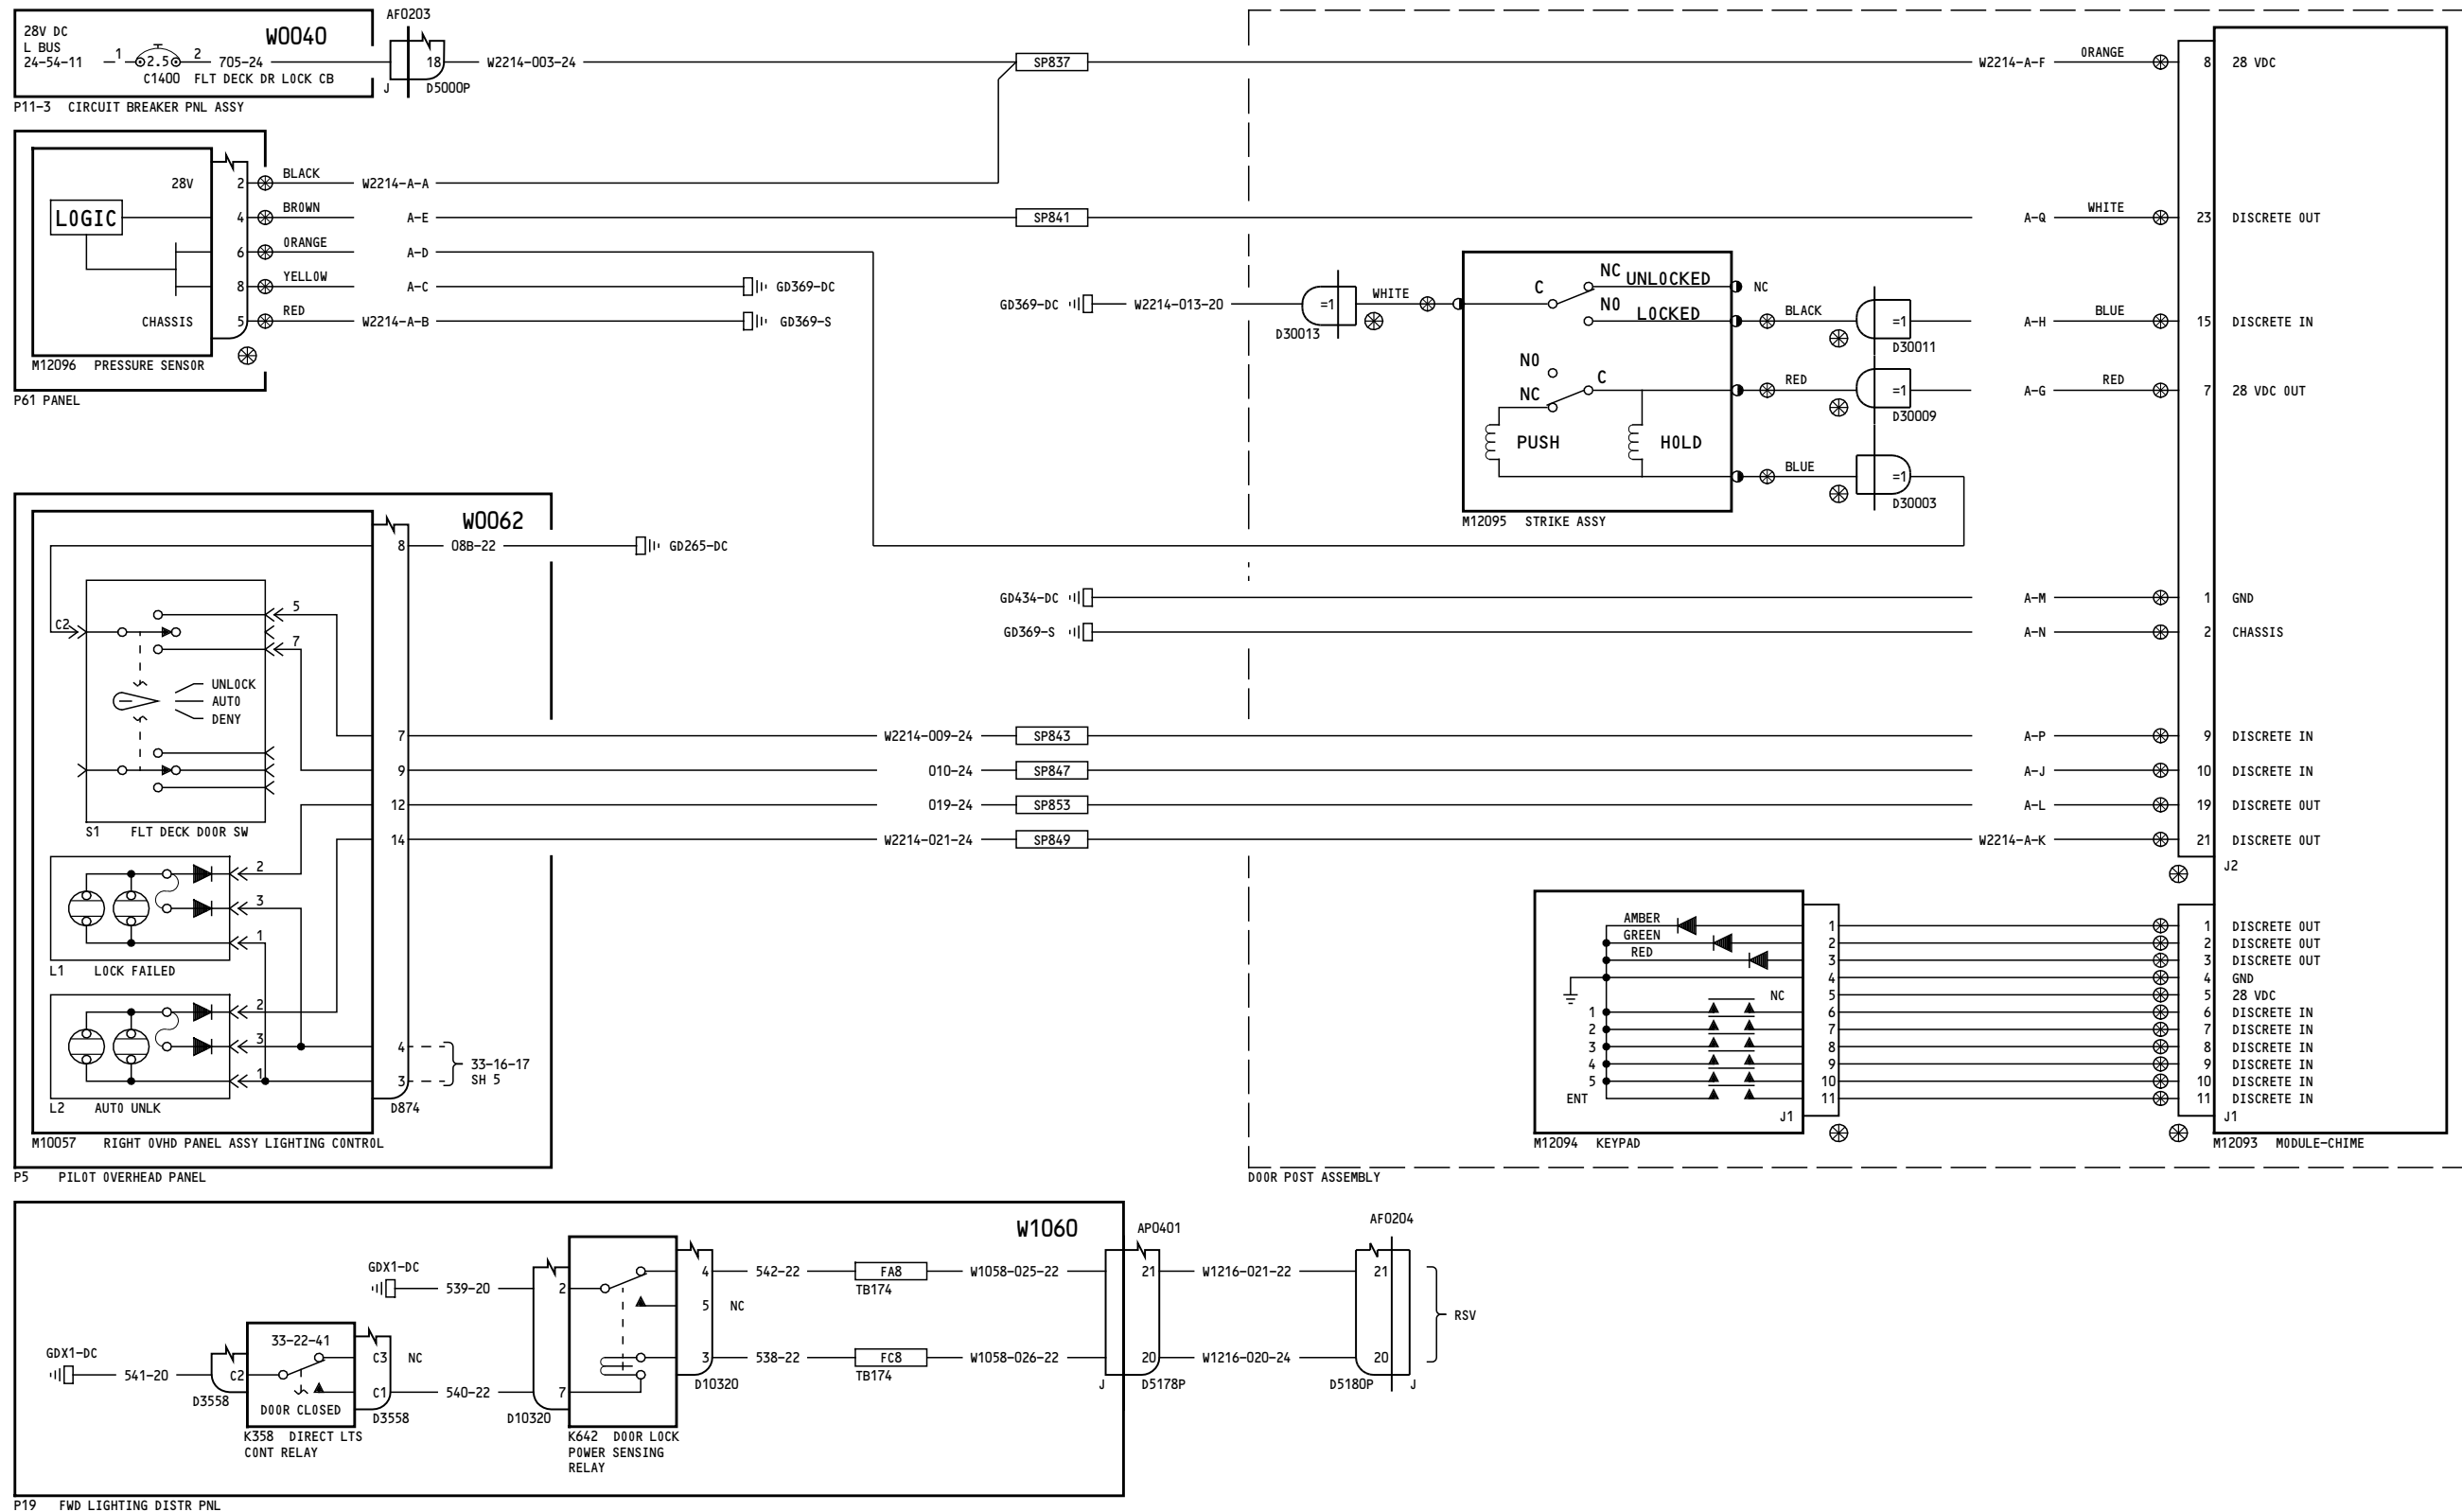

162

DOOR LOCK-FLIGHT COMPARTMENT

D280T132

52-51-11

Page 1.5

Mar 09/2006


Incorporates
25-0325 R03

52-51-11

Page 1.5

Mar 09/2006

-A
41

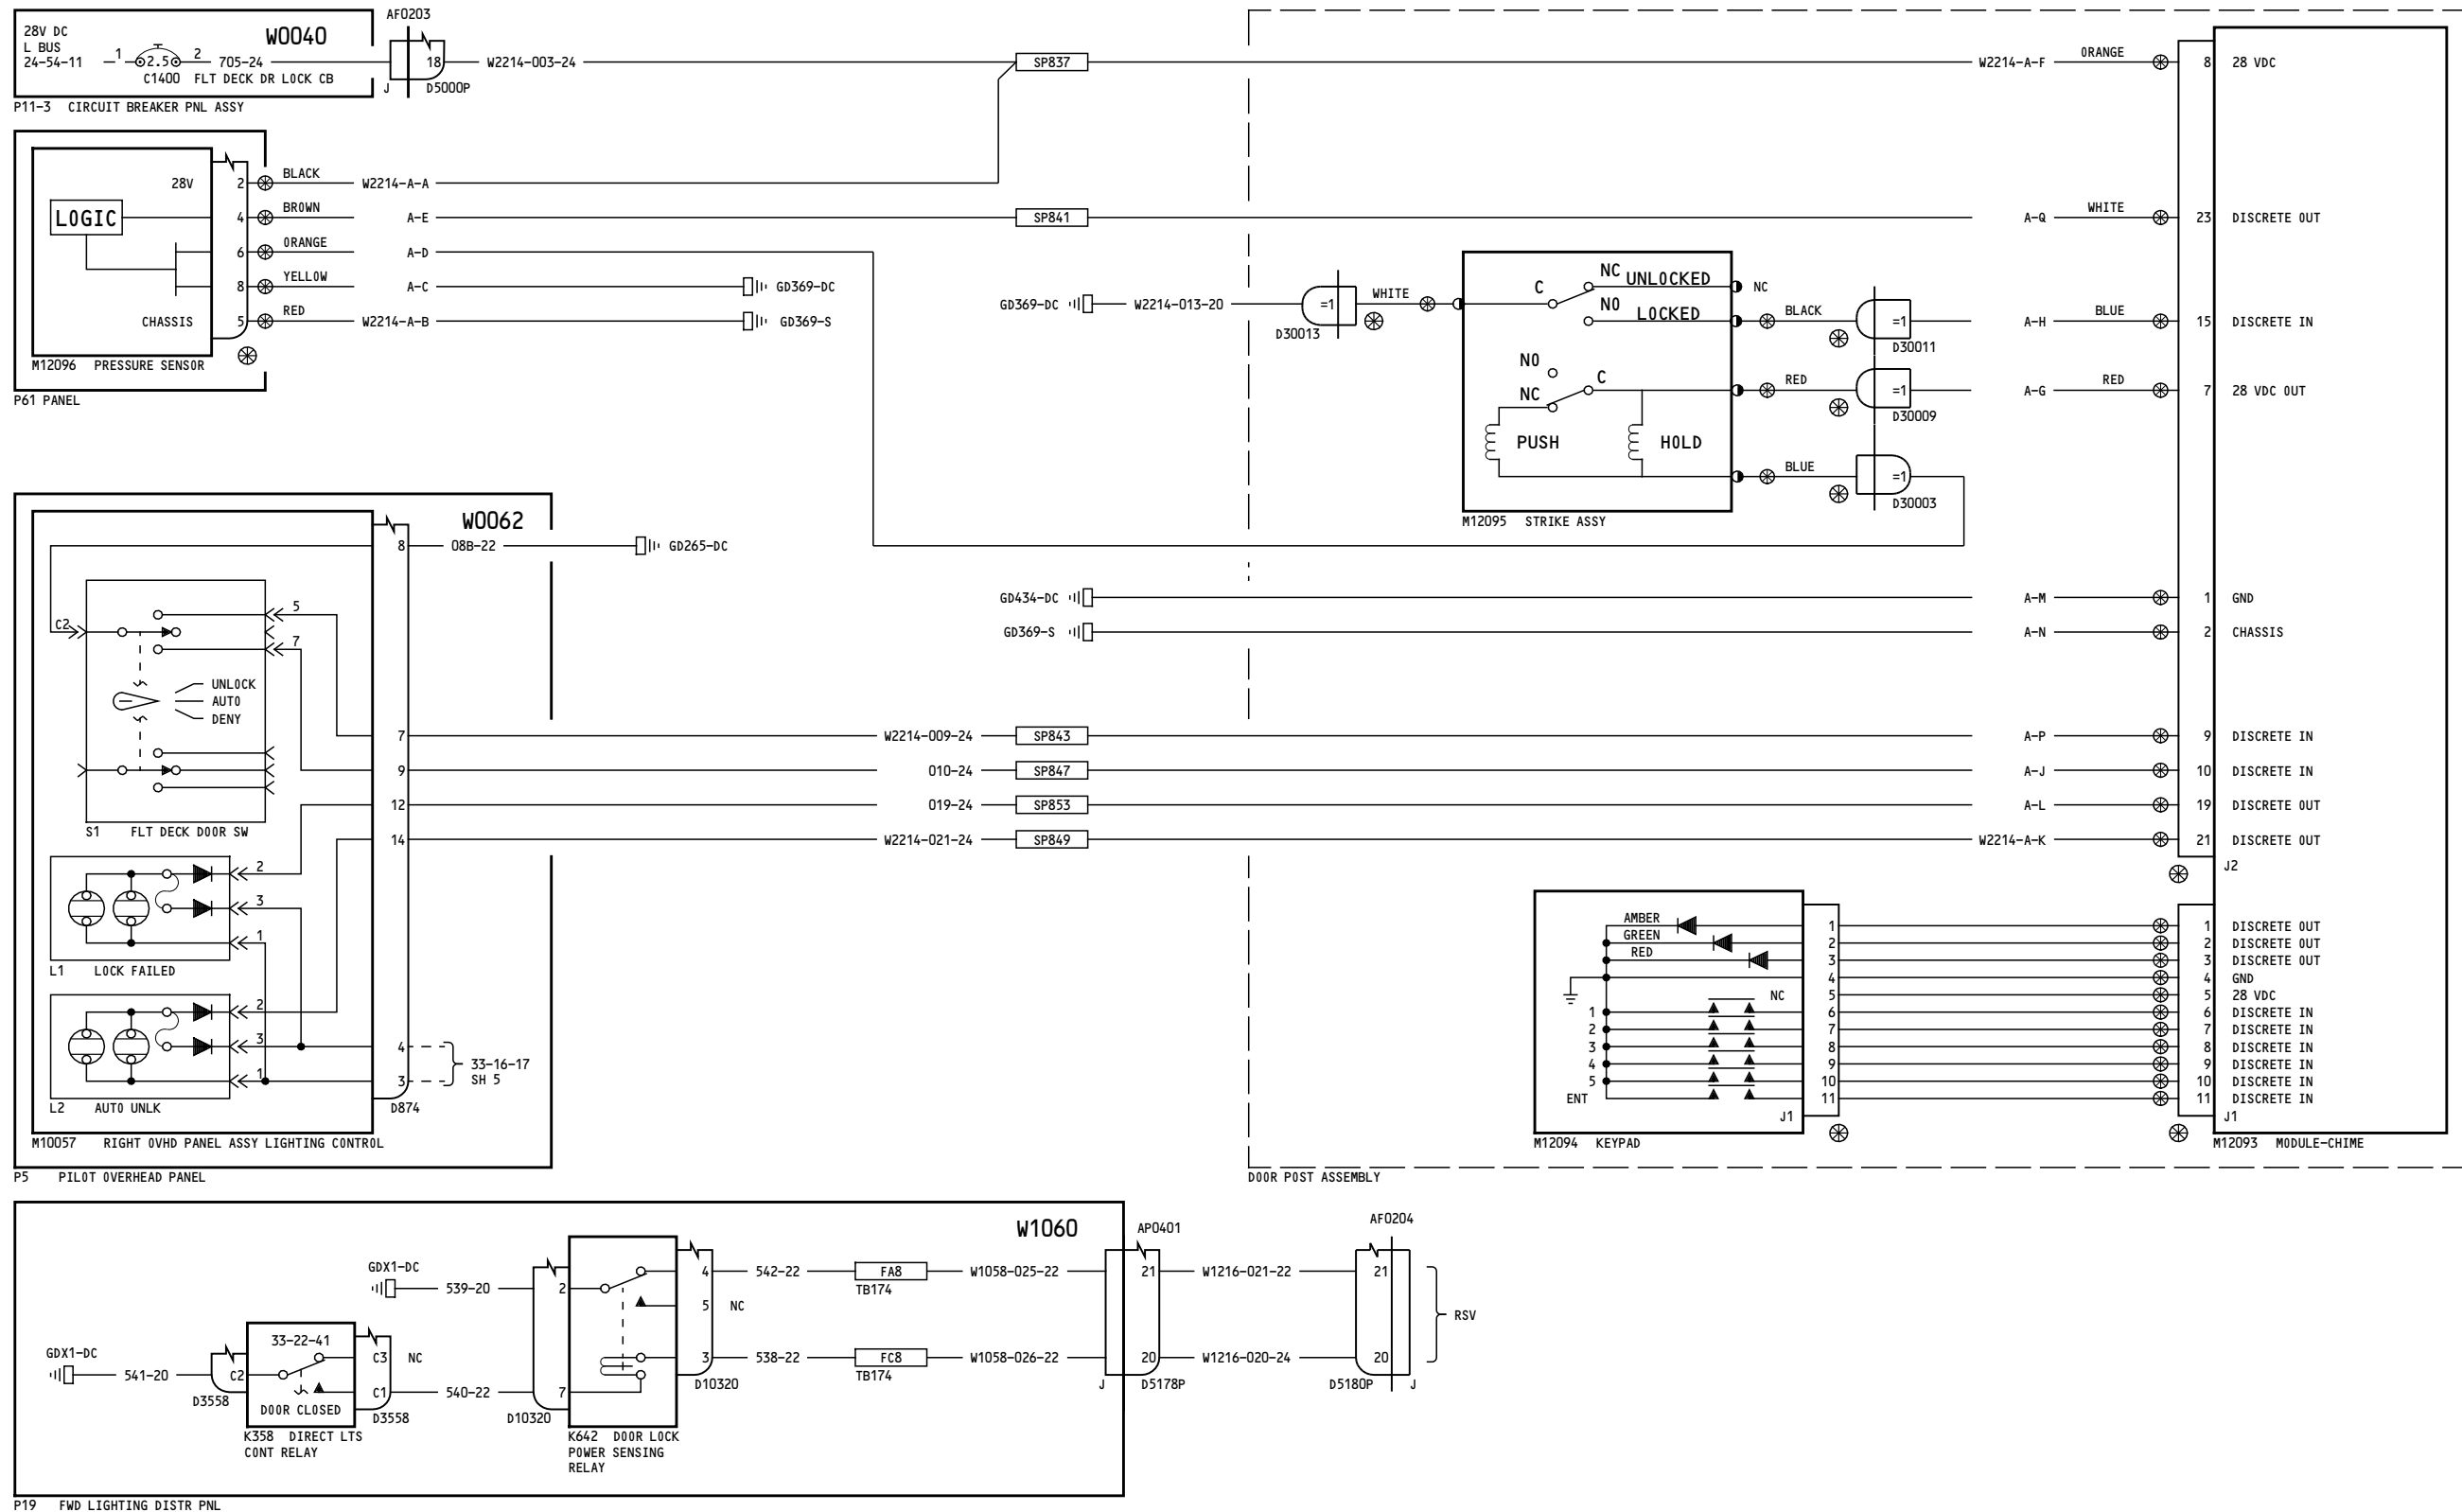

163-165

**DOOR LOCK-
FLIGHT COMPARTMENT**

D280T132

52-51-11

Page 1.6


Mar 09/2006

Incorporates
25-0325 R02

52-51-11

Page 1.6

Mar 09/2006

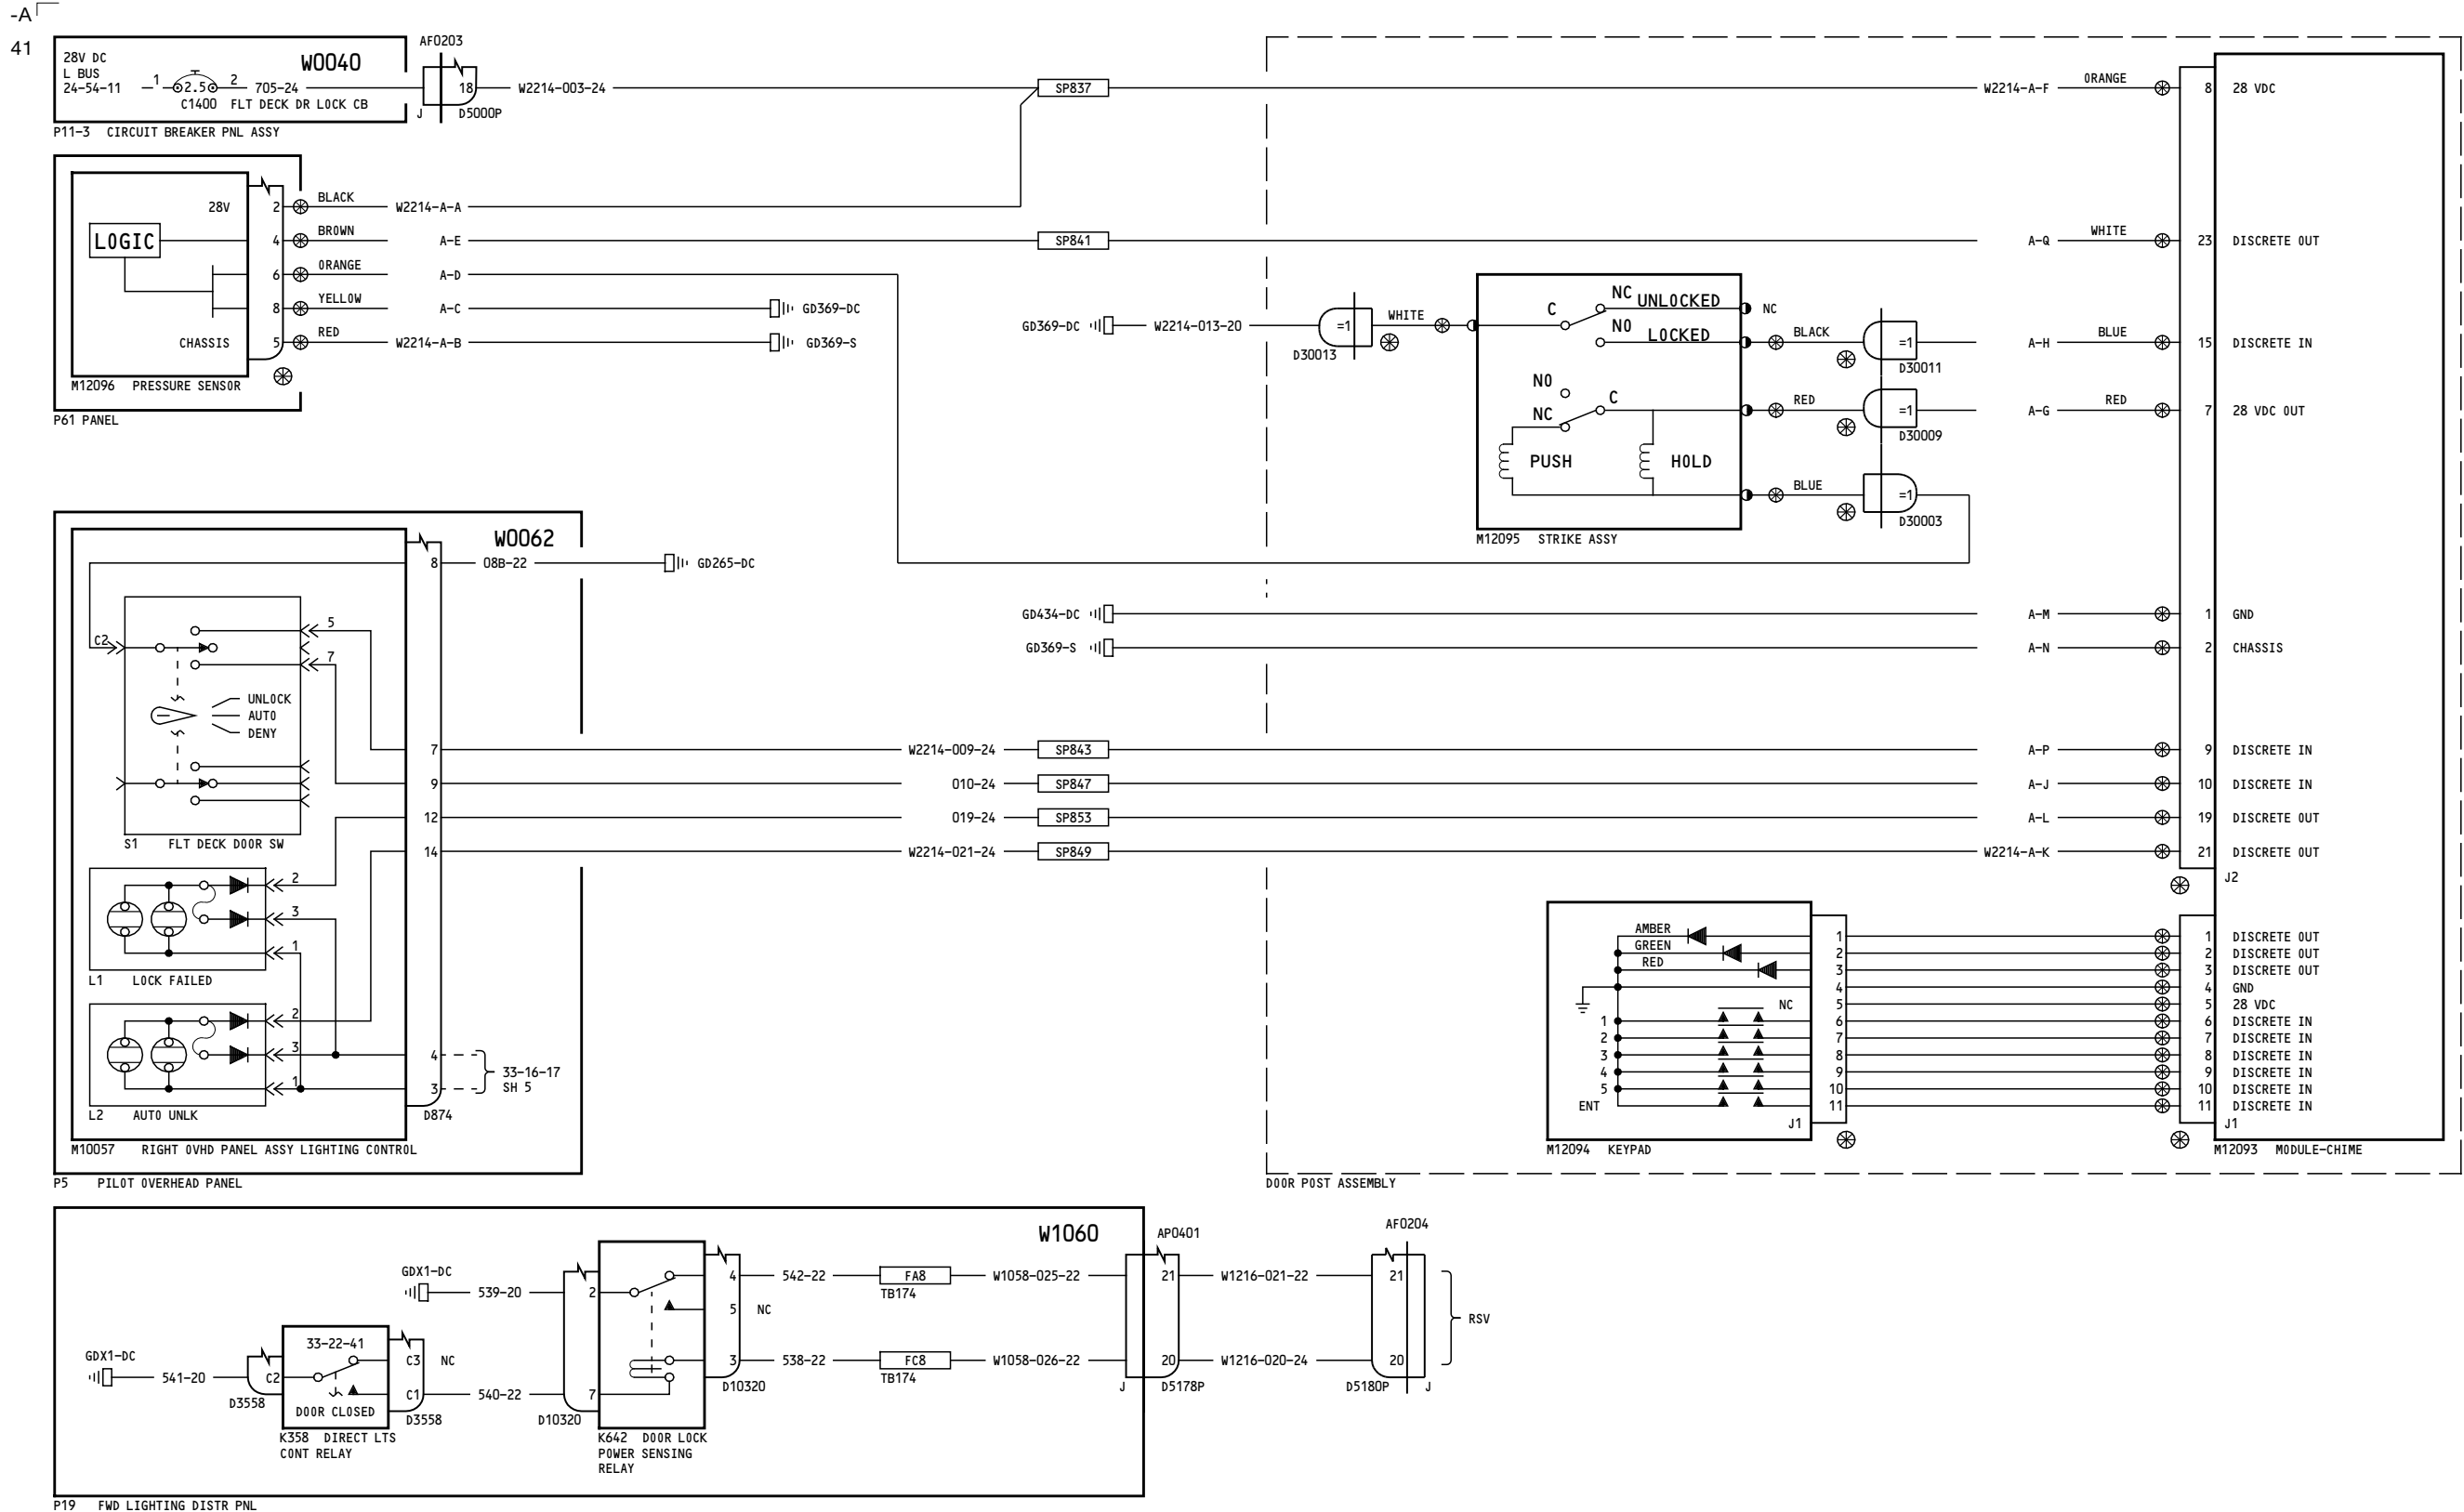

166

DOOR LOCK-FLIGHT COMPARTMENT

52-51-11

Page 1.7

Mar 09/2006

D280T132


Incorporates 25-0325 R14

52-51-11

Page 1.7

Mar 09/2006

-A
41

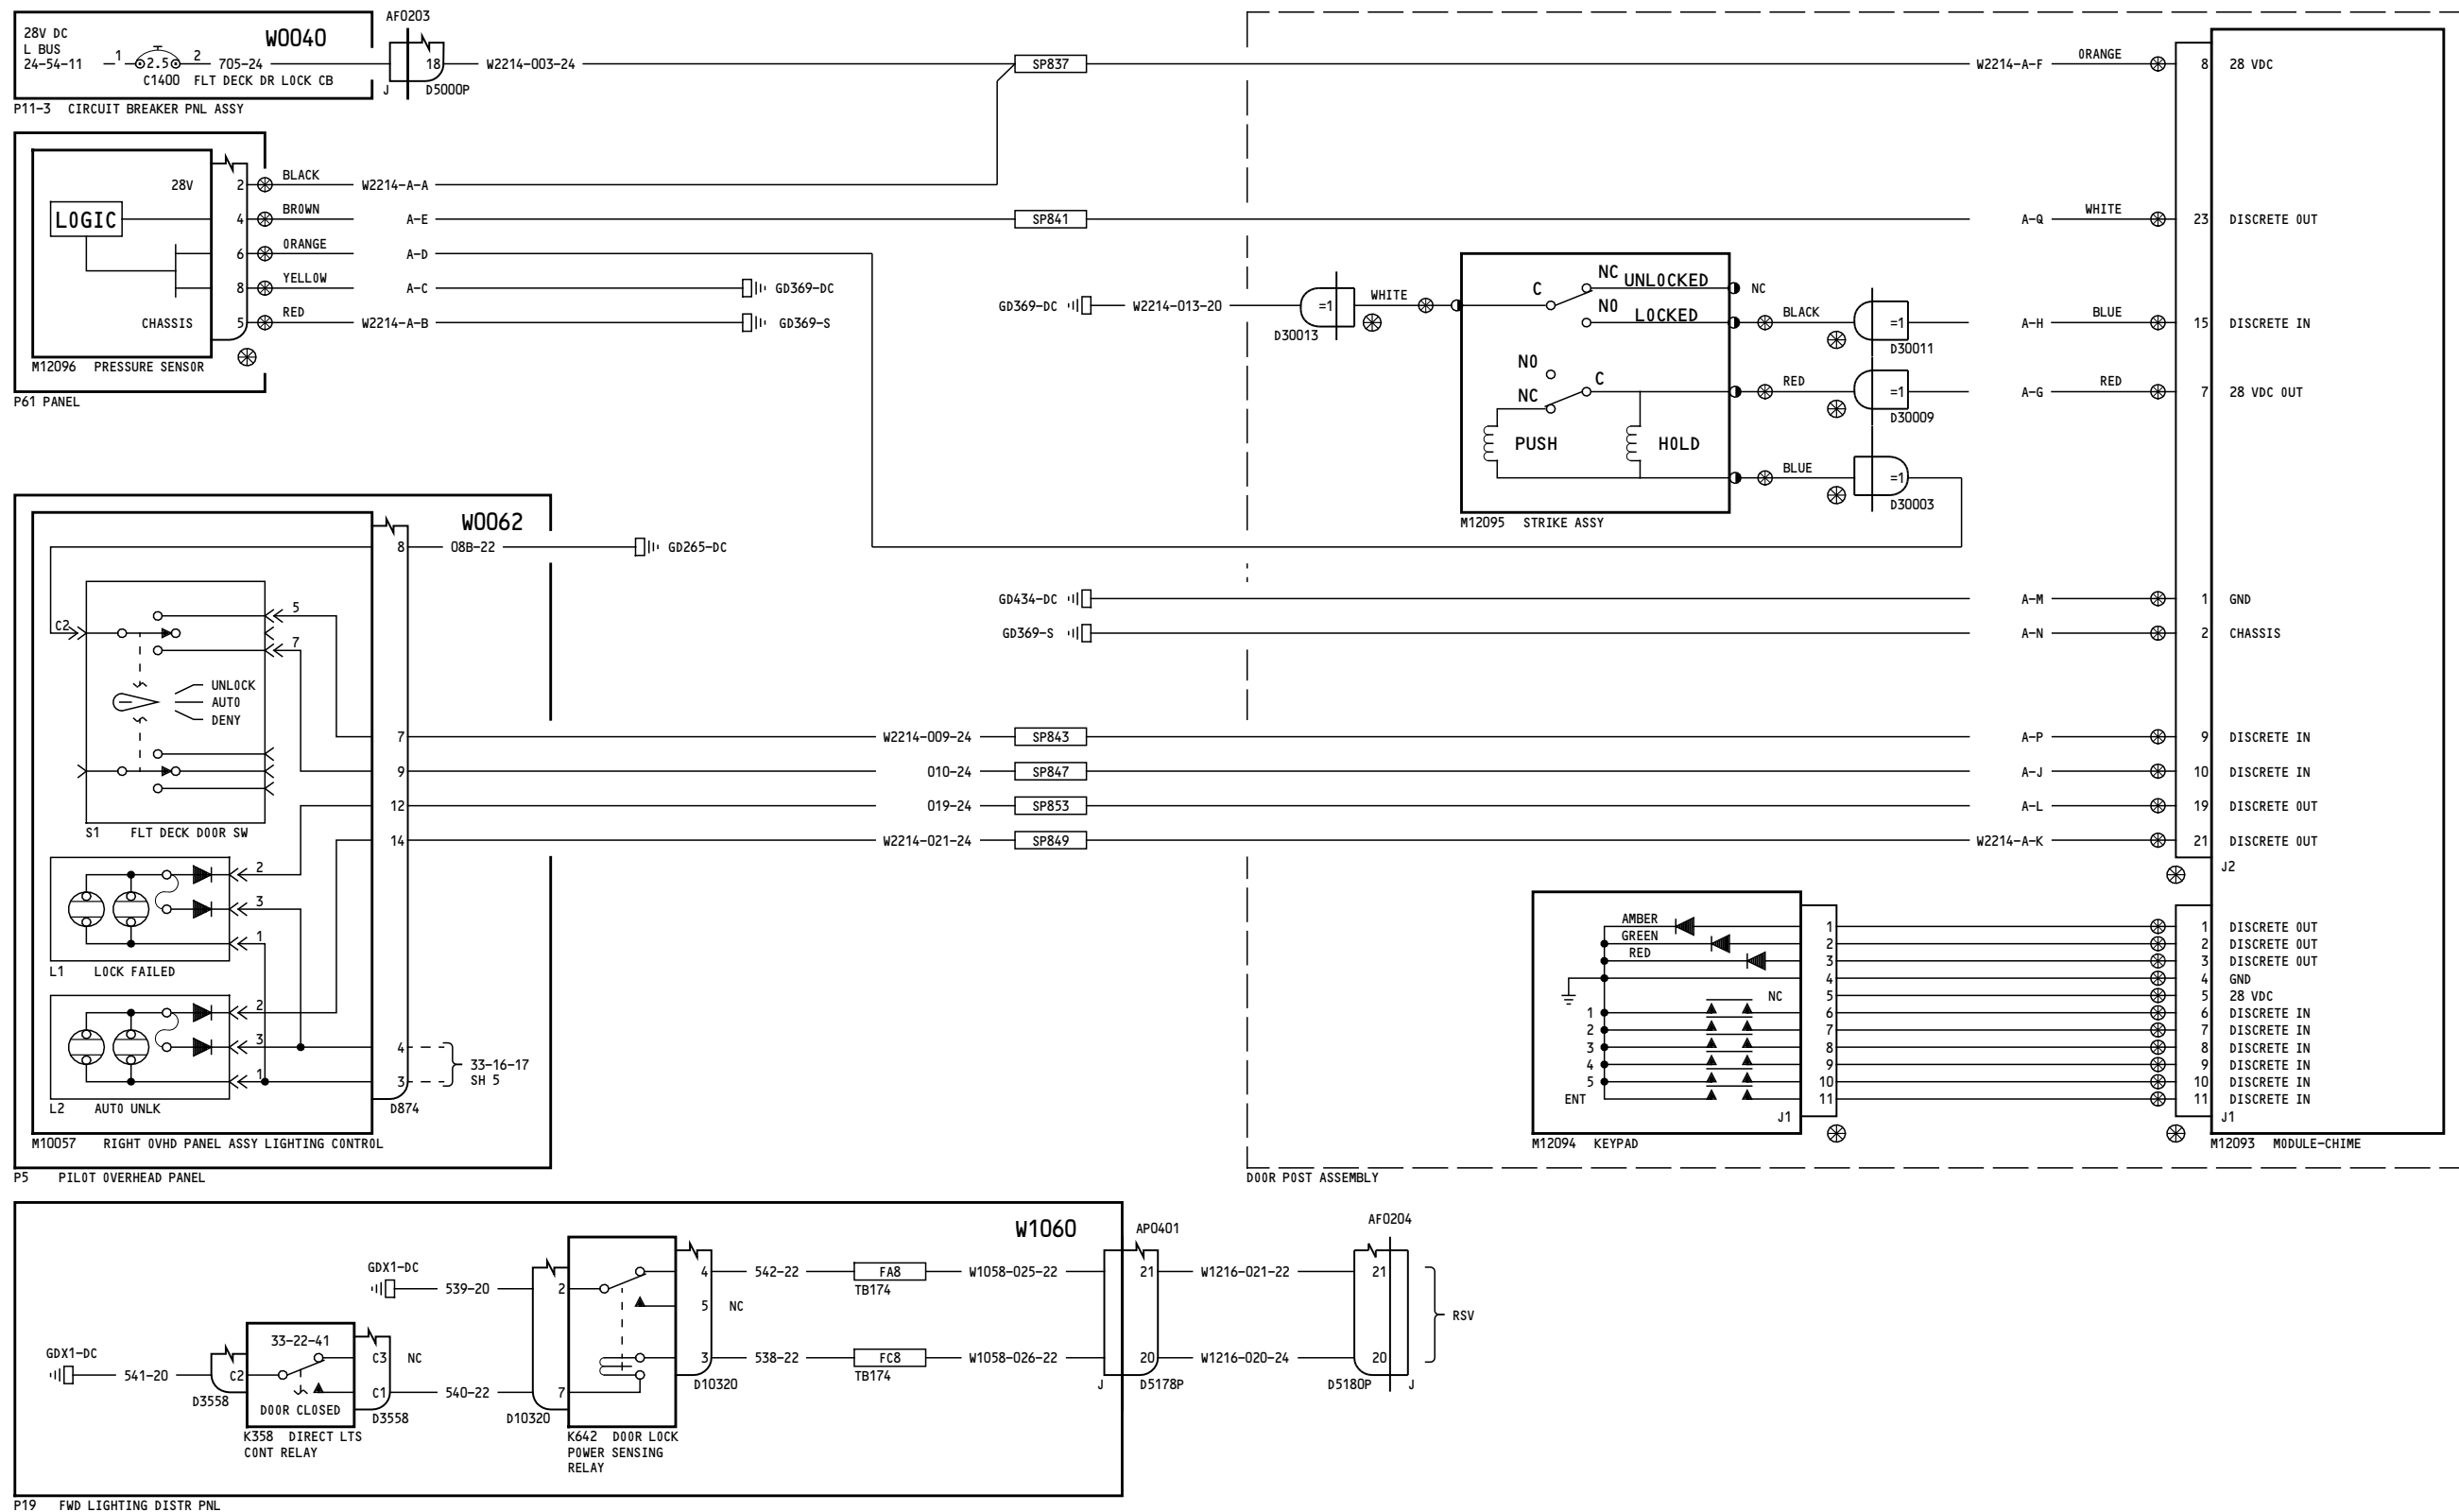

167

DOOR LOCK-FLIGHT COMPARTMENT

52-51-11

Page 1.8

Mar 09/2006

D280T132


Incorporates
25-0325 R04

52-51-11

Page 1.8

Mar 09/2006

48

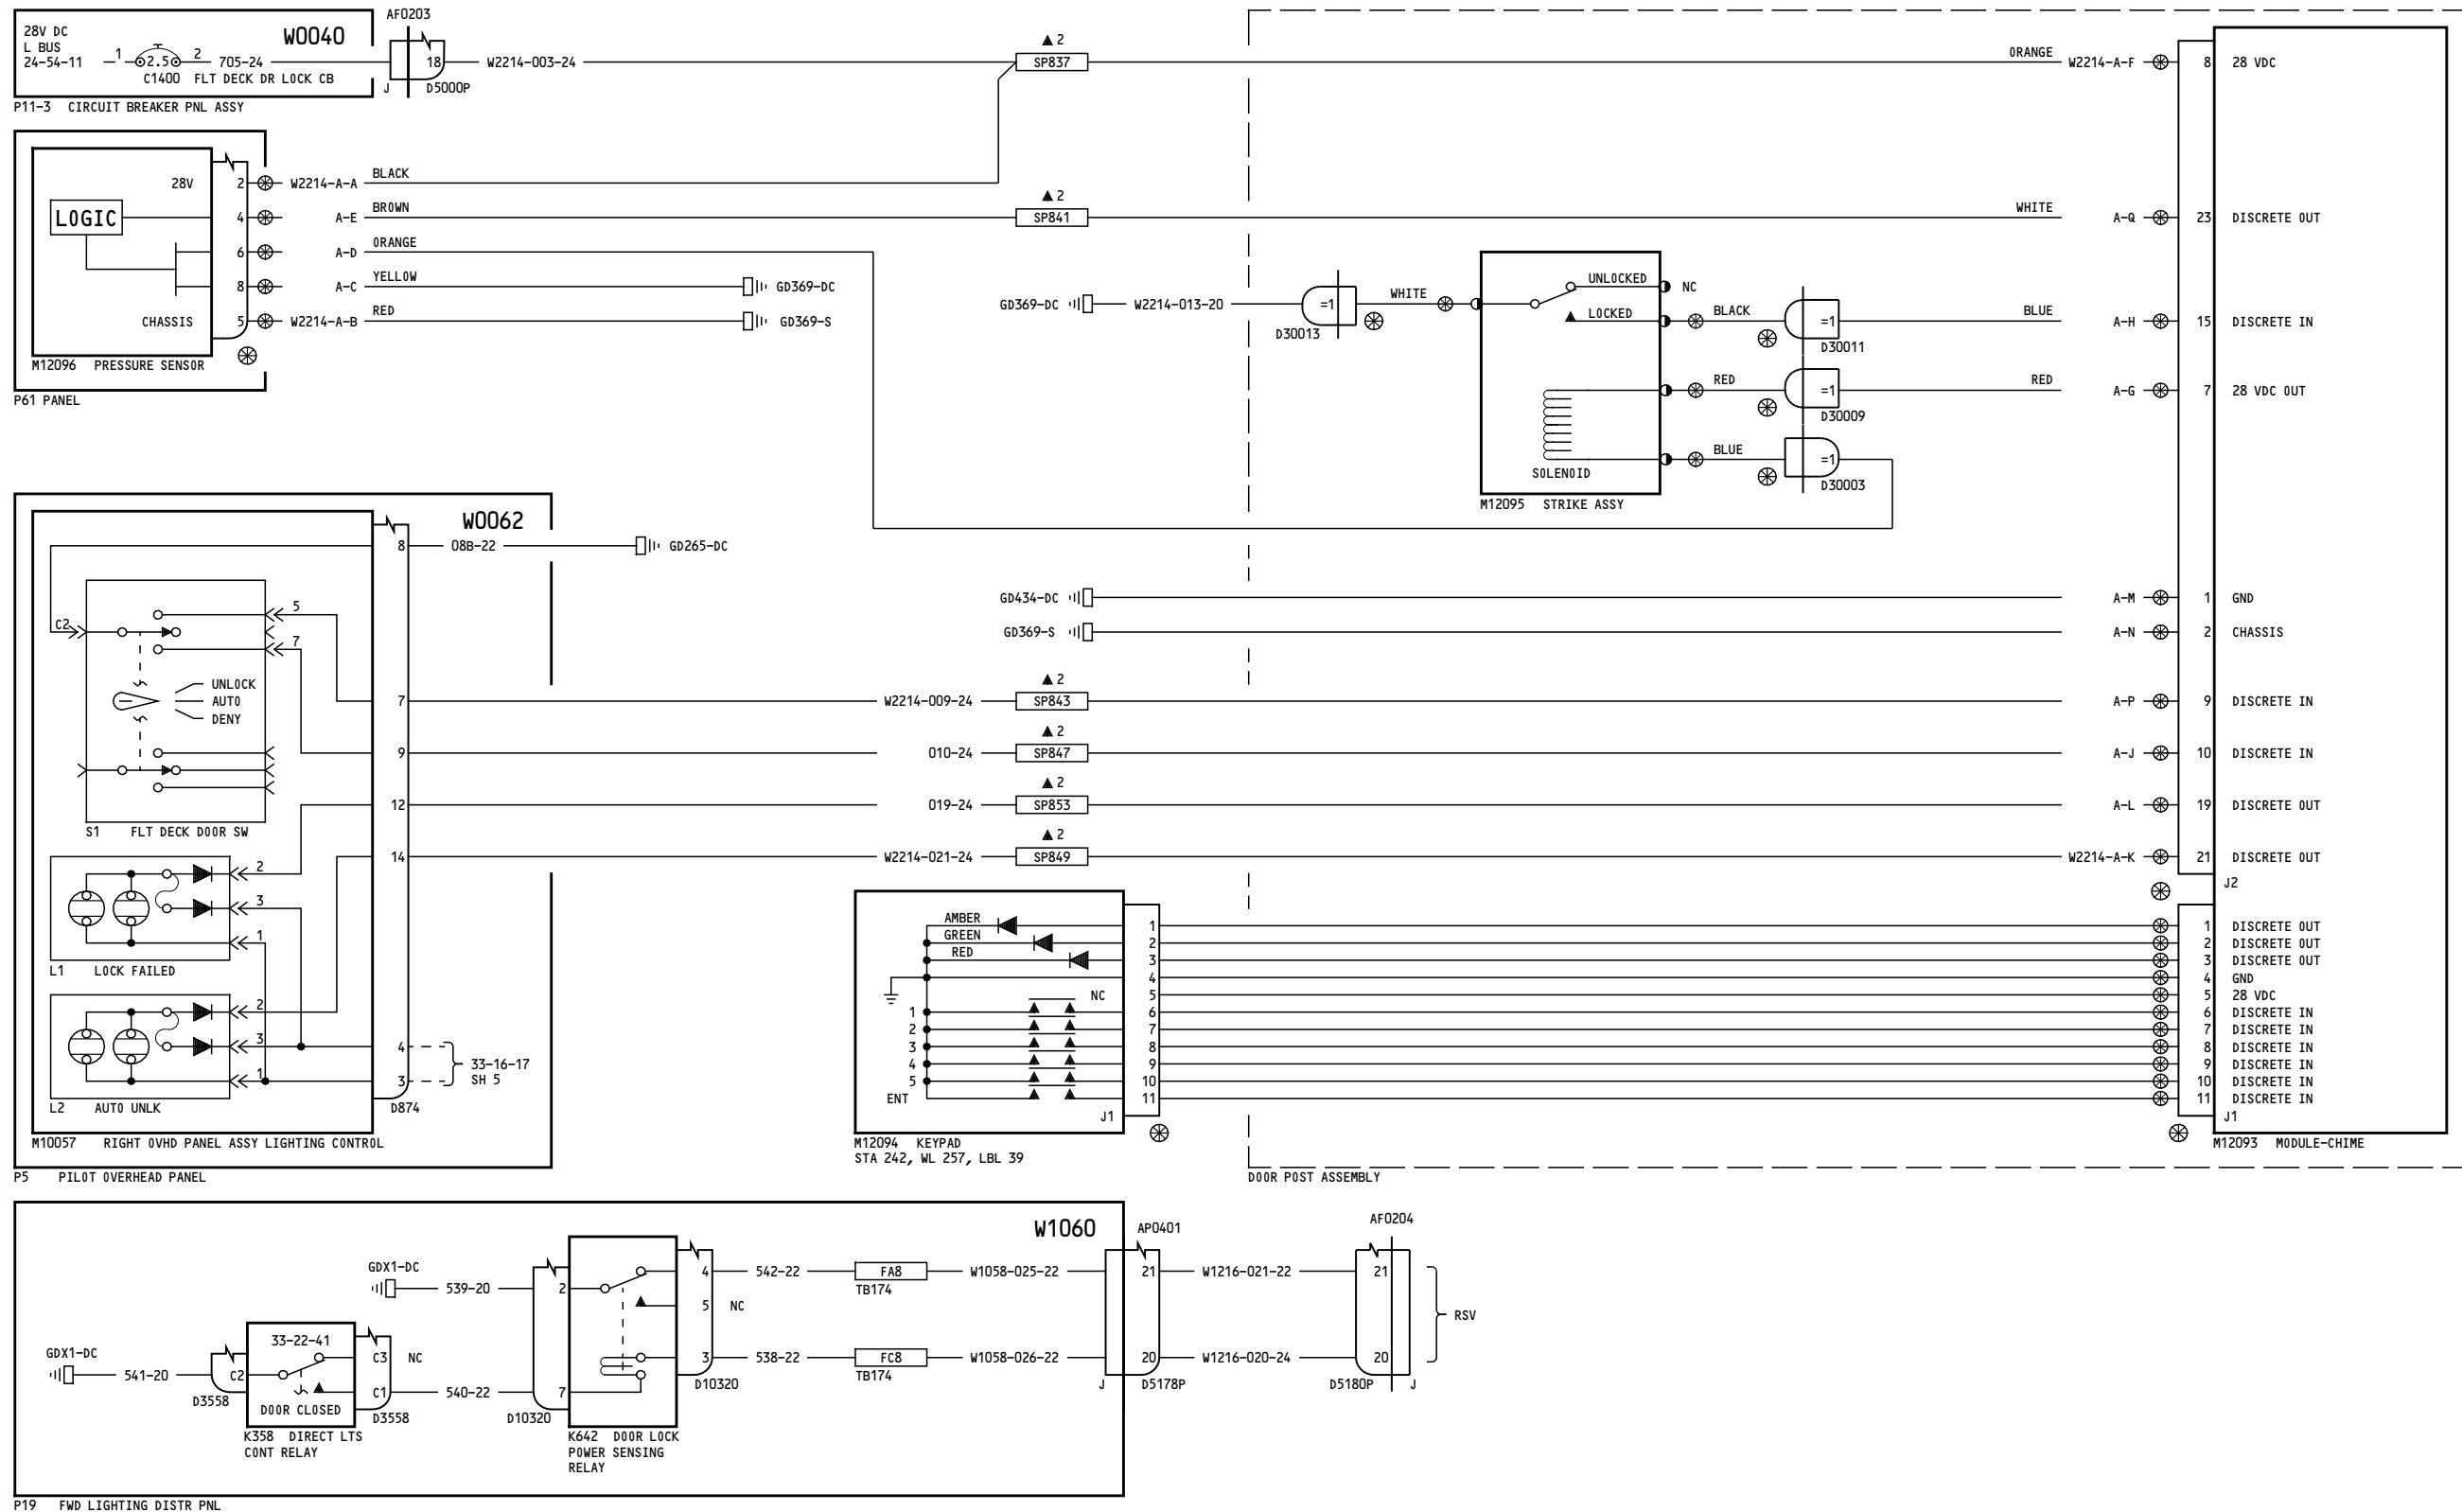

150, 153

DOOR LOCK-FLIGHT COMPARTMENT

52-51-11

Page 2.1

D280T132

Mar 09/2006


Incorporates
25-0332

52-51-11

Page 2.1

Mar 09/2006

-A
41

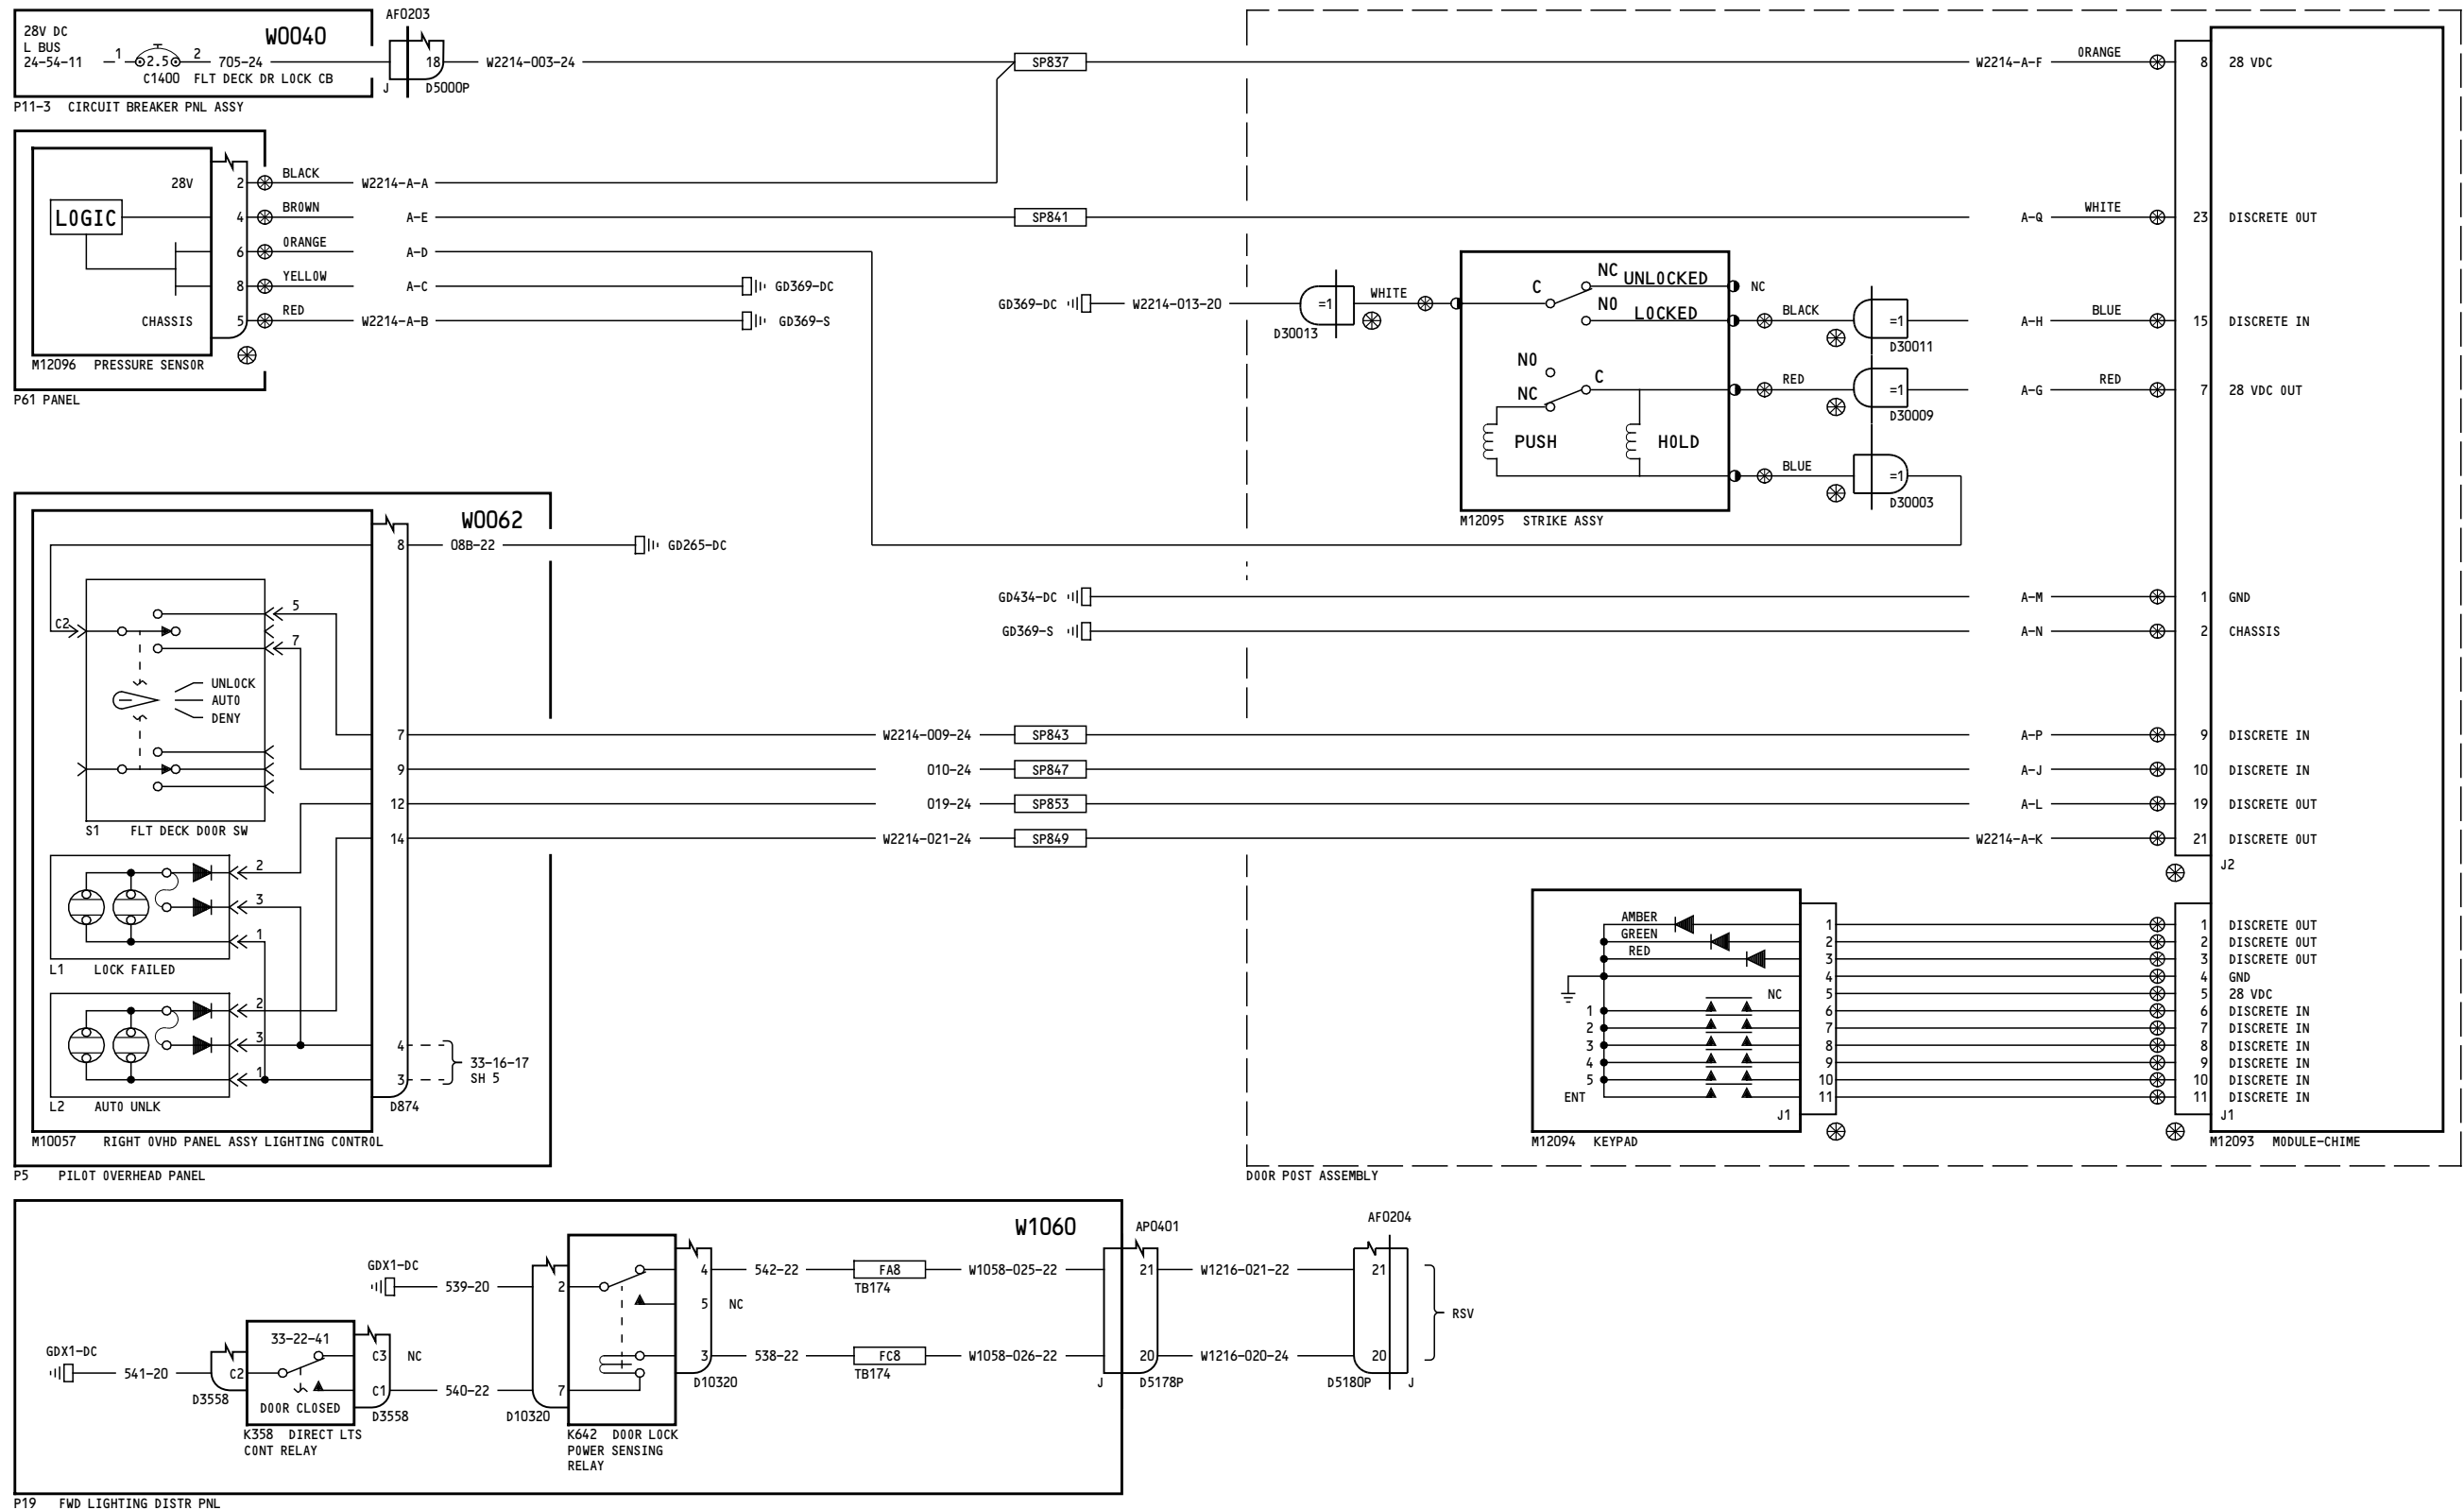

155, 157, 276-280

**DOOR LOCK-
FLIGHT COMPARTMENT**

D280T132

52-51-11

Page 3.1


Mar 09/2006

Incorporates
25-0325

52-51-11

Page 3.1

Mar 09/2006

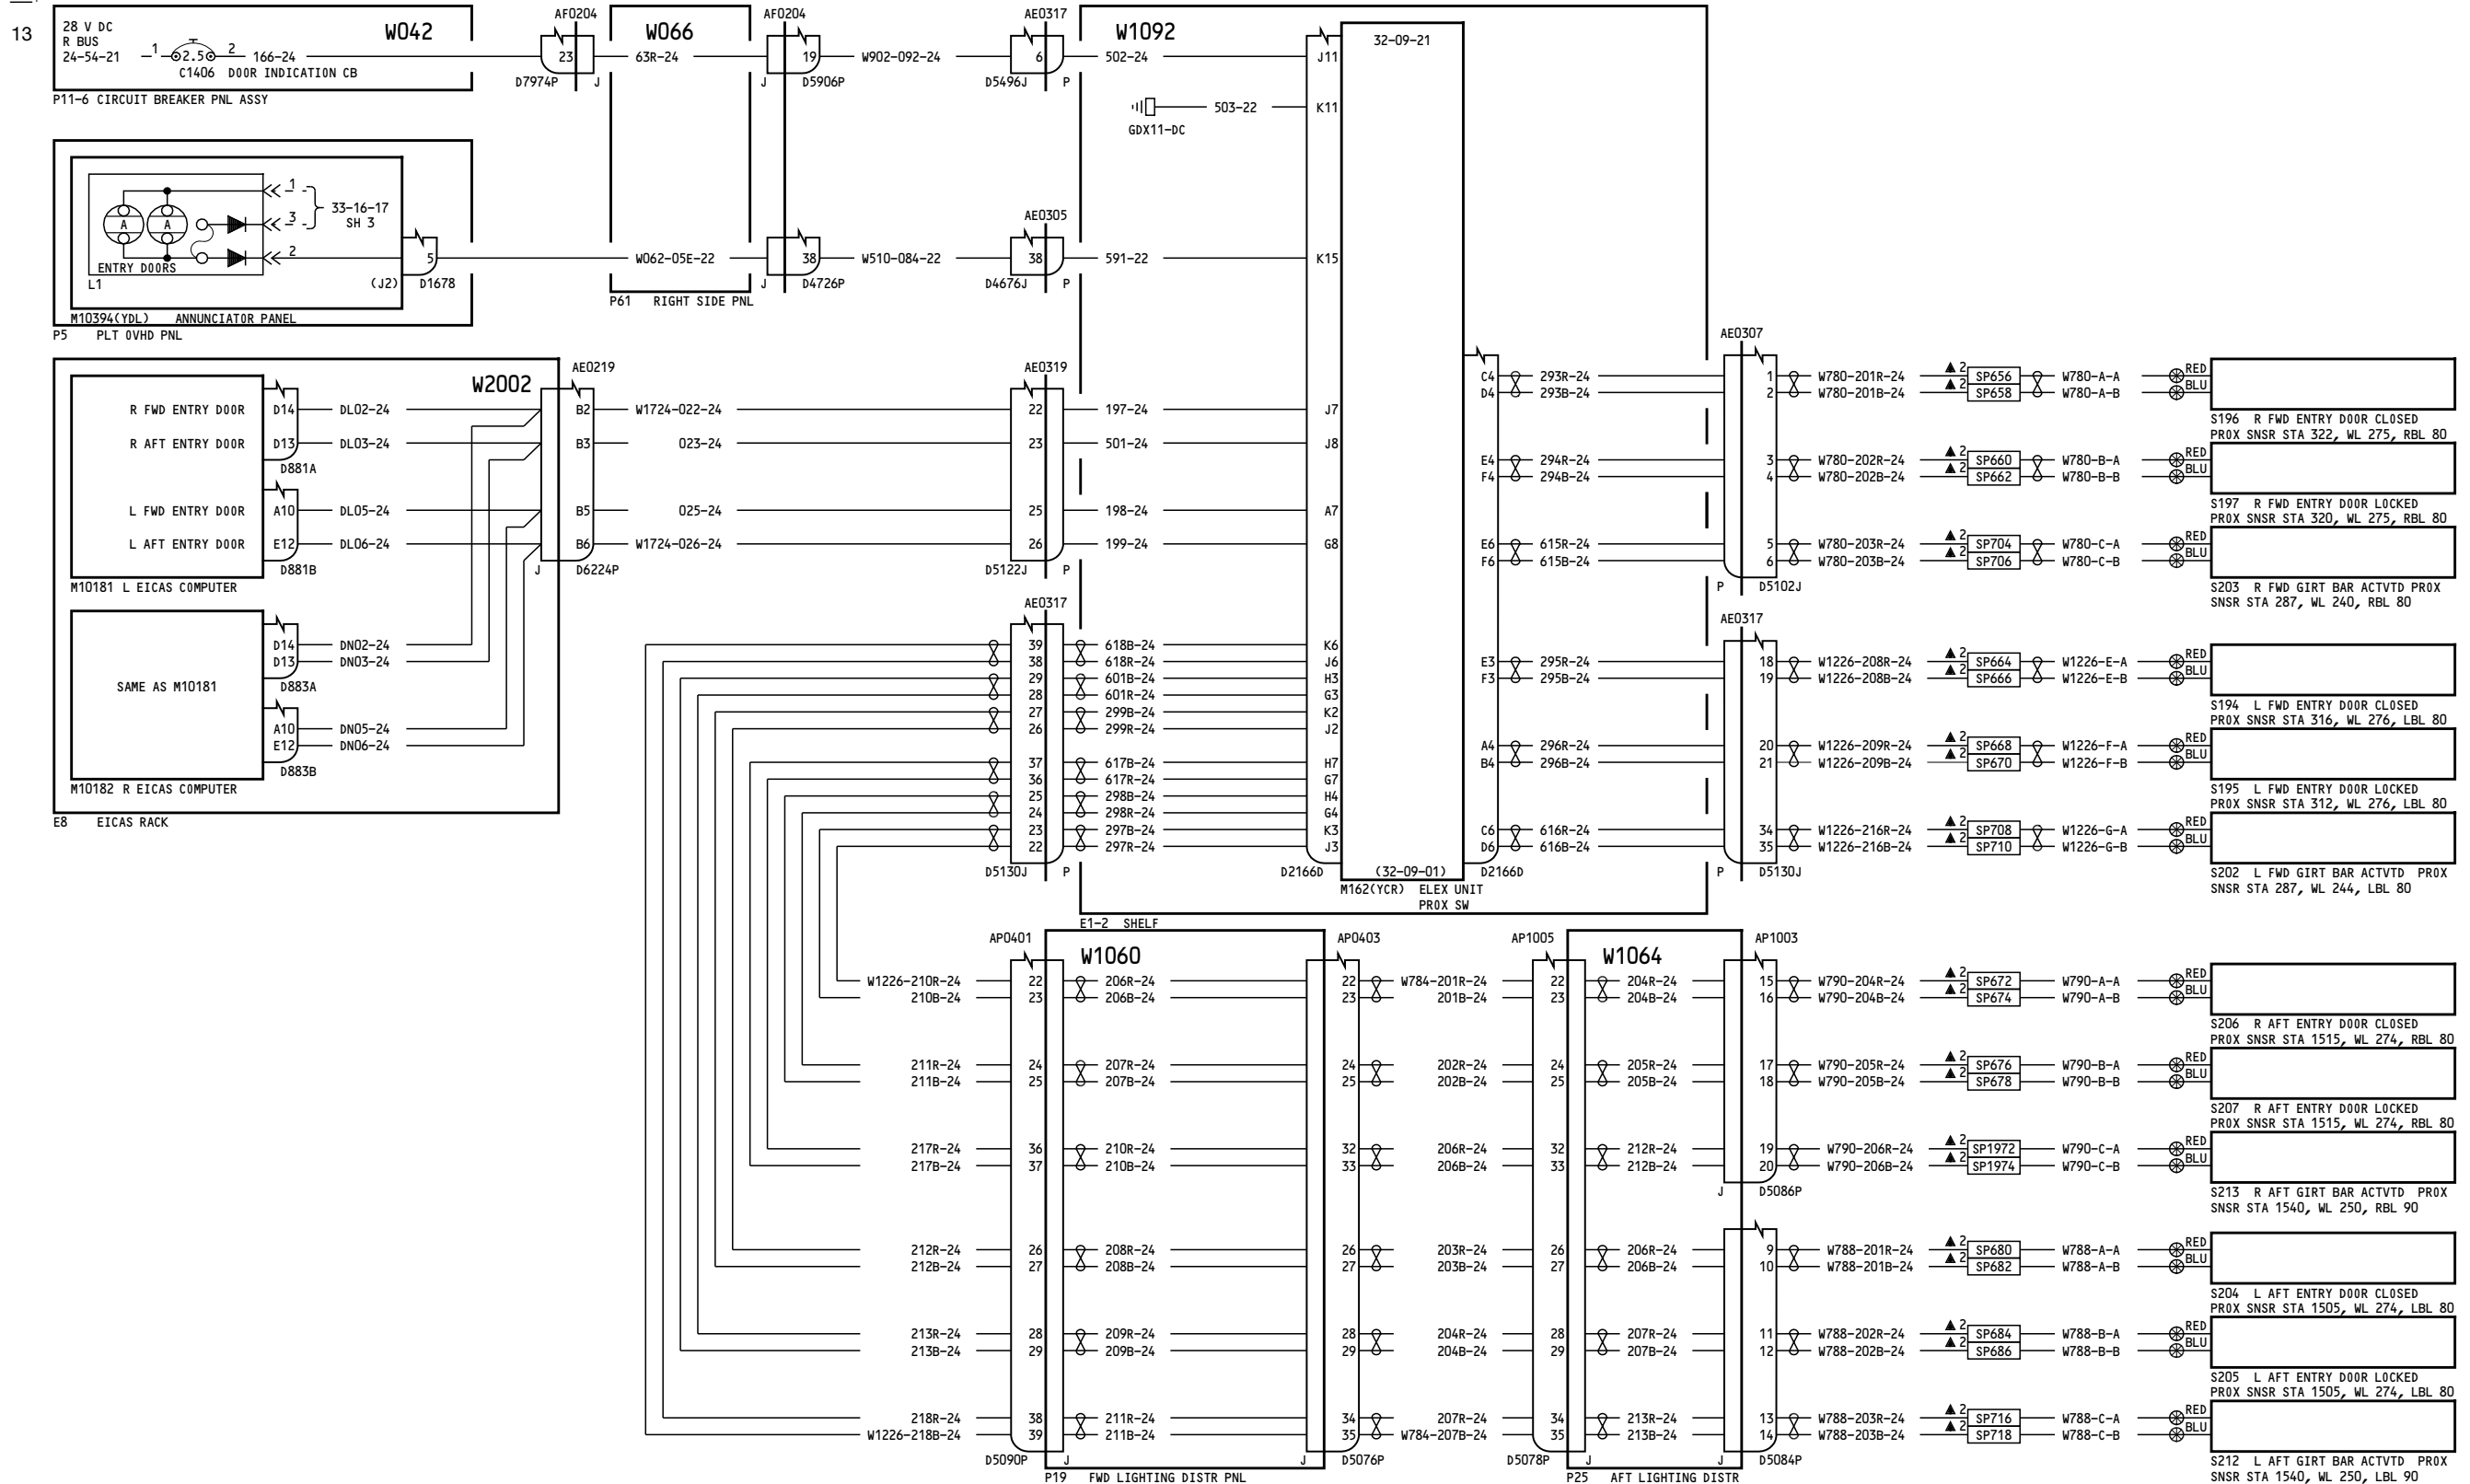


ALL

DOOR WARNING-ENTRY DOORS

D280T132

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

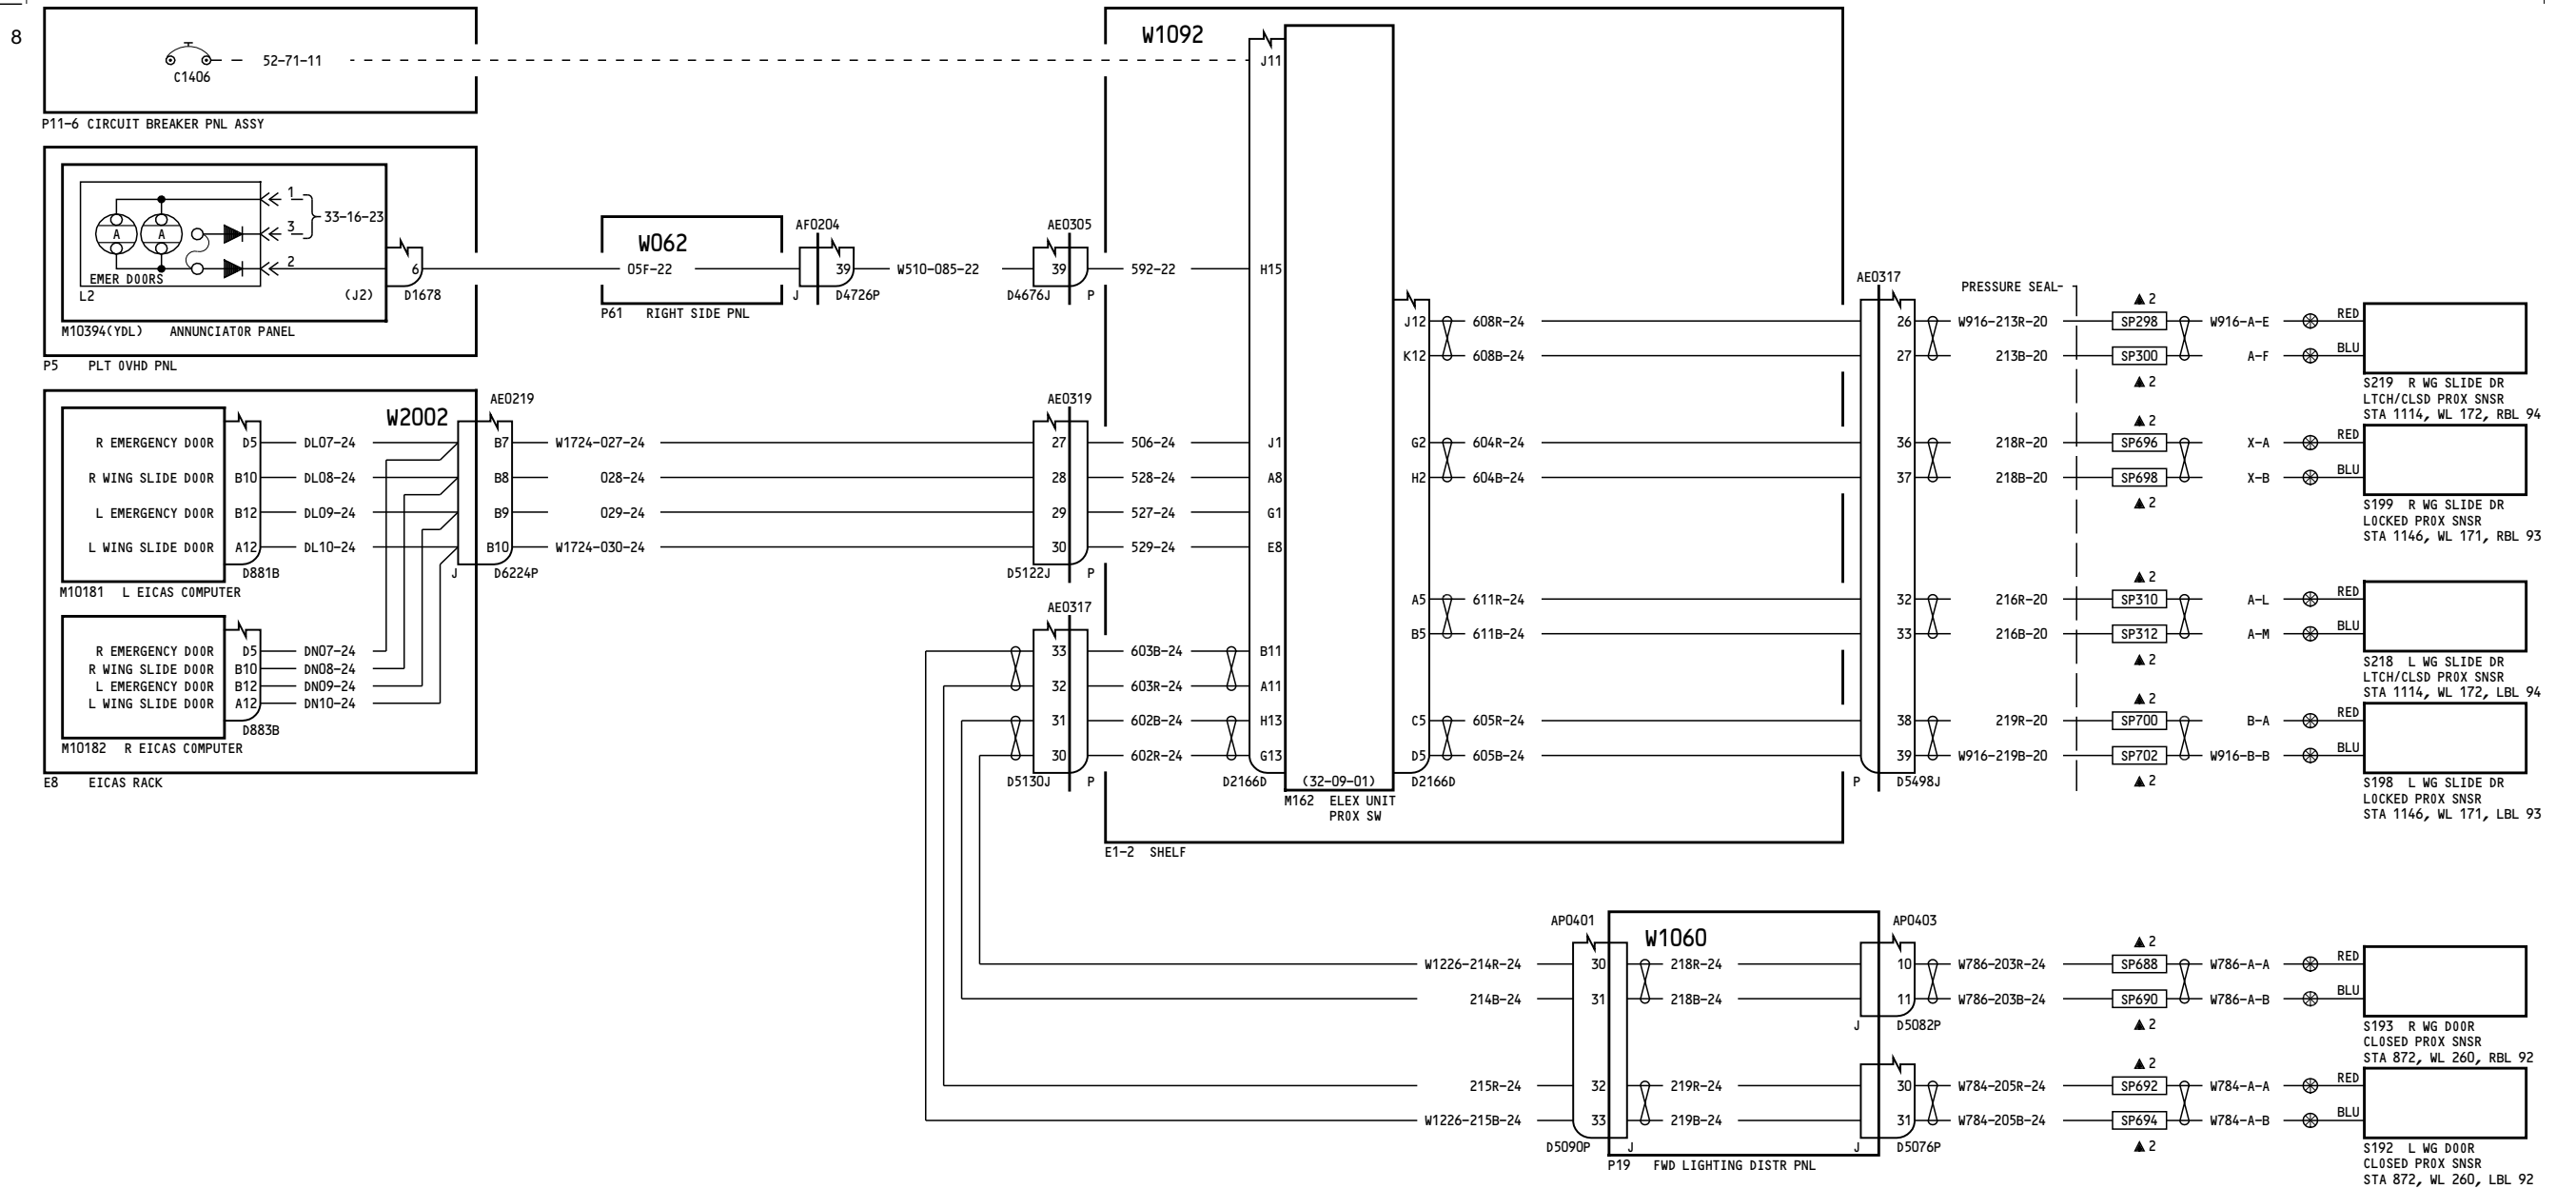

050-099

**DOOR WARNING-
WING & SLIDE DOORS**

52-71-12

Page 1


D280T132


Jan 21/2005

52-71-12

Page 1

Jan 21/2005

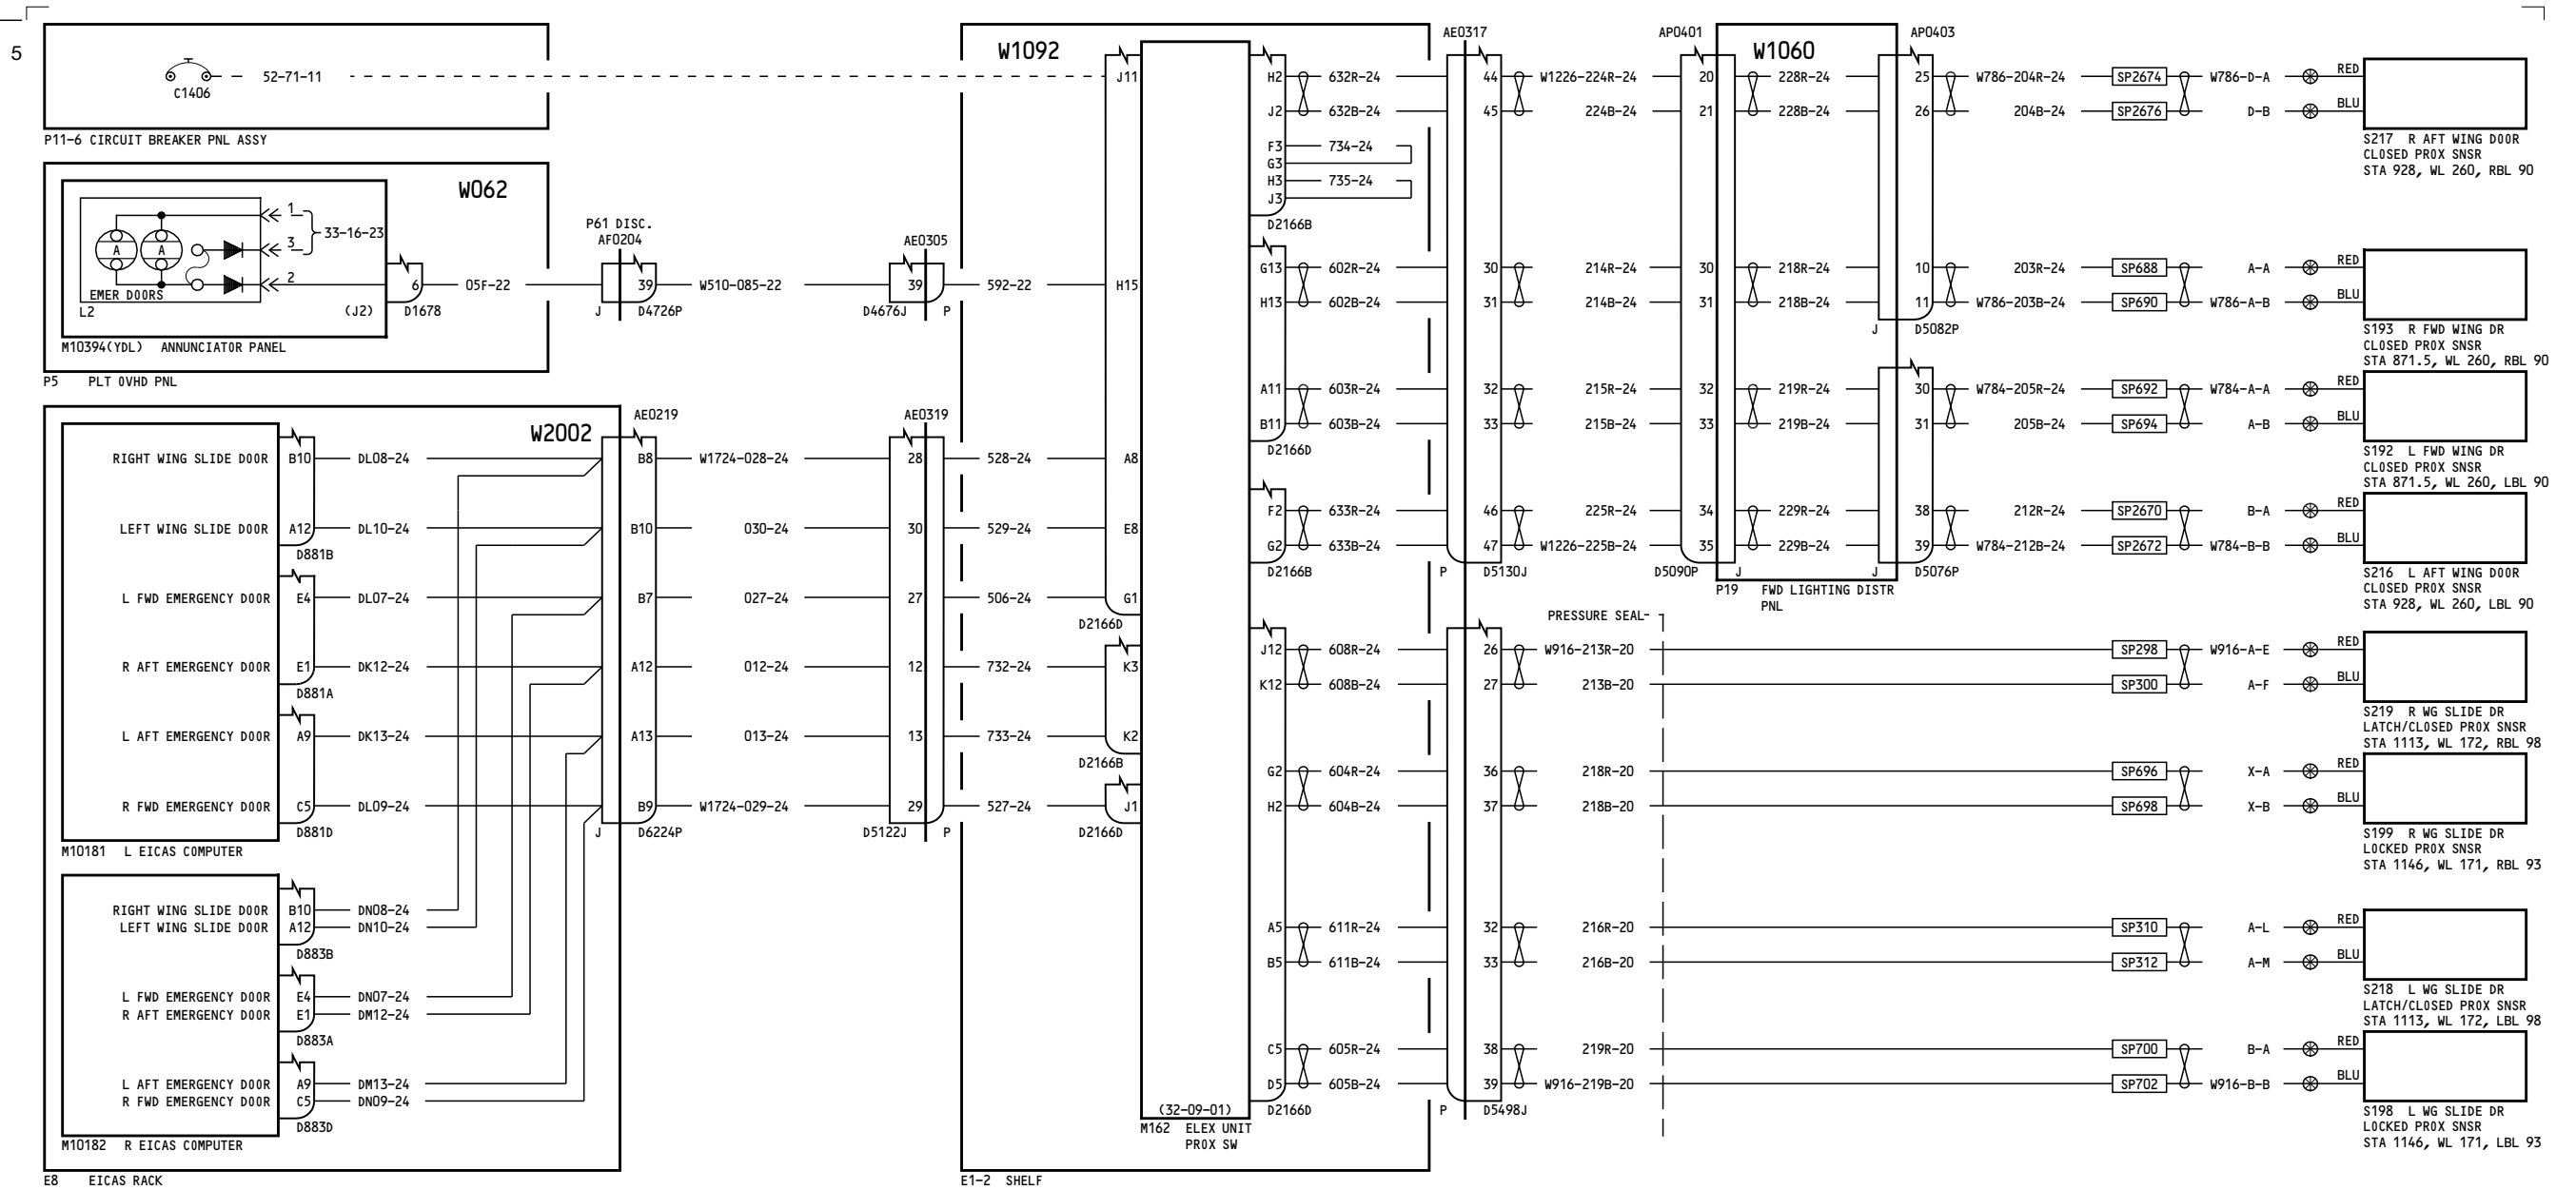

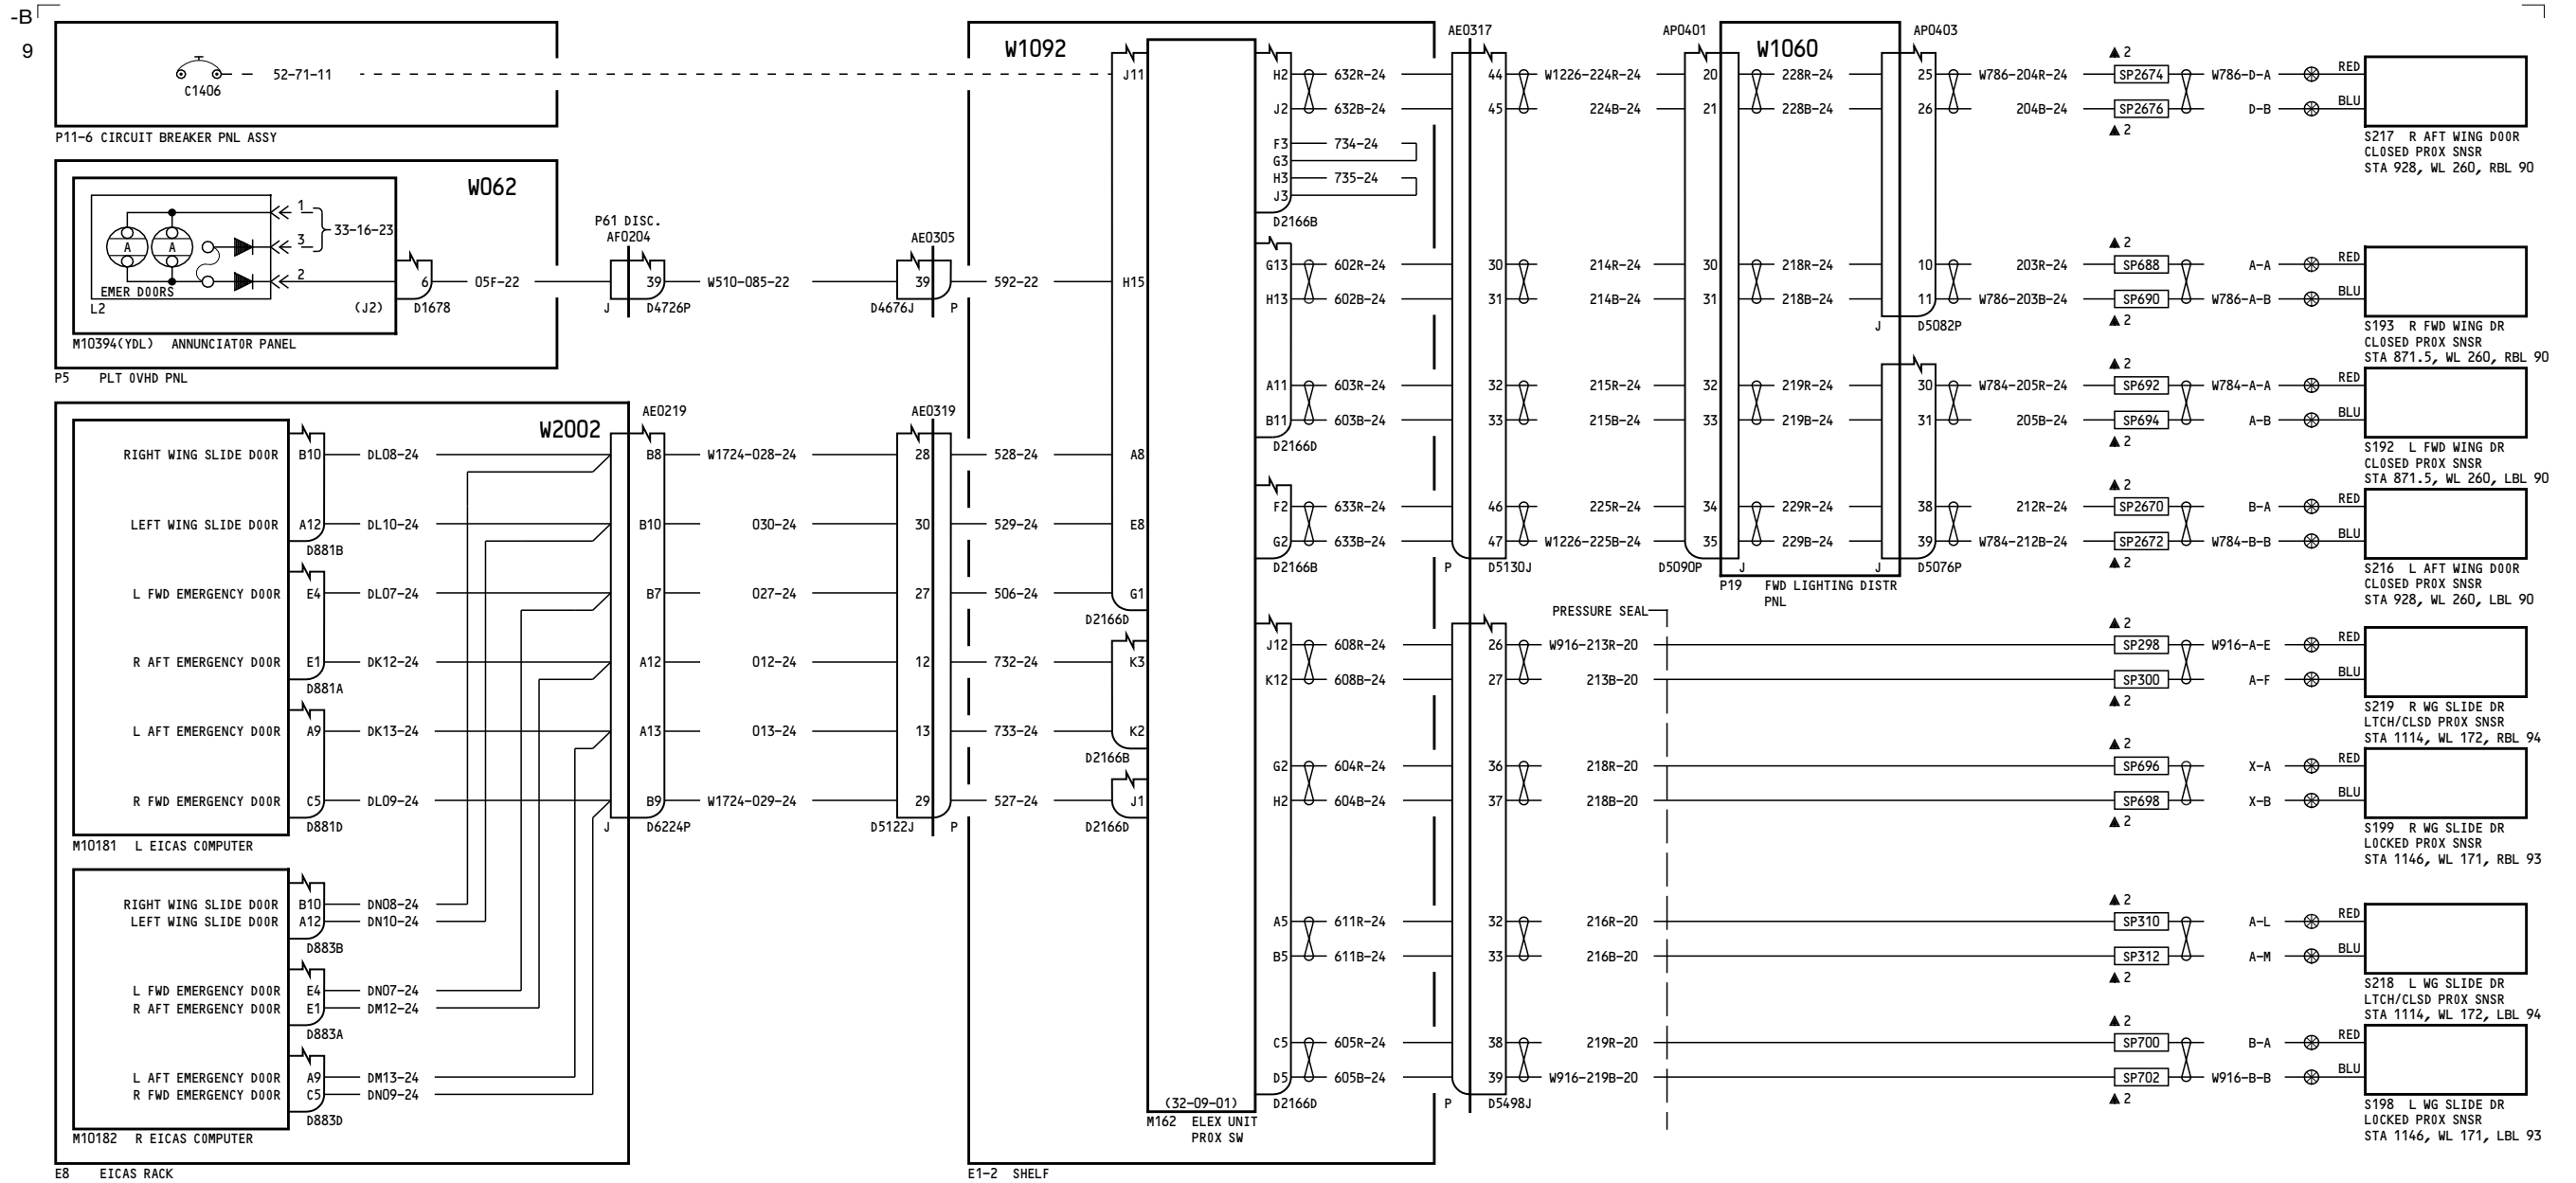

153-199, 275-299

**DOOR WARNING-
WING & SLIDE DOORS**

52-71-12

Page 3


D280T132

Jan 21/2005

52-71-12

Page 3

Jan 21/2005

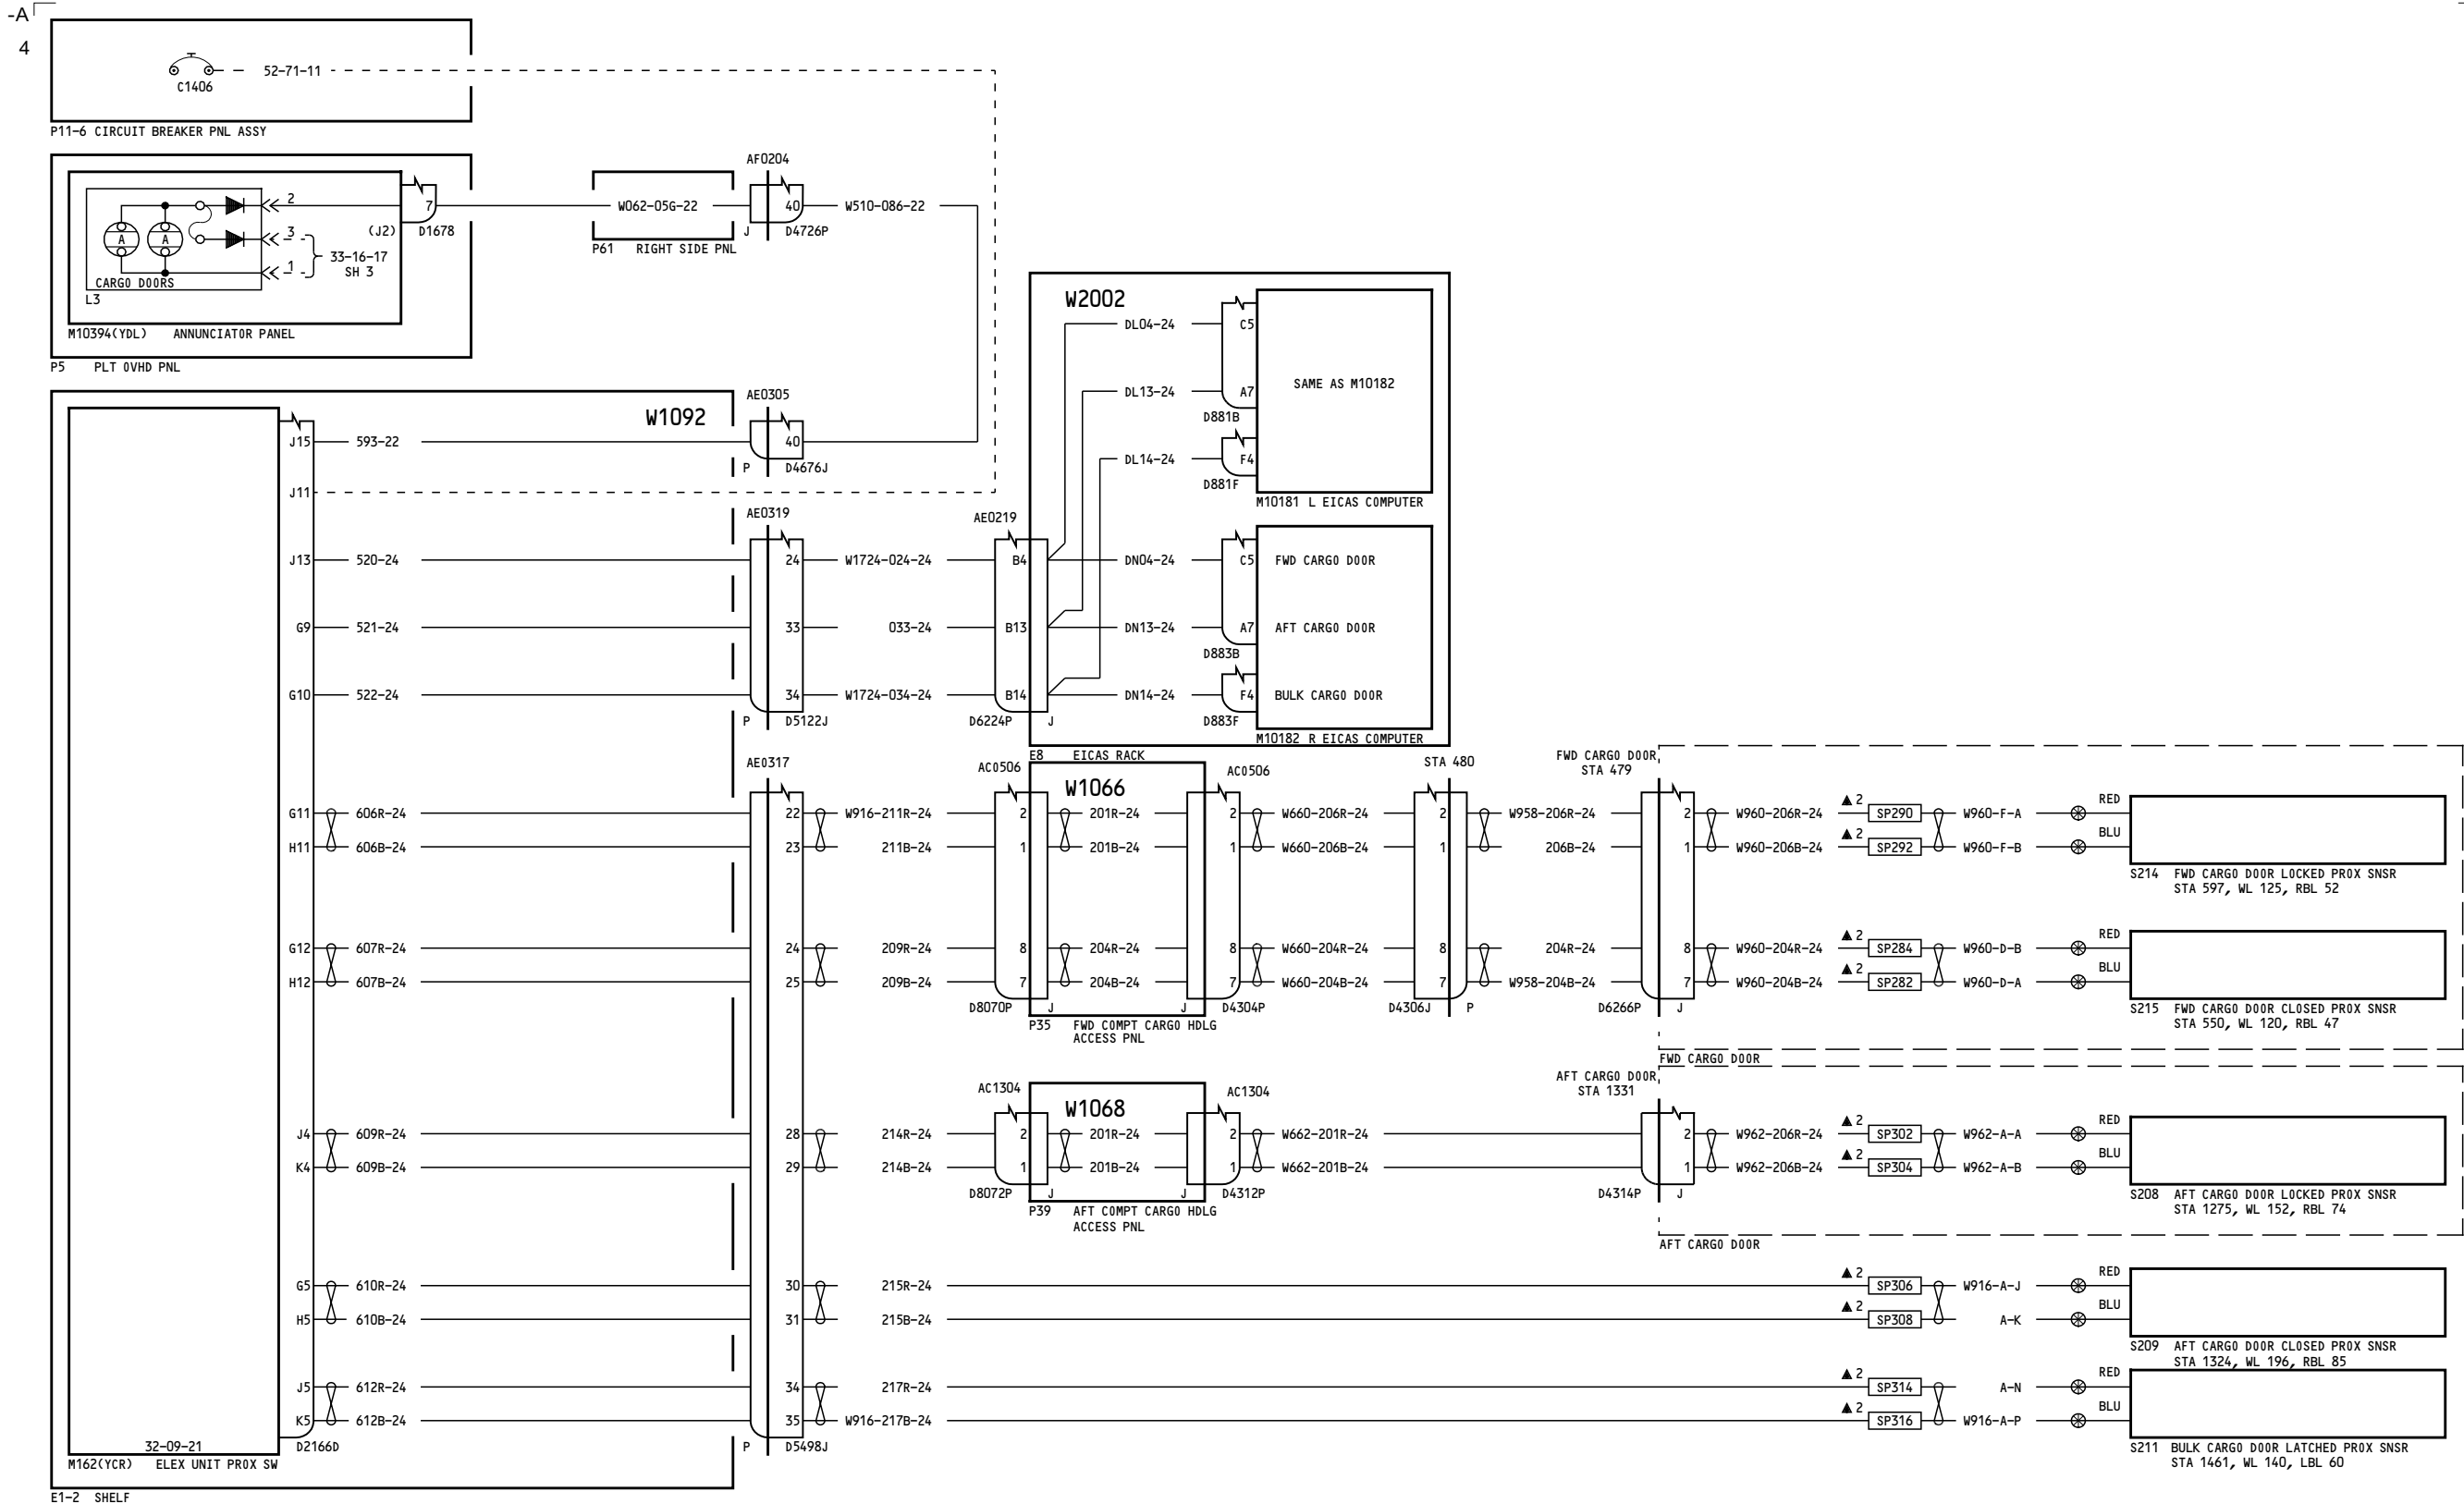

ALL

DOOR WARNING-CARGO DOORS

D280T132

52-71-13


Page 1

Jan 21/2005

52-71-13

Page 1

Jan 21/2005

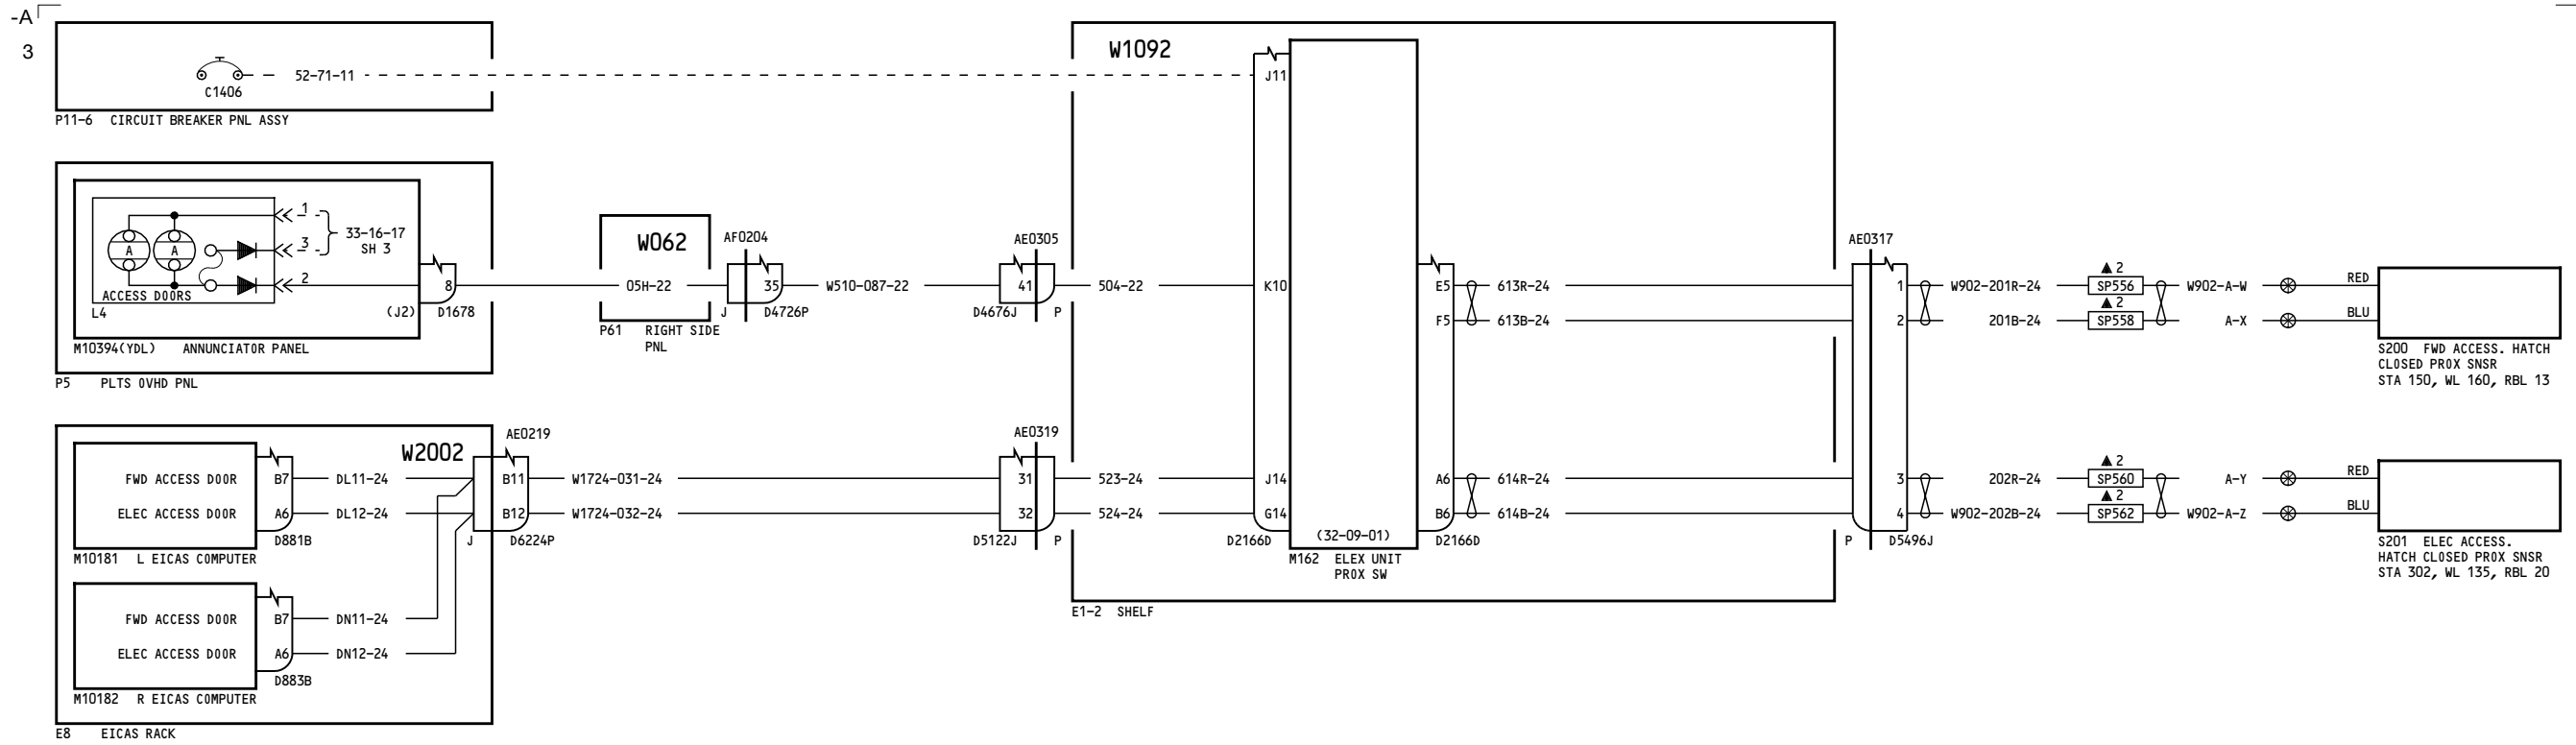

ALL	DOOR WARNING-HATCHES
	D280T132

52-71-14

Page 1
Jan 21/2005

52-71-14

Page 1
Jan 21/2005