

Finisher-J1

PARTS CATALOG

REVISION 0

[F25 - 7101 XEG00001 -]

Canon

APR. 2001

FY8-31FE-000

PREFACE

This Parts Catalog contains listings of parts used in the Canon Finisher-J1. Diagrams are provided with the listings to aid the service technician in identifying clearly, the item to be orderd.

Whenever ordering parts, consult this Parts Catalog for all of the information pertaining to each item. Be sure to include, in the Parts Request, the full item description, the item part number, and the quantity.

Canon Inc.

Office Imaging Products Quality Assurance Center
5-1, Hakusan 7-chome,
Toride-city, Ibaraki 302-8501, Japan

COPYRIGHT © 2001 CANON INC.

Printed in Japan

Imprimé au Japon

Use of this manual should be strictly supervised to avoid disclosure of confidential information.

CONTENTS

QA. ASSEMBLY LOCATION DIAGRAM

Q01. MOUNTING HARDWARE

Q11. INTERNAL COMPONENTS

Q15. STACK TRAY ASSEMBLY

Q20. STACK TRAY DRIVE ASSEMBLY

Q21. DELIVERY DRIVE ASSEMBLY

Q30. OPERATING TRAY ASSEMBLY

Q31. DELIVERY ASSEMBLY

Q32. LOWER GUIDE ASSEMBLY

Q40. STAPLER ASSEMBLY

Q90. FINISHER CONTROLLER PCB ASSEMBLY


QB1. LIST OF CONNECTORS

QB2. LIST OF ELECTRIC PARTS

C. LIST OF STANDARD FASTENERS

QD. NUMERICAL INDEX

FIGURE QA ASSEMBLY LOCATION DIAGRAM

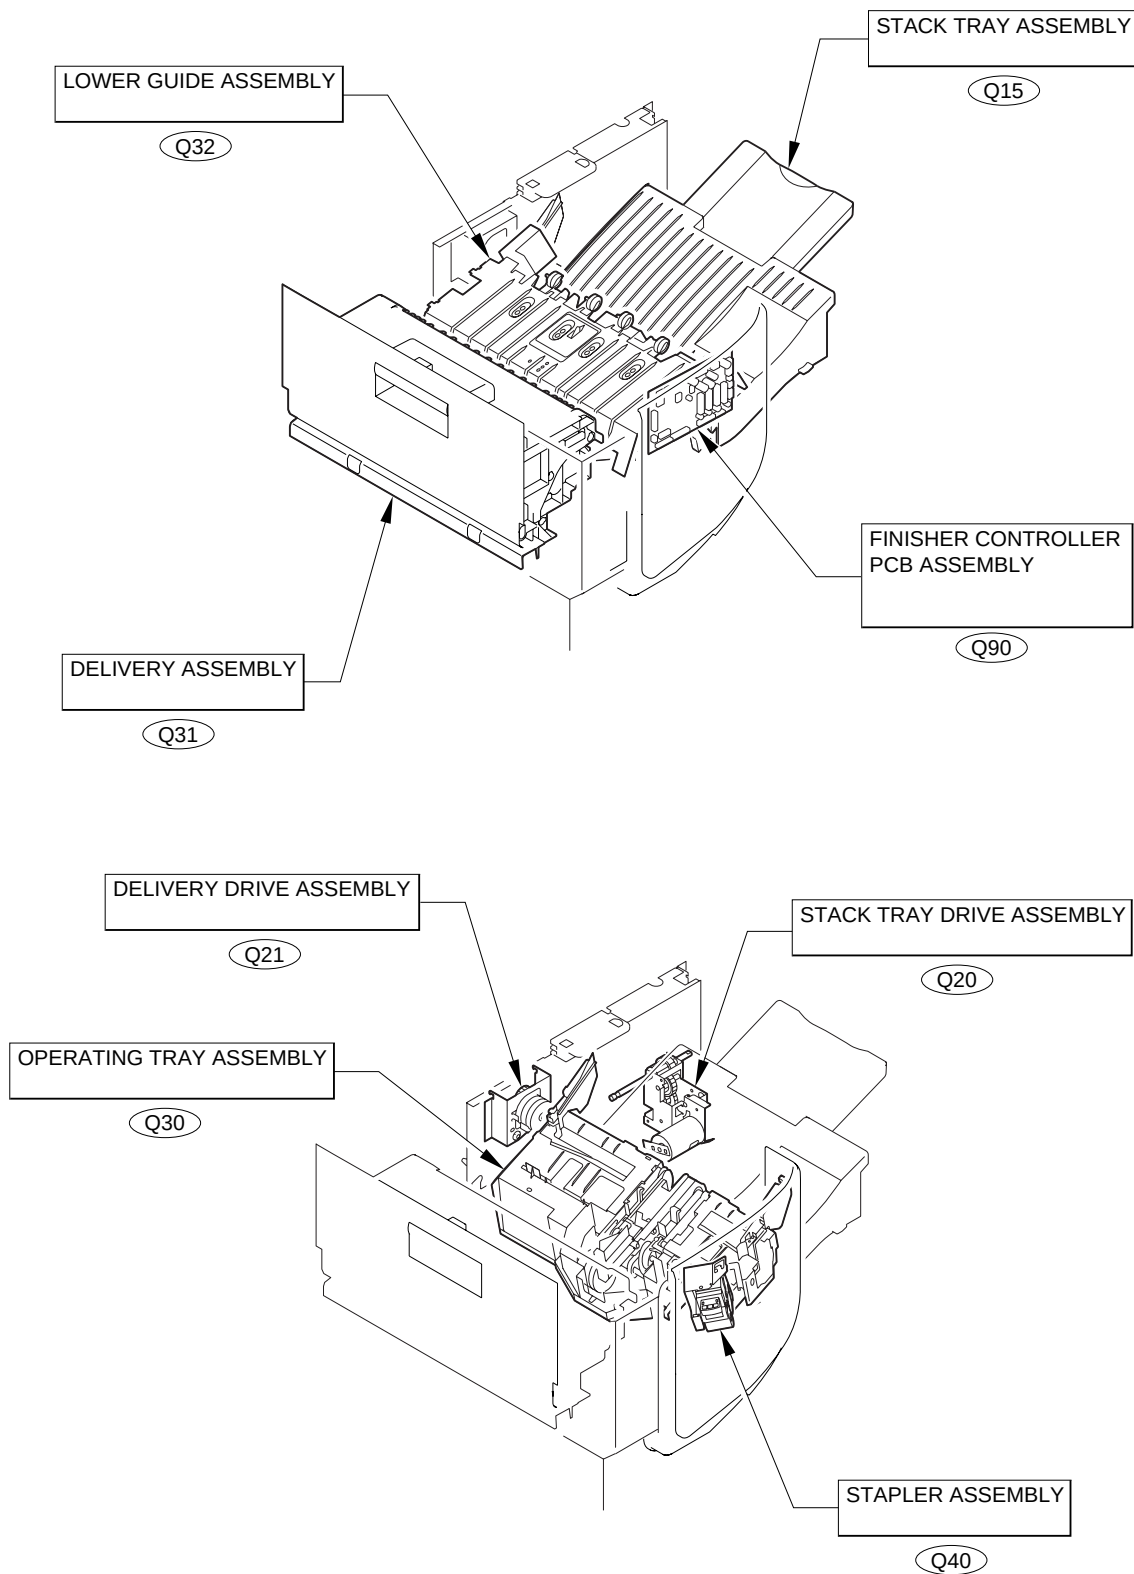

MOUNTING HARDWARE


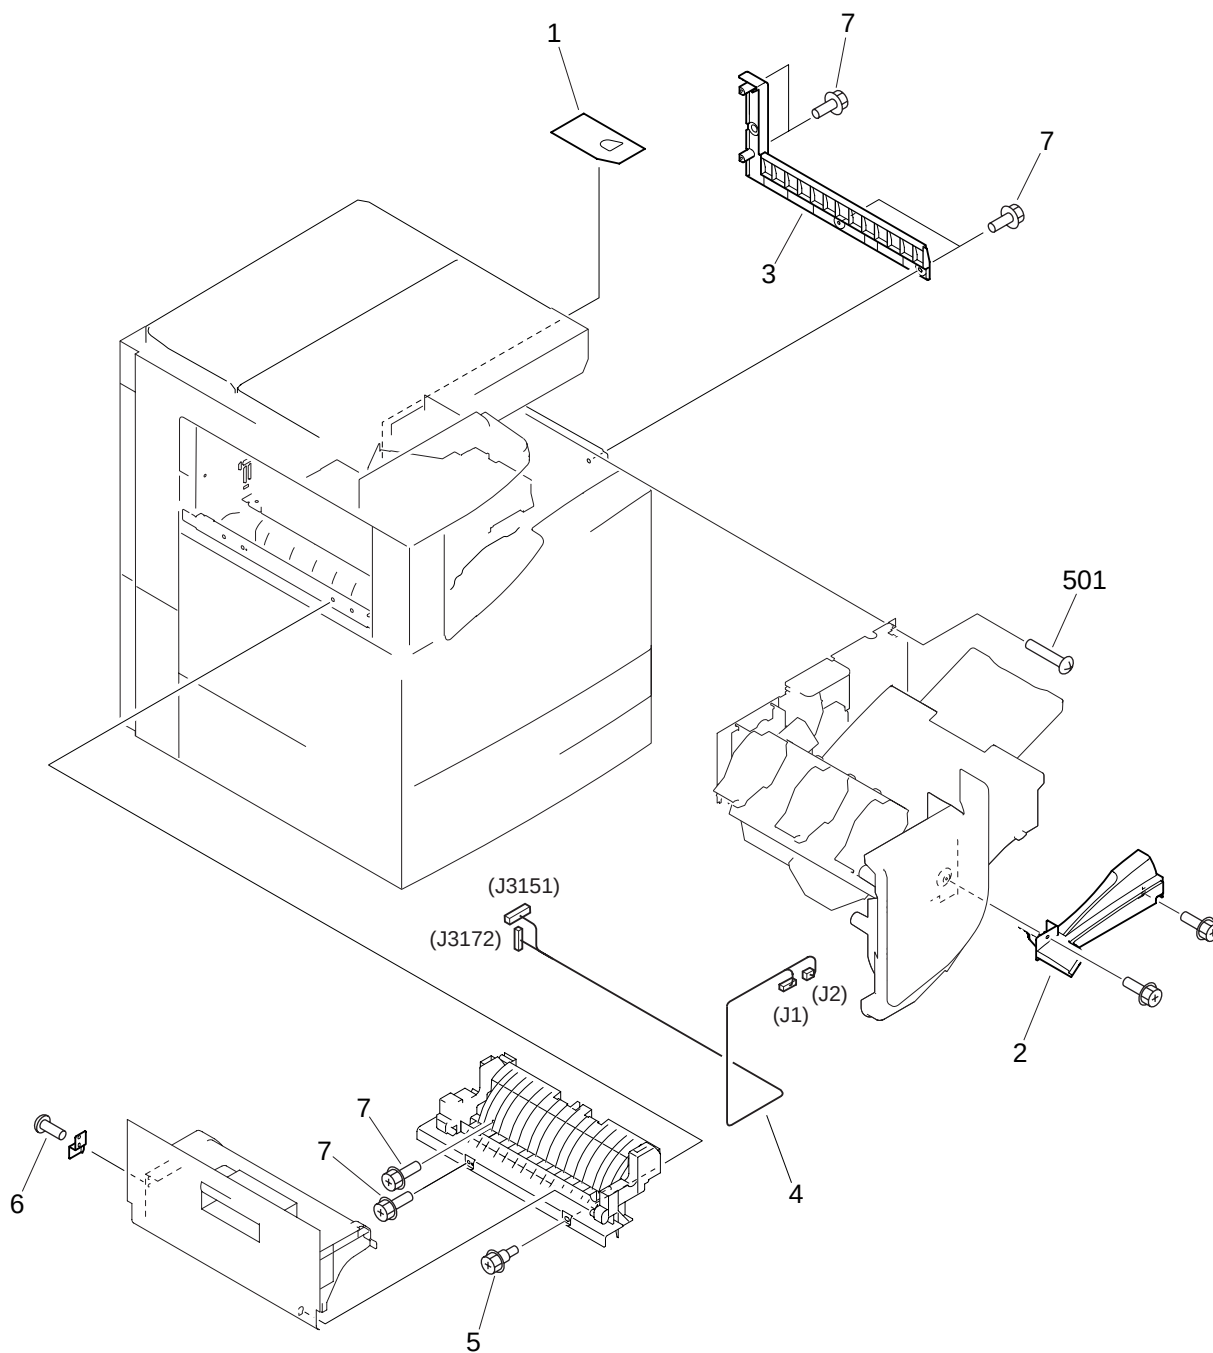


FIGURE Q11 INTERNAL COMPONENTS (1/2)

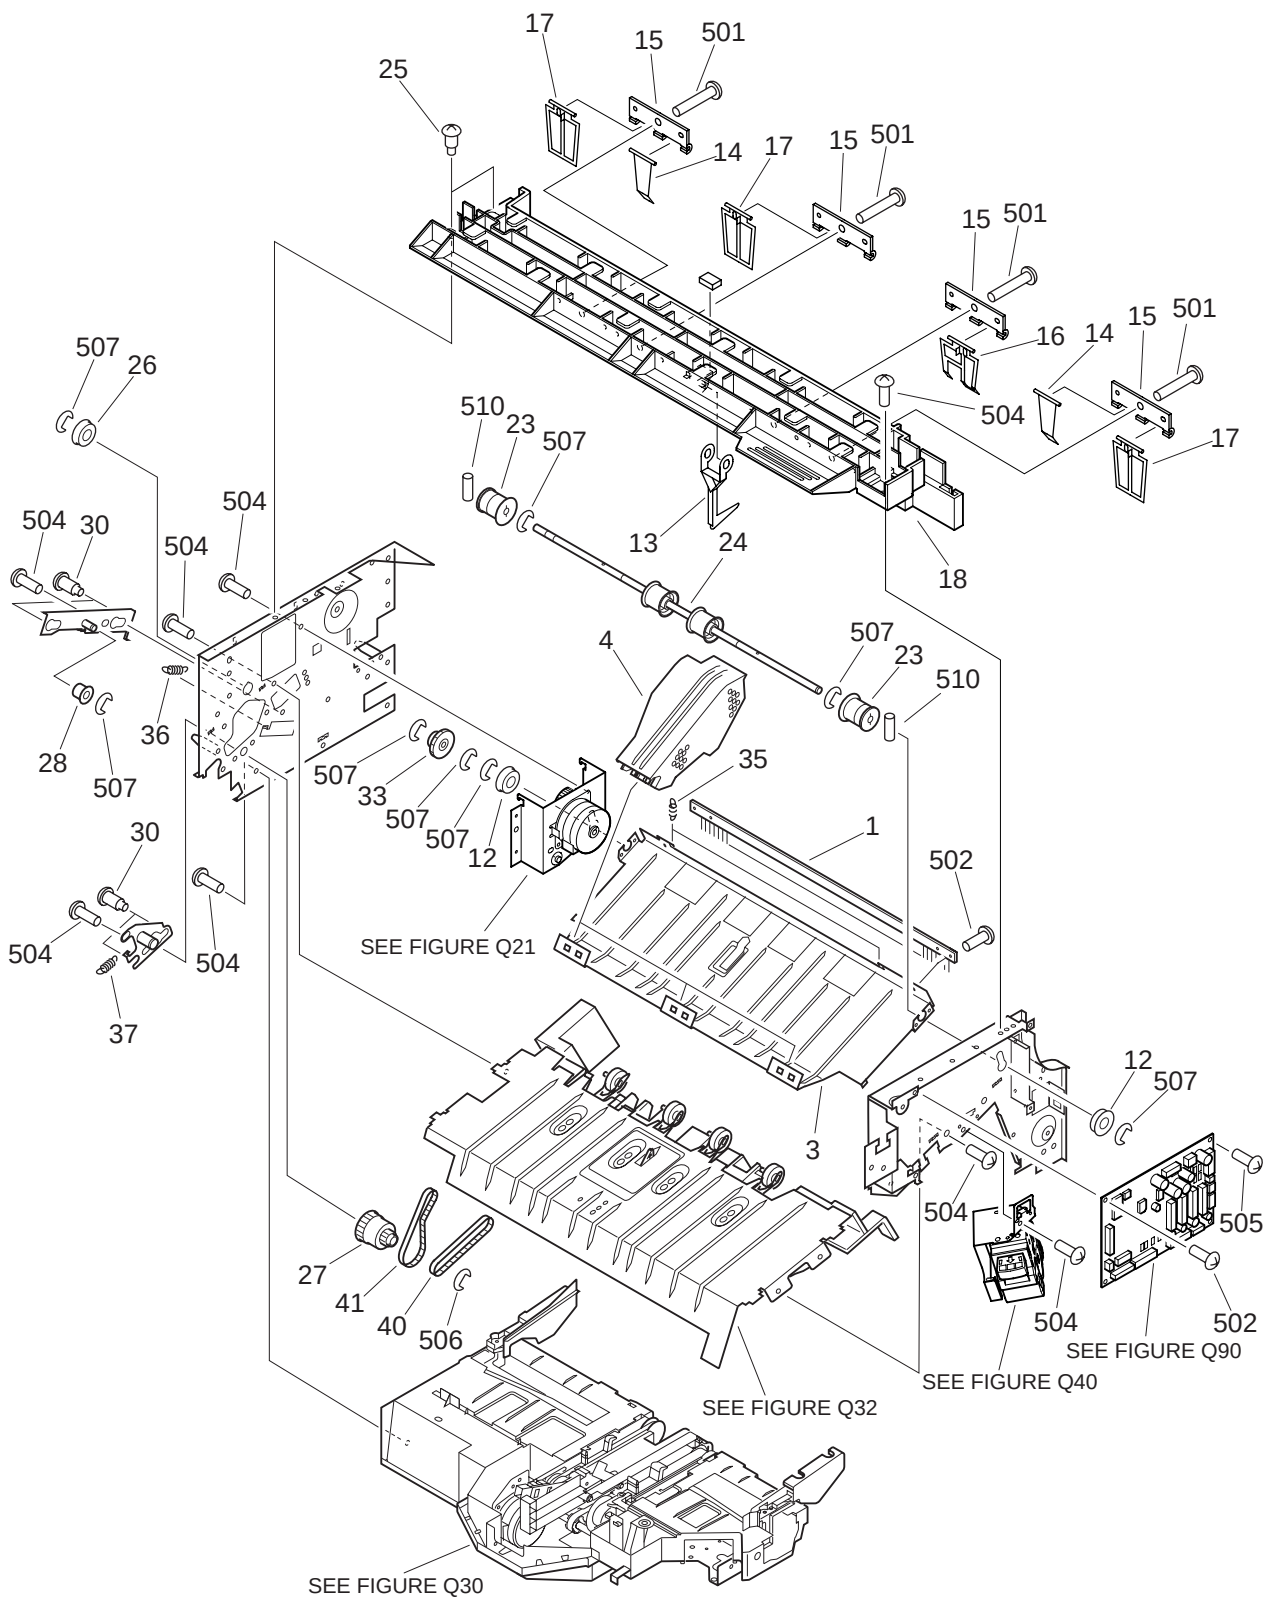

INTERNAL COMPONENTS (2/2)

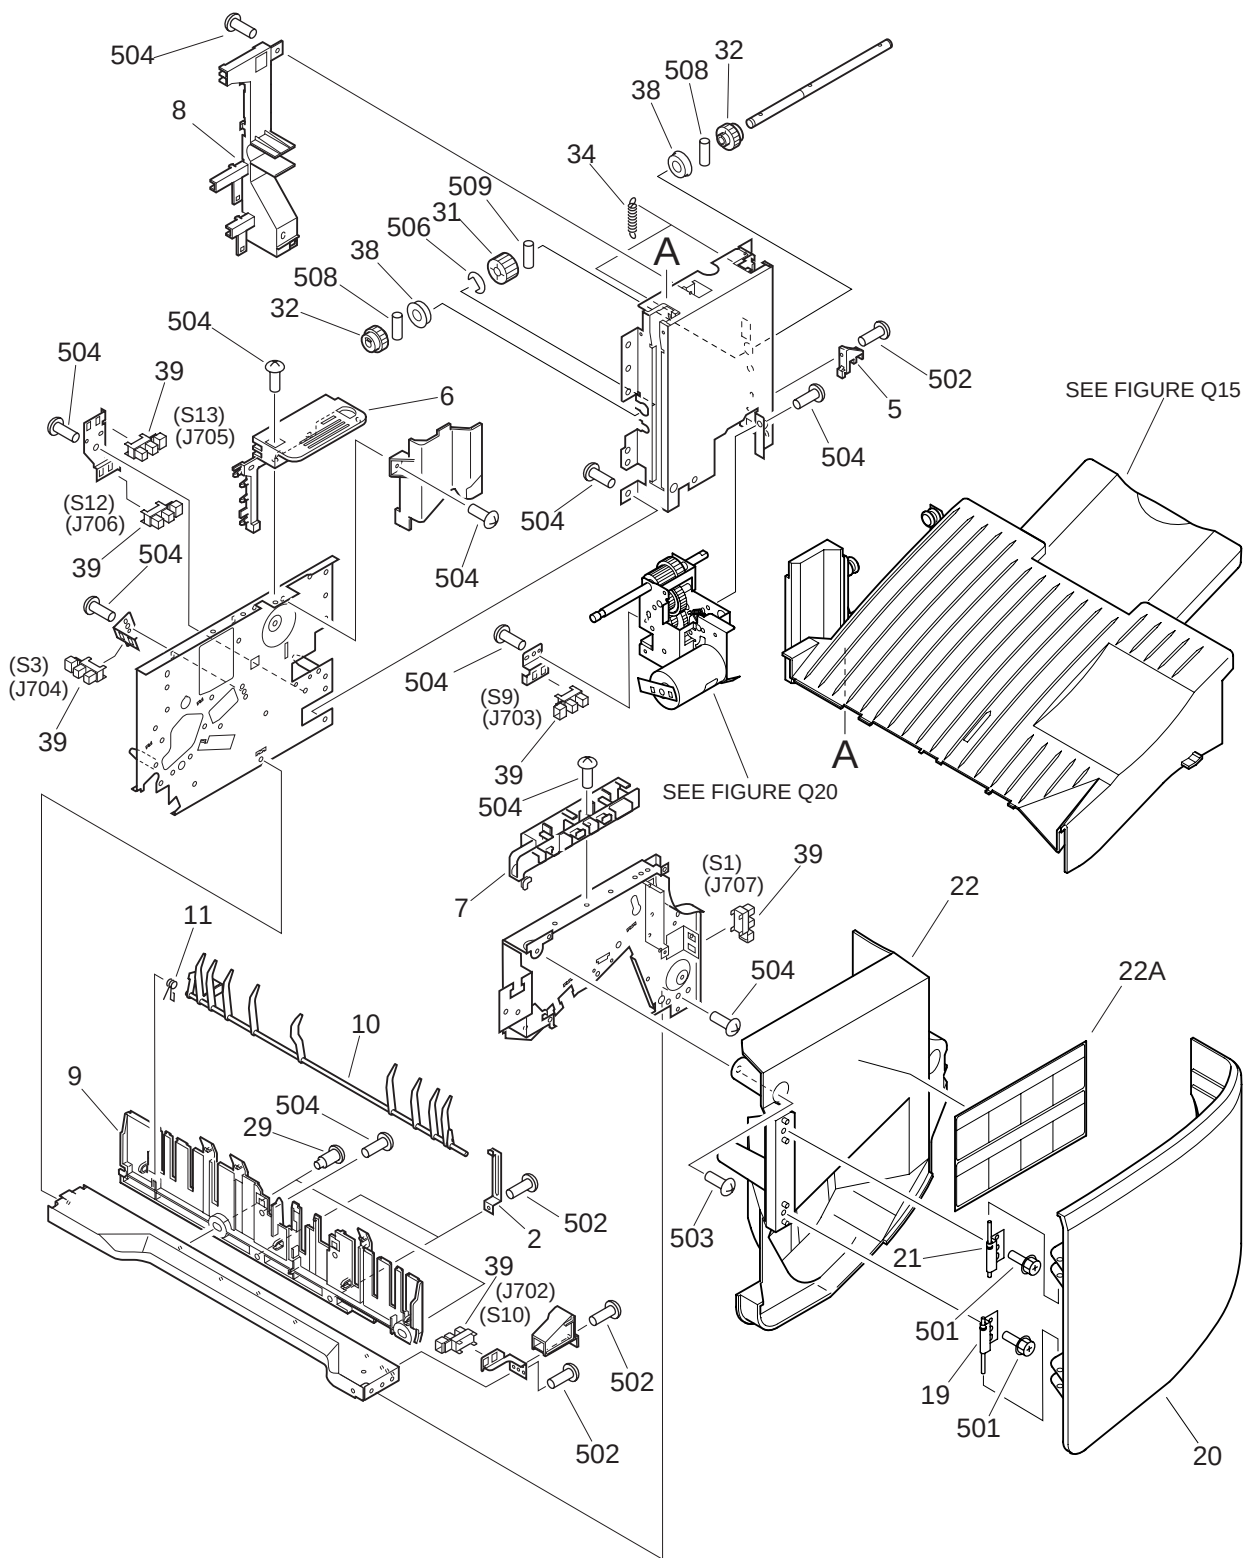


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q11 -	NPN		RF	INTERNAL COMPONENTS	
1	FB5-0590-000		1	ELIMINATOR, STATIC CHARGE	
2	FB5-7828-000		2	PLATE, GROUNDING	
3	FB5-7845-000		1	UPPER GUIDE, PAPER	
4	FB5-7846-000		3	HANDLE, GUIDE	
5	FB5-7849-000		1	BLOCK, SLIDE	
6	FB5-7851-000		1	GUIDE, WIRE, 2	
7	FB5-7852-000		1	GUIDE, WIRE, 3	
8	FB5-7853-000		1	GUIDE, WIRE, 4	
9	FB5-7863-000		1	GUIDE, PAPER	
10	FB5-7864-000		1	FLAG, PAPER SENSING	
11	FB5-7865-000		1	SPRING, TORSION	
12	FE5-7066-000		2	BUSHING	
13	FB5-0595-000		1	PLATE, END, A	
14	FB5-0596-000		2	PLATE, END, B	
15	FB5-0598-000		4	SUPPORT, END PLATE, B	
16	FB5-8571-000		1	GUIDE, PAPER	
17	FB5-8743-000		3	GUIDE, PAPER	
18	FF6-0889-000		1	GUIDE, WIRE	
19	FB3-7962-000		1	PLATE, HINGE	
20	FB5-7855-000		1	PANEL, FRONT	
21	FB5-7859-000		1	HINGE, DOOR	
22	FF6-0885-000		1	COVER, INNER	
22A	FB5-8742-000		1	LABEL, CARTRIDGE INSTRUCTION	
23	FB5-0731-000		2	ROLLER, FEED, B	
24	FB5-7867-000		1	ROLLER, DELIVERY	
25	FS1-9199-000		2	SCREW, STEPPED, M4	
26	FS5-1219-000		1	BUSHING	
27	FS5-3895-000		1	PULLEY, 42T/22T	
28	FS5-6715-000		1	ROLLER, TENSION	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q11 - 29	FS5-9712-000		2	SCREW, STEPPED, M4	
30	FS5-9713-000		4	SCREW, STEPPED	
31	FS7-0924-000		1	GEAR, 27T	
32	FS7-0925-000		2	GEAR, 20T	
33	FS7-0926-000		1	GEAR, 24T	
34	FS7-2559-000		2	SPRING, TENSION	
35	FS7-2562-000		2	SPRING, TENSION	
36	FS7-2564-000		1	SPRING, TENSION	
37	FS7-2568-000		1	SPRING, TENSION	
38	RS1-1054-000		2	BUSHING	
39	WG8-5362-000		6	IC, TLP1241, PHOTO-INTERRUPTER	S1,3,9,10,12,13 J707,704,703,702 J706,705
40	XF2-1108-240		1	BELT, TIMING	
41	XF2-1108-640		1	BELT, TIMING	
501	XB4-5401-207		6	SCREW, P, M4X12	
502	XB1-2300-607		10	SCREW, MACH., TRUSS HEAD, M3X6	
503	XB1-2400-607		3	SCREW, MACH., TRUSS HEAD, M4X6	
504	XB1-2400-609	AR		SCREW, MACH., TRUSS HEAD, M4X6	
505	XB2-7300-607		1	SCREW, W/WASHER, M3X6	
506	XD2-1100-642		2	RING, E	
507	XD2-1100-502		8	RING, E	
508	XD3-2200-142		2	PIN, DOWEL	
509	XD3-2300-142		1	PIN, DOWEL	
510	XD3-2200-102		2	PIN, DOWEL	

FIGURE Q15 STACK TRAY ASSEMBLY

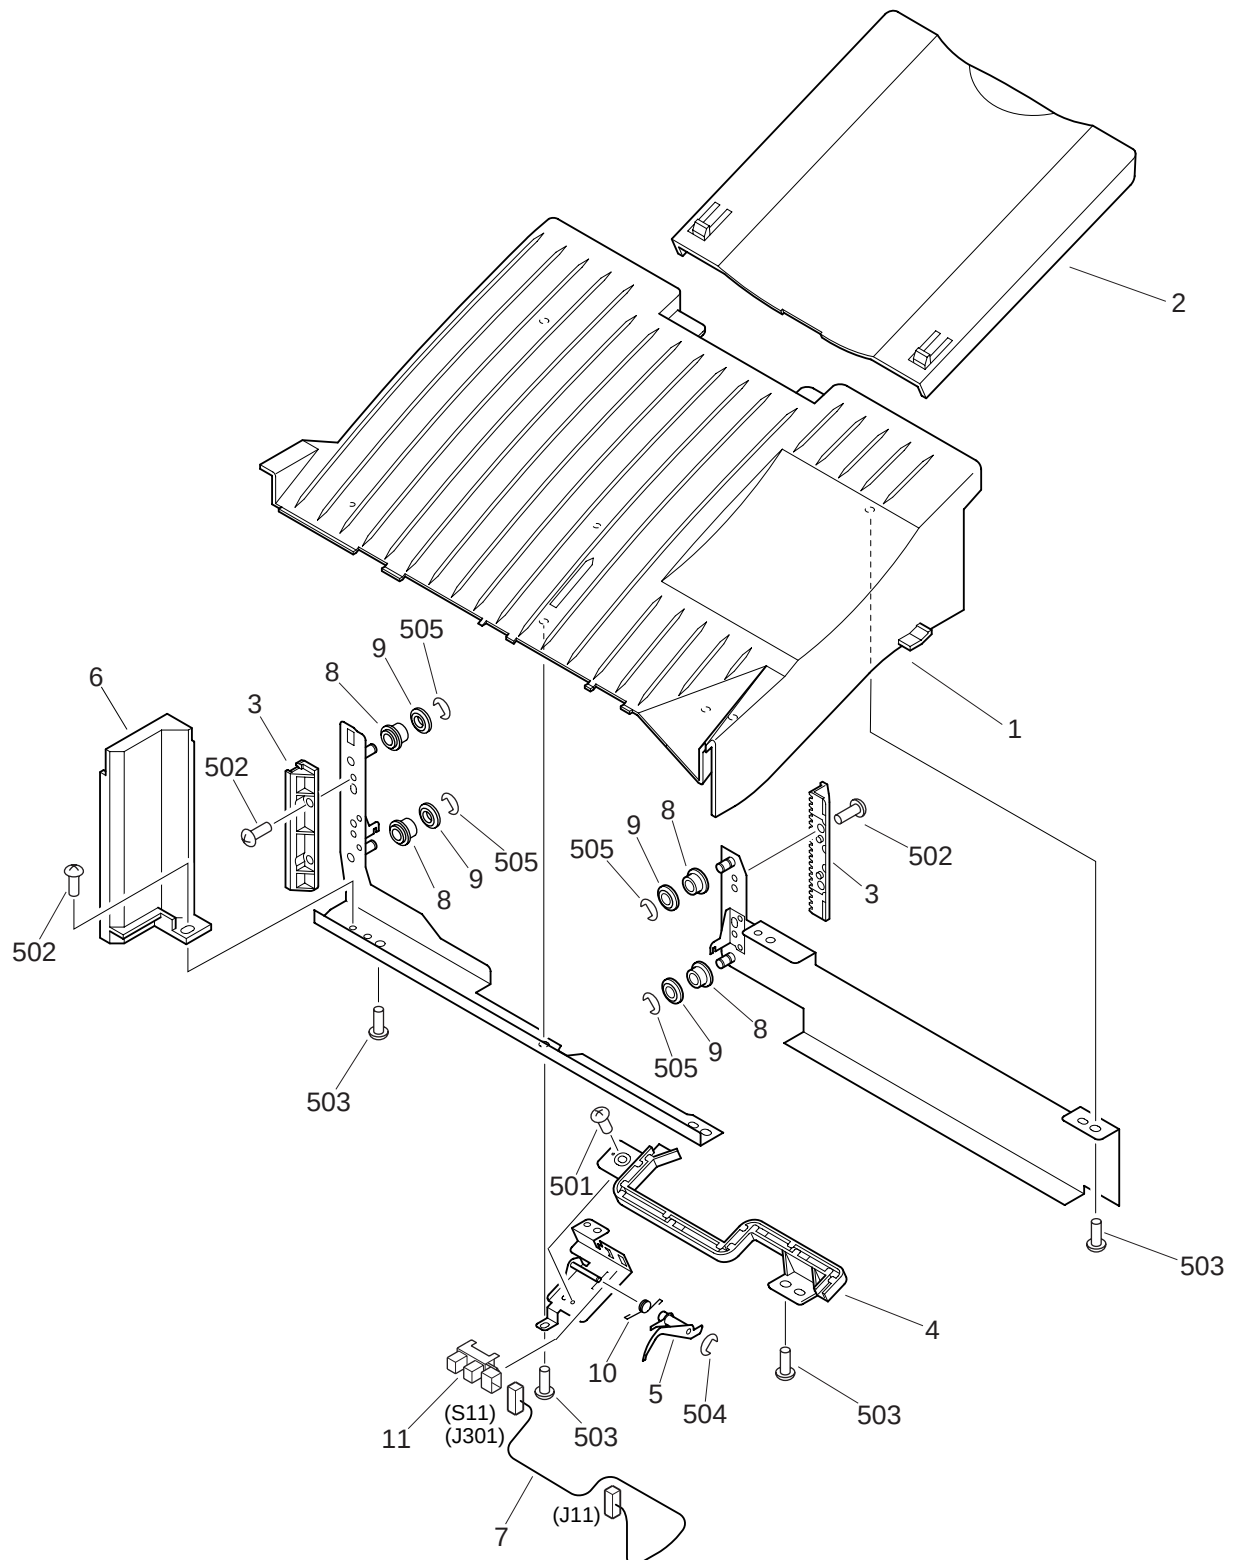


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q15 -	FG6-6976-000		1	STACK TRAY ASSEMBLY	
1	FB5-7823-000		1	TRAY, STACK, 1	
2	FB5-7824-000		1	TRAY, STACK, 2	
3	FB5-7827-000		2	RACK	
4	FB5-7835-000		1	GUIDE, CABLE	
5	FB5-7837-000		1	FLAG, PAPER SENSOR	
6	FB5-7844-000		1	COVER, RACK	
7	FG3-1640-000		1	CABLE, STACK TRAY SENSOR	J11,301
8	FS5-6883-000		4	ROLLER, TRAY	
9	FS5-6884-000		4	FLANGE, TRAY ROLLER	
10	FS7-2561-000		1	SPRING, TORSION	
11	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	S11 J301
501	XB1-2300-607		1	SCREW,MACH.,TRUSS HEAD,M3X6	
502	XB1-2400-609		5	SCREW,MACH.,TRUSS HEAD,M4X6	
503	XB4-7401-209		7	SCREW,TAPPING,TRUSS HEAD,M4X12	
504	XD2-1100-242		1	RING,E	
505	XD2-1100-582		4	RING,E	

FIGURE Q20 STACK TRAY DRIVE ASSEMBLY

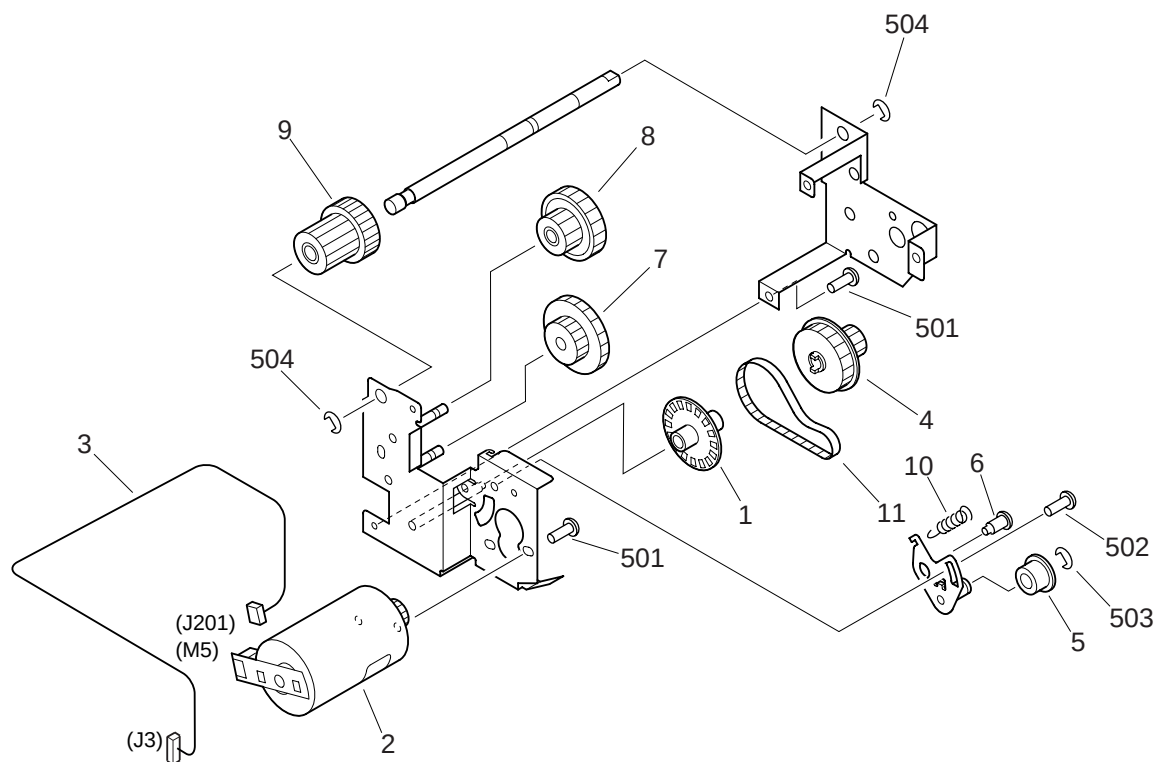


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q20 -	FG6-6980-000		1	STACK TRAY DRIVE ASSEMBLY	
1	FB5-7832-000		1	FLAG, CLOCK SENSOR	
2	FH6-1860-000		1	MOTOR, DC24V	M5 J201
3	FG3-1788-000		1	CABLE, MOTOR, CONNECTING	J3,201
4	FS5-3894-000		1	PULLEY, 50T/GEAR, 15T	
5	FS5-6715-000		1	ROLLER, TENSION	
6	FS5-9713-000		1	SCREW, STEPPED	
7	FS7-0921-000		1	GEAR, 22T/41T	
8	FS7-0922-000		1	GEAR, 20T/38T	
9	FS7-0923-000		1	GEAR, 22T/31T	
10	FS7-2560-000		1	SPRING, TENSION	
11	XF2-1108-040		1	BELT, TIMING	
501	XB1-2300-607		5	SCREW, MACH., TRUSS HEAD, M3X6	
502	XB2-8400-809		1	SCREW, W/WASHER, M4X8	
503	XD2-1100-502		1	RING, E	
504	XD2-1100-582		2	RING, E	

FIGURE Q21 DELIVERY DRIVE ASSEMBLY

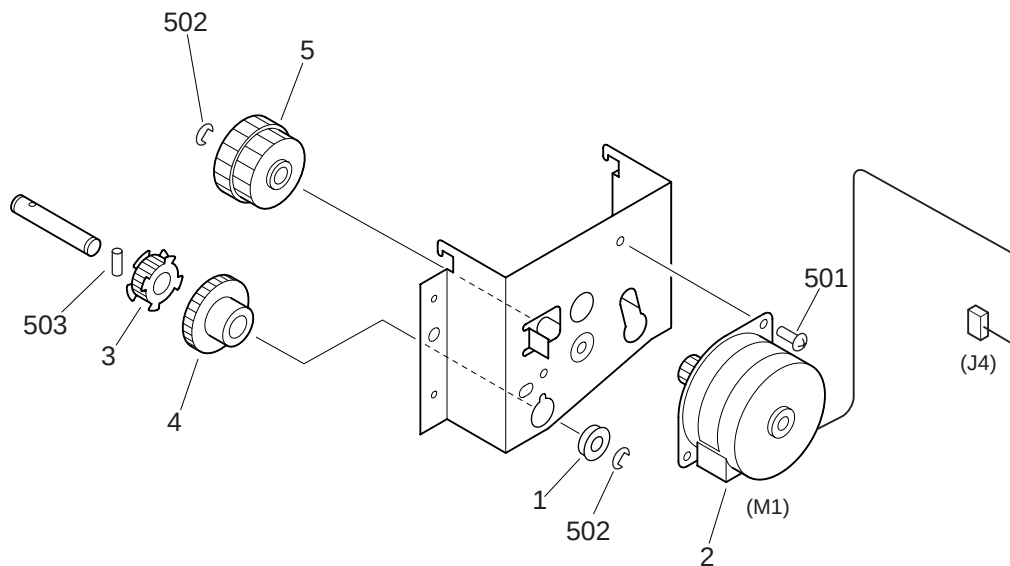


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q21 -	FG6-6987-000		1	DELIVERY DRIVE ASSEMBLY	M1 J4
1	FE5-7066-000		1	BUSHING	
2	FH6-1858-000		1	MOTOR, STEPPING, DC24V	
3	FS5-3899-000		1	PULLEY, 20T	
4	FS7-0926-000		1	GEAR, 24T	
5	FS7-0927-000		1	GEAR, 47T/25T	
501	XB1-2300-607		2	SCREW,MACH.,TRUSS HEAD,M3X6	
502	XD2-1100-502		2	RING,E	
503	XD3-2200-082		1	PIN,DOWEL	

FIGURE Q30 OPERATING TRAY ASSEMBLY


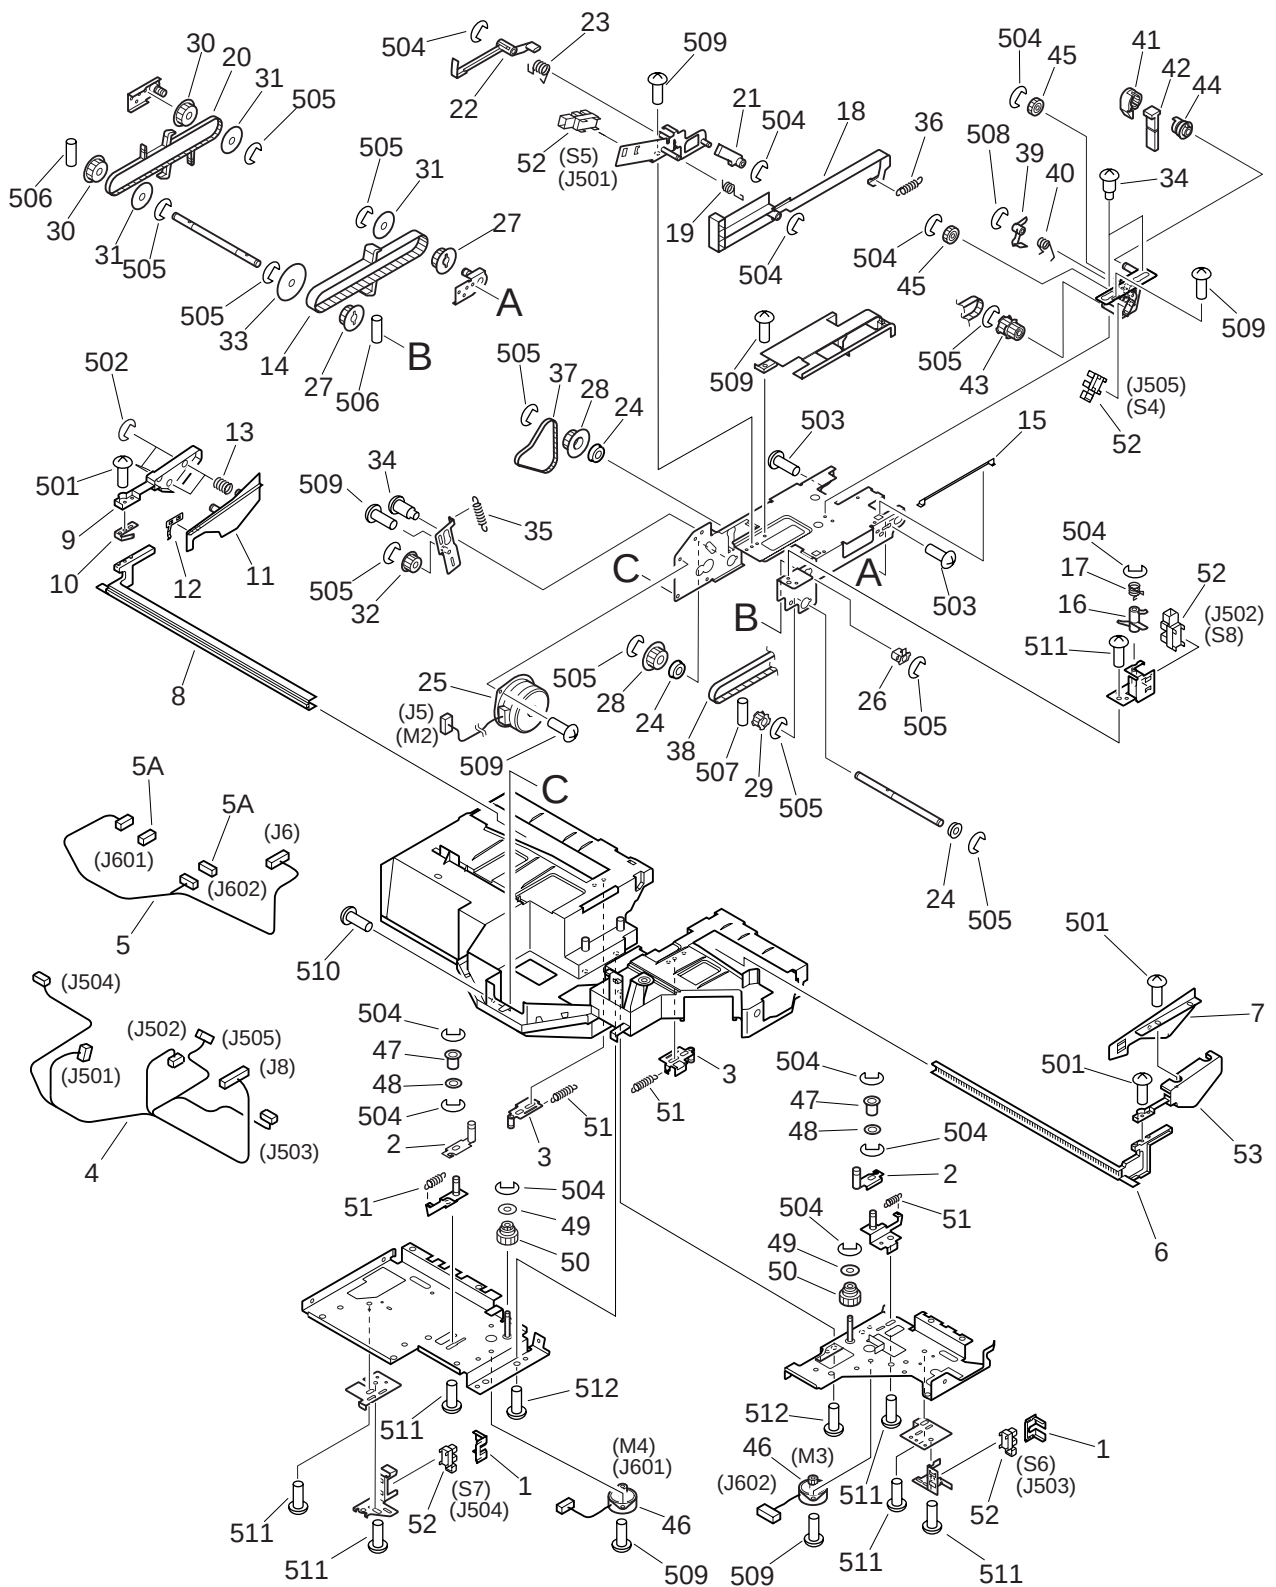


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q30 -	FG6-6985-000		1	OPERATING TRAY ASSEMBLY	
1	FB5-0638-000		2	GUIDE, SENSOR FLAG	
2	FF5-9180-000		2	COLLAR	
3	FF5-9182-000		2	PLATE, GUIDE COLLAR ADJUSTING	
4	FG3-1642-000		1	CABLE, OPERATING TRAY	J8,501-505
5	FG3-1643-000		1	CABLE, MOTOR	J6,601,602
5A	VS1-5057-006		2	CONNECTOR, SNAP TIGHT	J601,602
6	FB5-0613-000		1	RACK, ADJUSTMENT, REAR	
7	FB5-8798-000		1	PLATE, ADJUSTING, FRONT	
8	FB5-0610-000		1	RACK, ADJUSTMENT, FRONT	
9	FB5-0612-000		1	SUPPORT, ADJUSTMENT, FRONT	
10	FB5-0618-000		1	SPRING, LEAF	
11	FB5-8799-000		1	PLATE, ADJUSTING, REAR	
12	FB5-8800-000		1	SPRING, LEAF	
13	FS7-2252-000		2	SPRING, COMPRESSION	
14	FB5-0609-000		1	BELT, PAPER FEED	
15	FB5-0616-000		1	GUIDE, PAPER	
16	FB5-0624-000		1	FLAG, PAPER SENSOR	
17	FB5-0625-000		1	SPRING, TORSION	
18	FB5-7886-000		1	ARM, PAPER SENSOR, 1	
19	FB5-7888-000		1	SPRING, TORSION	
20	FB5-7890-000		1	BELT, PAPER FEED	
21	FB5-8568-000		1	ARM, SENSOR, 2	
22	FB5-8569-000		1	ARM, SENSOR, 3	
23	FB5-8570-000		1	SPRING, TORSION	
24	FE5-7066-000		3	BUSHING	
25	FH6-1859-000		1	MOTOR, STEPPING	M2 J5
26	FS5-1927-000		1	BUSHING	
27	FS5-3767-000		2	PULLEY, 22T	
28	FS5-3897-000		2	PULLEY, 32T	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q30 - 29	FS5-3899-000		1	PULLEY, 20T	
30	FS5-3900-000		2	PULLEY, 22T	
31	FS5-6712-000		3	FLANGE	
32	FS5-6715-000		1	ROLLER, TENSION	
33	FS5-6738-000		1	FLANGE	
34	FS5-9714-000		3	SCREW, STEPPED, M3	
35	FS7-2563-000		1	SPRING, TENSION	
36	FS7-2567-000		1	SPRING, TENSION	
37	XF2-1109-140		1	BELT, TIMING	
38	XF2-1111-540		1	BELT, TIMING	
39	FB5-7892-000		1	FLAG, HOME POSITION SENSOR	
40	FB5-7893-000		1	SPRING, TORSION	
41	FB5-7894-000		1	COUPLING	
42	FB5-7895-000		1	PADDLE	
43	FS5-3901-000		1	PULLEY, 26T/GEAR, 26T	
44	FS7-0928-000		1	GEAR, 26T	
45	FS7-0929-000		2	GEAR, 26T	
46	FH6-1668-000		2	MOTOR, STEPPING, DC 4.8W	M3,4 J602,601
47	FS5-6713-000		2	COLLAR	
48	FS5-6716-000		2	FLANGE	
49	FS5-6717-000		2	FLANGE	
50	FS7-0500-000		2	GEAR, 18T/48T	
51	FS7-2253-000		4	SPRING, TENSION	
52	WG8-5362-000		5	IC, TLP1241, PHOTO-INTERRUPTER	S4-8 J505,501,503 J504,502
53	FB5-7862-000		1	SUPPORT, ADJUSTMENT, FRONT	
501	XB4-7301-206		4	SCREW, TAPPING, TRUSS HEAD, M3X12	
502	XD9-0117-000		3	RING, E	
503	XB2-8300-607		2	SCREW, W/WASHER, M3X6	
504	XD2-1100-322		12	RING, E	
505	XD2-1100-502		11	RING, E	

FIGURE Q31 DELIVERY ASSEMBLY

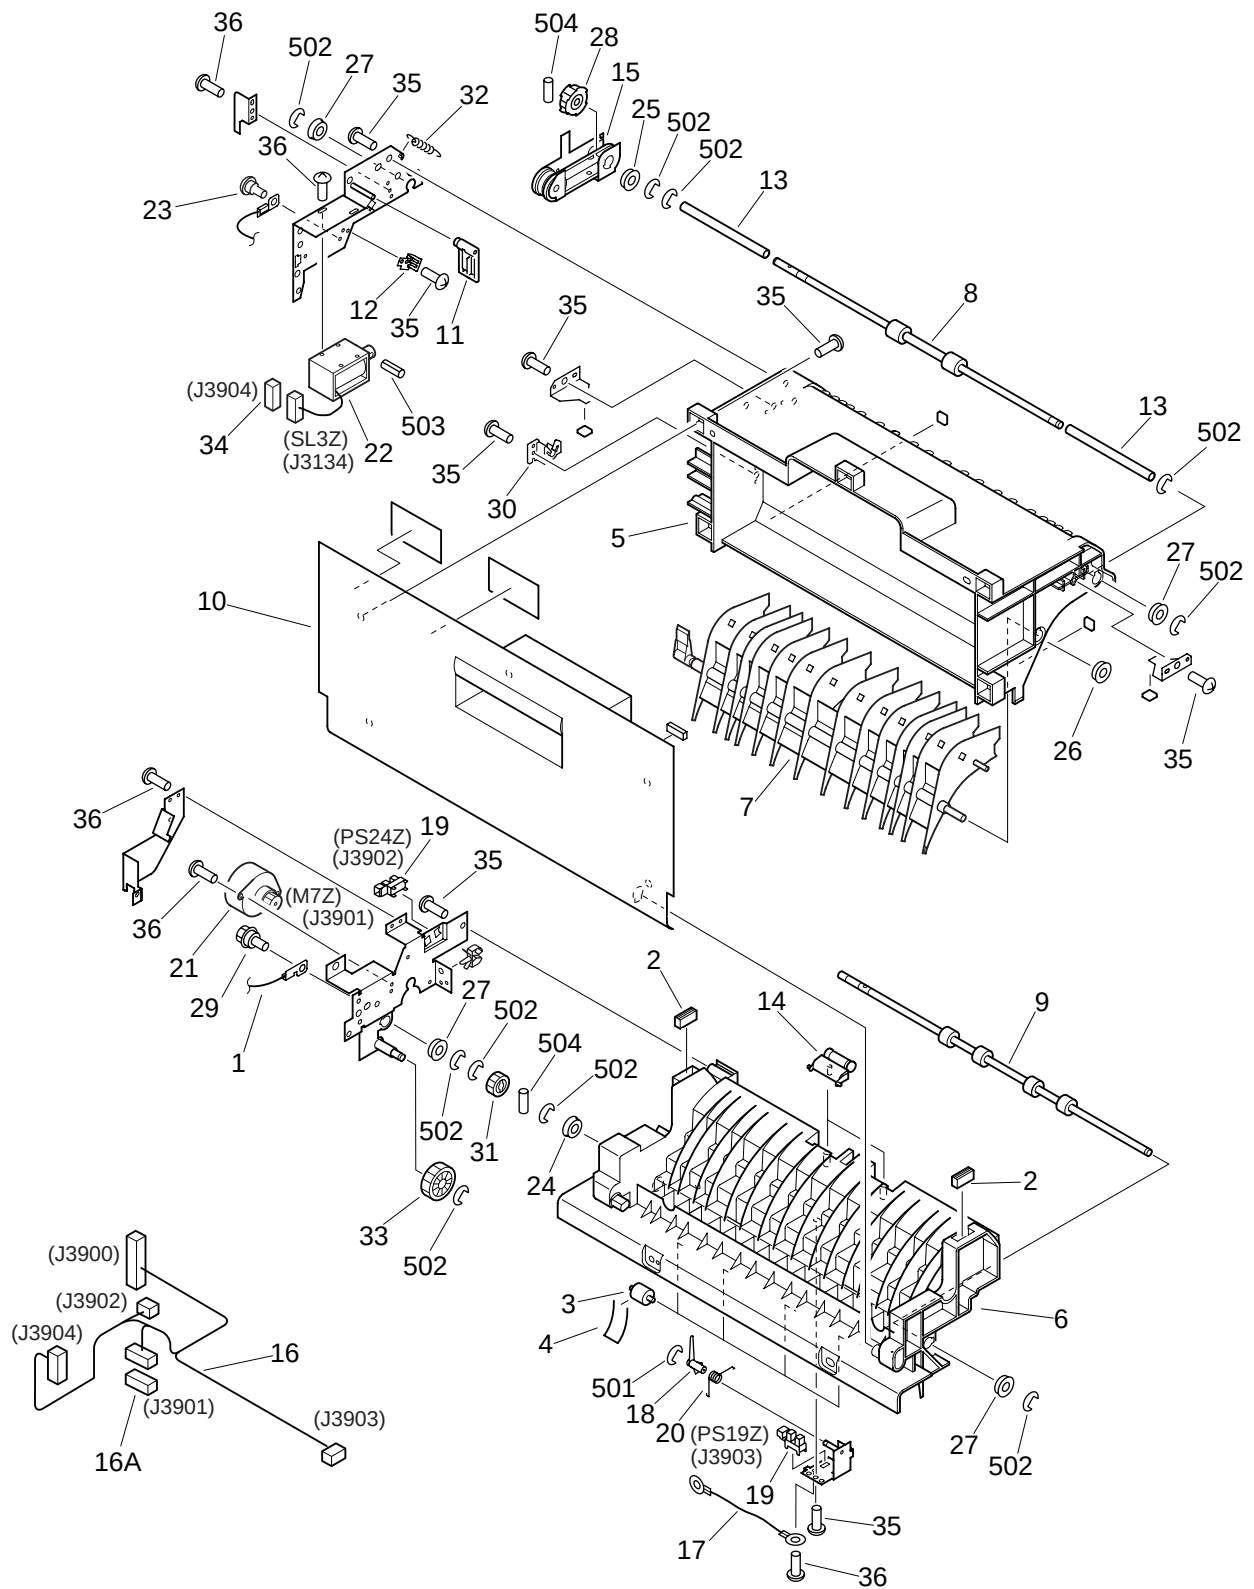

NOTE : This assembly does not include the part shown with key No. 23.

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q31 -	FG6-7608-000		1	DELIVERY ASSEMBLY	
1	FB3-5597-000		1	WIRE, DELIVERY SUPPORT	
2	FB5-0374-000		2	MAGNET	
3	FB5-4920-000		4	ROLLER, FEED	
4	FB5-9306-000		4	PIN	
5	FB5-9307-000		1	FRAME, DELIVERY	
6	FB5-9308-000		1	FRAME 2, DELIVERY	
7	FB5-9309-000		1	FLAPPER, INVERTER	
8	FB5-9311-000		1	ROLLER, DELIVERY	
9	FB5-9312-000		1	ROLLER, VERTICAL PATH	
10	FB5-9313-000		1	PANEL, DELIVERY	
11	FB5-9314-000		1	LEVER, SOLENOID	
12	FB5-9321-000		1	SPRING, LEAF	
13	FB5-9324-000		2	TUBE	
14	FF6-0132-000		2	HOLDER, ROLLER	
15	FF6-1262-000		1	PLATE, SWING	
16	FG3-1792-000		1	CABLE, DELIVERY	J3900-3904
16A	VS1-5057-004		1	CONNECTOR, SNAP TIGHT	J3901
17	FG3-1794-000		1	WIRE, GROUNDING	
18	FB5-9322-000		1	FLAG, SENSOR	
19	FH7-7462-000		2	PHOTO-INTERRUPTER	PS19Z,24Z J3903,3902
20	FS7-2658-000		1	SPRING, TORSION	
21	FH6-1880-000		1	MOTOR, STEPPING	M7Z J3901
22	FH6-5019-000		1	SOLENOID, DC24V	SL3Z J3134
23	FS5-9727-000		1	SCREW, STEPPED, RS, M4	SEE NOTE
24	FS5-1952-000		1	BUSHING	
25	FS1-1508-000		1	BUSHING	
26	FS5-1377-000		1	BUSHING	
27	FS5-1943-000		4	BUSHING	
28	FS5-3925-000		1	PULLEY, 35T	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q31 - 29	FS5-9727-000		1	SCREW, STEPPED, RS, M4	
30	FS6-1018-000		1	BUSHING	
31	FS7-0744-000		1	GEAR, 16T	
32	FS7-2657-000		1	SPRING, TENSION	
33	FU3-0024-000		1	GEAR, 22T	
34	VS1-5057-002		1	CONNECTOR, SNAP TIGHT	J3904
35	XA9-0606-000		16	SCREW, M4X10	
36	XA9-1116-000		10	SCREW, M3X5	
501	XD2-1100-322		1	RING, E	
502	XD2-1100-502		10	RING, E	
503	XD3-1300-102		1	PIN, SPRING	
504	XD3-2200-122		2	PIN, DOWEL	

FIGURE Q32 LOWER GUIDE ASSEMBLY

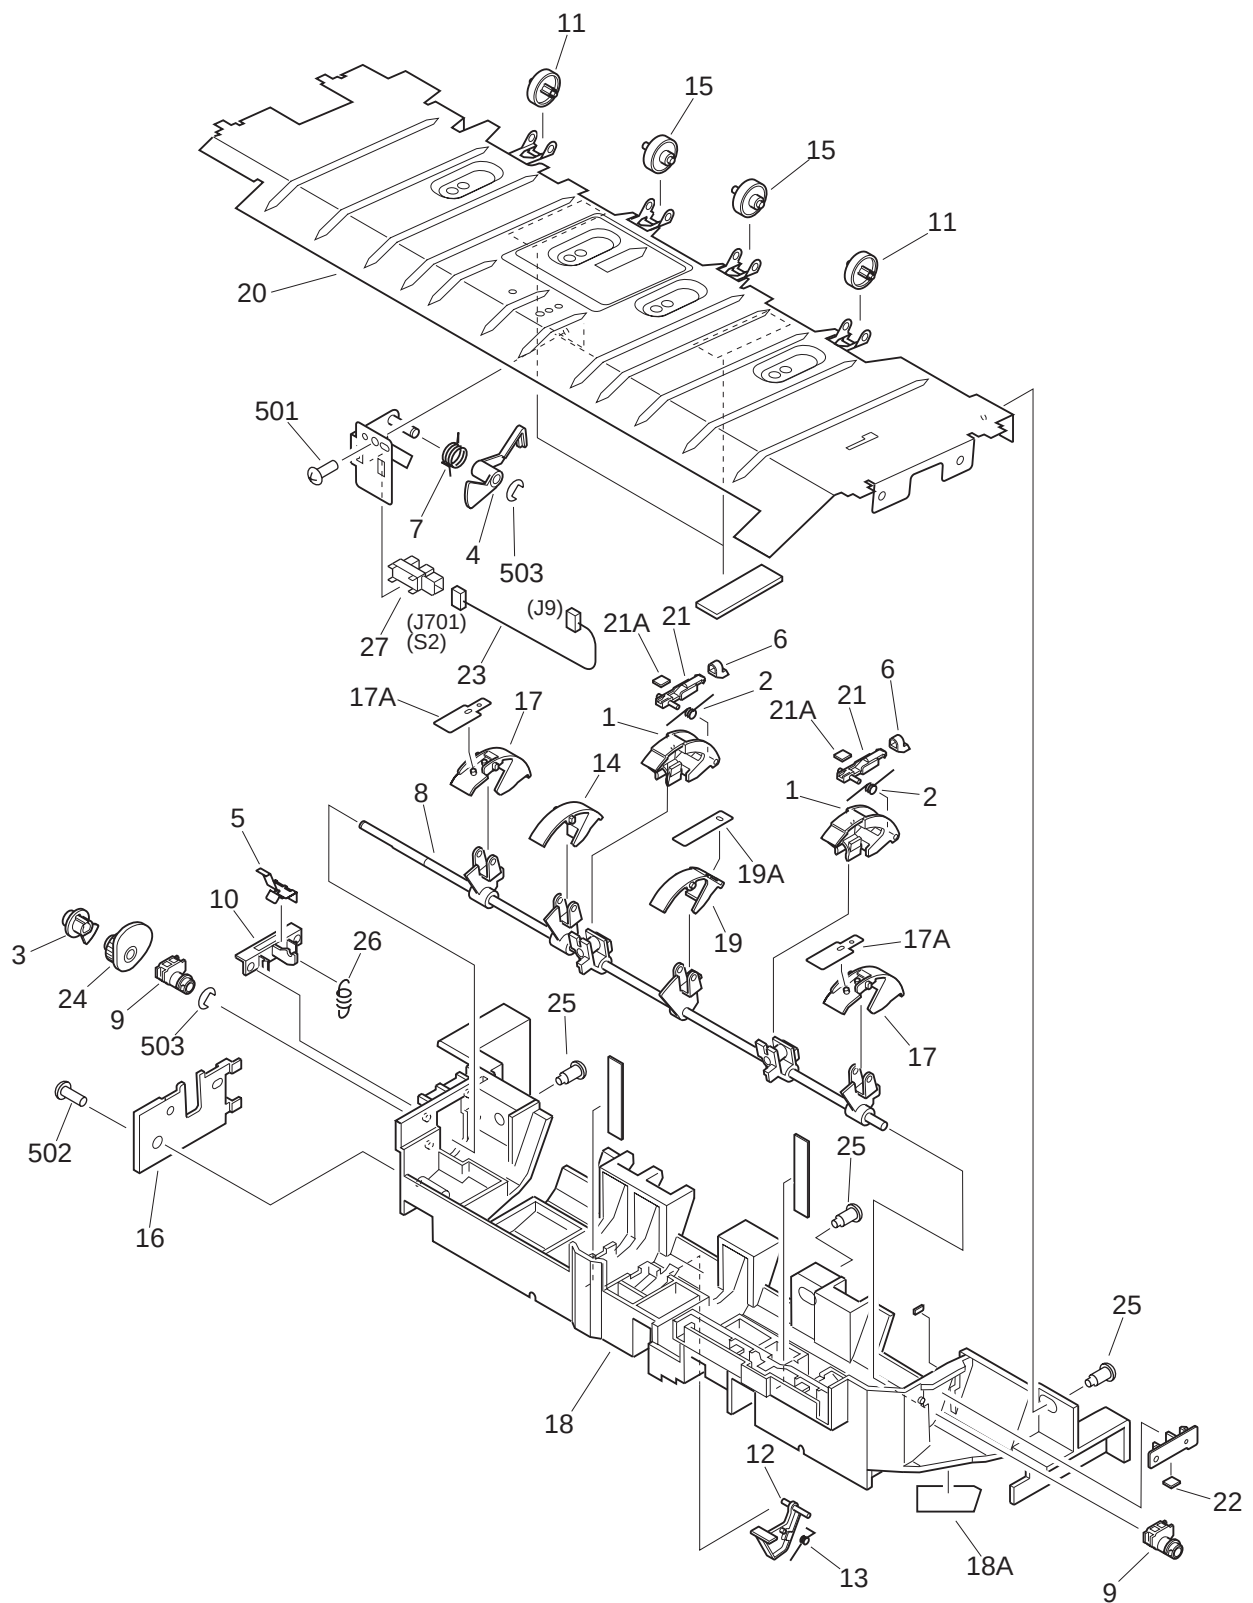


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q32 -	FG6-6984-000		1	LOWER GUIDE ASSEMBLY	
1	FB5-7874-000		2	ROLLER, PAPER	
2	FB5-7877-000		2	SPRING, TORSION	
3	FB5-7878-000		1	FLAG, HOME POSITION SENSOR	
4	FB5-7879-000		1	FLAG, ENTRANCE SENSOR	
5	FB5-7896-000		1	PLATE, GROUNDING	
6	FB5-7899-000		2	RUBBER, ARM	
7	FB5-8566-000		1	SPRING, TORSION	
8	FB5-8567-000		1	SHAFT, ROLLER	
9	FB5-8736-000		2	HOLDER, ROLLER	
10	FB5-8737-000		1	HOLDER, CAM	
11	FB5-8796-000		2	ROLLER, DELIVERY	
12	FB5-8801-000		1	LEVER, ANTICURL	
13	FB5-8802-000		1	SPRING, TORSION	
14	FB5-8803-000		1	ROLLER, PAPER DOWN	
15	FB5-9617-000		2	ROLLER	
16	FB5-9618-000		1	PLATE, ROLLER SLID	
17	FF6-0898-000		2	ROLLER, PAPER DOWN	
17A	FB5-9620-000		2	SHEET, PAPER DOWN	
18	FF6-0891-000		1	GUIDE, LOWER	
18A	FB5-7897-000		1	SHEET	
19	FF6-0892-000		1	ROLLER, BRAKE	
19A	FB5-8740-000		1	SHEET	
20	FF6-0893-000		1	GUIDE, LOWER	
21	FF6-0894-000		2	ARM	
21A	FB5-7902-000		2	PAD	
22	FB5-7902-000		1	PAD	
23	FG3-1644-000		1	CABLE, ENTRANCE SENSOR	J9,701
24	FS5-3896-000		1	PULLEY, 22T	
25	FS5-9715-000		3	SCREW, STEPPED, M3	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q32 - 26	FS7-2569-000		1	SPRING, TENSION	S2 J701
27	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
501	XB1-2300-607		1	SCREW,MACH.,TRUSS HEAD,M3X6	
502	XB4-7401-209		1	SCREW,TAPPING,TRUSS HEAD,M4X12	
503	XD2-1100-322		2	RING,E	

FIGURE Q40 STAPLER ASSEMBLY

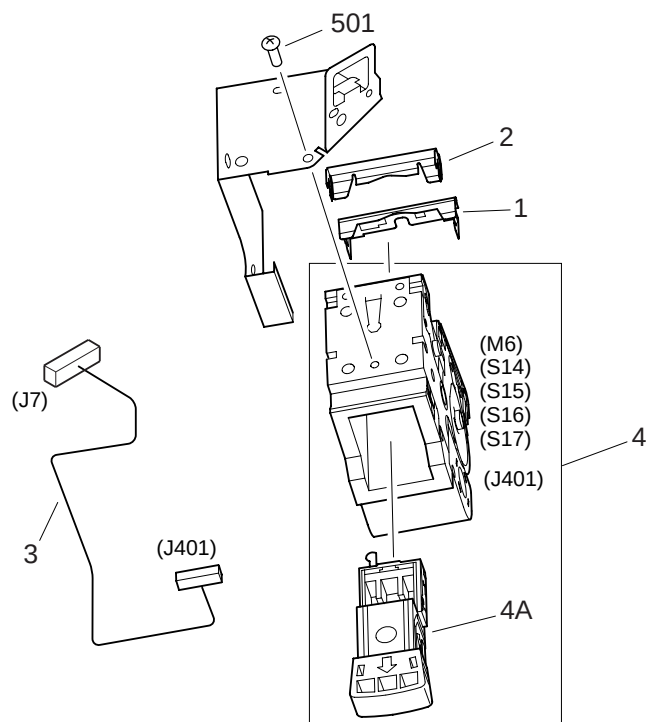


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q40 -	FG6-7001-000		1	STAPLER ASSEMBLY	
1	FB5-0721-000		1	PLATE, GUIDE, LOWER	
2	FB5-0727-000		1	PLATE, GUIDE	
3	FG3-1641-000		1	CABLE, STAPLER CONNECTING	J7, 401
4	FG6-3977-000		1	STAPLE UNIT	M6 S14,15,16,17 J401
4A	FB5-0724-000		1	STAPLE CARTRIDGE	
501	XB1-2300-607		3	SCREW, MACH., TRUSS HEAD, M3X6	

FIGURE Q90 FINISHER CONTROLLER PCB ASSEMBLY

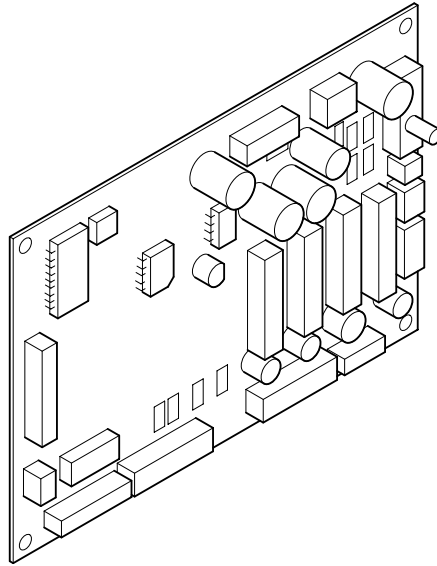


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q90 -	FG3-1646-000		1	FINISHER CONTROLLER PCB ASS'Y	
FU1	VD7-1622-501		1	FUSE, 60V 2.5A	

LIST OF CONNECTORS

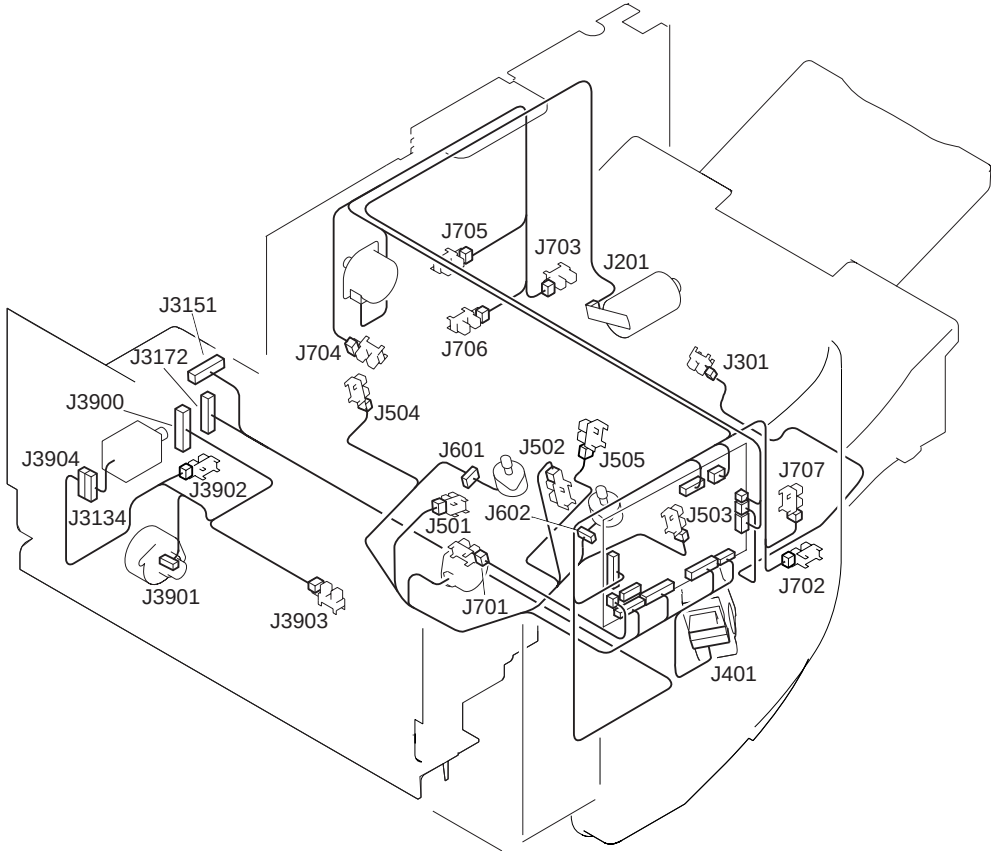


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q B1 -	NPN		RF	LIST OF CONNECTORS	
J1	PCB			FINISHER CONTROLLER PCB ASS'Y	
	VS3-5080-007		1	CONNECTOR, 7P, FEMALE	
	WT1-5155-000		6	TERMINAL	
J2	PCB			FINISHER CONTROLLER PCB ASS'Y	

	VS3-5083-002		1	CONNECTOR, 2P, FEMALE	
	WS3-5160-000		2	SOCKET CONTACT, 18-24AWG	
J3	PCB			FINISHER CONTROLLER PCB ASS'Y	
	VS1-0279-002		1	CONNECTOR, 2P, FEMALE	
	WS3-0437-000		2	SOCKET CONTACT, 20-30AWG	

J4	PCB			FINISHER CONTROLLER PCB ASS'Y	
	NPN			DELIVERY MOTOR	M1
J5	PCB			FINISHER CONTROLLER PCB ASS'Y	
	NPN			PAPER DELIVERY MOTOR	M2
J6	PCB			FINISHER CONTROLLER PCB ASS'Y	

	VS1-0842-012		1	CONNECTOR, 12P, FEMALE	
J7	PCB			FINISHER CONTROLLER PCB ASS'Y	
	VS1-5824-013		1	CONNECTOR, 13P, FEMALE	
	WS3-5358-000		13	SOCKET CONTACT, 22-26AWG	
J8	PCB			FINISHER CONTROLLER PCB ASS'Y	

	VS1-6314-015		1	CONNECTOR, 15P, FEMALE	
J9	PCB			FINISHER CONTROLLER PCB ASS'Y	
	VS1-6314-003		1	CONNECTOR, 3P, MALE	
J10	PCB			FINISHER CONTROLLER PCB ASS'Y	
	VS1-6314-018		1	CONNECTOR, 18P, MALE	

J11	PCB			FINISHER CONTROLLER PCB ASS'Y	
	VS1-0842-003		1	CONNECTOR, 3P, FEMALE	
J201	NPN			STACK TRAY UP/DOWN MOTOR	M5
	VS1-0279-002		1	CONNECTOR, 2P, FEMALE	
	WS3-0437-000		2	SOCKET CONTACT, 20-30AWG	

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q B1 - J301	NPN			STACK TRAY PAPER SENSOR	S11
	VS1-0842-003		1	CONNECTOR, 3P, FEMALE	
J401	NPN			STAPLE UNIT	M6 S14,15,16,17
	VS1-5824-013		1	CONNECTOR, 13P, FEMALE	
	WS3-5358-000		13	SOCKET CONTACT, 22-26AWG	
J501	NPN			OPERATING TRAY PAPER SENSOR	S5
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J502	NPN			PAPER DELIVERY LEVER HP SENSOR	S8
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J503	NPN			FRONT ADJUSTING HP SENSOR	S6
J504	NPN			REAR ADJUSTING HP SENSOR	S7
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J505	NPN			PAPER PRESSURE LEVER HP SENSOR	S4
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J601	NPN			REAR ADJUSTMENT MOTOR	M4
	VS1-0842-006		1	CONNECTOR, 6P, FEMALE	
	VS1-5057-006		1	CONNECTOR, SNAP TIGHT	
J602	NPN			FRONT ADJUSTMENT MOTOR	M3
	VS1-0842-006		1	CONNECTOR, 6P, FEMALE	
J701	NPN			ENTRANCE SENSOR	S2
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J702	NPN			STACK TRAY PAPER HEIGHT SENSOR	S10
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J703	NPN			TRAY UP/DOWN CLOCK SENSOR	S9
	VS1-6320-003		1	CONNECTOR, 3P, MALE	
J704	NPN			RETURN ROLLER HP SENSOR	S3
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J705	NPN			STACK TRAY UPPER LIMIT SENSOR	S13

FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q B1 - J705	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J706	NPN			STACK TRAY LOWER LIMIT SENSOR	S12
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J707	NPN			FRONT COVER SENSOR	S1
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J3134	NPN			DELIVERY SOLENOID	SL3Z
J3151	SYS			TO COPIER	
	VS1-5824-004		1	CONNECTOR, 4P, FEMALE	
	WS3-5358-000		4	SOCKET CONTACT, 22-26AWG	
J3172	SYS			TO COPIER	
	VS3-5083-004		1	CONNECTOR, 4P, FEMALE	
	WS3-5160-000		4	SOCKET CONTACT, 18-24AWG	
J3900	SYS			TO COPIER	
	VS1-6321-013		1	CONNECTOR, 13P, FEMALE	
J3901	NPN			DELIVERY MOTOR	M7Z
	VS1-5057-004		1	CONNECTOR, SNAP TIGHT	
	VS1-6321-004		1	CONNECTOR, 4P, FEMALE	
J3902	NPN			DELIVERY OPEN/CLOSE SENSOR	PS24Z
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J3903	NPN			DELIVERY SENSOR	PS19Z
	VS1-6321-003		1	CONNECTOR, 3P, FEMALE	
J3904	VS1-5057-002		1	CONNECTOR, SNAP TIGHT	
	VS1-6321-002		1	CONNECTOR, 2P, FEMALE	

FIGURE QB2 LIST OF ELECTRIC PARTS

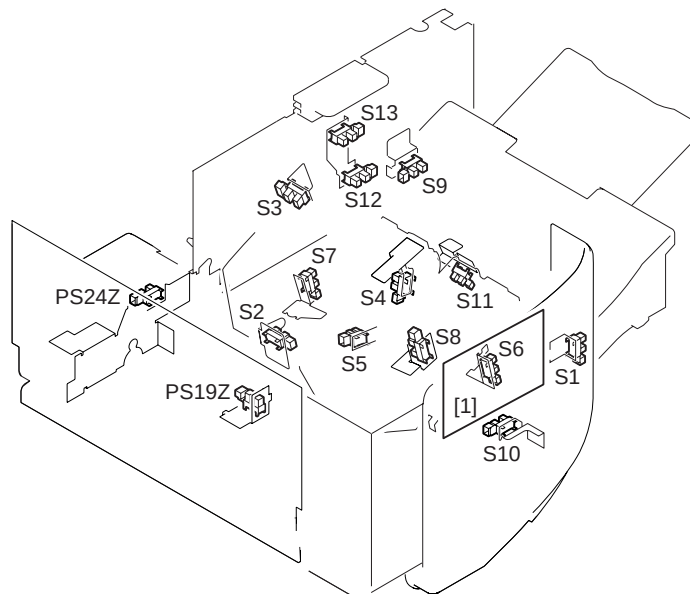
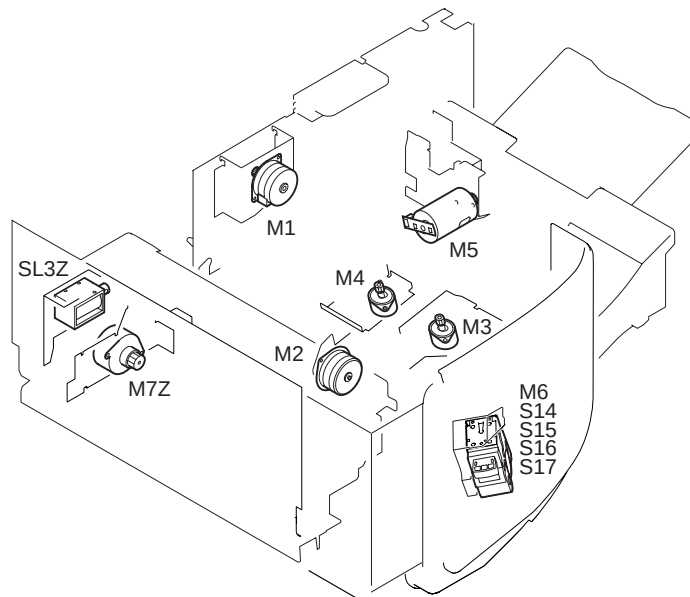


FIGURE & KEY NO.	PART NUMBER	R A N K	Q' T Y	DESCRIPTION	SERIAL NUMBER / REMARKS
Q B2 -	NPN		RF	LIST OF ELECTRIC PARTS	
1	FG3-1646-000		1	FINISHER CONTROLLER PCB ASS'Y	
M1	FH6-1858-000		1	MOTOR, STEPPING, DC24V	
M2	FH6-1859-000		1	MOTOR, STEPPING	
M3	FH6-1668-000		1	MOTOR, STEPPING, DC 4.8W	
M4	FH6-1668-000		1	MOTOR, STEPPING, DC 4.8W	
M5	FH6-1860-000		1	MOTOR, DC24V	
M6	FG6-3977-000		1	STAPLE UNIT	
M7Z	FH6-1880-000		1	MOTOR, STEPPING	
PS19Z	FH7-7462-000		1	PHOTO-INTERRUPTER	
PS24Z	FH7-7462-000		1	PHOTO-INTERRUPTER	
S1	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S2	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S3	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S4	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S5	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S6	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S7	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S8	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S9	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S10	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S11	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S12	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S13	WG8-5362-000		1	IC, TLP1241, PHOTO-INTERRUPTER	
S14	FG6-3977-000		1	STAPLE UNIT	
S15	FG6-3977-000		1	STAPLE UNIT	
S16	FG6-3977-000		1	STAPLE UNIT	
S17	FG6-3977-000		1	STAPLE UNIT	
SL3Z	FH6-5019-000		1	SOLENOID, DC24V	

QD NUMERICAL INDEX

PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.
FB3-5597-000	Q31 - 1	FB5-9321-000	Q31 - 12	FS5-6717-000	Q30 - 49
FB3-7962-000	Q11 - 19	FB5-9322-000	Q31 - 18	FS5-6738-000	Q30 - 33
FB5-0374-000	Q31 - 2	FB5-9324-000	Q31 - 13	FS5-6883-000	Q15 - 8
FB5-0590-000	Q11 - 1	FB5-9617-000	Q32 - 15	FS5-6884-000	Q15 - 9
FB5-0595-000	Q11 - 13	FB5-9618-000	Q32 - 16	FS5-9661-000	Q01 - 5
FB5-0596-000	Q11 - 14	FB5-9620-000	Q32 - 17A	FS5-9712-000	Q11 - 29
FB5-0598-000	Q11 - 15	FE5-7066-000	Q11 - 12	FS5-9713-000	Q11 - 30
FB5-0609-000	Q30 - 14		Q21 - 1		Q20 - 6
FB5-0610-000	Q30 - 8		Q30 - 24	FS5-9714-000	Q30 - 34
FB5-0612-000	Q30 - 9	FF5-9180-000	Q30 - 2	FS5-9715-000	Q32 - 25
FB5-0613-000	Q30 - 6	FF5-9182-000	Q30 - 3	FS5-9727-000	Q31 - 23
FB5-0616-000	Q30 - 15	FF6-0132-000	Q31 - 14		Q31 - 29
FB5-0618-000	Q30 - 10	FF6-0885-000	Q11 - 22	FS6-1018-000	Q31 - 30
FB5-0624-000	Q30 - 16	FF6-0887-000	Q01 - 2	FS7-0500-000	Q30 - 50
FB5-0625-000	Q30 - 17	FF6-0888-000	Q01 - 3	FS7-0744-000	Q31 - 31
FB5-0638-000	Q30 - 1	FF6-0889-000	Q11 - 18	FS7-0921-000	Q20 - 7
FB5-0721-000	Q40 - 1	FF6-0891-000	Q32 - 18	FS7-0922-000	Q20 - 8
FB5-0724-000	Q40 - 4A	FF6-0892-000	Q32 - 19	FS7-0923-000	Q20 - 9
FB5-0727-000	Q40 - 2	FF6-0893-000	Q32 - 20	FS7-0924-000	Q11 - 31
FB5-0731-000	Q11 - 23	FF6-0894-000	Q32 - 21	FS7-0925-000	Q11 - 32
FB5-4920-000	Q31 - 3	FF6-0898-000	Q32 - 17	FS7-0926-000	Q11 - 33
FB5-7823-000	Q15 - 1	FF6-1262-000	Q31 - 15		Q21 - 4
FB5-7824-000	Q15 - 2	FG3-1640-000	Q15 - 7	FS7-0927-000	Q21 - 5
FB5-7827-000	Q15 - 3	FG3-1641-000	Q40 - 3	FS7-0928-000	Q30 - 44
FB5-7828-000	Q11 - 2	FG3-1642-000	Q30 - 4	FS7-0929-000	Q30 - 45
FB5-7832-000	Q20 - 1	FG3-1643-000	Q30 - 5	FS7-2252-000	Q30 - 13
FB5-7835-000	Q15 - 4	FG3-1644-000	Q32 - 23	FS7-2253-000	Q30 - 51
FB5-7837-000	Q15 - 5	FG3-1646-000	Q90 -	FS7-2559-000	Q11 - 34
FB5-7844-000	Q15 - 6		Q B2 - 1	FS7-2560-000	Q20 - 10
FB5-7845-000	Q11 - 3	FG3-1788-000	Q20 - 3	FS7-2561-000	Q15 - 10
FB5-7846-000	Q11 - 4	FG3-1792-000	Q31 - 16	FS7-2562-000	Q11 - 35
FB5-7849-000	Q11 - 5	FG3-1793-000	Q01 - 4	FS7-2563-000	Q30 - 35
FB5-7851-000	Q11 - 6	FG3-1794-000	Q31 - 17	FS7-2564-000	Q11 - 36
FB5-7852-000	Q11 - 7	FG6-3977-000	Q40 - 4	FS7-2567-000	Q30 - 36
FB5-7853-000	Q11 - 8		Q B2 - M6	FS7-2568-000	Q11 - 37
FB5-7855-000	Q11 - 20		Q B2 - S14	FS7-2569-000	Q32 - 26
FB5-7859-000	Q11 - 21		Q B2 - S15	FS7-2657-000	Q31 - 32
FB5-7862-000	Q30 - 53		Q B2 - S16	FS7-2658-000	Q31 - 20
FB5-7863-000	Q11 - 9		Q B2 - S17	FU3-0024-000	Q31 - 33
FB5-7864-000	Q11 - 10	FG6-6976-000	Q15 -	PCB	Q B1 - J1
FB5-7865-000	Q11 - 11	FG6-6980-000	Q20 -		Q B1 - J2
FB5-7867-000	Q11 - 24	FG6-6984-000	Q32 -		Q B1 - J3
FB5-7874-000	Q32 - 1	FG6-6985-000	Q30 -		Q B1 - J4
FB5-7877-000	Q32 - 2	FG6-6987-000	Q21 -		Q B1 - J5
FB5-7878-000	Q32 - 3	FG6-7001-000	Q40 -		Q B1 - J6
FB5-7879-000	Q32 - 4	FG6-7608-000	Q31 -		Q B1 - J7
FB5-7886-000	Q30 - 18	FH6-1668-000	Q30 - 46		Q B1 - J8
FB5-7888-000	Q30 - 19		Q B2 - M3		Q B1 - J9
FB5-7890-000	Q30 - 20		Q B2 - M4		Q B1 - J10
FB5-7892-000	Q30 - 39	FH6-1858-000	Q21 - 2		Q B1 - J11
FB5-7893-000	Q30 - 40		Q B2 - M1	RS1-1054-000	Q11 - 38
FB5-7894-000	Q30 - 41	FH6-1859-000	Q30 - 25	VD7-1622-501	Q90 - FU1
FB5-7895-000	Q30 - 42		Q B2 - M2	VS1-0279-002	Q B1 - J3
FB5-7896-000	Q32 - 5	FH6-1860-000	Q20 - 2		Q B1 - J201
FB5-7897-000	Q32 - 18A		Q B2 - M5	VS1-0842-003	Q B1 - J11
FB5-7899-000	Q32 - 6	FH6-1880-000	Q31 - 21		Q B1 - J301
FB5-7902-000	Q32 - 21A		Q B2 - M7Z	VS1-0842-006	Q B1 - J601
	Q32 - 22	FH6-5019-000	Q31 - 22		Q B1 - J602
FB5-8566-000	Q32 - 7		Q B2 - SL3Z	VS1-0842-012	Q B1 - J6
FB5-8567-000	Q32 - 8	FH7-7462-000	Q31 - 19	VS1-5057-002	Q31 - 34
FB5-8568-000	Q30 - 21		Q B2 - PS19Z		Q B1 - J3904
FB5-8569-000	Q30 - 22		Q B2 - PS24Z	VS1-5057-004	Q31 - 16A
FB5-8570-000	Q30 - 23	FS1-1508-000	Q31 - 25		Q B1 - J3901
FB5-8571-000	Q11 - 16	FS1-9199-000	Q11 - 25	VS1-5057-006	Q30 - 5A
FB5-8574-000	Q01 - 1	FS5-1219-000	Q11 - 26		Q B1 - J601
FB5-8736-000	Q32 - 9	FS5-1377-000	Q31 - 26		Q B1 - J602
FB5-8737-000	Q32 - 10	FS5-1927-000	Q30 - 26	VS1-5824-004	Q B1 - J3151
FB5-8740-000	Q32 - 19A	FS5-1943-000	Q31 - 27	VS1-5824-013	Q B1 - J7
FB5-8742-000	Q11 - 22A	FS5-1952-000	Q31 - 24		Q B1 - J401
FB5-8743-000	Q11 - 17	FS5-3767-000	Q30 - 27	VS1-6314-003	Q B1 - J9
FB5-8796-000	Q32 - 11	FS5-3894-000	Q20 - 4	VS1-6314-015	Q B1 - J8
FB5-8798-000	Q30 - 7	FS5-3895-000	Q11 - 27	VS1-6314-018	Q B1 - J10
FB5-8799-000	Q30 - 11	FS5-3896-000	Q32 - 24	VS1-6320-003	Q B1 - J703
FB5-8800-000	Q30 - 12	FS5-3897-000	Q30 - 28	VS1-6321-002	Q B1 - J3904
FB5-8801-000	Q32 - 12	FS5-3899-000	Q21 - 3	VS1-6321-003	Q B1 - J501
FB5-8802-000	Q32 - 13		Q30 - 29		Q B1 - J502
FB5-8803-000	Q32 - 14	FS5-3900-000	Q30 - 30		Q B1 - J503
FB5-9306-000	Q31 - 4	FS5-3901-000	Q30 - 43		Q B1 - J504
FB5-9307-000	Q31 - 5	FS5-3925-000	Q31 - 28		Q B1 - J505
FB5-9308-000	Q31 - 6	FS5-6712-000	Q30 - 31		Q B1 - J701
FB5-9309-000	Q31 - 7	FS5-6713-000	Q30 - 47		Q B1 - J702
FB5-9311-000	Q31 - 8	FS5-6715-000	Q11 - 28		Q B1 - J704
FB5-9312-000	Q31 - 9		Q20 - 5		Q B1 - J705
FB5-9313-000	Q31 - 10		Q30 - 32		Q B1 - J706
FB5-9314-000	Q31 - 11	FS5-6716-000	Q30 - 48		Q B1 - J707

PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.	PART NUMBER	FIGURE & KEY NO.
VS1-6321-003	Q B1 - J3902				
	Q B1 - J3903				
VS1-6321-004	Q B1 - J3901				
VS1-6321-013	Q B1 - J3900				
VS3-5080-007	Q B1 - J1				
VS3-5083-002	Q B1 - J2				
VS3-5083-004	Q B1 - J3172				
WG8-5362-000	Q11 - 39				
	Q15 - 11				
	Q30 - 52				
	Q32 - 27				
	Q B2 - S1				
	Q B2 - S2				
	Q B2 - S3				
	Q B2 - S4				
	Q B2 - S5				
	Q B2 - S6				
	Q B2 - S7				
	Q B2 - S8				
	Q B2 - S9				
	Q B2 - S10				
	Q B2 - S11				
	Q B2 - S12				
	Q B2 - S13				
WS3-0437-000	Q B1 - J3				
	Q B1 - J201				
WS3-5160-000	Q B1 - J2				
	Q B1 - J3172				
WS3-5358-000	Q B1 - J7				
	Q B1 - J401				
	Q B1 - J3151				
WT1-5155-000	Q B1 - J1				
XA9-0606-000	Q01 - 6				
	Q31 - 35				
XA9-0629-000	Q01 - 7				
XA9-1116-000	Q31 - 36				
XB1-2300-607	Q11 - 502				
	Q15 - 501				
	Q20 - 501				
	Q21 - 501				
	Q30 - 509				
	Q32 - 501				
	Q40 - 501				
XB1-2300-807	Q30 - 510				
XB1-2400-607	Q11 - 503				
XB1-2400-609	Q11 - 504				
	Q15 - 502				
	Q30 - 511				
XB2-7300-607	Q11 - 505				
XB2-8300-607	Q30 - 503				
XB2-8400-809	Q20 - 502				
XB4-5401-207	Q11 - 501				
XB4-7301-206	Q30 - 501				
XB4-7401-209	Q15 - 503				
	Q30 - 512				
	Q32 - 502				
XB6-7401-609	Q01 - 501				
XD2-1100-242	Q15 - 504				
	Q30 - 508				
XD2-1100-322	Q30 - 504				
	Q31 - 501				
	Q32 - 503				
XD2-1100-502	Q11 - 507				
	Q20 - 503				
	Q21 - 502				
	Q30 - 505				
	Q31 - 502				
XD2-1100-582	Q15 - 505				
	Q20 - 504				
XD2-1100-642	Q11 - 506				
XD3-1300-102	Q31 - 503				
XD3-2200-082	Q21 - 503				
	Q30 - 507				
XD3-2200-102	Q11 - 510				
XD3-2200-122	Q30 - 506				
	Q31 - 504				
XD3-2200-142	Q11 - 508				
XD3-2300-142	Q11 - 509				
XD9-0117-000	Q30 - 502				
XF2-1108-040	Q20 - 11				
XF2-1108-240	Q11 - 40				
XF2-1108-640	Q11 - 41				
XF2-1109-140	Q30 - 37				
XF2-1111-540	Q30 - 38				

Prepared by
OFFICE IMAGING PRODUCTS QUALITY ASSURANCE CENTER
CANON INC.
Printed in Japan

REVISION 0 [APR. 2001]

5-1, Hakusan 7-chome, Toride-city, Ibaraki 302-8501, Japan



This publication is
printed on 100%
recycled paper.

Canon