

FLUKE®

80PK-5A Type K Piercing Probe

Instruction Sheet

WARNING

TO AVOID ELECTRICAL SHOCK, DO NOT USE THIS PROBE WHEN VOLTAGES EXCEEDING 24V AC RMS OR 60 V DC ARE PRESENT. THE PROBE TIP IS ELECTRONICALLY CONNECTED TO THE OUTPUT TERMINALS.

INTRODUCTION

The 80PK-5A Type K Piercing Probe is designed for use in liquids, gels, soft, and semi-hard materials. The probe is made of 316 stainless steel, which is suitable for food service use. The thermocouple junction of the probe is protected from tip to handle by the stainless steel sheath. The 40-inch (1-meter) cable is terminated with a Type K miniature thermocouple connector with 0.792-mm (.312-inch) pin spacing. The 80PK-5A can be used with any temperature-measuring instrument that is designed to accept Type K thermocouples and has a miniature connector input.

SPECIFICATIONS

Type: K: Standard grade Ni-Cr vs Ni-Al (Chromel vs Alumel)

Measurement Range of Stainless Steel Probe:
-40°C to 260°C (-40°F to 500°F)

Accuracy: (With respect to ANSI MC96.1 Standard Limits of Error)

NOTE

All error calculations should be done in °C, then scaled to °F.

RANGE	ACCURACY (% of reading)
-40°C to 275°C (-40°F to 527°F)	±2.2°C

August 1989 Rev. 2, 4/02

© 1990-2002 Fluke Corporation. All rights reserved. Printed in U.S.A.

All product names are trademarks of their respective companies

Output: @ 25°C (77°F) =1.00 mV (reference junction at 0°C)

Seebeck Coefficient: @ 25°C (77°F) = 40.50 $\mu\text{V} / ^\circ\text{C}$

Measurement Time (Time Constant): 1.0 seconds in 100°C still water at sea level pressure (5 time constants = 1 complete step change, i.e., 5 seconds)

Maximum Voltage: 24V ac rms or 60V dc

Maximum Temperature of Tip: 816°C (1500°F)

Sheath

Material: 316 Stainless Steel Dimensions

Diameter: 3.175 mm (1/8 in)

Length: 10.16 cm (4 in)

Tip: 30° conical

Grounding: Junction welded to sheath

Cable

Length: 40 inches (1 meter)

Insulation

Material: PVC

Maximum Temperature: 105°C (220°F)

Jacket Color: Gray

Food Service Limitation: The cable should not come in contact with food.

Conductors

Type: K

Size: AWG #24 stranded (7 strands of #32)

Handle

Material: Gray Hytrel (food service grade)

Maximum Temperature of Food in Contact with Handle: 65°C (150°F)

Connector

Type: Mini-thermocouple connector with .792 mm (.0312 in) pin spacing

Material: Yellow Hytrel (food service grade)

Maximum Temperature: 125°C (257°F)

Overall Probe Length: 22.23 cm (8.75 in) from tip to end of cable strain relief

Protection: Class 3. Relates solely to insulation and grounding properties defined in IEC 348.

MEASUREMENT CONSIDERATIONS

Instrument Compatibility

The 80PK-5A is compatible with any temperature-measuring instrument that accepts Type K thermocouples, has a miniature thermocouple connector, and has cold reference junction compensation. Accuracy of the temperature-measuring instrument must be considered along with the 80PK-5A accuracy specification to determine the overall accuracy of the combination.

Temperature Limitations

The tip of the 80PK-5A has a continuous temperature rating of 816°C (1500°F). However the opposite end of the sheath nearest the handle should not be subjected to temperatures greater than 125°C. This is the maximum temperature limitation of the Hytrel handle. See Food Service Limitations.

Exposure Limitations

The sheath material of the 80PK-5A is stainless steel. It should not be exposed to halides or sulfides.

Food Service Limitations

The 316 stainless steel probe is suitable for contact with hot or cold foods within the specified temperature range of the probe. However the handle is made of Hytrel 5556 which is suitable for repeat food contact only under the following conditions: food temperature under 65°C (150°F), food alcohol content under 8%. Food may be wet, dry, or fatty. Also, the cable should not come in contact with food.

OPERATION

Use the 80PK-5A as follows:

1. Connect the 80PK-5A to a compatible Type K measuring instrument using the miniature (0.312 inch spacing) thermocouple connector.
2. Turn on the measuring instrument, and select the appropriate range and scale.
3. Check the read out on the measuring instrument. With no heat or cold source applied to the bead, the measuring instrument should display the ambient (room) temperature. If the instrument does not read out properly, refer to the TROUBLESHOOTING paragraphs that follow.

Measuring Technique

The 80PK-5A Piercing Probe should be inserted at least 31.75 mm (1.25 in) into the substance to be measured to minimize the shunting effect of the sheath.

TROUBLESHOOTING

With no heat or cold applied to the probe, the measuring instrument should display the ambient temperature. If the measuring instrument does not read out properly, try the following:

1. Verify that the measuring instrument is designed to be used with Type K thermocouples. The measuring instrument should have a yellow input connector and / or be marked with a "K".
2. Check for an open circuit indicator on the measuring-instrument. Some temperature-measuring instruments have a built-in circuit to indicate if the connected probe is open. (All Fluke temperature-measuring instruments have this feature.) Refer to the owner's manual accompanying the measuring instrument to see if this feature is available.

Short the two input pins of the measuring instrument with a piece of wire. If the instrument is functioning, it should indicate the ambient temperature.

3. If you suspect a broken connection, use an ordinary ohmmeter to read the continuity of the probe from pin to pin. The ohmmeter should read 20 ohms or less if there is continuity.


SCALE CONVERSIONS

Use the following equation to convert °C to °F:

$$(^{\circ}\text{C} \times 1.8) + 32 = ^{\circ}\text{F}$$

Use the following equation to convert °F to °C:

$$(^{\circ}\text{F} - 32) \times 0.5556 = ^{\circ}\text{C}$$

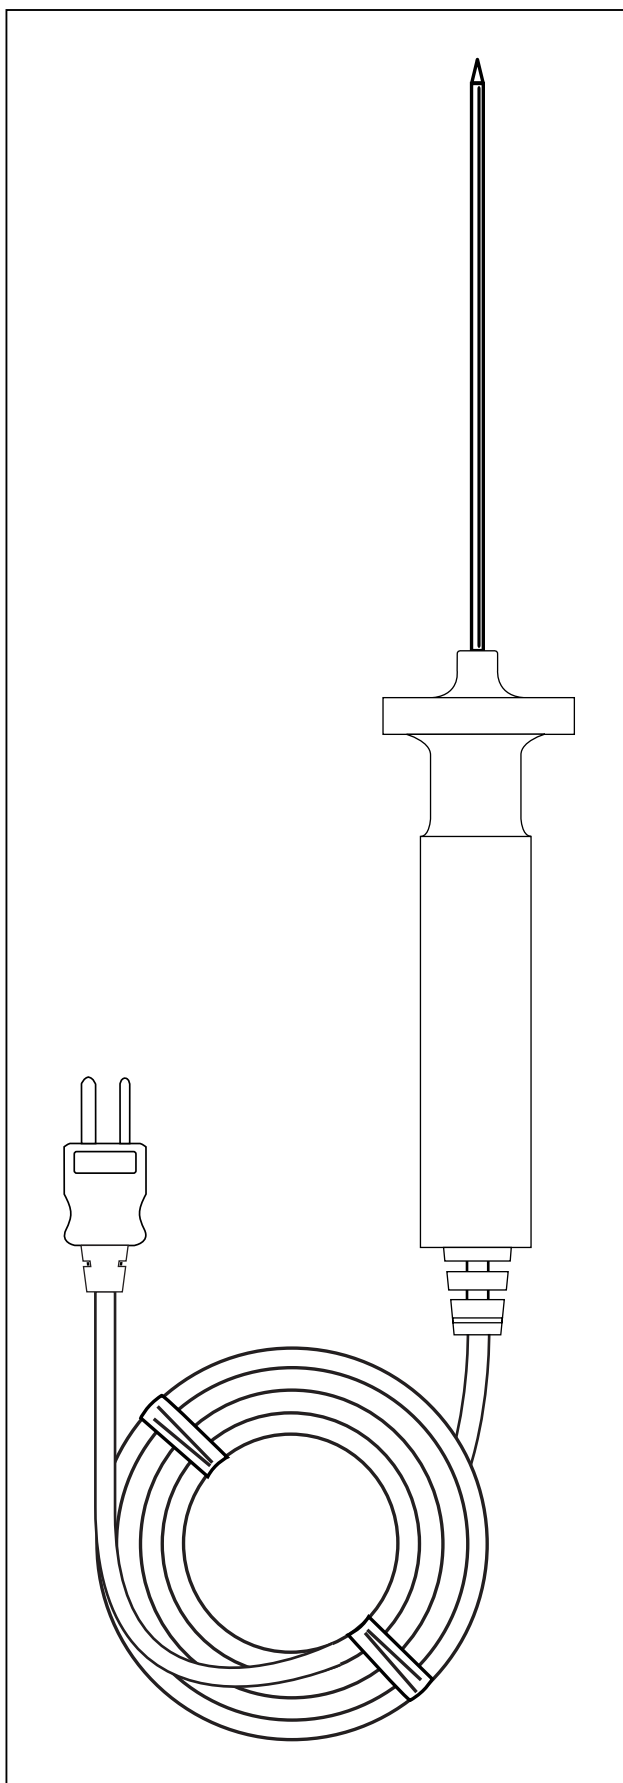

ONE YEAR LIMITED WARRANTY

Fluke warrants your accessory to be free from defects in material and workmanship under normal use and service for 1 year from date of purchase to the original purchaser. The warranty does not apply to batteries or fuses or when the accessory has been misused, altered, or damaged by accident or abnormal conditions of operation.

For warranty service, send the accessory, with a description of the difficulty, postage prepaid, to a Fluke Service Center. Fluke assumes no risk for damage in transit. Fluke will at our option, repair or replace the defective instrument free of charge. However, if we determine that the failure was caused by misuse, alteration, accident or abnormal condition of operation, you will be billed for the repair. The repaired accessory will be returned, transportation prepaid.

FLUKE MAKES NO WARRANTY OTHER THAN THE LIMITED WARRANTY STATED ABOVE. ALL WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF 1 YEAR FROM THE DATE OF PURCHASE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE.

NOTE (USA only)

Some states do not allow limitation of implied warranties, or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For application or operation assistance, or information on Fluke products, call:

USA: 1-888-99-FLUKE (1-888-993-5853)

Canada: 1-800-36-FLUKE (1-800-363-5853)

Europe: +31 402-678-200

Japan: +81-3-3434-0181

Singapore: +65-738-5655

Anywhere in the world: +1-425-446-5500

Or, visit Fluke's Web site at www.fluke.com.

Address correspondence to:

Fluke Corporation

P.O. Box 9090

Everett, WA 98206-9090

USA

Fluke Europe B.V.

P.O. Box 1186

5602 BD Eindhoven,

The Netherlands