

- C Use the select/adjust keys to select "Components: VOLTAGE", and press the ENTER softkey (most right) to start the component test function.
- D Adjust the channel A attenuator (press the mV/V key once in the direction "mV") to set the vertical axis to 500 mV/div.
- E The ScopeMeter display will now look like figure 4.14.
If you use a 10 k Ω resistor, a 45° line will be shown.
- F Press the MEASURE softkey and use the select/adjust keys to select "Components: CURRENT" from the MEASURE pop-up menu. Activate the selection by pressing the ENTER softkey.
- G Exchange the 10 k Ω resistor for a 1 k Ω resistor.
- H Now the ScopeMeter display will show a line under 45°, in the upper left quadrant.

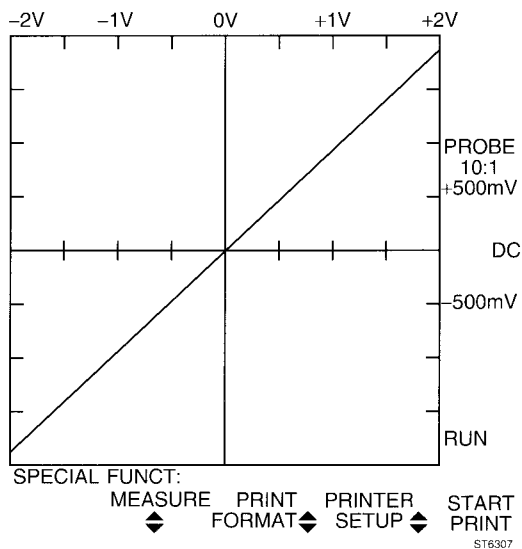


Figure 4.14 Component test "VOLTAGE" mode