

Result (see Figure 7.1): Square wave,
 Ampl 5V peak-to-peak $\pm 10\%$
 Freq 976 Hz $\pm 1\%$

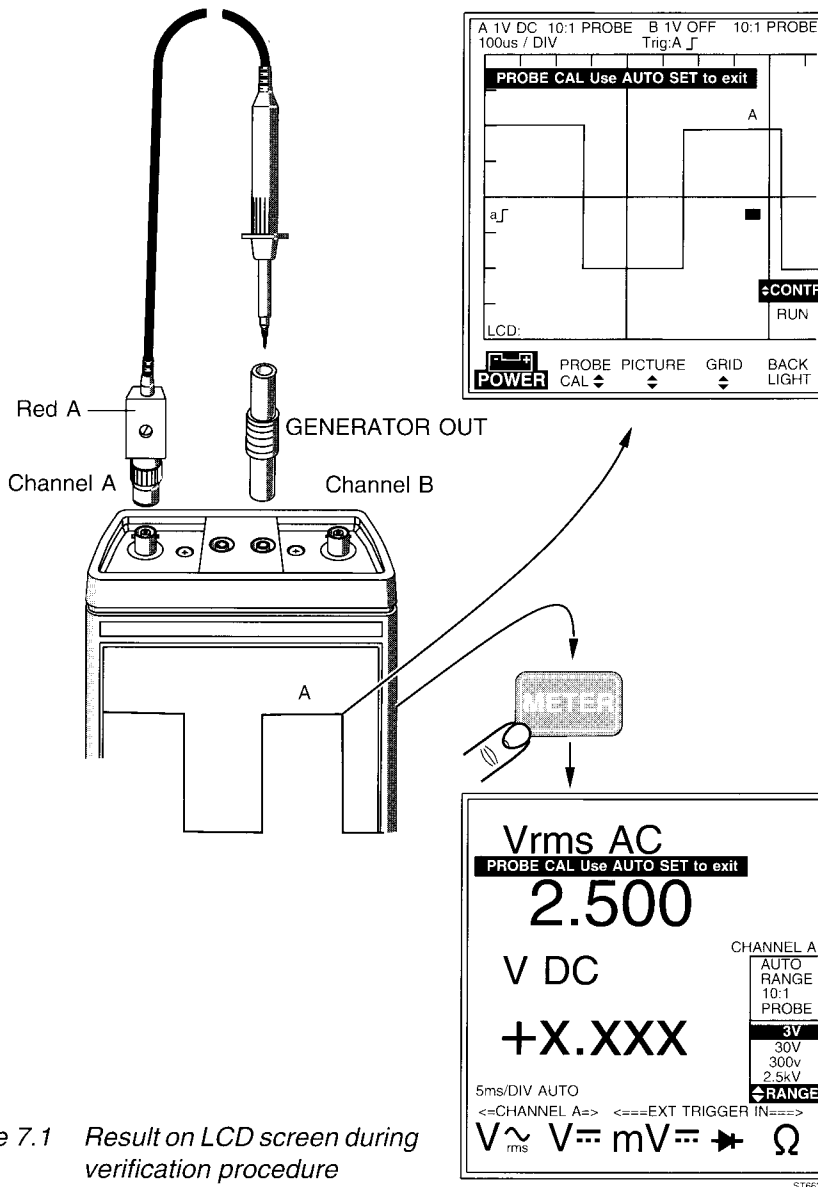


Figure 7.1 Result on LCD screen during verification procedure

10. Press the **METER** key.
 The ScopeMeter sets itself to the initial METER measurement function.
- Check the **METER** display on the following settings and results:
 Result (see Figure 7.1): Vrms AC 2.500 $\pm 10\%$
 Ranging (see Figure 7.1): AUTO, 3V
11. Press the **AUTO SET** key to end the operation verification procedure for channel A.

NOTE: To verify the SCOPE operation of Channel B, proceed in the same order as Channel A, use the grey channel B BNC socket and the grey 10:1 scope probe.