


KENWOOD

SIRIUS 

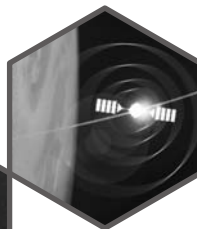

 Here₂Anywhere™

KTC-H2A1
Portable SIRIUS® Tuner
Instruction
Manual
version 2

CONGRATULATIONS!

Your Here₂Anywhere™ Portable SIRIUS® Satellite Tuner lets you enjoy SIRIUS Satellite's digital entertainment streams anywhere you've installed one of our KPA-H2H Home Docking Kits or KPA-H2C/KPA-H2CFM Car Docking Kits (available separately). Use this manual to familiarize yourself with all of Here₂Anywhere's features and capabilities.

For the latest information about this and other Kenwood products, visit the Kenwood USA Corporation Web site at: www.kenwoodusa.com



Table of contents

Congratulations.....2	Removing Here ₂ Anywhere from the dock16
Box contents3	Basic operation17
Safety precautions3	Selecting music18
Installation in a vehicle.....6	Setting and using stream presets20
Mounting the antenna.....8	Saving and recalling music information22
Installation in a home.....10	Display options23
Finding a location for the antenna11	Setup mode24
Front panel controls and features14	Troubleshooting guide34
Remote control functions.....15	Specifications35
Activating your SIRIUS subscription.....16	

Box contents

Unpack your Here₂Anywhere carefully and make sure that everything listed here is present:

1 x Here₂Anywhere main unit



1 x Remote control



2 x AAA batteries



If anything is missing or damaged, or if your Here₂Anywhere fails to operate, notify your dealer immediately. If your Here₂Anywhere was shipped to you directly, notify your shipper immediately. Kenwood recommends that you retain the original carton and packing materials in case you need to ship your Here₂Anywhere in the future.

Safety precautions

Warning

Take the following precautions to prevent traffic accidents and avoid personal injury:

- Installation must be performed according to this installation manual. Kenwood is not responsible for issues arising from installations not performed according to the procedures in this manual.
- Do not install the unit where it may obstruct your view through the windshield or of your vehicle's indicator displays.
- Do not install the unit where it may hinder the function of safety devices such as an airbag. Doing so may prevent the airbag from functioning properly in the event of an accident.
- The installation and use suggestions contained in this manual are subject to any restrictions or limitations that may be imposed by applicable law—the purchaser should check applicable law for any restrictions or limitations before installing and/or operating this unit.
- Failure to follow these safety instructions and warnings may result in a serious accident.

⚠ Warning

Take the following precautions to prevent fire and avoid personal injury:

- To avoid short circuits, never put or leave any metallic objects (coins, tools, etc.) inside the unit.
- If the unit emits smoke or strange smells, turn the power off immediately and consult your Kenwood dealer.
- Do not drop the unit or subject it to strong shocks.
- If the LCD display becomes damaged or broken, do not touch the liquid crystal fluid. The fluid may be dangerous to your health or even fatal. If the liquid crystal fluid contacts your body or clothing, immediately wash it off with soap and water.

⚠ Caution

Take the following precautions to keep the unit in proper working order:

- Be sure the unit is connected to a 12V DC power supply with a negative ground connection.
- Do not open the unit.
- Do not install the unit where it will be exposed to high levels of humidity, moisture, or dust.

- When replacing a fuse, use only a new one with the proper rating. Using a fuse with the wrong rating may cause the unit to malfunction.
- To prevent a short circuit when replacing a fuse, first disconnect the wiring harness.
- When drilling holes to mount the unit, make sure not to damage wiring or other systems on the other side.

Note

If the unit doesn't seem to be working properly:

- Turn the unit's power off, wait 5 – 10 seconds, then turn the power on again.
- If the unit still mis-operates, turn the unit's power off, remove it from the cradle, wait 5 – 10 seconds, replace it in the cradle and turn the power back on.

If the problem persists, consult your Kenwood dealer.

FCC Warning

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in this

instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications if it is not installed and used in accordance with these instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Cleaning the unit

If the unit becomes dirty, turn its power off and wipe it clean with a soft dry cloth.

Do not use hard cloths or paint thinner, alcohol, or other volatile solvents to clean the unit. These may cause damage or remove indicator characters.

⚠ Warning

Do not operate the unit in a way that might divert your attention from driving safely. As a driver, you alone are responsible for safely operating your vehicle in accordance with traffic safety laws at all times.

Installation in a vehicle with the KPA-H2C kit (available separately)

Note: Do not put Here₂Anywhere in the docking station until you have completed the installation.

1. Determine where you want to mount Here₂Anywhere.

- Do not install Here₂Anywhere where it may obstruct your view through the windshield or your view of your vehicle's indicator displays.


- Do not install Here₂Anywhere where it will hinder your access to the vehicle's controls.

- Do not install Here₂Anywhere where it may hinder the function of safety devices such as an airbag. Doing so may prevent the air-bag from functioning properly in the event of an accident.


- Find a location that provides good visibility of and access to Here₂Anywhere's front panel.

- Kenwood strongly recommends that you mount Here₂Anywhere in a location where the base can be attached with the provided screws.

2. You can bend the leaves on the base to conform to curved mounting surfaces.

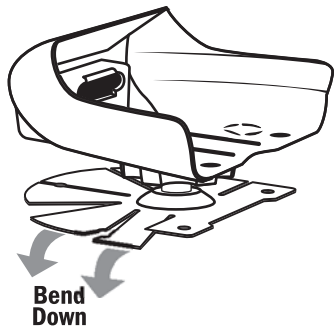

4. Plug the cigarette lighter adapter into the back of the cradle, as shown. Don't plug the adapter into the cigarette lighter until the installation is completed (see pg. 10, Step 10).

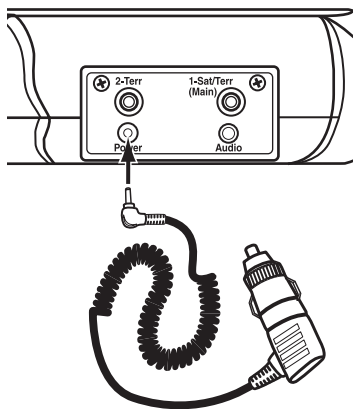

3. Peel the covering away from the adhesive on the bottom of the base and adhere it to the mounting surface. Use the provided screws to securely attach the base to the surface.




- If using screws, be sure that you do not damage wiring or other systems on the other side of the mounting surface.

Installation in a vehicle (continued)

5A. Plug the cassette adapter into the back of the cradle, as shown on the left.

5B. If your car stereo has an aux input, plug the supplied audio cable (instead of the cassette adapter) into the back of the cradle, as shown on the right. Plug the audio cable's white (L ch.) and red (R ch.) connectors into your car stereo.

6. Temporarily plug the antenna into the "1-Sat/Terr (Main)" connector on the back of the cradle until it is firmly seated, as shown.

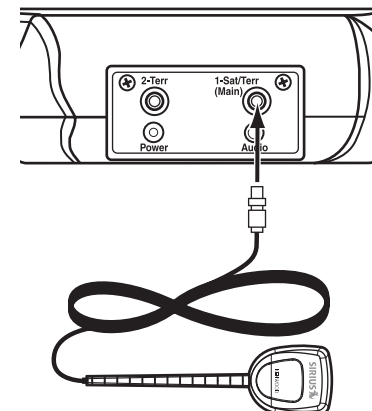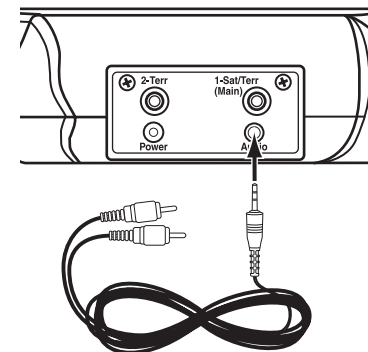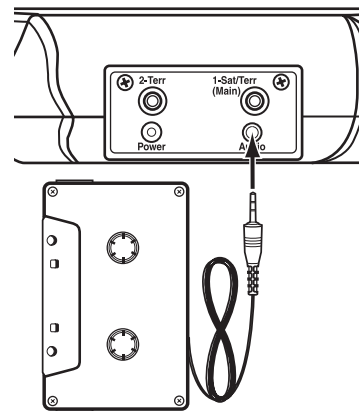


Installation in a vehicle (continued)

Note: If you're using the Kenwood CX-SR10 SIRIUS antenna, you'll need to remove the plastic housings from the antenna connectors before connecting it to the cradle—we recommend labeling the wires with their respective colors. (See pg. 9, figure 16 of the CX-SR10 Installation Manual for details). Once you've removed the housings, connect the wire that had the yellow connector to the connector on the cradle labeled "1-Sat/Terr (Main)", and connect the other one to the connector labeled "2-Terr".


Mounting the included antenna

1. Find an antenna location on a metal surface at least 12" x 12". The antenna should be mounted exactly 5.5" (the length of the antenna's tail) away from the vehicle's rear window, so that only the portion of the cable protected by the tail is exposed, as shown to the right. The antenna's 3 powerful magnets will secure it to the metal surface.
 - Do not shorten the antenna's tail. Doing so could damage the cable, since its insulation is integrated with the tail.
 - Best reception is achieved with the antenna mounted on the roof; mounting on the trunk lid will work for convertibles. If the vehicle has a roof rack or skid ribs, it may be necessary to mount the antenna off-center.

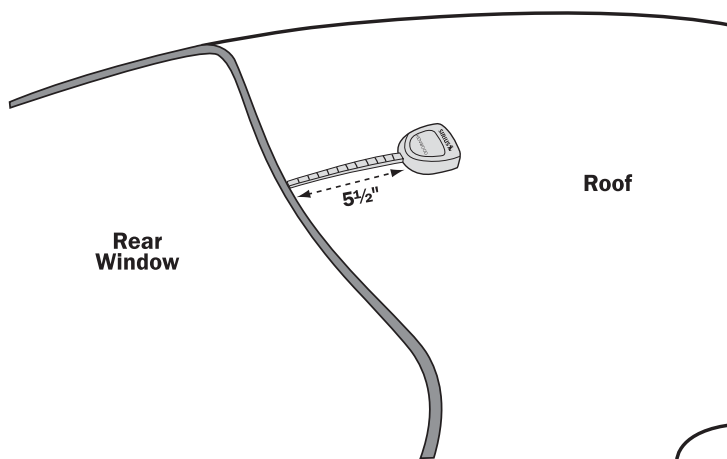

2. Before permanently mounting the antenna and routing the cable, confirm that the antenna is mounted in a good location:
 - a. Temporarily plug the cigarette lighter adapter into the cigarette lighter.
 - b. Slide Here₂Anywhere all the way into the cradle so that the connector at the rear of the unit makes proper contact in the cradle. Press the POWER button to turn Here₂Anywhere on.
 - c. If your Here₂Anywhere has been properly connected and the antenna is receiving the SIRIUS signal (preview stream #184) you will hear audio. If you do not hear audio, the display will read "Acquiring Signal". Re-orient the antenna until you hear audio. (See *Antenna Signal*, on page 33 to use the ANTENNA SIGNAL screen to aim the antenna.)
 - Make sure the vehicle is not in garage, or somewhere the satellite signal could be blocked
3. Turn Here₂Anywhere's power off and remove it from the cradle; unplug the cigarette lighter adapter from the cigarette lighter; unplug the antenna from the cradle.
4. Remove the yellow protective backing from the adhesive strip and firmly adhere it to the underside of the antenna tail. (Do not remove the red protective backing at this time.)
5. Once the strip is adhered to the tail, remove the red protective backing from the adhesive and firmly adhere the tail to the vehicle.

- At room temperature, maximum adhesion usually occurs within 72 hours. During this period, car washes and other contact with the antenna and tail should be avoided.
6. Route the exposed portion of the antenna cable from the end of the tail to the vehicle's interior by tucking it underneath the rubber molding around the vehicle's rear window, as shown below.

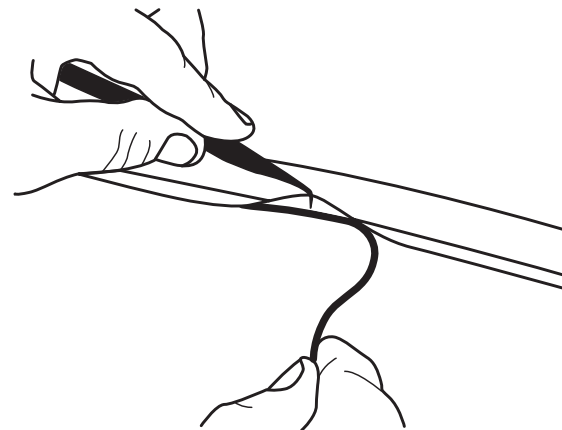


Mounting the antenna (continued)

- Route the cable from the lowest point of the rear window into the trunk. Take advantage of any existing cable channels or wiring conduits.
 - For SUVs, minivans & 5-door vehicles, bring the cable into the vehicle under the rubber molding for the tailgate, and continue under the interior trim.
- From the trunk, route the cable around the passenger compartment and to the back of the cradle.
 - Do not pull the cable across sharp edges that could damage it.
 - Keep the cable away from areas where it could become tangled in driver's and passenger's feet.
- Plug the antenna into the back of the cradle (see pg. 7, Step 6).
- Plug the cigarette lighter adapter into the cigarette lighter.
 - KENWOOD RECOMMENDS UNPLUGGING THE CIGARETTE LIGHTER ADAPTER AFTER YOU TURN THE VEHICLE'S IGNITION OFF. (In some vehicles, the cigarette lighter remains active after the ignition has been turned off, and leaving Here₂Anywhere's cigarette lighter adapter plugged-into the cigarette lighter could drain the vehicle's battery.)

Installation in a home with the KPA-H2H kit (available separately)

Note: Do not put Here₂Anywhere in the docking station until you have completed the installation.


- Plug the audio cable's mini connector into the back of the cradle, as shown.
- Plug the audio cable's white (L ch.) and red (R ch.) connectors into your audio system.

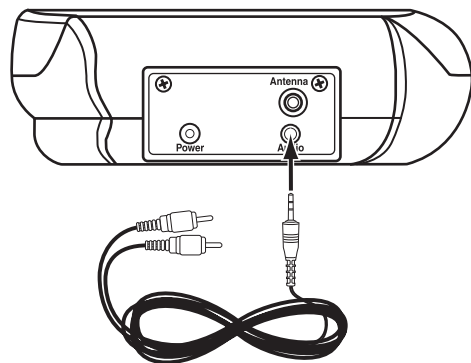

Here₂Anywhere Instruction Manual (ver. 2)

Installation in a home with the KPA-H2H kit (continued)

- Plug the AC cord into the power supply, then plug the power supply into the back of the cradle, as shown. Don't plug the AC cord into a wall outlet until the installation is completed.
- Plug the antenna into the back of the cradle until it is firmly seated, as shown.

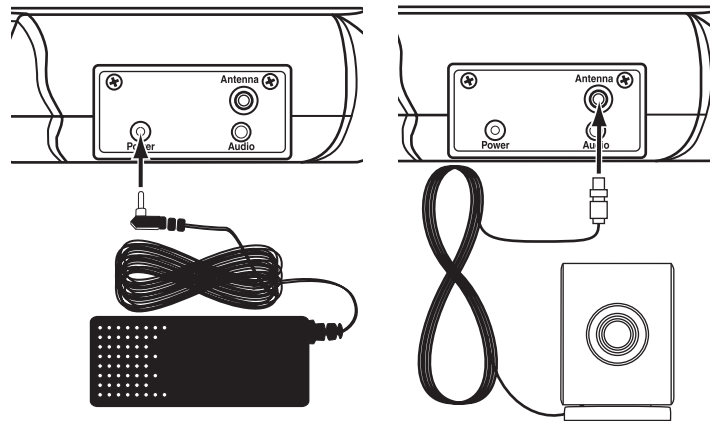


Here₂Anywhere Instruction Manual (ver. 2)

Finding a location for the antenna

- Due to the paths of the SIRIUS satellites over the US, the best location for the antenna will depend on what part of the country you live in, the orientation of your home, and the locations of any obstructions that could prevent the satellite signal from reaching the antenna.

The best antenna location is on the roof, facing straight up (see below).


- The location of the "X" on the map on page 13 must be visible to the antenna

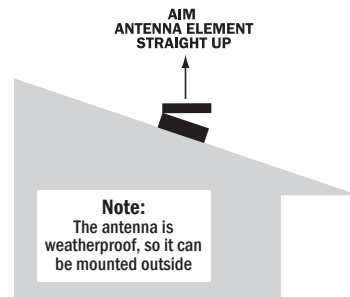

Finding a location for the antenna (continued)

The second best antenna location is on an outside wall

- Use an appropriate wall, depending on where you live (refer to the map on page 13). The location of the “X” on the map must be visible to the antenna
- Mount the antenna facing as close to straight up as possible (*below, left*)
- To minimize interference caused by roof extensions, mount the antenna as low on the wall as possible while avoiding other obstructions (*below, right*).

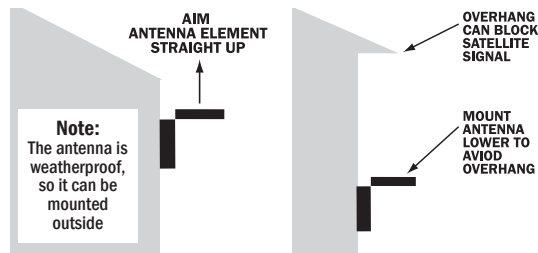

The third best antenna location is at a window

- Use an appropriate window, depending on where you live (refer to the map on page 13). The location of the “X” on the


map must be visible to the antenna

- Place the antenna midway between the left and right window frames
- Tilt the hinged part of the antenna back to aim it towards the sky (*right*)

Note: Objects such as the following can prevent the antenna from receiving the satellite signal when placed at a window or on an outside wall:

- roof extensions
- the window frame
- metallic window screens or tinting
- objects in the window
- nearby objects like trees, foliage or buildings

If the signal is blocked from getting to the antenna, the antenna must be relocated to a more appropriate window, an outside wall free of obstructions, or on the roof.

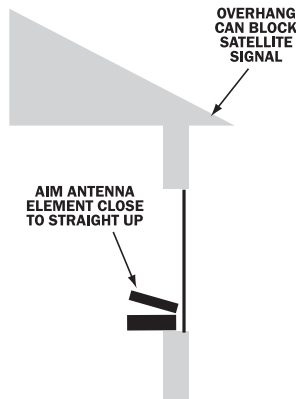


Finding a location for the antenna (continued)

Use this map as a general placement guideline—some experimentation may be needed to obtain the best reception in your particular situation. See pg. 33, *Antenna Signal*, for more information about using the ANTENNA SIGNAL screen to aim the antenna.

If you live in:

- Section 1 – Use a **NORTHEAST** or **EAST-FACING** wall or window
- Section 2 – Use a **NORTHEAST** or **NORTH-FACING** wall or window
- Section 3 – Use a **NORTHWEST** or **NORTH-FACING** wall or window
- Section 4 – Use a **NORTHWEST** or **WEST-FACING** wall or window
- Section 5 – Place the antenna **ONLY ON THE ROOF** or **ON AN OUTSIDE WALL**

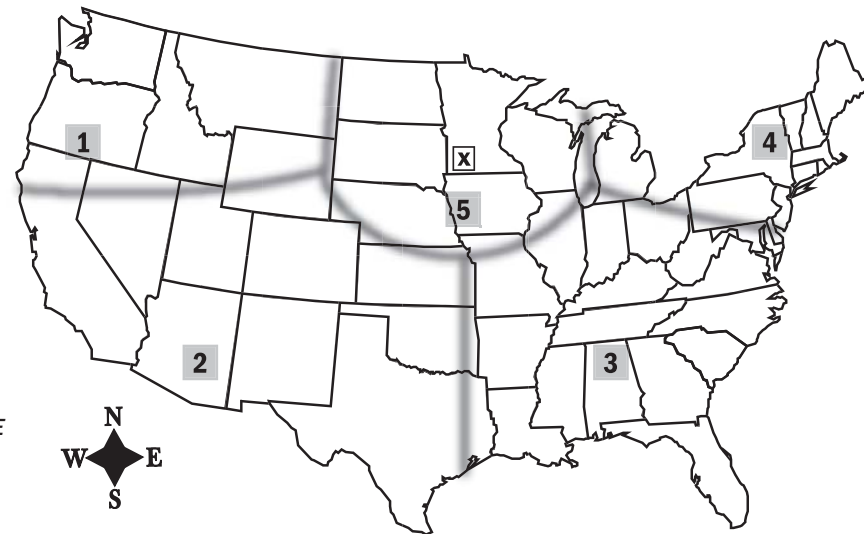

Front-panel controls and features

Up/Down/Left/Right Arrow Buttons: Navigates through display screens


Display: Shows information about streams, categories, artists, songs and setup information

Remote Control Receiver: Receives signals from the included wireless remote control

POWER Button: Turns Here₂Anywhere on and off; enters & exits the Setup Mode, and exits the Stream, Category, Song & Artist List modes

SELECT Button: Makes selections of items highlighted on the display

Preset Number Buttons: Sets and selects preset streams

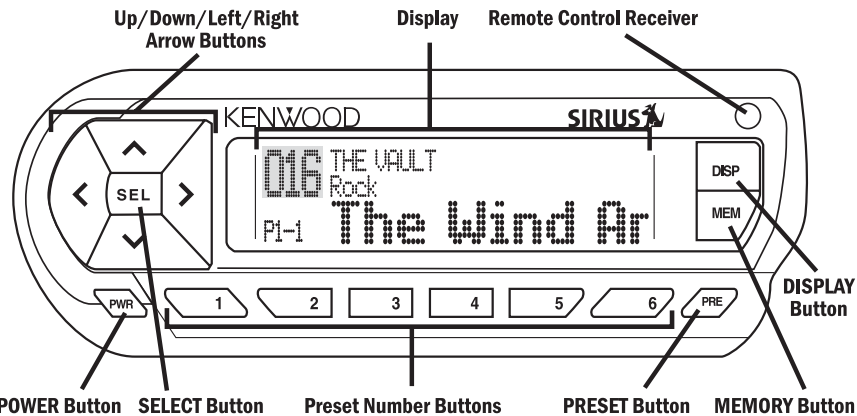


PRESET Button: Cycles-through the 4 banks of presets; enters & exits the Preset Tune Mode

MEMORY Button: Saves & recalls song & artist information; sets Parental Lock code number

DISPLAY Button: Switches the display between different modes

Remote control functions

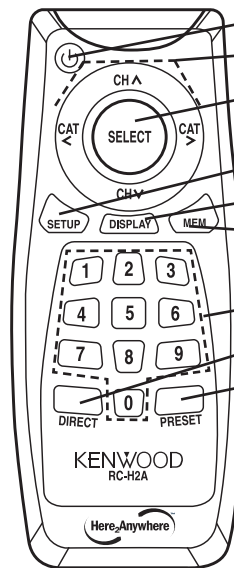

POWER Button: Turns Here₂Anywhere on and off; exits menu screens

Up/Down/Left/Right Arrow Buttons: Navigate through display screens

SELECT Button: Press to select items highlighted on the display; hold-down to jump to the previously-received Stream

SETUP Button: Enters and exits the Setup Mode

DISPLAY Button: Switches the display between different modes

MEMORY Button: Saves & recalls song & artist information; sets Parental Lock code number


Number Buttons: Selects streams directly and by preset

DIRECT Button: Accesses streams directly by number

PRESET Button: Accesses the 4 banks of presets; enters & exits the Preset Tune Mode

Installing Batteries in the Remote

1. Remove the battery cover as shown on the left
2. Install two AAA batteries as shown on the right
3. Replace the battery cover

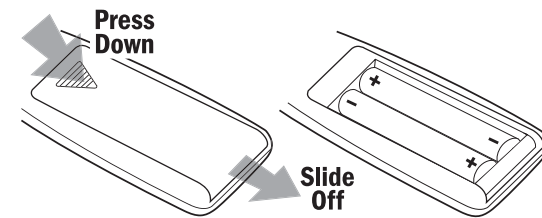

Activating your SIRIUS subscription

Before you can listen to Here₂Anywhere, you must subscribe to SIRIUS Satellite's service.

1. Make sure that Here₂Anywhere is properly connected and that its antenna is oriented to receive the SIRIUS satellite signal (see *Installation* sections for details).
2. Place Here₂Anywhere in the docking station by sliding the unit all the way into the cradle so that the connector at the rear of the unit makes proper contact in the cradle.
3. Press the power button to turn Here₂Anywhere on. After displaying the Kenwood and SIRIUS logos, the display will read "Acquiring Signal". Once the SIRIUS satellite signal is received, the display will change to "Call 1-888-539-SIRIUS to Subscribe".
4. If your Here₂Anywhere has been properly connected and the antenna is receiving the SIRIUS signal (preview stream #184) you will hear audio. If you do not hear audio, re-orient the antenna until you do. (See *Antenna Signal*, on page 33 to use the ANTENNA SIGNAL screen.)
 - Stream # 184 is the SIRIUS preview stream. You will not be able to tune to any other streams until you activate your SIRIUS subscription.

5. Hold the POWER button on the front panel for at least 1 second or press the SETUP button on the remote to enter the Setup Mode.

6. Your unit's unique 12-digit SIRIUS ID Number will be displayed (right). Write the number down and have your credit card handy.



7. Contact SIRIUS on the Internet at: www.siriusradio.com. Click on the "Activate Your Subscription" link.
- You can also call SIRIUS toll-free at 1-888-539-SIRIUS (7474). The operator will instruct you.
8. Once your subscription has been activated, the display will read "Subscription Updated: Press any key to continue", then will revert to the Normal Operation screen (see next page).

Removing Here₂Anywhere from the dock

To remove Here₂Anywhere from the docking station, press the button on the underside of the unit and gently slide Here₂Anywhere out of the cradle.

Basic operation

After you have activated your SIRIUS subscription, the Normal Operation screen will appear (top right):



Use the up & down arrow buttons to select streams

- The selected stream will automatically play

The name and artist of the currently-playing song will scroll across the display

If you want to listen to a different entertainment category, press the left & right arrow buttons to activate the Category Select screen (bottom right):

1. Use the left & right arrow buttons to select entertainment categories
2. When the category you want is highlighted, use the up & down arrow buttons to highlight the stream you want to hear
3. When the stream you want is highlighted, press the SELECT button to listen to the stream. The display will revert to the Normal Operation screen for that stream.

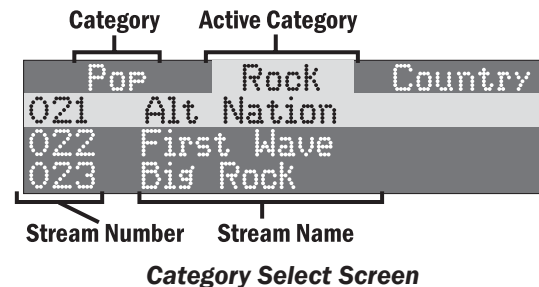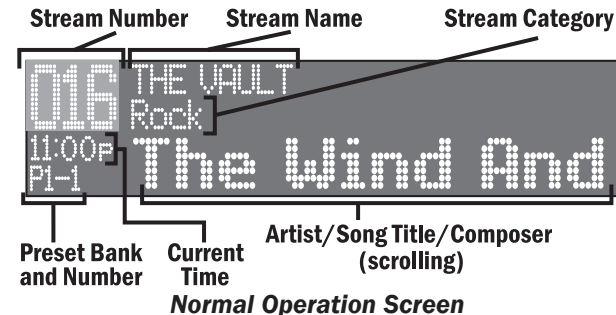

4. If you decide not to select another stream, press the POWER button on the front panel to exit the mode. The display will revert to the Normal Operation screen for the active stream.

- You can switch to the previously-selected stream by holding the SELECT button for at least 1 second. Holding the SELECT button for 1 second again switches back to the original stream.
- If no streams are available in a category, or if all of the streams are set to be skipped or locked, the display will read "No Channels Available" when that category is highlighted. (See *Channel Skip/Lock* on pg 29.)

Selecting music

In addition to the Normal Operation and Category Select screens, Here₂Anywhere has three ways to search for and select music: by stream, by artist, and by song.

Selecting music by stream (Stream List Mode)

- Press the Select button while in the Normal Operation mode. The Stream List screen will appear, showing all available streams regardless of category (*right*):
- Use the up & down arrow buttons to move through the streams.
- When the stream you want is highlighted, press the SELECT button to play the stream. The display will automatically return to the Normal Operation screen.

Stream Number	Stream Name
120	ESPN Radio Network
121	ESPNews
122	Sports Byline USA
123	Speed Channel Radio

Stream List Screen

Selecting music by artist (Artist List Mode)

- While the Normal Operation screen is active, press the SELECT button once, then the DISPLAY button once. The Artist List screen will appear, showing all currently-playing artists regardless of category (*top, right*):
 - If composer information is available for a stream, it will be displayed along with the artist information
- Use the up & down arrow buttons to move through the list of artists
- When the artist you want to hear is highlighted, press the SELECT button to listen to them
 - After you make your selection, the display will revert to the Normal Operation screen

Stream Number	Artist Name
020	Ernie Bledsoe
021	Jugalbandi
022	The Cheaters
023	Scott Miller

Artist List Screen

Selecting music by song (Song List Mode)

- While the Normal Operation screen is active, press the SELECT button once, then the DISPLAY button twice. The Song List screen will appear, showing all currently-playing songs regardless of category (*bottom, right*):
 - Song titles too long to fit on the highlight bar will scroll
- Use the up & down arrow buttons to move through the list of songs
- When the song you want to hear is highlighted, press the SELECT button to listen to it

Stream Number	Song Title
020	Quittin' Time
021	Uncle Sun
022	Breaking Glass
023	Sally's Eyes

Song List Screen

- After you make your selection, the display will revert to the Normal Operation screen

Note: In the Stream List, Artist List and Song List modes, if you don't want to make a selection, press the POWER button on the front panel to exit the mode and return to the Normal Operation screen for the active stream.

Setting/using stream presets

Setting stream presets

You can store up to 24 of your favorite streams as presets, for quick access. Presets are stored in 4 banks, each containing 6 stream presets.

1. Press the PRE (Preset) button to activate the preset bank you want. The selected bank is shown in the lower left corner of the Normal Operation Screen (*right*).
2. Select the stream you want to preset (see *Basic Operation* and *Selecting Music*, pg. 17–18)
3. Hold the number button you want to store the stream in for at least 2 seconds
 - The selected preset number will flash and then remain lit on the display to show that it has been memorized.
 - If the preset button already has a stream stored in it, it will be replaced with the new stream

Tuning stream presets

The 6 presets in the active bank can be selected by pressing the “1” – “6” buttons

1. Press the PRE button to cycle through the four banks of preset stations. The display will show the current preset bank and active preset number in the lower left corner.



Normal Operation Screen, showing Preset Bank and Preset Number Readout

2. When the desired preset bank is displayed, use the “1” – “6” buttons to tune the desired preset stream

Searching for a stream preset (Preset List Screen)

There are two ways you can search for a stream preset.


For both, hold the PRE button for at least 1 second to enter the Preset Tune mode. The Normal Operation Screen will change so that the preset bank and preset number will be highlighted (*top, right*).

Option 1: Use the up & down arrow buttons to move through the presets. Each time you change a preset its number will appear on the display and the stream will play.


Option 2: Press the SELECT button. The Preset List Screen will appear on the display, listing all of the stream presets that have been programmed (*bottom, right*)

- Use the cursor up & down buttons to scroll through the list. Press the SELECT button when the desired stream is highlighted on the display to select it.

In either mode, when you're finished searching for a preset, press the POWER button to exit and return to the Normal Operation Screen.

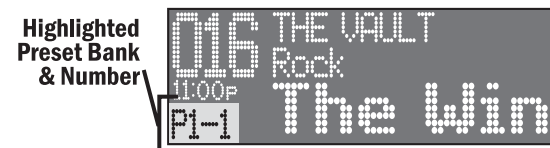

Preset Tune Screen

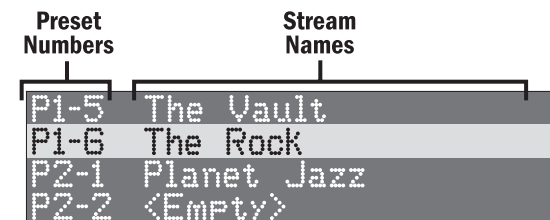

Preset List Screen

Saving/recalling music information

Saving music information

You can store the name of the currently-playing song and artist (and composer, if the data is available) into memory for recall later.



Press the MEM button to save the data. The screen will display the following message (above):

- If the song has already been stored in memory, the display will read “Already Stored”.
- You can save data for up to 24 songs. Once all 24 places have been filled, any new artist/song data you save will replace the oldest data.



Song Memory List Screen


Recalling music information

1. Hold the MEM button for more than 1 second. The Song Memory List screen will appear (above):
2. Use the up & down arrow buttons to scroll through the list

Activating Song Seek

You can have Here₂Anywhere automatically prompt you when any of the songs saved on the Song Memory List is playing on any stream.

1. Activate the Song Memory List screen (see above).
2. Use the up & down arrow buttons to scroll through

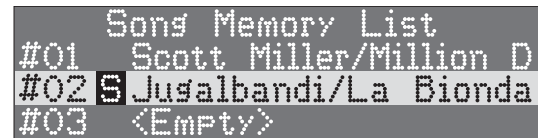


Song Seek Icon

the list of saved songs until the one you want is highlighted.

3. Press and release the SELECT button. An “S” will appear next to the song’s name (see bottom of previous page).
4. When one (or more) of the selected songs is playing on any stream, the following will happen:
 - a. A ‘beep’ will sound, alerting you that a selected song is playing. (To disable the ‘beep’, see page 32.)
 - b. An alert screen will be superimposed over the data on the original screen (*right*).
 - The number on the screen will count down from ‘10’ to ‘0’.
 - c. To hear the song, press the SELECT button before the counter reaches zero and Here₂Anywhere will switch to the stream that is playing the song.
 - d. To make the alert screen disappear without listening to the song, press the POWER button on the front panel.
 - If you do nothing, the alert screen will disappear when the counter reaches zero.



Song Seek Alert Screen

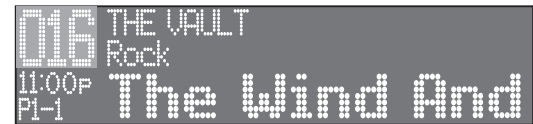

Normal Operation Screen



Large Font Screen

Display options

Changing display modes

The Normal Operation Screen has two display modes, Normal and Large Font (*right*).

Press the DISPLAY button to cycle the display between the two modes.

Adjusting the display brightness

Hold the DISPLAY button down for over 1 second to enter the Display Brightness mode (*right*):

1. Use the up & down arrow buttons to select the desired brightness level (high/medium/low)
2. Press the SELECT button to save your selection
 - Press the DISPLAY button to exit this mode



Display Brightness Screen

Setup Mode

The Setup Mode lets you access and set up the following features: SID (SIRIUS ID Number), Auto Clock Setup, Alarm Clock Setup, Channel Skip/Lock, Lock Code Setup, Auto Shutoff Setup, Startup Mode, Output Level, Text Flow Type, Audible Alert, and Antenna Signal.

To enter the Setup Mode, hold the POWER button on the front panel for at least 1 second. Use the left & right arrow buttons to move to the setup feature you want, and press the SELECT button to select the feature. To exit the Setup Mode and return to the previous operation mode, press the POWER button at any time while the Setup Mode is active.

SID

When you first enter the Setup Mode, the unit's unique 12-digit SIRIUS ID Number will be displayed (*right*):



SIRIUS ID Screen

Clock Setup

Here₂Anywhere has an automatic clock that receives its time signal as part of the SIRIUS satellite stream.


To set the clock, you need to tell Here₂Anywhere what time zone you live in and if your local area observes Daylight Savings Time.

1. While in the Setup Mode, press the left or right arrow buttons until the Auto Clock Setup screen appears (*top, right*).
2. Press the up or down button once and the Time Zone Setup screen appears (*middle, right*).
3. Press the up or down arrow buttons until your time zone is highlighted, then press the SELECT button.
 - The screen will change to the Daylight Savings screen (*bottom, right*).
3. If your local area observes Daylight Savings Time, press the SELECT button so an "X" appears in the box on the display's fourth line; if your local area does not observe Daylight Savings Time, press the SELECT button so that the box is empty.

Note: If you drive into another time zone (or into an area with a different Daylight Savings Time status than your local area) you will have to re-set the clock.



Auto Clock Setup Screen

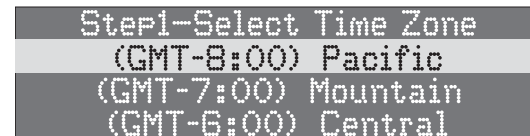

Time Zone Setup Screen



Daylight Savings Screen

Timer Functions

Here₂Anywhere has three Timer functions. The Alarm turns Here₂Anywhere on at a specified time and to a specified stream, Auto Shut-Off automatically turns it off at a specified time, and the Sleep Timer lets you listen to Here₂Anywhere for a specified period of time before it automatically shuts off.

Setting the Alarm

1. While in the Setup Mode, press the left or right arrow button until the Alarm Setup screen appears (*top right*).
2. Press either the up or down button. The Step 1 – Set Alarm Time screen appears (*middle, right*).
3. Use the up and down arrow buttons to set the hour you want Here₂Anywhere to turn on. (The alarm will automatically switch from AM to PM.)
4. When the display shows the correct hour, press the right arrow button to highlight the minutes. Use the up and down arrow buttons to set the minute you want Here₂Anywhere to turn on.
5. When the display shows the correct hour and minute, press the SELECT button to turn the alarm on.
6. Press the MEM button to save your settings. The Step 2–Set Channel screen will appear (*bottom, right*).

```
Alarm Clock Setup
Press ^ or v Keys to set
Alarm Off
```

Alarm Setup Screen

```
Step 1 - Set Alarm Time
Alarm 7:15 AM
Alarm Off On (SEL)
Press MEM to continue
```

Step 1–Set Alarm Time Screen

```
Step2 - Set Channel (SEL)
021 Alt Nation
022 First Wave
023 Big Rock
```

Step 2–Set Stream Screen

7. Use the up and down arrow buttons to move through the streams until the one you want is highlighted.
8. Press the SELECT button to save your setting. The Alarm Setup screen will reappear.

Press the POWER button on the front panel to exit the Setup Mode.

Using the alarm

At the specified time (see above) , Here₂Anywhere will automatically turn itself on to the selected stream.

- The stream number will flash positive and negative.

Note: To hear Here₂Anywhere, make sure that the audio system it is connected to is turned on.

To enter the “Snooze” mode, press any button *once*.

- The Snooze cycle is 10 minutes long.
- You can repeat the Snooze cycle as many times as you want.

To shut the alarm off, press any button *twice*. (This shuts Here₂Anywhere completely off.)

To listen to Here₂Anywhere after you’ve shut the alarm off, press the POWER button.

Important: If you remove Here₂Anywhere from the dock and replace it in the same (or another) dock, you must power it up at least once for it to re-acquire the clock stream data before the alarm function will work. (You don’t have to re-set the alarm.) Once you have powered Here₂Anywhere up once you can turn it off and the alarm will function properly. As long as Here₂Anywhere remains in the cradle after being powered-up it will retain the clock stream and the alarm will function properly.

Auto Shutoff

You can set Here₂Anywhere to automatically shut off if it is accidentally left on (if a button isn’t pressed for

15, 30 or 60 minutes). This is especially useful if your vehicle's cigarette lighter remains powered after the ignition has been turned off.

1. While in the Setup Mode, press the left or right arrow button until the Auto Shutoff Setup screen appears (*below*).
2. Press the up or down arrow buttons until the display shows amount of time you want Here₂Anywhere to stay on after the last time a button is pressed before it automatically shuts off.
 - When Auto Shutoff is activated, a 'beep' will sound and the screen will display a countdown warning 10 seconds before Here₂Anywhere shuts itself off. Pressing any button during this countdown will cancel the Auto Shutoff process and restore normal operation.
3. Press the POWER button to exit.

Sleep Timer

You can program Here₂Anywhere to play for 30 or 60 minutes and then automatically turn itself off.

Note: You must re-set the Sleep Timer each time you want to use it.

1. While listening to SIRIUS, press the SELECT button to enter the Stream List mode (see page 18).
2. Hold the left arrow button for at least 1 second. The Timer Setup screen will appear (*right*).
3. Press the left or right arrow button to highlight the



Auto Shutoff Setup Screen



Timer Setup Screen

amount of time you want Here₂Anywhere to play before it shuts off.

4. Press the SELECT button to confirm your selection and activate the Sleep Timer.

When the Sleep Timer is active, the display will return to the Normal Operation screen.

- The display will appear as normal except that every three seconds the timer countdown will replace the stream number. You can still change streams and display modes as normal without shutting the timer off.

To cancel the Sleep Timer, turn Here₂Anywhere's power off, then turn it back on again.

Channel Skip/Lock

This allows you to select streams that you want to skip when scanning up and down the Channel List and Category List screens, or simply when you're pressing the cursor up & down buttons.

1. While in the Setup Mode, press the left or right arrow button until the Channel Skip screen appears (*right*).
2. Use the up & down arrow buttons to highlight the stream you want. (The highlighted stream will automatically play.)
3. Press the SELECT button to change the highlighted stream's status from "available" (+) to "skip" (-).



Channel Skip Screen

- To exit the Channel Skip function, press the left or right arrow button. The screen will display the next Setup Menu item.

You can further lock a stream by placing it in the Channel Lock mode. Locked streams will be unavailable during all tuning modes, and cannot be directly accessed via the remote control.

To lock a stream, in Step 3 above, instead of momentarily pressing the SELECT button, hold the button for more than 1 second. A “-” and a padlock will be displayed next to the stream number.

Lock Code Setup

If you have locked any streams in the Channel Lock mode, you will need to enter a 4-digit lock code to unlock them. The factory default lock code is “1 1 1 1”.

You can change the Lock Code to your own preference:

1. While in the Setup Mode, press the left or right arrow button until the Lock Code Setup screen appears (*top right*):
2. Press the up or down arrow button. The Lock Code screen appears (*middle, right*):
3. Using the preset 1 – 6 buttons, enter the factory default code “1 1 1 1”. The screen’s second line will change from “_ _ _ _” to “* * * *”.
 - If you enter an incorrect number, use the left arrow button to delete the incorrect number; then re-enter the correct one.
4. Press the Memory button. The Enter New Lock Code screen appears (*bottom, right*).
 - If you entered the code incorrectly, “Code Error” will be displayed, and the Enter New Lock Code screen



Lock Code Setup Screen



Lock Code Screen



Enter New Lock Code Screen

reappears. Repeat Steps 3 – 4.

5. Using the preset 1 – 6 buttons, enter your new 4-digit code. The screen’s second line will change from “_ _ _ _” to “* * * *”.
6. Press the MEMORY button. The Confirm Number screen appears (*right*).
7. Re-enter your new 4-digit code. The screen’s second line will change from “_ _ _ _” to “* * * *”.
8. Press the MEMORY button. The display will change to “New Code Confirmed”
 - If you entered the code incorrectly, “Code Error” will be displayed, and the Enter New Lock Code screen reappears. Repeat Steps 5 – 8.



Confirm Number Screen

Startup Mode

You can select which screen is displayed when you turn Here₂Anywhere’s power on.

1. While in the Setup Mode, press the left or right arrow button until the Startup Mode screen appears (*right*):
2. Use the up & down arrow buttons to highlight the screen you want for Startup: Normal Operation, Channel List (Stream List) or Category List (see pages 17 – 18):
3. Press the SELECT button.



Startup Mode Screen

Text Flow Type

You can set how the scrolling text flows across Here₂Anywhere's screen.

1. While in the Setup Mode, press the left or right arrow button until the Text Flow Type screen appears (*right*):
2. Use the up & down arrow buttons to select the type of text flow.
 - In the DISCRETE mode the text moves across the screen in steps
 - In the CONTINUOUS mode the text moves across the screen smoothly.



Text Flow Type Screen

Output Level

You can adjust Here₂Anywhere's output level so it matches other sources in your audio system.

1. While in the Setup Mode, press the left or right arrow button until the Output Level screen appears (*right*):
2. Use the up & down arrow buttons to select the desired output level.
 - "High" is 0dB, "Medium" is -3dB and "Low" is -6dB.



Output Level Screen

Note: To avoid distortion with some cassette car stereos, you may have to lower the output level when using the cassette adapter.

Audible Alert

You can turn Here₂Anywhere's Song Seek and Auto Shutoff alert beep on or off (see pages 23 & 28).

1. While in the Setup Mode, press the left or right arrow button until the Audible Alert screen appears (*right*):
2. Use the up & down arrow buttons to turn the audible alert 'beep' on or off.



Audible Alert Screen

Antenna Signal

This screen shows the quality of the SIRIUS satellite signal that's being received, to help you find the best location for the antenna.

1. While in the Setup Mode, press the left or right arrow button until the Antenna Signal screen appears (*right*):
 - After a few seconds the signal quality bars will indicate how well the antenna is receiving the SIRIUS satellite signal.
2. Find a location for the antenna that illuminates the maximum number of bars.
 - After moving the antenna, wait at least 2 seconds before moving it again, to enable the unit to process the signal.



Antenna Signal Screen

3. Due to the moving paths of the SIRIUS satellites, it is possible for the signal to change over time. In most cases, signal should be available continuously, however, it may be temporarily blocked in some antenna locations in home installations. Be sure to check the the Antenna Signal screen if there is a loss of signal or audio. Experimentation with antenna placement in the home or outside may be necessary to ensure continuous reception.
 - See pages 11-13 for information about properly locating the SIRIUS antenna in a home installation.

Troubleshooting guide

Problem	Possible Cause	Solution
No power on Here ₂ Anywhere (power indicator /display not illuminated)	Power supply/cigarette lighter adapter not properly connected	Make sure power supply/adapter is properly connected
	Blown fuse in cigarette lighter adapter	Check the fuse; if blown, replace with supplied spare fuse
No sound	Audio cable/cassette adapter not properly connected	Make sure cable/adapter is properly connected
Display reads "Acquiring Signal"	Signal is weak or can't be found	Check the <i>Antenna Signal</i> screen (see page 33); Change the antenna/vehicle location to maximize signal quality
	Metallic window screen is interfering with reception	Move antenna to window with a non-metallic screen
Display reads "Antenna Error"	The antenna is not connected	Verify antenna connections
	The antenna or cable is faulty	Replace antenna
Display reads "Call 1-888-539-SIRIUS to Subscribe"	SIRIUS subscription has not been activated	Call SIRIUS to activate your subscription
Display reads "Invalid Channel"	Stream entered is invalid	Select a different SIRIUS stream

Troubleshooting guide (continued)

Problem	Possible Cause	Solution
Here ₂ Anywhere operates erroneously	Microprocessor error	Turn the power off (press the POWER button), wait 5 – 10 seconds, then turn the power on again.
		Turn the unit's power off, remove it from the dock, wait 5 – 10 seconds, replace it in the dock and turn the power back on.
		If the problem persists, consult your Kenwood dealer.
Sound mutes intermittently	Metallic window screen is interfering with reception	Move antenna to window with a non-metallic screen

Specifications:

Audio output (100 ~ 250 ohms)950mV RMS
Fuse3A fast blow
Power supply requirements9 ~ 16V, negative ground
Dimensions5"(W) x 4 ⁵ / ₁₆ "(D) x 1 ³ / ₄ "(H)

KENWOOD

www.kenwoodusa.com

www.kenwoodusa.com/inquiry

1-800-KENWOOD

Main Office

P.O. Box 22745

Long Beach, CA 90801-5745

©2003 Kenwood USA Corporation.
All Rights Reserved.

0020-0404-H2A INST