


See Reassembly Notes

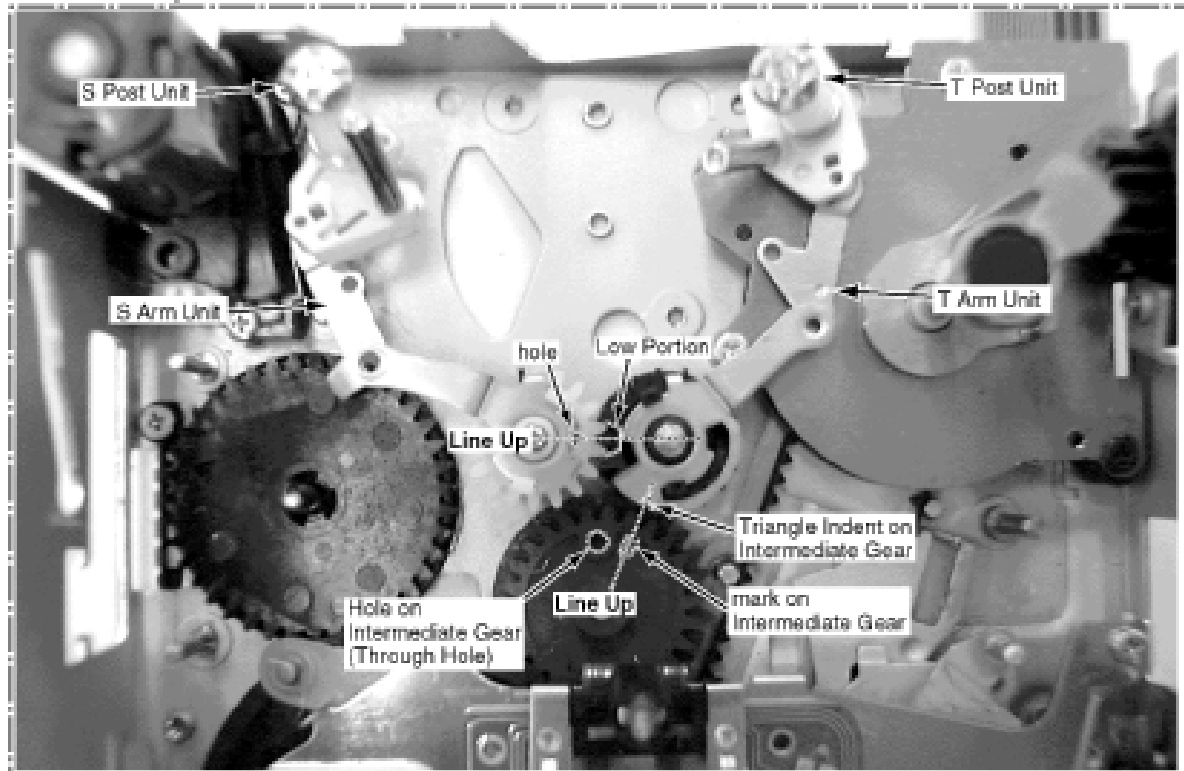

**Disassembly Notes:**

1. When removing the S & T Post Unit, pass the Projections from each slots on S & T Arm Unit.

**Reassembly Note:**

**1. Alignment/Installation of S & T Post Unit, S & T Arm Unit**

- 1) Install the S Arm Unit to the S Post Unit while passing the Projection.
- 2) Install the T Arm Unit to the T Post Unit while passing the Projection.
- 3) Confirm that the hole on Intermediate Gear is aligned with the hole on chassis (Through Hole).
- 4) Install both the T Post Unit and the T Arm Unit so that the Triangle Indent on T Arm Unit is aligned with the mark on Intermediate Gear.
- 5) Install both the S Post Unit and the S Arm Unit so that the hole on the S Arm Unit is aligned with Low Portion of T Arm Unit.