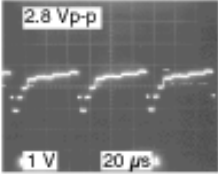
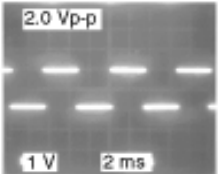
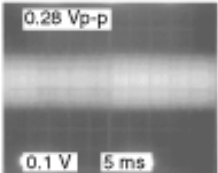
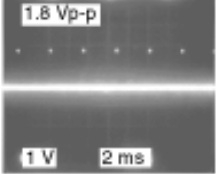


Signal Name (on board)	Description	Waveforms
F_VSS	Not used	-----
F_SDA	Not used	-----
F_SCLK	Not used	-----
F_MODE	Not used	-----
F_VEE	Not used	-----
VCC41	Not used	-----
VCC9	Not used	-----
F_VCC	Not used	-----
F_OE	Not used	-----
F_BUSY	Not used	-----
MON_CR	Not used	-----
MON_CB	Not used	-----
MON_B	Not used	-----
MON_G	To monitor lower video drive signal to the LCD Panel at Pin 27 of IC901 on Main C.B.A.	 <p>2.8 Vp-p 1 V 20 μs Camera Mode</p>
HID	To monitor HID signal at Pin 36 of IC3201 on Main C.B.A.	 <p>2.0 Vp-p 1 V 2 ms Rec/PB Mode</p>
ENVELOPE	To monitor Envelope signal at Pin 41 of IC5001 on Main C.B.A.	 <p>0.28 Vp-p 0.1 V 5 ms PB Mode</p>
RF GND	Not used	-----
RECI	Not used	-----
SPA	To monitor SPA signal at Pin 35 of IC3201 on Main C.B.A.	 <p>1.8 Vp-p 1 V 2 ms PB Mode</p>