

Mechanical Instructions

◀◀ Go to cover page

0. General

To be able to perform measurements and repairs on the "circuit boards", these unit should placed in the service position first.

1. Remove the rear cover

- Remove right and left lid on the back cover
- Open 4 lids with "-" type screwdriver.
- Remove 4 screws at the bottom cabinet with "+" type screwdriver, refer fig 2.
- Remove out back cover.

2. Video panel

- a. Cutoff all wire cable ties
- b. Remove GRD wire between video shield and CRT rack.
- c. Remove 1 screw between mains board rack and video shield
- d. cutoff 1 cable tie on LOT wire
- e. Remove GRD wire (1604) from video PCB to CRT rack.

3. Main panel

- Disconnect the degaussing coil (1113) from Main panel.
- Remove the video panel from CRT.
- Remove the "screw" of I/F cable from Main panel.
- Disconnect the CRT ground "M312" from Video panel.
- Disconnect the Hi-Pot cap from CRT.
- Disconnect yoke wire from "M401".
- Disconnect cancellation connector(1402).
- Slide the main panel out of bottom tray.
- Connect yoke wire to "M401".
- Connect cancellation connector(1402).
- Place Main panel in service position as shown in Fig.1.
- Mount Video panel again on CRT.
- To connect Hi-Pot cap again.
- To connect "M312" again.



lids



lid

Fig.2


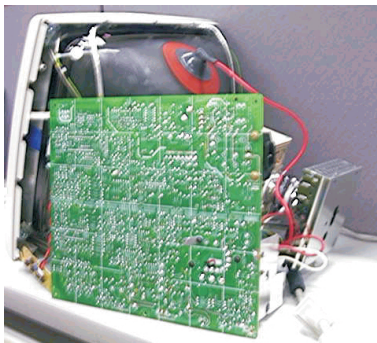


Fig.1

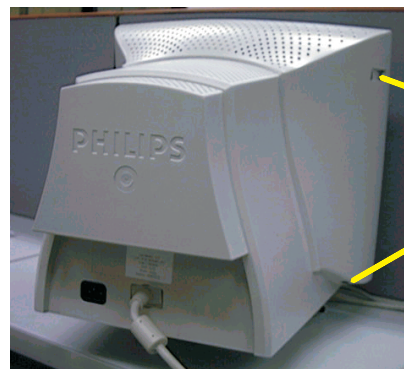

screws

Fig.3


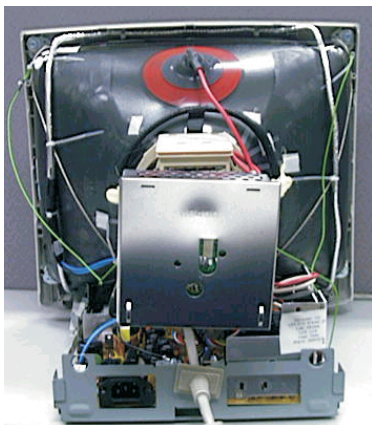


Fig.3

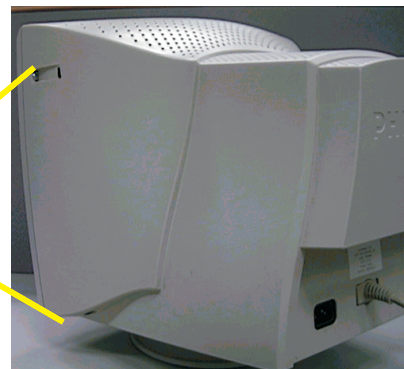

screws