

SR900 (A608)

PARTS CATALOG

INTRODUCTION


This chapter instructs you the numbers and names of parts on this machine.

INDEX to PARTS CATALOG

LOCATION OF UNIT.....	2
1.EXTERIOR (A608).....	4
2.TRANSPORT SECTION 1 (A608).....	6
3.TRANSPORT SECTION 2 (A608).....	8
4.STAPLER UNIT 1 (A608)	10
5.STAPLER UNIT 2 (A608)	12
6.STAPLER UNIT 3 (A608)	14
7.PAPER EXIT SECTION (A608).....	16
8.SHIFT TRAY SECTION (A608)	18
9.DRIVE AND ELECTRICAL SECTION 1 (A608)	20
10.DRIVE AND ELECTRICAL SECTION 2 (A608)	22
11.FRAME SECTION (A608)	24
12.MAIN CONTROL BOARD (A608).....	26
13.DECAL AND DOCUMENT (A608).....	30
PARTS INDEX.....	34


LOCATION OF UNIT

1. EXTERIOR (A608)

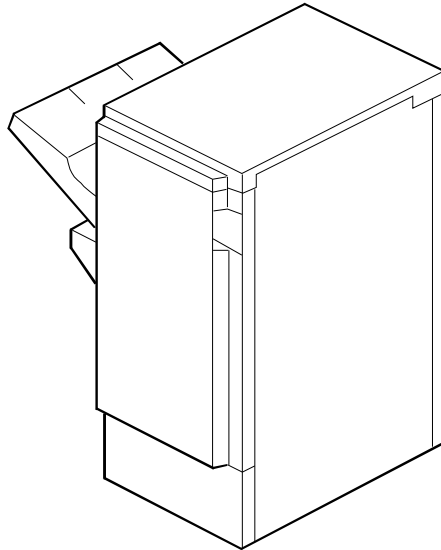


See Page 4

2. TRANSPORT SECTION 1 (A608)

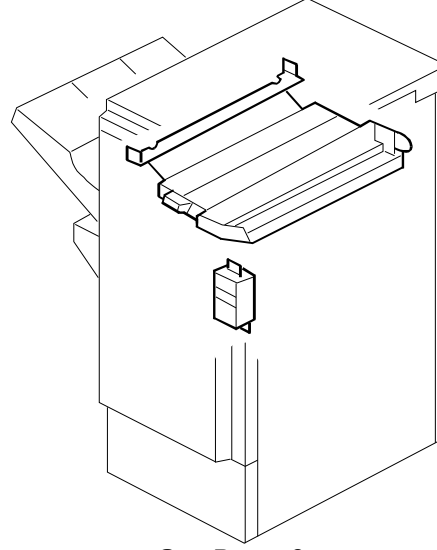


See Page 6

3. TRANSPORT SECTION 2 (A608)

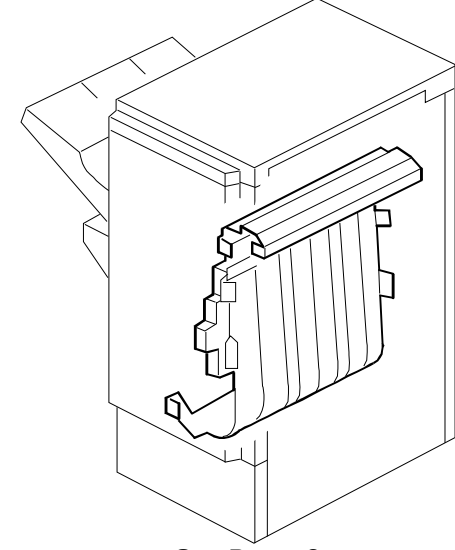


See Page 8

4. STAPLER UNIT 1 (A608)

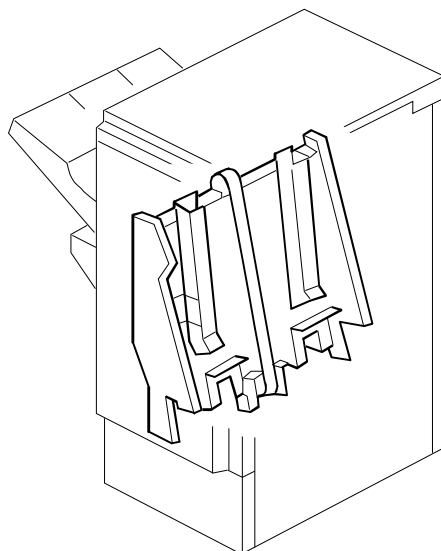


See Page 10

5. STAPLER UNIT 2 (A608)

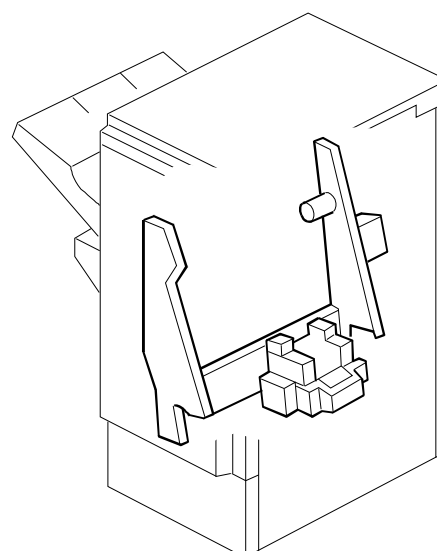

See Page 12


6. STAPLER UNIT 3 (A608)

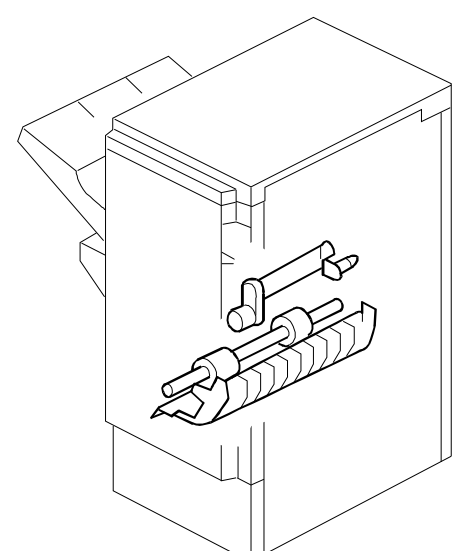

See Page 14


LOCATION OF UNIT

7. PAPER EXIT SECTION (A608)

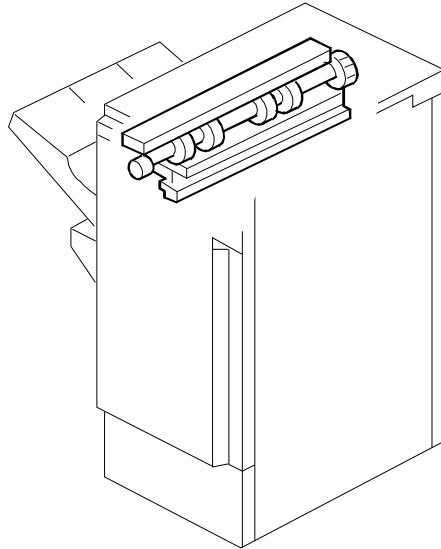


See Page 16

8. SHIFT TRAY SECTION (A608)

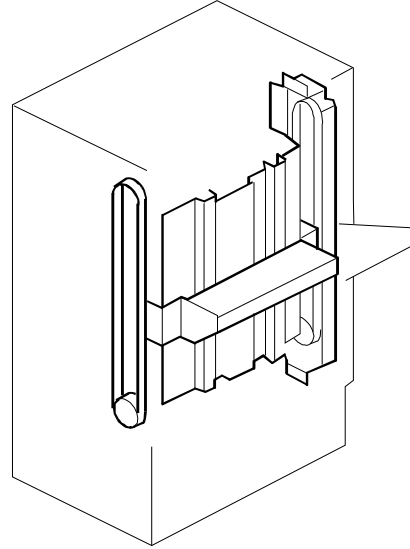


See Page 18

9. DRIVE AND ELECTRICAL SECTION 1 (A608)

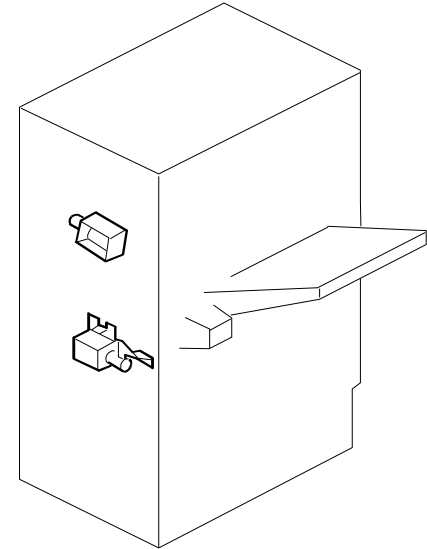


See Page 20

10. DRIVE AND ELECTRICAL SECTION 2 (A608)

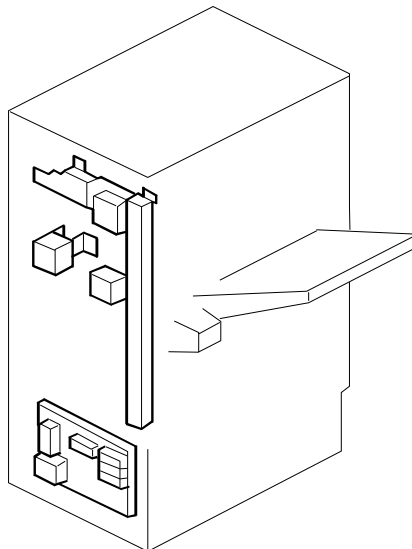


See Page 22

11. FRAME SECTION (A608)

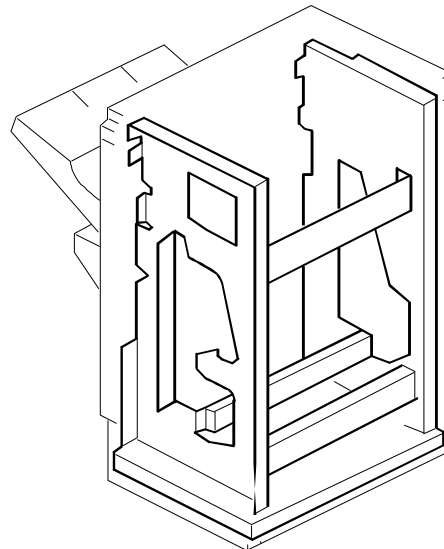

See Page 24

1. EXTERIOR (A608)

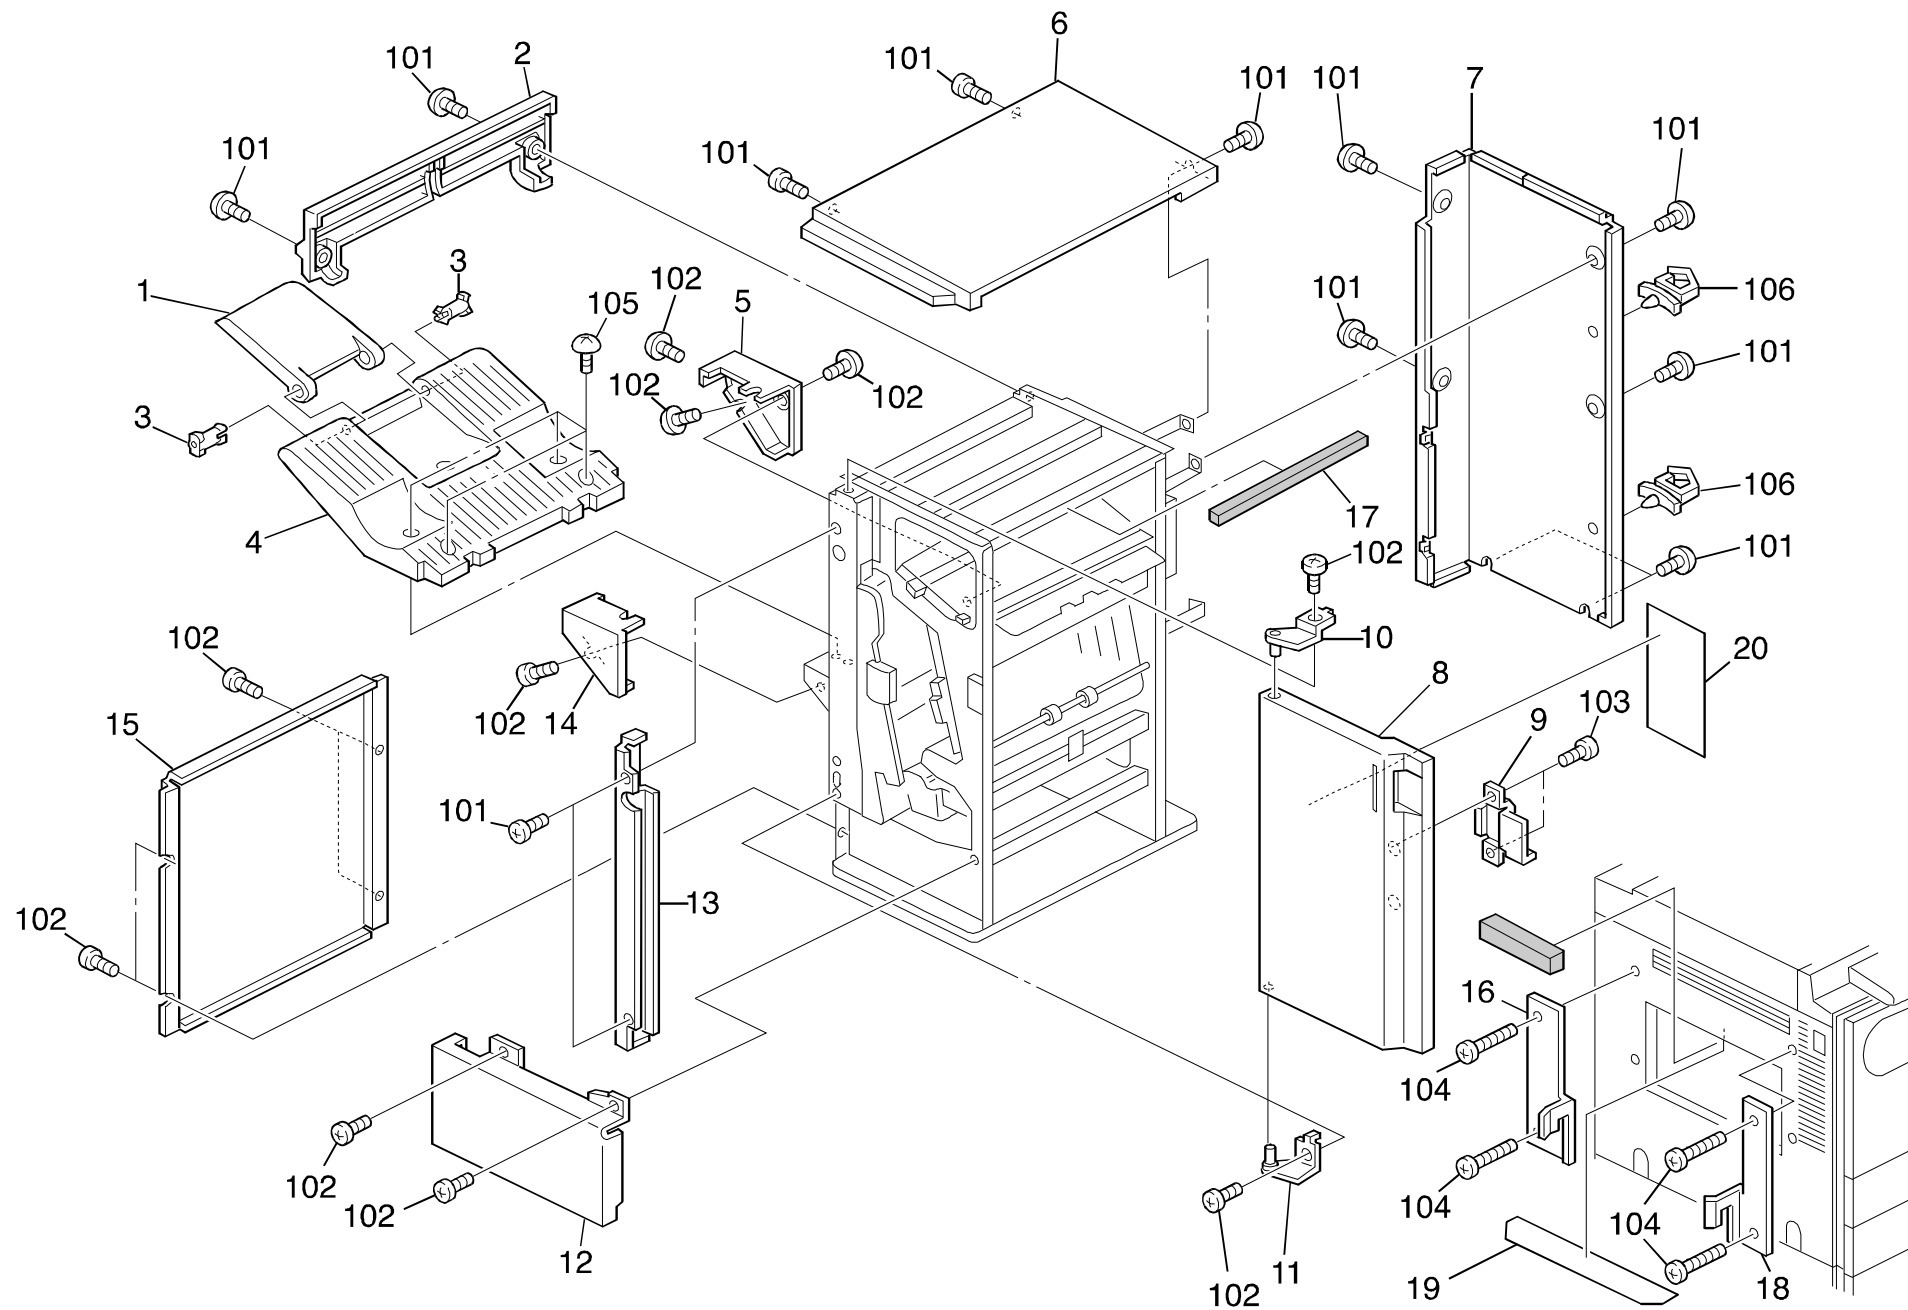


1. EXTERIOR (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A612 3459	Small Shift Tray	1
2	A612 6259	Cover - Left Upper	1
3	A379 3491	Shift Tray Shaft	2
4	A612 3419	Large Shift Tray	1
5	A612 3559	Rear Tray Cover	1
6	A612 6219	Upper Cover	1
7	A608 6319	Rear Cover	1
8	A612 6119	Cover- Front - Door	1
9	A353 4311	Safety Switch Actuator	1
10	A379 6121	Upper Hinge	1
11	A379 6131	Lower Hinge	1
12	A612 4140	Lower Cover	1
13	A612 6159	Upper Inner Cover	1
14	A612 3519	Front Tray Cover	1
15	A612 6419	Lower Left Cover	1
16	A377 1187	Rear Joint Bracket	1
17	5316 3062	Cushion - Cutter	1
18	A377 1186	Front Joint Bracket	1
19	A379 2329	Entrance Guide	1
20	A608 4711	Decal - Misfeed Removal	1



Index No.	Part No.	Description	Q ty Per Assembly
101	0344 0060F	Philips Truss Head Screw - M4x6	
102	0314 0060B	Philips Pan Head Screw - M4x6	
103	0414 0082B	Binding Self Tapping Screw - M4x8	
104	0314 0120B	Philips Pan Head Screw - M4x12	
105	0344 0080F	Philips Truss Head Screw - M4x8	
106	1105 0310	Wire Clamp	

2. TRANSPORT SECTION 1 (A608)

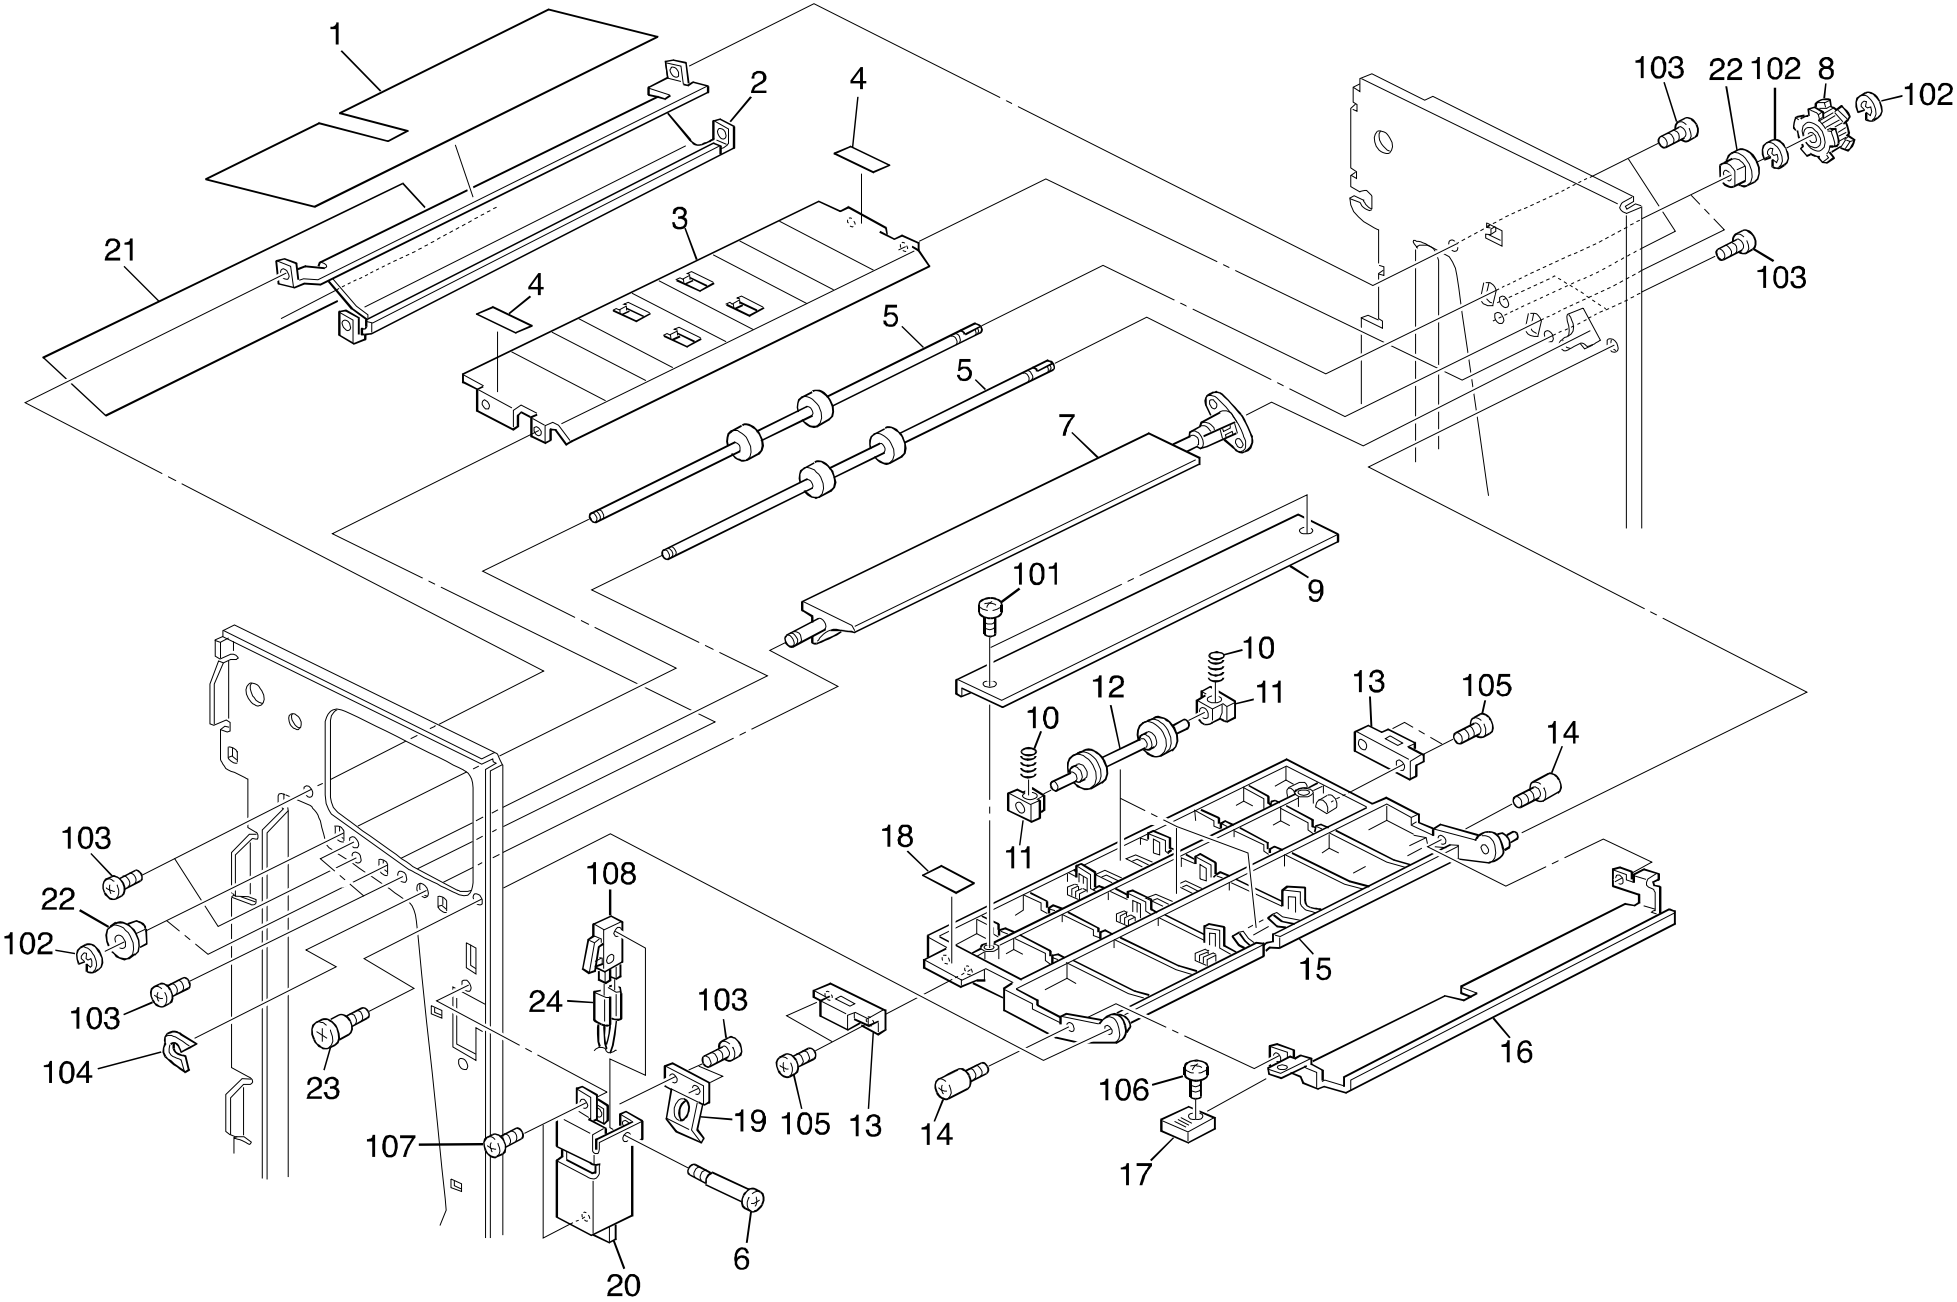


2. TRANSPORT SECTION 1 (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A379 2523	Exit Guide Mylar	1
2	A379 2521	Exit Guide Plate	1
3	A379 2311	Upper Guide Plate	1
4	A379 2318	Upper Magnet Sheet	2
5	AF02 0305	Transport Roller	2
6	A300 3155	Stepped Screw - M25x32	1
7	A379 2711	Junction Gate	1
8	AB03 0374	Timing Pulley - 20Z	2
9	A379 2323	Upper Support Plate	1
10	5920 2144	Spring - Lock	6
11	AA08 0034	Bushing - 4x5x7	6
12	AF02 2075	Driven Roller	3
13	AG07 0004	Magnetic Catch	2
14	5409 1855	Mounting Pin	2
15	A379 2322	Entrance Guide	1
16	A379 2326	Supporting Entrance Guide	1
17	A353 2243	Lever Knob	1
18	A353 2265	Decal - R1	1
19	A379 5915	Spring Plate	1
20	A300 3153	Safety Switch Bracket	1
21	A379 2525	Exit Guide Mylar - 2	1
22	5053 0447	Bushing - 6mm	4
23	AA14 3215	Screw - M5X6	1
24	A612 5703	Safety Switch Harness	1

Index No.	Part No.	Description	Q ty Per Assembly
101	0414 0082B	Binding Self Tapping Screw - M4x8	
102	0720 0040B	Retaining Ring - M4	
103	0314 0060B	Philips Pan Head Screw - M4x6	
104	0805 0088	Retaining Ring - M6	
105	0802 5210	Tapping Screw - M3x8	
106	0353 0060F	Philips Truss Head Screw - M3x6	
107	0353 0060B	Philips Pan Head Screw - M3x6	
108	1204 2188	Interlock Switch	

3. TRANSPORT SECTION 2 (A608)

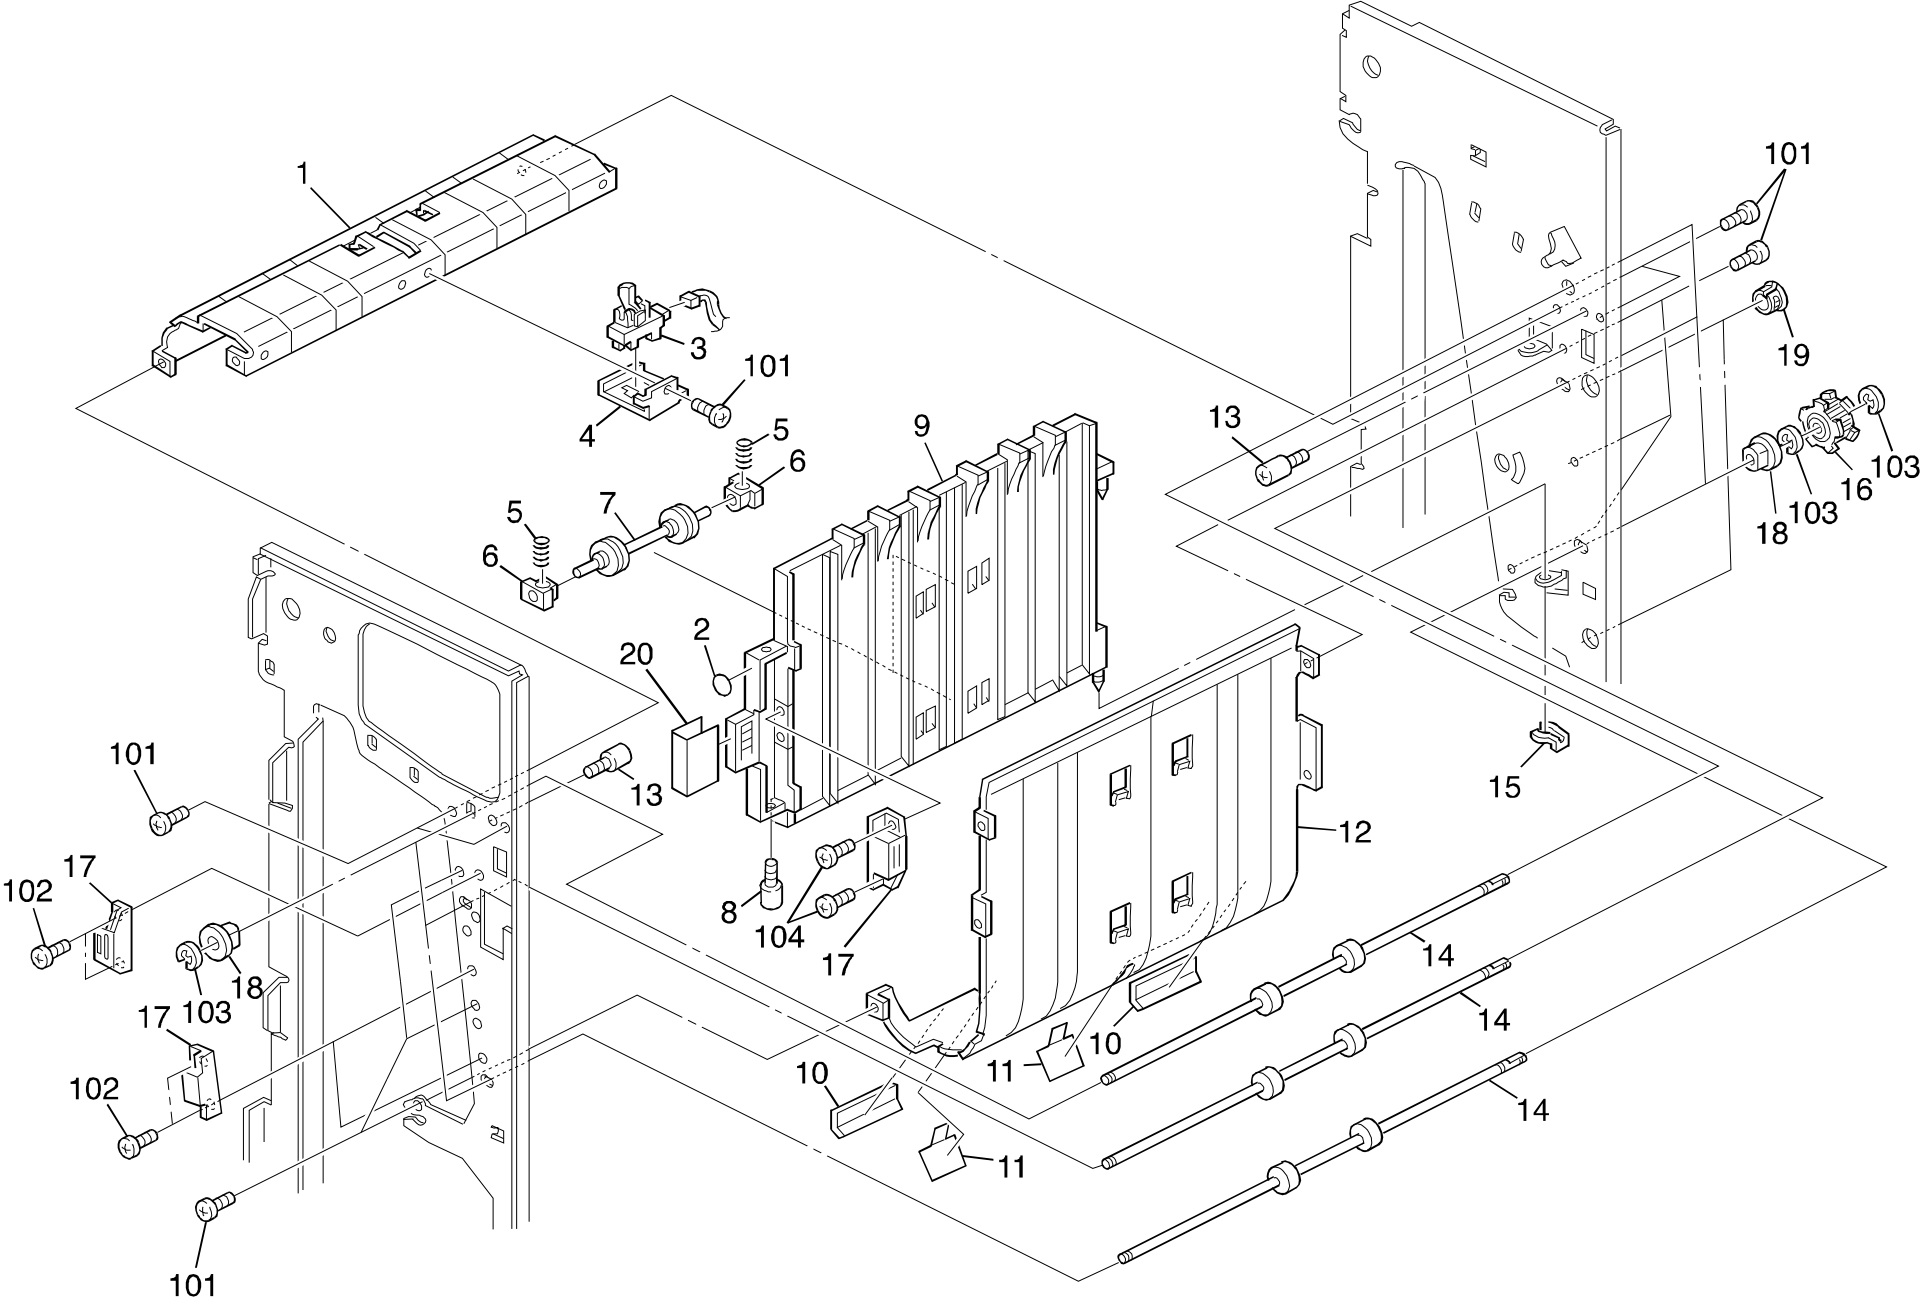


3. TRANSPORT SECTION 2 (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A379 2411	Lower Entrance Guide	1
2	A379 4752	Decal - R2	1
3	AW02 0049	Photointerruptor - OS - 580213-703	1
4	A379 2416	Entrance Sensor Bracket	1
5	5920 2144	Spring - Lock	4
6	AA08 0034	Bushing - 4x5x7	4
7	AF02 2075	Driven Roller	2
8	5409 1855	Mounting Pin	1
9	A612 2431	Transport Guide	1
10	A612 2425	Exit Lower Guide	2
11	A379 2426	2nd Exit Lower Guide	2
12	A379 2421	Vertical Transport Guide	1
13	AA14 3059	Pin - 6x16	2
14	AF02 0305	Transport Roller	3
15	5447 2681	Snap Ring	1
16	AB03 0374	Timing Pulley - 20Z	3
17	AG07 0004	Magnetic Catch	4
18	5053 0447	Bushing - 6mm	6
19	A353 1191	Bushing - 20x200	1
20	A612 4763	Decal - 30x48	1

Index No.	Part No.	Description	Q ty Per Assembly
101	0314 0060B	Philips Pan Head Screw - M4x6	
102	0353 0060B	Philips Pan Head Screw - M3x6	
103	0720 0040B	Retaining Ring - M4	
104	0452 3008W	Binding Self Tapping Screw - M3 X 8	

4. STAPLER UNIT 1 (A608)

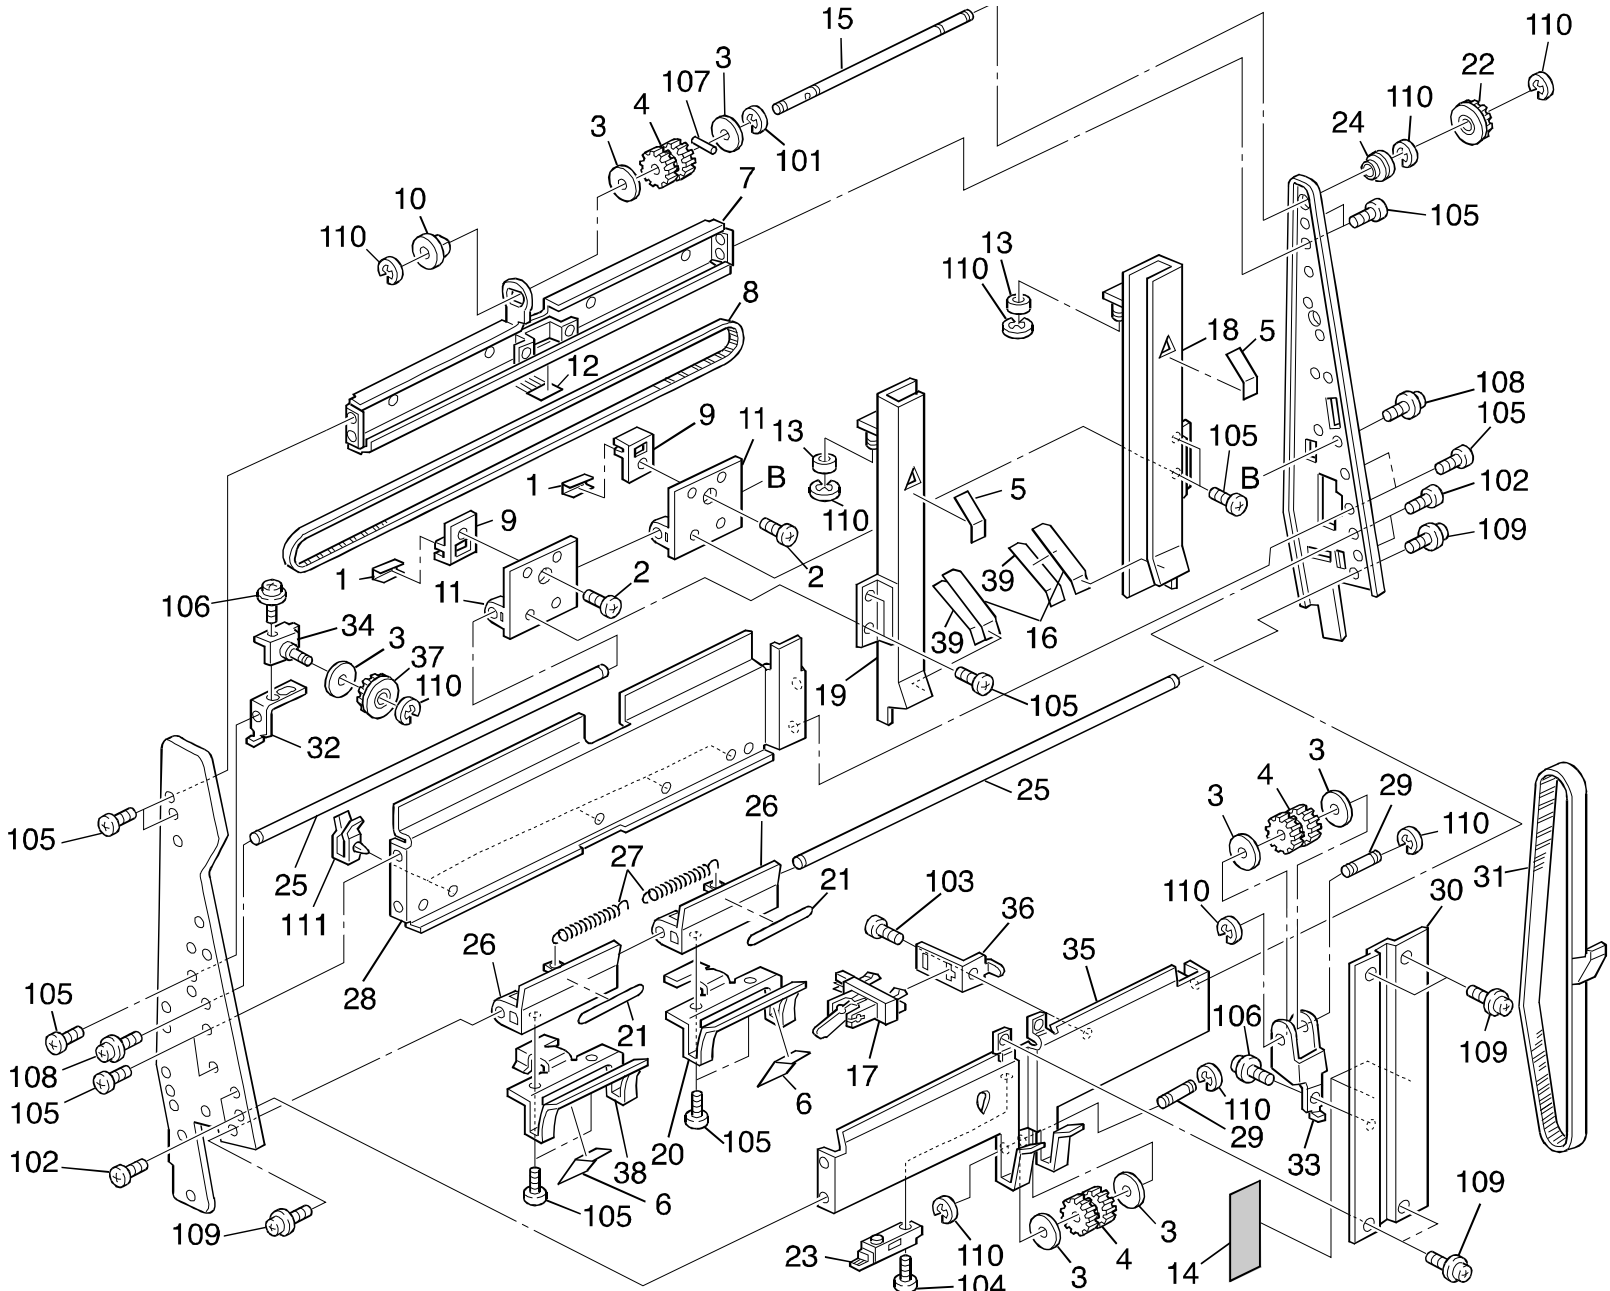


4. STAPLER UNIT 1 (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A300 3634	Spring Plate - Timing Belt	2
2	5875 2088	Shoulder Screw - M4	2
3	A300 3812	Spacer - 6x22x1.5	7
4	AB03 0229	Timing Pulley - 20Z	3
5	A379 4127	Middle Guide Seal	2
6	A379 4259	Positioning Fence Mylar	2
7	A300 3533	Upper Stay	1
8	AA04 3100	Timing Belt - 900 P2M4	1
9	A300 3635	Belt Clamp	2
10	5053 0447	Bushing - 6mm	1
11	A379 4131	Jogger Fence Slider	2
12	A028 7535	Antistatic Brush	1
13	5201 2722	Bushing - M6x5	2
14	A379 4335	Cushion - 2x35x165	1
15	A379 4401	Upper Exit Shaft	1
16	A300 3626	Lower Guide Seal	2
17	AW02 0012	Photointerruptor	1
18	A300 3621	Rear Jogger Fence	1
19	A300 3611	Front Jogger Fence	1
20	A379 4256	Rear Stapler Positioning Fence	1
21	A300 3757	Pad - 56x2.5x1	2
22	AB03 0030	Pulley - 17Z	1
23	AW01 0027	Photosensor - ON2530 CT	1
24	A422 1078	Bushing - 6x12x4mm	1
25	A300 3661	Slider Guide Rod	2
26	A379 4251	Slide Holder	2
27	A300 3759	Spring	2
28	A612 4140	Lower Cover	1
29	A300 3813	Shaft - 6x21.5	2
30	A379 4331	Paper Feed Guide Plate	1
31	A300 3816	Timing Belt - 900 S2M14	1
32	A300 3641	Fixing Plate	1
33	A300 3815	Spring Plate	1
34	A300 3646	Jogger Idler Bracket	1
35	A379 4261	Positioning Guide Plate	1

Index No.	Part No.	Description	Q ty Per Assembly
36	A300 3841	Position Sensor Bracket	1
37	AB03 0227	Pulley - 32Z	1
38	A379 4255	Front Stapler Positioning Fence	1
39	A300 3618	Antistatic Guide Seal	2
			
101	0720 0040B	Retaining Ring - M4	
102	0313 0060B	Philips Pan Head Screw - M3x6	
103	0313 0100B	Philips Pan Head Screw - M3x10	
104	0313 0140B	Philips Pan Head Screw - M3x14	
105	0314 0060W	Philips Pan Head Screw - M4x6	
106	0344 0060F	Philips Truss Head Screw - M4x6	
107	0623 0120E	Spring Pin - M3x12	
108	0951 4006B	Philips Screw With Washer - M4x6	
109	0951 4008B	Philips Screw With Washer - M4x8	
110	0720 0040E	Retaining Ring - M4	
111	1105 0200	Clamp	

5. STAPLER UNIT 2 (A608)

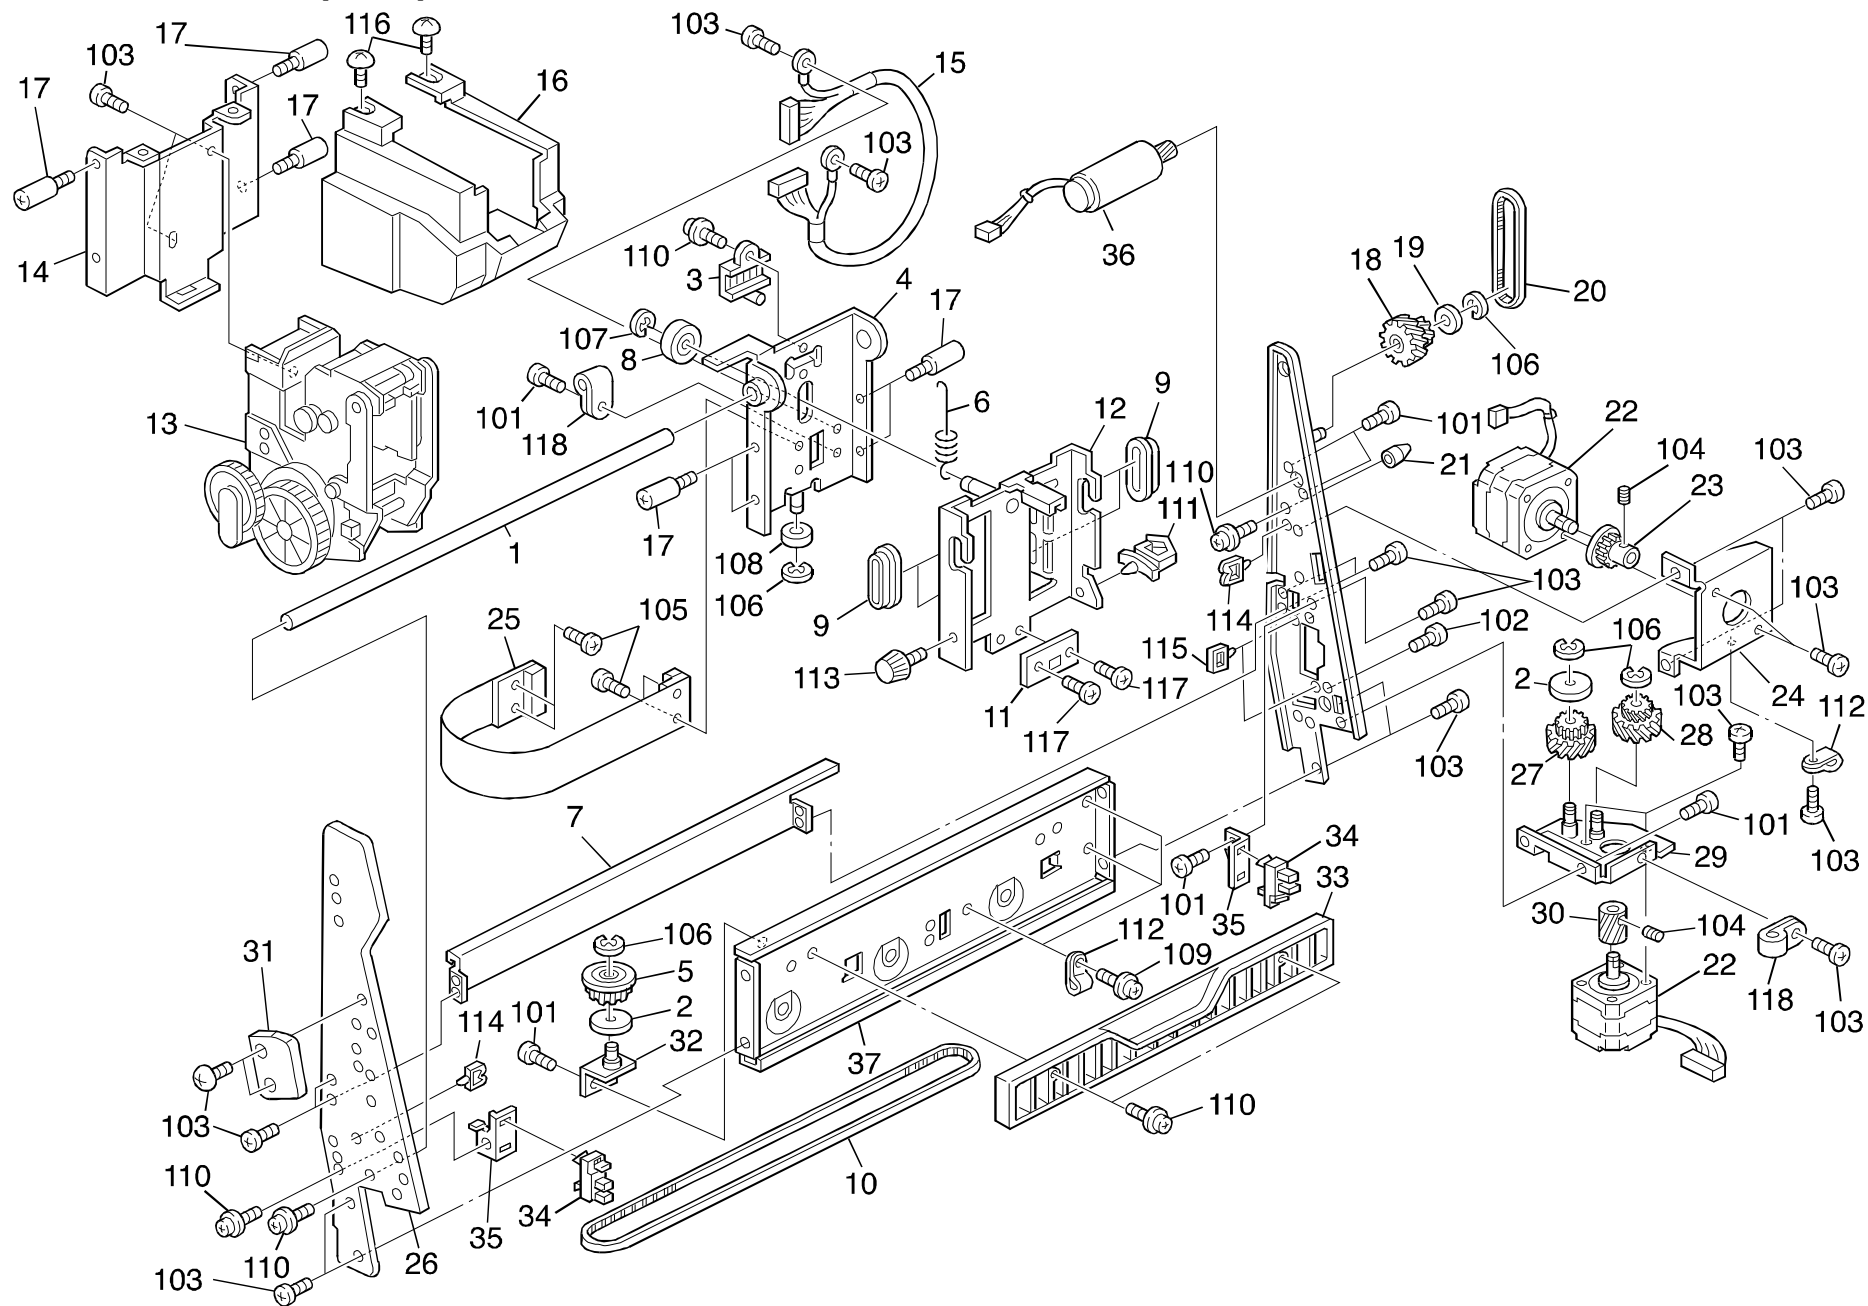


5. STAPLER UNIT 2 (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A300 3733	Stapler Guide Rod	1
2	A300 3812	Spacer - 6x22x1.5	2
3	A300 3717	Slide Belt Holder - Stapler	1
4	A608 4311	Stapler Slide Holder	1
5	AB03 0227	Pulley - 32Z	1
6	A300 3736	Lift Up Spring	1
7	A300 3537	Slide Rail - Center	1
8	A300 2132	Guide Roller	1
9	A300 3731	Slide Supporter	4
10	AA04 3100	Timing Belt - 900 P2M4	1
11	A608 4326	Guard - Slider	1
12	A608 4321	Stapler Holder	1
13	AJ01 1010	Stapler - EH-560	1
14	A608 4221	Stapler Stand	1
15	A608 5714	Stapler Harness - 2	1
16	A593 2916	Stapler Cover	1
17	5409 1855	Mounting Pin	7
18	AB01 0055	Gear - 46Z/13Z	1
19	A300 3822	Spacer - 11x15x1	1
20	AA04 3104	Timing Belt - 219 P3M4	1
21	A300 3539	Mounting Shaft	1
22	AX05 0095	Stepping Motor - CD 4.5W	2
23	AB03 0382	Timing Pulley - 24Z	1
24	A379 4155	Jogger Motor Bracket	1
25	A607 5510	Stapler Harnss - 1	1
26	A612 1121	Front Frame	1
27	AB03 3028	Pulley - 32Z/31Z	1
28	AB01 1085	Gear -14Z/31Z	1
29	A379 4271	Slide Motor Bracket	1
30	AB01 1141	Gear - 14Z	1
31	A300 3551	Grip Stapler Unit	1
32	A300 3646	Jogger Idler Bracket	1
33	A300 3732	Stapler Guide Rail	1
34	AW02 0006	Photointerruptor - EE-SX460-P2	2
35	A300 3841	Position Sensor Bracket	2

Index No.	Part No.	Description	Q ty Per Assembly
36	AX05 0096	Motor - DC 9W	1
37	A608 4131	Lower Left Plate	1
101	0313 0060B	Philips Pan Head Screw - M3x6	
102	0313 0080W	Philips Pan Head Screw - M3x8	
103	0314 0060B	Philips Pan Head Screw - M4x6	
104	0574 0040E	Hexagon Headless Set Screw - M4x4	
105	0313 0100B	Philips Pan Head Screw - M3x10	
106	0720 0040B	Retaining Ring - M4	
107	0720 0060B	Retaining Ring - M6	
108	0740 3008	Ball Bearing - 8x22x7	
109	0951 4006B	Philips Screw With Washer - M4x6	
110	0951 4008B	Philips Screw With Washer - M4x8	
111	1105 0283	Clamp	
112	1105 0005	Nylon Clamp - 3N	
113	0803 0017	Knob Screw - M4x6.5	
114	1105 0234	Clamp	
115	1105 0200	Clamp	
116	0951 3008W	Philips Screw Flat Washer - M3x8	
117	0344 0060F	Philips Truss Head Screw - M4x6	
118	1105 0016	Nylon Clamp - 4N	

6. STAPLER UNIT 3 (A608)

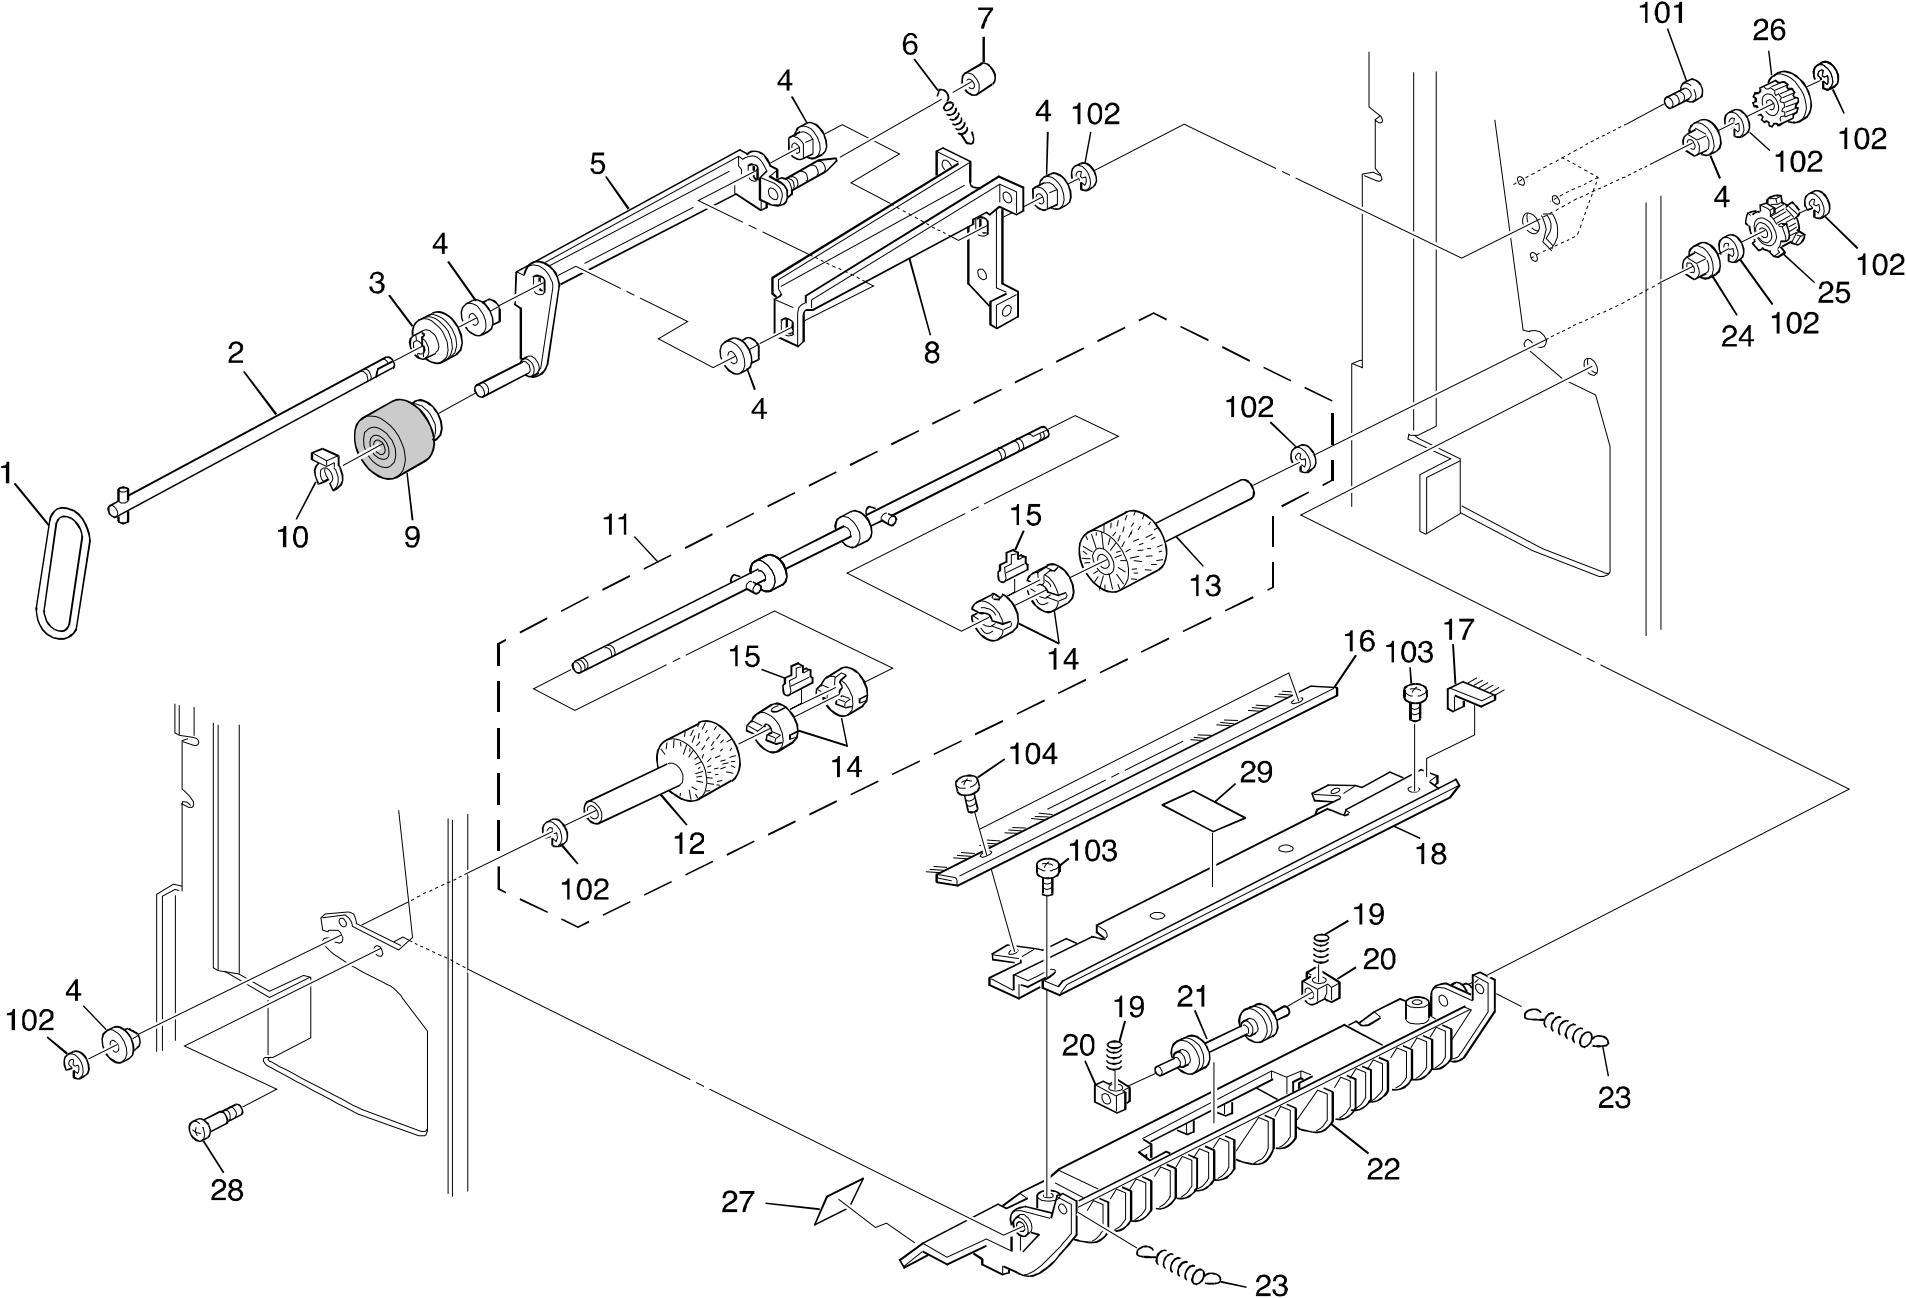


6. STAPLER UNIT 3 (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	5919 2132	Positioning Roller Belt	1
2	A608 2816	Positioning Roller Shaft	1
3	5919 2127	Positioning Roller Pulley	1
4	5053 0447	Bushing - 6mm	6
5	A608 2813	Positioning Roller Arm	1
6	AA06 0557	Positioning Roller Spring	1
7	AA16 1099	Lever Cushion	1
8	A300 3851	Positioning Roller Bracket	1
9	5206 2671	Positioning Roller	1
10	5447 2681	Snap Ring	1
11	A379 2631	Exit Transport Roller	1
12	A379 2635	Front Positioning Roller	1
13	A379 2636	Rear Positioning Roller	1
14	A353 2116	Paddle	2
15	A379 2617	Paddle Roller	4
16	AA12 0027	Antistatic Brush	1
17	A028 7535	Antistatic Brush	1
18	A379 2519	Supporting Lower Guide	1
19	AA06 3529	Pressure Spring - 14.5mm	2
20	AA08 0034	Bushing - 4x5x7	2
21	AF02 2075	Driven Roller	1
22	A379 2511	Lower Guide Plate	1
23	5920 2144	Spring - Lock	2
24	AA08 0071	Bushing -6x10x6	1
25	AB03 0374	Timing Pulley - 20Z	1
26	AB03 0340	Brush Roller Pulley	1
27	A379 4761	Decal - R2 - 19x29	1
28	AA14 3215	Screw - M5X6	1
29	A379 2515	Scraper	1

Index No.	Part No.	Description	Q ty Per Assembly
101	0314 0060B	Philips Pan Head Screw - M4x6	
102	0720 0040B	Retaining Ring - M4	
103	0414 0082B	Binding Self Tapping Screw - M4x8	
104	0314 0050B	Philips Pan Head Screw - M4x5	

7. PAPER EXIT SECTION (A608)

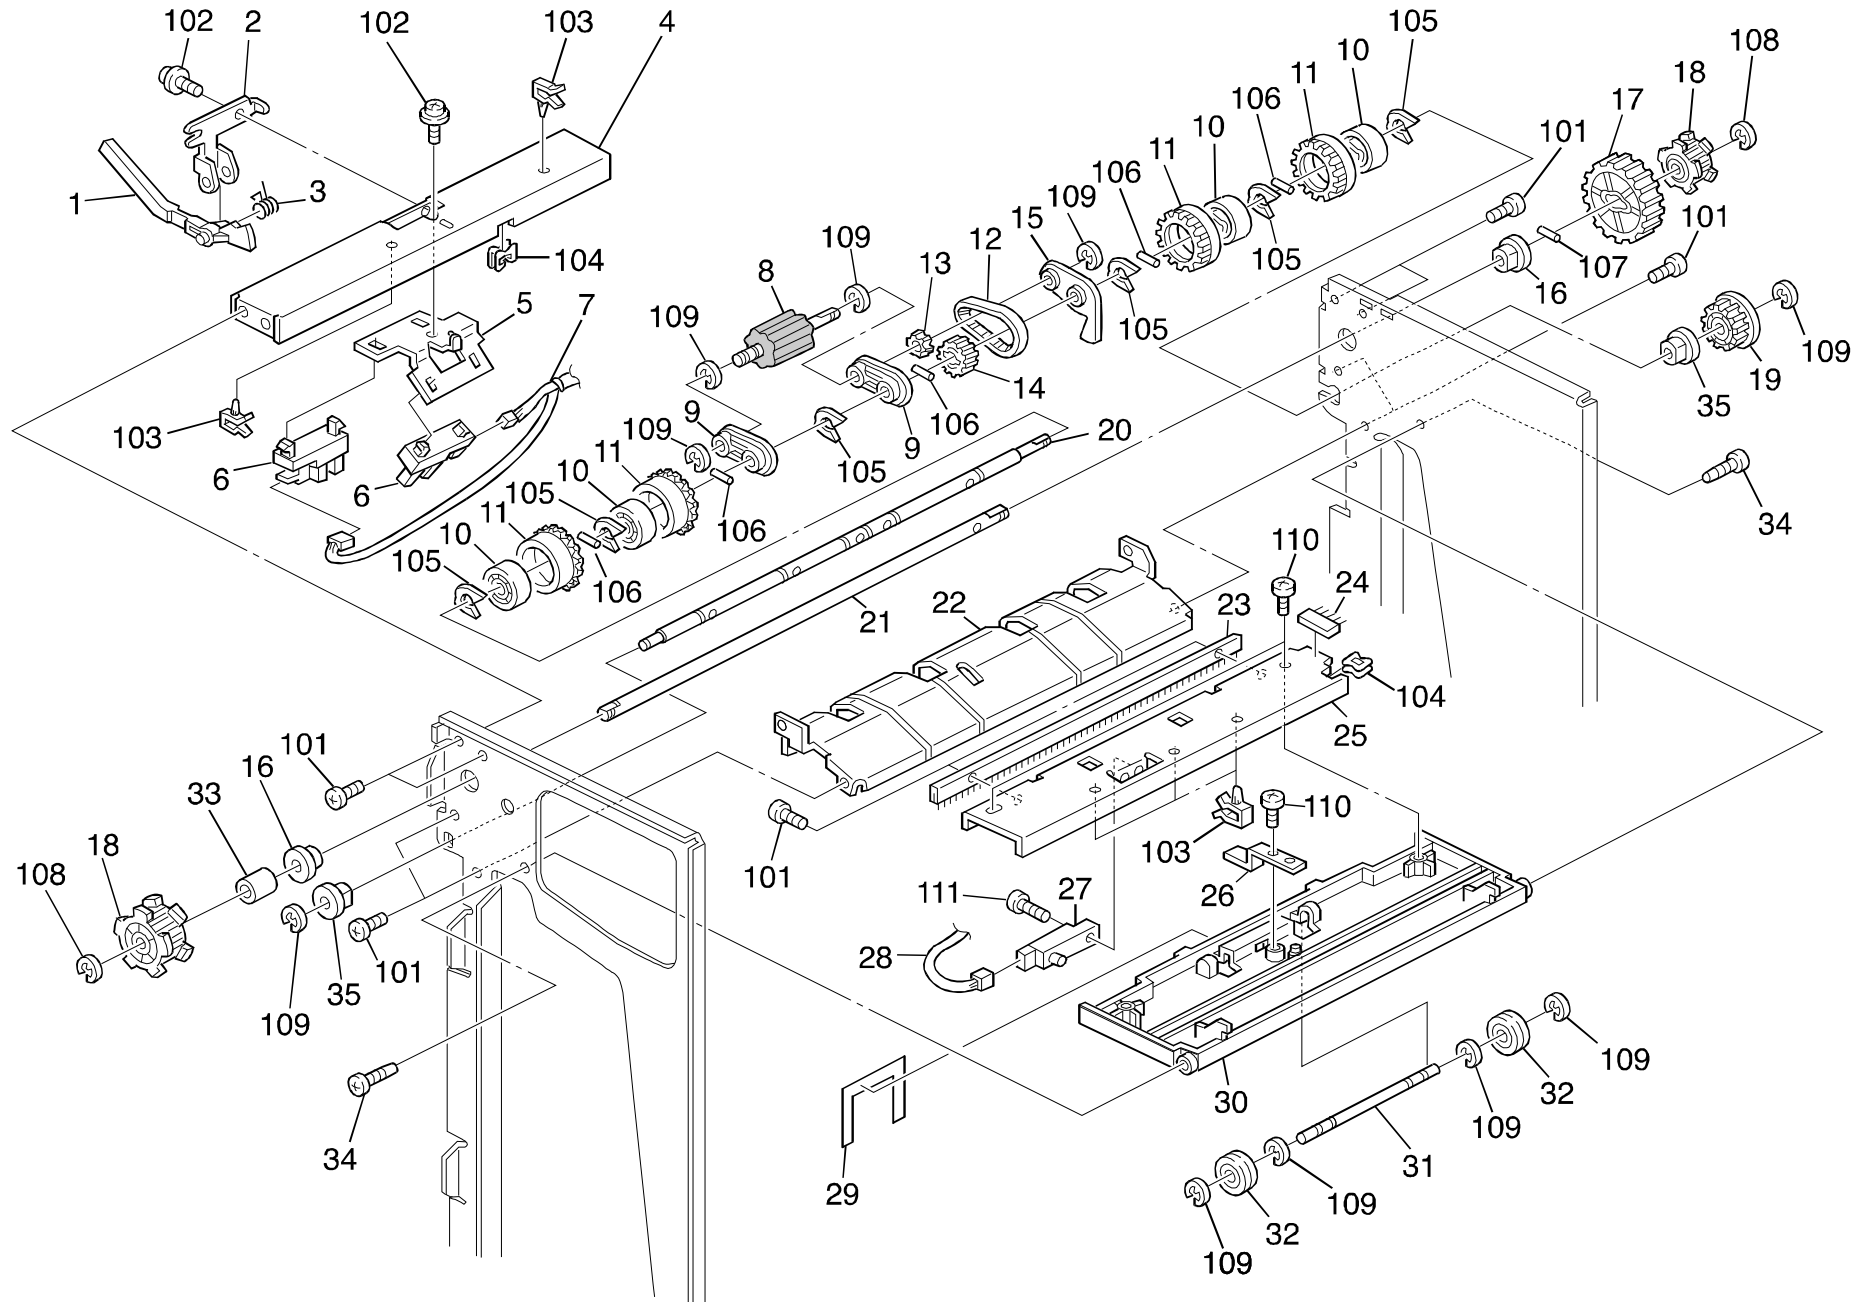


7. PAPER EXIT SECTION (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A379 1225	Upper Sensor Actuator	1
2	A353 3172	Actuator Bracket	1
3	A353 3173	Pressure Spring	1
4	A379 1211	Upper Exit Stay	1
5	A353 3181	Exit Sensor Bracket	1
6	AW02 0006	Photointerruptor - EE-SX460-P2	2
7	A379 5716	Paper Sensor Harness	1
8	A379 2115	Reverse Roller	1
9	A353 3192	Front Arm	2
10	A353 3201	Exit Roller	4
11	A379 2112	Exit Roller Ring	4
12	AA04 3181	Timing Belt - B40S2M80	1
13	AB03 0378	Timing Pulley - 20Z	1
14	AB03 0377	Timing Pulley - 28Z	1
15	A353 3197	Rear Arm	1
16	5420 4860	Bushing - 8mm	2
17	AB01 3712	Gear - 52Z	1
18	AB03 0375	Timing Pulley - 30Z	2
19	AB03 0340	Brush Roller Pulley	1
20	A379 2111	Exit Rooler Shaft	1
21	A379 3731	Lift Drive Shaft	1
22	A612 2221	Lower Exit Guide	1
23	AA12 0027	Antistatic Brush	1
24	A028 7535	Antistatic Brush	1
25	A379 2213	Exit Guide Bracket	1
26	A353 3354	Driven Roller Holder	1
27	A010 5700	Sensor	1
28	A379 5719	Exit Sensor Harness	1
29	A379 2215	Exit Mylar	1
30	A379 2211	Exit Guide	1
31	A379 2212	Driven Roller Shaft	1
32	A353 3351	Exit Driven Roller	2
33	A300 2752	Spacer 8x12x12	1
34	AA14 3215	Screw - M5X6	2
35	5053 0447	Bushing - 6mm	2

Index No.	Part No.	Description	Q ty Per Assembly
101	0314 0060B	Philips Pan Head Screw - M4x6	
102	0951 4006B	Philips Screw With Washer - M4x6	
103	1105 0200	Clamp	
104	1105 0328	Harness Clamp - ES-0505	
105	0805 0088	Retaining Ring - M6	
106	0633 0120G	Parallel Pin - 3x12	
107	0633 0140G	Parallel Pin - 3x14	
108	0720 0060B	Retaining Ring - M6	
109	0720 0040B	Retaining Ring - M4	
110	0414 0082B	Binding Self Tapping Screw - M4x8	
111	0313 0100B	Philips Pan Head Screw - M3x10	

8. SHIFT TRAY SECTION (A608)

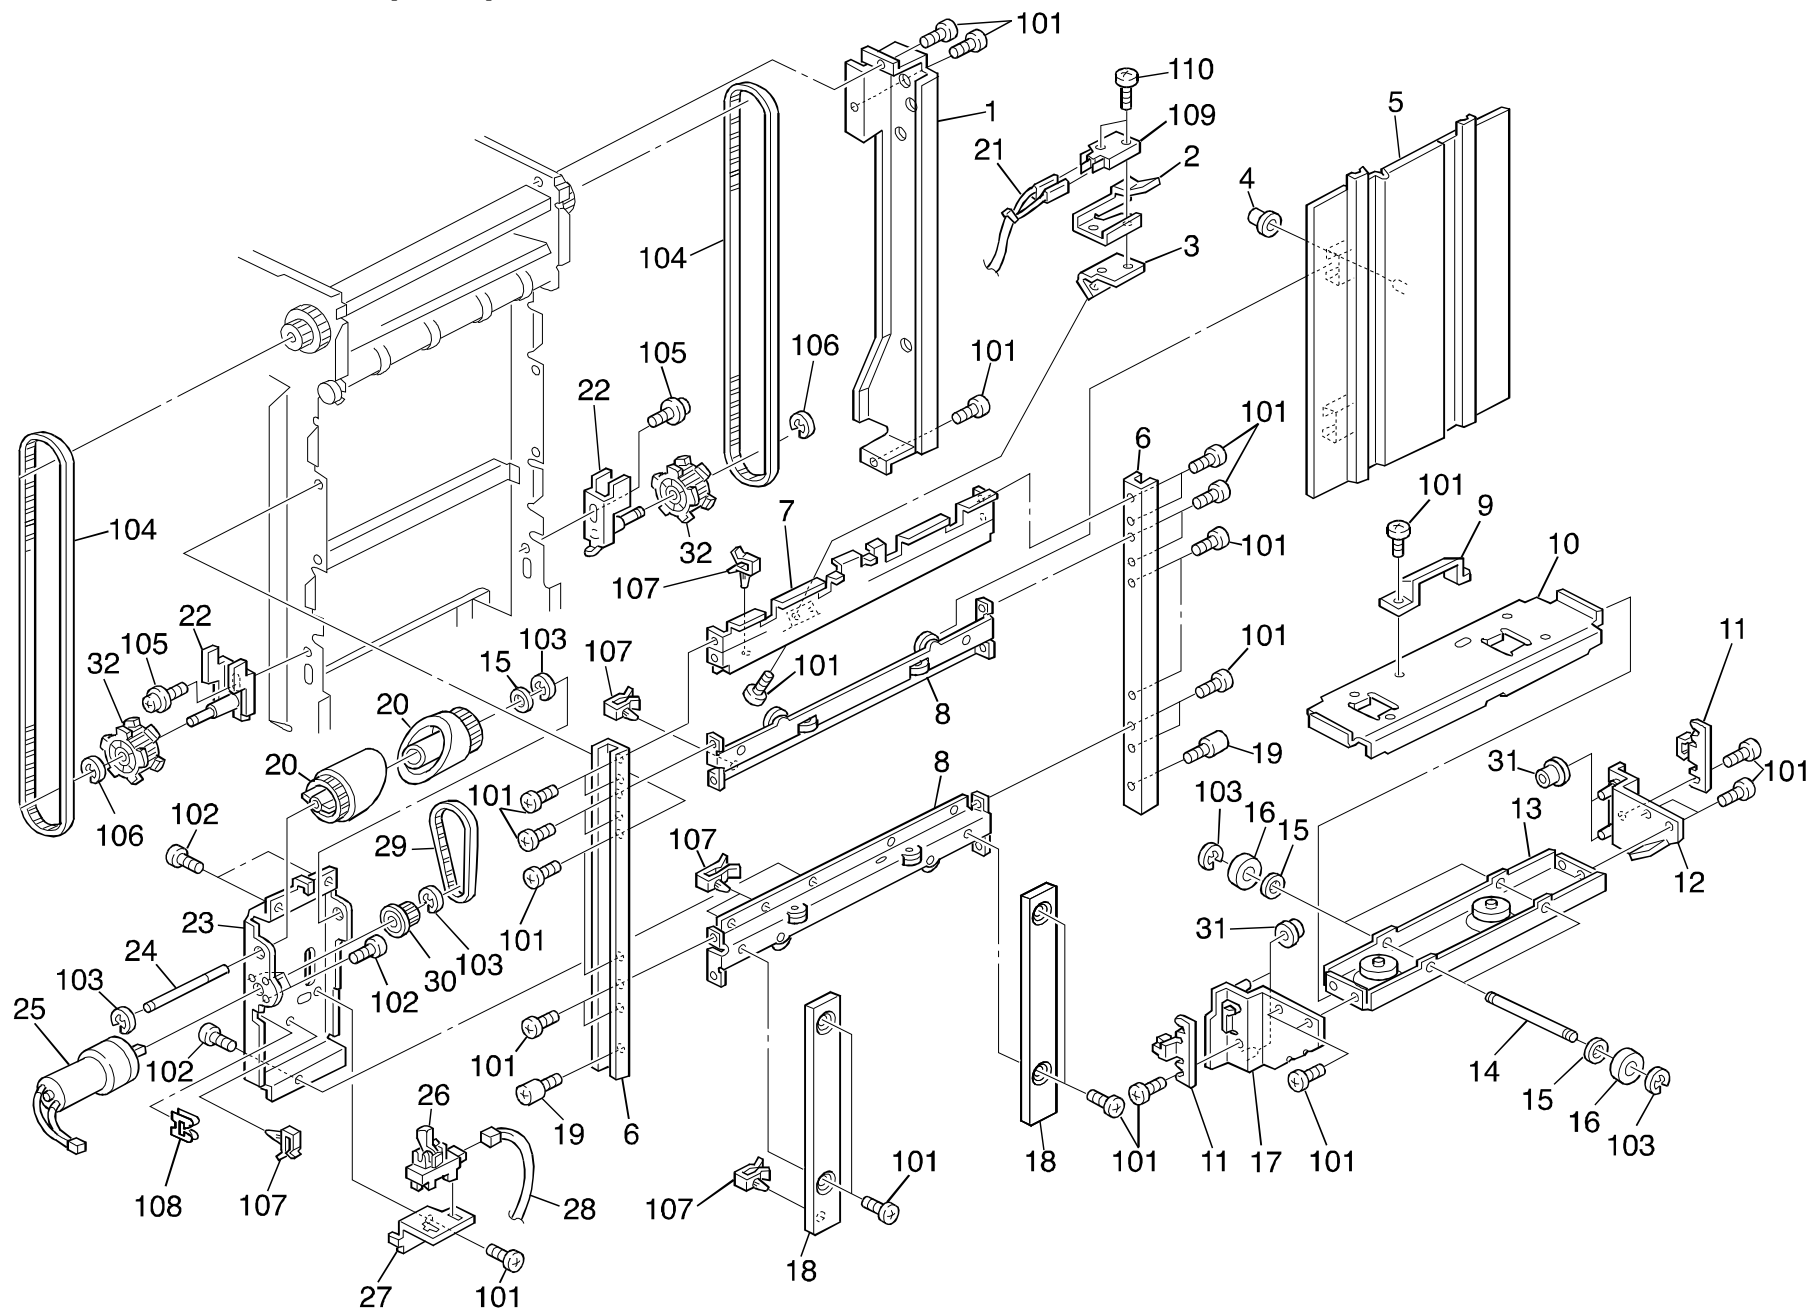


8. SHIFT TRAY SECTION (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A379 6161	Front Supporting Cover	1
2	A379 3133	Switch Lever	1
3	A379 3132	Switch Bracket	1
4	A353 3231	Bushing - 4x6x9mm	1
5	A379 3141	End Fence	1
6	A379 3111	Shift Tray Guide	2
7	A379 3131	Exit Roller Cover	1
8	A379 3121	Exit Stay	2
9	A379 3351	Safety Switch Bracket	1
10	A379 3341	Shift Tray Holder	1
11	A379 3711	Timing Belt Stopper	2
12	A379 3321	Rear Shift Guide	1
13	A379 3331	Shift Tray Base	1
14	A353 3271	Tray Shift Shaft	2
15	AA13 2024	Spacer - M6	5
16	A353 3272	Guide Roller	4
17	A379 3311	Front Shift Guide	1
18	A379 3191	End Fence Cover	2
19	AA14 3059	Pin - 6x16	2
20	A353 3341	Shift Drive Cam	2
21	A612 5702	Upper Limit Sensor Harness	1
22	A353 3151	Tighter Bracket	2
23	A379 3811	Shift Drive Bracket	1
24	A353 3346	Shift Drive Shaft	1
25	AX05 0055	DC Motor - DC 9W	1
26	AW02 0049	Photointerruptor - OS - 580213-703	1
27	A353 3347	Shift Sensor Bracket	1
28	A379 5717	Shift Sensor Harness	1
29	C101 1327	Timing Belt - PX146P2M	1
30	AB03 0381	Timing Pulley - 26Z	1
31	A379 3316	Shift Guide Roller	4
32	AB03 0376	Timing Pulley - 30Z	2

Index No.	Part No.	Description	Q ty Per Assembly
101	0314 0060B	Philips Pan Head Screw - M4x6	
102	0313 0060B	Philips Pan Head Screw - M3x6	
103	0720 0040B	Retaining Ring - M4	
104	0806 5019	Timing Belt - 1005XL	
105	0951 4006B	Philips Screw With Washer - M4x6	
106	0720 0060B	Retaining Ring - M6	
107	1105 0200	Clamp	
108	1105 0283	Clamp	
109	1204 1081	Microswitch	
110	0314 0120B	Philips Pan Head Screw - M4x12	

9. DRIVE AND ELECTRICAL SECTION 1 (A608)

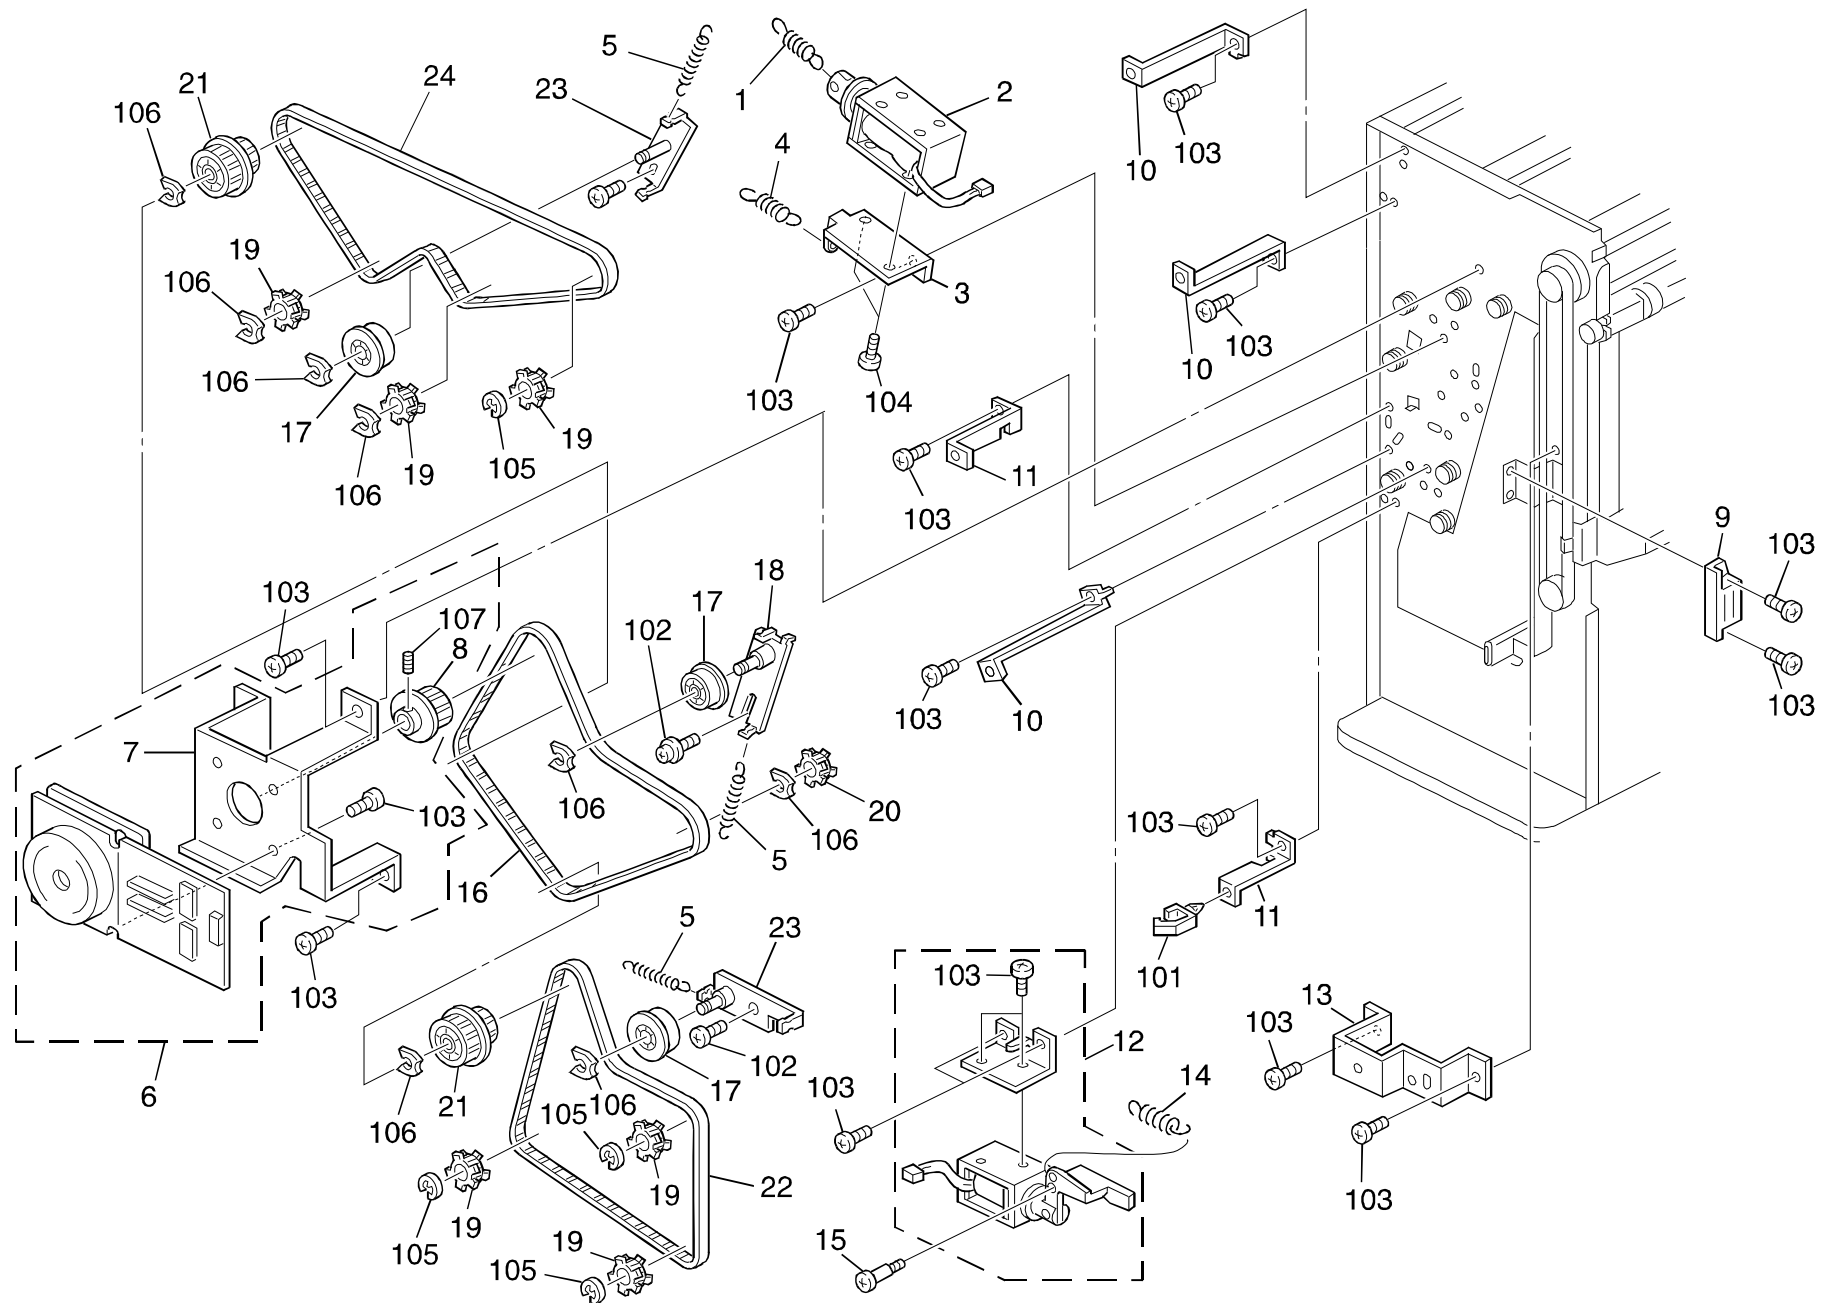


9. DRIVE AND ELECTRICAL SECTION 1 (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	C101 2445	Pressure Spring	1
2	AX10 0021	Junction Gate Solenoid	1
3	A379 2715	Solenoid Bracket	1
4	5940 2641	Feed-in Solenoid Spring	1
5	AA06 0092	Release Spring	3
6	A379 1610	Main Motor - DC24V/15W	1
7	A379 1615	Main Motor Bracket	1
8	AB03 0454	Timing Pulley - 20Z	1
9	AG07 0004	Magnetic Catch	1
10	A379 6225	Cover Angle	3
11	A300 3151	Support Bracket	2
12	A379 2820	Positioning Roller Solenoid	1
13	A379 1172	Upper Joint Bracket	1
14	A300 3865	Release Spring	1
15	A300 3858	Stepped Screw - M4	1
16	AA04 3361	Timing Belt - B40S3M633	1
17	AB03 0455	Tightener Pulley - 8x20x13	3
18	A379 1621	Tightener	1
19	AB03 0374	Timing Pulley - 20Z	6
20	AB03 0278	Idler - 20Z	1
21	AB03 3060	Timing Pulley - 18/33Z	2
22	AA04 3236	Timing Belt - B40S3M600	1
23	A377 2221	Tightener	2
24	AA04 3237	Timing Belt - B40S3M483	1



Index No.	Part No.	Description	Q ty Per Assembly
101	1105 0200	Clamp	
102	0951 4006B	Philips Screw With Washer - M4x6	
103	0314 0060B	Philips Pan Head Screw - M4x6	
104	0313 0050B	Philips Pan Head Screw - M3x5	
105	0720 0040B	Retaining Ring - M4	
106	0805 0088	Retaining Ring - M6	
107	0574 0040E	Hexagon Headless Set Screw - M4x4	

10. DRIVE AND ELECTRICAL SECTION 2 (A608)

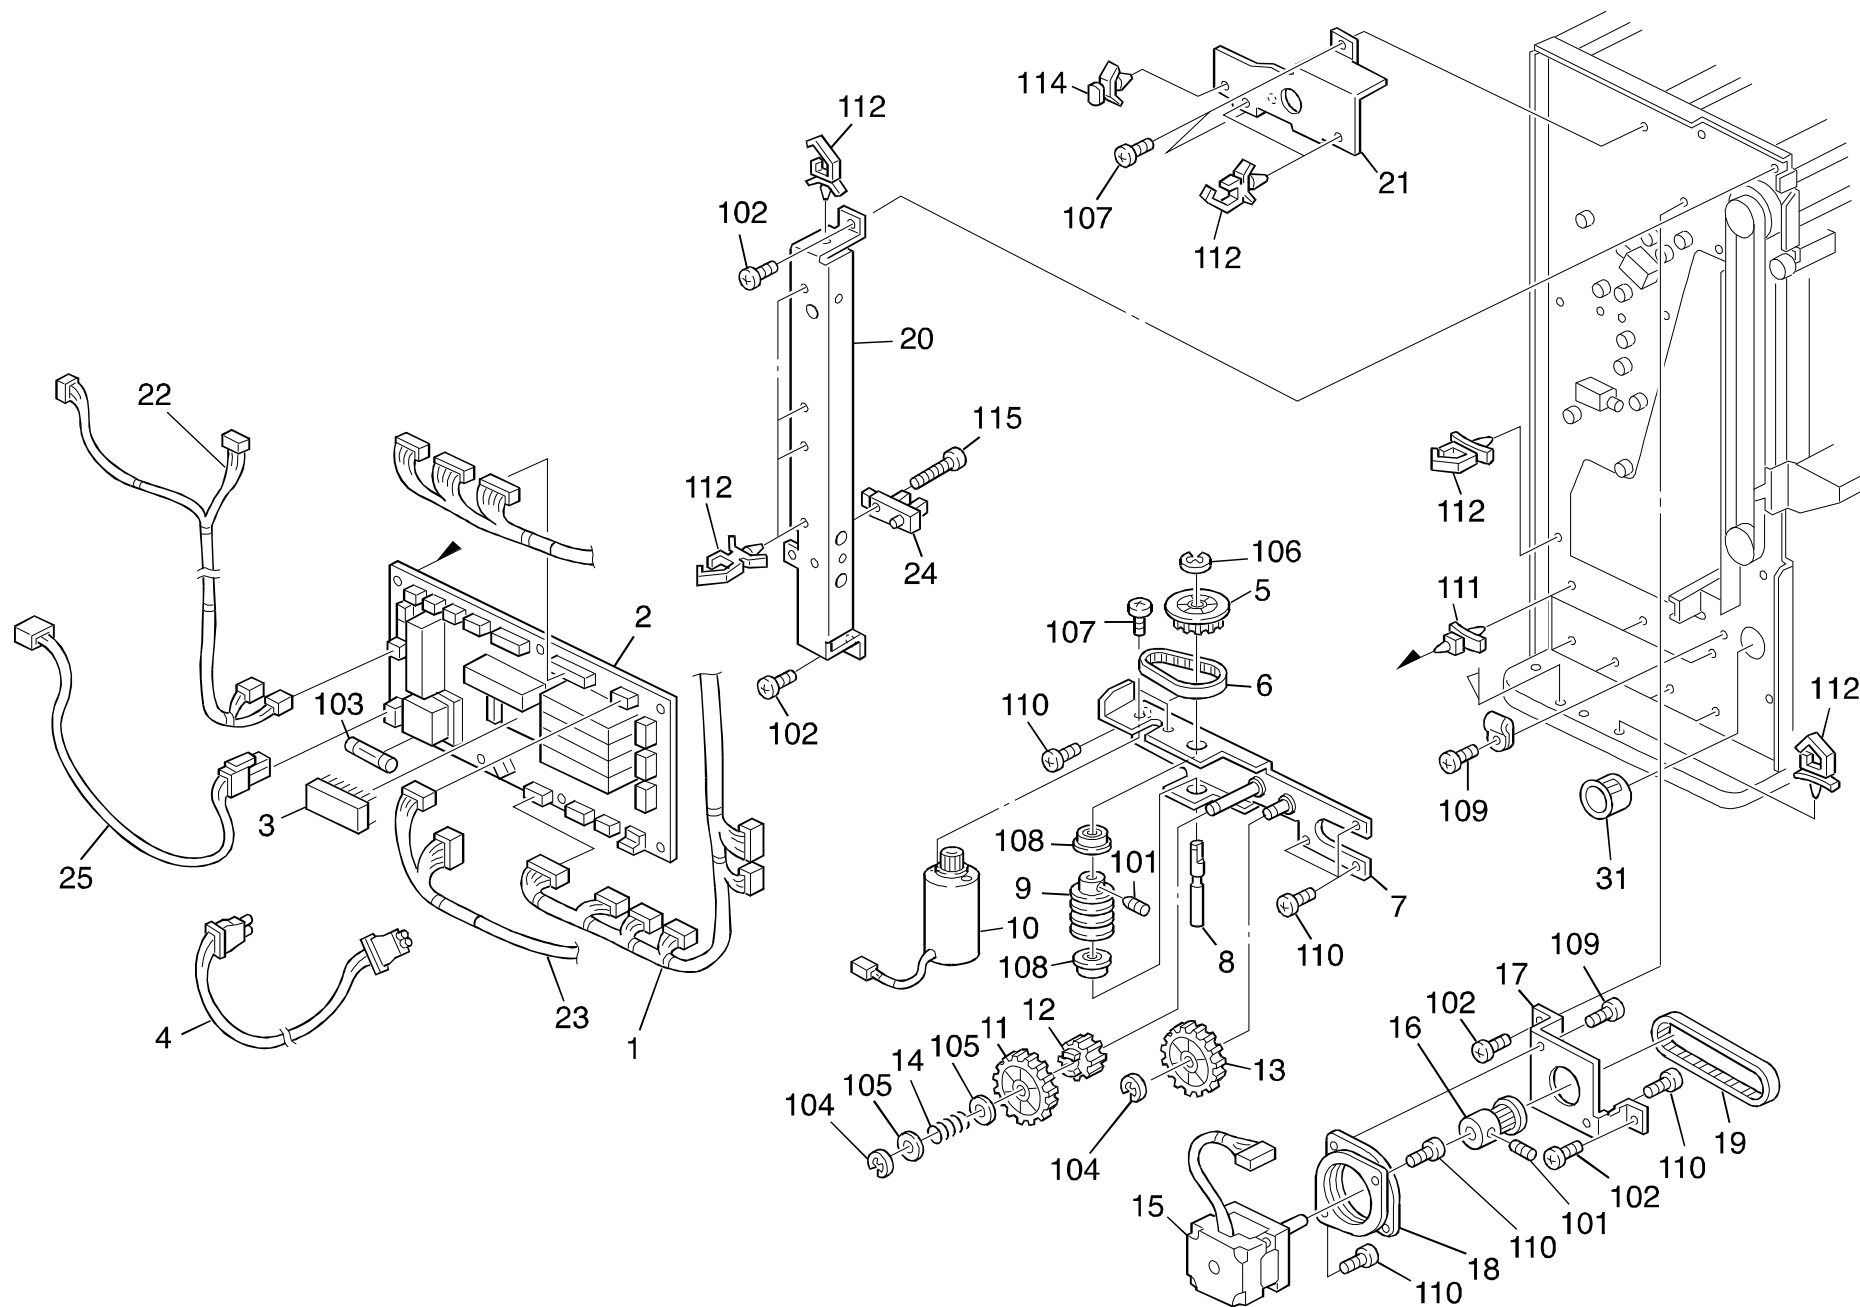


10. DRIVE AND ELECTRICAL SECTION 2 (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A612 5701	Main Harness	1
2	A608 5100	Main Board	1
3	A608 5103	IC - UVEPROM 256K X 8 150NS	1
4	AW03 0029	Fiber Cable - 800	1
5	AB03 0223	Pulley - 48Z	1
6	AA04 3054	Timing Belt - 142 P2M4	1
7	A379 3611	Lift Drive Bracket	1
8	A300 2726	Worm Gear Shaft	1
9	AB01 3709	Worm Gear	1
10	AX05 0055	DC Motor - DC 9W	1
11	AB01 3809	Worm Wheel - 44Z	1
12	AB01 3857	Gear - 18Z	1
13	AB01 3710	Gear - 40Z	1
14	A353 3113	Pressure Spring	1
15	AX05 0057	Stepping Motor - DC24v 3.84W	1
16	AB03 0216	Pulley - 15Z	1
17	A379 1711	Motor Bracket	1
18	A548 2113	Motor Cushion	3
19	AA04 3238	Timing Belt - B40S2M206	1
20	A612 6321	Rear Supporting Cover	1
21	A379 5911	Upper Harness Bracket	1
22	A612 5703	Safety Switch Harness	1
23	A612 5713	Exit Sensor Harness	1
24	AW02 0012	Photointerruptor	1
25	A608 5704	DC Power Supply Harness	

Index No.	Part No.	Description	Q ty Per Assembly
101	0574 0040E	Hexagon Headless Set Screw - M4x4	
102	0314 0060B	Philips Pan Head Screw - M4x6	
103	1107 0752	Fuse (Glass Case) - 5A - 250V	
104	0720 0060B	Retaining Ring - M6	
105	0807 5056	Washer - 8.1mm	
106	0720 0040B	Retaining Ring - M4	
107	0313 0060B	Philips Pan Head Screw - M3x6	
108	0741 3506	Ball Bearing - 6x12x4mm	
109	1106 0193	Bushing - 7.9mm	
110	0313 0050B	Philips Pan Head Screw - M3x5	
111	1105 0437	Locfking Support - FGS-4S	
112	1105 0310	Wire Clamp	
113	1106 0289	Bushing - SR-5N-1	
114	1106 0383	Supportor - P.C.B.	
115	0314 0100B	Philips Pan Head Screw - M4x10	

11. FRAME SECTION (A608)

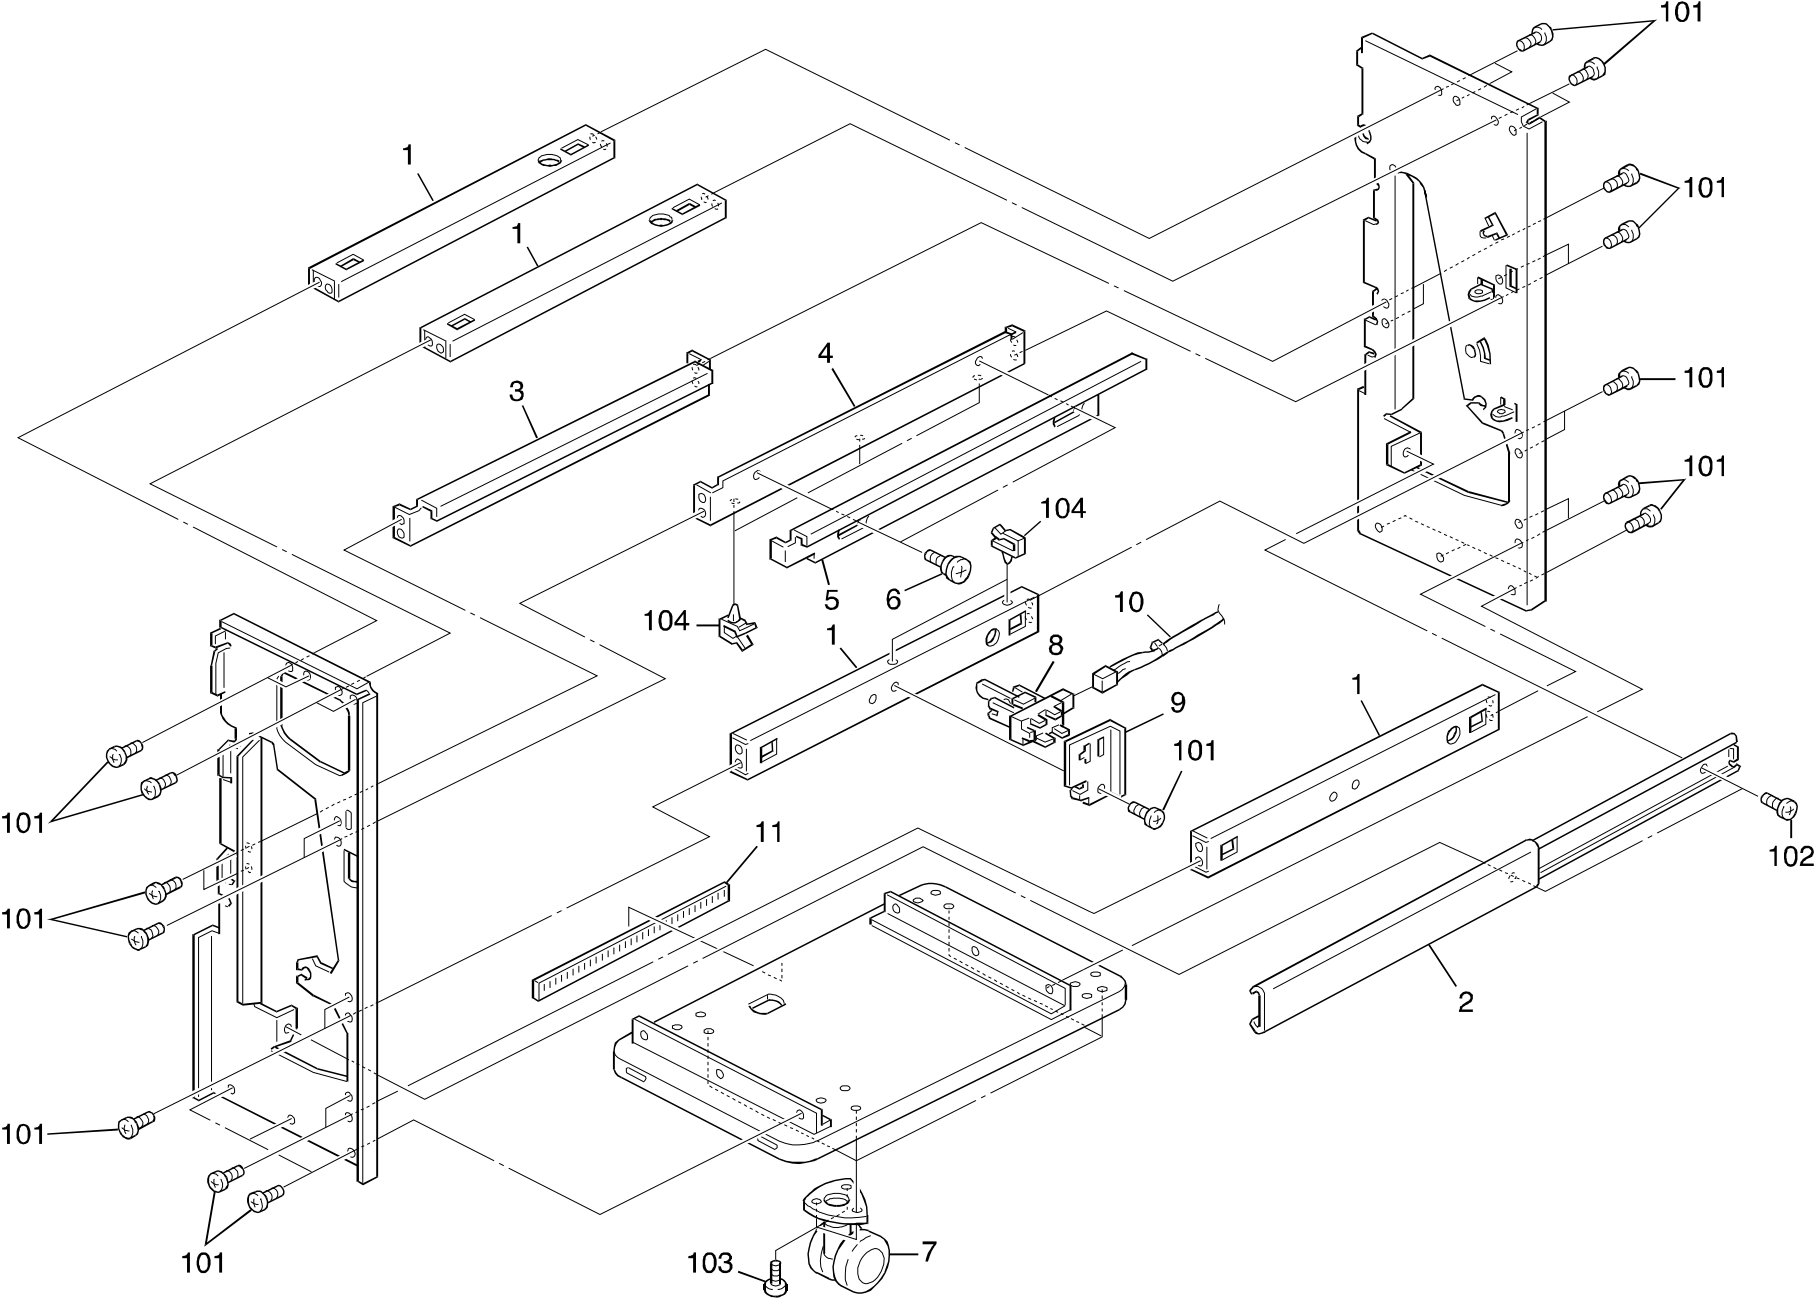

11. FRAME SECTION (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A379 1141	Right Stay	4
2	AA07 0024	Slide Rail	1
3	A379 1161	Left Stay	1
4	A379 1311	Joint Stay	1
5	A377 1182	Joint Lever	1
6	5413 1882	Stepped Screw	2
7	AH01 2010	Caster - 50M	4
8	AW02 0049	Photointerruptor - OS - 580213-703	1
9	A379 2441	Exit Sensor Bracket	1
10	A612 5701	Main Harness	1
11	A353 1192	Bushing - 5x328	1

Index No.	Part No.	Description	Q ty Per Assembly
101	0314 0060B	Philips Pan Head Screw - M4x6	
102	0344 0060F	Philips Truss Head Screw - M4x6	
103	0315 0080B	Philips Pan Head Screw - M5x8	
104	1105 0200	Clamp	

12. MAIN CONTROL BOARD (A608)

CAPACITOR

SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.
C100	181	C110	181	C157	188	C167	186	C177	186	C187	186	C197	188
C101	178	C111	180	C158	186	C168	186	C178	188	C188	186	C198	188
C102	183	C112	179	C159	188	C169	186	C179	188	C189	186	C199	186
C103	182	C150	188	C160	188	C170	186	C180	186	C190	185	C200	188
C104	181	C151	187	C161	186	C171	186	C181	188	C191	185	C201	186
C105	152	C152	188	C162	186	C172	188	C182	188	C192	186	C202	188
C106	152	C153	188	C163	186	C173	186	C183	188	C193	----	C203	186
C107	181	C154	188	C164	186	C174	188	C184	188	C194	188	C204	188
C108	181	C155	186	C165	186	C175	186	C185	188	C195	186	C205	188
C109	181	C156	188	C166	186	C176	186	C186	188	C196	188	C206	188

CAPACITOR

SYMBOL NO.	INDEX NO.
C207	188
C208	188
C209	188
C210	188
C211	188
C212	188
C213	188
C214	188
C215	185
C216	182

CONNECTOR

SYMBOL NO.	INDEX NO.
CN101	116
CN102	112
CN103	114
CN104	102
CN105	109
CN106	105
CN107	104
CN108	113
CN109	108
CN110	110

SYMBOL NO.	INDEX NO.
CN111	116
CN112	105
CN113	106
CN114	107
CN115	103
CN116	101
CN117	111

DIODE

SYMBOL NO.	INDEX NO.
D100	127
D101	127
D102	129
D103	127

DPS

SYMBOL NO.	INDEX NO.
DPS100	120
DPS101	120

FUSE

SYMBOL NO.	INDEX NO.
FU100	119
FU100	117

IC

SYMBOL NO.	INDEX NO.
IC100	143
IC101	142
IC102	140
IC103	132
IC104	127
IC105	145
IC106	132
IC107	3
(SOCKET)	118
IC108	138

12. MAIN CONTROL BOARD (A608)

CAPACITOR

SYMBOL NO.	INDEX NO.
IC109	131
IC110	134
IC111	139
IC112	135
IC113	136
IC114	1
IC115	133
IC116	146
IC117	146
IC118	146

SYMBOL NO.	INDEX NO.
IC119	144
IC120	141

L

SYMBOL NO.	INDEX NO.
L100	153
L101	153
L102	153

LED

SYMBOL NO.	INDEX NO.
LED100	128

OSC

SYMBOL NO.	INDEX NO.
OSC100	147
OSC101	148

PC

SYMBOL NO.	INDEX NO.
PC100	130
PC101	130

Q

SYMBOL NO.	INDEX NO.
Q100	125
Q101	124
Q102	122
Q150	121
Q151	126
Q152	126
Q153	126
Q154	123

RESISTOR

SYMBOL NO.	INDEX NO.
R100	154
R101	149
R102	149
R103	155
R150	166
R151	165
R152	163
R153	166
R154	165
R155	175

SYMBOL NO.	INDEX NO.
R156	168
R157	165
R158	157
R159	157
R160	170
R161	156
R162	----
R163	170
R164	170
R165	157

RESISTOR

SYMBOL NO.	INDEX NO.
R166	158
R167	157
R168	177
R169	173
R170	171
R171	----
R172	163
R173	----
R174	170
R175	170

SYMBOL NO.	INDEX NO.
R176	158
R177	170
R178	170
R179	160
R180	166
R181	158
R182	165
R183	165
R184	158
R185	166

SYMBOL NO.	INDEX NO.
R186	165
R187	165
R188	158
R189	158
R190	158
R191	158
R192	158
R193	170
R194	158
R195	158

SYMBOL NO.	INDEX NO.
R196	158
R197	158
R198	158
R199	158
R200	158
R201	----
R202	158
R203	158
R204	170
R205	170

SYMBOL NO.	INDEX NO.
R206	158
R207	158
R208	158
R209	158
R210	158
R211	158
R212	158
R213	170
R214	170
R215	157

SYMBOL NO.	INDEX NO.
R216	157
R217	157
R218	157
R219	157
R220	157
R221	166
R222	164
R223	161
R224	170
R225	170

SYMBOL NO.	INDEX NO.
R226	158
R227	158
R228	158
R229	158
R230	158
R231	158
R232	158
R233	158
R234	170
R235	170

12. MAIN CONTROL BOARD (A608)

RESISTOR

SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.	SYMBOL NO.	INDEX NO.
R236	170	R246	165	R256	170	R266	170	R276	174	R286	166	R296	151
R237	170	R247	166	R257	158	R267	162	R277	172	R287	158	R297	158
R238	170	R248	165	R258	170	R268	170	R278	174	R288	158	R298	158
R239	170	R249	166	R259	170	R269	170	R279	172	R289	165	R299	159
R240	170	R250	165	R260	170	R270	170	R280	156	R290	166	R300	170
R241	157	R251	159	R261	170	R271	170	R281	170	R291	165		
R242	165	R252	158	R262	162	R272	176	R282	156	R292	166		
R243	166	R253	158	R263	170	R273	170	R283	166	R293	165		
R244	165	R254	164	R264	170	R274	174	R284	165	R294	166		
R245	166	R255	164	R265	170	R275	169	R285	165	R295	170		

VR

SYMBOL NO.	INDEX NO.
VR100	150

12. MAIN CONTROL BOARD (A608)


Index No.	Part No.	Description	Q ty Per Assembly
*	A608 5100	Main Board	1
1	A377 5150	IC - TC11DG03AF-0071	1
3	A608 5103	IC - UVEPROM 256K X 8 150NS	1
4	1905 0003	UVEPROM - 256K - X8 - 150NS	1

Index No.	Part No.	Description	Q ty Per Assembly
101	1102 4201	Connector - 2P	
102	1102 4202	Connector - 3P	
103	1102 4203	CT Header - 4P	
104	1102 4204	CT Header - 5P	
105	1102 4206	Connector - 7P	
106	1102 4208	Connector - 9P	
107	1102 4211	CT Header - 12P	
108	1102 4212	CT Header - 15P	
109	1102 4620	CT Header - 3P	
110	1102 4623	CT Connector - 6P	
111	1102 4624	CT Connector - 7P	
112	1102 5003	Fiber Connector - DC1002 - 2P	
113	1102 5007	CT Header - 14P	
114	1102 5301	Connector - 2P	
115	1102 5325	Connector - 2P	
116	1103 1770	Connector - 4P	
117	1104 0333	Fuse Holder	
118	1104 0588	Dip Socket - 28P	
119	1107 0752	Fuse (Glass Case) - 5A - 250V	
120	1204 1422	DIP Switch - 51D0401	
121	1400 0423	Transistor - 2SA1121C	
122	1400 0486	Transistor - 2SA1020	
123	1400 0678	Transistor - FC112	
124	1401 0200	Transistor - 2SD633	
125	1401 0282	Transistor - 2SB1020	
126	1401 0298	Transistor - 2SC2712Y	
127	1402 0780	Diode - 200V - 1A - 11ES2	
128	1402 0783	Red LED - GL3PR8	
129	1402 0874	Diode - RL2Z	
130	1403 0519	Photocoupler - TLP621	
131	1407 1882	TTLIC - SN74LS373NS	
132	1407 2218	TTLIC - SN74LS06NS	
133	1407 2231	IC - TD62308AF	
134	1407 2404	CMOS - LSI - M5M81C55FP-2	
135	1407 3202	IC - 74HC00A	

Index No.	Part No.	Description	Q ty Per Assembly
136	1407 3286	IC - TC74HC04AF	
137	1407 3492	CPU -78C10AGF	
138	1407 3756	Timer - TMP82C54M-2	
139	1407 4137	IC - MM1035XF	
140	1408 0397	Comparator - NJM2901M	
141	1408 0398	Comparator - NJM2903M	
142	1408 0538	IC - SI8301L	
143	1408 0599	IC - M51971EP	
144	1408 0827	IC - TA8429H	
145	1408 1200	IC - STK681-050	
146	1408 1201	IC - STK6711BMK4	
147	1503 0347	Oscillator - 12MHZ	
148	1503 0512	Oscillator - 3MHZ	
149	1600 1026	Resistor Array - 1KP 1W 5%	
150	1601 8148	Variable Resistor - 20K P 0.5W	
151	1605 0339	Capacitor - 0.33 η F - +80-20%	
152	1606 1348	Capacitor - 0.022 η F 50V	
153	1607 0069	Fuse - BI02RN2-R62-PB	
154	1611 4121	Resistor - 120 P 1/4T 5%	
155	1611 4330	Resistor - 330 P 1/4T 5%	
156	1630 3101	Resistor - 100P - 1/10W	
157	1630 3102	Resistor - 1KP 1/10W 5%	
158	1630 3103	Resistor - 10KP 1/10W 5%	
159	1630 3104	Resistor - 100K P 1/10W 5%	
160	1630 3105	Resistor - 1M P 5% 1/10W	
161	1630 3152	Resistor - 1.5KP - 1/10W	
162	1630 3201	Resistor - 200 P 1/10W 5%	
163	1630 3202	Resistor - 2KP -1/10W	
164	1630 3222	Resistor - 2.2KP 1/10W 5%	
165	1630 3223	Resistor - 22KP - 1/10W	
166	1630 3302	Resistor - 3KP - 1/10W	
167	1630 3330	Resistor - 33P 5% 1/10W	
168	1630 3333	Resistor - 33K P 5% 1/10W	
169	1630 3431	Resistor - 430P 5% - 1/10	

Index No.	Part No.	Description	Q ty Per Assembly
170	1630 3472	Resistor - 4.7KP 1/10W 5%	
171	1630 3473	Resistor - 47KP 1/10W 5%	
172	1630 3511	Resistor - 510P 1/10W 5%	
173	1630 3562	Resistor - 5.6K P 5% 1/10W	
174	1630 3682	Resistor - 6.8P - 1/10W	
175	1630 3753	Resistor - 75KP - 1/10W	
176	1630 3821	Resistor - 820 P 5% 1/10W	
177	1630 3822	Resistor - 8.2K P 1/10W 5%	
178	1640 0102	Capacitor - 1000 η F - 20% - 10V	
179	1640 0221	Capacitor - 220 η F - 20% 10V	
180	1640 5100	Capacitor - 10 η F 20% 50V	
181	1640 5101	Capacitor - 100 η F 20% 50V	
182	1640 5109	Capacitor - 1 η F - 20% - 50V	
183	1640 5339	Capacitor - 3.3 η F - 20% - 50V	
184	1660 3101	Capacitor - 100PF 50V	
185	1660 3102	Capacitor - 1000PF 5% 50V	
186	1660 5103	Capacitor - 10000PF 10% 50V	
187	1660 5472	Capacitor - 4700PF 50V	
188	1660 7104	Capacitor - 100000PF 50V	

13. DECAL AND DOCUMENT (A608)

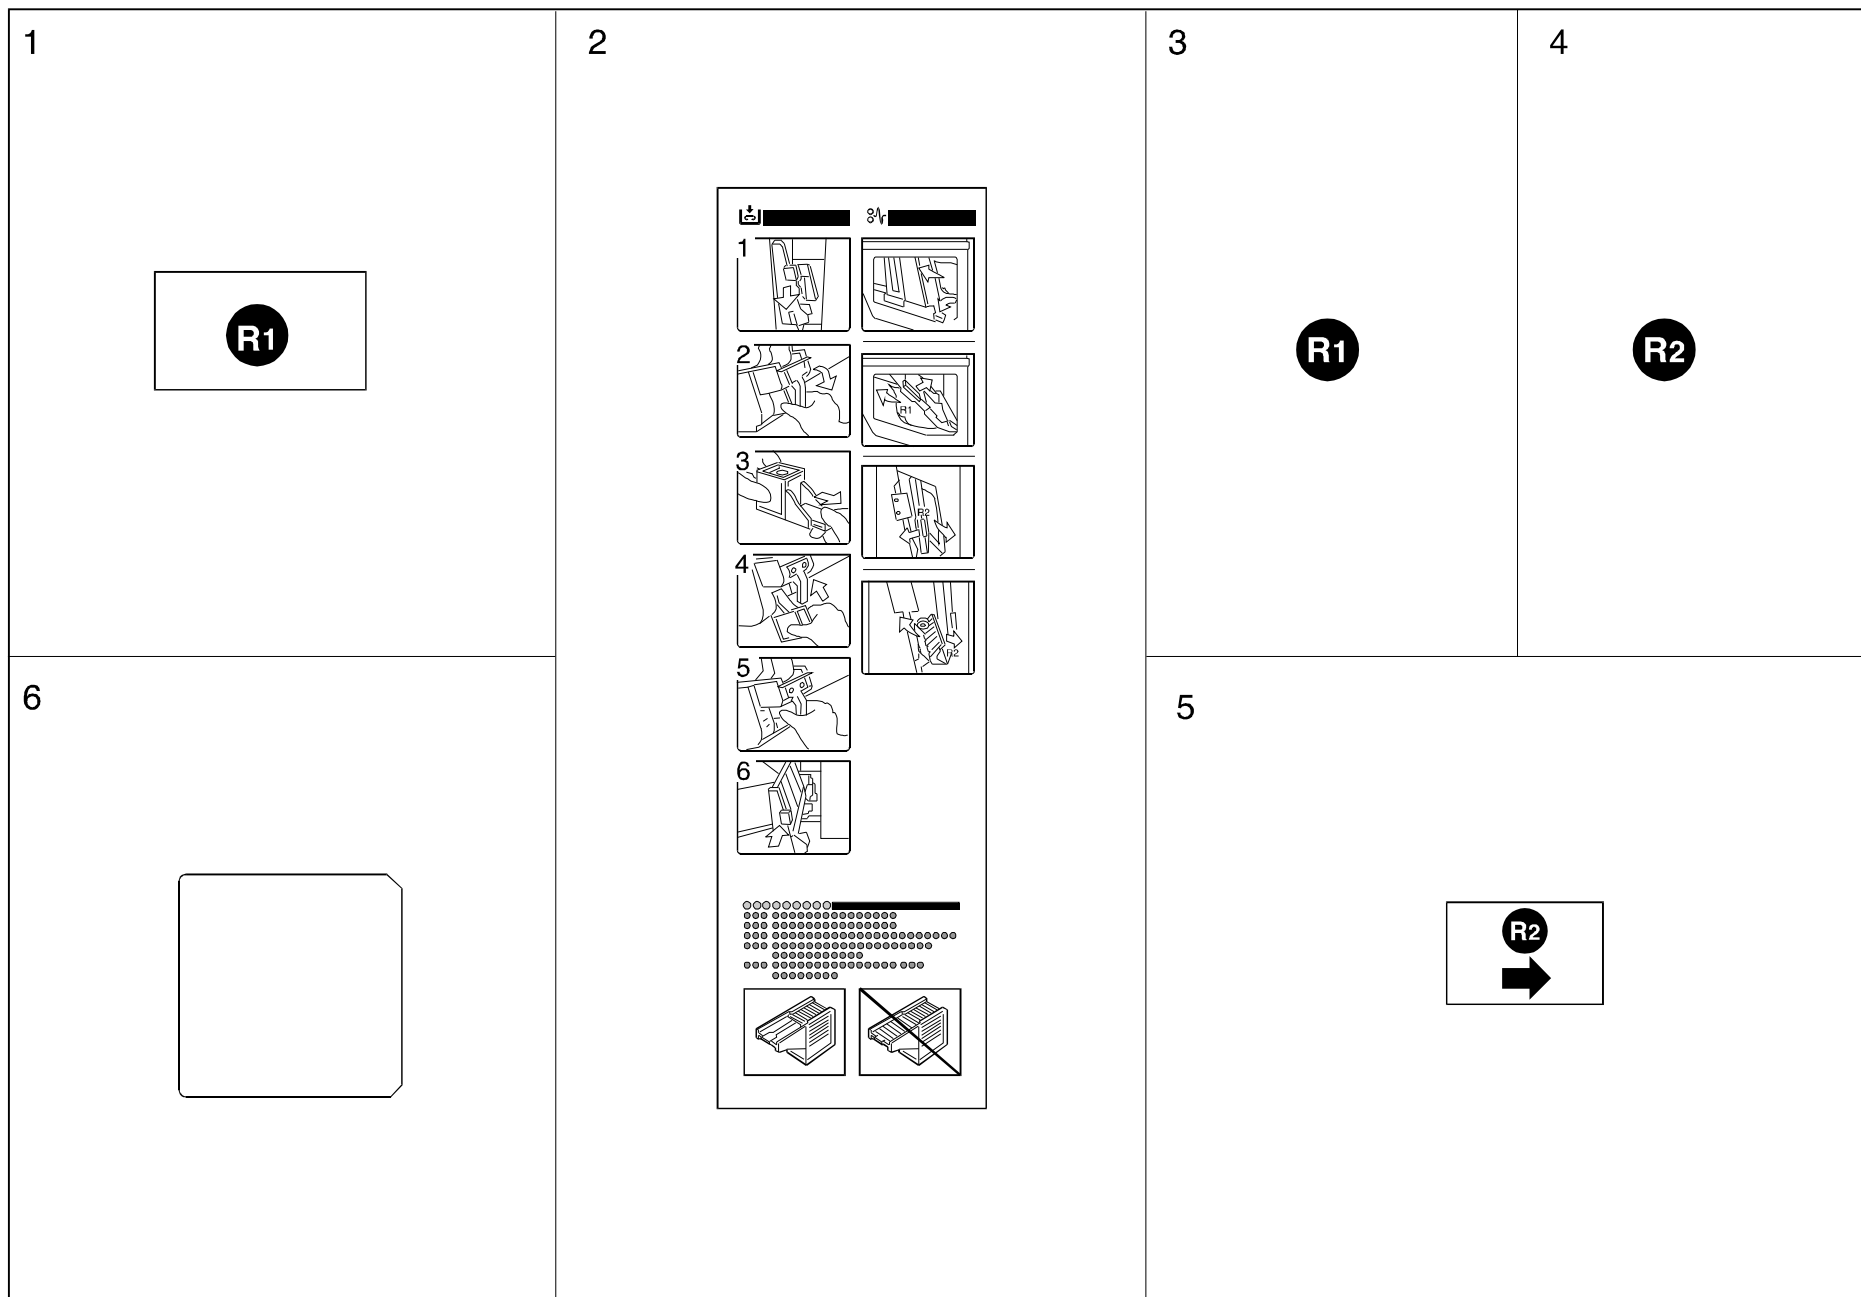

13. DECAL AND DOCUMENT (A608)

Index No.	Part No.	Description	Q ty Per Assembly
1	A353 2265	Decal - R1	1
2	A608 4711	Decal - Misfeed Removal	1
3	A379 4751	Decal - R1	1
4	A379 4752	Decal - R2	1
5	A379 4761	Decal - R2 - 19x29	1
6	A612 4763	Decal - 30x48	1

Index No.	Part No.	Description	Q ty Per Assembly

PARTS INDEX

Part No.	Description	Page and Index No.
A608 2813	Positioning Roller Arm	15- 5
A608 2816	Positioning Roller Shaft	15- 2
A608 4131	Lower Left Plate	13- 37
A608 4221	Stapler Stand	13- 14
A608 4311	Stapler Slide Holder	13- 4
A608 4321	Stapler Holder	13- 12
A608 4326	Guard - Slider	13- 11
A608 4711	Decal - Misfeed Removal	5- 20
A608 4711	Decal - Misfeed Removal	31- 2
A608 5100	Main Board	23- 2
A608 5100	Main Board	29- *
A608 5103	IC - UVEPROM 256K X 8 150NS	23- 3
A608 5103	IC - UVEPROM 256K X 8 150NS	29- 3
A608 5704	DC Power Supply Harness	23- 25
A608 5714	Stapler Harness - 2	13- 15
A608 6319	Rear Cover	5- 7

Part No.	Description	Page and Index No.
AA04 3054	Timing Belt - 142 P2M4	23- 6
AA04 3100	Timing Belt - 900 P2M4	11- 8
AA04 3100	Timing Belt - 900 P2M4	13- 10
AA04 3104	Timing Belt - 219 P3M4	13- 20
AA04 3181	Timing Belt - B40S2M80	17- 12
AA04 3236	Timing Belt - B40S3M600	21- 22
AA04 3237	Timing Belt - B40S3M483	21- 24
AA04 3238	Timing Belt - B40S2M206	23- 19
AA04 3361	Timing Belt - B40S3M633	21- 16
AA06 0092	Release Spring	21- 5
AA06 0557	Positioning Roller Spring	15- 6
AA06 3529	Pressure Spring - 14.5mm	15- 19
AA07 0024	Slide Rail	25- 2
AA08 0034	Bushing - 4x5x7	7- 11
AA08 0034	Bushing - 4x5x7	9- 6
AA08 0034	Bushing - 4x5x7	15- 20
AA08 0071	Bushing -6x10x6	15- 24
AA12 0027	Antistatic Brush	15- 16
AA12 0027	Antistatic Brush	17- 23
AA13 2024	Spacer - M6	19- 15
AA14 3059	Pin - 6x16	9- 13
AA14 3059	Pin - 6x16	19- 19
AA14 3215	Screw - M5X6	7- 23
AA14 3215	Screw - M5X6	15- 28
AA14 3215	Screw - M5X6	17- 34
AA16 1099	Lever Cushion	15- 7
AB01 0055	Gear - 46Z/13Z	13- 18
AB01 1085	Gear -14Z/31Z	13- 28
AB01 1141	Gear - 14Z	13- 30
AB01 3709	Worm Gear	23- 9
AB01 3710	Gear - 40Z	23- 13
AB01 3712	Gear - 52Z	17- 17
AB01 3809	Worm Wheel - 44Z	23- 11
AB01 3857	Gear - 18Z	23- 12
AB03 0030	Pulley - 17Z	11- 22

Part No.	Description	Page and Index No.
AB03 0216	Pulley - 15Z	23- 16
AB03 0223	Pulley - 48Z	23- 5
AB03 0227	Pulley - 32Z	11- 37
AB03 0227	Pulley - 32Z	13- 5
AB03 0229	Timing Pulley - 20Z	11- 4
AB03 0278	Idler - 20Z	21- 20
AB03 0340	Brush Roller Pulley	15- 26
AB03 0340	Brush Roller Pulley	17- 19
AB03 0374	Timing Pulley - 20Z	7- 8
AB03 0374	Timing Pulley - 20Z	9- 16
AB03 0374	Timing Pulley - 20Z	15- 25
AB03 0374	Timing Pulley - 20Z	21- 19
AB03 0375	Timing Pulley - 30Z	17- 18
AB03 0376	Timing Pulley - 30Z	19- 32
AB03 0377	Timing Pulley - 28Z	17- 14
AB03 0378	Timing Pulley - 20Z	17- 13
AB03 0381	Timing Pulley - 26Z	19- 30
AB03 0382	Timing Pulley - 24Z	13- 23
AB03 0454	Timing Pulley - 20Z	21- 8
AB03 0455	Tightener Pulley - 8x20x13	21- 17
AB03 3028	Pulley - 32Z/31Z	13- 27
AB03 3060	Timing Pulley - 18/33Z	21- 21
AF02 0305	Transport Roller	7- 5
AF02 0305	Transport Roller	9- 14
AF02 2075	Driven Roller	7- 12
AF02 2075	Driven Roller	9- 7
AF02 2075	Driven Roller	15- 21
AG07 0004	Magnetic Catch	7- 13
AG07 0004	Magnetic Catch	9- 17
AG07 0004	Magnetic Catch	21- 9
AH01 2010	Caster - 50M	25- 7
AJ01 1010	Stapler - EH-560	13- 13
AW01 0027	Photosensor - ON2530 CT	11- 23
AW02 0006	Photointerruptor - EE-SX460-P2	13- 34
AW02 0006	Photointerruptor - EE-SX460-P2	17- 6

Part No.	Description	Page and Index No
AW02 0012	Photointerruptor	11- 17
AW02 0012	Photointerruptor	23- 24
AW02 0049	Photointerruptor - OS - 580213-703	9- 3
AW02 0049	Photointerruptor - OS - 580213-703	19- 26
AW02 0049	Photointerruptor - OS - 580213-703	25- 8
AW03 0029	Fiber Cable - 800	23- 4
AX05 0055	DC Motor - DC 9W	19- 25
AX05 0055	DC Motor - DC 9W	23- 10
AX05 0057	Stepping Motor - DC24v 3.84W	23- 15
AX05 0095	Stepping Motor - CD 4.5W	13- 22
AX05 0096	Motor - DC 9W	13- 36
AX10 0021	Junction Gate Solenoid	21- 2
C101 1327	Timing Belt - PX146P2M	19- 29
C101 2445	Pressure Spring	21- 1

Part No.	Description	Page and Index No.
A010 5700	Sensor	17- 27
A028 7535	Antistatic Brush	11- 12
A028 7535	Antistatic Brush	15- 17
A028 7535	Antistatic Brush	17- 24
A300 2132	Guide Roller	13- 8
A300 2726	Worm Gear Shaft	23- 8
A300 2752	Spacer 8x12x12	17- 33
A300 3151	Support Bracket	21- 11
A300 3153	Safety Switch Bracket	7- 20
A300 3155	Stepped Screw - M25x32	7- 6
A300 3533	Upper Stay	11- 7
A300 3537	Slide Rail - Center	13- 7
A300 3539	Mounting Shaft	13- 21
A300 3551	Grip Stapler Unit	13- 31
A300 3611	Front Jogger Fence	11- 19
A300 3618	Antistatic Guide Seal	11- 39
A300 3621	Rear Jogger Fence	11- 18
A300 3626	Lower Guide Seal	11- 16
A300 3634	Spring Plate - Timing Belt	11- 1
A300 3635	Belt Clamp	11- 9
A300 3641	Fixing Plate	11- 32
A300 3646	Jogger Idler Bracket	11- 34
A300 3646	Jogger Idler Bracket	13- 32
A300 3661	Slider Guide Rod	11- 25
A300 3717	Slide Belt Holder - Stapler	13- 3
A300 3731	Slide Supporter	13- 9
A300 3732	Stapler Guide Rail	13- 33
A300 3733	Stapler Guide Rod	13- 1
A300 3736	Lift Up Spring	13- 6
A300 3757	Pad - 56x2.5x1	11- 21
A300 3759	Spring	11- 27
A300 3812	Spacer - 6x22x1.5	11- 3
A300 3812	Spacer - 6x22x1.5	13- 2
A300 3813	Shaft - 6x21.5	11- 29
A300 3815	Spring Plate	11- 33

Part No.	Description	Page and Index No.
A300 3816	Timing Belt - 900 S2M14	11- 31
A300 3822	Spacer - 11x15x1	13- 19
A300 3841	Position Sensor Bracket	11- 36
A300 3841	Position Sensor Bracket	13- 35
A300 3851	Positioning Roller Bracket	15- 8
A300 3858	Stepped Screw - M4	21- 15
A300 3865	Release Spring	21- 14
A353 1191	Bushing - 20x200	9- 19
A353 1192	Bushing - 5x328	25- 11
A353 2116	Paddle	15- 14
A353 2243	Lever Knob	7- 17
A353 2265	Decal - R1	7- 18
A353 2265	Decal - R1	31- 1
A353 3113	Pressure Spring	23- 14
A353 3151	Tighter Bracket	19- 22
A353 3172	Actuator Bracket	17- 2
A353 3173	Pressure Spring	17- 3
A353 3181	Exit Sensor Bracket	17- 5
A353 3192	Front Arm	17- 9
A353 3197	Rear Arm	17- 15
A353 3201	Exit Roller	17- 10
A353 3231	Bushing - 4x6x9mm	19- 4
A353 3271	Tray Shift Shaft	19- 14
A353 3272	Guide Roller	19- 16
A353 3341	Shift Drive Cam	19- 20
A353 3346	Shift Drive Shaft	19- 24
A353 3347	Shift Sensor Bracket	19- 27
A353 3351	Exit Driven Roller	17- 32
A353 3354	Driven Roller Holder	17- 26
A353 4311	Safety Switch Actuator	5- 9
A377 1182	Joint Lever	25- 5
A377 1186	Front Joint Bracket	5- 18
A377 1187	Rear Joint Bracket	5- 16
A377 2221	Tightener	21- 23
A377 5150	IC - TC11DG03AF-0071	29- 1

Part No.	Description	Page and Index No.
A379 1141	Right Stay	25- 1
A379 1161	Left Stay	25- 3
A379 1172	Upper Joint Bracket	21- 13
A379 1211	Upper Exit Stay	17- 4
A379 1225	Upper Sensor Actuator	17- 1
A379 1311	Joint Stay	25- 4
A379 1610	Main Motor - DC24V/15W	21- 6
A379 1615	Main Motor Bracket	21- 7
A379 1621	Tightener	21- 18
A379 1711	Motor Bracket	23- 17
A379 2111	Exit Rooler Shaft	17- 20
A379 2112	Exit Roller Ring	17- 11
A379 2115	Reverse Roller	17- 8
A379 2211	Exit Guide	17- 30
A379 2212	Driven Roller Shaft	17- 31
A379 2213	Exit Guide Bracket	17- 25
A379 2215	Exit Mylar	17- 29
A379 2311	Upper Guide Plate	7- 3
A379 2318	Upper Magnet Sheet	7- 4
A379 2322	Entrance Guide	7- 15
A379 2323	Upper Support Plate	7- 9
A379 2326	Supporting Entrance Guide	7- 16
A379 2329	Entrance Guide	5- 19
A379 2411	Lower Entrance Guide	9- 1
A379 2416	Entrance Sensor Bracket	9- 4
A379 2421	Vertical Transport Guide	9- 12
A379 2426	2nd Exit Lower Guide	9- 11
A379 2441	Exit Sensor Bracket	25- 9
A379 2511	Lower Guide Plate	15- 22
A379 2515	Scraper	15- 29
A379 2519	Supporting Lower Guide	15- 18
A379 2521	Exit Guide Plate	7- 2
A379 2523	Exit Guide Mylar	7- 1
A379 2525	Exit Guide Mylar - 2	7- 21
A379 2617	Paddle Roller	15- 15

Part No.	Description	Page and Index No.
A379 2631	Exit Transport Roller	15- 11
A379 2635	Front Positioning Roller	15- 12
A379 2636	Rear Positioning Roller	15- 13
A379 2711	Junction Gate	7- 7
A379 2715	Solenoid Bracket	21- 3
A379 2820	Positioning Roller Solenoid	21- 12
A379 3111	Shift Tray Guide	19- 6
A379 3121	Exit Stay	19- 8
A379 3131	Exit Roller Cover	19- 7
A379 3132	Switch Bracket	19- 3
A379 3133	Switch Lever	19- 2
A379 3141	End Fence	19- 5
A379 3191	End Fence Cover	19- 18
A379 3311	Front Shift Guide	19- 17
A379 3316	Shift Guide Roller	19- 31
A379 3321	Rear Shift Guide	19- 12
A379 3331	Shift Tray Base	19- 13
A379 3341	Shift Tray Holder	19- 10
A379 3351	Safety Switch Bracket	19- 9
A379 3491	Shift Tray Shaft	5- 3
A379 3611	Lift Drive Bracket	23- 7
A379 3711	Timing Belt Stopper	19- 11
A379 3731	Lift Drive Shaft	17- 21
A379 3811	Shift Drive Bracket	19- 23
A379 4127	Middle Guide Seal	11- 5
A379 4131	Jogger Fence Slider	11- 11
A379 4155	Jogger Motor Bracket	13- 24
A379 4251	Slide Holder	11- 26
A379 4255	Front Stapler Positioning Fence	11- 38
A379 4256	Rear Stapler Positioning Fence	11- 20
A379 4259	Positioning Fence Mylar	11- 6
A379 4261	Positioning Guide Plate	11- 35
A379 4271	Slide Motor Bracket	13- 29
A379 4331	Paper Feed Guide Plate	11- 30
A379 4335	Cushion - 2x35x165	11- 14

Part No.	Description	Page and Index No.
A379 4401	Upper Exit Shaft	11- 15
A379 4751	Decal - R1	31- 3
A379 4752	Decal - R2	9- 2
A379 4752	Decal - R2	31- 4
A379 4761	Decal - R2 - 19x29	15- 27
A379 4761	Decal - R2 - 19x29	31- 5
A379 5716	Paper Sensor Harness	17- 7
A379 5717	Shift Sensor Harness	19- 28
A379 5719	Exit Sensor Harness	17- 28
A379 5911	Upper Harness Bracket	23- 21
A379 5915	Spring Plate	7- 19
A379 6121	Upper Hinge	5- 10
A379 6131	Lower Hinge	5- 11
A379 6161	Front Supporting Cover	19- 1
A379 6225	Cover Angle	21- 10
A422 1078	Bushing - 6x12x4mm	11- 24
A548 2113	Motor Cushion	23- 18
A593 2916	Stapler Cover	13- 16
A607 5510	Stapler Harnss - 1	13- 25
A612 1121	Front Frame	13- 26
A612 2221	Lower Exit Guide	17- 22
A612 2425	Exit Lower Guide	9- 10
A612 2431	Transport Guide	9- 9
A612 3419	Large Shift Tray	5- 4
A612 3459	Small Shift Tray	5- 1
A612 3519	Front Tray Cover	5- 14
A612 3559	Rear Tray Cover	5- 5
A612 4140	Lower Cover	5- 12
A612 4140	Lower Cover	11- 28
A612 4763	Decal - 30x48	9- 20
A612 4763	Decal - 30x48	31- 6
A612 5701	Main Harness	23- 1
A612 5701	Main Harness	25- 10
A612 5702	Upper Limit Sensor Harness	19- 21
A612 5703	Safety Switch Harness	7- 24

Part No.	Description	Page and Index No.
A612 5703	Safety Switch Harness	23- 22
A612 5713	Exit Sensor Harness	23- 23
A612 6119	Cover- Front - Door	5- 8
A612 6159	Upper Inner Cover	5- 13
A612 6219	Upper Cover	5- 6
A612 6259	Cover - Left Upper	5- 2
A612 6321	Rear Supporting Cover	23- 20
A612 6419	Lower Left Cover	5- 15
5053 0447	Bushing - 6mm	7- 22
5053 0447	Bushing - 6mm	9- 18
5053 0447	Bushing - 6mm	11- 10
5053 0447	Bushing - 6mm	15- 4
5053 0447	Bushing - 6mm	17- 35
5201 2722	Bushing - M6x5	11- 13
5206 2671	Positioning Roller	15- 9
5316 3062	Cushion - Cutter	5- 17
5409 1855	Mounting Pin	7- 14
5409 1855	Mounting Pin	9- 8
5409 1855	Mounting Pin	13- 17
5413 1882	Stepped Screw	25- 6
5420 4860	Bushing - 8mm	17- 16
5447 2681	Snap Ring	9- 15
5447 2681	Snap Ring	15- 10
5875 2088	Shoulder Screw - M4	11- 2
5919 2127	Positioning Roller Pulley	15- 3
5919 2132	Positioning Roller Belt	15- 1
5920 2144	Spring - Lock	7- 10
5920 2144	Spring - Lock	9- 5
5920 2144	Spring - Lock	15- 23
5940 2641	Feed-in Solenoid Spring	21- 4

Part No.	Description	Page and Index No.
0313 0050B	Philips Pan Head Screw - M3x5	21-104
0313 0050B	Philips Pan Head Screw - M3x5	23-110
0313 0060B	Philips Pan Head Screw - M3x6	11-102
0313 0060B	Philips Pan Head Screw - M3x6	13-101
0313 0060B	Philips Pan Head Screw - M3x6	19-102
0313 0060B	Philips Pan Head Screw - M3x6	23-107
0313 0080W	Philips Pan Head Screw - M3x8	13-102
0313 0100B	Philips Pan Head Screw - M3x10	11-103
0313 0100B	Philips Pan Head Screw - M3x10	13-105
0313 0100B	Philips Pan Head Screw - M3x10	17-111
0313 0140B	Philips Pan Head Screw - M3x14	11-104
0314 0050B	Philips Pan Head Screw - M4x5	15-104
0314 0060B	Philips Pan Head Screw - M4x6	5-102
0314 0060B	Philips Pan Head Screw - M4x6	7-103
0314 0060B	Philips Pan Head Screw - M4x6	9-101
0314 0060B	Philips Pan Head Screw - M4x6	13-103
0314 0060B	Philips Pan Head Screw - M4x6	15-101
0314 0060B	Philips Pan Head Screw - M4x6	17-101
0314 0060B	Philips Pan Head Screw - M4x6	19-101
0314 0060B	Philips Pan Head Screw - M4x6	21-103
0314 0060B	Philips Pan Head Screw - M4x6	23-102
0314 0060B	Philips Pan Head Screw - M4x6	25-101
0314 0060W	Philips Pan Head Screw - M4x6	11-105
0314 0100B	Philips Pan Head Screw - M4x10	23-115
0314 0120B	Philips Pan Head Screw - M4x12	5-104
0314 0120B	Philips Pan Head Screw - M4x12	19-110
0315 0080B	Philips Pan Head Screw - M5x8	25-103
0344 0060F	Philips Truss Head Screw - M4x6	5-101
0344 0060F	Philips Truss Head Screw - M4x6	11-106
0344 0060F	Philips Truss Head Screw - M4x6	13-117
0344 0060F	Philips Truss Head Screw - M4x6	25-102
0344 0080F	Philips Truss Head Screw - M4x8	5-105
0353 0060B	Philips Pan Head Screw - M3x6	7-107
0353 0060B	Philips Pan Head Screw - M3x6	9-102
0353 0060F	Philips Truss Head Screw - M3x6	7-106

Part No.	Description	Page and Index No.
0414 0082B	Binding Self Tapping Screw - M4x8	5-103
0414 0082B	Binding Self Tapping Screw - M4x8	7-101
0414 0082B	Binding Self Tapping Screw - M4x8	15-103
0414 0082B	Binding Self Tapping Screw - M4x8	17-110
0452 3008W	Binding Self Tapping Screw - M3 X 8	9-104
0574 0040E	Hexagon Headless Set Screw - M4x4	13-104
0574 0040E	Hexagon Headless Set Screw - M4x4	21-107
0574 0040E	Hexagon Headless Set Screw - M4x4	23-101
0623 0120E	Spring Pin - M3x12	11-107
0633 0120G	Parallel Pin - 3x12	17-106
0633 0140G	Parallel Pin - 3x14	17-107
0720 0040B	Retaining Ring - M4	7-102
0720 0040B	Retaining Ring - M4	9-103
0720 0040B	Retaining Ring - M4	11-101
0720 0040B	Retaining Ring - M4	13-106
0720 0040B	Retaining Ring - M4	15-102
0720 0040B	Retaining Ring - M4	17-109
0720 0040B	Retaining Ring - M4	19-103
0720 0040B	Retaining Ring - M4	21-105
0720 0040B	Retaining Ring - M4	23-106
0720 0040E	Retaining Ring - M4	11-110
0720 0060B	Retaining Ring - M6	13-107
0720 0060B	Retaining Ring - M6	17-108
0720 0060B	Retaining Ring - M6	19-106
0720 0060B	Retaining Ring - M6	23-104
0740 3008	Ball Bearing - 8x22x7	13-108
0741 3506	Ball Bearing - 6x12x4mm	23-108
0802 5210	Tapping Screw - M3x8	7-105
0803 0017	Knob Screw - M4x6.5	13-113
0805 0088	Retaining Ring - M6	7-104
0805 0088	Retaining Ring - M6	17-105
0805 0088	Retaining Ring - M6	21-106
0806 5019	Timing Belt - 1005XL	19-104
0807 5056	Washer - 8.1mm	23-105
0951 3008W	Philips Screw Flat Washer - M3x8	13-116

Part No.	Description	Page and Index No.
0951 4006B	Philips Screw With Washer - M4x6	11-108
0951 4006B	Philips Screw With Washer - M4x6	13-109
0951 4006B	Philips Screw With Washer - M4x6	17-102
0951 4006B	Philips Screw With Washer - M4x6	19-105
0951 4006B	Philips Screw With Washer - M4x6	21-102
0951 4008B	Philips Screw With Washer - M4x8	11-109
0951 4008B	Philips Screw With Washer - M4x8	13-110
1102 4201	Connector - 2P	29-101
1102 4202	Connector - 3P	29-102
1102 4203	CT Header - 4P	29-103
1102 4204	CT Header - 5P	29-104
1102 4206	Connector - 7P	29-105
1102 4208	Connector - 9P	29-106
1102 4211	CT Header - 12P	29-107
1102 4212	CT Header - 15P	29-108
1102 4620	CT Header - 3P	29-109
1102 4623	CT Connector - 6P	29-110
1102 4624	CT Connector - 7P	29-111
1102 5003	Fiber Connector - DC1002 - 2P	29-112
1102 5007	CT Header - 14P	29-113
1102 5301	Connector - 2P	29-114
1102 5325	Connector - 2P	29-115
1103 1770	Connector - 4P	29-116
1104 0333	Fuse Holder	29-117
1104 0588	Dip Socket - 28P	29-118
1105 0005	Nylon Clamp - 3N	13-112
1105 0016	Nylon Clamp - 4N	13-118
1105 0200	Clamp	11-111
1105 0200	Clamp	13-115
1105 0200	Clamp	17-103
1105 0200	Clamp	19-107
1105 0200	Clamp	21-101
1105 0200	Clamp	25-104
1105 0234	Clamp	13-114
1105 0283	Clamp	13-111

Part No.	Description	Page and Index No.
1105 0283	Clamp	19-108
1105 0310	Wire Clamp	5-106
1105 0310	Wire Clamp	23-112
1105 0328	Harness Clamp - ES-0505	17-104
1105 0437	Locking Support - FGS-4S	23-111
1106 0193	Bushing - 7.9mm	23-109
1106 0289	Bushing - SR-5N-1	23-113
1106 0383	Supportor - P.C.B.	23-114
1107 0752	Fuse (Glass Case) - 5A - 250V	23-103
1107 0752	Fuse (Glass Case) - 5A - 250V	29-119
1204 1081	Microswitch	19-109
1204 1422	DIP Switch - 51D0401	29-120
1204 2188	Interlock Switch	7-108
1400 0423	Transistor - 2SA1121C	29-121
1400 0486	Transistor - 2SA1020	29-122
1400 0678	Transistor - FC112	29-123
1401 0200	Transistor - 2SD633	29-124
1401 0282	Transistor - 2SB1020	29-125
1401 0298	Transistor - 2SC2712Y	29-126
1402 0780	Diode - 200V - 1A - 11ES2	29-127
1402 0783	Red LED - GL3PR8	29-128
1402 0874	Diode - RL2Z	29-129
1403 0519	Photocoupler - TLP621	29-130
1407 1882	TTLIC - SN74LS373NS	29-131
1407 2218	TTLIC - SN74LS06NS	29-132
1407 2231	IC - TD62308AF	29-133
1407 2404	CMOS - LSI - M5M81C55FP-2	29-134
1407 3202	IC - 74HC00A	29-135
1407 3286	IC - TC74HC04AF	29-136
1407 3492	CPU -78C10AGF	29-137
1407 3756	Timer - TMP82C54M-2	29-138
1407 4137	IC - MM1035XF	29-139
1408 0397	Comparator - NJM2901M	29-140
1408 0398	Comparator - NJM2903M	29-141
1408 0538	IC - SI8301L	29-142

Part No.	Description	Page and Index No.
1408 0599	IC - M51971EP	29-143
1408 0827	IC - TA8429H	29-144
1408 1200	IC - STK681-050	29-145
1408 1201	IC - STK6711BMK4	29-146
1503 0347	Oscillator - 12MHZ	29-147
1503 0512	Oscillator - 3MHZ	29-148
1600 1026	Resistor Array - 1KP 1W 5%	29-149
1601 8148	Variable Resistor - 20K P 0.5W	29-150
1605 0339	Capacitor - 0.33 η F - +80-20%	29-151
1606 1348	Capacitor - 0.022 η F 50V	29-152
1607 0069	Fuse - BI02RN2-R62-PB	29-153
1611 4121	Resistor - 120 P 1/4T 5%	29-154
1611 4330	Resistor - 330 P 1/4T 5%	29-155
1630 3101	Resistor - 100P - 1/10W	29-156
1630 3102	Resistor - 1KP 1/10W 5%	29-157
1630 3103	Resistor - 10KP 1/10W 5%	29-158
1630 3104	Resistor - 100K P 1/10W 5%	29-159
1630 3105	Resistor - 1M P 5% 1/10W	29-160
1630 3152	Resistor - 1.5KP - 1/10W	29-161
1630 3201	Resistor - 200 P 1/10W 5%	29-162
1630 3202	Resistor - 2KP - 1/10W	29-163
1630 3222	Resistor - 2.2KP 1/10W 5%	29-164
1630 3223	Resistor - 22KP - 1/10W	29-165
1630 3302	Resistor - 3KP - 1/10W	29-166
1630 3330	Resistor - 33P 5% 1/10W	29-167
1630 3333	Resistor - 33K P 5% 1/10W	29-168
1630 3431	Resistor - 430P 5% - 1/10	29-169
1630 3472	Resistor - 4.7KP 1/10W 5%	29-170
1630 3473	Resistor - 47KP 1/10W 5%	29-171
1630 3511	Resistor - 510P 1/10W 5%	29-172
1630 3562	Resistor - 5.6K P 5% 1/10W	29-173
1630 3682	Resistor - 6.8P - 1/10W	29-174
1630 3753	Resistor - 75KP - 1/10W	29-175
1630 3821	Resistor - 820 P 5% 1/10W	29-176

Part No.	Description	Page and Index No.
1630 3822	Resistor - 8.2K P 1/10W 5%	29-177
1640 0102	Capacitor - 1000 η F - 20% - 10V	29-178
1640 0221	Capacitor - 220 η F - 20% 10V	29-179
1640 5100	Capacitor - 10 η F 20% 50V	29-180
1640 5101	Capacitor - 100 η F 20% 50V	29-181
1640 5109	Capacitor - 1 η F - 20% - 50V	29-182
1640 5339	Capacitor - 3.3 η F - 20% - 50V	29-183
1660 3101	Capacitor - 100PF 50V	29-184
1660 3102	Capacitor - 1000PF 5% 50V	29-185
1660 5103	Capacitor - 10000PF 10% 50V	29-186
1660 5472	Capacitor - 4700PF 50V	29-187
1660 7104	Capacitor - 100000PF 50V	29-188
1905 0003	UVEPROM - 256K - X8 - 150NS	29- 4