# **Product Manual**

# **DB35 Series**

ST3400832ACE ST3300831ACE ST3250823ACE ST3200826ACE



# **Product Manual**

# **DB35 Series**

ST3400832ACE ST3300831ACE ST3250823ACE ST3200826ACE



©2005, Seagate Technology LLC All rights reserved Publication number: 100347671, Rev. B May 2005

Seagate and Seagate Technology are registered trademarks of Seagate Technology LLC. SeaTools, SeaFONE, SeaBOARD, SeaTDD, and the Wave logo are either registered trademarks or trademarks of Seagate Technology LLC. Other product names are registered trademarks or trademarks of their owners.

Seagate reserves the right to change, without notice, product offerings or specifications. No part of this publication may be reproduced in any form without written permission of Seagate Technology LLC.

# Revision status summary sheet

Revision	Date	Sheets Affected
Rev. A	01/26/05	All.
Rev. B	05/16/05	Pages 6 and 7.

# Contents

1.0	Introdu	ıction	I
2.0	Drive s	pecifications	3
	2.1	Specification summary table	3
	2.2	Formatted capacity	
		2.2.1 LBA mode	
	2.3	Recording and interface technology 5	5
	2.4	Physical characteristics	
	2.5	Seek time	
	2.6	Start/stop times	
	2.7	Power specifications	
	2.1	2.7.1 Power consumption	
		2.7.2 Conducted noise	
		2.7.3 Voltage tolerance	
		2.7.4 Power-management modes	
	2.8	•	
	2.0	Environmental specifications    9      2.8.1    Ambient temperature	
		1 5	
		2.8.4 Altitude	
		2.8.5 Shock	
		2.8.6 Vibration	
	2.9	Acoustics	
	2.10	Electromagnetic immunity	
	2.11	Reliability	
	2.12	Agency certification	
		2.12.1 Safety certification 12	
		2.12.2 Electromagnetic compatibility	
		2.12.3 FCC verification	
	2.13	Environmental protection	
		2.13.1 European Union Restriction of Hazardous Substances (RoHS) 13	3
3.0	Config	uring and mounting the drive	5
	3.1	Handling and static discharge precautions 15	5
	3.2	Breather filter hole precautions	
	3.3	Jumper settings	
		3.3.1 Master/slave configuration	
		3.3.2 Cable-select option	
		3.3.3 Alternate capacity jumper	
		3.3.4 Ultra ATA/100 cable	
	3.4	Drive mounting	
4.0	ΔTΔ in	terface	
1.0	4.1	ATA interface signals and connector pins	
	4.1	4.1.1 Supported ATA commands	
		4.1.1       Supported ATA commands       22         4.1.2       Identify Device command       24	
		4.1.2         Identity Device command         24           4.1.3         Set Features command         27	
	-		
5.0	Seagat	e Technology support services 29	)

# List of Figures

Figure 1.	Typical 5V startup and operation current profile	8
Figure 2.	Typical 12V startup and operation current profile	8
Figure 3.	Breather filter hole location 1	16
Figure 4.	Master/slave jumper settings 1	17
Figure 5.	Ultra ATA cable connectors 1	18
Figure 6.	Mounting dimensions—top, side and end view 1	19
Figure 7.	I/O pins and supported ATA signals 2	21

# 1.0 Introduction

This manual describes the functional, mechanical and interface specifications for the following Seagate<sup>®</sup> DB35 model drives:

#### **DB35 Series**

- ST3400832ACE
- ST3300831ACE
- ST3250823ACE
- ST3200826ACE

These drives provide the following key features:

- Minimal acoustics for consumer storage usage profile.
- Bedroom quiet performance.
- Optimized power for consumer storage devices.
- Spinup current limited to a maximum of 2 amps.
- 7,200-RPM spindle speed
- 8-Mbyte buffer on: ST3400832ACE, ST3300831ACE, ST3250823ACE and ST3200826ACE.
- High instantaneous (burst) data transfer rates (up to 100 Mbytes per second) using Ultra DMA mode 5.
- Tunneling Giant magnetoresistive (TGMR) recording heads and EPRML technology, which provide the drives with increased areal density.
- State-of-the-art cache and on-the-fly error-correction algorithms.
- Full-track multiple-sector transfer capability without local processor intervention.
- 350 Gs nonoperating shock.
- Support for S.M.A.R.T. drive monitoring and reporting.
- Support for Read Multiple and Write Multiple commands.
- Support for autodetection of master/slave drives that use cable select (CSEL).
- SeaTools diagnostic software performs a drive self-test that eliminates unnecessary drive returns.
- The 3D Defense System<sup>™</sup>, which includes Drive Defense, Data Defense, and Diagnostic Defense, offers the industry's most comprehensive protection for disc drives.

# 2.0 Drive specifications

Unless otherwise noted, all specifications are measured under ambient conditions, at 25°C, and nominal power. For convenience, the phrases *the drive* and *this drive* are used throughout this manual to indicate ST3400832ACE, ST3300831ACE, ST3250823ACE and ST3200826ACE model drives.

## 2.1 Specification summary table

The specifications listed in this table are for quick reference. For details on specification measurement or definition, see the appropriate section of this manual.

#### Table 1: Drive specifications

Drive specification	ST3400832ACE	ST3300831ACE	ST3250823ACE	ST3200826ACE	
Formatted Gbytes (512 bytes/sector)	400	300	250	200	
Guaranteed sectors	781,422,768	586,072,368	488,397,168	390,721,968	
Bytes per sector	512	·	•	•	
Default sectors per track	63				
Default read/write heads	16				
Default cylinders	16,383				
Recording density, BPI (bits/in max)	763,000				
Track density, TPI (tracks/in max)	120,000				
Areal density, (Mbits/in <sup>2</sup> max)	91,560				
Spindle speed (RPM)	7,200	7,200			
Internal data transfer rate OD (Mbytes/sec max)	95				
Sustained data transfer rate OD (Mbytes/sec)	65				
I/O data-transfer rate (Mbytes/sec max)	100				
ATA data-transfer modes supported	PIO modes 0–4 Multiword DMA modes 0–2 Ultra DMA modes 0–5				
Cache buffer	8 Mbytes (8,192 kbyt	ies)			
Height (mm max)	26.11 mm (1.028 inches)				
Width (mm max)	101.85 mm (4.010 inches)				
Length (mm max)	146.99 mm (5.787 inches)				
Weight (typical)	635 grams (1.39 lb.)				
Average latency (msec)	4.16				
Power-on to ready (sec max)	15.5 sec				
Standby to ready (sec max)	14.0 sec				

Drive specification	ST3400832ACE	ST3300831ACE	ST3250823ACE	ST3200826ACE
Track-to-track seek time (msec typical)	0.8 (read), 1.0 (write)			•
Average seek (msec typical)	18 (read), 20 (write)			
Startup current (typical) 12V (peak)	2.0 amps			
Seek power (typical)	8.6 watts			
Operating (Consumer Storage Profile)	7.2 watts			
Idle mode (typical)	6.9 watts			
Standby mode (typical)	0.80 watts			
Sleep mode (typical)	0.80 watts			
Voltage tolerance (including noise)	5V ± 5% 12V ± 10%			
Ambient temperature	0° to 60°C (operating) -40° to 70°C (nonoper	rating)		
Temperature gradient (°C per hour max)	20°C (operating) 30°C (nonoperating)			
Relative humidity		5% to 90% (operating) 5% to 95% (nonoperating)		
Relative humidity gradient	30% per hour max			
Wet bulb temperature (°C max)	37.7 (operating) 40 (nonoperating)			
Altitude, operating	-60.96 m to 3,048 m (-200 ft. to 10,000+ ft.	-60.96 m to 3,048 m (-200 ft. to 10,000+ ft.)		
Altitude, nonoperating (below mean sea level, max)	-60.96 m to 12,192 m (-200 ft. to 40,000+ ft.	-60.96 m to 12,192 m (-200 ft. to 40,000+ ft.)		
Operational Shock (Gs max at 2 msec)	63	63		
Non-Operational Shock (Gs max at 2 msec)	300 Gs	300 Gs		
Vibration, operating	0.25 G acceleration			
Vibration, nonoperating	0.25 G (5–22 Hz) 5.0 Gs (22–350 Hz)			
Drive acoustics, sound power				
Idle* (bels)	2.6 (typical) 2.8 (max)			
Operational (bels)	2.8 (typical)         2.8 (typical)           3.0 (max)         3.0 (max)			
Nonrecoverable read errors	1 per 10 <sup>14</sup> bits read	-		
Service life	5 Years			
Contact start-stop cycles (25°C, 50% rel. humidity)	50,000	50,000		

\*During periods of drive idle, some offline activity may occur according to the S.M.A.R.T. specification, which may increase acoustic and power to operational levels.

# 2.2 Formatted capacity

Model	Formatted capacity	Guaranteed sectors	Bytes per sector
ST3400832ACE	400 Gbytes	781,422,768	512
ST3300831ACE	300 Gbytes	586,072,368	512
ST3250823ACE	250 Gbytes	488,397,168	512
ST3200826ACE	200 Gbytes	390,721,968	512

#### 2.2.1 LBA mode

When addressing these drives in LBA mode, all blocks (sectors) are consecutively numbered from 0 to n-1, where n is the number of guaranteed sectors as defined above.

See Section 4.1.2, "Identify Device command" (words 60-61 and 100-103) for additional information about 48bit addressing support of drives with capacities over 137 Gbytes.

# 2.3 Recording and interface technology

Interface	ATA
Recording method	16/17 EPRML
Recording density BPI (bits/inch max)	763,000
Track density TPI (tracks/inch max)	120,000
Areal density (Mbits/inch <sup>2</sup> max)	91,560
Spindle speed (RPM) (± 0.2%)	7,200
Internal data-transfer rate OD (Mbytes/sec max)	95
Sustained data transfer rate OD (Mbytes/sec max)	65.0
I/O data-transfer rate (Mbytes/sec max)	100 (Ultra DMA mode 5)
Interleave	1:1
Cache buffer	
ST3400832ACE, ST3300831ACE, ST3250823ACE and ST3200826ACE	8 Mbytes (8,192 kbytes)

# 2.4 Physical characteristics

Drive specification		
Maximum height		
	(mm) (inches)	26.11 1.028
Maximum width	(mm) (inches)	101.85 4.010 ± 0.010
Maximum length		
	(mm) (inches)	146.99 5.787
Typical weight		
	(grams) (pounds)	635 1.39

# 2.5 Seek time

Seek measurements are taken with nominal power at 25°C ambient temperature. All times are measured using drive diagnostics. The specifications in the table below are defined as follows:

- Track-to-track seek time is an average of all possible single-track seeks in both directions.
- Average seek time is a true statistical random average of at least 5,000 measurements of seeks between random tracks, less overhead.

Table 2:	Typical	seek times
----------	---------	------------

Typical seek times (msec)	Read	Write
Track-to-track	0.8	1.0
Average	18	20
Average latency:	4.16	4.16

**Note.** These drives are designed to consistently meet the seek times represented in this manual. Physical seeks, regardless of mode (such as track-to-track and average), are expected to meet or exceed the noted values. However, due to the manner in which these drives are formatted, benchmark tests that include command overhead or measure logical seeks may produce results that vary from these specifications.

## 2.6 Start/stop times

Power-on to Ready (sec)	15.5 (max)
Standby to Ready (sec)	14.0 (max)
Ready to spindle stop (sec)	10 (max)

# 2.7 Power specifications

The drive receives DC power (+5V and +12V) through a four-pin standard drive power connector.

#### 2.7.1 Power consumption

Power requirements for the drives are listed in the table on page 7. Typical power measurements are based on an average of drives tested, under nominal conditions, using +5.0V and +12.0V input voltage at 25°C ambient temperature.

#### • Spinup power

Spinup power is measured from the time of power-on to the time that the drive spindle reaches operating speed.

Seek mode

During seek mode, the read/write actuator arm moves toward a specific position on the disc surface and does not execute a read or write operation. Servo electronics are active. Seek mode power represents the worst-case power consumption, using only random seeks with read or write latency time. This mode is not typical and is provided for worst-case information.

#### • Operating power and current

Operating power is measured using a standard Consumer Storage Profile.

#### Idle mode power

Idle mode power is measured with the drive up to speed, with servo electronics active and with the heads in a random track location.

#### • Standby mode

During Standby mode, the drive accepts commands, but the drive is not spinning, and the servo and read/ write electronics are in power-down mode.

#### Table 3: DC power requirements

Power dissipation (watts) Example: ST3400832ACE	Average (watts, 25° C)	5V typ amps	12V typ amps
Spinup	—	—	2.0 (peak)
Idle	6.9	0.353	0.519
Operating (Consumer Storage Profile)	7.2	0.500	0.400
Seeking	8.6	0.318	0.585
Standby	0.80	0.045	0.013
Sleep	0.80	0.045	0.013

# 2.7.1.1 Typical current profile


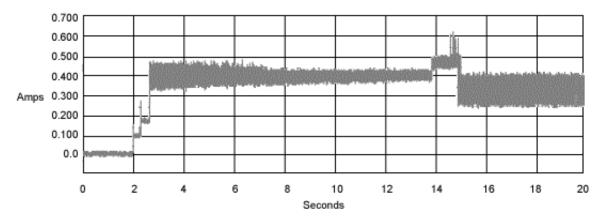


Figure 1 Typical 5V startup and operation current profile

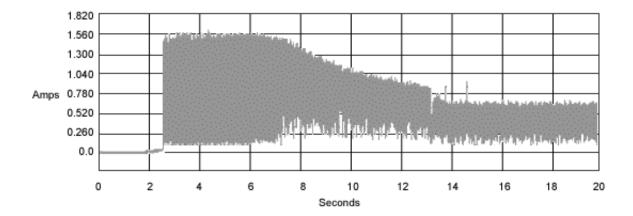

#### Figure 2 Typical 12V startup and operation current profile

#### 2.7.2 Conducted noise

Input noise ripple is measured at the host system power supply across an equivalent 80-ohm resistive load on the +12 volt line or an equivalent 15-ohm resistive load on the +5 volt line.

- Using 12-volt power, the drive is expected to operate with a maximum of 120 mV peak-to-peak square-wave injected noise at up to 10 MHz.
- Using 5-volt power, the drive is expected to operate with a maximum of 100 mV peak-to-peak square-wave injected noise at up to 10 MHz.
- **Note.** Equivalent resistance is calculated by dividing the nominal voltage by the typical RMS read/write current.

#### 2.7.3 Voltage tolerance

Voltage tolerance (including noise):

5V ± 5% 12V ± 10%

## 2.7.4 Power-management modes

The drive provides programmable power management to provide greater energy efficiency. In most systems, you can control power management through the system setup program. The drive features the following power-management modes:

Power mode	Heads	Spindle	Buffer
Active	Tracking	Rotating	Enabled
Idle	Tracking	Rotating	Enabled
Standby	Parked	Stopped	Enabled
Sleep	Parked	Stopped	Disabled

#### Active mode

The drive is in Active mode during the read/write and seek operations.

#### Idle mode

The buffer remains enabled, and the drive accepts all commands and returns to Active mode any time disc access is necessary.

#### Standby mode

The drive enters Standby mode when the host sends a Standby Immediate command. If the host has set the standby timer, the drive can also enter Standby mode automatically after the drive has been inactive for a specifiable length of time. The standby timer delay is established using a Standby or Idle command. In Standby mode, the drive buffer is enabled, the heads are parked and the spindle is at rest. The drive accepts all commands and returns to Active mode any time disc access is necessary.

#### Sleep mode

The drive enters Sleep mode after receiving a Sleep command from the host. In Sleep mode, the drive buffer is disabled, the heads are parked and the spindle is at rest. The drive leaves Sleep mode after it receives a Hard Reset or Soft Reset from the host. After receiving a reset, the drive exits Sleep mode and enters Standby mode with all current translation parameters intact.

#### • Idle and Standby timers

Each time the drive performs an Active function (read, write or seek), the standby timer is reinitialized and begins counting down from its specified delay times to zero. If the standby timer reaches zero before any drive activity is required, the drive makes a transition to Standby mode. In both Idle and Standby mode, the drive accepts all commands and returns to Active mode when disc access is necessary.

#### 2.8 Environmental specifications

#### 2.8.1 Ambient temperature

Ambient temperature is defined as the temperature of the environment immediately surrounding the drive. Actual drive case temperature should not exceed 69°C (156°F) within the operating ambient conditions for standard models. Recommended measurement locations are shown in See Figure 6 on page 19.

Above 1,000 feet (305 meters), the maximum temperature is derated linearly to 44°C (112°F) at 10,000 feet (3,048 meters).

Operating:	0° to 60°C (32° to 140°F)
Nonoperating:	–40° to 70°C (–40° to 158°F)

## 2.8.2 Temperature gradient

Operating:	20°C per hour (68°F per hour max), without condensation
Nonoperating:	30°C per hour (86°F per hour max)

#### 2.8.3 Humidity

#### 2.8.3.1 Relative humidity

Operating:	5% to 90% noncondensing (30% per hour max)
Nonoperating:	5% to 95% noncondensing (30% per hour max)

#### 2.8.3.2 Wet bulb temperature

Operating:	37.7°C (99.9°F max)
Nonoperating:	40°C (104°F max)

#### 2.8.4 Altitude

Operating:	-60.96 m to 3,048 m (-200 ft. to 10,000+ ft.)
Nonoperating:	-60.96 m to 12,192 m (-200 ft. to 40,000+ ft.)

#### 2.8.5 Shock

All shock specifications assume that the drive is mounted securely with the input shock applied at the drive mounting screws. Shock may be applied in the X, Y or Z axis.

#### 2.8.5.1 Operating shock

These drives comply with the performance levels specified in this document when subjected to a maximum operating shock of 63 Gs based on half-sine shock pulses of 2 msec. Shocks should not be repeated more than two times per second.

#### 2.8.5.2 Nonoperating shock

The nonoperating shock level that the drive can experience without incurring physical damage or degradation in performance when subsequently put into operation is 300 Gs based on a nonrepetitive half-sine shock pulse of 2 msec duration.

#### 2.8.6 Vibration

All vibration specifications assume that the drive is mounted securely with the input vibration applied at the drive mounting screws. Vibration may be applied in the X, Y or Z axis.

#### 2.8.6.1 Operating vibration

The following table lists the maximum vibration levels that the drive may experience while meeting the performance standards specified in this document.

5–350 Hz	0.25 G acceleration (zero to peak)
----------	------------------------------------

#### 2.8.6.2 Nonoperating vibration

The following table lists the maximum nonoperating vibration that the drive may experience without incurring physical damage or degradation in performance when subsequently put into operation.

5–22 Hz	0.25 G
22–350 Hz	5.0 Gs

#### 2.9 Acoustics

Drive acoustics are measured as overall A-weighted acoustic sound power levels (no pure tones). All measurements are consistent with ISO document 7779. Sound power measurements are taken under essentially free-field conditions over a reflecting plane. For all tests, the drive is oriented with the cover facing upward.

**Note.** For seek mode tests, the drive is placed in seek mode only. The number of seeks per second is defined by the following equation:

(Number of seeks per second = 0.4 / (average latency + average access time)

#### Table 4: Operating acoustics

Acoustic mode

Models	Idle	Operational
ST3400832ACE	2.6 bels (typ) 2.8 bels (max)	2.8 bels (typ) 3.0 bels (max)
ST3300831ACE ST3250823ACE ST3200826ACE	2.4 bels (typ) 2.7 bels (max)	2.8 bels (typ) 3.0 bels (max)

#### 2.10 Electromagnetic immunity

When properly installed in a representative host system, the drive operates without errors or degradation in performance when subjected to the radio frequency (RF) environments defined in the following table:

#### Table 5: Radio frequency environments

Test	Description	Performance level	Reference standard
Electrostatic discharge	Contact, HCP, VCP: ± 4 kV; Air: ± 8 kV	В	EN 61000-4-2: 95
Radiated RF immunity	80 to 1,000 MHz, 3 V/m, 80% AM with 1 kHz sine 900 MHz, 3 V/m, 50% pulse modulation @ 200 Hz	A	EN 61000-4-3: 96 ENV 50204: 95
Electrical fast transient	$\pm$ 1 kV on AC mains, $\pm$ 0.5 kV on external I/O	В	EN 61000-4-4: 95
Surge immunity	± 1 kV differential, ± 2 kV com- mon, AC mains	В	EN 61000-4-5: 95
Conducted RF immunity	150 kHz to 80 MHz, 3 Vrms, 80% AM with 1 kHz sine	A	EN 61000-4-6: 97

Voltage dips, interrupts	0% open, 5 seconds 0% short, 5 seconds 40%, 0.10 seconds 70%, 0.01 seconds	C C C B	EN 61000-4-11: 94
--------------------------	-------------------------------------------------------------------------------------	------------------	-------------------

# 2.11 Reliability

Nonrecoverable read errors	1 per 10 <sup>14</sup> bits read, max.
Contact start-stop cycles	50,000 cycles (at nominal voltage and temperature, with 60 cycles per hour and a 50% duty cycle)
Service Life	5 Years
Preventive maintenance	None required

# 2.12 Agency certification

#### 2.12.1 Safety certification

The drives are recognized in accordance with UL 1950 and CSA C22.2 (950) and meet all applicable sections of IEC950 and EN 60950 as tested by TUV North America.

#### 2.12.2 Electromagnetic compatibility

Hard drives that display the CE mark comply with the European Union (EU) requirements specified in the Electromagnetic Compatibility Directive (89/336/EEC). Testing is performed to the levels specified by the product standards for Information Technology Equipment (ITE). Emission levels are defined by EN 55022, Class B and the immunity levels are defined by EN 55024.

Seagate uses an independent laboratory to confirm compliance with the EC directives specified in the previous paragraph. Drives are tested in representative end-user systems. Although CE-marked Seagate drives comply with the directives when used in the test systems, we cannot guarantee that all systems will comply with the directives. The drive is designed for operation inside a properly designed enclosure, with properly shielded I/O cable (if necessary) and terminators on all unused I/O ports. Computer manufacturers and system integrators should confirm EMC compliance and provide CE marking for their products.

#### Korean RRL

If these drives have the Korea Ministry of Information and Communication (MIC) logo, they comply with paragraph 1 of Article 11 of the Electromagnetic Compatibility control Regulation and meet the Electromagnetic Compatibility (EMC) Framework requirements of the Radio Research Laboratory (RRL) Ministry of Information and Communication Republic of Korea.

These drives have been tested and comply with the Electromagnetic Interference/Electromagnetic Susceptibility (EMI/EMS) for Class B products. Drives are tested in a representative, end-user system by a Korean-recognized lab.

- EUT name (model numbers): ST3400832ACE, ST3300831ACE, ST3250823ACE and ST3200826ACE.
- Certificate numbers: ST3400832ACE ST3300831ACE ST3250823ACE ST3200826ACE
- E-H011-04-4534 (B) E-H011-04-4534 (B) E-H011-04-4533 (B) E-H011-04-4533 (B)
- Trade name or applicant: Seagate Technology
- Manufacturing date: November 2004
- Manufacturer/nationality: Singapore and China

## Australian C-Tick (N176)

If these models have the C-Tick marking, they comply with the Australia/New Zealand Standard AS/NZS3548 1995 and meet the Electromagnetic Compatibility (EMC) Framework requirements of the Australian Communication Authority (ACA).

## 2.12.3 FCC verification

These drives are intended to be contained solely within a personal computer or similar enclosure (not attached as an external device). As such, each drive is considered to be a subassembly even when it is individually marketed to the customer. As a subassembly, no Federal Communications Commission verification or certification of the device is required.

Seagate Technology LLC has tested this device in enclosures as described above to ensure that the total assembly (enclosure, disc drive, motherboard, power supply, etc.) does comply with the limits for a Class B computing device, pursuant to Subpart J, Part 15 of the FCC rules. Operation with noncertified assemblies is likely to result in interference to radio and television reception.

Radio and television interference. This equipment generates and uses radio frequency energy and if not installed and used in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception.

This equipment is designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television, which can be determined by turning the equipment on and off, you are encouraged to try one or more of the following corrective measures:

- Reorient the receiving antenna.
- Move the device to one side or the other of the radio or TV.
- Move the device farther away from the radio or TV.
- Plug the computer into a different outlet so that the receiver and computer are on different branch outlets.

If necessary, you should consult your dealer or an experienced radio/television technician for additional suggestions. You may find helpful the following booklet prepared by the Federal Communications Commission: *How to Identify and Resolve Radio-Television Interference Problems*. This booklet is available from the Superintendent of Documents, U.S. Government Printing Office, Washington, DC 20402. Refer to publication number 004-000-00345-4.

#### 2.13 Environmental protection

Seagate designs its products to meet environmental protection requirements worldwide, including regulations restricting certain chemical substances.

#### 2.13.1 European Union Restriction of Hazardous Substances (RoHS)

A new law, the European Union Restriction of Hazardous Substances (RoHS) directive, will restrict the presence of chemical substances, including Lead (Pb), in electronic products effective July 2006. The directive's requirements have not been finalized. This drive is manufactured with components and materials that are expected to comply with the RoHS directive when the directive takes effect.

# 3.0 Configuring and mounting the drive

This section contains the specifications and instructions for configuring and mounting the drive.

# 3.1 Handling and static discharge precautions

After unpacking, and before installation, the drive may be exposed to potential handling and electrostatic discharge (ESD) hazards. Observe the following standard handling and static-discharge precautions:

#### Caution:

- Keep the drive in the electrostatic discharge (ESD) bag until you are ready for installation.
- Before handling the drive, put on a grounded wrist strap, or ground yourself frequently by touching the metal chassis of a computer that is plugged into a grounded outlet. Wear a grounded wrist strap throughout the entire installation procedure.
- Handle the drive by its edges or frame only.
- The drive is extremely fragile—handle it with care. Do not press down on the drive top cover.
- Always rest the drive on a padded, antistatic surface until you mount it in the computer.
- Do not touch the connector pins or the printed circuit board.
- Do not remove the factory-installed labels from the drive or cover them with additional labels. Removal voids the warranty. Some factory-installed labels contain information needed to service the drive. Other labels are used to seal out dirt and contamination.

# 3.2 Breather filter hole precautions

This section contains information regarding the precautions which should be taken regarding the breather filter hole in Seagate hard disc drives. Proper precautions should be taken to ensure full functionality and prevent possible damage to the drive.

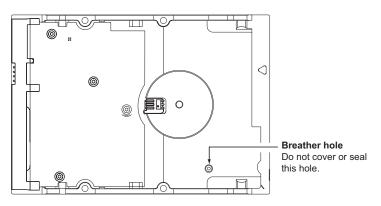


Figure 3 Breather filter hole location

## Caution: Do not cover, seal, or insert any object into this hole.

This hole has two purposes:

- To allow condensation inside the hard disc to escape
- To allow air pressure inside the hard disc to equalize with ambient pressure
- **Note.** If this hole is covered, sealed, or penetrated by any object, drive reliability may be compromised and could lead to permanent damage—doing so voids the warranty.

# 3.3 Jumper settings

## 3.3.1 Master/slave configuration

The options jumper block shown in Figure 4 is used to configure the drive for operation. It is the 8-pin dual header between the interface connector and the power connector. Use the following settings to configure the drive as a master or a slave.

**Master or single drive.** The drive is configured at the factory for a master or single-drive operation with a jumper set on pins 7 and 8.

Drive as slave. Remove all jumpers.

#### Drive as master with a non-ATA-compatible slave.

Use this jumper setting only if the drive does not work as a master with no jumpers installed.

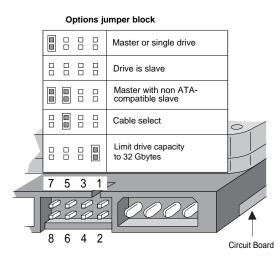


Figure 4 Master/slave jumper settings

#### 3.3.2 Cable-select option

Computers that use cable select determine the master and slave drives by selecting or deselecting pin 28, CSEL, on the interface bus. Master and slave drives are determined by their physical position on the cable. To enable cable select, set a jumper on pins 5 and 6 as shown in Figure 4. Refer to your computer manual to determine whether your computer supports this option.

#### 3.3.3 Alternate capacity jumper

Some older computers may "hang" at startup if their BIOS detects a disc drive with a capacity greater than 32 Gbytes. This limits the drive's capacity to 32 Gbytes when the alternate capacity jumper is used. To access the full capacity of the drive, you can:


- Update the BIOS
- Use third-party software such as DiscWizard<sup>™</sup> or Disk Manager
- Use a third-party host adapter

For drives with capacities greater than 32 Gbytes, the alternate capacity jumper changes the total available LBA sectors to 32 Gbytes to solve issues with some BIOS during power on. The ATA Set Features subcommand "F1<sub>H</sub> Report Full Capacity Available" causes Identify Data words 60 and 61 to report the full capacity. See Section 4.1.3 on page 27 for more details on the Set Features command.

Windows XP, Windows Me, Windows 98 or newer versions are needed to support drives with capacities greater than 32 Gbytes.

# 3.3.4 Ultra ATA/100 cable

An 80-conductor 40-pin cable is required to run Ultra DMA mode 3, mode 4 and mode 5. This cable uses evennumbered conductors connected to the ground pins to improve signal integrity.

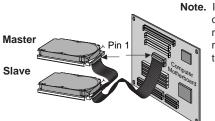

Note. If you are using a 40-pin, 80-conductor cable, attach the blue connector to the motherboard, the black connector to the master drive, and the gray connector to the slave.

#### Figure 5 Ultra ATA cable connectors

**Note.** The drive supports both host and drive cable detection. The host detects the 80-conductor cable by sampling pin 34, CBLID–, on the interface bus. The drive detects the 80-conductor cable by sensing a capacitor at the host side through the CBLID– signal. The result is reported in a Fast Rise Detected bit (bit 13 of word 93 in the Identify drive parameter block).

# 3.4 Drive mounting

You can mount the drive in any orientation using four screws in the side-mounting holes or four screws in the bottom-mounting holes. See Figure 6 for drive mounting dimensions. Follow these important mounting precautions when mounting the drive:

- Allow a minimum clearance of 0.030 inches (0.76 mm) around the entire perimeter of the drive for cooling.
- Use only 6-32 UNC mounting screws.
- Do not overtighten the mounting screws (maximum torque: 6 inch-lb.).
- Do not use a drive interface cable that is more than 18 inches long.

#### Notes:

**1.** Dimensions are shown in inches (mm).

2 Dimensions per SFF-8301 specification.

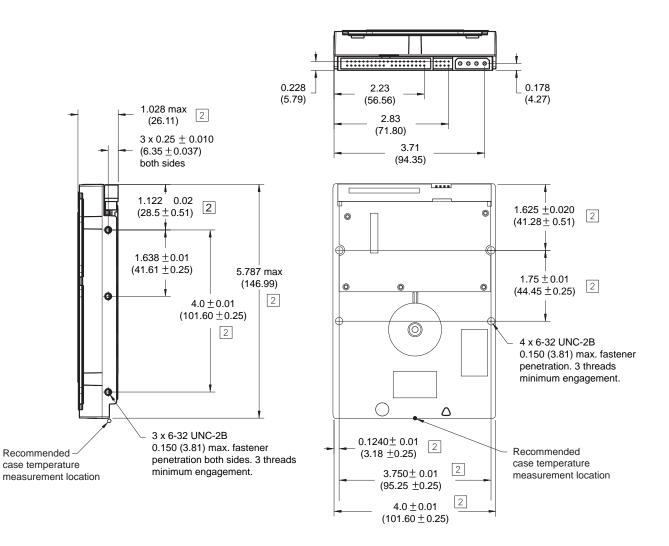


Figure 6 Mounting dimensions—top, side and end view

# 4.0 ATA interface

These drives use the industry-standard ATA task file interface that supports 16-bit data transfers. It supports ATA programmed input/output (PIO) modes 0–4; multiword DMA modes 0–2, and Ultra DMA modes 0–5. The drive also supports the use of the IORDY signal to provide reliable high-speed data transfers.

You can use a daisy-chain cable to connect two drives to a single AT host bus. For detailed information about the ATA interface, refer to the draft of AT Attachment with Packet Interface Extension (ATA/ATAPI-7), NCITS T13 1410D, subsequently referred to as the Draft ATA-7 Standard.

# 4.1 ATA interface signals and connector pins

Figure 7 summarizes the signals on the ATA interface connector that the drive supports. For a detailed description of these signals, refer to the *Draft ATA-7 Standard*.

Drive pin #	Signal name		Host pi	n # and signal description
1	- Reset			lardware Reset
2	Ground		2 0	Ground
3	◄ DD7	+	3 F	lost Data Bus Bit 7
4	DD8			lost Data Bus Bit 8
5	◄ DD6			lost Data Bus Bit 6
6	DD9			lost Data Bus Bit 9
7				lost Data Bus Bit 5
8	➡ DD10			lost Data Bus Bit 10
9		•		lost Data Bus Bit 4
10				lost Data Bus Bit 11
11				lost Data Bus Bit 3
12	▲ DD12 ▲ DD2			lost Data Bus Bit 12
13	► DD2 ► DD13			lost Data Bus Bit 2 lost Data Bus Bit 13
15	→ DD13			lost Data Bus Bit 1
16	✓ DD14			lost Data Bus Bit 14
17	✓ DD14			lost Data Bus Bit 0
18				Device Data (15:0)
19	Ground			Ground
20	(removed)		20 (1	No Pin)
21	DMARQ			MA Request
22	Ground			Ground
23	DIOW_			Device I/O Write:
				Stop Ultra DMA Burst
24	Ground			Ground
25	DIOR_			evice I/O Read:
	← HDMARDY_		F	lost Ultra DMA Ready:
26	Ground			lost Ultra DMA Data Strobe
26 27	IORDY			Fround O Channel Ready
21	DDMARDY-			Device Ultra DMA Ready
	DSTROBE	-	Ē	Device Ulta DMA Data Strobe
28	CSEL			Cable Select
29	DMACK-			MA Acknowledge
30	Ground		30 🤆	Ground
31	INTRQ		31 C	Device Interrupt
32	IOCS16-			leserved
33	► DA1			lost Address Bus Bit 1
34	PDIAG- CBLID-			Passed Diagnostics
35	■ DA0		35 D	Cable Assembly Type Identifier Device Address (2:0)
36	DA0		36 L	Device Address (2:0)
37	CS0-		37 C	Chip Select (1:0)
38	ČŠ1-			Chip Select (1:0)
39	DASP-	<b>&gt;</b>	39 E	Prive Active/Slave Present
40	Ground		40 0	Ground
L	1			
Pins 28, 34 a	ind 39 are used for mas	ster-slave	commu	nication (details shown below).
Drive 1 (slav	e) Drive 0 (ma	ster)		Host
28	28	····/	– cse	
34	→ 34		- PDIA	
39	→ 39		- DAS	
<b></b>				

Figure 7 I/O pins and supported ATA signals

# 4.1.1 Supported ATA commands

The following table lists ATA-standard commands that the drive supports. For a detailed description of the ATA commands, refer to the *Draft ATA-7 Standard*. See "S.M.A.R.T. commands" on page 27 for details and sub-commands used in the S.M.A.R.T. implementation.

Table 6:	Supported ATA commands
----------	------------------------

Command name	Command code (in hex)
Check Power Mode	98 <sub>H</sub> or E5 <sub>H</sub>
Device Configuration Freeze Lock	B1 <sub>H</sub> / C1 <sub>H</sub>
Device Configuration Identify	B1 <sub>H</sub> / C2 <sub>H</sub>
Device Configuration Restore	B1 <sub>H</sub> / C0 <sub>H</sub>
Device Configuration Set	B1 <sub>H</sub> / C3 <sub>H</sub>
Device Reset	08 <sub>H</sub>
Download Microcode	92 <sub>H</sub>
Execute Device Diagnostics	90 <sub>H</sub>
Flush Cache	E7 <sub>H</sub>
Flush Cache Extended	EA <sub>H</sub>
Format Track	50 <sub>H</sub>
Identify Device	ECH
Idle	97 <sub>H</sub> or E3 <sub>H</sub>
Idle Immediate	95 <sub>H</sub> or E1 <sub>H</sub>
Initialize Device Parameters	91 <sub>H</sub>
Read Buffer	E4 <sub>H</sub>
Read DMA	C8 <sub>H</sub>
Read DMA Extended	25 <sub>H</sub>
Read DMA Without Retries	C9 <sub>H</sub>
Read Log Ext	2F <sub>H</sub>
Read Multiple	C4 <sub>H</sub>
Read Multiple Extended	29 <sub>H</sub>
Read Native Max Address	F8 <sub>H</sub>
Read Native Max Address Extended	27 <sub>H</sub>
Read Sectors	20 <sub>H</sub>
Read Sectors Extended	24 <sub>H</sub>
Read Sectors Without Retries	21 <sub>H</sub>
Read Verify Sectors	40 <sub>H</sub>
Read Verify Sectors Extended	42 <sub>H</sub>
Read Verify Sectors Without Retries	41 <sub>H</sub>
Recalibrate	10 <sub>H</sub>

Command name	Command code (in hex)
Security Disable Password	F6 <sub>H</sub>
Security Erase Prepare	F3 <sub>H</sub>
Security Erase Unit	F4 <sub>H</sub>
Security Freeze	F5 <sub>H</sub>
Security Set Password	F1 <sub>H</sub>
Security Unlock	F2 <sub>H</sub>
Seek	70 <sub>H</sub>
Set Features	EF <sub>H</sub>
Set Max Address	F9 <sub>H</sub>
Note: Individual Set Max Address commands are identified by the value placed in the Set Max Features regis- ter as defined to the right.	Address: 00 <sub>H</sub> Password: 01 <sub>H</sub> Lock: 02 <sub>H</sub> Unlock: 03 <sub>H</sub> Freeze Lock: 04 <sub>H</sub>
Set Max Address Extended	37 <sub>H</sub>
Set Multiple Mode	C6 <sub>H</sub>
Sleep	99 <sub>H</sub> or E6 <sub>H</sub>
S.M.A.R.T. Disable Operations	B0 <sub>H</sub> / D9 <sub>H</sub>
S.M.A.R.T. Enable/Disable Autosave	B0 <sub>H</sub> / D2 <sub>H</sub>
S.M.A.R.T. Enable Operations	B0 <sub>H</sub> / D8 <sub>H</sub>
S.M.A.R.T. Execute Offline	B0 <sub>H</sub> / D4 <sub>H</sub>
S.M.A.R.T. Read Attribute Thresholds	B0 <sub>H</sub> / D1 <sub>H</sub>
S.M.A.R.T. Read Data	B0 <sub>H</sub> / D0 <sub>H</sub>
S.M.A.R.T. Read Log Sector	B0 <sub>H</sub> / D5 <sub>H</sub>
S.M.A.R.T. Return Status	B0 <sub>H</sub> / DA <sub>H</sub>
S.M.A.R.T. Save Attribute Values	B0 <sub>H</sub> / D3 <sub>H</sub>
S.M.A.R.T. Write Log Sector	B0 <sub>H</sub> / D6 <sub>H</sub>
Standby	96 <sub>H</sub> or E2 <sub>H</sub>
Standby Immediate	94 <sub>H</sub> or E0 <sub>H</sub>
Write Buffer	E8 <sub>H</sub>
Write DMA	CA <sub>H</sub>
Write DMA Extended	35 <sub>H</sub>
Write DMA Without Retries	CB <sub>H</sub>
Write Log Extended	3F <sub>H</sub>
Write Multiple	C5 <sub>H</sub>
Write Multiple Extended	39 <sub>H</sub>
Write Sectors	30 <sub>H</sub>

Command name	Command code (in hex)
Write Sectors Without Retries	31 <sub>H</sub>
Write Sectors Extended	34 <sub>H</sub>

# 4.1.2 Identify Device command

The Identify Device command (command code  $EC_H$ ) transfers information about the drive to the host following power up. The data is organized as a single 512-byte block of data, whose contents are shown in the Table 6 on page 22. All reserved bits or words should be set to zero. Parameters listed with an "x" are drive-specific or vary with the state of the drive. See Section 2.0 on page 3 for default parameter settings.

The following commands contain drive-specific features that may not be included in the Draft ATA-7 Standard.

Word	Description	Value
0	Configuration information: • Bit 15: 0 = ATA; 1 = ATAPI • Bit 7: removable media • Bit 6: removable controller • Bit 0: reserved	0C5A <sub>H</sub>
1	Number of logical cylinders	16,383
2	ATA-reserved	0000 <sub>H</sub>
3	Number of logical heads	16
4	Retired	0000 <sub>H</sub>
5	Retired	0000 <sub>H</sub>
6	Number of logical sectors per logical track: 63	003F <sub>H</sub>
7–9	Retired	0000 <sub>H</sub>
10–19	Serial number: (20 ASCII characters, 0000 <sub>H</sub> = none)	ASCII
20	Retired	0000 <sub>H</sub>
21	Retired	0400 <sub>H</sub>
22	Obsolete	0000 <sub>H</sub>
23–26	Firmware revision (8 ASCII character string, padded with blanks to end of string)	x.xx
27–46	Drive model number (40 ASCII characters, padded with blanks to end of string)	ST3400832ACE ST3300831ACE ST3250823ACE ST3200826ACE
47	(Bits 7–0) Maximum sectors per interrupt on Read multiple and Write multiple (16)	8010 <sub>H</sub>
48	Reserved	0000 <sub>H</sub>
49	Standard Standby timer, IORDY supported and may be disabled	2F00 <sub>H</sub>
50	ATA-reserved	0000 <sub>H</sub>
51	PIO data-transfer cycle timing mode	0200 <sub>H</sub>
52	Retired	0200 <sub>H</sub>
53	Words 54–58, 64–70 and 88 are valid	0007 <sub>H</sub>

Word	Description	Value
54	Number of current logical cylinders	xxxx <sub>H</sub>
55	Number of current logical heads	xxxx <sub>H</sub>
56	Number of current logical sectors per logical track	xxxx <sub>H</sub>
57–58	Current capacity in sectors	xxxx <sub>H</sub>
59	Number of sectors transferred during a Read Multiple or Write Multiple command	xxxx <sub>H</sub>
60–61	Total number of user-addressable LBA sectors available (see Section 2.2 for related information) *Note: The maximum value allowed in this field is: 0FFFFFFh (268,435,455 sectors, 137 Gbytes). Drives with capacities over 137 Gbytes will have 0FFFFFFh in this field and the actual number of user- addressable LBAs specified in words 100-103. This is required for drives that support the 48-bit addressing feature.	ST3400832ACE = 0FFFFFFh* ST3300831ACE = 0FFFFFFh* ST3250823ACE = 0FFFFFFh* ST3200826ACE = 0FFFFFFFh*
62	Retired	0000 <sub>H</sub>
63	Multiword DMA active and modes supported (see note following this table)	xx07 <sub>H</sub>
64	Advanced PIO modes supported (modes 3 and 4 supported)	0003 <sub>H</sub>
65	Minimum multiword DMA transfer cycle time per word (120 nsec)	0078 <sub>H</sub>
66	Recommended multiword DMA transfer cycle time per word (120 nsec)	0078 <sub>H</sub>
67	Minimum PIO cycle time without IORDY flow control (240 nsec)	00F0 <sub>H</sub>
68	Minimum PIO cycle time with IORDY flow control (120 nsec)	0078 <sub>H</sub>
69–74	ATA-reserved	0000 <sub>H</sub>
75	Queue depth	0000 <sub>H</sub>
76–79	SATA-reserved	xxxx <sub>H</sub>
80	Major version number	007E <sub>H</sub>
81	Minor version number	0000 <sub>H</sub>
82	Command sets supported	346B <sub>H</sub>
83	Command sets supported	7D01 <sub>H</sub>
84	Command sets support extension	4003 <sub>H</sub>
85	Command sets enabled	34 <i>xx</i> <sub>H</sub>
86	Command sets enabled	3xxx <sub>H</sub>
87	Command sets enable extension	4003 <sub>H</sub>
88	Ultra DMA support and current mode (see note following this table)	xx3F <sub>H</sub>
89	Security erase time	0000 <sub>H</sub>
90	Enhanced security erase time	0000 <sub>H</sub>
92	Master password revision code	FFFE <sub>H</sub>
93	Hardware reset value (see description following this table)	xxxx <sub>H</sub>
95–99	ATA-reserved	0000 <sub>H</sub>

Word	Description	Value
100–103	Total number of user-addressable LBA sectors available (see Section 2.2 for related information) These words are required for drives that support the 48-bit addressing feature. Maximum value: 0000FFFFFFFFFFFFh.	ST3400832ACE = 781,422,768 ST3300831ACE = 586,072,368 ST3250823ACE = 488,397,168 ST3200826ACE = 390,721,968
104–127	ATA-reserved	0000 <sub>H</sub>
128	Security status	0001 <sub>H</sub>
129–159	Seagate-reserved	xxxx <sub>H</sub>
160–254	ATA-reserved	0000 <sub>H</sub>
255	Integrity word	xxA5 <sub>H</sub>

Note. Advanced Power Management (APM) and Automatic Acoustic Management (AAM) features are not supported

Note. See the bit descriptions below for words 63, 88, and 93 of the Identify Drive data:

	escription (if bit is set to 1)			
Bit	Word 63			
0	Multiword DMA mode 0 is supported.			
1	Multiword DMA mode 1 is supported.			
2	Multiword DMA mode 2 is supported.			
8	Multiword DMA mode 0 is currently active.			
9	Multiword DMA mode 1 is currently active.			
10	Multiword DMA mode 2 is currently active.			
Bit	Word 88			
0	Ultra DMA mode 0 is supported.			
1	Ultra DMA mode 1 is supported.			
2	Ultra DMA mode 2 is supported.			
3	Ultra DMA mode 3 is supported.			
4	Ultra DMA mode 4 is supported.			
8	Ultra DMA mode 0 is currently active.			
9	Ultra DMA mode 1 is currently active.			
10	Ultra DMA mode 2 is currently active.			
11	Ultra DMA mode 3 is currently active.			
12	Ultra DMA mode 4 is currently active.			
13	Ultra DMA mode 5 is currently active.			
Bit	Word 93			
13	1 = 80-conductor cable detected, CBLID above VIH 0 = 40-conductor cable detected, CBLID below VIL			

#### 4.1.3 Set Features command

This command controls the implementation of various features that the drive supports. When the drive receives this command, it sets BSY, checks the contents of the Features register, clears BSY and generates an interrupt. If the value in the register does not represent a feature that the drive supports, the command is aborted. Power-on default has the read look-ahead and write caching features enabled. The acceptable values for the Features register are defined as follows:

02 <sub>H</sub>	Enable write cache (default).				
03 <sub>H</sub>	Set transfer mode (based on value in Sector Count register).				
	Sector Count register values:				
	00 <sub>H</sub>	00 <sub>H</sub> Set PIO mode to default (PIO mode 2).			
	01 <sub>H</sub>	Set PIO mode to default and disable IORDY (PIO mode 2).			
	08 <sub>H</sub>	PIO mode 0			
	09 <sub>H</sub> PIO mode 1				
	0A <sub>H</sub> PIO mode 2           0B <sub>H</sub> PIO mode 3           0C <sub>H</sub> PIO mode 4 (default)           20 <sub>H</sub> Multiword DMA mode 0           21 <sub>H</sub> Multiword DMA mode 1				
	22 <sub>H</sub> Multiword DMA mode 2       40 <sub>H</sub> Ultra DMA mode 0				
	41 <sub>H</sub>	Ultra DMA mode 1			
	42 <sub>H</sub>	Ultra DMA mode 2			
	43 <sub>H</sub>	Ultra DMA mode 3			
	44 <sub>H</sub>	Ultra DMA mode 4			
	45 <sub>H</sub>	Ultra DMA mode 5			
55 <sub>H</sub>	Disable read look-ahead (read cache) feature.				
82 <sub>H</sub>	Disable write cache.				
AA <sub>H</sub>	Enable read look-ahead (read cache) feature (default).				
F1 <sub>H</sub>	Report full capacity available				

**Note.** At power-on, or after a hardware or software reset, the default values of the features are as indicated above.

#### 4.1.4 S.M.A.R.T. commands

S.M.A.R.T. provides near-term failure prediction for disc drives. When S.M.A.R.T. is enabled, the drive monitors predetermined drive attributes that are susceptible to degradation over time. If self-monitoring determines that a failure is likely, S.M.A.R.T. makes a status report available to the host. Not all failures are predictable. S.M.A.R.T. predictability is limited to the attributes the drive can monitor. For more information on S.M.A.R.T. commands and implementation, see the *Draft ATA-7 Standard*.

SeaTools diagnostic software activates a built-in drive self-test (DST S.M.A.R.T. command for D4<sub>H</sub>) that eliminates unnecessary drive returns. The diagnostic software ships with all new drives and is also available at: <u>http://seatools.seagate.com</u>.

This drive is shipped with S.M.A.R.T. features disabled. You must have a recent BIOS or software package that supports S.M.A.R.T. to enable this feature. The table below shows the S.M.A.R.T. command codes that the drive uses.

Code in features register	S.M.A.R.T. command
D0 <sub>H</sub>	S.M.A.R.T. Read Data
D1 <sub>H</sub>	Vendor-specific
D2 <sub>H</sub>	S.M.A.R.T. Enable/Disable Attribute Autosave
D3 <sub>H</sub>	S.M.A.R.T. Save Attribute Values
D4 <sub>H</sub>	S.M.A.R.T. Execute Off-line Immediate (runs DST)
D5 <sub>H</sub>	S.M.A.R.T. Read Log Sector
D6 <sub>H</sub>	S.M.A.R.T. Write Log Sector
D7 <sub>H</sub>	Vendor-specific
D8 <sub>H</sub>	S.M.A.R.T. Enable Operations
D9 <sub>H</sub>	S.M.A.R.T. Disable Operations
DA <sub>H</sub>	S.M.A.R.T. Return Status

Note. If an appropriate code is not written to the Features Register, the command is aborted and 0x04 (abort) is written to the Error register.

### 5.0 Seagate Technology support services

#### **Online Services**

#### Internet

**www.seagate.com** for information about Seagate products and services. Worldwide support is available 24 hours daily by e-mail for your questions.

Presales Support: <u>www.seagate.com/support/email/email\_presales.html</u> or Presales@Seagate.com Technical Support: <u>www.seagate.com/support/email/email\_disc\_support.html</u> or DiscSupport@Seagate.com

#### mySeagate

<u>my.seagate.com</u> is the industry's first Web portal designed specifically for OEMs and distributors. It provides self-service access to critical applications, personalized content and the tools that allow our partners to manage their Seagate account functions. Submit pricing requests, orders and returns through a single, password-protected Web interface—anytime, anywhere in the world.

#### reseller.seagate.com

<u>reseller.seagate.com</u> supports Seagate resellers with product information, program benefits and sales tools. You may register for customized communications that are not available on the web. These communications contain product launch, EOL, pricing, promotions and other channel-related information. To learn more about the benefits or to register, go to <u>reseller.seagate.com</u>, any time, from anywhere in the world.

### **Automated Phone Services**

**SeaFONE**<sup>®</sup> (1-800-SEAGATE) is the Seagate toll-free number (1-800-732-4283) to access our automated directory assistance for Seagate Service Center support options. International callers can reach this service by dialing +1-405-324-4770.

### **Seagate Service Centers**

#### **Presales Support**

Our Presales Support staff can help you determine which Seagate products are best suited for your specific application or computer system, as well as drive availability and compatibility.

#### **Technical Support**

If you need help installing your drive, consult your system's documentation or contact the dealer's support services department for assistance specific to your system. Seagate technical support is also available to assist you online at <u>support.seagate.com</u> or through one of our call centers. Have your system configuration information and your drive's "ST" model number available.

**SeaTDD<sup>™</sup> (+1-405-324-3655)** is a telecommunications device for the deaf (TDD). You can send questions or comments 24 hours daily and exchange messages with a technical support specialist during normal business hours for the call center in your region.

### **Customer Service Operations**

#### Warranty Service

Seagate offers worldwide customer support for Seagate drives. Seagate distributors, OEMs and other direct customers should contact their Seagate Customer Service Operations (CSO) representative for warranty-related issues. Resellers or end users of drive products should contact their place of purchase or one of the Seagate CSO warranty centers for assistance. Have your drive's "ST" model number and serial number available.

#### **Authorized Service Centers**

In some locations outside the US, you can contact an Authorized Service Center for service.

### **USA/Canada/Latin America Support Services**

### **Seagate Service Centers**

Presales Support Call Center Americas	<b>Toll-free</b> 1-877-271-3285 <sup>1</sup>	<b>Direct dial</b> +1-405-324-4730 <sup>1</sup>	<b>FAX</b> +1-405-324-4704	
<b>Technical Support Call Center</b> Americas	<b>Toll-free</b> 1-800-SEAGATE <sup>2</sup>	<b>Direct dial</b> +1-405-324-4700 <sup>2</sup>	<b>FAX</b> +1-405-324-3339	
Customer Service Operations				
Warranty Service Call Center USA, Canada, Mexico and Latin America	<b>Toll-free</b> 1-800-468-3472 <sup>3</sup>	Direct dial —	<b>FAX / E-mail</b> +1-956-664-4725	
Brazil Jabil Inudstrial Do Brasil LTDA <sup>4</sup>	_	+55-11-4191-4761	+55-11-4191-5084 SeagateRMA.br@jabil.com	

<sup>1</sup>Hours of operation are 8:00 A.M. to 11:45 A.M. and 1:00 P.M. to 6:00 P.M., Monday through Friday (Central time) <sup>2</sup>Hours of operation are 8:00 A.M. to 8:00 P.M., Monday through Friday (Central time) <sup>3</sup>Hours of operation are 8:00 A.M. to 5:00 P.M., Monday through Friday (Central time) <sup>4</sup>Authorized Service Center

### **European Support Services**

For presales and technical support in Europe, dial the Seagate Service Center toll-free number for your specific location. If your location is not listed here, dial our presales and technical support call center at +1-405-324-4714 from 8:00 A.M. to 11:45 A.M. and 1:00 P.M. to 5:00 P.M. (Central Europe time) Monday through Friday. The presales and technical support call center is located in Oklahoma City, USA.

For European warranty service, dial the toll-free number for your specific location. If your location is not listed here, dial our European CSO warranty center at +31-20-316-7222 from 8:30 A.M. to 5:00 P.M. (Central Europe time) Monday through Friday. The CSO warranty center is located in Amsterdam, The Netherlands.

### **Seagate Service Centers**

#### **Toll-Free Support Numbers**

<b>Call Center</b> Austria	Presales and Technical Support 0 800-20 12 90	Warranty Service 0 800-20 12 90
Belgium Denmark	00 800-47324283 (00 800-4SEAGATE) 00 800-47324283	00 800-47324289 00 800-47324289
France	00 800-47324283	00 800-47324289
Germany	00 800-47324283	00 800-47324289
Ireland	00 800-47324283	00 800-47324289
Italy	00 800-47324283	00 800-47324289
Netherlands	00 800-47324283	00 800-47324289
Norway	00 800-47324283	00 800-47324289
Poland	00 800-311 12 38	00 800-311 12 38
Spain	00 800-47324283	00 800-47324289
Sweden	00 800-47324283	00 800-47324289
Switzerland	00 800-47324283	00 800-47324289
Turkey	00 800-31 92 91 40	00 800-31 92 91 40
United Kingdom	00 800-47324283	00 800-47324289

#### FAX Services—All Europe (toll call)

Technical Support	+1-405-324-3339
Warranty Service	+31-20-653-3513

### Africa/Middle East Support Services

For presales and technical support in Africa and the Middle East, dial our presales and technical support call center at +1-405-324-4714 from 8:00 A.M. to 11:45 A.M. and 1:00 P.M. to 5:00 P.M. (Central Europe time) Monday through Friday. The presales and technical support call center is located in Oklahoma City, USA.

For warranty service in Africa and the Middle East, dial our European CSO warranty center at +31-20-316-7222 from 8:30 A.M. to 5:00 P.M. (Central Europe time) Monday through Friday, or send a FAX to +31-20-653-3513. The CSO warranty center is located in Amsterdam, The Netherlands.

### **Asia/Pacific Support Services**

For Asia/Pacific presales and technical support, dial the toll-free number for your specific location. The Asia/ Pacific toll-free numbers are available from 6:00 A.M. to 10:45 A.M. and 12:00 P.M. to 6:00 P.M. (Australian Eastern time) Monday through Friday, except as noted. If your location is not listed here, direct dial one of our technical support locations.

Warranty service is available from 9:00 A.M. to 6:00 P.M. April through October, and 10:00 A.M. to 7:00 P.M. November through March (Australian Eastern time) Monday through Friday.

#### **Seagate Service Centers**

Call Center	Toll-free	Direct dial	FAX
Australia	1800-14-7201	—	_
China (Mandarin) <sup>1, 4</sup>	800-810-9668	+86-10-6225-5336	—
Hong Kong	800-90-0474	_	—
Hong Kong (Cantonese) <sup>1, 4</sup>	001-800-0830-1730	—	—
India <sup>2, 4</sup>	1-600-33-1104	_	—
Indonesia	001-803-1-003-2165	—	—
Japan <sup>3, 4</sup>	0034 800 400 554	—	—
Malaysia	1-800-80-2335	—	—
New Zealand	0800-443988	_	—
Singapore	800-1101-150	_	+65-6488-7525
Taiwan (Mandarin) <sup>1, 4</sup>	00-800-0830-1730	_	—
Thailand	001-800-11-0032165	_	_

### **Customer Service Operations**

Warranty Service			
Call Center	Toll-free	Direct dial	FAX
Asia/Pacific	_	+65-6485-3595	+65-6485-4860
Australia	1800-12-9277	—	—
India <sup>4</sup>	_	+91-44-821-6164	+91-44-827-2461

<sup>1</sup>Hours of operation are 8:30 A.M. to 5:30 P.M., Monday through Friday (Australian Western time).

•••

<sup>&</sup>lt;sup>2</sup>Hours of operation are 9:00 A.M. to 6:00 P.M., Monday through Saturday.

<sup>&</sup>lt;sup>3</sup>Hours of operation are 9:30 A.M. to 6:30 P.M., Monday through Friday (Japan time).

<sup>&</sup>lt;sup>4</sup>Authorized Service Center

# Index

## Numerics

3D Defense System 1

## A

acoustics 11 Active mode 9 agency certification (regulatory) 12 alternate capacity jumper 17 altitude 10 ambient conditions 3 ambient temperature 6, 9 areal density 1, 5 ATA interface 21 ATA-standard commands 22 Australian C-Tick 13 autodetection 1 average seek time 6

## В

BIOS 17 BPI 5 breather filter hole precautions 16 buffer 5 burst 1

## С

cable 18 cable select 1 cable-select option 17 cache 1, 5 case temperature 9 CE mark 12 certification 12 Check Power Mode 22 chemical substances 13 commands 22 compliance 12 conducted noise 8 conducted RF immunity 11 configuring the drive 15 connector pins 21 connectors 18 contact start-stop cycles 12 CSA C22.2 (950) 12 CSEL 17 C-Tick 13 current profile 8 cycles 12

## D

Data Defense 1 data-transfer rates 1 DC power 7 density 5 Device Configuration Freeze Lock 22 Device Configuration Identify 22 Device Configuration Restore 22 Device Configuration Set 22 Device Reset 22 Diagnostic Defense 1 diagnostic software 1, 28 DiscWizard 17 Disk Manager 17 dissipation 7 Download Microcode 22 Drive Defense 1 drive diagnostics 6 drive monitoring 1 drive self-test 1, 28 **DST 28** 

## Ε

electrical fast transient 11 electromagnetic compatibility 12 Electromagnetic Compatibility Directive 12 electromagnetic immunity 11 electrostatic discharge 11 EMC compliance 12 EN 60950 12 enclosures 13 Environmental protection 13 environmental specifications 9 EPRML 1, 5 error-correction algorithms 1 errors 12 European Union 12 European Union Restriction of Hazardous Substances 13 Execute Device Diagnostics 22

## F

failure prediction 27 FCC verification 13 Features register 27 Flush Cache 22 Flush Cache Extended 22 Format Track 22 formatted capacity 5 frequency 11

## G

guaranteed sectors 5

### Η

handling 15 heads 1 height 6 humidity 10

## I

I/O data-transfer rate 5 Identify Device 22 Identify Device command 24 Idle 7, 22 Idle and Standby timers 9 Idle Immediate 22 Idle mode 9 Idle mode power 7 IEC950 12 Information Technology Equipment 12 Initialize Device Parameters 22 interface 5, 21 interface signals 21 interference 13 interleave 5 internal data-transfer rate OD 5 ISO document 7779 11

## J

jumper settings 17

## Κ

Korean RRL 12

### L

LBA mode 5 Lead 13 length 6

### Μ

maintenance 12 master 17 master/slave 1 Master/slave configuration 17 maximum temperature 9 measurement locations 9 modes 21 monitoring 1 mounting the drive 15, 18

### Ν

noise 8 nominal power 3 nonoperating shock 10 nonoperating vibration 11 nonrecoverable read errors 12

## 0

operating 7 operating power and current 7 operating shock 10 operating vibration 10 orientation 18

### Ρ

physical characteristics 6 pins 21 PIO 21 power consumption 7 power dissipation 7 power management 9 power specifications 7 power-management modes 9 Power-on to Ready 6 precautions 18 preventive maintenance 12 programmable power management 9

## R

radiated RF immunity 11 radio and television interference 13 radio frequency 11 random track location 7 Read Buffer 22 Read DMA 22 Read DMA Extended 22 Read DMA without Retries 22 read errors 12 Read Log Ext 22 Read Multiple 1, 22 Read Multiple Extended 22 Read Native Max Address 22 Read Native Max Address Extended 22 Read Sectors 22 Read Sectors Extended 22 Read Sectors Without Retries 22 Read Verify Sectors 22 Read Verify Sectors Extended 22 Read Verify Sectors Without Retries 22 Recalibrate 22 recording and interface technology 5 recording density 5 recording heads 1

recording method 5 register 27 relative humidity 10 reliability 12 resistance 8 resistive load 8 RF 11 RoHS 13

### S

S.M.A.R.T. commands 27 S.M.A.R.T. Disable Operations 23 S.M.A.R.T. drive monitoring 1 S.M.A.R.T. Enable/Disable Autosave 23 S.M.A.R.T. Enagle Operations 23 S.M.A.R.T. Execute Offline 23 S.M.A.R.T. Read Attribute Thresholds 23 S.M.A.R.T. Read Data 23 S.M.A.R.T. Read Log Sector 23 S.M.A.R.T. Return Status 23 S.M.A.R.T. Save Attribute Values 23 S.M.A.R.T. Write Log sector 23 safety certification 12 screws 18 SeaTools 1, 28 sectors 5 Security Disable Password 23 Security Erase Prepare 23 Security Erase Unit 23 Security Freeze 23 Security Set Password 23 Security Unlock 23 Seek 23 seek mode 7 seek time 6 Seeking 7 Service Life 12 servo electronics 7 Set Features 23 Set Features command 27 Set Max Address 23 Set Max Address Extended 23 Set Multiple Mode 23 shock 10 signals 21 single-track seeks 6 slave 17 Sleep 7, 23 Sleep mode 9 sound 11 specifications 3 spindle speed 5 Spinup 7 spinup power 7 Standby 7, 23

Standby Immediate 23 Standby mode 7, 9 Standby to Ready 6 start/stop times 6 start-stop cycles 12 static-discharge precautions 15 stop times 6 subassembly 13 support services 29 surge immunity 11

### Т

technical support services 29 temperature 9 temperature gradient 10 TGMR 1 timers 9 track density 5 track-to-track seek time 6 TUV North America 12

## U

UL 1950 12 Ultra ATA/100 18 Ultra DMA 18

### V

vibration 10 voltage 8 voltage dips, interrupts 12 voltage tolerance 8

### W

weight 6 wet bulb temperature 10 width 6 Write Buffer 23 Write DMA 23 Write DMA Extended 23 Write DMA Without Retries 23 Write Log Extended 23 Write Multiple 1, 23 Write Multiple Extended 23 Write Sectors 23 Write Sectors Extended 24 Write Sectors Without Retries 24

Seagate

Seagate Technology LLC 920 Disc Drive, Scotts Valley, California 95066-4544, USA Publication Number: 100347671, Rev. B, Printed in U.S.A.