


AIR FILTER REPLACEMENT

Removing the Supply Unit

- Before you start set the DC OUTPUT switch to OFF, also switch the mains supply off preferably.
- Loosen the four knurled screws at the front panel; pull out the supply unit towards the front.

Changing the air filter mat

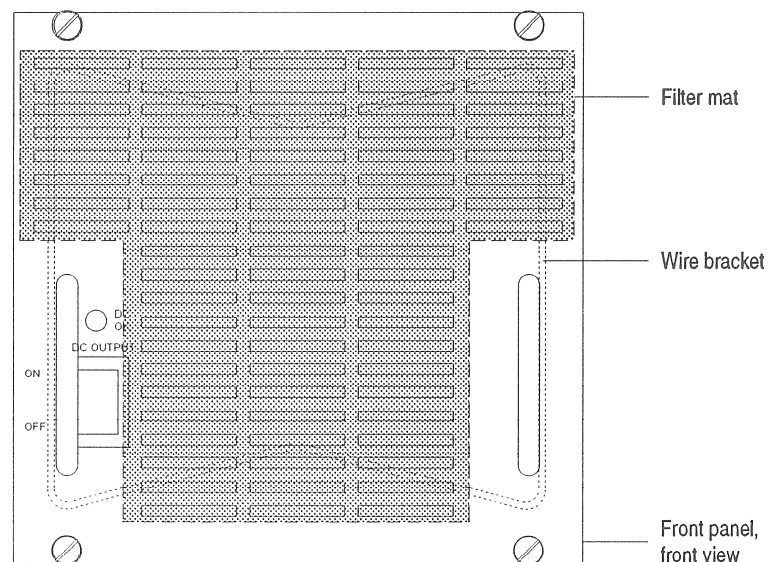

- Place the supply unit onto your working surface in a way that the front panel is directed towards you.
- The wire bracket which fixes the filter mat is hooked into four recesses; first unhook at the upper right, then at the upper left.
- Now the filter mat can be pulled out in upward direction.
- For inserting the new filter mat tilt the supply unit to the left. Carefully lift the lower part of the wire bracket by a small amount with an appropriate tool (e.g. screwdriver); slide the new filter mat in under the bracket. Make sure that all the air vents are covered by the filter mat and readjust it, if necessary.
- Bring the supply unit in an upright position again and hook the wire bracket first at the left, then at the right-hand side.
- *Verify that all the vents are covered by the filter mat.*

Reinstalling the Supply Unit


- Carefully insert the supply unit into the rack.
- *Never apply sheer force* if the connector contacts do not find their way easily; check the path to the female contact points inside the rack, it might be blocked by a foreign object.
- Retighten the four knurled screws at the front panel.

NETZTEIL-STAUBFILTER WECHSELN

Ausbau der Supply Unit

- Vor dem Ausbau den Schalter DC OUTPUT auf OFF stellen, vorzugsweise Netz ausschalten.
- 4 Rändelschrauben an der Front lösen, Netzteil nach vorne herausziehen.

Wechsel der Staubfiltermatte

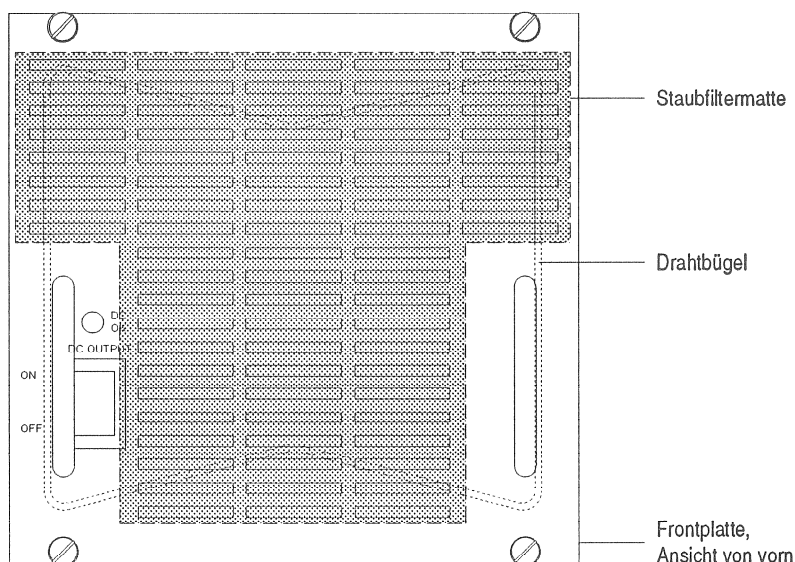

- Legen Sie das Netzteil so auf die Arbeitsfläche, dass die Frontplatte zu Ihnen weist.
- Der Halter für die Staubfiltermatte (Drahtbügel) ist in vier Haken eingehängt; erst rechts oben, danach links oben aushängen.
- Nun lässt sich die Staubfiltermatte nach oben herausziehen.
- Zum Einsetzen der neuen Staubfiltermatte das Netzteil nach links kippen und den unteren Teil des Drahtbügels mit einem geeigneten Werkzeug (z.B. Schraubendreher) leicht anheben; Staubfiltermatte darunterschieben, so dass alle Lüftungsschlitze von ihr bedeckt sind.
- Netzteil wieder in aufrechte Lage bringen und den Drahtbügel erst links, anschliessend rechts oben einhängen.
- *Vergewissern Sie sich, dass die Staubfiltermatte alle Lüftungsschlitze bedeckt.*

Einbau der Supply Unit

- Netzteil vorsichtig von vorne ins Rack schieben.
- Steckverbindungen: Falls die Steckkontakte ihren Weg nicht von selbst finden, keinesfalls Gewalt anwenden. Kontrollieren Sie, ob der Weg zu den Buchsen (im Rack) eventuell durch einen Fremdkörper versperrt wird.
- 4 Rändelschrauben an der Front festdrehen.

Prepared and edited by
Studer Professional Audio AG
Technical Documentation
Althardstrasse 30
CH-8105 Regensdorf-Switzerland

Copyright by Studer Professional Audio AG
Printed in Switzerland

Subject to change without prior notice
as technological progress may warrant

Studer is a registered trade mark of
Studer Professional Audio AG, Regensdorf

Order No. 10.27.4400 (ED 0798)