PROwatt[™] 300 DC to AC Power Inverter

Owner's Guide



About Xantrex

Xantrex Technology Inc. is a world-leading supplier of advanced power electronics and controls with products from 50 watt mobile units to 1 MW utility-scale systems for wind, solar, batteries, fuel cells, microturbines and backup power applications in both grid-connected and stand-alone systems. Xantrex products include inverters, battery chargers, programmable power supplies, and variable speed drives that convert, supply, control, clean and distribute electrical power.

Trademarks

PROwatt is a trademark and Statpower is a registered trademark of Xantrex International. Xantrex is a registered trademark of Xantrex Technology Inc.

© 2000 Xantrex International, All rights reserved

Notice of copyright

PROwatt 300 Owner's Guide © January 2001 Xantrex International.

Disclaimer

While every precaution has been taken to ensure the accuracy of the contents of this guide, Xantrex International assumes no responsibility for errors or omissions. Note as well that specifications and product functionality may change without notice.

Date and Revision

January 2001, Revision 1

Part number

445-0109-01-01

Contact Information

Web: www.xantrex.com

Email: support.prowatt@xantrex.com

Phone: 1-800-670-0707 Fax: 1-800-994-7828

Contents

Introduction	
Important safety information	5
Warnings and cautions	5
Additional guidelines	6
Connecting and Operating the PROwatt 300	7
PROwatt 300 Features	
Connecting the PROwatt 300	8
Location	
Loads less than 150 watts	9
Loads exceeding 150 watts	9
Operating the PROwatt 300	12
Operating guidelines	12
Interference with Electronic Equipment	13
Battery Operating Time	15
Troubleshooting	16
Warranty Information	
Returning a product	
Out of Warranty Service	
Specifications	24
Other Products from Xantrex	25

1 Introduction

Thank you for purchasing the PROwatt 300 Power Inverter. The PROwatt 300 is part of a family of advanced high-performance power inverters from Xantrex, the leader in the field of high-frequency inverter design. Connecting to the 12 volt outlet in your vehicle or boat or directly to your battery for loads over 150 watts, the PROwatt 300 efficiently and reliably powers a wide variety of household AC products, such as TVs and VCRs, laptop computers, camcorder and cell phone chargers, compact fluorescent lights, soldering irons, and other similar products. The PROwatt 300 employs reliable solid state power electronics for years of safe, trouble-free operation and includes automatic safety monitoring circuitry to protect it from inadvertent overload conditions. Read this guide before connecting the PROwatt 300 and save it for future reference.

The main topics covered in this guide are:

- Important safety information
- Instructions for connecting and operating the inverter
- Warranty and service information

2 Important safety information

Incorrect connection or misuse of the PROwatt 300 may result in danger to or hazardous conditions for both users and equipment. Read these safety instructions and pay special attention to all Caution and Warning statements throughout the guide.

Warning statements identify conditions that may result in personal injury or loss of life.

Caution statements identify conditions or practices that may result in damage to PROwatt 300 or to other equipment.

Warnings and cautions



Warning! Shock hazard. Keep away from children.

The PROwatt 300 generates the same potentially lethal AC power as a normal household wall outlet. Treat the outlet with respect!



Warning! Heated surface

The PROwatt 300 housing may become uncomfortably warm, reaching 140° F (60° C) under extended high power operation. Ensure that at least two inches (5 cm) of air surround the unit. During operation, keep it away from materials that may be affected by high temperatures.



Caution! Do not connect the PROwatt 300 to any AC wiring or AC product in which the AC neutral is connected to the AC ground.



Caution! Do not use the PROwatt 300 with the following appliances:

- Small battery-operated appliances such as rechargeable flashlights, some rechargeable shavers, and night lights that are plugged directly into an AC receptacle to recharge.
- Battery chargers used with certain power tool battery packs. These chargers have a warning label stating that dangerous voltages are present at the charger battery terminals.

Additional guidelines

- Do not insert foreign objects into the inverter's outlets.
- Do not, under any circumstances, connect the PROwatt 300 to power utility AC distribution wiring.
- Do not use the PROwatt 300 in temperatures over 100° F (40° C).
- Do not expose the PROwatt 300 to water, rain, snow or spray.

Failure to follow the above safety instructions may result in personal injury and/or damage to the PROwatt 300. It may also void the warranty on the product.

3 Connecting and Operating the PROwatt 300

This section describes the PROwatt 300 inverter and provides procedures for connecting it and using it safely.

PROwatt 300 Features

Figure 1 shows the AC panel of the PROwatt 300 inverter.

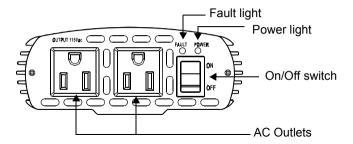


Figure 1 The PROwatt 300 AC panel

AC Outlets Two standard AC receptacles are provided on one end of the PROwatt 300. Any combination of 115 VAC appliances with a total power consumption of 150 watts or less when operating from a vehicle lighter socket, or 300 watts or less when connected with a DC connection to a battery may be plugged in.

On/Off switch The On/Off switch enables output AC power at the outlets when it is switched on. It also acts as a manual reset for overload, low battery voltage, and overheat fault conditions. The inverter can be reset by turning the switch off for five seconds, then on again.

Power light The green power light indicates AC power is present at the outlets and that the PROwatt 300 is operating normally.

Fault light The red fault light indicates the unit has shut down. Shut down is caused by low or high battery voltage, overload or excessively high temperatures.

Audible alarm An internal audible alarm warns you of an impending when low voltage shutdown.

Fan The PROwatt 300 fan (not shown in Figure 1) runs continuously while the unit is on. If the unit overheats let the fan run to cool it down. However, if the unit is in low-voltage shutdown mode, it should be turned off to conserve battery capacity.

Connecting the PROwatt 300

The PROwatt 300 can be connected to a DC lighter socket if the loads are less than 150 watts or connected directly to the battery for loads exceeding 150 watts.

Location

For the best performance results place the unit in a location that is:

- Dry do not expose the unit to water drip or spray.
- Cool operate the unit in ambient temperatures between 32° F (0° C) and 100° F (40° C). Keep it away from heating vents

• Well ventilated — allow at least two inches (5 cm) of clearance all around the unit for proper cooling.

Loads less than 150 watts

Follow these steps to connect the unit:

- 1. Place the unit in a flat dry location such as the floor of your vehicle.
- 2. Plug the PROwatt 300 DC lighter plug into the vehicle cigarette lighter socket or a 12 volt outlet.
- 3. Turn the PROwatt 300 On/Off switch on. The power light indicates AC power is available at the outlets.
- Plug in the AC products you wish to operate.
 In the event of an overload, low battery voltage or overheating, the PROwatt 300 shuts down automatically.

Loads exceeding 150 watts



Caution! Connect the PROwatt 300 directly to a 12 volt battery when powering loads greater than 150 watts. Do not connect to a battery of any other voltage.



Warning! Batteries contain corrosive materials and present an energy hazard. To prevent irritation and burns, wear protective eyewear and clothing. Take special care to ensure that metal tools or personal objects do not come into contact with the battery terminals.

Follow these steps to make a direct battery connection:

- 1. Cut the lighter plug off the PROwatt 300 power cord.

 One of the two power cord wires is identified with a red or white stripe. This is the positive (+) wire.
- 2. Using 12 AWG wire or heavier, extend the power cord if required, to a maximum total length of 6 feet (2 meters) including the existing PROwatt 300 power cord length. Solder all connections making sure they are properly insulated using electrical tape or heat shrinkable tubing.
- 3. Install a 30 amp automotive fuse, and a switch rated at 30 amps in line with the positive wire, close to the end that will attach to the battery. The switch is necessary to ensure no sparking occurs when connections are made to the battery. Solder and insulate the connection as detailed in Step 2 above. Turn the switch off. See Figure 2 for full details.

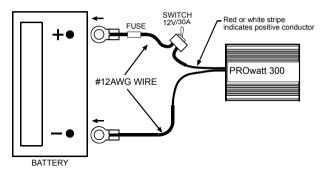


Figure 2 Wiring the PROwatt 300 to a battery

- 4. Solder heavy duty terminals to the end of the positive and negative wires. Select these terminals to mate properly with the battery terminals or existing battery cable clamps.
- 5. Fasten the positive terminal to the positive battery post, then fasten the negative terminal to the negative battery post.
- 6. Double check that the wiring polarity is correct, then turn the inline switch on. The PROwatt 300 is now ready for operation.
- 7. When disconnecting the battery, turn the in-line switch off first.

Operating the PROwatt 300

Operating guidelines

The following notes contain hints and describe conditions to be aware of when you're using the PROwatt 300.

- 1. When you connect the unit to the vehicle's 12 volt outlet and turn the On/Off switch on, the power light illuminates and AC power is available at the outlets.
- 2. As the battery is discharged, battery voltage begins to decrease. When the PROwatt 300 senses the voltage at its DC input has dropped to 10.7 volts, it sounds an alarm. If you ignore the alarm, the PROwatt 300 shuts down all AC loads to save the battery from damage due to excessive discharge. The power light goes out, and the fault light illuminates.
- 3. If you connect an AC product rated higher than 150 watts, 1.25 amps or drawing excessive surge power, the PROwatt 300 will shut down. The power light goes out and the fault light illuminates indicating the inverter is overloaded.
- 4. If the PROwatt 300 exceeds its safe operating temperature, because of insufficient ventilation or a high-temperature environment, it automatically shuts down. The power light goes out and the fault light illuminates.
- 5. If a defective battery charging system causes the battery voltage to rise to dangerously high levels, the PROwatt 300 automatically shuts down. The power light goes out and the fault light illuminates.

6. To reset the PROwatt 300 after an automatic shutdown, turn the Off/On switch off for 5 seconds, then on again. This manual reset feature prevents unexpected or hazardous restarting of connected AC loads.

Surges The power, or "wattage" rating of AC products is the average amount of power they use. When many appliances are first turn on, they initially consume more power than their power rating. TVs, monitors, and electric motors are examples of products that have high surge requirements at start up. Although the PROwatt 300 can supply momentary surge power to 500 watts, some products rated less than 300 watts may exceed its surge capabilities and trigger its safety overload shutdown feature.

Interference with Electronic Equipment

Generally, most AC products operate with the PROwatt 300 as they would with household AC power with the following exceptions:

Buzzing Sound Some inexpensive stereo systems and "boom boxes" have inadequate internal power supply filtering and "buzz" slightly when powered by the PROwatt 300. The best solution is to have an audio system with a good quality filter.

Television Interference. The PROwatt 300 is shielded to minimize its interference with TV signals. If TV signals are weak, you may see the interference in the form of lines scrolling across the screen. Try one of these suggestions to minimize or eliminate the problem:

- Use an extension cord to increase the distance between the PROwatt 300 and the TV, antenna and cables.
- Adjust the orientation of the PROwatt 300, television, antenna, and cables
- Maximize TV signal strength by using a better antenna and use shielded antenna cable where possible.
- Try a different TV. Different models of televisions vary considerably in their susceptibility to interference.

4 Battery Operating Time

The battery operating time of the PROwatt 300 depends upon the charge level of the battery, battery capacity, and the amount of power drawn by the particular AC load. With a typical vehicle battery and a 300 watt load you can expect one or more hours of operating time.

Other hints to preserve you battery:

- When using a vehicle battery as a power source, start the vehicle every hour or two to recharge the battery as vehicle batteries are not designed to be deeply discharged. Constantly recharging a vehicle battery will shorten its life.
 - The PROwatt 300 will operate while the engine is running, but the normal voltage drop that occurs during engine start may trigger the low voltage shutdown feature.
- Don't leave the PROwatt 300 on for more than a week if you do not have an AC product connected to it.
 - It draws less than 0.2 amps with the On/Off switch on and no load connected, but it will eventually discharge the battery.

5 Troubleshooting

This section describes problems you may encounter. It describes the symptoms of each problem and its possible causes, then suggests various remedies.

The AC product will not operate, fault light is on.

Symptom The AC product is plugged in or turned on and operates for one to ten seconds, then the fault light illuminates.

Possible cause	Suggested Remedy
The AC product connected is rated at more than 300 watts; safety overload circuit has tripped.	Use product with a power rating less than 300 watts (or 120 Volts/ 2.5 Amps).
The AC Product is rated at less than 300 watts; high starting surge has tripped overload circuit.	The product exceeds the inverter's surge capability. Use a product with a starting surge power within the PROwatt 300 capability.

Symptom The AC product does not operate, the fault light illuminates when inverter is turned on, or the load is turned on/plugged in, and the alarm may sound.

Possible cause	Suggested Remedy
Battery is discharged.	Recharge battery.

Possible cause	Suggested Remedy
Excessive battery voltage	Check charging system
Load exceeds 150 watt rating for lighter socket	Hard-wire the inverter to the battery as explained on page 9

Symptom The AC product runs for more than one minute, then the fault light turns on. The inverter is warm or hot to touch.

Possible cause	Suggested Remedy
The PROwatt 300 has overheated due to poor ventilation.	Ensure ventilation is not restricted around the inverter and allow it to cool for ten minutes. Turn the inverter off, then on again after five seconds.

The AC product will not operate, no inverter lights are on.

Symptom Lighter in lighter socket works, but the inverter does not.

Possible cause	Suggested remedy
Poor contact with lighter socket or 12 volt outlet.	Press the plug firmly into socket. Clean plug or socket if necessary.

Possible cause	Suggested remedy
The inverter has been connected with reverse DC input polarity.	The inverter has likely been damaged. You will need to have the unit repaired. Read the instructions for returning the unit on page 21.

Symptom Lighter in lighter socket does not work.

Possible cause	Suggested Remedy
Lighter socket or 12 volt outlet may require ignition to be switched on.	Turn key to accessory position.
Cigarette lighter or 12 Volt outlet fuse is blown.	Check the vehicle fuses and replace blown fuse with correct value

Measured inverter output is too low.

Symptom Volt meter reading is 5 to 15 volts too low.

Possible cause	Suggested remedy
A standard "average-reading" AC voltmeter is used to measure output voltage.	The PROwatt 300 modified sine wave output requires a "true RMS" voltmeter, such as Fluke 87 series multimeter, for accurate measurement.
Battery voltage is too low.	Recharge battery.

Battery run time is less than expected.

Symptom The inverter runs for a while, then the fault light illuminates. The inverter is cool or warm to touch

Possible Cause	Suggested Remedy
The AC product power consumption is higher than rated.	Use a larger battery to make up for increased power requirement.
The battery is old or defective.	Replace the battery.
The battery is not being properly charged.	Have your vehicle electrical system checked by a qualified technician.

6 Warranty Information

What Does This Warranty Cover? Xantrex manufactures its products from parts and components that are new or equivalent to new, in accordance with industry standard practices. This warranty covers any defects in workmanship or materials.

How Long Does The Coverage Last? This warranty lasts for one (1) year from the date of purchase. Implied warranties of merchantability and fitness for a particular purpose are limited to one year from date of purchase. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What Does This Warranty Not Cover? This warranty will not apply where the product has been misused, neglected, improperly installed, physically damaged or altered, either internally or externally, or damaged from improper use or use in an unsuitable environment. Xantrex does not warrant uninterrupted operations of its products. Xantrex shall not be liable for damages, whether direct, incidental, special, or consequential, or economic loss even though caused by the negligence or fault of Xantrex. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

What Will Xantrex Do? At its option, Xantrex will repair or replace the defective product free of charge. Xantrex will, also at its option, use new and/or reconditioned parts made by various manufacturers in performing warranty repair and building replacement products. If Xantrex repairs or replaces a product, its warranty term is not extended. Xantrex owns all parts removed from repaired products.

Service During Warranty In order to qualify for the warranty, dated proof of purchase must be provided and the product must not be disassembled or modified without prior authorization by Xantrex. If your product requires warranty service, please return it to the place of purchase along with a copy of your dated proof of purchase. If you are unable to contact your merchant, or the merchant is unable to provide service, contact Xantrex directly:

Phone (toll free) 1-800-670-0707

Fax: 604 420-1591

Fax (toll free): 1-800-994-7828

Email: support.prowatt@xantrex.com

Returning a product

You must obtain a Return Material Authorization (RMA) number from Xantrex before returning a product directly to Xantrex. Do not return a product to Xantrex without first obtaining an RMA number. When you contact Xantrex to obtain service, be prepared to supply the serial number of your product and its date of purchase as well as information about the installation or use of the unit.

If you are returning a product from the USA or Canada, follow this procedure:

 Obtain an RMA number and a shipping address from Xantrex. Product(s) returned without an RMA number or shipped collect, will be refused.

- 2. Package the unit safely, preferably using the original packing materials. Include the RMA number, a copy of your dated proof of purchase, a return address where the repaired unit can be shipped, a contact telephone number, and a brief description of the problem.
- 3. Ship the unit to the address provided in Step 1, freight prepaid. Obtaining proof of delivery is recommended.

How Other Laws Apply: This warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For Our Canadian Customers: When used herein "implied warranties of merchantability and fitness for a particular purpose" includes all warranties and conditions, express or implied, statutory or otherwise, including without limitation implied warranties and conditions of merchantability and fitness for a particular purpose.

Out of Warranty Service

If the warranty period for your PROwatt 300 has expired, if the unit was damaged due to misuse, incorrect installation, if other conditions of the warranty have not been met, or if no dated proof of purchase is available, your unit may be serviced/replaced for a flat fee.

To return your PROwatt 300 for out of warranty service, contact Xantrex customer service for a Return Material Authorization (RMA) number and follow the other steps outlined in the section "Service During Warranty" above. Options for payment such as credit card or money order will be explained by the customer service representative. In cases where the minimum flat fee does not apply, such as incomplete

units or units with excessive damage, an additional fee will be charged. If applicable, you will be contacted by customer service once your unit is received

7 Specifications

Specifications subject to change without notice

AC output voltage (nominal):	115 Vac RMS ±10Vac
DC input voltage range:	10 - 15 volts DC
Maximum Continuous AC output power	
	300 watts
Maximum AC output surge power	500 watts
AC output frequency	$60 \pm 4 \text{ Hz}$
AC output waveform	Modified Sine Wave
No load current draw (at 12V input)	0.18 amps
Efficiency (maximum)	90%
Ambient operating temperature range	32° F - 100° F
	0° C - 40° C
Low voltage alarm	At 10.7 volts
Low voltage shut down	10.0 volts
Over temperature shut	Yes, automatic
Overload shutdown	Yes, automatic
High battery shut down point (nominal)	15 volts
AC receptacles	2
Dimensions (L x W x H)	6.3 x 4.7 x 1.9 in
	160 x 120 x 50 mm
Weight	1.8 lb /820 grams

8 Other Products from Xantrex

To see the range of inverters and chargers offered by Xantrex, visit our web site at http://www.xantrex.com.

Tel: 1-800-670-0707 Fax: 1-800-994-7828

Email:support.prowatt@xantrex.com

Web: www.xantrex.com

