AV RECEIVER

RX-V665/HTR-6260

SERVICE MANUAL

IMPORTANT NOTICE

This manual has been provided for the use of authorized YAMAHA Retailers and their service personnel.
It has been assumed that basic service procedures inherent to the industry, and more specifically YAMAHA Products, are already known and understood by the users, and have therefore not been restated.

WARNING: Failure to follow appropriate service and safety procedures when servicing this product may result in personal injury, destruction of expensive components, and failure of the product to perform as specified. For these reasons, we advise all YAMAHA product owners that any service required should be performed by an authorized YAMAHA Retailer or the appointed service representative.

IMPORTANT: The presentation or sale of this manual to any individual or firm does not constitute authorization, certification or recognition of any applicable technical capabilities, or establish a principle-agent relationship of any form.

The data provided is believed to be accurate and applicable to the unit(s) indicated on the cover. The research, engineering, and service departments of YAMAHA are continually striving to improve YAMAHA products. Modifications are, therefore, inevitable and specifications are subject to change without notice or obligation to retrofit. Should any discrepancy appear to exist, please contact the distributor's Service Division.

WARNING: Static discharges can destroy expensive components. Discharge any static electricity your body may have accumulated by grounding yourself to the ground buss in the unit (heavy gauge black wires connect to this buss).

IMPORTANT: Turn the unit OFF during disassembly and part replacement. Recheck all work before you apply power to the unit.

■ CONTENTS

TO SERVICE PERSONNEL 2
FRONT PANELS 3–4
REAR PANELS 5–7
REMOTE CONTROL PANELS 8
SPECIFICATIONS 9–15
INTERNAL VIEW 16
SERVICE PRECAUTIONS 16
DISASSEMBLY PROCEDURES 17–19
UPDATING FIRMWARE 20–30
SELF-DIAGNOSTIC FUNCTION 31–62
DISPLAY DATA 63–64
IC DATA 65–83
PIN CONNECTION DIAGRAMS 84–85
BLOCK DIAGRAMS 86–89
PRINTED CIRCUIT BOARDS 90–107
SCHEMATIC DIAGRAMS 109–120
REPLACEMENT PARTS LIST 121–133
REMOTE CONTROL 134–136
ADVANCED SETUP 137

このサービスマニュアルは、エコマーク認定の再生紙を使用しています。
This Service Manual uses recycled paper.

101132

Copyright © 2009 YAMAHA CORPORATION All rights reserved.
This manual is copyrighted by YAMAHA and may not be copied or redistributed either in print or electronically without permission.

YAMAHA

YAMAHA CORPORATION
P.O.Box 1, Hamamatsu, Japan

animate '09.03

■ TO SERVICE PERSONNEL

1. Critical Components Information
   Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
2. Leakage Current Measurement (For 120V Models Only)
   When service has been completed, it is imperative to verify that all exposed conductive surfaces are properly insulated from supply circuits.

- Meter impedance should be equivalent to 1500 ohms shunted by 0.15 µF.

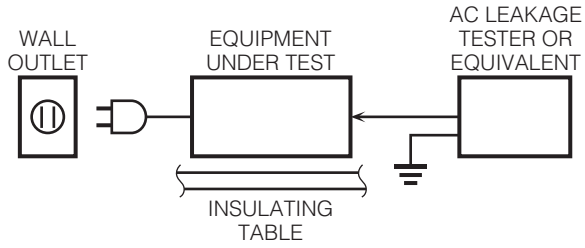

- Leakage current must not exceed 0.5mA.
- Be sure to test for leakage with the AC plug in both polarities.

For U model

"CAUTION"

"F3701: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE 6A, 125V FUSE."

For C model

CAUTION

F3701: REPLACE WITH SAME TYPE 6A, 125V FUSE.

ATTENTION

F3701: UTILISER UN FUSIBLE DE RECHANGE DE MÉME TYPE DE 6A, 125V.

WARNING: CHEMICAL CONTENT NOTICE!

This product contains chemicals known to the State of California to cause cancer, or birth defects or other reproductive harm.

DO NOT PLACE SOLDER, ELECTRICAL/ELECTRONIC OR PLASTIC COMPONENTS IN YOUR MOUTH FOR ANY REASON WHATSOEVER!

Avoid prolonged, unprotected contact between solder and your skin! When soldering, do not inhale solder fumes or expose eyes to solder/flux vapor!

If you come in contact with solder or components located inside the enclosure of this product, wash your hands before handling food.

About lead free solder

All of the P.C.B.s installed in this unit and solder joints are soldered using the lead free solder.

Among some types of lead free solder currently available, it is recommended to use one of the following types for the repair work.

- Sn + Ag + Cu (tin + silver + copper)
- Sn + Cu (tin + copper)
- Sn + Zn + Bi (tin + zinc + bismuth)

Caution:

As the melting point temperature of the lead free solder is about 30°C to 40°C (50°F to 70°F) higher than that of the lead solder, be sure to use a soldering iron suitable to each solder.

■ FRONT PANELS

Top view

U model

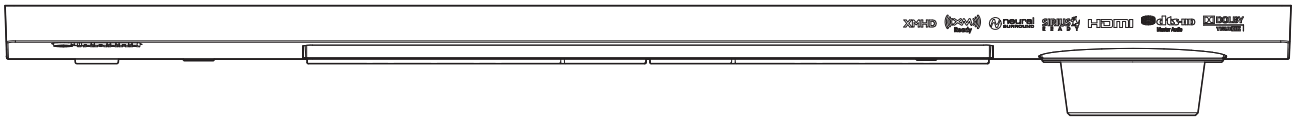

C, R, A, F, L models

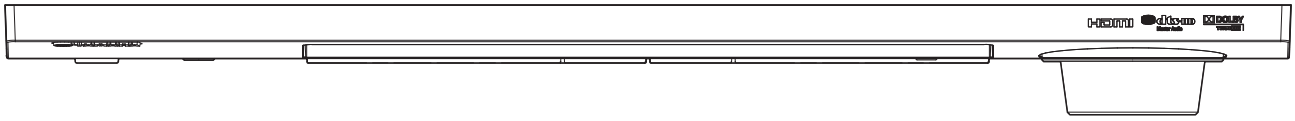

Front view

RX-V665 (U model)

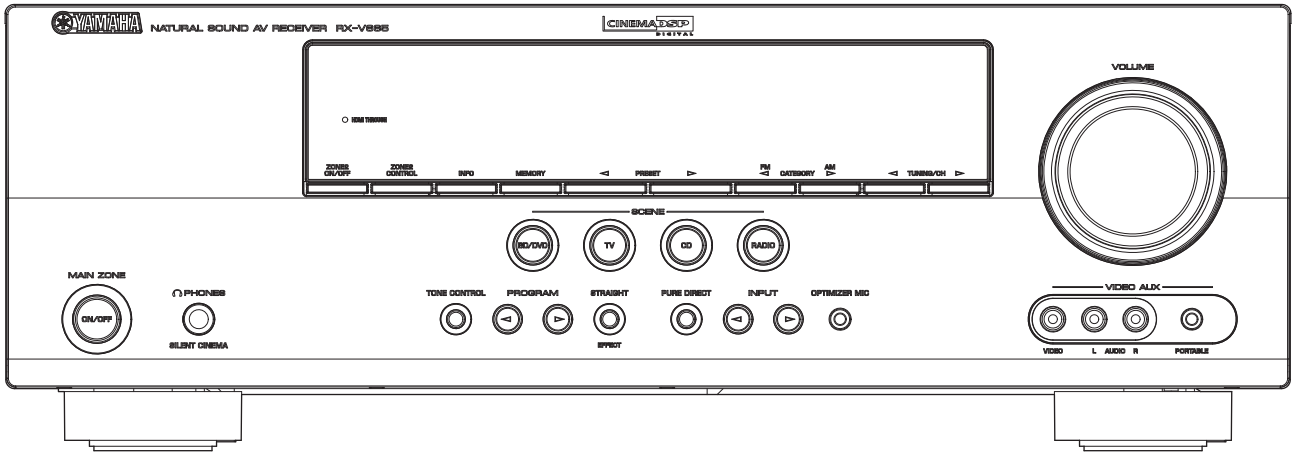

RX-V665 (C, R, A, F, L models)

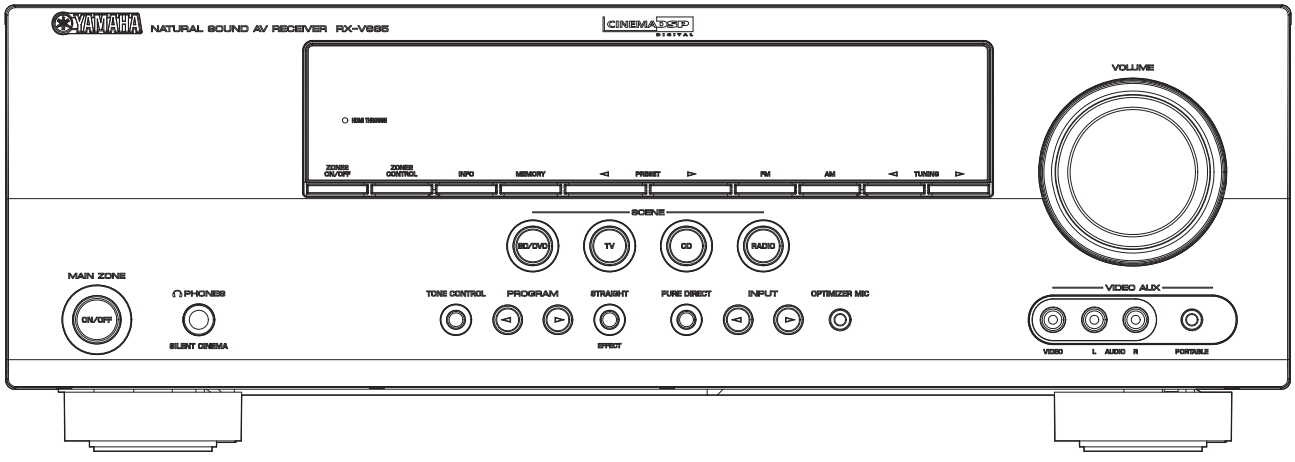

HTR-6260 (U model)

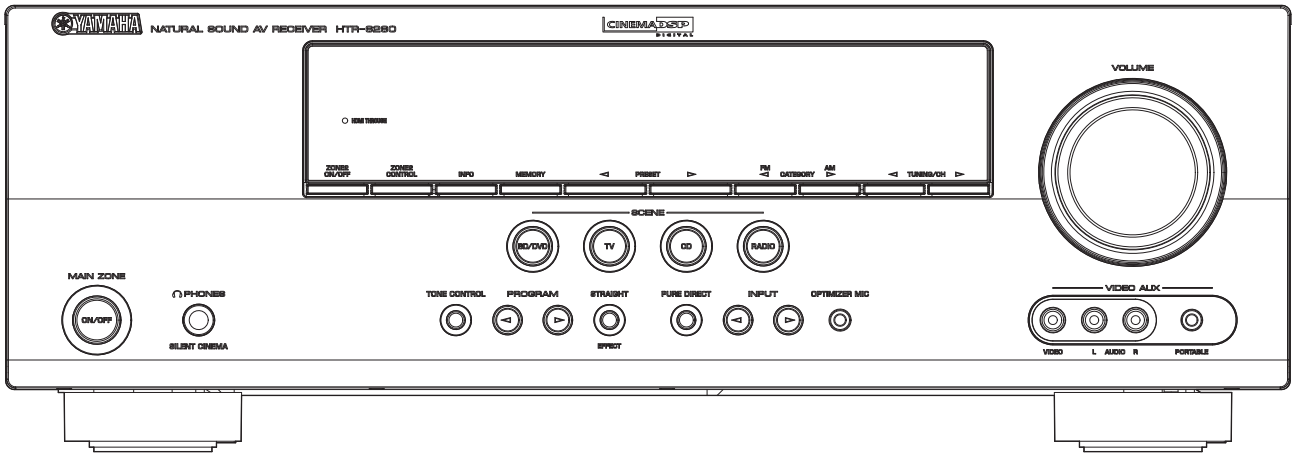

HTR-6260 (C model)

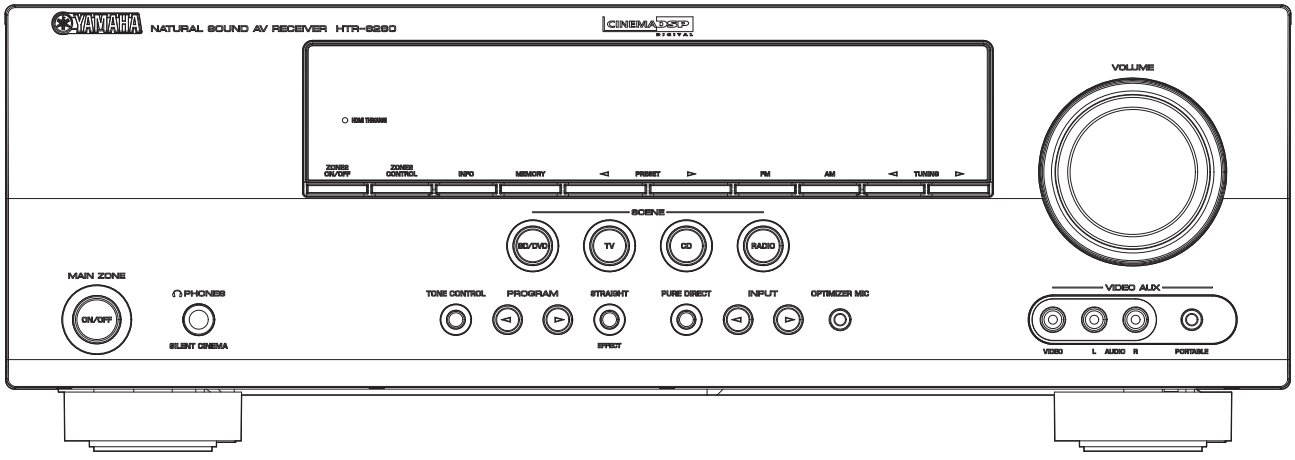

■ REAR PANELS

RX-V665 (U model)

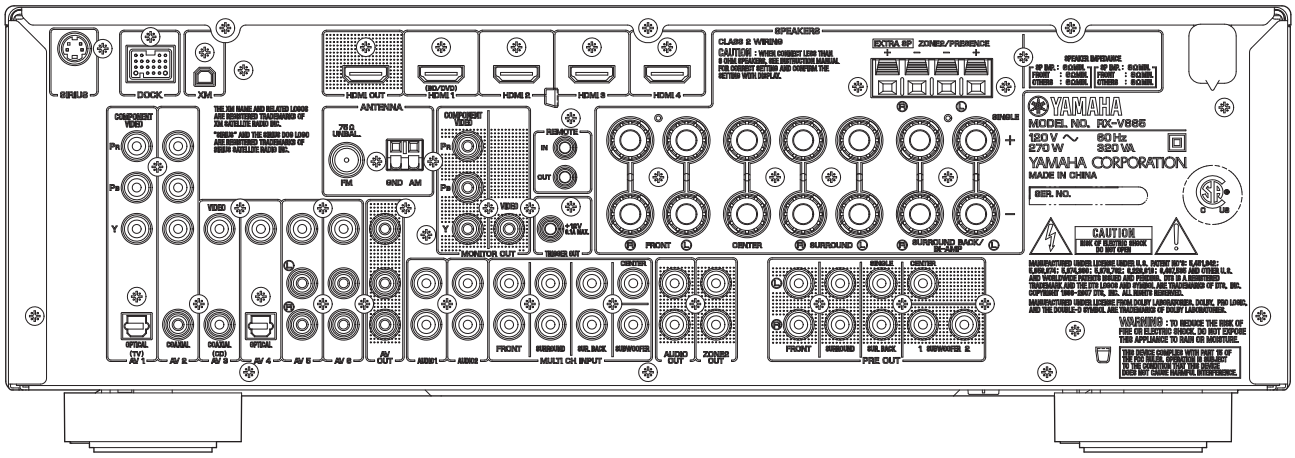

RX-V665 (C model)

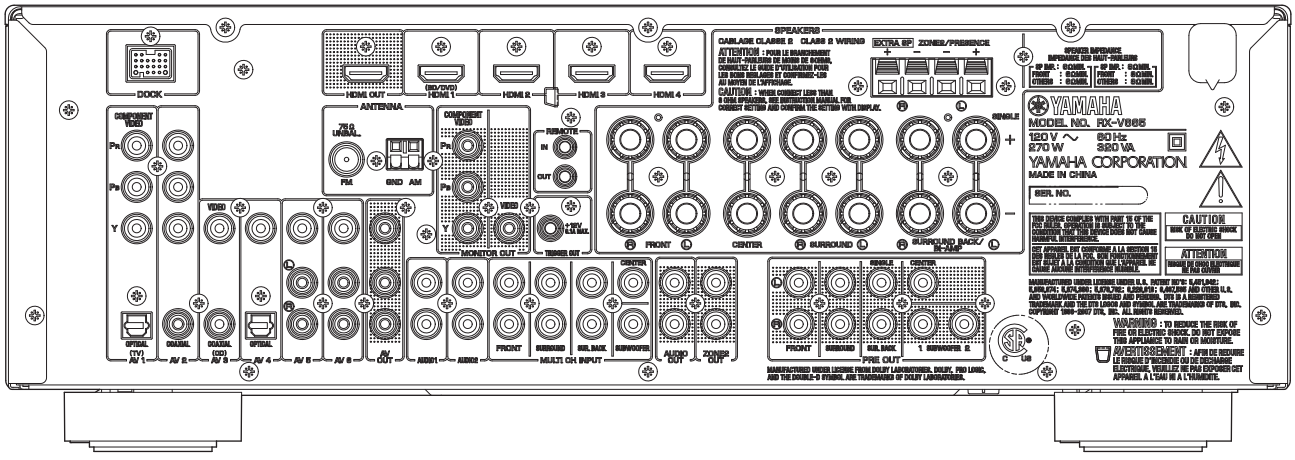

RX-V665 (R model)

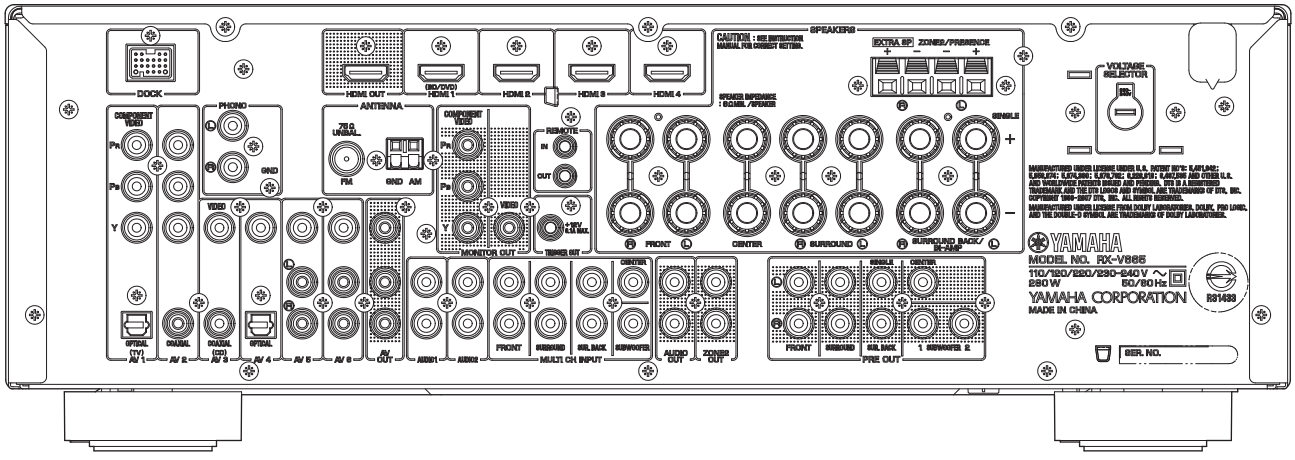

RX-V665 (A model)

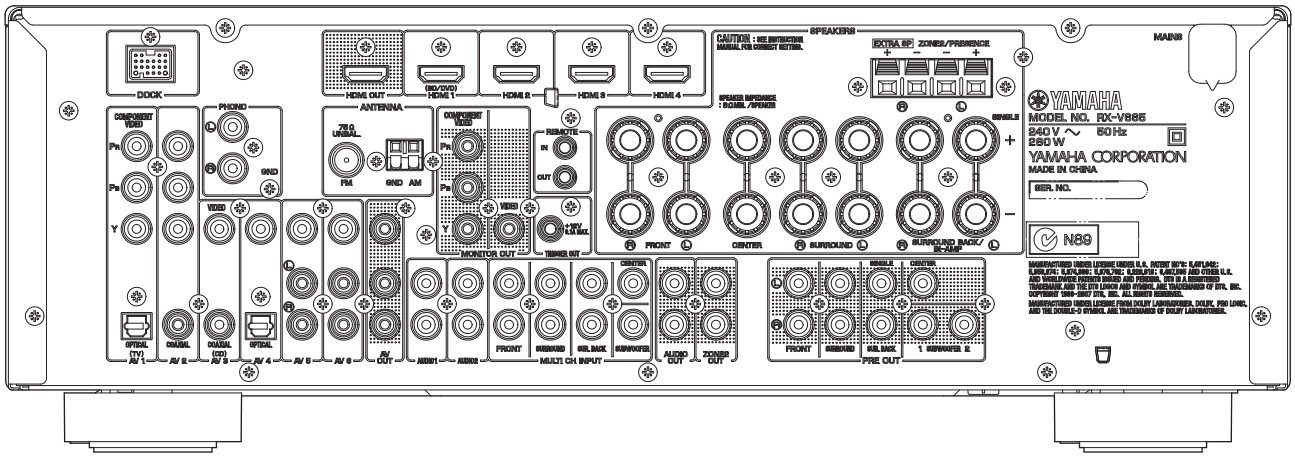

RX-V665 (F model)

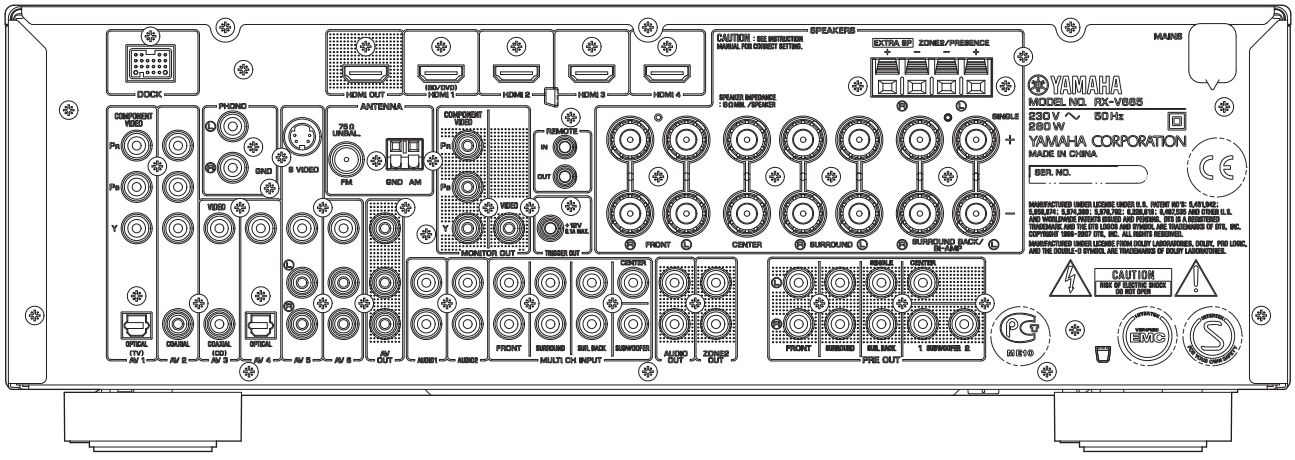

RX-V665 (L model)

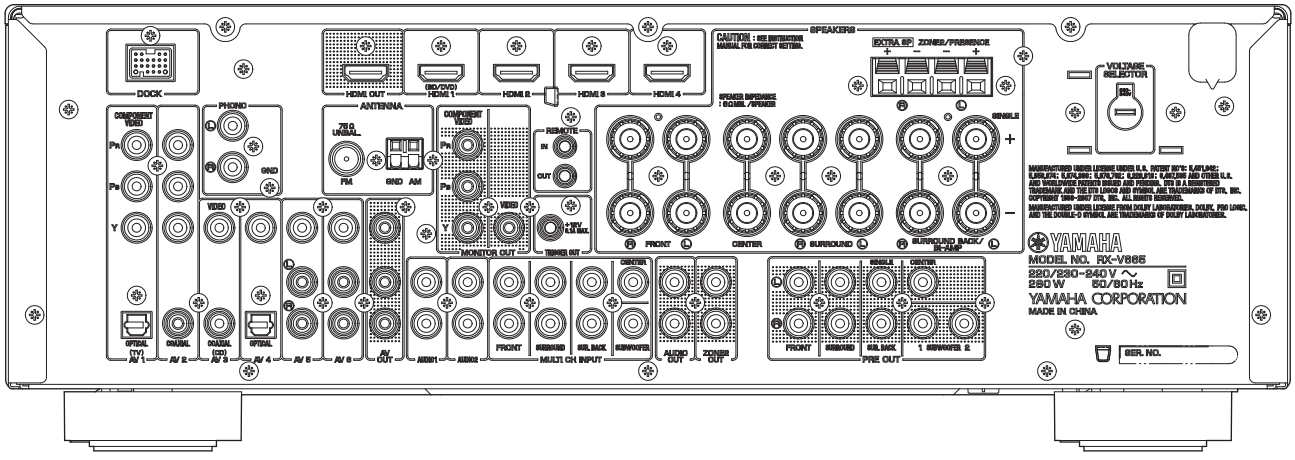

HTR-6260 (U model)

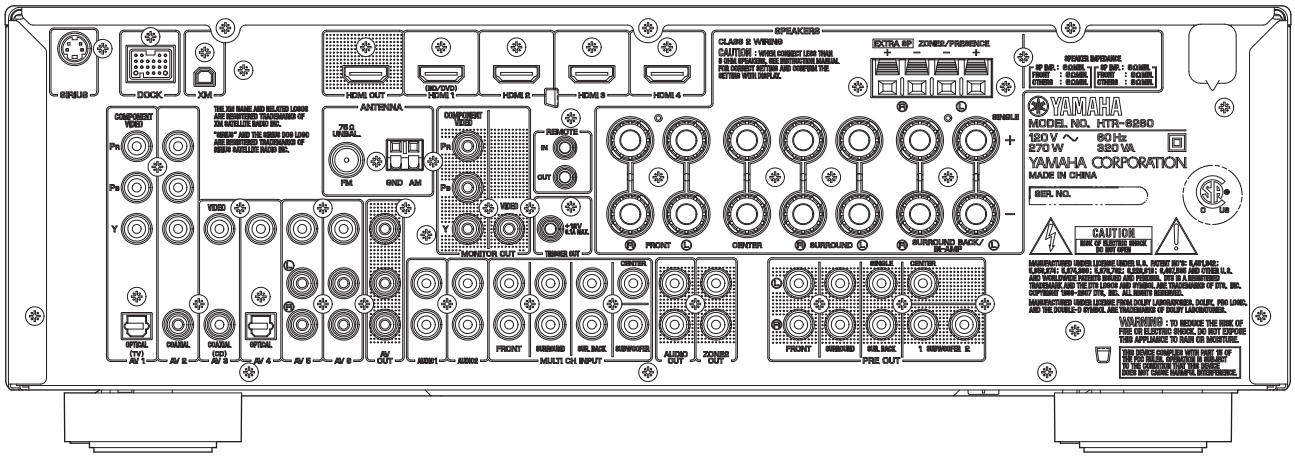

HTR-6260 (C model)

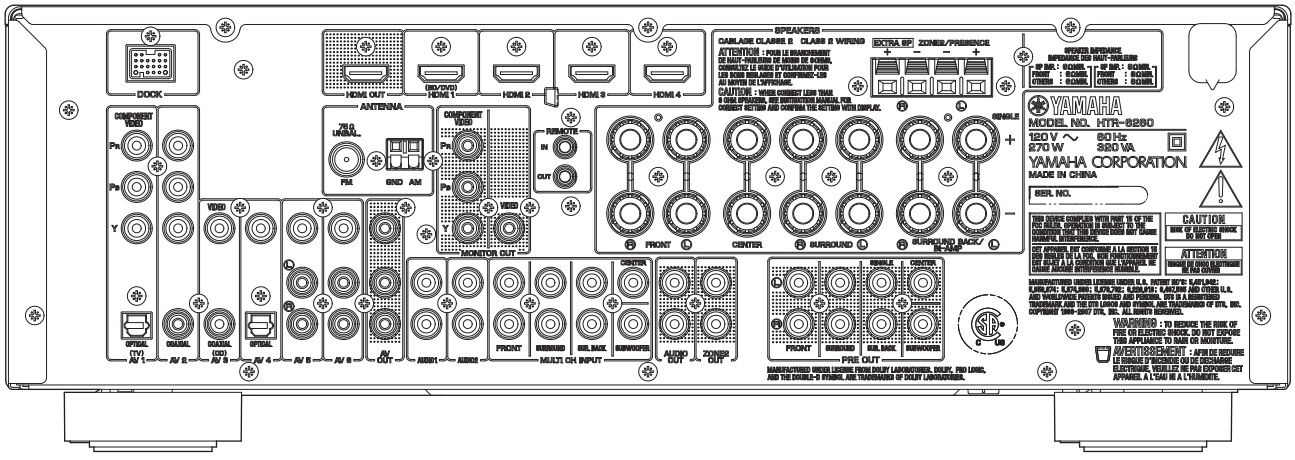

■ REMOTE CONTROL PANELS

RAV290
(U model)

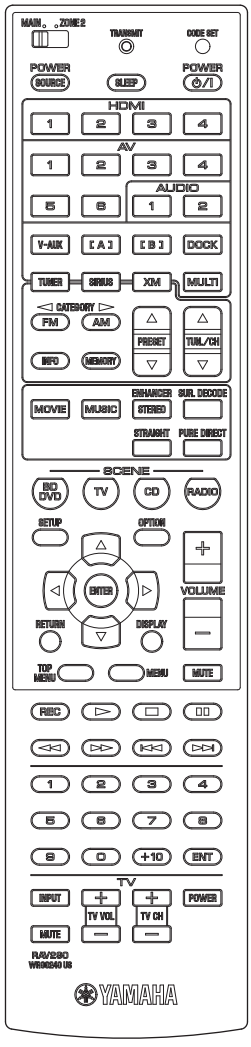

RAV291
(C model)

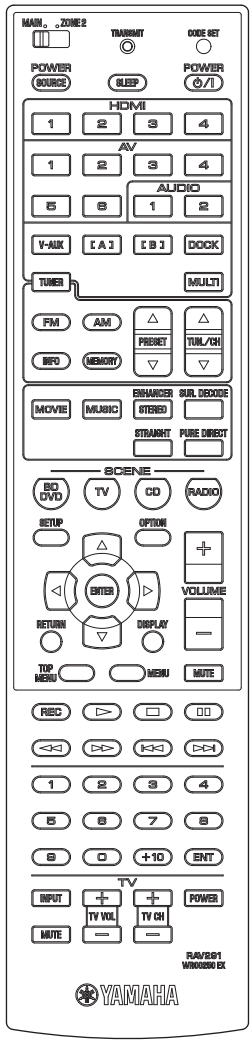

RAV292
(R, A, L models)

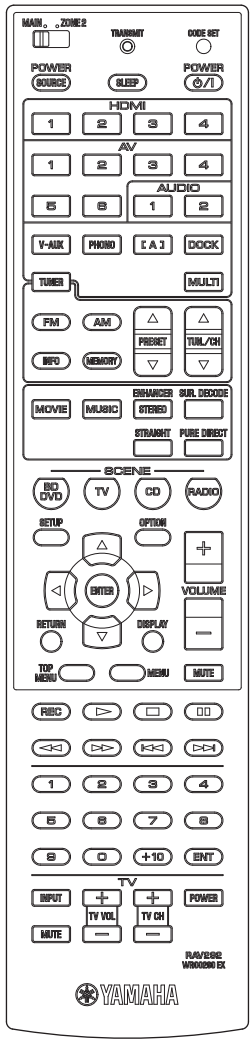

RAV295
(F model)

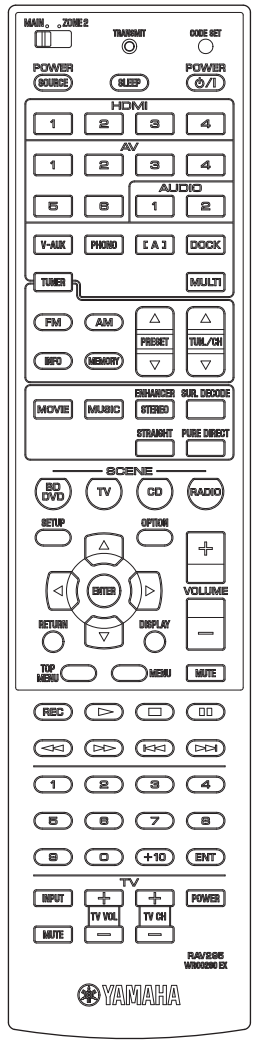

■ SPECIFICATIONS

■ Audio Section

Minimum RMS Output Power (Power Amp. Section)
(1 kHz, 0.9 % THD)
FRONT L/R, CENTER, SURROUND L/R, SURROUND BACK L/R
U, C models (8 ohms) ..... 90 W/ch
R, A, F, L models (6 ohms) ..... 90 W/ch

Maximum Power (JEITA) (1 kHz, 10 % THD, 6 ohms) [R, A, L models]
FRONT L/R, CENTER, SURROUND L/R, SURROUND BACK L/R
..... 115 W/ch

MAX. Power Per Channel (1 kHz, 0.7 % THD, 4 ohms) [F, L models]
FRONT L/R, CENTER, SURROUND L/R, SURROUND BACK L/R
..... 105 W/ch

IEC Power (1 kHz, 0.9 % THD, 6 ohms) [F, L models]
FRONT L/R ..... 90 W/ch

Dynamic Power Per Channel (IHF)
FRONT L/R drive
U, C models (8 / 6 / 4 / 2 ohms) ..... 95 / 110 / 130 / 150 W
R, A, F, L models (– / 6 / 4 / 2 ohms) ..... – / 100 / 110 / 125 W

Dynamic Headroom [U, C models]
8 ohms ..... 0.23 dB

Input Sensitivity/Input Impedance (1 kHz, 100 W/6 ohms)
PHONO (MM) (R, A, F, L models) ..... 3.5 mV / 47 k-ohms
AV5 etc. ..... 200 mV / 47 k-ohms
MULTI CH INPUT
FRONT L/R, CENTER, SURROUND L/R, SURROUND BACK L/R, SUBWOOFER
..... 200 mV / 47 k-ohms

Maximum Input Signal (1 kHz)
PHONO (MM) (0.1 % THD) (R, A, F, L models) ..... 60 mV or more
AV5 etc. (effect ON) (0.5 % THD) ..... 2.0 V or more

Output Level/Output Impedance
REC OUT ..... 200 mV/1.2 k-ohms
PRE OUT ..... 1 V/1.2 k-ohms
SUBWOOFER (2 ch stereo and FRONT SP: small)
..... 1 V/1.2 k-ohms
ZONE2 OUT ..... 200 mV/1.2 k-ohms

Headphone Jack Rated Output/Output Impedance
AV5 etc. input (1 kHz, 50 mV, 8 ohms) ..... 100 mV/470 ohms

Frequency Response
AV5 etc., FRONT (10 Hz to 100 kHz) ..... 0/-3 dB

RIAA Equalization Deviation [R, A, F, L models]
PHONO (MM) ..... 0 ±0.5 dB

Total Harmonic Distortion
PHONO (MM) to REC OUT (20 Hz to 20 kHz, 1 V) (R, A, F, L models)
..... 0.02 % or less
AV5 etc. (Pure Direct) to FRONT SP OUT (1 kHz, 50 W)
8 ohms (U, C models) ..... 0.06 % or less
6 ohms (R, A, F, L models) ..... 0.06 % or less

Signal to Noise Ratio (IHF-A network)
PHONO (MM) to REC OUT (Input shorted 2.5 mV)
R model ..... 86 dB or more
A, F, L models ..... 81 dB or more
AV5, etc. (effect OFF) to SP OUT (Input shorted 250 mV)
..... 100 dB or more

Residual Noise (IHF-A Network)
FRONT L/R to SP OUT ..... 150 µV or less

Channel Separation (1 kHz / 10 kHz)
PHONO (Input shorted) ..... 60 dB or more / 55 dB or more
AV5, etc. (Input 5.1 k-ohms shorted)
..... 60 dB or more / 45 dB or more

Volume Control
..... MUTE / -80 dB to +16.5 dB / 0.5 dB step

Tone Control Characteristics
Bass
Boost/Cut ..... ±10 dB/2 dB, step 50 Hz
Turnover frequency ..... 350 Hz
Treble
Boost/Cut ..... ±10 dB/2 dB, step 20 kHz
Turnover frequency ..... 3.5 kHz

Filter Characteristics
FRONT, CENTER, SURROUND, SURROUND BACK small (H.P.F.)
..... fc=40/60/80/90/100/110/120/160/200 Hz, 12 dB/oct.
SUBWOOFER small (L.P.F.)
..... fc=40/60/80/90/100/110/120/160/200 Hz, 24 dB/oct.

■ Video Section

Video Signal Type
Gray back
U, C, R models ..... NTSC
A, F, L models ..... PAL
Video conversion
..... NTSC/PAL

Composite Video Signal Level
..... 1 Vp-p / 75 ohms

S-Video Signal Level [F model]
Y ..... 1 Vp-p / 75 ohms
C ..... 0.286 Vp-p / 75 ohms

Component Video Signal Level
Y ..... 1 Vp-p / 75 ohms
Cb/Cr ..... 0.7 Vp-p / 75 ohms

Video Maximum Input Level
..... 1.5 Vp-p or more

Video Signal to Noise Ratio
..... 50 dB or more

Monitor Out Frequency Response (VIDEO CONV. OFF)
Component video signal level ..... 5 Hz to 60 MHz, -3 dB

■ FM Section

Tuning Range
U, C models ..... 87.5 to 107.9 MHz
R, L models ..... 87.5 to 108.0 MHz / 87.50 to 108.00 MHz
A, F models ..... 87.50 to 108.00 MHz

50 dB Quieting Sensitivity (IHF) (1 kHz, 100 % MOD.)
MONO/STEREO ..... 3 µV (20.8 dBf)

Signal to Noise Ratio (IHF)
Mono ..... 74 dB
Stereo ..... 69 dB

Harmonic Distortion (1 kHz)
Mono ..... 0.3 %
Stereo ..... 0.3 %

Antenna Input
..... 75 ohms unbalanced

■ AM Section

Tuning Range
U, C models ..... 530 to 1,710 kHz
R, L models ..... 530 to 1,710 kHz / 531 to 1,611 kHz
A, F models ..... 531 to 1,611 kHz

Antenna
..... Loop antenna

■ General

Power Supply
U, C models ..... AC 120 V, 60 Hz
R model ..... AC 110/120/220/230–240 V, 50/60 Hz
A model ..... AC 240 V, 50 Hz
F model ..... AC 230 V, 50 Hz
L model ..... AC 220/230–240 V, 50/60 Hz

Power Consumption
U, C models ..... 270 W / 320 VA
R, A, F, L models ..... 280 W

Standby Power Consumption (reference data)
HDMI control: OFF / Standby through: OFF ..... 0.2 W or less
HDMI control: ON / Standby through: ON / Repeat ..... 3 W or less
HDMI control: ON / Standby through: ON ..... 1.2 W or less

Maximum Power Consumption [R, L models]
(7 ch drive, 10 % THD) ..... 490 W

Dimensions (W x H x D)
..... 435 x 151 x 364 mm (17-1/8" x 5-7/8" x 14-3/8")

Weight
..... 8.5 kg (18.7 lbs.)

Finish
[RX-V665]
Black color ..... U, C, R, A, F, L models
Titanium color ..... F, L models
[HTR-6260]
Black color ..... U, C models

Accessories
Remote control ..... x 1
Battery (R03, AAA, UM-4) ..... x 2
Indoor FM antenna (1.4 m) ..... x 1
AM loop antenna (1.0 m) ..... x 1
Optimizer microphone (6.0 m) ..... x 1

*** Specifications are subject to change without notice due to product improvements.**

U ..... ***U.S.A. model***
C ..... ***Canadian model***
R ..... ***General model***
A ..... ***Australian model***
F ..... ***Russian model***
L ..... ***Singapore model***

DOLBY TRUEHD

Manufactured under license from Dolby Laboratories.
Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.

dts-HD Master Audio

DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTSHD Master Audio are trademark of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

neural SURROUND

Neural Surround™ name and related logos are trademarks owned by Neural Audio Corporation.

iPod™

"iPod" is a trademark of Apple Inc., registered in the U.S. and other countries.

Bluetooth™

Bluetooth is a registered trademark of Bluetooth SIG and is used by Yamaha in accordance with a license agreement.

HDMI

"HDMI," the "HDMI" logo and "High-Definition Multimedia Interface" are trademarks, or registered trademarks of HDMI Licensing LLC.

x.v.Color™

"x.v.Color" is a trademark of Sony Corporation. "SILENT CINEMA" is a trademark of Yamaha Corporation.

SILENT ™ CINEMA

"SILENT CINEMA" is a trademark of Yamaha Corporation.

SIRIUS SATELLITE RADIO (xm) READY

XMHD SURROUND•SOUND XM Mini-Tuner

SIRIUS, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All rights reserved. **Service not available in Alaska and Hawaii.**

- **DIMENSIONS**

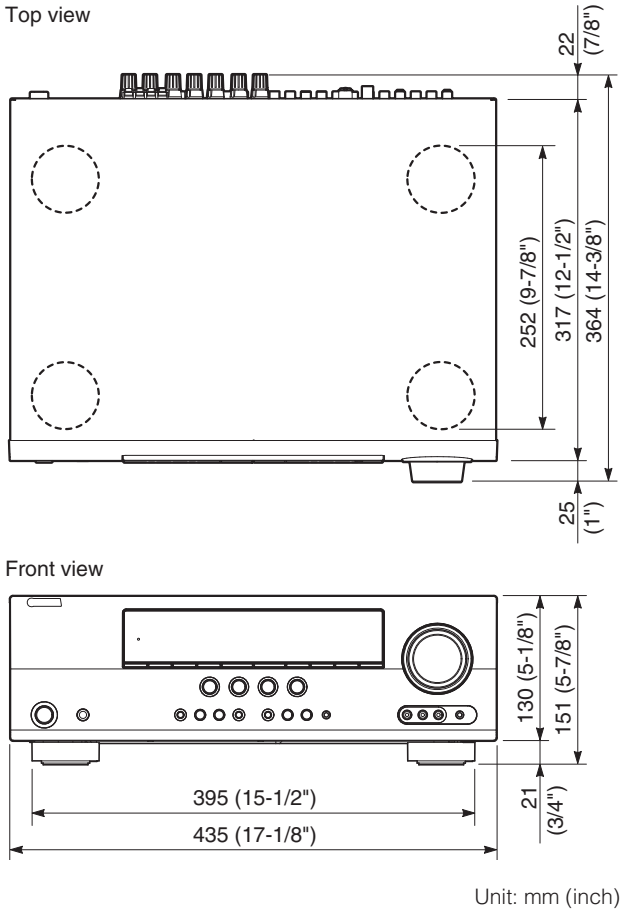

Unit: mm (inch)

- **SCENE TEMPLATE**

Name	BD/DVD	TV	CD	RADIO
INPUT	HDMI1	AV-1 (Component / Optical)	AV-3 (Video / Coaxial)	TUNER
Sound field mode	STRAIGHT	STRAIGHT	STRAIGHT	MUSIC ENHANCER 7ch Enhancer
IR code output	DVD Play	None	CD Power On / Play	None

• SOUND FIELD PARAMETERS

Category	Program	Parameter	Decode Type	3D DSP: ON/OFF	DSP Level: -6dB to +3dB	Init. Delay: 1 to 99ms	Room Size: 0.1 to 2.0	Liveness: 0 to 10	Sur. Init. Delay: 1 to 49ms	Sur. Room Size: 0.1 to 2.0	Sur. Liveness: 0 to 10	SB. Init. Delay: 1 to 49ms	SB. Room Size: 0.1 to 2.0	SB. Liveness: 0 to 10	Rev. Time: 1.0 to 5.0s	Rev. Delay: 0 to 250ms	Rev. Level: 0 to 100%	Dialogue Lift: 0 to 5	Center Level: 0 to 100%	Surround L Level: 0 to 100%	Surround R Level: 0 to 100%	Sur.Back Level: 0 to 100%	Presence L Level: 0 to 100%	Presence R Level: 0 to 100%	Direct: Auto/Off	Effect Level: High/Low	Panorama: On/Off	Center Width: 0 to 7	Dimension: -3 to +3	Center Image: 0.0 to 1.0	FOCUS: 0 to 8	TruBass: 0 to 8	Initialize
MOVIE	Standard		● *1	●	●				●	●	●	●	●	●				●														●
	Spectacle		● *1	●	●	●	●		●	●		●	●					●														●
	Sci-Fi		● *1	●	●	●	●		●	●		●	●					●														●
	Adventure		● *1	●	●	●	●		●	●		●	●					●														●
	Drama		● *1	●	●	●	●		●	●		●	●					●														●
	Mono Movie			●	●	●	●	●							●	●	●	●														●
	Sports			●	●	●	●		●	●		●	●					●														●
	Action Game			●	●	●	●		●	●		●	●					●														●
	Roleplaying Game			●	●	●	●		●	●		●	●					●														●
MUSIC	Hall in Munich			●	●	●	●	●										●														●
	Hall in Vienna			●	●	●	●	●										●														●
	Chamber			●	●	●		●							●	●	●	●														●
	Cellar Club			●	●	●	●	●										●														●
	The Roxy Theatre			●	●	●	●	●							●	●	●	●														●
	The Bottom Line			●	●	●	●	●										●														●
	Music Video			●	●	●	●		●	●		●	●					●														●
STEREO	2ch Stereo																								●							●
	7ch Stereo																		●	●	●	○	●	●								●
MUSIC ENHANCER	Straight Enhancer																									●						●
	7ch Enhancer																									●						●
SUR. DECODE	Surround Decoder		● *2																								△	△	△	▲	■	■	●
STRAIGHT																																	

○ : The parameter to be used varies between when there is one surround pack and when there are two. On the display, the parameter value varies accordingly while the same parameter name appears.
△ : Setting is possible only when Pro Logic II x Music (Pro Logic II Music) is selected using decode type.
▲ : Setting is possible only when Neo:6 Music is selected using decode type.
■ : Setting is possible only when CS II Cinema/Music is selected using decode type.

*1 Decode Type

Decode Type	PL II x Movie	PL II when Surround Back is None.
	Neo:6 Cinema	

*2 Decode Type

Decode Type	Pro Logic	
	PL II x Movie	PL II when Surround Back is None.
	PL II x Music	PL II when Surround Back is None.
	PL II x Game	PL II when Surround Back is None.
	Pro Logic II z	
	Neo:6 Cinema	
	Neo:6 Music	
	Neural Sur.	(U model)

• SET MENU TABLE

MAIN MENU	SUB MENU	PARAMETER	VALUE [INITIAL VALUE]
1 • Speaker Setup			
1 Auto Setup (YPAO)	Extra SP Assign		[Zone2] / Presence / None
	EQ Type		[Natural] / Flat / Front
	Start		[ENTER]: Start
2 Manual Setup	A) Config	Extra SP Assign	Zone2 / Presence / [None]
		LFE/Bass Out	SWFR / Front / [Both]
		Front SP	Small / [Large]
		Center SP	None / [Small] / Large
		Sur. L/R SP	
		Sur. B L/R SP	None / SMLx1 / [SMLx2] / LRGx1 / LRGx2
		Crossover Freq. Freq. ····	40 / 60 / [80] / 90 / 100 / 110 / 120 / 160 / 200 Hz
		Subwoofer Phase	[Normal] / Reverse
		Zone2 Menu	Not Available
	B) Level	FR. L	-10.0 to +10.0 dB, [0 dB], 0.5 dB step
		FR. R	
		CNTR	-10.0 to +10.0 dB, [-1.0 dB], 0.5 dB step
		SUR. L	
		SUR. R	
		SBL	
		SBR	
		SWFR	-10.0 to +10.0 dB, [0 dB], 0.5 dB step
	C) Distance	Unit	meters (m) / [feet (ft)]
		Front L	0.30 to 24.00 m, [3.00 m]
		Front R	
		Center	0.30 to 24.00 m, [2.60 m]
		Sur. L	0.30 to 24.00 m, [2.40 m]
		Sur. R	
		Sur. B L	
		Sur. B R	
		SWFR	0.30 to 24.00 m, [3.00 m]
		PRNS L	0.30 to 24.00 m, [2.40 m]
		PRNS R	
		Front L	1.0 to 80.0 ft, [10.0 ft]
		Front R	
		Center	1.0 to 80.0 ft, [8.5 ft]
		Sur. L	1.0 to 80.0 ft, [8.0 ft]
		Sur. R	
		Sur. B L	
		Sur. B R	
		SWFR	1.0 to 80.0 ft, [10.0 ft]
		PRNS L	1.0 to 80.0 ft, [8.0 ft]
		PRNS R	
	D) Equalizer	EQ Type Select	Auto PEQ / [GEQ] / Off
		GEQ	* "GEQ" is available only when "EQ Type Select" is set to "GEQ".
		Front L 63 Hz ·····||····· 0 dB	-6.0 to +6.0 dB, [0 dB], 0.5 dB step
		Front R 160 Hz ·····||····· 0 dB	
		Center 400 Hz ·····||····· 0 dB	
		Sur. L 1 kHz ·····||····· 0 dB	
		Sur. R 2.5 kHz ·····||····· 0 dB	
		SBL 6.3 kHz ·····||····· 0 dB	
		SBR 16 kHz ·····||····· 0 dB	
	E) Test Tone		[Off] / On
2 • Sound Setup			
1 Dynamic Range			Min/Auto / STD / [Max]
2 Lipsync	HDMI Auto		[Off] / On
	Auto Delay		0 to 240 ms, [0 ms], 1 ms step
	Manual Delay		
3 • Function Setup			
1 HDMI	Control		On / [Off]
	Standby Through		On / [Off] (* This menu is available only when "Control" is set to "Off".)
	Audio Output		[Amp] / TV / Amp+TV (* This menu is available only when "Control" is set to "Off".)

MAIN MENU	SUB MENU	PARAMETER	VALUE [INITIAL VALUE]
	Resolution		[*Through] / *480p / *720p / *1080i / *1080p
	Aspect		[Thrgh] / 16:9 / Smart
2 Display	Dimmer		-4 to 0, [0]
	FL Scroll		[Continue] / Once
	OSD Shift		-5 to +5, [0]
3 Volume	Adaptive DRC		Auto / [Off]
	Max Volume		-30.0 dB to +15.0 dB / [+16.5 dB], 5.0 dB step
	Init. Volume		[Off] / Mute / -80.0 to +16.5 dB, 0.5 dB step
4 Input Rename			Input is possible to 9 characters Input possible Character type Capital : A to Z Small : a to z Figure : 0 to 9 Space Marks : # * + , - . / : < > ? etc.
5 Zone2	Max Volume		-30.0 dB to +15.0 dB / [+16.5 dB], 5.0 dB step
	Init. Volume		[Off] / Mute / -30.0 to +16.5 dB, 0.5 dB step
4 • DSP Parameter			
STEREO	7ch Stereo	CT Level	0 to 100 %
		SL Level	
		SR Level	
		SB Level	
		Initialize	
MUSIC ENHANCER	Straight Enhancer	Effect Level · High	[High] / Low
		Initialize	
	7ch Enhancer	Effect Level · High	[High] / Low
		Initialize	
SUR. DECODE	Sur. Decoder	SUR. ···· Pro Logic	Pro Logic / PL IIx Movie / PL IIx Music / PL IIx Game / Neo:6 Cinema / Neo:6 Music / Neural Sur. (U model)
		Pro Logic Initialize	
		PL IIx Movie Initialize	
		PL IIx Music Panorama	[Off] / On
		PL IIx Music Center Width	0 to 7, [3]
		PL IIx Music Dimension	-3 to [STD] to +3
		PL IIx Music Initialize	
		PL IIx Game Initialize	
		Neo:6 Cinema Initialize	
		Neo:6 Music C. Image	0.0 to 1.0, [0.3]
		Neo:6 Music Initialize	
		Neural Sur. Initialize	
MOVIE	Standard	SUR. ···· PL IIx Movie	PL IIx Movie / Neo:6 Cinema
		PL IIx Movie	[1], [4], [8], [11], [16]
		Neo:6 Cinema	[1], [4], [8], [11], [16]
	Spectacle	SUR. ···· PL IIx Movie	PL IIx Movie / Neo:6 Cinema
		PL IIx Movie	[1], [3], [4], [7], [8], [16]
		Neo:6 Cinema	[1], [4], [8], [11], [16]
	Sci-Fi	SUR. ···· PL IIx Movie	PL IIx Movie / Neo:6 Cinema
		PL IIx Movie	[1], [3], [4], [7], [8], [16]
		Neo:6 Cinema	[1], [3], [4], [7], [8], [16]
	Adventure	SUR. ···· PL IIx Movie	PL IIx Movie / Neo:6 Cinema
		PL IIx Movie	[1], [3], [4], [7], [8], [16]
		Neo:6 Cinema	[1], [3], [4], [7], [8], [16]
	Drama	SUR. ···· PL IIx Movie	PL IIx Movie / Neo:6 Cinema
		PL IIx Movie	[1], [3], [4], [7], [8], [16]
		Neo:6 Cinema	[1], [3], [4], [7], [8], [16]
	Mono Movie	[1], [2], [6], [10], [13], [14], [15], [16]	
	Sports	[1], [3], [4], [7], [8], [16]	
	Action Game	[1], [3], [4], [7], [8], [16]	
	Roleplaying Game	[1], [3], [4], [7], [8], [16]	

MAIN MENU	SUB MENU	PARAMETER	VALUE [INITIAL VALUE]
MUSIC	Hall in Munich	[1], [2], [6], [10], [16]	
	Hall in Vienna	[1], [2], [6], [10], [16]	
	Chamber	[1], [2], [10], [13], [14], [15], [16]	
	Cellar Club	[1], [2], [6], [10], [16]	
	The Roxy Theatre	[1], [2], [6], [10], [13], [14], [15], [16]	
	The Bottom Line	[1], [2], [6], [10], [16]	
	Music Video	[1], [3], [4], [7], [8], [16]	
STEREO	2ch Stereo	Direct	[Auto] / Off
		Initialize	
	[1]	DSP Level	-6 to +3 dB, [0 dB]
	[2]	Init. Delay	1 to 99 ms
	[3]	P. Init. Dly	
	[4]	S. Init. Dly	1 to 49 ms
	[6]	Room Size	0.1 to 2.0
	[7]	P. Room Size	
	[8]	S. Room Size	
	[10]	Liveness	0 to 10
	[11]	S. Liveness	
	[13]	Rev. Time	1.0 to 5.0 s
	[14]	Rev. Delay	0 to 250 ms
	[15]	Rev. Level	0 to 100 %
	[16]	Initialize	
5 • Memory Guard			[Off] / On

■ INTERNAL VIEW

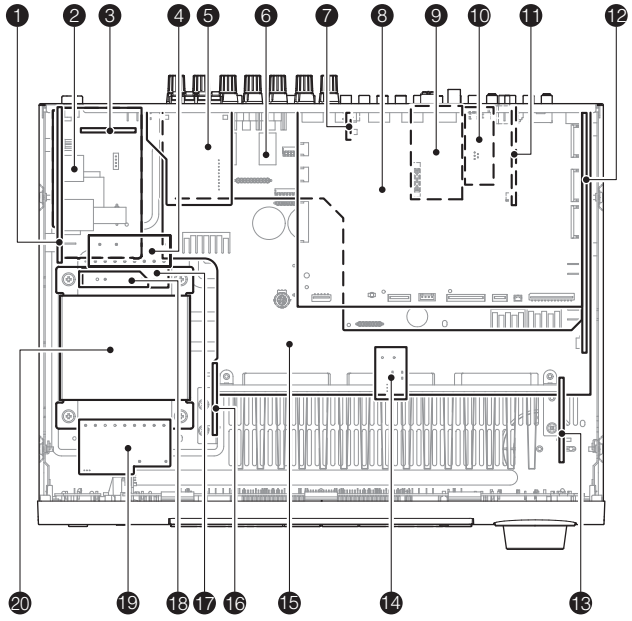

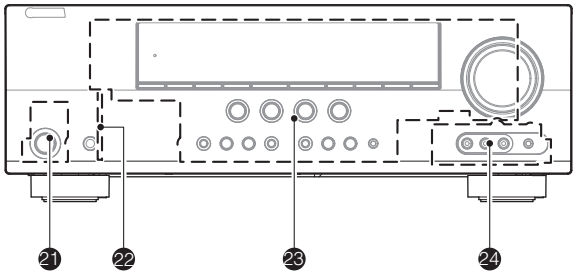

1. VIDEO (2) P.C.B.
2. VIDEO (3) P.C.B.
3. MAIN (3) P.C.B. (R, L models)
4. MAIN (2) P.C.B.
5. OPERATION (8) P.C.B.
6. VIDEO (1) P.C.B.
7. VIDEO (4) P.C.B.
8. DIGITAL P.C.B.
9. AM/FM TUNER
10. VIDEO (9) P.C.B. (F model)
11. OPERATION (9) P.C.B. (R, A, F, L models)
12. OPERATION (2) P.C.B.
13. OPERATION (10) P.C.B.
14. MAIN (5) P.C.B.
15. MAIN (1) P.C.B.
16. MAIN (6) P.C.B.
17. MAIN (4) P.C.B. (R, L models)
18. VIDEO (7) P.C.B. (U, C, A, F models)
19. VIDEO (6) P.C.B.
20. POWER TRANSFORMER
21. OPERATION (6) P.C.B.
22. OPERATION (3) P.C.B.
23. OPERATION (1) P.C.B.
24. OPERATION (7) P.C.B.

■ SERVICE PRECAUTIONS

Safety measures

- Some internal parts in this product contain high voltages and are dangerous. Be sure to take safety measures during servicing, such as wearing insulating gloves.
- Note that positions indicated below are dangerous even after the power is turned off because an electric charge remains and a high voltage continues to exist there.
  Before starting any repair work, perform discharge by connecting a discharge resistor (5k-ohms/10W) between terminals at following positions.

  The time required for discharging is about 30 seconds.

  C3703 on VIDEO (2) P.C.B.
  Refer to PRINTED CIRCUIT BOARDS: VIDEO (2) P.C.B..

■ DISASSEMBLY PROCEDURES

(Remove parts in the order as numbered.)
Disconnect the power cable from the AC outlet.

1. Removal of Top Cover

a. Remove 4 screws (①) and 5 screws (②). (Fig. 1)
b. Slide the top cover rearward to remove it. (Fig. 1)

2. Removal of Front Panel Unit

a. Remove screw (③), and remove W4001. (Fig. 1)
b. Remove 2 screws (④), and remove W4002 and W4403. (Fig. 1)
c. Remove 4 screws (⑤). (Fig. 1)
d. Remove CB20, CB461 and CB477. (Fig. 1)
e. Unlock and remove CB333. (Fig. 1)
f. Release 2 hooks, and remove the front panel unit. (Fig. 1)

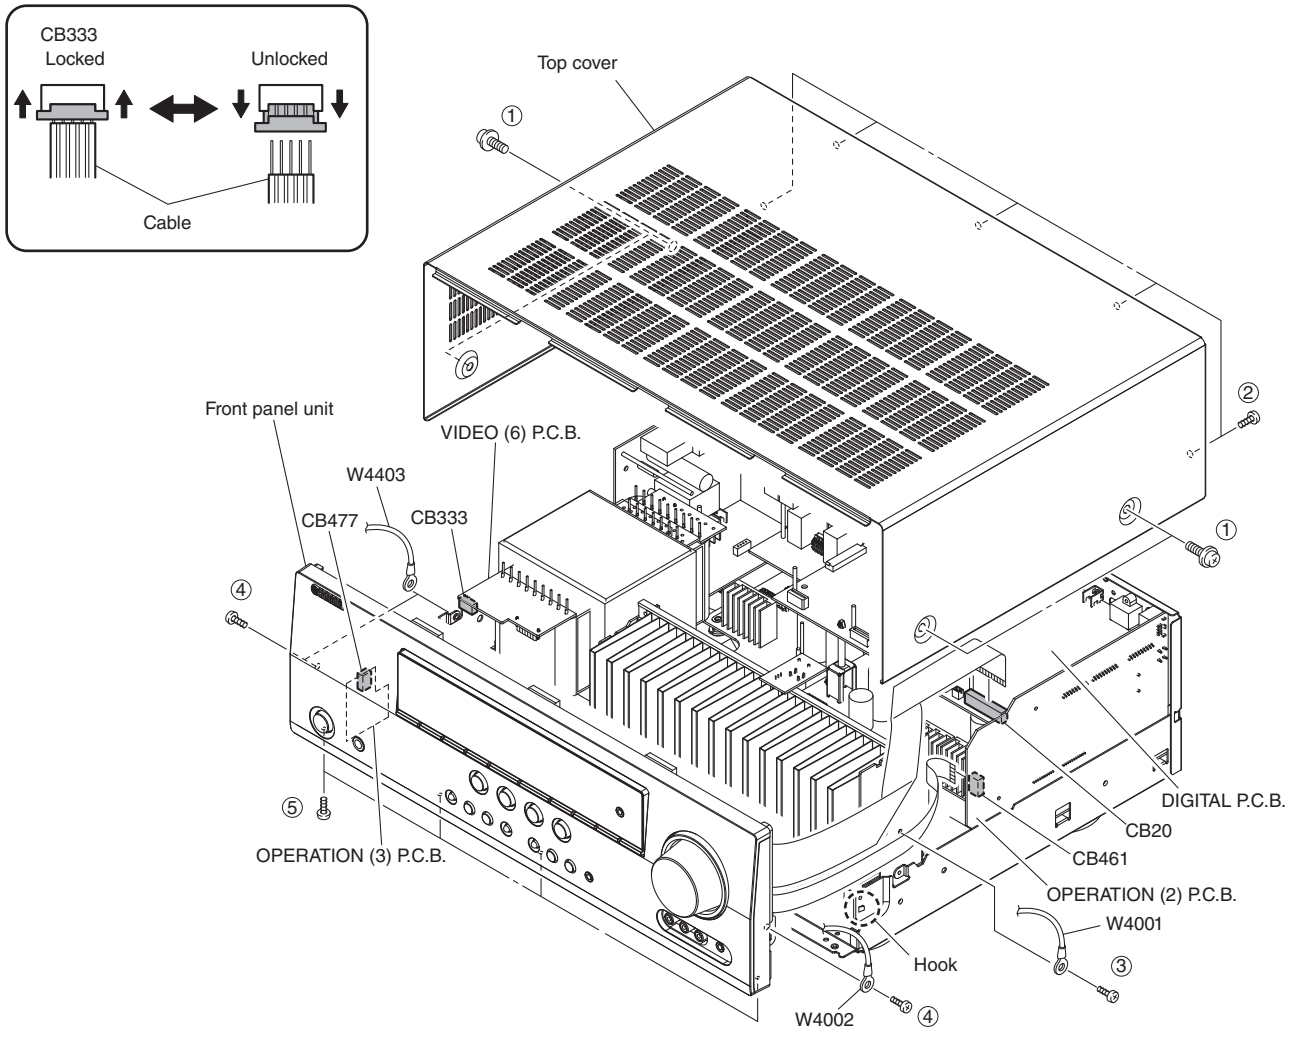

Fig. 1

3. Removal of DIGITAL P.C.B.

a. Remove 3 screws (U model) / 2 screws (C, R, A, F, L models) (⑥) and 5 screws (⑦). (Fig. 2)
b. Remove screw (⑧). (Fig. 2)
c. Remove CB7, CB21, CB25, CB27, CB72 and CB73 (F model). (Fig. 2)
d. Unlock and remove CB22–24. (Fig. 2)
e. Release hook. (Fig. 2)
f. Remove the DIGITAL P.C.B. which is connected directly to the OPERATION (2) P.C.B. with board-to-board connectors. (Fig. 2)

4. Removal of AMP Unit

a. Remove 3 screws (⑨) and 4 screws (⑩). (Fig. 2)
b. Remove 3 screws (⑪). (Fig. 2)
c. Remove the amp unit. (Fig. 2)

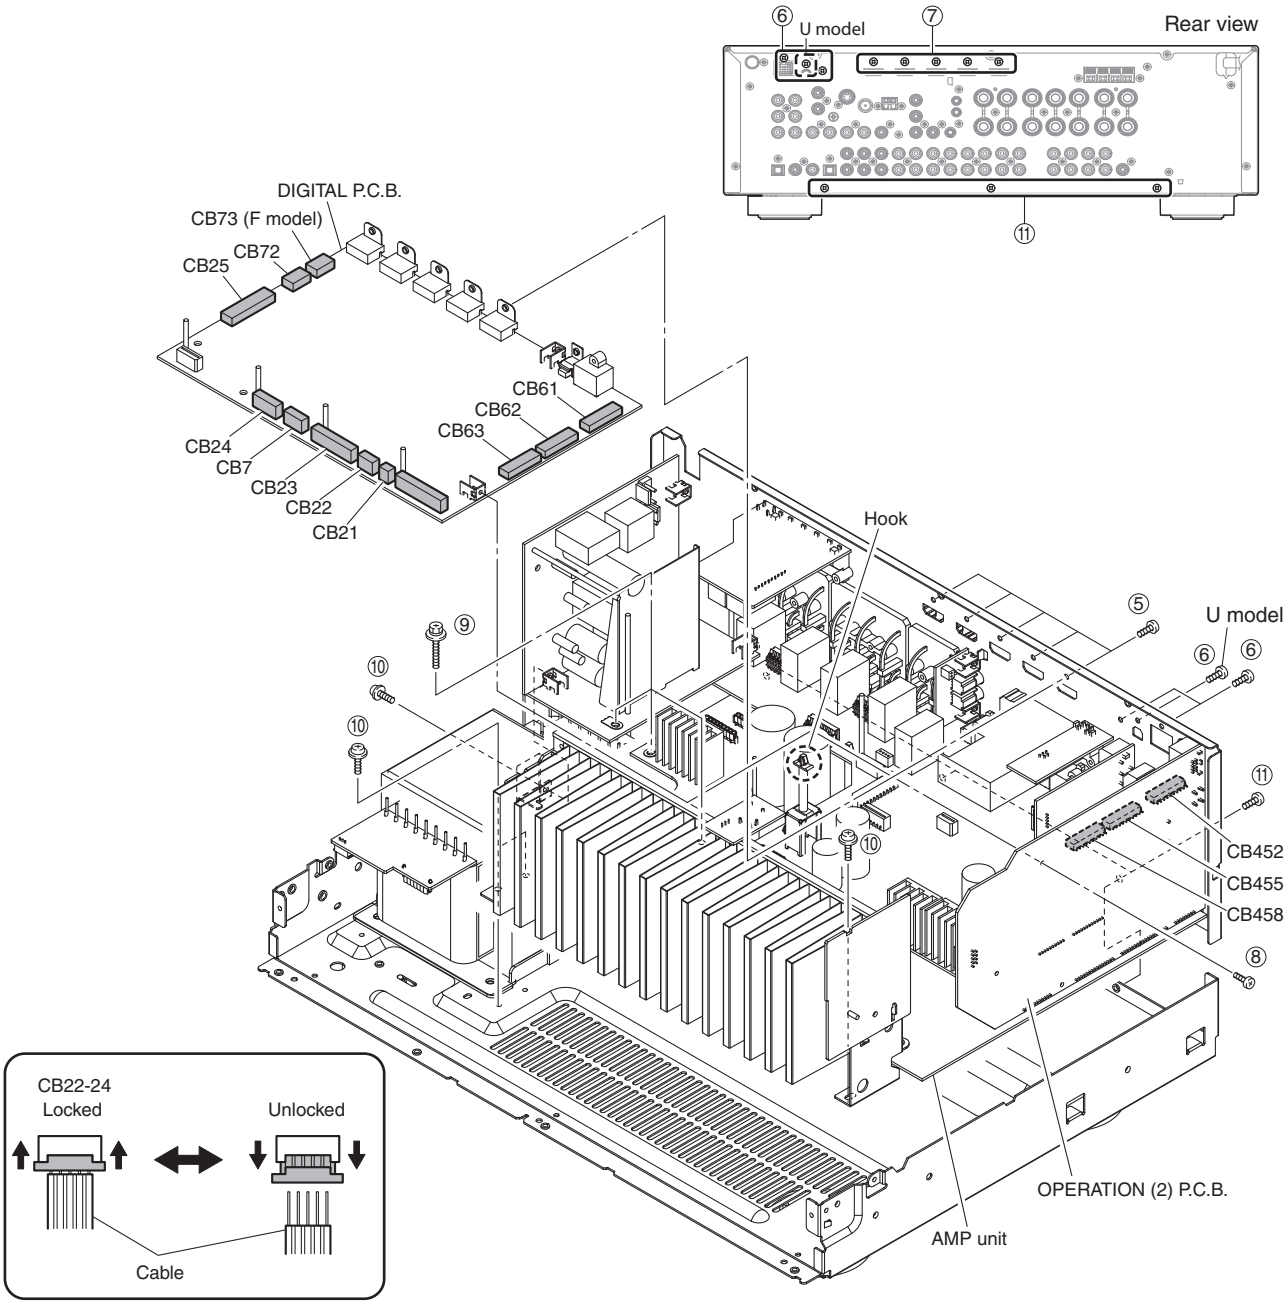

Fig. 2

When checking the P.C.B.s:

- Place the P.C.B.s (with rear panel) upright. (Fig. 3)
- Connect the ground points of the heat sink, rear panel and MAIN (1) P.C.B. (G1000) to the chassis with a ground lead or the like. (Fig. 3)
- When connecting the flexible flat cable, be careful with polarity.
- Reconnect all cables (connectors) that have been disconnected.
  Be sure to use the extension cable for servicing for the following section.

  DIGITAL P.C.B. CB20 to OPERATION (1) P.C.B. CB401:
  MF125400 (25P, 400mm, P=1.25)

  OPERATION (1) P.C.B. CB402 to OPERATION (2) P.C.B. CB461:
  MF109400 (9P, 400mm, P=1.25)

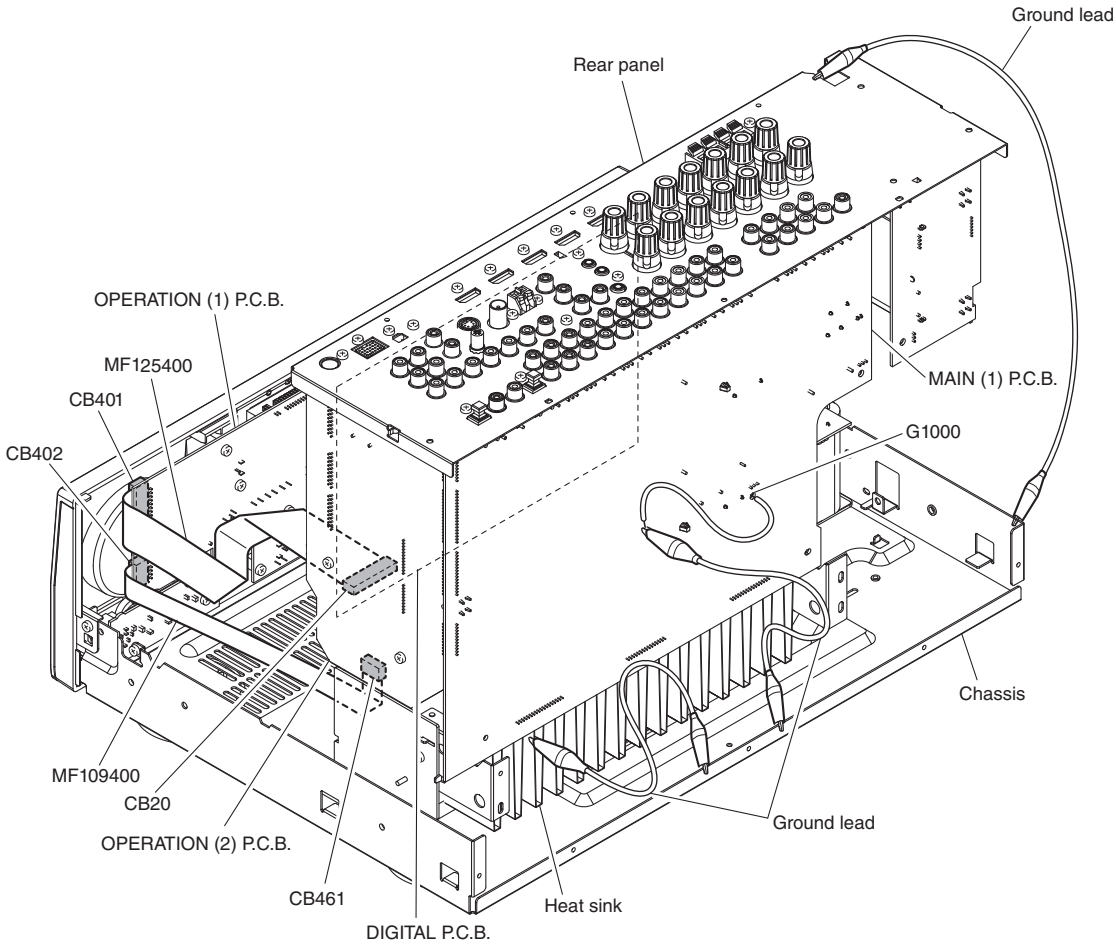

Fig. 3

■ UPDATING FIRMWARE

Note) The user memories (sound field parameters, system memory, tuner presetting, etc.) are kept stored even when you write the firmware.

When replacing the following parts, be sure to write the latest firmware.

Replaced parts	Writing method using the CD	Writing method using PC (RS232C)
DIGITAL P.C.B.	yes	yes
IC20 (Main microprocessor) of DIGITAL P.C.B.	no	yes
IC49 (TI (DSP) flash ROM) of DIGITAL P.C.B.	yes	yes

● Confirmation of firmware version and checksum

Before and after writing firmware, check the firmware version and checksum by using the self-diagnostic function menu.

Start up the self-diagnostic function and select “25. ROM VER/SUM/PORT” menu. (See “SELF DIAGNOSTIC FUNCTION”)
Using the sub-menu, have the firmware version and checksum displayed, and note down them.

25. ROM VER/SUM/PORT

Firmware version

The firmware version of microprocessor (IC20 DIGITAL P.C.B.) is displayed.

All checksum

The checksum value of microprocessor (IC20 DIGITAL P.C.B.) is displayed.

TI (DSP) FLASH ROM version

The firmware version of TI (DSP) FLASH ROM (IC49 DIGITAL P.C.B.) is displayed.

TI (DSP) FLASH ROM checksum

The checksum value of TI (DSP) FLASH ROM (IC49 DIGITAL P.C.B.) is displayed.

XM version (U model)

The firmware version of XM is displayed.

SIRIUS version (U model)

The firmware version of SIRIUS is displayed.

MODEL/DESTINATION

The model name and destination are displayed.

VERIFY error

Not applied to these models.

Writing method using the CD

● Required Tools

- DVD or CD player (with DIGITAL OUTPUT (OPTICAL or COAXIAL) jack)
- Optical cable (when OPTICAL jack is used)
- Digital audio pin cable (when COAXIAL jack is used)
- Firmware CD

  * To make the firmware CD, download the latest firmware from the specified download source.

● Connection

Connect this unit and DVD/CD player as shown below. (Fig. 1)

Example of OPTICAL jack

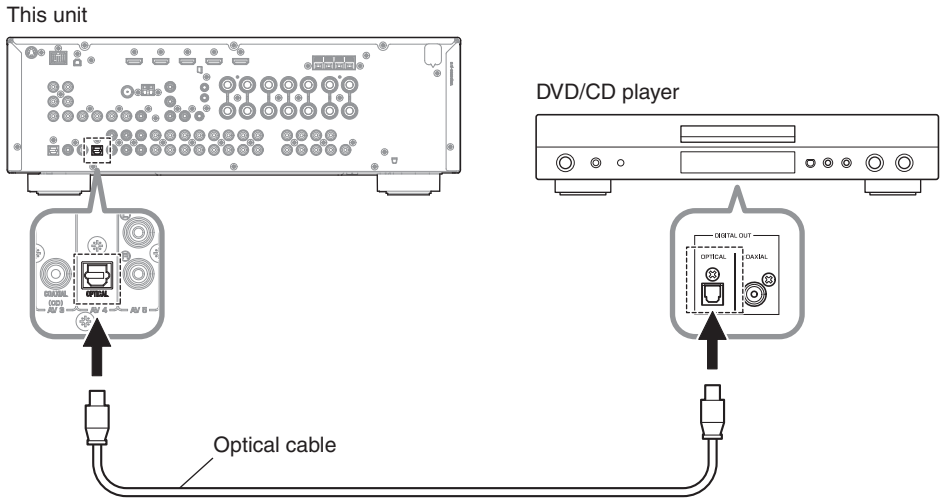

Example of COAXIAL jack

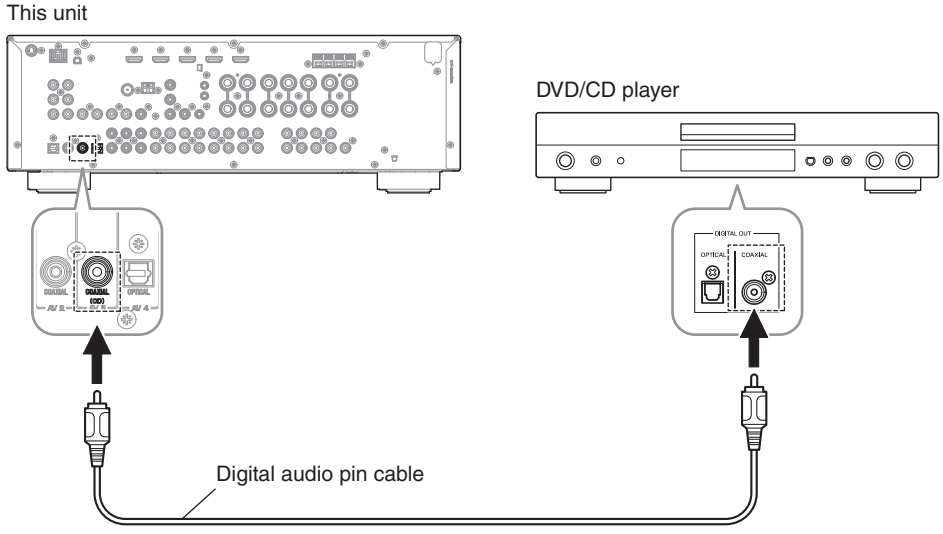

Fig. 1

● Operation Procedures

1. While pressing the “STRAIGHT” key of this unit, connect the power cable of this unit to the AC outlet. (Fig. 2)
   The FIRMWARE UPDATE mode is activated and “CDDA Upgrader” is displayed. (Fig. 2)

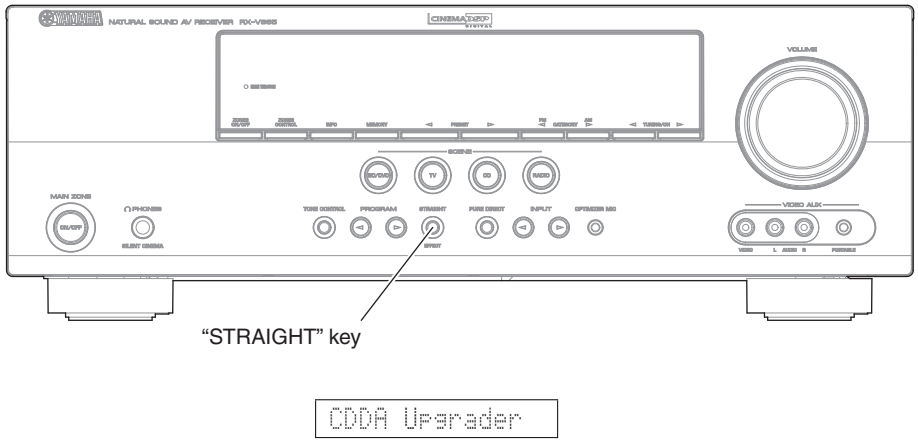

Fig. 2

2. Connect the power cable of DVD/CD player to the AC outlet.
3. Press the “STANDBY/ON” key of the DVD/CD player to turn on the power.
4. Press the “EJECT” key of the DVD/CD player to open the disc tray.
5. Put the firmware CD on the disc tray and close the disc tray.
6. Press the “PLAY” key of the DVD/CD player.
   Then writing of the firmware is started. (Fig. 3)
7. When writing of the firmware is completed, “Update Success”, “Please...” and “Power off!!” are displayed repeatedly. (Fig. 3)

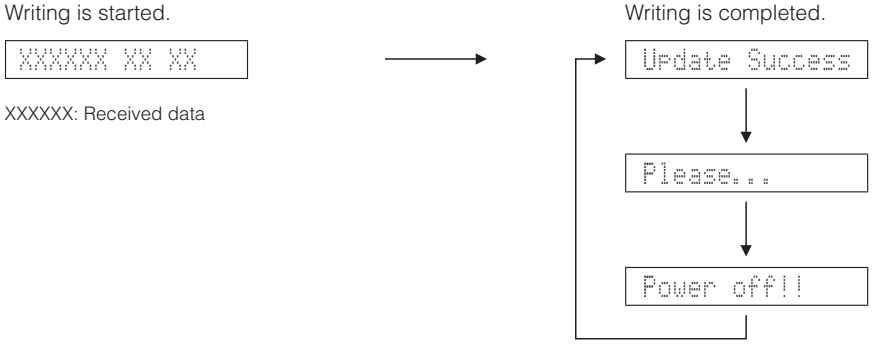

Fig. 3

* When the version of the firmware to be written is the same as the one existing in this unit, “Same Version”, “Please...” and “Power off!!” are displayed repeatedly. (Upgrading is not necessary.)

  If the display remains unchanged for longer than 10 seconds after starting the firmware CD play procedure, perform the firmware CD play procedure again from the beginning.

  If “FILE CORRUPTED” is displayed after “XXXXXX”, make sure that the written data is not corrupted and perform Steps 1 to 7 of “Writing method using the CD” again.

  If “Upgrade Failed” is displayed, perform Steps 1 to 7 of “Operation Procedures” again.

8. Press the “STOP” key of the DVD/CD player.
9. Press the “EJECT” key of the DVD/CD player to open the disc tray.
10. Remove the firmware CD from the disc tray and close the disc tray.
11. Press the “STANDBY/ON” key of the DVD/CD player to turn off the power.
12. Press the “MAIN ZONE ON/OFF” key of this unit to turn off the power.
13. Start up the self-diagnostic function and select “25. ROM VER/SUM/PORT” menu.

    Using the sub-menu, have the firmware version and checksum displayed, and then check that they are the same as written ones.

    * When the displayed firmware version and checksum are different from written ones, perform the “Writing method using the CD” all over again.

14. Press the “MAIN ZONE ON/OFF” key of this unit to turn off the power.

Writing method using PC (RS232C)

● Required Tools

- Firmware downloader program

  For microprocessor: DSP_FLASHER_v3.0.exe

  For DSP (TI flash ROM):
  DSP_FLASHER Ver2.7.exe

- Firmware

  For microprocessor: VX65xxxx.mot

  For DSP (TI flash ROM):
  Vx65_data1_verxxxxxr.hex

- RS232C cross cable “D-sub 9 pin female”

  (Specifications)

Pin No.2 RxD	Pin No.2 RxD
Pin No.3 TxD	Pin No.3 TxD
Pin No.5 GND	Pin No.5 GND
Pin No.7 RTS	Pin No.7 RTS
Pin No.8 CTS	Pin No.8 CTS

- RS232C conversion adaptor (Part No.: WR492800)

● Preparation and precautions

- Download firmware downloader program and the firmware from the specified source to the same folder of the PC.
- Prepare the above specified RS232C cross cable.
- While writing the firmware, keep the other application software on the PC closed.

  It is also recommended to keep the software on the task tray closed as well.

● Connection

1. Remove the top cover. (See “DISASSEMBLY PROCEDURES”)
2. Connect the writing port (CB27 of DIGITAL P.C.B.) of this unit to the serial port (RS232C) of the PC with RS232C cross cable, RS232C conversion adaptor and flexible flat cable as shown below. (Fig. 1)
3. Set the switch (SW7) of RS232C conversion adaptor as shown below. (Fig. 1)

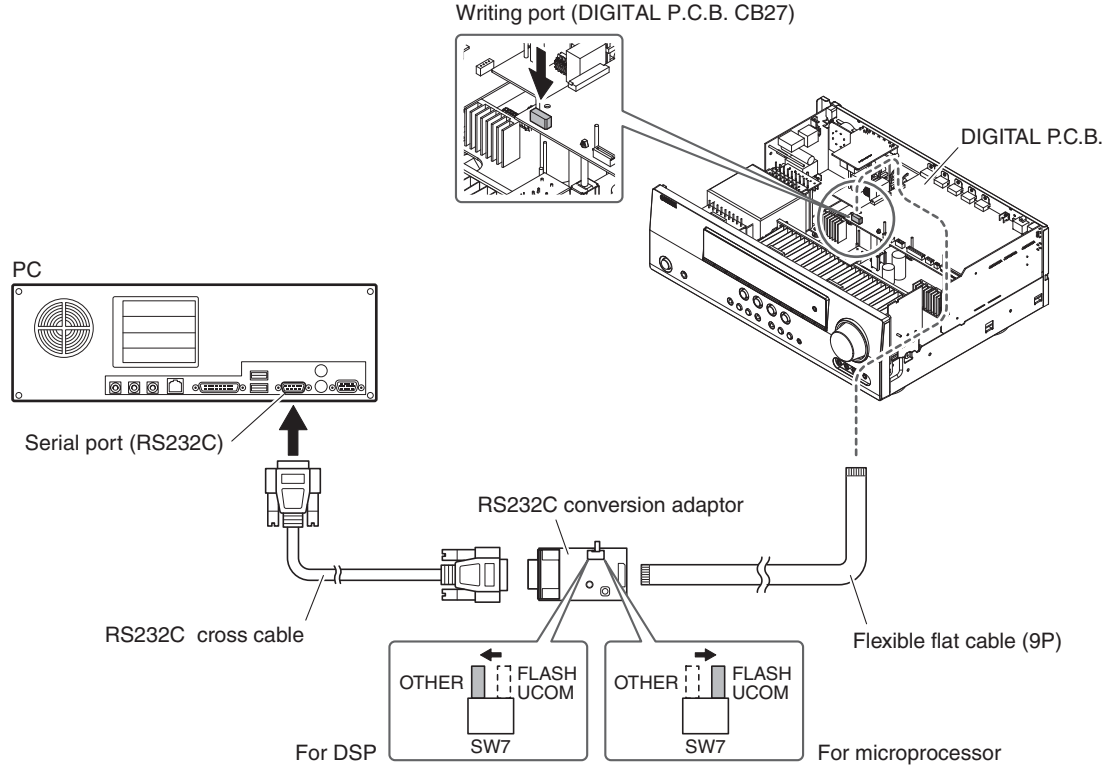

Fig. 1

● Operation Procedures

Writing to the microprocessor

1. With the power cable of this unit unconnected to the AC outlet, start up DSP_FLASHER_v3.0.exe. The screen appears as shown below. (Fig. 2)
2. Click [...] and select the firmware name. (Fig. 2)

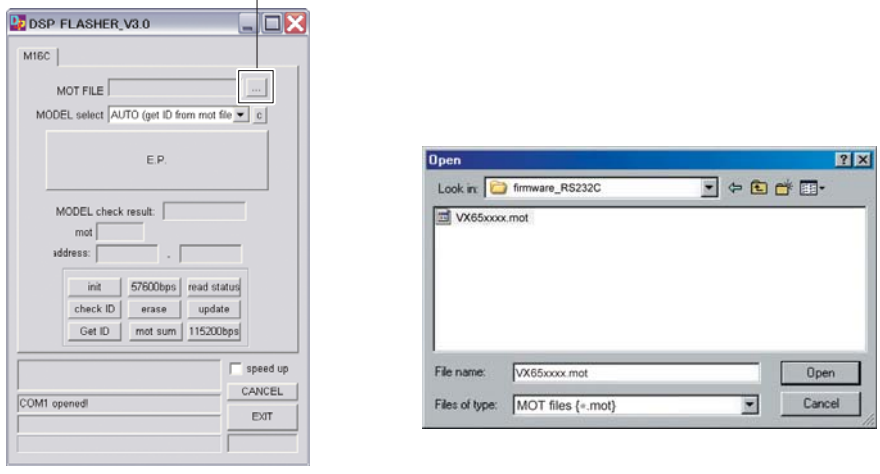

Fig. 2

3. Connect the power cable of this unit to the AC outlet.
4. Click [E.P.] to start writing. (Fig. 3)
5. When writing of the firmware is completed, “Program Finished!” is displayed. (Fig. 3)
   Click [OK]. (Fig. 3)
6. Click [EXIT] to end DSP_FLASHER_v3.0.exe. (Fig. 3)

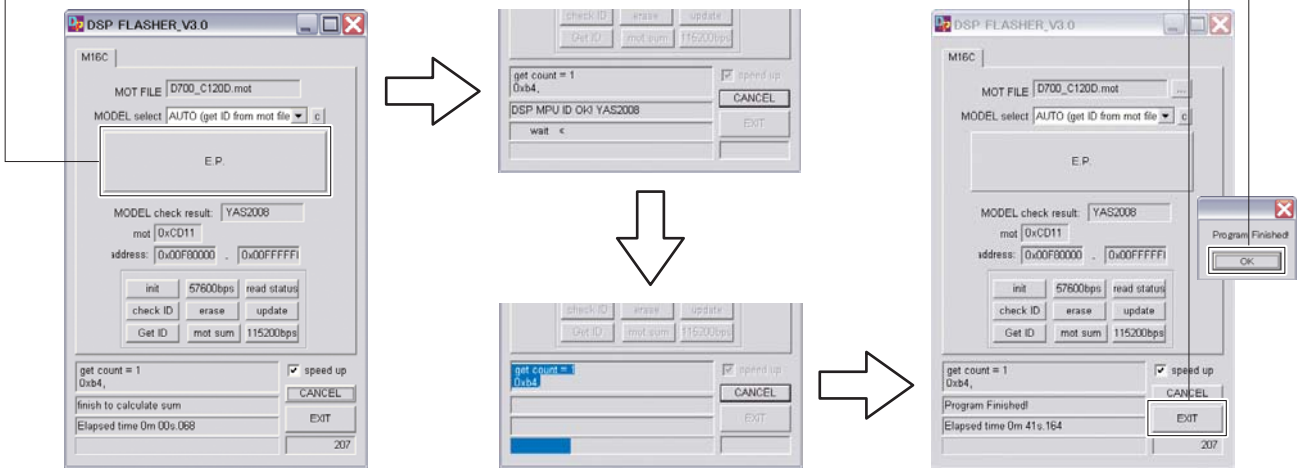

Writing being executed.

Writing completed.

Fig. 3

7. Start up the self-diagnostic function and select “25.ROM VER/SUM/PORT” menu.
   Using the sub-menu, have the firmware version and checksum displayed, and then check that they are the same as written ones.
   * When the firmware version and checksum are different from written ones, perform the “Writing to the microprocessor” all over again.
8. Disconnect the power cable of this unit from the AC outlet.

Writing to DSP

1. With the power cable of this unit unconnected to the AC outlet, start up DSP_FLASHER Ver2.7.exe. The screen appears as shown below. (Fig. 4)
2. Click [Vx61 DSP]. (Fig. 4)

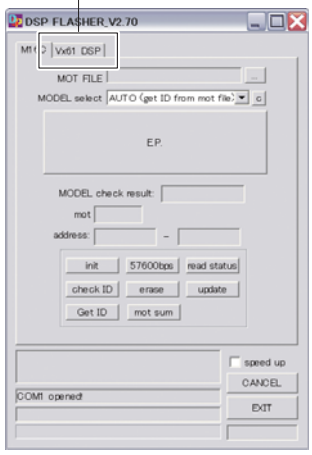

Fig. 4

3. Click [...] and select the firmware name. (Fig. 5)

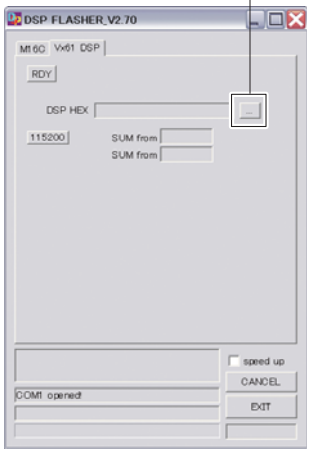

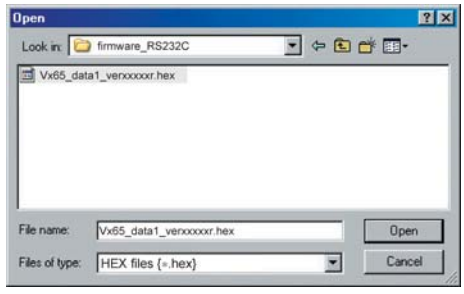

Fig. 5

4. Click [RDY]. (Fig. 6)

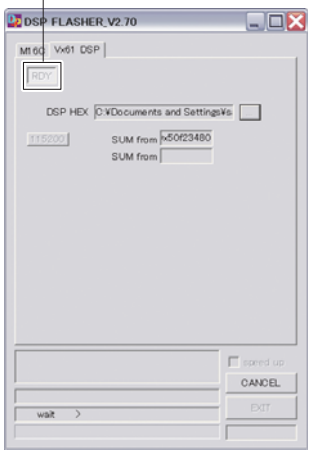

Fig. 6

5. While pressing the “PURE DIRECT” key of this unit, connect the power cable of this unit to the AC outlet. (Fig. 7)
Writing is started automatically. (Fig. 7)

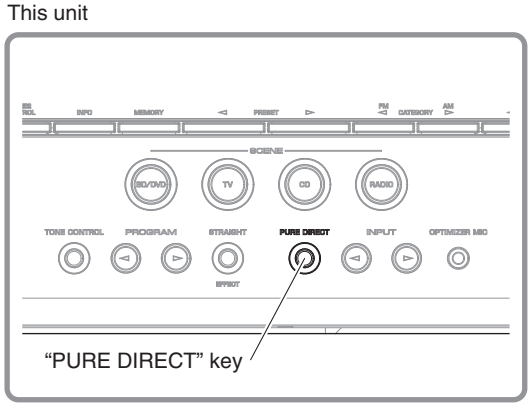

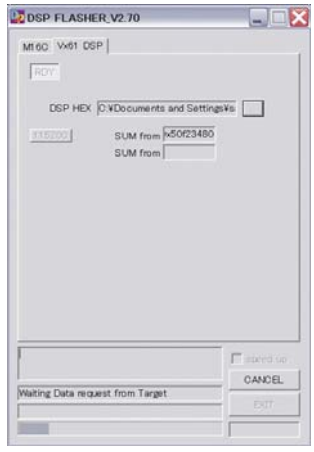

Writing being executed.

Fig. 7

6. When writing of the firmware is completed, “Vx61 DSP Flash finished!” is displayed. (Fig. 3)
7. Click [EXIT] to end DSP_FLASHER_v2.7.exe. (Fig. 8)

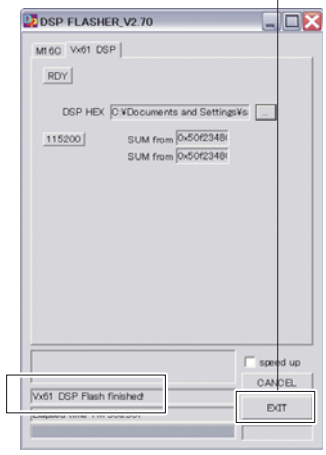

Fig. 8

8. Start up the self-diagnostic function and select “25.ROM VER/SUM/PORT” menu.
   Using the sub-menu, have the firmware version and checksum displayed, and then check that they are the same as written ones.
   * When the firmware version and checksum are different from written ones, perform the “Writing to DSP” all over again.
9. Disconnect the power cable of this unit from the AC outlet.

■ SELF-DIAGNOSTIC FUNCTION

This unit has self-diagnostic functions that are intended for inspection, measurement and location of faulty point.
There are 25 main menu items, each of which has sub-menu items.
Listed in the table below are main menu items and sub-menu items.
Note that not all menu items listed will apply to the models covered in this service manual.

No.	Main menu	Sub-menu
1	BYPASS	1 ANALOG BYPASS
		2 DSP BYPASS
2	RAM THROUGH	1 RAM MARGIN
		2 RAM FULL ALL
		3 RAM FULL CENTER
		4 RAM FULL SURROUND
		5 RAM FULL SURROUND BACK
3	HDMI AUDIO	1 SPDIF
		2 Multi
		3 DSD
4	SPEAKERS SET	1 FRNT: SML 0dB
		2 CENTER: NONE
		3 LFE/B: FRNT
		4 Zone2 Amp ON
		5 Bi-AMP
		6 TONE: MAX
		7 TONE: MIN
		8 SPEAKER 6 ohms
5	XCH-INPUT	1 8ch INPUT 6 ohms
		2 8ch INPUT 8 ohms
		3 LIM/PLDET/THM
6	MIC CHECK	1 MIC CHECK
7	FL/OSD CHECK	1 VFD CHECK
		2 VFD DISP OFF / MONITOR MUTE
		3 VFD DISP ALL / COMPONENT MUTE
		4 VFD DIMMER / OSD CHARACTER PATTERN
		5 CHECK PATTERN / OSD CHARACTER PATTERN
8	MANUAL TEST	1 TEST ALL
9	A/D DATA CHECK	1 PS1/PS2
		2 DC/TH
		3 IMP/PL
		4 DST/DK
		5 K0/K1
10	VIDEO CHECK	1 I2C
		2 DIGITAL COMPONENT
		3 DIGITAL CVBS
		4 DIGITAL Y/C (F model)
		5 ANALOG BYPASS
		6 TEST PATTERN
		7 VIDEO INFORMATION
11	XM STATUS (U model)	1 1k -1dB /44kHz
		2 1k -61dB /44kHz
		3 Mute /44kHz
		4 XM Tone /44kHz
		5 ISO Tone /44kHz

No.	Main menu	Sub-menu
11	XM STATUS (U model)	6 1k -1dB /32kHz
		7 1k -61dB /32kHz
		8 Mute /32kHz
		9 XM Tone /32 kHz
		10 ISO Tone /32 kHz
		11 Bus Power: OFF
12	SIRIUS (U model)	1 SIRIUS: OK (NG)
		2 SR
		3 SSP (SIRIUS #0 VERSION)
		4 MAC (SIRIUS #1 VERSION)
		5 ADP (SIRIUS #2 VERSION)
		6 PRDID
		7 SEQID
13	HD RADIO (Not applied to these models.)	1 HD CPU VERSION
		2 D: xxxxxxxxxxxx
14	DOCK	1 DOCK
		2 BT VERSION
15	HDMI INFO	1 HMN
		2 HPI
		3 HVN
16	HDMI SELECT	1 HDMI NONE
		2 HDMI IN 1
		3 HDMI IN 2
		4 HDMI IN 3
		5 HDMI IN 4
		6 HDMI UP CONVERSION
		7 HDMI UP THROUGH
17	USB (Not applied to these models.)	1 USB File 1
		2 USB File 2
18	IF STATUS (Not applied to these models.)	1 DSP STATUS
19	BUS CHECK	1 TI BUS
		2 BF LOOP (Not applied to these models.)
20	NO MENU	Invalidity
21	PROTECTION HISTORY	1 HISTORY 1
		2 HISTORY 2
		3 HISTORY 3
		4 HISTORY 4
22	NO MENU	Invalidity
23	UPDATE	1 TI FLASH BOOT (Not applied to these models.)
24	FACTORY PRESET	1 PRESET INHI
		2 PRESET RSRV
25	ROM VER/SUM/PORT	1 VERSION
		2 ALL SUM
		3 TI (DSP) FLASH VERSION
		4 TI (DSP) FLASH SUM
		5 XM VERSION (U model)
		6 SIRIUS VERSION (U model)
		7 MODEL/DESTINATION
		8 Verify (Not applied to these models.)

● Starting Self-Diagnostic Function

While pressing those 2 keys of this unit as shown in the figure below, press the “MAIN ZONE ON/OFF” key to turn on the power.

The self-diagnostic function mode is activated.

Keys of this unit

While pressing these keys, turn on the power.

● Starting Self-Diagnostic Function in the protection cancel mode

If the protection function works and causes hindrance to trouble shoot, cancel the protection function as described below, and it will be possible to enter the self-diagnostic function mode.
(The protection functions other than the excess current detect function will be disabled.)

While pressing those 2 keys as shown in the figure above, press the “MAIN ZONE ON/OFF” key to turn on the power and keep pressing those 2 keys and "MAIN ZONE ON/OFF" key for 3 seconds or longer.
The self-diagnostic function mode is activated with the protection functions disabled.

In this mode, the SLEEP segment of the FL display of this unit flashes to indicate that the mode is self-diagnostic function mode with the protection functions disabled.

CAUTION!
Using this product with the protection function disabled may cause damage to itself. Use special care when using this mode.

● Canceling Self-Diagnostic Function

1. Before canceling self-diagnostic function, execute setting for FACTORY PRESET of main menu No. 24 (Memory initialization inhibited or Memory initialized).
   * In order to keep the user memory stored, be sure to select PRESET INHIBITED (Memory initialization inhibited).
2. Press the “MAIN ZONE ON/OFF” key of this unit to turn off the power.

● Display provided when Self-Diagnostic Function started

The FL display of this unit displays the protection function history data then the main menu (sub-menu "1. ANALOG BYPAS" of main menu No. 1 BYPASS) a few seconds later.

When there is no history of protection function:

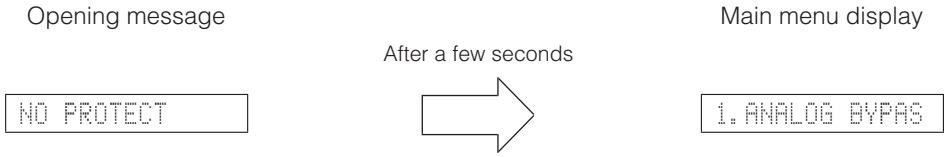

When there is a history of protection function:

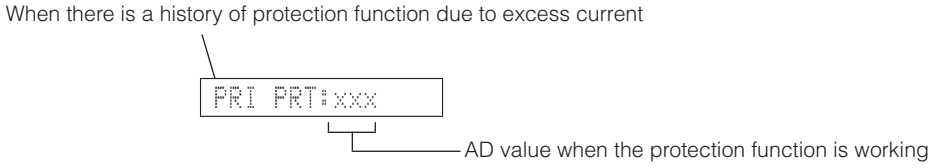

Cause: An excessive current flowed through the power amplifier.
Supplementary information: As current of the power amplifier is detected, the abnormal channel can be identified by checking the current detect transistor.

Turning on the power without correcting the abnormality will cause the protection function to work immediately and the power supply will instantly be shut off.

Note)

- **Applying the power to this unit without correcting the abnormality can be dangerous and cause additional circuit damage. To avoid this, if protection function has been activated 3 times continuously, the power will not turn on even when the "MAIN ZONE ON/OFF" key is pressed. In order to turn on the power again, disconnect the power cable of this unit from the AC outlet once and then reconnect it again.**
- **The output transistors in each amplifier channel should be checked for damage before applying power of this unit.**
- **Amplifier current should be monitored by measuring DC voltage across the emitter resistors for each channel.**

When there is a history of protection function due to abnormal DC output

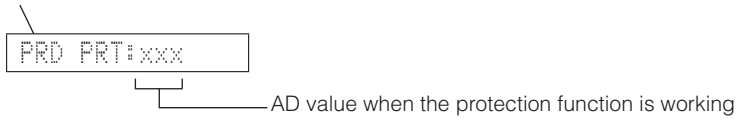

Cause: DC output from the power amplifier is abnormal.
Supplementary information: The protection function worked due to a DC voltage appearing at the speaker terminal.

A cause could be a defect in the amplifier.
If the power is turned on with the abnormality unsolved, the protection function works in about 3 seconds to turn off the power.

When there is a history of protection function due to abnormal voltage in the power supply section

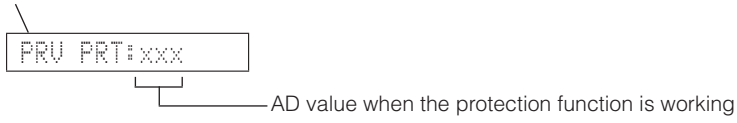

Cause: The voltage in the power supply section is abnormal.
Supplementary information: The protection function worked due to a defect or overload in the power supply.

If the power is turned on with the abnormality unsolved, the protection function works in about 1 second to turn off the power.

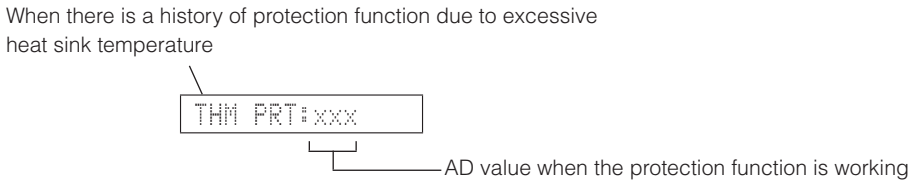

Cause: The temperature on the heat sink is excessive.
Supplementary information: The protection function worked due to the temperature limit being exceeded.
Causes could be poor ventilation or a defect related to the thermal sensor.

If the power is turned on with the abnormality unsolved, the protection function works in about 1 second to turn off the power.

* For detection of each protection function, refer to main menu described later.

● **History of protection function**
When the protection function has worked, its history is stored in memory with a backup.
Even if no abnormality is noted while servicing the unit, an abnormality which has occurred previously can be defined as long as the backup data has been stored.
The history of the protection function is cleared when self-diagnostic function is cancelled by selecting PRESET RESERVED (Memory initialized) of main menu No. 24 or when the backup data is erased.

● Operation procedure of Main menu and Sub-menu

There are 25 main menu items, each of them having sub-menu items.

Main menu selection

Select the main menu using “SCENE TV” (forward) and “SCENE BD/DVD” (reverse) keys.

Sub-menu selection

Select the sub-menu using “SCENE RADIO” (forward) and “SCENE CD” (reverse) keys.

Keys of this unit

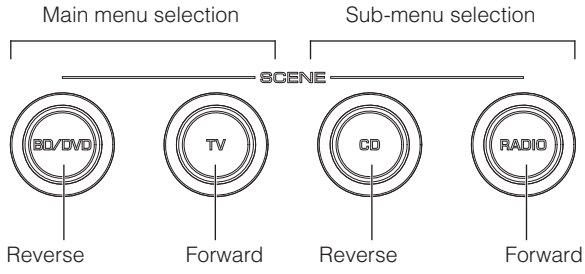

● Functions in Self-Diagnostic Function mode

In addition to the self-diagnostic function menu items, functions as listed below are available.

- Power ON/OFF
- Master volume
- Muting
- Input select
- Audio select
- PROGRAM select
- Tone control
- PURE DIRECT ON/OFF
- ZONE2 ON/OFF

* Functions related to the tuner and the set menu are not available.

● Initial settings used to start Self-Diagnostic Function

The following initial settings are used when starting self-diagnostic function.
When self-diagnostic function is canceled, these settings are restored to those before starting self-diagnostic function.

- Master volume: -20 dB
- Zone2 Volume: +2.5 dB
- Input: AV5 (MAIN ZONE) / AUDIO1 (ZONE2)
- Main menu: 1. ANALOG BYPASS
- Speaker setting: LARGE, Bass out to SWFR (All channels)
- Speaker impedance: 8 ohms position
- OSD: ON
- XM Power: ON (U model)

● Details of Self-Diagnostic Function menu

1. BYPASS

Using the sub-menu, it is possible to select ANALOG BYPASS output or DSP BYPASS output.

ANALOG BYPASS

The analog input audio signal is output to FRONT L/R in PURE DIRECT.

1.ANALOG BYPAS

INPUT: AV5 ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	+11.5 dBm	-∞	-∞	-∞	-∞	-∞	-∞

DSP BYPASS

The digital input audio signal is output to FRONT L/R in PURE DIRECT.

1.DSP BYPASS

INPUT: AV5 ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	-∞	-∞	-∞	-∞	-∞	-∞	-∞

ANALOG BYPASS

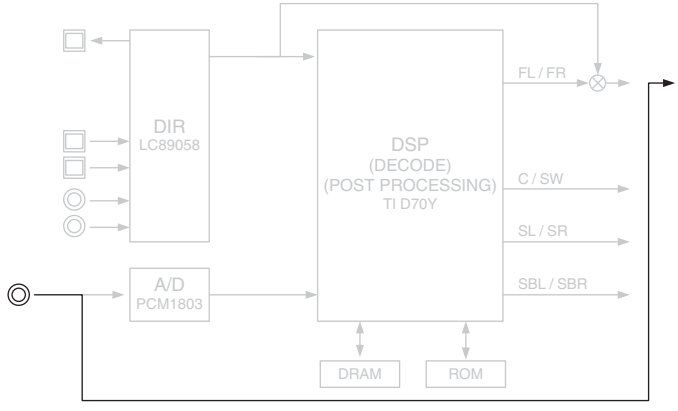

(Shaded items not used in this example)

DSP BYPASS

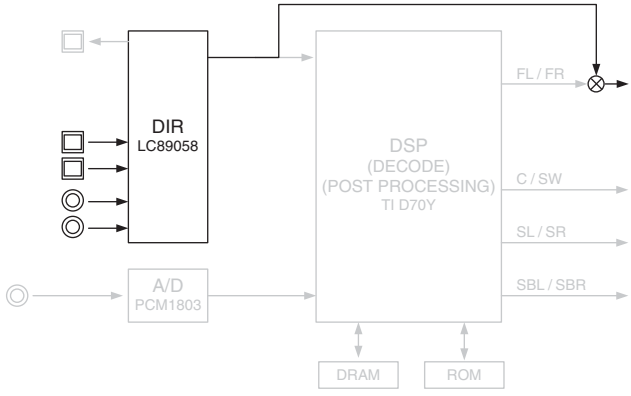

(Shaded items not used in this example)

2. RAM THROUGH

Using the sub-menu, it is possible to select MARGIN output or FULL BIT output.

RAM MARGIN

The audio signal is output including the head margin.

INPUT: AV5 ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	+11.5 dBm	+11.5 dBm	+11.5 dBm	+11.5 dBm	-∞	-∞	-7.0 dBm

RAM FULL BIT

The audio signal is output in digital full bit without including the head margin.

The SUBWOOFER signal is output but not in digital full bit.

INPUT: AV5 ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	+11.5 dBm	+11.5 dBm	+11.5 dBm	+11.5 dBm	-∞	-∞	-7.0 dBm

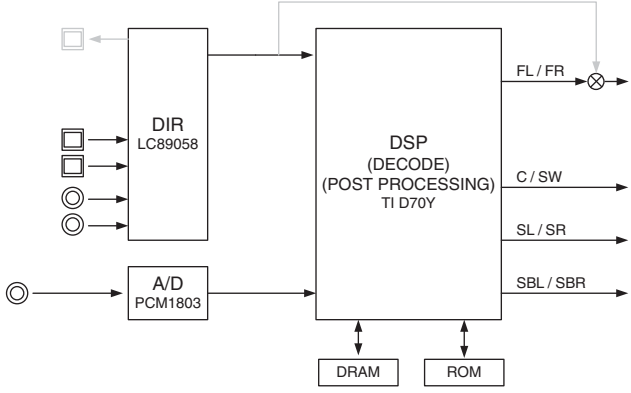

(Shaded items not used in this example)

When input source is stereo, signal is assigned as below.

Front L → Front L / Center / Surround L / Surround Back L, R
Front R → Front R / Surround R
Front L +10 dB → SWFR

RAM FULL CENTER

The audio signal is output to only CENTER in digital full bit without including the head margin.

INPUT: AV5 ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	-∞	+11.5 dBm	-∞	-∞	-∞	-∞	-∞

RAM FULL SURROUND

The audio signal is output to only SURROUND L/R in digital full bit without including the head margin.

INPUT: AV5 ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	-∞	-∞	+11.5 dBm	-∞	-∞	-∞	-∞

RAM FULL SURROUND BACK

The audio signal is output to only SURROUND BACK L/R in digital full bit without including the head margin.

INPUT: AV5 ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	-∞	-∞	-∞	+11.5 dBm	-∞	-∞	-∞

3. HDMI AUDIO

Using the sub-menu, the audio signals input to HDMI IN are selected and output.

* When selecting “DSD”, be sure to connect an HDMI unit equipped with DSD output function to this unit.

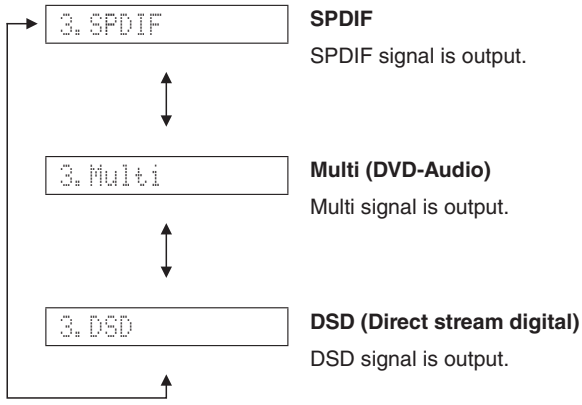

SPDIF
SPDIF signal is output.

Multi (DVD-Audio)
Multi signal is output.

DSD (Direct stream digital)
DSD signal is output.

4. SPEAKER SET

The analog switch settings for each sub-menu are as shown in the table below.

	FRONT	CENTER	SURROUND	SURROUND BACK	SUBWOOFER
FRNT : SML 0dB	SMALL	LARGE	LARGE	LARGE	SWFR
CENTER : NONE	LARGE	NONE	LARGE	LARGE	SWFR
LFE/B : FRNT	LARGE	SMALL	SMALL	SMALL	FRONT
Zone2 Amp ON	LARGE	LARGE	LARGE	– (∗1)	SWFR
Bi-AMP	LARGE	LARGE	LARGE	LARGE (∗2)	SWFR
TONE : MAX	LARGE	LARGE	LARGE	LARGE	SWFR
TONE : MIN	LARGE	LARGE	LARGE	LARGE	SWFR
SPEAKER 6 ohms	LARGE	LARGE	LARGE	LARGE	SWFR

(∗1) ZONE2 L/R (EXTRA SP L/R): LARGE
(∗2) Bi-AMP: LARGE

LARGE: This mode is used for a speaker with high bass reproduction performance (a large unit). Full bandwidth signals are output.

SMALL: This mode is used for a speaker with low bass reproduction performance (a small unit). The signals of 90 Hz or less are mixed into the channel specified by LFE/BASS.

NONE: This mode is used for no center speaker. The center content is reduced by 3 dB and distributed to FRONT L/R.

SWFR: LFE of 5.1 ch signal or LFE/BASS lower than 90 Hz is output through SUBWOOFER OUT.

FRONT: LFE of 5.1 ch signal or LFE/BASS lower than 90 Hz is distributed to FRONT L/R.

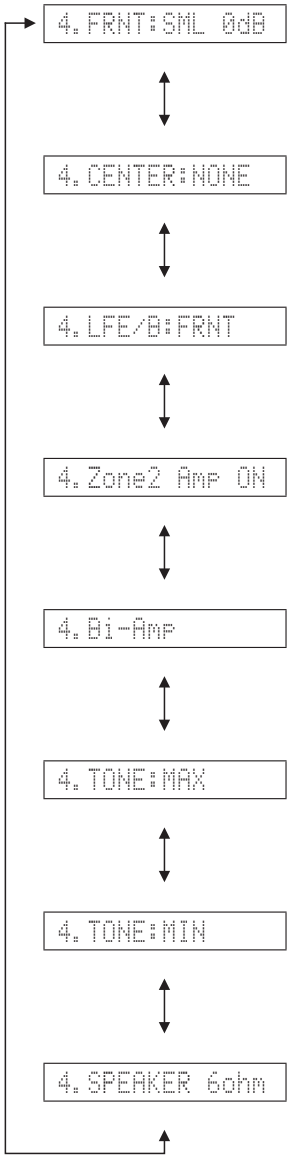

FRONT : SML 0dB

The FRONT L/R signal, when 90 Hz or lower, is mixed to the channel specified by LFE/BASS.

CENTER : NONE

The CENTER signal is assigned to FRONT L/R.

LFE / BASS : FRONT

The LFE/BASS signal is assigned to FRONT L/R.

Zone2 Amp (EXTRA SP) ON

The ZONE2 L/R (EXTRA SP L/R) signal is output.

Bi-AMP

The Bi-AMP signal is output.

TONE : MAX

The audio signal is output with the tone control "BASS +10 dB, TREBLE +10 dB".

TONE : MIN

The audio signal is output with the tone control "BASS -10 dB, TREBLE -10 dB".

SPEAKER 6 ohms

The audio signal is output with the speaker impedance "6 ohms".

INPUT: AV5 ANALOG
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Sub-menu	Input level	Volume	SPEAKER OUT				SUBWOOFER OUTPUT
			FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	
FRNT : SML 0dB	Both ch, -20 dBm	+6.5 dB	+11.5 dBm	+11.5 dBm	+11.5 dBm	+11.5 dBm	-4.0 dBm
CENTER : NONE	Both ch, -20 dBm	+6.5 dB	+16.5 dBm	-∞	+11.5 dBm	+11.5 dBm	-7.0 dBm
LFE/B : FRNT (50 Hz)	Both ch, -20 dBm	+6.5 dB	-∞	+11.5 dBm	+11.5 dBm	+11.5 dBm	-∞
Zone2 Amp ON	Both ch, -20 dBm	+6.5 dB	+11.5 dBm	+11.5 dBm	+11.5 dBm	-∞ (*)	-7.0 dBm
Bi-AMP	Both ch, -20 dBm	+6.5 dB	+11.5 dBm	+11.5 dBm	+17.5 dBm	+11.5 dBm	-7.0 dBm
TONE : MAX	Both ch, -20 dBm	+6.5 dB	+12.5 dBm	+11.5 dBm	+11.5 dBm	+11.5 dBm	-7.0 dBm
TONE : MIN	Both ch, -20 dBm	+6.5 dB	+10.5 dBm	+11.5 dBm	+11.5 dBm	+11.5 dBm	-7.0 dBm
SPEAKER 6 ohms	Both ch, -20 dBm	+6.5 dB	+11.5 dBm	+11.5 dBm	+11.5 dBm	+11.5 dBm	-7.0 dBm

(*) ZONE2 L/R (EXTRA SP L/R) SPEAKER OUT: +11.5 dBm

5. MULTI CH-INPUT

The input source “MULTI CHANNEL INPUT” is selected.

Using the sub-menu, it is possible to select the 6 ohms/8 ohms.

8 ch INPUT 6 ohms



INPUT: MULTI CH INPUT
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	+11.5 dBm	+11.5 dBm	+11.5 dBm	+11.5 dBm	-∞	-∞	-18.0 dBm

8 ch INPUT 8 ohms

INPUT: MULTI CH INPUT
SPEAKER OUT: 1 kHz, SUBWOOFER OUTPUT: 50 Hz

Input level	Volume	SPEAKER OUT						SUB-WOOFER
		FRONT	CENTER	SURROUND	SURROUND BACK	PRESENCE	ZONE2	
Both ch, -20 dBm	+6.5 dB	+11.5 dBm	+11.5 dBm	+11.5 dBm	+11.5 dBm	-∞	-∞	-18.0 dBm

LIM / PLDET / THM

LIM: Setting value of LIM (Limiter control)

* Do not change the value settings because this menu is only for the use of development staff.

PLDET: Power limiter detection

The A/D conversion value during operation is displayed.
(Reference voltage: 3.3 V=255)

THM: Temperature protection detection

The A/D conversion value during operation is displayed.
(Reference voltage: 3.3 V=255)

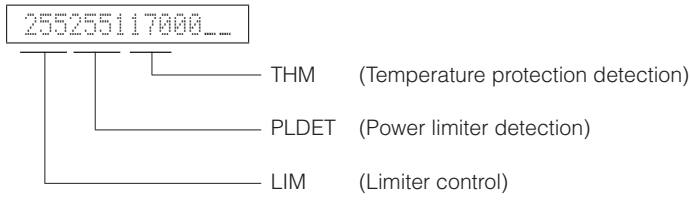

6. MIC CHECK

The signals input through the microphone are output to only FRONT L via A/D and D/A.

7. FL/OSD CHECK

This menu is used to to check the FL display and video control sections. When checking the video control section, connect a TV monitor to this unit with a component video cable, S video cable and video pin cable.

Using the sub-menu, the FL display section or video control section varies as shown below.

Checking FL display section

Initial display

All segments OFF



All segments ON (dimmer 100 %)



All segments ON (dimmer 50 %)



Lighting of segments in lattice



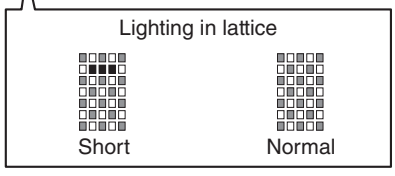

Check of the Video control section. (Monitor out)

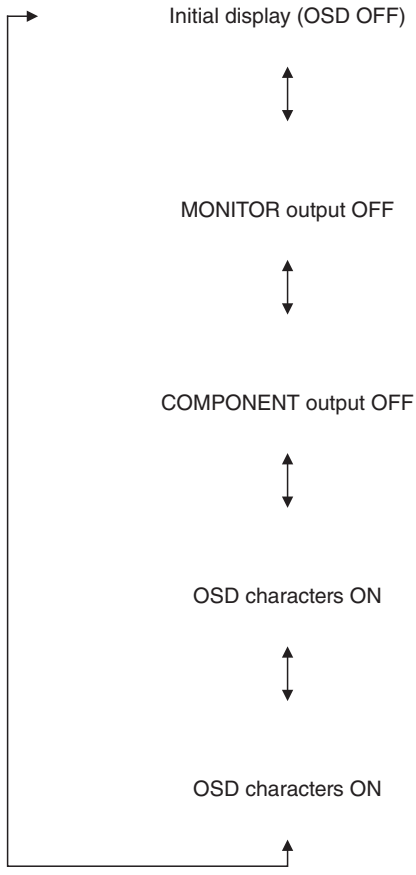

OSD characters

Segment conditions of the FL driver and the FL tube are checked by turning ON and OFF all segments. Next, the operation of the FL driver is checked by using the dimmer control. Then a short between segments next to each other is checked by turning ON and OFF all segments alternately (in lattice).

(In the above example, the segments in the second row from the top are shorted.)

8. MANUAL TEST

The noise generator with a built-in DSP outputs the test noise through the channels specified by using the sub-menu.

The noise frequency for LFE is 30 to 80 Hz. Other than that, the noise frequency is 500 to 2 kHz.

TEST ALL

The test noise is output from all channels.

9. A/D DATA CHECK

This menu is used to display the A/D conversion value of the microprocessor which detects panel keys of this unit and protection functions by using the sub-menu.

When K0/K1 menu is selected, keys become non-operable due to detection of the values of all keys.

In order to turn on the power again, disconnect the power cable of this unit from the AC outlet once and then reconnect it again.

* The figures in the diagram are given as reference only.

PS1/PS2

PSx: Power supply voltage protection detection

PS1

Voltage detects: AC_BL, AC_12, AC_5, ±12 and +5V

Normal value: 38 to 128
(Reference voltage: 3.3 V=255)

PS2

Voltage detects: -5 and +5I

Normal value: 31 to 125
(Reference voltage: 3.3 V=255)

* If PS1 and PS2 are out of the normal value range, the protection function works to turn off the power.



DC/TH

DC: Power amplifier DC (DC voltage) output is detected.

Normal value: 23 to 70
(Reference voltage: 3.3 V=255)

TH: Temperature on the heat sink is detected.

Normal value: 0 to 124
(Reference voltage: 3.3 V=255)

* If DC and TH are out of the normal value range, the protection function works to turn off the power.



IMP/PL

IMP: 8 or 6 ohms impedance setup detection

IMP 8: 8 ohms setting

IMP 6: 6 ohms setting

PL: PLDET (Power amplifier output voltage detection)

The power amplifier output voltage is detected and the power amplifier input voltage is controlled according to the detected output voltage.

(Reference voltage: 3.3 V=255)



U, C, A, F models (Reference voltage: 3.3 V=255)

	During normal operation	Value for starting limiter operation	Value for canceling limiter operation
PLDET (8 ohms/6 ohms)	255 / 255	87 / 146	125 / 171
LIM (Limiter control)	H	L	H

R, L models (Reference voltage: 3.3 V=255)

	During normal operation	Value for starting limiter operation	Value for canceling limiter operation
PLDET (8 ohms/6 ohms)	255 / 255	100 / 100	131 / 131
LIM (Limiter control)	H	L	H

DST/DK

DST: Destination detection
(Reference voltage: 3.3 V=255)

DK: DOCK type detection
(Reference voltage: 3.3 V=255)

Destination detection for AD port
Pull-up resistance 10 k-ohms

Ohm (R3809 VIDEO P.C.B.)	1.2 k	2.7 k	4.7 k	15.0 k	47.0 k	100.0 k
A/D value (3.3 V=255)	15 – 46	46 – 69	69 – 92	139 – 177	185 – 224	224 – 247
DEST (139 pin)	U	C	R	A	F	L

DOCK detection for AD port (IC20 Microprocessor pin no. 128)
Pull-up resistance 10 k-ohms

DOCK type (DKID 141 pin)	Bluetooth	iPod	No connect
A/D value (3.3 V=255)	5 – 25	120 – 140	255

K0/K1

K0/K1: KEY0/KEY1 (Panel key of this unit)

When the A/D conversion value of the panel key becomes out of the specified range (standard value ±4), normal operation will not be available.

In this case, check the constant of voltage dividing resistor, solder condition, etc. Refer to the table below.

(Reference voltage: 3.3 V=255)

Display	KEY0 (133 pin)
0 – 11	SCENE RADIO
12 – 32	SCENE CD
33 – 54	SCENE TV
55 – 75	SCENE BD/DVD
76 – 95	ZONE2 ON/OFF
96 – 118	ZONE2 CONTROL

Display	KEY0 (133 pin)
119 – 142	PROGRAM ▶
143 – 162	PROGRAM ◀
181 – 197	MAIN ZONE ON/OFF
198 – 229	TONE CONTROL
255	KEY OFF

Display	KEY1 (134 pin)
0 – 11	PURE DIRECT
12 – 32	STRAIGHT
33 – 54	INFO
55 – 77	MEMORY
78 – 98	PRESET ◀
99 – 120	PRESET ▶
121 – 143	CATEGORY ◀ FM

Display	KEY1 (134 pin)
144 – 165	CATEGORY ▶ AM
166 – 185	TUNING CH ◀
186 – 205	TUNING CH ▶
206 – 225	INPUT ◀
226 – 245	INPUT ▶
255	KEY OFF

10. VIDEO CHECK

I2C check

The I2C (Inter integrated circuit) bus line connection is checked.

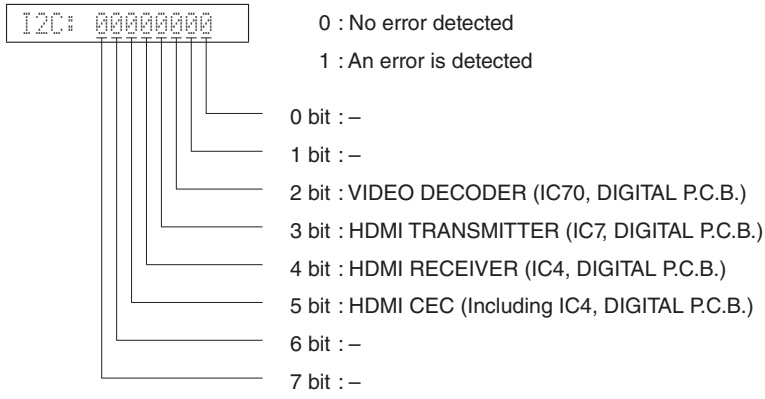

Digital component

The video signal is converted and output as shown below.

Digital Component

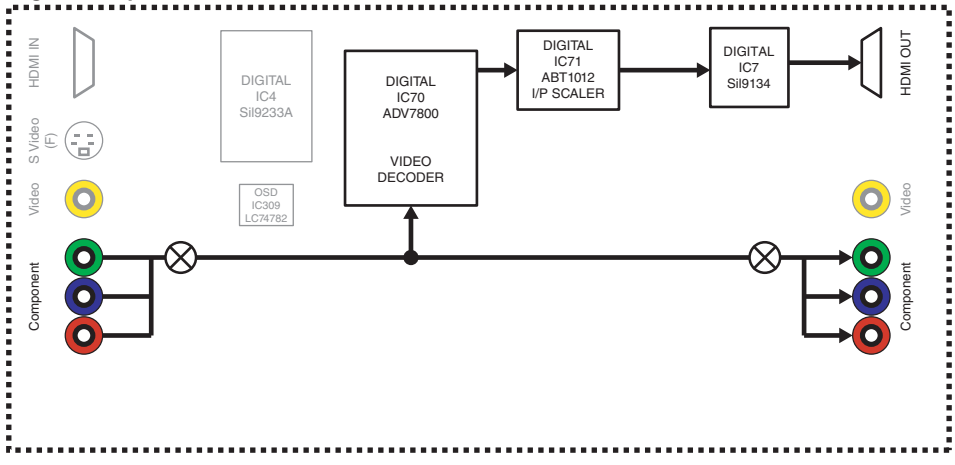

Digital CVBS (Video)

The video signal is converted and output as shown below.

DIGITAL CVBS

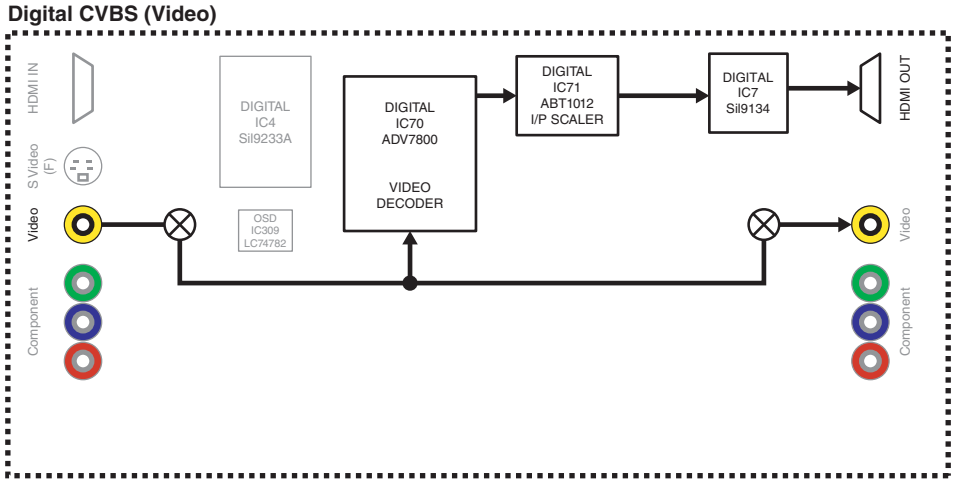

Digital Y/C (S-Video) (F model)

The video signal is converted and output as shown below.

DIGITAL Y/C

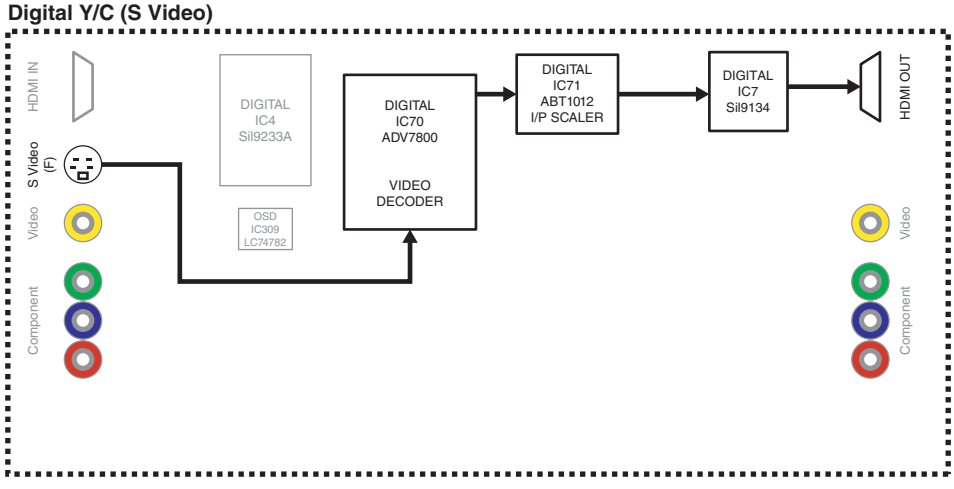

Analog bypass

The video signal is converted and output as shown below.

```
ANALOG BYPASS
```

Analog bypass

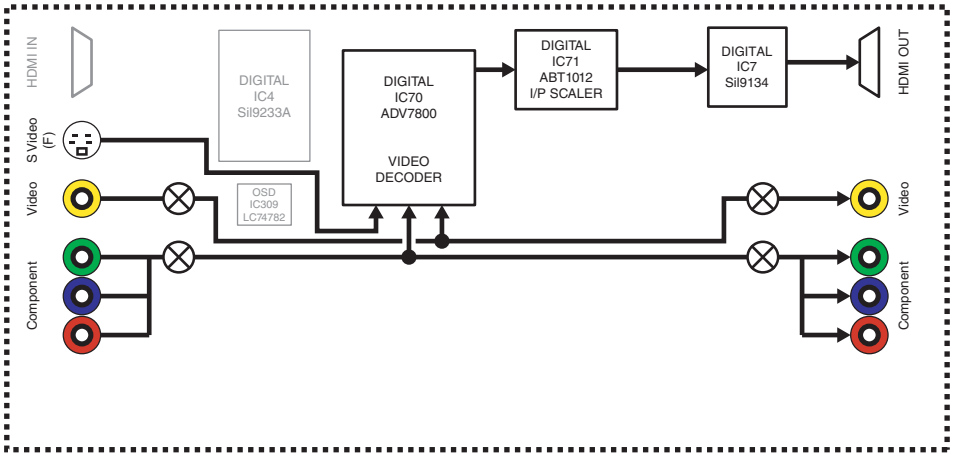

Test pattern

Not applied to these models.

```
TEST PATTERN
```

Video information

The information of input video signal is displayed.

Example

```
VIDEO IN  480i
```

11. XM STATUS (U model)

This menu is used to check the output of XM Radio Antenna.

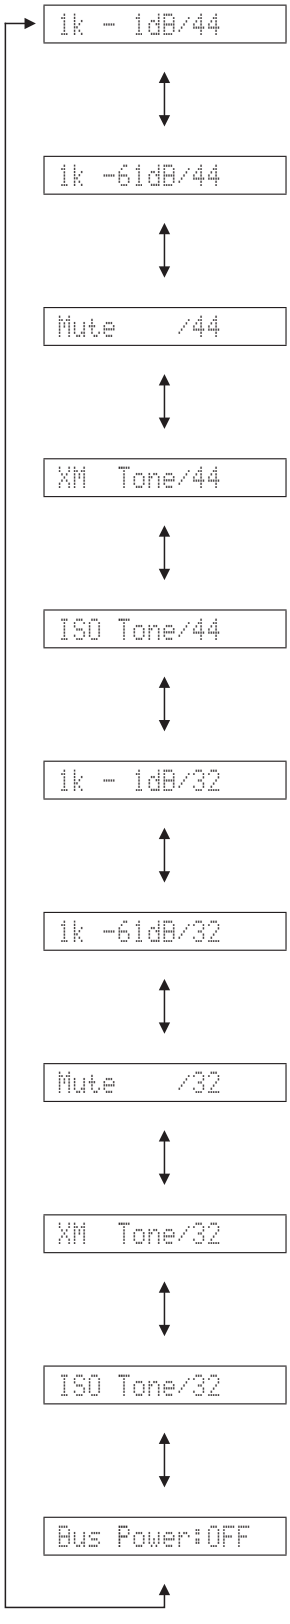

1 kHz, -1 dB / 44.1 kHz

The test tone (1 kHz, -1 dB / 44.1 kHz) is output.

1 kHz, -61 dB / 44.1 kHz

The test tone (1 kHz, -61 dB / 44.1 kHz) is output.

Mute / 44.1 kHz

No signal is output.

XM tone / 44.1 kHz

The XM tone / 44.1 kHz is output.

ISO tone / 44.1 kHz

The ISO tone /44.1 kHz is output.

1 kHz, -1 dB / 32.0 kHz

The test tone (1 kHz, -1 dB / 32.0 kHz) is output.

1 kHz, -61 dB / 32.0 kHz

The test tone (1 kHz, -61 dB / 32.0 kHz) is output.

Mute / 32.0 kHz

No signal is output.

XM tone / 32.0 kHz

The XM tone / 32.0 kHz is output.

ISO tone / 32.0 kHz

The ISO tone / 32.0 kHz is output.

XM bus power: OFF

The power of XM radio antenna module is turned off.

12. SIRIUS (U model)

The SIRIUS information are displayed.

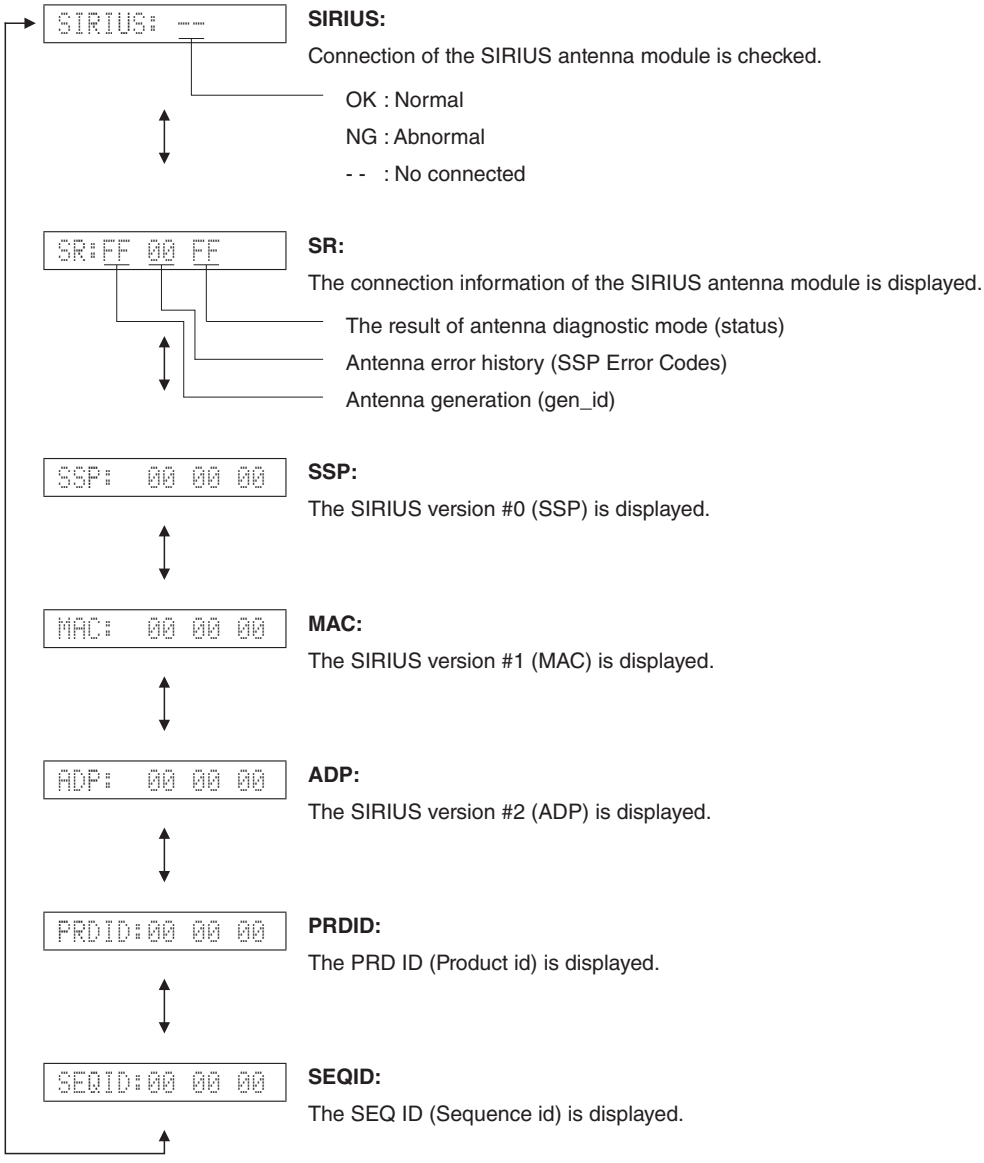

SIRIUS:

Connection of the SIRIUS antenna module is checked.

OK : Normal

NG : Abnormal

- - : No connected

SR:

The connection information of the SIRIUS antenna module is displayed.

The result of antenna diagnostic mode (status)

Antenna error history (SSP Error Codes)

Antenna generation (gen_id)

SSP:

The SIRIUS version #0 (SSP) is displayed.

MAC:

The SIRIUS version #1 (MAC) is displayed.

ADP:

The SIRIUS version #2 (ADP) is displayed.

PRDID:

The PRD ID (Product id) is displayed.

SEQID:

The SEQ ID (Sequence id) is displayed.

13. HD RADIO (U model)

Not applied to these models.

CPU version

DSP version

14. DOCK

This menu is used to check the DOCK connector without the iPod itself.

With the power to this unit turned off, short between pins No. 14 (TX) and No. 18 (RX), between pins No. 1 (PWR) and No. 17 (ACCPOW), between pins No. 4 (iPDET) and No. 8 (DGND). Also, connect a 10 k-ohms, 1/4 W resistor between pins NO. 21 (DKID) and No. 8 (DGND). (Make sure that the power is turned off when shorting pins.)

Start up the self-diagnostic function and select this menu.

The check result is displayed according to the following display specifications.

Note) Be sure to return the shorted pins to their original condition after executing this test.

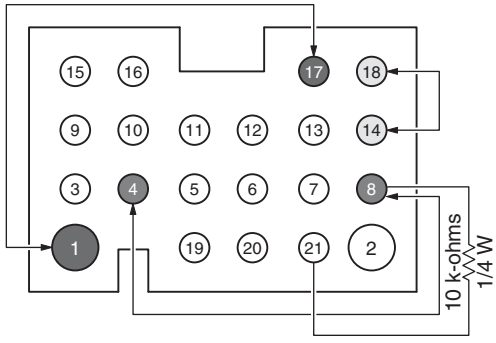

DOCK CONNECTOR

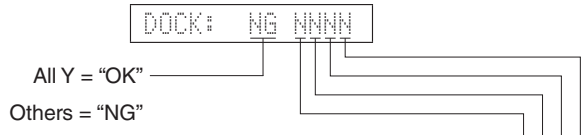

Check item	Short pins	Result		Display
UART loop back test	Pins No.14 (TX) – No.18 (RX)	OK		Y
		NG		N
iPAP (iPod accessory power) detection	Pins No.1 (PWR) – No.17 (ACCPOW)	IC20 pin No. 114	High = YES	Y
			Low = No	N
iPDET (iPod installation to DOCK) detection	Pins No.4 (iPDET) – No.8 (DGND)	IC20 pin No. 8	Low = installed	Y
			High = not installed	N
DKID (DOCK ID) detection	Pins No.21 (DKID) – No.8 (DGND) * 10 k-ohms, 1/4 W pull down	IC20 pin No. 141	10 k-ohms, 1/4 W pull down	Y
			Other	N

BT VERSION

The DOCK (Bluetooth module) version is displayed.

15. HDMI INFORMATION

The HDMI information are displayed.

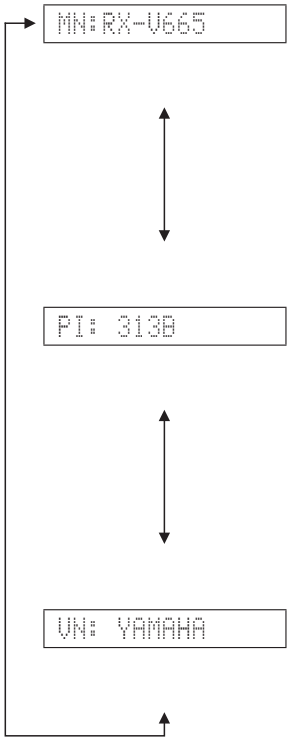

HDMI model name

The model name of this unit written in HDMI module is displayed.

RX-V665

HTR-6260

HDMI product ID

The product ID of this unit written in HDMI module is displayed.

313B : RX-V665

313C : HTR-6260

HDMI vendor name

The vendor name “YAMAHA” of this unit written in HDMI module is displayed.

16. HDMI SELECT

Using the sub-menu, the selected input signal is output to HDMI OUT.

* Support audio is set to “OTHER”.

HDMI NONE

HDMI none

No signal is output.

HDMI IN 1 **

HDMI in 1

HDMI “IN 1” is output.

** The Deep Color video signals is input, “30” bit or “36” bit is displayed.

HDMI IN 2 **

HDMI in 2

HDMI “IN 2” is output.

HDMI IN 3 **

HDMI in 3

HDMI “IN 3” is output.

HDMI IN 4 **

HDMI in 4

HDMI “IN 4” is output.

HDMI UPCONV

HDMI up conversion

The analog video signals are output after undergoing Interlace/Progressive conversion.

HDMI UP THR

HDMI up conversion through

The analog video signals are output after undergoing video up-conversion.

HDMI up-conversion 1080p

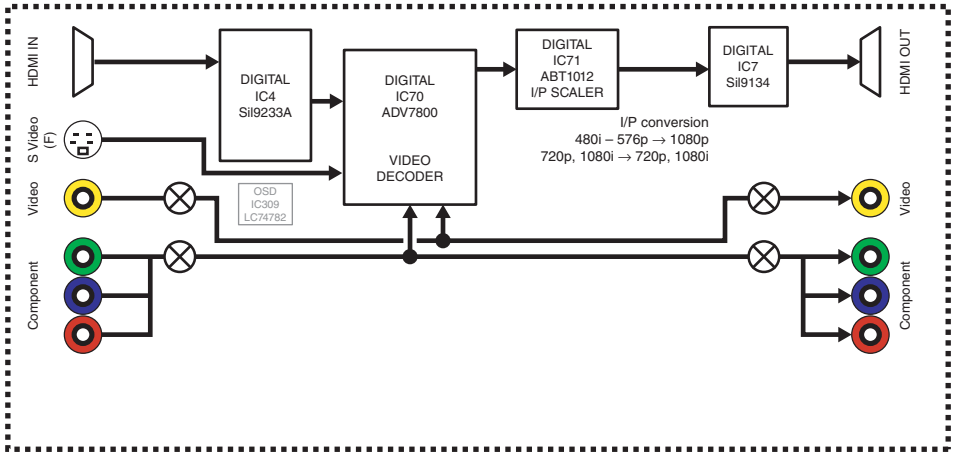

HDMI up-conversion through

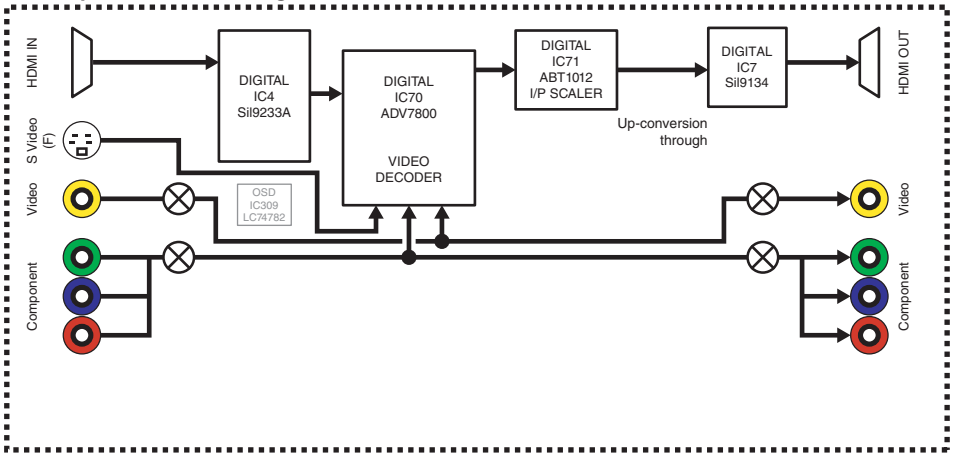

17. USB

Not applied to these models.

USB file 1



USB file 2

18. IF STATUS (Input function status)

Not applied to these models.

19. BUS CHECK

Communication and bus line connection between devices on the DSP P.C.B. are checked.

TI (DSP) BUS check

Communication and bus line connection between microprocessor (IC20) and TI (DSP, IC44) are checked.

NoEr : No error detected.

Boot : When “Boot” is displayed for a few seconds or “Boot” and “NoEr” are displayed alternately, there is possibility that an error occurs.

BF LOOP :

Not applied to these models.

20. NO MENU (Invalidity)

20. NO MENU（Invalidity）

21. PROTECTION HISTORY

The history of protection function is displayed.

Select this menu and press the “STRAIGHT” key, and the history will be erased.

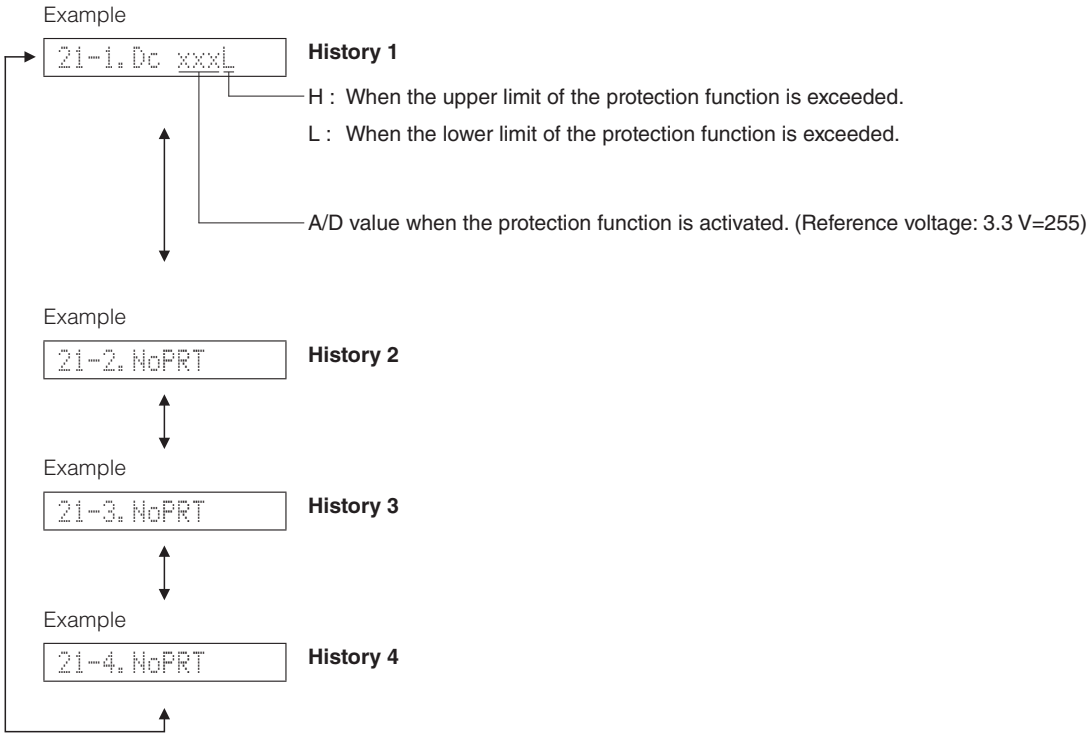

22. NO MENU (Invalidity)

23. UPDATE

Not applied to these models.

UPDATE TI

24. FACTORY PRESET

This menu is used to reserve and inhibit initialization of the back-up IC.

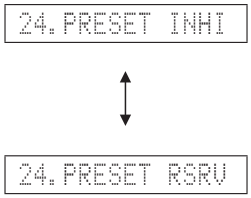

PRESET INHIBIT (Initialization inhibited)

Back-up IC initialization is not executed. Select this sub-menu to protect the values set by the user.

PRESET RESERVED (Initialization reserved)

Initialization of the back-up IC is reserved. (Actually, initialization is executed the next time that the power is turned on.) Select this sub-menu to reset to the original factory settings or to reset the back-up IC. Any protection history will be cleared.

CAUTION: Before setting to the PRESET RESERVED, write down the existing preset memory content of the tuner. (This is because setting to the PRESET RESERVED will cause the user memory content to be erased.)

25. ROM VER/SUM/PORT

The firmware version, checksum values, model name and destination are displayed.

The checksum is obtained by adding the data at every 8-bit for each program area and expressing the result as a 4-figure hexadecimal data.

* The figures in the diagram are given as reference only.

Firmware version

The firmware version of microprocessor (IC20 DIGITAL P.C.B.) is displayed.



All checksum

The checksum value of microprocessor (IC20 DIGITAL P.C.B.) is displayed.

TI (DSP) FLASH ROM version

The firmware version of TI (DSP) FLASH ROM (IC49 DIGITAL P.C.B.) is displayed.

TI (DSP) FLASH ROM checksum

The checksum value of TI (DSP) FLASH ROM (IC49 DIGITAL P.C.B.) is displayed.

XM version (U model)

The firmware version of XM is displayed.

SIRIUS version (U model)

The firmware version of SIRIUS is displayed.



MODEL/DESTINATION

The model name and destination are displayed.

DESTINATION detection value

Detection value	27 ±4	54 ±4	81 ±4	153 ±4	210 ±4	231 ±4
Destination	U	C	R	A	F	L

MODEL detection value

Detection value	92 ±4	115 ±4
Model name	**V6** (RX-V665)	**H6** (HTR-6260)



VERIFY error

Not applied to these models.

■ DISPLAY DATA

● V4001 : 18-MT-09GNK (OPERATION P.C.B.)

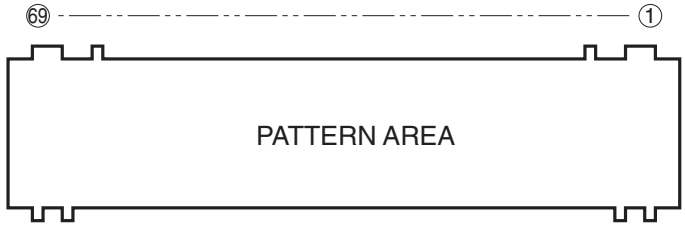

● PIN CONNECTION

Pin No.	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35
Connection	F2	NX	NP	NP	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15	P16	P17	P18	P19	P20	P21	P22	P23	P24	P25	P26	P27	P28	P29	P30	P31

Pin No.	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
Connection	P32	P33	P34	P35	P36	NX	NX	NX	NX	NX	NX	NX	18G	17G	16G	15G	14G	13G	12G	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	NP	NP	NX	F1

Note : 1) F1, F2 ..... Filament pin 2) NP ..... No pin 3) NX ..... No extend pin 4) 1G-18G ..... Grid pin

● GRID ASSIGNMENT

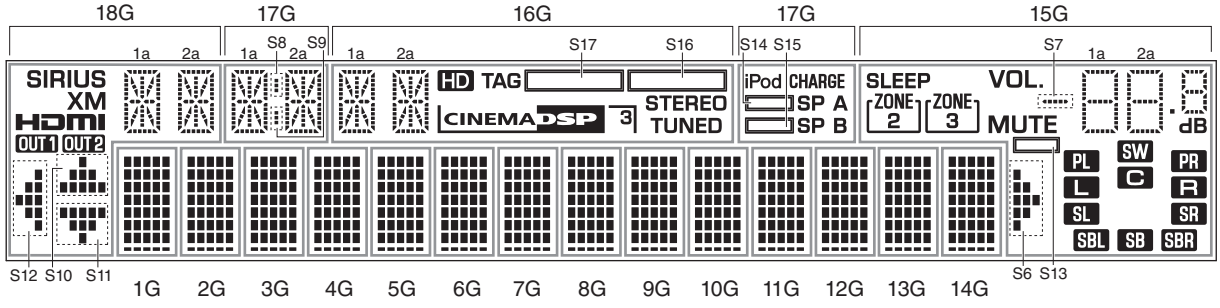

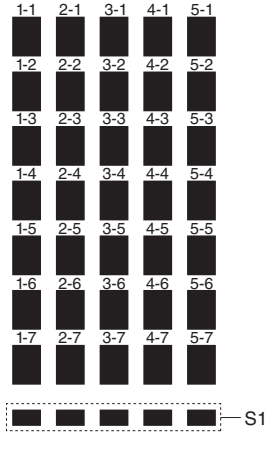

(1G-14G)

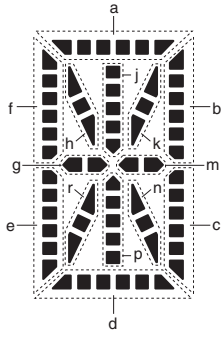

(18G-16G)

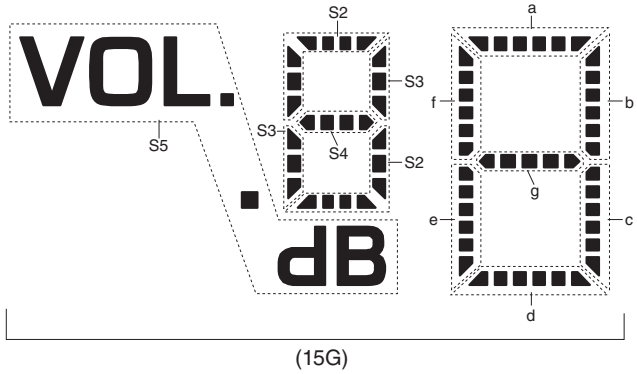

(15G)

● **ANODE CONNECTION**

	18G	17G	16G	15G	1G-14G
P1	1a	1a	1a	S5	1-1
P2	1h	1h	1h	S7	2-1
P3	1j	1j	1j	1d	3-1
P4	1k	1k	1k	2d	4-1
P5	1b	1b	1b	S2	5-1
P6	1f	1f	1f	1e	1-2
P7	1m	1m	1m	2e	2-2
P8	1g	1g	1g	S3	3-2
P9	1c	1c	1c	1c	4-2
P10	1e	1e	1e	2c	5-2
P11	1r	1r	1r	S4	1-3
P12	1p	1p	1p	1g	2-3
P13	1n	1n	1n	2g	3-3
P14	1d	1d	1d	1f	4-3
P15	2a	2a	2a	2f	5-3
P16	2h	2h	2h	1b	1-4
P17	2j	2j	2j	2b	2-4
P18	2k	2k	2k	1a	3-4
P19	2b	2b	2b	2a	4-4
P20	2f	2f	2f	PL	5-4
P21	2m	2m	2m	SW	1-5
P22	2g	2g	2g	PR	2-5
P23	2c	2c	2c	L	3-5
P24	2e	2e	2e	C	4-5
P25	2r	2r	2r	R	5-5
P26	2p	2p	2p	SL	1-6
P27	2n	2n	2n	SR	2-6
P28	2d	2d	2d	SBL	3-6
P29	SIRIUS	S8	HD	SB	4-6
P30	XM	S9	TAG	SBR	5-6
P31	HDMI	iPod CHARGE	CINEMA DSP	S6	1-7
P32	OUT1	SP B	3	S13	2-7
P33	OUT2	S15	STEREO	MUTE	3-7
P34	S12	SP A	TUNED	ZONE 2	4-7
P35	S10	S14	S17	ZONE 3	5-7
P36	S11	–	S16	SLEEP	S1

■ IC DATA

IC44: D70YE101BRFP266 (DIGITAL P.C.B.)
Decoder/Post processor

*** No replacement part available.**

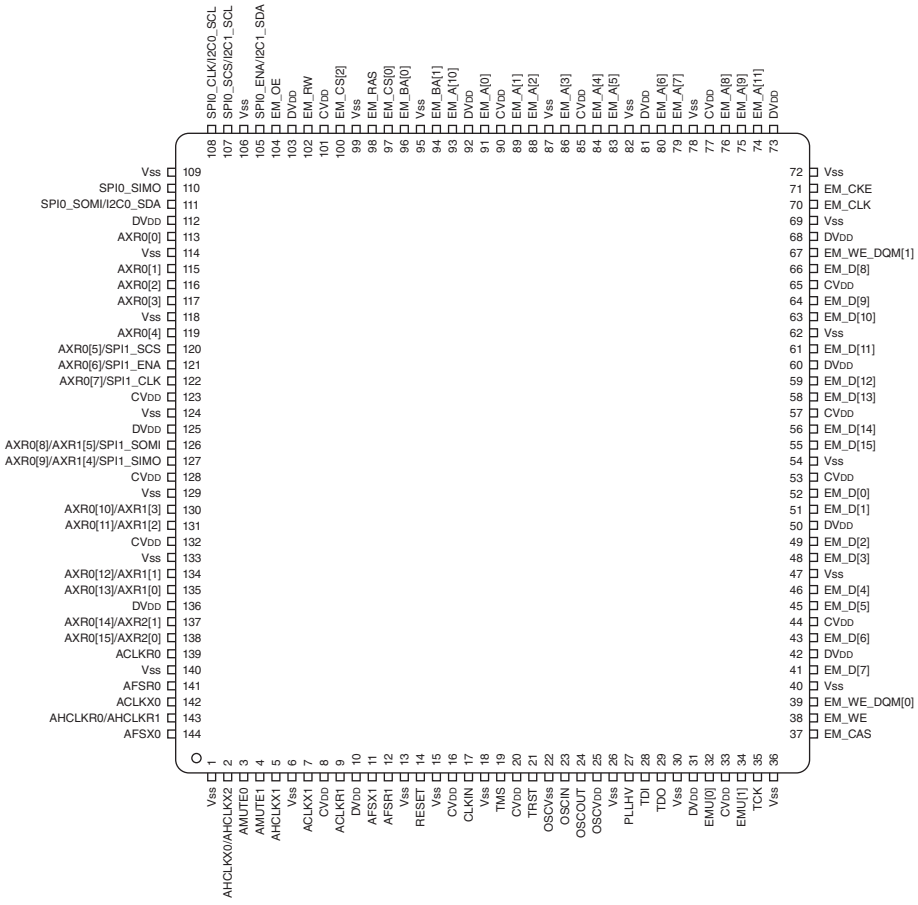

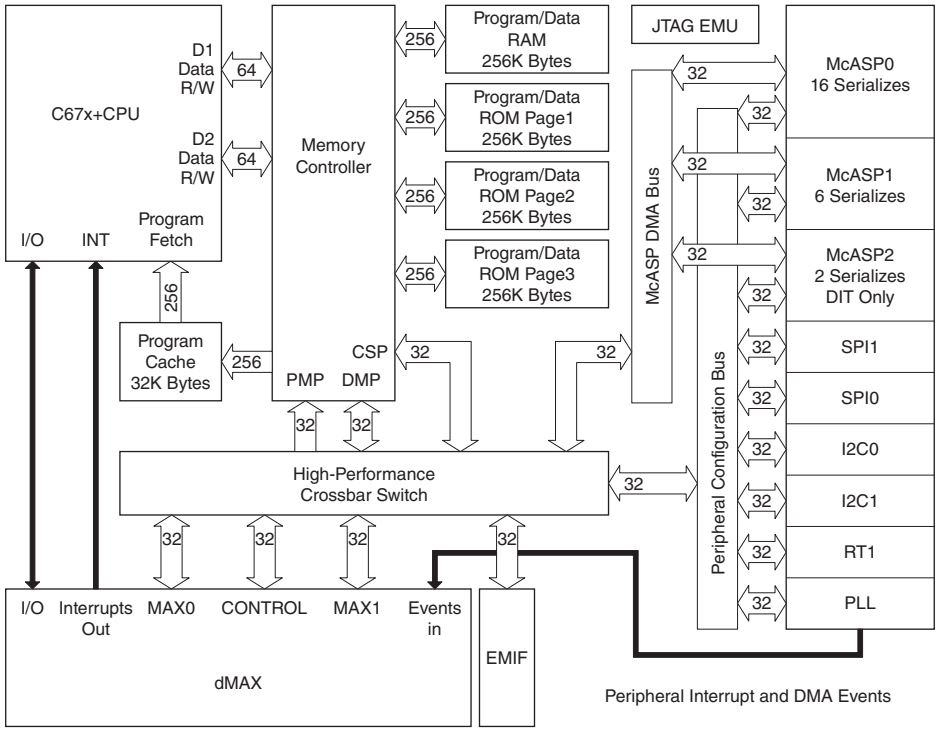

No.	Function Name (P.C.B.)	TYPE(1)	PULL(2)	GPIO(3)	Detail of Function
1	VSS				
2	AHCLKX0/AHCLKX2	IO	–	Y	McASP0 and McASP2 transmit master clock
3	AMUTE0	IO	–	Y	McASP0 mute output
4	AMUTE1	IO	–	Y	McASP1 mute output
5	AHCLKX1	IO	–	Y	McASP1 transmit master clock
6	VSS				
7	ACLKX1	IO	–	Y	McASP1 transmit bit clock
8	CVDD				
9	ACLKR1	IO	–	Y	McASP1 receive bit clock
10	DVDD				
11	AFSX1	IO	–	Y	McASP1 transmit frame Sync (L/R clock)
12	AFSR1	IO	–	Y	McASP1 receive frame Sync (L/R clock)
13	VSS				
14	RESET	IO	–	N	Device reset pin
15	VSS				
16	CVDD				
17	CLKIN	IO	–	N	Alternate clock input (3.3-V LVCMOS input)
18	VSS				
19	TMS	IO	IPU	N	Test mode select
20	CVDD				
21	TRST	IO	IPU	N	Test reset
22	OSCVSS	PWR	–	N	Oscillator Vss tap point (for filter only)
23	OSCIN	IO	–	N	1.2-V oscillator input
24	NC	O	–	N	
25	OSCVDD	PWR	–	N	Oscillator 1.2-V Vpp tap point (for filter only)
26	VSS				
27	PLLHV	PWR	–	N	PLL 3.3-V supply input (requires external filter)
28	TDI	IO	IPU	N	Test data in
29	TDO	OZ	IPU	N	Test data out
30	VSS				
31	DVDD				
32	EMU[0]	IO	IPU	N	Emulation pin 0
33	CVDD				
34	EMU[1]	IO	IPU	N	Emulation pin 1
35	TCK	IO	IPU	N	Test clock
36	Ground(Vss)				
37	EM_CAS	O	–	N	SDRAM column address strobe
38	EM_WE	O	–	N	SDRAM write enable
39	EM_WE_DQM[0]	O	–	N	Write enable or byte enable for EM_D [7:0]
40	VSS				
41	EM_D[7]	IO	–	N	EMIF data bus [lower 16-bits]
42	DVDD				
43	EM_D[6]	IO	–	N	EMIF data bus [lower 16-bits]
44	CVDD				
45	EM_D[5]	IO	–	N	EMIF data bus [lower 16-bits]
46	EM_D[4]	IO	–	N	EMIF data bus [lower 16-bits]
47	VSS				
48	EM_D[3]	IO	–	N	EMIF data bus [lower 16-bits]
49	EM_D[2]	IO	–	N	EMIF data bus [lower 16-bits]
50	DVDD				
51	EM_D[1]	IO	–	N	EMIF data bus [lower 16-bits]
52	EM_D[0]	IO	–	N	EMIF data bus [lower 16-bits]
53	CVDD				
54	VSS				
55	EM_D[15]	IO	–	N	EMIF data bus [lower 16-bits]
56	EM_D[14]	IO	–	N	EMIF data bus [lower 16-Bits]
57	CVDD				
58	EM_D[13]	IO	–	N	EMIF data bus [lower 16-Bits]
59	EM_D[12]	IO	–	N	EMIF data bus [lower 16-Bits]
60	DVDD				
61	EM_D[11]	IO	–	N	EMIF data bus [lower 16-Bits]

No.	Function Name (P.C.B.)	TYPE(1)	PULL(2)	GPIO(3)	Detail of Function
62	VSS				
63	EM_D[10]	IO	–	N	EMIF data bus [lower 16-Bits]
64	EM_D[9]	IO	–	N	EMIF data bus [lower 16-Bits]
65	CVDD				
66	EM_D[8]	IO	–	N	EMIF data bus [lower 16-bits]
67	EM_WE_DQM[1]	O	–	N	Write enable or byte enable for EM_D [15:8]
68	DVDD				
69	VSS				
70	EM_CLK	O	–	N	SDRAM clock
71	EM_CKE	O	–	N	SDRAM clock enable
72	VSS				
73	DVDD				
74	EM_A[11]	O	–	N	EMIF address bus
75	EM_A[9]	O	–	N	EMIF address bus
76	EM_A[8]	O	–	N	EMIF address bus
77	CVDD				
78	VSS				
79	EM_A[7]	O	–	N	EMIF address bus
80	EM_A[6]	O	–	N	EMIF address bus
81	DVDD				
82	VSS				
83	EM_A[5]	O	–	N	EMIF address bus
84	EM_A[4]	O	–	N	EMIF address bus
85	CVDD				
86	EM_A[3]	O	–	N	EMIF address bus
87	VSS				
88	EM_A[2]	O	–	N	EMIF address bus
89	EM_A[1]	O	–	N	EMIF address bus
90	CVDD				
91	EM_A[0]	O	–	N	EMIF address bus
92	DVDD				
93	EM_A[10]	O	–	N	EMIF address bus
94	EM_BA[1]	O	–	N	SDRAM bank address and asynchronous memory Low-Order address
95	VSS				
96	EM_BA[0]	O	–	N	SDRAM bank address and asynchronous memory Low-Order address
97	EM_CS[0]	O	–	N	SDRAM chip select
98	EM_RAS	O	–	N	SDRAM row address strobe
99	VSS				
100	EM_CS[2]	O	–	N	Asynchronous memory chip Select
101	CVDD				
102	NC	O	–	N	Asynchronous memory read/not write
103	DVDD				
104	EM_OE	O	–	N	SDRAM output enable
105	SPI0_ENA/I2C1_SDA	IO	–	Y	SPI0 enable (ready) or I2c1 serial data
106	VSS				
107	SPI0_ENA/I2C1_SCL	IO	–	Y	SPI0 enable (ready) or I2c1 serial clock
108	SPI0_CLK/I2C0_SCL	IO	–	Y	SPI0 serial clock or I2c0 serial clock
109	VSS				
110	SPIO_SIMO	IO	–	Y	SPI0 data pin slave in master out
111	SPIO_SOMI/I2C0_SDA	IO	–	Y	SPI0 data pin slave out master in or I2C0 serial data
112	DVDD				
113	AXR0[0]	IO	–	Y	McASP0 serial data 0
114	VSS				
115	AXR0[1]	IO	–	Y	McASP0 serial data 1
116	AXR0[2]	IO	–	Y	McASP0 serial data 2
117	AXR0[3]	IO	–	Y	McASP0 serial data 3
118	VSS				
119	AXR0[4]	IO	–	Y	McASP0 serial data 4
120	SPI1_SCS	IO	–	Y	McASP0 serial data 5 or SPI1 slave chip select
121	SPI1_ENA	IO	–	Y	McASP0 serial data 6 or SPI1 enable (ready)
122	SPI1_CLK	IO	–	Y	McASP0 serial data 7 or SPI1 serial clock

No.	Function Name (P.C.B.)	TYPE(1)	PULL(2)	GPIO(3)	Detail of Function
123	CVDD				
124	VSS				
125	DVDD				
126	/SPI1_SOMI	IO	–	Y	McASP0 serial data 8 or McASP1 serial data 5 or SPI1 data pin slave out master in
127	/SPI1_SIMO	IO	–	Y	McASP0 serial data 9 or McASP1 serial data 4 or SPI1 data pin slave in master out
128	CVDD				
129	VSS				
130	AXR0[10]	IO	–	Y	McASP0 serial data 10 or McASP1 serial data 3
131	AXR0[11]	IO	–	Y	McASP0 serial data 11 or McASP1 serial data 2
132	CVDD				
133	VSS				
134	AXR0[12]	IO	–	Y	McASP0 serial data 12 or McASP1 serial data 1
135	AXR0[13]	IO	–	Y	McASP0 serial data 13 or McASP1 serial data 0
136	DVDD				
137	AXR0[14]	IO	–	Y	McASP0 serial data 14 or McASP2 serial data 1
138	AXR0[15]	IO	–	Y	McASP0 serial data 15 or McASP2 serial data 0
139	ACLKR0	IO	–	Y	McASP0 receive bit clock
140	VSS				
141	AFSR0	IO	–	Y	McASP0 receive frame Sync (L/R clock)
142	ACLKX0	IO	–	Y	McASP0 transmit bit clock
143	AHCLKR0/AHCLKR1	IO	–	Y	McASP0 and McASP1 receive master clock
144	AFSX0	IO	–	Y	McASP0 transmit frame Sync (L/R clock)

IC402: M66003-0131FP (OPERATION P.C.B.)
FL display driver

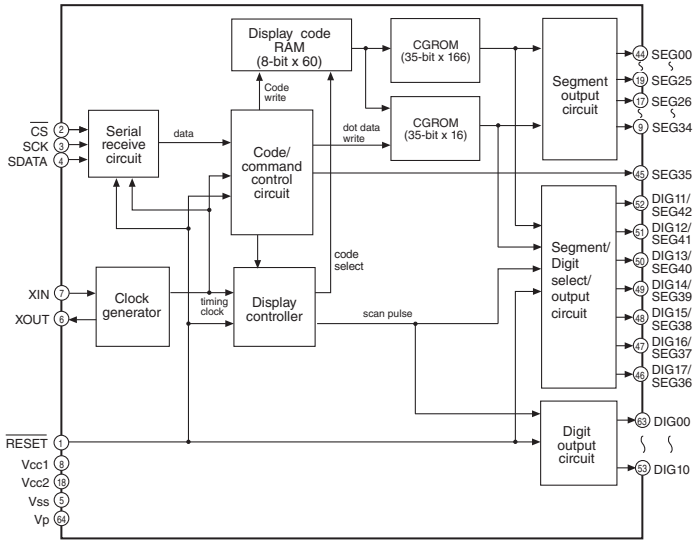

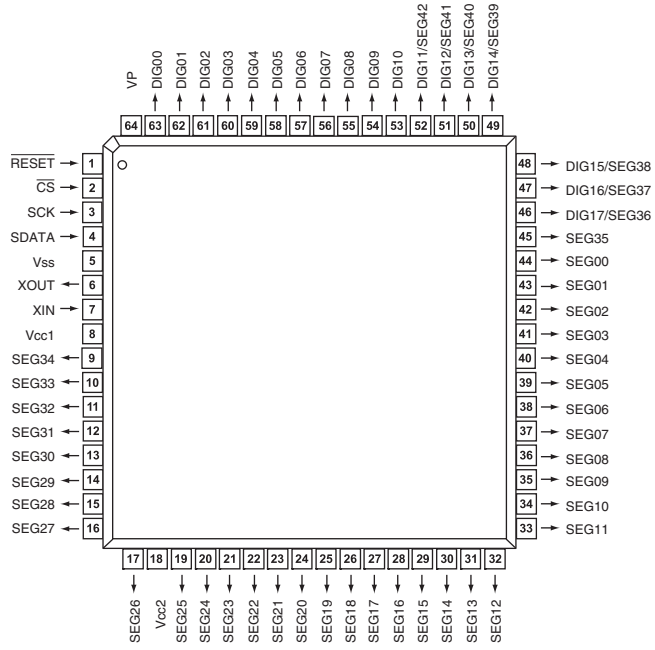

Pin No.	Port Name	Function Name	I/O	Detail of Function
1	RESET	/RESET	Reset input	When "L", M66003 is initialized.
2	CS	/CEFL	Chip select input	When "L", communication with the MCU is possible.
3	SCK	CKFL	Shift clock input	When "H", any instruction from the MCU is neglected.
4	SDATA	DTFL	Serial data input	Serial input data is taken and shifted by the positive edge of SCK.
5	Vss	VSS		GND (0V)
6	XOUT	XOUT	Clock out	When use as a CR oscillator, connect external resistor and capacitor.
7	XIN	XIN	Clock in	When use an external clock input external clock to XIN, and XOUT must be opened.

Pin No.	Port Name	Function Name	I/O	Detail of Function
8	Vcc1	VDD		Positive power supply for internal logic.
9	SEG34	P1I	Segment output	Connect to segment (anode) pins of VFD.
10	SEG33	P2		
11	SEG32	P3		
12	SEG31	P4		
13	SEG30	P5		
14	SEG29	P6		
15	SEG28	P7		
16	SEG27	P8		
17	SEG26	P9		
18	Vcc2	VDD		Positive power supply for DIG and SEG outputs.
19	SEG25	P10	Segment output	Connect to segment (anode) pins of VFD.
20	SEG24	P11		
21	SEG23	P12		
22	SEG22	P13		
23	SEG21	P14		
24	SEG20	P15		
25	SEG19	P16		
26	SEG18	P17		
27	SEG17	P18I		
28	SEG16	P19		
29	SEG15	P20		
30	SEG14	P21		
31	SEG13	P22		
32	SEG12	P23		
33	SEG11	P24		
34	SEG10	P25		
35	SEG09	P26		
36	SEG08	P27		
37	SEG07	P28		
38	SEG06	P29		
39	SEG05	P30		
40	SEG04	P31		
41	SEG03	P32		
42	SEG02	P33		
43	SEG01	P34		
44	SEG00	P35		
45	SEG35	P36		
46	SEG36	P37		
47	DIG16/SEG37	G17I	Digital output	Connect to digit (grid) pins of VFD.
48	DIG15/SEG38	G16I		
49	DIG14/SEG39	G15I		
50	DIG13/SEG40	G14		
51	DIG12/SEG41	G13		
52	DIG11/SEG42	G12		
53	DIG10	G11		
54	DIG09	G10		
55	DIG08	G9		
56	DIG07	G8		
57	DIG06	G7		
58	DIG05	G6		
59	DIG04	G5		
60	DIG03	G4		
61	DIG02	G3		
62	DIG01	G2		
63	DIG00	G1		
64	VP	VP		Negative power supply to pull down.

IC41: LC89058WD-E (DIGITAL P.C.B.)
Digital audio interface receiver

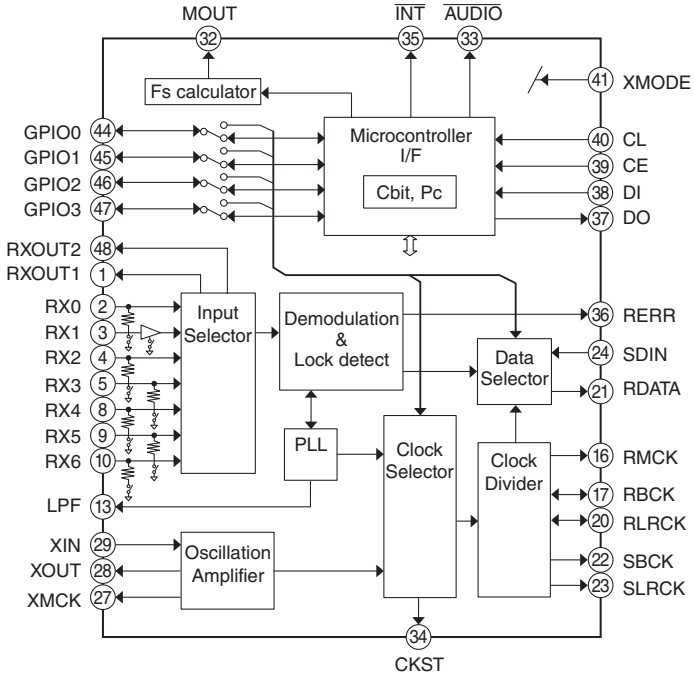

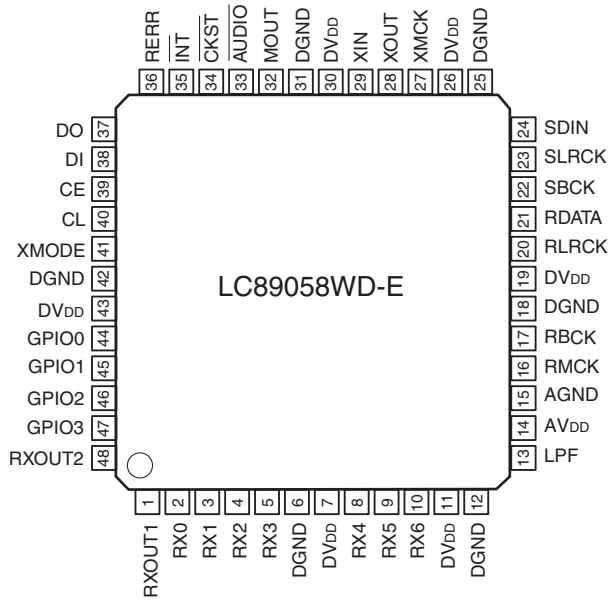

Pin No.	Function Name	I/O	Detail of Function
1	RXOUT1	O	RX0-6 input S/PDIF through output pin 1
2	RX0	I_5(pd)	5V withstand voltage TIL input level compatible S/PDIF input pin (connected to GND when RX1 is set)
3	RX1	I(pd)	Co-axial compatible S/PDIF input pin (supported demodulation sampling frequency of up to 96 kHz)
4	RX2	I_5(pd)	5V withstand voltage TIL input level compatible S/PDIF input pin (connected to GND when RX1 is set)
5	RX3	I_5(pd)	5V withstand voltage TIL input level compatible S/PDIF input pin
6	DGND		Digital GND
7	DVDD		Digital power supply (3.3V)
8	RX4	I_5(pd)	5V tolerable TIL input level compatible S/PDIF input pin
9	RX5	I_5(pd)	5V tolerable TIL input level compatible S/PDIF input pin
10	RX6	I_5(pd)	5V tolerable TIL input level compatible SIPDIF input pin
11	DVDD		Digital power supply (3.3V)
12	DGND		Digital GND
13	LPF	O	PLL loop filter connection pin
14	AVDD		Analog power supply (3.3V)
15	AGND		Analog GND
16	RMCK	O	R system clock output pin (VCO, 512fs, XIN)
17	RBCK	O/I	R system bit clock 1/0 pin (64fs)
18	DGND		Digital GND
19	DVDD		Digital power supply (3.3V)
20	RLRCK	O/I	R system LR clock 1/0 pin (fs)
21	RDATA	O	Serial audio data output pin
22	SBCK	O	S system bit clock output pin (16fs, 32fs, 64fs, 128fs)
23	SLRCK	O	S system LR clock output pin (fs/4, fs/2, fs, 2fs)
24	SDIN	I_5	External serial audio data input pin
25	DGND		Digital GND
26	DVDD		Digital power supply (3.3V)
27	XMCK	O	Oscillation amplifier clock output pin
28	XOUT	O	Output pin connected to the resonator
29	XIN	I	External clock input pin. connected to the resonator (12.288 MHz or 24.576 MHz)
30	DVDD		Digital power supply (3.3V)
31	DGND		Digital GND
32	MOUT	I/O	Emphasis information II input fs monitor output II chip address setting input pin
33	AUDIO	I/O	Channel status bit 1 output II chip address setting input pin
34	CKST	I/O	Clock switching transition period signal output II master/slave setting input pin
35	INT	I/O	Microcontroller interrupt signal output II pins 44-48 I/O setting input pin
36	RERR	O	PLL lock error and data error flag output pin
37	DO	O	CCB microcontroller I/F, read data output pin (3-state)
38	DI	I_5	CCB microcontroller I/F, write data input pin
39	CE	I_5	CCB microcontroller I/F, chip enable input pin
40	CL	I_5	CCB microcontroller I/F, clock input pin
41	XMODE	I_5	System reset input pin
42	DGND		Digital GND
43	DVDD		Digital power supply (3.3V)
44	GPIOO	O/I	General-purpose I/O pin II selector input pin (output referred to RMCK pin)
45	GPI01	O/I	General-purpose I/O pin II selector input pin (output referred to RBCK pin)
46	GPI02	O/I	General-purpose I/O pin II selector input pin (output referred to RLRCK pin)
47	GPI03	O/I	General-purpose I/O pin II selector input pin (output referred to RDATA pin)
48	RXOUT2	O	RX0-6 input S/PDIF through output pin 2

* Input voltage: 1= -0.3 to 3.6V, Is =-0.3 to 5.5V
* Output voltage: 0= -0.3 to 3.6V
* Pins 2, 4, 5, 8, 9, 10, 24, 38, 39, 40, and 41 have an internal pull-down resistor (Pd).
  Their level is fixed when they are unselected.
* Pins 32 and 33 are input pins for chip address setting when pin 41 is held at the low level.
* Pin 34 serves as the input pin for designating as the master or slave when pin 41 is held at the low level.
* Pin 35 serves as the input pin for configuring the I/O of pins 44 to 47 when pin 41 is held at the low level.
* The DVDD and AVDD pins must be held at the same level and turned on and off at the same timing to preclude latch-up conditions.

IC153: R2A15220FP (MAIN P.C.B.)

8-channel electronic volume with 11 input selector and tone control

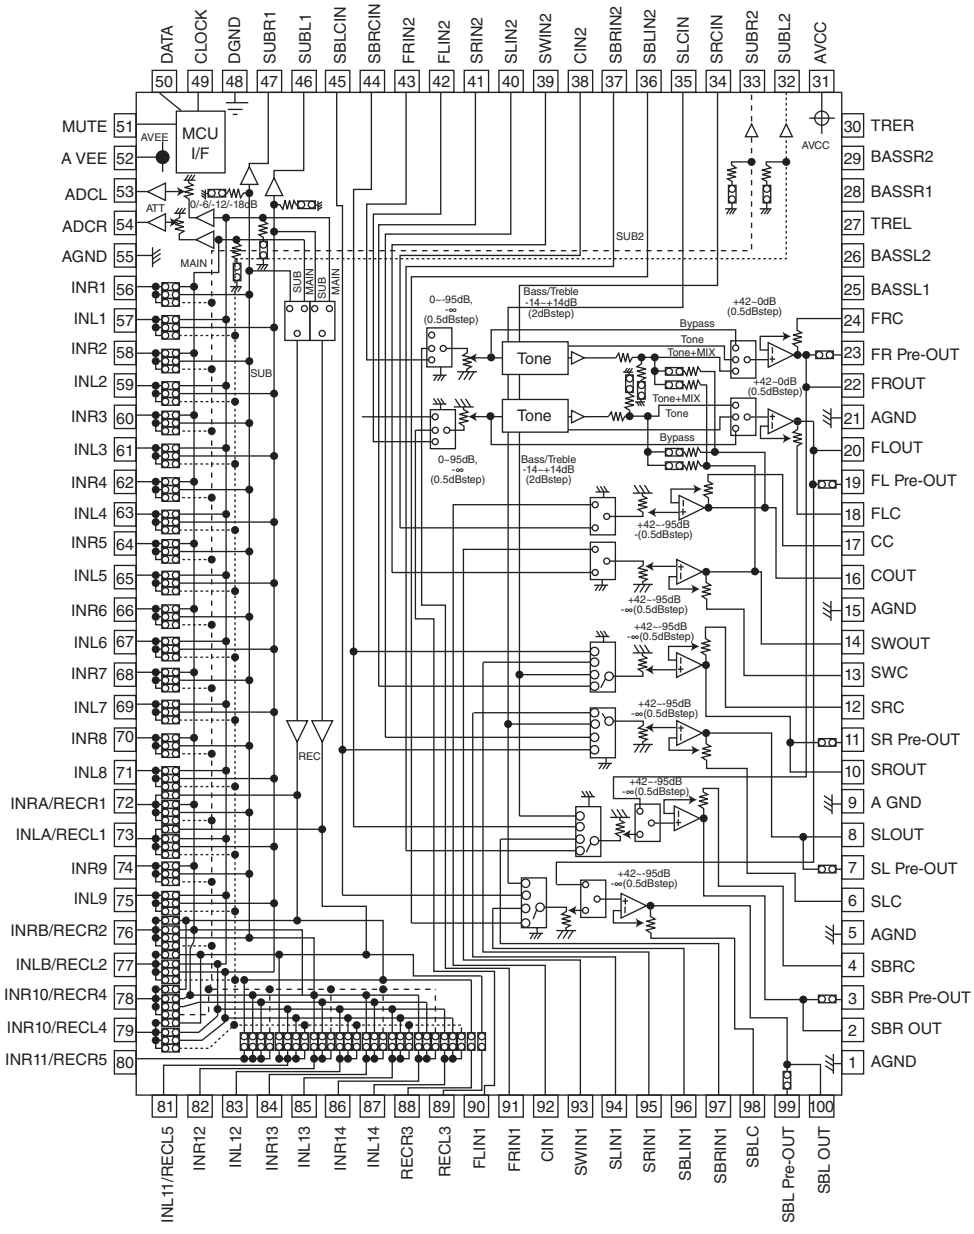

Pin No.	Port name	Function Name	Detail of Function
1	AGND	AE	Analog ground of internal circuit
2	SBROUT	VOSBL	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
3	SBR Pre-OUT	VOPSBL	Pre-output pin of FL/FR/SL/SR/SBL/SBR channel
4	SBRC	AE	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
5	AGND	AE	Analog ground of internal circuit
6	SLC	VOPSR	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
7	SL Pre-OUT	VOSR	Pre-output pin of FL/FR/SL/SR/SBL/SBR channel
8	SLOUT	AE	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
9	AGND	AE	Analog ground of internal circuit
10	SROUT	VOSL	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
11	SR Pre-OUT	VOPSL	Pre-output pin of FL/FR/SL/SR/SBL/SBR channel
12	SRC	AE	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
13	SWC	AE	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
14	SWOUT	VOSW	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
15	AGND	AE	Analog ground of internal circuit
16	COUT	VOC	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
17	CC	AE	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
18	FLC	AE	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
19	FL Pre-OUT	VOPFR	Pre-output pin of FL/FR/SL/SR/SBL/SBR channel
20	FLOUT	VOFR	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
21	AGND	POE	Analog ground of internal circuit
22	FROUT	VOFL	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
23	FR Pre-OUT	VOPFL	Pre-output pin of FL/FR/SL/SR/SBL/SBR channel
24	FRC	AE	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
25	BASSL1	AE	Frequency characteristic setting pin of L/R channel tone control (Bass)
26	BASSL2	AE	Frequency characteristic setting pin of L/R channel tone control (Bass)
27	TREL	AE	Frequency characteristic setting pin of L/R channel tone control (Treble)
28	BASSR1	AE	Frequency characteristic setting pin of L/R channel tone control (Bass)
29	BASSR2	AE	Frequency characteristic setting pin of L/R channel tone control (Bass)
30	TRER	AE	Frequency characteristic setting pin of L/R channel tone control (Treble)
31	AVCC	VCC	Positive power supply to internal circuit
32	SUBL1	N.C.	Output pin for L/R channel SUB1/SUB2 output
33	SUBL2	N.C.	Output pin for L/R channel SUB1/SUB2 output
34	SRCIN	N.C.	3rd multi input pin for SBL/SBR/SL/SR channel volume that is able to swap SBR/SBL with SR/SL
35	SLCIN	N.C.	3rd multi input pin for SBL/SBR/SL/SR channel volume that is able to swap SBR/SBL with SR/SL
36	SBLIN2	8SBR	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
37	SBRIN2	8SBL	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
38	CIN2	8C	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
39	SWIN2	8SW	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
40	SLIN2	8SR	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
41	SRIN2	8SL	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
42	FLIN2	8FR	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
43	FRIN2	8FL	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
44	SBRCIN	Z2L	3rd multi input pin for SBL/SBR/SL/SR channel volume that is able to swap SBR/SBL with SR/SL
45	SBLCIN	Z2R	3rd multi input pin for SBL/SBR/SL/SR channel volume that is able to swap SBR/SBL with SR/SL
46	SUBL1	Z2R	Output pin for L/R channel SUB1/SUB2 output
47	SUBR1	Z2L	Output pin for L/R channel SUB1/SUB2 output
48	DGND	MG	Digital ground of internal circuit
49	DATA	VOL_SCK	Input pin of control data
50	CLOCK	VOL_MOSI	Input pin of control clock
51	MUTE	AE	Outside mute control pin
52	AVEE	–	Negative power supply to internal circuit
53	ADCL	ADR	Output pin for L/R channel ADC
54	ADCR	ADL	Output pin for L/R channel ADC
55	AGND	AE	Analog ground of internal circuit
56	INR1	AU2L	Input pin of L/R channel (Input selector)
57	INL1	AU2R	Input pin of L/R channel (Input selector)

Pin No.	Port name	Function Name	Detail of Function
58	INR2	AU1L	Input pin of L/R channel (Input selector)
59	INL2	AU1R	Input pin of L/R channel (Input selector)
60	INR3	AV-6L	Input pin of L/R channel (Input selector)
61	INL3	AV-6R	Input pin of L/R channel (Input selector)
62	INR4	AV-5L	Input pin of L/R channel (Input selector)
63	INL4	AV-5R	Input pin of L/R channel (Input selector)
64	INR5	PHL	Input pin of L/R channel (Input selector)
65	INL5	PHR	Input pin of L/R channel (Input selector)
66	INR6	SRL	Input pin of L/R channel (Input selector)
67	INL6	SRR	Input pin of L/R channel (Input selector)
68	INR7	IPL	Input pin of L/R channel (Input selector)
69	INL7	IPR	Input pin of L/R channel (Input selector)
70	INR8	XML	Input pin of L/R channel (Input selector)
71	INL8	XMR	Input pin of L/R channel (Input selector)
72	INRA/RECR1	AV-OUT_L	Output pin for L/R channel (input selector)/Output pin for L/R channel REC output
73	INLA/RECL1	AV-OUT_R	Output pin for L/R channel (input selector)/Output pin for L/R channel REC output
74	INR9	USBL	Input pin of L/R channel (Input selector)
75	INL9	USBR	Input pin of L/R channel (Input selector)
76	INRB/RECR2	AOL	Output pin for L/R channel (input selector)/Output pin for L/R channel REC output
77	INLB/RECL2	AOR	Output pin for L/R channel (input selector)/Output pin for L/R channel REC output
78	INR10/RECR4	TUL	Output pin for L/R channel (input selector)/Output pin for L/R channel REC output
79	INL10/RECL4	TUR	Output pin for L/R channel (input selector)/Output pin for L/R channel REC output
80	INR11/RECR5	MIC	Output pin for L/R channel (input selector)/Output pin for L/R channel REC output
81	INL11/RECL5	AE	Output pin for L/R channel (input selector)/Output pin for L/R channel REC output
82	INR12	AUXL	Input pin of L/R channel (Input selector)
83	INL12	AUXR	Input pin of L/R channel (Input selector)
84	INR13	AE	Input pin of L/R channel (Input selector)
85	INL13	AE	Input pin of L/R channel (Input selector)
86	INR14	AE	Input pin of L/R channel (Input selector)
87	INL14	AE	Input pin of L/R channel (Input selector)
88	RECR3	N.C.	Output pin for L/R channel REC output
89	RECL3	N.C.	Output pin for L/R channel REC output
90	FLIN1	DAFR	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
91	FRIN1	DAFL	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
92	CIN1	DAC	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
93	SWIN1	DASW	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
94	SLIN1	DASR	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
95	SEIN1	DASL	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
96	SBLIN1	DASBR	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
97	SBRIN1	DASBL	Multi input pin of L/R/C/SW/SL/SR/SBL/SBR channel (Multi IN 1/2)
98	SBLC	AE	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
99	SBL Pre-OUT	VOPSBR	Pre-output pin of FL/FR/SL/SR/SBL/SBR channel
100	SBL OUT	VOSBR	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel

IC20: M3087BFKBGP (DIGITAL P.C.B.)
Microprocessor

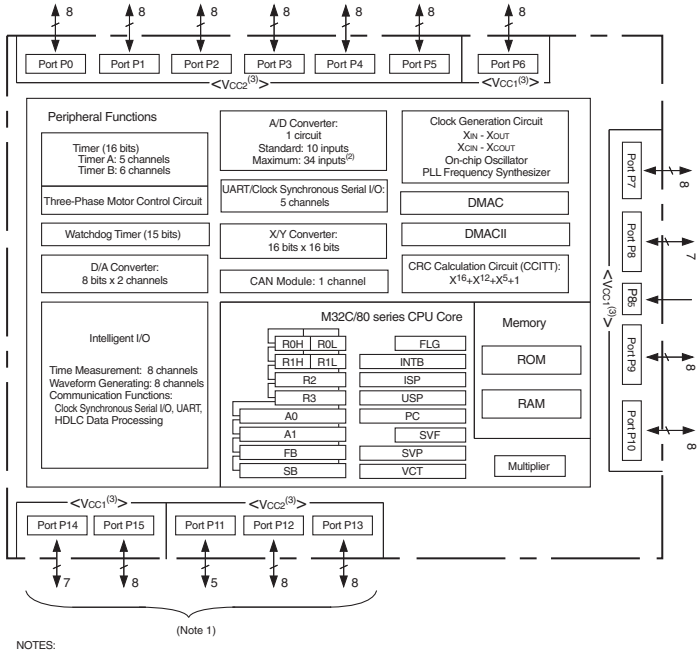

NOTES:
1. Ports P11 to P15 are provided in the 144-pin package only.
2. Included in the 144-pin package only.
3. The supply voltage of M32C/84T (High-reliability version) must be VCC1=VCC2.

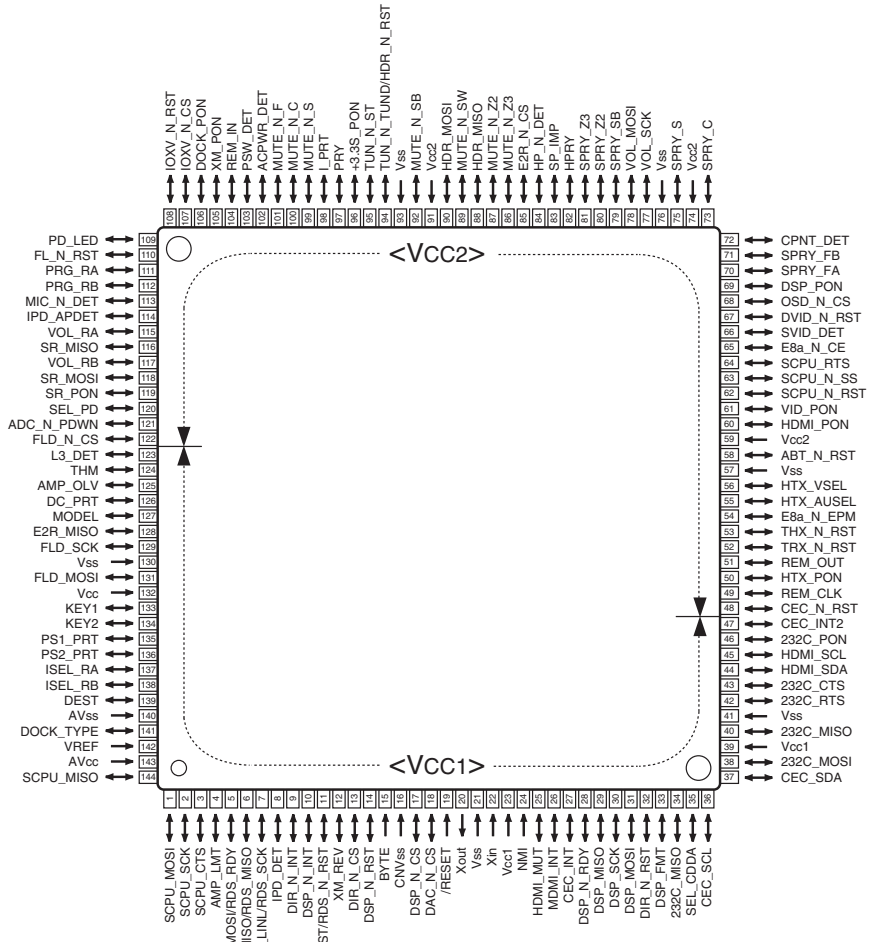

NOTES:
1. P70 / TA0OUT / TxD2 / SDA2 / SRxD2 / INPC16 / OUTC16
2. P70 and P71 are ports for the N-channel open drain output.
3. The supply voltage of M32C/84T must be VCC1=VCC2.

Pin No.	Port Name	Function Name (P.C.B.)	I/O					Detail of Function
			Power On	Stby Thrh	Standby	Stby Sleep	MCU Sleep	
1	TXD4 P96/ANEX1/TXD4/ SDA4/SRXD4	IPD_MOSI	SO	O	O	O	O	Asynchronous data output for iPod
2	P95	SCPU_SCK	O	O	O	O	O	
3	P94 P94/DA1/TB4in/ CTS4/RTS4/SS4	SCPU_CTS	SI	I	I	O	O	Input for transmission control for SubCPU (clear to send)
4	DA0 P93/DA0/TB3in/ CTS3/RTS3/SS3	AMP_LMT	DA	I	I	I	I	Limiter control output
5	TXD3 P92/TB2in/TXD3/ SDA3/SRXD3/ OUTC20/IEout/ ISTXD2	XM_MOSI	SO	O	O	O	O	Asynchronous data output for XM (U model)
	P92		O	O	O	O	O	(C, R, A, F, L models)
6	RXD3 P91/TB1in/RXD3/ SCL3/STXD3/IEin/ ISRXD2	XM_MISO	SI	O	O	O	O	Asynchronous data input for XM (U model)
	P91		O	O	O	O	O	(C, R, A, F, L models)
7	P90 P90/TB0in/CLK3	XM_LINK	I	O	O	O	O	XM LINK detection (U model)
	P90		O	O	O	O	O	(C, R, A, F, L models)
8	INT8 P146/INT8	IPD_DET	IRQ	IRQ	IRQ	IRQ	O	iPod detection When inserting an iPod into the DOCK H → L Restriction of port: INT is high edge or low edge only
9	P145 P145/INT7	DIR_N_INT	IRQ	O	O	O	O	DIR interrupt Restriction of port: INT is high edge or low edge only
10	P144 P144/INT6	DSP_N_INT	IRQ	O	O	O	O	DA70Y interrupt Restriction of port: INT is high edge or low edge only
11	P143 P143/INPC17/ OUTC17	XM_N_RST	O	O	O	O	O	XM reset (U model)
	P143		O	O	O	O	O	(C, R, A, F, L models)
12	P142 P142/INPC16/OUTC16	XM_REV	I	O	O	O	O	XM antenna revision detection (U model) H: An compatibility antenna
	P142		O	O	O	O	O	(C, R, A, F, L models)
13	P141 P141/INPC15/ OUTC15	DIR_N_CS	CS	O	O	O	O	DIR chip select
14	P140 P140/INPC14/ OUTC14	DSP_N_RST	O	O	O	O	O	DA70Y reset
15	BYTE BYTE	BYTE	MCU	MCU	MCU	MCU	MCU	Switch of width of data bus input When set to single chip mode: L (16 bit)
16	CNVss CNVss	CNVss	MCU	MCU	MCU	MCU	MCU	Processor mode select Low: single chip mode High: To Flash included boot mode To boot mode with hardware resetting of P50=H, P55=L, CNVss=H
17	P87 P87/Xcin	DSP_N_CS	CS	O	O	O	O	DA70Y chip select
18	P86 P86/Xcout	DAC_N_CS	CS	O	O	O	O	DAC chip select
19	/RESET /RESET	/RESET	MCU	MCU	MCU	MCU	MCU	Reset
20	Xout Xout	Xout	MCU	MCU	MCU	MCU	MCU	20 MHz Ceramic resonator
21	Vss Vss	Vss	MCU	MCU	MCU	MCU	MCU	GND
22	Xin Xin	Xin	MCU	MCU	MCU	MCU	MCU	20 MHz ceramic resonator
23	Vcc1 Vcc1	Vcc1	MCU	MCU	MCU	MCU	MCU	Microprocessor power supply

Pin No.	Port Name	Function Name (P.C.B.)	I/O					Detail of Function
			Power On	Stby Thrh	Standby	Stby Sleep	MCU Sleep	
24	/NMI P85/NMI	/NMI	MCU	MCU	MCU	MCU	MCU	Unused, pull up to Vcc
25	INT2 P84/INT2	HDMI_MUT	IRQ	IRQ	O	O	O	HDMI mute input Act H: Mute
26	INT1 P83/INT1	HDMI_INT	IRQ	IRQ	O	O	O	Interrupt from HDMI RX
27	INT0 P82/INT0	CEC_N_INT	IRQ	IRQ	O	O	O	CEC microprocessor interrupt
28	P81 P81/TA4in/U/INPC15/ OUTC15/CTS5/ RTS5/RTP23	DSP_N_RDY	I	O	O	O	O	DA70Y RDY
	P81	DIR_WCK	I	O	O	O	O	CDDA writing DIR_WCK input
29	RXD5 P80/TA4out/U/ ISRXD0/RXD5	DSP_MISO	SI	O	O	O	O	Synchronous data input for DIR, DA70Y, DAC
30	CLK5 P77/TA3in/INPC14/ OUTC14/ISCLK0/ CLK5/RTP22	DSP_SCK	SO	O	O	O	O	Synchronous clock output for DIR, DA70Y, DAC
31	TXD5 P76/TA3out/INPC13/ OUTC13/ISTXD0/ TXD5	DSP_MOSI	SO	O	O	O	O	Synchronous data output for DIR, DA70Y, DAC
32	P75 P75/TA2in/W/ INPC12/OUTC12/ ISRXD1/RTP21	DIR_N_RST	O	O	O	O	O	DIR reset
33	P74 P74/TA2out/W/ INPC11/OUTC11/ ISCLK1/RTP20	DSP_FMT	O	O	O	O	O	DA70Y full mute output H: Mute
34	P73	232C_MISO	O	O	O	O	O	
35	P72 P72/TA1out/V/CLK2	SEL_CDDA	O	O	O	O	O	CDDA writing route select H: CDDA writing mode, L: Operational mode usually
36	SCL2 P71/TA0in/TB5in/ RXD2/SCL2/STXD2/ INPC17/OUTC17/ OUTC22/ISRXD2/ IEin/RTP03	CEC_SCL	SO	SO	O	O	O	CEC microprocessor, Tuner, HDMI_EQ (Sil9185A) I2C SCL output (100 kHz device) U-com block then +3.3S, 3.3k then pull up
37	SDA2 P70/TA0out/TXD2/ SDA2/SRXD2/ INPC16/OUTC16/ OUTC20/ISTXD2/ IEout/RTP02	CEC_SDA	SIO	SIO	O	O	O	CEC microprocessor, Tuner, HDMI_EQ (Sil9185A) I2C SDA input (100 kHz device) U-com block then +3.3S, 3.3k then pull up
38	TxD1 P67/TXD1/SDA1/ SRXD1	232C_MOSI	SO	SO	SO	O	O	RS232C data output Pull up at 100 k-ohms
	TxD1	TXD	SO					E8a, ICP (In-circuit programmer) data output
39	Vcc1 Vcc1	Vcc1	MCU	MCU	MCU	MCU	MCU	Microprocessor power supply
40	RxD1 P66/RXD1/SCL1/ STXD1	232C_MISO	SI	SI	SI	I	I	RS232C data input Pull up at 100 k-ohms
	RxD1	RXD	SI					E8a, ICP (In-circuit programmer) data input
41	Vss Vss	Vss	MCU	MCU	MCU	MCU	MCU	Microprocessor GND
42	P65 P65/CLK1	232C_RTS	SO	SO	SO	O	O	RS232C RTS output
	CLK1	E8a_SCLK	SI					E8a, ICP (In-circuit programmer) clock input Pull up at 100 k-ohms

Pin No.	Port Name	Function Name (P.C.B.)	I/O					Detail of Function
			Power On	Stby Thrh	Standby	Stby Sleep	MCU Sleep	
43	CTS1 P64/CTS1/RTS1/ SS1/OUTC21/ ISCLK2	232C_CTS	SI	SI	SI	I	I	RS232C CTS input Pull down at 100 k-ohms
	RTS1	E8a_BUSY	SO					E8a, ICP (In-circuit programmer) BUSY output
44	SDA0 P63/TXD0/SDA0/ SRXD0/IrDAout	HDMI_SDA	SIO	SIO	O	O	O	HDMI RX/TX, Video Enc/Dec I2C SCL output (400 kHz device) Pull up at HDMI block HDMI RX/TX: 5V tolerant
45	SCL0 P62/RXD0/SCL0/ STXD0/IrDAin	HDMI_SCL	SIO	SIO	O	O	O	HDMI RX/TX, Video Enc/Dec I2C SDA input/output (400 kHz device) Pull up at HDMI block HDMI RX/TX: 5V tolerant
46	P61	232C_PON	O	O	O	O	O	H: ON, L: OFF
47	P60 P60/CTS0/RTS0/ SS0/RTP00	CEC_INT2	I	I	O	O	O	CEC microprocessor interrupt
48	P137 P137/OUTC27	CEC_N_RST	O	O	O	O	O	CEC microprocessor reset
49	ISCLK2 P136/OUTC21/ ISCLK2	REM_CLK	SO	O	O	O	O	Clock output for remote control code generation No connection
50	P135 P135/OUTC22/ ISRXD2/IEin	HTX_PON	O	O	O	O	O	No use (HDMI_PON common)
51	P134 P134/OUTC20/ ISTXD0/Ieout	REM_OUT						
52	P57 P57/RDY	HRX_N_RST	O	O	O	O	O	HDMI TX reset output L: Reset Pull down at HDMI block
53	P56 P56/ALE	HTX_N_RST	O	O	O	O	O	HDMI TX reset output L: Reset Pull down at HDMI block
54	P55 P55/HOLD	E8a_N_EPM	I	I	I	I	I	E8a writing mode enable input 10 k-ohms pull down
55	P54 P54/HLDA/ALE	HTX_AUSEL	O	O	O	O	O	No use (HDMI Rx GPIO use)
56	P133 P133/OUTC23	HTX_VSEL	O	O	O	O	O	No use (HDMI Rx GPIO use)
57	Vss Vss	Vss	MCU	MCU	MCU	MCU	MCU	Microprocessor GND
58	P132 P132/OUTC26	ABT_N_RST	O	O	O	O	O	Video I/P & Scaler IC reset L: reset VID_PON=L: Low fix
59	Vcc2 Vcc2	Vcc2	MCU	MCU	MCU	MCU	MCU	Microprocessor power supply
60	P131 P131/OUTC25	HDMI_PON	O	O	O	O	O	HDMI power supply ON/OFF control H: ON, L: OFF When V2065 uses CEC microprocessor, HDMI EQ (CXB1442, Sil9185A) reset may be used
61	P130 P130/OUTC24	VID_PON	O	O	O	O	O	Video power supply ON/OFF control H: ON, L: OFF Configured based on the Pure Direct specification
62	P53	SCPU_N_RST	O	O	O	O	O	
63	P52	SCPU_N_SS	O	O	O	O	O	
64	P51	SCPU_RTS	O	O	O	O	O	
65	P50 P50/WRL/WR	E8a_N_CE	I	I	I	I	I	E8a enable input 10 k-ohms pull up
66	P127 P127	SVID_DET	I	O	O	O	O	S video detection VID_PON=L: Low fix
67	P126 P126	DVID_N_RST	O	O	O	O	O	Video Enc/Dec reset VID_PON=L: Low fix
68	P125 P125	OSD_N_CS	CS	O	O	O	O	OSD chip select VID_PON=L: Low fix

Pin No.	Port Name	Function Name (P.C.B.)	I/O					Detail of Function
			Power On	Stby Thrh	Standby	Stby Sleep	MCU Sleep	
69	P47 P47/SC0/A23	DSP_PON	O	O	O	O	O	DSP power supply ON/OFF control H: ON, L: OFF
70	P46 P46/SC1/A22	SPRY_FA	O	O	O	O	O	Front A speaker relay control H: ON, L: OFF
71	P45 P45/SC2/A21	SPRY_FB	O	O	O	O	O	Front B speaker relay control H: ON, L: OFF
72	P44 P44/SC3/A20	CPNT_DET	O	O	O	O	O	No use
73	P43 P43/A19	SPRY_C	O	O	O	O	O	Center speaker relay control
74	Vcc2 Vcc2	Vcc2	MCU	MCU	MCU	MCU	MCU	Microprocessor power supply
75	P42 P42/A18	SPRY_S	O	O	O	O	O	Surround speaker relay control
76	Vss Vss	Vss	MCU	MCU	MCU	MCU	MCU	Microprocessor GND
77	P41 P41/A17	VOL_SCK	O	O	O	O	O	Electronic volume Flip-flop synchronous clock output
78	P40 P40/A16	VOL_MOSI	O	O	O	O	O	Electronic volume Flip-flop synchronous data output
79	P37 P37/A15(/D15)	SPRY_SB	O	O	O	O	O	Surround back/Bi-AMP relay control
80	P36 P36/A14(/D14)	SPRY_Z2	O	O	O	O	O	Zone2/Presence Speaker relay control SPRY_Z and SPRY_FB do not become High at the same time
81	P35 P35/A13(/D13)	SPRY_Z3	O	O	O	O	O	Zone3 speaker relay control
82	P34 P34/A12(/D12)	HPRY	O	O	O	O	O	Head phone relay control
83	P33 P33/A11(/D11)	SP_IMP	O	O	O	O	O	Speaker impedance relay control Set to 8 ohms: Low (Relay OFF, B voltage High) Set to 6 ohms plus during rising temperature: High (Relay ON, B voltage Low)
84	P32 P32/A10(/D10)	HP_N_DET	I	O	O	O	O	Headphone detection L: Headphone +3.3S pull up
85	P31 P31/A9(/D9)	E2R_N_CS	CS	CS	CS	I	I	EEPROM chip select At 10 k-ohms pull up to EEPROM power
86	P124 P124	MUTE_N_Z3	O	O	O	O	O	Zone3 line out mute control L: Mute
87	P123 P123/CTS6/RTS6	MUTE_N_Z2	O	O	O	O	O	Zone2 line out mute control L: Mute
88	P122	HDR_MISO	O	O	O	O	O	
89	P121 P121/CLK6	MUTE_N_SW	O	O	O	O	O	Subwoofer mute control L: Mute
90	P120	HDR_MOSI	O	O	O	O	O	
91	Vcc2 Vcc2	Vcc2	MCU	MCU	MCU	MCU	MCU	Microprocessor power supply
92	P30 P30/A8(/D8)	MUTE_N_SB	O	O	O	O	O	Surround back/Bi-AMP/Zone2 mute control L: Mute
93	Vss Vss	Vss	MCU	MCU	MCU	MCU	MCU	Microprocessor GND
94	P27 P27/A7/(/D7)/AN27	TUN_N_TUND	I	O	O	O	O	FM/AM tuner TUNED input +3.3S to 47k then pull up
95	P26 P26/A6/(/D6)/AN26	TUN_N_ST	I	O	O	O	O	FM/AM tuner STEREO detection input +3.3S to 47k then pull up
96	P25 P25/A5/(/D5)/AN25	+3.3S_PON	O	O	O	O	I	+3.3S power supply ON/OFF control H: ON, L: OFF At standby sleep, becomes L [to avoid unnecessary power consumption (Mute, pull Up)] Input (HiZ) then mechanically +3.3S power switches on (to function Mute, when power down is detected
97	P24 P24/A4/(/D4)/AN24	PRY	O	O	O	O	O	Power relay ON/OFF control H: ON, L: OFF
98	P23 P23/A3/(/D3)/AN23	I_PRT	I	I	O	O	O	Overcurrent protection detection

Pin No.	Port Name	Function Name (P.C.B.)	I/O					Detail of Function
			Power On	Stby Thrh	Standby	Stby Sleep	MCU Sleep	
99	P22 P22/A2/(/D2)/AN22	MUTE_N_S	O	O	O	O	O	Surround mute control L: Mute
100	P21 P21/A1/(/D1)/AN21	MUTE_N_C	O	O	O	O	O	Center mute control L: Mute
101	P20 P20/A0/(/D0)/AN20	MUTE_N_F	O	O	O	O	O	Front (Headphone is contained) mute control L: Mute
102	INT5 P17/D15/INT5	ACPWR_DET	IRQ	IRQ	IRQ	IRQ	O	AC power detection L: Power down
103	INT4 P16/D14/INT4	PSW_DET	IRQ	IRQ	IRQ	IRQ	O	Main/Zone/Input key interrupt KEY1 port distinguishes the pressed keys
104	INT3 P15/D13/INT3	REM_IN	IRQ	IRQ	IRQ	IRQ	O	Remote control pulse input
105	P14 P14/D12	XM_PON	O	O	O	O	O	XM power supply ON/OFF control H: ON, L: OFF
106	P13 P13/D11	DOCK_PON	O	O	O	O	O	DOCK power supply ON/OFF control H: ON, L: OFF
107	P12 P12/D10	IOXV_N_CS	CS	O	O	O	O	IO extended IC (for video) chip select
108	P11 P11/D9	IOXV_N_RST	O	O	O	O	O	IO extended IC (for video) reset
109	P10 P10/D8	PD_LED	O	O	O	O	O	Pure Direct LED ON/OFF control H: ON, L: OFF
110	P07 P07/D7/AN07	FLD_N_RST	O	O	O	O	O	FL driver reset
111	P06	PRG_RA	O	O	O	O	O	
112	P05	PRG_RB	O	O	O	O	O	
113	P04 P04/D4/AN04	MIC_N_DET	I	O	O	O	O	MIC detection L: MIC
114	P114 P114	IPD_APDET	I	I	I	I	I	iPod accessory power detection While iPod boots up (about two seconds) it is set at Low after the boot, it identifies To prevent pulling of iPod High output and microprocessor Low Fix output, switch to constant input
115	P113	VOL_RA	I	O	O	O	O	Volume rotary A
116	P112 P112/INPC12/ OUTC12/ISRXS1	SR_MISO	SI	I	I	I	I	Asynchronous data input for HD SIRIUS Serial communication is 5v TTL/CMOS logic level Pull up at 100 k-ohms (U model) To prevent pulling of SIRIUS tuner's High output and microcomputer's Low Fix output, switch to constant input
	P112		O	O	O	O	O	
117	P111 P111/INPC11/ OUTC11/ISCLK1	VOL_RB	I	O	O	O	O	Volume rotary B
118	ISTXD1 P110/INPC10/ OUTC10/ISTXD1	SR_MOSI	SO	O	O	O	O	Asynchronous data output for SIRIUS Serial communication is 5V TTL/CMOS logic level (U model)
	P110		O	O	O	O	O	(C, R, A, F, L models)
119	P03 P03/D3/AN03	SR_PON	O	O	O	O	O	SIRIUS radio power supply ON/OFF control H: Power ON L: Power OFF (U model)
	P03		O	O	O	O	O	(C, R, A, F, L models)
120	P02 P02/D2/AN02	SEL_PD	O	O	O	O	O	DSP Pure Direct route select H: Pure Direct ON
121	P01 P01/D1/AN01	ADC_N_PDWN	O	O	O	O	O	ADC power down L: Power down
122	P00 P00/D0/AN00	FLD_N_CS	CS	O	O	O	O	FL driver chip select
123	AN157 P157/AN157/CTS6/ RTS6	L3_DET	AD	O	O	O	O	Component video aspect detection
124	AN156 P156/AN156/CLK6	THM	AD	AD	O	O	O	Temperature detection
125	AN155 P155/AN155/RXD6	AMP_OLV	AD	AD	O	O	O	Power AMP output level detection

Pin No.	Port Name	Function Name (P.C.B.)	I/O					Detail of Function
			Power On	Stby Thrh	Standby	Stby Sleep	MCU Sleep	
126	AN154 P154/AN154/TXD6	DC_PRT	AD	AD	O	O	O	Power AMP DC detection
127	AN153 P153/AN153/CTS5/ RTS5	MODEL	AD	AD	O	O	O	Destination discrimination by AD value When AD is taken in at power on, there is 1m sec waiting time after AD input port setting
128	ISRXD0 P152/AN152/ ISRXD0/RXD5	E2R_MISO	SI	SI	SI	O	O	Synchronous data input for EEPROM
129	ISCLK0 P151/AN151/ISCLK0/ CLK5	FLD_SCK	SO	SO	SO	O	O	FL driver, OSD, IO extended IC (Video), series 1 k-ohms go into synchronous clock output for EEPROM FL driver
130	Vss Vss	Vss	MCU	MCU	MCU	MCU	MCU	Microprocessor GND
131	ISTXD0 P150/AN150/ISTXD0/ TXD5	FLD_MOSI	SO	SO	SO	O	O	FL driver, OSD, IO extended IC (Video), series 1 k-ohms go into synchronous data output for EEPROM FL driver
132	Vcc1 Vcc1	Vcc1	MCU	MCU	MCU	MCU	MCU	Microprocessor power supply
133	AN7 P107/AN7/KI3/RTP33	KEY1	AD	AD	AD	I	O	KEY1 AD value taken in Duing PSW_DET interruption, distinguishes the used keys which are switched to AD
134	AN6 P106/AN6/KI2/RTP32	KEY2	AD	AD	AD	I	O	KEY2 AD value taken in Duing PSW_DET interruption, distinguishes the used keys which are switched to AD
135	AN5 P105/AN5/KI1/RTP31	PS1_PRT	AD	AD	O	O	O	PS protection detection 1
136	AN4 P104/AN4/KI0/RTP30	PS2_PRT	AD	AD	O	O	O	PS protection detection 2
137	P103	ISEL_RA	O	O	O	O	O	
138	P102	ISEL_RB	O	O	O	O	O	
139	AN1 P101/AN1/RTP11	DEST	AD	AD	AD	O	O	AD destination discrimination Data is taken in when resetting is cancelled
140	AVss AVss	AVss	MCU	MCU	MCU	MCU	MCU	Microprocessor GND
141	AN0 P100/AN0/RTP10	DOCK_TYPE	AD	AD	AD	I	O	DOCK discriminate Identifies the connected DOCK type, then switches the action During IPD_DET interruption, switches to AD, make a distinction based on post-10 ms A/D value Make a distinction from IPD_DET Low edge through post-10ms A/D value
142	Vref Vref	VREF	MCU	MCU	MCU	MCU	MCU	Microprocessor power supply
143	AVcc AVcc	AVcc	MCU	MCU	MCU	MCU	MCU	Microprocessor power supply
144	RXD4 P97/ADTRG/RXD4/ SCL4/STXD4	IPD_MISO	SI	I	I	I	O	Asynchronous data input for iPod To prevent pulling of iPod High output and microprocessor Low Fix output, input setup

Key detection for A/D port
Key input (A/D) pull-up resistance 10 k-ohms

Ohm	0	+ 1.0k	+ 1.0k	+ 1.5k	+ 1.5k	+ 2.2k	+ 3.3k	+ 4.7k	+ 22.0k	+ 33.0k
V	0 – 0.15	0.15 – 0.42	0.43 – 0.70	0.71 – 0.97	0.98 – 1.24	1.25 – 1.53	1.54 – 1.84	1.84 – 2.1	2.34 – 2.55	2.55 – 2.97
A/D value (3.3 V=255)	0 – 11	12 – 32	33-54	55 – 75	76 – 95	96 – 118	119 – 142	143 – 162	181 – 197	198 – 229
KEY1 (133 pin)	SCENE RADIO	SCENE CD	SCENE TV	SCENE BD/DVD	ZONE2 ON/OFF	ZONE2 CONTROL	PROGRAM >	PROGRAM <	MAIN ZONE ON/OFF	TONE CONTROL

Ohm	0	+ 1.0k	+ 1.0k	+ 1.5k	+ 1.8k	+ 2.2k	+ 3.3k	+ 4.7k	+ 6.8k	+ 10.0k	+ 22.0k	+ 68.0k
V	0 – 0.15	0.15 – 0.42	0.43 – 0.70	0.71 – 0.99	1.0 – 1.27	1.28 – 1.56	1.57 – 1.86	1.86 – 2.14	2.14 – 2.4	2.4 – 2.65	2.66 – 2.91	2.92 – 3.17
A/D value (3.3 V=255)	0 – 11	12 – 32	33 – 54	55 – 77	78 – 98	99 – 120	121 – 143	144 – 165	166 – 185	186 – 205	206 – 225	226 – 245
KEY2 (134 pin)	PURE DIRECT	STRAIGHT	INFO	MEMORY	PRESET <	PRESET >	CATEGORY < FM	CATEGORY > AM	TUNING CH <	TUNING CH >	INPUT <	INPUT >

Destination detection for A/D port
Destination input (A/D) pull-up resistance 10 k-ohms

Ohm (R3809 VIDEO P.C.B.)	1.2k	2.7k	4.7k	15.0k	47.0k	100.0k
V	0.2 – 0.6	0.6 – 0.9	0.9 – 1.2	1.8 – 2.3	2.4 – 2.9	2.9 – 3.2
A/D value (3.3 V=255)	15 – 46	46 – 69	69 – 92	139 – 177	185 – 224	224 – 247
DEST (139 pin)	U	C	R	A	F	L

Model detection for A/D port
Model input (A/D) pull-up resistance 10 k-ohms

Ohm (R201 DIGITAL P.C.B.)	5.6k	8.2k
V	1.1 – 1.3	1.3 – 1.6
A/D value (3.3 V=255)	85 – 95	110 – 120
MODEL (127 pin)	RX-V665	HTR-6260

■ PIN CONNECTION DIAGRAMS

• ICs

ABT1012Q100

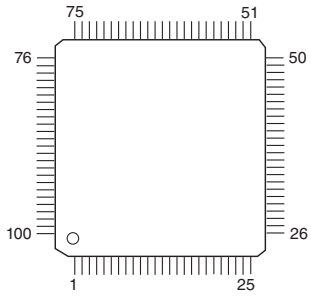

ADV7800BSTZ-80

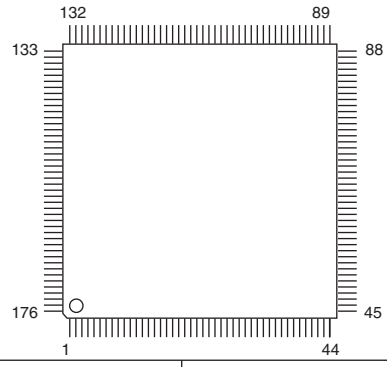

BA00JC5WT-V5



BD9323EFJ-E2



D70YE101BRFP266
M30878JBGP
Sil9233ACTU

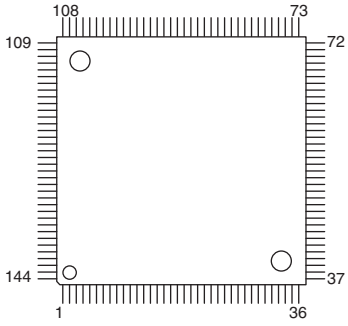

FHP3350IM14X

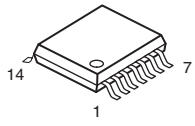

K4S641632N-LC60000

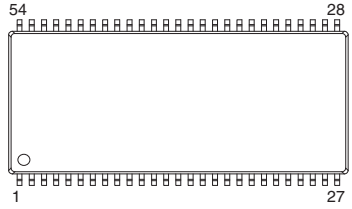

KIA7912PI



LA73050-TLM-E

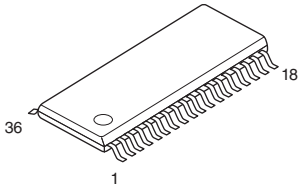

LC709004A-TLM-E
LC74782JM-8A16-TLMC

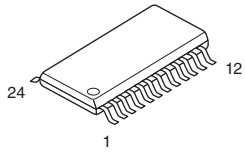

LC72725KM-UY-TLM-E

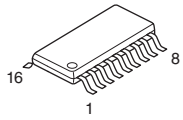

LC89058WD-E

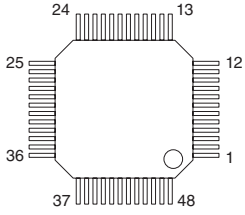

LE25LA322M-TLM-E



LM19CIZ/LF



M66003-0131FP-R

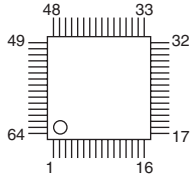

MX29LV160DBTI-70G

NJM2068MD-TE2



NJM2388F05



1. V_{IN}
2. V_{OUT}
3. GND
4. ON/OFF CONTROL

NJM2396F05



1. IN
2. V_{OUT}
3. GND
4. ON/OFF CONTROL

NJM2581M



NJM2867F3-05



NJM4565M
NJM4565M (TE1)



• ICs

NJM7812FA



NJM78M05DL1A (TE1)



PCM1680DBQR

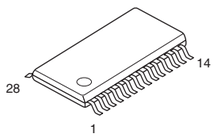

PCM1781DBQR



PCM1803DBR



R1172H181B-T1-F
R1172H331D-T1-F
R1172H501D-T1-F



R1172S121D-E2-F



R2A15220FP

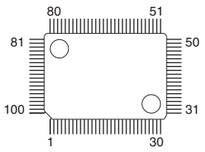

SN74LVC245APWR



SN74LVTH245APW



STK433-130-E

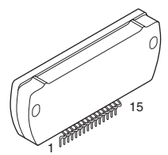

STK433-330-E

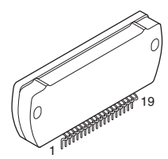

SiI9134CTU

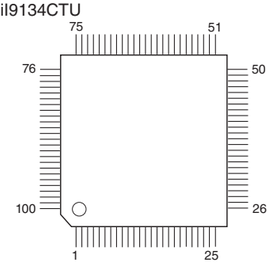

TC74HC4051AFEL



TC74VHC157FT



TC74VHCT08AFT
TC74VHCU04FT



TC7SH04FU-TE85L
TC7SH08FU

TC7WZ32FK (TE85L, F)



TL431ACLPR



TOP254PN

• Diodes

1N4002S
1SS133
1SS176
1SS270A



1SS355



DB105



KDS160-RTK



HT18G
P6KE200ARL



MAZ8033GHL 3.4V
MAZ8043GHL 4.4V
MAZ8091GML 9.1V



MTZJ10B
MTZJ15B
MTZJ22C
MTZJ3.3B
MTZJ39D
MTZJ5.1B
MTZJ6.8C



RB051L-40
UDZ5.1B



RB501V-40



RLZ7.5B 7.5V



RS203M-B-C-J80



SG10SC4M



TS6P03G 6.0A 200V



• Transistors

2N5401C-AT/P
2SA1015-Y



2N5551C-AT



2SA1576A

2SB1274



2SC1740S



2SC1815 Y
2SC1815 Y TP



2SC2412K

2SC4081 T106

2SD1938F

DTA114EKA
DTA143EKA
DTA144EKA
DTC114EKA
DTC144EKA



KRA104S-RTK
KRC102S-RTK



KTA1046-Y-U/P



KTC3875S

MCH6336-TL-E

■ BLOCK DIAGRAMS

ANALOG AUDIO Section Block Diagram

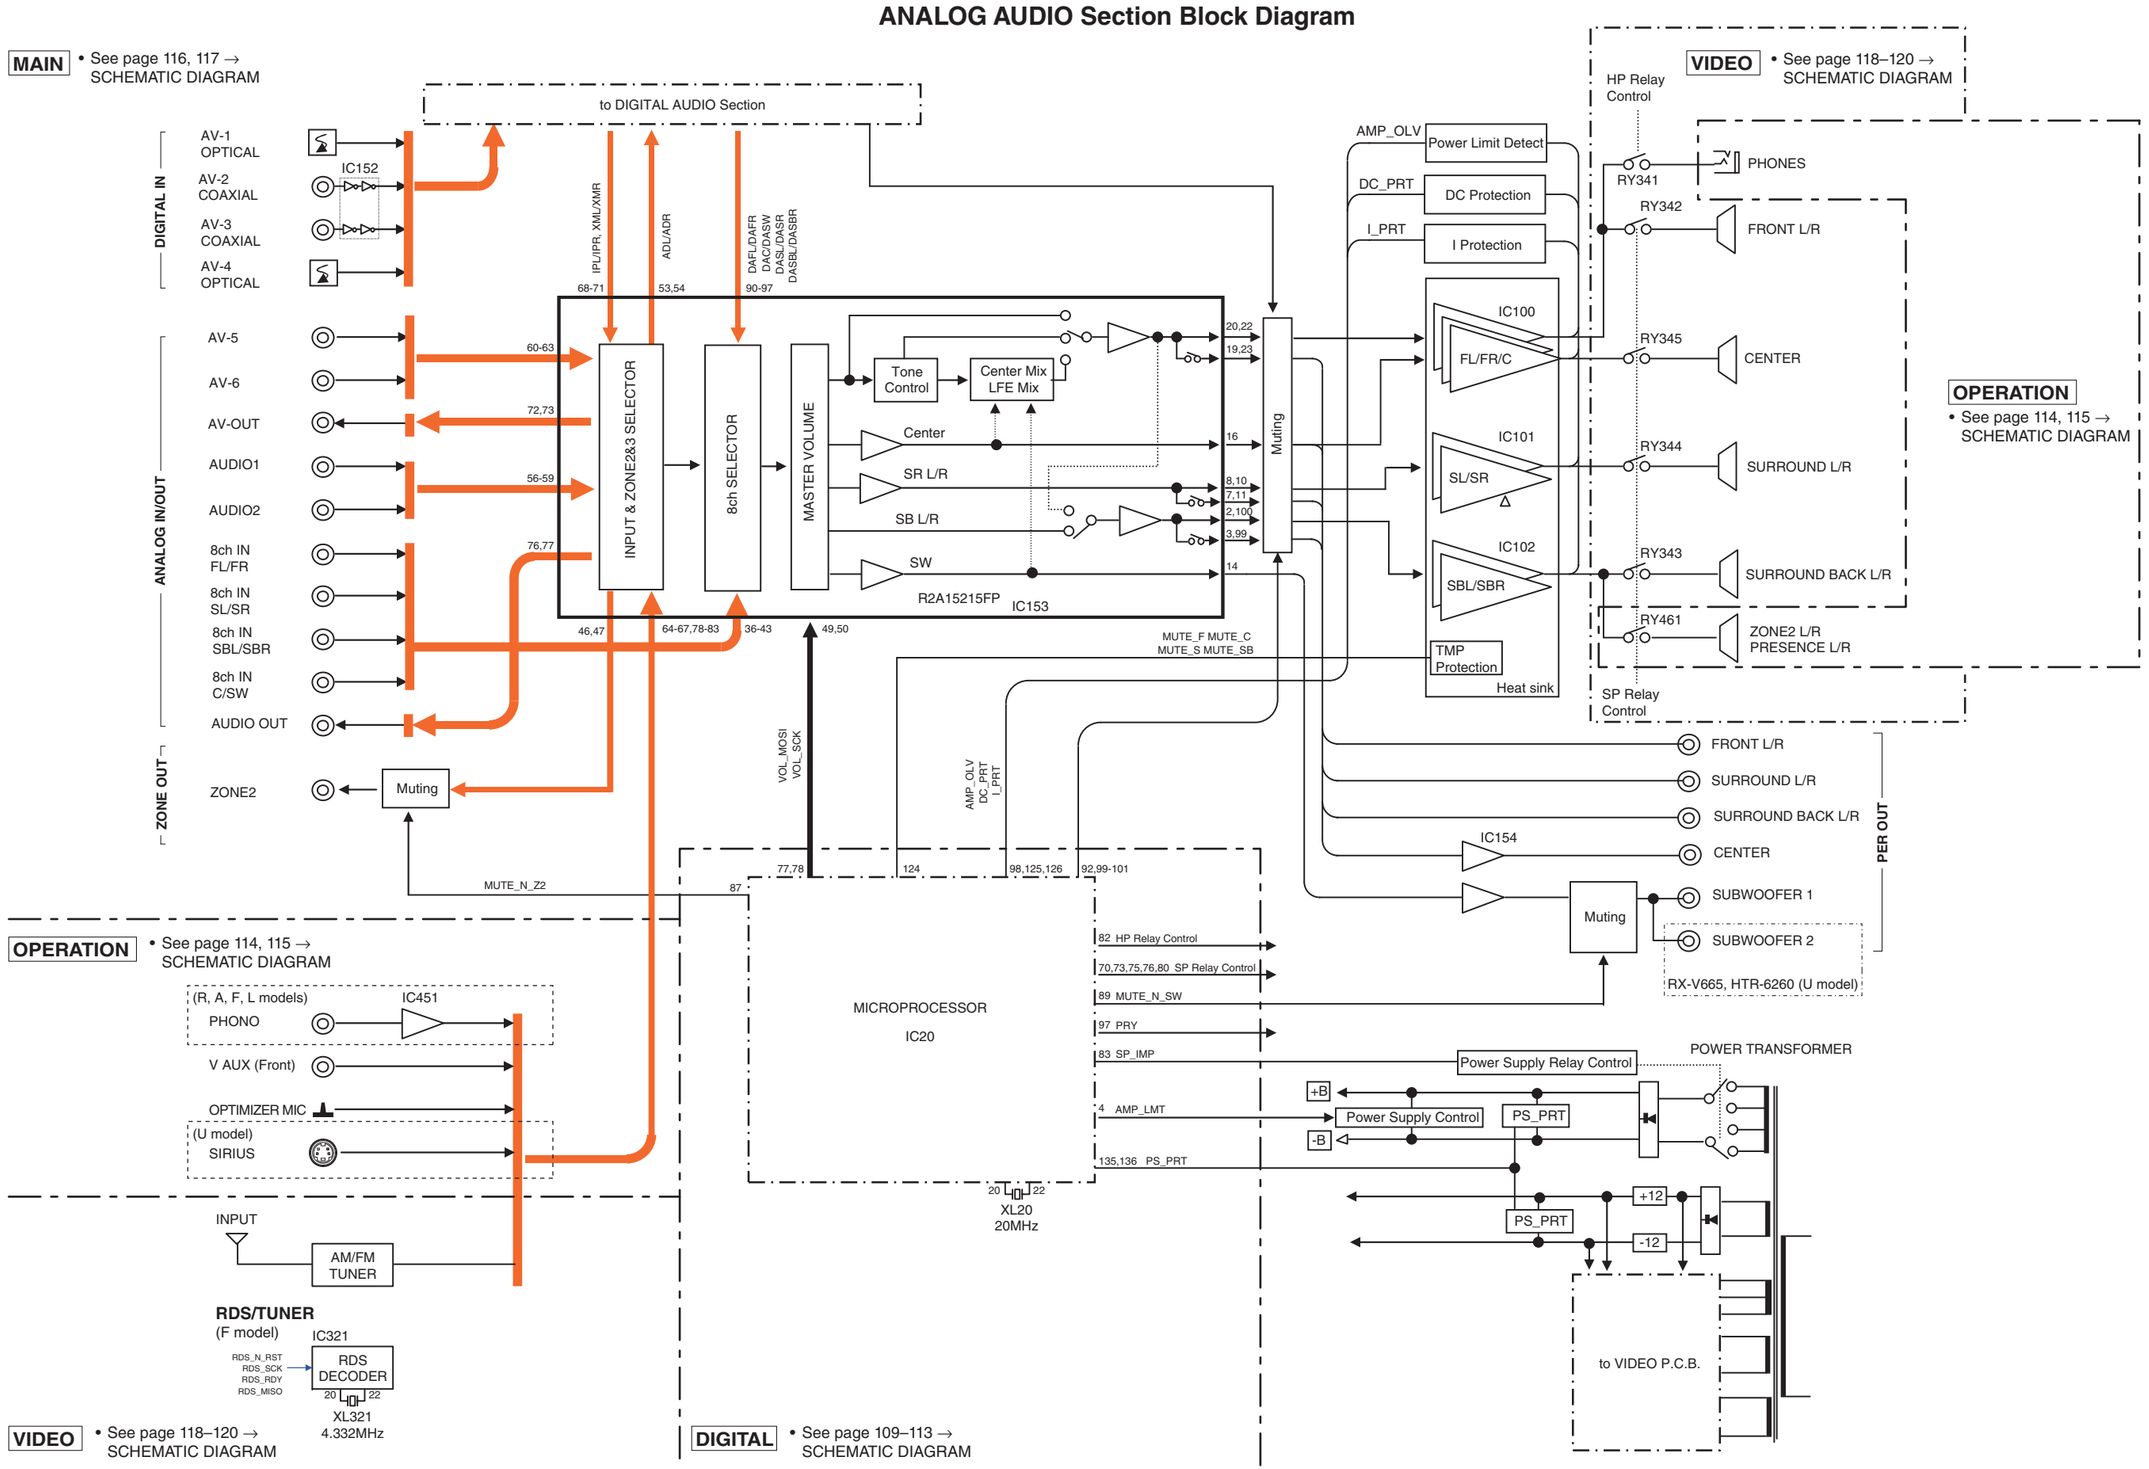

DIGITAL AUDIO Section Block Diagram

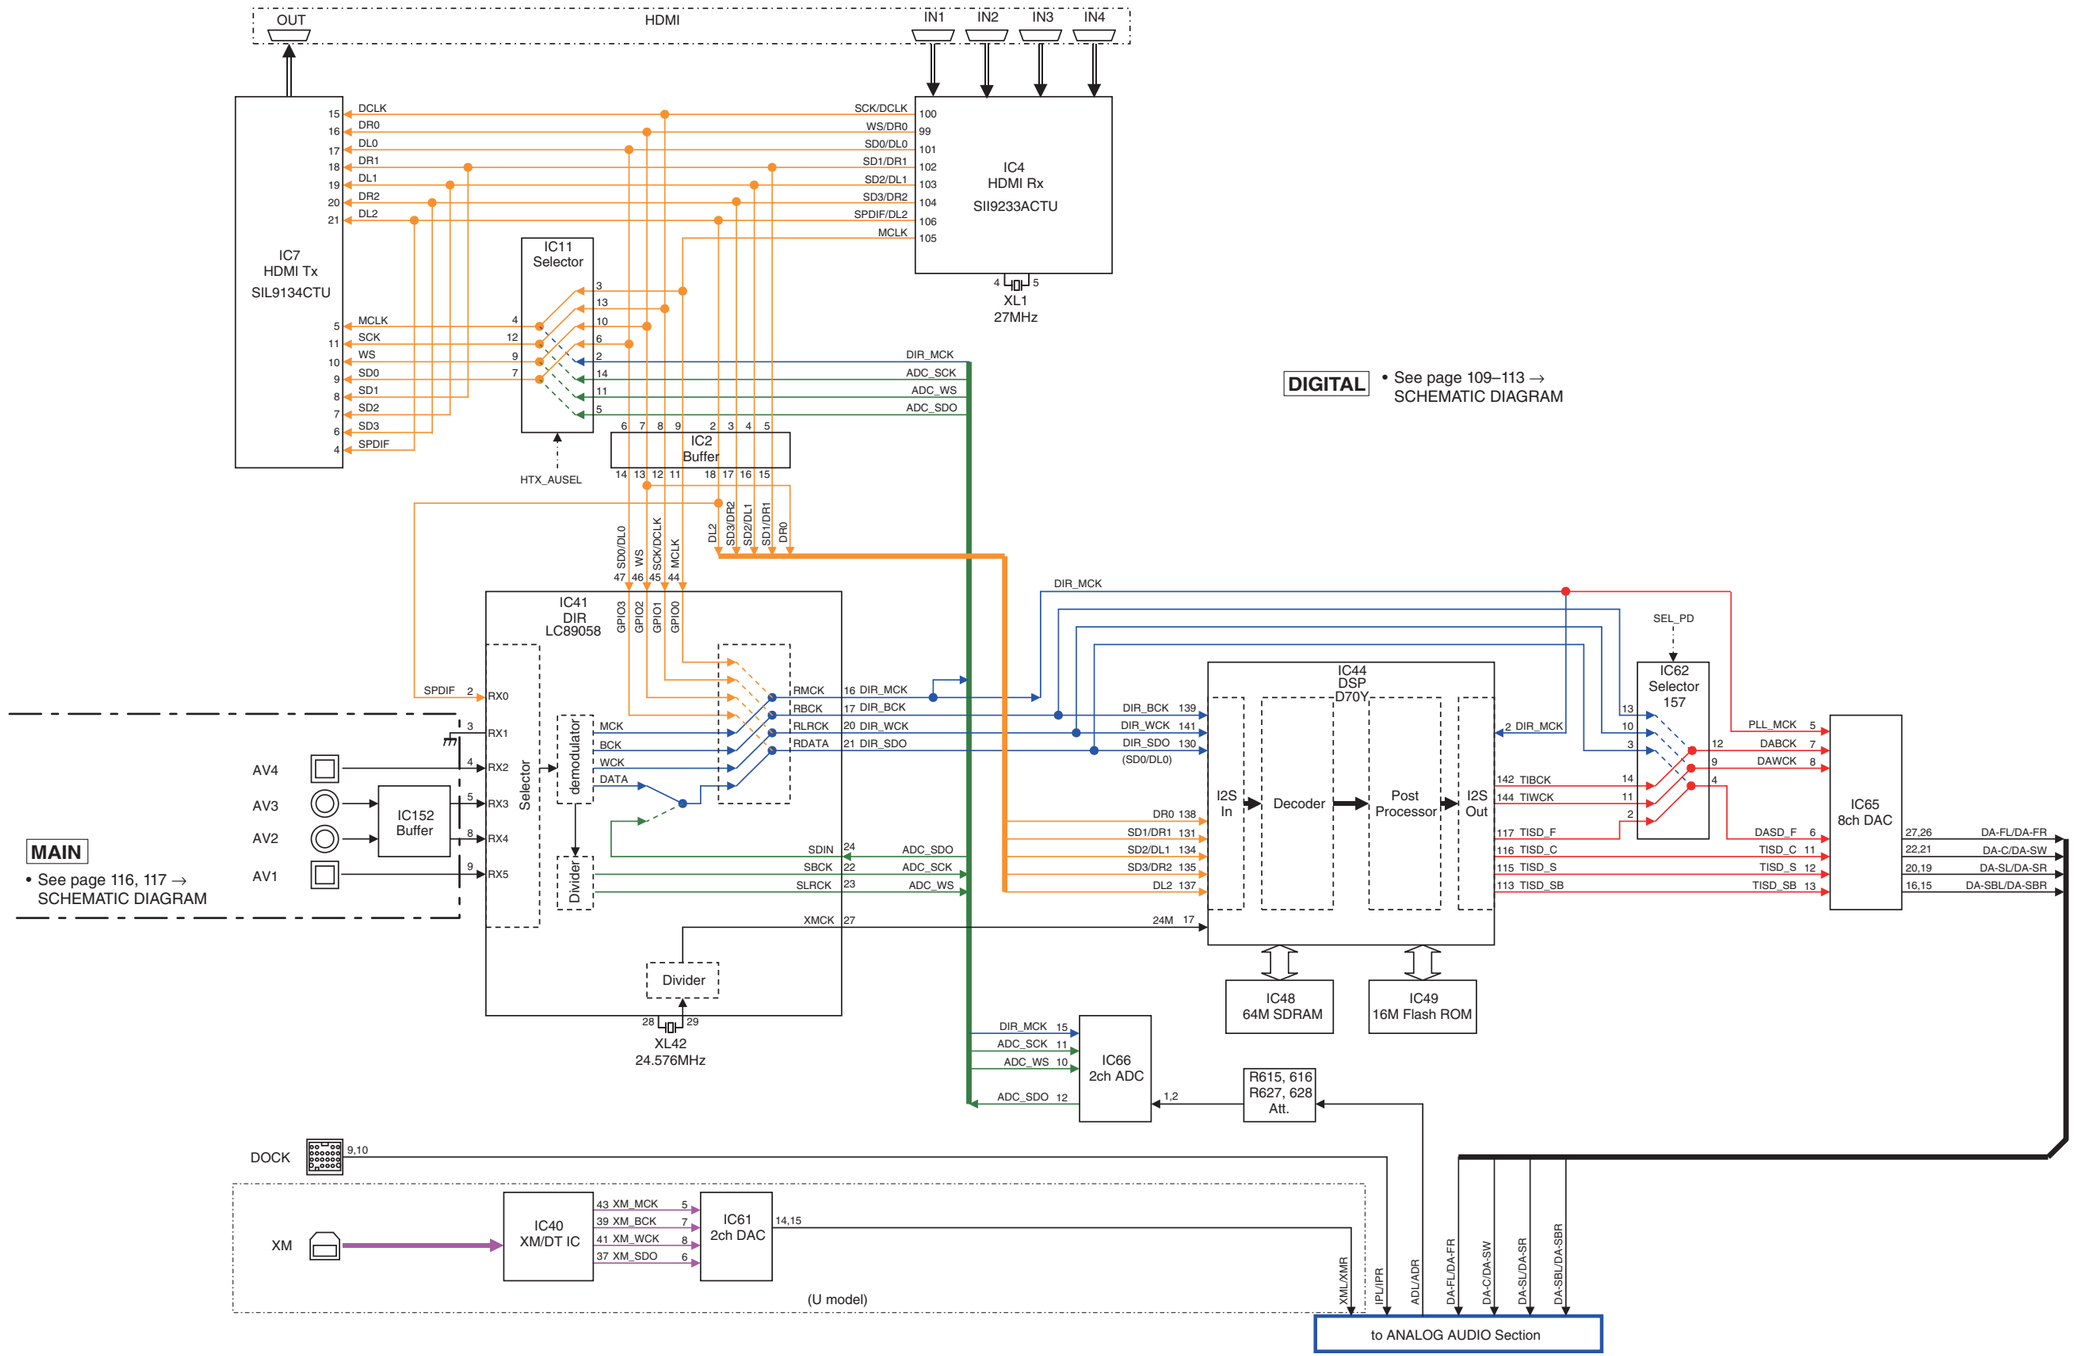

VIDEO Section Block Diagram

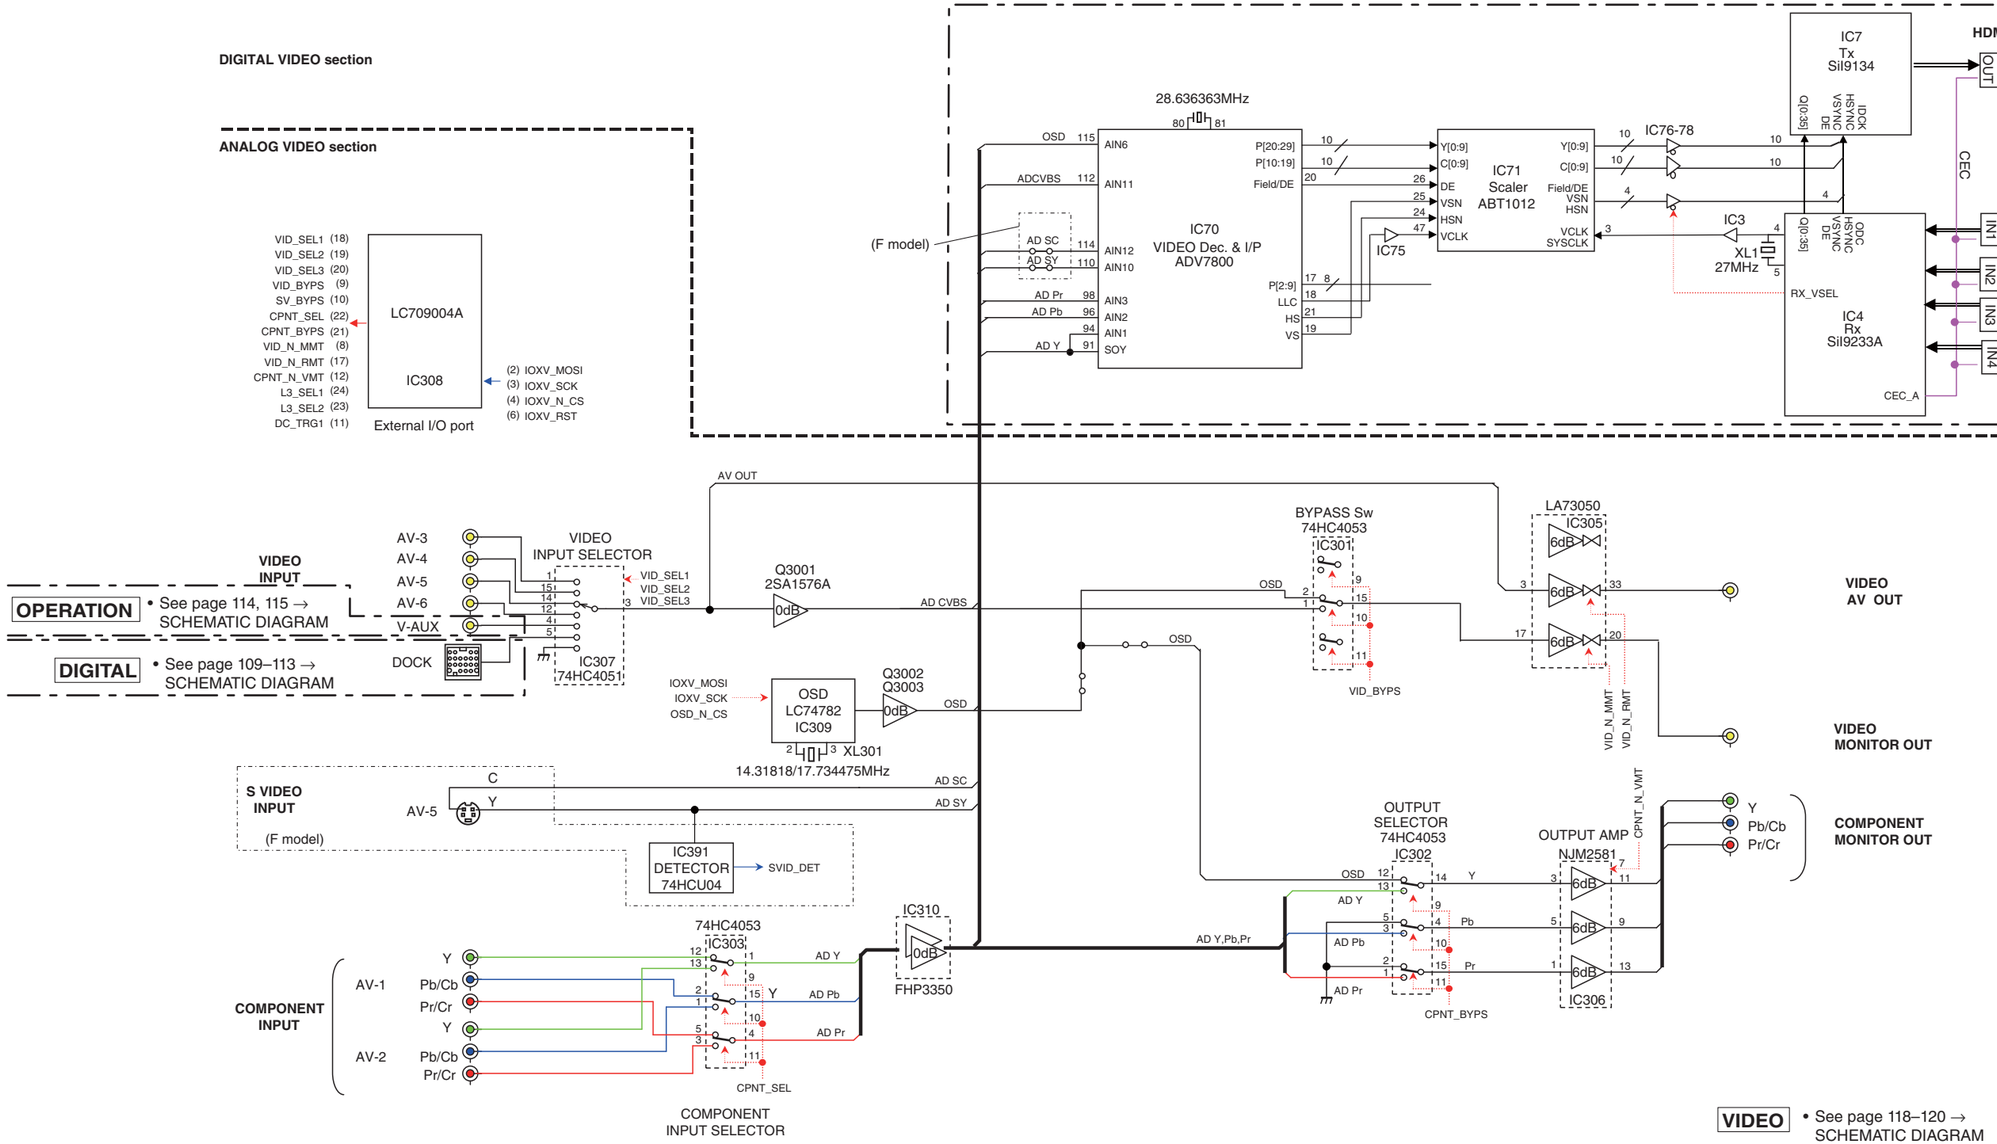

Power Supply Section Block Diagram

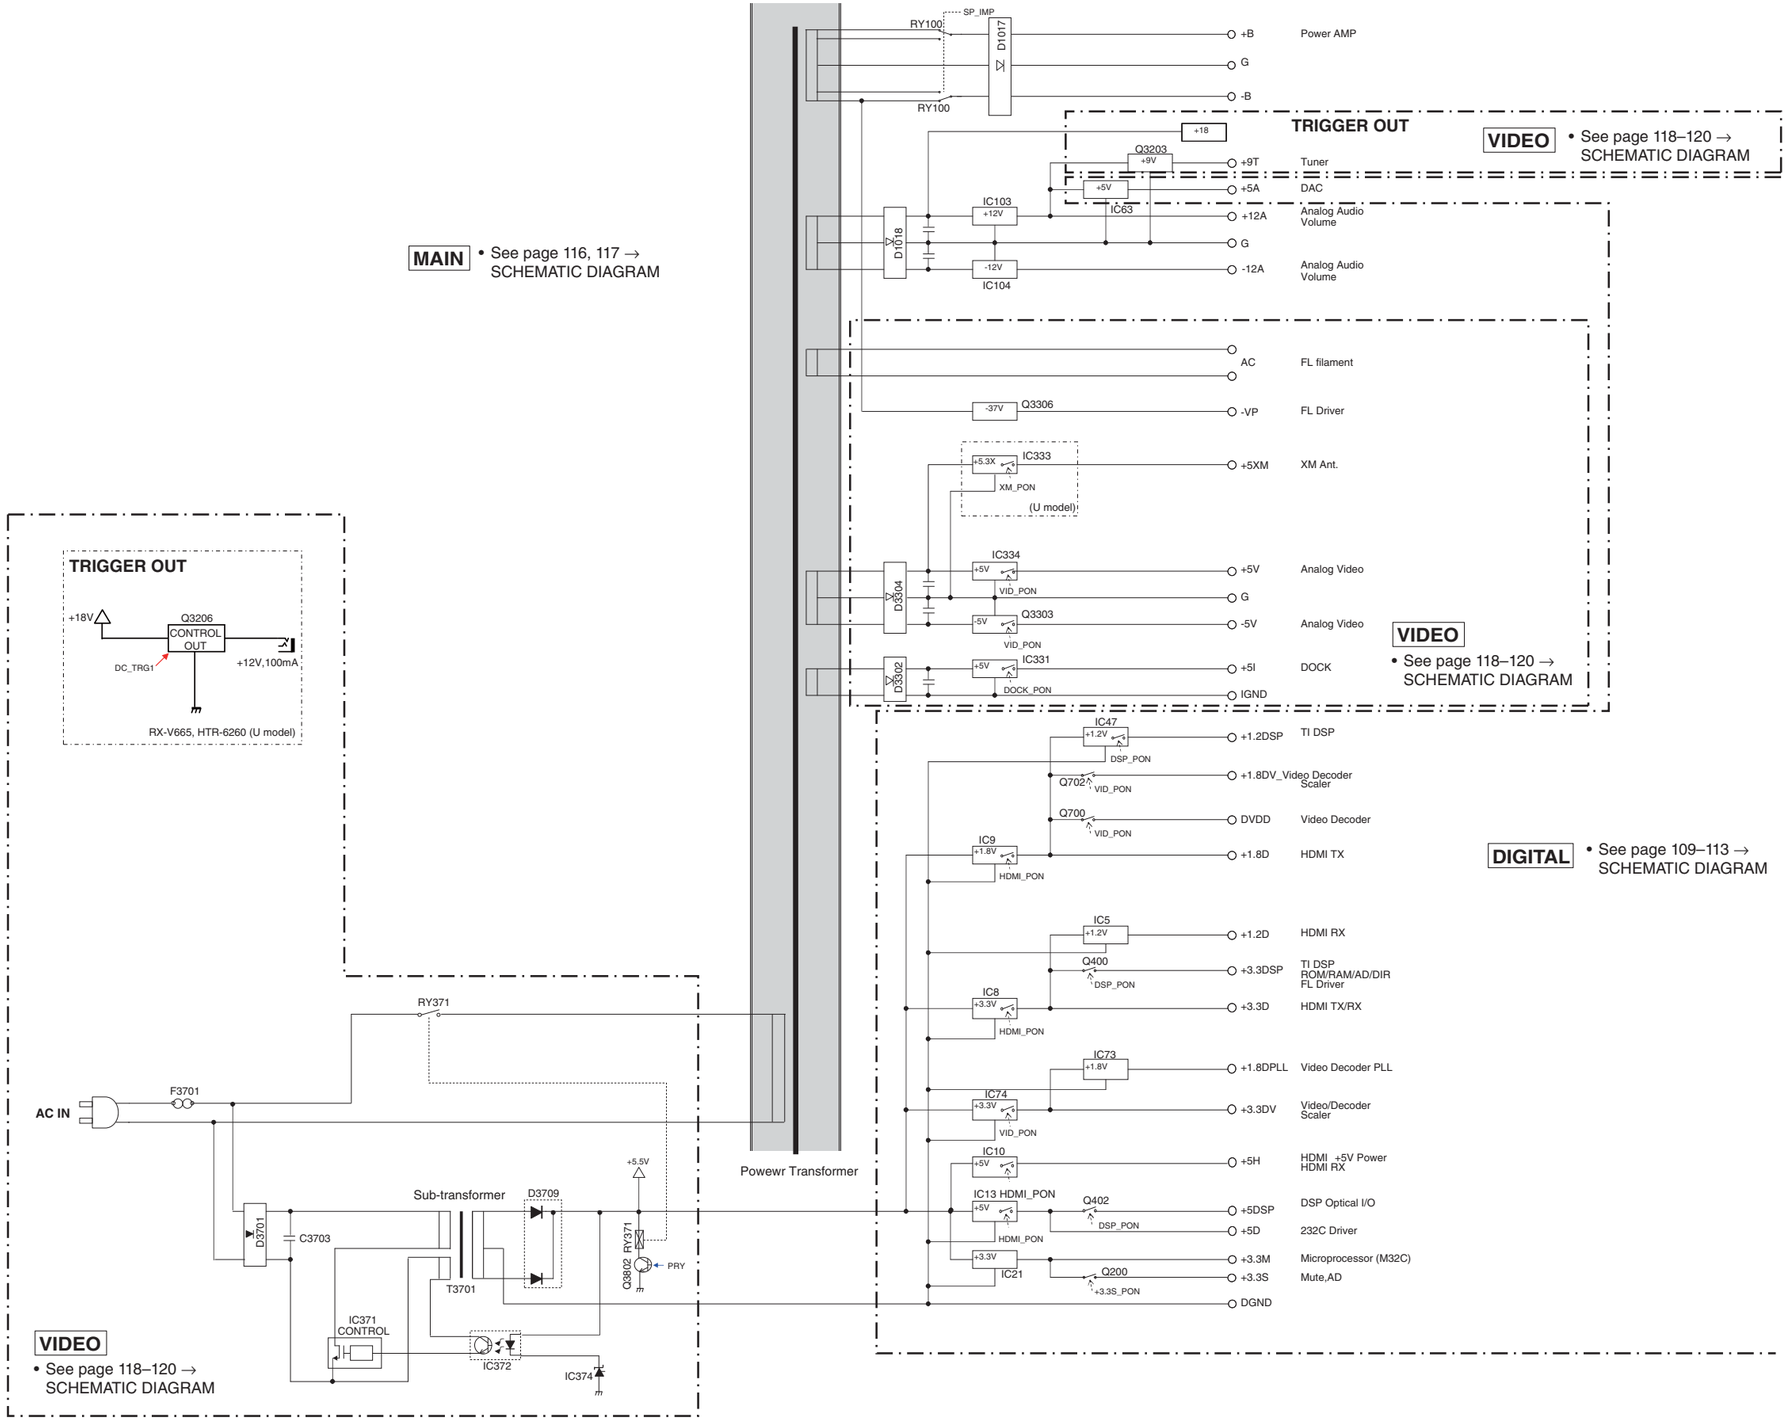

■ PRINTED CIRCUIT BOARDS

DIGITAL P.C.B. (Side A)

POINT Ⓐ XL1 (Pin 5 of IC4)

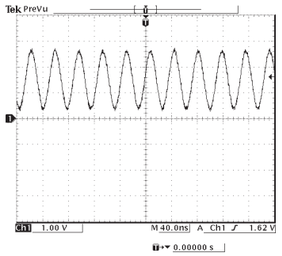

POINT Ⓑ XL20 (Pin 20 of IC20)

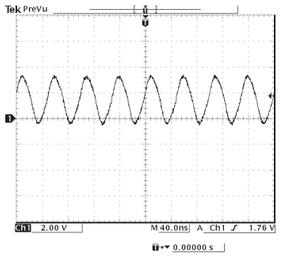

POINT Ⓒ XL41 (Pin 28 of IC40)

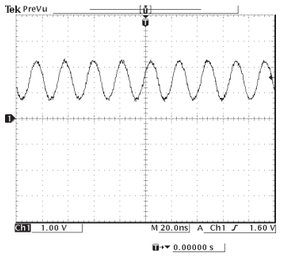

POINT Ⓓ XL42 (Pin 29 of IC41)

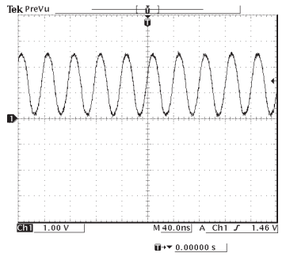

POINT Ⓔ XL70 (Pin 81 of IC70)

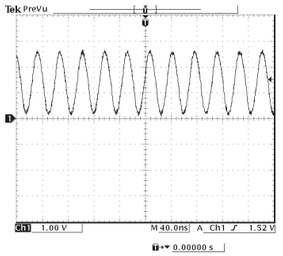

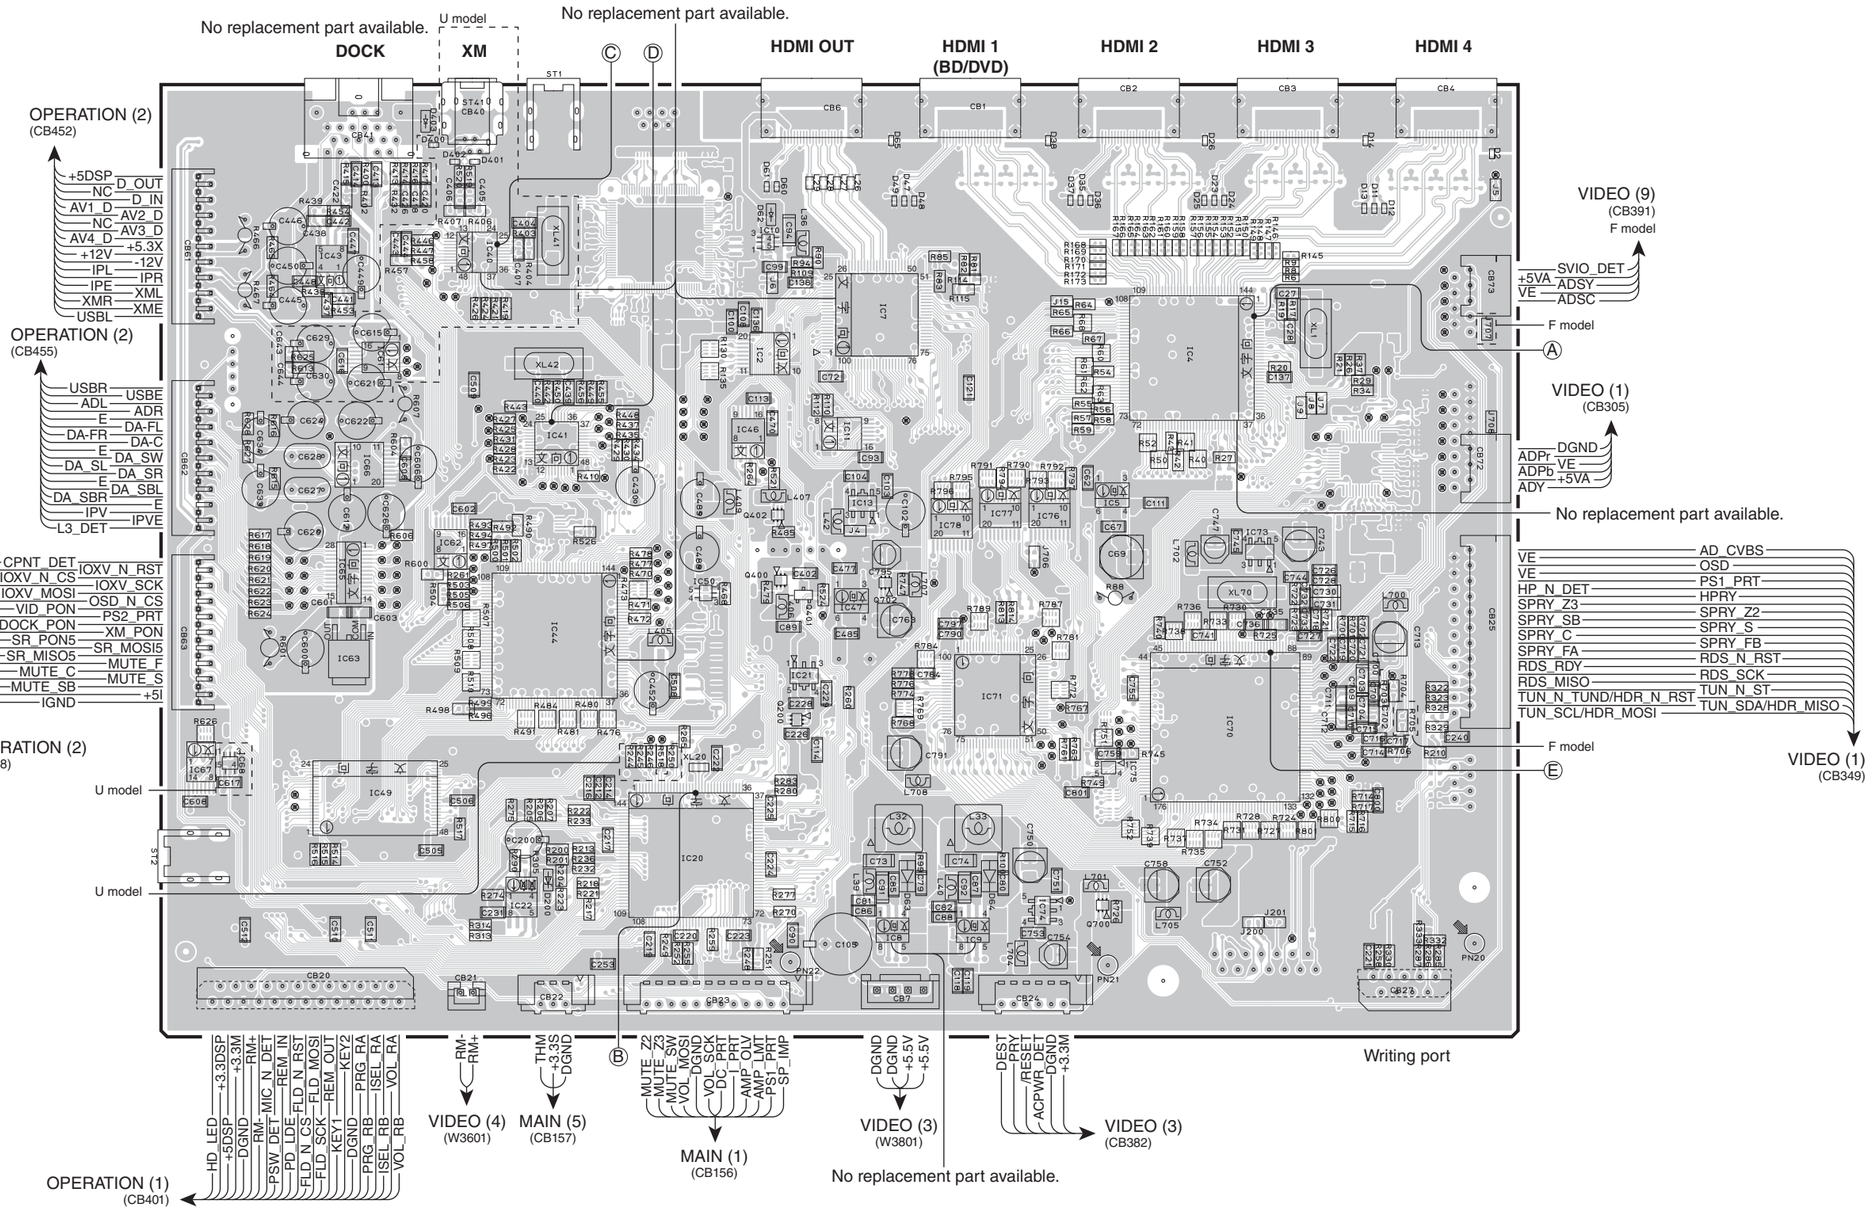

- Semiconductor Location

Ref No.	Location	Ref No.	Location
D2	G3	IC11	E4
D11	G3	IC13	E4
D12	G3	IC20	D6
D13	G3	IC21	D5
D14	G3	IC22	C6
D23	F3	IC40	C3
D24	F3	IC41	C4
D25	F3	IC44	C5
D26	F3	IC43	B3
D35	F3	IC46	D4
D36	F3	IC47	E5
D37	F3	IC49	C5
D38	E3	IC50	D5
D47	E3	IC61	C4
D48	E3	IC62	C4
D49	E3	IC63	C5
D60	D3	IC65	C5
D61	D3	IC66	C4
D62	D3	IC67	B5
D63	E6	IC68	B5
D64	E6	IC70	F5
D65	E3	IC71	E5
D200	C6	IC73	F4
D400	C3	IC74	E6
D401	C3	IC75	F5
D402	C3	IC76	E4
D403	C3	IC77	E4
IC2	D4	IC78	E4
IC4	F4	Q200	D5
IC5	F4	Q400	D4
IC7	E3	Q401	D4
IC8	E6	Q402	D4
IC9	E6	Q700	F6
IC10	D3	Q702	E5

DIGITAL P.C.B. (Side B)

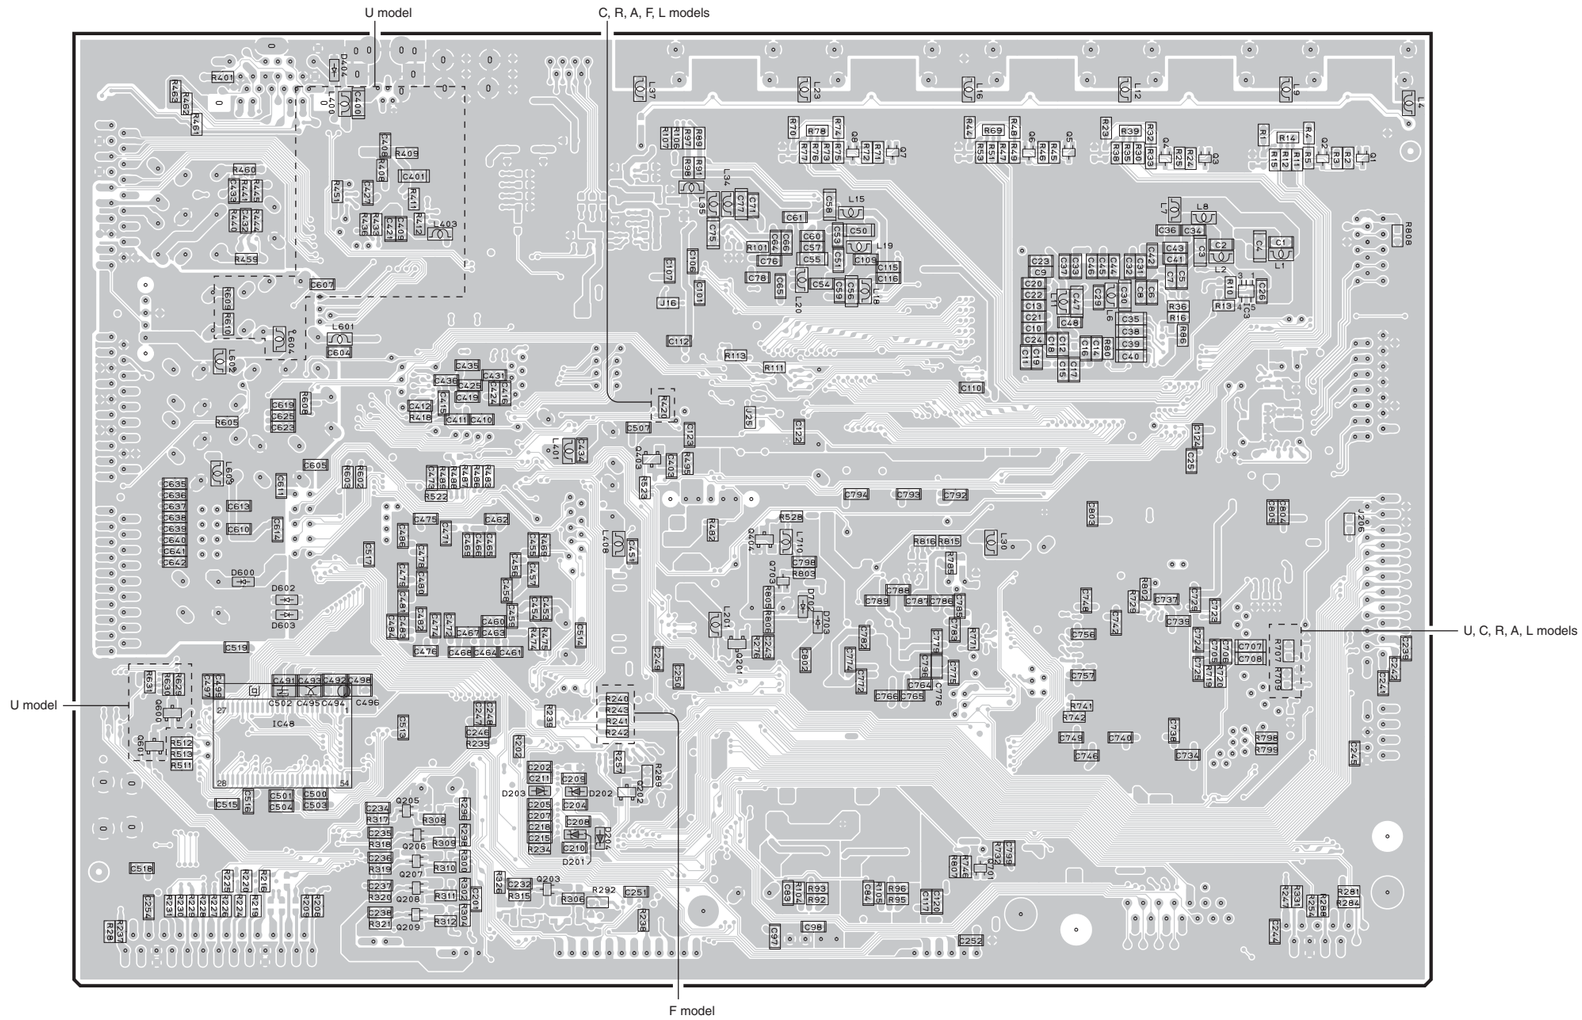

• Semiconductor Location

Ref No.	Location
D201	D6
D202	D6
D203	D6
D204	D6
D404	C3
D600	C5
D602	C5
D603	C5
D702	E5
D703	E5
IC3	G4
IC48	C5
Q1	G3
Q2	G3
Q3	G3
Q4	F3
Q5	F3
Q6	F3
Q7	E3
Q8	E3
Q201	E5
Q202	D6
Q203	D6
Q205	C6
Q206	C6
Q207	C6
Q208	C6
Q209	C6
Q403	D4
Q404	E5
Q600	B5
Q601	B5
Q701	F6
Q703	E5

OPERATION (1) P.C.B. (Side A)

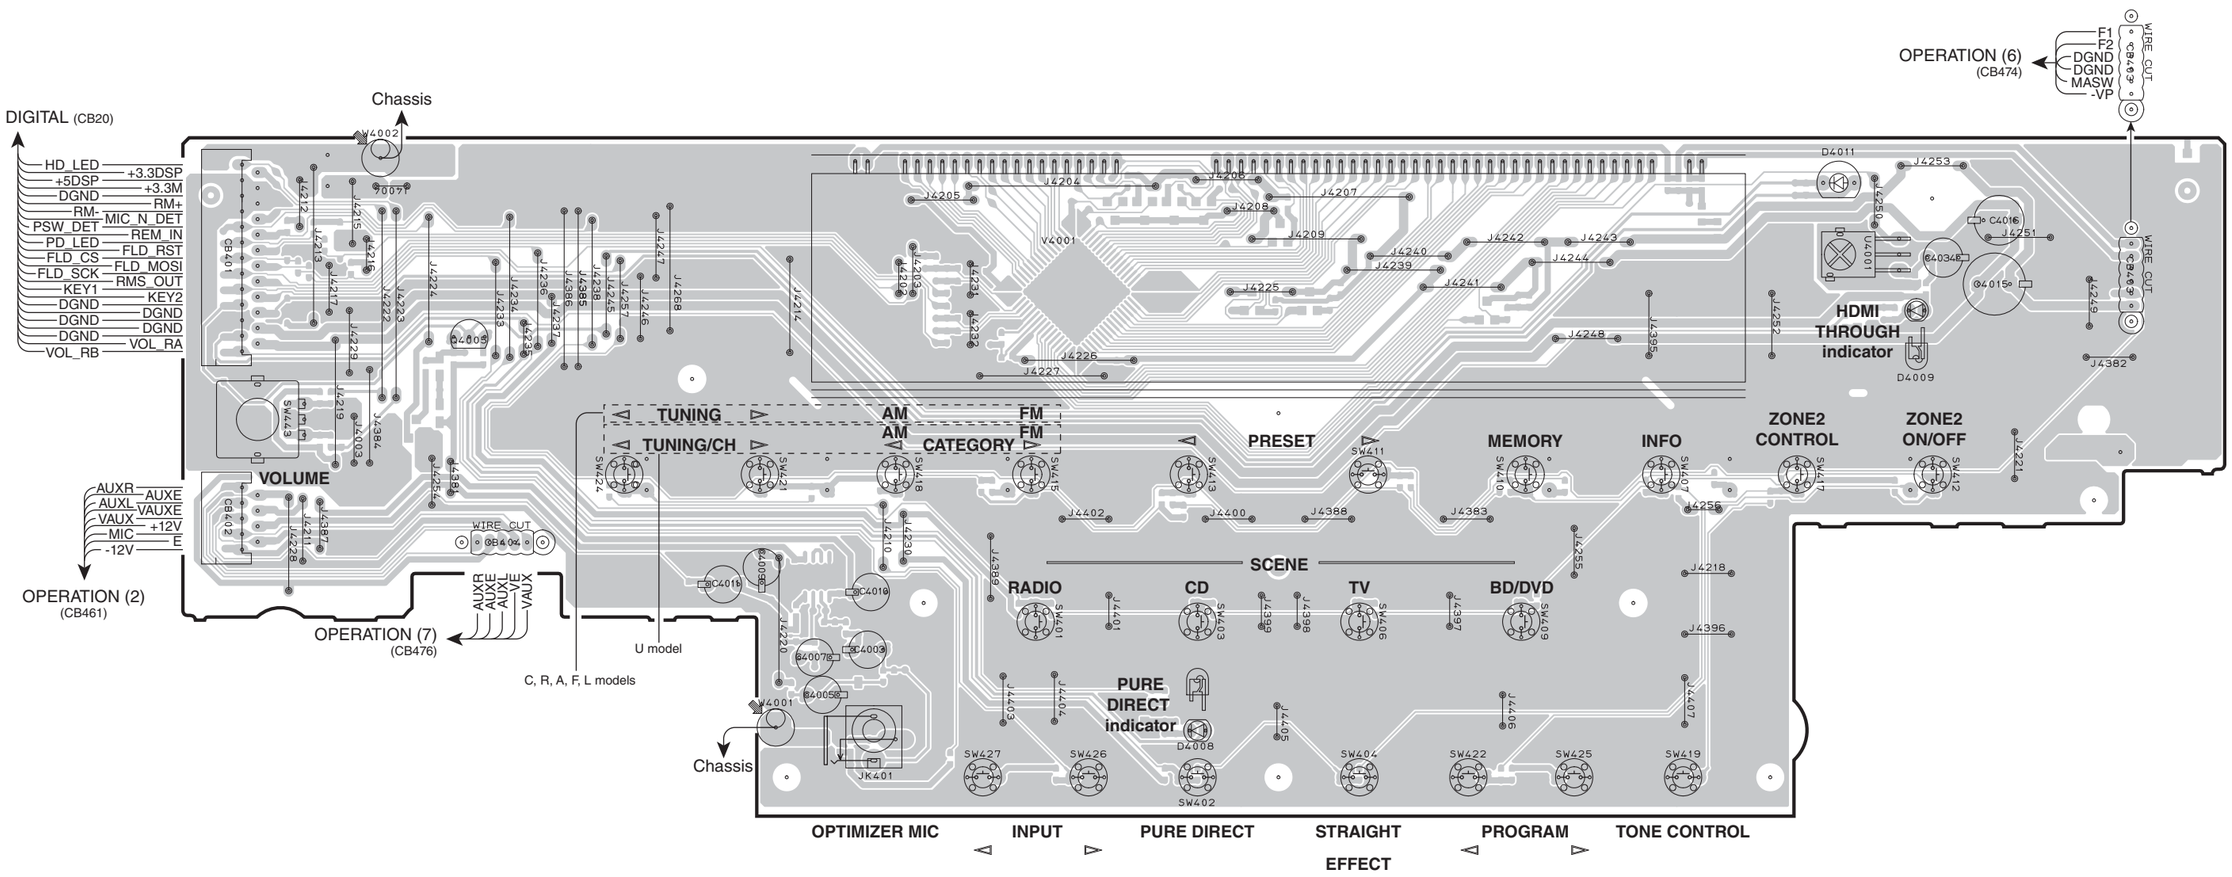

• Semiconductor Location

Ref No.	Location
D4008	F5
D4009	I3
D4011	I3
Q4005	C3

OPERATION (1) P.C.B. (Side B)

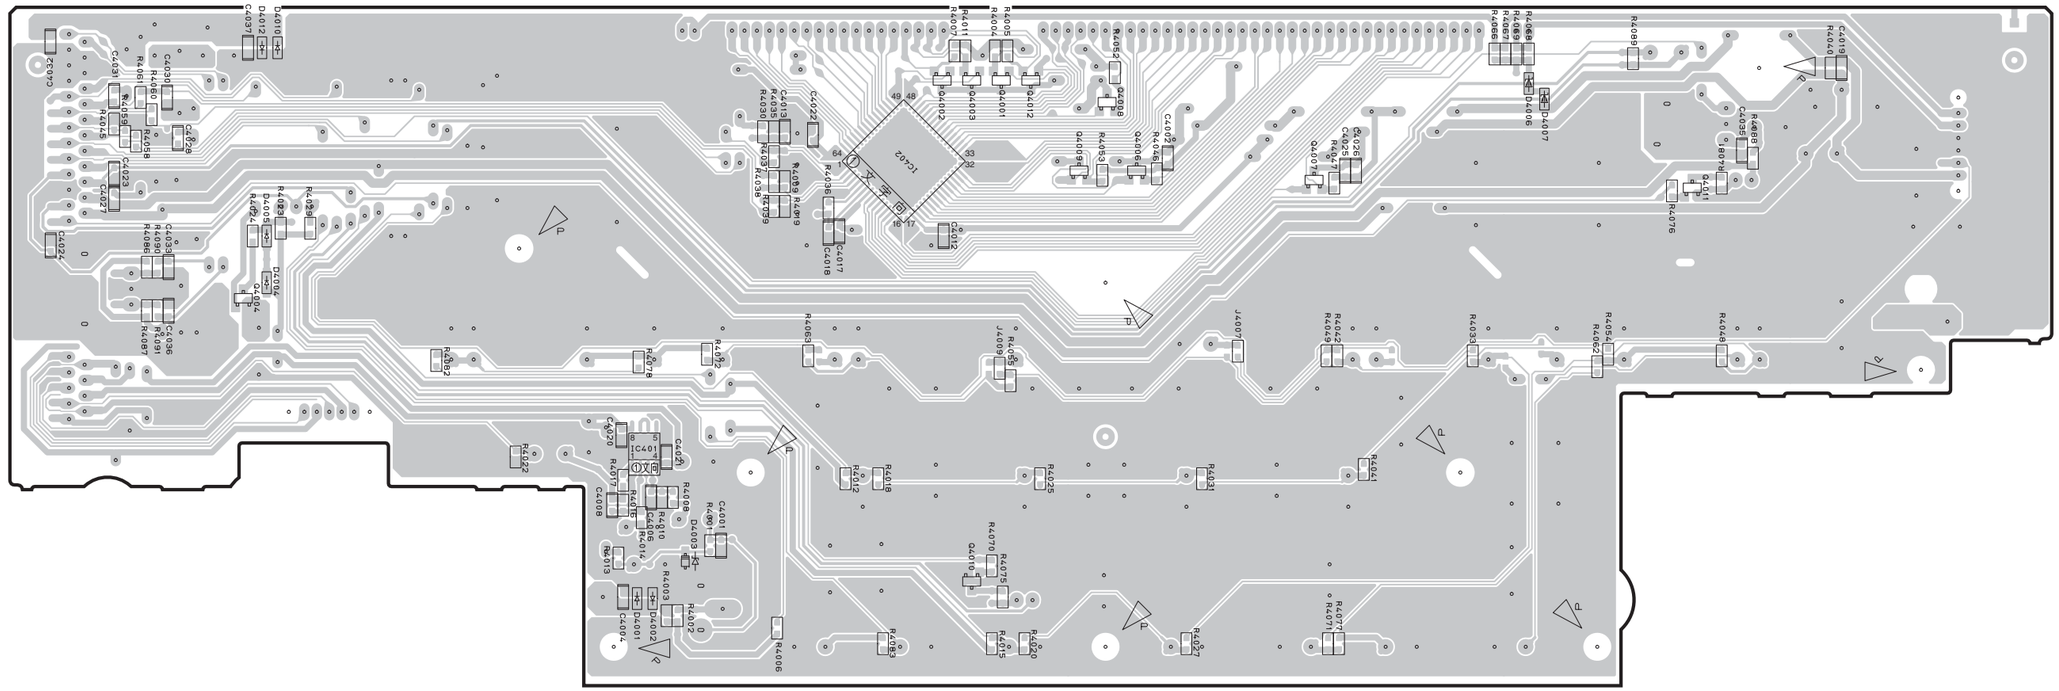

• Semiconductor Location

Ref No.	Location	Ref No.	Location
D4001	D5	Q4001	F3
D4002	D5	Q4002	E3
D4003	D5	Q4003	F3
D4004	C4	Q4004	C4
D4005	C3	Q4006	F3
D4006	H3	Q4007	G3
D4007	H3	Q4008	F3
D4010	C3	Q4009	F3
D4012	C3	Q4010	F5
IC401	D4	Q4011	I3
IC402	E3	Q4012	F3

OPERATION (2) P.C.B. (Side A)

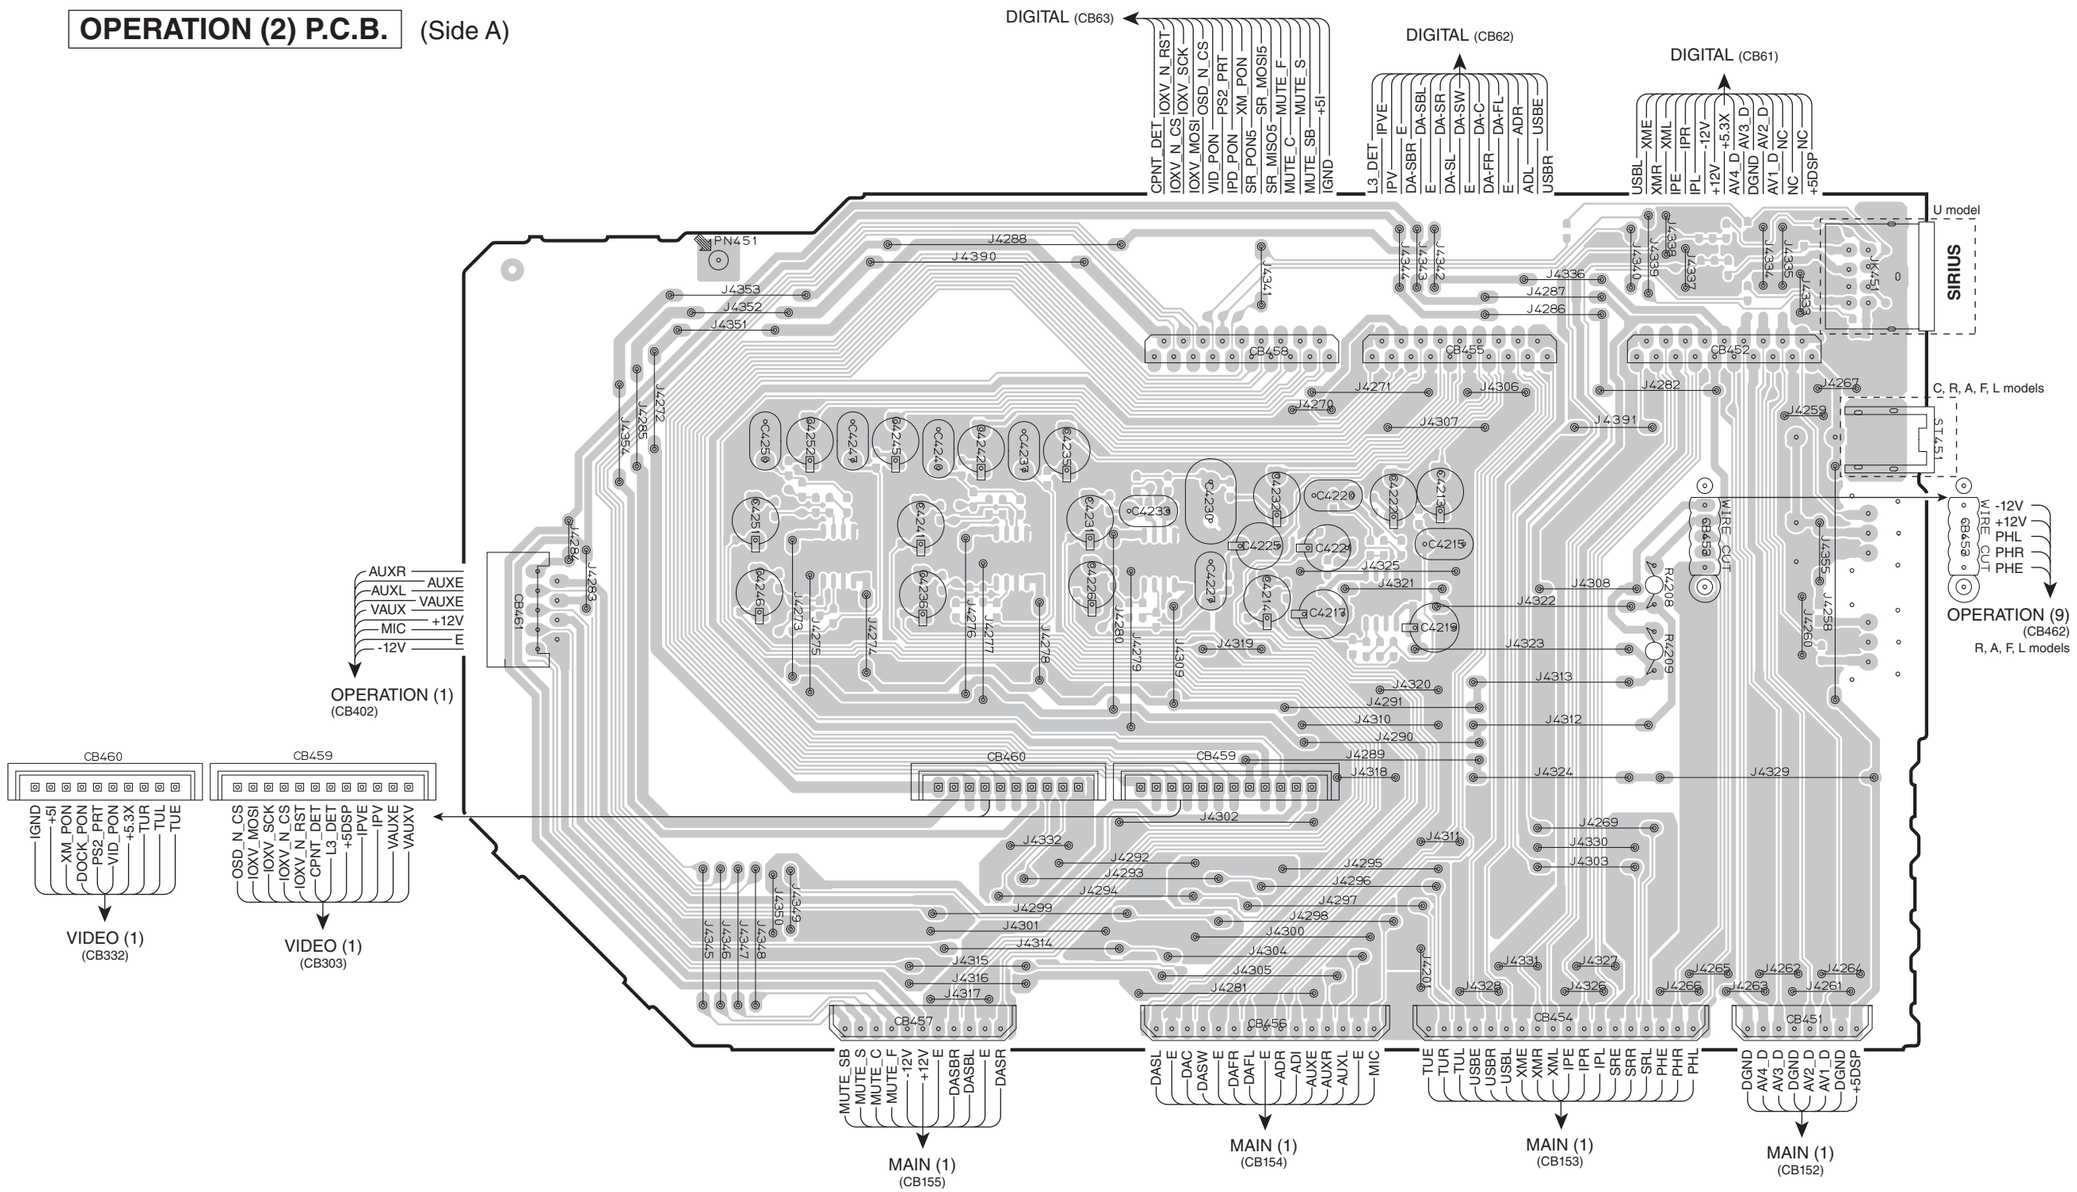

OPERATION (2) P.C.B. (Side B)

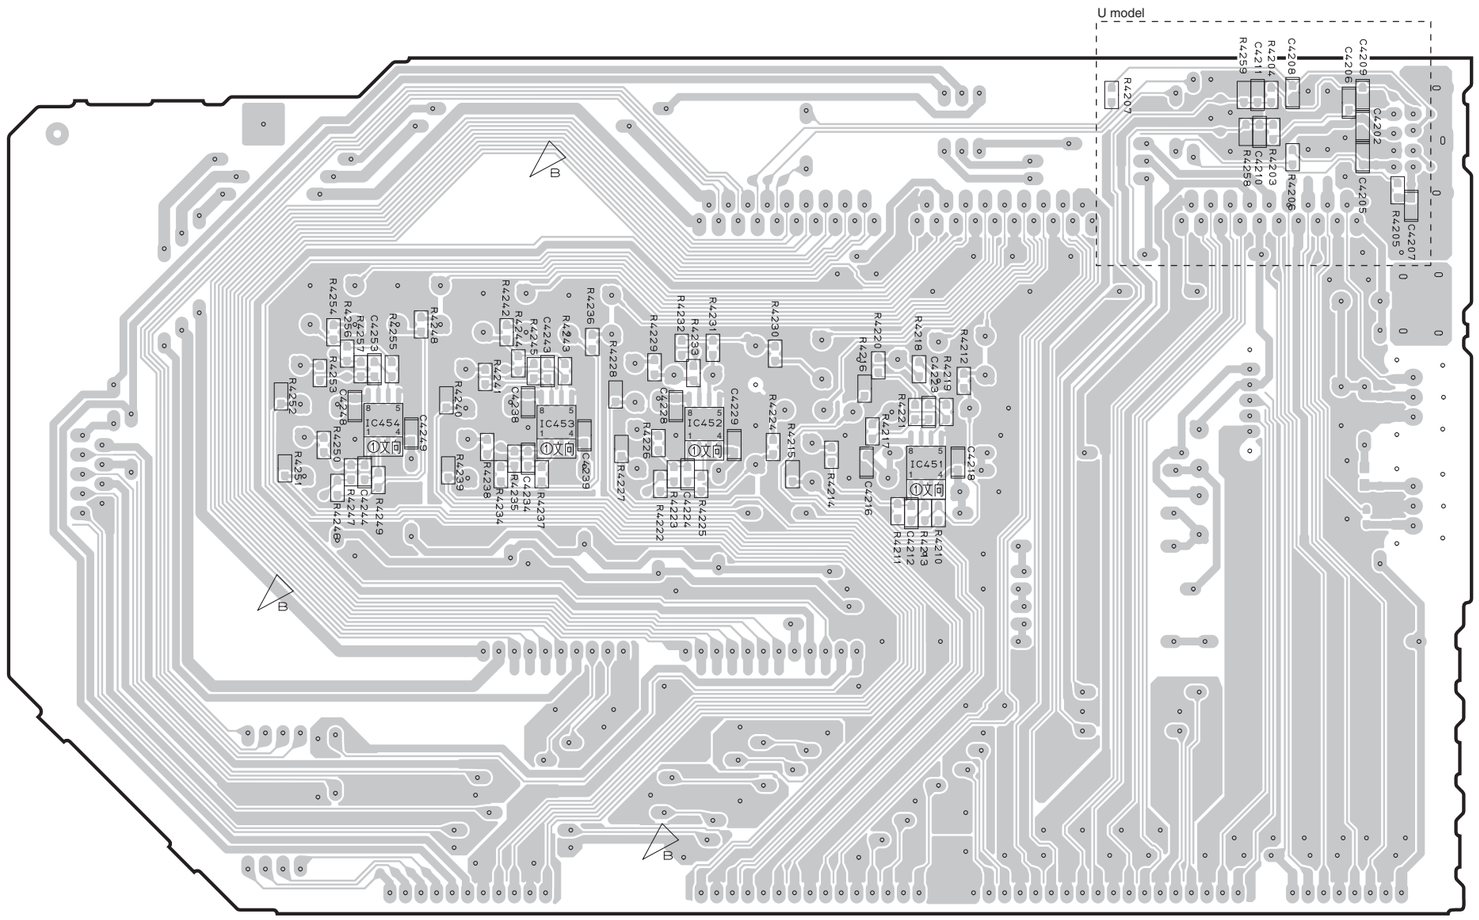

• Semiconductor Location

Ref No.	Location
IC451	F4
IC452	E4
IC453	E4
IC454	D4

OPERATION (3) P.C.B. (Side A)

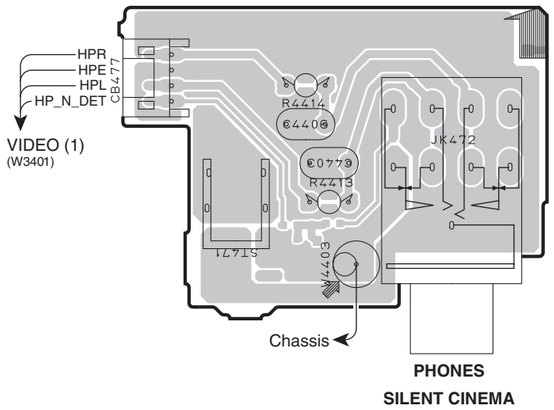

OPERATION (6) P.C.B. (Side A)

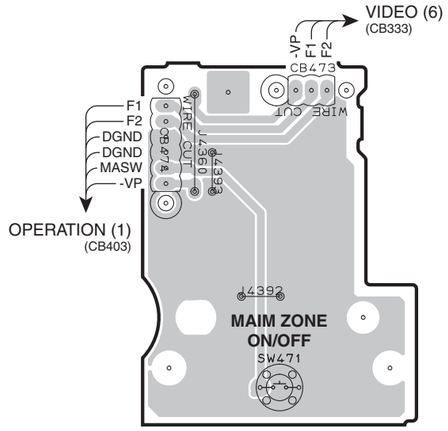

OPERATION (7) P.C.B. (Side A)

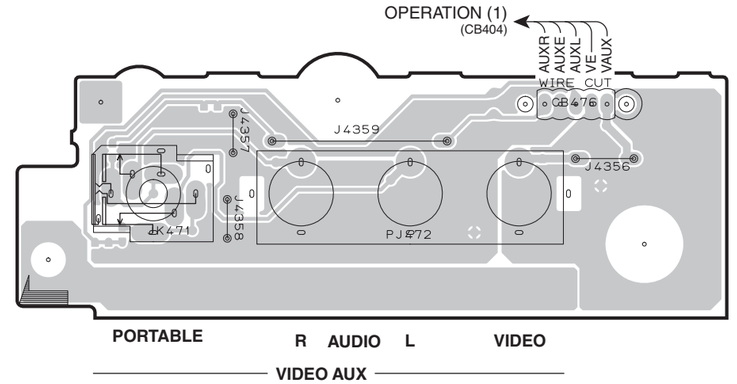

OPERATION (8) P.C.B. (Side A)

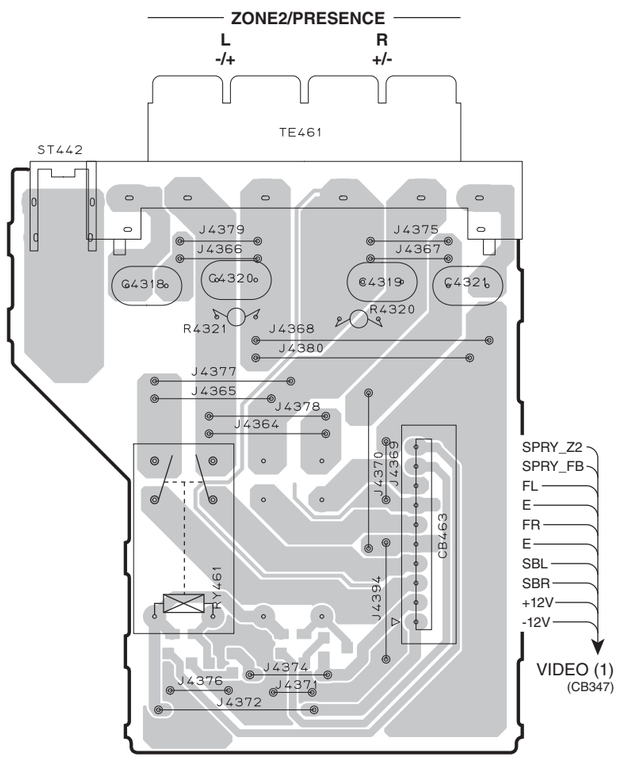

OPERATION (9) P.C.B. (Side A)

R, A, F, L models

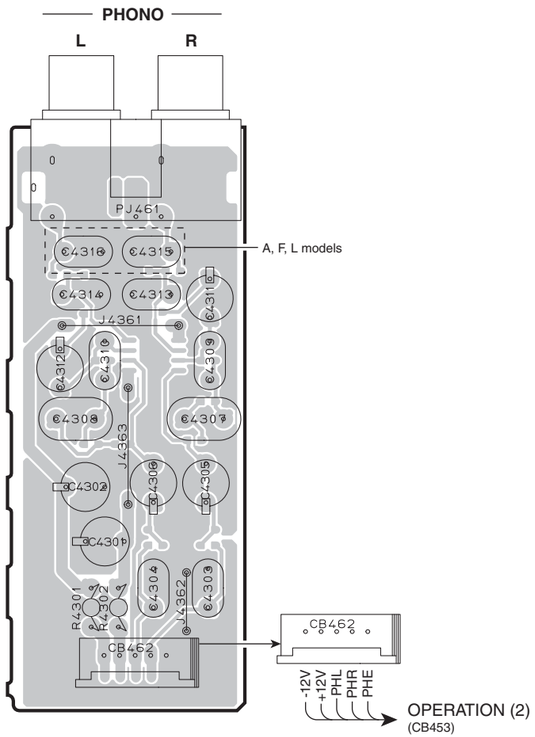

OPERATION (10) P.C.B. (Side A)

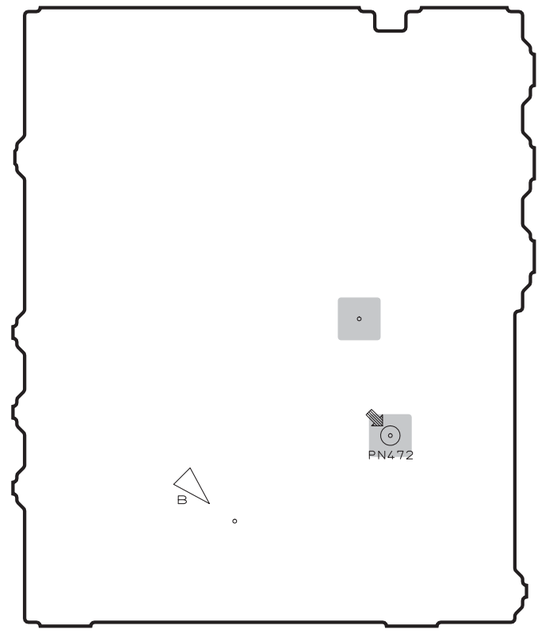

OPERATION (3) P.C.B. (Side B)

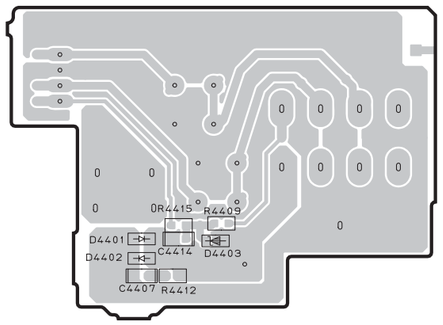

OPERATION (6) P.C.B. (Side B)

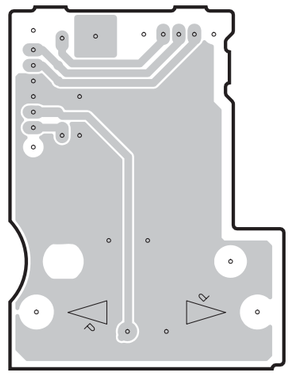

OPERATION (7) P.C.B. (Side B)

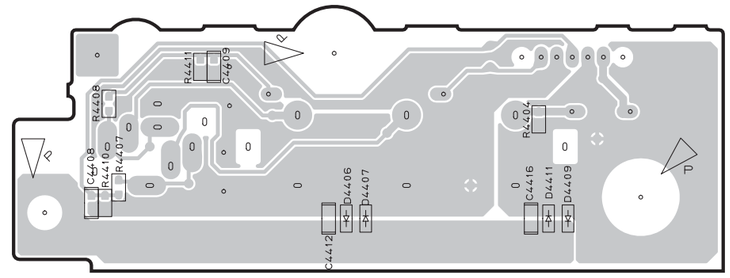

OPERATION (8) P.C.B. (Side B)

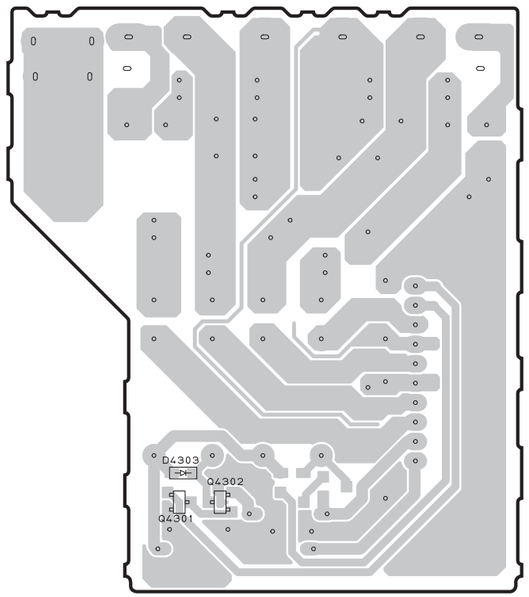

OPERATION (9) P.C.B. (Side B)

R, A, F, L models

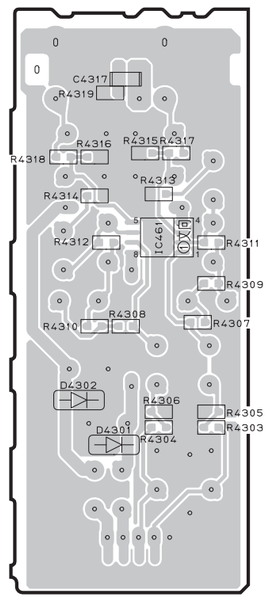

OPERATION (10) P.C.B. (Side B)

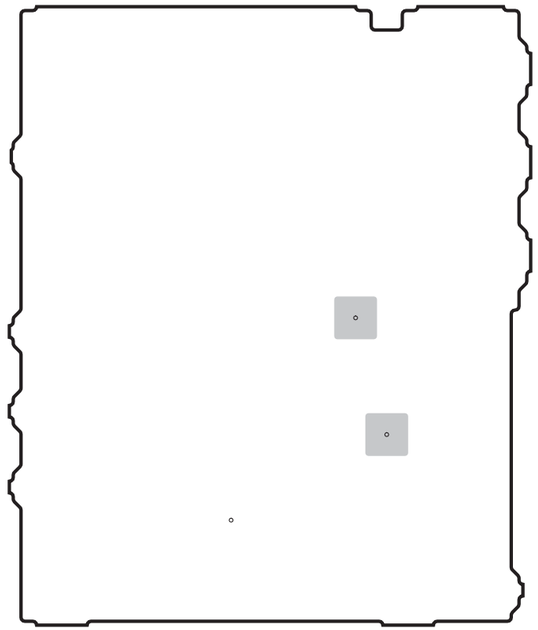

• Semiconductor Location

Ref No.	Location
D4301	E6
D4302	E6
D4303	B7
D4401	B3
D4402	B3
D4403	B3
D4406	H3
D4407	H3
D4409	I3
D4411	I3
IC461	E6
Q4301	B7
Q4302	B7

MAIN (1) P.C.B. (Side A)

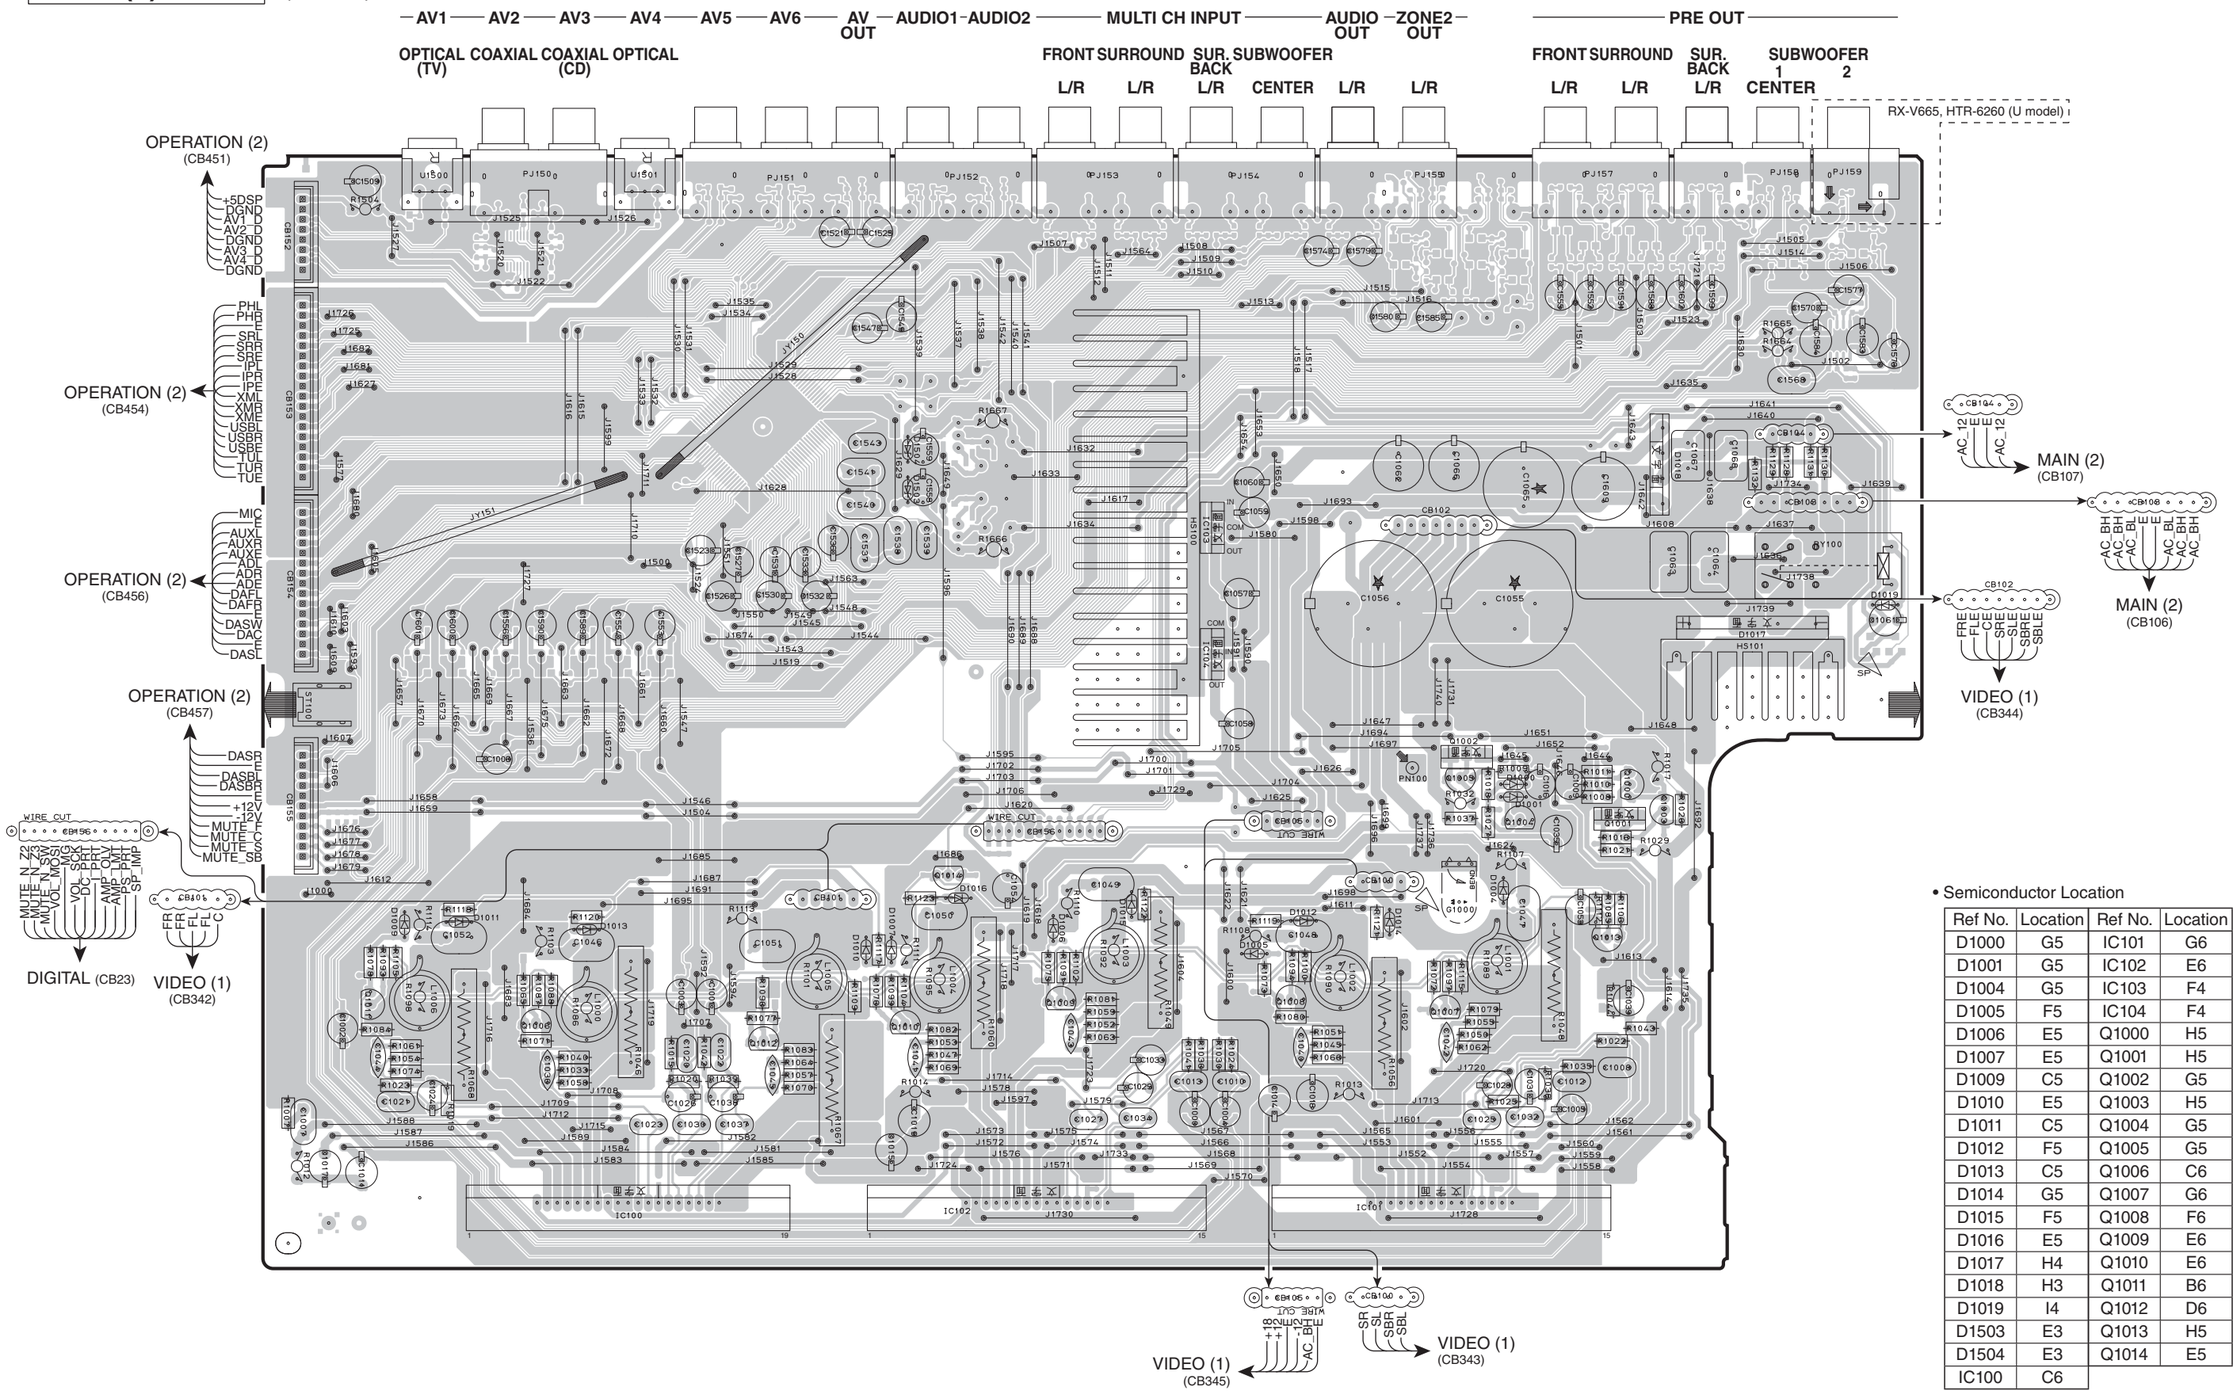

- Semiconductor Location

Ref No.	Location	Ref No.	Location
D1000	G5	IC101	G6
D1001	G5	IC102	E6
D1004	G5	IC103	F4
D1005	F5	IC104	F4
D1006	E5	Q1000	H5
D1007	E5	Q1001	H5
D1009	C5	Q1002	G5
D1010	E5	Q1003	H5
D1011	C5	Q1004	G5
D1012	F5	Q1005	G5
D1013	C5	Q1006	C6
D1014	G5	Q1007	G6
D1015	F5	Q1008	F6
D1016	E5	Q1009	E6
D1017	H4	Q1010	E6
D1018	H3	Q1011	B6
D1019	I4	Q1012	D6
D1503	E3	Q1013	H5
D1504	E3	Q1014	E5
IC100	C6		

MAIN (1) P.C.B. (Side B)

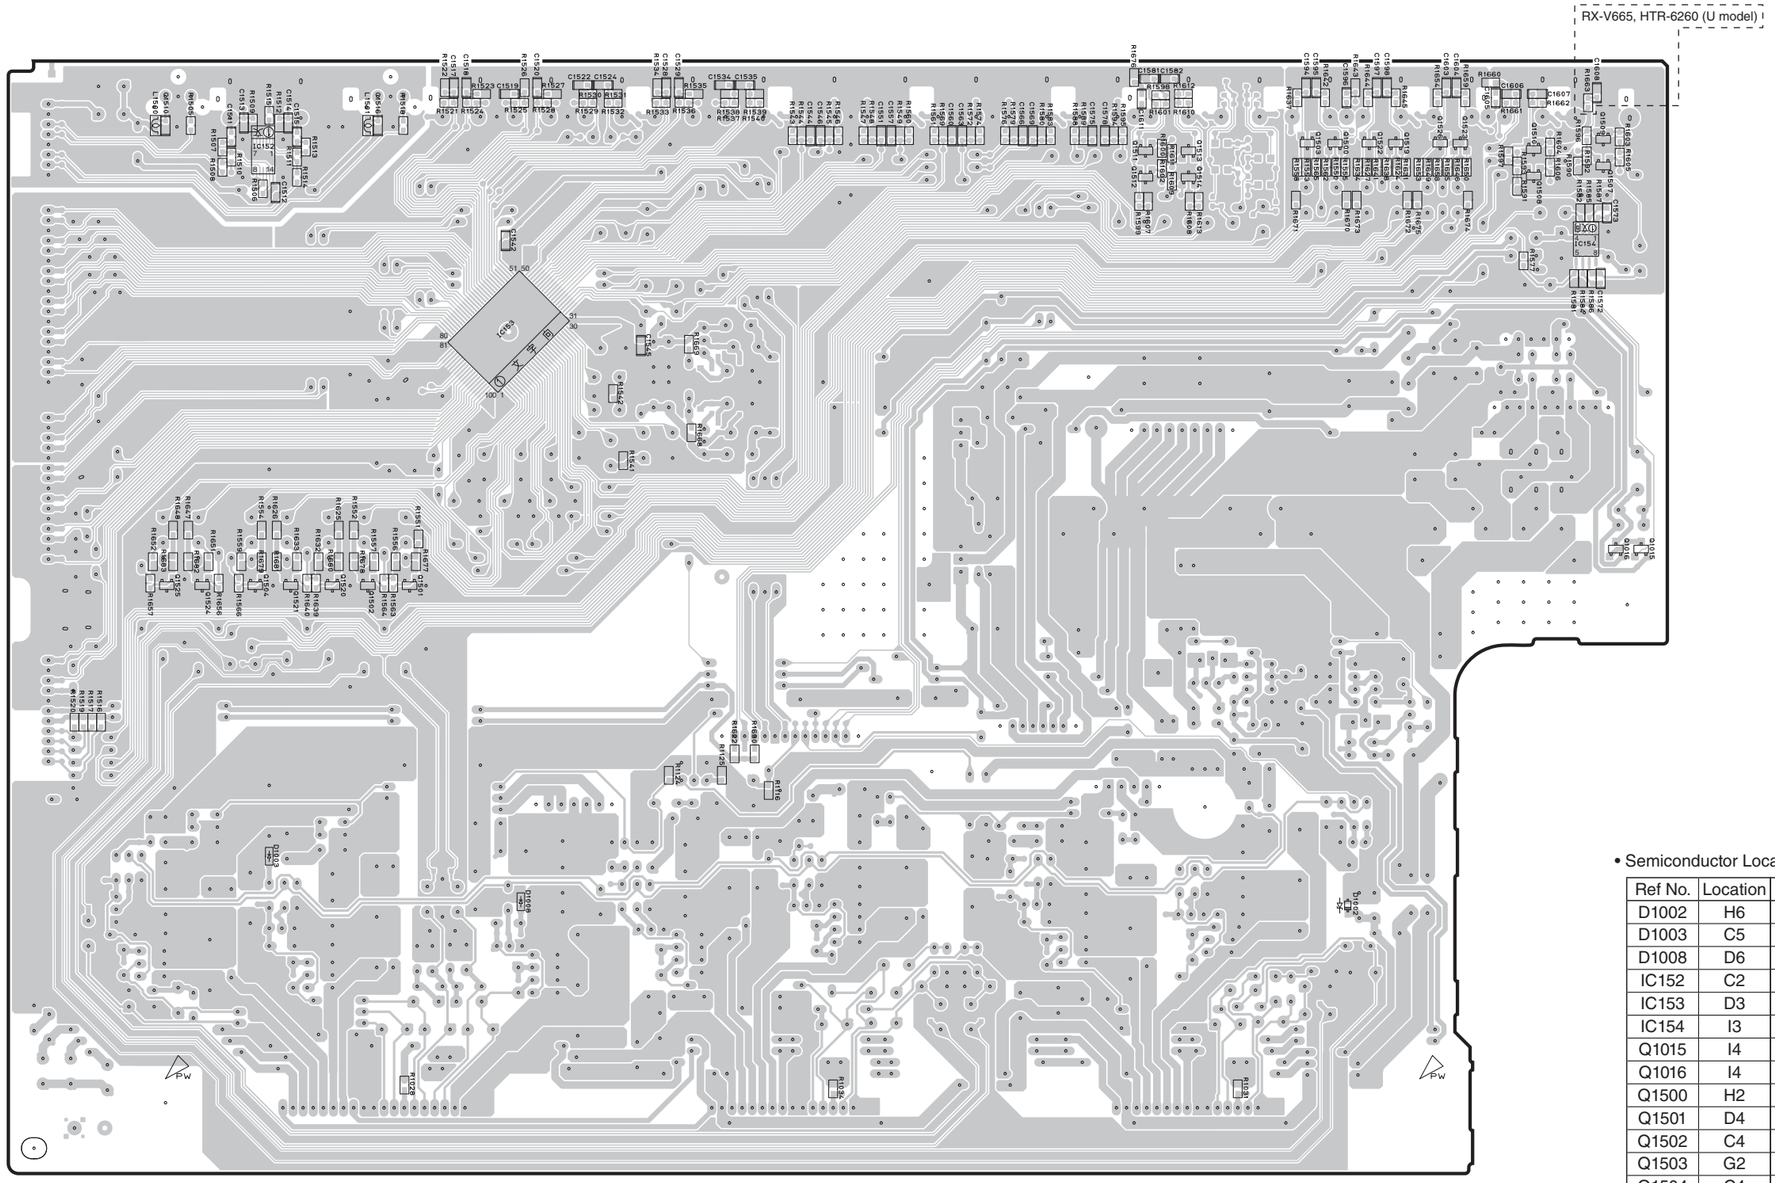

• Semiconductor Location

Ref No.	Location	Ref No.	Location
D1002	H6	Q1509	I2
D1003	C5	Q1510	H2
D1008	D6	Q1511	G2
IC152	C2	Q1512	G3
IC153	D3	Q1513	G2
IC154	I3	Q1514	G3
Q1015	I4	Q1519	H2
Q1016	I4	Q1520	C4
Q1500	H2	Q1521	C4
Q1501	D4	Q1522	H2
Q1502	C4	Q1523	H2
Q1503	G2	Q1524	C4
Q1504	C4	Q1525	C4
Q1507	I2	Q1526	H2
Q1508	H3		

MAIN (2) P.C.B. (Side A)

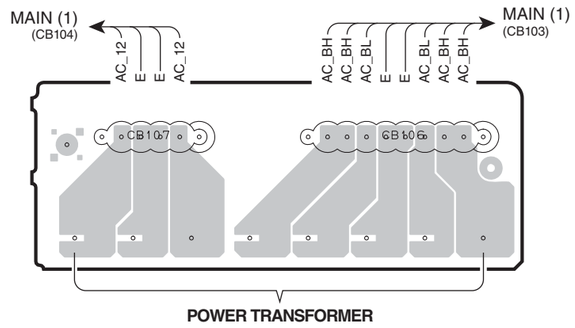

MAIN (3) P.C.B. (Side A)

R, L models

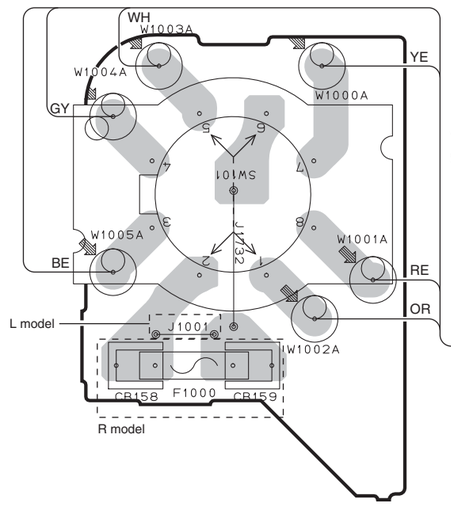

VOLTAGE SELECTOR

VOLTAGE SELECTOR

230-240V	1-2/5-6
220V	2-3/6-7
110V	3-4/7-8
120V	4-5/8-1

MAIN (4) P.C.B. (Side A)

R, L models

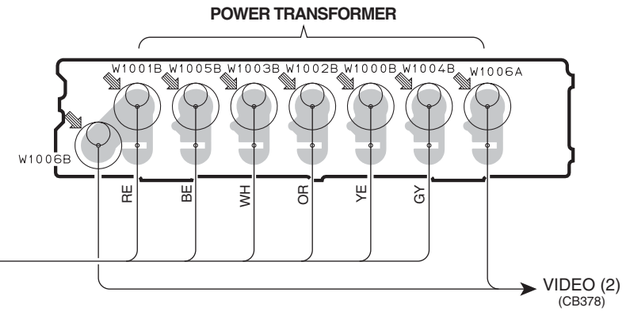

MAIN (5) P.C.B. (Side A)

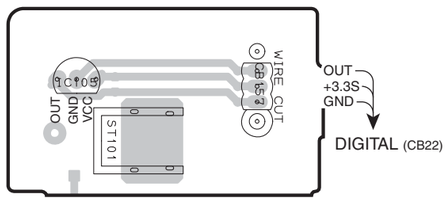

MAIN (6) P.C.B. (Side A)

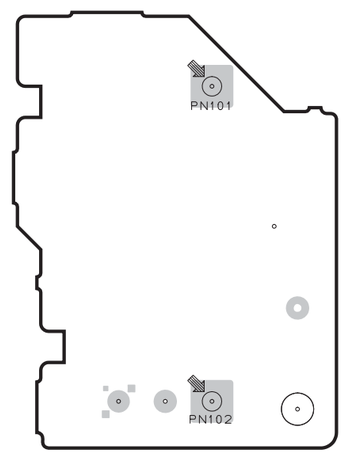

• Semiconductor Location

Ref No.	Location
IC105	C5

MAIN (2) P.C.B. (Side B)

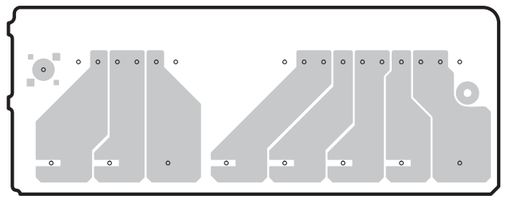

MAIN (3) P.C.B. (Side B)

R, L models

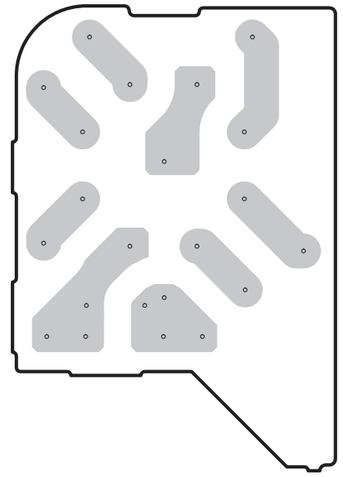

MAIN (4) P.C.B. (Side B)

R, L models

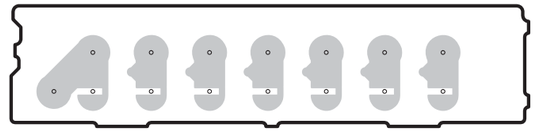

MAIN (5) P.C.B. (Side B)

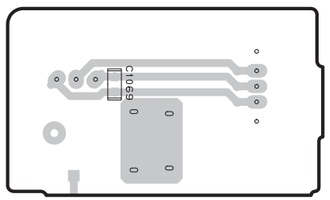

MAIN (6) P.C.B. (Side B)

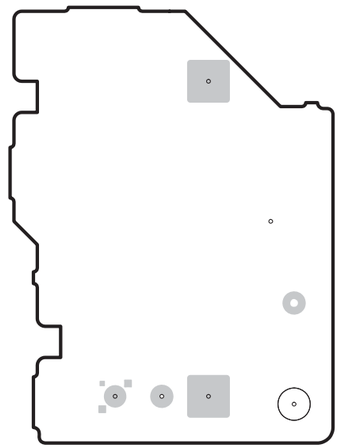

VIDEO (1) P.C.B. (Side A)

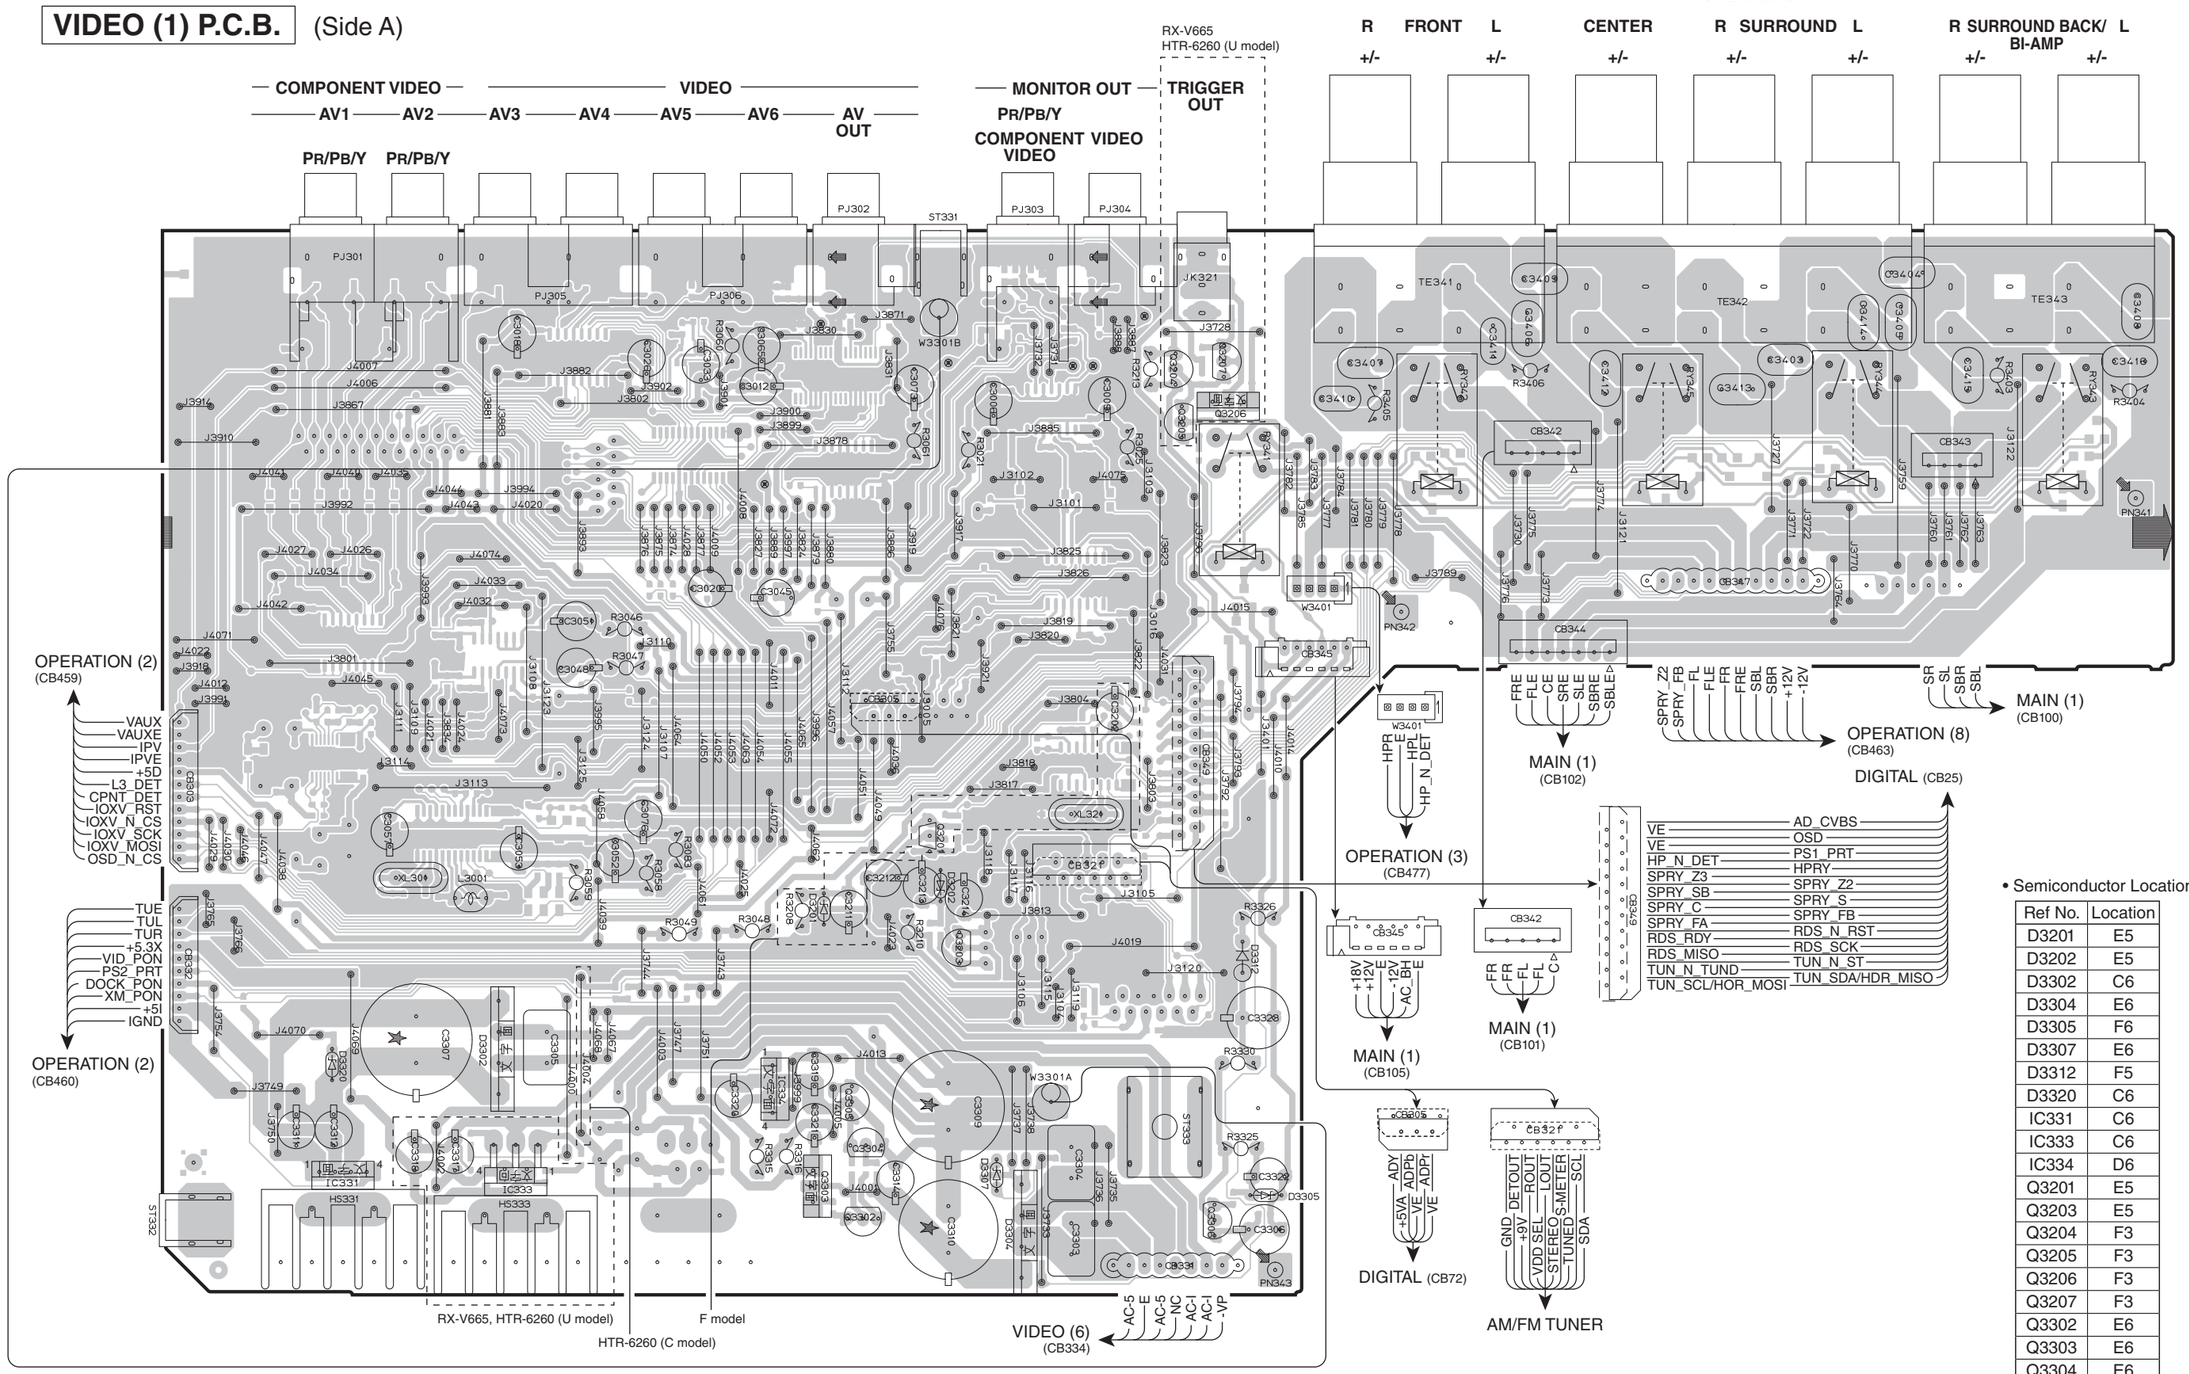

- Semiconductor Location

Ref No.	Location
D3201	E5
D3202	E5
D3302	C6
D3304	E6
D3305	F6
D3307	E6
D3312	F5
D3320	C6
IC331	C6
IC333	C6
IC334	D6
Q3201	E5
Q3203	E5
Q3204	F3
Q3205	F3
Q3206	F3
Q3207	F3
Q3302	E6
Q3303	E6
Q3304	E6
Q3305	E6
Q3306	F6

VIDEO (1) P.C.B. (Side B)

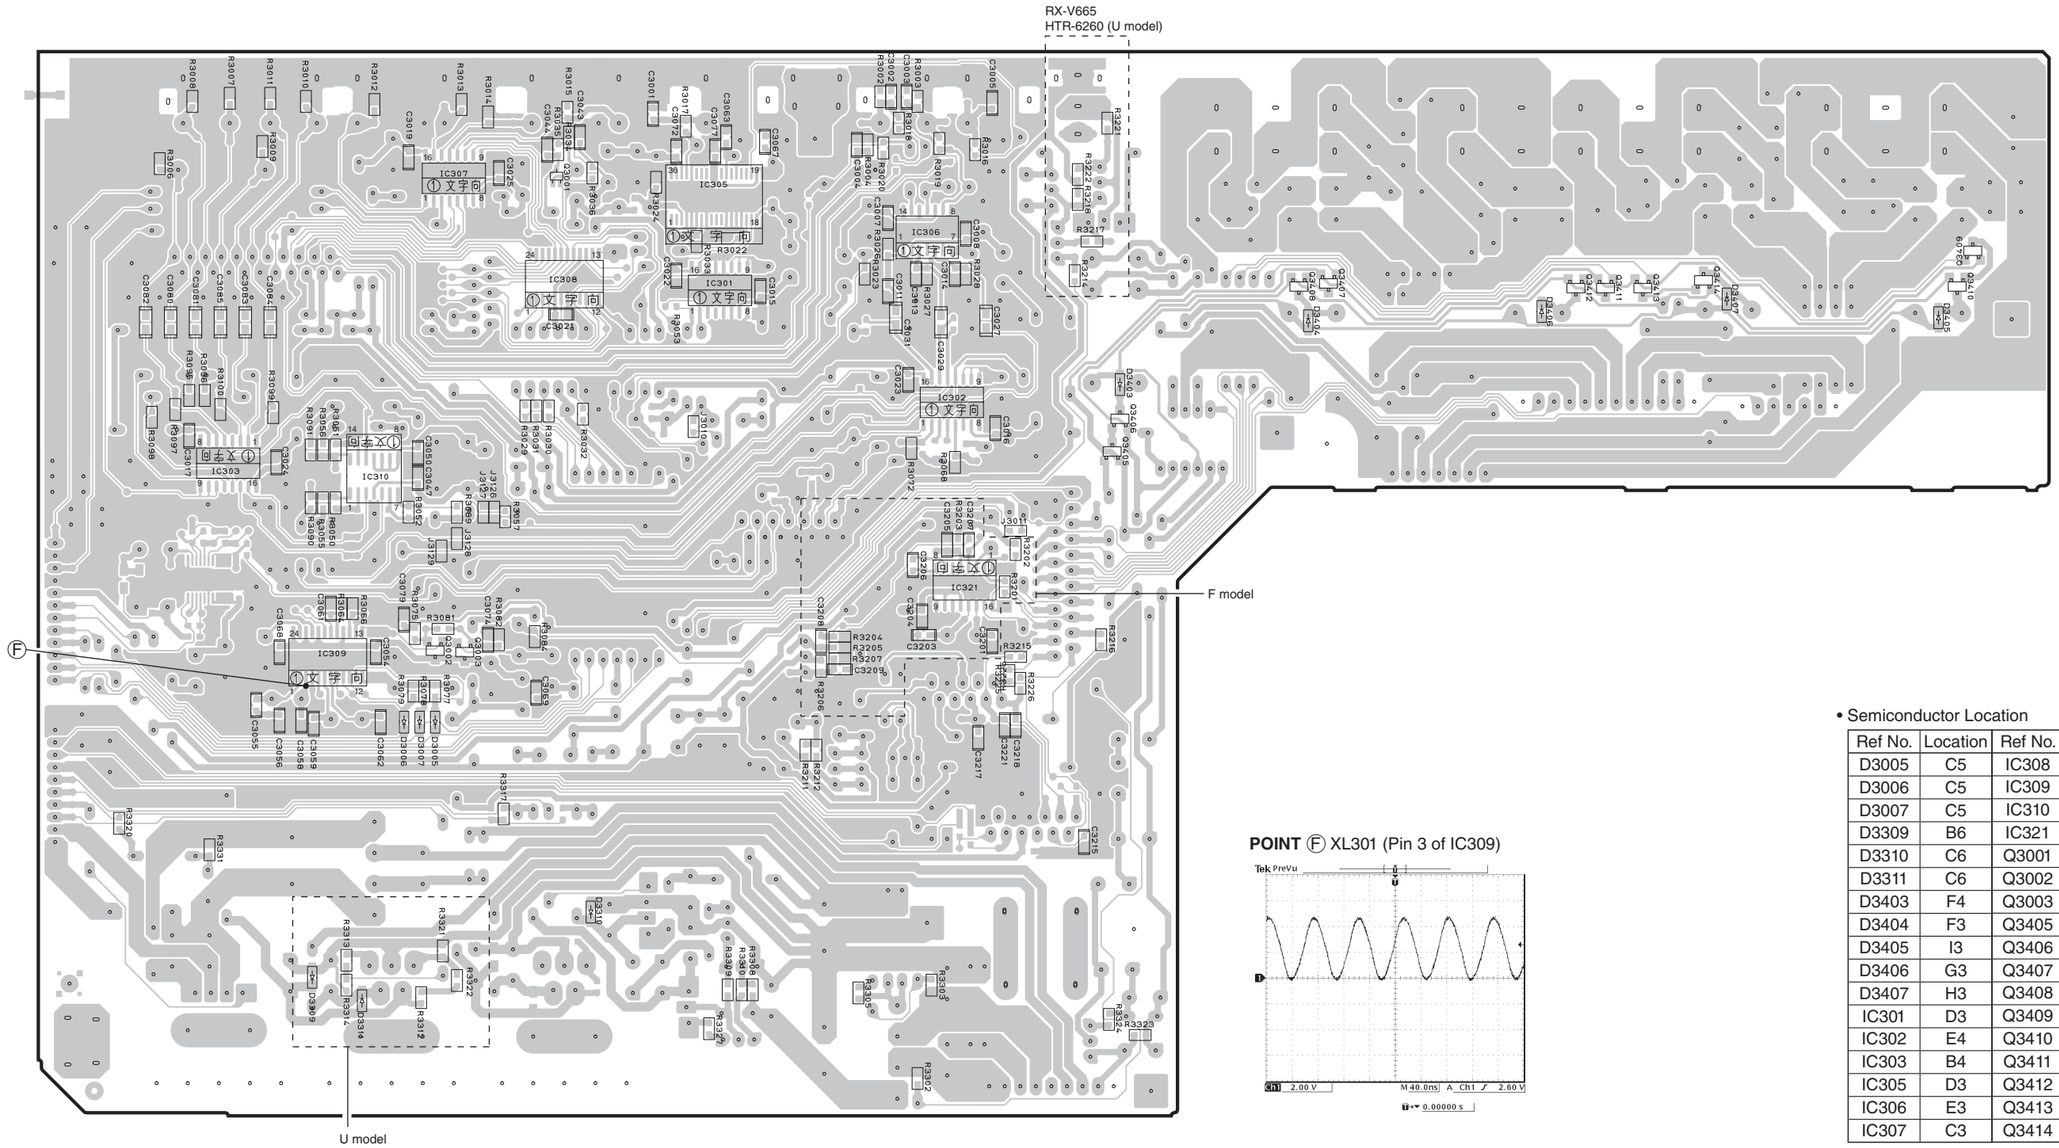

POINT Ⓕ XL301 (Pin 3 of IC309)

• Semiconductor Location

Ref No.	Location	Ref No.	Location
D3005	C5	IC308	C3
D3006	C5	IC309	B5
D3007	C5	IC310	C4
D3309	B6	IC321	E4
D3310	C6	Q3001	C3
D3311	C6	Q3002	C5
D3403	F4	Q3003	C5
D3404	F3	Q3405	F4
D3405	I3	Q3406	F4
D3406	G3	Q3407	G3
D3407	H3	Q3408	F3
IC301	D3	Q3409	I3
IC302	E4	Q3410	I3
IC303	B4	Q3411	H3
IC305	D3	Q3412	H3
IC306	E3	Q3413	H3
IC307	C3	Q3414	H3

CAUTION !

Safety measures

- Some internal parts in this product contain high voltages and are dangerous. Be sure to take safety measures during servicing, such as wearing insulating gloves.
- Note that positions indicated below are dangerous even after the power is turned off because an electric charge remains and a high voltage continues to exist there.
  Before starting any repair work, perform discharge by connecting a discharge resistor (5k-ohms/10W) between terminals at following positions. The time required for discharging is about 30 seconds.
  C3703 on VIDEO (2) P.C.B.

VIDEO (2) P.C.B. (Side A)

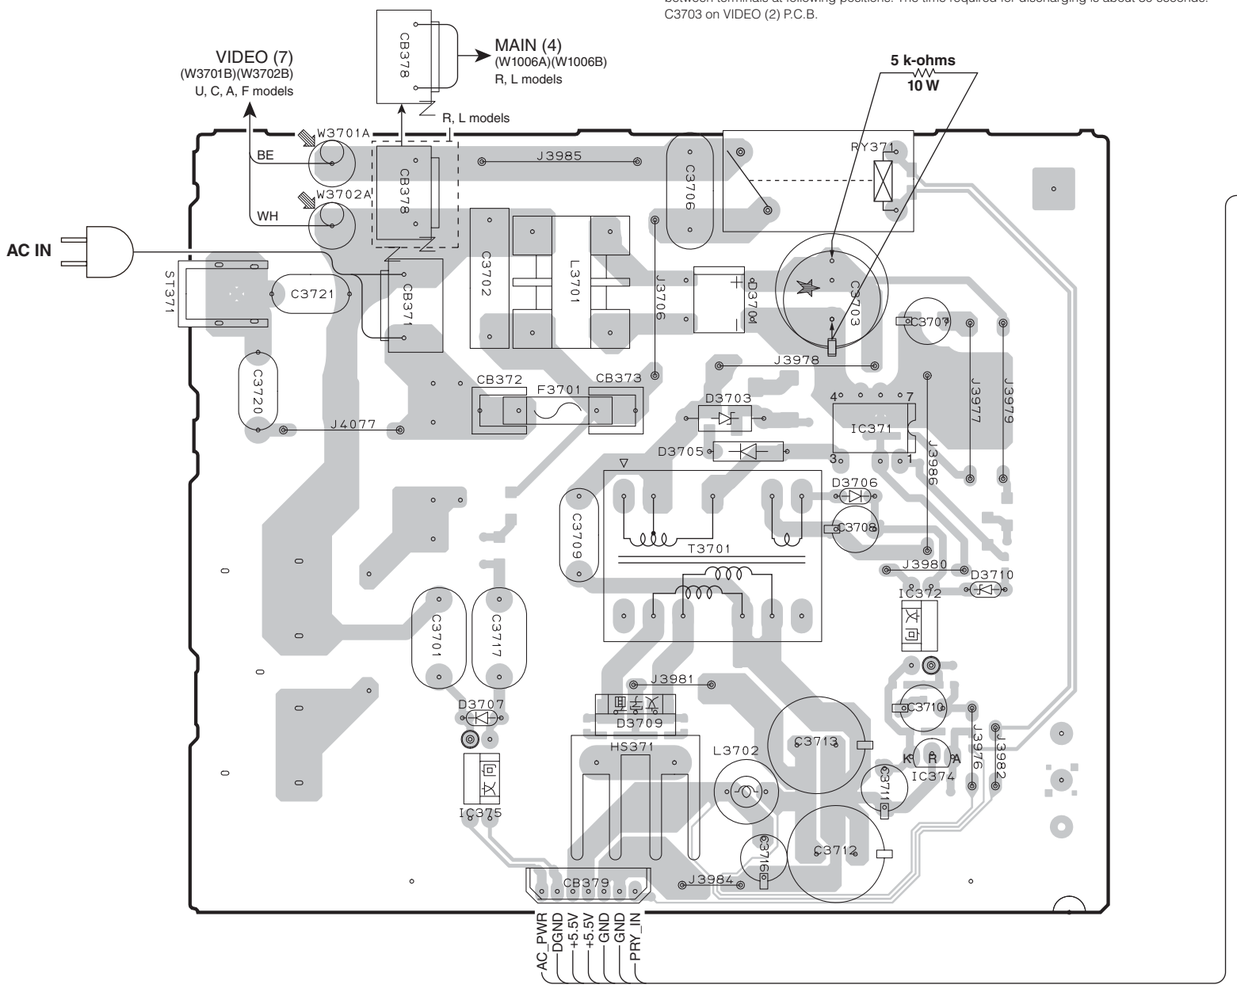

VIDEO (3) P.C.B. (Side A)

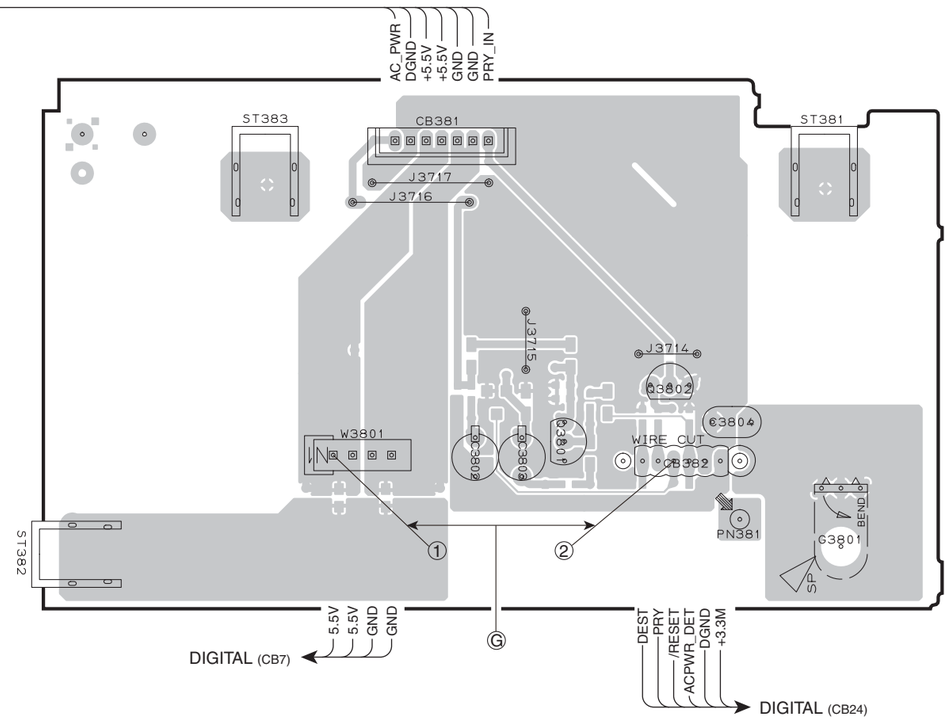

• Semiconductor Location

Ref No.	Location	Ref No.	Location
D3701	D3	IC371	E3
D3703	D3	IC372	E4
D3705	D3	IC374	E5
D3706	E4	IC375	C5
D3707	C4	Q3801	I4
D3709	D4	Q3802	I4
D3710	E4		

POINT Ⓖ ①/ W3801 (+5.5V), ②/ CB382 (/RESET)

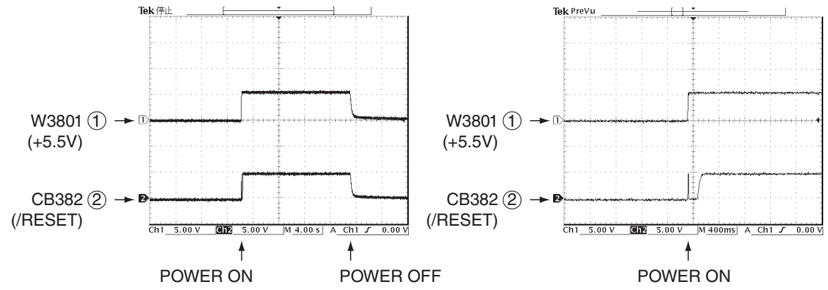

VIDEO (2) P.C.B. (Side B)

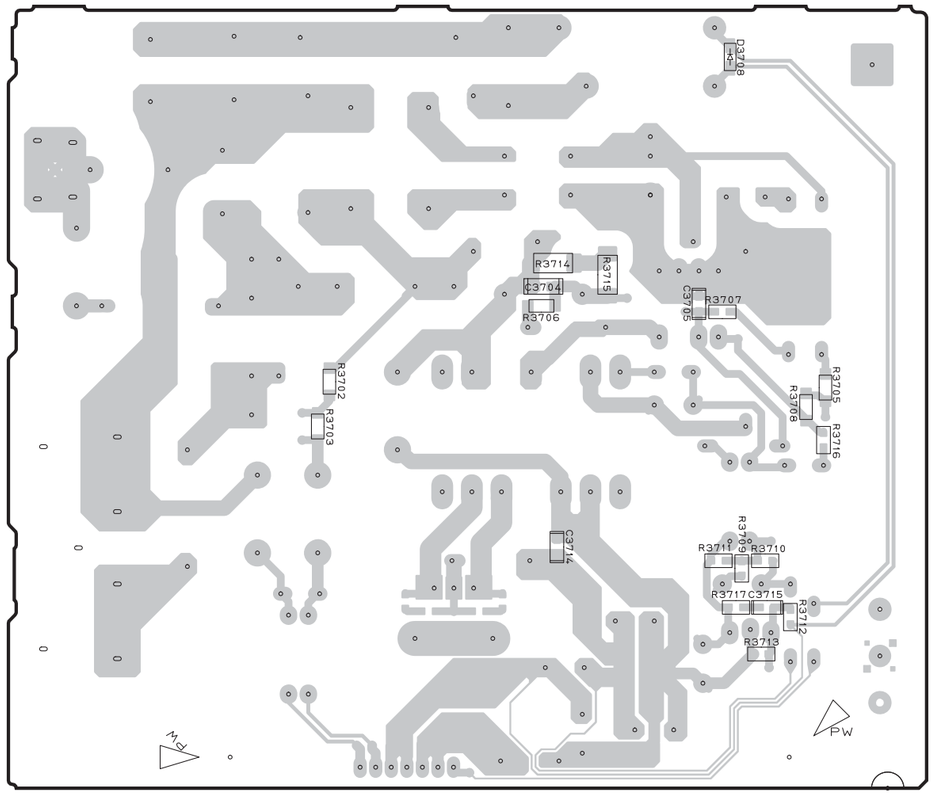

VIDEO (3) P.C.B. (Side B)

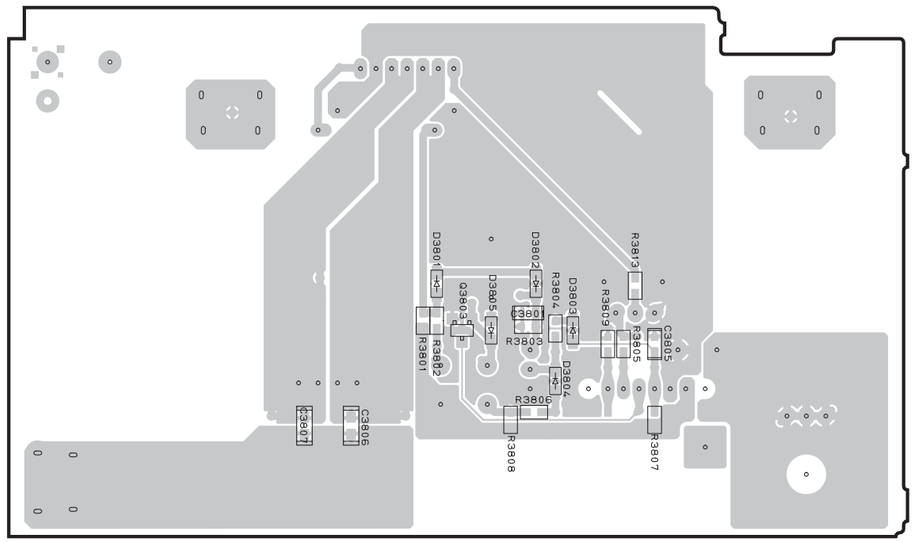

• Semiconductor Location

Ref No.	Location
D3708	D2
D3801	H4
D3802	H4
D3803	H4
D3804	H4
D3805	H4
Q3803	H4

VIDEO (4) P.C.B. (Side A)

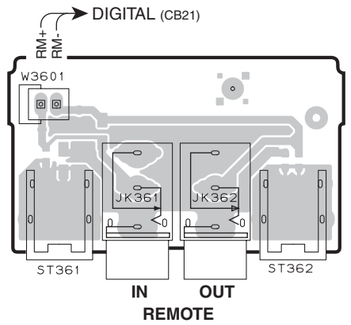

VIDEO (6) P.C.B. (Side A)

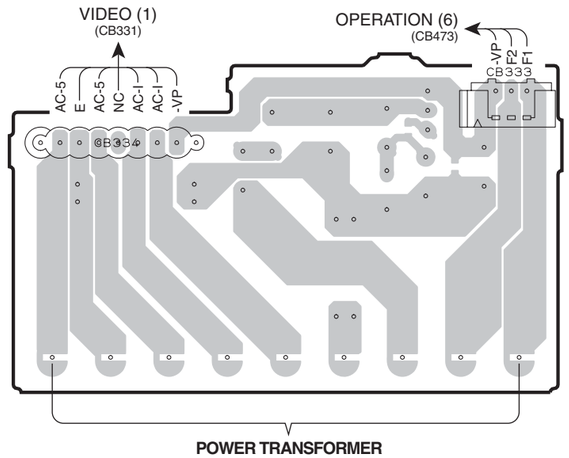

VIDEO (7) P.C.B. (Side A)

U, C, A, F models

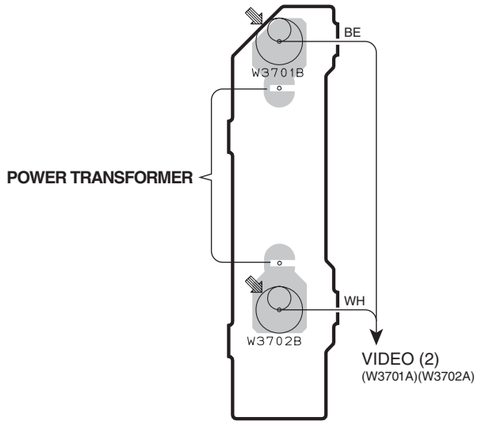

VIDEO (9) P.C.B. (Side A)

F model

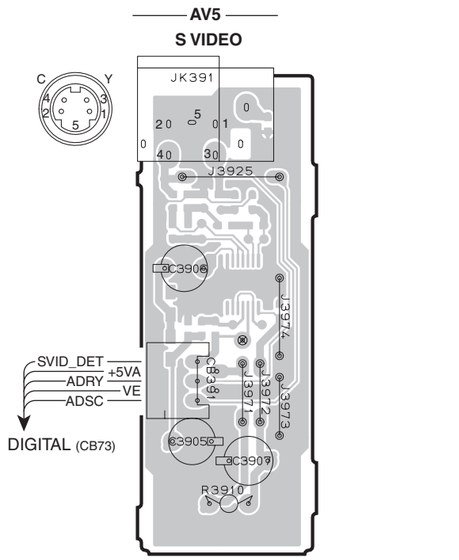

VIDEO (4) P.C.B. (Side B)

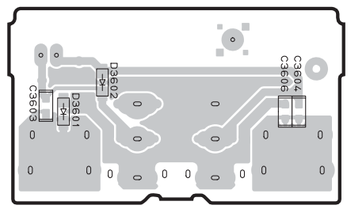

VIDEO (6) P.C.B. (Side B)

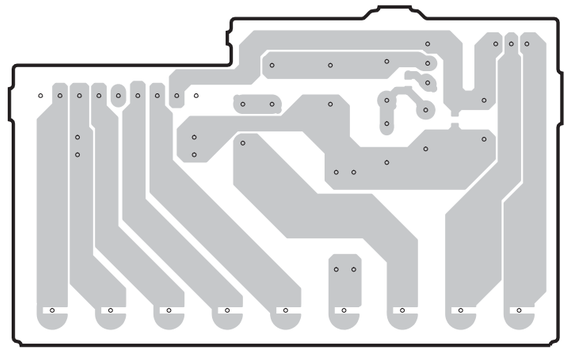

VIDEO (7) P.C.B. (Side B)

U, C, A, F models

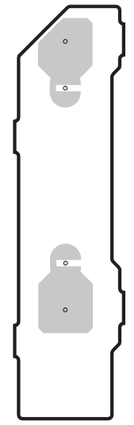

• Semiconductor Location

Ref No.	Location
D3601	A3
D3602	B3
D3901	G6
D3902	G6
IC391	H6

VIDEO (9) P.C.B. (Side B)

F model

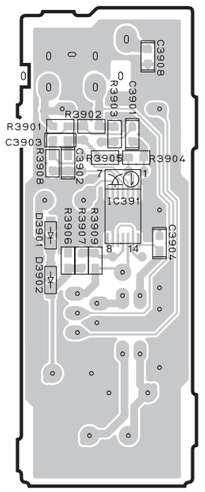

MEMO

MEMO

■ SCHEMATIC DIAGRAMS
DIGITAL 1/5

HDMI

HDMI 4 — HDMI IN-4 SMK

HDMI 3 — HDMI IN-3 SMK

HDMI 2 — HDMI IN-2 SMK

HDMI 1 (BD/DVD) — HDMI IN-1 SMK

HDMI OUT — HDMI OUT SMK

105 ohm

Differential impedence: 105 ohm

HDMI Rx

HDMI Receiver
SII9233ACTU

YA1068O

3.3V-316mA
1.2V-472mA

IC4

Local I2C add
Low =0x60/68
High=0x62/6A

No replacement part available.

HDMI Tx

IC7
SIL9134CTU

HDMI Transmitter

3.3V-5mA
1.8V-276mA

SELECTOR

BUFFER

ANALOG IN

TC74VHC157FT

VCC= 2.0 ~ 5.5V
VIH= > 0.7*VCC
VIL= < 0.3*VCC

/ST SEL I→O
L L Y=A
L H Y=B
H X Hiz

No replacement part available.

(CEC u-com)

To 002.sht

To 003.sht (DSP)

to DIGITAL 3/5

to DIGITAL 2/5

To 005.sht (DVDIEO)

to DIGITAL 5/5

GP10/用途検索
GP0/VCL:VCLKOUT
GP1/SCO:RX.AUSEL
GP2/SCI:HTX.SEL
GP3/VTO:HTOUT
GP1O4 :HDMI.LED
GP1O5 :RSVD
GP6/DL3:CL3
GP7/DR3:DR3

Interchangeable Parts at Manufacture-Stage

Mark	Reference Parts Number	Parts Name
k1	0403-404-600-603-603-702-703	150J66 MAD1151100L
k2	0201-202-401	DTA144EKA KRA104S-RTK/P
k3	0601	DTC144EKA KRC104S-RTK/P
k4	0402-402	AVRL161A1R1NTB SDV1608M100CUS01HT
k5	IC4B	K4B641632H-LC60000 HSAC3B3164E26

POINT Ⓐ XL1 (Pin 5 of IC4)

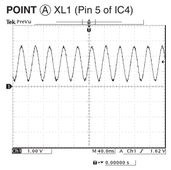

IC2: SN74LVC245APWR
Octal bus transceivers with 3-state outputs

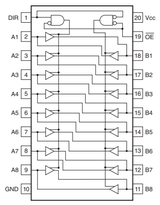

IC3: TC7SH04FU-TE85L
Inverter



A	Y
L	H
H	L

IC4: Sil9233ACTU
HDMI receiver

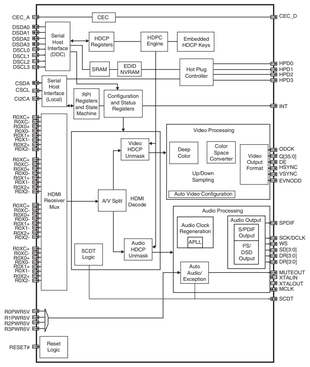

IC5: R1172S121D-E2-F
Voltage regulator

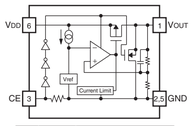

Pin No.	Symbol	Description
1	VOUT	Output Pin of Voltage Regulator
2, 5	GND	Ground Pin
3	CE	Chip Enable Pin
4	NC	No Connection
6	VDD	Input Pin

IC7: Sil9134CTU
HDMI transmitter

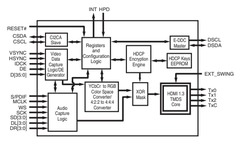

IC8, 9: BD9323EFJ-E2
1 ch step down DC/DC regulator

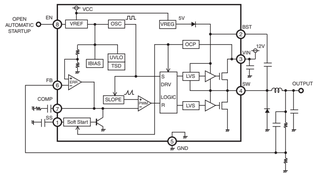

IC10: NJM2867F3-05
Low dropout voltage regulator



IC11: TC74VHC157FT
Quad 2-channel multiplexer



IC13: R1172H501D-T1-F
Voltage regulator

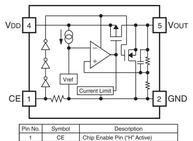

Pin No.	Symbol	Description
1	CE	Chip Enable Pin ("H" Active)
2	GND	Ground Pin
3	NC	No Connection
4	VDD	Input Pin
5	VOUT	Output Pin

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked △ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

To Sub TR

Page 120 [I8]
to VIDEO (3)_W3801

CAPACITOR		
REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	
⊗	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	
◉	CERAMIC TUBULAR CAPACITOR	
◎	POLYESTER FILM CAPACITOR	
○	POLYSTYRENE FILM CAPACITOR	
Ⓘ	MICA CAPACITOR	
Ⓟ	POLYPROPYLENE FILM CAPACITOR	
◉	SEMICONDUCTIVE CERAMIC CAPACITOR	
Ⓢ	POLYPHENYLENE SULFIDE FILM CAPACITOR	

RESISTOR	
REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
▽	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
Ⓟ	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

DIGITAL 2/5

Page 114 E10 to OPERATION (1)_CB401
Page 120 B2 to VIDEO (4)_W3601
Page 116 K7 to MAIN (5)_CB157
Page 117 K8 to MAIN (1)_CB156
Page 120 I9 to VIDEO (3)_CB382
Page 119 G8 to VIDEO (1)_CB349

to OPE(1) | to RMT | to THM | to MAIN | to SUB TR | to VIDEO

MICROPROCESSOR

IC20

Y A 5 3 7 A 0

M 3 0 8 7 8 F J B G P

Blank ALL : X 8 3 2 8 A 0 M 3 0 8 7 8 F J B G P

Written by YES 465-665 : Y A 5 3 7 A 0

Written by YEM 765 : Y A 5 3 8 A 0
1065 : Y A 5 3 9 A 0

to DIGITAL 5/5
to DIGITAL 1/5
to DIGITAL 3/5
to DIGITAL 4/5

IC21: R1172H331D-T1-F
Voltage regulator

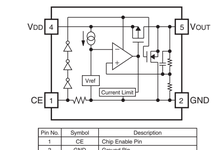

Pin No.	Symbol	Description
1	CE	Chip Enable Pin
2	GND	Ground Pin
3	NC	No Connection
4	VDD	Input Pin
5	VOUT	Output Pin of Voltage Regulator

IC22: LE25LA322M-TLM-E
32 k-bit serial SPI EEPROM

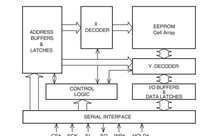

Writing port



IC20: M30878JBGP
Single chip 16/32-bit microprocessor

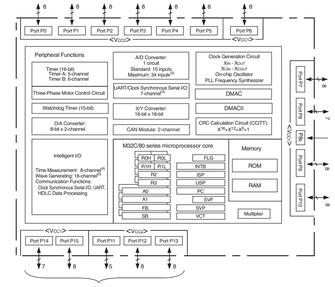

NOTES:
1. Ports P11 to P15 are provided in the 144-pin package only.
2. Included in the 144-pin package only. 26 inputs maximum in the 100-pin package.
3. 6-channel available in the 100-pin package.
4. 4-channel available in the 100-pin package.
5. 10-channel available in the 100-pin package.

POINT Ⓑ XL20 (Pin 20 of IC20)

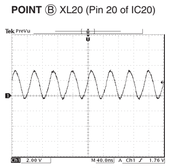

PN20 PN21 PN22

#18-V963750
common for YES&YEM

(#20-WH51520)

デバイスで追加した部品

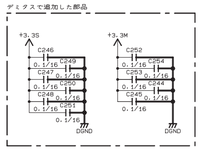

CAPACITOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
◇	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
◉	CERAMIC TUBULAR CAPACITOR
◎	POLYESTER FILM CAPACITOR
○	POLYSTYRENE FILM CAPACITOR
ⓘ	MICA CAPACITOR
ⓟ	POLYPROPYLENE FILM CAPACITOR
ⓒ	SEMICONDUCTIVE CERAMIC CAPACITOR
ⓢ	POLYPHENYLENE SULFIDE FILM CAPACITOR

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
◪	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

Key detection for A/D port
Key input (A/D) pull-up resistance 10 k-ohms

Ohm	0	+ 1.0k	+ 1.0k	+ 1.5k	+ 1.5k	+ 2.2k	+ 3.3k	+ 4.7k	+ 22.0k	+ 33.0k
V	0 – 0.15	0.15 – 0.42	0.43 – 0.70	0.71 – 0.97	0.98 – 1.24	1.25 – 1.53	1.54 – 1.84	1.84 – 2.1	2.34 – 2.55	2.55 – 2.97
A/D value (3.3 V-255)	0 – 11	12 – 32	33-54	55 – 75	76 – 95	96 – 118	119 – 142	143 – 162	181 – 197	198 – 229
KEY1 (133 pin)	SCENE RADIO	SCENE CD	SCENE TV	SCENE BD/DVD	ZONE2 ON/OFF	ZONE2 CONTROL	PROGRAM >	PROGRAM <	MAIN ZONE ON/OFF	TONE CONTROL

Ohm	0	+ 1.0k	+ 1.0k	+ 1.5k	+ 1.8k	+ 2.2k	+ 3.3k	+ 4.7k	+ 6.8k	+ 10.0k	+ 22.0k	+ 68.0k
V	0 – 0.15	0.15 – 0.42	0.43 – 0.70	0.71 – 0.99	1.0 – 1.27	1.28 – 1.56	1.57 – 1.86	1.86 – 2.14	2.14 – 2.4	2.4 – 2.65	2.66 – 2.91	2.92 – 3.17
A/D value (3.3 V-255)	0 – 11	12 – 32	33 – 54	55 – 77	78 – 98	99 – 120	121 – 143	144 – 165	166 – 185	186 – 205	206 – 225	226 – 245
KEY2 (134 pin)	PURE DIRECT	STRAIGHT	INFO	MEMORY	PRESET <	PRESET >	CATEGORY < FM	CATEGORY > AM	TUNING CH <	TUNING CH >	INPUT <	INPUT >

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

DIGITAL 3/5

No replacement part available.

DOCK

to Dock

to DIGITAL 4/5

to 004.sht(AD-DA)

to DIGITAL 1/5

to 001.sht (HDMI)

to DIGITAL 2/5

to 002.sht(u-com)

XM

No replacement part available.

XM DT IC

(U model)

U dest. only

no_use

CONTROL-BUS

AUDIO-BUS

DSP

No replacement part available.

DIR

DIGITAL IN

ANALOG IN

DIGITAL IN

64 M SDRAM

16 M FLASH ROM

to DIGITAL 4/5

to 004.sht(AD-DA)

to DIGITAL 4/5

to 001.sht(HDMI)

to DIGITAL 1/5

IC41: LC89058WD-E
Digital audio interface receiver

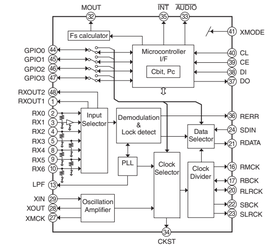

IC43: NJM4565M
Dual operational amplifier

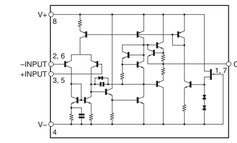

IC44: D70YE101BRFP266
Floating-point digital signal processors

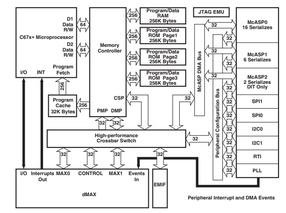

IC47: R1172S121D-E2-F
Voltage regulator

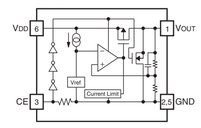

Pin No.	Symbol	Description
1	VOUT	Output Pin of Voltage Regulator
2, 5	GND	Ground Pin
3	CE	Chip Enable Pin
4	NC	No Connection
6	VDD	Input Pin

IC48: K4S641632H-LC60000
64 M synchronous DRAM

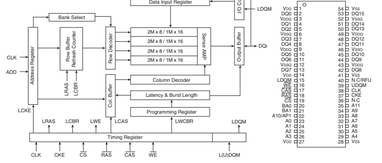

IC46: TC74VHC157FT
Quad 2-channel multiplexer



IC49: MX29LV160DBTI-70G
16M-bit 3V supply flash memory

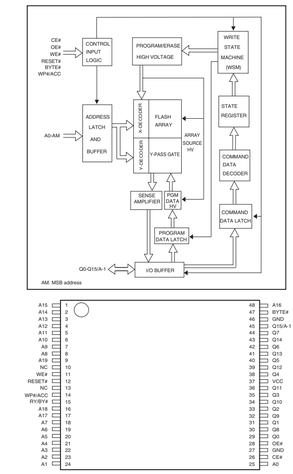

IC50: TC7SH08FU
2-input AND gate



POINT Ⓒ XL41 (Pin 28 of IC40)

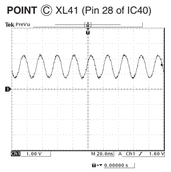

POINT Ⓓ XL42 (Pin 29 of IC41)

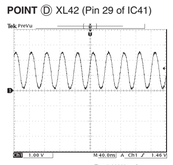

CAPACITOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
⊗	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
✱	CERAMIC TUBULAR CAPACITOR
◎	POLYESTER FILM CAPACITOR
○	POLYSTYRENE FILM CAPACITOR
Ⓘ	MICA CAPACITOR
Ⓟ	POLYPROPYLENE FILM CAPACITOR
●	SEMICONDUCTIVE CERAMIC CAPACITOR
Ⓢ	POLYPHENYLENE SULFIDE FILM CAPACITOR

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
☑	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
▯	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

NOTICE (model)
(J)..... JAPAN
(U)..... U.S.A
(C)..... CANADA
(R)..... GENERAL
(T)..... CHINA
(K)..... KOREA
(A)..... AUSTRALIA
(B)..... BRITISH
(G)..... EUROPE
(L)..... SINGAPORE
(E)..... SOUTH EUROPE
(V)..... TAIWAN
(F)..... RUSSIAN

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

DIGITAL 4/5

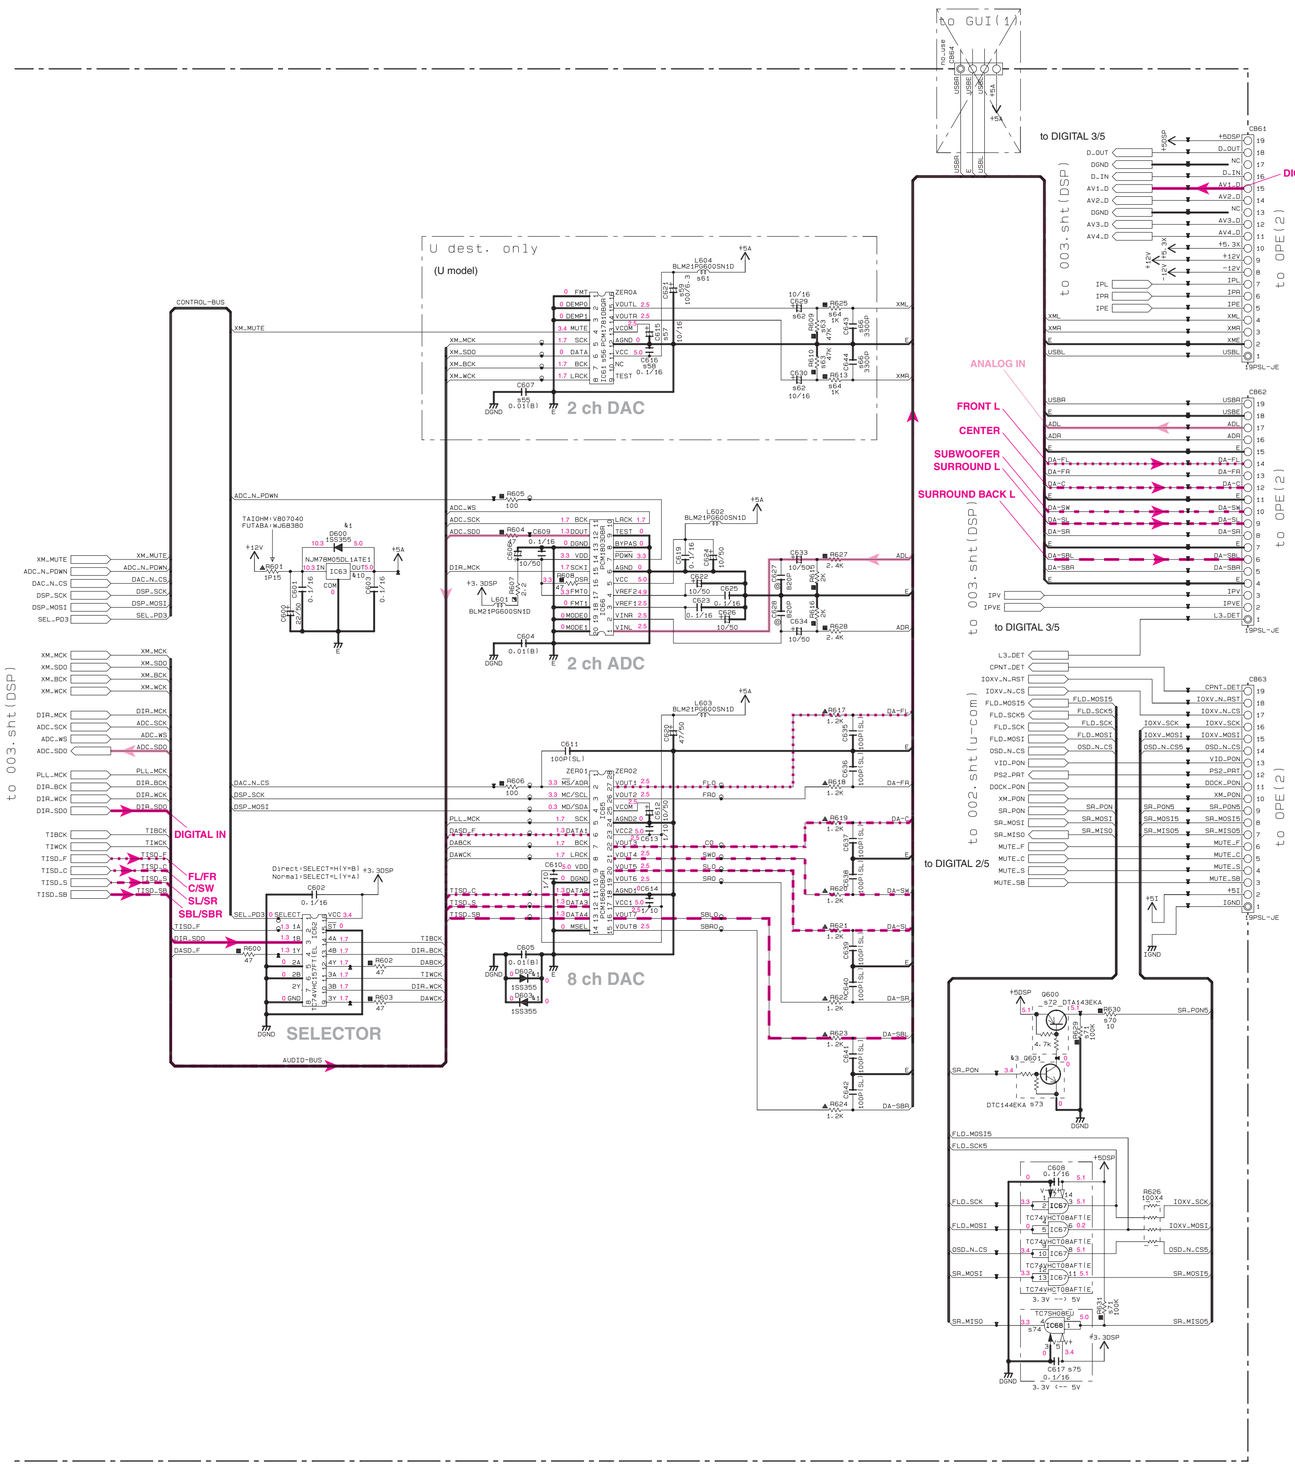

Page 115 B3
to OPERATION (2)_CB452

Page 115 D3
to OPERATION (2)_CB455

Page 115 E3
to OPERATION (2)_CB458

```
s1 ~19:002.sht(u-com)
s20~54:003.sht(DSP)
s55~89:004.sht(AD-DA)
s90~99:005.sht(DVIDEO)
```

Destination Part List

sXX	LOC	U	CRAL	GEF
s17	R246 R245 R250 R244	RD35510 100	X	X
s18	R242 R241 R243 R240	X	X	RD35510 100
s20	CB40	WJ45870 CAM-DB6044024B	X	X
s21	ST41	WJ56800	X	X
s22	D400 D401 D402	WE67480 AVRL161A1R1NTB	X	X
s23	R520 R519	RD35410 10	X	X
s24	C421 C443 C444 C408 C427 C406 C405 C409	US03510 0.1/16	X	X
s25	R424 R421 R403 R407 R406 R419	RD35510 100	X	X
s26	R409 R408	RD35610 1K	X	X
s27	R404	RD35633 3.3K	X	X
s28	XL41	WH45530 45.1584MHZ	X	X
s29	C404 C407	US06110 10PICH1	X	X
s30	R411 R412	RD35647 4.7K	X	X
s31	C401 C400	WD75830 10/10	X	X
s32	IC40	YA07040 S2058E-01-TR	X	X
s33	R426	RD35447 47	X	X
s34	R446 R433 R436 R447 R458 R457 R451	RD35722 22K	X	X
s35	L403 L400	V244990 BLM21PG600SN1D	X	X
s48	R420	X	RD35810 100K	RD35810 100K
s55	C607	US06410 0.01(B)	X	X
s56	IC61	X7375A0 PCM1781DBQR	X	X
s57	C615	UR23710 10/16	X	X
s58	C616	US13510 0.1/16	X	X
s59	C621	UR21810 100/6.3	X	X
s61	L604	V244990 BLM21PG600SN1D	X	X
s62	C629 C630	UR83710 10/16	X	X
s63	R609 R610	RD35747 47K	X	X
s64	R625 R613	RD35610 1K	X	X
s66	C643 C644	US66333 3300P	X	X
s70	R630	RD35410 10	X	X
s71	R629 R631	RD35810 100K	X	X
s72	Q600	YV65520 DTA143EKA	X	X
s73	Q601	YV65570 DTC144EKA	X	X
s74	IC68	XR680A0 TC7SH08FU	X	X
s75	C617	US13510 0.1/16	X	X
s90	CB73	X	X	YQ04410 52044
s91	R703 J707 R705	X	X	RD35000 0
s92	R709 R707	RD35000 0	RD35000 0	X
s93	R808	RD35810 100K	RD35810 100K	X

CAPACITOR

REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	‖
⊗	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	‖
◉	CERAMIC TUBULAR CAPACITOR	
◎	POLYESTER FILM CAPACITOR	
○	POLYSTYRENE FILM CAPACITOR	
Ⓘ	MICA CAPACITOR	
Ⓟ	POLYPROPYLENE FILM CAPACITOR	
◍	SEMICONDUCTIVE CERAMIC CAPACITOR	
Ⓖ	POLYPHENYLENE SULFIDE FILM CAPACITOR	‖

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
⊿	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
⚠	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
▨	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

IC61: PCM1781DBQR
Audio digital-to-analog converter

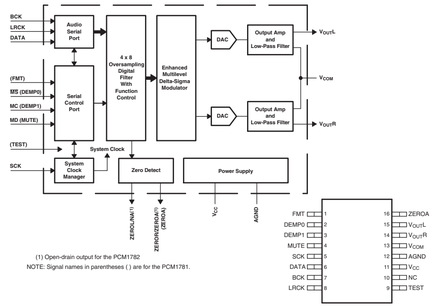

(1) Open-drain output for the PCM1782
NOTE: Signal names in parentheses ( ) are for the PCM1781.

IC62: TC74VHC157FT
Quad 2-channel multiplexer

IC63: NJM78M05DL1A (TE1)
Voltage regulator

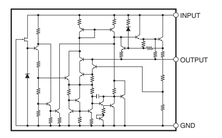

IC65: PCM1680DBQR
Audio digital-to-analog converter

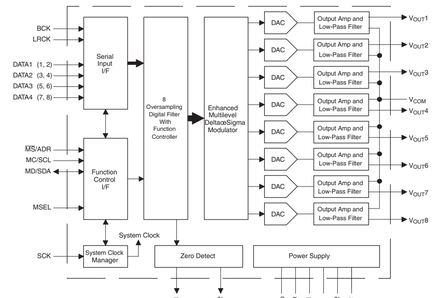

IC66: PCM1803DBR
Stereo A/D converter

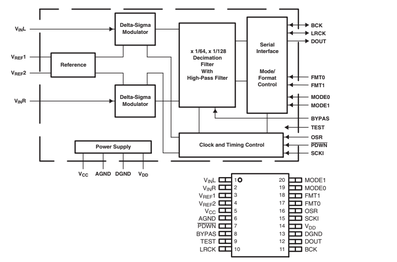

IC67: TC74VHCT08AFT
Quad 2-input AND gate



IC68: TC7SH08FU
2-input AND gate



★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

DIGITAL 5/5

Page 120 B3
to VIDEO (9)_CB391
(F model)

Page 118 K9
to VIDEO (1)_CB305

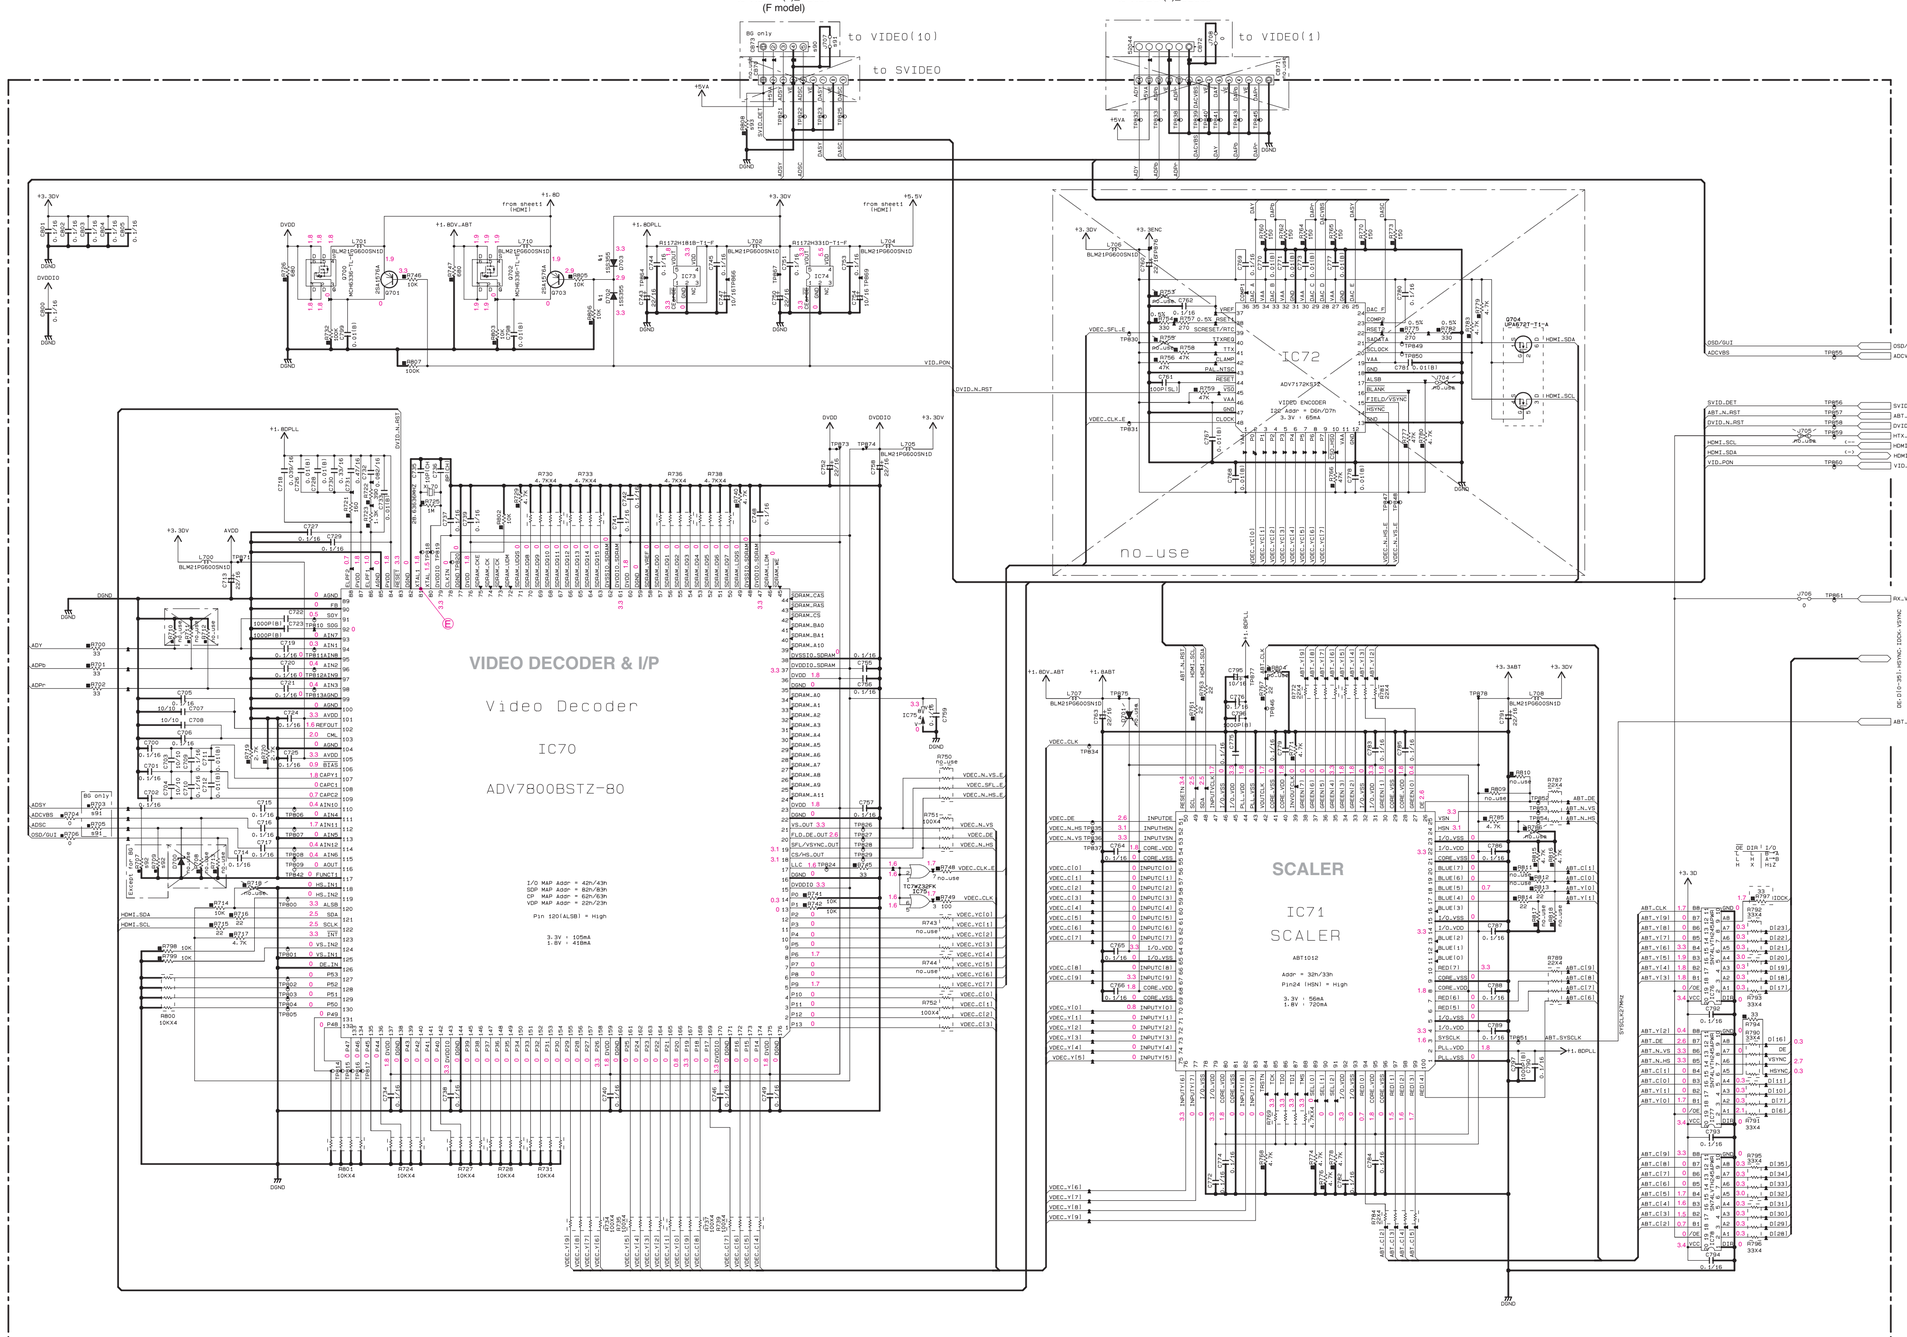

IC76-78: SN74LVTH245APW
3.3 V ABT octal bus transceivers with 3-state outputs



IC75: TC7WZ32FK (TE85L, F)
Dual 2-input OR gate



IC74: R1172H331D-T1-F
Voltage regulator



Pin No.	Symbol	Description
1	CE	Chip Enable Pin
2	GND	Ground Pin
3	NC	No Connection
4	VDD	Input Pin
5	VOUT	Output Pin of Voltage Regulator

IC73: R1172H181B-T1-F
Voltage regulator



Pin No.	Symbol	Description
1	CE	Chip Enable Pin
2	GND	Ground Pin
3	NC	No Connection
4	VDD	Input Pin
5	VOUT	Output Pin of Voltage Regulator

IC71: ABT1012Q100
Advanced video processor device

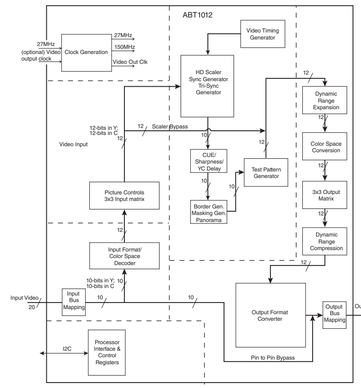

IC70: ADV7800BSTZ-80
10-bit, SDTV/HDTV 3D comb filter, video decoder and graphics digitizer

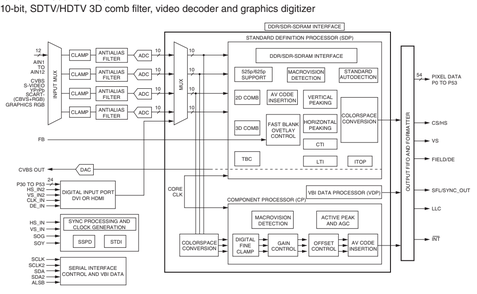

POINT Ⓔ XL70 (Pin 81 of IC70)

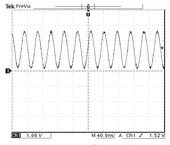

DVIDEO
CB/IC/XL:70 -84
OTHER :700-849

DIGITAL(5)

CAPACITOR

REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	‖
⊗	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	‖
◉	CERAMIC TUBULAR CAPACITOR	
ⓜ	POLYESTER FILM CAPACITOR	
○	POLYSTYRENE FILM CAPACITOR	
Ⓘ	MICA CAPACITOR	
Ⓟ	POLYPROPYLENE FILM CAPACITOR	
ⓒ	SEMICONDUCTIVE CERAMIC CAPACITOR	
Ⓢ	POLYPHENYLENE SULFIDE FILM CAPACITOR	

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
☑	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
⚠	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
▨	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

OPERATION 1/2

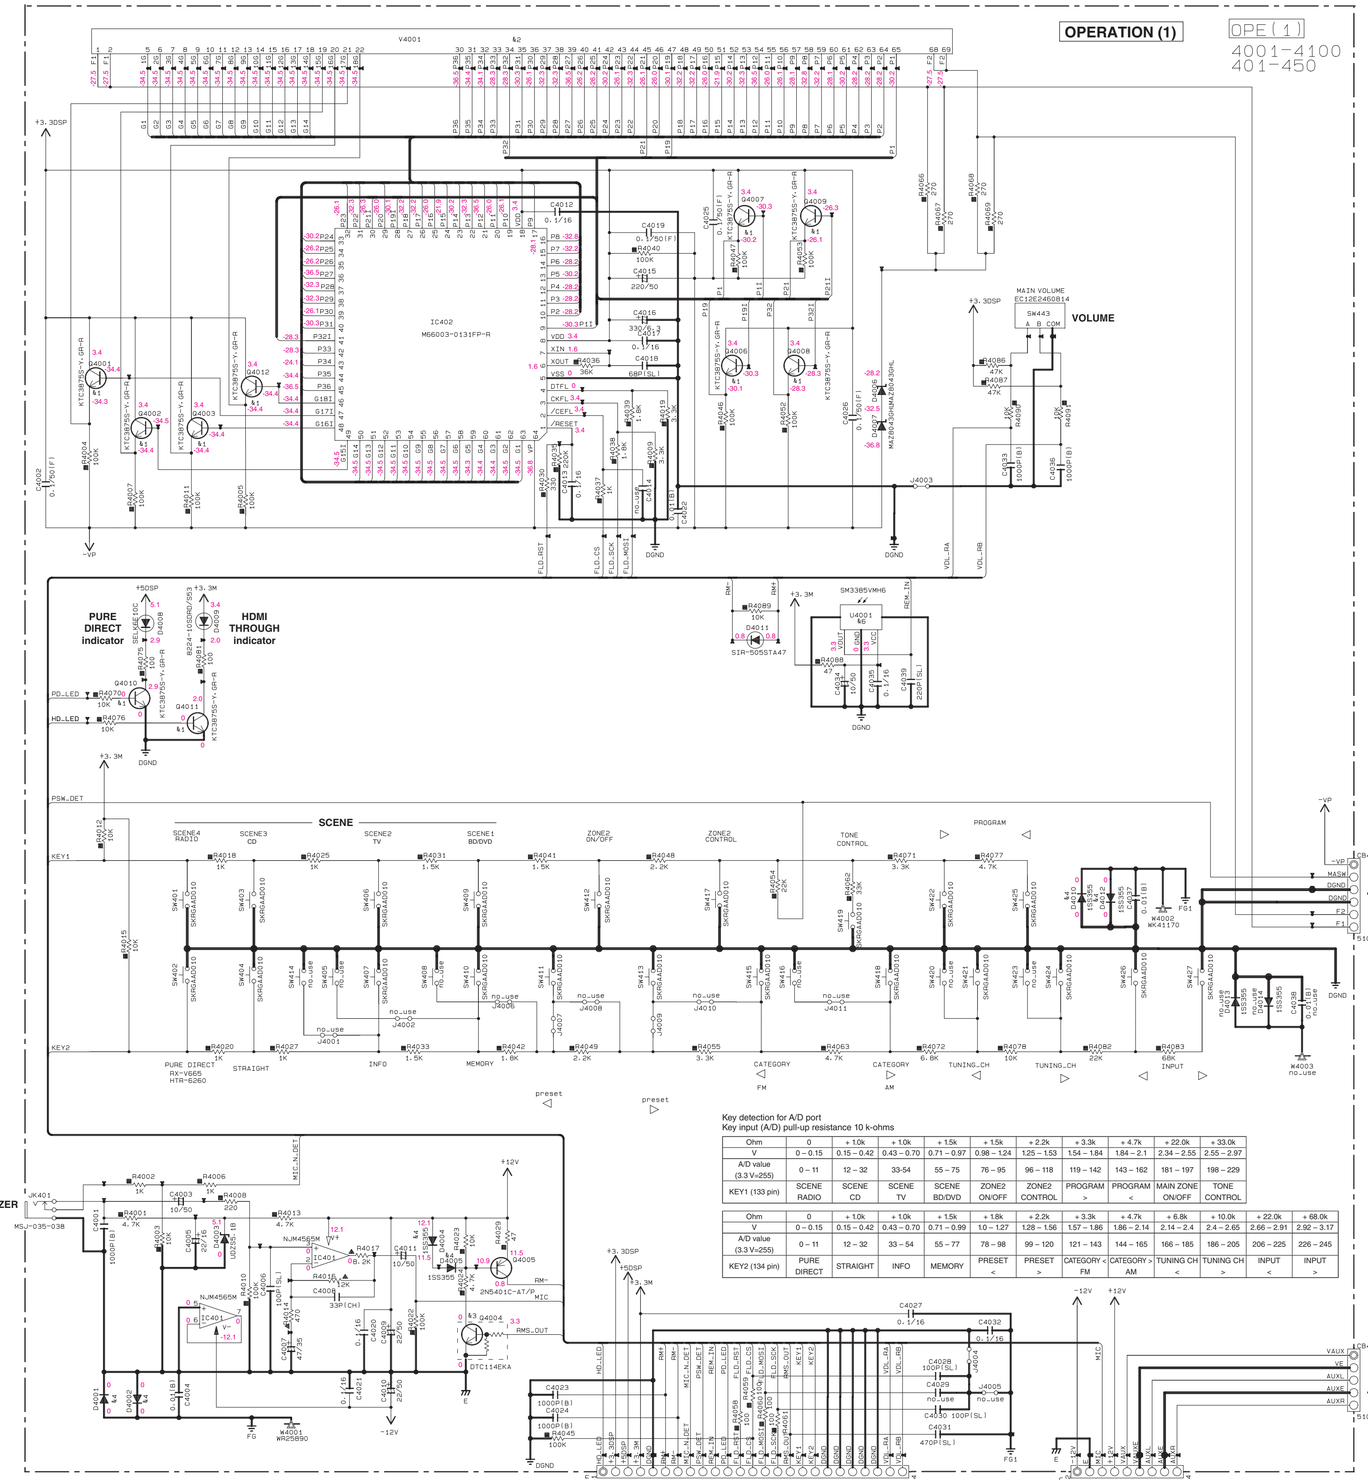

Ohm	0	+ 1.0k	+ 1.0k	+ 1.5k	+ 1.5k	+ 2.2k	+ 3.3k	+ 4.7k	+ 22.0k	+ 33.0k
V	0 – 0.15	0.15 – 0.42	0.43 – 0.70	0.71 – 0.97	0.98 – 1.24	1.25 – 1.53	1.54 – 1.84	1.84 – 2.1	2.34 – 2.55	2.55 – 2.97
A/D value (3.3 V=255)	0 – 11	12 – 32	33-54	55 – 75	76 – 95	96 – 118	119 – 142	143 – 162	181 – 197	198 – 229
KEY1 (133 pin)	SCENE RADIO	SCENE CD	SCENE TV	SCENE BD/DVD	ZONE2 ON/OFF	ZONE2 CONTROL	PROGRAM >	PROGRAM <	MAIN ZONE ON/OFF	TONE CONTROL

Ohm	0	+ 1.0k	+ 1.0k	+ 1.5k	+ 1.8k	+ 2.2k	+ 3.3k	+ 4.7k	+ 6.8k	+ 10.0k	+ 22.0k	+ 68.0k
V	0 – 0.15	0.15 – 0.42	0.43 – 0.70	0.71 – 0.99	1.0 – 1.27	1.28 – 1.56	1.57 – 1.86	1.86 – 2.14	2.14 – 2.4	2.4 – 2.65	2.66 – 2.91	2.92 – 3.17
A/D value (3.3 V=255)	0 – 11	12 – 32	33 – 54	55 – 77	78 – 98	99 – 120	121 – 143	144 – 165	166 – 185	186 – 205	206 – 225	226 – 245
KEY2 (134 pin)	PURE DIRECT	STRAIGHT	INFO	MEMORY	PRESET <	PRESET >	CATEGORY < FM	CATEGORY > AM	TUNING CH <	TUNING CH >	INPUT <	INPUT >

Interchangeable Parts at Manufacture-Stage

Mark	Reference Parts Number	Parts Name
&1	Q4001-4003, 4006-4012	KTC3875S-Y,GR-RTK/P C2412K(D/R/S)
&2	V4001	18-MT-DSGNK HNA-18MM01T
&3	Q4004, 4301	DTC114EKA KRC102S-RTK/P
&4	D4001, 4002, 4004, 4005, 4010, 4012, 4303, 4401, 4402, 4406, 4407, 4409, 4411	1SS355 MA2J111OGL
&5	Q4302	DTA114EKA KRA102S-RTK/P
&6	U4001	SM3385VMH6 RPM7238-H9

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
⊘	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
⚠	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

CAPACITOR

REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	‖
⊘	TANTALUM CAPACITOR	‖
NO MARK	CERAMIC CAPACITOR	‖
◉	POLYESTER FILM CAPACITOR	‖
○	POLYSTYRENE FILM CAPACITOR	‖
ⓘ	MICA CAPACITOR	‖
ⓟ	POLYPROPYLENE FILM CAPACITOR	‖
◍	SEMICONDUCTIVE CERAMIC CAPACITOR	‖
ⓢ	POLYPHENYLENE SULFIDE FILM CAPACITOR	‖

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(A)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

IC401: NJM4565M
Dual operational amplifier

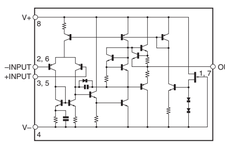

IC402: M66003-0131FP-R
18 digit 5 x 7 segment VFD controller/driver

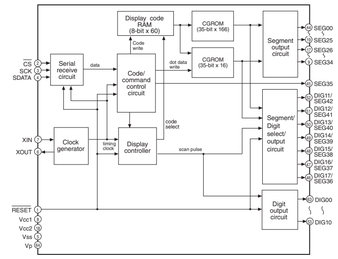

OPERATION (3)

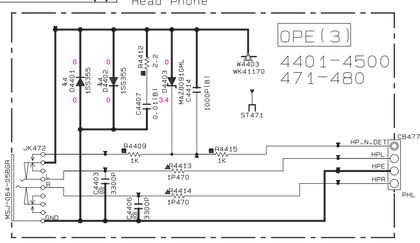

Page 119 B4
to VIDEO (1)_W3401

OPERATION (7)

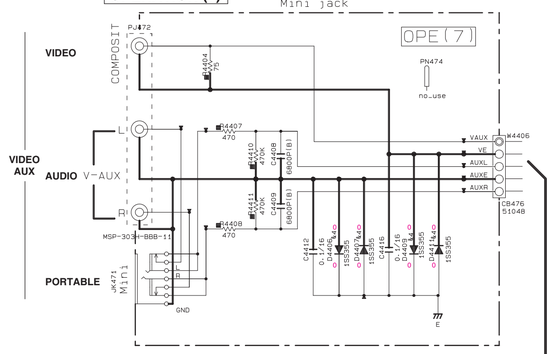

OPERATION (6)

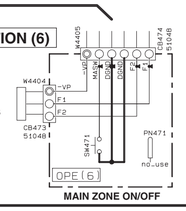

Page 119 N8
to VIDEO (6)_CB333

OPERATION (10)

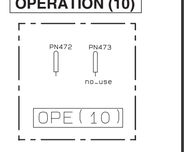

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

OPERATION 2/2

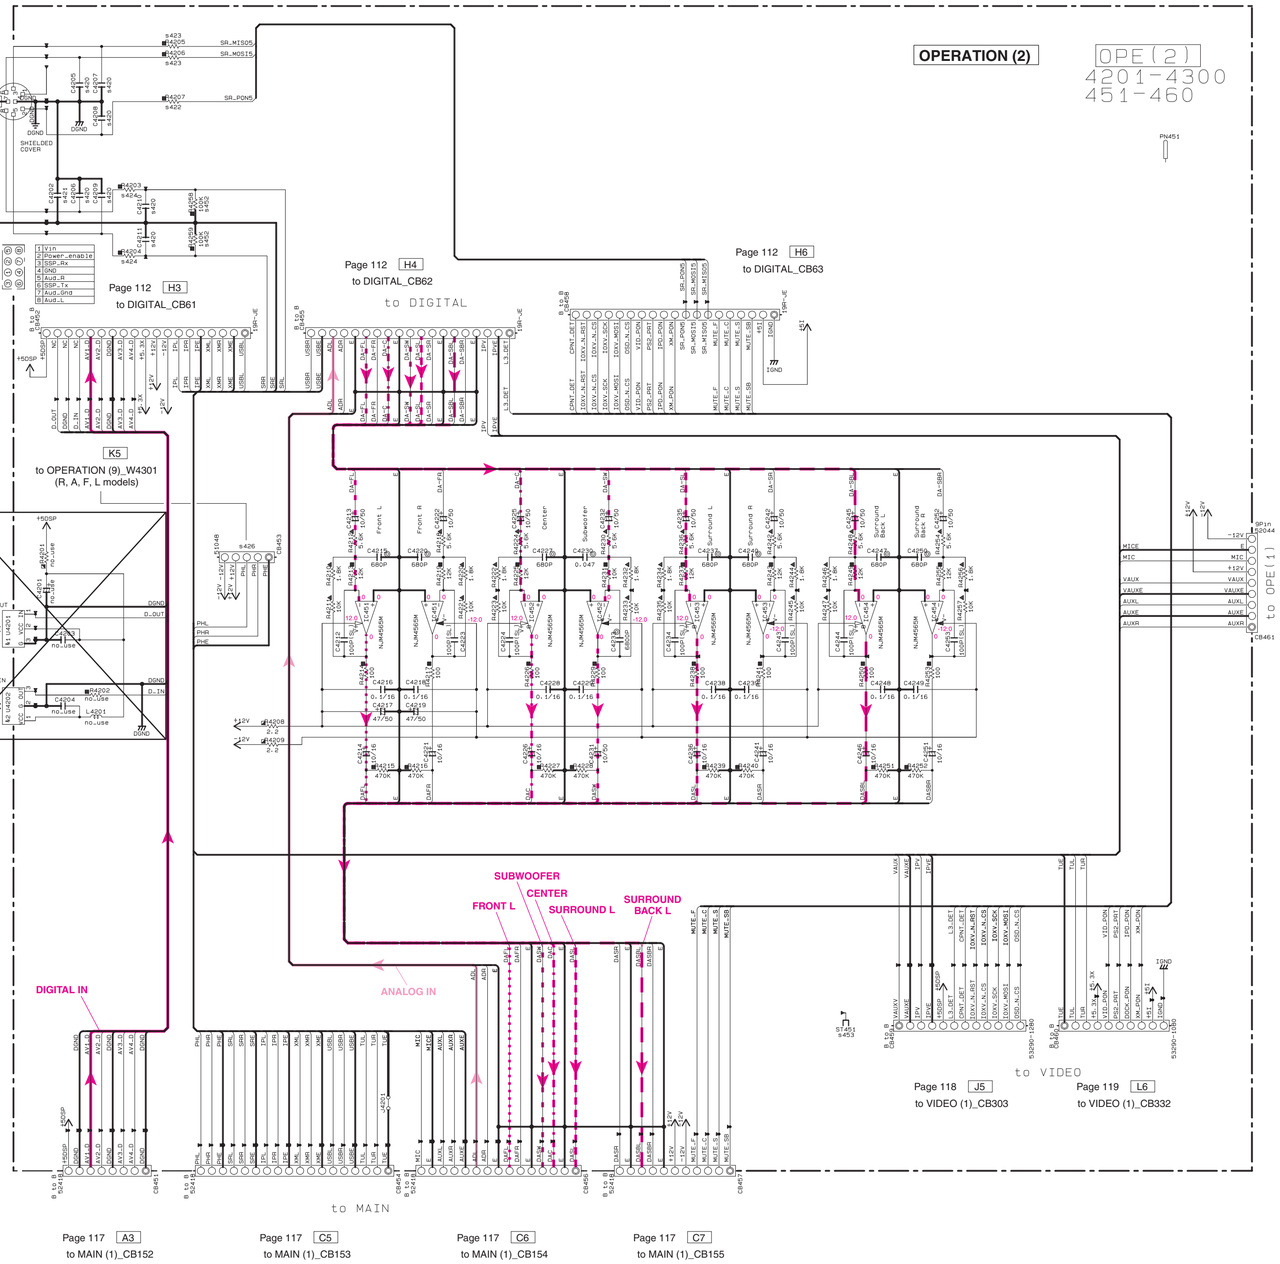

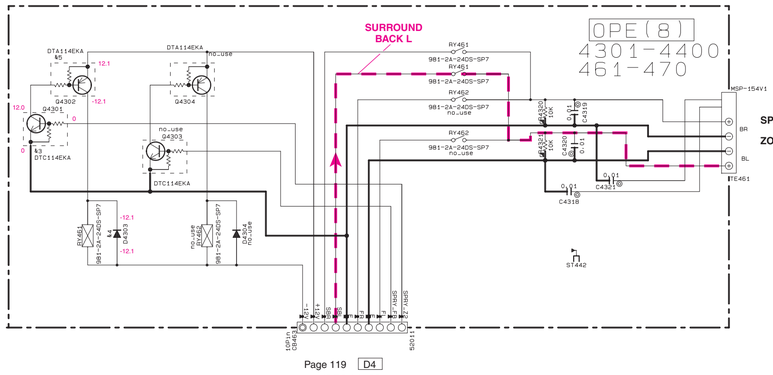

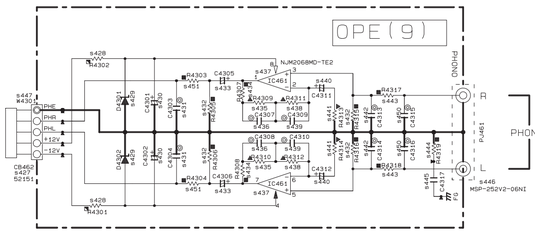

Destination Part List

sXX	LOC	U	C	R	AGLEF
s420	C4207 C4208 C4209 C4205 C4206 C4211 C4210	US06222 220P(SL)	X	X	X
s421	C4202	US06310 1000P(B)	X	X	X
s422	R4207	RD35410 10	X	X	X
s423	R4206 R4205	RD35433 33	X	X	X
s424	R4204 R4203	RD35547 470	X	X	X
s425	JK451	VV26950 MD-S8130-90	X	X	X
s426	CB453	X	X	VI87830 51048	VI87830 51048
s427	CB462	X	X	VK02640 52151	VK02640 52151
s428	R4302 R4301	X	X	HV75547 470	HV75547 470
s429	D4302 D4301	X	X	VV65930 RL27.58	VV65930 RL27.58
s430	C4302 C4301	X	X	UR26747 47/50	UR26747 47/50
s431	C4303 C4304	X	X	WJ60370 1000P	WJ60370 1000P
s432	R4305 R4306 R4316 R4315	X	X	RD35747 47K	RD35747 47K
s433	C4306 C4305	X	X	UR26710 10/50	UR26710 10/50
s434	R4308 R4307	X	X	RD35510 100	RD35510 100
s435	R4309 R4310	X	X	RF35810 100K	RF35810 100K

Destination Part List

sXX	LOC	U	C	R	AGLEF
s436	C4308 C4307	X	X	WJ60560 0.033	WJ60560 0.033
s437	IC461	X	X	X3505A0 NJM2068MD-TE2	X3505A0 NJM2068MD-TE2
s438	R4312 R4311	X	X	RF35682 8.2K	RF35682 8.2K
s439	C4309 C4310	X	X	WJ60490 910P	WJ60490 910P
s440	C4311 C4312	X	X	UR21822 220/6.3	UR21822 220/6.3
s441	R4313 R4314	X	X	RF35518 180	RF35518 180
s442	C4314 C4313	X	X	WJ60310 220P	WJ60310 220P
s443	R4318 R4317	X	X	RD35447 47	RD35622 2.2K
s444	R4319	X	X	RD35322 2.2	RD35322 2.2
s445	C4317	X	X	US06410 0.011B	US06410 0.011B
s446	PJ461	X	X	WD59960 MSP-252V2-06NI	WD59960 MSP-252V2-06NI
s447	W4301	X	X	MF00514 -	MF00514 -
s450	C4315 C4316	X	X	X -	WJ60310 220P
s451	R4303 R4304	X	X	RD35547 470	RD35547 470
s452	R4259 R4258	RD35810 100K	X	X -	X -
s453	S1451	X	WA78960 -	WA78960 -	WA78960 -

CAPACITOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
⊗	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
◉	CERAMIC TUBULAR CAPACITOR
Ⓜ	POLYESTER FILM CAPACITOR
○	POLYSTYRENE FILM CAPACITOR
Ⓘ	MICA CAPACITOR
Ⓟ	POLYPROPYLENE FILM CAPACITOR
◉	SEMICONDUCTIVE CERAMIC CAPACITOR
Ⓢ	POLYPHENYLENE SULFIDE FILM CAPACITOR

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
☑	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
☒	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

NOTICE (model)
(J)..... JAPAN
(U)..... U.S.A
(C)..... CANADA
(R)..... GENERAL
(T)..... CHINA
(K)..... KOREA
(A)..... AUSTRALIA
(B)..... BRITISH
(G)..... EUROPE
(L)..... SINGAPORE
(E)..... SOUTH EUROPE
(V)..... TAIWAN
(F)..... RUSSIAN

IC451-454: NJM4565M
Dual operational amplifier

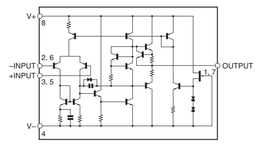

IC461: NJM2068MD-TE2
Dual operational amplifier



★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

MAIN 1/2

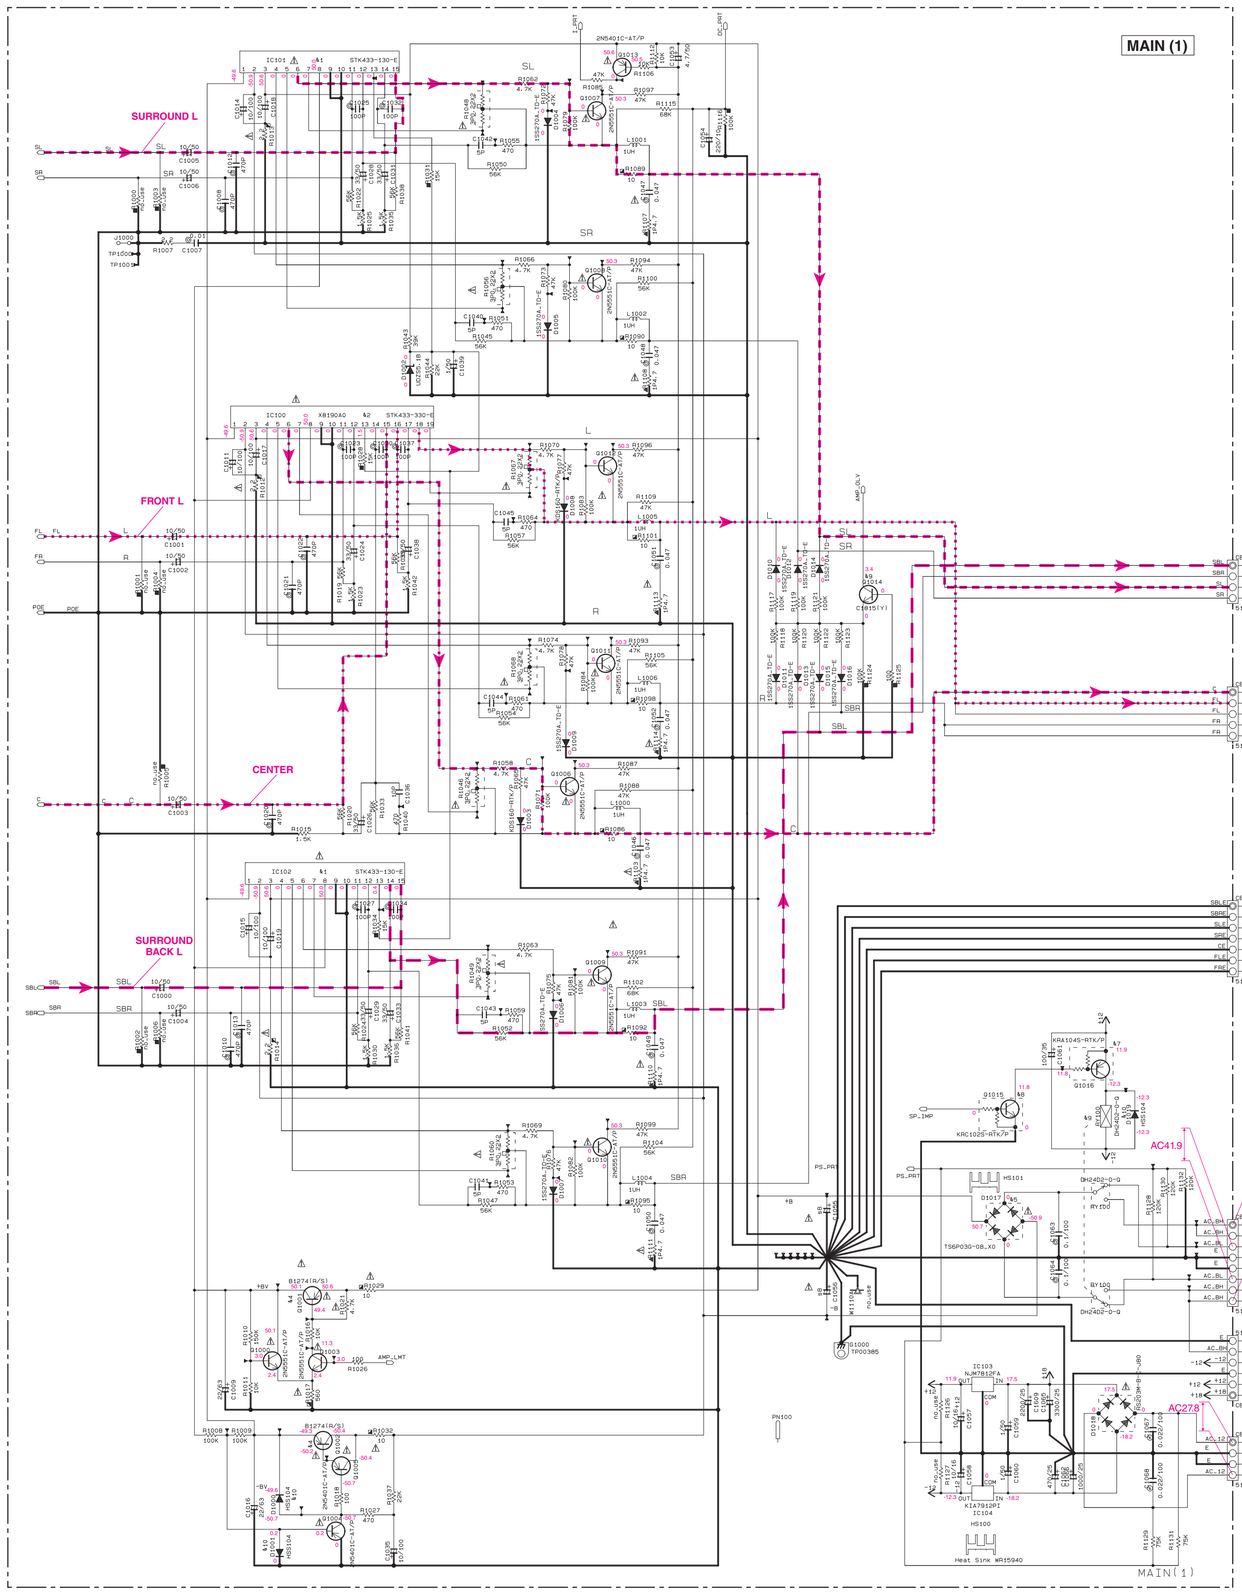

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
▽	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

CAPACITOR

REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	ELECTRONIC
⊗	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	NON-POLAR
◉	CERAMIC TUBULAR CAPACITOR	
◎	POLYESTER FILM CAPACITOR	
○	POLYSTYRENE FILM CAPACITOR	
①	MICA CAPACITOR	
②	POLYPROPYLENE FILM CAPACITOR	
●	SEMICONDUCTIVE CERAMIC CAPACITOR	
⑤	POLYPHENYLENE SULFIDE FILM CAPACITOR	

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

Interchangeable Parts at Manufacture-Stage

Mark	Reference Parts Number	Parts Name
&1	IC101-102	STK433-130-E STK433-130Y-E
&2	IC100	STK433-330-E STK433-330Y-E
&3	U1500-1501	JSR1165 GP1FAV51RK0F
&4	Q1001-1002	2SB1274(R/S) 2SB1565(E/F) KTA1046-Y-U/P
&5	D1017	TS6P03G-08-X0 RS603M-B-C-ABO
&6	Q1500-1504-1507-1514 1519-1526	2SD1938(F) 2SC5938A(A/B) 2SD2704(K)
&7	Q1016	KRA104S-RTK/P DTA144EKA
&8	Q1015	KRC102S-RTK/P DTC114EKA
&9	Q1014	2SC1815(Y) KTC3198Y-AT
&10	D1000-1001-1019	HSS104 1SS133 1SS176

Destination Part List

sXX	LOC	UC	R	AF	L
s1	W1006A W1006B	X	WA76540 VH-5298T	X	WA76540 VH-5298T
s2	W1004B W1004A	X	MH08030 -	X	MH08030 -
s3	W1000B W1000A	X	MH04030 -	X	MH04030 -
s4	W1002A W1002B	X	MH03030 -	X	MH03030 -
s5	W1003B W1003A	X	MH09030 -	X	MH09030 -
s6	W1005A W1005B	X	MH06030 -	X	MH06030 -
s7	W1001B W1001A	X	MH02030 -	X	MH02030 -
s8	C1056 C1055	WN52440 6800/63	WN52440 6800/63	WN52440 6800/63	WN52440 6800/63
s9	SW101	X	WB49370 RB140246	X	WD07370 RB140254
s10	F1000	X	VV07170 3.15A250V	X	X
s11	CB158 CB159	X	WN07770 PFC5000-0202F	X	X
s12	J1001	X	X	X	VH50000 -

IC100: STK433-330-E
3-channel AF power amplifier, stand-by circuit built-in

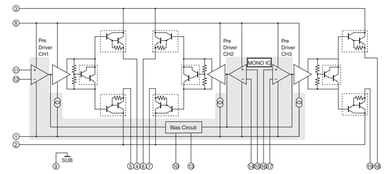

IC101, 102: STK433-130-E
2-channel AF power amplifier, stand-by circuit built-in

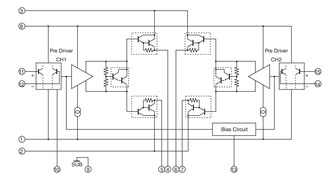

IC103: NJM7812FA
Voltage regulator

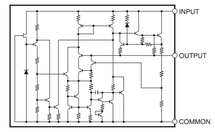

IC104: KIA7912PI
Voltage regulator

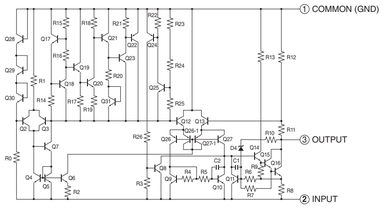

VOLTAGE SELECTOR

230-240V	1-2/5-6
220V	2-3/6-7
110V	3-4/7-8
120V	4-5/8-1

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

MAIN 2/2

AV 1 — AV 2 — AV 3 — AV 4 — AV 5 — AV 6 — AV OUT — AUDIO 1 — AUDIO 2 — MULTI CH INPUT (FRONT R L, SURROUND R L, SURROUND BACK R L, SUBWOOFER, CENTER) — AUDIO OUT — ZONE2 OUT — PRE OUT (FRONT R L, SURROUND R L, SURROUND BACK R L, SUBWOOFER 1, CENTER, SUBWOOFER 2)

OPTICAL (TV) — COAXIAL — COAXIAL (CD) — OPTICAL

DIGITAL IN

BUFFER

ANALOG IN

SURROUND L — SUBWOOFER — CENTER — FRONT L — SURROUND BACK L

RX-V665, HTR-6260 (U model)

Page 115 B8 to OPERATION (2)_CB451

Page 115 C8 to OPERATION (2)_CB454

Page 115 D8 to OPERATION (2)_CB456

Page 115 E8 to OPERATION (2)_CB457

Page 110 E2 to DIGITAL_CB23

MAIN (1)

IC152: TC74VHCU04FT
Hex inverters

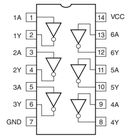

IC153: R2A15220FP
8-channel electronic volume with 11 input selector and tone control

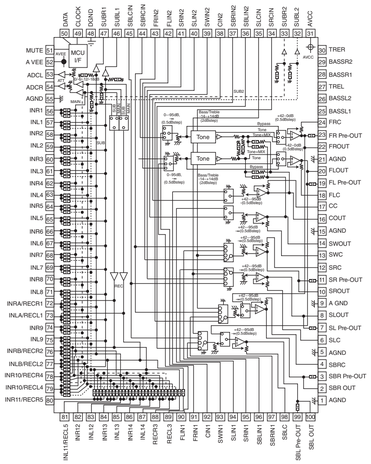

IC154: NJM4565M
Dual operational amplifier

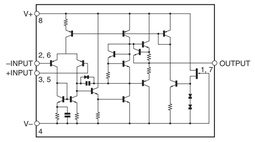

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

Interchangeable Parts at Manufacture-Stage

Mark	Reference Parts Number	Parts Name

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
	CARBON FILM RESISTOR (P=10)
	METAL OXIDE FILM RESISTOR
	METAL FILM RESISTOR
	METAL PLATE RESISTOR
	FIRE PROOF CARBON FILM RESISTOR
	CEMENT MOLDED RESISTOR
	SEMI VARIABLE RESISTOR
	CHIP RESISTOR

CAPACITOR

REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	E
	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	
	CERAMIC TUBULAR CAPACITOR	
	POLYESTER FILM CAPACITOR	
	POLYSTYRENE FILM CAPACITOR	
	MICA CAPACITOR	
	POLYPROPYLENE FILM CAPACITOR	
	SEMICONDUCTIVE CERAMIC CAPACITOR	

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

VIDEO 1/3

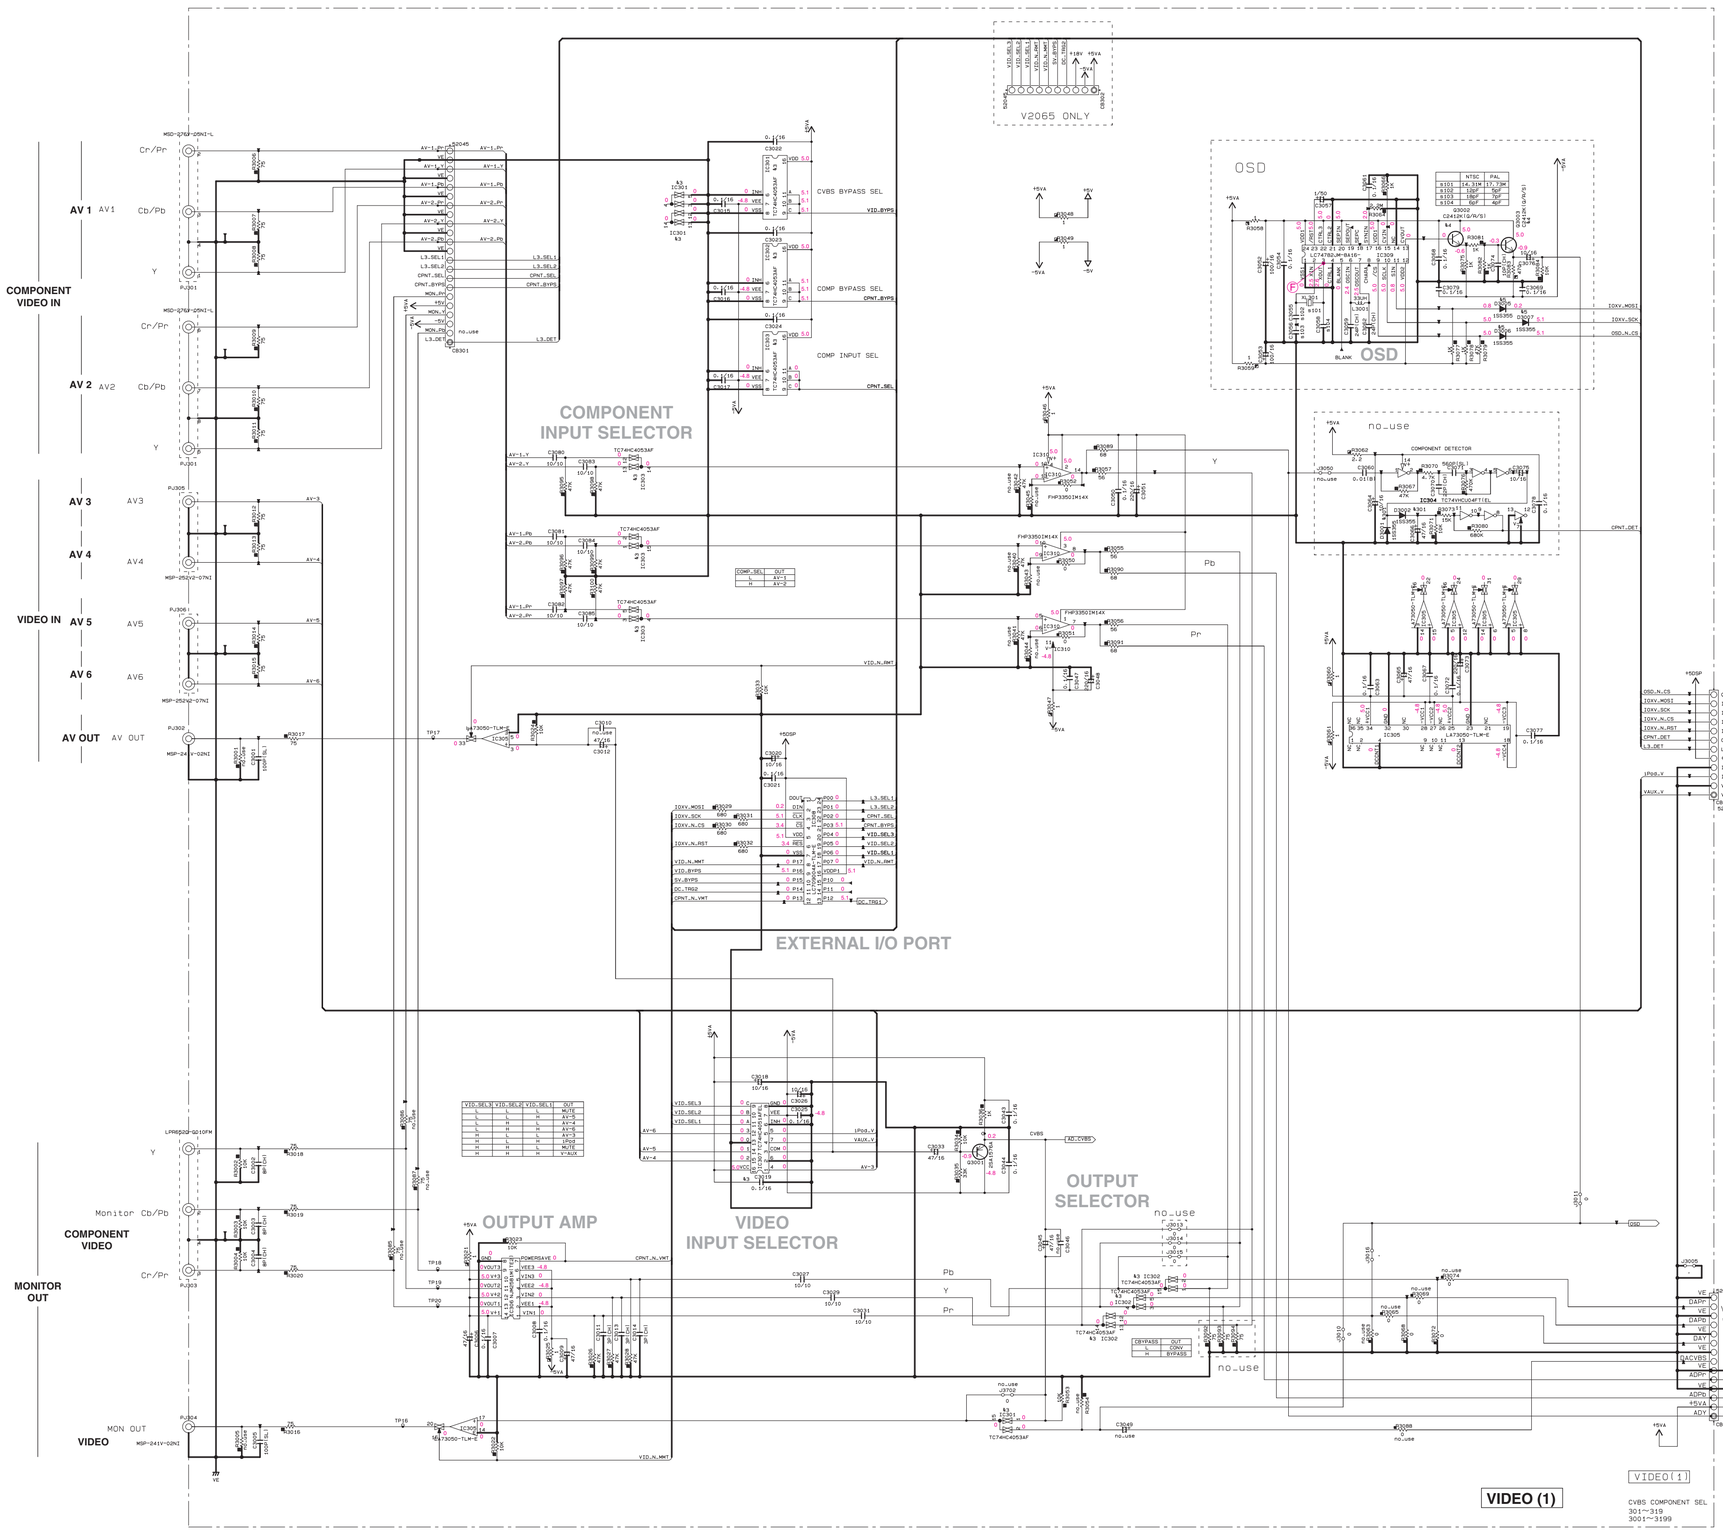

Destination Part List						
xXX	LOC	U	C	R	A	G-E-F	L
s101	XL301	VV04980 14.31818MHz	VV04980 14.31818MHz	VV04980 14.31818MHz	WK19610 17.734475MHz	WK19610 17.734475MHz	WK19510 17.734475MHz
s102	C3055	US06112 12P(CH)	US06112 12P(CH)	US05110 12P(CH)	US06050 5P(CH)	US06050 5P(CH)	
s103	C3056	US06118 18P(CH)	US06118 18P(CH)	US05118 18P(CH)	US06070 7P(CH)	US06070 7P(CH)	
s104	C3058	US06060 6P(CH)	US06060 6P(CH)	US05060 6P(CH)	US06040 4P(CH)	US06040 4P(CH)	

Interchangeable Parts at Manufacture-Stage

Mark	Reference Parts Number	Parts Name
k1	D3705-3707	HSS124 1SS133 1SS176
k2	Q3205-3303	KTA1046-Y-U/P 2SB1274(R/S) 2SB1565(E/F)
k3	IC301-303	TC74HC4053AF HM74HC4053JA,NL
k4	Q3002-3003	2SC2412K(Q/R/S) 2SD601(AB/AQ,L/BY/S) KTC3875S-Y-BM-RTK/P
k5	D3005-3007.3309-3311 3403-3407.3601-3602 3708-3801-3805.3901 3902	1SS355 MA2J111OSL
k6	Q3406.3408-3410-3412 3414	DTA114EKA KRA102S-RTK/P
k7	Q3405-3407-3409-3411 3413	DTC114EKA KRC102S-RTK/P
k8	Q3803	DTC144EKA KRC104S-RTK/P
k9	Q3201	2SC1740S(R/S) 2SC3311AA(G/R/S)

IC301-303: TC74HC4053AF
Analog multiplexer/demultiplexer

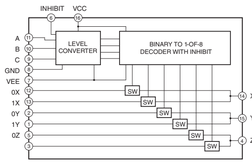

INPUT STATES				"ON" CHANNEL (S)
INHIBIT	C	B	A	
0	0	0	0	0X, 0Y, 0Z
0	0	0	1	1X, 0Y, 0Z
0	0	1	0	0X, 1Y, 0Z
0	0	1	1	1X, 1Y, 0Z
0	1	0	1	0X, 0Y, 1Z
0	1	1	0	0X, 1Y, 1Z
0	1	1	1	1X, 1Y, 1Z
1	X	X	X	NONE

POINT Ⓕ XL301 (Pin 3 of IC309)

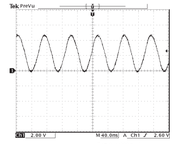

IC305: LA73050-TLM-E
6-channel 75 ohms video driver

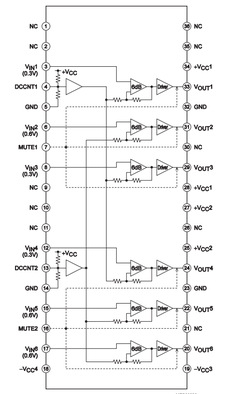

IC306: NJM2581M
Video amplifier

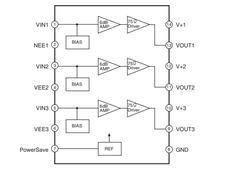

IC307: TC74HC4051AFEL
8-channel analog multiplexer/demulitiplexer

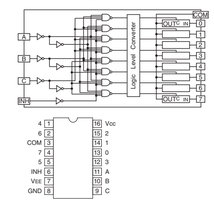

IC308: LC709004A-TLM-E
I/O-expander for microcontroller

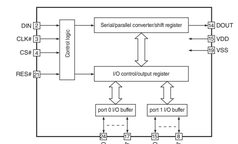

IC309: LC74782JM-8A16-TLMC
The on-screen display controller LSI

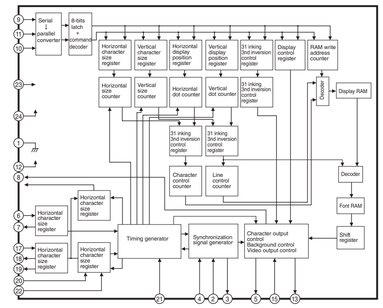

IC310: FHP3350IM14X
Triple voltage feedback amplifier



RESISTOR	
REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
⊘	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
◪	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
◇	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

CAPACITOR		
REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	⊟
⊘	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	⊢⊣
◉	CERAMIC TUBULAR CAPACITOR	
◎	POLYESTER FILM CAPACITOR	
○	POLYSTYRENE FILM CAPACITOR	
ⓘ	MICA CAPACITOR	
◎	POLYPROPYLENE FILM CAPACITOR	
●	SEMICONDUCTIVE CERAMIC CAPACITOR	

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

VIDEO 2/3

Destination Part List RDS

SXX	LOC	U	C	R	A	G-E-F	L
s201	IC321	x	x	x	x	X8235A0 LC72725KM-UY-TL	x
s202	XL321	x	x	x	x	V273110 4.332MHZ	x
s203	C3203 C3227	x	x	x	x	US05127 270*CH	x
s204	C3205 C3209 C3204	x	x	x	x	US13510 0.1*16	x
s205	R3201 R3203	x	x	x	x	RD35510 100	x
s206	C3202	x	x	x	x	UR83710 10*16	x
s207	C3206	x	x	x	x	US05256 560P(SL)	x
s208	R3202	x	x	x	x	RD35651 5.1K	x
s209	C3208 C3207	x	x	x	x	US05233 330P(SL)	x
s210	R3204	x	x	x	x	RD35722 22K	x
s211	R3205	x	x	x	x	RD35633 3.3K	x
s212	C3201	x	x	x	x	IC17402 C17405(R/S)	x
s213	R3206	x	x	x	x	RD35810 100K	x
s214	R3207	x	x	x	x	RD35733 33K	x
s215	R3208	x	x	x	x	HV75568 680	x
s216	C3201	x	x	x	x	V043610 WTZJ3.3B	x
s217	C3211	x	x	x	x	UR83747 47/16	x

Destination Part List XM & SP terminal

SXX	LOC	U	C	R	A	G-E-F	L
s245	C3317	UR86610 1/50	x	x	x	x	x
s246	C3311 C3309	VT33290 1SS355	x	x	x	x	x
s247	R3321	RF45768 68K	x	x	x	x	x
s248	R3322	RF45533 330	x	x	x	x	x
s249	R3312	RF45822 220K	x	x	x	x	x
s250	R3313	RD35610 1K	x	x	x	x	x
s251	C3318	UR83747 47/16	x	x	x	x	x
s252	R3314	RD35647 4.7K	x	x	x	x	x
s254	IC333	X803540 BA00JC5WT-V5	x	x	x	x	x
s255	HS333	WQ67550	x	x	x	x	x
s281	TE342	WK56100 MST-207V1-01	WK56100 MST-207V1-01	WK56100 MST-207V1-01	WK56100 MST-207V1-01	WK56110 MST-207V1-01	WK56110 MST-207V1-01
s282	TE343 TE341	WK56080 MST-204V1-01	WK56080 MST-204V1-01	WK56080 MST-204V1-01	WK56080 MST-204V1-01	WK56090 MST-204V1-01	WK56090 MST-204V1-01

Page 115 K3
to OPERATION (8)_CB463

Page 114 L5
to OPERATION (3)_CB477

Page 116 H5
to MAIN (1)_CB101

Page 116 H5
to MAIN (1)_CB100

Page 116 H7
to MAIN (1)_CB102

Page 116 H9
to MAIN (1)_CB105

Page 110 I2
to DIGITAL_CB25

Page 115 H7
to OPERATION (2)_CB460

Page 114 J8
to OPERATION (6)_CB473

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
	CARBON FILM RESISTOR (P=10)
	METAL OXIDE FILM RESISTOR
	METAL FILM RESISTOR
	METAL PLATE RESISTOR
	FIRE PROOF CARBON FILM RESISTOR
	CEMENT MOLDED RESISTOR
	SEMI VARIABLE RESISTOR
	CHIP RESISTOR

CAPACITOR

REMARKS	PARTS NAME
NO MARK	ELECTROLYTIC CAPACITOR
	TANTALUM CAPACITOR
NO MARK	CERAMIC CAPACITOR
	CERAMIC TUBULAR CAPACITOR
	POLYESTER FILM CAPACITOR
	POLYSTYRENE FILM CAPACITOR
	MICA CAPACITOR
	POLYPROPYLENE FILM CAPACITOR
	SEMICONDUCTIVE CERAMIC CAPACITOR

NOTICE (model)
(J)..... JAPAN
(U)..... U.S.A
(C)..... CANADA
(R)..... GENERAL
(T)..... CHINA
(K)..... KOREA
(A)..... AUSTRALIA
(B)..... BRITISH
(G)..... EUROPE
(L)..... SINGAPORE
(E)..... SOUTH EUROPE
(V)..... TAIWAN
(F)..... RUSSIAN

IC321: LC72725KM-UY-TLM-E
RDS signal demodulation IC

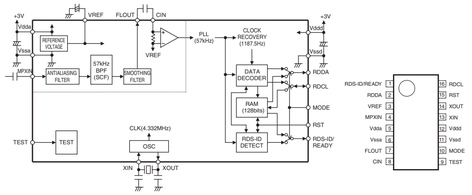

IC331: NJM2396F05
Low dropout voltage regulator with ON/OFF control



IC333: BA00JC5WT-V5
Voltage regulator

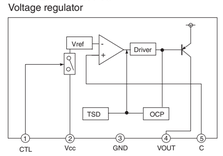

IC334: NJM2388F05
Low dropout voltage regulator with ON/OFF control

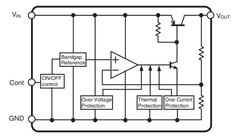

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

VIDEO 3/3

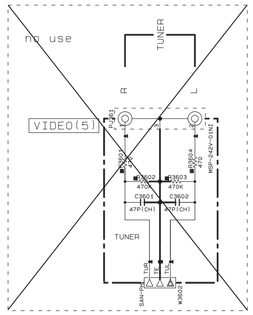

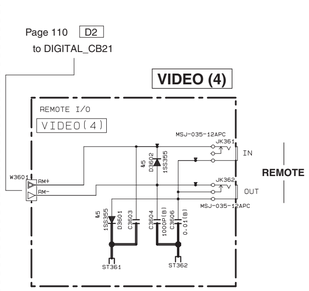

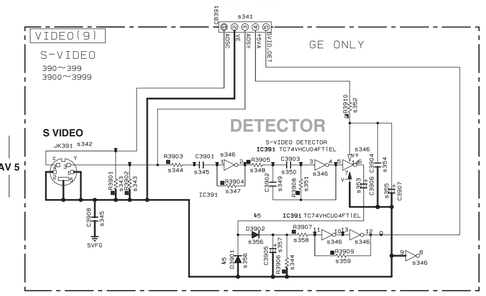

VIDEO (9) F model

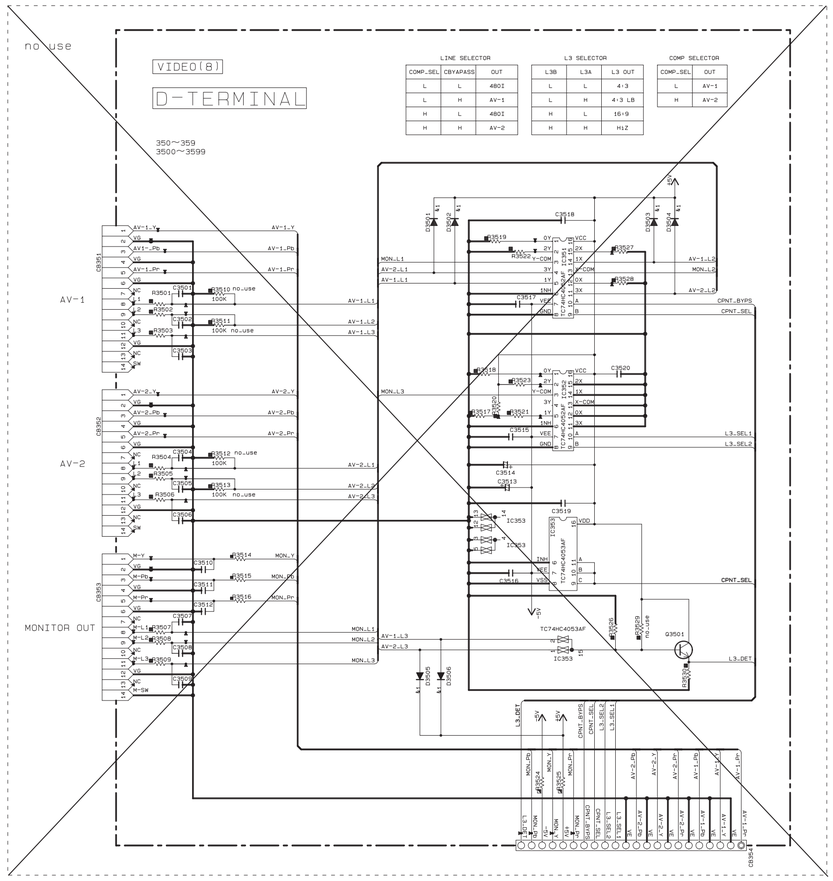

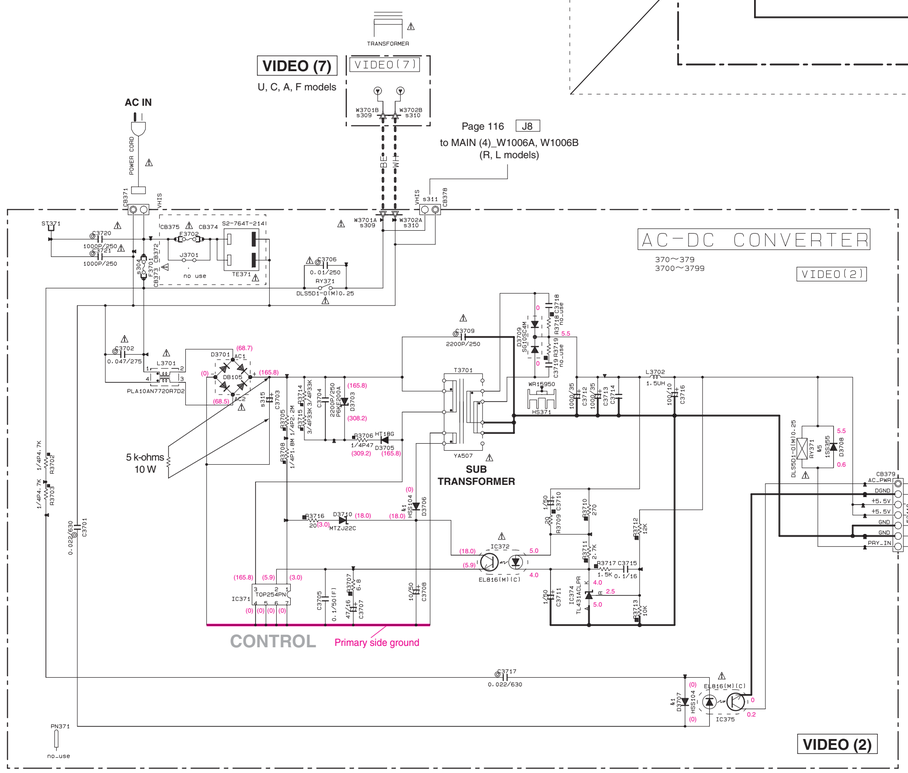

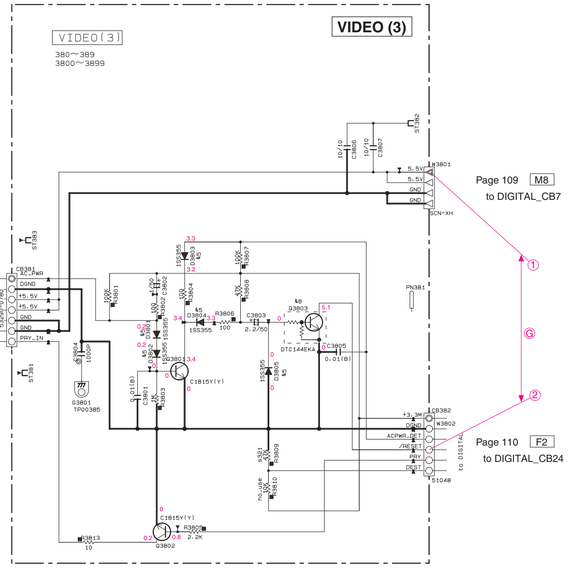

Destination Part List							
※XX	LDC	U	C	R	A	G-E-F	L
※304	F3701	WB22120 6.00A125V	WB22120 6.00A125V	WB76060 T6.34L250V	VV27170 T3.15AL250V	VV27170 T3.15AL250V	VV07170 T3.15AL250V
※309	W3701B W3701A	MH06620 -	MH06620 -	X -	MH06620 -	MH06620 -	X -
※310	W3702B W3702A	MH09620 -	MH09620 -	X -	MH09620 -	MH09620 -	X -
※311	CB378	X	X	VG87990 VHIS	X	X	VG87990 VHIS
※315	C3703	WR08200 100/220	WR08200 100/220	WR08210 100/400	WQ85250 68/400	WQ85250 68/400	WQ85250 68/400
※321	R3809	RD35612 1.2K	RD35627 2.7K	RD35647 4.7K	RD35715 15K	RD35747 47K	RD35810 100K
※341	CB391	X	X	X	X	VQ04410 52044	X
※342	JK391	X	X	X	X	V693100 YKF51-5506V	X
※343	R3902 R3901	X	X	X	X	RD35475 75	X
※344	R3903 R3906	X	X	X	X	RD35710 10K	X
※345	C3908 C3901	X	X	X	X	US06410 0.01(B)	X
※346	IC391	X	X	X	X	XZ509A0 TC74VHCU04FT(EL)	X
※347	R3904	X	X	X	X	RD35747 47K	X
※348	R3905	X	X	X	X	RD35647 4.7K	X
※349	C3902	X	X	X	X	US06212 120P(SL)	X
※350	C3903	X	X	X	X	US06222 220P(SL)	X
※351	R3908	X	X	X	X	RD35847 470K	X
※352	R3910	X	X	X	X	HV75322 2.2	X
※353	C3906	X	X	X	X	UR83710 10/16	X
※354	C3904	X	X	X	X	US13510 0.1/16	X
※355	C3907	X	X	X	X	UR81847 470/6.3	X
※356	D3901 D3902	X	X	X	X	VT33290 1SS355	X
※357	C3905	X	X	X	X	UR83747 47/16	X
※358	R3907	X	X	X	X	RD35715 15K	X
※359	R3909	X	X	X	X	RD35868 680K	X

RESISTOR

REMARKS	PARTS NAME
NO MARK	CARBON FILM RESISTOR (P=5)
☑	CARBON FILM RESISTOR (P=10)
△	METAL OXIDE FILM RESISTOR
▲	METAL FILM RESISTOR
⊠	METAL PLATE RESISTOR
▨	FIRE PROOF CARBON FILM RESISTOR
□	CEMENT MOLDED RESISTOR
⊘	SEMI VARIABLE RESISTOR
■	CHIP RESISTOR

CAPACITOR

REMARKS	PARTS NAME	
NO MARK	ELECTROLYTIC CAPACITOR	E
◎	TANTALUM CAPACITOR	
NO MARK	CERAMIC CAPACITOR	F
◉	CERAMIC TUBULAR CAPACITOR	
◎	POLYESTER FILM CAPACITOR	
○	POLYSTYRENE FILM CAPACITOR	
ⓘ	MICA CAPACITOR	
ⓟ	POLYPROPYLENE FILM CAPACITOR	
●	SEMICONDUCTIVE CERAMIC CAPACITOR	

NOTICE (model)
(J)····· JAPAN
(U)····· U.S.A
(C)····· CANADA
(R)····· GENERAL
(T)····· CHINA
(K)····· KOREA
(A)····· AUSTRALIA
(B)····· BRITISH
(G)····· EUROPE
(L)····· SINGAPORE
(E)····· SOUTH EUROPE
(V)····· TAIWAN
(F)····· RUSSIAN

IC391: TC74VHCU04FT
Hex inverters

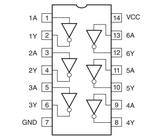

IC374: TL431ACLPR
Adjustable precision shunt regulators

POINT Ⓖ ①/ W3801 (+5.5V), ②/ CB382 (/RESET)

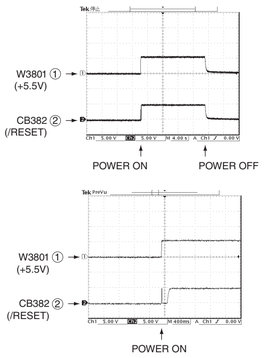

IC371: TOP254PN
TOPswitch-HX

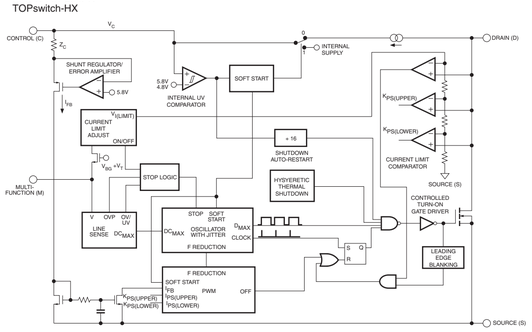

★ All voltages are measured with a 10MΩ/V DC electronic voltmeter.
★ Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.
★ Schematic diagram is subject to change without notice.

CAUTION !
Safety measures
- Some internal parts in this product contain high voltages and are dangerous. Be sure to take safety measures during servicing, such as wearing insulating gloves.
- Note that positions indicated below are dangerous even after the power is turned off because an electric charge remains and a high voltage continues to exist there. Before starting any repair work, perform discharge by connecting a discharge resistor (5k-ohms/10W) between terminals at following positions. The time required for discharging is about 30 seconds. C3703 on VIDEO (2) P.C.B.

■ REPLACEMENT PARTS LIST

• ELECTRICAL COMPONENT PARTS

WARNING

- Components having special characteristics are marked ⚠ and must be replaced with parts having specifications equal to those originally installed.

ABBREVIATIONS IN THIS LIST ARE AS FOLLOWS:

C.A.EL.CHP	: CHIP ALUMI.ELECTROLYTIC CAP
C.CE	: CERAMIC CAP
C.CE.ARRAY	: CERAMIC CAP ARRAY
C.CE.CHP	: CHIP CERAMIC CAP
C.CE.ML	: MULTILAYER CERAMIC CAP
C.CE.M.CHP	: CHIP MULTILAYER CERAMIC CAP
C.CE.SAFTY	: RECOGNIZED CERAMIC CAP
C.CE.TUBLR	: CERAMIC TUBULAR CAP
C.CE.SMI	: SEMI CONDUCTIVE CERAMIC CAP
C.EL	: ELECTROLYTIC CAP
C.MICA	: MICA CAP
C.ML.FLM	: MULTILAYER FILM CAP
C.MP	: METALLIZED PAPER CAP
C.MYLAR	: MYLAR FILM CAP
C.MYLAR.ML	: MULTILAYER MYLAR FILM CAP
C.PAPER	: PAPER CAPACITOR
C.PLS	: POLYSTYRENE FILM CAP
C.POL	: POLYESTER FILM CAP
C.POLY	: POLYETHYLENE FILM CAP
C.PP	: POLYPROPYLENE FILM CAP
C.TNTL	: TANTALUM CAP
C.TNTL.CHP	: CHIP TANTALUM CAP
C.TRIM	: TRIMMER CAP
CN	: CONNECTOR
CN.BS.PIN	: CONNECTOR,BASE PIN
CN.CANNON	: CONNECTOR,CANNON
CN.DIN	: CONNECTOR,DIN
CN.FLAT	: CONNECTOR,FLAT CABLE
CN.POST	: CONNECTOR,BASE POST
COIL.MX.AM	: COIL,AM MIX
COIL.AT.FM	: COIL,FM ANTENNA
COIL.DT.FM	: COIL,FM DETECT
COIL.MX.FM	: COIL,FM MIX
COIL,OUTPT	: OUTPUT COIL
DIOD.ARRAY	: DIODE ARRAY
DIODE.BRG	: DIODE BRIDGE
DIODE.CHP	: CHIP DIODE
DIODE.VAR	: VARACTOR DIODE
DIOD.Z.CHP	: CHIP ZENER DIODE
DIODE.ZENR	: ZENER DIODE
DSCR.CE	: CERAMIC DISCRIMINATOR
FER.BEAD	: FERRITE BEADS
FER.CORE	: FERRITE CORE
FET.CHP	: CHIP FET
FL.DSPLY	: FLUORESCENT DISPLAY
FLTR.CE	: CERAMIC FILTER
FLTR.COMB	: COMB FILTER MODULE
FLTR.LC.RF	: LC FILTER,EMI
GND.MTL	: GROUND PLATE
GND.TERM	: GROUND TERMINAL
HOLDER.FUS	: FUSE HOLDER
IC.PRTCT	: IC PROTECTOR
JUMPER.CN	: JUMPER CONNECTOR
JUMPER.TST	: JUMPER,TEST POINT
L.DTCT	: LIGHT DETECTING MODULE
L.EMIT	: LIGHT EMITTING MODULE
LED.DSPLY	: LED DISPLAY
LED.INFRD	: LED,INFRARED
MODUL.RF	: MODULATOR,RF
PHOT.CPL	: PHOTO COUPLER
PHOT.INTR	: PHOTO INTERRUPTER
PHOT.RFLCT	: PHOTO REFLECTOR
PIN.TEST	: PIN,TEST POINT
PLST.RIVET	: PLASTIC RIVET
R.ARRAY	: RESISTOR ARRAY
R.CAR.	: CARBON RESISTOR
R.CAR.CHP	: CHIP RESISTOR
R.CAR.FP	: FLAME PROOF CARBON RESISTOR
R.FUS	: FUSABLE RESISTOR
R.MTL.CHP	: CHIP METAL FILM RESISTOR
R.MTL.FLM	: METAL FILM RESISTOR
R.MTL.OXD	: METAL OXIDE FILM RESISTOR
R.MTL.PLAT	: METAL PLATE RESISTOR
RSNR.CE	: CERAMIC RESONATOR
RSNR.CRYS	: CRYSTAL RESONATOR
R.TW.CEM	: TWIN CEMENT FIXED RESISTOR
R.CEMENT	: CEMENT RESISTOR
SCR.BND.HD	: BIND HEAD B-TIGHT SCREW
SCR.BW.HD	: BW HEAD TAPPING SCREW
SCR.CUP	: CUP TIGHT SCREW
SCR.TERM	: SCREW TERMINAL
SCR.TR	: SCREW,TRANSISTOR
SUPRT.PCB	: SUPPORT,P.C.B.
SURG.PRTCT	: SURGE PROTECTOR
SW.TACT	: TACT SWITCH
SW.LEAF	: LEAF SWITCH
SW.LEVER	: LEVER SWITCH
SW.MICRO	: MICRO SWITCH
SW.PUSH	: PUSH SWITCH
SW.RT.ENC	: ROTARY ENCODER
SW.RT.MTR	: ROTARY SWITCH WITH MOTOR
SW.RT	: ROTARY SWITCH
SW.SLIDE	: SLIDE SWITCH
TERM.SP	: SPEAKER TERMINAL
TERM.WRAP	: WRAPPING TERMINAL
THRMST.CHP	: CHIP THERMISTOR
TR.CHP	: CHIP TRANSISTOR
TR.DGT	: DIGITAL TRANSISTOR
TR.DGT.CHP	: CHIP DIGITAL TRANSISTOR
TRANS	: TRANSFORMER
TRANS.PULS	: PULSE TRANSFORMER
TRANS.PWR	: POWER TRANSFORMER ASS'Y
TUNER.AM	: TUNER PACK,AM
TUNER.FM	: TUNER PACK,FM
TUNER.PK	: FRONT-ENDTUNER PACK
VR	: ROTARY POTENTIOMETER
VR.MTR	: POTENTIOMETER WITH MOTOR
VR.SW	: POTENTIOMETER WITH ROTARY SW
VR.SLIDE	: SLIDE POTENTIOMETER
VR.TRIM	: TRIMMER POTENTIOMETER

P.C.B. DIGITAL

	Ref No.	Part No.	Description	Markets
*		WQ923900	P. C. B. DIGITAL	U (V665)
*		WQ925100	P. C. B. DIGITAL	U (6260)
*		WQ924000	P. C. B. DIGITAL	CRAL (V665)
*		WQ925200	P. C. B. DIGITAL	C (6260)
*		WQ924100	P. C. B. DIGITAL	F (V665)
	CB1-4	WM462600	CN. HDMI 19P SE	
	CB6	WM462600	CN. HDMI 19P SE	
	CB7	LB918040	CN. BS. PIN 4P	
	CB20	VP082900	CN. BS. PIN 25P	
	CB21	VB389800	CN. BS. PIN 2P	
	CB22	VK024700	CN. BS. PIN 3P	
	CB23	VK025600	CN. BS. PIN 12P	
	CB24	VF728300	CN 6P	
	CB25	VQ045200	CN. BS. PIN 22P	
	CB27	VQ047200	CN. BS. PIN 9P	
*	CB40	WJ458700	CN. XM 4P, CAM-D96	U
	CB61-63	V9356900	CN. JE 19P SE	
	CB72	VQ044200	CN. BS. PIN 6P	
	CB73	VQ044100	CN. BS. PIN 5P	F
	C1-2	US135100	C. CE. CHP 0. 1uF 16V	
	C3-4	WD758300	C. CE. CHP 10uF 10V	
	C5-14	US135100	C. CE. CHP 0. 1uF 16V	
	C15-24	US063100	C. CE. CHP 1000pF 50V B	
	C25-26	US135100	C. CE. CHP 0. 1uF 16V	
	C27	US061120	C. CE. CHP 12pF 50V B	
	C28	US061150	C. CE. CHP 15pF 50V B	
	C29	US135100	C. CE. CHP 0. 1uF 16V	
	C30	WD758300	C. CE. CHP 10uF 10V	
	C31-32	US135100	C. CE. CHP 0. 1uF 16V	
	C33	US063100	C. CE. CHP 1000pF 50V B	
	C34	US135100	C. CE. CHP 0. 1uF 16V	
	C35	WD758300	C. CE. CHP 10uF 10V	
	C36	US135100	C. CE. CHP 0. 1uF 16V	
	C37	US063100	C. CE. CHP 1000pF 50V B	
	C38-40	WD758300	C. CE. CHP 10uF 10V	
	C41-43	US063100	C. CE. CHP 1000pF 50V B	
	C44-46	US135100	C. CE. CHP 0. 1uF 16V	
	C47	WD758300	C. CE. CHP 10uF 10V	
	C48	US135100	C. CE. CHP 0. 1uF 16V	
	C50	WD758300	C. CE. CHP 10uF 10V	
	C51	US135100	C. CE. CHP 0. 1uF 16V	
	C53-54	US135100	C. CE. CHP 0. 1uF 16V	
	C55-56	WD758300	C. CE. CHP 10uF 10V	
	C57	US063100	C. CE. CHP 1000pF 50V B	
	C58	WD758300	C. CE. CHP 10uF 10V	
	C59-61	US135100	C. CE. CHP 0. 1uF 16V	
	C62	WG251600	C. CE. CHP 4. 7uF 6. 3V	
	C64-66	US135100	C. CE. CHP 0. 1uF 16V	
	C67	WG251600	C. CE. CHP 4. 7uF 6. 3V	
	C69	UF027470	C. EL. CHP 47uF 10V	
	C71-72	US135100	C. CE. CHP 0. 1uF 16V	
	C73-74	WJ344400	C. CE. CHP 22uF 6. 3V	
	C75	WD758300	C. CE. CHP 10uF 10V	
	C76	US135100	C. CE. CHP 0. 1uF 16V	
	C77	WD758300	C. CE. CHP 10uF 10V	
	C78	US135100	C. CE. CHP 0. 1uF 16V	
	C79-80	US062220	C. CE. CHP 220pF 50V B	

✻ New Parts

Ref No.	Part No.	Description	Markets
C81-82	US135100	C. CE. CHP 0. 1uF 16V	
C83	US063330	C. CE. CHP 3300pF 50V B	
C84	US063470	C. CE. CHP 4700pF 50V B	
C85	US063120	C. CE. CHP 1200pF 50V B	
C86	US135100	C. CE. CHP 0. 1uF 16V	
C87	US063120	C. CE. CHP 1200pF 50V B	
C88-90	US135100	C. CE. CHP 0. 1uF 16V	
C91-92	WD758300	C. CE. CHP 10uF 10V	
C93	US135100	C. CE. CHP 0. 1uF 16V	
C94	WD758300	C. CE. CHP 10uF 10V	
C97-101	US135100	C. CE. CHP 0. 1uF 16V	
C102	UR267470	C. EL 47uF 50V	
C103	WG251600	C. CE. CHP 4. 7uF 6. 3V	
C104	US135100	C. CE. CHP 0. 1uF 16V	
C105	WH772100	C. EL 1000uF 10V	
C106-124	US135100	C. CE. CHP 0. 1uF 16V	
C136	US135100	C. CE. CHP 0. 1uF 16V	
C137-138	US062470	C. CE. CHP 470pF 50V B	
C200	UR837330	C. EL 33uF 16V	
C201	US135100	C. CE. CHP 0. 1uF 16V	
C202	US064100	C. CE. CHP 0. 01uF 50V B	
C204-205	US064100	C. CE. CHP 0. 01uF 50V B	
C207-211	US064100	C. CE. CHP 0. 01uF 50V B	
C212	US135100	C. CE. CHP 0. 1uF 16V	
C214	US135100	C. CE. CHP 0. 1uF 16V	
C215-216	US064100	C. CE. CHP 0. 01uF 50V B	
C217	US135100	C. CE. CHP 0. 1uF 16V	
C218-219	US064100	C. CE. CHP 0. 01uF 50V B	
C220-225	US135100	C. CE. CHP 0. 1uF 16V	
C226	WG251600	C. CE. CHP 4. 7uF 6. 3V	
C228-229	WG251600	C. CE. CHP 4. 7uF 6. 3V	
C231	US135100	C. CE. CHP 0. 1uF 16V	
C232	US046100	C. CE. CHP 1uF 25V	
C234-238	US046100	C. CE. CHP 1uF 25V	
C239-242	US062100	C. CE. CHP 100pF 50V B	
C243	US064100	C. CE. CHP 0. 01uF 50V B	
C244-254	US135100	C. CE. CHP 0. 1uF 16V	
C400-401	WD758300	C. CE. CHP 10uF 10V	U
C402-403	US064100	C. CE. CHP 0. 01uF 50V B	
C404	US061100	C. CE. CHP 10pF 50V B	U
C405-406	US035100	C. CE. CHP 0. 1uF 16V B	U
C407	US061100	C. CE. CHP 10pF 50V B	U
C408-409	US035100	C. CE. CHP 0. 1uF 16V B	U
C410-411	US135100	C. CE. CHP 0. 1uF 16V	
C412	US035100	C. CE. CHP 0. 1uF 16V B	
C413-414	US135100	C. CE. CHP 0. 1uF 16V	
C415	US044220	C. CE. CHP 0. 022uF 25V B	
C416	US062100	C. CE. CHP 100pF 50V B	
C418	US062220	C. CE. CHP 220pF 50V B	
C419	US135100	C. CE. CHP 0. 1uF 16V	
C420	US062220	C. CE. CHP 220pF 50V B	
C421	US035100	C. CE. CHP 0. 1uF 16V B	U
C422	US062220	C. CE. CHP 220pF 50V B	
C424-425	US135100	C. CE. CHP 0. 1uF 16V	
C426	US062220	C. CE. CHP 220pF 50V B	
C427	US035100	C. CE. CHP 0. 1uF 16V B	U
C430	UR067470	C. EL 47uF 50V	

✻ New Parts

P.C.B. DIGITAL

Ref No.	Part No.	Description			Markets
C431	US062100	C. CE. CHP	100pF	50V B	
C432-433	US062220	C. CE. CHP	220pF	50V B	
C434-436	US135100	C. CE. CHP	0. 1uF	16V	
C437-438	US062100	C. CE. CHP	100pF	50V B	
C439	US061100	C. CE. CHP	10pF	50V B	
C440	US060800	C. CE. CHP	8pF	50V B	
C441-442	US062390	C. CE. CHP	390pF	50V B	
C443-444	US035100	C. CE. CHP	0. 1uF	16V B	U
C445-446	UR837100	C. EL	10uF	16V	
C447-448	US135100	C. CE. CHP	0. 1uF	16V	
C449-450	UR237470	C. EL	47uF	16V	
C451	US062100	C. CE. CHP	100pF	50V B	
C452	UR067100	C. EL	10uF	50V	
C453	US126100	C. CE. CHP	1uF	10V	
C454-472	US135100	C. CE. CHP	0. 1uF	16V	
C473	US062680	C. CE. CHP	680pF	50V B	
C474-476	US135100	C. CE. CHP	0. 1uF	16V	
C477	WG251600	C. CE. CHP	4. 7uF	6. 3V	
C478-484	US135100	C. CE. CHP	0. 1uF	16V	
C485	WG251600	C. CE. CHP	4. 7uF	6. 3V	
C486	US135100	C. CE. CHP	0. 1uF	16V	
C488-489	UU297220	C. EL	22uF	100V	
C491-493	US135100	C. CE. CHP	0. 1uF	16V	
C494-496	US063100	C. CE. CHP	1000pF	50V B	
C497-498	US135100	C. CE. CHP	0. 1uF	16V	
C499-502	US063100	C. CE. CHP	1000pF	50V B	
C503-519	US135100	C. CE. CHP	0. 1uF	16V	
C600	UU267220	C. EL	22uF	50V	
C601-603	US135100	C. CE. CHP	0. 1uF	16V	
C604-605	US064100	C. CE. CHP	0. 01uF	50V B	
C606	UR067100	C. EL	10uF	50V	
C607	US064100	C. CE. CHP	0. 01uF	50V B	U
C608-609	US135100	C. CE. CHP	0. 1uF	16V	
C610	US126100	C. CE. CHP	1uF	10V	
C611	US062100	C. CE. CHP	100pF	50V B	
C612	UR067100	C. EL	10uF	50V	
C613-614	US126100	C. CE. CHP	1uF	10V	
C615	UR237100	C. EL	10uF	16V	U
C616-617	US135100	C. CE. CHP	0. 1uF	16V	U
C619	US135100	C. CE. CHP	0. 1uF	16V	
C620	UR067470	C. EL	47uF	50V	
C621	UR218100	C. EL	100uF	6. 3V	U
C622	UR067100	C. EL	10uF	50V	
C623	US135100	C. CE. CHP	0. 1uF	16V	
C624	UU267100	C. EL	10uF	50V	
C625	US135100	C. CE. CHP	0. 1uF	16V	
C626	UR067100	C. EL	10uF	50V	
C627-628	WJ603600	C. MYLAR	820pF	50V J	
C629-630	UR837100	C. EL	10uF	16V	U
C633-634	UR067100	C. EL	10uF	50V	
C635-642	US062100	C. CE. CHP	100pF	50V B	
C643-644	US663330	C. CE. CHP	3300pF	50V	U
C700-702	US135100	C. CE. CHP	0. 1uF	16V	
C703-704	WD758300	C. CE. CHP	10uF	10V	
C705-706	US135100	C. CE. CHP	0. 1uF	16V	
C707-708	WD758300	C. CE. CHP	10uF	10V	
C709-710	US135100	C. CE. CHP	0. 1uF	16V	

✻ New Parts

Ref No.	Part No.	Description			Markets
C711-712	US064100	C. CE. CHP	0. 01uF	50V B	
C713	UF037220	C. EL. CHP	22uF	16V	
C714-717	US135100	C. CE. CHP	0. 1uF	16V	
C718	US034390	C. CE. CHP	0. 039uF	16V B	
C719-721	US135100	C. CE. CHP	0. 1uF	16V	
C722-723	US063100	C. CE. CHP	1000pF	50V B	
C724-725	US135100	C. CE. CHP	0. 1uF	16V	
C726	US064100	C. CE. CHP	0. 01uF	50V B	
C727	US135100	C. CE. CHP	0. 1uF	16V	
C728	US064100	C. CE. CHP	0. 01uF	50V B	
C729	US135100	C. CE. CHP	0. 1uF	16V	
C730	VZ243400	C. CE. CHP	0. 33uF	16V	
C731	VZ281900	C. CE. CHP	0. 47uF	16V K	
C732	US034820	C. CE. CHP	0. 082uF	16V K	
C733	US064100	C. CE. CHP	0. 01uF	50V B	
C734	US135100	C. CE. CHP	0. 1uF	16V	
C735	US061100	C. CE. CHP	10pF	50V B	
C736	US060800	C. CE. CHP	8pF	50V B	
C737-742	US135100	C. CE. CHP	0. 1uF	16V	
C743	UF037220	C. EL. CHP	22uF	16V	
C744-746	US135100	C. CE. CHP	0. 1uF	16V	
C747	UF037100	C. EL. CHP	10uF	16V	
C748-749	US135100	C. CE. CHP	0. 1uF	16V	
C750	UF037220	C. EL. CHP	22uF	16V	
C751	US135100	C. CE. CHP	0. 1uF	16V	
C752	UF037220	C. EL. CHP	22uF	16V	
C753	US135100	C. CE. CHP	0. 1uF	16V	
C754	UF037100	C. EL. CHP	10uF	16V	
C755-757	US135100	C. CE. CHP	0. 1uF	16V	
C758	UF037220	C. EL. CHP	22uF	16V	
C759	US135100	C. CE. CHP	0. 1uF	16V	
C763	UF037220	C. EL. CHP	22uF	16V	
C764-766	US135100	C. CE. CHP	0. 1uF	16V	
C772	US135100	C. CE. CHP	0. 1uF	16V	
C774-776	US135100	C. CE. CHP	0. 1uF	16V	
C779	US135100	C. CE. CHP	0. 1uF	16V	
C782-790	US135100	C. CE. CHP	0. 1uF	16V	
C791	UF037220	C. EL. CHP	22uF	16V	
C792-794	US135100	C. CE. CHP	0. 1uF	16V	
C795	UF037100	C. EL. CHP	10uF	16V	
C796-797	US063100	C. CE. CHP	1000pF	50V B	
C798-799	US064100	C. CE. CHP	0. 01uF	50V B	
C800-805	US135100	C. CE. CHP	0. 1uF	16V	
D2	WE674800	DIODE	AVRL161A1R1NTB		
D11-14	WE674800	DIODE	AVRL161A1R1NTB		
D23-26	WE674800	DIODE	AVRL161A1R1NTB		
D35-38	WE674800	DIODE	AVRL161A1R1NTB		
D47-49	WE674800	DIODE	AVRL161A1R1NTB		
D60-61	WE674800	DIODE	AVRL161A1R1NTB		
D62	VV220700	DIODE. SHOT	RB501V-40		
D63-64	V6267600	DIODE	RB051L-40		
D65	WE674800	DIODE	AVRL161A1R1NTB		
D200-204	VU990900	DIODE. ZENR	MAZ8033GHL 3. 4V		
D400-402	WE674800	DIODE	AVRL161A1R1NTB		U
D403-404	VT332900	DIODE	1SS355		
D600	VT332900	DIODE	1SS355		
D602-603	VT332900	DIODE	1SS355		

✻ New Parts

P.C.B. DIGITAL and P.C.B. OPERATION

	Ref No.	Part No.	Description			Markets
	D702-703	VT332900	DIODE	1SS355		
	IC2	XZ287A00	IC	SN74LVC245APWR		
	IC3	XS775A00	IC	TC7SH04FU		
	IC5	X7195A00	IC	R1172S121D-E2-F		
	IC10	X7741A00	IC	NJM2867F3-05(TE1)		
	IC11	X0199B00	IC	TC74VHC157FT(EL,K)		
*	IC13	YA255A00	IC	R1172H501D-T1-F		
	IC20	X8328A00	IC.CPU	M30878FJBGP		(unwritten)
	IC21	X8194A00	IC	R1172H331D-T1-F		
*	IC22	YA398A00	IC.MEMORY	LE25LA322M-TLM-E		
*	IC41	YA399A00	IC	LC89058WD-E		
	IC43	X7378A00	IC	NJM4565M(TE1)		
	IC46	X0199B00	IC	TC74VHC157FT(EL,K)		
	IC47	X7195A00	IC	R1172S121D-E2-F		
*	IC48	X9626B00	IC.MEMORY	K4S641632N-LC60000		
*	IC49	YA540C00	IC.MEMORY	MX29LV160DBTI-70G		(written)
	IC50	XR680A00	IC	TC7SH08FU(TE85L,JF		
	IC61	X7375A00	IC	PCM1781DBQR		U
	IC62	X0199B00	IC	TC74VHC157FT(EL,K)		
	IC63	XS534A00	IC	NJM78M05DL1A		
	IC65	X7355A00	IC	PCM1680DBQR		
	IC66	X7357A00	IC	PCM1803DBR		
	IC67	X3586B00	IC	TC74VHCT08AFT EL,K		
	IC68	XR680A00	IC	TC7SH08FU(TE85L,JF		U
	IC70	X9393A00	IC	ADV7800BSTZ-80		
*	IC71	YA215A00	IC	ABT1012		
	IC73	X9460A00	IC	R1172H181B-T1-F		
	IC74	X8194A00	IC	R1172H331D-T1-F		
	IC75	X8531A00	IC	TC7WZ32FK		
	IC76-78	XZ283A00	IC	SN74LVTH245APW BUS		
	PN20-22	V9637500	PIN	L=70 #18		
	Q1-8	VQ986700	TR	2SC4081 T106		
	Q200	WQ381000	FET	MCH6336-TL-E		
	Q201-202	VV655300	TR.DGT	DTA144EKA		
	Q203	VR936300	TR	2SA1576A T106		
	Q205-209	VR936300	TR	2SA1576A T106		
	Q400	WQ381000	FET	MCH6336-TL-E		
	Q401	VV655300	TR.DGT	DTA144EKA		
	Q402	WQ381000	FET	MCH6336-TL-E		
	Q403	VV655000	TR.DGT	DTA114EKA		
	Q404	VV655300	TR.DGT	DTA144EKA		
	Q600	VV655200	TR.DGT	DTA143EKA		U
	Q601	VV655700	TR.DGT	DTC144EKA		U
	Q700	WQ381000	FET	MCH6336-TL-E		
	Q701	VR936300	TR	2SA1576A T106		
	Q702	WQ381000	FET	MCH6336-TL-E		
	Q703	VR936300	TR	2SA1576A T106		
	R88	WJ682800	R.MTL.FLM	2.2Ω	1W	
	R201		R.CHP	5.6KΩ	1/16W J	(V665)
	R201		R.CHP	8.2KΩ	1/16W J	(6260)
	R466-467	HV753220	R.CAR.FP	2.2Ω	1/4W	
	R601	WJ683800	R.MTL.FLM	15Ω	1W	
	R607	HV753220	R.CAR.FP	2.2Ω	1/4W	
*	ST1	WR364700	SCR.TERM	M3		
*	ST2	WR364800	SCR.TERM	3.5		
*	XL1	WR725300	RSNR.CRYS	27MHz		
	XL20	WF997400	RSNR.CE	20MHz		

✻ New Parts

	Ref No.	Part No.	Description			Markets
*	XL41	WH455300	RSNR.CRYS	45.1584MHz		U
	XL42	V3625700	RSNR.CRYS	24.576MHz		
	XL70	VZ772700	RSNR.CRYS	28.63636MHz		
*		WQ923400	P.C.B.	OPERATION		U
*		WQ923500	P.C.B.	OPERATION		C
*		WQ923600	P.C.B.	OPERATION		R
*		WQ923700	P.C.B.	OPERATION		AGEFL
	CB401	VQ045400	CN.BS.PIN	25P		
	CB402	VQ044400	CN.BS.PIN	9P		
	CB451	VQ961100	CN.BS.PIN	8P		
	CB452	V9357000	CN	19P TE		
	CB454	VQ962100	CN.BS.PIN	18P		
	CB455	V9357000	CN	19P TE		
	CB456	VQ961800	CN.BS.PIN	15P		
	CB457	VQ961400	CN.BS.PIN	11P		
	CB458	V9357000	CN	19P TE		
	CB459	VQ963300	CN.BS.PIN	12P		
	CB460	VQ963100	CN.BS.PIN	10P		
	CB461	VQ044400	CN.BS.PIN	9P		
	CB462	VK026400	CN.BS.PIN	5P		RAGEFL
*	CB463	VQ586000	CN.JUMPER	52011 10P TE		
	CB477	VB858300	CN.BS.PIN	4P		
	C4001	US063100	C.CE.CHP	1000pF	50V B	
	C4002	US065100	C.CE.CHP	0.1uF	50V B	
	C4003	UR067100	C.EL	10uF	50V	
	C4004	US064100	C.CE.CHP	0.01uF	50V B	
	C4005	UR837220	C.EL	22uF	16V	
	C4006	US062100	C.CE.CHP	100pF	50V B	
	C4007	UR257470	C.EL	47uF	35V	
	C4008	US061330	C.CE.CHP	33pF	50V B	
	C4009-4010	UR267220	C.EL	22uF	50V	
	C4011	UR067100	C.EL	10uF	50V	
	C4012-4013	US135100	C.CE.CHP	0.1uF	16V	
	C4015	UR268220	C.EL	220uF	50V	
	C4016	UM388330	C.EL	330uF	6.3V	
	C4017	US135100	C.CE.CHP	0.1uF	16V	
	C4018	US061680	C.CE.CHP	68pF	50V B	
	C4019	US065100	C.CE.CHP	0.1uF	50V B	
	C4020-4021	US135100	C.CE.CHP	0.1uF	16V	
	C4022	US064100	C.CE.CHP	0.01uF	50V B	
	C4023-4024	US063100	C.CE.CHP	1000pF	50V B	
	C4025-4026	US065100	C.CE.CHP	0.1uF	50V B	
	C4027	US135100	C.CE.CHP	0.1uF	16V	
	C4028	US062100	C.CE.CHP	100pF	50V B	
	C4030	US062100	C.CE.CHP	100pF	50V B	
	C4031	US062470	C.CE.CHP	470pF	50V B	
	C4032	US135100	C.CE.CHP	0.1uF	16V	
	C4033	US063100	C.CE.CHP	1000pF	50V B	
	C4034	UM417100	C.EL	10uF	50V	
	C4035	US135100	C.CE.CHP	0.1uF	16V	
	C4036	US063100	C.CE.CHP	1000pF	50V B	
	C4037	US064100	C.CE.CHP	0.01uF	50V B	
	C4202	US063100	C.CE.CHP	1000pF	50V B	U
	C4205-4211	US062220	C.CE.CHP	220pF	50V B	U

✻ New Parts

P.C.B. OPERATION

Ref No.	Part No.	Description			Markets
C4212	US062100	C. CE. CHP	100pF	50V B	
C4213	UR067100	C. EL	10uF	50V	
C4214	UR037100	C. EL	10uF	16V	
C4215	WJ603500	C. MYLAR	680pF	50V	
C4216	US135100	C. CE. CHP	0. 1uF	16V	
C4217	UR267470	C. EL	47uF	50V	
C4218	US135100	C. CE. CHP	0. 1uF	16V	
C4219	UR267470	C. EL	47uF	50V	
C4220	WJ603500	C. MYLAR	680pF	50V	
C4221	UR037100	C. EL	10uF	16V	
C4222	UR067100	C. EL	10uF	50V	
C4223-4224	US062100	C. CE. CHP	100pF	50V B	
C4225	UR067100	C. EL	10uF	50V	
C4226	UR037100	C. EL	10uF	16V	
C4227	WJ603500	C. MYLAR	680pF	50V	
C4228-4229	US135100	C. CE. CHP	0. 1uF	16V	
C4230	WJ605800	C. MYLAR	0. 047uF	50V J	
C4231-4232	UR067100	C. EL	10uF	50V	
C4233	WJ604700	C. MYLAR	6800pF	50V	
C4234	US062100	C. CE. CHP	100pF	50V B	
C4235	UR067100	C. EL	10uF	50V	
C4236	UR037100	C. EL	10uF	16V	
C4237	WJ603500	C. MYLAR	680pF	50V	
C4238-4239	US135100	C. CE. CHP	0. 1uF	16V	
C4240	WJ603500	C. MYLAR	680pF	50V	
C4241	UR037100	C. EL	10uF	16V	
C4242	UR067100	C. EL	10uF	50V	
C4243-4244	US062100	C. CE. CHP	100pF	50V B	
C4245	UR067100	C. EL	10uF	50V	
C4246	UR037100	C. EL	10uF	16V	
C4247	WJ603500	C. MYLAR	680pF	50V	
C4248-4249	US135100	C. CE. CHP	0. 1uF	16V	
C4250	WJ603500	C. MYLAR	680pF	50V	
C4251	UR037100	C. EL	10uF	16V	
C4252	UR067100	C. EL	10uF	50V	
C4253	US062100	C. CE. CHP	100pF	50V B	
C4301	UR267470	C. EL	47uF	50V	RAGEFL
C4302	UR267470	C. EL	47uF	50V	RAGEFL
C4303	WJ603700	C. MYLAR	1000pF	50V	RAGEFL
C4304	WJ603700	C. MYLAR	1000pF	50V	RAGEFL
C4305	UR267100	C. EL	10uF	50V	RAGEFL
C4306	UR267100	C. EL	10uF	50V	RAGEFL
C4307	WJ605600	C. MYLAR	0. 033uF	50V	RAGEFL
C4308	WJ605600	C. MYLAR	0. 033uF	50V	RAGEFL
C4309	WJ604900	C. MYLAR	9100pF	50V	RAGEFL
C4310	WJ604900	C. MYLAR	9100pF	50V	RAGEFL
C4311	UR218220	C. EL	220uF	6. 3V	RAGEFL
C4312	UR218220	C. EL	220uF	6. 3V	RAGEFL
C4313	WJ603100	C. MYLAR	220pF	50V	RAGEFL
C4314	WJ603100	C. MYLAR	220pF	50V	RAGEFL
C4315-4316	WJ603100	C. MYLAR	220pF	50V	AGEFL
C4317	US064100	C. CE. CHP	0. 01uF	50V B	RAGEFL
C4318-4321	WJ605000	C. MYLAR	0. 01uF	50V J	
C4403	WJ604300	C. MYLAR	3300pF	50V	
C4406	WJ604300	C. MYLAR	3300pF	50V	
C4407	US064100	C. CE. CHP	0. 01uF	50V B	
C4408-4409	US063680	C. CE. CHP	6800pF	50V B	

✻ New Parts

Ref No.	Part No.	Description			Markets
C4412	US135100	C. CE. CHP	0. 1uF	16V	
C4414	US063100	C. CE. CHP	1000pF	50V B	
C4416	US135100	C. CE. CHP	0. 1uF	16V	
D4001-4002	VT332900	DIODE	1SS355		
D4003	VU171900	DIODE. ZENR	UDZ5. 1B	5. 1V	
D4004-4005	VT332900	DIODE	1SS355		
D4006-4007	VU991900	DIODE. ZENR	MAZ8043GHL 4. 4V		
D4008	WG760400	LED	SELK6E10C BLUE		
D4009	WR095700	LED	8224-10SDRD/S530A3		
D4010	VT332900	DIODE	1SS355		
D4011	V2598200	LED	SIR-505ST		
D4012	VT332900	DIODE	1SS355		
D4301	VV659300	DIODE. ZENR	RLZ7. 5B	7. 5V	RAGEFL
D4302	VV659300	DIODE. ZENR	RLZ7. 5B	7. 5V	RAGEFL
D4303	VT332900	DIODE	1SS355		
D4401-4402	VT332900	DIODE	1SS355		
D4403	VU995000	DIODE. ZENR	MAZ8091GML 9. 1V		
D4406-4407	VT332900	DIODE	1SS355		
D4409	VT332900	DIODE	1SS355		
D4411	VT332900	DIODE	1SS355		
IC401	X7378A00	IC	NJM4565M		
IC402	X6386A00	IC	M66003-0131FP		
IC451-454	X7378A00	IC	NJM4565M		
IC461	X3505A00	IC	NJM2068MD-TE2		RAGEFL
JK401	WC814400	JACK. MNI	JY-3554-01-130		
JK451	VV269500	CN	8P DIN		U
JK471	WJ117400	JACK. MINI	OPTIMIZER MIC		
JK472	V9408200	JACK. PHONE	MSJ-064-05B GR		
PJ461	WD599600	JACK. PIN	2P MSP-252V2-06 NI		RAGEFL
PJ472	WJ117500	JACK. PIN	3P		
PN451	V9637500	PIN	L=70 #18		
PN472	V9637500	PIN	L=70 #18		
Q4001-4003	WC529400	TR	KTC3875S Y GR RTK		
Q4004	VV655400	TR. DGT	DTC114EKA		
Q4005	WC397700	TR	2N5401C-AT		
Q4006-4012	WC529400	TR	KTC3875S Y GR RTK		
Q4301	VV655400	TR. DGT	DTC114EKA		
Q4302	VV655000	TR. DGT	DTA114EKA		
R4208-4209	HV753220	R. CAR. FP	2. 2Ω	1/4W	
R4301	HV755470	R. CAR. FP	470Ω	1/4W	RAGEFL
R4302	HV755470	R. CAR. FP	470Ω	1/4W	RAGEFL
R4320-4321	HV757100	R. CAR. FP	10KΩ	1/4W	
R4413-4414	WJ685600	R. MTL. FLM	470Ω	1W J	
RY461	WJ122400	RELAY	981-2A-24DS-SP7		
ST442	WA789600	SCR. TERM	M3		
ST451	WA789600	SCR. TERM	M3		CRAGEFL
ST471	WA789700	SCR. TERM	D3. 5		
SW401-404	WD483100	SW. TACT	SKRGAAD010		
SW406-407	WD483100	SW. TACT	SKRGAAD010		
SW409-413	WD483100	SW. TACT	SKRGAAD010		
SW415	WD483100	SW. TACT	SKRGAAD010		
SW417-419	WD483100	SW. TACT	SKRGAAD010		
SW421-422	WD483100	SW. TACT	SKRGAAD010		
SW424-427	WD483100	SW. TACT	SKRGAAD010		
SW443	V9597100	SW. RT. ENC	EC12E2460802		
SW471	WD483100	SW. TACT	SKRGAAD010		
* TE461	WQ380000	TERM. PUSH	MSP-154V1 4P PUSH		

✻ New Parts

P.C.B. OPERATION and P.C.B. MAIN

	Ref No.	Part No.	Description			Markets
*	U4001	WQ600700	L. DTCT	SM3385VMH6		
	V4001	WQ842100	FL. DSPLY	18-MT-09GNK		
		WA790900	SPACER	4. 6/10/32		
*		WQ918900	P. C. B.	MAIN		U
		WQ918900	P. C. B.	MAIN		C (V665)
*		WQ919400	P. C. B.	MAIN		C (6260)
*		WQ919000	P. C. B.	MAIN		R
*		WQ919100	P. C. B.	MAIN		AF
*		WQ919200	P. C. B.	MAIN		L
	CB152	VQ962900	CN. BS. PIN	8P		
	CB153	VQ963900	CN. BS. PIN	18P		
	CB154	VQ963600	CN. BS. PIN	15P		
	CB155	VQ963200	CN. BS. PIN	11P		
	CB158	WN077700	CLIP. FUSE	CLIP PFC5000-0202F		R
	CB159	WN077700	CLIP. FUSE	CLIP PFC5000-0202F		R
	C1000-1006	UR067100	C. EL	10uF	50V	
	C1007	WJ605000	C. MYLAR	0. 01uF	50V J	
	C1008	WJ603300	C. MYLAR	470pF	50V J	
	C1009	UR277220	C. EL	22uF	63V	
	C1010	WJ603300	C. MYLAR	470pF	50V J	
	C1011	UR297100	C. EL	10uF	100V	
	C1012-1013	WJ603300	C. MYLAR	470pF	50V J	
	C1014-1015	UR297100	C. EL	10uF	100V	
	C1016	UR277220	C. EL	22uF	63V	
	C1017-1019	UR297100	C. EL	10uF	100V	
	C1020-1022	WJ603300	C. MYLAR	470pF	50V J	
	C1023	WJ602900	C. MYLAR	100pF	50V K	
	C1024	UR067330	C. EL	33uF	50V	
	C1025	WJ602900	C. MYLAR	100pF	50V K	
	C1026	UR067330	C. EL	33uF	50V	
	C1027	WJ602900	C. MYLAR	100pF	50V K	
	C1028-1029	UR067330	C. EL	33uF	50V	
	C1030	WJ602900	C. MYLAR	100pF	50V K	
	C1031	UR067330	C. EL	33uF	50V	
	C1032	WJ602900	C. MYLAR	100pF	50V K	
	C1033	UR067330	C. EL	33uF	50V	
	C1034	WJ602900	C. MYLAR	100pF	50V K	
	C1035	UR897100	C. EL	10uF	100V	
	C1036	FG651100	C. CE	10pF	50V	
	C1037	WJ602900	C. MYLAR	100pF	50V K	
	C1038	UR067330	C. EL	33uF	50V	
	C1039	UR866100	C. EL	1uF	50V	
	C1040-1045	FG650500	C. CE	5pF	50V	
	C1046-1052	WJ605800	C. MYLAR	0. 047uF	50V J	
	C1053	UR866470	C. EL	4. 7uF	50V	
	C1054	UR828220	C. EL	220uF	10V	
⚠	C1055-1056	WN524400	C. EL	6800uF	63V	
	C1057-1058	WK041800	C. EL	10uF	16V	
	C1059-1060	UR266100	C. EL	1uF	50V	
	C1061	UR858100	C. EL	100uF	35V	
	C1062	UR048470	C. EL	470uF	25V	
	C1063-1064	WJ611400	C. MYLAR	0. 1uF	100V J	
	C1065	UR049330	C. EL	3300uF	25V	
	C1066	UR049100	C. EL	1000uF	25V	

✻ New Parts

Ref No.	Part No.	Description			Markets
C1067-1068	WN165500	C. PP	0. 022uF	100V	
C1069	US135100	C. CE. CHP	0. 1uF	16V	
C1509	UR067470	C. EL	47uF	50V	
C1510-1512	US135100	C. CE. CHP	0. 1uF	16V	
C1513-1514	US061220	C. CE. CHP	22pF	50V B	
C1515-1516	US135100	C. CE. CHP	0. 1uF	16V	
C1517-1520	US062220	C. CE. CHP	220pF	50V B	
C1521	UR837100	C. EL	10uF	16V	
C1522	US061470	C. CE. CHP	47pF	50V B	
C1523	UR838100	C. EL	100uF	16V	
C1524	US061470	C. CE. CHP	47pF	50V B	
C1525	UR837100	C. EL	10uF	16V	
C1526-1527	UR838100	C. EL	100uF	16V	
C1528-1529	US062220	C. CE. CHP	220pF	50V B	
C1530	UR838100	C. EL	100uF	16V	
C1531	UR837330	C. EL	33uF	16V	
C1532-1533	UR838100	C. EL	100uF	16V	
C1534-1535	US062220	C. CE. CHP	220pF	50V B	
C1536	UR838100	C. EL	100uF	16V	
C1537	WJ605600	C. MYLAR	0. 033uF	50V	
C1538	VR169000	C. MYLAR	0. 33uF	50V	
C1539	WJ604800	C. MYLAR	8200pF	50V	
C1540	WJ605600	C. MYLAR	0. 033uF	50V	
C1541	VR169000	C. MYLAR	0. 33uF	50V	
C1542	US135100	C. CE. CHP	0. 1uF	16V	
C1543	WJ604800	C. MYLAR	8200pF	50V	
C1544	US062220	C. CE. CHP	220pF	50V B	
C1545	US135100	C. CE. CHP	0. 1uF	16V	
C1546	US062220	C. CE. CHP	220pF	50V B	
C1547	UR837100	C. EL	10uF	16V	
C1549	UR837100	C. EL	10uF	16V	
C1551	US062220	C. CE. CHP	220pF	50V B	
C1552-1556	UR267100	C. EL	10uF	50V	
C1557	US062220	C. CE. CHP	220pF	50V B	
C1558-1559	UR267470	C. EL	47uF	50V	
C1560	US062220	C. CE. CHP	220pF	50V B	
C1563	US062220	C. CE. CHP	220pF	50V B	
C1566	US062220	C. CE. CHP	220pF	50V B	
C1568	VR169200	C. MYLAR	0. 47uF	50V	
C1569	US062220	C. CE. CHP	220pF	50V B	
C1570	UR267100	C. EL	10uF	50V	
C1572-1573	US062100	C. CE. CHP	100pF	50V B	
C1574	UR837100	C. EL	10uF	16V	
C1575	US061470	C. CE. CHP	47pF	50V B	
C1576-1577	UR267100	C. EL	10uF	50V	
C1578	US061470	C. CE. CHP	47pF	50V B	
C1579-1580	UR837100	C. EL	10uF	16V	
C1581-1582	US061470	C. CE. CHP	47pF	50V B	
C1583-1584	UR267470	C. EL	47uF	50V	
C1585	UR837100	C. EL	10uF	16V	
C1588-1591	UR267100	C. EL	10uF	50V	
C1594-1595	US062470	C. CE. CHP	470pF	50V B	
C1596	US064100	C. CE. CHP	0. 01uF	50V B	
C1597-1598	US062470	C. CE. CHP	470pF	50V B	
C1599-1602	UR267100	C. EL	10uF	50V	
C1603-1604	US062470	C. CE. CHP	470pF	50V B	
C1605-1606	US064100	C. CE. CHP	0. 01uF	50V B	

✻ New Parts

P.C.B. MAIN and P.C.B. VIDEO

	Ref No.	Part No.	Description		Markets
	C1607	US062470	C. CE. CHP	470pF 50V B	
	C1608	US064100	C. CE. CHP	0.01uF 50V B	URAFL
	C1608	US064100	C. CE. CHP	0.01uF 50V B	C (V665)
	C1609	UR049220	C. EL	2200uF 25V	
	C1611	US064100	C. CE. CHP	0.01uF 50V B	
	D1000-1001	VD631600	DIODE	1SS133,176	
	D1002	VU171900	DIODE. ZENR	UDZ5.1B 5.1V	
	D1003	WC398800	DIODE	KDS160-RTK	
	D1004-1007	VN008700	DIODE	1SS270A	
	D1008	WC398800	DIODE	KDS160-RTK	
	D1009-1016	VN008700	DIODE	1SS270A	
⚠	D1017	WA653200	DIODE. BRG	TS6P03G 6A 200V	
⚠	D1018	WH487300	DIODE. BRG	RS203M 2.0A 200V	
	D1019	VD631600	DIODE	1SS133,176	
	D1503-1504	VG438400	DIODE. ZENR	MTZJ6.8C 6.8V	
⚠	F1000	VV071700	FUSE	3.15A 250V	R
⚠	IC100	X8190A00	IC	STK433-330-E	
⚠	IC101-102	X7427A00	IC	STK433-130-E	
	IC103	XJ608A00	IC	NJM7812FA	
	IC104	X4154A00	IC	KIA7912PI	
	IC105	YA381A00	IC	LM19CIZ/LF THERMAL	
	IC152	XZ509A00	IC	TC74VHCU04FT INVER	
	IC153	YA361A00	IC	R2A15220FP	
	IC154	X7378A00	IC	NJM4565M(TE1)	
	PJ150	V5715300	JACK. PIN	2P OR/OR	
	PJ151	V7046800	JACK. PIN	6P MSP-246V1-01NI	
	PJ152-153	V7046700	JACK. PIN	4P MSP-244V1-01NI	
	PJ154	WG674900	JACK. PIN	4P	
	PJ155	V7046700	JACK. PIN	4P MSP-244V1-01NI	
	PJ157	V7046700	JACK. PIN	4P MSP-244V1-01NI	
	PJ158	WG674900	JACK. PIN	4P	
	PJ159	V7189700	JACK. PIN	1P	URAFL
	PJ159	V7189700	JACK. PIN	1P	C (V665)
	PN101-102	V8637500	PIN	L=50 #18	
⚠	Q1000	WC398400	TR	2N5551C-AT	
⚠	Q1001-1002	VC614000	TR	2SB1274 Q,R,S	
⚠	Q1003	WC398400	TR	2N5551C-AT	
⚠	Q1004-1005	WC397700	TR	2N5401C-AT	
⚠	Q1006-1012	WC398400	TR	2N5551C-AT	
⚠	Q1013	WC397700	TR	2N5401C-AT	
	Q1014	iC181510	TR	2SC1815 Y	
	Q1015	WC435000	TR. DGT	KRC102S-RTK	
	Q1016	WC434900	TR. DGT	KRA104S-RTK	
	Q1500-1504	VZ725900	TR	2SD1938F S,T	
	Q1507-1514	VZ725900	TR	2SD1938F S,T	
	Q1519-1526	VZ725900	TR	2SD1938F S,T	
⚠	R1012-1014	HV753220	R. CAR. FP	2.2Ω 1/4W	
⚠	R1017	HV755560	R. CAR. FP	560Ω 1/4W	
⚠	R1029	HV754100	R. CAR. FP	10Ω 1/4W	
⚠	R1032	HV754100	R. CAR. FP	10Ω 1/4W	
⚠ *	R1046	WP839400	R. WW	0.22+0.22 3W	
⚠ *	R1048-1049	WP839400	R. WW	0.22+0.22 3W	
⚠ *	R1056	WP839400	R. WW	0.22+0.22 3W	
⚠ *	R1060	WP839400	R. WW	0.22+0.22 3W	
⚠ *	R1067-1068	WP839400	R. WW	0.22+0.22 3W	
	R1086	HV754100	R. CAR. FP	10Ω 1/4W	
	R1089-1090	HV754100	R. CAR. FP	10Ω 1/4W	

✻ New Parts

	Ref No.	Part No.	Description		Markets
	R1092	HV754100	R. CAR. FP	10Ω 1/4W	
	R1095	HV754100	R. CAR. FP	10Ω 1/4W	
	R1098	HV754100	R. CAR. FP	10Ω 1/4W	
	R1101	HV754100	R. CAR. FP	10Ω 1/4W	
⚠	R1103	WJ683200	R. MTL. FLM	4.7Ω 1W	
⚠	R1107-1108	WJ683200	R. MTL. FLM	4.7Ω 1W	
⚠	R1110-1111	WJ683200	R. MTL. FLM	4.7Ω 1W	
⚠	R1113-1114	WJ683200	R. MTL. FLM	4.7Ω 1W	
	R1504	HV753100	R. CAR. FP	1Ω 1/4W	
	R1664-1665	HV755100	R. CAR. FP	100Ω 1/4W	
	R1666-1667	WJ684700	R. MTL. FLM	82Ω 1W	
	RY100	WE648700	RELAY	DC DH24D2-0-Q	
*	ST100	WR364700	SCR. TERM	M3	
	ST101	WA789700	SCR. TERM	D3.5	
⚠	SW101	WB493700	VOLT. SELCT	R8140246	R
⚠	SW101	WD073700	VOLT. SELCT	R8140254	L
	U1500-1501	WN333200	CN. PHOTO. R	1P JSR1165	
		WE774200	SCR. BND. HD	3x10 MFZN2W3	
*		WQ920800	P. C. B.	VIDEO	U
*		WQ920900	P. C. B.	VIDEO	C (V665)
*		WQ921400	P. C. B.	VIDEO	C (6260)
*		WQ921000	P. C. B.	VIDEO	R
*		WQ921100	P. C. B.	VIDEO	A
*		WQ921200	P. C. B.	VIDEO	F
*		WQ921300	P. C. B.	VIDEO	L
	CB303	VQ961500	CN. BS. PIN	12P	
	CB305	VQ047000	CN. BS. PIN	6P	
	CB321	VM859500	CN. BS. PIN	11P	
	CB332	VQ961300	CN. BS. PIN	10P	
	CB333	VK024700	CN. BS. PIN	3P	
	CB342	VQ585500	CN. JUMPER	5P	
	CB343	VZ130900	CN. JUMPER	4P	
	CB344	VQ585700	CN. JUMPER	7P	
	CB345	VF728300	CN	6P	
	CB349	VQ047700	CN. BS. PIN	22P	
	CB371	VG879900	CN. BS. PIN	2P	
	CB372-373	WN103000	CLIP. FUSE	TP00351-31	
	CB378	VG879900	CN. BS. PIN	2P	RL
	CB379	VQ961000	CN. BS. PIN	7P	
	CB381	VQ962800	CN. BS. PIN	7P	
	CB391	VQ044100	CN. BS. PIN	5P	F
	C3001	US062100	C. CE. CHP	100pF 50V B	
	C3002-3004	US060800	C. CE. CHP	8pF 50V B	
	C3005	US062100	C. CE. CHP	100pF 50V B	
	C3006	UR837470	C. EL	47uF 16V	
	C3007-3008	US135100	C. CE. CHP	0.1uF 16V	
	C3009	UR837470	C. EL	47uF 16V	
	C3011	US060300	C. CE. CHP	3pF 50V B	
	C3012	UR837470	C. EL	47uF 16V	
	C3013-3014	US060300	C. CE. CHP	3pF 50V B	
	C3015-3017	US135100	C. CE. CHP	0.1uF 16V	
	C3018	UR837100	C. EL	10uF 16V	
	C3019	US135100	C. CE. CHP	0.1uF 16V	
	C3020	UR837100	C. EL	10uF 16V	

✻ New Parts

P.C.B. VIDEO

Ref No.	Part No.	Description			Markets
C3021-3025	US135100	C. CE. CHP	0. 1uF	16V	
C3026	UR837100	C. EL	10uF	16V	
C3027	WD758300	C. CE. CHP	10uF	10V	
C3029	WD758300	C. CE. CHP	10uF	10V	
C3031	WD758300	C. CE. CHP	10uF	10V	
C3033	UR837470	C. EL	47uF	16V	
C3043-3044	US135100	C. CE. CHP	0. 1uF	16V	
C3045	UR837470	C. EL	47uF	16V	
C3047	US135100	C. CE. CHP	0. 1uF	16V	
C3048	UR838220	C. EL	220uF	16V	
C3050	US135100	C. CE. CHP	0. 1uF	16V	
C3051	UR838220	C. EL	220uF	16V	
C3052-3053	UR838100	C. EL	100uF	16V	
C3054	US135100	C. CE. CHP	0. 1uF	16V	
C3055	US061120	C. CE. CHP	12pF	50V B	UCR
C3055	US060500	C. CE. CHP	5pF	50V B	AFL
C3056	US061180	C. CE. CHP	18pF	50V B	UCR
C3056	US060700	C. CE. CHP	7pF	50V B	AFL
C3057	UR866100	C. EL	1uF	50V	
C3058	US060600	C. CE. CHP	6pF	50V B	UCR
C3058	US060400	C. CE. CHP	4pF	50V B	AFL
C3059	US061240	C. CE. CHP	24pF	50V B	
C3061	US135100	C. CE. CHP	0. 1uF	16V	
C3062	US061240	C. CE. CHP	24pF	50V B	
C3063	US135100	C. CE. CHP	0. 1uF	16V	
C3065	UR837470	C. EL	47uF	16V	
C3067-3069	US135100	C. CE. CHP	0. 1uF	16V	
C3072	US135100	C. CE. CHP	0. 1uF	16V	
C3073	UR838220	C. EL	220uF	16V	
C3074	US061100	C. CE. CHP	10pF	50V B	
C3076	UR837100	C. EL	10uF	16V	
C3077	US135100	C. CE. CHP	0. 1uF	16V	
C3079	US135100	C. CE. CHP	0. 1uF	16V	
C3080-3085	WD758300	C. CE. CHP	10uF	10V	
C3201	US061270	C. CE. CHP	27pF	50V B	F
C3202	UR837100	C. EL	10uF	16V	F
C3203	US061270	C. CE. CHP	27pF	50V B	F
C3204-3205	US135100	C. CE. CHP	0. 1uF	16V	F
C3206	US062560	C. CE. CHP	560pF	50V B	F
C3207-3208	US062330	C. CE. CHP	330pF	50V B	F
C3209	US135100	C. CE. CHP	0. 1uF	16V	F
C3211	UR837470	C. EL	47uF	16V	F
C3212-3214	UR837470	C. EL	47uF	16V	
C3215	US062100	C. CE. CHP	100pF	50V B	
C3217-3218	US062100	C. CE. CHP	100pF	50V B	
C3221	US062100	C. CE. CHP	100pF	50V B	
C3303-3305	WJ611400	C. MYLAR	0. 1uF	100V J	
C3306	UR868100	C. EL	100uF	50V	
C3307	WG601900	C. EL	10000uF	16V	
C3309	WG601900	C. EL	10000uF	16V	
C3310	UR039470	C. EL	4700uF	16V	
C3311	UR866100	C. EL	1uF	50V	
C3312	UR837220	C. EL	22uF	16V	
C3314	UR866100	C. EL	1uF	50V	
C3317	UR866100	C. EL	1uF	50V	
C3317	UR866100	C. EL	1uF	50V	U
C3318	UR837470	C. EL	47uF	16V	

✻ New Parts

Ref No.	Part No.	Description			Markets
C3318	UR837470	C. EL	47uF	16V	U
C3319	UR866100	C. EL	1uF	50V	
C3320-3321	UR837330	C. EL	33uF	16V	
C3322	UR867100	C. EL	10uF	50V	
C3323	UR878100	C. EL	100uF	63V	
C3403-3409	WJ605000	C. MYLAR	0. 01uF	50V J	
C3410-3411	WJ604500	C. MYLAR	4700pF	50V	
C3412-3416	WJ605200	C. MYLAR	0. 015uF	50V	
C3603-3604	US063100	C. CE. CHP	1000pF	50V B	
C3606	US064100	C. CE. CHP	0. 01uF	50V B	
C3701	WQ852400	C. POL. MTL	0. 022uF	630V	
⚠	C3702	WK005000	C. CE. SAFTY	0. 047uF	275V	
✻	C3703	WR082000	C. EL	100uF	220V	UC
✻	C3703	WR082100	C. EL	100uF	400V	R
✻	C3703	WQ852500	C. EL	68uF	400V	AFL
✻	C3704	WR182800	C. CE. CHP	2200pF	250V	
	C3705	US065100	C. CE. CHP	0. 1uF	50V B	
⚠ ✻	C3706	WQ939400	C. CE. SAFTY	0. 01uF	250V	
	C3707	UR837470	C. EL	47uF	16V	
	C3708	UR867100	C. EL	10uF	50V	
⚠ ✻	C3709	WQ902200	C. CE. SAFTY	2200pF	250V	
	C3710-3711	UR866100	C. EL	1uF	50V	
	C3712-3713	WH777900	C. EL	1000uF	35V	
	C3714	US046100	C. CE. CHP	1uF	25V	
	C3715	US135100	C. CE. CHP	0. 1uF	16V	
	C3716	WH771300	C. EL	100uF	10V	
✻	C3717	WQ852400	C. POL. MTL	0. 022uF	630V	
⚠ ✻	C3720-3721	WQ902300	C. CE. SAFTY	1000pF	250V	
	C3801	US064100	C. CE. CHP	0. 01uF	50V B	
	C3802	V7887800	C. EL	1uF	50V	
	C3803	WJ335500	C. EL	2. 2uF	50V	
	C3804	WJ603700	C. MYLAR	1000pF	50V	
	C3805	US064100	C. CE. CHP	0. 01uF	50V B	
	C3806-3807	WD758300	C. CE. CHP	10uF	10V	
	C3901	US064100	C. CE. CHP	0. 01uF	50V B	F
	C3902	US062120	C. CE. CHP	120pF	50V B	F
	C3903	US062220	C. CE. CHP	220pF	50V B	F
	C3904	US135100	C. CE. CHP	0. 1uF	16V	F
	C3905	UR837470	C. EL	47uF	16V	F
	C3906	UR837100	C. EL	10uF	16V	F
	C3907	UR818470	C. EL	470uF	6. 3V	F
	C3908	US064100	C. CE. CHP	0. 01uF	50V B	F
	D3005-3007	VT332900	DIODE	1SS355		
	D3201	VG436100	DIODE. ZENR	MTZJ3. 3B	3. 3V	F
	D3202	VG439500	DIODE. ZENR	MTZJ10B	10V	
	D3302	WH487300	DIODE. BRG	RS203M 2. 0A 200V		
	D3304	WH487300	DIODE. BRG	RS203M 2. 0A 200V		
	D3305	VG444700	DIODE. ZENR	MTZ J 39D 39. 0V TP		
	D3307	VG440800	DIODE. ZENR	MTZJ15B	15V	
	D3309	VT332900	DIODE	1SS355		
	D3309	VT332900	DIODE	1SS355		U
	D3310-3311	VT332900	DIODE	1SS355		
	D3311	VT332900	DIODE	1SS355		U
	D3312	VV307700	DIODE	1N4002S		
	D3320	VG437400	DIODE. ZENR	MTZJ5. 1B	5. 1V	
	D3403-3407	VT332900	DIODE	1SS355		
	D3601-3602	VT332900	DIODE	1SS355		

✻ New Parts

P.C.B. VIDEO

	Ref No.	Part No.	Description		Markets
⚠	D3701	WH471700	DIODE. BRG	DB105 1A 600V	
	D3703	WN672400	DIODE. ZENR	P6KE200A 200V	
	D3705	WQ647500	DIODE	HT18G	
	D3706-3707	VD631600	DIODE	1SS133, 176	
	D3708	VT332900	DIODE	1SS355	
	D3709	WR007000	DIODE. SCHO	10A 40V SG10SC4M	
	D3710	VG442200	DIODE. ZENR	MTZJ22C 22V	
	D3801-3805	VT332900	DIODE	1SS355	
	D3901-3902	VT332900	DIODE	1SS355	F
	F3701	WB221200	FUSE	T6A 125V	UC
	F3701	WB760600	FUSE	T6. 3A 250V	R
	F3701	VV071700	FUSE	3. 15A 250V	AFL
	IC301-303	XY879A00	IC	TC74HC4053AF(EL)	
	IC305	X6742A00	IC	LA73050-TLM-E	
	IC306	X2904A00	IC	NJM2581M VIDEO AMP	
	IC307	XY549A00	IC	TC74HC4051AFEL	
	IC308	X7779A00	IC	LC709004A-TLM-E	
	IC309	X7818A00	IC	LC74782JM-8A16-TLM	
	IC310	X8875A00	IC	FHP3350IM14X	
*	IC321	X8235A00	IC	LC72725KM	F
	IC331	X8276A00	IC	NJM2396F05	
	IC333	X8035A00	IC	BA00JC5WT-V5	U
	IC334	X6143A00	IC	NJM2388F05 5. 0V	
*	IC371	YA565A00	IC	TOP254PN SW	
⚠ *	IC372	WQ867100	PHOT. CPL	EL816(M)(C)	
*	IC374	YA276A00	IC	TL431AC 2. 5-36V	
⚠ *	IC375	WQ867100	PHOT. CPL	EL816(M)(C)	
	IC391	XZ509A00	IC	TC74VHCU04FT INVER	F
	JK321	V9435700	JACK. MNI	MSJ-035-12APC	URAFL
	JK321	V9435700	JACK. MNI	MSJ-035-12APC	C (V665)
	JK361-362	V9435700	JACK. MNI	MSJ-035-12APC	
	JK391	V6931000	CN. DIN	1P YKF51-5506	F
	PJ301	WG505100	JACK. PIN	6P	
	PJ302	V7189800	JACK. PIN	1P	
	PJ303	WH381400	JACK. PIN	3P JACK G, B, R	
	PJ304	V7189800	JACK. PIN	1P	
	PJ305-306	V7190000	JACK. PIN	2P	
	PN341-343	V9637500	PIN	L=70 #18	
	PN381	V9637500	PIN	L=70 #18	
	Q3001	VR936300	TR	2SA1576A T106	
	Q3002-3003	VV556400	TR	2SC2412K Q, R, S	
	Q3201	iC174020	TR	2SC1740S QRS	F
	Q3203	WJ173600	TR	2SC1815Y TP	
	Q3204	WJ173500	TR	2SA1015Y Y TP	URAFL
	Q3204	WJ173500	TR	2SA1015Y Y TP	C (V665)
	Q3205	WJ173600	TR	2SC1815Y TP	URAFL
	Q3205	WJ173600	TR	2SC1815Y TP	C (V665)
	Q3206	WG538600	TR	KTA1046-Y-U/P	URAFL
	Q3206	WG538600	TR	KTA1046-Y-U/P	C (V665)
	Q3207	WJ173600	TR	2SC1815Y TP	URAFL
	Q3207	WJ173600	TR	2SC1815Y TP	C (V665)
	Q3302	WJ173500	TR	2SA1015Y Y TP	
	Q3303	WG538600	TR	KTA1046-Y-U/P	
	Q3304	WJ173500	TR	2SA1015Y Y TP	
	Q3305	WJ173600	TR	2SC1815Y TP	
	Q3306	WC397700	TR	2N5401C-AT	
	Q3405	VV655400	TR. DGT	DTC114EKA	

* New Parts

	Ref No.	Part No.	Description		Markets
	Q3406	VV655000	TR. DGT	DTA114EKA	
	Q3407	VV655400	TR. DGT	DTC114EKA	
	Q3408	VV655000	TR. DGT	DTA114EKA	
	Q3409	VV655400	TR. DGT	DTC114EKA	
	Q3410	VV655000	TR. DGT	DTA114EKA	
	Q3411	VV655400	TR. DGT	DTC114EKA	
	Q3412	VV655000	TR. DGT	DTA114EKA	
	Q3413	VV655400	TR. DGT	DTC114EKA	
	Q3414	VV655000	TR. DGT	DTA114EKA	
	Q3801-3802	WJ173600	TR	2SC1815Y TP	
	Q3803	VV655700	TR. DGT	DTC144EKA	
	R3021	HV753100	R. CAR. FP	1Ω 1/4W	
	R3025	HV753100	R. CAR. FP	1Ω 1/4W	
	R3046-3049	HV753100	R. CAR. FP	1Ω 1/4W	
	R3058-3061	HV753100	R. CAR. FP	1Ω 1/4W	
	R3083	HV755470	R. CAR. FP	470Ω 1/4W	
	R3208	HV755680	R. CAR. FP	680Ω 1/4W	F
	R3210	HV754180	R. CAR. FP	18Ω 1/4W	
	R3213	HV753560	R. CAR. FP	5. 6Ω 1/4W	URAFL
	R3213	HV753560	R. CAR. FP	5. 6Ω 1/4W	C (V665)
	R3315-3316	HV756470	R. CAR. FP	4. 7KΩ 1/4W	
	R3325	HV756220	R. CAR. FP	2. 2KΩ 1/4W	
	R3326	HV753220	R. CAR. FP	2. 2Ω 1/4W	
	R3330	HV753100	R. CAR. FP	1Ω 1/4W	
	R3403-3406	HV757100	R. CAR. FP	10KΩ 1/4W	
	R3910	HV753220	R. CAR. FP	2. 2Ω 1/4W	F
	RY341-345	WJ122400	RELAY	981-2A-24DS-SP7	
⚠	RY371	WQ804100	RELAY	DC DLS5D1-0(M)0. 25	
	ST331-332	WA789700	SCR. TERM	D3. 5	
	ST361-362	WA789700	SCR. TERM	D3. 5	
	ST371	WA789700	SCR. TERM	D3. 5	
	ST381-383	WA789700	SCR. TERM	D3. 5	
⚠ *	T3701	YA507A00	TRANS. PWR		
	TE341	WK560800	TERM. SP	4P MST-204V1-01 NC	UCRA
	TE341	WK560900	TERM. SP	4P MST-204V1-01 WC	FL
	TE342	WK561000	TERM. SP	6P MST-207V1-01 NC	UCRA
	TE342	WK561100	TERM. SP	6P MST-207V1-01 WC	FL
	TE343	WK560800	TERM. SP	4P MST-204V1-01 NC	UCRA
	TE343	WK560900	TERM. SP	4P MST-204V1-01 WC	FL
	XL301	VV949800	RSNR. CRYS	14. 31818MHz	UCR
	XL301	WK196100	RSNR. CRYS	17. 734475MHz	AFL
	XL321	V2731100	RSNR. CRYS	4. 332M HC-49/U	F
		WE774200	SCR. BND. HD	3x10 MFZN2W3	

* New Parts

Carbon Resistors

Value	**1/4W** Type Part No.	**1/6W** Type Part No.	Value	**1/4W** Type Part No.	**1/6W** Type Part No.
1.0 Ω	HJ35 3100	HF85 3100	11 kΩ	HF45 7110	HF45 7110
1.8 Ω	HJ35 3180	*	12 kΩ	HJ35 7120	HF85 7120
2.2 Ω	HJ35 3220	HF85 3220	13 kΩ	HF45 7130	HF45 7130
3.3 Ω	HJ35 3330	HF85 3330	15 kΩ	HF45 7150	HF45 7150
4.7 Ω	HJ35 3470	HF85 3470	18 kΩ	HF45 7180	HF45 7180
5.6 Ω	HJ35 3560	HF85 3560	22 kΩ	HF45 7220	HF45 7220
10 Ω	HF45 4100	HF45 4100	24 kΩ	HF45 7240	HF45 7240
15 Ω	HJ35 4150	HF85 4150	27 kΩ	HJ35 7270	HF85 7270
22 Ω	HF45 4220	HF45 4220	30 kΩ	HF45 7300	HF45 7300
27 Ω	HJ35 4270	HF85 4270	33 kΩ	HF45 7330	HF45 7330
33 Ω	HF45 4330	HF45 4330	36 kΩ	HF45 7360	HF45 7360
39 Ω	HJ35 4470	HF85 4390	39 kΩ	HF45 7390	HF45 7390
47 Ω	HF45 4470	HF45 4470	47 kΩ	HF45 7470	HF45 7470
56 Ω	HF45 4560	HF45 4560	51 kΩ	HF45 7510	HF45 7510
68 Ω	HF45 4680	HF45 4680	56 kΩ	HF45 7560	HF45 7560
75 Ω	HF45 4750	HF45 4750	62 kΩ	HF45 7620	HF45 7620
82 Ω	HF45 4820	HF45 4820	68 kΩ	HF45 7680	HF45 7680
91 Ω	HF45 4910	HF45 4910	82 kΩ	HF45 7820	HF45 7820
100 Ω	HF45 5100	HF45 5100	91 kΩ	HF45 7910	HF45 7910
110 Ω	HJ35 5110	HF85 5110	100 kΩ	HF45 8100	HF45 8100
120 Ω	HF45 5120	HF45 5120	110 kΩ	HF45 8110	HF45 8110
150 Ω	HF45 5150	HF45 5150	120 kΩ	HF45 8120	HF45 8120
160 Ω	HJ35 5160	*	150 kΩ	HF45 8150	HF45 8150
180 Ω	HF45 5180	HF45 5180	180 kΩ	HF45 8180	HF45 8180
200 Ω	HF45 5200	HF45 5200	220 kΩ	HJ35 8220	HF85 8220
220 Ω	HF45 5220	HF45 5220	270 kΩ	HF45 8270	HF45 8270
270 Ω	HF45 5270	HF45 5270	300 kΩ	HF45 8300	HF45 8300
330 Ω	HF45 5330	HF45 5330	330 kΩ	HF45 8330	HF45 8330
390 Ω	HF45 5390	HF45 5390	390 kΩ	HJ35 8390	HF85 8390
430 Ω	HF45 5430	HF45 5430	470 kΩ	HF45 8470	HF45 8470
470 Ω	HF45 5470	HF45 5470	560 kΩ	HJ35 8560	HF85 8560
510 Ω	HF45 5510	HF45 5510	680 kΩ	HJ35 8680	HF85 8680
560 Ω	HF45 5560	HF45 5560	820 kΩ	HJ35 8820	HF85 8820
680 Ω	HF45 5680	HF45 5680	1.0 MΩ	HF45 9100	HF45 9100
820 Ω	HF45 5820	HF45 5820	1.2 MΩ	HJ35 9120	*
910 Ω	HF45 5910	HF45 5910	1.5 MΩ	HJ35 9150	HF85 9150
1.0 kΩ	HF45 6100	HF45 6100	1.8 MΩ	HJ35 9180	HF85 9180
1.2 kΩ	HF45 6120	HF45 6120	2.2 MΩ	HJ35 9220	HF85 9220
1.5 kΩ	HF45 6150	HF45 6150	3.3 MΩ	HJ35 9330	HF85 9330
1.8 kΩ	HF45 6180	HF45 6180	3.9 MΩ	HJ35 9390	*
2.0 kΩ	HJ35 6200	HF85 6200	4.7 MΩ	HJ35 9470	HF85 9470
2.2 kΩ	HF45 6220	HF45 6220			
2.4 kΩ	HJ35 6240	HF85 6240			
2.7 kΩ	HF45 6270	HF45 6270			
3.0 kΩ	HF45 6300	HF45 6300			
3.3 kΩ	HF45 6330	HF45 6330			
3.6 kΩ	HJ35 6360	HF85 6360			
3.9 kΩ	HF45 6390	HF45 6390			
4.7 kΩ	HF45 6470	HF45 6470			
5.1 kΩ	HF45 6510	HF45 6510			
5.6 kΩ	HF45 6560	HF45 6560			
6.8 kΩ	HF45 6680	HF45 6680			
8.2 kΩ	HF45 6820	HF45 6820			
9.1 kΩ	HF45 6910	HF45 6910			
10 kΩ	HF45 7100	HF45 7100			

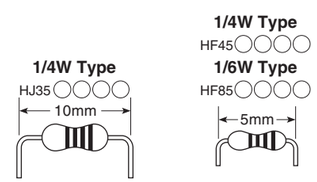

* : Not available

- **OVERALL ASS'Y**

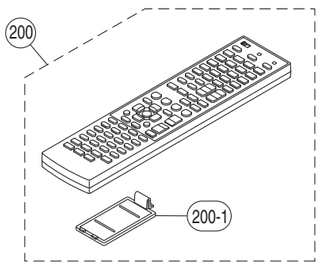

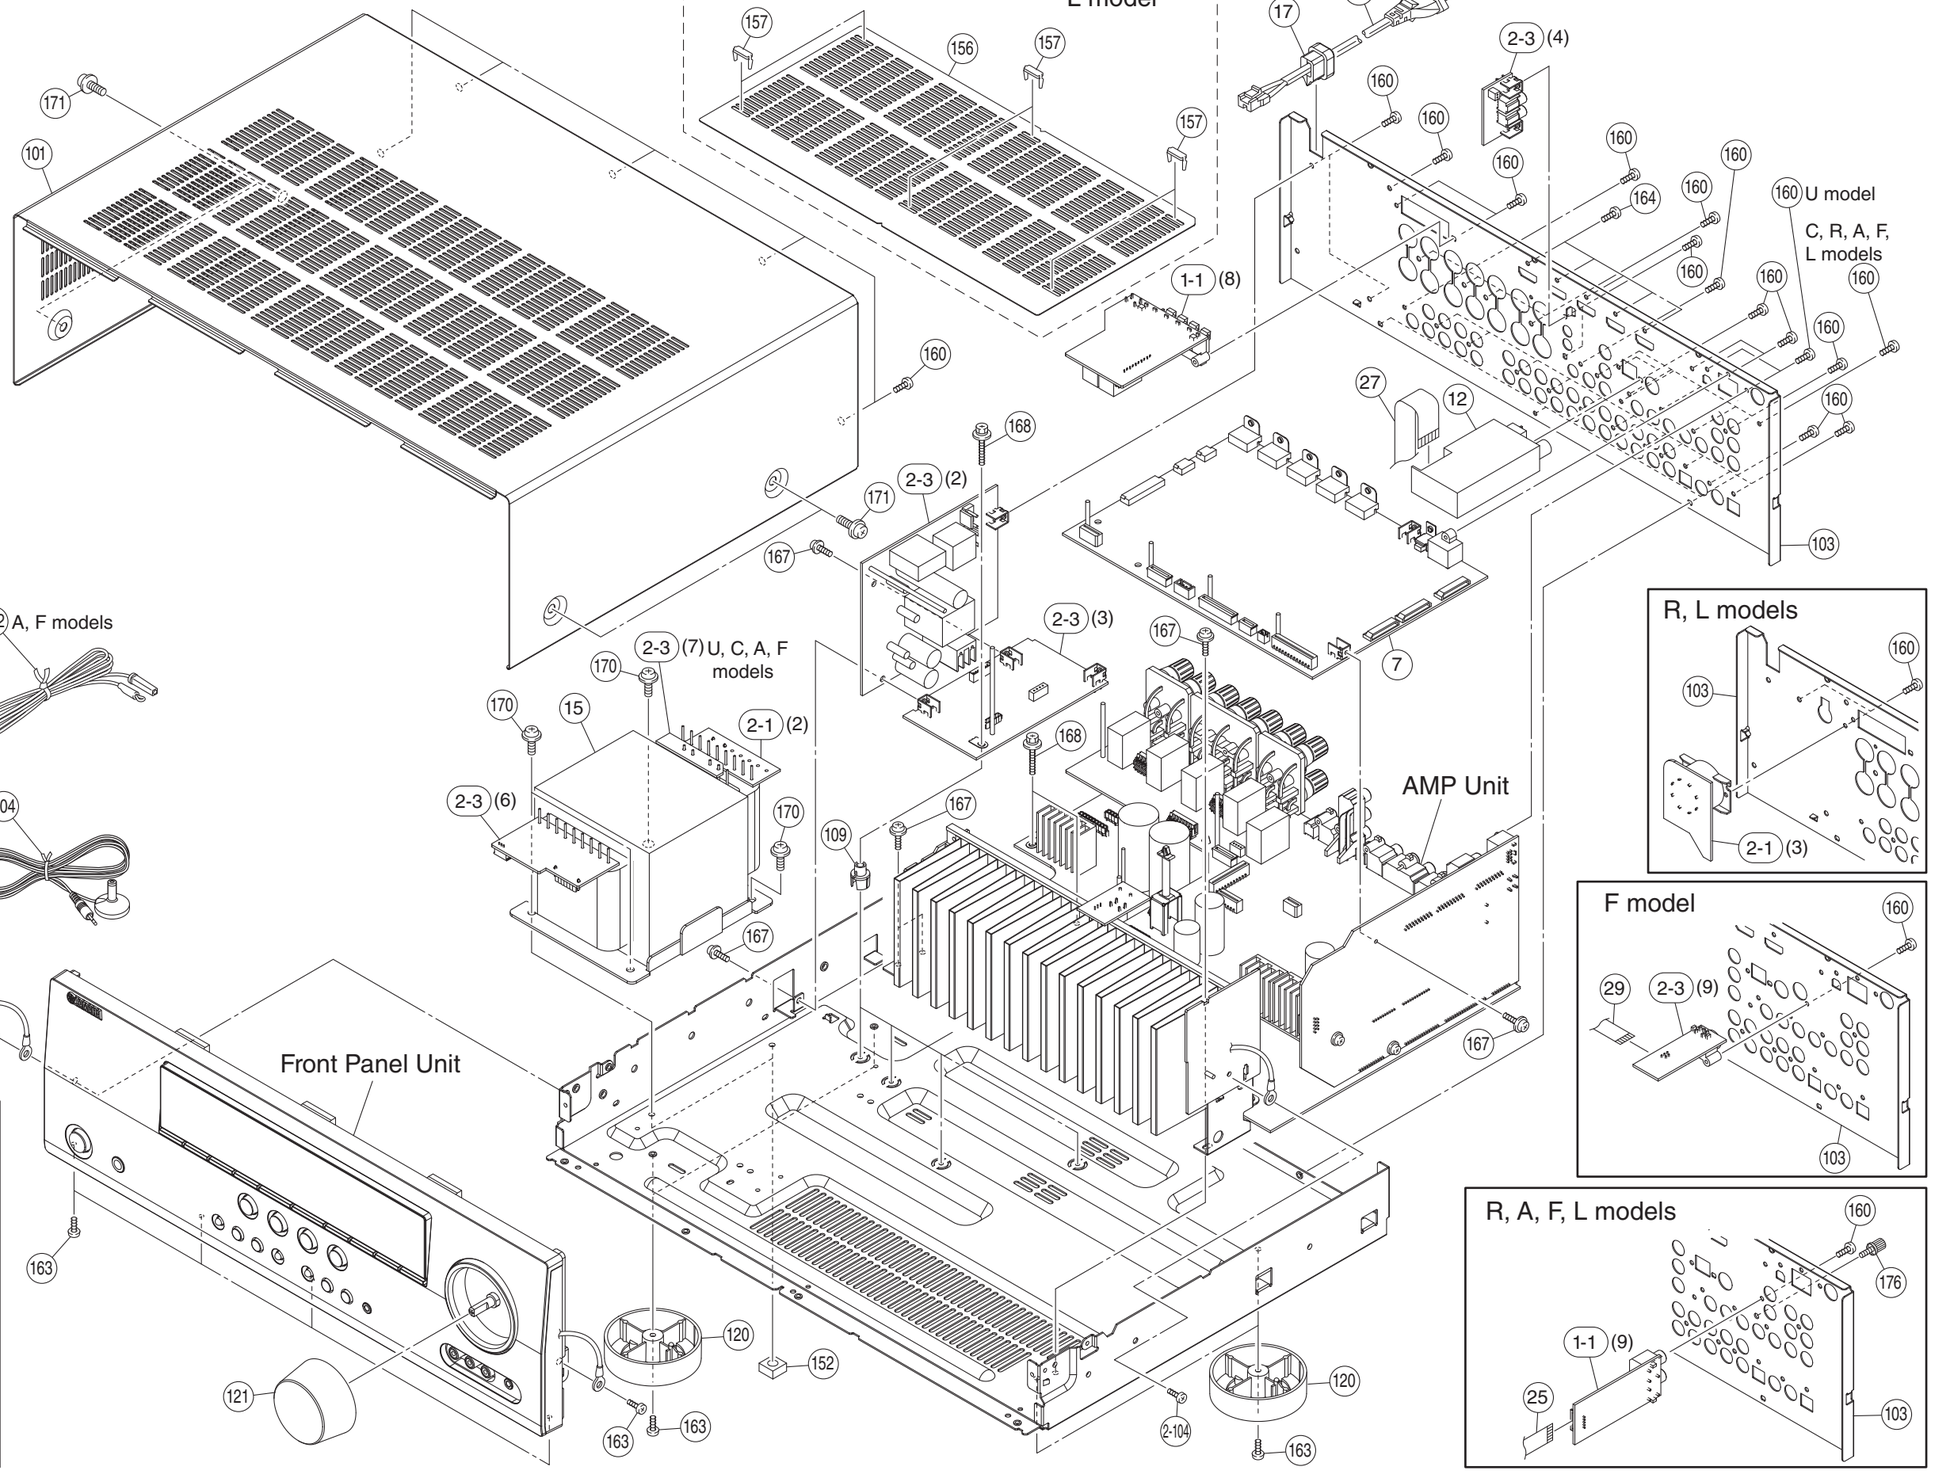

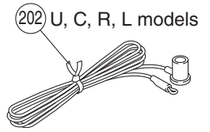

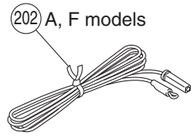

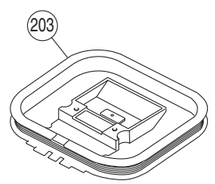

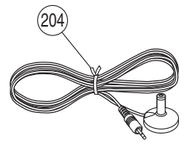

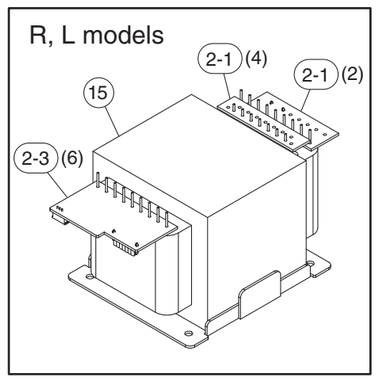

	Ref No.	Part No.	Description		Remarks	Markets
*	1-1	WQ923400	P.C.B. ASS'Y	OPERATION		U
*	1-1	WQ923500	P.C.B. ASS'Y	OPERATION		C
*	1-1	WQ923600	P.C.B. ASS'Y	OPERATION		R
*	1-1	WQ923700	P.C.B. ASS'Y	OPERATION		AFL
*	2-1	WQ918900	P.C.B. ASS'Y	MAIN		U
*	2-1	WQ918900	P.C.B. ASS'Y	MAIN	V665	C
*	2-1	WQ919400	P.C.B. ASS'Y	MAIN	6260	C
*	2-1	WQ919000	P.C.B. ASS'Y	MAIN		R
*	2-1	WQ919100	P.C.B. ASS'Y	MAIN		AF
*	2-1	WQ919200	P.C.B. ASS'Y	MAIN		L
*	2-3	WQ920800	P.C.B. ASS'Y	VIDEO		U
*	2-3	WQ920900	P.C.B. ASS'Y	VIDEO	V665	C
*	2-3	WQ921400	P.C.B. ASS'Y	VIDEO	6260	C
*	2-3	WQ921000	P.C.B. ASS'Y	VIDEO		R
*	2-3	WQ921100	P.C.B. ASS'Y	VIDEO		A
*	2-3	WQ921200	P.C.B. ASS'Y	VIDEO		F
*	2-3	WQ921300	P.C.B. ASS'Y	VIDEO		L
	2-104	WF002600	PW HEAD B-TIGHT SCREW	3x8 MFZN2W3		
*	7	WQ923900	P.C.B. ASS'Y	DIGITAL	V665	U
*	7	WQ925100	P.C.B. ASS'Y	DIGITAL	6260	U
*	7	WQ924000	P.C.B. ASS'Y	DIGITAL	V665	CRAL
*	7	WQ925200	P.C.B. ASS'Y	DIGITAL	6260	C
*	7	WQ924100	P.C.B. ASS'Y	DIGITAL	V665	F
*	12	WQ756600	AM/FM TUNER	FAEH06-A		UCRL
*	12	WQ756700	AM/FM TUNER	FAEH06-E		AGEF
*	12	WB877300	AM/FM TUNER	FAE381-A07F		
⚠ *	15	YA520A00	POWER TRANSFORMER			UC
⚠ *	15	YA521A00	POWER TRANSFORMER			RL
⚠ *	15	YA523A00	POWER TRANSFORMER			A
⚠ *	15	YA524A00	POWER TRANSFORMER			F
⚠ *	16	WB120500	POWER CABLE	2m		UC
⚠ *	16	WC992700	POWER CABLE	2m		R
⚠ *	16	WC743700	POWER CABLE	2m		A
⚠ *	16	WB212300	POWER CABLE	2m		FL
	17	V2438700	CORD STOPPER	10P1		
	25	MF113100	FLEXIBLE FLAT CABLE	13P 100mm P=1.25		
	26	MF121120	FLEXIBLE FLAT CABLE	21P 120mm P=1.25		
*	27	WR384700	FLEXIBLE FLAT CABLE	11P 100mm P=1.25		
*	29	WR378500	FLEXIBLE FLAT CABLE	5P 180mm P=1.25		F
*	101	WQ665800	TOP COVER		BL	
*	101	WQ666000	TOP COVER		TI	
*	103	WQ685300	REAR PANEL		V665	U
*	103	WQ685500	REAR PANEL		6260	U
*	103	WQ685400	REAR PANEL		V665	C
*	103	WQ685600	REAR PANEL		6260	C
*	103	WQ841200	REAR PANEL		V665	R
*	103	WQ841300	REAR PANEL		V665	A
*	103	WQ841400	REAR PANEL		V665	F
*	103	WQ841500	REAR PANEL		V665	L
	109	WH242000	SUPPORT H8			
	120	WA790500	LEG	D60/H21 HS		
*	121	WQ822700	KNOB D50		BL	
*	121	WQ823000	KNOB D50		TI	

※ New Parts

	Ref No.	Part No.	Description		Remarks	Markets
	152	WP126800	DAMPER	SCREW MASK		
*	156	WR306100	SHEET TOP			L
	157	WJ323900	RIVET TOP			L
	160	WE774100	BIND HEAD BONDING B-T. SCREW	3x8 MFZN2B3		
	163	WE774300	BIND HEAD B-TIGHT SCREW	3x8 MFZN2W3		
	164	WE877900	BIND HEAD S-TIGHT SCREW	3x6 MFZN2W3		
	167	WF002600	PW HEAD B-TIGHT SCREW	3x8 MFZN2W3		
	168	WE774600	SCREW IC	3x18 MFZN2W3		
	170	WE774700	BIND HEAD S-TIGHT SCREW	4x10 MFZN2W3		
	171	VH313200	PW HEAD S-TIGHT SCREW	4x8-10 MFNI3BL	BL	
	171	VD069600	PW HEAD S-TIGHT SCREW	4x8-10 MFNI33	TI	
	176	AA627310	GROUND TERMINAL			RAGEFL
			ACCESSORIES			
*	200	WR002400	REMOTE CONTROL	RAV290		U
*	200	WR002500	REMOTE CONTROL	RAV291		C
*	200	WR002600	REMOTE CONTROL	RAV292		RAL
*	200	WR002900	REMOTE CONTROL	RAV295		F
	200-1	AAX82380	BATTERY COVER		CG-2209	
	202	WB212500	INDOOR FM ANTENNA	1.4m 1pc		UCRL
	202	WB212400	INDOOR FM ANTENNA	1.4m 1pc		AF
	203	WB212600	AM LOOP ANTENNA	1.0m 1pc		
	204	WN649600	OPTIMIZER MICROPHONE	6.0m 1pc	EM6022L-HN1700	
			BATTERY	R03,AAA,UM-4 2pcs		
			SERVICE TOOLS			
		WR492800	RS232C CONVERSION ADAPTOR	3.3Vtype withFFC9P		
		MF125400	FLEXIBLE FLAT CABLE	25P 200mm P=1.25		
		MF109400	FLEXIBLE FLAT CABLE	9P 160mm P=1.25		

※ New Parts

- **FRONT PANEL UNIT**

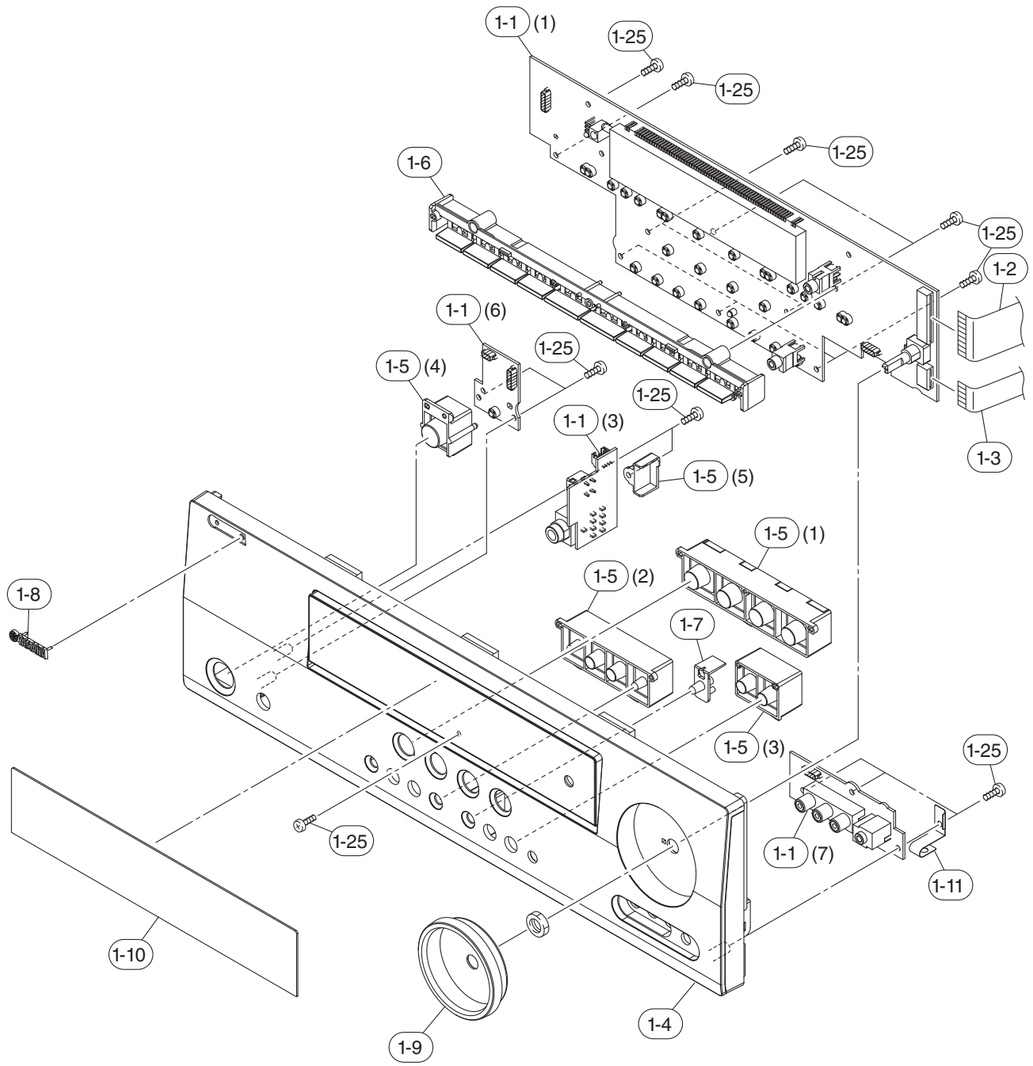

	Ref No.	Part No.	Description		Remarks	Markets
*	1-1	WQ923400	P.C.B. ASS'Y	OPERATION		U
*	1-1	WQ923500	P.C.B. ASS'Y	OPERATION		C
*	1-1	WQ923600	P.C.B. ASS'Y	OPERATION		R
*	1-1	WQ923700	P.C.B. ASS'Y	OPERATION		AFL
*	1-2	WR400600	FLEXIBLE FLAT CABLE	25P 200mm P=1.25		
*	1-3	WR382800	FLEXIBLE FLAT CABLE	9P 160mm P=1.25		
*	1-4	WR0901A0	FRONT PANEL ASS'Y		V665BL	U
*	1-4	WR0873A0	FRONT PANEL ASS'Y		6260BL	U
*	1-4	WR0902A0	FRONT PANEL ASS'Y		V665BL	CRAFL
*	1-4	WR0874A0	FRONT PANEL ASS'Y		6260BL	C
*	1-4	WR0885A0	FRONT PANEL ASS'Y		V665TI	
*	1-5	WQ831900	BUTTON CASE		BL	
*	1-5	WQ832100	BUTTON CASE		TI	
*	1-6	WQ822100	BUTTON TUNER			
*	1-7	WQ833100	BUTTON PD			
	1-8	WJ193300	EMBLEM BL			
*	1-9	WQ822300	ESCUTCHEON VOL		BL	
*	1-9	WQ822600	ESCUTCHEON VOL		TI	
*	1-10	WQ833400	SHEET WINDOW			U
*	1-10	WQ833500	SHEET WINDOW			CRAFL
*	1-11	WR248300	EARTH PLATE			
	1-25	WE774800	BIND HEAD P-TIGHT SCREW	3x8 MFZN2W3		

* New Parts

• AMP UNIT

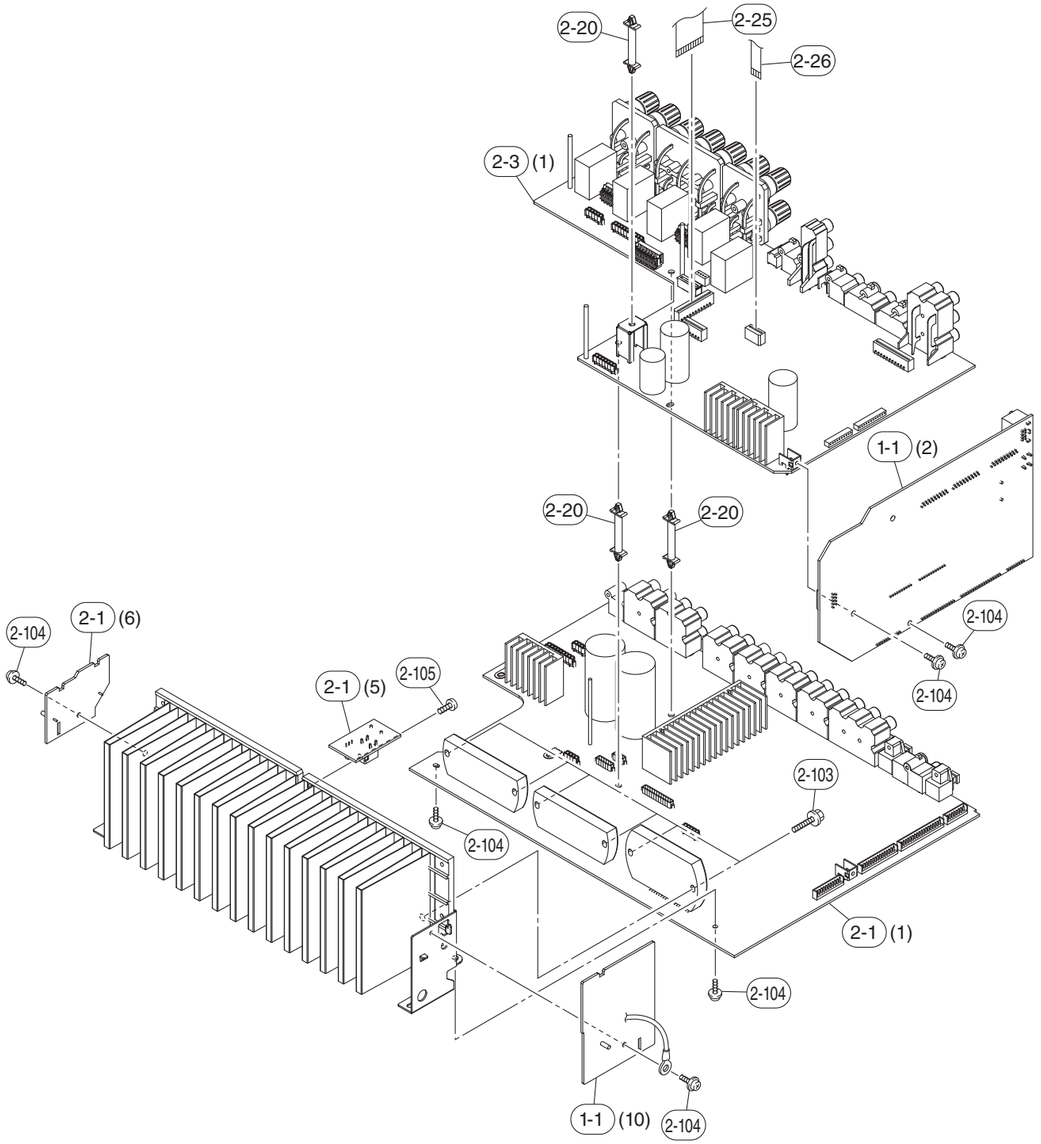

	Ref No.	Part No.	Description		Remarks	Markets
*	1-1	WQ923400	P.C.B. ASS'Y	OPERATION		U
*	1-1	WQ923500	P.C.B. ASS'Y	OPERATION		C
*	1-1	WQ923600	P.C.B. ASS'Y	OPERATION		R
*	1-1	WQ923700	P.C.B. ASS'Y	OPERATION		AFL
*	2-1	WQ918900	P.C.B. ASS'Y	MAIN		U
*	2-1	WQ918900	P.C.B. ASS'Y	MAIN	V665	C
*	2-1	WQ919400	P.C.B. ASS'Y	MAIN	6260	C
*	2-1	WQ919000	P.C.B. ASS'Y	MAIN		R
*	2-1	WQ919100	P.C.B. ASS'Y	MAIN		AF
*	2-1	WQ919200	P.C.B. ASS'Y	MAIN		L
*	2-3	WQ920800	P.C.B. ASS'Y	VIDEO		U
*	2-3	WQ920900	P.C.B. ASS'Y	VIDEO	V665	C
*	2-3	WQ921400	P.C.B. ASS'Y	VIDEO	6260	C
*	2-3	WQ921000	P.C.B. ASS'Y	VIDEO		R
*	2-3	WQ921100	P.C.B. ASS'Y	VIDEO		A
*	2-3	WQ921200	P.C.B. ASS'Y	VIDEO		F
*	2-3	WQ921300	P.C.B. ASS'Y	VIDEO		L
*	2-20	WS000800	SPACER SUPPORT	LCA4-29M		
*	2-25	WR397000	FLEXIBLE FLAT CABLE	22P 140mm P=1.25		
*	2-26	WR379700	FLEXIBLE FLAT CABLE	6P 200mm P=1.25		
	2-103	WE774600	SCREW IC	3x18 MFZN2W3		
	2-104	WF002600	PW HEAD B-TIGHT SCREW	3x8 MFZN2W3		
	2-105	WE774300	BIND HEAD B-TIGHT SCREW	3x8 MFZN2W3		

* New Parts

■ REMOTE CONTROL

● RAV290: U model / RAV291: C model / RAV292: R, A, L models / RAV295: F model

SCHEMATIC DIAGRAMS

RAV290/RAV291/RAV292

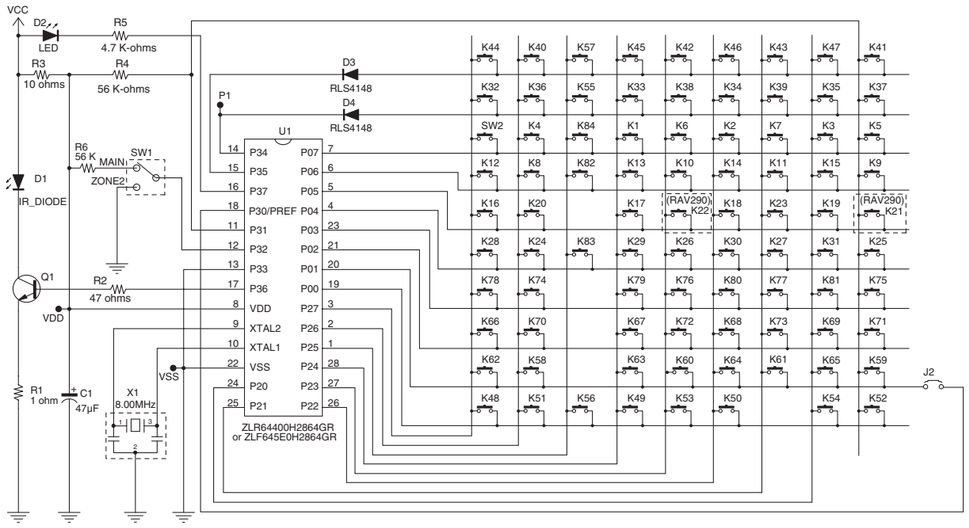

RAV295

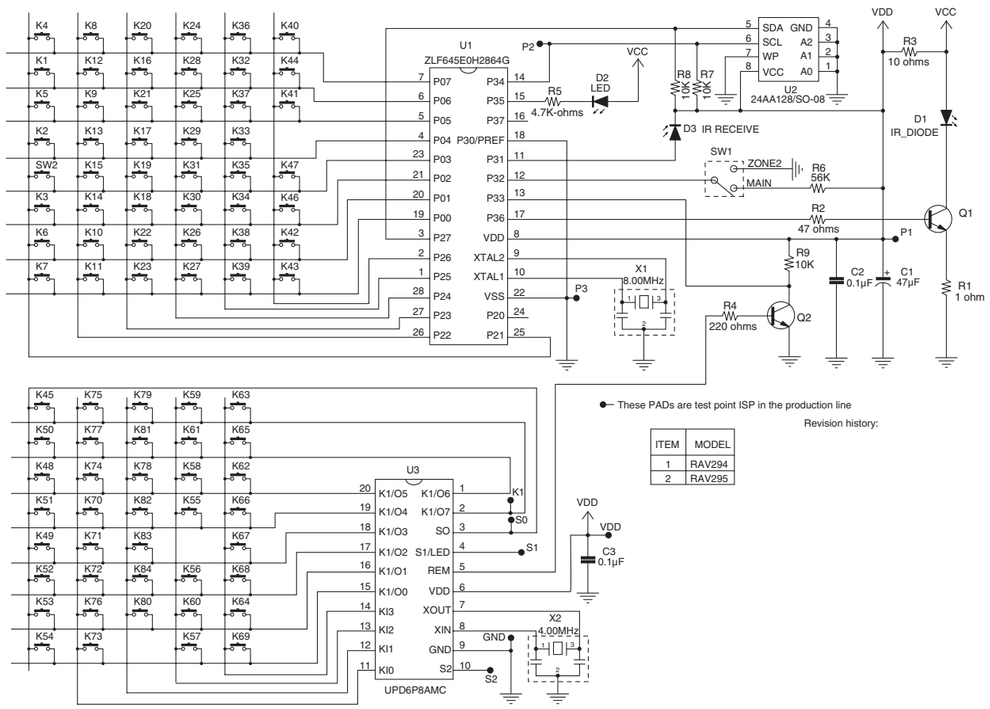

Revision history:

ITEM	MODEL
1	RAV294
2	RAV295

PANELS

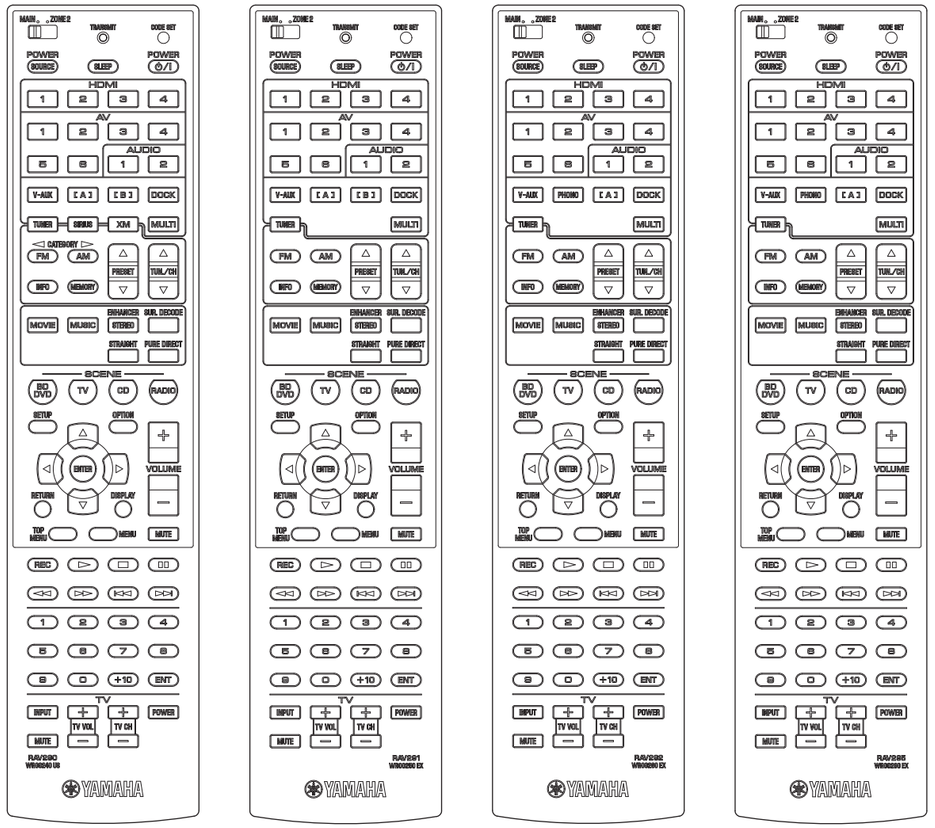

KEY NO. LAYOUT

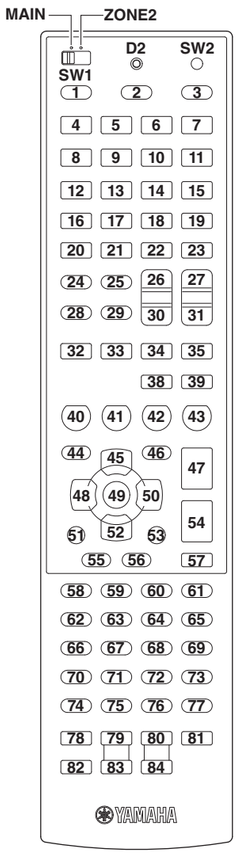

KEY CODE

GROUP	PRE SET	Key No.	FUNCTION	COM	ID1		ID2	
					MAIN	ZONE2	MAIN	ZONE2
	–	SW1	MAIN/ZONE 2	–	[MAIN]	[ZONE2]	[MAIN]	[ZONE2]
	–	D2	TRANSMIT	–	–	–	–	–
	–	SW2	CODE SET	–	–	–	–	–
POWER	–	K2	SLEEP	O	7A-30	7A-31	7A-30CE	7A-31CF
	–	K3	POWER	O	7E-2A	7A-453A	7E-2AD4	7A-453B
INPUT 1	O	K4	HDMI-1	O	7A-4738	7A-4837	7A-4739	7A-4836
					* enter into HDMI-1 MODE			
	O	K5	HDMI-2	O	7A-4A35	7A-4B34	7A-4A34	7A-4B35
					* enter into HDMI-2 MODE			
	O	K6	HDMI-3	O	7A-4D32	7A-4E31	7A-4D33	7A-4E30
					* enter into HDMI-3 MODE			
	O	K7	HDMI-4	O	7A-502F	7A-512E	7A-502E	7A-512F
					* enter into HDMI-4 MODE			
	O	K8	AV-1	O	7A-532C	7A-542B	7A-532D	7A-542A
					* enter into AV-1 MODE			
	O	K9	AV-2	O	7A-5629	7A-5728	7A-5628	7A-5729
					* enter into AV-2 MODE			
	O	K10	AV-3	O	7A-5926	7A-5A25	7A-5927	7A-5A24
					* enter into AV-3 MODE			
	O	K11	AV-4	O	7A-5C23	7A-5D22	7A-5C22	7A-5D23
					* enter into AV-4 MODE			
	O	K12	AV-5	O	7A-5F20	7A-601F	7A-5F21	7A-601E
					* enter into AV-5 MODE			
	O	K13	AV-6	O	7A-621D	7A-631C	7A-621C	7A-631D
					* enter into AV-6 MODE			
	O	K14	AUDIO-1	O	7A-651A	7A-6619	7A-651B	7A-6618
					* enter into AUDIO-1 MODE			
	O	K15	AUDIO-2	O	7A-6817	7A-6916	7A-6816	7A-6917
					* enter into AUDIO-2 MODE			
	O	K16	V-AUX	O	7A-55	7A-D8	7A-55AB	7A-D826
					* enter into V-AUX MODE			
	O	K17	[A] (RAV290, 291) [PHONO] (RAV292, 295)	O	7A-14	7A-D0	7A-14EA	7A-D02E
					* enter into [A]/PHONO MODE			
	O	K23	MULTI CH	O	7A-87	–	7A-8779	–
					* enter into MULTI CH MODE			
INPUT 2	–	K18	[B] (RAV290, 291) [A] (RAV292, 295)	O	7F01-3F	7F01-40	7F01-3FC1	7F01-40BE
					* enter into [A]/[B] MODE			
	–	K19	DOCK	O	7F01-4A	7F01-4B	7F01-4AB4	7F01-4BB5
					* enter into DOCK MODE			
	–	K20	TUNER	O	7A-16	7A-D2	7A-16E8	7A-D22C
					* enter into TUNER MODE			
	–	K21	SIRIUS (RAV290) U model	O	7A-39	7A-3A	7A-39C7	7A-3AC4
					* enter into SIRIUS MODE			
	–	K22	XM (RAV290) U model	O	7A-B4	7A-B8	7A-B44A	7A-B846
					* enter into XM MODE			
RADIO	–	K24	CATEGORY (-)/ FM	O	7F01-5827	7F01-5926	7F01-5826	7F01-5927
	–	K25	CATEGORY (+)/ AM	O	7F01-552A	7F01-5629	7F01-552B	7F01-5628
	–	K26	PRESET (+)	O	7F01-5B24	7F01-5C23	7F01-5B25	7F01-5C22
	–	K27	TUNING/CH (+)	O	7F01-611E	7F01-621D	7F01-611F	7F01-621C
	–	K28	INFO	O	7A-2758	7A-2857	7A-2759	7A-2856
	–	K29	MEMORY	O	7F01-6718	7F01-6817	7F01-6719	7F01-6816
	–	K30	PRESET (-)	O	7F01-5E21	7F01-5F20	7F01-5E20	7F01-5F21
	–	K31	TUNING/CH (-)	O	7F01-641B	7F01-651A	7F01-641A	7F01-651B
DSP	–	K32	MOVIE	O	7A-88	–	7A-8876	–
	–	K33	MUSIC	O	7A-89	–	7A-8977	–
	–	K34	STEREO/ENHANCER	O	7A-94	–	7A-946A	–
	–	K35	SUR. DECODE	O	7A-8D	–	7A-8D73	–
	–	K38	STRAIGHT	O	7A-56	–	7A-56A8	–
	–	K39	PURE DIRECT	O	7A-DD	–	7A-DD23	–
SCENE	–	K40	BD/DVD	O	7A-007F	7A-017E	7A-007E	7A-017F
	–	K41	TV	O	7A-037C	7A-047B	7A-037D	7A-047A
	–	K42	CD	O	7A-0679	7A-0778	7A-0678	7A-0779
	–	K43	RADIO or GAME	O	7A-0976	7A-0A75	7A-0977	7A-0A74

GROUP	PRE SET	Key No.	FUNCTION	COM	ID1		ID2	
					MAIN	ZONE2	MAIN	ZONE2
MENU	–	K44	SETUP	O	7A-84 * enter into AMP MODE	–	7A-847A * enter into AMP MODE	–
	–	K46	SUBMENU	O	7A-6B14 * enter into AMP MODE	–	7A-6B15 * enter into AMP MODE	–
CURSOR	–	K45	UP	–	7A-9D	–	7A-9D63	–
	–	K48	LEFT	–	7A-9F	–	7A-9F61	–
	–	K49	ENTER	–	7A-DE	–	7A-DE20	–
	–	K50	RIGHT	–	7A-9E	–	7A-9E60	–
	–	K51	RETURN	–	7A-AA	–	7A-AA54	–
	–	K52	DOWN	–	7A-9C	–	7A-9C62	–
	–	K53	(DISPLAY)	–	7F01-60	7F01-80	7F01-609E	7F01-807E
VOLUME	–	K47	VOLUME (+)	O	7A-1A	7A-DA	7A-1AE4	7A-DA24
	–	K54	VOLUME (-)	O	7A-1B	7A-DB	7A-1BE5	7A-DB25
	–	K57	MUTE	O	7A-1C	7A-DC	7A-1CE2	7A-DC22
SOURCE	–	K1	POWER (SOURCE)	–				
	–	K55	TOP MENU	–				
	–	K56	MENU	–				
	–	K58	REC	–				
	–	K59	PLAY	–				
	–	K60	STOP	–				
	–	K61	PAUSE	–				
	–	K62	REW	–				
	–	K63	FF	–				
	–	K64	SKIP (-)	–				
	–	K65	SKIP (+)	–				
					* Function code			
10 key	–	K66	1	–				
	–	K67	2	–				
	–	K68	3	–				
	–	K69	4	–				
	–	K70	5	–				
	–	K71	6	–				
	–	K72	7	–				
	–	K73	8	–				
	–	K74	9	–				
	–	K75	0	–				
	–	K76	+10	–				
	–	K77	ENT	–				
					* Function code			
TV	–	K78	TV INPUT	–				
	–	K79	TV VOL (+)	–				
	–	K80	TV CH (+)	–				
	–	K81	TV POWER	–				
	–	K82	TV MUTE	–				
	–	K83	TV VOL (-)	–				
	–	K84	TV CH (-)	–				
					* TV mode			

FUNCTION CODE

Key No.	BD		DVD					DVR		LD		CD			CD-R		MD			
	Brand	Yamaha-1	Brand	Yamaha-1	Yamaha-2	Yamaha-3	T	Brand	Yamaha	Brand	Yamaha	Brand	Yamaha-1	Yamaha-2	Brand	Yamaha	Brand	Yamaha-1	Yamaha-2	Yamaha-3
	Preset Number	2018	Preset Number	2000	2003	2001	2136	Preset Number	2011	Preset Number	2002	Preset Number	5013	5000	Preset Number	5001	Preset Number	5002	5003	5004
	Function	Code	Function	Code	Code	Code	Code	Function	Code	Function	Code	Function	Code	Code	Function	Code	Function	Code	Code	Code
K45	UP	7C-B4	UP	7C-B4	2002 B0 00 85 35	004.088	45B5 80	MENU UP	048.088	–	–	–	–	–	–	–	–	–	–	–
K48	LEFT	7C-B5	LEFT	7C-B5	2002 B0 00 87 37	004.090	45B5 51	MENU LEFT	048.090	–	–	–	–	–	–	–	–	–	–	–
K49	ENTER	7C-B8	ENTER	7C-B8	2002 B0 00 82 32	004.092	45B5 21	MENU ENTER	048.092	–	–	–	–	–	–	–	–	–	–	–
K50	RIGHT	7C-B6	RIGHT	7C-B6	2002 B0 00 88 38	004.091	45B5 4D	MENU RIGHT	048.091	–	–	–	–	–	–	–	–	–	–	–
K51	RETURN	7C-B7	RETURN	7C-B7	2002 B0 00 81 31	004.131	45B5 22	RETURN	048.131	–	–	–	–	–	–	–	–	–	–	–
K52	DOWN	7C-B3	DOWN	7C-B3	2002 B0 00 86 36	004.089	45B5 81	MENU DOWN	048.089	–	–	–	–	–	–	–	–	–	–	–
K53	DISPLAY	7C-A6	DISPLAY	7C-A6	2002 B0 00 92 22	004.015	45B5 26	DISPLAY	048.015	DISPLAY	7C-13	DISPLAY	79-0A	79-0A	DISPLAY	7F-9E	DISPLAY	79-A5	79-A5	180F
K1	SOURCE POWER	7C-80	SOURCE POWER	7C-80	2002 B0 00 3D 8D	004.012	45B5 12	AV POWER	048.012	AV POWER	–	AV POWER	79-60	79-60	AV POWER	7F-80	AV POWER	-	79-B5	150F
K55	TOP MENU	7C-B1	TOP MENU	7C-B1	2002 B0 00 9B 2B	004.113	45B5 DE	TITLE	048.200	–	–	–	–	–	–	–	–	–	–	–
K56	MENU	7C-D0	MENU	7C-B2	2002 B0 00 80 30	004.084	45B5 84	MENU	048.084	–	–	–	–	–	–	–	–	–	–	–
K58	DISC SKIP	7C-8B	DISC SKIP	7C-8B	–	004.127	??	REC	048.055	–	–	DISC SKIP	7A-4F	79-4F	REC	-	REC	79-AF	79-B1	2D0F
K59	PLAY	7C-82	PLAY	7C-82	2002 B0 00 0A BA	004.044	45B5 15	PLAY	048.044	PLAY	7C-05	PLAY	7A-08	79-02	PLAY	7F-82	PLAY	79-A8	79-A8	2A0F
K60	STOP	7C-85	STOP	7C-85	2002 B0 00 00 B0	004.049	45B5 14	STOP	048.049	STOP	7C-5B	STOP	7A-09	79-56	STOP	7F-84	STOP	79-AA	79-AA	280F
K61	PAUSE	7C-83	PAUSE	7C-83	2002 B0 00 06 B6	004.048	45B5 00	PAUSE	048.048	PAUSE	7C-5A	PAUSE	7A-09	79-55	PAUSE	7F-83	PAUSE	79-A9	79-A9	290F
K62	REW	7C-86	REW	7C-86	2002 B0 00 04 B4	004.041	45B5 19	REW	048.041	REW	7C-06	REW	7A-0D	79-05	REW	7F-88	REW	79-AC	79-AC	2B0F
K63	FF	7C-87	FF	7C-87	2002 B0 00 05 B5	004.040	45B5 13	FF	048.040	FF	7C-07	FF	7A-0C	79-06	FF	7F-89	FF	79-AD	79-AD	2C0F
K64	SKIP (-)	7C-B9	SKIP (-)	7C-B9	2002 B0 00 49 F9	004.033	45B5 23	SKIP (-)	048.033	CHAP/SKIP (-)	7C-02	SKIP (-)	7A-0B	79-04	SKIP (-)	7F-86	SKIP (-)	79-AB	79-AB	200F
K65	SKIP (+)	7C-BA	SKIP (+)	7C-BA	2002 B0 00 4A FA	004.032	45B5 24	SKIP (+)	048.032	CHAP/SKIP (+)	7C-03	SKIP (+)	7A-0A	79-07	SKIP (+)	7F-87	SKIP (+)	79-AE	79-AE	210F
K66	1	7C-94	1	7C-94	2002 B0 00 10 A0	004.001	45B5 01	1	048.001	1	7C-17	1	79-11	79-11	1	7F-91	1	79-85	79-B7	000F
K67	2	7C-95	2	7C-95	2002 B0 00 11 A1	004.002	45B5 02	2	048.002	2	7C-18	2	79-12	79-12	2	7F-92	2	79-86	79-B8	010F
K68	3	7C-96	3	7C-96	2002 B0 00 12 A2	004.003	45B5 03	3	048.003	3	7C-19	3	79-13	79-13	3	7F-93	3	79-87	79-B9	020F
K69	4	7C-97	4	7C-97	2002 B0 00 13 A3	004.004	45B5 04	4	048.004	4	7C-1A	4	79-14	79-14	4	7F-94	4	79-88	79-BA	030F
K70	5	7C-98	5	7C-98	2002 B0 00 14 A4	004.005	45B5 05	5	048.005	5	7C-1B	5	79-15	79-15	5	7F-95	5	79-89	79-BB	040F
K71	6	7C-99	6	7C-99	2002 B0 00 15 A5	004.006	45B5 06	6	048.006	6	7C-1C	6	79-16	79-16	6	7F-96	6	79-8A	79-BC	050F
K72	7	7C-9A	7	7C-9A	2002 B0 00 16 A6	004.007	45B5 07	7	048.007	7	7C-1D	7	79-17	79-17	7	7F-97	7	79-8B	79-BD	060F
K73	8	7C-9B	8	7C-9B	2002 B0 00 17 A7	004.008	45B5 08	8	048.008	8	7C-1E	8	79-18	79-18	8	7F-98	8	79-8C	79-BE	070F
K74	9	7C-9C	9	7C-9C	2002 B0 00 18 A8	004.009	45B5 09	9	048.009	9	7C-1F	9	79-19	79-19	9	7F-99	9	79-8D	79-BF	080F
K75	0	7C-93	0	7C-93	2002 B0 00 19 A9	004.000	45B5 0A	0	048.000	0	7C-16	0/10	79-10	79-10	0	7F-90	0	79-8E	79-C0	090F
K76	+10	7C-9D	+10	7C-9D	2002 B0 00 89 39	004.120	45B5 25	+10	–	+10	7C-5D	+10	79-1A	79-1A	+10	7F-9A	+10	79-8F	79-8F	0A0F
K77	TITLE/INDEX	7C-9E	TITLE/INDEX	7C-9E	–	–	45B5 20	TITLE/INDEX	–	CHAP/TIME	7C-15	INDEX	79-0B	79-0B	INDEX	7F-8A	INDEX	–	–	–
K78	TV INPUT	(TV INPUT)	TV INPUT	(TV INPUT)				TV INPUT	(TV INPUT)	TV INPUT	(TV INPUT)	TV INPUT	(TV INPUT)		TV INPUT	(TV INPUT)	TV INPUT	(TV INPUT)		
K79	TV VOL (+)	(TV VOL +)	TV VOL (+)	(TV VOL +)				TV VOL (+)	(TV VOL +)	TV VOL (+)	(TV VOL +)	TV VOL (+)	(TV VOL +)		TV VOL (+)	(TV VOL +)	TV VOL (+)	(TV VOL +)		
K80	TV CH (+)	(TV CH +)	TV CH (+)	(TV CH +)				TV CH (+)	(TV CH +)	TV CH (+)	(TV CH +)	TV CH (+)	(TV CH +)		TV CH (+)	(TV CH +)	TV CH (+)	(TV CH +)		
K81	TV POWER	(TV POWER)	TV POWER	(TV POWER)				TV POWER	(TV POWER)	TV POWER	(TV POWER)	TV POWER	(TV POWER)		TV POWER	(TV POWER)	TV POWER	(TV POWER)		
K82	TV MUTE	(TV MUTE)	TV MUTE	(TV MUTE)				TV MUTE	(TV MUTE)	TV MUTE	(TV MUTE)	TV MUTE	(TV MUTE)		TV MUTE	(TV MUTE)	TV MUTE	(TV MUTE)		
K83	TV VOL (-)	(TV VOL -)	TV VOL (-)	(TV VOL -)				TV VOL (-)	(TV VOL -)	TV VOL (-)	(TV VOL -)	TV VOL (-)	(TV VOL -)		TV VOL (-)	(TV VOL -)	TV VOL (-)	(TV VOL -)		
K84	TV CH (-)	(TV CH -)	TV CH (-)	(TV CH -)				TV CH (-)	(TV CH -)	TV CH (-)	(TV CH -)	TV CH (-)	(TV CH -)		TV CH (-)	(TV CH -)	TV CH (-)	(TV CH -)		

Key No.	TUNER																TAPE			TV					
	Brand	Yamaha-2	Yamaha-3	Yamaha-4	Yamaha-5	Yamaha-6	Yamaha-7	Yamaha-*	Yamaha-11	Yamaha-12	Brand	Yamaha-8	Yamaha-*	Brand	Yamaha-9	Yamaha-10	Brand	Yamaha-1	Yamaha-2	Brand	Yamaha-1	Yamaha-2	Yamaha-3	Yamaha-4	Yamaha-5
	Preset Number	5014	5007	5008	5009	5010	5011	****	5015	5016	Preset Number	5012	****	Preset Number	5017	5018	Preset Number	5005	5006	Preset Number	0000	0001	0002	0003	0004
	Function	Code	Code	Code	Code	Code	Code	Code	Code	Code	Function	Code	Code	Function	Code	Code	Function	Code	Code	Function	Code	Code	Code	Code	Code
K45	PRESET (+)	7A-10	7A-10	7D-F5	7A-6A	7D-31	7F01-0E	7F01-0EF0	7A-6A94	7A-10EE	UP	7F01-2E	7F01-2ED0	UP	7F01-E1	7F01-E11F	–	–	–	MENU UP	D1CC	D16C	5070	01 111 0 01 0EE 1	F082
K48	A-E/CAT. (-)	–	7A-AC	7D-BB	7A-6E	7D-35	7F01-10	7F01-10EE	7A-6E90	7A-AC52	LEFT	7F01-30	7F01-30CE	LEFT	7F01-E2	7F01-E21C	–	–	–	MENU LEFT	D1CE	D16E	5073	01 115 0 01 0EA 1	F080
K49	ENTER	–	7A-AD	7D-BC	7A-6F	7D-36	7F01-11	7F01-11EF	7A-6F91	7A-AD53	ENTER	7F01-31	7F01-31CF	ENTER	7F01-E3	7F01-E31D	–	–	–	MENU ENTER	D1D0	D170	5033	01 15F 0 01 0A0 1	F087
K50	A-E/CAT. (+)	D1-0D	7A-12	7D-F7	7A-6C	7D-33	7F01-12	7F01-12EC	7A-6C92	7A-12EC	RIGHT	7F01-32	7F01-32CC	RIGHT	7F01-E4	7F01-E41A	A/B	7A-06	7F-06	MENU RIGHT	D1CF	D16F	5072	01 114 0 01 0EB 1	F081
K51	MEMORY	–	7A-AF	7D-BE	7A-71	7D-38	7F01-13	7F01-13ED	7A-718F	7A-AF51	RETURN	7F01-33	7F01-33CD	MEMORY	7F01-DF	7F01-DF21	–	–	–	RETURN	D1D5	D175	500A	01 12F 0 01 0D0 1	–
K52	PRESET (-)	7A-11	7A-11	7D-F6	7A-6B	7D-32	7F01-14	7F01-14EA	7A-6B95	7A-11EF	DOWN	7F01-34	7F01-34CA	DOWN	7F01-E5	7F01-E51B	–	–	–	MENU DOWN	D1CD	D16D	5071	01 112 0 01 0ED 1	F083
K53	DISPLAY	–	7A-B0	7D-BF	7A-72	7D-39	7F01-15	7F01-15EB	7A-728C	7A-B04E	DISPLAY	7F01-35	7F01-35CB	DISPLAY	7F01-E0	7F01-E01E	–	–	–	DISPLAY	–	–	5010	01 11B 0 01 0E4 1	–
K1	AV POWER	D1-1B	D1-1B	–	–	–	7F01-00	7F01-00FE	–	–	AV POWER	7F01-20	7F01-20DE	AV POWER	7F01-D0	7F01-D02E	AV POWER	–	–	AV POWER	–	–	–	–	–
K55	BAND	–	7A-AE	7D-BD	7A-70	7D-37	7F01-0D	7F01-0DF3	7A-708E	7A-AE50	TITLE	7F01-2D	7F01-2DD3	TITLE	7F01-DD	7F01-DD23	–	–	–	TITLE	–	–	–	–	–
K56	SRCH MODE	–	7A-AB	7D-BA	7A-6D	7D-34	7F01-0F	7F01-0FF1	7A-6D93	7A-AB55	MENU	7F01-2F	7F01-2FD1	SRCH MODE	7F01-DE	7F01-DE20	–	–	–	MENU	D1D3	D173	5053	01 120 0 01 0DF 1	F086
K58	–	–	–	–	–	–	7F01-16	7F01-16E8	–	–	PC/MCX	7F01-36	7F01-36C8	REC	7F01-E6	7F01-E618	REC	7A-04	7F-04	REC	–	–	–	–	–
K59	–	–	–	–	–	–	7F01-1E	7F01-1EE0	–	–	PLAY	7F01-3E	7F01-3EC0	PLAY	7F01-E8	7F01-E816	PLAY	7A-00	7F-00	PLAY	–	–	–	–	–
K60	–	–	–	–	–	–	7F01-1D	7F01-1DE3	–	–	STOP	7F01-3D	7F01-3DC3	STOP	7F01-E9	7F01-E917	STOP	7A-03	7F-03	STOP	–	–	–	–	–
K61	–	–	–	–	–	–	7F01-1A	7F01-1AE4	–	–	PAUSE	7F01-3A	7F01-3AC4	PAUSE	7F01-E7	7F01-E719	PAUSE	–	–	PAUSE	–	–	–	–	–
K62	FREQ	7A-A4	7A-A4	7D-23	7A-3D	–	7F01-17	7F01-17E9	7A-3DC3	7A-A45A	NET RADIO	7F01-37	7F01-37C9	REW	7F01-EA	7F01-EA14	REW	7A-01	7F-01	REW	–	–	–	–	–
K63	EON	7A-A5	7A-A5	7D-24	7A-3E	–	7F01-18	7F01-18E6	7A-3EC0	7A-A55B	USB	7F01-38	7F01-38C6	FF	7F01-EB	7F01-EB15	FF	7A-02	7F-02	FF	–	–	–	–	–
K64	PTY MODE	7A-A6	7A-A6	7D-25	7A-3F	–	7F01-1B	7F01-1BE5	7A-3FC1	7A-A658	SKIP (-)	7F01-3B	7F01-3BC5	SKIP (-)	7F01-EC	7F01-EC12	DIR A	7A-07	7F-07	SKIP (-)	–	–	–	–	–
K65	PTY START	7A-A7	7A-A7	7D-26	7A-EF	–	7F01-1C	7F01-1CE2	7A-EF11	7A-A759	SKIP (+)	7F01-3C	7F01-3CC2	SKIP (+)	7F01-ED	7F01-ED13	DIR B	7A-40	7F-08	SKIP (+)	–	–	–	–	–
K66	P1	D1-0E	7A-E5	7D-F8	7A-61	7D-A1	7F01-01	7F01-01FF	7A-619F	7A-E51B	P1	7F01-21	7F01-21DF	1	7F01-D1	7F01-D12F	–	–	–	1	D1E1	D181	500D	01 101 0 01 0FE 1	F0E4
K67	P2	D1-0F	7A-E6	7D-F9	7A-62	7D-A2	7F01-02	7F01-02FC	7A-629C	7A-E618	P2	7F01-22	7F01-22DC	2	7F01-D2	7F01-D22C	–	–	–	2	D1E2	D182	500E	01 102 0 01 0FD 1	F0E5
K68	P3	D1-10	7A-E7	7D-FA	7A-63	7D-A3	7F01-03	7F01-03FD	7A-639D	7A-E719	P3	7F01-23	7F01-23DD	3	7F01-D3	7F01-D32D	–	–	–	3	D1E3	D183	500F	01 103 0 01 0FC 1	F0E6
K69	P4	D1-11	7A-E8	7D-FB	7A-64	7D-A4	7F01-04	7F01-04FA	7A-649A	7A-E816	P4	7F01-24	7F01-24DA	4	7F01-D4	7F01-D42A	–	–	–	4	D1E4	D184	501C	01 104 0 01 0FB 1	–
K70	P5	D1-12	7A-E9	7D-FC	7A-65	7D-A5	7F01-05	7F01-05FB	7A-659B	7A-E917	P5	7F01-25	7F01-25DB	5	7F01-D5	7F01-D52B	–	–	–	5	D1E5	D185	501D	01 105 0 01 0FA 1	–
K71	P6	D1-13	7A-EA	7D-FD	7A-66	7D-A6	7F01-06	7F01-06F8	7A-6698	7A-EA14	P6	7F01-26	7F01-26D8	6	7F01-D6	7F01-D628	–	–	–	6	D1E6	D186	501E	01 106 0 01 0F9 1	–
K72	P7	D1-14	7A-EB	7D-FE	7A-67	7D-A7	7F01-07	7F01-07F9	7A-6799	7A-EB15	P7	7F01-27	7F01-27D9	7	7F01-D7	7F01-D729	–	–	–	7	–	–	501F	01 107 0 01 0F8 1	–
K73	P8	D1-15	7A-EC	7D-FF	7A-68	7D-A8	7F01-08	7F01-08F6	7A-6896	7A-EC12	P8	7F01-28	7F01-28D6	8	7F01-D8	7F01-D826	–	–	–	8	–	–	5004	01 108 0 01 0F7 1	–
K74	P9	–	7A-B1	7D-60	7A-69	7D-A9	7F01-09	7F01-09F7	7A-6997	7A-B14F	P9	7F01-29	7F01-29D7	9	7F01-D9	7F01-D927	–	–	–	9	–	–	5005	01 109 0 01 0F6 1	–
K75	P0	–	7A-B2	7D-61	7A-60	7D-A0	7F01-0A	7F01-0AF4	7A-609E	7A-B24C	P10	7F01-2A	7F01-2AD4	10	7F01-DA	7F01-DA24	–	–	–	0/10	–	–	500C	01 10A 0 01 0F5 1	–
K76	–	–	–	–	–	–	7F01-0B	7F01-0BF5	–	–	–	7F01-2B	7F01-2BD5	11	7F01-DB	7F01-DB25	–	–	–	_ /_ _ ,11	–	–	5006	01 135 0 01 0CA 1	–
K77	P. ENTER	–	7A-B3	7D-62	7A-BF	7D-3F	7F01-0C	7F01-0CF2	7A-BF41	7A-B34D	P. ENTER	7F01-2C	7F01-2CD2	12	7F01-DC	7F01-DC22	–	–	–	enter/12	–	–	5006	01 10C 0 01 0F3 1	–
K78	TV INPUT	(TV INPUT)									TV INPUT	(TV INPUT)		TV INPUT	(TV INPUT)		TV INPUT	(TV INPUT)		TV INPUT	D1D6	D176	5009	01 113 0 01 0EC 1	–
K79	TV VOL (+)	(TV VOL +)									TV VOL (+)	(TV VOL +)		TV VOL (+)	(TV VOL +)		TV VOL (+)	(TV VOL +)		TV VOL (+)	–	–	5012	01 114 0 01 0EB 1	–
K80	TV CH (+)	(TV CH +)									TV CH (+)	(TV CH +)		TV CH (+)	(TV CH +)		TV CH (+)	(TV CH +)		TV CH (+)	–	–	5019	01 111 0 01 0EE 1	–
K81	TV POWER	(TV POWER)									TV POWER	(TV POWER)		TV POWER	(TV POWER)		TV POWER	(TV POWER)		TV POWER	D1C2	D162	5017	01 116 0 01 0E9 1	F041
K82	TV MUTE	(TV MUTE)									TV MUTE	(TV MUTE)		TV MUTE	(TV MUTE)		TV MUTE	(TV MUTE)		TV MUTE	–	–	500B	01 117 0 01 0E8 1	–
K83	TV VOL (-)	(TV VOL -)									TV VOL (-)	(TV VOL -)		TV VOL (-)	(TV VOL -)		TV VOL (-)	(TV VOL -)		TV VOL (-)	–	–	5015	01 115 0 01 0EA 1	–
K84	TV CH (-)	(TV CH -)									TV CH (-)	(TV CH -)		TV CH (-)	(TV CH -)		TV CH (-)	(TV CH -)		TV CH (-)	–	–	5018	01 112 0 01 0ED 1	–

Advanced setup

In the advanced setup, you can set basic operations of this unit, such as on and off of a bi-amp connection, or initialize user settings. Perform the following steps to change settings.

1 Set this unit to the standby mode.

2 Press ⒶMAIN ZONE ON/OFF while pressing and holding ⓂSTRAIGHT on the front panel.

The advanced setup menu appears on the front panel display.

```
ADVANCED SETUP
```

3 Press ⓁPROGRAM ◁ / ▷ repeatedly to select the parameter you want to change.

The default setting are marked with "*."

- Set values are placed in XXX of the following parameters on an actual display screen.

`SP IMP. -XXX`

Choices: 6ΩMIN/8ΩMIN*

Selects output impedance of this unit according to connected speakers.

`REMOTE ID -XXX`

Choices: ID1*/ID2

Sets a remote control ID. When using multiple Yamaha AV receivers, you can operate them with a single remote control by setting the receiver IDs to the same setting.

`SR PIN -XXX`

Choices: RESET/CANCEL

Resets Parental lock cord when using SIRIUS Satellite tuner.

`BI AMP - XXX`

Choices: ON/OFF*

Switches on and off of bi-amp connection of main speakers.

`SCENE IR -XXX`

Choices: ON*/OFF

Selects whether or not to transmit the control signals to an external component connected to the REMOTE jacks on this unit when BD/DVD or CD SCENE function is selected.

`MON.CHK - XXXX`

Choices: YES*/SKIP

Adds upscaling limitation on output signals to a video monitor connected to this unit via the HDMI OUT jack.

`INIT-XXXXXXXXX`

Choices: DSP PARAM/VIDEO/ALL/CANCEL

Initializes various settings stored in this unit. You can select an initialization method from the following.

DSP PARAM:	All parameters of sound field programs
VIDEO:	Video conversion settings (resolution/ aspect) in the setup menu and the OSD display position
ALL:	Reset this unit to initial factory settings
CANCEL:	Cancellation of initialization

4 Press ⓂSTRAIGHT a few times to select the value you want to change.

The value selected here becomes effective when this unit is turned on the next time. You can change multiple settings by repeating steps 3 and 4.

5 Press ⒶMAIN ZONE ON/OFF, turns off this system, and press ⒶMAIN ZONE ON/OFF again.

The value set in step 3 becomes effective, and this unit turns on. When you select initialization in step 3, the initialization is performed.

Setting a remote control ID

Two IDs are provided for the remote control of this unit. If another Yamaha amplifier is in the same room, setting a different remote control ID to this unit prevents unwanted operation of the other amplifier.

ID1 is set for both remote control and amplifier by default. When you change the remote control ID, display "Advance Setup" (see the previous section) and change the ID for the amplifier too.

1 Press 4CODE SET on the remote control using a pointed object such as the tip of a ballpoint pen.

3**TRANSMIT** blinks twice.

2 Press 13SETUP on the remote control.

3 Enter the desired remote control ID code.

To switch to ID1:
Enter "5019" using 20**Numeric keys**.
To switch to ID2:
Enter "5020" using 20**Numeric keys**.
Once the remote control code is registered, 3**TRANSMIT** blinks twice.
If it fails, 3**TRANSMIT** blinks six times. Repeat from step 1.

- Initializing the remote control code returns it to ID1.

RX-V665/HTR-6260

YAMAHA