GPSMAP 3005C FLUSH MOUNT TEMPLATE

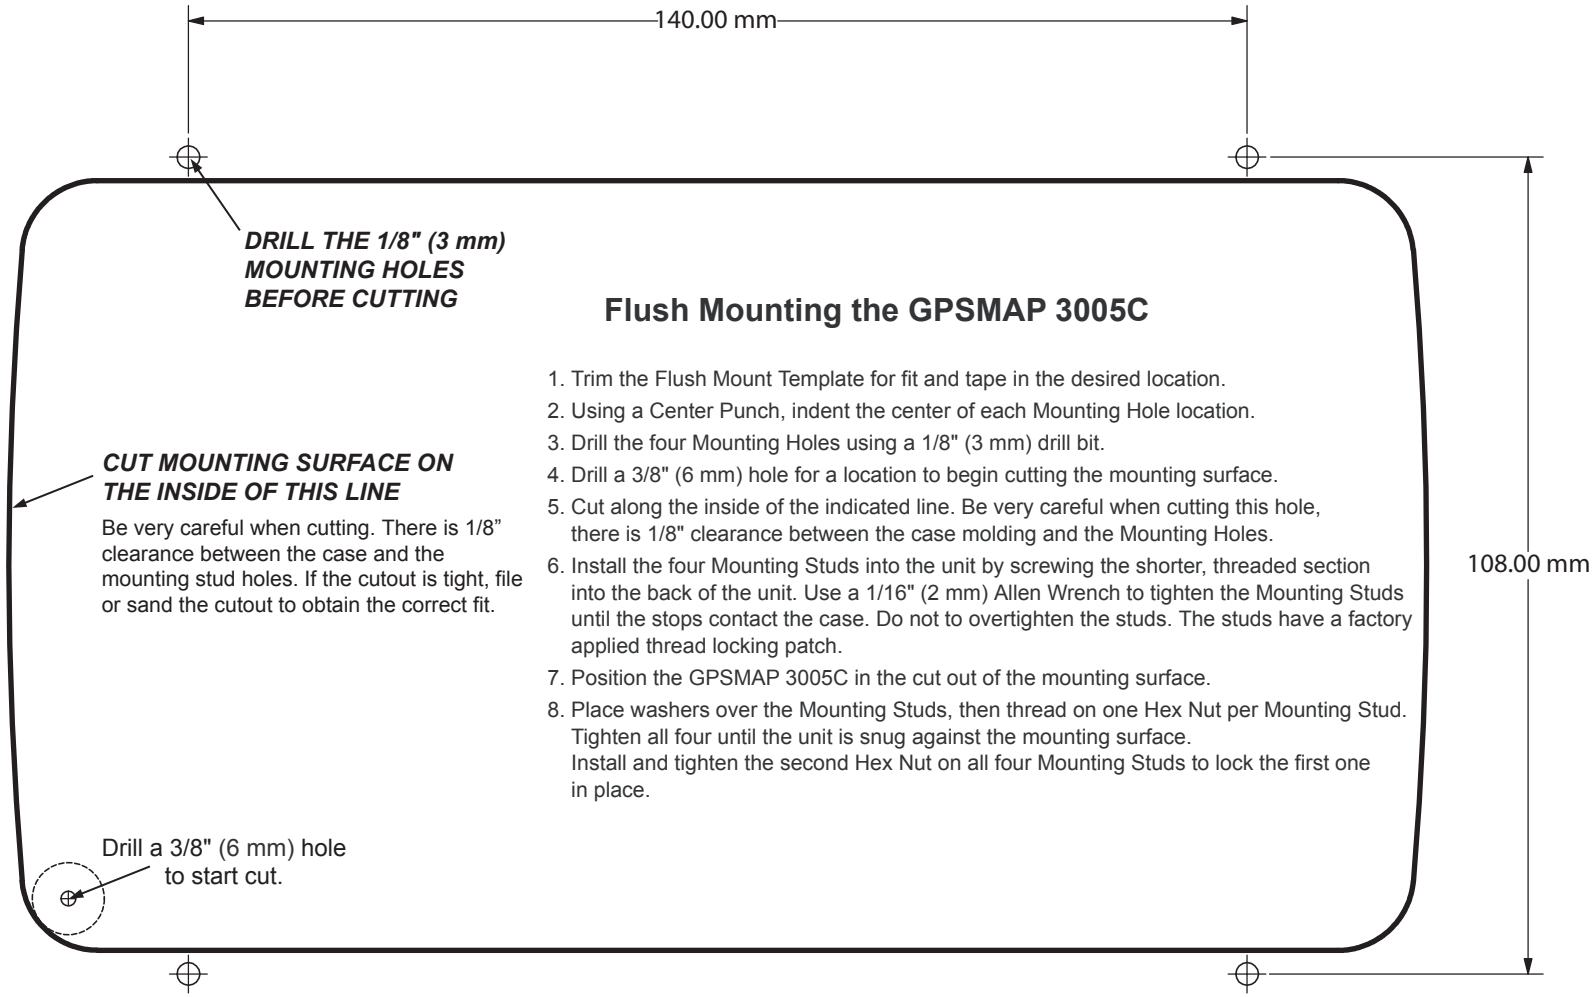

Flush Mounting the GPSMAP 3005C

1. Trim the Flush Mount Template for fit and tape in the desired location.
2. Using a Center Punch, indent the center of each Mounting Hole location.
3. Drill the four Mounting Holes using a 1/8" (3 mm) drill bit.
4. Drill a 3/8" (6 mm) hole for a location to begin cutting the mounting surface.
5. Cut along the inside of the indicated line. Be very careful when cutting this hole, there is 1/8" clearance between the case molding and the Mounting Holes.
6. Install the four Mounting Studs into the unit by screwing the shorter, threaded section into the back of the unit. Use a 1/16" (2 mm) Allen Wrench to tighten the Mounting Studs until the stops contact the case. Do not to overtighten the studs. The studs have a factory applied thread locking patch.
7. Position the GPSMAP 3005C in the cut out of the mounting surface.
8. Place washers over the Mounting Studs, then thread on one Hex Nut per Mounting Stud. Tighten all four until the unit is snug against the mounting surface.
   Install and tighten the second Hex Nut on all four Mounting Studs to lock the first one in place.

Garmin International 1200 E. 151st Street, Olathe, KS 66062 Part Number 190-00531-03 Rev. A March 2005 Printed in Taiwan