■ Display information

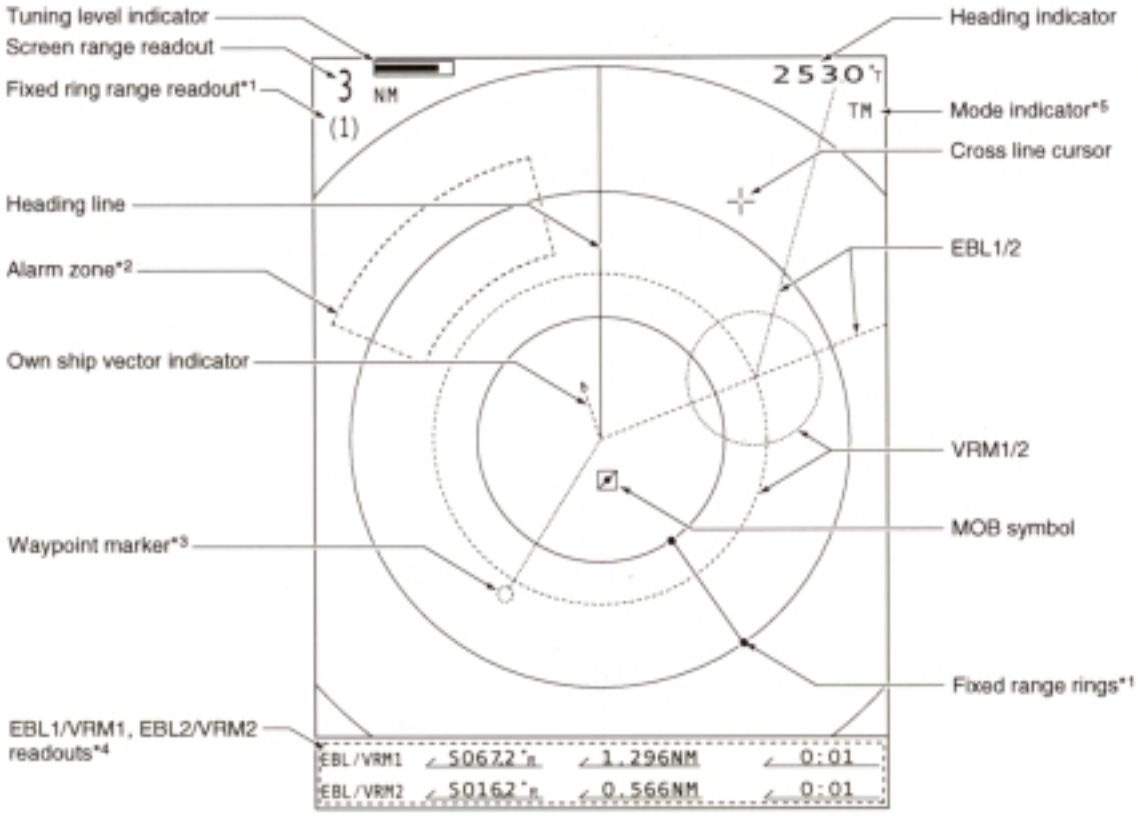

*1 Appears when the "RING" of the FUNCTION menu is turned ON.

*2 Appears when the alarm function is in use.

*3 Appears when the "WPT" of the FUNCTION menu is turned ON. To display the waypoint marker, bearing data and NMEA data with 0183 format is necessary.

*4 This area may differ depending on DATA DISP selection in the FUNCTION menu. Nautical miles (NM) and kilometres (KM) can be selected in the INT.SETTING menu as the distance unit.

*5 North-up (N UP) and Course-up (C UP) screens require external bearing data. True Motion (TM) screen requires bearing data and LOG or position data.

■ BRILL menu

Push [BRILL] to select the brilliance adjustment menu.

■ ADJ (Adjust) menu

Push [ADJ] to select the adjustment menu.

■ Function menu

Push [MENU] to select the function menu.

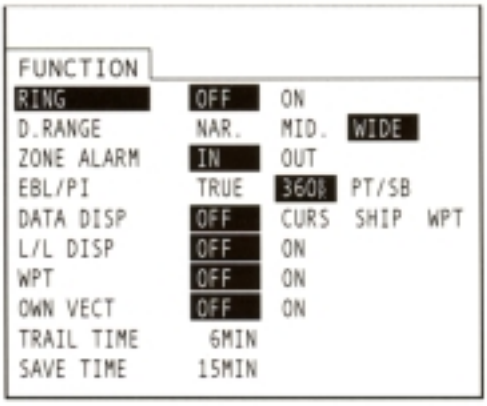

■ Control functions

[TX (SAVE)]
Toggles between the TX mode and the standby mode. Turns the power save function ON when pushed and held.

[HL OFF]
Push [ADJ] and [MENU] simultaneously to turn off all indications except the PPI (Plan Position Indicator) screen, temporarily.

[ADJ]
Push to show the adjust menu.

[UP] [DOWN] [RIGHT] [LEFT]
Set the cross line cursor, alarm area, EPA target, etc. according to the switch pushed.

[+] [–]
Push to increase or decrease the screen range.

[MOB]
Push to mark the man overboard point on the screen.

[ALM]
Toggles the alarm function ON and OFF. Enters the alarm area setting condition when pushed and held.

[EBL1 (VRM1)]
Displays the electronic bearing line 1 (EBL1) and the variable range marker 1 (VRM1) on the cross line cursor position from own ship.

[POWER]
Turns power ON and OFF.

[BRILL]
Turns the brilliance adjustment menu ON or OFF.

[MENU]
Toggles the FUNCTION and EPA menu. Push [^]/[v] keys to select the items and push [<]/[>] keys to change the setting.

[ZOOM]
Push [MOB] and [TRAILS] simultaneously to toggle the ZOOM function ON and OFF.

[TRAILS]
Toggles the trail function ON and OFF.

[OFF CENT]
Push [ALM] and [MODE] simultaneously to turn the OFF CENTER function ON or OFF.

[MODE]
Push to select one of Head-up (H UP), Course-up (C UP), North-up (N UP) or True motion (TM) screens.

[PI]
Push [EBL1] and [EBL2] simultaneously to turn the parallel index line ON.
•Push [EBL1] or [EBL2] to turn the line OFF.

[EBL2 (VRM2)]
Push to display the electronic bearing line 2 (EBL2) and the variable range marker 2 (VRM2) while EBL1 and VRM1 are displayed on the screen.

[EPA]
Push to enter the EPA position data.
Push [EPA] for 0.5 sec. to toggle the EPA display and navigation display.

■ EPA menu

Push [MENU] twice to select the EPA menu.

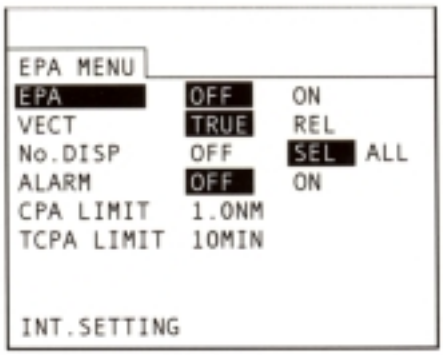

■ INT. SETTING menu

Push [MENU] twice to select the EPA menu. Push [v] 6 times to select the INT. SETTING menu. Push [>] to enter.

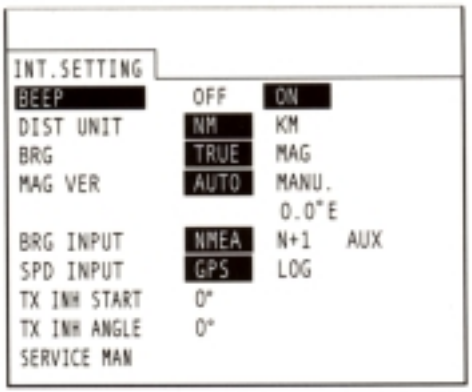

Icom Inc.
1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003 Japan

Count on us!

A-6014H-2EX Printed in Japan

© 2001 Icom Inc.