Viking Memory

INSTALLATION GUIDE

TOSHIBA®

Libretto 50CT & 70CT

Connector
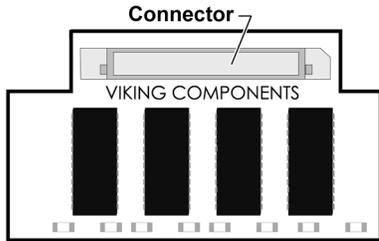
VIKING COMPONENTS

Manual No. 1005205 • Release 12/97, Rev. B

VIKING COMPONENTS

SPEED   POWER   PERFORMANCE

The Toshiba Libretto 50CT and 70CT come standard with 16MB memory soldered. They can be expanded to a maximum of 32MB by installing the following Viking Components memory options into their one available expansion slot.

Description	Viking P/N
8MB Memory Module	T2055, RT2055
16MB Memory Module	T2056, RT2056

⚠ **Caution:**
Electro Static Discharge (ESD) can damage electronic components. Before touching the memory module, ensure that you are discharged of static electricity by touching a grounded metal object.

INSTALLATION INSTRUCTIONS:

1. Turn the computer off and disconnect the AC power supply and any other cables from the unit.

Note: If the unit appears to be powered down, ensure that it is not in Suspend mode.

2. Turn the computer upside-down. Remove the battery from the system. If you are not familiar with this procedure, please refer to your computer's "Owner's Manual."

Keyboard Retaining Strip
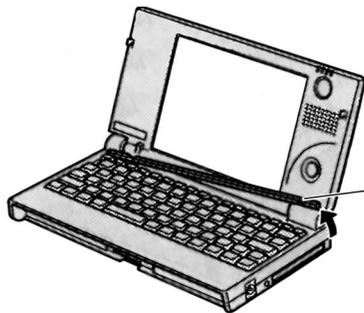
3. Return the system right-side up and open the display screen.

4. Locate the keyboard retaining strip at the base of the display screen. With your finger nail, lift the strip up by its right edge and completely remove it.

5. Locate the holding screw in the area where you have just removed the retaining strip. Remove the screw with a small Phillips head screwdriver. Then lift the keyboard panel by the edge closest to the display screen and rest it upside-down at the base of the system.

⚠ Caution: Do not disconnect, cut or apply excessive force to the keyboard cable.

Holding Screw

Keyboard Panel
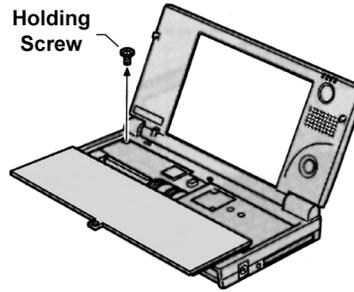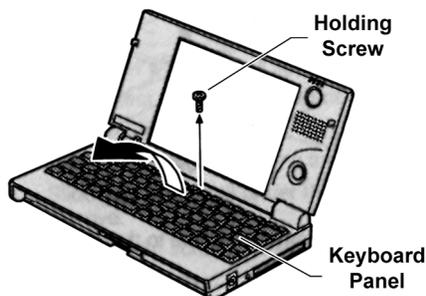
Holding Screw

6. Locate the holding screw at the top left corner of the open compartment. Remove this screw with a small Phillips head screwdriver.

7. To install the memory module, align the connector on the module with the connector in the system's expansion slot. Firmly press down directly over the connector on the module until it's well seated in the slot. Do not force the module into position. The module can only be placed in the expansion slot one way due to the position of the connector.

Memory Module

Memory Expansion Connector
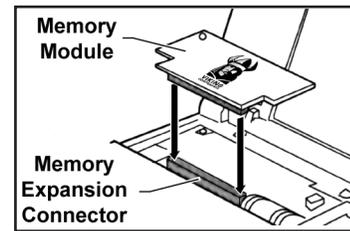
8. Replace and secure the holding screw, through the memory module, in the upper right corner of the open compartment. Do not over tighten the holding screw.

9. Replace the keyboard panel to its original position and be sure to secure its holding screw. Then replace the keyboard retaining strip.

10. Replace the battery back into its compartment.

11. Replace the AC power supply and any other cables you may have disconnected.

12. Turn the system on. The computer will automatically reconfigure itself to recognize the newly added memory. The new memory can be verified during the POST routine at startup and at the SETUP utility.

The installation is now complete.

WARRANTY & DISCLAIMERS: